

Mixed Analog and Digital Signal Debug and Analysis Using a Mixed-Signal Oscilloscope

Wireless LAN Example Application

Application Note 1418

Table of Contents

Introduction	1
Debugging a 32-bit Mixed-signal Application	2
Viewing analog and digital signals simultaneously	3
Isolating the right information	5
Using bus mode to gain added visibility and insight	6
Capturing long time periods	7
Frequency domain measurements and analysis	9
Time correlate analog, digital, and spectral information	11
Which Agilent MSO is Right for Your Application?	12
Summary	13
Glossary	13
Support, Services, and Assistance ..	14

Introduction

Many of today's designs include microprocessors and digital signal processors (DSPs) that combine analog signals with digital content. Debugging a mixed-signal design often includes correlating important handshaking activity while simultaneously verifying the analog components of the system. The digital signals in a design can be very fast, while the analog signals tend to be much slower. Viewing and analyzing the many signals of interest within a microprocessor or DSP-based embedded design can be difficult or impossible using a conventional 2- or 4-channel digital storage oscilloscope (DSO). The increased complexity and faster digital speeds of clock rates and edge times require oscilloscopes with more channels and higher bandwidths.

In addition, if you want to view and analyze the fast digital and slower analog signals at the same time with high resolution, you need an oscilloscope that

has deep memory. With deep memory, you can capture a longer amount of time, but unless the measurement device is very responsive, it can be difficult to find the portion of the signal you are interested in. Many of today's designs include modulated signals and long serial streams, so it is important to be able to find the area of interest quickly and easily. For complex designs, easy triggering also is important.

Designers of microcontroller- and DSP-based embedded systems have been solving problems and debugging their designs using mixed-signal oscilloscopes (MSOs) since 1996, when Agilent Technologies first introduced the instruments. Anticipating the increased complexity and faster speeds of today's mixed-signal designs, Agilent designed new and improved MSOs. These MSOs have up to 20 analog and digital channels, up to 1-GHz bandwidth, improved digital timing performance and usability, as well as MegaZoom deep and responsive memory with record lengths as long as 128-MB.



Debugging a 32-bit Mixed-Signal Application

The MSO makes it possible to use a single instrument to view lower-frequency analog signals and simultaneously correlate them with the higher-speed digital components in your system design. This ability makes the MSO a critical debugging tool. There are many applications for using a mixed-signal oscilloscope, including time correlating true analog signals with digital control signals or analyzing the analog characteristics of high-speed signals in a digital system. No matter what your application is, an MSO makes analyzing and debugging your mixed analog and digital designs easier than ever before.

To illustrate the MSO's value as a debugging tool, this application note takes you through an example using an Agilent Infiniium MSO8104A to debug a mixed analog and digital 32-bit wireless local area network (LAN) application. Of course, this is just one of many possible applications where an MSO is an ideal tool.

Debugging a 32-bit mixed-signal wireless LAN application

For our example mixed-signal application, we will explore an 802.11a wireless LAN access point as shown in figure 1. Essentially, this system takes data from a wireless laptop, demodulates the signal down to baseband, and then converts the signal to a wireline signal onto a LAN.

There are two main parts of this design that communicate through a PCMCIA interface. From the

antenna of the access point, there is an RF processor that demodulates the transmitted signal to a baseband processor. From there, the baseband processor decodes the OFDM (orthogonal frequency domain modulation) signal and sends the data to an embedded system that then sends the data out to the LAN. This mixed-signal system contains a 32-bit power PC embedded processor with a 100-MHz SDRAM and a simple LAN controller bus that communicates with the processor to send data out to the network.

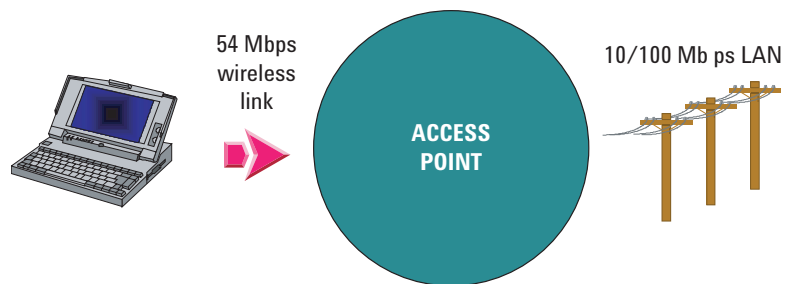


Figure 1. A wireless LAN access point is a mixed-signal design with analog, digital, and embedded processor elements.

Debugging a 32-bit Mixed-Signal Application (continued)

The access point is a fairly small device, with two PC boards folded on top of one another. Figure 2 shows how the boards look when they are unfolded. The entire system is bidirectional, but in this example we will look at a transmission from the computer to the network.

This example application is a classic mixed-signal system. There are analog, digital, and embedded processor and DSP components, and the MSO is the perfect tool for looking at mixed-signal types and speeds from these elements simultaneously.

Viewing analog and digital signals simultaneously

Figure 3 shows the MSO probe connections to the analog and digital signals of an access point PC board. For our demonstration, we connected the access point to a LAN, where it then sent information to a laptop PC with a wireless LAN card installed. We executed a refresh command of the laptop's Web browser. We then captured the resulting packet of information on the MSO.

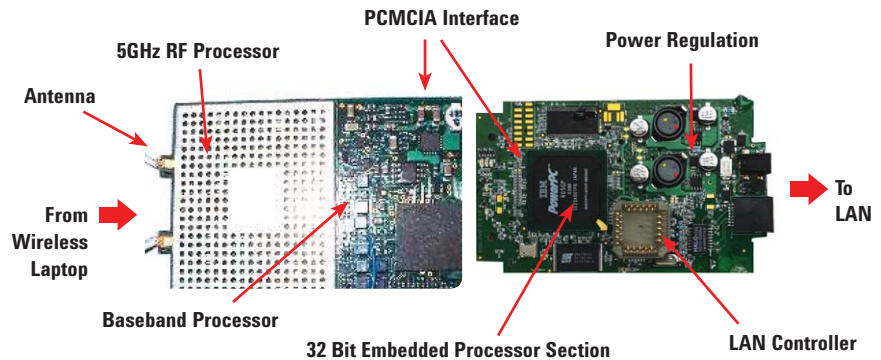


Figure 2. 802.11a 54-Mbps access point with boards unfolded.

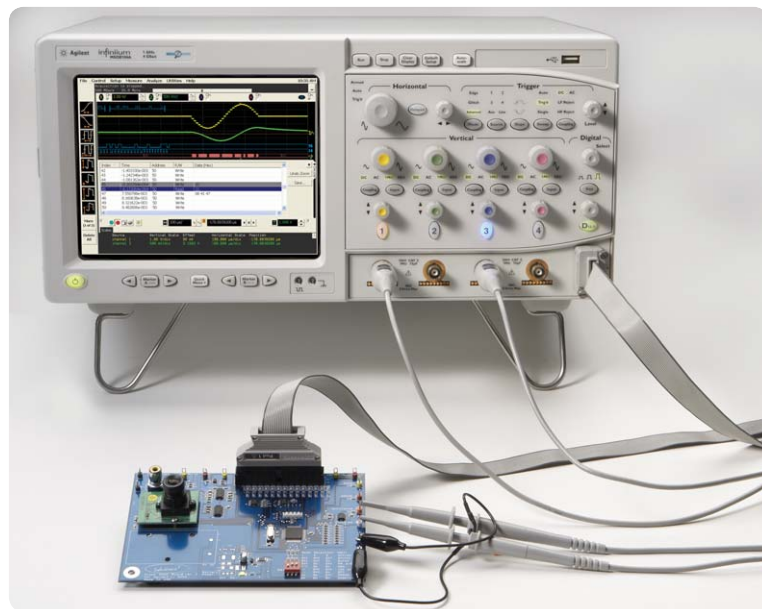


Figure 3. Using an Infiniium MSO8104A to probe the analog and digital signals of a wireless LAN access point.

Debugging a 32-bit Mixed-Signal Application (continued)

The signals being measured by the analog channels of the MSO are the output of the baseband processor, the Ethernet signal out, and one data bit of the fast SDRAM bus. In this example, the SDRAM has edge speeds of up to 1 nanosecond. This edge speed requires an oscilloscope with a 1-GHz bandwidth to accurately measure and display the signals. The signals measured by the MSO's digital channels include one direction of a full-duplex 4-bit bus that runs between the PowerPC and the LAN controller and also a clock signal.

There are 16 digital channels available on the MSO, but for this application, we chose to view only five of the digital channels. Figure 4 shows an acquisition of a single packet of information being sent through the access point as described above. The baseband, Ethernet, and SDRAM signals are acquired on three of the MSO's analog channels while the LAN controller bus signals, shown in blue, are acquired on the digital channels. The red trace between the analog signals and the blue digital signals is a digital bus or a collection of digital channels presented as one waveform on the display. You also can see a 2-Mpts FFT computation of the baseband signal at the bottom of the MSO display. These signals were all acquired *in one acquisition on one instrument* and screen.

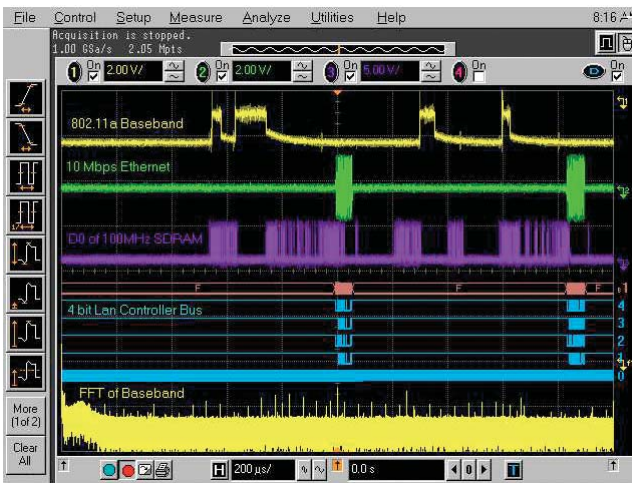


Figure 4. An MSO allows you to time correlate analog, digital, and spectral information all in one instrument.

Finding a debug method to capture and analyze all of this data on one acquisition traditionally has been a headache for most designers. You would normally have to get the device under test into the same state to measure all of the signals. Then you would have to move probes around, trigger multiple times, store waveforms on the display, and then find a way to correlate all this activity.

An MSO allows you to capture, display and measure all of this information simultaneously. It is easy to use and has all the functionality of a DSO, but

has added digital channels and triggering capabilities. It simplifies the debug process by allowing you to see more channels and more time at once. An MSO replaces today's DSOs, and as you can see from the screen in figure 4, an MSO is the perfect tool for easily and efficiently analyzing mixed-signal applications.

In addition, the displayed waveform is enhanced with the scope's 256-level intensity graded display to give you a third dimension perspective to your waveform. This will allow you to detect anomalies and glitches easily.

Debugging a 32-bit Mixed-Signal Application (continued)

Isolating the right information

In this example, there could be a packet error in the transmitted signal, so you may want to isolate a packet to see the interactions occurring in the system. On the wired Ethernet line is a sync burst that indicates the start of the transmission onto the LAN. A 1010 pattern on the data lines of the LAN controller held for a duration of 5-microseconds generates this sync burst at the beginning of every 10-Mbit LAN packet. To isolate this condition, we set the MSO to trigger on the 1010 pattern for a duration of 5-microseconds. Figure-5 displays the 1010 pattern on D1 through D4 of the MSO's digital channels, with D0 assigned to the clock.

Because a MSO8104A has 16 digital timing channels and four analog channels, you can use the digital channels to perform a pattern trigger for a duration of time in order to trigger on a condition, such as a start of packet in this case. In fact, you can trigger across all 20 of the MSO's channels. You can set up the digital channels quickly and easily using the trigger setup dialog box, as shown in figure 6.

These extra digital channels allow you to assign the four analog channels to analyze and measure the other signals of interest in the system. With an ordinary 4-channel DSO, you would use four channels just to generate a trigger, and there would be no channels left for debugging.

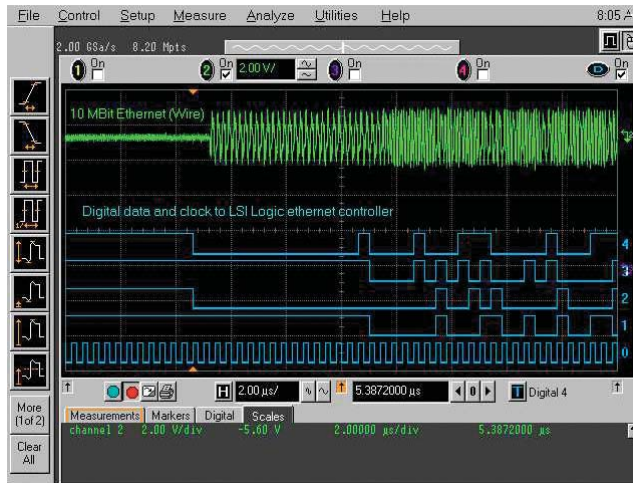


Figure 5. Use the MSO's 16 digital channels for triggering. The MSO is set to trigger on the 1010 pattern for a duration of 5 microseconds. With an ordinary four-channel DSO, the four channels would be used just to generate a trigger and there would be no channels left for debugging.

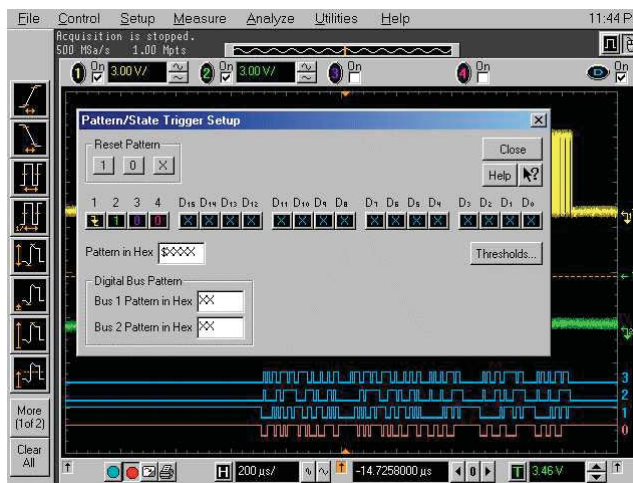


Figure 6. Triggering extends across all 20 channels with easy-to-use dialogs for quick trigger setups. MSOs have two pods of eight digital channels each, with connectors that are compatible with Agilent 16700 Logic Analyzers.

Debugging a 32-bit Mixed-Signal Application (continued)

Although it is not shown in this example, you could set up a trigger condition based on the states of the four digital bits. You also could include the clock line and any of the analog signals in the trigger specification to narrow in on a problem. With the Infiniium 8000 Series of MSOs, you can trigger on patterns that are up to 20 channels wide. This is impossible to do with a conventional DSO. The MSO gives you the extra triggering and viewing capabilities that you need to debug your mixed-signal system.

Using bus mode to gain added visibility and insight

In figure 5, the characteristics of the Ethernet signal change at about 1.5 divisions from the right side of the display. This is where the sync burst ends and the real data packet begins. To make it easier to identify the start of packet condition or any other condition of interest, you can configure the display of the digital channels to be in a bus mode to easily identify a digital pattern. Figure 7 displays a bus representing eight digital channels. This screen shows the data coming across the bus as a hex display that is correlated with the Ethernet signal in the system. In this example, the 1010 digital pattern would be identified as 5 hex on the display, allowing you to easily and quickly identify the condition you are searching for.

You can display one or two 8-bit buses and each bus can have from 2 to 16 channels associated with it. You also can display any given digital channel individually, regardless of whether it is already part of one or both buses. The 16 digital timing channels give you not only added triggering capabilities, but also more visibility into what is going on in your design with this easy-to-use bus mode.

With previous debugging solutions, correlating triggers and signals has been difficult and time consuming. You needed to use multiple instruments to set up a trigger and then find a way to time correlate the instruments. An MSO makes triggering and signal correlation easy. Many designers prefer to use an MSO for debugging their mixed-signal designs because of the viewing capabilities such as bus mode and the ability to trigger across 20-channels.

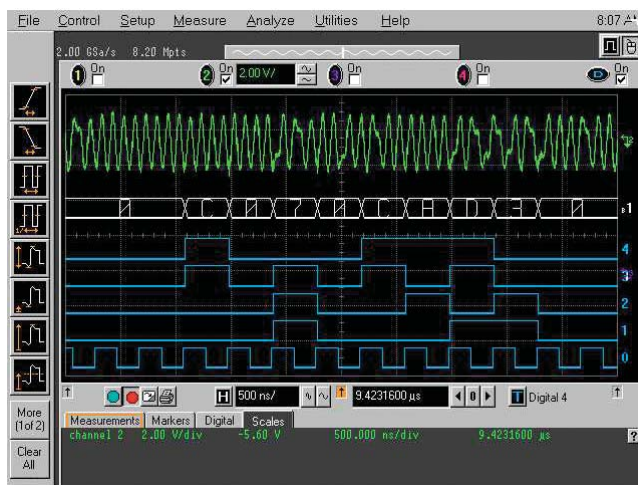


Figure 7. Digital signals can be grouped together by bus and viewed as hex value at every transition.

Debugging a 32-bit Mixed-Signal Application (continued)

Capturing long time periods

Why is deep memory important for debugging mixed-signal designs? Because it lets you achieve long capture time *and* high resolution. In this example, you need deep memory to capture a long period of time with high resolution because of the range of signal speeds. Without deep memory, you can achieve either long capture time *or* high resolution, but not both simultaneously. The sample rate of an oscilloscope changes as you slow down the timebase or sweep speed. The scope must reduce its sample rate as the sweep speed is slowed down in order to capture enough time to fill the entire display without running out of memory. Keeping the sample rate as high as possible is critical, because it ensures that you are capturing your signals at full resolution, eliminating aliasing and measurement errors.

Often when you are debugging a complex system, you do not know exactly what the problem is, so you cannot set up the scope to trigger on it. You have to trigger on something more basic, such

as an edge, and then look at the captured data to find the problem. This usually requires capturing a long span of time and then zooming in and out on the display, so again long time capture and high resolution are critical. Perhaps most common is the need to correlate high-speed signals, which are often digital, with slower speed ones. In order to measure them both correctly with one acquisition, you need a time span that is long enough to show one or more full periods of the slower signals, and you need the sample resolution to be high enough to show full detail on the fast signals. Deep memory is essential for this ability.

In this example, you can acquire an entire packet of the data in about 500 microseconds of time. At a sweep speed of 200-microseconds per division, you need a minimum of 1-Mbyte of memory to view this packet of information with the sample rate set to 2-GSa/s. You need 1-Mbyte of memory just to capture the most basic transaction. If there are any errors or other transaction complexities, you would need even more memory.

Debugging a 32-bit Mixed-Signal Application (continued)

The importance of deep memory in this application is shown in figures 8 and 9. Figure 8 shows an acquisition of the faster SDRAM signal and the slower baseband signal. If you look at the fast SDRAM signal on the purple trace in figure 9, you will see the same acquisition zoomed in by a factor of *200,000 times*. Note that the rise time is about 1.5-nanoseconds and the time scale is 2-nanoseconds per division. In this measurement, the scope is stopped and this analysis is performed on the single original acquisition. Without deep memory sustaining the high sample rate, there would not be nearly enough underlying data to support this amount of zooming.

The MSO's MegaZoom deep memory automatically adjusts

the memory depth so that as you change the time per division, the scope always samples with the maximum sample rate and memory depth available. Also, MSOs come standard with 8-Mpts of deep memory per channel that allows you to capture slower signals and still see the details on fast signals all in one acquisition. The MSO automatically keeps the sample rate at its maximum setting based on the memory depth so that you can see the big picture and then zoom in on the details without having to trigger twice.

Traditionally, deep-memory scopes have had slow update rates, and they respond sluggishly to user inputs. This is not true for MSOs with MegaZoom deep memory. MegaZoom

deep memory responds instantly to your changes, even with the deepest records, up to 128-Mpts. This instant response is enabled by a custom architecture that captures data into acquisition memory and rapidly post-processes the data in the hardware for display and measurements. This architecture makes it possible to provide the waveform update rate and front panel responsiveness you need to get your job done more easily.

In order to make the 1.5-nanosecond measurement accurately, you need a high-fidelity active probe such as the Agilent 1156A. The 1156A probe features very low input capacitance and properly damped tip resistance that enable it to make very unobtrusive and high-fidelity measurements.

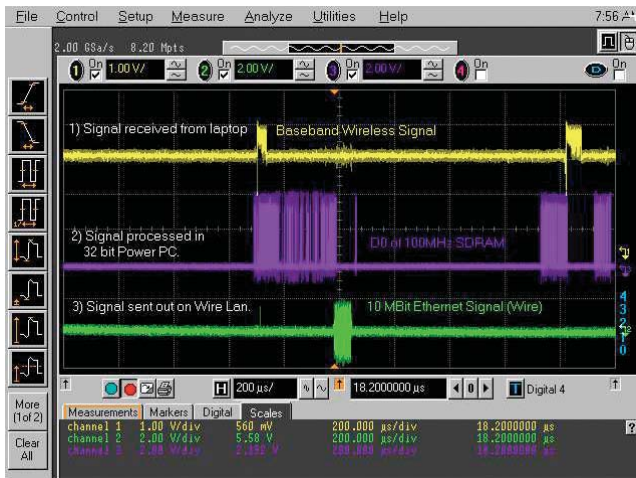


Figure 8. With an MSO, you can view a mix of signals. MegaZoom Deep memory lets you capture slow signals and then zoom in on the details fast without having to trigger twice.



Figure 9. This screen shows the same acquisition shown in figure 8 zoomed in by 200,000 times! MegaZoom Deep memory sustains a high sample rate so you can zoom in to see the details and make accurate measurements.

Debugging a 32-bit Mixed-Signal Application (continued)

Frequency domain measurements and analysis

Looking at the baseband signal in figure 10, we see the time view along with bit 0 of the SDRAM bus. Because this comes from the wireless signal, it is valuable to also look at it in the frequency domain. You can make FFT measurements with an MSO, just like you can with a DSO.

Figure 11 shows the FFT of the baseband signal. The MSO performs an FFT of all the data on the screen. This allows you to zoom in and out on the portion of the time record that has the frequency content of interest. It also makes it easy to compare the spectral content of different regions of the time-domain signal. In this case, most of the energy is located in the leftmost division of the FFT. You can see how the energy spans a broad, relatively even frequency range.

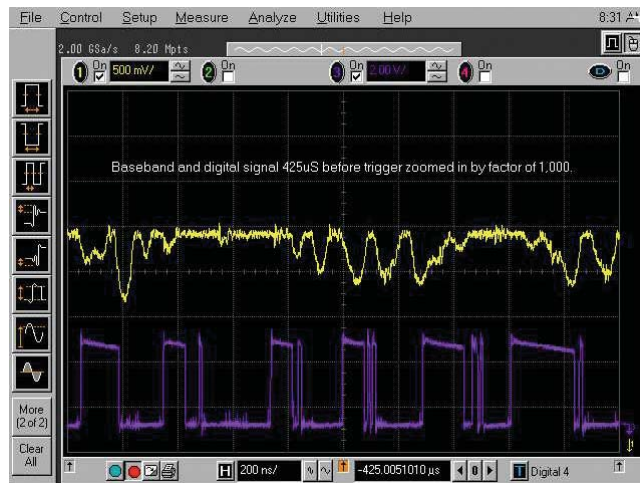


Figure 10. Because the baseband signal comes from the wireless signal, it also is valuable to look at it in the frequency domain by performing an FFT.

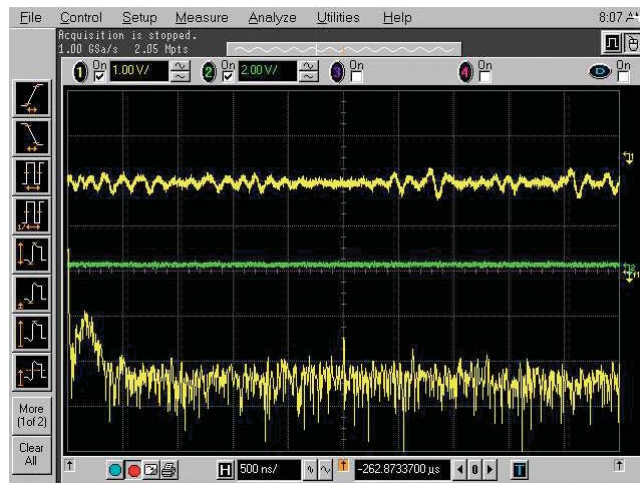


Figure 11. FFT of the Baseband Signal. Most of the energy is located in the leftmost division of the FFT.

Debugging a 32-bit Mixed-Signal Application (continued)

Figure 12 shows the beginning of the baseband transmission. In the first horizontal division of the FFT, instead of a broad, somewhat uniform distribution of frequency content, there are some distinct spectral lines. These lines indicate that the beginning of the baseband packet has a sync period just as the wireline side does. However, it is easier to see this event in the frequency domain.

There are also some noise spikes on the FFT in figure 12. These noise spikes could be caused by an unintended coupling in the system. In this access point, there is a high-power line driver on the wireline side in close proximity to a sensitive RF receiver on the wireless side that may be causing a coupling problem.

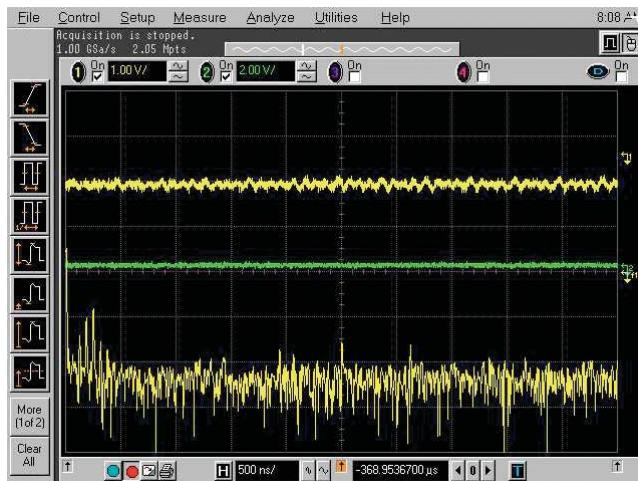


Figure 12. Looking back further in time to the beginning of the baseband transmission, we see noise spikes on the FFT. Some noise spikes are most-likely caused by unintended coupling in the system.

Debugging a 32-bit Mixed-Signal Application (continued)

Time correlate analog, digital, and spectral information

Using the MSO's digital channels can help you gain more detailed insight into the possibility of coupling. Figure 13 shows the digital bus turned back on and the time delay moved back to very near the original trigger point. In the live display and debug of this application, moving the horizontal delay back and forth showed that the noise spikes on the FFT measurement changed in magnitude based on which data was present on the LAN signal shown by the hex readouts of the bus mode.

The next step in your analysis would be to identify the data sequence that correlates to the highest levels of noise on the FFT display and further analyze that condition. For example, you could alter the PowerPC programming to repeatedly send out the corresponding data sequence attributed to the noise spikes. From there, you would then look more carefully at the FFT with a spectrum analyzer to determine the root causes of the coupling.



Figure 13. Using the MSO's digital channels can help you gain further insight into the possibility of coupling. Moving the horizontal delay back and forth showed that the noise spikes on the FFT changed in magnitude based on which data was present on the LAN signal according to the hex readouts of the digital bus.

Which Agilent MSO is Right for Your Application?



Figure 14. Agilent offers a family of mixed-signal oscilloscopes to meet your design needs.

The MSO's combination of digital channels, analog channels, ease of triggering, and bus display modes make it a great tool for tracking down problems quickly and easily as shown in our wireless LAN example application. MSOs come with different performance specifications and channel counts to meet the needs of engineers working in a wide range of applications that involve both analog and digital signals.

Model	Analog Bandwidth	Channels	Maximum Sample Rate	Maximum Standard Memory
MSO8104A	1 GHz	4 analog + 16 digital	4 GSa/s	128 Mpts
MSO8064A	600 MHz	4 analog + 16 digital	4 GSa/s	128 Mpts
MSO7104A	1 GHz	4 analog + 16 digital	4 GSa/s	8 Mpts
MSO7054A	500 MHz	4 analog + 16 digital	4 GSa/s	8 Mpts
MSO7052A	500 MHz	2 analog + 16 digital	4 GSa/s	8 Mpts
MSO7034A	350 MHz	4 analog + 16 digital	2 GSa/s	8 Mpts
MSO7032A	350 MHz	2 analog + 16 digital	2 GSa/s	8 Mpts
MSO6104A	1 GHz	4 analog + 16 digital	4 GSa/s	8 Mpts
MSO6102A	1 GHz	2 analog + 16 digital	4 GSa/s	8 Mpts
MSO6054A	500 MHz	4 analog + 16 digital	4 GSa/s	8 Mpts
MSO6052A	500 MHz	2 analog + 16 digital	4 GSa/s	8 Mpts
MSO6034A	300 MHz	4 analog + 16 digital	2 GSa/s	8 Mpts
MSO6032A	300 MHz	2 analog + 16 digital	2 GSa/s	8 Mpts
MSO6014A	100 MHz	4 analog + 16 digital	2 GSa/s	8 Mpts
MSO6012A	100 MHz	2 analog + 16 digital	2 GSa/s	8 Mpts

Summary

This application note showed many of the benefits of an MSO for debugging and analyzing a typical mixed-signal system that included slower analog signals with faster digital signals. An MSO provides all the functionality of a traditional DSO plus much more. These oscilloscopes seamlessly integrate up to 20 channels, display long acquisition times with unparalleled resolution, and respond instantly to user inputs even on the deepest record lengths. These features along with the integrated digital and analog channel triggering capabilities are what differentiate an MSO from other oscilloscopes (DSOs) available today.

This example application demonstrated how an MSO makes debugging and analyzing mixed signal applications easier because of the following features and benefits:

- An MSO simplifies the debug process with up to 20 channels to easily see more time at once.
- Triggering and signal correlation is automatic and easy with triggering across all 20 channels.
- Easy-to-use bus mode display on the digital channels gives added visibility and insight.
- MegaZoom deep memory automatically keeps the sample rate high so that you can see the big picture and then zoom-in on the details without having to trigger twice.
- Easy time correlation of analog, digital and spectral information on one instrument.

Many engineers find MSOs easier and more efficient to use than any other test instrument they've used before. When you troubleshoot a microprocessor- or DSP-based design, an MSO will help you get the job done in less time, with less hassle, giving you more time to figure out the real

Glossary

802.11a 5 GHz wireless LAN protocol transmitting at 54Mbps

Access point A hardware device that acts as a communication hub for users of a wireless device to connect to a wired LAN

Baseband Information carried on a single unmultiplexed signal channel on the transmission medium

DSO Digital storage oscilloscope

DSP Digital signal processor

FFT Fast Fourier transform; an algorithm used to transform time domain data into frequency domain

LAN Local area network

MSO Mixed-signal oscilloscope

OFDM Orthogonal frequency domain modulation

PCMCIA A PCMCIA card is a credit card-size memory or I/O device that connects to a personal computer, usually a notebook or laptop computer

SDRAM SDRAM (synchronous DRAM) is a generic name for various



Agilent Email Updates

www.agilent.com/find/emailupdates

Get the latest information on the products and applications you select.



Agilent Direct

www.agilent.com/find/agilentdirect

Quickly choose and use your test equipment solutions with confidence.



www.agilent.com/find/open

Agilent Open simplifies the process of connecting and programming test systems to help engineers design, validate and manufacture electronic products. Agilent offers open connectivity for a broad range of system-ready instruments, open industry software, PC-standard I/O and global support, which are combined to more easily integrate test system development.



www.lxistandard.org

LXI is the LAN-based successor to GPIB, providing faster, more efficient connectivity. Agilent is a founding member of the LXI consortium.

Remove all doubt

Our repair and calibration services will get your equipment back to you, performing like new, when promised. You will get full value out of your Agilent equipment throughout its lifetime. Your equipment will be serviced by Agilent-trained technicians using the latest factory calibration procedures, automated repair diagnostics and genuine parts. You will always have the utmost confidence in your measurements.

Agilent offers a wide range of additional expert test and measurement services for your equipment, including initial start-up assistance, onsite education and training, as well as design, system integration, and project management.

For more information on repair and calibration services, go to:

www.agilent.com/find/removealldoubt

For more information on Agilent Technologies' products, applications or services, please contact your local Agilent office. The complete list is available at:

www.agilent.com/find/contactus

Americas

Canada	(877) 894-4414
Latin America	305 269 7500
United States	(800) 829-4444

Asia Pacific

Australia	1 800 629 485
China	800 810 0189
Hong Kong	800 938 693
India	1 800 112 929
Japan	0120 (421) 345
Korea	080 769 0800
Malaysia	1 800 888 848
Singapore	1 800 375 8100
Taiwan	0800 047 866
Thailand	1 800 226 008

Europe & Middle East

Austria	0820 87 44 11
Belgium	32 (0) 2 404 93 40
Denmark	45 70 13 15 15
Finland	358 (0) 10 855 2100
France	0825 010 700* *0.125 □ fixed network rates
Germany	01805 24 6333** **0.14 □/minute
Ireland	1890 924 204
Israel	972-3-9288-504/544
Italy	39 02 92 60 8484
Netherlands	31 (0) 20 547 2111
Spain	34 (91) 631 3300
Sweden	0200-88 22 55
Switzerland	(French) 44 (21) 8113811 (Opt 2)
Switzerland	(German) 0800 80 53 53 (Opt 1)
United Kingdom	44 (0) 118 9276201

Other European countries:
www.agilent.com/find/contactus

Revised: October 24, 2007

Product specifications and descriptions in this document subject to change without notice.

© Agilent Technologies, Inc. 2006, 2008
Printed in USA, February 29, 2008
5988-7746EN

www.agilent.com/find/scopes



Agilent Technologies