


EDN[®]

FEB 2013

www.edn.com
Issue 2

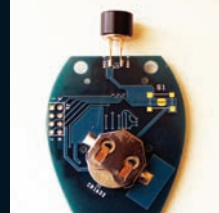

Teardown: Infrared thermometer Pg 24

Why your company's competitor won't hire you Pg 12

Design Ideas Pg 50

Supply Chain:
Finding and securing hard-to-find parts Pg 60

S P R E A D S P E C T R U M

SAFE HAVEN FOR

WIRELESS

Page 36

Characterizing mixed-signal ICs for production

Page 29

Forgotten circuits (that should be brought back)

Page 46

TE Connectivity
Mag-Mate
connectors

Page 62



**NEW
PRODUCTS
ADDED DAILY**

DIGIKEY.COM/NEW

3
MILLION
PRODUCTS
ONLINE

800,000+
ELECTRONIC
COMPONENTS
IN STOCK

650+
AUTHORIZED
SUPPLIER
PARTNERS

THE WORLD'S LARGEST SELECTION OF ELECTRONIC COMPONENTS AVAILABLE FOR IMMEDIATE SHIPMENT!

WHICH SINGLE DISTRIBUTOR COMES TO MIND
AS BEING 'BEST OF CLASS' FOR BROADEST
OVERALL PRODUCT SELECTION?



Source: 2012 Design and Supplier Interface Study,
Hearst Business Media, Electronics Group



1.800.344.4539
DIGIKEY.COM

Highest Impedance Finder

- Use this tool to find the RF inductor with the highest impedance at a specific frequency.
- Enter your operating frequency and any other requirements, then press GO.


INPUTS Operating Frequency: 900 kHz (3,000 MHz max. Use for desktop)
 Optional Minimum Impedance: 2000 Ohms
 Optional Desired Inductance: Any nH

Part number	Impedance @	DCR max @	Inductance nH	SRF MHz	Time Amps
0805HT-6A7	112052	3.10	470	610	0.20
0805CS-331	30895	1.40	330	650	0.31
0805CS-271	23872	1.00	270	730	0.34

RF Inductor Comparison Tool

Operating Frequency: 1000 MHz (3000 MHz max.)

Part number	Inductance	Q factor	Impedance	ESR	SRF	Models
0603CS-100	5.87 nH	72	63 Ohms	0.86 Ohms	> 3000 MHz	S-parameter SPCSE
0402CS-100	5.50 nH	56	63 Ohms	1.14 Ohms	> 3000 MHz	S-parameter SPCSE
0302CS-100	5.9 nH	57	62 Ohms	1.09 Ohms	> 3000 MHz	S-parameter SPCSE
1008CS-100	5.70 nH	71	62 Ohms	0.85 Ohms	> 3000 MHz	S-parameter SPCSE

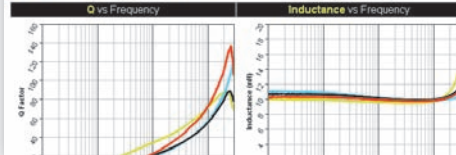

The best inductor selection tools.

coilcraft.com/tools

Now in a handy pocket size.

coilcraft.com/mobile

Inductance at Current Finder

- Find power inductors that have the actual inductance value you need at a specific current.
- Enter your desired inductance value and current, then press GO.

INPUTS Desired Inductance (µH): 7 Current (Amps): 1

Part number	Actual Inductance at 1A	DCR (Ohms)	Length max (mm)	Width max (mm)	Height max (mm)	Price @ 1,000
VAL7030-882	7.309	0.04873	8.0	8.0	3.1	\$0.80
LPS0306-582	6.920	0.099	5.0	5.0	3.0	\$0.55
VAL7030-582	6.815	0.04257	8.0	8.0	3.1	\$0.80
LPS4012-582	6.752	0.34	4.1	4.1	1.2	\$0.35
VAL5050-582	6.709	0.02945	5.68	5.48	5.1	\$0.63

RF Inductor Finder Results

- These results do not imply an exact match to your requirements.
- We recommend that you request a free sample before an order is placed.

Sort results by: Footprint DCR

Part number	Mounting Other (µH)	L (nH)	DCR (Ohms)	I sat (A)	I rms (SRF)	L (mm)	W (mm)	H (mm)	Price @ 1,000
0302CS-4X7	SM	4.70	0.0740	0.83	12070	0.86	0.53	0.45	\$0.44
0302CS-5X1	SM	5.10	0.0740	0.83	9650	0.86	0.53	0.45	\$0.44

Inductor Core & Winding Loss Calculator

Step 1, 2, 3 Enter the operating conditions (all fields required)

Frequency: 500 kHz IL rms max: 3.50 Amps ΔIL peak-peak: 0.20 Amps

Inductor 1	Inductor 2	Inductor 3	Inductor 4
LPL3015-472	DO3316P-472	XPL7030-472	LPS4414-472

Highest Q Finder

- Use this tool to find the RF inductor with the highest Q factor at a specific frequency.
- Enter your inductance value and operating frequency, then press GO.

INPUTS Inductance nH: 47 Frequency MHz: 1900

Part number	Q factor	Inductance nH	Nominal L nH	SRF MHz
0805HS-330	126	19.66	39	2000
0805HS-470	104	22.55	47	1650
0805HS-560	92	24.96	56	1550
0603CT-430	74	51.07	43	2100

Your List of Samples

Part number	Description	Quantity	Delete
XAL7070-2220HE	SMT power inductor	2.2 µH 1	<input type="checkbox"/>
XAL7070-6820HE	SMT power inductor	6.8 µH 8	<input type="checkbox"/>
XAL7070-1220HE	SMT power inductor	1.2 µH 5	<input type="checkbox"/>



WWW.COILCRAFT.COM

The Trusted Leader for Any Measurement



NI data acquisition products are the most trusted computer-based measurement devices available, offering superior accuracy and maximum performance. NI CompactDAQ systems feature more than 50 measurement-specific modules and complete breadth and depth of I/O. Coupled with the analysis and signal processing capabilities of NI LabVIEW software, this platform puts the power of graphical system design at your command so you can build any measurement system faster.

LabVIEW offers powerful analysis functions for sensor and signal data, simplifies GUI development, and helps you program the way you think—graphically.



>> Accelerate your productivity at ni.com/measurements-platform

800 453 6202

©2012 National Instruments. All rights reserved. LabVIEW, National Instruments, NI, ni.com, and NI CompactDAQ are trademarks of National Instruments. Other product and company names listed are trademarks or trade names of their respective companies. 08201



EDN

contents

February 2013



Spread spectrum: safe haven for wireless

36 Spectrum spreading appears to “waste” bandwidth, but it increases channel capacity, guards data security, and offers immunity to signal jamming and fading.
by Rahul Garg and Prakhar Goyal, Cypress Semiconductor


Characterizing mixed-signal ICs for production

29 What you don't test can hurt you.
by Robert Seitz, AMS

Forgotten circuits (that should be brought back)


46 What makes a legacy IC? Here we take a look at some original parts and discuss why it might be a good idea to revisit their use.
by Dennis Feucht, Innovatia Laboratories

HFA3046, HFA3096, HFA3127, HFA3128

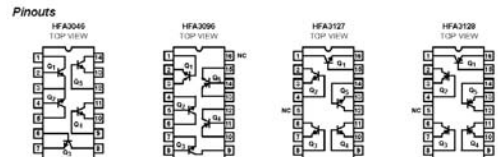

COVER IMAGE: GIULA FINI

DESIGN IDEAS

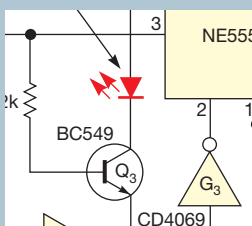

- 50 Auto pulse generator senses and responds to a probed load
- 52 Read 10 or more switches using only two I/O pins of a microcontroller
- 57 Successfully choose complementary bipolar transistors
- 58 Synchronized regulator produces coherent noise

► Find out how to submit your own Design Idea: www.edn.com/4394666.



mouser.com

The Newest Products for Your Newest Designs®

The Next Big Thing Is Here.

NEWEST PRODUCTS



**The NEWLY redesigned
Product Knowledge Center.**

- More** Product Knowledge
- More** New Products
- More** Technologies



Authorized distributor of semiconductors and electronic components for design engineers.



MOUSER ELECTRONICS


pulse



Dilbert 16

- 14 Python speeds up GaN models
- 16 Dreamlining Boeing and batteries
- 18 TI claims industry's lowest-phase-noise frequency synthesizer
- 18 Peel-and-stick solar cells circumvent several design challenges
- 19 Renesas power MOSFETs deliver 50% lower on-resistance
- 19 Microsemi expands SiC power-module product family
- 19 Capturing more of the sun's energy

DEPARTMENTS & COLUMNS

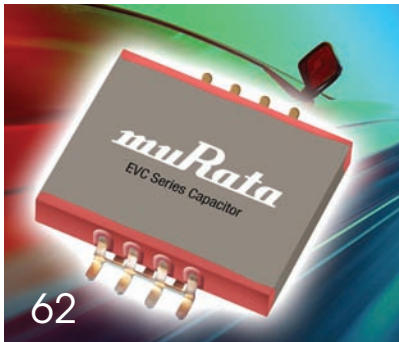

62



66


- 9 **EDN online:** Join the conversation; Content; Engineering community
- 12 **EDN.comment:** Why your company's competitor won't hire you
- 20 **Signal Integrity:** Make it better
- 22 **Baker's Best:** Take advantage of an online design tool's extended transimpedance features
- 24 **Teardown:** Thermometer measures temperature without contact
- 26 **Mechatronics in Design:** Inertia mismatch: fact or fiction?
- 60 **Supply Chain:** Finding and securing hard-to-find parts; PV industry to see installation growth, revenue dip
- 62 **Product Roundup:** IP&E/Passives
- 66 **Tales from the Cube:** Rush-project troubleshooting comes down to the wire

EDN® (ISSN# 0012-7515) is published monthly by UBM Tech, 600 Community Drive, Manhasset, NY 11030-3825. Periodicals postage paid at Manhasset, NY, and at additional mailing offices. SUBSCRIPTIONS—Free to qualified subscribers as defined on the subscription card. Rates for nonqualified subscribers, including all issues: US, \$150 one year; \$250 two years; \$300 three years. Except for special issues where price changes are indicated, single copies are available for \$10 US and \$15 foreign. For telephone inquiries regarding subscriptions, call 847-559-7597. Email: edn@omeda.com. CHANGE OF ADDRESS—Notices should be sent promptly to EDN, PO Box 3609, Northbrook, IL 60065-3257. Please provide old mailing label as well as new address. Allow two months for change. NOTICE—Every precaution is taken to ensure accuracy of content; however, the publishers cannot accept responsibility for the correctness of the information supplied or advertised or for any opinion expressed herein. POSTMASTER—Send address changes to EDN, PO Box 3609, Northbrook, IL 60065-3257. CANADA POST: Publications Mail Agreement 40612608. Return undeliverable Canadian addresses to APC, PO Box 503, RPO West BVR CRE, Rich Hill, ON L4B 4R6. Copyright 2013 by UBM. All rights reserved. Reproduction in whole or part without written permission is prohibited. Volume 58, Number 2 (Printed in USA).

[www.edn.com]



Solving Your Board to Board Connector Design Challenges

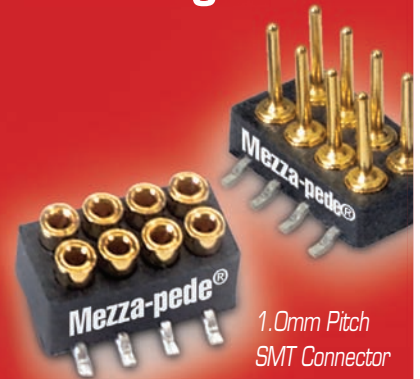

1.0mm Pitch
SMT Connector

- Screw-machined Terminals
- Thru-hole or SMT
- Low Profile
- High Density
- Customized Designs
- Proven Performance




800.424.9850
401.823.5200

www.advanced.com
info@advanced.com
Made in USA



LEDrivIR™



High-Voltage Buck Control ICs for Constant LED Current Regulation

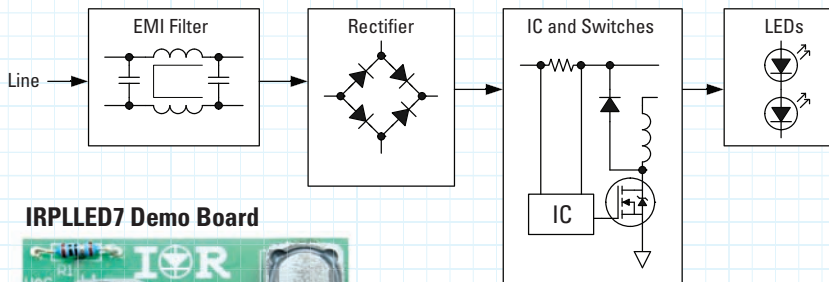


IRPLED7 Demo Board

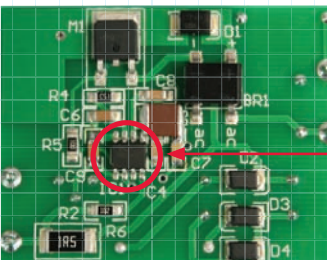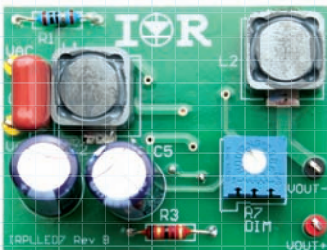

LEDrivIR™
IRS2980

IRPLED7 Demo Board
LED Current vs Input Voltage

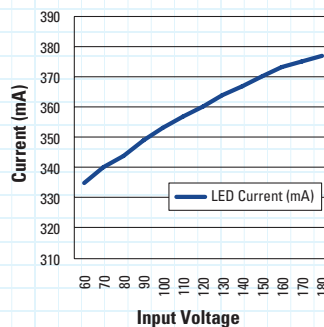

IRS2980 Features

- Internal high voltage regulator
- Hysteretic current control
- High side current sensing
- PWM dimming with analog or PWM control input
- Free running frequency with maximum limiting (150kHz)

IRS2980 Benefits

- Low component count
- Off-line operation
- Very simple design
- Inherent stability
- Inherent short circuit protection

Demo Board Specifications

- Input Voltage 70V to 250V (AC)
- Output Voltage 0V to 50V (DC)
- Regulated Output Current: 350mA
- Power Factor > 0.9
- Low component count
- Dimmable 0 to 100%
- Non-isolated Buck regulator

Part Number	Package	Voltage	Gate Drive Current	Startup Current	Frequency
IRS2980S	SO-8	450V	+180 / -260 mA	<250 μ A	<150 kHz
IRS25401S	SO-8	200V	+500 / -700 mA	<500 μ A	<500 kHz
IRS25411S	SO-8	600V	+500 / -700 mA	<500 μ A	<500 kHz

for more information call 1.800.981.8699 or visit us at www.irf.com

International
IR Rectifier
THE POWER MANAGEMENT LEADER



JOIN THE CONVERSATION

Comments, thoughts, and opinions shared by *EDN's* community




In response to Bill Schweber's Power Points blog post "Wi-Fi appliance power control: Easy, but is it good?" at www.edn.com/4405262, David Sherman commented:

"The one mandatory requirement I'd like to impose on any engineer designing any such thing is that it have a mechanical 'disable' switch. In the case of fancy appliances that need software to operate, the switch would just disable the Web interface. This would be helpful for troubleshooting, as well as for security."

In response to "'Linux is obsolete' thread is started, January 29, 1992," an entry in *EDN's* tech-history blog, *EDN Moments*, at www.edn.com/4405860, przemek commented:

"This whole story illustrates why engineering is all about trade-offs and good judgment. In principle, microkernels have many advantages, and could be easily ported, but in actuality it was 'good-enough' Linux that _would_ get ported everywhere. It reached a commodity status: I have it on all our smartphones, and it is running on my TV, DVD player, and all wireless routers."

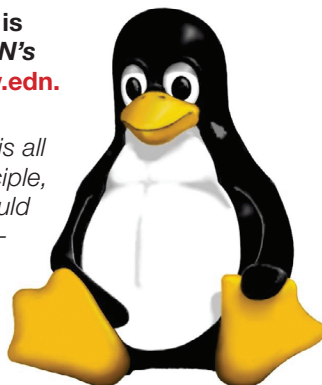

EDN invites all of its readers to constructively and creatively comment on our content. You'll find the opportunity to do so at the bottom of each article and blog post.




CONTENT

Can't-miss content on *EDN.com*

10 SOFTWARE TIPS FOR HARDWARE ENGINEERS

When transitioning from hardware design to include software design, here are 10 software tips that hardware engineers should keep in mind when they start developing software.

www.edn.com/4405862

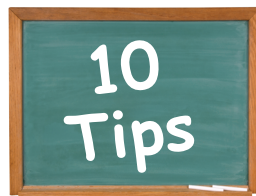

ULTRA HDTV: A COMPLETE WASTE OF CONSUMERS' MONEY

There have been a lot of comparisons and contrasts between this year's "Ultra HDTV" hype and the "3-D TV" promotion of the not-too-distant past. But Ultra HDTV won't mean a darn thing once you get out of the electronics superstore and your nose is no longer pressed up against the display.

www.edn.com/4406032



ENGINEERING COMMUNITY

Opportunities to get involved and show your smarts

FAMOUS PEOPLE YOU MAY NOT KNOW ARE ENGINEERS

We all have talents, and some of those talents outshine others. In late January, *EDN* took a look at six well-known, even famous, people who have an engineer's mind and skills but who have been acclaimed for talents other than engineering. Those six individuals—including rockers, starlets, and presidents—sparked conversation among the post's readers, who were eager to share in the comments section the names and bios of other "hidden" engineers. Are you aware of any others with engineering gifts who have been acclaimed for other achievements? Join the conversation and let us know. www.edn.com/4405678



IMAGE(S): THINKSTOCK, ISTOCKPHOTO

PICO

SPACE SAVING TECHNOLOGY Transformers & Inductors from .19" ht.

Over 5000 Standard Thru-Hole Models Surface Mount and

Audio Transformers

Impedance Levels 10 ohms to 250k ohms,
Power Levels to 3 Watts, Frequency Response
 ± 3 db 20Hz to 250Hz. All units manufactured
and tested to MIL-PRF-27. QPL Units available.

Power & EMI Inductors

Ideal for Noise, Spike and Power Filtering
Applications in Power Supplies, DC-DC
Converters and Switching Regulators

Multiplex Data Bus Pulse Transformers

Plug-In units meet the requirements
of QPL-MIL-PRF 21038/27
Surface units are electrical equivalents
of QPL-MIL-PRF 21038/27.

Pulse Transformers

10 Nanoseconds to 100 Microseconds.
ET Rating to 150 Volt Microsecond,
Manufactured and tested to MIL-PRF-21038.

DC-DC Converter Transformers

Input voltages of 5V, 12V, 24V And 48V.
Standard Output Voltages to 300V (Special
voltages can be supplied). Can be used as self
saturating or linear switching applications. All
units manufactured and tested to MIL-PRF-27.

400Hz/800Hz Power Transformers

0.4 Watts to 150 Watts. Secondary Voltages 5V
to 300V. Units manufactured to MIL-PRF-27
Grade 5, Class S (Class V, 155°C available).



PICO

**Electronics,
Inc.**

143 Sparks Ave. Pelham, NY 10803 • **Call Toll Free** 800-431-1064 • **Fax:** 914-738-8225

Send for free 180 pg PICO Catalog

See PICO's full Catalog Immediately on the internet

www.picoelectronics.com

E-mail: info@picoelectronics.com



BRAND DIRECTOR

Patrick Mannion
1-631-543-0445;
patrick.mannion@ubm.com

CHIEF TECHNICAL EDITOR

Rich Pell
Consumer, Components and Packaging
1-516-474-9568;
rich.pell@ubm.com

EXECUTIVE EDITOR

Suzanne Deffree
DIY, Automotive
1-631-266-3433;
suzanne.deffree@ubm.com

**MANAGING EDITOR,
PRINT AND ONLINE**

Amy Norcross
Contributed technical articles
1-781-734-8970;
amy.norcross@ubm.com

SENIOR TECHNICAL EDITOR

Steve Taranovich
Analog, Power, Medical, Design Ideas
1-631-413-1834;
steve.taranovich@ubm.com

CONTRIBUTING EDITOR

Janine Love
Test & Measurement
1-973-864-7238;
janine.love@ubm.com

TECHNICAL EDITOR

Stephen Evanczuk
Systems Design
1-802-549-4644;
sevanczuk@gmail.com

EDITOR

Carolyn Mathas
LEDs, Wireless and Networking, Sensors
1-530-873-3755;
cmathas@earthlink.net

**DESIGN IDEAS
CONTRIBUTING EDITOR**

Glen Chenier
edndesignideas@ubm.com

ASSOCIATE EDITOR

Jessica MacNeil
1-212-600-3243;
jessica.macneil@ubm.com

COLUMNISTS

Howard Johnson, PhD,
Signal Consulting
Bonnie Baker,
Texas Instruments
Pallab Chatterjee,
SiliconMap
Kevin C Craig, PhD,
Marquette University



For a complete list of editorial contacts,
see <http://ubmelectronics.com/editorial-contacts>

CONTRIBUTING TECHNICAL EDITORS

Dan Strassberg, strassbergedn@att.net
Brian Bailey, brian_bailey@acm.org

VICE PRESIDENT/DESIGN DIRECTOR

Gene Fedele

CREATIVE DIRECTOR

David Nicastro

ART DIRECTOR

Giulia Fini-Gulotta

PRODUCTION

Adeline Cannone, Production Manager
Diane Malone, Production Artist

EDN EUROPE

Graham Prophet,
Editor, Reed Publishing
gprophet@reedbusiness.fr

EDN ASIA

Huang Hua,
Operations General Manager
huang.hua@ednasia.com
Grace Wu,
Associate Publisher
grace.wu@ednasia.com
Vivek Nanda,
Executive Editor
vnanda@globalsources.com

EDN CHINA

Huang Hua,
Operations General Manager
huang.hua@ednchina.com
Grace Wu,
Associate Publisher
grace.wu@ednasia.com
Jeff Lu,
Executive Editor
jeff.lu@ednchina.com

EDN JAPAN

Masaya Ishida, Publisher
mishida@mx.itmedia.co.jp
Makoto Nishisaka, Editor
mnishisa@mx.itmedia.co.jp


**UBM TECH
MANAGEMENT TEAM**

Paul Miller,
Chief Executive Officer
Kathy Astromoff,
Chief Executive Officer, Electronics
Brent Pearson,
Chief Information Officer
David Blaza,
Senior Vice President
Jean-Marie Enjuto,
Vice President, Finance
Barbara Couchois,
Vice President,
Partner Services and Operations
Felicia Hamerman,
Vice President, Marketing
Amandeep Sandhu,
Director of Audience Engagement
and Analytics

MAXIMUM SELECTION OF PCB PINS & RECEPTACLES



OVER 800 STYLES AND OPTIONS IN STOCK

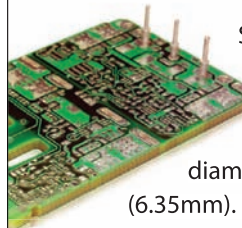

Suitable for applications subject to high amounts of vibration and shock, Mill-Max pins and receptacles are available in diameters from .008" (.20mm) to .250" (6.35mm). Receptacles feature a 4 or 6 finger beryllium copper or beryllium nickel contact to ensure integrity of connection for use in the harshest environments.

Don't see what you need? Rapid prototyping and custom designs are our specialty.

MILL-MAX®

www.mill-max.com/EDN621



Follow us
MillMaxMfg



Like us
Mill-Max Mfg. Corp.



BY SUZANNE DEFFREE, EXECUTIVE EDITOR

Why your company's competitor won't hire you

Recent news from Silicon Valley courtrooms brings to mind the hit song “Hotel California,” released in 1977 by American rock band the Eagles. Lead singer Don Henley has said that the song is about excess, but its famed “you can check out any time you'd like, but you can never leave” lyric is ringing true this month when it comes to employment in tech.

By now you've likely heard about the emails and documents brought to light by a recent case that alleges several technology companies—including Apple, Google, and Intel—violated antitrust laws by entering into formal or informal agreements to not recruit each other's employees (read.bi/W9j6B5).

In short, emails such as one from the late Steve Jobs to Google's Eric Schmidt, in which Jobs tells Schmidt that Google should stop recruiting in Apple's iPod group, are being produced as evidence that some companies adopted “no hire” policies. Under these policies, companies agreed not to hire one another's top talent, in some cases even if the employee was not being poached and was actively seeking new employment.

The case comes after a separate 2010 settlement in which the Department of Justice said some tech companies kept do-not-call lists to avoid competitive recruiting, and that such agreements restrained competition and hurt employees.

And it's reminiscent of a case that revolved around Mark Papermaster, an engineer who in 2008 was taken to court by his former employer, IBM,

when he moved to Apple. IBM claimed Papermaster violated “noncompete” agreements he signed 26 years prior when accepting the IBM job that said he would not work for a Big Blue competitor for a year after leaving the company.

In the end, a ruling came down that stated IBM and Apple were competitors, even if their products played in entirely different fields, because both

companies worked on devices that incorporated MPUs. In 2009, Papermaster was allowed to work at Apple, but not until six months after his IBM resignation and with a ball of additional strings attached.

All of these non-compete dealings, be they behind-the-

curtain handshakes or legal documents engineers are forced to sign for mere employment, hark back to some pre-union work era when you signed up at a company to make enough to feed the family and stayed there until you retired (or died, whichever came first).

You can almost picture a sinister-looking character from HR, twirling his handlebar mustache with one hand and holding a noncompete agreement in the other, saying, “You can check out of the company anytime you like, but you can

never leave for other employment at a company we see as a rival.” And if IBM, focused on large-scale electronics, got away with claiming consumer-oriented Apple was a rival, any tech company could be considered another's competitor. Cue the guitar solo.

What makes these courtroom unveilings even more disturbing is that Apple and Google, the two biggest names in the case, are among the most pioneering and powerful companies in California, if not the world.

Allowing for different surroundings and environments can inspire new ideas and innovations. Hindering employees' abilities to move to the best positions for their skills will impede their growth, not to mention make for a slew of bitter employees.

How much more innovation would occur if employees and their ideas could move more fluidly from company to company, from industry pillar to start-up, from competitor to competitor? The argument Apple and the like will surely make is that keeping top talent in-house allowed them to create a steady stream of innovation while maintaining shareholder growth and overall value.

Such agreements instead force stagnancy upon companies looking to bring in new blood and cause employees locked into their present companies to mentally “check out,” sticking around only for the paycheck. Any ethical HR person will tell you a dead-weight employee is not great for business, or co-worker morale. Those who do manage to make it to the door, like Papermaster, remain weighed down by their former shackles for some time.

Extinction of noncompete and no-hire policies may be considered bad for business, but it could do wonders for engineering—not to mention for engineers looking to climb the career and salary ladder. And, while this is an oversimplification, when engineers and innovation grow, so does business.

What do you think? Share your thoughts on such agreements online at www.edn.com/4405856. **EDN**

Contact me at suzanne.deffree@ubm.com.



Why Settle for Anything Less Than PSpice 16.6?

They say simulation is the sincerest form of flattery.

1984 marked the beginning of a new era for analog and mixed signal circuit simulation. Cadence® PSpice® was introduced and electrical engineers were able to simulate circuits on their PCs with speed and accuracy never thought possible. In the 28 years since PSpice was first released, many competitors have attempted to duplicate its capabilities and success. None have achieved that goal, and PSpice remains the standard by which all others are judged.

While the imitators try to simulate the success of PSpice, it continues to be an innovator leading the way with the most advanced circuit simulation available. Features like multi-core processing, 64 BIT precision, IBIS 5.0 support, and user customization mean the standard is now higher than ever. Why settle for anything less?

To learn more about PSpice 16.6:
www.ema-eda.com/PSpice16_6

cādence®

EMA | Design Automation™
ema-eda.com

©2013 Cadence Design Systems, Inc. All rights reserved.

Python speeds up GaN models

Anyone following developments in high-power RF knows that GaN is hot (pun intended). According to research firm Yole Développement, there is a great deal of R&D activity in this market. In March 2012, the company projected the power GaN market would grow to nearly \$10 million in 2012 and \$500 million in 2016—up from less than \$2.5 million in 2010.

When new semiconductor processes are introduced, they are usually slowly integrated into device modeling and characterization tools. If a process takes off, however, the capabilities of the device modeling and characterization tools must keep pace, or even anticipate the needs of the new market. Agilent Technologies, for example, recently announced a new version of its Integrated Circuit Characterization and Analysis Program (IC-CAP) for high-frequency device characterization and modeling, offering parameter extraction, data analysis, instrument control, and interface responsiveness. It also now includes Angelov-GaN modeling and Python scripting. This announcement actually includes two noteworthy topics: GaN and Python.

Angelov-GaN is an industry-standard compact device model for GaN semiconductor devices. Since GaN devices typically operate at high power, it is important to be able to model thermal issues and their impacts on device characteristics. Designers working with GaN quickly realized that GaAs models were not good enough. Fortunately, Professor Ilcho Angelov at Chalmers University of Technology (Gothenburg, Sweden) developed his Angelov-GaN model as an alternative.

In IC-CAP 2013.01, Agilent has embraced the Angelov model with the W8533 Angelov-GaN extraction package. An interface lets users execute a step-by-step extraction flow to obtain

model parameters. A turnkey flow aims to provide quick-start modeling of GaN devices.

The Agilent product uses Python scripting. Why Python? The Python program may soon lay claim to the title of most used interpreter language. Roberto Tinti, device modeling product manager with Agilent EEsof EDA, thinks an advantage of Python is the support of a large, open-source community. “Some of our major customers have started to use Python for their projects,” says Tinti, “and we decided to support it natively in our platform in addition to our own native language, called PEL.” Python is 100x faster than Agilent’s Programming Extraction Language, the language that IC-CAP users have been using to customize their applications.

The new IC-CAP release includes support for Smartspice simulations, as well as support for gain compression and two-tone intermodulation distortion measurements with Agilent’s PNA-X network analyzer. The software is available for download at <http://bit.ly/YIRSFV>.


—by Janine Love

▶ **Agilent Technologies**,
www.agilent.com

TALKBACK

“I’m all for making things better and utilizing technology to do so, but what parts of our soul do we lose in the process?”

—Commenter Calibrator, in response to Pallab Chatterjee’s blog post “What will be in the auto black box?” at www.edn.com/4404670. Join the conversation and add your own comment.

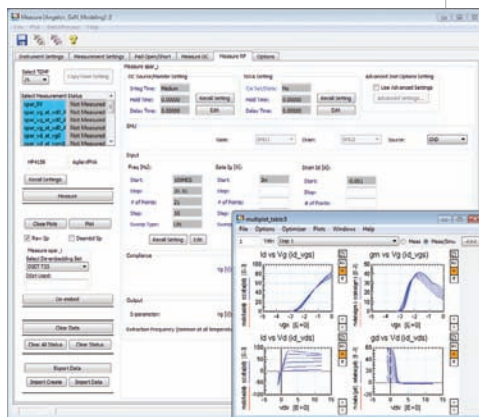

In Agilent’s Angelov-GaN extraction package, an interface lets users execute a step-by-step extraction flow to obtain model parameters.

The purest signals for A/D converter tests

For reliable results at the digital output, you have to feed the converter's input with the purest analog signals available during development. That's where the R&S®SMA100A comes in. With nonharmonics of typ. -100 dBc and a wideband noise figure of typ. -160 dBc up to 750 MHz, the R&S®SMA100A is at the top of its class in signal quality. This gives you maximum confidence in your converters' capabilities.

Interested? Then visit
www.rohde-schwarz.com/ad/sma/edn



R&S®SMA100A (9 kHz to 3/6 GHz)


ROHDE & SCHWARZ

Dreamlining Boeing and batteries

You've undoubtedly seen the news that various fleets of Boeing's 787 Dreamliner, which recently went into service, have been temporarily grounded while an apparent problem with some of its battery sets is checked out. (There have also been some fuel leaks, but that's another story.) Among the battery issues was a smoke-filled locker and fire damage that occurred when a plane was parked on the runway.

Any engineer knows that what appears to be 'the problem' often is just a misleading manifestation of the real problem elsewhere.

I'm not going to jump to conclusions about the problem or the cause. Any engineer with any experience knows that what appears to be "the problem" often is just a misleading manifestation of the real problem elsewhere, while the actual root cause (or causes) is frequently buried somewhere down the line in a long chain of events. Just because you

see smoke doesn't mean that there's a fire where you think it is, so to speak.

There's no doubt that a lot of advanced battery technology can be found in the 787. An excellent article from *The Wall Street Journal*, "Dreamliner-like batteries raised concerns" (on.wsj.com/U9xwV9), and its associated graphic show how the Dreamliner 787 uses lots of electrical power for actuators and more, compared with earlier aircraft.

Why? That question is easy to answer: In order to reduce weight and get the benefits of electronics and advanced algorithms, much of the conventional hydraulic power and control of the aircraft has been replaced by electrically based power and control—and with advanced electronics and software, of course. (Plus, the airframe is also largely made up of composites, instead of conventional aluminum, for reduced weight.)

These electrical systems require lots of batteries for start-up, backup, and even operation. The preferred rechargeable energy-storage technology for the batteries utilizes lithium-based chemistry. This makes

sense, since lithium offers much, much higher energy density (by weight and volume) than any other available battery chemistry.



But much more so than with older chemistries such as nickel cadmium, lithium cells also need lots of careful attention when charging and discharging. In addition, their energy density is so high that there's a lot of stored energy in that small volume, and a failure such as an internal short can result in huge current flows and subsequent fires or even explosions. (Note several well-documented instances of laptops catching fire even though they were "off" and not even plugged into their ac-line chargers.)

So we have the typical engineering situation of a tricky trade-off. We want the ben-

efits of lower weight, greater efficiency, higher energy density, and so on, but we also have to accommodate and anticipate all of the implications of the technology that makes these benefits possible.

And as all engineers know, you can't plan for everything, so you also have to have some independent, overall watchdogs in case something happens that you didn't think of, or didn't plan for.

It's also true that while lithium chemistry has such high density and subsequent danger, just remember that hydrocarbons such as gasoline have far greater energy density than the best batteries, yet we have managed to make that explosive technology into a safe energy-storage medium and power source.

Of course, the same politicians and activists who want engineers to perform miracles and deliver it all—better efficiency, lower weight, better products—will also be the first to scream and point fingers (and maybe lawsuits) when they don't get everything they wanted, and perhaps were promised. Once again, no good deed goes unpunished.

—by Bill Schweber

► [Power Points blog](http://PowerPoints.blog), www.edn.com/4405458

DILBERT By Scott Adams



Your work is fast-paced.
Now there's a digital multimeter
that can keep up.



Agilent Digital Multimeters. Speed. Accuracy. Confidence.

You deserve throughput among the fastest in the industry. That's what you'll get with the Agilent 34450A 5 1/2 Digital Multimeter. It also gives you more connectivity options for transferring and analyzing data on a PC. In short, it's built to anticipate everything you need to succeed.

34450A Digital Multimeter, 5 1/2 digits	
High speed	190 readings/sec throughput
New OLED display	Real-time statistical parameters Histogram analysis Simple pass/fail limits
Easy connectivity	USB, serial interface (RS-232) and GPIB



Scan or visit
<http://qrs.ly/mp2dv9h>
to view 34450A
video demos

**Agilent and our
Distributor Network**
Right Instrument.
Right Expertise.
Delivered Right Now.



800-433-5700
www.alliedelec.com/agilent

**Limited-time offer: FREE upgrade to
50k memory and GPIB licensing key:**
www.alliedelec.com/lp/agilentdmm/

© Agilent Technologies, Inc. 2013

Anticipate — Accelerate — Achieve



Agilent Technologies

TI claims industry's lowest-phase-noise frequency synthesizer

Texas Instruments has introduced a wideband frequency synthesizer with integrated voltage-controlled oscillator (VCO) that delivers what the company claims is the industry's lowest phase noise. The LMX2581 allows designers to use one frequency synthesizer to support a variety of demanding applications in wireless infrastructure, radar, medical imaging, defense and aerospace, and test and measurement.

A phase-detector frequency of 200 MHz and an ultralow phase-locked-loop (PLL) normalized phase noise of -229 dBc/Hz provide a precision local oscil-

lator to an RF front end for better receiver sensitivity. Integrated VCOs allow the device to output frequencies from 50 to 3760 MHz, eliminating the multiple VCO/PLL combinations typically required to support a broad range of applications. The LMX2581 also gives designers the option to bypass


its internal multicore VCO in favor of an external VCO.

The ultralow-noise, wideband frequency synthesizer integrates a delta-sigma fractional-N PLL; a multicore VCO with tank circuit; an optional frequency divider; two differential RF output buffers that can deliver 10 dBm single-ended



A phase-detector frequency of 200 MHz and a PLL normalized phase noise of -229 dBc/Hz in TI's LMX2581 frequency synthesizer provide a precision local oscillator to an RF front end for better receiver sensitivity.

on each side; and several low-noise, high-precision low-drop-out regulators. This integration reduces BOM costs.

 **Integrated VCOs allow the device to output frequencies from 50 to 3760 MHz.**

The LMX2581EVAL evaluation module can be purchased for \$175. The synthesizer's companion Clock Design Tool and CodeLoader software help speed system design by aiding engineers with product selection, loop filter design, and simulation of timing solutions.

The LMX2581 is available now in a 32-pin, 5x5-mm QFN package for a suggested retail price of \$7 (1,000).

—by **Steve Taranovich**
 ▶ **Texas Instruments**,
www.ti.com

Peel-and-stick solar cells circumvent several fabrication challenges

Researchers at Stanford University, the National Renewable Energy Laboratory, and Hanyang University claim to have developed the world's first peel-and-stick thin-film solar cells that don't require any modification of existing processes or materials. The new process would allow the creation of decal-like solar panels that could be applied to virtually any surface.

Unlike with standard thin-film solar cells, the new process doesn't require direct fabrication on a final carrier substrate. Instead, a 300-nm film of nickel (Ni) is deposited on a silicon/silicon dioxide (Si/SiO₂) wafer, on which thin-film solar cells are then deposited using standard fabrication techniques and covered with a layer of protective polymer. A thermal-release tape is then attached to the top of the thin-film solar cells as a temporary transfer holder.

Peeling the cells from the wafer involves soaking the structure in a water bath, during which the thermal-release tape is slightly peeled back, allowing water penetration into the Ni and SiO₂ interface, which results in its separation and the peeling off of the thin-

film solar cells from the Si/SiO₂ wafer. When the solar cells are ready to be applied to a surface, the thermal-release tape holding them is heated at 90°C for a few seconds to weaken its adhesion, allowing the cells to be removed. The cells can then be applied to various surfaces—including plastics, paper, glass, metal foils, and textiles—using common adhesives.

Tests have shown that the peel-and-stick thin-film cells remain completely intact and functional, with no loss of the original cell efficiency. Looking beyond solar cells, the researchers believe the process could also be applied to thin-film electronics, including printed circuits, ultrathin transistors, and LCDs. For more information, see the original paper, published in *Scientific Reports*, "Peel-and-Stick: Fabricating Thin Film Solar Cell on Universal Substrates" (bit.ly/XNRZcA).

—by Rich Pell


- ▶ Stanford University, www.stanford.edu
- ▶ National Renewable Energy Laboratory, www.nrel.gov
- ▶ Hanyang University, www.hanyang.ac.kr

Renesas power MOSFETs deliver 50% lower on-resistance

Renesas Electronics has started to sample three new low-on-state-resistance MOSFET products, including the μ PA2766T1A, optimized for use as ORing FETs in power-supply units for network servers and storage systems.

Featuring ultralow on-state resistance of 0.72 m Ω (typical) for 30V—about 50% lower resistance compared with the company's earlier products—and a high-efficiency, small-surface-mount package (8-pin HVSON), the products enable high-current control, contributing to power savings and miniaturization of the power units used for comparably large-scale server storage systems.

For mission-critical systems, it is com-

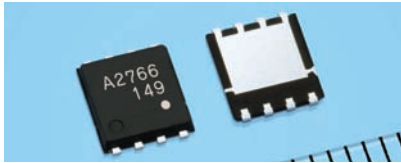

Three new power MOSFETs from Renesas feature on-state resistance of 0.72 m Ω (typical) for 30V.

mon to provide redundant power delivery, for example, by ORing FETs with multiple power units that maintain high reliability. These ORing FETs are connected to the power output lines of each of the power-supply units. They remain in the on state during normal operation, but if one of the power-supply units fails, the ORing FETs of that unit switch to the off state to isolate them from the other power-supply units and ensure that system power is not disrupted.

During normal operation, the power output lines handle large currents of several tens to several hundreds of amperes. The ORing FETs must have low on-state-resistance characteristics to prevent an increase in conduction loss or a drop in the power-supply voltage.

Sample pricing is \$1.20, \$1, and \$1.80 per unit for the μ PA2764T1A, μ PA2765T1A, and μ PA2766T1A, respectively. Mass production was scheduled to begin this month. —by Ismini Scouras

► **Renesas Electronics Corp.**, am.renesas.com

Microsemi expands SiC power-module product family

Microsemi has started to sample a new generation of industrial-temperature, silicon-carbide (SiC) standard power modules aimed at high-power switch-mode power supplies, motor drives, uninterruptible power supplies, solar inverters, oil exploration, and other high-power, high-voltage industrial applications requiring high performance and reliability. The power-module family is also offered with extended temperature ranges to meet next-generation power-conversion system requirements for higher power densities, operating frequencies, and efficiencies.

SiC technology delivers higher breakdown field strength and improved thermal conductivity compared with silicon material. The result is improved performance characteristics, including zero reverse recovery, temperature-independent behavior, higher voltage capability, and higher-temperature operation.

Microsemi's new SiC power modules feature multiple circuit topologies and are integrated into low-profile packages. The majority of the new module product family uses aluminum-nitride substrates to enable isolation from the heat sink, which improves heat transfer to the cooling system. Additional features include high-speed switching, low switching losses, low input capacitance, low drive requirements, a low profile, and minimum parasitic inductance, which enable high-frequency, high-performance, high-density, and energy-saving power systems.

The company's SiC product portfolio includes Schottky diodes in both discrete and module packages, and power modules with a mix of SiC Schottky diodes and IGBT or MOSFET transistors in both standard and custom configurations.

—by Ismini Scouras

► **Microsemi Corp.**, www.microsemi.com


CAPTURING MORE OF THE SUN'S ENERGY

Researchers at the Massachusetts Institute of Technology have proposed a more efficient way of capturing photons for electricity. Their concept, the solar energy funnel, is based on manipulating elastic strain in new "ultrastrength" optoelectronic materials so that the materials can capture and more efficiently collect a broader range of the solar spectrum.

The researchers used computer modeling to determine the effects of strain on molybdenum disulfide (MoS₂), a material that is capable of forming a layer just a single molecule thick. When the material is placed under strain in the solar energy funnel configuration—using a microscopic needle to poke it down at the center—its bandgap varies across the surface so that different parts of it respond to different colors of light, and the resulting photoexcited charge carriers are conveyed and concentrated in the center for collection.

The researchers hope to be able to carry out laboratory experiments at some point to confirm the effect. —by Rich Pell

► **MIT**, www.mit.edu

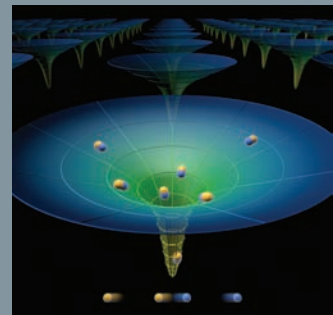

When the material is placed under strain in the solar energy funnel configuration, its bandgap varies across the surface, and the resulting photoexcited charge carriers are conveyed and concentrated in the center for collection (courtesy MIT).



BY HOWARD JOHNSON, PhD

Make it better

The circuit in **Figure 1** includes a plethora of termination options. The **figure** shows four results using various combinations of component values, each observed at the point indicated by the purple arrow.

In the first three results, resistor R_2 is replaced with a 0Ω short, and resistor R_3 is not installed. This is a classic series-terminated approach using only resistor R_1 , having values of 33, 18, and 4.7Ω , respectively.

Looking at the rising edges, the signal in each case fails to achieve full strength on the first stroke, as indicated by the “plateau” marking on each waveform. In each case, subsequent reflections at 2-nsec intervals push the signal voltage up toward its 3.3V limit. As the value of R_1 is successively reduced, the first stroke becomes more power-

ful, climbing higher toward the goal of first-incident-wave perfection but never quite achieving it. Even with R_1 set to 0Ω , this driver will never achieve perfection when driving a 50Ω line, because the effective driver output resistance, R_s , is greater than 50Ω .

The falling edges tell a different story. With R_1 set to 33Ω , the initial drop in

the falling waveform is $2.7V$ —a larger step than the first step in the rising waveform. That clue tells us the driver output resistance in the falling direction must be *less than* the output resistance in the rising direction, a common situation in CMOS totem-pole drivers. In the third waveform, by the time R_1 is set to 4.7Ω , the signal undershoots significantly. The driver in this case is too powerful.

If your driver output resistance varies between its rising and falling edges, as it often does, then no value of series-terminating impedance can possibly make both edges perfect—but perhaps you can make it better.

A higher value of line impedance helps. To see why, suppose that your driver has output resistances of 60 and 37Ω in the rising and falling directions, respectively, as in this example. Mate that to a transmission line with a characteristic impedance of $10,000\Omega$ using a series resistor of $9,951\Omega$. The effective impedances in the two driving directions are now 10,011 and $9,988\Omega$, respectively—very close matches to the line impedance.

Of course, you can’t make such a circuit, but even raising your transmission-line impedance to 65Ω permits a higher value of R_1 , making R_1 a more significant part of the circuit and thus reducing the impact of variations in the natural output resistance of your driver.

A slower edge helps. The signal rise and fall time now is about 1 nsec. Some FPGA drivers have a facility for slowing the edge-transition time, which would be ideal. If you don’t have that, try inserting $R_2=50\Omega$ or more in series with the receiver (fourth waveform). That additional resistance, working into the 9-pF capacitance of the receiver, forms a lowpass filter that can lengthen the edge-transition times, reducing the amount of undershoot in the falling direction and making the waveform less sensitive to natural variations in the driver’s output impedance. **EDN**

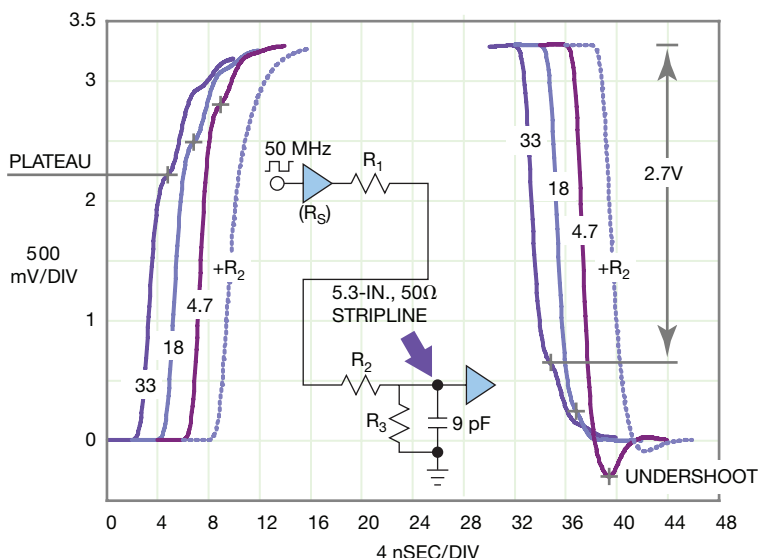


Figure 1 With $R_1=4.7\Omega$, adding $R_2=50\Omega$ lengthens the signal-transition times, smoothing the signal and limiting the undershoot.

Howard Johnson, PhD, of Signal Consulting, frequently conducts technical workshops for digital engineers at Oxford University and other sites worldwide. Visit his website at www.sigcon.com.

Check this out ...



RF Signal Generators

just became affordable !

- 2 GHz, 4 GHz & 6 GHz models
- Excellent phase noise
- AM, FM, Φ M, PM & sweeps
- Square wave clock outputs
- Ethernet, GPIB & RS-232



DemoDirect

Free 30 day trial
Call (408)744-9040

SG382 ... DC to 2GHz

\$3900



BY BONNIE BAKER

Take advantage of an online design tool's extended transimpedance features

Companies are cutting engineering resources while still expecting teams to meet tightened product-development deadlines. Designers need to organize their thoughts and approach this problem aggressively with an arsenal of design weapons. Worthy design tools can encompass the analog/digital simulation models, such as SPICE and IBIS, along with higher-level tools that offer comprehensive circuit-design solutions.

For example, a common but not-so-simple design of a photodiode circuit¹ is available online for your use.² This tool provides a complete solution (Figure 1), including a bill of materials and a proto-board that you can order.

The solution shown in the figure is great if you're designing a complete system, but if you are looking for just a transimpedance-amplifier solution, I suggest that you look a little closer at the website tool. The software user can elect to use only the transimpedance-amplifier circuitry in the final design.

As a first step, evoke the software on the Web and create a full photodetector system. The circuit's complete system-specification page is embedded in the *Operating Values, Performance* view. (From the front page, select *Photodiode*, then click *Start Design* → *Start Design* → *Operating Values, Performance*.) This page includes the system SNR, total output noise, and analog-signal and system bandwidths. Note the analog-signal bandwidth of 330 kHz for this first design.

You are now ready to design your own transimpedance-amplifier circuit with a

higher analog-signal bandwidth. You can access the list of amplifiers by clicking on *View Design Summary* → *Schematic* → *Change Op Amp A1*. In this view, you have a list of amplifiers with the lowest gain-bandwidth product (GBWP) at the top. Choose any operation amplifier from this list. If you select the OPA354, with a GBWP of 250 MHz, the analog-signal bandwidth in the *Operating Values, Performance* view will be 3.859 MHz. This new analog-signal bandwidth opens the door for higher-speed systems, higher-resolution systems, or both.

This type of application site is indicative of what is in store for the analog hardware designer now and in the future. The Webench pages available now are not just ordinary text pages, as they provide a library of common-sense design equations, rules, and tips, along with robust, up-to-date product-selection lists. The interactive Webench

This type of application site is indicative of what is in store for the analog hardware designer.

algorithms tap the expertise of numerous analog experts around the world. These design tools can provide intuitive evaluations for constraints such as power dissipation versus BOM costs versus the footprint size of your circuit.

The most valuable part of this type of Webench page is that it is there for the long term. This “workforce” does not retire, move to another job, or go home in the evening. It is at your beck and call 24/7. **EDN**

REFERENCES

- 1 Ramus, Xavier, “Transimpedance Considerations for High-Speed Operational Amplifiers,” Texas Instruments, Nov 2009, <http://bit.ly/XyxmDK>.
- 2 Webench Sensor Designer tool, Texas Instruments, <http://bit.ly/V66Rsv>.

Bonnie C Baker is a senior applications engineer at Texas Instruments.

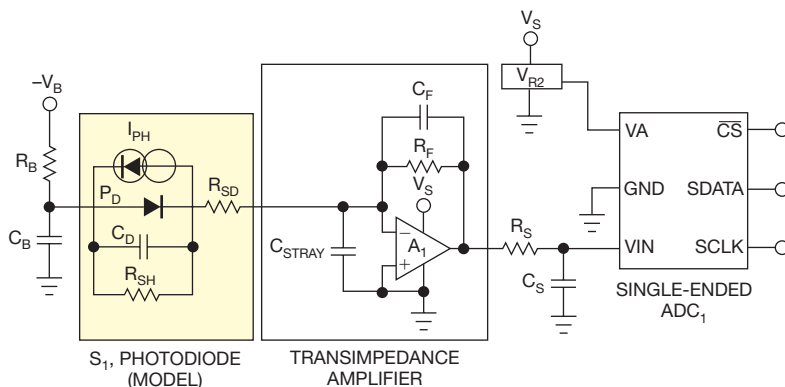


Figure 1 This reference solution for a complete photodetector-system signal path uses a photodiode, transimpedance amplifier, and successive-approximation-register ADC; but what if you need just a transimpedance-amp solution?



Are limited capacitor options
cramping your style?



TDK offers EPCOS DC film, aluminum electrolytic and power capacitors for a wide range of applications. The portfolio features leaded capacitors for PCBs, power capacitors for traction and everything in between – including automotive hybrid and regenerative energy applications. Make TDK your capacitor mega-source.

Call 800-888-7729 or visit www.epcos.com/capacitors



www.epcos.com

WANT MORE?

- + Go to www.edn.com/learning/teardowns for more Teardowns.
- + For data sheets on the devices discussed in this Teardown and thousands of other parts, go to www.datasheets.com.




Thermometer measures temperature without contact

The Melexis infrared (IR) thermometer makes it safe to measure the surface temperatures of hot, hazardous, or hard-to-reach objects without having to physically touch them. (Omega Engineering's website provides an introduction to IR thermometers: <http://bit.ly/VITS0B>.) Simply aim and push the front-panel button to display the remote temperature (in your choice of °C or °F) in less than a second. Pressing the button a second time will freeze the measured value on the display. The value will continue to flash until the button is again depressed, making the device ready for another temperature measurement. Aside from a few minor issues with the front-panel button, I found the device fairly easy to use.

The MLX90614 IR sensor is built from two chips developed and manufactured by Melexis: the MLX81101 IR thermopile detector and the MLX90302 signal-conditioning ASSP, which is specially designed to process the output of the IR sensor. The sensor is housed in a TO-39 can, which also comprises an integrated low-noise amplifier, 17-bit ADC, and DSP. The IC's digital 10-bit PWM is configured with a digital SMBus output to continuously transmit the measured temperature. The sensor is precalibrated for an object emissivity of 0.95.

LCD removed from the circuit board.


The MSP430F413 16-bit ultralow-power microcontroller has 8 kbytes of flash, 256 bytes of RAM, a comparator, and a 96-segment LCD driver to drive the display. The microcontroller takes the IR sensor's DSP PWM signal and converts it to degrees Celsius or degrees Fahrenheit when the front-panel switch signal is sensed.

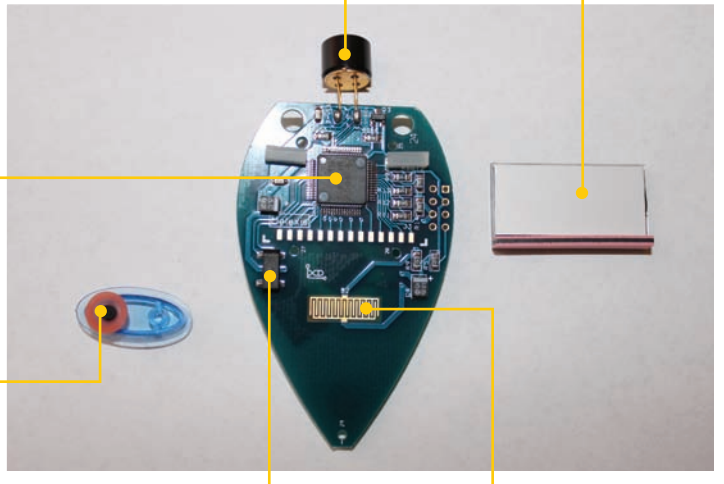

A rear view of the front-panel switch cap with conductive elastomer to activate the resistor array.

32,768-Hz oscillator for the MSP430.


Switch resistive array.

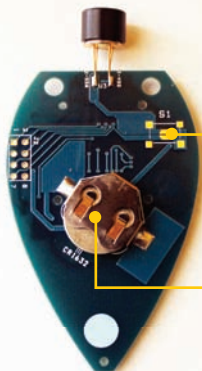

A rear view of the circuit board shows the 3V, CR1632 replaceable coin-cell battery in its holder, as well as the reset-switch circuitry.

PLANET ANALOG

all signal no noise

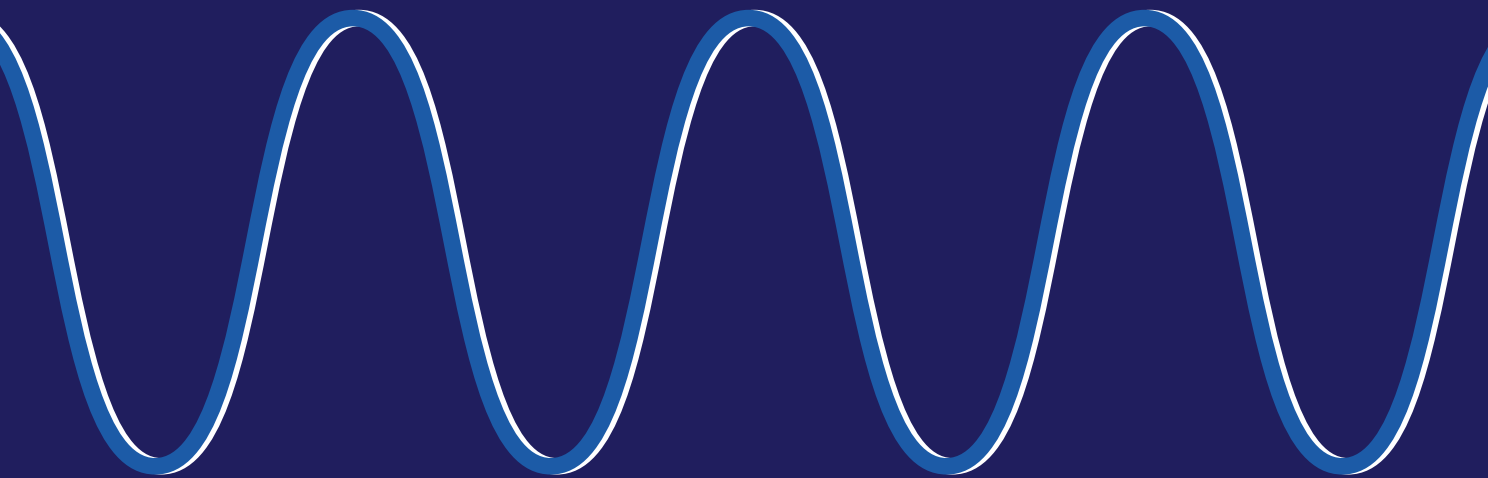

Analog designers form a unique blend of **engineering discipline, creativity, individualism, passion,** and out-of-the-box thinking.


Planet Analog is your new playground and community.

Explore: www.PlanetAnalog.com

Blogs | Message Boards | Live Chats | Whitepapers | Educational Resources

MECHATRONICS IN DESIGN

FRESH IDEAS ON INTEGRATING MECHANICAL SYSTEMS, ELECTRONICS, CONTROL SYSTEMS, AND SOFTWARE IN DESIGN

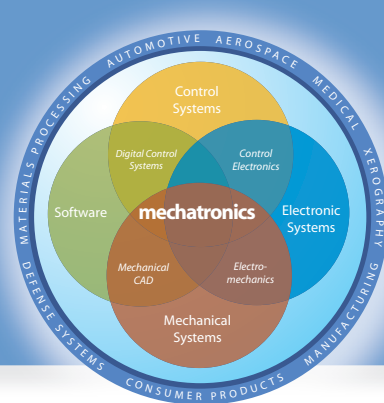


Inertia mismatch: fact or fiction?

Is this often-quoted concept an excuse for inadequate system modeling?

By Kevin C Craig, PhD

Servo systems may be direct drive or geared. For geared systems, the motor selection also involves a choice of gear ratio. **Figure 1** shows a motor connected to a load through an ideal (that is, no friction, no backlash, and no compliance) gear train with gear ratio N . The equation of motion for this one-degree-of-freedom system is shown in terms of the load angular velocity, ω_L .

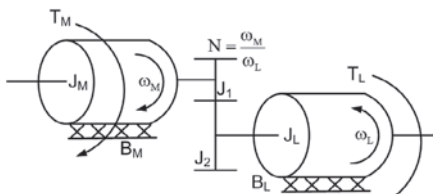

$$[N^2(J_M + J_L) + (J_L + J_2)] \frac{d\omega_L}{dt} + [N^2 B_M + B_L] \omega_L = N T_M - T_L$$


Figure 1 A motor is connected to a load by an ideal gear train.

The inertia ratio is the ratio of the load inertia to the motor inertia, J_L/J_M . What is the optimum value of this ratio for a particular value of N ? If you ignore the motor and load damping, B_M and B_L , respectively, and the load torque, T_L , the inertia ratio that maximizes the power transferred from motor to load is N^2 —that is, the reflected motor inertia equals the load inertia.

When friction and load torques and system compliance (for example, coupling or timing-belt compliance) are significant, the selection of an optimum inertia ratio is less straightforward. **Figure 2** shows this more general case.

Why do deviations from the so-called ideal inertia ratio of N^2 , called inertia mismatch, often cause servo-system stability problems, particularly in compliantly coupled systems? This is a system question, and to answer it you must examine the frequency-response plot for a compliantly coupled motor and load, as shown in **Figure 3** ($N=1$, $B_M=0$, $B_L=0$).

The anti-resonance frequency, ω_{AR} , always occurs before the resonance frequency, ω_R . At a low J_L/J_M ratio, the resonance and anti-resonance frequencies are close to each other at a high frequency. As J_L/J_M increases, both the anti-resonance and resonance frequencies decrease, with the anti-resonance frequency decreasing at a faster rate. For a given J_L , to increase the resonance frequency, you need to either increase the shaft stiffness, K_S , or decrease the motor inertia. As K_S increases, both ω_R and ω_{AR} increase. The smaller the

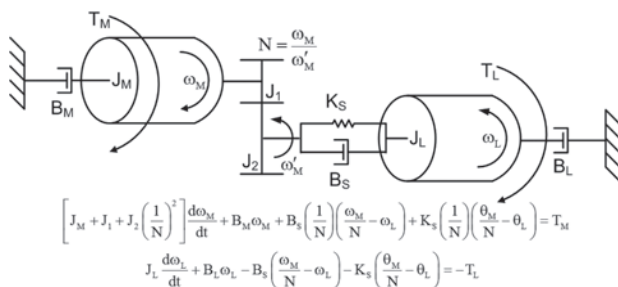

$$\left[J_M + J_1 + J_2 \left(\frac{1}{N} \right)^2 \right] \frac{d\omega_M}{dt} + B_M \omega_M + B_S \left(\frac{1}{N} \right) (\omega_M - \omega_L) + K_S \left(\frac{1}{N} \right) (\theta_M - \theta_L) = T_M$$

$$J_L \frac{d\omega_L}{dt} + B_L \omega_L - B_S \left(\frac{\omega_M}{N} - \omega_L \right) - K_S \left(\frac{\theta_M}{N} - \theta_L \right) = -T_L$$

Figure 2 A motor is connected to a load by an ideal gear train with compliance.

inertia ratio, the less the compliance will affect the system.

All mechanical systems have compliance. You should base your choice of inertia ratio and transmission ratio (for example, gear, belt, or lead screw), as well as the design of the feedback-control system, on a system analysis and not on poorly defined rules of thumb. **EDN**

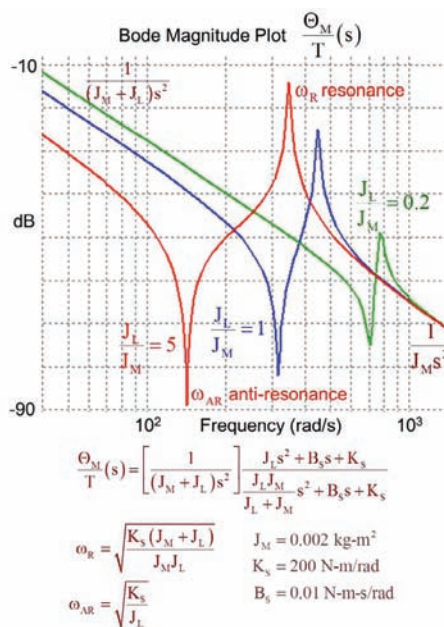


Figure 3 In a compliantly coupled motor and load, the anti-resonance frequency, ω_{AR} , always occurs before the resonance frequency, ω_R .

$$\frac{\theta_M}{T}(s) = \left[\frac{1}{(J_M + J_L)s^2} \right] \frac{J_L s^2 + B_S s + K_S}{J_L J_M s^2 + B_S s + K_S}$$

$$\omega_R = \sqrt{\frac{K_S (J_M + J_L)}{J_M J_L}} \quad J_M = 0.002 \text{ kg-m}^2$$


$$\omega_{AR} = \sqrt{\frac{K_S}{J_L}} \quad K_S = 200 \text{ N-m/rad}$$

$$B_S = 0.01 \text{ N-m-s/rad}$$



Register today to attend the largest electronic engineering event in the United States.

150 conference sessions • 250+ exhibitors
3 keynotes • 80+ world class speakers

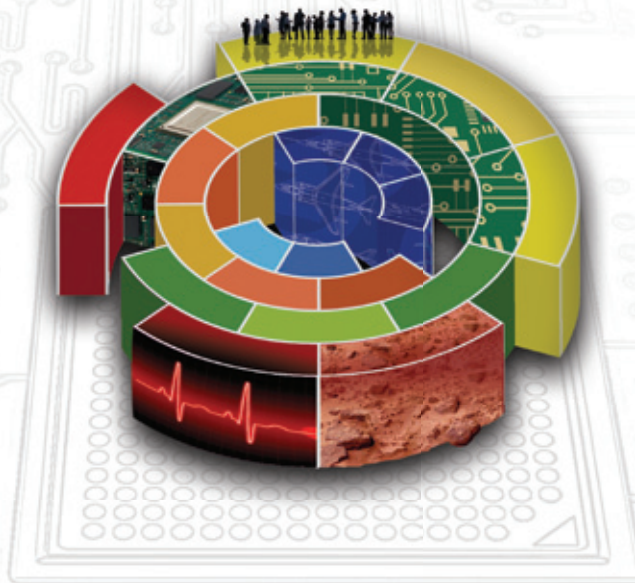

10,000 electronics design engineers, entrepreneurs,
and technology professionals will be at DESIGN West.

Will you be there?

April 22-25, 2013
McEnergy Convention Center
San Jose, CA

www.ubmdesign.com

Uplink & Downlink Bandwidth & Speed Rohde & Schwarz FSW

Please visit us at the
Mobile World Congress
in Barcelona
Hall 6 / Booth E30

The most advanced signal and spectrum analyzer for wireless applications

The highest analysis bandwidth, detailed analysis of multistandard scenarios, easy operation and a host of convenient new tools – all on the largest touch-screen available. The R&S®FSW is a high-performance analyzer for all types of mobile radio and wireless signals, for base stations and mobile devices alike.

- ▮ Analysis of LTE FDD/TDD, WCDMA, GSM/EDGE/EDGE Evolution, TD-SCDMA, CDMA2000®, 1xEV-DO in uplink and downlink
- ▮ Analysis of WLAN 802.11ac signals with 160 MHz bandwidth
- ▮ Detection of interference between different wireless technologies
- ▮ MultiView for simultaneous visualization of multiple measurements

The R&S®FSW. **Create the future.**

www.rohde-schwarz.com/ad/fsw-mr





CHARACTERIZING MIXED-SIGNAL ICs FOR PRODUCTION

WHAT YOU
DON'T
TEST CAN
HURT YOU.

BY ROBERT SEITZ • AMS AG

An integrated circuit entering production must be available in high volume to meet the potential demand. Even though bench testing may show good results, in production the device must be tested with automated test equipment (ATE). What's more, before the design's release to production, it must undergo thorough characterization to verify that every tested device will fully meet its electrical specifications, as well as to uncover any process defects that could appear during the fabrication process. Here, we focus on mixed-signal device characterization, examining statistical techniques that ensure repeatability of test results, including testing over an IC's rated temperature extremes.

REPEATABILITY

Before releasing a device and its test solution to production, you must verify that the test solution itself is both accurate and repeatable. Gauge repeatability and reproducibility (GR&R) is a measure of the capability of a gauge or tester to obtain the same measurement reading every time the measurement is taken, and thus indicates the consistency and stability of the measuring equipment. Mathematically, it is a measure of the variation of a gauge's measurement. Engineers must try to minimize the GR&R numbers of the measuring equipment, since a high GR&R number indicates instability and is thus unwanted. Reduced GR&R is a means of checking the repeatability of the test program.

Part of the procedure is to test multiple sites on a wafer and to do so multiple times. It's important to note that only the actual active site should be powered. This avoids possible influence from other sites, such as crosstalk or interference from RF signals that could adversely affect test results.

Let's assume you will test each site

AT A GLANCE

▣ Gauge repeatability and reproducibility, or GR&R, is a measure of the capability of a gauge or tester to obtain the same measurement reading every time the measurement is taken.

▣ Testing at room temperature is necessary and important, but it's even more important to test key parameters over a device's fully specified operating temperature range.

▣ In addition to testing at the wafer level, you also have to test packaged parts to determine that no damage has occurred during the packaging process.

50 times. With this approach, a 16-site test solution produces 800 (16×50) test results. The overall results can show a possible discrepancy between sites. You can then calculate the standard deviation and process capability index (Cpk) across all sites. The goal is to ensure a good, repeatable test program.

Figure 1 shows a comparison between one part tested 100 times on ATE and 300 parts tested one time on ATE. A reduced-repeatability-and-reproducibility report such as the one shown in the figure can provide you with the data to judge a measurement's accuracy (of the measurement range, for example) and stability.

To summarize the test sequence:

- One site is tested 50 times. All other sites are disabled (not powered) during test.
- Approximately 300 parts are tested with ATE to provide a comparison of lot variance with device repeatability.
- Statistical tools are used to analyze the data.

The measurements on the tester must correlate with the measurement results in the lab. In each situation, the project team must define the number of correlation devices and the parameters to be tested. This correlation can be started as soon as the test program is debugged and stable. At least 10 devices should be tested to guarantee that the data is correlating.

CPK CALCULATION

The process-capability-index value—defined from the mean value, the standard deviation (sigma), and the upper and lower specification limit—is an indication of how well the test parameter is under control with respect to its limits. For many devices, a desirable Cpk value would be 1.33, which would indicate a repeatability value of three times sigma. For automotive devices, however, a Cpk value of 2.00 would be preferable because of the Six Sigma rule.

TEMPERATURE TESTING

Testing at room temperature is necessary and important, but it's even more important to test key parameters over a device's fully specified operating temperature range. Temperature characterization shows the stability of the device over the specified operating temperature range. You should test approximately 300 parts at three previously defined temperatures; in addition, one part must be tested 100 times at three temperatures in order to calculate drift over temperature. You can use the resultant data to calculate temperature guard bands.

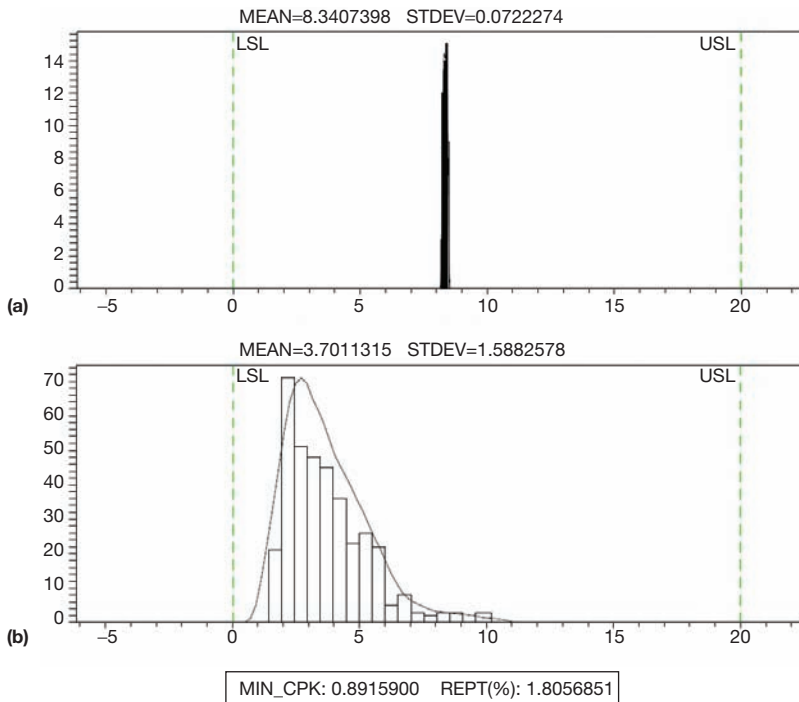


Figure 1 A reduced-repeatability-and-reproducibility report such as this one can provide the data to judge a measurement's accuracy and stability. Here, one part is tested 100 times on ATE (a), and 300 parts are tested one time on ATE (b). LSL is the lower spec limit; USL is the upper spec limit.




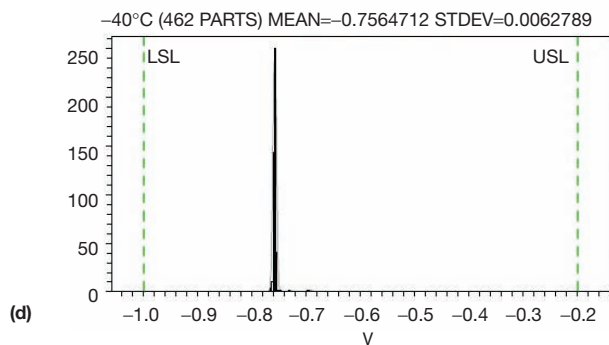


Figure 2 This sample temperature-characterization report includes guard bands. The Y axis represents the number of parts; the X axis shows the measured value. Characterization is shown for 100 parts tested at +25°C (a), 1072 parts tested at +25°C (b), 1073 parts tested at +125°C (c), and 462 parts tested at -40°C (d).

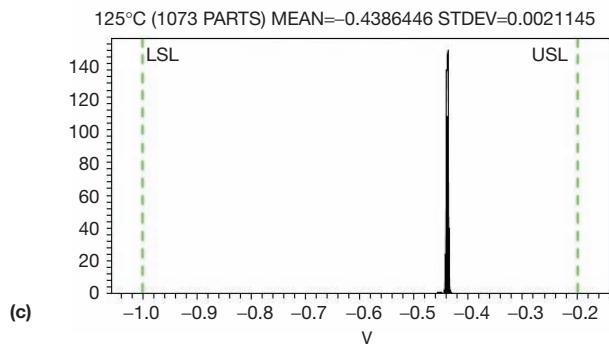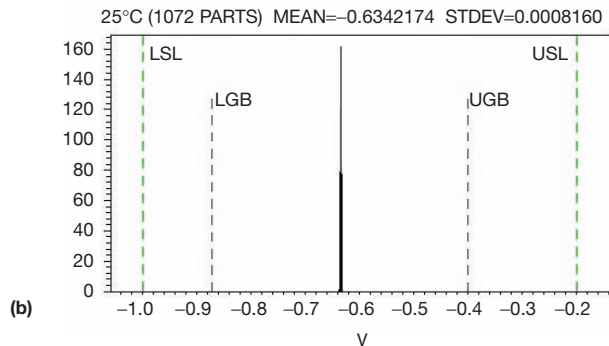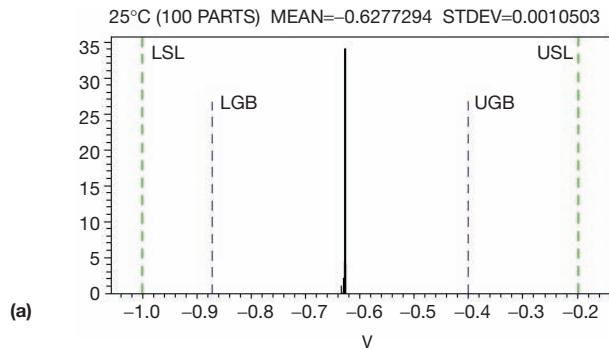

100 to 10,000
VDC Outputs DC-DC CONVERTERS

4 Watt to 10 Watt Series
Surface Mount & Plug In
Over 250 Standard Models!

Isolated Outputs/
Proportional V in and V out
Miniature fully encapsulated modules
for operation in rugged environment

Military options available

Expanded operating temperature
-55° to +85° C Ambient

Military Standard 883 Selected
testing available

Will review all Customer Specifications
for custom design specifications

Over 2,500 standard high and
low voltage DC-DC converters and
AC-DC power supplies

Industrial/Cots/Military
Isolated/Regulated/Proportional/
Programmable

Also Thousands of Hi reliability,
Ultra Miniature Transformers
and Inductors

US Manufactured
since 1969



See PICO's full line catalog at
www.picoelectronics.com

800-431-1064

PICO ELECTRONICS, Inc.

143 Sparks Ave., Pelham, New York 10803
Call Toll Free 800-431-1064 • FAX 914-738-8225
E Mail: info@picoelectronics.com

MORE ON GUARD BANDS

In general, test engineering uses two kinds of guard banding: one for repeatability and one for temperature. There are both pros and cons to their use.

Engineers turn to repeatability guard bands to deal with the uncertainty of each measurement. The following example looks at drive current:

Segment drive source current:

37 mA (min), 47 mA (max)

LGB limit = lower spec limit + ϵ
 \Rightarrow 37.37 mA

UGB limit = upper spec limit - ϵ
 \Rightarrow 46.53 mA

Here, LGB is the lower guard band, UGB is the upper guard band, and ϵ is the uncertainty of the measurement.

The disadvantage of using repeatabil-

ity guard bands is that a good device can be rejected as a bad device because of the uncertainty that the example demonstrates. The ideal case would be to use a guard-band limit of zero so that no good parts would be rejected. To reduce the impact of the guard band, you can improve the stability if the resulting measurement is a smaller repeatability guard band. The disadvantage would be a much longer test time due to device-settling time, an inherent issue with analog and mixed-signal ICs.

Every device, meanwhile, has a specified drift over temperature, which may be a typical or a guaranteed minimum/maximum specification. Temperature guard bands have tighter test limits than the IC's data-sheet specifications and

need to be calculated based on the drift of the measurement over temperature. The advantage of using temperature guard bands is that you can skip test stages at other temperatures and instead calculate, based on the test results seen at room temperature, whether a device would fail at temperature extremes.

Figure 2 shows a temperature-characterization report with guard bands included. The plots demonstrate that there is drift over temperature. From this data, you must be able to predict that when testing production parts at +25°C, the drift at the temperature extremes will be within specification limits. That is the point of temperature guard bands for production testing.

Silver samples are often used to show the stability of the test solution over temperature. They also can be stored for use as reference parts for later verification of the test solution. The testing procedure for these devices is to test three parts at three temperatures, hundreds of times each.

Using the gathered data, you can prove the stability of every device with the help of a statistical report tool. For example, a double distribution or instability can be seen immediately. You can keep the test results for later reference, comparing future measurements with the stored data.

Assume the device to be tested has the following operating conditions: a minimum operating temperature of -40°C, a typical operating temperature of +25°C, and a maximum operating temperature of +125°C. The black bar in the graph in Figure 3 is the value at room temperature. The green bar shows the value at high temperature (+125°C); the blue bar shows the value at cold temperature (-40°C). The data clearly shows an increase and decrease of the value at high and low temperatures, respectively.

GR&R FOR PLASTIC PARTS

In addition to testing at the wafer level, engineers must test packaged parts to determine that no damage has occurred during the packaging process. To verify the repeatability and reproducibility on different testers, test a minimum of 50 plastic packaged parts on one tester twice in the same order, then repeat the procedure on another tester and compare the test results obtained using


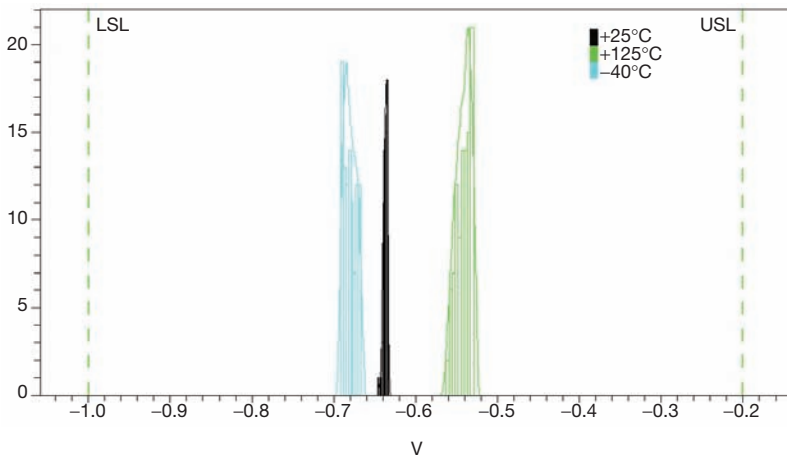


Figure 3 This silver-sample report shows the drift between temperatures. The data clearly shows an increase and decrease of the value at high and low temperatures, respectively.

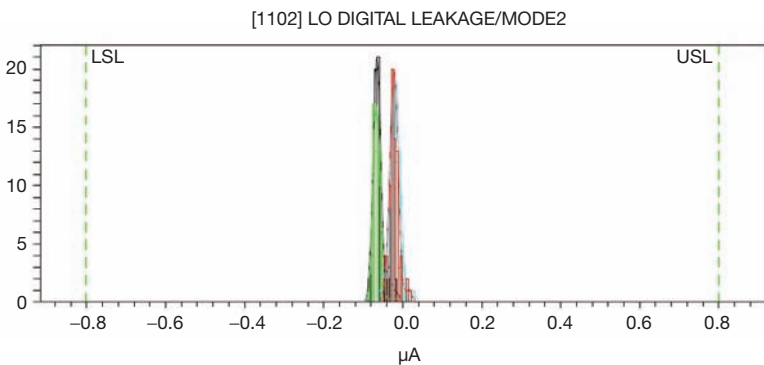

MIN CPK: 24.074525 REPR(%): 10.130866 REPT(%): 3.1776772 GR&R(%): 10.617536

Figure 4 This tester-to-tester comparison shows a drift between the testers for which the root cause must be determined.

LIKE THIS?

For more articles like this one, go to www.edn.com/design/test-and-measurement.



the different testers. An optimal result would be a 100% overlay of both sets of data. If you discover that the results are not closely matched, you must find the root cause for the discrepancy.

The tester-to-tester comparison in **Figure 4** shows a shift between two testers of the same type. The test results are not entirely consistent, and the results between testers need to be very close. The difference is usually traceable to something simple, such as the range of the instrument used. Though the two testers used for this example are the same type, the GR&R process can be used for tester transfers; that is, between two different tester types.

GR&R FOR WAFER SORT

An alternative to testing GR&R is to implement a bin-flip wafer technique (**Figure 5**). Rather than test plastic parts, the technique tests a complete wafer on tester 1 and then on tester 2. The bin results—that is, bin 1 to bin 7—should not exceed a predefined limit. If the measurement result is not repeatable on the other tester, review the failing tests to determine the problem.

BOARD VERSUS BOARD

To ensure multiple test boards have the same electrical characteristics, a measurement-system-analysis (MSA) report must be generated. The goal of this report is to verify that two or more load boards show the same electrical behavior. The example test flow described below assumes that two load boards are required to be released at the same time.

Fifty parts are tested in order, twice on one board and then twice on the other board. It is important to test the devices in the same order so that the same device test results are compared. In **Figure 6**, an offset between the boards can be seen. **Figure 6a** shows a histogram of the measurement results; **Figure 6b** shows the measurements in sequence. You can see that 50 parts were tested four times on two boards; the two distributions represent the boards. In this example, the trend line has a small offset to the left,

[www.edn.com]

Click Here for a World of Wi-Fi® and Bluetooth® Connectivity Options Made Possible in a Form Factor the Size of a Dime

NEW!
Bluetooth v4.0
Low Energy
BLE

<http://www.rfm.com/>


Wi-Fi® and Wi-Fi® + Bluetooth® Combination Radio Modules from RFM Deliver High RF Performance AND Small Form Factor ... and We Mean *Really Small*

WLS1270
2.4 GHz
802.11b/g/n




Wi-Fi Compliant Only

WLS1271L
2.4 GHz
802.11b/g/n

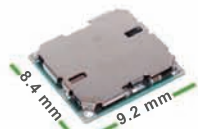

Wi-Fi and Bluetooth Compliant

WLS1273L
2.4 GHz & 5.8 GHz
802.11a/b/g/n

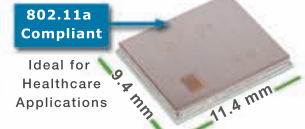

Quickly Add Standards-Based Connectivity Into Products

Best-in-class WLAN and Bluetooth co-existence technology on a single-chip
High-efficiency front-end circuits plus DC-DC converter
Minimal external circuitry required to complete a radio design
Linux, Android and WinCE drivers are available for selected TI and Freescale processors



Easily Fits Into Small Spaces: Smaller Than a Dime Yet Features High Level of Integration

Embedded ARM microprocessor
Supports SDIO host interfaces for WLAN



Efficiently Obtain Wi-Fi, Bluetooth, and FCC / ETSI Certification

WLAN: All three modules comply with IEEE 802.11b/g/n; WLS1273L complies with 802.11a/b/g/n
Bluetooth: WLS1271L & WLS1273L modules comply with Bluetooth v4.0 + EDR, Power Class 1.5 + BLE
FCC/ETSI: Like all RFM Short-Range Radios the WLS-Series modules are FCC and / or ETSI certifiable

Just how **small** are we talking?

WLS1273L Module Installed on DR-WLS1273L-EV Evaluation Board

WLS1273L Combo Module
Smaller than a Dime



Evaluation Kit Part Numbers

DR-WLS1270-EV DR-WLS1271L-EV DR-WLS1273L-EV

Buy Your Evaluation Kit Today!

Available from RFM Distributors

Avnet Memec
Digi-Key


Future Electronics
Mouser Electronics



Wireless is **RFM**
www.rfm.com

RFM is a subsidiary of Murata Electronics North America, Inc.

Figure 5 A report for a bin-flip wafer test compares results from two testers. Several designations and a color code on the wafer map indicate pass/fail results: Pass Pass (the site passed on tester 1 and tester 2); Fail Fail (the site failed on both testers); Pass Fail Flip (the site failed on tester 2); Fail Pass Flip (the site failed on tester 1); and Fail Flip (the site failed another test on tester 2).

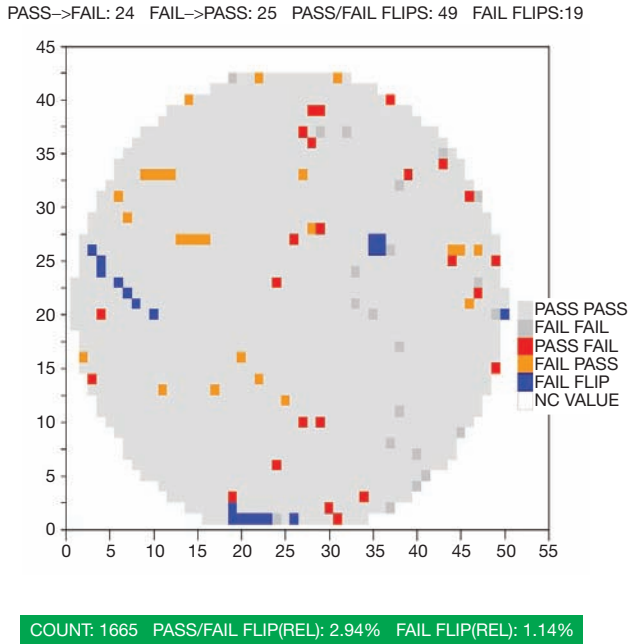

JOIN THE CONVERSATION
 To comment on this article, go to www.edn.com/4406714.

which indicates a difference between devices 1 to 39 and devices 40 to 50.

BOARD ID

Board identification ensures that the board being tested is the correct load board. Implement a board ID by writing a unique ID to the EEPROM on the load board. An error will then be indicated if the wrong board is selected for the production interface. Since each board has a unique ID, every test performed with it can be traced. In a worst-case situation, production lots can be recalled if tested with a defective board. To improve the measurement correlation between ATE and bench testing, offset calibration factors can be used and loaded automatically, depending on the board used.

QUALITY SCREENING

After all the required data is collected, a quality-assurance (QA) screening procedure can commence. One thousand good parts (minimum) have to be tested with the guard-banded limits. At completion of testing, all parts have to be tested at the QA temperatures with the specification limits. No failures are allowed at this point. If failures appear, it's necessary to reverify the guard bands and test-program stability.

Verifying that all the data results match and that no irregularities were found during the release phase of a test program minimizes the possibility of problems at a later stage. A stable and verified test solution can also help you avert product-yield problems and QA failures down the road.**EDN**

REFERENCE

1 Burns, Mark, and Gordon W Roberts, *An Introduction to Mixed-Signal IC Test and Measurement*, 2001, Oxford University Press.

AUTHOR'S BIOGRAPHY

Robert Seitz is a test development engineer in the Full Service Foundry business unit at AMS (formerly austriamicrosystems). He has worked in various areas of automated test engineering for seven years at the company.

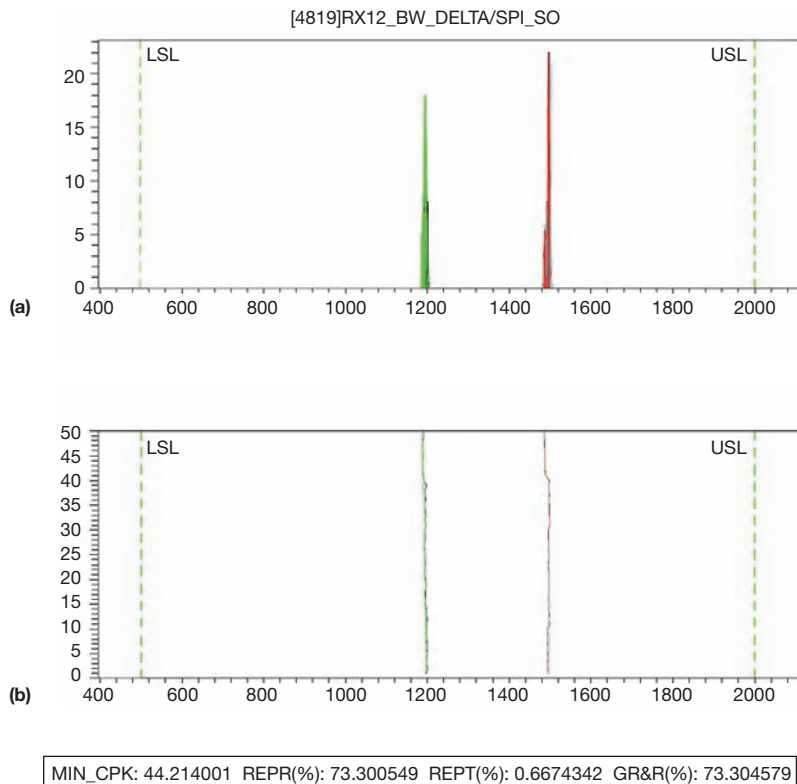


Figure 6 Board-to-board comparison data indicates a difference between devices 1 to 39 and 40 to 50. Shown are a histogram of the measurement results (a) and measurements in sequence (b).

Integration Nation

*Demand more
from analog*


Understand how analog integration technologies and techniques are evolving to meet new system design challenges. Integration Nation helps you interact with other engineers in the space as well as explore technologies for future systems that are smarter and more connected.

**Find Integration Nation on PlanetAnalog.com
at PlanetAnalog.com/IntegrationNation**

SPREAD SPECTRUM

SAFE HAVEN FOR

WIRELESS

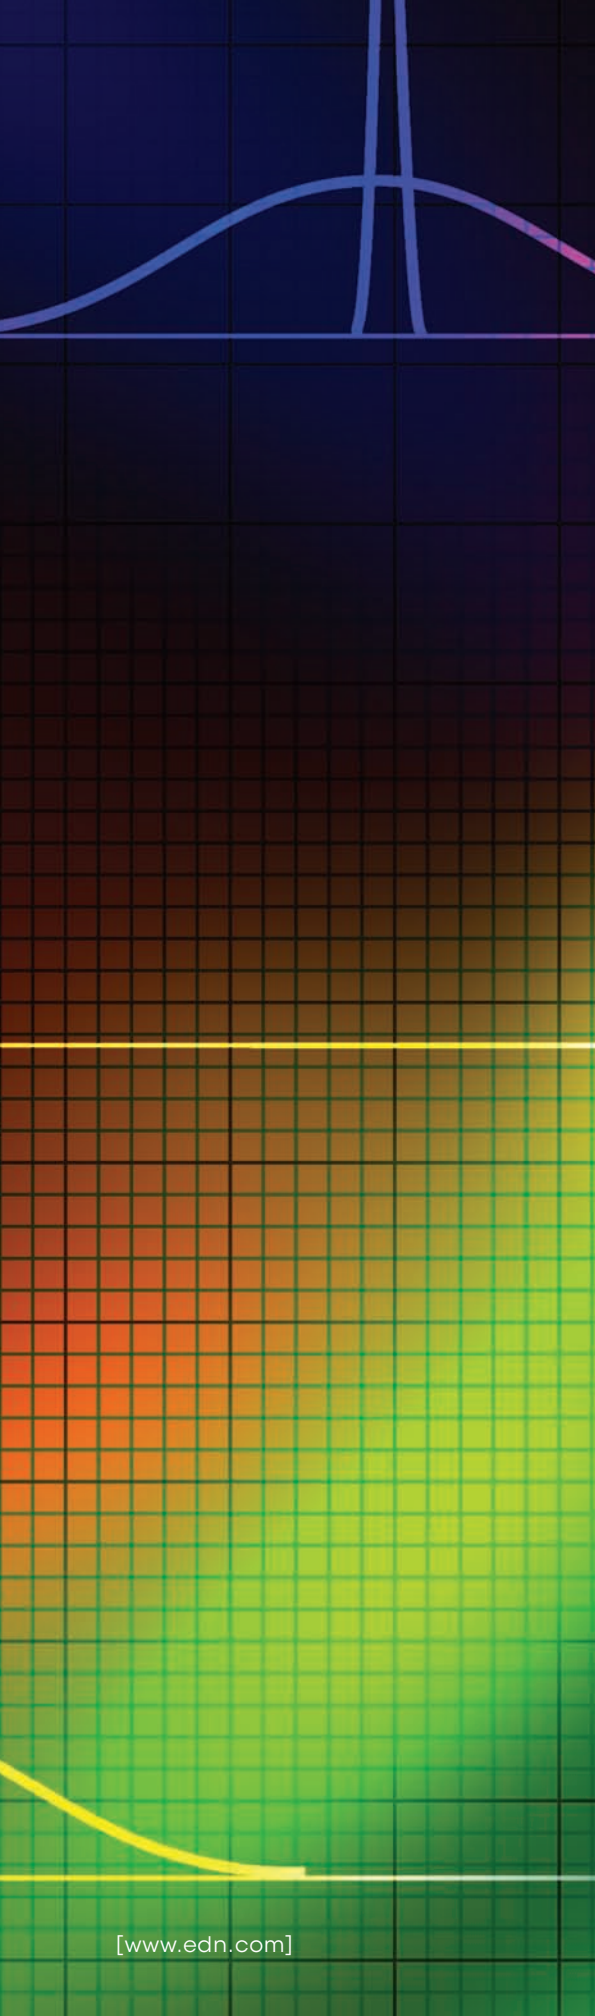

SPECTRUM SPREADING
APPEARS TO “WASTE”
BANDWIDTH, BUT IT INCREASES
CHANNEL CAPACITY, GUARDS
DATA SECURITY, AND OFFERS
IMMUNITY TO SIGNAL
JAMMING AND FADING.

BY RAHUL GARG AND PRAKHAR GOYAL •
CYPRESS SEMICONDUCTOR CORP

Wireless communications began to blossom in 1915, with the first wireless voice transmission across the continental United States, and quickly took off from there, with the first commercial radio broadcast in 1920, the first use of police-car dispatch radios in 1921, and the first phone call placed around the world in 1935. Commercial adoption of wireless technology spurred a global radio boom, but the early lack of restrictions on frequency-band usage resulted in noisy channels and unmanageable radio traffic.

The negative impact on communications quality led to the licensing of bands to regulate traffic. Even with legislation, however, further technological enhancements were required to suppress interference.

Moreover, licensing could not be implemented for every band, because reuse of a frequency band is also important for short-range applications. When a channel is used for communication inside a building, for example, its use in a physically distinct location should not be prohibited; such a restriction would result in spectrum underutilization, because such systems will never interfere with one another. Because any number of users could use a license-free band, however, enhancements mitigating interference were even more critical.

IMAGE: GIULIA FINI

Spread-spectrum techniques have been among those enhancements. The concept emerged in the early 1940s and found popularity in the 1980s as the military embraced its use for data security and intrinsic immunity to signal jamming.

Spread spectrum is a means of transmission in which the signal occupies a bandwidth in excess of the minimum bandwidth necessary to send information. Using spread-spectrum techniques, information contained in a narrow band of frequencies (f_m) is translated, or spread, to a wider band (f_s) before transmission (Figure 1). This translation does not significantly increase the total power required, because the duration of the transmission remains the same; only the frequency changes.

The methods used to achieve spectrum spreading are frequency-hopping spread spectrum (FHSS) and direct-sequence spread spectrum (DSSS). Many wireless communication protocols, such as Bluetooth, use spread-spectrum techniques at the physical-layer level.

WHY SPREAD SPECTRUM?

Though spectrum spreading might appear to “waste” bandwidth, it actually increases the capacity of the channel. The Shannon-Hartley theorem (Equation 1) shows the relationship between channel capacity and channel bandwidth:

$$C = B \times \log_2 \left(1 + \frac{S}{N} \right) \quad (1)$$

In the equation, C is the channel capacity, or the maximum number of users that can access the channel simultaneously; B is the channel bandwidth; and S/N is the signal-to-noise ratio.

It is reasonable to assume that the channel-capacity-to-bandwidth ratio in Equation 1 is directly proportional to the required signal-to-noise ratio of the system (Equation 2):

$$\frac{C}{B} \propto \frac{S}{N} \quad (2)$$

The relationship, however, is not linear.

For a system with a fixed signal-to-noise-ratio requirement, the only way to increase channel capacity is to increase channel bandwidth. Hence, increasing the number of potential users compensates for the waste of bandwidth. Other

AT A GLANCE

- Frequency-hopping spread spectrum involves changing the transmission frequency from one subchannel to another. It offers immunity to near-far problems.
- Direct-sequence spread spectrum multiplies each bit of a message signal with a sequence of bits before transmission. The resultant signal is spread over a wider frequency range.
- PN codes in DSSS and the hopping sequence in FHSS both guard against eavesdropping, though a sequence must meet more stringent requirements to qualify as a DSSS PN code.
- The choice of PN codes is critical for the performance of a DSSS system and must exhibit high processing gain, minimal autocorrelation, and minimal cross-correlation.
- Every asynchronous digital communication requires the receiver to synchronize itself with the transmitter. Spread-spectrum systems must synchronize the PN code for DSSS and the frequency-hopping pattern for FHSS.

accessing that channel. If communication occurs in the channel, the entire message signal will be lost. With spread spectrum, only a small part of the signal is blocked.

- **Immunity to fading.** In wireless systems, it is least likely that the transmitted signal will traverse the same path every time. It may face multiple reflections (or refractions) before actually reaching the receiver.

Those reflections create multiple wave fronts that interfere with one another constructively or destructively. The interference causes distortions or signal-strength reduction (fading) in the received signal. If the fading is significant enough to lower the received-signal-strength (RSS) levels below the minimum required threshold, the receiver cannot successfully decode the signal.

Because fading depends on the physical surroundings of the system, it is modeled as a random phenomenon. Fading, however, has been observed to have dominant effects only for particular frequencies. Hence, spread spectrum offers a measure of immunity because fading will have an effect only on small portions of the signal.

HOW FHSS WORKS

The frequency-hopping spread-spectrum approach changes the transmission frequency from one subchannel to another at regular intervals (Figure 2). A time-averaged view of FHSS requires a much higher bandwidth, even though the instantaneous bandwidth is the same as that of the original message signal.

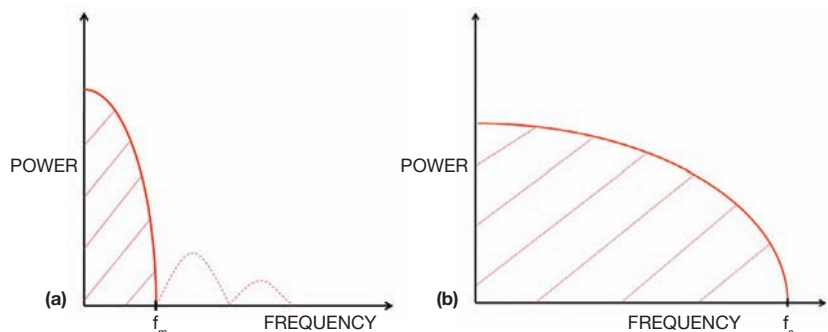


Figure 1 Using spread-spectrum techniques, information contained in a narrow band of frequencies (f_m) (a) is translated, or spread, to a wider band (f_s) before transmission (b).

Your question: What's important about differential probes?

Our answer: High signal fidelity and smart features.

With an input resistance of 1 M Ω and an input capacitance of 0.6 pF, the R&S®RT-ZD probes put a minimum load on a signal source's operating point. The micro button at the probe tip for instrument control and the R&S®ProbeMeter for differential and common mode DC measurements offer new capabilities. Extensive standard accessories provide high flexibility for test point contacting.

See for yourself

www.scope-of-the-art.com/ad/faq-dp

**Warranty program
available until June 2013:**

Register your new scope and get a
five year warranty instead of three!
www.scope-of-the-art.com/ad/warranty.




Hopping among subchannels occurs in a predetermined sequence; thus, each receiver must know the hopping sequence used by the corresponding transmitter in order to remain synchronized. The sequence safeguards against eavesdropping because a receiver cannot successfully decode the message signal without knowing the hopping sequence.

FHSS offers immunity to “near-far problems,” or the interference that results when active transmitters are located in proximity to the target receiver. In the absence of FHSS, closely placed foreign transmitters generate a high power level that appears as very high-level noise to a receiver and can blind the receiver if it is communicating in that channel, blocking the communication. With FHSS, the reception bandwidth is bigger; thus, in a worst-case scenario, only some of the hops are blocked, forcing the system to work in less-than-optimum conditions.

HOW DSSS WORKS

Direct-sequence spread spectrum mul-

Figure 2 FHSS changes the transmission frequency from one subchannel to another at regular intervals.

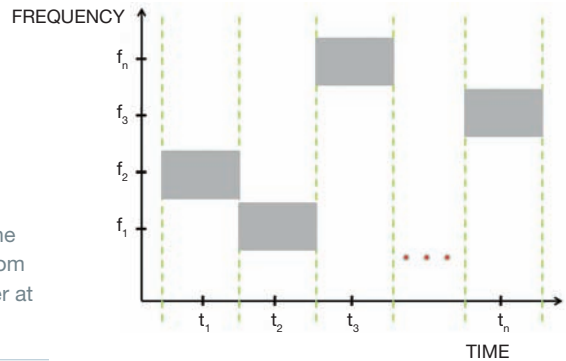

tiplies each bit of a message signal with a sequence of bits before transmission. The resultant signal is spread over a wider frequency range because the chip sequence, also called the pseudo-noise (PN) code, contains multiple-frequency components. The multiplication used here is a logical XOR operation that splits each bit into k number of chips, where k is the length of the PN code (Figure 3).

Because the PN code adds a redundant bit pattern for each bit transmitted, spreading has a direct impact on

the effective data rate of the system. For a physical signaling rate of R_p , the effective data rate, R_E , will be given as expressed in Equation 3:

$$R_E = R_p \div n \quad (3)$$

An increase in the signal’s resistance to interference compensates for the reduced data rate. If one or more bits in the pattern are damaged during transmission, the original data can be recovered by processing the redundant bits with a suitable error-correcting method.


Circuits EMC Layout Noise SSO Jitter Ringing RLGC Probes Thermal Power Crosstalk Stripline Grounding Routing



Signal Integrity — Dr. Howard Johnson

The last year of

extraordinary **Black Magic seminars...**

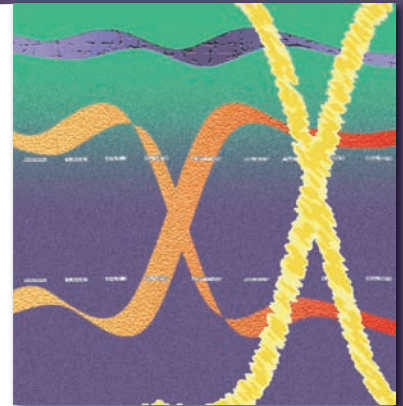

Longmont, CO

sponsored by Xilinx

5-6 Mar

7-8 Mar

11-12 Mar

High-Speed Digital Design

Adv. High-Speed Signal Propagation

High-Speed Noise and Grounding

Univ. Oxford, U.K.

17-18 Jun

20-21 Jun

24-25 Jun

High-Speed Digital Design

Adv. High-Speed Signal Propagation

High-Speed Noise and Grounding

www.sigcon.com

For serious digital designers.

Use Promo code: EDN13

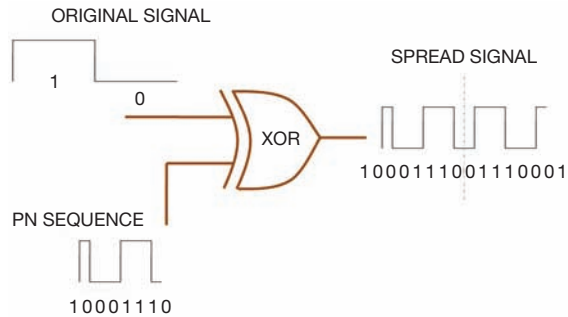


Figure 3 The multiplication used here is a logical XOR operation that splits each bit into k number of chips, where k is the length of the PN code.

Using PN codes, DSSS receivers “tune in” to the corresponding transmitter, tuning out other signals as noise. Because of this selective attention, the signal’s resistance to interference increases, and the minimum required signal-to-noise ratio decreases.

Whereas FHSS concentrates the transmitted energy in one subband at a particular time, the energy distribution in DSSS is uniform. DSSS systems transmit over a group of frequencies simultaneously; hence, the range of operation is over wider bands. That

uniformity makes the near-far problem more critical for DSSS.

PN codes in DSSS provide security against eavesdroppers, similar to the hopping sequence in FHSS, though in DSSS a sequence must meet more stringent requirements to qualify as a PN code.

DSSS-based systems use a PN-code sequence at the transmitter to spread the narrowband, information-bearing signal into a wideband signal. During transmission, various types of noise and interference affect bandwidth.

For proper communication, the corresponding receiver must recover only the desired coded information, rejecting all other signals. Thus, every receiver uses a correlator—a special type of matched filter that responds only to signals encoded with a specific PN code (**Figure 4**). The DSSS receiver shown in the **figure** explains concepts related to PN codes.

ERROR CORRECTION

To understand the role of PN codes in error correction, consider a situation

High Speed / Low Cost Development, Test & Burn-In Sockets

Compression, SMT, & Thru-Hole PCB Mounting

Lead pitches as low as 0.4mm, up to 125,000 insertions.



Quick
On/Off Lid



Easy Screw - Lid
removed to show detail.



Easy Knob
configuration

Multi-Cavity Sockets


Significantly reduce your socket & labor costs with these multiple IC test and burn-in solutions.



Custom Test Fixtures

Fully automated or manually operated solutions to test any lead pitch & IC package

Quick Turn
Low NRE

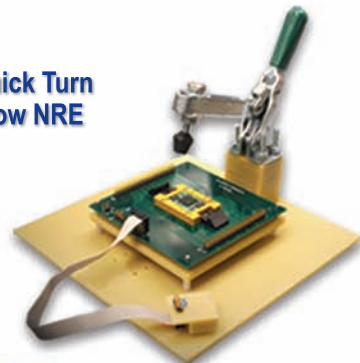

**EMULATION
TECHNOLOGY, INC**

1-800-232-7837 www.emulation.com

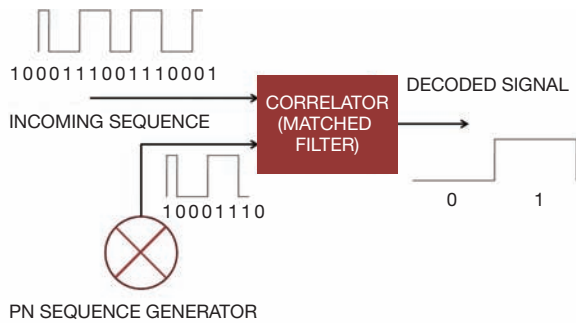


Figure 4 This DSSS receiver is a functional representation meant to explain concepts related to PN codes.

in which the incoming sequence and the PN code differ by just one chip. Because the degree of mismatch is low, the correlator output will not be at its peak, but neither will it be at its lowest value. Applying an appropriate threshold limit on the correlator output will allow a receiver to get a rough measure of the degree of mismatch. Based on that measurement, the receiver can make an intelligent decision about whether the incoming sequence corresponds to the desired PN code. PN codes thus provide error correction against corruption of chips.

PN-CODE CHARACTERISTICS

The choice of PN codes is critical for the performance of a DSSS system. PN codes must have certain desired characteristics, including high processing gain, minimal autocorrelation, and minimal cross-correlation.

High processing gain. Processing gain (G_p) is a theoretical system gain that reflects the relative advantage of frequency spreading in terms of channel capacity and immunity against interference. Expressed mathematically in **Equation 4**, it is the ratio of the chipping frequency (f_c) to the input-signal frequency (f_i):

$$G_p = \frac{f_c}{f_i} \quad (4)$$

Thus, if a 10-kHz signal is spread over a band of 100 kHz, the corresponding processing gain is 10.

In general, PN codes should add a high processing gain to the system, for two reasons. The first is noise immunity: A higher processing gain implies that the input signal is spread over a larger band that requires the use of lon-

ger PN codes. Such systems are more tolerant to noise. The second reason is system capacity. The Shannon-Hartley theorem (**Equation 1**) holds that channel capacity is directly proportional to the channel bandwidth. Systems with higher processing gain have higher capacity because such systems need a higher bandwidth for transmission.

Minimal autocorrelation. Autocorrelation is the degree of similarity of a signal to its time-shifted version. **Equation 5** represents this concept mathematically:

$$R_{\text{AUTO}}(\tau) = \sum_{n=0}^{N-1} \text{PN}(n) \times \text{PN}(n+\tau), \quad (5)$$

where $\text{PN}(n)$ is the pseudo-noise sequence, R_{AUTO} is the autocorrelation of the sequence $\text{PN}(n)$, n is the length

Otherwise, there is a high probability that the receiver will be inappropriately phase locked to the incoming sequence. Autocorrelation should be minimal for the slightest mismatch of the two waveforms.

Minimal autocorrelation also provides enhanced immunity against multipath interference. Once the receiver is phase locked to the incoming signal, it will not actively respond to time-shifted versions of the incoming sequence.

Minimal cross-correlation. Cross-correlation is similar to autocorrelation but measures the degree of similarity between two independent signals, as is expressed mathematically in **Equation 6**:

$$R_{\text{CROSS}}(\tau) = \sum_{n=0}^{N-1} \text{PN}_i(n) \times \text{PN}_j(n+\tau), \quad (6)$$

where $\text{PN}_i(n)$ is a pseudo-noise sequence; $\text{PN}_j(n)$ is another pseudo-noise sequence, completely independent of $\text{PN}_i(n)$; R_{CROSS} is the cross-correlation of the sequences $\text{PN}_i(n)$ and $\text{PN}_j(n)$; n is the length of the PN code; and τ is the delay factor.

Cross-correlation is also called the sliding-dot product. If the cross-correlation between two PN sequences is high, the receiver will not distinguish between the signals encoded over them, because the correlator might have sufficiently high output for both the signals.

THE INCOMING SIGNAL SHOULD BE PHASE SYNCHRONIZED WITH THE PN CODE. THE RECEIVER MAINTAINS SYNCHRONIZATION BASED ON CORRELATOR OUTPUT.

of the PN code, and τ is the delay factor by which $\text{PN}(n)$ is shifted.

Time shifting of the signal is not linear; autocorrelation is calculated by shifting it circularly. The autocorrelation is a function of the delay (τ).

For correct decoding, the incoming signal should be phase synchronized with the PN code. The receiver maintains synchronization based on correlator output. Autocorrelation should have a large peaked maximum (**Figure 5**) for perfect synchronization; that is, $\tau=0, N, 2N$, and so on.

Here, the receiver might lose “selective attention” capability, resulting in the dominance of interference effects. To minimize the interference from other DSSS sources, different PN codes ideally should be orthogonal; that is, they should exhibit zero cross-correlation.

Because no PN codes are truly orthogonal, choosing the lowest possible cross-correlation mitigates effects.

SELECTING A PN CODE

In general, it is better to have PN codes that provide a high processing gain, but

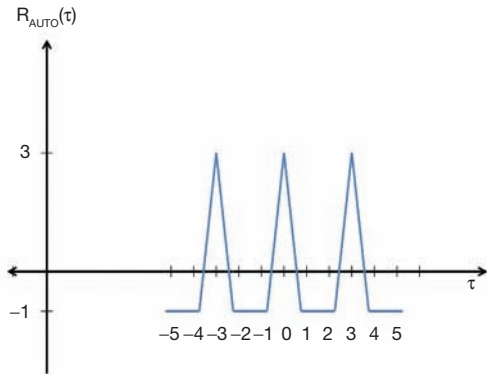


Figure 5 Autocorrelation should have a large peaked maximum for perfect synchronization only; otherwise, there is a high probability that the receiver will be inappropriately phase locked to the incoming sequence.

a higher gain requires a larger bandwidth. Another drawback of higher gain is that it typically needs long PN codes, which directly affect the effective data rate of the system. It is also relatively difficult to qualify a long sequence as a PN code because of the higher

processing overhead associated with evaluating these characteristics. Due to these factors, selecting an appropriate PN code is a tedious task.

To simplify the process, some standard codes—Gold codes, m-sequences, and Walsh codes, for example—are chosen as a candidate for PN codes. These codes are known to have desirable characteristics; for example, m-sequences have low autocorrelation, while Gold codes exhibit low cross-correlation properties.

A typical approach for selecting PN codes is to choose some sequences from these standard codes and rate them separately on all of the desired characteristics (usually autocorrelation and cross-correlation only). These sequences can be ranked, based on the assigned ratings and application requirements. The ranks can then be used for deciding

whether the corresponding sequence is fit to be a PN code.

LIKE THIS? 

For more articles like this one, go to www.edn.com/design/communications-networking.

whether the corresponding sequence is fit to be a PN code.

Once an appropriate spreading method and spreading sequence are chosen, the next critical step is to establish synchronization between a transmitter and the corresponding receiver. Every asynchronous digital communication requires the receiver to employ a mechanism to synchronize itself with the transmitter; otherwise, it would be impossible for the receiver to decode the incoming signal. Because they are asynchronous in nature, spread-spectrum systems must synchronize the PN code for DSSS and the frequency-hopping pattern for FHSS.

Synchronization is established in two phases: acquisition and tracking. In the acquisition phase, the receiver



SERIOUS PERFORMANCE FOR SERIOUS CHALLENGES

Sealevel's COM Express solutions offer the advantage of custom solutions with the convenience of COTS. Built for harsh, mission critical environments, our COM Express solutions allow you to choose the module and I/O required for your application. No matter what the conditions demand, we'll build a rugged, reliable, complete COM Express system that can handle your most serious challenges.



Learn more about the all-in-one COM Express solutions by visiting www.sealevel.com/edn023/com or by scanning the QR code to the left.

SEALEVEL[®]

www.sealevel.com • 864.843.4343 • sales@sealevel.com

detects whether the incoming signal is from the desired source. In the tracking phase, the receiver performs fine synchronization and tracks the incoming signal in terms of phase, frequency, or both, using a locking mechanism.

SYNCHRONIZATION IN DSSS

With DSSS, if the correlator output

is less than a minimum threshold, it will discard the incoming sequence as background noise. Because the auto-correlation of a PN code is minimal, the correlator output is very low—ideally, zero—if the incoming sequence and the locally generated PN code are not phase synchronized. Without explicit measures for synchronization,

the receiver could not decode the incoming signal reliably.

Because the PN code achieves signal spreading in DSSS, the carrier frequency of the transmitter remains the same, and there is no need for frequency synchronization between the transmitter and the receiver.

ACQUISITION IN DSSS

Correlation between the incoming sequence and the locally generated one has a peaked maximum for perfect synchronization. Using “serial” or “parallel” search, the receiver searches for a phase in which the correlation exceeds a predefined threshold.

In serial search, a monitoring circuit keeps check on correlator output. If the output fails to reach a threshold value, then the search-control block shifts the phase of the generated PN code (Figure 6). This process repeats until the correlator output reaches the threshold value, completing acquisition. The configuration forms a feedback loop, referred to as a sliding correlator.

One potential drawback to serial search is that acquisition times are high. Hence, some designs use a parallel approach.

A parallel-search strategy is essentially the same as serial search, but it shortens the acquisition time because it carries out multiple phase comparisons simultaneously, albeit at a trade-off of increased hardware-resource requirements and complexity. The acquisition time is the lowest with a parallel strategy when the number of correlators equals the number of chips in the PN code.

The acquisition process achieves only a coarse synchronization. The degree of synchronization achieved at the end of this phase is within $\pm T_c/2$, where T_c is the chip duration.

TRACKING IN DSSS

Once acquisition is complete, the receiver starts tracking the phase of the incoming sequence to achieve finer synchronization. A delay-locked loop (DLL) is commonly used (Figure 7). The DLL generates three phases, or versions, of the PN code—the delayed, advanced, and precise phases—and continuously compares the output of the correlator using the delayed PN code and the output using the advanced PN code. This comparison provides a

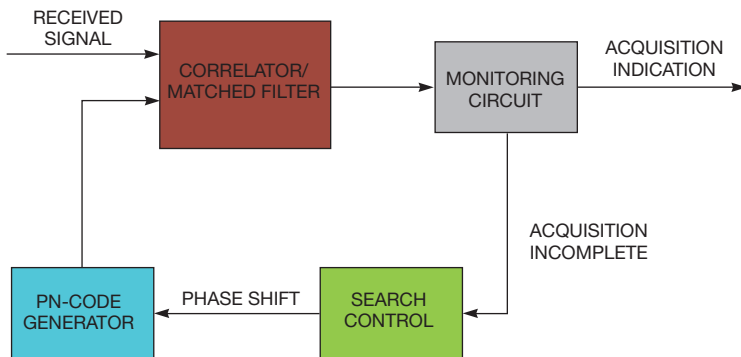


Figure 6 In serial search, a monitoring circuit keeps check on the correlator output. If the output fails to reach a threshold value, the search-control block shifts the phase of the generated PN code.

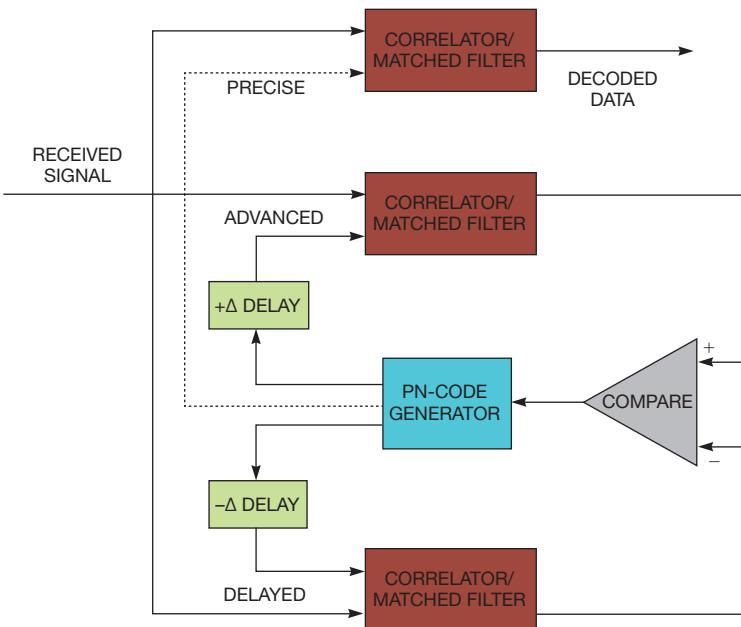


Figure 7 Given that dynamic adjustment is a continuous process, the precisely phased PN code remains precise throughout the reception process. It is this precise version of the PN code that is used for the actual despreading of the received signal.

measure of the direction of phase drift in the incoming signal; using this metric, the phase of the precise version of the PN code is dynamically adjusted.

The precisely phased PN code remains accurate throughout the reception process. It is this version of the PN code that is used for the actual spreading of the received signal (Figure 7).

SYNCHRONIZATION IN FHSS

With FHSS, because the transmitter keeps changing the center frequency, the receiver and the corresponding transmitter should be in the same frequency channel. Another important requirement is that both transmitter and receiver should spend the same amount of time in a particular channel; otherwise, the receiver might hop to another channel prematurely and lose synchronization with the transmitter.

ACQUISITION IN FHSS

Acquisition in frequency-hopping systems refers to frequency synchronization; its purpose is to put the receiver and transmitter on the same frequency channel. The simplest approach is a dedicated acquisition channel wherein the transmitter and the receiver must initiate communication on the dedicated channel only and wait until acquisition is complete. If the dedicated channel is jammed because of noise, communication will not occur.

Another approach is to start hopping at power-on. The transmitter's hopping rate should be faster than that of the receiver to ensure that the devices end up on the same channel.

TRACKING IN FHSS

After acquisition, the receiver should be able to track the transmitter. Both the transmitter and the receiver should stay in a channel for the same duration and hop to the same new channel once that period is over. Timing synchronization is easier to implement in FHSS than in DSSS because the hopping rate is fixed for both devices. To determine the next channel, the devices have a preloaded lookup table containing available channel numbers.

SYSTEM PERFORMANCE

The synchronization process needs a certain amount of delay for both DSSS and FHSS. Hence, most protocols

have an additional header for the sync pulses to ensure that the receiver and the transmitter are synchronized before packets with meaningful information are transmitted. **EDN**

AUTHORS' BIOGRAPHIES

Rahul Garg is an applications engineer with Cypress Semiconductor. He holds a bachelor's degree in electronics and telecommunications from Bharati Vidyapeeth's College of Engineering (New Delhi, India). He can be reached at rahu@cypress.com.

JOIN THE CONVERSATION
To comment on this article, go to www.edn.com/4402409.

Prakhar Goyal is a product-marketing engineer with Cypress Semiconductor. He holds a bachelor's degree in electrical and electronics engineering from Birla Institute of Technology and Science (Pilani, India). He can be reached at prkr@cypress.com.

FPGA Network Data Processing

PCIe-385N

PCIe-287N

- Latest generation of flexible FPGA systems
- Open, easy-to-use development architecture
- Full line rate data filtering and capture
- Ultra low latency connections
- Multiple network standards

Nallatech
An Interconnect Systems, Inc. Subsidiary

www.nallatech.com • info@nallatech.com
North American office: +1 (805) 383-8997
European office: +44 (0) 1236 789500

Forgotten circuits (that should be brought back)

WHAT MAKES A LEGACY IC? HERE WE TAKE A LOOK AT SOME ORIGINAL PARTS AND DISCUSS WHY IT MIGHT BE A GOOD IDEA TO REVISIT THEIR USE.

As electronics technology matures, it shows some signs of aging. As innovation wanes, breakthroughs grow farther apart in time, and risk-taking decreases. In earlier decades, some IC companies were willing to put on the market a few unusual and conceptually original parts. Signetics, for example, dared in the early 1970s to produce a novel IC—Hans Camenzind’s 555 timer—and it has become a premier legacy IC.

What about other circuits? This article recounts a few of these parts and why it might be good to bring them back.

AD639 SINE CONVERTER

Long ago, Barrie Gilbert did some investigative work on the two-bipolar-junction-transistor (BJT) differential-amplifier circuit, which has a hyperbolic tangent, tanh, transfer function:

$$i_o = i_{o+} - i_{o-} = I_0 \times \tanh\left(\frac{V_I}{2 \times V_T}\right),$$

where I_0 is the emitter source current and the thermal voltage, V_T , is 26 mV. To reduce nonlinearity, external emitter resistance, R_E , is placed in series with the emitter in amplifiers. Gilbert, however, applied the engineering adage that “if you can’t fix it, feature it” and put it to good use.

Hyperbolic tangents are vaguely related to trigonometric functions, and Alan Grebene at Exar used a single diff amp in the XR2206 function-generator (FG) IC to convert a triangle wave into a sine wave. The result was somewhat acceptable for a first-generation effort, though Gilbert carried out more refinement of the basic idea. He developed the multi-tanh concept of adding the outputs of diff amps that had inputs offset from each other by a fixed voltage. This approach extended the function (and input range) and also led to other novelties, including the one that is used in the AD639 sine converter.

This IC is a trigonometric wonderland in 16 pins, and because its


functional capability is so powerful, it was destined to become a legacy IC. Alas, ADI pulled the AD639 from the market without a replacement. I do not know why. Even Gilbert did not know why. It seemed like a part destined to become a legend. It can synthesize all of the basic trigonometric functions (sin, cos, tan sec, csc, cot) and their inverses.

The sine function is accurate to 0.02%, better than most FG sine outputs and better than the total harmonic distortion (THD) of many audio amplifiers. The IC has two of them, plus offset circuitry, and a multiplier and divider. It was given niche-market pricing and thus did not find its way into FG instruments and others requiring accurate or low-THD sine-wave generation. It is specified to 1.5 MHz.

Perhaps the only problem was that because the AD639 was so appealing, ADI put a premium price tag on it, which defeated its spread into the market as a commodity part. Perhaps Rochester Electronics—the leading supplier on the “trailing edge”—could revive it and reap the small fortune that it was destined to produce. There is no reason to confine the mission of Rochester Electronics to that of a replacement-

HFA3046, HFA3096, HFA3127, HFA3128

Pinouts

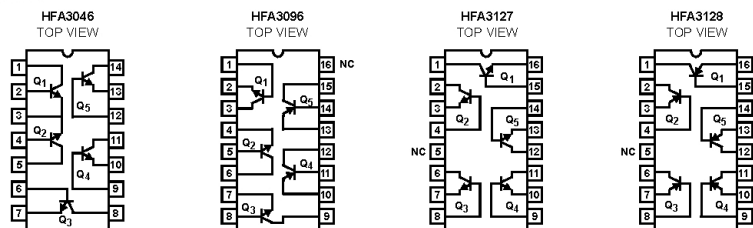

HFA3046, HFA3096, HFA3127, HFA3128

Electrical Specifications $T_A = 25^\circ\text{C}$ (Continued)

PARAMETER	TEST CONDITIONS	DIE			SOIC, QFN			UNITS
		MIN	TYP	MAX	MIN	TYP	MAX	
DIFFERENTIAL PAIR MATCHING CHARACTERISTICS FOR THE HFA3046								
Input Offset Voltage	$I_C = 10\text{mA}$, $V_{CE} = 5\text{V}$	-	1.5	5.0	-	1.5	5.0	mV
Input Offset Current	$I_C = 10\text{mA}$, $V_{CE} = 5\text{V}$	-	5	25	-	5	25	μA
Input Offset Voltage TC	$I_C = 10\text{mA}$, $V_{CE} = 5\text{V}$	-	0.5	-	-	0.5	-	$\mu\text{V}/^\circ\text{C}$

Figure 1 Replacements for the CA3000 series in the form of HFA3000-series SOIC parts offer multiple-gigahertz f_s s but correspondingly lower breakdown voltages. The table shown is excerpted from Intersil parts data.

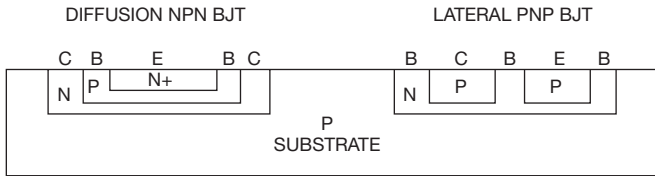


Figure 2 The CA3096's PNP BJTs are constructed as lateral transistors.

parts supplier for obsolete equipment when it could also be considered the fulfiller of the destiny of great parts for new designs that did not catch on the first time around.

CA3096 BJT ARRAY

Somewhat like the AD639 sine converters are the highly versatile building blocks that are transistor arrays. RCA came out with some BJT arrays comprising a CA3000-series line. Some of these parts had $f_{T,s}$ of over 1 GHz for NPN BJTs, which make them good for new designs today.

When RCA was shuffled around, it eventually ended up with Intersil but had lost the fab facility with its old large-geometry process. Tektronix based the design of the vertical amplifier in its 2205 oscilloscope on CA3046 (or the equivalent National LM3046) parts, which are attractive for implementing fast two- or four-quadrant multipliers.

Intersil inherited a large but finite supply of these parts that is still available but dwindling. They ought to be brought back on an existing process. It is not a major development project, and such parts would be extremely useful. Intersil did create a replacement in the form of HFA3000-series SOIC parts with multiple-gigahertz $f_{T,s}$ but with correspondingly lower breakdown voltages (Figure 1).


While the original CA3000 series was good for $\pm 12V$ supplies, the HFA series is better designed with $\pm 5V$ supplies, though the ICs can handle up to about 10V. What is much improved in the HFA series are the PNP BJTs, which are dielectrically isolated rather than made as lateral transistors, as in the CA3096 (Figure 2).

The CA3096 is a versatile part, with three NPN and two PNP BJTs. The one drawback is that the lateral PNPs have an f_T of only about 6 MHz. (Making the base thin is difficult for lateral BJTs.) For numerous circuits, however, this specification is not a major impediment.

In one example, a feedback amplifier has a quasistatic gain of 3 and a bandwidth of over 50 MHz (Figure 3). It has two forward paths, the slow path through the PNP current mirror and the fast path through Q_2 of the diff-amp input stage. It uses all five array BJTs. The only other semiconductor part is the avalanche diode, Z_1 .


You would not be inclined to design this circuit into a new product because of an uncertain component supply. In addition, the HFA part does not have the voltage range. A series comparable to the CA3000 but with dielectrically iso-

PicoScope 3400 Series
HIGH PERFORMANCE 4 CHANNELS




60 - 200 MHz bandwidth
128 MS deep memory
1 GS/s real-time sampling
Advanced digital triggering
200 MHz spectrum analyzer
Function generator or AWG


PicoScope	3404A	3404B	3405A	3405B	3406A	3406B
Channels	4					
Bandwidth	60 MHz		100 MHz		200 MHz	
Sampling rate - Real time	1 GS/s					
Buffer memory	4 MS	8 MS	16 MS	32 MS	64 MS	128 MS
Resolution (enhanced)	8 bits (12 bits)					
Signal Generator	Function Generator	AWG	Function Generator	AWG	Function Generator	AWG
Price	\$988	\$1236	\$1483	\$1731	\$1978	\$2226

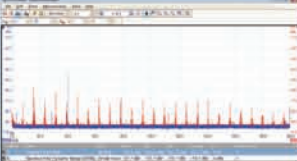


Spectrum analyzer.
Full SDK and advanced triggers



Serial decoding
(CAN, FlexRay, LIN, SPI, PC, UART)

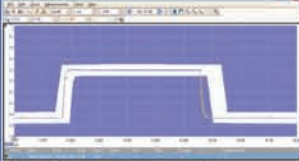


Mask limit testing,
measurements and math channels

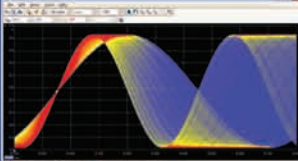

Colour persistence modes,
all as standard and free updates

Figure 3 This feedback amplifier has a quasistatic gain of 3 and a bandwidth of over 50 MHz. It uses all five of the CA3096's array BJTs; the only other semiconductor part is the avalanche diode, Z_1 .

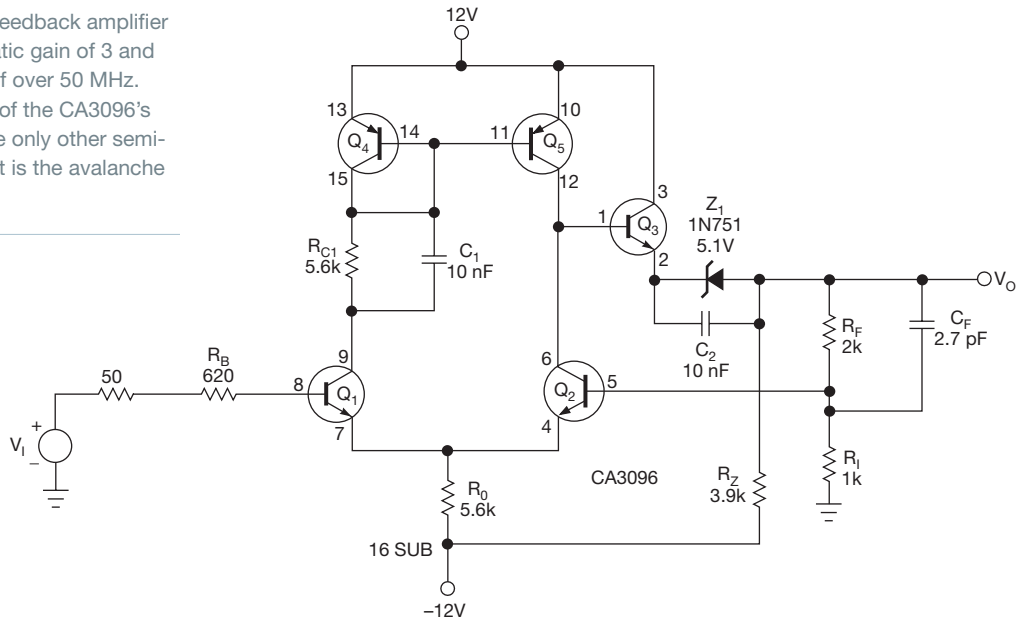

lated PNPs would be a welcomed addition to the neo-legacy category of ICs.

MC14500B INDUSTRIAL-CONTROL UNIT

The 16-pin MC14500B from Motorola is a single-bit, 1-MHz CMOS processor. It has three single-bit registers (flops) and an arithmetic logic unit and executes 16 instructions. Newer microcontrollers blow this part away, but that is not the point. It is a chunk of versatile logic that needs only an external counter for a program counter (PC) and a program memory driven by the PC.

The data memory is also the I/O memory. Four bits of the memory output drive the op-code input on the MC14500B; the rest are I/O addressing of 8-bit bidirectional latches (MC14599B) and 8-input multiplexers or data selectors (MC14512).

The one-bit accumulator is called the result register (RR). Instructions include Load RR, Load the complement of RR, AND data with RR, Complement data and AND, OR, Complement data and OR, exclusive NOR (equivalence), store and store complement pulse the write line with valid RR output, move input data to input register or to output register, skip next instruction if RR=0, and pulse flag O out or flag F out. Two other instructions, JMP and RTN, also output flag pulses. The JMP flag can be used to load an address into the PC. The RTN instruction outputs an RTN flag and skips the next instruction.

The built-in oscillator generates the clock that drives the PC. The rising edge of the clock increments the PC, and while high, the instruction is fetched. During the low phase of the clock, the instruction is decoded and executed.

Because it uses bit-serial processing and is I/O intensive, what advantage does this part have nowadays? With the requirement of an additional counter, and program and data memory, this part will remain obsolete because it cannot compete with lower-cost 8- to 16-pin flash-programmable ICs that are easy to use and are far more powerful. Although the part is interesting, it requires too much bit-tiddling to

be welcomed back into production. This one will remain forgotten, despite its inspiration quotient.

MC14549 AND MC14559 SARs

These successive-approximation registers (SARs) were originally part of the Motorola 4000-series offering of CMOS (mostly) digital ICs. They have 8 bits per IC and can be cascaded for more bits. They are used to build successive-approximation ADCs. Internally, they have a shift register and a parallel-loading register.

Despite the simplicity of an SAR, it is a useful digital function. The SA algorithm searches a range by making a succession of boolean comparisons beginning at midrange. If the voltage is greater, the most-significant bit is set and the next bit is tested until all bits have been determined. All conversions on n bits take n clock cycles, independent of the digitized value.

With an extra comparator and one or two SAR ICs driving an extra DAC, a simple ADC can be added to a system with leftover subparts. Although this level of integration is semi-discrete nowadays, for many applications with multi-DAC and multicomparator ICs—and with a need for a simple ADC—it can be a design possibility.

SARs also could be used for auto-ranging, with fewer average steps than sequential ranging. Similarly, the gain of a variable-gain amplifier (VGA) can be set by an SA search through the large range of the VGA. The weighting of the bits might no longer be binary, but instead be a decade or 1-2-5 sequence. If it's monotonic, however, the scheme works.

MC4530 DUAL FIVE-INPUT MAJORITY GATE

One of the stranger logic functions to make it into integrated form and onto the market was a dual five-input majority gate, sold by Motorola. If three or more of the five inputs are asserted, the output is asserted. Those of you who like to find novel uses for existing logic parts might have an intriguing time with this part. The output was gated with an XNOR (equivalence) gate from a W input,

JOIN THE CONVERSATION



To comment on this article, go to www.edn.com/4401105.

to set the polarity of the output.

What are its uses? This part is relevant to unusual applications, but it can coax some creative thinking. It generates a decision when five or fewer subsystems indicate a status in a redundant system. If, for example, the vital-sign monitors in a hospital's intensive-care unit show three or more of five patients are in trouble, a triage state is asserted.

WITH AN EXTRA COMPARATOR AND ONE OR TWO SAR ICs DRIVING AN EXTRA DAC, A SIMPLE ADC CAN BE ADDED TO A SYSTEM WITH LEFTOVER SUBPARTS.

By connecting one input high and one low, two out of three control computers (as in the space shuttle) prevail in a vote on an output assertion. Alternatively, if multiple banks of capacitors are asynchronously charged, sufficient charge is available and the firing device is enabled if m out of n banks indicate that they are charged. The function is egalitarian; any m out of n will trigger an event. Using inverted input logic, a statically stable, multi-ped robot with fewer than m of n feet on the ground triggers a fault state.


A voting hierarchy is implemented by cascading the output of one of the majority gates into one input of another. The first five then have one vote in the second five. Although such uses might be practical, it is still an unusual logic function to try to apply. No wonder it is a forgotten circuit. **EDN**

AUTHOR'S BIOGRAPHY

Dennis Feucht is involved in research and development at Innovatia Laboratories (Cayo, Belize).

[www.edn.com]

Embedding Wireless Just Got a Whole Lot Easier, and Faster, and Smaller and Less Expensive . . .

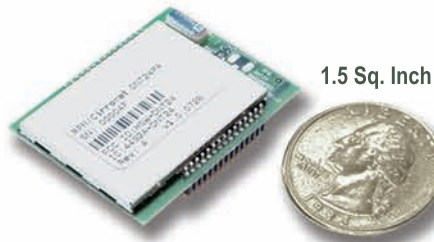

. . . yet packing more reliability and features.



2.4 GHz Frequency Hopping Spread Spectrum Performance



FCC, Canadian IC and ETSI Pre-Certified



RF Data Rate of 250 kb/s



Multiple analog, digital, UART and SPI interfaces



Battery operation supporting sleep mode and Auto-Reporting



No programming or co-processor needed

U.FL and Chip Antenna versions available

Developer Kits Available

Click here to find out how RFM's pre-certified modules can deliver a world of reliable wireless options for your residential, commercial, industrial, and agricultural applications in a fraction of the time, at a fraction of the cost, and with a fraction of the hassle.

<http://www.rfm.com/>


Available Through RFM Distributors
Avnet Memece
Digi-Key
Future Electronics
Mouser Electronics

Wireless is **RFM**
www.RFM.com

RFM is a subsidiary of Murata Electronics North America, Inc.

Auto pulse generator senses and responds to a probed load

Raju Baddi, Tata Institute of Fundamental Research, Pune, India

 This automatic pulse generator (figures 1 and 2) is a test gadget that senses a probed contact to a pair of terminals under test and automatically issues a momentary power pulse to them once proper contact is made. These terminals could be the input of a logic gate, an LED on a circuit board, a transformer or relay coil, etc. The need for such a pulse often arises in the day-to-day engineering work of experimenting and testing.

The gadget is powered with a small 3.6V rechargeable NiCd battery. You can easily construct it in a glue-stick tube (Figure 3) with the special

arrangement of probes shown. A regular arrangement of independent probes also may be used. The circuit has been tested with a 5V supply, as well.

Two versions are shown: **Figure 1** uses an NE555 timer IC as a monostable and is the easiest to get working. **Figure 2** eliminates the NE555 for a reduced parts count but could be affected by variations in the parameters and different manufacturers of the CD4069 CMOS hex inverter used in place of the NE555.

Transistors Q_1 and Q_2 are switches that connect the +ve and -ve probes to the 3.6V supply and ground when

DIs Inside

52 Read 10 or more switches using only two I/O pins of a microcontroller

57 Successfully choose complementary bipolar transistors

58 Synchronized regulator produces coherent noise

► To see and comment on all of EDN's Design Ideas, visit www.edn.com/designideas.

turned on by the CD4069 and the NE555. R_3 and R_4 bias gate G_1 's input just below the switching threshold to hold its output high, which holds the output of gate G_2 low. The time constant formed by C_1 provides a certain

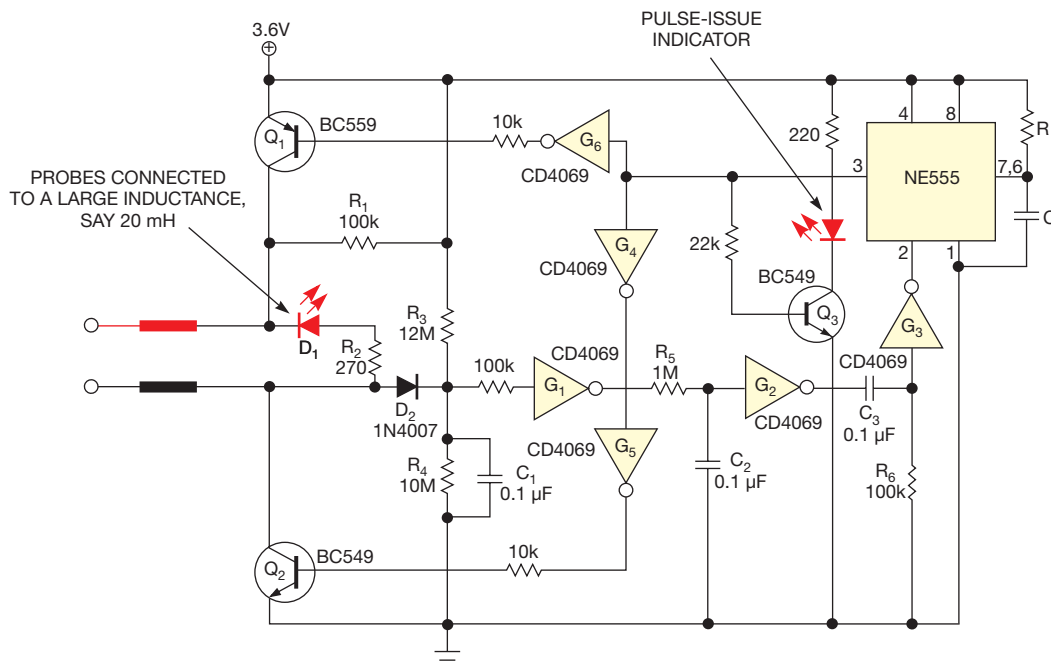


Figure 1 The NE555 version is easy to get working but has an increased parts count.


20V, 2.5A Monolithic Synchronous Buck SWITCHER+ with Input Current, Output Current and Temperature Sensing/ Limiting Capabilities

Design Note 511

Tom Gross

Introduction

The **LTC[®]3626** synchronous buck regulator with current and temperature monitoring is the first of Linear's SWITCHER+™ line of monolithic regulators. It is a high efficiency, monolithic synchronous step-down switching regulator capable of delivering a maximum output current of 2.5A from an input voltage ranging from 3.6V to 20V (circuit shown in Figure 1). The LTC3626 employs a unique controlled on-time/constant-frequency, current-mode architecture, making it ideal for low duty cycle applications and high frequency operation, while yielding fast response to load transients (see Figure 2). It also features mode setting, tracking and synchronization capabilities. The LTC3626's 3mm × 4mm package has such low thermal impedance that it can operate without an external heat sink even while delivering maximum power to the load.

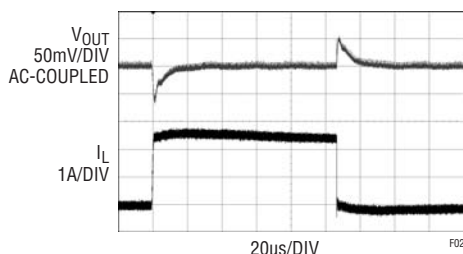

12VIN TO 1.8VOUT LOAD STEP RESPONSE, 2.5A LOAD STEP, 2MHz SWITCHING FREQUENCY, FORCED CONTINUOUS MODE, INTERNAL COMPENSATION

Figure 2. Load Step Response for Figure 1 Circuit

Beyond its impressive regulator capabilities, the LTC3626's current and temperature monitoring functions stand out. They offer both monitoring and control capabilities with minimal additional components.

LT, LTC, LTM, Linear Technology, and the Linear logo are registered trademarks and SWITCHER+ is a trademark of Linear Technology Corporation. All other trademarks are the property of their respective owners.

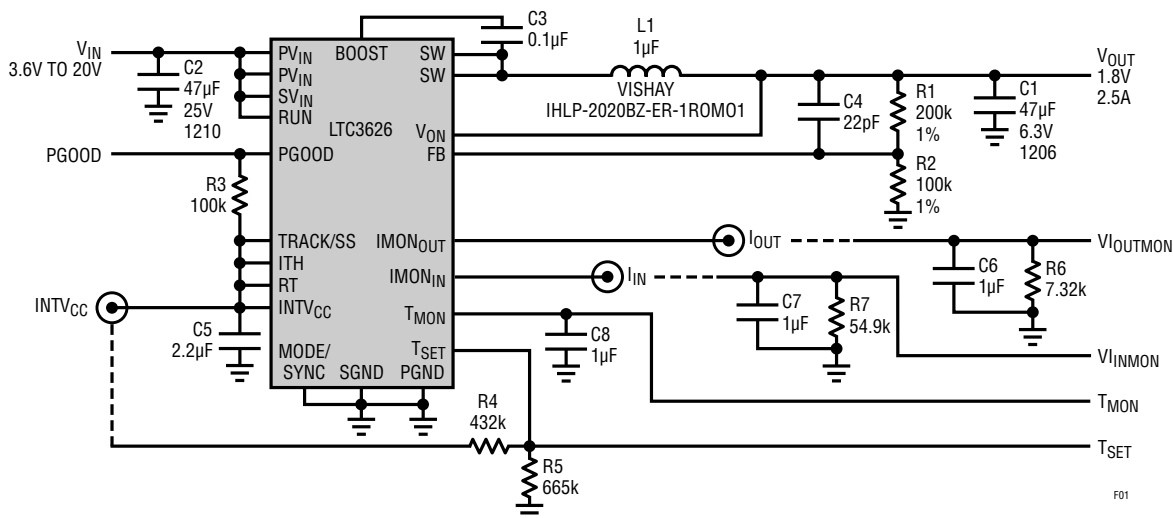


Figure 1. 20V Maximum Input, 2.5A, 2MHz Buck Regulator with Current and Temperature Monitoring

Output/Input Current Sensing

The LTC3626 senses the output current through the synchronous switch during the switch's on-time and generates a proportional current (scaled to 1/16000) at the IMON_{OUT} pin. Figure 3 shows the accuracy of the IMON_{OUT} output by comparing the measured output of the IMON_{OUT} pin with calculated values. Error remains less than 1% over most of the output current range.

Likewise, this same sense current signal is combined with the buck regulator's duty cycle to produce a current proportional to the input current—again by 1/16000—at the IMON_{IN} pin. A precision of better than 5% is achieved over a wide current range (see Figure 4).

Both current signals are connected to internal voltage amplifiers, referenced to 1.2V, that can shut down the part when tripped. So the input and output current limits are set by simply connecting a resistor to the IMON_{IN} or IMON_{OUT} pins, respectively, as shown in Figure 1. The relationship between the current limit and the resistor is:

$$I_{LIM} \approx \frac{1.2V \cdot 16000}{R_{LIM}}$$

For example, a 10k resistor sets a current limit of approximately 2A.

This simple scheme allows both monitoring and active control of the input and output current limits—the latter

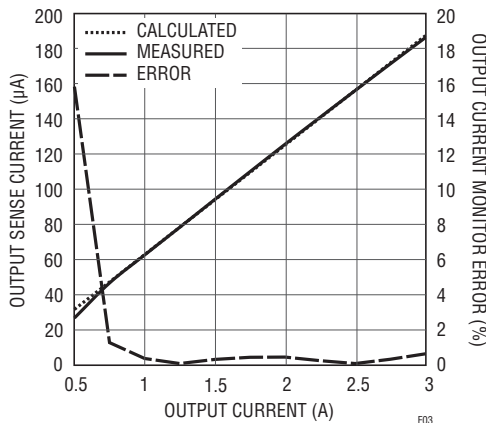


Figure 3. Output Current vs Output Current Monitor

can be implemented via external control circuitry, such as a DAC with a few passive components.

Temperature Sensing

The LTC3626 generates a voltage proportional to its own die temperature, which can be used to set a maximum temperature limit. The voltage at the temperature monitor pin (T_{MON}) is typically 1.5V at room temperature. To calculate the die temperature, T_J, multiply the T_{MON} voltage by the temperature monitor voltage-to-temperature conversion factor of 200°K/V, and subtract the 273°C offset. The LTC3626 also has a temperature limit comparator fed by the temperature limit set pin, T_{SET}, and the T_{MON} pin. Hence, by applying a voltage to the T_{SET} pin, a maximum temperature limit can be set according to the following:

$$V_{TSET} = \frac{T_J + 273}{200^\circ K/V}$$

Choosing a maximum temperature limit of 125°C equates to an approximate 2V setting on the T_{SET} pin—the IC will shut down once the die temperature T_J reaches this limit.

Conclusion

The LTC3626 combines current and temperature monitoring capabilities with a high performance buck regulator in a compact package. A microprocessor or other external control logic can supervise conditions via easy-to-use input and output current and temperature monitor pins, and it can shut itself down by setting a threshold voltage on the temperature set limit pin.


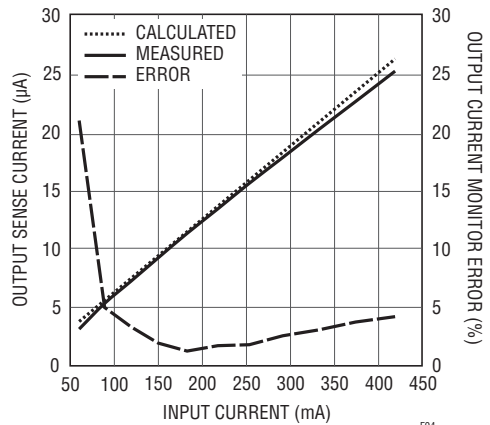


Figure 4. Input Current vs Input Current Monitor

Data Sheet Download

www.linear.com/3626

For applications help,
call (408) 432-1900, Ext. 3229

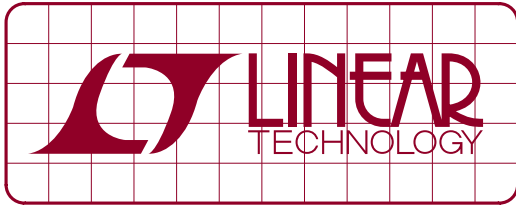

DESIGN NOTES

Protect Sensitive Circuits from Overvoltage and Reverse Supply Connections

Design Note 497

Victor Fleury

Introduction

What would happen if someone connected 24V to your 12V circuits? If the power and ground lines were inadvertently reversed, would the circuits survive? Does your application reside in a harsh environment, where the input supply can ring very high or even below ground? Even if these events are unlikely, it only takes one to destroy a circuit board.

To block negative supply voltages, system designers traditionally place a power diode or P-channel MOSFET in series with the supply. However, diodes take up valuable board space and dissipate a significant amount of power at high load currents. The P-channel MOSFET dissipates less power than the series diode, but the MOSFET and the circuitry required to drive it increases costs. Both of these solutions sacrifice low supply operation, especially the series diode. Also, neither protects against voltages that are too high—protection that requires more circuitry, including a high voltage window comparator and charge pump.

Undervoltage, Overvoltage and Reverse-Supply Protection

The LTC[®]4365 is a unique solution that elegantly and robustly protects sensitive circuits from unpredictably high or negative supply voltages. The LTC4365 blocks positive voltages as high as 60V and negative voltages as low as -40V. Only voltages in the safe operating supply range are passed along to the load. The only external active component required is a dual N-channel MOSFET connected between the unpredictable supply and the sensitive load.

Figure 1 shows a complete application. A resistive divider sets the overvoltage (OV) and undervoltage (UV) trip points for connecting/disconnecting the load from V_{IN} . If the input supply wanders outside this voltage window, the LTC4365 quickly disconnects the load from the supply.

The dual N-channel MOSFET blocks both positive and negative voltages at V_{IN} . The LTC4365 provides 8.4V of enhancement to the gate of the external MOSFET

LT, LTC, LTM, Linear Technology and the Linear logo are registered trademarks and Hot Swap is a trademark of Linear Technology Corporation. All other trademarks are the property of their respective owners.

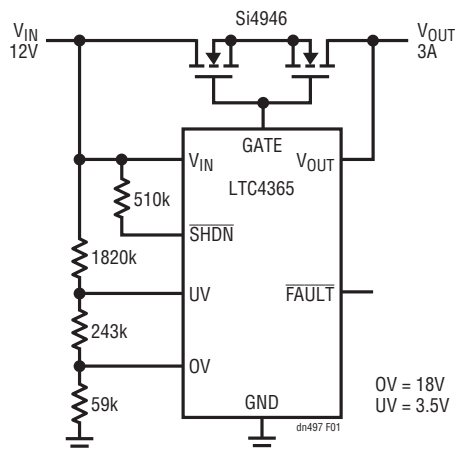


Figure 1. Complete 12V Automotive Undervoltage, Overvoltage and Reverse-Supply Protection Circuit

during normal operation. The valid operating range of the LTC4365 is as low as 2.5V and as high as 34V—the OV to UV window can be anywhere in this range. No protective clamps at V_{IN} are needed for most applications, further simplifying board design.

Accurate and Fast Overvoltage and Undervoltage Protection

Two accurate ($\pm 1.5\%$) comparators in the LTC4365 monitor for overvoltage (OV) and undervoltage (UV) conditions at V_{IN} . If the input supply rises above the OV or below the UV thresholds, respectively, the gate of the external MOSFET is quickly turned off. The external resistive divider allows a user to select an input supply range that is compatible with the load at V_{OUT} . Furthermore, the UV and OV inputs have very low leakage currents (typically $< 1\text{nA}$ at 100°C), allowing for large values in the external resistive divider.

Figure 2 shows how the circuit of Figure 1 reacts as V_{IN} slowly ramps from -30V to 30V . The UV and OV thresholds are set to 3.5V and 18V , respectively. V_{OUT} tracks V_{IN} when the supply is inside the 3.5V to 18V window. Outside of this window, the LTC4365 turns off the N-channel MOSFET, disconnecting V_{OUT} from V_{IN} , even when V_{IN} is negative.

Novel Reverse Supply Protection

The LTC4365 employs a novel negative supply protection circuit. When the LTC4365 senses a negative voltage at V_{IN} , it quickly connects the GATE pin to V_{IN} . There is no diode drop between the GATE and V_{IN} voltages. With the gate of the external N-channel MOSFET at the most negative potential (V_{IN}), there is minimal leakage from V_{OUT} to the negative voltage at V_{IN} .

Figure 3 shows what happens when V_{IN} is hot-plugged to -20V . V_{IN} , V_{OUT} and GATE start out at ground just before the connection is made. Due to the parasitic inductance

of the V_{IN} and GATE connections, the voltage at V_{IN} and GATE pins ring significantly below -20V . The external MOSFET must have a breakdown voltage that survives this overshoot.

The speed of the LTC4365 reverse protection circuits is evident by how closely the GATE pin follows V_{IN} during the negative transients. The two waveforms are almost indistinguishable on the scale shown. Note that no additional external circuits are needed to provide reverse protection.

There's More! AC Blocking, Reverse V_{IN} Hot Swap™ Control When V_{OUT} is Powered

After either an OV or UV fault has occurred (or when V_{IN} goes negative), the input supply must return to the valid operating voltage window for at least 36ms in order to turn the external MOSFET back on. This effectively blocks 50Hz and 60Hz unrectified AC.

LTC4365 also protects against negative V_{IN} connections even when V_{OUT} is driven by a separate supply. As long as the breakdown voltage of the external MOSFET is not exceeded (60V), the 20V supply at V_{OUT} is not affected by the reverse polarity connection at V_{IN} .

Conclusion

The LTC4365 controller protects sensitive circuits from overvoltage, undervoltage and reverse-supply connections using back-to-back MOSFETs and no diodes. The supply voltage is passed to the output only if it is qualified by the user-adjustable UV and OV trip thresholds. Any voltage outside this window is blocked, up to 60V and down to -40V .

The LTC4365's novel architecture results in a rugged, small solution size with minimal external components, and it is available in tiny 8-pin $3\text{mm} \times 2\text{mm}$ DFN and TSOT-23 packages. The LTC4365 has a wide 2.5V to 34V operating range and consumes only $10\mu\text{A}$ during shutdown.

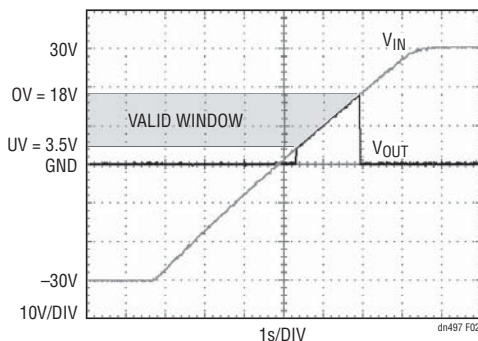


Figure 2. Load Protection as V_{IN} Is Swept from -30V to 30V

[Data Sheet Download](#)

www.linear.com

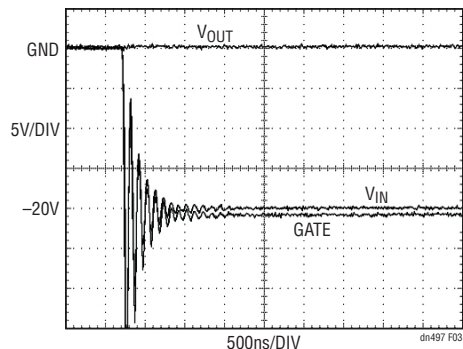


Figure 3. Hot Swap Protection from V_{IN} to -20V

For applications help,
call (408) 432-1900

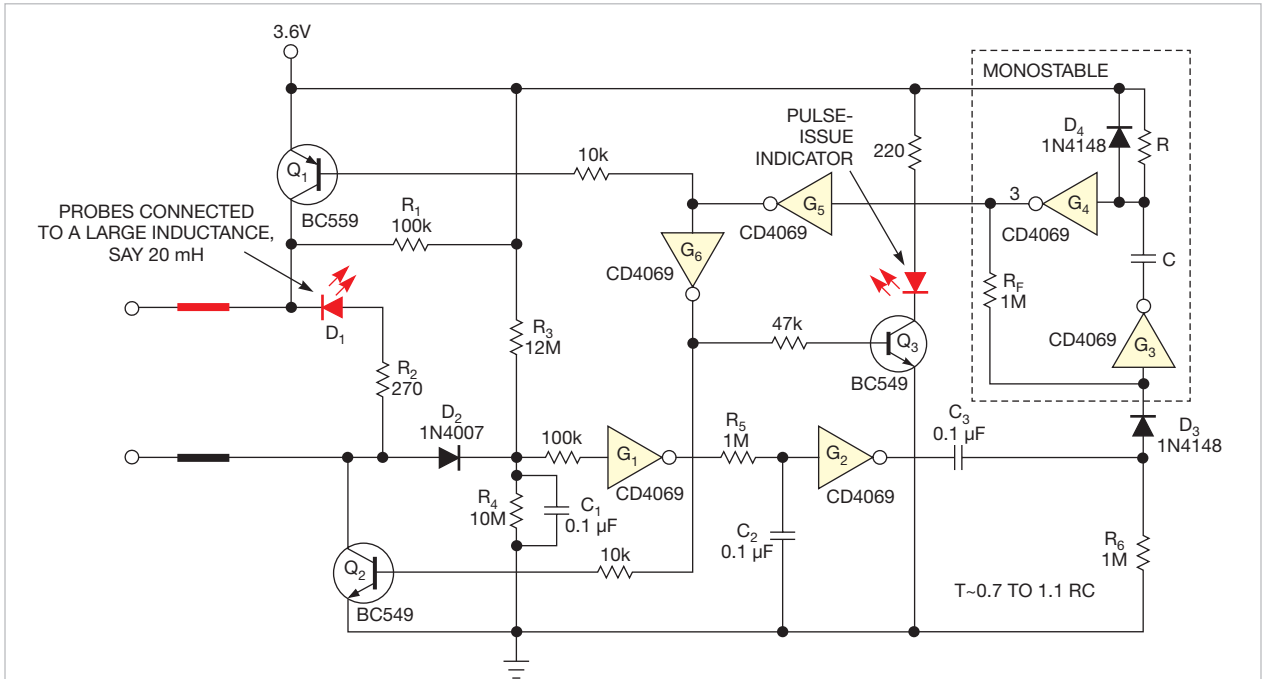


Figure 2 You can eliminate the NE555, but variations in the G₃ input switching threshold can affect the pulse duration.

amount of noise immunity and determines the minimum time for which the test circuit should be connected between the probes. The 100-kΩ resistor in series with the input of G₁ limits the input current in case the probe is accidentally connected to an active circuit.

R₁ connects to the junction of R₃ and R₄ through a reverse-biased diode, D₁. It normally has no effect as long as the probes are not connected through a load, because the series string of R₁, D₁, R₂, and D₂ is a high-resistance circuit compared with the 12 MΩ of R₃. As soon as you connect a passive test circuit such as a resistor/inductor/LED, however, D₁ and R₂ are paralleled by it. Thus, the branch in parallel with R₃ has a lower resistance and the G₁ input voltage increases such that it is now recognized as logic 1, driving G₁'s output low.

R₅ and C₂ form a debounce-and-delay network to ensure that the probes are firmly con-

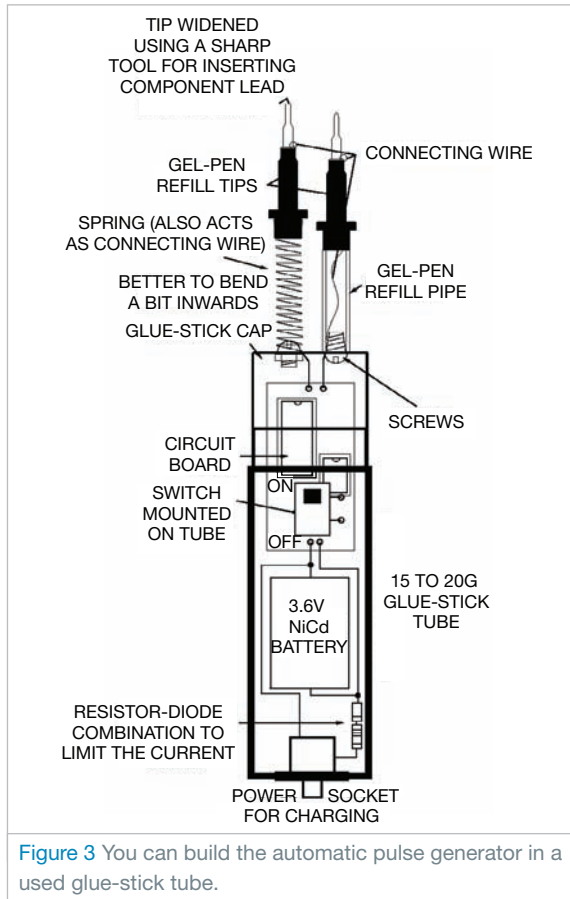


Figure 3 You can build the automatic pulse generator in a used glue-stick tube.

nected to the circuit under test before the power pulse is issued. When the output of G₁ goes low, capacitor C₂ begins to discharge through R₅. The logic input voltage of G₂ changes within a time on the order of R₅C₂.

In **Figure 1**, the rising output of G₂ immediately triggers the NE555 monostable through G₃ and the differentiator formed by C₃ and R₆. Once C₃ has finished charging through R₆, G₃'s input returns to ground and its output returns high to allow the NE555 to complete its timing cycle with a duration that its R and C values determine.¹ The timed logic 1 output of the NE555 turns on Q₃ to light the "pulse issued" LED, and through G₄, G₅, and G₆ turns on Q₁ and Q₂ to present the power pulse to the circuit under test.

Only one pulse is generated per contact; removing the probes and then reconnecting them will issue a new pulse. If the circuit under test is inductive and greater than 20 mH at

the end of the pulse, the inductive back EMF will flash LED D_1 if the probes are still connected.

In **Figure 2**, the NE555 has been replaced by a monostable comprising G_3 and G_4 , D_4 , and R_F . R_6 has been changed to $1\text{ M}\Omega$, and diode D_3 has been added to the input of G_3 . Resistor R holds G_4 's input high, which in the quiescent state causes G_4 's output to hold G_3 's input low. A rising edge from G_2 causes a low to couple through the initially discharged capacitor, C , to G_4 , whose rising output is fed back to G_3 as positive feedback and holds G_3 's input

high even if the probes are removed. If this happens, D_3 becomes reverse biased and prevents G_2 's falling edge from affecting the monostable operation.

Capacitor C then slowly charges through resistor R until G_4 's input rises above its switching threshold, and the positive-feedback process reverses. The pulse duration depends on the $R \times C$ time constant, and is about 0.7 to 1.1 RC , depending on the G_4 threshold voltage, which can vary between 0.33 and 0.67 of the supply voltage. The author suggests $1\text{ M}\Omega$ for R and 40 nF for C , but R could be made variable,

as well. D_4 ensures that C discharges rapidly as G_3 's output returns high.

In either case of **Figure 1** or **Figure 2**, the momentary high output of the monostable turns Q_3 on to flash the pulse-issued indicator LED. It also turns on both Q_1 and Q_2 to power the probes. D_2 serves to isolate the $-ve$ probe from the primary input of the circuit at G_1 to avoid immediate self-suppression. **EDN**

REFERENCE

■ NE555 data sheet, Figure 11, Texas Instruments, June 2010, <http://bit.ly/127p7kq>.

Read 10 or more switches using only two I/O pins of a microcontroller

Aruna Prabath Rubasinghe, University of Moratuwa, Moratuwa, Sri Lanka

There are several ways to read multiple switch inputs using a reduced number of microcontroller-unit (MCU) pins. For example, you can use

an analog MCU pin to read multiple switches by assigning a unique voltage to each switch through a resistor network, or you can use a one-wire device,

such as the Maxim DS2408 8-channel addressable switch.

The first method has several disadvantages: The MCU has to have an ADC function, debounce wait times reduce the polling rate, and an error results if the switch is opened during the ADC sampling time. The second method also has the drawback of comparatively low speed; it uses 1-wire communica-

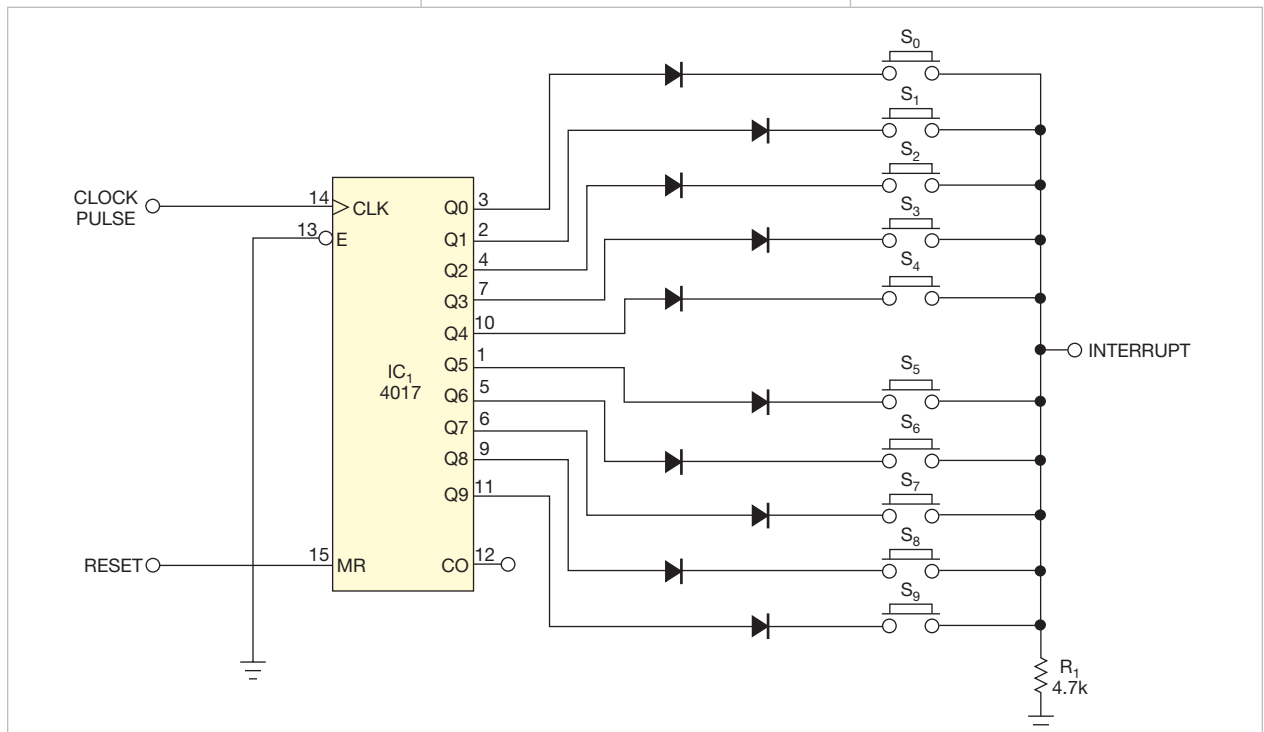


Figure 1 You can easily expand this circuit to many more than 10 switches, yet still use only two MCU I/O pins, by cascading multiple CD4017 counters through their carry-outs to the following enables.



maxim
integrated™

ANALOG INTEGRATION ISN'T FOR EVERYONE



www.maximintegrated.com

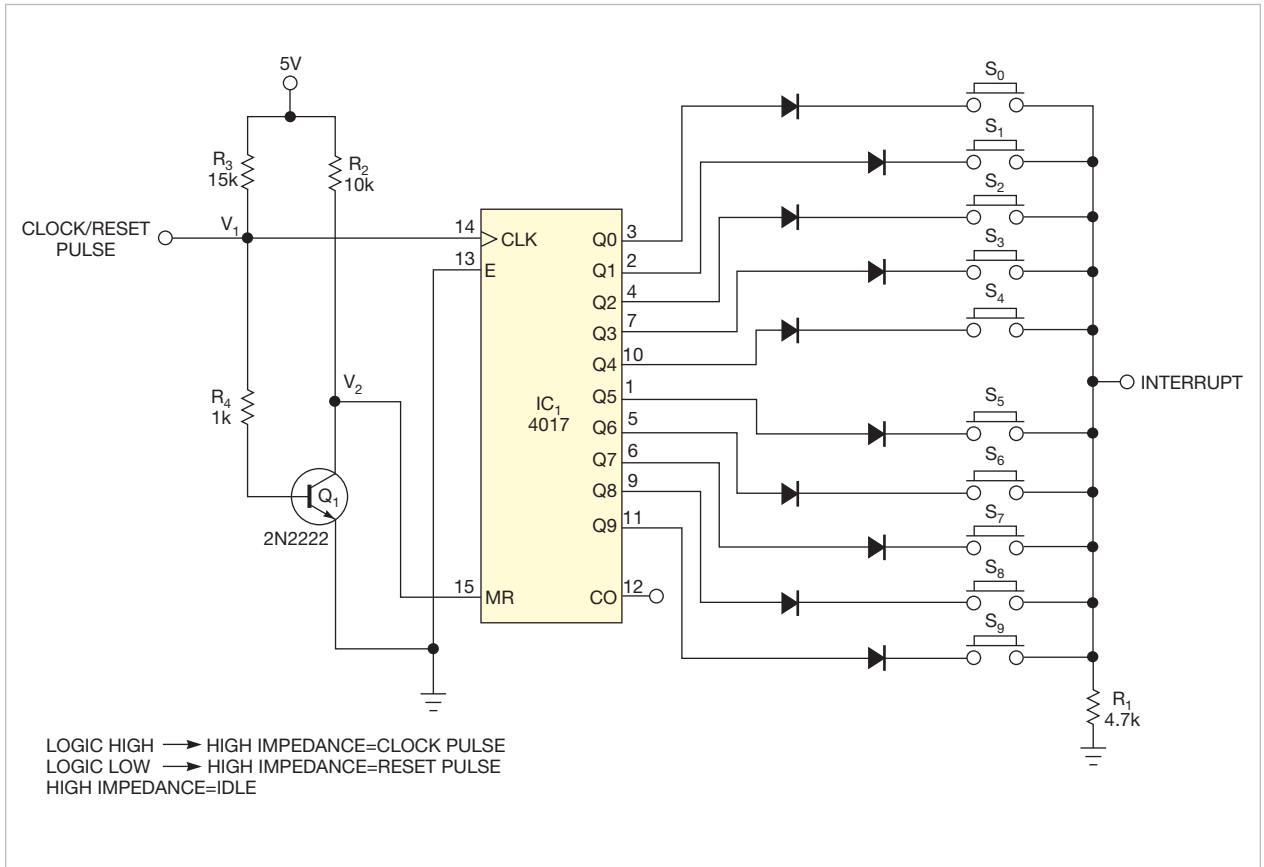


Figure 2 You can add three resistors and a transistor to implement the occasional synchronizing reset without using a third I/O pin.

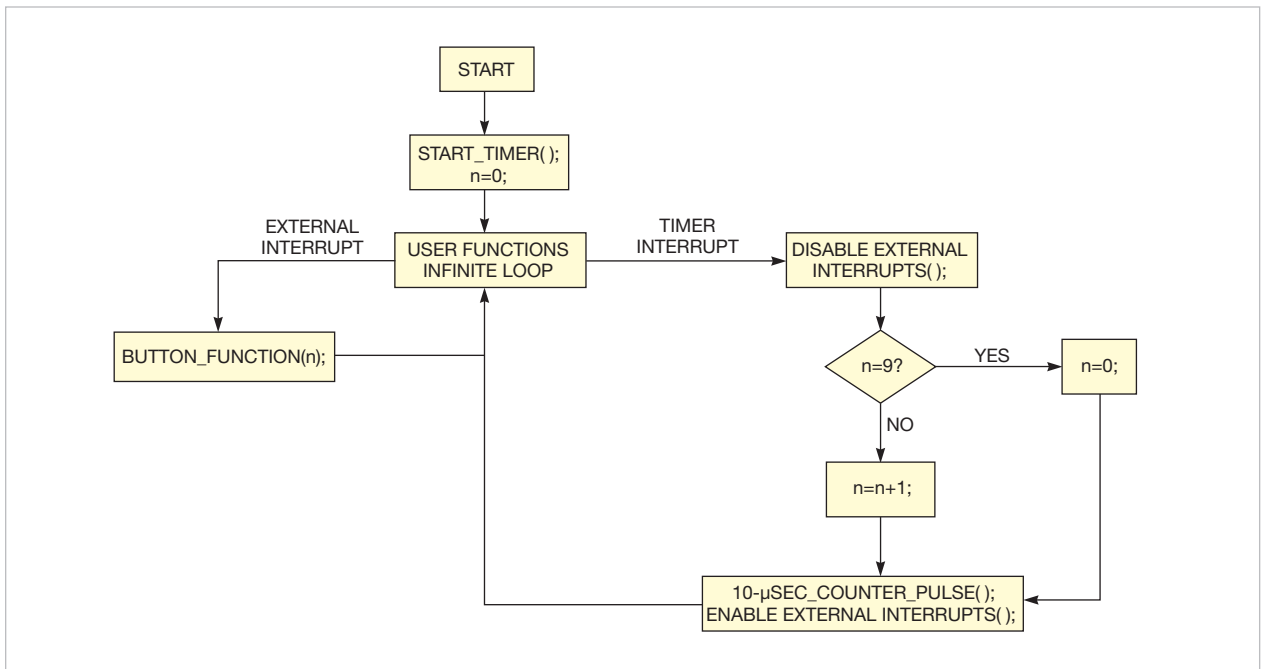



Figure 3 This flowchart displays the process for reading an all-pushbutton system. Only one button at a time should be pressed.



TECHONLINE

Your trusted
engineering resource
is better than ever.

Welcome back to
TechOnline

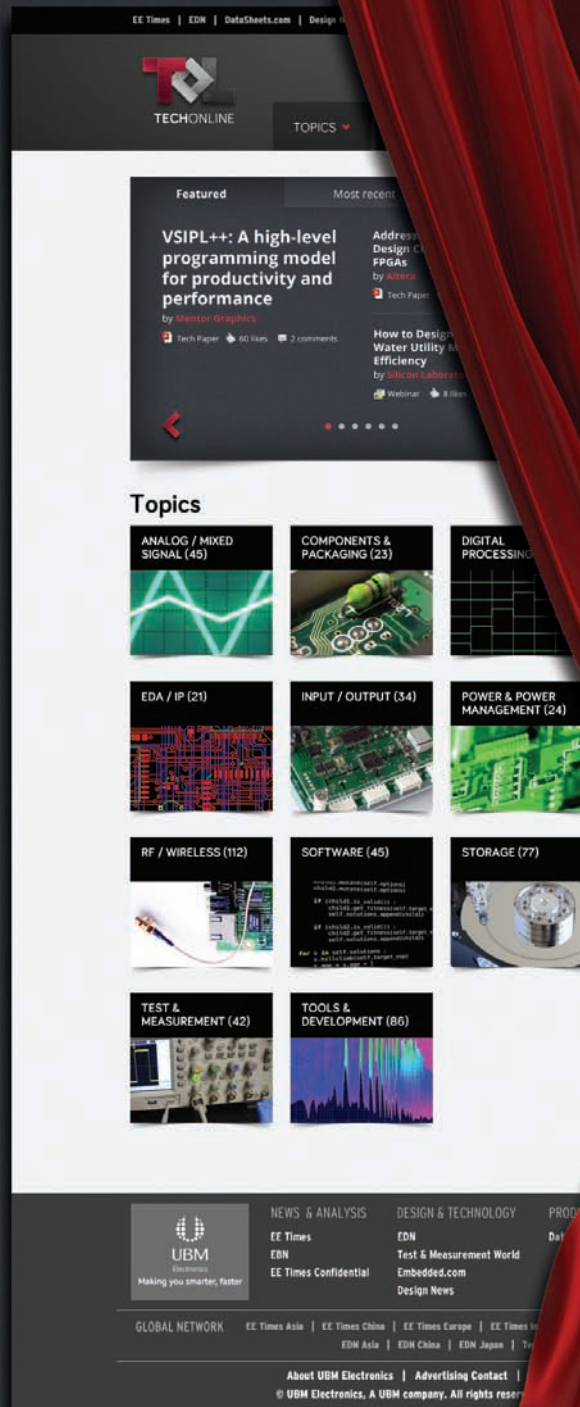

TECH PAPERS | COURSES | WEBINARS | VIDEOS | COMPANY DIRECTORY

TechOnline.com
Education for the creators of technology.



tion, which requires continuous polling; and each poll generates an 8-bit data sequence relevant to switch positions.

This Design Idea describes a method for reading multiple pushbuttons or open/closed switches using only two digital I/O pins and a timer interrupt of the MCU (**Figure 1**). Optionally, a third I/O pin can be assigned to periodically reset the CD4017 (a cascadable decoded 1-of-10 Johnson counter) for reliable operation should an EMI or ESD event occur that could falsely clock the counter, or you can use the circuit shown in **Figure 2** and retain the two-pin feature. The diodes isolate the counter outputs in the event that two or more switches are closed at the same time. You can increase the number of switches connected by cascading multiple CD4017 ICs using a carry-out signal (pin 12) and a clock signal (pin 14).

Reliable operation following the initial power-up reset depends on the CD4017 counter's remaining synchronized with the MCU counter. This synchronization can be upset by an ESD or EMI event such as a nearby cell phone, so it would be wise to include in the firmware a periodic hardware reset to the CD4017 to keep the counts synchronized. **Figure 2** shows how you can do this without having to use a third MCU pin.

For this function, you use the MCU's ability to keep its I/O pin in three different states: high, low, and, by temporarily changing the pin to an input, high impedance.

In the logic-high state, transistor Q_1 turns on through R_4 , making the voltage on V_1 logic high and the voltage on V_2 below the logic-low level. This sets the clock pin to a logic high while keeping the reset pin at a logic low.

In the logic-low state, transistor Q_1 turns off, making the voltage on V_1 logic low and the voltage on V_2 above the logic-high level. This sets the reset pin to logic

high while keeping the clock in the logic-low state.

In the idle high-impedance state, transistor Q_1 is turned on through R_3 and R_4 , making the voltage on V_1 and V_2 below the logic-low level. This sets both the clock and reset pins of the CD4017 to a logic-low state.

To send a clock edge, therefore, change the state in the following manner: high impedance > logic high > high impedance. Likewise, to reset the CD4017, change the state as follows: high impedance > logic low > high impedance.

The flowchart in **Figure 3** is for an all-pushbutton system and functions as follows: At the start, the MCU sets a counter variable to 0 and starts an interrupt-enabled timer, which is set to overflow and interrupt at 1-msec intervals. In the timer-interrupt routine, sev-

eral tasks are carried out: External interrupts are disabled; the counter variable is incremented by 1; a 10- μ sec clock pulse is sent to the CD4017; and the external interrupt is enabled.

A THIRD I/O PIN CAN BE ASSIGNED TO PERIODICALLY RESET THE CD4017 DURING AN EMI OR ESD EVENT.

As the MCU clocks the CD4017 every 1 msec and increments the counter variable by 1 if its value is less than 9, the CD4017 output corresponding to the counter-variable value goes to logic high from logic low; that is, if the counter-variable value is 2, then

the decoded 2 output of the CD4017 (pin 4) is at logic high while all other outputs are at logic low. At this time, if the user pressed pushbutton S_2 , it would send a logic-high signal to the external interrupt pin of the MCU. Pressing any other button does not generate external interrupts, because all other outputs of the CD4017 are in the logic-low state.

When the MCU receives the external interrupt, it gets the current counter-variable value (which is 2) from its memory, identifies the pressed button as S_2 , and thus carries out the functions relevant to S_2 . When the counter variable reaches 9, it is set to 0 through the software, as the CD4017 also resets automatically at the 10th pulse.

Note that only one button at a time should be pressed; if two consecutive buttons are pressed together, there may not be enough dropout time between successive counter states for the interrupt edge to register. You can resolve this issue by using the flowchart shown in **Figure 4**. [EDN](#)

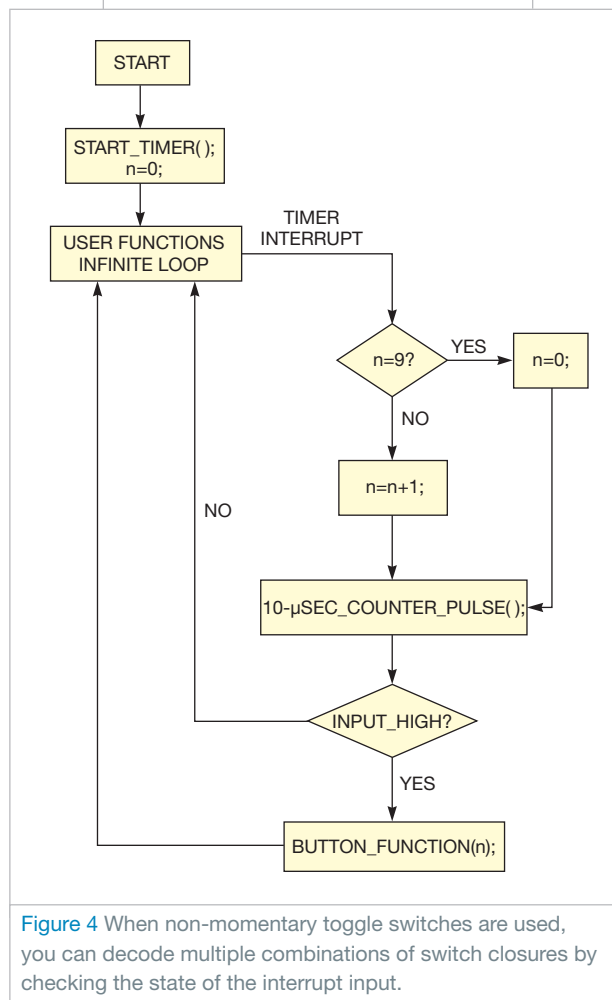


Figure 4 When non-momentary toggle switches are used, you can decode multiple combinations of switch closures by checking the state of the interrupt input.

Successfully choose complementary bipolar transistors

Peter Demchenko, Vilnius, Lithuania

For circuit designs that use complementary bipolar transistors, you sometimes need to sort the NPN and PNP transistors to have matching dc-current gains (β). One example of a circuit requiring matching is the output stage of an amplifier. The circuit in **Figure 1** shows a simple test fixture to achieve this match.

Transistors Q_1 and Q_2 are the devices being tested to see if they are matched. In the test fixture, Q_1 and Q_2 share the same base current (I_B); since there is no additional path where the current can flow, no additional compensation is needed. Note, however, that β should be high enough that $I_E \approx I_C$. With this detail in mind, resistors R_1 and R_2 should be equal.

To give the transistors a bit more headroom, an additional voltage drop is introduced between the transistors' base connections. A voltage differential of a few volts is desirable, so a blue LED is a good choice for D_1 . Its presence helps to set the base voltage for Q_1 (V_{BE1}) to about half of the supply voltage (V_S). Using an LED in the place of D_1 is preferable to using a zener diode due to the sharper knee at the low currents. Moreover, you can see the glow of many blue LEDs at currents below 10 μ A; the glow indicates the presence of base current, which means the circuit

is working properly. **Equation 1** is used to determine the needed supply voltage:

$$V_{BE1} + V_D + V_{BE2} \approx V_S/2 \quad (1)$$

A typical blue LED will have a forward voltage of about 3.5V; assuming $V_{BE1} = V_{BE2} = 0.7V$, you get a value for V_S of about 9.8V.

Resistor R_1 sets the emitter current of Q_1 ; it is calculated using **Equation 2**:

$$R_1 = (V_S - V_{BE1} - V_D - V_{BE2}) / I_{E1} \quad (2)$$

You should select an emitter current that matches the application in which the transistors will be used, because beta varies with emitter and collector current. With matching transistors ($\beta_1 = \beta_2$)

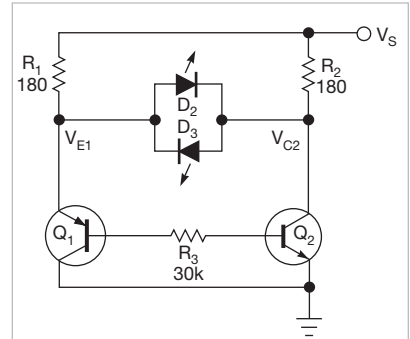


Figure 2 For a simpler version, replace the voltmeter with inverse-parallel-connected red LEDs.

installed in the test fixture, the voltage drops across R_1 and R_2 are equal, and the voltmeter will show 0.

The circuit in **Figure 2** is functionally equivalent but uses a simpler method to indicate when the circuit is in balance. With matched gains, neither of the red LEDs (D_2 and D_3) will be on. **EDN**

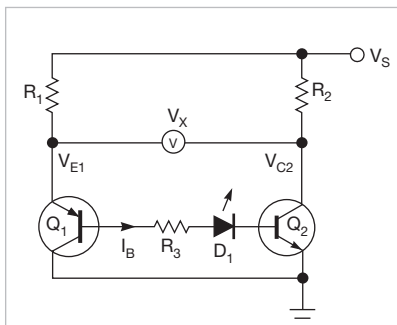


Figure 1 This circuit makes it easy to test and match the current gain of complementary bipolar transistors. Matched transistors will cause the voltmeter to read 0V.

Keil MDK-ARM

MDK-ARM™ is the complete software development environment for ARM® Cortex™-M series microcontrollers.

www.keil.com/mdk



ARM DS-5

DS-5™ Professional is a full featured software development solution for all ARM Powered® platforms.

www.arm.com/ds5



CAN interface File System
 USB Host USB Device
 TCP/IP Networking GUI Library

ARM®

+1 800 348 8051

Embedded World 2013
Hall 4 Booth 336

© ARM Ltd. AD371 | 02.13

Originally published in the March 17, 1994, issue of EDN

Synchronized regulator produces coherent noise

Jim Williams, Sean Gold, and Steve Pietkiewicz, Linear Technology, Milpitas, CA

By using a gated-oscillator architecture instead of a clocked-PWM one, gated-oscillator-type switching regulators permit high efficiency over extended ranges of output current. This architecture eliminates the house-keeping currents associated with the continuous operation of fixed-frequency designs. Gated-oscillator regulators simply self-clock at whatever frequency is necessary to maintain the output voltage. Typically, loop-oscillation frequency ranges from a few hertz to the kilohertz region, depending on the load.

In most cases, this asynchronous, variable-frequency operation doesn't create any problems. However, some systems are sensitive to the asynchronous characteristics. The system in **Figure 1** slightly modifies a gate-oscillator-type switching regulator by synchronizing its loop-oscillation frequency to the system's clock. The oscillation frequency and its

attendant switching noise, albeit variable, become coherent with system operation.

To analyze the system in **Figure 1**, temporarily ignore the flip-flop, and assume the circuit directly connects the A_{OUT} and FB pin of the LT1107 regulator. When the output voltage decays, the set pin drops below V_{REF} , causing A_{OUT} to fall. The internal comparator then switches to high, biasing the oscillator and output transistor into conduction. L_1 receives drive pulses, and the circuit deposits this inductor's flyback events into the 100- μ F capacitor via the diode, ultimately restoring output voltage. This action overdrives the set pin, causing the IC to switch off until it requires another cycle. This oscillator cycle's frequency is load-dependent and variable.

Now, interposing a flip-flop into the path between the A_{OUT} and FB pins, as the **figure** shows, synchronizes the regulator to the circuit-generated clock.

When the output decays far enough, the A_{OUT} pin goes low. At the next clock pulse, the flip-flop's Q_2 output sets low, biasing the comparator-oscillator. This turns on the power switch, which pulses L_1 . L_1 responds in flyback fashion and deposits its energy into the output capacitor to maintain output voltage. This operation is similar to the previously described case, except that the flip-flop now synchronizes the sequence of events with the system clock. Although the resulting loop's oscillation frequency is variable, the frequency and all attendant switching noise are synchronous and coherent with the system clock.

The circuit requires a start-up sequence because the output provides power for the clock. The circuit connects the flip-flop's remaining section as a buffer to furnish start-up. The flip-flop's connected CLR_1 and CLK_1 lines monitor output voltage via the 221-, 82.5-, and 100-k Ω resistor string. When power is applied, Q_1 sets CLR_2 low, which permits the LT1107 to switch, thereby raising the output voltage. When the output goes high enough, Q_1 sets CLR_2 high, and normal loop operation commences. Although this circuit uses a step-up regulator, the technique also works with other types. **EDN**

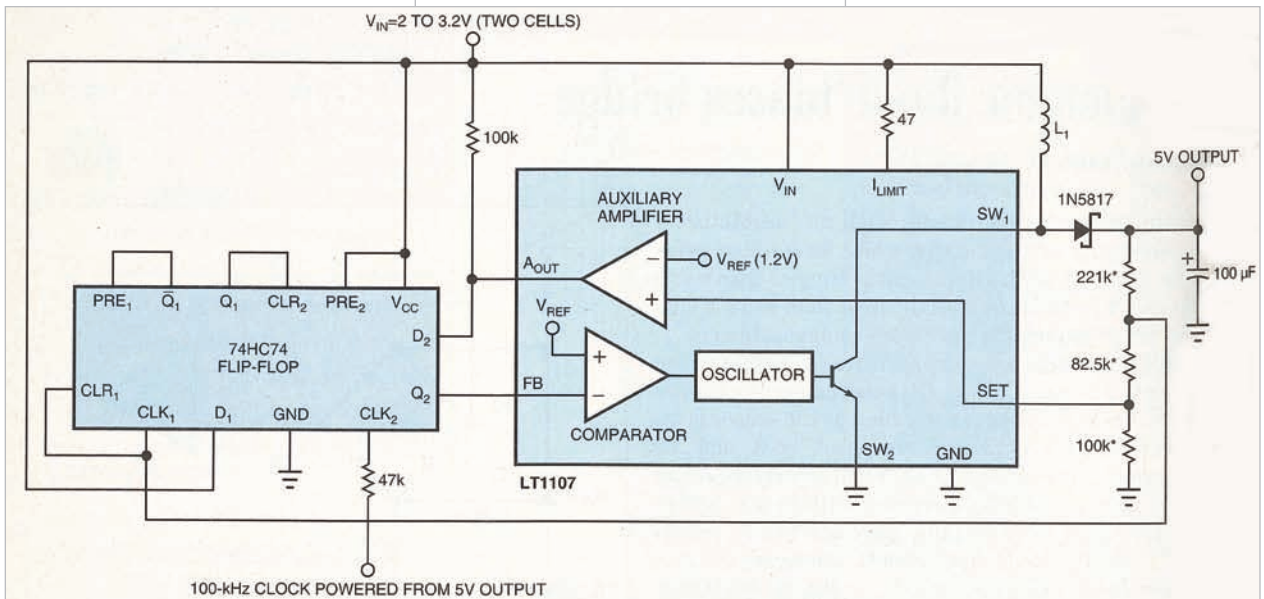


Figure 1 A synchronizing flip-flop forces the LT1107 gate-oscillator-type switching regulator's noise to be coherent with the 100-kHz clock.

EDN



Now Enhanced & Interactive

EXPERT CONTENT | DESIGN CENTERS | TOOLS & LEARNING | COMMUNITY

You turn to us for the resources, ideas, & solutions you trust.
Now get even more with the new **EDN.com**.

supplychain


LINKING DESIGN AND RESOURCES

Finding and securing hard-to-find parts

Adding or subtracting a link in the supply chain is never easy. A single substitution of a component, for example, affects other components on the board, pricing, delivery considerations, and even relationships. But buyers have to hedge their bets to ensure a single component doesn't hold up production.

Numerous considerations belong in this category of risk management. The risk of any one thing going wrong between design and production is considerable and is one of the challenges that keep supply-chain

The classic situation is the component that is hard to find or can't be sourced at the last minute. Most OEMs develop an approved-vendor list that designates two or more sources for a particular component and can be programmed into a system and automated. But the typical forecast window of six weeks or more means that component lead times may change or that there can be rapid shifts in supply and demand, as the industry experienced during the 2011 Japan earthquake and tsunami. This is where buyers contribute most to an effective supply chain.

 In the semiconductor market, no matter how good forecasting is, it takes 16 weeks to manufacture a component.

managers up at night, according to research conducted by UPS and IDC.

There's no shortage of options in risk management: Companies can calculate it internally; consultants are widely available; distributors consider it part of their core competency; factories hedge against not filling an order; and even logistics companies are entering the fray. An overall risk-management strategy comprises cross-functional groups within an OEM and C-level executive involvement. But buyers play a significant role, as well. Much of this contribution involves relationship management with supply sources and dealing with "exception management" situations.

The first line of defense in a shortage is the component supplier. In times of scarcity, however, the supplier's largest customers will be first in line for delivery. In the semiconductor market, no matter how good forecasting is, it takes 16 weeks to manufacture a component.

Distribution is usually the next stop. Distributors, like suppliers, manage their inventory to customer forecast, but build in both upside and downside parameters for inventory buys. Chances are if one customer cancels an order, there are other customers that also use that part. Strategically, smart buyers will manage relationships directly with both suppliers and distributors. Like suppliers, distributors will try to

respond first to their largest or most dependable customers.

For distributors, however, orders change every day, not just in times of crisis. Suppliers or customers may go out of business or discontinue certain product lines. These factors are part of inventory-purchasing decisions. Distributors are likely to have buffer stock for hard-to-find parts, or have an order on the supplier's books if there's a shortfall in finished goods.

When all else fails, buyers can go to the open market or through independent channels. They face several issues in the open market, however. Parts that reach the open market may not carry the manufacturer's warranties unless they are sourced through an authorized channel. Counterfeit parts also enter the channel through open-market deals where bogus parts are mixed in with legitimate components. Authorized channels remain skeptical of the screening procedures.

Sources of authentic parts are available. Authorized distributors will buy inventory when a part reaches its end of life or buy the die, masks, and IP from the original component vendor. When necessary, some of these companies can manufacture components using the original specs. This solution tends to be costly, however, as these businesses don't typically own their own fabs and parts aren't manufactured in massive volumes.

—by Barbara Jorgensen

This story was originally posted by EBN: <http://bit.ly/Vujs8P>.

PV INDUSTRY TO SEE INSTALLATION GROWTH, REVENUE DIP

OUTLOOK

The number of global photovoltaic (PV) installations will see a continued increase in 2013, but the industry will nonetheless experience a decline in overall revenue due to lower volume growth and decreasing system prices, according to market-intelligence firm IHS.

PV installations are projected to reach 35 GW this year, up from 32 GW in 2012. In comparison, industry revenue—system price multiplied by total gigawatts installed—will decline to an estimated \$75 billion (down from \$77 billion last year) and exhibit an even steeper fall from the market's peak revenue of \$94 billion in 2011.

"The conflicting trend of growing PV installation volumes accompanied ... by falling revenues will challenge solar companies to continue to reduce their cost structures," says Ash Sharma, director of syndicated solar research for IHS.

Another issue, Sharma adds, will be the rapid globalization of the industry. Europe accounted for more than 80% of solar demand in 2010, but its 2013 share is forecast to slide to 39%. Asia, meanwhile, is on track to replace Europe as the world's largest source of solar installations. —by Amy Norcross



FLEXIBILITY.

DESIGN CHAIN SOLUTIONS FROM AVNET

You think about innovation, we think about the rest.

Our team of engineers has the right mix of technical skills and application experience to give you the support you need – throughout the design chain. Extensive technical support, FPGA design, and world-class training. That's what the No. 1 in design support can do to help you focus on what you do best and successfully compete in the global market. Our solutions bend to meet your needs.

What can we do for you? www.avnetexpress.com


Accelerating Your Success!™

1 800 332 8638 | www.avnetexpress.com |   @avnetdesignwire



productroundup

IP&E/PASSIVES

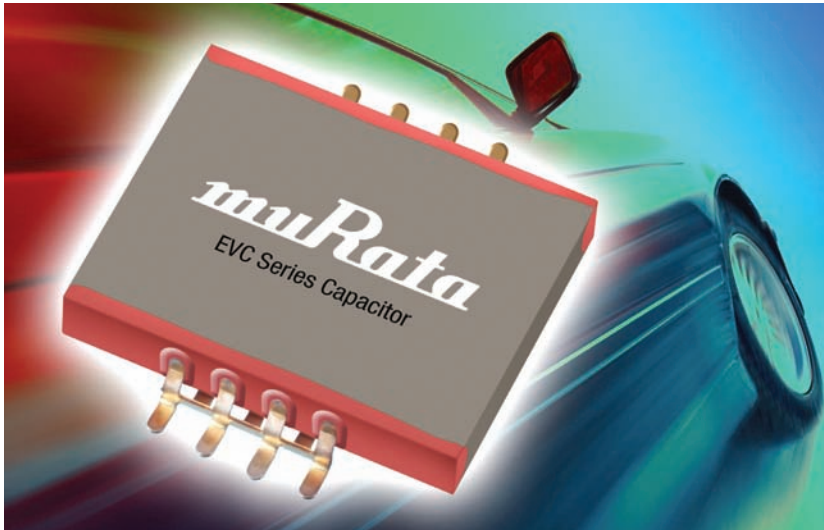

Murata develops high-permissive-current capacitor for automotive market

↘ Murata has added three multilayer monolithic ceramic capacitors to its EVC series of high-permissive-current capacitors aimed at automotive applications. These surface-mounting capacitors measure 16×20 mm and have an EIA U2J temperature characteristic that supports an operating temperature range from -55°C to +125°C. An absolute maximum case temperature of +150°C is permitted for a short duration. The additions to the EVC series offer 1.2 μF/500V dc, 300 nF/1 kV, and 100 nF/1.4 kV. The maximum allowable current, at 100 kHz, is 30A (RMS). Products in the EVC series can be used as smoothing or snubber capacitors for inverter/converter applications or as resonance capacitors for wireless charging systems.

Murata Manufacturing Co Ltd, www.murata.com

TE Connectivity connectors eliminate soldering

↘ The Mag-Mate connectors from TE Connectivity include multi-spring pins that streamline the manufacturing process by eliminating the need to solder magnet wires to PCB connections in motors and coils. The solderless press-fit multispring pins also prevent heat damage to board-mounted components. An insulation-displacement connection (IDC) slot on the connectors further aids manufacturing by simultaneously



stripping up to two magnet wires of the same size during termination. No pre-stripping, welding, or soldering is required. Five Mag-Mate connector types accommodate copper-magnet-wire sizes of 0.18 to 0.265 mm (31 to 33 AWG), 0.265 to 0.4 mm (26 to 30 AWG), 0.63 to 0.85 mm (19 to 23 AWG), 0.85 to 1.12 mm (17 to 19 AWG), and 0.4 to 0.63 mm (23 to 26 AWG). The connectors are available in strip form for semiautomatic or fully automatic insertions. A

clean metal-to-metal interface produces stable, gas-tight electrical terminations free of oxides and other contaminants.

TE Connectivity, www.te.com

Vishay introduces solid tantalum chip capacitors

↘ Designed for space-constrained applications, the TL8 series of molded Microtan solid tantalum chip capacitors from Vishay Intertechnology employs a high-volumetrically efficient packaging solution to enable high capacitance-voltage (CV) ratings in a low-profile case (0.8 to 1 mm). High voltage ratings make the devices suitable for OLED displays. The TL8 capacitors are available in a variety of footprints, including the 0805 (2×1.25 mm), A case (3.2×1.6 mm), and B case (3.5×2.8 mm). The devices feature high CV ratings from 3.3 μF-35V to 220 μF-4V, standard capacitance tolerances of ±10% and ±20%, and an operating temperature range of -55°C to +85°C, or +125°C with voltage derating. The RoHS-compliant devices are available in 8-mm tape-and-reel packaging. Pricing for US delivery starts at \$0.08 per piece.



Vishay Intertechnology, www.vishay.com

Molex connector system handles up to 100A per bay

↘ The EXTreme EnergetiC High-Current Connector System from Molex, which handles applications requiring high current of up to 100A per bay, is intended for use in high-end computing, datacom, and power-supply equipment, including 1U/2U servers,



modular power supplies, and power-distribution circuit boards. The connector system is available in right-angle plug and vertical-receptacle configurations, with 4- and 6-power blade bays and a 25-signal bay. Configurations can be designed to support various applications.

Molex Inc, www.molex.com

C&K Components subminiature slide switch has life of 100,000 cycles


↘ The JSX Series SPDT momentary action switch from C&K Components is a subminiature slide switch for consumer-electronic devices. The low-profile (2.6×7.6 mm) JSX switch has an extended electrical and mechanical life of 100,000 cycles, and its tape-and-reel packaging makes it ideal for high-volume assembly. Typical applications include on/off touchscreens, handheld games, remote controls, and instrumentation. Available in a glass-filled housing with a 4/6 nylon (UL94V-2) actuator, the JSX Series switch features beryllium-copper and silver-plated contacts. Phosphor-bronze or silver-plated terminals and a stainless-steel cover and return spring allow for the 100,000-cycle life span. The JSX Series switch's contact rating of 10 mA at 5V dc (resistive), maximum contact resistance of 70 mΩ, and dielectric strength of 100V ac for one minute at 50/60 Hz and 2 mA allow it to be integrated into various applications.

**C&K Components,
www.ck-components.com**



Kemet's high-voltage bulk capacitors save board space

↘ The Kemet Power Solutions (KPS) high-voltage stacked capacitors in X7R dielectric employ a proprietary lead-frame technology that vertically stacks one or two MLCCs in a single surface-mount package. The two-chip vertically stacked device offers up to double the capacitance of a single capacitor in the same or smaller footprint, saving board space in a design. KPS series devices, which are available in rated voltages of 500V dc and 630V dc and an operating temperature range of -55°C to +125°C, provide board flex capability up to 10 mm. The lead frame isolates the capacitors from the PCB to provide better mechanical and thermal stress performance and to address concerns about audible microphonic noise that may occur when a bias voltage is applied. The devices are available in commercial and automotive grades and are suited to applications such as switching-power-supply smoothing circuits, snubbers in lighting ballast circuits, and high-voltage coupling/dc blocking in inverters.

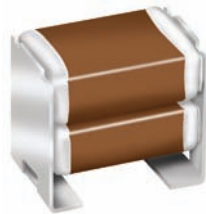

Kemet, www.kemet.com

Vishay supports solar apps with snap-in power aluminum capacitors

↘ The 193 PUR-SI Solar snap-in power aluminum capacitors from Vishay Intertechnology have a rated voltage of 500V at 50°C and a category voltage of 450V at 105°C. Designed for solar applications, where the highest voltage is present under no-load conditions, the 193 PUR-SI Solar devices feature a rated ripple current of up to

2.52A at 105°C and 100 Hz. At 500V, the devices feature a maximum operating temperature of 50°C and a useful life of 5,000 hours (no ripple current applied). At 450V, the maximum temperature can be extended to 105°C with a useful life of 6,000 hours. As polarized aluminum electrolytic capacitors with a non-solid electrolyte, the 193 PUR-SI Solar devices are suited for smoothing, filtering, and energy storage in pulsed-power applications. End products include solar photovoltaic inverters, industrial motor controls, and power supplies. Five case sizes are available, ranging from 35×30 mm to 35×60 mm. Pricing for US delivery starts at \$5.50 per piece.

**Vishay Intertechnology,
www.vishay.com**



Cornell Dubilier releases type-BLC DC link capacitors for inverter systems

↘ Cornell Dubilier's type-BLC high-energy-density, board-mount, dc link capacitors are designed for medium-power inverter systems used in wind and solar energy systems, electric vehicles, motor drives, and UPS systems. Available in values from 8 to 55 μF and in voltage ratings from 700V dc to 1100V dc, the type-BLC dc link capacitors are packaged in UL94V-0 plastic boxes with four pins for low ESR. These capacitors are designed for long life at high ripple current, up to 36A, with a 25-year life under typical operating conditions. In OEM quantities, prices start at \$4. Samples are available in 4 to 6 weeks.

Cornell Dubilier, www.cde.com



SMD wirewound resistor from Ohmite handles more than 5W

By using a simple idea from its heat-sink designs, Ohmite reports it has developed SMD wirewound resistors that meet 5W power ratings. The new design incorporates fins in the body of the resistor, creating an additional surface area within the same resistor footprint. The company offers the resistors in 5W and 7W versions, and because tests performed over



1000 hours of continuous operation demonstrated that the resistance drift was negligible (less than 1%), customers can specify very tight tolerances along with the new,

higher power ratings. A couple of fins have been removed to allow for a flat zone on the top center of the resistor to enable its use on pick-and-place equipment.

Ohmite, www.ohmite.com

Tiny audio transducer from Transducers USA delivers 80 dBA SPL

The Model TRSTE-5025 surface-mount audio transducer from Transducers USA produces a very high sound-pressure level (SPL) of 80 dBA minimum in a miniscule 5x5x2-mm package. The top port sound release of the TRSTE-5025 makes it suitable for handling the size constraints of




small, battery-operated products such as cell phones, handheld GPS units, and portable alarms. The device operates from a voltage range of 2 to 4Vp/p at 90 mA. Output frequency is 4000 Hz in an operating temperature range of -30°C to +85°C. The TRSTE-5025 transducers are shipped in a tape-and-reel package that is compatible with solder-reflow production. Pricing is \$0.90 each (production quantities).

Transducers USA, www.tusainc.com

Wirewound resistors from TT Electronics offer surge energy ratings up to 7W

With surge energy ratings ranging from 2 to 7W, the WHS series of flame-proof, wirewound resistors from TT Electronics is suitable for use in power supplies that require a line-input resistor for inrush limiting and protection. The WHS resistors feature a winding design in which a high-purity ceramic substrate is assembled with interference fit end-caps welded to the terminations. The resistive element is then wound on the substrate and welded

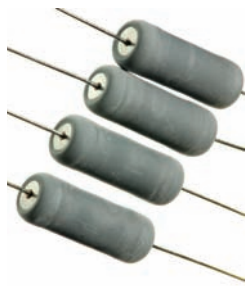

to the caps. The design enables the resistors to withstand the high surges associated with switch-on, discharge, and external surge events. The WHS2, rated at 2W, provides surge energy ratings of 0.9 to 5.8J. Other models in the series carry ratings of 3, 5, and 7W, in resistance values to 330Ω and surge energy ratings to 60J. All models have UL94-V0 flame-proof protection and operate over a temperature range of -55°C to +155°C.

TT Electronics, www.ttelectronics.com

Bulgin's push-pull coupling connectors withstand harsh environments


The Buccaneer 6000 Series of waterproof power, signal, and data connectors from Bulgin features an easy-to-use push-pull latching mechanism, combined with a 30° twist lock, that can connect up to 10 times faster than a traditional screw-thread mechanism. This latest addition to the Buccaneer family, which complements the screw-thread Buccaneer models, is designed to withstand the harshest environments and meets IP66, IP68, and IP69K standards. The Buccaneer 6000 Series includes data (USB or Ethernet), signal, and power versions up to 16A, 277V. Available in interchangeable metal and plastic constructions, the body moldings and pin carriers create a robust interface while avoiding damage during coupling. The company says this design guarantees a correctly sealed connection, even where access is restricted.



Bulgin, bulgin.co.uk

Multilayer capacitors from AVX target RF applications

The MLO3 Series surface-mount capacitors from AVX Corp are available in 500V dc and 250V dc versions that support frequencies ranging from 1 MHz to greater than 5 GHz. The polymer-based capacitors, which are based on AVX's multilayer low-loss organic (MLO) technology, use high-conductivity copper interconnects and are designed for RF power and low-noise amplifiers, filter networks, and MRI systems. The RoHS-compliant RF capacitors are rated for 50V dc to 500V dc and feature capacitance values ranging from 0.1 to 2.5 pF and capacitance tolerance

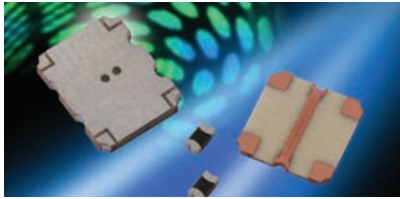

to ± 0.02 pF. AVX reports that the capacitors maintain high Q and high self-resonance while providing low ESR values at high frequencies. Available in the 0603 case size with a 100% tin finish, the MLO3 Series features stable NPO characteristics and an operating temperature range of -55°C to $+125^{\circ}\text{C}$.
AVX Corp, www.avx.com

IP&E/PASSIVES DATA SHEETS



Find data sheets on these and similar products searchable by category, part number, description, manufacturer, and more, at **www.datasheets.com**.

EDN ADVERTISER INDEX

Company	Page
Advanced Interconnections	7
Agilent Technologies	17, C-3
ARM Inc	57
Avnet	61
Avtech Electrosystems Ltd	65
Coilcraft	3
Digi-Key Corp	C-1, C-2
EMA Design Automation Inc	13
Emulation Technology	41
Epcos Inc	23
International Rectifier	8
Linear Technology	50A-50B, C-4
Maxim Integrated	53
Mill-Max Manufacturing	11
Mouser Electronics	6
Nallatech	45
National Instruments	4
Pico Electronics Inc	10, 31
Pico Technology	47
RF Monolithics Inc	33, 49
Rohde & Schwarz	15, 28, 39
Sealevel Systems Inc	43
Signal Consulting	40
Stanford Research Systems	21
UBM EDN	25, 27, 35, 55, 59


EDN provides this index as an additional service. The publisher assumes no liability for errors or omissions.

EDN productmart

This advertising is for new and current products.

40 & 300 ps Pulse Generators from AVTECH

Avtech has pioneered the design of subnano-second rise time pulse generators and now offers over 35 models which provide 40-300 ps rise times with 5 to 100 Volt output amplitude and PRF to 250 MHz. These models are ideal for testing high speed semiconductors and optoelectronics in both laboratory and factory floor applications. See www.avtechpulse.com/speed for details. Customized models are also available.

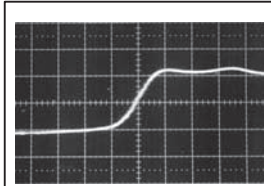

50 ps/DIV, 5V/DIV
Model AVP-35A-C



And Model AVI-V-HV2A-B provides a 100 Volt 300 ps rise time output!

Pricing, manuals, datasheets: www.avtechpulse.com

AVTECH ELECTROSYSTEMS LTD.
Tel: 888-670-8729 Fax: 800-561-1970
info@avtechpulse.com



CLASSIFIED

Textron Inc. has an opening in Charlotte, NC for Design Development Electrical Engineer to design hybrid & electro-hydraulic electric-powered turf care equipment & integrate assoc. systems & components. Requires BS in Electrical Eng. & 1 yr exp. Submit resumes online at www.textron.com/careers Job#211103. Must have legal auth. to work permanently in the US, EOE.

xG Technology, Inc. in Sunrise, FL seeks a Senior Digital Hardware Engineer to design, develop and test for the digital hardware blocks of xMAC system; document requirements, detailed designs and test plans; design and review the schematic and layout of the boards; provide FPGA design and test verification for the xMAC and basestations; interact with the RF engineers closely to test and evaluate the RF design performance; interact with the Firmware Development team closely to develop efficient embedded software; interact with the MAC and DSP Development team to design the overall PHY layer architecture; supervise a few engineers or technicians on assigned work. Applicants are required to have a Master's degree in Computer or Electrical Engineering; 1 year of direct experience in hardware design; technical proficiency in Digital/FPGA system design; High Speed FPGA RTL Design, Simulation, Synthesis, Place and Route, Timing Analysis, and Signal Integrity Verification; Real-time Embedded System Design and Development. xG will consider other job titles and any suitable combination of education, training and experience. Send resume to careers@xgtechnology.com.

Insperty Services, LP seeks a Sr. Software Release Engineer to work in Kingwood, Texas to be responsible for automation of software development lifecycle for retail software application products. Bachelor's degree and experience required. Apply online at www.insperty.com/careers, refer to requisition # 99-9999A.

xG Technology, Inc. in Sunrise, FL seeks a Principal Engineer-Wireless Protocols to mentor and lead a team of Software Engineers to design, develop and test xG's proprietary MAC Protocol for its Cognitive Radio Wireless Broadband Solution; document requirements, detailed designs and test plans; be responsible for activities of the team including task assignment, and status reporting; assist project manager with resourcing and estimation; design and develop algorithms for scheduling, resource allocation, mobility, adaptive modulation, security solutions like PKI, AAA and WPA; interface with hardware, DSP and Network teams to develop software that integrates across the system. Applicants are required to have a Master's degree in Computer Science or Electrical Engineering; two years of direct experience in software development; technical proficiency in wireless communication systems like WiFi/Ad-Hoc Networks; network protocols like TCP/IP, & UDP; Medium Access Control techniques like 802.11, 802.3, TDMA; security solutions like PKI, AAA and WPA; Queuing Theory concepts, Digital communication concepts like Digital modulation, Spectral efficiency and channel coding techniques. xG will consider other job titles and any suitable combination of education, training and experience. Send resume to careers@xgtechnology.com.

Rush-project troubleshooting comes down to the wire



In 1981, I needed a less expensive method for connecting ICs than the standard etched-copper PCB. I was looking for a method that would produce circuits faster than prototype PCB fabrication and that would allow many changes to be made quickly at low cost. I chose wire wrap, which was used a lot in that decade of digital circuits.

The wire-wrap process uses a motorized tool that wraps a small-gauge (30 AWG) wire tightly around each square IC socket post. The four square corners on the socket posts dig into the wire to provide a low-resistance electrical path. Little did I realize the troubleshooting problems that lurked ahead when I chose this manufacturing method.

The rush was on to wire a dozen board types for a prototype and production system. We chose a universal board with 12 rows of 100 wire-wrap pins. The 100 pins allowed the use of five DIP ICs with 20 leads, seven 14-pin ICs, or any combination not exceeding 100 pins.

Two technicians wired all of the boards using the wire-wrap method. With today's electronic cross-checking tools, we have come to expect 100% of our boards to work 100% of the time. Thirty years ago, we were getting only half the boards to work the first time.

To troubleshoot the faulty wire-wrap boards, we used a good board and traced the clock and other signals from the origination to the next IC. Was too much capacitance loading down the clock oscillation?

We did not have the problem Tracy Kidder describes in his book *The Soul of a New Machine*. Kidder relates a story in which short pieces of wire-wrap wire broke off, shorting various points together. Initial wraps might have been perfect, but when the unwrapped wires were used again, it was common for a half-inch piece of wire at the end to break off and fall into the maze of pins and wires, creating electrical havoc.

In our case, the oscillator ran on the faulty board, but the rest of the board did not function. To troubleshoot, we used a Tektronix 455 scope, putting the amplitude control on the variable setting and then looking at any 5, 12, or

15V signals within that one setting. In that fashion, we could look at an entire signal chain by just moving the scope probe and not adjusting the scope.

While troubleshooting, I heard a “pop” that sounded as if a circuit breaker or a polarized capacitor had exploded. I jumped back a few steps and then noticed the gaggle of engineers nearby who were trying to suppress their giggling. At my feet was the flexible cap of a plastic container—similar in size to the old 35-mm film canisters—that stored connector pins. The engineers had sprayed “freeze spray” into the container until the air and sides inside were at -50°C , then quickly capped the container and left it to sit at room temperature. After a few minutes, the air inside heated to room temperature, and the resultant pressure forced off the cap. Creative coworkers have always liked to “help” in difficult situations.

I rapidly moved the scope probe and looked at all the logic-level signals on the board's complement of ICs. At first glance, everything looked OK. I then went back and slowly examined each waveform. Instead of a large TTL-level voltage swing out of the 74LS04, I was getting a 2V swing. A closer look revealed logic levels of +5 and +3V dc. Even the ground pin was at 3V!

I carefully looked at the bottom of the board to examine the next IC in the signal path after the oscillator. Through the haystack of wires, I saw a wire on the V_{CC} (pin 14) going to +5V dc but did not see any wire on the ground (pin 7). The technician who had wired the boards made a habit of putting all the V_{CC} and ground connections on first. The other technician did not, however, and he had forgotten some of those ground connections. A quick wire wrap on each IC pin 7 to ground fixed the faulty boards.

So in this case of “haste makes waste,” I learned that though a schematic can be absolutely correct and perfect, it takes an entire team to produce a successful product. **EDN**

Bruce Bushey, now a test engineer, was an electronics hobbyist for many years before starting electrical-engineering classes at North Dakota State University (Fargo, ND).

**No other oscilloscope can touch it.
But you can.**



The oscilloscope experience redefined.

Agilent's next-generation oscilloscopes offer waveform update rates 20 times faster than the competition. With the latest capacitive touchscreen technology and innovative InfiniiScan Zone touch triggering, you haven't really experienced an oscilloscope until now.

**Agilent InfiniiVision
4000 X-Series Oscilloscopes**

- 200 MHz to 1.5 GHz
- 12.1-inch screen designed for touch
- InfiniiScan Zone touch triggering
- 1M waveforms/sec update rate
- Fully upgradable: bandwidth, MSO, dual-channel WaveGen, DVM, serial analysis including USB



Scan or visit
<http://qrs.ly/ey263t8>
to see a video demo

**Agilent and our
Distributor Network**
Right Instrument.
Right Expertise.
Delivered Right Now.

 **metrictest**
PART OF THE MICROLEASE GROUP
866-436-0887
www.metrictest.com/agilent

**Experience the difference.
See demos, app notes and more.**
www.metrictest.com/agilent/scope.jsp


© Agilent Technologies, Inc. 2012

Anticipate — Accelerate — Achieve



Agilent Technologies


You Can Do Offline Power

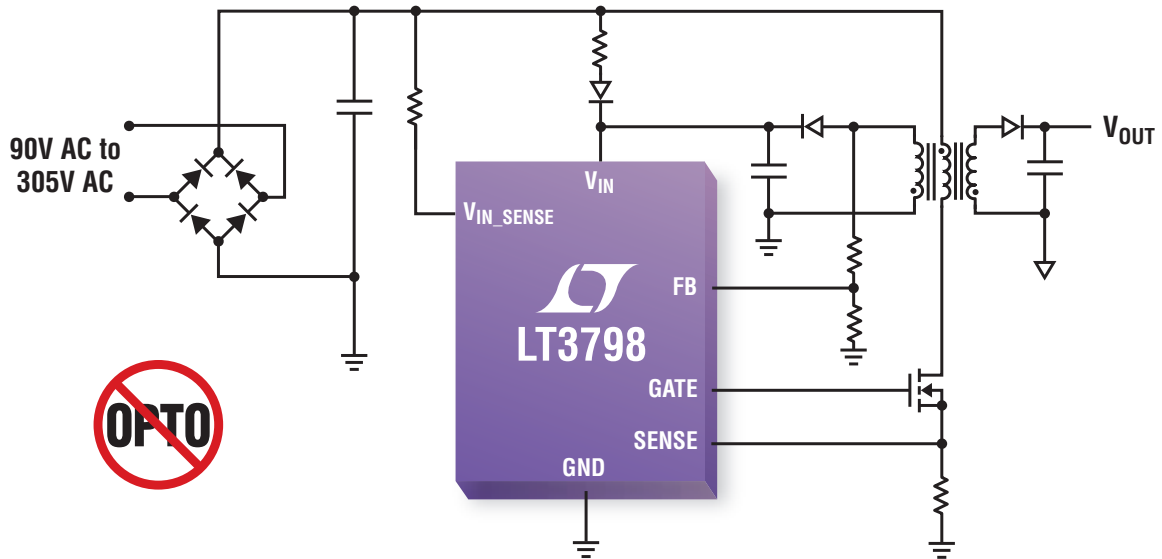

Simple AC/DC Conversion with Active Power Factor Correction

The LT[®]3798 is a general purpose isolated offline flyback controller that combines active power factor correction (PFC) with no optocoupler required for output voltage feedback into a single-stage converter. The device modulates input current in phase with line voltage to attain a PF greater than 0.97. It has both a voltage and current loop so it can provide a constant current or constant voltage (CCCV) output. Its internal architecture provides low harmonic distortion and delivers efficiencies as high as 90%.

Output Regulation

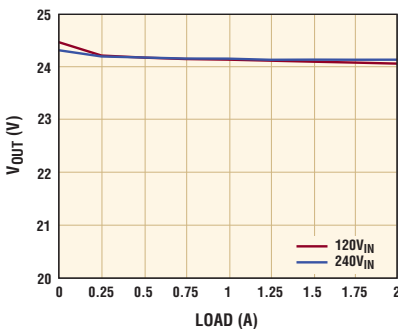

LT3798 Demo Board

(4.45" x 1.75" x 1.25")



V_{IN} = 90V AC to 265V AC
V_{OUT} = 24V, I_{OUT} = 2A

Info & Free Samples

www.linear.com/product/LT3798

1-800-4-LINEAR



video.linear.com/99

LT, LT, LTC, LTM, Linear Technology and the Linear logo are registered trademarks of Linear Technology Corporation. All other trademarks are the property of their respective owners.

