


Signal Processing Toolbox™

Getting Started Guide

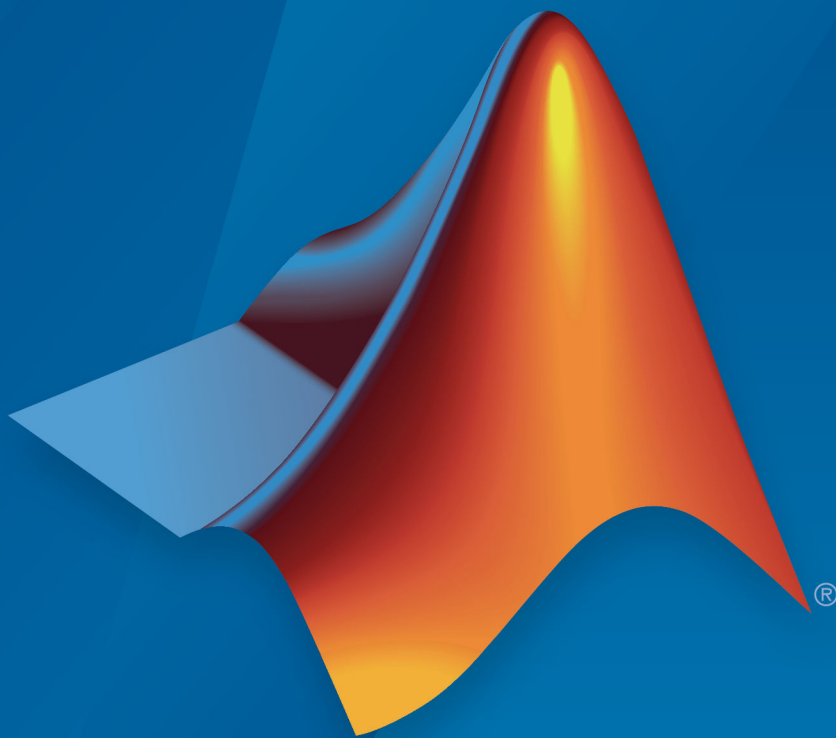

MATLAB®

R2019b

 MathWorks®

How to Contact MathWorks



Latest news: www.mathworks.com
Sales and services: www.mathworks.com/sales_and_services
User community: www.mathworks.com/matlabcentral
Technical support: www.mathworks.com/support/contact_us



Phone: 508-647-7000



The MathWorks, Inc.
1 Apple Hill Drive
Natick, MA 01760-2098

Signal Processing Toolbox™ Getting Started Guide

© COPYRIGHT 2006–2019 by The MathWorks, Inc.

The software described in this document is furnished under a license agreement. The software may be used or copied only under the terms of the license agreement. No part of this manual may be photocopied or reproduced in any form without prior written consent from The MathWorks, Inc.

FEDERAL ACQUISITION: This provision applies to all acquisitions of the Program and Documentation by, for, or through the federal government of the United States. By accepting delivery of the Program or Documentation, the government hereby agrees that this software or documentation qualifies as commercial computer software or commercial computer software documentation as such terms are used or defined in FAR 12.212, DFARS Part 227.72, and DFARS 252.227-7014. Accordingly, the terms and conditions of this Agreement and only those rights specified in this Agreement, shall pertain to and govern the use, modification, reproduction, release, performance, display, and disclosure of the Program and Documentation by the federal government (or other entity acquiring for or through the federal government) and shall supersede any conflicting contractual terms or conditions. If this License fails to meet the government's needs or is inconsistent in any respect with federal procurement law, the government agrees to return the Program and Documentation, unused, to The MathWorks, Inc.

Trademarks

MATLAB and Simulink are registered trademarks of The MathWorks, Inc. See www.mathworks.com/trademarks for a list of additional trademarks. Other product or brand names may be trademarks or registered trademarks of their respective holders.

Patents

MathWorks products are protected by one or more U.S. patents. Please see www.mathworks.com/patents for more information.

Revision History

September 2006	First printing	New for Version 6.6 (Release 2006b)
March 2007	Online only	Revised for Version 6.7 (Release 2007a)
September 2007	Online only	Revised for Version 6.8 (Release 2007b)
March 2008	Online only	Revised for Version 6.9 (Release 2008a)
October 2008	Online only	Revised for Version 6.10 (Release 2008b)
March 2009	Online only	Revised for Version 6.11 (Release 2009a)
September 2009	Online only	Revised for Version 6.12 (Release 2009b)
March 2010	Online only	Revised for Version 6.13 (Release 2010a)
September 2010	Online only	Revised for Version 6.14 (Release 2010b)
April 2011	Online only	Revised for Version 6.15 (Release 2011a)
September 2011	Online only	Revised for Version 6.16 (Release 2011b)
March 2012	Online only	Revised for Version 6.17 (Release 2012a)
September 2012	Online only	Revised for Version 6.18 (Release 2012b)
March 2013	Online only	Revised for Version 6.19 (Release 2013a)
September 2013	Online only	Revised for Version 6.20 (Release 2013b)
March 2014	Online only	Revised for Version 6.21 (Release 2014a)
October 2014	Online only	Revised for Version 6.22 (Release 2014b)
March 2015	Online only	Revised for Version 7.0 (Release 2015a)
September 2015	Online only	Revised for Version 7.1 (Release 2015b)
March 2016	Online only	Revised for Version 7.2 (Release 2016a)
September 2016	Online only	Revised for Version 7.3 (Release 2016b)
March 2017	Online only	Revised for Version 7.4 (Release 2017a)
September 2017	Online only	Revised for Version 7.5 (Release 2017b)
March 2018	Online only	Revised for Version 8.0 (Release 2018a)
September 2018	Online only	Revised for Version 8.1 (Release 2018b)
March 2019	Online only	Revised for Version 8.2 (Release 2019a)
September 2019	Online only	Revised for Version 8.3 (Release 2019b)

Overview

1

Signal Processing Toolbox Product Description	1-2
Key Features	1-2

Basic Signal Processing Concepts

2

Representing Signals	2-2
Numeric Arrays	2-2
Vector Representation	2-2
Waveform Generation: Time Vectors and Sinusoids	2-4
Impulse, Step, and Ramp Functions	2-6
Common Periodic Waveforms	2-9
Common Aperiodic Waveforms	2-11
The pulstran Function	2-14
The Sinc Function	2-16
The Dirichlet Function	2-18
Working with Data	2-20
Data Precision	2-20
Selected Bibliography	2-21

Design a Filter with fdesign and Filter Builder

3

Filter Design Process Overview	3-2
Design a Filter Using fdesign	3-3
Design a Filter Using Filter Builder	3-8

Filter Design with the Filter Designer App

4

Introduction	4-2
Designing the Filter	4-3
Analyzing the Filter	4-7
Designing Additional Filters	4-9
Viewing and Annotating the Filter	4-10
Viewing the Filter in FVTool	4-10
Using FVTool for Annotation	4-14
Exporting Filters from Filter Designer	4-16
Filtering with dfilt	4-17
Designing Filters Using Command Line Functions	4-20

Overview

Signal Processing Toolbox Product Description

Perform signal processing and analysis

Signal Processing Toolbox provides functions and apps to analyze, preprocess, and extract features from uniformly and nonuniformly sampled signals. The toolbox includes tools for filter design and analysis, resampling, smoothing, detrending, and power spectrum estimation. The toolbox also provides functionality for extracting features like changepoints and envelopes, finding peaks and signal patterns, quantifying signal similarities, and performing measurements such as SNR and distortion. You can also perform modal and order analysis of vibration signals.

With the Signal Analyzer app you can preprocess and analyze multiple signals simultaneously in time, frequency, and time-frequency domains without writing code; explore long signals; and extract regions of interest. With the Filter Designer app you can design and analyze digital filters by choosing from a variety of algorithms and responses. Both apps generate MATLAB® code.

Key Features

- Signal Analyzer App for visualizing and comparing signals simultaneously in time, frequency, and time-frequency domains
- FIR and IIR filter design and analysis
- Algorithms for finding signal similarities, envelopes, patterns, changepoints, peaks, and outliers
- Measurements such as transition and pulse metrics, band power, bandwidth, and distortion
- Power spectrum estimation of uniformly and nonuniformly sampled data
- Order analysis of vibration signals and modal analysis of mechanical systems

Basic Signal Processing Concepts

- “Representing Signals” on page 2-2
- “Waveform Generation: Time Vectors and Sinusoids” on page 2-4
- “Impulse, Step, and Ramp Functions” on page 2-6
- “Common Periodic Waveforms” on page 2-9
- “Common Aperiodic Waveforms” on page 2-11
- “The pulstran Function” on page 2-14
- “The Sinc Function” on page 2-16
- “The Dirichlet Function” on page 2-18
- “Working with Data” on page 2-20
- “Selected Bibliography” on page 2-21

Representing Signals

In this section...
“Numeric Arrays” on page 2-2
“Vector Representation” on page 2-2

Numeric Arrays

The central data construct in the MATLAB environment is the *numeric array*, an ordered collection of real or complex numeric data with two or more dimensions. The basic data objects of signal processing (one-dimensional signals or sequences, multichannel signals, and two-dimensional signals) are all naturally suited to array representation.

Vector Representation

MATLAB represents ordinary one-dimensional sampled data signals, or sequences, as *vectors*. Vectors are 1-by- n or n -by-1 arrays, where n is the number of samples in the sequence. One way to introduce a sequence is to enter it as a list of elements at the command prompt. The statement

```
x = [4 3 7 -9 1];
```

creates a simple five-element real sequence in a row vector. Transposition turns the sequence into a column vector

```
x = x';
```

```
x =  
 4  
 3  
 7  
-9  
 1
```

Column orientation is preferable for single channel signals because it extends naturally to the multichannel case. For multichannel data, each column of a matrix represents one channel. Each row of such a matrix then corresponds to a sample point. A three-channel signal that consists of x , $2x$, and x/π is

```
y = [x 2*x x/pi]
```

```
y =  
 4.0000    8.0000    1.2732  
 3.0000    6.0000    0.9549  
 7.0000   14.0000    2.2282  
 -9.0000  -18.0000   -2.8648  
 1.0000    2.0000    0.3183
```

If the sequence has complex-valued elements, the transpose operator takes the conjugate of the sequence elements. To transform a complex-valued row vector into a column vector without taking conjugates, use the `.'` or non-conjugate transpose:

```
x = [1-i 3+i 2+3*i 4-2*i]; % 1-by-4 vector  
x = x.'; % 4-by-1 vector
```

Waveform Generation: Time Vectors and Sinusoids

Most toolbox functions require you to begin with a vector representing a time base. Consider generating data with a 1000 Hz sample frequency, for example. An appropriate time vector is

```
t = (0:0.001:1)';
```


where the MATLAB® colon operator (:) creates a 1001-element row vector that represents time running from 0 to 1 seconds in steps of 1 ms. The transpose operator (') changes the row vector into a column; the semicolon (;) tells MATLAB to compute, but not display, the result.

Given **t**, you can create a sample signal **y** consisting of two sinusoids, one at 50 Hz and one at 120 Hz with twice the amplitude.

```
y = sin(2*pi*50*t) + 2*sin(2*pi*120*t);
```

The new variable **y**, formed from vector **t**, is also 1001 elements long. You can add normally distributed white noise to the signal and plot the first 50 points:

```
yn = y + 0.5*randn(size(t));  
plot(t(1:50),yn(1:50))
```

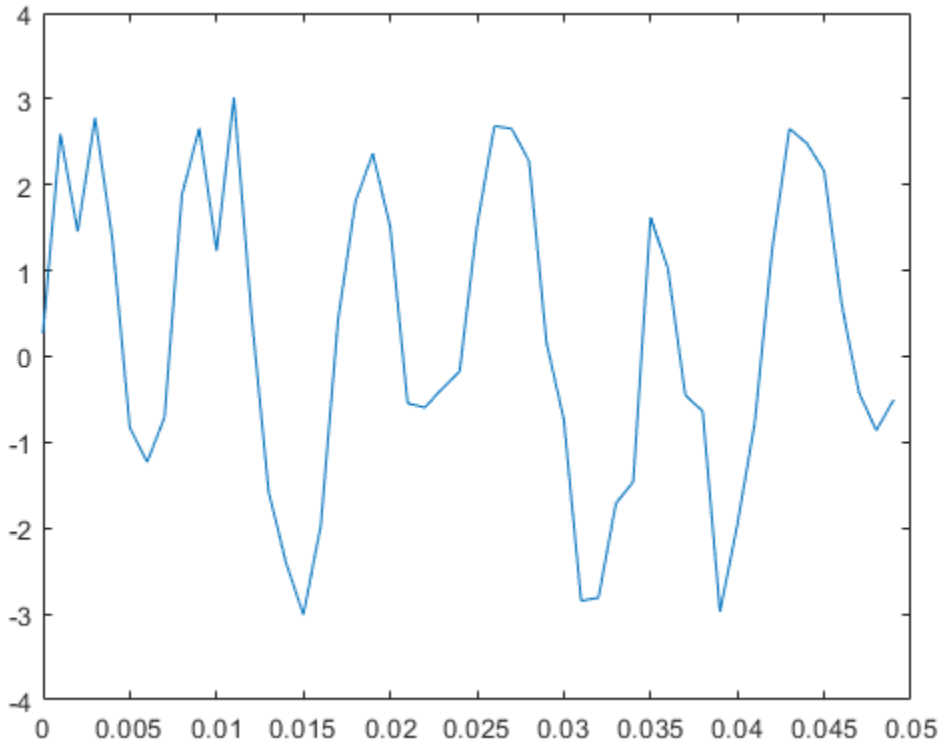


Impulse, Step, and Ramp Functions

Since MATLAB® is a programming language, an endless variety of different signals is possible. Here are some statements that generate a unit impulse, a unit step, a unit ramp, and a unit parabola.

```
t = (-1:0.01:1)';  
  
impulse = t==0;  
unitstep = t>=0;  
ramp = t.*unitstep;  
quad = t.^2.*unitstep;
```


All of these sequences are column vectors that inherit their shapes from **t**. Plot the sequences.

```
plot(t,[impulse unitstep ramp quad])
```

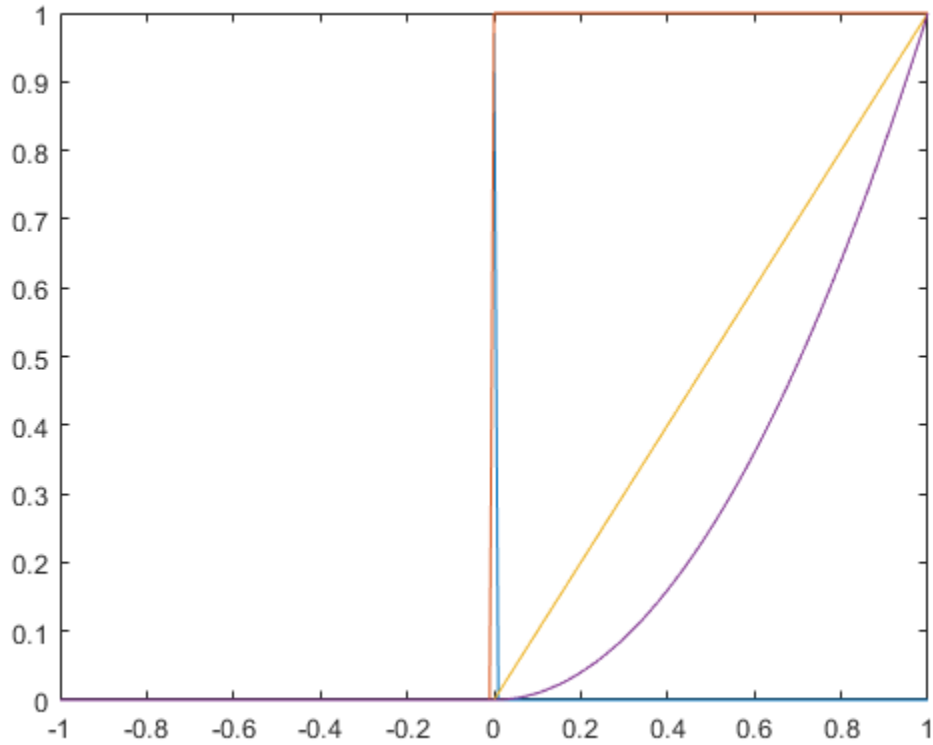

Generate and plot a square wave with period 0.5 and amplitude 0.81.

```
sqwave = 0.81*square(4*pi*t);  
plot(t,sqwave)
```

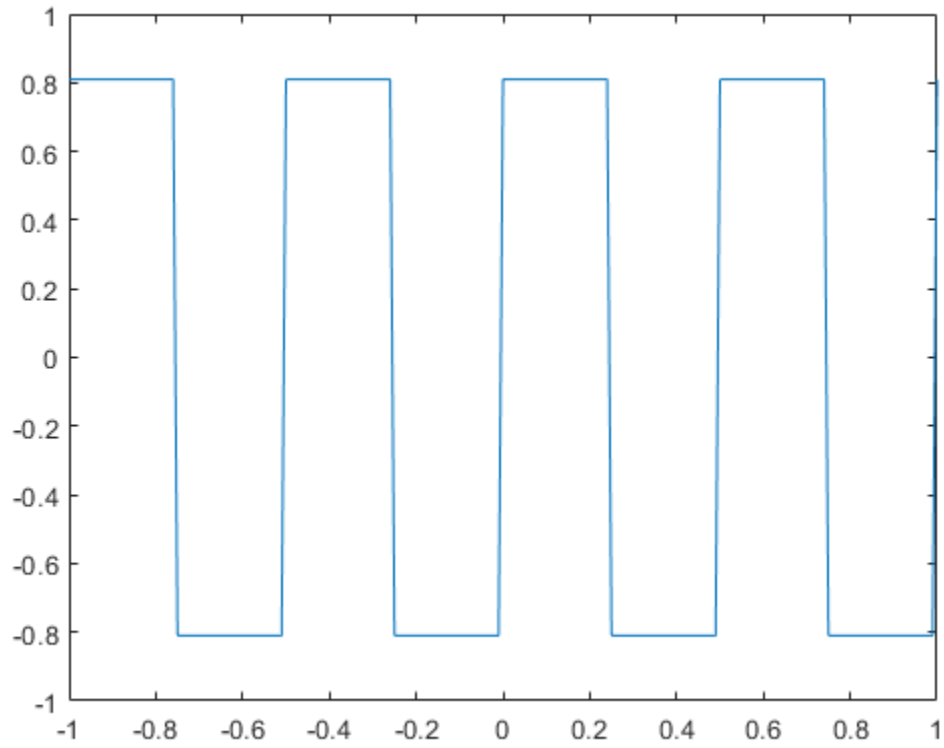


Common Periodic Waveforms

The toolbox provides functions for generating widely used periodic waveforms:

- `sawtooth` generates a sawtooth wave with peaks at ± 1 and a period of 2π . An optional width parameter specifies a fractional multiple of 2π at which the signal maximum occurs.
- `square` generates a square wave with a period of 2π . An optional parameter specifies the *duty cycle*, the percent of the period for which the signal is positive.

To generate 1.5 seconds of a 50 Hz sawtooth wave with a sample rate of 10 kHz and plot 0.2 seconds of the generated waveform, use

```
fs = 10e3;  
t = 0:1/fs:1.5;  
x = sawtooth(2*pi*50*t);  
  
plot(t,x)  
axis([0 0.2 -1 1])
```

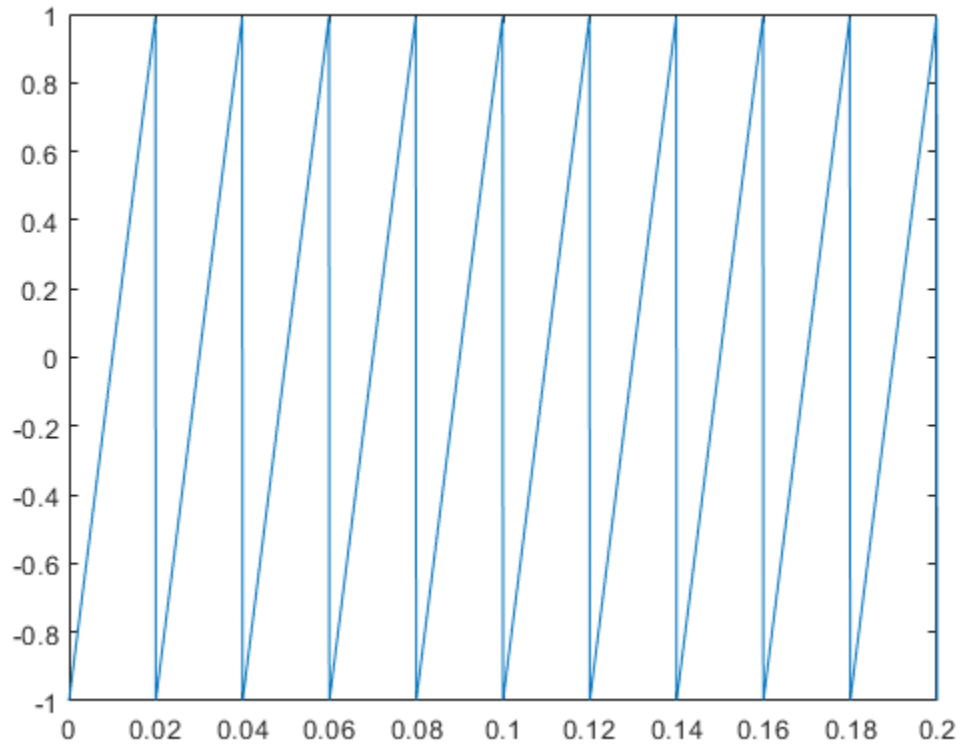

Common Aperiodic Waveforms

The toolbox also provides functions for generating several widely used aperiodic waveforms:


- `gauspuls` generates a Gaussian-modulated sinusoidal pulse with a specified time, center frequency, and fractional bandwidth. Optional parameters return in-phase and quadrature pulses, the RF signal envelope, and the cutoff time for the trailing pulse envelope.
- `chirp` generates a linear, log, or quadratic swept-frequency cosine signal. An optional parameter specifies alternative sweep methods. An optional parameter, `phi`, allows initial phase to be specified in degrees.

To compute 2 seconds of a linear chirp signal with a sample rate of 1 kHz that starts at DC and crosses 150 Hz at 1 second, use:

```
t = 0:1/1000:2;  
y = chirp(t,0,1,150);
```


Plot the spectrogram of the chirp.

```
spectrogram(y,256,250,256,1000, 'yaxis')
```

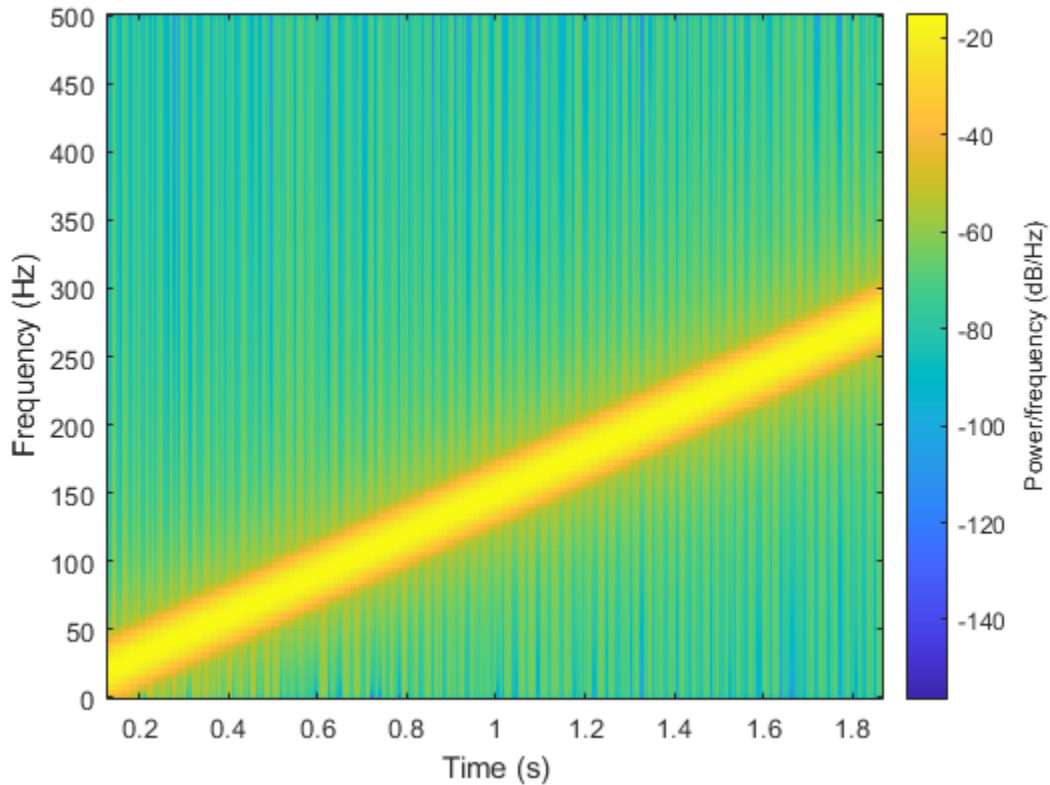

Use `gauspuls` to plot a 50 kHz Gaussian RF pulse with 60% bandwidth, sampled at a rate of 1 MHz. Truncate the pulse where the envelope falls 40 dB below the peak.


```
tc = gauspuls('cutoff',50e3,0.6,[],-40);  
t = -tc : 1e-6 : tc;  
yi = gauspuls(t,50e3,0.6);  
plot(t,yi)
```

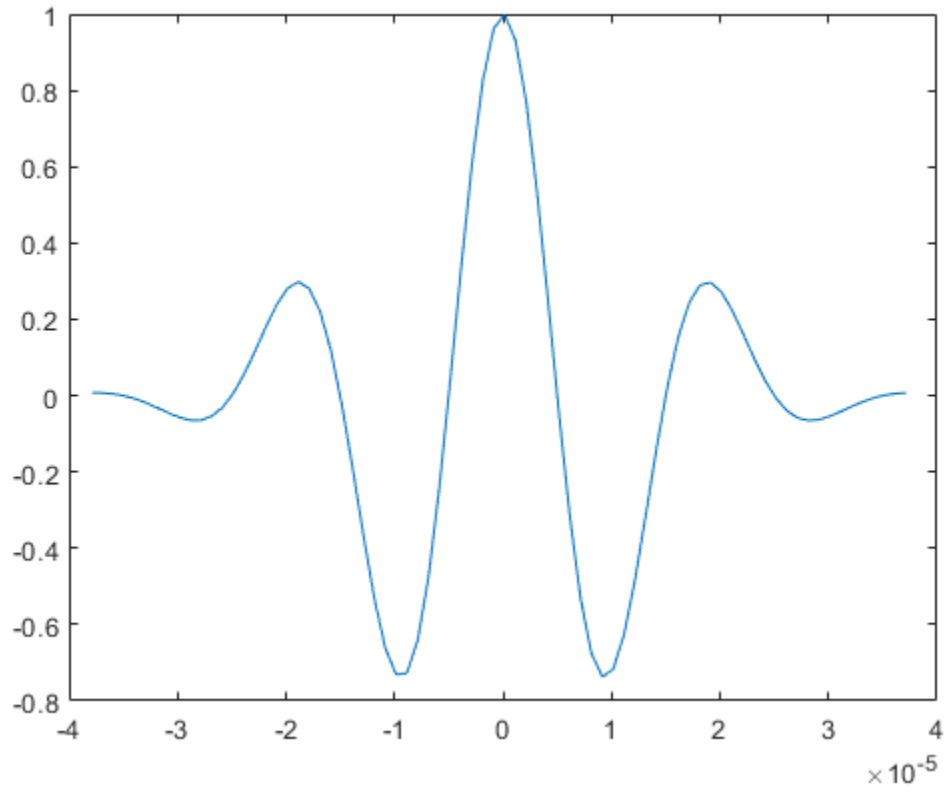

The pulstran Function

The `pulstran` function generates pulse trains from either continuous or sampled prototype pulses. The following example generates a pulse train consisting of the sum of multiple delayed interpolations of a Gaussian pulse. The pulse train is defined to have a sample rate of 50 kHz, a pulse train length of 10 ms, and a pulse repetition rate of 1 kHz; `D` specifies the delay to each pulse repetition in column 1 and an optional attenuation for each repetition in column 2. The pulse train is constructed by passing the name of the `gauspuls` function to `pulstran`, along with additional parameters that specify a 10 kHz Gaussian pulse with 50% bandwidth:

```
T = 0:1/50e3:10e-3;  
D = [0:1/1e3:10e-3;0.8.^(0:10)]';  
Y = pulstran(T,D,'gauspuls',10e3,0.5);  
plot(T,Y)
```

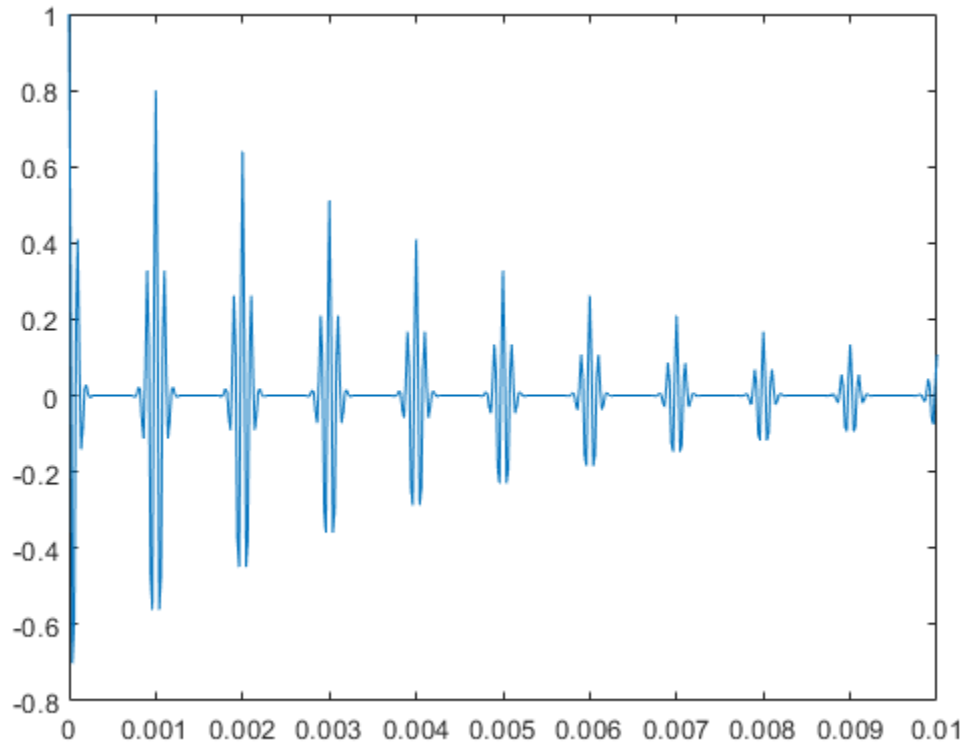


The Sinc Function

The `sinc` function computes the mathematical sinc function for an input vector or matrix x . Viewed as a function of time, or space, the sinc function is the inverse Fourier transform of the rectangular pulse in frequency centered at zero, with width 2π and unit height:

$$\text{sinc } x = \frac{1}{2\pi} \int_{-\pi}^{\pi} e^{j\omega x} d\omega = \begin{cases} \frac{\sin \pi x}{\pi x}, & x \neq 0, \\ 1, & x = 0. \end{cases}$$

To plot the sinc function for a linearly spaced vector with values ranging from -5 to 5 , use these commands:

```
x = linspace(-5,5);  
y = sinc(x);  
plot(x,y)  
grid
```

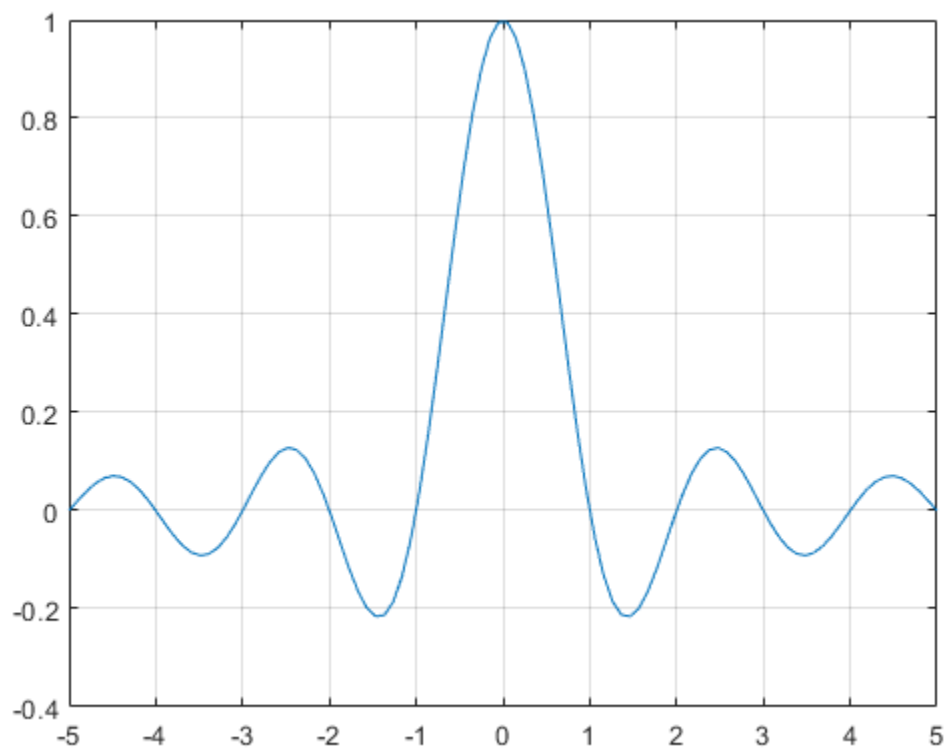See Also

`diric` | `sinc`

The Dirichlet Function

The function `diric` computes the Dirichlet function, sometimes called the *periodic sinc* or *aliased sinc* function, for an input vector or matrix x . The Dirichlet function is defined by

$$D(x) = \begin{cases} \frac{\sin(Nx/2)}{N\sin(x/2)}, & x \neq 2\pi k, \\ (-1)^{k(N-1)}, & x = 2\pi k, \end{cases} \quad k = 0, \pm 1, \pm 2, \pm 3, \dots$$


where N is a user-specified positive integer. For N odd, the Dirichlet function has a period of 2π ; for N even, its period is 4π . The magnitude of this function is $1/N$ times the magnitude of the discrete-time Fourier transform of the N -point rectangular window.

To plot the Dirichlet function between 0 and 4π for $N = 7$ and $N = 8$, use

```
x = linspace(0,4*pi,300);
```

```
subplot(2,1,1)
plot(x/pi,diric(x,7))
title('N = 7')
```

```
subplot(2,1,2)
plot(x/pi,diric(x,8))
title('N = 8')
xlabel('x / \pi')
```

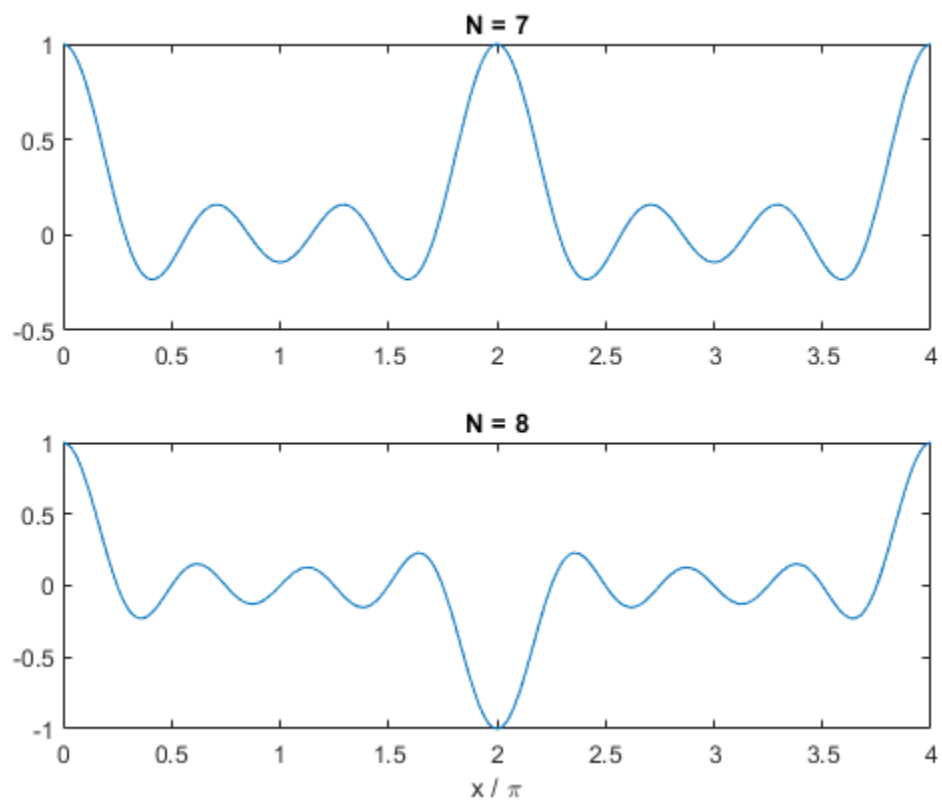

See Also
diric | sinc

Working with Data

Data Precision

All Signal Processing Toolbox functions accept double-precision inputs. If you input single-precision floating-point or integer data types, you should not expect to receive correct results and in many cases, an error will occur. DSP System Toolbox™ and Fixed-Point Designer™ products enable single-precision floating-point and fixed-point support for most `dfilt` structures.

Selected Bibliography

Algorithm development for Signal Processing Toolbox functions has drawn heavily upon the references listed below. All are recommended to the interested reader who needs to know more about signal processing than is covered in this manual.

References

- [1] Crochiere, R. E., and Lawrence R. Rabiner. *Multi-Rate Signal Processing*. Englewood Cliffs, NJ: Prentice Hall, 1983. pp. 88-91.
- [2] IEEE. *Programs for Digital Signal Processing*. IEEE Press. New York: John Wiley & Sons, 1979.
- [3] Jackson, L. B. *Digital Filters and Signal Processing*. Third Ed. Boston: Kluwer Academic Publishers, 1989.
- [4] Kay, Steven M. *Modern Spectral Estimation*. Englewood Cliffs, NJ: Prentice Hall, 1988.
- [5] Oppenheim, Alan V., and Ronald W. Schaffer. *Discrete-Time Signal Processing*. Englewood Cliffs, NJ: Prentice Hall, 1989.
- [6] Parks, Thomas W., and C. Sidney Burrus. *Digital Filter Design*. New York: John Wiley & Sons, 1987.
- [7] Percival, D. B., and A. T. Walden. *Spectral Analysis for Physical Applications: Multitaper and Conventional Univariate Techniques*. Cambridge: Cambridge University Press, 1993.
- [8] Pratt, W. K. *Digital Image Processing*. New York: John Wiley & Sons, 1991.
- [9] Proakis, John G., and Dimitris G. Manolakis. *Digital Signal Processing: Principles, Algorithms, and Applications*. Upper Saddle River, NJ: Prentice Hall, 1996.
- [10] Rabiner, Lawrence R., and Bernard Gold. *Theory and Application of Digital Signal Processing*. Englewood Cliffs, NJ: Prentice Hall, 1975.
- [11] Welch, P. D. "The Use of Fast Fourier Transform for the Estimation of Power Spectra: A Method Based on Time Averaging Over Short, Modified Periodograms." *IEEE® Transactions on Audio and Electroacoustics*. Vol. AU-15, 1967. pp. 70-73.

Design a Filter with fdesign and Filter Builder

- “Filter Design Process Overview” on page 3-2
- “Design a Filter Using fdesign” on page 3-3
- “Design a Filter Using Filter Builder” on page 3-8

Filter Design Process Overview

Note You must have the Signal Processing Toolbox installed to use `fdesign` and `filterBuilder`. Advanced capabilities are available if your installation additionally includes the DSP System Toolbox license. You can verify the presence of both toolboxes by typing `ver` at the command prompt.

Filter design through user-defined specifications is the core of the `fdesign` approach. This specification-centric approach places less emphasis on the choice of specific filter algorithms, and more emphasis on performance during the design a good working filter. For example, you can take a given set of design parameters for the filter, such as a stopband frequency, a passband frequency, and a stopband attenuation, and— using these parameters— design a specification object for the filter. You can then implement the filter using this specification object. Using this approach, it is also possible to compare different algorithms as applied to a set of specifications.

There are two distinct objects involved in filter design:

- Specification Object — Captures the required design parameters of a filter
- Implementation Object — Describes the designed filter; includes the array of coefficients and the filter structure

The distinction between these two objects is at the core of the filter design methodology. The basic attributes of each of these objects are outlined in the following table.

Specification Object	Implementation Object
High-level specification	Filter coefficients
Algorithmic properties	Filter structure

You can run the code in the following examples from the Help browser (select the code, right-click the selection, and choose **Evaluate Selection** from the context menu), or you can enter the code on the MATLAB command line. Before you begin this example, start MATLAB and verify that you have installed the Signal Processing Toolbox software. If you wish to access the full functionality of `fdesign` and `filterBuilder`, you should additionally obtain the DSP System Toolbox software. You can verify the presence of these products by typing `ver` at the command prompt.


Design a Filter Using fdesign

Use the following two steps to design a simple filter.

- 1 Create a filter specification object.
- 2 Design your filter.

Example 3.1. Design a Filter in Two Steps

Assume that you want to design a bandpass filter. Typically a bandpass filter is defined as shown in the following figure.

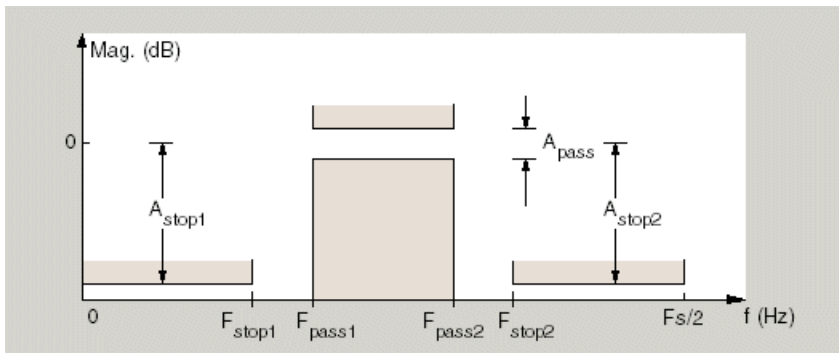

In this example, a sampling frequency of $F_s = 48$ kHz is used. This bandpass filter has the following specifications, specified here using MATLAB code:

```
A_stop1 = 60;           % Attenuation in the first stopband = 60 dB
F_stop1 = 8400;         % Edge of the stopband = 8400 Hz
F_pass1 = 10800;        % Edge of the passband = 10800 Hz
F_pass2 = 15600;        % Closing edge of the passband = 15600 Hz
F_stop2 = 18000;        % Edge of the second stopband = 18000 Hz
A_stop2 = 60;           % Attenuation in the second stopband = 60 dB
A_pass = 1;             % Amount of ripple allowed in the passband = 1 dB
```

In the following two steps, these specifications are passed to the `fdesign.bandpass` method as parameters.

Step 1

To create a filter specification object, evaluate the following code at the MATLAB prompt:

```
d = fdesign.bandpass
```

Now, pass the filter specifications that correspond to the default Specification — `fst1,fp1,fp2,fst2,ast1,ap,ast2`. This example adds `fs` as the final input argument to specify the sampling frequency of 48 kHz.

```
>> BandPassSpecObj = ...  
    fdesign.bandpass('Fst1,Fp1,Fp2,Fst2,Ast1,Ap,Ast2', ...  
        F_stop1, F_pass1, F_pass2, F_stop2, A_stop1, A_pass, ...  
        A_stop2, 48000)
```

Note The order of the filter is not specified, allowing a degree of freedom for the algorithm design in order to achieve the specification. The design will be a minimum order design.

The specification parameters, such as `Fstop1`, are all given default values when none are provided. You can change the values of the specification parameters after the filter specification object has been created. For example, if there are two values that need to be changed, `Fpass2` and `Fstop2`, use the `set` command, which takes the object first, and then the parameter value pairs. Evaluate the following code at the MATLAB prompt:

```
>> set(BandPassSpecObj, 'Fpass2', 15800, 'Fstop2', 18400)
```

`BandPassSpecObj` is the new filter specification object which contains all the required design parameters, including the filter type.

You may also change parameter values in filter specification objects by accessing them as if they were elements in a `struct` array.

```
>> BandPassSpecObj.Fpass2=15800;
```

Step 2

Design the filter by using the `design` command. You can access the design methods available for your specification object by calling the `designmethods` function. For example, in this case, you can execute the command

```
>> designmethods(BandPassSpecObj)
```

```
Design Methods for class  
fdesign.bandpass (Fst1,Fp1,Fp2,Fst2,Ast1,Ap,Ast2):
```

```
butter  
cheby1  
cheby2  
ellip  
equiripple  
kaiserwin
```

After choosing a design method use, you can evaluate the following at the MATLAB prompt (this example assumes you've chosen 'equiripple'):

```
>> BandPassFilt = design(BandPassSpecObj, 'equiripple')
```

```
BandPassFilt =
```

```
    FilterStructure: 'Direct-Form FIR'  
      Arithmetic: 'double'  
      Numerator: [1x44 double]  
 PersistentMemory: false
```

If you have the DSP System Toolbox installed, you can also design your filter with a filter System object™. To create a filter System object with the same specification object BandPassSpecObj, you can execute the commands

```
>> designmethods(BandPassSpecObj,...  
'SystemObject',true)
```

```
Design Methods that support System objects for class  
fdesign.bandpass (Fst1,Fp1,Fp2,Fst2,Ast1,Ap,Ast2):
```

```
butter  
cheby1  
cheby2  
ellip  
equiripple  
kaiserwin
```

```
>> BandPassFiltSysObj = design(BandPassSpecObj,...
```

```
'equiripple','SystemObject',true)

System: dsp.FIRFilter

Properties:
    Structure: 'Direct form'
    NumeratorSource: 'Property'
    Numerator: [1x44 double]
    InitialConditions: 0
    FrameBasedProcessing: true

Show fixed-point properties
```

Available design methods and design options for filter System objects are not necessarily the same as those for filter objects.

Note If you do not specify a design method, a default method will be used. For example, you can execute the command

```
>> BandPassFilt = design(BandPassSpecObj)
```

```
BandPassFilt =


    FilterStructure: 'Direct-Form FIR'
    Arithmetic: 'double'
    Numerator: [1x44 double]
    PersistentMemory: false
```

and a design method will be selected automatically.

To check your work, you can plot the filter magnitude response using the Filter Visualization tool. Verify that all the design parameters are met:

```
>> fvtool(BandPassFilt) %plot the filter magnitude response
```

If you have the DSP System Toolbox installed, the Filter Visualization tool produces the following figure with the dashed red lines indicating the transition bands and unity gain (0 in dB) over the passband.

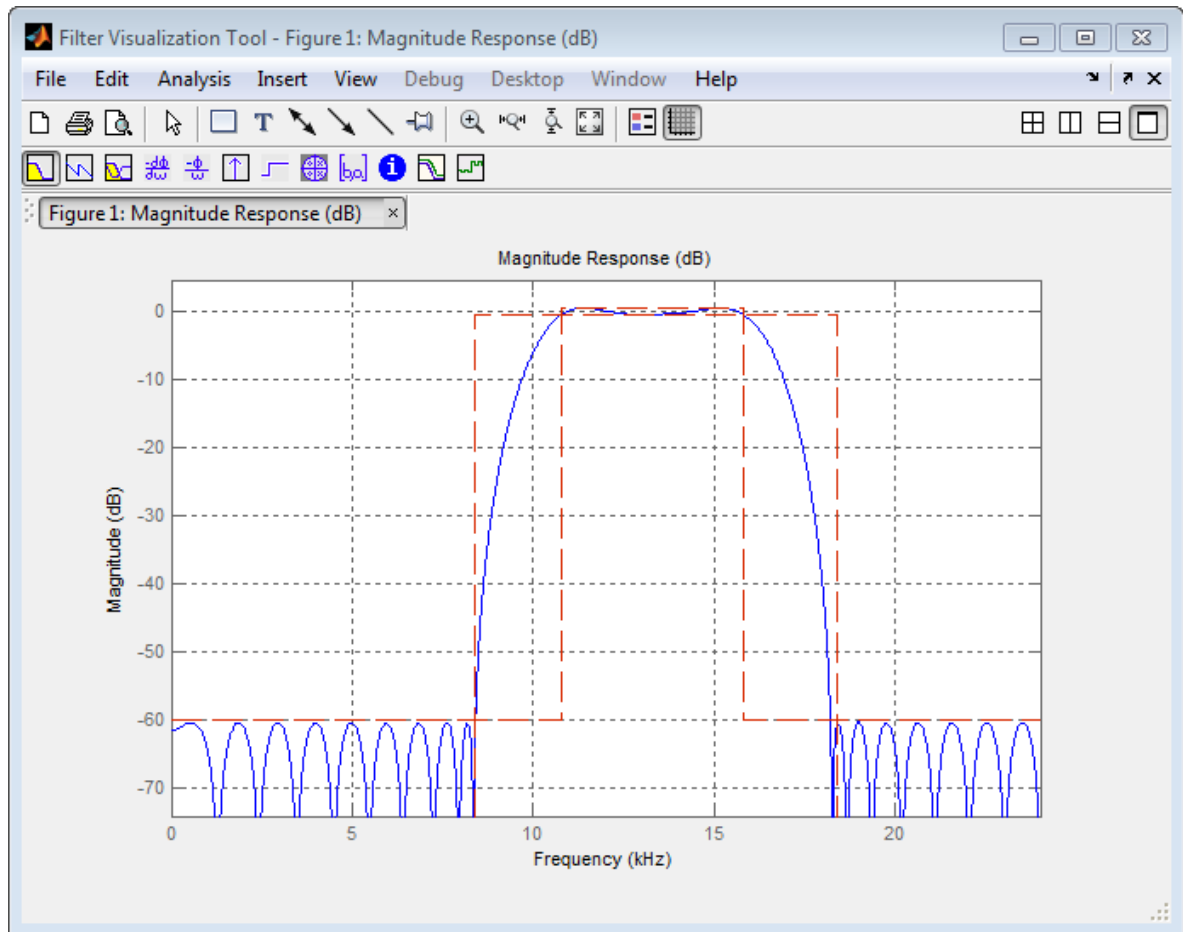

Design a Filter Using Filter Builder

Filter Builder presents the option of designing a filter using a GUI dialog box as opposed to the command line instructions. You can use Filter Builder to design the same bandpass filter designed in the previous section, “Design a Filter Using fdesign” on page 3-3

Example 3.2. Design a Simple Filter in Filter Builder

To design the filter using the Filter Builder GUI:

- 1 Type the following at the MATLAB prompt:

```
filterBuilder
```


- 2 Select Bandpass filter response from the list in the dialog box, and hit the **OK** button.
- 3 Enter the correct frequencies for **Fpass2** and **Fstop2**, then click **OK**. Here the specification uses normalized frequency, so that the passband and stopband edges are expressed as a fraction of the Nyquist frequency (in this case, 48/2 kHz). The following message appears at the MATLAB prompt:

```
The variable 'Hbp' has been exported to the command window.
```

If you display the Workspace tab, you see the object Hbp has been placed on your workspace.

- 4 To check your work, plot the filter magnitude response using the Filter Visualization tool. Verify that all the design parameters are met:

```
fvtool(Hbp) %plot the filter magnitude response
```

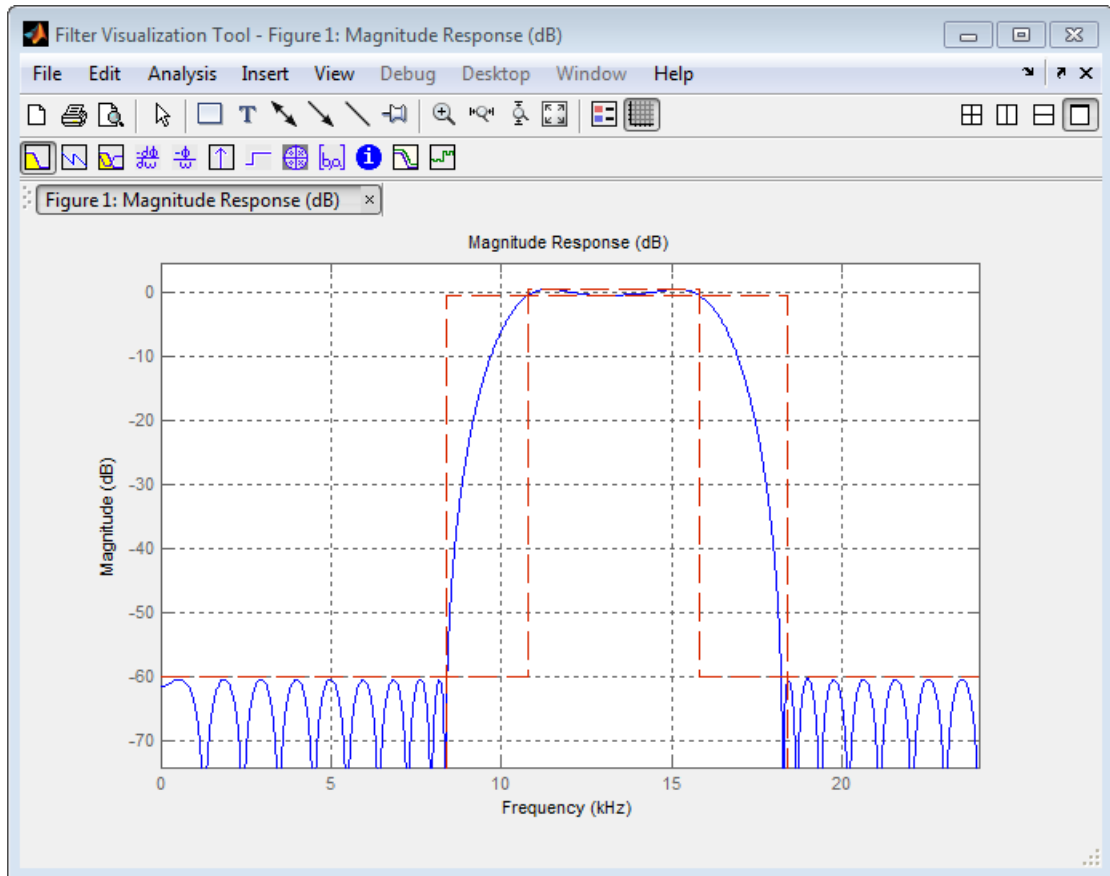

Note that the dashed red lines on the preceding figure will only appear if you are using the DSP System Toolbox software.

Filter Design with the Filter Designer App

- “Introduction” on page 4-2
- “Designing the Filter” on page 4-3
- “Analyzing the Filter” on page 4-7
- “Designing Additional Filters” on page 4-9
- “Viewing and Annotating the Filter” on page 4-10
- “Exporting Filters from Filter Designer” on page 4-16
- “Designing Filters Using Command Line Functions” on page 4-20

Introduction

This section describes how to graphically design and implement digital filters using Signal Processing Toolbox. Filter design is the process of creating the filter coefficients to meet specific frequency specifications. Filter implementation involves choosing and applying a particular filter structure to those coefficients. Only after both design and implementation have been performed can your data be filtered.

This section includes a brief discussion of applying the completed filter design and filter implementation using MATLAB command line functions, such as `filter`.


Designing the Filter

This section is a step-by-step introduction to using the **Filter Designer** app to design an octave-band filter. An octave is the interval between two frequencies having a ratio of 2:1. An octave-band filter is a bandpass filter with high cutoff frequency approximately twice that of the low cutoff frequency. The class of an octave filter is determined by its allowable passband ripple and its stopband attenuation. Refer to the ANSI S1.11–2004 standard for more information.

- 1 Start the app from the MATLAB command line.

```
filterDesigner
```

The app opens with a default filter. Its filter information is summarized in the upper left (**Current Filter Information**) and its filter specifications are depicted in the upper right. In addition to displaying filter specification, this upper right pane displays filter responses and filter coefficients.

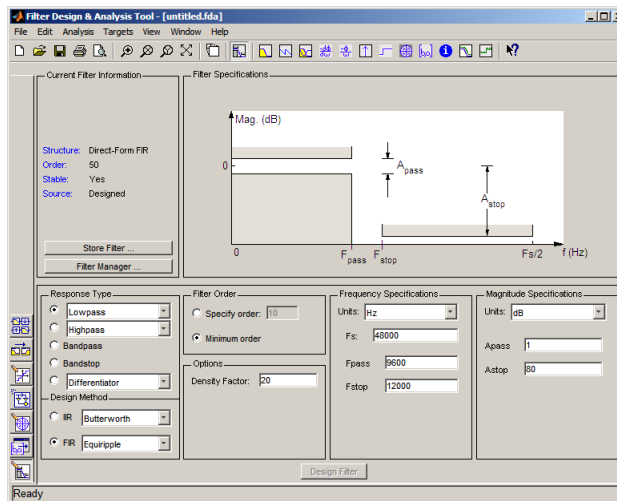

The bottom half of the app shows the Filter Design panel, where you specify the filter parameters. Other panels, such as Import filter from workspace and Pole/Zero Editor, which you access with the buttons on the lower left, are also displayed in this area. If you have other products installed, you may see additional buttons.

Note that when you open the app, **Design Filter** is not enabled. You must make a change to the default filter design in order to enable **Design Filter**. This is true each

time you want to change the filter design. Changes to radio button items or drop down menu items such as those under **Response Type** or **Filter Order** enable **Design Filter** immediately. Changes to specifications in text boxes such as **Fs**, **Fpass**, and **Fstop** require you to click outside the text box to enable **Design Filter**.

- 2 In the **Response Type** pane, select **Bandpass**.
- 3 In the **Design Method** pane, select **IIR**, and then select Butterworth from the selection list.

The image shows two panes from the Filter Designer app. The top pane, titled "Response Type", contains four radio button options: "Lowpass", "Highpass", "Bandpass" (which is selected), and "Bandstop". Each radio button is accompanied by a dropdown menu. The bottom pane, titled "Design Method", contains two radio button options: "IIR" (which is selected) and "FIR". Each radio button is accompanied by a dropdown menu. In the "IIR" section, the dropdown menu is set to "Butterworth".

- 4 For the Filter Order, select **Specify order**, and then enter 6.

The image shows the "Filter Order" pane. It has two radio button options: "Specify order" (which is selected) and "Minimum order". Next to the "Specify order" radio button is a text box containing the number "6".

- 5 Set the Frequency Specifications as follows:

Parameter	Setting	Description
Units	Hz	Units for the parameters
Fs	48000	Sampling frequency
Fc1	22	First cutoff frequency (i.e., the frequency preceding the passband at which the magnitude response is 3 dB below the passband gain)

Parameter	Setting	Description
Fc2	45	Second cutoff frequency (i.e., the frequency following the passband at which the magnitude response is 3 dB below the passband gain)

Frequency Specifications

Units:

Fs:


Fc1:

Fc2:

Magnitude Specifications


The attenuation at cutoff frequencies is fixed at 3 dB (half the passband power)

- After specifying the filter design parameters, click the **Design Filter** button at the bottom of the design panel to compute the filter coefficients. The display updates to show the magnitude response of the designed filter.

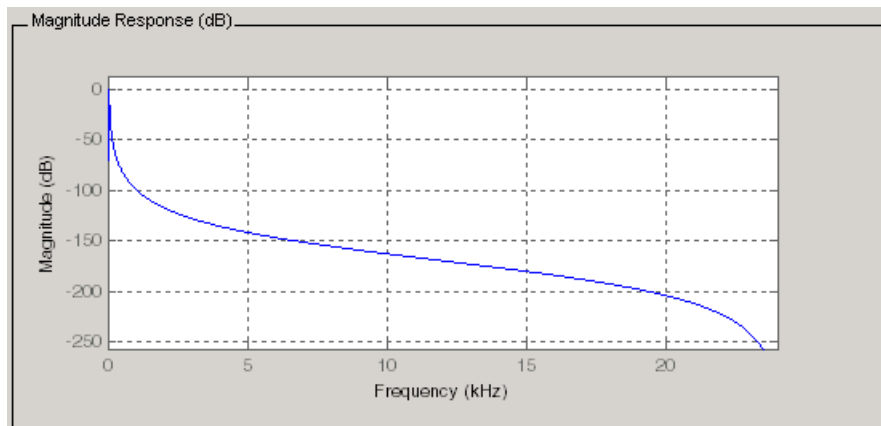


Notice that the **Design Filter** button is disabled after you compute the coefficients for your filter design. This button is enabled again if you make any changes to the filter specifications.

- 7 Click the **Store Filter** button.

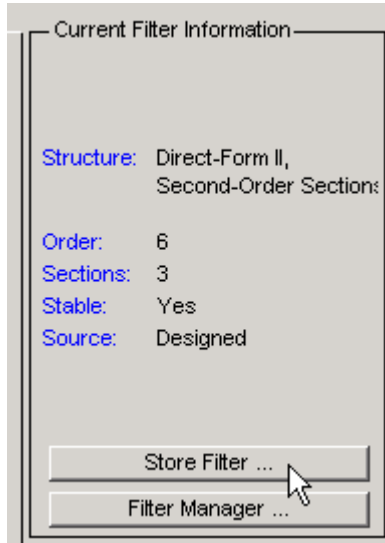



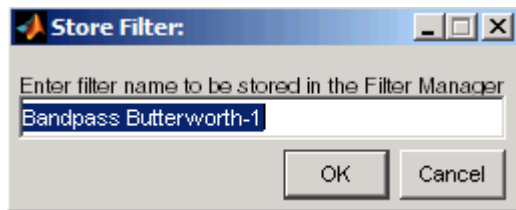








- 8 In the Store Filter dialog, change the filter name to Bandpass Butterworth-1 and click **OK** to save the filter in the Filter Manager.




Analyzing the Filter

After designing the filter, you can view the following filter responses in the display region by clicking on the associated toolbar button or by selecting the desired response from the **Analysis** menu.

Response	Toolbar Button Image
Filter specifications	
Magnitude response	
Phase response	
Magnitude and Phase responses	
Group delay	
Phase delay	
Impulse response	
Step response	
Pole-zero plot	
Filter coefficients	
Filter information	

Note Other analyses are available if you have the DSP System Toolbox product installed.

- 1 Examine the displayed magnitude response of the filter.
- 2 Display other responses, as desired. Click the appropriate buttons, shown in the table above or select the desired response from the **Analysis** menu.
- 3 Click the **Filter coefficients** button to display the filter coefficients.

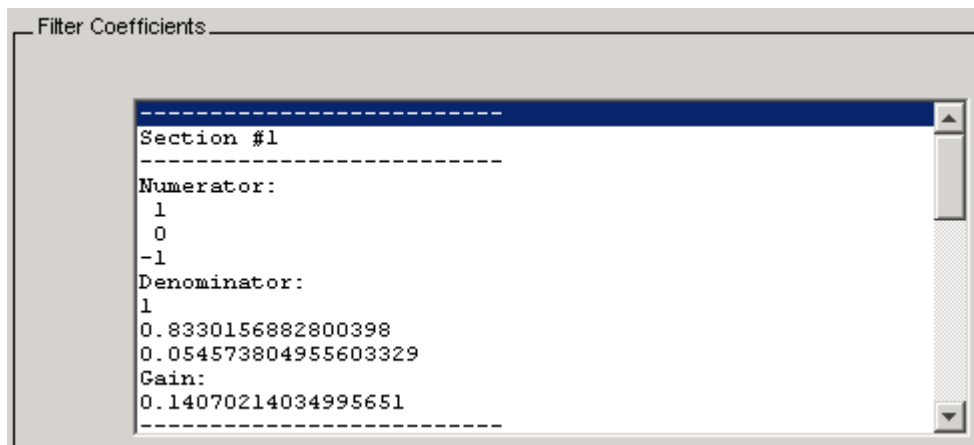

The image shows a dialog box titled "Filter Coefficients" with a scrollable text area containing the following text:

```
-----  
Section #1  
-----  
Numerator:  
 1  
 0  
-1  
Denominator:  
 1  
0.8330156882800398  
0.054573804955603329  
Gain:  
0.14070214034995651  
-----
```


Designing Additional Filters

You have designed one of the bands of an octave filter bank. This section shows you how to design and save the other nine bands. The following table defines the parameters for the remaining bands. Note that all of the bands use these parameters: **Bandpass, IIR - Butterworth** , **order** = 6, **Fs** = 48000 Hz .

Fc1	Fc2	Filter Name
45	89	Bandpass Butterworth-2
89	178	Bandpass Butterworth-3
178	355	Bandpass Butterworth-4
355	708	Bandpass Butterworth-5
708	1413	Bandpass Butterworth-6
1413	2818	Bandpass Butterworth-7
2818	5623	Bandpass Butterworth-8
5623	11220	Bandpass Butterworth-9
11220	22387	Bandpass Butterworth-10

- 1 Using the parameters listed in the table above, for each table row, set the appropriate the **Fc1** and **Fc2** values.
- 2 Design the filter by clicking the **Design Filter** button.
- 3 Click **Store Filter** to save the filter.
- 4 Change the name to the appropriate filter name shown in the table above.
- 5 Repeat these steps until all 10 filters are designed and stored.

Viewing and Annotating the Filter

In this section...


“Viewing the Filter in FVTool” on page 4-10

“Using FVTool for Annotation” on page 4-14

Viewing the Filter in FVTool


This section teaches you how to use the Filter Visualization Tool (FVTool) to view the octave-band filter. It also describes how to annotate your filter.

- 1 Click the **Filter Manager** button to display the Filter Manager, which lists your saved filters.

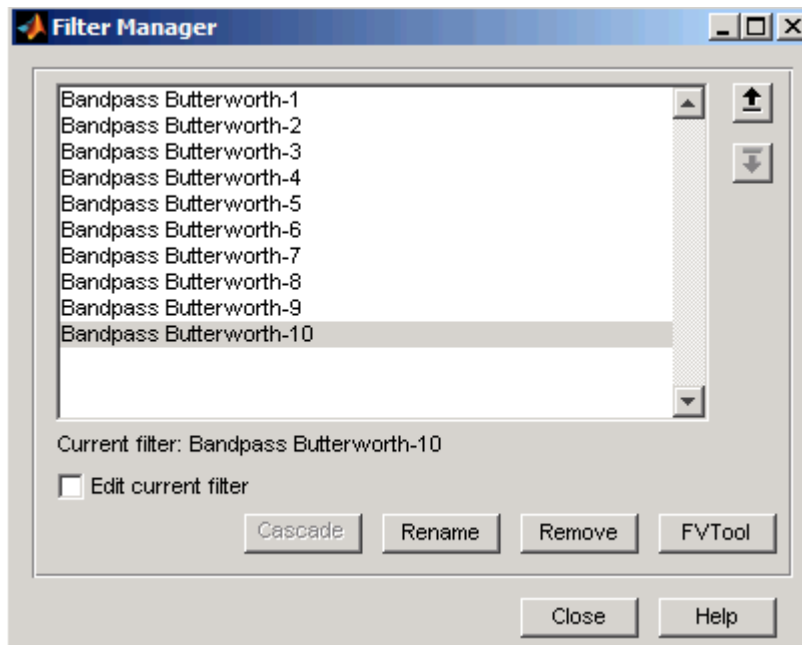


- 2 Press Ctrl+click on each filter name to select all the filters, and then click **FVTool**. FVTool opens with the filter responses overlaid for easy comparison. (If you want to view a single filter in FVTool, click the **Full View Analysis** button when that filter is shown in the app’s display panel or select **View > Filter Visualization Tool**).


- 3 Change the x-axis scale to logarithmic by selecting **Analysis > Analysis Parameters** to display the Analysis Parameters dialog.
- 4 Change the **Frequency Scale** to Log.

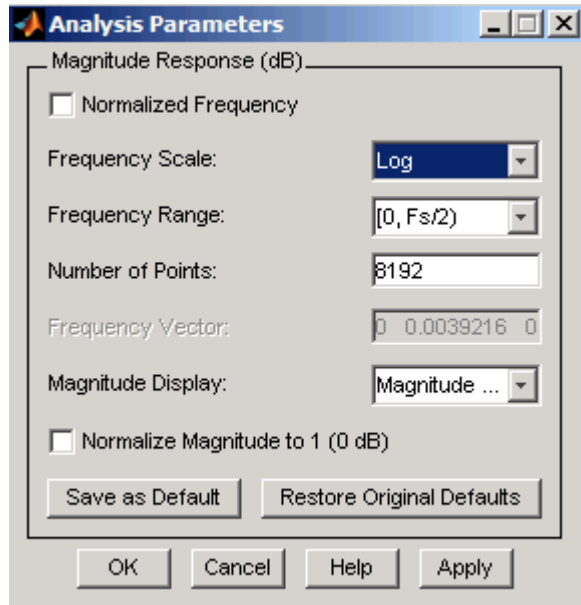


- 5 Click **OK**.


4 Filter Design with the Filter Designer App

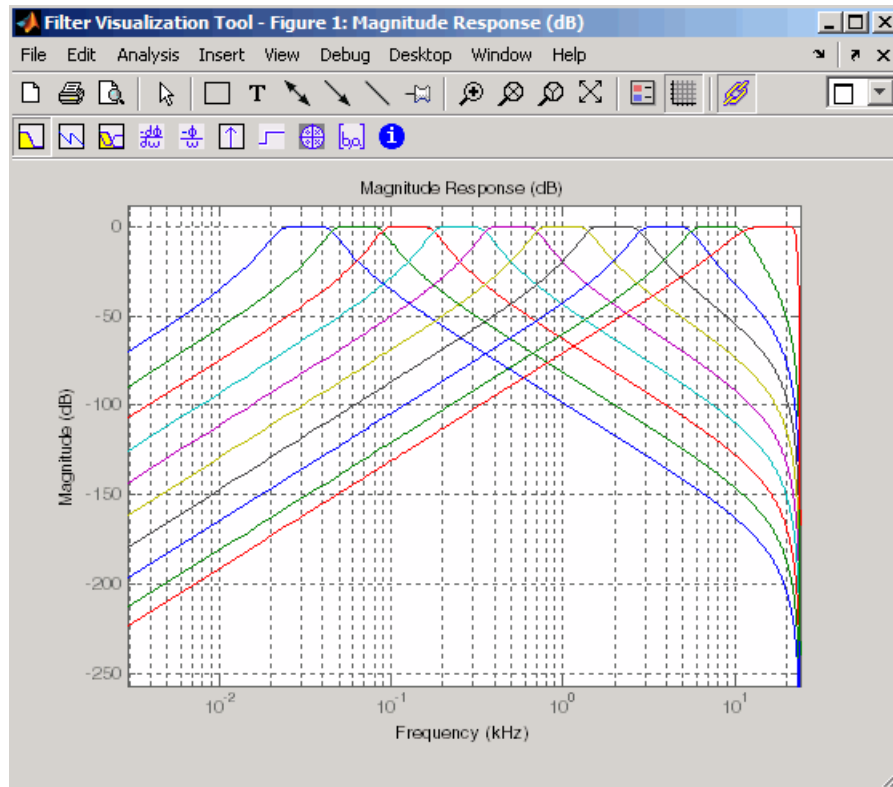


- 6 Click the **Legend** button  to turn on the legend, which you can drag to the desired location.

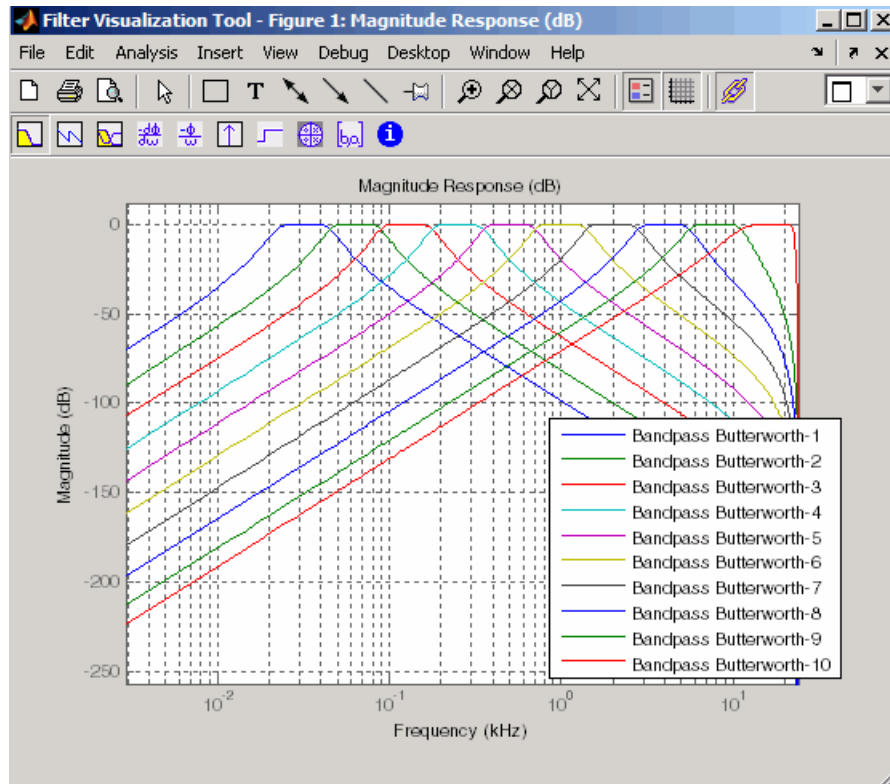

- 7 Click the **Legend** button again to turn off the legend.

Use the **Zoom** button  and drag a rectangle around the first few passbands to zoom in.

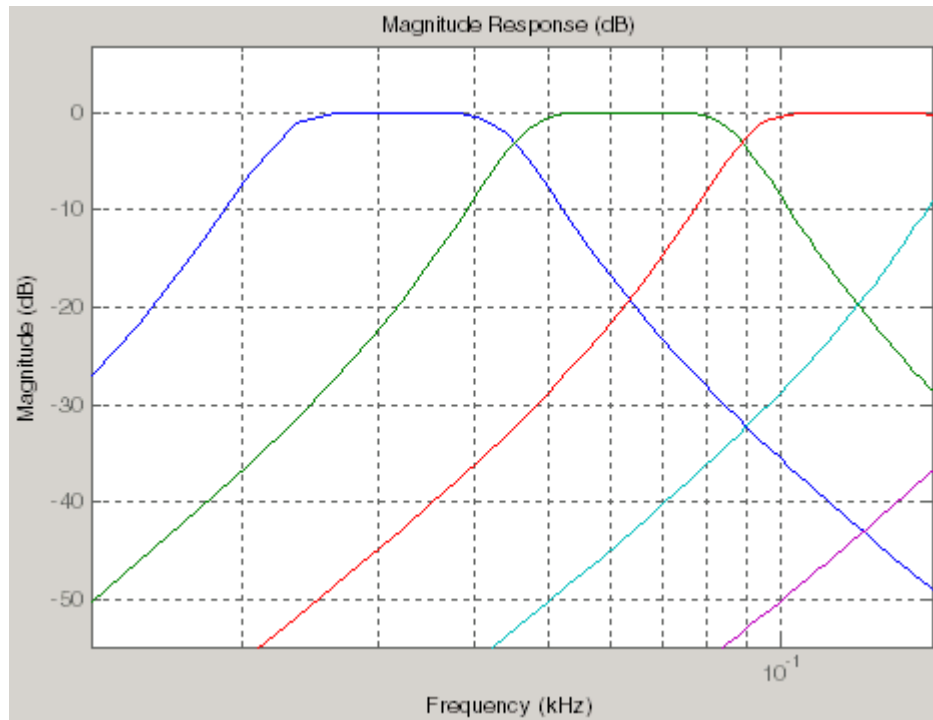


- 8 Click the **Restore Default View** button  to return to the full view.
- 9 Display other responses, as desired. (The FVTool Analysis toolbar buttons and **Analysis** menu are the same as in **Filter Designer**. See “Analyzing the Filter” on page 4-7 for descriptions of the buttons.)

Using FVTool for Annotation

FVTool is also useful for doing further analysis, adding annotations, and printing. Available annotations include adding rectangles, text boxes, arrows and lines, and adding data tips.

Note Do not close **Filter Designer** at this time. You will use it in future sections.

- 1 Use the toolbar buttons to annotate your response plot. Add a line by clicking one of the line buttons, and then use your mouse to draw the line on your plot.
- 2 Add a data tip by clicking on a plot at the desired point. The data tip shows the frequency and magnitude at that point.

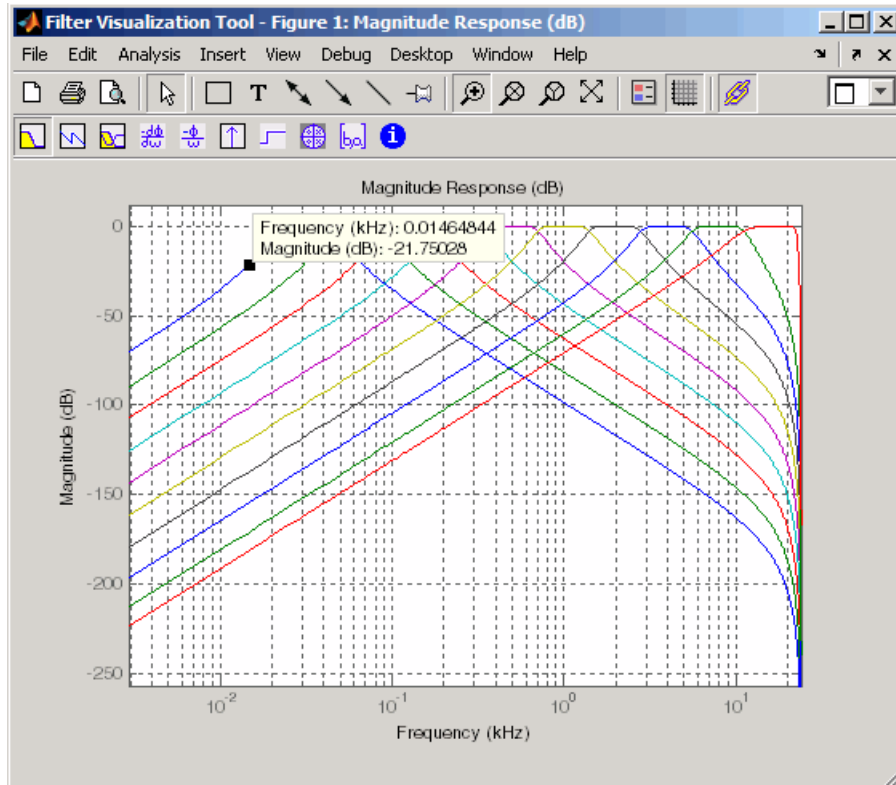


- 3 Close FVTool by selecting **File > Close**.

Exporting Filters from Filter Designer

The **Filter Designer** app provides a simple way to create filter objects (`dfilts`) from your filter designs. This is particularly useful for saving your filter design to the MATLAB workspace for use with command line functions. You can also save your filters as MATLAB code by using **File > Generate MATLAB code** to run in scripts or batch files.

- 1 In **Filter Designer**, click **Filter Manager** and highlight only the Bandpass Butterworth-1 filter.
- 2 Select **File > Export**.
- 3 Set **Export to** to Workspace. Set **Export as** to Objects. In **Discrete Filter** type Hd1. Click **Export** to export the first filter in your filter bank to an Hd1 `dfilt` object in the workspace.

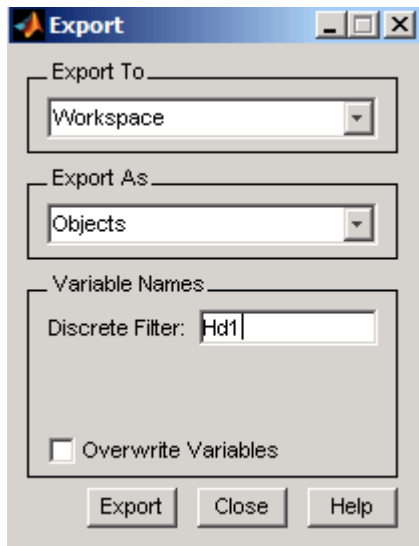

- 4 Repeat steps 1 through 3 for each of the remaining nine filters. Highlight each filter individually to make it the active filter and change the **Discrete Filter** name to match the filter number. When you finish you will have 10 `dfilt` objects in the workspace.
- 5 Close the app by selecting **File > Close**.
- 6 On the MATLAB command line, verify that your objects were exported by using the `whos` command.

whos					
Name	Size	Bytes	Class	Attributes	
Hd1	1x1		dfilt.df2sos		
Hd10	1x1		dfilt.df2sos		
Hd2	1x1		dfilt.df2sos		
Hd3	1x1		dfilt.df2sos		
Hd4	1x1		dfilt.df2sos		
Hd5	1x1		dfilt.df2sos		
Hd6	1x1		dfilt.df2sos		
Hd7	1x1		dfilt.df2sos		
Hd8	1x1		dfilt.df2sos		
Hd9	1x1		dfilt.df2sos		

Filtering with dfilt

- 1 Type the following on the MATLAB command line to concatenate your filter bank filter objects into a single dfilt object.

```
Hd = [Hd1 Hd2 Hd3 Hd4 Hd5 Hd6 Hd7 Hd8 Hd9 Hd10];
```

- 2 To view the first filter, type Hd(1).

```
Hd(1)
```

```
ans =
  FilterStructure: 'Direct-Form II, Second-Order Sections'
        sosMatrix: [3x6 double]
        ScaleValues: [3.40097054256801e-009;1;1;1]
 PersistentMemory: false
```

- 3 A number of methods can be used to view and manipulate the Hd1 dfilt object. Try the info command:

```
info(Hd1)           % Displays filter information
```

```
Discrete-Time IIR Filter (real)
-----
Filter Structure      : Direct-Form II, Second-Order Sections
Number of Sections   : 3
Stable                : Yes
Linear Phase         : No
```

- 4 You can open FVTool from the MATLAB command line and specify display parameters as follows.

```
F = fvtool(Hd,'Analysis','magnitude') % Open FVTool with
                                       % magnitude display
set(F,'FrequencyScale','Log')         % Change to log scale
```


This produces the same display as step 5 of “Viewing the Filter in FVTool” on page 4-10.

- 5 Now using the MATLAB command line, create some discrete white Gaussian noise data, which you can then filter using the filter bank.

```
rand; % Initialize random number generator
Nx = 100000; % Number of noise data points
xw = randn(Nx,1); % Create white noise
for i=1:10,
    yw(:,i)=filter(Hd(i),xw); % Filter the white noise through
end % the entire filter bank.
    % (:,i) means all rows of column i
```

- 6 Plot the filtered data.

```
plot(yw)
```

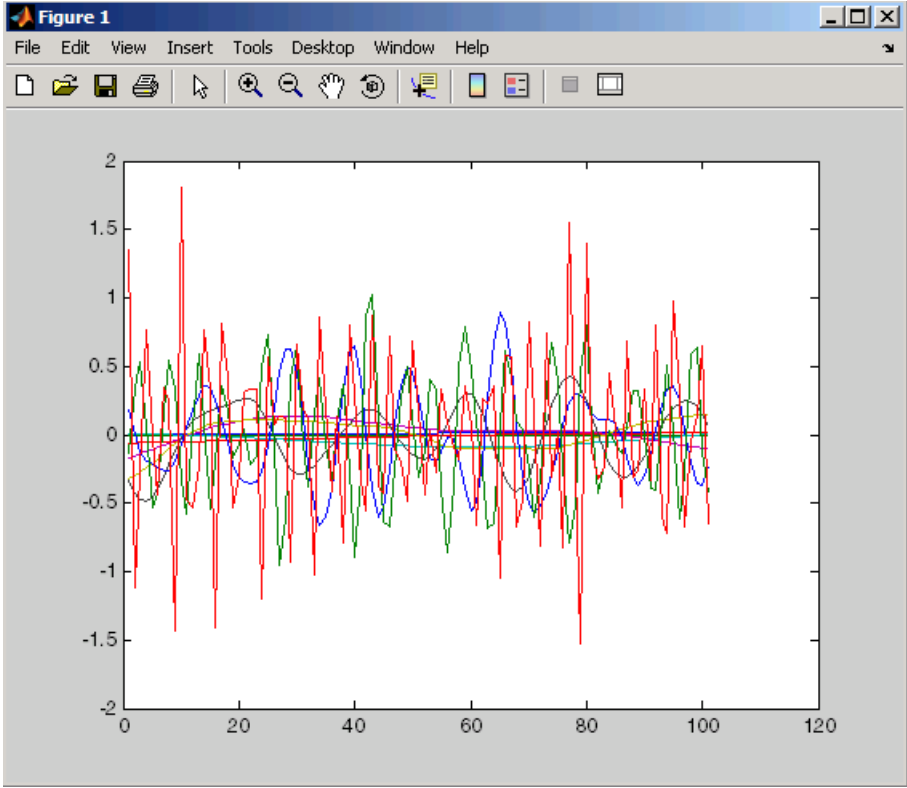

Designing Filters Using Command Line Functions

You can specify and design filters at the command line using `designfilt`. The use of `designfilt` provides a powerful and efficient way to specify and implement digital filters.

As an example, consider a lowpass filter for data sampled at 20 kHz. The desired passband frequency is 1 kHz with a stopband frequency of 1.2 kHz. Limit the passband ripple to 1 dB and require 60 dB of attenuation between the passband and stopband frequencies.


```
Fs = 20000;  
Fp = 1000;  
Fst = 1200;  
Ap = 1;  
Ast = 60;
```

Design an equiripple FIR filter and a Butterworth IIR filter.

```
FIR = designfilt('lowpassfir', ...  
    'PassbandFrequency',Fp,'StopbandFrequency',Fst, ...  
    'PassbandRipple',Ap,'StopbandAttenuation',Ast, ...  
    'DesignMethod','equiripple','SampleRate',Fs);  
  
IIR = designfilt('lowpassiir', ...  
    'PassbandFrequency',Fp,'StopbandFrequency',Fst, ...  
    'PassbandRipple',Ap,'StopbandAttenuation',Ast, ...  
    'DesignMethod','butter','SampleRate',Fs);
```

Display the magnitude responses of the filters.

```
hfvt = fvtool(FIR,IIR);  
legend(hfvt,'FIR','IIR')  
axis([0 2 -70 10])
```

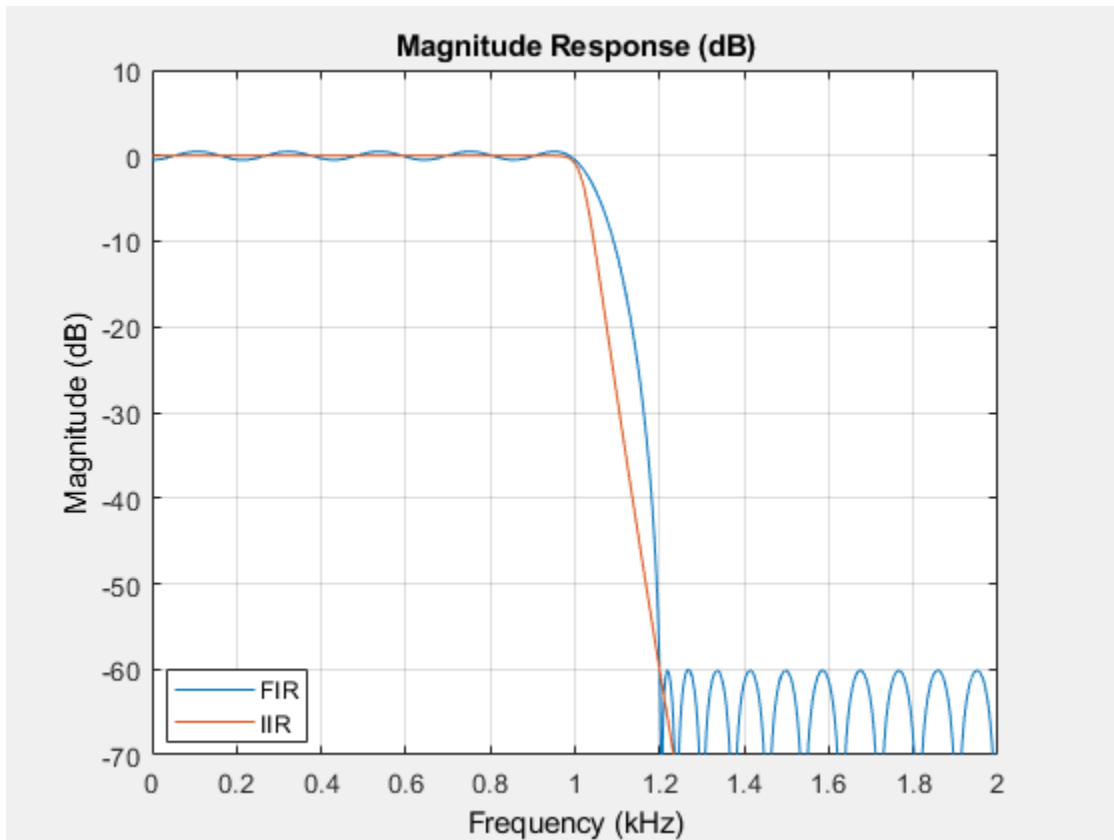

See Also

Apps
Filter Designer

Functions
FVTool | designfilt

