

WLAN Toolbox™
Getting Started Guide



MATLAB®

R2022b



How to Contact MathWorks



Latest news: www.mathworks.com
Sales and services: www.mathworks.com/sales_and_services
User community: www.mathworks.com/matlabcentral
Technical support: www.mathworks.com/support/contact_us



Phone: 508-647-7000



The MathWorks, Inc.
1 Apple Hill Drive
Natick, MA 01760-2098

WLAN Toolbox™ Getting Started Guide

© COPYRIGHT 2015–2022 by MathWorks, Inc.

The software described in this document is furnished under a license agreement. The software may be used or copied only under the terms of the license agreement. No part of this manual may be photocopied or reproduced in any form without prior written consent from The MathWorks, Inc.

FEDERAL ACQUISITION: This provision applies to all acquisitions of the Program and Documentation by, for, or through the federal government of the United States. By accepting delivery of the Program or Documentation, the government hereby agrees that this software or documentation qualifies as commercial computer software or commercial computer software documentation as such terms are used or defined in FAR 12.212, DFARS Part 227.72, and DFARS 252.227-7014. Accordingly, the terms and conditions of this Agreement and only those rights specified in this Agreement, shall pertain to and govern the use, modification, reproduction, release, performance, display, and disclosure of the Program and Documentation by the federal government (or other entity acquiring for or through the federal government) and shall supersede any conflicting contractual terms or conditions. If this License fails to meet the government's needs or is inconsistent in any respect with federal procurement law, the government agrees to return the Program and Documentation, unused, to The MathWorks, Inc.

Trademarks

MATLAB and Simulink are registered trademarks of The MathWorks, Inc. See www.mathworks.com/trademarks for a list of additional trademarks. Other product or brand names may be trademarks or registered trademarks of their respective holders.

Patents

MathWorks products are protected by one or more U.S. patents. Please see www.mathworks.com/patents for more information.

Revision History

October 2015	Online only	New for Version 1.0 (Release 2015b)
March 2016	Online only	Revised for Version 1.1 (Release 2016a)
September 2016	Online only	Revised for Version 1.2 (Release 2016b)
March 2017	Online only	Revised for Version 1.3 (Release 2017a)
September 2017	Online only	Revised for Version 1.4 (Release 2017b)
March 2018	Online only	Revised for Version 1.5 (Release 2018a)
September 2018	Online only	Revised for Version 2.0 (Release 2018b)
March 2019	Online only	Revised for Version 2.1 (Release 2019a)
September 2019	Online only	Revised for Version 2.2 (Release 2019b)
March 2020	Online only	Revised for Version 3.0 (Release 2020a)
September 2020	Online only	Revised for Version 3.1 (Release 2020b)
March 2021	Online only	Revised for Version 3.2 (Release 2021a)
September 2021	Online only	Revised for Version 3.3 (Release 2021b)
March 2022	Online only	Revised for Version 3.4 (Release 2022a)
September 2022	Online only	Revised for Version 3.5 (Release 2022b)

Introduction

1

WLAN Toolbox Product Description	1-2
---	------------

About WLAN

2

What Is WLAN?	2-2
Network Architecture	2-2
WLAN Protocol Stack	2-3
WLAN Message Exchange	2-4
Physical Layer Evolution	2-5
WLAN PPDU Structure	2-9
Physical Layer Protocol Data Unit	2-9
Packet Size and Duration Dependencies	2-31
WLAN MAC Frame Structure	2-37
802.11 MAC Protocol	2-37
General MAC Frame Format	2-37
MAC Frame Types	2-38
WLAN Radio Frequency Channels	2-40
Acknowledgments	2-42

Tutorials

3

802.11 Standards Supported by WLAN Toolbox	3-2
HE MU Transmission	3-4
Transmission Mode Options	3-4
Allocation Index	3-4
EHT MU Transmission	3-11
Transmission Mode Options	3-11
Allocation Index	3-12

Waveform Generation	3-17
App-Based WLAN Waveform Generation	3-23
Generate and Parse WLAN MAC Frames	3-26
WLAN Channel Models	3-28
Packet Recovery	3-37
VHT Packet Recovery	3-37
HT Packet Recovery	3-41
Non-HT Packet Recovery	3-44
Transmit-Receive Chain	3-48
Transmit Processing Chain	3-48
Receiver Processing Chain	3-51

Introduction

WLAN Toolbox Product Description

Simulate, analyze, and test WLAN communications systems

WLAN Toolbox provides standards-compliant functions for the design, simulation, analysis, and testing of wireless LAN communications systems. It includes configurable physical layer waveforms for the IEEE® 802.11 family of standards. It also provides transmitter, channel modeling, and receiver operations, including channel coding, modulation, spatial stream mapping, and MIMO receivers.

The toolbox provides reference designs to help you perform baseband link-level simulations and multi-node system-level simulations. You can generate waveforms and customize test benches, either programmatically or interactively, using the Wireless Waveform Generator app. You can generate and parse common MAC frames. You can also perform signal measurements such as channel power, spectrum mask, and occupied bandwidth, and create test benches for the end-to-end simulation of WLAN communications links.

You can study the effects of RF designs and interference on system performance. Using WLAN Toolbox with RF instruments or hardware support packages, you can connect your transmitter and receiver models to radio devices and verify your designs via over-the-air transmission and reception.

About WLAN

- “What Is WLAN?” on page 2-2
- “WLAN PPDU Structure” on page 2-9
- “Packet Size and Duration Dependencies” on page 2-31
- “WLAN MAC Frame Structure” on page 2-37
- “WLAN Radio Frequency Channels” on page 2-40
- “Acknowledgments” on page 2-42

What Is WLAN?


In this section...
“Network Architecture” on page 2-2
“WLAN Protocol Stack” on page 2-3
“WLAN Message Exchange” on page 2-4
“Physical Layer Evolution” on page 2-5

In general, a wireless local area network (WLAN) refers to a wireless computer network. More commonly, WLAN is equated with the implementation specified by the IEEE 802.11™ group of standards and branded as Wi-Fi® by the Wi-Fi Alliance. The Wi-Fi Alliance certifies interoperability between IEEE 802.11 devices from different manufacturers. With WLAN Toolbox, you can model IEEE 802.11 standardized implementations of the WLAN physical (PHY) and medium access control (MAC) layers. You can also explore variations on implementations for future evolution of the standard.

Network Architecture

IEEE 802.11 defines the network architectures. In IEEE 802.11, a group of stations (STAs) within a defined coverage area and with appropriate association to each other form a basic service set (BSS). The BSS is a basic building block for 802.11 network architecture. A basic service area (BSA) defines an area containing STAs within a BSS. STAs can be associated in overlapping BSSs. In terms of mobility, STAs are either fixed, portable, or mobile. Any compliant STA can serve as an access point (AP).

This figure depicts WLAN components and network architectures built up from BSSs.

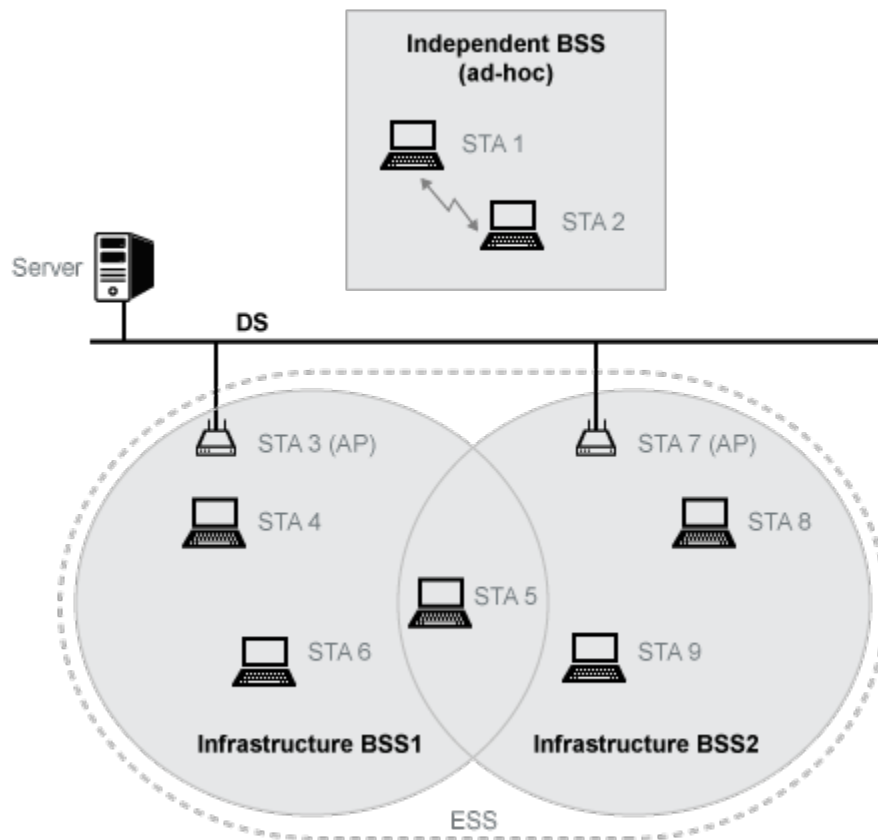

- Independent BSS (IBSS) describes STAs communicating directly with one another in an ad-hoc fashion. An IBSS has no connection to the wired network.
- Infrastructure BSS describes STAs associated with a central STA that manages the BSS. The central STA is referred to as an access point (AP). This deployment is commonly used in home, office, and hotspot network installations. Generally speaking, the AP connects wirelessly with associated STAs and is wired to the Internet. This connection enables associated STAs to communicate beyond the local BSS. The APs also wirelessly serve STAs in a BSA, providing internet connectivity for those STAs.
- Distributed systems (DS) interconnect infrastructure BSSs via their APs. Typically the DS backbone is an 802.3 Ethernet LAN.
- Extended service set (ESS) describes a set of infrastructure BSSs interconnected by a DS. In an ESS, APs communicate among themselves to forward traffic from one BSS to another and to facilitate the movement of mobile station from one BSS to another.

WLAN Protocol Stack


The interworking reference model shown here includes a subset of the network components associated with the data link layer (DLL) and physical layer (PHY). Section 4.9.2 of [2] describes the interworking reference model for 802.11. The medium access control (MAC) is a sublayer of the DLL.

The 802.11 standards focus on the MAC and PHY as a whole. WLAN Toolbox functionality focuses on the physical-medium-dependent (PMD) and physical layer convergence procedure (PLCP) sublayers of the PHY, the MAC sublayer, and their interfaces.

WLAN Message Exchange

Data and control information messages are exchanged between layers of the protocol stack within an individual STA and between peer layers in communicating STAs.


- Data and control information exchanged between peer STA layers are protocol information transfers. See (A-)MPDU and PPDU in the figure.
- Data and control information exchanged between layers within an STA are service information transfers. See MSDU and PSDU in the figure.

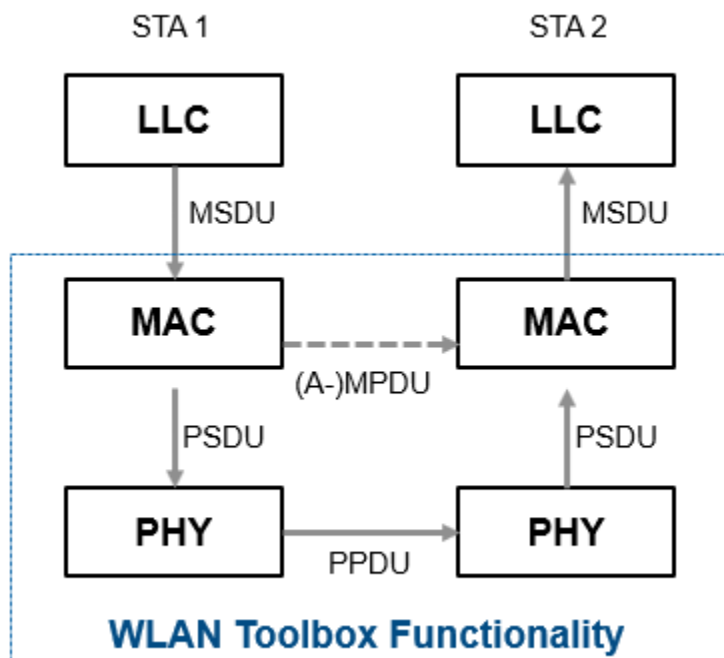

WLAN Toolbox functionality focuses on MAC and PHY implementations. Specifically, the toolbox models the exchange of PPDUs between PHY peers, and the exchange of MPDUs or A-MPDUs between MAC peers. Messages exchanged between protocol stack layers are briefly described here. For more information on these messages, see [2].

Message	Description
MSDU — MAC service data unit	Messages that transfer information between the logical link control (LLC) layer and the MAC layer within an STA
MPDU or A-MPDU — MAC protocol data unit or aggregated MAC protocol data unit	Messages that transfer information between MAC layer peers in communicating STAs
PSDU — PLCP service data unit	Messages that transfer information between the MAC and PHY layers within an STA
PPDU — PLCP protocol data unit	Messages that transfer information between PHY layer peers in communicating STAs

This figure shows the distinction between these WLAN message data units for a nonaggregated MAC frame.

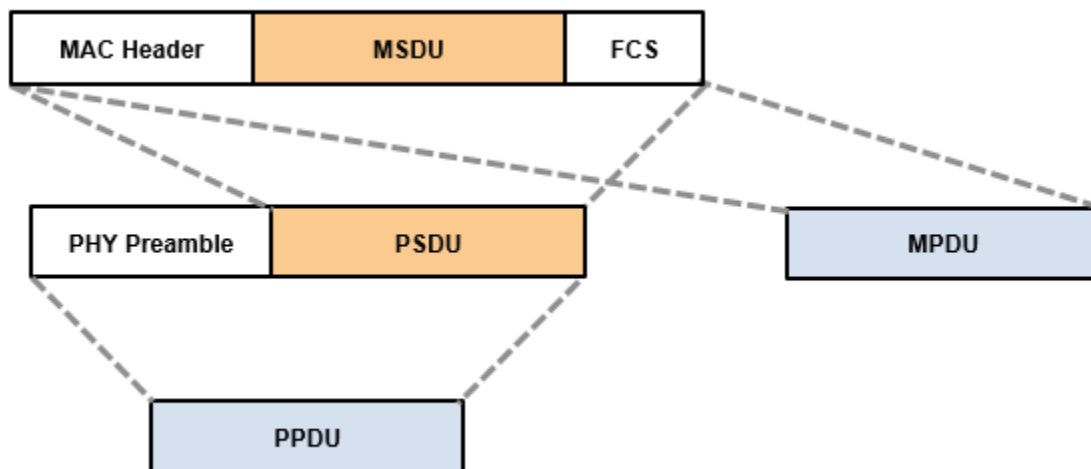

Note In reference to PSDU, the terms PLCP SDU and PHY SDU appear in the 802.11 standard. PLCP is the physical layer convergence procedure sublayer of the PHY. No distinction is made when the terms are used between layers.

Physical Layer Evolution

The IEEE 802.11 standardized implementation of WLAN has evolved since its first release in 1997. Today, it is deployed worldwide in unlicensed regions of the radio frequency spectrum. Since the first release, the 802.11 standard has progressed to include several physical layer implementations and has ensured backward compatibility with legacy releases. Over time, the maximum achievable transmission data rate has grown from 1 megabit per second (Mbps) to nearly 7 gigabit per second (Gbps).

The various 802.11 standard versions are listed here.

Standard	Release Year	Modulation	Base Frequency (GHz)	Bandwidth (MHz)	Maximum Throughput (Mbps)	Antenna Scheme	PPDU Format
802.11be™ (Wi-Fi 7)	TBA	OFDMA	2.4, 5, 6	20, 40, 80, 160, 320	< 40,000	UL and DL MU-MIMO up to 16 streams	EHT
802.11az™	TBA	OFDMA	2.4, 5, 6	20, 40, 80, 160	< 10,000	UL and DL MU-MIMO up to eight streams	HE ranging NDP, HE TB ranging NDP

Standard	Release Year	Modulation	Base Frequency (GHz)	Bandwidth (MHz)	Maximum Throughput (Mbps)	Antenna Scheme	PPDU Format
802.11ba™	2021	MC-OOK	2.4 and 5	20, 40, 80	0.0625, 0.25	MIMO	WUR
802.11ay™	2021	OFDM	60	8000	< 20,000	MIMO up to four streams	EDMG
802.11ax™ (Wi-Fi 6 and Wi-Fi 6E)	2021	OFDMA	2.4, 5, 6	20, 40, 80, 160, 80+80	< 10,000	UL and DL MU-MIMO up to eight streams	HE, non-HT duplicate
802.11ah™	2016	OFDM	< 1	1, 2, 4, 8, 16	346	DL MU-MIMO up to four streams	S1G
802.11ac™ (Wi-Fi 5)	2013	OFDM	5	20, 40, 80, 160, 80+80	< 7000	DL MU-MIMO up to eight streams	VHT, non-HT duplicate
802.11ad™	2012	SC/OFDM	60	1760 (SC), 2640 (OFDM)	< 7000	MIMO single stream with beamforming	DMG
802.11p™	2010	OFDM	5	5, 10	27	SISO	non-HT
802.11n™ (Wi-Fi 4)	2009	OFDM	2.4 and 5	20, 40	< 600	MIMO, up to four streams	HT, non-HT duplicate
802.11j™	2004	OFDM	4.9 and 5	10, 20	27	SISO	non-HT
802.11g™	2003	802.11b and 802.11a @ 2.4 GHz					
802.11b™	1999	HR/DSSS/CCK	2.4	11	11	SISO	non-HT
802.11a™	1999	OFDM	5	5, 10, 20	54	SISO	non-HT
802.11	1997	DSSS	2.4	11	2	SISO	non-HT

Deployment and commercial uptake grew with the increased data rates offered by 802.11b direct sequence spread spectrum (DSSS) with complementary code keying (CCK). At that time, companies began offering 802.11b products and systems for WLAN.

The 802.11a amendment increased data rates by introducing an orthogonal frequency division multiplexing (OFDM) physical layer. However, OFDM was deployed at only 5 GHz, so uptake was slow. A short time later, the Federal Communications Commission (FCC) allowed the use of OFDM at 2.4 GHz.

The adoption of the 802.11g amendment offered the opportunity to operate the PHY defined by 802.11a at 2.4 GHz, with backward compatibility to the 802.11b PHY.

With 802.11n, a data rate increase came by way of widened channel bandwidth and allowance of up to four input/output streams.

For 802.11ac, wider channels and up to eight input/output streams offer higher maximum throughputs. This increased throughput capability enables users to stream video to mobile devices in the home or at public mobile hot spots.

The 802.11ad amendment specifies operation in the 60-GHz band.

The 802.11ah amendment uses sub-1-GHz frequencies (unlicensed 900-MHz bands) to provide extended range, and has low energy consumption to support the concepts involving the Internet of Things (IoT).

The 802.11ax amendment introduces orthogonal frequency-division multiple access (OFDMA) to improve overall spectral efficiency, and higher-order 1024-point quadrature amplitude modulation (1024-QAM) support for increased throughput. The demand for bandwidth continues to grow and the IEEE 802.11 working groups continue to advance standards to raise the throughput ceiling.

The 802.11ay improves on the 802.11ad amendment, offering greater maximum throughput.

The 802.11ba amendment offers low energy consumption, increasing the battery life of IoT devices.

The 802.11az amendment allows a STA to determine its own position relative to other STAs.

The 802.11be amendment increases the maximum channel bandwidth to 320 MHz and introduces 4096-QAM. These improvements raise the throughput ceiling.

For the history of IEEE 802.11 and to monitor working group activities, consult the IEEE website.

References

- [1] IEEE Std 802.11ax-2021 (Amendment to IEEE Std 802.11-2020). "Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications. Amendment 1: Enhancements for High Efficiency WLAN." IEEE Standard for Information technology — Telecommunications and information exchange between systems. Local and metropolitan area networks — Specific requirements.
- [2] IEEE Std 802.11-2020 (Revision of IEEE Std 802.11-2016). "Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications." IEEE Standard for Information Technology — Telecommunications and Information Exchange between Systems — Local and Metropolitan Area Networks — Specific Requirements.
- [3] IEEE Std 802.11ah-2016 (Amendment to IEEE Std 802.11-2016 as amended by IEEE Std 802.11ai™-2016). "Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications. Amendment 2: Sub 1 GHz License Exempt Operation." IEEE Standard for Information technology — Telecommunications and information exchange between systems. Local and metropolitan area networks — Specific requirements.
- [4] IEEE STD 802.11ac-2013 (Amendment to IEEE Std 802.11-2012, as amended by IEEE Std 802.11ae™-2012, IEEE Std 802.11a™-2012, and IEEE Std 802.11ad-2012). "Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications. Amendment 4: Enhancements for Very High Throughput Operation in Bands below 6 GHz." IEEE Standard for Information technology — Telecommunications and information exchange between systems. Local and metropolitan area networks — Specific requirements.

- [5] IEEE STD 802.11ad-2012 (Amendment to IEEE Std 802.11-2012, as amended by IEEE Std 802.11ae™-2012 and IEEE Std 802.11a™-2012). “Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications. Amendment 4: Enhancements for Very High Throughput Operation in Bands below 6 GHz.” IEEE Standard for Information technology — Telecommunications and information exchange between systems. Local and metropolitan area networks — Specific requirements.
- [6] Perahia, E., and R. Stacey. *Next Generation Wireless LANs: 802.11n and 802.11ac*. 2nd Edition. United Kingdom: Cambridge University Press, 2013.

See Also

Related Examples

- “Waveform Generation” on page 3-17
- “WLAN Channel Models” on page 3-28
- “Packet Recovery” on page 3-37
- “WLAN PPDU Structure” on page 2-9
- “802.11 Standards Supported by WLAN Toolbox” on page 3-2

External Websites

- <https://standards.ieee.org/>

WLAN PPDU Structure

Physical Layer Protocol Data Unit

IEEE 802.11¹ is a packet-based protocol. Each physical layer protocol data unit (PPDU) contains preamble and data fields. The preamble field contains the transmission vector format information. The data field contains the user payload and higher layer headers, such as medium access control (MAC) fields and cyclic redundancy check (CRC). The transmission vector format and the PPDU structure vary between 802.11 versions. The transmission vector (*TXVECTOR*) format parameter is classified as:

- *EHT* to specify an extremely high-throughput (EHT) physical layer (PHY) implementation.
 - EHT refers to fields formatted for association with 802.11be data. Reference [4] defines and describes the EHT PHY layer and PPDU.
 - For EHT, the *TXVECTOR* parameters, as defined in Table 36-1 of [4], determine the structure of PPDUs transmitted by an EHT STA.
- *WUR* to specify a wake-up radio (WUR) PHY implementation.
 - WUR refers to fields formatted for association with 802.11ba data. Reference [5] defines and describes the WUR PHY layer and PPDU.
 - For WUR, the *TXVECTOR* parameters, as defined in Table 30-1 of [5], determine the structure of PPDUs transmitted by a WUR STA.
- *HE* to specify a high-efficiency (HE) PHY implementation.
 - HE refers to fields formatted for association with 802.11ax data. Reference [1] defines and describes the HE PHY layer and PPDU.
 - For HE, the *TXVECTOR* parameters, as defined in Table 27-1 of [1], determine the structure of PPDUs transmitted by an HE STA.
- *DMG* to specify a directional multi-gigabit (DMG) PHY implementation.
 - DMG refers to preamble fields formatted for association with 802.11ad data. Section 20 of [2] define and describe the DMG PHY layer and PPDU.
 - For DMG, the *TXVECTOR* parameters, as defined in Table 20-1 of [2], determines the structure of PPDUs transmitted by a DMG STA. For a DMG STA, the *MCS* parameter determines the overall structure of the DMG PPDU.
- *S1G* to specify a sub-1-GHz (S1G) PHY implementation.
 - S1G refers to preamble fields formatted for association with 802.11ah data. Section 23 of [2] defines and describes the S1G PHY layer and PPDU.
 - For S1G, the *TXVECTOR* parameters, as defined in Table 23-1 of [2], determines the structure of PPDUs transmitted by an S1G STA. For an S1G STA, the *FORMAT* parameter determines the overall structure of the S1G PPDU.
- *VHT* to specify a very-high-throughput (VHT) PHY implementation.
 - VHT refers to preamble fields formatted for association with 802.11ac data. Section 21 of [2] defines and describes the VHT PHY layer and PPDU.

¹ IEEE Std 802.11-2016 Adapted and reprinted with permission from IEEE. Copyright IEEE 2016. All rights reserved.

- For VHT, the *TXVECTOR* parameters, as defined in Table 21-1 of [2], determine the structure of PPDU transmitted by a VHT STA. For a VHT STA, the *FORMAT* parameter determines the overall structure of the PPDU and enables:
 - Non-HT format (*NON_HT*), based on Section 17 and including non-HT duplicate format.
 - HT-mixed format (*HT_MF*), as specified in Section 19.
 - HT-greenfield format (*HT_GF*), as specified in Section 19. WLAN Toolbox does not support HT_GF format.
 - VHT format (*VHT*), as specified in Section 21. The VHT format PPDU contains a preamble compatible with Section 17 and Section 19 STAs. The non-VHT portions of the VHT preamble (the parts that precede the VHT-SIG-A field) are defined to enable decoding of the PPDU by VHT STAs.
- *HT* to specify a high-throughput (HT) PHY implementation.
 - HT refers to preamble fields formatted for association with 802.11n data. Section 19 of [2] defines and describes the HT PHY layer and PPDU. The standard defines two HT formats:
 - *HT_MF* indicates the HT-mixed format and contains a preamble compatible with HT and non-HT receivers. Support for HT-mixed format is mandatory.
 - *HT_GF* indicates the HT-greenfield format and does not contain a non-HT compatible part. WLAN Toolbox does not support HT_GF format.
- *non-HT* to specify a PHY implementation that is not HT and is not VHT.
 - Non-HT refers to preamble fields formatted for association with pre-802.11n data. Section 17 of [2] defines and describes the OFDM PHY layer and PPDU for non-HT transmission. In addition to supporting non-HT synchronization, the non-HT preamble fields are used in support of HT and VHT synchronization.

The table shows 802.11 versions that the toolbox supports, along with the supported *TXVECTOR* options and associated modulation formats.

802.11 Version	Transmission Vector Format	Modulation Format	Bandwidths/MHz
802.11b	non-HT	DSSS/CCK	11
802.11a	non-HT	OFDM only	5, 10, 20
802.11j	non-HT	OFDM only	10
802.11p	non-HT	OFDM only	5, 10
802.11g	non-HT	OFDM	20
	non-HT	DSSS/CCK	11
802.11n (Wi-Fi 4)	HT_MF, Non-HT	OFDM only	20, 40
802.11ac (Wi-Fi 5)	VHT, HT_MF, Non-HT	OFDM only	20, 40, 80, 160
802.11ah	S1G	OFDM only	1, 2, 4, 8, 16
802.11ad	DMG	Single Carrier and OFDM	2640
802.11ax (Wi-Fi 6)	HE	OFDMA	20, 40, 80, 160
802.11ba	WUR	MC-OOK	20, 40, 80

802.11 Version	Transmission Vector Format	Modulation Format	Bandwidths/MHz
802.11be (Wi-Fi 7)	EHT	OFDMA	20, 40, 80, 160, 320

WLAN Toolbox configuration objects define the properties that enable creation of PPDUs and waveforms for the specified 802.11 transmission format. See `wlanEHTMUConfig`, `wlanWURConfig`, `wlanHEMUConfig`, `wlanHESUConfig`, `wlanDMGConfig`, `wlanSIGConfig`, `wlanVHTConfig`, `wlanHTConfig`, and `wlanNonHTConfig`.

EHT PPDU Field Structure

For EHT, there are two transmission modes: EHT multi-user (EHT MU) and EHT trigger-based (EHT TB). WLAN Toolbox supports only EHT MU transmissions.

The field structure for EHT MU PPDUs consists of preamble and data portions. The legacy preamble fields (L-STF, L-LTF, and L-SIG) are present in EHT MU, WUR, HE, VHT, and non-HT PPDUs. The RL-SIG and PE fields are common to EHT MU and HE PPDUs. The structure of an EHT MU PPDU is summarized in this table.

PPDU Field Abbreviation	Description	Duration (μ s)
L-STF	Non-HT Short Training field	8
L-LTF	Non-HT Long Training field	8
L-SIG	Non-HT Signal field	4
RL-SIG	Repeated Non-HT Signal field	4
U-SIG	Universal Signal field	8
EHT-SIG	EHT Signal field	4
EHT-STF	EHT Short Training field	4
EHT-LTF	EHT Long Training field	Variable
EHT-Data	Data field carrying the PSDUs	Variable
PE	Packet Extension field	Variable

For more information, see Section 36.3.4 of [4].

WUR PPDU Field Structure

For WUR, there are two transmission modes: WUR Basic and WUR FDMA. WUR Basic transmissions must have a bandwidth of 20 MHz. WUR FDMA transmissions must have a bandwidth of 40 or 80 MHz. The field structure for WUR PPDUs consists of preamble and data portions.

The structure of a WUR Basic PPDU is summarized in this table.

PPDU Field Abbreviation	Description	Duration (μ s)
L-STF	Non-HT Short Training field	8
L-LTF	Non-HT Long Training field	8
L-SIG	Non-HT Signal field	4
BPSK-Mark1	A BPSK modulated OFDM symbol	4

PPDU Field Abbreviation	Description	Duration (μs)
BPSK-Mark2	A BPSK modulated OFDM symbol	4
WUR-Sync	WUR Synchronization field	64 or 128
WUR-Data	WUR Data field	Variable

The preamble consists of all the fields up to and including the BPSK-Mark2 field.


WUR FDMA PPDUs are divided into 20 MHz subchannels. Each subchannel has its own preamble. The preamble of each subchannel has the same structure as the preamble of a WUR Basic PPDU. Within a PPDU, each 20 MHz subchannel has the same values in its preamble fields. The values of the two non-preamble fields can differ between subchannels.

For more information, see Sections 30.3.2 and 30.3.3 of [5].

HE PPDU Field Structure

In HE, four transmission modes are supported. The field structure for HE PPDUs consists of preamble and data portions. The legacy preamble fields (L-STF, L-LTF, and L-SIG) are common to all four HE transmission modes and the VHT, HT, and non-HT format preambles.

HE preamble fields include additional format-specific signaling fields. Each format defines a data field for transmission of user payload data.

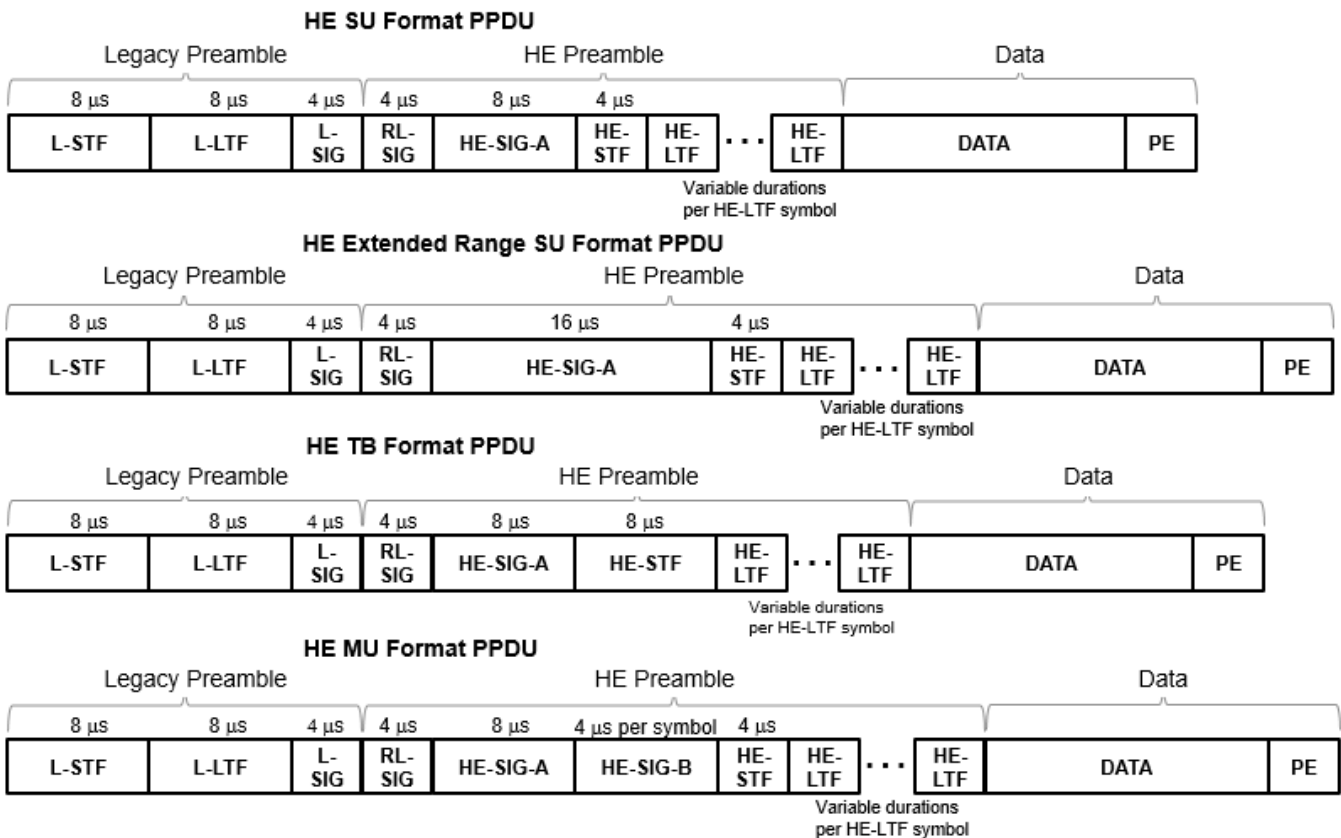


PPDU Field Abbreviation	Description
L-STF	Non-HT Short Training field
L-LTF	Non-HT Long Training field
L-SIG	Non-HT Signal field
RL-SIG	Repeated Non-HT Signal field
HE-SIG-A	HE Signal A field
HE-SIG-B	HE Signal B field
HE-STF	HE Short Training field
HE-LTF	HE Long Training field
HE-Data	Data field carrying the PSDUs
PE	Packet Extension field

The RL-SIG, HE-SIG-A, HE-STF, HE-LTF, and PE fields are present in all HE PPDU formats. The HE-SIG-B field is present only in the HE MU PPDU. For more information, see Section 27.3.4 of [1].

DMG Format PPDU Field Structure

In DMG, there are three physical layer (PHY) modulation schemes supported: control, single carrier, and OFDM.

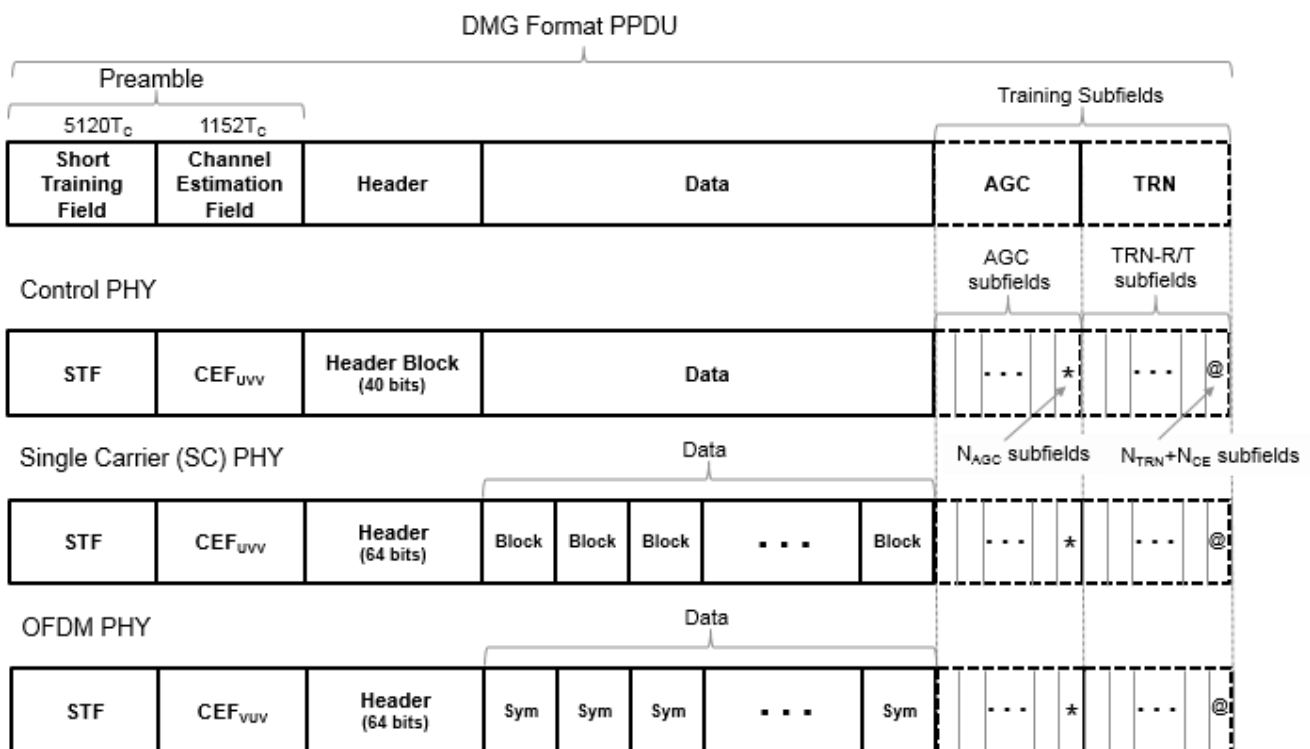

The single-carrier chip timing, $T_C = 1/F_C = 0.57$ ns. For more information, see Waveform Sampling Rate on the wlanWaveformGenerator function reference page.

The supported DMG format PPDU field structures each contain these fields:

- The preamble contains a short training field (STF) and channel estimation field (CEF). The preamble is used for packet detection, AGC, frequency offset estimation, synchronization, indication of modulation type (Control, SC, or OFDM), and channel estimation. The format of the preamble is common to the Control, SC, and OFDM PHY packets.
 - The STF is composed of Golay G_a sequences as specified in Section 20.3.6.2 of [2].
 - The CEF is composed of Golay G_u and G_v sequences as specified in Section 20.3.6.2 of [2].
 - When the header and data fields of the packet are modulated using a single carrier (control PHY and SC PHY), the Golay sequencing for the CEF waveform is shown in Figure 20-6 of [2].
 - When the header and data fields of the packet are modulated using OFDM (OFDM PHY), the Golay sequencing for the CEF waveform is shown in Figure 20-7 of [2].
- The header field is decoded by the receiver to determine transmission parameters.
- The data field is variable in length. It carries the user data payload.
- The training fields (AGC and TRN-R/T subfields) are optional. They can be included to refine beamforming.

Section 20.3 of [2] specifies the common aspects of the DMG PPDU packet structure. The PHY modulation-specific aspects of the packet structure are specified in these sections:

- The DMG control PHY packet structure is specified in Section 20.4.
- The DMG OFDM PHY packet structure is specified in Section 20.5.
- The DMG SC PHY packet structure is specified in Section 20.6.


S1G Format PPDU Field Structure

In S1G, there are three transmission modes:


- ≥ 2 MHz long preamble mode
- ≥ 2 MHz short preamble mode
- 1 MHz mode

Each transmission mode has a specific PPDU preamble structure:

- An S1G ≥ 2 MHz long preamble mode PPDU supports single-user and multi-user transmissions. The long preamble PPDU consists of two portions; the omni-directional portion and the beam-changeable portion.

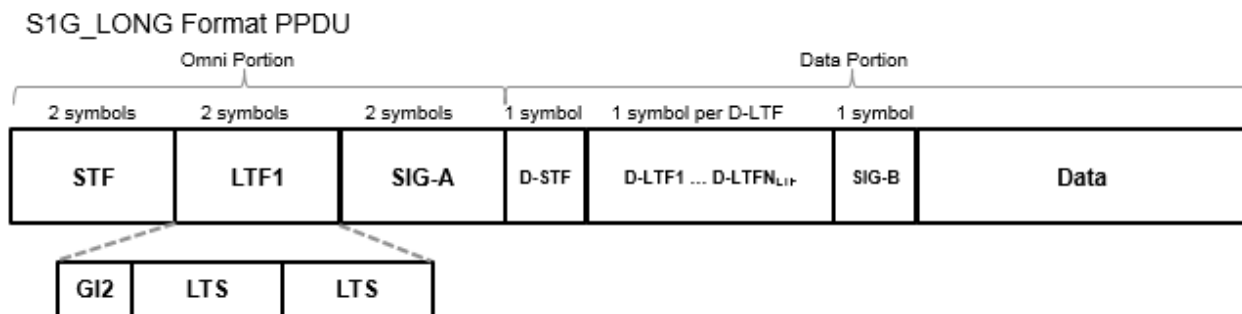


- The omni-directional portion is transmitted to all users without beamforming. It consists of three fields:
 - The short training field (STF) is used for coarse synchronization.
 - The long training field (LTF1) is used for fine synchronization and initial channel estimation.
 - The signal A field (SIG-A) is decoded by the receiver to determine transmission parameters relevant to all users.
- The data portion can be beamformed to each user. It consists of four fields:
 - The beamformed short training field (D-STF) is used by the receiver for automatic gain control.
 - The beamformed long training fields (D-LTF-N) are used for MIMO channel estimation.
 - The signal B field (SIG-B) in a multi-user transmission, signals the MCS for each user. In a single-user transmission, the MCS is signaled in the SIG-A field of the omni-directional portion of the preamble. Therefore, in a single-user transmission the SIG-B symbol transmitted is an exact repetition of the first D-LTF. This repetition allows for improved channel estimation.
 - The data field is variable in length. It carries the user data payload.
- An S1G ≥ 2 MHz short preamble mode PPDU supports single-user transmissions. All fields in the PPDU can be beamformed.

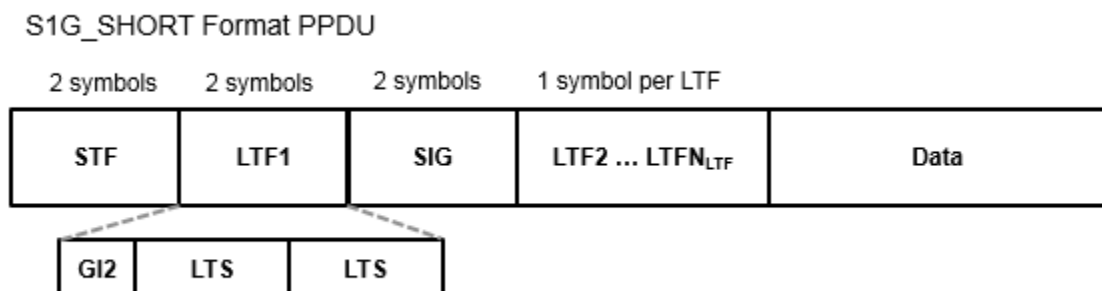

The PPDU consists of these five fields:


- The short training field (STF) is used for coarse synchronization.
- The first long training field (LTF1) is used for fine synchronization and initial channel estimation.
- The signaling field (SIG) is decoded by the receiver to determine transmission parameters.
- The subsequent long training fields (LTF2-N) are used for MIMO channel estimation.
 $N_{\text{SYMBOLS}} = 1$ per subsequent LTF
- The data field is variable in length. It carries the user data payload.
- An S1G 1 MHz mode PPDU supports single-user transmissions. It is composed of the same five fields as the S1G ≥ 2 MHz short preamble mode PPDU and all fields can be beamformed. An S1G 1 MHz mode PPDU has longer STF, LTF1, and SIG fields, so this mode can achieve sensitivity that is similar to the S1G ≥ 2 MHz short-preamble mode transmissions.

S1G_1M Format PPDU

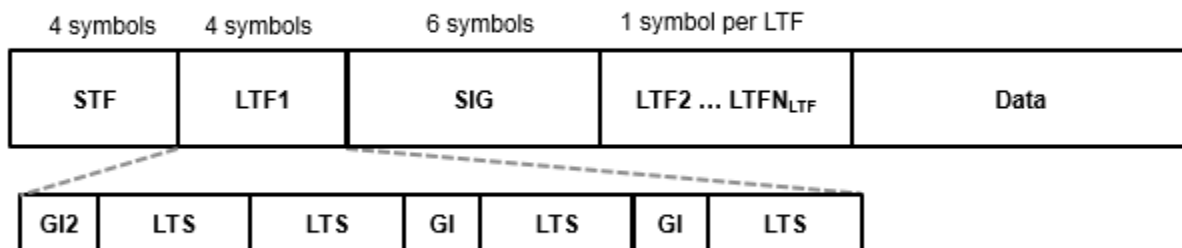

VHT, HT-Mixed, and Non-HT Format PPDU Field Structures

The field structure for VHT, HT, and non-HT PPDUs consist of preamble and data portions. The legacy preamble fields (L-STF, L-LTF, and L-SIG) are common to VHT, HT, and non-HT format preambles. VHT and HT format preamble fields include additional format-specific training and signaling fields. Each format defines a data field for transmission of user payload data.

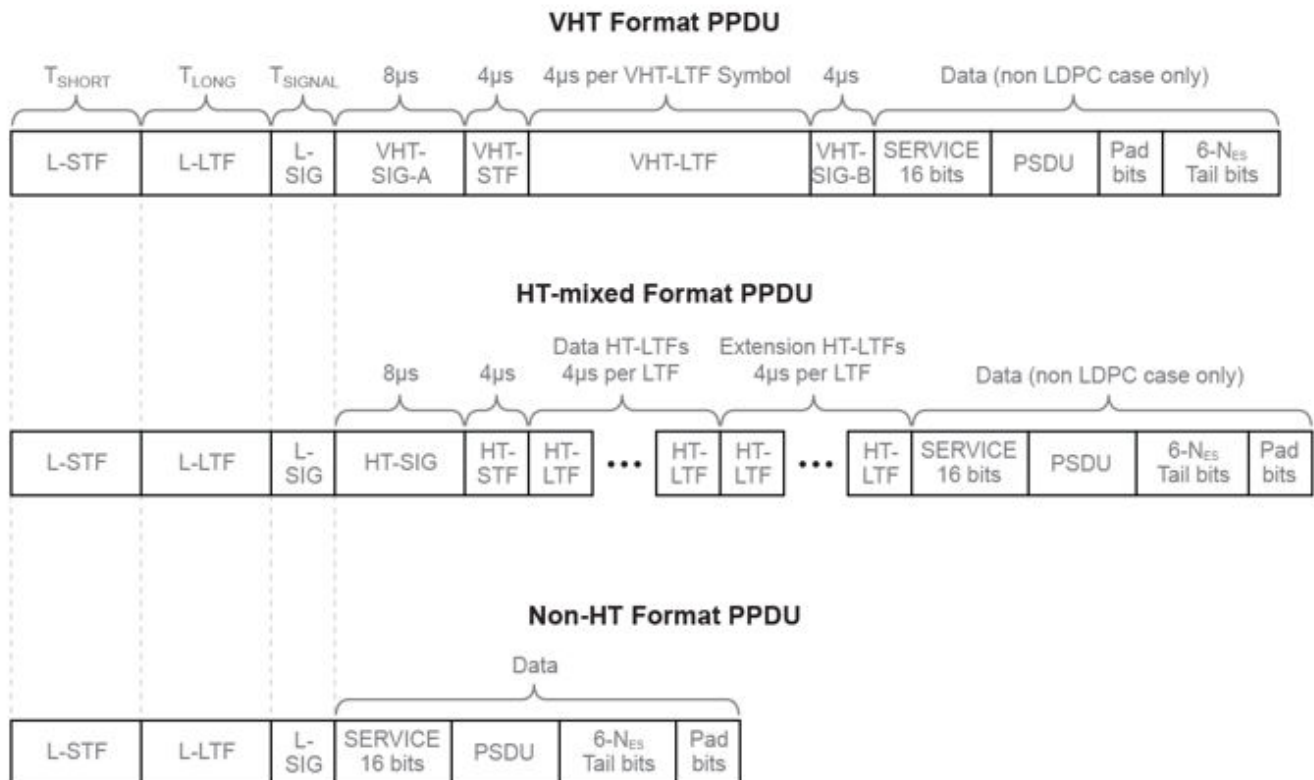


PPDU Field Abbreviation	Description
L-STF	Non-HT Short Training field
L-LTF	Non-HT Long Training field
L-SIG	Non-HT SIGNAL field
HT-SIG	HT SIGNAL field
HT-STF	HT Short Training field
HT-LTF	HT Long Training field, multiple HT-LTFs are transmitted as indicated by the MCS
VHT-SIG-A	VHT Signal A field
VHT-STF	VHT Short Training field
VHT-LTF	VHT Long Training field
VHT-SIG-B	VHT Signal B field
Data	VHT, HT, and non-HT Data fields include the service bits, PSDU, tail bits, and pad bits

For more information, see Section 19.3.2 of [2].

Non-HT (Legacy) Short Training Field

The legacy short training field (L-STF) is the first field of the 802.11 OFDM PLCP legacy preamble. The L-STF is a component of VHT, HT, and non-HT PPDU.

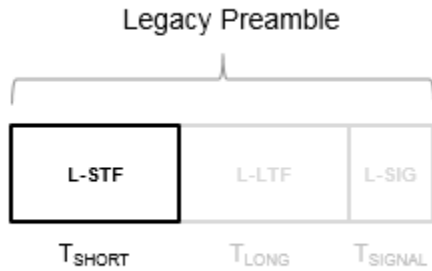


The L-STF duration varies with channel bandwidth.

Channel Bandwidth (MHz)	Subcarrier Frequency Spacing, Δ_F (kHz)	Fast Fourier Transform (FFT) Period ($T_{FFT} = 1 / \Delta_F$)	L-STF Duration ($T_{SHORT} = 10 \times T_{FFT} / 4$)
20, 40, 80, 160, and 320	312.5	3.2 μ s	8 μ s
10	156.25	6.4 μ s	16 μ s
5	78.125	12.8 μ s	32 μ s

Because the sequence has good correlation properties, it is used for start-of-packet detection, for coarse frequency correction, and for setting the AGC. The sequence uses 12 of the 52 subcarriers that are available per 20 MHz channel bandwidth segment. For 5 MHz, 10 MHz, and 20 MHz bandwidths, the number of channel bandwidth segments is 1.


Non-HT (Legacy) Long Training Field

The L-LTF is the second field in the 802.11 OFDM PLCP legacy preamble. The L-LTF is a component of HE, VHT, HT, and non-HT PPDU.

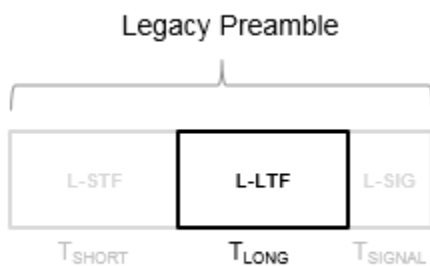

Channel estimation, fine frequency offset estimation, and fine symbol timing offset estimation rely on the L-LTF.

The L-LTF is composed of a cyclic prefix (CP) followed by two identical long training symbols (C1 and C2). The CP consists of the second half of the long training symbol.

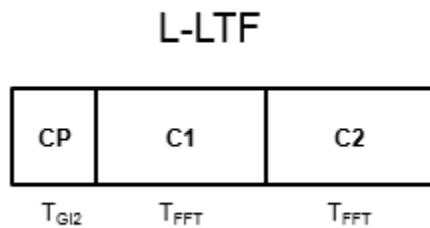


The L-LTF duration varies with channel bandwidth.

Channel Bandwidth (MHz)	Subcarrier Frequency Spacing, Δ_F (kHz)	Fast Fourier Transform (FFT) Period ($T_{FFT} = 1 / \Delta_F$)	Cyclic Prefix or Training Symbol Guard Interval (GI2) Duration ($T_{GI2} = T_{FFT} / 2$)	L-LTF Duration ($T_{LONG} = T_{GI2} + 2 \times T_{FFT}$)
20, 40, 80, 160, and 320	312.5	3.2 μ s	1.6 μ s	8 μ s
10	156.25	6.4 μ s	3.2 μ s	16 μ s
5	78.125	12.8 μ s	6.4 μ s	32 μ s

Non-HT (Legacy) Signal Field


The L-SIG is the third field of the 802.11 OFDM PLCP legacy preamble. This field is a component of EHT, HE, VHT, HT, and non-HT PPDU. It consists of 24 bits that contain rate, length, and parity information. The L-SIG field is transmitted using BPSK modulation with rate 1/2 binary convolutional coding (BCC).

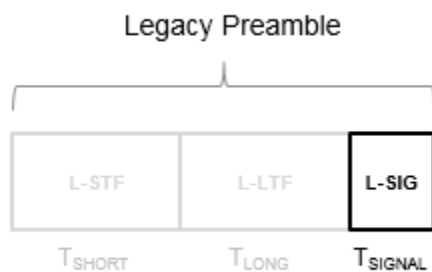

The L-SIG is one OFDM symbol with a duration that varies with channel bandwidth.

Channel Bandwidth (MHz)	Subcarrier Frequency Spacing, Δ_F (kHz)	Fast Fourier Transform (FFT) Period ($T_{FFT} = 1 / \Delta_F$)	Guard Interval (GI) Duration ($T_{GI} = T_{FFT} / 4$)	L-SIG Duration ($T_{SIGNAL} = T_{GI} + T_F$)
20, 40, 80, and 160	312.5	3.2 μ s	0.8 μ s	4 μ s
10	156.25	6.4 μ s	1.6 μ s	8 μ s
5	78.125	12.8 μ s	3.2 μ s	16 μ s

The L-SIG contains packet information for the received configuration.

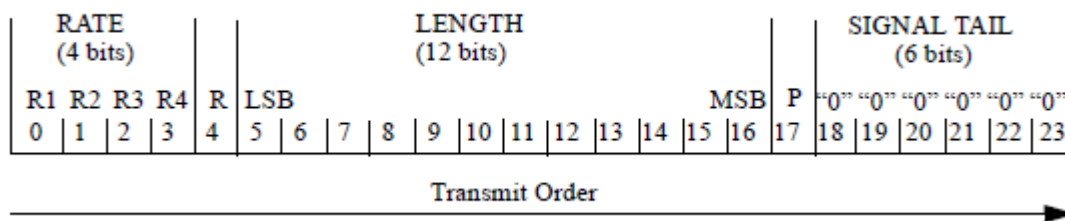

- Bits 0 through 3 specify the data rate (modulation and coding rate) for the non-HT format.

Rate (Bits 0-3)	Modulation	Coding Rate (R)	Data Rate (Mb/s)		
			20 MHz Channel Bandwidth	10 MHz Channel Bandwidth	5 MHz Channel Bandwidth
1101	BPSK	1/2	6	3	1.5
1111	BPSK	3/4	9	4.5	2.25
0101	QPSK	1/2	12	6	3
0111	QPSK	3/4	18	9	4.5
1001	16-QAM	1/2	24	12	6
1011	16-QAM	3/4	36	18	9
0001	64-QAM	2/3	48	24	12
0011	64-QAM	3/4	54	27	13.5

For HT and VHT formats, the L-SIG rate bits are set to '1 1 0 1'. Data rate information for HT and VHT formats is signaled in format-specific signaling fields.

- Bit 4 is reserved for future use.
- Bits 5 through 16:
 - For non-HT, specify the data length (amount of data transmitted in octets) as described in table 17-1 and section 10.27.4 IEEE Std 802.11-2020.
 - For HT-mixed, specify the transmission time as described in sections 19.3.9.3.5 and 10.27.4 of IEEE Std 802.11-2020.
 - For VHT, specify the transmission time as described in section 21.3.8.2.4 of IEEE Std 802.11-2020.


- Bit 17 has the even parity of bits 0 through 16.
- Bits 18 through 23 contain all zeros for the signal tail bits.

Note Signaling fields added for HT (wlanHTSIG) and VHT (wlanVHTSIGA, wlanVHTSIGB) formats provide data rate and configuration information for those formats.

- For the HT-mixed format, section 19.3.9.4.3 of IEEE Std 802.11-2020 describes HT-SIG bit settings.
 - For the VHT format, sections 21.3.8.3.3 and 21.3.8.3.6 of IEEE Std 802.11-2020 describe bit settings for the VHT-SIG-A and VHT-SIG-B fields, respectively.
-

Non-HT Data Field

The non-high throughput Data (non-HT Data) field is used to transmit MAC frames and is composed of a service field, a PSDU, tail bits, and pad bits.

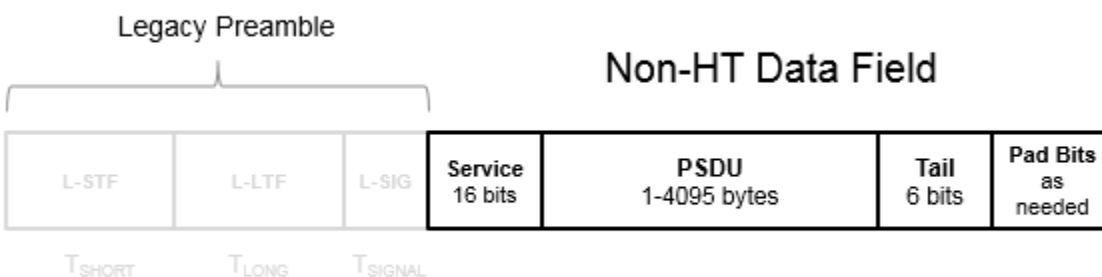

- **Service field** — Contains 16 zeros to initialize the data scrambler.
- **PSDU** — Variable-length field containing the PLCP service data unit (PSDU).
- **Tail** — Tail bits required to terminate a convolutional code. The field uses six zeros for the single encoding stream.
- **Pad Bits** — Variable-length field required to ensure that the non-HT data field contains an integer number of symbols.

Processing of an 802.11a data field is defined in section 17.3.5 of [2].

The six tail bits are set to zero after a 127-bit scrambling sequence has been applied to the full data field. The receiver uses the first seven bits of the service field to determine the initial state of the scrambler. Rate 1/2 BCC encoding is performed on the scrambled data. The zeroed tail bits cause the BCC encoder to return to a zero state. Puncturing is applied as needed for the selected rate.


The coded data is grouped into several bits per symbol, and two permutations of block interleaving are applied to each group of data. The groups of bits are then modulated to the selected rate (BPSK, QPSK, 16-QAM, or 64-QAM) and the complex symbols are then mapped onto corresponding

subcarriers. For each symbol, the pilot subcarriers are inserted. An IFFT is used to transform each symbol group to the time domain and the cyclic prefix is prepended.



The final processing preceding DAC up-conversion to RF and the power amplifier is to apply a pulse shaping filter on the data to smooth transitions between symbols. The standard provides an example pulse shaping function but does not specifically require one.

High Throughput Signal Field

The high throughput signal (HT-SIG) field is located between the L-SIG field and HT-STF and is part of the HT-mixed format preamble. It is composed of two symbols, HT-SIG₁ and HT-SIG₂.

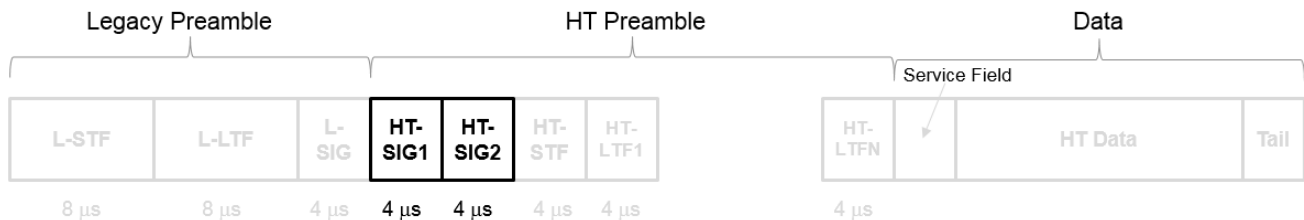


HT-SIG carries information used to decode the HT packet, including the MCS, packet length, FEC coding type, guard interval, number of extension spatial streams, and whether there is payload aggregation. The HT-SIG symbols are also used for auto-detection between HT-mixed format and legacy OFDM packets.

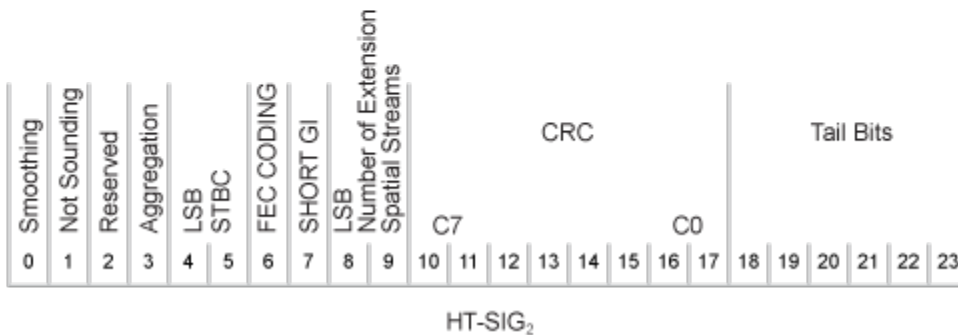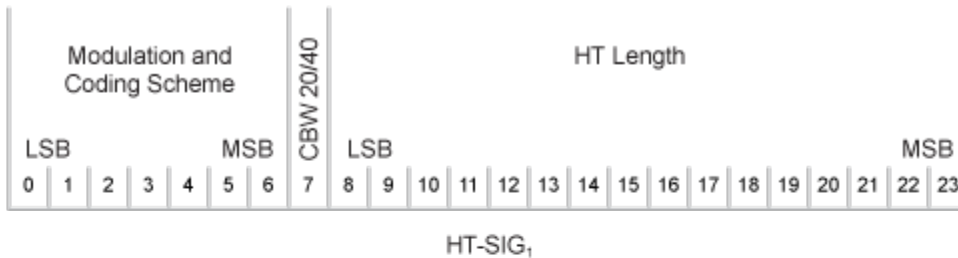

For a detailed description of the HT-SIG field, see section 19.3.9.4.3 of IEEE Std 802.11-2020.


High Throughput Short Training Field

The high throughput short training field (HT-STF) is located between the HT-SIG and HT-LTF fields of an HT-mixed packet. The HT-STF is 4 μ s in length and is used to improve automatic gain control estimation for a MIMO system. For a 20 MHz transmission, the frequency sequence used to construct the HT-STF is identical to that of the L-STF. For a 40 MHz transmission, the upper subcarriers of the HT-STF are constructed from a frequency-shifted and phase-rotated version of the L-STF.

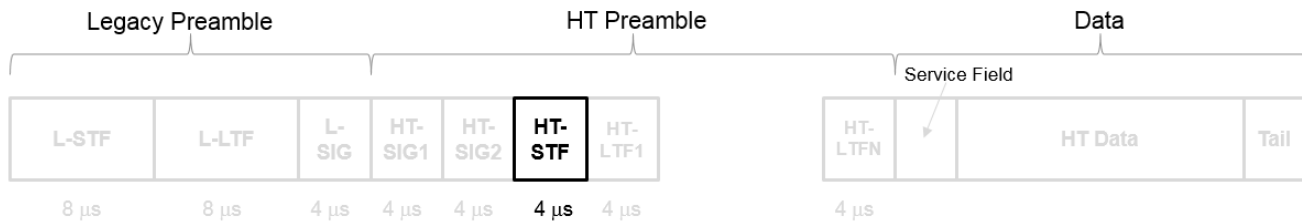

High Throughput Long Training Fields

The high throughput long training field (HT-LTF) is located between the HT-STF and data field of an HT-mixed packet.

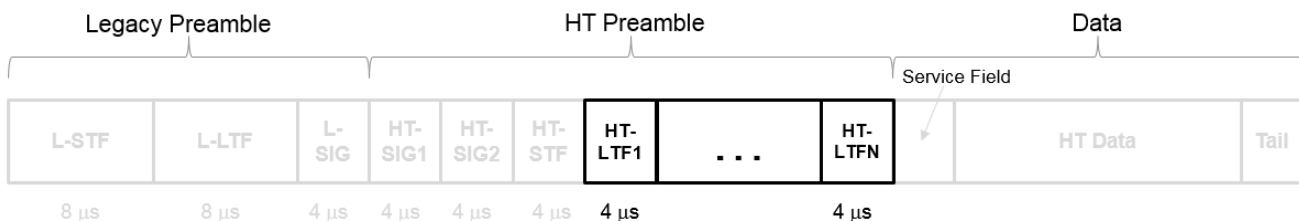

As described in Section 19.3.9.4.6 of IEEE Std 802.11-2016, the receiver can use the HT-LTF to estimate the MIMO channel between the set of QAM mapper outputs (or, if STBC is applied, the STBC encoder outputs) and the receive chains. The HT-LTF portion has one or two parts. The first part consists of one, two, or four HT-LTFs that are necessary for demodulation of the HT-Data portion of the PPDU. These HT-LTFs are referred to as HT-DLTFs. The optional second part consists of zero, one, two, or four HT-LTFs that can be used to sound extra spatial dimensions of the MIMO channel not utilized by the HT-Data portion of the PPDU. These HT-LTFs are referred to as HT-ELTFs. Each HT long training symbol is 4 μ s. The number of space-time streams and the number of extension streams determines the number of HT-LTF symbols transmitted.

Tables 19-12, 19-13 and 90-14 from IEEE Std 802.11-2012 are reproduced here.

N_{STS} Determination	N_{HTDLTF} Determination	N_{HTELTF} Determination
Table 19-12 defines the number of space-time streams (N_{STS}) based on the number of spatial streams (N_{SS}) from the MCS and the STBC field.	Table 19-13 defines the number of HT-DLTFs required for the N_{STS} .	Table 19-14 defines the number of HT-ELTFs required for the number of extension spatial streams (N_{ESS}). N_{ESS} is defined in HT-SIG ₂ .


N_{STS} Determination			N_{HTDLTF} Determination		N_{HTELTf} Determination	
N_{SS} from MCS	STBC field	N_{STS}	N_{STS}	N_{HTDLTF}	N_{ESS}	N_{HTELTf}
1	0	1	1	1	0	0
1	1	2	2	2	1	1
2	0	2	3	4	2	2
2	1	3	4	4	3	4
2	2	4				
3	0	3				
3	1	4				
4	0	4				

Additional constraints include:

- $N_{HTLTF} = N_{HTDLTF} + N_{HTELTf} \leq 5$.
- $N_{STS} + N_{ESS} \leq 4$.
 - When $N_{STS} = 3$, N_{ESS} cannot exceed one.
 - If $N_{ESS} = 1$ when $N_{STS} = 3$ then $N_{HTLTF} = 5$.

HT Data Field

The HT-Data field follows the last HT-long training field (HT-LTF) of an HT-mixed packet.

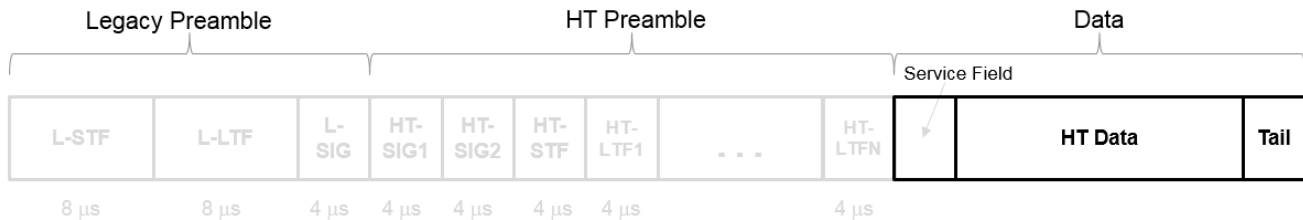

The HT-Data field carries one or more frames from the medium access control (MAC) layer and consists of four subfields.

HT Data Field

Service 16 bits	PSDU 1-65535 bytes	Tail $6N_{ES}$ bits	Pad Bits as needed
---------------------------	------------------------------	----------------------------------	---------------------------------


- **Service** — Contains 16 zeros to initialize the data scrambler
- **PSDU** — Variable-length field containing a PLCP service data unit (PSDU)
- **Tail** — Contains six zeros for each encoding stream, required to terminate a convolutional code

- **Pad Bits** — Variable-length field required to ensure that the HT-Data field consists of an integer number of symbols


Very High Throughput SIG-A Field

The very high throughput signal A (VHT-SIG-A) field contains information required to interpret VHT format packets. Similar to the non-HT signal (L-SIG) field for the non-HT OFDM format, this field stores the actual rate value, channel coding, guard interval, MIMO scheme, and other configuration details for the VHT format packet. Unlike the HT-SIG field, this field does not store the packet length information. Packet length information is derived from L-SIG and is captured in the VHT-SIG-B field for the VHT format.


For a detailed description of the VHT-SIG-A field, see section 21.3.8.3.3 of IEEE Std 802.11-2016. The VHT-SIG-A field consists of two symbols: VHT-SIG-A1 and VHT-SIG-A2. These symbols are located between the L-SIG and the VHT-STF portion of the VHT format PDU.

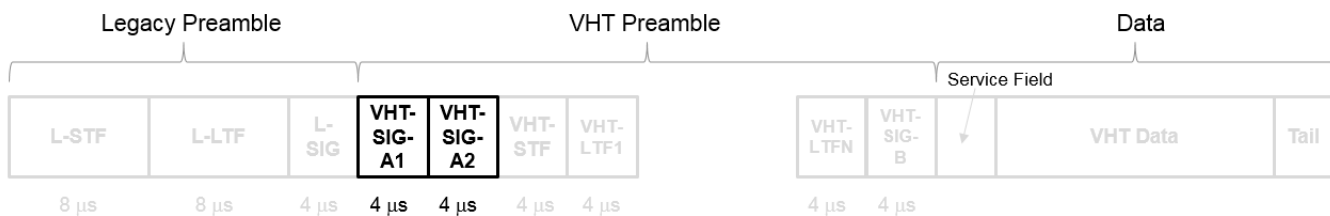

VHT-SIG-A1 Structure

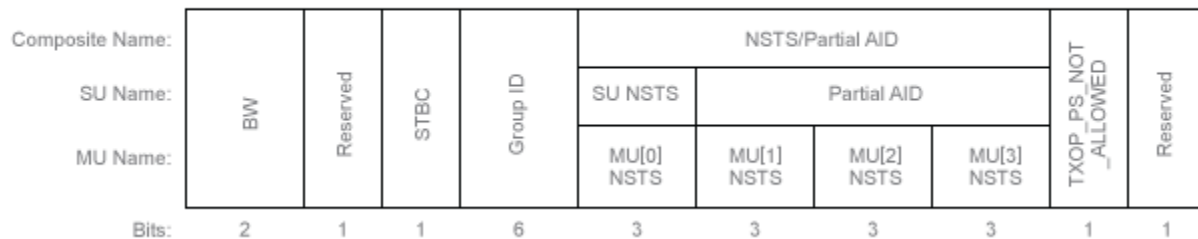

VHT-SIG-A2 Structure

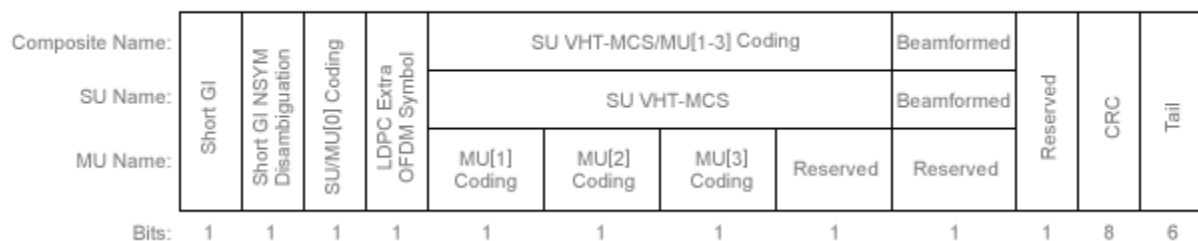


The VHT-SIG-A field includes these components. The bit field structures for VHT-SIG-A1 and VHT-SIG-A2 vary for single user or multiuser transmissions.

- **BW** — A two-bit field that indicates 0 for 20 MHz, 1 for 40 MHz, 2 for 80 MHz, or 3 for 160 MHz.
- **STBC** — A bit that indicates the presence of space-time block coding.

- **Group ID** — A six-bit field that indicates the group and user position assigned to a STA.
- **N_{STS}** — A three-bit field for a single user or 4 three-bit fields for a multiuser scenario, that indicates the number of space-time streams per user.
- **Partial AID** — An identifier that combines the association ID and the BSSID.
- **TXOP_PS_NOT_ALLOWED** — An indicator bit that shows if client devices are allowed to enter dose state. This bit is set to false when the VHT-SIG-A structure is populated, indicating that the client device is allowed to enter dose state.
- **Short GI** — A bit that indicates use of the 400 ns guard interval.
- **Short GI NSYM Disambiguation** — A bit that indicates if an extra symbol is required when the short GI is used.
- **SU/MU[0] Coding** — A bit field that indicates if convolutional or LDPC coding is used for a single user or for user MU[0] in a multiuser scenario.
- **LDPC Extra OFDM Symbol** — A bit that indicates if an extra OFDM symbol is required to transmit the data field.
- **MCS** — A four-bit field.
 - For a single user scenario, it indicates the modulation and coding scheme used.
 - For a multiuser scenario, it indicates use of convolutional or LDPC coding and the MCS setting is conveyed in the VHT-SIG-B field.
- **Beamformed** — An indicator bit set to 1 when a beamforming matrix is applied to the transmission.
- **CRC** — An eight-bit field used to detect errors in the VHT-SIG-A transmission.
- **Tail** — A six-bit field used to terminate the convolutional code.

Very High Throughput Short Training Field

The very high throughput short training field (VHT-STF) is a single OFDM symbol (4 μ s in length) that is used to improve automatic gain control estimation in a MIMO transmission. It is located between the VHT-SIG-A and VHT-LTF portions of the VHT packet.

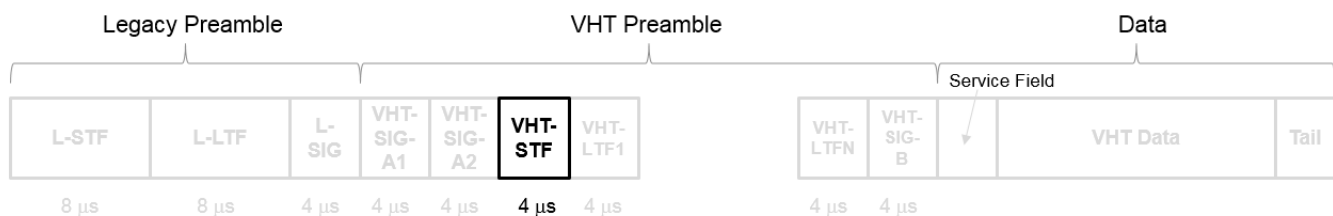


The frequency domain sequence used to construct the VHT-STF for a 20 MHz transmission is identical to the L-STF sequence. Duplicate L-STF sequences are frequency shifted and phase rotated to support VHT transmissions for the 40 MHz, 80 MHz, and 160 MHz channel bandwidths. As such, the L-STF and HT-STF are subsets of the VHT-STF.

For a detailed description of the VHT-STF, see section 21.3.8.3.4 of IEEE Std 802.11-2016.

Very High Throughput Long Training Fields

The very high throughput long training field (VHT-LTF) is located between the VHT-STF and VHT-SIG-B portion of the VHT packet.

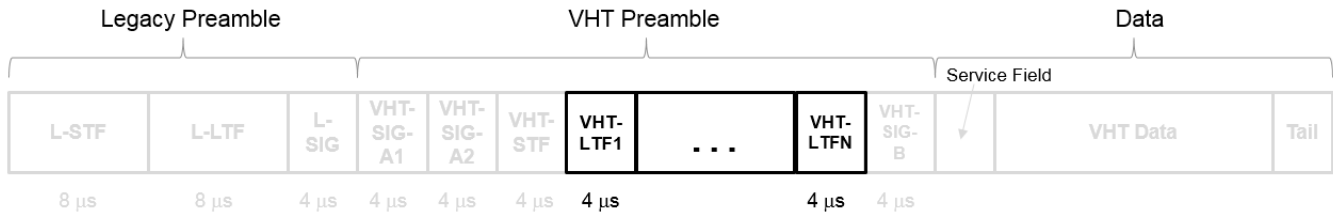


It is used for MIMO channel estimation and pilot subcarrier tracking. The VHT-LTF includes one VHT long training symbol for each spatial stream indicated by the selected MCS. Each symbol is 4 μs long. A maximum of eight symbols are permitted in the VHT-LTF.

For a detailed description of the VHT-LTF, see section 21.3.8.3.5 of IEEE Std 802.11-2016.

Very High Throughput SIG-B Field

The very high throughput signal B field (VHT-SIG-B) is used for multiuser scenario to set up the data rate and to fine-tune MIMO reception. It is modulated using MCS 0 and is transmitted in a single OFDM symbol.

The VHT-SIG-B field consists of a single OFDM symbol located between the VHT-LTF and the data portion of the VHT format PDU.

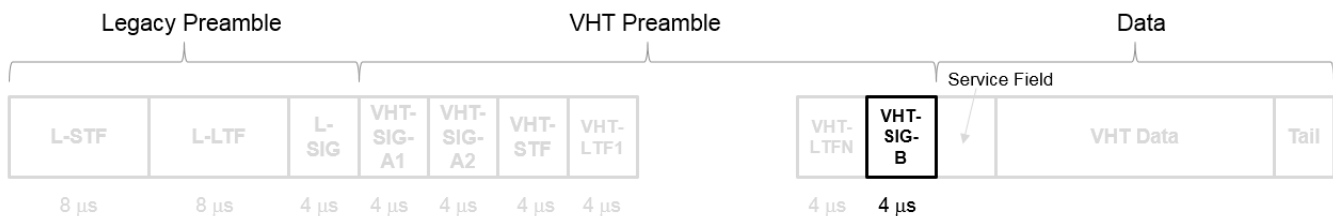


The very high throughput signal B (VHT-SIG-B) field contains the actual rate and A-MPDU length value per user. For a detailed description of the VHT-SIG-B field, see section 21.3.8.3.6 of IEEE Std 802.11-2016. The number of bits in the VHT-SIG-B field varies with the channel bandwidth and the assignment depends on whether single user or multiuser scenario is allocated. For single user configurations, the same information is available in the L-SIG field but the VHT-SIG-B field is included for continuity purposes.

Field	VHT MU PPDU Allocation (bits)			VHT SU PPDU Allocation (bits)			Description
	20 MHz	40 MHz	80 MHz, 160 MHz	20 MHz	40 MHz	80 MHz, 160 MHz	
VHT-SIG-B	B0-15 (16)	B0-16 (17)	B0-18 (19)	B0-16 (17)	B0-18 (19)	B0-20 (21)	A variable-length field that indicates the size of the data payload in four-byte units. The length of the field depends on the channel bandwidth.
VHT-MCS	B16-19 (4)	B17-20 (4)	B19-22 (4)	N/A	N/A	N/A	A four-bit field that is included for multiuser scenarios only.
Reserved	N/A	N/A	N/A	B17-19 (3)	B19-20 (2)	B21-22 (2)	All ones
Tail	B20-25 (6)	B21-26 (6)	B23-28 (6)	B20-25 (6)	B21-26 (6)	B23-28 (6)	Six zero-bits used to terminate the convolutional code.
Total # bits	26	27	29	26	27	29	
Bit field repetition	1	2	4 <i>For 160 MHz, the 80 MHz channel is repeated twice.</i>	1	2	4 <i>For 160 MHz, the 80 MHz channel is repeated twice.</i>	

For a null data packet (NDP), the VHT-SIG-B bits are set according to Table 21-15 of IEEE Std 802.11-2016.


VHT Data Field

The VHT-Data field carries one or more frames from the medium access control (MAC) layer. This field follows the VHT-SIG-B field in a VHT PPDU.

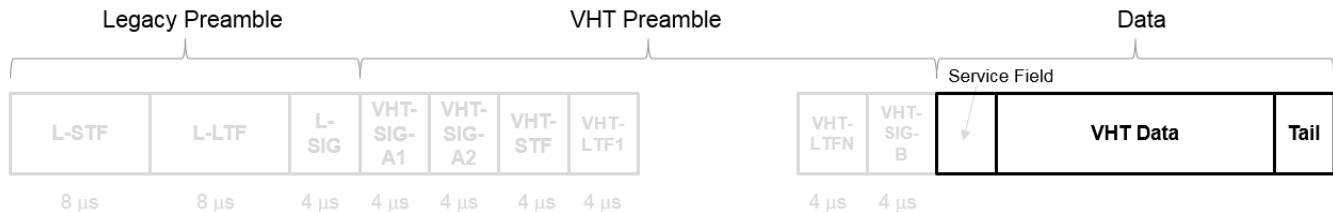

For a detailed description of the VHT-Data field, see section 21.3.10 of IEEE Std 802.11-2016. The VHT Data field consists of four subfields.

VHT Data Field

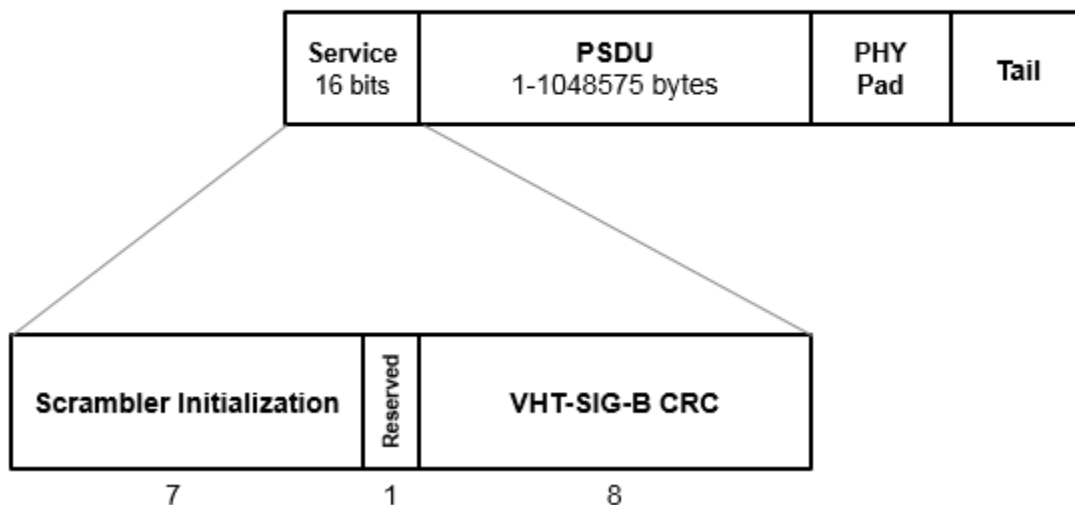

- **Service field** — Contains a seven-bit scrambler initialization state, one bit reserved for future considerations, and eight bits for the VHT-SIG-B cyclic redundancy check (CRC) field
- **PSDU** — Variable-length field containing a PLCP service data unit
- **PHY Pad** — Variable number of bits passed to the transmitter to create a complete OFDM symbol
- **Tail** — Bits required to terminate a convolutional code (not required when the transmission uses LDPC channel coding)

References

- [1] IEEE Std 802.11ax-2021 (Amendment to IEEE Std 802.11-2020). "Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications. Amendment 1: Enhancements for High Efficiency WLAN." IEEE Standard for Information technology — Telecommunications and information exchange between systems. Local and metropolitan area networks — Specific requirements.

- [2] IEEE Std 802.11-2020 (Revision of IEEE Std 802.11-2016). “Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications.” IEEE Standard for Information Technology — Telecommunications and Information Exchange between Systems — Local and Metropolitan Area Networks — Specific Requirements.
- [3] Perahia, E., and R. Stacey. *Next Generation Wireless LANs: 802.11n and 802.11ac*. 2nd Edition. United Kingdom: Cambridge University Press, 2013.
- [4] IEEE P802.11be/D1.5. “Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications. Amendment 8: Enhancements for Extremely High Throughput (EHT).” Draft Standard for Information Technology — Telecommunications and Information Exchange between Systems — Local and Metropolitan Area Networks — Specific Requirements.
- [5] IEEE Std 802.11ba-2021. “Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications. Amendment 3: Wake-Up Radio Operation.” IEEE Standard for Information Technology — Telecommunications and Information Exchange between Systems. Local and Metropolitan Area Networks — Specific Requirements.

See Also

“Waveform Generation” on page 3-17 | “What Is WLAN?” on page 2-2 | “802.11 Standards Supported by WLAN Toolbox” on page 3-2 | “HE MU Transmission” on page 3-4

Packet Size and Duration Dependencies

WLAN standards specify a maximum packet duration (*TXTIME*) for the various formats. The HE and S1G formats additionally specify the maximum PSDU length (*PSDU_LENGTH*) and number of symbols (N_{SYM}). These WLAN properties are functions of transmission properties set in WLAN Toolbox configuration objects. The settings of WLAN format-specific configuration objects are validated when the object is used. Command-line feedback informs you when the configuration violates the packet size or duration limits.

This table indicates relevant properties that help determine the packet duration and length for the various WLAN formats. It also provides references to the IEEE standards for further details.

WLAN Format	Length-Related Validation	Relevant and Dependent Properties
HE	<p><i>TXTIME</i> and <i>PSDU_LENGTH</i> require validation.</p> <p><i>TXTIME</i> and <i>PSDU_LENGTH</i> are defined by the equations in section 27.4.3 of [2].</p> <p>As specified by <i>aPPDUMaxTime</i> and <i>aPSDUMaxLength</i> in Table 27-53, the maximum <i>TXTIME</i> is 5.484 ms and the maximum <i>PSDU_Length</i> is 6,500,631 octets.</p>	<p>For single user HE and single user extended range HE:</p> <p>For <i>PSDU_LENGTH</i>:</p> <ol style="list-style-type: none"> 1 ChannelBandwidth 2 NumSpaceTimeStreams 3 STBC 4 MCS 5 DCM 6 ChannelCoding 7 APEPLength <p>For <i>TXTIME</i>:</p> <ol style="list-style-type: none"> 1 All the above <i>PSDU_LENGTH</i> properties 2 ExtendedRange 3 GuardInterval 4 HELTFType 5 HighDoppler 6 MidamblePeriodictiy^(he_1) <p>For multi-user HE:</p> <p>The <i>PSDU_LENGTH</i> is different for each user in the configuration, but the transmit time is the same (like VHT). For <i>PSDU_LENGTH</i>:</p> <ul style="list-style-type: none"> • Can vary per user: <ol style="list-style-type: none"> 1 User RU size is based on: <ol style="list-style-type: none"> a AllocationIndex b ChannelBandwidth, which is derived from AllocationIndex c Lower26ToneRU^(he_2) d Upper26ToneRU^(he_2) 2 NumSpaceTimeStreams 3 MCS 4 DCM 5 ChannelCoding 6 APEPLength

WLAN Format	Length-Related Validation	Relevant and Dependent Properties
		<ul style="list-style-type: none"> • Same for all users: <ul style="list-style-type: none"> • STBC <p>For TXTIME:</p> <ol style="list-style-type: none"> 1 The above PSDU_LENGTH properties that can vary per user 2 GuardInterval 3 HELTFTType 4 SIGBCompression^{(he_3)(he_4)} 5 SIGBMCS 6 SIGBDCM 7 HighDoppler 8 MidamblePeriodictiy^(he_1) <p>Notes:</p> <p>^(he_1) MidamblePeriodictiy is only relevant when HighDoppler is true.</p> <p>^(he_2) Lower26ToneRU and Upper26ToneRU are only relevant if the user for which the PSDU_LENGTH is derived is allocated on either of these RUs.</p> <p>^(he_3) If SIG-B compression is used, there is common field in HE-SIG-B field that affects the TXTIME computation.</p> <p>^(he_4) The SIGBCompression property is only relevant when a full-band 20 MHz allocation is specified.</p>
DMG	<p><i>TXTIME</i> requires validation.</p> <p><i>TXTIME</i> is defined by the equations in section 20.12.3 of [1].</p> <p>As specified by <i>aPPDUMaxTime</i> in Table 20-32, the maximum <i>TXTIME</i> is 2 ms.</p>	<ol style="list-style-type: none"> 1 MCS ^(dmg_1) 2 PSDULength 3 TrainingLength ^(dmg_1) 4 PacketType ^(dmg_1) 5 BeamTrackingRequest ^(dmg_1) <p>Notes:</p> <p>^(dmg_1) The property helps determine whether the packet is a beam refinement protocol (BRP) packet containing training fields or if it is a general packet signaling the number of fields to append. For more information, see [1]</p>

WLAN Format	Length-Related Validation	Relevant and Dependent Properties
S1G	<p><i>TXTIME</i>, <i>PSDU_LENGTH</i>, and N_{SYM} require validation.</p> <p>The equations for all three of these characteristics are in section 23.4.3 of [1], and the maximum <i>TXTIME</i> and <i>PSDU_LENGTH</i> are defined in Table 23-40.</p> <ul style="list-style-type: none"> • As specified by <i>aPPDUMaxTime</i>, the maximum <i>TXTIME</i> is 27.92 ms. This <i>TXTIME</i> is the maximum PPDU duration for an S1G_1M PPDU with: <ul style="list-style-type: none"> • A bandwidth of 1 MHz • S1G MCS set to 10 • One spatial stream, limited by a PSDU length of 511 octets. • As specified by <i>aPPDUMaxLength</i>, the maximum <i>PSDU_LENGTH</i> is 797,159 octets. This PSDU length is the maximum length in octets for an S1G SU PPDU with: <ul style="list-style-type: none"> • A bandwidth of 16 MHz • S1G-MCS set to 9 • Four spatial streams, limited by 511 data symbols supported by the <i>Length</i> field in the S1G SIG field, excluding the <i>SERVICE</i> field and tail bits. • The maximum N_{SYM} is 511. 	<p>For <i>TXTIME</i>, the relevant properties are:</p> <ol style="list-style-type: none"> 1 ChannelBandwidth 2 STBC ^(s1g_1) 3 GuardInterval 4 ChannelCoding ^(MU) 5 APEPLength ^(MU) 6 PSDULength - This property is read-only. When undefined, PSDULength is returned as empty of size 1×0. An empty return can happen when the set of property values for the object define an invalid state. ^(MU) 7 MCS ^(MU) 8 NumSpaceTimeStreams ^(MU) 9 NumUsers <p>For <i>PSDU_LENGTH</i> and N_{SYM}, the relevant properties are:</p> <ol style="list-style-type: none"> 1 ChannelBandwidth 2 STBC ^(s1g_1) 3 ChannelCoding ^(MU) 4 APEPLength ^(MU) 5 PSDULength - This property is read-only. When undefined, PSDULength is returned as empty, []. An empty return can happen when the set of property values for the object define an invalid state. ^(MU) 6 MCS ^(MU) 7 NumSpaceTimeStreams ^(MU) 8 NumUsers <p>Notes:</p> <p>^(s1g_1) The property is relevant only when NumUsers = 1.</p> <p>^(MU) The property has multiple values for multi-user operation.</p>

WLAN Format	Length-Related Validation	Relevant and Dependent Properties
VHT	<p><i>TXTIME</i> requires validation.</p> <p><i>TXTIME</i> is defined by the equations in section 21.4.3 in [1].</p> <p>As specified by <i>aPPDUMaxTime</i> in Table 21-29, the maximum <i>TXTIME</i> is 5.484 ms.</p>	<ol style="list-style-type: none"> 1 ChannelBandwidth 2 STBC ^(vht_1) 3 GuardInterval 4 ChannelCoding ^(MU) 5 APEPLength ^(MU) 6 PSDULength - This property is read only. When undefined, it is returned as an empty of size 1×0. ^(MU) 7 MCS ^(MU) 8 NumSpaceTimeStreams ^(MU) 9 NumUsers <p>Notes:</p> <p>^(vht_1) The property is relevant only when NumUsers = 1.</p> <p>^(MU) The property has multiple values for multi-user operation.</p>
HT	<p><i>TXTIME</i> requires validation.</p> <p><i>TXTIME</i> is defined by the equations in section 19.4.3 of [1].</p> <p>As specified in Table 9-19, the maximum <i>TXTIME</i> for HT mixed PPDU is 5.484 ms.</p>	<ol style="list-style-type: none"> 1 ChannelBandwidth 2 GuardInterval 3 ChannelCoding 4 PSDULength 5 MCS 6 NumSpaceTimeStreams 7 NumExtensionStreams
non-HT	<p><i>TXTIME</i> requires validation.</p> <p><i>TXTIME</i> for OFDM modulation is defined by the equations in section 17.4.3 of [1].</p> <p>Based on equation (17-29) and a valid combination of property settings, the maximum <i>TXTIME</i> is 21.936 ms.</p>	<ol style="list-style-type: none"> 1 Modulation ^(non-ht_1) 2 PSDULength 3 MCS ^(non-ht_1) 4 DataRate ^(non-ht_1) <p>Notes:</p> <p>^(non-ht_1) DataRate or MCS might be relevant depending on the Modulation setting.</p>

References

- [1] IEEE Std 802.11-2020 (Revision of IEEE Std 802.11-2016). "Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications." IEEE Standard for Information Technology — Telecommunications and Information Exchange between Systems — Local and Metropolitan Area Networks — Specific Requirements.

[2] IEEE Std 802.11ax-2021 (Amendment to IEEE Std 802.11-2020). “Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications. Amendment 1: Enhancements for High Efficiency WLAN.” IEEE Standard for Information technology — Telecommunications and information exchange between systems. Local and metropolitan area networks — Specific requirements.

See Also

More About

- “WLAN PPDU Structure” on page 2-9

WLAN MAC Frame Structure


802.11 MAC Protocol

The IEEE 802.11 family of standards implements the medium access control (MAC) layer as a frame exchange protocol. By means of this protocol, the sender of a MAC frame can determine when the intended recipient successfully receives that frame. The sender transmits the MAC frame in the data field of a physical layer convergence procedure (PLCP) protocol data unit (PPDU). For more information on WLAN PPDU content, see "WLAN PPDU Structure" on page 2-9. For more information on the role of the MAC layer in WLAN message exchange, see "What Is WLAN?" on page 2-2

General MAC Frame Format

Section 9.2.1 of [1] specifies that the general MAC frame must consist of a MAC header, frame body, and a frame check sequence (FCS). MAC frames can be either protocol version 0 (PV0) or protocol version 1 (PV1). WLAN Toolbox supports only PV0 MAC frames. For information on PV1 MAC frames, see Section 9.8 of [1].

This figure shows the fields comprising the MAC header of a PV0 MAC frame and their sizes in octets.

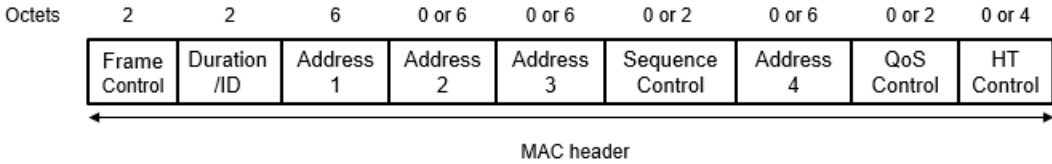


As indicated in Section 9.2.4 of [1], all MAC frames contain the first three header fields and the FCS. The frame type and subtype determine the additional fields that are contained in the frame.

The frame body, which immediately follows the header, has a variable size. Table 9-25 in [1] specifies the maximum size and duration of the frame body for non-HT, HT, VHT, and HE PPDU formats.

The FCS consists of a four-octet cyclic redundancy check (CRC), which the sender computes based on the frame header and body in accordance with Section 9.2.4.8 of [1].

The combination of MAC header, frame body, and FCS defines a MAC protocol data unit (MPDU). This figure shows the structure of an MPDU and its placement within a PPDU.

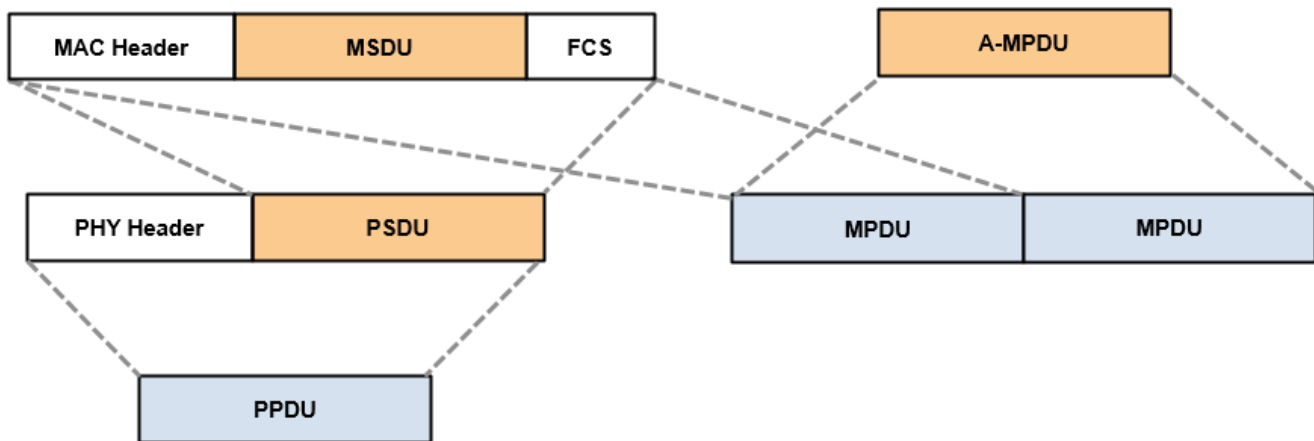

To increase throughput, IEEE 802.11 supports the formation of aggregate MPDUs (A-MPDUs) by concatenating multiple MPDUs. For more information on MPDU aggregation and A-MPDU structure, see section 9.7 of [2].

MAC Frame Types

IEEE 802.11 supports four types of MAC frame: Management, Control, Data, and Extension frames. Within each of these types, the standards define a variety of subtypes. Table 9-1 of [1] provides a list of the valid types and subtypes, and section 9.3 provides detailed information on frame formats by type and subtype.

This table shows some of the supported frame types and subtypes for HE, VHT, HT, and non-HT transmission formats. For information on the format of any of these MAC frames, see the relevant sections of [1] and [2].

Frame Type	Frame Subtype	Described in This Section of the Standards
Control	Request to Send (RTS)	9.3.1.2 of [1]
Control	Clear to Send (CTS)	9.3.1.3 of [1]
Control	Acknowledgement (Ack)	9.3.1.4 of [1]
Control	Block Ack	9.3.1.8 of [1]
Control	Trigger (Basic)	9.3.1.22 of [2]
Control	Trigger (MU-BAR)	9.3.1.22 of [2]
Control	Trigger (MU-RTS)	9.3.1.22 of [2]
Data	Data	9.3.2.1 of [1]
Data	Null	9.3.2.1 of [1]
Data	Quality of Service (QoS) Data	9.3.2.1 of [1]
Data	QoS Null	9.3.2.1 of [1]
Management	Beacon	9.3.3.2 of [1]

Each frame type serves a distinct purpose in an 802.11 network.

- Control frames support the delivery of data, management, and extension frames. For example, acknowledgement frames confirm that the intended recipient of a frame has successfully received it. Control frames do not contain a frame body, consisting only of a frame header and FCS.
- Data frames contain data from higher layers in a MAC service data unit (MSDU). To support higher throughput, data frames support aggregate MSDUs (A-MSDUs), which comprise multiple concatenated MSDUs in addition to the MAC header and FCS. For more information on MSDU aggregation, see section 9.3.2.2 of [1].
- Management frames establish and maintain connections by carrying information related to the capabilities and configurations of devices operating within a network.
- Extension frames extend each of these frame types for use in an 802.11ad directional multigigabit (DMG) transmission.

The “Generate and Parse WLAN MAC Frames” on page 3-26 tutorial demonstrates the basic steps of MAC frame generation and decoding with WLAN Toolbox functions and configuration objects.

The “802.11 MAC Frame Generation” example shows how to generate control, data, and management frames, and how to export frames to a packet capture (PCAP) file for analysis.

References

- [1] IEEE Std 802.11-2020 (Revision of IEEE Std 802.11-2016). “Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications.” IEEE Standard for Information Technology — Telecommunications and Information Exchange between Systems — Local and Metropolitan Area Networks — Specific Requirements.
- [2] IEEE Std 802.11ax-2021 (Amendment to IEEE Std 802.11-2020). “Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications. Amendment 1: Enhancements for High Efficiency WLAN.” IEEE Standard for Information technology — Telecommunications and information exchange between systems. Local and metropolitan area networks — Specific requirements.
- [3] Gast, Matthew. *802.11ac: A Survival Guide*. 1st ed, O'Reilly, 2013.

See Also

More About

- “What Is WLAN?” on page 2-2
- “Generate and Parse WLAN MAC Frames” on page 3-26
- “802.11ac Waveform Generation with MAC Frames”
- “802.11 MAC Frame Generation”
- “802.11 MAC Frame Decoding”
- “802.11 OFDM Beacon Frame Generation”
- “OFDM Beacon Receiver Using Software-Defined Radio”

WLAN Radio Frequency Channels

This example describes WLAN radio frequency channel designations and shows how to calculate the channel center frequency in accordance with IEEE® 802.11™ specifications.

IEEE 802.11 Channel Designations


WLAN operates in unlicensed radio frequency (RF) spectra. Governing bodies in individual countries allocate these spectra and appropriate regulatory bodies specify values of maximum allowable output power. For a detailed description of country-specific information, operating classes, and behavior limits, see Annex E of [1] and [2].

The IEEE 802.11 standards designate bands for signal transmission, each corresponding to a standard or group of standards. Of these, WLAN Toolbox™ software supports these bands and corresponding standards.

- 900 MHz (802.11ah™)
- 2.4 GHz (802.11b/g/n/ax)
- 5 GHz (802.11a/h/j/n/ac/ax)
- 6 GHz (802.11ax™)
- 60 GHz (802.11ad/ay)

Within each band, the standards specify channel numbers with a designated channel spacing. For example, the 2.4 GHz band contains channels 1 to 13, spaced 5 MHz apart, and channel 14, spaced 12 MHz from channel 13. Each band also has a designated channel start frequency, f_s , for the first channel. For the 2.4, 5, and 6 GHz operating bands, f_s is 2.407, 5, and 5.950 GHz, respectively.

Because WLAN channel bandwidths are greater than 5 MHz, cross-channel interference limits the number of designated usable channels. Access point deployments manage interference from neighboring cells by operating on nonoverlapping channels. In the United States, the 2.4 GHz band designated usable nonoverlapping channels are 1, 6, and 11. This figure shows overlap for channels 1–14 in the 2.4 GHz band.

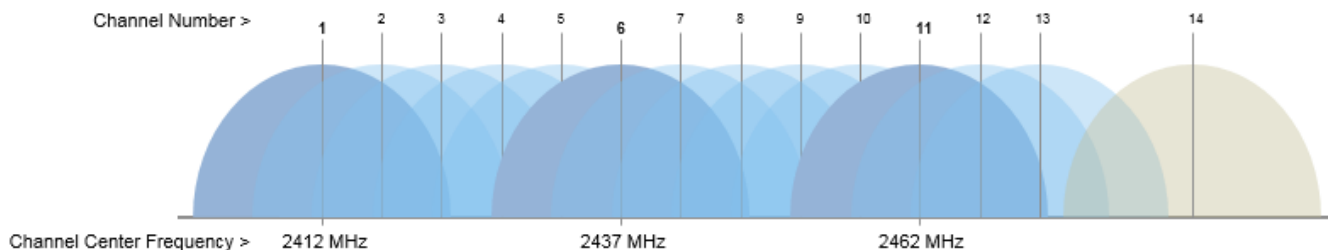

Channel Center Frequency Calculation

To determine the channel center frequency for a given channel number in the 2.4, 5, or 6 GHz frequency band, use the `wlanChannelFrequency` function. For example, calculate the center frequency of channel 6 in the 2.4 GHz band.

```
channel = 6;  
band = 2.4;  
fc = wlanChannelFrequency(channel,band)  
  
fc = 2.4370e+09
```

Calculate the center frequency of channels 37, 42, and 91 in the 6 GHz band.

```
channel = [37 42 91];  
band = 6;  
fc = wlanChannelFrequency(channel,band)  
  
fc = 1×3  
109 ×  
  
6.1350    6.1600    6.4050
```

References

- [1] IEEE Std 802.11-2020 (Revision of IEEE Std 802.11-2016). "Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications." IEEE Standard for Information Technology — Telecommunications and Information Exchange between Systems — Local and Metropolitan Area Networks — Specific Requirements.
- [2] IEEE Std 802.11ax-2021 (Amendment to IEEE Std 802.11-2020). "Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications. Amendment 1: Enhancements for High Efficiency WLAN." IEEE Standard for Information technology — Telecommunications and information exchange between systems. Local and metropolitan area networks — Specific requirements.

Acknowledgments

This table lists the copyright owners of content used in the WLAN Toolbox documentation.

Source	Copyright Owner
Content from IEEE Std 802.11-2020	Adapted and reprinted with permission from IEEE. Copyright IEEE 2020. All rights reserved.
Content from IEEE Std 802.11ax-2021	Adapted and reprinted with permission from IEEE. Copyright IEEE 2021. All rights reserved.

Tutorials

- “802.11 Standards Supported by WLAN Toolbox” on page 3-2
- “HE MU Transmission” on page 3-4
- “EHT MU Transmission” on page 3-11
- “Waveform Generation” on page 3-17
- “App-Based WLAN Waveform Generation” on page 3-23
- “Generate and Parse WLAN MAC Frames” on page 3-26
- “WLAN Channel Models” on page 3-28
- “Packet Recovery” on page 3-37
- “Transmit-Receive Chain” on page 3-48

802.11 Standards Supported by WLAN Toolbox

WLAN Toolbox configuration objects define transmission parameters for IEEE 802.11 waveforms. This table shows the 802.11 versions that WLAN Toolbox supports for physical layer modeling, as well as the corresponding IEEE standards, packet formats, physical protocol data unit (PPDU) types, and WLAN Toolbox configuration objects.

802.11 Version	Transmission Packet Format	Supported Amendment And Draft Standard	Supported PPDU Format	WLAN Toolbox Configuration Object
802.11be (Wi-Fi 7)	EHT	IEEE P802.11be/D1.5	EHT MU	wlanEHTMUConfig
802.11az	NGP	IEEE P802.11az/D2.0	HE ranging NDP HE TB ranging NDP	See “802.11az Waveform Generation”
802.11ba	WUR	IEEE Std 802.11ba-2021	WUR Basic WUR FDMA	wlanWURConfig
802.11ax (Wi-Fi 6 and 6E)	HE	IEEE Std 802.11ax-2021	HE SU	wlanHESUConfig
			HE ER SU	
			HE MU	wlanHEMUConfig
			HE TB	wlanHETBConfig
			non-HT duplicate	wlanNonHTConfig
802.11ah	S1G	IEEE P802.11ah/D5.0	≥2 MHz long preamble	wlanS1GConfig
			1 MHz	
			≥2 MHz short preamble	
802.11ac (Wi-Fi 5)	VHT	IEEE Std 802.11-2020	VHT single user	wlanVHTConfig
			VHT MU-MIMO	
			non-HT duplicate	wlanNonHTConfig
802.11n (Wi-Fi 4)	HT	IEEE Std 802.11-2020	HT-mixed	wlanHTConfig
			non-HT duplicate	wlanNonHTConfig
802.11ad	DMG	IEEE Std 802.11-2020	Control	wlanDMGConfig
			OFDM	
			Single carrier	
802.11a	Non-HT	IEEE Std 802.11-2020	DSSS or OFDM	wlanNonHTConfig
802.11b				
802.11g				
802.11j				

802.11 Version	Transmission Packet Format	Supported Amendment And Draft Standard	Supported PPDU Format	WLAN Toolbox Configuration Object
802.11p				

See Also

“WLAN PPDU Structure” on page 2-9 | “Waveform Generation” on page 3-17 | “What Is WLAN?” on page 2-2

HE MU Transmission

In this section...

“Transmission Mode Options” on page 3-4

“Allocation Index” on page 3-4

Transmission Mode Options

The options for high-efficiency multi-user (HE MU) transmissions are:

- Orthogonal frequency-division multiple access (OFDMA)
- Full-band multi-user multiple-input/multiple-output (MU-MIMO)
- Mixed OFDMA and MU-MIMO

To choose a transmission mode, you must enable or disable SIGB compression by specifying the state of the SIGB compression bit in the HE-SIG-A field.

- For a 20 MHz transmission, specify the SIGB compression bit directly by setting the `SIGBCompression` property of the `wlanHEMUConfig` object.
 - To enable SIGB compression, set the `SIGBCompression` property to 1 (`true`).
 - To disable SIGB compression, set the `SIGBCompression` property to 0 (`false`).
- For a 40, 80, or 160 MHz transmission, enable or disable SIGB compression by setting the `AllocationIndex` property of the `wlanHEMUConfig` object.

When SIGB compression is enabled, the transmission is full-bandwidth MU-MIMO. The HE-SIG-B field contains no common field, and the resource unit (RU) allocation in the user fields adheres to a standard-specified pattern. Because there is no common field in this case, no allocation index is transmitted. The number of users is determined by decoding the HE-SIG-A field.

When SIGB compression is disabled:

- The transmission is either OFDMA or mixed OFDMA and MU-MIMO, depending on the `AllocationIndex` property of the HE MU configuration object.
- The HE-SIG-B common field includes RU allocation subfields to specify the RU assignment and the number of users per RU for each 20 MHz bandwidth segment.

The “802.11ax Waveform Generation” example introduces the concepts associated with HE transmission modes, RU allocation, and parameterization.

The “Recovery Procedure for an 802.11ax Packet” example demonstrates the required steps to detect and decode an HE MU transmission.

Allocation Index


When creating a `wlanHEMUConfig` object, you must specify the value of the `AllocationIndex` property. Once the object is created, the `AllocationIndex` property is read-only.

The `AllocationIndex` property defines the RU allocation index or a set of RU allocation indices.

- Specify a single allocation index using one integer in either of these forms.
 - An integer in the interval [0, 223]
 - An 8-bit binary sequence specified as a string or character vector
- Specify multiple allocation indices using two, four, or eight integer values in any of these forms.
 - A vector of integers in the interval [0, 223]
 - An 8-bit binary sequence specified as a string array
 - An 8-bit binary sequence specified as a cell array of character vectors

You can signal punctured 20 MHz or 40 MHz subchannels in an 80 MHz or 160 MHz transmission. To signal a punctured 20 MHz subchannel, set the corresponding element to 113. To signal a punctured 40 MHz subchannel, set the two corresponding adjacent elements to 114. To signal an empty HE-SIG-B user field in an HE-SIG-B content channel, set the corresponding element to 114 or 115.

An RU is a group of 26, 52, 106, 242, 484, 996, or 2×996 subcarriers defining an allocation unit in time and frequency.

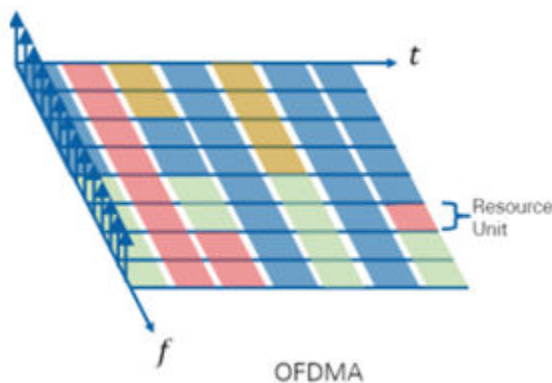


The values specified in the `AllocationIndex` property correspond to the 8-bit indices for each 20 MHz subchannel in the first column of Table 27-26 in [1]. The allocation indices define the number of RUs, RU sizes, and number of users assigned to each RU. When SIGB compression is enabled, the number of users is determined by decoding the HE-SIG-A field. When SIGB compression is disabled, the number of users is determined by decoding the HE-SIG-B common field.

When SIGB compression is enabled, the HE-SIG-B field contains only the user field.

When SIGB compression is disabled, the HE-SIG-B field includes both the common and user fields. The common field carries the RU Allocation subfields in one or two content channels. Depending on the PDU bandwidth, the common field can contain multiple RU Allocation subfields. For a discussion of the frequency-domain mapping of channel contents into the common field, see section 27.3.11.8.5 of [1].

This figure shows the structure of the HE-SIG-B field when SIGB compression is disabled.

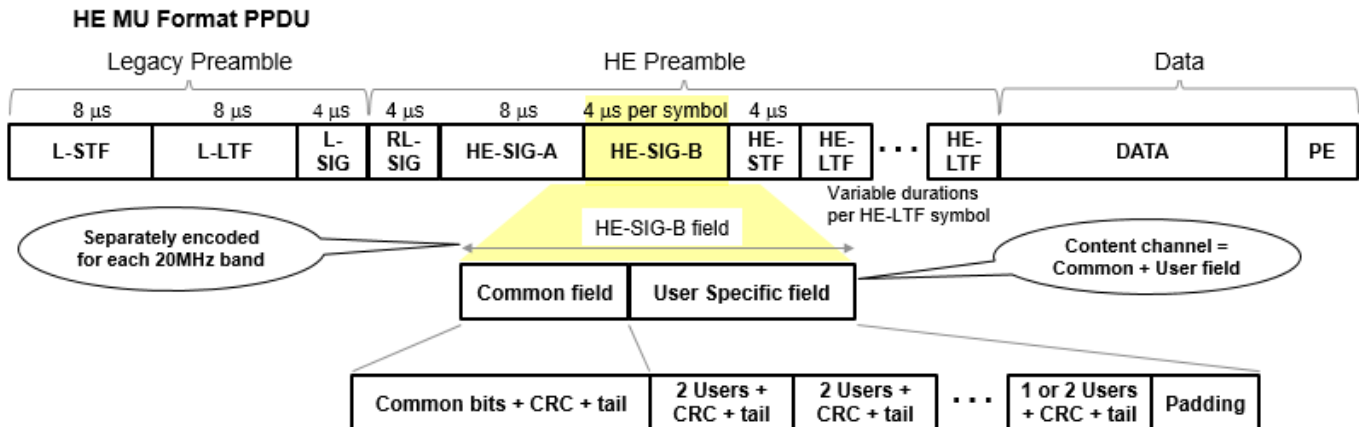

The format of the common field is defined in Table 27-24 of [1]. The RU Allocation subfield in the common field of HE-SIG-B consists of eight bits that indicate this information for each 20 MHz PPDU bandwidth.

- RU assignment in the frequency domain, which determines the size of the RUs and their placement in the frequency domain.
- Number of user fields in a 20 MHz band within the HE-SIG-B content channel, which determines the number of users multiplexed in the RUs. For RUs of size greater than or equal to 106 tones, which support MU-MIMO, the RU Allocation subfield indicates the number of users multiplexed using MU-MIMO. The HE-SIG-B field consists of N RU Allocation subfields, where:
 - $N = 1$ for 20 MHz and 40 MHz HE MU PPDUs
 - $N = 2$ for 80 MHz HE MU PPDUs
 - $N = 4$ for 160 MHz and 80+80 MHz HE MU PPDUs

This table lists the allocation indices and corresponding RU assignments for 20 MHz subchannels and RUs with at most 242 tones. The table shows the number of tones per RU and the number of users assigned for each allocation index.

Allocation Index	20-MHz Subchannel Resource Unit (RU) Assignment									
0	26	26	26	26	26	26	26	26	26	26
1	26	26	26	26	26	26	26	26	52	
2	26	26	26	26	26	26	52	26	26	
3	26	26	26	26	26	26	52	52		
4	26	26	52	26	26	26	26	26	26	
5	26	26	52	26	26	26	26	52		
6	26	26	52	26	26	52	26	26	26	
7	26	26	52	26	26	52	52	52		
8	52	26	26	26	26	26	26	26	26	
9	52	26	26	26	26	26	26	26	52	
10	52	26	26	26	26	52	26	26	26	
11	52	26	26	26	26	52	52	52		
12	52	52	26	26	26	26	26	26	26	26
13	52	52	26	26	26	26	26	52		
14	52	52	26	26	26	52	26	26	26	
15	52	52	26	26	26	52	52	52		
16-23 (15 + NumUsers)	52	52	-	-	-	-	106 (1-8 users)	-	-	-
24-31 (23 + NumUsers)	106 (1-8 users)			-	-	-	52	52	-	-
32-39 (31 + NumUsers)	26	26	26	26	26	26	106 (1-8 users)	-	-	-
40-47 (39 + NumUsers)	26	26	52	26	26	26	106 (1-8 users)	-	-	-
48-55 (47 + NumUsers)	52	26	26	26	26	26	106 (1-8 users)	-	-	-
56-63 (55 + NumUsers)	52	52	26	26	26	26	106 (1-8 users)	-	-	-
64-71 (63 + NumUsers)	106 (1-8 users)			26	26	26	26	26	26	
72-79 (71 + NumUsers)	106 (1-8 users)			26	26	26	26	52		
80-87 (79 + NumUsers)	106 (1-8 users)			26	52	26	26	26		
88-95 (87 + NumUsers)	106 (1-8 users)			26	52	52	52			
96-103 (95 + NumUsers)	106			-	-	-	106 (1-8 users)	-	-	-
104-112 (103 + NumUsers)	106 (1-8 users)			-	-	-	106	-	-	-
112	52	52	-	-	-	52	52	52		
113	Empty 242-tone RU - No user assigned									
116-127	Reserved									
128-135 (127 + NumUsers)	106			26	26	26	106 (1-8 users)	-	-	-
136-143 (135 + NumUsers)	106 (2 users)			26	26	26	106 (1-8 users)	-	-	-
144-151 (143 + NumUsers)	106 (3 users)			26	26	26	106 (1-8 users)	-	-	-
152-159 (151 + NumUsers)	106 (4 users)			26	26	26	106 (1-8 users)	-	-	-
160-167 (159 + NumUsers)	106 (5 users)			26	26	26	106 (1-8 users)	-	-	-
168-175 (167 + NumUsers)	106 (6 users)			26	26	26	106 (1-8 users)	-	-	-
176-183 (175 + NumUsers)	106 (7 users)			26	26	26	106 (1-8 users)	-	-	-
184-191 (183 + NumUsers)	106 (8 users)			26	26	26	106 (1-8 users)	-	-	-
192-199 (191 + NumUsers)	242 (1-8 users)									

- RU assigned to 1 user
- RU assigned to 1-8 users, depending on the allocation index
- RU assigned to specified number of users, irrespective of the allocation index
- 26-tone RU assigned to one user as part of a 20-MHz subchannel assignment of nine 26-tone RUs
- No users assigned to this RU; no data field transmitted on these subcarriers
- The number of users assigned to this 106-tone RU depends on the allocation index
- If selected, this 20-MHz subchannel is unused; the subchannel is punctured
- The number of users assigned to the upper 106-tone RU depends on the allocation index, but two users are always assigned to the lower 106-tone RU
- From 2 to 8 users assigned to the lower 106-tone RU depending on the allocation index

This table lists the allocation indices and corresponding RU assignments for subchannels greater than 20 MHz and RUs of more than 242 tones.

Allocation Index	RU Allocation & Number of Users on the Corresponding HE-SIG-B Content Channel for RU Size > 242
114	484-tone RU with no users signaled on the corresponding HE-SIG-B content channel
115	996-tone RU with no users signaled on the corresponding HE-SIG-B content channel
200-207 (199 + NumUsers)	484-tone RU with 1-8 users signaled in the corresponding HE-SIG-B content channel Full band 40 MHz (1-8 users), or Full band 80 MHz (1-8 users), or Full band 160 MHz (1-8 users)
208-215 (207 + NumUsers)	996-tone RU with 1-8 users signaled in the corresponding HE-SIG-B content channel
216-223 (215 + NumUsers)	Full band 160 MHz (1-8 users)
224-255	Reserved

- Must be used with other allocation indices. Signifies a 484-tone RU with zero users signaled on the corresponding HE-SIG-B content channel
- A single allocation index between 200-207 configures a full-band 40 MHz 484-tone RU with 1-8 users

>242-tone RU allocation

The format of the user field for non-MU-MIMO and MU-MIMO allocations are defined in Tables 27-28 and 27-29, of [1], respectively.

This table shows allocation index options required to specify transmission type for all channel bandwidths.

Transmission Type	20 MHz Transmission	40 MHz Transmission	80 MHz Transmission	160 MHz Transmission
Full-bandwidth MU-MIMO	<code>wlanHEMUConfig(a, 'SIGBCompression', 1)</code> Specify a as an integer in the interval [192, 199].	<code>wlanHEMUConfig(a)</code> Specify a as an integer in the interval [200, 207].	<code>wlanHEMUConfig(a)</code> Specify a as an integer in the interval [208, 215].	<code>wlanHEMUConfig(a)</code> Specify a as an integer in the interval [216, 223].
		The <code>wlanHEMUConfig</code> object sets the <code>SIGBCompression</code> property to 1 (true), and splits users between the two content channels.		
Full-bandwidth MU-MIMO	<code>wlanHEMUConfig(a, 'SIGBCompression', 0)</code> Specify a as an integer in the interval [192, 199].	<code>wlanHEMUConfig([a 114])</code> Specify a as an integer in the interval [200, 207].	<code>wlanHEMUConfig([a 115 115 115])</code> <code>wlanHEMUConfig([115 115 a 115])</code> <code>wlanHEMUConfig([a 115 b 115])</code> Specify a and b as integers in the interval [208, 215].	<code>wlanHEMUConfig([a 115 115 115 115 115])</code> <code>wlanHEMUConfig([a 115 b 115 c 115 d 115])</code> <code>wlanHEMUConfig([115 115 115 115 a 115 b 115])</code> <code>wlanHEMUConfig([115 115 a 115 115 115 b 115])</code> Specify a, b, c, and d as integers in the interval [216, 223].
		The <code>wlanHEMUConfig</code> object sets the <code>SIGBCompression</code> property to 0 (false). All users are in content channel 1.		

Transmission Type	20 MHz Transmission	40 MHz Transmission	80 MHz Transmission	160 MHz Transmission
Full-bandwidth MU-MIMO	<code>wlanHEMUConfig(a, 'SIGBCompression', 0)</code> Specify a as an integer in the interval [192, 199].	<code>wlanHEMUConfig([114 a])</code> Specify a as an integer in the interval [200, 207].	<code>wlanHEMUConfig([115 a 115 115])</code> <code>wlanHEMUConfig([115 115 115 a])</code> <code>wlanHEMUConfig([115 a 115 b])</code> Specify a and b as integers in the interval [208, 215].	<code>wlanHEMUConfig([115 a 115 115 115 115])</code> <code>wlanHEMUConfig([115 a 115 b 115 c 115 d])</code> <code>wlanHEMUConfig([115 115 115 115 115 a 115 b])</code> <code>wlanHEMUConfig([115 115 115 115 115 115 a])</code> <code>wlanHEMUConfig([115 115 115 a 115 115 115 b])</code> Specify a, b, c, and d as integers in the interval [216, 223].
				The <code>wlanHEMUConfig</code> object sets the <code>SIGBCompression</code> property to 0 (false). All users are in content channel 2.
Full bandwidth MU-MIMO	<code>wlanHEMUConfig(a, 'SIGBCompression', 0)</code> Specify a as an integer in the interval [192, 199].	<code>wlanHEMUConfig([a b])</code> Specify a and b as integers in the interval [200, 207].	<code>wlanHEMUConfig([a b c d])</code> Specify a, b, c, and d as integers in the interval [208, 215].	<code>wlanHEMUConfig([a b c d e f g h])</code> Specify a, b, c, d, e, f, g, and h as integers in the interval [216, 223].
				The <code>wlanHEMUConfig</code> object sets the <code>SIGBCompression</code> property to 0 (false). Users are in their respective content channels. For example, in the 80 MHz transmission case, the users represented by allocation indices a and c are in content channel 1, and the users represented by allocation indices b and d are in content channel 2.

Transmission Type	20 MHz Transmission	40 MHz Transmission	80 MHz Transmission	160 MHz Transmission
Mixed OFDMA and MU-MIMO	<code>wlanHEMUConfig(a, 'SIGBCompression', 0)</code> Specify a as an integer in the interval [0, 191].	<code>wlanHEMUConfig([a b])</code> Specify a and b as integers in the interval [0, 199].	<code>wlanHEMUConfig([a b c d])</code> Specify a, b, c, and d as integers in the interval [0, 207].	<code>wlanHEMUConfig([a b c d e f g h])</code> Specify a, b, c, d, e, f, g, and h as integers in the interval [0, 215].
	20 MHz transmissions have only one content channel.	The <code>wlanHEMUConfig</code> object sets the <code>SIGBCompression</code> property to <code>0</code> (false). Users are in their respective content channels. For example, in the 80 MHz transmission case, the users represented by allocation indices a and c are in content channel 1, and the users represented by allocation indices b and d are in content channel 2.		

References

- [1] IEEE Std 802.11ax-2021 (Amendment to IEEE Std 802.11-2020). "Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications. Amendment 1: Enhancements for High Efficiency WLAN." IEEE Standard for Information technology — Telecommunications and information exchange between systems. Local and metropolitan area networks — Specific requirements.

See Also

More About

- "EHT MU Transmission" on page 3-11
- "WLAN PPDU Structure" on page 2-9

EHT MU Transmission

Transmission Mode Options

The options for extremely high-throughput multi-user (EHT MU) transmissions are:


- Orthogonal frequency-division multiple access (OFDMA)
- Full-band multi-user multiple-input/multiple-output (MU-MIMO)
- Mixed OFDMA and MU-MIMO

The transmission mode depends on the property you set when you create a `wlanEHTMUConfig` object.

- To specify OFDMA or a mix of OFDMA and MU-MIMO, set the `AllocationIndex` property when you create the object.
- To specify full-band MU-MIMO, set the `ChannelBandwidth` property when you create the object.

The “802.11be Waveform Generation” example introduces the concepts associated with EHT transmission modes, resource unit (RU) and multiple resource unit (MRU) allocation, and parameterization.

An RU is a group of 26, 52, 106, 242, 484, 968, 996, 1992, or 3984 subcarriers defining an allocation unit in time and frequency. An MRU is a group of RUs joined together. In this diagram, the picture on the left shows only RUs, and the picture on the right shows RUs and MRUs.

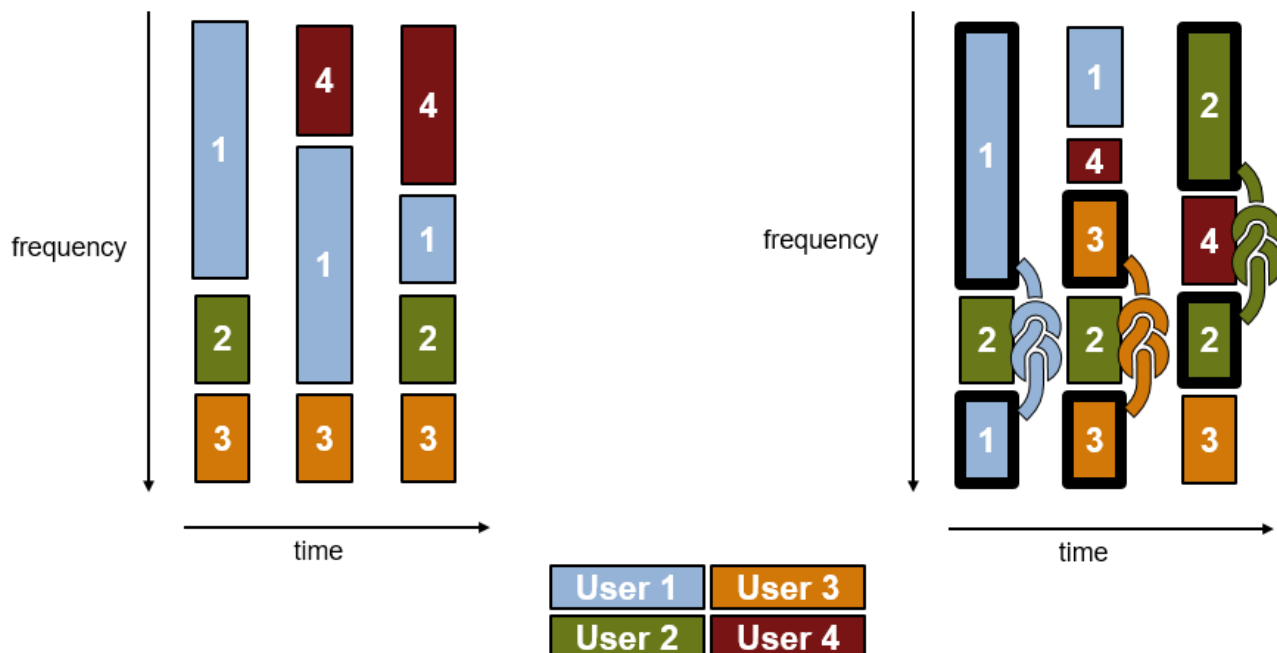

Allocation Index

When you create an OFDMA or mixed wlanEHTMUConfig object, you must specify the value of the AllocationIndex property. Once the object is created, the AllocationIndex property is read-only.

The AllocationIndex property defines the number of RUs or MRUs, their sizes, and the number of users assigned to them.

- Set the AllocationIndex property as an integer to specify a channel bandwidth of 20 MHz.
- Set the AllocationIndex property as a row vector of length 2, 4, 8, or 16 to specify a respective channel bandwidth of 40, 80, 160, or 320 MHz. The vector's length is equal to the number of 20 MHz subchannels.
- Set the AllocationIndex property as an M-by-N matrix to specify a channel bandwidth of 160 or 320 MHz. M is the number of 80 MHz segments and N is the number of 20 MHz subchannels.

You can signal punctured subchannels in OFDMA transmissions with a channel bandwidth of 80 MHz or above. To signal a punctured 20 MHz subchannel, set the corresponding element to 26. To signal larger punctured subchannels, set corresponding adjacent elements to 26.

The values specified in the AllocationIndex property correspond to the 9-bit indices for each 20 MHz subchannel in the first column of Table 36-34 in [1].

This table lists the allocation indices and corresponding RU assignments for 20 MHz subchannels and RUs with at most 242 tones. The table shows the number of tones per RU and the number of users assigned for each allocation index.

Allocation Index	20 MHz Subchannel Resource Unit (RU) Assignment									
0	26	26	26	26	26	26	26	26	26	26
1	26	26	26	26	26	26	26	26	52	26
2	26	26	26	26	26	52	26	26	26	26
3	26	26	26	26	26	52	26	26	52	26
4	26	26	52	26	26	26	26	26	26	26
5	26	26	52	26	26	26	26	26	52	26
6	26	26	52	26	26	52	26	26	26	26
7	26	26	52	26	26	52	26	26	52	26
8	52	26	26	26	26	26	26	26	26	26
9	52	26	26	26	26	26	26	26	52	26
10	52	26	26	26	26	52	26	26	26	26
11	52	26	26	26	26	52	26	26	52	26
12	52	52	26	26	26	26	26	26	26	26
13	52	52	26	26	26	26	26	26	52	26
14	52	52	26	26	26	52	26	26	26	26
15	52	52	26	26	26	52	26	26	26	26
16	26	26	26	26	26	26	26	26	106	26
17	26	26	52	26	26	26	26	26	106	26
18	52	26	26	26	26	26	26	26	106	26
19	52	52	26	26	26	26	26	26	106	26
20	106	26	26	26	26	26	26	26	26	26
21	106	26	26	26	26	26	26	26	52	26
22	106	26	26	26	26	52	26	26	26	26
23	106	26	26	26	26	52	26	26	52	26
24	52	52	26	-	52	52	26	26	52	26
25	106	26	26	26	26	26	26	26	106	26
26	Punctured 242-tone RU									
27	Unassigned 242-tone RU									
28	242-tone RU with no users signaled on the corresponding EHT-SIG content channel									
29	484-tone RU with no users signaled on the corresponding EHT-SIG content channel									
30	996-tone RU with no users signaled on the corresponding EHT-SIG content channel									
31	Validate									

26 tone RU assigned to 1 user as part of a 20 MHz subchannel assignment of 9 26-tone RUs

No users assigned to this RU; no data field transmitted on these subcarriers (empty 26-tone RU with no user assigned)

If selected, this 20 MHz subchannel is unused; the subchannel is punctured

If selected no user data is transmitted in the 242-tone RU, but the corresponding 20 MHz preamble is transmitted

Signifies a 242-tone RU with zeros users signaled on the corresponding EHT-SIG content channel

Must be used with other allocation indices. Signifies a 484-tone or 996-tone RU with zero users signaled on the corresponding EHT-SIG content channel

Reserved entry

RU assigned to 1 user

This table lists the allocation indices with a corresponding RU assignment that includes MRUs.

Allocation Index	20 MHz Subchannel Resource Unit (RU) Assignment							
32	26	26	26	26	26	52+26	26	26
33	26	26	52	26	26	52+26	26	26
34	52	26	26	26	26	52+26	26	26
35	52	52	26	26	26	52+26	26	26
36	26	52+26	26	26	26	26	26	26
37	26	52+26	26	26	26	52	26	26
38	26	52+26	26	52	26	26	26	26
39	26	52+26	26	52	52	26	26	26
40	26	26	26	26	106+26	26	26	26
41	26	26	52	106+26	26	26	52	26
42	52	26	26	106+26	26	26	52	26
43	52	52	106+26	26	26	26	52	26
44	106+26	26	26	26	26	26	26	26
45	106+26	26	26	52	26	26	52	26
46	106+26	52	26	26	26	26	52	26
47	106+26	52	26	26	26	26	52	26
48	106+26	106	26	26	26	26	52	26
49	106+26	52+26	26	26	26	26	52	26
50	106	106+26	26	26	26	26	52	26
51	26	52+26	106+26	26	26	26	52	26
52	106	26	26	106	26	26	52	26
53	26	52+26	26	52+26	106	26	26	26
54	26	52+26	26	52+26	26	26	26	26
55	52	52+26	52	52	52	52	52	26
56-63	Validate							

52+26-tone small MRU is assigned to 1 user

Reserved entries

RU assigned to 1 user

This table lists RU allocation and EHT-SIG user signaling for 242-, 484-, 996-, and 2x996-tone RUs.

Allocation Index	RU Allocation & Number of Users on the Corresponding EHT-SIG Content Channel for RU Size >= 242
64-71 (63 + N)	20 MHz (N users), or 242-tone RU with N users signaled in the corresponding EHT-SIG content channel
72-79 (71 + N)	40 MHz (N users), or 484-tone RU with N users signaled in the corresponding EHT-SIG content channel
80-87 (79 + N)	80 MHz (N users), or 996-tone RU with N users signaled in the corresponding EHT-SIG content channel
88-95 (87 + N)	160 MHz (N users), or 2x996-tone RU with N users signaled in the corresponding EHT-SIG content channel

>=242-tone RU allocation

This table lists MRU allocation and EHT-SIG user signaling for allocations with a channel bandwidth of 80 MHz or greater.

Allocation Index	RU Allocation & Number of Users on the Corresponding EHT-SIG Content Channel for RU Size > 484
96-103 (95 + N)	MRU of []-242-484 484+242-tone MRU in 80 MHz sub-block with N users signaled in the corresponding EHT-SIG content channel
104-111 (103 + N)	MRU of 242-[]-484 484+242-tone MRU in 80 MHz sub-block with N users signaled in the corresponding EHT-SIG content channel
112-119 (111 + N)	MRU of 484-[]-242 484+242-tone MRU in 80 MHz sub-block with N users signaled in the corresponding EHT-SIG content channel
120-127 (119 + N)	MRU of 484-242-[] 484+242-tone MRU in 80 MHz sub-block with N users signaled in the corresponding EHT-SIG content channel
128-135 (127 + N)	MRU of []-484-996 996+484-tone MRU in 160 MHz sub-block with N users signaled in the corresponding EHT-SIG content channel
136-143 (135 + N)	MRU of 484-[]-996 996+484-tone MRU in 160 MHz sub-block with N users signaled in the corresponding EHT-SIG content channel
144-151 (143 + N)	MRU of 996-[]-484 996+484-tone MRU in 160 MHz sub-block with N users signaled in the corresponding EHT-SIG content channel
152-159 (151 + N)	MRU of 996-484-[] 996+484-tone MRU in 160 MHz sub-block with N users signaled in the corresponding EHT-SIG content channel
160-167 (159 + N)	MRU of []-996-996-996 3x996-tone MRU with N users signaled in the corresponding EHT-SIG content channel
168-175 (167 + N)	MRU of 996-[]-996-996 3x996-tone MRU with N users signaled in the corresponding EHT-SIG content channel
176-183 (175 + N)	MRU of 996-996-[]-996 3x996-tone MRU with N users signaled in the corresponding EHT-SIG content channel
184-191 (183 + N)	MRU of 996-996-996-[] 3x996-tone MRU with N users signaled in the corresponding EHT-SIG content channel
192-199 (191 + N)	MRU of []-484-996-996-996 3x996+484-tone MRU with N users signaled in the corresponding EHT-SIG content channel
200-207 (199 + N)	MRU of 484-[]-996-996-996 3x996+484-tone MRU with N users signaled in the corresponding EHT-SIG content channel
208-215 (207 + N)	MRU of 996-[]-484-996-996 3x996+484-tone MRU with N users signaled in the corresponding EHT-SIG content channel
216-223 (215 + N)	MRU of 996-484-[]-996-996 3x996+484-tone MRU with N users signaled in the corresponding EHT-SIG content channel
224-231 (223 + N)	MRU of 996-996-[]-484-996 3x996+484-tone MRU with N users signaled in the corresponding EHT-SIG content channel
232-239 (231 + N)	MRU of 996-996-484-[]-996 3x996+484-tone MRU with N users signaled in the corresponding EHT-SIG content channel
240-247 (239 + N)	MRU of 996-996-996-[]-484 3x996+484-tone MRU with N users signaled in the corresponding EHT-SIG content channel
248-255 (247 + N)	MRU of 996-996-996-484-[] 3x996+484-tone MRU with N users signaled in the corresponding EHT-SIG content channel
256-263 (255 + N)	MRU of []-484-996-996 2x996+484-tone MRU in 240MHz sub-block with N users signaled in the corresponding EHT-SIG content channel
264-271 (263 + N)	MRU of 484-[]-996-996 2x996+484-tone MRU in 240MHz sub-block with N users signaled in the corresponding EHT-SIG content channel
272-279 (271 + N)	MRU of 996-[]-484-996 2x996+484-tone MRU in 240MHz sub-block with N users signaled in the corresponding EHT-SIG content channel
280-287 (279 + N)	MRU of 996-484-[]-996 2x996+484-tone MRU in 240MHz sub-block with N users signaled in the corresponding EHT-SIG content channel
288-295 (287 + N)	MRU of 996-996-[]-484 2x996+484-tone MRU in 240MHz sub-block with N users signaled in the corresponding EHT-SIG content channel
296-303 (295 + N)	MRU of 996-996-484-[] 2x996+484-tone MRU in 240MHz sub-block with N users signaled in the corresponding EHT-SIG content channel
304-511	Disregard

This table shows allocation index and channel bandwidth options required to specify transmission type for all channel bandwidths.

Transmission Type	20 MHz Transmission	40 MHz Transmission	80 MHz Transmission	160 MHz Transmission	320 MHz Transmission
Full-bandwidth MU-MIMO	wlanEHTMUConfig("CBW20", NumUsers=a) Specify a as an integer in the interval [1, 8].	wlanEHTMUConfig("CBW40", NumUsers=a) Specify a as an integer in the interval [1, 8].	wlanEHTMUConfig("CBW80", NumUsers=a) Specify a as an integer in the interval [1, 8].	wlanEHTMUConfig("CBW160", NumUsers=a) Specify a as an integer in the interval [1, 8].	wlanEHTMUConfig("CBW320", NumUsers=a) Specify a as an integer in the interval [1, 8].

Transmission Type	20 MHz Transmission	40 MHz Transmission	80 MHz Transmission	160 MHz Transmission	320 MHz Transmission
			<p>For puncturing, use <code>wlanEHTMUConfig("CBWx", PuncturedChannelFieldValue = y)</code>.</p> <p>Specify x as 80, 160, or 320. Specify y as an integer in the interval [0, 24].</p> <p>To enable EHT DUP mode, use <code>wlanEHTMUConfig("CBWx", EHTDUPMode = true)</code>.</p> <p>Specify x as 80, 160, or 320.</p>		
OFDMA	<code>wlanEHTMUConfig(a)</code> Specify a as an integer in one of the intervals [0, 25] or [32, 55].	<code>wlanEHTMUConfig([a b])</code> Specify a and b as integers in one of the intervals [0, 27] or [32, 55].	<code>wlanEHTMUConfig([a b c d])</code> Specify the vector entries as integers in one of the intervals [0, 27] or [32, 55].	<code>wlanEHTMUConfig([a b c d e f g h])</code> Specify the vector entries as integers in one of the intervals [0, 27] or [32, 55].	<code>wlanEHTMUConfig([a b c d e f g h i j k l m n o p])</code> Specify the vector entries as integers in one of the intervals [0, 27] or [32, 55].
Mixed OFDMA and MU-MIMO	N/A	<code>wlanEHTMUConfig([a b])</code> Specify a and b as integers in the interval [0, 27], 29, or integers in one of the intervals [32, 55] or [64, 79].	<code>wlanEHTMUConfig([a b c d])</code> Specify the vector entries as integers in one of the intervals [0, 30], [32, 55], or [64, 127].	<code>wlanEHTMUConfig([a b c d e f g h])</code> Specify the vector entries as integers in one of the intervals [0, 30], [32, 55], or [64, 159].	<code>wlanEHTMUConfig([a b c d e f g h i j k l m n o p])</code> Specify the vector entries as integers in one of the intervals [0, 30], [32, 55], or [64, 303].

See Also

More About

- “HE MU Transmission” on page 3-4
- “WLAN PPDU Structure” on page 2-9

References

- [1] IEEE P802.11be/D1.5. “Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications. Amendment 8: Enhancements for Extremely High Throughput (EHT).”

Draft Standard for Information Technology — Telecommunications and Information Exchange between Systems — Local and Metropolitan Area Networks — Specific Requirements.

Waveform Generation

This example shows how to generate standards-compliant WLAN waveforms. The IEEE® 802.11™ standards define a physical layer protocol data unit (PPDU) as the transmission unit at the physical layer. For a detailed description of the PPDU field structures for each transmission format, see “WLAN PPDU Structure” on page 2-9.

Generate WLAN Waveforms

Generate HE SU Waveform

Specify information bits to transmit.

```
bits = [1 0 0 1 1];
```

Parameterize the transmission by creating a high-efficiency single-user (HE SU) configuration object with default property values.

```
cfgHESU = wlanHESUConfig;
```

Specify an oversampling factor for fast-Fourier-transform-based oversampling.


```
osf = 2;
```

Generate an HE SU waveform, as defined in [1], for the specified bits and transmission parameters. The waveform comprises four packets with 15 microseconds of idle time between them.

```
waveformHESU = wlanWaveformGenerator(bits, cfgHESU, ...
    NumPackets=4, IdleTime=15e-6, ...
    OversamplingFactor=osf);
```

Plot the HE SU waveform, scaling the x-axis relative to the channel bandwidth.

```
fsHESU = wlanSampleRate(cfgHESU.ChannelBandwidth);
time = (0:length(waveformHESU)-1)/fsHESU;
plot(time, abs(waveformHESU))
xlabel("Time (seconds)")
ylabel("Magnitude")
```

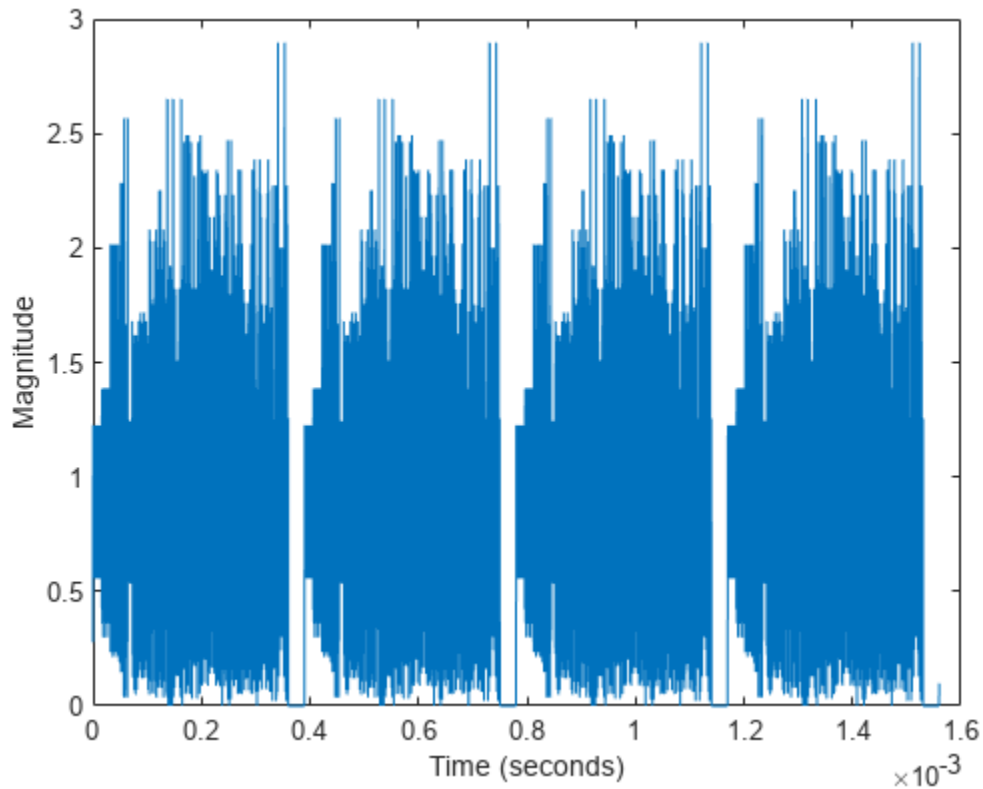

Generate HE MU Waveform

Parameterize the transmission by creating an HE multi-user (HE MU) configuration object.


```
cfgHEMU = wlanHEMUConfig(192);
```

Generate an HE MU waveform, as defined in [1], comprising three packets with 30 microseconds of idle time between packets for the specified bits and transmission parameters.

```
waveformHEMU = wlanWaveformGenerator(bits, cfgHEMU, ...  
    NumPackets=3, IdleTime=30e-6);
```

Plot the HE MU waveform, scaling the x-axis relative to the channel bandwidth.

```
fsHEMU = wlanSampleRate(cfgHEMU.ChannelBandwidth);  
time = (0:length(waveformHEMU)-1)/fsHEMU;  
plot(time, abs(waveformHEMU))  
xlabel("Time (seconds)")  
ylabel("Magnitude")
```

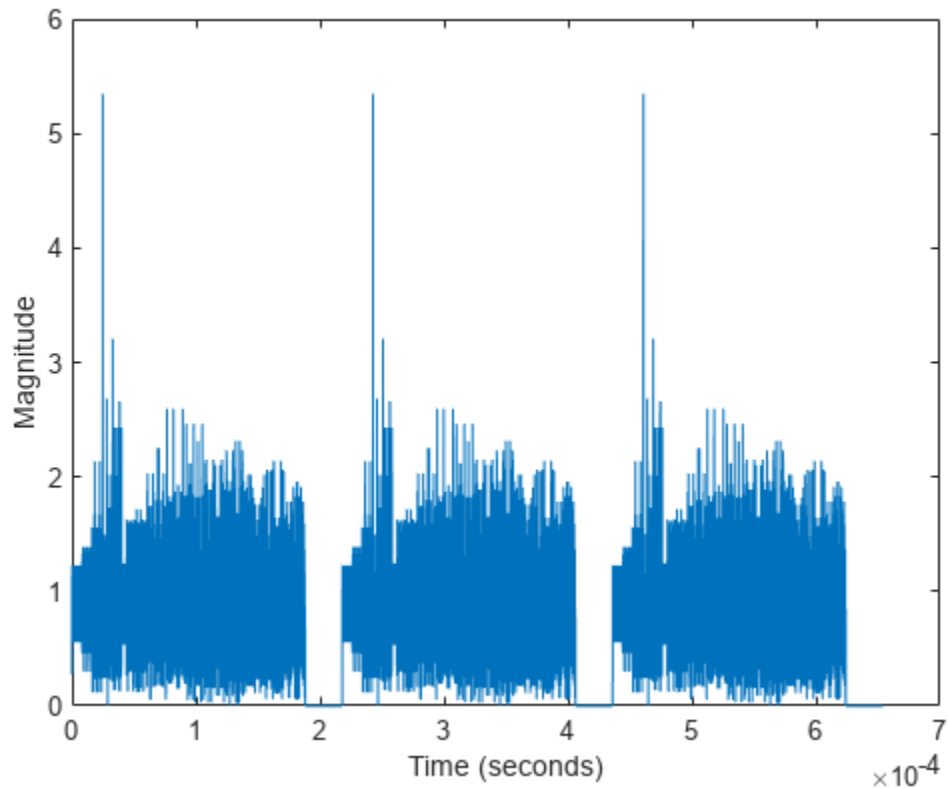

Generate WUR Waveform

Parameterize the transmission by creating a wake-up radio (WUR) configuration object.


```
cfgWUR = wlanWURConfig(ChannelBandwidth="CBW40",NumUsers=2);
```

Generate a single-packet WUR waveform, as defined in [2], for the specified bits and transmission parameters.

```
waveformWUR = wlanWaveformGenerator(bits, cfgWUR);
```

Plot the WUR waveform, scaling the x-axis relative to the channel bandwidth.

```
fswUR = wlanSampleRate(cfgWUR.ChannelBandwidth);
time = (0:length(waveformWUR)-1)/fswUR;
plot(time,abs(waveformWUR))
xlabel("Time (seconds)")
ylabel("Magnitude")
```

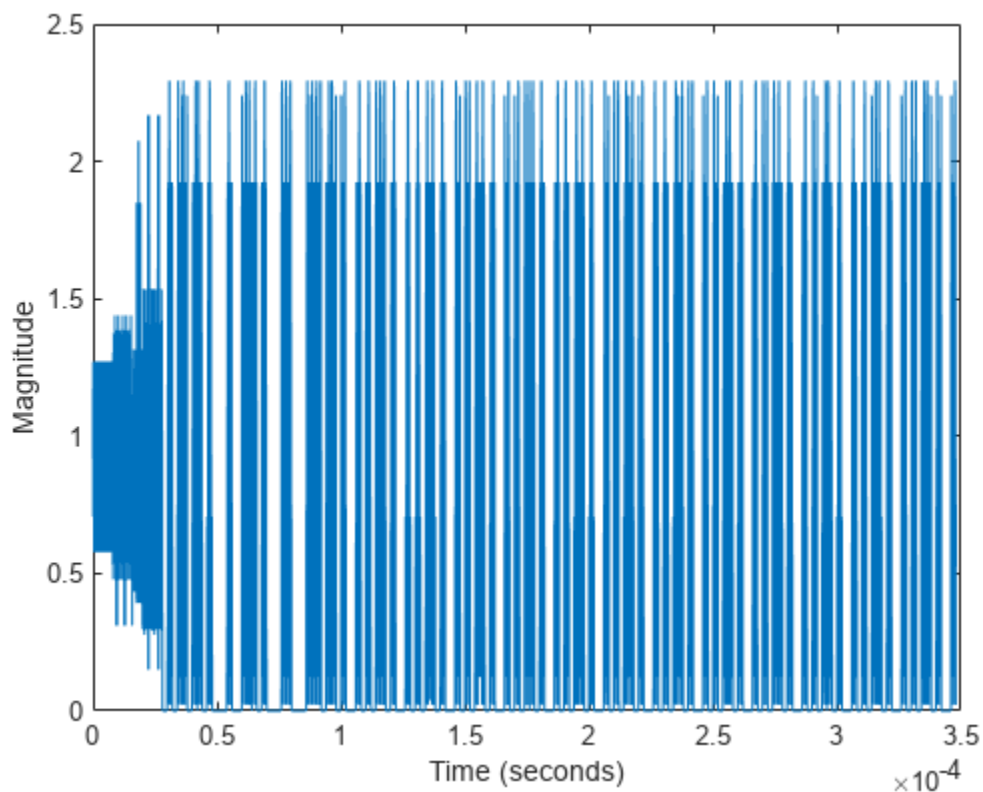

Generate VHT Waveform

Parameterize the transmission by creating a VHT configuration object with default property values.


```
cfgVHT = wlanVHTConfig;
```

Generate a VHT waveform, as defined in [3], for the specified bits and transmission parameters. The waveform comprises five packets with 20 microseconds of idle time between them.

```
waveformVHT = wlanWaveformGenerator(bits, cfgVHT, ...  
    NumPackets=5, IdleTime=20e-6);
```

Plot the VHT waveform, scaling the x-axis relative to the channel bandwidth.

```
fsVHT = wlanSampleRate(cfgVHT.ChannelBandwidth);  
time = (0:length(waveformVHT)-1)/fsVHT;  
plot(time, abs(waveformVHT))  
xlabel('Time (seconds)')  
ylabel('Magnitude')
```

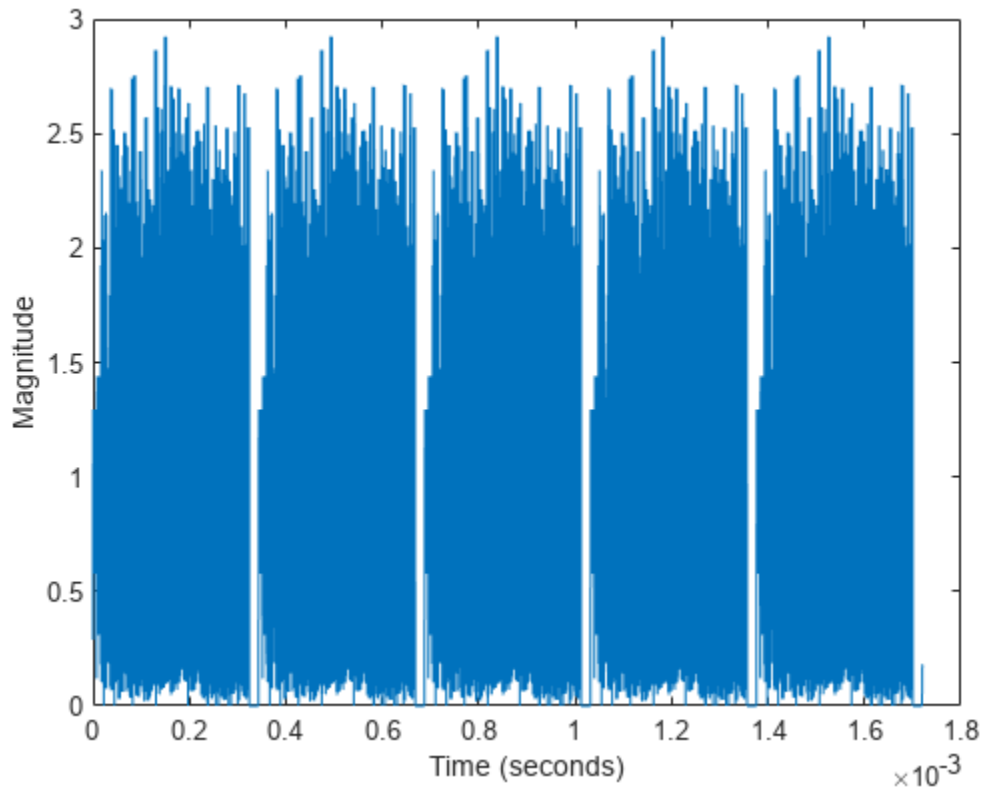

Generate Waveforms of Individual PPDU Fields

You can also create a VHT, HT, or non-HT PPDU waveform by generating and concatenating waveforms for individual PPDU fields. For an example of this procedure, see “Build VHT PPDU”.

This list shows which functions you can use to build a PPDU for each PHY format.

- Very high throughput (VHT) — wlanLSTF, wlanLLTF, wlanLSIG, wlanVHTSTF, wlanVHTLTF, wlanVHTSIGA, wlanVHTSIGB, and wlanVHTData
- High throughput (HT) — wlanLSTF, wlanLLTF, wlanLSIG, wlanHTSTF, wlanHTLTF, wlanHTSIG, and wlanHTData
- Non-high-throughput (non-HT) — wlanLSTF, wlanLLTF, wlanLSIG, and wlanNonHTData

See Also

Functions

wlanWaveformGenerator

Objects

wlanHESUConfig | wlanHEMUConfig | wlanHETBConfig | wlanWURConfig | wlanDMGConfig | wlanVHTConfig | wlanHTConfig | wlanNonHTConfig | wlanSIGConfig

Related Examples

- “Packet Size and Duration Dependencies” on page 2-31
- “WLAN PPDU Structure” on page 2-9
- “HE MU Transmission” on page 3-4

References

- [1] IEEE Std 802.11ax-2021 (Amendment to IEEE Std 802.11-2020). “Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications. Amendment 1: Enhancements for High Efficiency WLAN.” IEEE Standard for Information technology — Telecommunications and information exchange between systems. Local and metropolitan area networks — Specific requirements.
- [2] IEEE Std 802.11ba-2021. “Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications. Amendment 3: Wake-Up Radio Operation.” IEEE Standard for Information Technology — Telecommunications and Information Exchange between Systems. Local and Metropolitan Area Networks — Specific Requirements.
- [3] IEEE Std 802.11-2020 (Revision of IEEE Std 802.11-2016). “Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications.” IEEE Standard for Information Technology — Telecommunications and Information Exchange between Systems — Local and Metropolitan Area Networks — Specific Requirements.

App-Based WLAN Waveform Generation

This example shows how to generate IEEE® 802.11™ waveforms by using the **WLAN Waveform Generator** app.

Open WLAN Waveform Generator App

On the **Apps** tab of the MATLAB® toolstrip, select the **WLAN Waveform Generator** app icon under **Signal Processing and Communications**. This selection opens the **Wireless Waveform Generator** app configured for WLAN waveform generation.

Select IEEE 802.11 PHY Format


Choose the PHY format of the waveform you want to generate by selecting one of the formats under **WLAN (IEEE 802.11)** in the **Waveform Type** section of the app toolstrip. The app supports these IEEE 802.11 PHY formats.

- 802.11ax
- 802.11ah
- 802.11ad
- 802.11n/ac
- 802.11p
- 802.11b/g
- 802.11a/g/j

Generate WLAN Waveform

Set transmission and configuration parameters by specifying options in the **Waveform** tab on the left pane of the app. Add impairments and select visualization tools by specifying options in the **Generation** section of the app toolstrip. To visualize the waveform, click **Generate**.

For example, this figure shows the **Time Scope** and **Spectrum Analyzer** visualization results for a high-efficiency trigger-based (HE TB) waveform with default parameters.

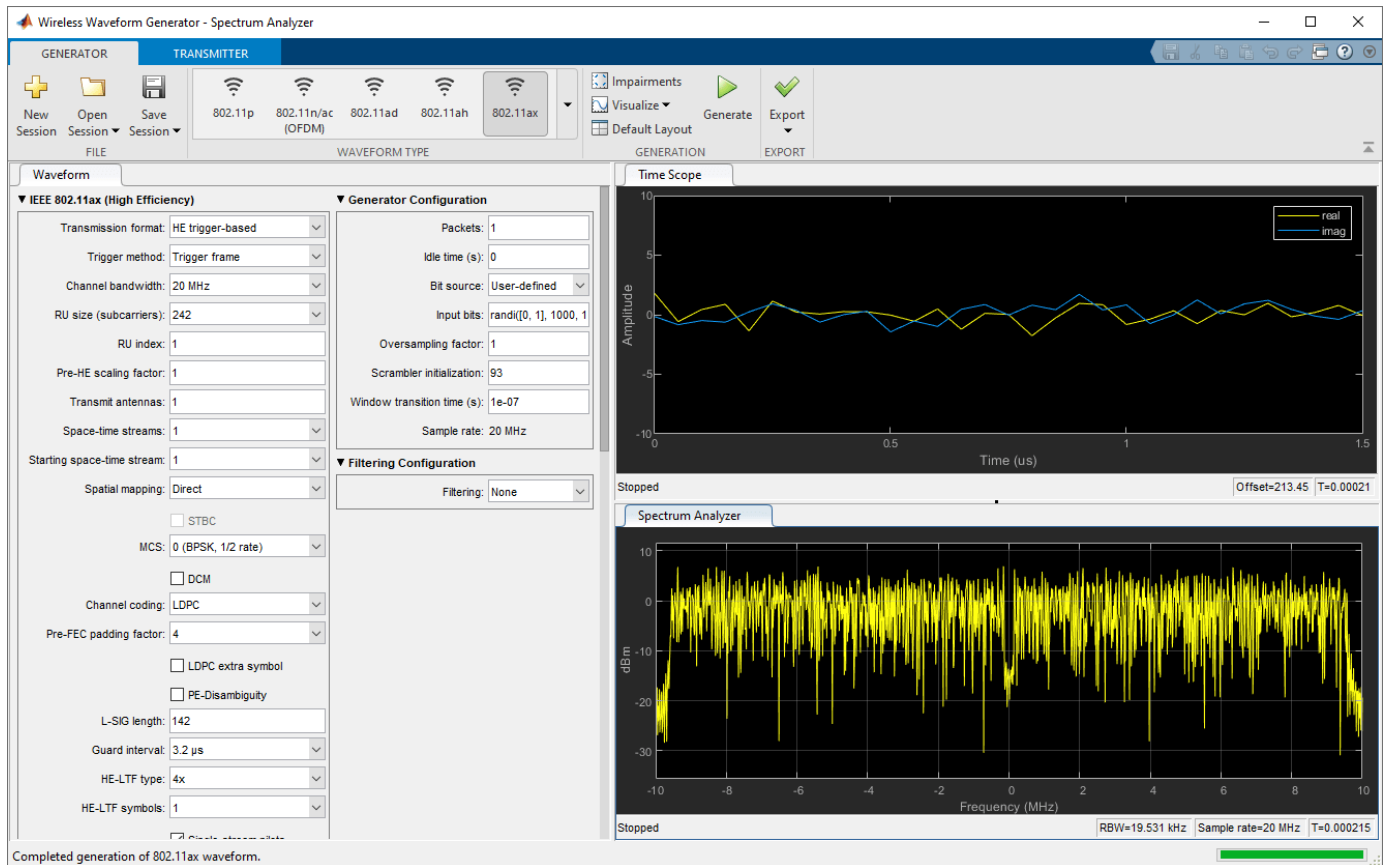

Export Generated Waveform

You can export the generated waveform and its parameters by clicking **Export**. You can export the waveform to:

- A MATLAB script with a `.m` extension, which you can run to generate the waveform without the app
- A file with a `.bb` or `.mat` extension
- Your MATLAB workspace as a structure
- A Simulink® block, which you can use to generate the waveform in a Simulink model without the app

Transmit WLAN Waveform

This feature requires “Instrument Control Toolbox”™ software. To transmit a generated waveform, click the **Transmitter** tab on the app toolstrip and configure the instruments. You can use any instrument supported by the `rfsiggen` (Instrument Control Toolbox) function.

References

- [1] IEEE Std 802.11ax-2021 (Amendment to IEEE Std 802.11-2020). “Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications. Amendment 1: Enhancements for High Efficiency WLAN.” IEEE Standard for Information technology — Telecommunications

and information exchange between systems. Local and metropolitan area networks — Specific requirements.

[2] IEEE Std 802.11-2020 (Revision of IEEE Std 802.11-2016). “Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications.” IEEE Standard for Information Technology — Telecommunications and Information Exchange between Systems — Local and Metropolitan Area Networks — Specific Requirements.

See Also

Apps

WLAN Waveform Generator

More About

- “Waveform Generation” on page 3-17
- “Create Waveforms Using Wireless Waveform Generator App”

Generate and Parse WLAN MAC Frames

This example shows how to configure and generate WLAN MAC frames, then recover the payload of MSDUs by parsing the MAC frame.

Introduction

The IEEE® 802.11™ family of standards supports four types of MAC frame: control, data, management, and extension. Within each of these types, the standard defines a range of subtypes, each of which serves a specific purpose in an 802.11™ network.

This example demonstrates how to configure, generate, and parse MPDUs and A-MPDUs by using WLAN Toolbox™ configuration objects and functions.

Generate and Decode MPDU

Create a MAC frame configuration object for a Data frame, specifying a high-efficiency single-user (HE SU) physical layer (PHY) configuration.

```
cfgMPDU = wlanMACFrameConfig('FrameType','Data','FrameFormat','HE-SU');
```

Specify an MSDU as a numeric vector of octets in bit format. You can also specify MSDUs as a character vector or string of octets in hexadecimal format.

```
msdu = randi([0 255],32,1);
```

Generate the MPDU by calling the `wlanMACFrame` function, specifying bits as the output format.

```
[mpdu,mpduLength] = wlanMACFrame(msdu,cfgMPDU,'OutputFormat','bits');
```

Recover the MSDU by calling the `wlanMPDUDecode` function. The function also returns the MAC frame configuration object and the status of the decoding. Check that the decoding operation returns the correct frame format and display the status.

```
[rxCfgMPDU,payload,status] = wlanMPDUDecode(mpdu,wlanHESUConfig);
disp(isequal(cfgMPDU.FrameFormat,rxCfgMPDU.FrameFormat))
```

```
1
```

```
disp(status)
```

```
Success
```

Generate and Parse A-MPDU

Create a configuration object for a QoS Data MAC frame, specifying an HE SU PHY configuration. Enable MPDU aggregation and disable MSDU aggregation.

```
cfgAMPDU = wlanMACFrameConfig('FrameType','QoS Data','FrameFormat','HE-SU',...
    'MPDUAggregation',true,'MSDUAggregation',false);
```

Specify a cell array of MSDUs, specifying each MSDU as a numeric vector of octets in bit format. You can also specify MSDUs as a character vector or string of octets in hexadecimal format.

```
msduList = repmat({randi([0 255],32,1)},1,4);
```

Generate the MPDU for a HE SU PHY configuration by calling the `wlanMACFrame` function.

```
cfgPHY = wlanHESUConfig('MCS',5);
[ampdu,ampduLength] = wlanMACFrame(msduList,cfgAMPDU,cfgPHY,'OutputFormat','bits');
```

Deaggregate the A-MPDU to return the MPDU list by calling the `wlanAMPDUDeaggregate` function. The function also returns the result of the delimiter cyclic redundancy check (CRC) and the status of A-MPDU deaggregation.

```
[mpduList,delimiterCRCFailure,status] = wlanAMPDUDeaggregate(ampdu,cfgPHY);
```

Display the number of delimiter CRC failures and the status of deaggregation.

```
disp(nnz(delimiterCRCFailure))
```

```
0
```

```
disp(status)
```

```
Success
```

Obtain the MSDUs by decoding the deaggregated MPDUs with the `wlanMPDUDecode` function and display the status of the decoding process.

```
if strcmp(status,'Success')
    for i = 1:numel(mpduList)
        if ~delimiterCRCFailure(i)
            [cfg,msdu,decodeStatus] = wlanMPDUDecode(mpduList{i},cfgPHY,'DataFormat','octets');
            disp(['MPDU ' num2str(i) ' decoding status: ' char(decodeStatus)])
        end
    end
end
```

```
MPDU 1 decoding status: Success
MPDU 2 decoding status: Success
MPDU 3 decoding status: Success
MPDU 4 decoding status: Success
```

See Also

More About

- “WLAN MAC Frame Structure” on page 2-37
- “802.11ac Waveform Generation with MAC Frames”
- “802.11 MAC Frame Generation”
- “802.11 MAC Frame Decoding”

WLAN Channel Models

This example demonstrates passing WLAN S1G, VHT, HT, and non-HT format waveforms through appropriate fading channel models. When simulating a WLAN communications link, viable options for channel modeling include the TGah, TGn and TGac models from WLAN Toolbox™ and the additive white Gaussian noise (AWGN) and 802.11g models from Communications Toolbox™. In this example, it is sufficient to set the channel model sampling frequency to match the channel bandwidth because no front-end filtering is applied to the signal and the oversampling rate is 1.

In each section of this example, you:

- Create a waveform.
- Transmit it through a fading channel with noise added.
- Use a spectrum analyzer to display the waveform before and after it passes through the noisy fading channel.

Pass S1G Waveform Through TGah SISO Channel

Create a bit stream to use when generating the WLAN S1G format waveform.

```
bits = randi([0 1],1000,1);
```

Create an S1G configuration object, and then generate a 2 MHz S1G waveform. Calculate the signal power.

```
s1g = wlanS1GConfig(APEPLength=1000);
preChS1G = wlanWaveformGenerator(bits,s1g);
```

Pass the signal through a TGah SISO channel with AWGN noise (SNR=10 dB) and a receiver with a 9 dB noise figure. Recall that the channel model sampling frequency is equal to the bandwidth in this example. Set property values by using name-value pairs.

Create a TGah channel object. Set the channel model sampling frequency and channel bandwidth, enable path loss and shadowing, and use the Model-D delay profile.

```
cbw = s1g.ChannelBandwidth;
fs = 2e6; % Channel model sampling frequency equals the channel bandwidth
tgahChan = wlanTGahChannel('SampleRate',fs,'ChannelBandwidth',cbw, ...
    'LargeScaleFadingEffect','Pathloss and shadowing', ...
    'DelayProfile','Model-D');
```

Create an AWGN Channel object with SNR = 10 dB. Determine the signal power in Watts, accounting for the TGah large scale fading pathloss.

```
preChSigPwr_dB = 20*log10(mean(abs(preChS1G)));
sigPwr = 10^((preChSigPwr_dB-tgahChan.info.Pathloss)/10);

chNoise = comm.AWGNChannel('NoiseMethod','Signal to noise ratio (SNR)',...
    'SNR',10,'SignalPower', sigPwr);
```

Pass the S1G waveform through a SISO TGah channel and add the AWGN channel noise.

```
postChS1G = chNoise(tgahChan(preChS1G));
```

Create another AWGN Channel object to add receiver noise.

```
rxNoise = comm.AWGNChannel('NoiseMethod','Variance', ...
    'VarianceSource','Input port');
```


Pass the S1G waveform through the receiver. Choose an appropriate noise variance, $nVar$, to set the receiver noise level. Here, the receiver noise level is based on the noise variance for a receiver with a 9 dB noise figure. $nVar = kTBF$, where k is Boltzmann's constant, T is the ambient temperature of 290 K, B is the bandwidth, and F is the receiver noise figure.

```
nVar = 10^((-228.6 + 10*log10(290) + 10*log10(fs) + 9)/10);
```

```
rxS1G = rxNoise(postChS1G,nVar);
```

Display a spectrum analyzer with before-channel and after-channel waveforms.

```
title = '2 MHz S1G Waveform Before and After TGah Channel';
saScope = spectrumAnalyzer(SampleRate=fs,ShowLegend=true,...
    AveragingMethod='exponential',ForgettingFactor=0.99,Title=title,...
    ChannelNames={'Before','After'});
saScope([preChS1G,rxS1G])
```

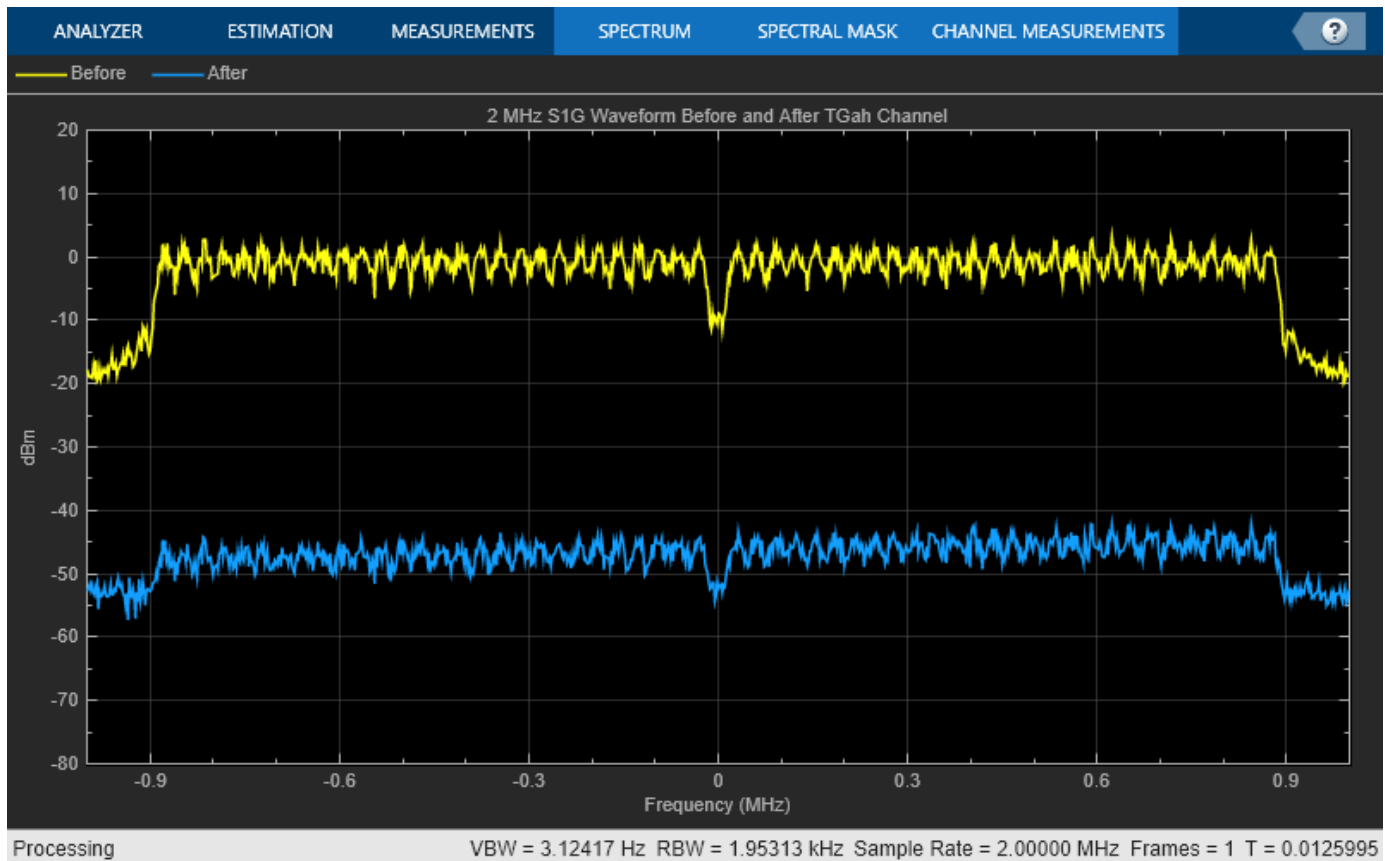

Path loss accounts for the roughly 50 dB of separation between the waveform before and after it passes through the TGah channel. The path loss results from the default transmitter-to-receiver distance of 3 meters, and from shadowing effects. The signal level variation shows the frequency selectivity of the delay profile across the frequency spectrum.

Pass VHT Waveform Through TGac SISO Channel

Create a bit stream to use when generating the WLAN VHT format waveform.

```
bits = randi([0 1],1000,1);
```

Create a VHT configuration object, and generate an 80 MHz VHT waveform. Calculate the signal power.

```
vht = wlanVHTConfig;
preChVHT = wlanWaveformGenerator(bits,vht);
```

Pass the signal through a TGac SISO channel with AWGN noise (SNR=10 dB) and a receiver with a 9 dB noise figure. Recall that the channel model sampling frequency is equal to the bandwidth in this example. Set parameters using Name, Value pairs.

Create a TGac channel object. Set the channel model sampling frequency and channel bandwidth, enable path loss and shadowing, and use the Model-D delay profile.

```
cbw = vht.ChannelBandwidth;
fs = 80e6; % Channel model sampling frequency equals the channel bandwidth
tgacChan = wlanTGacChannel('SampleRate',fs,'ChannelBandwidth',cbw, ...
    'LargeScaleFadingEffect','Pathloss and shadowing', ...
    'DelayProfile','Model-D');
```

Create an AWGN Channel object with SNR = 10 dB. Determine the signal power in Watts, accounting for the TGac large scale fading pathloss.

```
preChSigPwr_dB = 20*log10(mean(abs(preChVHT)));
sigPwr = 10^((preChSigPwr_dB-tgacChan.info.Pathloss)/10);
```

```
chNoise = comm.AWGNChannel('NoiseMethod','Signal to noise ratio (SNR)',...
    'SNR',10,'SignalPower', sigPwr);
```

Pass the VHT waveform through a SISO TGac channel and add the AWGN channel noise.

```
postChVHT = chNoise(tgacChan(preChVHT));
```

Create another AWGN Channel object to add receiver noise.

```
rxNoise = comm.AWGNChannel('NoiseMethod','Variance', ...
    'VarianceSource','Input port');
```


Pass the VHT waveform through the receiver. Choose an appropriate noise variance, nVar, to set the receiver noise level. Here, the receiver noise level is based on the noise variance for a receiver with a 9 dB noise figure. $nVar = kTBF$, where k is Boltzmann's constant, T is the ambient temperature of 290 K, B is the bandwidth, and F is the receiver noise figure.

```
nVar = 10^((-228.6 + 10*log10(290) + 10*log10(fs) + 9)/10);
```

```
rxVHT = rxNoise(postChVHT,nVar);
```

Display a spectrum analyzer with before-channel and after-channel waveforms.

```
title = '80 MHz VHT Waveform Before and After TGac Channel';
saScope = spectrumAnalyzer(SampleRate=fs,ShowLegend=true,...
    AveragingMethod='exponential',ForgettingFactor=0.99,Title=title,...
    ChannelNames={'Before','After'});
saScope([preChVHT,rxVHT])
```

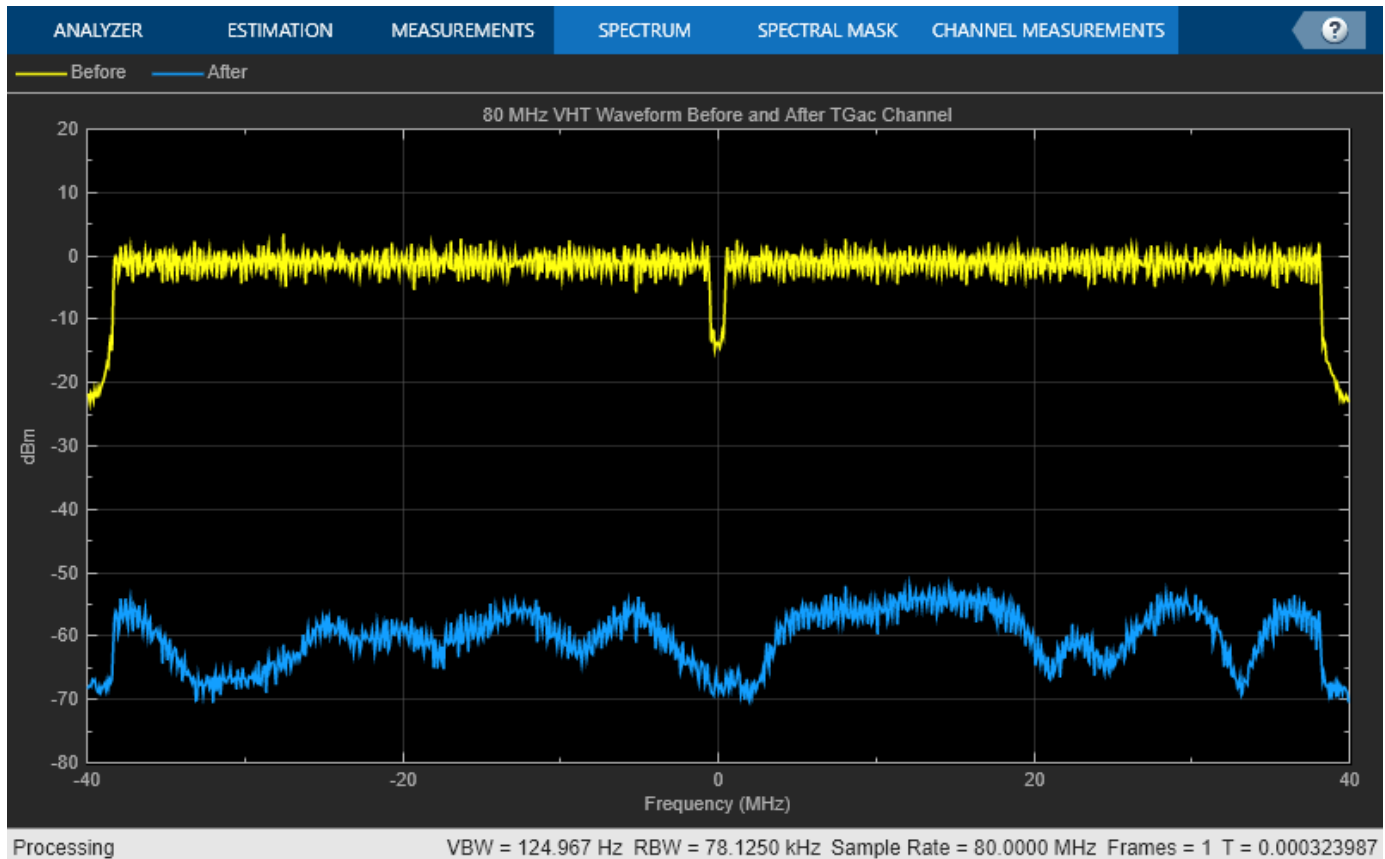

Path loss accounts for the roughly 50 to 60 dB of separation between the waveform before and after it passes through the TGac channel. The path loss results from the default transmitter-to-receiver distance of 3 meters, and from shadowing effects. The signal level variation shows the frequency selectivity of the delay profile across the frequency spectrum.

Pass HT Waveform Through TGn SISO Channel

Create a bit stream to use when generating the WLAN HT format waveform.

```
bits = randi([0 1],1000,1);
```

Create an HT configuration object, and generate an HT waveform.

```
ht = wlanHTConfig;
preChHT = wlanWaveformGenerator(bits,ht);
```

Pass the signal through a TGn SISO channel with AWGN noise (SNR=10 dB) and a receiver with a 9 dB noise figure. Recall that the channel model sampling frequency is equal to the bandwidth in this example. Set parameters using Name, Value pairs.

Create a TGn channel object. Set the channel model sampling frequency and channel bandwidth, enable path loss and shadowing, and use the Model-F delay profile.

```
fs = 20e6; % Channel model sampling frequency equals the channel bandwidth
tgnChan = wlanTGnChannel('SampleRate',fs,'LargeScaleFadingEffect', ...
    'Pathloss and shadowing','DelayProfile','Model-F');
```

Pass the HT waveform through a TGn channel. Use the `awgn` function to add channel noise at an SNR level of 10 dB.

```
postChHT = awgn(tgnChan(preChHT),10,'measured');
```

Create an AWGN Channel object to add receiver noise.

```
rxNoise = comm.AWGNChannel('NoiseMethod','Variance', ...
    'VarianceSource','Input port');
```


Pass the HT waveform through the receiver. Choose an appropriate noise variance, `nVar`, for setting the receiver noise level. Here, the receiver noise is based on the noise variance for a receiver with a 9 dB noise figure. $nVar = kTBF$, where k is Boltzmann's constant, T is the ambient temperature of 290 K, B is the bandwidth, and F is the receiver noise figure.

```
nVar = 10^((-228.6 + 10*log10(290) + 10*log10(fs) + 9)/10);
```

```
rxHT = rxNoise(postChHT, nVar);
```

Display a spectrum analyzer with before-channel and after-channel waveforms.

```
title = '20 MHz HT Waveform Before and After TGn Channel';
saScope = spectrumAnalyzer(SampleRate=fs,ShowLegend=true,...
    AveragingMethod='exponential',ForgettingFactor=0.99,Title=title,...
    ChannelNames={'Before','After'});
saScope([preChHT,postChHT])
```

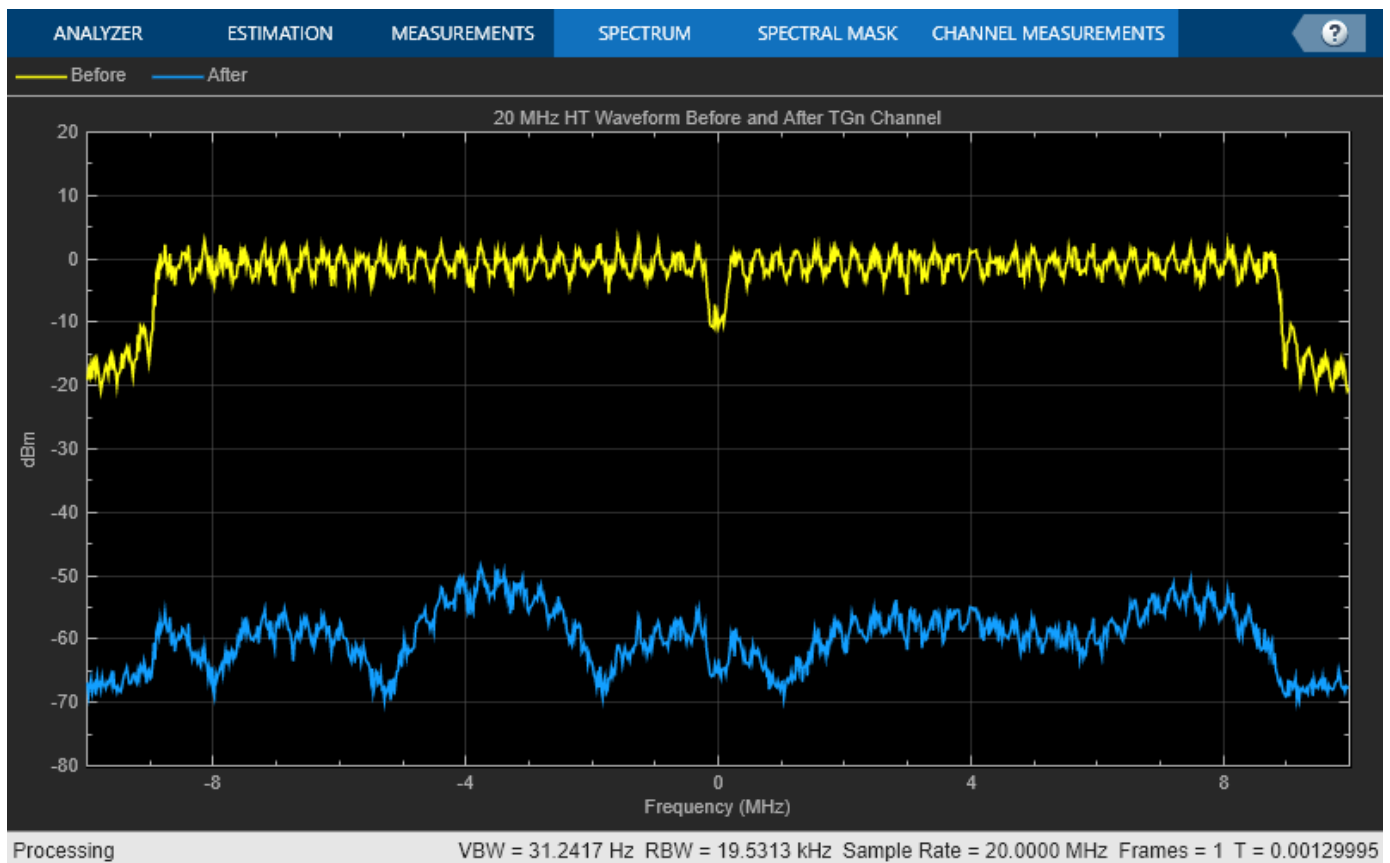

Path loss accounts for the roughly 50 to 60 dB of separation between the waveform before and after it passes through the TGn channel. The path loss results from the default transmitter-to-receiver distance of 3 meters, and from shadowing effects. The signal level variation shows the frequency selectivity of the delay profile across the frequency spectrum.

Pass Non-HT Waveform Through 802.11g Channel

Create a bit stream to use when generating the WLAN Non-HT format waveform.

```
bits = randi([0 1],1000,1);
```

Create a non-HT configuration object, and generate a non-HT waveform.

```
nht = wlanNonHTConfig;
preChNonHT = wlanWaveformGenerator(bits,nht);
```

Calculate free-space path loss for a transmitter-to-receiver separation distance of 3 meters. Create an 802.11g channel object with a 3 Hz maximum Doppler shift and an RMS path delay equal to two times the sample time. Recall that the channel model sampling frequency is equal to the bandwidth in this example. Create an AWGN channel object.

```
dist = 3;
fc = 2.4e9;
pathLoss = 10^(-log10(4*pi*dist*(fc/3e8)));
fs = 20e6; % Channel model sampling frequency equals the channel bandwidth
maxDoppShift = 3;
trms = 2/fs;
ch802 = comm.RayleighChannel('SampleRate',fs,'MaximumDopplerShift',maxDoppShift,'PathDelays',trms);
```

Pass the non-HT waveform through an 802.11g channel. Use the awgn function to add channel noise at an SNR level of 10 dB.

```
postChNonHT = awgn(ch802(preChNonHT),10,'measured');
```

Create an AWGN Channel object to add receiver noise.

```
rxNoise = comm.AWGNChannel('NoiseMethod','Variance', ...
    'VarianceSource','Input port');
```


Pass the non-HT waveform through the receiver. Choose an appropriate noise variance, $nVar$, for setting the receiver noise level. Here, the receiver noise is based on the noise variance for a receiver with a 9 dB noise figure. $nVar = kTBF$, where k is Boltzmann's constant, T is the ambient temperature of 290 K, B is the bandwidth, and F is the receiver noise figure.

```
nVar = 10^((-228.6 + 10*log10(290) + 10*log10(fs) + 9)/10);
```

```
rxNonHT = rxNoise(postChNonHT, nVar)* pathLoss;
```

Display a spectrum analyzer with before-channel and after-channel waveforms.

```
title = '20 MHz Non-HT Waveform Before and After 802.11g Channel';
saScope = spectrumAnalyzer(SampleRate=fs,ShowLegend=true,...
    AveragingMethod='exponential',ForgettingFactor=0.99,Title=title,...
    ChannelNames={'Before','After'});
saScope([preChNonHT,rxNonHT])
```

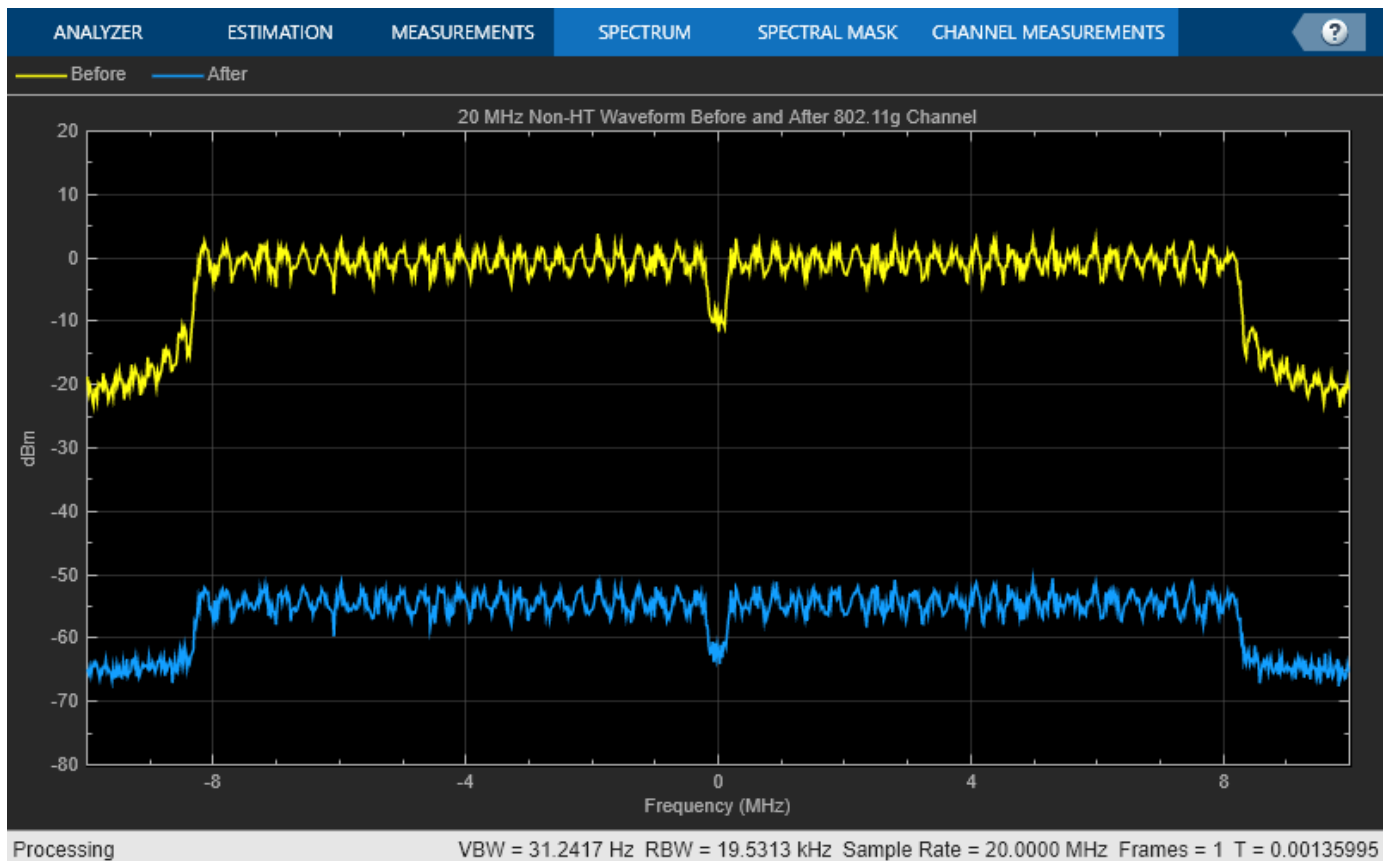

Free-space path loss accounts for the roughly 50 to 60 dB of separation between the waveform before and after it passes through the 802.11g channel. The path loss results from the specified transmitter-to-receiver distance of 3 meters, and from shadowing effects. The signal level variation shows the frequency selectivity of the delay profile across the frequency spectrum.

Pass VHT Waveform Through TGac MIMO Channel

Create a bit stream to use when generating the WLAN VHT format waveform.

```
bits = randi([0 1],1000,1);
```

Create a multi-user VHT configuration object, and generate a VHT waveform. Set the number of transmit antennas to four. Set the number of space-time streams and the number of receive antennas to 3. Because the number of transmit antennas is not equal to the number of space-time streams, the spatial mapping is not direct. Set the spatial mapping to Hadamard.

```
ntx = 4;
nsts = 3;
nrx = 3;
vht = wlanVHTConfig('NumTransmitAntennas',ntx, ...
    'NumSpaceTimeStreams',nsts,'SpatialMapping','Hadamard');
preChVHT = wlanWaveformGenerator(bits,vht);
```

Create TGac MIMO channel and AWGN channel objects. Recall that the channel model sampling frequency is equal to the bandwidth in this example. Disable large-scale fading effects.

```

cbw = vht.ChannelBandwidth;
fs = 80e6; % Channel model sampling frequency equals the channel bandwidth
tgacChan = wlanTGacChannel('SampleRate',fs,'ChannelBandwidth',cbw,...
    'NumTransmitAntennas',ntx,'NumReceiveAntennas',nrx);
tgacChan.LargeScaleFadingEffect = 'None';

```

Pass the VHT waveform through a TGac channel. Use the awgn function to add channel noise at an SNR level of 10 dB.

```
postChVHT = awgn(tgacChan(preChVHT),10,'measured');
```

Create an AWGN Channel object to add receiver noise.

```
rxNoise = comm.AWGNChannel('NoiseMethod','Variance', ...
    'VarianceSource','Input port');
```

Pass the multi-user VHT waveform through a noisy TGac channel. Choose an appropriate noise variance, $nVar$, for setting the AWGN level. Here, the AWGN level is based on the noise variance for a receiver with a 9 dB noise figure. $nVar = kTBF$, where k is Boltzmann's constant, T is the ambient temperature of 290 K, B is the bandwidth, and F is the receiver noise figure.

```
nVar = 10^((-228.6 + 10*log10(290) + 10*log10(fs) + 9)/10);
```


```
rxVHT = rxNoise(postChVHT,nVar);
```

Display a spectrum analyzer showing the multiple streams after the channel effects have been added.

```

title = '80 MHz VHT 4x3 MIMO Waveform After TGac Channel';
saScope = spectrumAnalyzer(SampleRate=fs,ShowLegend=true,...
    AveragingMethod='exponential',ForgettingFactor=0.99,Title=title,...
    ChannelNames={'RX1','RX2','RX3'});
saScope(rxVHT)

```

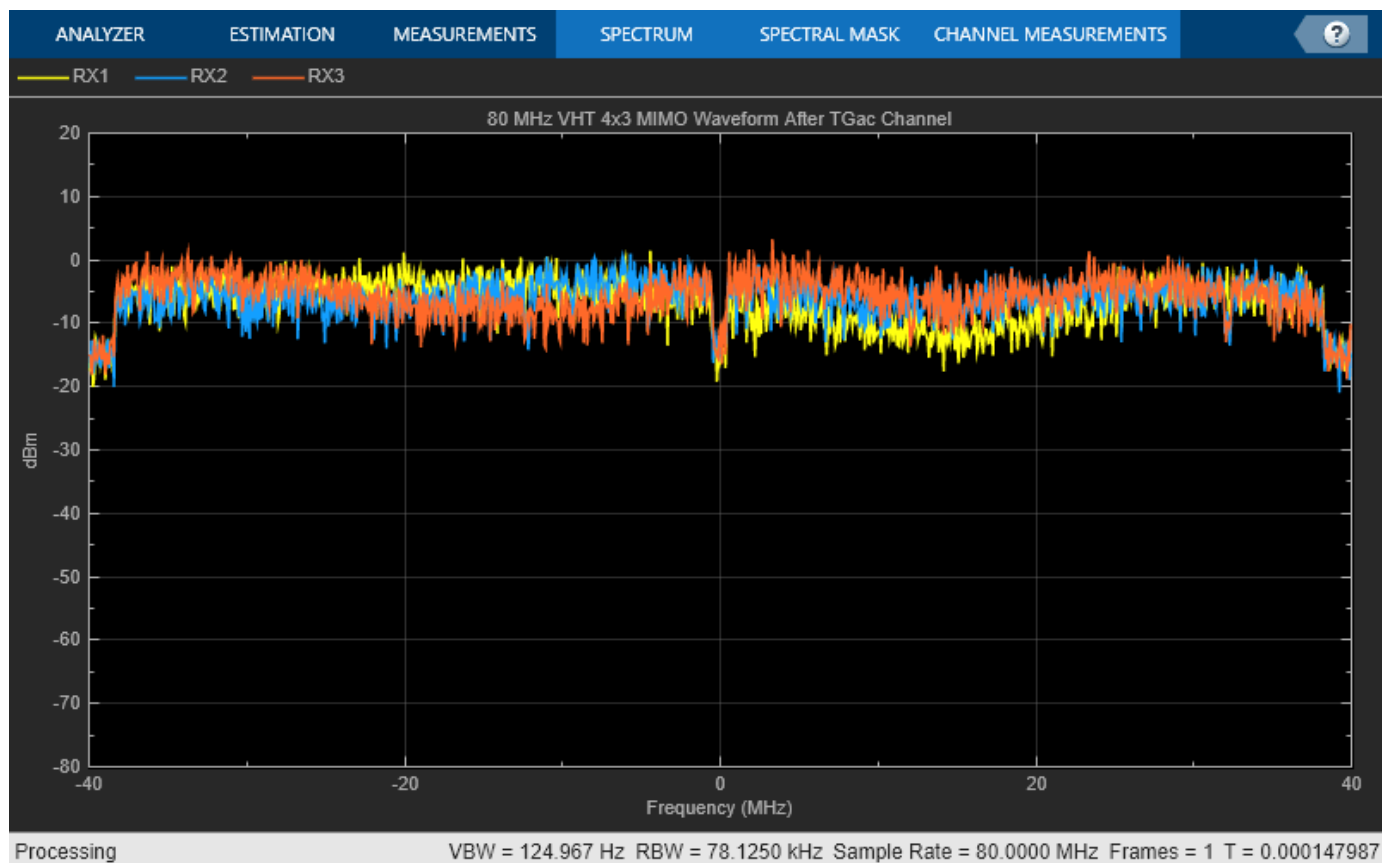

The overlaid signals show the TGac channel variation between the received streams.

References

[1] Erceg, V., L. Schumacher, P. Kyritsi, et al. *TGn Channel Models*. Version 4. IEEE 802.11-03/940r4, May 2004.

[2] Breit, G., H. Sampath, S. Vermani, et al. *TGac Channel Model Addendum*. Version 12. IEEE 802.11-09/0308r12, March 2010.

See Also

[wlanHTConfig](#) | [wlanNonHTConfig](#) | [wlanTGacChannel](#) | [wlanTGnChannel](#) | [wlanVHTConfig](#)

Related Examples

- “Waveform Generation” on page 3-17
- “Packet Recovery” on page 3-37
- “What Is WLAN?” on page 2-2

Packet Recovery

Received packets are degraded due to radio and channel impairments. Recovery of packet contents requires symbol timing and frequency offset correction, channel estimation, and demodulation and recovery of the preamble and payload. WLAN Toolbox functions perform these operations on VHT, HT-mixed, and non-HT PPDU fields.

VHT Packet Recovery

This example shows how to recover contents from a VHT format waveform.

Generate 80 MHz VHT Waveform

Create a VHT configuration object. Set `APEPLength` to 3200 and `MCS` to 5. Create a transmission bit stream for the data field. For a VHT waveform, the data field contains `PSDULength*8` bits.

```
cfgVHT = wlanVHTConfig('APEPLength',3200,'MCS',5);
txBits = randi([0 1],cfgVHT.PSDULength*8,1);
```

Create the PPDU fields individually. Create L-STF, L-LTF, L-SIG, VHT-SIG-A, VHT-STF, VHT-LTF, and VHT-SIG-B preamble fields and the VHT-Data field.

```
lstf = wlanLSTF(cfgVHT);
lltf = wlanLLTF(cfgVHT);
lsig = wlanLSIG(cfgVHT);
vhtSigA = wlanVHTSIGA(cfgVHT);
vhtstf = wlanVHTSTF(cfgVHT);
vhtltf = wlanVHTLTF(cfgVHT);
vhtSigB = wlanVHTSIGB(cfgVHT);
vhtData = wlanVHTData(txBits, cfgVHT);
```

Concatenate the individual fields to create a single PPDU waveform.

```
txPPDU = [lstf; lltf; lsig; vhtSigA; vhtstf; vhtltf; vhtSigB; vhtData];
```

Pass VHT Waveform Through TGac SISO Channel

Create TGac SISO and AWGN channel objects.

```
chBW = cfgVHT.ChannelBandwidth;
fs = 80e6;
tgac = wlanTGacChannel('SampleRate', fs, 'ChannelBandwidth', chBW, ...
    'LargeScaleFadingEffect', 'Pathloss and shadowing');
awgnChan = comm.AWGNChannel('NoiseMethod', 'Variance', 'VarianceSource', 'Input port');
```

Calculate the noise variance for a receiver with a 9 dB noise figure. The noise variance, `noiseVar`, is equal to $kTBF$, where k is Boltzmann's constant, T is the ambient temperature of 290 K, B is the bandwidth (sample rate), and F is the receiver noise figure. Pass the transmitted waveform through the noisy TGac channel.

```
noiseVar = 10^((-228.6 + 10*log10(290) + 10*log10(fs) + 9)/10)
```

```
noiseVar = 2.5438e-12
```

```
rxPPDU = awgnChan(tgac(txPPDU), noiseVar);
```

Recover VHT Preamble Contents from PPDU

In general, the L-STF and L-LTF are processed to perform frequency offset estimation and correction, and symbol timing. For this example, the carrier frequency is not offset and the packet timing is 'on-time'. Therefore, for accurate demodulation, determination of carrier frequency offset and symbol timing is not required.

Find the start and stop indices for the PPDU fields.

```
fieldInd = wlanFieldIndices(cfgVHT)
```


```
fieldInd = struct with fields:
    LSTF: [1 640]
    LLTF: [641 1280]
    LSIG: [1281 1600]
    VHTSIGA: [1601 2240]
    VHTSTF: [2241 2560]
    VHTLTF: [2561 2880]
    VHTSIGB: [2881 3200]
    VHTData: [3201 12160]
```

The stop index of VHT-SIG-B indicates the preamble length in samples.

```
numSamples = fieldInd.VHTSIGB(2);
```

Plot the preamble and the beginning of the packet data. Add markers to and plot to delineate the packet field boundaries.

```
time = ([0:double(numSamples)-1]/fs)*1e6;
peak = 1.2*max(abs(rxPPDU(1:numSamples)));
fieldMarkers = zeros(numSamples,1);
fieldMarkers(fieldInd.LSTF(2)-1,1) = peak;
fieldMarkers(fieldInd.LLTF(2)-1,1) = peak;
fieldMarkers(fieldInd.LSIG(2)-1,1) = peak;
fieldMarkers(fieldInd.VHTSIGA(2)-1,1) = peak;
fieldMarkers(fieldInd.VHTSTF(2)-1,1) = peak;
fieldMarkers(fieldInd.VHTLTF(2)-1,1) = peak;
fieldMarkers(fieldInd.VHTSIGB(2)-1,1) = peak;
plot(time,abs(rxPPDU(1:numSamples)),time,fieldMarkers)
xlabel('Time (microseconds)')
ylabel('Magnitude')
title('VHT Preamble')
```

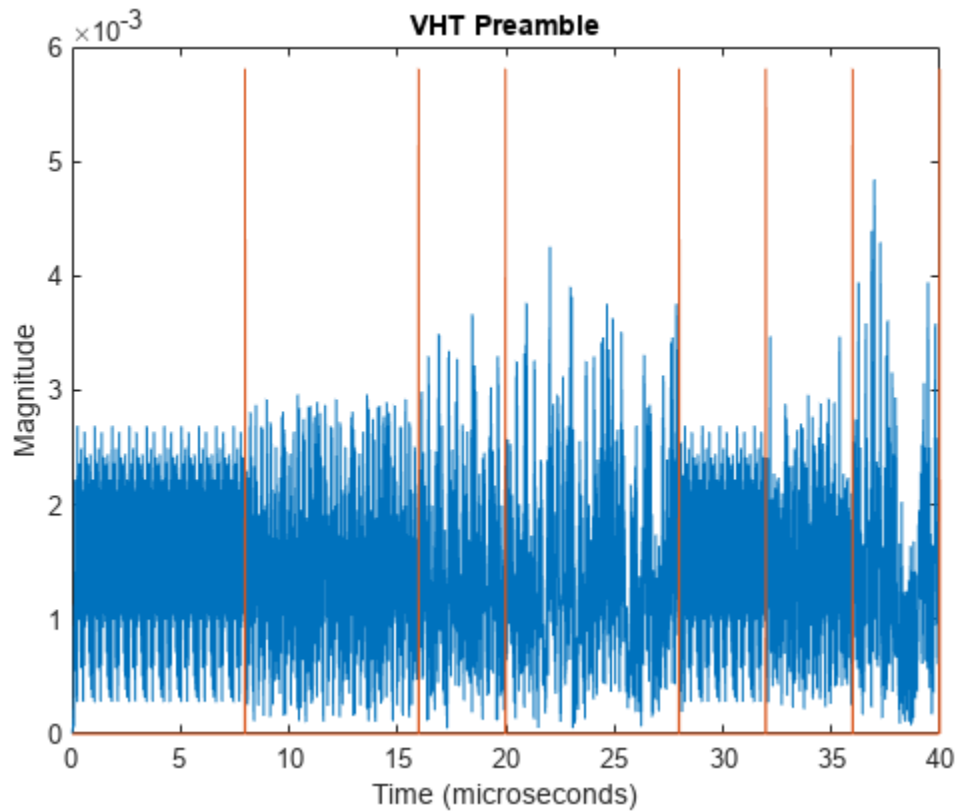

Demodulate the L-LTF and estimate the channel.

```
rxLLTF = rxPPDU(fieldInd.LLTF(1):fieldInd.LLTF(2),:);
demodLLTF = wlanLLTFDemodulate(rxLLTF, cfgVHT);
chEstLLTF = wlanLLTFChannelEstimate(demodLLTF, cfgVHT);
```

Extract the L-SIG field from the received PPDU, recover its information bits and check the CRC.

```
rxLSIG = rxPPDU(fieldInd.LSIG(1):fieldInd.LSIG(2),:);
[reLSIG, failCRC] = wlanLSIGRecover(rxLSIG, chEstLLTF, noiseVar, chBW);
failCRC
```

```
failCRC = logical
         0
```

`failCRC = 0` indicates that CRC passed.

For the VHT format, the L-SIG rate bits are constant and set to `[1 1 0 1]`. Inspect the L-SIG rate information and confirm that this constant sequence is recovered. For the VHT format, the MCS setting in VHT-SIG-A2 determines the actual data rate.

```
rate = reLSIG(1:4)';
rate = 1x4 int8 row vector
      1      1      0      1
```

Extract the VHT-SIG-A and confirm that the CRC check passed.

```
rxVHTSIGA = rxPPDU(fieldInd.VHTSIGA(1):fieldInd.VHTSIGA(2),:);
[recVHTSIGA, failCRC] = wlanVHTSIGAREcover(rxVHTSIGA, ...
    chEstLLTF, noiseVar, chBW);
failCRC

failCRC = logical
    0
```

Extract the MCS setting from the VHT-SIG-A. For single user VHT, the MCS is located in VHT-SIG-A2 bits 4 through 7.

```
recMCSbits = (recVHTSIGA(29:32))';
recMCS = bi2de(double(recMCSbits))

recMCS = 5

isequal(recMCS, cfgVHT.MCS)

ans = logical
    1
```

The recovered MCS setting matches the MCS value in the configuration object.

Extract and demodulate the VHT-LTF. Use the demodulated signal to perform channel estimation. Use the channel estimate to recover the VHT-SIG-B and VHT-Data fields.

```
rxVHTLTF = rxPPDU(fieldInd.VHTLTF(1):fieldInd.VHTLTF(2),:);
demodVHTLTF = wlanVHTLTFDemodulate(rxVHTLTF, cfgVHT);
chEstVHTLTF = wlanVHTLTFChannelEstimate(demodVHTLTF, cfgVHT);
```

Extract and recover the VHT-SIG-B.

```
rxVHTSIGB = rxPPDU(fieldInd.VHTSIGB(1):fieldInd.VHTSIGB(2),:);
recVHTSIGB = wlanVHTSIGBREcover(rxVHTSIGB, chEstVHTLTF, noiseVar, chBW);
```

As described in IEEE Std 802.11ac-2013, Table 22-1, the value in the VHT-SIG-B Length field multiplied by 4 is the recovered APEP length for packets carrying data. Verify that the APEP length, contained in the first 19 bits of the VHT-SIG-B, corresponds to the specified APEP length.

```
sigbAPEPbits = recVHTSIGB(1:19)';
sigbAPEPlength = bi2de(double(sigbAPEPbits))*4

sigbAPEPlength = 3200

isequal(sigbAPEPlength, cfgVHT.APEPLength)

ans = logical
    1
```

The recovered value matches the configured APEP Length.

Recover equalized symbols using channel estimates from the VHT-LTF.

```
recPSDU = wlanVHTDataRecover(rxPPDU(fieldInd.VHTData(1):fieldInd.VHTData(2),:), ...
    chEstVHTLTF, noiseVar, cfgVHT);
```


Compare transmission and receive PSDU bits.

```
numErr = biterr(txBits,recPSDU)
```

```
numErr = 0
```

The number of bit errors is zero.

HT Packet Recovery

This example shows how to recover content from an HT-format waveform.

Generate 20 MHz HT Waveform

Create an HT configuration object and transmission PSDU. Set MCS to 2. For an HT waveform, the data field is `PSDULength*8` bits.

```
cfgHT = wlanHTConfig('MCS',2);
txPSDU = randi([0 1],cfgHT.PSDULength*8,1);
```

Create the PPDU fields individually. Create L-STF, L-LTF, L-SIG, HT-SIG, HT-STF, and HT-LTF preamble fields and the HT-Data field.

```
lstf = wlanLSTF(cfgHT);
lltf = wlanLLTF(cfgHT);
lsig = wlanLSIG(cfgHT);
htsig = wlanHTSIG(cfgHT);
htstf = wlanHTSTF(cfgHT);
htlftf = wlanHTLTF(cfgHT);
htData = wlanHTData(txPSDU, cfgHT);
```

Concatenate the individual fields to create a single PPDU waveform.

```
txPPDU = [lstf; lltf; lsig; htsig; htstf; htlftf; htData];
```

Pass HT Waveform Through TGn SISO Channel

Create TGn SISO channel and AWGN channel objects.

```
fs = 20e6;
tgnChan = wlanTGnChannel('SampleRate',fs,'LargeScaleFadingEffect','Pathloss and shadowing');
awgnChan = comm.AWGNChannel('NoiseMethod','Variance','VarianceSource','Input port');
```

Calculate the noise variance for a receiver with a 9 dB noise figure. The noise variance, `noiseVar`, is equal to $kTBF$, where k is Boltzmann's constant, T is the ambient temperature of 290 K, B is the bandwidth (sample rate), and F is the receiver noise figure. Pass the transmitted waveform through the noisy TGn channel.

```
noiseVar = 10^((-228.6 + 10*log10(290) + 10*log10(fs) + 9)/10);
rxPPDU = awgnChan(tgnChan(txPPDU),noiseVar);
```

Recover HT Preamble Contents from PPDU

In general, the L-STF and L-LTF are processed to perform frequency offset estimation and correction, and symbol timing. For this example, the carrier frequency is not offset and the packet timing is 'on-time'. Therefore, for accurate demodulation, determination of carrier frequency offset and symbol timing is not required.

Find the start and stop indices for the PPDU fields.

```
fieldInd = wlanFieldIndices(cfgHT)
```

```
fieldInd = struct with fields:
```


```
  LSTF: [1 160]  
  LLTF: [161 320]  
  LSIG: [321 400]  
  HTSIG: [401 560]  
  HTSTF: [561 640]  
  HTLTF: [641 720]  
  HTData: [721 9200]
```

The stop index of HT-LTF indicates the preamble length in samples.

```
numSamples = fieldInd.HTLTF(2);
```

Plot the preamble and the beginning of the packet data. Add markers to and plot to delineate the packet field boundaries.

```
time = ([0:double(numSamples)-1]/fs)*1e6;  
peak = 1.2*max(abs(rxPPDU(1:numSamples)));  
fieldMarkers = zeros(numSamples,1);  
fieldMarkers(fieldInd.LSTF(2)-1,1) = peak;  
fieldMarkers(fieldInd.LLTF(2)-1,1) = peak;  
fieldMarkers(fieldInd.LSIG(2)-1,1) = peak;  
fieldMarkers(fieldInd.HTSIG(2)-1,1) = peak;  
fieldMarkers(fieldInd.HTSTF(2)-1,1) = peak;  
fieldMarkers(fieldInd.HTLTF(2)-1,1) = peak;  
plot(time,abs(rxPPDU(1:numSamples)),time,fieldMarkers)  
xlabel('Time (microseconds)')  
ylabel('Magnitude')  
title('HT Format Preamble')
```

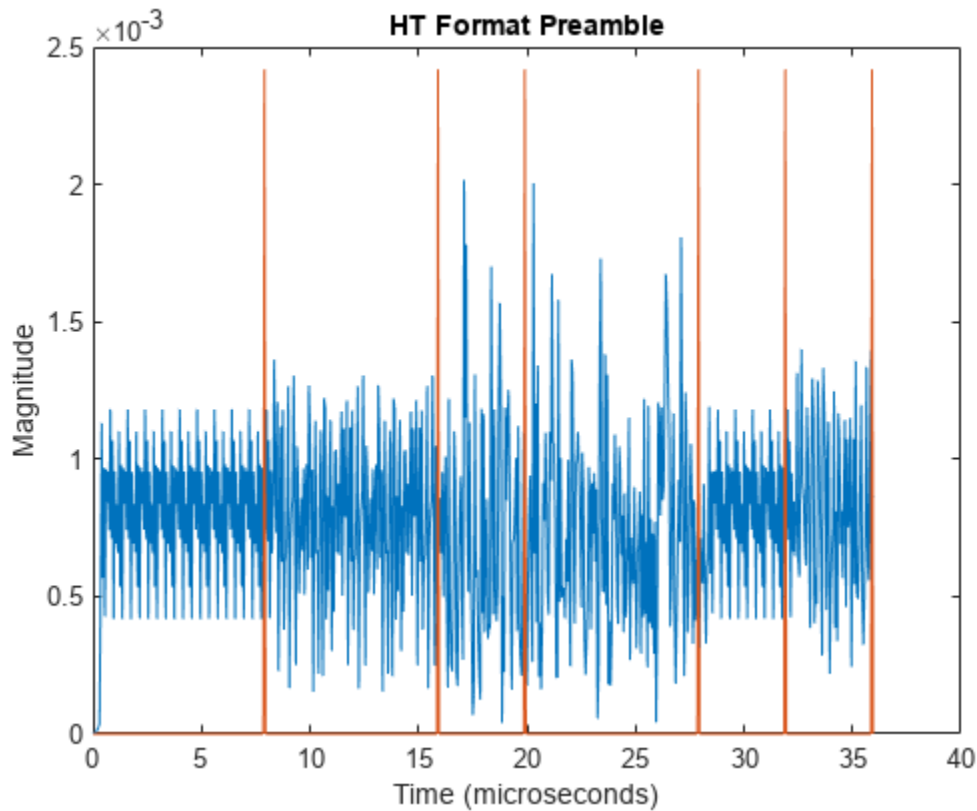

Demodulate the L-LTF and estimate the channel.

```
rxLLTF = rxPPDU(fieldInd.LLTF(1):fieldInd.LLTF(2),:);
demodLLTF = wlanLLTFDemodulate(rxLLTF,cfgHT);
chEstLLTF = wlanLLTFChannelEstimate(demodLLTF,cfgHT);
```

Extract the L-SIG field from the received PPDU and recover its information bits.

```
rxLSIG = rxPPDU(fieldInd.LSIG(1):fieldInd.LSIG(2),:);
[reLSIG, failCRC] = wlanLSIGRecover(rxLSIG, chEstLLTF, noiseVar, cfgHT.ChannelBandwidth);
failCRC
```

```
failCRC = logical
         0
```

`failCRC = 0` indicates that CRC passed.

For the HT format, the L-SIG rate bits are constant and set to `[1 1 0 1]`. Inspect the L-SIG rate information and confirm that this constant sequence is recovered. For the HT format, the MCS setting in HT-SIG determines the actual data rate.

```
rate = reLSIG(1:4)';
rate = 1x4 int8 row vector
     1     1     0     1
```

Extract the HT-SIG and confirm that the CRC check passed.

```
recHTSIG = rxPPDU(fieldInd.HTSIG(1):fieldInd.HTSIG(2),:);  
[recHTSIG, failCRC] = wlanHTSIGRecover(recHTSIG, chEstLLTF, noiseVar, cfgHT.ChannelBandwidth);  
failCRC  
  
failCRC = logical  
         0
```

Extract the MCS setting from the HT-SIG. For HT, the MCS is located in HT-SIG bits 0 through 6.

```
recMCSbits = (recHTSIG(1:7))';  
recMCS = bi2de(double(recMCSbits))  
  
recMCS = 2  
  
isequal(recMCS, cfgHT.MCS)  
  
ans = logical  
     1
```

The recovered MCS setting matches the MCS value in the configuration object.

Extract and demodulate the HT-LTF. Use the demodulated signal to perform channel estimation. Use the channel estimate to recover the HT-Data field.

```
rxHTLTF = rxPPDU(fieldInd.HTLTF(1):fieldInd.HTLTF(2),:);  
demodHTLTF = wlanHTLTFDemodulate(rxHTLTF, cfgHT);  
chEstHTLTF = wlanHTLTFChannelEstimate(demodHTLTF, cfgHT);
```

Recover HT-Data Contents from PPDU

Recover the received equalized symbols using channel estimates from the HT-LTF.

```
[recPSDU] = wlanHTDataRecover(rxPPDU(fieldInd.HTData(1):fieldInd.HTData(2),:), ...  
                             chEstHTLTF, noiseVar, cfgHT);
```

Compare the transmitted and received PSDU bits, and confirm that the number of bit errors is zero.

```
numErr = biterr(txPSDU, recPSDU)  
  
numErr = 0
```

Non-HT Packet Recovery

This example steps through recovery of non-HT-format waveform content.

Generate 20 MHz Non-HT Waveform

Create a non-HT configuration object and transmission PSDU. Set MCS to 4. For a non-HT waveform, the data field is PSDULength*8 bits.

```
cfgNonHT = wlanNonHTConfig('MCS', 4);  
txPSDU = randi([0 1], cfgNonHT.PSDULength*8, 1);
```

Create the PPDU fields individually. Use the non-HT-Data contents to check the bit error rate after recovery. Create L-STF, L-LTF, and L-SIG preamble fields and non-HT data field.

```
lstf = wlanLSTF(cfgNonHT);
lltf = wlanLLTF(cfgNonHT);
lsig = wlanLSIG(cfgNonHT);
nhtData = wlanNonHTData(txPSDU, cfgNonHT);
```

Concatenate the individual fields to create a single PPDU waveform.

```
txPPDU = [lstf; lltf; lsig; nhtData];
```

Pass Non-HT Waveform Through 802.11g SISO Channel

Calculate the free-space path loss for a transmitter-to-receiver separation distance of 3 meters. Create an 802.11g channel with a 3 Hz maximum Doppler shift and an RMS path delay equal to two times the sample time. Create an AWGN channel.

```
dist = 3;
pathLoss = 10^(-log10(4*pi*dist*(2.4e9/3e8)));
fs = 20e6;
trms = 2/fs;
maxDoppShift = 3;
ch802 = comm.RayleighChannel('SampleRate', fs, 'MaximumDopplerShift', maxDoppShift, 'PathDelays', trms);
awgnChan = comm.AWGNChannel('NoiseMethod', 'Variance', 'VarianceSource', 'Input port');
```

Calculate the noise variance for a receiver with a 9 dB noise figure. The noise variance, `noiseVar`, is equal to $kTBF$, where k is Boltzmann's constant, T is the ambient temperature of 290 K, B is the bandwidth (sample rate), and F is the receiver noise figure. Pass the transmitted waveform through the noisy, lossy 802.11g channel.

```
noiseVar = 10^((-228.6 + 10*log10(290) + 10*log10(fs) + 9)/10);
rxPPDU = awgnChan(ch802(txPPDU), noiseVar) * pathLoss;
```

Recover Non-HT Preamble Contents from PPDU

In general, the L-STF and L-LTF are processed to perform frequency offset estimation and correction, and symbol timing. For this example, the carrier frequency is not offset and the packet timing is 'on-time'. Therefore, for accurate demodulation, determination of carrier frequency offset and symbol timing is not required.

Find the start and stop indices for the PPDU fields.

```
fieldInd = wlanFieldIndices(cfgNonHT)

fieldInd = struct with fields:
    LSTF: [1 160]
    LLTF: [161 320]
    LSIG: [321 400]
    NonHTData: [401 7120]
```

The stop index of the L-SIG field indicates the preamble length in samples.


```
numSamples = fieldInd.LSIG(2);
```

Plot the preamble and the beginning of the packet data. Add markers to and plot to delineate the packet field boundaries.

```

time = ((0:double(numSamples)-1)/fs)*1e6;
peak = 1.2*max(abs(rxPPDU(1:numSamples)));
fieldMarkers = zeros(numSamples,1);
fieldMarkers(fieldInd.LSTF(2)-1,1) = peak;
fieldMarkers(fieldInd.LLTF(2)-1,1) = peak;
fieldMarkers(fieldInd.LSIG(2)-1,1) = peak;
plot(time,abs(rxPPDU(1:numSamples)),time,fieldMarkers)
xlabel('Time (microseconds)')
ylabel('Magnitude')
title('Non-HT Format Preamble')

```

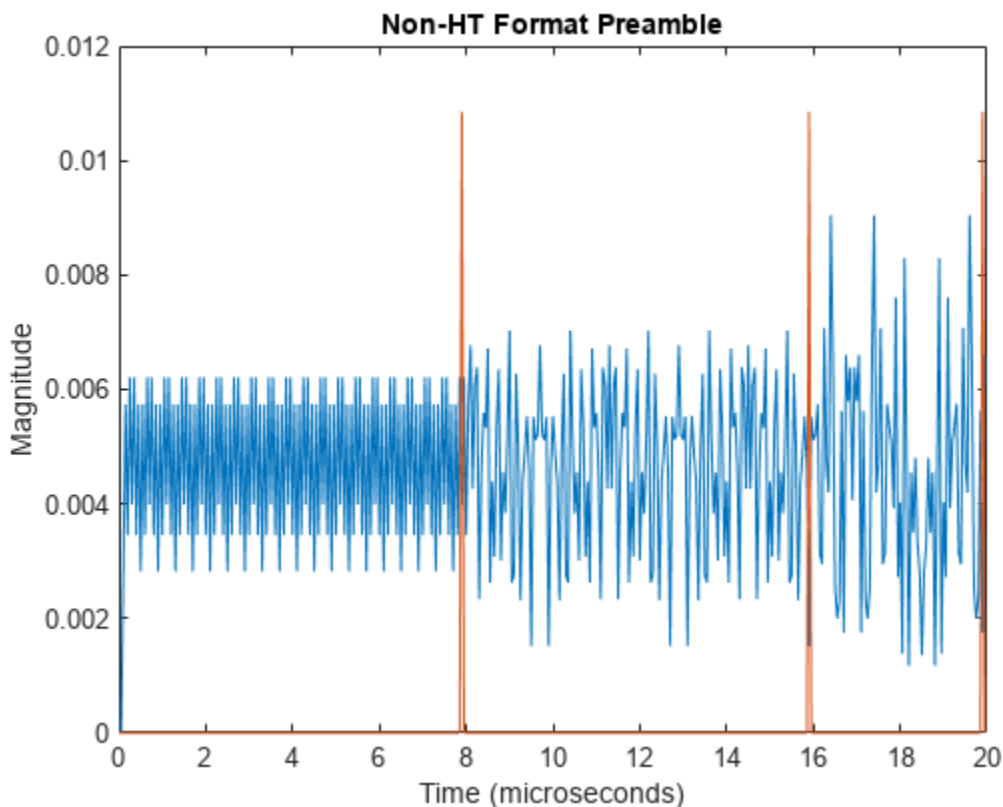

Demodulate the L-LTF and estimate the channel.

```

rxLLTF = rxPPDU(fieldInd.LLTF(1):fieldInd.LLTF(2),:);
demodLLTF = wlanLLTFDemodulate(rxLLTF,cfgNonHT);
chEstLLTF = wlanLLTFChannelEstimate(demodLLTF,cfgNonHT);

```

Extract the L-SIG field from the received PPDU and recover its information bits.

```

rxLSIG = rxPPDU(fieldInd.LSIG(1):fieldInd.LSIG(2),:);
recLSIG = wlanLSIGRecover(rxLSIG,chEstLLTF,noiseVar,'CBW20');

```

The first four bits of the L-SIG field, bits 0 through 3, contain the rate information. Confirm that the sequence [1 0 0 1] is recovered. This sequence corresponds to the 24 MHz data rate for the non-HT MCS setting of 4.

```
rate = recLSIG(1:4)'
```

```
rate = 1x4 int8 row vector
    1  0  0  1
```

Extract and demodulate the L-LTF. Use the demodulated signal to perform channel estimation. Use the channel estimate to recover the non-HT-Data field.

```
rxLLTF = rxPPDU(fieldInd.LLTF(1):fieldInd.LLTF(2),:);
demodLLTF = wlanLLTFDemodulate(rxLLTF,cfgNonHT);
chEstLLTF = wlanLLTFChannelEstimate(demodLLTF,cfgNonHT);
```

Recover Non-HT-Data Contents from PPDU

Recover equalized symbols using channel estimates from HT-LTF, specifying a zero-forcing equalization method.

```
rxPSDU = rxPPDU(fieldInd.NonHTData(1):fieldInd.NonHTData(2),:);
[recPSDU,~,eqSym] = wlanNonHTDataRecover(rxPSDU,chEstLLTF,noiseVar,cfgNonHT,'EqualizationMethod')
```

Compare the transmitted and received PSDU bits, and confirm that the number of bit errors is zero.

```
numErr = biterr(txPSDU,recPSDU)
numErr = 0
```

See Also

[wlanHTConfig](#) | [wlanNonHTConfig](#) | [wlanVHTConfig](#)

Related Examples

- “WLAN Channel Models” on page 3-28
- “What Is WLAN?” on page 2-2
- “Build VHT PPDU”


Transmit-Receive Chain

In this section...

“Transmit Processing Chain” on page 3-48

“Receiver Processing Chain” on page 3-51

WLAN Toolbox functionality includes elements of a standard transmitter-channel-receiver processing chain.

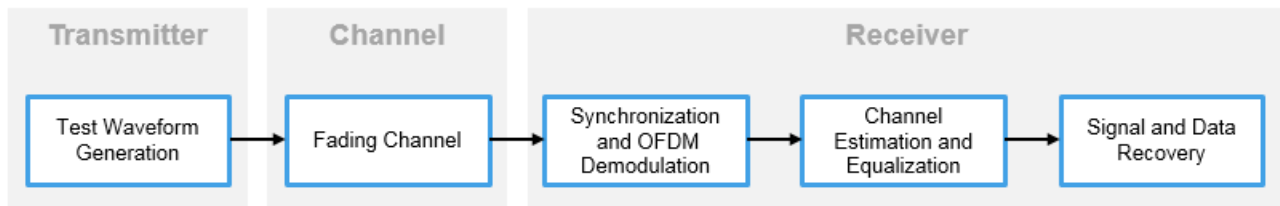

- Transmitter functions enable simulation of the various IEEE 802.11² formats. The simulated waveform includes preamble and data fields of the PPDU. You can use this waveform in link-level simulations. You can also use it as a test signal for test devices and equipment.
- Channel functions model various types of AWGN, fading, or moving channel environmental effects.
- Receiver functions recover the transmitted signal.

Transmit Processing Chain


WLAN Toolbox functions enable you to generate waveforms for a complete PPDU or for the individual fields of VHT, HT-mixed, and non-HT format PDUs.

VHT Data Transmit Processing Chain

As described in IEEE 802.11ac-2013 [4], Section 22 specifies the PHY entity for a very high throughput (VHT) orthogonal frequency division multiplexing (OFDM) system. A VHT STA must be capable of transmitting and receiving HT-PHY and non-HT-PHY-compliant PDUs. Specifically, the VHT PHY is based on the HT PHY defined in Section 20, which in turn is based on the OFDM PHY defined in Section 18. The VHT PHY extends the maximum number of space-time streams supported to eight and provides support for downlink multi-user (MU) transmissions. A downlink MU transmission supports up to four users with up to four space-time streams per user, with the total number of space-time streams not exceeding eight.


IEEE Std 802.11ac-2013 [4], Section 22 defines requirements for physical layer processing associated with each PPDU field for the VHT format.

² IEEE Std 802.11-2016 Adapted and reprinted with permission from IEEE. Copyright IEEE 2016. All rights reserved.

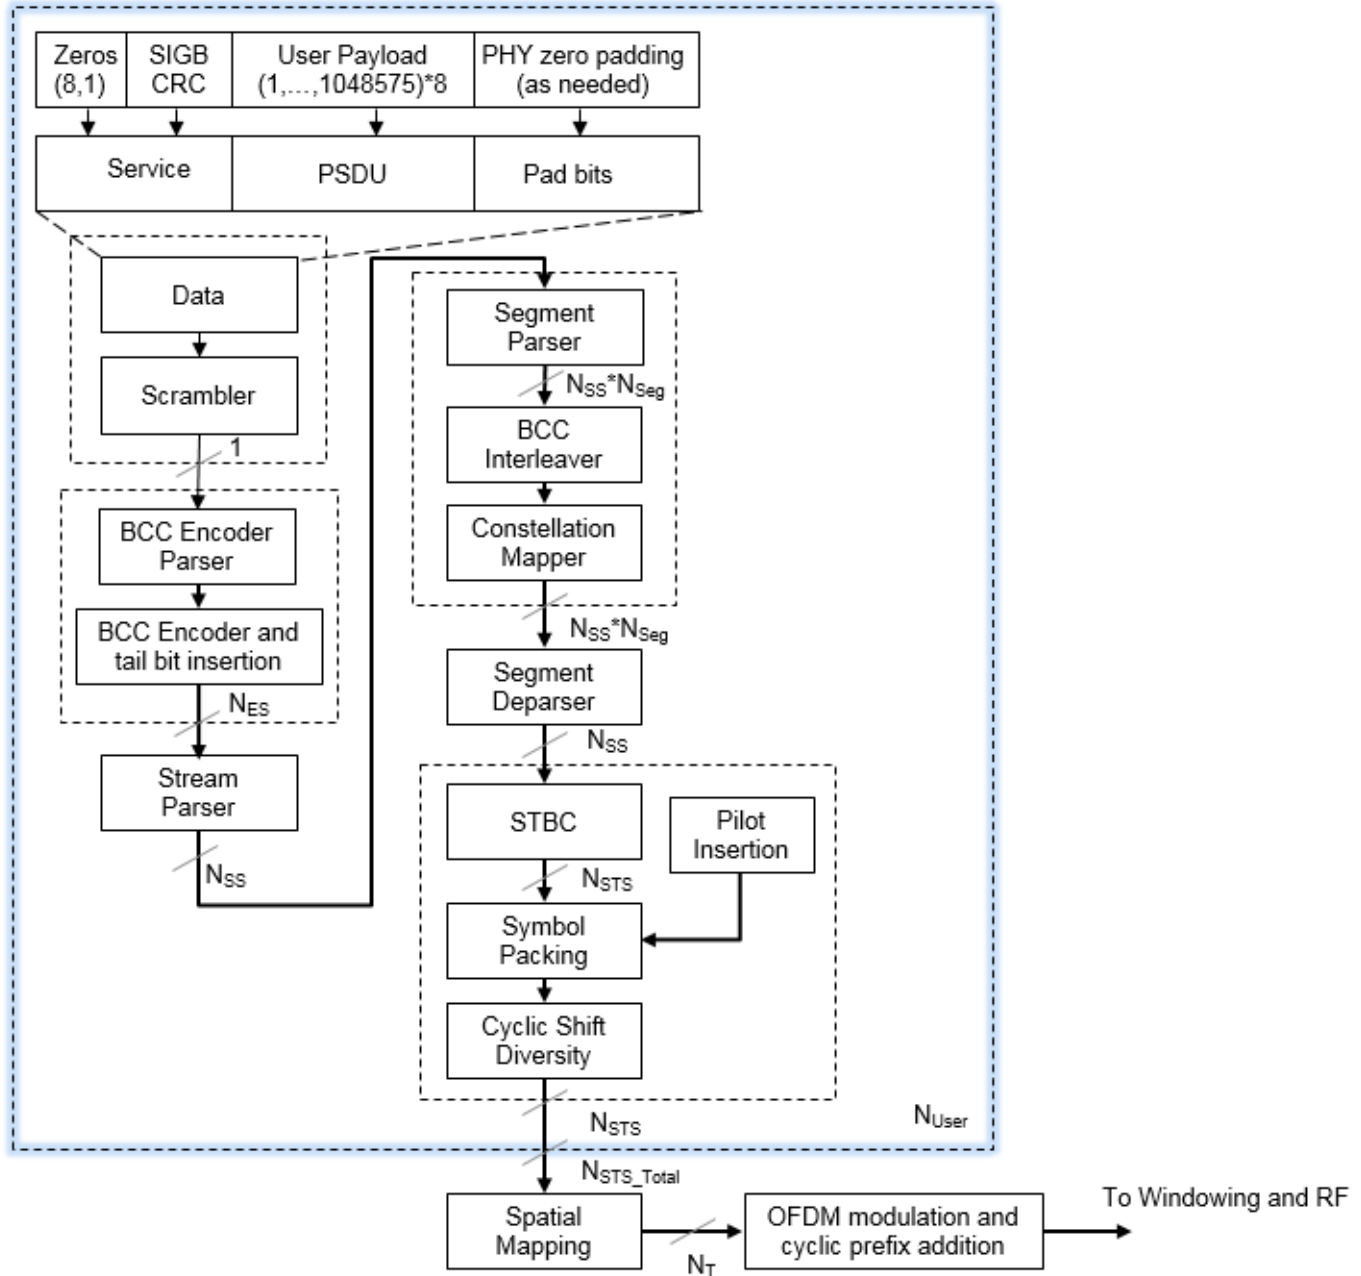


HT Data Transmit Processing Chain

IEEE 802.11-2012 [3], Section 20 defines requirements for physical layer processing associated with each PPDU field for the HT-mixed format.

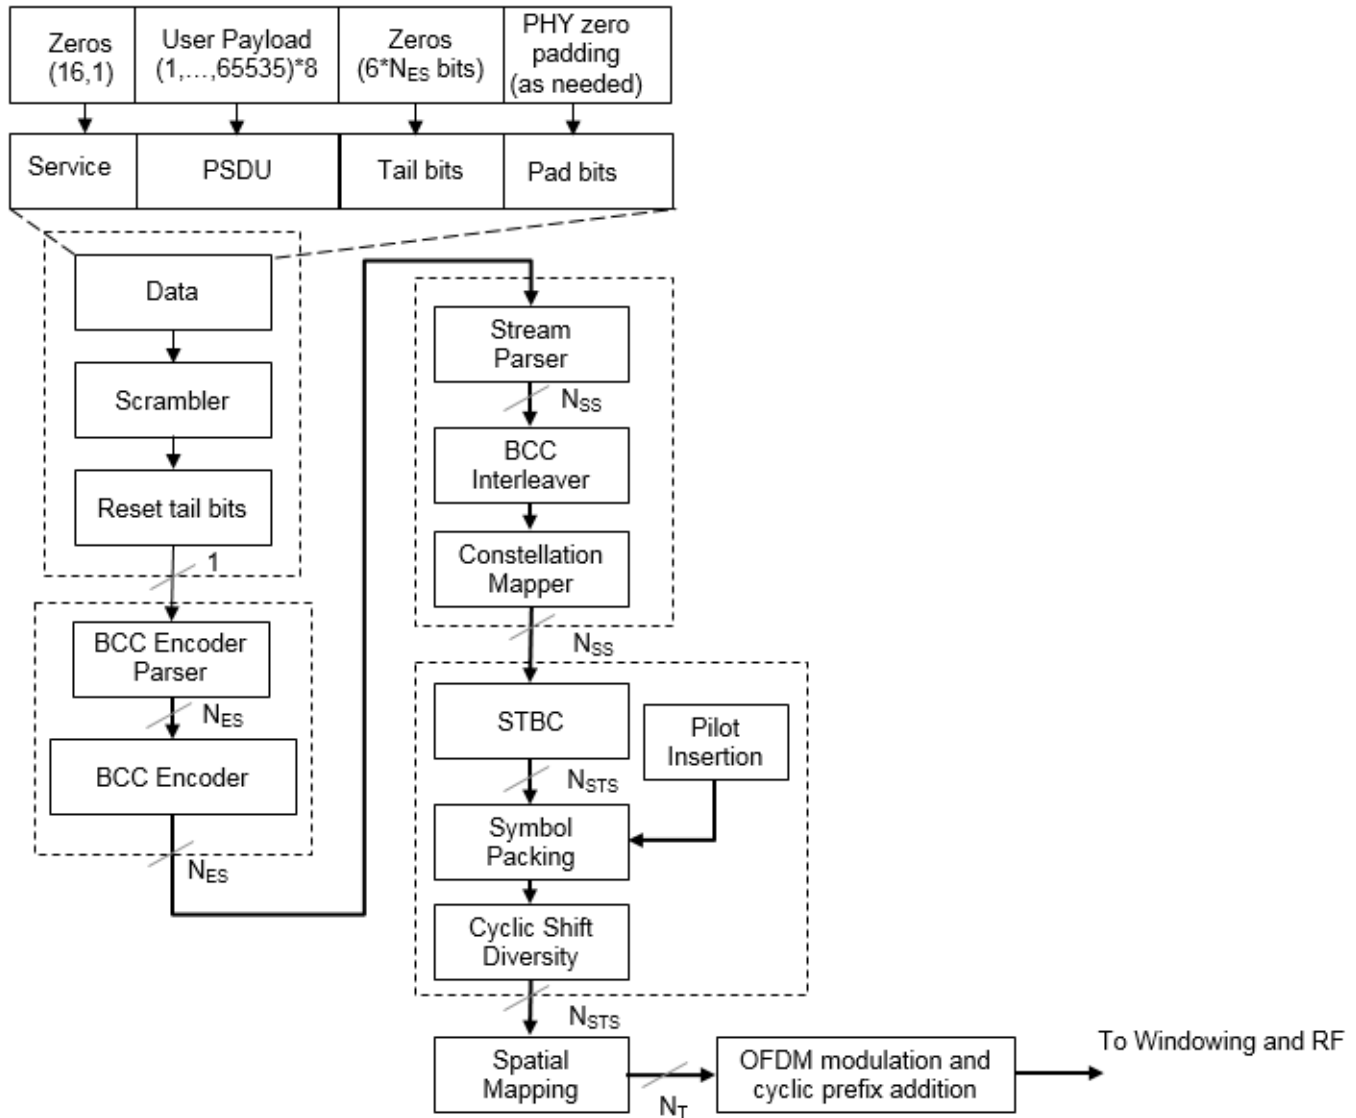

Non-HT Data Transmit Processing Chain

IEEE 802.11-2012 [3], Section 18 defines requirements for physical layer processing associated with each PPDU field for the OFDM modulation scheme. IEEE 802.11-2012 [3], Section 17, and Section 19 define requirements for physical layer processing associated with each PPDU field for the DSSS modulation scheme.

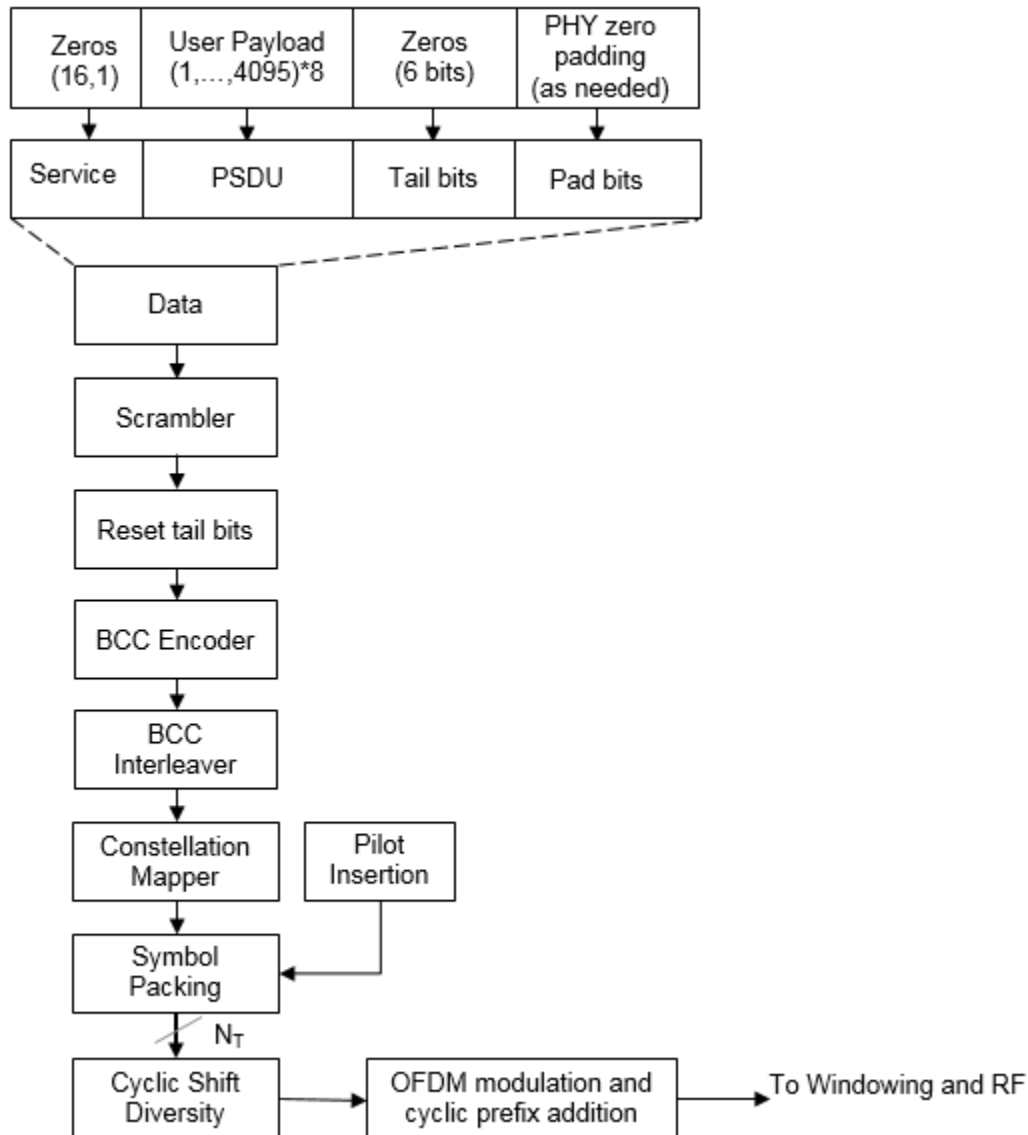


Receiver Processing Chain

WLAN Toolbox functions enable you to recover transmitted VHT, HT-mixed, and non-HT format PPDU. The receive processing chain includes synchronization, OFDM demodulation, channel estimation, equalization, and signal and data recovery.


VHT Data Receive Processing Chain

This figure shows the receiver elements used to process the VHT Data field. The “Signal Reception” category includes a list of all receiver functions in the WLAN Toolbox.

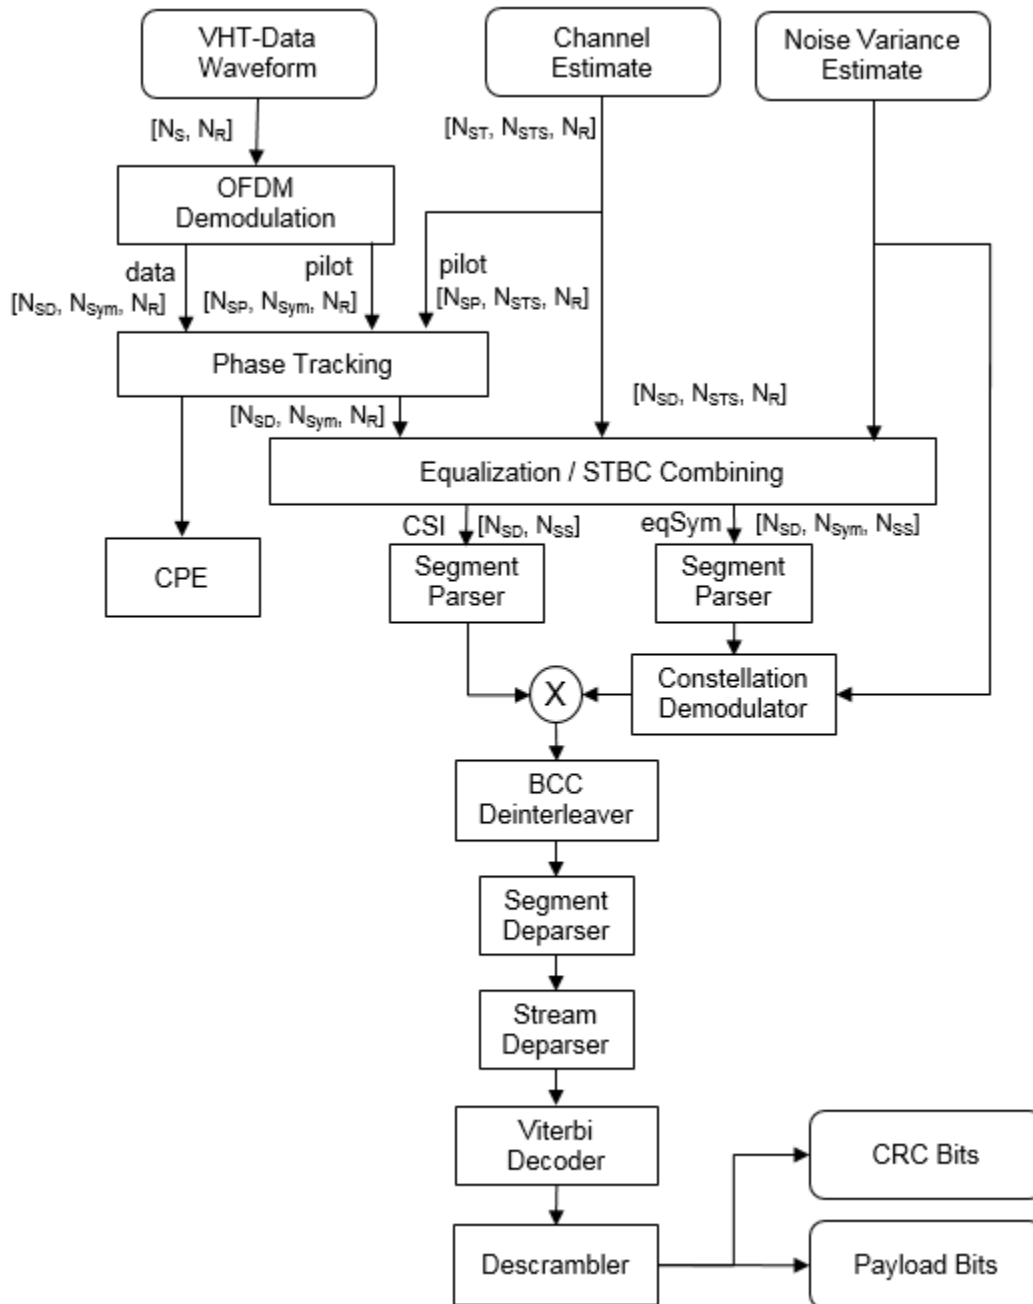


HT Data Receive Processing Chain

This figure shows the receiver elements used to process the HT Data field. The “Signal Reception” category includes a list of all receiver functions in the WLAN Toolbox.

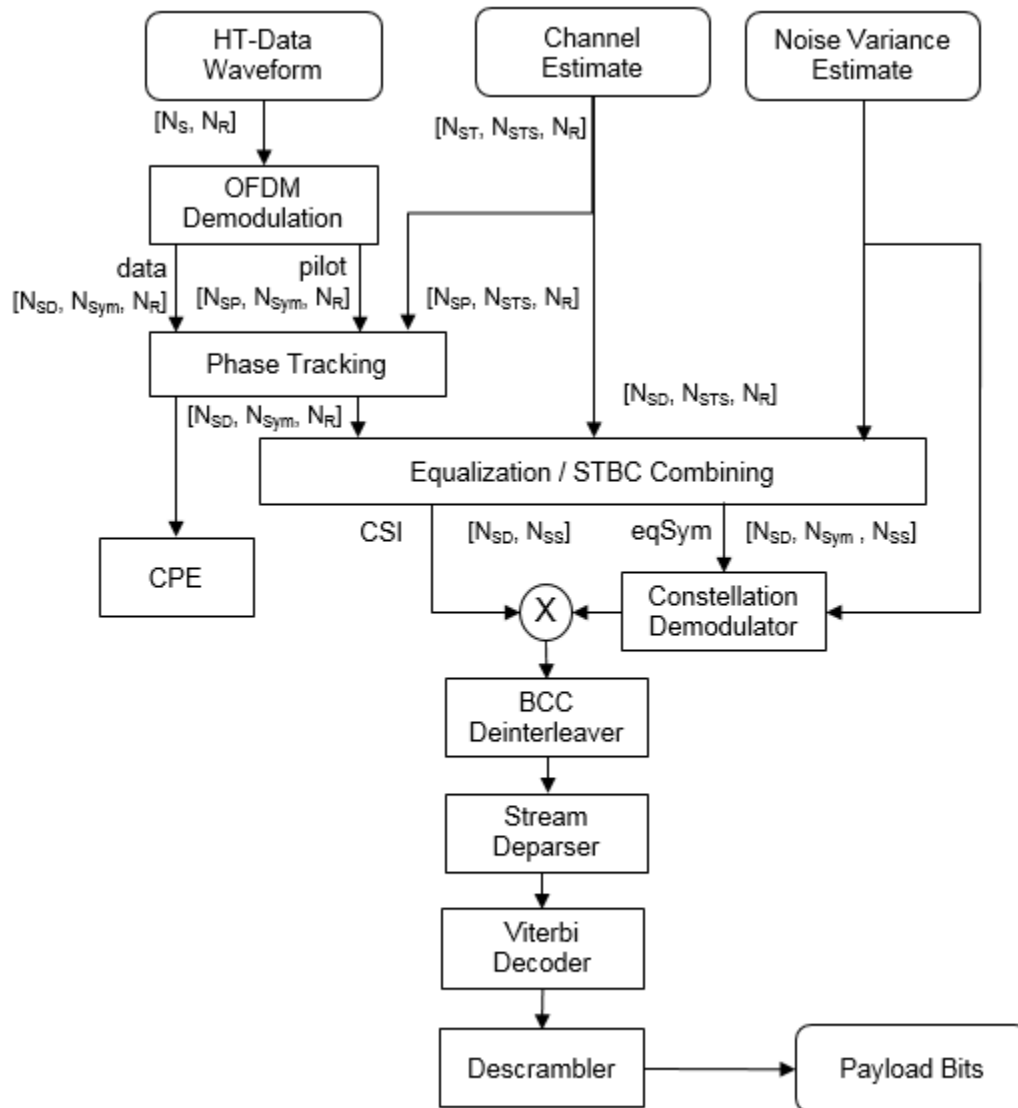

Non-HT Data Receive Processing Chain

This figure shows the receiver elements used to process the non-HT Data field. The “Signal Reception” category includes a list of all receiver functions in the WLAN Toolbox.

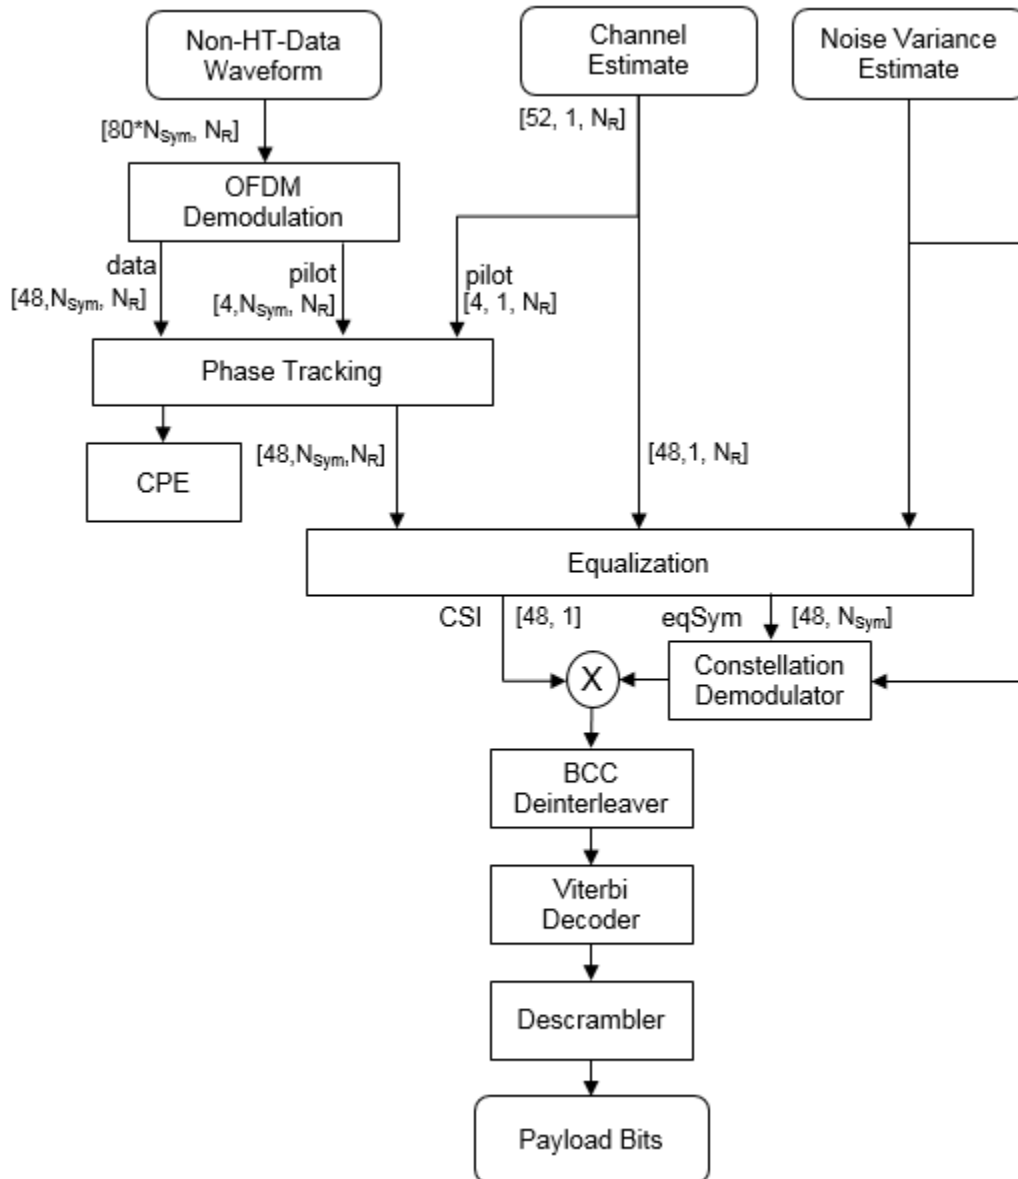

References

- [1] IEEE 802.11™: Wireless LANs. <http://standards.ieee.org/about/get/802/802.11.html>
- [2] IEEE Std 802.11™-2016 IEEE Standard for Information technology – Telecommunications and information exchange between systems – Local and metropolitan area networks – Specific requirements – Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications.
- [3] IEEE Std 802.11™-2012 IEEE Standard for Information technology – Telecommunications and information exchange between systems – Local and metropolitan area networks – Specific

- requirements — Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications.
- [4] IEEE Std 802.11ac™-2013 IEEE Standard for Information technology — Telecommunications and information exchange between systems — Local and metropolitan area networks — Specific requirements — Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications — Amendment 4: Enhancements for Very High Throughput for Operation in Bands below 6 GHz.
- [5] IEEE Std 802.11ad™-2012 IEEE Standard for Information technology — Telecommunications and information exchange between systems — Local and metropolitan area networks — Specific requirements — Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications — Amendment 3: Enhancements for Very High Throughput in the 60 GHz Band.
- [6] Perahia, E., and R. Stacey. *Next Generation Wireless LANs: 802.11n and 802.11ac*. 2nd Edition. United Kingdom: Cambridge University Press, 2013.

See Also

“Transmit and Recover L-SIG, VHT-SIG-A, VHT-SIG-B in Fading Channel” | “End-to-End VHT Simulation with Frequency Correction”

