

General Description

The MAX5911/MAX5912 are fully integrated hot-swap switches for negative supply rails. These devices allow the safe insertion and removal of circuit cards into live backplanes or ports without causing problematic glitches on the negative power-supply rail. They also monitor various circuit parameters and disconnect the load if a fault condition occurs, alerting the host with a logic-level FAULT output. The MAX5911/MAX5912 operate over a voltage range of -16V to -65V and are designed to permit hot plugging of an IP phone into a hub, but are not limited to that operation.

During startup, an internal power FET regulates the current between the backplane power source and the load to 280mA for MAX5911 and 415mA for MAX5912. After startup, the FET is fully enhanced to reduce its on-resistance. To ensure robust operation, the MAX5911/ MAX5912 contain built-in safety features that prevent damage to the internal FET. They include an enable input, which responds to positive logic signals (+3.3V or +5V), allowing the host system to disconnect the load. ENABLE is also used to reset the device after a latching fault condition occurs.


The MAX5911/MAX5912 Simple Swapper™ hot-swap ICs monitor four parameters for these fault conditions: undervoltage lockout (UVLO), power-not-good, zerocurrent detection, and thermal shutdown. These devices are available in the extended temperature range, -40°C to +85°C. The MAX5911 and MAX5912 come in 8-pin and 16-pin SOIC packages, respectively.

Applications

IP Phones **Network Routers Network Switches**

Internet Appliances Power-Over-LAN

Typical Operating Circuit

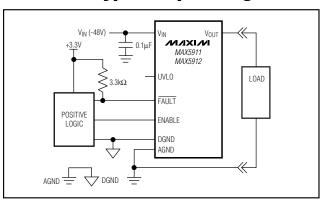

Features


- ♦ Provides Safe Hot Swap for -16V to -65V Power **Supplies**
- ♦ 280mA Current Limit for MAX5911
- ♦ 415mA Current Limit for MAX5912
- ♦ Zero-Current Load Disconnect
- **♦ Integrated Power FET**
- ♦ Status Output Reports Fault Condition
- ♦ Internal Switch-Protection Circuitry
- ♦ Built-In Thermal Shutdown
- ♦ DGND Can Vary Up to ±5V with Respect to AGND

Ordering Information

PART	TEMP. RANGE	PIN-PACKAGE
MAX5911ESA	-40°C to +85°C	8 SO
MAX5912ESE	-40°C to +85°C	16 SO

Simple Swapper is a trademark of Maxim Integrated Products, Inc.

Pin Configurations

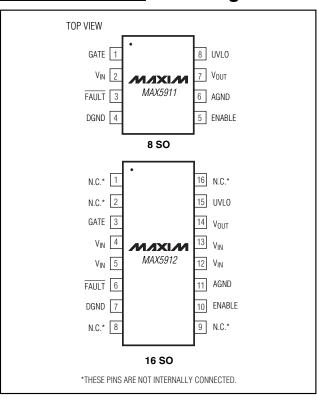

MIXIM

Maxim Integrated Products 1

ABSOLUTE MAXIMUM RATINGS

Voltages are with respect to AGND	, unless otherwise noted.
V _{IN}	+0.3V to -70V
V _{OUT}	+0.3V to (V _{IN} - 0.3V)
ENABLE to DGND	0.3V to +11V
ENABLE to VIN	0.3V to +70V
FAULT to DGND	0.3V to +11V
UVLO to V _{IN}	0.3V to +11V
DGND	5V to +5V
DGND to V _{IN}	0.3V to +70V
FAULT Sink Current	10mA

Continuous Output Current	.Internally Limited
Continuous Power Dissipation ($T_A = +70$ °C)	
8-Pin SO (derate 5.9mW/°C above +70°C)	470mW
16-Pin SO (derate 12.9mW/°C above +70°C)1039mW
Operating Temperature Range	40°C to +85°C
Junction Temperature	+150°C
Storage Temperature Range	60°C to +150°C
Lead Temperature (soldering, 10s)	+300°C

Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of the specifications is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

ELECTRICAL SPECIFICATIONS

 $(V_{IN} = -48V, AGND = DGND = 0, UVLO = open circuit, V_{ENABLE} = +3.3V, and T_A = -40^{\circ}C to +85^{\circ}C, unless otherwise noted. Typical values are at T_A = +25^{\circ}C.)$

PARAMETER	SYMBOL	CONDITIONS		MIN	TYP	MAX	UNITS
Input Voltage Range	V _{IN}			-65		-16	V
Supply Current	I _{IN}	Measured at AGND at the end of output voltage slew			1.5	2.5	mA
Maximum VOLIT Current	I _{OUT(MAX)}	V _{OUT} = V _{IN} + 5V	MAX5911	-310	-280	-250	mA
Maximum VOOT Current			MAX5912	-457	-415	-373	
DMOS On-Resistance	R _{DS(ON)}	MAX5911 I _{OUT} = -225mA MAX5912 I _{OUT} = -350mA			2.5	4	Ω
V _{OUT} Leakage Current		Measured on V _{OUT} when shut off	Measured on V _{OUT} when internal DMOS is shut off			10	μА
ENABLE Low Voltage	VIL	Referenced to DGND				0.8	V
ENABLE High Voltage	VIH	Referenced to DGND		2.0			V
ENABLE High Input Current	lін	VENABLE = +3.3V			140	300	μΑ
ENABLE Low Pulse Width (Note 1)	tEPW			200			ns
FAULT Output Low Voltage	VoL	IFAULT = 3mA				0.4	V
FAULT Output Leakage Current	Іон	VFAULT = +3.3V				10	μΑ
Zero-Current Detection Threshold	IFTH	Decreasing load current		-12	-8	-4	mA
Zero-Current Detection Threshold Hysteresis	IF _H Y				1.5		mA
Zero-Current Detection Delay (Note 2)	IF _{DEL}			280	350	520	ms
Current-Limit Delay (Note 3)	tLIMIT	V _{OUT} shorted to AGND			10	20	μs
Power-Good Threshold	VPG	IVIN - VOUTI, IVIN - VOUTI decreasing		1.95	2.15	2.35	V
Power-Good Hysteresis	PGHYS	% of V _{PG}			5		%

ELECTRICAL SPECIFICATIONS (continued)

 $(V_{IN} = -48V, AGND = DGND = 0, UVLO = open circuit, V_{ENABLE} = +3.3V, and T_A = -40^{\circ}C to +85^{\circ}C, unless otherwise noted. Typical values are at T_A = +25^{\circ}C.)$

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
Power-Not-Good Output Delay (Note 4)	PG _{DEL}	After IV _{IN} - V _{OUT} I increases above (V _{PG} + PG _{HYS})	8	14	20	ms
Thermal Shutdown Temperature (Note 5)	TJ			140		°C
Default UVLO		UVLO open circuit, IV _{IN} I increasing	-30	-28	-26	V
UVLO Hysteresis		UVLO open circuit, percentage of UVLO threshold		12		%
UVLO Comparator Threshold		Referenced to V _{IN} , UVLO open circuit, IV _{IN} I increasing		+1.258		V
UVLO Input Resistance	Ruvlo			95		kΩ

Note 1: Minimum ENABLE low pulse width required to unlatch fault condition.

Note 2: The delay from IOUT falling below the zero-current threshold until FAULT is latched low and VOUT is disabled.


Note 3: The time from an output overcurrent or short-circuit condition until the output goes into current limit.


Note 4: The time from VOUT falling until FAULT is asserted low. FAULT is not latched for Power-Not-Good condition.


Note 5: When the device goes into thermal shutdown, the output is disabled and FAULT is latched low.

Typical Operating Characteristics

 $(V_{IN} = -48V, AGND = DGND = 0, UVLO = open circuit, V_{ENABLE} = +3.3V, R_{LOAD} = 1.8k\Omega, T_A = +25^{\circ}C, unless otherwise noted.)$

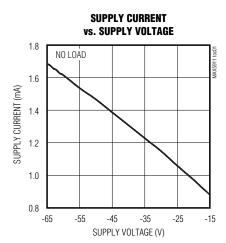


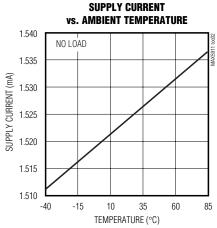

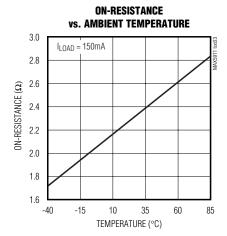


Typical Operating Characteristics (continued)


 $(V_{IN} = -48V, AGND = DGND = 0, UVLO = open circuit, V_{ENABLE} = +3.3V, R_{LOAD} = 1.8k\Omega, T_A = +25^{\circ}C, unless otherwise noted.)$

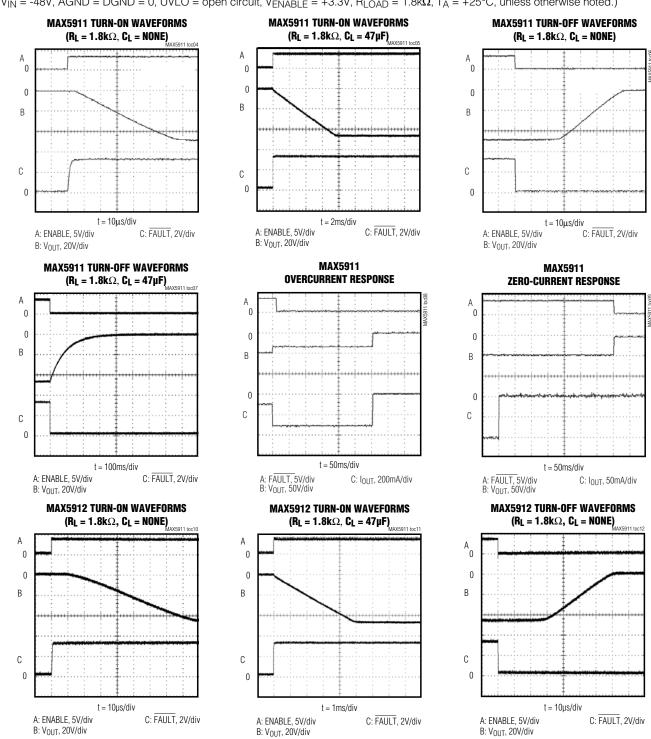


Typical Operating Characteristics (continued)

 $(V_{IN} = -48V, AGND = DGND = 0, UVLO = open circuit, V_{ENABLE} = +3.3V, R_{LOAD} = 1.8k\Omega, T_A = +25^{\circ}C, unless otherwise noted.)$

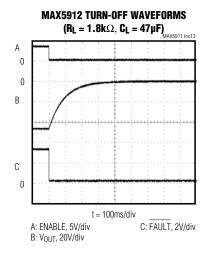

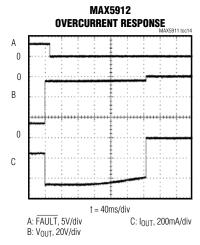

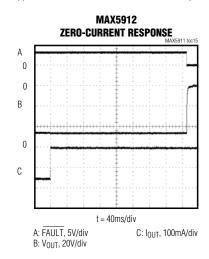

Pin Description

PIN		NAME	FUNCTION		
MAX5911	MAX5912		. 5511611		
1	3	GATE	Gate of the Internal Power MOSFET. Normally leave open circuit. To slow down the output voltage ramp, connect two capacitors, one to V_{IN} and one to V_{OUT} . See <i>GATE Connections</i> for details.		
2	4, 5, 12, 13	VIN	Voltage Input Terminal. Bypass V _{IN} , to AGND with a 0.1µF capacitor to improve noise immunity.		
3	6	FAULT	Fault Logic Output, open-drain. Tie $\overline{\text{FAULT}}$ to the positive logic supply with a 3.3k Ω resistor. Referenced to DGND.		
4	7	DGND	Digital Ground. Ground reference level for the external positive logic, FAULT, and ENABLE. DGND can vary up to ±5V with respect to AGND to accommodate differential ground voltages in large systems.		
5	10	ENABLE	ENABLE Input. Turns on and off the internal FET. ENABLE is a positive logic-level input referenced to DGND. Drive ENABLE high to enable V _{OUT} . Drive ENABLE low to disable V _{OUT} . Pulse ENABLE low to reset the MAX5911/MAX5912 after a latched fault condition occurs.		
6	11	AGND	Analog Ground. Ground reference level for VIN, VOUT, and UVLO.		
7	14	Vout	Voltage Output Terminal		
8	15	UVLO	Undervoltage Lockout Input. Leave UVLO open circuit for default setting of -28V. Alternatively, UVLO can be connected to a resistive divider to set the lockout voltage (see the <i>Changing the Undervoltage Lockout Setting</i> section). The comparator threshold level is +1.258V with respect to V _{IN} .		
_	1, 2, 8, 9, 16	N.C.	No Connection. No internal connection.		

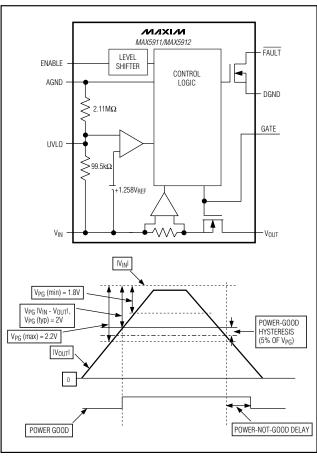


Figure 1. Functional Block Diagram

Detailed Description

Figure 1 shows a functional block diagram. The MAX5911/MAX5912 are hot-swap switches for negative supply rails. The devices allow the safe insertion and removal of circuit cards into live backplanes or ports without causing undue glitches on the negative power-supply rail. They operate over the -16V to -65V voltage range. The devices act as a current regulator, using their on-board FET to limit the amount of current drawn from the backplane to 280mA for MAX5911 and 415mA for MAX5912. If the load current exceeds that current limit, the internal switch behaves like a constant current source.

The MAX5911/MAX5912 monitor the input voltage, the output voltage, the output current, and the die temperature. They assert their FAULT output if they detect an error condition.

A zero-current load disconnect feature activates if the load current drops below 8mA for over 350ms. They also

include an enable input that responds to positive logic, allowing the host system to turn the FET switch on or off. The enable input is also used to reset the devices after an error condition has latched the output FET off.

Normal Operation

Startup

When power is first applied with ENABLE high, or when ENABLE is asserted, the MAX5911/MAX5912 limit the current to the load to 280mA/415mA. If the output voltage has not reached the power-good threshold within the 14ms power-good delay, FAULT is pulled low. FAULT stays low until the output voltage exceeds the power-good threshold, at which time it is released and becomes high impedance.

Undervoltage Lockout Fault

If $|V_{IN}| \leq |UVLO|$, where UVLO is the desired voltage at which the UVLO fault occurs, FAULT is pulled low and the internal FET is turned off. If the condition persists for over 350ms (IFDEL), the FET is latched off. The default UVLO voltage is -28V, but it can be adjusted using an external resistive divider (see the *Changing the Undervoltage Lockout Setting* section). Once the FET is latched off, ENABLE must be pulsed low then brought back high to release FAULT and enable VouT.

Thermal Shutdown Fault

The MAX5911/MAX5912 monitor their internal die temperatures. If the temperature of the die exceeds +140°C, FAULT is pulled low and the internal FET is latched off. ENABLE must be pulsed low and then brought high again to reset the FET latch, and release FAULT, provided the die is below the thermal shutdown temperature by 5°C (typ).

Power-Not-Good Fault

If IVIN - VOUTI is more than the power-good threshold for over 14ms, FAULT is pulled low. When the output voltage exceeds the power-good threshold, FAULT is released. FAULT output is not latched during a power-not-good fault.

Zero-Current Detection

If the load current drops below 8mA for over 350ms, FAULT is pulled low and the FET is latched off. ENABLE must be pulsed low and then brought high again to release FAULT and enable VOUT.

Applications Information

Chosing A Device

The MAX5911 will output up to 280mA (typ) and the MAX5912 up to 415mA (typ). In applications where high heat is expected, use the MAX5912 for its superior

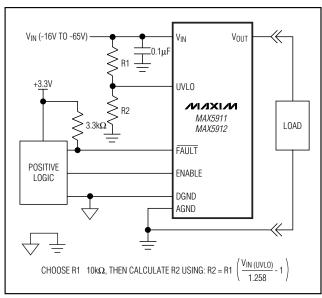


Figure 2. UVLO Voltage Set by an External Resistive Divider

heat dissipation properties, and always solder all of its V_{IN} pins to a large section of circuit board copper.

Logic Control

The enable input responds to +3.3V logic signals and will force the internal FET off if it is pulled low. This feature allows the host to disconnect the load from the power bus if required. Additionally, all fault conditions that latch the internal FET off must be cleared by pulsing ENABLE low for at least 200ns, then reasserting ENABLE before normal operation can resume.

GATE Connections

GATE connects to the gate of the internal N-channel power MOSFET. Normally this pin should be left open circuit. To slow down the voltage ramp at VOUT, connect capacitors from GATE to VOUT and VIN. Size the capacitors so that the GATE to VIN capacitor is ten times the size of the GATE to VOUT capacitor. This technique to slow down the output voltage ramp will also cause the output discharge time to increase if the capacitor values exceed about 1nF. Additionally, this technique will cause the time delay for a power-not-good fault to increase.

FAULT Output

The FAULT output is open-drain and is pulled low if the MAX5911/MAX5912 detect an undervoltage fault, a thermal fault, a power-not-good fault, or a zero-current fault. See the *Normal Operation* section for specific details of fault operation. Connect FAULT to the logic supply with a pullup resistor; $3.3 \text{k}\Omega$ is sufficient in most cases.

Changing the Undervoltage Lockout Setting

The UVLO value defaults to -28V if the UVLO pin is left open circuit. The lockout voltage can be changed with a resistive divider. Connect the divider from V_{IN} to AGND, and connect the center node of the divider to the UVLO pin. Figure 2 shows an example circuit. Use $R1 \le 10 k\Omega$, then calculate R2 using:

$$R2 = R1 \times \left(\frac{V_{IN(UVLO)}}{1.258} - 1 \right)$$


where VIN(UVLO) is the desired lockout voltage.

Chip Information

TRANSISTOR COUNT: 1021

PROCESS: BICMOS

Package Information

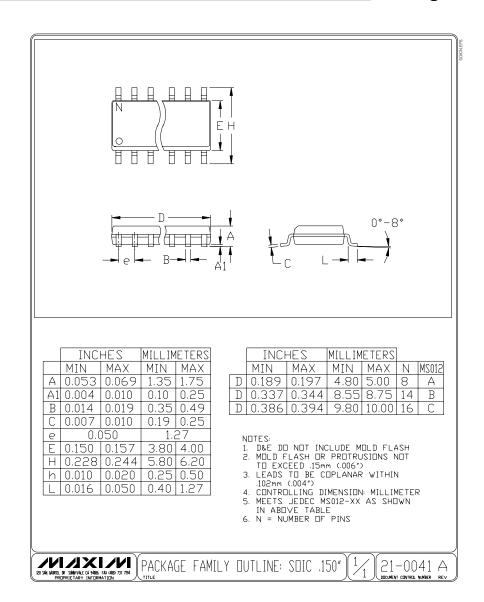

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

8 ______Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 408-737-7600