

How to use R&S®SFU Broadcast Test System drivers

Driver Documentation

Products:

- | R&S®SFU Broadcast Test System

How to use LabVIEW, LabWindows/CVI
and VXPlug&Play drivers for VEE, C++,
C#, Visual Basic, Visual Basic.NET etc.

Table of Contents

1	LabVIEW	3
1.1	Getting Started	3
1.2	LabVIEW settings.....	3
1.2.1	LabVIEW 8 and later	3
1.2.2	LabVIEW 7	4
1.3	Additional Help.....	4
1.4	LabVIEW 7.1 driver	4
1.5	LabVIEW 8.2 and LabVIEW 8.5 driver	4
2	LabWindows/CVI	5
2.1	CVI Version.....	5
2.2	How to use.....	5
2.3	Additional Help.....	5
3	VXIplug&play Instrument Driver for VEE, C++, C#, Visual Basic, Visual Basic .NET etc.	6
3.1	C#	6
3.2	Visual Basic .NET	6
3.3	VEE Version.....	6
3.4	Additional Help.....	6
3.5	Additional Information	6
4	Linux	7
5	Remote control via LAN	8
5.1	Instrument Name and IP Address	8
5.2	To find the Instrument Name and IP Address on the Instrument.....	8
5.3	To find the Instrument Name and IP Address with a keyboard connected to the instrument	8
5.4	Initialize.....	9

1 LabVIEW

1.1 Getting Started

Unpack content of archive into LabVIEW root folder (i.e. \Program Files\LabVIEW 8.0). The driver will then be directly accessible from LabVIEW Instrument Driver function palette menu.

Attribute Browser Express VI is accessible from Express VI User Libraries palette menu.


1.2 LabVIEW settings

For best results please turn off 'Synchronize with directory' feature on Instrument Drivers palette before installing any Rohde & Schwarz LabVIEW driver. If this feature is turned on, it overwrites driver's palette files with its own.

1.2.1 LabVIEW 8 and later

Turn off "Synchronize with directory" feature :


Tools => Advanced => Edit palette set. Then find "Instrument I/O" palette, right click on it and clear checkbox besides Synchronize with directory in context menu. Save the changes.

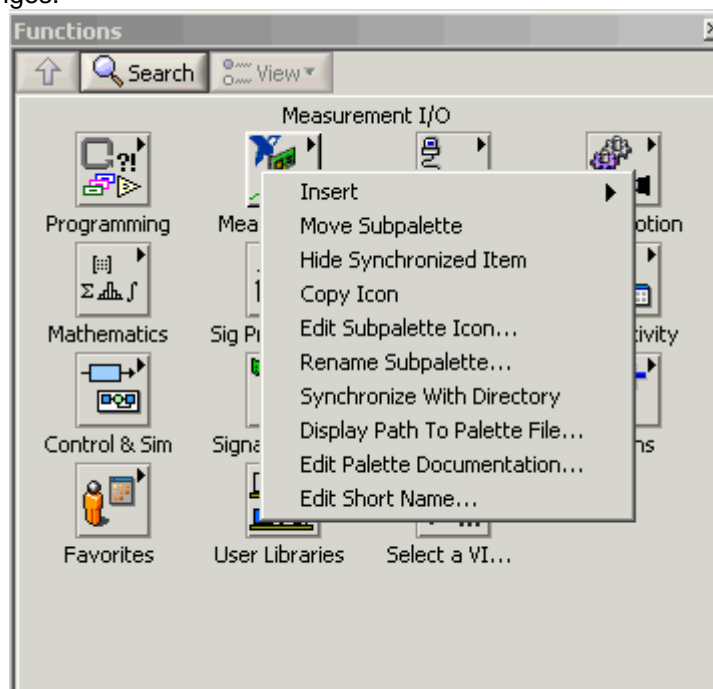

1.2.2 LabVIEW 7

Turn off "Synchronize with directory" feature :

Tools->Advanced->Edit palette views. Then find "Instrument I/O" palette => Instr Drivers right click on it and clear checkbox besides Synchronize with directory in context menu. Save the changes.

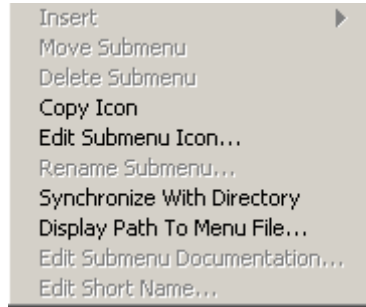

1.3 Additional Help

In addition, the instrument driver documentation is included in compressed HTML format (Windows CHM help file) stored together with the LabVIEW driver sources. Each VI's help is linked to the section in the "CHM" file that describes all the features of the VI.

An additional help topic can be accessed directly by pressing "Click here for more help" in the Context Help

1.4 LabVIEW 7.1 driver

Please use the LabVIEW 7 driver.

1.5 LabVIEW 8.2 and LabVIEW 8.5 driver

Please use the LabVIEW 8 driver.

2 LabWindows/CVI

2.1 CVI Version

Use National Instruments LabWindows/CVI 5.5 or later.

2.2 How to use

Add also following files to your project:

- rsidr_core.c
- rsidr_core.h
- rssf_u_attributes.c
- rssf_u_attributes.h
- rssf_u_utility.c
- rssf_u_utility.h

2.3 Additional Help

The LabWindows/CVI instrument driver consists of a ZIP archive containing the driver sources. In addition, the instrument driver documentation is also included in compressed HTML format (Windows CHM help file) and stored together with the driver sources.

3 VXIplug&play Instrument Driver for VEE, C++, C#, Visual Basic, Visual Basic .NET etc.

3.1 C#

A wrapper is necessary to enable a direct access to the driver DLL.

The rssfuc.cs wrapper for C# is automatically installed in the ~\VXIpnP\WinNT\include directory.

3.2 Visual Basic .NET

A wrapper is necessary to enable a direct access to the driver DLL.

The rssfuvb wrapper for .NET is automatically installed in the ~\VXIpnP\WinNT\include directory.

See the Visual Basic .NET examples.

3.3 VEE Version

Use VEE 6 or later.

3.4 Additional Help

In addition, the instrument driver documentation is also included in compressed HTML format (Windows CHM help file) and stored together with the driver sources in the ~\VXIpnP\WinNT\rssfuc directory.

3.5 Additional Information

For more information regarding the VXIpnP instrument drivers, please read the readme.txt file that comes with each driver.

4 Linux

Drivers for Linux are available - Please contact Rohde & Schwarz Customer Support Center

5 Remote control via LAN


5.1 Instrument Name and IP Address

In order to connect the instrument using LAN/VXI-11 use the Instrument Name or the IP Address.

The R&S SFU is preconfigured for networks using DHCP (Dynamic Host Configuration Protocol). In these networks, an available IP address is automatically assigned to the R&S SFU. In this case the SFU is identified via an unambiguous computer name in the network.

5.2 To find the Instrument Name and IP Address on the Instrument

Manually: Press SETUP => COMMUNICATION

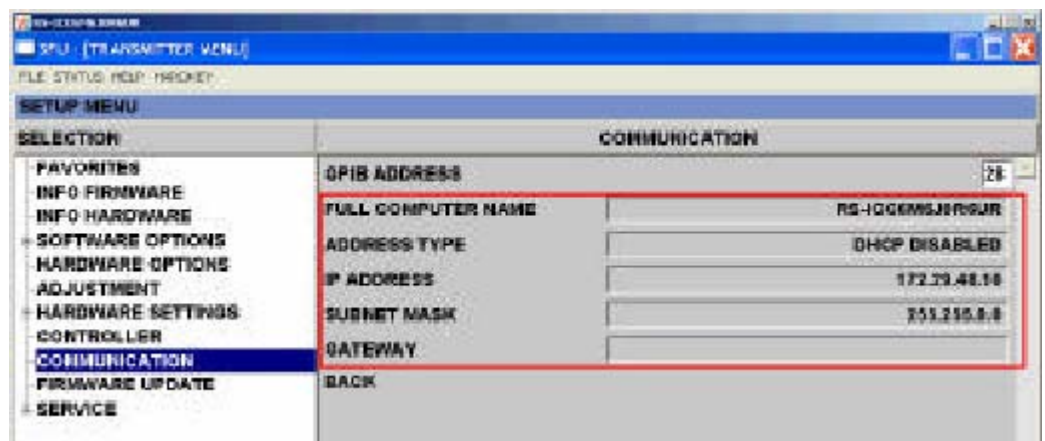

5.3 To find the Instrument Name and IP Address with a keyboard connected to the instrument

Instrument Name: (Windows) Start => Settings => Control Panel => System => Computer Name

IP Address:

(Windows) Start => Settings => Network Connections => Local Area Connection => Support

5.4 Initialize

Use the Instrument Name or the IP Address as resourceName in the rssf_u_init function.

Example:

If the Instrument Name is RSSFU12345 the resourceName is TCPIP::RSSFU12345::INSTR

If the IP Address is 192.168.1.33 the resourceName is TCPIP::192.168.1.33::INSTR

About Rohde & Schwarz

Rohde & Schwarz is an independent group of companies specializing in electronics. It is a leading supplier of solutions in the fields of test and measurement, broadcasting, radiomonitoring and radiolocation, as well as secure communications. Established 75 years ago, Rohde & Schwarz has a global presence and a dedicated service network in over 70 countries. Company headquarters are in Munich, Germany.

Regional contact

Europe, Africa, Middle East

+49 1805 12 42 42* or +49 89 4129 137 74

customersupport@rohde-schwarz.com

North America

1-888-TEST-RSA (1-888-837-8772)

customer.support@rsa.rohde-schwarz.com

Latin America

+1-410-910-7988

customersupport.la@rohde-schwarz.com

Asia/Pacific

+65 65 13 04 88

customersupport.asia@rohde-schwarz.com

Certified Quality System
ISO 9001
DQS REG. NO 1954 QM

Certified Environmental System
ISO 14001
DQS REG. NO 1954 UM

This application note and the supplied programs may only be used subject to the conditions of use set forth in the download area of the Rohde & Schwarz website

Rohde & Schwarz GmbH & Co. KG

Mühlendorfstraße 15 | D - 81671 München

Phone + 49 89 4129 - 0 | Fax + 49 89 4129 - 13777

www.rohde-schwarz.com