

TEAC

SERVICE MANUAL


CE 3703

CT-M1401


COLOUR TELEVISION

PWSW ↔ MV2020 (V1623356)

REMOTE SENSOR: 690200101

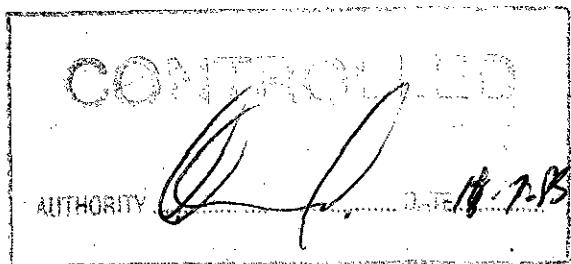

OPERATING CONTROL

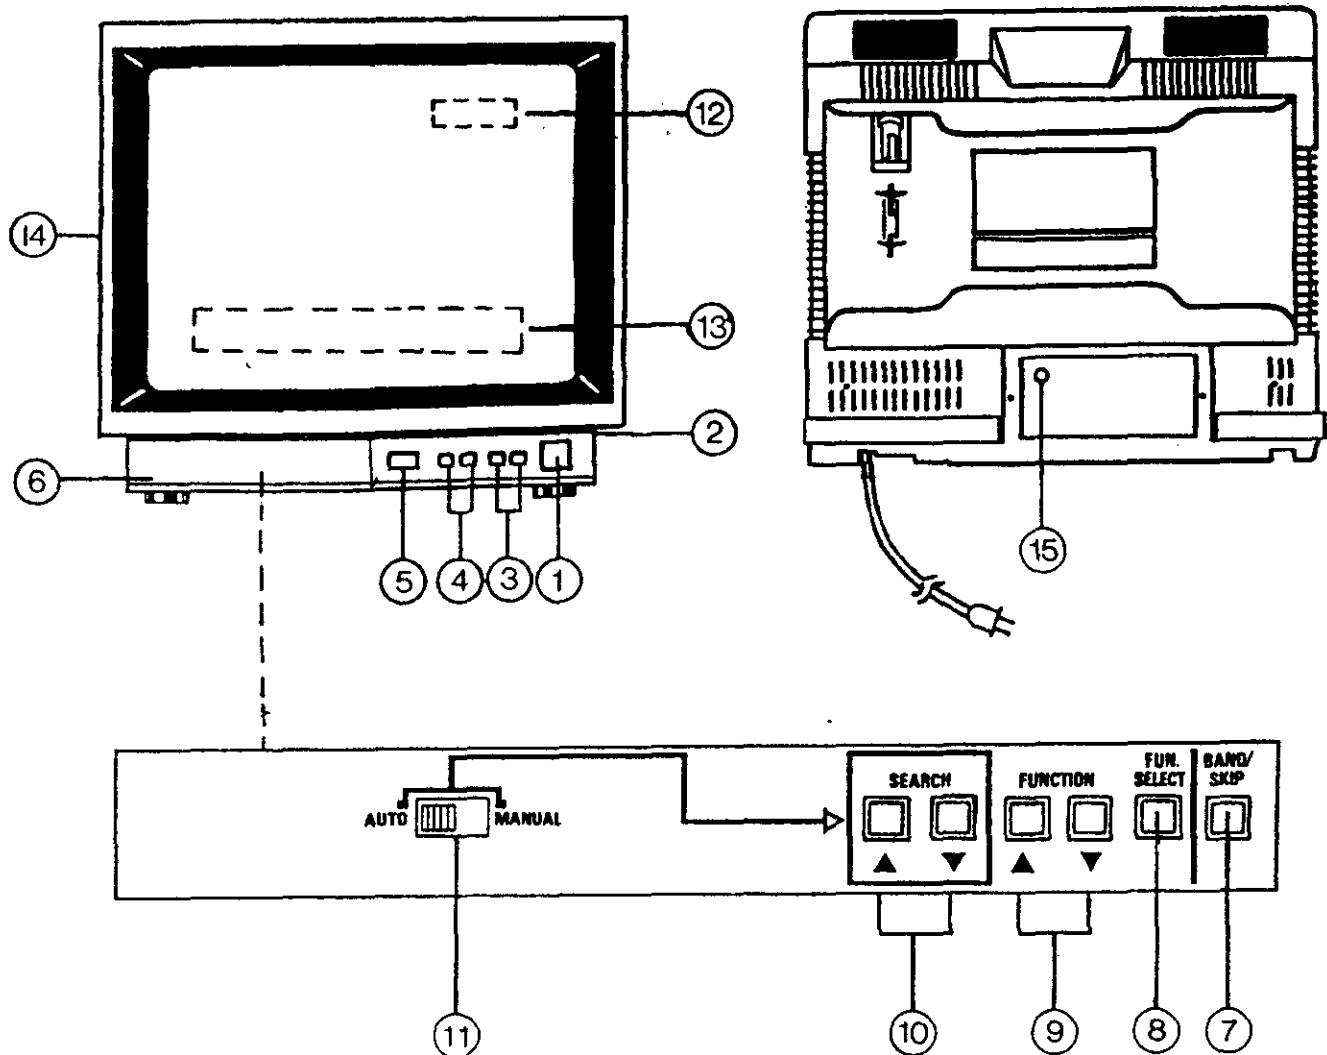

1. Main Power Switch
2. Power On Indicator (RED)
3. Volume Control Up/Down
4. Programme Up/Down
5. Infrared Sensor
6. Tuning Compartment Door
7. Band/ Skip
8. Function Select
(Colour/ Contrast/ Brightness)
9. Function Up/Down
10. Search Up/Down
11. Manual/Auto Search Selector
12. Programme Position or Tuning Indication
13. Function Indication
(Colour/ Contrast/ Brightness)
14. Speaker
15. 75 Ohm Aerial Socket

SAFETY INSTRUCTIONS

WARNING : BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION," "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" DESCRIBED BELOW.

X-RAY RADIATION PRECAUTION

1. Excessive high voltage can produce potentially hazardous X-RAY RADIATION. To avoid such hazards, the high voltage must not exceed the specified limit. The nominal value of the high voltage of this receiver is 22 kv at zero beam current (minimum brightness) under 220V/240V AC power source. The high voltage must not, under any circumstances, exceed 30 kv. Each time a receiver requires servicing, the high voltage should be checked following the **HIGH VOLTAGE CHECK** procedure in this manual. It is recommended the reading of the high voltage be recorded as a part of the service record. It is important to use an accurate and reliable high voltage meter.
2. The primary source of X-RAY RADIATION in this TV receiver is the picture tube. For continued X-RAY RADIATION protection, the replacement tube must be exactly the same type tube as specified in the parts list.
3. Some parts in this receiver have special safety-related characteristics for X-RAY RADIATION protection. For continued safety, parts replacement should be undertaken only after referring to the **PRODUCT SAFETY NOTICE** below.

SAFETY PRECAUTION

1. Potentials as high as 22K volts are present when this receiver is operating. Operation of the receiver outside the cabinet or with cabinet back removed involves a shock hazard from the receiver.
 - a) Servicing should not be attempted by anyone who is not thoroughly familiar with the precautions necessary when working on high-voltage equipment.
 - b) Always discharge the picture tube anode to the receiver chassis to keep off the shock hazard before removing the anode cap.
 - c) Perfectly discharge the high potential of the picture tube before handling the tube. The picture tube is highly evacuated and if broken, glass fragments will be violently expelled.
2. If any Fuse in this TV receiver is blown, replace it with the FUSE specified in the chassis parts list.
3. The receiver is designed to operate with 220V/240V 50Hz AC mains.
4. When replacing a high wattage resistor (oxide metal film resistor) in circuit board, keep the resistor 10mm away from circuit board.
5. Keep wires away from high voltage or high temperature components.

PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These characteristics are often passed unnoticed by a visual inspection and the X-RAY RADIATION protection afforded by them cannot necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this manual and its supplements, electrical components having such features are identified by shading on the schematic diagram and the parts list.

Before replacing any of these components, read the parts list in this manual carefully. The use of substitute replacement parts which do not have the same safety characteristics as specified in the parts list may create X-RAY RADIATION.

GENERAL ADJUSTMENT INSTRUCTIONS

- * This receiver is transistorized and special care should be taken when servicing. Read the following matters that demand special attention before attempting adjustment.
- * Adjustment requires an exact procedure and should be undertaken only when necessary.
- * An isolation transformer should be used during any dynamic service to avoid possible shock hazard.
- * The test equipment specified or its equivalent is required to perform the alignment properly. Use of equipment which does not meet these requirements may result in improper alignment.
- * Correct matching of the equipment is essential. Failure to use proper matching will result in responses which can not represent the true operation of the receiver.
- * Use of excessive signal from a sweep generator can cause overloading of receiver circuit. Overloading should be avoided to obtain a true response curve. Insertion of markers from the marker generator should not cause distortion of the response.
- * The AC power line voltage should be kept accurately during alignment.
- * Do not attempt to connect or disconnect any wire while the receiver is in operation. Make sure the power cord is disconnected before replacing parts in the receiver.
- * Unless otherwise noted, do not perform any adjustments until the receiver has been turned on for at least 10 minutes.

TEST EQUIPMENT

EQUIPMENT	SPEC.
HIGH IMPEDANCE VOLTMETER OSCILLOSCOPE	Having an impedance of at least 100 KV Volt sensitivity: over 10mV input impedance: over 1M ohm, below 10PF
SWEEP/MARKER GENERATOR	Output adjustable to at least 0.1 volts rms
COLOUR BAR GENERATOR	With BAR/DOT/CROSS HATCH functions
POWER SUPPLY	Source such as a battery or a well regulated and isolated DC bias supply.
AC/DC VOLTMETER	Sensible
ISOLATION TRANSFORMER	Voltage adjustable type having capacity of more than 150 watts.
PROBE	Low-capacitance.

INSTALLATION AND SERVICE ADJUSTMENTS


GENERAL :

In the majority of cases, a colour television receiver will need only slight touch-up adjustment upon installation. Check the basic characteristics such as height, vertical sync., and focus. Observe the picture for good black and white details without objectionable colour shading. If colour shading is evident, demagnetize the receiver.

If colour shading still persists, perform purity and convergence adjustments. This should be all that is necessary to achieve optimum receiver performance.

CABINET BACK REMOVAL


1. Disconnect the antenna leads from the antenna terminals.
2. Remove 2 screws (A) securing the antenna terminal board to the Cabinet Back.
3. Remove 4 screws (B) securing the Cabinet Back to the Cabinet Front and detach the cabinet back.

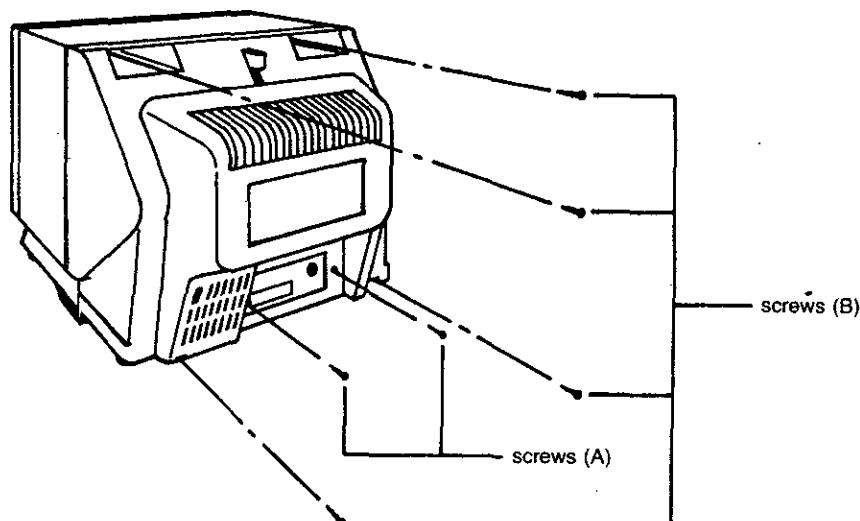

CHASSIS REMOVAL

Following the steps under Cabinet Back Removal, proceed as follows:-

1. Unplug the CRT grounding wire socket connected to the CRT Socket Board.
2. Detach the picture tube anode cap.
3. Detach the CRT Socket (CRT Socket Board)
4. Take out the chassis from the chassis holder

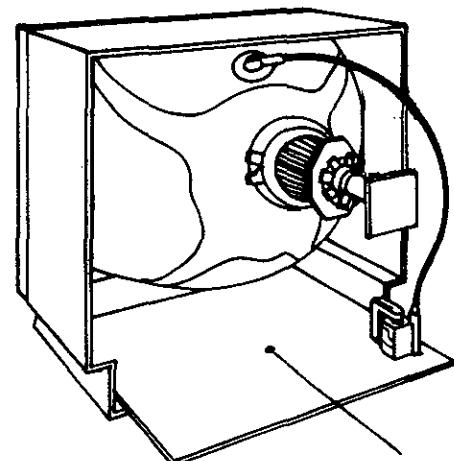


Chassis holder

PICTURE TUBE REMOVAL

Following the steps under CHASSIS REMOVAL proceed as follows:

1. Place the cabinet with the front down on a rolled pad or some suitable cushion place near the top edge of the front panel.
2. Remove 4 nuts securing the picture tube to the cabinet, and detach the CRT with the degaussing coil, then grasp the face plate edge of the picture tube with both hands and take out the picture tube.
3. Detach the CRT grounding wire which is attached to the picture tube lugs with spring.

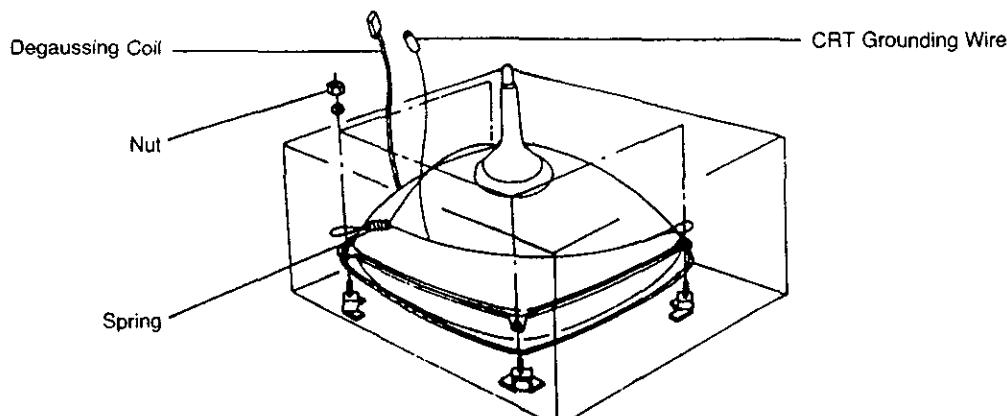


NO.	ADJUSTMENT	PREPARATION	ADJUSTMENT AND CHECK	REMARKS
7.	WHITE BALANCE ADJUSTMENT	<p>1. Tune in a mono-chrome channel and warm up the set for 15 minutes.</p> <p>2. Set the R.G.B. cut off controls VR402, VR404 and VR502 about 1/4 position from maximum value and the G.B. drive controls (VR401, VR403) at centre position.</p> <p>3. Rotate the screen control fully counter clockwise.</p> <p>4. Set the switch S201 to 'service' position.</p>	<p>5. Rotate the screen control gradually clockwise until the first horizontal line appears on the screen.</p> <p>6. If the first horizontal line is blue, adjust VR402 and VR405 to increase the red and green component level to get a white horizontal line.</p> <p>7. Set S201 to 'Normal' position. Set the luminance and contrast controls at normal position. Adjust VR401, VR403 to maintain a good white balance at the brightness part of the screen.</p> <p>8. Turn the brightness and contrast controls to maximum and minimum. Observe the screen white balance, if it is not proper in high brightness condition, adjust R.G.B. cut off controls or G.B. drive controls respectively, in order to maintain a good white balance in both low and high luminance conditions.</p>	Refer to "Chassis Top View"
8.	PAL MATRIX ADJUSTMENT	<p>1. Tune in the colour programme of Philips pattern.</p> <p>2. Set the colour control to obtain the proper colour.</p> <p>3. If the PAL matrix adjustment is incorrect the Venetian Blind wound appear in the colour bars area. This case needs the adjustment.</p>	<p>4. Adjust DL Phase ADJ. coil (L201) to minimize the Venetian Blind.</p> <p>5. Next adjust 1 H-DL ADJ. (VR201) to minimize the Blind.</p> <p>6. If the Venetian Blind still remains, adjust 1 H-DL Phase ADJ. coil to minimize the Blind again.</p> <p>7. Repeat the item 5 and 6 procedures, adjust the VR and coil until the Blind does not appear.</p>	

WARNING : BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 2 OF THIS MANUAL.

GENERAL ADJUSTMENTS

NO.	ADJUSTMENT	PREPARATION	ADJUSTMENT AND CHECK	REMARKS
1.	B + 110V POWER ADJUSTMENT	1. Tune in an air signal. Adjust the BRIGHTNESS and CONTRAST controls for normal picture 2. Check that AC power line voltage is normal. (AC 220/240 volts 50Hz) 3. Connect a electronic voltmeter across C518 on the Main Board.	4. Adjust the B + ADJ (VR501) for + 110 Volt reading.	CAUTION : B + voltage closely relates to the high voltage. To prevent hazardous X-Ray RADIATION the B + voltage must properly adjusted to + 110 volts.
2.	HEIGHT ADJUSTMENT	1. Tune in an active Channel.	2. The HEIGHT control (VR202) changes the size of the picture or pattern. Make final adjustment to overscan the mask about 10% vertically.	Refer to "Chassis Top View"
3.	HORIZONTAL PHASE ADJUSTMENT	1. Tune in the colour-programme of Philips pattern.	2. Adjust VR203 for the horizontal phase of the picture.	Refer to "Chassis Top View"
4.	FOCUS ADJUSTMENT	1. Tune in an active channel.	2. Adjust the FOCUS control for well defined scanning lines on the picture screen.	Refer to "Chassis Top View"
5.	HIGH VOLTAGE CHECK	1. Connect an accurate high voltage meter to the second anode of the picture tube. 2. Turn on the receiver. 3. Set the BRIGHTNESS and CONTRAST controls to minimum (zero beam current)	4. Adjust the BRIGHTNESS control to both extremes to be sure the high voltage does not exceed the limit under any conditions. <i>Note :</i> High voltage should be measured below 26KV.	There is no HIGH VOLTAGE on this chassis.
6.	AGC DELAY ADJUSTMENT	1. Tune the strongest station in your area.	2. Adjust the AGC DELAY control (VR102) fully clockwise, then turn it counter clockwise until snow noise just disappears from the screen.	


NO.	ADJUSTMENT	PREPARATION	ADJUSTMENT AND CHECK	REMARK
11.	CENTER CONVERGENCE ADJUSTMENT	1. Receive crosshatch pattern with a colour bar signal generator. 2. Adjust the BRIGHTNESS and CONTRAST controls for well defined pattern.	1. Adjust two tabs of the 4 pole Magnets to change the angle between them (See fig. 2) and obtain a blue vertical line in the center area of the picture screen (See fig. 3)	

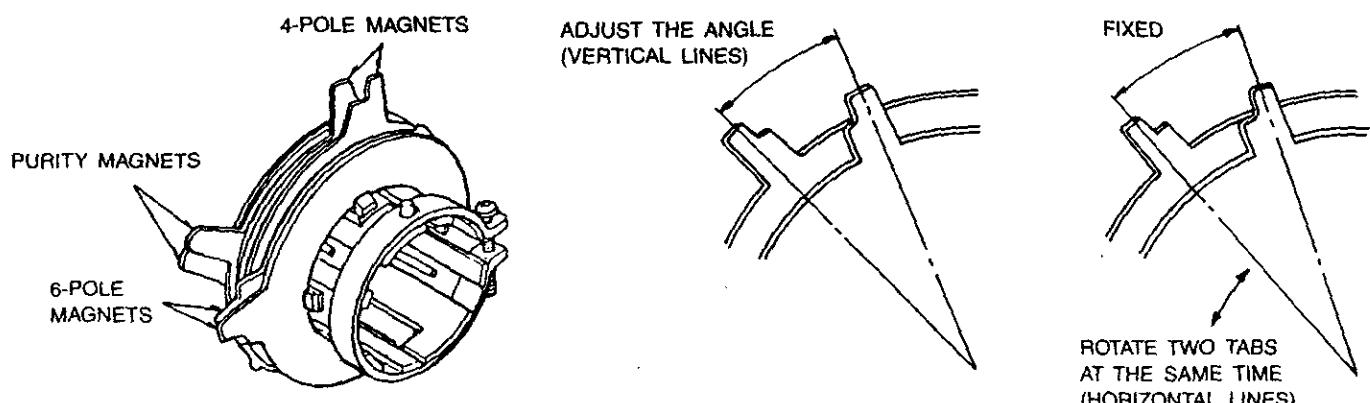


CONVERGENCE MAGNET ASSEMBLY

Fig. 2


ADJUSTMENT OF MAGNETS

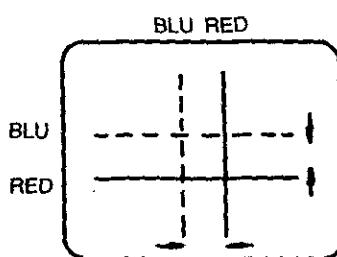


4-Pole Magnets Movement

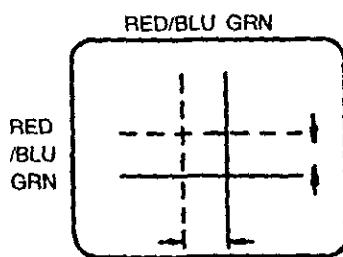

6-Pole Magnets Movement

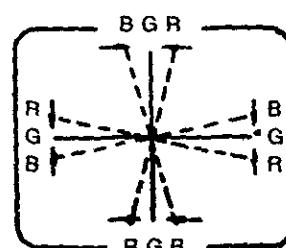

Incline the Yoke up (or down)

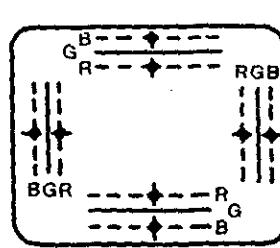

Incline the Yoke right (or left)

Center Convergence by Convergence Magnets

Circumference Convergence by DEF Yoke

Fig. 3 Dot Movement Pattern

NO.	ADJUSTMENT	PREPARATION	ADJUSTMENT AND CHECK	REMARK
9.	ON-SCREEN DISPLAY ALIGNMENT	1. Receive a test pattern.	2. Press the "Fun. Select" button.	
10.	COLOUR PURITY ADJUSTMENT	1. Demagnetize the picture tube and cabinet using an external degaussing coil. 2. Turn the CONTRAST and BRIGHTNESS controls to maximum. 3. Adjust RED and BLUE Bias controls (VR401) & (VR405) to provide only a green raster. Advance the GREEN Biascontrol (VR403) if necessary. 4. Loosen the clamp screw holding the yoke, and slide the yoke backward to provide vertical green belt (zone) in the picture screen. 5. Remove the Rubber wedges	1. Rotate and spread the tabs of the purity magnet (See fig. 1) around the neck of the picture tube until the green belt is in center of the screen. At the same time, center the raster vertically. 2. Move the yoke slowly forward or backward until a uniform green screen is obtained. Tighten the clamp screw of the yoke temporarily. 3. Check the purity of the red and blue rasters by adjusting the BIAS controls. 4. Obtain a white raster, referring to " WHITE " Balance adjustment.. 5. Proceed with convergence adjustment.	

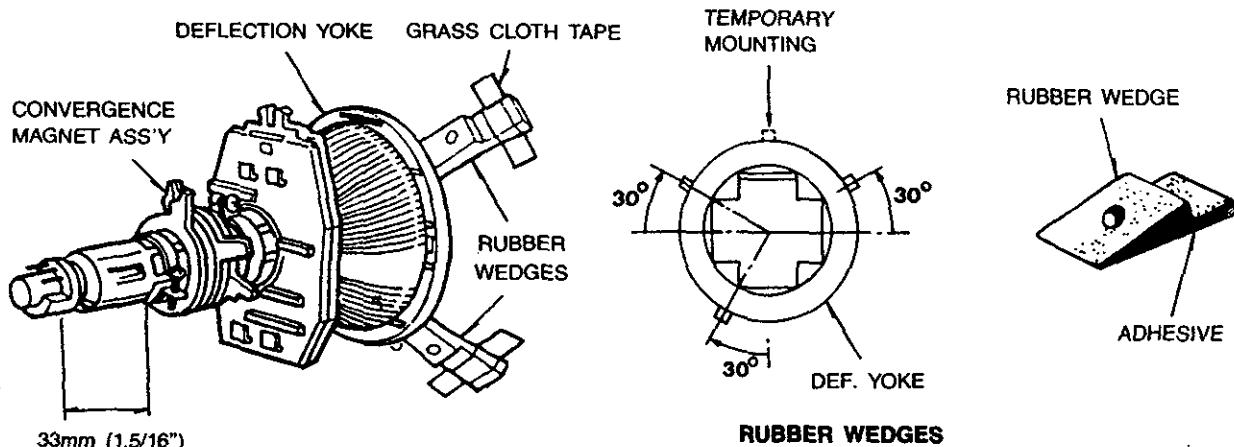



Fig. 1

RUBBER WEDGES LOCATION


NO.	ADJUSTMENT	PREPARATION	ADJUSTMENT AND CHECK	REMARK
13.	PICTURE IF AND AFC ADJUSTMENT	1. Apply 16.5VDC voltage across C318. 2. Connect Tuner pins BM and BU together. tank coil L107 so that Tuner 3. Apply 38.9MHz, 15mVrms CW to Tuner TP through 1Kohm resistor in series with 0.001uf cap. 6. Repeat Step 5 if Tuner AGC saturation occurs. 7. Now connect a 10 Kohm resistor across C139. 9. Remove the 10 Kohm resistor.	4. Adjust VR102 so that Tuner AGC is about 4 VDC. 5. Adjust the video detector AGC is minimum. 8. Adjust VR101 so that the D.C. voltage of terminal #24 (AFT output) will be 4.5V. 10. Adjust the AFT tank coil L106 so that the DC voltage of terminal #24 will be 4.5V.	Use 38.9 MHz for B/G system and 38.0 MHz for I/D system.
14.	SIF ADJUSTMENT	1. Apply 16.5VDC voltage across C318. 2. Apply 5.5 MHz, 100mVrms, 400Hz FM 50KHz Dev. signal to pin 16 of IC102 through a 0.001uF capacitor.	3. Adjust SIF tank coil L112 so that the 400Hz output of terminal #11 will be the maximum of the lowest T.H.D.	
15.	IF TRAPS ADJUSTMENT (FOR FTZ ONLY)	1. Apply 16.5VDC voltage across C318. 2. A sweep signal is applied to Tuner TP through 1K resistor in series with 0.001uF capacitor. 3. Connect Tuner pins BM and BU together. 4. Connect a suitable detector across R137.	5. Adjust L102 and L101 for maximum attenuation of 40.16MHz and 31.9 MHz respectively. 6. Adjust Tuner output coil for maximum value of 37.9MHz.	
16.	I/D SIF ADJUSTMENT	1. Apply 16.5VDC voltage across C318. 2. Apply a 6.0MHz, 100mVrms 400HZ FM 50KHZ Dev. signal to the intersertion point of C142 and R121. 3. Connect an oscilloscope to pin 16 of IC102.	4. Adjust L114 for maxminum amplitude signal with	

NO.	ADJUSTMENT	PREPARATION	ADJUSTMENT AND CHECK	REMARK
12.	CIRCUMFEER- ENCE CONVERGENCE ADJUSTMENT	<p>1. Loosen the clamping screw of deflection yoke to allow the yoke to tilt.</p> <p>2. Place a wedge as shown in figure 8 temporarily. (Do not remove cover paper on adhesive part of the wedge.)</p>	<p>1. Tilt front of the deflection yoke up or down to obtain better convergence in circumference. (See fig. 2) Push the mounted wedge into the space between picture tube and the yoke to hold the yoke temporarily.</p> <p>2. Place other wedge into bottom space and remove the cover paper to stick.</p> <p>3. Tilt front of the yoke right or left to obtain better convergence in circumference. (See figure 3).</p> <p>4. Hold the yoke position and put another wedge in either upper space. Remove cover paper and stick the wedge on picture tube to hold the yoke.</p> <p>5. Detach the temporarily mounted wedge and put it in another upper space. Stick it on picture tube to fix the yoke. After placing three wedges, recheck overall convergence.</p> <p>6. Tighten the screw firmly to hold the yoke tightly in place. Stick 3 adhesive tapes on wedges as shown in figure 1.</p>	


BOTTOM VIEW OF CRT BOARD

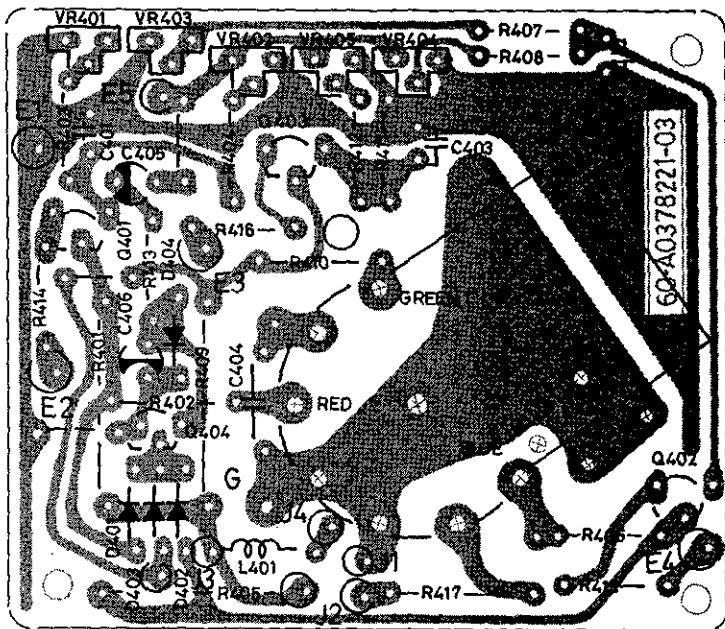


TOP VIEW OF CRT BOARD

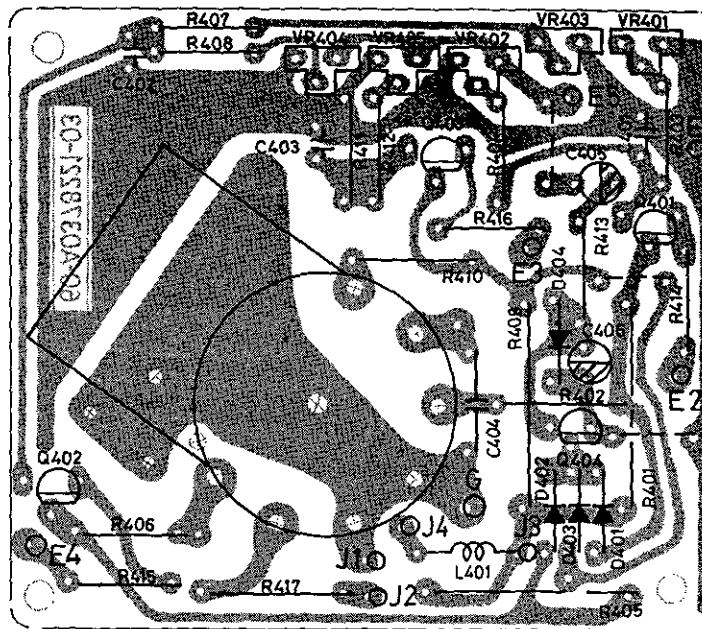


TRANSMITTER BOARD

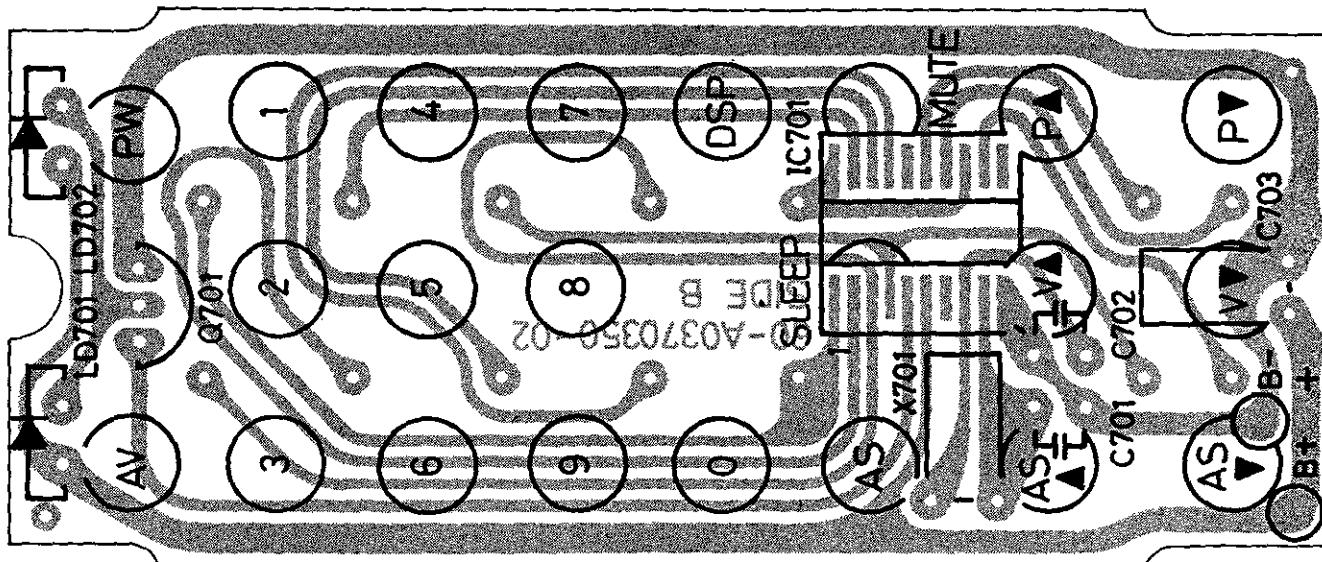


BOTTOM VIEW OF LED DISPLAY

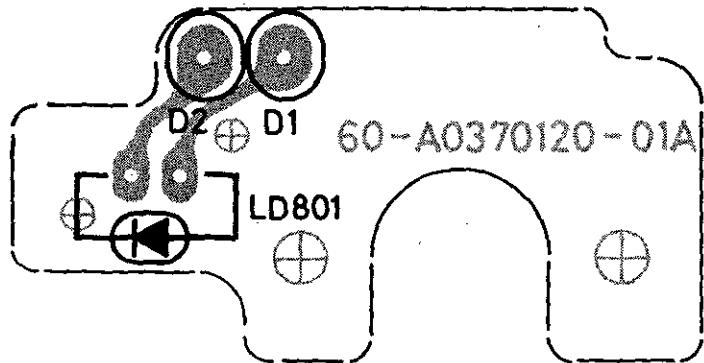


TOP VIEW OF LED DISPLAY

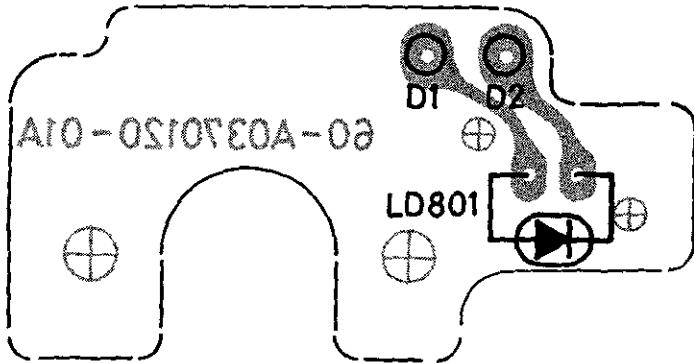


SCHEMATIC DIAGRAM

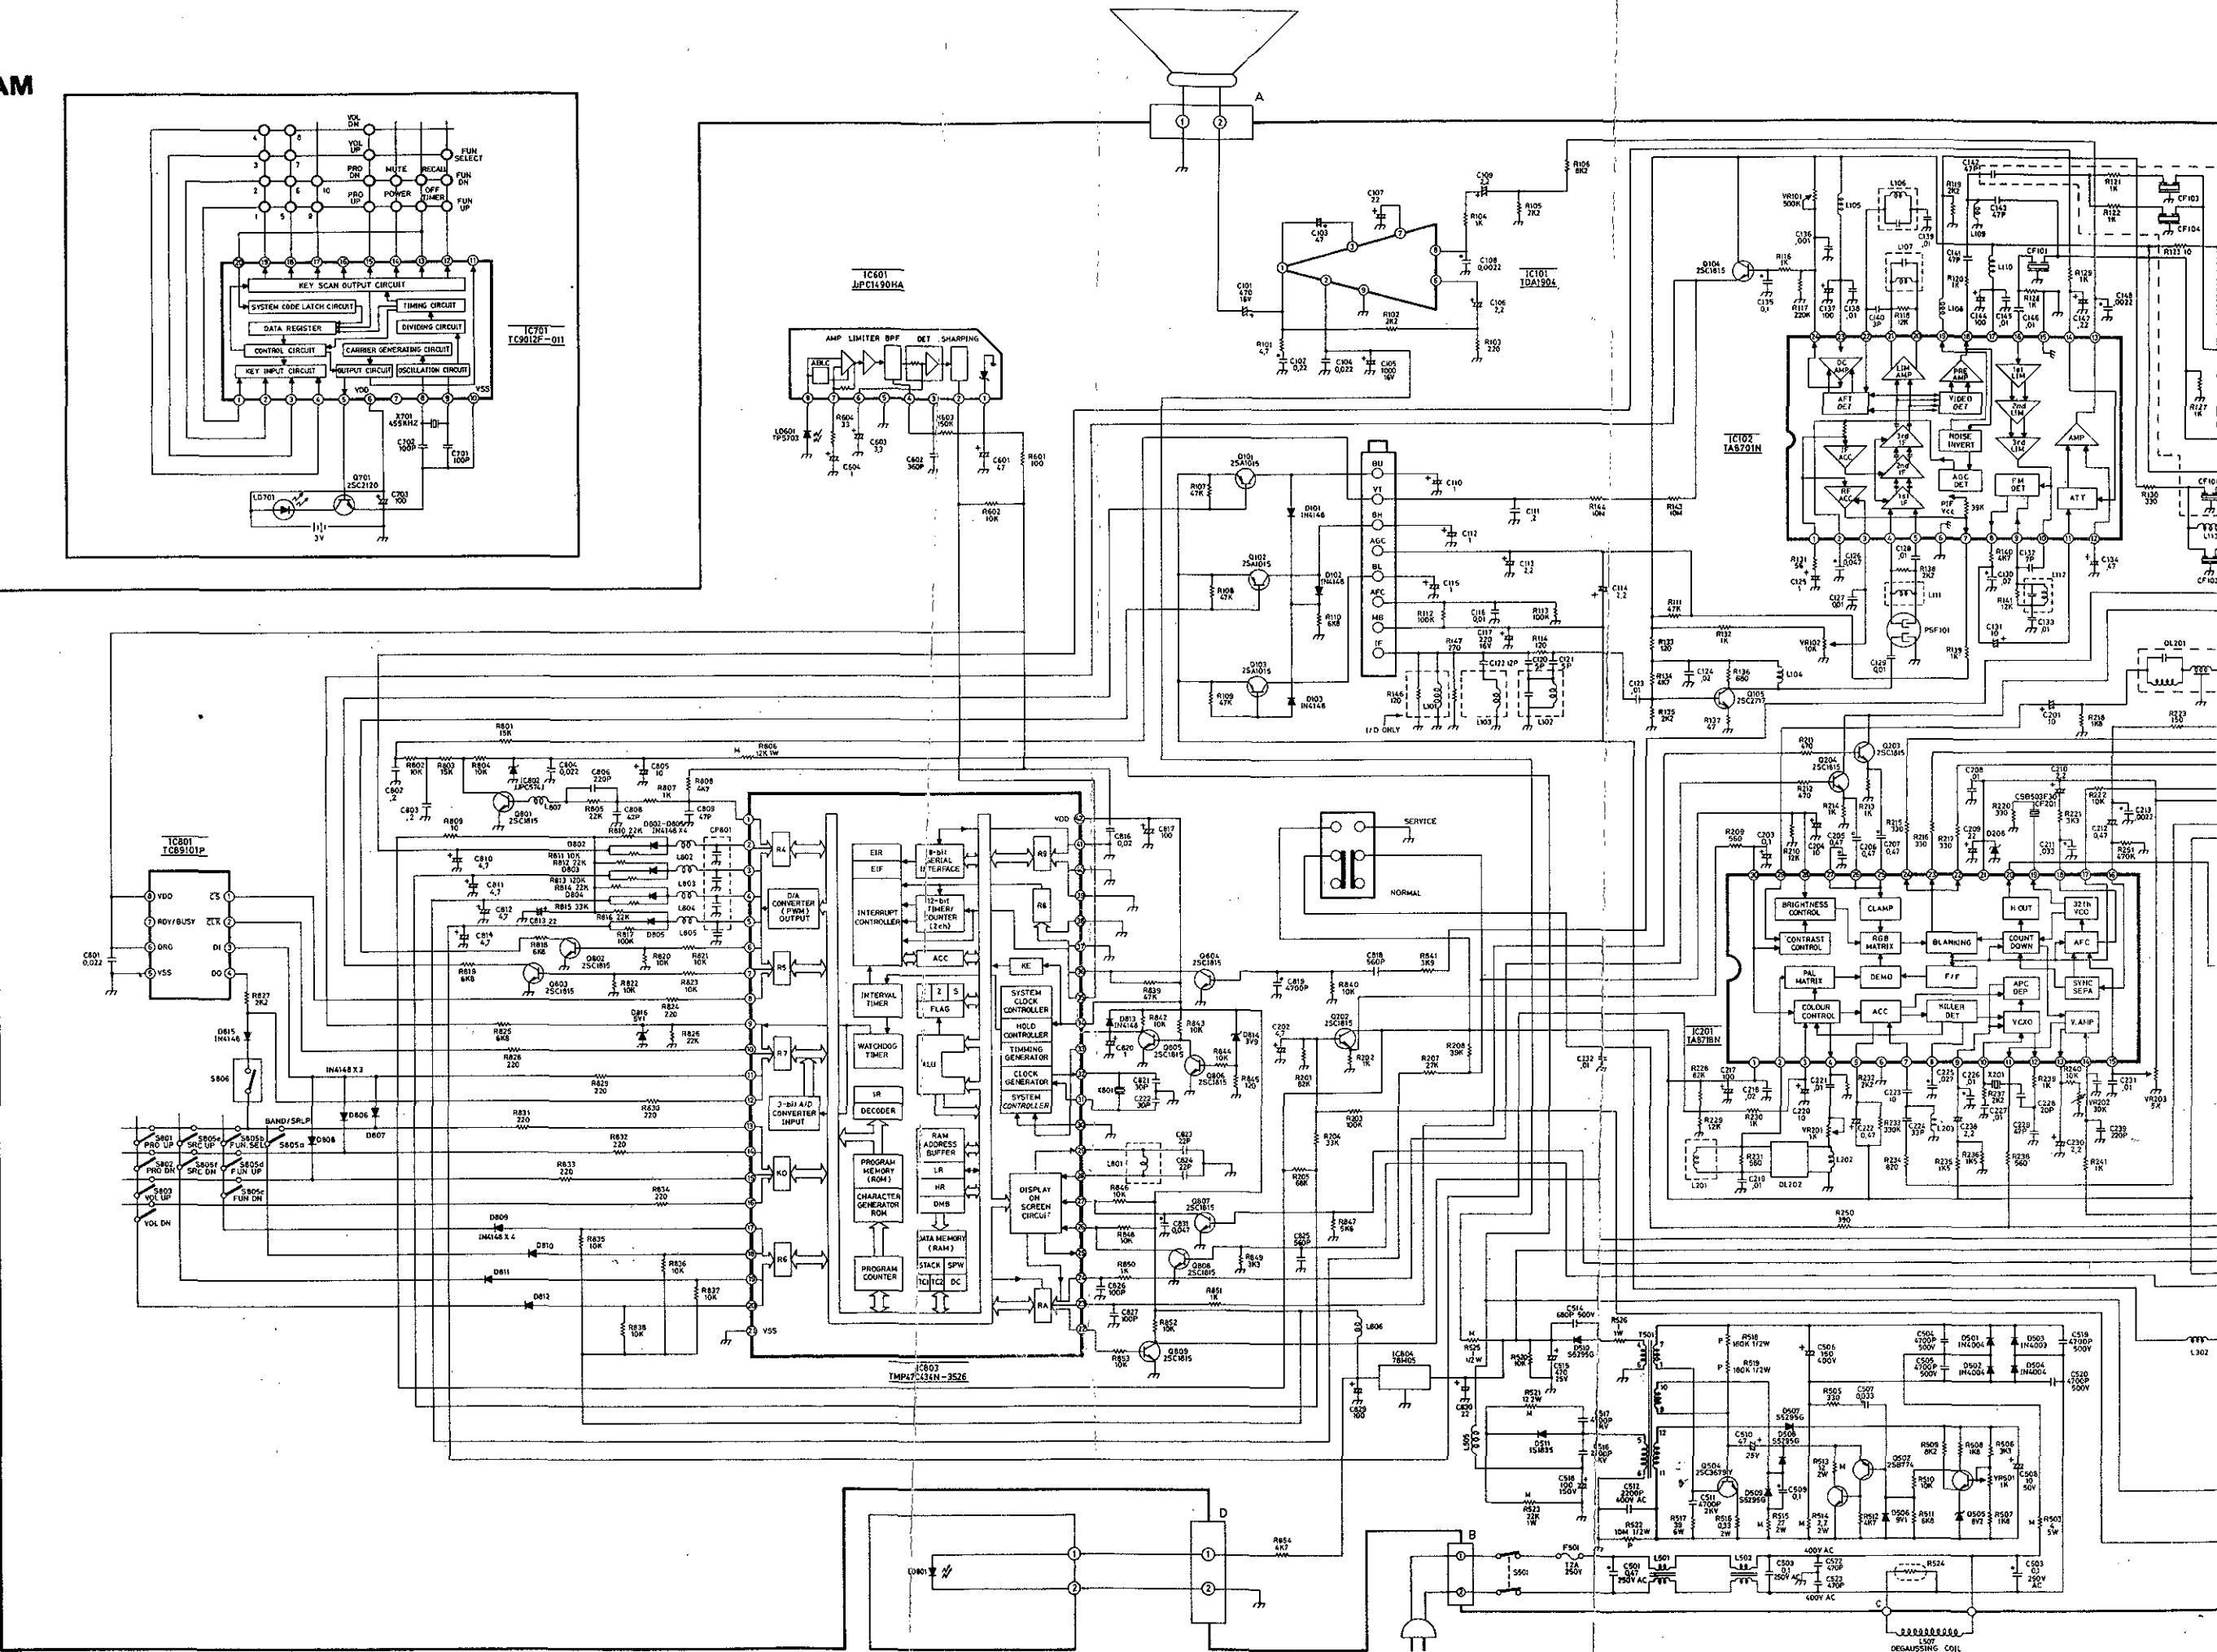


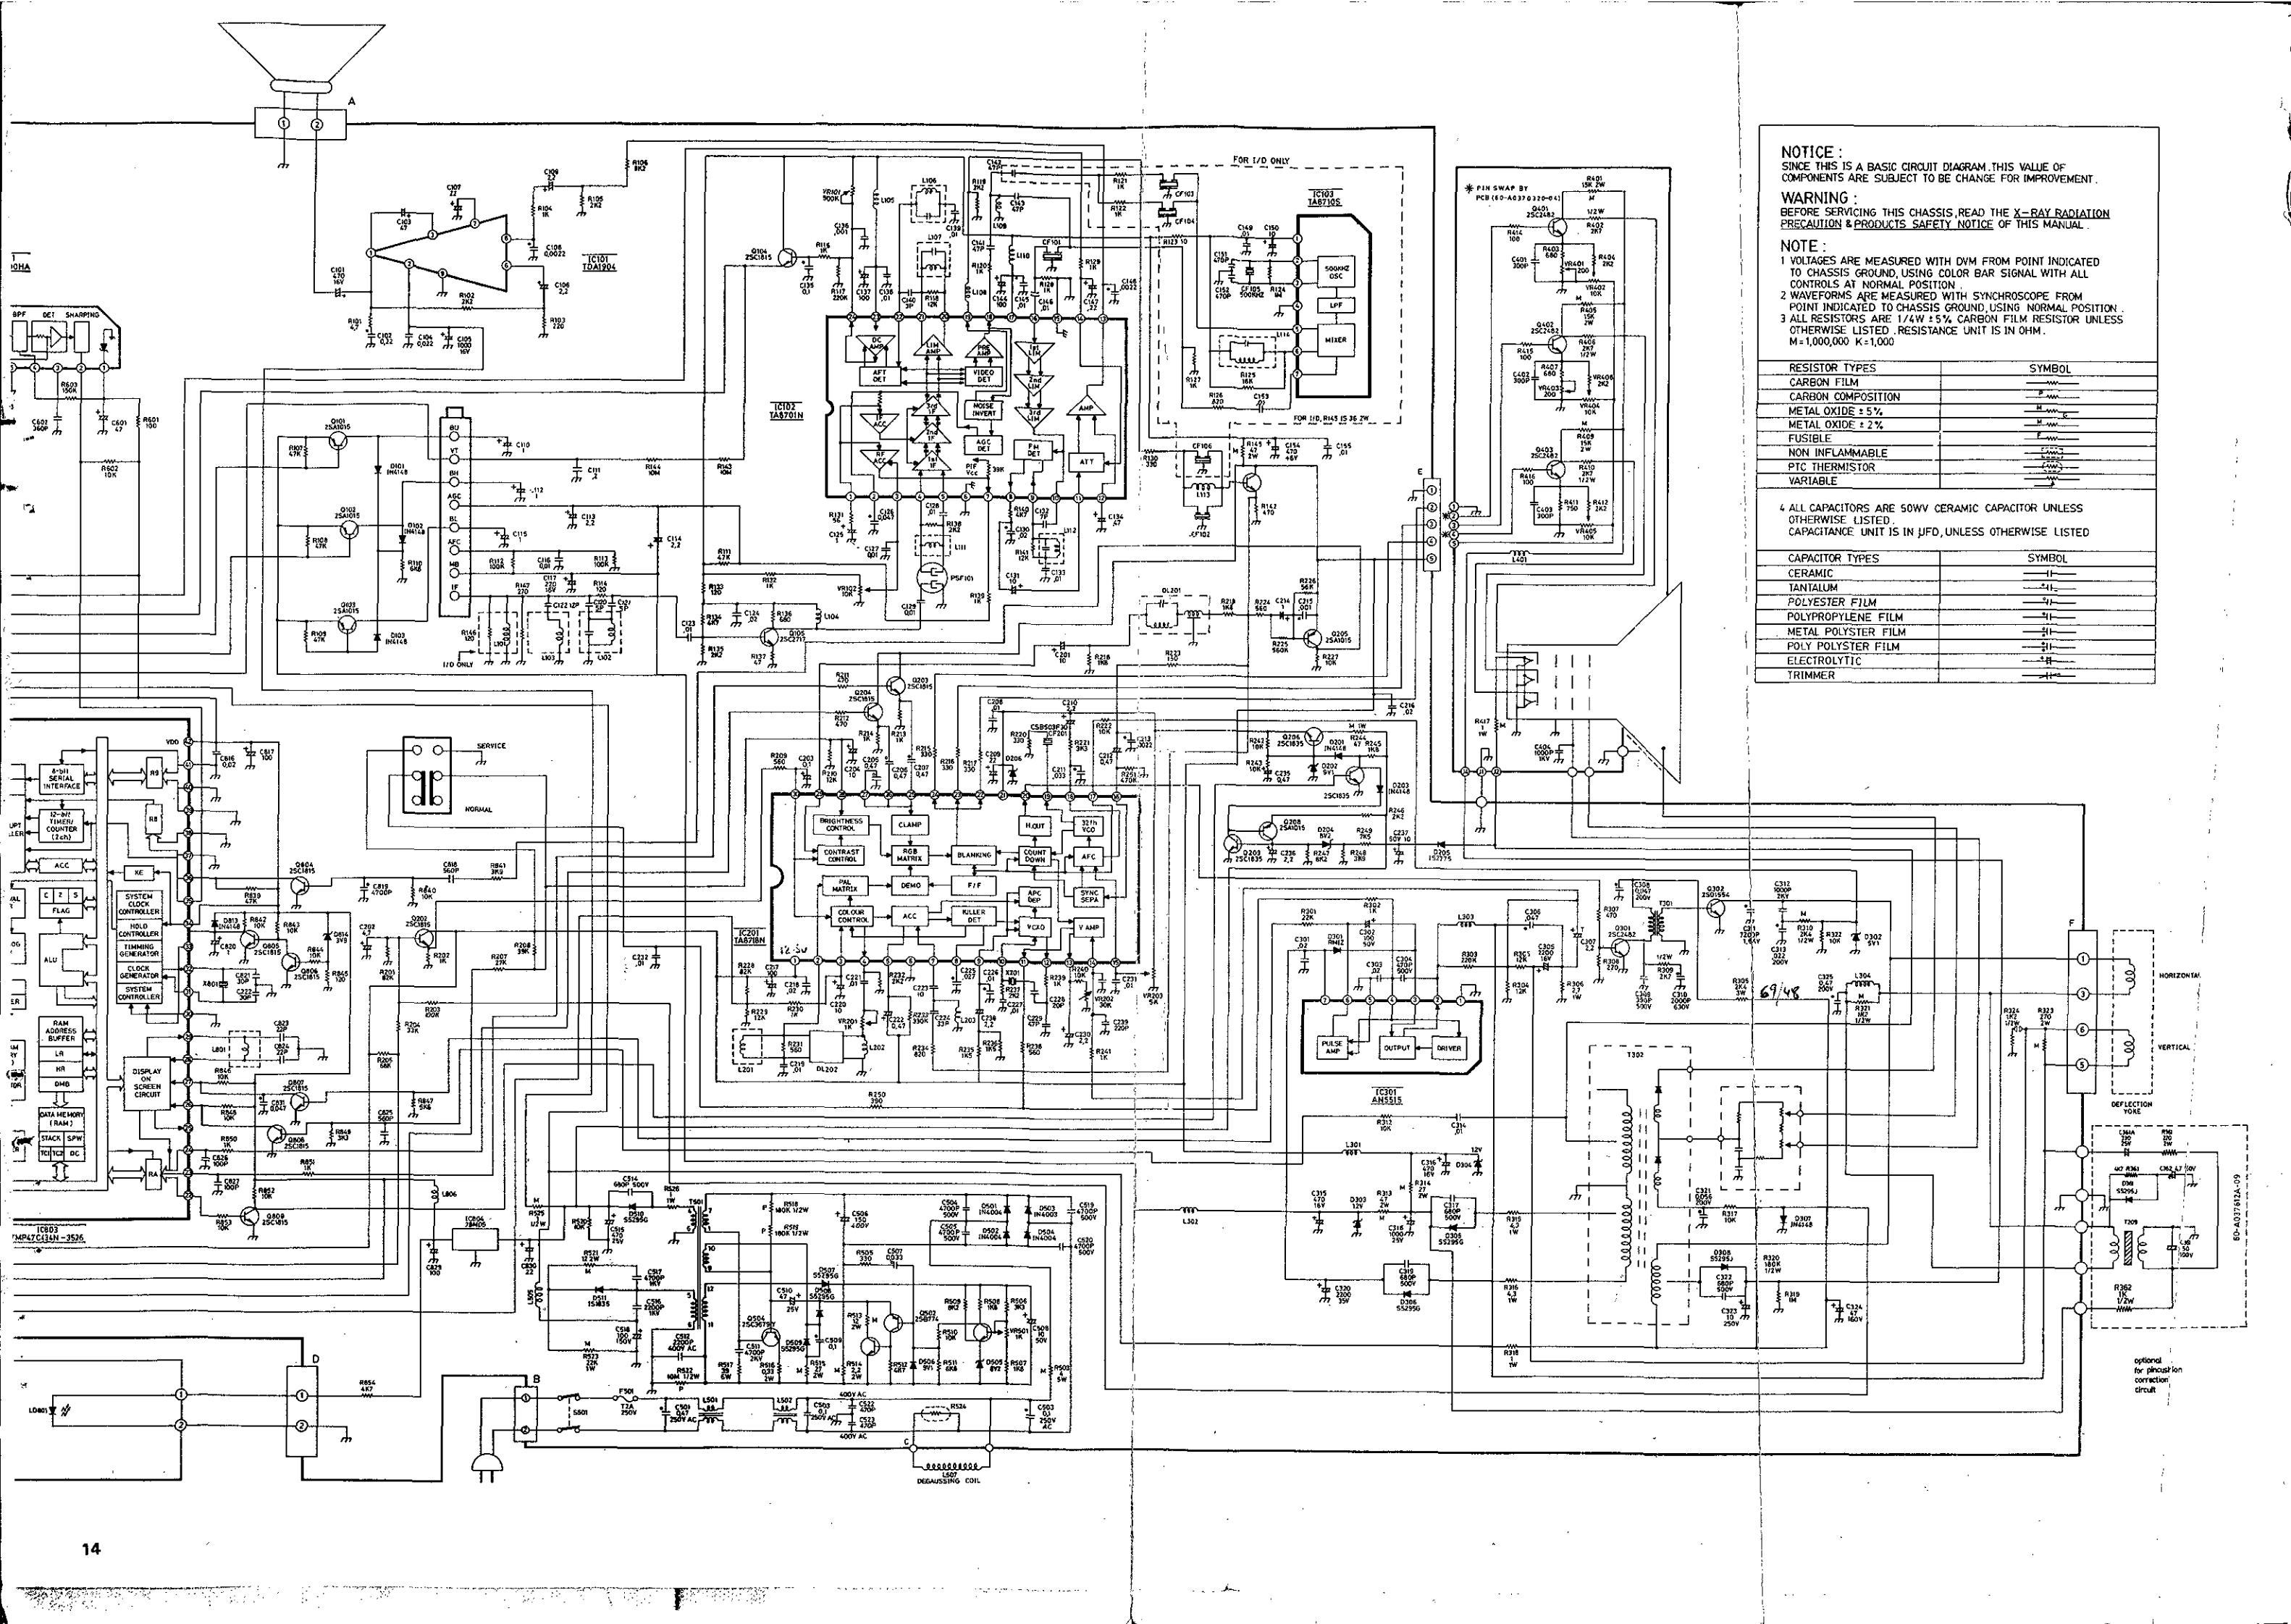


WIRING DIAGRAM

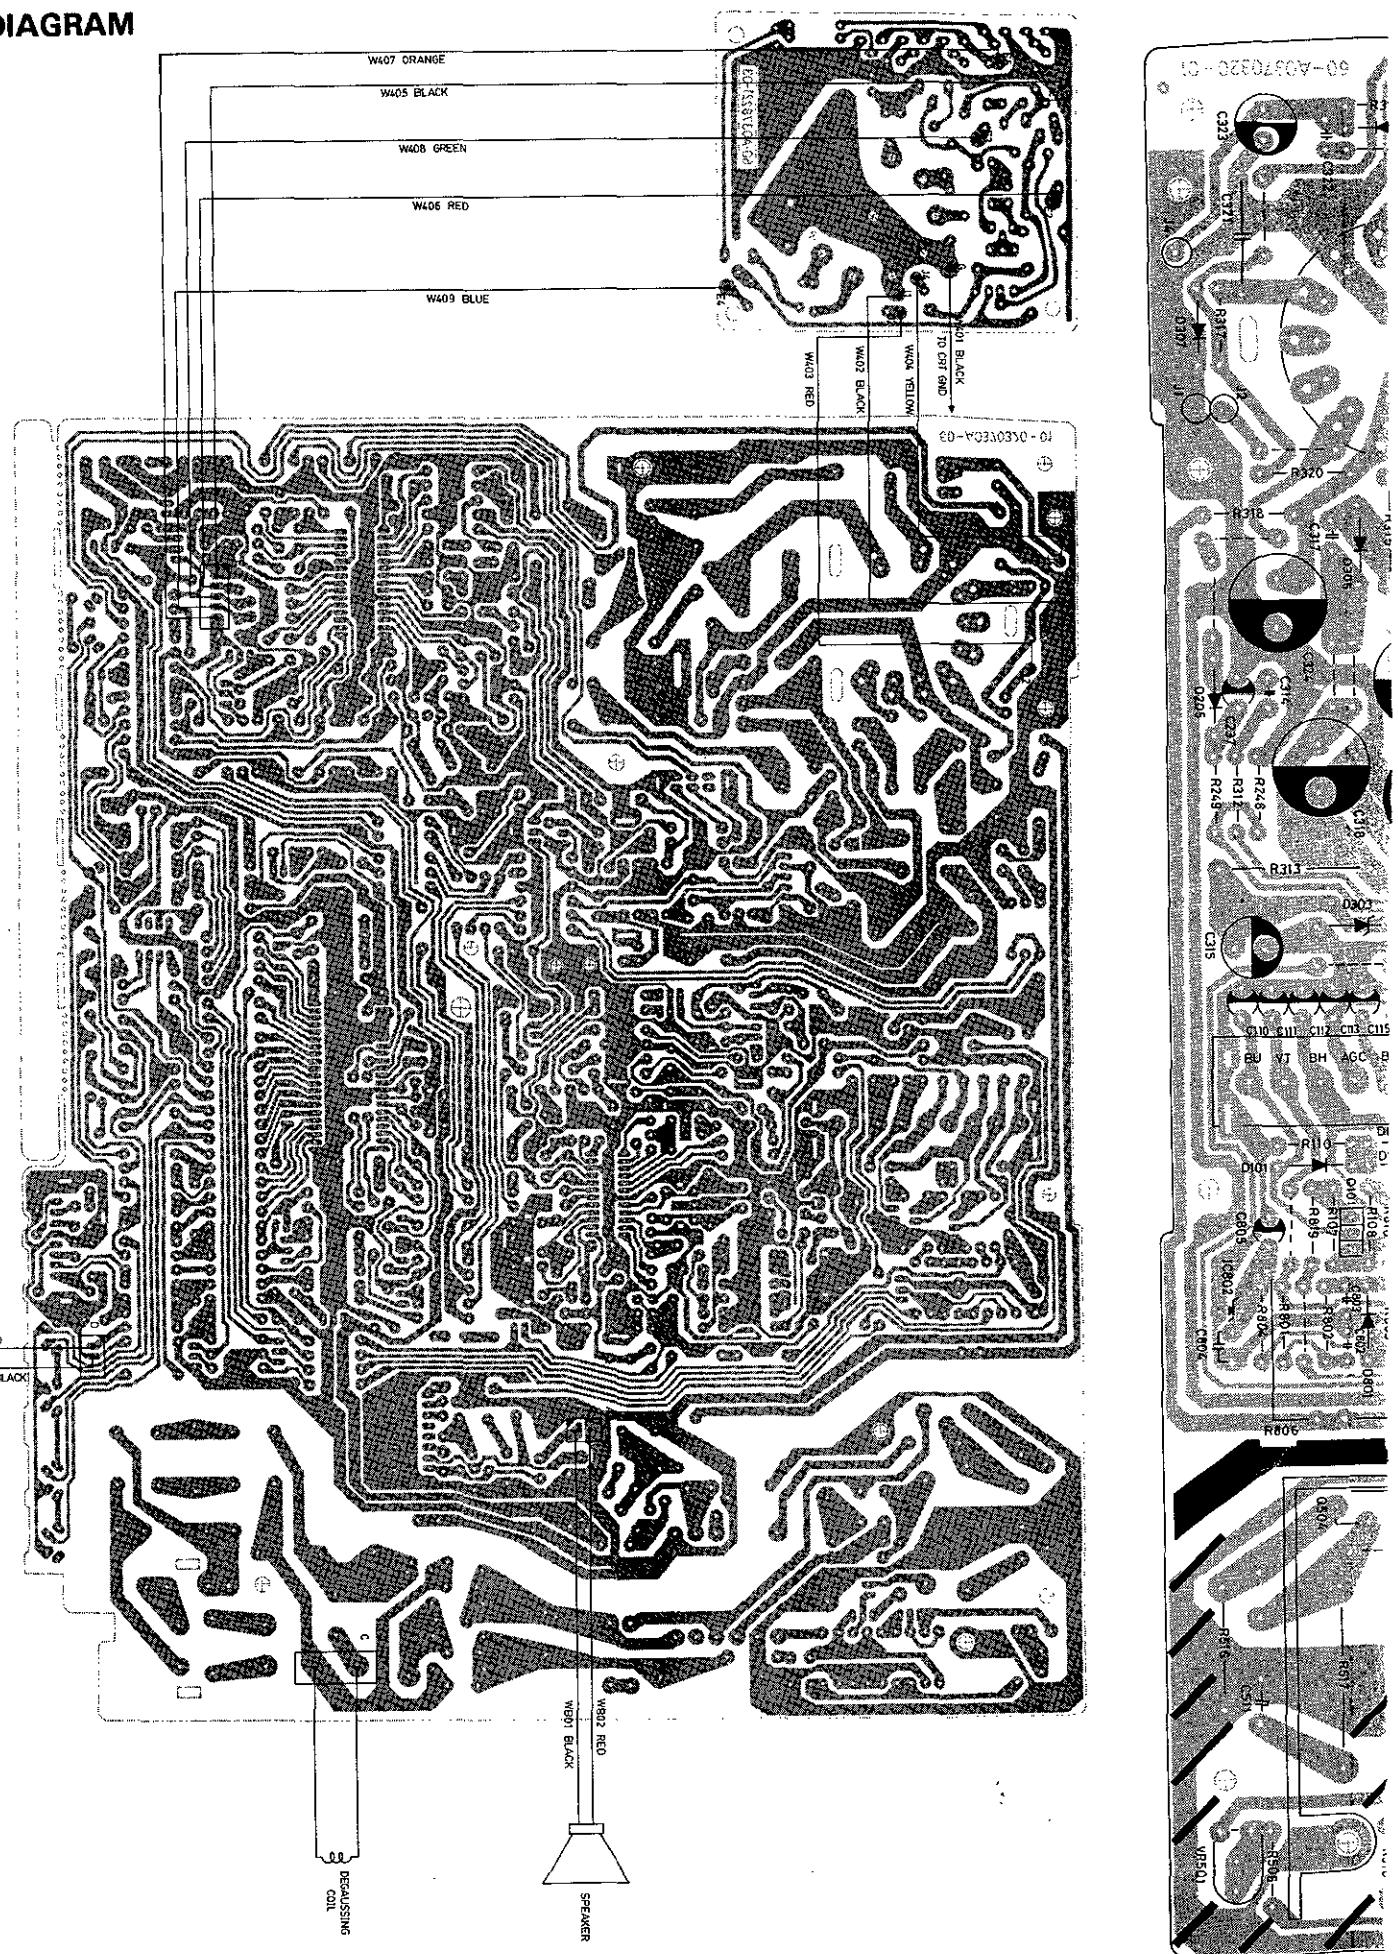


BOTTOM VIEW OF MAIN BOARD

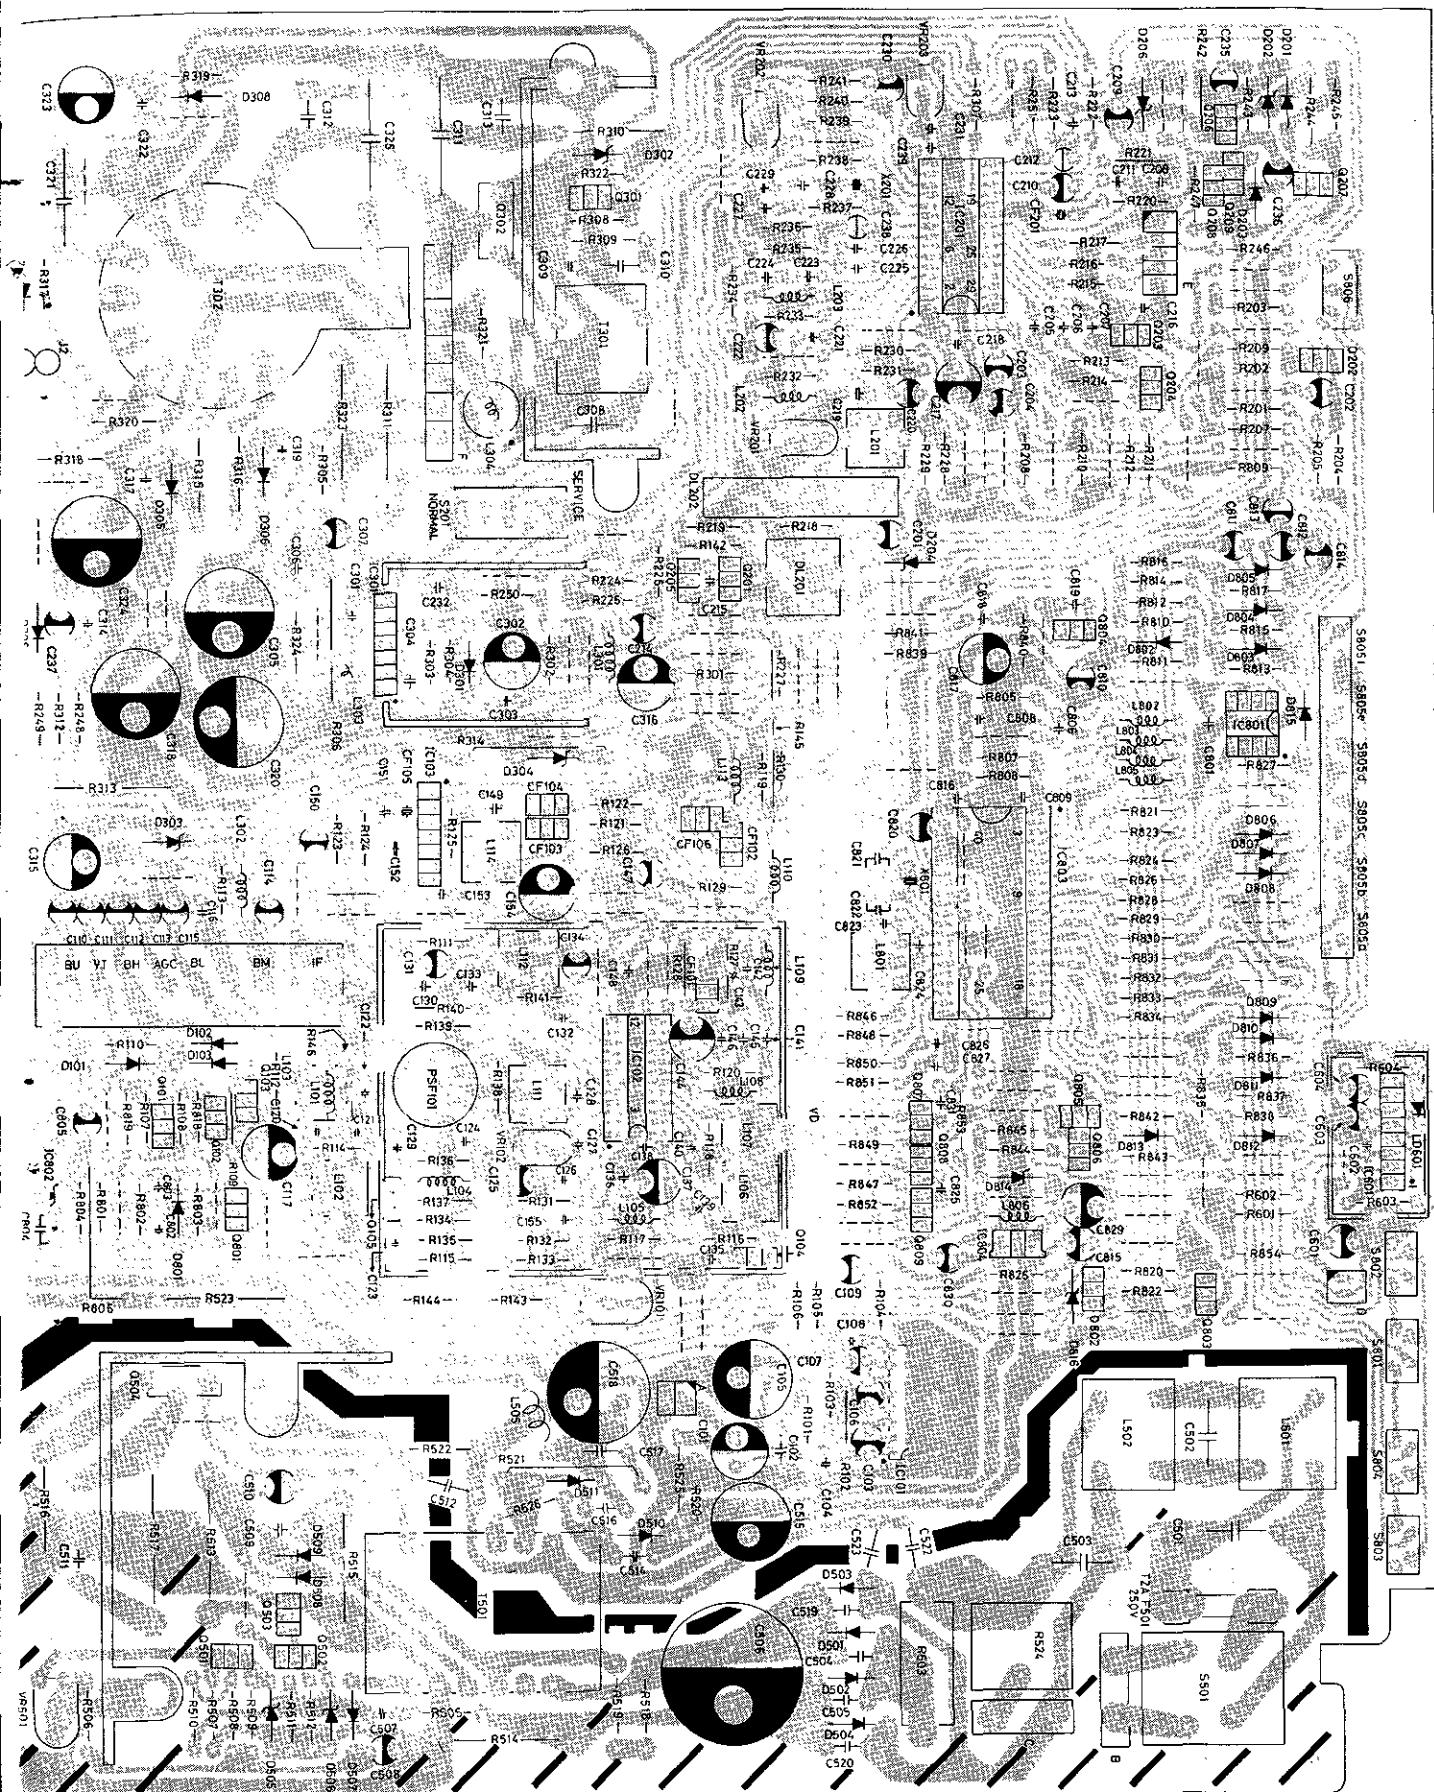

COMPONENT VIEW OF MAIN BOARD

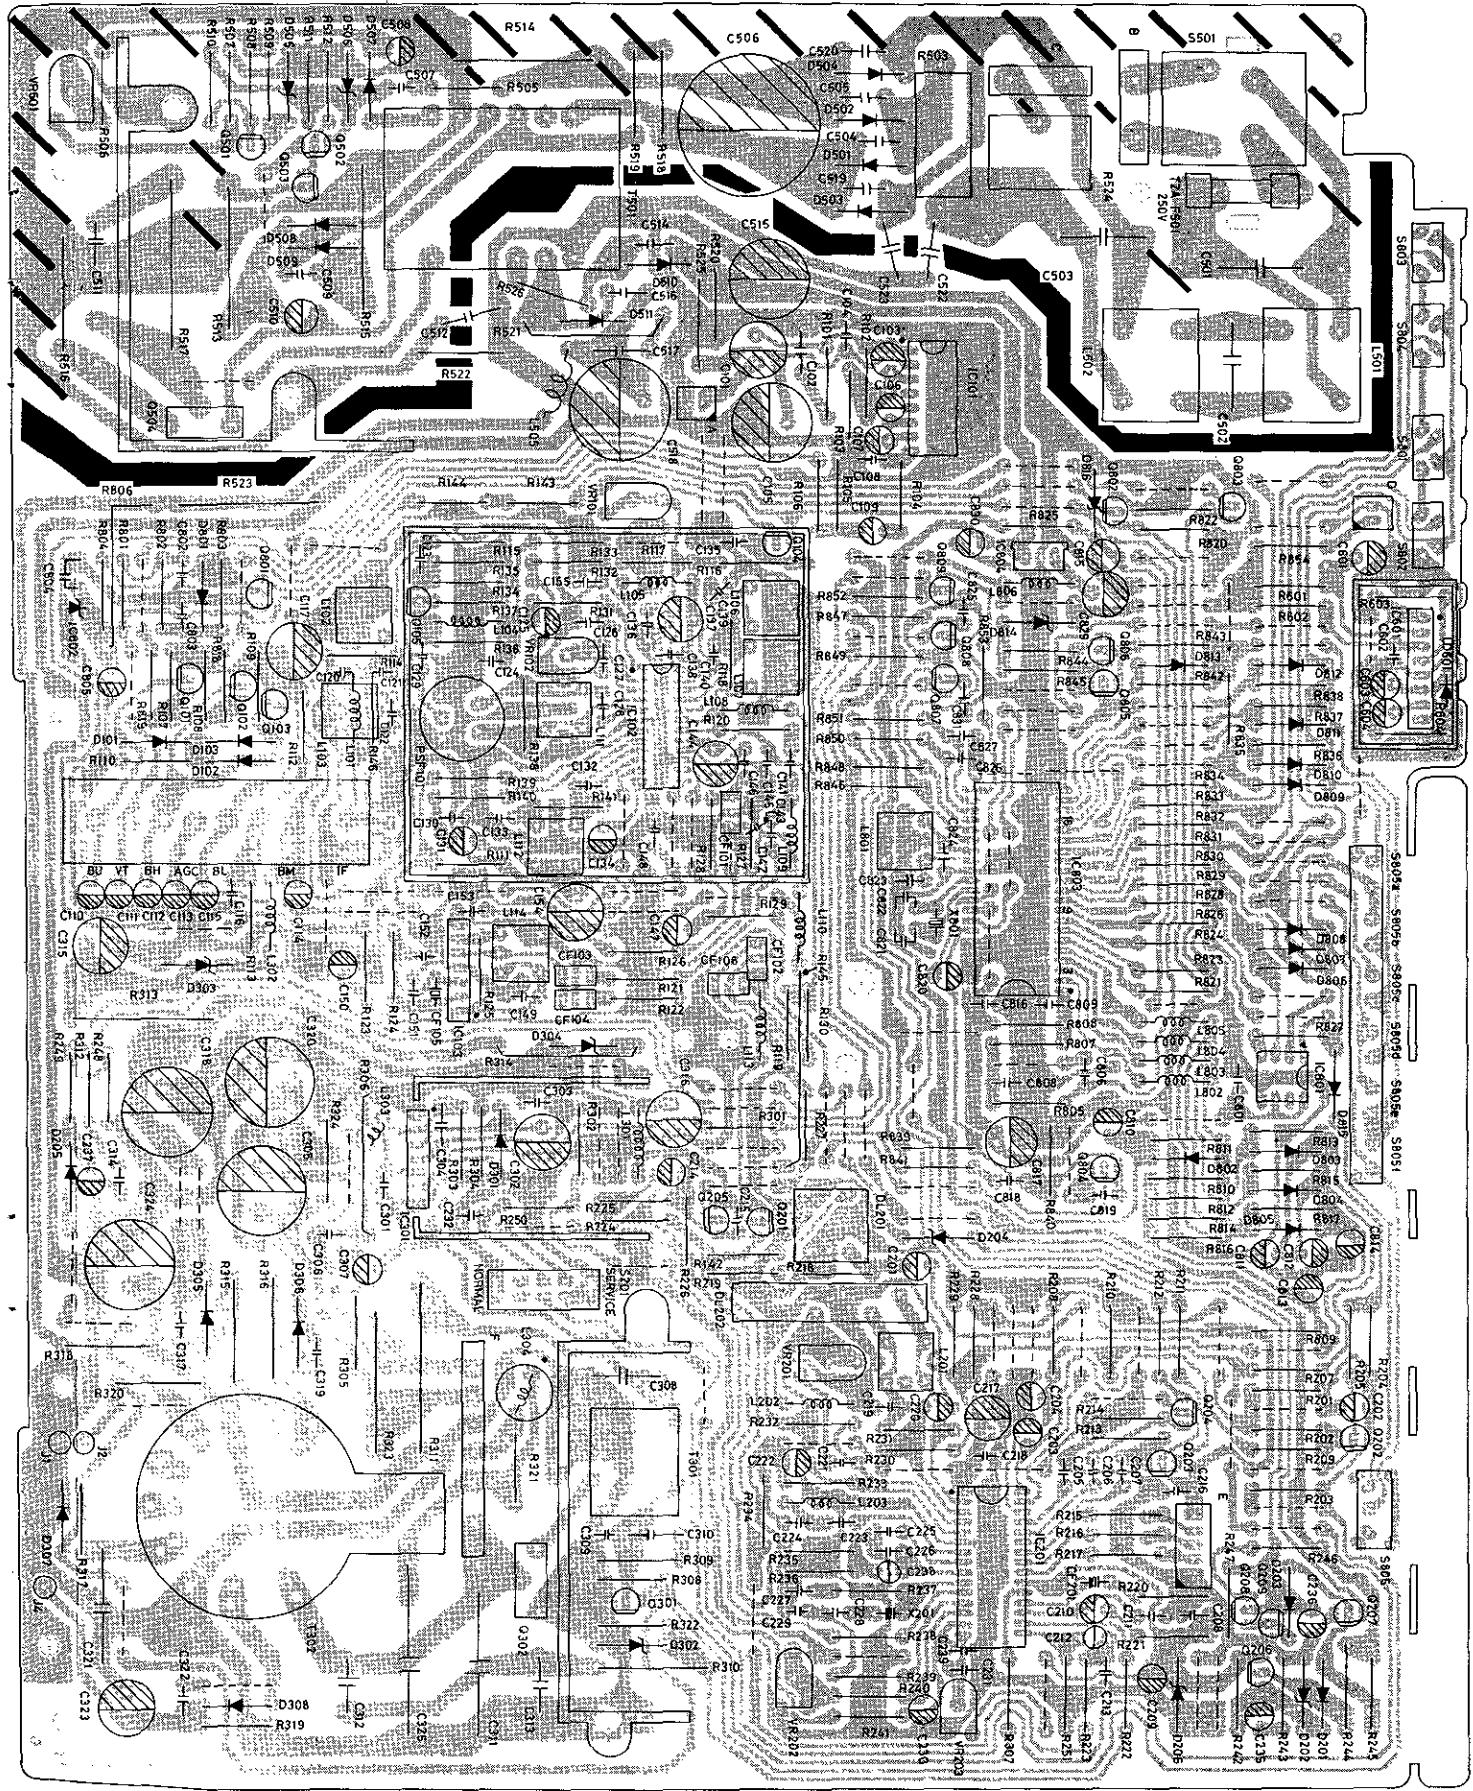

BLOCK DIAGRAM

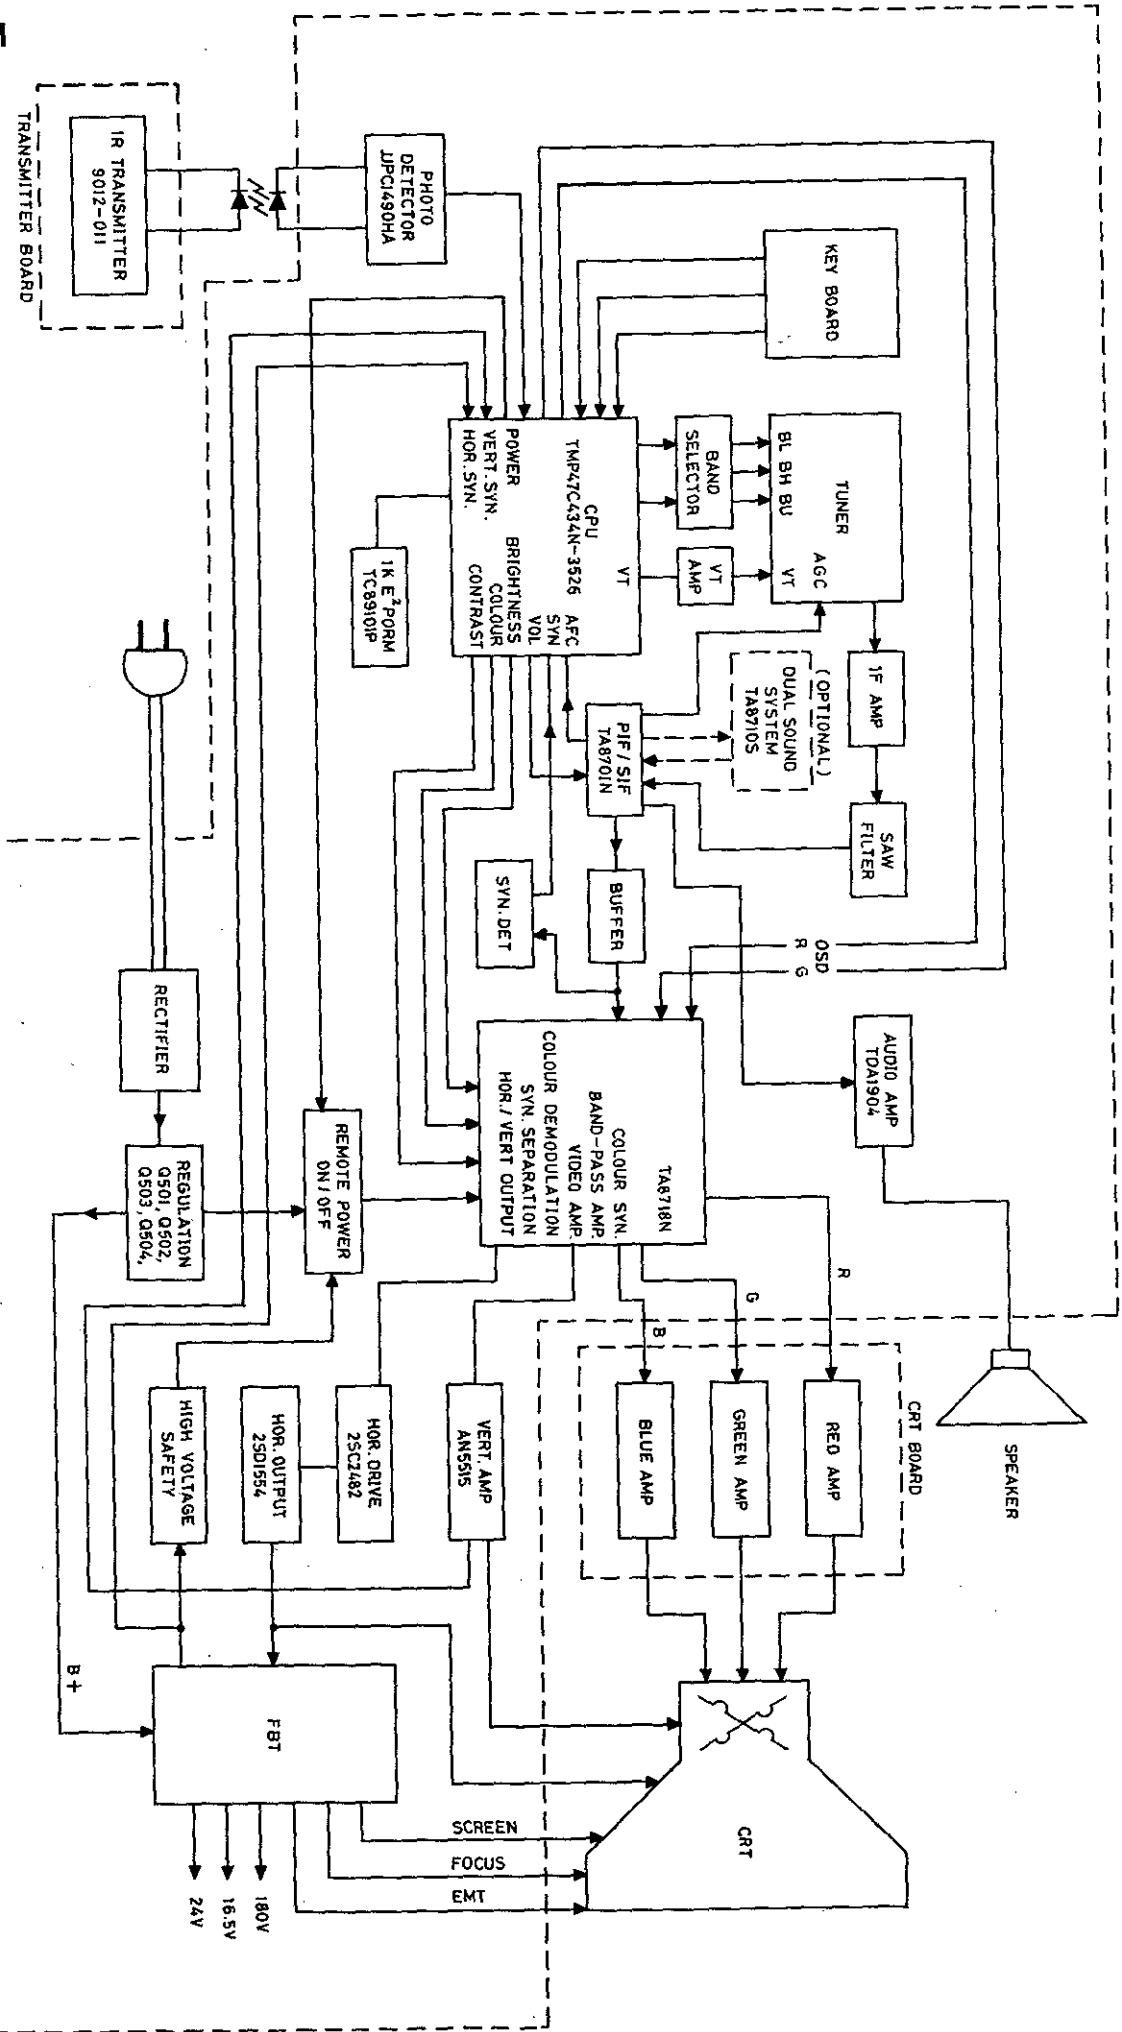

ELECTRICAL PART LIST

LOC.	PART NO.	DESCRIPTION
C0101	54-A4707EAC-00	470 UF 16V + -20% ELECTROLYTIC CAPACITOR (UVX1C471MPA)
C0102	54-E2204DCF-00	0.22 UF 50V + -10% POLYESTER FILM CAPACITOR
C0103	54-74708-54	47 UF 16V + 50% -10% ELECTROLYTIC CAP
C0104	54-72203-75	0.022 UF 50V + 80% -20% CERAMIC CAP
C0105	54-A1008EAC-00	1000 UF 16V + -20% ELECTROLYTIC CAPACITOR (UVX1C102MPA)
C0106	54-O2206EAF-00	2.2 UF/50V + -20% ELECTROLYTIC CAP. - SMR SERIES
C0107	54-O2206EAC-00	22 UF/16V + -20% ELECTROLYTIC CAP. - SMR SERIES
C0108	54-E2202DCF-00	0.0022 UF 50V + -10% POLYESTER FILM CAPACITOR
C0109	54-O2206EAF-00	2.2 UF/50V + -20% ELECTROLYTIC CAP. - SMR SERIES
C0110	54-O1006EAF-00	1 UF/50V + -20% ELECTROLYTIC CAP. - SMR SERIES
C0111	54-P2204DFV-00	0.22 UF 63V + -10% METALLIZED POLYESTER FILM CAP
C0112	54-O1006EAF-00	1 UF/50V + -20% ELECTROLYTIC CAP. - SMR SERIES
C0113	54-O2206EAF-00	2.2 UF/50V + -20% ELECTROLYTIC CAP. - SMR SERIES
C0114	54-O2206EAF-00	2.2 UF/50V + -20% ELECTROLYTIC CAP. - SMR SERIES
C0115	54-O1006EAF-00	1 UF/50V + -20% ELECTROLYTIC CAP. - SMR SERIES
C0116	54-71003-75	0.01 UF 50V + 80% -20% CERAMIC CAP
C0117	54-A2207EAC-00	220 UF 16V + -20% ELECTROLYTIC CAPACITOR (UVX1C221MPA)
C0120	54-10500-75	5 PF 50V + -0.25PF CERAMIC CAP
C0121	54-10500-75	5 PF 50V + -0.25PF CERAMIC CAP
C0122	54-41200-75	12 PF 50V + -5% CERAMIC CAP
C0123	54-71003-75	0.01 UF 50V + 80% -20% CERAMIC CAP
C0124	54-72203-75	0.022 UF 50V + 80% -20% CERAMIC CAP
C0125	54-O1006EAF-00	1 UF/50V + -20% ELECTROLYTIC CAP. - SMR SERIES
C0126	54-E4703DCF-00	0.047 UF 50V + -10% POLYESTER FILM CAPACITOR
C0127	54-71003-75	0.01 UF 50V + 80% -20% CERAMIC CAP
C0128	54-71003-75	0.01 UF 50V + 80% -20% CERAMIC CAP
C0129	54-71003-75	0.01 UF 50V + 80% -20% CERAMIC CAP
C0130	54-E2203DCF-00	0.022 UF 50V + -10% POLYESTER FILM CAPACITOR
C0131	54-O1006EAC-01	10 UF 16V + -20% ELECTROLYTIC CAPACITOR 'D.F. < 0.08' (SMR SERIES)
C0132	54-10700-75	7 PF 50V + -0.25PF CERAMIC CAP
C0133	54-71003-75	0.01 UF 50V + 80% -20% CERAMIC CAP
C0134	54-O1006EAC-01	10 UF 16V + -20% ELECTROLYTIC CAPACITOR 'D.F. < 0.08' (SMR SERIES)
C0136	54-51002-75	0.001 UF 50V + -10% CERAMIC CAP
C0137	54-C1007EAC-00	100 UF 16V + -20% ELECTROLYTIC CAP
C0138	54-71003-75	0.01 UF 50V + 80% -20% CERAMIC CAP
C0139	54-71003-75	0.01 UF 50V + 80% -20% CERAMIC CAP
C0140	54-10300-75	3 PF 50V + -0.25PF CERAMIC CAP
C0141	54-E4700CBF-00	CERAMIC DISC CAPACITOR - (47 PF/50V + -5%) D470J22S2LF52L2H
C0143	54-E4700CBF-00	CERAMIC DISC CAPACITOR - (47 PF/50V + -5%) D470J22S2LF52L2H
C0144	54-C1007EAC-00	100 UF 16V + -20% ELECTROLYTIC CAP
C0145	54-71003-75	0.01 UF 50V + 80% -20% CERAMIC CAP
C0148	54-71003-75	0.01 UF 50V + 80% -20% CERAMIC CAP
C0147	54-A2204EAF-00	0.22 UF 50V + -20% ELECTROLYTIC CAPACITOR (UVX1HR22MDA)
C0148	54-E2202DCF-00	0.0022 UF 50V + -10% POLYESTER FILM CAPACITOR
C0154	54-A2207EAC-00	220 UF 16V + -20% ELECTROLYTIC CAPACITOR (UVX1C221MPA)
C0155	54-72203-75	0.022 UF 50V + 80% -20% CERAMIC CAP
C0201	54-O1006EAC-01	10 UF 16V + -20% ELECTROLYTIC CAPACITOR 'D.F. < 0.08' (SMR SERIES)
C0202	54-A4706EAD-00	4.7 UF 25V + -20% ELECTROLYTIC CAP (UVX1E4R7MAA)
C0203	54-O1006EAF-00	1 UF/50V + -20% ELECTROLYTIC CAP. - SMR SERIES

LOC.	PART NO.	DESCRIPTION
C0204	54-O1006EAC-01	10 UF 16V + -20% ELECTROLYTIC CAPACITOR 'D.F. < 0.08' (SMR SERIES)
C0205	54-P4704CCV-00	0.47 UF 63V + -5% PLASTIC FILM CAP. (MM TYPE)
C0206	54-P4704CCV-00	0.47 UF 63V + -5% PLASTIC FILM CAP. (MM TYPE)
C0207	54-P4704CCV-00	0.47 UF 63V + -5% PLASTIC FILM CAP. (MM TYPE)
C0208	54-71003-75	0.01 UF 50V + 80% -20% CERAMIC CAP
C0209	54-O2206EAC-00	22 UF/16V + -20% ELECTROLYTIC CAP. - SMR SERIES
C0210	54-O2205EAF-00	2.2 UF/50V + -20% ELECTROLYTIC CAP. - SMR SERIES
C0211	54-E3303DCF-00	0.033 UF 50V + -10% POLYESTER FILM CAPACITOR
C0212	54-A4704EGF-00	0.47 UF 50V + -20% ELECTROLYTIC CAP "SP NICHICON"
C0213	54-E2202DCF-00	0.0022 UF 50V + -10% POLYESTER FILM CAPACITOR
C0214	54-O1006EAF-00	1 UF/50V + -20% ELECTROLYTIC CAP. - SMR SERIES
C0215	54-E1002DCF-00	0.001 UF 50V + -10% POLYESTER FILM CAPACITOR
C0216	54-72203-75	0.022 UF 50V + 80% -20% CERAMIC CAP
C0217	54-C1007EAC-00	100 UF 16V + -20% ELECTROLYTIC CAP
C0218	54-72203-75	0.022 UF 50V + 80% -20% CERAMIC CAP
C0219	54-71003-75	0.01 UF 50V + 80% -20% CERAMIC CAP
C0220	54-O1006EAC-01	10 UF 16V + -20% ELECTROLYTIC CAPACITOR 'D.F. < 0.08' (SMR SERIES)
C0221	54-71003-75	0.01 UF 50V + 80% -20% CERAMIC CAP
C0222	54-O4704EAF-00	0.47 UF/50V + -20% ELECTROLYTIC CAP. - SMR SERIES
C0223	54-41000-75	10 PF 50V + -5% CERAMIC CAP
C0224	54-48200-75	82 PF 50V + -5% CERAMIC CAP
C0225	54-E2703CCF-00	0.027 UF 50V + -5% POLYESTER FILM CAP (J273J47Y6DF52L4G)
C0226	54-51003-76	0.01 UF 50V + -10% MYLAR CAP
C0227	54-71003-75	0.01 UF 50V + 80% -20% CERAMIC CAP
C0228	54-42200-75	22 PF 50V + -5% CERAMIC CAP
C0229	54-E4700CBF-00	CERAMIC DISC CAPACITOR - (47 PF/50V + -5%) D470J22S2LF52L2H
C0230	54-O2206EAF-00	2.2 UF/50V + -20% ELECTROLYTIC CAP. - SMR SERIES
C0231	54-71003-75	0.01 UF 50V + 80% -20% CERAMIC CAP
C0232	54-71003-75	0.01 UF 50V + 80% -20% CERAMIC CAP
C0235	54-O4704EAF-00	0.47 UF/50V + -20% ELECTROLYTIC CAP. - SMR SERIES
C0238	54-O2206EAF-00	2.2 UF/50V + -20% ELECTROLYTIC CAP. - SMR SERIES
C0237	54-61006-74	10 UF 50V + -20% ELECTROLYTIC CAP (SINGLE ENDED TYPE)
C0238	54-A2206EGF-00	2.2 UF 50V + -20% ELECTROLYTIC CAP "SP NICHICON"
C0239	54-42201-76	220 PF 50V + -5% CERAMIC CAP
C0301	54-71003-76	0.01 UF 50V + 80% -20% CERAMIC CAP
C0302	54-A1007EAF-01	100UF 50V + -20% ELECTROLYTIC CAPACITOR (UVX1H101MPA)
C0303	54-72203-76	0.022 UF 50V + 80% -20% CERAMIC CAP
C0304	54-E4701DSL-00	470 PF 500V + -10% CERAMIC CAP.
C0305	54-A2208EAC-00	2200 UF 16V + -20% ELECTROLYTIC CAPACITOR (UVX1C222MHA)
C0306	54-E4703DCF-00	0.047 UF 50V + -10% POLYESTER FILM CAPACITOR
C0307	54-52216-78	2.2 UF 50V + -10% TANTALUM CAP
C0308	54-54703-88	0.047 UF 200V + -10% POLYPROPYLENE FILM CAP (DTW TYPE)
C0309	54-H3801DKL-00	380 PF 500V + -10% CERAMIC CAP
C0310	54-42202-89	0.0022 UF 630V + -5% POLYPROPYLENE FILM CAP (DTW TYPE)
C0311	54-17202CMO-00	0.0072 UF 1600V + -5% POLYPROPYLENE FILM CAP
C0312	54-E1002DBP-00	1000 PF 2KV + -10% CERAMIC CAP (D102K39Y5PPB2L8A)
C0313	54-42003-89	0.02 UF 200V + -5% POLYPROPYLENE FILM CAP (DTW TYPE)
C0314	54-71003-76	0.01 UF 50V + 80% -20% CERAMIC CAP
C0315	54-A4707EAC-00	470 UF 16V + -20% ELECTROLYTIC CAPACITOR (UVX1C471MPA)

ELECTRICAL PART LIST

LOC.	PART NO.	DESCRIPTION
C0318	54-A4707EAC-00	470 UF 16V +20% ELECTROLYTIC CAPACITOR (UVX1C471MPA)
C0317	54-H6801DKL-00	680 PF 500V +10% CERAMIC CAP
C0318	54-A1008EAD-00	1000 UF 25V +20% ELECTROLYTIC CAP (ULB1E102MRA)
C0319	54-H6801DKL-00	680 PF 500V +10% CERAMIC CAP
C0320	54-A2208EAE-00	2200 UF 36V +20% ELECTROLYTIC CAPACITOR (UVX1V222MHA)
C0321	54-55603-89	0.058 UF 200V +10% POLYPROPYLENE FILM CAP (DTW TYPE)
C0322	54-H6801DKL-00	680 PF 500V +10% CERAMIC CAP
C0323	54-A1008GAJ-00	10 UF 250V +50% -10% ELECTROLYTIC CAP
C0324	54-A4708GAH-00	47 UF 160V +50% -10% ELECTROLYTIC CAP
C0325	54-54704-89	0.47 UF 200V +10% POLYPROPYLENE FILM CAP (DTW TYPE)
C0401	54-43001-76	300 PF 50V +5% CERAMIC CAP
C0402	54-43001-76	390 PF 50V +5% CERAMIC CAP
C0403	54-43001-76	300 PF 50V +5% CERAMIC CAP
C0404	54-51002-26 50	1000 PF 2KV +10% CERAMIC CAP
C0501	54-I4704EMJ-00	0.47 UF 260VAC +20% METALLIZED POLYPROPYLENE FILM CAP (DHV)
C0503	54-I1004EMJ-00	0.1 UF 250VAC +20% METALLIZED POLYPROPYLENE FILM CAP
C0504	54-H4702EBL-00	0.0047 UF 600V +20% CERAMIC CAP
C0505	54-H4702EBL-00	0.0047 UF 600V +20% CERAMIC CAP
C0506	54-A1507EAK-00	150 UF 400V +20% ELECTROLYTIC CAP. (LLK2G161MHS)
C0507	54-E3303DCF-00	0.033 UF 50V +10% POLYESTER FILM CAPACITOR
C0508	54-A1006EAF-00	10 UF 60V +20% ELECTROLYTIC CAP
C0509	54-51004-76	0.1 UF 60V +10% MYLAR CAP
C0510	54-04706EAD-00	47 UF/25V +20% ELECTROLYTIC CAP. - SMR SERIES
C0511	54-54702-26	4700 PF 2KV +20% CERAMIC CAP
C0512	54-H2202EGK-00	2200 PF 400 VAC +20% CERAMIC CAP. (DE1410E222MACT4K-KD)
C0514	54-H6801DKL-00	680 PF 500V +10% CERAMIC CAP
C0515	54-A4707EAD-00	470 UF 25V +20% ELECTROLYTIC CAPACITOR (UVX1E471MPA)
C0516	54-72202-15	0.0022 UF 1KV +80% -20% CERAMIC CAP
C0517	54-E4702EBN-00	0.0047 UF 1KV +20% CERAMIC CAP (D472M38Z6UN82L8A)
C0518	54-A1007GAH-00	100 UF 160V +50% -10% ELECTROLYTIC CAP
C0519	54-H4702EBL-00	0.0047 UF 500V +20% CERAMIC CAP
C0520	54-H4702EBL-00	0.0047 UF 500V +20% CERAMIC CAP
C0522	54-H4701DGK-00	470 PF 400 VAC +10% CERAMIC CAP (DE1010B471KACT4K-KD)
C0523	54-H4701DGK-00	470 PF 400 VAC +10% CERAMIC CAP (DE1010B471KACT4K-KD)
C0601	54-74706-54	47 UF 18V +50% -10% ELECTROLYTIC CAP
C0602	54-43801-76	380 PF 50V +5% CERAMIC CAP
C0603	54-A3305EAF-00	3.3 UF 50V +20% ELECTROLYTIC CAP
C0604	54-01006EAF-00	1 UF/50V +20% ELECTROLYTIC CAP. - SMR SERIES
C0701	54-41001-76	100 PF 50V +5% CERAMIC CAP
C0702	54-41001-76	100 PF 50V +5% CERAMIC CAP
C0703	54-A4706EAB-00	47 UF 10V +20% ELECTROLYTIC CAP
C0801	54-72203-76	0.022 UF 50V +80% -20% CERAMIC CAP
C0802	54-P2204DFV-00	0.22 UF 63V +10% METALLIZED POLYESTER FILM CAP
C0803	54-P2204DFV-00	0.22 UF 63V +10% METALLIZED POLYESTER FILM CAP
C0804	54-72203-76	0.022 UF 50V +80% -20% CERAMIC CAP
C0805	54-61006-74	10 UF 50V +20% ELECTROLYTIC CAP (SINGLE ENDED TYPE)
C0806	54-42201-76	220 PF 50V +5% CERAMIC CAP
C0808	54-E4700CSF-00	CERAMIC DISC CAPACITOR - (47 PF/50V +5%) D470J22S2LF62L2H
C0809	54-E4700CSF-00	CERAMIC DISC CAPACITOR - (47 PF/50V +5%) D470J22S2LF62L2H

LOC.	PART NO.	DESCRIPTION
C0810	54-A4705EAD-00	4.7 UF 25V +20% ELECTROLYTIC CAP (UVX1E4R7MAA)
C0811	54-A4705EAD-00	4.7 UF 25V +20% ELECTROLYTIC CAP (UVX1E4R7MAA)
C0812	54-A4705EAD-00	4.7 UF 25V +20% ELECTROLYTIC CAP (UVX1E4R7MAA)
C0813	54-02208EAC-00	22 UF/16V +20% ELECTROLYTIC CAP. - SMR SERIES
C0814	54-A4705EAD-00	4.7 UF 25V +20% ELECTROLYTIC CAP (UVX1E4R7MAA)
C0815	54-01005EAF-00	1 UF/60V +20% ELECTROLYTIC CAP. - SMR SERIES
C0816	54-72203-76	0.022 UF 50V +80% -20% CERAMIC CAP
C0817	54-A2207EAC-00	220 UF 16V +20% ELECTROLYTIC CAPACITOR (UVX1C221MPA)
C0818	54-55601-75	680 PF 50V +10% CERAMIC CAP
C0819	54-E4702DCF-00	0.0047 UF 50V +10% POLYESTER FILM CAPACITOR
C0820	54-01005EAF-00	1 UF/60V +20% ELECTROLYTIC CAP. - SMR SERIES
C0821	54-43000-75	30 PF 50V +5% CERAMIC CAP
C0822	54-43000-75	30 PF 50V +5% CERAMIC CAP
C0823	54-42200-75	22 PF 50V +5% CERAMIC CAP
C0824	54-42200-75	22 PF 50V +5% CERAMIC CAP
C0825	54-55601-75	680 PF 50V +10% CERAMIC CAP
C0826	54-41001-75	100 PF 50V +5% CERAMIC CAP
C0827	54-41001-75	100 PF 50V +5% CERAMIC CAP
C0828	54-C1007EAC-00	100 UF 16V +20% ELECTROLYTIC CAP
C0830	54-02206EAC-00	22 UF/18V +20% ELECTROLYTIC CAP. - SMR SERIES
C0831	54-E2203DCF-00	0.022 UF 50V +10% POLYESTER FILM CAPACITOR
CF0101	66-55601-02	SFE 5.6MB CERAMIC FILTER
CF0102	66-55601-03	TPS 5.6MB CERAMIC FILTER 5.6MHZ
CF0201	66-50360-01	CERAMIC RESONATOR 503.6 KHZ (CSB603F30)
D0101	51-08004-06 25	DIODE 1N4148
D0102	51-08004-06	DIODE 1N4148
D0103	51-08004-06	DIODE 1N4148
D0201	51-08004-08	DIODE 1N4148
D0202	51-02027-04 25	ZENER DIODE GZA 9.1Y
D0203	51-08004-08	DIODE 1N4148
D0204	51-02030-01 25	ZENER DIODE 8.2V HZ9A3 1/2W TAPED REELED PACKAGE
D0205	51-03018-01 25	DIODE IS2775 "TOSHIBA" TAPED REELED PACKAGE
D0206	51-02027-04	ZENER DIODE GZA 9.1Y
D0301	51-03028-36 25	RECTIFIER DIODE RM1Z (FOR HIGH SPEED)
D0302	51-02023-01 25	ZENER DIODE 5.1V HZ5C2
D0303	51-02028-04 25	ZENER DIODE 12V GZA12X
D0304	51-02028-04	ZENER DIODE 12V GZA12X
D0305	51-03020-02 25	DIODE S5295 G
D0306	51-03021-02 25	DIODE S5295 J TPA2 TAPED REELED PACKAGE
D0307	51-08004-08	DIODE 1N4148
D0900	51-08021-02 25	DIODE S5295 J TPA2 TAPED REELED PACKAGE
D0501	51-03017-01 25	DIODE 1N4004
D0502	51-03017-01	DIODE 1N4004
D0503	51-03017-01	DIODE 1N4004
D0504	51-03017-01	DIODE 1N4004
D0505	51-02028-04 25	ZENER DIODE GZA 8.2X
D0506	51-02027-04	ZENER DIODE GZA 9.1Y
D0507	51-03020-02	DIODE S5295 G
D0508	51-03020-02	DIODE S5295 G

LOC.	PART NO.	DESCRIPTION
D0609	51-03020-02	DIODE S6295 G
D0610	51-03020-02	DIODE S6295 G
D0611	51-03024-02	DIODE 1S1836 TPA2 TAPED REELED PACKAGE
D0802	51-08004-06	DIODE 1N4148
D0803	51-08004-06	DIODE 1N4148
D0804	51-08004-06	DIODE 1N4148
D0805	51-08004-06	DIODE 1N4148
D0806	51-08004-06	DIODE 1N4148
D0807	51-08004-06	DIODE 1N4148
D0808	51-08004-06	DIODE 1N4148
D0809	51-08004-06	DIODE 1N4148
D0810	51-08004-06	DIODE 1N4148
D0811	51-08004-06	DIODE 1N4148
D0812	51-08004-06	DIODE 1N4148
D0813	51-08004-06	DIODE 1N4148
D0814	51-02028-01	ZENER DIODE (3.9V) HZ4B2
D0815	51-08004-06	DIODE 1N4148
D0816	51-02023-01	ZENER DIODE 5.1V HZ5C2
DL0201	68-21001-06	DELAY LINE MDL-CT R22-6761 TYC-4006-TW
DL0202	68-21004-02	GLASS DELAY LINE YJD-8-S6
F0501	72-01047-01	FUSE T2A 250V 20X5MM
IC0101	67-80106-01	I.C. TDA1904P
IC0102	67-36509-01	I.C. TA8701N
IC0201	67-32016-03	I.C. TA8718N
IC0301	67-66780-02	I.C. AN6516
IC0601	67-90106-01	I.C. UPC1490HA
IC0701	67-32720-04	I.C. TC9012F-011
IC0801	67-32705-01	I.C. TC89101P
IC0802	67-90430-01	I.C. UPC674J
IC0803	67-32706-08	I.C. - TMP47C434N-3526 (CTS-140)
IC0804	67-94735-02	I.C. L7805CV
L0102	69-01813-06	PIF & AFC COIL (10 MM)
L0103	69-01812-05	PIF MATCHING COIL
L0104	69-62901-17	1.2 UH + -10% PEAKING COIL TAPED/REELED PACKAGE (AL0410ST-1R2K)
L0105	69-62901-17	1.2 UH + -10% PEAKING COIL TAPED/REELED PACKAGE (AL0410ST-1R2K)
L0106	69-01813-06	PIF & AFC COIL (10 MM)
L0107	69-01813-06	PIF & AFC COIL (10 MM)
L0108	69-62901-03	5.6 UH PEAKING COIL AL0410ST-5R8M TAPED/REELED PACKAGE
L0109	69-62901-04	16 UH PEAKING COIL AL0410ST-160M TAPED/REELED PACKAGE
L0110	69-62901-08	68 UH PEAKING COIL (AL0410ST-680K) (TAPED/REELED PACKAGE)
L0111	69-01812-05	PIF MATCHING COIL
L0112	69-31828-03	CHROMA TRAP COIL
L0113	69-62901-04	16 UH PEAKING COIL AL0410ST-160M TAPED/REELED PACKAGE
L0201	69-01817-05	BURST CLEANING COIL 10 MM
L0202	69-62901-04	16 UH PEAKING COIL AL0410ST-160M TAPED/REELED PACKAGE
L0203	69-62901-15	33 UH PEAKING COIL + -5% TAPED/REELED PACKAGE
L0301	69-62901-08	68 UH PEAKING COIL (AL0410ST-680K) (TAPED/REELED PACKAGE)
L0302	69-62901-08	68 UH PEAKING COIL (AL0410ST-680K) (TAPED/REELED PACKAGE)
L0303	69-02401-08	1 UH CHOKE COIL

LOC.	PART NO.	DESCRIPTION
L0304	69-53102-01	20 LINEARITY COIL LS-11379
L0401	69-62901-08	88 UH PEAKING COIL (AL0410ST-680K) (TAPED/REELED PACKAGE)
L0501	68-73782-01	20 LINE FILTER
L0502	68-73782-01	LINE FILTER
L0506	69-02401-07	6 UH CHOKE COIL
L0507	69-02705-02	DEGAUSSING COIL GU-1401-A
L0801	69-03601-01	10MM TANK COIL (YBTKANS-A8058HMI TYPE NO. 10K
L0802	69-62901-04	16 UH PEAKING COIL AL0410ST-160M TAPED/REELED PACKAGE
L0803	69-62901-04	16 UH PEAKING COIL AL0410ST-160M TAPED/REELED PACKAGE
L0804	69-62901-04	16 UH PEAKING COIL AL0410ST-160M TAPED/REELED PACKAGE
L0805	69-62901-04	16 UH PEAKING COIL AL0410ST-160M TAPED/REELED PACKAGE
L0806	69-62901-08	68 UH PEAKING COIL (AL0410ST-680K) (TAPED/REELED PACKAGE)
L0807	69-62901-03	5.6 UH PEAKING COIL AL0410ST-5R8M TAPED/REELED PACKAGE
LD0601	69-02001-01	25 SILICON PHOTO DIODE TPS703
LD0701	69-02006-01	30 INFRARED LED TLN111
LD0801	69-01014-06	30 LED TLR208 (RED) "TOSHIBA"
PSF101	68-18001-05	PIF SAW FILTER F10378 (38.8MHZ)
Q0101	60-30715-07	25 TRANSISTOR 2SA1015-Y
Q0102	60-30715-07	TRANSISTOR 2SA1015-Y
Q0103	60-30715-07	TRANSISTOR 2SA1015-Y
Q0104	60-40708-07	25 TRANSISTOR 2SC1815-Y
Q0105	60-40726-06	25 TRANSISTOR 2SC2717
Q0201	60-40708-07	TRANSISTOR 2SC1815-Y
Q0202	60-40708-07	TRANSISTOR 2SC1815-Y
Q0203	60-40708-07	TRANSISTOR 2SC1815-Y
Q0204	60-40708-07	TRANSISTOR 2SC1815-Y
Q0205	60-30715-07	TRANSISTOR 2SA1015-Y
Q0206	60-40708-07	TRANSISTOR 2SC1815-Y
Q0207	60-40708-07	TRANSISTOR 2SC1815-Y
Q0208	60-30715-07	TRANSISTOR 2SA1015-Y
Q0209	60-40708-07	TRANSISTOR 2SC1815-Y
Q0301	60-40733-04	25 TRANSISTOR 2SC2482
Q0302	60-40748-03	25 TRANSISTOR 2SD1554
Q0401	60-40733-04	TRANSISTOR 2SC2482
Q0402	60-40733-04	TRANSISTOR 2SC2482
Q0403	60-40733-04	TRANSISTOR 2SC2482
Q0501	60-40708-07	TRANSISTOR 2SC1815-Y
Q0502	60-10306-07	25 TRANSISTOR 2SB774T
Q0503	60-40708-07	TRANSISTOR 2SC1815-Y
Q0604	60-41303-03	25 TRANSISTOR 2SC3678-Y WITH MICA SHEET
Q0701	60-40712-08	25 TRANSISTOR 2SC2120-Y
Q0801	60-40708-07	TRANSISTOR 2SC1815-Y
Q0802	60-40708-07	TRANSISTOR 2SC1815-Y
Q0803	60-40708-07	TRANSISTOR 2SC1815-Y
Q0804	60-40708-07	TRANSISTOR 2SC1815-Y
Q0805	60-40708-07	TRANSISTOR 2SC1815-Y
Q0806	60-40708-07	TRANSISTOR 2SC1815-Y
Q0807	60-40708-07	TRANSISTOR 2SC1815-Y
Q0808	60-40708-07	TRANSISTOR 2SC1815-Y

ELECTRICAL PART LIST

LOC.	PART NO.	DESCRIPTION
R0841	52-02383-21	3.8 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0842	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0843	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0844	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0845	52-02122-21	120 OHM 1/4W + -5% CARBON FILM RESISTOR
R0846	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0847	52-02563-21	5.6 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0848	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0849	52-02333-21	3.3 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0850	52-02103-21	1 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0851	52-02103-21	1 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0852	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0853	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0854	52-02473-21	4.7 KOHM 1/4W + -5% CARBON FILM RESISTOR
S0201	64-20202-48	SLIDE SWITCH 2P2T
S0501	64-30202-23	POWER PUSH SWITCH 2P2T (SDDSA3)
S0801	64-30101-17	TACT SWITCH 1P1T (SKHHLN0002)
S0802	64-30101-17	TACT SWITCH 1P1T (SKHHLN0002)
S0803	64-30101-17	TACT SWITCH 1P1T (SKHHLN0002)
S0804	64-30101-17	TACT SWITCH 1P1T (SKHHLN0002)
S0805	64-30101-19	TACT SWITCH 1P1T (KU8HH00263)
S0806	64-20102-11	SLIDE SWITCH 1P2T HSW0847-01-010
T0301	68-28135-03	HORIZONTAL DRIVE TRANSFORMER
T0302	68-61381-02	FLYBACK TRANSFORMER (164-138U)
T0501	68-95164-02	SWITCHING POWER TRANSFORMER
VR0101	53-50520-01	500 KOHM B + -30% 50V DC SEMI-FIXED RESISTOR (RVF6P61A-6-504NI)
VR0102	53-10420-40	10 KOHM B + -30% SEMI-FIXED RESISTOR (EVN-D8A A03 B14)

LOC.	PART NO.	DESCRIPTION
VR0201	53-10320-18	1 KOHM B + -30% SEMI-FIXED RESISTOR (EVN-D8A A03 B13)
VR0202	53-30420-22	30 KOHM B + -30% SEMI-FIXED RESISTOR (EVN-D8A A03 B34)
VR0203	53-50320-22	5 KOHM B + -30% SEMI-FIXED RESISTOR (EVN-D8AA03B53)
VR0401	53-20220-05	200 OHM B + -25% SEMI-FIXED RESISTOR (RVFBW01-201)
VR0402	53-10420-24	10 KOHM B + -25% SEMI-FIXED RESISTOR (RVFBW01A-103)
VR0403	53-20220-05	200 OHM B + -25% SEMI-FIXED RESISTOR (RVFBW01-201)
VR0404	53-10420-24	10 KOHM B + -25% SEMI-FIXED RESISTOR (RVFBW01A-103)
VR0405	53-10420-24	10 KOHM B + -25% SEMI-FIXED RESISTOR (RVFBW01A-103)
VR0601	53-10320-06	1 KOHM B + -25% SEMI-FIXED RESISTOR (RVFBW01-102)
W0401	68-33301-00	300 MM BLACK (AWG 24) 1015 STRAND JUMPER WIRE
W0402	68-23301-00	300 MM BLACK (AWG 24) 1007 STRAND JUMPER WIRE
W0403	68-23301-02	300 MM RED (AWG 24) 1007 STRAND JUMPER WIRE
W0404	68-23321-04	320 MM YELLOW (AWG 24) 1007 STRAND JUMPER WIRE
W0405	68-23481-00	480 MM BLACK (AWG 24) 1007 STRAND JUMPER WIRE
W0406	68-23481-02	480 MM RED (AWG 24) 1007 STRAND JUMPER WIRE
W0407	68-23481-03	480 MM ORANGE (AWG 24) 1007 STRAND JUMPER WIRE
W0408	68-23481-06	480 MM GREEN (AWG 24) 1007 STRAND JUMPER WIRE
W0409	68-23560-06	580 MM BLUE (AWG 24) 1007 STRAND JUMPER WIRE
W0701	68-23400-02	40 MM RED (AWG 24) 1007 STRAND JUMPER WIRE
W0702	68-23400-00	40 MM BLACK (AWG 24) 1007 STRAND JUMPER WIRE
W0801	68-23401-00	400 MM BLACK (AWG 24) 1007 STRAND JUMPER WIRE
W0802	68-23401-02	400 MM RED (AWG 24) 1007 STRAND JUMPER WIRE
W0803	68-23121-02	120 MM RED (AWG 24) 1007 STRAND JUMPER WIRE
W0804	68-23121-00	120 MM BLACK (AWG 24) 1007 STRAND JUMPER WIRE
X0201	68-44331-10	CRYSTAL 4.43MHZ HC18-U 'SHEN FENG'
X0701	68-45500-02	CERAMIC RESONATOR CS8455EB
X0801	68-40001-04	CERAMIC RESONATOR 4.00MHZ (CSA400MG)

1902 S88519802 PinCusion Tx,

2 CE 3703 - Remote Control Assy - 300 pcs PKMC.
 CTM140182R V SERVICE MANUAL 200 PCS. SERVICE
 OWNERS MANUAL 300 PCS. OWN

XPO34

• The design and specifications are subject to change without notice

ELECTRICAL PART LIST

LOC.	PART NO.	DESCRIPTION	LOC.	PART NO.	DESCRIPTION
Q0808	50-40708-07	TRANSISTOR 2SC181B-Y	R0212	62-02472-21	470 OHM 1/4W +5% CARBON FILM RESISTOR
R0101	62-02200-21	2 OHM 1/4W +5% CARBON FILM RESISTOR	R0213	62-02472-21	470 OHM 1/4W +5% CARBON FILM RESISTOR
R0102	62-02223-21	2.2 KOHM 1/4W +5% CARBON FILM RESISTOR	R0214	62-02472-21	470 OHM 1/4W +5% CARBON FILM RESISTOR
R0103	62-02222-21	220 OHM 1/4W +5% CARBON FILM RESISTOR	R0215	62-02332-21	330 OHM 1/4W +5% CARBON FILM RESISTOR
R0104	62-02103-21	1 KOHM 1/4W +5% CARBON FILM RESISTOR	R0216	62-02332-21	330 OHM 1/4W +5% CARBON FILM RESISTOR
R0105	62-02223-21	2.2 KOHM 1/4W +5% CARBON FILM RESISTOR	R0217	62-02332-21	330 OHM 1/4W +5% CARBON FILM RESISTOR
R0106	62-02823-21	8.2 KOHM 1/4W +5% CARBON FILM RESISTOR	R0218	62-02183-21	1.8 KOHM 1/4W +5% CARBON FILM RESISTOR
R0107	62-02474-21	47 KOHM 1/4W +5% CARBON FILM RESISTOR	R0219	62-02183-21	1.8 KOHM 1/4W +5% CARBON FILM RESISTOR
R0108	62-02474-21	47 KOHM 1/4W +5% CARBON FILM RESISTOR	R0220	62-02332-21	330 OHM 1/4W +5% CARBON FILM RESISTOR
R0109	62-02474-21	47 KOHM 1/4W +5% CARBON FILM RESISTOR	R0221	62-02333-21	3.3 KOHM 1/4W +5% CARBON FILM RESISTOR
R0110	62-02683-21	6.8 KOHM 1/4W +5% CARBON FILM RESISTOR	R0222	62-02104-21	10 KOHM 1/4W +5% CARBON FILM RESISTOR
R0111	62-02474-21	47 KOHM 1/4W +5% CARBON FILM RESISTOR	R0223	62-02182-21	150 OHM 1/4W +5% CARBON FILM RESISTOR
R0112	62-02105-21	100 KOHM 1/4W +5% CARBON FILM RESISTOR	R0224	62-02682-21	660 OHM 1/4W +5% CARBON FILM RESISTOR
R0113	62-02105-21	100 KOHM 1/4W +5% CARBON FILM RESISTOR	R0225	62-02685-21	660 KOHM 1/4W +5% CARBON FILM RESISTOR
R0114	62-02122-21	120 OHM 1/4W +5% CARBON FILM RESISTOR	R0226	62-02564-21	66 KOHM 1/4W +5% CARBON FILM RESISTOR
R0115	62-02103-21	1 KOHM 1/4W +5% CARBON FILM RESISTOR	R0227	62-02104-21	10 KOHM 1/4W +5% CARBON FILM RESISTOR
R0117	62-02226-21	220 KOHM 1/4W +5% CARBON FILM RESISTOR	R0228	62-02824-21	82 KOHM 1/4W +5% CARBON FILM RESISTOR
R0118	62-02124-21	12 KOHM 1/4W +5% CARBON FILM RESISTOR	R0229	62-02124-21	12 KOHM 1/4W +5% CARBON FILM RESISTOR
R0119	62-02223-21	2.2 KOHM 1/4W +5% CARBON FILM RESISTOR	R0230	62-02103-21	1 KOHM 1/4W +5% CARBON FILM RESISTOR
R0120	62-02103-21	1 KOHM 1/4W +5% CARBON FILM RESISTOR	R0231	62-02682-21	660 OHM 1/4W +5% CARBON FILM RESISTOR
R0128	62-02103-21	1 KOHM 1/4W +5% CARBON FILM RESISTOR	R0232	62-02223-21	2.2 KOHM 1/4W +5% CARBON FILM RESISTOR
R0129	62-02103-21	1 KOHM 1/4W +5% CARBON FILM RESISTOR	R0233	62-02336-21	330 KOHM 1/4W +5% CARBON FILM RESISTOR
R0130	62-02332-21	330 OHM 1/4W +5% CARBON FILM RESISTOR	R0234	62-02822-21	820 OHM 1/4W +5% CARBON FILM RESISTOR
R0131	62-02561-21	66 OHM 1/4W +5% CARBON FILM RESISTOR	R0235	62-02153-21	1.5 KOHM 1/4W +5% CARBON FILM RESISTOR
R0132	62-02103-21	1 KOHM 1/4W +5% CARBON FILM RESISTOR	R0236	62-02153-21	1.5 KOHM 1/4W +5% CARBON FILM RESISTOR
R0133	62-02122-21	120 OHM 1/4W +5% CARBON FILM RESISTOR	R0237	62-02223-21	2.2 KOHM 1/4W +5% CARBON FILM RESISTOR
R0134	62-02473-21	4.7 KOHM 1/4W +5% CARBON FILM RESISTOR	R0238	62-02682-21	660 OHM 1/4W +5% CARBON FILM RESISTOR
R0136	62-02223-21	2.2 KOHM 1/4W +5% CARBON FILM RESISTOR	R0239	62-02103-21	1 KOHM 1/4W +5% CARBON FILM RESISTOR
R0138	62-02682-21	660 OHM 1/4W +5% CARBON FILM RESISTOR	R0240	62-02184-21	18 KOHM 1/4W +5% CARBON FILM RESISTOR
R0137	62-02471-21	47 OHM 1/4W +5% CARBON FILM RESISTOR	R0241	62-02103-21	1 KOHM 1/4W +5% CARBON FILM RESISTOR
R0138	62-02223-21	2.2 KOHM 1/4W +5% CARBON FILM RESISTOR	R0242	62-02104-21	10 KOHM 1/4W +5% CARBON FILM RESISTOR
R0139	62-02103-21	1 KOHM 1/4W +5% CARBON FILM RESISTOR	R0243	62-02104-21	10 KOHM 1/4W +5% CARBON FILM RESISTOR
R0140	62-02473-21	4.7 KOHM 1/4W +5% CARBON FILM RESISTOR	R0244	62-G4701CBD-00	47 OHM 1/2W +5% METAL OXIDE RESISTOR (RS1/2FB TYPE)
R0141	62-02124-21	12 KOHM 1/4W +5% CARBON FILM RESISTOR	R0245	62-02183-21	1.8 KOHM 1/4W +5% CARBON FILM RESISTOR
R0142	62-02472-21	470 OHM 1/4W +5% CARBON FILM RESISTOR	R0246	62-02223-21	2.2 KOHM 1/4W +5% CARBON FILM RESISTOR
R0143	62-02107-21	10 MOHM 1/4W +5% CARBON FILM RESISTOR	R0247	62-02823-21	8.2 KOHM 1/4W +5% CARBON FILM RESISTOR
R0144	62-02107-21	10 MOHM 1/4W +5% CARBON FILM RESISTOR	R0248	62-02393-21	3.9 KOHM 1/4W +5% CARBON FILM RESISTOR
R0145	62-G4701CBF-00	47 OHM 2W +5% METAL OXIDE RESISTOR (RS2FB TYPE)	R0249	62-02763-21	7.6 KOHM 1/4W +5% CARBON FILM RESISTOR
R0147	62-02272-21	270 OHM 1/4W +5% CARBON FILM RESISTOR	R0250	62-02382-21	380 OHM 1/4W +5% CARBON FILM RESISTOR
R0201	62-02824-21	82 KOHM 1/4W +5% CARBON FILM RESISTOR	R0251	62-02476-21	470 KOHM 1/4W +5% CARBON FILM RESISTOR
R0202	62-02103-21	1 KOHM 1/4W +5% CARBON FILM RESISTOR	R0301	62-02224-21	22 KOHM 1/4W +5% CARBON FILM RESISTOR
R0203	62-02105-21	100 KOHM 1/4W +5% CARBON FILM RESISTOR	R0302	62-02103-21	1 KOHM 1/4W +5% CARBON FILM RESISTOR
R0204	62-02334-21	33 KOHM 1/4W +5% CARBON FILM RESISTOR	R0303	62-02226-21	220 KOHM 1/4W +5% CARBON FILM RESISTOR
R0205	62-02684-21	66 KOHM 1/4W +5% CARBON FILM RESISTOR	R0304	62-02124-21	12 KOHM 1/4W +5% CARBON FILM RESISTOR
R0207	62-02274-21	27 KOHM 1/4W +5% CARBON FILM RESISTOR	R0305	62-02124-21	12 KOHM 1/4W +5% CARBON FILM RESISTOR
R0208	62-02394-21	38 KOHM 1/4W +5% CARBON FILM RESISTOR	R0306	62-B2200CCF-00 (0)	2.2 OHM 2W +5% WIRE WOUND RESISTOR (NON-INFLAMMABLE)
R0209	62-02562-21	560 OHM 1/4W +5% CARBON FILM RESISTOR	R0307	62-02472-21	470 OHM 1/4W +5% CARBON FILM RESISTOR
R0210	62-02124-21	12 KOHM 1/4W +5% CARBON FILM RESISTOR	R0308	62-02222-21	220 OHM 1/4W +5% CARBON FILM RESISTOR
R0211	62-02472-21	470 OHM 1/4W +5% CARBON FILM RESISTOR	R0309	62-02273-31	2.7 KOHM 1/2W +5% CARBON FILM RESISTOR

ELECTRICAL PART LIST

LOC.	PART NO.	DESCRIPTION
R0310	52-G2403BB-00	2.4 OHM 1/2W + -2% METAL OXIDE RESISTOR (RS1/2FB TYPE)
R0311	52-G2403CBG-00	2.4 KOHM 3W + -5% METAL OXIDE RESISTOR (NOBLE)
R0312	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0313	52-G4701CBF-00	47 OHM 2W + -5% METAL OXIDE RESISTOR (RS2FB TYPE)
R0314	52-G2701CBF-00	27 OHM 2W + -5% METAL OXIDE RESISTOR (RS2FB TYPE)
R0315	52-F4300CDE-00	4.3 OHM 1W + -5% FUSIBLE RESISTOR
R0316	52-F4300CDE-00	4.3 OHM 1W + -5% FUSIBLE RESISTOR
R0317	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0318	52-B1000CDE-00	1 OHM 1W + -5% FUSIBLE METAL FILM RESISTOR (FRN TYPE)
R0319	52-02108-21	1 MOHM 1/4W + -5% CARBON FILM RESISTOR
R0320	52-11805CFD-00	180 KOHM 1/2W + -5% CARBON COMPOSITION RESISTOR (RC1/2GF TYPE)
R0321	52-G1203CBD-00	1.2 KOHM 1/2W + -5% METAL OXIDE RESISTOR (RS1/2FB TYPE)
R0322	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0323	52-G2702CBF-00	270 OHM 2W + -5% METAL OXIDE RESISTOR (RS2FB TYPE)
R0324	52-G1203CBD-00	1.2 KOHM 1/2W + -5% METAL OXIDE RESISTOR (RS1/2FB TYPE)
R0401	52-G1504CBF-00	15 KOHM 2W + -5% METAL OXIDE RESISTOR (RS2FB TYPE)
R0402	52-02273-31	2.7 KOHM 1/2W + -5% CARBON FILM RESISTOR
R0403	52-02682-21	680 OHM 1/4W + -5% CARBON FILM RESISTOR
R0404	52-02223-21	2.2 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0405	52-G1504CBF-00	15 KOHM 2W + -5% METAL OXIDE RESISTOR (RS2FB TYPE)
R0406	52-02273-31	2.7 KOHM 1/2W + -5% CARBON FILM RESISTOR
R0407	52-02682-21	680 OHM 1/4W + -5% CARBON FILM RESISTOR
R0408	52-02223-21	2.2 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0409	52-G1504CBF-00	15 KOHM 2W + -5% METAL OXIDE RESISTOR (RS2FB TYPE)
R0410	52-02273-31	2.7 KOHM 1/2W + -5% CARBON FILM RESISTOR
R0411	52-02752-21	760 OHM 1/4W + -5% CARBON FILM RESISTOR
R0412	52-02223-21	2.2 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0414	52-02102-21	100 OHM 1/4W + -5% CARBON FILM RESISTOR
R0415	52-02102-21	100 OHM 1/4W + -5% CARBON FILM RESISTOR
R0416	52-02102-21	100 OHM 1/4W + -5% CARBON FILM RESISTOR
R0417	52-B1000CDE-00	1 OHM 1W + -5% FUSIBLE METAL FILM RESISTOR (FRN TYPE)
R0503	52-B4000DCI-00	4 OHM 5W + -10% NON-INFLAMMABLE RESISTOR (SQP TYPE)
R0505	52-02332-21	330 OHM 1/4W + -5% CARBON FILM RESISTOR
R0508	52-02333-21	3.3 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0607	52-02183-21	1.8 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0608	52-02183-21	1.8 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0609	52-02823-21	8.2 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0610	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0611	52-02883-21	8.8 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0612	52-02473-21	4.7 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0613	52-G1201CBF-00	12 OHM 2W + -5% METAL OXIDE RESISTOR (RS2FB TYPE)
R0614	52-M2200DCF-00	2.2 OHM 2W + -10% WIRE WOUND RESISTOR (KW-KNP TYPE)
R0615	52-G2701CBF-00	27 OHM 2W + -5% METAL OXIDE RESISTOR (RS2FB TYPE)
R0616	52-G0330CBF-00	0.33 OHM 2W + -5% METAL OXIDE RESISTOR (RS2FB TYPE)
R0617	52-M3901DCO-01	39 OHM 8W + -10% WIRE WOUND RESISTOR (KW-KNP TYPE)
R0618	52-11805DFD-00	180 KOHM 1/2W + -10% CARBON COMPOSITION RESISTOR (RC1/2GF)
R0619	52-11805DFD-00	180 KOHM 1/2W + -10% CARBON COMPOSITION RESISTOR (RC1/2GF)
R0620	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0621	52-G1201CBF-00	12 OHM 2W + -5% METAL OXIDE RESISTOR (RS2FB TYPE)

LOC.	PART NO.	DESCRIPTION
R0622	52-11007DFD-00	10 MOHM 1/2W + -10% CARBON COMPOSITION RESISTOR (RC1/2GF TYPE)
R0623	52-G2204CBE-00	22 KOHM 1W + -5% METAL OXIDE RESISTOR (RS1FB TYPE)
R0624	52-L1801FIX-00	100 PTC THERMISTOR PTH461A02BG 180N270
R0625	52-B1000CB0-00	1 OHM 1/2W + -5% METAL OXIDE RESISTOR (RSN TYPE)
R0626	52-B1000CD0-00	1 OHM 1W + -5% FUSIBLE METAL FILM RESISTOR (FRN TYPE)
R0601	52-02102-21	100 OHM 1/4W + -5% CARBON FILM RESISTOR
R0602	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0603	52-02156-21	150 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0604	52-02331-21	33 OHM 1/4W + -5% CARBON FILM RESISTOR
R0801	52-02164-21	15 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0802	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0803	52-02164-21	15 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0804	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0805	52-02224-21	22 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0806	52-G1204CBE-00	12 KOHM 1W + -5% METAL OXIDE RESISTOR (RS1FB TYPE)
R0807	52-02103-21	1 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0808	52-02473-21	4.7 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0809	52-02101-21	10 OHM 1/4W + -5% CARBON FILM RESISTOR
R0810	52-02224-21	22 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0811	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0812	52-02224-21	22 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0813	52-02125-21	120 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0814	52-02224-21	22 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0815	52-02334-21	33 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0816	52-02224-21	22 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0817	52-02106-21	100 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0818	52-02883-21	6.8 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0819	52-02883-21	6.8 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0820	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0821	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0822	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0823	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0824	52-02222-21	220 OHM 1/4W + -5% CARBON FILM RESISTOR
R0825	52-02883-21	6.8 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0826	52-02224-21	22 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0827	52-02223-21	2.2 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0828	52-02222-21	220 OHM 1/4W + -5% CARBON FILM RESISTOR
R0829	52-02222-21	220 OHM 1/4W + -5% CARBON FILM RESISTOR
R0830	52-02222-21	220 OHM 1/4W + -5% CARBON FILM RESISTOR
R0831	52-02222-21	220 OHM 1/4W + -5% CARBON FILM RESISTOR
R0832	52-02222-21	220 OHM 1/4W + -5% CARBON FILM RESISTOR
R0833	52-02222-21	220 OHM 1/4W + -5% CARBON FILM RESISTOR
R0834	52-02222-21	220 OHM 1/4W + -5% CARBON FILM RESISTOR
R0835	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0836	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0837	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0838	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0839	52-02474-21	47 KOHM 1/4W + -5% CARBON FILM RESISTOR
R0840	52-02104-21	10 KOHM 1/4W + -5% CARBON FILM RESISTOR

100
100
100
100
100
100
100
100

EXPLODED VIEW

CTM1401

