

ELECTRICAL SAFETY ANALYZER

User's Guide

175



175 Electrical Safety Analyzer

User's Guide

Bio-Tek[®] Instruments, Inc.
Part Number 1751000
Revision C
October 2001
Copyright © 2001
Printed in the USA

Notices

©Copyright Fluke Corporation
Fluke Biomedical
6920 Seaway Blvd.
Everett, WA 98203
Sales & Customer Service
775-883-3400 • 800-648-7952

Service and Repair
Please call for RMA number before shipping
1420 75th Street SW
Everett, WA 98203
888-99FLUKE (888-993-5853) • 425-446-5560

<http://www.flukebiomedical.com> • sales@flukebiomedical.com

All Rights Reserved

This publication is protected by copyright and all rights are reserved. No part of this manual may be reproduced or transmitted in any form, or by means electronic or mechanical, including photocopying and recording, for any purpose other than the purchaser's personal use, without the written permission of the product manufacturer.

Restrictions and Liabilities

Information in this document is subject to change, and does not represent a commitment by Bio-Tek[®] Instruments, Inc. Changes made to the information in this document will be incorporated in new revisions of the publication. No responsibility is assumed by Bio-Tek for the use or reliability of software or equipment that is not supplied by Bio-Tek, or its affiliated dealers.

Document Revision Record

Rev.	Date	Change
A	5/99	Release to production
B	8/00	Added Warning due to dual lead leakage in the Preface.
C	10/01	Added Current Consumption information to Instrument Specifications (page 3). Added Note to Step 4 of Front Panel Description regarding proper operation of three-position switch (page 5). Revised "open neutral" neon lamp configuration on Power Outlet Connections chart, and added Note advising review of power outlets that do not indicate "correct wiring" (page 7).

Warranty

This Warranty is limited and applies only to new products, except for computer-based software, which is covered under a separate Warranty Policy, manufactured by Bio-Tek® Instruments, Inc. ("Bio-Tek"). Bio-Tek makes no warranty whatsoever regarding the condition of used products. Bio-Tek warrants the instrument (hereinafter collectively referred to as "Products" or "Product") for a period of one (1) year from the original purchase date against defective materials or workmanship. This Warranty is limited to the original purchaser (the "Purchaser") and cannot be assigned or transferred. All claims under this Limited Warranty must be made in writing to Bio-Tek, Attention: Service Department. Purchaser must ship the Product to Bio-Tek, postage pre-paid. Bio-Tek shall either repair or replace with new or like-new, at its option and without cost to the Purchaser, any Product which in Bio-Tek's sole judgment is defective by reason of defects in the materials or workmanship.

This Warranty is VOID if the Product has been damaged by accident or misuse, or has been damaged by abuse or negligence in the operation or maintenance of the Product, including without limitation unsafe operation, operation by untrained personnel, and failure to perform routine maintenance. This Warranty is VOID if the Product has been repaired or altered by persons not authorized by Bio-Tek, or if the Product has had the serial number altered, effaced, or removed. This Warranty is VOID if any of the Products has not been connected, installed or adjusted strictly in accordance with written directions furnished by Bio-Tek. Batteries, fuses, lightbulbs, and other "consumable" items used in any of the Products are not covered by this Warranty. Software utilized in conjunction with any of the Products is not covered by the terms of this Warranty but may be covered under a separate Bio-Tek software warranty.

We will continue to stock parts for a maximum period of five (5) years after the manufacture of any equipment has been discontinued. Parts shall include all materials, charts, instructions, diagrams, and accessories that were furnished with the standard models.

THIS WARRANTY CONTAINS THE ENTIRE OBLIGATION OF BIO-TEK INSTRUMENTS, INC., AND NO OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY ARE GIVEN. PURCHASER AGREES TO ASSUME ALL LIABILITY FOR ANY DAMAGES AND/OR BODILY INJURY OR DEATH WHICH MAY RESULT FROM THE USE OR MISUSE OF ANY EQUIPMENT OR INSTRUMENT BY THE PURCHASER, HIS EMPLOYEES, AGENTS, OR CUSTOMERS, OTHER THAN THE EXPRESS WARRANTY CONTAINED HEREIN. WE SHALL NOT BE RESPONSIBLE FOR ANY DIRECT OR CONSEQUENTIAL DAMAGES OF ANY KIND. THIS WARRANTY SHALL NOT BE CHANGED OR MODIFIED IN ANY WAY WITHOUT THE EXPRESS WRITTEN PERMISSION OF AN OFFICER OF BIO-TEK INSTRUMENTS, INC.

Safety Considerations

General

This instrument and related documentation must be reviewed for familiarization with safety markings and instructions before operation.

Safety Symbols

WARNING! The “**WARNING!**” sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a “**WARNING!**” sign until the indicated conditions are fully understood and met.

CAUTION: The “**CAUTION:**” sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or the entire instrument. Do not proceed beyond a “**CAUTION:**” sign until the indicated conditions are fully understood and met.



The symbol to the left is the operator’s manual symbol. When you see this symbol on the instrument, refer to the operator’s manual.

Warnings and Cautions

WARNING! Disconnect all patient connections before connecting the device to be tested to the analyzer.

Continued connection may jeopardize patient safety by possible application of measurement currents.

CAUTION: Be sure that the device under test power requirements are within the capabilities of the safety analyzer, labeled as 15 amps at 120 volts and 10 amps at 240 volts.

The analyzer requires adapter cables to match the appropriate connector for line voltages other than 120V.

CAUTION: The 175 is not designed for continuous measurements. Do not leave the device under test connected and drawing high load current for extended periods.

To maintain its small handheld size, the analyzer was not designed to provide its high current capability continuously and may overheat.

CAUTION: Be sure to pause in the off (middle) position when switching polarity from normal to reverse.

Inductive loads of the device under test may create high voltage transients when trying to reverse the direction of current flow instantaneously.

WARNING! Dual lead leakage must be performed with a Red Test Lead (Bio-Tek part numbers 48385 or 48387) in the jack labeled "Dual". The use of a black test lead in the "Dual" jack may result in a blown internal fuse and false readings of 000 to 002 μA , requiring the unit to be returned for servicing.

Table of Contents

Notices	<i>iii</i>
All Rights Reserved.....	<i>iii</i>
Restrictions and Liabilities.....	<i>iii</i>
Document Revision Record	<i>iv</i>
Warranty.....	<i>v</i>
Safety Considerations	<i>vi</i>
General.....	<i>vi</i>
Safety Symbols.....	<i>vi</i>
Warnings and Cautions.....	<i>vii</i>
Introduction to the Bio-Tek 175.....	1
Key Features.....	2
Standard Accessories	2
Optional Accessories.....	2
Instrument Specifications.....	3
Front Panel Description.....	4
Figure 1: Bio-Tek 175 Electrical Safety Analyzer	4
Using the Analyzer	7
Preparing for Use	7
Verifying the Power Outlet Connections.....	7
Measuring the Line Voltage.....	8
Measuring the Chassis Grounding Resistance.....	8
Measuring the Device's Current.....	9
Measuring Leakage Currents	9
Measuring Ground Leakage Currents	9
Measuring Chassis (Enclosure) Leakage Currents	9
Point-to-Point Measurements.....	10
Measuring Leakage	10
Measuring Resistance	11
Theory of Operation.....	12
Figure 2: Block Diagram of Typical DUT.....	13
Maintenance and Calibration	19

Introduction to the Bio-Tek 175

The Bio-Tek 175 *Electrical Safety Analyzer* is a highly versatile and portable instrument. It is used for the basic electrical safety evaluation of electrical systems, medical devices and physiological instrumentation. Its compact handheld size makes it an ideal addition to a service technician or engineer's tool box for that "after service test" as well as serving as a bench top instrument for the laboratory. It does not sacrifice functions or accuracy, and its low cost permits putting one on each bench.

The analyzer is simple to use. A single master function switch, directly labeled with the test to be performed, leads the user through a complete measurement procedure. A single range meter for each measurement avoids potential erroneous readings.

The analyzer utilizes simple, yet sophisticated, electronics for true RMS measurement of current and voltage. User-selectable input impedance uses the AAMI ES1-1993 or IEC 601-1 test load to compensate for high-frequency components in the measurement. Resistance measurements are made with a four-wire Kelvin bridge to eliminate errors due to cable length and connector resistance.

Unique to the 175 is its capability to make a broad range of point-to-point measurements. These include leakage current and/or voltage gradients and resistance between two points. Thus, the analyzer provides the additional versatility for evaluation of electrical systems, system installation, separate components, transducers, and conventional leakage current measurements.

Key Features

- Handheld instrument
- Test power line integrity
- Line voltage
- Instrument current
- Grounding resistance via 4-wire method
- Ground leakage current
- Enclosure (chassis) leakage current
- Voltage gradients
- Device-to-device resistance
- Device-to-device leakage current
- True RMS measurement
- AAMI or IEC 601-1 Test Load Switch

Standard Accessories

DESCRIPTION	PART #
User's Guide	1751000
8-Foot Black Cable – with large clamp	48386

Optional Accessories

DESCRIPTION	PART #
16-Foot Black Cable – With Large Clamp	48384
8-Foot Red Cable – With Large Clamp	48385
16-Foot Red Cable – With Large Clamp	48387
Soft Carrying Case	97148
220V Adapter Kit	1800001

Instrument Specifications

Line Voltage

Range 90 - 240 VAC 50/60 Hz
Accuracy $\pm 3\%$ of reading, ± 1 LSD

Load Current

Range 1 - 19.99 Amps
Accuracy $\pm 5\%$ of reading, ± 1 LSD

Ground Resistance

Range 0.01 - 19.99 Ohms
Accuracy $\pm 1\%$ of reading, ± 1 LSD
Current source 10 mA DC
Type 4 wire bridge

Leakage Current

Range 0 - 1, 999 μ A
Accuracy:
DC and 25 Hz to 1 kHz $\pm 1\%$ of reading, ± 1 LSD
1.0 kHz to 100 kHz $\pm 2.5\%$ of reading, ± 1 LSD
100 kHz to 1 MHz $\pm 5\%$ of reading, ± 1 LSD
Type measurement True RMS
Impedance 1000 Ω , AAMI ESI 1993, or
1000 Ω , IEC 601-1

Current Capacity

Line 90 to 140 volts 15 Amps; max. on time 10 min.
Line over 140 volts 10 Amps

Current Consumption

ESA 175 0.1 Amps @ 120 Volts - 60 Hz

Environmental

Operating Temperature 15-40°C
Storage Temperature -20 to 50°C
Relative Humidity Max. 80% at temperatures up to
31°C, decreasing linearly to 50% at 40°C
Mains voltage range 90 to 240 Volts

Front Panel Description

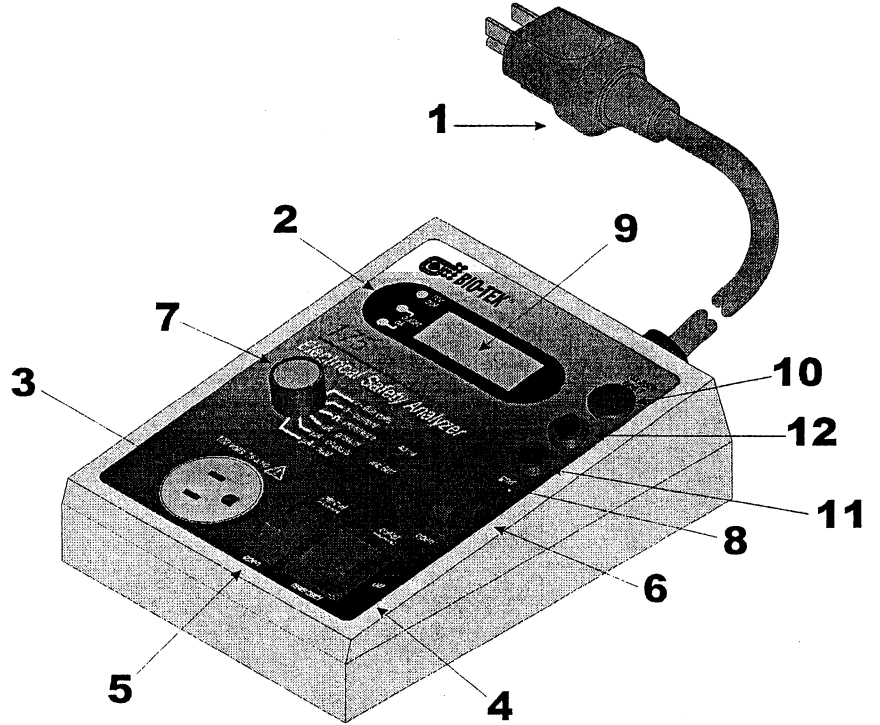


Figure 1: Bio-Tek 175 Electrical Safety Analyzer

1. **POWER CORD** supplies power to the Electrical Safety Analyzer and to the device under test (DUT). The measurement circuits are energized when the power cord is plugged into an outlet. There is no on/off switch.
2. **OUTLET INDICATORS** verify the polarity and wiring of the outlet to which the Analyzer is connected. Only correctly wired outlets should be used. Not applicable to isolated power systems.

3. **TEST RECEPTACLE** supplies power to the device under test (DUT). This outlet is powered if the outlet switch is set to normal or reversed, and **NEUTRAL** is **CLOSED**.

4. **OUTLET SWITCH** with center **OFF** position permits testing with both the **NORMAL (FORWARD)** and **REVERSED** polarity of the line. *It is recommended that the switch be paused in the center OFF position before changing polarity.*

Note: Failure to pause the three-position switch in the OFF position may cause switch damage or blow the internal pico fuse.

5. **NEUTRAL SWITCH** permits making leakage current measurements under the **OPEN** neutral condition as required by UL and IEC.

6. **GROUND** switch permits opening the ground to the device for leakage current measurements.

7. **FUNCTION SWITCH** provides direct, one-step selection of the measurement to be made. These are line volts, instrument current, grounding resistance, as well as ground (internal) and chassis (external) leakage currents. A **dual** position is provided to measure leakage current between two points or Ground Wire Resistance between two points.

8. **TEST LOAD SELECTION SWITCH** is used to select either AAMI ES-1 1993 or IEC 601-1 Input Impedance and Frequency Response of all Leakage Current measurements.

9. **METER** is a large, ½ inch, high-contrast LCD, 3½-digit display of the measured parameter. This will read up to 1999 with decimal points added where required.

10. **FUSE** provides DUT receptacle overload protection.
11. **CHASSIS CONNECTOR** provides the means for inputting the **CHASSIS CABLE** with its clip for connection to the DUT's chassis or enclosure. The chassis ground resistance is measured with the **FUNCTION** switch in the **RESISTANCE** position, and the chassis leakage current is measured in the **CHASSIS** position.
12. **DUAL CONNECTOR** is used to make point-to-point measurements. For leakage and voltage measurements, the **black cable** is attached to the **CHASSIS** connector, and the **red cable** to the **DUAL CONNECTOR**. For point-to-point resistance measurements, the **black cables** are attached to the **DUAL** and **CHASSIS** connectors.

Using the Analyzer

Preparing for Use

WARNING! To ensure total safety to the patient, disconnect all patient connections to the device to be tested before starting.

As it is best to start from the same position each time, place the analyzer's switches in the following initial positions:

FUNCTION switch	LINE VOLTS
NEUTRAL switch	CLOSED
OUTLET switch	OFF [center]

Plug the 175 into a properly rated outlet. The analyzer is equipped with a hospital-grade power plug. Grounding reliability can only be achieved when the analyzer is connected to an equivalent power receptacle marked "Hospital Grade." Grounding is important for personnel safety and to make some of the tests offered by the analyzer. **Do not circumvent for any reason.**

Verifying the Power Outlet Connections

Note: Not applicable to isolated power systems. Three neon lamps provide indication of the polarity and condition of the outlet being used, as determined by the following chart.

REV	○	●	○	○	○	●
	●	●	●	○	○	○
OK	●	○	○	○	●	●
	correct wiring	reverse polarity	open ground	open hot	open neutral	hot/ground reversed

Note: Power outlets that do not indicate "correct wiring" should be reviewed and corrected by a qualified electrician.

If the line checks OK, plug the device to be tested into the analyzer's line receptacle. If the line is found faulty, correct the problem before proceeding.

Measuring the Line Voltage

From the recommended start position, with the **FUNCTION** switch in the **LINE VOLTS** position, the meter will display the line voltage with a resolution of one volt. With the **POLARITY** switch in the **NORMAL** position and the DUT turned on, the meter display will continue to read line voltage but under the load of the device being tested. Depending on the device's operating current and the electrical supply wiring, the voltage differential may be significant. The value under load should be checked against the device's ratings, to ensure that the actual value remains within prescribed limits. An excessive drop also suggests that a dedicated line of increased capacity should be run to the instrument.

Measuring the Chassis Grounding Resistance

We recommend that the chassis ground test be run before any other test which might place potentially hazardous voltages and currents on the chassis of a miswired or broken device. This test is only applicable to devices utilizing three-wire (grounded) power cords. Connect the **black cable** to the **CHASSIS** connector on the front panel of the analyzer. Clamp the clip of the cable to the DUT's exposed chassis or the enclosure if conductive. Care should be taken to ensure that bare metal is reached and that both jaws of the clip are in contact with the chassis. Metal labels or incidental conductive hardware should not be used for this test.

If a non-conducting enclosure is used, and no chassis is readily accessible, a safety ground terminal can be used.

Once connection is made, rotate the **FUNCTION** switch to **RESISTANCE** and read its value directly in ohms to 19.99 ohms. This test is best made with the **POLARITY** switch in the **OFF (center)** position.

Measuring the Device's Current

Switch the FUNCTION switch to CURRENT. The meter will display the device's current to 19.99 Amperes. The POLARITY switch should be in NORMAL, NEUTRAL CLOSED, and the device should be turned on and placed in its maximum load condition to obtain the proper reading. Logging this data may help in spotting problems early by noting changes in values.

Measuring Leakage Currents

Measuring Ground Leakage Currents

The earth leakage current is the current that flows normally in the ground wire of the device and thus only applicable to devices utilizing three-wire (grounded) power cords. See section entitled "Theory of Operation" for additional discussion on earth leakage current. The connection is made internally in the 175, so no external connectors are required for this test.

The current is measured by switching the FUNCTION switch to GROUND. The leakage current will be displayed to 1999 μ A (microAmperes). Measurement should be made under all combinations of the POLARITY switch, NORMAL and REVERSE, NEUTRAL switch, CLOSED and OPEN and the device power turned ON and OFF. *Be sure to pause in the off (middle) position when switching from normal to reverse.* Power to the outlet will be OFF with NEUTRAL open.

Measuring Chassis (Enclosure) Leakage Currents

The chassis [enclosure] leakage current is the current that flows between the conductive chassis or enclosure and earth (ground) measured through a 1,000 ohm impedance.

Connect the black cable to the CHASSIS connector on the front of the Analyzer. Clamp the clip on the cable in turn to accessible conductive sections of the chassis and the enclosure. Metal labels or incidental conductive hardware are not applicable for this test.

If a non-conducting enclosure is used, present standards require connection to the enclosure via a 200 cm² conductive foil in intimate contact with the enclosure. This can be accomplished with a 14 x 14 cm (5.5 x 5.5 in) piece of aluminum foil taped to the surface and the cable clipped to the foil.

To make the measurement, place the FUNCTION switch in the chassis position and read the display in microAmperes. The reading should be made under all combinations of the POLARITY switch, NORMAL and REVERSE, NEUTRAL switch, CLOSED and OPEN, GROUND CLOSED and LIFTED and the device power turned ON and OFF. *Be sure to pause in the off (middle) position when switching from normal to reverse.* Power to the outlet will be OFF with NEUTRAL open.

Point-to-Point Measurements

Measuring Leakage

The 175 provides the capability of making **leakage current** between selected points, otherwise known as a dual lead measurement. For leakage current measurements, connect the **black cable** to the CHASSIS connector and the **red cable** to the DUAL connector. With the FUNCTION switch in the DUAL position, clip the two cables to the two points for which the leakage current is to be measured. The meter will display the leakage current between the two points to 1999 μA . The number displayed is also the voltage gradient in millivolts between the two points based on a volt meter with an input impedance of 1000 Ω .

Measuring Resistance

In addition, the 175 can make **resistance measurements** between selected points. If electrical devices are involved, it is desirable that they be turned off. Connect two **black cables** to the **CHASSIS** and **DUAL** connectors, and clip onto the two points to be measured. Set the **FUNCTION** switch to **RESISTANCE**, and the display will read the resistance between the two points. To compensate for possible DC components in the leakage current flowing between the two points, reverse the two clips and average the readings. **Note:** It is necessary to remove any device connected to the device receptacle in the analyzer to make this measurement.

Theory of Operation

This section reviews the parameters measured by the 175 electrical analyzers, how they occur, and typical values found.

Figure 2 is a block diagram of a typical line-operated instrument with patient connections. All measured parameters are labeled for discussion. Understanding the mechanism that creates these parameters should be helpful in investigating and resolving problems that may arise, thus ensuring a safer environment. It should be recognized that these voltages and currents are a natural phenomenon, and their presence within reasonable limits does not constitute a hazard. A significant change from previous measurements or from the device specification should be carefully reviewed with suspicion.

LINE VOLTAGE [VL] is the mains power supplied by the electrical distribution system of the hospital. It is shown as a three-wire system of HOT, NEUTRAL and GROUND with NEUTRAL, like GROUND, returned to true earth at their entry into the building. The voltage measured will depend upon :

- The power utility company's output and distribution to the hospital
- The distribution system within the hospital, primarily a function of age where older systems have marginal capacity for the electrical needs of today's equipment
- The load on the line being measured; not only that of the device under test, but of other devices on the same line.

The 175 measurement is made between the HOT and NEUTRAL wires via transformer coupling to isolate the measuring circuits from the line. As recommended, measurement of the line voltage with the device under test OFF and then ON will indicate whether the line is adequate for the device. A large drop may suggest that a dedicated line of higher amperage should be run in for the device.

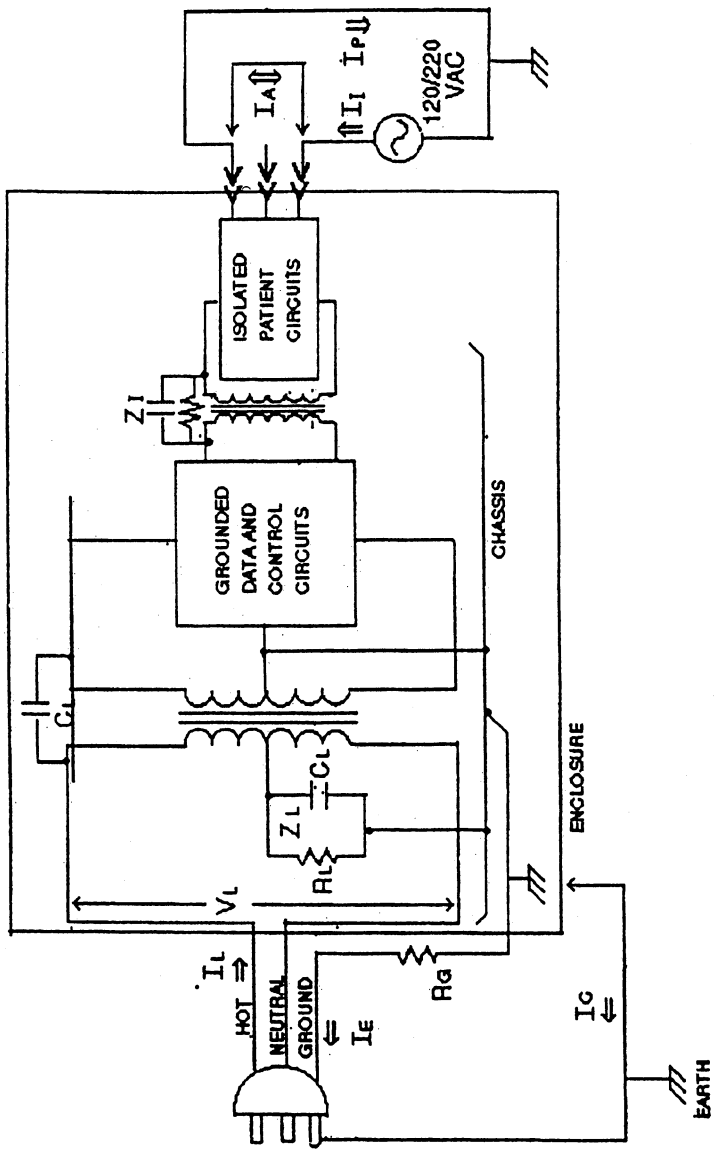


Figure 2: Block Diagram of Typical DUT

INSTRUMENT CURRENT [I_L] is the current used by the device under test. When turned on, the device should be operated in its various modes to determine the worst condition to track. Verify that the device under test current is within the current rating of the 175 being used.

Measurement is made in the HOT wire via transformer coupling to ensure that the total current is measured, as it is possible that the NEUTRAL and GROUND wire could share the return path.

GROUND WIRE RESISTANCE [RG] (grounding resistance) is the resistance from the device's conductive "grounded" chassis to the grounding terminal on the receptacle in which it is plugged. The resistance is largely composed of the GROUND wire in the power cable and is directly proportional to its length. See *Table 1* for typical values for a 10-foot cable. The resistance measurement also includes the junction resistance in connecting the wire at both ends, and the bulk resistance of the chassis from the grounding point to the point of measurement.

Table 1. Ground Resistance of 10-Foot Power Cable
(will vary slightly with wire stranding)

WIRE SIZE AWG	RESISTANCE MILLIOHMS
18	64
16	41
14	25

Underwriters Laboratory (UL) limits the ground resistance to 100 milliohms (0.1 ohms) for new products, and National Fire Protection Association (NFPA) to 150 milliohms, or 500 milliohms for devices in the field. Maintaining a low resistance is important to protect against the chassis becoming "hot" as a result of an internal fault causing current to flow to the chassis. The resulting voltage drop across the ground wire will raise the potential of the chassis with respect to the local ground and thus create a potential hazard.

Because of the low values of resistance being measured, the 175 utilizes a four-wire Kelvin bridge to make the measurement. This avoids the introduction of errors due to contact resistance of the cable connectors and to the length of the test cable. Resistance is measured between the clip on the black chassis cable and the grounding pin receptacle of the 175.

GROUND LEAKAGE CURRENT [I_E] (internal chassis current) is the current that flows in the GROUND wire of the power cable to return the chassis leakage current to true earth ground. This current does not constitute a hazard as long as the ground wire remains intact and the current does not become excessive. This could occur by a major fault, resulting in the ground wire sharing the load current with the neutral wire or supplying the total return. In addition to the rise of the chassis potential with respect to the local ground reference, the local ground reference can rise with respect to true earth as established by the cold water pipes. It should be pointed out that this current becomes the chassis leakage current for conductive enclosure when tested under open ground condition as discussed below.

Leakage current is due to the proximity of the hot wire or line potential components to the chassis represented by Z_L , a combination of capacitance, C_L , and resistance, R_L , components. Particular sources of this current are as follows:

- **Power transformers and motors with large winding masses in close proximity to large conductive masses which are physically mounted to the chassis.** Such leakage can be both capacitive, across a dielectric, and resistive through conductive flux residue or poor insulation.
- **Line filters installed to protect against conductive EMI, particular in newer computerized devices.** These components include real capacitance from both the hot and neutral wires to ground. Typical leakage currents are in the 100 to 500 μA range although special low leakage units, down to 50 μA , are available, specifically targeted for the medical device industry.

- **Switching power supplies with significant electronics directly connected to the power line, and complicated by the introduction of the higher switching frequencies used in the supply.**
- **Power cable with the parallel run of the hot wire in intimate contact with the ground wire.** Leakage current is dependent upon wire gauge, insulation dielectric, and length. Typical values for a ten-foot cable can range from 10 to 15 μA . A special low leakage cable is available with comparative leakage of 3 to 4 μA .

The measurement is made using the 1000-ohm load placed directly in series with the ground wire. Open neutral will usually represent the worst case.

CHASSIS [ENCLOSURE] LEAKAGE CURRENT [IC], also referred to as dual leakage current, flows between the accessible conductive chassis or enclosure and earth ground. As stated above, under the condition of an open ground, this current is the same as the earth current. With ground intact, the current should be very low, reflecting the milliohm impedance of the ground wire paralleling the 1000-ohm load.

Differentiation between the earth and chassis currents is made due to the wide use of insulated enclosures today. Therefore, there is no accessibility to a conductive chassis. Under these conditions the earth current represents total leakage current, while the chassis current, measured with a 14X14 cm piece of foil placed in intimate contact with the enclosure, provides indication of potential hazard due to contact. Capacitance between the chassis and the foil will determine the current measured, which usually will be low.

The 175 measures chassis leakage from the exposed metal part on the DUT, through the black cable and the AAMI load, back to the ground. Measurement should be made under all conditions, particularly with ground lifted and open neutral, which usually represents the worst case.

DUAL MEASUREMENT capability is provided to extend the use of the 175 to that of:

- **Ohmmeter** capable of making resistance measurements in the milliohm range for chassis bonding measurements.
- **Low impedance (1,000 Ω) voltmeter** as specified by the NFPA, with a range to 1,999 mV.
- **1,000 Ω microAmmeter** to measure the leakage current between two devices or between the DUT and a local ground reference. Range is to 1,999 μ A.

RESISTANCE MEASUREMENTS between two points are made to verify the integrity of permanently installed equipment whose ground cannot be broken to measure the chassis leakage current. These are usually high-power devices which can have high leakage currents and depend on the bonding of all chassis to a common point for safety.

The resistance between two points is measured in the RESISTANCE mode of the FUNCTION switch, utilizing two **black cables** for input leads through the CHASSIS and DUAL connectors. Care needs to be exercised to ensure that ground connections do not provide parallel measurement circuits causing erroneous results. This is accomplished by not connecting any device to the 175 instrument receptacle.

Measurement is made with 10 mA DC current and is highly resistant to AC currents flowing between the measurement points, as a result of chassis leakage current from either or both devices. However, such leakage current may have a DC component from rectification within the instrument. This DC current adds and subtracts from the measurement current resulting in some error. This can be corrected by reversing the connections and averaging the two readings.

LEAKAGE CURRENT AND VOLTAGE GRADIENT between two points is also measured for permanently installed equipment as additional verification of the integrity of the installation. These measurements are equivalent, as the relationship between volts and current across 1,000 Ω is one mV per μA .

Measurement is made from the DUAL position of the FUNCTION switch with one black cable in the CHASSIS connector and a red cable in the DUAL connector as meter inputs.

The measurement circuit is isolated from ground and, to be maintained, must avoid having a device plugged into the Analyzer's receptacle. These should be removed during any dual measurements.

Connection of the two cables to the surface of choice will result in direct display of the leakage current or gradient. Measurement is made to 1999 μA or 1999 mV, respectively.

Maintenance and Calibration

Your 175 needs little maintenance or special care; however, it is a calibrated measuring instrument and should be treated as such. Avoid dropping the instrument or other mechanical abuse that could cause a shift in the calibrated settings.

CLEANING the analyzer should be done occasionally with a damp cloth and a mild detergent. Care should be taken to avoid the entrance of liquids.

CABLES should similarly be wiped down with the same care, and inspected for damage and deterioration of the insulation. The cable entrance to their connectors should be checked for integrity of the cable clamp and strain relief.

CALIBRATION of the 175 is best done at the factory on a yearly schedule, as we are equipped with the appropriate tools and reference instruments traceable to the National Institute of Standards and Technology (NIST).

When returning the analyzer, first call

Service and Repair
1420 75th Street SW
Everett, WA 98203
888-99FLUKE (888-993-5853) • 425-446-5560
<http://www.flukebiomedical.com> • sales@flukebiomedical.com

175