

Making High Accuracy Temperature Measurements with the 3499A/B/C Switch and the 34401A Digital Multimeter

Application Note 1460

Introduction

You can use an Agilent 3499A/B/C switch/control unit with a 34401A digital multimeter (DMM) and an external isothermal terminal panel, or “patch panel,” such as the E1586A rack-mount terminal, available from VXI Technology (www.vxitech.com), to make thermocouple temperature measurements. Using the E1586A isothermal terminal panel, you can make measurements with less than $\pm 0.6^{\circ}\text{C}$ error. Relative measurements are better than $\pm 0.4^{\circ}\text{C}$ across 39 channels. For more information on using the 3499 switch with a 34401A DMM and software for temperature conversions, see Application Note 1459, *How to Program the 3499A/B/C Switch and the 34401A Digital Multimeter for Scanning Measurements*.

This application note explains how to wire the E1586A isothermal panel and use it to make high-accuracy temperature measurements with a 3499A/B/C switch and a 34401A DMM.

Wiring the E1586A isothermal panel

The E1586A isothermal panel is designed for up to 32 channels with three wires each (Hi, Lo, Gnd), and it comes from the factory with the front-panel

markings for these three-wire channels. You can use the E1586A panel with the 3499A switch for up to 39 thermocouple channels, 2 wires each, with one N2260A 40-channel MUX. However, the connections to achieve the 39 channels do not follow the normal markings on the E1586's front panel. Panels manufactured after Jan. 1, 2003 also come with a silk-screened diagram on the rear of the panel for up to 48 two-wire channels. To use these two-wire markings with the N2260A, remove the two screws that hold the front panel in place, turn the panel over (left to right) and replace the screws. On this panel face (aluminum background), the channels are divided into two sections (left and right), with 24 channels each. One E1586A panel can accommodate one N2260A for a maximum of 39 channels of thermocouple measurements. Channel 00 is used as the reference temperature.

To wire the panel to a N2260A module, you need two SCSI cables: one cable for channels 00 to 20 and another cable for channels 21 to 39. One channel (for this example we chose channel 00 of the N2260A) is required for the thermistor reference on the E1586A, and therefore, each N2260A will provide 39 channels of temperature measurements.

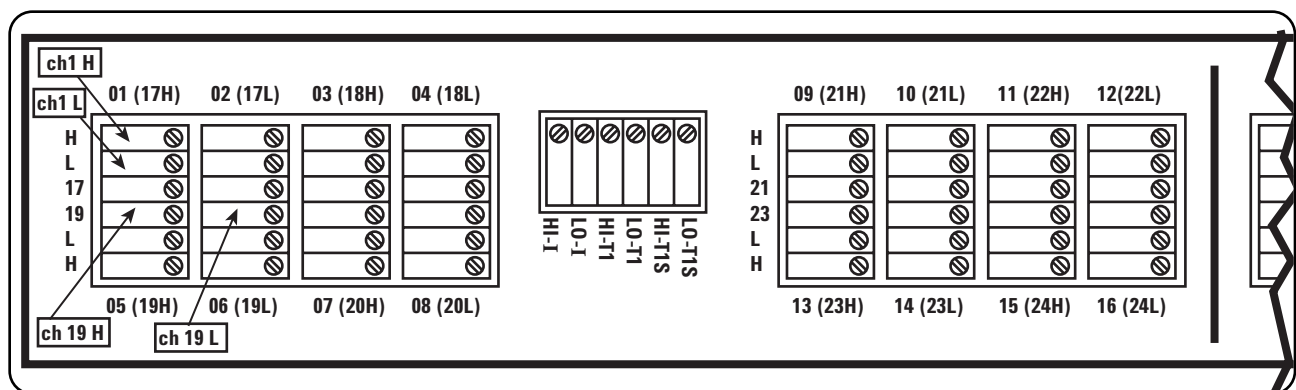


Figure 1: Left side of the E1586A terminal panel, shown with two-wire markings

N2296A		N2260A		Left Panel E1586A		Twisted pair		N2296A		N2260A		Right panel E1586A	
Pinout	Channel 00-20	Painted J19	Aluminum J19	First color is solid color		Pinout	Channel 21-39	Pinout J20	Pinout J20				
2A 1A	Ch 00 H Ch 00 L	1-Hi 1-Lo	1-Hi 1-Lo	Orange/Pink Pink/Orange			GND GND	Trig Gnd	Trig Gnd				
2B 1B	Ch 01 H Ch 01 L	0 HI 0 LO	Ch 01 H Ch 01 L	Brown/White White/Brown		18B 17B	Ch 21 H Ch 21 L	16 HI 16 LO	Ch 01 H Ch 01 L				
2C 1C	Ch 02 H Ch 02 L	1 HI 1 LO	Ch 02 H Ch 02 L	Brown/Orange Orange/Brown		18C 17C	Ch 22 H Ch 22 L	17 HI 17 LO	Ch 02 H Ch 02 L				
4A 3A	Ch 03 H Ch 03 L	2 HI 2 LO	Ch 03 H Ch 03 L	Brown/Yellow Yellow/Brown		20A 19A	Ch 23 H Ch 23 L	18 HI 18 LO	Ch 03 H Ch 03 L				
4B 3B	Ch 04 H Ch 04 L	3 HI 3 LO	Ch 04 H Ch 04 L	Brown/Blue Blue/Brown		20B 19B	Ch 24 H Ch 24 L	19 HI 19 LO	Ch 04 H Ch 04 L				
4C 3C	Ch 05 H Ch 05 L	4 HI 4 LO	Ch 05 H Ch 05 L	Brown/Violet Violet/Brown		20C 19C	Ch 25 H Ch 25 L	20 HI 20 LO	Ch 05 H Ch 05 L				
6A 5A	Ch 06 H Ch 06 L	5 HI 5 LO	Ch 06 H Ch 06 L	Tan/Brown Brown/Tan		22A 21A	Ch 26 H Ch 26 L	21 HI 21 LO	Ch 06 H Ch 06 L				
6B 5B	Ch 07 H Ch 07 L	6 HI 6 LO	Ch 07 H Ch 07 L	Tan/White White/Tan		22B 21B	Ch 27 H Ch 27 L	22 HI 22 LO	Ch 07 H Ch 07 L				
6C 5C	Ch 08 H Ch 08 L	7 HI 7 LO	Ch 08 H Ch 08 L	Tan/Orange Orange/Tan		22C 21C	Ch 28 H Ch 28 L	23 HI 23 LO	Ch 08 H Ch 08 L				
8A 7A	Ch 09 H Ch 09 L	8 HI 8 LO	Ch 09 H Ch 09 L	Tan/Yellow Yellow/Tan		24A 23A	Ch 29 H Ch 29 L	24 HI 24 LO	Ch 09 H Ch 09 L				
10A 9A	Ch 10 H Ch 10 L	9 HI 9 LO	Ch 10 H Ch 10 L	Tan/Blue Blue/Tan		26A 25A	Ch 30 H Ch 30 L	25 HI 25 LO~	Ch 10 H Ch 10 L				
10B 9B	Ch 11 H Ch 11 L	10 HI 10 LO	Ch 11 H Ch 11 L	Tan/Violet Violet/Tan		26B 25B	Ch 31 H Ch 31 L	26 HI 26 LO	Ch 11 H Ch 11 L				
10C 9C	Ch 12 H Ch 12 L	11 HI 11 LO	Ch 12 H Ch 12 L	White/Pink Pink/White		26C 25C	Ch 32 H Ch 32 L	27 HI 27 LO	Ch 12 H Ch 12 L				
12A 11A	Ch 13 H Ch 12 L	12 HI 12 LO	Ch 13 H Ch 13 L	White/Orange Orange/White		28A 27A	Ch 33 H Ch 33 L	28 HI 28 LO	Ch 13 H Ch 13 L				
12B 11B	Ch 14 H Ch 14 L	13 HI 13 LO	Ch 14 H Ch 14 L	White/Green Green/White		28B 27B	Ch 34 H Ch 34 L	29 HI 29 LO	Ch 14 H Ch 14 L				
12C 11C	Ch 15 H Ch 15 L	14 HI 14 LO	Ch 15 H Ch 15 L	White/Blue Blue/White		28C 27C	Ch 35 H Ch 35 L	30 HI 30 LO	Ch 15 H Ch 15 L				
14A 13A	Ch 16 H Ch 16 L	15 HI 15 LO	Ch 16 H Ch 16 L	White/Gray Grey/White		30A 29A	Ch 36 H Ch 36 L	31 HI 31 LO	Ch 16 H Ch 16 L				
14B 13B	Ch 17 H Ch 17 L	0 G 1 G	Ch 17 H Ch 17 L	Brown/Pink Pink/Brown		30 B 29B	Ch 37 H Ch 37 L	16 G 17 G	Ch 17 H Ch 17 L				
14C 13C	Ch 18 H Ch 18 L	2 G 3 G	Ch 18 H Ch 18 L	Brown/Green Green/Brown		30C 29C	Ch 38 H Ch 38 L	18 G 19 G	Ch 18 H Ch 18 L				
16A 15A	Ch 19 H Ch 19 L	4 G 5 G	Ch 19 H Ch 19 L	Brown/Gray Gray/Brown		32A 31A	Ch 39 H Ch 39 L	20 G 21 G	Ch 19 H Ch 19 L				
18A 17A	Ch 20 H Ch 20 L	6 G 7 G	Ch 20 H Ch 20 L	Tan/Pink Pink/Tan			Not used	22 G 23 G	Ch 20 H Ch 20 L				
	Not used	8 G 9 G	Ch 21 H Ch 21 L	Tan/Green Green/Tan			Not used	24 G 25 G	Ch 21 H Ch 21 L				
	Not used	10 G 11 G	Ch 22 H Ch 22 L	Tan/Gray Gray/Tan			Not used	26 G 27 G	Ch 22 H Ch 22 L				
	Ch00 H Ch00 L	12 G 13 G	Ch 23 H Ch 23 L	White/Yellow Yellow/White			Not used	28 G 29 G	Ch 23 H Ch 23 L				
	Not used	14 G 15 G	Ch 24 H Ch 24 L	White/Violet Violet/White			Not used	30 G 31 G	Ch 24 H Ch 24 L				
8C 7C	COM 0 H COM 0 L	Connect to DMM Input				24C 23C	COM 1 H COM 1 L	Connect to DMM Sense					

Table 1: Wiring table

Caution: Your cable may have different color codes for each wire. This is a Computer Cable Makers PN SCS2-1000-003 wiring table.

Each cable must have an HD-50 male metal connector on one end to connect to the E1586A. The cable selected here has 25 color-coded twisted pairs and bare wires on the other end. An 80 cm (2.5 ft) SCSI-2 to SCSI-1 cable is available for about \$20 from Computer Cable Makers (www.cablemakers.com, PN SCS2-1000-003) and from Cables to Go (www.cablestogo.com).

Wiring is straightforward. Insert the cable into J19 on the left rear of the E1586A terminal panel and cut off the connector on the other end of the cable. Strip the outer insulation back about 10 cm (4 in). Strip the outer and inner shield back 9 cm (3.5 in). Fold the outer shield back on the insulation and cover it with heat shrink. Insert the cable in the N2290A terminal block. Wire the cable to the N2290A terminal block following the Table 1. Channel 00 is wired to the HI-I and LO-I for connecting to the thermistor of the E1586A, channel 01 is wired to channel 01 of the E1586A left side and so on through channel 20. Alternately, you can wire the cable directly to the connector of the terminal module N2296A. When using the N2296A, be sure to wire the connector for COM0 and COM1 connections to the DMM.

The second cable is wired for channel 21 of the N2260A to channel 01 on the right side of the E1586A and so on through channel 39 of the N2260A wired to channel 19 on the right half of the E1586A.

You can reduce the resistance of channel 00 to below 0.5 ohm by connecting the twisted pair in the cable for channel 23 to channel 00 of the N2260A terminal block. This will parallel two twisted wire pairs for channel 00. See wiring table.

To connect the center reference thermistor on the E1586A, connect channel HI-I and 23H to HI-T2S, and channel LO-I and 23L to LO-T2S.

To connect the shield and the ground on the E1586A, connect together GND, and TRIG. The wiring from the N2290A to the E1586A is now complete. See Table 1 for detailed connections.

Wire the thermocouple wires to the channels on the E1586A. Channels 01 to 20 correspond to channels 01 to 20 on the left side of the E1586A. Channels 21 to 39 on the N2260A correspond to channels 01 to 19 on the right side of the E1586A. See Table 1 for panel labeling.

Making accurate measurements

You can mount the E1586A terminal panel in a standard-size instrument rack or place it on your bench. To minimize any variation between channels, the terminal panel must be kept away from heat sources and drafts. Do not place the terminal panel directly next to instruments, or directly on top of a powered instrument. To isolate the panel from any heat source beneath the panel on your bench, place a section of foam or Styrofoam under the full length of the terminal panel. To protect the terminal panel from drafts, cover or wrap it in a towel or cloth or surround it with Styrofoam.

When you mount the terminal panel in a rack, it should be mounted such that it is away from the heat sources. The bottom of the rack is usually the preferred location. Take particular care to minimize the temperature difference across the horizontal width of the terminal panel, since it is most susceptible to horizontal temperature gradients across its longest dimensions. Avoid mounting the terminal panel directly above or below instruments that have a hot air exit on the side.

Channels closest to the center near the reference thermistor will have the best accuracy. When relative measurements are important, put those channels

Source of Error	Absolute accuracy J	Relative accuracy
Isothermal termination, E1586A	$\pm 0.2^{\circ}\text{C}$ ($\pm 10\mu\text{V}$)	0.2°C ($\pm 10\mu\text{V}$) difference between any two channels
Ref. Thermistor Measurement (DMM in 100k ohm range)	$\pm 0.03^{\circ}\text{C}$ (± 6 ohms)	N/A
Ref. Thermocouple conversion	$\pm 0.02^{\circ}\text{C}$	N/A
Ref. Thermistor accuracy	$\pm 0.1^{\circ}\text{C}$	N/A
Ref. Thermistor lead + relay ohms	$- 0.013^{\circ}\text{C} < (0.5 + 2$ ohms)	N/A
Ref. Thermocouple conversion	$\pm 0.05^{\circ}\text{C}$	$\pm 0.05^{\circ}\text{C}$
Voltmeter accuracy	$\pm 0.08^{\circ}\text{C}$ ($\pm 4\mu\text{V}$ @ 0.0mV), 25°C $\pm 0.1^{\circ}\text{C}$ ($\pm 5\mu\text{V}$ @ 26mV), 500°C	$\pm 0.08^{\circ}\text{C}$ ($\pm 4\mu\text{V}$ @ 0.0 mV), 25°C $\pm 0.1^{\circ}\text{C}$ ($\pm 5\mu\text{V}$ @ 26 mV), 500°C
Relay thermal offset, N2260A	$\pm 0.075^{\circ}\text{C}$ (3uV)	$\pm 0.06^{\circ}\text{C}$ (3uV)
Total	$\pm 0.6^{\circ}\text{C}$ not including sensor	$\pm 0.4^{\circ}\text{C}$ not including sensor

Table 2: Measurement uncertainty

physically close together on the terminal panel. Channels closest together will have the best agreement among each other. There are three thermistors on the E1586A. If only one side (left or right) is used, use the thermistor closest to the terminal blocks in use. See the E1586A manual for thermistor locations.

Table 2 shows the measurement uncertainty for the individual error contributions when you use a J-type thermocouple. The errors for other thermocouples and temperature ranges will be different depending on the error of the voltmeter, the temperature measured, thermocouple type and voltage level of the thermocouple. The error due to the thermocouple is not included in the calculation.

Summary

If you use the E1586A patch panel with the 3499A/B/C, 34401A and N2260A MUX module and appropriate software conversion, you will be able to measure thermocouple temperature to $\pm 0.6^{\circ}\text{C}$.

Glossary

J-type thermocouple – iron-constantan thermocouple with a temperature range of -210 to 1200°C

Thermocouple – a temperature sensor consisting of two dissimilar metals joined together. When a temperature gradient exists (one end is a different temperature from the other), a voltage is generated. Different types of thermocouples are constructed from different metals, with differing temperature ranges and accuracies.

Thermistor – a ceramic temperature sensor that exhibits a change in resistance as a function of temperature. With most thermistors, resistance decreases as the temperature increases.

Related Agilent Literature

Agilent 3499 Switch/Control Unit:
www.agilent.com/find/3499

Agilent N2260A 2-Wire, 40-Channel Multiplexer Module: www.agilent.com/find/3499

Agilent 34401A Multimeter:
www.agilent.com/find/34401a

AN 290 – Practical Temperature Measurements
www.agilent.com, search on 5965-7822E

AN 1459 – How to Program the 3499A/B/C Switch and the 34401A Digital Multimeter for Scanning Measurements: www.agilent.com, search on 5988-9549EN

Agilent Email Updates

www.agilent.com/find/emailupdates

Get the latest information on the products and applications you select.

Pathways to Exceptional Test

Let Agilent help you streamline system development and lower the true cost of test. Our world-class measurement science and support can get you accurate results in a hurry. Agilent's instruments are optimized for use in systems, and our open industry software and I/O standards take the hassle out of creating test code. To see how you can get maximum leverage from Agilent's resources, go to www.agilent.com/find/buildyourown

Was This Useful?

If you found the information in this application note useful, feel free to visit these other Agilent Web sites dedicated to helping the engineer who solves difficult test problems: Visit

www.agilent.com/find/appcentral

www.agilent.com/find/connectivity

www.agilent.com/find/adn

By internet, phone, or fax, get assistance with all your test and measurement needs

Online assistance: www.agilent.com/find/assist

Phone or Fax

United States:

(tel) 800 452 4844

Canada:

(tel) 877 894 4414

(fax) 905 282 6495

China:

(tel) 800 810 0189

(fax) 800 820 2816

Europe:

(tel) (31 20) 547 2323

(fax) (31 20) 547 2390

Japan:

(tel) (81) 426 56 7832

(fax) (81) 426 56 7840

Korea:

(tel) (82 2) 2004 5004

(fax) (82 2) 2004 5115

Latin America:

(tel) (305) 269 7500

(fax) (305) 269 7599

Taiwan:

(tel) 0800 047 866

(fax) 0800 286 331

Other Asia Pacific Countries:

(tel) (65) 6375 8100

(fax) (65) 6836 0252

(e-mail) tm_asia@agilent.com

Product specifications and descriptions in this document subject to change without notice.

© Agilent Technologies, Inc. 2003

Printed in the USA May 16, 2003

5988-9550EN

