

Agilent 16901A Logic Analysis System

Service Guide

Notices

© Agilent Technologies, Inc. 2006, 2007

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

Trademark Acknowledgements

Windows and MS Windows are U.S. registered trademarks of Microsoft Corporation.

Windows XP is a U.S. registered trademark of Microsoft Corporation.

Manual Part Number

16901-97001

Edition

Second edition, June 2007

Printed in Malaysia

Agilent Technologies, Inc.
1900 Garden of the Gods Road
Colorado Springs, CO 80907 USA

Warranty

The material contained in this document is provided “as is,” and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as “Commercial computer software” as defined in DFAR 252.227-7014 (June 1995), or as a “commercial item” as defined in FAR 2.101(a) or as “Restricted

computer software” as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies’ standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Safety Notices

CAUTION


A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

The Agilent 16901A Logic Analysis System—At a Glance

The Agilent Technologies 16901A logic analysis system is a modular system.

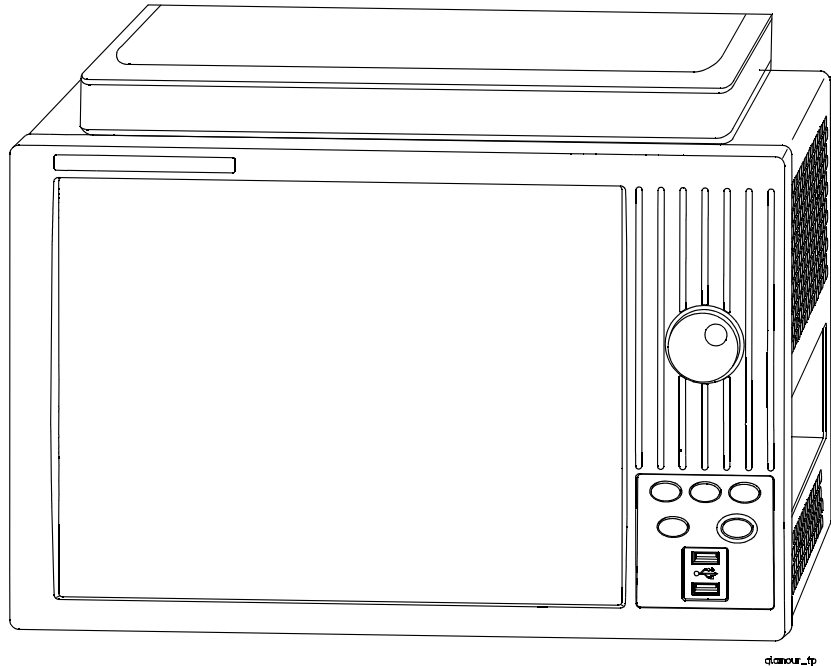

Features

- Two slots for logic analyzers and other types of measurement modules.
- Multiframe Pro for making time-correlated measurements with a logic analysis system made up of multiple 16900A, 16901A, and 16902A frames.
- Built-in 15 inch TFT color touch screen LCD display, 1,024 x 768 (XGA) resolution.
- 80 GB hard disk drive (or external hard drive 16901A Option 109).
- 10/100 Base-T LAN port.
- USB 2.0 ports (six total, two on front, four on back).
- One PCI expansion slot.
- One PCI Express x1 expansion slot.
- Windows® XP Professional operating system.
- *Agilent Logic Analyzer* application which takes the complexity out of making logic analyzer measurements. You can perform all operations directly from one window.

Supplied Accessories

- PS2 mouse.
- PS2 keyboard.
- Accessory pouch and power cord.

Optional Accessories:

- Multiframe cable (E5861A).
- Probes.

Service Strategy

The service strategy for this instrument is the replacement of defective assemblies. This service guide contains information for finding a defective assembly by testing and servicing the 16901A logic analysis system.

This instrument can be returned to Agilent Technologies for all service work, including troubleshooting. Contact your nearest Agilent Technologies Sales Office for more details.

Contacting Agilent Technologies

To locate a sales or service office near you, go to www.agilent.com/find/contactus.

In this Service Guide

This book is the service guide for the 16901A logic analysis system and is divided into eight chapters.

Chapter 1, “General Information” contains information about the instrument’s characteristics.

Chapter 2, “Preparing for Use” tells how to prepare the instrument for use.

Chapter 3, “Testing Performance” gives instructions on how to test the performance of the instrument.

Chapter 4, “Calibrating and Adjusting” contains calibration instructions for the instrument.

Chapter 5, “Troubleshooting” contains self-tests and flowcharts for troubleshooting the instrument.

Chapter 6, “Replacing Assemblies” tells how to replace the instrument and assemblies of the instrument, and how to return them to Agilent Technologies.

Chapter 7, “Replaceable Parts” lists replaceable parts, shows exploded views, and gives ordering information.

Chapter 8, “Theory of Operation” explains how the instrument works and what the self-tests are checking.

Revision History

Table 1 Revision History

Revision	Reason
16901-97001, June 2007 (this version)	Corrected module interface board (MIB) part number.
16901-97000, November 2006	First edition.

Contents

The Agilent 16901A Logic Analysis System—At a Glance	3
In this Service Guide	5

1 General Information

Electrical and Operating Environment Characteristics	12
Dimensions	14

2 Preparing for Use

To inspect the logic analysis system	16
To apply power	16
To connect multiple frames	17
To install measurement modules	17
To clean the instrument	17

3 Testing Performance

Self-Tests	20
Test Interval	20
To perform the power-up tests	21

4 Calibrating and Adjusting

Calibration Strategy	24
Calibrations and Adjustments for Modules	24

5 Troubleshooting

To use the 16901A troubleshooting flowcharts	26
To troubleshoot power problems	32
Power Supplies	32
To check the power supply voltages	32
To run the self-tests	35
To exit the test system	36

To reinstall the operating system 36

6 Replacing Assemblies

16901A Logic Analysis System Disassembly/Assembly 38

Replacement Strategy 38

Tools Required 38

To save the license file 39

To prepare the instrument for disassembly 40

To power off the system 40

To remove and replace optional modules or filler panels 42

To remove and replace the cover 44

To remove and replace the power supplies 45

600 watt power supply 45

Secondary power supply 46

To remove and replace the PCI or display board 48

To remove and replace the motherboard 49

To remove and replace the front panel assembly 51

To remove and replace the backlight inverter board 53

To remove and replace the touch screen controller board 55

To remove and replace the front panel bracket assembly 56

To remove and replace the USB cables 57

To remove and replace the display assembly 58

To remove and replace the keypad and keypad board 60

To remove and replace the hard disk drive 62

To remove and replace the tray assembly 64

To remove and replace the fans 65

60 mm fan 65

92 mm fans 66

To remove and replace the line filter assembly 67

To remove and replace the module interface board 68

Returning Assemblies 70

7 Replaceable Parts

Ordering Replaceable Parts 72

Exchange Assemblies 72

Power Cables and Plug Configurations 73

Replaceable Parts List	75
Cover and Front Panel Assemblies	76
16901A Frame	79

8 Theory of Operation

Block Level Theory	84
CPU Subsystem	86
PCI board	87
MIB (Module Interface Board)	87
Front Panel Assembly	90
Power Up Routine	91

Index

Contents



1 General Information

Electrical and Operating Environment Characteristics 12
Dimensions 14

This chapter contains information on electrical and operating environment characteristics and dimensions.

See the logic analysis system's online help for a full listing of all specifications and characteristics.



Electrical and Operating Environment Characteristics

The following operating characteristics are not specifications, but are typical operating characteristics for the Agilent 16901A logic analysis system.

Electrical Characteristics

Power Requirements Frame (16901A): 115/230 Vac +/- 20%, 48-66Hz, 775W Max
The line voltage is autodetected by the instrument.
CAT II (Line voltage in appliance and to wall outlet)
Pollution degree 2

Environmental Characteristics

For indoor use only.

Temperature Instrument (16901A): 0° to + 45° C (+32° to +113° F)
Probes/cables: 0° to + 65° C (+32° to +149° F)

Altitude 3,000 m (10,000 ft)

Humidity Relative humidity 8% to 80% at 40° C (104° F). Avoid sudden, extreme temperature changes which could cause condensation on the circuit board.

Vibration Operating: random vibration 0-500 Hz, 10 minutes per axis, 0.3 g (rms).

Non-operating: random vibration 0-500 Hz, 10 minutes per axis, 2.41g (rms); and swept sine resonant search, 0-500 Hz, 0.75g, 5-minute resonant dwell at 4 resonances per axis.

Weight

Model	Max Net	Max Shipping
16901A	13.6 kg (30.0 lbs)	20.4 kg (45.0 lbs)

The weight of modules ordered with mainframes will add 0.9 kg (2.0 lb) per module.

Storage Store or ship the instrument in environments within the following limits:
Temperature -40°C to +75°C (-40°F to 167°F)
Humidity up to 90% at 65° C (149°F)
Altitude up to 3,000 meters (10,000 feet)
Protect the system from temperature extremes which cause condensation on the instrument.

Trigger In


The Trigger In connector is 5V Max pk and DC, CAT I (line isolated).

Clock In

The Clock In connector is 5.5V Max pk and DC, CAT I (line isolated).

Dimensions

The following figure provides dimensions for the 16901A logic analysis system mainframe in centimeters and inches.

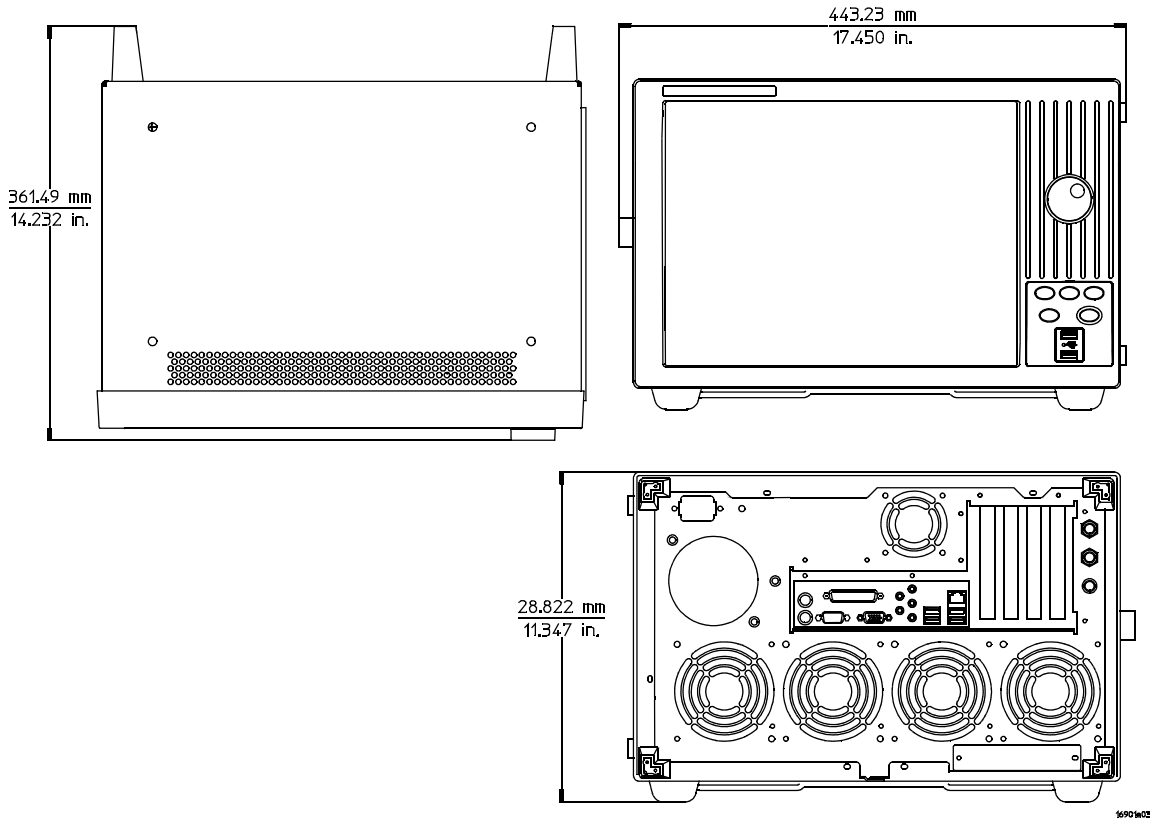



2 Preparing for Use

To inspect the logic analysis system 16

To apply power 16

To connect multiple frames 17

To install measurement modules 17

To clean the instrument 17



To inspect the logic analysis system

- 1 Inspect the shipping container for damage.

If the shipping container or cushioning material is damaged, keep them until you have checked the contents of the shipment and checked the instrument mechanically and electrically.

WARNING

Hazardous voltages exist in this instrument. To avoid electrical shock, do not apply power to a damaged instrument.

- 2 Check the supplied accessories.

Accessories supplied with the logic analyzer are listed on [page 4](#).

- 3 Inspect the product for physical damage.

Check the logic analyzer and the supplied accessories for obvious physical or mechanical defects. If you find any defects, contact your nearest Agilent Technologies Sales Office. Arrangements for repair or replacement are made, at Agilent Technologies' option, without waiting for a claim settlement. Contact information is located on [page 4](#).

To apply power

- 1 Connect the supplied power cord to the instrument and to the power source.

This instrument autodetects the line voltage from 115 VAC to 230 VAC. It is equipped with a three-wire power cable. When connected to an appropriate AC power outlet, this cable grounds the instrument cabinet. The type of power cable plug shipped with the instrument depends on the model ordered and the country of destination. Refer to [“Power Cables and Plug Configurations”](#) on page 73 for more information on power cables.

- 2 Turn on the power switch located on the front panel.

For first-time power up considerations and setup steps, refer to the *Installation Guide* that came with your instrument. To get the most up-to-date installation guide:

- Go to www.agilent.com.

- Search for 16901A Logic Analysis System.
- Look under Technical Support and then Manuals and Guides.

To connect multiple frames

If you need to make time-correlated measurements with more logic analysis channels than can be installed into a single logic analysis system frame, you can connect multiple 16900A, 16901A, and 16902A frames together. Refer to the *Installation Guide* that came with your instrument for Multiframe Pro configurations. To get the most up-to-date installation guide:

- Go to www.agilent.com.
- Search for 16901A Logic Analysis System.
- Look under Technical Support and then Manuals and Guides.

To install measurement modules

For general information on installing a measurement module into the mainframe refer to the *Installation Guide* that came with your instrument. To get the most up-to-date installation guide:

- Go to www.agilent.com.
- Search for 16901A Logic Analysis System.
- Look under Technical Support and then Manuals and Guides.

To clean the instrument

If the instrument requires cleaning:

- 1 Remove power from the instrument.
- 2 Clean the external surfaces of the instrument with a soft cloth dampened with a mixture of mild detergent and water.
- 3 Make sure that the instrument is completely dry before reconnecting it to a power source.

2 Preparing for Use



3 Testing Performance

Self-Tests 20

Test Interval 20

To perform the power-up tests 21

To ensure the logic analysis system is operating correctly, you can perform software tests (self-tests) on the system. Directions for performing the software tests are given in this chapter. Because there are no specifications for the 16901A logic analysis system, there are no performance verification tests.



Self-Tests

The self-tests listed in this chapter check the functional operation of the mainframe. Self-tests for the optional modules installed in the frames are listed in the individual module *Service Guides*.

There are two types of self-tests: self-tests that automatically run at powerup, and self-tests that you select on the screen. For descriptions of the tests, refer to [Chapter 8](#), “Theory of Operation.”

Perform the self-tests as an acceptance test when receiving the logic analysis system or when the logic analysis system is repaired.

If a test fails, refer to [Chapter 5](#), “Troubleshooting.”

Test Interval

There is no recommended test interval for the 16901A logic analysis system mainframe. However, each of the supported modules has performance verification tests and therefore require a periodic verification of specifications. Refer to the *Service Guides* of the individual modules for more information.

To perform the power-up tests

The logic analysis system automatically performs power-up tests when you apply power to the instrument. Any errors are reported in the boot dialogue. Serious errors will interrupt the boot process.

The power-up tests are designed to complement the instrument on-line Self-Tests. Tests that are performed during powerup are not repeated in the Self-Tests.

A keyboard and mouse must be connected to the mainframe to observe the results of the power-up tests.


- 1 Exit all logic analysis sessions.
- 2 Press the power switch for about 1 second and release, wait for the the unit to power off.
- 3 After a few seconds, turn the power switch back on. Observe the boot dialogue for the following:
 - Ensure all of the installed memory is recognized
 - Any error messages
 - Interrupt of the boot process with or without error message

A complete transcript of the boot dialogue is in chapter 8, "Theory of Operation."

- 4 During initialization, check for any failures.

If an error or an interrupt occurs, refer to [Chapter 5](#), "Troubleshooting."

3 Testing Performance

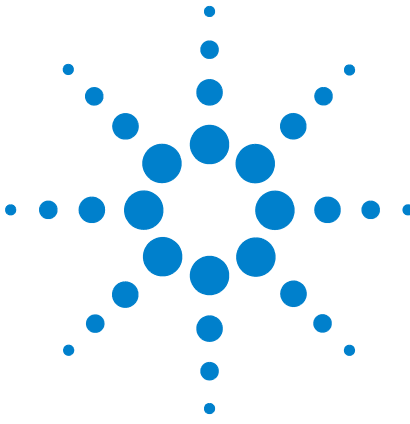

4 Calibrating and Adjusting

Calibration Strategy 24

Calibrations and Adjustments for Modules 24

Calibration Strategy

The 16901A logic analysis system does not require operational accuracy calibration.

Calibrations and Adjustments for Modules

The individual modules that plug into the 16901A logic analysis system mainframe may require calibration, operational accuracy calibration, or adjustments. Refer to the “Testing Performance” chapter in the service manual for the module.



5 Troubleshooting

- To use the 16901A troubleshooting flowcharts 26
- To troubleshoot power problems 32
- To run the self-tests 35
- To reinstall the operating system 36

This chapter helps qualified service personnel troubleshoot the logic analyzer to find defective assemblies. The troubleshooting consists of flowcharts, self-test instructions, and tests. This information is not intended for component-level repair.

If you suspect a problem, start at the top of the first flowchart. During the troubleshooting instructions, the flowcharts will direct you to perform other tests. The other tests are located in this chapter after the flowcharts.

The service strategy for this instrument is the replacement of defective assemblies. This instrument can be returned to Agilent for all service work, including troubleshooting. Contact your nearest Agilent Technologies Sales Office for more details.

CAUTION

Electrostatic discharge can damage electronic components. Use grounded wrist straps and mats when you perform any service to this instrument or to the cards in it.



To use the 16901A troubleshooting flowcharts

Flowcharts are the primary tool used to isolate defective assemblies. The flowcharts refer to other tests to help isolate the trouble. The circled references on the charts indicate connections with the other flowcharts or other parts within the same flowchart. A circled alpha references connections within the flowchart. Start your troubleshooting at the top of the first flowchart ([Figure 1](#) on page 27).

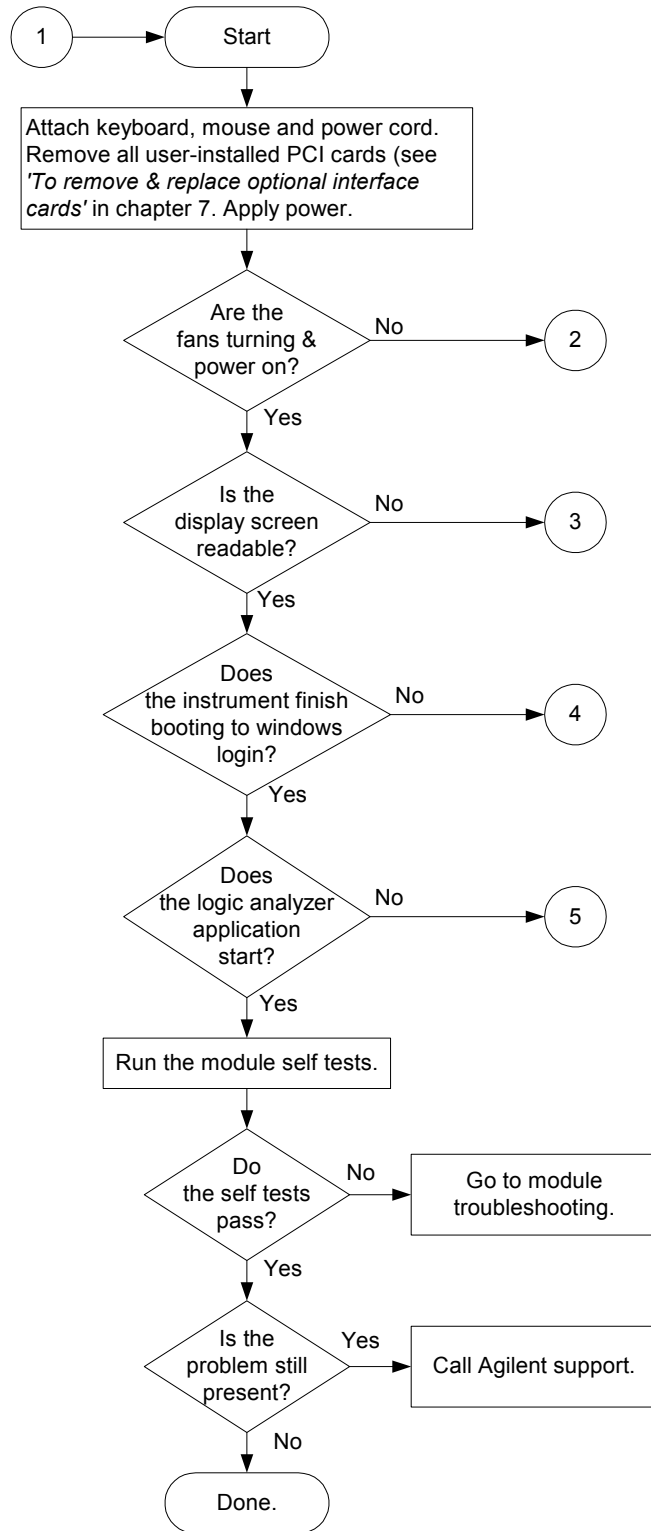


Figure 1 16901A Troubleshooting Flowchart

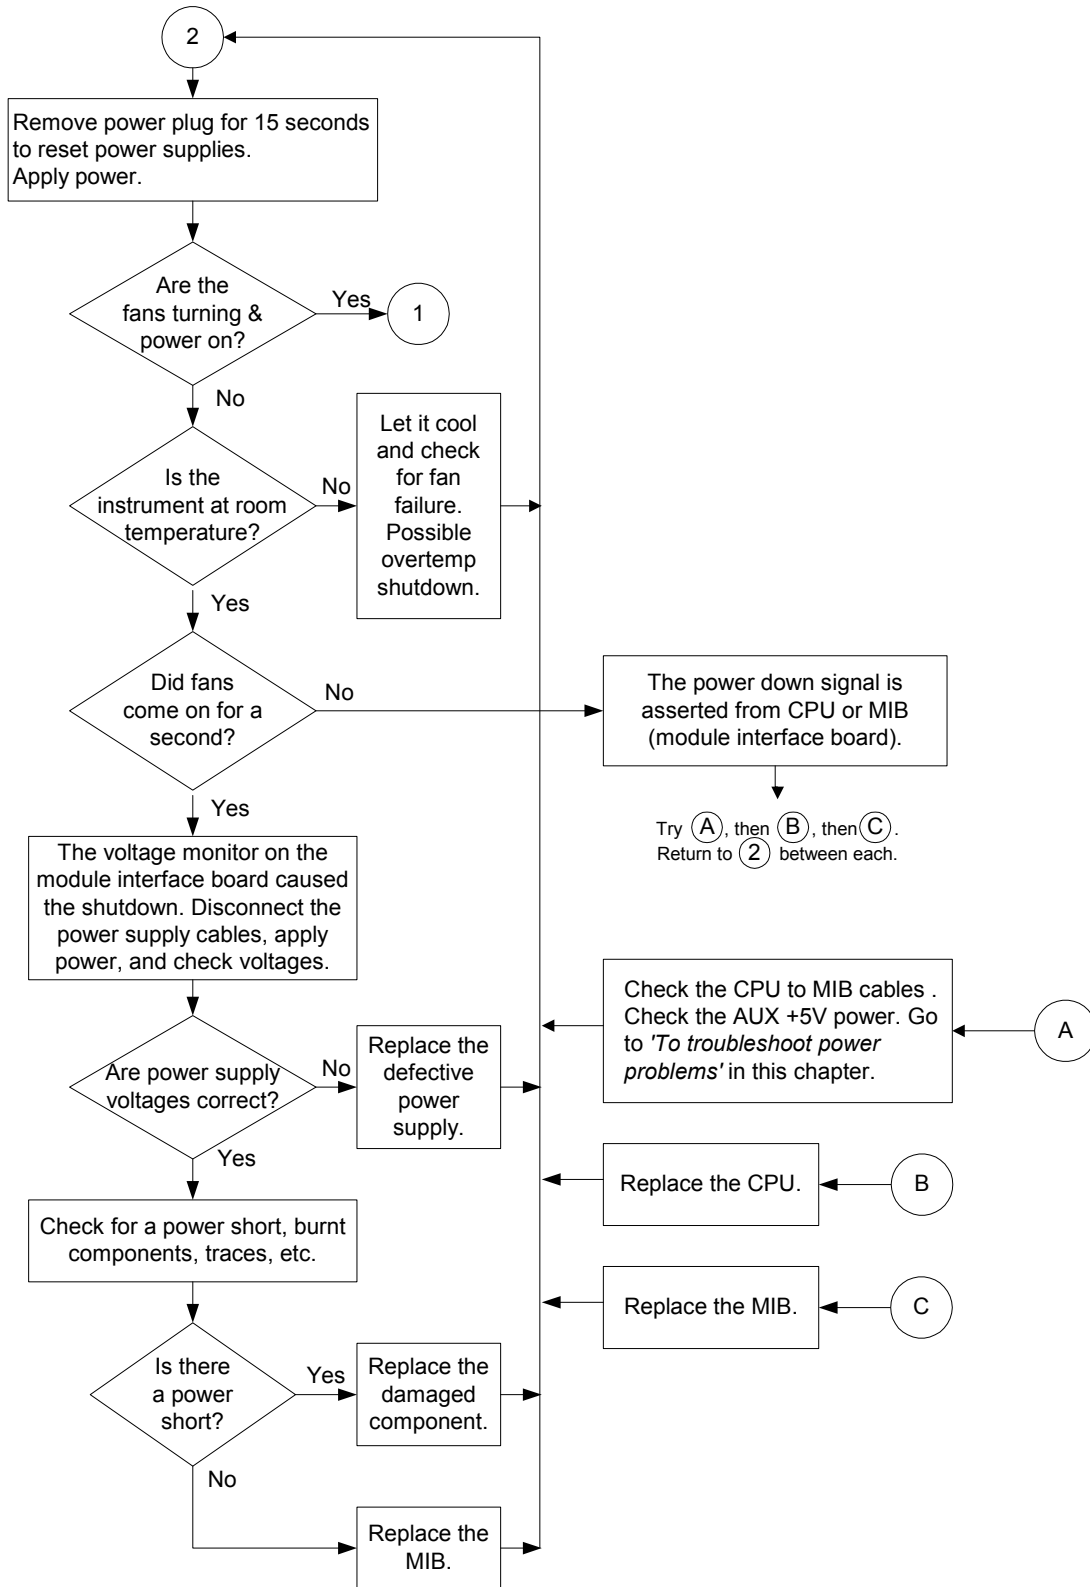


Figure 2 16901A Power Troubleshooting Flowchart

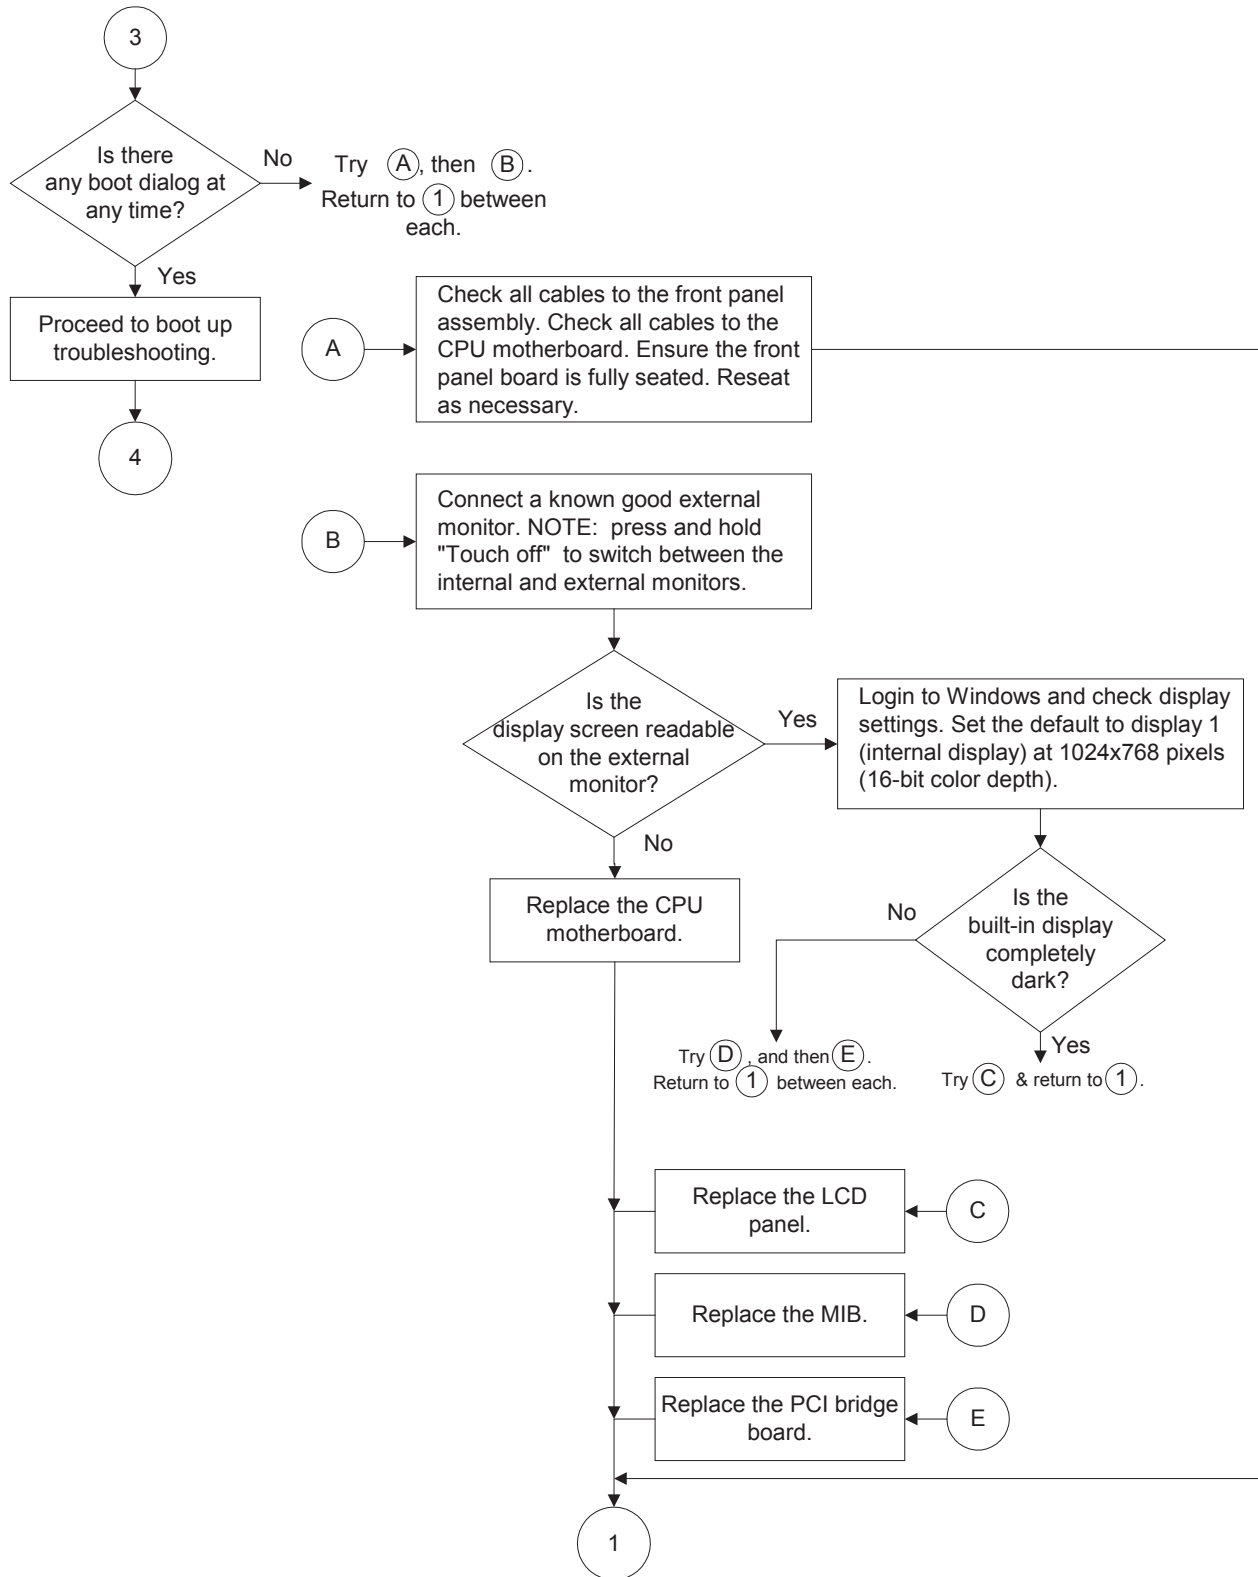


Figure 3 16901A Display Troubleshooting Flowchart

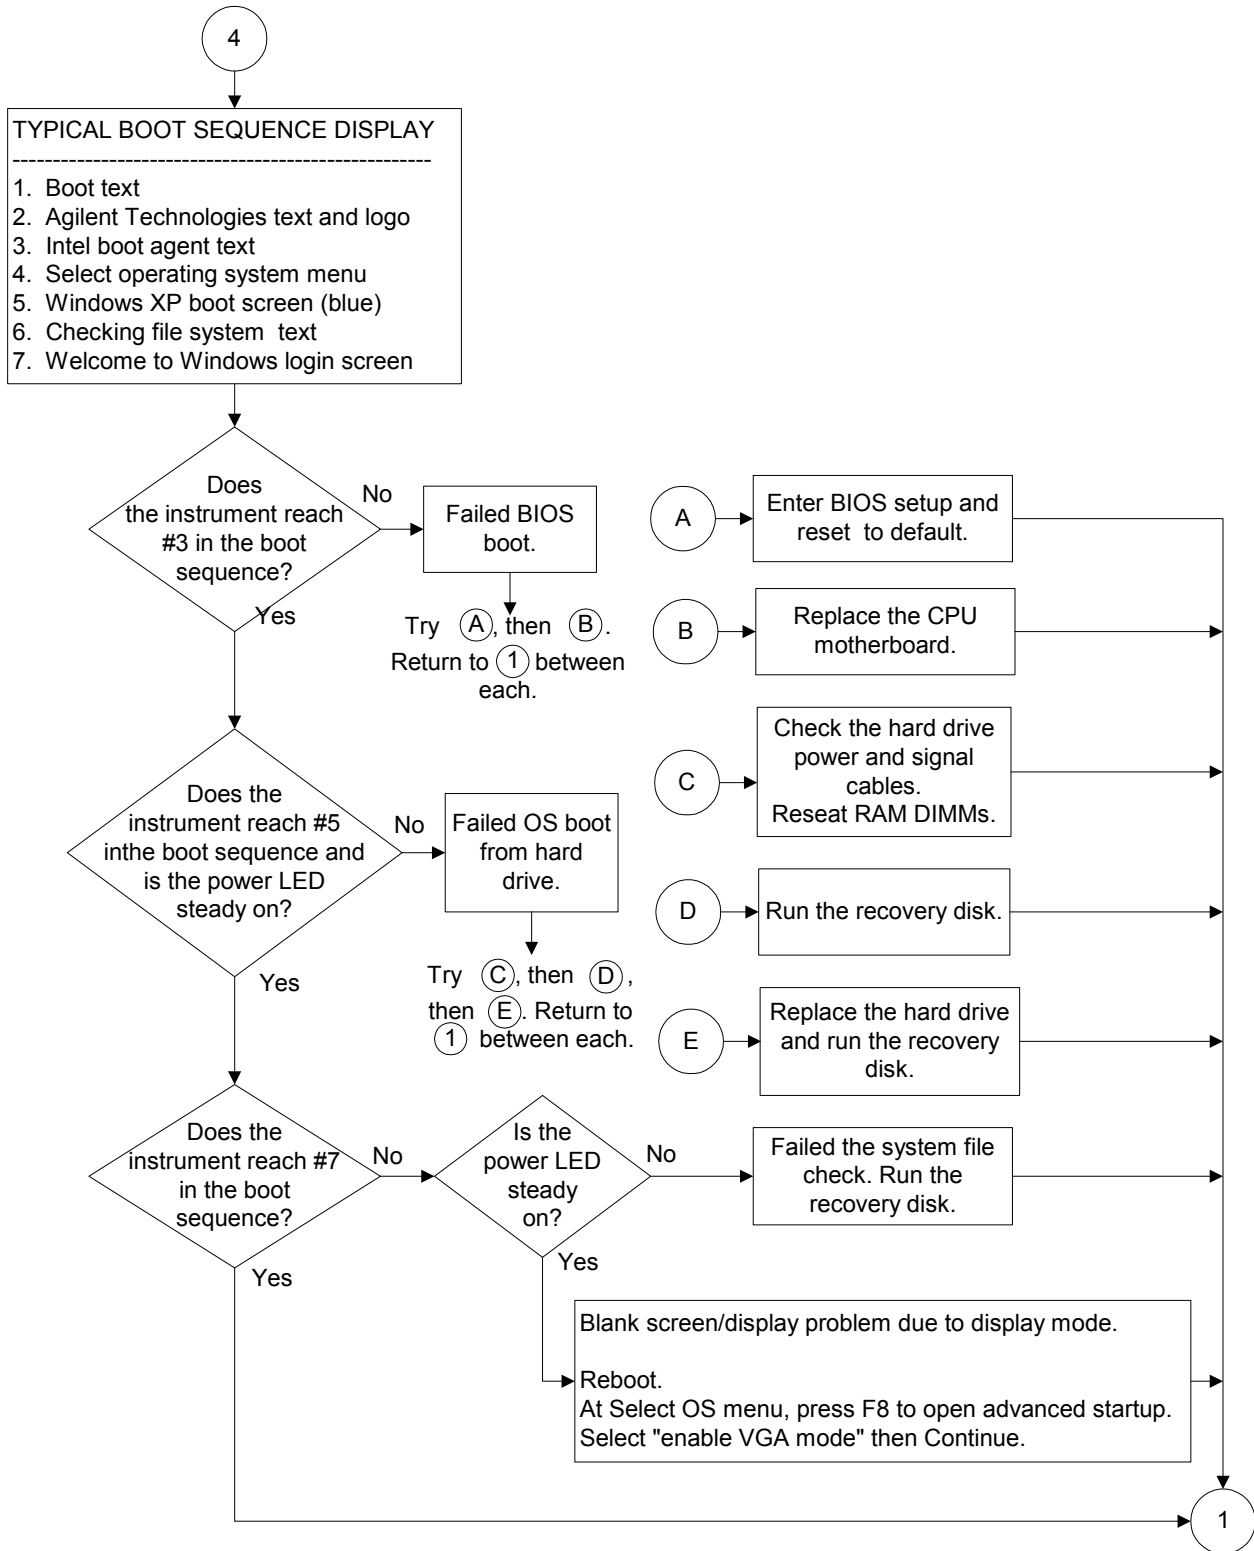


Figure 4 16901A Boot Up Troubleshooting Flowchart

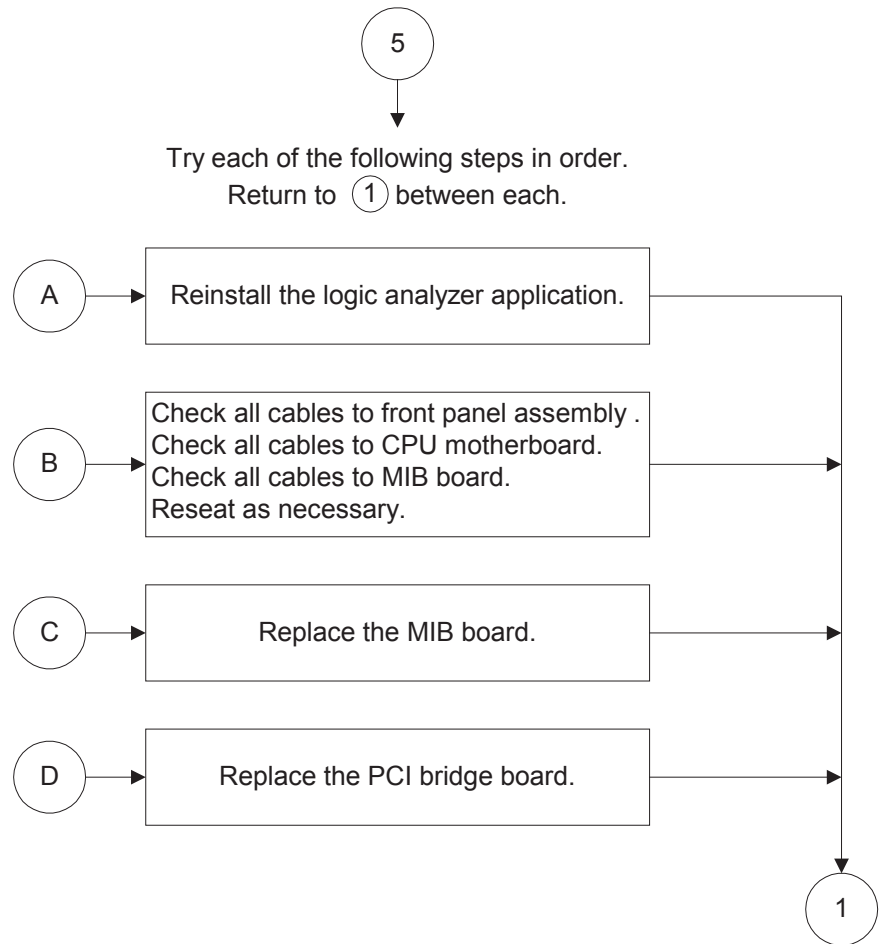


Figure 5 16901A Application Troubleshooting Flowchart

To troubleshoot power problems

If the system warns you it is powering down before it powers down, it is a fan/overtemp problem. If it just powers down, it is a power supply problem.

If the lights do not come on and if the system powers up momentarily when you plug it in, make sure the power button hasn't become jammed or stuck in the pushed-in position.

Power Supplies

The 16901A logic analysis system has one 600 W power supply and a second 175 W power supply.

The power supplies must remain connected in order to test their output voltages. There are power supply test points on the MIB board.

To check the power supply voltages


WARNING

Hazardous voltages exist on the power supply. This procedure is to be performed by service-trained personnel aware of the hazards involved, such as fire and electrical shock.


- 1 Turn off the instrument using one of the methods described in [“To power off the system”](#) on page 40.
- 2 Disconnect the instrument's power cord, move the instrument to a static safe work environment, then remove the cover (instructions in [“To remove and replace the cover”](#) on page 44).
- 3 Ensure that the CPU power cable and reset cables are seated properly.
- 4 Reconnect the instrument's power cord, then apply power to the instrument.
- 5 Using a digital voltmeter, measure the DC power supply voltages. Use the following graphics when measuring the voltages.
- 6 Using a voltmeter, ensure the AUX +5V power on the MIB measures +5V. If it does not, replace the power supply.

7 Referring to the graphics that follow, note problems with the power supply, then return to [Figure 2](#), “16901A Power Troubleshooting Flowchart,” on page 28.

Power Supply Test Points

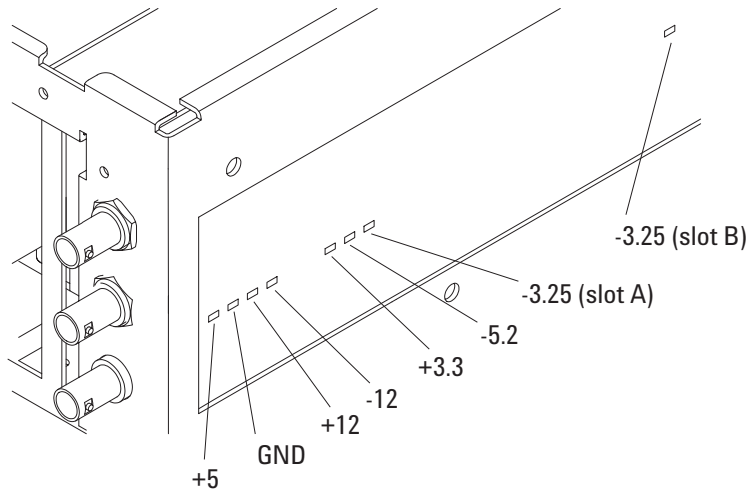


Power Supply Block Diagram

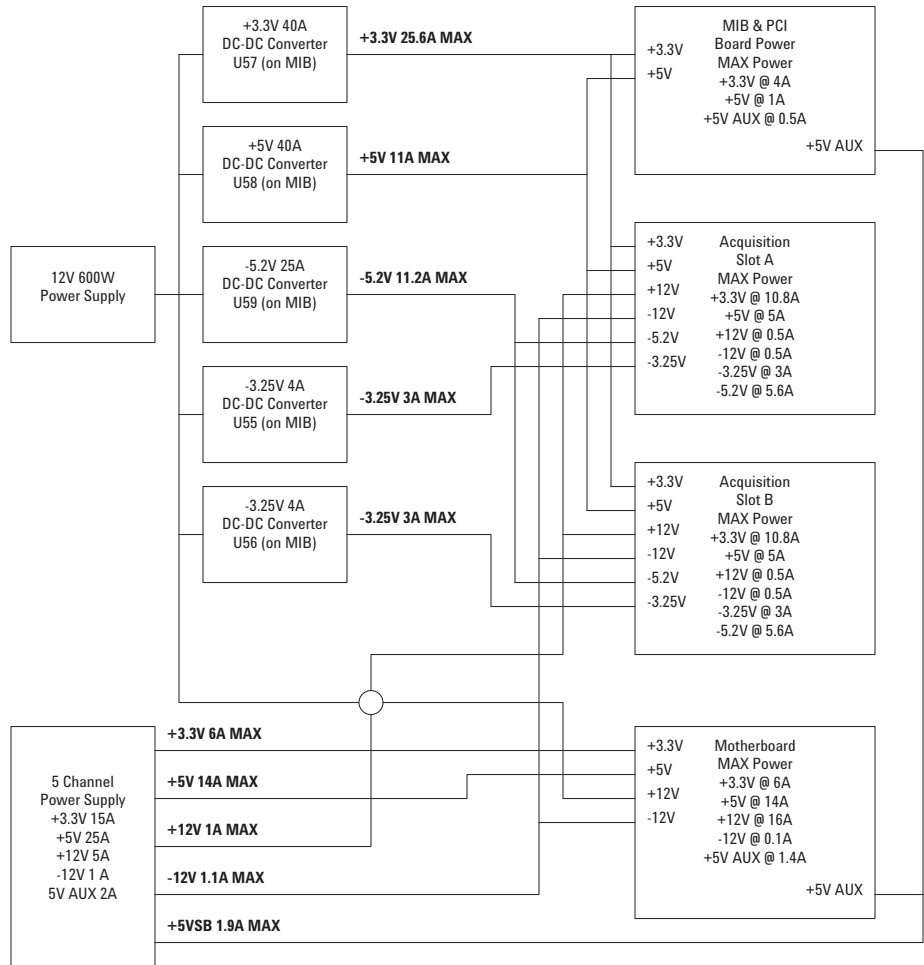


To run the self-tests

The self-tests check the functional operation of the logic analyzer. Perform the self-tests as an acceptance test when receiving the logic analyzer or when the logic analyzer is repaired.

- 1 In the *Agilent Logic Analyzer* application, click Help>Self Test...

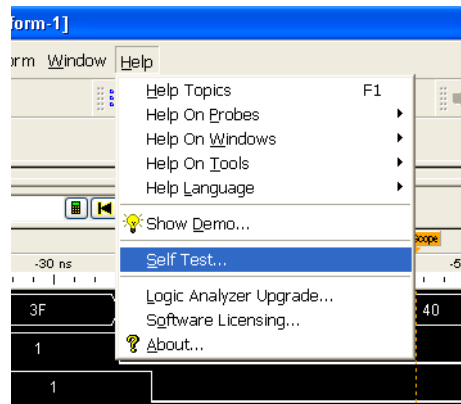

- 2 In the Analysis System Self Test dialog, double click on the test you want to run.

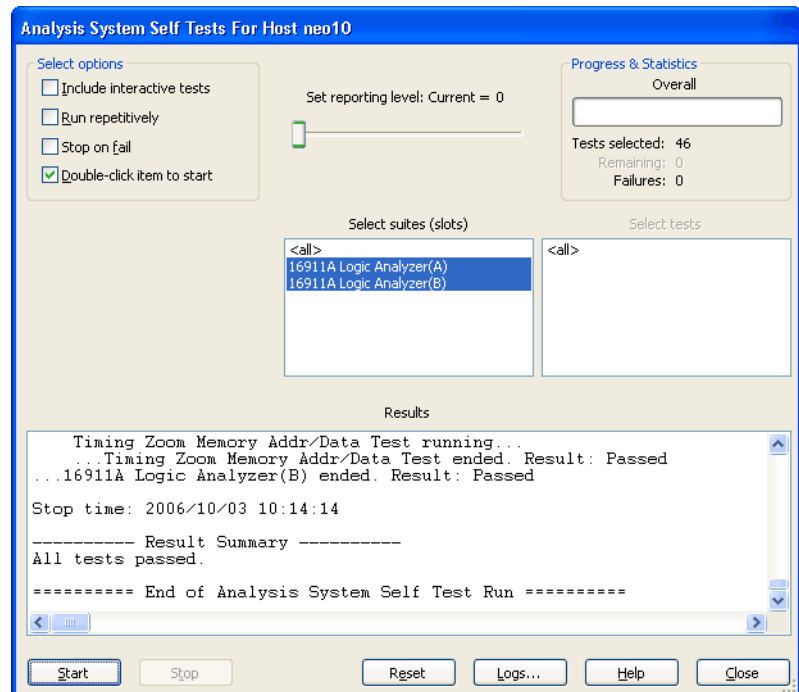

To exit the test system

- 1 Simply close the self-test dialog. No additional actions are required.

To reinstall the operating system

Restoring your system software might be necessary for the following reasons:

- Hard drive failure.
- Virus in the system or unstable system.
- Intentional disk clean - for example if you are passing the system to another team or returning it to a rental company and you do not want any data left on it.

You need to have a keyboard, mouse, and USB DVD-ROM drive connected. Follow the instructions provided with the recovery DVD to restore your system software.

CAUTION

Running the recovery disks will reformat your hard drive. All data files and programs will be overwritten. Save your license files and data to a USB flash drive or to another computer before performing this procedure.



6 Replacing Assemblies

16901A Logic Analysis System Disassembly/Assembly	38
To prepare the instrument for disassembly	40
To remove and replace optional modules or filler panels	42
To remove and replace the cover	44
To remove and replace the power supplies	45
To remove and replace the PCI or display board	48
To remove and replace the motherboard	49
To remove and replace the front panel assembly	51
To remove and replace the backlight inverter board	53
To remove and replace the touch screen controller board	55
To remove and replace the front panel bracket assembly	56
To remove and replace the USB cables	57
To remove and replace the display assembly	58
To remove and replace the keypad and keypad board	60
To remove and replace the hard disk drive	62
To remove and replace the tray assembly	64
To remove and replace the fans	65
To remove and replace the line filter assembly	67
To remove and replace the module interface board	68
Returning Assemblies	70



16901A Logic Analysis System Disassembly/Assembly

This chapter contains the instructions for removing and replacing the assemblies of the logic analyzer. Also in this chapter are instructions for returning assemblies.

WARNING

Hazardous voltages exist on the power supply. To avoid electrical shock, disconnect power from the instrument before performing the following procedures. After disconnecting the power, wait at least six minutes for the capacitors on the power supply board to discharge before servicing the instrument.

CAUTION

Damage can occur to electronic components if you remove or replace assemblies when the instrument is on or when the power cable is connected. Never attempt to remove or install any assembly with the instrument on or with the power cable connected.

Replacement Strategy

Some procedures in this section tell you to remove other assemblies of the instrument, but do not give complete instructions. In these cases, refer to the procedure for that specific assembly for the instructions. The drawings here are representative. Your parts may look different.

CAUTION

Electrostatic discharge can damage electronic components. Use grounded wrist straps and mats when performing any service to this logic analyzer.

Tools Required

- T6, T10, T15, T25 TORX screwdrivers.
- #1 Pozi-drive screwdriver.
- 13/16 inch, deep-well nut driver.
- 5 mm nut driver.
- 1/4-inch hollow-shaft nut driver.

To save the license file

Before doing any major repairs to the instrument, it is recommended that you back up any data and license files to a USB flash drive if possible. You will need a backup copy if you encounter any problems that require re-imaging the hard drive.

License files contain keys for licensed software features.

Node-locked license files are located in the “License” folder in the *Agilent Logic Analyzer* application’s install directory. For example, the default location is:

```
C:\Program Files\Agilent Technologies\Logic Analyzer\  
License\
```

Floating license files are located in the “License Files” folder in the license server’s install directory. For example, the default location is:

```
C:\Program Files\Agilent Technologies\License Server\  
License Files
```

If for some reason, you lose a license file, you can obtain new licenses from Agilent, given the licensing host ID.

To obtain the licensing host ID

From the *Agilent Logic Analyzer* application’s main menu, choose **Help>Software Licensing...** The Licensing Host ID is displayed in the Software Licensing dialog’s Activation tab.

To prepare the instrument for disassembly

Do this procedure before doing any disassembly procedure on the instrument.

- 1 Close the *Agilent Logic Analyzer* application.
- 2 Power off the system using one of the methods explained below.
- 3 Remove the power cord.
- 4 Move the instrument to a static safe work environment.

WARNING

Hazardous voltages exist on the power supply. To avoid electrical shock, disconnect power from the instrument before performing the following procedures. After disconnecting the power, wait at least six minutes for the capacitors on the power supply board to discharge before servicing the instrument.

CAUTION

Damage can occur to electronic components if you remove or replace assemblies when the instrument is on or when the power cable is connected. Never attempt to remove or install any assembly with the instrument on or with the power cable connected.

To power off the system

There are several ways to power off the logic analyzer.

NOTE

When powering off the logic analyzer, wait until the fans stop turning (about 15 seconds) before turning the logic analyzer back on. This ensures that internal circuitry restarts in a known state.

Using the Windows Shutdown

On the logic analyzer desktop click **Start>Shut Down** or if you are running remote desktop, click **Start>Settings>Windows Security>Shut Down**. This software power off does the following:

- Closes all programs that are running.
- Writes all data to the disk.
- Turns off the power supply.

- If the system is unplugged while it is off and then plugged back in, the system will not power on until the power button is pressed.

Using a Short Press of the Power Button

Pressing the power button on a frame for a short time (less than 2 seconds or so):

- Closes all programs that are running.
- Writes all data to the disk.
- Turns off the power supply.

If the power button is depressed for a short time (less than 2 seconds or so) while another instrument has an open Remote Desktop connection to this instrument, a message on the logic analyzer screen (not on the remote desktop) will pop up asking if you really want to power down. Clicking the 'yes' button results in the above events. Clicking 'no' will prevent the shutdown and not answering the dialog box (neither clicking "Yes" or "No") will have no effect. Further short presses on the power button will have no effect.

Using a Long Press of the Power Button

Pressing the power button for more than 4 seconds will power the system down abruptly. Use this method only when other methods have not responded:

- Programs that are running will not be shut down. Any data that has not been written to the disk will be lost.
- Turns off the power supply.
- If the system is unplugged while it is off and then plugged back in, the system will not power on until the power button is pressed.
- If the system does not boot, the hard disk drive will need to be re-imaged.

Unplugging the Power Cord or Power Loss


Unplugging power while the instrument is turned on or a power loss is similar to the long press of the power button with one exception:

- When the system is plugged back in, it will power up and boot into Windows.


To remove and replace optional modules or filler panels

The following procedure guides you through installing, removing, or replacing measurement modules in the logic analysis system frame. Information on connecting specific multi-card measurement modules can be found in the *Installation Guide* that came with your frame. Measurement modules with different model numbers may not be connected together in multi-card (Master/Expander) modules unless stated otherwise. See also, the service guide that came with your measurement module.


- 1 Perform previous procedures:
 - “To prepare the instrument for disassembly” on page 40
- 2 Using a 1/4-inch hex socket, loosen the thumb screws on the modules or filler panels.
- 3 Rotate the ejector levers from the locked position to the open position.
- 4 Ensure all ejectors are fully open and out of the way.
- 5 Remove filler panels or slide the modules out of the logic analysis system frame.

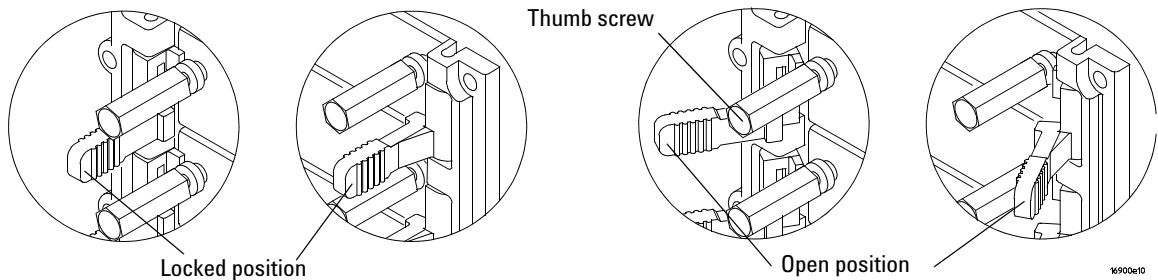

A single-module configuration can be installed in any available slot.

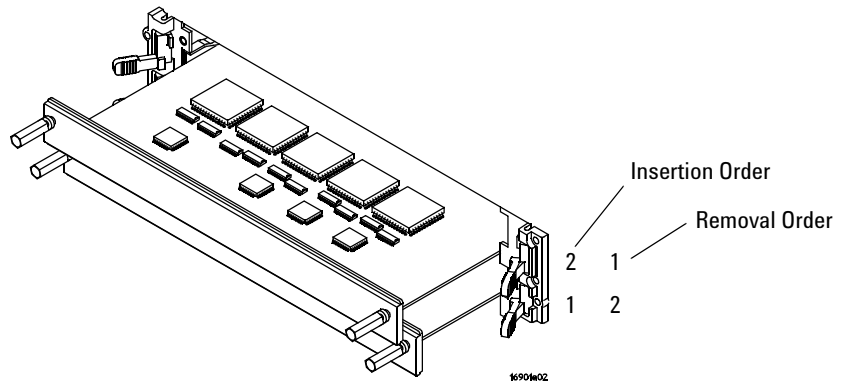

- 6 When inserting, seat the modules then rotate the ejector tabs to the lock position. Repeat for all modules or filler panels.

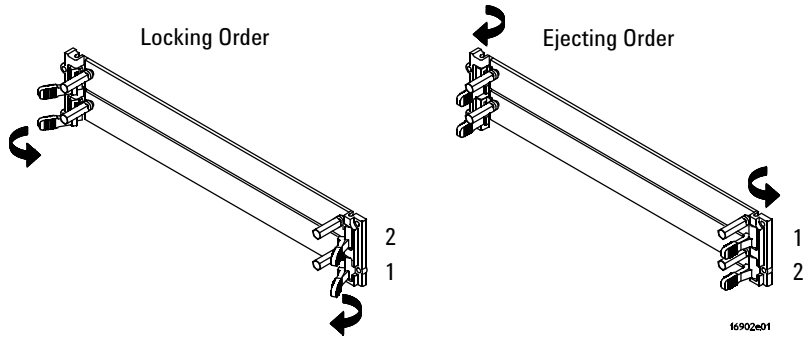


- 7 Tighten the thumb screws until finger tight in the same order used in step 5 above. If using a hex socket or torque driver, avoid over tightening (2 in-lb maximum).
- 8 For correct air circulation, install filler panels in all unused card slots. Correct air circulation keeps the instrument from overheating. Keep any extra filler panels for future use.

To remove and replace the cover

- 1 Perform previous procedures:
 - “To prepare the instrument for disassembly” on page 40.
- 2 Using a Torx T20 screwdriver, remove the handle assembly.
- 3 Using a Torx T10 screwdriver, remove 6 screws that secure the cover to the chassis.

Optional: Removing the shroud may make it easier to remove and replace the cover. In this case, remove 4 T10 screws; then, remove the shroud.

- 4 Slide the cover back to remove.

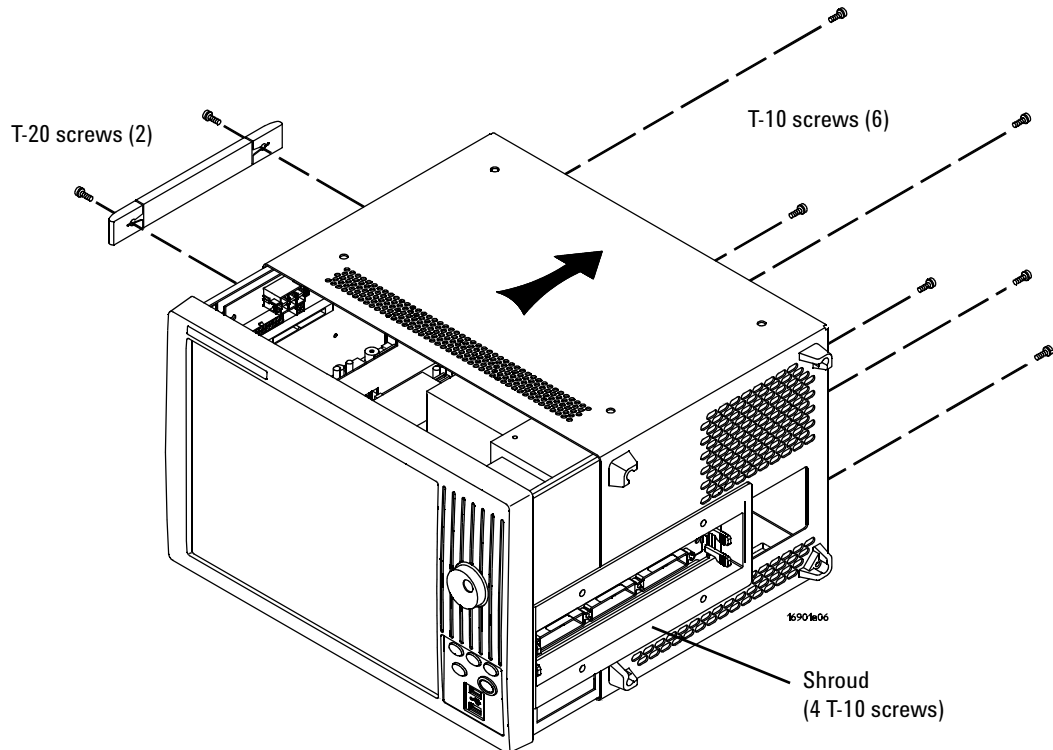

- 5 Reverse this procedure to replace the cover.

CAUTION

When reinstalling the handle assembly, ensure that the screws are torqued to 2.372 Newton meters (21 inch pounds) so that they do not work themselves loose.

To remove and replace the power supplies

WARNING


Hazardous voltages exist on the power supply. To avoid electrical shock, disconnect the power from the instrument before performing the following procedures. After disconnecting the power, wait at least six minutes for the capacitors on the power supply board to discharge before servicing the instrument.

600 watt power supply

The 600 watt power supply is on all models but may look different than the one shown here.

- 1 Perform previous procedures:
 - [“To prepare the instrument for disassembly”](#) on page 40.
 - [“To remove and replace the cover”](#) on page 44.
- 2 Press the release latches on the sides of the connector to disconnect the top 600 watt power supply cable from the module interface board (MIB).
- 3 Press the single release tab to disconnect the lower 600 watt power supply cable from the MIB.
- 4 Press the release latches to disconnect the 600 watt line filter cable.

6 Replacing Assemblies

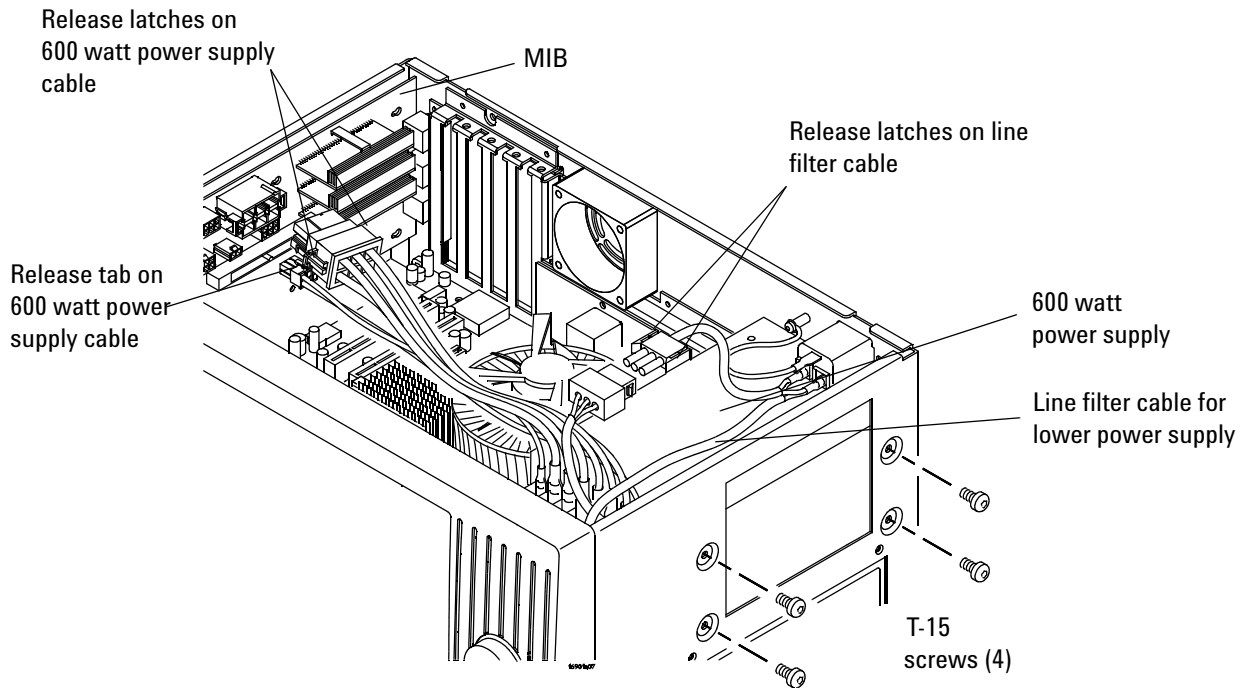


- 5 Using Torx T20 screwdriver, remove the 4 screws that secure the 600 watt power supply to the chassis.
- 6 Slide the power supply toward the front panel and lift it out of the frame while holding the line filter cable for the lower power supply out of the way.
- 7 Reverse this procedure to replace the 600 watt power supply.

Secondary power supply

The secondary power supply is 175 watts and may look different than the one shown here.


- 1 Perform the procedures:
 - [“To prepare the instrument for disassembly”](#) on page 40.
 - [“To remove and replace the cover”](#) on page 44.
 - [“To remove and replace the front panel assembly”](#) on page 51.
- 2 Using a Torx T10 screwdriver remove the 2 side screws securing the tray assembly to the frame.

- 3 Slide the tray out far enough to disconnect the following cables:
 - Line filter cable for 600 watt power supply (press release latches).
 - Secondary power supply cable (press release tab).
- 4 Using a Torx T10 screwdriver, remove the 2 screws that secure the secondary power supply to the tray.
- 5 Snap the power supply off the tray assembly (see enlargement of snap-in fastener).
- 6 Reverse this procedure to install the power supply.

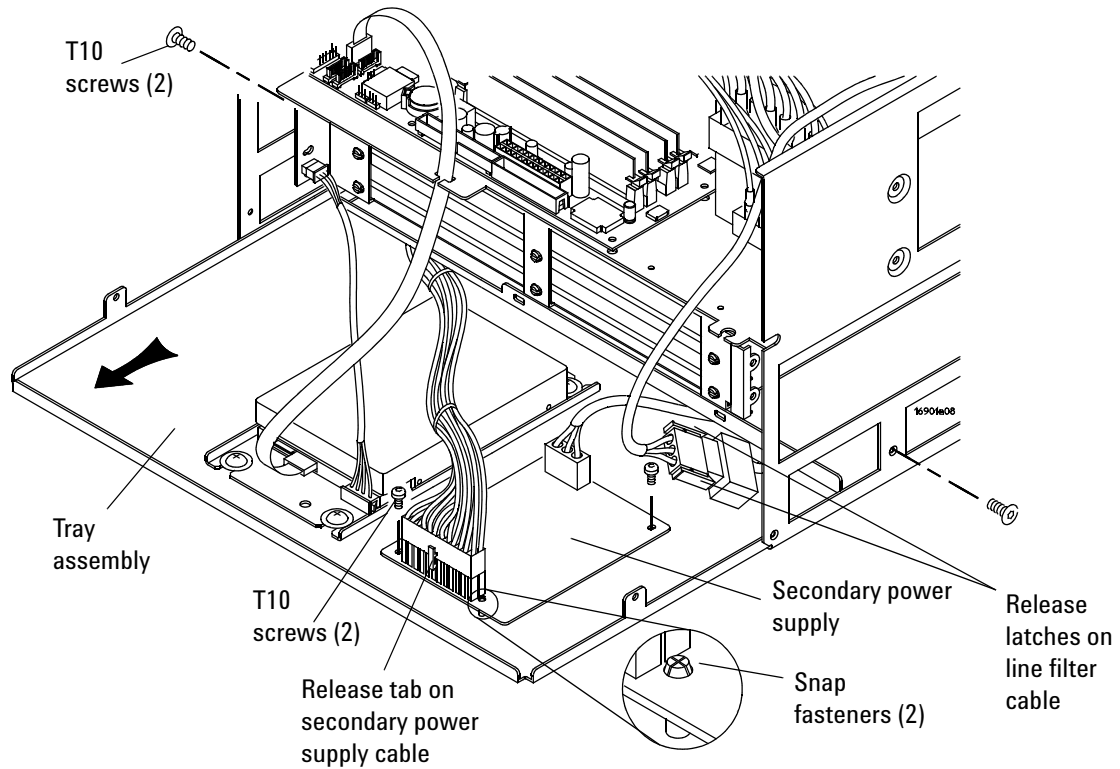

To remove and replace the PCI or display board

- 1 Perform previous procedures:
 - “To prepare the instrument for disassembly” on page 40.
 - “To remove and replace the cover” on page 44.
- 2 Disconnect the cable from the board you are replacing.
- 3 Using a Torx T10 screwdriver, remove the screws securing the board to the rear panel.
- 4 Lift the board out of the socket to remove.

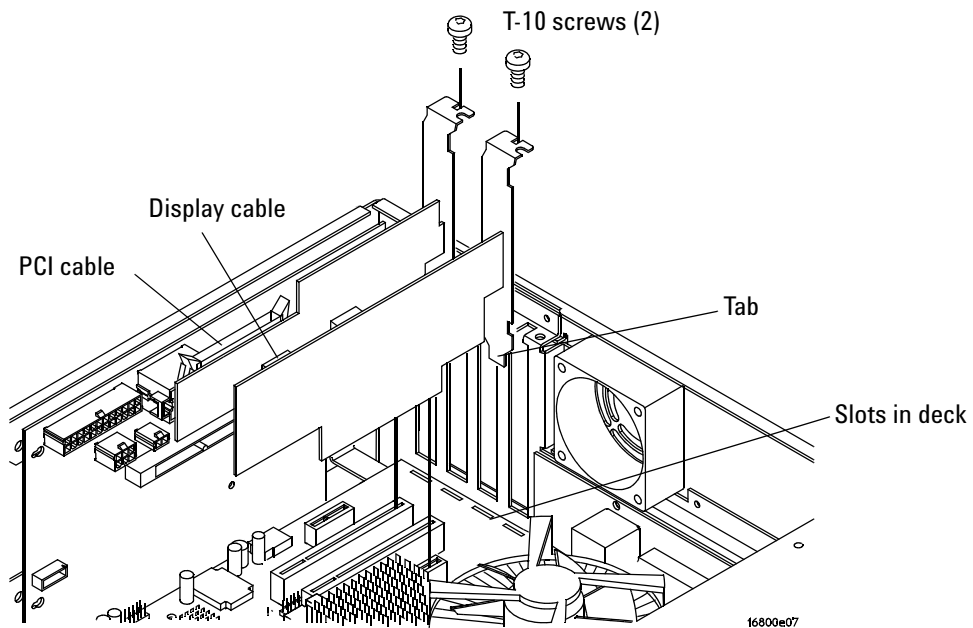

- 5 To replace a board:
 - a Ensure that the tab on the board’s rear panel is aligned with the slot in the deck.
 - b Press the board securely into the socket on the motherboard.
 - c Replace the screw.

To remove and replace the motherboard


The following graphics of the motherboard are representative. Yours may look different.

1 Perform previous procedures:


- “To prepare the instrument for disassembly” on page 40.
- “To remove and replace the cover” on page 44.
- “To remove and replace the PCI or display board” on page 48.

2 Disconnect the following cables from the motherboard:

- CPU power cables.
- USB cables.
- Hard drive SATA cable.
- Front panel reset cable.

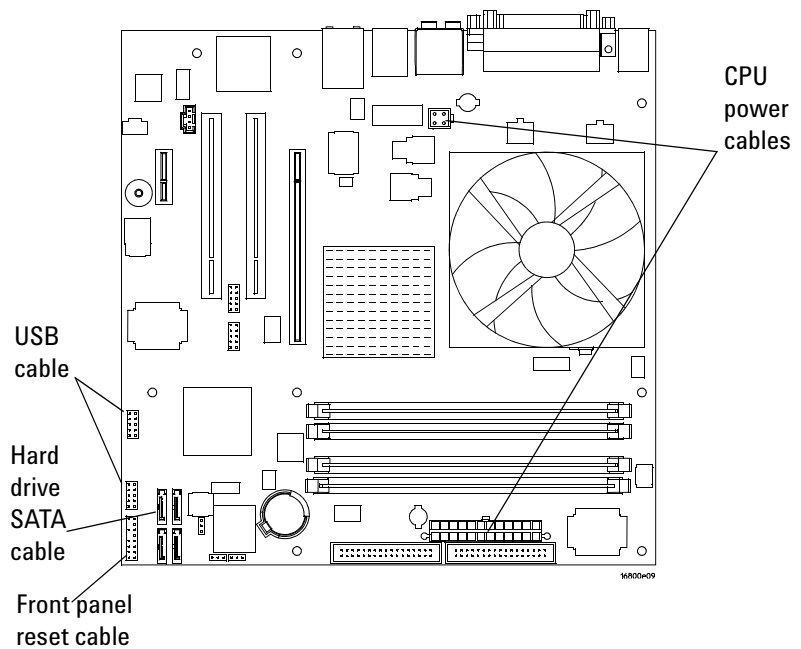


- 3** Using a 5 mm hex nut driver, remove the 6 Hex Studs securing the connectors to the rear panel.
- 4** Using a Torx T10 screwdriver, remove the 8 screws that secure the motherboard to the deck.

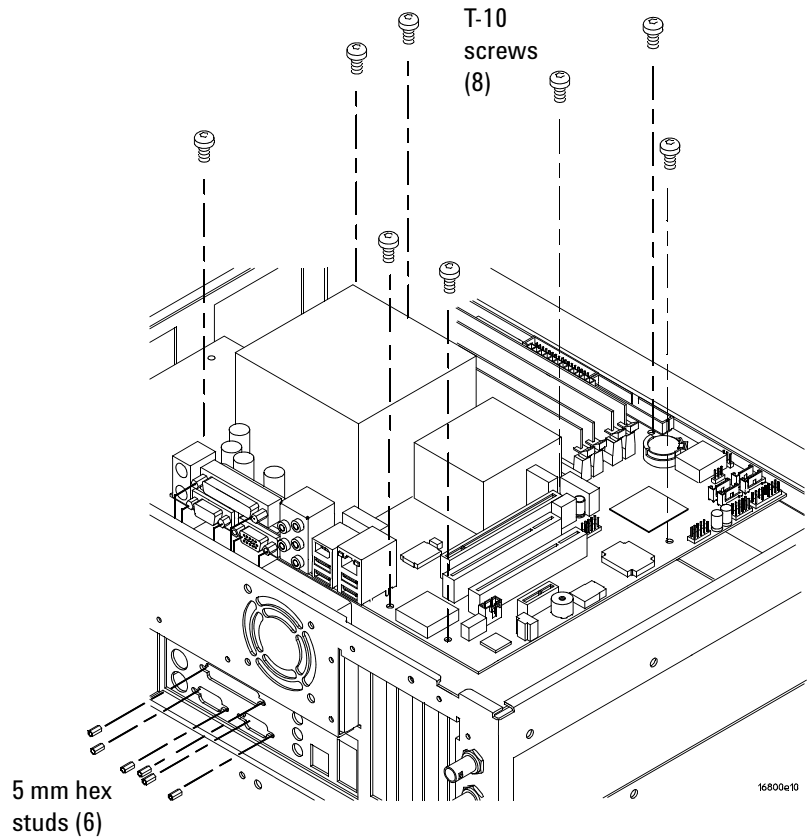


- 5** Reverse this procedure to install the motherboard.

To remove and replace the front panel assembly

- 1 Perform previous procedures:
 - “To prepare the instrument for disassembly” on page 40.
 - “To remove and replace the cover” on page 44.
- 2 Disconnect the following cables:
 - USB cables from the motherboard.
 - Display cable from the display board (use care when disconnecting to avoid damage).
 - Touch screen cable from the touch screen controller board.
 - Keyboard cable from the keypad board.
 - Front panel cable from the backlight inverter board.
- 3 Using a Torx T10 screwdriver, remove 4 screws that secure the shroud to the chassis.
- 4 Remove the shroud.

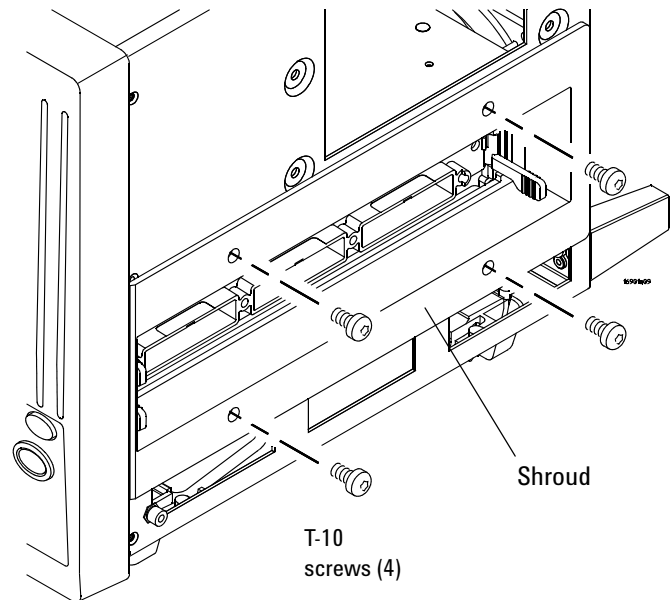


- 5 Using a Torx T10 screwdriver, remove 6 screws that secure the front panel to the chassis.
- 6 Remove the front panel assembly.
- 7 Reverse this procedure to install the front panel assembly.

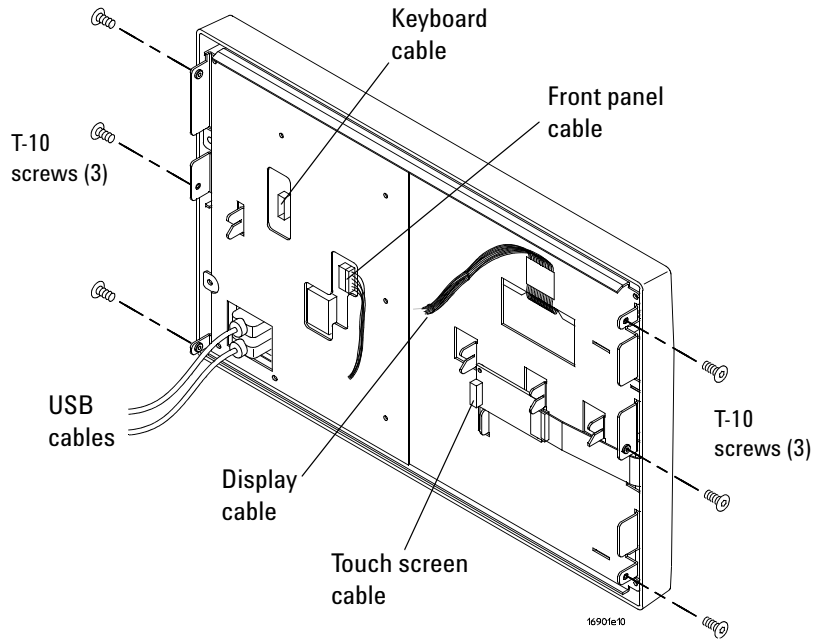


To remove and replace the backlight inverter board

- 1 Perform previous procedures:
 - “To prepare the instrument for disassembly” on page 40.
 - “To remove and replace the cover” on page 44.
 - “To remove and replace the front panel assembly” on page 51.
- 2 Using a Torx T10 screwdriver, remove the 7 screws securing the front panel plate to the front panel.

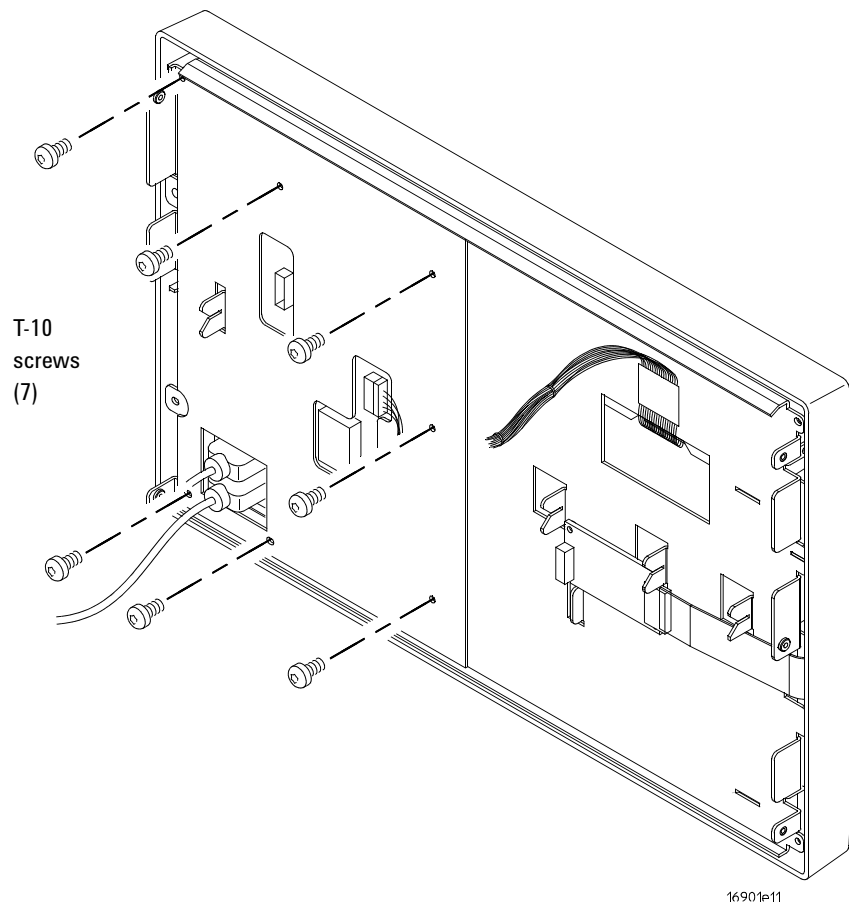


- 3** Disconnect the backlight cables from the inverter board.
- 4** Using a Torx T6 screwdriver, remove the 2 screws securing the board to the front panel.
- 5** Remove the board.
- 6** Reverse this procedure to install the backlight inverter board.

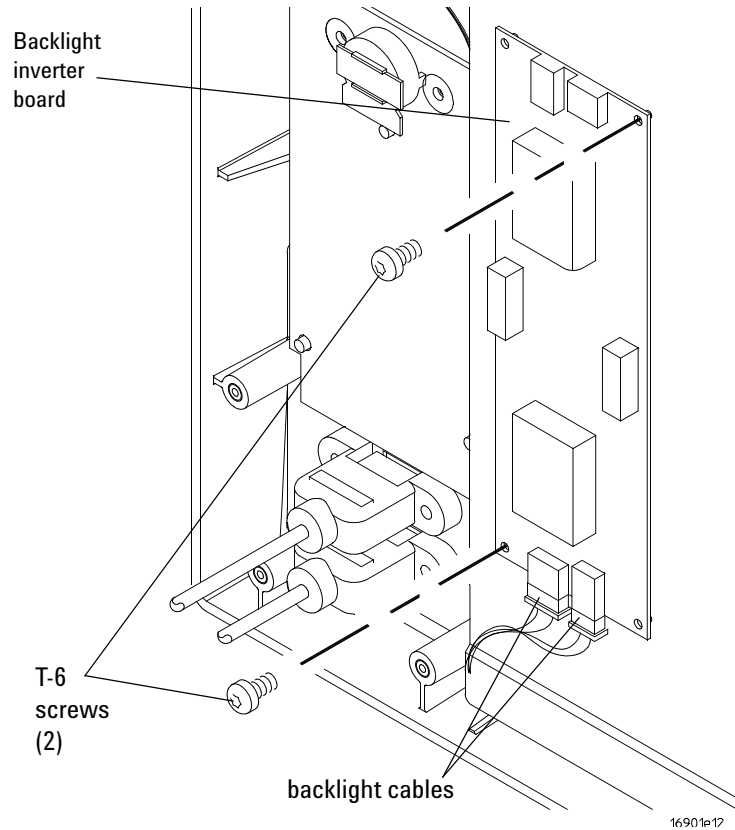


To remove and replace the touch screen controller board

- 1 Perform previous procedures:
 - “To prepare the instrument for disassembly” on page 40.
 - “To remove and replace the cover” on page 44.
 - “To remove and replace the front panel assembly” on page 51.
- 2 Disconnect the touch screen cable from the touch screen controller board.
- 3 Using a Torx T10 screwdriver, remove the 2 screws securing the board to the front panel board.
- 4 Reverse this procedure to install the touch screen controller board.

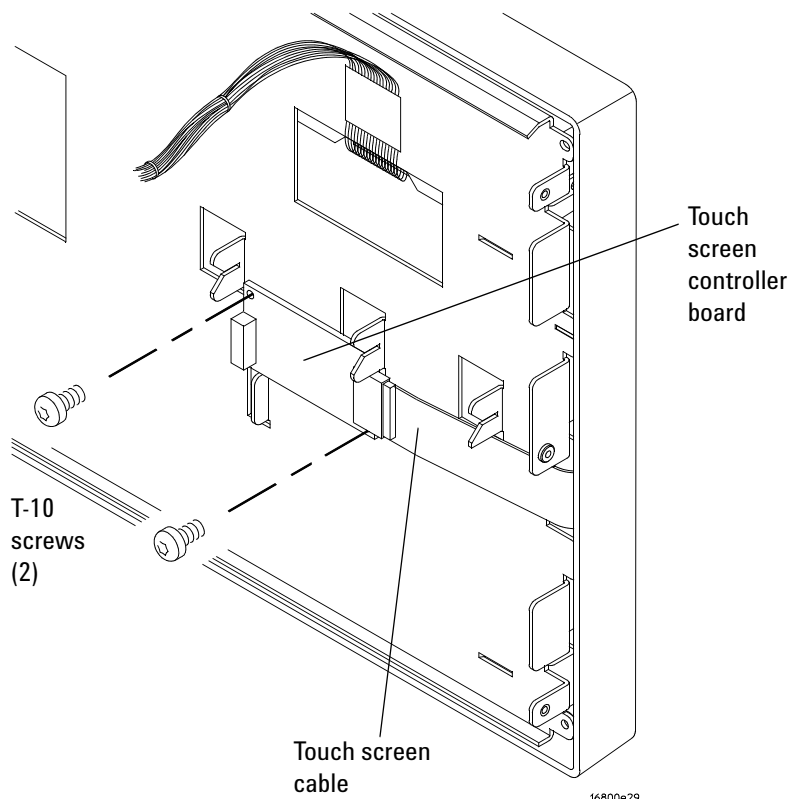

To remove and replace the front panel bracket assembly


- 1 Perform previous procedures:
 - “To prepare the instrument for disassembly” on page 40.
 - “To remove and replace the cover” on page 44.
 - “To remove and replace the front panel assembly” on page 51.
- 2 Using a Torx T10 screwdriver, remove the 2 screws securing the touch screen controller board to the front panel bracket assembly.
- 3 Using a Torx T10 screwdriver, remove the 6 screws securing the front panel bracket assembly to the front panel.
- 4 Remove the bracket assembly.

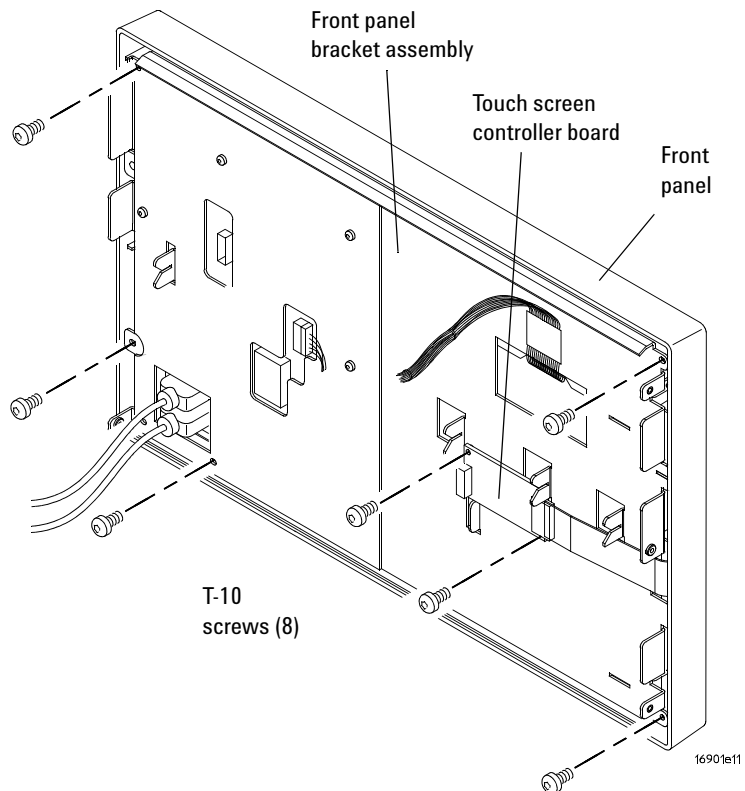

- 5 Reverse this procedure to replace the front panel bracket assembly.

To remove and replace the USB cables


- 1 Perform previous procedures:
 - “To prepare the instrument for disassembly” on page 40.
 - “To remove and replace the cover” on page 44.
 - “To remove and replace the front panel assembly” on page 51.
 - “To remove and replace the front panel bracket assembly” on page 56.
- 2 Using a Torx T10 screwdriver, remove the 4 screws securing the USB cables to the front panel bracket assembly.

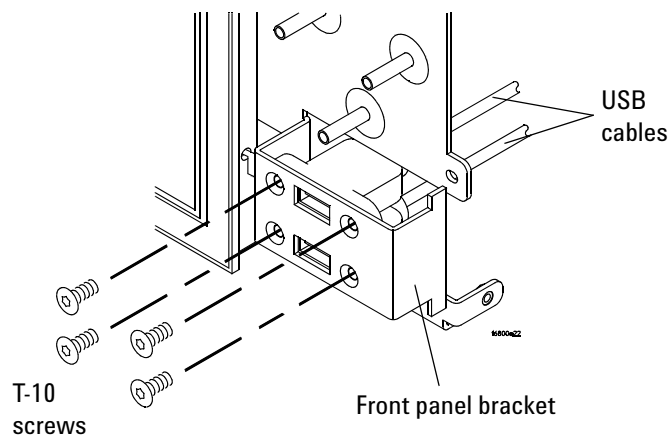

- 3 Reverse this procedure to replace the USB cables.

To remove and replace the display assembly

- 1 Perform previous procedures:
 - “To prepare the instrument for disassembly” on page 40.
 - “To remove and replace the cover” on page 44.
 - “To remove and replace the front panel assembly” on page 51.
 - “To remove and replace the backlight inverter board” on page 53.
 - “To remove and replace the front panel bracket assembly” on page 56.
- 2 Using a Torx T10 screwdriver, remove the 2 screws securing the display assembly to the front panel bracket assembly.
- 3 Remove the alignment pins on the bracket from the holes on LCD.

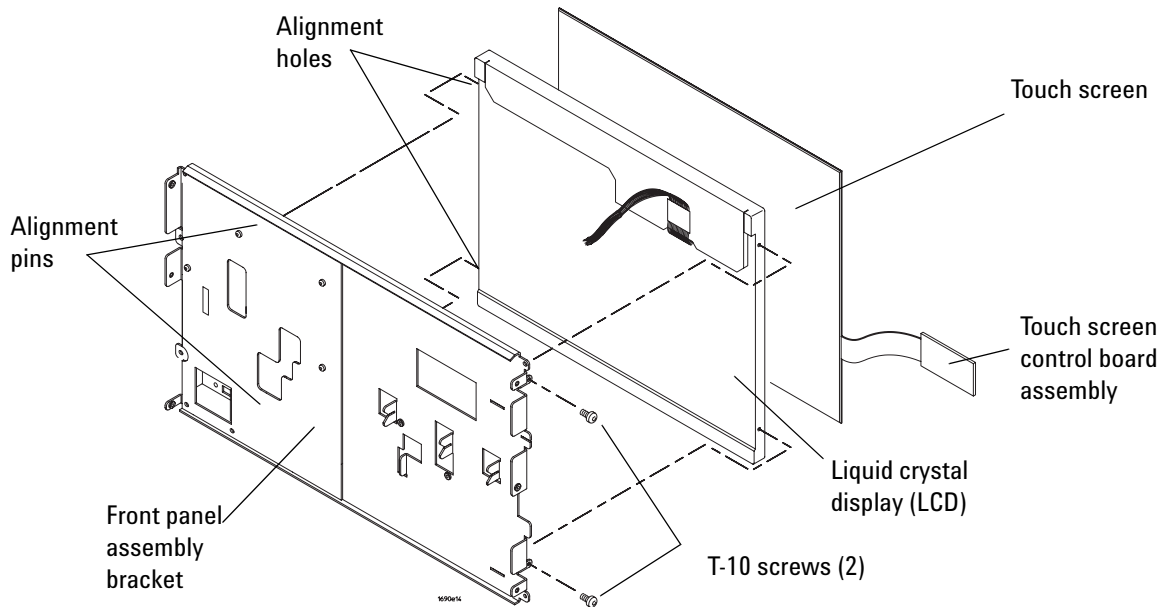

CAUTION

Handle the touch screen and LCD display by the edges only. If necessary, clean with alcohol and a lint-free wipe or remove any airborne contamination with ionized air.


- 4 Gently pry the touch screen from the LCD. It is held on with double-sided tape.
- 5 Reverse this procedure to replace the display assembly.

To remove and replace the keypad and keypad board

- 1 Perform previous procedures:
 - “To prepare the instrument for disassembly” on page 40.
 - “To remove and replace the cover” on page 44.
 - “To remove and replace the front panel assembly” on page 51.
- 2 Pull to remove the cursor knob from the front of the frame.
- 3 Using a Torx T10 screwdriver, remove the 3 screws securing the keypad board to the front frame.
- 4 Remove the keypad board and keypad from the frame.

CAUTION


Wear ESD finger cots or use care not to touch the black pads on keypad and on the keypad board. Finger oils can impair contact. If necessary, carefully clean the contacts using alcohol and lint-free swabs or wipes.

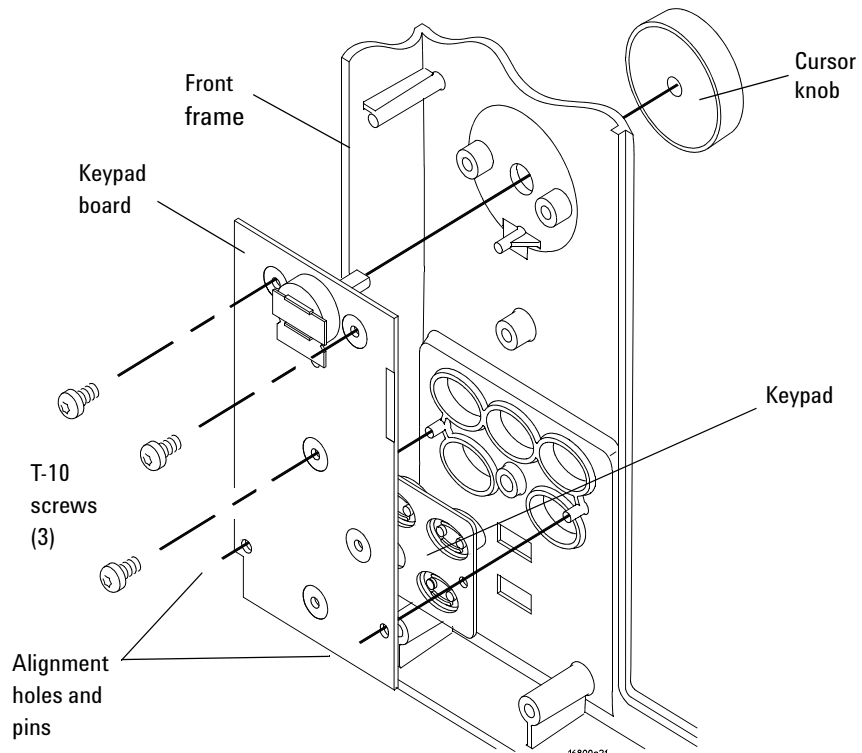

- 5 Reverse this procedure to install the keypad and keypad board. Note the alignment pins on the frame and the holes in the board.


To remove and replace the hard disk drive

- 1 Perform previous procedures:
 - [“To prepare the instrument for disassembly”](#) on page 40.
 - [“To remove and replace the cover”](#) on page 44.
 - [“To remove and replace the front panel assembly”](#) on page 51.
- 2 Using a Torx T10 screwdriver, remove the 2 side screws that secure the tray assembly to the chassis.
- 3 Slide the tray out just enough to be able to disconnect the 2 hard drive cables from the hard drive.
- 4 Using a Torx T10 screwdriver, remove the 4 screws that secure the hard drive to the hard drive bracket. These screws are accessible through holes in the bottom of the tray assembly.
- 5 If you also need to replace the hard drive bracket, remove the 4 Pozi-drive shoulder screws with washers that secure it to the tray assembly.
- 6 Reverse this procedure to install the hard disk drive.
- 7 To restore your system software, see [“To reinstall the operating system”](#) on page 36.

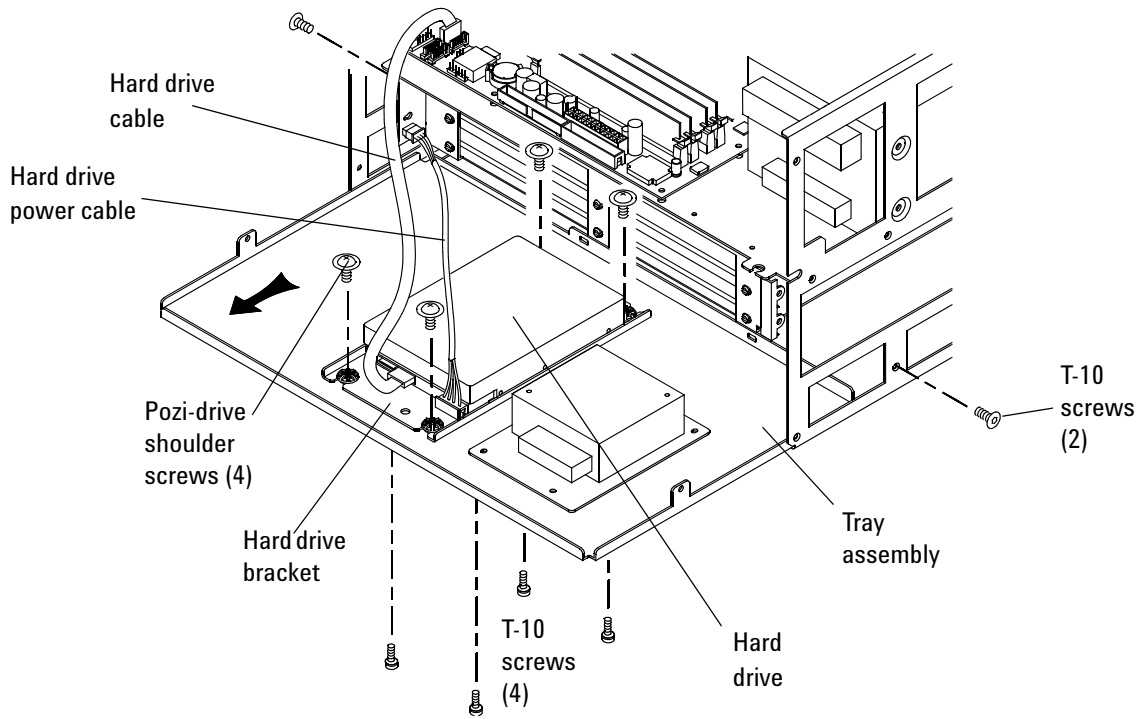

To remove and replace the tray assembly

- 1 Perform previous procedures:
 - “To prepare the instrument for disassembly” on page 40.
 - “To remove and replace the cover” on page 44.
 - “To remove and replace the front panel assembly” on page 51.
- 2 Using a Torx T10 screwdriver, remove the 2 side screws securing the tray assembly to the chassis.
- 3 Slide the tray assembly out far enough to disconnect the hard drive and power supply cables. Use the release tab(s) to help disconnect the power supply cables.
- 4 Slide the tray out of the chassis.

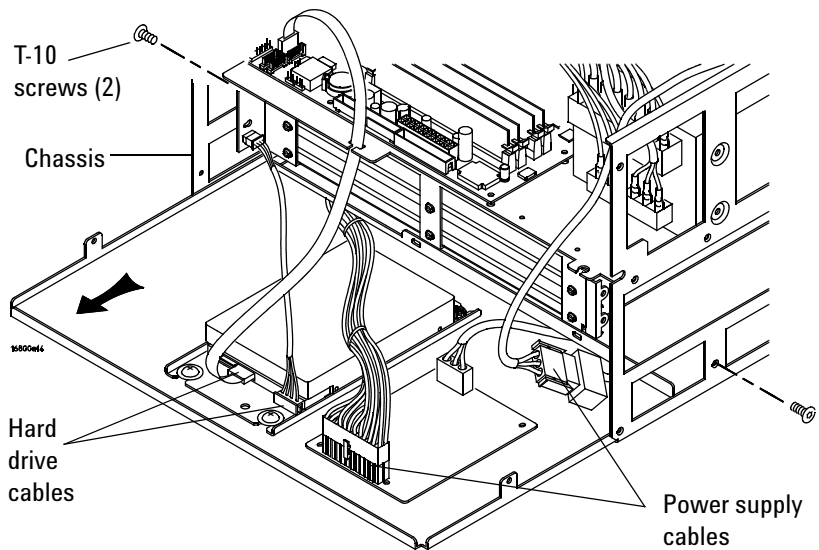


- 5 Reverse this procedure to replace the tray assembly.

To remove and replace the fans

60 mm fan


- 1 Perform previous procedures:
 - “To prepare the instrument for disassembly” on page 40.
 - “To remove and replace the cover” on page 44.
- 2 Disconnect the fan cable from the module interface board (MIB).
- 3 Using a Torx T25 screwdriver, remove the 4 screws holding the fan to the rear of the chassis.

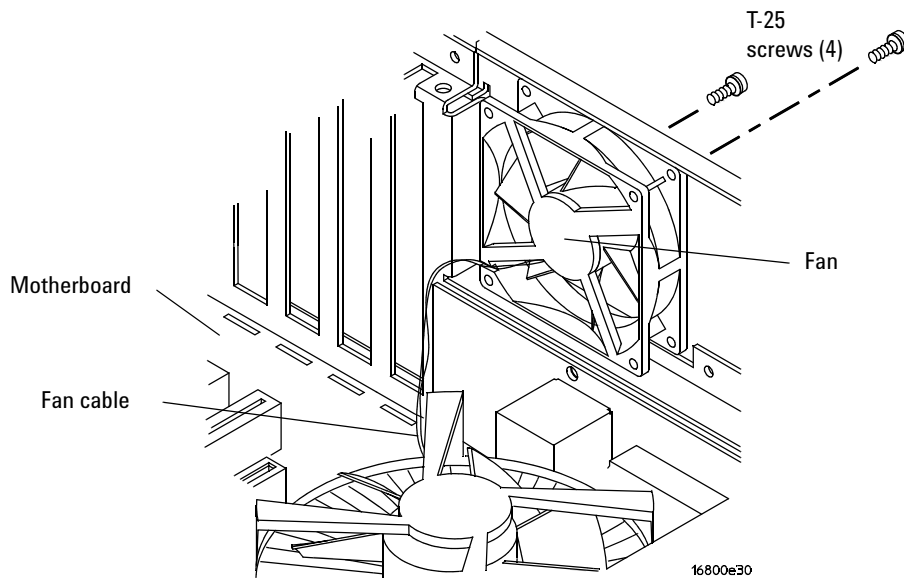

- 4 Reverse this procedure to replace the fan.

92 mm fans

- 1 Perform previous procedures:
 - “To prepare the instrument for disassembly” on page 40.
 - “To remove and replace the cover” on page 44.
 - “To remove and replace the front panel assembly” on page 51.
 - “To remove and replace the tray assembly” on page 64.
- 2 Using a Torx T10 screwdriver, remove the 4 screws securing the baffle to the chassis.
- 3 Disconnect the fan cable for the fan you are replacing from the fan cable assembly. If replacing all fans, disconnect the fan cable assembly from the module interface board.
- 4 Using a Torx T25 screwdriver, remove the 4 screws securing the fan to the rear of the chassis.

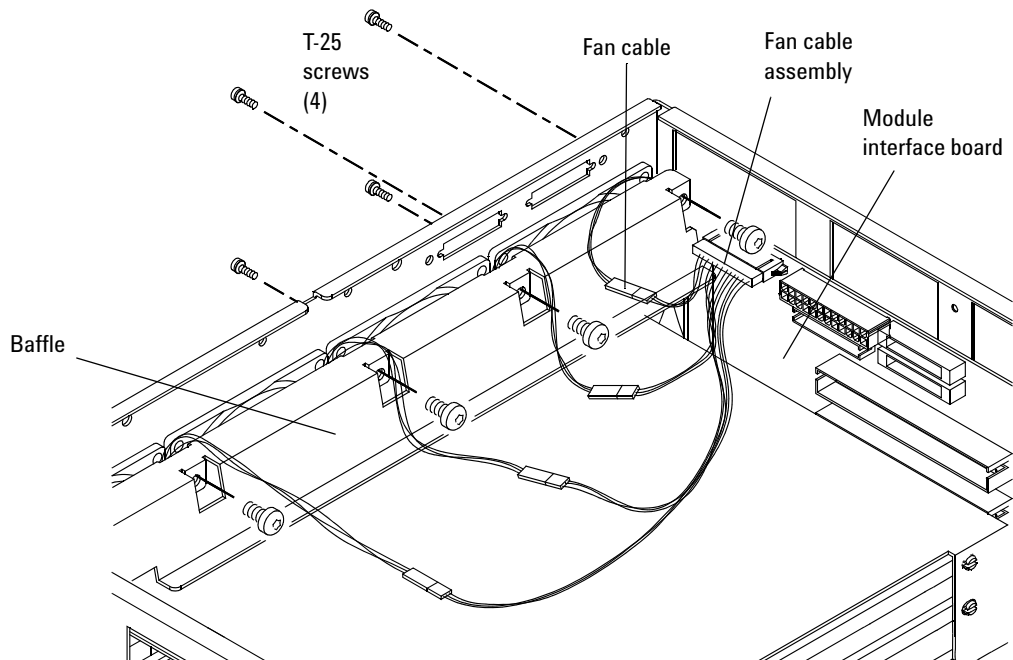


- 5 Reverse this procedure to replace the fan(s).

To remove and replace the line filter assembly

Perform previous procedures:


- “To prepare the instrument for disassembly” on page 40.
 - “To remove and replace the cover” on page 44.
 - “To remove and replace the front panel assembly” on page 51.
- 1 Disconnect the line filter assembly cables from the power supplies. In order to press the release latches on the lower cable connection, you may need to slide the tray assembly part way out following the procedure “To remove and replace the tray assembly” on page 64.
 - 2 Using a Torx T10 screwdriver, remove the 2 screws securing the power socket to the frame and the 1 screw to the ground wire.

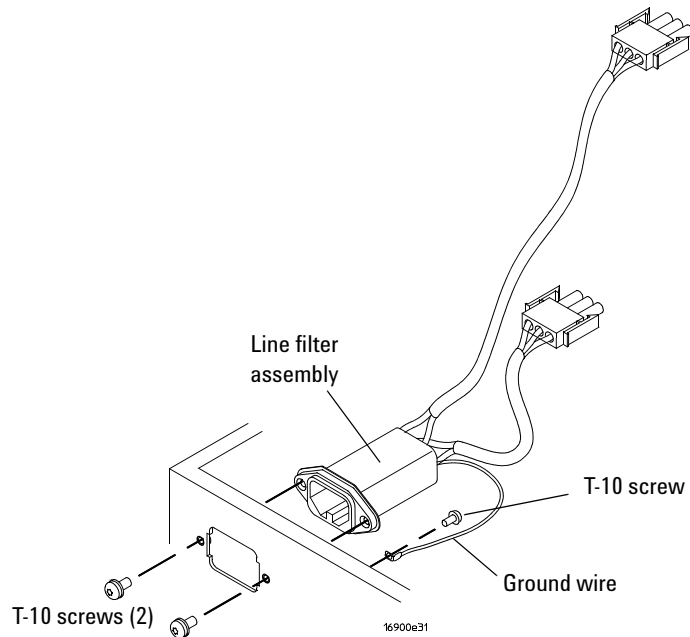

- 3 Reverse this procedure to replace the power line filter assembly.

To remove and replace the module interface board

- 1 Perform previous procedures:
 - “To prepare the instrument for disassembly” on page 40.
 - “To remove and replace optional modules or filler panels” on page 42.
 - “To remove and replace the cover” on page 44.
 - “To remove and replace the front panel assembly” on page 51.
 - “To remove and replace the hard disk drive” on page 62 (if applicable).
 - “To remove and replace the tray assembly” on page 64.
- 2 Ensure that all cables are disconnected from the module interface board.
- 3 Using a 13/16-inch deep-well nut driver, remove the 3 BNC nuts from the module interface board (MIB).
- 4 Remove the retaining screw from the MIB.
- 5 Slide the board toward the front of the chassis enough to allow the 9 standoffs to clear their keyholes, then lift the board out of the chassis.

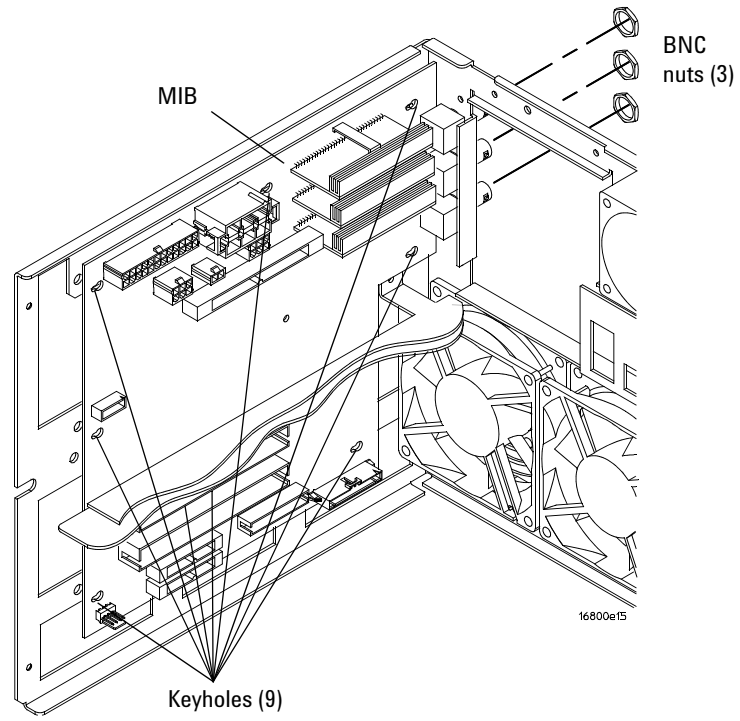

6 Reverse this procedure to replace the MIB.

Returning Assemblies

Before shipping the logic analyzer or assemblies to Agilent Technologies, contact your nearest Agilent Technologies Sales Office for additional details. To locate the sales or service office near you, go to www.agilent.com/find/contactus.

- 1 Write the following information on a tag and attach it to the part to be returned.
 - Name and address of owner.
 - Model number.
 - Serial number.
 - Description of service required or failure indications.

- 2 Remove accessories from the logic analyzer.

Only return accessories to Agilent Technologies if they are associated with the failure symptoms.

- 3 Package the logic analyzer or assemblies.

You can use either the original shipping containers, or order materials from an Agilent sales office.

CAUTION

For protection against electrostatic discharge, package the logic analyzer in electrostatic material.

- 4 Seal the shipping container securely, and mark it FRAGILE.



7 Replaceable Parts

Ordering Replaceable Parts [72](#)

Power Cables and Plug Configurations [73](#)

Replaceable Parts List [75](#)

This chapter contains information for identifying and ordering replaceable parts for your 16901A logic analysis system.



Ordering Replaceable Parts

To order a part, visit us on the web at www.parts.agilent.com or call us in the United States at 1-877-447-7278. Or, you can contact your nearest Agilent Technologies Sales Office for assistance. To locate a sales office near you, go to www.agilent.com/find/contactus.

Exchange Assemblies

Some assemblies are part of an exchange program with Agilent Technologies.

The exchange program allows you to exchange a faulty assembly with one that has been repaired and performance verified by Agilent Technologies.

After you receive the exchange assembly, return the defective assembly to Agilent Technologies. A United States customer has 30 days to return the defective assembly. If you do not return the defective assembly within the 30 days, Agilent Technologies will charge you an additional amount. This amount is the difference in price between a new assembly and that of the exchange assembly. For orders not originating in the United States, contact your nearest Agilent Technologies Sales Office for information. To locate a sales office near you, go to www.agilent.com/find/contactus.

For more information on returning assemblies go to “[Returning Assemblies](#)” on page 70.







Power Cables and Plug Configurations

This instrument is equipped with a three-wire power cable. The type of power cable plug shipped with the instrument depends on the instrument model number country of destination.

In [Table 2](#), the plug orientation number is the industry identifier for the plug only.








These cords are included in the CSA certification approval of the equipment.

Table 2 Power Cables and Plug Configurations

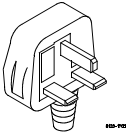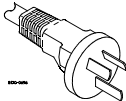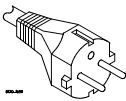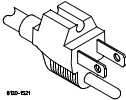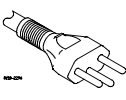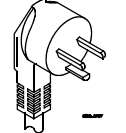Plug Type (male connector)	Agilent Part No.	Plug Orientation (female connector)	Cable Length	Cable Color	Country
Option 900 250V 	8120-1703	IEC 320-1 C13 (90°)	2.3 meters	Mint Gray	United Kingdom, Cyprus, Nigeria, Zimbabwe, Singapore, Malaysia
Option 901 250V 	8120-0696	IEC 320-1 C13 (90°)	2.2 meters	Gray	Australia, New Zealand
Option 902 250V 	8120-1692	IEC 320-1 C13 (90°)	2.0 meters	Mint Gray	East and West Europe, Saudi Arabia, (unpolarized in many nations)
Option 903 125V 	8120-1521	IEC 320-1 C13 (90°)	2.2 meters	Jade Gray	United States, Canada, Mexico, Philippines, Taiwan
Option 906 250V 	8120-2296	IEC 320-1 C13 (90°)	2.0 meters	Gray	Switzerland
Option 912 250V 	8120-2957	IEC 320-1 C13 (90°)	2.0 meters	Gray	Denmark

7 Replaceable Parts

Table 2 Power Cables and Plug Configurations (continued)

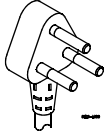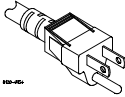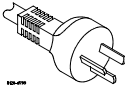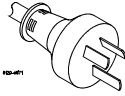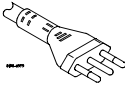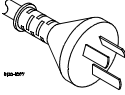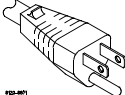Plug Type (male connector)	Agilent Part No.	Plug Orientation (female connector)	Cable Length	Cable Color	Country
Option 917 250V 	8120-4600	IEC 320-1 C13 (90°)	2.0 meters	Mint Gray	Republic of South Africa, India
Option 918 100V 	8120-4754	IEC 320-1 C13 (90°)	2.3 meters	Gray	Japan
Option 919 250V 	8120-6799	IEC 320-1 C13 (90°)	2.0 meters	Flint Gray	Israel
Option 920 250V 	8121-6871	IEC 320-1 C13 (90°)	2.0 meters	Flink Gray	Argentina
Option 921 	8120-6979	IIEC 60320-1 C13 (90°)	4.5 meters	Flint Gray	Chile
Option 922 	8120-8377	IEC 320-1 C13 (90°)	2.2 meters	Flint Gray	People's Republic of China
Option 927 	8120-8871	IEC 60320-1 C13 (Straight)	2.3 meters	Flint Gray	Brazil, Thailand

Replaceable Parts List


The replaceable parts lists in this chapter are organized by reference designation. The exploded views do not show all of the parts in the replaceable parts lists.

Information included for each part in the list consists of the following:

- Reference designator:
 - A – Assembly.
 - H – Hardware.
 - MP – Mechanical Part.
 - W – Cable.
- Agilent Technologies part number.
- Total quantity included with the instrument (Qty).
- Description of the part.

Cover and Front Panel Assemblies

The 16901A logic analysis system has a built-in touch screen color display and also support external displays.

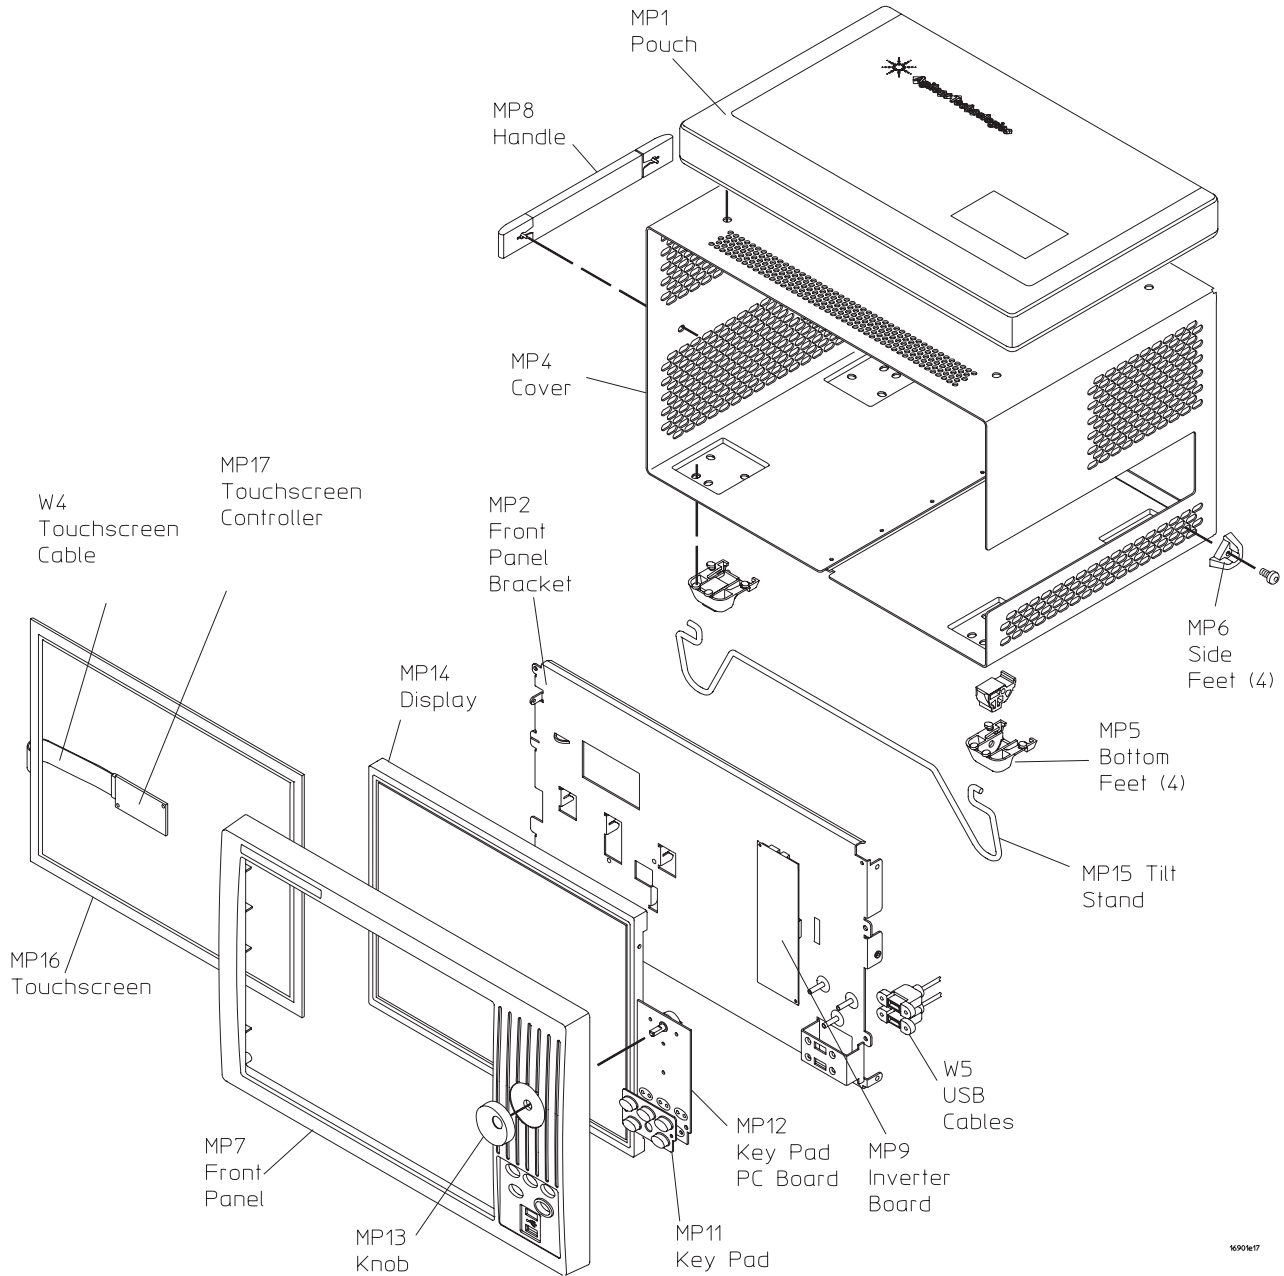

16901e17

Table 3 Replaceable parts for the cover and front panel assembly

Ref. Des.	Agilent Technologies Part Number	Qty	Description
A2	16800-68701	1	Font panel with 15 inch display and touchscreen
H1	0515-0374		Screw-machine M3 x 0.5 10mm long
H2	0515-2032		Screw-machine M3 x 0.5 8mm long 90-deg-flh-hd
H3	0515-0430		Screw-machine M3 x 0.5 6mm long
MP1	01680-68702	1	Accessory pouch
MP2	16800-01201	1	Bracket-front panel
MP4	16901-04101	1	Cover
MP5	54810-61001	4	Foot-bottom
MP6	16800-40503	4	Foot-side
MP7	16800-40201	1	Front frame
MP8	16600-68707	1	Handle assembly (includes screws)
MP9	0950-4805	1	Inverter - DC-AC 8W dual output w/dimming function
MP11	16800-47402	1	Keypad - touchscreen
MP12	16800-66403	1	Keypad PC board assembly
MP13	16702-47402	1	Knob - cursor
MP14	2090-0939	1	LCD (Liquid Crystal Display) 15 inch TFT color
MP15	01680-04701	1	Tilt stand
MP16	0960-2576	1	Touch screen
MP17	0960-2535	1	Touch screen controller board
MP28	16800-01209	1	Front panel plate


7 Replaceable Parts

Table 3 Replaceable parts for the cover and front panel assembly (continued)

Ref. Des.	Agilent Technologies Part Number	Qty	Description
W1	16800-61613	1	Display cable (not shown)
W2	16800-61603	1	Front panel cable (not shown)
W3	16800-61614	1	Inverter cable (not shown)
W4	D8104-61604	1	Touch screen cable
W5	16800-61611	1	USB dual cable

16901A Frame

The 16901A logic analysis system is modular with slots for two measurement modules.

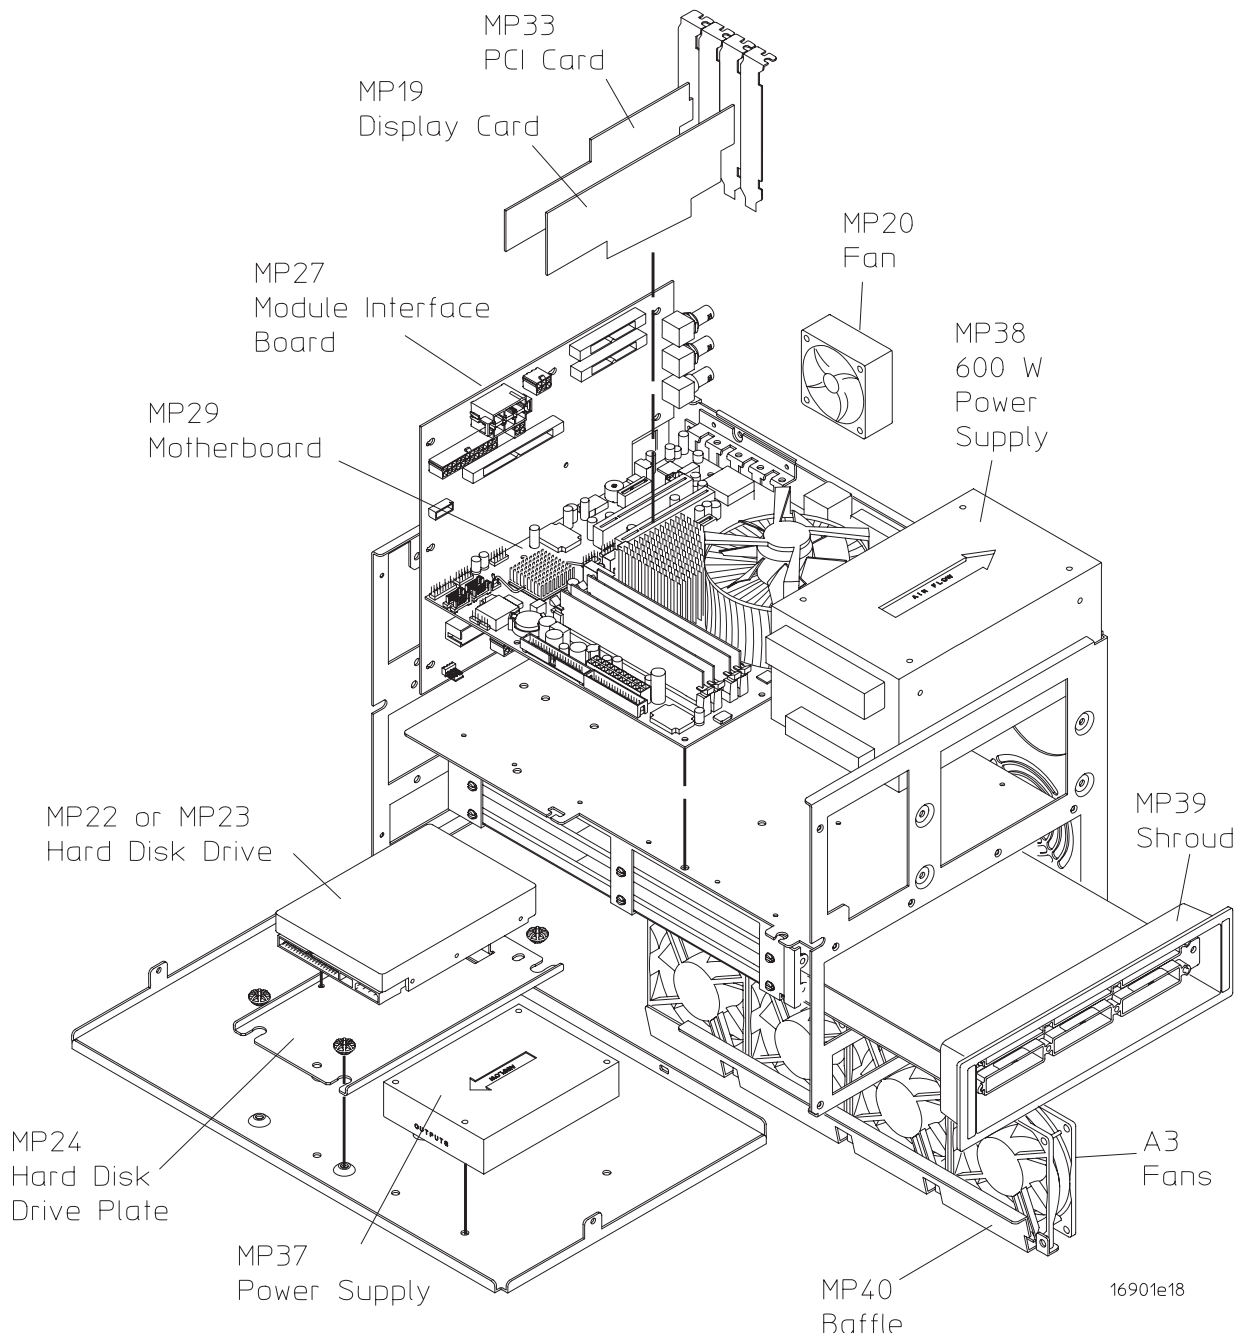

7 Replaceable Parts


Table 4 Replaceable parts for the frame

Ref. Des.	Agilent Technologies Part Number	Qty	Description
	see page 73	1	Power cords
A3	16901-60001	1	Chassis - fan assembly (includes all fans)
MP18	16800-00201	1	CPU I/O panel (not shown)
MP19	0960-2530	1	Display card - advanced digital
MP22	16800-83500	1	Hard disk drive (HDD) formatted 80 GB ATA 7200 RPM Serial-ATA
MP23	0950-4804	1	Hard disk drive (HDD) 80 GB ATA 7200 RPM Serial-ATA
MP24	16800-01203	1	Hard disk drive (HDD) plate
MP25	1150-7970	1	Keyboard (not shown)
MP26	16901-94301	1	Label AC power (not shown)
MP27	16800-66504	1	Module interface board (MIB)
MP29	D81004-68809	1	Motherboard assembly (with CPU and SDRAM)
MP30	1150-7913	1	Mouse, optical wheel (not shown)
MP31	16903-66404	1	PCI card
MP32	16800-01205	1	PCI card bracket
MP33	16903-66504	1	PCI card w/bracket assembly
MP34	0950-4812	1	Power supply AC/DC 175 W 5 outputs
MP35	16800-01204	1	Power supply plate
MP37	16804-68701	1	Power supply subassembly - 175 W
MP38	16901-68701	1	Power supply subassembly - 600 W
MP39	16901-40501	1	Probe shroud
MP41	16903-67101	1	RFI Gasket keyboard/mouse (not shown)
MP43	1150-7997	1	Stylus (not shown)
MP44	16901-45001	1	Lever assembly - left
MP45	16901-45002	1	Lever assembly - right
MP46	16800-81201	1	RFI gasket fabric over foam

Table 4 Replaceable parts for the frame (continued)

Ref. Des.	Agilent Technologies Part Number	Qty	Description
MP47	16800-81202	1	RFI gasket fabric over foam
MP48	16800-81203	1	RFI gasket no snag copper
W6	16800-61609	1	Cable - CPU power
W7	16800-61608	1	Cable - fan assembly
W8	16800-61601	1	Cable - front panel
W9	16800-61610	1	Cable - hard disk drive (HDD) power
W10	54855-61624	1	Cable - motherboard switch cable
W11	16800-61600	1	Cable - PCI/MIB
W12	16800-61605	1	Cable - power 175W
W14	16800-61607	1	Cable - power supply 175W
W15	D8104-61603	1	Cable - serial-ATA hard drive

7 Replaceable Parts

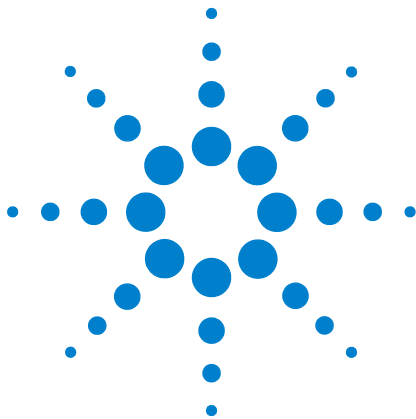

8 Theory of Operation

Block Level Theory 84

This chapter describes the theory of operation for the 16901A logic analysis system.


The information in this chapter is to help you understand how the logic analysis system operates. This information is not intended for component-level repair.



Block Level Theory

The block-level theory includes the theory of operation of the logic analyzer in terms of the major subsystems including:

- CPU subsystem.
- PCI board.
- MIB (module interface board).
- Front panel assembly.

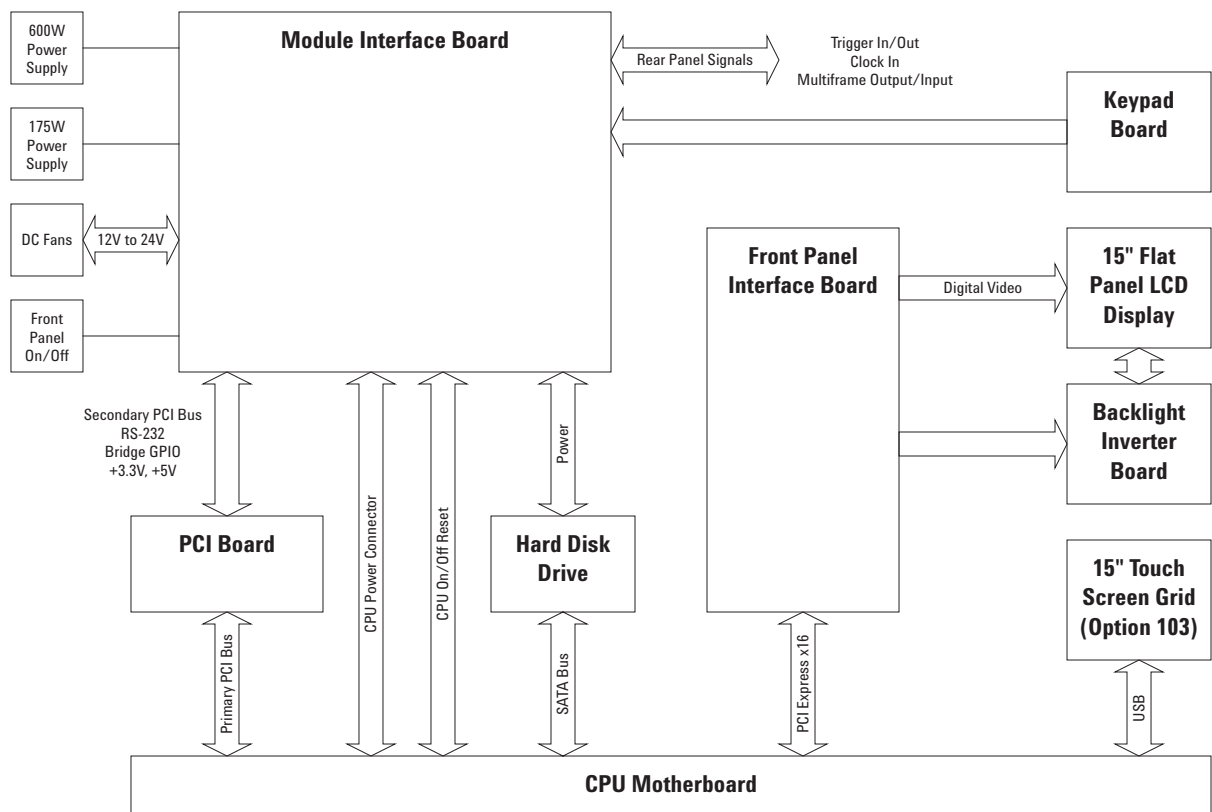

CPU Subsystem

The CPU subsystem includes:

- CPU board (more on [page 86](#)).
- Disk drives (more on [page 86](#)).
- Power supply (more on [page 87](#)).


PCI Board

For more information on the PCI board go to [page 87](#).

Module Interface Board (MIB)

The MIB subsystem block diagram shown here includes:

- Module bus FPGA(s) (more on [page 88](#)).
- I/O FPGA (more on [page 88](#)). Supported rear panel signals include:
 - Multiframe Input/Output (more on [page 88](#)).
 - Trigger IN/OUT (more on [page 89](#)).
 - Clock IN (more on [page 89](#)).
- PLD (more on [page 89](#)).
- Voltage rail monitor (more on [page 90](#)).
- Overtemp monitor (more on [page 90](#)).
- Fan control (more on [page 90](#)).

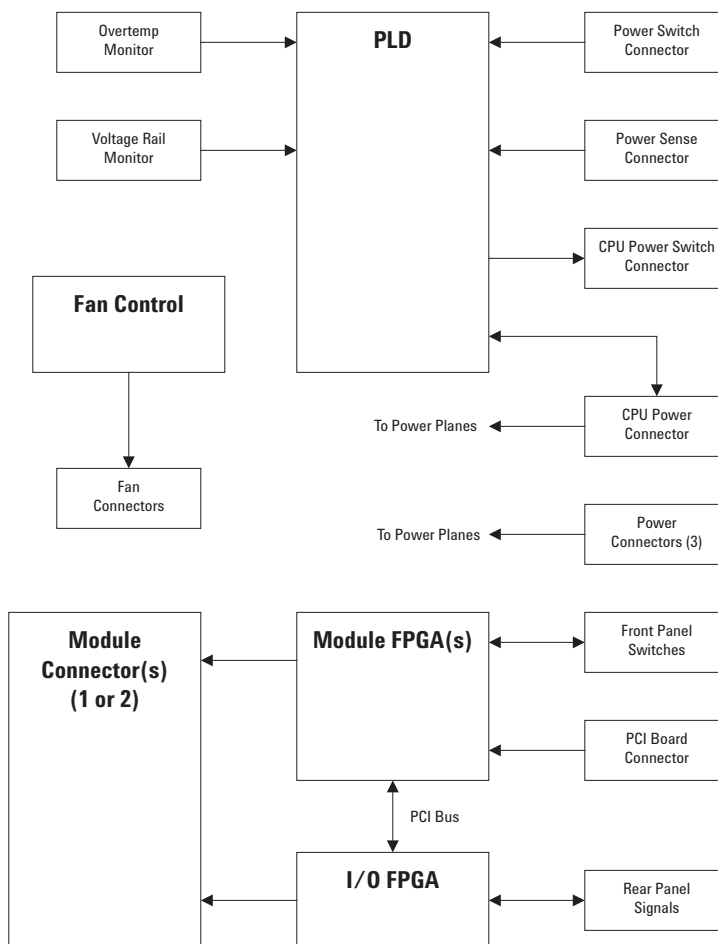


Front Panel Assembly

The front panel assembly block diagram shown here includes:

- LCD display.
- Touch screen board and grid.
- Keypad board.

For more information on the front panel assembly to to [page 90](#).

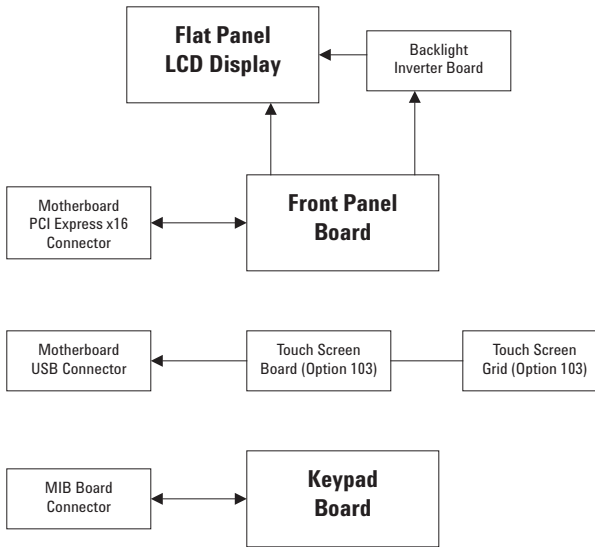

CPU Subsystem

CPU Board

The CPU motherboard is a standard microATX configuration with 1 GB of system RAM. The exact CPU and speed grade will vary over the life of the product. Standard I/Os built into the ATX board are PS/2, serial port, parallel port, USB 2.0, 10/100 Mbit LAN, and VGA Video. One PCI slot and one PCI Express x1 slot are available for added I/O such as 1 Gbit LAN or video.

Disk Drive

The frame contains a SATA hard drive. It is logically controlled directly from the CPU motherboard.

Power supply

The frame uses two modular power supplies to provide the six DC voltage rails: -12 V, +12 V, -5 V, +5 V, -3.25 V, +3.3 V. These rails use remote sensing to maintain .01% load regulation. The module slots are limited to 100 W each and the instrument as a whole to 600 W.

The frame has a "soft" power on/off algorithm. Pressing the power switch notifies the CPU to either wake up or power down. The CPU then in turn drives the signal line which actually turns the supplies on or off. A PLD monitors this process and will force a power down after approximately two minutes if the CPU does not respond. The small portion of circuitry involved in this process is powered from an auxiliary +5 V which is always present as long as the instrument is plugged in. Additional logic monitors the voltage levels on the six rails and will also cause an immediate power down if any one drops below about 90% of regulation. Power down can also be caused by an over temperature sense circuit. In this case, the PLD notifies the CPU, the user receives a warning window, and a soft power down is started. Again, the PLD will force a power down if the CPU does not soft power down in about two minutes.

PCI board

The PCI Board plugs into a CPU motherboard PCI slot, providing the interface between the CPU motherboard and the logic analyzer. On the PCI board is a PCI bridge chip used to provide an electrical interface between the CPU PCI slot bus and the two PCI devices located on the Module Interface Board. A TI2050A PCI bridge chip is used to connect to the primary PCI bus on the CPU motherboard connector and provides a secondary PCI bus, which is connected via an 80-pin high-density cable from this PCI board to the Module Interface Board.

MIB (Module Interface Board)

Top level function

The MIB contains all of the logic analyzer frame specific hardware. This includes all circuits necessary to interface with measurement modules, interface with the front panel knob and keys, monitor frame functions, and interface to the

CPU motherboard via the PCI board. It also performs power distribution and numerous interconnects. The MIB has two module bus FPGAs.

Module Bus FPGA(s)

The Xilinx XC3S500E FPGA is the primary bridge between the CPU and the measurement modules. It effectively performs a translation from PCI slot to the proprietary module interface bus.

In the 2-slot, high-power frame, a second module FPGA, Xilinx XC2VP20, performs the translation from PCI slot to a second, high-speed module interface bus.

I/O FPGA

The Xilinx XC2V250 FPGA is the center of the instrument I/O functions. The system interfaces directly to this part in the same way it talks to the measurement module slot(s), via a 16-bit multiplexed general purpose bus. The FPGA is loaded from an on board EPROM at power up. The EPROM contents can be changed (updated) through the system software via a JTAG port.

A major function of this FPGA component is system correlation; time alignment of the measurement modules and possible other modules connected through the multiframe port or Trigger In connector. This is done with eight 52-bit counters running at 1.6 GHz, allowing relative time alignment of eight separate events. A 100 MHz clock is also selected from three possible sources (internal, multiframe, external) and a synchronizing signal is generated for time alignment across multiframe.

A second major function of the FPGA is the logical combination and routing of the module arm and trigger lines: ARM, TRIG, FLAG. These signals are used by the modules to start and stop each other in addition to supplying the signals for real-time correlation.

The other FPGA functions include a system interface to control the Trigger In and Trigger Out ports, a serial DAC programmer, and UARTs for multiframe.

Multiframe Input/Output Multiframe is a proprietary bus used to connect multiple 16900A, 16901A, and 16902A frames. It physically consists of two connectors (input, output) which cable frames together in a daisy chain configuration. It logically allows two or more frames to appear and operate

as one large frame. A LAN connection between frames is used in addition to the multiframe cable for fast data transfer.

The bus is physically 18 LVDS differential pairs plus ground. The signals are 100 MHz clock, SYNC, START, eight flags, RUN, UARTS (receive and transmit), and "cable on" detection. They route from FPGA to FPGA across frames with no other hardware other than termination resistors.

The UARTS allow frames to communicate at a low level to identify themselves and pass IP addressing information. The "cable on" detection lets the system know when a frame has been added or removed via power up/down or cable changes. Together, these functions allow a multiframe setup to completely self-configure itself and appear as one integrated measurement system.

Trigger IN/OUT These two BNCs function as an external trigger out and arm in signaling between frames or other test equipment. The TRIGGER OUT is a simple 3-state LVTTTL 50 Ω line drive circuit. TRIGGER IN (ARM) is complicated by the need to handle variable threshold levels. The circuit consists of a programmable 12 bit DAC and comparator. This combined with a level shift and divide circuit allows for a ± 5 V input range, 200 mV minimum swing, and 50 mV threshold steps.

Clock IN This BNC input is specifically for a 10 MHz clock signal from an oscilloscope or other source. The signal is AC coupled and passed through a 10X multiplier part (low jitter) and then fed to the FPGA as one of the 100 MHz clock source choices. Using this input allows two measurement instruments to run on the same time base and maintain correct time alignment over long acquisitions.

PLD

The PLD is the low level system control element powered from the AUX +5 V rail and continuously ON. It logically controls the soft power ON/OFF through signal lines to the CPU and power switch monitoring. It physically turns power ON/OFF via power on/off signals on the power supply sense cables. In addition to the power switch starting a power down sequence, two additional monitoring circuits (overtemp and voltage rail) may cause the PLD to initiate power down. Both of these conditions are "latched" faults and require removing the power cord for 15 seconds to clear the condition.

Voltage Rail Monitor All six voltage rails are continuously monitored for an under voltage fault condition. This could be caused by such things as a failed power supply or a short circuit within the instrument. When detected, both power supplies are immediately shut down. At power up, there is a one second time delay to allow the power to stabilize before the monitoring circuit is enabled.

Overtemp Monitor A temperature monitoring circuit protects the instrument from thermal damage due to things such as failed fans or blocked frame vents. The circuit first notifies the CPU of a problem which then prompts the user with a warning message and initiates a soft power down. If the soft power down fails, a forced power down is initiated after about two minutes.

Fan Control The instrument uses a pair of 24 V fans driven from a DC/DC boost converter circuit. This circuit creates a linear voltage ramp from 12 V to 24 V across the operating temperature range. The purpose of this circuit is to increase air flow as needed while maintaining the lowest possible fan noise.

Front Panel Assembly

The front panel assembly is composed of two PC boards comprising three independently operating sub-systems. The two PC boards are the front panel interface board and the keypad board. The three front panel sub-systems are:

- Front panel keypad board.
- Front panel interface board.
- Front panel touch screen.

Front Panel Keypad Board

The front panel switches consist of five buttons and one digital encoder, the knob. When a button is pressed and released, or the knob turned, a series of codes are sent back to the module FPGA. When the module FPGA receives a front panel code, an interrupt is sent to the system CPU. The resulting ISR will read the code and act on it.

The module FPGA was used as a convenient place to put this logic. This logic operates independently of the module backplane logic also within the module FPGA.

Front Panel Interface Board

The front panel interface board plugs into the CPU motherboard's PCI Express x16 slot and provides a connection point for flat-panel display communication.

The connectors J2 and J3 are connected to a Mitsubishi 15" XGA AA150XN01 TFT-LCD 1024x768 display:

- Connector J2 provides the data path back to an Adlink video adapter.
- Connector J3 is used to provide the high-voltage needed to light the display backlight. This high-voltage is generated using a power inverter board, which is mounted on the front panel interface board. This power inverter board is a TDK CXA-0384 DC-AC Inverter Unit.

Front Panel Touch Screen

Attached to the front panel assembly is a Touch Screen Control module used to implement the touch screen. The touch screen controller board is a 3M SC801U. Mounted in front of the flat panel display is a touch screen grid connected directly to the touch screen controller. The controller interprets touch presses and communicates with the host CPU via USB.

Power Up Routine

The power up routing includes the following:

- Boot sequence (more on [page 91](#)).
- Product install (more on [page 94](#)).
- Software recovery methods (more on [page 95](#)).
- Self test (more on [page 96](#)).

Boot Sequence

The 16901A logic analysis system ships with the Windows XP Professional operating system. After power is applied to the frame, the basic input/output system (BIOS) is the first thing to run. Among other things, the BIOS is responsible for enumerating plug-and-play (PnP) devices in the system and doing a "power on self test" (POST). All of the CPU (motherboard) RAM is checked during POST--however, subtle memory problems may not be detected by this simple test. If any hardware that the BIOS detects is malfunctioning at a

fundamental level, then the BIOS reports an error to the display (if available). If things are OK, control is turned over to the operating system.

During startup, the Agilent logo is displayed by the system BIOS, then a few other messages, and finally the preliminary Windows XP startup screens.

During the first phase of the Windows startup, the kernel is loaded along with various system drivers. Prior to the video drivers loading, video is only displayed to the same video device as the BIOS startup screen. Once the video drivers load, the resolution will switch and eventually a logon screen will be presented. The logon screen will appear on whichever video adapter (LCD or external VGA) was displaying the Windows desktop when the system was last shut down. It is possible to get a blank screen. In this situation, you can press and hold the "Touch Off" button on the front panel to open Intel's configuration utility and switch the Windows desktop from one display adapter to the next. At any time, either the LCD panel or the external monitor will have the Windows desktop displayed to it. It is also possible, but not typical, for the Windows desktop to be stretched across both the LCD and external monitor. The "Touch Off" front panel button can be pressed and held to open Intel's configuration utility which can force the desktop to use either the LCD or external monitor exclusively.

By the time Windows has presented the Windows logon screen, two critical pieces of Agilent-specific software should already be running:

- Logic analyzer device drivers.
- Logic analyzer service.

The remaining critical piece of Agilent software (the GUI application itself) does not run until a user has logged onto the machine and started the application by clicking on the shortcut on the Windows desktop and/or the Windows start menu. The GUI application may auto-run when a user logs onto the machine.

The logic analyzer device drivers communicate directly with all of the hardware. This includes the frame hardware and all modules plugged into the frame. All other Agilent software in the system communicates with the drivers in order to access the hardware. Therefore, missing drivers look like missing hardware to the Agilent software. The frame power

button LED will flash when the frame is first powered on and become steady once the frame drivers have loaded. A flashing power button LED should indicate:

- 1 The frame is in the middle of a power up or power down sequence.
- 2 The frame hardware was not recognized by the PnP system.
- 3 The frame drivers are missing.

Once the Windows kernel and the system drivers are loaded, a variety of Windows services (background processes) are started automatically by the system. These services are like UNIX/Linux daemons. They run silently in the background in order to provide system services. They run before any user has logged onto the system. If the logic analyzer product is installed on the system, a logic analyzer service called "Agilent Logic Analysis" should be running.

The logic analyzer service carries the following general responsibilities:

- System manager for the local frame.
- Communicates with local GUI application software.
- Listens for connection requests across the LAN (remote connect from other systems).
- Initialization of all local frame hardware including modules. This initialization includes loading of all FPGAs that are not loaded directly by boot-EEPROMs when power is first applied to the system.
- Hardware monitoring.
- Control over the "Touch Off" front panel button.

The logic analyzer service must be started and fully initialized before the application software will be allowed to run. The logic analyzer drivers are not required for the application software to run – however the software will not be able to go online with the local hardware until the drivers are installed/running. In addition, other machines will not be able to remote connect to the machine and use its hardware if the drivers are not installed and running.

Because the service should always be running regardless of whether any user is logged onto the system, the logic analyzer should always be responsive to remote connection requests from other machines. The Touch Off button should also always function.

When the GUI application is launched by a logged on user, the application (by default) will attempt to connect to local hardware and go "online". If the service is not started, the application should either wait for the service to start (newer software revisions) or generate a message box indicating the service needs to be started (older software revisions). If the drivers are not loaded, the GUI application will start in offline mode.

Once the GUI application is running, the user can go online with local hardware or the hardware in any other Agilent 168x/169x/168xx/1690x logic analyzer running the same version of the logic analyzer software. The remote machine must be available on the network.

Product install

The product install (SetupLAxxxx.exe) performs the following:

- Install the logic analyzer-specific files to the local hard drive.
- Register the application with the operating system (various registry settings are applied including COM registration).
- Create start menu/desktop shortcuts.
- Install device drivers.
- Install and start the service.
- Check frame boot-EEPROMs (non-volatile ROMs) and verify they are up-to-date. Reloads the boot-EEPROMs if necessary.

Software recovery methods

1 Logic analyzer product re-installation

Re-installing the logic analyzer product requires running the setup executable file – typically named SetupLAxxxx.exe. For example, the 03.60 software release file will be called SetupLA0360.exe.

During the installation of the product, older versions are automatically removed and replaced with the newer version. However, if you need to install an older version of the software over a newer version you must first uninstall the newer version. To uninstall the software, go to Windows **Start>Control Panel>Add or Remove Programs**. Select the logic analyzer software from the list of installed programs and select uninstall.

This recovery mechanism is used to fix problems with the logic analyzer software including application crash problems or problems with hardware recognition.

2 Full hard drive (system-level) recovery:

This is done by placing the appropriate recovery CD into an external USB DVD-ROM drive and rebooting the analyzer. When the system begins booting after shutting down, the recovery sequence will begin. After addressing the introduction screens, the recovery CD will erase all data on the hard drive and image the disk back to the state it was in when the customer received it. After a full hard drive recovery, the logic analyzer software may or may not already be installed (depending on the version of the recovery CD used).

This recovery mechanism is used to fix system-level problems – including damage done by viruses or previously-installed software, problems with operating system bugchecks (blue screen), etc.

Self Test

The logic analyzer does very little self test unless it is explicitly run by the user. As previously mentioned, the system BIOS does some hardware self test before turning control over to the operating system.

Once a user logs into the system and runs the logic analyzer GUI application software, self tests can be run by clicking on the "Help" menu within the application and then selecting "Self Test".

All self tests are consolidated into a single self test dialog.

The self test dialog contains a pane which allows the user to select the "test suite" and a pane which allows the user to select a specific test within that suite – or all of the tests. The tests can be run once or repetitively. Each card will have its own suite of tests. The frame hardware itself has a suite called "System".

At the bottom of the self test dialog is a results pane. The reporting level (how verbose the tests are) can be controlled using a slider bar at the top of the dialog. At the very least, each test should report that it is running and what the final status of each test was (pass or fail). Increasing the reporting level and re-running certain tests may help isolate a specific hardware failure in the event that a test fails.

Index

A

- accessories, 3
- accuracy, 24
- adjustments, 24
- Agilent, contact information, 4
- air circulation, 43
- altitude, 12
- assemblies
 - exchange, 72
 - returning, 70
- assembly procedures, 38

B

- backlight inverter board removal, 53
- before disassembly, 40
- board
 - backlight inverter, 53
 - keypad, 60
 - MIB, 87
 - motherboard removal, 49
 - PCI, 87
 - touch-screen controller, 55

C

- cables, USB, 57
- calibration, 24
- cautions
 - damage to components, 38, 40
 - electrostatic discharge, 38, 70
 - LCD display handling, 58
 - oil damage, 60
- characteristics, 12
- cleaning
 - instrument, 17
 - LCD display, 58
 - touch screen, 58
- clock in, 13
- contacting Agilent, 4
- controller board removal, 55
- cooling, 43
- cover assembly, 76
- cover removal, 44

D

- damage in shipping, 16
- dimensions, 14

- disassembly
 - preparation, 40
 - procedures, 38
- disk drive removal, 62
- display, 3
- display assembly removal, 58
- display card removal, 48

E

- exchange assemblies, 72
- exploded view
 - cover, 76
 - frame, 79
 - front panel, 76

F

- fan removal, 65
- features, 3
- flowcharts, troubleshooting, 26
- frame, replaceable parts, 79
- front panel assemblies, 76
- front panel bracket assembly removal, 56
- front panel removal, 51

H

- hard disk drive removal, 62
- host ID, 39
- humidity, 12

I

- ID, 39
- identification, 39
- install, measurement modules, 17
- instrument identification, 39
- inverter board removal, 53

K

- keypad and board removal, 60

L

- license file, saving, 39
- line switch removal, 67

M

- measurement modules, 17
- MIB, 68, 87
- module calibration, 24
- module interface board, 87
- module interface board removal, 68
- modules, measurement, 17
- motherboard removal, 49
- multiple frames, 17

O

- operating
 - characteristics, 12
 - system, 36
 - theory, 83
- operational accuracy, 24

P

- parts, replacement, 72
- PCI board, 87
- PCI card removal, 48
- power
 - requirements, 12
- power cable removal, 67
- power supply removal, 45
- power supply voltages, 32
- power-off, 40
- power-on, 16
- procedure, assembly, 38

R

- recovery, 36
- reinstall operating system, 36

Index

removing
 backlight inverter board, 53
 cover, 44
 display, 58
 display card, 48
 fans, 65
 front panel, 51
 front panel bracket assembly, 56
 hard disk drive, 62
 keypad and board, 60
 line switch, 67
 module interface board, 68
 motherboard, 49
 PCI card, 48
 power cable, 67
 power supplies, 45
 touch screen, 58
 touch-screen controller board, 55
 tray assembly, 64
 USB cables, 57
replaceable parts, 72
replacement strategy, 38
returning assemblies, 70

S

sales office, 4
saving license file, 39
self-tests, 35
service office, 4
shipping damage, 16
shipping requirements, 12
shut down, 40
specifications, see characteristics, 12
storage requirements, 12

T

temperature, 12
tests, self-tests, 35
theory of operation, 83
time-correlated measurements, 17
tools required, 38
touch screen assembly removal, 58
touch-screen controller board removal, 55, 56
tray assembly removal, 64
trigger in, 13
turning off, 40

U

USB cables, 57
USB cable removal, 57

V

vibration, 12
voltages, power supply, 32

W

warnings, hazardous voltages, 16, 38, 40, 45
web address, 70
weight, 12