

Manual Supplement
HP ESG-D Series Option H98 Signal Generators



HP Part No. E4400-90267

Printed in USA
December 1998

© Copyright 1998 Hewlett-Packard Company

Contents

1. In-Channel, Base Station and Mobile Receiver Testing	
Option H98 Product Overview	1-2
Reconciling New Firmware Revisions with Earlier Revisions	1-7
Remote Operation	1-7
2. Specifications	
3. Using Wideband CDMA	
Display Annotation	3-2
Wideband CDMA Menu Tree	3-3
Front-Panel Operation	3-4
Accessing the Wideband CDMA Menu	3-4
Setting Channels, Long Code, and Short Code	3-5
Setting the Carrier Frequency and Power	3-6
Enabling and Outputting the Signal	3-6
Understanding RF Power Levels	3-7
Understanding Time Offsets	3-8
TSector	3-8
TSlot	3-8
TFrame	3-9
Rear-Panel Overview	3-11
3. SYMBOL SYNC OUT Connector (Super Frame Reset Out)	3-11
5. DATA CLK OUT Connector (8 kHz Out)	3-12
7. DATA OUT Connector (System Frame Number Reset Out)	3-12
12. PATTERN TRIG IN Connector (System Frame Number Reset In)	3-13
13. BURST GATE IN Connector (Baseband Gate In)	3-14
15. ALT PWR IN Connector (BCCH Count Hold In)	3-14
16. EVENT 1 Connector (Frame Sync Out)	3-14
17. EVENT 2 Connector (Transmission Power Control Out)	3-15
System Configuration	3-16
4. Softkey Reference	
Wideband CDMA Softkeys	4-2
32 ksps	4-2
64 ksps	4-3
64 ksps voice	4-3
128 ksps	4-3
256 ksps	4-4

Contents

ACCH	4-4
BCCH Setup	4-4
BCCH Type	4-5
Channel #	4-5
Channel Setup	4-5
Channel State Off On	4-6
Channel Type	4-6
CRC	4-8
Data Insertion	4-9
Data Pattern	4-10
Down Long Code	4-11
DTCH	4-11
DTCH+ACCH	4-11
DTX	4-12
FACH	4-12
Fixed	4-12
Increment	4-13
Interrupt Trigger	4-13
Interrupt Value	4-13
Link Down Up	4-14
Long Code	4-14
Multicode #	4-15
Multicode Type	4-15
Multiplex	4-16
Perch Setup	4-16
Perch1 Off On	4-16
Perch2 Off On	4-18
Phase Polarity Normal Invert	4-18
Pilot-TPC Power	4-19
PN9	4-20
PN15	4-20
Power	4-21
RACH	4-21
SDCCH	4-21
SFN Fixed Value	4-22
SFN Setup	4-22
Short Code (Channel 1)	4-23

Contents

Short Code (Channels 2 and 3).....	4-24
Spread	4-24
Symbol Rate.....	4-25
System Frame No.....	4-27
TFrame	4-27
Time Offset	4-28
Transmit Pwr Ctrl.....	4-28
TSector.....	4-29
TSlot.....	4-30
Tx Power Bits	4-31
Ulink I/F Bits.....	4-31
UPCH.....	4-32
Uplink Mode Chan Multicode.....	4-32
Uplink Power.....	4-34
Uplink Trig Delay.....	4-34
W Bits	4-35
W-CDMA Off On	4-35
ZEROS.....	4-36

5. Programming Information

Getting Started with SCPI	5-2
Understanding Common Terms.....	5-2
Standard Notation	5-3
More About Commands	5-3
Command Syntax	5-4
SCPI Command Tree	5-5
Wideband CDMA Subsystem SCPI Command Reference	5-9
BCCH Type	5-9
Channel Number.....	5-9
Channel Operating State	5-9
Channel Type	5-10
Data Insertion.....	5-12
Data Pattern	5-12
Downlink Channel Power.....	5-14
Downlink Long Code.....	5-14
Interrupt Trigger.....	5-14

Contents

Interrupt Time	5-14
Multicode Type	5-15
Perch1 Operating State	5-15
Perch2 Operating State	5-16
Phase Polarity	5-16
Pilot-TPC Power	5-17
SFN Fixed Value	5-17
Short Code (Channel 1)	5-17
Short Code (Channels 2 and 3)	5-18
Symbol Rate	5-18
System Frame Number Type	5-21
TFrame Offset	5-22
Transmission Direction, Uplink or Downlink	5-22
Transmission Power Bits	5-23
Transmission Power Control	5-23
TSector Offset	5-23
TSlot Offset	5-24
Uplink Channel Power	5-25
Uplink Interference Bits	5-25
Uplink Long Code	5-26
Uplink Mode, Channel or Multicode	5-26
Uplink Trigger Delay	5-28
W Bits	5-28
W-CDMA Operating State	5-28
Softkey to SCPI Command Cross-Reference	5-29
Example Program: Creating a Wideband CDMA Waveform	5-35
Program Comments	5-36

6. Service

Replaceable Parts	6-2
Post Repair Procedures	6-2
Adjustments	6-2
Performance Tests	6-2
A7 DBMIC Baseband Generator Board Block Diagram (Option H98)	6-3
A8 Data Generator Board Block Diagram (Option H98)	6-5

Glossary

1 In-Channel, Base Station and Mobile Receiver Testing

This manual supplement provides operating and service information applicable to the HP ESG-D Series Option H98 Signal Generator. Use this information to supplement the HP ESG-D Series manual set.

Option H98 Product Overview


W-CDMA is a third-generation (3G) wireless technology designed to deliver high transport capacity for high-speed data and low-cost voice services. The HP ESG-D Series Option H98 Signal Generator enables you to accelerate the development of W-CDMA base station and mobile receivers by fully exercising the receiver to ensure it meets performance requirements.

Option H98 provides real-time data on downlink or uplink signals.

- For downlink simulation, you can generate up to two coded channels (Perch 1 and 2, plus one user-selected logical channel), and select the data pattern, symbol rate, long code, and short code. [Figure 1-1](#) shows the Option H98 downlink block diagram; [Figure 1-2](#) on page 1-3 shows more detail of the logical channels (Channel 1) with the downlink state selected.
- For uplink simulation, you can generate up to three independent channels, or three multicode channels, for sensitivity-testing needs. [Figure 1-3](#) on page 1-3 through [Figure 1-6](#) on page 1-6 shows more detail of the uplink mode.


Typically better than 63 dBc adjacent channel power ratio (ACPR) performance, with less than 1.25 percent error vector magnitude (EVM), ensures that the signal will meet performance requirements for W-CDMA (see [Chapter 2](#) for Option H98 specifications).

Figure 1-1 Downlink Block Diagram

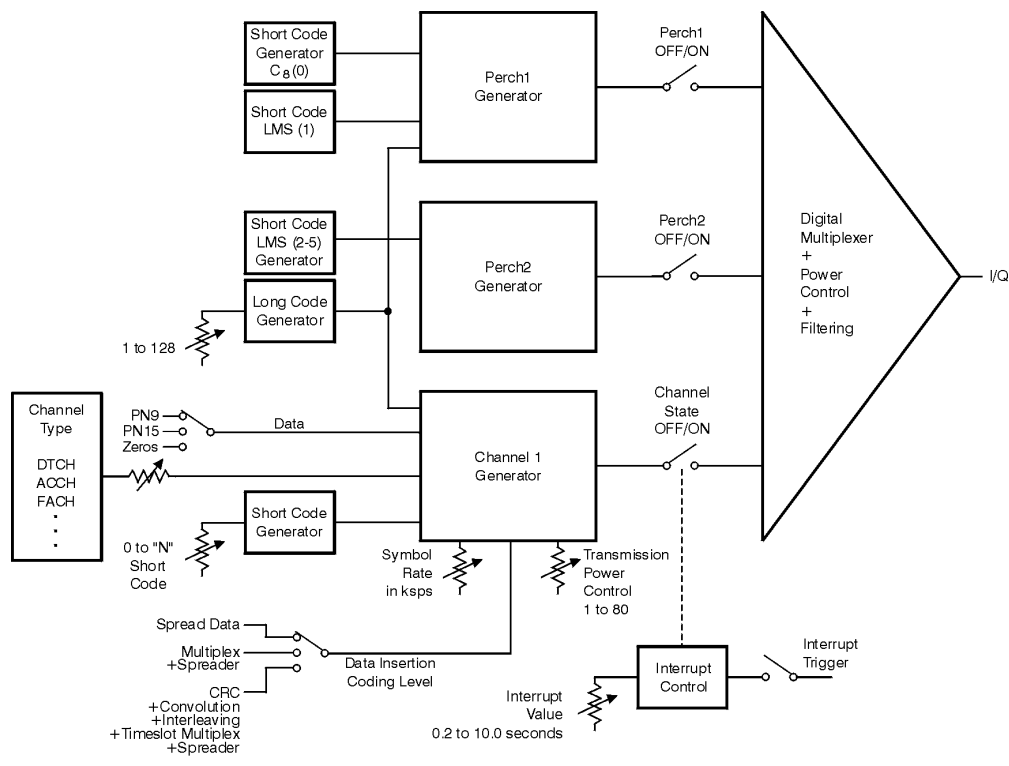


hk727b

Figure 1-2 Downlink Channel 1 Block Diagram

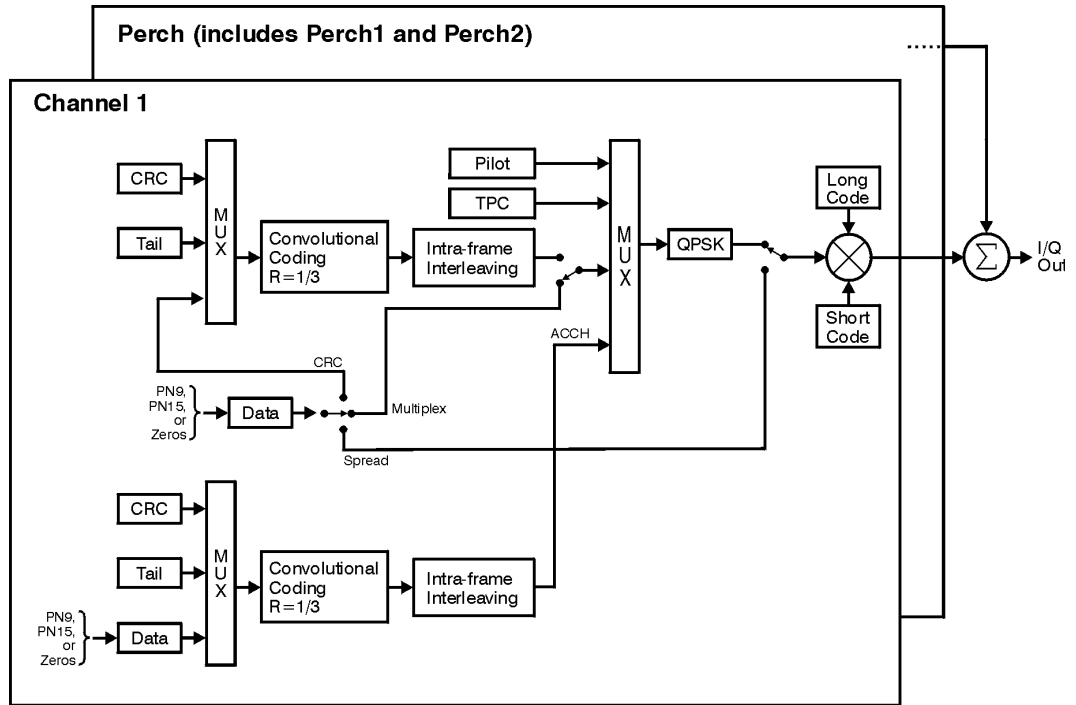

hk

Figure 1-3 Uplink Multicode Block Diagram

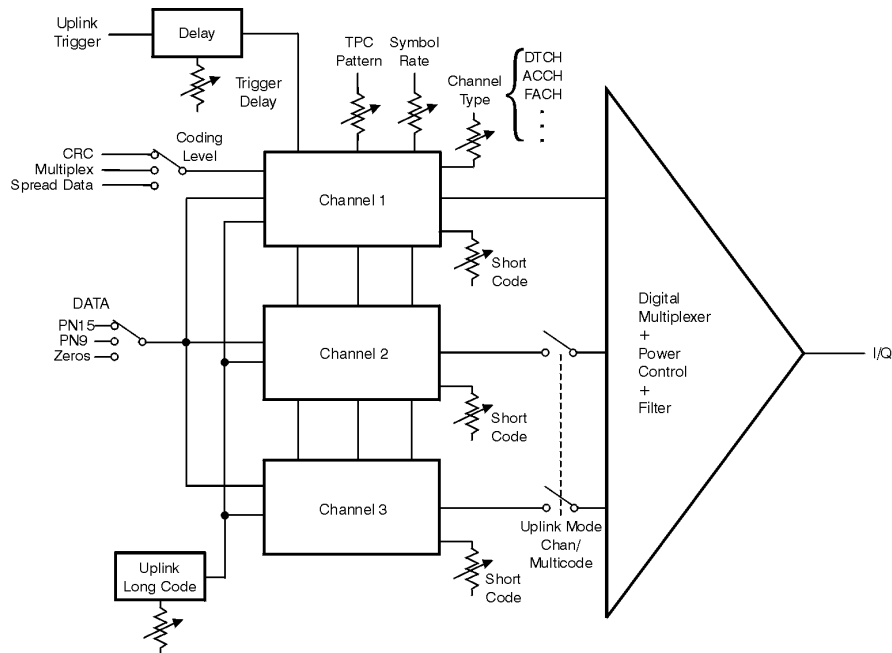

hk729b

Figure 1-4 Uplink, Multicode Channels Block Diagram



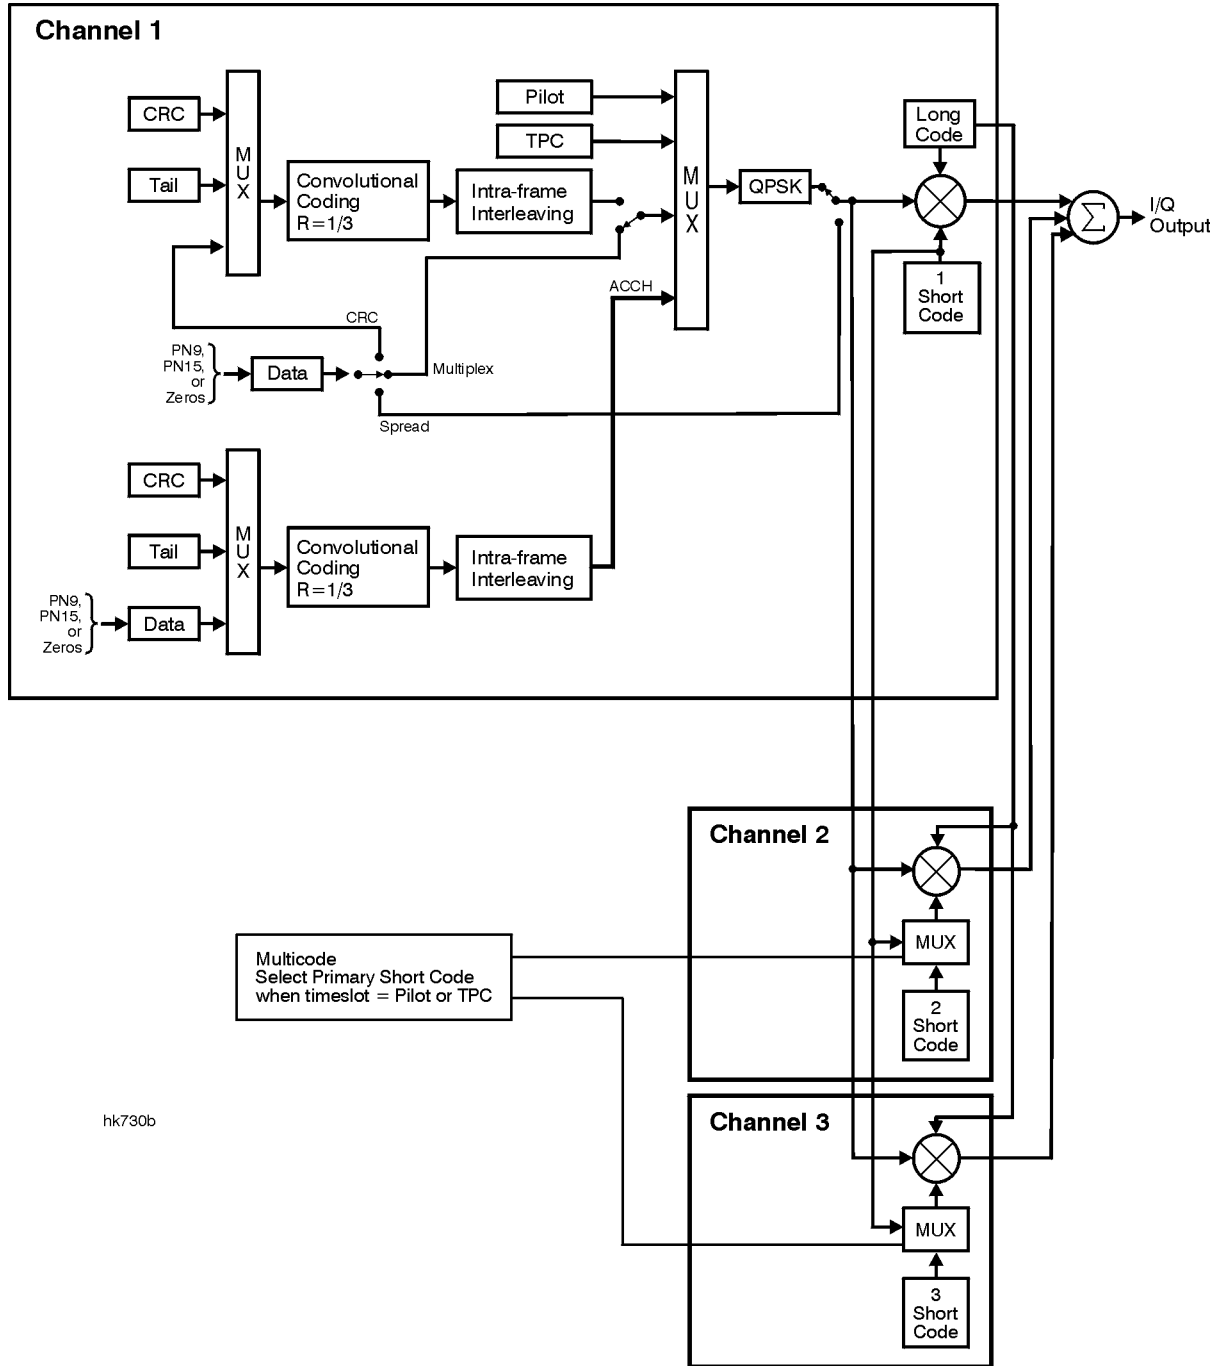


Figure 1-5 Uplink Multichannel Block Diagram

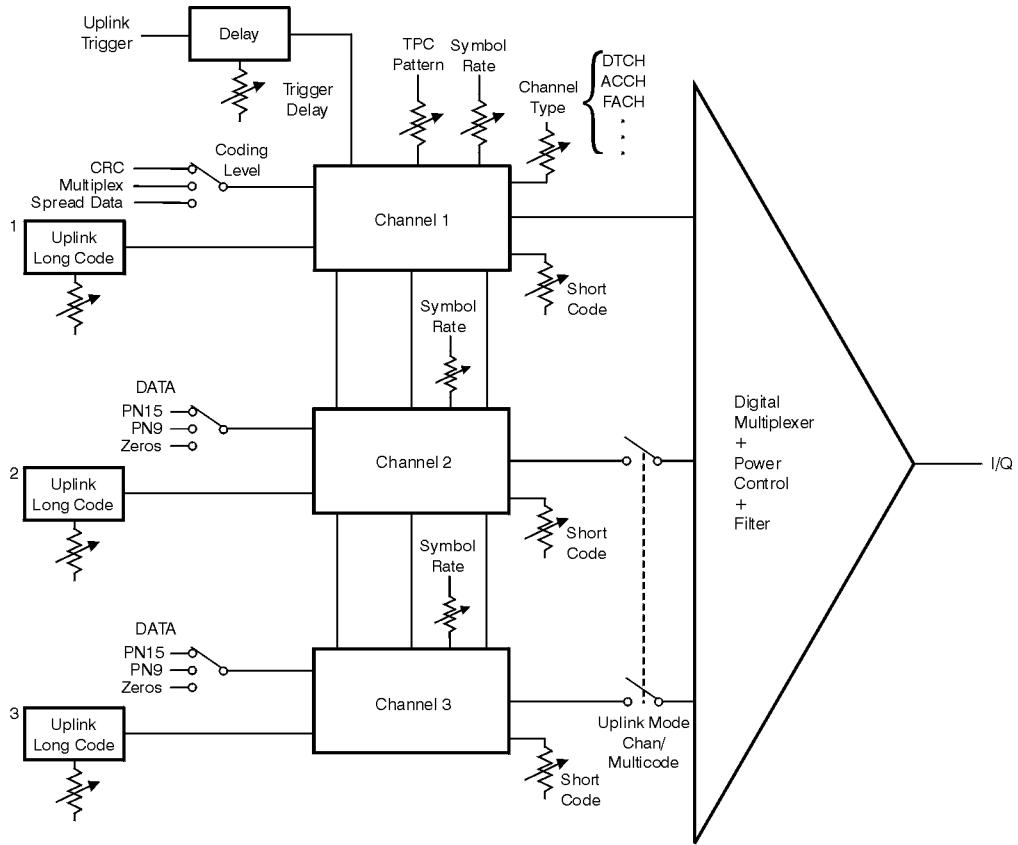

hk739b

Figure 1-6 Uplink, Multichannel Channels Block Diagram

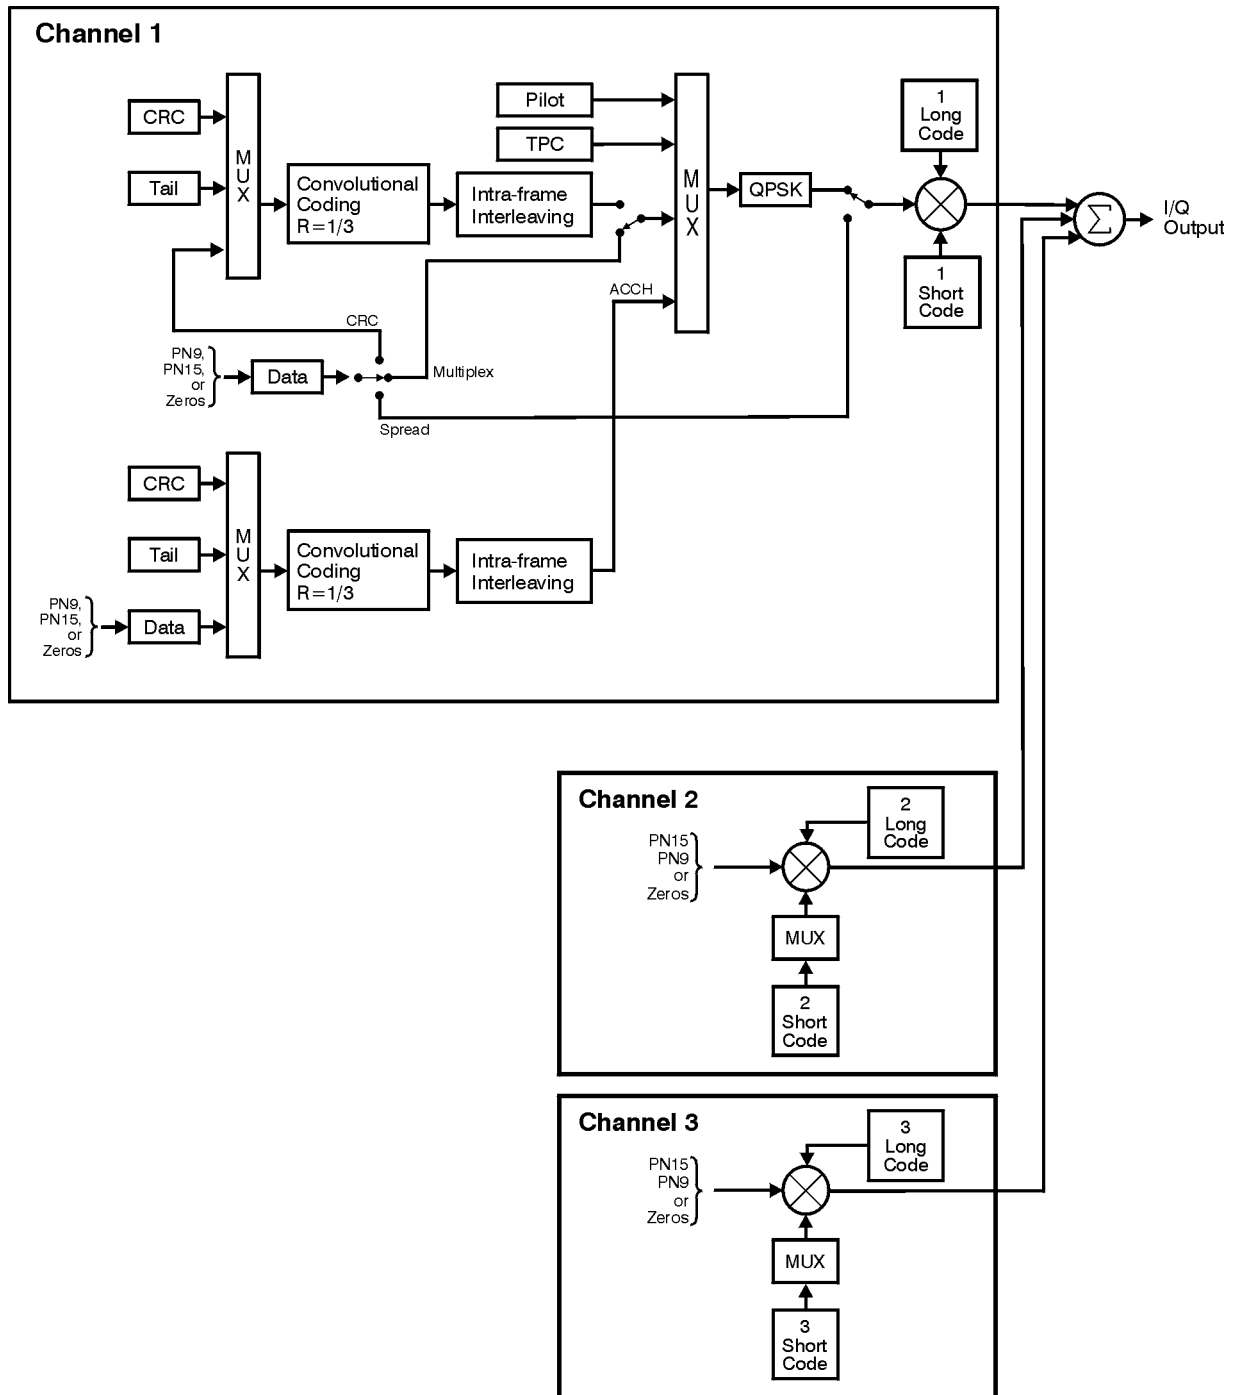


hk740b

Reconciling New Firmware Revisions with Earlier Revisions

Remote and front-panel operation of firmware revision B.02.30 and greater is quite different from earlier firmware revisions. This section documents the remote operation commands from earlier firmware revisions that are still valid in revision B.02.30.

To determine the firmware revision of your instrument, press **Utility, Instrument Info/Help Mode, Diagnostic Info**. To locate the firmware revision information on the display, see the following illustration.

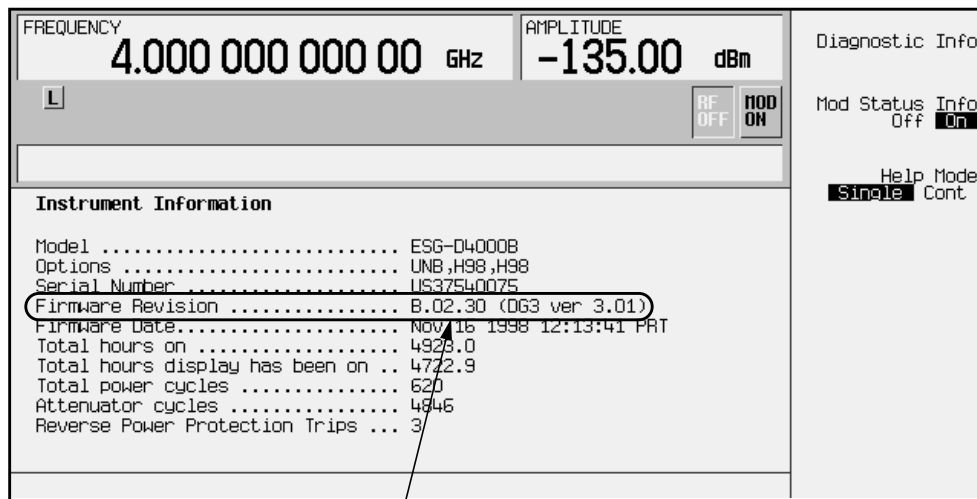

Firmware Revision Number

Remote Operation

The following SCPI commands were used in previous versions of firmware. Although they are different than the commands for the current firmware, they can still be used.

System Frame Number Query

This command query retrieves the current value of System Frame Number from the wideband CDMA hardware.

```
[ :SOURce ] :RADio :WCDMa [ :BBG ] :SFN?
```

Wideband CDMA Off On

This command sets the wideband CDMA modulation operating state to on or off. The command query will retrieve wideband CDMA operating state information from the signal generator.

```
[ :SOURce ] :RADio :WCDMa [ :BBG ] [ :STATe ] ON | OFF | 1 | 0
```

```
[ :SOURce ] :RADio :WCDMa [ :BBG ] [ :STATe ] ?
```


2 Specifications

This chapter provides the specifications and supplemental characteristics for the HP ESG-D Series Option H98 Signal Generator. This chapter, as with the rest of this supplement, provides only the information unique to the Option H98. Use this information to supplement the HP ESG-D Series manual set.

Frequency Range:	HP E4432B: 20 MHz to 3 GHz HP E4433B: 20 MHz to 4 GHz
Chip Rate:	4.096 MHz
Frame Duration:	10 ms
Modulation:	QPSK with long and short code spreading
Filtering:	Root raised cosine with alpha of 0.22
Downlink	
Channel Structure	
Symbol Rate:	32, 64, 64 voice, 128, 256 kilosymbols per second (ksps)
Short Code:	Selectable over the full range of available short codes at each symbol rate.
Data:	PN9, PN15, or zeros
Data Insertion at:	CRC, multiplexing, or spreading
Power Control:	n up/down, n selectable from 1 to 80
Long Code:	1 to 128
Channel Type:	DTCH + ACCH, ACCH ¹ , DTCH ¹ , DTX ¹ , FACH-L, SDCCH, UPCH
Channel Power Level:	± 30 dB with respect to Perch1 power
Channel Interrupt:	20 ms to 10 seconds, in 20 ms steps
Time Offset Range:	<ul style="list-style-type: none"> • TSector 0 to 2560 chips • TSlot 0 to 159 symbols, limited by symbol rate • TFrame 0 to 15 slots
Phase Polarity:	Normal, Invert
Perch 1 Structure	
Control:	On/Off
BCCH Type:	1 or 2
Data:	0 to 11111111, repeating
System Frame Number (SFN):	Increment (0 to $2^{16} - 1$) or Fixed (0 to FFFE hexadecimal, even numbers only)
Tx Power Bits:	0 to 127
Uplink I/F Bits:	0 to 63
W Bits:	0 to 3
Perch 2 Structure	
Control:	On/Off
Long Code Mask (LCM):	Yes
Short Code Number for LCM Symbols:	2 to 5, coupled to long code selection

Uplink

Mode:	Channel or Multicode
Trigger Delay:	-50 to +204 chips
Long Code:	0000000000 to IFFFFFFFFF hexadecimal (0 to 2,199,023,255,551 decimal)
Short Code:	Selectable over the full range of available short codes at each symbol rate.

Channel Mode: Channel 1, 2 or 3

Channel 1 Setup

Channel Type:	DTCH+ACCH, ACCH ¹ , DTCH ¹ , DTX ¹ , RACH-L, SDCCH, UPCH
Symbol Rate:	32, 64, 64 voice, 128, 256 ksps
Data:	PN9, PN15, or zeros
Data Insertion at:	CRC, multiplexing or spreading
Power Control:	<i>n</i> up/down, <i>n</i> selectable from 1 to 80
Time Offset:	<ul style="list-style-type: none"> • TSector 0 to 2560 chips • TSlot 0 to 159 symbols, limited by symbol rate • TFrame 0 to 15 slots
Phase Polarity:	Normal, Invert

Channel 2 or 3 setup (long and short code spreading of selected data)

Symbol Rate:	32, 64, 128, 256 ksps
Data:	PN9, PN15, or zeros
Power Level:	± 30 dB with respect to channel 1
Long Code & Short Code:	Set independently for each channel

Multicode Mode (generates 3–channel multicode transmission)*Code 1 Setup*

Multicode Type:	DTCH + ACCH, UPCH
Symbol Rate:	32 ksps, 64 ksps, 128 ksps, 256 ksps
Pilot – TPC Power:	1 to 3
Data:	PN9, PN15, or zeros
Power Control:	<i>n</i> up/down, <i>n</i> selectable from 1 to 80
Time Offset:	<ul style="list-style-type: none"> • TSector 0 to 2560 chips • TSlot 0 to 159 symbols, limited by symbol rate • TFrame 0 to 15 slots

Code 2 or 3 Setup

Short code can be selected over the full range of available short codes at each symbol rate.

ACP Specifications: -61 dBc (-63 dBc, amplitude range ≤0 dBm, Option H99)

EVM Specification: 1.75% (1.25%, amplitude range ≤ 4 dBm)

Input: System Frame Number Reset in

Outputs:

- Frame Sync out
- Transmission Power Control out
- System Frame Number Reset out
- 8 kHz out
- Super Frame Reset out

1. Burst (discontinuous) transmissions. DTX = Pilot and TPC symbols only.


3 Using Wideband CDMA

This chapter contains basic front-panel operating instructions for the Option H98, setup information, and rear-panel changes. For remote operation, see [Chapter 5](#). Use this information to supplement the HP ESG-D Series manual set.

Display Annotation

The Option H98 display is identical to the standard signal generator display in all respects, except for the annunciator shown in the following figure. In the Option H98, the WCDMA annunciator is displayed in this position when wideband CDMA is enabled. In a standard signal generator, this annunciator position is used for other purposes.


Option H98 Display Annunciator

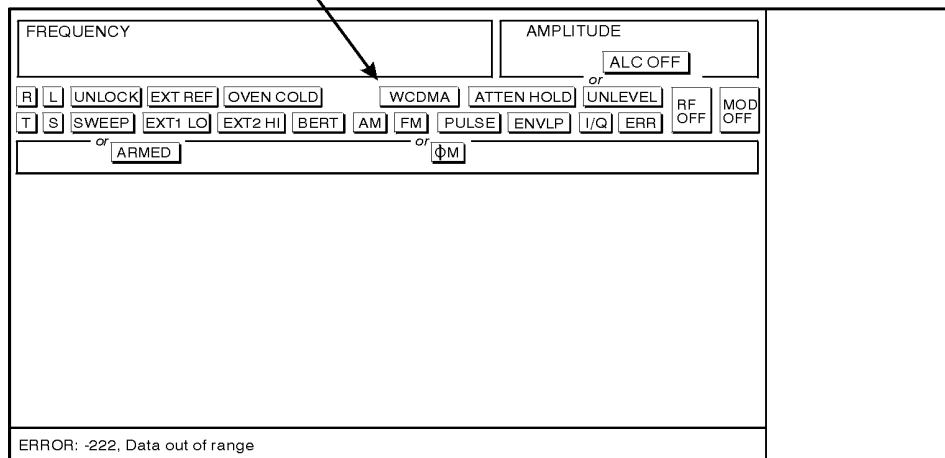

hk71b

Wideband CDMA Menu Tree

The following figure provides an overview of the Wideband CDMA softkey menus. This is not intended to be an exhaustive description of each menu; rather, it is provided as a navigation aid. For softkey descriptions, see [Chapter 4](#).

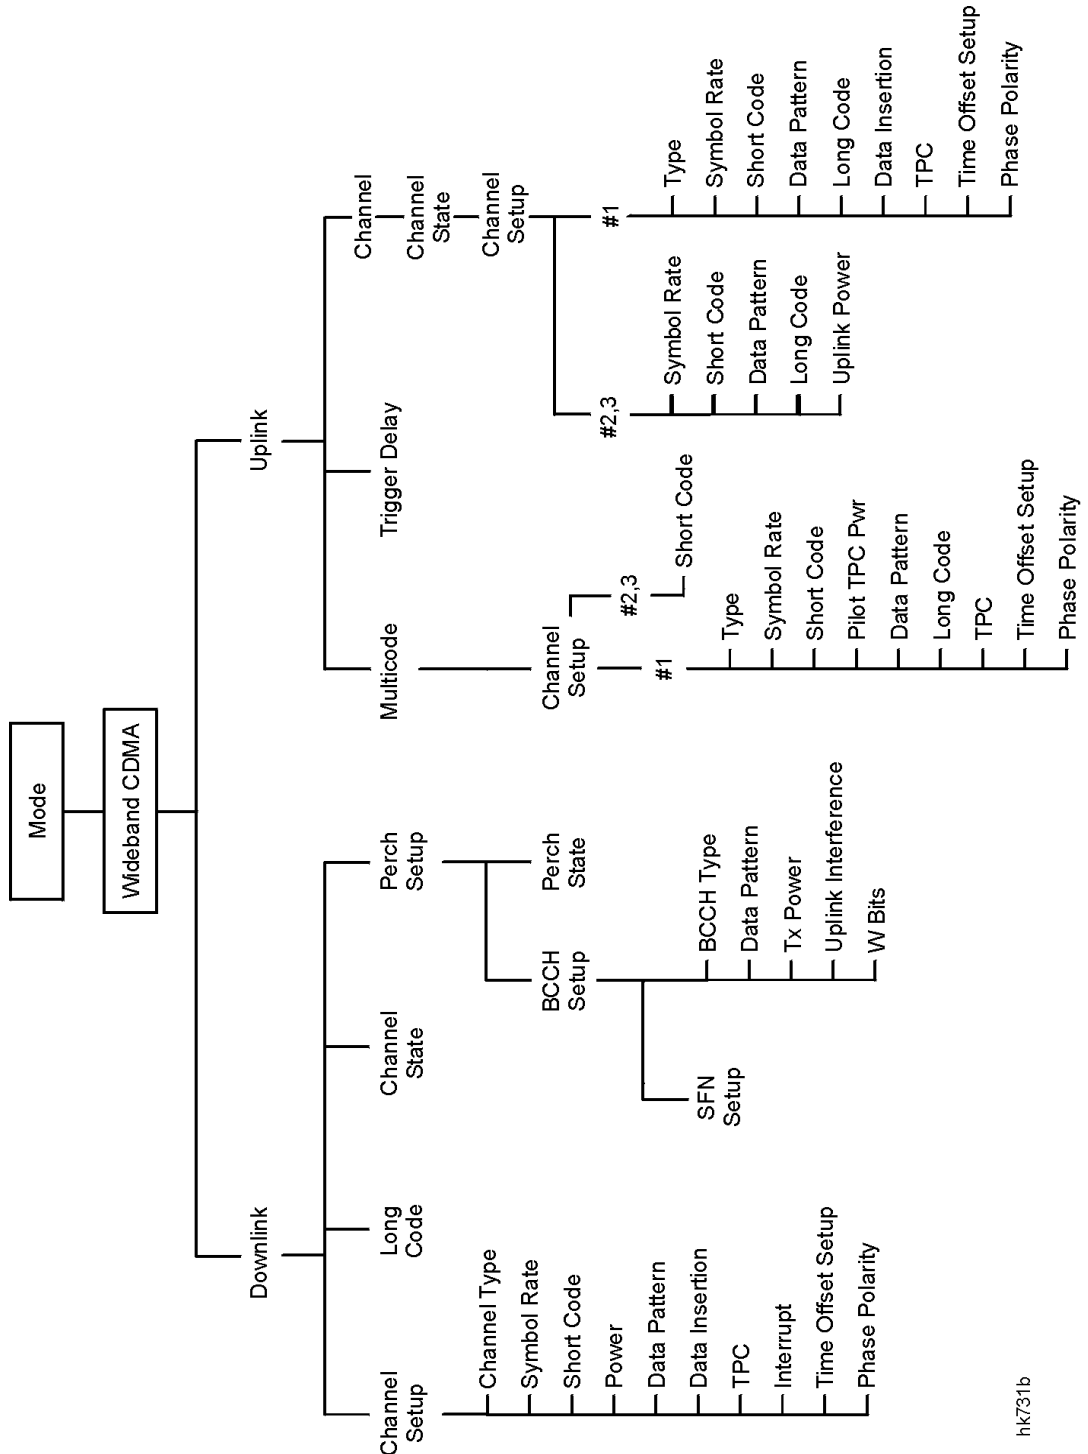

hk731b

Front-Panel Operation

The following procedure is an example of how to set up and turn on a wideband CDMA signal simulating a downlink condition. Use the following steps to configure a Perch1 channel and a single dedicated traffic channel (DTCH) with a downlink long code of 50 and a short code of 15.

Accessing the Wideband CDMA Menu

1. Preset the signal generator.
2. Press the front-panel Mode key.
3. Press **Wideband CDMA**. The Wideband CDMA menu appears. The display you see will be similar to the following illustration.

The screenshot shows the front panel of the HP ESG-D signal generator with the Wideband CDMA menu displayed. The menu is divided into several sections:

- Top Section:** Shows **FREQUENCY** (4.000 000 000 00 GHz) and **AMPLITUDE** (-135.00 dBm). There are buttons for **RF OFF** and **RF ON**.
- Right Side Menu:** Includes **W-CDMA** (Off/On), **Link** (Down/Up), **Perch Setup**, **Channel #** (1), **Channel State** (Off/On), **Channel Setup**, and **Down Long Code** (1).
- Main Configuration Area:**
 - WCDMA DownLink Off:** A large indicator.
 - Channel 1 Configuration Status:** Includes Channel1: On, Type: DTCH+ACCH, L Code: 1, Short Code: 8, Symbol Rate: 32ksps, Data Pattern: PN15, Data Insert: CRC, Power: 0.00dB, TPC Up/Down: 1, Interrupt Time: 1.00.
 - Perch Channels Configuration Status:** Includes Perch1: On, BCCH Type: 1, Uplink I/F: 0, W Bits: 0, Bit Pattern: 0, Tx Power: 0.
 - Perch2: On**
 - Offsets:** TSector: 0, TSlot: 0, TFrame: 0.
 - System Frame Number (SFN) Status & Cycle Time:** System Frame Number: 0, Time To SFN Zero: 10m:55s.
 - Bitmap captured.**

Annotations and callouts include:

- Default RF Output Frequency:** Points to the Frequency field.
- Default RF Output Power:** Points to the Amplitude field.
- RF is Off:** Points to the RF OFF button.
- Modulation is On:** Points to the W-CDMA On button.
- W-CDMA Softkey Menu:** Points to the right-side menu.
- Channel 1 Configuration Status:** Points to the Channel 1 configuration details.
- System Frame Number (SFN) Status & Cycle Time:** Points to the SFN and Time To SFN Zero fields.
- Perch Channels Configuration Status:** Points to the Perch configuration details.
- Time Offsets Configuration Status:** Points to the TSector, TSlot, and TFrame fields.

The SFN cycles from 0 to 64k (65,535), increments every 10 ms, and takes approximately 11 minutes to cycle. The number display updates approximately every 4 seconds.

Setting Channels, Long Code, and Short Code

1. Turn on Channel 1.

Channel 1 defaults to **On** after a normal instrument preset. Since this is the desired condition for this example, no action is necessary (the **Channel State Off On** softkey toggles the operating state of Channel 1).

2. Turn off Perch2.

The Perch1 and Perch2 channels also default to **On** after a normal instrument preset. In this example, only the Perch1 channel is required to be on. To turn off Perch2, first press **Perch Setup**, then press the **Perch2 Off On** softkey until **Off** is highlighted.

3. Set the downlink long code to 50.


The downlink long code is applied to both the Perch1 channel and the traffic channel.

First press the **Return** hardkey to display the Wideband CDMA menu, then press the **Down Long Code** softkey.

Use the numeric keypad to enter **50**, then press the **Enter** softkey to terminate the entry.

4. Set the short code to 15.

After a normal instrument preset, the Channel 1 short code default value is 8. To change it, first press the **Channel Setup** softkey to open the Channel Setup menu (shown in the following illustration), then press **Short Code**, set the short code to 15, and press **Enter** to terminate the entry.

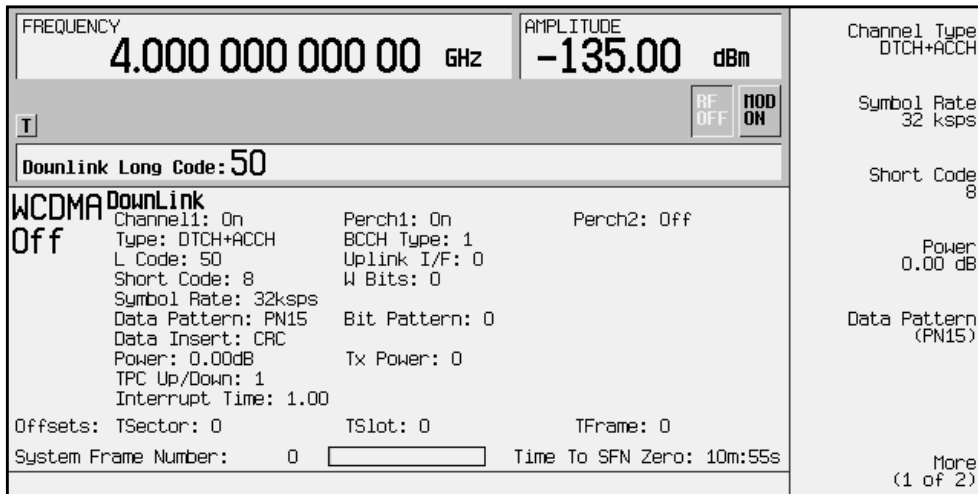

5. Set the channel type to DTCH.

After a normal instrument preset, the default channel type is **DTCH+ACCH**. To change it, first press the **Channel Type** softkey, then press **DTCH**.

Setting the Carrier Frequency and Power

1. Set the RF output frequency to 2.17 GHz.

Press the front-panel **Frequency** key, enter 2.17, then terminate the entry with the **GHz** softkey.

2. Set the output power to -10 dBm.

Press the front-panel **Amplitude** key, enter -10, then terminate the entry with the **dBm** softkey (see “[Understanding RF Power Levels](#)” on page 7).

Enabling and Outputting the Signal

1. Turn on wideband CDMA.

Press the **Return** hardkey to display the wideband CDMA menu.

Press the **W-CDMA Off On** softkey to highlight **On** (it takes a moment to change).

The **WCDMA** and **I/Q** annunciators turn on, and as the waveform is generated, the **System Frame Number** status and cycle time (located at the bottom of the display) become active.

NOTE

You do not have to wait for the waveform to complete before you continue with the next step.


2. Turn on the RF output.

Toggle the front-panel **RF On/Off** key so that the display annunciator displays **RF ON**.

3. Ensure that modulation is on.

Modulation should be turned on as a default condition (the display annunciator shows **MOD ON**). If modulation is off, toggle the front-panel **Mod On/Off** key.

The wideband CDMA signal is now present at the **RF OUTPUT** connector. The following illustration shows the display with the current configuration.

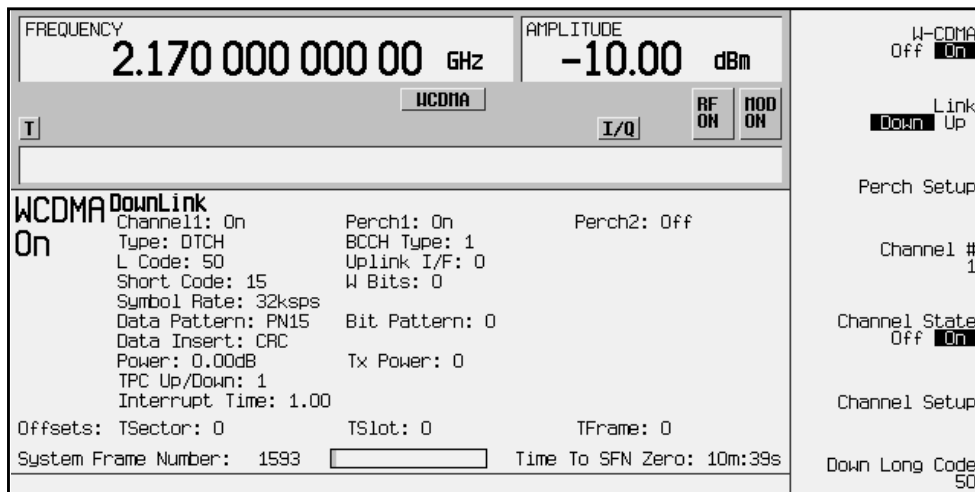

Understanding RF Power Levels

When the automatic leveling control (ALC) is turned on, the average RF output power is held constant at the selected amplitude. When you select a modulation that varies the RF output level, if amplitude variation effects your measurement, you can turn off the ALC.

For example, with the following settings:

Mode: Downlink
Channel 1 Power: +3 dB relative to Perch1 and Perch2
Interrupt Time: 1 second
Interrupt: Triggered

When ALC is on, the average RF power during the Channel 1 interrupt time (when Channel 1 power is turned off) is regulated to the same level as when Channel 1 is turned on. This increases the average RF level of the Perch1 and Perch2 channels during the interrupt period.

For the Perch1 and Perch2 levels to remain constant, you must turn off the ALC.

Turning Off the ALC

When you turn off the ALC, you must also perform a manual power search, and set the ALC bandwidth, as follows:

1. Set up the modulation. The settings given above are used in this example.
2. Press the front-panel **Ampl** key to display the amplitude menu.
3. Press the **ALC Off On** softkey to select **Off**.

The **ALC OFF** annunciator appears on the display, and **(manual)** appears below the **Power Search** softkey.

4. Press **Power Search**, then press **Power Search Reference Fixed Mod** to select **Mod**.
5. Press **Return**, then press **ALC BW Normal Narrow** to select **Narrow**.
6. Ensure that the modulation channels are set appropriately for the desired reference power level.

NOTE

Power search uses the current channel modulation setup as the reference power level. In this example, Channel 1, Perch1, and Perch2 are all on.

7. Press **Do Power Search**.

NOTE

The power level will drift with time. You can press **Do Power Search** as needed, to reset the RF amplitude to the selected value.

Understanding Time Offsets

TSector

Adjustment range: 0 to 2560 chips
Default: 0 chips

TSector in Downlink Mode

Refer to [Figure 3-1](#) on page 3-9. In downlink mode, TSector adjusts the Perch radio frame timing and long code relative to the BTS reference System Frame Number Reset output at the DATA OUT rear-panel connector. This is accomplished by adjusting the offset (in number of chips) from the falling edge of the System Frame Number Reset to the first symbol of the Perch radio frame and long code phase zero, measured at the RF output.

TSector in Uplink Mode

Refer to [Figure 3-2](#) on page 3-10. In uplink mode, TSector adjusts the channel 1, 2 and 3 radio frame timing and long code phase relative to the BTS reference System Frame Number Reset input at the PATTERN TRIG IN rear-panel connector. This is done by adjusting the offset (in number of chips) of the falling edge of the System Frame Number input to the long code phase 1280 of channels 1, 2 and 3 (measured at the RF output). The *total* offset is equal to uplink trigger delay (propagation delay) plus TSector.

TSlot

Adjustment range: 0 to 159 symbols, depending on symbol rate (see the table to the right).

Default: 0 symbols

Symbol Rate	TSlot Values
32 ksps	0 to 19
64 ksps	0 to 39
64 ksps voice	0 to 39
128 ksps	0 to 79
256 ksps	0 to 159

TSlot in Downlink Mode

Refer to [Figure 3-1](#) on page 3-9. In downlink mode, TSlot adjusts the number of symbols that channel 1 radio frame is offset from both the Perch radio frame, and the long code phase zero. The *total* offset is equal to TSlot plus TFrame.

TSlot in Uplink Mode

Refer to [Figure 3-2](#) on page 3-10. In uplink mode, TSlot adjusts the number of symbols channels 1, 2, and 3 radio frames are offset from the long code phase 1280. The *total* offset is equal to TSlot plus TFrame.

TFrame

Adjustment range: 0 to 15 slots

Default: 0 slots


Downlink Mode

Refer to [Figure 3-1](#). In downlink mode, TFrame adjusts the number of timeslots that the channel 1 radio frame is offset from both the Perch radio frame and the long code phase zero. The total offset is equal to TFrame plus TSlot.

TFrame in Uplink Mode

Refer to [Figure 3-2](#) on page 3-10. In uplink mode, TFrame adjusts the number of timeslots channels 1, 2, and 3 radio frames are offset from long code phase 1280. Total offset is equal to TFrame plus TSlot.

Figure 3-1 Time Offsets in Downlink Mode

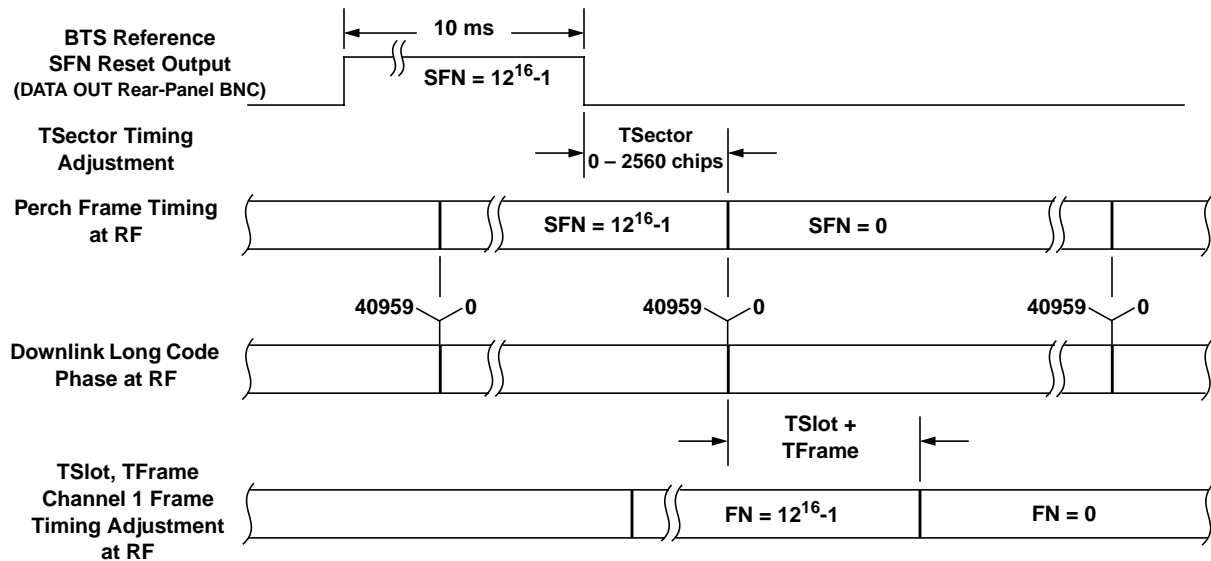


TSlot Range:	32 ksps	0 to 19 symbols
	64 ksps	0 to 39 symbols
	128 ksps	0 to 79 symbols
	256 ksps	0 to 159 symbols

TFrame Range: 0 to 15 slots

TSector Range: 0 to 2560 chips

Figure 3-2 Time Offsets in Uplink Mode

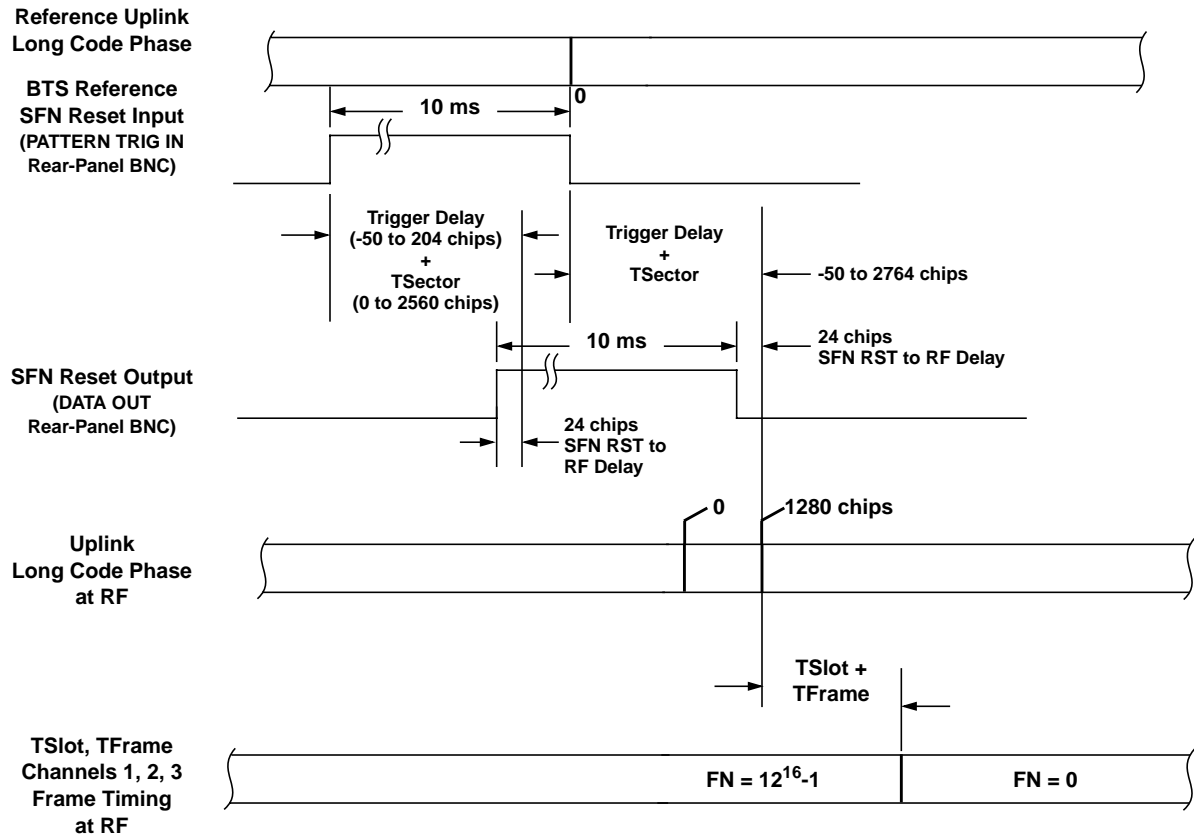

TSlot Range: 32 ksps 0 to 19 symbols
 64 ksps 0 to 39 symbols
 128 ksps 0 to 79 symbols
 256 ksps 0 to 159 symbols

TFrame Range: 0 to 15 slots


TSector Range: 0 to 2560 chips

Trigger Delay Range: -50 to 204 chips

Rear-Panel Overview

This section contains descriptions of the rear-panel connectors. This information supplements the information in the standard manual set.

Figure 3-3 Rear-Panel Connector Changes

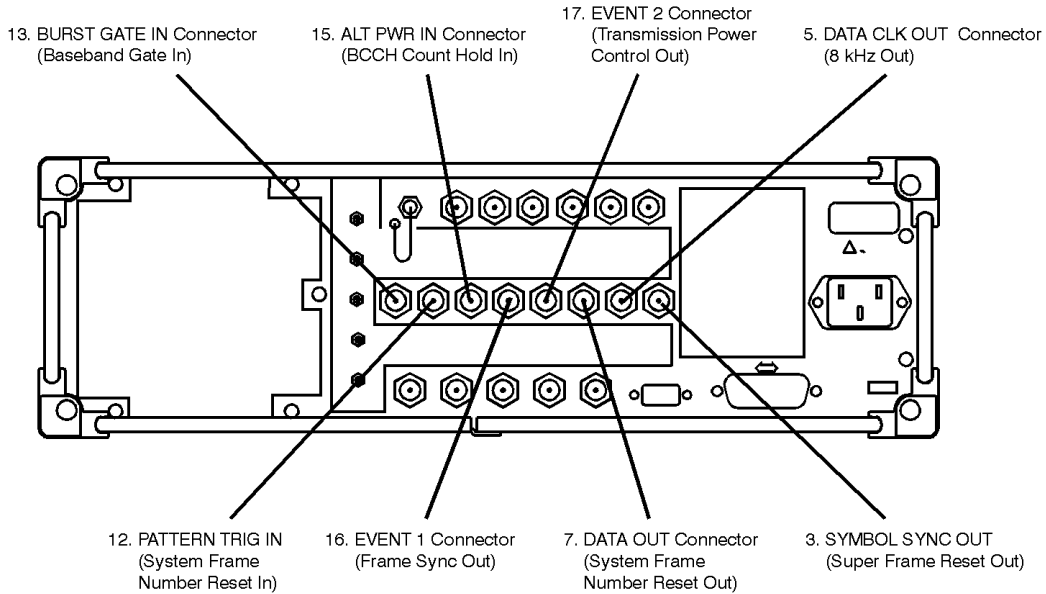


hk/23b

3. SYMBOL SYNC OUT Connector (Super Frame Reset Out)

This is a 125 μ s high signal, output every 64 frames. The high is delayed 125 μ s (or one 8 kHz cycle) from the start of the frame.

NOTE The signal edges are referenced to the output of the data generator, *not* to the outputs of the baseband generator or the RF section. The delay from the data generator output to the RF section output is approximately 24 chips.

Figure 3-4 Super Frame Reset, 8 kHz, and SFN Reset Output Waveforms

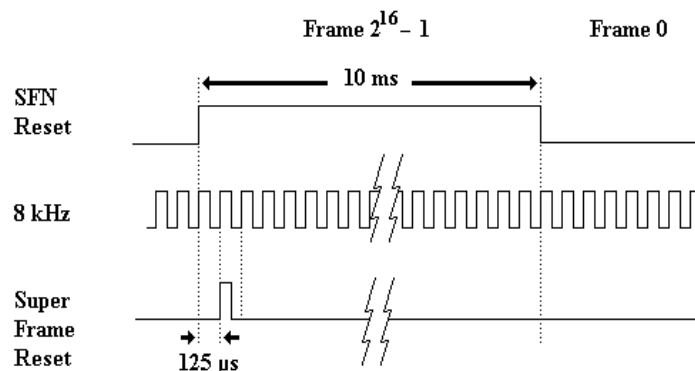

5. DATA CLK OUT Connector (8 kHz Out)

This signal is high during half (62.5 μ s) of the 125 μ s cycle.

NOTE

The signal edges are referenced to the output of the data generator, *not* to the outputs of the baseband generator or the RF section. The delay from the data generator output to the RF section output is approximately 24 chips.

7. DATA OUT Connector (System Frame Number Reset Out)

This signal goes high for 10 ms during frame number “ $2^{16} - 1$ ” (65,535). The signal goes low the following frame (frame number 0), and remains low until frame number “ $2^{16} - 1$ ” occurs again.

NOTES

In uplink mode, signal edges are referenced to the output of the data generator, *not* to the outputs of the baseband generator or the RF section. The delay from the data generator output to the RF section output is approximately 24 chips (see [Figure 3-1](#) on page 3-9).

In downlink mode, signal edges are referenced to the output of the RF section (see [Figure](#) on page 3-5).


The System Frame Number Reset out timing, referenced to long code phase, varies with the TSector adjustment.

12. PATTERN TRIG IN Connector (System Frame Number Reset In)

During uplink mode, this input receives the System Frame Number Reset (SFN RST) from the base station for synchronization. This input is not used during downlink mode.

The instrument triggers on the leading edge of the Base Station SFN RST signal. This input is a TTL or CMOS signal (not a V.11 signal). The instrument's 10 MHz reference input must be locked to the base station's data recovery reference signal. Note that the instrument long code is always reset 1280 chips before the first timeslot of system frame 0 (SF0) on the instrument.


Figure 3-5 System Frame Number Reset Input Waveforms

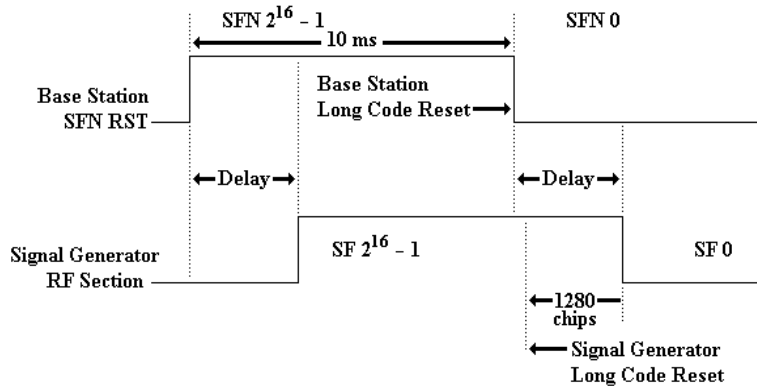

The instrument trigger delay has the affects shown in the following table. These are approximate propagation delays to within 3 chips.

Uplink Trigger Delay Value	Total Propagation Delay Value (Half Time Slot + Uplink Trigger Delay)	Time Change (Δ from Half Time Slot)
-50 chips	$1280 - 50 = 1230 \text{ chips} + T_{\text{Sector}}$	$-12 \mu\text{s} + T_{\text{Sector}} \times 1/4.096 \text{ MHz}$
0 chips	$1280 + 0 = 1280 \text{ chips} + T_{\text{Sector}}$	$+ T_{\text{Sector}} \times 1/4.096 \text{ MHz}$
204 chips	$1280 + 204 = 1484 \text{ chips} + T_{\text{Sector}}$	$+50 \mu\text{s} + T_{\text{Sector}} \times 1/4.096 \text{ MHz}$

Figure 3-6 Propagation Delay Timing

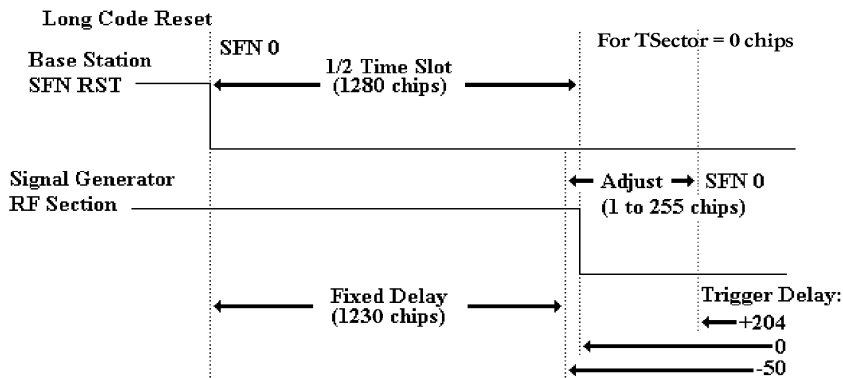

13. BURST GATE IN Connector (Baseband Gate In)

During downlink mode, a high or open at this input is the normal condition. When a TTL or CMOS low is detected, the DTCH, Perch1, and Perch2 channels are set to zero power on the baseband. During uplink mode, this input is left high or open.


15. ALT PWR IN Connector (BCCH Count Hold In)

The normal condition at this input is a high. When a TTL or CMOS low is detected, the System Frame Number in the Broadcast Control Channel (BCCH) is set and held at zero. The internal System Frame Number continues to count.

16. EVENT 1 Connector (Frame Sync Out)

This signal alternates between low and high every 10 ms. This signal is high during odd-numbered frames and low during even-numbered frames.

Figure 3-7 Frame Sync Out Waveform

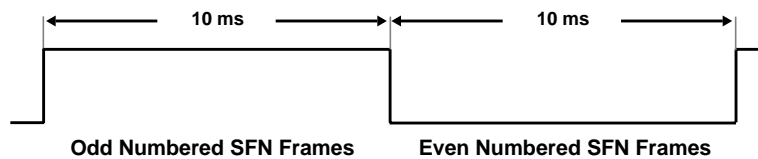

NOTE


The signal edges are referenced to the output of the data generator, *not* to the outputs of the baseband generator or the RF section. The delay from the data generator output to the RF section output is approximately 24 chips.

17. EVENT 2 Connector (Transmission Power Control Out)

This signal is high during timeslots that the Transmission Power Control (TPC) is in the up condition, and low during timeslots that the TPC is in the down condition. The TPC range can vary between 1 and 80 timeslots. The Transmission Power Control Out updates at the beginning of the timeslot.

NOTE The signal edges are referenced to the output of the data generator, *not* to the outputs of the baseband generator or the RF section. The delay from the data generator output to the RF section output is approximately 24 chips.


Figure 3-8 Example TPC Output Waveform

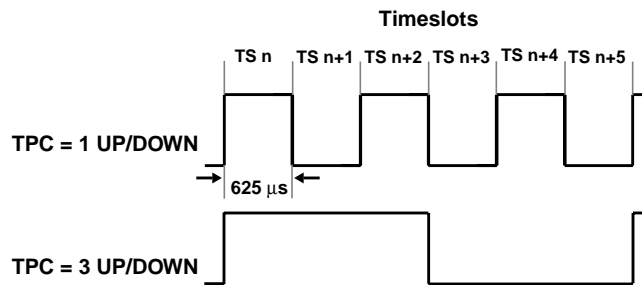

System Configuration

The following illustration shows a typical system setup using the Option H98 signal generator to test a base station in the uplink mode.

Figure 3-9 System Configuration for Wideband CDMA in the Uplink Mode

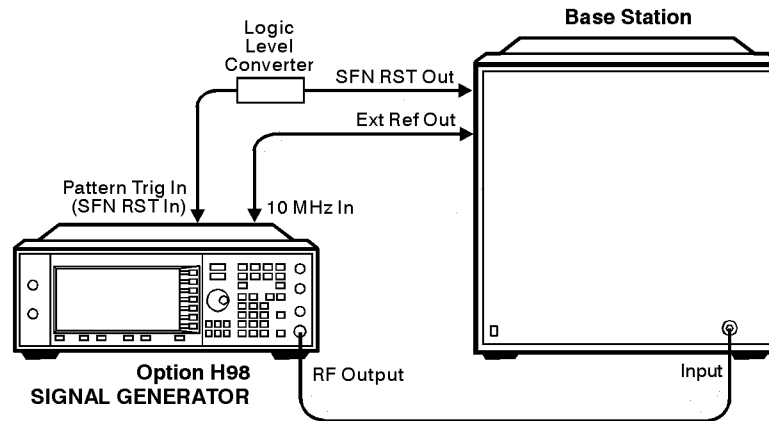

hk724b

You must provide a logic level converter, as shown in the illustration above. The logic level converter converts the SFN RST signal from the base station to a TTL signal that can be used by the SFN RST Input connector on the rear panel of the Option H98 signal generator. The base station's 10 MHz reference output must be frequency-locked to its internal baseband modulation.


4 Softkey Reference

The information in this chapter supplements the **Mode** key documentation in the HP ESG-D Series manual set.

Wideband CDMA Softkeys

Pressing the front-panel **Mode** key accesses a menu of softkeys. To display the Wideband CDMA menu, press the **Wideband CDMA** softkey.

The softkeys in the Wideband CDMA menu are described in this section in alphabetical order. The SCPI commands (and their associated command queries) that duplicate these softkeys remotely are provided in this section also. For detailed information relating to SCPI commands, see [Chapter 5, “Programming Information,”](#) on page 5-1.

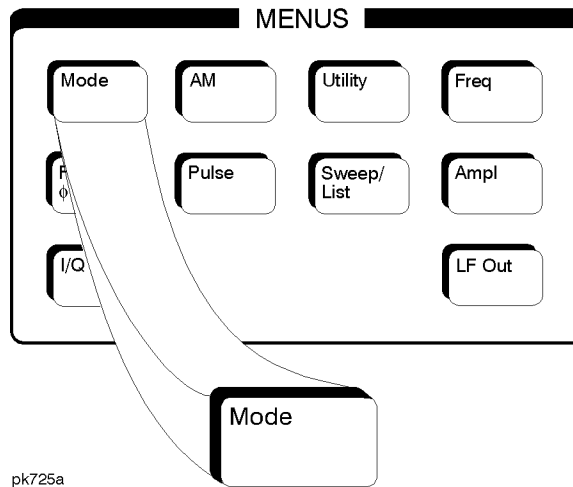

32 ksps

Press this softkey to set the symbol rate to 32 kilosymbols per second.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Symbol Rate**, **32 ksps**

SCPI Commands and Command Queries:

```
[ :SOURce ] :RADio :WCDMa [ :BBG ] :DLINK :CHANnel [ 1 ] :SRATe SR32K
[ :SOURce ] :RADio :WCDMa [ :BBG ] :DLINK :CHANnel [ 1 ] :SRATe?

[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :CHANnel [ 1 ] | 2 | 3 :
SRATe SR32K
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :CHANnel [ 1 ] | 2 | 3 :SRATe?

[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :MCOd [ 1 ] :SRATe SR32K
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :MCOd [ 1 ] :SRATe?
```

64 ksps

Press this softkey to set the symbol rate to 64 kilosymbols per second.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Symbol Rate**, **64 ksps**

SCPI Commands and Command Queries:

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SRATe SR64K
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SRATe?
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]|2|3:
SRATe SR64K
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]|2|3:SRATe?
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:SRATe SR64K
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:SRATe?
```

64 ksps voice

Press this softkey to set the symbol rate to 64 kilosymbols per second voice.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Symbol Rate**, **64 ksps voice**

SCPI Commands and Command Queries:

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SRATe SRV64K
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SRATe?
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:SRATe SRV64K
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:SRATe?
```

128 ksps

Press this softkey to set the symbol rate to 128 kilosymbols per second.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Symbol Rate**, **128 ksps**

SCPI Commands and Command Queries:

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SRATe SR128K
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SRATe?
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]|2|3:
SRATe SR128K
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]|2|3:SRATe?
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:SRATe SR128K
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:SRATe?
```

256 ksps

Press this softkey to set the symbol rate to 256 kilosymbols per second.

Softkey Location: Press **Mode, Wideband CDMA, Channel Setup, Symbol Rate, 256 ksps**

SCPI Commands and Command Queries:

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:SRATe SR256K  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:SRATe?
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]| 2| 3:  
SRATe SR256K
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]| 2| 3:SRATe?
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:MCOD[ 1 ]:SRATe 256ksps
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:MCOD[ 1 ]:SRATe?
```

ACCH

Press this softkey to set the downlink/uplink channel type to an Associated Control Channel (ACCH).

Softkey Location: Press **Mode, Wideband CDMA, Channel Setup, Channel Type, ACCH**

SCPI Commands and Command Queries:

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:TYPE ACCH  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:TYPE?
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:TYPE ACCH  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:TYPE?
```

BCCH Setup

Press this softkey to display the BCCH (Broadcast Control Channel) Setup menu. Within this menu you can define:

- BCCH type,
- data pattern,
- System Frame Number setup,
- Tx power bits,
- uplink interference bits, and
- W bits.

Softkey Location: Press **Mode, Wideband CDMA, Perch Setup, BCCH Setup**

BCCH Type

Press this softkey to set the downlink channel BCCH type.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Perch Setup**, **BCCH Setup**, **BCCH Type**

Choices: 1 or 2

Status after Normal Preset: 1

SCPI Command and Command Query:

```
[ :SOURCE ]:RADIO:WCDMA[ :BBG ]:DLINK:PERCh[1]:BCCH[ :TYPE ] 1|2
[ :SOURCE ]:RADIO:WCDMA[ :BBG ]:DLINK:PERCh[1]:BCCH[ :TYPE ]?
```

Channel

Press this softkey to set the downlink/uplink channel number.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel #**

Downlink Choice: 1

Uplink Choices: 1, 2, or 3

Status after Normal Preset: 1

SCPI Commands and Command Queries:

```
[ :SOURCE ]:RADIO:WCDMA[ :BBG ]:DLINK:CHANnel[1]
[ :SOURCE ]:RADIO:WCDMA[ :BBG ]:DLINK:CHANnel?

[ :SOURCE ]:RADIO:WCDMA[ :BBG ]:ULINK:CHANnel[1]|2|3
[ :SOURCE ]:RADIO:WCDMA[ :BBG ]:ULINK:CHANnel?
```

Channel Setup

Press this softkey to display the Channel Setup menu. From this menu, you can define channel type and parameters.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**

Channel State Off On

Press this softkey to toggle the operating state of the active channel. Note that channels cannot be turned off when operating in uplink multicode mode.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel State Off On**

Downlink Channel 1 Choices: **Off** or **On**

Uplink Channels 1, 2 or 3 Choices: **Off** or **On**

Status after Normal Preset: **On**

SCPI Commands and Command Queries:

```
[ :SOURce ] :RADio :WCDMa [ :BBG ] :DLINK :CHANnel [ 1 ] [ :STATe ]
ON | OFF | 1 | 0
[ :SOURce ] :RADio :WCDMa [ :BBG ] :DLINK :CHANnel [ 1 ] [ :STATe ] ?

[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :CHANnel [ 1 ] | 2 | 3 [ :STATe ]
ON | OFF | 1 | 0
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :CHANnel [ 1 ] | 2 | 3 [ :STATe ] ?
```

Channel Type

Press this softkey to select the channel type.

Downlink Channel Types

The following downlink channel types are assigned by pressing one of the following softkeys:

ACCH	Sets the downlink channel type to an Associated Control Channel (ACCH).
DTCH+ACCH	Sets the downlink channel type to a Dedicated Traffic Channel plus Associated Control Channel (DTCH+ACCH).
DTCH	Sets the downlink channel type to a Dedicated Traffic Channel (DTCH).
DTX	Sets the downlink channel type to a Discontinuous Transmission Channel (DTX).
FACH	Sets the downlink channel type to a Forward Access Channel Long (FACH-L).
SDCCH	Sets the downlink channel type to a Stand-Alone Dedicated Control Channel (SDCCH).
UPCH	Sets the downlink channel type to a User Packet Traffic Channel (UPCH).

Status after Normal Preset: **DTCH+ACCH**

Uplink Channel Types

In uplink mode, channel type for channels 2 and 3 is set by channel 1, but each channel can be turned off independently.

The following uplink channel types are assigned by pressing one of the following softkeys:

ACCH	Sets the uplink channel type to an Associated Control Channel (ACCH).
DTCH+ACCH	Sets the uplink channel type to a Dedicated Traffic Channel plus Associated Control Channel (DTCH+ACCH).
DTCH	Sets the uplink channel type to a Dedicated Traffic Channel (DTCH).
DTX	Sets the uplink channel type to a Discontinuous Transmission Channel (DTX).
RACH	Sets the uplink channel type to a Random Access Channel Long (RACH-L).
SDCCH	Sets the uplink channel type to a Stand-Alone Dedicated Control Channel (SDCCH).
UPCH	Sets the uplink channel type to a User Packet Traffic Channel (UPCH).

Status after Normal Preset: DTCH+ACCH

Symbol rate is coupled to channel type. [Table 4-1](#) shows *actual* symbol rates set as a function of channel type and *selected* symbol rate.

Illegal combinations are not selectable via the front panel; assignments via remote commands will default as shown in the following table.

Table 4-1 Actual Symbol Rate as a Function of Channel Type versus Selected Symbol Rate

Channel Type	Selected Symbol Rate (in ksps)				
	32	64	64 voice	128	256
DTCH+ACCH	32	64	64 voice	128	256
ACCH	32	64	64	128	256
DTCH	32	64	64 voice	128	256
DTX	32	64	64	128	256
FACH	64	64	64	64	64
RACH	64	64	64	64	64
SDCCH	32	32	32	32	32
UPCH	32	64	64	128	256

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Channel Type**

Status after Normal Preset: **DTCH+ACCH**

SCPI Commands and Command Queries:

```
[ :SOURce ]:RADio:WCDMa [ :BBG ]:DLINK:CHANnel [ 1 ]:TYPE
DA | ACCH | DTCH | DTX | FACH | SDCCH | UPCH
```

```
[ :SOURce ]:RADio:WCDMa [ :BBG ]:DLINK:CHANnel [ 1 ]:TYPE?
```

```
[ :SOURce ]:RADio:WCDMa [ :BBG ]:ULINK:CHANnel [ 1 ]:TYPE
DA | ACCH | DTCH | DTX | RACH | SDCCH | UPCH
```

```
[ :SOURce ]:RADio:WCDMa [ :BBG ]:ULINK:CHANnel [ 1 ]:TYPE?
```

CRC

Press this softkey to select CRC data insertion. When **CRC** is chosen, the selected data pattern is appended to the back of the CRC. This combination is then convolved, interleaved, and segmented into timeslots.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **More (1 of 2)**, **Data Insertion**, **CRC**

SCPI Commands and Command Queries:

```
[ :SOURce ]:RADio:WCDMa [ :BBG ]:DLINK:CHANnel [ 1 ]:INSert CRC
[ :SOURce ]:RADio:WCDMa [ :BBG ]:DLINK:CHANnel [ 1 ]:INSert?
```

```
[ :SOURce ]:RADio:WCDMa [ :BBG ]:ULINK:CHANnel [ 1 ]:INSert CRC
[ :SOURce ]:RADio:WCDMa [ :BBG ]:ULINK:CHANnel [ 1 ]:INSert?
```

Data Insertion

Press this softkey to select how and where the data pattern is inserted into channel 1.

CRC	Appends the selected data pattern to the back of the CRC. This combination is then convolved, interleaved, and segmented into timeslots.
Multiplex	Segments the selected data pattern directly into timeslots with Pilot, TPC symbols, and CRC, but without convolution or interleaving.
Spread	Directly spreads the selected data pattern without segmentation.

The selected data insertion value is bolded. Data insertion is not selectable for uplink channels 2 and 3.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **More (1 of 2)**, **Data Insertion**

Choices: **CRC**, **Multiplex**, or **Spread**

Status after Normal Preset: **CRC**

SCPI Commands and Command Queries:

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:INSert
CRC|MULTiplex|SPREAd
[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:INSert?

[:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:INSert
CRC|MULTiplex|SPREAd
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:INSert?
```

Data Pattern

Press this softkey to change the transmitted data pattern. The selected value is bolded.

Downlink and Uplink Traffic Channel Data Patterns

Select one of the following softkeys to configure a data pattern:

- | | |
|--------------|--|
| ZEROS | Sets the data pattern to a continuous stream of 0's. |
| PN9 | Sets the data pattern to a 9-bit ITU pseudo-random bit pattern. |
| PN15 | Sets the data pattern to a 15-bit ITU pseudo-random bit pattern. |

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Data Pattern**

Status after Normal Preset: **PN9**

SCPI Commands and Command Queries:

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:  
DATA:PATtern <value>  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:  
DATA:PATtern?
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ] | 2 | 3 :  
DATA[ :PATtern ] PN9 | PN15 | ZEROs  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ] | 2 | 3 :  
DATA[ :PATtern ]?
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:MCOD[ 1 ] :  
DATA[ :PATtern ] PN9 | PN15 | ZEROs  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:MCOD[ 1 ] :  
DATA[ :PATtern ]?
```

Downlink Perch1 BCCH Data Patterns

For Perch1, BCCH data, the range of values is 00000000 through 11111111 (binary). The eight bit pattern is repeated thirteen times for a total of 104 bits.

Softkey Location: **Mode**, **Wideband CDMA**, **Perch Setup**, **Data Pattern**

Range: 00000000 to 11111111 (binary)

Status after Normal Preset: 11111111

SCPI Command and Command Query:

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:PERCh[ 1 ] :  
DATA:PATtern <value>  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:PERCh[ 1 ] :  
DATA:PATtern?
```

Down Long Code

Press this softkey to assign a specific long code to the Perch channels and the dedicated traffic channel when the instrument is set to the downlink state. To enter the downlink long code value, rotate the front-panel knob until the desired value is displayed, use the up and down arrow keys, or enter the value using the numeric keypad and press the **Enter** terminator softkey. The **Down Long Code** softkey is displayed only when the **Link Down Up** softkey is set to **Down**.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Down Long Code**

Range: 1 to 128

Status after Normal Preset: 1

SCPI Command and Command Query:

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:LCODE <value>
[:SOURce]:RADio:WCDMa[:BBG]:DLINK:LCODE?
```

DTCH

Press this softkey to select a Dedicated Traffic Channel (DTCH).

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Channel Type**, **DTCH**

SCPI Commands and Command Queries:

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TYPE DTCH
[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TYPE?

[:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE DTCH
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE?
```

DTCH+ACCH

Press this softkey to select a DTCH+ACCH channel type.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Channel Type**, **DTCH+ACCH**

Or press **Mode**, **Wideband CDMA**, **Channel Setup**, **Multicode Type**, **DTCH+ACCH**

SCPI Commands and Command Queries:

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TYPE DA
[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TYPE?

[:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE DA
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE?

[:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TYPE DA
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TYPE?
```

DTX

Press this softkey to select a Discontinuous Transmission (DTX) channel type.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Channel Type**, **DTX**

SCPI Commands and Command Queries:

```
[ :SOURCE ] : RADio : WCDMa [ :BBG ] : DLINK : CHANnel [ 1 ] : TYPE DTX  
[ :SOURCE ] : RADio : WCDMa [ :BBG ] : DLINK : CHANnel [ 1 ] : TYPE?  
  
[ :SOURCE ] : RADio : WCDMa [ :BBG ] : ULINK : CHANnel [ 1 ] : TYPE DTX  
[ :SOURCE ] : RADio : WCDMa [ :BBG ] : ULINK : CHANnel [ 1 ] : TYPE?
```

FACH

Press this softkey to select a Forward Access Channel Long (FACH-L). This selection is only available for a downlink traffic channel.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Channel Type**, **FACH**

SCPI Command and Command Query:

```
[ :SOURCE ] : RADio : WCDMa [ :BBG ] : DLINK : CHANnel [ 1 ] : TYPE FACH  
[ :SOURCE ] : RADio : WCDMa [ :BBG ] : DLINK : CHANnel [ 1 ] : TYPE?
```

Fixed

Press this softkey to select a fixed System Frame Number format for the Perch1 channel.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Perch Setup**, **BCCH Setup**, **SFN Setup**, **System Frame No.**, **Fixed**

SCPI Command and Command Query:

```
[ :SOURCE ] : RADio : WCDMa [ :BBG ] : DLINK : PERCh [ 1 ] :  
SFNumber [ :TYPE ] FIX  
[ :SOURCE ] : RADio : WCDMa [ :BBG ] : DLINK : PERCh [ 1 ] :  
SFNumber [ :TYPE ] ?
```

Increment

Press this softkey to select an increment System Frame Number format for the Perch1 channel.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Perch Setup**, **BCCH Setup**, **SFN Setup**, **System Frame No.**, **Increment**

SCPI Command and Command Query:

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:
SFNumber[:TYPE] INCR
[:SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:
SFNumber[:TYPE]?
```

Interrupt Trigger

Press this softkey to interrupt downlink channel 1. Channel 1 is interrupted for the duration specified by the interrupt value. Pressing the **Interrupt Trigger** softkey is equivalent to turning the **Channel State Off On** softkey off for the duration of the interrupt value and then back on. The **Interrupt Trigger** softkey is available only when the **Link Down Up** softkey is set to **Down**.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **More (1 of 2)**, **Interrupt Trigger**

SCPI Command:

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:INTerrupt:
TRIGger
```

Interrupt Value

Press this softkey to change the duration that the **Interrupt Trigger** will interrupt downlink channel 1. To enter the interrupt value, rotate the front-panel knob until the desired value is displayed, use the up and down arrow keys, or enter the value using the numeric keypad and press either the **msec** or **sec** terminator softkey.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **More (1 of 2)**, **Interrupt Value**

Range: 20 milliseconds to 10 seconds, in 20 millisecond steps

Status after Normal Preset: 1.000 seconds

SCPI Command and Command Query:

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:
INTerrupt[:TIME] <value>
[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:
INTerrupt[:TIME]?
```

Link Down Up

Press this softkey to toggle the transmission direction between downlink and uplink. The selected value is bolded. When uplink is selected, the **Perch Setup** softkey is not displayed, and the **Down Long Code** softkey is replaced by the **Uplink Trig Delay** softkey. When the signal generator is in the uplink mode, it must be frequency-locked to the base station receiver using the uplink trigger feature. Refer to “[System Configuration](#)” on page 3-16 and “[Rear-Panel Overview](#)” on page 3-11 for additional information.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Link Down Up**

Choices: **Down** or **Up**

Status after Normal Preset: **Down**

SCPI Command and Command Query:

```
[ :SOURce ] :RADio :WCDMa [ :BBG ] :CCHannel DLINK | ULINK  
[ :SOURce ] :RADio :WCDMa [ :BBG ] :CCHannel ?
```

Long Code

Press this softkey to enter the long code for the uplink channels.

In multicode mode, all of the multicode use the same long code. To enter the long code value, rotate the front-panel knob until the desired value is displayed, use the up and down arrow keys, or enter the value using the numeric keypad and press the **Enter** terminator softkey.

Long code value changes are not applied to the waveform until long code reset, 1280 chips before the end of System Frame Number $2^{16}-1$.

Long code reset only occurs when:

- the W-CDMA operating state (**W-CDMA Off On**) is toggled,
- the transmission link direction (**Link Down Up**) is toggled,
- the internal System Frame Number transitions from SFN $2^{16}-1$ to SFN 0,
- or when externally triggered by a BTS reference SFN reset input (a low to high transition at the PATTERN TRIG IN rear-panel connector).

Other setup changes in uplink mode, such as short code, data rate, channel type, or time offset, do not affect the long code or long code phase.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Long Code**

Range: 0 to 1FFFFFFFFF (hexadecimal)

Status after Normal Preset: 1

SCPI Commands and Command Queries:

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]|2|3:
LCODE <value>
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]|2|3:LCODE?

[:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD:LCODE <value>
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD:LCODE?
```

Multicode #

Press this softkey and enter a number to activate a multicode channel.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Multicode #**

Choices: 1, 2 or 3

Status after Normal Preset: 1

Multicode Type

Press this softkey to select the multicode type.

DTCH+ACCH Sets the multicode type to a Dedicated Traffic Channel plus an Associated Control Channel.

UPCH Sets the multicode type to a User Packet Traffic Channel.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Multicode Type**

Choices: **DTCH+ACCH** or **UPCH**

Status after Normal Preset: **DTCH+ACCH**

SCPI Command and Command Query:

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TYPE DA|UPCH
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TYPE?
```

Multiplex

Press this softkey to select a data insertion point prior to multiplex. When **Multiplex** is chosen, the selected data pattern is segmented directly into timeslots with Pilot and TPC symbols but without CRC, convolution, or interleaving. Filler bits consisting of 0's are inserted in place of the bits normally produced by convolutional coding.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **More (1 of 2)**, **Data Insertion**, **Multiplex**

SCPI Commands and Command Queries:

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:DATA:
INsert MULTiplex
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:DATA:
INsert?

[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:DATA:
INsert MULTiplex
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:DATA:
INsert?
```

Perch Setup


Press this softkey to display the Perch Setup menu which enables you to set the operating state of the Perch1 and Perch2 channels, and define the BCCH setup.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Perch Setup**

Perch1 Off On

Press this softkey to toggle the operating state of the Perch1 logical channel for synchronization. The Perch1 channel can be enabled alone, with any combination of the Perch2 channel and channel 1, or it can be turned off. A short code of C8(0) is automatically assigned to the Perch1 channel. The **W-CDMA Off On** softkey must be enabled in order for this signal to be generated. The **Perch1 Off On** softkey is only displayed when the **Link Down Up** softkey is selected to the downlink direction.

Figure 4-1 Perch1(BCCH) Frame

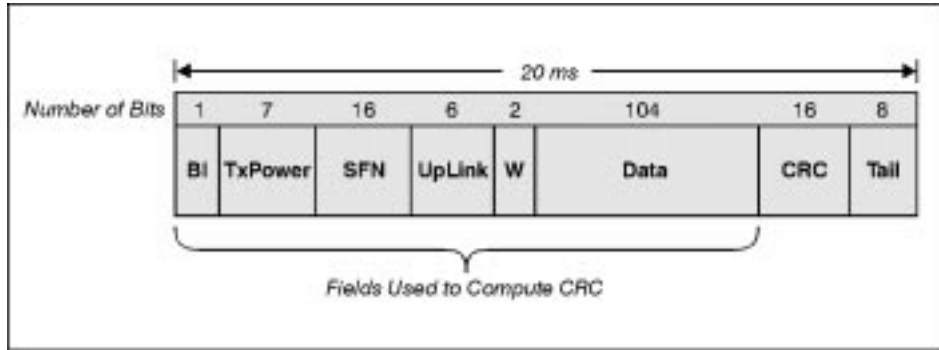

All fields in the Perch1 (BCCH) frame are selectable except:

- SFN, which increments by 2 every 20 milliseconds,
- CRC, which is computed based on all fields plus the SFN value.

The Perch1 (BCCH) frame is made up of the following fields:

- BI: BCCH Identification Bit, selectable
- Tx Power: Transmit Power Indicator, selectable
- SFN: System Frame Number Fixed Value, selectable
- UpLink: Base Station Measured Uplink Interference Power Amount, selectable
- W: Message Confirmation Indicator Bits, selectable
- Data: BCCH Data Field, selectable
- CRC: Cyclic Redundancy Check
- Tail: 8 Bits; All Zeros.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Perch Setup**, **Perch1 Off On**

Choices: **Off** or **On**

Status after Normal Preset: **On**

SCPI Command and Command Query:

```
[ :SOURCE ]:RADio:WCDMa[ :BBG ]:DLINK:PERCh[1][ :STATE ]
ON|OFF|1|0
[ :SOURCE ]:RADio:WCDMa[ :BBG ]:DLINK:PERCh[1][ :STATE ]?
```

Perch2 Off On

Press this softkey to toggle the operating state of the Perch2 logical channel for synchronization. The Perch2 channel can be enabled alone, with any combination of the Perch1 channel and channel 1, or it can be turned off. The short code for Perch2 is set based on the long code masked set (LMS) of the selected long code. Refer to [Table 4-2](#) for the Perch2 short code. The **W-CDMA Off On** softkey must be enabled in order for this signal to be generated. The **Perch2 Off On** softkey is only displayed when the **Link Down Up** softkey is set to **Down**.

Table 4-2 Long Code Range Versus the Perch2 Long-Code Masked Set (LMS)

Long Code Range	Perch2 Short Code LMS
1 to 32	2
33 to 64	3
65 to 96	4
97 to 128	5

Softkey Location: Press **Mode**, **Wideband CDMA**, **Perch Setup**, **Perch2 Off On**

Choices: **Off** or **On**

Status after Normal Preset: **On**

SCPI Command and Command Query:

```
[ :SOURce ] :RADio :WCDMa [ :BBG ] :DLINK :PERCh2 [ :STATe ]
ON | OFF | 1 | 0
[ :SOURce ] :RADio :WCDMa [ :BBG ] :DLINK :PERCh2 [ :STATe ] ?
```

Phase Polarity Normal Invert

Press this softkey to reverse the phase rotation of the wideband CDMA signal.

- Normal** Sets the polarity to a normal state.
- Invert** Inverts the internal Q signal, reversing the direction of phase rotation. Required by some radio standards, phase polarity inversion is also useful for lower sideband mixing applications.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **More (1 of 2)**, **Phase Polarity Normal Invert**

Choices: **Normal** or **Invert**

Status after Normal Preset: **Normal**


SCPI Command and Command Query:

```
[ :SOURce]:RADio:WCDMa[:BBG]:POLarity[:ALL] NORMal|INVert
[:SOURce]:RADio:WCDMa[:BBG]:POLarity[:ALL]?
```

Pilot-TPC Power

Press this softkey to set the pilot-TPC power to one of three levels for the active multicode.

Figure 4-2 Channel 1 Pilot-TPC Power Levels During Multicode Transmission

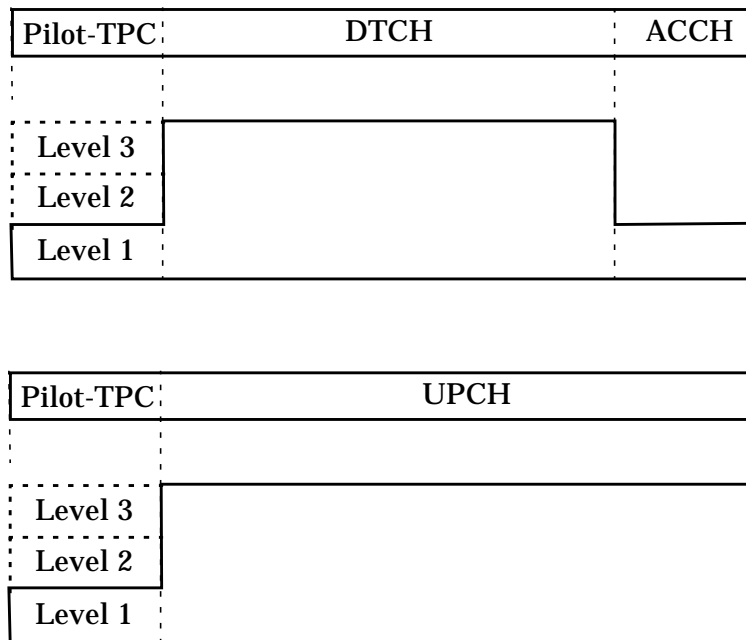

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Pilot-TPC Power**

Range: 1 to 3

Status after Normal Preset: 1

SCPI Command and Command Query:

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD:NPOwer <value>
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD:NPOwer?
```

PN9

Press this softkey to set the selected channel's data to an ITU PN9 bit pattern.

Softkey Location: Press **Mode, Wideband CDMA, Channel Setup, Data Pattern, PN9**

SCPI Commands and Command Queries:

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:PATtern PN9  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:PATtern?
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:  
PATtern PN9  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:PATtern?
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:MCOD[ 1 ]:PATtern PN9  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:MCOD[ 1 ]:PATtern?
```

PN15

Press this softkey to set the selected channel's data to an ITU PN15 bit pattern.

Softkey Location: Press **Mode, Wideband CDMA, Channel Setup, Data Pattern, PN15**

SCPI Commands and Command Queries:

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:  
PATtern PN15  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:PATtern?
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:  
PATtern PN15  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:PATtern?
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:MCOD[ 1 ]:PATtern PN15  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:MCOD[ 1 ]:PATtern?
```

Power

Press this softkey to set the downlink channel's power relative to the power of the Perch1 and Perch2 channels.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Power**

Range: ± 30 dB of Perch1 and Perch2 power setting

Status after Normal Preset: 0.00 dB

SCPI Command and Command Query:

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:
Power <value>
[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:POWER?
```

RACH

Press this softkey to select a Random Access Channel Long (RACH-L) type for the uplink channel. This selection is only available for an uplink channel.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Channel Type**, **RACH**

SCPI Command and Command Query:

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE
RACH
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE?
```

SDCCH

Press this softkey to select a Stand-Alone Dedicated Control Channel (SDCCH) type.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Channel Type**, **SDCCH**

SCPI Commands and Command Queries:

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TYPE SDCCH
[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TYPE?

[:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE
SDCCH
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE?
```

SFN Fixed Value

Press this softkey to select the value for a fixed System Frame Number. Only even numbered values are allowed.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Perch Setup**, **BCCH Setup**, **SFN Setup**, **SFN Fixed Value**

Range: 0000 to 0FFE (hexadecimal, evens only)

Status after Normal Preset: 0000 (hexadecimal)

SCPI Command and Command Query:

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:PERCh[ 1 ]:
SFNumber[ :TYPE ]:FIX <value>
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:PERCh[ 1 ]:
SFNumber[ :TYPE ]:FIX?
```

SFN Setup

Press this softkey to display the SFN Setup menu, where you can define the System Frame Number (fixed or increment) and the value of the fixed System Frame Number.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Perch Setup**, **BCCH Setup**, **SFN Setup**

Short Code (Channel 1)

Press this softkey to set the short code for channel 1. To enter the short code value, rotate the front-panel knob until the desired value is displayed, use the up and down arrow keys, or enter the value using the numeric keypad and press the Enter terminator softkey. The range of values allowed is dependent on the symbol rate.

If the symbol rate is changed to a new value, and the short code value does not fall into the allowed short code range for the new symbol rate value, the short code value is automatically set to the maximum short code value that corresponds to the new rate. See [Table 4-3](#).

Table 4-3 Symbol Rate Versus Channel 1 Short Code Range

Symbol Rate	Short Code Range
32 ksps	0 to 127
64 ksps	0 to 63
64 ksps voice	0 to 63
128 ksps	0 to 31
256 ksps	0 to 15

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Short Code**

Range: See [Table 4-3](#)

Status after Normal Preset: 8

SCPI Commands and Command Queries:

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SCODE <value>
[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SCODE?
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:SCODE <value>
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:SCODE?
```

Short Code (Channels 2 and 3)

Press this softkey to set the short code for uplink channels 2 or 3. To enter the short code value, rotate the front-panel knob until the desired value is displayed, use the up and down arrow keys, or enter the value using the numeric keypad and press the **Enter** terminator softkey. This short code value is used for uplink channels 2 and 3, except in multicode mode during the Pilot and TPC symbols, when the primary channel short code value is used.

The range of values for channels 2 and 3 short code are coupled to their symbol rates, as previously described for Short Code (Channel 1).

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Short Code**

Range: See [Table 4-3](#)

Status after Normal Preset: 9 (channel 2)
10 (channel 3)

SCPI Command and Command Query:

```
[ :SOURce ]:RADio:WCDMa [ :BBG ]:ULINK:CHANnel2 | 3:SCODE <value>  
[ :SOURce ]:RADio:WCDMa [ :BBG ]:ULINK:CHANnel2 | 3:SCODE?
```

Spread

Press this softkey to select spread data insertion. When **Spread** is chosen, the selected data pattern is spread directly without segmentation.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **More (1 of 2)**, **Data Insertion**, **Spread**

SCPI Commands and Command Queries:

```
[ :SOURce ]:RADio:WCDMa [ :BBG ]:DLINK:CHANnel [ 1 ]:DATA:  
INsert SPREAd  
[ :SOURce ]:RADio:WCDMa [ :BBG ]:DLINK:CHANnel [ 1 ]:DATA:  
INsert?  
  
[ :SOURce ]:RADio:WCDMa [ :BBG ]:ULINK:CHANnel [ 1 ]:DATA:  
INsert SPREAd  
[ :SOURce ]:RADio:WCDMa [ :BBG ]:ULINK:CHANnel [ 1 ]:DATA:  
INsert?
```

Symbol Rate

Press this softkey to set the symbol rate in kilosymbols per second (ksps). The selected value is bolded.

- 32 ksps** Sets the symbol rate to 32 kilosymbols per second.
- 64 ksps** Sets the symbol rate to 64 kilosymbols per second.
- 64 ksps voice** Sets the symbol rate to 64 kilosymbols per second voice. Not available in multicode mode and uplink channels 2 and 3.
- 128 ksps** Sets the symbol rate to 128 kilosymbols per second.
- 256 ksps** Sets the symbol rate to 256 kilosymbols per second.

NOTE Symbol rate is coupled to channel type. [Table 4-4](#) shows *actual* symbol rates set as a function of channel type and *selected* symbol rate.

Illegal combinations are not selectable via the front panel. Illegal assignments via remote (SCPI) commands will default as shown in the following table.

Table 4-4 Actual Symbol Rate as a Function of Channel Type versus Selected Symbol Rate

Channel Type	Selected Symbol Rate (in kilosymbols per second)				
	32	64	64 voice	128	256
DTCH+ACCH	32	64	64 voice	128	256
ACCH	32	64	64	128	256
DTCH	32	64	64 voice	128	256
DTX	32	64	64	128	256
FACH	64	64	64	64	64
RACH	64	64	64	64	64
SDCCH	32	32	32	32	32
UPCH	32	64	64	128	256

The following table provides some details about the parameters at each symbol rate.

Table 4-5 Parameters versus Symbol Rate

Parameter	Symbol Rate				
	32 ksps	64 ksps	64 ksps voice	128 ksps	256 ksps
Data Bits per Radio Frame	88 + 16 bit CRC	320 + 13 bit CRC	320 + 13 bit CRC	723 + 13 bit CRC	1446 + 2 by 13 bit CRC
Dummy Bits	48	1	1	8	8
Interleave Method	16 × 24	16 × 64	16 × 64	16 × 140	16 × 278
Bits per Radio Frame	384	1024	1024	2240	4448
Data Bits per Timeslot	24	64	64	140	278

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Symbol Rate**

Choices: **32 ksps**, **64 ksps**, **64 ksps voice**, **128 ksps**, **256 ksps**

Status after Normal Preset: **32 ksps**

SCPI Commands and Command Queries:

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:SRATE
SR32K | SR64K | SRV64K | SR128K | SR256K
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:SRATE?

[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:SRATE
SR32K | SR64K | SRV64K | SR128K | SR256K
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:SRATE?

[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel2 | 3:SRATE
SR32K | SR64K | SR128K | SR256K
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel2 | 3:SRATE?

[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:MCOD[ 1 ]:SRATE
SR32K | SR64K | SR128K | SR256K
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:MCOD[ 1 ]:SRATE?
```

System Frame No.

Press this softkey to setup the System Frame Number format for the Perch1 channel.

- | | |
|------------------|--|
| Fixed | Selects a fixed System Frame Number format for the Perch1 channel. To set the System Frame Number fixed value, press SFN Fixed Value and enter the desired value. |
| Increment | Selects an increment System Frame Number format for the Perch1 channel. |

Softkey Location: Press **Mode**, **Wideband CDMA**, **Perch Setup**, **BCCH Setup**, **SFN Setup**, **System Frame No.**

Choices: Fixed or Increment

Status after Normal Preset: Increment

SCPI Command and Command Query:

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:
SFNumber[:TYPE] INCR|FIX
[:SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:
SFNumber[:TYPE]?
```

TFrame

Press this softkey to enter the downlink/uplink channel or the uplink multicode time offset TFrame value.

TFrame in Downlink Mode

TFrame adjusts the number of timeslots that the channel 1 radio frame is offset from the Perch radio frame and long code phase zero. Total offset is equal to TFrame plus TSlot. For additional information, see [“Understanding Time Offsets”](#) on page 3-8.

TFrame in Uplink Mode

TFrame adjusts the number of timeslots that the radio frames for channels 1, 2 and 3 are offset from long code phase 1280. Total offset is equal to TFrame plus TSlot. For additional information, see [“Understanding Time Offsets”](#) on page 3-8.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **More (1 of 2)**, **Time Offset**, **TFrame**

Range: 0 to 15 timeslots

Status after Normal Preset: 0 slots

SCPI Commands and Command Queries:

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:TIME :  
OFFSet:TFRame <value>
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:TIME :  
OFFSet:TFRame?
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:TIME :  
OFFSet:TFRame <value>
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:TIME :  
OFFSet:TFRame?
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:MCOD[ 1 ]:TIME :  
OFFSet:TFRame <value>
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:MCOD[ 1 ]:TIME :  
OFFSet:TFRame?
```

Time Offset

Press this softkey to open a submenu that enables you to set up time offset values for TSector, TSlot, and TFrame. For additional information, see [“Understanding Time Offsets”](#) on page 3-8.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **More (1 of 2)**, **Time Offset**

Transmit Pwr Ctrl

Press this softkey to set the number of 1 dB steps that the transmit power control (TPC) field of the DTCH channel is first incremented and then decremented. To enter the TPC value, rotate the front-panel knob until the desired value is displayed, use the up and down arrow keys, or enter the value using the numeric keypad and press the **Enter** terminator softkey.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Transmit Pwr Ctrl**

Range: 1 to 80

Status after Normal Preset: 1 UP/DOWN

SCPI Commands and Command Queries:

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:  
UPDown <value>
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:UPDown?
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:  
UPDown <value>
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:UPDown?
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:MCOD[ 1 ]:UPDown <value>
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:MCOD[ 1 ]:UPDown?
```

TSector

Press this softkey to enter the downlink/uplink channel or uplink multicode time offset TSector value.

TSector in Downlink Mode

TSector adjusts the Perch radio frame timing and long code relative to the BTS reference System Frame Number Reset output at the DATA OUT rear-panel connector. This is accomplished by adjusting the offset (in number of chips) from the falling edge of the System Frame Number Reset to the first symbol of the Perch radio frame and long code phase zero, measured at the RF output. For additional information, see [“Understanding Time Offsets”](#) on page 3-8.

TSector in Uplink Mode

TSector adjusts the channel 1, 2 and 3 radio frame timing and long code phase relative to the BTS reference System Frame Number Reset input at the PATTERN TRIG IN rear-panel connector. This is accomplished by adjusting the offset (in number of chips) from the falling edge of the System Frame Number input to the long code phase 1280 of channels 1, 2 and 3 measured at the RF output. Total offset is equal to uplink trigger delay (propagation delay) plus TSector. For additional information, see [“Understanding Time Offsets”](#) on page 3-8.

Softkey Location: Press **Mode, Wideband CDMA, Channel Setup, More (1 of 2), Time Offset, TSector**

Range: 0 to 2560 chips

Status after Normal Preset: 0 chips

SCPI Commands and Command Queries:

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TIME:
OFFSet:TSEctor <value>
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TIME:
OFFSet:TSEctor?
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TIME:
OFFSet:TSEctor <value>
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TIME:
OFFSet:TSEctor?
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TIME:
OFFSet:TSEctor <value>
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TIME:
OFFSet:TSEctor?
```

TSlot

Press this softkey to enter the downlink/uplink channel or uplink multicode time offset TSlot value.

TSlot in Downlink Mode

TSlot adjusts the number of symbols channel 1 radio frame is offset from the Perch radio frame and long code phase zero. Total offset is equal to TSlot plus TFrame. For additional information, see [“Understanding Time Offsets”](#) on page 3-8.

TSlot in Uplink Mode

TSlot adjusts the number of symbols channels 1, 2 and 3 radio frames are offset from long code phase 1280. Total offset is equal to TSlot plus TFrame. For additional information, see [“Understanding Time Offsets”](#) on page 3-8.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **More (1 of 2)**, **Time Offset**, **TSlot**

Range: see [Table 4-6](#)

Status after Normal Preset: 0 symbols

Table 4-6

Symbol Rate Versus TSlot Range

Symbol Rate	TSlot Values
32 ksps	0 to 19
64 ksps	0 to 39
64 ksps voice	0 to 39
128 ksps	0 to 79
256 ksps	0 to 159

SCPI Commands and Command Queries:

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TIME:
OFFSet:TSlot <value>
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TIME:
OFFSet:TSlot?
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TIME:
OFFSet:TSlot <value>
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TIME:
OFFSet:TSlot?
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TIME:
OFFSet:TSlot <value>
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TIME:
OFFSet:TSlot?
```

Tx Power Bits

Press this softkey to enter the Perch1 Tx power bit value.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Perch Setup**, **BCCH Setup**,
Tx Power Bits

Range: 0 to 127

Status after Normal Preset: 0

SCPI Command and Command Query:

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:TXPower <value>
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:TXPower?
```

Ulink I/F Bits

Press this softkey to enter the Perch1 uplink interference bit value.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Perch Setup**, **BCCH Setup**,
Ulink I/F Bits

Range: 0 to 63

Status after Normal Preset: 0

SCPI Command and Command Query:

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:UPIF <value>
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:UPIF?
```

UPCH

Press this softkey to change the uplink/downlink channel or multicode type to a User Packet Traffic Channel (UPCH).

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Channel Type**, **UPCH**

Or press **Mode**, **Wideband CDMA**, **Channel Setup**, **Multicode Type**, **UPCH**

SCPI Commands and Command Queries:

```
[ :SOURCE ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:TYPE UPCH
```

```
[ :SOURCE ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:TYPE?
```

```
[ :SOURCE ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:TYPE UPCH
```

```
[ :SOURCE ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:TYPE?
```

```
[ :SOURCE ]:RADio:WCDMa[ :BBG ]:ULINK:MCOD[ 1 ]:TYPE UPCH
```

```
[ :SOURCE ]:RADio:WCDMa[ :BBG ]:ULINK:MCOD[ 1 ]:TYPE?
```

Uplink Mode Chan Multicode

Press this softkey to toggle the uplink operating mode between channel and multicode mode.

Chan	Selects channel as the uplink transmission mode. In channel mode, three uplink channels are available. Channel 1 includes the following selectable parameters: <ul style="list-style-type: none">• operating state,• channel type,• symbol rate,• short code,• data pattern,• long code,• data insertion,• transmission power control,• time offset adjustments (TSector, TFrame, TSlot),• uplink trigger delay, and• phase polarity.
-------------	--

Channels 2 and 3 use the same channel type, uplink trigger delay, time offset adjustments, and phase polarity as channel 1. Channels 2 and 3 include the following selectable parameters:

- operating state,
- symbol rate,
- power (relative to channel 1),
- data pattern, and
- long code.

Multicode

Selects multicode as the uplink transmission mode.

In multicode mode, three multicode channels are available. Multicode channel 1 includes the following selectable parameters:

- multicode type,
- symbol rate,
- short code,
- pilot-TPC power,
- data pattern,
- long code,
- transmission power control,
- time offset adjustments (TSector, TFrame, TSlot)
- uplink trigger delay, and
- phase polarity.

Multicode channels 2 and 3 use the same parameters as multicode channel 1 with the exception of their short codes, which are individually selectable.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Uplink Mode Chan Multicode**

Choices: Chan or Multicode

Status after Normal Preset: Chan

SCPI Command and Command Query:

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MODE CHANnel |MCOD
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:MODE?
```

Uplink Power

Press this softkey to set the power level of the uplink channels 2 and 3 relative to uplink channel 1.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Uplink Power**

Range: ± 30 dB of the uplink channel 1 power level

Status after Normal Preset: 0.00 dB

SCPI Command and Command Query:

```
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :CHANnel2 | 3 :POWer <value>  
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :CHANnel2 | 3 :POWer?
```

Uplink Trig Delay

Press this softkey to change the propagation delay timing between the trigger from the base station and the RF output of the instrument. To enter the uplink trigger delay value, rotate the front-panel knob until the desired value is displayed, use the up and down arrow keys, or enter the value using the numeric keypad and press the **Enter** terminator softkey. For additional information, see [“Understanding Time Offsets”](#) on page 3-8.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Uplink Trig Delay**

Range: -50 to +204 chips

Status after Normal Preset: 0 chips

SCPI Command and Command Query:

```
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :TRIGger :DELAy <value>  
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :TRIGger :DELAy?
```

W Bits

Press this softkey to set the value of the Perch1 W bits.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Perch Setup**, **BCCH Setup**,
W Bits

Range: 0 to 3

Status after Normal Preset: 0

SCPI Command and Command Query:

```
[ :SOURCE]:RADIO:WCDMA[:BBG]:DLINK:PERCh[1]:WBITS <value>
[:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:PERCh[1]:WBITS?
```

W-CDMA Off On

Press this softkey to enable Option H98 wideband CDMA functionality. Activating the feature configures the internal hardware to generate the structure defined by the W-CDMA experimental system specification. A 10 ms radio frame is constructed for each dedicated traffic channel consisting of 16 timeslots which include pilot symbols, transmit power control bits, ACCH fields filled with zeroes, and data fields filled with selected data (zeros, PN9, or PN15). The **WCDMA** and **I/Q** annunciators appear in the display when this softkey is toggled on.

In addition to enabling the **W-CDMA Off On** softkey, you must enable at least one of the individual channel softkeys (**Perch1 Off On**, **Perch2 Off On**, and **Channel State Off On**) in order to wideband CDMA waveform output. If none of these channel softkeys are enabled, the output is an unmodulated carrier.

Softkey Location: Press **Mode**, **Wideband CDMA**, **W-CDMA Off On**

Choices: **Off** or **On**

Status after Normal Preset: **Off**

SCPI Command and Command Query:

```
[ :SOURCE]:RADIO:WCDMA[:BBG][:STATE] ON|OFF|1|0
[:SOURCE]:RADIO:WCDMA[:BBG][:STATE]?
```

ZEROS

Press this softkey to set the selected channel's data to a bit pattern of continuous 0's.

Softkey Location: Press **Mode**, **Wideband CDMA**, **Channel Setup**, **Data Pattern**, **ZEROS**

SCPI Commands and Command Queries:

```
[ :SOURce ] :RADio :WCDMa [ :BBG ] :DLINK :CHANnel [ 1 ] :PATtern ZEROS  
[ :SOURce ] :RADio :WCDMa [ :BBG ] :DLINK :CHANnel [ 1 ] :PATtern?
```

```
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :CHANnel [ 1 ] :PATtern ZEROS  
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :CHANnel [ 1 ] :PATtern?
```

```
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :MCOD [ 1 ] :PATtern ZEROS  
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :MCOD [ 1 ] :PATtern?
```

5 Programming Information

This chapter includes a brief overview of the Standard Commands for Programmable Instruments (SCPI) programming language (including a command syntax description) and a listing of all of the Wideband CDMA subsystem SCPI commands in alphabetical order. The descriptions include syntax requirements, command queries, variable choices, variable ranges, restrictions, and status after *RST. Use this information to supplement the HP ESG-D Series manual set.

Getting Started with SCPI

This section includes some basic reference material for the Standard Commands for Programmable Instruments language (SCPI). For more detailed information, see the programming guide.

Understanding Common Terms

The following terms are used throughout the remainder of this chapter.

Controller	A controller is any computer used to communicate with a SCPI instrument. A controller can be a personal computer, a minicomputer, or a plug-in card in a card cage. Some intelligent instruments can also function as controllers.
Instrument	An instrument is any device that implements SCPI. Most instruments are electronic measurement or stimulus devices, but this is not a requirement. Similarly, most instruments use an HP-IB or RS-232 interface for communication. The same concepts apply regardless of the instrument function or the type of interface used.
Program Message	A program message is a combination of one or more properly formatted SCPI commands. Program messages always go from a controller to an instrument. Program messages tell the instrument how to make measurements and output signals.
Response Message	A response message is a collection of data in specific SCPI formats. Response messages always go from an instrument to a controller or listening instrument. Response messages tell the controller about the internal state of the instrument and about measured values.
Command	A command is an instruction in SCPI. You combine commands to form messages that control instruments. In general, a command consists of mnemonics (keywords), parameters, and punctuation.
Query	A query is a special type of command. Queries instruct the instrument to make response data available to the controller. Query mnemonics always end with a question mark.

Standard Notation

This section uses several forms of notation that have specific meaning:

Command

Mnemonics Many commands have both a long and a short form and you must use either one or the other (SCPI does not accept a combination of the two). Consider the `FREQuency` command, for example. The short form is `FREQ` and the long form is `FREQUENCY`. This notation type is a shorthand to document both the long and short form of commands. SCPI is not case sensitive, so `fREquEnCy` is just as valid as `FREQUENCY`, but `FREQ` and `FREQUENCY` are the only valid forms of the `FREQuency` command.

Angle

Brackets Angle brackets indicate that the word or words enclosed represent something other than themselves. For example, `<new line>` represents the ASCII character with the decimal value 10. Similarly, `<END>` means that EOI is asserted on the HP-IB interface. Words in angle brackets have much more rigidly defined meaning than words shown in ordinary text. For example, this section uses the word “message” to talk about messages generally. But the bracketed words `<program message>` indicate a precisely defined element of SCPI. If you need them, you can find the exact definitions of words such as `<program message>` in a syntax diagram.

More About Commands

Query and Event Commands

You can query any value that you can set. For example, the presence of the signal generator `FREQuency:OFFSet` command implies that a `FREQuency:OFFSet?` also exists. If you see a command ending with a question mark, it is a query-only command. Some commands are events and cannot be queried. An event has no corresponding setting if it causes something to happen inside the instrument at a particular instant.

Implied Commands

Implied commands appear in square brackets. If you send a subcommand immediately preceding an implied command, but do not send the implied command, the instrument assumes you intend to use the implied command and behaves just as if you had sent it. Notice that this means that the instrument expects you to include any parameters required by the implied command. The following example illustrates equivalent ways to program the signal generator using explicit and implied commands.

An example signal generator command, `FREQuency[:CW]`, with and without the implied command:

<code>FREQuency:CW 500 MHz</code>	using explicit commands
<code>FREQuency 500 MHz</code>	using implied commands

Optional Parameters

Optional parameter names are enclosed in square brackets. If you do not send a value for an optional parameter, the instrument chooses a default value. The instrument's command reference documents the values used for optional parameters.

Command Syntax

Following the heading for each programming command entry is a syntax statement showing the proper syntax for the command. An example syntax statement is shown here:


```
POWer[:LEVel] MAXimum|MIN
```


Syntax statements read from left to right. In this example, the `[:LEVel]` portion of the statement immediately follows the `POWer` portion of the statement with no separating space. A separating space is legal only between the command and its argument. In this example, the portion following the `[:LEVel]` portion of the statement is the argument. Additional conventions used in the syntax statements are defined as follows:

- Italics are used to symbolize a program code parameter or query response.
- ::= means “is defined as.”
- | (vertical bar) indicates a choice of one element from a list. For example, `<A>|` indicates `<A>` or `` but not both.
- {} (braces or curly brackets) indicate that the enclosed items may be included zero or more times.
- [] (square brackets) indicate that the enclosed items are optional.
- Upper-case lettering indicates that the upper-case portion of the command is the minimum required for the command. For example, in the command `FREQuency`, `FREQ` is the minimum requirement.
- Lower-case lettering indicates that the lower-case portion of the command is optional; it can either be included with the upper-case portion of the command or omitted. For example, in the command `FREQuency`, either `FREQ`, or `FREQUENCY` is correct.
- ? after a subsystem command indicates that the command is a query.


SCPI Command Tree

This command tree illustrates every valid SCPI command for Option H98. Values in bold type represent defaults. For information regarding SCPI common terms, queries, implied commands, command strings, and command syntax, see [“Getting Started with SCPI”](#) on page 5-2.

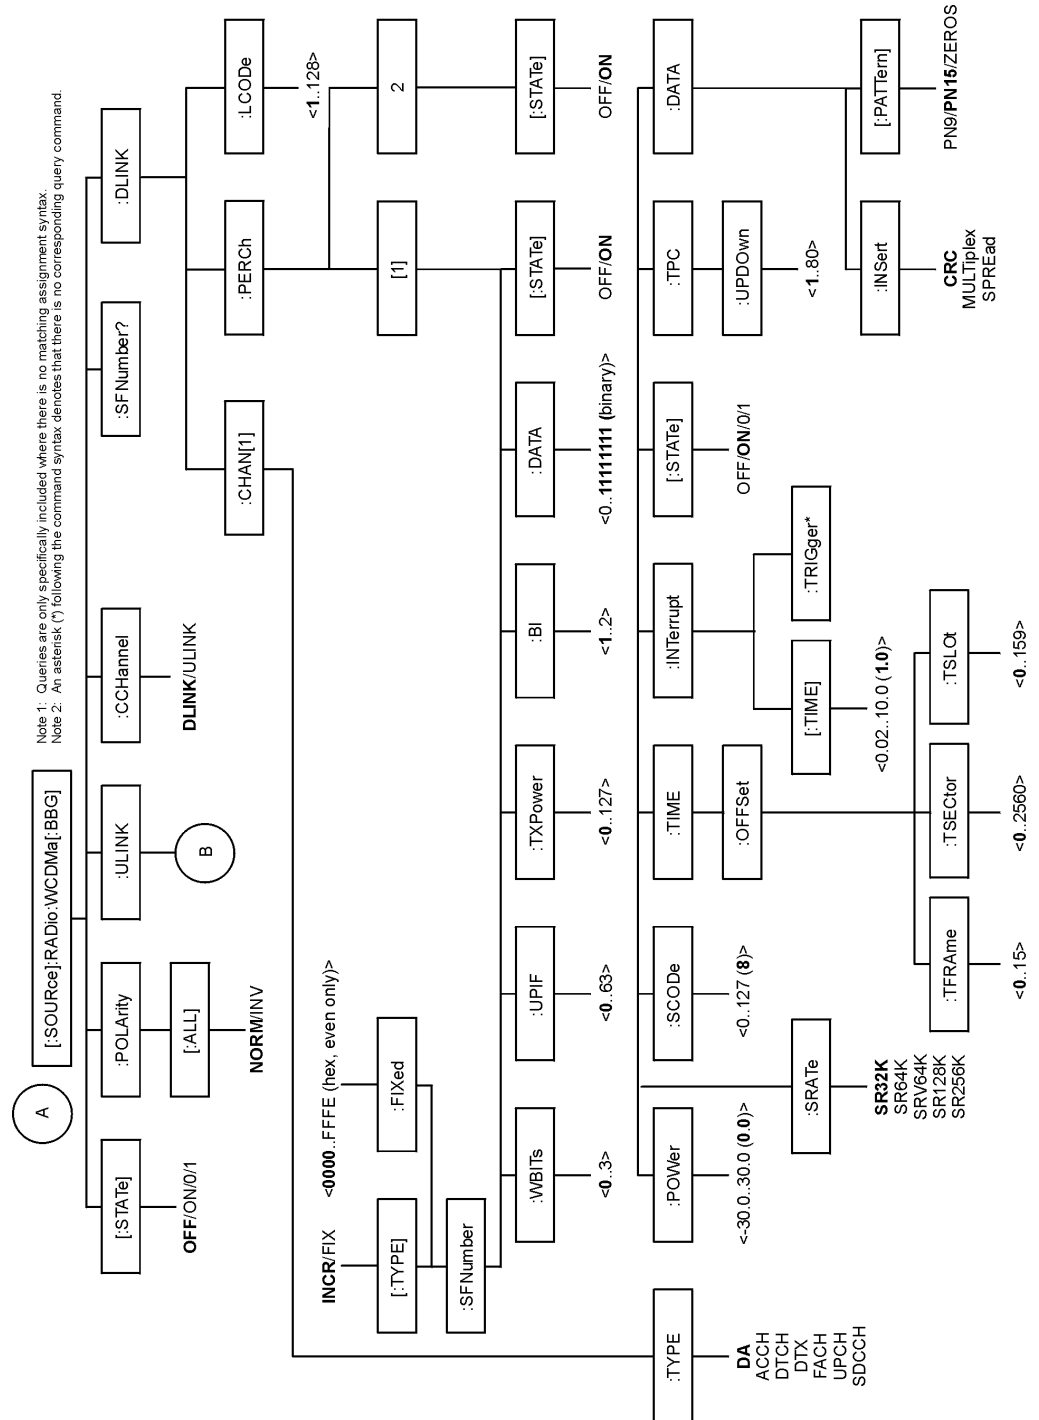


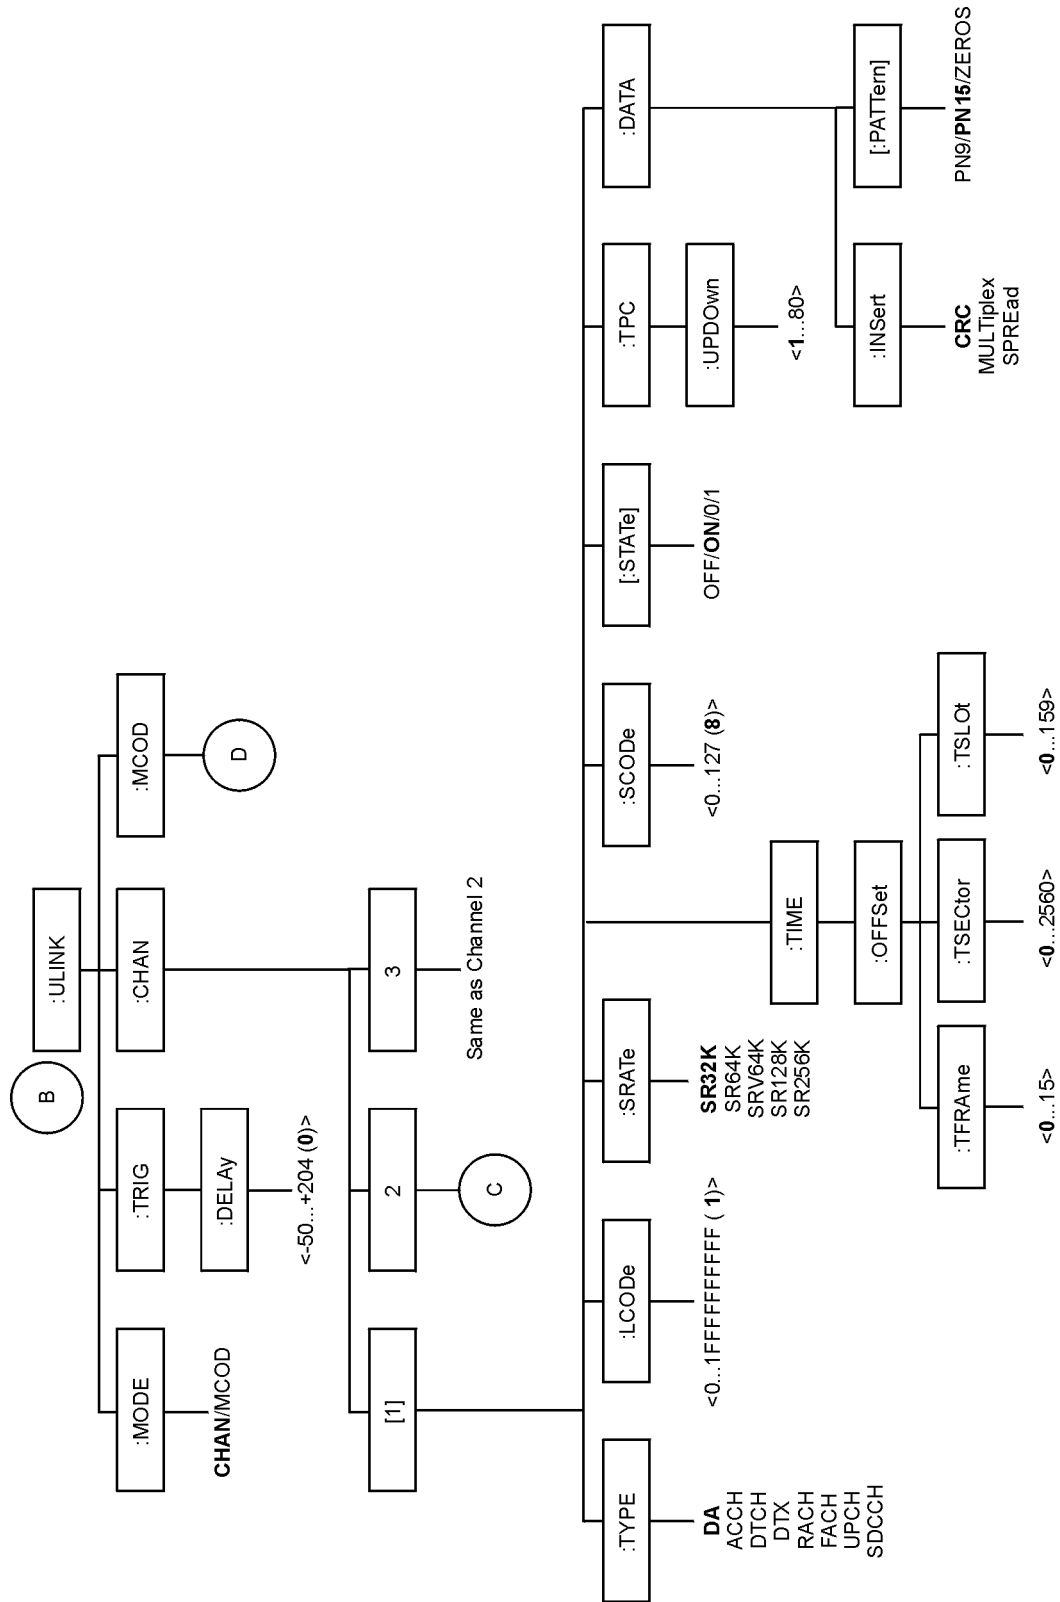


hk734b

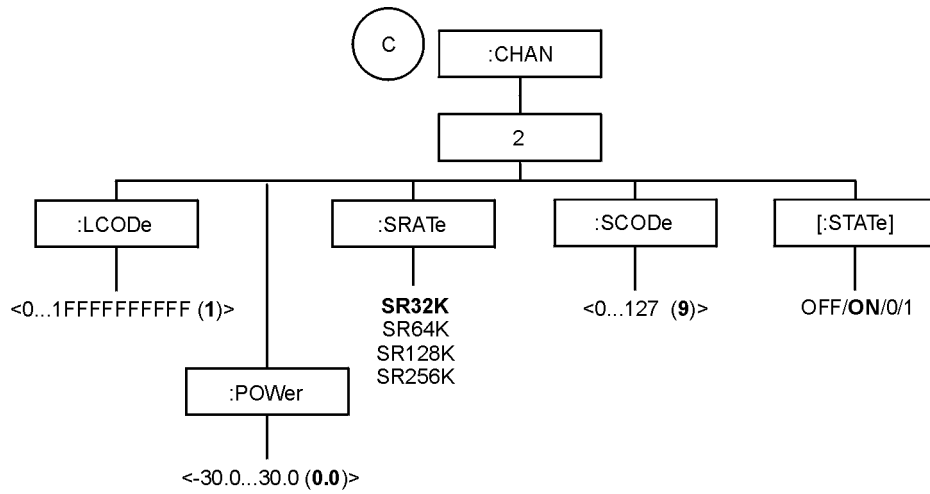

hk735b

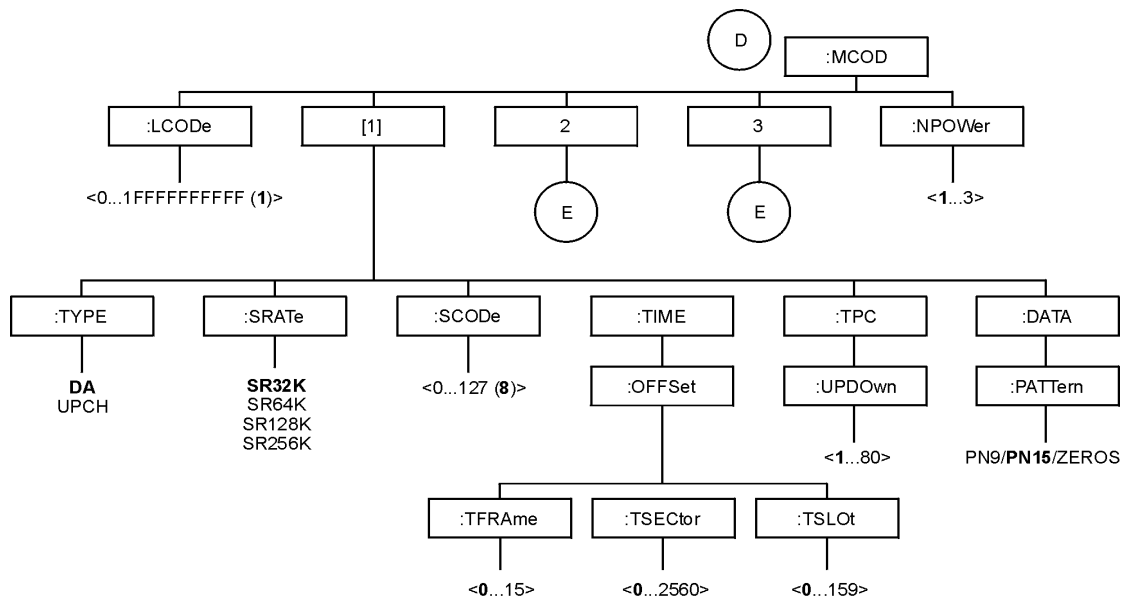

hk736b

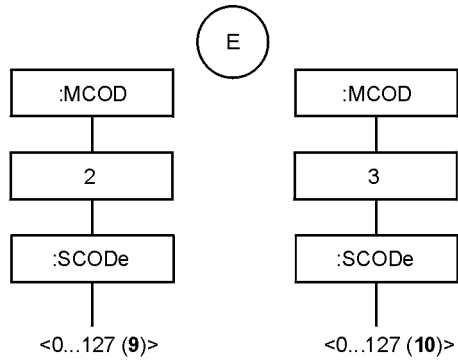

hk737b

Wideband CDMA Subsystem SCPI Command Reference

The Wideband CDMA subsystem SCPI commands are used to set the controls and parameters associated with the third generation mobile communications standard via a remote controller (Option H98 required). Their associated command queries are used to query the signal generator which, in turn, transmits the queried data back to the controller. These commands and command queries are for use only with Option H98 signal generators.

BCCH Type

```
[ :SOURCE]:RADIO:WCDMA[:BBG]:DLINK:PERCh[1]:BCCH[:TYPE] 1|2
[:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:PERCh[1]:BCCH[:TYPE]?
```

Execute this command to set the downlink channel BCCH type.

Choices: 1 or 2

Status after *RST: 1

Channel Number

```
[ :SOURCE]:RADIO:WCDMA[:BBG]:DLINK:CHANnel[1]
[:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:CHANnel?

[:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:CHANnel[1]|2|3
[:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:CHANnel?
```

Execute this command to set the downlink/uplink channel number.

Downlink Choices: 1

Uplink Choices: 1, 2, or 3

Status after *RST: 1

Channel Operating State

```
[ :SOURCE]:RADIO:WCDMA[:BBG]:DLINK:CHANnel[1][:STATE] ON|OFF|1|0
[:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:CHANnel[1][:STATE]?

[:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:CHANnel[1]|2|3[:STATE] ON|OFF|1|0
[:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:CHANnel[1]|2|3[:STATE]?
```

Execute this command to toggle the operating state of the different channels. Note that channels cannot be turned off when operating in uplink multicode mode.

Downlink Choices: ON (1) or OFF (0) for channel 1

Uplink Choices: ON (1) or OFF (0) for channels 1, 2, or 3

Status after *RST: On

Channel Type

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:TYPE  
DA | ACCH | DTCH | DTX | FACH | SDCCH | UPCH
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:TYPE?
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:TYPE  
DA | ACCH | DTCH | DTX | RACH | SDCCH | UPCH
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:TYPE?
```

Execute this command to select the channel type.

Downlink Channel Types

The following downlink channel types are assigned by appending the `[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TYPE` command with one of the following variables:

ACCH	Sets the downlink channel type to an Associated Control Channel (ACCH).
DA	Sets the downlink channel type to a Dedicated Traffic Channel plus Associated Control Channel (DTCH+ACCH).
DTCH	Sets the downlink channel type to a Dedicated Traffic Channel (DTCH).
DTX	Sets the downlink channel type to a Discontinuous Transmission Channel (DTX).
FACH	Sets the downlink channel type to a Forward Access Channel Long (FACH-L).
SDCCH	Sets the downlink channel type to a Stand-Alone Dedicated Control Channel (SDCCH).
UPCH	Sets the downlink channel type to a User Packet Traffic Channel (UPCH).

Status after *RST: DTCH+ACCH

Uplink Channel Types

In uplink mode, channel type for channels 2 and 3 is set by channel 1, but each channel can be turned off independently via its own state command.

The following uplink channel types are assigned by appending the `[:SOURCE] :RADIO :WCDMA [:BBG] :ULINK :CHANNEL [1] :TYPE` command with one of the following variables:

ACCH	Sets the uplink channel type to an Associated Control Channel (ACCH).
DA	Sets the uplink channel type to a Dedicated Traffic Channel plus Associated Control Channel (DTCH+ACCH).
DTCH	Sets the uplink channel type to a Dedicated Traffic Channel (DTCH).
DTX	Sets the uplink channel type to a Discontinuous Transmission Channel (DTX).
RACH	Sets the uplink channel type to a Random Access Channel Long (RACH-L).
SDCCH	Sets the uplink channel type to a Stand-Alone Dedicated Control Channel (SDCCH).
UPCH	Sets the uplink channel type to a User Packet Traffic Channel (UPCH).

Status after *RST: DTCH+ACCH

Channel Type versus Symbol Rate

Symbol rate is coupled to channel type. [Table 5-1](#) shows *actual* symbol rates set as a function of channel type and *selected* symbol rate.

Illegal combinations are not selectable from the front panel; assignments via remote commands default as shown in [Table 5-1](#).

Table 5-1 Actual Symbol Rate as a Function of Channel Type versus Selected Symbol Rate

Channel Type	Selected Symbol Rate (in ksps)				
	32	64	64 voice	128	256
DTCH+ACCH	32	64	64 voice	128	256
ACCH	32	64	64	128	256
DTCH	32	64	64 voice	128	256
DTX	32	64	64	128	256
FACH	64	64	64	64	64
RACH	64	64	64	64	64
SDCCH	32	32	32	32	32
UPCH	32	64	64	128	256

Data Insertion

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:INSert CRC|MULTiplex|SPREAd  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:INSert?
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:INSert CRC|MULTiplex|SPREAd  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]:INSert?
```

Execute this command to select how and where the data pattern is inserted into channel 1. The three choices are:

CRC	Appends the selected data pattern to the back of the CRC. This combination is then convolved, interleaved, and segmented into timeslots.
MULTiplex	Segments the selected data pattern directly into timeslots with Pilot, TPC symbols and CRC, but without convolution or interleaving. Filler bits of 0's are inserted in place of the bits normally produced by convolutional coding.
SPREAd	Directly spreads the selected data pattern without segmentation.

Status after *RST: CRC

NOTE Data insertion is not selectable for uplink channels 2 and 3.

Data Pattern

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:PERCh[ 1 ]:DATA:PATtern <value>  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:PERCh[ 1 ]:DATA:PATtern?
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:DATA:PATtern <value>  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:DATA:PATtern?
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]| 2| 3:DATA[ :PATtern ]  
PN9|PN15|ZEROS  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:CHANnel[ 1 ]| 2| 3:DATA[ :PATtern ]?
```

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:MCOD[ 1 ]:DATA[ :PATtern ] PN9|PN15|ZEROS  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:MCOD[ 1 ]:DATA[ :PATtern ]?
```

Execute this command to set the transmitted data pattern.

Downlink Perch1 Data Patterns

Perch1, BCCH data, downlink data patterns are assigned by appending the [:SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:DATA:PATtern command with any binary value from 00000000 to 11111111. The eight bit pattern is repeated thirteen times for a total of 104 bits.

Status after *RST: 11111111

Downlink Channel 1 Data Patterns

The following downlink data patterns are assigned by appending the `[:SOURCE] :RADIo :WCDMa [:BBG] :DLINK :CHANnel [1] :DATA :PATTeRn` command with one of the following variables:

- PN9 Sets the downlink channel 1 data pattern to a 9-bit ITU pseudo-random bit pattern.
- PN15 Sets the downlink channel 1 data pattern to a 15-bit ITU pseudo-random bit pattern.
- ZEROS Sets the downlink channel 1 data pattern to a bit stream of continuous 0's.

Status after *RST: PN9

Uplink Channel 1 Data Patterns

The following uplink channel 1 data patterns are assigned by appending the `[:SOURCE] :RADIo :WCDMa [:BBG] :ULINK :CHANnel [1] :DATA :PATTeRn` command with one of the following variables:

- PN9 Sets the uplink channel 1 data pattern to a 9-bit ITU pseudo-random bit pattern.
- PN15 Sets the uplink channel 1 data pattern to a 15-bit ITU pseudo-random bit pattern.
- ZEROS Sets the uplink channel 1 data pattern to a bit stream of continuous 0's.

Status after *RST: PN9

Uplink Multicode Data Patterns

The following uplink multicode data patterns are assigned by appending the `[:SOURCE] :RADIo :WCDMa [:BBG] :ULINK :MCOd [1] :DATA :PATTeRn` command with one of the following variables:

- PN9 Sets the uplink multicode data pattern to a 9-bit ITU pseudo-random bit pattern.
- PN15 Sets the uplink multicode data pattern to a 15-bit ITU pseudo-random bit pattern.
- ZEROS Sets the uplink multicode data pattern to a bit stream of continuous 0's.

Status after *RST: PN9

Downlink Channel Power

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:POWER <value>  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:POWER?
```

Execute this command to set the downlink channel's power relative to the power of the Perch1 and Perch2 channels.

Range: ± 30 dB of Perch1 and Perch2 power setting

Status after *RST: 0.00 dB

Downlink Long Code

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:LCODE <value>  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:LCODE?
```

Execute this command to assign a specific long code to the Perch channels and the dedicated traffic channel when the signal generator is in downlink mode.

Range: 1 to 128

Status after *RST: 1

Interrupt Trigger

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:INTerrupt:TRIGger
```

Execute this command to interrupt downlink channel 1. Channel 1 is interrupted for the duration specified by the interrupt value. Executing this command is equivalent to turning the channels off for the duration of the interrupt value and then back on. This command may only be executed while the signal generator is in downlink mode.

Interrupt Time

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:INTerrupt[:TIME] <value>  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:CHANnel[ 1 ]:INTerrupt[:TIME]?
```

Execute this command to change the time duration that the Interrupt Trigger will interrupt downlink channel 1. This command may only be executed while the signal generator is in downlink mode.

Range: 0.020 to 10.00 seconds, in 20 millisecond steps

Status after *RST: 1.000 second

Multicode Type

```
[ :SOURce ] : RADio : WCDMa [ :BBG ] : ULINK : MCOd [ 1 ] : TYPE DA | UPCH
[ :SOURce ] : RADio : WCDMa [ :BBG ] : ULINK : MCOd [ 1 ] : TYPE ?
```

Execute this command to select the multicode type. The following multicode types are assigned by appending the `[:SOURce] : RADio : WCDMa [:BBG] : ULINK : MCOd [1] : TYPE` command with one of the following variables:

DA Sets the multicode type to a Dedicated Traffic Channel plus Associated Control Channel (DTCH+ACCH).

UPCH Sets the multicode type to a User Packet Traffic Channel (UPCH).

Status after *RST: DTCH+ACCH

Perch1 Operating State


```
[ :SOURce ] : RADio : WCDMa [ :BBG ] : DLINK : PERCh [ 1 ] [ :STATe ] ON | OFF | 1 | 0
[ :SOURce ] : RADio : WCDMa [ :BBG ] : DLINK : PERCh [ 1 ] [ :STATe ] ?
```

Execute this command to toggle the operating state of the Perch1 logical channel for synchronization. The Perch1 channel can be enabled alone, with any combination of the Perch2 channel and channel 1, or it can be turned off. A short code of C8(0) is automatically assigned to the Perch1 channel. The W-CDMA mode must be activated in order for this signal to be generated.

Choices: ON (1) or OFF (0)

Status after *RST: On

Figure 5-1 Perch1(BCCH) Frame

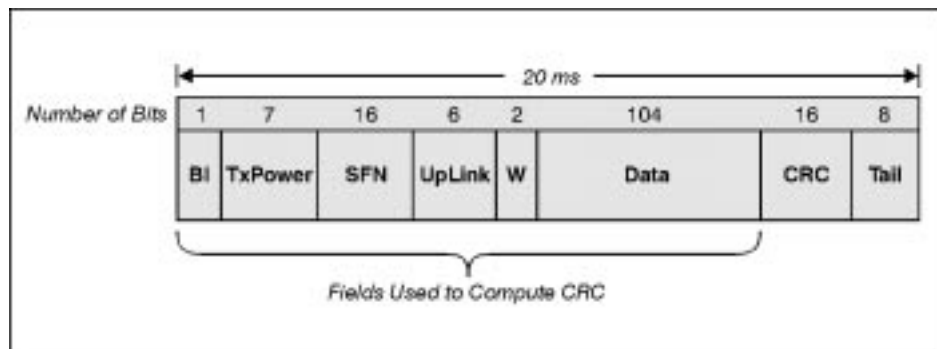

All fields in the Perch1 (BCCH) frame are selectable except:

- SFN in increment mode, which increments by 2 every 20 milliseconds,
- CRC, which is computed based on all fields plus the SFN value.

The Perch1 (BCCH) frame is made up of the following fields:

- BI: BCCH Identification Bit, selectable
- Tx Power: Transmit Power Indicator, selectable

- SFN: System Frame Number Fixed Value, selectable
- UpLink: Base Station Measured Uplink Interference Power Amount, selectable
- W: Message Confirmation Indicator Bits, selectable
- Data: BCCH Data Field, selectable
- CRC: Cyclic Redundancy Check
- Tail: 8 Bits; All Zeros.

Perch2 Operating State

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:PERCh2[ :STATe ] ON|OFF|1|0
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:PERCh2[ :STATe ]?
```

Execute this command to toggle the operating state of the Perch2 logical channel for synchronization. The Perch2 channel can be enabled alone, with any combination of the Perch1 channel and channel 1, or it can be turned off. The short code for Perch2 is set based on the long code masked set (LMS) of the selected long code. Refer to [Table 5-2](#) for the Perch2 short code. The W-CDMA mode must be activated in order for this signal to be generated.

Choices: ON (1) or OFF (0)

Status after *RST: On

Table 5-2 Long Code Range Versus the Perch2 Long-Code Masked Set (LMS)

Long Code Range	Perch2 Short Code LMS
1 to 32	2
33 to 64	3
65 to 96	4
97 to 128	5

Phase Polarity

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:POLarity[ :ALL ] NORMal|INVert
[ :SOURce ]:RADio:WCDMa[ :BBG ]:POLarity[ :ALL ]?
```

Execute this command to normalize or invert the internal Q signal, reversing the direction of phase rotation. Required by some radio standards, phase polarity inversion is also useful for lower sideband mixing applications. The following polarity types are assigned by appending the `[:SOURce]:RADio:WCDMa[:BBG]:POLarity[:ALL]` command with one of the following variables:

NORMal Sets the polarity to normal (no inversion of the Q signal).

INVert Sets the polarity to inverted. This inverts Q signal, reversing the direction of phase rotation.

Status after *RST: Normal

Pilot-TPC Power

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD:NPOWer <value>
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD:NPOWer?
```

Execute this command to set the pilot-TPC power level for the active multicode.

Range: 1 to 3

Status after *RST: 1

SFN Fixed Value

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:SFNumber[:TYPE]:FIX <value>
[:SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:SFNumber[:TYPE]:FIX?
```

Execute this command to select the value for a fixed System Frame Number. Only even numbered values are allowed.

Range: 0000 to 0FFE (hexadecimal, evens only)

Status after *RST: 0000 (hexadecimal)

Short Code (Channel 1)

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SCODE <value>
[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SCODE?

[:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:SCODE <value>
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:SCODE?
```

Execute this command to set the short code for channel 1. The range of values allowed depends on the symbol rate, as shown in [Table 5-3](#).

If the symbol rate is changed to a new value, and the short code value does not fall into the allowed short code range for the new symbol rate value, the short code value is automatically set to the maximum short code value that corresponds to the new rate.

Status after *RST: 1

Table 5-3 Symbol Rate Versus Channel 1 Short Code Range

Symbol Rate	Short Code Range
32 ksps	0 to 127
64 ksps	0 to 63
64 ksps voice	0 to 63
128 ksps	0 to 31
256 ksps	0 to 15

Short Code (Channels 2 and 3)

```
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :CHANnel2 | 3 :SCODE <value>  
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :CHANnel2 | 3 :SCODE?
```

Execute this command to set the short code for uplink channel 2 or 3. This short code value is used for channel 2 except in multicode during the Pilot and TPC symbols when the primary channel short code value is used.

The range of values for channel 2 and 3 short code are coupled to the channel 1 symbol rate, as previously described for Short Code (Channel 1). See [Table 5-3](#).

NOTE

Remote coupling between symbol rate and short code will fail to clamp channels 2 and 3 short code to the correct upper limit.

To insure proper coupling between channels 2 and 3 short code and symbol rate, always check the short code from the front-panel interface and manually reconfigure any illegal values using the appropriate softkeys.

Range: See [Table 5-3](#)

Status after *RST: 9

Symbol Rate

```
[ :SOURce ] :RADio :WCDMa [ :BBG ] :DLINK :CHANnel [ 1 ] :SRATE  
SR32K | SR64K | SRV64K | SR128K | SR256K  
[ :SOURce ] :RADio :WCDMa [ :BBG ] :DLINK :CHANnel [ 1 ] :SRATE?
```

```
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :CHANnel [ 1 ] :SRATE  
SR32K | SR64K | SRV64K | SR128K | SR256K  
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :CHANnel [ 1 ] :SRATE?
```

```
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :CHANnel2 | 3 :SRATE  
SR32K | SR64K | SR128K | SR256K  
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :CHANnel2 | 3 :SRATE?
```

```
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :MCOd [ 1 ] :SRATE SR32K | SR64K | SR128K | SR256K  
[ :SOURce ] :RADio :WCDMa [ :BBG ] :ULINK :MCOd [ 1 ] :SRATE?
```

Execute this command to set the symbol rate in kilosymbols per second (ksps). The symbol rate choices are 32 ksps, 64 ksps, 64 ksps voice (not available in multicode mode and uplink channels 2 and 3), 128 ksps, or 256 ksps.

Downlink Channel 1 Symbol Rates

The following downlink channel 1 symbol rates are assigned by appending the `[:SOURCE] :RADIo :WCDMa [:BBG] :DLINK :CHANnel [1] :SRATe` command with one of the following variables:

SR32K	Sets the downlink channel 1 symbol rate to 32 kilosymbols per second.
SR64K	Sets the downlink channel 1 symbol rate to 64 kilosymbols per second.
SRV64K	Sets the downlink channel 1 symbol rate to 64 kilosymbols per second voice.
SR128K	Sets the downlink channel 1 symbol rate to 128 kilosymbols per second.
SR256K	Sets the downlink channel 1 symbol rate to 256 kilosymbols per second.

Status after *RST: 32 ksps

Uplink Channel 1 Symbol Rates

The following uplink channel 1 symbol rates are assigned by appending the `[:SOURCE] :RADIo :WCDMa [:BBG] :ULINK :CHANnel [1] :SRATe` command with one of the following variables:

SR32K	Sets the uplink channel 1 symbol rate to 32 kilosymbols per second.
SR64K	Sets the uplink channel 1 symbol rate to 64 kilosymbols per second.
SRV64K	Sets the uplink channel 1 symbol rate to 64 kilosymbols per second voice.
SR128K	Sets the uplink channel 1 symbol rate to 128 kilosymbols per second.
SR256K	Sets the uplink channel 1 symbol rate to 256 kilosymbols per second.

Status after *RST: 32 ksps

Uplink Channel 2 and 3 Symbol Rates

The following uplink channel 2 and 3 symbol rates are assigned by appending the `[:SOURCE] :RADIo :WCDMa [:BBG] :ULINK :CHANnel 2 :SRATe` and `[:SOURCE] :RADIo :WCDMa [:BBG] :ULINK :CHANnel 3 :SRATe` commands with one of the following variables:

SR32K	Sets uplink channels 2 or 3 symbol rate to 32 kilosymbols per second.
SR64K	Sets uplink channels 2 or 3 symbol rate to 64 kilosymbols per second.
SR128K	Sets uplink channels 2 or 3 symbol rate to 128 kilosymbols per second.
SR256K	Sets uplink channels 2 or 3 symbol rate to 256 kilosymbols per second.

Status after *RST: 32 ksps

NOTE 64 ksps voice is not available for channels 2 or 3.

Multicode Symbol Rates

The following uplink multicode symbol rates are assigned by appending the [:SOURCE] :RADIO :WCDMA [:BBG] :ULINK :MCO D [1] :SRATE command with one of the following variables:

- SR32K Sets the multicode symbol rate to 32 kilosymbols per second.
- SR64K Sets the multicode symbol rate to 64 kilosymbols per second.
- SR128K Sets the multicode symbol rate to 128 kilosymbols per second.
- SR256K Sets the multicode symbol rate to 256 kilosymbols per second.

Status after *RST: 32 ksps

64 ksps voice is not available in multicode mode.

NOTE Symbol rate is coupled to channel type. [Table 5-4](#) shows *actual* symbol rates set as a function of channel type and *selected* symbol rate.

 Illegal assignments via remote (SCPI) commands default as shown in [Table 5-4](#).

Table 5-4 Actual Symbol Rate as a Function of Channel Type versus Selected Symbol Rate

Channel Type	Selected Symbol Rate (in ksps)				
	32	64	64 voice	128	256
DTCH+ACCH	32	64	64 voice	128	256
ACCH	32	64	64	128	256
DTCH	32	64	64 voice	128	256
DTX	32	64	64	128	256
FACH	64	64	64	64	64
RACH	64	64	64	64	64
SDCCH	32	32	32	32	32
UPCH	32	64	64	128	256

Table 5-5 provides some details about the parameters at each symbol rate.

Table 5-5 Parameters versus Symbol Rate

Parameter	Symbol Rate				
	32 ksps	64 ksps	64 ksps voice	128 ksps	256 ksps
Data Bits per Radio Frame	88 + 16 bit CRC	320 + 13 bit CRC	320 + 13 bit CRC	723 + 13 bit CRC	1446 + 2 by 13 bit CRC
Dummy Bits	48	1	1	8	8
Interleave Method	16 × 24	16 × 64	16 × 64	16 × 140	16 × 278
Bits per Radio Frame	384	1024	1024	2240	4448
Data Bits per Timeslot	24	64	64	140	278

System Frame Number Type

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:SFNumber[:TYPE] INCR|FIX
[:SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:SFNumber[:TYPE]?
```

Execute this command to setup the System Frame Number format.

The following System Frame Number types are assigned by appending the `[:SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:SFNumber[:TYPE]` command with one of the following variables:

- INCR Sets the System Frame Number type to increment.
- FIX Sets the System Frame Number type to fixed.

Status after *RST: Increment

TFrame Offset

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TIME:OFFSet:TFRame <value>  
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TIME:OFFSet:TFRame?  
  
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TIME:OFFSet:TFRame <value>  
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TIME:OFFSet:TFRame?  
  
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TIME:OFFSet:TFRame <value>  
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TIME:OFFSet:TFRame?
```

Execute this command to enter the downlink/uplink channel or uplink multicode time offset TFrame value.

TFrame in Downlink Mode

TFrame adjusts the number of timeslots that the channel 1 radio frame is offset from the Perch radio frame and long code phase zero. Total offset is equal to TFrame plus TSlot. For additional information, see [“Understanding Time Offsets”](#) on page 3-8.

Range: 0 to 15 timeslots

Status after *RST: 0 slots

TFrame in Uplink Mode

TFrame adjusts the number of timeslots channels 1, 2 and 3 radio frames are offset from long code phase 1280. Total offset is equal to TFrame plus TSlot. For additional information, see [“Understanding Time Offsets”](#) on page 3-8.

Range: 0 to 15 timeslots

Status after *RST: 0 slots

Transmission Direction, Uplink or Downlink

```
[ :SOURce]:RADio:WCDMa[:BBG]:CCHannel DLINK|ULINK  
[ :SOURce]:RADio:WCDMa[:BBG]:CCHannel?
```

Execute this command to toggle the transmission direction between downlink and uplink. When the signal generator is in the uplink mode, it must be frequency-locked to the base station receiver using the uplink trigger feature. Refer to [“System Configuration”](#) on page 3-16 and [“Rear-Panel Overview”](#) on page 3-11 for additional information.

Choices: DLINK or ULINK

Status after *RST: Downlink

Transmission Power Bits

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:TXPower <value>
[:SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:TXPower?
```

Execute this command to enter the Perch1 Tx power bit value.

Range: 0 to 127

Status after *RST: 0

Transmission Power Control

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:UPDown <value>
[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:UPDown?

[:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:UPDown <value>
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:UPDown?

[:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:UPDown <value>
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:UPDown?
```

Execute this command to set the number of 1 dB steps the transmit power control (TPC) field of the DTCH channel is first incremented and then decremented.

Range: 1 to 80

Status after *RST: 1 UP/DOWN

TSector Offset

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TIME:OFFSet:TSEctor <value>
[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TIME:OFFSet:TSEctor?

[:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TIME:OFFSet:TSEctor <value>
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TIME:OFFSet:TSEctor?

[:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TIME:OFFSet:TSEctor <value>
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TIME:OFFSet:TSEctor?
```

Execute this command to enter the downlink/uplink channel or uplink multicode time offset TSector value.

TSector in Downlink Mode

TSector adjusts the Perch radio frame timing and long code relative to the BTS reference System Frame Number Reset output at the DATA OUT rear-panel connector. This is accomplished by adjusting the offset (in number of chips) from the falling edge of the System Frame Number Reset to the first symbol of the Perch radio frame and long code phase zero, measured at the RF output. For additional information, see “[Understanding Time Offsets](#)” on page 3-8.

Range: 0 to 2560 chips

Status after *RST: 0 chips

TSector in Uplink Mode

TSector adjusts channels 1, 2 and 3 radio frame timing and long code phase relative to the BTS reference System Frame Number Reset input at the PATTERN TRIG IN rear-panel connector. This is accomplished by adjusting the offset (in number of chips) from the falling edge of the System Frame Number input to the long code phase 1280 of channels 1, 2 and 3 measured at the RF output. Total offset is equal to uplink trigger delay (propagation delay) plus TSector. For additional information, see “[Understanding Time Offsets](#)” on page 3-8.

Range: 0 to 2560 chips

Status after *RST: 0 chips

TSlot Offset

```
[ :SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TIME:OFFSet:TSlot <value>  
[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TIME:OFFSet:TSlot?
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TIME:OFFSet:TSlot <value>  
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TIME:OFFSet:TSlot?
```

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TIME:OFFSet:TSlot <value>  
[:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TIME:OFFSet:TSlot?
```

Execute this command to enter the downlink/uplink channel or uplink multicode time offset TSlot value.

TSlot in Downlink Mode

TSlot adjusts the number of symbols channel 1 radio frame is offset from the Perch radio frame and long code phase zero. Total offset is equal to TSlot plus TFrame. For additional information, see “[Understanding Time Offsets](#)” on page 3-8.

Range: see [Table 5-6](#)

Status after *RST: 0 symbols

TSlot in Uplink Mode

TSlot adjusts the number of symbols channels 1, 2 and 3 radio frames are offset from long code phase 1280. Total offset is equal to TSlot plus TFrame. For additional information, see “[Understanding Time Offsets](#)” on page 3-8.

Range: see [Table 5-6](#)

Status after *RST: 0 symbols

Table 5-6 Symbol Rate Versus TSlot Range

Symbol Rate	TSlot Values
32 ksps	0 to 19
64 ksps	0 to 39
64 ksps voice	0 to 39
128 ksps	0 to 79
256 ksps	0 to 159

Uplink Channel Power

```
[ :SOURCE]:RADIO:WCDMA[:BBG]:ULINK:CHANnel2|3:POWER <value>
[:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:CHANnel2|3:POWER?
```

Execute this command to set the power level of the uplink channel 2 and 3 relative to uplink channel 1.

Range: ± 30 dB of the uplink channel 1 power level

Status after *RST: 0.00 dB

Uplink Interference Bits

```
[ :SOURCE]:RADIO:WCDMA[:BBG]:DLINK:PERCh[1]:UPIF <value>
[:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:PERCh[1]:UPIF?
```

Execute this command to enter the Perch1 uplink interference bit value.

Range: 0 to 63

Status after *RST: 0

Uplink Long Code

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]|2|3:  
LCODE <value>  
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]|2|3:LCODE?  
  
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD:LCODE <value>  
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD:LCODE?
```

Execute this command to enter the long code for the uplink channels.

In multicode mode, all of the multicode use the same long code.

Long code number changes are not applied to the waveform until long code reset, 1280 chips before the end of System Frame Number $2^{16}-1$.

Long code reset only occurs when:

- the W-CDMA operating state is toggled,
- the transmission link direction is toggled,
- the internal System Frame Number transitions from SFN $2^{16}-1$ to SFN 0,
- or when externally triggered by a BTS reference SFN reset input (a low to high transition at the PATTERN TRIG IN rear-panel connector).

Other setup changes in uplink mode such as short code, data rate, channel type, or time offset will not affect the long code or long code phase.

Range: 0 to 1FFFFFFFFF (hexadecimal)

Status after *RST: 1

Uplink Mode, Channel or Multicode

```
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MODE CHANnel|MCOD  
[ :SOURce]:RADio:WCDMa[:BBG]:ULINK:MODE?
```

Execute this command to toggle the uplink operating mode between channel and multicode mode.

CHANnel Selects channel as the uplink transmission mode.

In channel mode, three uplink channels are available. Channel 1 includes the following selectable parameters:

- operating state,
- channel type,
- symbol rate,
- short code,
- data pattern,

- long code,
- data insertion,
- transmission power control,
- time offset adjustments (TSector, TFrame, TSlot),
- uplink trigger delay, and
- phase polarity.

Channels 2 and 3 use the same channel type, uplink trigger delay, time offset adjustments, and phase polarity as channel 1. Channels 2 and 3 include the following selectable parameters:

- operating state,
- symbol rate,
- power (relative to channel 1),
- data pattern, and
- long code.

MCOD

Selects multicode as the uplink transmission mode.

In multicode mode, three multicode channels are available. Multicode channel 1 includes the following selectable parameters:

- multicode type,
- symbol rate,
- short code,
- pilot-TPC power,
- data pattern,
- long code,
- transmission power control,
- time offset adjustments (TSector, TFrame, TSlot)
- uplink trigger delay, and
- phase polarity.

Multicode channels 2 and 3 use the same parameters as multicode channel 1 with the exception of their short codes, which are individually selectable.

Choices: CHANnel or MCOd

Status after *RST: Chan

Uplink Trigger Delay

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:TRIGger:DELAy <value>  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:ULINK:TRIGger:DELAy?
```

Execute this command to change the propagation delay timing between the trigger from the base station and the RF output of the signal generator. For additional information, see “[Understanding Time Offsets](#)” on page 3-8.

Range: -50 to 204 chips

Status after *RST: 0 chips

W Bits

Execute this command to set the value of the Perch1 W bits.

```
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:PERCh[ 1 ]:WBITs <value>  
[ :SOURce ]:RADio:WCDMa[ :BBG ]:DLINK:PERCh[ 1 ]:WBITs?
```

Range: 0 to 3

Status after *RST: 0

W-CDMA Operating State

```
[ :SOURce ]:RADio:WCDMa[ :BBG ][:STATE] ON|OFF|1|0  
[ :SOURce ]:RADio:WCDMa[ :BBG ][:STATE]?
```

Execute this command to enable Option H98 wideband CDMA functionality. Activating the feature sets up the internal hardware to generate the structure defined by the W-CDMA experimental system specification. A 10 ms radio frame is constructed for each dedicated traffic channel consisting of 16 timeslots which include pilot symbols, transmit power control bits, ACCH fields filled with zeroes, and data fields filled with selected data (zeros, PN9, or PN15). The WCDMA and I/Q annunciators appear on the display when the W-CDMA operating state is enabled.

In addition to the W-CDMA mode being enabled, the individual channels must be enabled before each channel is output. If none of these channel are enabled, the output is an unmodulated carrier.

Choices: ON (1) or OFF (0)

Status after *RST: Off

Softkey to SCPI Command Cross-Reference

This section lists the Option H98 softkeys and their corresponding SCPI commands and command queries. For a list of the standard signal generator hardkeys and softkeys, and their corresponding SCPI commands and command queries, refer to the programming guide.

Table 5-7 Wideband CDMA Softkeys and Corresponding SCPI Commands

Softkey	Corresponding SCPI Commands and Command Queries
32 ksps	<pre>[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SRATe SR32K [:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SRATe? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1] 2 3:SRATe SR32K [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1] 2 3:SRATe? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1] 2 3:SRATe SR32K [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1] 2 3:SRATe? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:SRATe SR32K [:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:SRATe?</pre>
64 ksps	<pre>[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SRATe SR64K [:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SRATe? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1] 2 3:SRATe SR64K [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1] 2 3:SRATe? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:SRATe SR64K [:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:SRATe?</pre>
64 ksps voice	<pre>[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SRATe SRV64K [:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SRATe? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:SRATe SRV64K [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:SRATe?</pre>
128 ksps	<pre>[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SRATe SR128K [:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SRATe? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1] 2 3:SRATe SR128K [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1] 2 3:SRATe? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:SRATe SR128K [:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:SRATe?</pre>
256 ksps	<pre>[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SRATe SR256K [:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SRATe? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1] 2 3:SRATe SR256K [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1] 2 3:SRATe? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:SRATe 256ksps [:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:SRATe?</pre>

Softkey	Corresponding SCPI Commands and Command Queries
ACCH	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TYPE ACCH [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TYPE? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE ACCH [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE?</pre>
BCCH Type	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:BCCH[:TYPE] 1 2 [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:BCCH[:TYPE]?</pre>
Channel #	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1] [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1] 2 3 [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel?</pre>
Channel State Off On	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1][:STATe] ON OFF 1 0 [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1][:STATe]? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1] 2 3[:STATe] ON OFF 1 0 [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1] 2 3?</pre>
Channel Type	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TYPE DA ACCH DTCH DTX FACH SDCCH UPCH [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TYPE? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE DA ACCH DTCH DTX RACH SDCCH UPCH [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE?</pre>
CRC	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:INSert CRC [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:INSert? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:INSert CRC [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:INSert?</pre>
Data Insertion	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:INSert CRC MULTiplex SPREAd [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:INSert? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:INSert CRC MULTiplex SPREAd [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:INSert?</pre>
Data Pattern	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:DATA:PATtern <value> [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:DATA:PATtern? [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:DATA:PATtern <value> [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:DATA:PATtern? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1] 2 3:DATA[:PATtern] PN9 PN15 ZEROs [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1] 2 3:DATA[:PATtern]? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:DATA[:PATtern] PN9 PN15 ZEROs [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:DATA[:PATtern]?</pre>
Down Long Code	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:LCODE <value> [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:LCODE?</pre>
DTCH	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TYPE DTCH [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TYPE? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE DTCH [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE?</pre>

Softkey	Corresponding SCPI Commands and Command Queries
DTCH+ACCH	[:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:CHANnel[1]:TYPE DA [:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:CHANnel[1]:TYPE? [:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:CHANnel[1]:TYPE DA [:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:CHANnel[1]:TYPE? [:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:MCOD[1]:TYPE DA [:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:MCOD[1]:TYPE?
DTX	[:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:CHANnel[1]:TYPE DTX [:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:CHANnel[1]:TYPE? [:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:CHANnel[1]:TYPE DTX [:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:CHANnel[1]:TYPE?
FACH	[:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:CHANnel[1]:TYPE FACH [:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:CHANnel[1]:TYPE?
Fixed	[:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:PERCh[1]:SFNumber[:TYPE] FIX [:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:PERCh[1]:SFNumber[:TYPE]?
Increment	[:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:PERCh[1]:SFNumber[:TYPE] INCR [:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:PERCh[1]:SFNumber[:TYPE]?
Interrupt Trigger	[:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:CHANnel[1]:INTerrupt:TRIGger
Interrupt Value	[:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:CHANnel[1]:INTerrupt[:TIME] <value> [:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:CHANnel[1]:INTerrupt[:TIME]?
Link Down Up	[:SOURCE]:RADIO:WCDMA[:BBG]:CCHannel DLINK ULINK [:SOURCE]:RADIO:WCDMA[:BBG]:CCHannel?
Long Code	[:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:CHANnel[1] 2 3:LCODE <value> [:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:CHANnel[1] 2 3:LCODE? [:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:MCOD:LCODE <value> [:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:MCOD:LCODE?
Multicode Type	[:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:MCOD[1]:TYPE DA UPCH [:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:MCOD[1]:TYPE?
Multiplex	[:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:CHANnel[1]:DATA:INsert MULTiplex [:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:CHANnel[1]:DATA:INsert? [:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:CHANnel[1]:DATA:INsert MULTiplex [:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:CHANnel[1]:DATA:INsert?
Perch1 Off On	[:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:PERCh[1][:STATE] ON OFF 1 0 [:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:PERCh[1][:STATE]?
Perch2 Off On	[:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:PERCh2[:STATE] ON OFF 1 0 [:SOURCE]:RADIO:WCDMA[:BBG]:DLINK:PERCh2[:STATE]?
Phase Polarity Normal Invert	[:SOURCE]:RADIO:WCDMA[:BBG]:POLarity[:ALL] NORMal INVert [:SOURCE]:RADIO:WCDMA[:BBG]:POLarity[:ALL]?
Pilot-TPC Value	[:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:MCOD:NPOWER <value> [:SOURCE]:RADIO:WCDMA[:BBG]:ULINK:MCOD:NPOWER?

Softkey	Corresponding SCPI Commands and Command Queries
PN9	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:PATtern PN9 [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:PATtern? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:PATtern PN9 [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:PATtern? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:PATtern PN9 [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:PATtern?</pre>
PN15	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:PATtern PN15 [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:PATtern? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:PATtern PN15 [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:PATtern? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:PATtern PN15 [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:PATtern?</pre>
Power	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:POWer <value> [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:POWer?</pre>
RACH	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE RACH [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE?</pre>
SDCCH	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TYPE SDCCH [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TYPE? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE SDCCH [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE?</pre>
SFN Fixed Value	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:SFNumber[:TYPE]:FIX <value> [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:SFNumber[:TYPE]:FIX?</pre>
Short Code (Channel 1)	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SCODE <value> [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SCODE? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:SCODE <value> [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:SCODE?</pre>
Short Code (Channels 2 and 3)	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel2 3:SCODE <value> [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel2 3:SCODE?</pre>
Spread	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:DATA:INsert SPREad [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:DATA:INsert? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:DATA:INsert SPREad [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:DATA:INsert?</pre>

Softkey	Corresponding SCPI Commands and Command Queries
Symbol Rate	<pre>[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SRATe SR32K SR64K SRV64K SR128K SR256K [:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:SRATe? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:SRATe SR32K SR64K SRV64K SR128K SR256K [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:SRATe? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel2 3:SRATe SR32K SR64K SR128K SR256K [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel2 3:SRATe? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:SRATe SR32K SR64K SR128K SR256K [:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:SRATe?</pre>
System Frame No.	<pre>[:SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:SFNumber[:TYPE] INCR FIX [:SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:SFNumber[:TYPE]?</pre>
TFrame	<pre>[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TIME:OFFSet:TFRame <value> [:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TIME:OFFSet:TFRame? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TIME:OFFSet:TFRame <value> [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TIME:OFFSet:TFRame? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TIME:OFFSet:TFRame <value> [:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TIME:OFFSet:TFRame?</pre>
Transmit Pwr Ctrl	<pre>[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:UPDown <value> [:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:UPDown? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:UPDown <value> [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:UPDown? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:UPDown <value> [:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:UPDown?</pre>
TSector	<pre>[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TIME:OFFSet:TSEctor <value> [:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TIME:OFFSet:TSEctor? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TIME:OFFSet:TSEctor <value> [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TIME:OFFSet:TSEctor? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TIME:OFFSet:TSEctor <value> [:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TIME:OFFSet:TSEctor?</pre>
TSlot	<pre>[:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TIME:OFFSet:TSlot <value> [:SOURce]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TIME:OFFSet:TSlot? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TIME:OFFSet:TSlot <value> [:SOURce]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TIME:OFFSet:TSlot? [:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TIME:OFFSet:TSlot <value> [:SOURce]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TIME:OFFSet:TSlot?</pre>
Tx Power Bits	<pre>[:SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:TXPower <value> [:SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:TXPower?</pre>
Ulink I/F Bits	<pre>[:SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:UPIF <value> [:SOURce]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:UPIF?</pre>

Softkey	Corresponding SCPI Commands and Command Queries
UPCH	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TYPE UPCH [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:TYPE? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE UPCH [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:TYPE? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TYPE UPCH [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:TYPE?</pre>
Uplink Mode Chan Multicode	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:ULINK:MODE CHANnel MCOD [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:MODE?</pre>
Uplink Power	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel2 3:POWer <value> [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel2 3:POWer?</pre>
Uplink Trig Delay	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:ULINK:TRIGger:DELAy <value> [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:TRIGger:DELAy?</pre>
W Bits	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:WBITs <value> [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:PERCh[1]:WBITs?</pre>
W-CDMA Off On	<pre>[:SOURCE]:RADio:WCDMa[:BBG][:STATe] ON OFF 1 0 [:SOURCE]:RADio:WCDMa[:BBG][:STATe]?</pre>
ZEROS	<pre>[:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:PATtern ZEROs [:SOURCE]:RADio:WCDMa[:BBG]:DLINK:CHANnel[1]:PATtern? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:PATtern ZEROs [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:CHANnel[1]:PATtern? [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:PATtern ZEROs [:SOURCE]:RADio:WCDMa[:BBG]:ULINK:MCOD[1]:PATtern?</pre>

Example Program: Creating a Wideband CDMA Waveform

The following example program remotely performs the same tasks as “[Front-Panel Operation](#)” on page 3-4.

This program creates a wideband CDMA waveform, modulated at a carrier frequency of 2.17 GHz, at a power level of –10 dBm. The Perch2 channel is disabled, the downlink long code is set to 50, the channel 1 short code is set to 15, and the channel 1 type is set to a Dedicated Traffic Channel. After the setup is complete, the output is activated and the signal is present at the signal generator’s RF output.

After executing the program, press **Mode, Wideband CDMA** to review the waveform parameters.

```

10  !*****
20  ! NAME: WCDMA Program
30  !
40  ! DESCRIPTION: The following HPBASIC program remotely performs the same
50  !               tasks as the procedure titled, "Front-Panel Operation" in
60  !               Chapter 3 of this guide. A WCDMA waveform is created and
70  !               and modulated at a carrier frequency of 2.17 GHz, at a -10 dBm
80  !               power level.
90  !
100 ! CLEAR and RESET the controller, input the following commands and RUN the
110 ! program.
120 !
130 !*****
140 !
150 Sig_gen=719
160 LOCAL Sig_gen
170 CLEAR Sig_gen
180 CLEAR SCREEN
190 OUTPUT Sig_gen;"*RST"
200 OUTPUT Sig_gen;"*CLS"
210 !*****
220 OUTPUT Sig_gen;"FREQ 2.17 GHZ"
230 OUTPUT Sig_gen;"POW -10 DBM"
240 OUTPUT Sig_gen;"SOUR:RAD:WCDM:BBG:DLINK:PERC2 OFF"
250 OUTPUT Sig_gen;"SOUR:RAD:WCDM:BBG:DLINK:LCOD 50"
260 OUTPUT Sig_gen;"SOUR:RAD:WCDM:BBG:DLINK:CHAN1:SCOD 15"
270 OUTPUT Sig_gen;"SOUR:RAD:WCDM:BBG:DLINK:CHAN1:TYPE DTCH"
280 OUTPUT Sig_gen;"SOUR:RAD:WCDM:BBG:STAT ON"
290 !*****
300 OUTPUT Sig_gen;"OUTP ON"
310 !*****
320 LOCAL Sig_gen
330 WAIT 5
340 PRINT
350 PRINT "... the signal generator waveform setup is now complete. Press [Mode],"
360 PRINT "[Wideband CDMA] to review the waveform parameters."
370 END

```

Program Comments

10 to 140:	Title and program description
150:	Assigns the signal generator's HP-IB address to a variable.
160 to 180:	Sets the signal generator to LOCAL mode, and clear the controller's display.
190:	Sets the signal generator to a defined state for programming.
200:	Clears the signal generator's Status Byte Register.
210:	Program border
220:	Sets the carrier frequency to 2.17 GHz.
230:	Sets the carrier power level to -10 dBm.
240:	Turns off Perch2 channel.
250:	Selects 50 as the downlink long code.
260:	Selects 15 as the downlink channel 1 short code.
270:	Selects a Dedicated Traffic Channel as the downlink channel 1 channel type.
280:	Activates the wideband CDMA mode.
290:	Program border
300:	Turns on the signal generator's RF output.
310:	Program border
320:	Returns the signal generator to LOCAL mode.
330:	Waits five seconds.
340 to 360:	Prints a message to the controller's display.
370:	Ends the program.

6 Service

The Option H98 can be serviced using the calibration guide that is part of the standard HP ESG-D Series manual set, and the optional service guide. This chapter provides supporting documentation for servicing only the assemblies unique to Option H98 (the A7 Baseband Generator Board and the A8 Data Generator Board). For information on servicing other assemblies, refer to the calibration guide, and the optional service guide.

Replaceable Parts

For Option H98, the following parts change from the standard instrument:

- A7 Baseband Generator Board part number changes to E4400-60070.
- A8 Data Generator Board part number changes to E4400-60154.

Post Repair Procedures

NOTE If an assembly other than the A7 Baseband Generator Board or the A8 Data Generator Board is repaired or replaced, refer to the *HP ESG and HP ESG-D Series Signal Generators Service Guide* for the adjustments and performance tests required for that assembly.

Adjustments

If the A7 Baseband Generator Board is repaired or replaced, perform the I/Q Gain/Offset Quadrature adjustment.

No adjustments are required after the A8 Data Generator Board is repaired or replaced.

Performance Tests

NOTE Refer to the *HP ESG and HP ESG-D Series Signal Generators Calibration Guide* for information on using the service software.

Option H98 Only

If either the A7 Baseband Generator Board *or* the A8 Data Generator Board is repaired or replaced, the following three automated performance tests are required:


- Nonharmonics
- Digital Mod: Internal I/Q Quality
- Relative Power Level Accuracy

With Option H99

If the instrument also has Option H99, and the A7 Baseband Generator Board is repaired or replaced, perform the following *additional* automated performance test, located in the *HP ESG-D Series Option H99 Signal Generators Manual Supplement*:

- WCDMA ACP (H99)

**A8 DATA GENERATOR BLOCK DIAGRAM
(OPTION H98)**

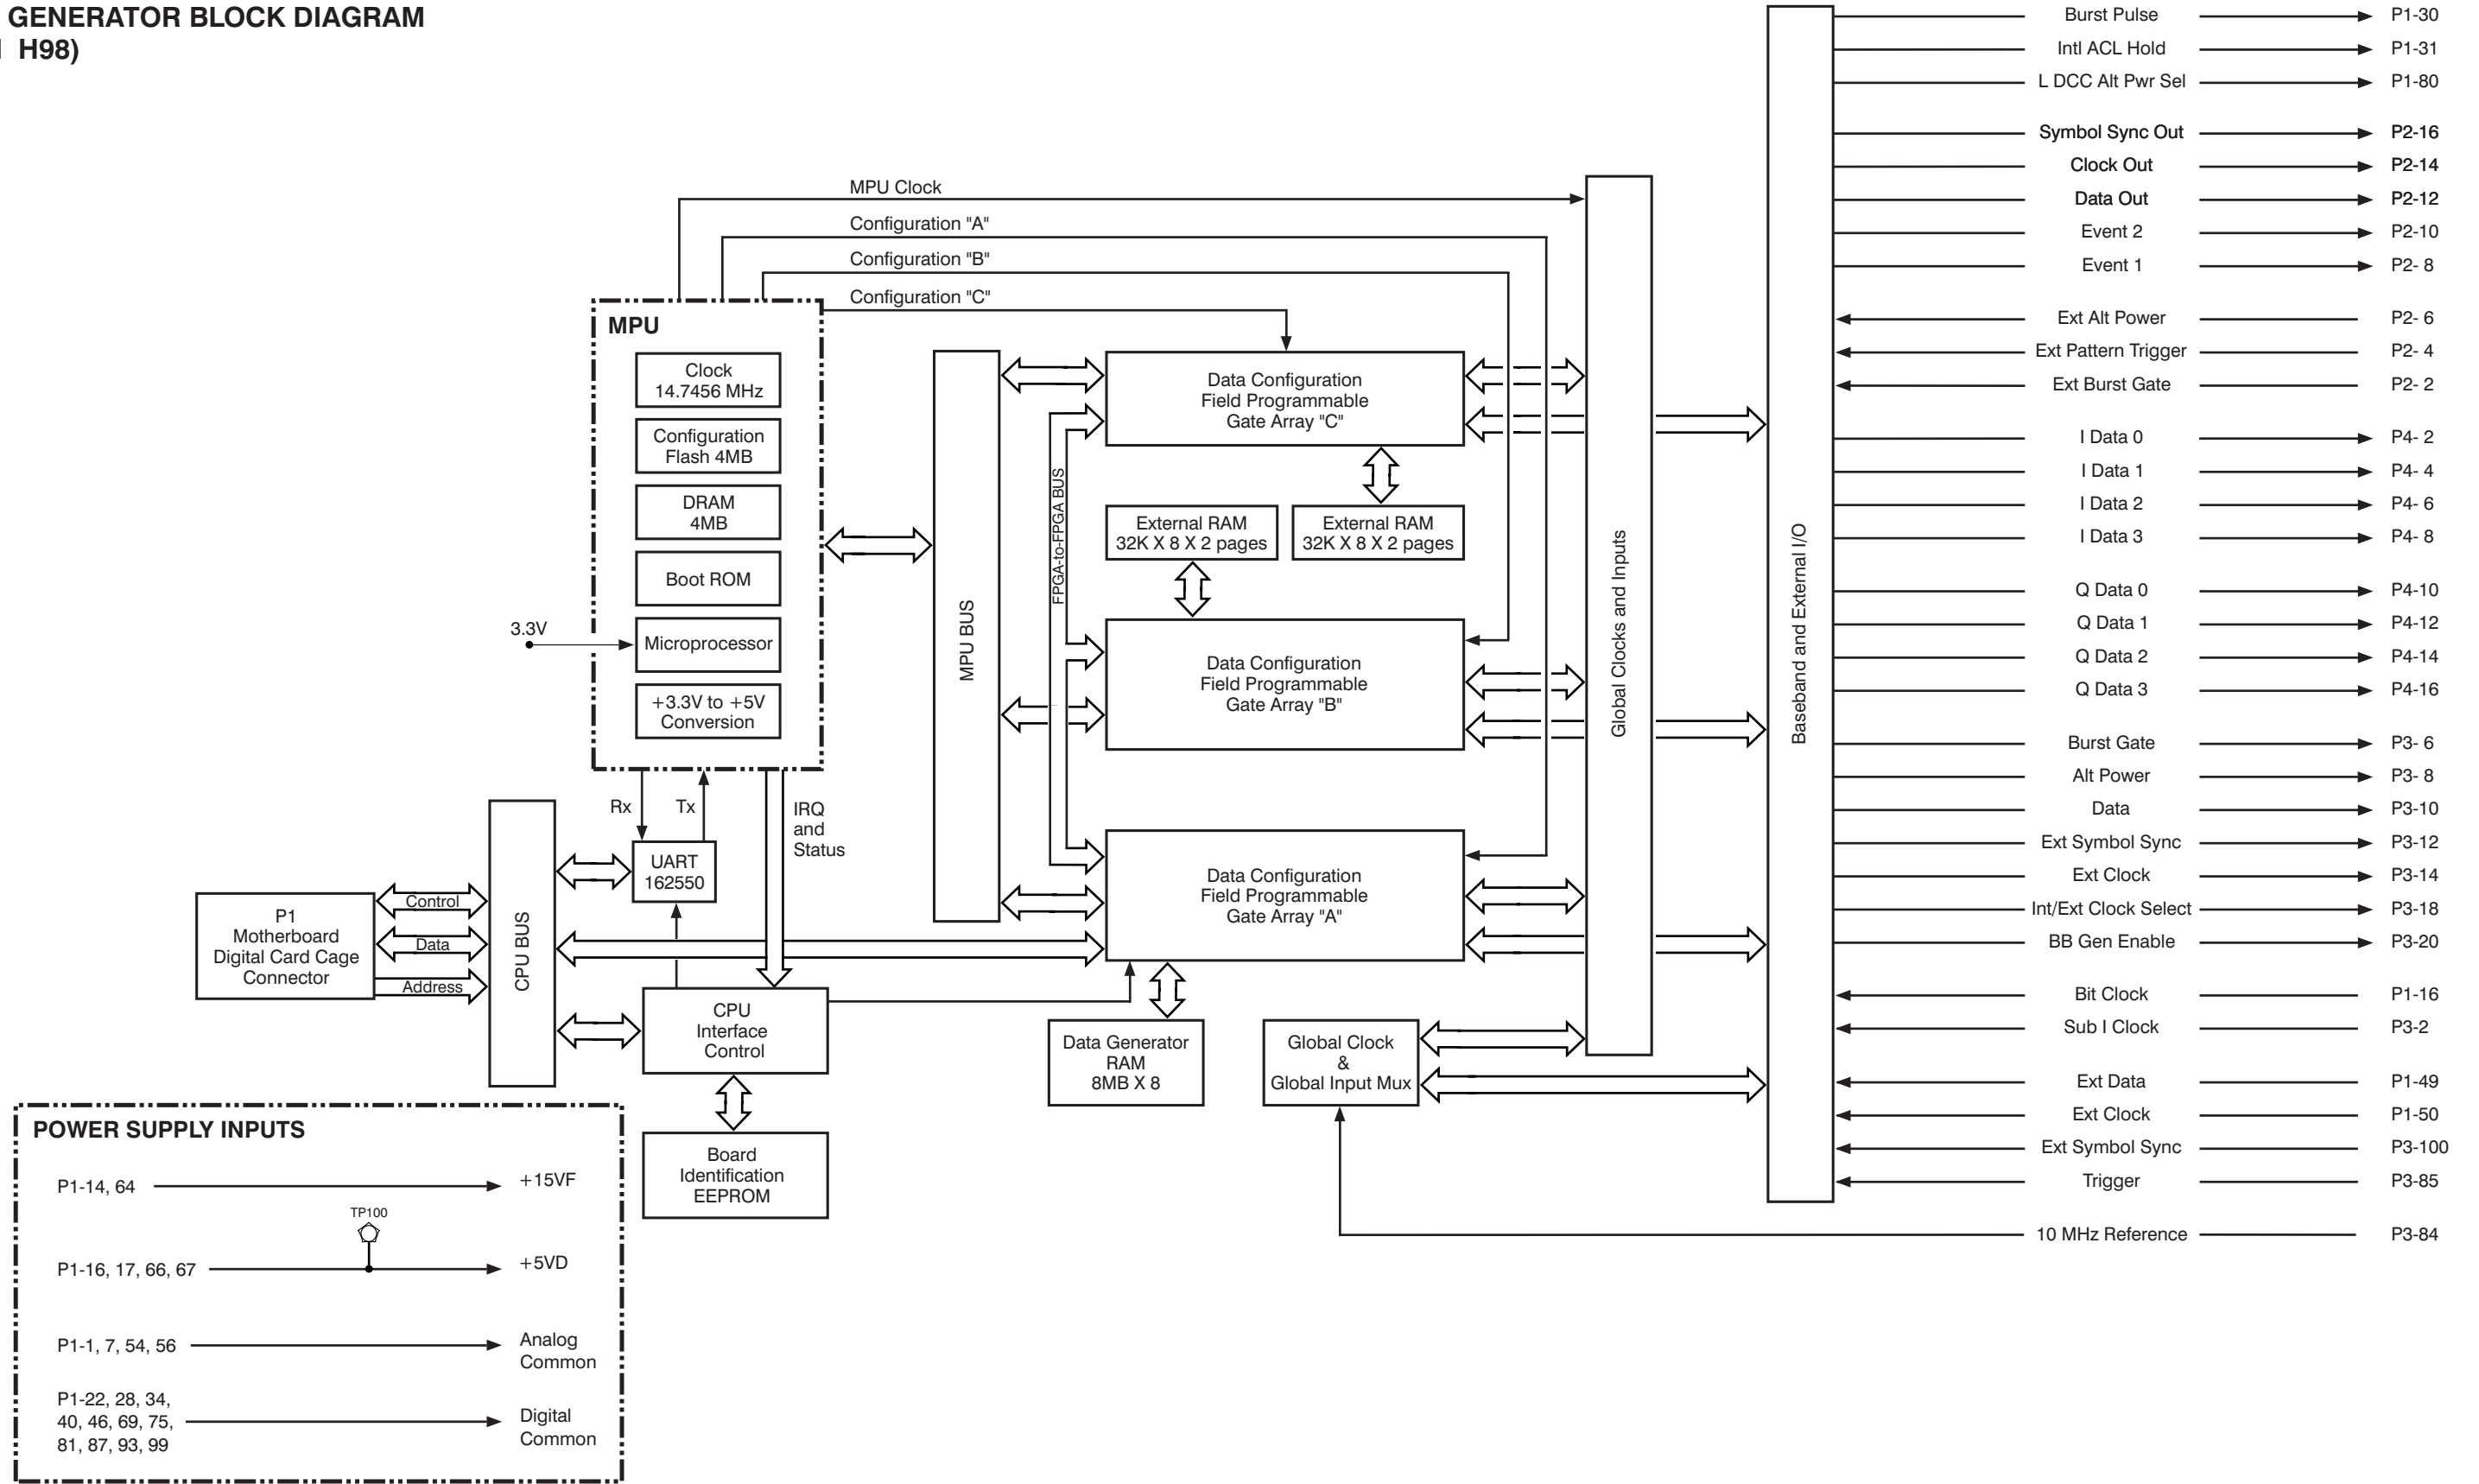

Glossary

ACCH Associated Control Channel.

Access Channel A reverse channel that a mobile station uses to communicate with a base station for short signaling message exchanges (such as call originations, responses to pages, and registrations).

ACPR Adjacent Channel Power Ratio.

Base Station A fixed station used for communicating with mobile stations.

bps Bits per second.

Chip Informal term used to refer to either a binary element of a spreading sequence, or the time interval that it occupies, or $1/1.4.096 \text{ MHz} = 244.1 \text{ ns}$, or, at the speed of light, a distance of $c/f = (0.3 \text{ m/ns})/1.2288 \text{ MHz} = 244.1 \text{ meters}$.

Code Division Multiple Access (CDMA) A technique for spread-spectrum multiple access digital communication that creates channels through the use of noise-like carriers.

Convolutional Code An error-correcting code that is generated by finite-field division of the data sequence, regarded as a polynomial over a finite field, by a generator polynomial. Such a division resembles a discrete convolution.

CRC See *“Cyclic Redundancy Code (CRC)”*

Cyclic Redundancy Code (CRC) A class of linear error-detecting codes that generate parity check bits as the remainder of a polynomial division of the data, regarded as a polynomial, by a generator polynomial.

Data Insert The point of data insertion for WCDMA coding.

Data Pattern The type of data encoded on a WCDMA channel.

DTCH Dedicated Traffic Channel. A point-to-point, bidirectional channel that transmits user information.

DTX Discontinuous Transmission.

Encoder Tail Bits Fixed value bits appended to a block of data in order to flush a convolutional encoder so that it is left in a known state. Leaving the encoder in a known state aids the decoding.

EVM Error Vector Magnitude.

FACH Forward Access Channel. A forward link transport channel used to transmit control information from a base station to a mobile station when the system knows the location cell of the mobile station. May also carry short user packets.

Forward Channel A channel transmitted from a base station to mobile stations. The Forward Channel comprises one or more code channels that are transmitted on a WCDMA frequency assignment using a particular long code.

Interleaving The process of reordering code symbols for transmission. Interleaving decorrelates channel fading between adjacent symbols as they enter the decoder, thereby improving the effectiveness of the code.

Interrupt Time The duration of time during which the data channel is suppressed.

ksps Kilosymbols per second (10^3 symbols per second).

Long Code A maximal length sequence with period $2^{41}-1$. A unique phase of the long code identifies each mobile station.

Perch Wideband CDMA forward link channel used to establish synchronization with mobile units.

PN Sequence Pseudorandom sequence. A periodic binary sequence approximating, in some sense, a Bernoulli (coin tossing) process with outcomes that are equally probable.

Reverse Channel The channel from a mobile station to a base station. From the base station's perspective, the Reverse Channel is the sum of all mobile station transmissions on a frequency assignment.

SDCCH Stand-Alone Dedicated Control Channel.

SFN System Frame Number.

SFN RST System Frame Number Reset. For more information, see “[12. PATTERN TRIG IN Connector \(System Frame Number Reset In\)](#)” on page 3-13.

Short Code Channelization code for a WCDMA channel. One of a set of orthogonal waveforms used as orthogonal cover to create independent transmission channels.

TPC Transmission Power Control. For more information, see “[17. EVENT 2 Connector \(Transmission Power Control Out\)](#)” on page 3-15.

UPCH User Packet Channel.

WCDMA Wideband Code Division Multiple Access. A technique for spread-spectrum multiple access digital communication that creates channels through the use of noise-like carriers.

Numerics

- 128 ksps softkey, 4-3
- 256 ksps softkey, 4-4
- 32 ksps softkey, 4-2
- 64 ksps softkey, 4-3
- 64 ksps voice softkey, 4-3
- 8 kHz out connector, 3-12

A

- A7 baseband generator board
 - block diagram, 6-3
 - part number, 6-2
- A8 data generator board
 - block diagram, 6-5
 - part number, 6-2
- access channel definition, gloss-2
- ACCH
 - definition, gloss-2
 - softkeys
 - ACCH, 4-4
 - DTCH+ACCH, 4-11
- ACP specifications, 2-3
- ACPR definition, gloss-2
- ALC, turning off, 3-7
- ALT PWR IN connector, 3-14
- angle brackets, SCPI notation, 5-3
- annunciator, WCDMA, 3-2

B

- base station definition, gloss-2
- baseband gate in connector, 3-14
- baseband generator board (A7)
 - block diagram, 6-3
 - part number, 6-2
- BCCH
 - count hold in connector, 3-14
 - data field bits, 4-17, 5-16
 - identification bit, 4-17, 5-15
 - SCPI command, BCCH type, 5-9
 - softkeys
 - BCCH Setup, 4-4
 - BCCH Type, 4-5
- bits
 - BCCH data field, 4-17, 5-16
 - BCCH identification, 4-17, 5-15
 - BTS meas. uplink interference pwr, 4-17, 5-16
 - cyclic redundancy check, 4-17, 5-16

- data, 4-26
- dummy, 4-26
- message confirmation indicator, 4-17, 5-16
- system frame number, 4-17, 5-16
- tail, 4-17, 5-16
 - tail, definition, gloss-2
- transmit power, 4-17, 5-15
- block diagrams
 - A7 baseband generator, 6-3
 - A8 data generator, 6-5
 - downlink, 1-2
 - downlink channel 1, 1-3
 - multichannel uplink channels, 1-6
 - uplink multichannel, 1-5
 - uplink multicode, 1-3
 - uplink multicode channels, 1-4
- BTS meas. uplink interference pwr, 4-17, 5-16
- BURST GATE IN connector, 3-14

C

- carrier
 - frequency, setting, 5-36
 - power level, setting, 5-36
- CDMA definition, gloss-2
- channel
 - changing type, 3-5
 - SCPI commands
 - number, 5-9
 - operating state, 5-9
 - type, 5-10
 - selecting, 3-5
 - setup menu, 3-5
 - softkeys
 - Channel #, 4-5
 - Channel Setup, 4-5
 - Channel State Off On, 4-6
 - Channel Type, 4-6
 - tooggling, 3-5
 - tooggling Perch, 3-5
 - type, setting, 3-5
- channel 1 downlink block diagram, 1-3
- chip definition, gloss-2
- chip rate specification, 2-2
- code
 - long code range, 4-18, 5-16
 - long code, setting, 3-5
 - short code range vs symbol rate, 4-23, 5-17
 - short code, setting, 3-5

- commands, SCPI
 - command term, [5-2](#)
 - mnemonics, [5-3](#)
 - syntax, [5-4](#)
 - configuration, system, [3-16](#)
 - connectors
 - 8 kHz out, [3-12](#)
 - ALT PWR IN, [3-14](#)
 - baseband gate in, [3-14](#)
 - BCCH count hold in, [3-14](#)
 - BURST GATE IN, [3-14](#)
 - DATA CLK OUT, [3-12](#)
 - DATA OUT, [3-12](#)
 - EVENT 1, [3-14](#)
 - EVENT 2, [3-15](#)
 - frame sync out, [3-14](#)
 - PATTERN TRIG IN, [3-13](#)
 - super frame reset out, [3-12](#)
 - SYMBOL SYNC OUT, [3-11](#)
 - system frame number reset in, [3-13](#)
 - system frame number reset out, [3-12](#)
 - transmission power control out, [3-15](#)
 - controller, SCPI command term, [5-2](#)
 - converter, logic level, [3-16](#)
 - convolution code definition, [gloss-2](#)
 - CRC
 - definition, [gloss-2](#)
 - softkey, [4-8](#)
 - cross-reference table, softkey to SCPI, [5-29](#)
 - cyclic redundancy code (CRC)
 - check bits, [4-17](#), [5-16](#)
 - definition, [gloss-2](#)
 - D**
 - data
 - A8 data generator board
 - block diagram, [6-5](#)
 - part number, [6-2](#)
 - bits per radio frame, [4-26](#)
 - bits per time slot, [4-26](#)
 - connectors
 - DATA CLK OUT, [3-12](#)
 - DATA OUT, [3-12](#)
 - insert definition, [gloss-2](#)
 - pattern definition, [gloss-2](#)
 - SCPI commands
 - data insertion, [5-12](#)
 - data pattern, [5-12](#)
 - softkeys
 - Data Insertion, [4-9](#)
 - Data Pattern, [4-10](#)
 - display annotation, [3-2](#)
 - Down Long Code softkey, [4-11](#)
 - downlink
 - block diagram, [1-2](#)
 - channel 1 block diagram, [1-3](#)
 - SCPI commands
 - channel power, [5-14](#)
 - long code, [5-14](#)
 - specifications, [2-2](#)
 - DTCH
 - definition, [gloss-2](#)
 - softkeys
 - DTCH, [4-11](#)
 - DTCH+ACCH, [4-11](#)
 - DTX
 - definition, [gloss-2](#)
 - softkey, [4-12](#)
 - dummy bits, [4-26](#) - E**
 - encoder tail bits definition, [gloss-2](#)
 - EVENT 1 connector, [3-14](#)
 - EVENT 2 connector, [3-15](#)
 - EVM specifications, [2-4](#)
 - examples
 - channel type, setting, [3-5](#)
 - channel, toggling, [3-5](#)
 - front panel operation, [3-4](#)
 - long code, setting, [3-5](#)
 - modulation output, toggling, [3-6](#)
 - output frequency, setting, [3-6](#)
 - output power, setting, [3-6](#)
 - Perch channel, toggling, [3-5](#)
 - program, [5-35](#)
 - RF output, toggling, [3-6](#)
 - short code, setting, [3-5](#)
 - waveform output, toggling, [3-6](#)
- F**
- FACH
 - definition, [gloss-2](#)
 - softkey, [4-12](#)
- filtering specification, [2-2](#)
- firmware revision overview, [1-7](#)
- Fixed softkey, [4-12](#)
- forward channel definition, [gloss-3](#)
- frame
 - burst, [5-36](#)
 - connector, frame sync out, [3-14](#)
 - duration specification, [2-2](#)

Perch1, [4-16](#), [4-17](#), [5-15](#), [5-16](#)
 radio, [4-26](#)
 waveform, Frame Sync Out, [3-14](#)
 frequency
 setting, [3-6](#)
 setting output, [3-6](#)
 specifications, [2-2](#)
 front-panel operation example, [3-4](#)

I

implied SCPI commands, [5-3](#)
 Increment softkey, [4-13](#)
 input specifications, [2-4](#)
 instrument, SCPI term, [5-2](#)
 interleaving
 definition, [gloss-3](#)
 method, [4-26](#)
 interrupt time
 definition, [gloss-3](#)
 SCPI command, [5-14](#)
 interrupt trigger
 SCPI command, [5-14](#)
 softkey, [4-13](#)
 Interrupt Value softkey, [4-13](#)

L

level accuracy performance test, [6-2](#)
 Link Down Up softkey, [4-14](#)
 logic level converter, [3-16](#)
 long code
 definition, [gloss-3](#)
 example, [3-5](#)
 masked set, [4-18](#)
 range, [4-18](#), [5-16](#)
 SCPI commands
 downlink, [5-14](#)
 uplink, [5-26](#)
 setting, [3-5](#)
 softkey, [4-14](#)

M

masked set, long code, [4-18](#)
 menus
 channel setup, [3-5](#)
 overview of WCDMA, [3-3](#)
 wideband CDMA, [3-4](#)
 message confirmation indicator bits, [4-17](#), [5-16](#)
 Mode key description, [4-1](#)

modulation
 PDC, [5-36](#)
 specification, [2-2](#)
 toggling, [3-6](#)
 multichannel
 uplink block diagram, [1-5](#)
 uplink channels block diagram, [1-6](#)
 multicode
 softkeys
 Multicode #, [4-15](#)
 Multicode Type, [4-15](#)
 specifications, [2-3](#)
 type SCPI command, [5-15](#)
 uplink block diagram, [1-3](#)
 uplink channels block diagram, [1-4](#)
 Multiplex softkey, [4-16](#)

O

offsets, time, explanation, [3-8](#)
 optional parameters, SCPI, [5-4](#)
 output
 specifications, [2-4](#)
 toggling, [3-6](#)
 overview, option H98, [1-2](#)

P

part number
 A7 baseband generator, [6-2](#)
 A8 data generator, [6-2](#)
 PATTERN TRIG IN connector, [3-13](#)
 PDC modulation, [5-36](#)
 Perch
 channel selecting, [3-5](#)
 definition, [gloss-3](#)
 frame, Perch1, [4-17](#)
 SCPI commands
 Perch1 operating state, [5-15](#)
 Perch2 operating state, [5-16](#)
 softkeys
 Perch Setup, [4-16](#)
 Perch1 Off On, [4-16](#)
 Perch2 Off On, [4-18](#)
 perch
 frame, Perch1, [5-16](#)
 Perch1 frame, [4-16](#), [4-17](#), [5-15](#), [5-16](#)
 performance tests, [6-2](#)
 phase polarity
 Normal Invert softkey, [4-18](#)
 SCPI command, [5-16](#)

- pilot-TPC power
 - SCPI command, [5-17](#)
 - softkey, [4-19](#)
- PN
 - sequence definition, [gloss-3](#)
 - softkeys
 - PN15, [4-20](#)
 - PN9, [4-20](#)
- power
 - output, setting, [3-6](#)
 - setting, [3-6](#)
 - softkey, [4-21](#)
 - transmission, control, [4-28](#)
 - transmission, control SCPI command, [5-23](#)
 - turning ALC off, [3-7](#)
- product overview, [1-2](#)
- program message, SCPI term, [5-2](#)
- programming
 - example, [5-35](#)
 - information, [1-7](#), [5-1](#)
- Q**
 - query and event SCPI commands, [5-3](#)
 - query, SCPI term, [5-2](#)
- R**
 - RACH softkey, [4-21](#)
 - radio frame, [4-26](#)
 - range
 - long code, [4-18](#), [5-16](#)
 - short code vs symbol rate, [4-23](#), [5-17](#)
 - TSlot vs symbol rate, [4-30](#), [5-25](#)
 - rate
 - symbol vs parameters, [4-26](#)
 - symbol vs short code, [4-23](#), [5-17](#)
 - symbol vs TSlot range, [4-30](#), [5-25](#)
 - rear panel
 - connectors, [3-11](#)
 - overview, [3-11](#)
 - replaceable parts, [6-2](#)
 - response message, SCPI term, [5-2](#)
 - reverse channel definition, [gloss-3](#)
 - RF output, toggling, [3-6](#)
 - RF power level, ALC off, [3-7](#)
- S**
 - SCPI commands
 - BCCH type, [5-9](#)
 - channel
 - type, [5-10](#)
 - channel number, [5-9](#)
 - channel operating state, [5-9](#)
 - command tree, [5-5](#)
 - cross-reference table to softkey, [5-29](#)
 - data
 - insertion, [5-12](#)
 - pattern, [5-12](#)
 - downlink
 - channel power, [5-14](#)
 - long code, [5-14](#)
 - interrupt
 - time, [5-14](#)
 - trigger, [5-14](#)
 - long code
 - downlink, [5-14](#)
 - uplink, [5-26](#)
 - multicode type, [5-15](#)
 - optional parameters, [5-4](#)
 - overview, [5-2](#)
 - Perch1 operating state, [5-15](#)
 - Perch2 operating state, [5-16](#)
 - phase polarity, [5-16](#)
 - pilot TPC power, [5-17](#)
 - SFN fixed value, [5-17](#)
 - short code
 - channel 1, [5-17](#)
 - channels 2 and 3, [5-18](#)
 - symbol rate, [5-18](#)
 - system frame number type, [5-21](#)
 - TFrame offset, [5-22](#)
 - transmission
 - direction, uplink or downlink, [5-22](#)
 - power bits, [5-23](#)
 - power control, [5-23](#)
 - TSector offset, [5-23](#)
 - TSlot offset, [5-24](#)
 - uplink
 - channel or multicode, [5-26](#)
 - channel power, [5-25](#)
 - interference bits, [5-25](#)
 - long code, [5-26](#)
 - trigger delay, [5-28](#)
 - W Bits, [5-28](#)
 - W-CDMA Operating State, [5-28](#)
 - SDCCH
 - definition, [gloss-3](#)
 - softkey, [4-21](#)
 - SFN (system frame number)
 - bits, [4-17](#), [5-16](#)
 - Fixed Value SCPI command, [5-17](#)
 - Fixed Value softkey, [4-22](#)
 - Setup softkey, [4-22](#)

-
- short code
 - example, [3-5](#)
 - range vs symbol rate, [4-23](#), [5-17](#)
 - SCPI commands
 - channel 1, [5-17](#)
 - channels 2 and 3, [5-18](#)
 - softkeys
 - Short Code (channel 1), [4-23](#)
 - Short Code (channels 2 and 3), [4-24](#)
 - softkeys
 - 128 ksps, [4-3](#)
 - 256 ksps, [4-4](#)
 - 32 ksps, [4-2](#)
 - 64 ksps, [4-3](#)
 - 64 ksps voice, [4-3](#)
 - ACCH, [4-4](#)
 - BCCH Setup, [4-4](#)
 - BCCH Type, [4-5](#)
 - Channel #, [4-5](#)
 - Channel Setup, [4-5](#)
 - Channel State Off On, [4-6](#)
 - Channel Type, [4-6](#)
 - CRC, [4-8](#)
 - cross-reference table to SCPI, [5-29](#)
 - Data Insertion, [4-9](#)
 - Data Pattern, [4-10](#)
 - Down Long Code, [4-11](#)
 - DTCH, [4-11](#)
 - DTCH+ACCH, [4-11](#)
 - DTX, [4-12](#)
 - FACH, [4-12](#)
 - Fixed, [4-12](#)
 - Increment, [4-13](#)
 - Interrupt Trigger, [4-13](#)
 - Interrupt Value, [4-13](#)
 - Link Down Up, [4-14](#)
 - Long Code, [4-14](#)
 - Multicode #, [4-15](#)
 - Multicode Type, [4-15](#)
 - Multiplex, [4-16](#)
 - Perch Setup, [4-16](#)
 - Perch1 Off On, [4-16](#)
 - Perch2 Off On, [4-18](#)
 - Phase Polarity Normal Invert, [4-18](#)
 - Pilot-TPC Power, [4-19](#)
 - PN15, [4-20](#)
 - PN9, [4-20](#)
 - Power, [4-21](#)
 - RACH, [4-21](#)
 - SDCCH, [4-21](#)
 - SFN Fixed Value, [4-22](#)
 - SFN Setup, [4-22](#)
 - Short Code (channel 1), [4-23](#)
 - Short Code (channels 2 and 3), [4-24](#)
 - Spread, [4-24](#)
 - Symbol Rate, [4-25](#)
 - System Frame No., [4-27](#)
 - TFrame, [4-27](#)
 - Time Offset, [4-28](#)
 - Transmit Pwr Ctrl, [4-28](#)
 - TSector, [4-29](#)
 - TSlot, [4-30](#)
 - Tx Power Bits, [4-31](#)
 - Ulink I/F Bits, [4-31](#)
 - UPCH, [4-32](#)
 - Uplink Mode Chan Multicode, [4-32](#)
 - Uplink Power, [4-34](#)
 - Uplink Trig Delay, [4-34](#)
 - W Bits, [4-35](#)
 - W-CDMA Off On, [4-35](#)
 - wideband CDMA, [4-2](#)
 - ZEROS, [4-36](#)
 - specifications, [2-1](#)
 - Spread softkey, [4-24](#)
 - super frame reset out connector, [3-11](#)
 - symbol rate
 - SCPI command, [5-18](#)
 - softkey, [4-25](#)
 - versus parameters, [4-26](#)
 - versus short code, [4-23](#), [5-17](#)
 - versus TSlot range, [4-30](#), [5-25](#)
 - SYMBOL SYNC OUT connector, [3-11](#)
 - system
 - configuration, [3-16](#)
 - frame number (SFN)
 - bits, [4-17](#), [5-16](#)
 - softkey, [4-27](#)
 - type SCPI command, [5-21](#)
 - frame number reset (SFN RST)
 - in connector, [3-13](#)
 - out connector, [3-12](#)
- ## T
- tail bits, [4-17](#), [5-16](#)
 - tail bits definition, [gloss-2](#)
 - TFrame
 - description, [3-9](#)
 - offset SCPI command, [5-22](#)
 - softkey, [4-27](#)
 - Time Offset softkey, [4-28](#)
 - time offsets, explanation, [3-8](#)
 - timeslots, [4-26](#), [5-36](#)
-

timing diagram

- downlink time offsets, [3-9](#)
- SFN RST input waveforms, [3-13](#)
- SFN RST propagation delay, [3-13](#)
- uplink time offsets, [3-10](#)

transmission

- direction, uplink or downlink SCPI command, [5-22](#)
- power bits SCPI command, [5-23](#)
- power control, [4-28](#)
- power control out connector, [3-15](#)
- power control SCPI command, [5-23](#)

transmit power bits, [4-17](#), [5-15](#)

Transmit Pwr Ctrl softkey, [4-28](#)

TSector

- description, [3-8](#)
- offset SCPI command, [5-23](#)
- softkey, [4-29](#)

TSlot

- description, [3-8](#)
- offset SCPI command, [5-24](#)
- range vs symbol rate, [4-30](#), [5-25](#)
- softkey, [4-30](#)

Tx Power Bits softkey, [4-31](#)

U

Ulink I/F Bits softkey, [4-31](#)

UPCH

- definition, [gloss-3](#)
- softkey, [4-32](#)

uplink

- block diagrams
 - multichannel, [1-5](#)
 - multichannel channels, [1-6](#)
 - multicode, [1-3](#)
 - multicode channels, [1-4](#)

SCPI commands

- channel or multicode, [5-26](#)
- channel power, [5-25](#)
- interference bits, [5-25](#)
- long code, [5-26](#)
- trigger delay, [5-28](#)

softkeys

- Uplink Mode Chan Multicode, [4-32](#)
- Uplink Power, [4-34](#)
- Uplink Trig Delay, [4-34](#)
- specifications, [2-3](#)

W

W Bits

- SCPI command, [5-28](#)
- softkey, [4-35](#)

wait, [5-36](#)

waveform

- frame sync out, [3-14](#)
- togglng output, [3-6](#)

WCDMA

- annunciator, [3-2](#)
- definition, [gloss-3](#)

wideband CDMA

- annunciator, [3-2](#)
- menu, [3-4](#)
- menu tree, [3-3](#)
- operating state SCPI command, [5-28](#)
- softkeys, [4-2](#)
- turning on, [3-6](#)
- W-CDMA Off On softkey, [4-35](#)

Z

ZEROS softkey, [4-36](#)