

Installation Guide

Agilent Technologies Signal Studio Software



Agilent Technologies

Part Number: E4400-90559

Printed in USA

May 2002

© Copyright 2002 Agilent Technologies.

Notice

The material contained in this document is provided “as is,” and is subject to change, without notice, in future editions.

Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied with regard to this manual and to any of the Agilent products to which it pertains, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or any of the Agilent products to which it pertains. Should Agilent have a written contract with the User and should any of the contract terms conflict with these terms, the contract terms shall control.

For signal generator warranty information, refer to the signal generator Installation Guide or Service Guide.

Documentation Questions or Comments

We welcome any questions or comments you may have about signal source documentation. Please E-mail us at sources_manu@am.exch.agilent.com.

System Requirements	1
PC Requirements.....	1
Instrument Requirements.....	2
Downloading ESG Firmware.....	2
Loading the License Key	2
Installing the Signal Studio Software.....	3
Installing Agilent IO Libraries	3
Setting Up the GPIB Interface	6
GPIB Interface Requirements.....	6
IO Config - Agilent IO Libraries Configuration Utility.....	7
Connecting the GPIB Interface.....	10
GPIB Verification.....	11
GPIB Interface Problems	16
Setting Up the LAN Interface	20
LAN Interface Requirements	20
Configuring the LAN Interface.....	20
Connecting the LAN Interface	22
Verifying LAN Communication.....	23
Troubleshooting LAN Interface Problems	23

Signal Studio Software Installation Guide

This installation guide covers the following:

- System Requirements
- Downloading ESG Firmware
- Loading the License Key
- Installing the Signal Studio Software
- Installing Agilent IO Libraries
- Setting Up the GPIB Interface
- Setting Up the LAN Interface

System Requirements

PC Requirements

- Windows 98,[®] Windows Me,[®] Windows NT, 4.0[®] (Service Pack 4 or higher recommended), or Windows 2000^{®1}

NOTE Signal Studio software requires Microsoft[®] service pack 4 or higher. For service packs, contact Microsoft directly, or go to: <http://www.microsoft.com>

NOTE To use the Help system (Enhanced Multitone, Option 408 only) you must have Internet Explorer[®], 4.01 service pack 2.0 or later.

- Pentium PC, 200 MHz or better
- 64 MB RAM (128 MB for Windows 2000)
- 50 MB free disk space
- Installed GPIB IO interface card or LAN interface card

1. Windows 98,[®] Windows Me,[®] Windows NT, 4.0,[®] and Windows 2000[®] are U.S. registered trademarks of Microsoft Corporation.

Instrument Requirements

- E4438C ESG Vector Signal Generator with:
 - The latest firmware revision (See Downloading ESG Firmware)
 - Option 001 or 002 (recommended, 32 Msample baseband generator)
- (Option 408 only) E4440A, E4443, or E4445 PSA Spectrum Analyzer with firmware revision A.02.04

Downloading ESG Firmware

You may need to upgrade the firmware in your E4438C ESG in order to run the software. To load the latest version of firmware in your signal generator, perform the following steps:

1. Go to <http://www.agilent.com/find/upgradeassistant>.
2. Click **PSG/ESG Upgrade Assistant 5.0.1** to download and install the program.
3. Click **E4438C ESG Vector Firmware** to download the firmware upgrade for your signal generator.
4. Run the PSG/ESG Upgrade Assistant 5.0.1 and follow the program prompts.

Click **PSG/ESG Upgrade Assistant 5.0.1 Installation Note** for more information.

CAUTION Before upgrading your firmware, click **Enhancements, Improvements, and Fixes** on the firmware release page for information on how the current revision will affect other personalities you are using.

Loading the License Key

You can download signal studio software for viewing, but you must have a license key before you can use the E4438C ESG with the software. To purchase a license key, contact your sales engineer or local sales office.

A list of sales offices can be found at <http://www.agilent.com/find/assist>.

To load the license key into the signal generator perform the following steps:

1. Press **Utility > Instrument Adjustments > Instrument Options > Software Options**.
2. Verify that the host ID shown on the display matches the host ID on the license key.

A license key is specific to a particular signal generator, and cannot be applied to another. If the host IDs do not match, contact your Agilent sales engineer or local sales office.

3. Highlight the software option.
4. Press **Modify License Key**.
5. Enter the 12-character license key using the numeric keypad and/or softkeys and press **Enter**.
6. Press **Proceed With Reconfiguration > Confirm Change (Instrument will Reboot)**.

NOTE For more information on enabling a software option, refer to the signal generator user's guide.

Installing the Signal Studio Software

1. Go to http://www.agilent.com/find/signal_studio.
2. Click the **E4438C ESG Signal Studio Software** link.
3. Click the link of the software you would like to install.
4. On the software personality page, click the software link and follow the download instructions.

Installing Agilent IO Libraries

Use the latest version of Agilent IO Libraries with the signal studio software. Agilent IO Libraries are included with most Agilent interface products, or you can download the latest version from the Agilent website free of charge.


NOTE If you are using a National Instruments GPIB interface card and have the NI-VISA libraries, you still must install Agilent IO Libraries to use the signal studio software. Both libraries can reside on your computer.

If you do not have an Agilent IO Libraries installation CD-ROM, use the following procedure to install Agilent IO Libraries.

If you have problems with the installation, or if you want to customize the installation, go to <http://www.agilent.com/find/iolib>. Click **IO Libraries Installation and Configuration Guide for Windows** for more information and a detailed installation procedure.

1. Go to <http://www.agilent.com/find/iolib>.
2. Click **IO Libraries for Windows 98/Me/NT/2000/XP Pro (X.##.##) InstallShield** archive.
3. Click **Save this program to disk**. The Agilent IO Libraries install executable can be saved to any local directory on your computer.
4. Run the Agilent IO Libraries install executable from the local directory where it was saved.
5. Click the **Next** button to move through the installation windows of the InstallShield Wizard until you get to the **Select the Installation Option** window as shown in Figure 1 on page 4.


NOTE If you have an NI GPIB interface card and/or NI-VISA installed on your computer, select **Custom Installation**.

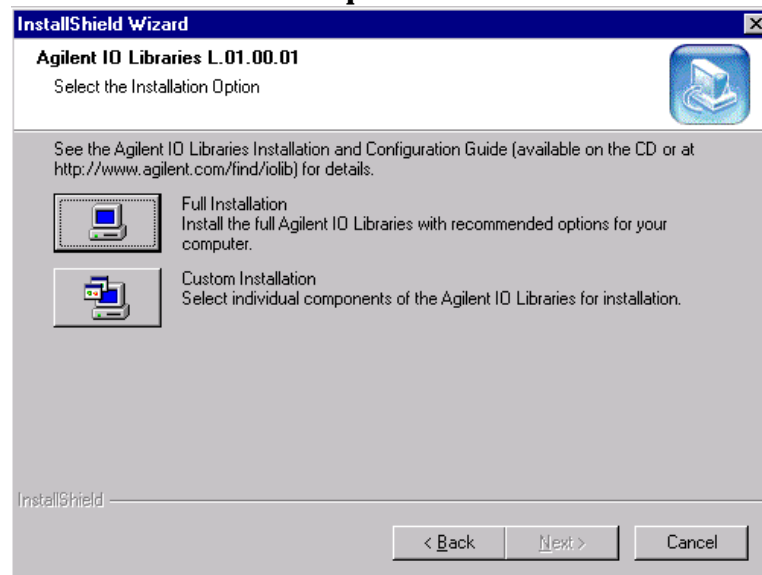Figure 1 **Select The Installation Option**

6. Click **Next** in the **SICL installation directory** window to install the SICL portion of the Agilent IO Libraries.
7. Click **Next** in the **VISA installation directory** window to install the VISA portion of the Agilent IO Libraries.
8. Select the type of installation you want from the **Select type of installation** window of the **InstallShield Wizard**. See Figure 2.
 - If you do not have or do not want the NI-VISA Libraries on your PC, select **1. SICL and Agilent VISA Installation**, then click **Next**.
 - If you *want* the Agilent VISA Library and the NI VISA Libraries on your PC, select **2. SICL and side-by-side Agilent VISA Installation**, then click **Next**.

CAUTION If you have a NI GPIB interface card and/or NI-VISA installed on your computer, select **2. SICL and side-by-side Agilent VISA Installation**. Do *not* select **1.SICL and Agilent VISA Installation** or you will overwrite the NI-VISA libraries.

Figure 2 Select Type of Installation Window

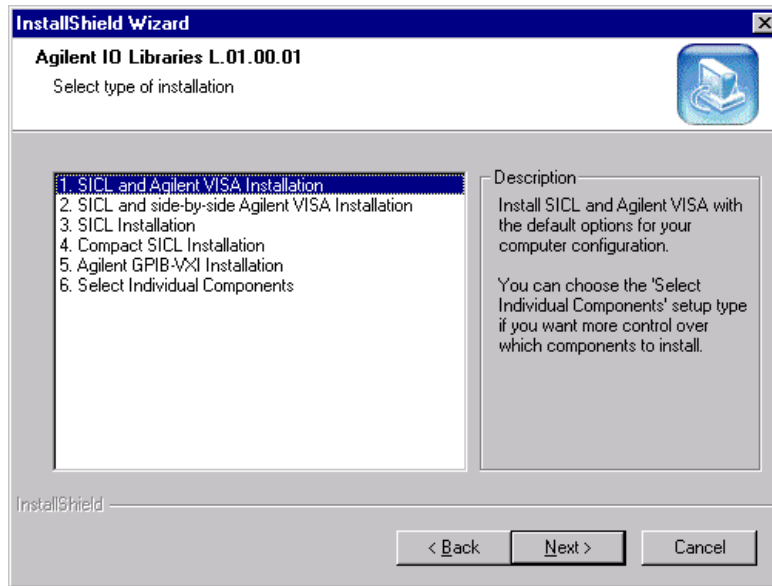

CAUTION When the Question window displays **Do you want to install Agilent E8491 IEEE 1394 to VXI support?**, click **No**.

The InstallShield Wizard window will now display the current settings.

9. Click the **Next** button. The InstallShield Wizard window will display **Agilent IO Libraries have been successfully installed**.
10. Click **Finish** in the InstallShield Wizard window to exit the install program. The Agilent IO Libraries are now installed on your PC.

Setting Up the GPIB Interface

The signal studio software can be configured to use the general purpose interface bus (GPIB) connection for instrument control.

If you have a GPIB interface card and have completed the Agilent IO Libraries installation as previously described in this guide, go to "IO Config - Agilent IO Libraries Configuration Utility" on page 7 to finish the configuration procedure.

NOTE Signal studio software uses the Agilent IO Libraries. If you have a National Instrument's GPIB interface card and National Instruments libraries on your computer, the Agilent IO library InstallShield Wizard will allow for both National Instruments and Agilent libraries to reside on your PC. Refer to "Installing Agilent IO Libraries" on page 3.

GPIB Interface Requirements

A GPIB interface card must be installed in your computer. Follow the installation instructions supplied by the GPIB interface card manufacturer. Once the GPIB interface card is installed, you must install an I/O library on your computer. The I/O library is typically supplied along with the GPIB interface card. The I/O libraries can be obtained from the manufacturer of the interface card.

The GPIB and its associated interface protocols are defined in the ANSI/IEEE standard 488.1-1987 and ANSI/IEEE standard 488.2-1992. For more information on these standards, refer to the IEEE website.

Installation of an Agilent GPIB interface card usually includes installation of the Agilent IO Libraries. If the National Instrument's GPIB interface card is installed, the NI-VISA libraries are usually installed on the PC. The difference between Agilent VISA and NI-VISA are the lower level libraries used; SICL and NI-488.2 respectively. For information on the supported GPIB interface cards refer to Table 3 and Table 4.

Table 3 Agilent-GPIB Interface Card for PC-Based Systems

Interface Card	Operating System	Agilent IO Libraries	Backplane/BUS	Max I/O (kB/sec)	Buffering
82350A for PCI bus computers	Windows 2000/98 NT/Me	Agilent VISA/SICL L.01.00 or higher	PCI 32 bit	750	Built-in

NOTE The 82350A is the only Agilent GPIB interface card supported.

Table 4 NI-GPIB Interface Card for PC-Based Systems

Interface Card	Operating System	NI IO Libraries	Backplane/BUS	Max I/O (kB/sec)
National Instrument PCI-GPIB	Windows 2000/98 NT/Me	NI-VISA version 1.5 or later	PCI 32 bit	1.5 Mbytes/s
National Instrument PCMCIA-GPIB	Windows 2000/98 NT/Me	NI-VISA version 1.5 or later	PCMCIA	1.5 Mbytes/s

IO Config - Agilent IO Libraries Configuration Utility

This section describes how to configure the GPIB interface card.

- For NI-GPIB see "Configuring the National Instruments GPIB Interface" on page 9.

Configuring the Agilent 82350 GPIB Interface


This section will guide you through the configuration for an Agilent 82350 PCI GPIB interface card.

NOTE If you have questions about the configuration, or require a custom installation, go to <http://www.agilent.com/find/iolib> and click **Agilent IO Libraries Installation and Configuration Guide for Windows**.

To configure the GPIB interface:

1. Run the IO Config program. The IO Config program is included with the Agilent IO Libraries download and is located in the **Start > Programs > Agilent IO Libraries > IO Config** directory. The IO Config window will be displayed as shown in Figure 3.

Figure 3 IO Config

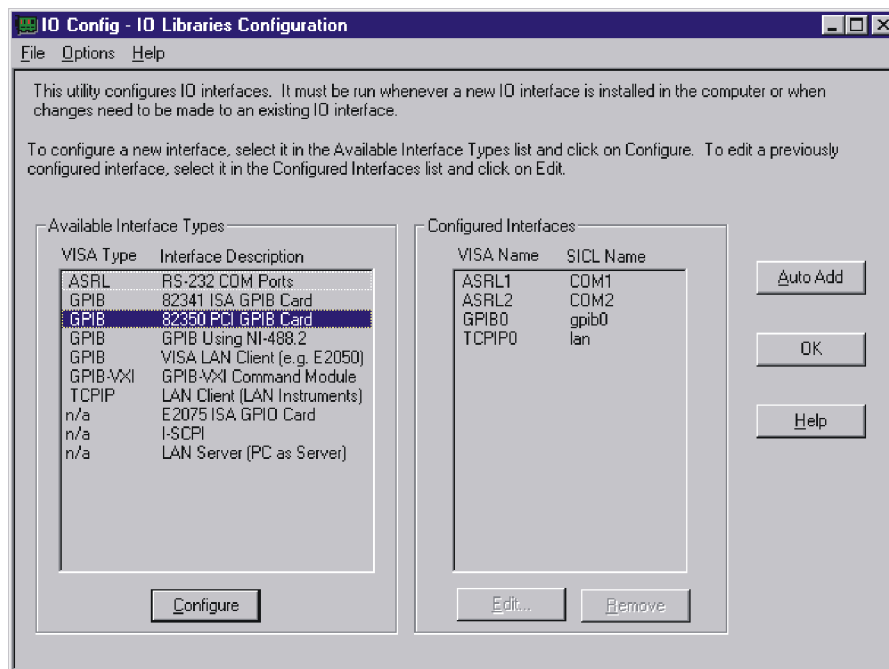


1_io-config

2. Click the **GPIB 82350 PCI GPIB Card** in the **Available Interface Types** list box as shown in Figure 3.

NOTE The list shown in the **Available Interface Types** section of Figure 3 depends on the interfaces present on your computer and may be different from those shown. The selections you are asked to make however, are valid.

3. Click the **Configure** button. The **82350 PCI GPIB Card Configuration** window will be displayed as shown in Figure 4.

Figure 4 **82350 PCI GPIB Card Configuration**

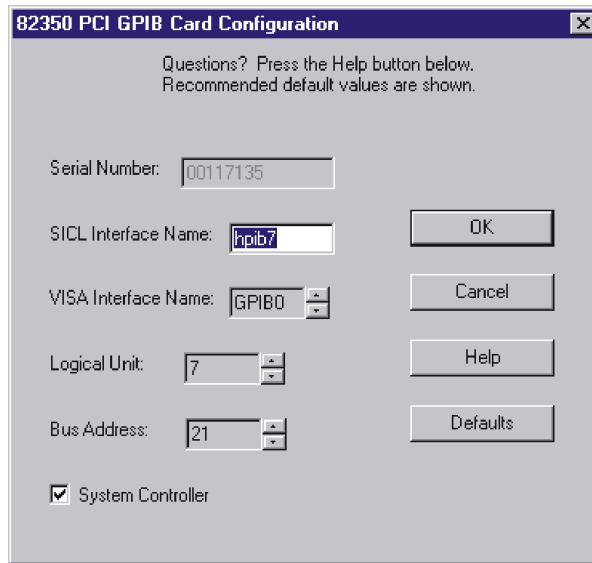

82350 PCI GPIB Card Configuration

Questions? Press the Help button below.
Recommended default values are shown.

Serial Number: 00117135

SICL Interface Name: hpib7

VISA Interface Name: GPIB0

Logical Unit: 7

Bus Address: 21

System Controller

OK

Cancel

Help

Defaults

2_gpiib-card

4. Click **OK** to accept the default settings. The default name, **hpib7**, is the name used to identify the single 82350A PCI GPIB interface card, but any unique name can be used. The name is used in the parameter list of a SICL function call. An example of a SICL function call using the board identifier **hpib7** might be: `iopen("hpib7, 19")` where **19** is the address of the signal generator.
5. Click **OK** on successive forms to back out of the IO Config program.

Configuring the National Instruments GPIB Interface

This section will guide you through configuring the Agilent IO Libraries to use a National Instruments GPIB interface card. Refer to the documentation provided with the NI-GPIB interface card for information on the installation if necessary.


To configure the NI-GPIB interface:

1. Install the NI-GPIB interface card along with the NI-VISA libraries. After installation, run the NI-488.2 Getting Started Wizard to verify the installation. Refer to National Instruments documentation for help with the installation.
2. Install the Agilent IO Libraries as described in the Installing Agilent IO Libraries section of this guide. Make sure that the **2. SICL and side-by-side Agilent VISA Installation** is selected during the Agilent IO Libraries installation.

NOTE If you have questions about the configuration, or require a custom installation, go to <http://www.agilent.com/find/iolib> and click **Agilent IO Libraries Installation and Configuration Guide for Windows**.


3. Run the IO Config program. The IO Config program is included with the Agilent IO Libraries download and is located in the **Start > Programs > Agilent IO Libraries > IO Config** directory. The IO Config window will be displayed as shown in Figure 5.

Figure 5 NI-IO Config

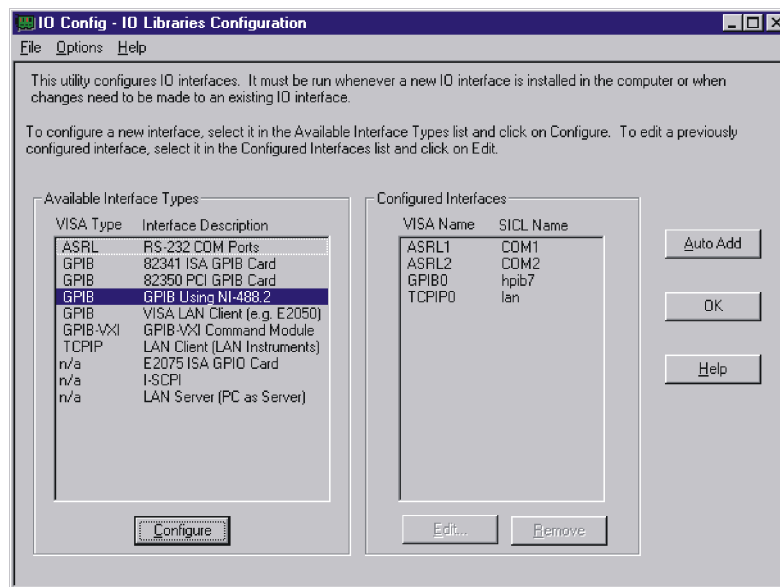

gpiib_use-ni

4. Click **GPIB Using NI-488.2** in the **Available Interface Types** list box as shown in Figure 5. If **GPIB Using NI-488.2** is not listed, you must create and/or edit the `intcfg.ini` file to make it available. Refer to "GPIB Interface Problems" on page 16 for instructions on how to edit this file.
5. Click on the **Configure** button. The **GPIB Using NI-488.2 - Configuration** window will be displayed as shown in Figure 6.

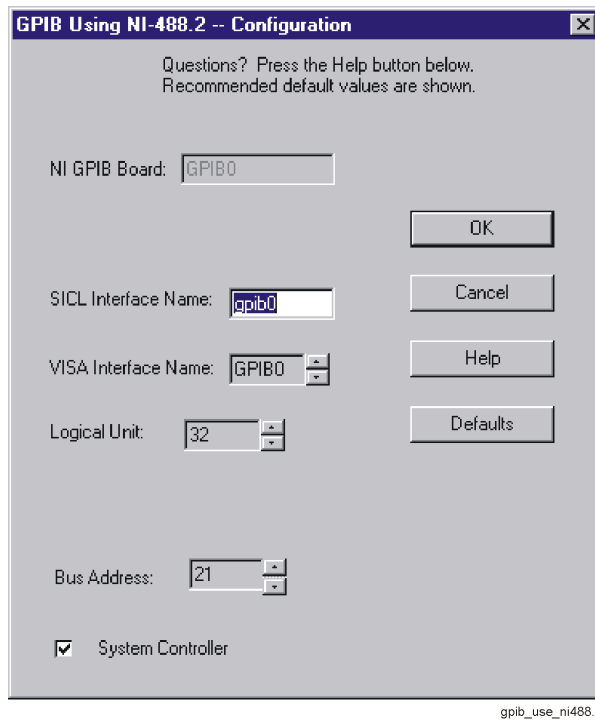
Figure 6 GPIB Using NI-488.2 - Configuration

6. Click **OK** to accept the default settings (this assumes no other GPIB interface card is on the computer).
7. Click **OK** on successive forms to back out of the IO Config program.

Connecting the GPIB Interface


Connect your PC to the signal generator using the GPIB interface cable as shown in Figure 8. The spectrum analyzer (Enhanced Multitone, Option 408 only) can be connected to the signal generator via a second GPIB cable. See the *ESG Vector Signal Generator User's Guide* for a listing of Agilent GPIB cables.

Figure 7 Connecting the GPIB Interface

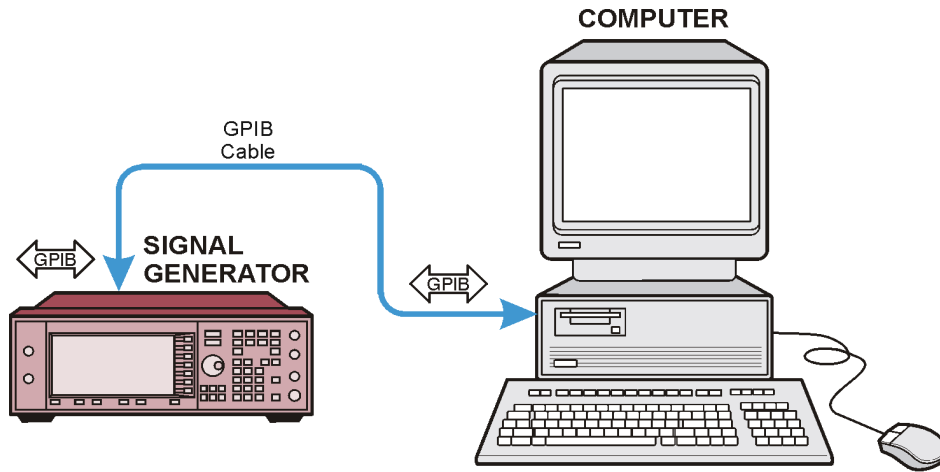

dk717b

Figure 8 Connecting the GPIB Interface (Enhanced Multitone, Option 408 only)

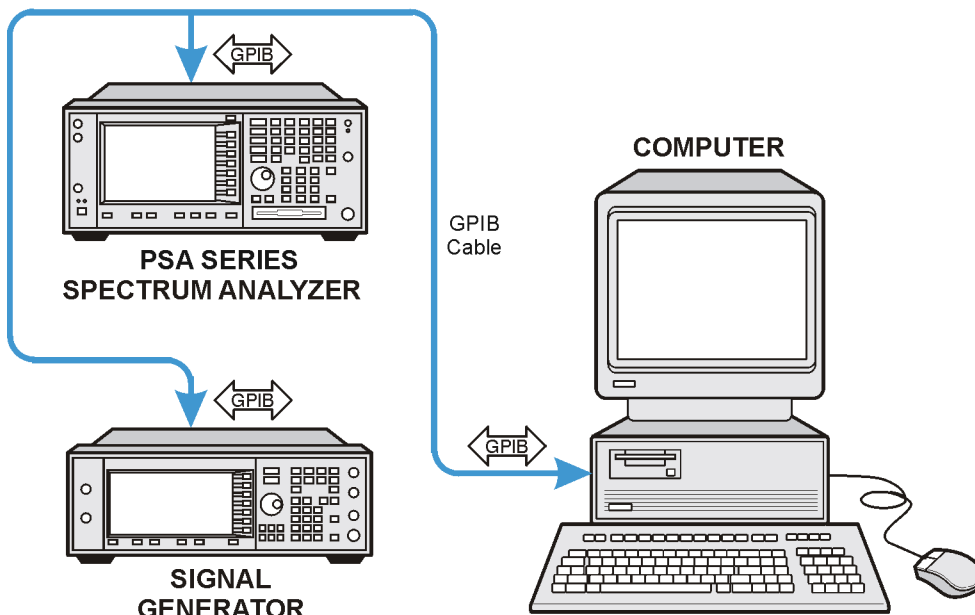

gpiib-conn

GPIB Verification

Depending on the type of GPIB interface card installed on your computer, you can use either the Agilent VISA Assistant or NI-488.2 Getting Started Wizard to verify the GPIB installation.

- Refer to the "NI-GPIB Interface Verification" on page 14 for information on verifying the NI-GPIB installation.

Agilent 82350 GPIB Interface Verification


With the equipment connected as shown above in Figures 7 or 8, perform the following steps:

1. Click on the blue IO icon in the task bar. The icon is located at the lower right of the PC display.
2. Click **Run VISA Assistant**.

NOTE If a **Progress** window appears with a **Searching for knowledge base** title and a long time delay occurs (a minute or more), refer to "Communication Time Problems" on page 23.


3. Click on the GPIB address for the signal generator. Refer to Figure 9.

Figure 9 **Visa Assistant**

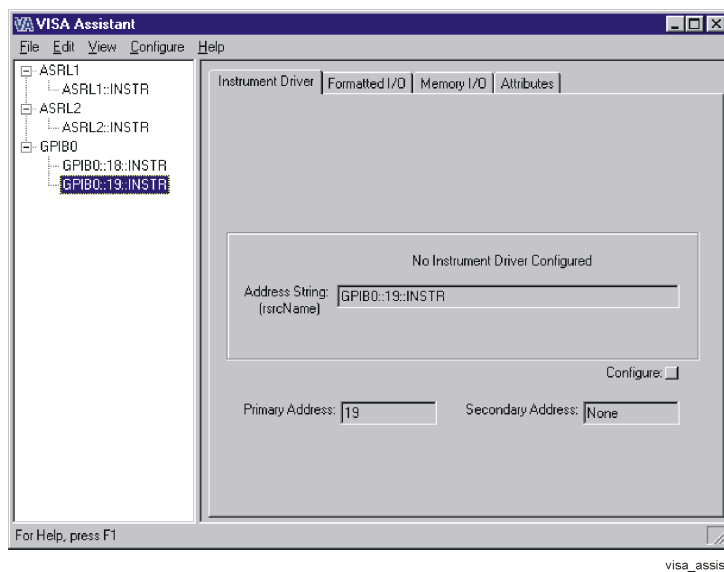

4. Click on the **Formatted I/O** tab on the **VISA Assistant** window.
5. Click the **SCPI** button in the **Instr.Lang** area at the lower right corner of the **VISA Assistant** window. Refer to Figure 10.
6. Click the ***IDN?** button in the **VISA Assistant** window. The response should be similar to that shown in Figure 10.


Figure 10 Remote IO Query

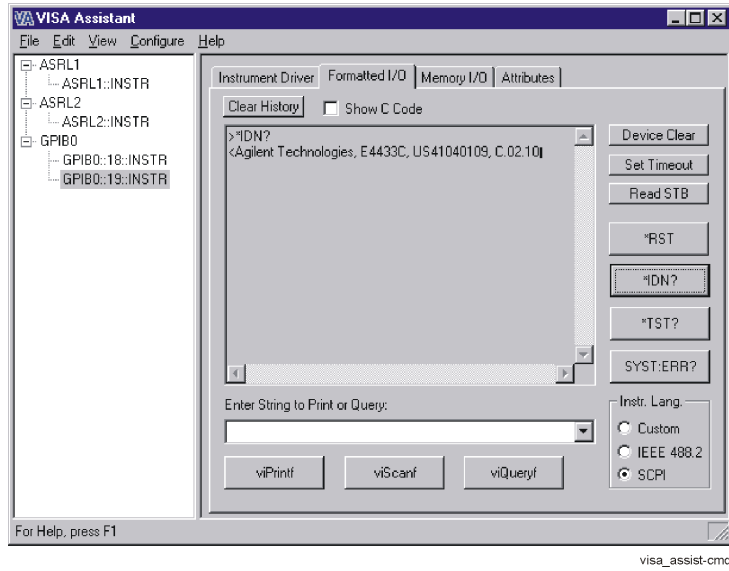

NI-GPIB Interface Verification

1. Connect the equipment as shown in Figure 8 on page 11.
2. Click **Start > Programs > National Instruments NI-488.2 > Getting Started Wizard**. A window will appear as shown in Figure 11.


Figure 11 NI-488.2 Getting Started Wizard

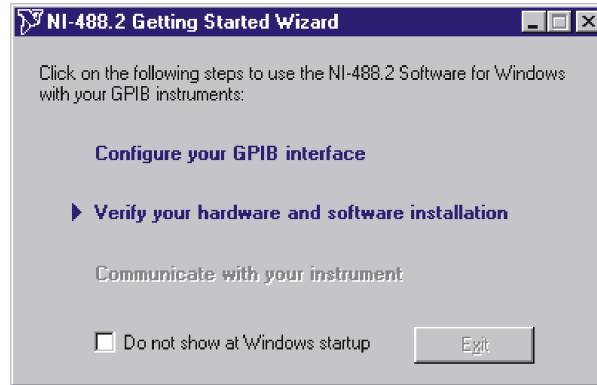

wzrd_verify-hw

3. Click **Verify your hardware and software installation** in the **NI-488.2 Getting Started Wizard** window. A new window will appear as shown in Figure 12.

Figure 12 NI-488.2 Verify

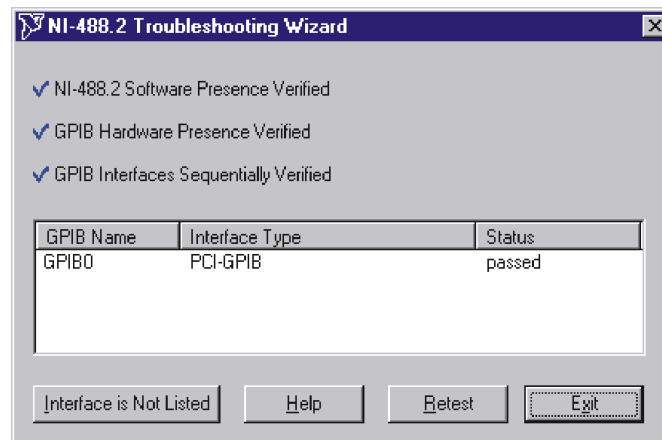


wzrd_trubl-sht

4. Click **Exit** to close the window after the NI-GPIB interface has been verified.

5. Click on **Communicate with your instrument** in the **NI-488.2 Getting Started Wizard** window as shown in Figure 13. This will check for instruments connected to the GPIB interface. Follow the instructions presented in each of the windows.

Figure 13 **Communicate Using GPIB**

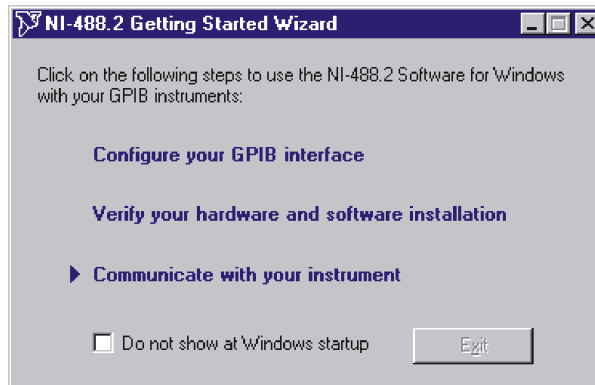

wzrd_comm

6. Click **Exit** when finished.

GPIB Interface Problems

If you experience problems communicating with or controlling instruments over the GPIB, perform the following steps:

1. Restart the computer. You must restart the PC to initialize the GPIB configuration.
2. Check to see that the instrument you are trying to communicate with is turned on.
3. Check to see that the GPIB cable connections are securely attached to the instrument and PC.
4. Verify that the instrument you are trying to communicate with is using the SCPI (Standard Commands for Programming Instruments) language. For example, the signal generator supports 8656B, 8657A/B languages as well as SCPI. Refer to the instrument's manual for information on available languages and how to select the SCPI language.
5. Verify that the GPIB address of the instrument is the same as that set in the **Visa Assistant** window as shown in Figure 9 on page 12.

Creating and Editing the `intfcfg.ini` File

If the Agilent IO Config utility did not detect the presence of a configured NI-488.2 GPIB interface, you can override the default search algorithm and directly specify this interface by creating and editing the `intfcfg.ini` file.

You must create the `intfcfg.ini` file. It is not installed during the Agilent IO Libraries configuration. If you have not previously created the `intfcfg.ini` file, you can create it by copying the sample `intfcfg.txt` file to `intfcfg.ini`. The file is located in the `intfcfg` subdirectory under the Agilent IO Libraries installation directory:

`C:\Program Files\Agilent\IO Libraries\intfcfg\intfcfg.txt` (if you used the default location).

NOTE If you are using Windows explorer to create `intfcfg.ini`, make sure the **Hide File Extensions** is not set. If it is set, you will create the file `intfcfg.ini.txt`, which will not work.

To edit the `intfcfg.ini` file, perform the following steps:


1. Make a backup copy of the `intfdcfg.ini` file.
2. Locate the `[CfgNi488]` section in the `intfcfg.ini` file.
3. Remove the leading semicolon from the appropriate `GPIBn=yes` line to force IO Config to recognize the NI-488.2 GPIB interface. Uncomment only the lines for which you have a configured NI-488.2 GPIB interface.
4. Save the modified `intfcfg.ini` file.
5. Run the Agilent IO Config utility. The GPIB NI-488.2 interface should now appear in the **Available Interface Types** area of the **IO Config-IO Libraries Configuration** window as shown in Figure 5 on page 9.

Communication Time Problems

If you experience a long delay (a minute or more) when trying to run the Enhanced Multitone Software, there might be an unresolved instrument IP address configured in the *IO Config* program. An unresolved IP address can affect GPIB communication. To check for this, perform the following steps:

1. Go to "Configuring the LAN Interface" on page 20 and do steps 1-5. Leave the **IO Config-IO Libraries Configuration** window open.
2. Click on `TCPIP0 lan` in the **IO Config-IO Libraries Configuration** window as shown in Figure 14.


Figure 14 IO Config-IO Libraries Configuration

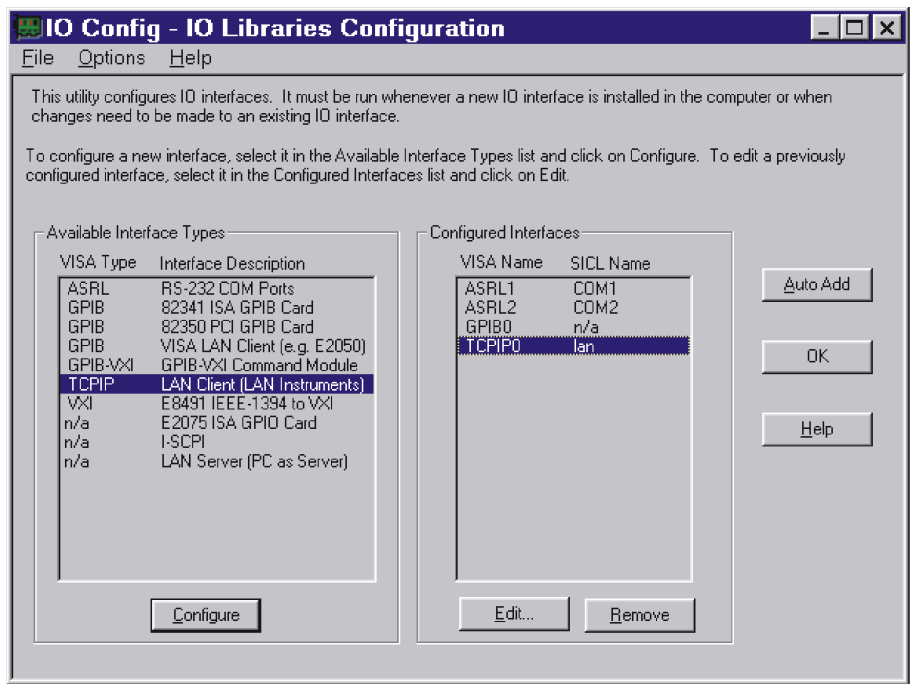

lan-client_3

3. Click the **Edit** button on the **IO Config-IO Libraries Configuration** window shown in Figure 14.
4. Click the **Edit Visa Config..** button in the **LAN Client** window as shown in Figure 15.


Figure 15 LAN Client Edit

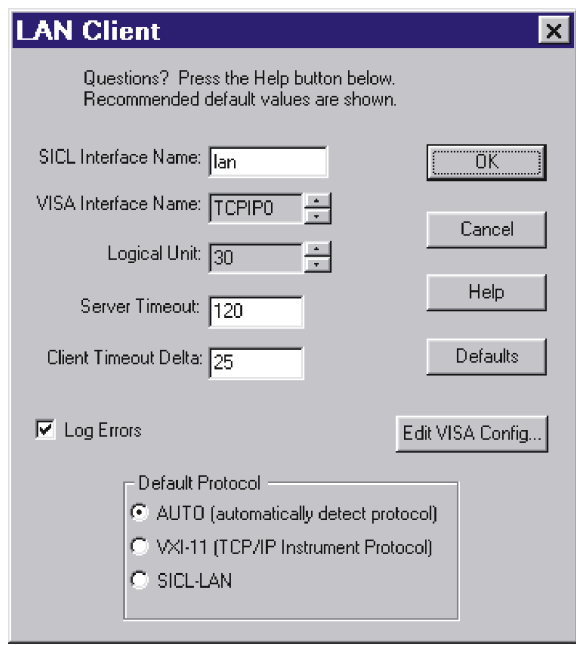

lan-client_4

5. Verify that any device listed in the **TCPIP devices** window, shown in Figure 16, is turned on and that the IP address listed is correct. If any device address is incorrect or the instrument is off or no longer present on the interface:
 - a. Click on the device address listed in the TCPIP0 INSTR devices present section of the **TCPIP devices** window.
 - b. Click the **Remove device** button.

Figure 16 **TCPIP devices**

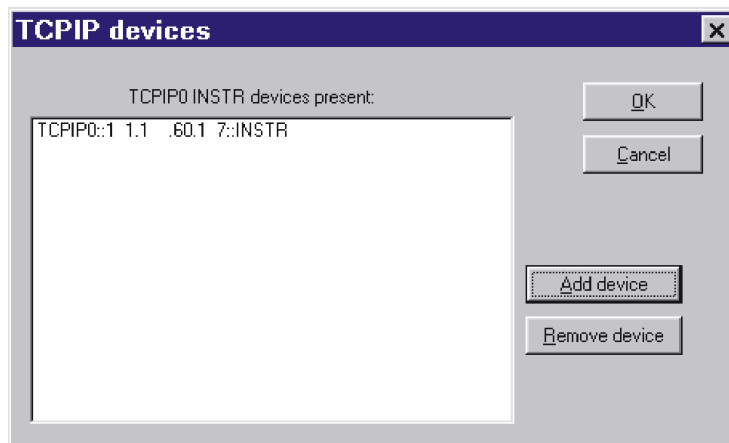

lan-client_8

6. Click the **OK** button on successive forms to back out of the IO Config program.
- If communication problems persist, you can edit the Hosts file using the following procedure:
1. Open the Hosts file using a text editor, such as Notepad.
 2. Write the IP address for the signal generator and spectrum analyzer at the bottom of the file.
(Refer to the example of a hosts file below)
 3. Save the file to C:\WINNT\System32\drivers\etc, and close the text editor.

NOTE For Windows 98 and Windows Me you must create the Hosts file. Copy the following example of a hosts file and save it in the C:\Windows directory.

WARNING Do not use **Save As** when saving the Hosts file. The Hosts file does not have a file extension!

The following is an example of a hosts file (for Windows 98) with references to the signal generator and spectrum analyzer IP addresses.

```
# Copyright (c) 1998 Microsoft Corp.
#
# This is a sample HOSTS file used by Microsoft TCP/IP stack for Windows98
#
# This file contains the mappings of IP addresses to host names. Each
# entry should be kept on an individual line. The IP address should
# be placed in the first column followed by the corresponding host name.
# The IP address and the host name should be separated by at least one
# space.
# Additionally, comments (such as these) may be inserted on individual
# lines or following the machine name denoted by a '#' symbol.
#
# For example:
#
# 102.54.94.97 rhino.acme.com # source server
# 38.25.63.10 x.acme.com # x client host
127.xxx.0.0.xxx localhost
141.xxx.60.xxx signal generator hostname
141.xxx.40.xxx spectrum analyzer hostname
```

Setting Up the LAN Interface

LAN Interface Requirements

- A local area network (LAN) interface card
Most computers have a LAN interface card as part of the hardware configuration. If your computer does not have a LAN card, you can get one from Agilent Technologies or another manufacturer.
- The Agilent IO libraries
See "Installing Agilent IO Libraries" on page 3 for details.
- A 10BASE-T cable (to connect the PC to the LAN)


The LAN and its associated interface protocols are defined in the IEEE standard 802. For information on this standard, refer to the IEEE website.

Configuring the LAN Interface

1. Run the IO Config program, located on the computer in the **Start > Programs > Agilent IO Libraries** directory. The IO Config - Agilent IO Libraries Configuration window (Figure 17) opens.
2. In the **Available Interface Types** list box, click **TCPIP LAN Client (LAN Instruments)**.


NOTE Because the list of interface types depends on the interfaces installed on your PC, the list you see may differ from the list in Figure 17. Simply make the selections described in this procedure.

Figure 17 LAN IO Config

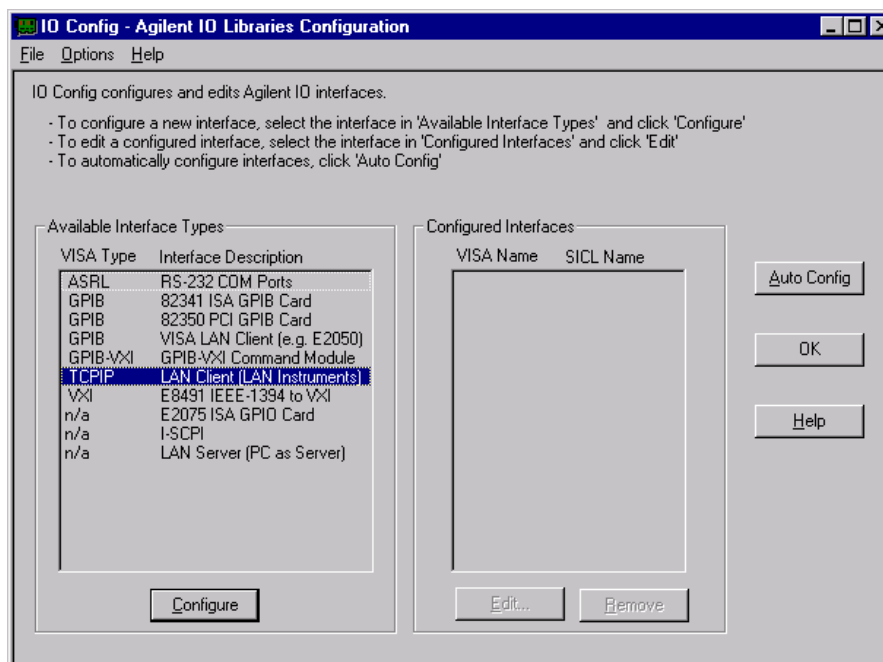

3. Click **Configure**. The LAN Client window appears, as shown in Figure 18.
4. In the **Default Protocol** area, select **AUTO (automatically detect protocol)**.
5. In the **LAN Client** window, click **OK**.
6. To finish the LAN interface configuration, click **OK** in the **IO Config - Agilent IO Libraries Configuration** window.

Figure 18 **LAN Client**

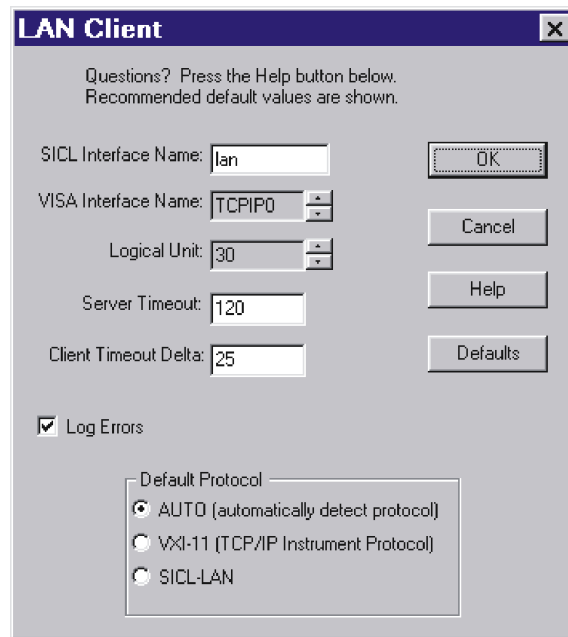

Connecting the LAN Interface

- Connect the PC to the LAN and the signal generator to the LAN using 10BASE-T cables, as shown in Figure 19.
- (Enhanced Multitone, Option 408 only) Connect the PC, signal generator, and spectrum analyzer to the LAN using 10BASE-T cables, as shown in Figure 20.

Figure 19 Connecting the LAN Interface to an Existing Network


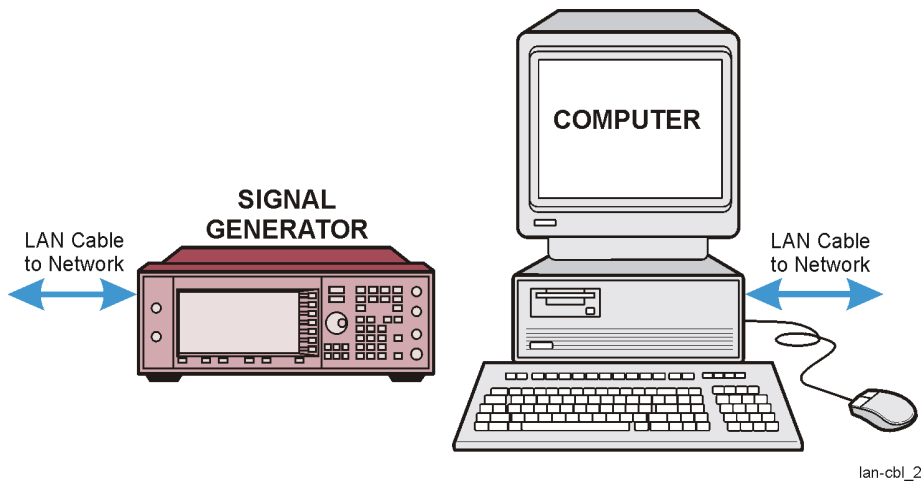


Figure 20 Connecting the LAN Interface to an Existing Network (Enhanced Multitone, Option 408 only)

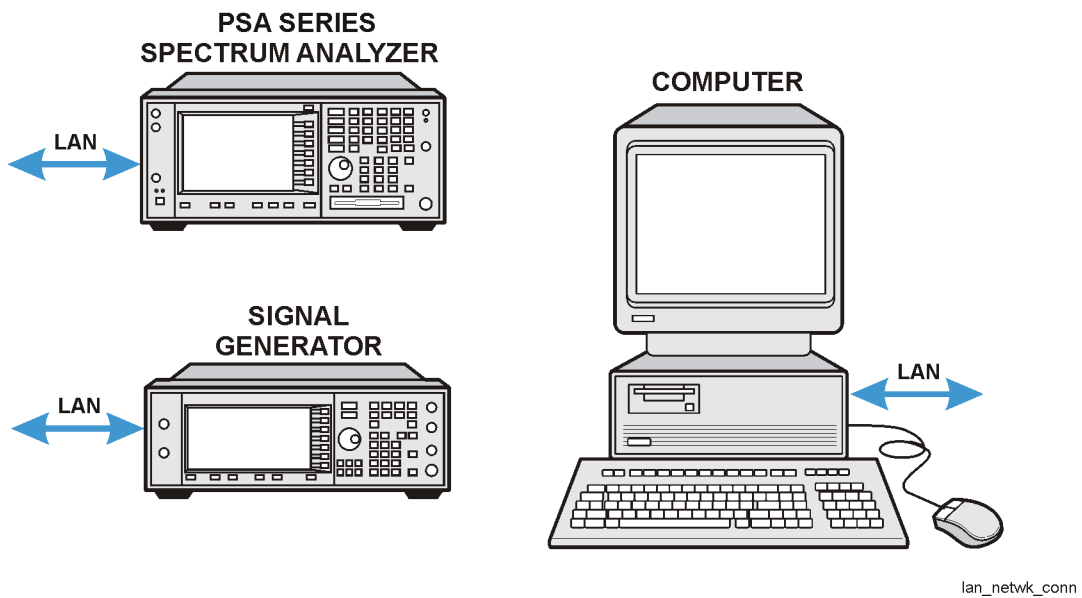


Verifying LAN Communication

To verify LAN communication, use the ping program available on your computer from **Start > Programs > MSDOS Command Prompt**.

At the C:\> prompt, enter `ping <IP address>` (where <IP address> is the IP address of the signal generator). If the ping program response is a “Reply” as shown in Figure 21, the IP address is correct, and communication can be established between the PC and the signal generator. If not, refer to “Troubleshooting LAN Interface Problems.”

Figure 21 **Ping Program**

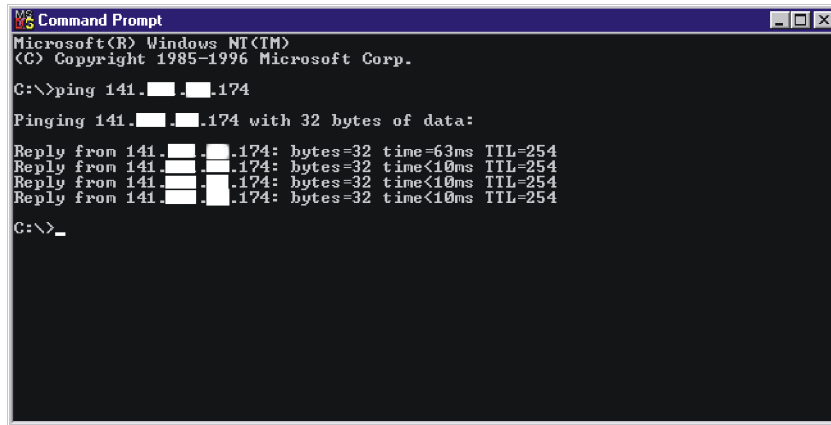

```

Command Prompt
Microsoft(R) Windows NT(TM)
(C) Copyright 1985-1996 Microsoft Corp.
C:\>ping 141.174
Pinging 141.174 with 32 bytes of data:
Reply from 141.174: bytes=32 time=63ms TTL=254
Reply from 141.174: bytes=32 time<10ms TTL=254
Reply from 141.174: bytes=32 time<10ms TTL=254
Reply from 141.174: bytes=32 time<10ms TTL=254
C:\>_
    
```

Troubleshooting LAN Interface Problems


1. Ensure that the IP address of the signal generator is the same as that used in the ping program.
2. Ensure the LAN used is not a crossover cable.
3. If the ping program responds with a Request timed out message, the IP address might not be correct. Contact your IT department for further help.

Communication Time Problems

If you experience a long delay (a minute or more) when trying to run the software, there might be an unresolved instrument IP address configured in the IO Config program. An unresolved IP address can affect communication. To check for this, perform the following steps:

1. Go to "Configuring the LAN Interface" on page 20 and perform steps 1 through 5. Leave the **IO Config-IO Libraries Configuration** window (shown in Figure 22) open.
2. Click **TCPIP0 lan > Edit > Edit Visa Config**.

Figure 22 Editing the Visa Configuration

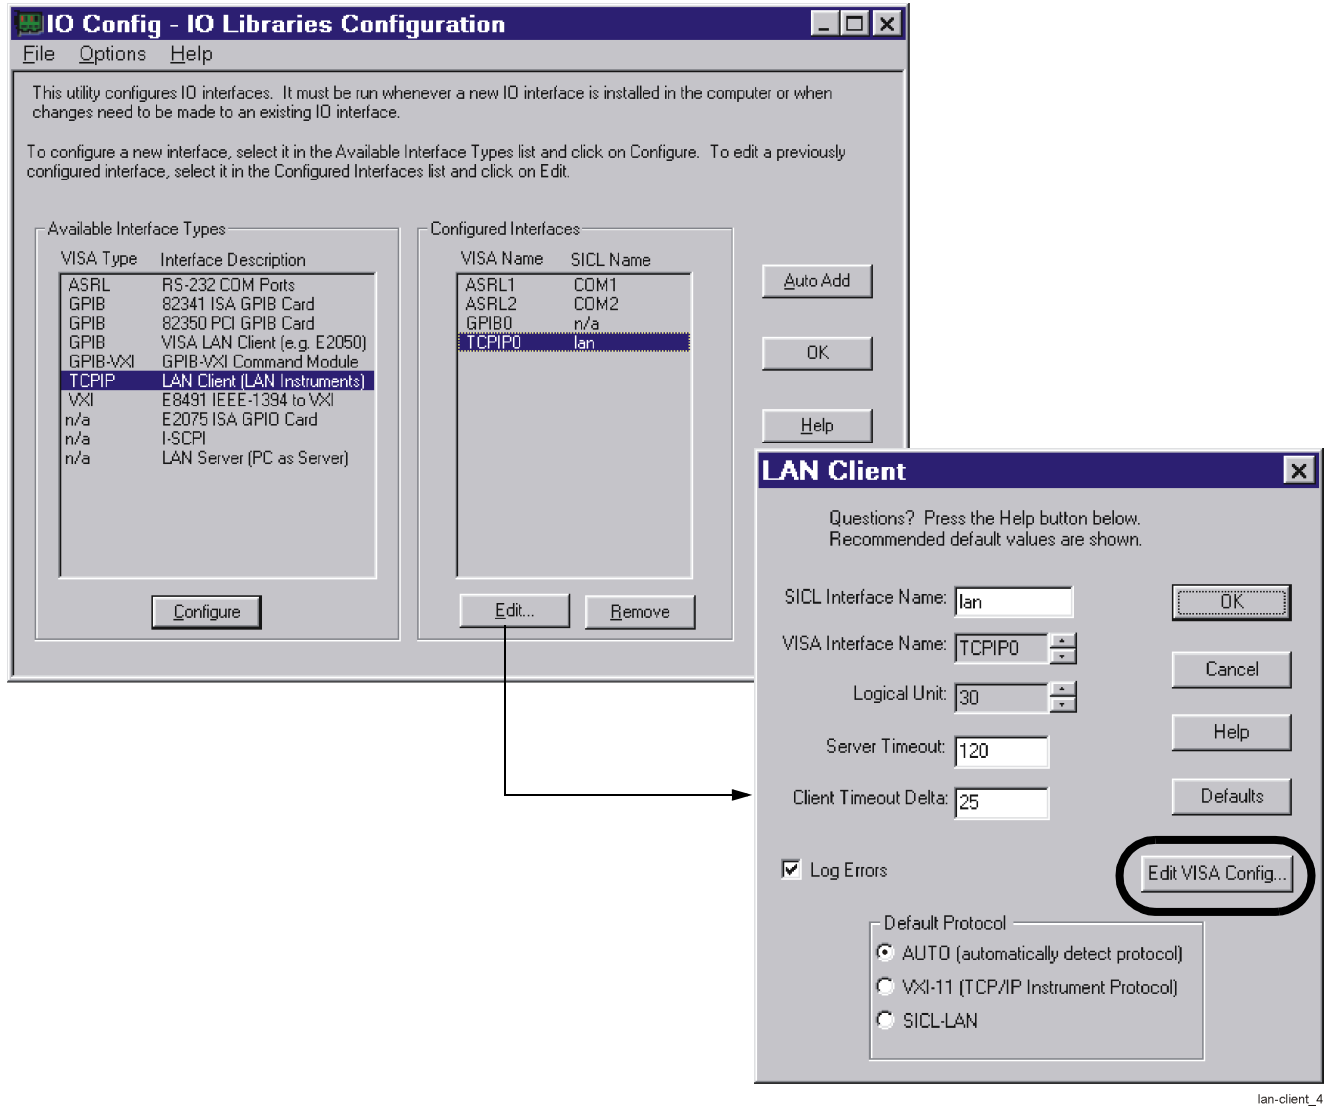

3. Select any devices present in the **TCPIP devices** window, shown in Figure 23, and click **Remove device**.
4. To back out of the IO Config program, click **OK** on successive forms.

Figure 23 **TCPIP devices**

