


Installation Note

Agilent E8257D/67D PSG Signal Generators
Add Option UNX (Ultra-Low Phase Noise Performance)
Kit Part Numbers: E8257DK-UNX and E8267DK-UNX

NOTE For the latest revision of this installation note, go to the following website:
<http://www.agilent.com/find/psg>



Part Number E8251-90309
Printed in USA October 2006

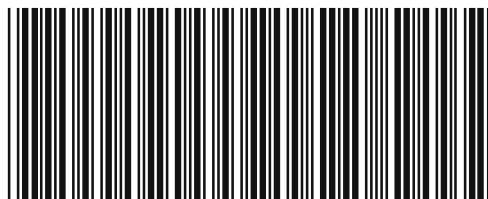

E8251-90309

Notice

The information contained in this document is subject to change without notice.

Agilent Technologies makes no warranty of any kind with regard to this material, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Agilent Technologies shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Add Option UNX (Ultra-Low Phase Noise Performance)

Kit Part Numbers: E8257DK-UNX and E8267DK-UNX

Product Affected:	E8257D/67D
Serial Numbers:	All
Options:	
To Be Performed By:	(X) Agilent Technologies Service Center (X) Personnel Qualified by Agilent Technologies (X) Customer
Estimated Installation Time:	2.0 hours
Estimated Verification Time:	2.0 hours

Introduction

This upgrade kit adds Option UNX (Ultra-Low Phase Noise Performance) to an E8257D (Analog) or E8267D (Vector) PSG Signal Generator. This kit applies to instruments that have either a standard reference assembly or Option UNR.

Installation includes the following major steps, starting on [page 5](#):

1. Check signal generator functionality.
2. Record A31 Motherboard version number.
3. Check firmware version and upgrade if <C.04.23.
4. Remove the outer and inner signal generator covers.
5. Remove the A32 10 MHz Crystal Oscillator (for instruments with Option UNR).
6. Install the A32 10 MHz Crystal Oscillator.
7. Install the A7 Reference assembly.
8. Activate Option UNX
9. Verify proper installation of Option UNX.
10. Re-assemble the signal generator.
11. Verify signal generator calibration.

Installation Kit Parts List

Item	Quantity	Description	Part Number
1	1	Installation Note	E8251-90309
2	2	Screw M3x0.5 8mm-LG	0515-0372
3	1	A32 10 MHz Crystal Oscillator	E8251-60409
4	1	A7 Reference Board (Option UNX)	E8251-60348
5	2	Inductor 470nH +/- 2%	9140-2044
6	3	Cable Tie	1400-0249
7	1	Termination-coaxial 50 ohm	1810-0118
8	1	Cable assy semi-rigid	E8251-20384
9	1	Entitlement Certificate	n/a

Tools Required

- TORX T-10 driver
- TORX T-15 driver
- TORX T-20 driver
- Needle-nose pliers

Safety Considerations

WARNING **Before you disassemble the signal generator, turn the power switch off and unplug the power cord. Failure to unplug the signal generator can result in personal injury.**

CAUTION Electrostatic discharge (ESD) can damage or destroy electronic components. All work on electronic assemblies should be performed at a static-safe workstation.

Check Signal Generator Functionality

Use the following procedure to confirm that the signal generator powers up and the internal check identifies no errors. The internal check evaluates the operation of the signal generator and returns an error message if it detects a problem.

NOTE When the signal generator is first connected to ac line power, the error message **ERROR 514, Reference Oven Cold** occurs, which causes both the **OVEN COLD** annunciator and the **ERR** annunciator to turn on.

After approximately five minutes, the **OVEN COLD** annunciator automatically clears, but the **ERR** annunciator remains on until all errors are cleared from the error queue.

1. Turn on the signal generator and let it warm up for at least five minutes.
2. Run the signal generator self-test by pressing **Utility > Instrument Info/Help Mode > Self Test > Run Complete Self Test**. Upon completion, a summary of the self-test will be displayed. Use the E8257D/67D PSG Service Guide, E8251-90359, to troubleshoot any failures detected by the test.

NOTE Some circuits may require up to 50 minutes to warm up before passing the self-test. If self-tests continue to fail after 50 minutes of warm up, troubleshoot the instrument.

3. Check to see if the **ERR** annunciator is on.
 - If the **ERR** annunciator is on, review the error messages in the error queue by pressing **Utility > Error Info**. The first page of error messages in the error queue appears in the display text area. (Refer to the signal generator error messages document for information about each error message.)

After resolving all problems causing errors, press **Clear Error Queue(s)**.
 - If the **ERR** annunciator is off, the signal generator functionality check has passed.

Record A31 Motherboard Version Number

1. Press **Utility > Instrument Info/Help Mode > Installed board info**.
2. Find the information for the Motherboard.
3. Write down the version number of the Motherboard.

Check Firmware Version and Upgrade if <C.04.23

1. Press **Utility > Instrument Info/Help Mode > Diagnostic Info**.
2. Find the firmware information.
3. If the version of firmware is <C.04.23, upgrade the firmware.

Remove the Outer and Inner Signal Generator Covers

Remove the Outer Cover

Refer to [Figure 1](#).

1. Disconnect the power cord.
2. Using a T-20 driver, loosen the two screws (1) and remove the strap handle (2).
3. Using a T-15 driver, remove the center screws (3) on the four rear-panel feet (4).
4. Remove the four bottom feet (5) from the cover by lifting the tab and sliding the foot toward the tab.
5. Place the signal generator on its side.
6. Tilt the signal generator forward and slide the outer cover (6) back to remove it from the frame.


Remove the Inner Top Cover

Refer to [Figure 2](#).

1. Using a T-10 driver, remove the screws (1) from the inner-top cover (2). There are twelve screws for E8257D and eleven screws for E8267D.
2. Remove the inner-top cover.

Figure 1


Outer Cover Removal

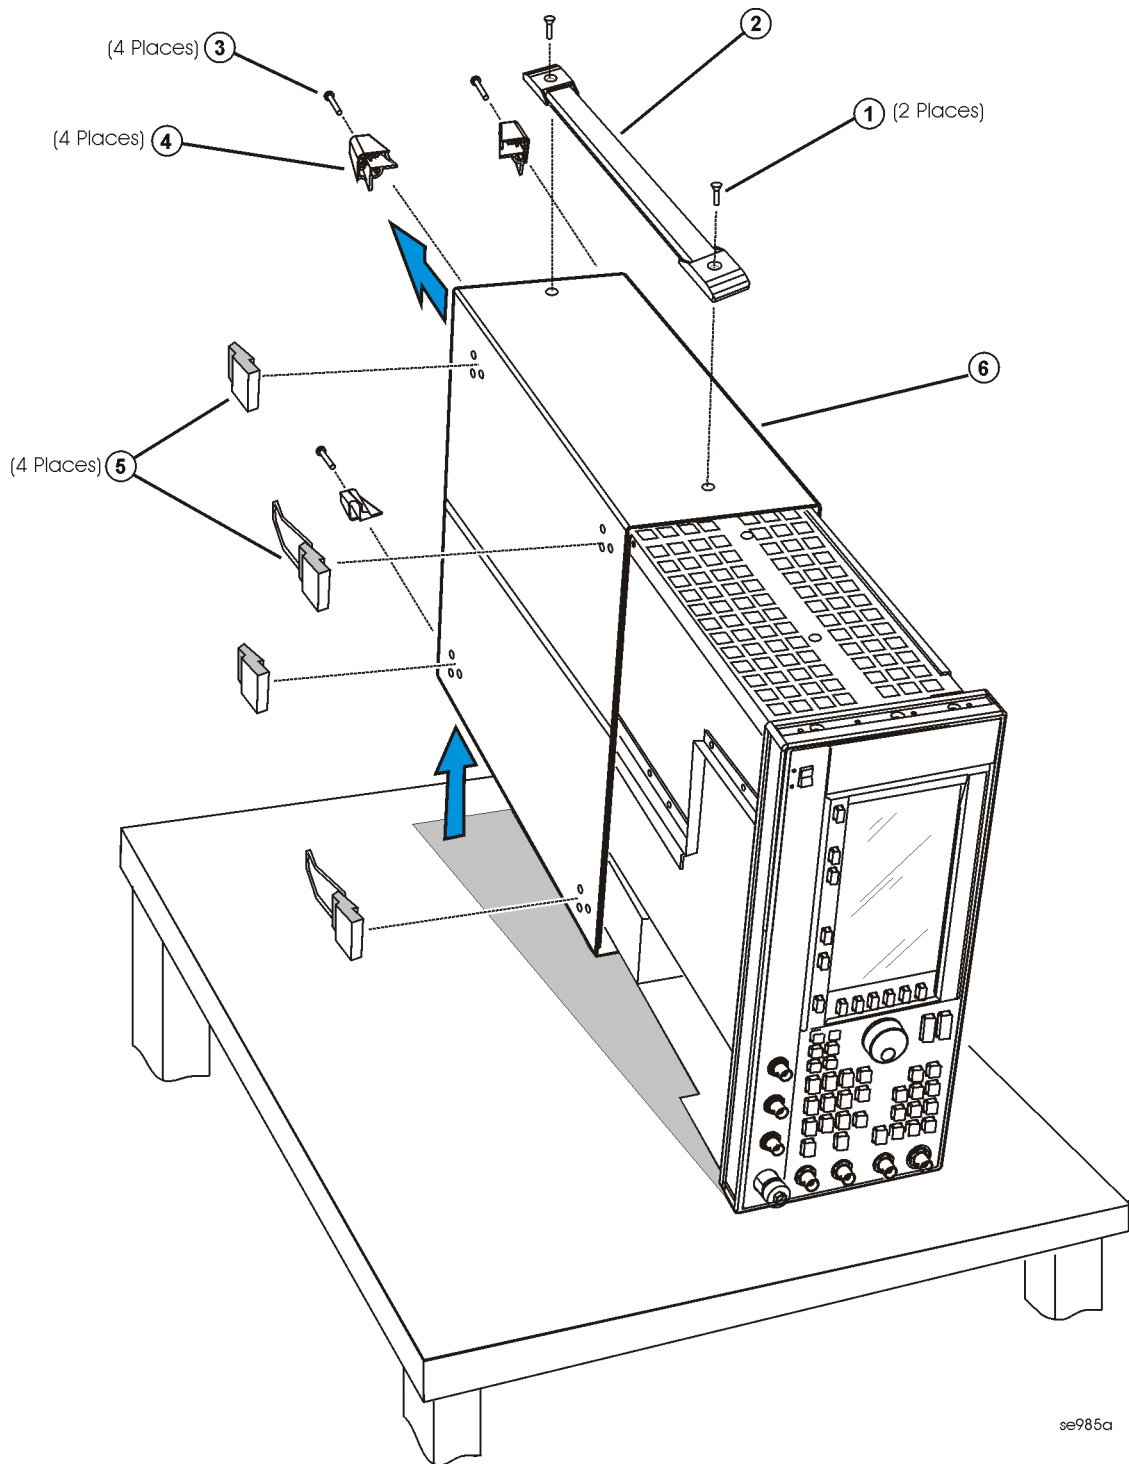

se985a

Figure 2

Inner Top Cover Removal

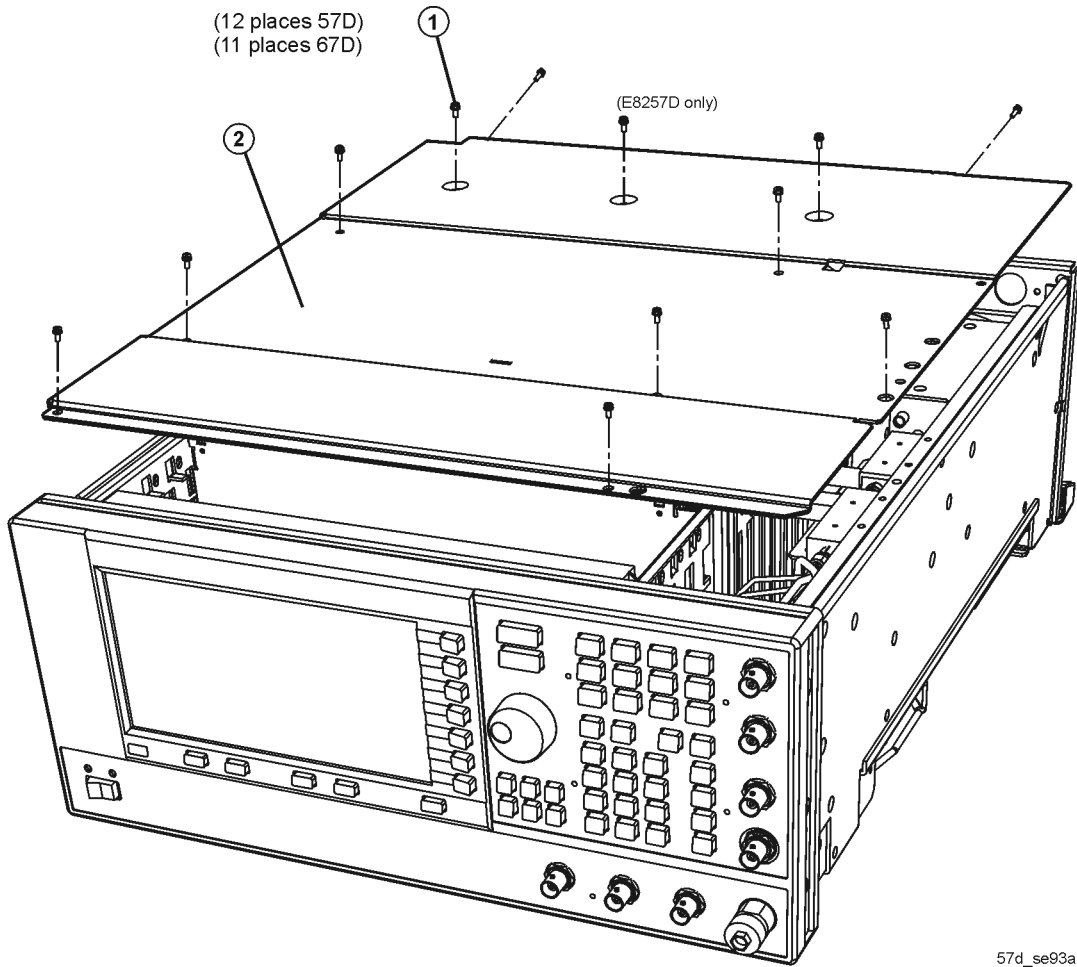

57d_se93a

Remove the A32 10 MHz Crystal Oscillator (For instruments with Option UNR)

Refer to [Figure 3](#) for this procedure.

1. Position the signal generator with the rear panel facing you.
2. Using the needle-nose pliers, disconnect the W47 flexible cable (A31 Motherboard J1041) from A32J2.
3. Using the needle-nose pliers, disconnect the W48 flexible cable (10 MHz EFC) from A32J1.
4. Disconnect the A32W1 bias cable from the A21 Rear Panel Interface P2.
5. Using the T-10 driver, remove the three screws (1) that attach the A32 10 MHz Crystal Oscillator to the rear panel.
6. Remove the A32 10 MHz Crystal Oscillator.

Install the A32 10 MHz Crystal Oscillator


NOTE W47 may be shipped disconnected from the A32 10 MHz Crystal Oscillator. If it is disconnected, connect one end of the cable to A32J2 before you start the installation procedure.

Refer to [Figure 3](#).

1. Position the signal generator with the rear panel facing you.
2. Using a T-10 driver, install the three screws (1) to secure the A32 10 MHz Crystal Oscillator to the rear panel.
3. Connect A32W1 bias cable to the A21 Rear Panel Interface Board, A21P2.
4. Using needle-nose pliers, connect W48 flexible cable from 10 MHz EFC (rear panel connector) to A32J1.
5. Using needle-nose pliers, connect W47 flexible cable to J1041 of the A31 Motherboard.

Figure 3

A32 10 MHz Crystal Oscillator

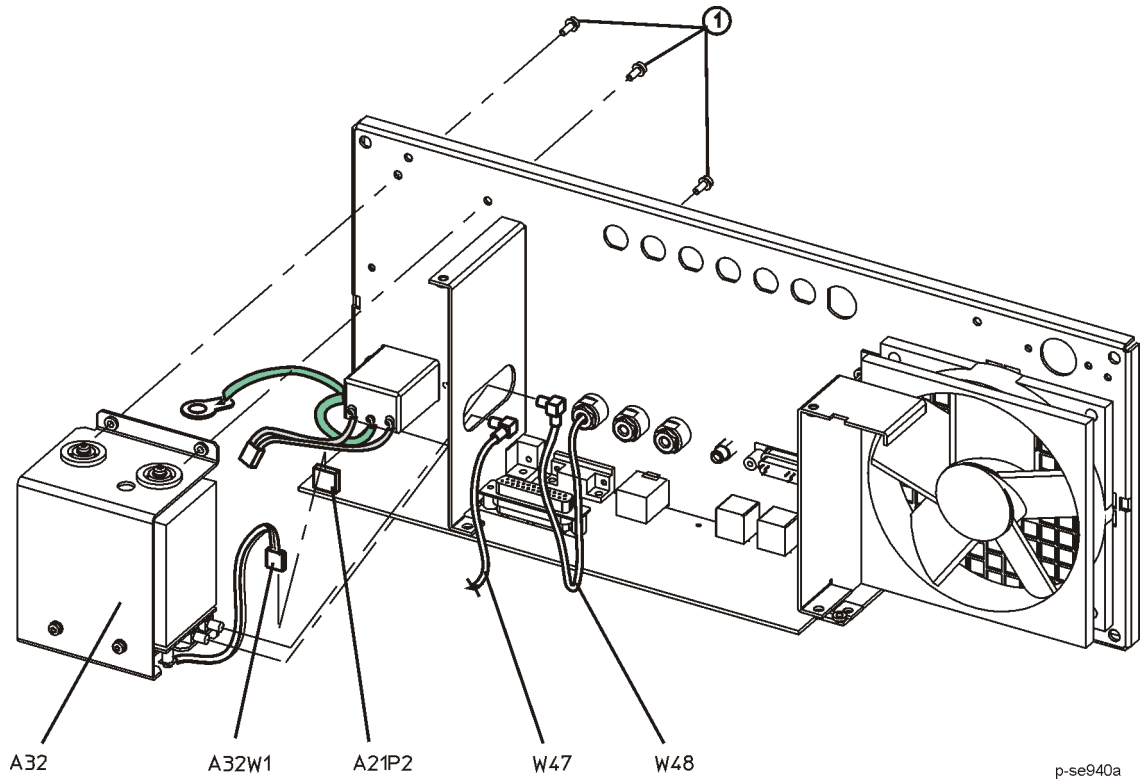


For Instruments with Motherboard Versions Less than A0101, replace A31L400 (E8257D) or A31L44 (E8267D)

Refer to [Figure 4](#).

1. Position the signal generator with the A31 Motherboard facing you.
2. Remove A31L400 (E8257D) or A31L44 (E8267D).
3. Install the new inductor, provided in this kit.

NOTE There is a spare replacement inductor provided in this kit.

Figure 4 **A31L400 and A31L44**

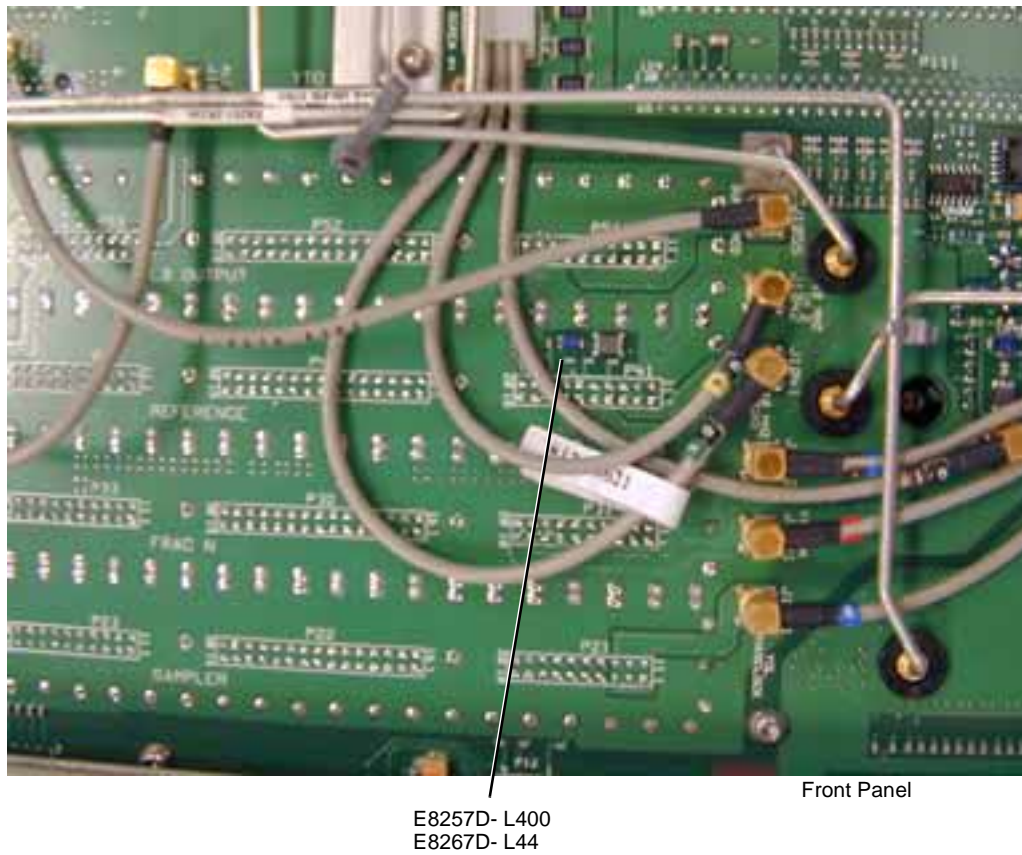


Install Cable and 50 ohm Termination

Refer to [Figure 5](#).

1. Position the signal generator with the front panel facing you.
2. Lift the retention levers and disconnect the A5 Sampler, A6 Frac-N, A7 Reference, and A8 Output boards from the A31 Motherboard.
3. Lift the boards out of the slots.
4. Position the signal generator with the A31 Motherboard facing away from you and the RF deck on top.
5. Using your hand or a pair of pliers, remove the W39 cable retainer tab.
6. Slightly pull W39 away from the A31 Motherboard.
7. Install W122 (E8251-20384, provided in this kit). Slide it under W46 and W39 and insert it into the 1GHz Ref Out.
8. Reattach W39 to the A31 Motherboard.
9. Using the cable ties provided in this kit, tie W122 to W46 and W39.
10. Position the signal generator with the front panel facing you.
11. Re-install the A5 Sampler, A6 Frac-N, and A8 Output boards.

Figure 5

W122 Installation

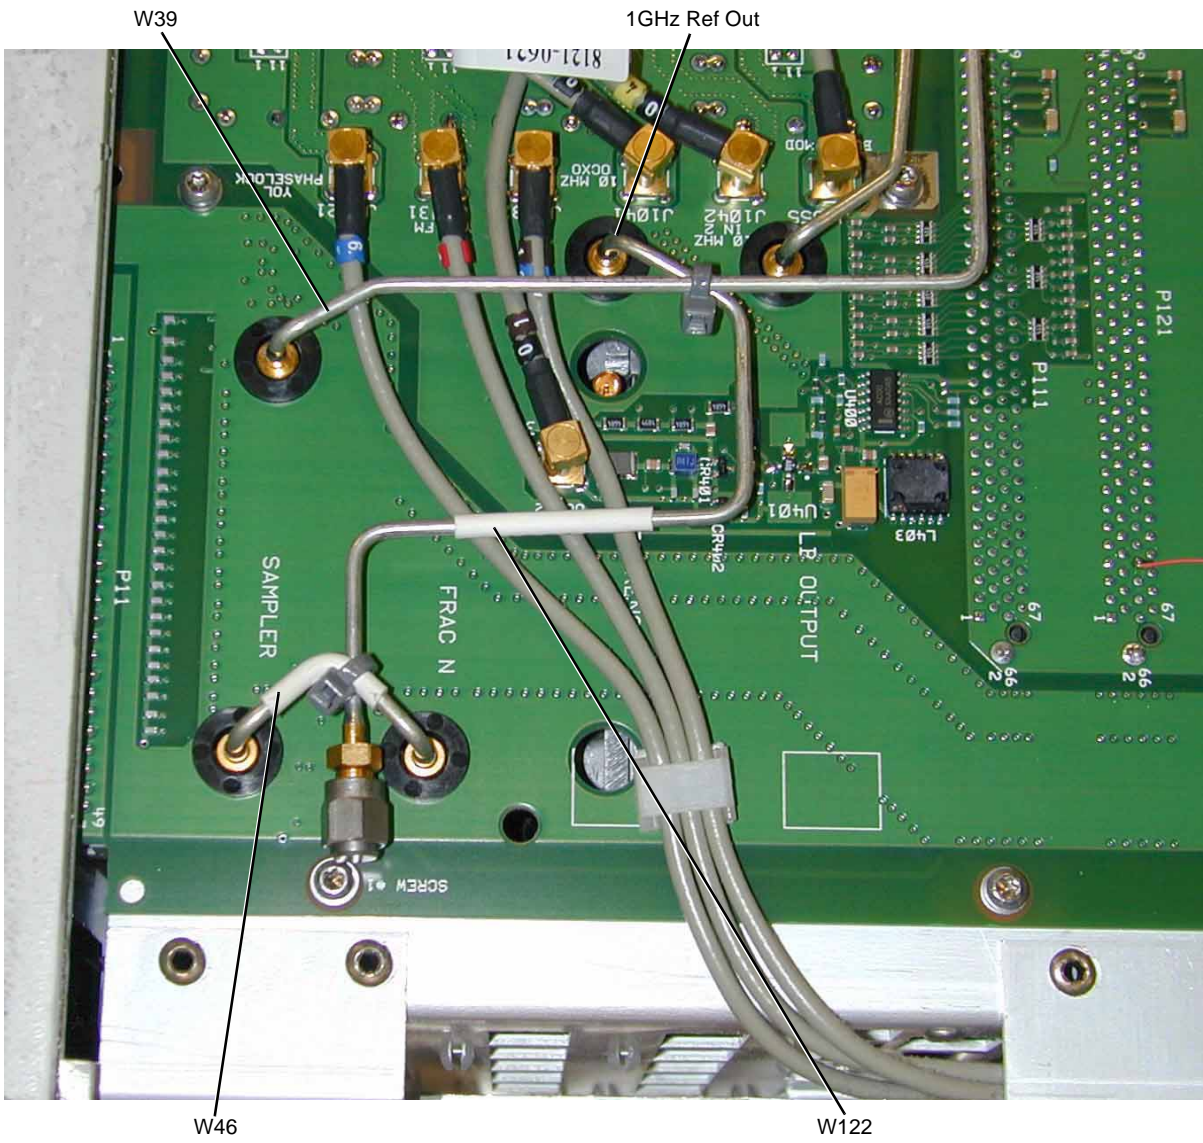


Install the New A7 Reference Board

Refer to [Figure 6](#).

1. Position the signal generator with the front panel facing you.
2. Install the new A7 Reference board into the empty slot.

Figure 6 **A7 Reference**

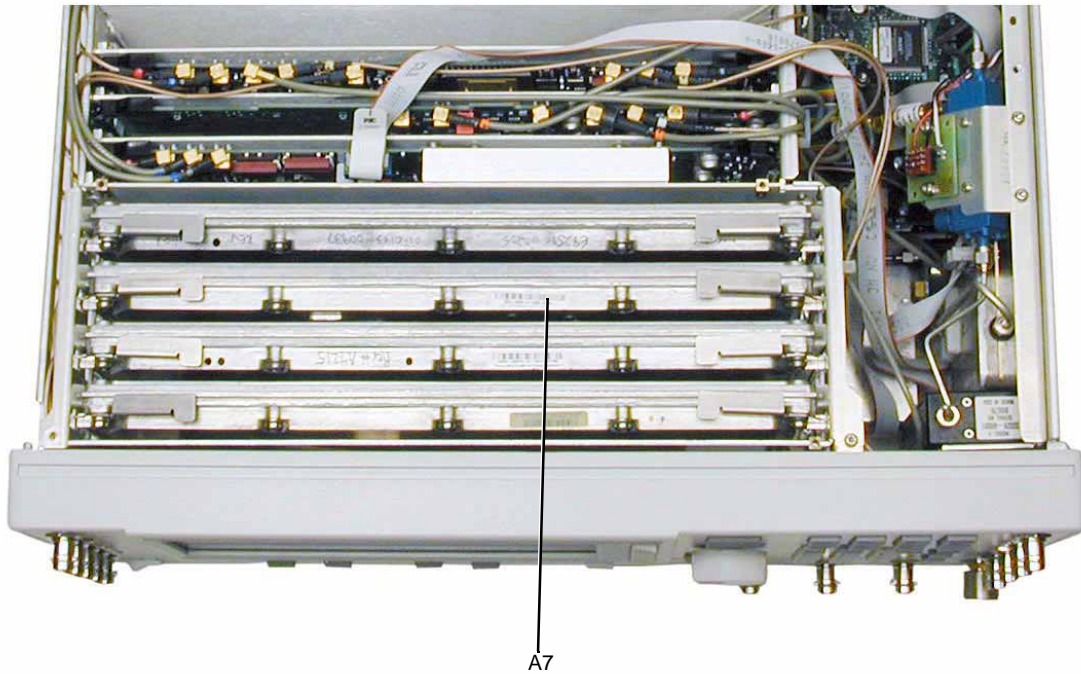

p2_a5

Activate Option UNX

1. Follow the instructions on the Entitlement Certificate.

Verify Proper Installation of Option UNX

1. Turn the instrument on and allow it to warm up for 5 minutes.
2. Press: **Utility > Instrument Info/Help Info > Options Info**.
3. Make sure Option UNX is listed.

NOTE If you enable an option that does not have the required hardware installed, the menus for that option will be activated but the option *cannot* operate.

Re-Assemble the Signal Generator

Refer to [Figure 1](#) and [Figure 2](#).

1. Turn the signal generator off and unplug it.
2. Reinstall the inner and outer instrument covers by reversing the order for removal.
3. Torque all T-10 screws to 9 in-lbs.
4. Torque all T-15 and T-20 screws to 21 in-lbs.

Verify Signal Generator Calibration

1. Turn the signal generator on and allow it to warm up for 30 minutes.
2. Perform the following adjustment/performance tests to verify signal generator calibration. Refer to the PSG Family Signal Generators Calibration Software:
 - a. ADC Calibration
 - b. Self Tests
 - c. Harmonic Spurious
 - d. Sub-Harmonic Spurious
 - e. Non-Harmonic Spurious
 - f. Single-Sidedband Phase Noise

