

Nways MAS/MRS/MSS/MSSC Library



# Configuration Program User's Guide for Nways Multiprotocol Access, Routing and Switched Services

*Fourth Edition*



Nways MAS/MRS/MSS/MSSC Library



# Configuration Program User's Guide for Nways Multiprotocol Access, Routing and Switched Services

*Fourth Edition*

**Note**

Before using this information and the product it supports, be sure to read the general information under "Notices" on page iii.

**Fourth Edition (June 1998)**

This edition applies to Version 3 Release 1 of the IBM Nways Multiprotocol Access Services, Version 3.1 of the IBM Nways Multiprotocol Routing Services, Version 2.1 of the IBM Nways Multiprotocol Switched Services, and Version 1.0 of the MSS Family Clients, and subsequent releases until replaced.

Order publications through your IBM representative or the IBM branch office serving your locality. Publications are not stocked at the address given below.

IBM welcomes your comments. A form for readers' comments is provided at the back of this publication. If the forms have been removed, you may address your comments to:

International Business Machines Corporation  
Design & Information Development  
Department CGF  
PO Box 12195  
RESEARCH TRIANGLE PARK NC 27709-9990  
U.S.A.

When you send information to IBM, you grant IBM a nonexclusive right to use or distribute the information in any way it believes appropriate without incurring any obligation to you.

© **Copyright International Business Machines Corporation 1996, 1998. All rights reserved.**

Note to U.S. Government Users — Documentation related to restricted rights — Use, duplication or disclosure is subject to restrictions set forth in GSA ADP Schedule Contract with IBM Corp.

---

## Notices

References in this publication to IBM products, programs, or service do not imply that IBM intends to make them available in all countries in which IBM operates. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any of the intellectual property rights of IBM may be used instead of the IBM product, program, or service. The evaluation and verification of operation in conjunction with other products, except those expressly designated by IBM, are the responsibility of the user.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

IBM Director of Licensing  
IBM Corporation  
500 Columbus Avenue,  
Thornwood NY 10594 USA.

The licensed program described in this document and all licensed material available for it are provided by IBM under terms of the IBM Customer Agreement.

This document is not intended for production use and is furnished as is without any warranty of any kind, and all warranties are hereby disclaimed including the warranties of merchantability and fitness for a particular purpose.

---

## Trademarks

The following terms are trademarks of the IBM Corporation in the United States or other countries or both:

AIX	Nways	RS/6000
AIX/6000	Operating System/2	SystemView
NetView	OS/2	

UNIX is a registered trademark in the United States and other countries licensed exclusively through X/Open Company Limited.

Microsoft, Windows, Windows NT, and the Windows 95 logo are trademarks or registered trademarks of Microsoft Corporation.

Other company, product, and service names may be trademarks or service marks of others.



---

## About This Manual

This manual explains how to install and use the Configuration Program on various platforms to configure an Nways device for your network.

This manual assumes a knowledge of networking concepts.

---

## Who Should Read This Manual

The intended user of this book is the person who will configure an Nways device using the configuration program.

---

## How This Manual Is Organized

This manual is divided into the following chapters:

- “Chapter 1. Installing the Configuration Program” on page 1, which describes the installation requirements for the IBM Nways Multiprotocol Access Services, Multiprotocol Routing Services, Multiprotocol Switched Services, and Multiprotocol Switched Services Clients Configuration Program and how to install the configuration program.
- “Chapter 2. Starting the Configuration Program” on page 5, which describes how to start the configuration program and some operational considerations.
- “Chapter 3. Using the Configuration Program” on page 9, which describes how to use the configuration program, some of the navigational features of the program, and an overview of the configuration process.





---

# Contents

<b>Notices</b> . . . . .	iii
Trademarks. . . . .	iii
<b>About This Manual</b> . . . . .	v
Who Should Read This Manual . . . . .	v
How This Manual Is Organized . . . . .	v
<b>Benefits of the Configuration Program</b> . . . . .	ix
<b>Library Ordering Information.</b> . . . . .	xi
Obtaining Softcopy Information . . . . .	xi
System Library Subscription Service. . . . .	xi
<b>Summary of Changes to Fourth Edition</b> . . . . .	xiii
Changes to This Manual . . . . .	xiii
Changes to the Configuration Program Since the Third Edition . . . . .	xiii
<b>Chapter 1. Installing the Configuration Program</b> . . . . .	1
Hardware and Software Requirements for the Configuration Program . . . . .	1
Obtaining the Configuration Program Electronically . . . . .	2
Before Installing the Configuration Program . . . . .	2
Procedures for Installing the Configuration Program . . . . .	2
<b>Chapter 2. Starting the Configuration Program.</b> . . . . .	5
Prerequisites . . . . .	5
Font Requirements for AIX . . . . .	5
Setting Up an IBM X-station for the Configuration Program . . . . .	5
Starting the Configuration Program . . . . .	6
Starting the Configuration Program on AIX . . . . .	6
Starting the Configuration Program with AIX NetView/6000 . . . . .	6
Starting the Configuration Program on OS/2 or Windows . . . . .	7
After the Configuration Program Starts . . . . .	7
Migrating Previous Level Configuration Files. . . . .	8
<b>Chapter 3. Using the Configuration Program</b> . . . . .	9
Before Using the Configuration Program . . . . .	9
Understanding the Navigation and Configuration Windows . . . . .	9
The Navigation Window . . . . .	11
The Configuration Window . . . . .	12
Navigating Through the Configuration Program. . . . .	13
Using the Mouse . . . . .	13
Using the Configure Menu . . . . .	14
Establishing Communications Between the Configuration Program and a Router . . . . .	15
Setting Up the Router . . . . .	15
Setting Up the Configuration Program . . . . .	16
Using the Command Line Facility. . . . .	17
Syntax of the CFG Command . . . . .	17
Creating and Using ASCII files. . . . .	27
Understanding the ASCII Functions . . . . .	28
Creating an ASCII File. . . . .	28
Reading an ASCII File . . . . .	29
Converting from ASCII to Binary . . . . .	30

Converting from Binary to ASCII . . . . .	30
Interpreting an ASCII File. . . . .	30
Processing ASCII Files Using the Command Line Facility . . . . .	34
Using an ASCII File as a Configuration Template . . . . .	36
Understanding How the Configuration Program Validates ASCII Files . . . . .	37
Configuring a Router Using the Configuration Program . . . . .	38
Configuring a New Router . . . . .	38
Changing an Existing Configuration . . . . .	38
Using Guided Configuration . . . . .	39
Correcting Configuration Program Problems . . . . .	39
Removing the Configuration Program . . . . .	40
<b>Index . . . . .</b>	<b>41</b>
<b>Readers' Comments — We'd Like to Hear from You. . . . .</b>	<b>43</b>

---

## Benefits of the Configuration Program

The Configuration Program allows you to create configurations for the various models of devices using a point and click interface. Some of the features of the configuration program that make configuring a device easier than using the command line interface are:

- The ability to save a configuration for later completion
- The ability to retrieve an existing configuration from a device to either update or use as a template for another device
- The ability to use any configuration in the database as a template for a different device
- The ability to configure the protocols in any order unless there are inter-protocol dependencies
- The ability to group configurations together in configuration databases that reflect your network topology
- The ability to upgrade configurations from a configuration database created with previous versions of the configuration program to the current format
- The ability to add comments to the configuration for additional documentation
- The ability to verify the completeness of a configuration before loading that configuration to a device
- Guided configuration that describes procedures to configure protocols
- Context-sensitive helps for panels and parameters
- The ability to save configurations as backups or have multiple versions for the same router
- The point-and-click graphical interface
- A command line facility that can automate many tasks including reading, writing, sending, and retrieving configurations
- The ability to create, edit, and read ASCII-formatted configuration files.



---

## Library Ordering Information

---

### Obtaining Softcopy Information

Softcopy BookManager READ library information is available for many of the IBM 2210, IBM 2216 and IBM 8210 publications in the *IBM Networking Systems Softcopy Collection Kit*. To place a single order for the CD-ROM, use form number SK2T-6012. To place a single order for the 3480 cartridge, use form number SK2T-6013.

Yearly subscriptions to the *IBM Networking Systems Softcopy Collection Kit*, product number 5636-PUB, are available through your branch office representative. Order feature code 2003 and media code 5003 for CD-ROM format. Order feature code 2004 and media code 5004 for 3480 cartridge format.

To order the CD-ROM that contains the 2210-related publications, use form number SK2T-0404.

To order the CD-ROM that contains the 2216-related publications, use form number SK2T-0405.

To order the CD-ROM that contains the 8210-related publications, use form number SK2T-0378.

To order the CD-ROM that contains the MSS Client-related publications, use form number SK2T-0425.

---

### System Library Subscription Service

The IBM 2210 publications are available via the System Library Subscription Service (SLSS). Use machine type 2210 and program number 5801-ARR to receive 2210 publications.

The IBM 2216 publications are available via the System Library Subscription Service (SLSS). Use machine type 2216 and program number 5765-D47 to receive 2216 publications.

The IBM 8210 publications are available via the System Library Subscription Service (SLSS). Use machine type 8210 and program number 5765-368 to receive 8210 publications.



---

# Summary of Changes to Fourth Edition

---

## Changes to This Manual

- Various descriptions have been changed to reflect changes in configuration program.

Technical changes and additions are indicated by a vertical line (|) to the left of the change.

---

## Changes to the Configuration Program Since the Third Edition

The following changes were made to the configuration program since the last edition of this manual:

### Configuration Migration

Configuration files from previous releases cannot be read by this version of the configuration program. However, there is a conversion tool that will convert the older .CDB format configuration files to the newer, .CSF format configuration files.

### Configuration Files

Configuration files now have an extension of .CSF and are stored in configuration storage directories (CSD). Each file is a complete configuration. The dialogs that deal with configuration files appear similar to the previous configuration dialogs, but are dealing with files rather than configurations within a file.

### Help System

The configuration program now uses the help system native to the operating system on which the program is running.

### Requirements

The hardware and software requirements for the configuration program have changed.

### Enable Button in Interface Lists

The previous enable button on an interface list has been replaced with a field that presents an enable/disable radio choice pair when selected.

### Appearance

The appearance and color of menus, items, and panels will be slightly different on the various operating systems.

### Fonts and Colors

Changing fonts and colors is no longer supported by the configuration program. However, you can use the various operating system functions to make those changes.

### File Dialogs

File dialogs for the various save menus are consistent with standard file dialogs for the operating systems.





# Chapter 1. Installing the Configuration Program

This chapter describes the minimum requirements and the procedure for installing and starting the IBM Nways Multiprotocol Access Services, Multiprotocol Routing Services, Multiprotocol Switched Services, and Multiprotocol Switched Services Clients Configuration Program.

**Attention:** Before proceeding, read the README file to obtain the latest information about requirements and any changes to the installation procedures.

## Hardware and Software Requirements for the Configuration Program

Table 1 lists the minimum requirements for the operating systems supported by the configuration program.

Table 1. Configuration Program Requirements for Supported Operating Systems

Requirement	IBM AIX	IBM Operating System/2	Microsoft Windows 95 or Windows NT
<b>Workstation</b>	RS/6000 Model 250/410 or better with minimum 80Mhz CPU	IBM PC-compatible with Intel Pentium** 166MHz or higher processor (see Note 1)	IBM PC-compatible with Intel Pentium 166MHz or higher processor (see Note 1)
<b>RAM (minimum)</b>	64 MB	48 MB	48 MB
<b>CD-ROM</b>	yes	yes	yes
<b>Free Disk Space</b>	15 MB	15 MB	15 MB
	Additionally, you will need 1 to 3 MB for each configuration file.	Additionally, you will need 1 to 3 MB for each configuration file.	Additionally, you will need 1 to 3 MB for each configuration file.
<b>Swapper Size</b>	N/A	10 MB	N/A
<b>Display (minimum)</b>	Graphics (1024 x 768 x 256 colors)	SVGA (1024 x 768 x 256 colors)	SVGA (1024 x 768 x 256 colors)
<b>Mouse</b>	3-button	2-button (see Note 2)	2-button (see Note 2)
<b>Software</b>	AIX for RS/6000 Version 4.1.5 or higher AIXWindows Environment/6000	OS/2 3.0 or higher  IBM TCP/IP 1.2.1 for OS/2 or higher	Microsoft Windows 95 or Windows NT

**Notes:**

1. More memory and better processors will improve the program's performance.
2. Functionally equivalent to a 3-button mouse.
3. You must make sure that TCP/IP is **installed** and **running** before using the "Single Send or Retrieve" or "Multiple Send or Retrieve" functions. On MS Windows platforms, the Configuration Program will be hung if TCP/IP is not installed and running.

---

## Obtaining the Configuration Program Electronically

You can obtain the configuration program electronically, from <http://www.networking.ibm.com/productdir>, where *productdir* is:

- **220/220fix.html** for the Multiprotocol Routing Services
- **216/216fix.html** for the Multiprotocol Access Services

For the Multiprotocol Switched Services or Multiprotocol Switched Services Clients versions, you can access the code at <http://www.networking.ibm.com/nes/neshome.html>.

---

## Before Installing the Configuration Program

If you received the configuration program zipped diskette images electronically, you must first create the program diskettes as follows:

1. Download the program files to your workstation.
2. At the appropriate command prompt, enter **PKUNZIP filename d:** where *filename* is the name of the file you are expanding and *d* is the diskette drive that contains a blank diskette.
3. Repeat step 2 until you have expanded all of the files.
4. Continue with "Procedures for Installing the Configuration Program".

## Procedures for Installing the Configuration Program

The procedure you use for installing the configuration program depends on the operating system under which the program will run. Table 2 on page 3 describes the steps you take to install the configuration program, based on your operating system.

Before installing the configuration program, make sure that you have write access to the directory in which you are installing the configuration program. The installation process writes program files to the directory during installation and the configuration program writes information to the directory while it is running.

From Table 2 on page 3, select the installation procedure that fits your operating system.

Table 2. Installation Procedures

Operating System	Procedure						
<p><b>AIX</b></p>	<ol style="list-style-type: none"> <li>1. Ensure you are logged on as the “root” user. (The <b>Whoami</b> command will show root at the command prompt.) If not, enter <b>SU root</b>.</li> <li>2. Insert the CD labeled <i>IBM Nways Multiprotocol Access Services or Multiprotocol Routing Services or Multiprotocol Switched Services Configuration Program</i> into your CD-ROM drive.</li> <li>3. Mount the CD-ROM.</li> <li>4. Make a directory in which you will copy the installation program.</li> <li>5. Change to the directory you created using the <b>cd</b> command.</li> <li>6. Copy the installation program from the <i>config/aix/pgmname</i> directory onto your hard drive (Where <i>pgmname</i> is: <table border="0" style="margin-left: 20px;"> <thead> <tr> <th style="text-align: left;"><b>Software</b></th> <th style="text-align: left;"><b>Program Name</b></th> </tr> </thead> <tbody> <tr> <td><b>Multiprotocol Access Services</b></td> <td>MASV3R1</td> </tr> <tr> <td><b>Multiprotocol Routing Services</b></td> <td>MRSV31</td> </tr> </tbody> </table>                     For example: <pre style="margin-left: 20px;">cp /usr/cdrom/config/aix/program_name</pre>                     Where <i>/usr/cdrom/</i> is the mount point for your CD-ROM.                 </li> <li>7. Run SMIT and do the following: <ol style="list-style-type: none"> <li>a. Select “Software Installation and Maintenance.”</li> <li>b. Select “Install and Update Software.”</li> <li>c. Select “Install/Update Selectable Software (Custom Install).”</li> <li>d. Select “Install Software Products at Latest Level.”</li> <li>e. Select “Install New Software Products at Latest Level.”</li> <li>f. Enter the directory and filename from step 6 into which you copied the installation program.</li> <li>g. Select <b>List</b> for Software to Install.</li> <li>h. Select the installation program.</li> <li>i. Select <b>OK</b>.</li> <li>j. Select <b>OK</b>.</li> <li>k. Select <b>Done</b>.</li> <li>l. Select <b>Cancel</b>.</li> </ol> </li> <li>8. Remove the directory you created in step 6.</li> <li>9. Enter <b>cd /usr/lpp</b> to change directories to <i>/usr/lpp</i>.</li> <li>10. Enter <b>chmod -R 777 program_name</b> to change the mode of the configuration program.</li> <li>11. Unmount the CD-ROM.</li> <li>12. Exit root user.</li> </ol>	<b>Software</b>	<b>Program Name</b>	<b>Multiprotocol Access Services</b>	MASV3R1	<b>Multiprotocol Routing Services</b>	MRSV31
<b>Software</b>	<b>Program Name</b>						
<b>Multiprotocol Access Services</b>	MASV3R1						
<b>Multiprotocol Routing Services</b>	MRSV31						

Table 2. Installation Procedures (continued)

Operating System	Procedure
<p><b>OS/2</b></p>	<ol style="list-style-type: none"> <li>1. Open an OS/2 Command Window.</li> <li>2. Insert the CD labeled <i>IBM Nways Multiprotocol Access Services or Multiprotocol Routing Services or Multiprotocol Switched Services Configuration Program</i> into your CD-ROM drive.</li> <li>3. Make the CD your current directory.</li> <li>4. Enter <b>os2inst</b></li> <li>5. Follow the installation program instructions.</li> </ol> <p>The program creates a folder that contains the IBM Nways Multiprotocol Access Services, Multiprotocol Routing Services, Multiprotocol Switched Services, and Multiprotocol Switched Services Clients Configuration Program icon. (For example, if you are installing the 2210 version of the configuration program, the folder is titled "IBM 2210." There will also be an icon for the README files in the folder.</p>
<p><b>Windows</b></p>	<ol style="list-style-type: none"> <li>1. Insert the CD labeled <i>IBM Nways Multiprotocol Access Services or Multiprotocol Routing Services or Multiprotocol Switched Services Configuration Program</i> into your CD-ROM drive.</li> </ol> <p>If autoread is on, the installation program starts and presents an installation dialog. Otherwise, find and run <i>setup</i> on the CD-ROM.</p> <ol style="list-style-type: none"> <li>2. Select <b>Next</b> on the "Welcome" panel.</li> <li>3. Specify the directory into which you want to install the configuration program by overtyping the directory name presented. If you want to accept the default directory, do not overtype the presented directory.</li> <li>4. Select <b>Next</b>.</li> <li>5. Select <b>OK</b> when you get the setup complete panel.</li> </ol>

---

## Chapter 2. Starting the Configuration Program

This chapter describes:

- The prerequisites for the configuration program
- The procedures for starting the program
- Using configuration files created by earlier versions of the program
- Using the configuration program with AIX NetView/6000

---

### Prerequisites

Before starting the configuration program, make sure you have write access to the directory in which the configuration program is installed. The configuration program writes information to this directory while running, and will fail without the write access.

### Font Requirements for AIX

The configuration program requires specific X11 fonts. When the configuration program starts, it looks for the Helvetica, Times Roman, and New Century Schoolbook fonts in the `/usr/lib/X11/fonts/75dpi` directory. The font files have the following names:

```
helv*.Z  
tim*.Z  
ncen*.Z
```

After the configuration program starts, you can access any font supported by your system. If you select an unusual font style, or very large font size, you may lose the ability to read the panels or make selections from them. See “Correcting Configuration Program Problems” on page 39 for procedures to recover from font problems.

### Setting Up an IBM X-station for the Configuration Program

To run the configuration program from an IBM X-station connected to an IBM RS/6000 host, you need:

- A monitor with at least 640 x 480 resolution and 16 colors or grey scales.
- Directory `/usr/lib/X11/fonts/75dpi/` in the font path of your X-station.

You can check if this directory is already in your path by entering:

```
xset -q
```

Under Font Path, look for `/usr/lib/X11/fonts/75dpi/` in the list of directories. If you do not have this directory in your X-station Font Path, you can add it by entering:

```
xset fp+ /usr/lib/X11/fonts/75dpi/
```

Make sure you add the above statement to your `.profile` for future configuration program sessions on your X-station.

**Note:** If your font path is not set correctly, you may get an “out of memory” error message.

---

## Starting the Configuration Program

To start the configuration program on AIX, see “Starting the Configuration Program on AIX”.

To start the configuration program on OS/2 or Windows see “Starting the Configuration Program on OS/2 or Windows” on page 7.

## Starting the Configuration Program on AIX

Before starting the configuration program:

- X-Windows must be running on the workstation.
- The fonts required by the configuration program must be available. See “Font Requirements for AIX” on page 5 for the font requirements.
- /X11fnt.coreX.fnt must be installed to have access to the MIT X11.5 (75-dp1 and 100-dou) fonts.

To start the configuration program:

1. Enter **xinit** to start X-Windows, if not already started.
2. Change directories to the directory that contains the configuration program, for example: `cd /usr/lpp/masv3r1`
3. Enter **config**.

See “Using the Command Line Facility” on page 17 for details about using the command line facility.

## Starting the Configuration Program with AIX NetView/6000

If you have NetView/6000 you can start the configuration program directly from the menu bar. If the network contains routers of different types (for example, 2210 and 6611) or configuration programs of different versions and releases, you can start any configuration program installed on the machine directly from the menu bar.

To use multiple configuration programs, make sure that each configuration program is in a separate subdirectory from the other configuration programs and NetView/6000.

For each configuration program that you want to start from the menu bar:

1. Create a file in the `/usr/OV/registration/C` subdirectory that contains the code for the menu bar selection item.
2. Change the command statement in the file to point to the path of the desired configuration program.
3. Save the file with a name that indicates the type, version, and release of the configuration program you are starting.

Figure 1 on page 7 is an example of the code contained in a file named `MRSV1R1.0` that points to the configuration program in directory `/mrs/config/re1110/`. The `_C` in the line under MenuBar “Tools” is the accelerator character (hotkey) for the menu item. This character must be in the character string directly to the left of the action, and cannot be duplicated in another menu item.

For more information, such as how to create a sub-menu that contains all of the configuration program menu items, refer to the *AIX SystemView NetView/6000 V2R1 Programmer's Guide*, SC31-7022.

```
/*
** Global Tools
*/
Application "2210 MRS Configuration V1R1"
{
  Description {
    "2210 MRS Configuration V1R1"
  }
  /*
  ** Tools
  */
  MenuBar "Tools"
  {
    "2210 MRS Config Tool V1R1" _C f.action "cfgtool";
  }
  Action "cfgtool"
  {
    Command "/mrs/config/re1110/cfg";
  }
}
```

Figure 1. Netview/6000 Menu File MRSV1R1

## Starting the Configuration Program on OS/2 or Windows

To start the configuration program under OS/2:

1. Locate and open the configuration program folder.
2. Double-click on the Configuration Program icon to start the program. The title window for the configuration program will be displayed.

To start the configuration program under Windows, select Start>Programs>*folder>pgmname* where *folder* and *pgmname* are:

Software	Pgmname and Filename
<b>Multiprotocol Access Services</b>	MASV3R1
<b>Multiprotocol Routing Services</b>	MRSV31

See "Using the Command Line Facility" on page 17 for details about using the command line facility.

## After the Configuration Program Starts

When the program starts, it uses the options defined in the `cfg.ini` file. If the file does not exist in the configuration program's directory, the configuration program uses default options and creates a new `cfg.ini` file. To change the options, use the *Options* item on the configuration program menu bar. See "Changing the Configuration Program Options" on page 12 for the options that you can change.

## Migrating Previous Level Configuration Files

This version of the configuration program cannot use configuration files created by earlier versions of the configuration program; you must migrate to the new release format. If the only copy of the configuration is either in the router or in binary format, you must use the version of the configuration program that created the configuration to create the new configuration file.

### Creating a Configuration File

To create the configuration file:

1. Start the previous version of the configuration program.
2. Select **Read Router Configuration** to read the existing configuration into the configuration program.

Another way to load an existing configuration into the program is to select **Communication, Single**, and then **Retrieve** from the Configuration menu.

3. Select **Save Configuration** or **Save Configuration As** from the File menu.
4. Save the configuration into a file with file extension **.cdb**.

### Converting a Configuration File

Configurations already in a configuration database may be converted to the new release format by running the conversion program. The program presents you with a dialog in which you specify which configuration database files you want to convert. In this dialog:

1. Enter the directory that contains the database file in the field, *Directory containing CDB*.
2. Select whether you want to convert all configurations in the configuration database or selected configurations, using the radio buttons. If you are only converting selected configurations, proceed with step 3, otherwise proceed to step 4.
3. Select the configurations you want to convert from the *Convert Configs* list.
4. Specify the directory that will contain the new configuration files.
5. Select **Convert** The program will then convert the specified configurations into separate configuration files in the Configuration Storage Directory (also known as a CSD).



---

## Chapter 3. Using the Configuration Program

This chapter describes how to use the configuration program by including some of the navigation features of the program.

---

### Before Using the Configuration Program

Before using the configuration program to create configurations for your router please read the README file that is contained in the directory in which the configuration program is installed or on the CD-ROM. The README file contains any current restrictions for using the configuration program.

**Attention:** The configuration program you use to configure an Nways device must match the software that resides on the device you are configuring. Insure you have the latest software level by comparing the software you received with the files available at the web sites named in "Obtaining the Configuration Program Electronically" on page 2.

---

### Understanding the Navigation and Configuration Windows

After you start the configuration program and clear the copyright notice, you will see two windows similar to those in Figure 2 on page 10 and Figure 3 on page 13.

The thinner, left-hand window is the *Navigation Window* and the broader, right-hand window is the *Configuration Window*.

You configure the router by selecting items in the Navigation window and then providing the details for each selected item in the Configuration Window. When you have completed entering the configuration details, select a new item to configure by selecting the item in the Navigation Window.

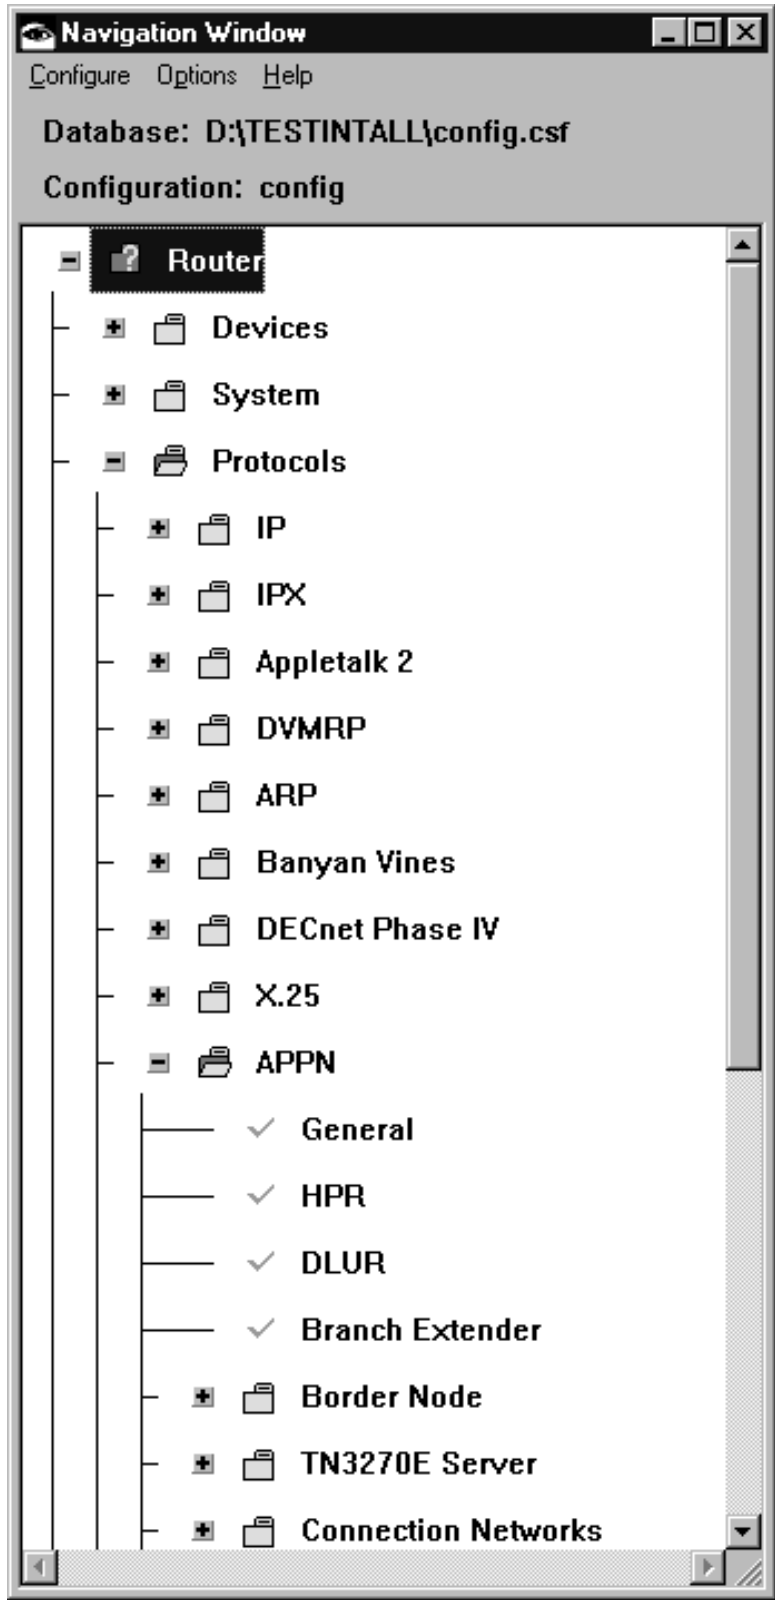


Figure 2. The Navigation Window

## The Navigation Window

The Navigation Window contains:

- A title bar
- A menu bar
- A configuration description area
- A scrollable list of features and protocols that you can configure

This manual refers to the scrollable list as a navigation list. As you select items in the navigation list, the program displays a configuration panel in the Configuration Window. If you select a folder item, the configuration program displays help for configuring the feature that is represented by the folder in the Configuration Window. A folder is an item in the Navigation Window that has a folder icon next to the item. You can copy the help text from the Configuration Window by pressing F1 at this time.

If there is an error or if you have not supplied required information in the current configuration, a question mark appears next to that item in the navigation list.

If there are no errors, a check mark (✓) appears next to that item in the navigation list.

The title bar of the Configuration Window displays an identification for an item that is selected in the navigation list.

The Navigation Window's menu bar contains the following options:

- Configure
- Options
- Help

The area below the menu bar is the configuration description area. It displays the following information:

- Path and name that contains the configuration. The default path is the directory in which you installed the configuration program and the default filename is *config.csf*.
- Filename of the current configuration (the default is *config*)
- The router model and, if applicable, adapter type you are configuring (the default is set in the Options menu)

Another feature of the Navigation Window is a pop-up menu that you invoke by pressing the mouse button 2 (middle mouse button or the right mouse button on a 2-button mouse) on any selected folder in the navigation list. The pop-up menu allows you to:

- Fully expand the navigation list.
- Expand a portion of the navigation list out of a folder.
- Display a history pop-up menu of configuration items you have selected. From the history pop-up you can access any of the previously selected configuration items. On OS/2, Windows 3, and AIX, press and hold mouse button 2 (middle mouse button or the right mouse button on a 2-button mouse) until you select the item from the submenu displayed by the history menu item. (You do not need to hold mouse button 2 for Windows 95.) You can invoke the history pop-up from any item in the navigation list as you would the pop-up menu.

- Validate a selection item in error. The Navigation Window displays erroneous items with a yellow question mark next to the item. The validate function displays messages for any configuration errors or required fields that do not have correct values based on the list item selected. Using the validate function on a folder in the navigation list will display validation messages for all of the navigation list items within that folder.

After you correct an error and leave the panel the contained the error, the program removes the question mark.

## Changing the Configuration Program Options

Use the **Option** menu to change:

- Default Model
- Default Adapter
- Message Prompting
- ATM Address Format

### Notes:

1. The Multiprotocol Access Services version of the configuration program does not contain Model and Adapter options.
2. The Multiprotocol Switched Services and Multiprotocol Switched Services Clients version of the configuration program does not contain the Adapter option.

## The Configuration Window

As you select items in the Navigation Window, the program presents panels in the Configuration Window. The format of the configuration panels depends on the item that you select.

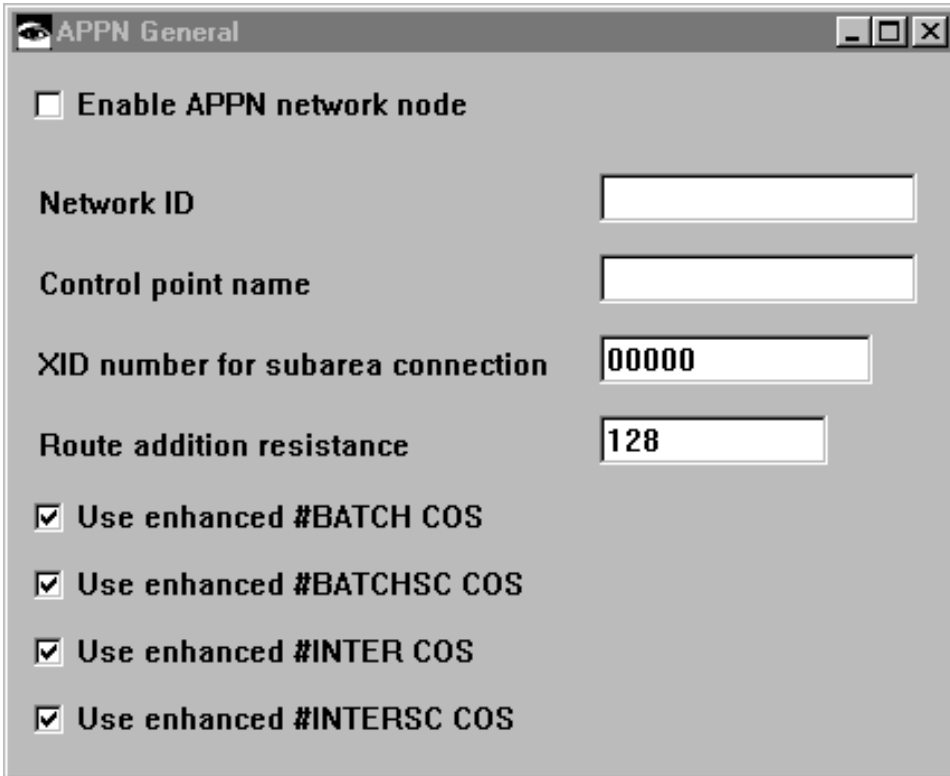


Figure 3. A Sample Configuration Window

## Navigating Through the Configuration Program

The configuration program is designed as a point-and-click interface. You select items from lists using a pointer and then fill in items in the various panels in the Configuration Window. Various keys also have specific meanings to the configuration program.

### Using the Mouse

The mouse is the main tool you use to move through the various lists and panels in the configuration program.

The configuration program uses the following buttons on a 3-button mouse:

- Left (button 1) - to select an item in a panel
- Middle (button 2) - to perform the following actions:
  - On the Navigation Window
    - Display a pop-up menu for a selected item in the scrollable list.
    - Move through and select items in a menu.
    - Validate a selection item in error. The Navigation Window displays erroneous items with a yellow question mark next to the item. The validate function displays a message for each required field that does not have a valid value and for any configuration errors.
  - On the Configuration Window

- Drag-and-drop items in lists. The program indicates that drag-and-drop is active by changing the cursor into a hand icon. Use this function to reorder filters, dump entries, and other configuration lists.
- Right (button 3) is not currently used

The left and middle mouse button descriptions are mapped to the left and right mouse buttons on a 2-button mouse.

---

## Using the Configure Menu

The Configure pull-down menu enables you to access the configuration program's features. Table 3 describes the menu choices and their use. The underscored character and the text in parentheses indicate the keyboard shortcut for the choice.

*Table 3. Configure Menu Choices*

<b>Choice</b>	<b>Use</b>
<u>N</u> ew configuration	Reset the working configuration to the default configuration for a specific model. The program resets the Navigation Window with a list appropriate for the selected model.
<u>C</u> hange Model	Resets the configuration program to support a different router model. <b>Note:</b> This menu is not supported on the 2216.
<u>O</u> pen configuration (Alt+O)	Update an existing configuration or use an existing configuration as a basis for a new configuration.
<u>S</u> ave configuration (Alt+S)	Save the current configuration into a configuration file. If the current configuration is named <b>config</b> and a configuration named config does not exist, the program invokes the "Save configuration as" dialog to allow you to specify a different name.
<u>S</u> ave configuration as	Save the current configuration with a different configuration name.
<u>D</u> elete configuration	Remove configurations from a configuration database.
<u>C</u> reate router configuration	Create a binary configuration file that you load into your router.
<u>R</u> ead router configuration	Read a binary configuration file created by the "Create router configuration" option or obtained from the router using TFTP.

Table 3. Configure Menu Choices (continued)

Choice	Use
Com <u>mu</u> nications	Use this choice to: <ul style="list-style-type: none"><li>• Send or retrieve a configuration to or from a single router, restart a single router, or query a single router's information.</li><li>• Send or retrieve configurations to or from multiple routers or restart multiple routers.</li></ul> <b>Note:</b> Before using the communication features, you must establish communications between the configuration program and the router. See "Establishing Communications Between the Configuration Program and a Router" for details.
ASCII <u>f</u> ile	Use this option to create an ASCII version of a configuration. You can use this file as documentation of a device's configuration.  You can also read in an existing ASCII configuration file to load into a device. <b>Note:</b> This function is not supported by the MSS or MSSC version of the configuration program.
<u>E</u> xit (Alt+X)	Leave the configuration program.

---

## Establishing Communications Between the Configuration Program and a Router

Before you can use the configuration program to communicate with a router, you must establish communications between the program and the router.

If you already have a configuration loaded into the router, you need perform only the steps described in "Setting Up the Configuration Program" on page 16; otherwise you must perform the steps in both "Setting Up the Router" and "Setting Up the Configuration Program" on page 16.

### Setting Up the Router

If your router has no configuration loaded, you must perform the steps in this section before you can send an existing configuration to the router.

This situation would occur if:

- You have a new router with no configuration
- You cleared the router's configuration
- The router encountered a problem that cleared the configuration

To set up the router:

1. Establish access to the router. You can establish access either locally through an ASCII terminal, or remotely using telnet, as described in your device's setup guide.

2. Perform a quick configuration to establish the Internet Protocol (IP) address and IP mask for the primary interface for the router. If the router is in EZSTART mode, enter **stop** to access QCONFIG. See your device's setup guide for more information about quick configuration.

To establish the IP address and IP mask in quick configuration:

- a. Reply **yes** to the Configure Interfaces question.
  - b. Supply the interface information that is required for the LAN interface that will communicate with the configuration program.
  - c. Reply **no** to the Configure Bridging question.
  - d. Reply **yes** to the Configure Protocols question.
  - e. Reply **yes** to the Configure IP question.
  - f. Reply **yes** to the Configure IP on this interface question for the LAN interface that will communicate with the configuration program.
  - g. Enter the IP address at the IP Address prompt.
  - h. Enter the IP mask at the Address Mask prompt.
  - i. Reply **no** to the Configure IP on this interface question for the other router interfaces.
  - j. Reply **no** to the Enable Dynamic Routing question.
  - k. Reply **yes** to the Define community with Read\_Write\_Trap Access question.  
Enter the community name that will have Read\_Write\_Trap access.
  - l. Reply **yes** to the Save this configuration question.
3. Restart or reload the router.

When the router completes the restart sequence, it can communicate with the configuration program.

## Setting Up the Configuration Program

**Note:** This procedure assumes that the IP address and the SNMP community have not already been configured in the router. If the address and community have already been configured, you can use the retrieve function under Communications, Single, to retrieve the information from the router.

To set up the configuration program to communicate with the router:

1. Select the appropriate model from the New Configuration menu.
2. Select **Interfaces** in the IP folder.
3. In the Configuration Window:
  - a. Select **IP Addresses** next to the LAN interface with which the configuration program will communicate.
  - b. Enter the *IP address* and *Subnet Mask* for this interface.

**Note:** These addresses must match the addresses that are configured on the router's interface.

- c. Select **Add**
4. Select **Communities** under the SNMP folder in the Navigation Window.
5. In the Configuration Window:
  - a. Enter the name of the community in the Name field on the General page.  
Use the community defined in step 2.k.
  - b. Select **Read-write trap** in the drop-down list under Access type.



c. Select **Add**

**Note:** The name and the access type must match the name and access type that is configured on the router with which the configuration program will communicate.

The configuration program can now communicate with the router and perform functions such as *Send* or *Retrieve configuration* and *Query router information*.

**Note:** Unless the version of the configuration program and the software loaded on the router are the same, the retrieve function may fail. Use the procedure described in “Migrating Previous Level Configuration Files” on page 8 to migrate the configuration from the previous version.

---

## Using the Command Line Facility

The Command Line facility enables you to automate configuration operations that are available in the configuration program. You can place commands after the **cfg** command or in an argument file named *cfgargs* which the configuration program uses to direct its operation. If you do not specify an **-exit** in your configuration program commands or *cfgargs* file, the program will operate normally and display the Navigation and Configuration windows allowing you to continue the current configuration.

**Note:** The **cfg** command always starts the graphical user interface before processing the arguments file. You must run the **cfg** command in a windowed environment.

## Syntax of the CFG Command

The correct methods to enter the **cfg** command are:

### Command

#### How the Command Works

**cfg** Searches for a *cfgargs* file in the configuration program directory and, if the file exists, executes the commands in the file. To run only the command line facility, the last command in the file must be **-exit**. When the configuration program finishes processing the *cfgargs* file, the configuration program ends and the *cfgargs* file is deleted.

**Note:** You should save a copy of your configuration file to make changes after processing the current configuration in case there are errors in the configuration.

If the **-exit** command is not present in the file, the configuration program will continue processing normally.

If a *cfgargs* file does not exist, the program performs normal processing.

### **cfg -command [args] [...]**

The configuration program processes all the commands and arguments specified and then starts normally. When specifying multiple commands, each command starts with the minus sign (**-**) and is followed by as many additional arguments as necessary.

**Note:** If a *cfgargs* file exists when you enter commands as part of the command, the configuration program ignores the commands entered and processes the *cfgargs* file only. Make sure that a copy of the *cfgargs* file does not exist in the program directory.

Table 4 explains the commands, arguments and the value for the arguments.

**Notes:**

1. Commands and arguments must be separated from each other by either spaces, tabs or new lines.
2. The MSS and MSSC versions of the configuration program do not support `asciiRead` or `asciiWrite`.

*Table 4. Configuration Program Commands and Arguments*

Command	Arguments	Argument Description	Command Purpose
-asciiRead	<i>file name</i> withoutLogging	<p><b>filename</b> Required argument. Specifies the name of the ASCII configuration file to be read.</p> <p><b>withoutLogging</b> Optional argument. Specifies that validation errors should not be logged.</p>	Reads the specified ASCII configuration file into the configuration program as the current configuration in memory.
<p><b>Note:</b> By default, the configuration program writes validation errors to an ASCII file. That file has the same name as the file you read with a <i>.vlg</i> extension.</p>			

Table 4. Configuration Program Commands and Arguments (continued)

Command	Arguments	Argument Description	Command Purpose
-asciiWrite	<i>file name</i> withComments	<b>filename</b> Required argument. Specifies the name of the ASCII configuration file being created.  <b>withComments</b> Optional argument. Indicates whether the output file should contain extra commentary describing the ASCII configuration file.	Creates an ASCII configuration file from the configuration program's current configuration in memory.
-commandsFrom	<i>file name</i>	Required Argument. Specifies the name of the file containing additional elements.	Reads and processes commands from a file.
-createConfiguration	<i>file name</i>	Required argument. Specifies the name of the binary configuration file being created.	Creates a file in the binary format recognized by the router from the configuration program's current configuration in memory.

Table 4. Configuration Program Commands and Arguments (continued)

Command	Arguments	Argument Description	Command Purpose
-displayMessages	on   off	<p><b>on</b> Enables displaying messages.</p> <p><b>off</b> Disables displaying messages.</p>	<p>Allows the user to control the displaying of messages. The action associated with the default answer for messages which present a choice will be performed.</p> <p><b>Notes:</b></p> <ol style="list-style-type: none"> <li>1. The <b>-displayMessages</b> can appear anywhere in the file.</li> <li>2. You can have multiple <b>-displayMessages</b> commands in a file, but only the last one is honored.</li> </ol>
-exit			<p>Exits the configuration program. The configuration program's GUI windows are closed. When multiple commands are specified, this command should always be the last command.</p>

Table 4. Configuration Program Commands and Arguments (continued)

Command	Arguments	Argument Description	Command Purpose
-logMessages	on [file name] off	<p><b>on</b> Enables logging messages.</p> <p><b>file name</b> Optional argument. Specifies the name of the file that is to contain the logged messages. The default value is <i>cfg.log</i>.</p> <p><b>off</b> Disable logging messages.</p>	<p>Allows the user to control whether messages are logged to a file. If the log file does not exist, the file is created. Messages are appended to the log file.</p> <p><b>Notes:</b></p> <ol style="list-style-type: none"> <li>1. The <b>-logMessages</b> can appear anywhere in the file.</li> <li>2. You can have multiple <b>-logMessages</b> commands in a file, but only the last one is honored.</li> <li>3. If you turn off <b>-displayMessages</b> and turn on <b>-logMessages</b>, you redirect all messages to the log file.</li> </ol>
-noLogo			<p>Suppresses displaying the configuration program's logo window during startup. Because the logo requires the user to select the OK button, specify this command for non-interactive mode.</p>
-open	directory config	<p><b>directory</b> Required argument. Specifies the name of the directory containing the desired configuration file.</p> <p><b>config</b> Required argument. Specifies the name of the configuration to be opened.</p>	<p>Opens a configuration that is stored in the named configuration database into the configuration program's current configuration in memory.</p>

Table 4. Configuration Program Commands and Arguments (continued)

Command	Arguments	Argument Description	Command Purpose
-queryInfo	<i>host name   ip address</i> <i>community</i> [timeout]	<b>host name   ip address</b> Required argument. Specifies either the name of the router, which can be resolved into an IP address, or the actual IP address of the router.  <b>community</b> Required argument. Specifies an SNMP community defined on the router with read access.  <b>timeout</b> Optional argument. Specifies the length of time before the SNMP request expires.	Retrieves a configuration summary from a router. The summary is displayed and logged based on the setting of the <b>-displayMessages</b> and <b>-logMessages</b> commands, respectively.
-read	<i>file name</i>	Required argument. Specifies the name of the router configuration to be read.	Reads a router configuration file into the configuration program's current configuration. The configuration file must be in the binary format recognized by the router.

Table 4. Configuration Program Commands and Arguments (continued)

Command	Arguments	Argument Description	Command Purpose
-reboot	<p><i>host name   ip address</i></p> <p><i>community</i></p> <p>[timeout]</p> <p>[date]</p> <p>[time]</p>	<p><b>host name   ip address</b>                      Required argument. Specifies the name of the router, which can be resolved into an IP address, or the actual IP address of the router.</p> <p><b>community</b>                      Required argument. Specifies an SNMP community defined on the router with read/write access.</p> <p><b>timeout</b>                      Optional argument. Specifies the length of time before the SNMP request expires.</p> <p><b>date</b>                      Specifies the day on which the router should reboot. The default is the current date.</p> <p><b>time</b>                      Optional argument. Specifies the time at which the router should reboot. The default is the current time.</p>	<p>Sends a restart request to a router at a specified date and time. The date and time is based on the date and time of the workstation on which the configuration program is running. The configuration program calculates the number of seconds between the time the program runs the command specified and the specified date and time.</p>

Table 4. Configuration Program Commands and Arguments (continued)

Command	Arguments	Argument Description	Command Purpose
-retrieve	<i>host name   ip address</i> <i>community</i> [timeout]	<p><b>host name   ip address</b>                      Required argument. Specifies either the name of the router or the actual IP address of the router.</p> <p><b>community</b>                      Required argument. Specifies an SNMP community defined on the router with read access.</p> <p><b>timeout</b>                      Optional argument. Specifies the length of time before the SNMP request expires.</p>	Retrieves the configuration from a router into the configuration program's current configuration in memory.



Table 4. Configuration Program Commands and Arguments (continued)

Command	Arguments	Argument Description	Command Purpose
-save	<i>directory</i> <i>config</i>	<p><b>directory</b> Required argument. Specifies the name of the directory to contain the desired configuration file. An asterisk (*) indicates that the most recently named configuration storage directory should be used.</p> <p><b>config</b> Required argument. Specifies the name with which the configuration is saved. The default is the current configuration name.</p>	Writes the current configuration in the configuration program's memory to the specified configuration file.

Table 4. Configuration Program Commands and Arguments (continued)

Command	Arguments	Argument Description	Command Purpose
-send	<i>host name   ip address</i> <i>community</i> [timeout]	<b>host name   ip address</b> Required argument. Specifies either the name of the router, which can be resolved into an IP address, or the actual IP address of the router.  <b>community</b> Required argument. Specifies an SNMP community defined on the router with read/write access.  <b>timeout</b> Optional argument. Specifies the length of time before the SNMP request expires.	Sends the configuration program's current configuration in memory to a router.
-sendMultiple	<i>send list</i>	Required argument. The send list contains the list of configurations and router address. Generate this list using the configuration program's <i>Options - Communications - Send Multiple...</i> window.	Sends multiple router configurations to multiple routers.

### CFGARG File Example

When you enter **cfg**, the configuration program looks for a file named *cfgargs*. Figure 4 on page 27 shows the contents of a *cfgargs* file that:

- Opens a modified ASCII configuration file.
- Sends the open configuration to a router.

- Causes the current configuration to become the active configuration by rebooting the router immediately.
- Retrieves the current configuration from a router.
- Saves the current configuration into a configuration file within a configuration database.

```
-displayMessages off 1
-logMessages on cfgMessages.log 2
-asciiRead routerOne.acf withoutLogging 3
  -send 1.1.1.1 private 4
  -reboot 1.1.1.1 private 5
-retrieve 2.2.2.2 private 6
  -save * routerTwo 7
-exit
```

*Figure 4. Example of CFGARGS File Contents. The command line has been broken into separate lines for readability. The entire sequence can be placed on one record, but using multiple lines can make the file easier to maintain.*

1. Turns off message display. Take the default choice if any message presents a choice.
2. Logs all messages to the specified log file.
3. Opens the specified ASCII file.
4. Sends the configuration to a router.
5. Causes the configuration to become the active configuration by rebooting the router immediately.
6. Retrieves the configuration from the specified router.
7. Stores the configuration into the database that was specified by the previous save command, using the specified configuration name.

---

## Creating and Using ASCII files

By default, the configuration program saves configuration files in binary format. You can use the configuration program to create and read configuration files in ASCII format. You can also convert configuration files from one format to the other.

An ASCII configuration file may be useful if you need to alter many configurations at one time without having to load configurations into the graphical user interface.

**Note:** The ASCII configuration facility is not intended to be used to create new configurations or to make major modifications to existing configurations.

For example, if you need to update many IP addresses throughout a network, it may be quicker to save the affected configuration files in ASCII format and then manually (or automatically with a program) update the addresses. A configuration file saved in ASCII format is also useful when you want to scan the configuration online or print the configuration for review.

After updating an ASCII configuration, you can read it into the configuration program and save the configuration in binary. You can load a configuration into a multiprotocol device only in the binary format.

## Understanding the ASCII Functions

The ASCII functions are contained in the Configure menu pull-down under the *ASCII file* item. When you select **ASCII file** you see the following drop-down menu:

- **Create single file...** creates a single ASCII configuration file.
- **Read single file...** reads a single ASCII configuration file into the configuration program's memory.

If you select **Create single file...**, the program displays a dialog in which you specify the path and file name to which the program writes an ASCII file. You can also print comments in the ASCII File from this dialog, if desired.

If you select **Read single file...**, the program displays a dialog in which you specify the path and file name from which the program reads an ASCII file. You can also prevent the configuration program from writing validation errors to a validation file in this dialog. By default, the validation file has a file extension of *.vlg*.

**Note:** For the *Read single file...* function to read an ASCII file successfully, you must either:

- Create the file with the *Create single file...* function, or
- Create an ASCII file with the same parameter structure that the *Create single file...* creates.

“Processing ASCII Files Using the Command Line Facility” on page 34 describes using the configuration command line facility to process ASCII files.

## Creating an ASCII File

The configuration program uses the current configuration to create an ASCII file. Therefore, if you want to create an ASCII file for a particular device:

1. Configure the device. If you require an ASCII file for a device that is already configured, use the *Retrieve configuration* function to obtain the configuration and load it into the program's memory.
2. Select **Configure** from the Navigation Window menu.
3. Select **ASCII file** from the drop-down menu but do not release the mouse button at this time.
4. Move to the right and select **Create single file...** The program displays a file dialog.
5. Enter the path and file name to which the program should write the ASCII file. If you want to replace an ASCII file, you can select an existing file from the file dialog.
6. Select **OK**.

The configuration program uses the current configuration in memory to CREATE the ASCII file. This file will contain the configuration parameters and their current values.

Creating an ASCII file is effectively the same as converting a configuration from its binary form to ASCII. “Interpreting an ASCII File” on page 30 explains the contents of a sample of an ASCII file.

## Adding Comments to an ASCII File

You can add comments to an ASCII file. These comments will help you to use the ASCII file as a template for other configurations. The comments include:

- A brief description of the parameter
- The type of value
- The valid values or value ranges, if applicable

The comments are a guide to help you update the ASCII configuration file. “Using an ASCII File as a Configuration Template” on page 36 explains using ASCII files as configuration templates.

## Reading an ASCII File

### Important

Because configuration parameters change between releases, the configuration program will read only ASCII files created by the same version configuration program. Altering the version number of an older ASCII file or changing the version number in a valid configuration file will cause the read function to fail. See “Understanding How the Configuration Program Validates ASCII Files” on page 37 for an explanation of how the configuration program validates an ASCII configuration.

You cannot upgrade an ASCII file from one version of the configuration program to another version. You can only migrate binary configuration files (.csf) between releases. For the procedure to migrate older configuration files, see “Migrating Previous Level Configuration Files” on page 8.

**Note:** The MSS version of the configuration program does not support reading an ASCII file.

When you read an ASCII file, the configuration program reads the file into memory and replaces the current configuration. If you need the configuration currently in memory, use the *Save configuration* or *Save configuration as* functions before reading in the ASCII file. See “Understanding the ASCII Functions” on page 28 for read function restrictions.

See “Interpreting an ASCII File” on page 30 for a description of the ASCII file that can help you create your own ASCII file.

To read an ASCII file:

1. Select **Configure** from the Navigation Window menu.
2. Select **ASCII file** from the drop-down menu but do not release the mouse button at this time.
3. Move to the right and select **Read single file....** The program displays a file dialog.
4. Enter the path and file name or select a file in the dialog from which the program should read the ASCII file.
5. If you want the configuration program to create an ASCII record of errors in the configuration, select **Log validation errors**, which is the default. Because the configuration program always validates configurations and shows errors, you do not need to log validation error, but the feature is useful:

- To check the configuration and correct any problems before transmitting the binary file to the device.
- When reading ASCII files from multiple routers so you can determine any validation errors when the read process completes.

**Note:** If you make changes in the configuration program, you can use *Create single file...* to replace the erroneous ASCII file.

6. Select **OK**.

By default, the validation file has a file extension of *.vlg*.

After reading in the configuration, you can:

- Send the configuration file to a device using *Send configuration to router*.
- Save the configuration using *Save configuration* or *Save configuration as*.

## Converting from ASCII to Binary

Multiprotocol devices require that the configurations be in binary. Using the configuration program, you can convert an ASCII file to binary by:

1. Reading in the ASCII file as described in “Reading an ASCII File” on page 29 and sending the configuration to the device using the *Send* function.
2. Reading in the ASCII file as described in “Reading an ASCII File” on page 29 and creating a new configuration file using the *Create configuration* function.
3. Reading in the ASCII file as described in “Reading an ASCII File” on page 29 and saving the configuration using the *Save configuration* or *Save configuration as* functions.

## Converting from Binary to ASCII

If you have a binary configuration file, you can convert it by:

1. Reading the file, which by default has a *.csf* extension, into the configuration file using *Open configuration* and creating the ASCII file using *Create single file...*
2. Retrieving a configuration from a device and creating the ASCII file using *Create single file...*

## Interpreting an ASCII File

Figure 5 on page 31 contains a sample of a portion of an ASCII file with comments. When interpreting the ASCII file, note that:

- Header information begins with an exclamation mark (!).
- Comments begin with an asterisk (\*) in column 1. The comments contain descriptions of the parameters and the valid values and ranges. When necessary, the comments indicate the type of the parameters. The types are:

### Multiple Segments

Used for data composed of well-defined parts. For example, a four-segment numeric address that is used to define IP addresses and IP address masks.

### **Numeric**

Typically used for data that may have mathematical calculations performed on it. Data value ranges are enforced on all numeric data types.

**String** Each string must be within a certain length and can be composed only of a specific set of characters.

### **Enumerated**

Used for multiple-choice values. When an ASCII file is saved with comments, the comments explain the possible values. For example:

#### **Enable/Disable**

1 = enable, 2 = disable. Used mainly for enabling/disabling adapter ports and protocols.

- Configuration groups and parameters begin with a pound sign (#).
- A group of items is contained within { and }.
- Elements in a list of items are contained within { and }.
- The word "nil" signifies that the parameter currently has no value.
- All parameters appear in the file even if you did not configure them. When you did not explicitly specify the value, the program uses the default value. If a default value for the parameter does not exist, the program uses "nil".
- Encrypted values are preceded by an "E." To specify a new value to be encrypted by the configuration program, change the "E" to a "U" and overwrite the old value with the new value. When the configuration program reads in the ASCII file, it will encrypt the new value.

```
2210 Configuration
November 18, 1996 at 3:08:56 pm
! 'Configuration:' = 'config'
! 'Model:' = 'model 121/T'
! 'Adapter:' = 'emptySlot'
! 'Version:' = '13011'

#'appletalk' = {

*   at2General = {
*       at2Enable : Enable Appletalk 2
*           value : enable or disable
*       at2Checksum : Checksum
*           value : enable or disable
*       at2Translation : Translate
*           value : enable or disable
*       at2FastPath : Fast path cash size
*           value : range from 100 to 10000 }
*   #'at2General' = {
*       #'at2Enable' = 'disable'
*       #'at2Checksum' = 'disable'
*       #'at2Translation' = 'disable'
*       #'at2FastPath' = '500'
*   }
}
```

Figure 5. Sample ASCII Configuration with Comments (Part 1 of 4)

```

* at2Interfaces = { list of at2Interface }
* at2Interface = {
*   at2InterfaceGeneral = {
*     at2FirstNetworkRange : Lowest number of network range
*       value : range from 1 to 65279
*     at2LastNetworkRange : Highest number of network range
*       value : range from 1 to 65279
*     at2NodeNumber : Node number
*       value : range from 0 to 254
*     at2DefaultZoneName : Default zone name
*       value : a string no more than 34 character(s) in length
*         with any ASCII character
*     at2InNFilter : Input NFilter
*       value : 1 of the following strings: None Inclusive Exclusive
*     at2OutNFilter : Output NFilter
*       value : 1 of the following strings: None Inclusive Exclusive
*     at2InZFilter : Input ZFilter
*       value : 1 of the following strings: None Inclusive Exclusive
*     at2OutZFilter : Output ZFilter
*       value : 1 of the following strings: None Inclusive Exclusive
*     at2EnableInterface : Enable interface
*       value : enable or disable
*     at2InputNetworkFilter : Input NFilter
*       value : 1 of the following strings: None Inclusive Exclusive
*     at2OutputNetworkFilter : Output NFilter
*       value : 1 of the following strings: None Inclusive Exclusive
*     at2InputZoneFilter : Input ZFilter
*       value : 1 of the following strings: None Inclusive Exclusive
*     at2OutputZoneFilter : Output ZFilter
*       value : 1 of the following strings: None Inclusive Exclusive
*     at2SplitHorizon : Split horizon
*       value : enable or disable   }
*   at2ZoneNames = { list of at2ZoneName }

```

*Figure 5. Sample ASCII Configuration with Comments (Part 2 of 4)*



```

*   at2ZoneName = {
*       at2ZName : Zone name
*           value : a string
*               no less than 1 character(s) in length
*               and no more than 32 character(s) in length
*               with any ASCII character }
*   at2NFilters = { list of at2NFilter }
*   at2NFilter = {
*       at2FirstFilterNetworkRange : First network range number
*           value : range from 1 to 65279
*       at2LastFilterNetworkRange : Last network range number
*           value : range from 1 to 65279
*       at2NetworkFilterType : Filter type
*           value : 1 of the following strings: In Out }
*   at2ZFilters = { list of at2ZFilter }
*   at2ZFilter = {
*       at2FilterZoneName : Zone name
*           value : a string
*               no less than 1 character(s) in length
*               and no more than 30 character(s) in length
*               with any ASCII character
*       at2ZoneFilterType : Filter type
*           value : 1 of the following strings: In Out } }
* '#at2Interfaces' = {
*   '#at2Interface' = {
*       '#at2InterfaceGeneral' = {
*           '#at2FirstNetworkRange' = nil
*           '#at2LastNetworkRange' = nil
*           '#at2NodeNumber' = '0'
*           '#at2DefaultZoneName' = nil
*           '#at2InNFilter' = 'None'
*           '#at2OutNFilter' = 'None'
*           '#at2InZFilter' = 'None'
*           '#at2OutZFilter' = 'None'
*           '#at2EnableInterface' = 'disable'
*           '#at2InputNetworkFilter' = 'None'
*           '#at2OutputNetworkFilter' = 'None'
*           '#at2InputZoneFilter' = 'None'
*           '#at2OutputZoneFilter' = 'None'
*           '#at2SplitHorizon' = 'enable'
*       }
*   }
}

```

Figure 5. Sample ASCII Configuration with Comments (Part 3 of 4)

```

    #'at2ZoneNames' = { }
    #'at2NFilters' = { }
    #'at2ZFilters' = { }
  }
  #'at2Interface' = {
    #'at2InterfaceGeneral' = {
      #'at2FirstNetworkRange' = nil
      #'at2LastNetworkRange' = nil
      #'at2NodeNumber' = '0'
      #'at2DefaultZoneName' = nil
      #'at2InNFilter' = 'None'
      #'at2OutNFilter' = 'None'
      #'at2InZFilter' = 'None'
      #'at2OutZFilter' = 'None'
      #'at2EnableInterface' = 'disable'
      #'at2InputNetworkFilter' = 'None'
      #'at2OutputNetworkFilter' = 'None'
      #'at2InputZoneFilter' = 'None'
      #'at2OutputZoneFilter' = 'None'
      #'at2SplitHorizon' = 'enable'
    }
    #'at2ZoneNames' = { }
    #'at2NFilters' = { }
    #'at2ZFilters' = { }
  }
  #'at2Interface' = {
    #'at2InterfaceGeneral' = {
      #'at2FirstNetworkRange' = nil
      #'at2LastNetworkRange' = nil
      #'at2NodeNumber' = '0'
      #'at2DefaultZoneName' = nil
      #'at2InNFilter' = 'None'
      #'at2OutNFilter' = 'None'
      #'at2InZFilter' = 'None'
      #'at2OutZFilter' = 'None'
      #'at2EnableInterface' = 'disable'
      #'at2InputNetworkFilter' = 'None'
      #'at2OutputNetworkFilter' = 'None'
      #'at2InputZoneFilter' = 'None'
      #'at2OutputZoneFilter' = 'None'
      #'at2SplitHorizon' = 'enable'
    }
    #'at2ZoneNames' = { }
    #'at2NFilters' = { }
    #'at2ZFilters' = { }
  }
}
}
}
:

```

Figure 5. Sample ASCII Configuration with Comments (Part 4 of 4)

## Processing ASCII Files Using the Command Line Facility

Besides the functions described in “Understanding the ASCII Functions” on page 28, the configuration program command line facility also supports the following functions:

### Convert Binary to ASCII

Enables you to select one or more binary formatted configuration files from a configuration database, create ASCII formatted files, and save them to the hard drive.

## Convert ASCII to Binary

Enables you to select one or more ASCII formatted configuration files from the hard drive, create binary formatted configuration files, and save them to a configuration database.

The following sections describe using the configuration program command line facility to process ASCII files. Examples are included to help you build *cfgargs* files so you can run certain processes in batch mode.

## Creating an ASCII File

Use the *asciiWrite* command to create an ASCII file. If you want to create an ASCII file for a specific device, retrieve the configuration from the device before the write command in the *cfgargs* file. The following example creates an ASCII file of the configuration for device CON656A with comments and then exits the configuration program:

```
-displayMessages off
-logMessages on cfgCommands.log
  -retrieve CON656A myread
  -asciiWrite d:\asccfgs\con656a.acf with Comments
-exit
```

## Reading an ASCII File

Use the *asciiRead* command to read an ASCII file into the configuration program's memory. The following example reads the ASCII file named *rtr656b.acf* in directory *asccfgs*:

```
-displayMessages off
-logMessages on cfgCommands.log
  -asciiRead d:\asccfgs\rtr656b.acf
-exit
```

**Note:** Validation errors are logged to file *rtr656b.vlg*.

## Converting Between ASCII and Binary

Use the *createConfiguration* command to convert an ASCII file to a binary file that you can use as backup for a device's configuration. The following example reads in an ASCII file, transmits it to a device, and then creates a binary configuration file for backup.

```
-displayMessages off
-logMessages on cfgCommands.log
  -asciiRead d:\asccfgs\mss656c.acf
  -send mss656c mywrite
  -createConfiguration d:\bincfgs\mss656c.bin
-exit
```

## Converting a Retrieved File to ASCII

There may be times when you need to review the current configuration, for example, debugging or planning for an upgrade. The next example retrieves the configuration from device RTR656D and converts the configuration to ASCII for later use.

```
-displayMessages off
-logMessages on cfgCommands.log
  -retrieve rtr656d readit
  -asciiWrite d:\asccfgs\rtr656d.acf
-exit
```

## Using the ASCII File Functions with Multiple Devices

There may be times when you need to either create ASCII versions of configurations from multiple routers or convert multiple ASCII files to binary to transmit to various devices. The following sections outline a method to achieve those goals using the command line facility.

**Creating Multiple ASCII Files:** This following example assumes that you have just received five devices that were pre-configured. It illustrates a way to create documentation of the configuration for those devices.

```
-displayMessages off
-logMessages on cfgCommands.log
-retrieve rtr656a reada
-asciiWrite d:\asccfgs\rtr656a.acf
-retrieve rtr656b readb
-asciiWrite d:\asccfgs\rtr656b.acf
-retrieve rtr656c readc
-asciiWrite d:\asccfgs\rtr656c.acf
-retrieve rtr656d readit
-asciiWrite d:\asccfgs\rtr656d.acf
-retrieve rtr656e readit
-asciiWrite d:\asccfgs\rtr656e.acf
-exit
```

**Reading Multiple ASCII Files:** The following example assumes that you need to reload five devices with configurations and you have valid ASCII files. You have already set up the devices to communicate with the configuration program on each of the devices. Each device has a unique configuration and you do not need the binary configuration saved.

```
-displayMessages off
-logMessages on cfgCommands.log
-asciiRead d:\asccfgs\rtr656f.acf
-send mss656f mywritef
-asciiRead d:\asccfgs\rtr656g.acf
-send mss656g mywriteg
-asciiRead d:\asccfgs\rtr656h.acf
-send mss656h mywriteh
-asciiRead d:\asccfgs\rtr656i.acf
-send mss656i mywritei
-asciiRead d:\asccfgs\rtr656j.acf
-send mss656j mywritej
-exit
```

## Using an ASCII File as a Configuration Template

The ability to create and read ASCII files can assist you in automating the process of creating or updating a large number of device configurations. The following procedure outlines a method that you can use to perform a mass update.

1. Create a file that contains the new information for the devices you are configuring. You can use a full or partial template. Make sure that any interfaces or adapters specified match the models and adapters specified in the header.
2. Create a program to read the device file and a configuration template file, create a copy of the template file, update the new copy with the device information, and save the file with a name that would help you to identify the device for later transmittal.
3. Locate a device in your network that contains a configuration that closely matches the target devices. Ideally, the only things you should need to change

are items like IP addresses, MAC addresses, dial circuit numbers, or other such items. The devices should support and use the same filters and protocols and have the same interfaces.

4. From the device you located in step 3 on page 36, retrieve the device configuration using *Retrieve configuration*. You can retrieve the configuration with the command line facility of the configuration program.
5. Create an ASCII file of the configuration.
6. Create the new configurations using the ASCII file you created in step 5, the file you created in step 1 on page 36, and the program you created in step 2 on page 36 .

After you create the new configurations, you can use the configuration program to read the resulting ASCII files, save them as binary files, if needed, and then send the files to the appropriate devices. "Reading Multiple ASCII Files" on page 36 contains more information about how the command line facility can help you automate this task.

## Understanding How the Configuration Program Validates ASCII Files

The configuration program performs the following actions while reading the ASCII files:

- If there is an adapter specified in the header, the program compares that value with the adapter type in the Devices group of the configuration file.
- If there is a model specified in the header, the program:
  1. Checks to see that the defined interfaces match the model capabilities. For example, a 2210 Model 121/T cannot have an Ethernet interface. In this case, the program discontinues reading the configuration and logs an error.
  2. Verifies that the number of interfaces is correct for the device configuration identified in the header.

If there are too many interfaces defined, the program discontinues reading the configuration because it cannot determine which definitions are correct and logs an error.

If there are too few interfaces, the program fills in defaults for the undefined interfaces. For example, if the device has two WAN ports and you supply values for one, the program uses defaults for the missing interface after the configured interface.

**Note:** Undefined interfaces must be the last interfaces in the interface list. For example, if you define interfaces 0, 2, and 3, the configuration program will not use defaults for the missing interface. In this case, you must define the consecutive interfaces 0, 1, 2, and 3 for the program to provide defaults for the missing interface. For interface 1, you *must* provide a default interface.

- Compares the number of device interfaces to the number of elements in the interface protocol list.

If there are fewer elements in the interface protocol list than the number of device interfaces, the program fills the list with default protocols for the remaining interfaces.

If there are more elements in the interface protocol list, than the number of device interfaces, the program discontinues reading the configuration and logs an error.

---

## Configuring a Router Using the Configuration Program

When you start the configuration program, it displays three windows:

- The Copyright Notice window
- The Navigation window
- The Configuration window

Select **OK** on the copyright notice window to begin using the configuration program.

## Configuring a New Router

To configure a router using the configuration program:

1. Select **Configure** from the Navigation Window.
2. Select the model you wish to configure from the *New configuration* submenu.
3. Select **Adapter** from the Devices folder and configure any adapters for the router in their appropriate slots.

### Notes:

- a. There is a Ports panel in the IBM Nways Multiprotocol Access Services version of the configuration program. This panel does not exist for the IBM Nways Multiprotocol Routing Services or the IBM Nways Multiprotocol Switched Services versions.
  - b. The IBM Nways Multiprotocol Routing Services version of the configuration program displays the physical ports first followed by the virtual ports.  
In the IBM Nways Multiprotocol Access Services version, the virtual ports can be intermingled with the physical ports.
  - c. The Interfaces panel displays the interfaces sorted by slot and then port.
4. Select **Interfaces** from the Devices folder and configure the interfaces for the router.
  5. Expand the General folder under the Devices folder, if not already expanded.
  6. Select the items in the General folder and configure the parameters in each of those items.
  7. Select the items in the System folder and configure the parameters in each of those items.
  8. Select and configure the remaining folders as necessary.

## Changing an Existing Configuration

**Note:** When changing an existing configuration using the configuration program, make sure that other personnel do not update the configuration using the command line interface. Any configuration data entered through the command line is lost when you send the configuration to the router from the configuration program.

To change an existing configuration:

1. Retrieve the configuration from the router you are changing.
2. Use the configuration program to change the parameters you need to change.
3. Save the configuration.
4. Send the configuration to the router using the Communications menu item.

## Using Guided Configuration

The configuration program contains guided configuration to help you configure the device's features and protocols. The guided configuration consists of elementary procedures that step you through the configuration process. To access guided configuration:

1. Select a folder in the Navigation Window.
2. Press **F1** to display the text of the procedure in a help window.

You can now follow the process to configure the feature or protocol.

### Notes:

1. There may be multiple ways to configure a feature or protocol. The guided configuration is a recommended procedure.
2. The guided configuration does not remember where you were in the procedure. If you follow a link to other help information from the procedure, the help window displays the beginning of the procedure when you return to the procedure.

---

## Correcting Configuration Program Problems

If you experience problems with the configuration program, locate the symptom in Table 5 that most closely resembles the problem and perform the actions described in the Recommended Actions column.

*Table 5. Common Symptoms of Configuration Program Problems*

Symptom	Recommended Actions
Cannot read or make selections from a panel  The configuration program is hung	<p>Take <b>one</b> of the following actions:</p> <ul style="list-style-type: none"> <li>• Change the fonts in the cfg.ini file to default fonts               <ol style="list-style-type: none"> <li>1. Change the FONTSIZE= statement to read FONTSIZE= 14</li> <li>2. Change the FONTFAMILY= statement to read as follows:                   <p style="margin-left: 20px;"><b>For AIX</b> FONTFAMILY=<b>helvetica</b></p> <p style="margin-left: 20px;"><b>For Windows</b> FONTFAMILY=<b>system</b></p> </li> </ol> </li> <li>• Revert to the original initialization files. Locate the file named in the following list on the CD and copy it over the existing cfg.ini file in the configuration program's directory.               <p style="margin-left: 20px;"><b>Operating System Initialization File</b></p> <p style="margin-left: 20px;"><b>AIX</b>    aix.ini</p> <p style="margin-left: 20px;"><b>Windows</b> WIN.INI</p> </li> </ul> <ul style="list-style-type: none"> <li>• Press CTRL-C and then close the resulting message window.</li> </ul>

Table 5. Common Symptoms of Configuration Program Problems (continued)

Symptom	Recommended Actions
Internal Execution Error	Take the following actions: <ol style="list-style-type: none"><li>1. Copy the following files in the configuration program's directory to a safe place:<ul style="list-style-type: none"><li>• cfg.err</li><li>• The binary router configuration file (.cfg) you were making</li><li>• The configuration file (.csf) that contains the configuration you were making</li></ul></li><li>2. Contact customer service.</li><li>3. Supply the saved files to customer service as problem documentation.</li></ol>

---

## Removing the Configuration Program

Before removing the configuration program, you must save all of the files ending in **csf** in the configuration program's directory, if the configurations are still required for your network. These files contain configurations stored or saved with the "Save" or "Save As" functions.

To remove the configuration program:

1. Copy the configurations to another directory, if necessary.
2. Delete all the files in the configuration program's directory using:
  - The **rm** command on AIX
  - The **del** or **erase** command on Windows or OS/2
3. Delete the folder in Windows or OS/2.



# Index

## A

### AIX

- AIX font requirement 5
- starting configuration program with NetView/6000 6
- starting the configuration program on 6

### ASCII file

- adding comments 29
- as configuration template 36
- converting a retrieved file to ASCII 35
- converting between ASCII and binary 35
- converting from ASCII to binary 30
- converting from binary to ASCII 30
- creating 28, 35
- creating and using 27
- how configuration program validates 37
- interpreting 30
- processing using the command line facility 34
- reading 29, 35

### ASCII functions

- converting from ASCII to binary 30
- converting from binary to ASCII 30
- create single file 28
- creating multiple ASCII files 36
- read single file 28
- reading multiple ASCII files 36
- understanding the 28
- using with multiple devices 36

## C

### cfg command

- syntax 17

### cfgargs file

#### commands

- asciiRead 18
- asciiWrite 19
- commandsFrom 19
- createConfiguration 19
- displayMessages 20
- exit 20
- logMessages 21
- noLogo 21
- open 21
- queryInfo 22
- read 22
- reboot 23
- retrieve 24
- save 25
- send 26
- sendMultiple 26

### cfgargs file, example of 27

### changing

- color 12
- default adapter 12
- default model 12
- font 12
- messages 12

### color, changing 12

### command line

- asciiRead 18
- asciiWrite 19
- commandsFrom 19
- createConfiguration 19
- displayMessages 20
- exit 20
- logMessages 21
- noLogo 21
- open 21
- queryInfo 22
- read 22
- reboot 23
- retrieve 24
- save 25
- send 26
- sendMultiple 26
- converting a retrieved file to ASCII 35
- converting between ASCII and binary 35
- creating 35
- reading 35

### command line facility

- using 17

### communications between router and configuration program, establishing 15

### configuration

- changing existing 38
- configuration, using guided 39
- configuration files, migrating previous levels 8
- configuration process, overview 38
- configuration program
  - installing 1
  - obtaining electronically 2

### configuration program, setting up 16

### configuration template, using ASCII file 36

### Configuration Window, description 12

### configure menu, using 14

### configure menu choices

- ASCII 15
- change model 14
- communications 15
- create router configuration 14
- delete configuration 14
- new configuration 14
- open configuration 14
- read router configuration 14
- save configuration 14
- save configuration as 14

### converting from ASCII to binary 30

### converting from binary to ASCII 30

### correcting problems 39

### creating and using ASCII files 27

## D

### default adapter, changing 12

### default model, changing 12

## E

electronically obtaining the configuration program 2  
establishing communications between router and  
configuration program 15  
example of cfgargs file 27

## F

folder, definition of 11  
font, changing 12  
font requirements, for AIX 5

## G

guided configuration, using 39

## I

installation requirements 1  
installing  
before beginning 2  
configuration program 1  
procedure for 2

## M

message prompting, changing 12  
migrating previous configuration files 8  
mouse, using 13  
multiple devices, using ASCII file functions 36

## N

Navigation Window  
description 11  
expanding 11  
menu bar 11  
pop-up menu 11

## O

obtaining the configuration program 2  
operating system, and starting the configuration  
program 6  
options, changing 12  
OS/2, starting the configuration program on 7

## P

pop-up menu, invoking 11  
problems, correcting 39

## R

removing the configuration program 40  
requirements, installation 1  
router, setting up 15

## S

setting up the configuration program 16  
setting up the router 15

setting up the X-station 5  
starting the configuration program, AIX font  
requirements for 5  
syntax of cfg command 17

## U

Understanding the ASCII Functions 28  
using guided configuration 39  
using the command line facility 17

## V

validating a configuration 13  
validation of ASCII file 37

## W

Windows, starting the configuration program on 7

## X

X-station, setting up 5

---

# Readers' Comments — We'd Like to Hear from You

**Nways MAS/MRS/MSS/MSSC Library  
Configuration Program User's Guide  
for Nways Multiprotocol Access,  
Routing and Switched Services  
Fourth Edition**

**Publication No. GC30-3830-04**

**Overall, how satisfied are you with the information in this book?**

	Very Satisfied	Satisfied	Neutral	Dissatisfied	Very Dissatisfied
Overall satisfaction	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

**How satisfied are you that the information in this book is:**

	Very Satisfied	Satisfied	Neutral	Dissatisfied	Very Dissatisfied
Accurate	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Complete	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Easy to find	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Easy to understand	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Well organized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Applicable to your tasks	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

**Please tell us how we can improve this book:**

Thank you for your responses. May we contact you?  Yes  No

When you send comments to IBM, you grant IBM a nonexclusive right to use or distribute your comments in any way it believes appropriate without incurring any obligation to you.

\_\_\_\_\_  
Name

\_\_\_\_\_  
Address

\_\_\_\_\_  
Company or Organization

\_\_\_\_\_  
Phone No.



Cut or Fold  
Along Line

Fold and Tape

Please do not staple

Fold and Tape




NO POSTAGE  
NECESSARY  
IF MAILED IN THE  
UNITED STATES

# BUSINESS REPLY MAIL

FIRST-CLASS MAIL PERMIT NO. 40 ARMONK, NEW YORK

POSTAGE WILL BE PAID BY ADDRESSEE

IBM Corporation  
Design & Information Development  
Department CGF/Bldg. 656  
PO Box 12195  
Research Triangle Park, NC 27709-9990



Fold and Tape

Please do not staple

Fold and Tape

Cut or Fold  
Along Line





Part Number: 25L5046  
Program Number: 5765-D47  
5801-ARR  
5765-368



Printed in the United States of America  
on recycled paper containing 10%  
recovered post-consumer fiber.

GC30-3830-04



25L5046

