DISCLAIMER

Information in this manual is designed for **user purposes only** and is **not** intended to supersede information contained in customer regulations, technical manuals/documents, positional handbooks, or other official publications. The copy of this manual provided to the customer will **not** be updated to reflect current data.

Customers using this manual should report errors or omissions, recommendations for improvements, or other comments to MFJ Enterprises, 300 Industrial Park Road, Starkville, MS 39759. Phone: (662) 323-5869; FAX: (662) 323-6551. Business hours: M-F 8-4:30 CST.

TABLE OF CONTENTS

TOPIC	<u>PAGE</u>
TABLE OF CONTENTS	ii
LIST OF FIGURES	ii
LIST OF TABLES	ii
RF HAZARD PRECAUTIONS	1
INTRODUCTION & SYSTEM FEATURES	6
SYSTEM DESCRIPTION	9
LOOP THEORY	11
SYSTEM SETUP	13
LOOP CONSTRUCTION	14
SYSTEM OPERATION	15
FAST START INSTRUCTIONS	18
TECHNICAL ASSISTANCE	21

LIST OF FIGURES

Figure 1	The Electromagnetic Spectrum	2
Figure 2	MFJ-935 <i>Loop Tuner</i> ™	7
Figure 3	MFJ-935 <i>Loop Tuner</i> [™] with MFJ-57 PVC Cross Loop Kit Installed	8
Figure 4	MFJ-935 <i>Loop Tuner</i> [™] Front Panel Controls & Indicators	9
Figure 5	MFJ-935 <i>Loop Tuner</i> [™] Rear Panel Connectors	10
Figure 6	Typical MFJ-935 <i>Loop Tuner</i> [™] Setup Configuration	13

LIST OF TABLES

Table 1	Indoor & Outdoor Operating Environments	5
Table 2	MFJ-935 Optimum Loop Lengths	14

This page intentionally left blank.

RF HAZARD BACKGROUND INFORMATION

The following WARNING is labeled on the MFJ-935 *LOOP TUNER*[™] Rear Panel:

WARNING

DO NOT touch or come into contact with *Loop Connectors* or *Loop Antenna* while transmitting

YOU CAN BE KILLED !!!

Using the MFJ-935 *Loop Tuner*TM can, and in fact does, produce LETHAL voltages and HIGH CURRENTS during normal operation. The Hi-Q circuit produced by resonating the wire loop connected to the tuner, and matching it to the 50 Ohm coax supplying power creates this unique operating environment.

NOTICE

It is imperative that the operator specifically follows operating instructions and complies with all CAUTIONS, WARNINGS, and FCC Guidelines for Human Exposure to Radiofrequency (RF) Electromagnetic Fields


Radiofrequency (RF) Radiation

Radiofrequency (RF) energy is one type of electromagnetic energy. Electromagnetic waves and associated phenomena can be discussed in terms of energy, radiation or fields. Electromagnetic "radiation" is defined as waves of electric and magnetic energy moving together (i.e., radiating) through space. The movement of electrical charges generates these waves. For example, the movement of charge in a radio station antenna (the alternating current) creates electromagnetic waves radiating away from the antenna and intercepted by receiving antennas. Electromagnetic "field" refers to the electric and magnetic environment existing at some location due to a radiating source such as an antenna.

An electromagnetic wave is characterized by its wavelength and frequency. The wavelength is the distance covered by one complete wave cycle. The frequency is the number of waves passing a point in a second. For example, a typical radio wave transmitted by a 2-meter VHF station has a wavelength of about 2 meters and a frequency of about 145 million cycles per second (145 million Hertz): one cycle/second = one Hertz, abbreviated Hz.

Electromagnetic waves travel through space at the speed of light. Wavelength and frequency are inversely related by a simple equation: (frequency) times (wavelength) = the speed of light. Since the speed of light is a constant quantity, High Frequency (HF) electromagnetic waves have short wavelengths, and Low-Frequency (LF) waves have long wavelengths. Frequency bands used for amateur radio transmissions are usually characterized by their approximate corresponding wavelengths, e.g., 12, 15, 17, 20 meters, etc.

The electromagnetic "spectrum" includes all of the various forms of electromagnetic energy ranging from extremely low frequency (ELF) energy (with very long wavelengths) to all the way up to X-rays and gamma rays, which have very high frequencies and correspondingly short wavelengths. In between these extremes lie radio waves, microwaves, infrared radiation, visible light and ultraviolet radiation, respectively. The RF part of the electromagnetic spectrum can generally be defined as that part of the spectrum where electromagnetic waves have frequencies that range from about 3 kilohertz (kHz) to 300 gigahertz (GHz). Figure 1 illustrates the electromagnetic spectrum.

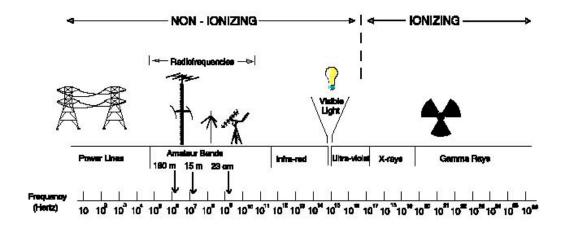



FCC OET Bulletin 65, Supplement B, Evaluating Compliance with FCC Guidelines for Human Exposure to Radiofrequency Electromagnetic Fields.

The FCC Office of Engineering Technology (OET) Bulletin 65, Supplement B, *Evaluating Compliance with FCC Guidelines for Human Exposure to Radiofrequency Electromagnetic Fields* impacts directly the use and operation of the MFJ-935 *Loop Tuner*[™]. It establishes safe operating distances from the loop antenna and associated power levels in order to permit the operator and persons that may be impacted by operation to exist in a safe, RF radiation hazard-free environment. Guidelines for Maximum Permissible Exposure (MPE) are defined in Supplement B of the bulletin.

IMPORTANT NOTE

Use Supplement B in connection *with* FCC OET Bulletin 65, Version 97-01. The information in the supplement provides additional detailed information used for evaluating compliance of amateur radio stations with FCC guidelines for exposure to radiofrequency electromagnetic fields. However, Supplement B users should also consult Bulletin 65 for complete information on FCC policies, guidelines and compliance-related issues. Definitions of terms used in this supplement appear in Bulletin 65. Bulletin 65 can be viewed and downloaded from the FCC's Office of Engineering and Technology's World Wide Web Internet Site:

http://www.fcc.gov/oet/rfsafety

OPERATING ENVIRONMENTS

Under some circumstances, such as an antenna located unusually near humans, an indoor antenna in a living space, or a balcony-mounted antenna a foot or so away from a neighbor's balcony, the FCC could require a station evaluation or take other action. Computer models of small HF loops, for example, yield RF fields very near the antenna that are much higher than the standard amateur radio station outdoor antenna installation yields. Therefore, when you use the MFJ-935 *Loop Tuner*TM in your Ham Shack, at a portable location (outdoors), or one such as a hotel/motel room care must be taken **not** to exceed established MPE to yourself and others who may encounter the RF field associated with your operation.

RF RADIATION EXPOSURE CONCERNS

Controlled population exposure limits apply to amateur licensees and members of their immediate household (but *not* their neighbors - see next paragraph). In general, a controlled environment is one for which access is controlled or restricted.

In the case of a fixed or portable amateur station, the licensee or grantee is the person responsible for controlling access and providing the necessary information and training as described in FCC OET Bulletin 65, Supplement B.

General population/uncontrolled exposure limits apply to situations in which the general public may be exposed, or in which persons who are exposed as a consequence of their employment, such as hotel/motel employees or overnight residents, may **not** be made fully aware of the potential for exposure or cannot exercise control over their exposure. Therefore, members of the general public always fall under this category when exposure is **not** employment-related, as in the case of residents in an area near a broadcast tower. Neighbors of amateurs and other non-household members would normally be subject to the general population/uncontrolled exposure limits.

OPERATING ENVIRONMENTS & GUIDELINES

Table 1 lists MFJ-935 *Loop Tuner*[™] operating environments, average power level, and safe distances that should provide compliance with the FCC's MPE recommendations/standards for controlled and uncontrolled populations. Distance data listed is a result of computer-modeling a *circular loop*, which is the most efficient radiator configuration. Parameters used include those listed below:

- *Loop perimeter or circumference* (0.75 of a quarter wave loop in length for each band)
- *Diameter of loop conductor* (~4mm/10 gauge)
- *Height of lowest section of loop above ground* (1 and 3 meters feed-point heights)
- Operating frequencies (7.175, 10.1, 14.2, 18.1, 21.2, 24.95, & 28.5 MHz)
- *Output power in watts* (100 watts average)

Fq (MHz)	Controlled Population Exposure (Distance in feet/meters)		z) Exposure Exposure		Output Power (Watts)
7.0 1	1.2	0.36	2.0	0.51	100
7.0 ₂	1.2	0.38	2.1	0.75	100
10.0 ₁	1.9	0.57	3. 0	0.75	100
10.0 ₂	2.3	0.69	3.6	0.92	100
14.0 1	2.4	0.72	3.8	0.96	100
14.0 ₂	2.5	0.77	4.6	0.96	100
18.0 ₁	2.8	0.85	5.1	1.06	100
18.0 ₂	2.9	0.87	5.2	1.08	100
21.0 1	3.0	0.92	5.9	1.23	100
21.0 ₂	3.1	0.93	6.0	1.50	100
24.0 1	3.2	0.98	6.6	1.66	100
24.0 ₂	3.3	1.02	6.6	1.67	100
28.0 1	3.4	1.05	7.2	1.83	100
28.0 ₂	3.4	1.05	7.3	1.83	100

Table 1 Indoor & Outdoor Operating Environments

¹ MFJ-935 *Loop Tuner*[™] located at *one meter* in height above ground level.

² MFJ-935 *Loop Tuner*[™] located at *three meters* in height above ground level.

INTRODUCTION & FEATURES

MFJ-935 LOOP TUNER[™] INTRODUCTION

The MFJ-935 *Loop Tuner*[™] is a small, versatile, high-efficiency device that turns any wire loop into a high-efficiency multi-band transmitting loop antenna system designed for 50-ohm use at 100 Watts maximum input (all modes). It consists of two functional units:

- MFJ-935 Loop Tuner[™]
- Wire Loop(s) (not included)

One function of the MFJ-935 *Loop Tuner*[™] tunes/resonates various lengths of wire into a very Hi-Q tuned-circuit used as a transmitting loop antenna. It uses an MFJ low-loss *Butterfly* capacitor with no rotating contacts (available separately) in this circuit. The second function is a matching network that serves to match the Hi-Q transmitting loop circuit to any length of 50 Ohm coaxial cable.

No ground, radials, or counterpoise system is required or needed. The MFJ-935 *Loop Tuner*TM tunes any shape loop: circle, square, rectangle or any odd shape. However, a wire approaching a quarter wavelength (~0.75 x $\frac{1}{4} \lambda$) shaped as a circle is the most efficient configuration.

The MFJ-935 *Loop Tuner*TM uses fixed wire lengths, which cover about 1.5 to 1 frequency ranges (i.e. 28 - 18 or 10 - 7 MHz, etc.). Exact frequency coverage depends on each individual installation configuration involving choice of wire length and diameter, shape of loop, *Loop Tuner*TM height above ground level, and operating environment. Figure 2 illustrates the MFJ-935 Loop TunerTM.

The MFJ-935 *Loop Tuner*[™] mounts an assembled PVC Cross provided in the MFJ-57 Loop Antenna Kit by inserting the cross into a PVC receptacle mounted on the top of the unit's cover. This kit provides a means to operate 20-15 meters using an insulated 10-gauge flexible wire loop fitted with direct contact low-resistance lugs and strung on the PVC after assembly.

Assembly takes less than five minutes from packaged kit to ready for operation. Figure 3 illustrates the PVC Cross mounted on the MFJ-935 *Loop Tuner*TM in a typical outdoor operation environment. Care should be taken, however, to secure the loop if wind becomes a factor in the operating environment.

INTRODUCTION & FEATURES



Figure 2 MFJ-935 Loop Tuner[™]

MFJ-935 *LOOP TUNER*[™] FEATURES:

- **Powerless**: No power supply required.
- Maximum Input Power: 100 Watts (all modes)
- Easy-to-Read Loop RF Current Indicator: 0 to 100 scale with adjustable sensitivity.
- **Easy-Carry Handle**: Permits easy handling to/from portable location(s)
- Small Physical Profile: 8 1/4" W; 8-1/2" D; 5-0" H
- Low Radiation Angle: Rivals full size dipoles.
- **Quiet Reception**: Extremely quiet receiving antenna. Hi-Q rejects out-ofband interference, reduces overloading, and rejects harmonics.
- **Indoor Use**: Perfect for apartments & hotel/motel rooms, antenna restricted, and portable locations.

INTRODUCTION & FEATURES

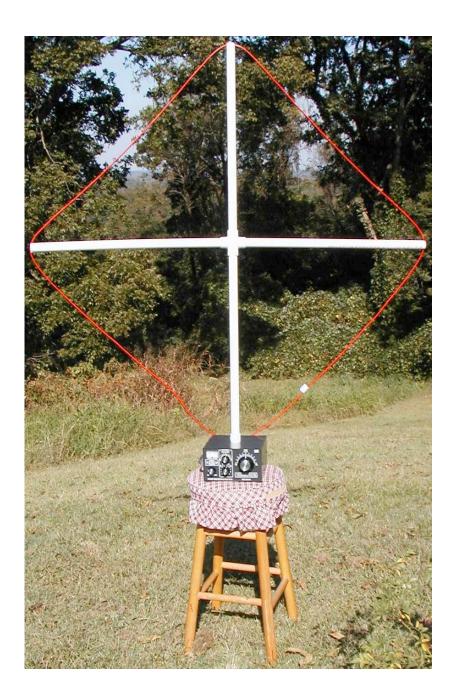


Figure 3 MFJ-935 *Loop Tuner*[™] with MFJ-57 PVC Cross Loop Antenna Kit Installed

SYSTEM DESCRIPTION

MFJ-935 *LOOP TUNER*[™] CONTROLS & INDICATORS

The MFJ-935 *Loop Tuner*[™] Front Panel controls and indicators function to permit resonating the wire loop at the output, and matching the coaxial line impedance at the input of the tuner. Refer to Figure 4 and the numbered component locations.

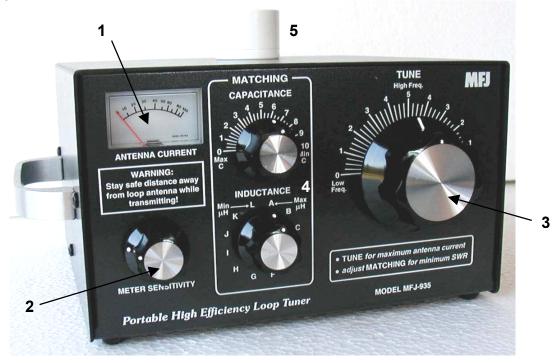


Figure 4 MFJ-935 *Loop Tuner*[™] Front Panel Controls and Indicators

A single Antenna Current meter (1) indicates antenna current on a scale of 0-100, and is controlled by a Meter Sensitivity control (2) located beneath the meter. It is recommended that you re-adjust meter sensitivity for mid-scale indications after initial tuning, and on application of operating power. A Tune control (3) permits adjustment of the Butterfly capacitor to peak/resonate the wire loop. Two grouped controls (4) effect matching the tuned loop circuit to a 50-Ohm coaxial cable:

- An *Inductance Rotary Switch*, labeled A through L, enables selecting 12 levels of inductance
- A *Capacitance Variable* adjusts the matching network for matching 50 Ohm coax
- A *PVC* mount (5) located on the enclosure top permits mounting the PVC Cross assembly.

SYSTEM DESCRIPTION

The MFJ-935 *Loop Tuner*TM Rear Panel connections function to permit connecting the wire loop at the output, and connecting the coaxial line at the input of the tuner. Refer to Figure 5 and the labeled component locations.



Figure 5 MFJ-935 *Loop Tuner*[™] Rear Panel Connections

The loop antenna connects to the two wing nuts provided in the center of each insulated stand-off panel. Care must be taken *not* to disturb the wires leading from the lugs and entering through the back of the tuner. These two *loop connector* connection points must be kept clean at all times. To minimize contact resistance, the loop wire is in direct contact to the soldered lug. A long fiber glass strip provides a low loss, low capacitance, high voltage insulator.

When *not* in use for periods of time, always clean the connectors before reattaching loop antennas of any kind. This unit is *not* intended for outdoor installation except during portable operation and must be protected from the elements.

Coaxial line connects to the SO-239 connector labeled *transmitter* providing RF power input to the tuner. The **WARNING** label must be obeyed!

LOOP THEORY

LOOP ANTENNA BACKROUND INFORMATION

A small loop antenna is one that is characterized by low-noise reception, works well even when mounted at ground level, and has a conductor length or circumference of less than 1/3 wavelength. The ideal small transmitting antenna would have performance equal to a large antenna, and a small loop antenna approaches that performance. Bandwidth is quite narrow due to the extreme hi-Q of the tuned-circuit configuration when paired with a capacitor.

The components in a resonated transmitting loop are subjected to high currents and voltages because of the large circulating currents found in the high-Q tuned circuit formed by the antenna. It is very important that capacitors used in this antenna have a high RF current rating. Even a 100-W transmitter develops currents in the tens of amperes, and voltages across the tuning capacitor in excess of 10,000 V. This consideration also applies to any conductors used to connect the loop to the capacitor. A piece of #14 wire may have more resistance than the entire loop conductor! The best electrical connections possible, are those using soldered or welded joints.

The heart of the MFJ-935 *Loop Tuner*TM is the "Butterfly" loop-tuning capacitor, which has no rotating contacts. When coupled to a low-resistance loop conductor, such as a copper strap, it provides a high efficiency transmitting loop.

As the loop antenna is elevated, its efficiency improves accordingly. When traveling, a room at some elevation above ground level makes for a better portable operation experience with the MFJ-935 *Loop Tuner*TM. At very low heights, close coupling to the ground causes detuning and losses due to current induced into a mirror image of the loop below the surface with resistance of the image loop proportional to soil resistance. Another loss component is due to current flowing in the soil via capacitance between the loop and soil surface.

An operational height equal to 1/2 diameter of the loop antenna is recommended to prevent detuning and excess ground losses when using the MFJ-935 *Loop* $Tuner^{TM}$ loop antenna system. This means the tuner should be at that recommended height, since it is connected to the bottom (ends) of the loop, whatever the loop antenna configuration: Circle, Square, Hexagonal, etc.

For operation on the 14 MHz band and higher, ground losses are a minimum near ground, so it is fine to operate on the ground floor. For the 7 MHz band and lower, ground losses become significant on the ground floor. To reduce ground losses, operate on a second or third floor.

LOOP THEORY

For minimum ground loss when operating near ground, the loop should be mounted vertical. For higher elevations (relative to the wavelength), horizontal mounting will also give low ground losses.

Using *freeware* modeling programs, it is possible to improve the efficiency of the loop antenna system by varying the parameters until you optimize your particular operational configuration, even while portable. One source example for free programs is G4FPQ's Web site: http://www.btinternet.com/~g4fgq.regp/.

SYSTEM SETUP

SYSTEM SETUP CONFIGURATION

The MFJ-935 *Loop Tuner* TM setup configuration is simple and consists of the following components:

- RF Generator (Transmitter/Transceiver; ~5 Watts minimum)
- SWR Indicator or Cross-metered wattmeter; forward & reflected power
- MFJ-935 Loop Tuner[™]
- Coaxial cable(s)
- #10 gauge (or larger) stranded wire cut to 75% of a ¼ wavelength at the chosen resonant frequency

Figure 6 is a block diagram of the typical MFJ-935 *Loop Tuner*TM setup configuration.

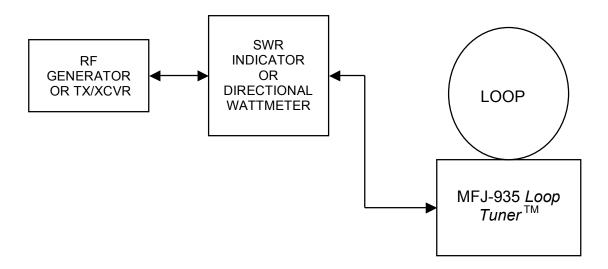


Figure 6 Typical MFJ-935 *Loop Tuner*[™] Setup Configuration

LOOP CONSTRUCTION

LOOP CONSTRUCTION

Loop Construction for the MFJ-935 *Loop Tuner*TM is reasonably simple, and Table 2 lists the maximum tunable length for the most efficient operation for each band. The lengths are calculated from:

Table 2	MFJ-935 Optimum Loop Lengths
F₀ MHz	OPTIMUM LOOP LENGTH
7.175	25' – 9"
10.1	18' – 3"
14.2	13' – 0"
18.1	10' – 0"
21.2	8' – 9"
24.95	7' – 5"
28.5	6' - 6"

- 1025 Ontinuum Leon Lenathe

Each length can be tuned lower in frequency. The lowest tunable frequency is Fo divided by 1.5 (i.e., 10.1 MHz divided by 1.5 gives 6.7 MHz as the lowest tunable frequency).

The loop can be constructed from wire, tubing, sheet, and an especially good material is 1" wide PC board. However, finding a piece of PC board long enough to form into a circular loop for 7.175 MHz may prove to be difficult! This leads us to the unique opportunity to **EXPERIMENT** while using the MFJ-935 Loop *Tuner*TM to resonate the loop antenna you design.

The applications and parameters can be adjusted easily with the help of the Freeware programs previously mentioned, and you may choose to design a totally new and unique loop antenna for on-air experimentation. Designing an outdoor loop for a band such as 7 MHz could be a challenge and result in a very good radiator and especially good receiving antenna for DX-ing and/or ragchewing. We, at MFJ, think the experimental aspects of the Loop TunerTM are exciting, and can provide hours of quality operating, even at QRP levels.

SYSTEM OPERATION

MFJ-935 *LOOP TUNER[™]* OPERATION

The most important aspect of using the MFJ-935 *Loop Tuner*TM is it opens-up opportunity for Hams to once again *experiment* while enjoying operating at the same time. Imagine how exciting it can be to establish contact with a distant station using an antenna that you designed for the first time. Even more so, what if you are just using a few watts, and the antenna is just a few feet away from your operating position *inside your home*!

Operation is simple, but must follow specific steps in a specific order. Moreover, you must have first consulted the RF Hazards section of this manual to ensure compliance with established standards for Minimum Permissible Exposure (MPE) to certain levels of RF radiation.

WARNING

DO NOT touch or come into contact with *Loop Connectors* or *Loop Antenna* while transmitting

YOU CAN BE KILLED !!!

<u>Step 1</u>

Place the MFJ-935 *Loop Tuner*TM at the chosen place of operation, and connect the loop antenna to the wing nut terminals on the rear panel.

<u>Step 2</u>

Using a pre-cut prepared wire and fasteners (non-conductive plastic clothespins for example) form a loop to enclose as much area as possible (for example, clothespin a wire loop to a curtain around a window frame). A circle encloses the maximum area. Otherwise, drape it across bookcases or similar objects to fashion a loop of sorts to use. If the loop antenna is rigid, then place the *Loop Tuner*TM in a position to accommodate its particular shape and size.

<u>Step 3</u>

Complete the typical MFJ-935 *Loop Tuner*TM setup configuration as illustrated in Figure 6 of this manual.

SYSTEM OPERATION

<u>Step 4</u>

Make the following preliminary settings on the controls of the *Loop Tuner*[™] :

- TUNE control centered (12 o' clock)
- Matching CAPACITANCE control to "5"
- Matching INDUCTANCE switch to "L"
- Meter SENSITIVITY control to fully clockwise "fully CW"

<u>Step 5</u>

Tune the transceiver or receiver to the band and frequency of interest and "*Ear-ball*" tune the MFJ-935 *Loop Tuner*TM controls for maximum noise and S-Meter reading. "Ear-balling," like "Ball-parking" is a term often to describe the listening process as used to hear a "*peak*" in reception before actually applying a transmit signal to the tuner. The tuner will produce a peak when the proper position for the controls and switches is achieved. The normal process consists of the following suggested instructions:

- TUNE control rotated right/left for a peak. If none found, re-center and rotate INDUCTANCE switch counter-clockwise (CCW) until a peak is encountered
- Re-tune TUNE control, and re-position Matching INDUCTANCE switch until the peak is maximized
- Adjust Matching CAPACITANCE control to further refine the "peak"

<u>Step 6</u>

Apply 5 to 10 watts of power to the MFJ-935 *Loop Tuner*[™] and adjust the TUNE control for maximum RF antenna current. Adjust the INDUCTANCE and CAPACITANCE controls for minimum SWR on your external SWR meter. Readjust the TUNE control for maximum RF antenna current. Repeat this sequence until you see no further improvement in minimum SWR and maximum RF antenna current. Always adjust for maximum RF antenna current as the final adjustment.

Be sure to adjust the RF current meter sensitivity control for center scale reading as you make adjustments.

SYSTEM OPERATION

<u>Step 7</u>

Once you are satisfied that the adjustments/settings are correct (maximum RF current and minimum SWR), you can advance power to 100W if desired. Be sure that a safe MPE distance standard is met. Should any arcing be detected, stop transmitting and check connections and proximity to objects that may be suspect. If arcing seems to be inside the MFJ-935 *Loop Tuner*TM, lower output power and re-check for arcing.

As a courtesy to our fellow hams, for safety and to keep within FCC regulations you should use the minimum power needed for communications. 20 to 50 watts often provides very reliable communications. The difference between 50 and 100 watts is less than $\frac{1}{2}$ S-unit and is not noticeable on the receiving end.

<u>Step 8</u>

You can now enjoy operating in your favorite mode. However, if you change frequency more than about 5 kHz, you may find you'll need to re-tune the TUNE control for maximum RF antenna current and the Matching CAPACITANCE control for minimum SWR. Even greater frequency excursions can cause the Matching INDUCTANCE to also require adjustment/switching.

This concludes the MFJ-935 *Loop Tuner*[™] System Operation instructions.

MFJ-935 *Loop Tuner*[™] System Accessories

Two Kits are available for use with the MFJ-935 *Loop Tuner*TM, and each enables the operator expanded operational capabilities, and use of pre-made/fabricated wires and equipment. These kits are:

- **MFJ-57**, which contains a PVC Cross device for mounting a 12-foot precut and lugged wire loop to the top cover of the tuner. This flexible 10-gauge wire loop covers 20-15 meters, and the ends have low-resistance lugs.
- **MFJ-58**, which contains all of the MFJ-57 items, plus 30/40 meter and 17-10 meter wire loops, with clips to hang loops as needed.

FAST-START INSTRUCTIONS

FAST START OPTION

Although careful and complete reading of the technical manual is certainly foremost when receiving new equipment, MFJ-935 *Loop Tuner*[™] operation can be achieved with minimum time and effort as long as certain and specific instructions are followed. Strict adherence to **WARNINGS** and **CAUTIONS** associated with personal safety, coupled with following specific procedural steps can lead to a unique operating experience in a very short time.

WARNING

DO NOT touch or come into contact with *Loop Connectors* or *Loop Antenna* while transmitting

YOU CAN BE KILLED !!!

NOTICE

It is imperative that the operator specifically follows operating instructions and complies with all CAUTIONS, WARNINGS, and FCC Guidelines for Human Exposure to Radiofrequency (RF) Electromagnetic Fields

<u>Step 1</u>

Place the MFJ-935 *Loop Tuner*TM at the chosen place of operation, assemble the PVC Cross and connect the 12-foot precut loop antenna found in the MFJ-57 Accessory Kit to the wing nut terminals on the rear panel. In lieu of the MFJ-57, you can attach an appropriate wire loop.

<u>Step 2</u>

Complete the typical MFJ-935 *Loop Tuner*TM setup configuration as illustrated in Figure 6 of this manual.

FAST-START INSTRUCTIONS

<u>Step 3</u>

Pre-set the MFJ-935 *Loop Tuner*TM controls to the following settings for 14.2 MHz operation (settings are approximate, but should be reasonable):

- TUNE control to "4.0"
- Matching INDUCTANCE switch to "D"
- Adjust Matching CAPACITANCE control to "6.0"

<u>Step 4</u>

Tune the transceiver or receiver to the 20 meter band and frequency of interest and "*Ear-ball*" fine-tune the MFJ-935 *Loop Tuner*TM controls for maximum noise and S-Meter reading. "Ear-balling," like "Ball-parking" is a term often to describe the listening process as used to hear a "*peak*" in reception before actually applying a transmit signal to the tuner. The tuner will produce a peak when the exact position for the controls and switches is found.

<u>Step 5</u>

Apply 5 to 10 watts of power to the MFJ-935 *Loop Tuner*[™] and adjust the TUNE control for maximum RF antenna current. Adjust the INDUCTANCE and CAPACITANCE controls for minimum SWR on your external SWR meter. Readjust the TUNE control for maximum RF antenna current. Repeat this sequence until you see no further improvement in minimum SWR and maximum RF antenna current. Always adjust for maximum RF antenna current as the final adjustment.

Be sure to adjust the RF current meter sensitivity control for center scale reading as you make adjustments.

<u>Step 6</u>

Once you are satisfied that the adjustments/settings are correct (maximum RF current and minimum SWR), you can advance power to 100W if desired. Be sure that a safe MPE distance standard is met. Should any arcing be detected, stop transmitting and check connections and proximity to objects that may be suspect. If arcing seems to be inside the MFJ-935 *Loop Tuner*TM, lower output power and re-check for arcing.

FAST-START INSTRUCTIONS

As a courtesy to our fellow hams, for safety and to keep within FCC regulations you should use the minimum power needed for communications. 20 to 50 watts often provides very reliable communications. The difference between 50 and 100 watts is less than $\frac{1}{2}$ S-unit and is not noticeable on the receiving end.

You can now enjoy operating in your favorite mode. However, if you change frequency more than about 5 kHz, you may find you'll need to re-tune the TUNE control for maximum RF antenna current and the Matching CAPACITANCE control for minimum SWR. Even greater frequency excursions can cause the Matching INDUCTANCE to also require adjustment/switching.

This concludes the MFJ-935 *Loop Tuner*[™] **Fast Start Operation** instructions.

TECHNICAL ASSISTANCE

TECHNICAL ASSISTANCE

If you have any problem with this unit first check the appropriate section of this manual. If the manual does not reference your problem or your problem is not solved by reading the manual, you may call *MFJ Technical Service* at **662-323-0549** or the *MFJ Factory* at **662-323-5869**. You will be best helped if you have your unit, manual and all information on your station handy so you can answer any questions the technicians may ask.

You can also send questions by mail to MFJ Enterprises, Inc., 300 Industrial Park Road, Starkville, MS 39759; by Facsimile (FAX) to 662-323-6551; or by email to techinfo@mfjenterprises.com. Send a complete description of your problem, an explanation of exactly how you are using your unit, and a complete description of your station.

NOTES