

**Customer Care Solutions
RH-20 Series Transceivers**

Troubleshooting Instructions

RF Troubleshooting	5
Introduction to RF troubleshooting	5
RF Key component placement	6
RF Measurement points	7
GSM900, GSM1800 & GSM1900 Transmitter	8
Additional information for EDGE troubleshooting	15
EGSM900, GSM1800 and GSM1900 Receiver	23
Synthesizer	30
Baseband troubleshooting	35
Main Troubleshooting Diagram	37
Phone is dead	38
Flash Programming Fault	39
Phone is jammed	40
SIM card fault (Insert SIM / Card rejected)	42
Keypad Fault	43
Display Fault	45
Illumination fault	46
Charger Fault	47
Accessory Fault	48
Audio Fault	49
Camera Troubleshooting	53
Camera Fault	54
Camera troubleshooting diagram	54
FM Radio troubleshooting	55
FM Radio troubleshooting diagram	56

RF Troubleshooting

Introduction to RF troubleshooting

Measurements should be done using Spectrum analyzer with high-frequency high-impedance passive probe (LO-/reference frequencies and RF power levels) and Oscilloscope with a 10:1 probe (DC-voltages and low frequency signals).

The RF-section is build around one RF-ASIC (HELGO N500). For easier troubleshooting, this RF troubleshooting document is divided into sections.

Before changing HELGO, please check the following things: supply voltages are OK and serial communication coming from baseband to HELGO.


Please note that the grounding of the PA module is directly below PA-module so it is difficult to check or change. **Most RF semiconductors are static discharge sensitive!** So ESD protection must be taken care of during repair (ground straps and ESD soldering irons). HELGO and PA are moisture sensitive so parts must be pre-baked prior to soldering.

Apart from key components described in this document here are a lot of discrete components (resistors, inductors and capacitors) which troubleshooting is done by checking if soldering of the component is done properly (for factory repairs checking if it is missing from PWB). Capacitor can be checked for shortening and resistors for value by means of an ohmmeter, but be aware in-circuit measurements should be evaluated carefully.

Please be aware that all measured voltages or RF levels in this document are rough figures. Especially RF levels varies due to different measuring equipment or different grounding of the used probe. When using RF probe usually a good way is to use metallic tweezers to connect probe ground to PWB ground as close to measurement point as possible.


RF Key component placement

Figure 1: Component placement 1

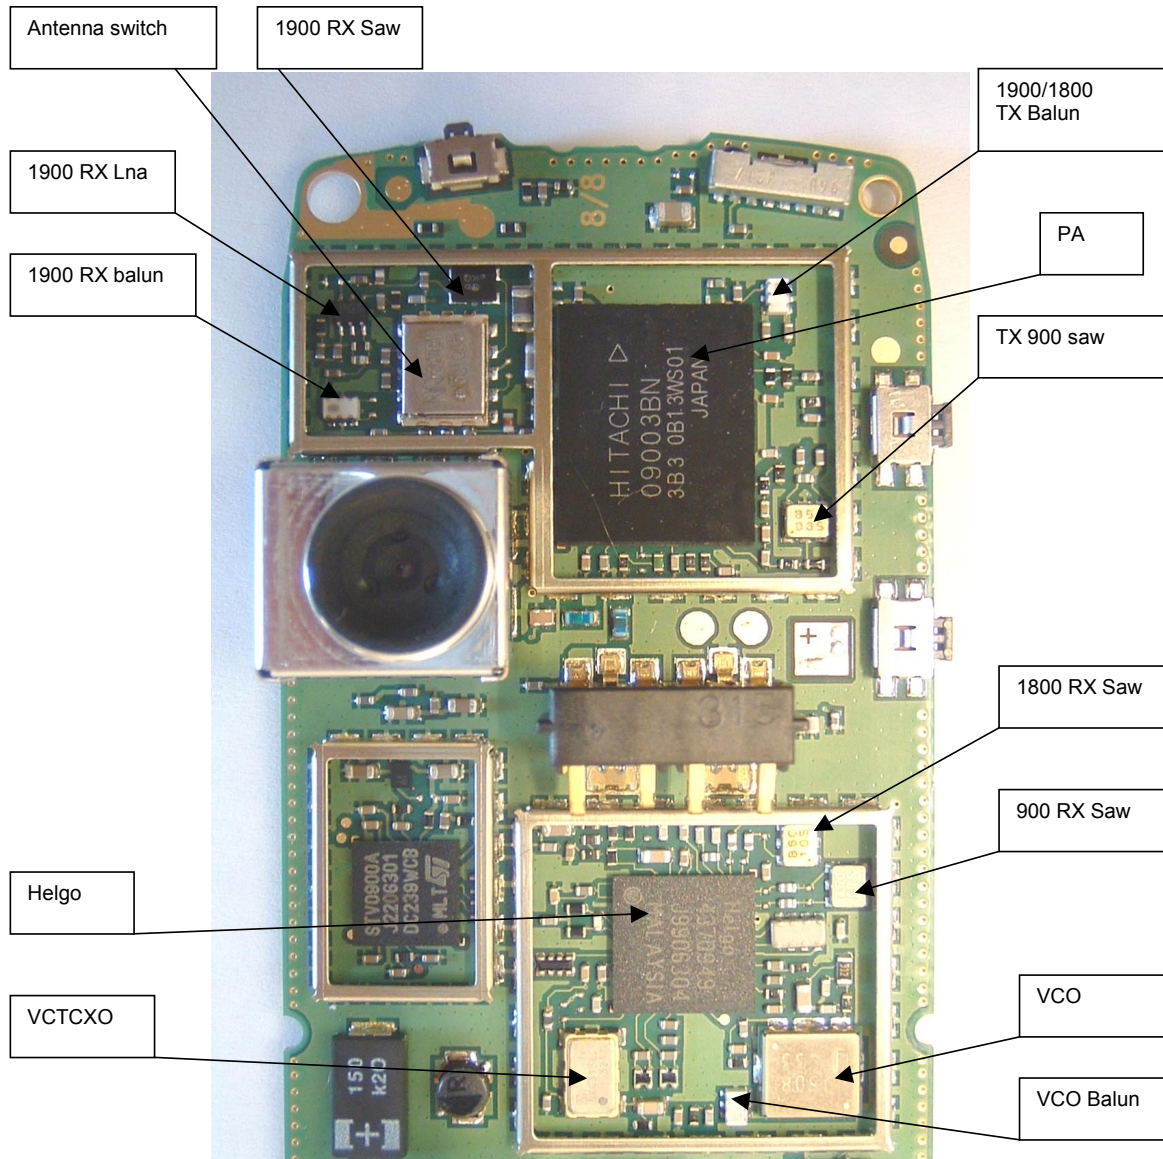

RF Measurement points

Figure 2: Component placement 2

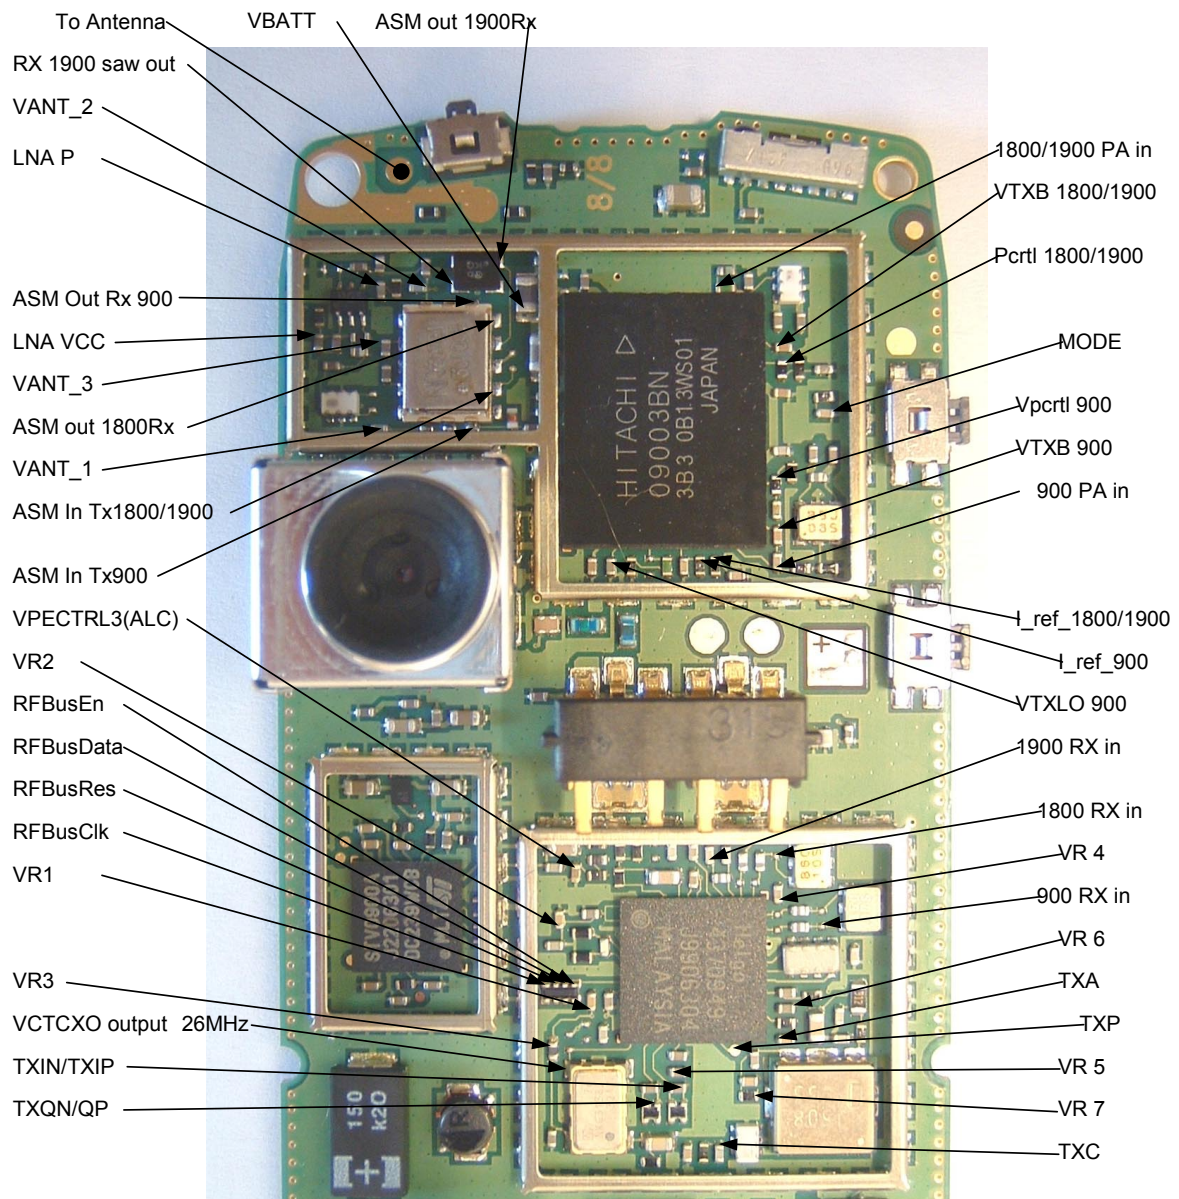

EGSM900, GSM1800 & GSM1900 Transmitter

General instructions for Tx troubleshooting

Kindly refer to the Service Software Section, Service Concept diagram (p.40)

Connect test jig to computer with DAU-9S cable or to FPS-8 Flash Prommer with XCS-4 modular cable.

Make sure that you have PKD-1 dongle connected to computers parallel port.

Connect DC power supply to module test jig with FLC-2 cable.

Attention: When repairing or tuning transmitter use external DC supply with at least 3A current capability. Set the DC supply voltage to 4.2V.

Connect an RF-cable to the module test jig (MJS-38) RF connector and to measurement equipment or at least a 10dB attenuator, otherwise the PA may be damaged. Normally a spectrum analyzer is used as measurement equipment.

Attention: Normally Spectrum analyzer maximum input power is +30dBm. It is recommended to use 10dB attenuator on Spectrum analyzer input to prevent damage.

Set the phone module to test jig and start Phoenix service software

Initialize connection to phone. (use FBUS driver when using DAU9S and COMBOX driver when using FPS-8)

Select product from the menu

File -> Choose product -> RH-20

From toolbar set operating mode to "Local"

Activate RF controls window from the menu

Testing -> RF Controls

From the RF controls window

- Select band "GSM900" or "GSM 1800" or "GSM1900" (Default = "GSM900")
- Set Active unit to "Tx" (Default = "Rx")
- Set Operation mode to "Burst" (Default = "Burst")
- Set Tx data type to "Random" (Default = "All1")
- Set Rx/Tx channel to 37 on GSM900 band or 700 on GSM1800 band or 661 on

GSM1900 (Defaults)

- Set Tx PA mode to "Free" (Default)

- Set power level to 5 (Default = 19) on GSM900 or to 0 (Default = 15) on GSM1800 or GSM1900

Transmitter troubleshooting diagram

Figure 3: Transmitter troubleshooting

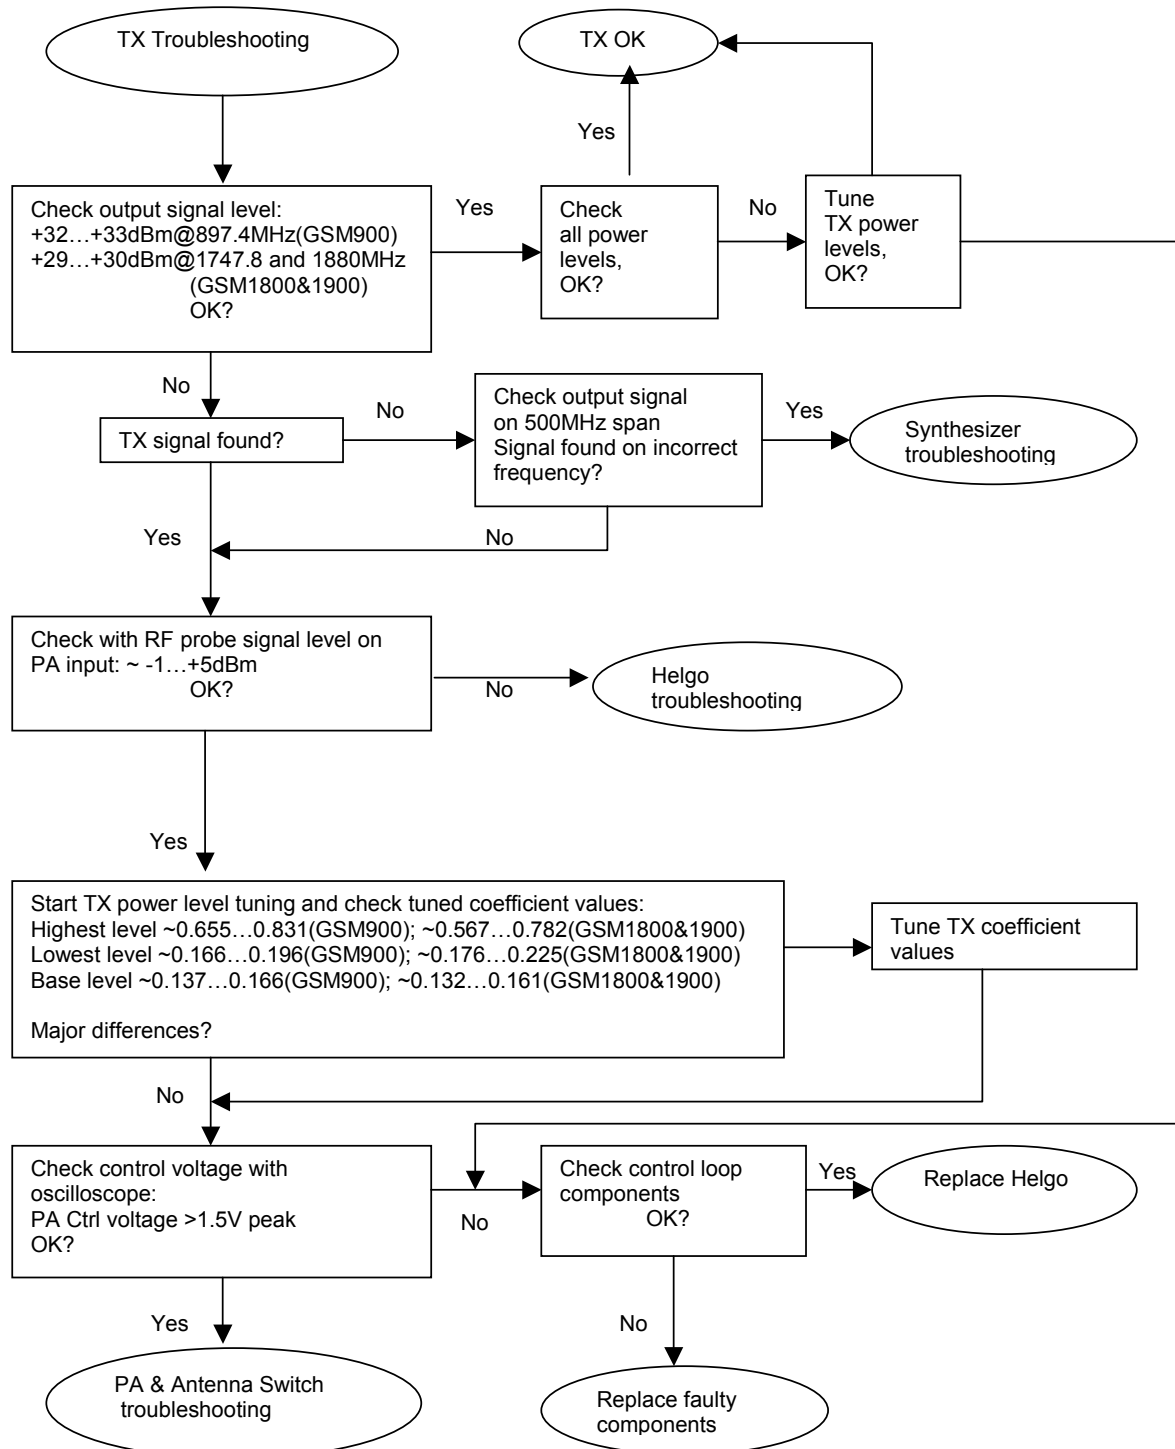


Figure 4: HELGO IC troubleshooting


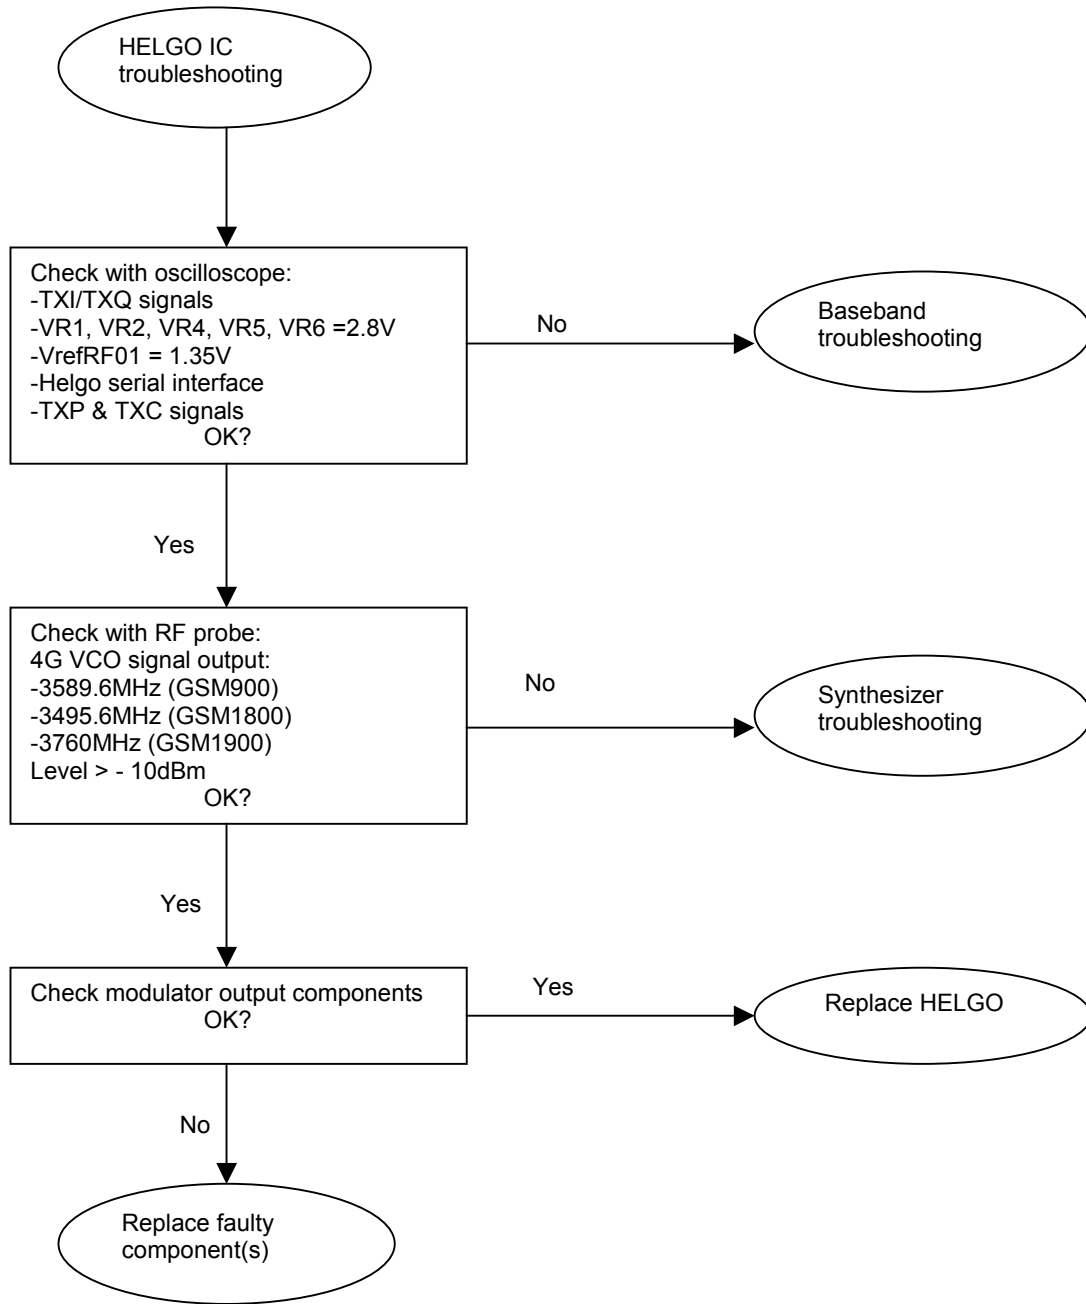


Figure 5: PA and Antenna Switch troubleshooting

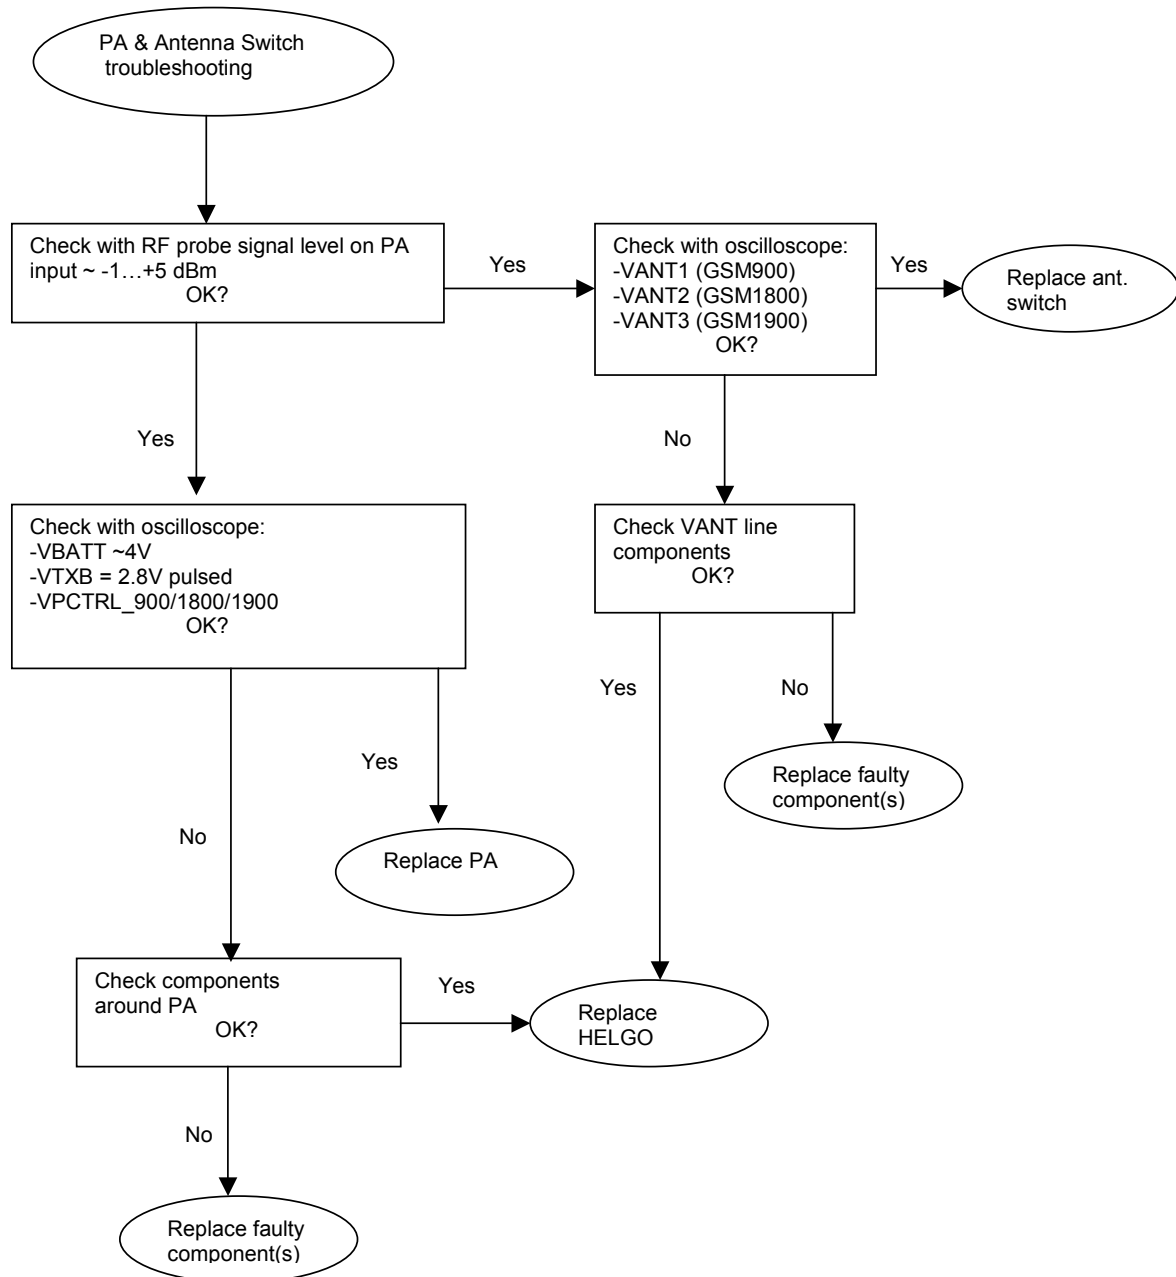

Pictures of transmitter signals

Figure 6: Transmitter signals


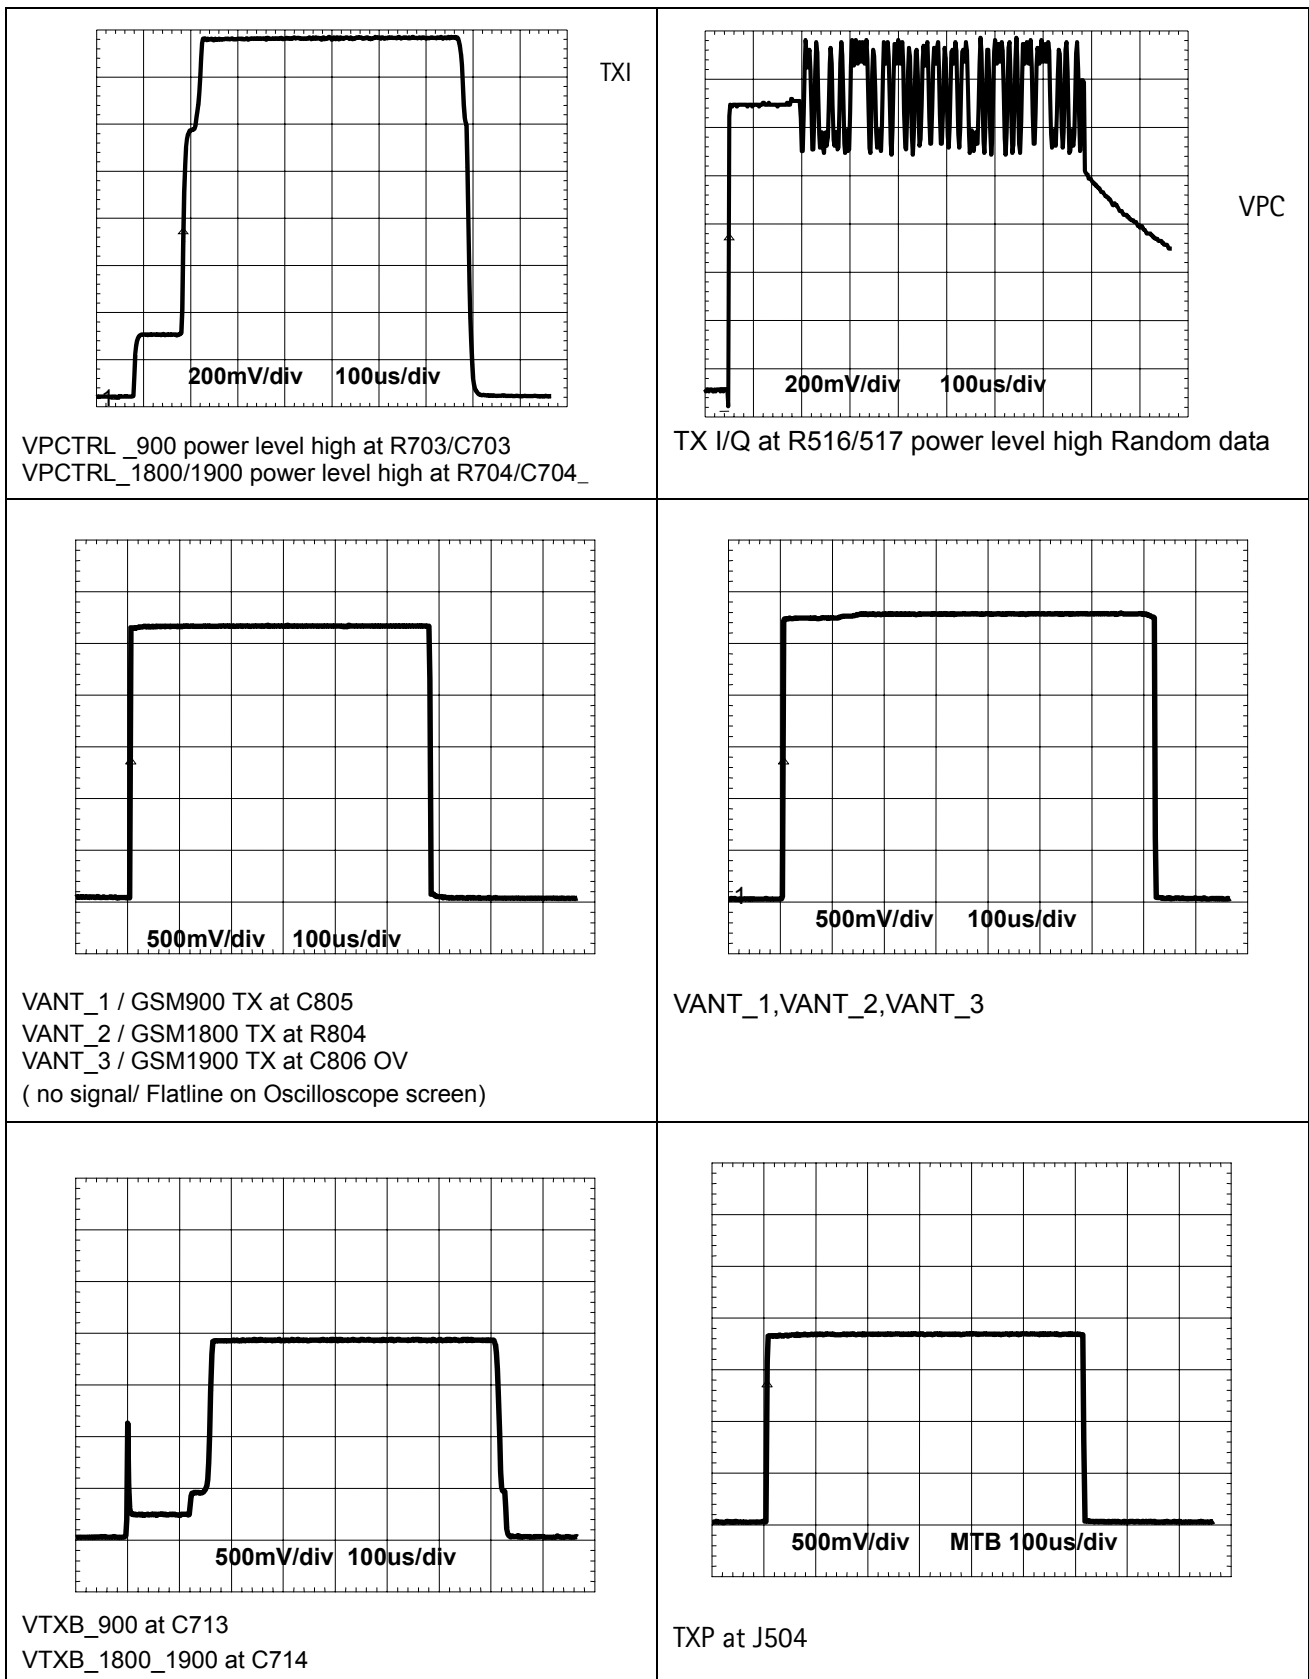


Figure 7: Tx out signal, 900 band, burst mode, channel 37

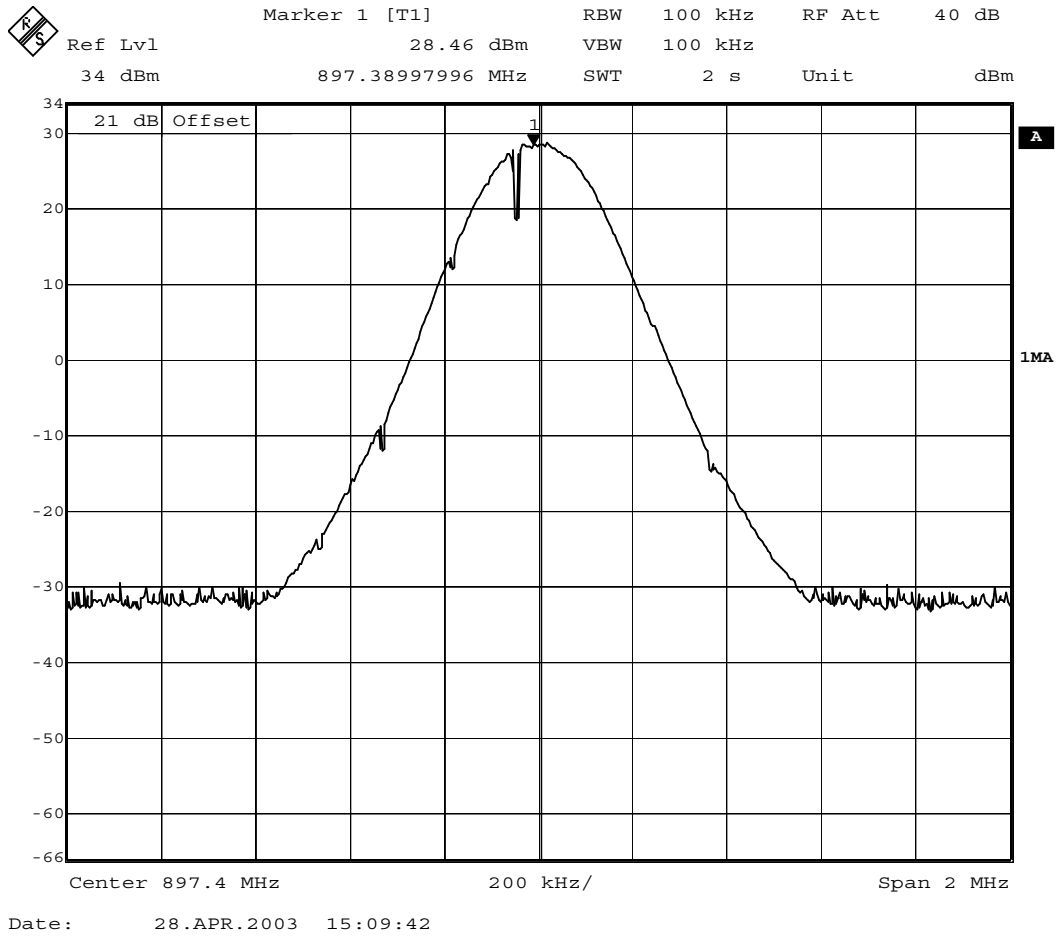

Additional information for EDGE troubleshooting

EDGE mode troubleshooting differs slightly from basic GSM troubleshooting.

Establish connection to the phone normally (see GSM900/1800/1900 troubleshooting instructions).

Select product from the menu:

File -> Choose Product -> RH-20

From toolbar set operating mode to "Local"

Activate RF controls window from the menu:

Testing -> RF Controls

From the RF controls window:

Select Band "GSM900" or "GSM1800" or "GSM1900" (Default="GSM900")

Set Active unit to "Tx" (Default="Rx")

Set Edge "On" (Default="Off")

Set Operation mode to "Burst" (Default="Burst")

Set Tx data type to "Alternate PN9" (Default="All1")

Set Rx/Tx channel to 37 on GSM900 or 700 on GSM1800 or 661 on GSM1900 (Defaults)

Set power level to 8 (Default = 19) on GSM900 or to 2 (Default = 15) on GSM1800 or GSM1900

NOTE! For GSM900 Edge power levels 5, 6 and 7 are not in use and for GSM1800&1900 Edge power levels 0 and 1 are not in use.

Figure 8: Transmitter EDGE troubleshooting

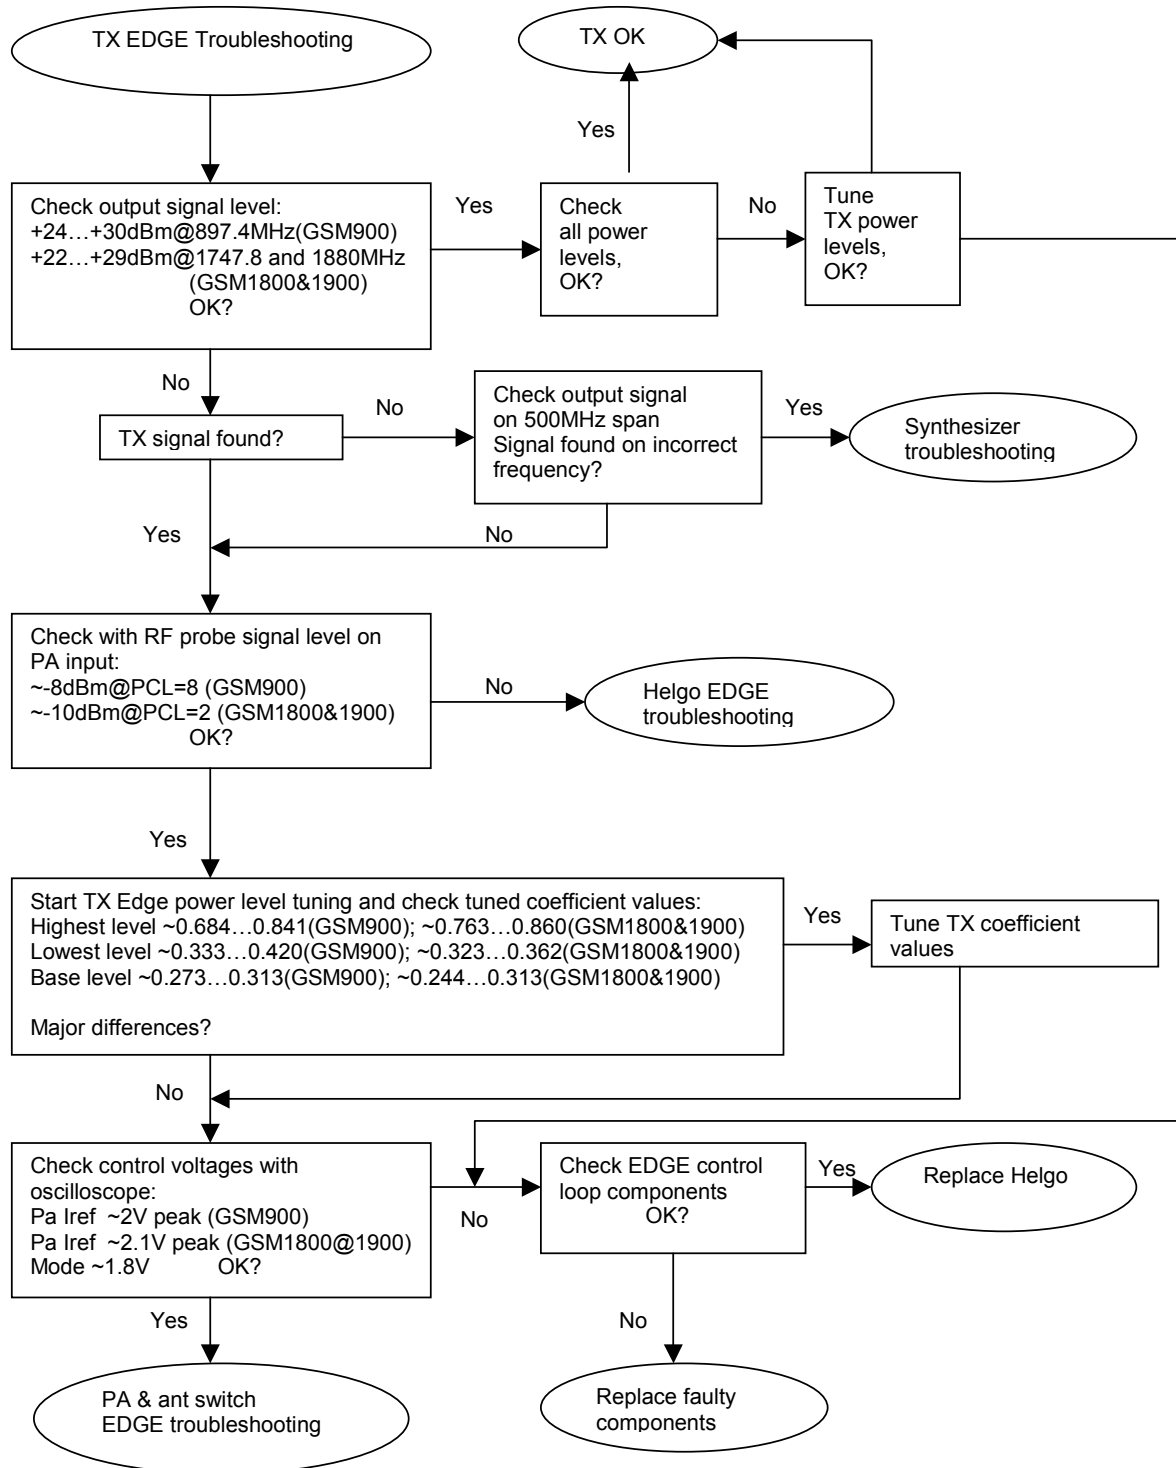


Figure 9: Helgo EDGE troubleshooting


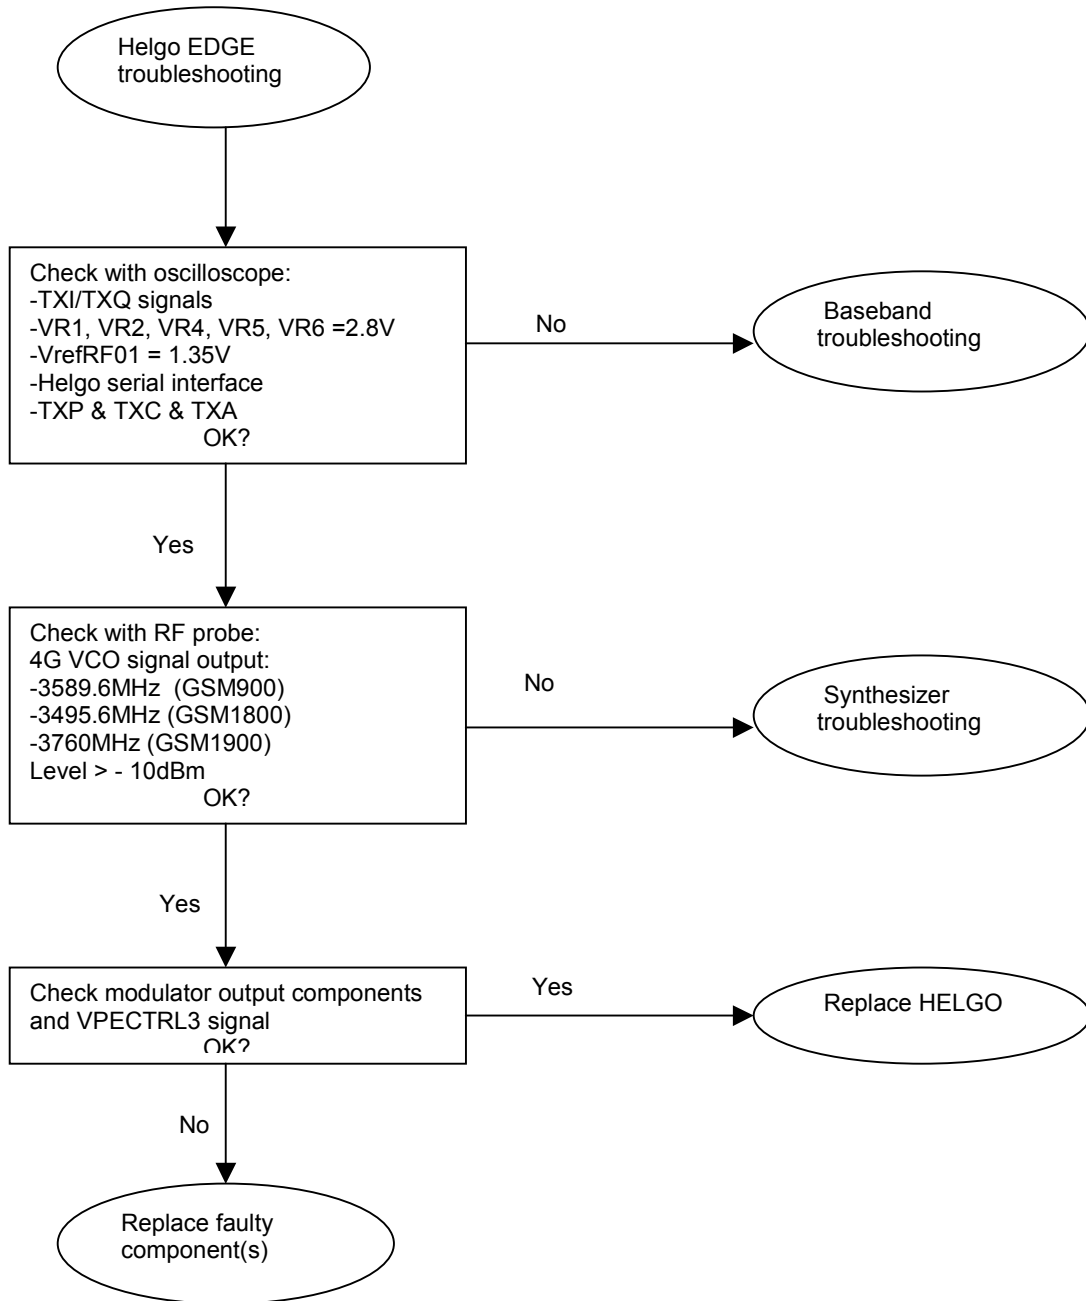


Figure 10: Pa & ant switch EDGE troubleshooting

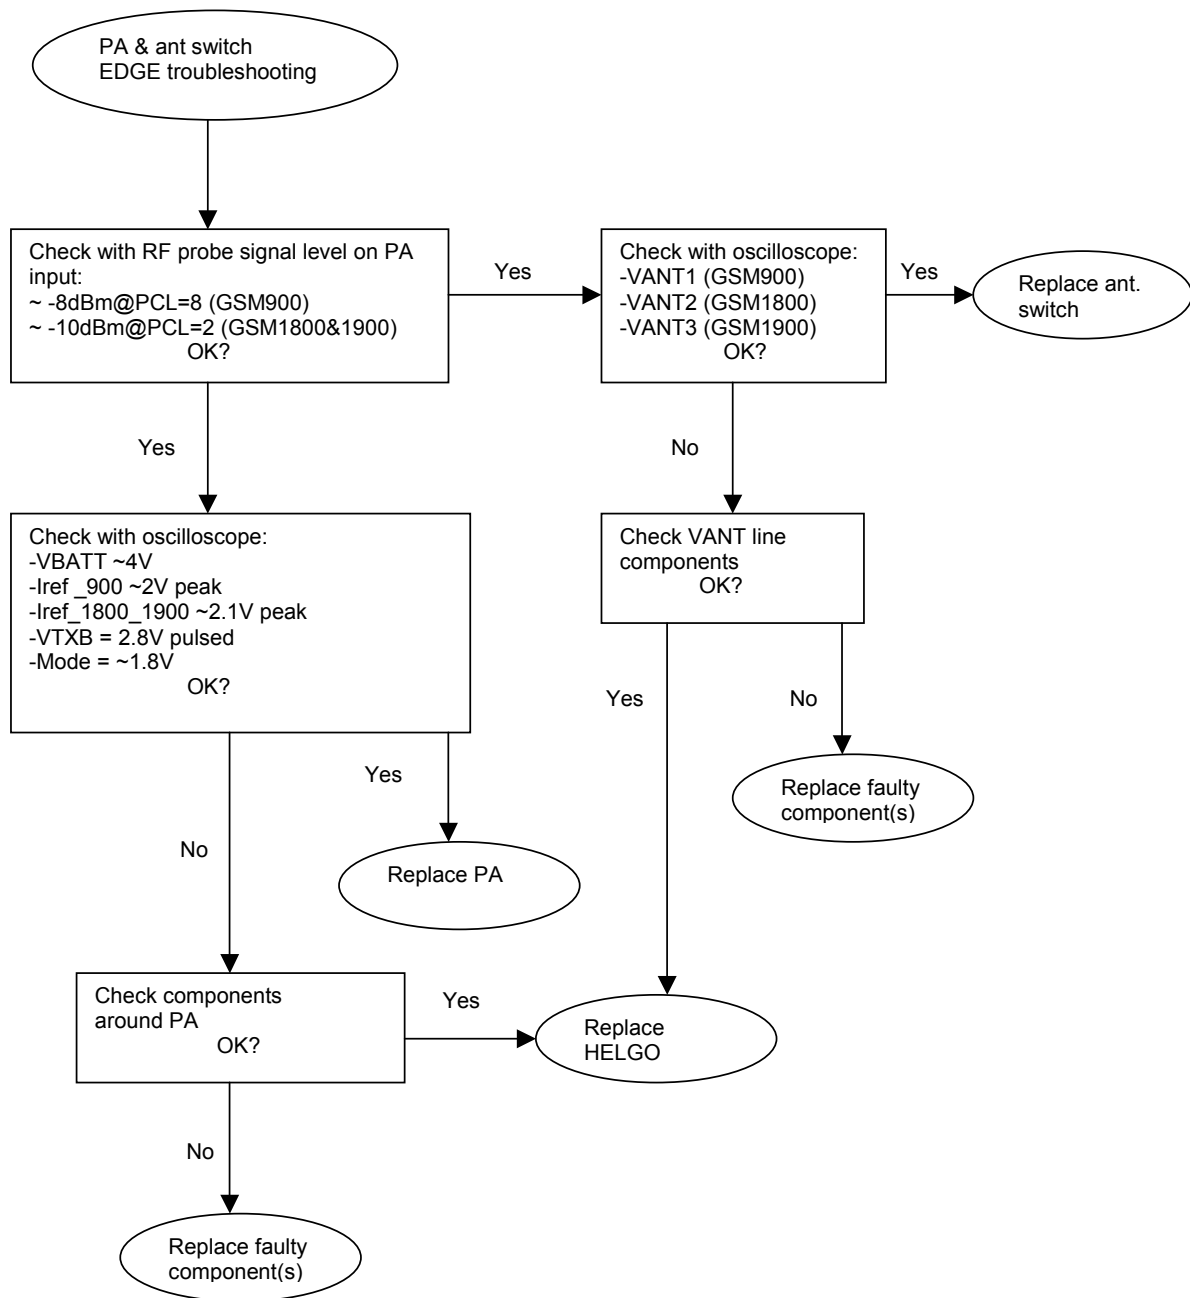

Pictures of EDGE transmitter signals

Figure 11: I_ref_900 power level 8 at R701/C701

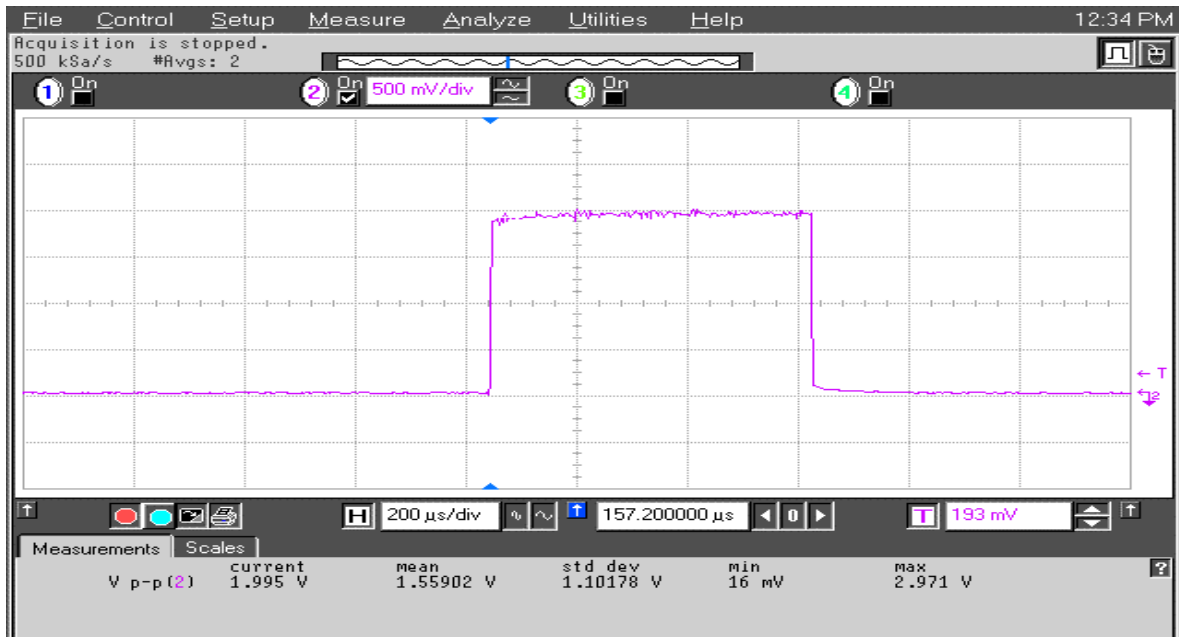


Figure 12: VTXB 900 power level 8 at C713

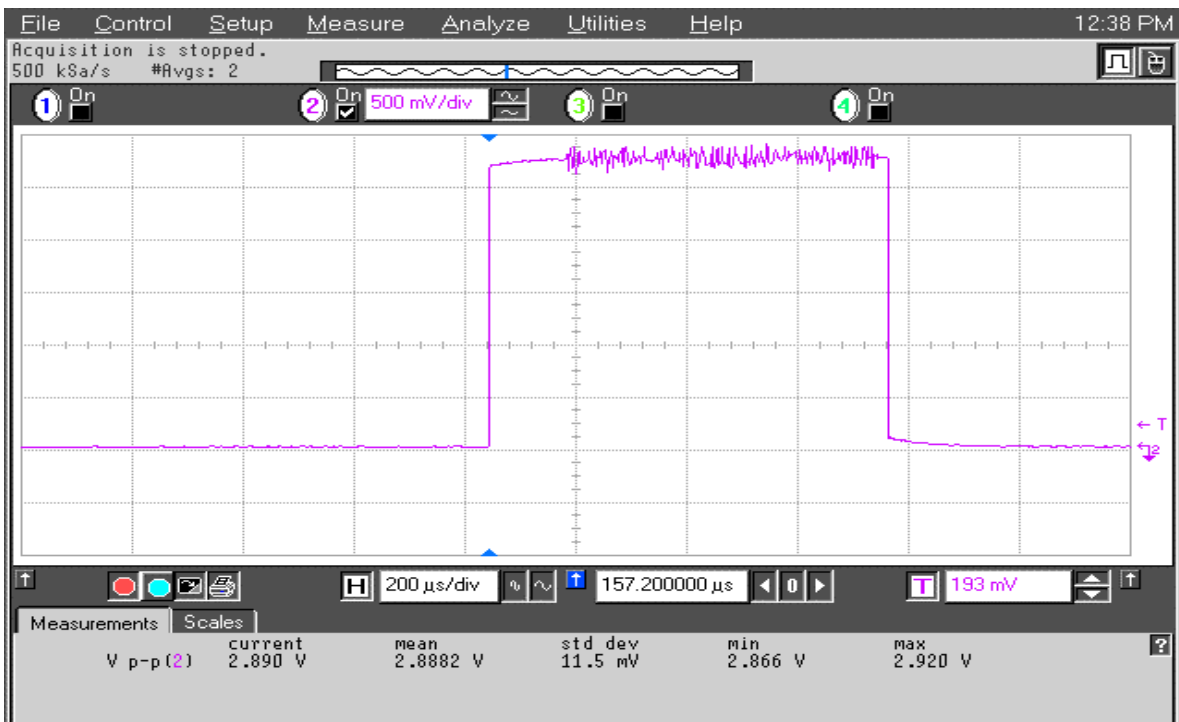


Figure 13: I_ref_1800/1900 power level 2 at R700/C700

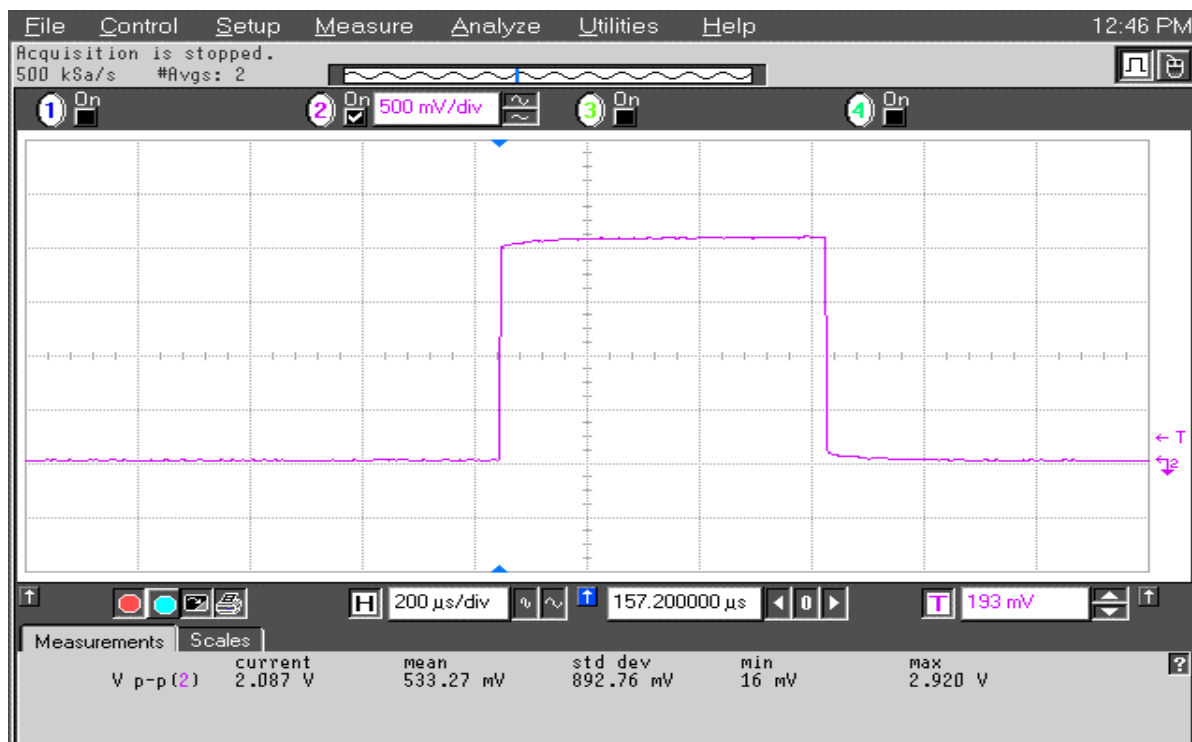


Figure 14: VTXB 1800/1900 power level 2 at C714

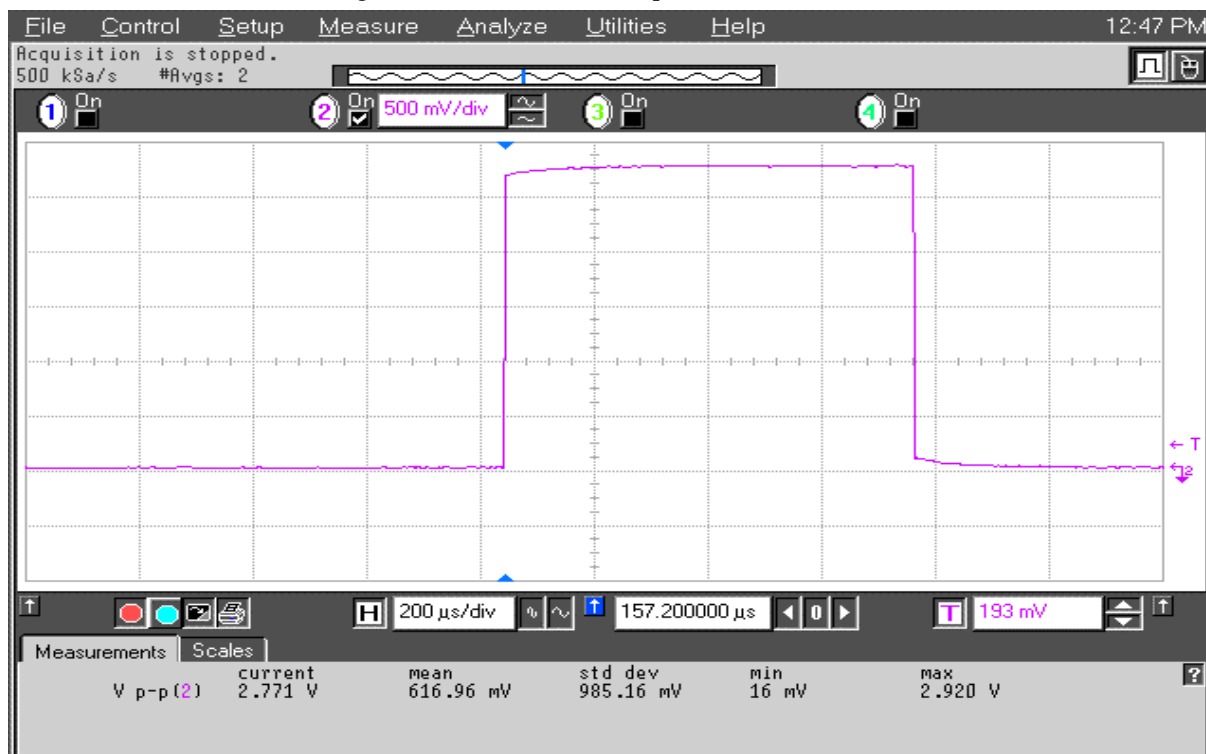


Figure 15: TXA 850/1800/1900 at C538

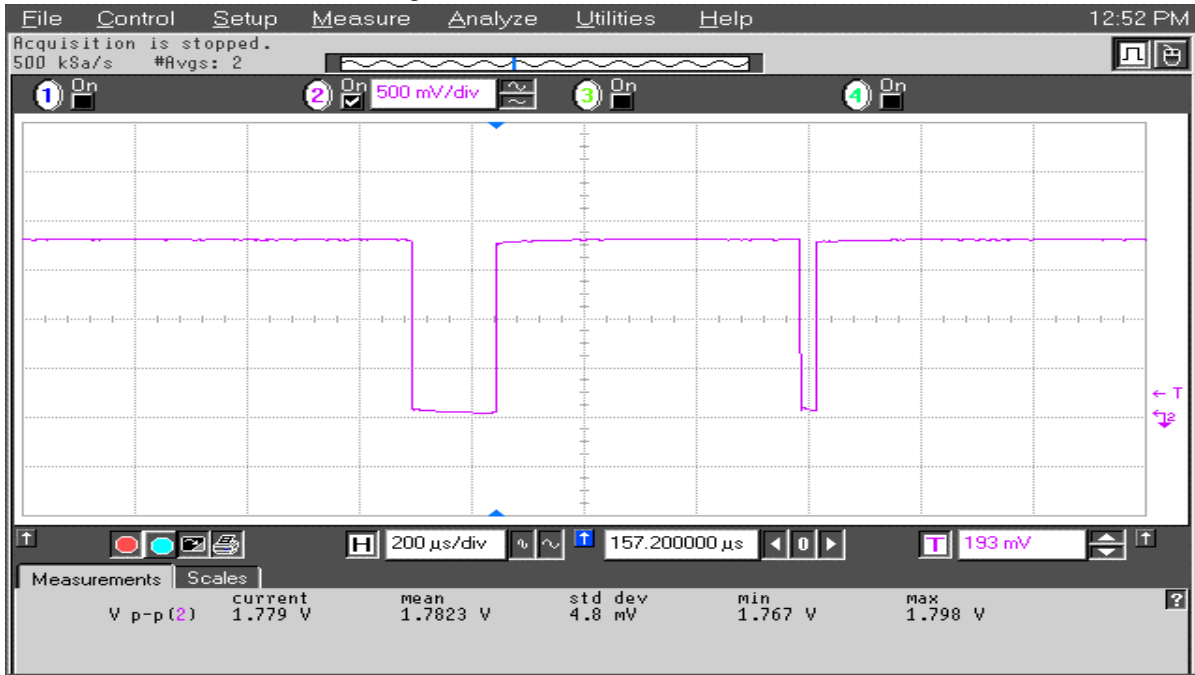


Figure 16: TXI/TXQ signal at C535/C536/R516/R517


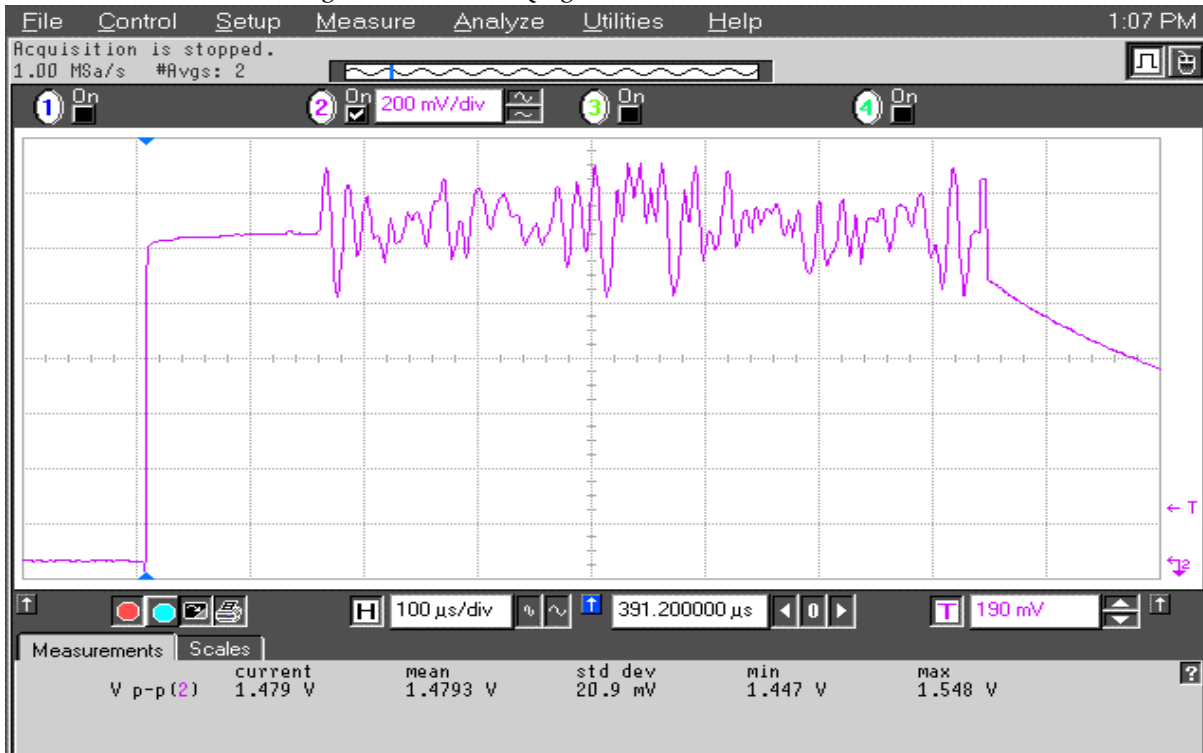


Figure 17: VPECTRL3 (ALC) signal at C512

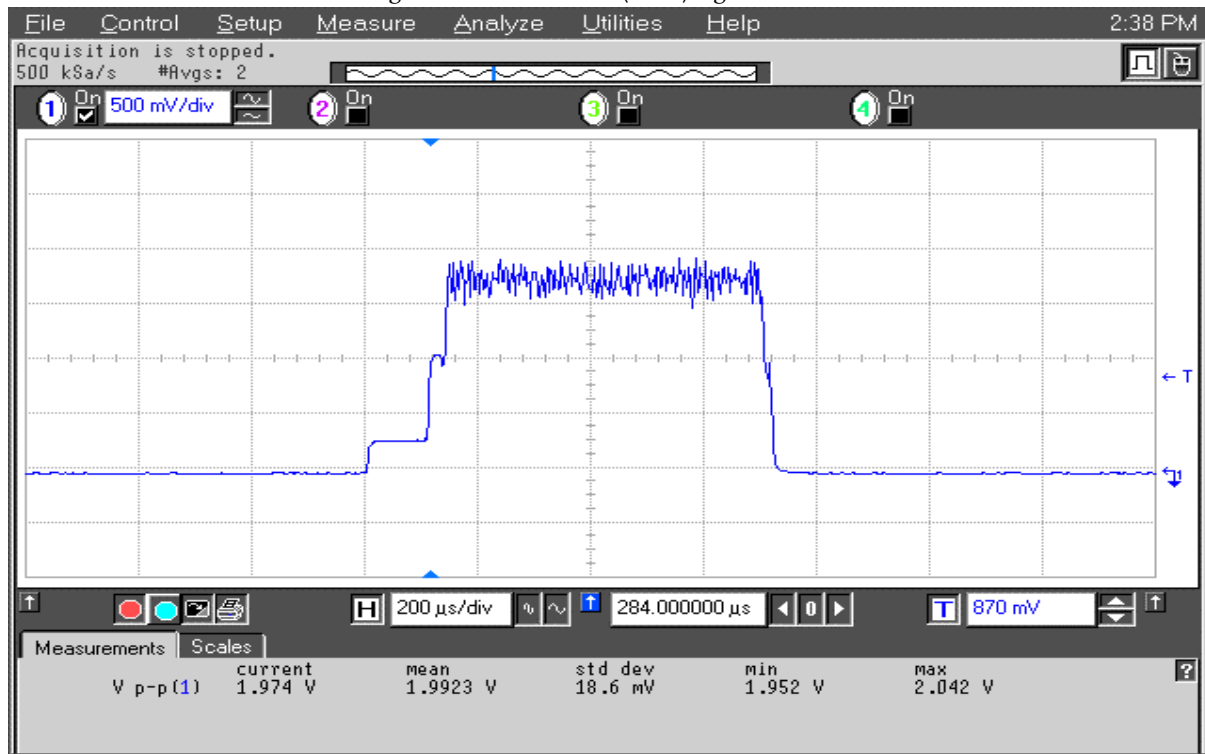

EGSM900, GSM1800 and GSM1900 Receiver

General instructions for Rx troubleshooting

Connect test jig to computer with DAU-9S cable or to FPS-8 Flash Prommer with XCS-4 modular cable.

Make sure that you have PKD-1 dongle connected to computers parallel port.

Connect DC power supply to module test jig with FLC-2 cable.

Set the DC supply voltage to 4.2V.

Connect an RF-cable to the module test jig (MJS-38) RF connector and to RF signal generator.

Set the phone module to test jig and start Phoenix service software.

Initialize connection to phone. (use FBUS driver when using DAU9S and COMBOX driver when using FPS-8)

Choose product from the menu

File -> Choose product -> RH-20

From toolbar set operating mode to "Local"

Activate RF controls window from the menu

Testing -> RF Controls

From the RF controls window:

- Select band "GSM900", "GSM 1800" or "GSM1900" (Default = "GSM900")

- Set Active unit to "Rx" (Default = "Rx")

- Set Operation mode to "Burst" (Default = "Burst")

For continuous mode:


- Set Operation mode to "Continuous"

- Set AGC to "12: FEG_ON + DTOS_ON + BB_30=Vgain60" (maximum gain setting used in normal mode)

(Default = "14: FEG_ON + DTOS_ON + BB_42=Vgain72")

- Set Rx/Tx channel to 37 on GSM900 band, 700 on GSM1800 band or 661 on GSM1900

Figure 19: GSM1900 RX I or Q signal (trace2), burst mode.

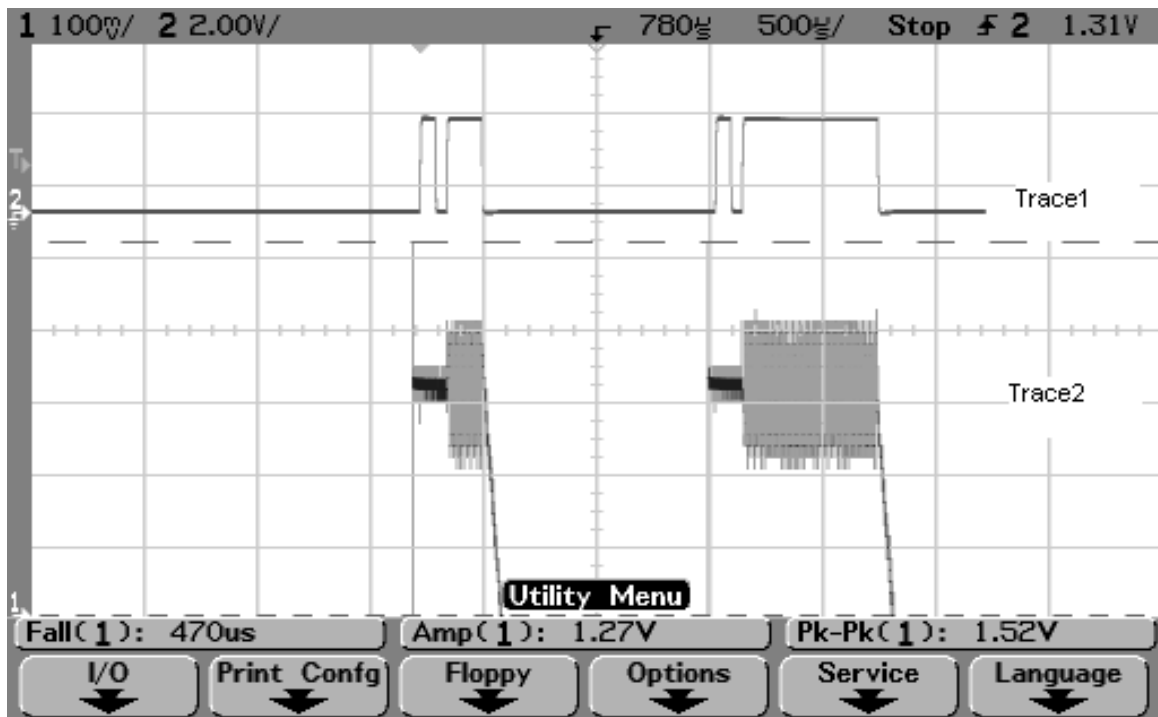


GSM1900 receiver burst mode I or Q signal at ch 661 with input signal 1960.067MHz, level -90 dBm at RF-connector.

Trace2: With wider time scaling both monitoring and own RX bursts are seen, 1st burst (shorter) is monitoring and 2nd burst (longer) is own RX burst.

Trace1: External LNA VCC supply voltage at burst mode, input level -90 dBm. Measured from testpoint LNA_VCC.

Figure 20: RX I&Q, phase difference 90 deg between signals.

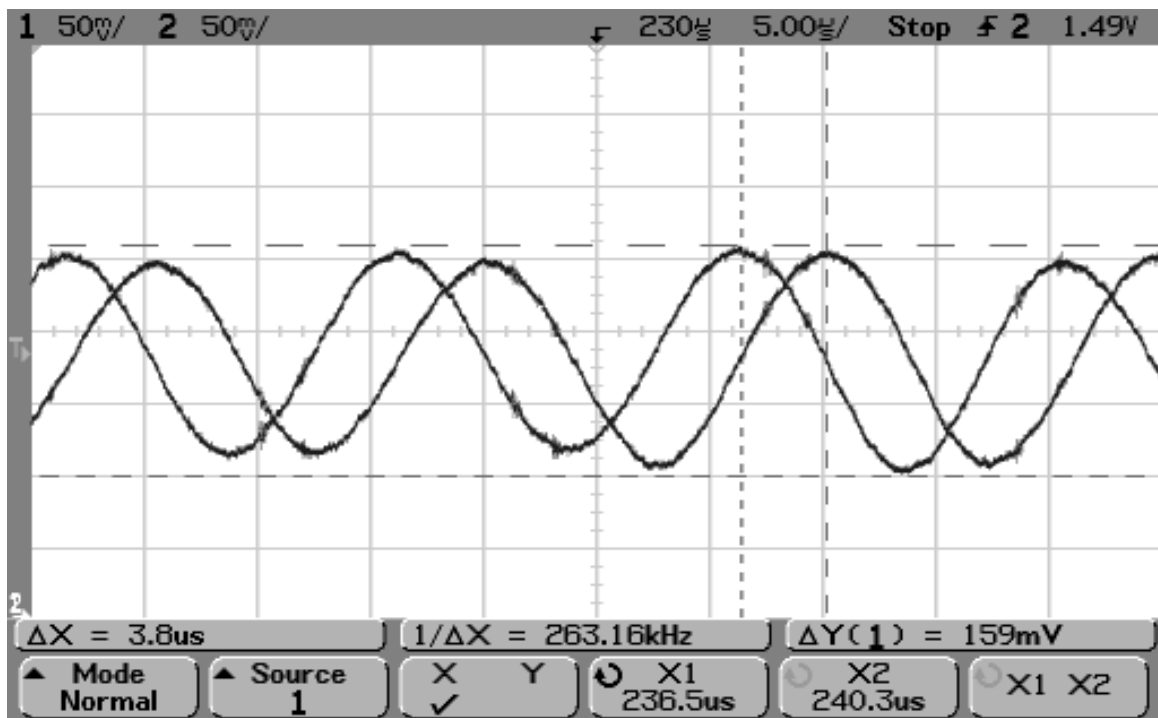

Detailed view of GSM900 continuous mode RX I and Q signals measured from testpoints RXI and RXQ simultaneously.


Used channel 37, input signal 942.46771 MHz, level -90 dBm at antenna port, AGC setting 12.

Phase difference should be 90 degrees between RX I and Q signals at all bands.

Troubleshooting diagram for GSM900 receiver

Phone in "Continuous" mode, AGC setting "12"


Figure 21: GSM900 receiver troubleshooting

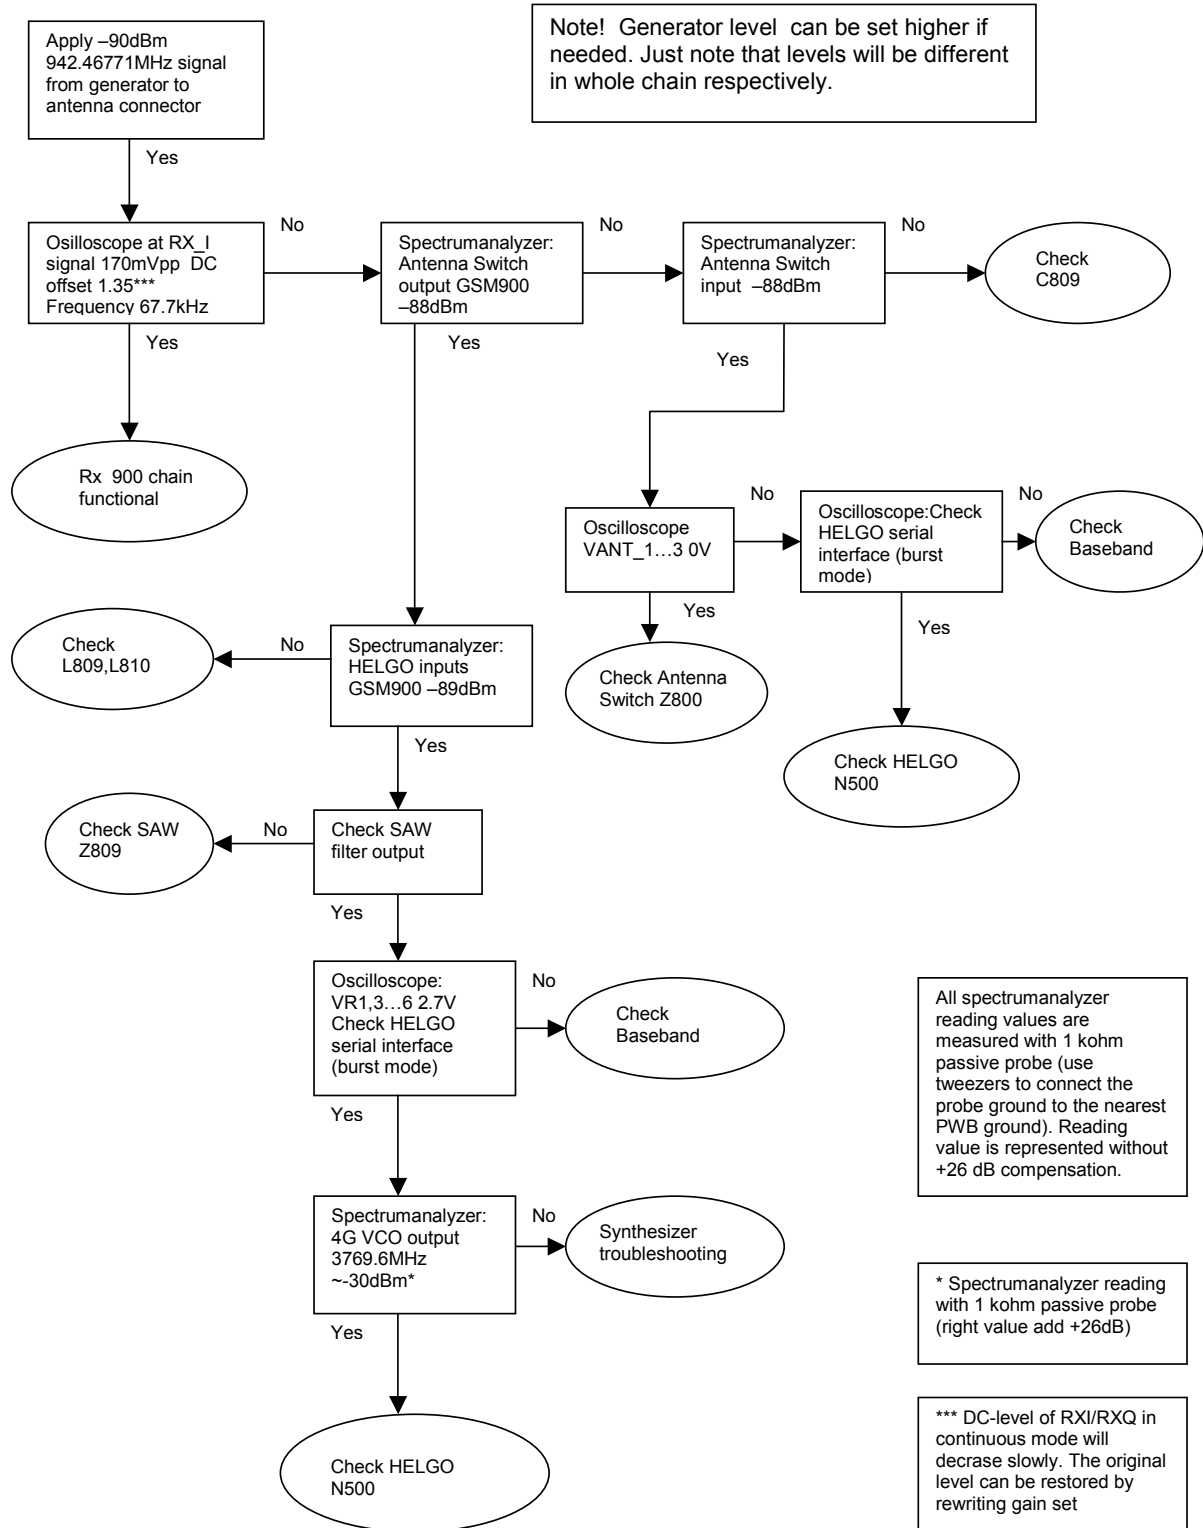

Troubleshooting diagram for GSM1800 receiver

Phone in "Continuous" mode, AGC setting "12"


Figure 22: GSM1800 receiver troubleshooting

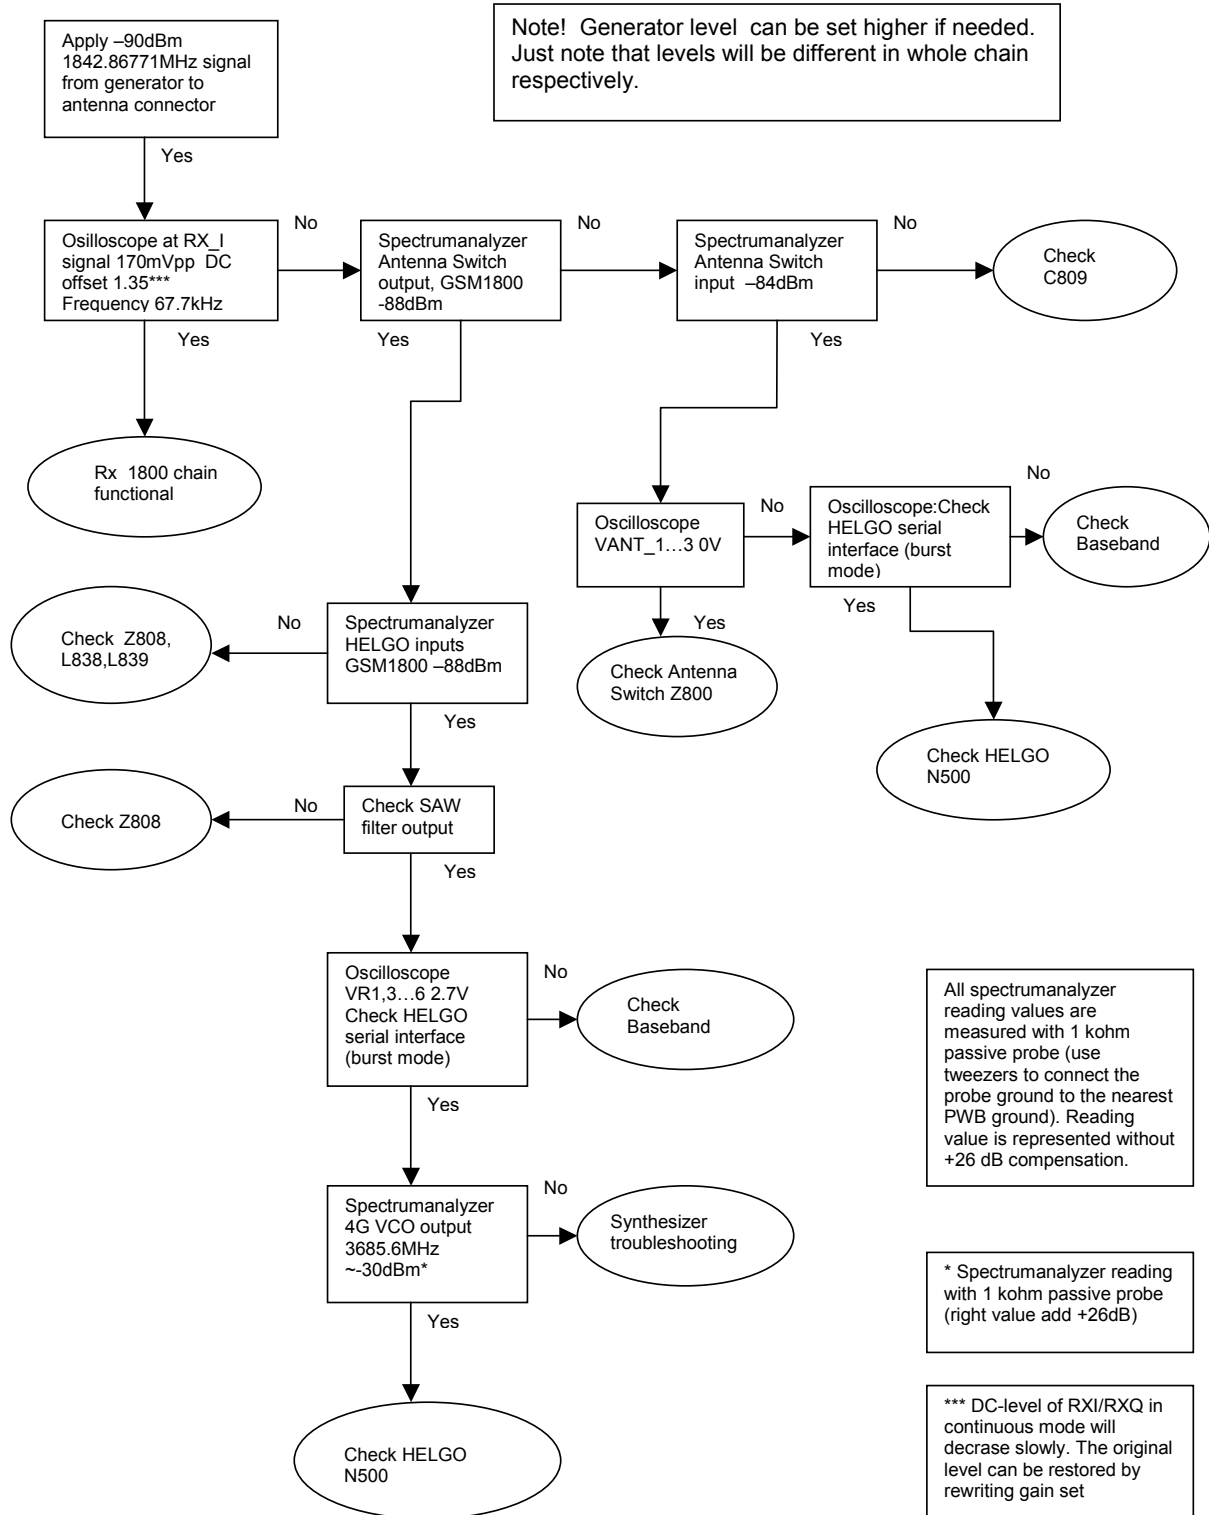

Troubleshooting diagram for GSM1900 receiver

Phone in "Continuous" mode, AGC setting "12"

Figure 23: GSM1900 receiver troubleshooting

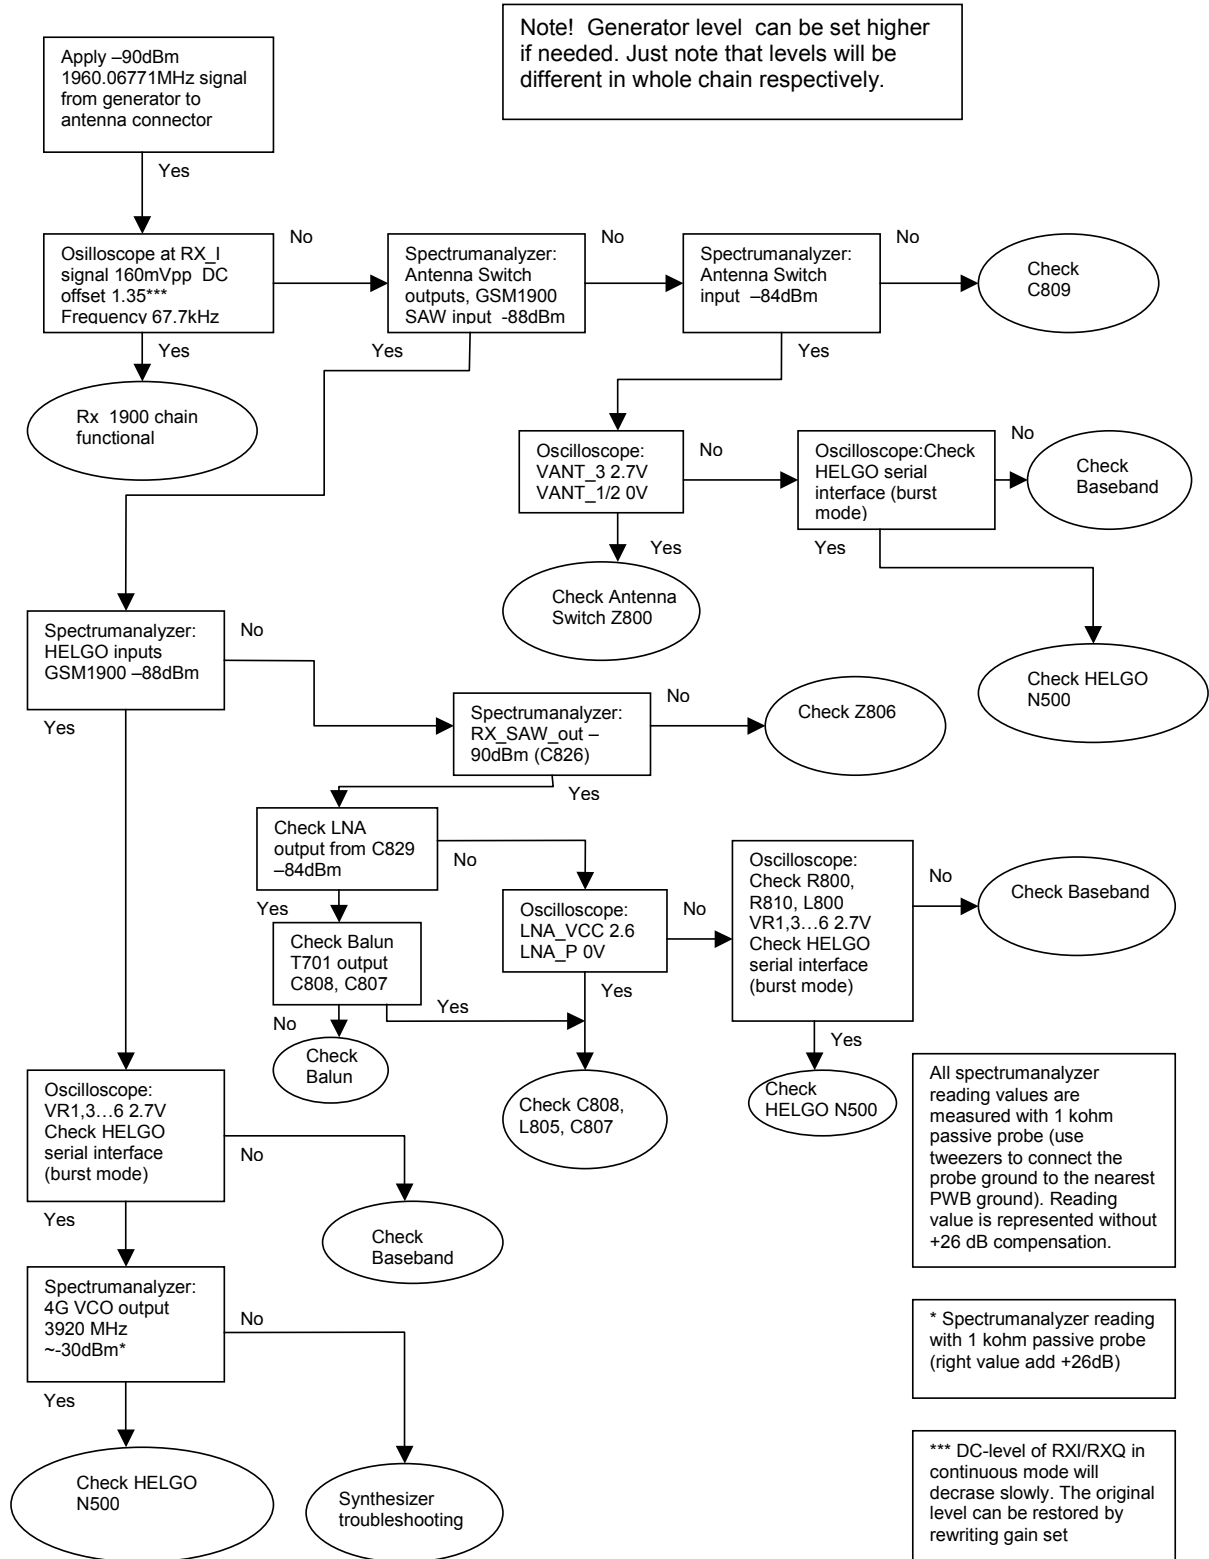

Synthesizer

General instructions for synthesizer troubleshooting

Connect test jig to computer with DAU9S cable or to FPS-8 Flash Prommer with XCS-4 modular cable.

Make sure that you have PKD-1 dongle connected to computers parallel port.

Connect DC power supply or FPS-8 to module test jig with PCS-1 cable.

Set the DC supply voltage to 4.2V.

Set the phone module to test jig and start Phoenix service software

Initialize connection to phone. (use FBUS driver when using DAU9S and COMBOX driver when using FPS-8)

Select product from the menu

File -> Choose product -> RH-20

From toolbar set operating mode to "Local"


Activate RF controls window from the menu

Testing -> RF Controls

From the RF controls window

- Select band "GSM900", "GSM 1800" or "GSM1900" (Default = "GSM900")
- Set Active unit to "Rx" (Default = "Rx")
- Set Operation mode to "Continuous" (Default = "Burst")
- Set Rx/Tx channel to 37 on GSM900 band, 700 on GSM1800 band, 661 on GSM1900 band (Defaults)

Figure 24: Synthesizer troubleshooting diagram

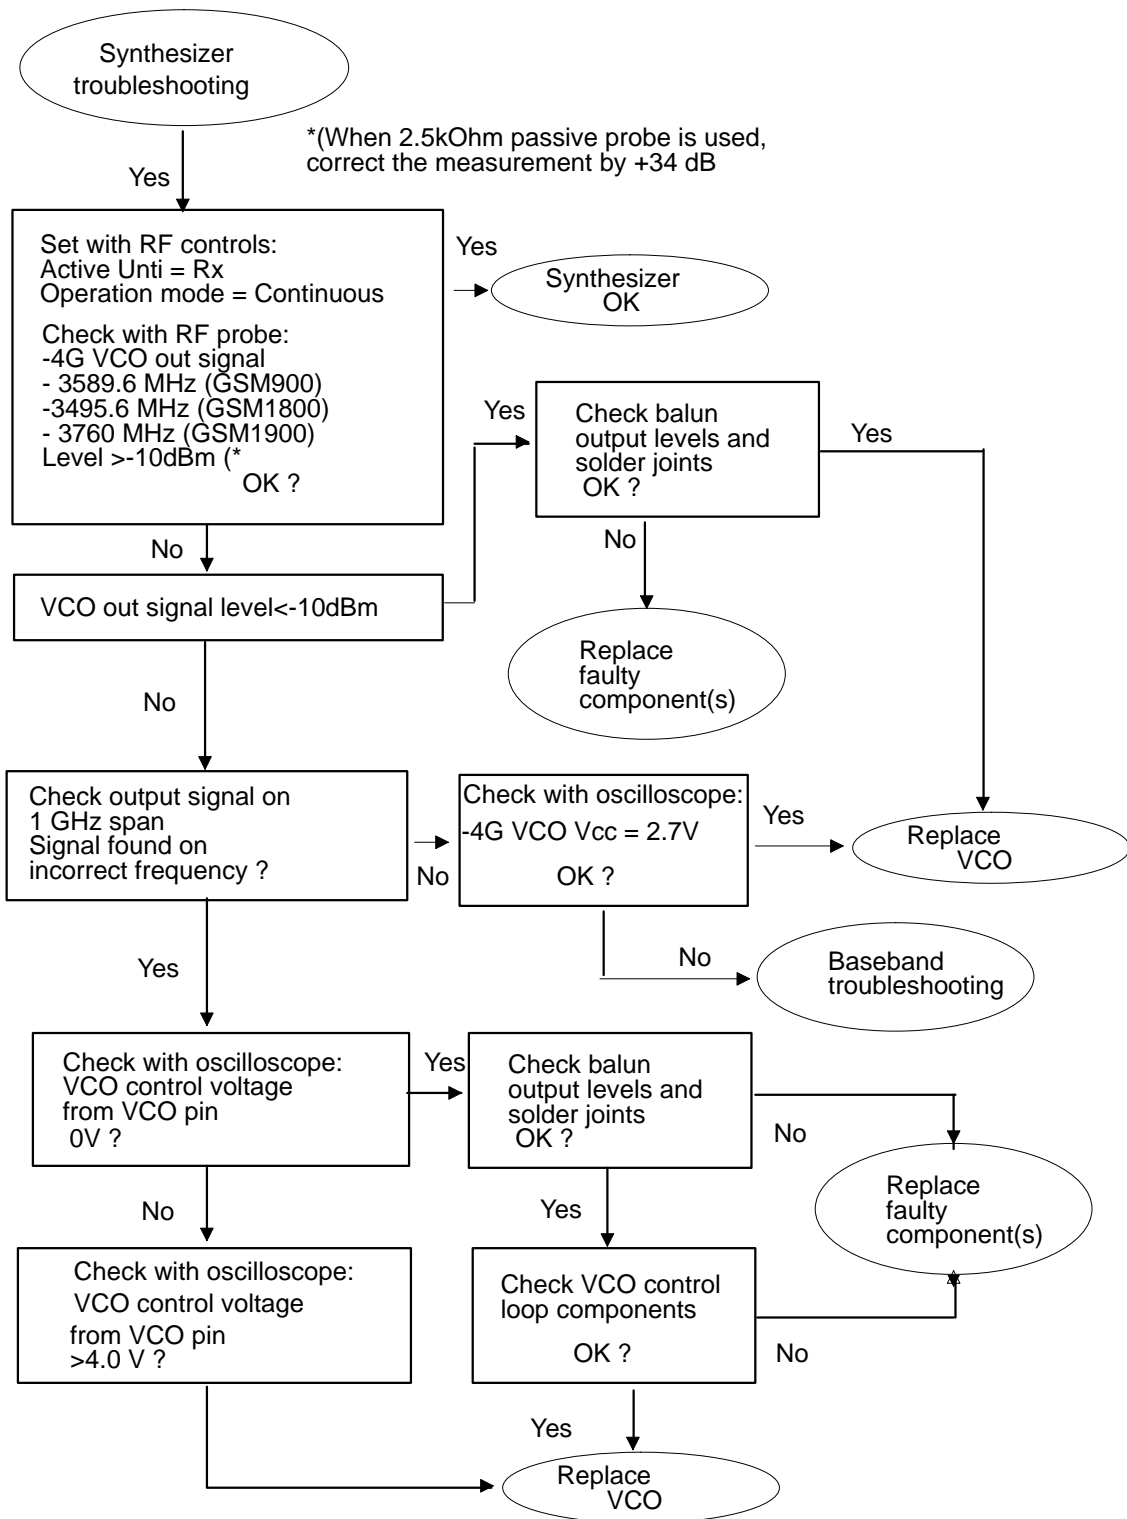

Pictures of synthesizer signals

Figure 25: 26MHz at G501 pin out

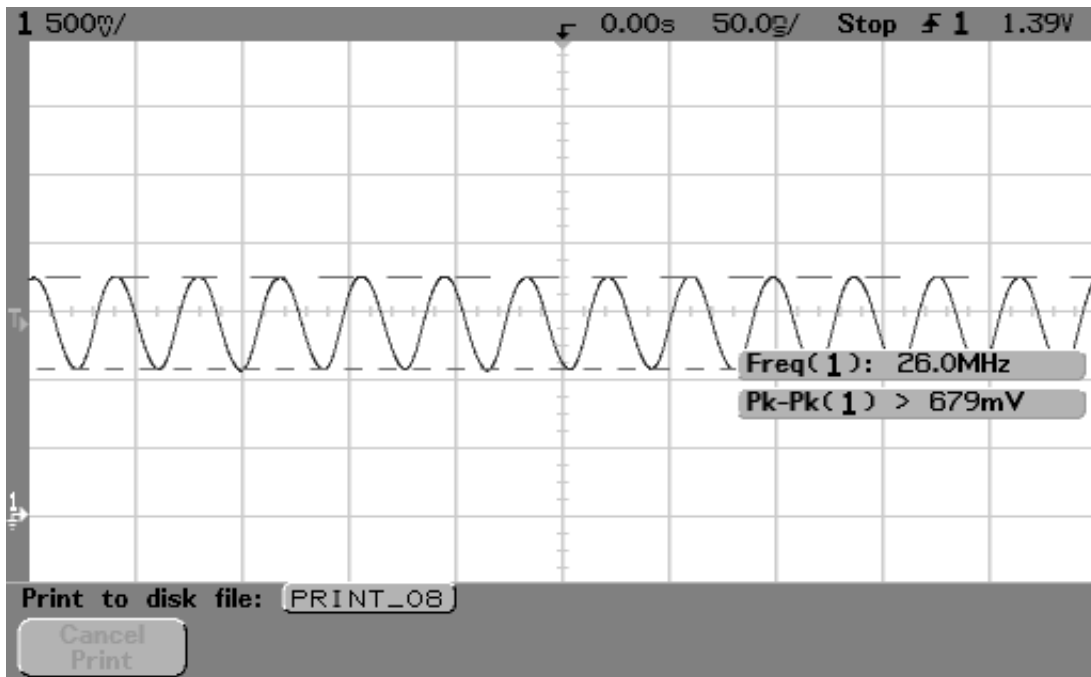


Figure 26: 26MHz RFCLK at R420/C420

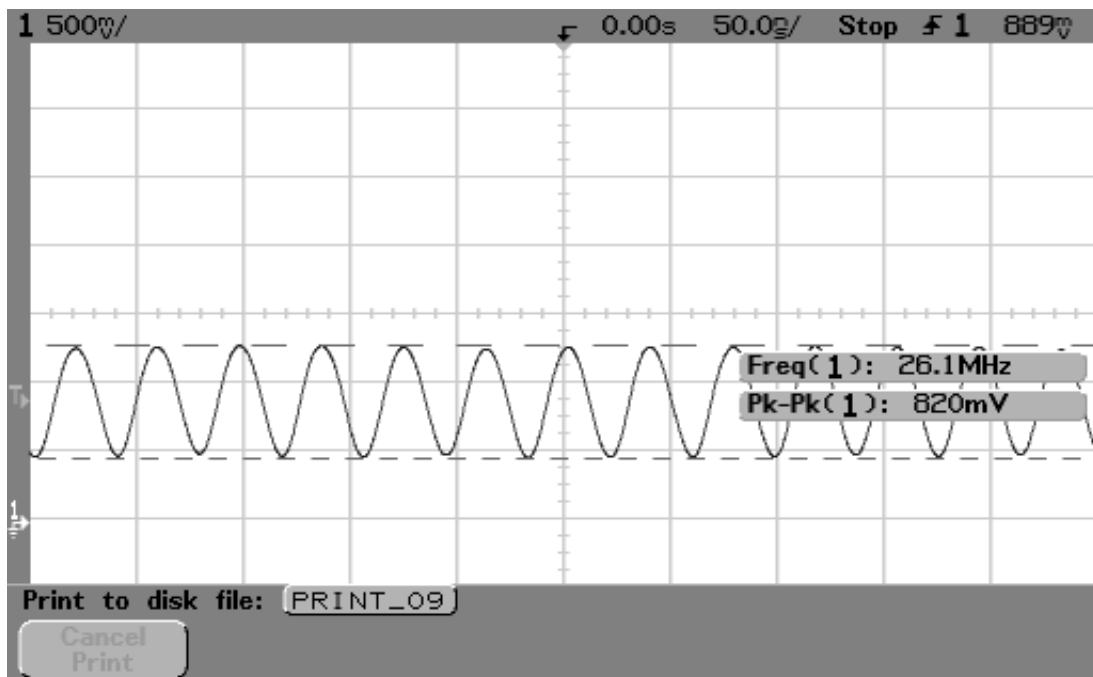


Figure 27: 1800 TX, channel 512, burst mode

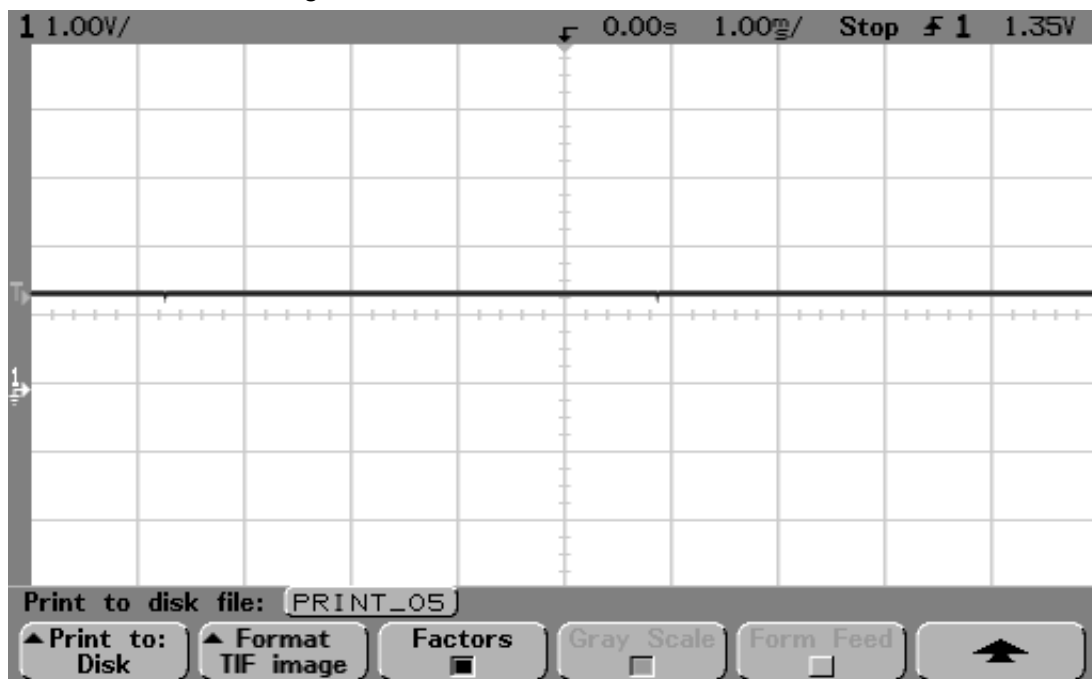


Figure 28: 1900 RX, channel 810, continuous mode




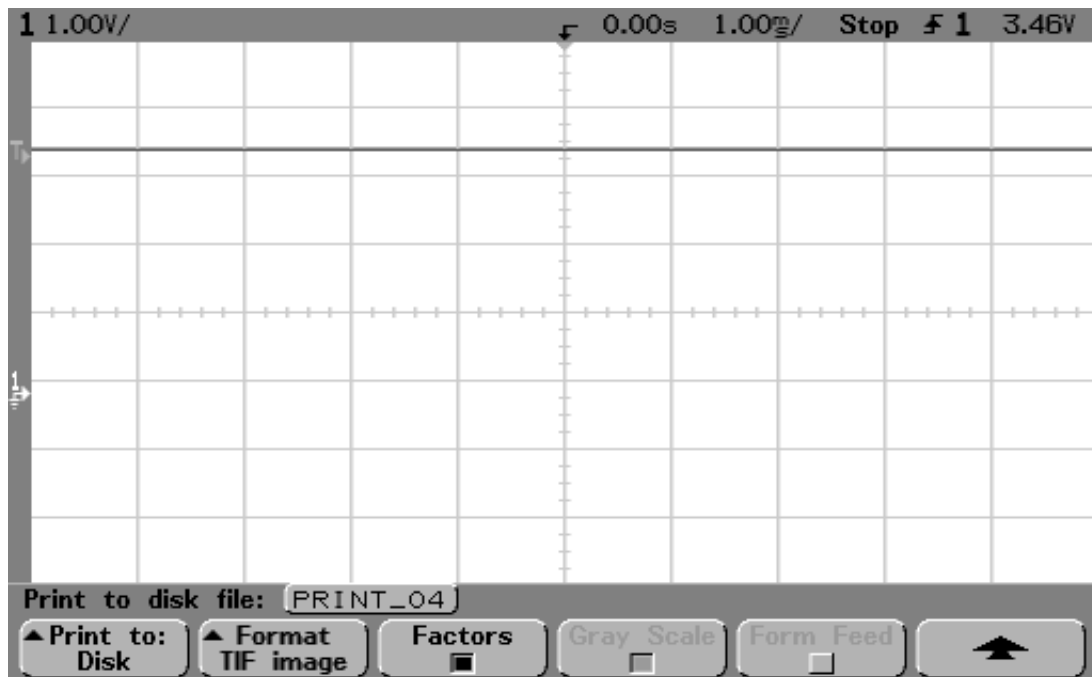



Figure 29: VCO output, 1800 band, ch700, RX on, continuous output

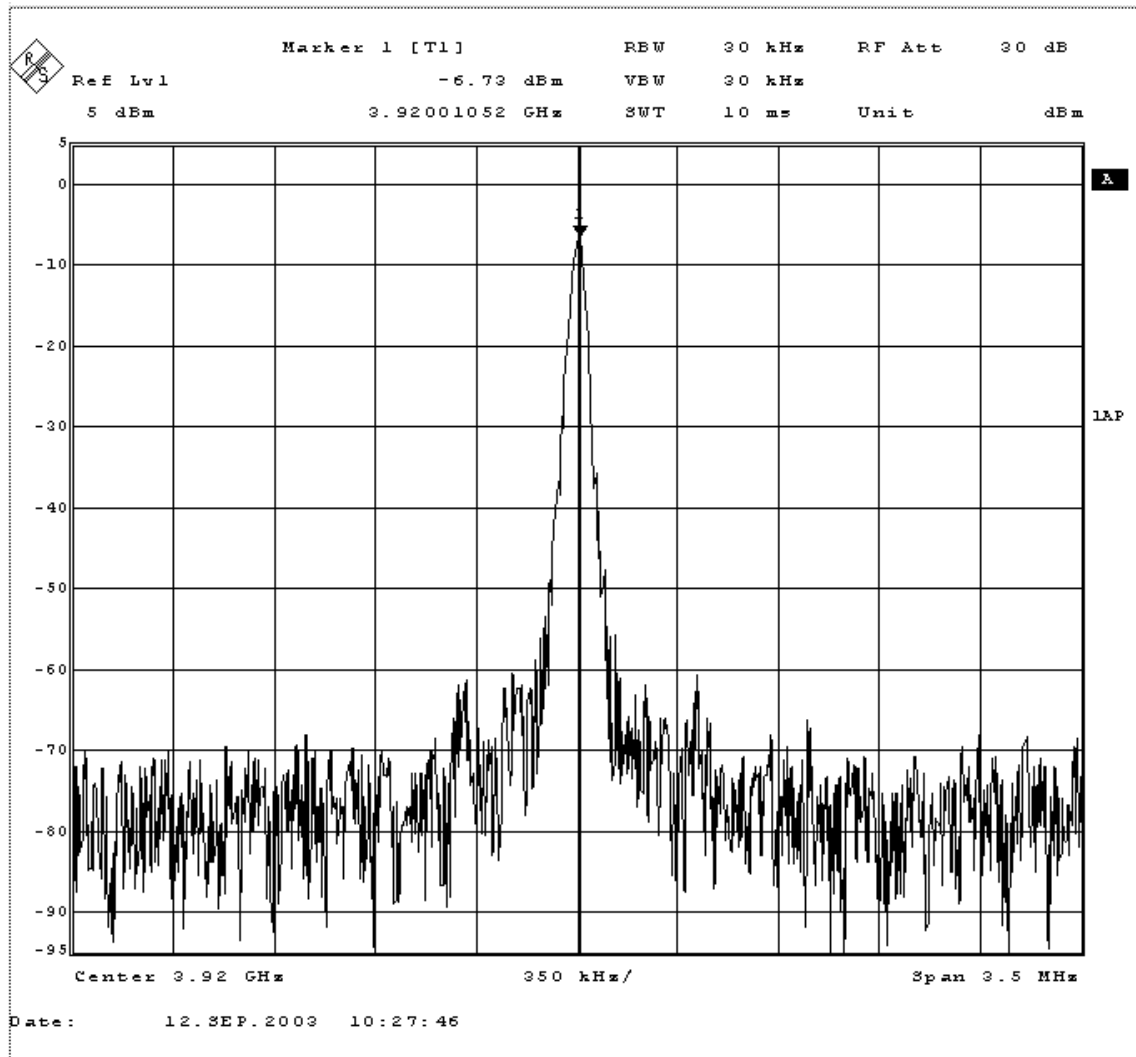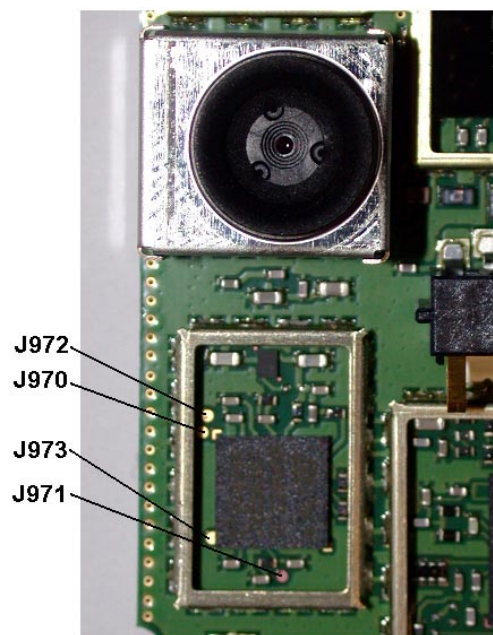

Baseband troubleshooting

Figure 1: Basic baseband test points

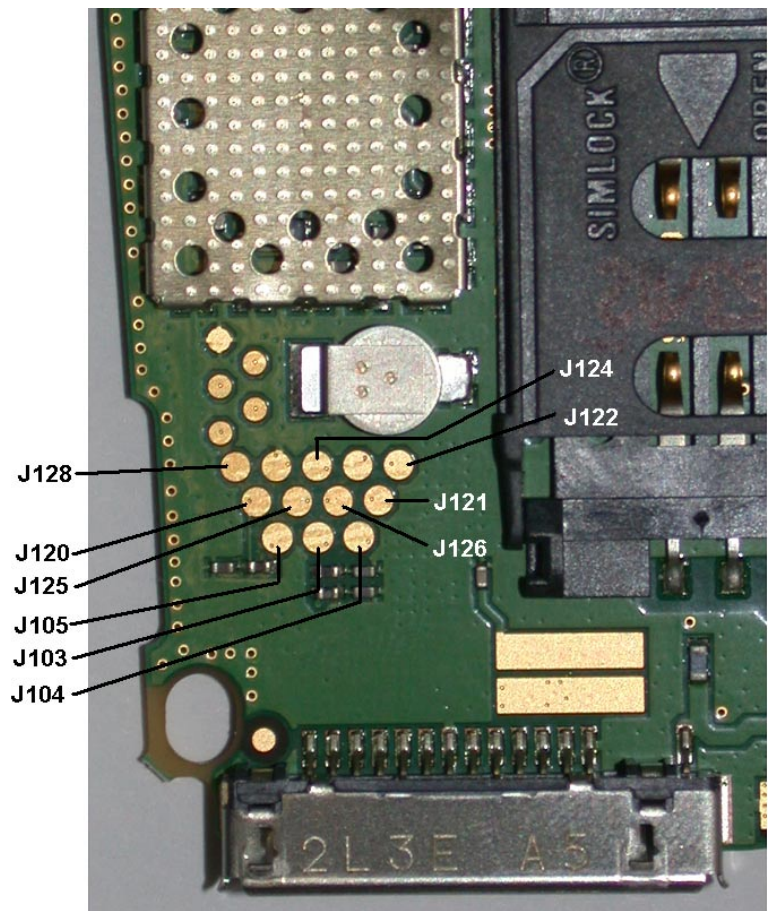


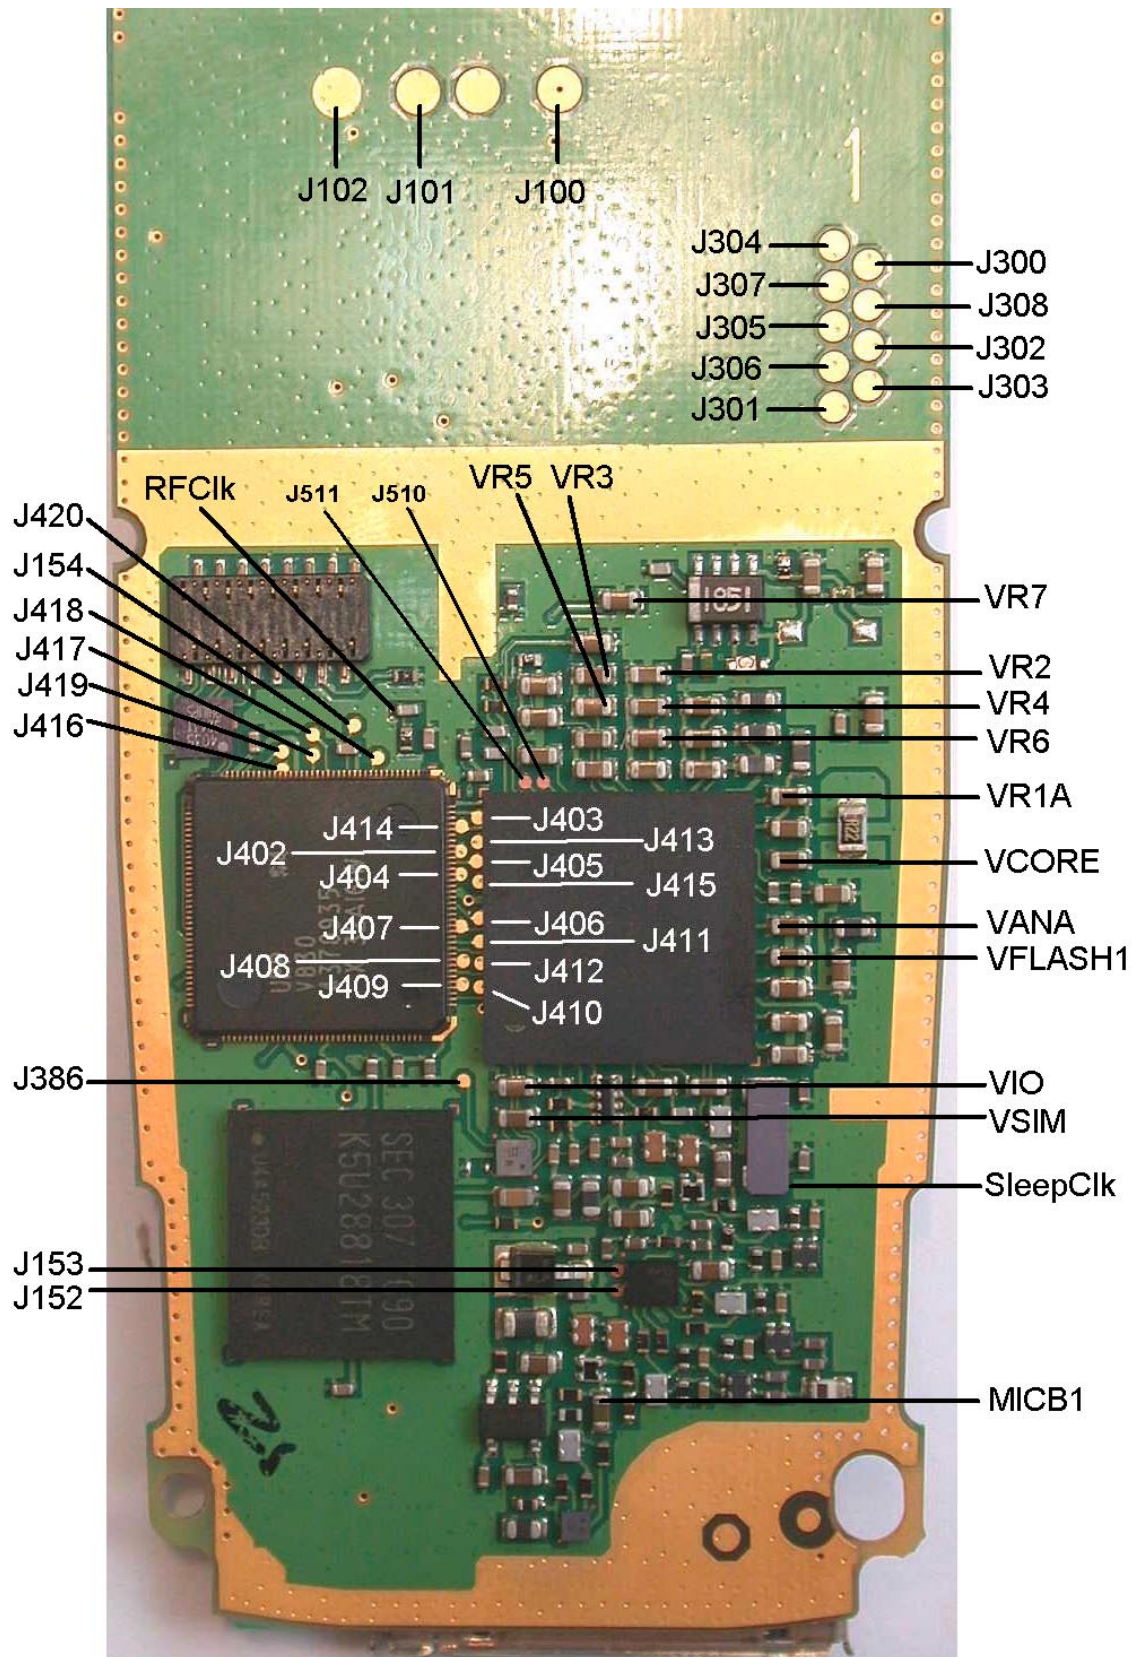

The following diagrams describe baseband troubleshooting.


Main Troubleshooting Diagram

Figure 2: Baseband general troubleshooting

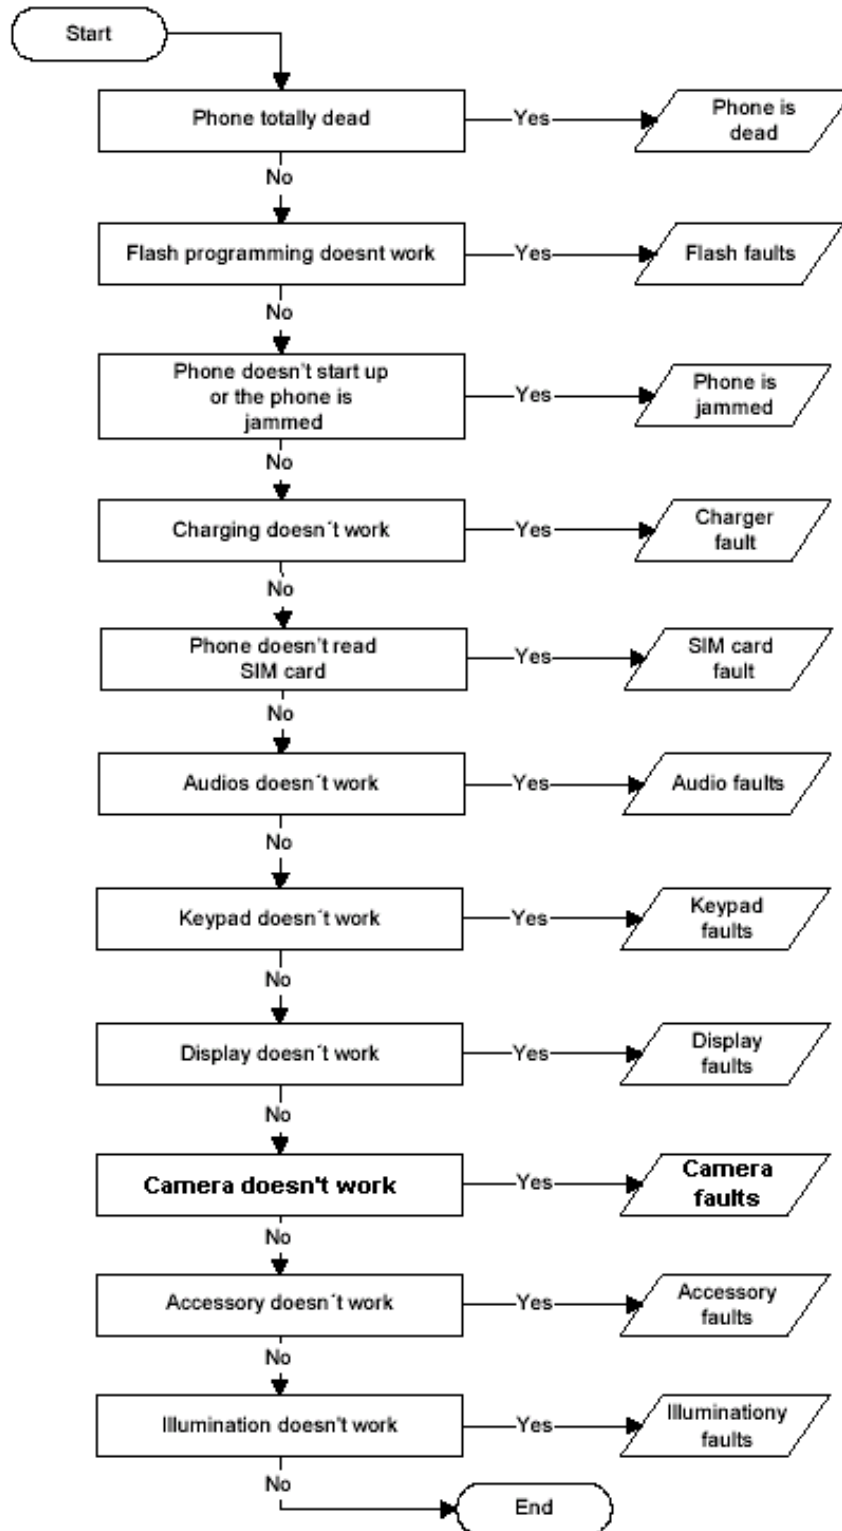


Phone is dead

Figure 3: Dead phone troubleshooting

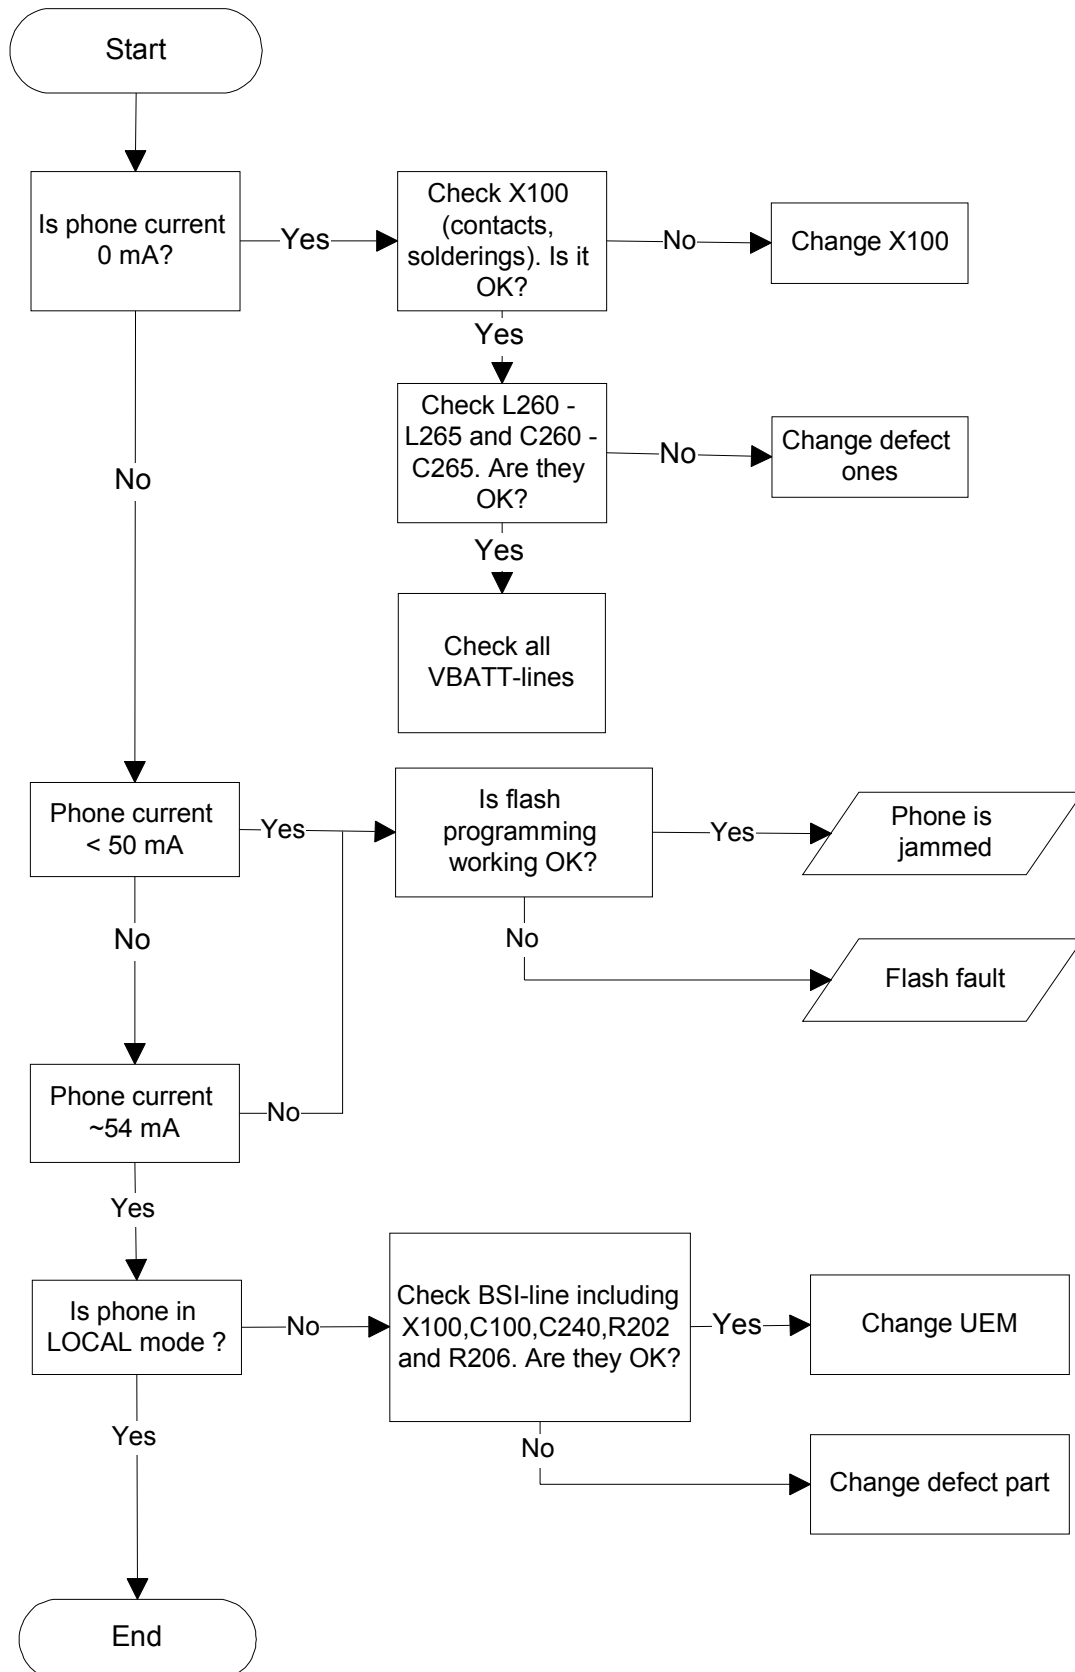

Flash Programming Fault

Figure 4: Flash programming troubleshooting

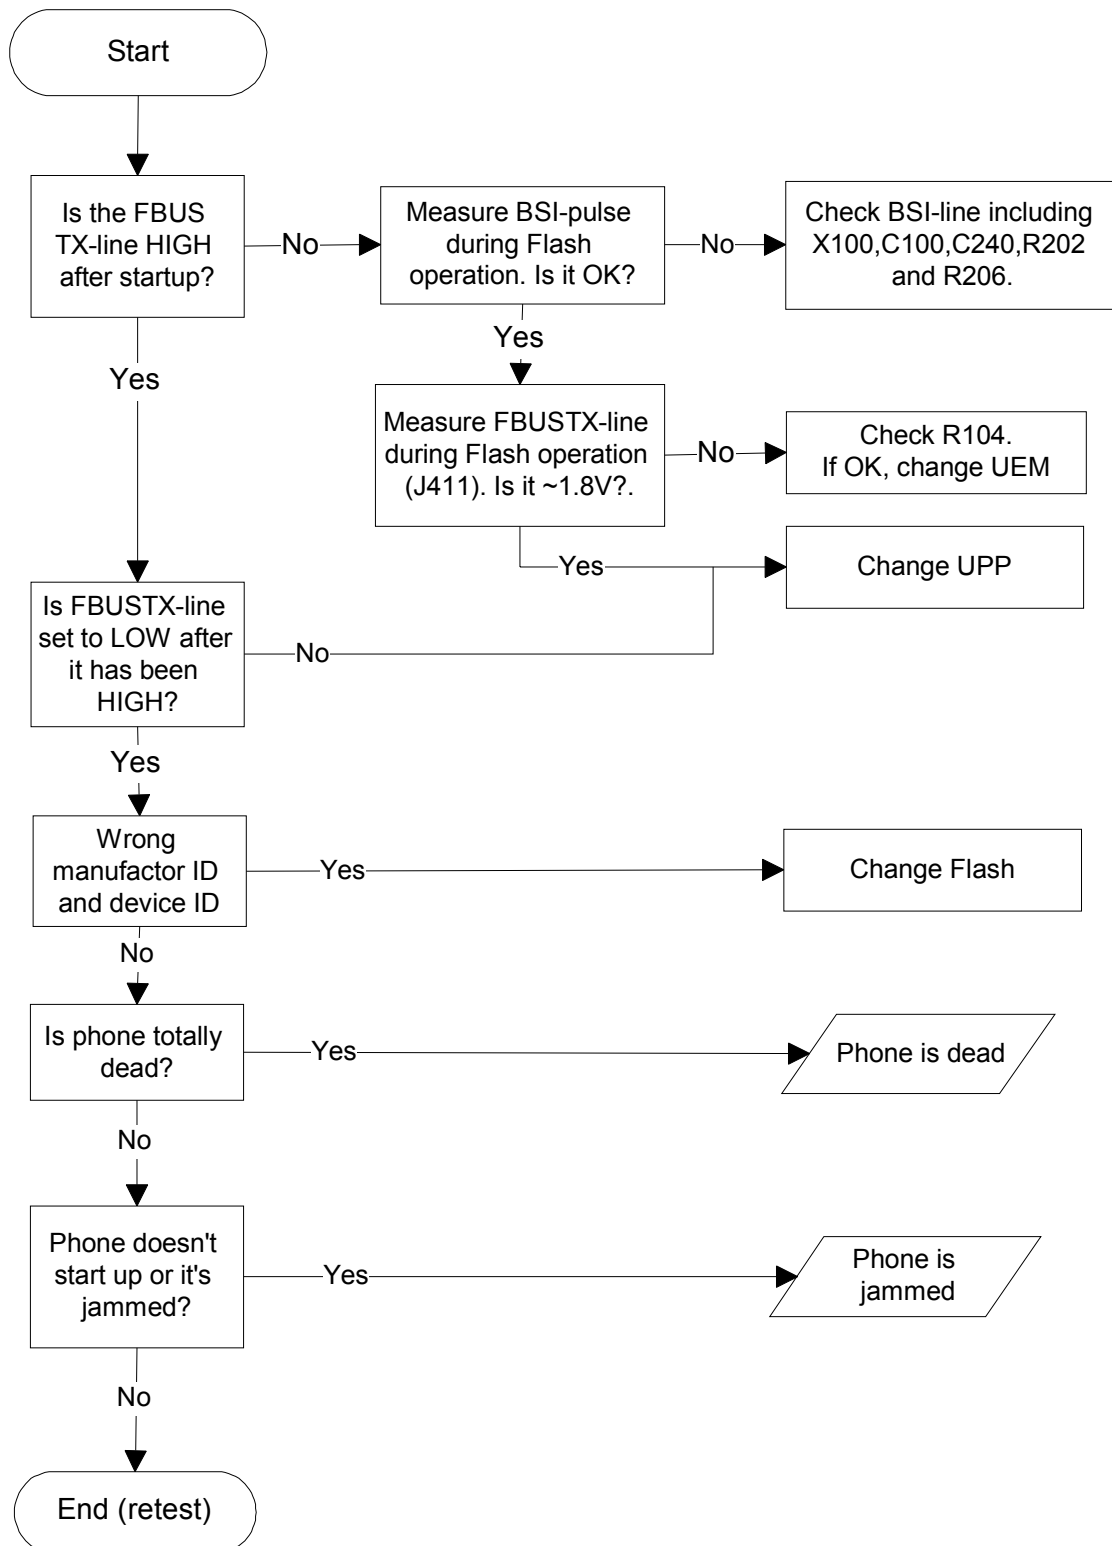

Phone is jammed

Figure 5: Jammed phone troubleshooting (1)



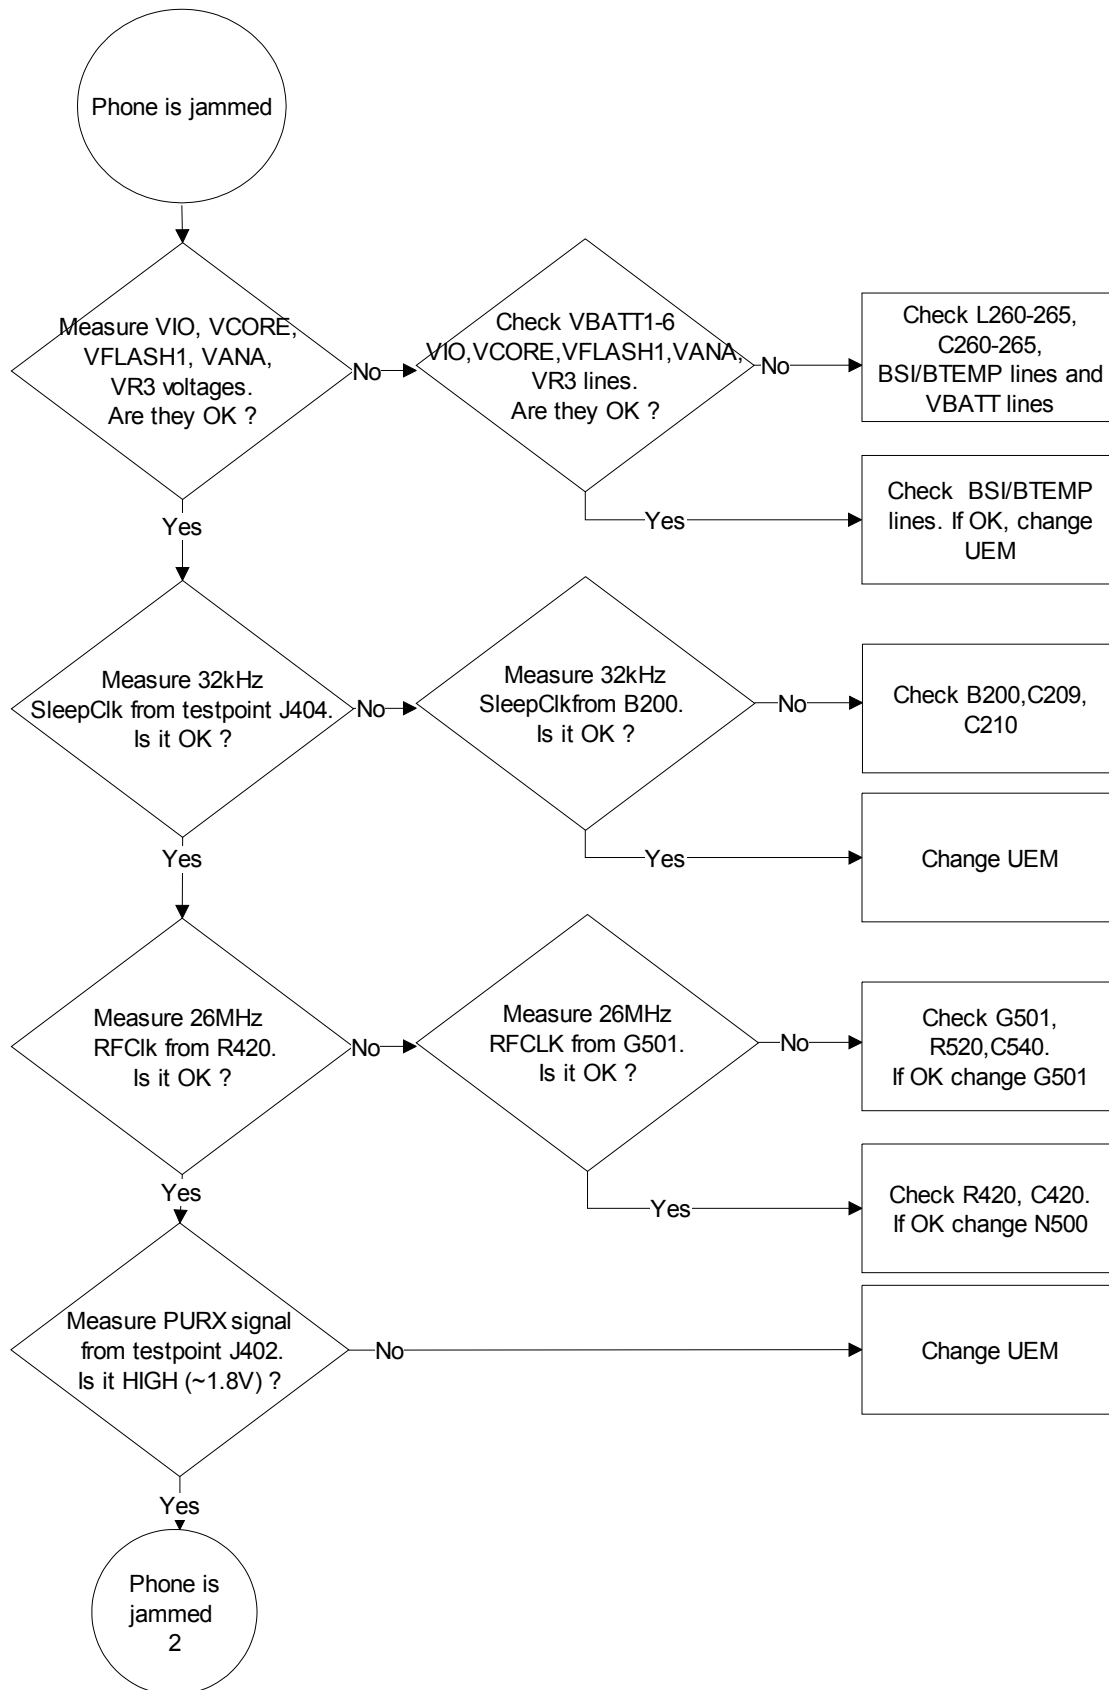


Figure 6: Jammed phone troubleshooting (2)

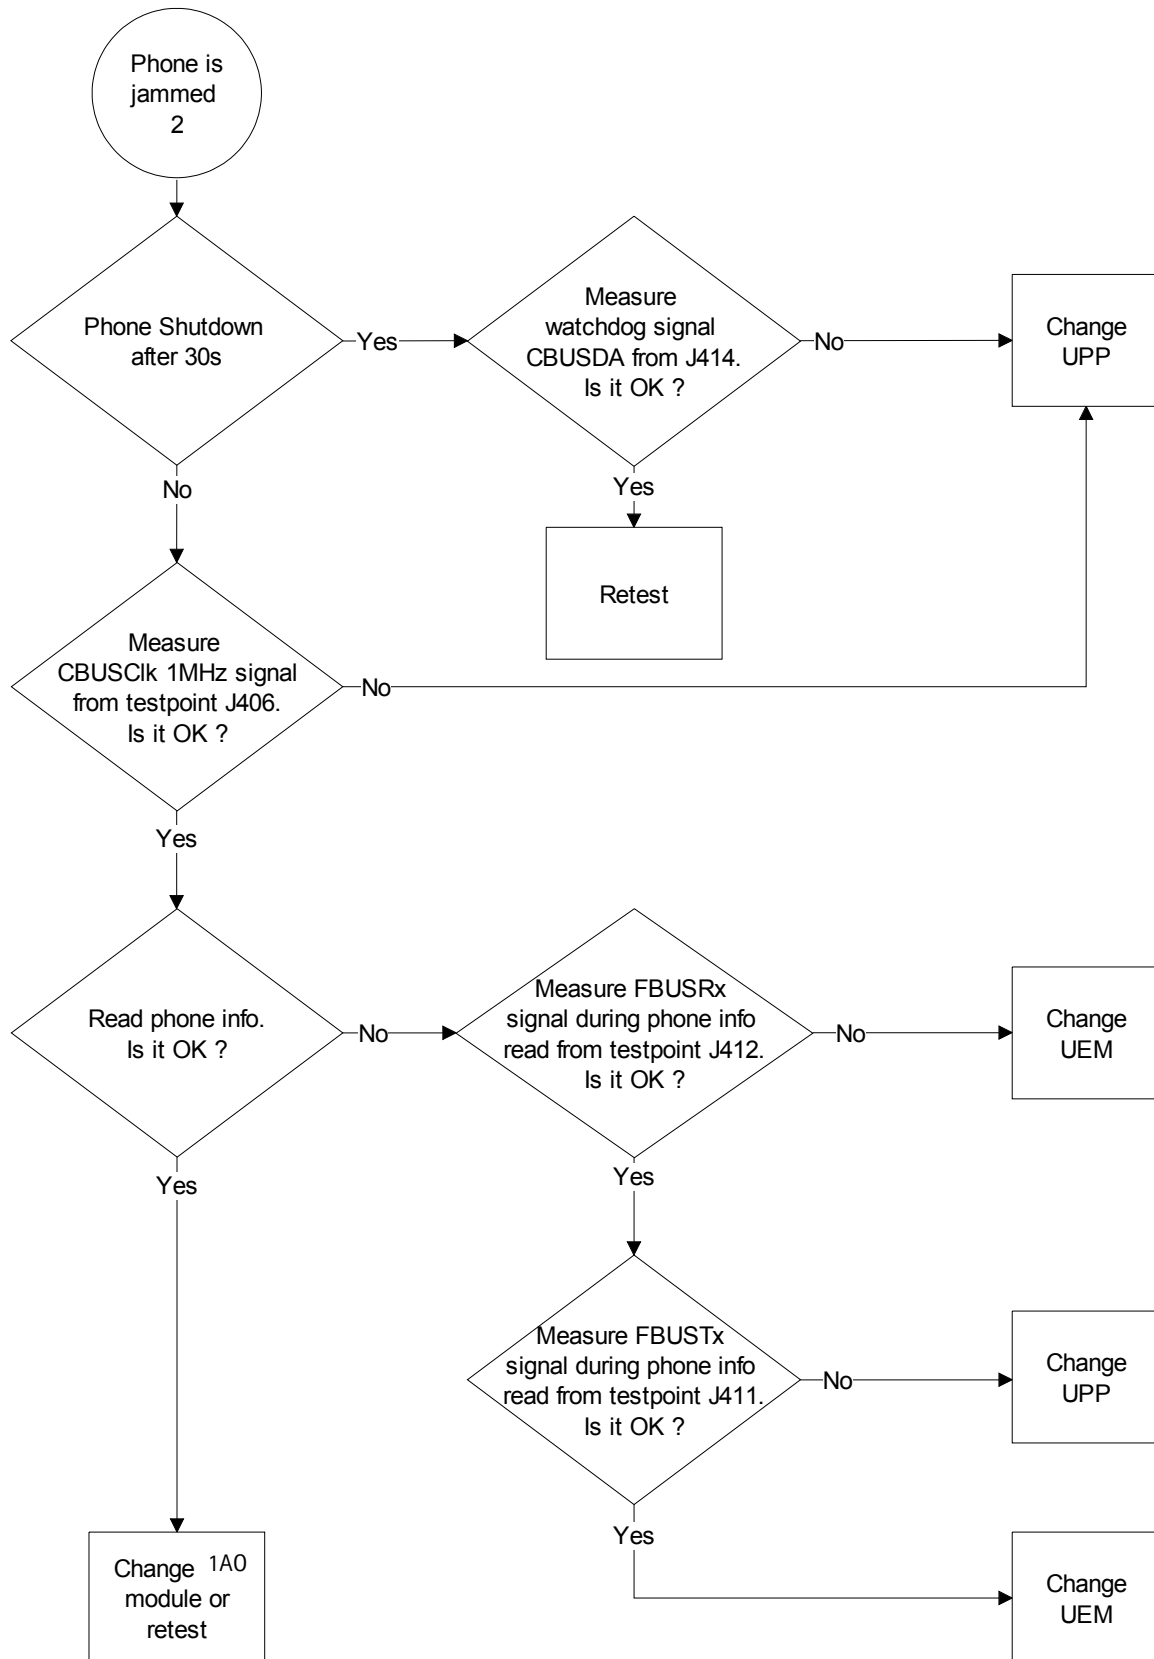

SIM card fault (Insert SIM / Card rejected)

Figure 7: SIM card troubleshooting

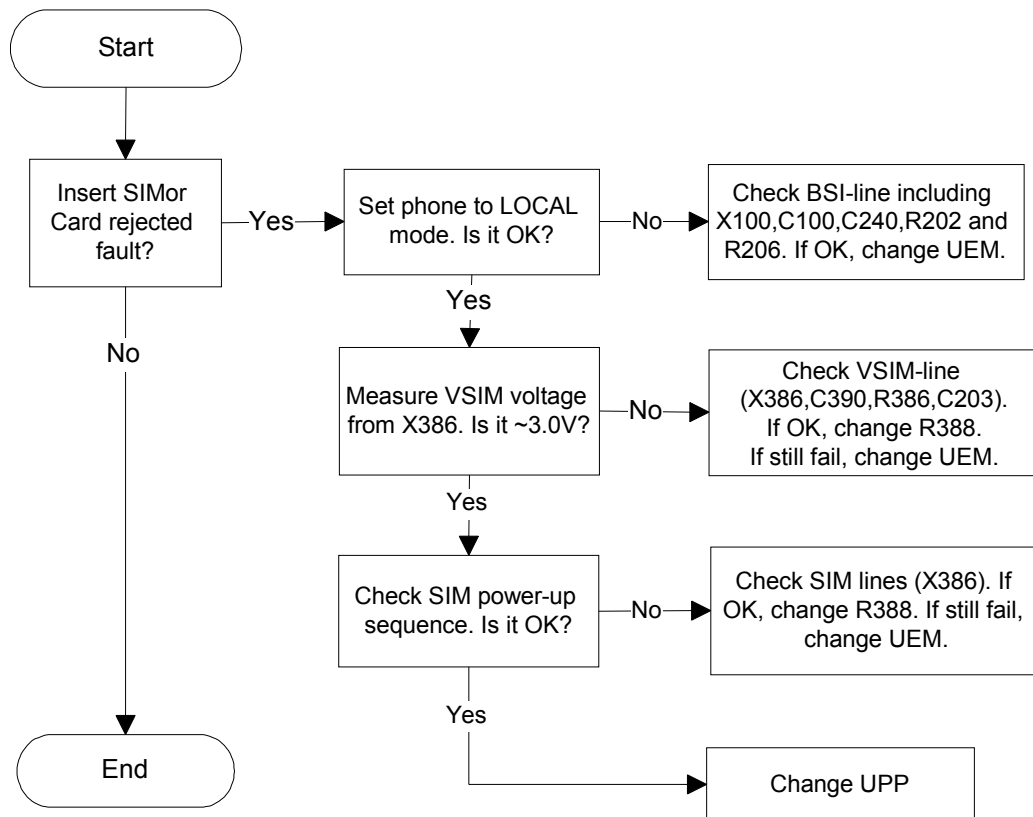

Keypad Fault

Figure 8: Keypad troubleshooting (1)



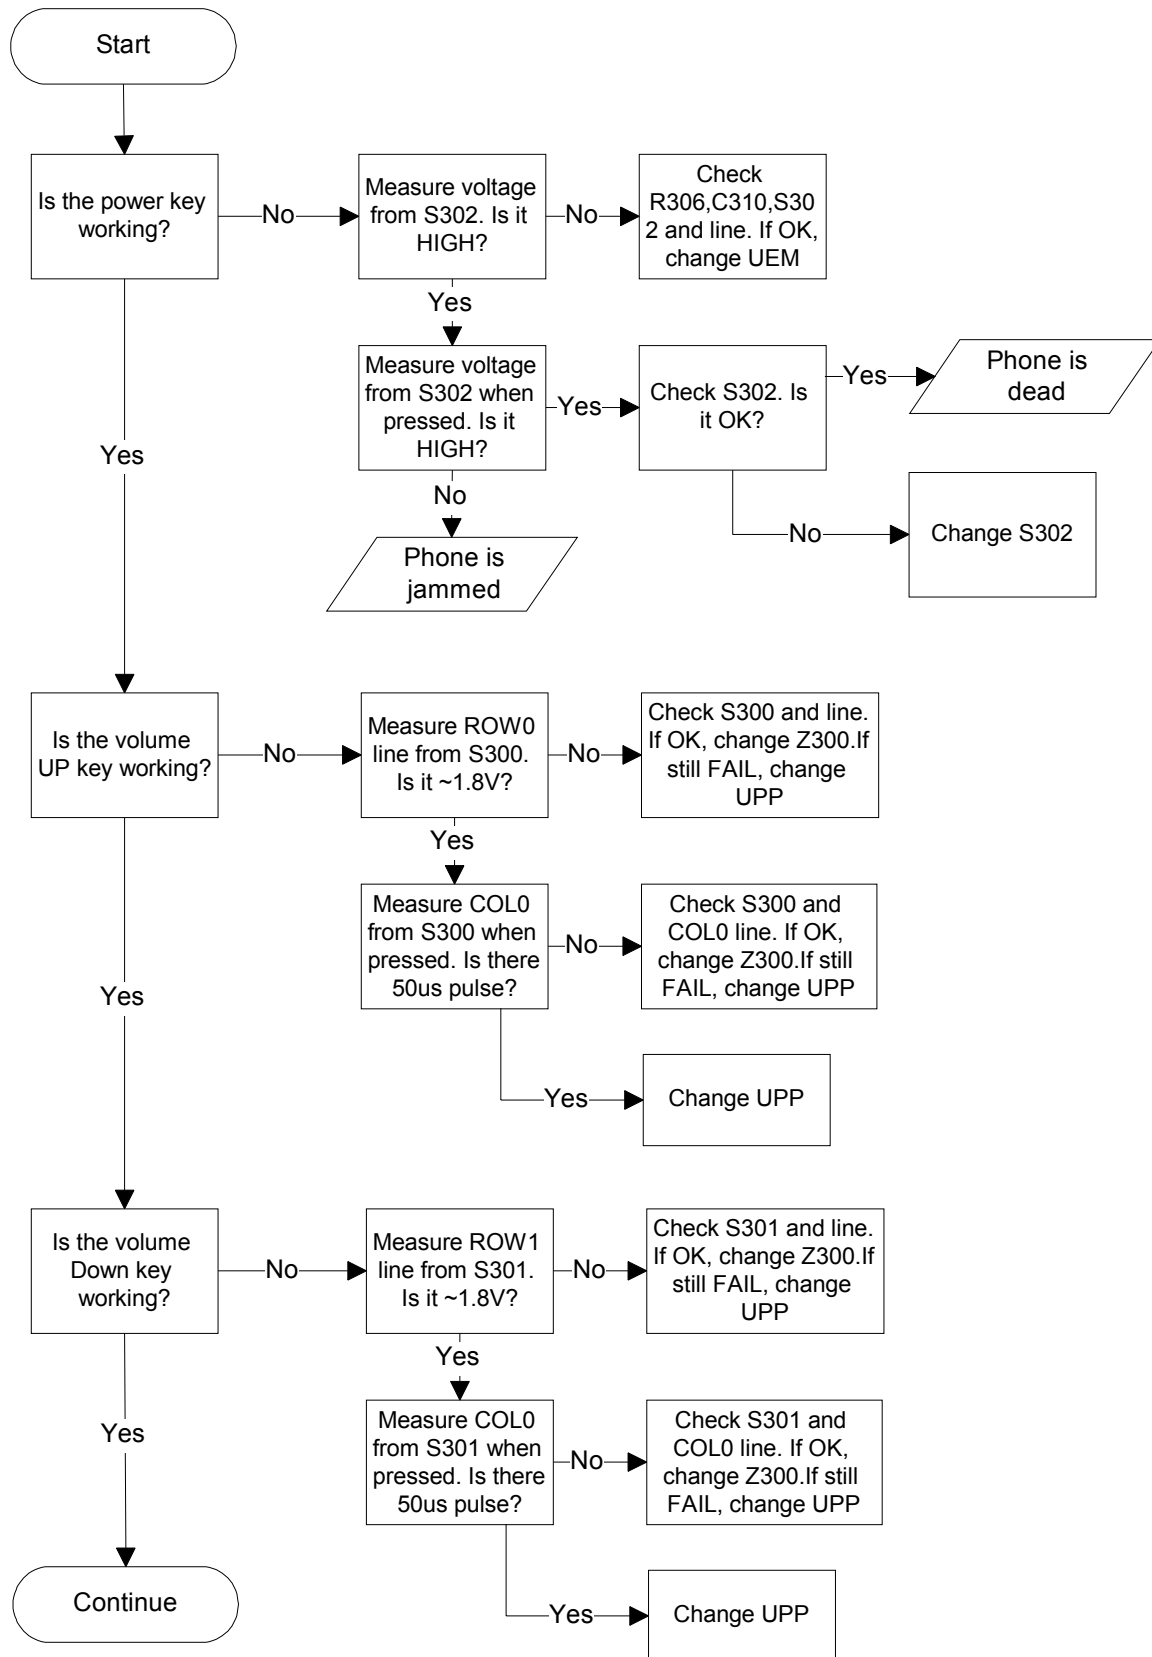


Figure 9: Keypad troubleshooting (2)

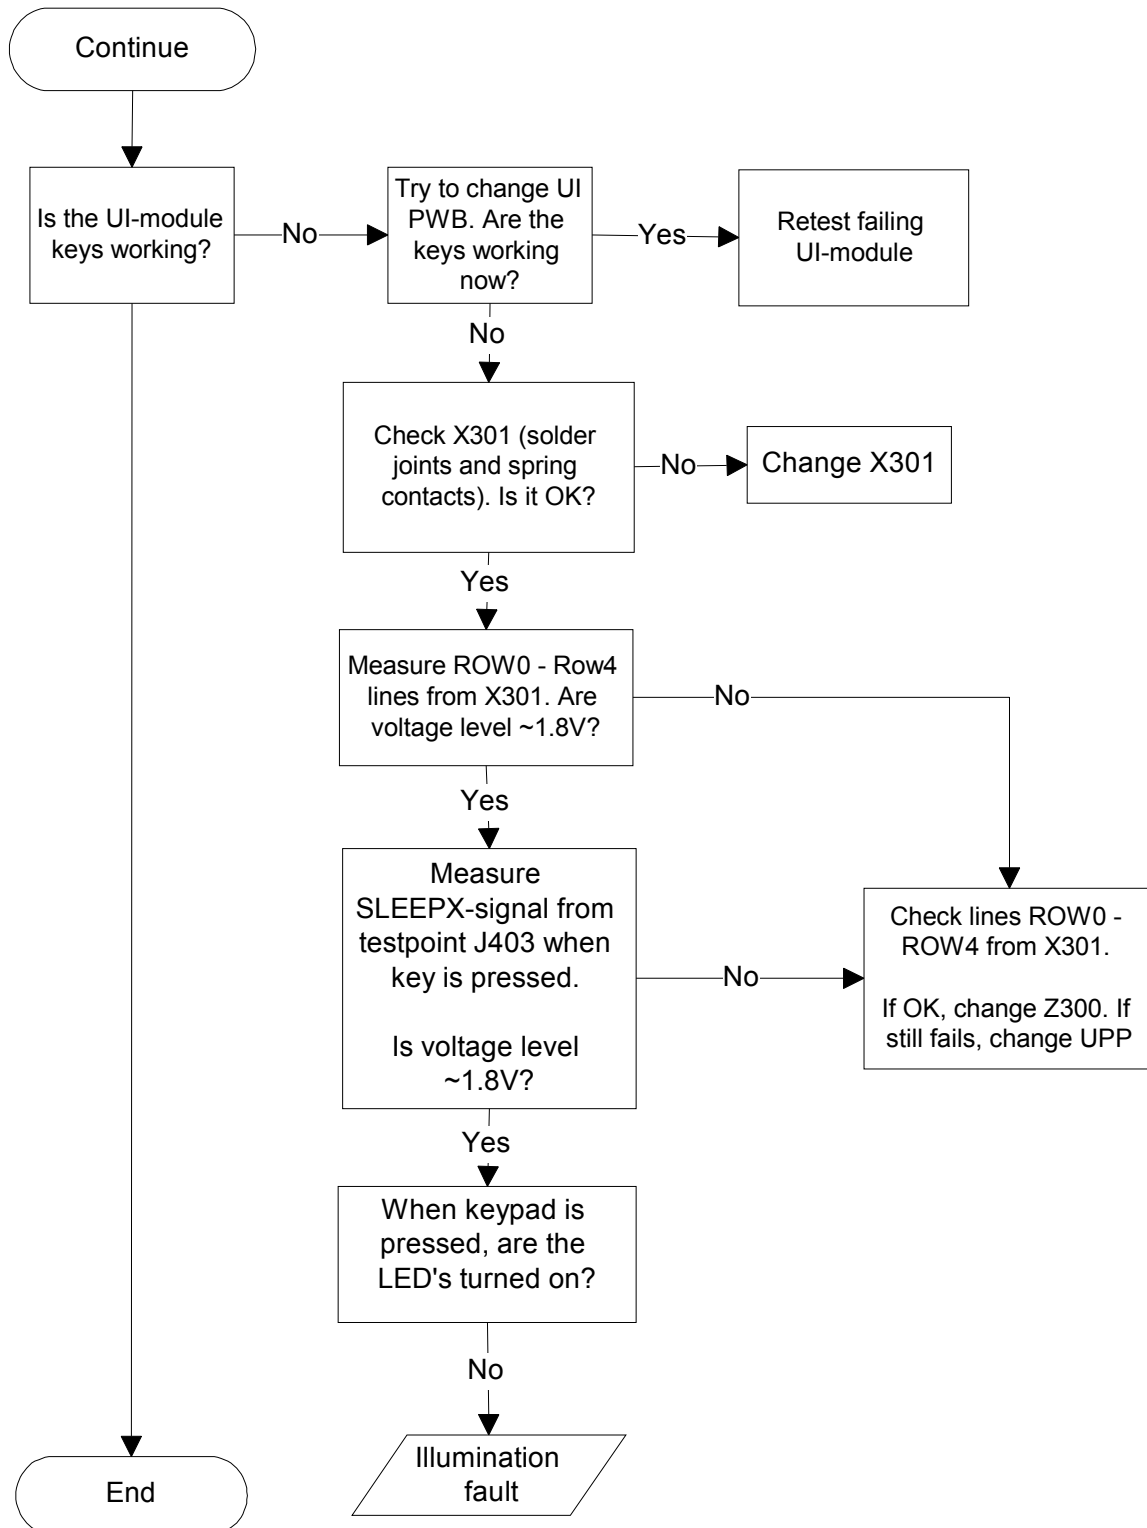


Display Fault

Figure 10: Display troubleshooting

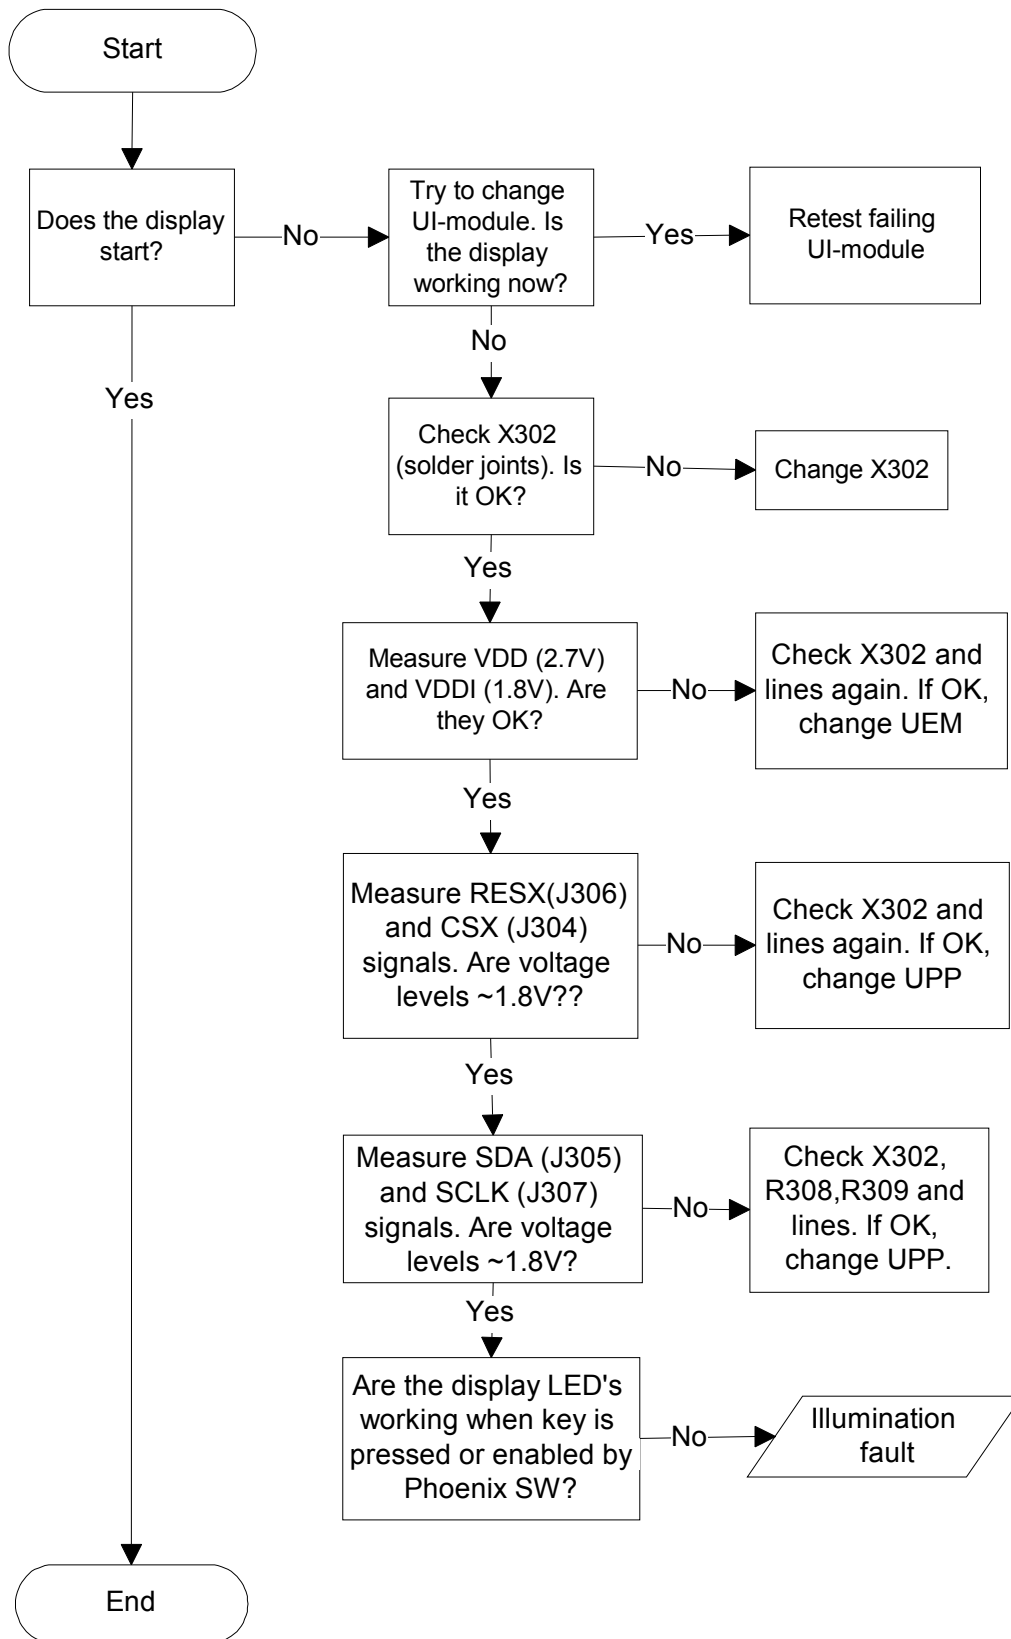


Illumination fault

Figure 11: Backlight troubleshooting

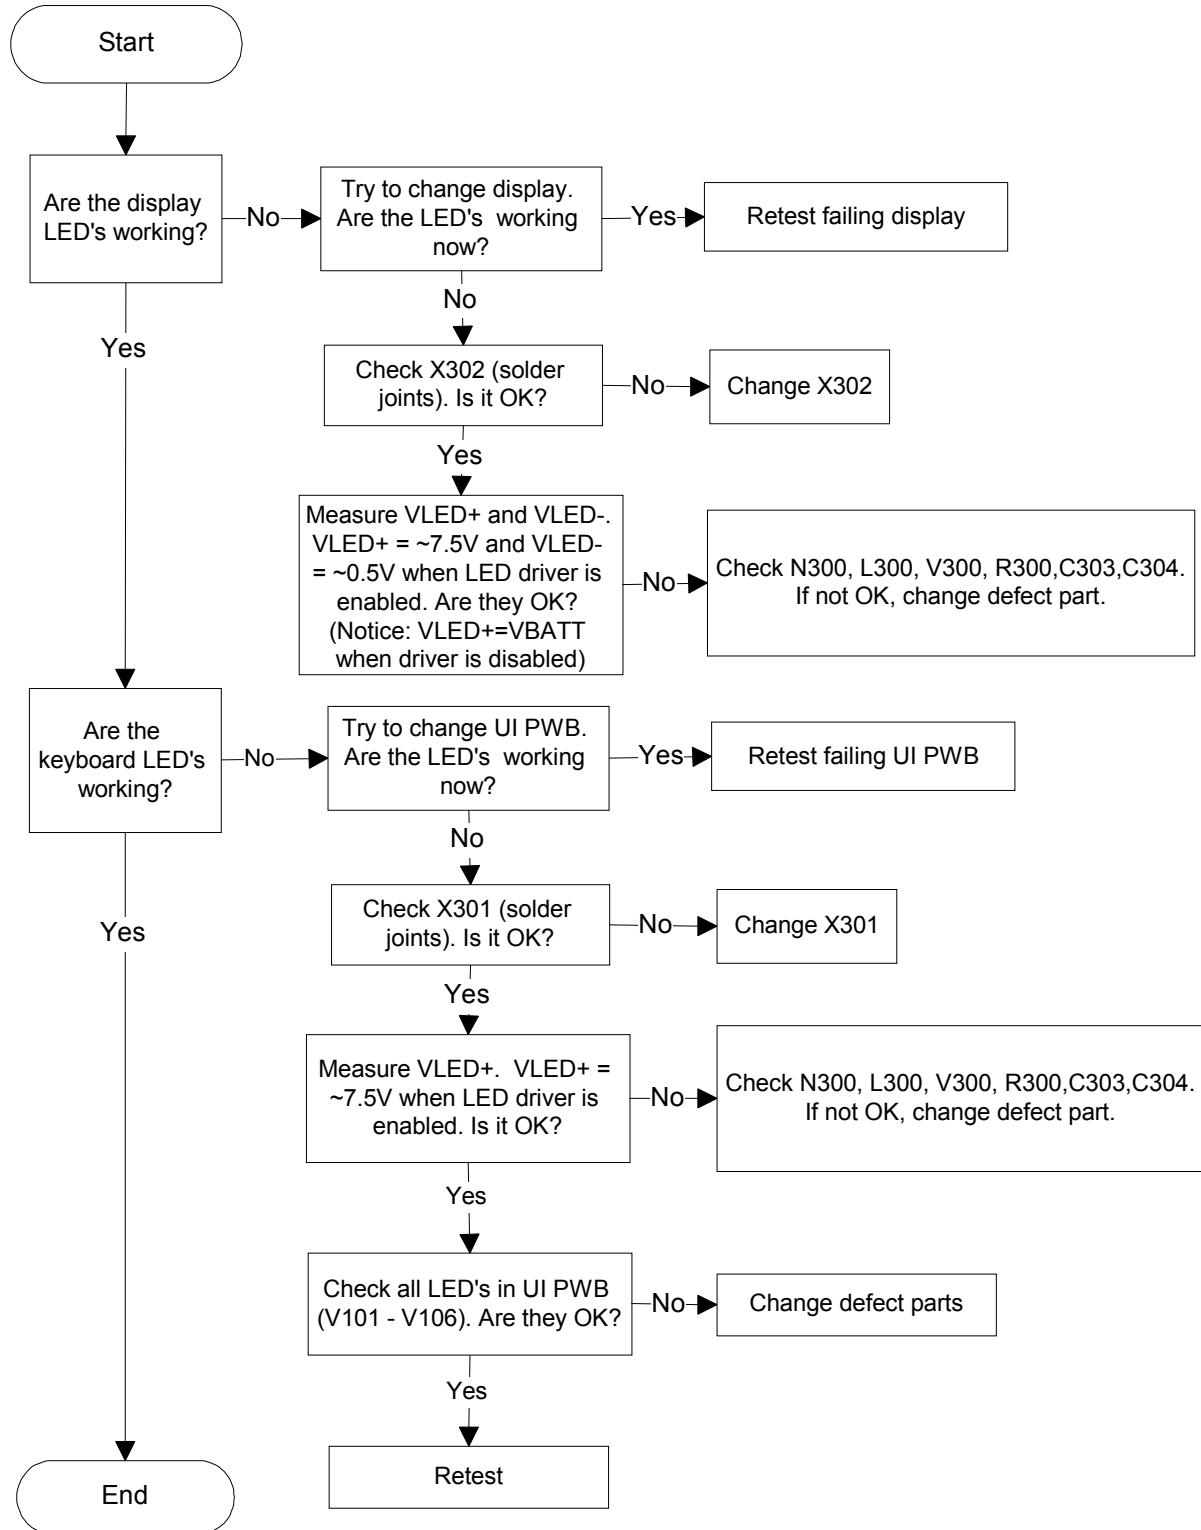


Charger Fault

Figure 12: Charging troubleshooting

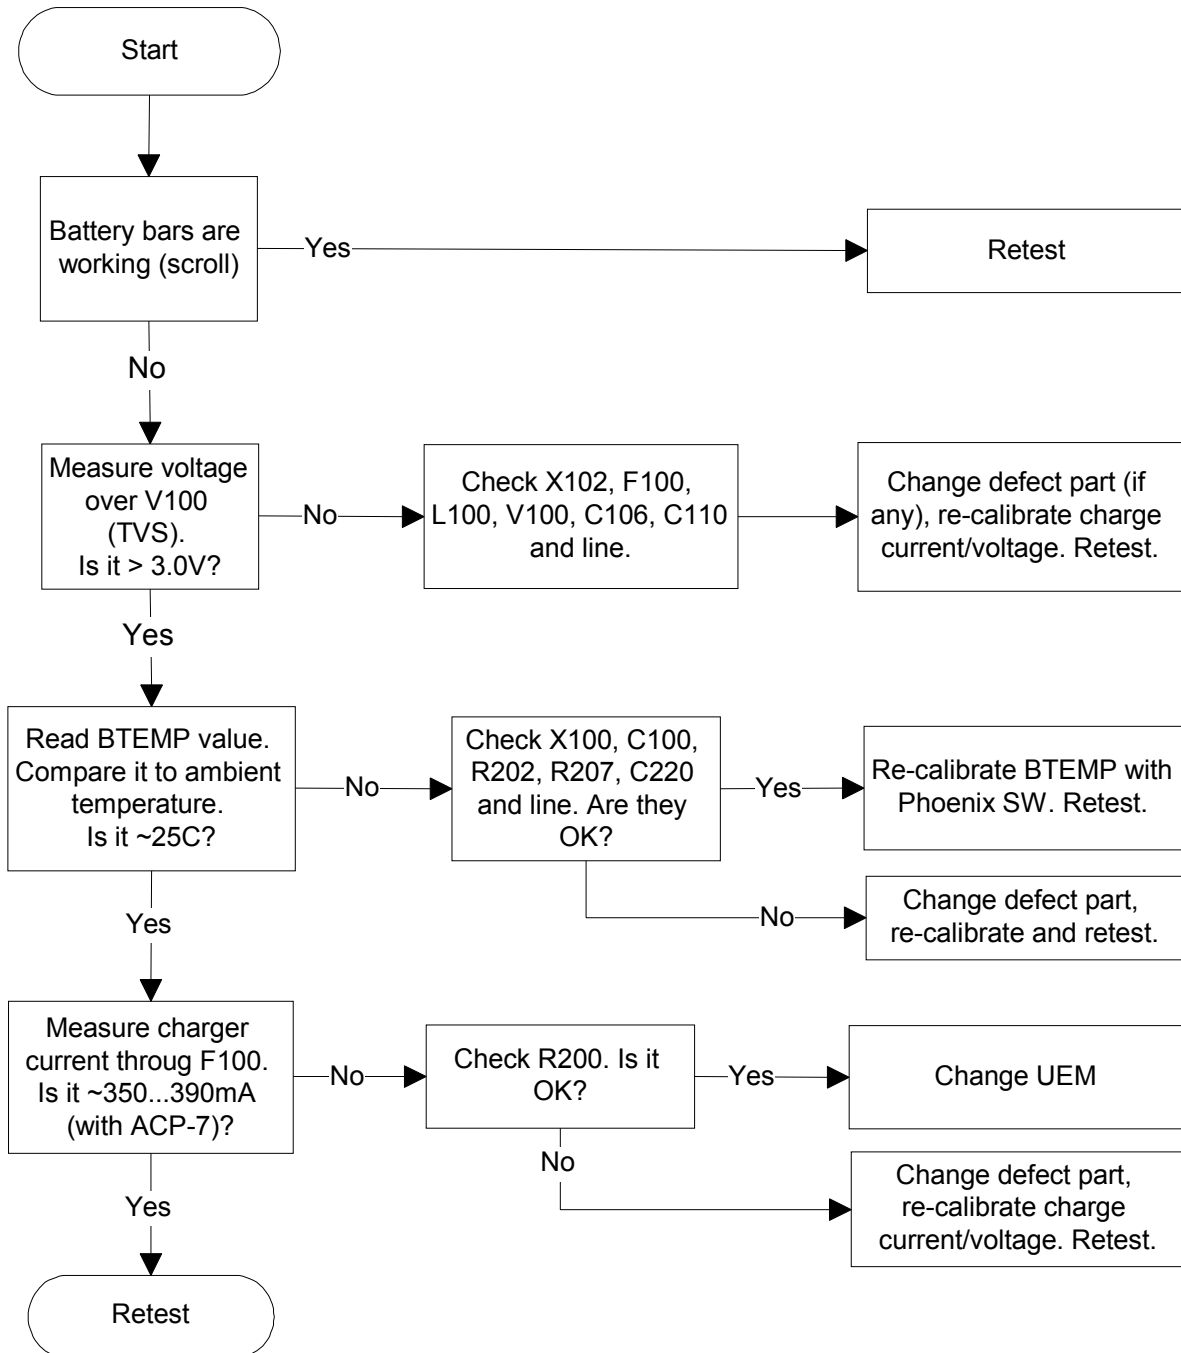

Accessory Fault

Figure 13: Accessory troubleshooting

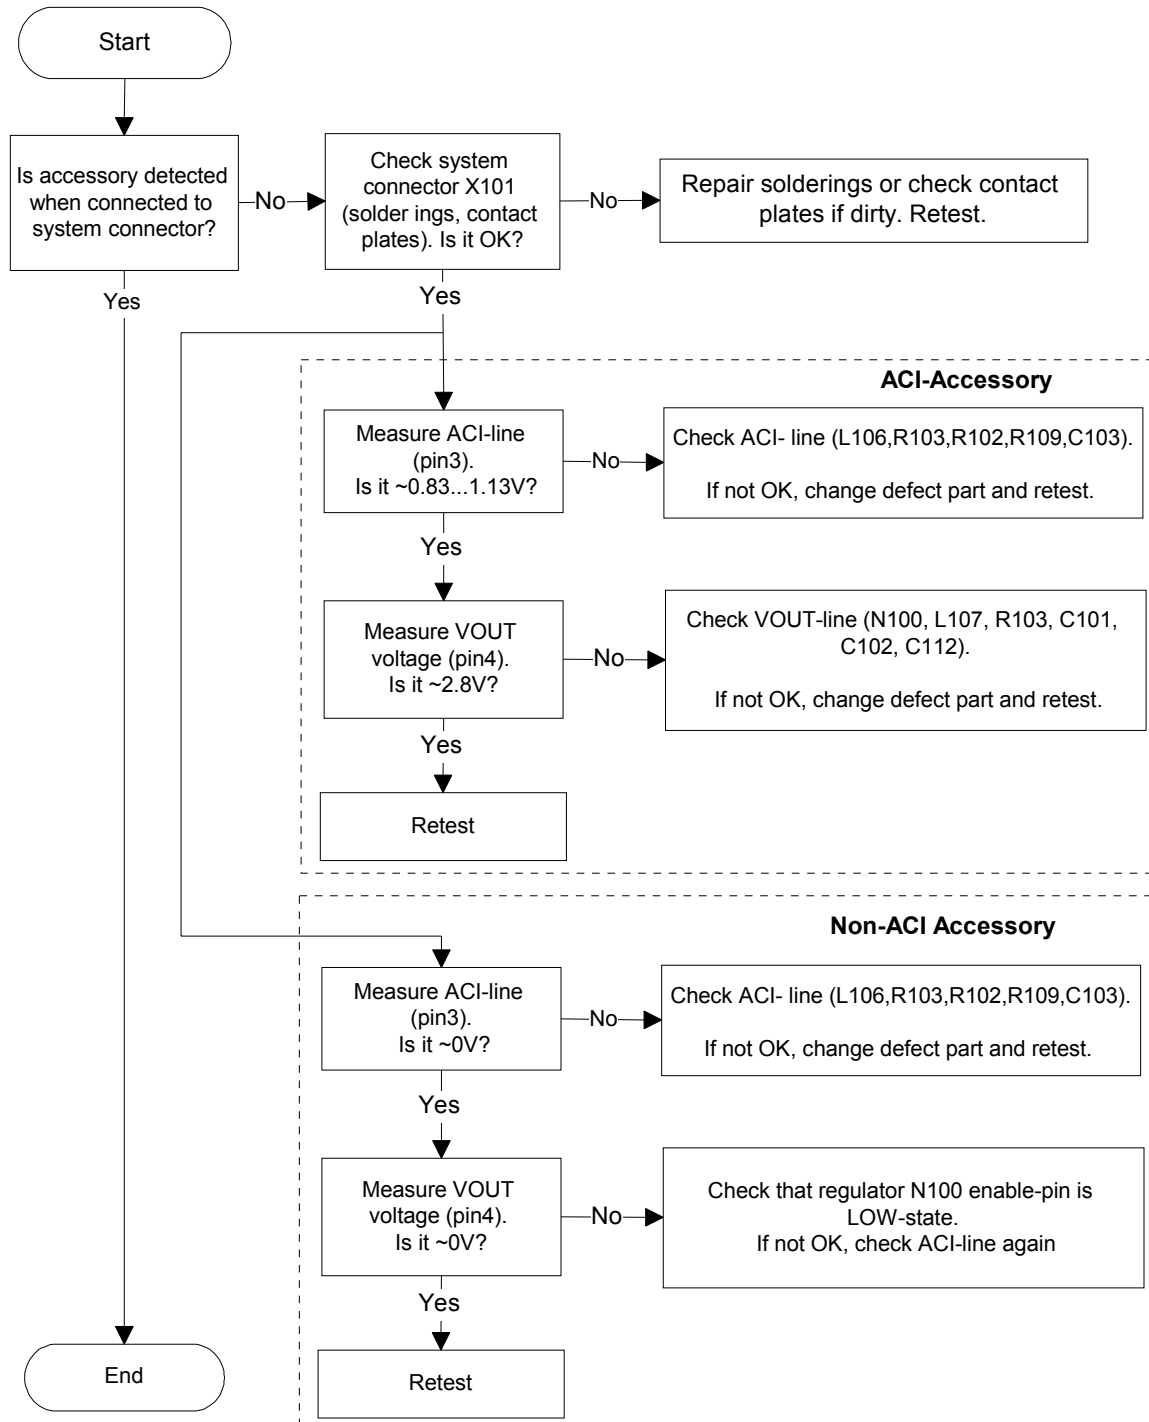

Audio Fault

Figure 14: Audio troubleshooting (1)

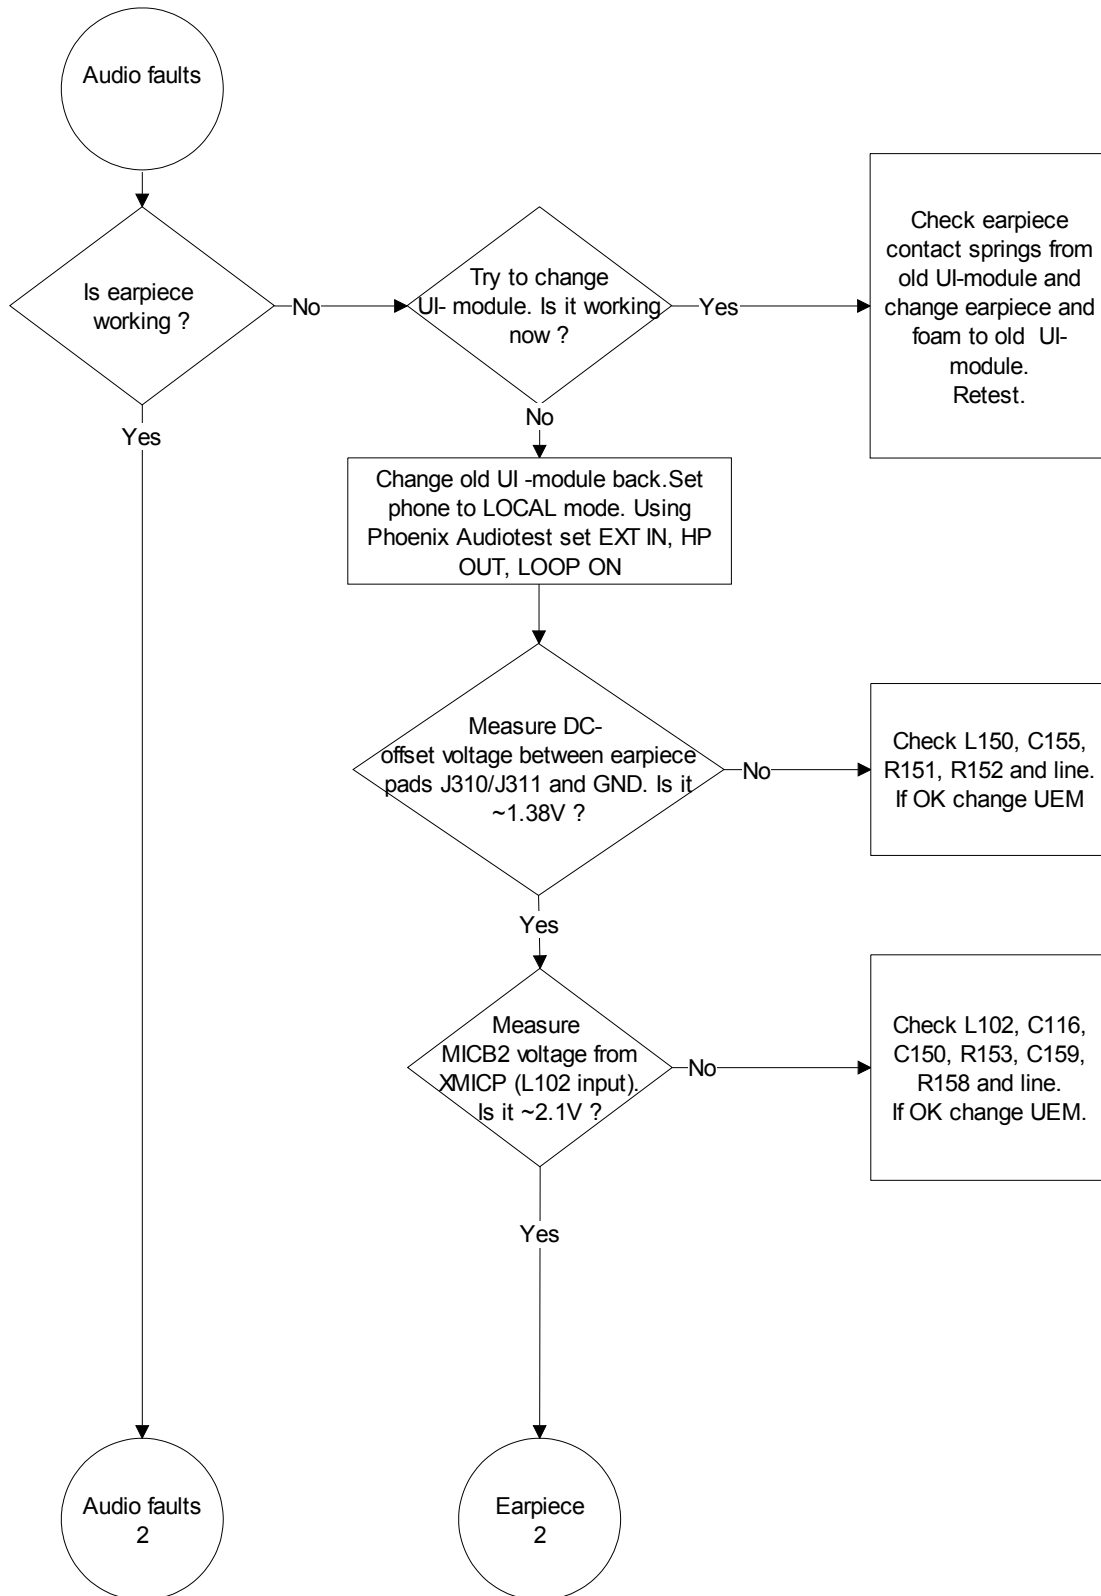


Figure 15: Audio troubleshooting (2)

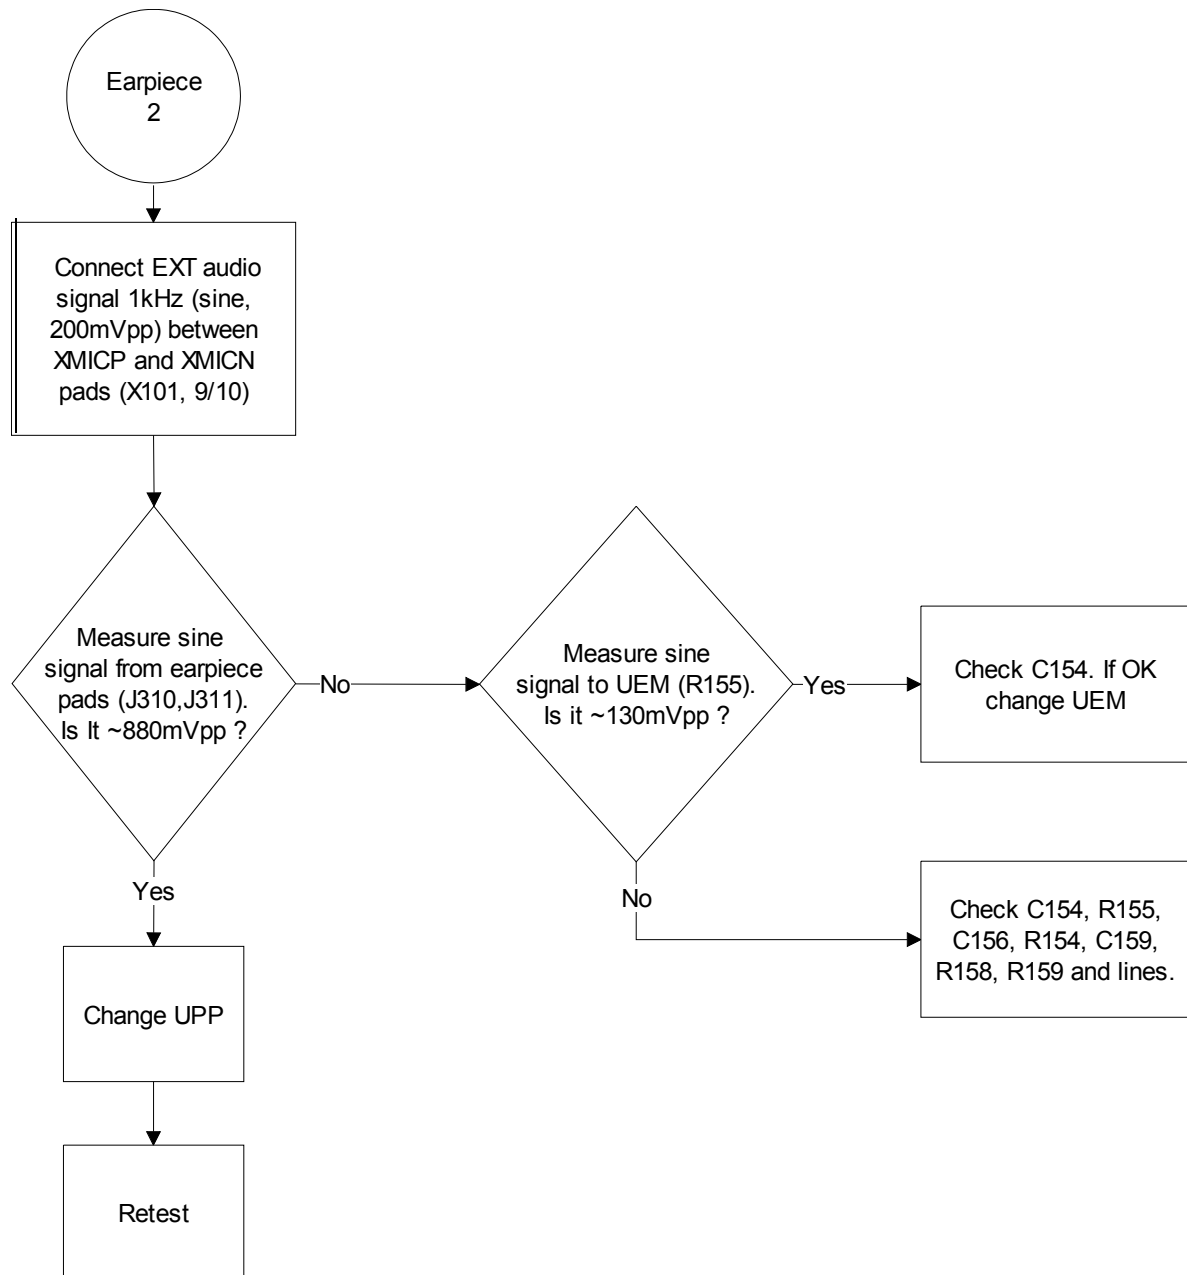


Figure 16: Audio troubleshooting (3)


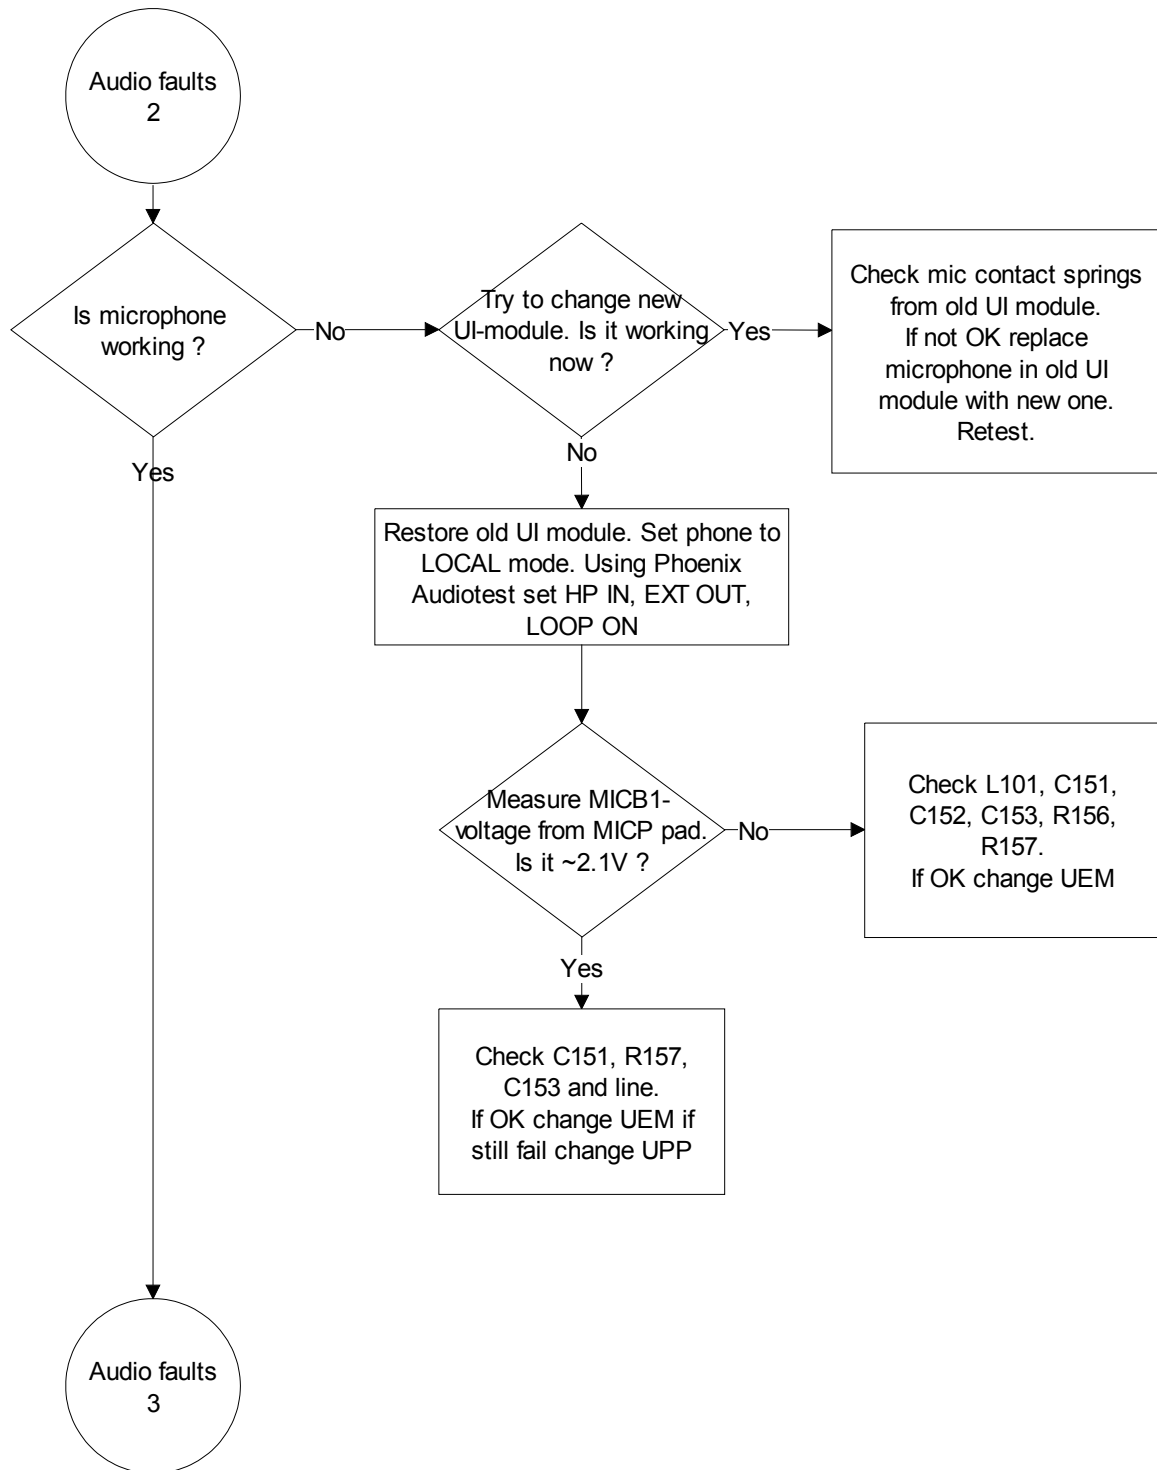


Figure 17: Audio troubleshooting (4)

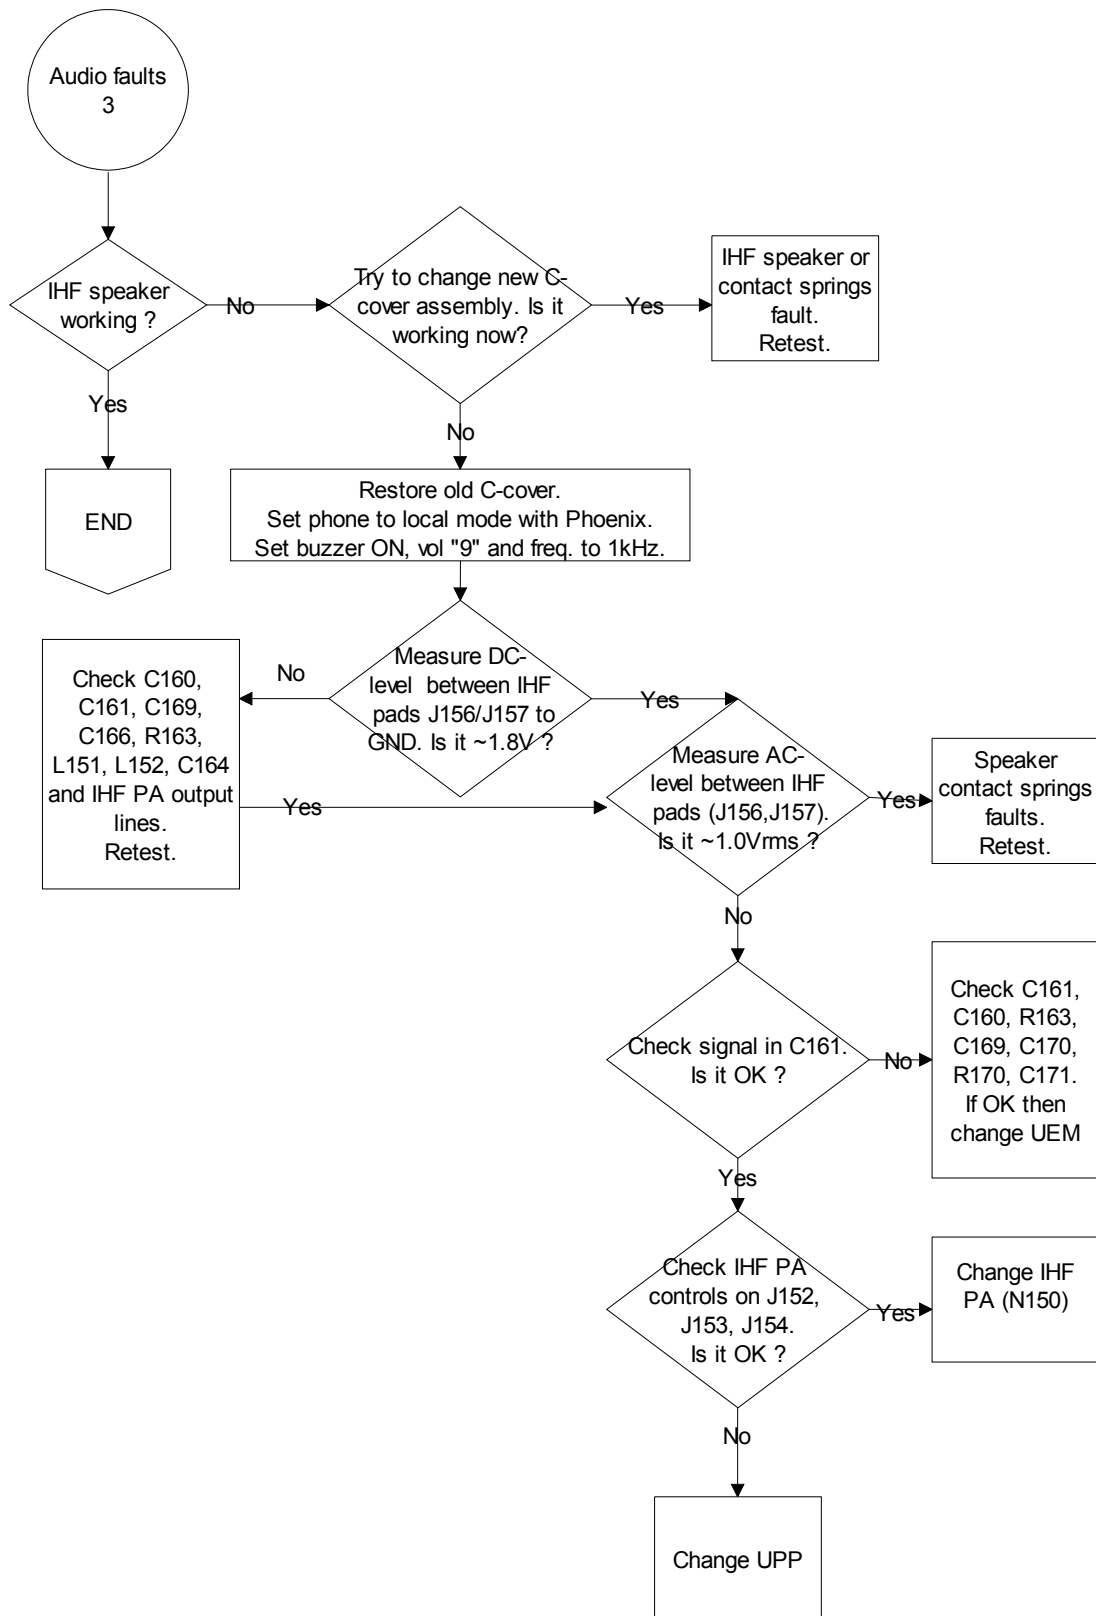

Camera Troubleshooting

Figure 18: Component placement




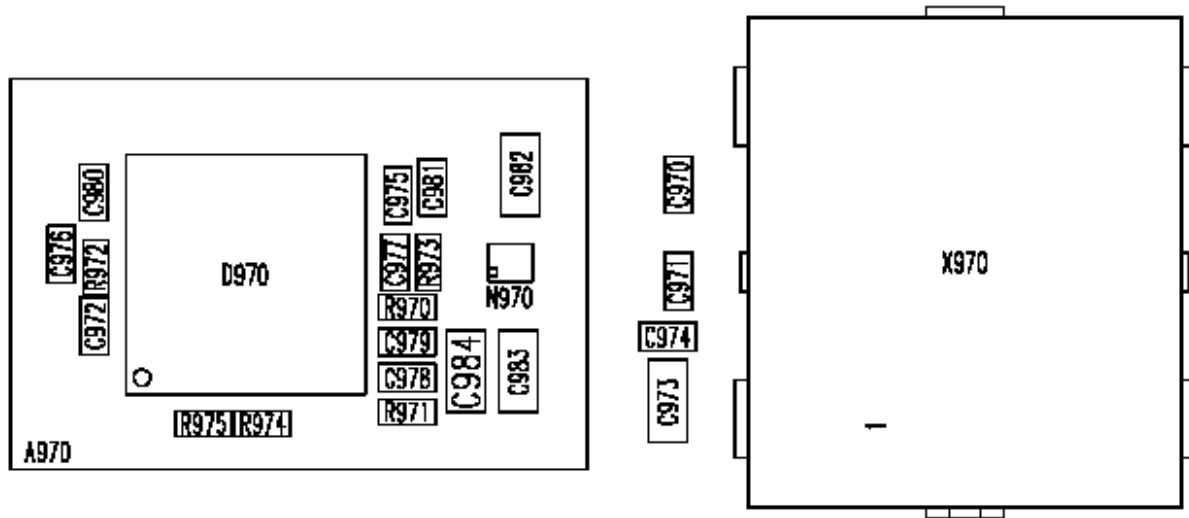


Figure 19: Trace layout

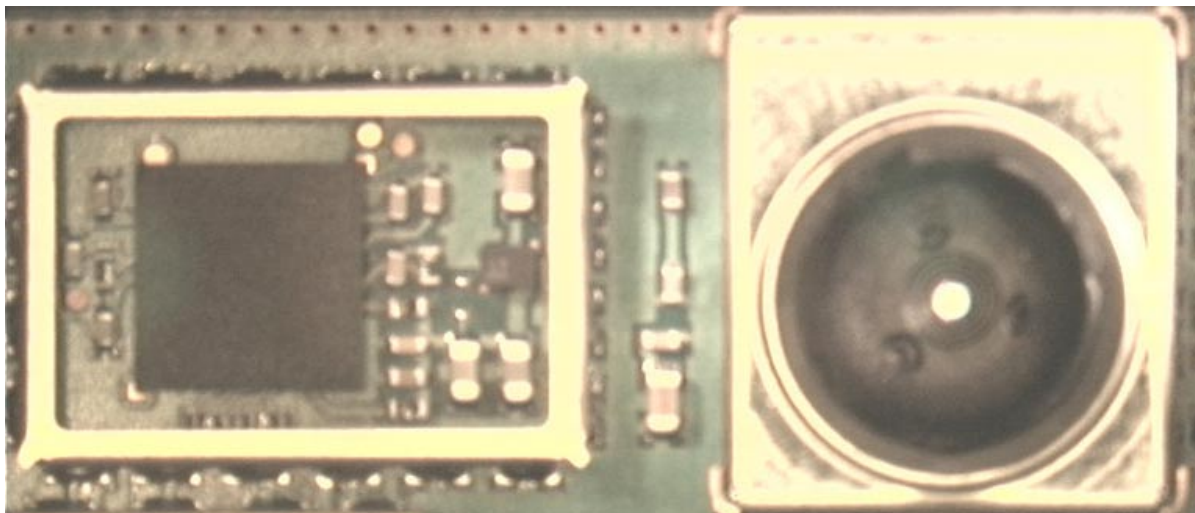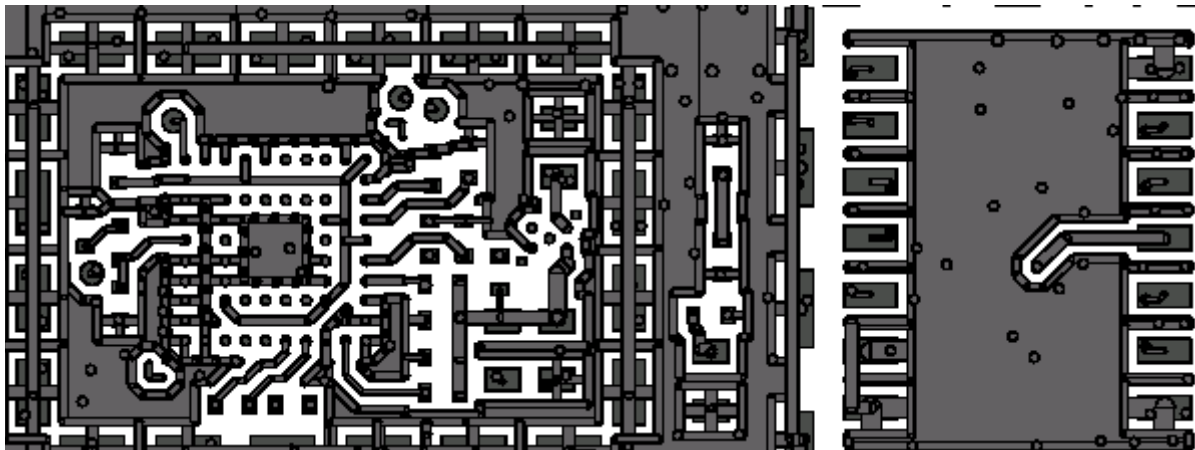

Camera Fault

Camera troubleshooting diagram

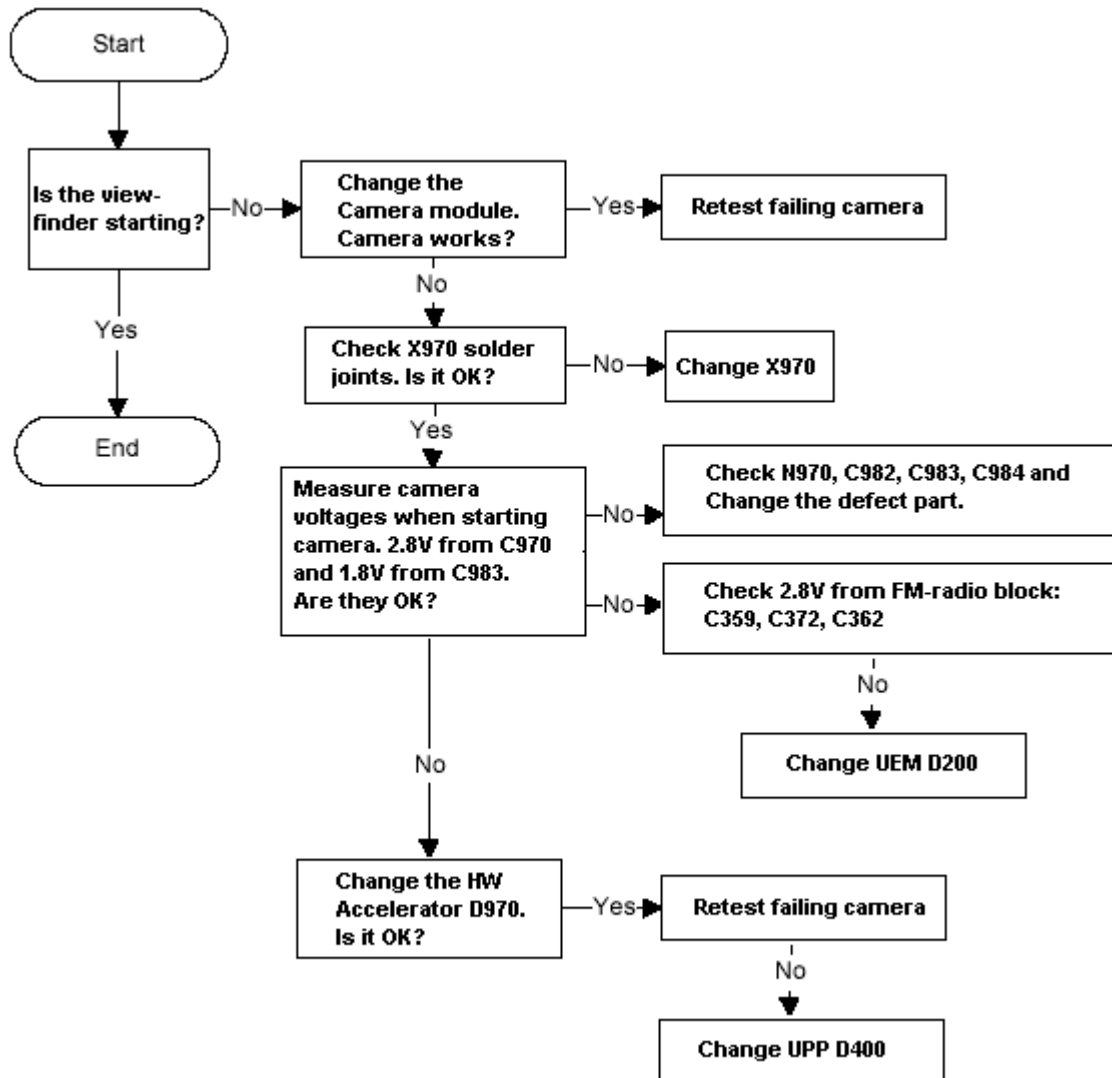

FM Radio troubleshooting

Figure 20: FM Radio Component layout

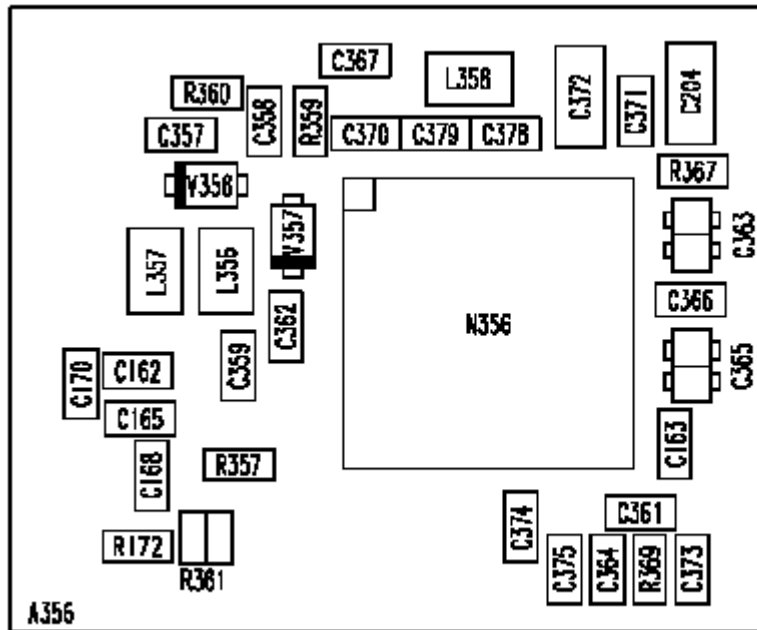


Figure 21: Trace layout.


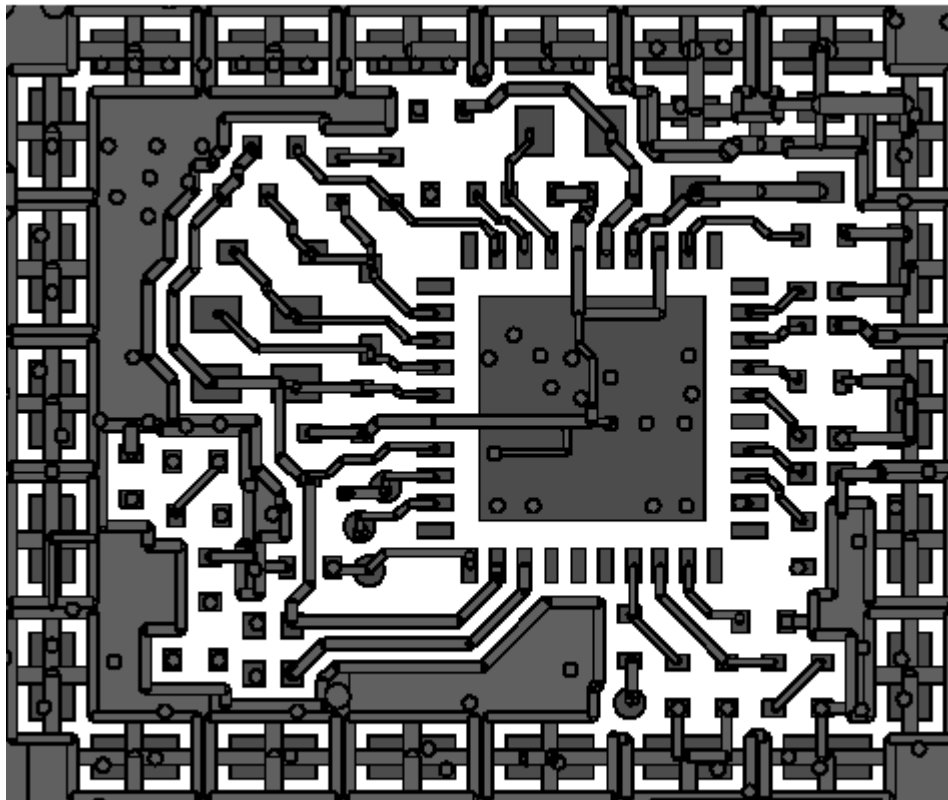


Figure 22: FM radio block layout.

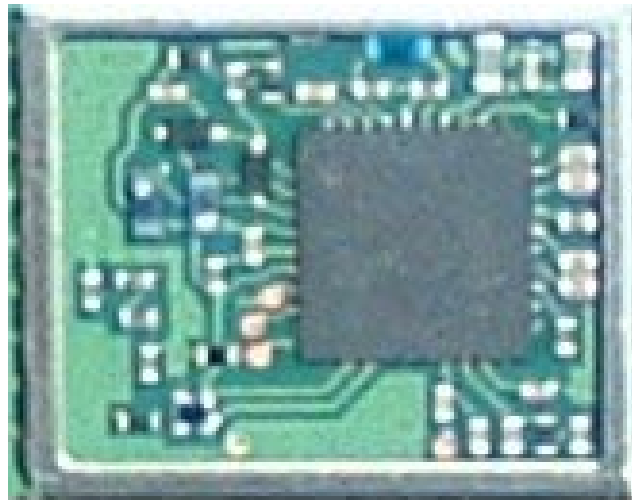

Components L103, L104, L105, C107, C108, C109, C117, C162, C163, R164, R165, R166 and R167 are not shown in the picture. Those components are placed in baseband section, near audio amplifier N150.

FM Radio troubleshooting diagram

Notes to "FM Radio troubleshooting diagram"


Use 1MHz 1X probe when measuring Audio and clock signals with oscilloscope.

Use active RF probe when measuring frequencies with spectrum analyzer.

Note 1. RF test signal parameters:

- Amplitude, A , -67.0 dBm
- Carrier frequency, f_c , 98,000 MHz
- Deviation, Δf , 75 kHz
- Modulating frequency f_m , 1,000 kHz (RF generator internal)
- FM stereo, mode R=L, pilot state ON


Figure 23: FM radio troubleshooting diagram

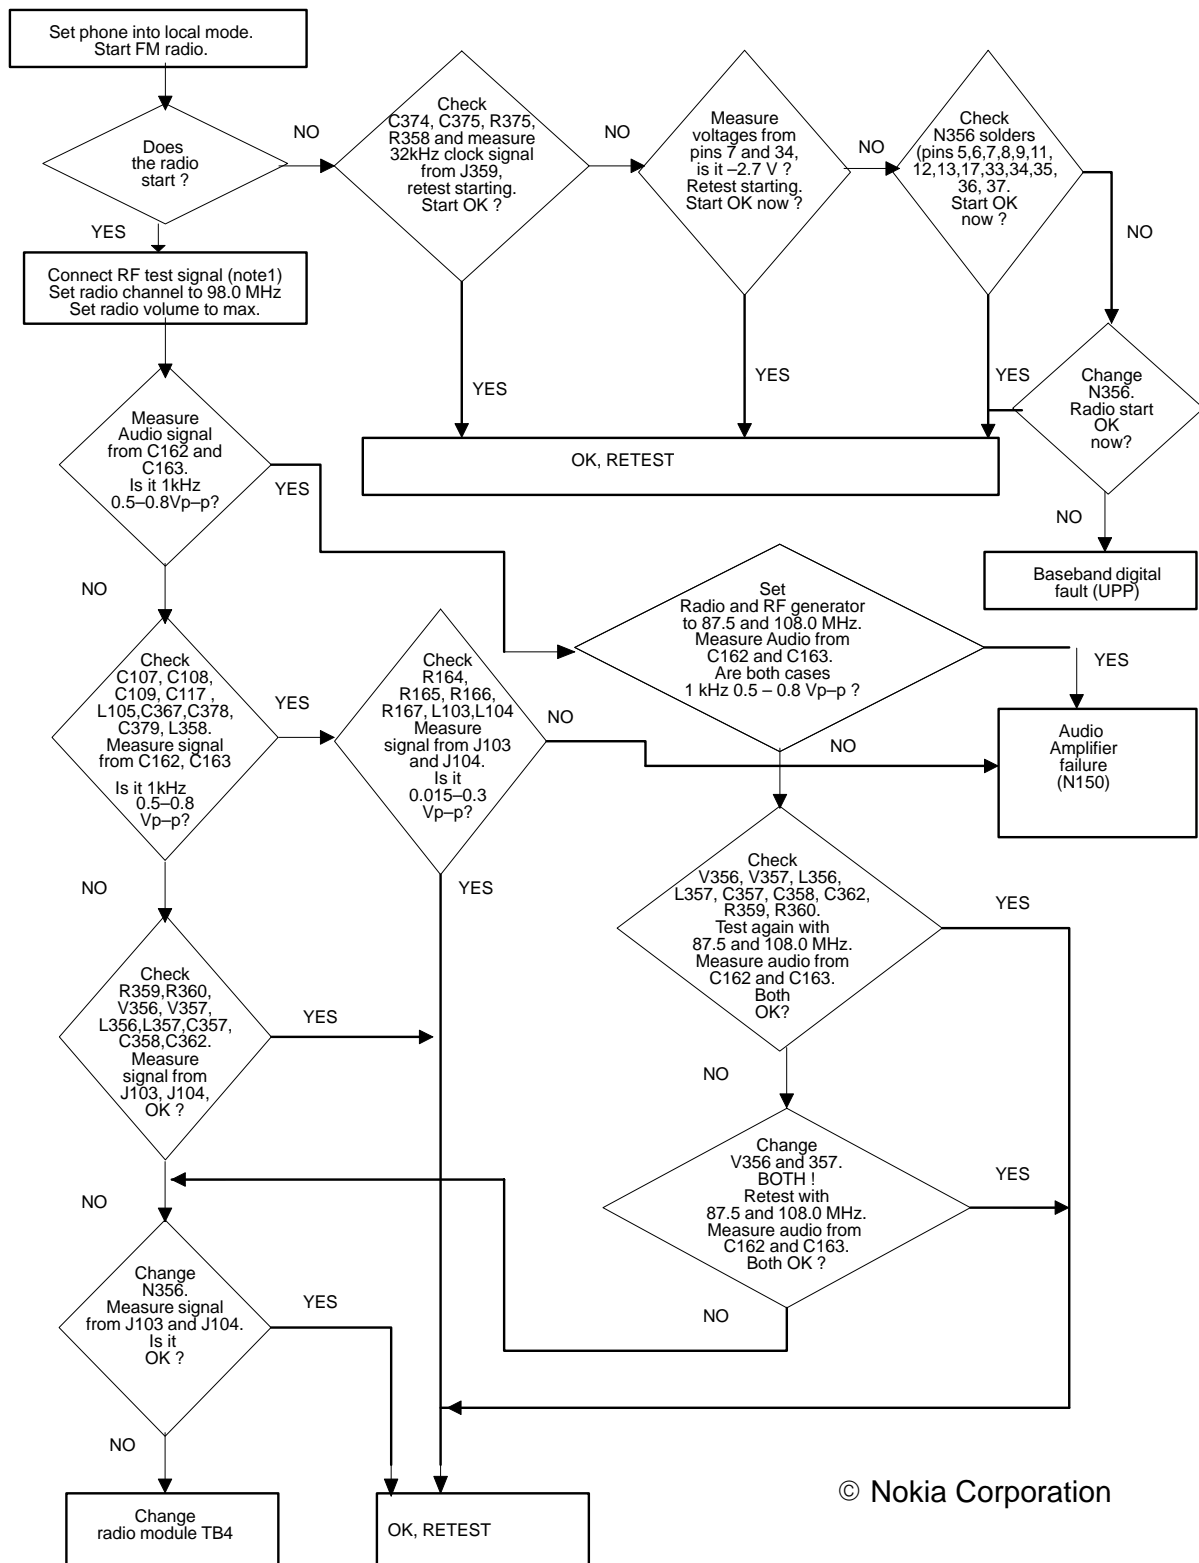

© Nokia Corporation

Diagrams of FM radio signals

Figure 24: Oscilloscope screen shot, Audio output

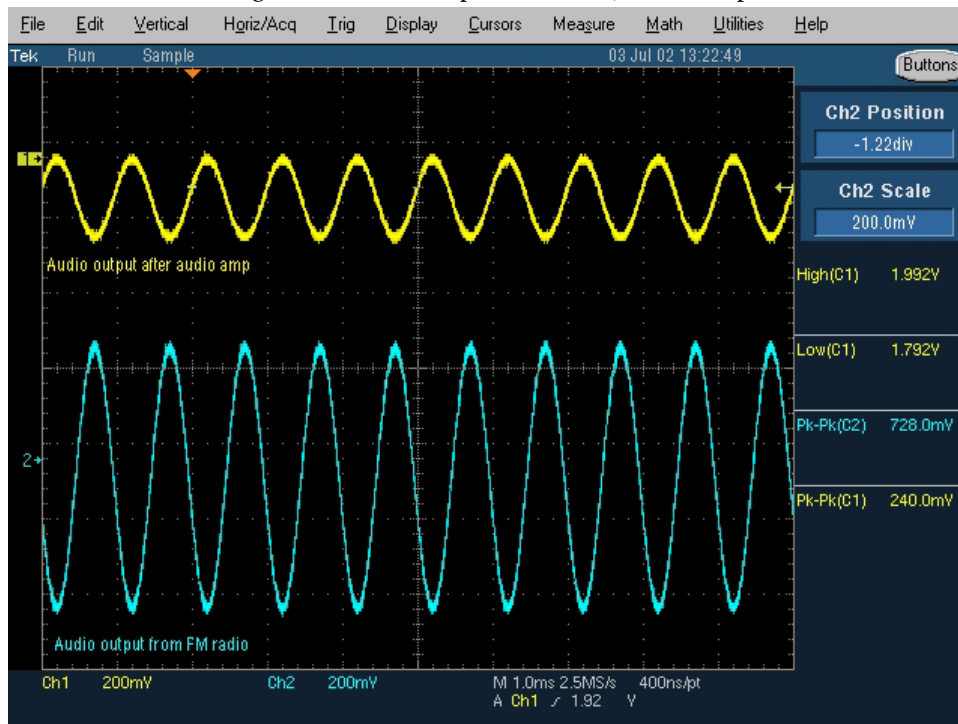

Signal 1: Audio output from PWB test points J103 and J104, with FM test signal, volume 100%.

Signal 2: Audio output from FM radio pins 22 and 23(same as in C162 and C163), with FM test signal

Figure 25: FM radio clock from test point J359, 32 kHz frequency clock signal, when radio is on.1

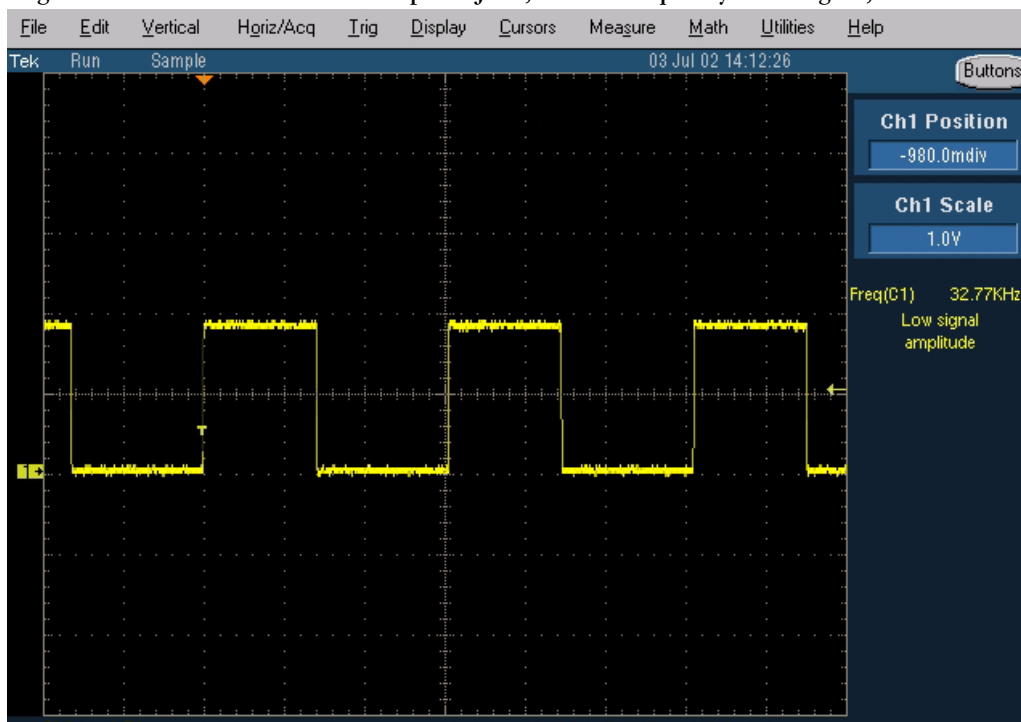


Figure 26: FM frequency from FM radio pin 37, the other end of L358, with FM test signal


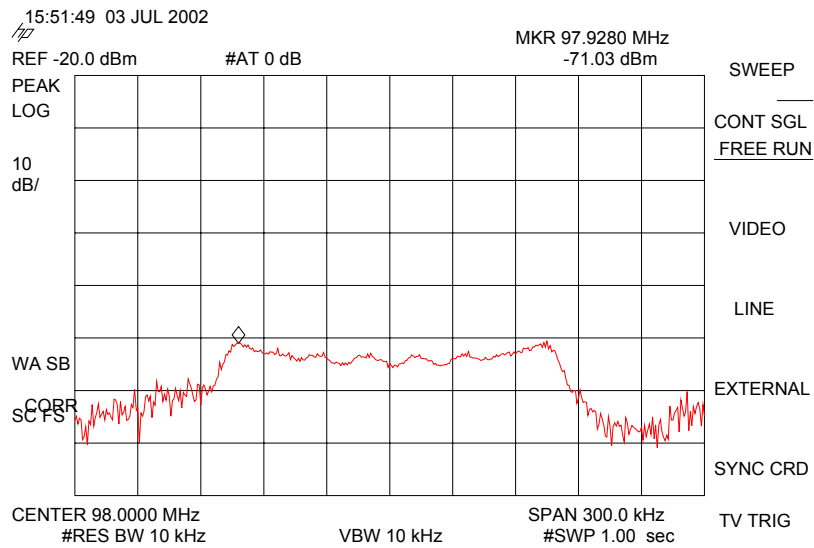


Figure 27: VCO frequency from FM radio pins 3 and 4, the other ends of V356 and V357, with FM test signal

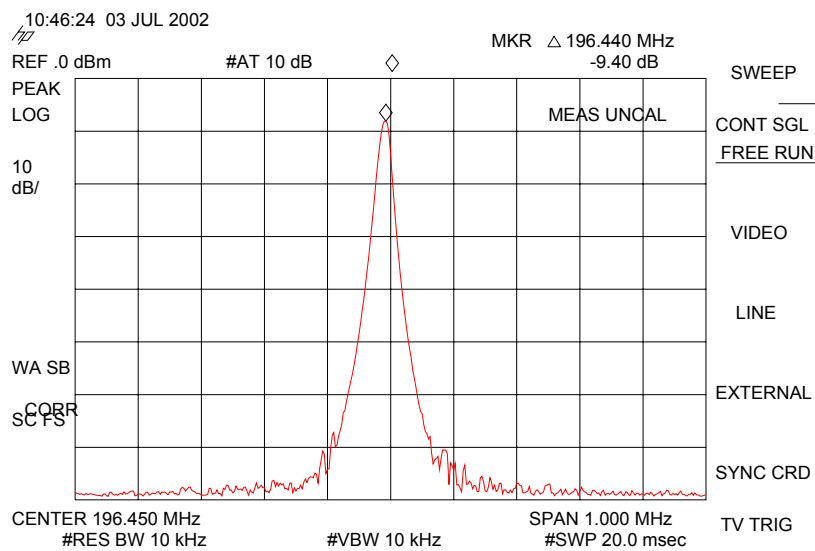

This page left blank intentionally.