


SDM-X72

SERVICE MANUAL

*US Model
Canadian Model
AEP Model
Chinese Model*

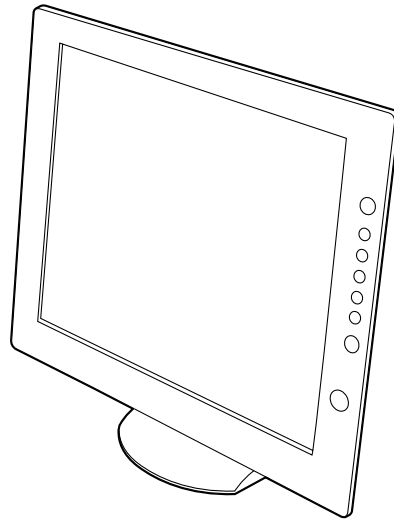

SPECIFICATIONS

LCD panel	Panel type: a-Si TFT Active Matrix	Dimensions (width/height/depth)
Input signal format	Picture size: 17.0 inch RGB operating frequency* Horizontal: 28 – 92 kHz Vertical: 56 – 85 Hz	Display (upright): Approx. 438 × 410 × 227 mm (17 1/4 × 16 1/4 × 9 inches) (with stand)
Resolution	Horizontal: Max.1280 dots Vertical: Max.1024 lines	Approx. 438 × 356 × 84 mm (17 1/4 × 14 1/8 × 3 3/8 inches) (without stand)
Input signal levels	Analog RGB video signal 0.7 Vp-p, 75 Ω , positive SYNC signal TTL level, 2.2 kΩ , positive or negative (Separate horizontal and vertical, or composite sync) 0.3 Vp-p, 75Ω , negative (Sync on green) Digital RGB (DVI) signal: TMDS (Single link)	Mass Approx. 7.1 kg (15 lb 10 oz) (with stand) Approx. 5.3 kg (11 lb 11 oz) (without stand) Plug & Play DDC2B
Power requirements	100 – 240 V, 50 – 60 Hz, Max. 0.9 A	* Recommended horizontal and vertical timing condition
Power consumption	Max. 40 W	• Horizontal sync width duty should be more than 4.8% of total horizontal time or 0.8 μs, whichever is larger.
Operating temperature	5 – 35 °C	• Horizontal blanking width should be more than 2.5 μsec. • Vertical blanking width should be more than 450 μsec.

Design and specifications are subject to change without notice.

TFT LCD Color Computer Display
SONY®

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are “pinched” or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the connector shell, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC Leakage. Check leakage as described right.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes).

Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOMs that are suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

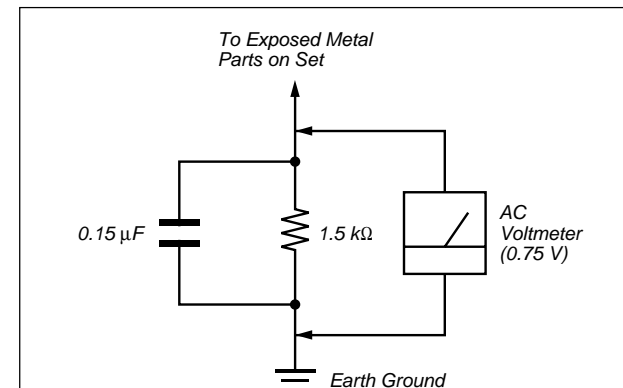




Fig. A. Using an AC voltmeter to check AC leakage.

WARNING!!

SAFETY-RELATED COMPONENT WARNING!!
COMPONENTS IDENTIFIED BY SHADING AND MARK  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

AVERTISSEMENT!!

ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!
LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET UNE MARQUE  SONT CRITIQUES POUR LA SÉCURITÉ. NE LES REMPLACER QUE PAR UNE PIÈCE PORTANT LE NUMÉRO SPECIFIÉ. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIÉS DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.

POWER SAVING FUNCTION


This monitor meets the power-saving guidelines set by VESA, ENERGY STAR, and NUTEK. If the monitor is connected to a computer or video graphics board that is DPMS (Display Power Management Signaling) compliant, the monitor will automatically reduce power consumption as shown below.

Power mode	Power consumption	⏻ (power) indicator
normal operation	40 W (max.)	green
active off* (deep sleep)**	3 W (max.)	orange
⏻ (power) off	1 W	red
main power off	0 W	off

* When your computer enters the “active off” mode, the input signal is cut and NO INPUT SIGNAL appears on the screen. After 10 seconds, the monitor enters the power saving mode.

** “Deep sleep” is a power saving mode defined by the Environmental Protection Agency.

Note

If the  (POWER SAVE) is set to OFF (page 16), the monitor does not enter the power saving mode.

AUTOMATIC PICTURE QUALITY ADJUSTMENT FUNCTION

(ANALOG RGB)

When the monitor receives an input signal, it automatically adjusts the picture’s position and sharpness (phase/pitch), and ensures that a clear picture appears on the screen.

The factory preset mode

When the monitor receives an input signal, it automatically matches the signal to one of the factory preset modes stored in the monitor’s memory to provide a high quality picture at the center of the screen. If the input signal matches the factory preset mode, the picture is appears on the screen automatically with the appropriate default adjustment.

If input signals do not match one of the factory preset modes

When the monitor receives an input signal, the automatic picture quality adjustment function of this monitor is activated and ensures that a clear picture always appears on the screen (within the following monitor frequency ranges):

Horizontal frequency: 28 – 92 kHz

Vertical frequency: 56 – 85 Hz

Consequently, the first time the monitor receives input signals that do not match one of the factory preset modes, the monitor may take a longer time than normal for displaying the picture on the screen. This adjustment data is automatically stored in memory so that next time, the monitor will function in the same way as when the monitor receives the signals that match one of the factory preset modes.

If you adjust the phase, pitch, and pictures position manually


For some input signals, the automatic picture quality adjustment function of this monitor may not completely adjust the picture position, phase, and pitch. In this case, you can manually set these adjustments (page 13). If you manually set these adjustments, they are stored in memory as user modes and automatically recalled whenever the monitor receives the same input signals.

TABLE OF CONTENTS


<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. DISASSEMBLY			3. DIAGRAMS		
1-1.	Rear Cover and Cabinet Assy Removal	1-1	3-1.	Block Diagrams	3-1
1-2.	H Board Removal	1-2	3-2.	Circuit Boards Location	3-2
1-3.	I Board Removal	1-3	3-3.	Schematic Diagrams and Printed Wiring Boards..	3-3
1-4.	A Board Removal	1-4		(1)Schematic Diagram	
1-5.	G Board Removal	1-5		of A(a , b , c , d , e , f , g , h) Board.	3-4
1-6.	U Board and LCD Unitl Removal.....	1-6		(2)Schematic Diagram of H Board.	3-13
1-7.	LCD Panel Removal	1-7		(3)Schematic Diagram of I Board.	3-15
				(4)Schematic Diagram of U Board.	3-17
				(5)Schematic Diagram of G Board.	3-19
2. ADJUSTMENTS			4. EXPLODED VIEWS		
2-1.	Service Functions of Buttons in Front Panel	2-1	4-1.	Chassis	4-2
2-2.	Usea of Service Mode	2-2	4-2.	Packing Materials	4-3
2-3.	Functions of Service Mode	2-3			
2-4.	White Balance Adjustment	2-3			
2-5.	Action after Replacing				
	the LCD Panel and Board	2-5			
			5. ELECTRICAL PARTS LIST		
					5-1

SECTION 1 DISASSEMBLY


1-1. REAR COVER AND CABINET ASSY REMOVAL

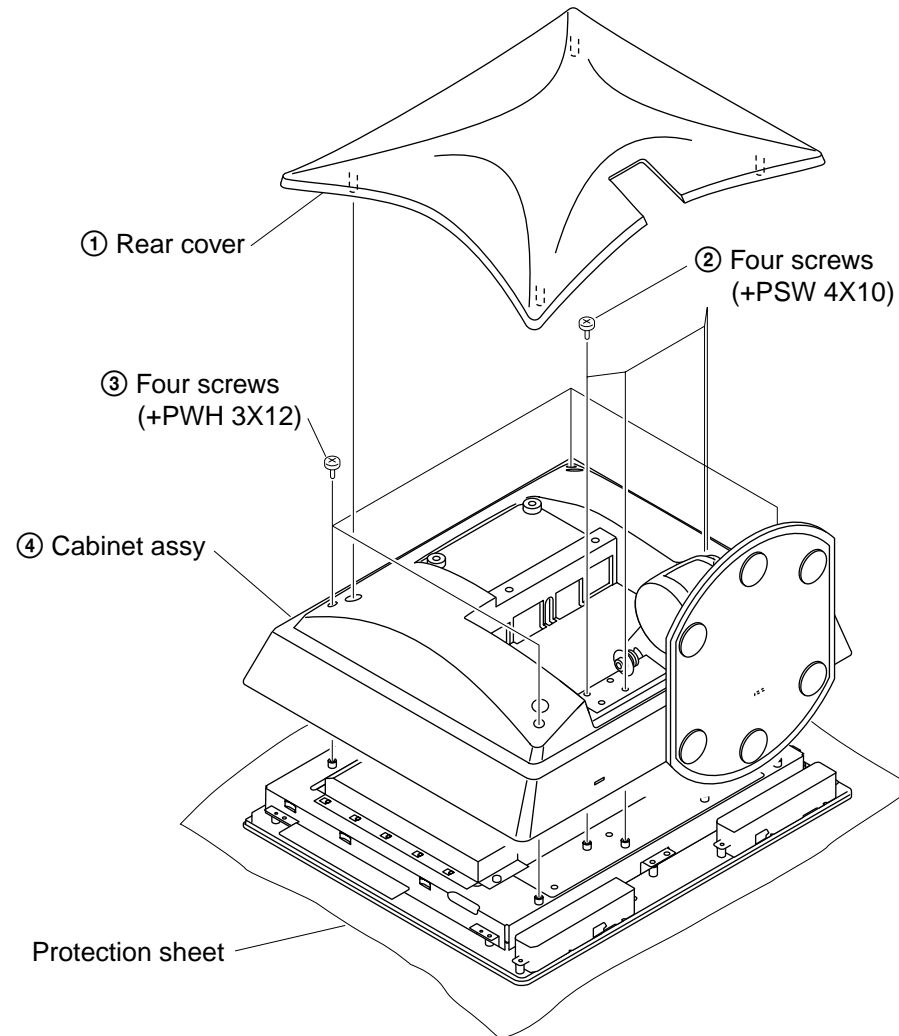


1-2. H BOARD REMOVAL

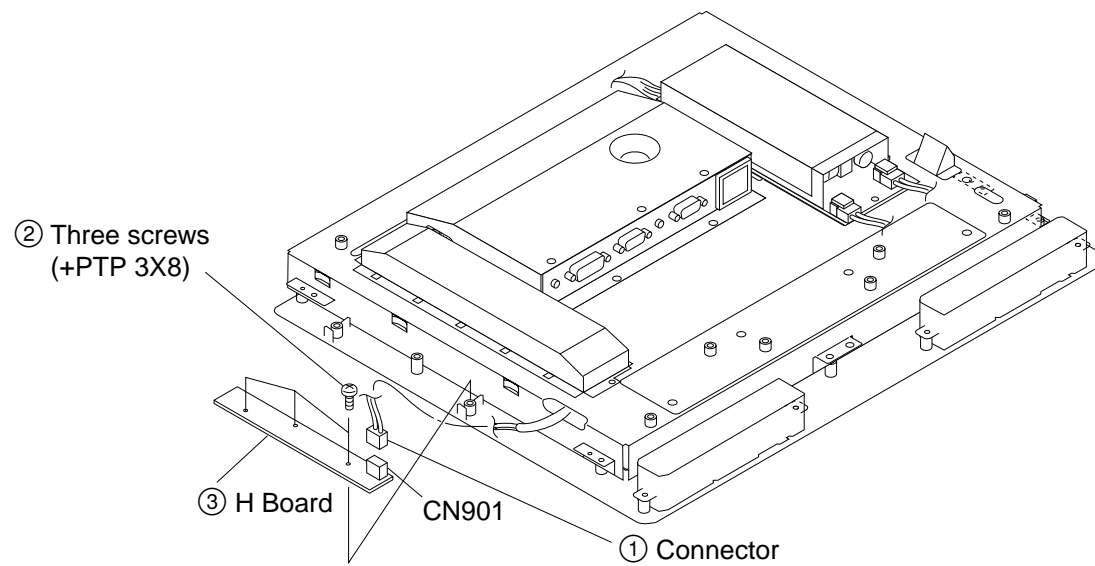


1-3. I BOARD REMOVAL

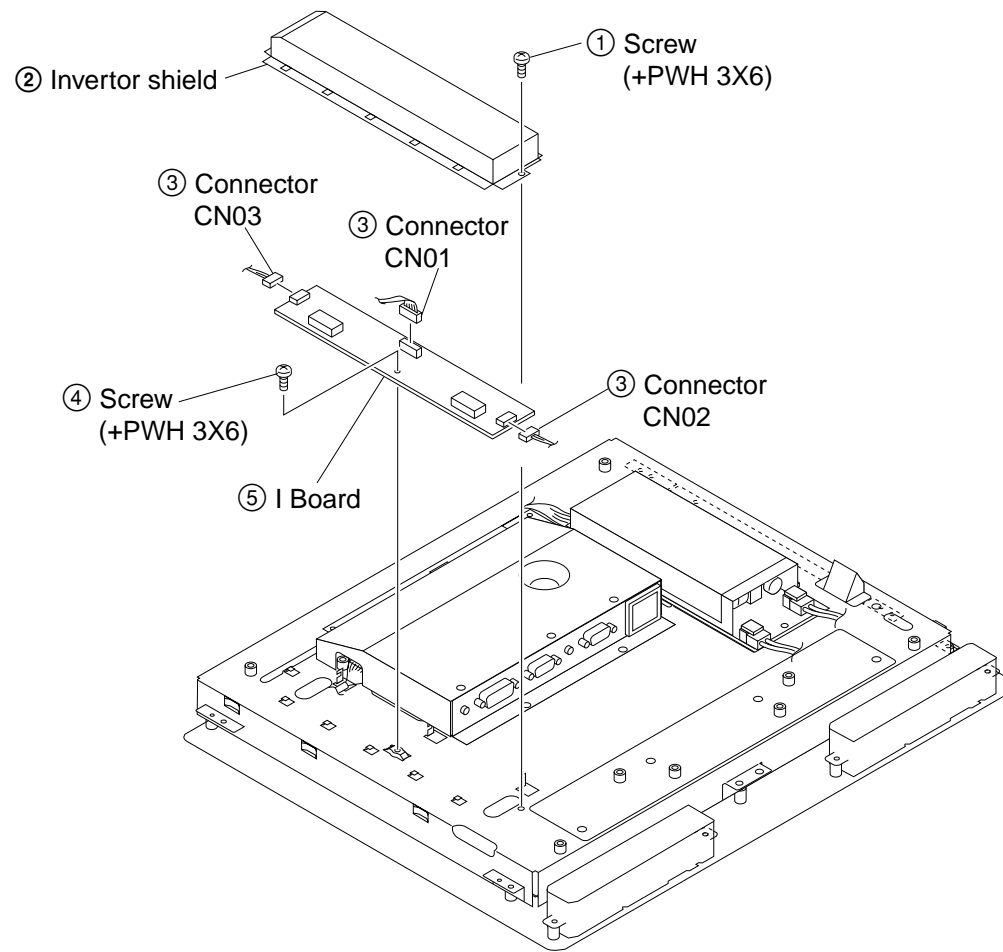


1-4. A BOARD REMOVAL

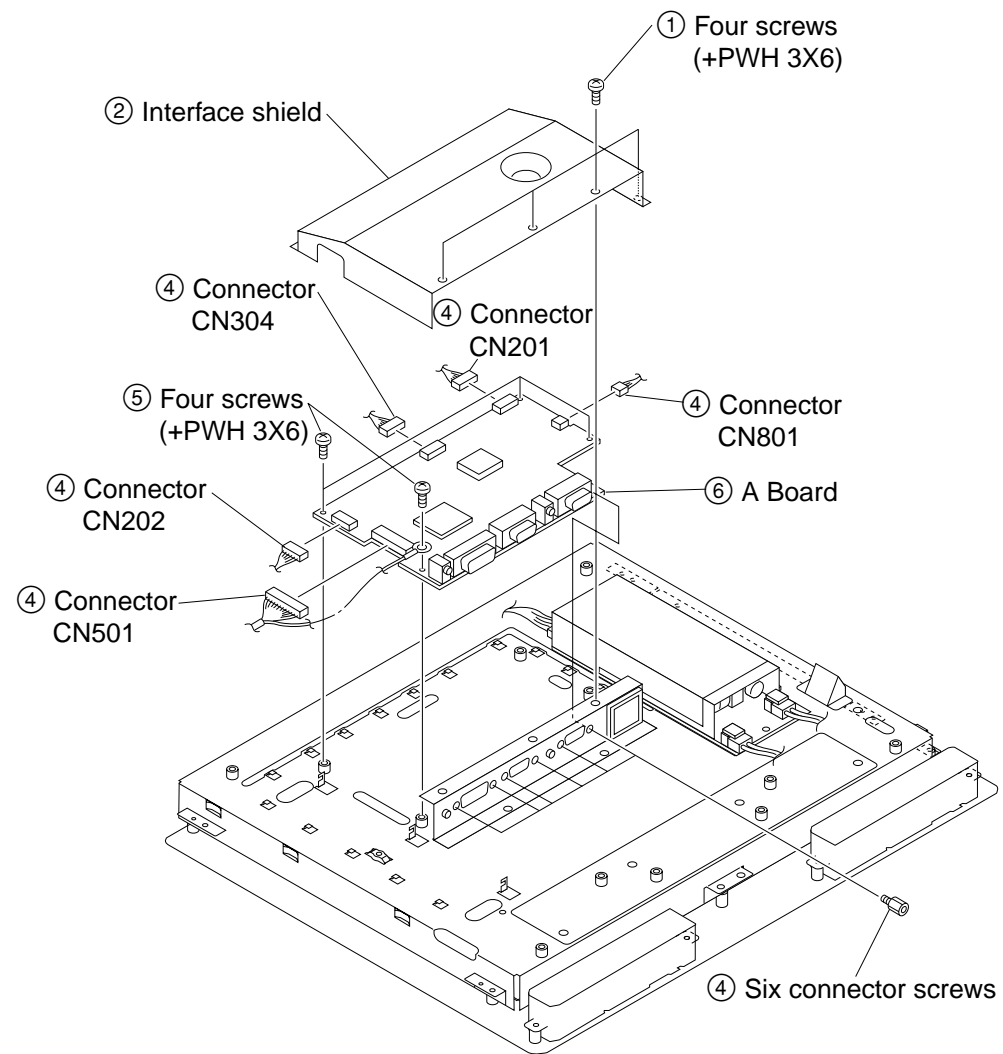


1-5. G BOARD REMOVAL

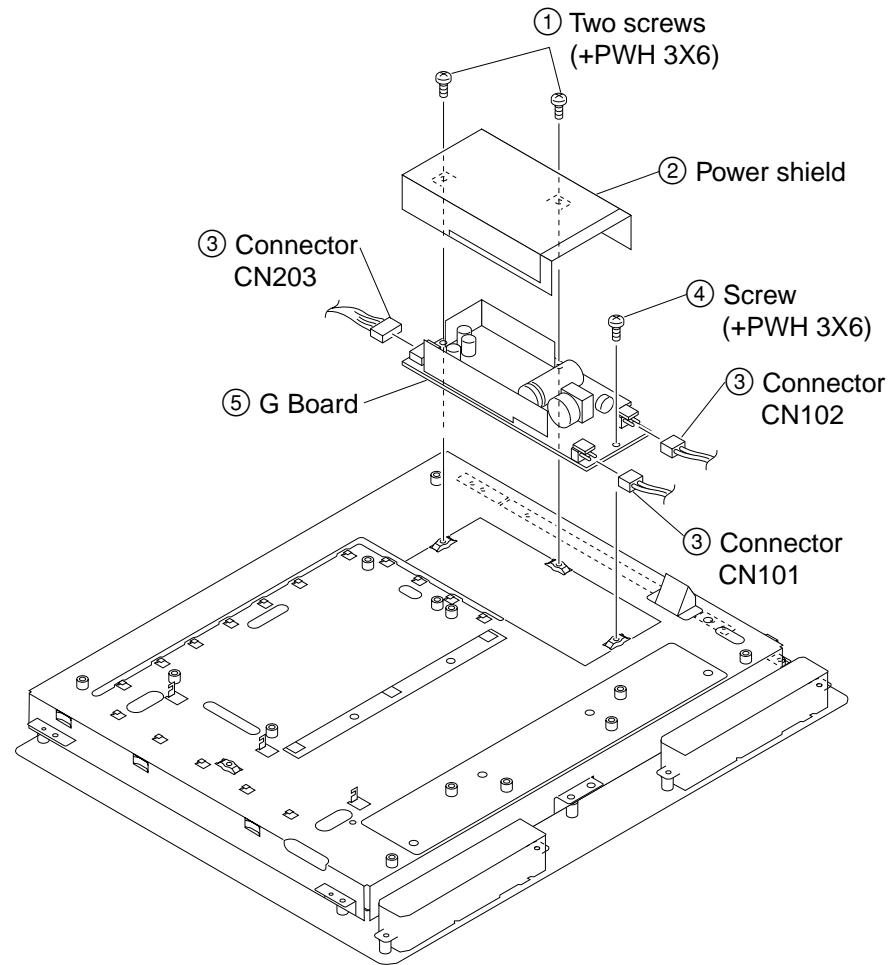

1-6. U BOARD AND LCD UNIT REMOVAL

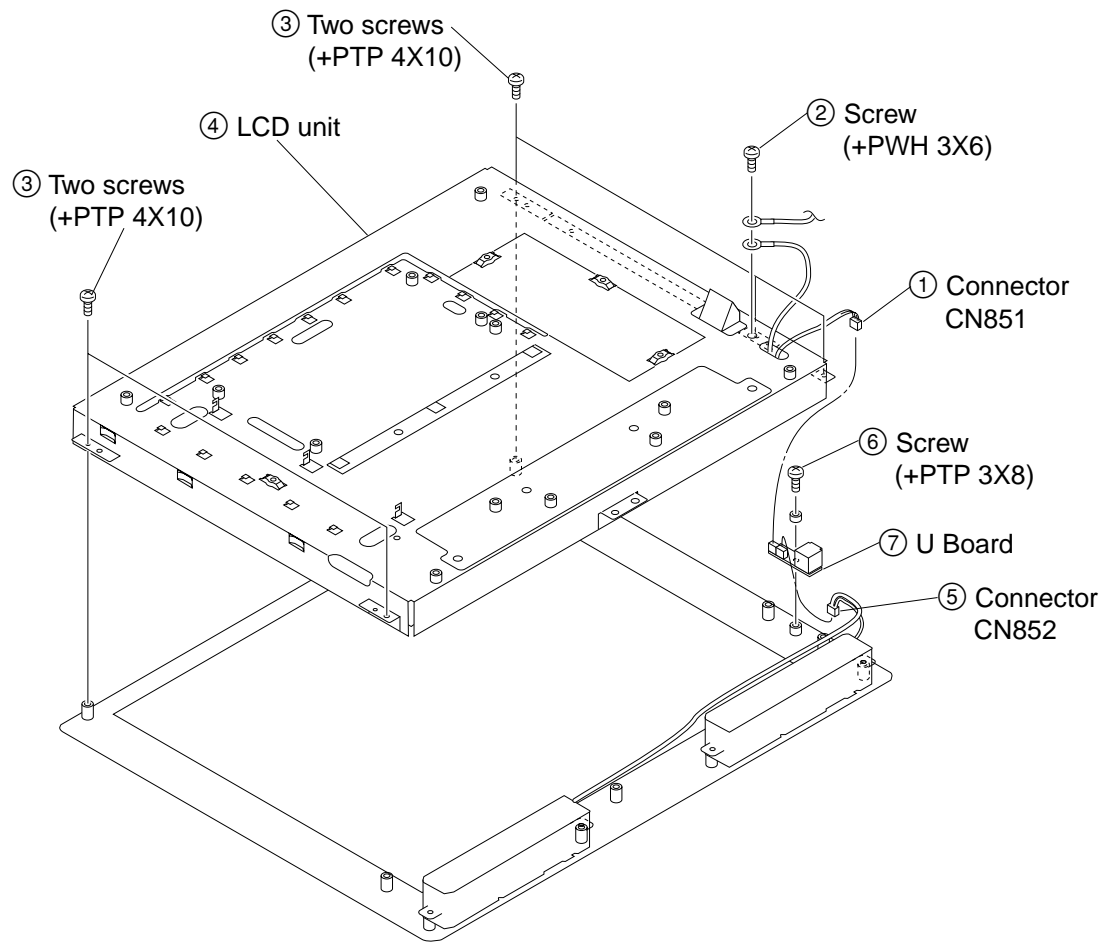

1-7. LCD PANEL REMOVAL

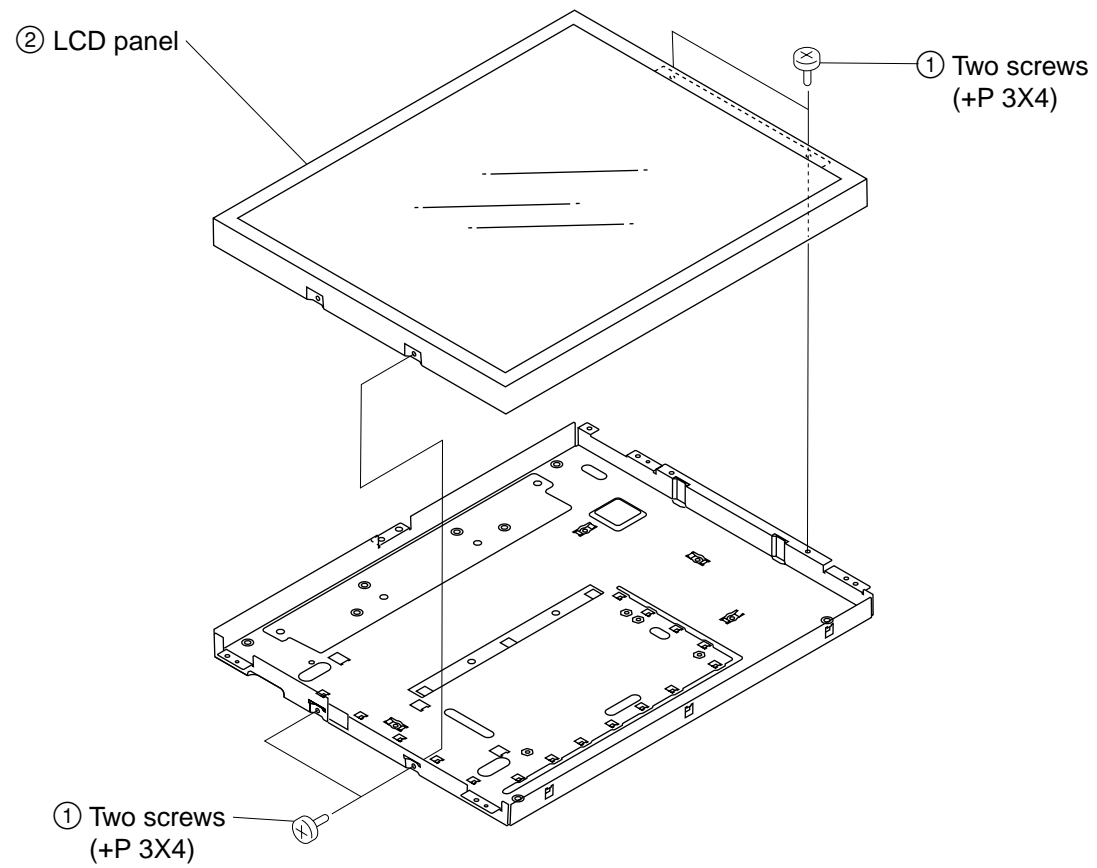

SECTION 2 ADJUSTMENTS


2-1. Service Functions of Buttons in Front Panel

The following functions are available for servicing the set.

1. **To display the model information**
Press the MENU button for five seconds or more in the ordinary power-on state, and the following information is displayed on the screen:
 - Model name
 - Serial number
 - Manufactured year and weekThis function is described in the instruction manual also.
2. **To display ETI (Elapsed Time Indicator)**
Press the OK button for five seconds or more in the ordinary power-on state, and the cumulative power-on time excluding the power-off and power saving state is displayed on the screen.
3. **All mode recall**
Press the POWER button with pressing the OK button in the power-off state, and the user memory is completely cleared and the system is reset to the factory setting. This reset is similar to RESET in the OSD menu, but differs from it in the following:
 - The NO SYNC AGING flag is cleared.
 - LANGUAGE is set to ENGLIDH.
 - INPUT is set to INPUT1: DVI-D.
4. **To set the NO SYNC AGING flag**
Press the POWER button with pressing the UP (↑) button in the power-off state, and the NO SYNC AGING flag is set. In this setting, when the input with no input signal is selected, the system goes into the AGING MODE.
The NO SYNC AGING flag is held until it is cleared. To clear the NO SYNC AGING flag, go into the service mode and then set the AGING MODE to OFF, or execute the all mode recall.
5. **To enter the service mode**
Press the POWER button with pressing the UP (↑) and DOWN (↓) buttons in the power-off state, and the system is set to the service mode. The service mode will be explained later.
To exit from the service mode, turn off the power.
6. **To copy EDID to the EEPROM and to clear ETI**
Press the POWER button with pressing the UP (↑) and OK buttons in the power-off state, and the data for the model information are copied to the EEPROM for the internal microcontroller from EDID of INPUT2: HD15, and the model information display is made correct.
When replacing the A board, this operation is required after writing EDID and at the same time ETI is reset to 0.
7. **To enter the ISP mode**
Turn on the MAIN POWER switch with pressing the DOWN (↓) button in the main-power-off state, and the system enters the ISP mode. The POWER LED goes off, and both input LED's 1 and 2 light on, and the picture disappears, and any button becomes invalid.
In the ISP mode, the internal software can be updated with an external personal computer using a special fixture.
To cancel the ISP mode, turn off the MAIN POWER switch.

2-2. Uses of Service Mode

1. Turn off the power with the POWER button in the front panel. The red POWER LED lights on.
2. Press the POWER button in the front panel with pressing the UP (↑) and DOWN (↓) buttons, and the system enters the service mode.
When no signal is input to the selected input terminal, the following functions are disabled.
3. Press the MENU button, and the main menu is displayed. Then go to page 2 of the main menu with the UP (↑) or DOWN (↓) button, then select the MAINTAIN icon on the bottom line, and then press the OK button.
4. In this menu screen, the version number and released date of the internal software can be checked.
5. The structure of the MAINTAIN menu is shown below.

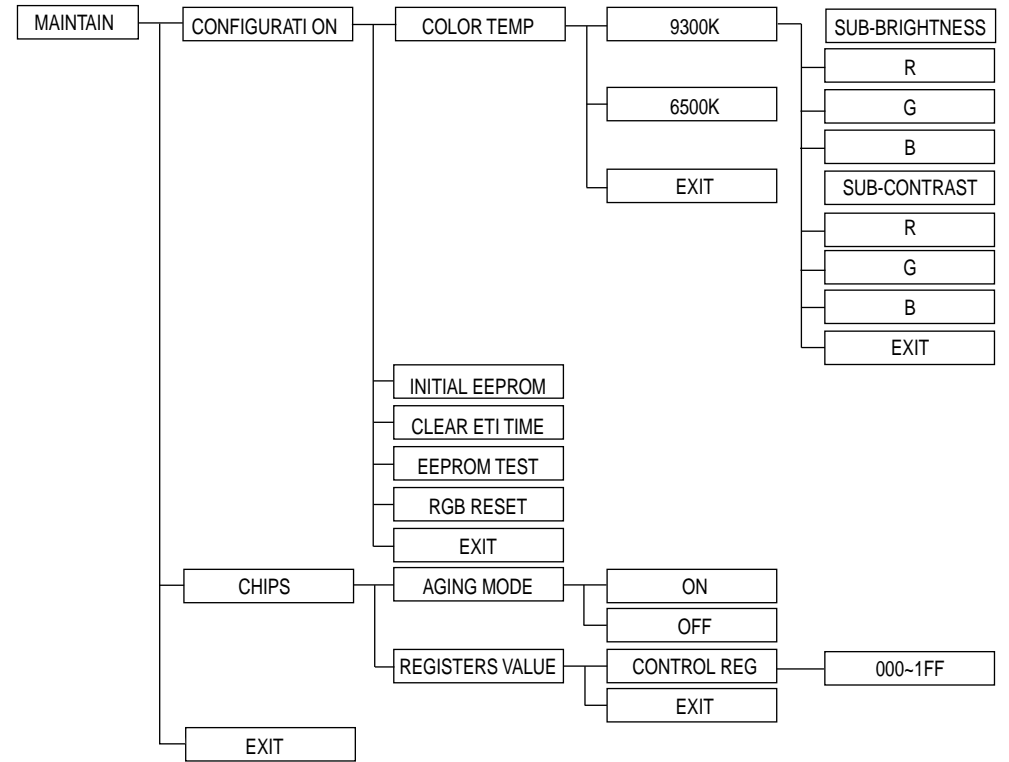

The operation procedure is basically same as that of the ordinary user controls. The function of each menu is explained in next section.

2-3. Functions of Service Mode

1. **COLOR TEMP**
This is used for the white balance adjustment at color temperature 9300 K and 6500 K. The adjustment requires to be done for every input (INPUT1: DVI-D, INPUT1: HD15, or INPUT2: HD15) by switching the input. The adjustment data is stored into the register for respective inputs.
2. **INITIAL EEPROM**
This sets the data of the EEPROM to the default data. This operation is not required usually.
3. **CLEAR ETI TIME**
This resets the ETI (Elapsed Time Indicator) counter to 00000 H.
4. **EEPROM TEST**
This tests writing and reading of the EEPROM.
5. **RGB RESET**
This adjust the offset and gain of the input AD converter for the analog inputs (INPUT1: HD15 and INPUT2:HD15). As these adjustments are common to both inputs, perform them for either input. It is unnecessary for another input. Execute the adjustments under the condition where the signal specified in "White Balance Adjustment" is input.
6. **AGING IN MODE**
This sets and clears the NO SYNC AGING flag.
AGING MODE = ON: Sets the NO SYNC AGING flag.
AGING MODE = OFF: Clears the NO SYNC AGING flag.
When the NO SYNC AGING flag is set and the input with no input signal is selected, the system goes into the AGING MODE. The NO SYNC AGING flag is held until it is cleared. To clear the NO SYNC AGING flag, go into the service mode and then set the AGINGN MODE to OFF, or execute the all mode recall.
7. **CONTROL REG.**
This can check the data of the internal registers. This operation is not required usually.

2-4. White Balance Adjustment

< Preparation >

- (1) Measurement point : Center of screen
- (2) Measurement distance : 50 cm
- (3) Measurement angle : 90°
- (4) Color analyzer (Minolta CS-1000 or equivalent)
- (5) Signal generator (Astro Design VG-828D or equivalent)
Be sure to calibrate the analog RGB output level with 75Ω termination.

1. **Service mode setting**
Enter the service mode referring to step 1 and 2 of Section 2-2.
2. **Aging**
Set the AGING MODE in the service mode to ON. Disconnect the signal input terminal or select the input with no signal input, and the system goes into the AGING MODE.
Execute aging for 30 minutes or more.
3. **User control setting**
Feed a signal to the selected input, and then execute reset in the menu screen. Then, move the menu display position to avoid the measurement point. Or, set the following for respective inputs.

BACKLIGHT (Brightness of backlight) = 100

CONTRAST = 70

BRIGHTNESS = 50

Menu display position = not center of screen (Avoid the measurement point.)

(The setting of the menu display position is common to respective inputs.)

ECO = OFF (The setting of ECO is common to respective inputs.)

Do not change the above setting until the white balance adjustment is completed.

4. Analog RGB white balance adjustment

- (1) Feed the signal listed below to INPUT2: HD15, and then select INPUT2: HD15. Then execute RGB RESET in the service mode menu.

Signal timing	Pattern	Input level
VESA 1280 * 1024 / 60Hz	Gray scale	0.73 Vp-p

- (2) Feed the signal listed below to INPUT2: HD15.

Signal timing	Pattern	Pattern
VESA 1280 * 1024 / 60Hz	All gray	30 IRE (0.21 Vp-p)

- (3) Select COLOR TEMP → 9300K in the service mode menu, and set the data listed below as initial data for adjustment.

SUB-BRIGHTNESS			SUB-CONTRAST		
R	G	B	R	G	B
40	40	40	148	148	143

- (4) Adjust SUB-BRIGHTNESS: R, G, and B. Specifications are listed below.

x	y	Brightness (cd/m ²)
0.283 ± 0.003	0.298 ± 0.003	12 ± 0.7

- (5) Select COLOR TEMP → 6500K in the service mode menu, and set the data listed below as initial data for adjustment.

SUB-BRIGHTNESS			SUB-CONTRAST		
R	G	B	R	G	B
40	40	40	145	143	138

- (6) Adjust the SUB-BRIGHTNESS: R, G, and B. Specifications are listed below.

x	y	Brightness (cd/m ²)
0.313 ± 0.003	0.329 ± 0.003	10 ± 0.7

- (7) After adjusting (4) and (6), write down the value of SUB-CONTRAST and SUB-BRIGHTNESS.

- (8) Feed the signal to INPUT1: HD15, and then select INPUT1: HD15. Select COLOR TEMP → 9300K then 6500K in the service mode menu, and enter the value written down in step (7) respectively.

5. Digital RGB white balance adjustment

- (1) Feed the signal listed below to INPUT1: DVI-D.

Signal timing	Pattern	Input level
VESA 1280 * 1024 / 60Hz	All gray	30 IRE

- (2) Select COLOR TEMP → 9300K in the service mode menu, and set the data listed below as initial data for adjustment.

SUB-BRIGHTNESS			SUB-CONTRAST		
R	G	B	R	G	B
40	40	40	132	132	132

- (3) Adjust the SUB-BRIGHTNESS: R, G, and B. Specifications are listed below.

x	y	Brightness (cd/m ²)
0.283 ± 0.003	0.298 ± 0.003	12 ± 0.7

(4) Select COLOR TEMP → 6500K in the service mode menu, and set the data listed below as initial data for adjustment.

SUB-BRIGHTNESS			SUB-CONTRAST		
R	G	B	R	G	B
40	40	40	132	132	132

(5) Adjust the SUB-BRIGHTNESS: R, G, and B. Specifications are listed below.

x	y	Brightness (cd/m ²)
0.313 ± 0.003	0.329 ± 0.003	12 ± 0.7

6. Setting for shipping

Turn off the power with the POWER button in the front panel. Check that the red POWER LED lights on, and then execute the all mode recall. (press the POWER button with pressing the OK button in the power-off state)

2-5. Action after Replacing the LCD Panel and Board

1. After replacing the LCD panel
 - (1) White balance adjustment. (Refer to Section 2-4.)
 - (2) CLEAR ETI TIME. (Refer to Section 2-3 step 3.)
 - (3) Check of picture and sound.

2. After replacing the A board
 - (1) White balance adjustment. (Refer to Section 2-4.)
 - (2) EDID writing.

As the write protection is not applied in this unit, it is possible to write data with an ordinary writing fixture.

It is required to be written for INPUT1: DVI-D, INPUT1: HD15, and INPUT2: HD15 respectively.

Take care that the data for DVI-D and HD15 terminals are different from each other.
 - (3) EDID copy to the EEPROM and ETI clear. (Refer to Section 2-1 step 6.)

Be sure to perform them after EDID writing. After executing, check that the correct model information is displayed. (Refer to Section 2-1 step 1.)
 - (4) Operation check of buttons and LED's in the front panel, and Check of picture and sound for respective inputs.

3. After replacing the I board
 - (1) White balance adjustment. (Refer to Section 2-4.)
 - (2) Check of picture and sound.

4. After replacing the G board
 - (1) Operation check of the MAIN POWER switch.
 - (2) Check of picture and sound.


5. After replacing the H board
 - (1) Operation check of buttons and LED's in the front panel.

6. After replacing the U board
 - (1) Check of speaker sound.
 - (2) Check of headphone jack sound.


When connecting a plug to the headphone jack, confirm no sound from the speakers.

SECTION 3 DIAGRAMS

3-1. BLOCK DIAGRAMS

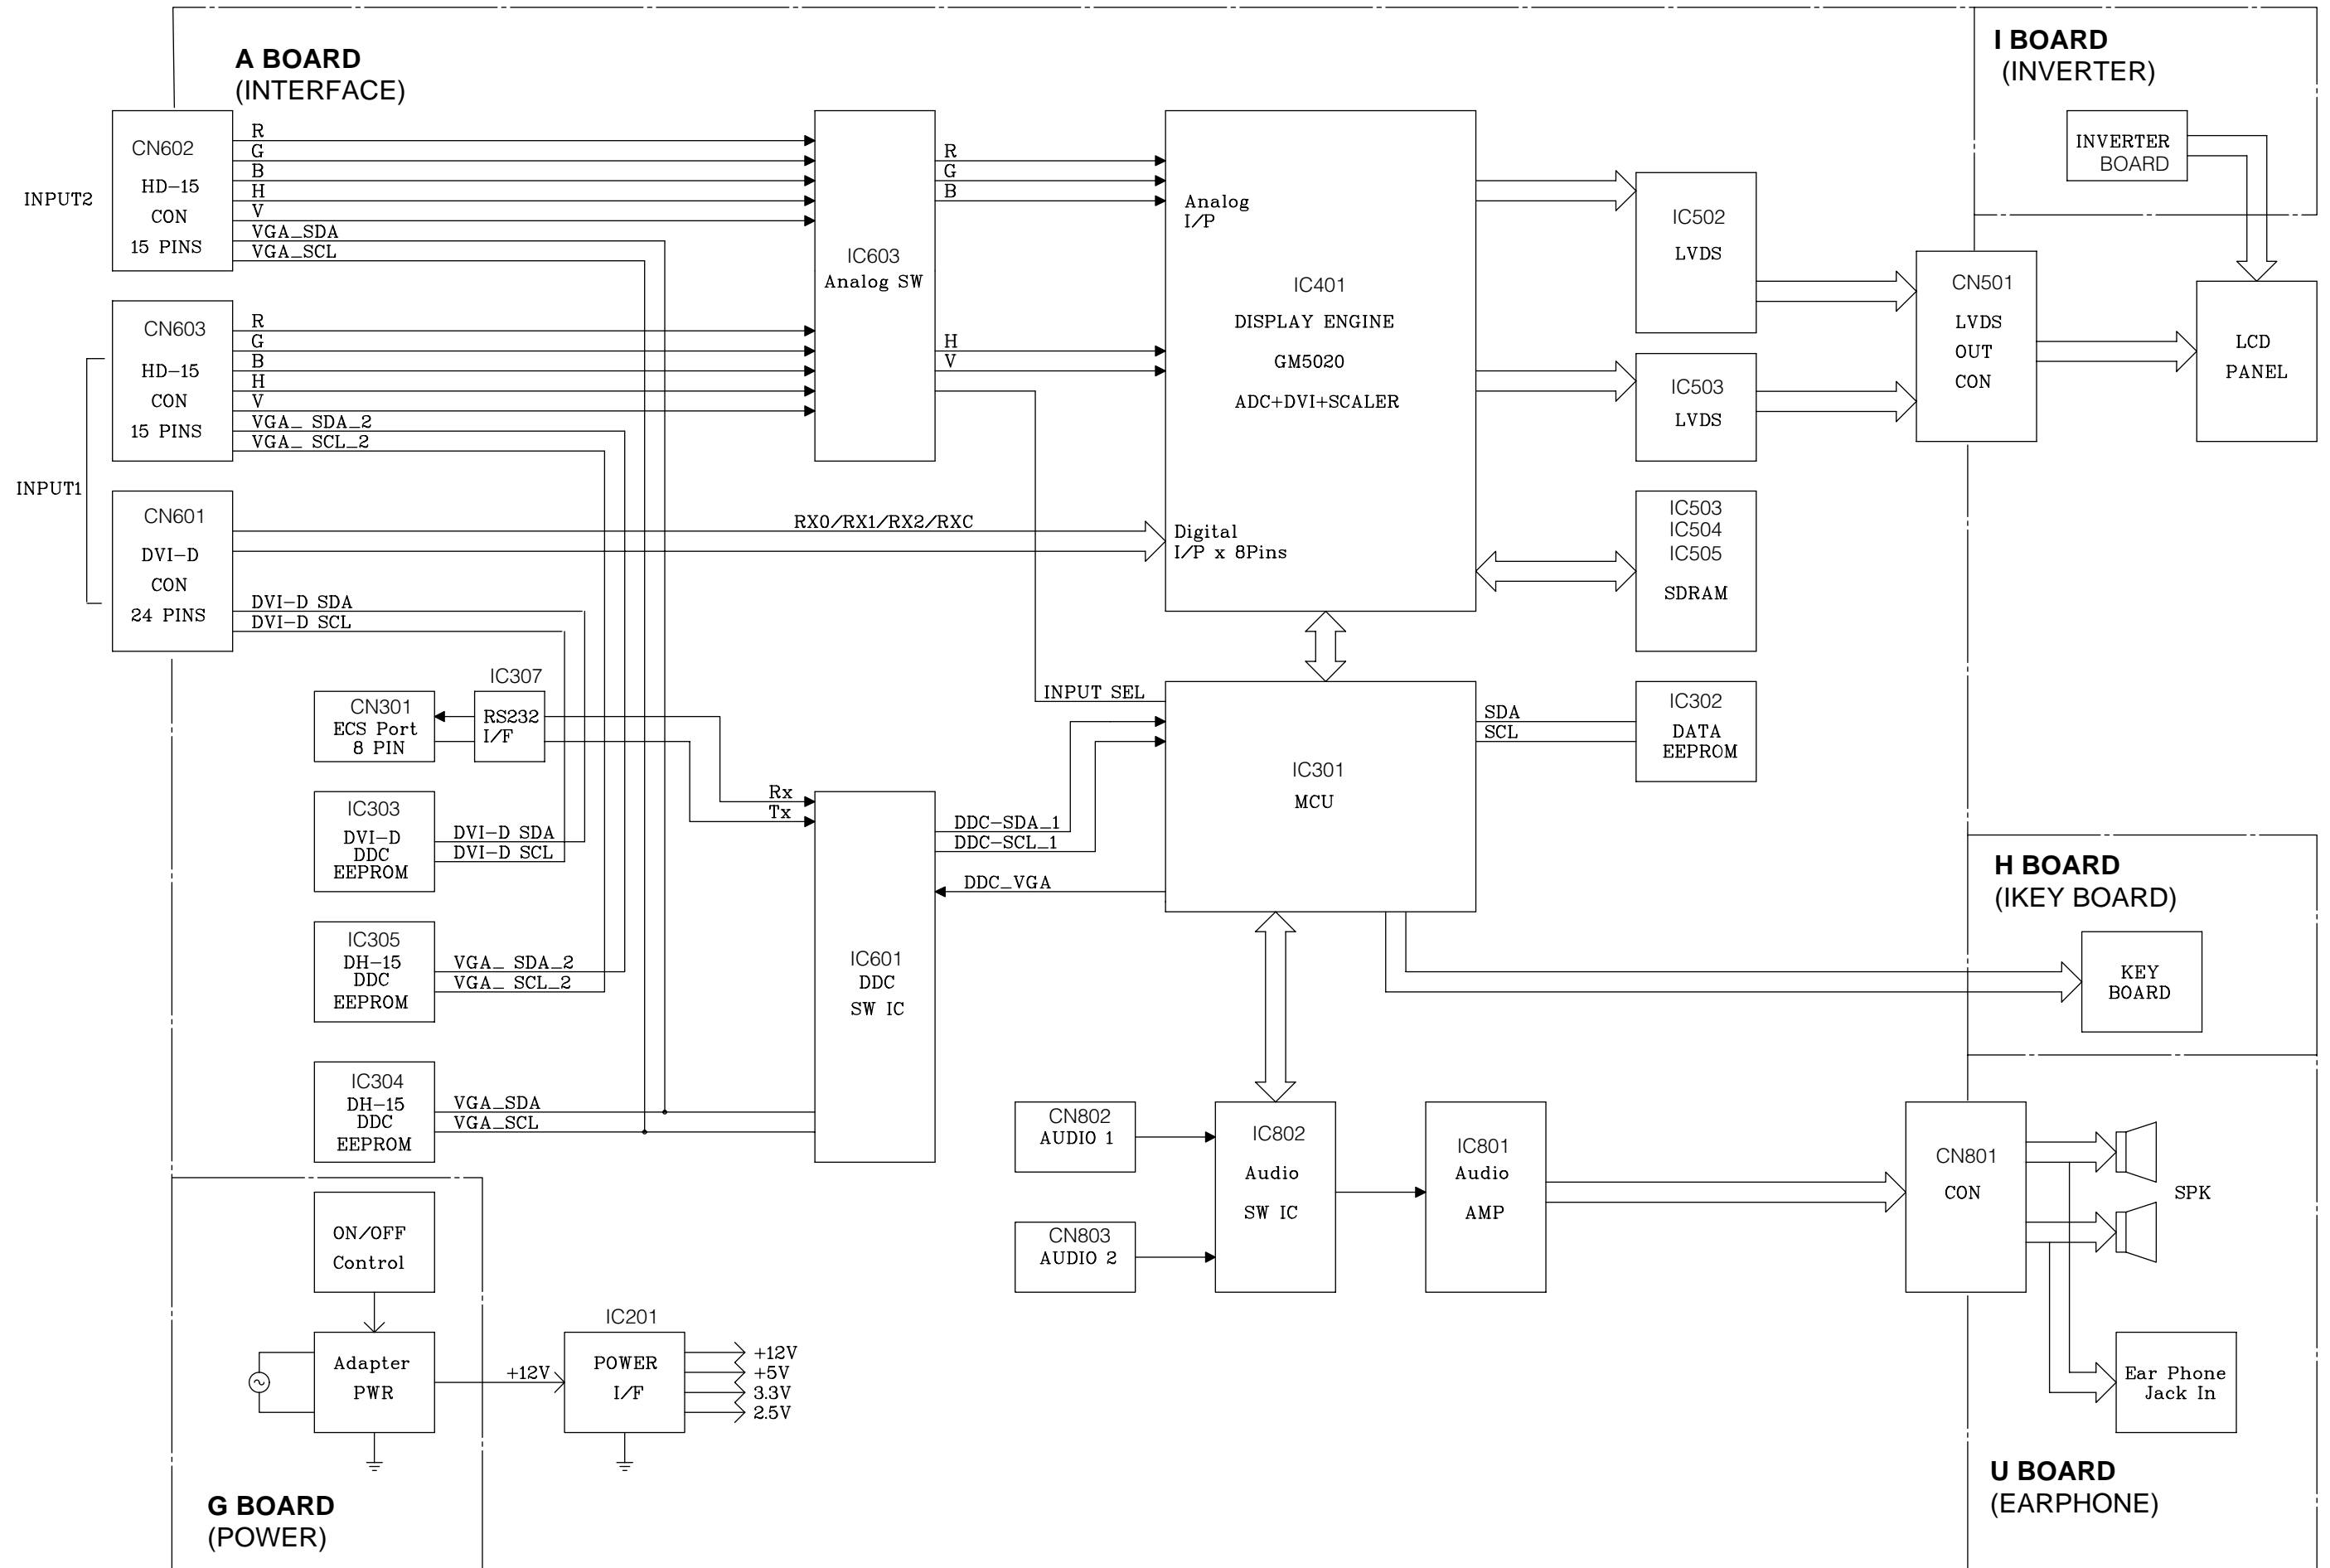

3-2. CIRCUIT BOARDS LOCATION

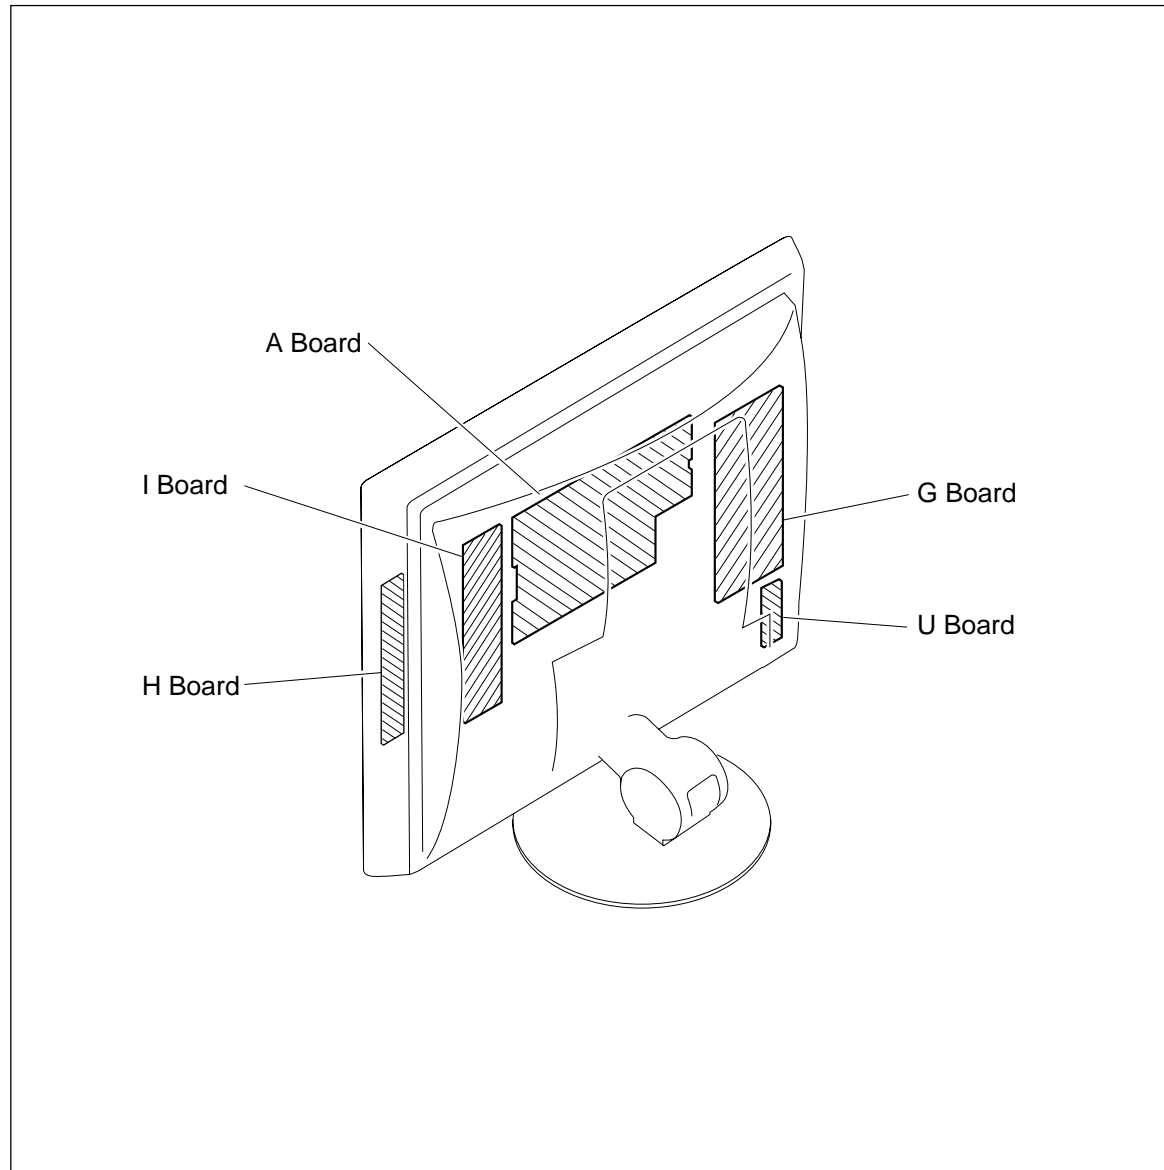







3-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note:

- All capacitors are in μF unless otherwise noted. (pF: $\mu\mu\text{F}$)
Capacitors without voltage indication are all 50 V.
- Indication of resistance, which does not have one for rating electrical power, is as follows.


Pitch: 5 mm

Rating electrical power 1/4 W (CHIP : 1/10 W)

- All resistors are in ohms.
-  : nonflammable resistor.
-  : fusible resistor.
- Δ : internal component.
-  : panel designation, and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- \perp : earth-ground.
-  : earth-chassis.
- When replacing the part in below table, be sure to perform the related adjustment.
- All voltages are in V.
- Readings are taken with a 10 M digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerances.
- * : Can not be measured.
- Circled numbers are waveform references.
-  : B + bus.
-  : B - bus.

- Divided circuit diagram


One sheet of A board are circuit diagram is divided into eight sheets, each having the code A- $\text{\textcircled{a}}$ to A- $\text{\textcircled{h}}$. For example, the destination $\text{\textcircled{ab1}}$ on the code A- $\text{\textcircled{a}}$ sheet is connected to $\text{\textcircled{ab1}}$ on the A- $\text{\textcircled{b}}$ sheet.




Note: The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un tramé et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

(1) Schematic Diagrams of A (a, b, c, d, e, f, g, h) Board

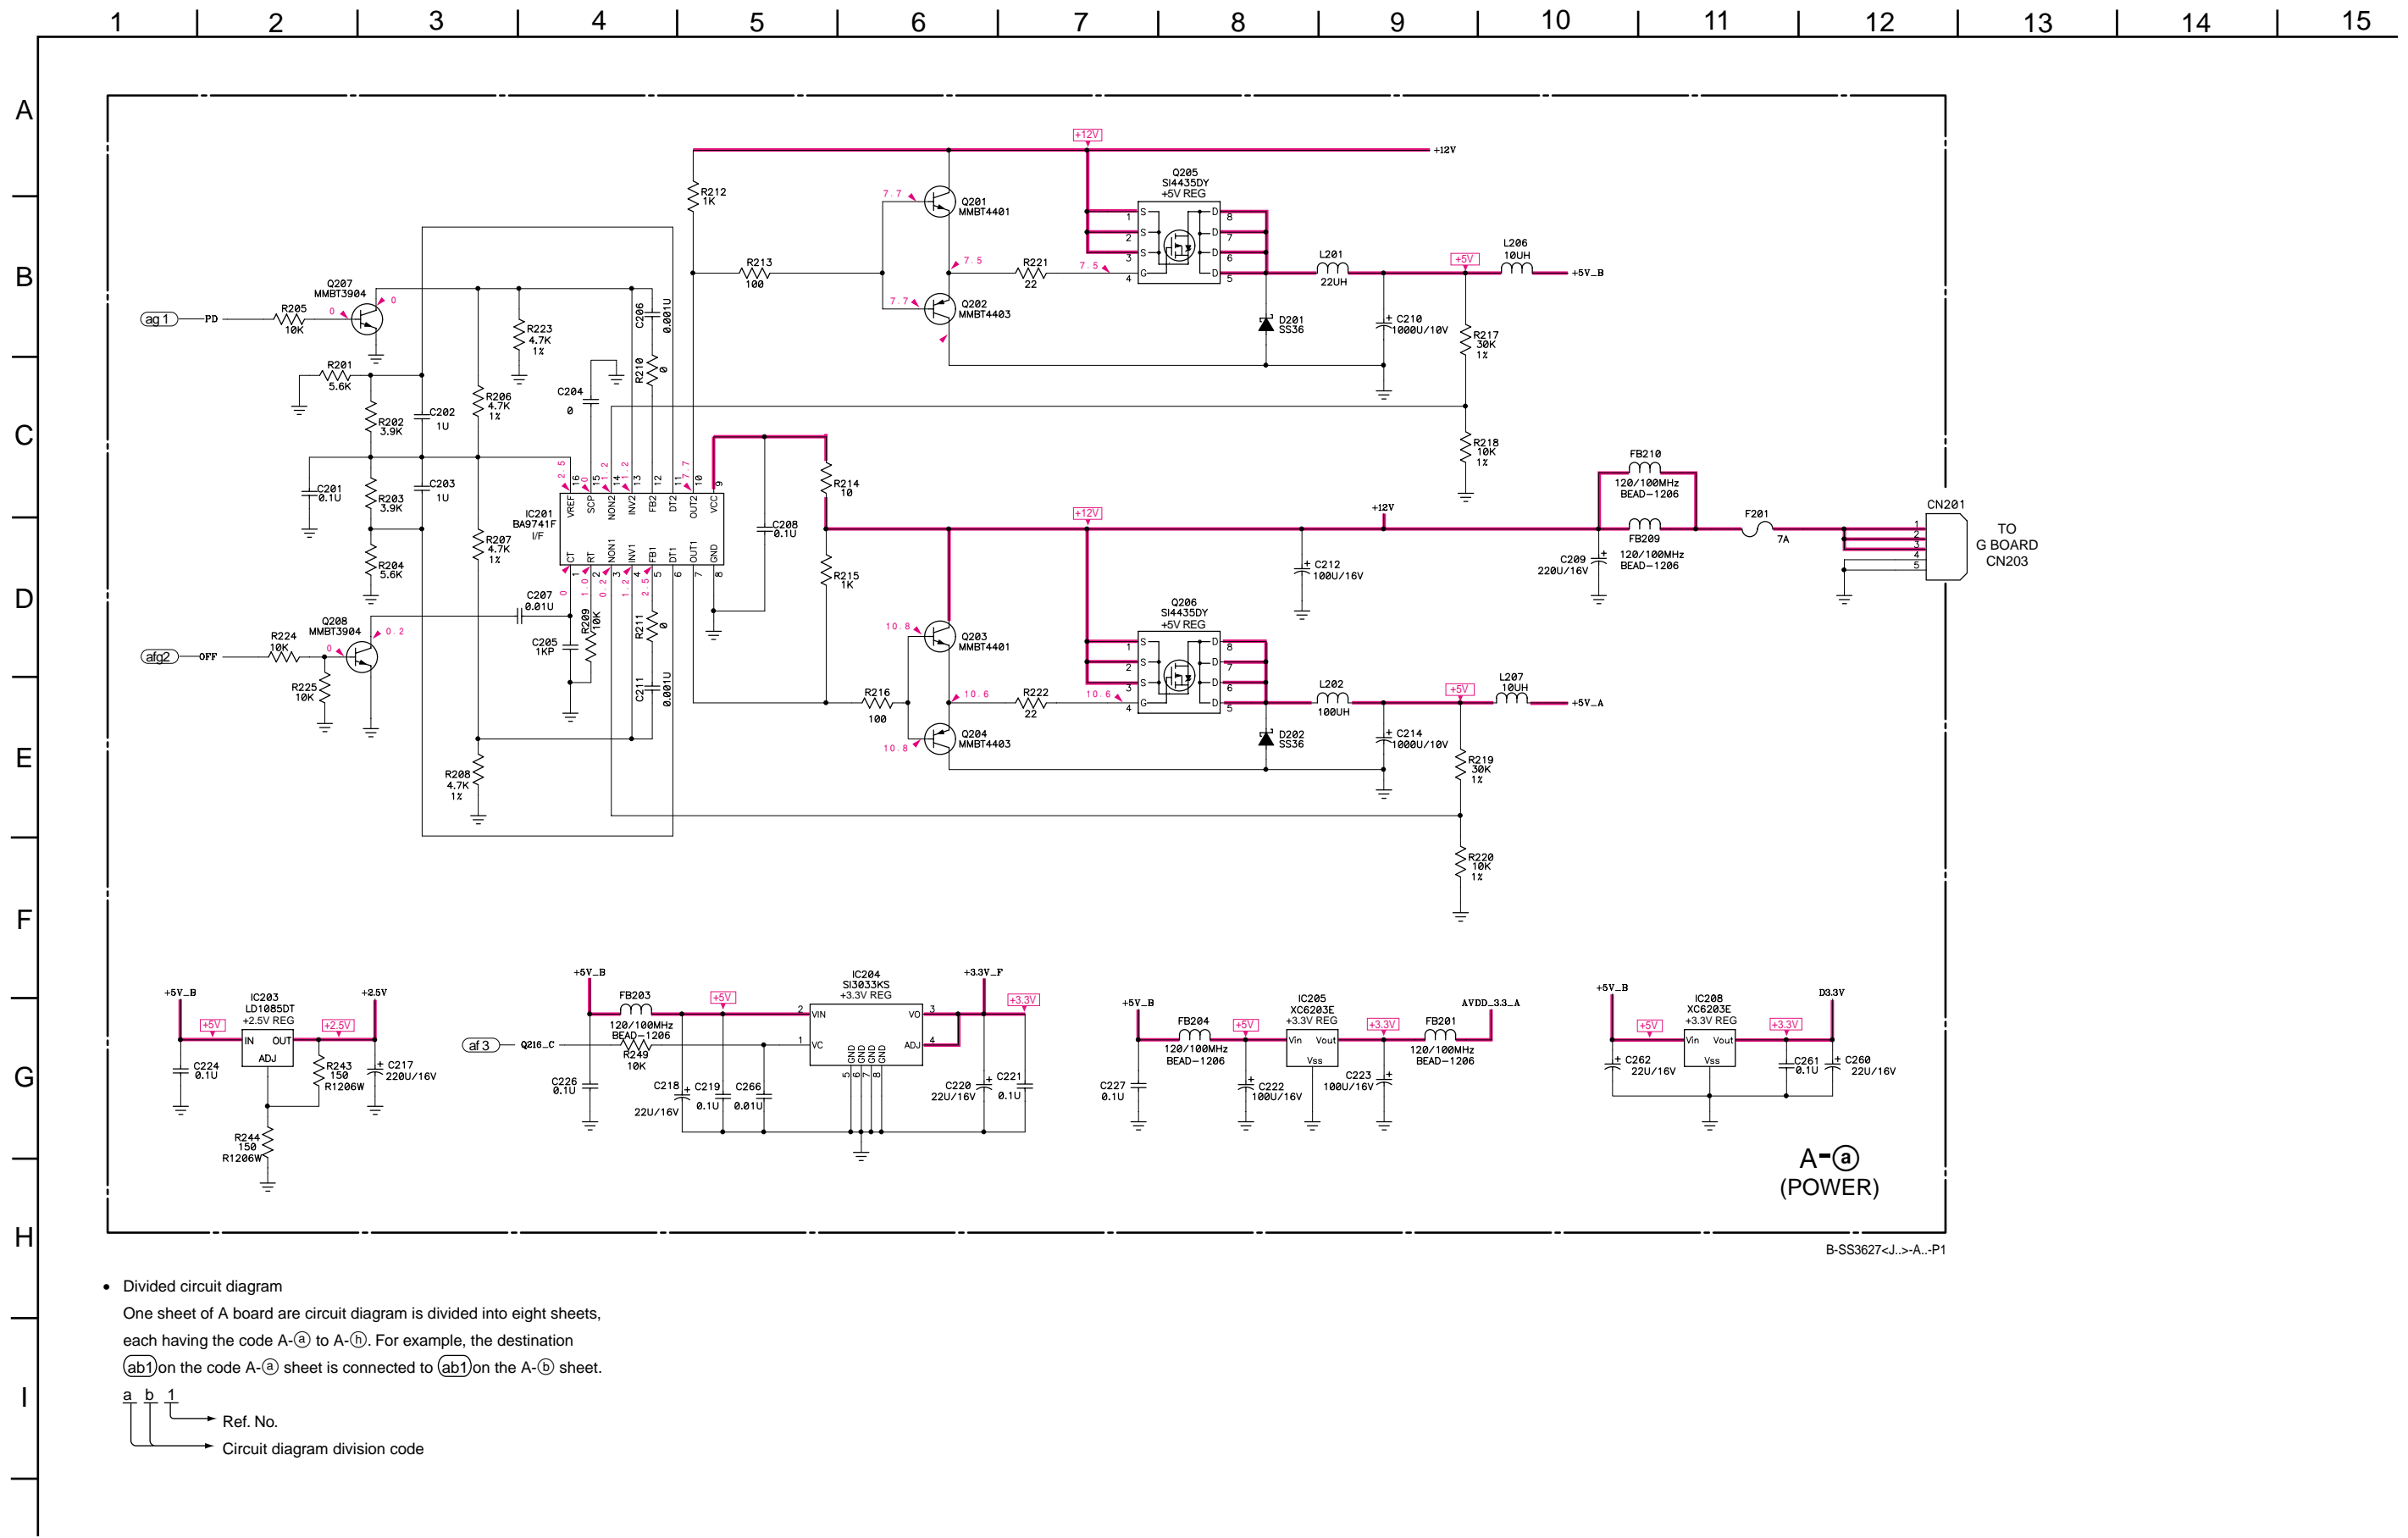


- Divided circuit diagram
One sheet of A board are circuit diagram is divided into eight sheets, each having the code A-(a) to A-(h). For example, the destination (ab1) on the code A-(a) sheet is connected to (ab1) on the A-(b) sheet.



1 2 3 4 5 6 7 8 9 10 11 12 13 14

A
B
C
D
E
F
G
H
I
J

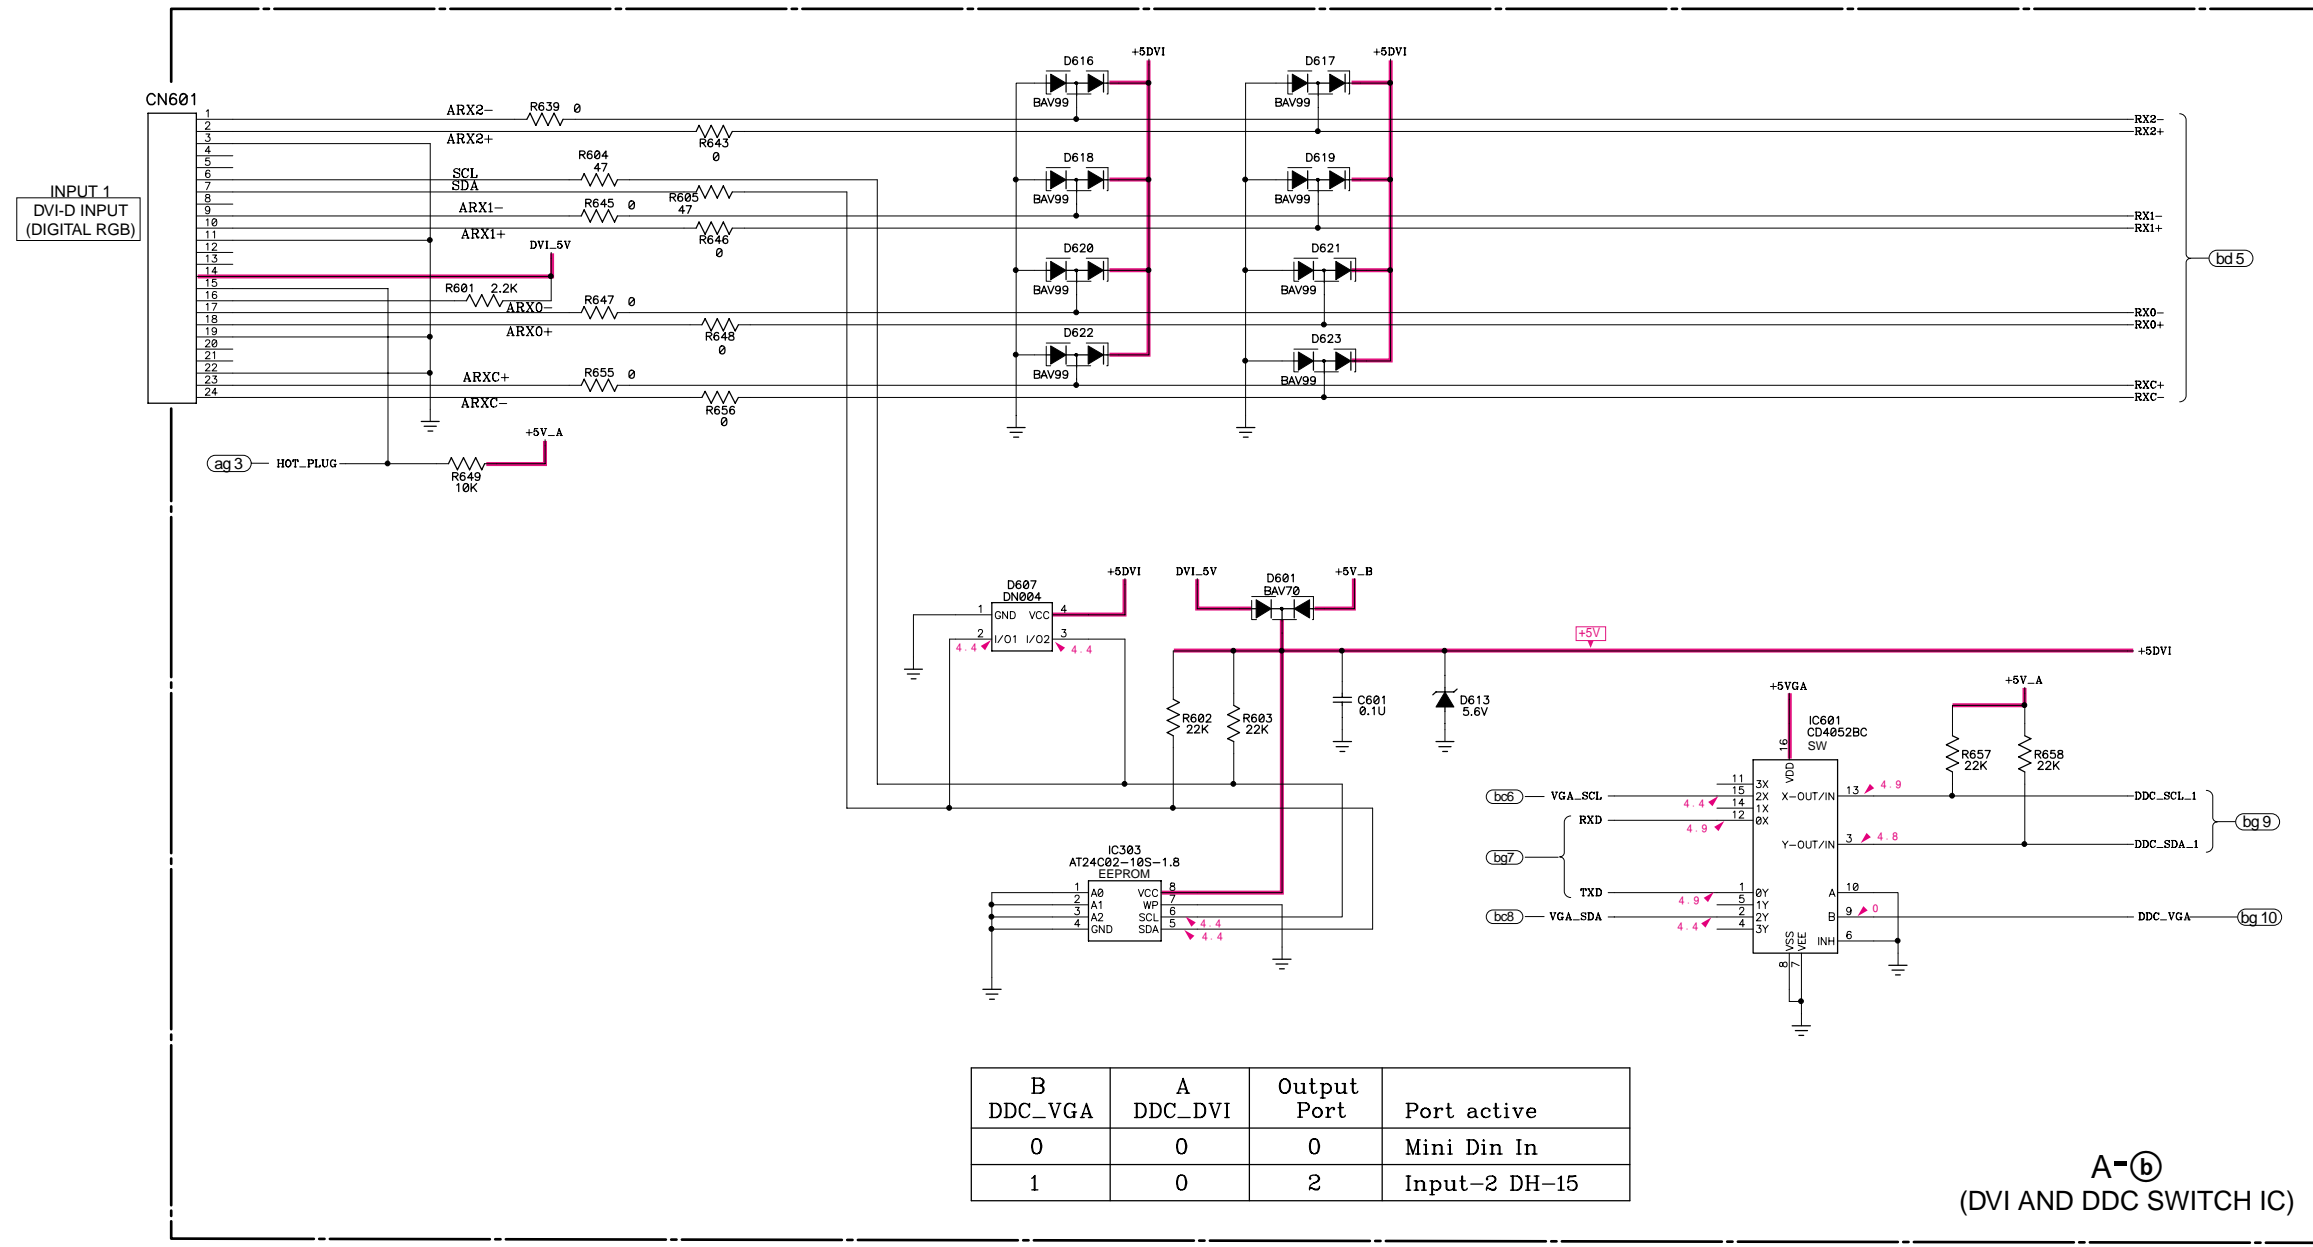



B DDC_VGA	A DDC_DVI	Output Port	Port active
0	0	0	Mini Din In
1	0	2	Input-2 DH-15

A-(b)
(DVI AND DDC SWITCH IC)

B-SS3627<J.>-A.-P2


- Divided circuit diagram
One sheet of A board are circuit diagram is divided into eight sheets, each having the code A-(a) to A-(h). For example, the destination (ab1) on the code A-(a) sheet is connected to (ab1) on the A-(b) sheet.




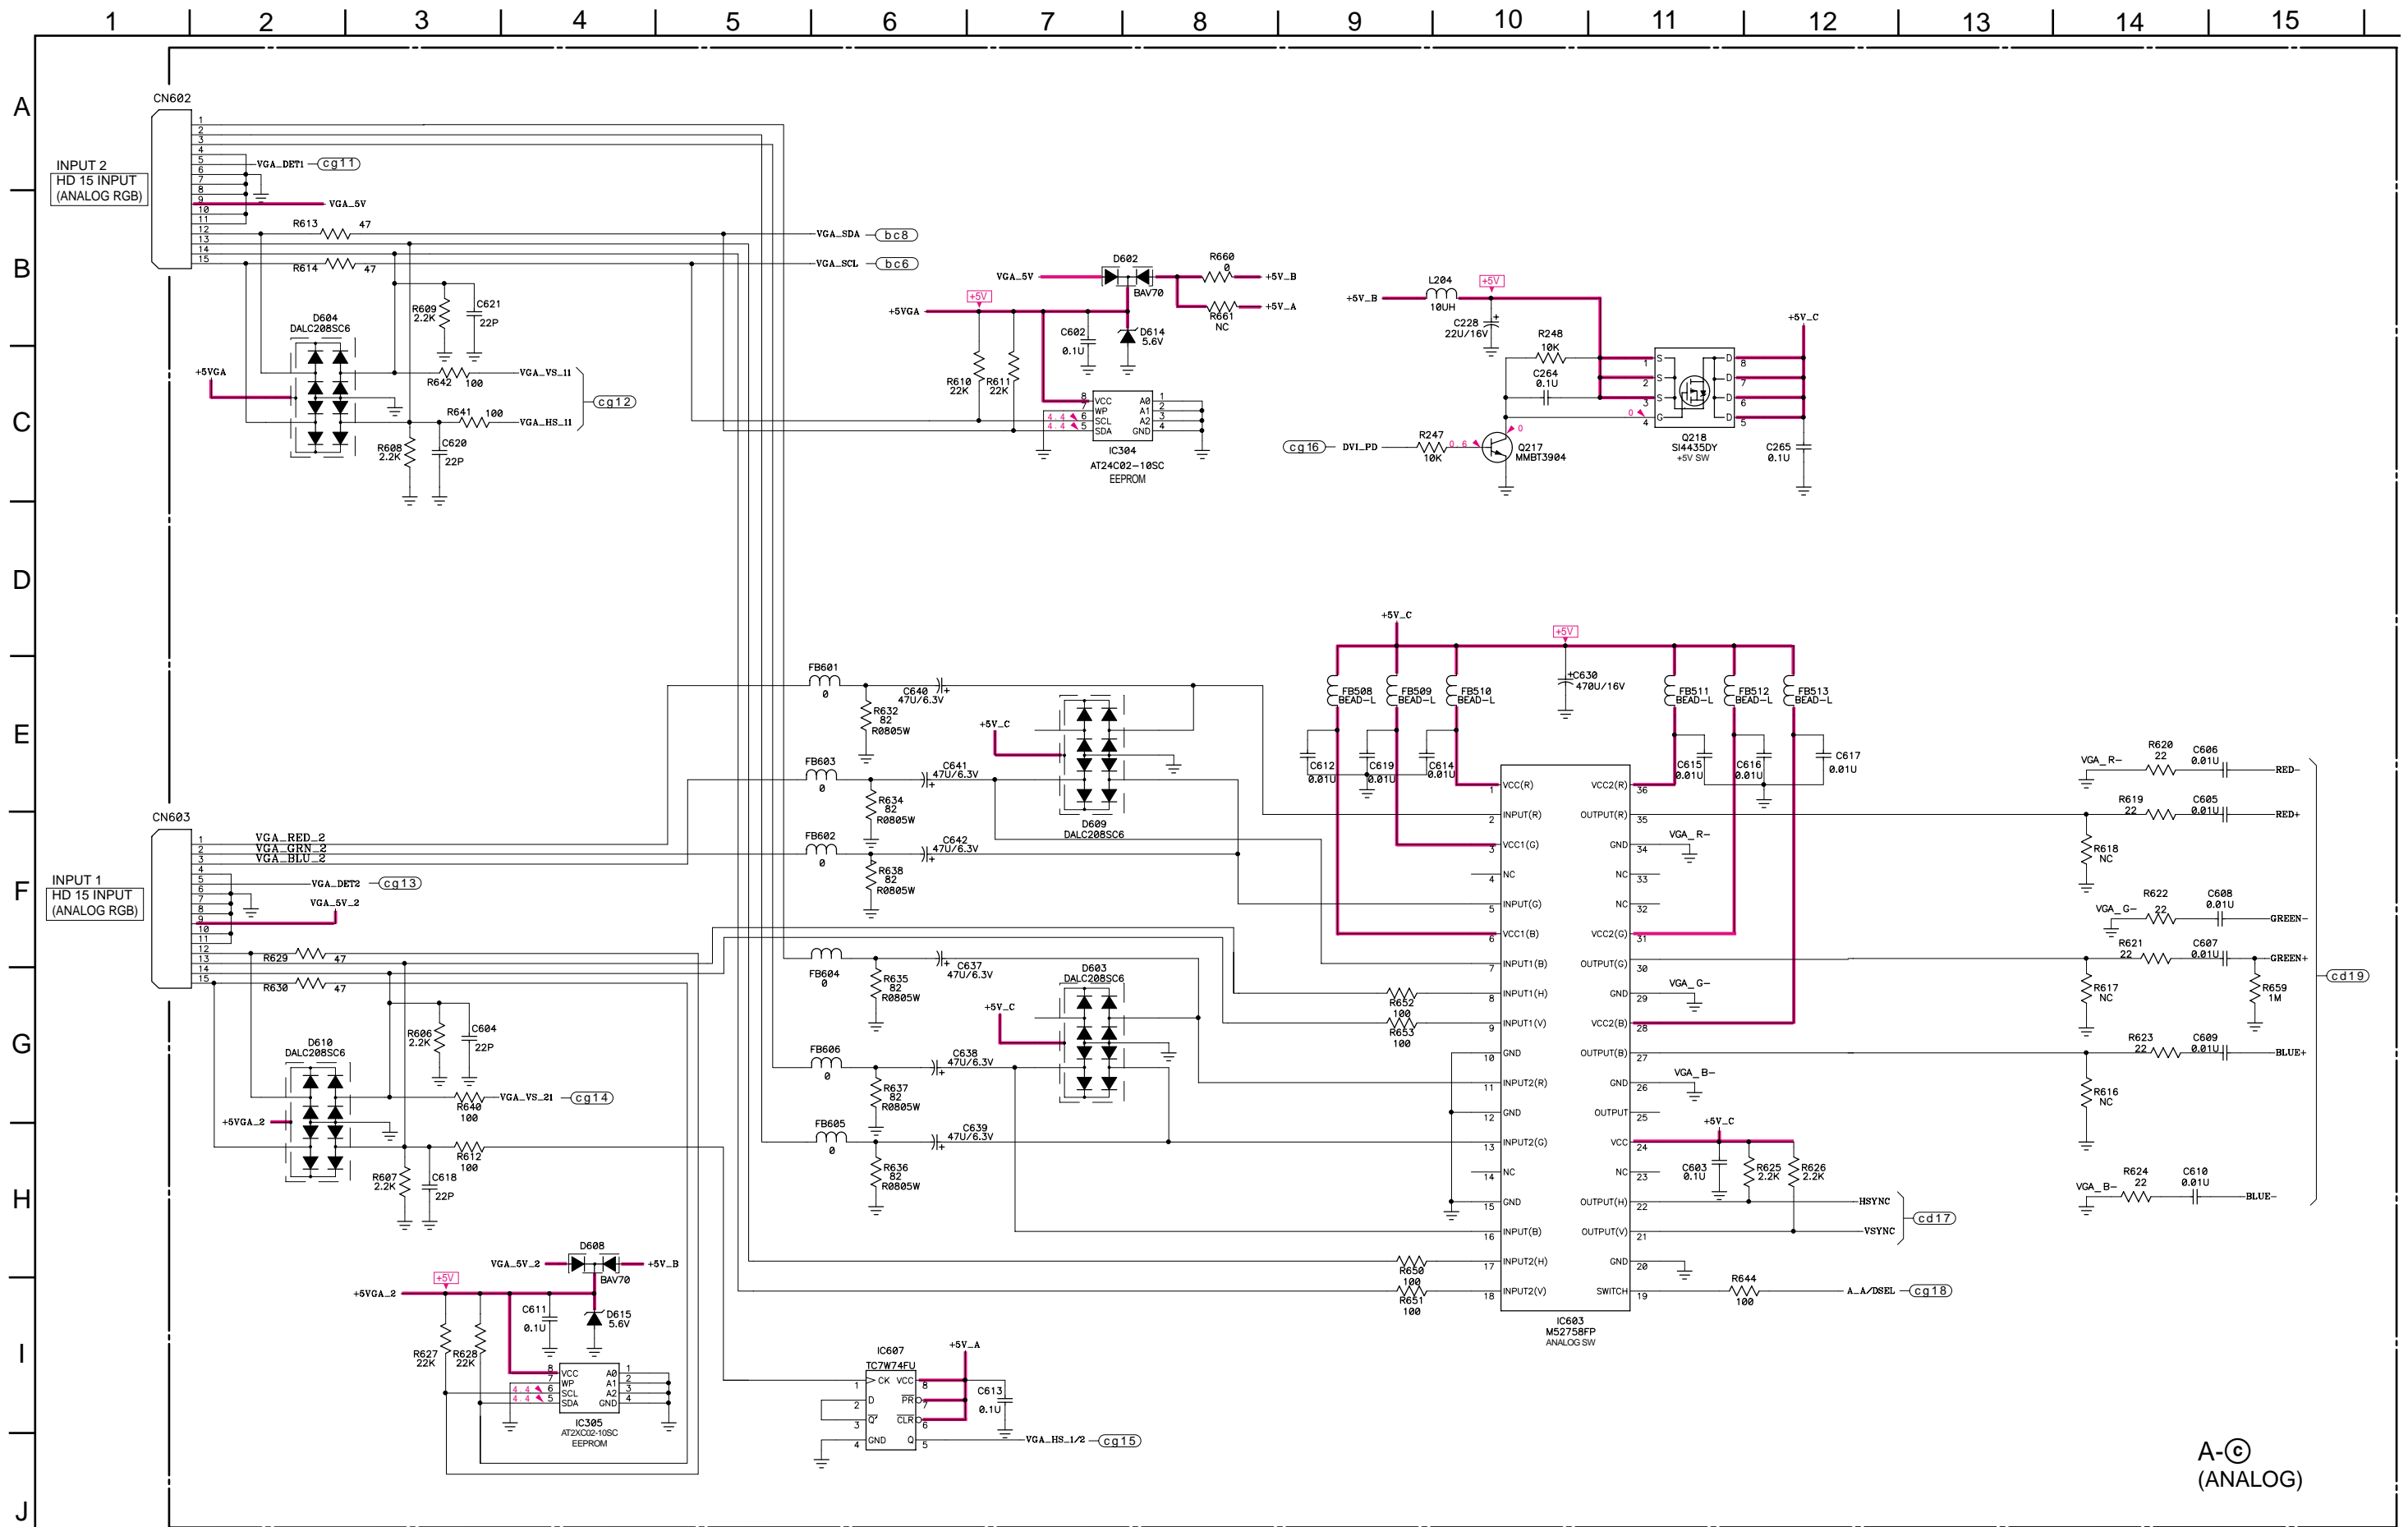

A-①
(ANALOG)

- Divided circuit diagram
- One sheet of A are circuit diagram is divided into eight sheets, each having the code A-① to A-⑧. For example, the destination (ab1) on the code A-③ sheet is connected to (ab1) on the A-① sheet.




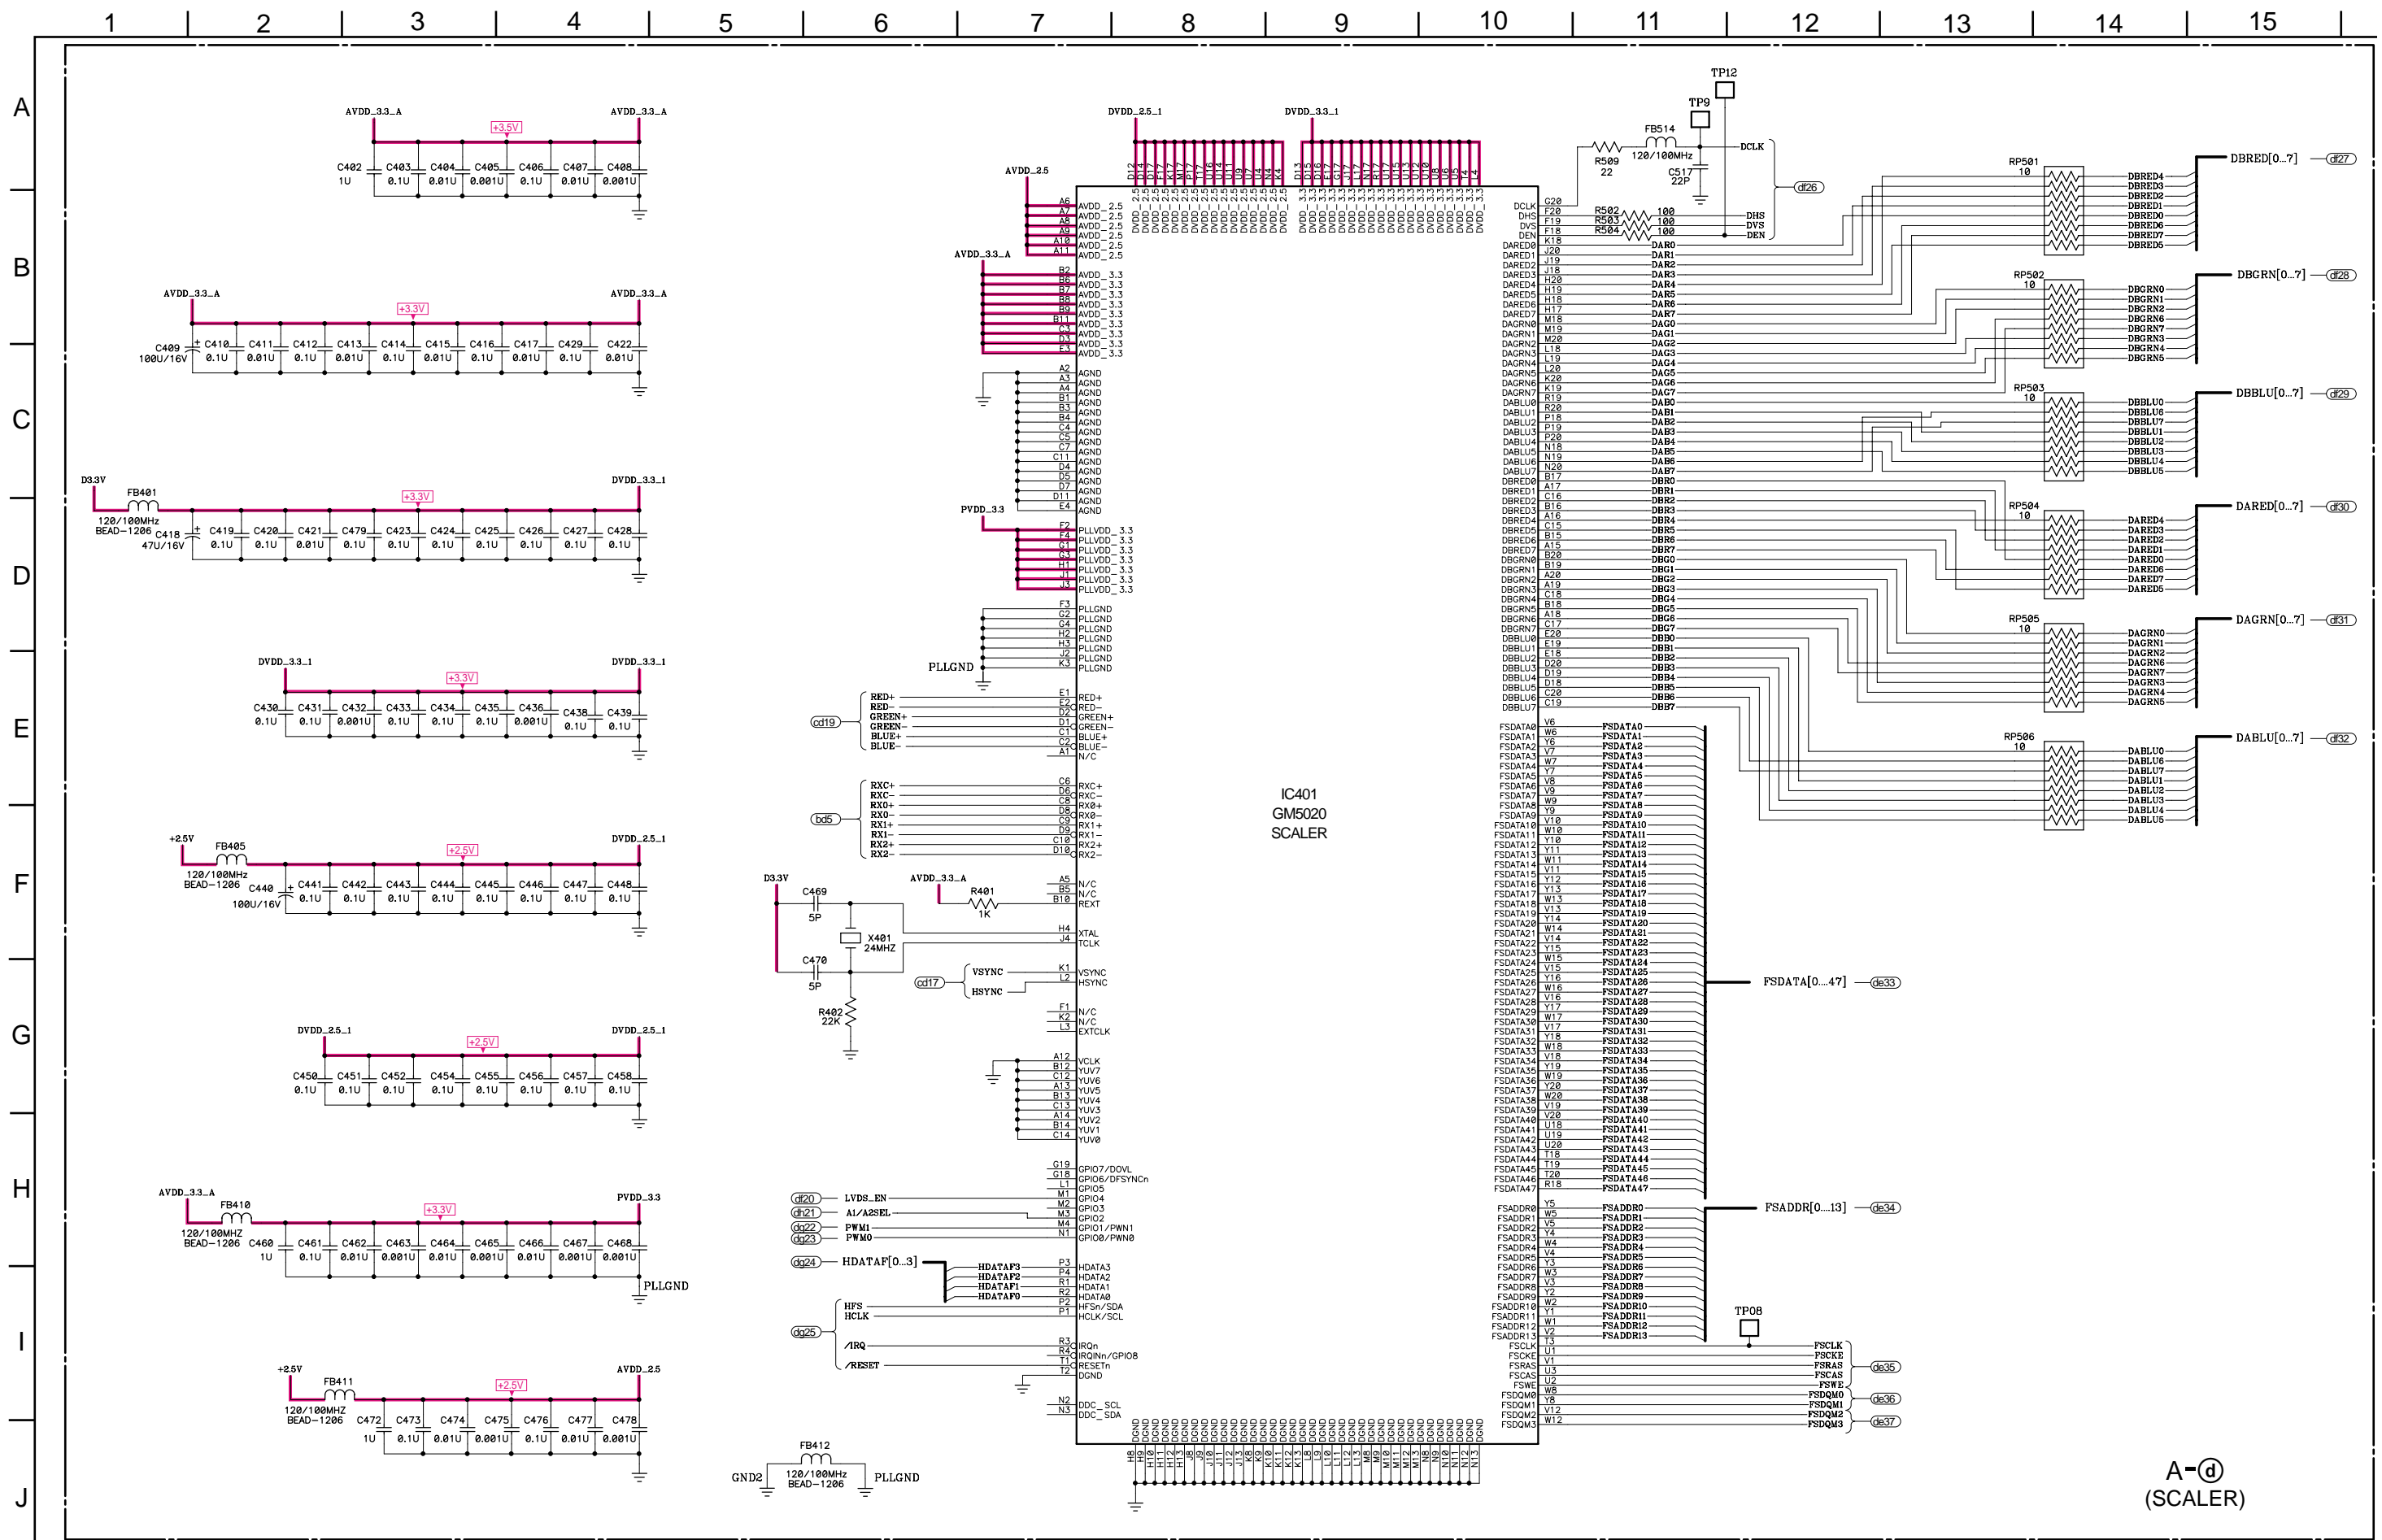

A-ⓐ
(SCALER)

• Divided circuit diagram
 One sheet of A board are circuit diagram is divided into eight sheets, each having the code A-ⓐ to A-ⓓ. For example, the destination (ab1) on the code A-ⓐ sheet is connected to (ab1) on the A-ⓓ sheet.

a b 1
 Ref. No.
 Circuit diagram division code

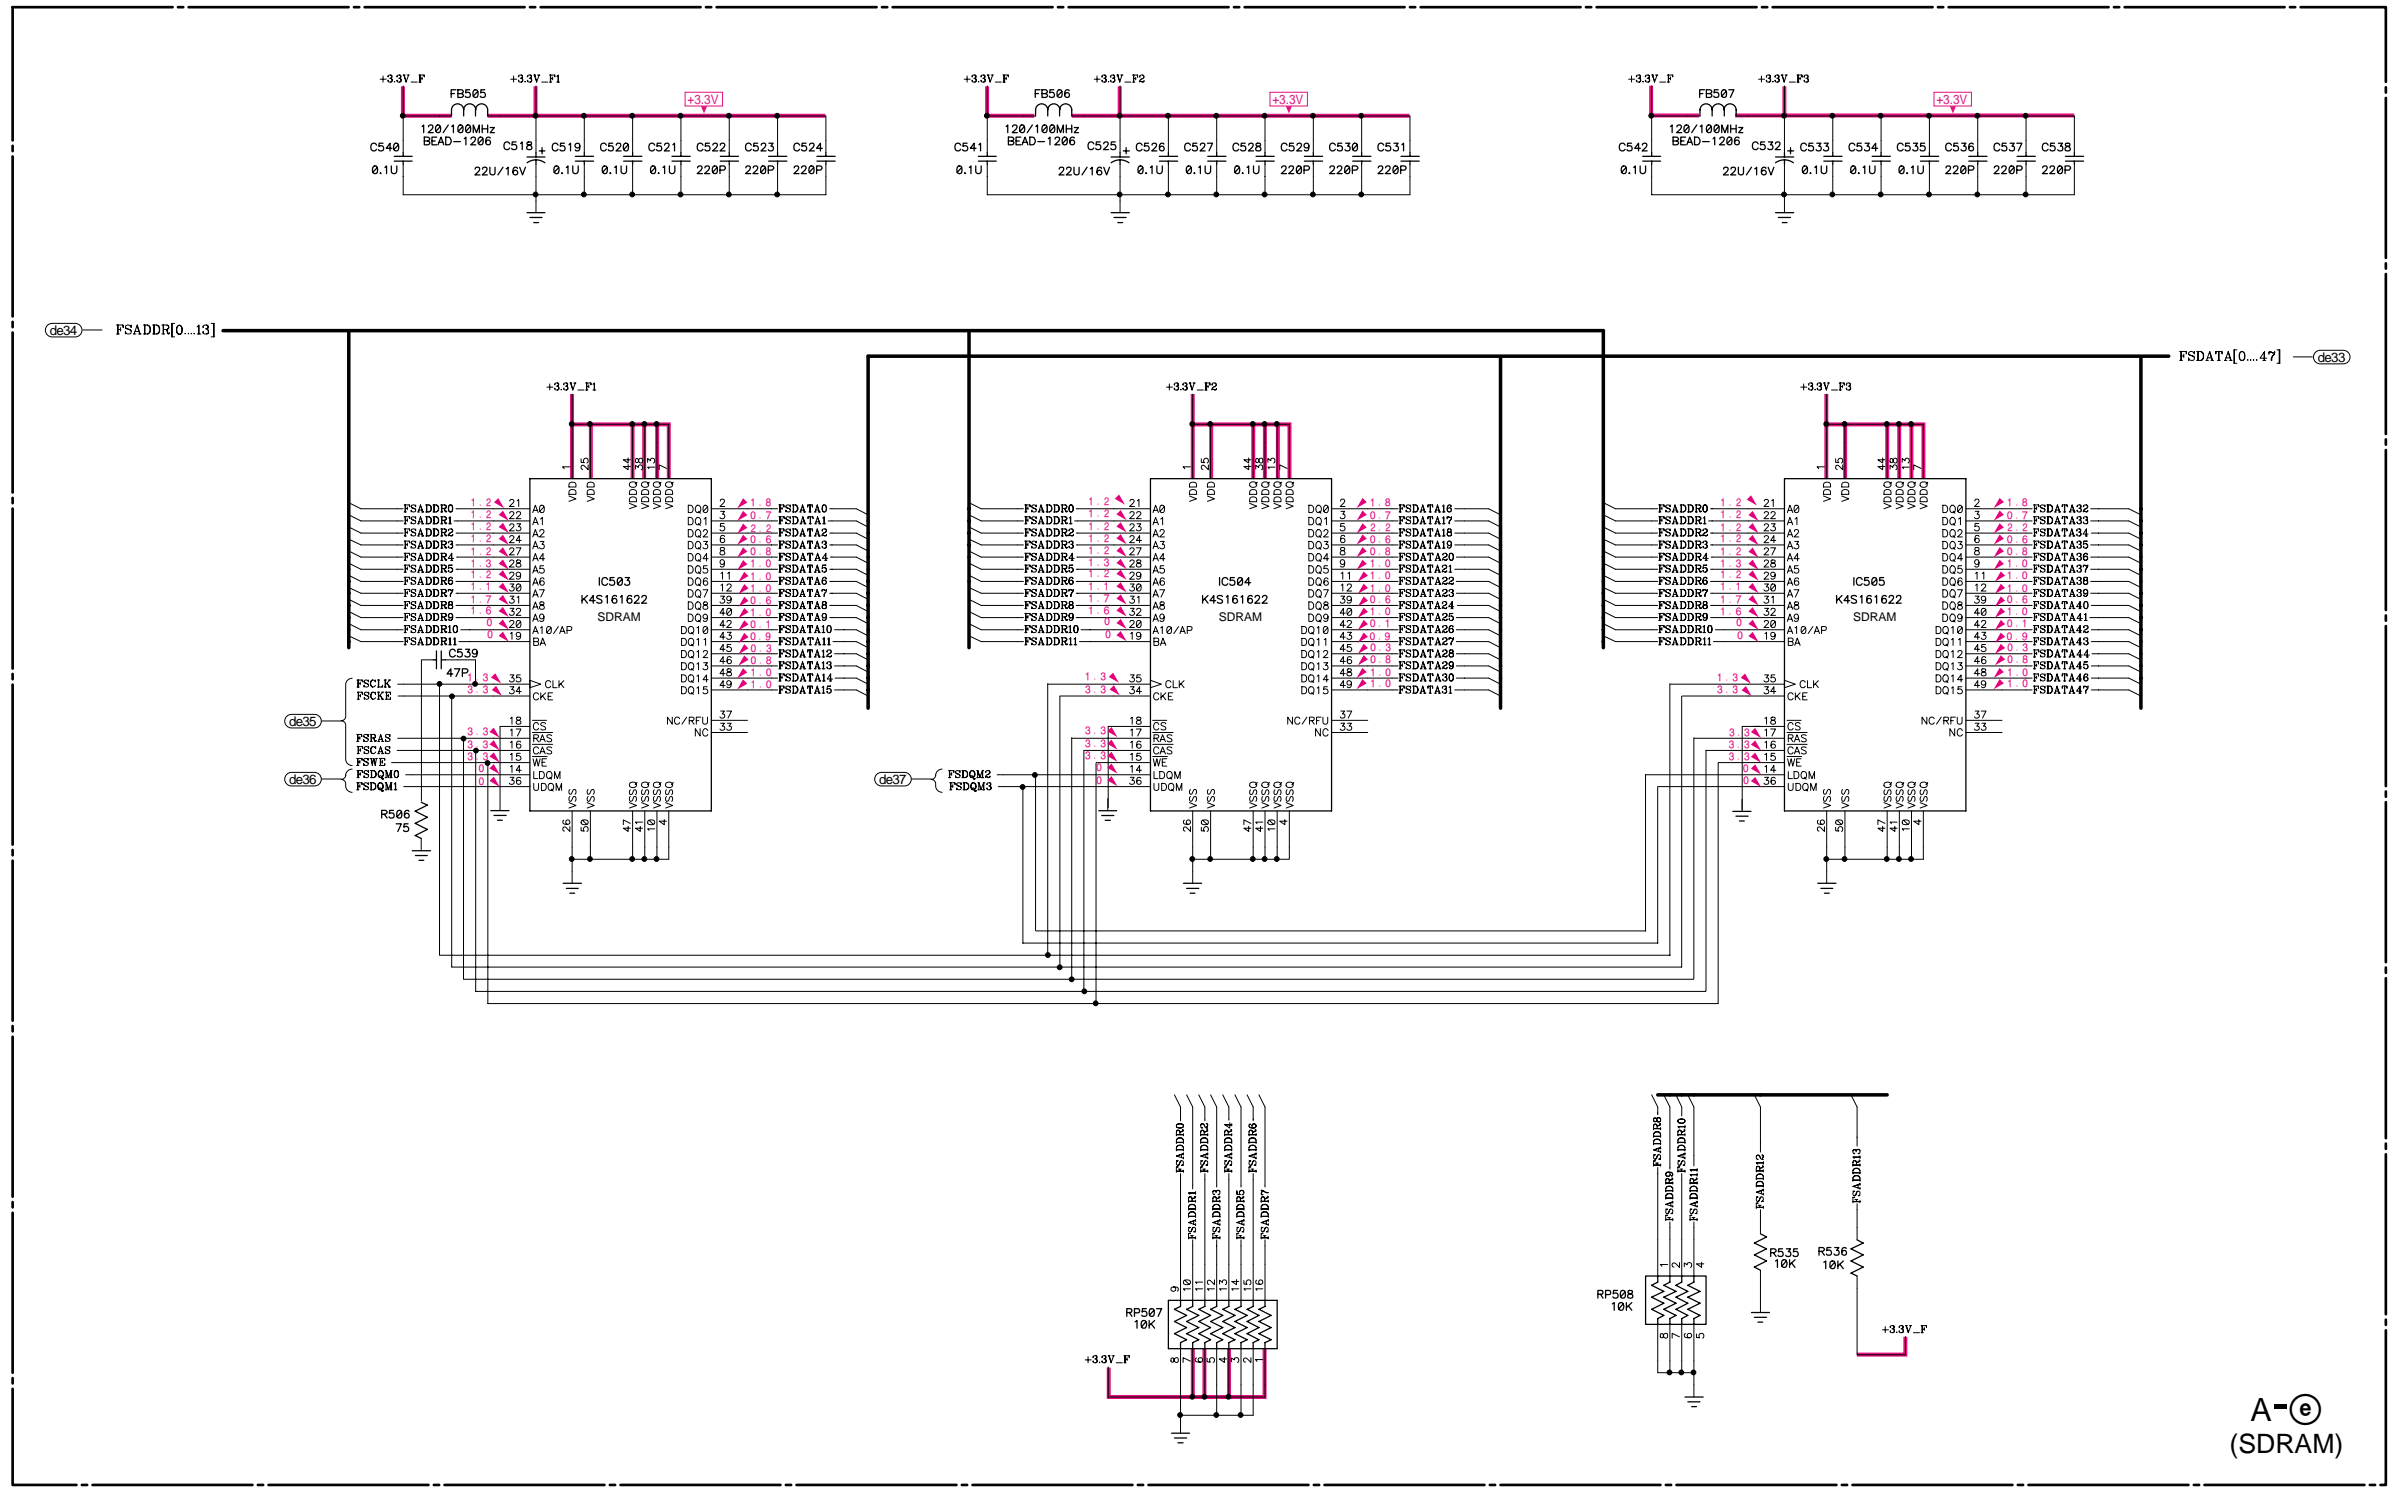


A-ⓐ
(SDRAM)

• Divided circuit diagram
 One sheet of A board circuit diagram is divided into eight sheets, each having the code A-ⓐ to A-ⓗ. For example, the destination (ab1) on the code A-ⓐ sheet is connected to (ab1) on the A-ⓑ sheet.

a b 1
 Ref. No.
 Circuit diagram division code

B-SS3627<J...>-A..-P5

	X82,P82	X72
L205	0	X
L204	X	0

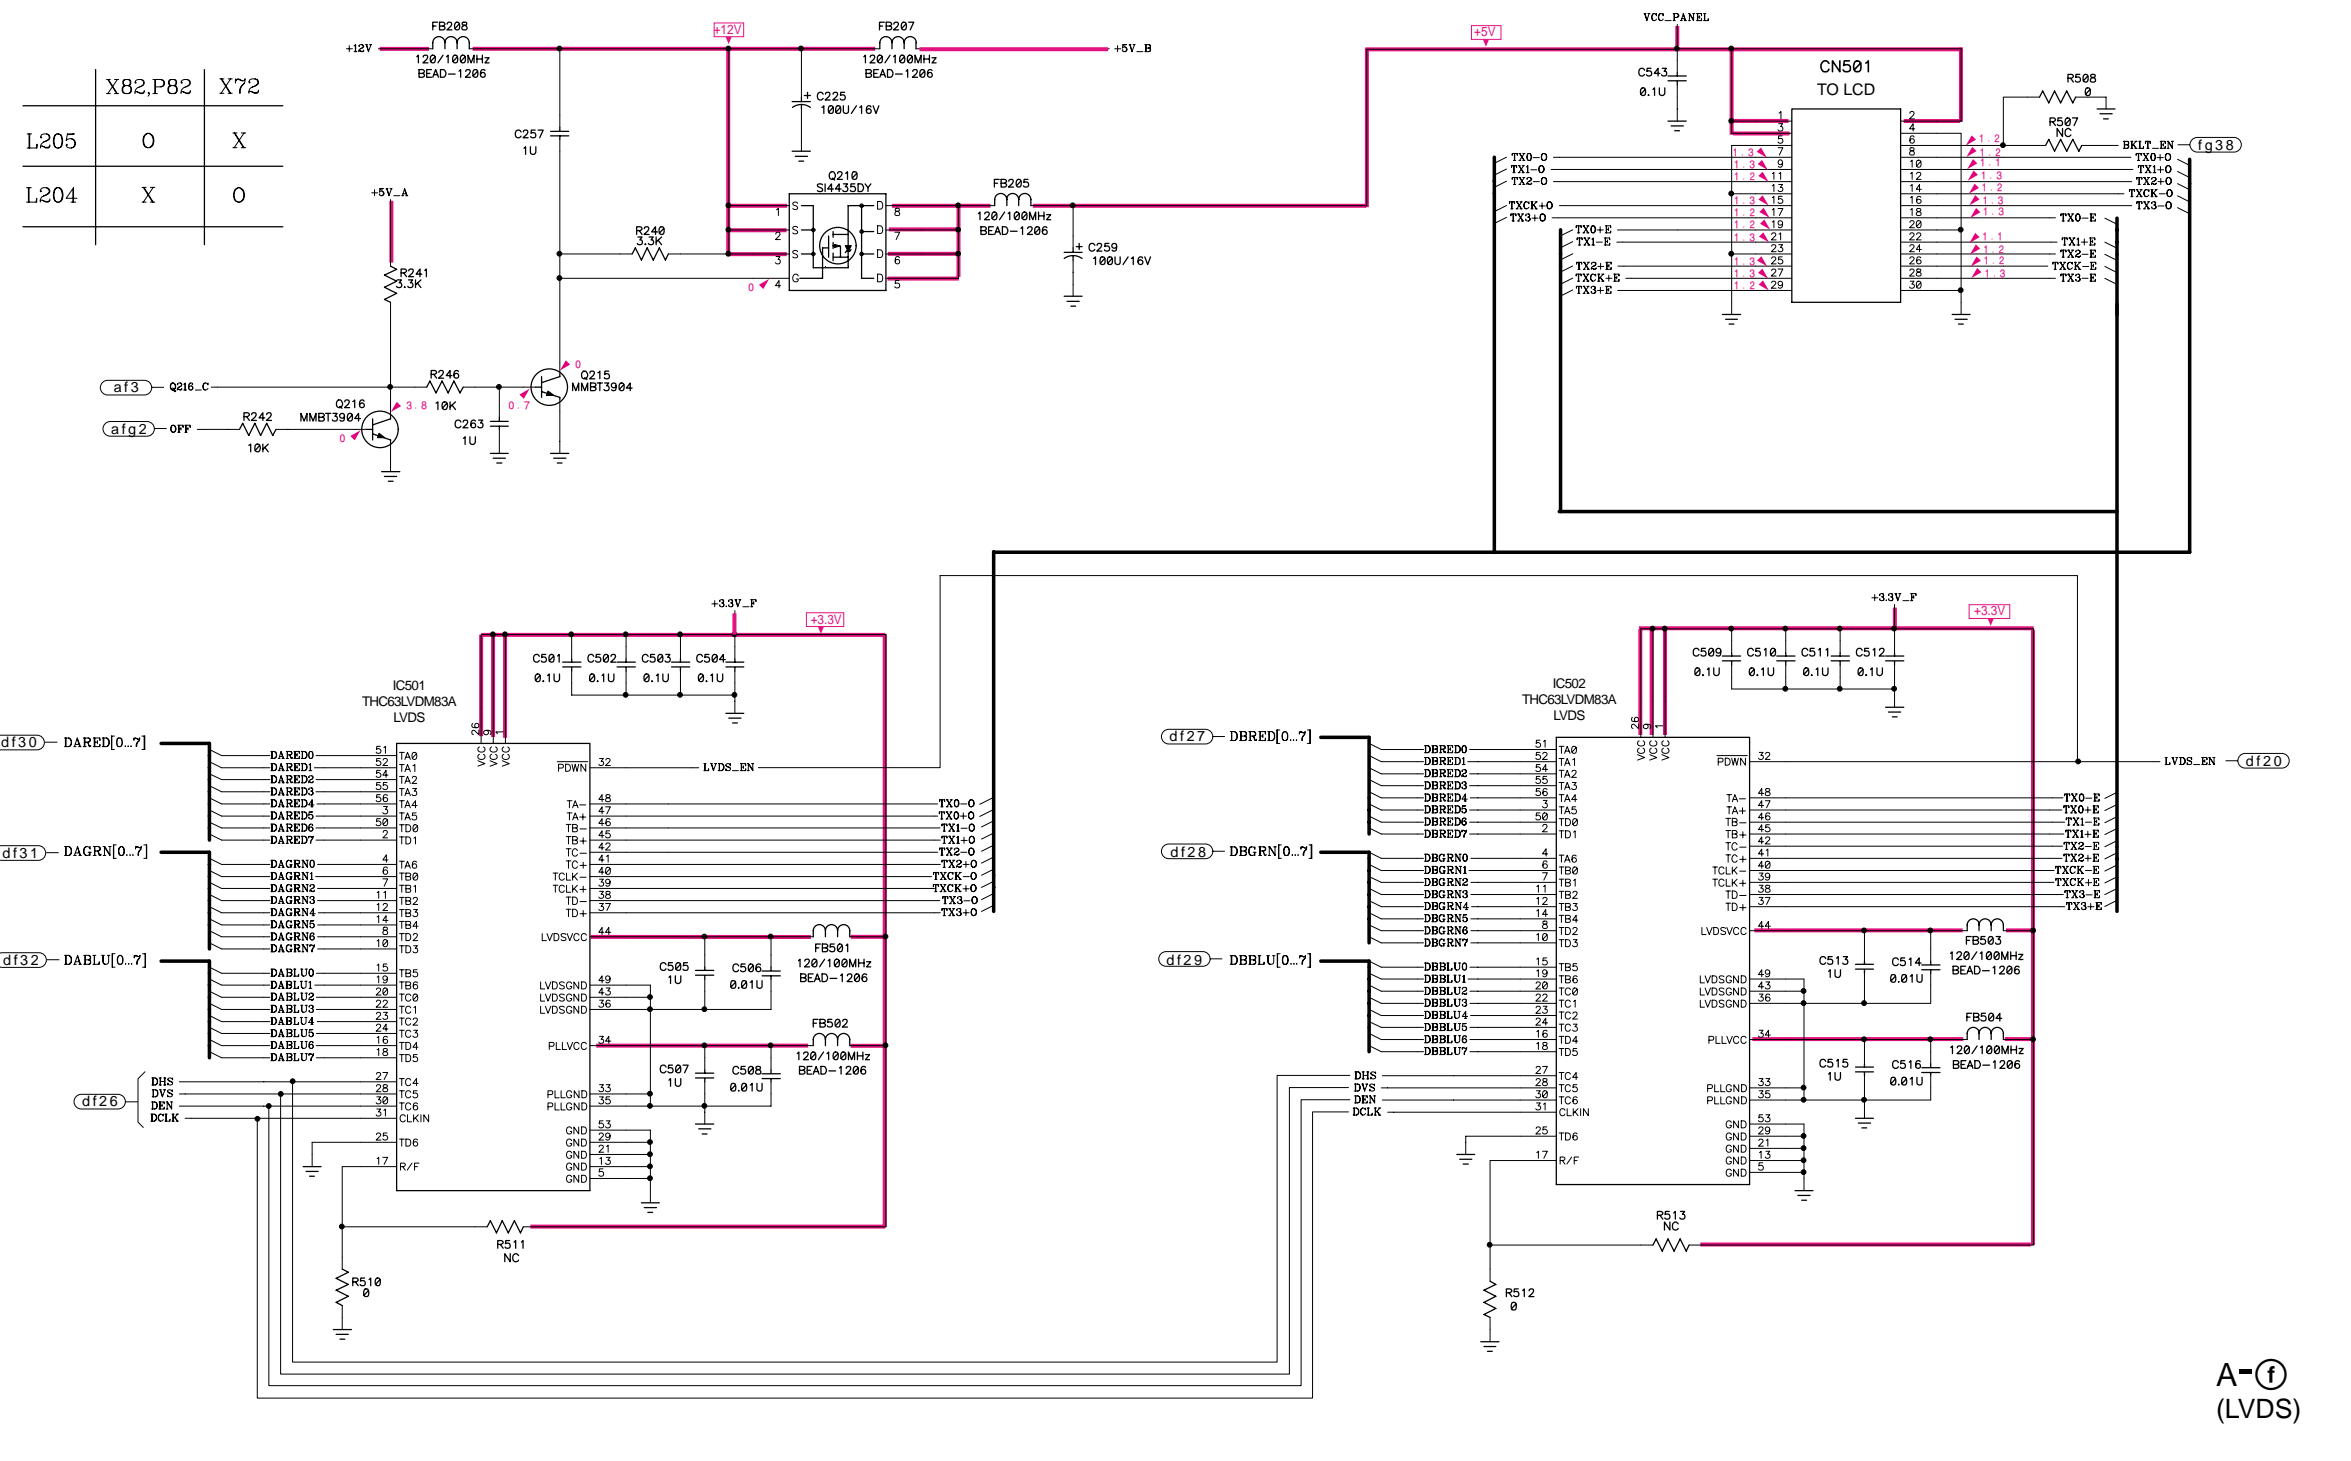


A-ⓐ (LVDS)


B-SS3627<J>A...P6

• Divided circuit diagram
 One sheet of A board are circuit diagram is divided into eight sheets, each having the code A-ⓐ to A-ⓗ. For example, the destination (ab1) on the code A-ⓐ sheet is connected to (ab1) on the A-ⓑ sheet.


a b 1
 Ref. No.
 Circuit diagram division code

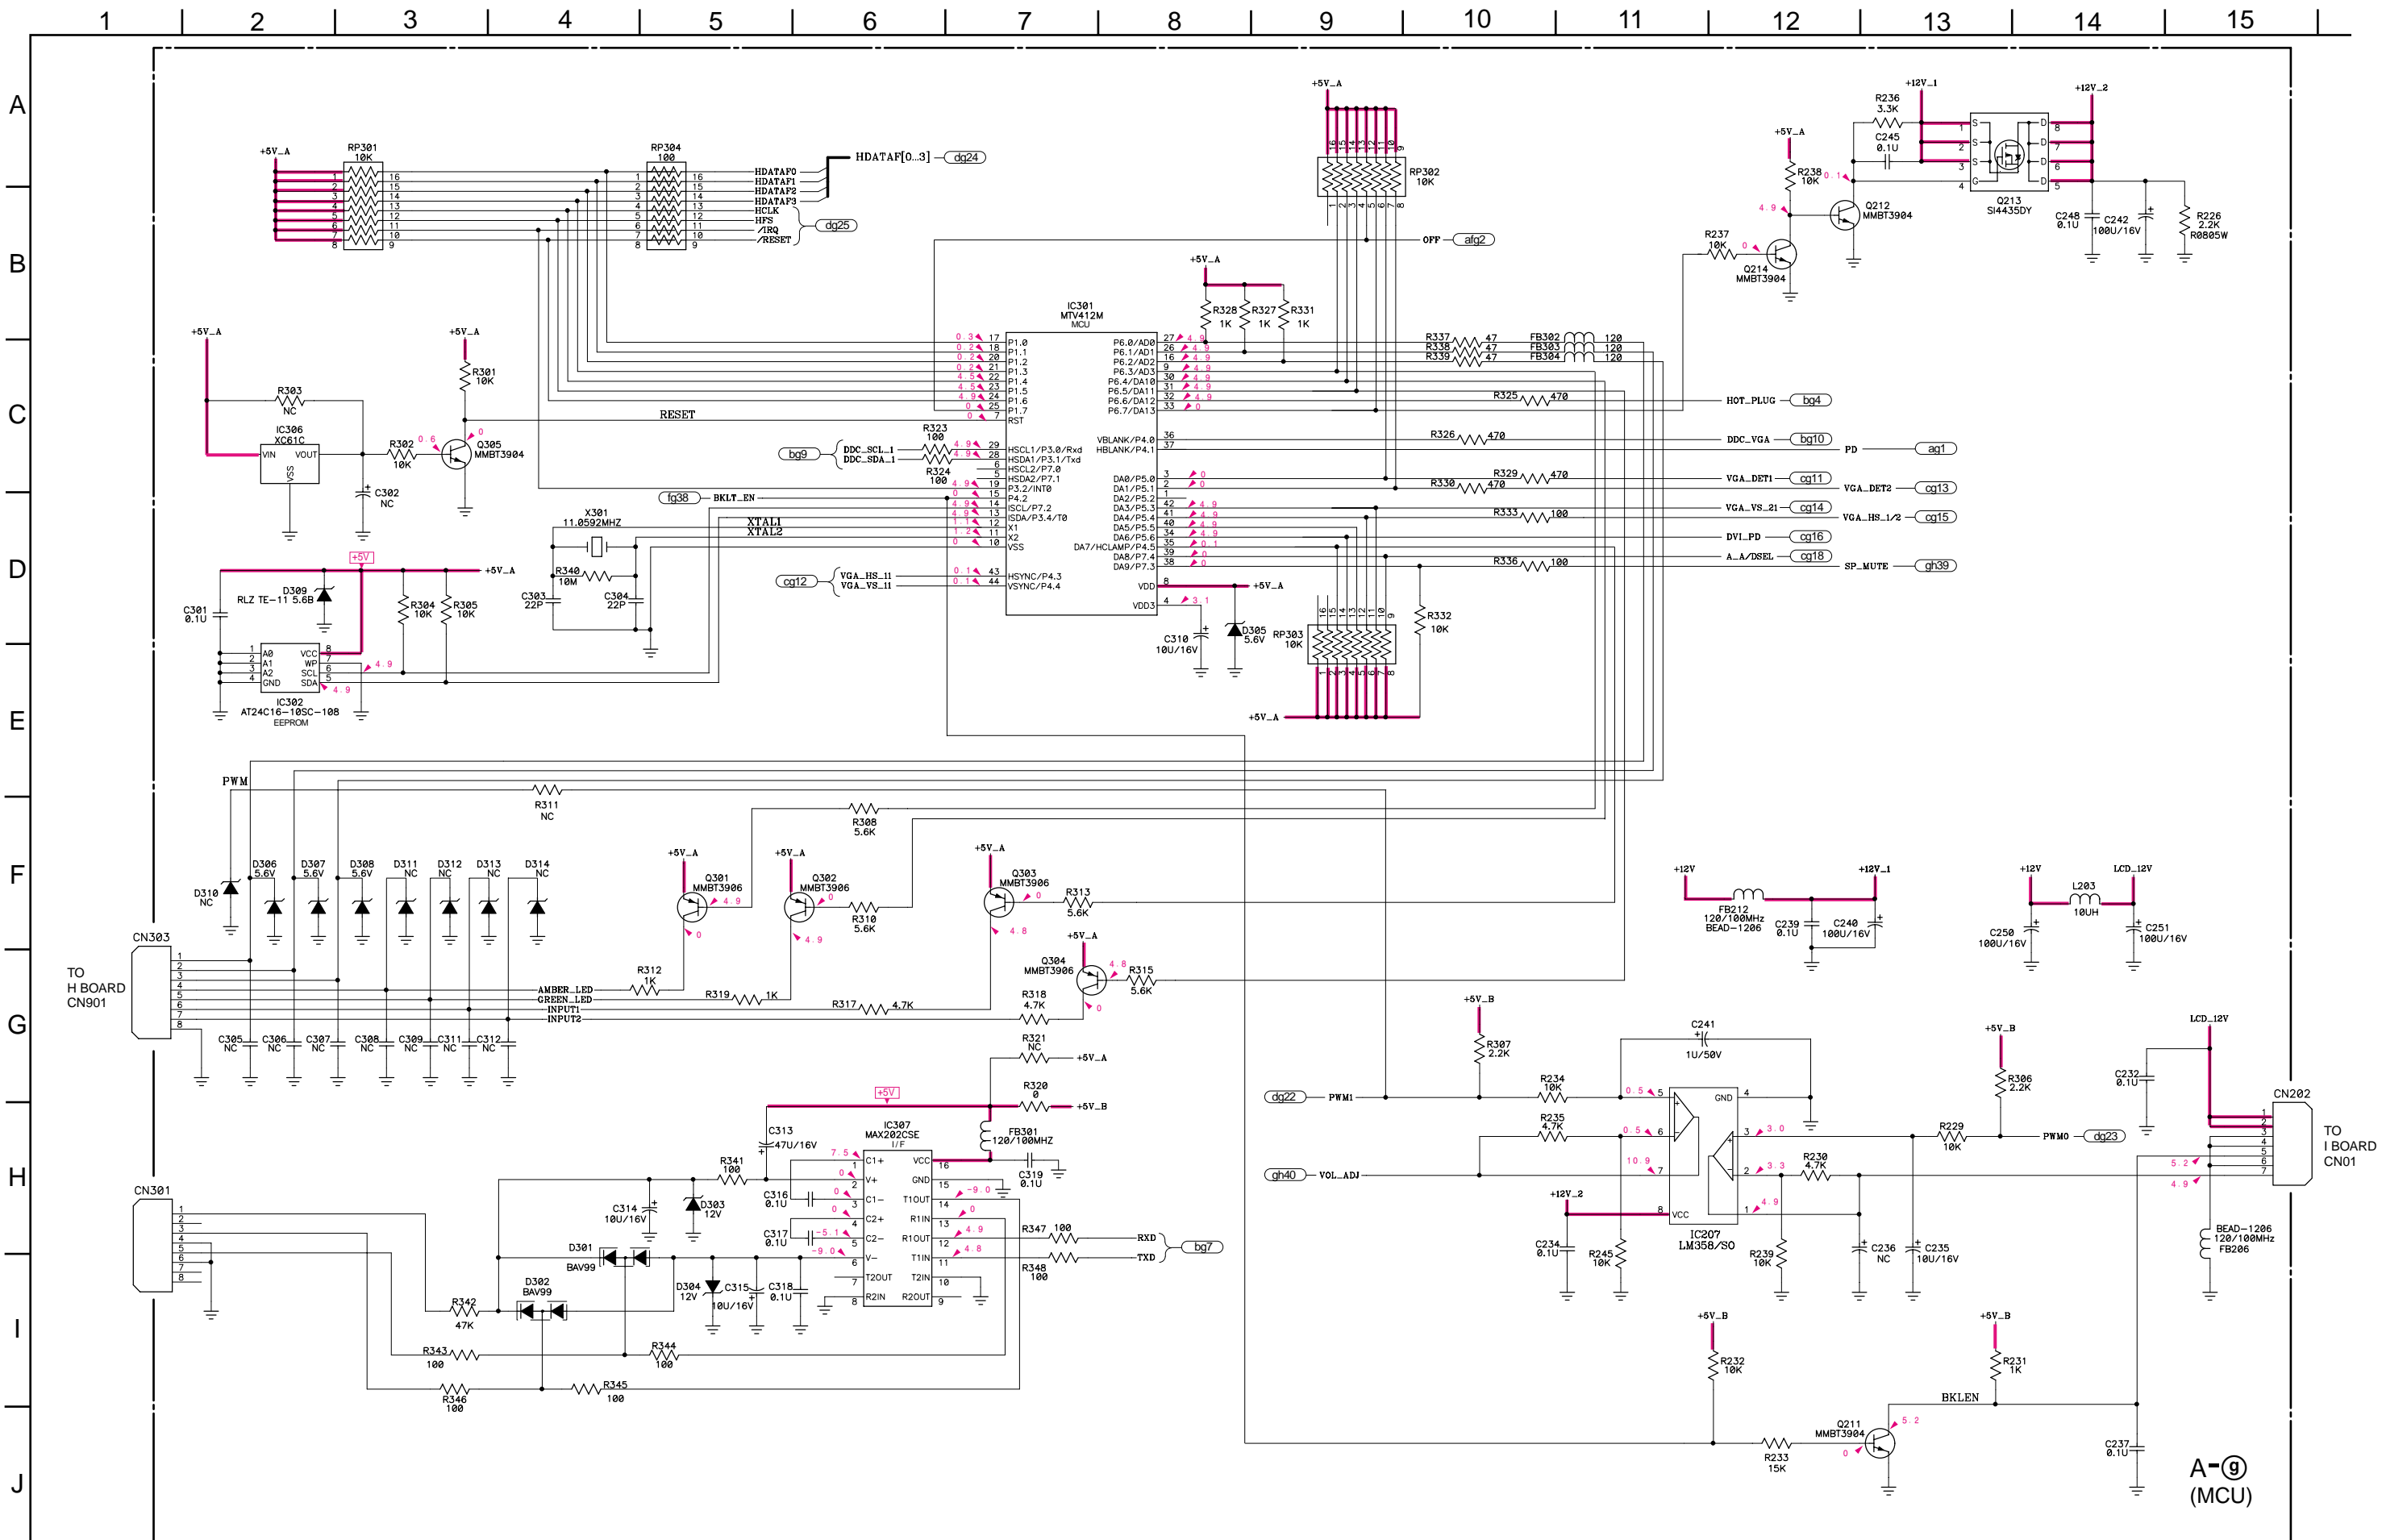

• Divided circuit diagram
 One sheet of A board circuit diagram is divided into eight sheets, each having the code A-Ⓐ to A-ⓓ. For example, the destination (ab1) on the code A-Ⓐ sheet is connected to (ab1) on the A-ⓓ sheet.



B-SS3627<J.> - A...P7

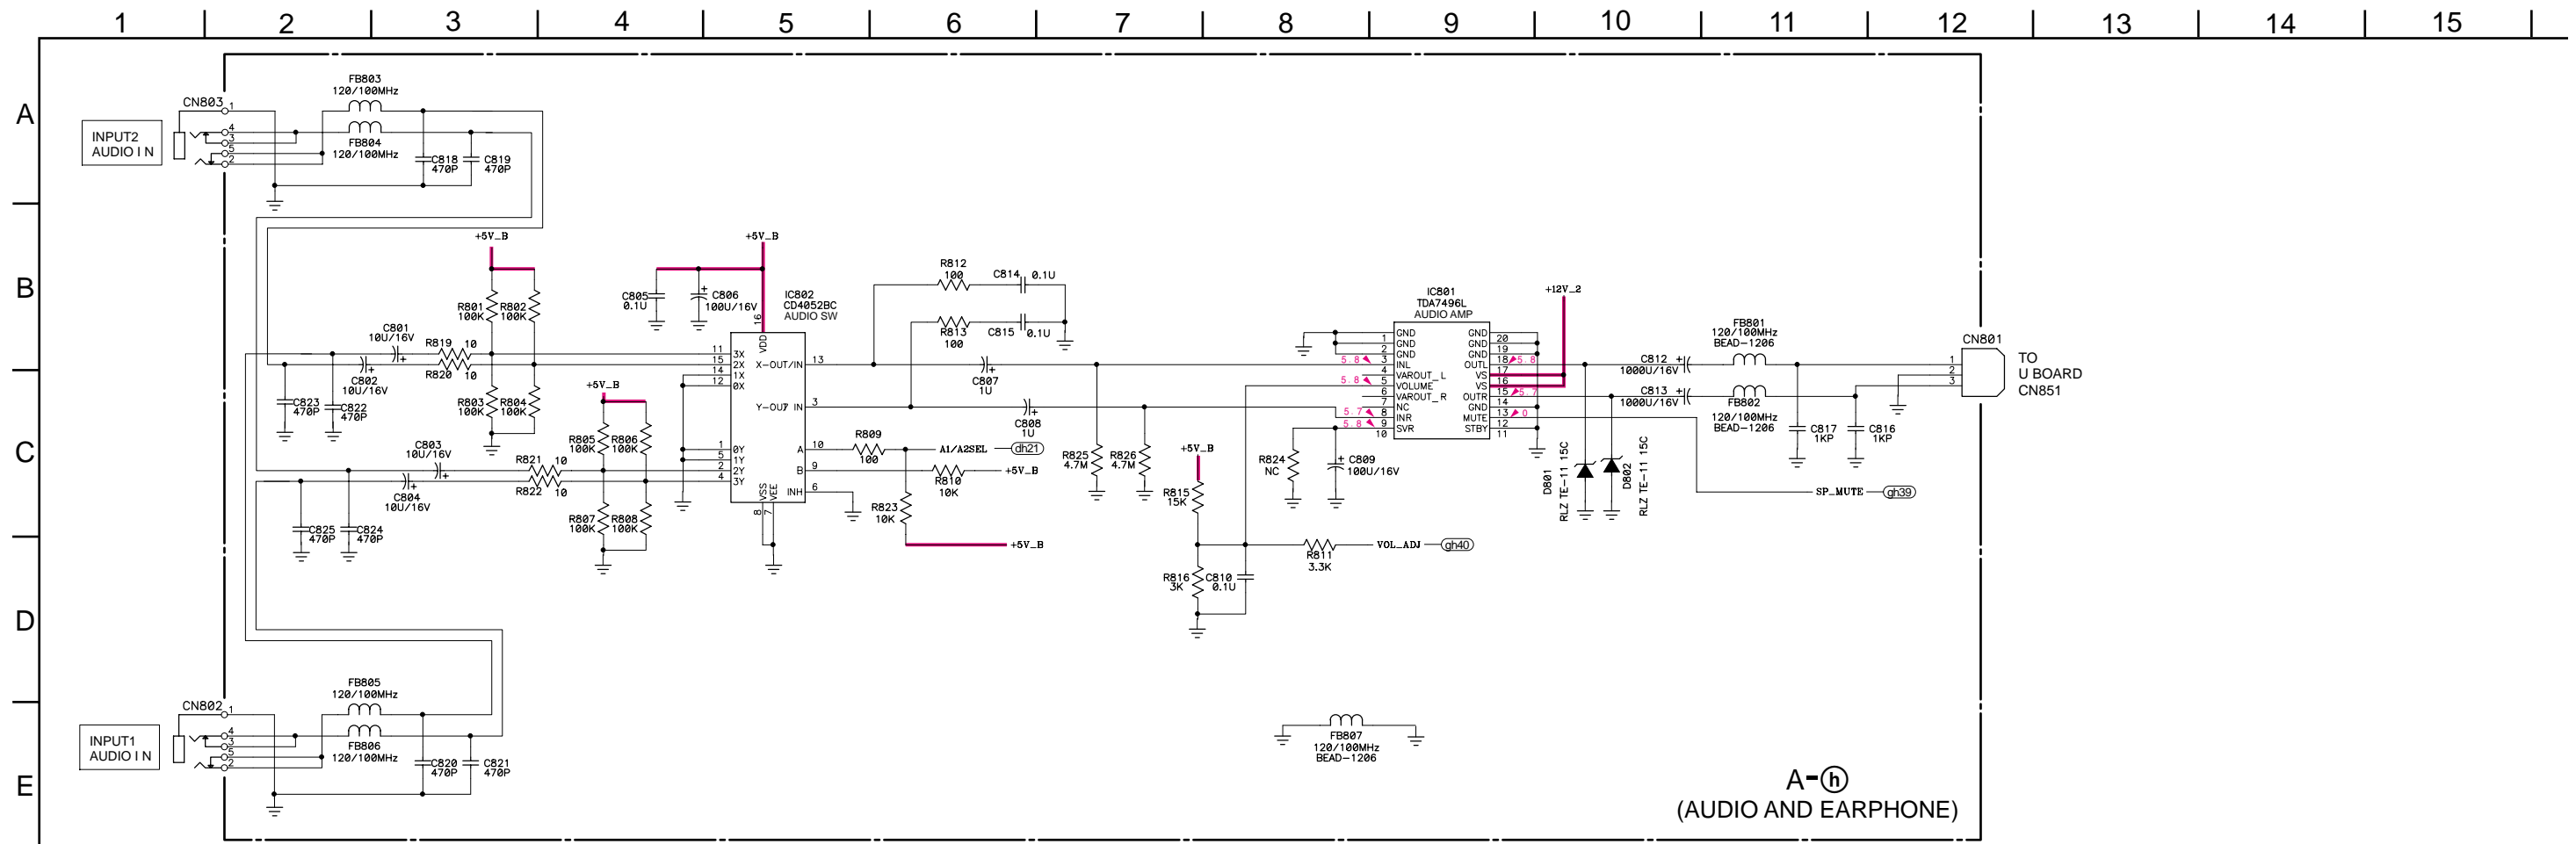


A-h
(AUDIO AND EARPHONE)

B-SS3627<J.> - A...P8


- Divided circuit diagram

One sheet of A board are circuit diagram is divided into eight sheets, each having the code A-**a** to A-**h**. For example, the destination **ab1** on the code A-**a** sheet is connected to **ab1** on the A-**b** sheet.




A [MAIN CPU,SYSTEM IC,COLOR DEC,A/D CONV,3D COMB FILTER]

— A BOARD —

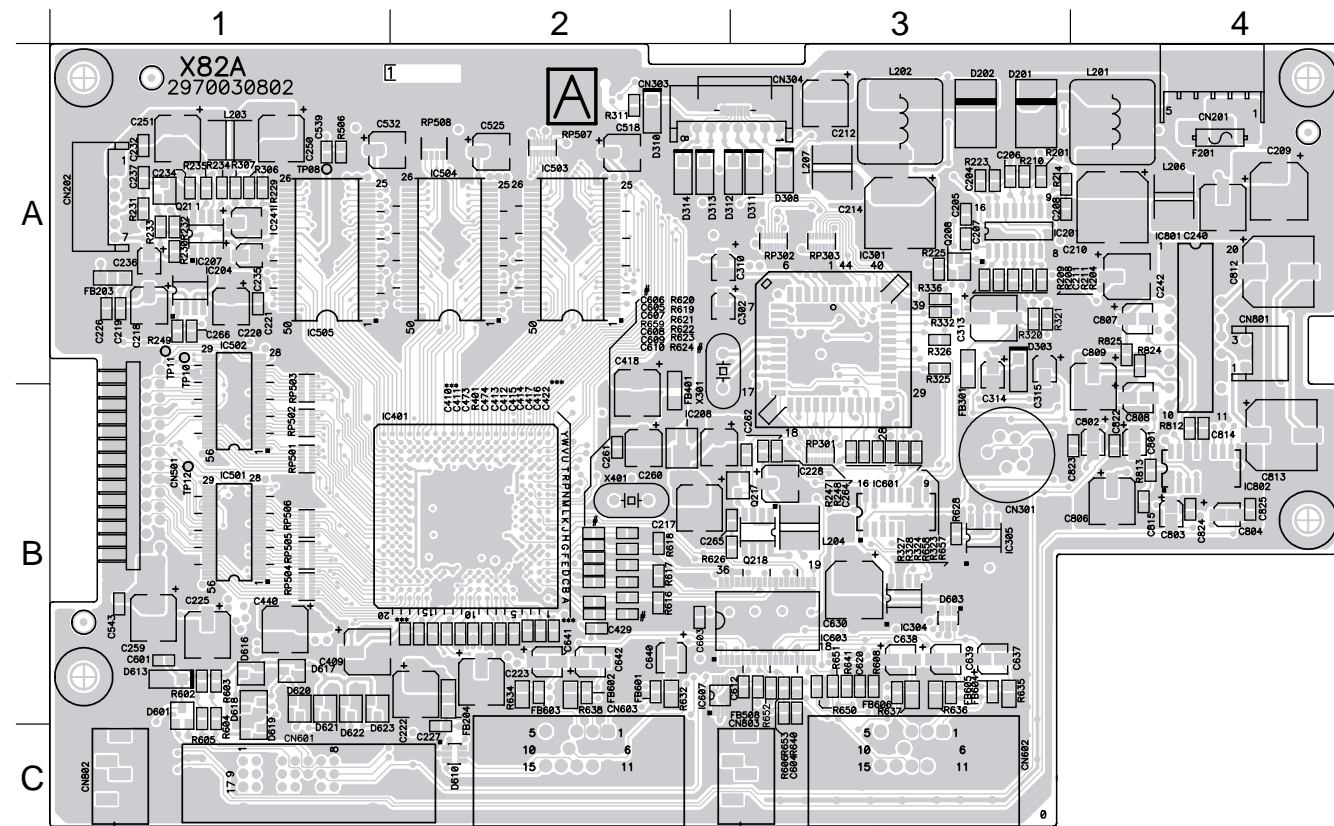


<COMPONENT SIDE>

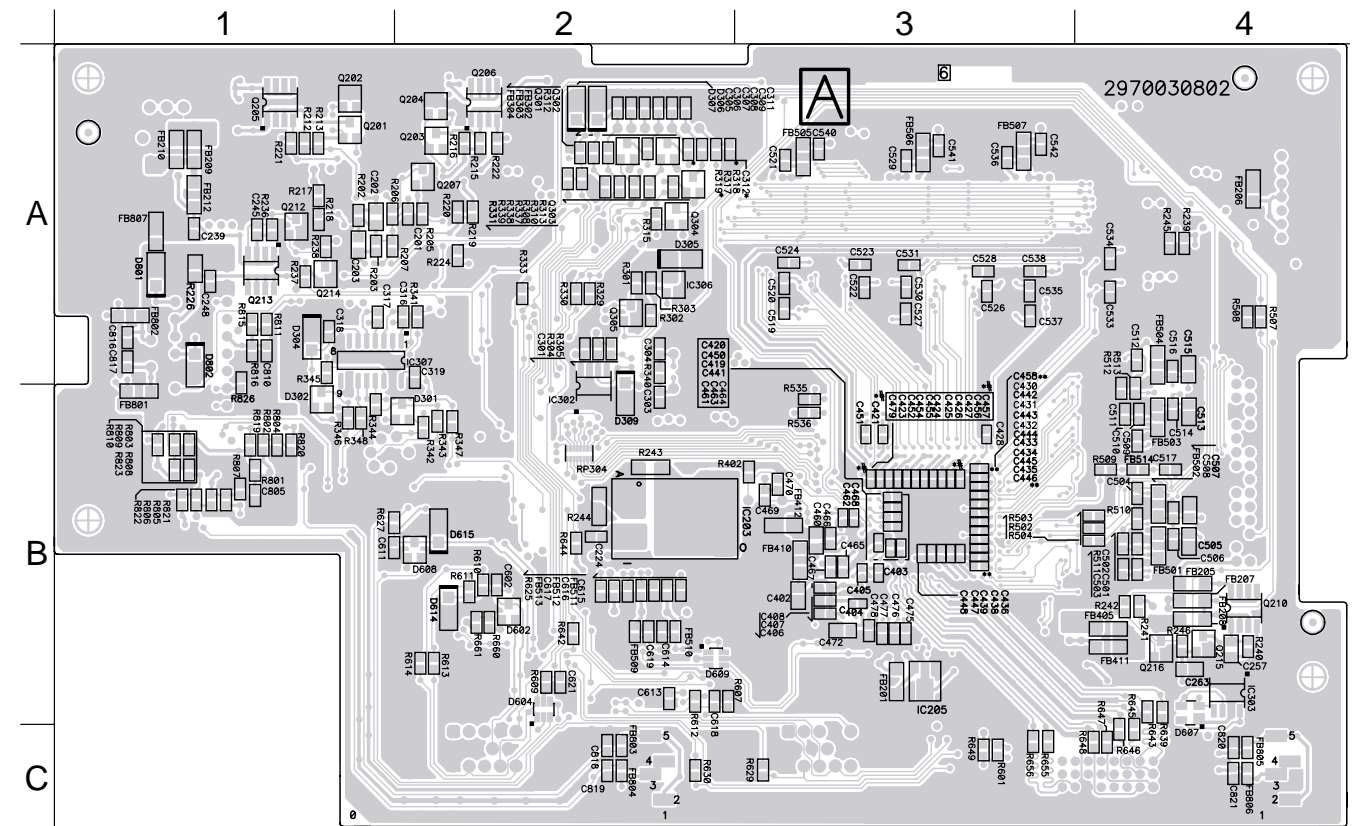

<CONDUCTOR SIDE>

(2) Schematic Diagram of H Board

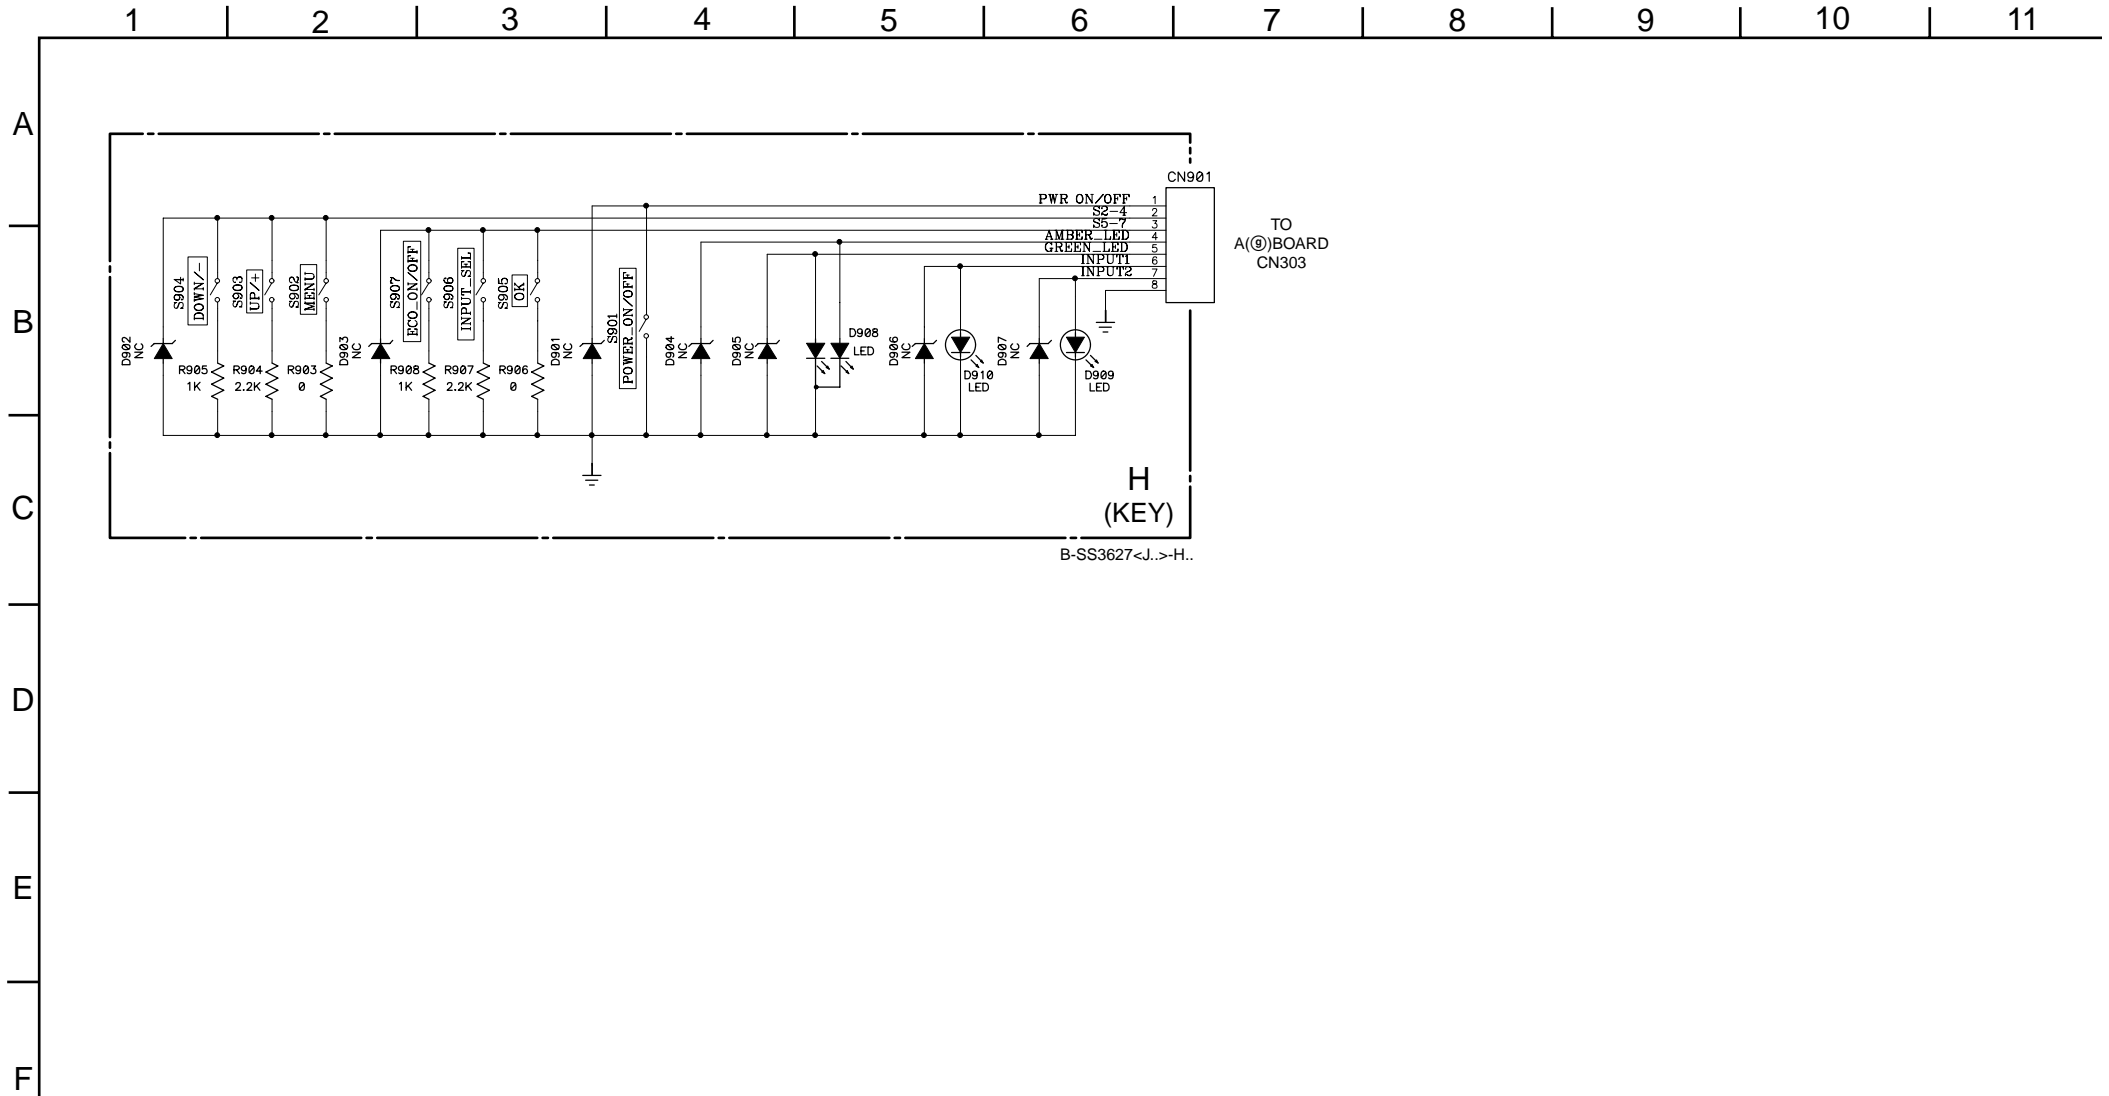


H [KEY]

— H BOARD —

<COMPONENT SIDE>


<CONDUCTOR SIDE>

(3) Schematic Diagrams of I Board

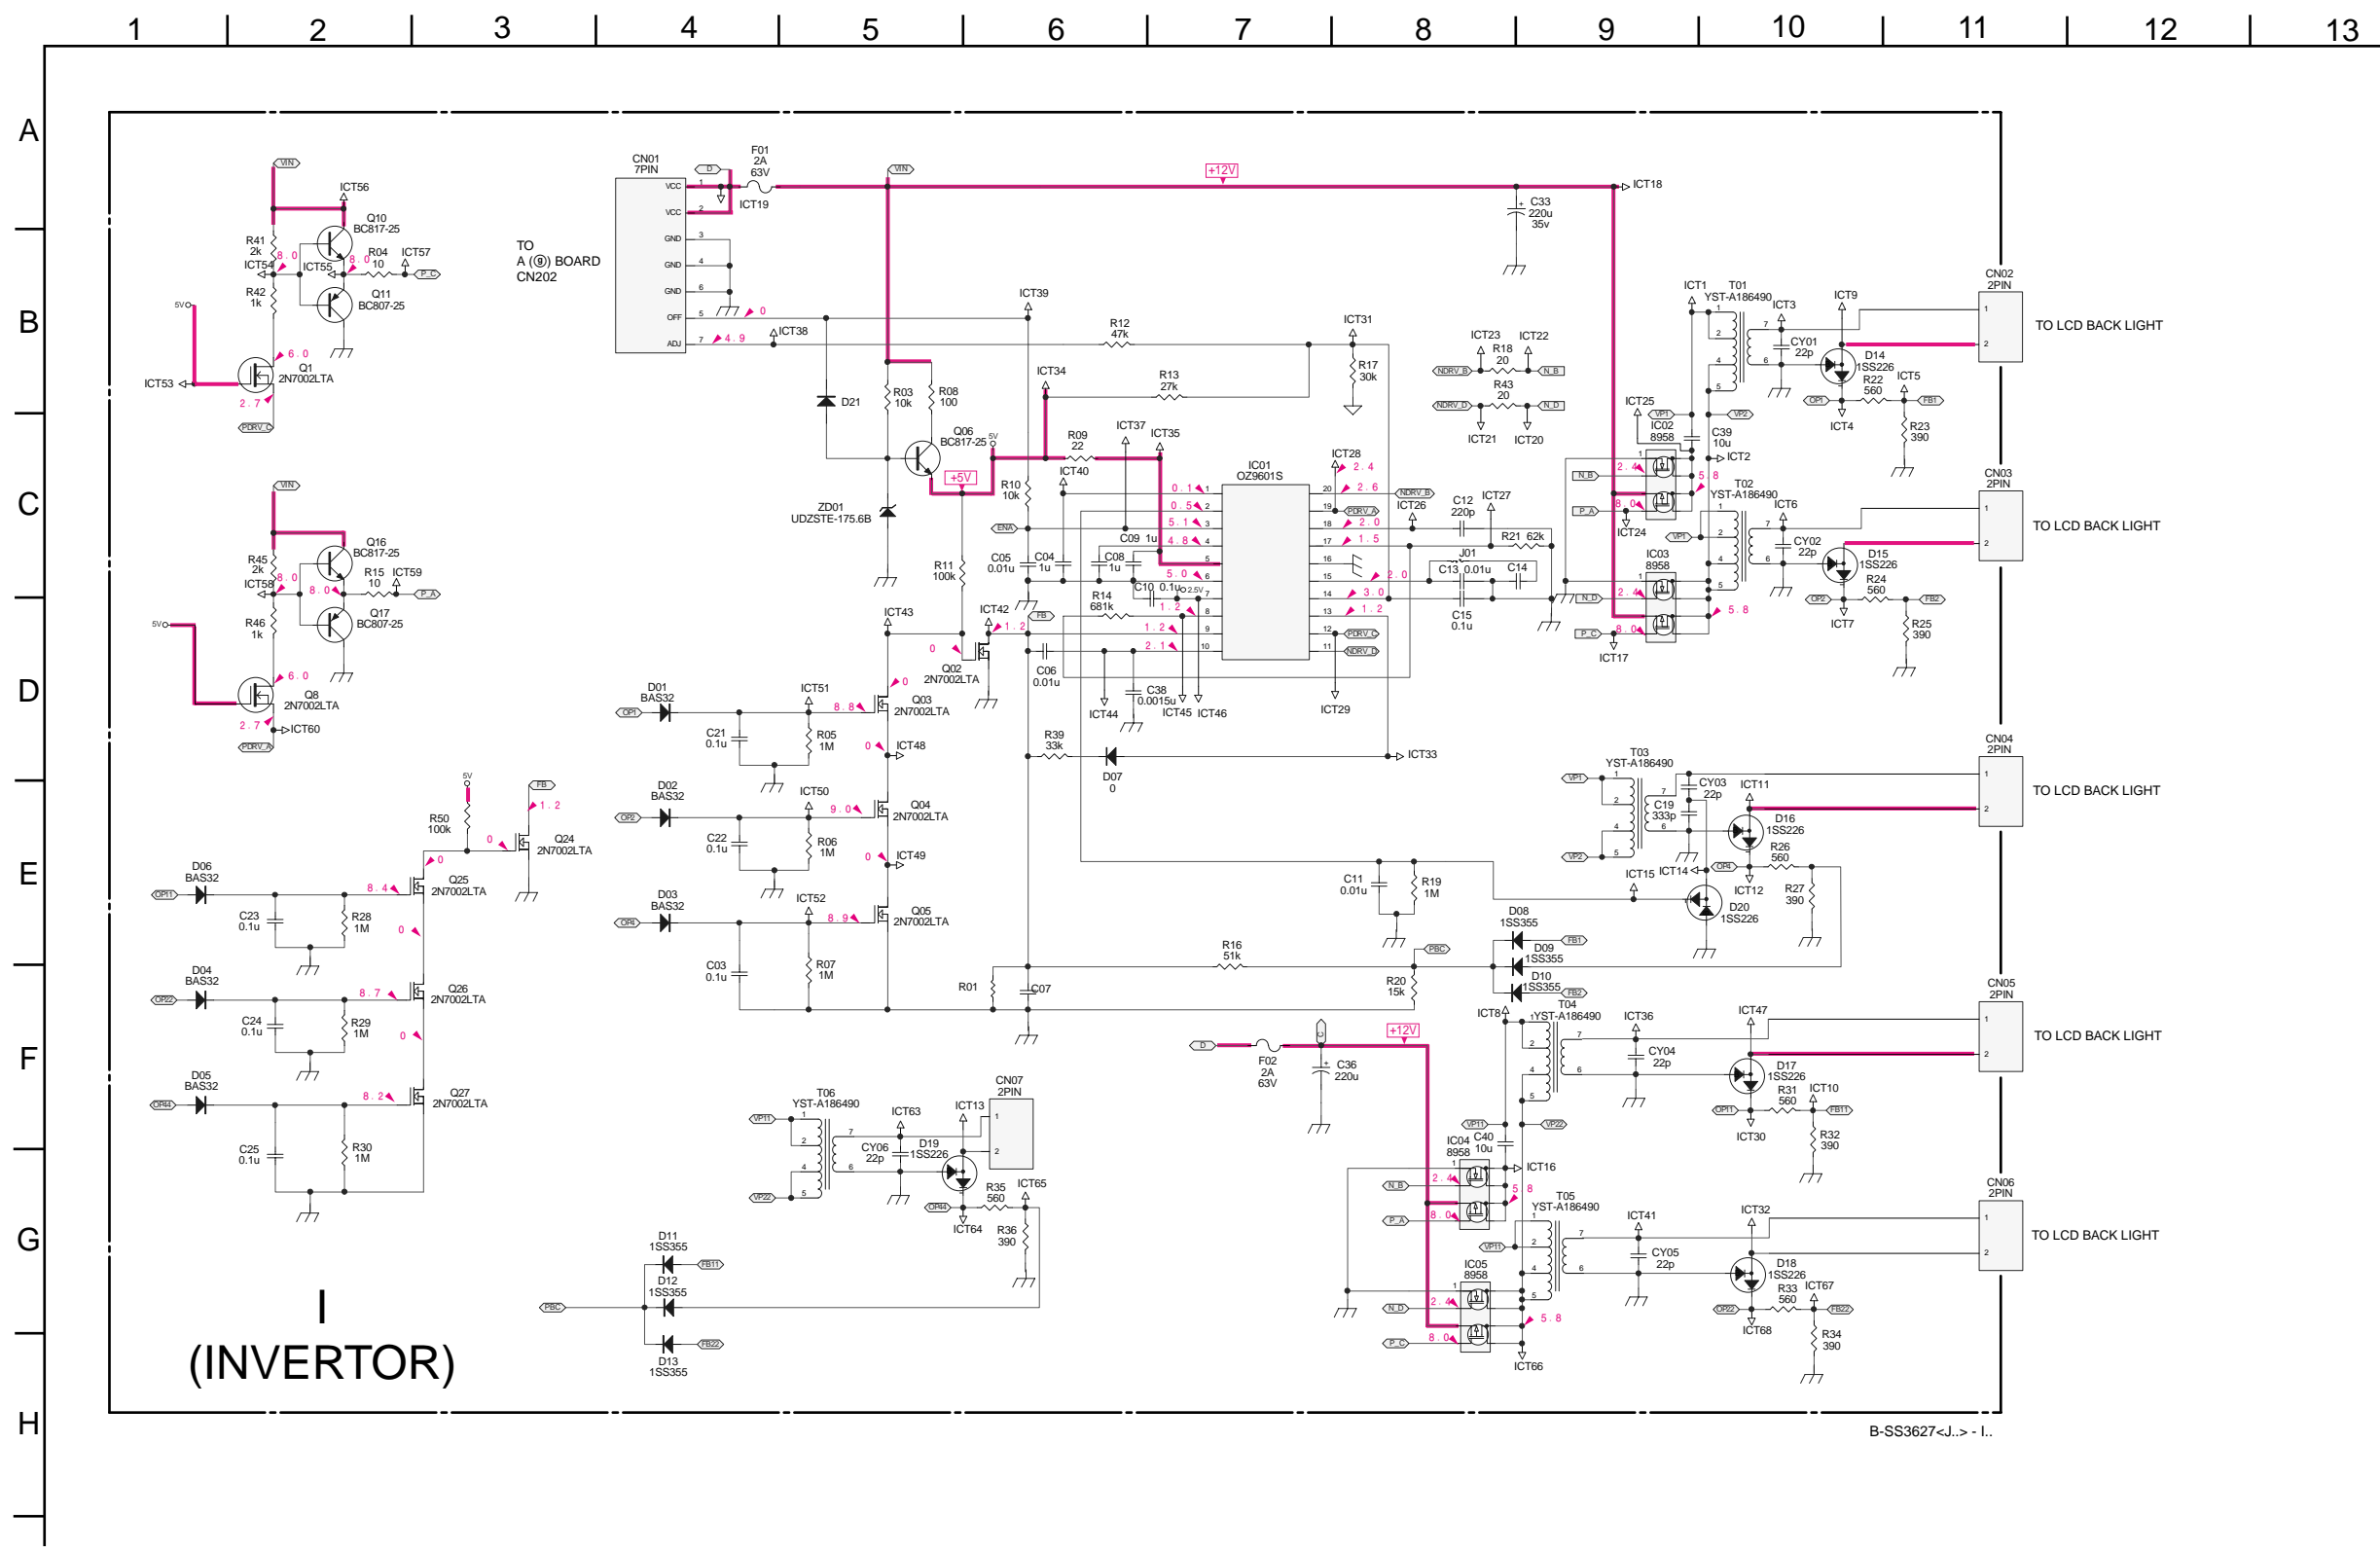


 [INVERTER]

— I BOARD —

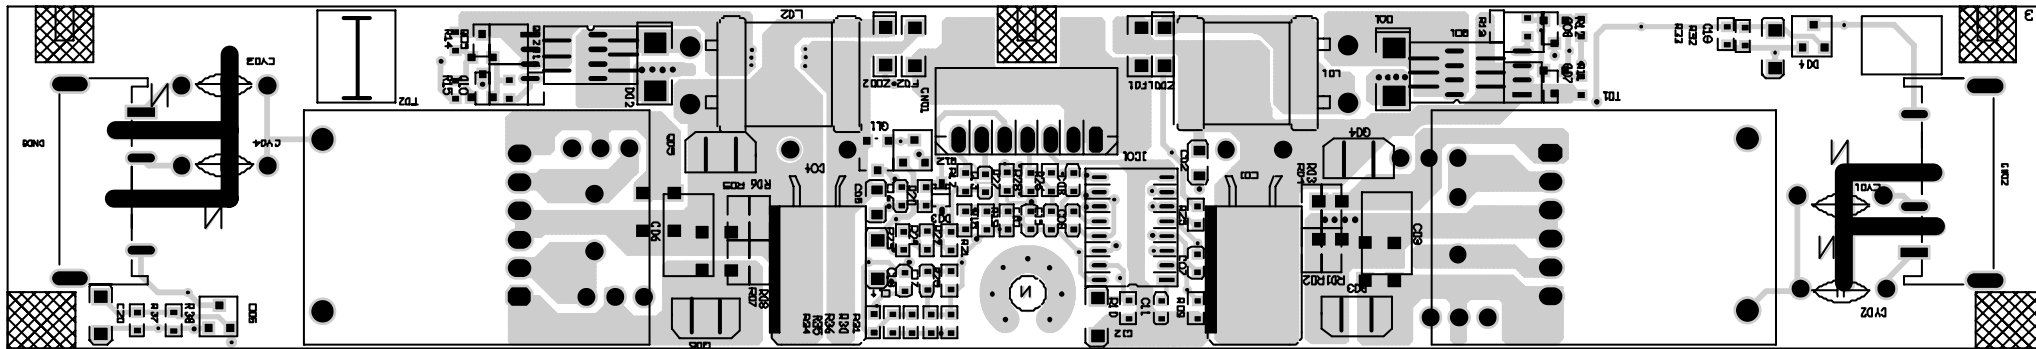


<COMPONENT SIDE>

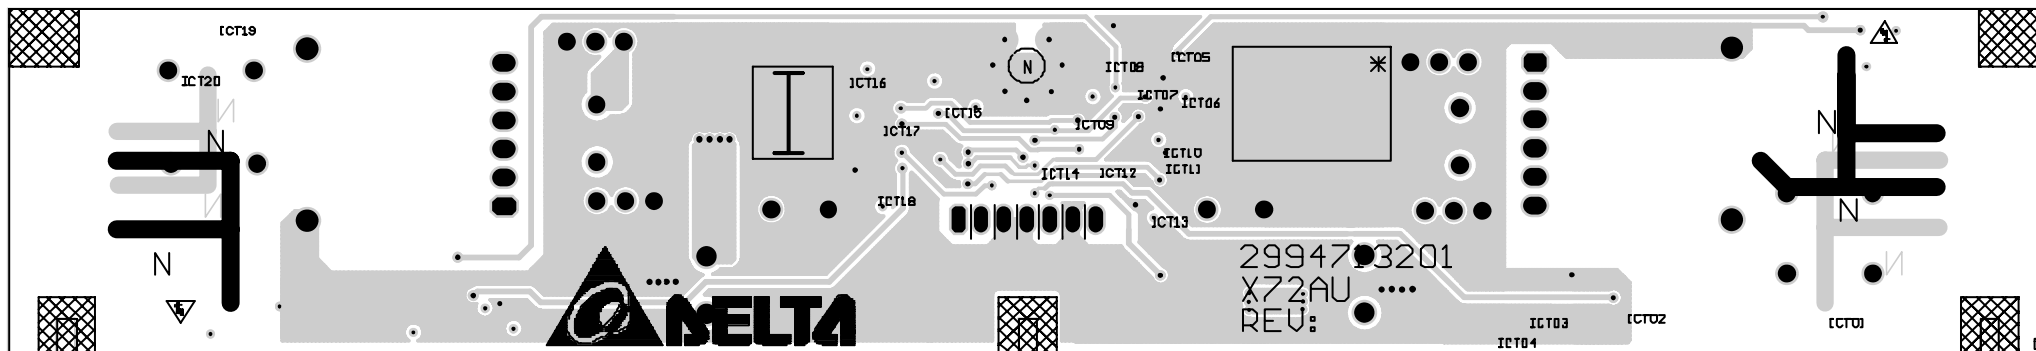


<CONDUCTOR SIDE>

(4) Schematic Diagram of U Board

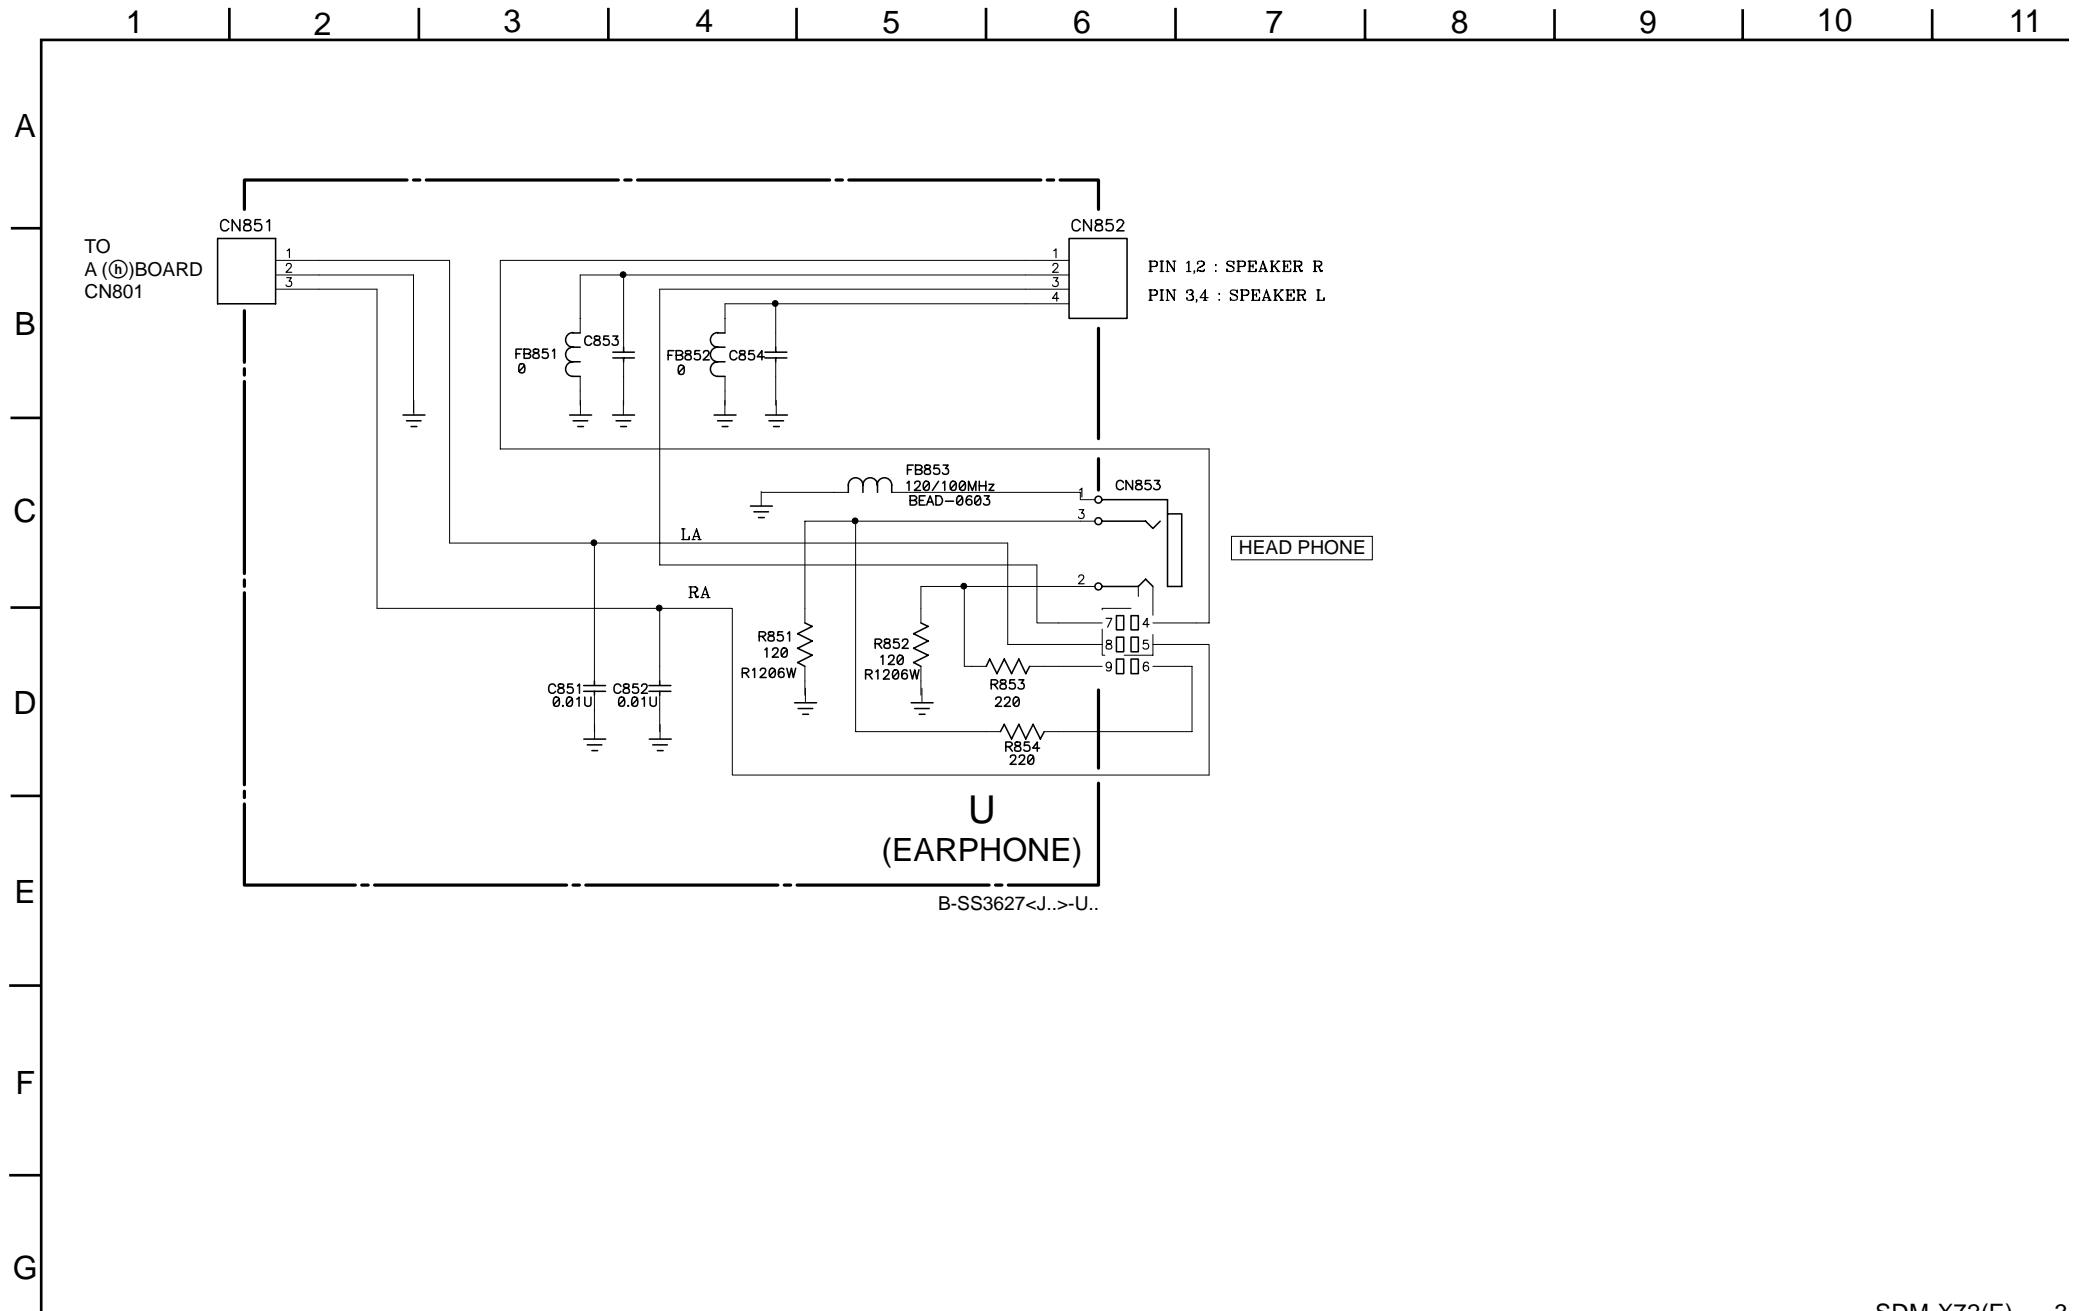


U [EARPHONE

— U BOARD —

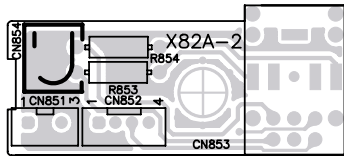


<COMPONENT SIDE>

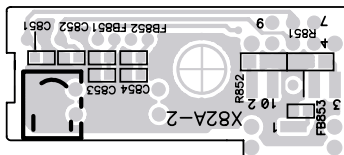

<CONDUCTOR SIDE>


(5) Schematic Diagrams of G Board

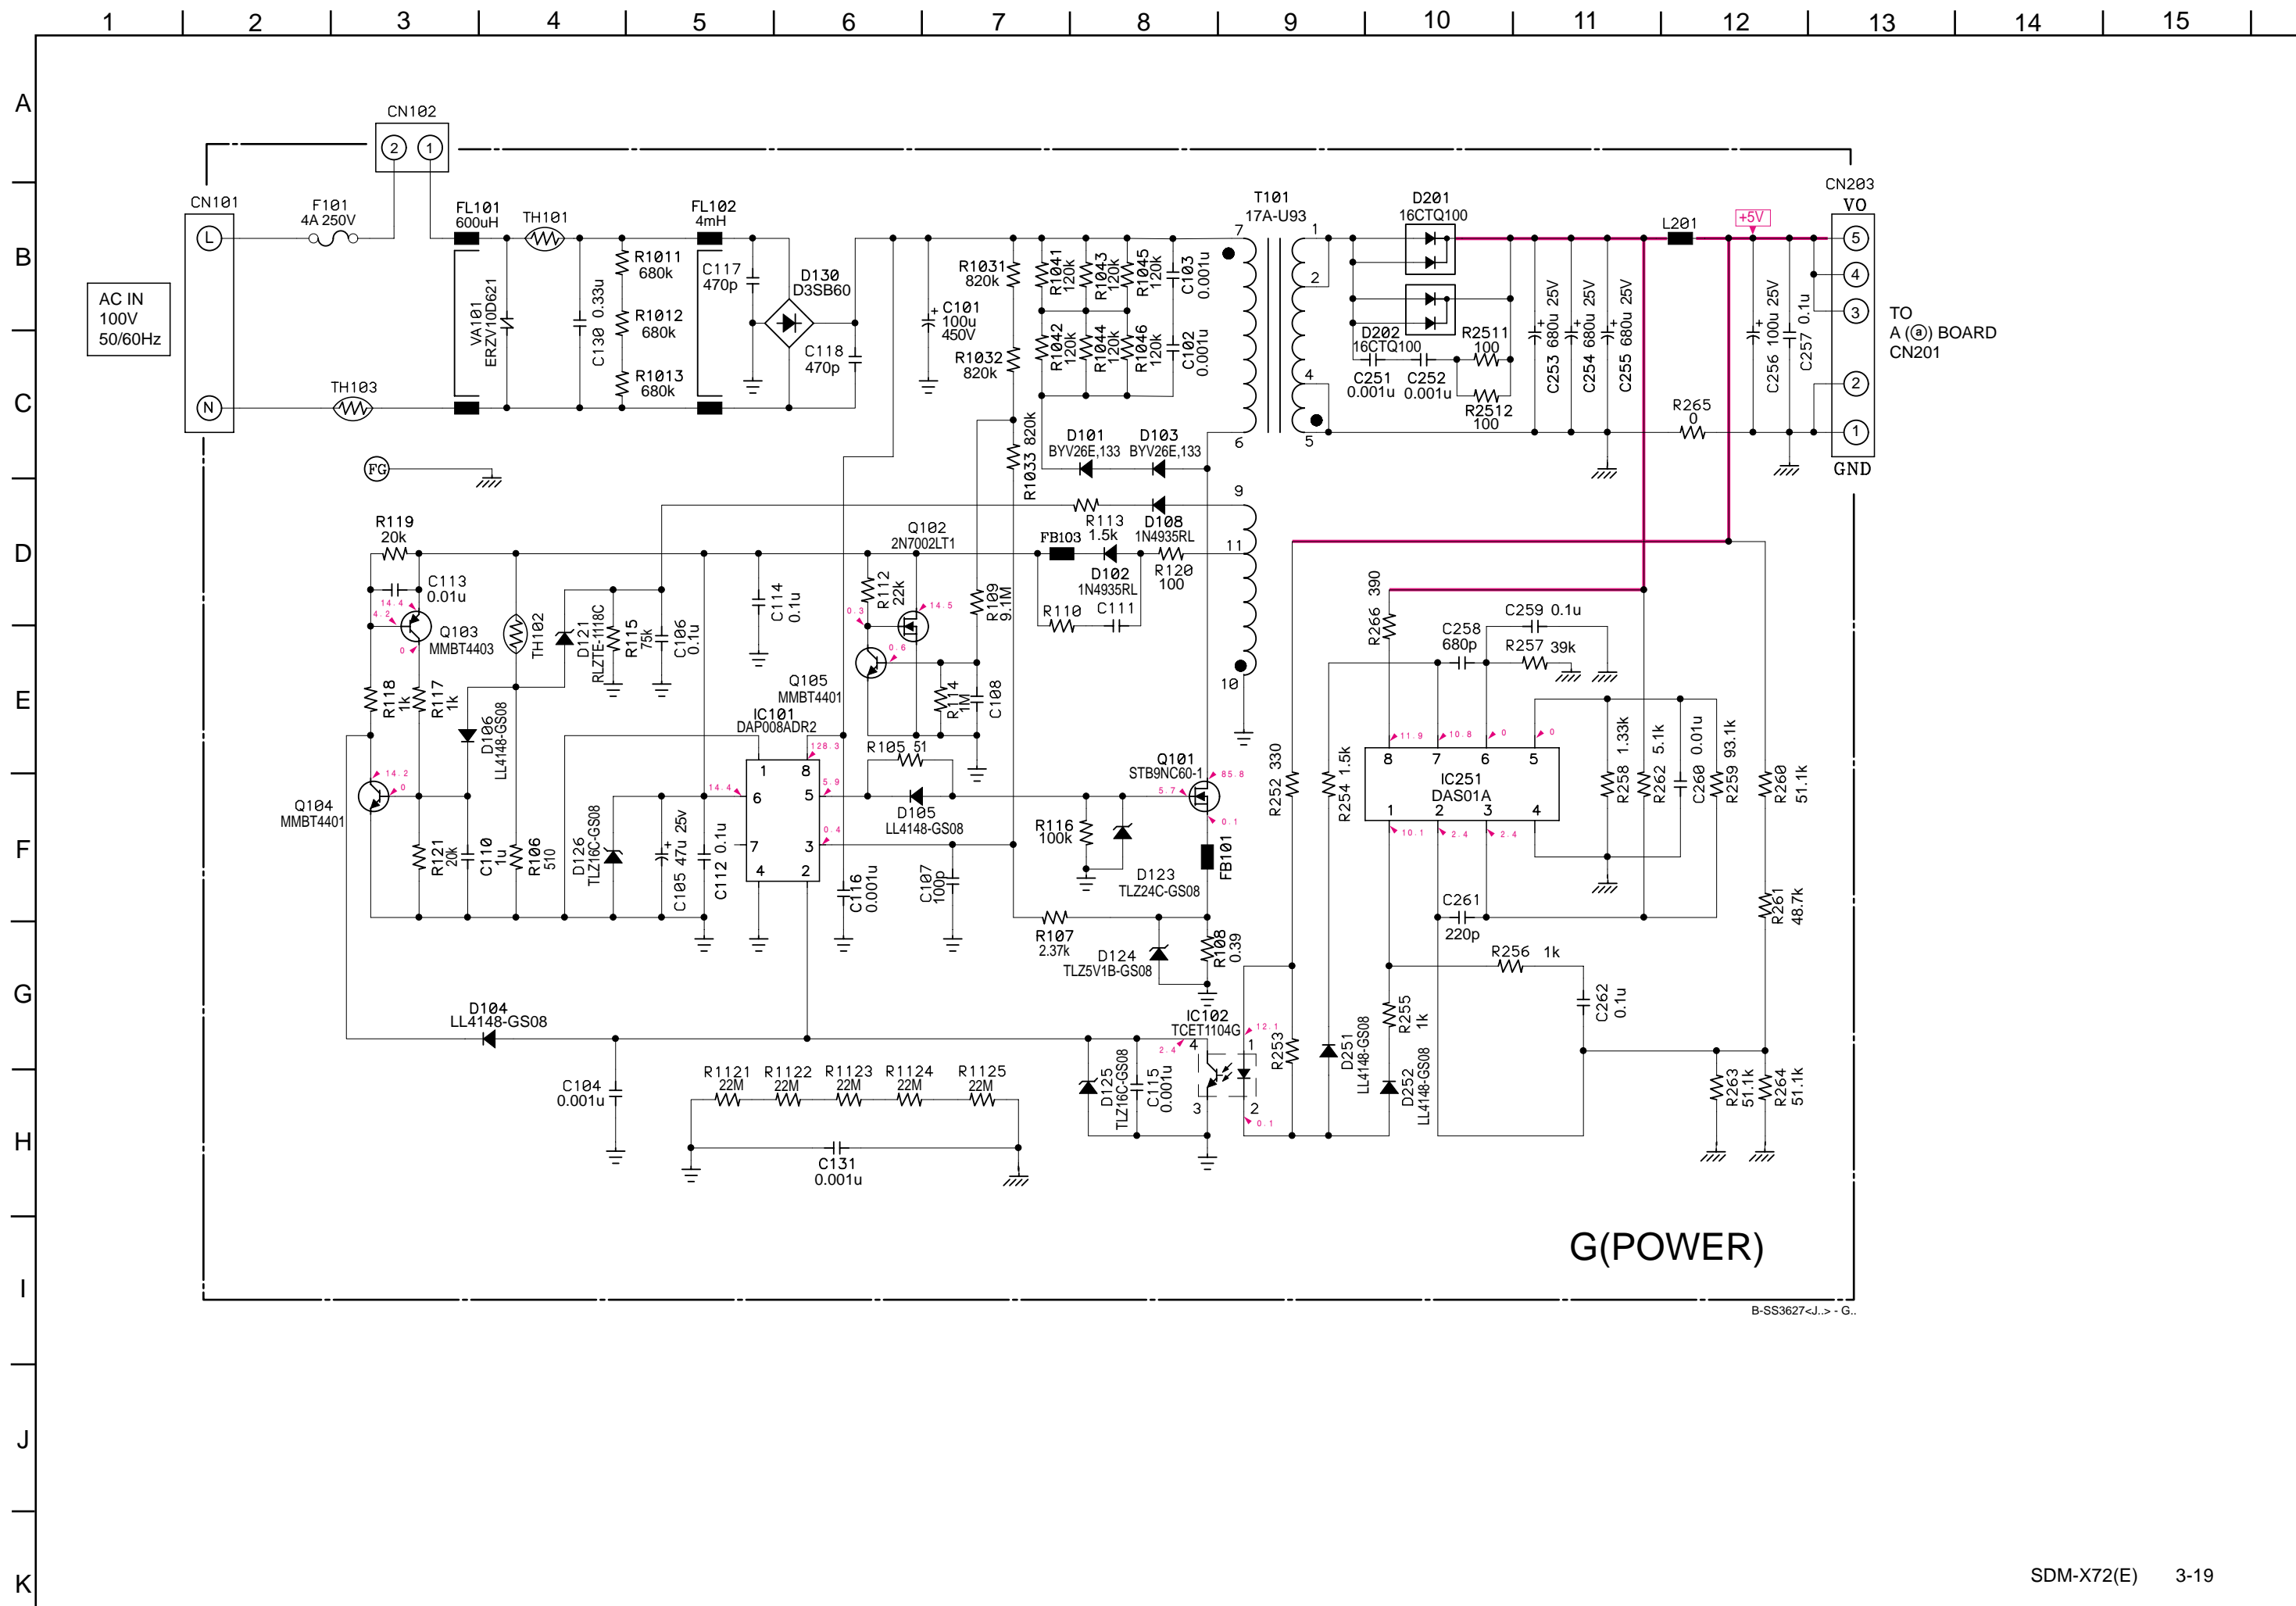


G

[POWER SUPPLY]

—G BOARD —

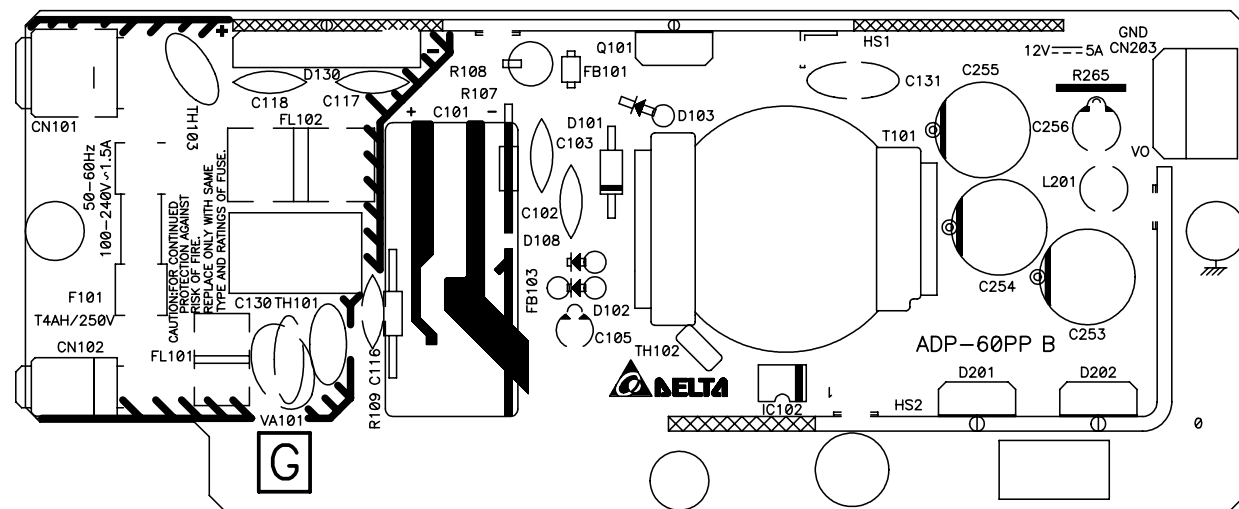


<COMPONENT SIDE>

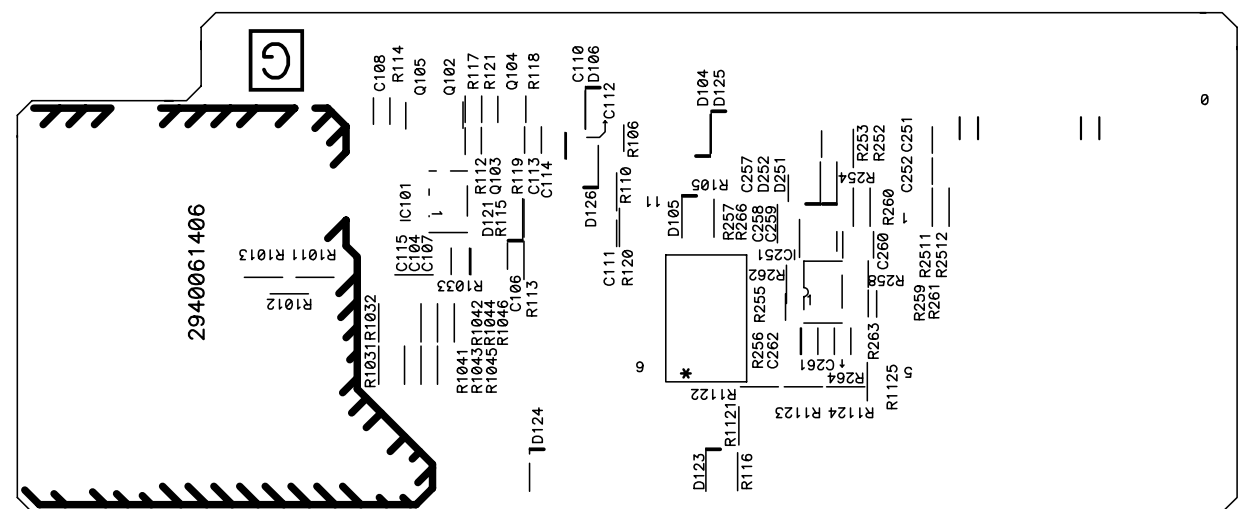


<CONDUCTOR SIDE>


SECTION 4 EXPLODED VIEWS

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified  marked are critical for safety.
Replace only with the part number specified.


Les composants identifiés par la marque 
sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant
le numéro spécifié.

4-1. CHASSIS

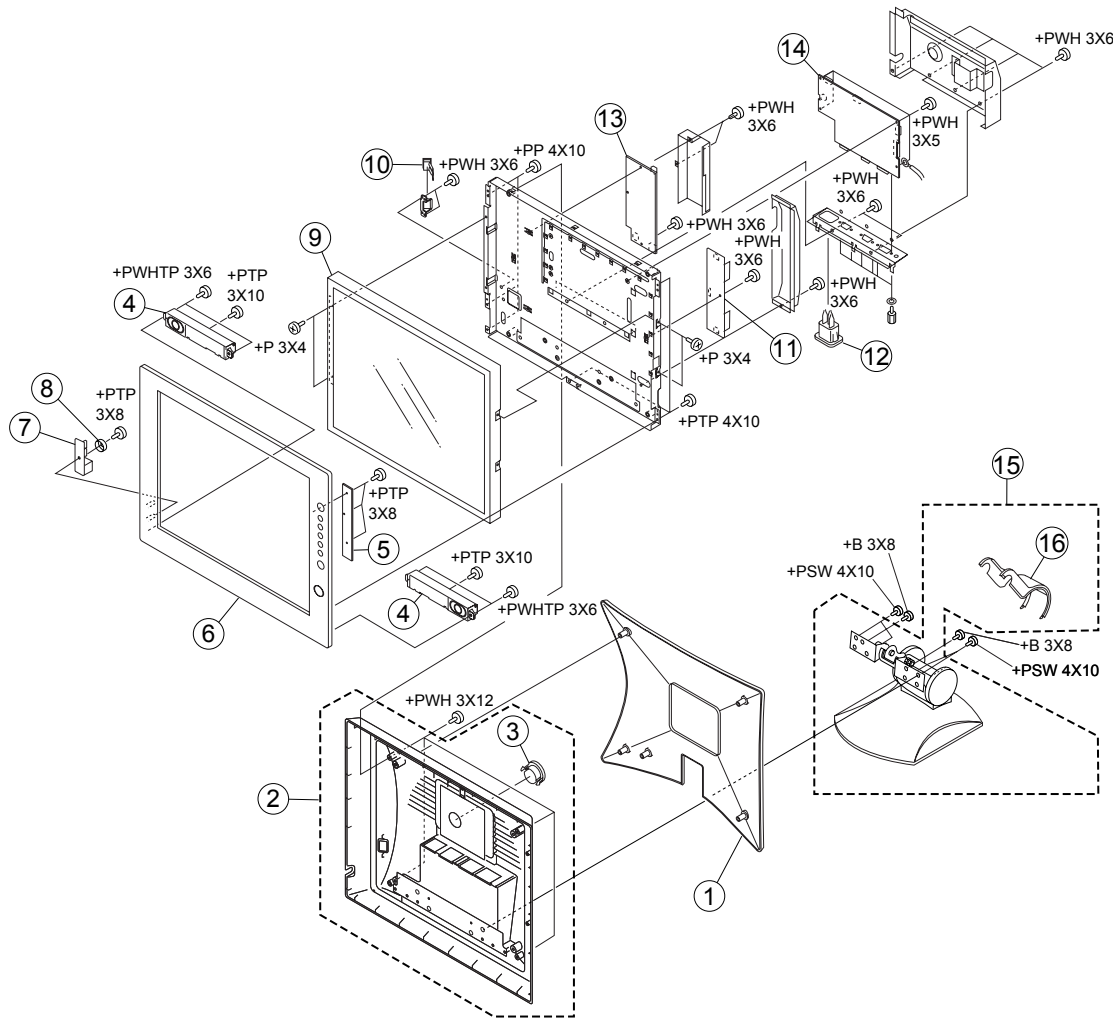

REF.NO.	PART NO.	DESCRIPTION	REMARK
1	4-090-557-01	COVER, REAR (GRAY) (US/CND/AEP/CH)	
2	4-090-557-11	COVER, REAR (BLACK)(US/CND/AEP)	
	X-4041-271-1	CABINET ASSY (GRAY)	3
	X-4041-269-1	CABINET ASSY (BLACK)	3
3	4-089-923-01	COVER, MINI DIN (GRAY) (US/CND/AEP/CH)	
	4-089-923-11	COVER, MINI DIN (BLACK) (US/CND/AEP)	
4	1-825-215-11	BOX, SPEAKER	
5	A-1401-985-A	H BOARD, MOUNTED	
6	X-4041-270-1	BEZEL ASSY (GRAY) (US/CND/AEP/CH)	
	X-4041-268-1	BEZEL ASSY (BLACK)(US/CND/AEP)	
7	A-1401-986-A	U BOARD, MOUNTED	
8	4-093-038-01	WASHER	
9	1-804-981-11	PANEL, LCD (M170EN05)	
10	1-786-460-11	SWITCH POWER	
11	1-761-619-11	I BOARD, MOUNT (INVERTOR BOARD)	
12	1-417-348-11	INLET, AC	
13	1-761-615-11	G BOARD, MOUNT (POWER BOARD)	
14	A-1404-772-A	A BOARD, MOUNTED	
15	A-1604-259-A	STAND ASSY (GRAY)	16
		(US/CND/AEP/CH)	
	A-1604-255-A	STAND ASSY (BLACK)	16
		(US/CND/AEP)	
16	4-089-996-01	COVER (REAR), ARM (GRAY) (US/CND/AEP/CH)	
	4-089-996-11	COVER (REAR), ARM (BLACK) (US/CND/AEP)	

4-2. PACKING MATERIALS

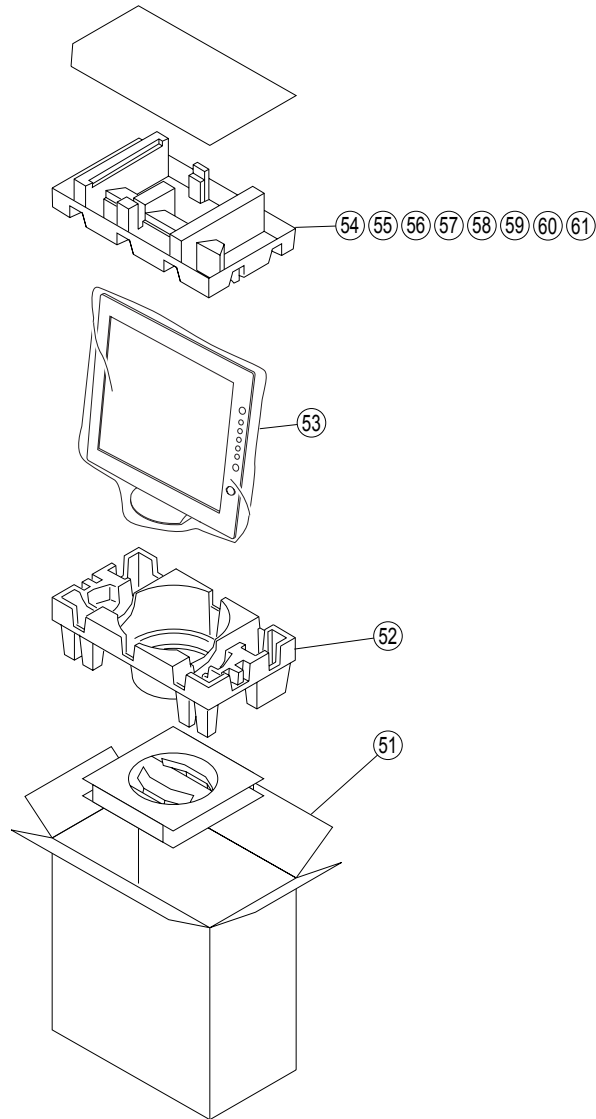

REF.NO.	PART NO.	DESCRIPTION	REMARK
51	* 4-093-186-01	INDIVIDUAL CARTON (GRAY) (US/CND/AEP/CH)	
	* 4-093-185-01	INDIVIDUAL CARTON (BLACK) (US/CND/AEP)	
52	* 4-093-187-01	CUSHION (LOWER)	
53	* 4-092-765-01	BAG, PROTECTION	
54	* 4-093-188-01	CUSHION (UPPER)	
55	! 1-790-568-12	CORD SET, POWER (U/C)	
	! 1-765-719-11	CORD SET, POWER (AEP)	
	! 1-827-087-11	CORD SET, POWER (CH)	
56	1-824-952-11	CORD WITH CONNECTOR(15P DSUBX2)	
57	1-824-963-11	CORD WITH CONNECTOR	
58	1-824-598-11	CABLE, DVI-D	
59	4-093-065-11	MANUAL, INSTRUCTION (U/C)	
	4-089-157-21	MANUAL, INSTRUCTION (AEP)	
	4-089-157-32	MANUAL, INSTRUCTION (CH)	
60	1-796-619-11	DISC, CD-ROM	
61	* 4-093-235-01	LABEL, INFORMATION (GRAY) (US/CND/AEP/CH)	
	* 4-093-235-11	LABEL, INFORMATION (BLACK) (US/CND/AEP)	

SECTION 5

ELECTRICAL PARTS LIST

NOTE:

The components identified \triangle marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque \triangle sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.


When indicating parts by reference number, please include the board name.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

RESISTORS

- All resistors are in ohms
- F : nonflammable

No.	#	Board	Type	⚠/✖	Ref.No.	Part No.	Description	Remarks-1	Remarks-2	Difference
1		A	FUSE	⚠	F201	1-576-704-11	FUSE 7A 125V			
2		A	IC		IC201	6-703-630-01	IC BA9741F			
3		A	IC		IC204	6-702-889-01	IC SI-3033KS-TL			
4		A	IC		IC205	6-702-940-01	IC XC6203E332PR			
5		A	IC		IC206	6-703-152-01	IC LD1085DT			
6		A	IC		IC208	6-702-940-01	IC XC6203E332PR			
7		A	IC		IC301	6-702-994-01	IC MTV412MV128			
8		A	IC		IC303	8-759-672-79	IC M24C02-WMN6T(A)			
9		A	IC		IC304	8-759-672-79	IC M24C02-WMN6T(A)			
10		A	IC		IC305	8-759-672-79	IC M24C02-WMN6T(A)			
11		A	IC		IC401	6-703-171-01	IC GM5020			
12		A	IC		IC603	8-759-541-25	IC M52758P			
13		A	IC		IC801	6-702-887-01	IC TDA7496L			
14		G	DIODE		D130	8-719-510-51	DIODE D3SB60F			
15		G	DIODE		D201	6-500-359-01	DIODE STPS20H100CT			
16		G	DIODE		D202	6-500-359-01	DIODE STPS20H100CT			
17		G	IC		IC101	6-702-918-01	IC DAP008ADR2			
18		G	IC		IC251	6-702-917-01	IC DAS001			
19		G	TRANSISTOR		Q101	6-550-394-01	TRANSISTOR STB9NC60-1			
20		H	DIODE		D909	6-500-388-01	DIODE L-934SYC			
21		H	DIODE		D910	6-500-388-01	DIODE L-934SYC			
22		H	SWITCH		S901	1-786-426-11	SWITCH, TACTILE			
23		H	SWITCH		S902	1-786-426-11	SWITCH, TACTILE			
24		H	SWITCH		S903	1-786-426-11	SWITCH, TACTILE			
25		H	SWITCH		S904	1-786-426-11	SWITCH, TACTILE			
26		H	SWITCH		S905	1-786-426-11	SWITCH, TACTILE			
27		H	SWITCH		S906	1-786-426-11	SWITCH, TACTILE			
28		H	SWITCH		S907	1-786-426-11	SWITCH, TACTILE			
29		I	FUSE	⚠	F1	1-576-410-21	FUSE, CHIP			
30		I	FUSE	⚠	F2	1-576-410-21	FUSE, CHIP			
31		I	IC		IC1	6-702-916-01	IC OZ960S			

No.	#	Board	Type		Ref.No.	Part No.	Description	Remarks-1	Remarks-2	Difference
32		I	IC		IC2	6-702-915-01	IC SI4532DY			
33		I	IC		IC3	6-702-915-01	IC SI4532DY			
34		I	IC		IC4	6-702-915-01	IC SI4532DY			
35		I	IC		IC5	6-702-915-01	IC SI4532DY			

SERVICE MANUAL

SDM-X72

US Model
Canadian Model
AEP Model
Chinese Model

DL1 CHASSIS

ORIGINAL MANUAL ISSUE DATE: 1/2003

ALL REVISIONS AND UPDATES TO THE ORIGINAL MANUAL ARE APPENDED TO THE END OF THE PDF FILE.

REVISION DATE

REVISION TYPE

SUBJECT

1/2003

No revisions or updates are applicable at this time.

Design and specifications are subject to change without notice.

TFT LCD COLOR COMPUTER DISPLAY

SONY®

PRINTING THE SERVICE MANUAL

The PDF of this service manual is not designed to be printed from cover to cover. The pages vary in size, and must therefore be printed in sections based on page dimensions.

NON-SCHEMATIC PAGES

Data that does NOT INCLUDE schematic diagrams are formatted to 8.5 x 11 inches and can be printed on standard letter-size and/or A4-sized paper.

SCHEMATIC DIAGRAMS

The schematic diagram pages are provided in two ways, full size and tiled. The full-sized schematic diagrams are formatted on paper sizes between 8.5" x 11" and 18" x 30" depending upon each individual diagram size. Those diagrams that are LARGER than 11" x 17" in full-size mode have been tiled for your convenience and can be printed on standard 11" x 17" (tabloid-size) paper, and reassembled.

TO PRINT FULL SIZE SCHEMATIC DIAGRAMS


If you have access to a large paper plotter or printer capable of outputting the full-sized diagrams, output as follows:

- 1) Note the page size(s) of the schematics you want to output as indicated in the middle window at the bottom of the viewing screen.
- 2) Go to the File menu and select Print Set-up. Choose the printer name and driver for your large format printer. Confirm that the printer settings are set to output the indicated page size or larger.
- 3) Close the Print Set Up screen and return to the File menu. Select "Print..." Input the page number of the schematic(s) you want to print in the print range window. Choose OK.

TO PRINT TILED VERSION OF SCHEMATICS



Schematic pages that are larger than 11" x 17" full-size are provided in a 11" x 17" printable tiled format near the end of the document. These can be printed to tabloid-sized paper and assembled to full-size for easy viewing.


If you have access to a printer capable of outputting the tabloid size (11" x 17") paper, then output the tiled version of the diagram as follows:

- 1) Note the page number(s) of the schematics you want to output as indicated in the middle window at the bottom of the viewing screen.
- 2) Go to the File menu and select Print Set-up. Choose the printer name and driver for your printer. Confirm that the plotter settings are set to output 11" x 17", or tabloid size paper in landscape () mode.
- 3) Close the Print Set Up screen and return to the File menu. Select "Print..." Input the page number of the schematic(s) you want to print in the print range window. Choose OK.

TO PRINT SPECIFIC SECTIONS OF A SCHEMATIC

To print just a particular section of a PDF, rather than a full page, access the Graphics Select tool in the Acrobat Reader tool bar.

- 1) To view the Graphics Select Tool, press and HOLD the mouse button over the Text Select Tool which looks like: . This tool will expand to reveal additional tools. Choose the Graphics Select tool by placing the cursor over the button on of the far right that looks like: 
- 2) After selecting the Graphics Select Tool, place your cursor in the document window and the cursor will change to a plus (+) symbol. Click and drag the cursor over the area you want to print. When you release the mouse button, a marquee (or dotted lined box) will be displayed outlining the area you selected.
- 3) With the marquee in place, go to the file menu and select the "Print..." option. When the print window appears, choose the option under the section called "Print Range" which says "Selected Graphic".

Select OK and the output will print only the area that you outlined with the marquee. 

(continued >)

ON-SCREEN SEARCH OPTION

All of the text within the service manual PDF is content searchable. This means that you can enter any text, word, phrase or reference number that appears in the manual, and the PDF software will search, find and move the cursor to the location where you requested text first appears. This feature can be particularly useful in locating components on a specific schematic or printed wire circuit board (PWB) diagrams.

Follow these steps to effectively locate a component on a schematic diagram:

- 1) Locate the schematic you want to search by clicking on the corresponding bookmark on the left side of the screen. The view on the right of the screen will then jump to the desired schematic page.
- 2) Magnify the diagram to at least 400% before conducting a component search. This will enable you to easily view the reference number when it is highlighted on screen. To do this, click on the magnifying glass button on the tool bar at the top of the screen. Move the cursor over the diagram and RIGHT click you mouse. Select the 400% magnification option on the pop-up menu. Click on the button with the icon of the open hand to deactivate the magnification tool
- 3) Search the diagram (or the entire manual) by clicking on the binocular button tool at the top of the screen. The "Find" window will appear and allow you to type in your desired text. Type in a reference designator, such as R502, and click on the "Find" button. If the component is not on the diagram, but is listed anywhere else in the manual, the cursor will jump to the first location the text is found in the file. To find another instance of that same text, click on the binocular button again and select "Find Again."