

# Technical Reference



## **MTM400 and MTM400A MPEG Transport Stream Monitors RUI v3.x Upgrade**

**077-0174-00**

[www.tektronix.com](http://www.tektronix.com)



077017400

Copyright © Tektronix. All rights reserved. Licensed software products are owned by Tektronix or its subsidiaries or suppliers, and are protected by national copyright laws and international treaty provisions.

Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supercedes that in all previously published material. Specifications and price change privileges reserved.

TEKTRONIX, TEK, and *FlexVuPlus* are registered trademarks of Tektronix, Inc.

## **Contacting Tektronix**

Tektronix, Inc.  
14200 SW Karl Braun Drive  
P.O. Box 500  
Beaverton, OR 97077  
USA

For product information, sales, service, and technical support:

- In North America, call 1-800-833-9200.
- Worldwide, visit [www.tektronix.com](http://www.tektronix.com) to find contacts in your area.

# Table of Contents

<b>User Interface Overview</b> .....	<b>1</b>
User Interface Components .....	2
<i>FlexVuPlus</i> Display .....	4
Analysis Views .....	5
Tear-off Views .....	7
Configuration .....	8
User Documentation .....	8
Upgrades .....	9
<b>RUI Control Equivalents</b> .....	<b>11</b>
<b>Reverting the RUI</b> .....	<b>17</b>
Requirements .....	17
RUI Version 3.x to Version 3.0 Procedure .....	18
RUI Version 3.0 to Version 2.6.1 Procedure .....	21
Command Line Firmware Downgrade .....	24
RUI v2.6.1 Product Documentation .....	26
RUI v3.0 Product Documentation .....	26



# User Interface Overview

This document introduces you to the MTM400A user interface and explains the differences between the MTM400 RUI and the MTM400A RUI.

The MTM400A MPEG Transport Stream Monitor is functionally similar to the MTM400 MPEG Transport Stream Monitor. However, the MTM400 was based on Microsoft Java technology, for which Microsoft is withdrawing support. The MTM400A is based on Sun Java, and is more closely aligned with the MTS400 MPEG Test System.

The MTM400A remote user interface (RUI) looks similar to the MTM400 RUI, but the MTM400A RUI provides a rich, multi-layered user interface that allows structured access to all information.

Differences between the two RUIs include:

- The MTM400 hot spot view, featuring device and stream buttons is no longer displayed. The device and stream features have been integrated into the single MTM400A display.
- In the MTM400, the button bar was the primary means of moving between information screens. In the MTM400A, although the button bar is still present, screens are also directly accessible using tabbed pages.
- The button bar can be displayed on its own to provide a high-level view of the error state of the monitored stream. The bar can also be customized by hiding and revealing buttons.
- For detailed analysis and specific monitoring situations, the button bar can be hidden, leaving only the main application view visible.
- Detail views in the main application can be displayed as separate windows using the tear-off function.

## User Interface Components

Figure 1 shows the major components of the user interface implemented in the MTM400A and version 3.x of the RUI.

The menu bar, toolbar, and status bar, while visually different, contain options and buttons similar in function to those in the MTM400.

The main viewing areas of the window is divided into two areas: the Button Bar and the Main Application View.

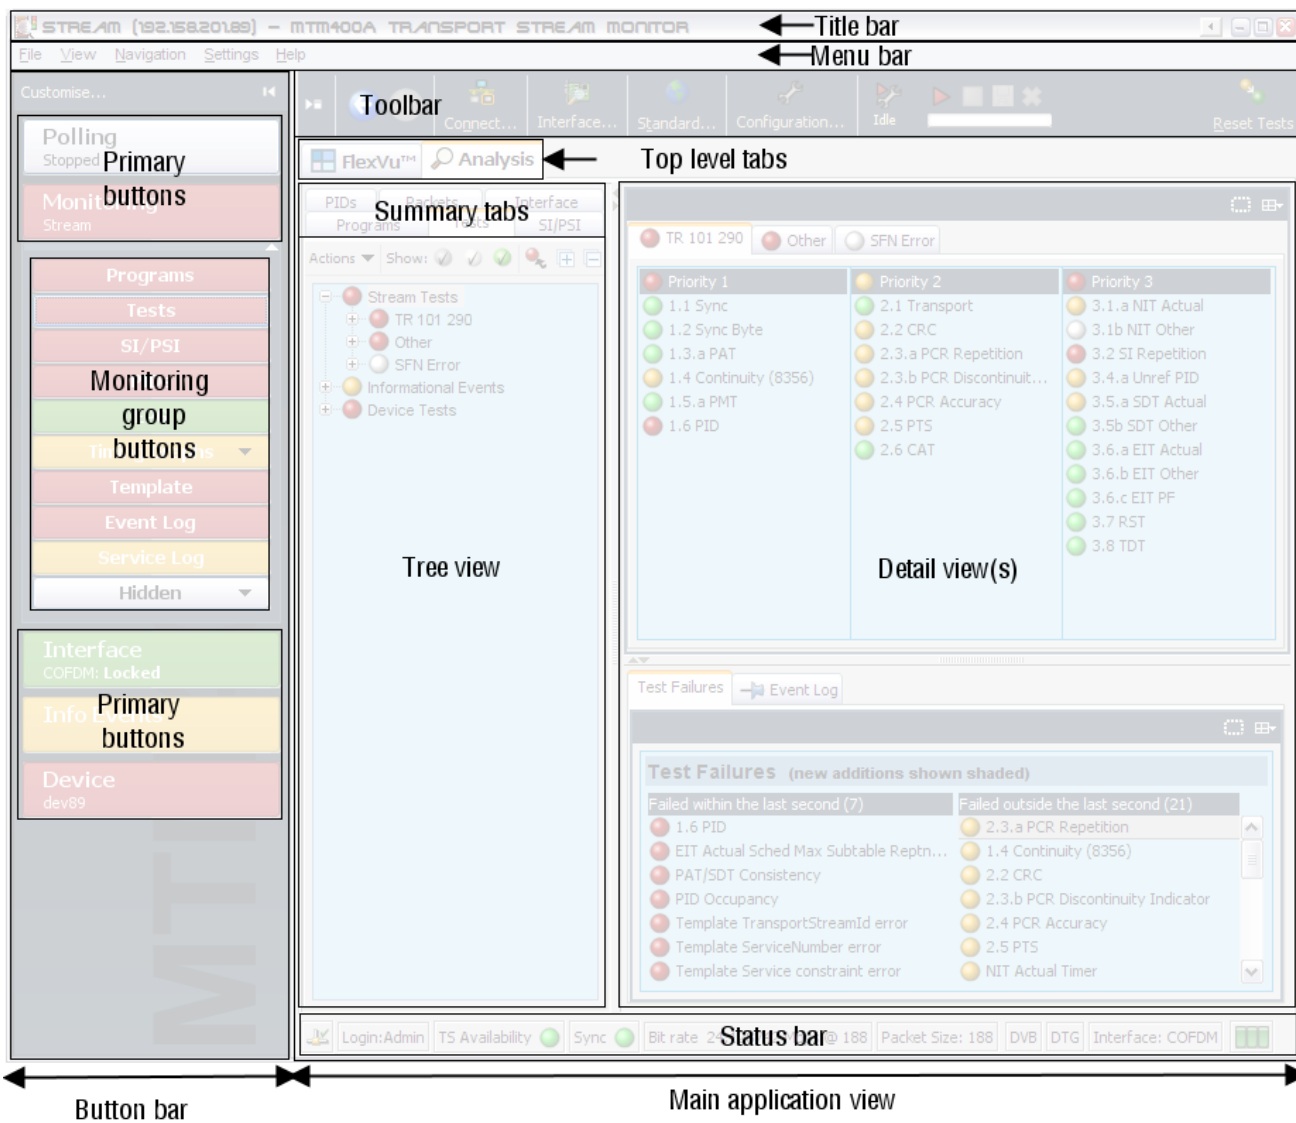


Figure 1: MTM400A user interface components

**Button Bar** The MTM400 button bar showed monitoring status and displayed a corresponding view when clicked. The MTM400A RUI copies this idea, but rearranges the buttons into a more intuitive order. The MTM400 Stream and Device hot spot buttons become Monitoring and Device buttons in the MTM400A RUI.

The buttons from the MTM400 Stream window have been streamlined and grouped under the MTM400A Monitoring button. The buttons from the MTM400 Device window have been removed and replaced by a node in the Analysis Tests view.

**Main Application View** In the main application view, two top-level views are selected using tabs: *FlexVuPlus* and *Analysis*. You can customize the *FlexVuPlus* display to contain the analysis views of your choice.

The main analysis views are Programs, Tests, SI/PSI (tables), PIDs, Packets, and Interface (when an optional interface card is installed). The analysis views are selected using the summary tabs.

Each analysis view contains a tree view and a detail view. The content of the detail view is dependent on which node is selected in the tree view.



**RUI Navigation** The MTM400 RUI navigation was simple, allowing the right view to change in accord with the button being clicked.

The MTM400A RUI has comprehensive navigation possibilities that use the button bar, context menus, hyperlinks, and double-clicks.

## FlexVuPlus Display

The *FlexVuPlus* display philosophy (first introduced in the Tektronix WVR600 Waveform Rasterizer), is now adapted for the MTM400A. This gives users up to four concurrent views of a monitored signal and the flexibility to configure each of the windows independently. Each of the *FlexVuPlus* views is derived from views available under the Analysis tab. *FlexVuPlus* setups will be remembered between MTM400A sessions.

With a virtually unlimited variety of stream monitoring displays from which users can choose, this exceptional flexibility enables the MTM400A to perform like a “4-in-1 monitor” on a single incoming stream. The *FlexVuPlus* display enables users to easily configure their MTM400A to provide a monitoring solution that is optimized for their specific requirement.

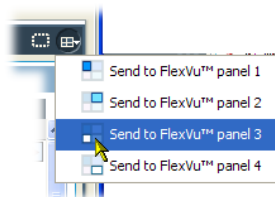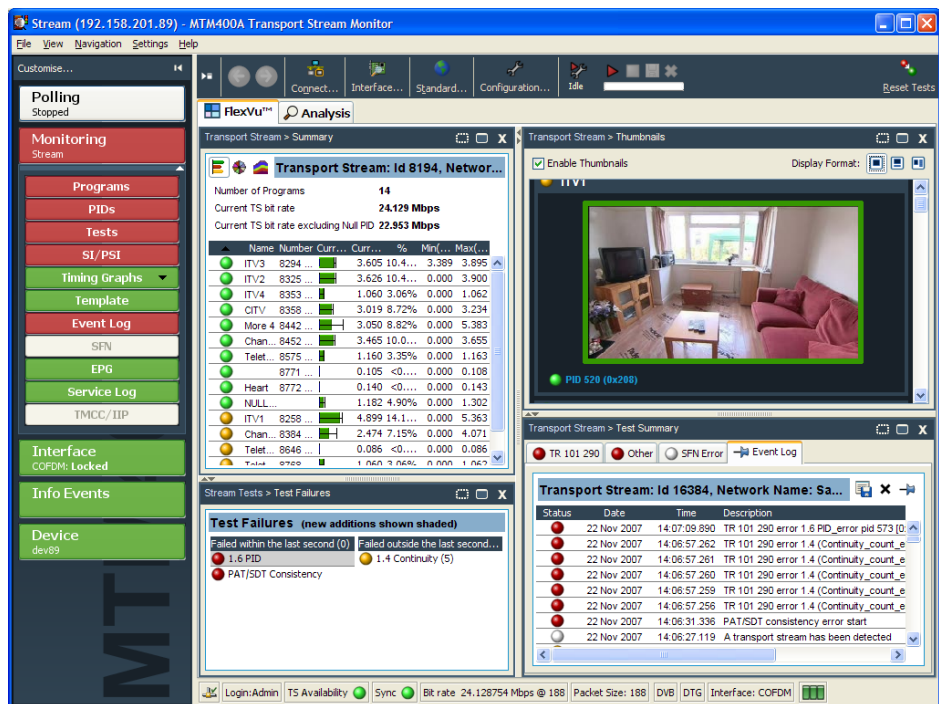


Present on all Analysis detail views, the *FlexVuPlus* selection icon is used to extract views to the *FlexVuPlus* panels.



## Analysis Views

The MTM400A Analysis views each use a single tree view with different context-sensitive detail views contained within tabbed frames. From the main window, you can access the following views: Program, Tests, Tables, PID, Packets, and Interface.

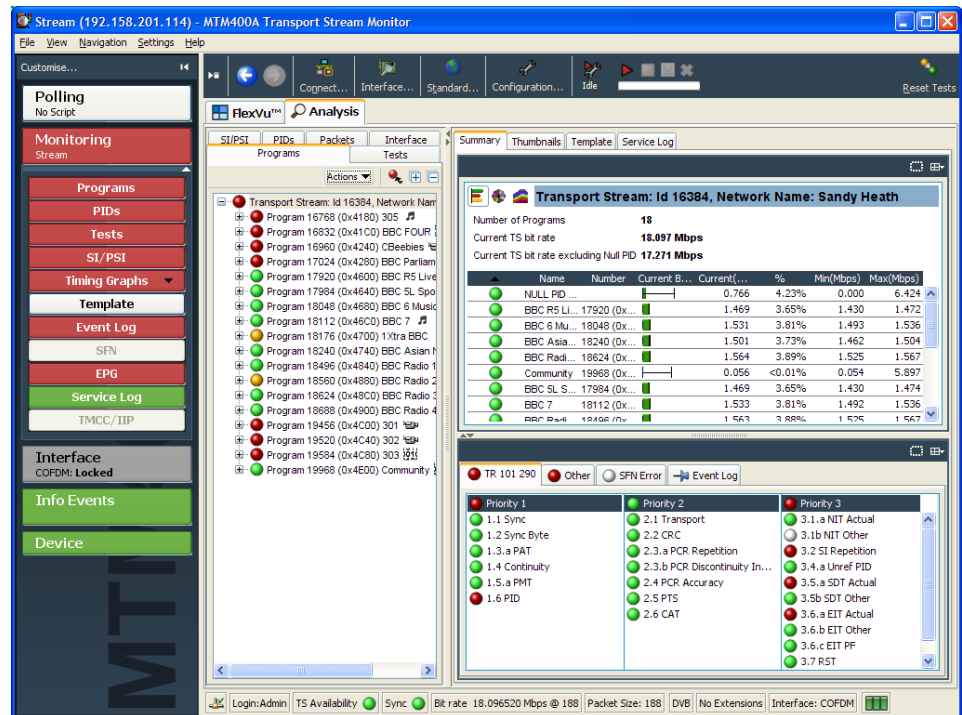

### Programs View

The Program view provides a fast overview of the transport stream contents in terms of program content, bit rated use by each program, and TR 101 290 test results. Red, amber and green LEDs highlight errors associated with each program, or element of a program, within the transport stream. Red LEDs indicate that there are current errors in the stream, amber LEDs indicate that errors have occurred but are now clear, and green LEDs indicate that no errors have been detected.

Errors that are detected at lower levels in the program stream hierarchy propagate up to the highest level. This allows you to monitor all of the programs in the stream at a high level and then quickly go to lower levels as necessary to locate a problem.

The contents of the MTM400A Programs view are broadly equivalent to the following MTM400 screens: Stream view: Summary, Detail (All Programs), Service and Event Logs, SFN, TMCC/IIP, Templates.

### **Tests View**

With the Tests view you can identify the tests that are signaling errors in a monitored stream. The error log is automatically filtered by the selected test, and can also be filtered by Packet Identifier (PID). In addition to the standard first, second, and third priority tests included in TR 101 290 standard, tests are available for Program Clock Reference (PCR) jitter and program/PID bit rate. A variability test enables you to test the changes in the bit rate of a specific PID, and there are many tests that are specific to ISDB-T and ISDB-S streams. Informational events are also reported, including interface card warnings and polling events.

Also displayed in the Tests view are tests related to the MTM400A monitor, for example, the system card temperature.

The contents of the MTM400A Tests view are broadly equivalent to the following MTM400 screens: Device View: Status, Device Log; Stream view: Tests, Event Log.

### **SI/PSI (Tables) View**

The SI/PSI (Tables) view displays the service information tables that have occurred in the analyzed stream that comply with the selected digital video standard. This includes MPEG-specific program information, DVB service information (SI), and ATSC (PSIP), ISDB program, and system protocol information. The tables are grouped together by function and hyperlinks enable you to quickly access related information within other tables. The SI/PSI tables repetition rate graphs and section data are available on additional tabs.

The contents of the MTM400A SI/PSI view are broadly equivalent to the following MTM400 screens: Stream view: SI graphs and tables.

### **PIDs View**

The PID view displays information about all of the PIDs found in the transport stream. When you select the transport stream, the associated summary view provides a PID-oriented overview of the transport stream, displaying the relative data rates of all of the PIDs contained within the stream. The information can be displayed as either a bar chart or as a pie chart. Pop up menus enable fast limit selection and links.

Each PID is associated with a number of tests. When one or more tests fail, each failed test will be listed under the relevant PID. Select a specific PID to display a summary of all the associated tests. Select a specific test to display the Event Log and Parameters for only that test.

The contents of the MTM400A PIDs view are broadly equivalent to the following MTM400 screens:  
Stream view: PIDs, PID groups, PCR timing graphs.

**Packets View** In DVB mode, the Packets view displays SFN (single frequency network) data if detected in the stream. In ISDB-T mode, this view displays ISDB-T information packets (IIPs) and TMCC information, if detected in the stream.

The contents of the MTM400A packets view are broadly equivalent to the following MTM400 screens: Stream view: SFN and TMCC.

**Interface View** The Interface view provides a central location for information related to the IP and RF interface cards (where installed).

- Test results
- Graphical representation of specific IP and RF card measurements
- IP and RF card readings and control settings


The graphical views display a selection of graphs of instantaneous measurements and measurement trends. Trend graphs use accumulated readings to represent trends in selected readings for up to a week. Also available are an Event Log and a Parameter view.

The Interface tab is displayed only when an interface card is installed; only one interface card at a time can be installed.

The contents of the MTM400A interface view are broadly equivalent to the following MTM400 screens: Stream view: Configuration (interface) and Input Card.

## Tear-off Views

The ability of the MTM400 to display multiple detail views at the same time is replicated in the MTM400A using the tear-off function. Any detail view displaying the tear-off icon shown below can be displayed as a separate window. The tear-off window will continue to be updated independently of the main application. The displayed content can also be modified independently of the main display.



Tear-off icon

## Configuration

All configuration elements, including stream, parameters, device, interface, and display, previously distributed throughout the MTM400 user interface, are now combined in a single dialog box that can be accessed from the menu bar or the toolbar.

## User Documentation

Table 1 lists the user documentation available for the MTM400A monitor.

**Table 1: MTM400A product documentation**

Document title	Tektronix part number	Description
Quick Start User Manual	071-2492-xx (English) 071-2493-xx (Japanese) 071-2632-xx (German)	Contains installation information and high-level operational overviews
Release Notes	077-0181-xx	Contains information about known operational issues
Technical Reference	077-0175-xx	Contains in-depth operational information
Specifications and Performance Verification Technical Reference	077-0176-xx	Contains the product specifications and a performance verification procedure
Test Parameter and Configuration File Technical Reference	077-0177-xx	Contains information about test parameters and configuration files
Programmer Manual	077-0178-xx	Contains syntax information about remote control commands
Declassification and Security Instructions	077-0179-xx	Contains information about how to remove user proprietary information from the instrument

## Upgrades

Table 2 lists the ordering information that has changed for product upgrades.

**Table 2: Upgrade ordering information**

MTM400 upgrades (old)	MTM400A upgrades (new)	Description
MTM4UP Opt. 01	MTM4UP 01	Triggered recording capability up to 160 MB
MTM4UP Opt. 02	MTM4UP 02	Transport stream service information analysis (PSI/SI/PSIP/ARIB view)
MTM4UP Opt. 03	MTM4UP 03	Template testing (for user-defined service plan testing)
MTM4UP Opt. 04	MTM4UP 04	In-depth PCR analysis with graphical result views
MTM4UP Opt. 05	MTM4UP 05	Bit rate testing functionality
MTM4UP Opt. 06	MTM4UP 06	Service logging
MTM4UP Opt. 07	MTM4UP 07	Polling
MTM4FCF	MTM4UP CF	COFDM interface
MTM4FGE	MTM4UP GE	Ethernet Interface With 10/100/1000Base-T; RJ-45 Electrical Port
MTM4FGE Opt. SX	MTM4UP SX	1000Base-SX Short Wavelength Optical port with LC connector (Multi-Mode 850 nm)
MTM4FGE Opt. LX	MTM4UP LX	1000Base-LX Long Wavelength Optical port with LC connector (Single Mode 1310 nm)
MTM4FGE Opt. ZX	MTM4UP ZX	1000Base-ZX Optical port with LC connector (Single Mode 1550 nm)
MTM4FQA	MTM4UP QA	QAM Annex A interface
MTM4FQB2	MTM4UP QB2	QAM Annex B Level 1 and Level 2 interface
MTM4FEP	MTM4UP EP	8PSK/QPSK interface
MTM4FQC	MTM4UP QC	QAM Annex C interface
MTM4FVS	MTM4UP VS	8VSB Interface
MTM4FEPIFC	MTM4UP IFC	One-time install of all selected options and calibration for one product
MTM4FGEIFC		
MTM4FQB2IFC		
MTM4FQCIFC		
MTM4FVSIFC		
MTM4FCFIFC		
MTM4FQPIFC		
MTM4FQAIFC		



# RUI Control Equivalents

Table 3 describes the control equivalents between the MTM400A RUI and the MTM400 RUI.

**Table 3: RUI control equivalents**

MTM400 RUI controls		MTM400A RUI equivalent controls
Button bar	Button / Field	
Summary	Pie Chart and Test Summary	Click the <b>Programs</b> button in the button bar Select the <b>Pie Chart</b> button on the right hand Summary tab
Detail	All PIDs	Click the <b>PIDs</b> button in the button bar Select the <b>Pie Chart</b> button on the right hand Summary tab
	SI Tables	Click the <b>PIDs</b> button in the button bar Select the <b>SI/PSI PIDs</b> node in the PIDs tree Select the <b>Pie Chart</b> button on the right hand Summary tab
	Program...	Click the <b>Programs</b> button in the button bar Select the desired Program Select the <b>Pie Chart</b> button on the right hand Summary tab
Tests	Status	Click the <b>Tests</b> button in the button bar Status is shown in the Tests tree and right hand panes
	Set Alarms	Click the <b>Tests</b> button in the button bar Right click desired test to show menu Select required Trigger Action from menu
	Parameters...	Click the <b>Tests</b> button in the button bar Right click desired test to show menu Select <b>Edit Parameters...</b> from menu Note that not all tests have editable parameters
Custom	Tests List	This feature is not implemented in the MTM400A RUI
Info	Status	Click the Info Events button in the button bar Status is shown in the tree and right hand panes
	Set Alarms	Click the <b>Tests</b> button in the button bar Right click desired event to show menu Select required Trigger Action from menu

**Table 3: RUI control equivalents (Cont.)**

MTM400 RUI controls		MTM400A RUI equivalent controls
Button bar	Button / Field	
Programs	Histogram view	Click the <b>Programs</b> button in the button bar Select the <b>Histogram Chart</b> button on the right hand Summary tab
	Set Program Bit rate limits	Click the <b>Programs</b> button in the button bar Right click the required program to show menu Select <b>Set Bit Rates Limits...</b> from menu
	Clear Limits	Click the <b>Programs</b> button in the button bar Right click the required program to show menu Select <b>Clear Bit Rates Limits</b> from menu
	Reset Change Bars	Click the <b>Programs</b> button in the button bar Right click the required program to show menu Select <b>Reset Range Bars</b> from menu
PIDs	Histogram View	Click the <b>PIDs</b> button in the button bar Select the <b>Histogram</b> button on the right hand Summary tab
	Filter on test	Click the <b>Tests</b> button in the button bar Select the desired test in the tree Associated PIDs view on the right shows PIDs for the test
	Set PID bit rate limits	Click the <b>PIDs</b> button in the button bar Right click the required PID to show menu Select <b>Set Bit Rates Limits...</b> from menu
	Clear PID bit rate limits	Click the <b>PIDs</b> button in the button bar Right click the required PID to show menu Select <b>Clear Bit Rates Limits</b> from menu
	Set per PID Parameters	Click the <b>PIDs</b> button in the button bar Select the required PID In right hand <b>Associated Tests</b> view, right click test and select <b>Edit Parameters...</b> from menu
	Reset Change Bars	Click the <b>PIDs</b> button in the button bar Right click the required PID to show menu Select <b>Reset Range Bars (all PIDs)</b> from menu



Table 3: RUI control equivalents (Cont.)

MTM400 RUI controls		MTM400A RUI equivalent controls
Button bar	Button / Field	
PIDs (continued)	Manage User PIDs...	Click the <b>PIDs</b> button in the button bar Right click the <b>User PIDs</b> node in the PIDs tree to show menu Select <b>Add User PID</b>
	Program PID grouping	Click the <b>Programs</b> button in the button bar Select the Program node PIDs are grouped in tree and in Histogram view
PID Groups	PID Group Management	Click the <b>PIDs</b> button in the button bar Select the <b>PID Groups</b> node Group Management is via the right hand view and the context menus for the PID Group nodes in the tree
PCR Jitter	PID x Timing graphs	Click the <b>Timing Graphs</b> button in the button bar Select the required PID from the menu Timing Graphs tab shown on the right hand side
SFN	SFN View	Click the <b>SFN</b> button in the button bar Right hand side shows SFN data Note: This is only available when there is SFN data in the stream
TMCC	TMCC Summary View	Click the <b>TMCC/IIP</b> button in the button bar Select the <b>Transport Stream</b> node in the tree Select the <b>TMCC/IIP</b> tab on right hand side Note: This is only available when there is TMCC data in the stream
SI Graphs	SI Graphs for Table x	Click the <b>SI/PSI</b> button in the button bar Select the desired table in the tree Select the <b>SI Repetition Graphs</b> tab on the right hand side
SI Tables	SI Tree view	Click the <b>SI/PSI</b> button in the button bar The SI/PSI tree structure is shown in the tree
Template		Click the <b>Template</b> button in the button bar Right hand side shows Template data Note: This is only available when Template Checking is enabled
Recording		Click the <b>Recording Settings</b> button on the toolbar (to the right of the <b>Configuration...</b> button) The configuration dialog is opened at the recording page
Recording	Status	Status is shown on the toolbar and on the Recording page

**Table 3: RUI control equivalents (Cont.)**

<b>MTM400 RUI controls</b>		<b>MTM400A RUI equivalent controls</b>
<b>Button bar</b>	<b>Button / Field</b>	
Log	Event Log	Click the <b>Event Log</b> button in the button bar Right hand side shows Event Log at bottom Note: Filtered event logs are present when clicking on each test in the Tests tree
	Change displayed timezone of log entries	Click the <b>Configuration...</b> button on the toolbar Select the <b>Preferences</b> page Edit the <b>Timezone for timestamp display</b> field
	Download and Clear Log	Click the <b>Event Log</b> button in the button bar Right hand side shows Event Log at bottom Download and Clear buttons are above log entries
Config	Standard and Region	Click the <b>Standard...</b> button on the toolbar Select the standard and/or region
	Interface (select/configure)	Click the <b>Interface...</b> button on the toolbar Use the dialog to select channels and edit parameters
	Interface (lock)	Displayed as text on <b>Interface</b> button
	Stream Name	Click the <b>Configuration...</b> button on the toolbar Select the <b>Stream</b> page
	Template Checking	Click the <b>Configuration...</b> button on the toolbar Select the <b>Stream</b> page
	Maintenance Mode	Click the <b>Configuration...</b> button on the toolbar Select the <b>Stream</b> page
	Configuration Slot management	Click the <b>Configuration...</b> button on the toolbar Select the <b>Slot Management</b> page
	Scheduling management	Click the <b>Configuration...</b> button on the toolbar Select the <b>Schedule Management</b> page
	Enable Thumbnails	Click the <b>Configuration...</b> button on the toolbar Select the <b>Stream</b> page
SI Parameter Processing (ISDB only)	Click the <b>Configuration...</b> button on the toolbar Select the <b>Stream</b> page	
Service Log	Status and Management	Click the <b>Service Log</b> button in the button bar The service log view is shown on the right hand side

Table 3: RUI control equivalents (Cont.)

MTM400 RUI controls		MTM400A RUI equivalent controls
Button bar	Button / Field	
Polling	Polling Channel List	Click the <b>Polling</b> button in the button bar The <b>Polling</b> window is displayed containing the selected channels
	Channel configuration	Click the <b>Polling</b> button in the button bar The <b>Polling</b> window is displayed containing the selected channels Select the <b>Configure</b> button Press OK to use the currently defined presets in the interface dialog as the polling channels
Thumbnails		Click the <b>Programs</b> button in the button bar Select the <b>Thumbnails</b> tab on the right hand side Note: Thumbnails can also be viewed for individual programs and for all PIDs
Input Card	Graphs	Click the <b>Interface</b> button in the button bar Select the <b>Graphs</b> tab Select the <b>Add Graph</b> button and select desired graph
	Controls	Click the <b>Interface...</b> button on the toolbar In the dialog, edit the parameters for the desired preset, press Apply to see the effects without closing the dialog.
	Readings	Click the <b>Interface</b> button in the button bar Select the <b>Graphs</b> tab Readings is displayed on the right hand side of the tab Note: This readings table can be shown in a floating or torn-off window



# Reverting the RUI

You can use the following procedure to replace the RUI on your instrument with RUI version 2.6.1. You would do this if you have an MTM400A monitor, or an MTM400 monitor that has been upgraded to RUI version 3.x, and you want to use the previous version of the RUI.



---

**CAUTION.** *You must revert the RUI to version 3.0 before reverting to version 2.6.1. If you attempt to revert the RUI version directly from version 3.1 or above to version 2.6.1, the process may fail.*

---

As an alternative to using the RUI, you can use the command line firmware upgrade program supplied on the MTM400A Application Firmware CD-ROM, see page 24.



---

**CAUTION.** *If you have the GE option (GbE interface) installed, you must use the Command Line Firmware Upgrade process, page 24. For other interface options, you can use either upgrade process.*

---

## Requirements

To perform this procedure, you need the the following files:

RUI version 2.6.1 firmware file - MTM400 v2.6.1 build 03.hex

RUI version 3.0.060 firmware file - MTM400 v3.0.060 build 702.hex

These files are available on the Tektronix Web site ([www.tektronix.com/software](http://www.tektronix.com/software)). They are also provided on the application firmware CD that was shipped with your monitor:

- MTM400 (Tektronix part number 063-3719-07)
- MTM400A (Tektronix part number 063-4136-xx)

---

**NOTE.** *In this section the content of dialog boxes may change depending on the RUI version. However, the dialog box titles and the procedures described are accurate.*

---

## RUI Version 3.x to Version 3.0 Procedure

The process for reverting the firmware version of the instrument is initiated from the initial **Connect to MTM Device** dialog box.




**CAUTION.** To prevent software problems, do not open the Connect to MTM Device dialog box from the Connect button in the MTM400A RUI toolbar.

1. On a networked PC, launch Microsoft Internet Explorer.
2. In the Web browser address bar, enter the IP address or network name of the MTM400 or MTM400A monitor (see Figure 2), for example: <http://TSMonitor01> or <http://192.158.201.105>.


After you press the Enter key, a Java applet is downloaded from the the MTM400A monitor and launched.

3. In the Connect to MTM Device dialog box, select the **Administrator** Login Type from the drop-down list, and then enter the password.
4. Click **Upload Firmware** to open the Upload Device Firmware dialog box.

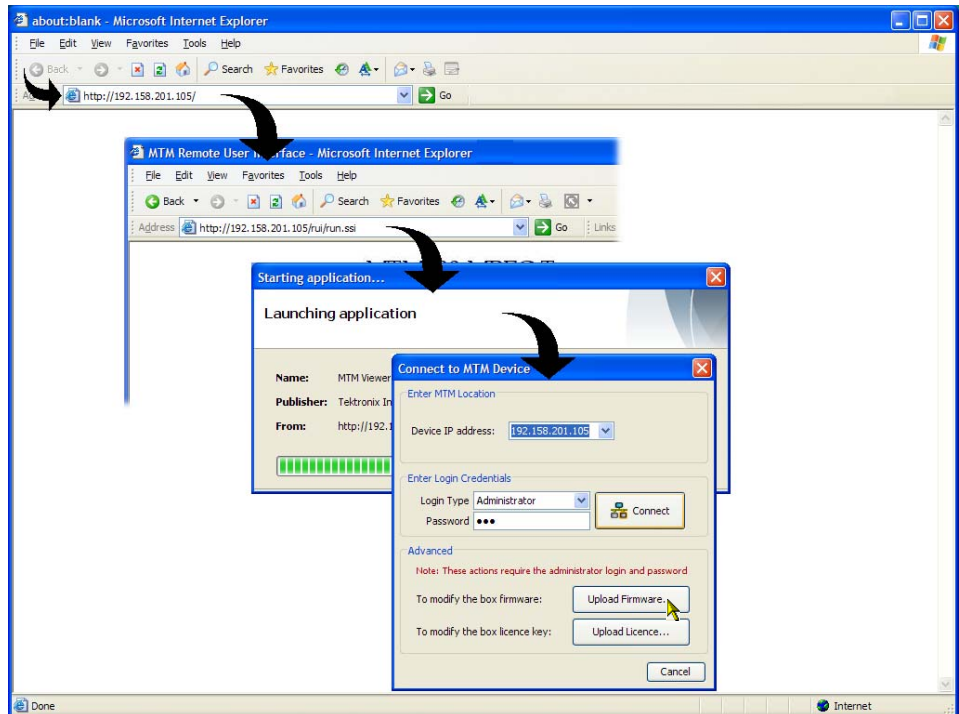

**Figure 2: Connecting to the instrument**

5. In the Upload Device Firmware dialog box (see Figure 3), enter the path and name of the firmware file or use the Browse button to locate and select the firmware file - MTM400 v3.0.060 build 702.hex.

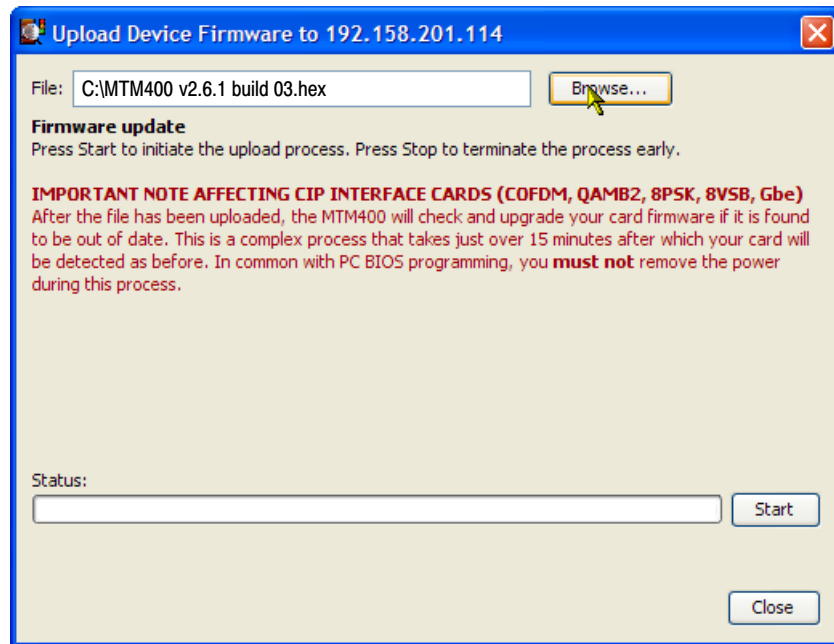


**Figure 3: Upload Device Firmware dialog box – typical**

6. In the Upload Device Firmware dialog box, click **Start** to initiate the firmware installation.
7. When the firmware upload is complete, a **Firmware upload complete** message is displayed (see Figure 4).

As stated in the message, the uploaded firmware will be checked, and if valid, reprogramming of the instrument will start. The reprogramming process can take up to fifteen minutes.



**CAUTION.** To prevent software problems, do not remove power from the instrument during reprogramming.

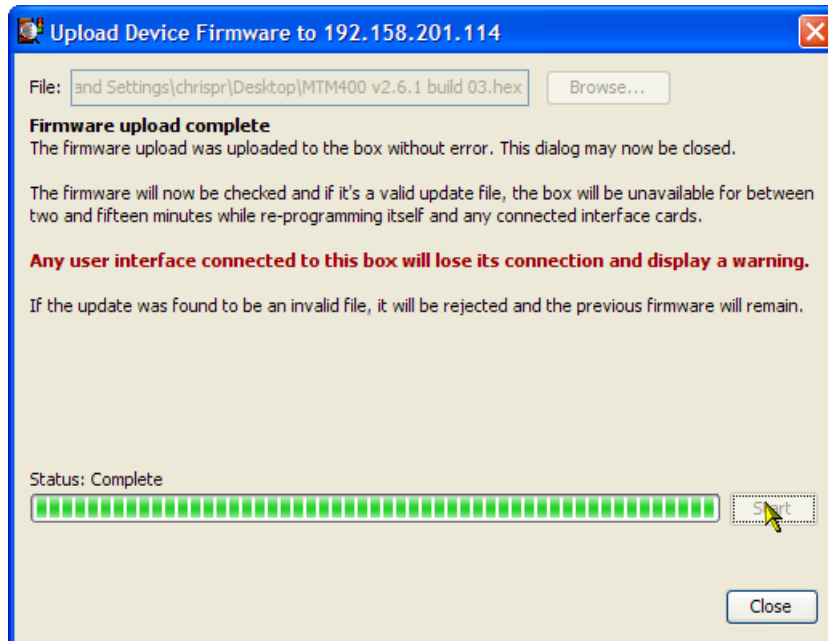

**Figure 4: Firmware upload complete message - typical**

8. When reprogramming is complete, close the RUI, and if necessary, close the associated Web browser window.

### **GbE Interface Confirmation**

If you are reverting the firmware to version 3.0 and you have a GbE card installed (Option GE), it will not be listed in the **Configure Interface** dialog box until the device (MTM400A) has been reset.

1. Allow sufficient time for the reprogramming to complete; this can be up to 30 minutes.
2. Open the RUI as described previously.
3. Select **Configuration** from the toolbar.
4. Select **Device > Reset Device** in the **Configuration** dialog box.

When complete, the GbE interface card option will be listed in the **Configure Interface** dialog box drop-down menu.




## RUI Version 3.0 to Version 2.6.1 Procedure


5. Repeat steps 1 to 8 using the RUI version 2.6.1 firmware file, MTM400 v2.6.1 build 03.hex.
6. Launch Microsoft Internet Explorer.

---

**NOTE.** Before the MTM400 RUI can be opened, you must disable the Java Runtime Environment in the Internet Explorer. If you attempt to open the MTM400 RUI before disabling the Java Runtime Environment, the following message will be displayed.

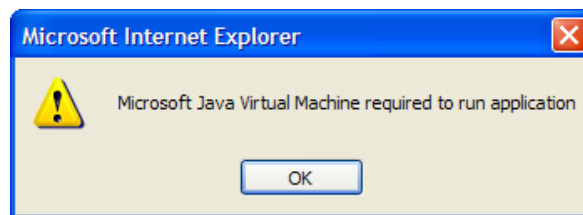

7. From the Internet Explorer menu bar, select **Tools > Internet Options...**, and then select the **Advanced** tab.
8. Locate the **Java (Sun)** node, and then clear the **Use JRE** check box (see Figure 5).

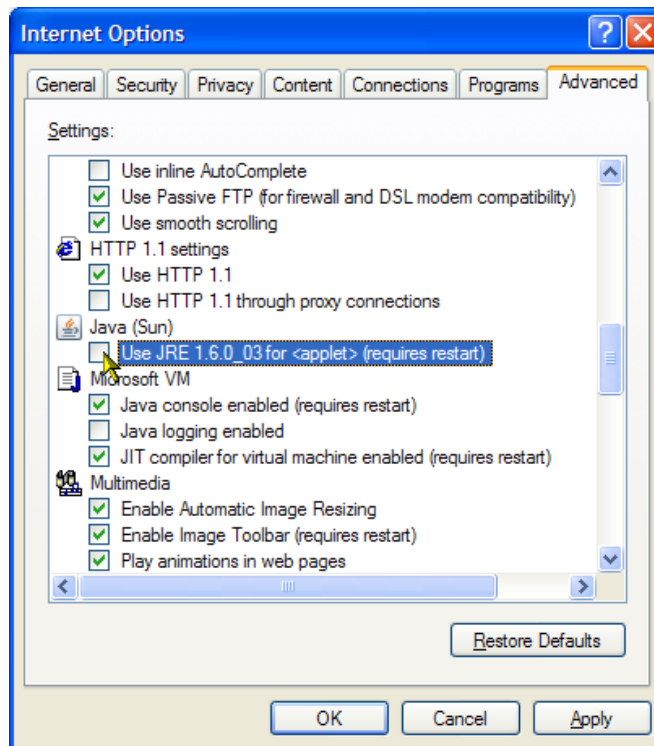

**Figure 5: Internet Options dialog box**

9. Close the Internet Options dialog box.
10. Close and restart Internet Explorer.
11. In the Web browser address bar, enter the IP address or network name of the MTM400 or MTM400A monitor.

---

**NOTE.** After you have disabled the Java Runtime Environment, if you still receive the message (Microsoft Java Virtual Machine required to run application), you may need to reinstall the Microsoft Virtual Machine. This is available on the Internet or from the support folder on the MTM400A monitor application firmware CD, Tektronix part number 063-4136-00.

---

12. In the Logon Details dialog box (see Figure 6), select the user type from the drop-down list, and enter the password.

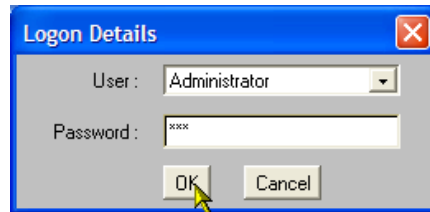


Figure 6: Login Details dialog box

13. The MTM400 RUI hot spot and Stream Summary windows should now be displayed (see Figure 7).

**NOTE.** If the instrument on which you reverted the firmware version was an MTM400A monitor, and especially if the login password was changed from the factory default value, the RUI v2.6.1 may be inaccessible. In this situation, you must clear the NVRAM and reassign the IP address of the instrument. The procedure to perform that task is located in the Installation section of the MTM400A Quick Start User Manual, Tektronix part number 071-2492-xx.

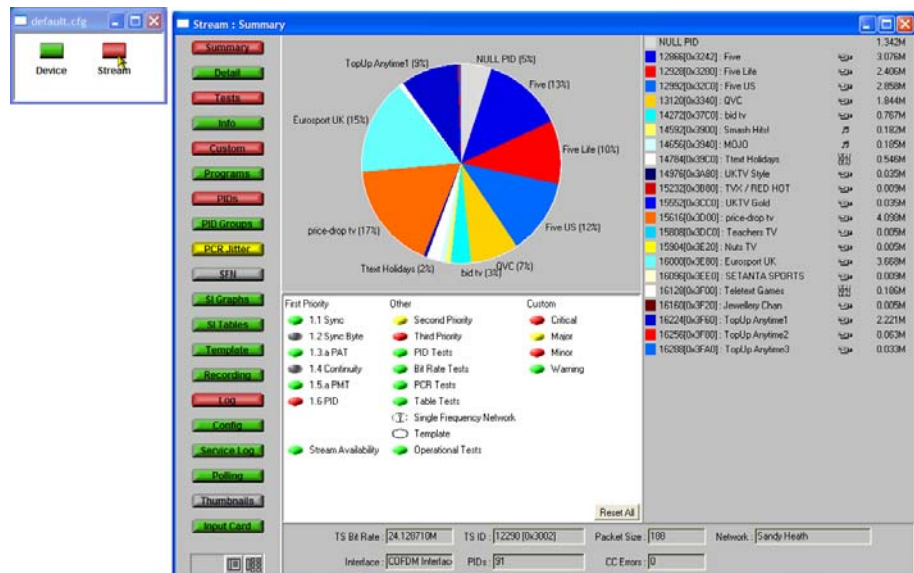


Figure 7: RUI version 2.6.1 display

## Command Line Firmware Downgrade

An alternative to downgrading the firmware using the MTM400A RUI is by using the command line firmware upgrade program supplied on the MTM400A Application Firmware CD-ROM.

Use the following steps to downgrade the firmware from the command line:

1. Ensure that the MTM400A instrument is powered on.
2. Ensure that the PC is connected to the same network as the MTM400A instrument.
3. Ensure that the firmware upgrade file(s) is available; refer to *Requirements*, page 17. You are advised to copy these files to a temporary directory on the PC's hard drive.
4. At the PC, insert the MTM400A Application Firmware CD-ROM into the CD-ROM drive. You are advised to locate the upgrade program, `mtmfwu-loader.exe`, and copy it to the temporary directory containing the firmware upgrade file(s).
5. From the Windows desktop, open the Command window, **Start > Run > cmd**.
6. In the command window, change to the temporary directory containing the upgrade program and the upgrade files.
7. Enter the program command in the following format:  
    `mtmfwu-loader <mtm address> <firmware file>`  
for example,  
    `mtmfwu-loader 123.345.567.789 "mtm400 v3.0.060 build 702.hex"`

---

**NOTE.** When the firmware upload file name has spaces in it, enclose the name in quotation marks, as shown in this example.

---

8. Execute the command by pressing the Enter key on your keyboard.

The firmware upload program will run. When complete, the following message will be displayed:

**MTM400 and interface card is programmed now.**

```

C:\WINDOWS\system32\cmd.exe
C:\MTM400 Up Down\Up_down>mtmfwuploader
Usage: UploadFirmware <mtm address> <firmware file> [force <optional: to force c
ip card upgrade>] [changeinput <to change input while uploading>]

C:\MTM400 Up Down\Up_down>mtmfwuploader 192.158.201.89 "mtm400 v3.0.060 Build 70
2.hex"
Generating Compressed File... Done
Calculating CRC... Done
Uploading Compressed File <forced card upgrade=false>
 0%... 10%... 20%... 30%... 40%... 50%... 60%... 70%... 80%... 90%...
100%... Done
Deleting Compressed File.. Done
Waiting for interface card programming to complete <Percentage longest case: Gbe
~ 100%, RF cards ~ 30%, No card 10%>
5%... Done
Interface card programming complete - programming MTM400 now
0%... 24%... 48%... 72%... 96%... MTM400 and interface card is programmed now
C:\MTM400 Up Down\Up_down>

```

The firmware upload is complete.

---

**NOTE.** When downgrading from RUI Version 3.x to Version 3.0, you must refer to GbE Interface Confirmation, page 20, before attempting to select the GbE interface card (Option GE).

---



---

**NOTE.** When downgrading from RUI Version 3.0 to Version 2.6.1, you must disable the Java Runtime Environment in the Internet Explorer, see step 6, page 21, to step 10, page 22.

---

## Troubleshooting

The progress indicator following the “Waiting for interface programming to complete” message, may go beyond 100%. If this happens, note the following steps:

1. Ensure that the signal input is disconnected and retry the process.
2. Observe the SFP LINK LED on the GbE interface card rear panel.




---

**CAUTION.** If, with no input, the SFP LINK LED stays lit, rebooting the instrument could result in firmware corruption.

---

3. If the LED is still lit after 15 minutes, then a reboot, by removing and reinstating power, can be tried.
4. If the upgrade is still unsuccessful, contact Tektronix support ([www.tek.com](http://www.tek.com)).

## RUI v2.6.1 Product Documentation

You can download the latest versions of the user documentation for the RUI v2.6.1 listed in Table 4 from the Tektronix Web site ([www.tektronix.com](http://www.tektronix.com)).

**Table 4: RUI v2.6.1 product documentation**

Document	Tektronix part number
User manual	071-1224-xx (English) 071-1538-xx (Japanese)
Technical reference	071-1560-xx
Release notes	071-1564-xx

## RUI v3.0 Product Documentation

You can download the latest versions of the user documentation for the RUI v3.0 listed in Table 5 from the Tektronix Web site ([www.tektronix.com](http://www.tektronix.com)).

**Table 5: RUI v2.6.1 product documentation**

Document	Tektronix part number
Quick Start User manual	071-2492-xx (English) 071-2493-xx (Japanese)
Technical reference	071-2495-xx
Release notes	071-2494-xx