

# Simulink<sup>®</sup> Response Optimization

**For Use with Simulink<sup>®</sup>**

- Modeling
- Simulation
- Implementation

Getting Started

*Version 2*



## How to Contact The MathWorks:



www.mathworks.com      Web  
comp.soft-sys.matlab      Newsgroup



support@mathworks.com      Technical Support  
suggest@mathworks.com      Product enhancement suggestions  
bugs@mathworks.com      Bug reports  
doc@mathworks.com      Documentation error reports  
service@mathworks.com      Order status, license renewals, passcodes  
info@mathworks.com      Sales, pricing, and general information



508-647-7000      Phone



508-647-7001      Fax



The MathWorks, Inc.      Mail  
3 Apple Hill Drive  
Natick, MA 01760-2098

For contact information about worldwide offices, see the MathWorks Web site.

### *Getting Started with Simulink Response Optimization*

© COPYRIGHT 2004–2005 The MathWorks, Inc.

The software described in this document is furnished under a license agreement. The software may be used or copied only under the terms of the license agreement. No part of this manual may be photocopied or reproduced in any form without prior written consent from The MathWorks, Inc.

**FEDERAL ACQUISITION:** This provision applies to all acquisitions of the Program and Documentation by, for, or through the federal government of the United States. By accepting delivery of the Program or Documentation, the government hereby agrees that this software or documentation qualifies as commercial computer software or commercial computer software documentation as such terms are used or defined in FAR 12.212, DFARS Part 227.72, and DFARS 252.227-7014. Accordingly, the terms and conditions of this Agreement and only those rights specified in this Agreement, shall pertain to and govern the use, modification, reproduction, release, performance, display, and disclosure of the Program and Documentation by the federal government (or other entity acquiring for or through the federal government) and shall supersede any conflicting contractual terms or conditions. If this License fails to meet the government's needs or is inconsistent in any respect with federal procurement law, the government agrees to return the Program and Documentation, unused, to The MathWorks, Inc.

### **Trademarks**

MATLAB, Simulink, Stateflow, Handle Graphics, Real-Time Workshop, and xPC TargetBox are registered trademarks of The MathWorks, Inc.

Other product or brand names are trademarks or registered trademarks of their respective holders.

### **Patents**

The MathWorks products are protected by one or more U.S. patents. Please see [www.mathworks.com/patents](http://www.mathworks.com/patents) for more information.

**Revision History**

June 2004	Online only	New for Version 2.0 (Release 14) (Renamed from <i>Nonlinear Control Design Blockset User's Guide</i> )
October 2004	Online only	Revised for Version 2;1 (Release 14SP1)
March 2005	Online only	Revised for Version 2.2 (Release 14SP2)
September 2005	Online only	Revised for Version 2.3 (Release 14SP3)



## Introduction

1

<b>What Is Simulink Response Optimization?</b> .....	1-2
Applications .....	1-2
<b>System Requirements</b> .....	1-4
<b>Upgrading from the Nonlinear Control Design Blockset</b> .....	1-4
<b>Using the Documentation</b> .....	1-5
Expected Background .....	1-5
How to Use This Guide .....	1-5
Online Documentation .....	1-5

## Response Optimization Tutorial

2

<b>Quick Start</b> .....	2-2
<b>Simple Control Design Example</b> .....	2-4
Simulink Response Optimization Startup .....	2-4
Adjusting Constraints .....	2-5
Specifying Tuned Parameters .....	2-8
Running the Optimization .....	2-10
Tracking a Signal .....	2-12
Adding Uncertainty .....	2-15
Saving the Project .....	2-18
<b>Physical Modeling Example</b> .....	2-20
Opening the Hydraulic Cylinder Model .....	2-20
Adjusting Constraints .....	2-22

Specifying Tuned Parameters .....	2-26
Running the Optimization .....	2-27
Changing Optimization Settings .....	2-28
Finding a Maximally Feasible Solution .....	2-31

## Response Optimization Using Functions

### 3

<b>Control Design Example Using Functions .....</b>	<b>3-2</b>
Choosing Signals to Constrain .....	3-2
Creating an Optimization Project .....	3-2
Properties of a Response Optimization Project .....	3-4
Running the Optimization .....	3-10

## Troubleshooting

### 4

<b>Common Questions About Response Optimization ....</b>	<b>4-2</b>
Questions .....	4-2

## Examples

### A

<b>Introductory Examples .....</b>	<b>A-2</b>
------------------------------------	------------

## Index

# Introduction

---

What Is Simulink Response Optimization? (p. 1-2)

System Requirements (p. 1-4)

Upgrading from the Nonlinear Control Design Blockset (p. 1-4)

Using the Documentation (p. 1-5)

Introduction to the key features of Simulink® Response Optimization

Required and related products

Information on upgrading NCD models for use with Simulink Response Optimization

Expected background, how to use this guide, and other documentation sources

## What Is Simulink Response Optimization?

Simulink® Response Optimization provides a graphical user interface (GUI) to assist in tuning and optimization of control systems and physical systems. With this product, you can tune parameters within a nonlinear Simulink model to meet time-domain performance requirements by graphically constraining signals within a time-domain window or tracking and closely matching a reference signal. You can tune any number of Simulink variables including scalars, vectors, and matrices. In addition, you can place uncertainty bounds on other variables in the model for robust design. Simulink Response Optimization makes attaining performance objectives and optimizing tuned parameters an intuitive and easy process.

To use Simulink Response Optimization, you need only to include a special block, the Signal Constraint block, in your Simulink diagram. Just connect the block to any signal in the model to signify that you want to place some kind of constraint on the signal. Simulink Response Optimization automatically converts time-domain constraints into a constrained optimization problem and then solves the problem using optimization routines taken from the Optimization Toolbox or the Genetic Algorithm and Direct Search Toolbox. The constrained optimization problem formulated by Simulink Response Optimization iteratively calls for simulations of the Simulink system, compares the results of the simulations with the constraint objectives, and uses gradient methods to adjust tuned parameters to better meet the objectives.

Two additional blocks, CRMS and DRMS, compute the continuous and discrete cumulative root mean square values of signals. Use them with the Signal Constraint block to optimize the cumulative root mean square of signals in your model.

### Applications

You can use Simulink Response Optimization for a variety of applications. Possible uses include

- Designing and optimizing control systems by tuning gains.
- Designing physical systems by adjusting parameters in your system. For example, adjust the dimensions of physical devices such as robot arms or



hydraulic pistons, tune properties of materials such as thermal emissivity, etc.

- Closely tracking a reference, or desired, signal.
- Optimizing responses for systems that include physical actuation limits and constraints on state/variable values.
- Minimizing the energy in a system by minimizing the root-mean-square signal.
- Including uncertainty in your parameter values to take into account imperfect knowledge of certain physical parameters in your model.

## **System Requirements**

Simulink Response Optimization has the same system requirements as MATLAB®. Refer to the MATLAB documentation for details. For a list of required and related products, see the Simulink Response Optimization product page on the MathWorks Web site at <http://www.mathworks.com/products/simresponse/>.

## **Upgrading from the Nonlinear Control Design Blockset**

Simulink Response Optimization replaces the Nonlinear Control Design (NCD) Blockset. For information on upgrading from the Nonlinear Control Design Blockset, refer to the Release Notes. In addition, the `ncdupdate` reference page has detailed information on updating NCD models.

# Using the Documentation

## Expected Background

Users of this guide should be familiar with dynamic systems design and analysis, and have experience creating Simulink models.

## How to Use This Guide

**To get started using Simulink Response Optimization**, read Chapter 2, “Response Optimization Tutorial” which introduces the main product features and uses two simple examples to describe their use.

**To perform response optimization using functions**, read Chapter 3, “Response Optimization Using Functions”.

**For advice on solving typical problems**, read Chapter 4, “Troubleshooting”.

**If you are upgrading from the Nonlinear Control Design (NCD) Blockset**, read the Release Notes to learn about new features and how to convert your NCD models for use with Simulink Response Optimization.

## Online Documentation

Further documentation is available online, including function and block references, and detailed discussions on setting up and running a response optimization.



# Response Optimization Tutorial

---

You can use Simulink Response Optimization to solve a wide variety of control and physical design problems by inserting Signal Constraint blocks in your model and using the graphical user interface (GUI) to specify constraints on these signals. You can specify tuned and uncertain parameters as well as optimization settings. To get started with Simulink Response Optimization, work through the two examples in this chapter.

Quick Start (p. 2-2)

A brief outline of the response optimization process

Simple Control Design Example  
(p. 2-4)

An example that tunes a single system parameter to optimize a response signal

Physical Modeling Example (p. 2-20)

An example that tunes multiple system parameters to optimize multiple response signals

### Quick Start


If you would like to get started using Simulink Response Optimization quickly, this section gives a quick outline of the response optimization process:

- 1** Make a model of your (nonlinear) system and controller using Simulink. Add input signals (e.g., steps, ramps, observed data) for which you know what the desired output should look like.
- 2** Attach a Signal Constraint block to the signals you want to constrain. The Simulink library `srolib` contains the Signal Constraint block. To open the library, just type `srolib` at the MATLAB prompt or select **Simulink Response Optimization** from the Simulink Library Browser.
- 3** If the model's parameters do not already exist in the MATLAB workspace, initialize these parameters in the workspace with a best first guess.
- 4** Double-click on each Signal Constraint block in your system to display the Signal Constraint window for each constrained output. Choose a method for constraining the response signal by selecting **Enforce signal bounds** and/or **Track reference signal** at the bottom of the window.
- 5** Within the Signal Constraint window, constrain each signal by positioning constraint bound segments and/or tracking a reference signal. You can position constraint bound segments by clicking and dragging the segment or right clicking on the segment and selecting **Edit** from the menu. Plot reference signals by selecting **Goals > Desired Response** in the Signal Constraint window and entering vectors of data for the reference signal.
- 6** Open the Tuned Parameters dialog by selecting **Optimization > Tuned Parameters** within a Signal Constraint window. Click the **Add** button to add parameters to the list. Select a parameter in the list to specify initial guesses and maximum and minimum values.
- 7** Optional: Open the Uncertain Parameters dialog by selecting **Optimization > Uncertain Parameters** within a Signal Constraint window. Click the **Add** button to add parameters to the list. Choose a method and range for sampling the uncertain parameters and select which responses to optimize.

- 8 Optional: Save the project, including constraints, tuned parameters, uncertain parameters, and settings for optimization and simulation, to a file, to the MATLAB workspace, or to the model workspace by selecting **File > Save**. You can retrieve previously saved projects by selecting **File > Load**. To automatically save and reload the project with the Simulink model, select the check box at the bottom of the Save dialog. Note that when saving the project, you are saving the *entire* optimization project, which might include several Signal Constraint blocks.
- 9 Click the Start button in the toolbar or select **Start** from the **Optimization** menu to optimize the response signal by adjusting the tuned parameters. The Optimization Progress window displays the new, optimized parameter values.

## Simple Control Design Example

Simulink Response Optimization uses time-domain constraint bounds to represent lower and upper bounds on response signals. You can stretch, move, split, or open constraint bounds in a variety of ways that are explained here and in the online documentation. This section guides you through an example of how you might perform control design using Simulink Response Optimization. In this section, you will constrain a parameter to control a second order SISO system via integral action, shown in the diagram below.

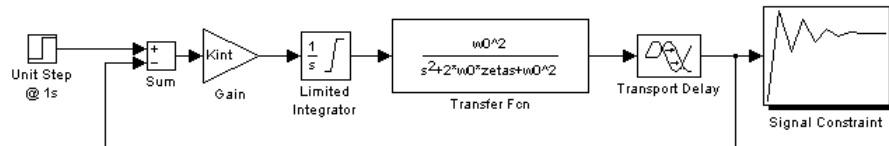

Specifically, the integral gain (Kint) should ensure that the closed loop system meets or exceeds the following performance specifications when you excite the system with a unit step input:

- A maximum 10 percent overshoot
- A maximum 10 second rise time
- A maximum 30 second settling time

Because of the actuator limits and system transport delay, standard linear control design techniques may not yield reliable results.

### Simulink Response Optimization Startup

The Simulink model srotut1 contains the system shown above. Open the system by typing srotut1 at the MATLAB prompt.

You do not need to remodel any of your present Simulink systems to use Simulink Response Optimization. You need simply to


- Attach a Signal Constraint block to all signals you want to constrain. In srotut1, a Signal Constraint block (square block with a step response icon) is attached to the plant output.




- Add input signals to the system, for which you know what the output should look like. In `srotut1`, the input is a step since the desired step response characteristics of the system are known.
- Change the model's **Stop time** to the desired value. In `srotut1`, the step response should settle within 30 seconds, so simulating for 50 seconds allows the step to go to completion. Since optimization with Simulink Response Optimization calls for many simulations of the system, you should make the simulation time as short as possible, but long enough to show dynamics of interest. You can change the **Start time** and **Stop time** through the Simulink Simulation Parameters dialog by selecting **Simulation > Configuration Parameters**.

## Adjusting Constraints

To open the Simulink Response Optimization Signal Constraint window, double-click on the Signal Constraint block. The window, shown in the following figure, contains an amplitude versus time axis with default upper and lower constraint bounds. To optimize the tuned parameters so that the response signal lies within the constraint bound segments, select the **Enforce signal bounds** check box at the bottom of the window.

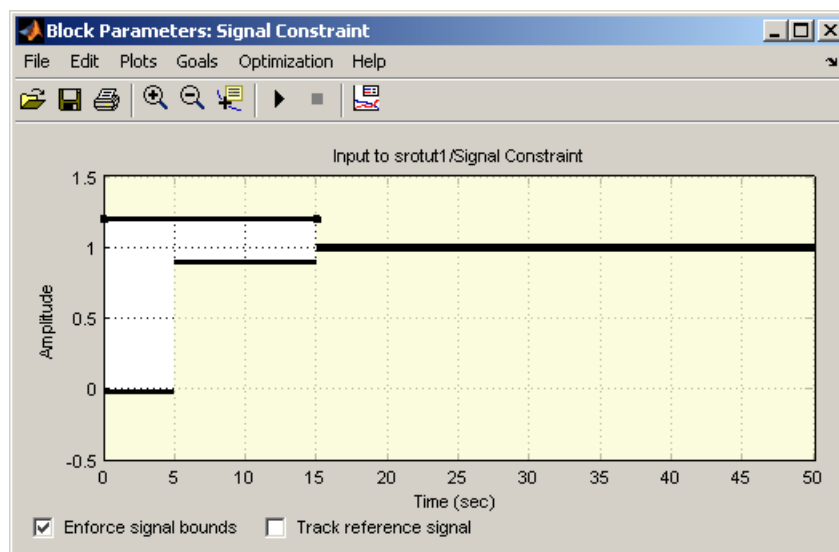


The lower and upper constraint bounds define a channel within which the signal response should lie. The default constraints effectively define a rise time of 5 seconds and a settling time of 15 seconds. These bounds must change to reflect the performance requirements proposed in the beginning of this section. To adjust the rise time constraint, position the mouse over the endpoint of the lower bound constraint that ends at 5 seconds. Press and hold down the (left) mouse button. The arrow should turn to a hand symbol as shown below.

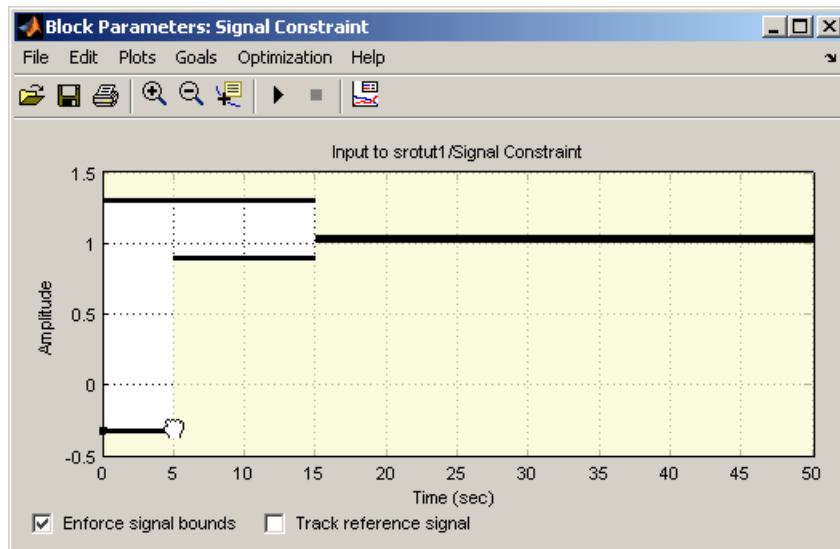


In this mode, you can change the time boundary between two constraints as well as change the slope of constraints. While still holding the mouse button down, drag the constraint boundary to the right. Release the mouse button after positioning the boundary as close as possible to 10 seconds. You may find it helpful to enable axis gridding while placing constraints. To turn axis gridding on or off, right-click anywhere within the white space of the Signal Constraint window and select **Grid** from the menu. If you need to precisely place constraint-bound segments, use the Edit Constraint dialog, which appears when you right-click on a constraint-bound segment and select **Edit** from the menu. See the online documentation for more information on the Edit Constraint dialog. Alternatively, to ensure that the constraint remains perfectly horizontal (or vertical), you can press and hold down the **Shift**

key while clicking and dragging the constraint segment. This causes the constraint segment to *snap* to the horizontal (or vertical).

To adjust the overshoot constraint, press and hold the (left) mouse button somewhere in the middle of the upper bound constraint bound segment that extends from 0 to 15 seconds. Notice that the pointer becomes a four way arrow. In this mode, you can drag the entire constraint edge anywhere within the axes. While still holding the mouse button down, drag the constraint until its lower boundary is at a height of 1.1 as shown below.

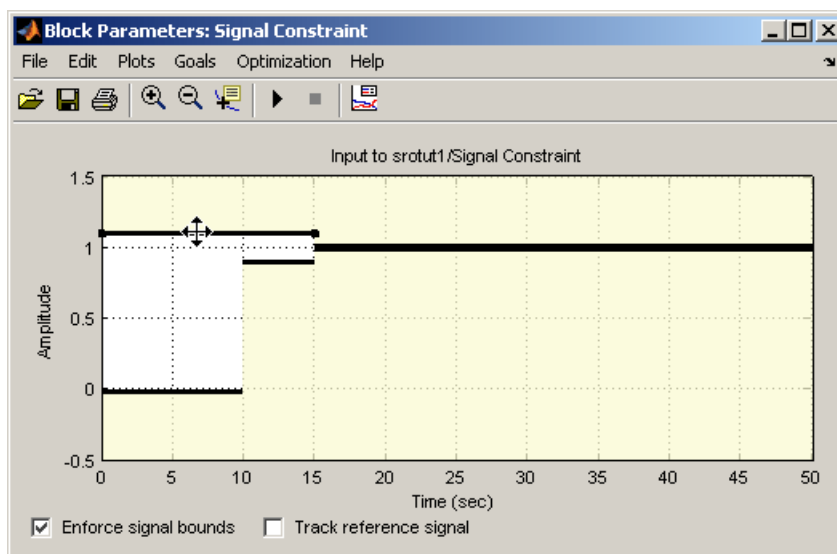

Finally, the settling time constraints require adjustment. Position the mouse button on the right edge of the lower constraint edge extending from 10 to 15 seconds. Press and hold down the (left) mouse button and notice that the constraint becomes selected and that the pointer changes to a hand symbol. In this mode, you can stretch the end of the constraint or change its angle. While still holding the mouse button down, drag the constraint so that the settling-time constraint begins at 30 seconds. Adjust the upper bound constraint so that it too defines a 30 second settling-time constraint. The constraint figure should now look the one shown below.

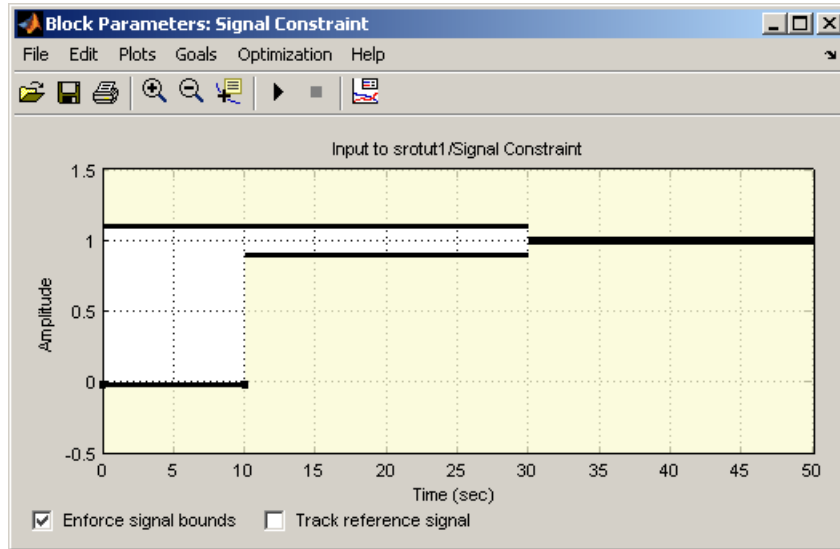


Alternatively, you could set the signal constraints using the Desired Response dialog by selecting **Goals > Desired Response** from the Signal Constraint window. For more information on setting signal constraints, see the online documentation.

### Specifying Tuned Parameters

Before beginning the optimization, you must tell Simulink Response Optimization which variables the optimization should tune. Open the Tuned Parameters dialog by selecting **Optimization > Tuned Parameters** within the Signal Constraint window. Add the parameter **Kint** to the **Tuned parameters** list by clicking the **Add** button. This opens the Select Parameters dialog with a list of all model parameters that are currently in the workspace.



Select Kint in this list and click **OK**. This adds Kint to the **Tuned parameters** list as shown in the following figure.

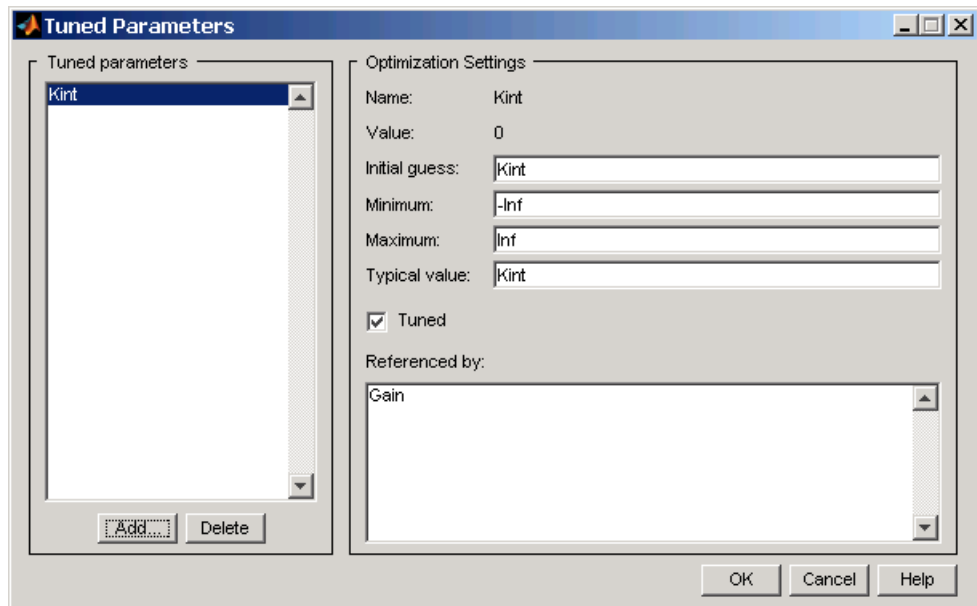


To display the optimization settings for this parameter, click on Kint in the **Tuned parameters** list. The settings appear under **Optimization settings** on the right. To constrain Kint to be positive, enter 0 as the **Minimum** value. For more information on the various tuned parameter settings, see the online documentation.

## Running the Optimization


After adjusting the constraint bounds in the Signal Constraint window and specifying the tuned parameters using the Tuned Parameters dialog, you are ready to begin the optimization. You can start an optimization by clicking the Start button in the Signal Constraint window or by selecting **Optimization > Start**.

Simulink Response Optimization automatically converts the constraint bound data and tuned parameter information into a constrained optimization problem that it solves using functions from the Optimization Toolbox or the Genetic Algorithm and Direct Search Toolbox. It attempts to satisfy the constraints on the response signals by adjusting the tuned parameters. The results of each iteration appear in the Optimization Progress window shown in the following figure. The number of iterations necessary for the optimization to converge or terminate, will depend on the initial guess for the tuned parameters, the specific positioning of the constraints, and the optimization settings.

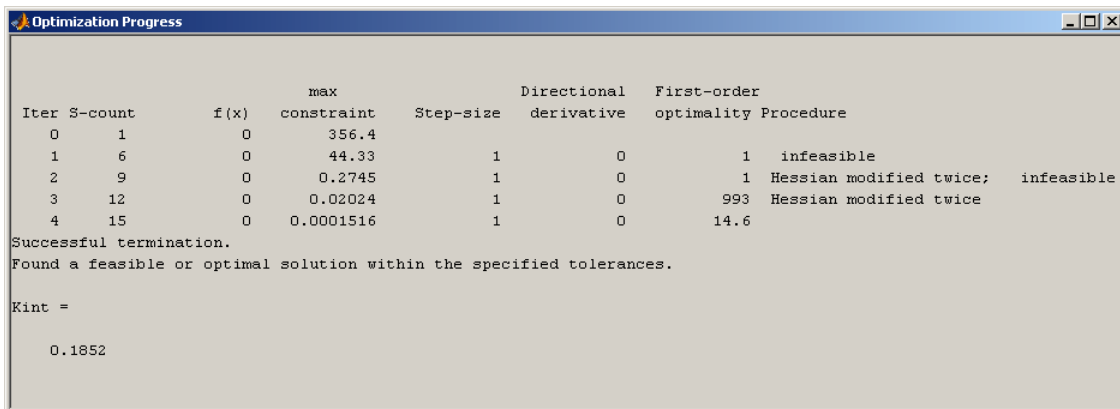

In this case the optimization converges after four iterations. For more information about the results shown in the Optimization Progress window, see the online documentation.

The Signal Constraint window, shown in the following figure, plots the responses at each iteration.

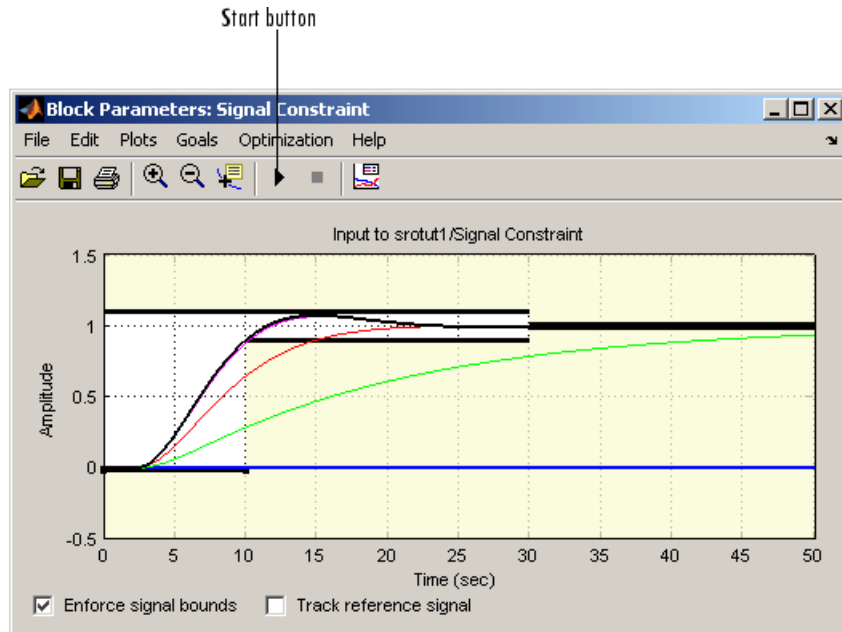


The blue line shows the initial response and the black line shows the current, or final, response. As you can see, the final response signal lies within the constraint bounds.

The new value of the tuned parameter  $K_{int}$  appears in the Optimization Progress window and is also changed in the MATLAB workspace. In this case the new value of  $K_{int}$  is 0.1852

Because of different numerical precision, the results of the optimization may differ slightly across different platforms.

## Tracking a Signal

In addition to constraining the signal by constraint bounds, you can constrain the signal by requiring it to closely match a reference signal. To do this, select the **Track reference signal** option at the bottom of the Signal Constraint window. To enter the reference signal, select **Goals > Desired Response**. This displays the Desired Response dialog, as shown in the following figure.

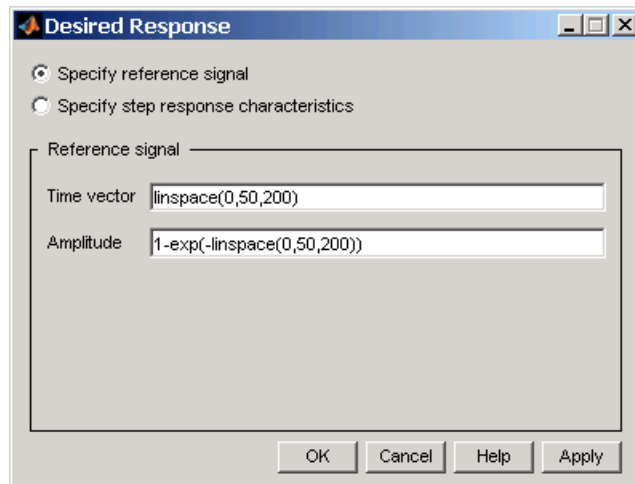


For this example, use the reference signal given by


$$y = 1 - e^{-t}$$

Enter time and amplitude vectors for the reference signal in the Desired Response dialog as shown above, and then click **OK**. This displays the following plot in the Signal Constraint window. Note, to remove the plots of the optimized response signals, as was done in the figure, select **Plots > Clear Plots**.




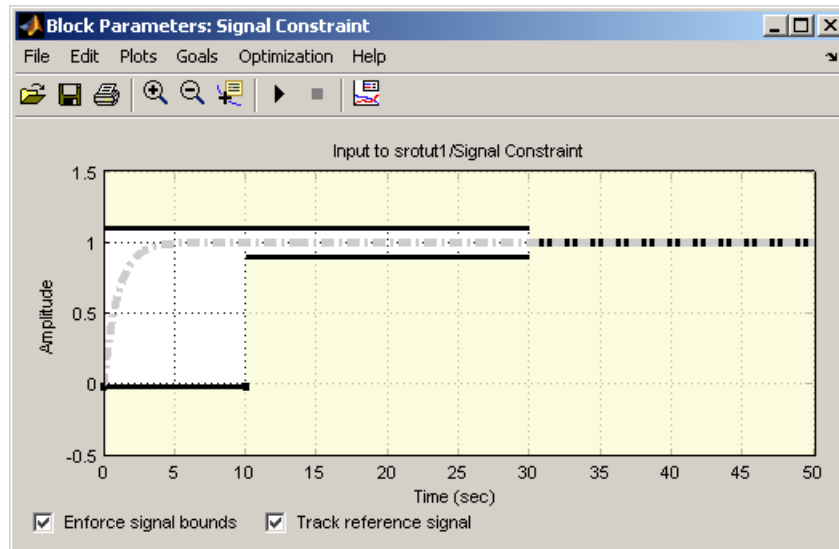


Before running the optimization, change the function tolerance to 0.01 within the Options dialog. This ensures that the new objective function meets the imposed tolerances. To do this, open the Options dialog by selecting **Optimization > Optimization Options** from the menu in the Signal Constraint window and then change the **Function tolerance** value to 0.01 within the **Optimization Options** pane of the Options dialog, as shown in the following figure.

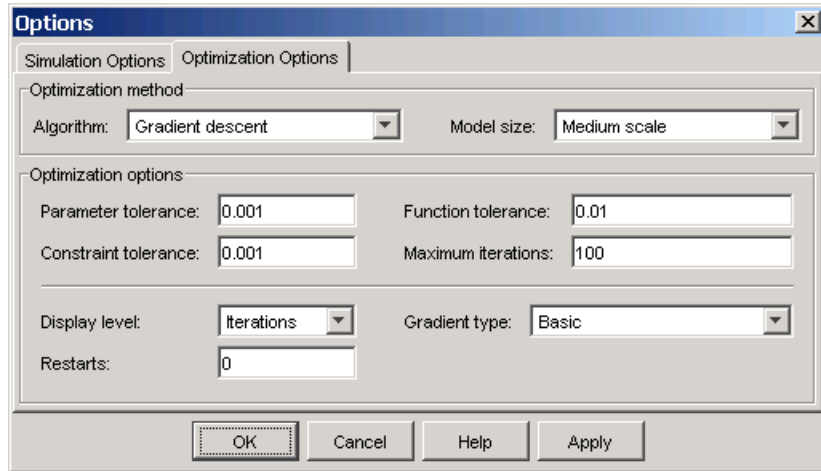

To run the optimization, select **Optimization > Start** or use the Start button on the toolbar in the Signal Constraint window. The results, shown below, are similar to the previous ones when only constraint bounds were used.

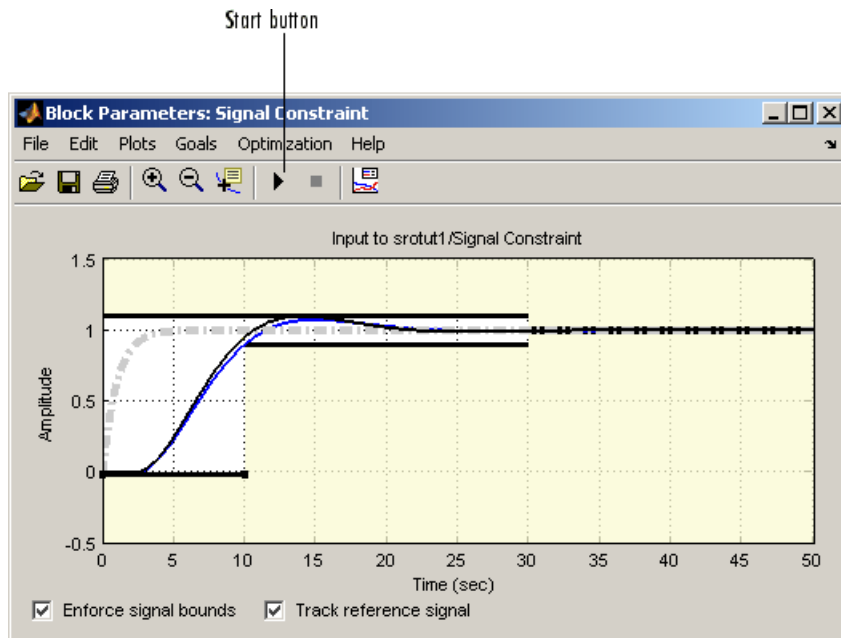

The Optimization Progress window shows the final value of Kint.

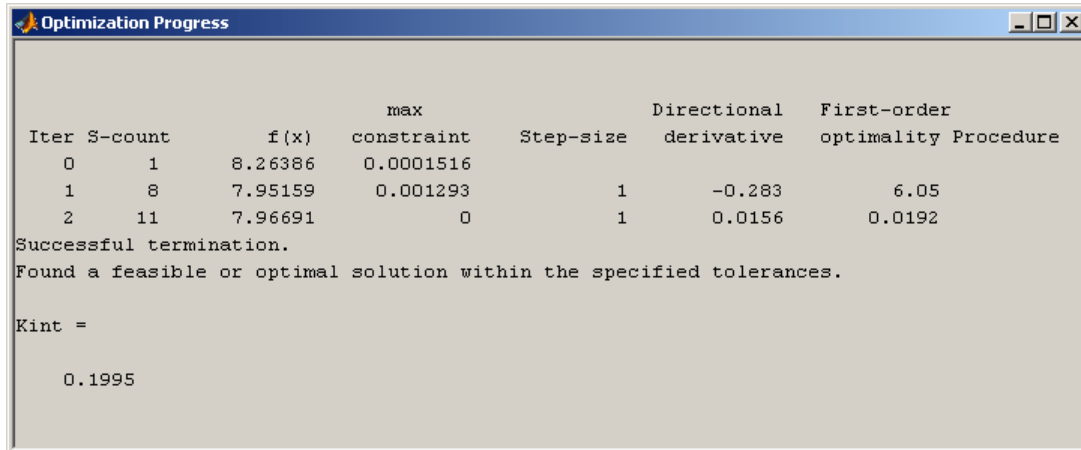


Before proceeding to the next section, make sure to clear the **Track reference signal** option at the bottom of the Signal Constraint window.

## Adding Uncertainty

In your particular problem, you might not have a precise plant model. Instead you might know what the nominal plant should be and have some idea of the uncertainty inherent in various components of the plant. For example, assume that the plant parameter  $\zeta$  varies 5% about its nominal value and  $w_0$  varies between 0.7 and 1.45.


Simulink Response Optimization allows you to optimize response signals in the face of this uncertainty by specifying uncertainty in parameter values.

Open the Uncertain Parameters dialog by selecting **Optimization > Uncertain Parameters** in the Signal Constraint window. To add  $\zeta$  and  $w_0$  as uncertain parameters, click the **Add** button, which displays the Select Parameters dialog. This dialog contains all parameters from the model that are currently in the workspace and are *not* selected as tuned parameters. Select  $\zeta$  and  $w_0$  in this list, and then click **OK**.

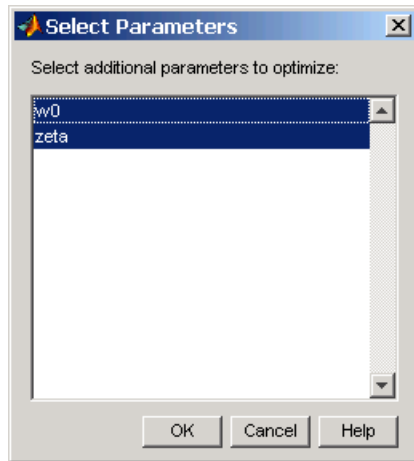

The parameters appear within the Uncertain Parameters dialog with their default uncertainty settings. Their nominal values are the current parameter values, and the uncertainty range is 10% on either side of the nominal value.

Change the uncertainty ranges to those given previously: 0.95 to 1.05 for zeta and 0.7 to 1.45 for  $w_0$ . The Uncertain Parameters dialog should now look like that in the following figure.

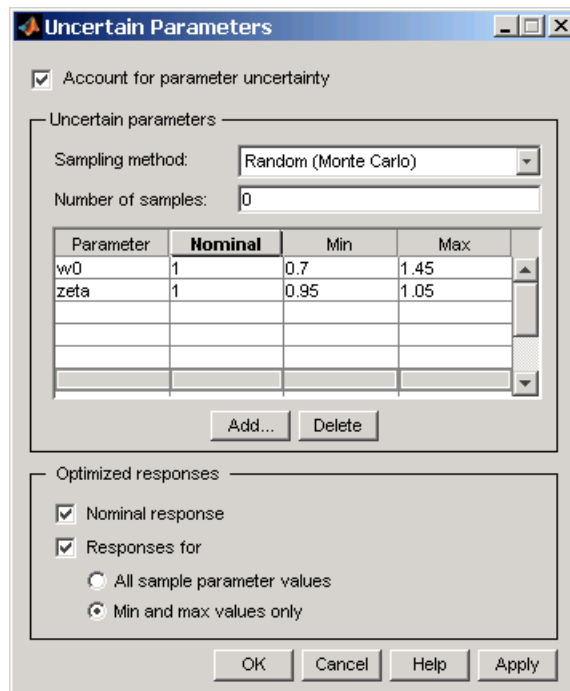


In this example, the sampling method for uncertainty is Random (Monte Carlo). The other choice is Grid in which case you would enter a vector of sample values for each parameter instead of minimum and maximum values. The number of samples indicates how many parameter value combinations to use other than the nominal, minimum, and maximum values.

By default, Simulink Response Optimization optimizes the nominal response along with all responses corresponding to combinations of minimum and maximum values of  $w_0$  and  $zeta$  (five responses total). To speed up to optimization you can optimize the nominal response only. To include more uncertainty, you can optimize all sample parameter values. Select which responses to optimize in the **Optimized responses** section of the Uncertain Parameters dialog. If you choose not to optimize all uncertain responses, you can still use them for analysis by plotting them in the Signal Constraint window after the optimization. For more information on specifying uncertainty in your models, see the online documentation.

Click **OK** to save your uncertain parameter information, and then run the optimization again.

Simulink Response Optimization plots the uncertain responses as dashed lines. This time, the optimization does not find a feasible solution due to the uncertain response signals violating the constraints as shown in the following figure.

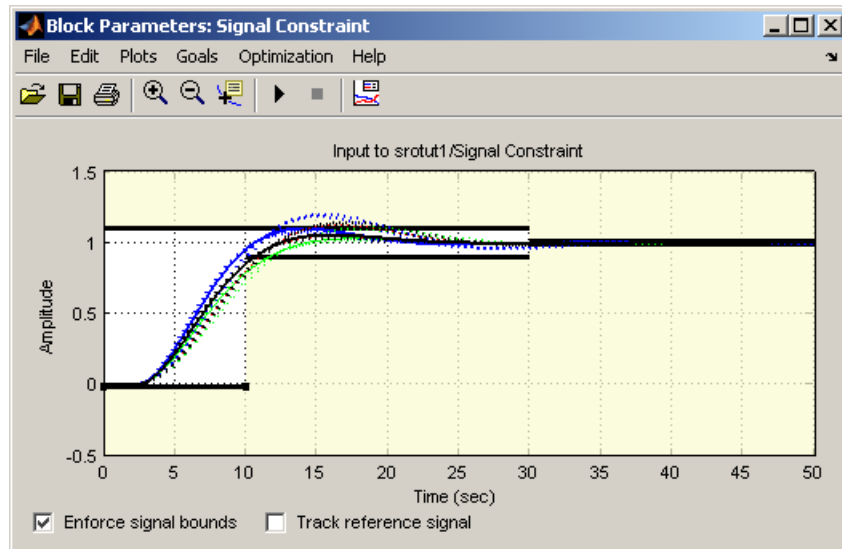

To get the optimization to converge, you might try a different initial guess, relax the constraints slightly, or change the uncertain parameter values. If the uncertain response signals do not violate the constraints by a large amount, the result might be acceptable for your design needs.


To turn off the uncertain response plots, right-click within the figure axes and select **Show > Uncertainty**. Turn them back on again by repeating this step. To clear all plots, right-click within the figure axes and select **Clear plots**.

### Saving the Project

A response optimization project includes the constraints (from all Signal Constraint windows in the model), tuned parameter settings, uncertain

parameter settings, and settings for the optimization and simulation. After creating a project, you can save it for later use.

To save this project, select **File > Save** in the Signal Constraint window. This opens the Save Project dialog as shown below.

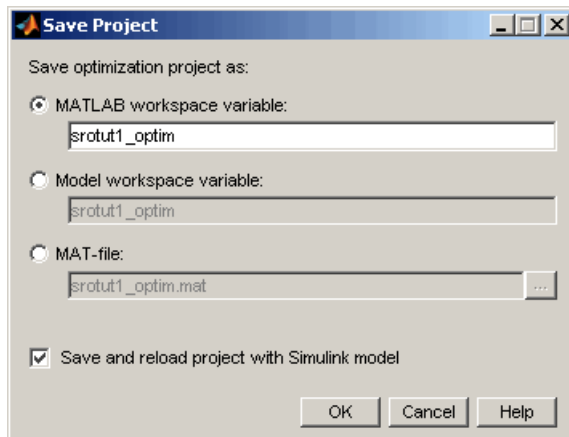

You can save the project to either a MATLAB workspace variable, model workspace variable, or a MAT-file. By selecting the **Save and reload project with Simulink model** option, the project will automatically reload when you reopen the model. If the model cannot find the saved project when you reopen it, it gives a warning.

For more information on saving and reloading projects, see the online documentation.

## Physical Modeling Example

The following example demonstrates further techniques for using Simulink Response Optimization. It uses the model `srotut2` to show how to constrain more than one signal and tune multiple parameters.

Specifically, you will design a hydraulic system that extends a piston by 0.07 m while keeping the pressure from the pump below  $12 \times 10^5$  Pa. The physical system consists of a hydraulic pump supplying pressure to a hydraulic cylinder. The cylinder contains a piston, which extends and compresses a spring. This system is modeled in the Simulink model `srotut2`. The system parameters that you can adjust, or tune, to achieve the required design characteristics are the cross-sectional area of the piston,  $A_c$ , and the maximum pump flow-rate,  $Q_{max}$ .

The specifications for the response of the piston position signal are

- Maximum overshoot of 15%
- Rise time of 0.25 second
- Settle to within 10% of final value after 0.5 second
- Final value of 0.07 m


The specifications for the response of the pump pressure signal are

- Lower bound of zero (Pressures below this value are not physically possible.)
- Upper bound of  $12 \times 10^5$  Pa

### Opening the Hydraulic Cylinder Model

The Simulink system `srotut2` contains a block diagram representation of the hydraulic system described above. You can open the system by typing `srotut2` at the MATLAB prompt.



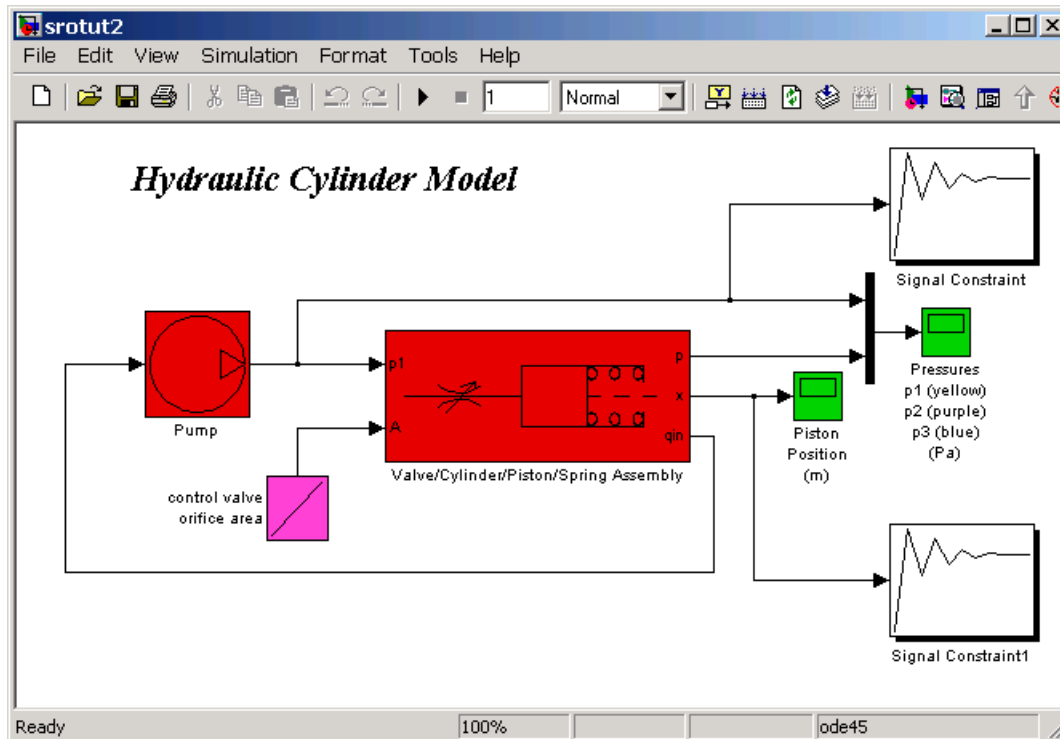

Notice that the system contains two Signal Constraint blocks. These blocks define constraints on the piston position and pump pressure signals. Simulink Response Optimization allows you to constrain multiple responses including responses within subsystems of your model. For each signal that you want to constrain, you need to attach a Signal Constraint block. Within each Signal Constraint block, set constraint bounds and/or reference signals for each signal. The tuned and uncertain parameters, along with optimization and simulation options are set for the *whole system* within any one of the Signal Constraint blocks.


### Adjusting Constraints

In this section you will adjust the signal constraints in the system.


#### Adjusting Pump Pressure Signal Constraints

Double-click the block labeled Signal Constraint, in the upper-right corner of the model diagram. This block defines the constraints on the pump pressure signal.

First, delete some constraint bound segments so that there is just a single upper bound and a single lower bound. To do this, right click the left-most lower segment and select **Delete** from the menu.

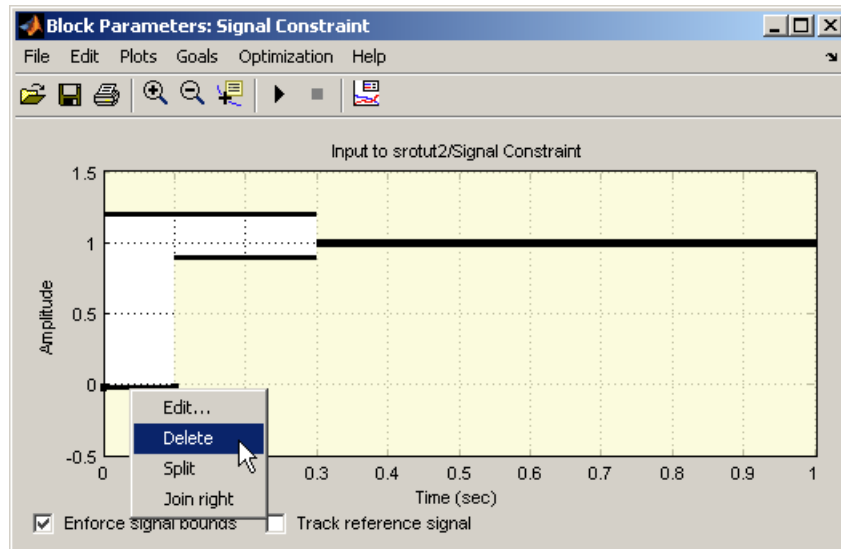


Repeat for one additional lower segment and one upper segment. The figure window should now look something like that in the following figure. Note that the thick black constraint line is actually two constraint edges positioned very close to each other.

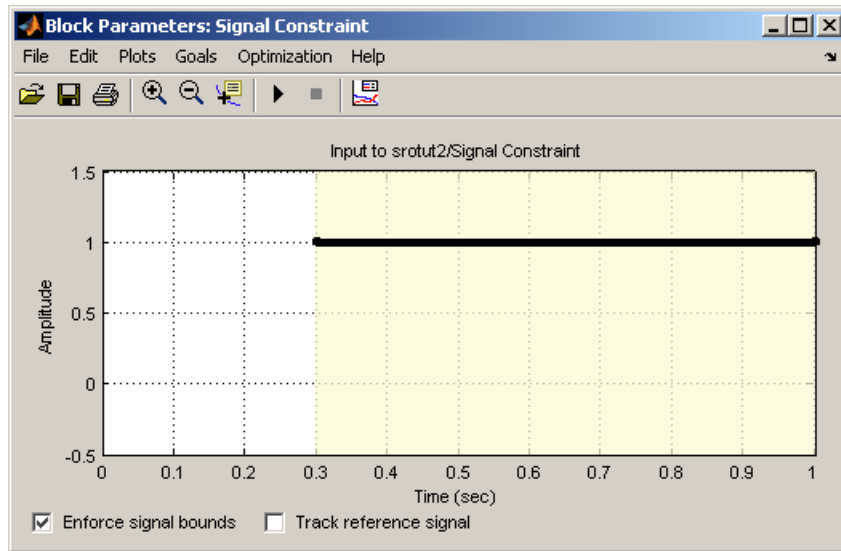


Reposition the constraint bound segments using the Edit Constraint dialog. To move the lower constraint, right-click anywhere on the lower constraint segment and select **Edit** from the menu. Within the Edit Constraint dialog, enter the start and end time of the constraint edge (0 and 1 respectively) as well as the magnitude of the constraint edge (since it should lie flat, both ends have the same magnitude of 0).

The following figure shows the Edit Constraint dialog with the position settings for the lower constraint segment.

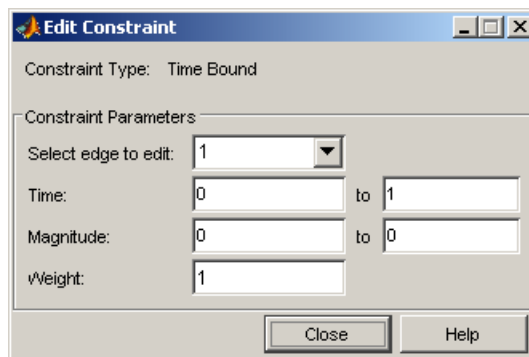

Repeat for the upper constraint, moving the constraint edge so that it begins at 0, ends at 1, and has a magnitude of  $12e5$ . See the online documentation for more information on the Edit Constraint dialog.

The new constraints are positioned at the edge of the axes and cannot be seen. To adjust the axes so that the constraints lie within the axes limits, select **Edit > Axes Properties** in the Signal Constraint window. Change the **Y-limits** to  $-5e5$  and  $15e5$ . The Signal Constraint window should now look like that in the following figure.

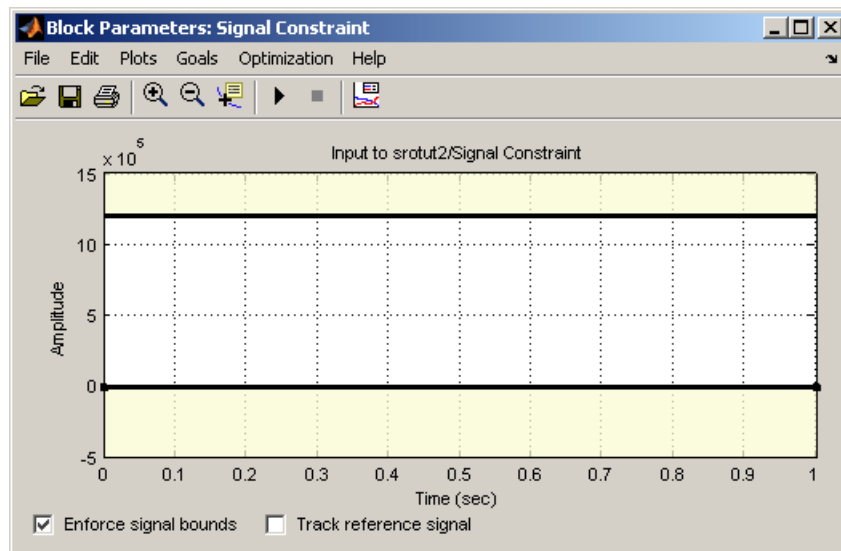

### Adjusting Piston Position Signal Constraints

Double-click the block labeled Signal Constraint1, in the lower-right corner of the model diagram. This block defines the constraints on the piston position signal.

Reposition the constraint bound segments using the Desired Response dialog. Open the dialog by selecting **Goals > Desired Response** from the Signal Constraint window. Within the Desired Response dialog, select **Specify step response characteristics**. The list at the beginning of “Physical Modeling Example” on page 2-20 specifies the step response characteristics. Enter the information shown in the following figure, and then click **OK**.

**Desired Response**

Specify reference signal  
 Specify step response characteristics

Step response specs


Initial value: 0      Final value: 0.07  
Step time: 0  
Rise time: 0.25      % Rise: 85  
Settling time: 0.5      % Settling: 10  
% Overshoot: 15      % Undershoot: 1

OK    Cancel    Help    Apply

These step response characteristics require that

- After 0.5 second, the signal must settle to within 10% of its final value (between 0.063 m and 0.077 m).
- After 0.25 second, the signal must rise to 85% of the final value (or approximately 0.06 m).
- The signal has a maximum overshoot of 15% (or up to approximately 0.08 m).
- The signal must have very little under shoot.

The constraint-bound segments should now look like those in the following figure.

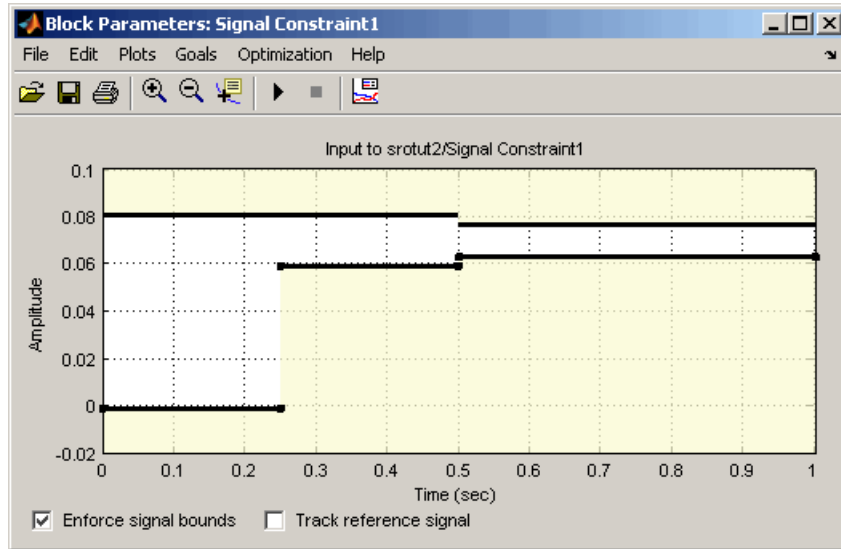

See the online documentation for more information on step response settings.


### Specifying Tuned Parameters

To optimize the signal responses in this example, you will tune two parameters: the cross-sectional area of the piston,  $A_c$ , and the maximum pump flow rate,  $Q_{max}$ . Although there are two constrained signals and two tuned parameters, you could have any number of tuned parameters in your response optimization.

You can specify tuned parameters within any Signal Constraint block in the model; the tuned parameter settings are for the *whole system*, not just for a particular optimized signal.

To specify the tuned parameters for this example, open any Signal Constraint block in the model and select **Optimization > Tuned Parameters**. Within the Tuned Parameters dialog, click **Add**, and then select  $A_c$  and  $Q_{max}$  from the list in the Add Parameters dialog. Hold down the **Ctrl** key to select multiple parameters from the list. Click **OK** to continue.

In the Tuned Parameters dialog, enter specifications for each tuned parameter by selecting the parameter in the list on the left, and then entering information such as initial guesses, minimum values, and maximum values on the right. For  $A_c$ , enter 0 as a **Minimum** value since it does not make sense for the cross-sectional area to be negative. Similarly, enter 0 as a **Minimum** value for  $Q_{max}$  to avoid negative flow rates, which imply that the flow reverses direction through the system.

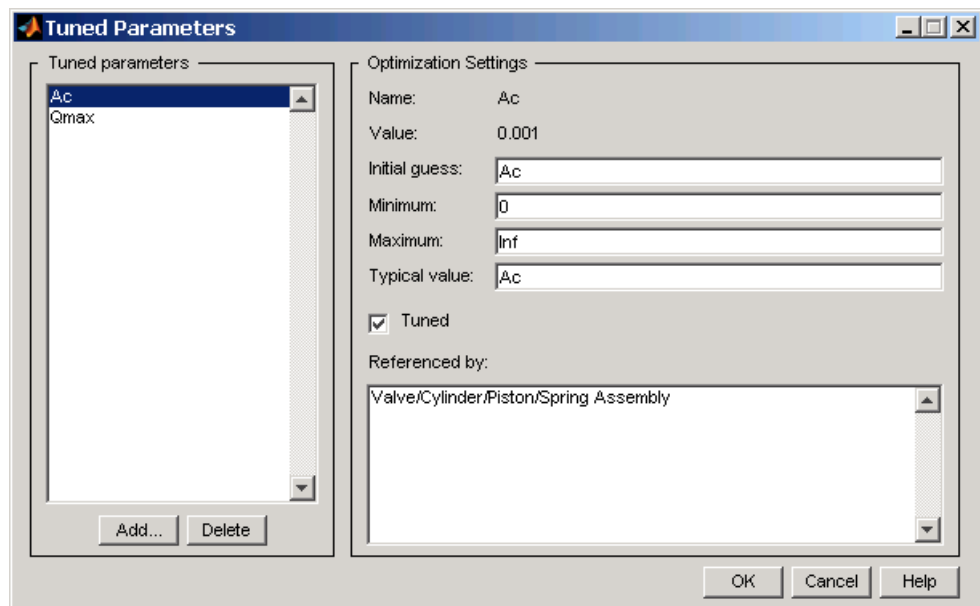

See the online documentation for more information on tuned parameter settings.

## Running the Optimization

After adjusting the constraints and defining tuned parameters, start the optimization by selecting **Optimization > Start**, or by clicking the Start button below the menu bar in a Signal Constraint window.

In this case the optimization algorithm is not able to find a solution that satisfies all the constraints, as seen in the Optimization Progress window below.

Iter	S-count	f(x)	max constraint	Step-size	Directional derivative	First-order optimality	Procedure
0	1	0	176.8				
1	10	0	53.4	1	0	1	infeasible
2	15	0	51.72	1	0	863	
3	23	0	46.44	0.0521	0	1	infeasible
4	31	0	34.63	0.125	0	1	Hessian modified twice; infeasible
5	39	0	11.45	0.125	0	1	Hessian modified twice; infeasible
6	46	0	2.286	0.25	0	1	Hessian modified; infeasible
7	51	0	0.2925	0.5	0	1	infeasible
8	56	0	0.8408	0.5	0	1	Hessian modified twice; infeasible

Could not find a solution that satisfies all constraints.  
Relax the constraints or increase the constraint tolerance to find a feasible solution.

$\Delta c =$   
0.0052

$Q_{max} =$   
0.0023

## Changing Optimization Settings

When the optimization algorithm does not find a successful solution, you can often find a better solution by changing some of the optimization settings and running the optimization again. Useful things to try are

- Changing the **Gradient type** to Refined. This is more accurate for some models.
- Increasing the tolerances.
- Using a different optimization algorithm.

For this example, change the gradient type to Refined by selecting **Optimization > Optimization Options** in the Signal Constraint window, and then selecting Refined as the **Gradient type**. Click **OK** to save the changes and close the Options dialog. See the online documentation for more information on optimization settings.



Run the optimization again with these new settings. The optimization algorithm should now find a feasible solution as shown in the following figure.

```

Optimization Progress
Iter  S-count    f(x)    max constraint  Step-size  Directional derivative  First-order optimality  Procedure
0     1          0        0.8408
1     6          0        0.03851        1           0          0.00136
2     9          0        0.005946        1           0          3.06e-005  Hessian modified
3    12          0        0.0003484        1           0          3.19e-006  Hessian modified
Successful termination.
Found a feasible or optimal solution within the specified tolerances.


Ac =
    0.0034

Qmax =
    0.0030


```

The Optimization Progress window shows the new optimized parameter values of  $0.0034 \text{ m}^2$  for the cross-sectional area of the piston, and  $0.0030 \text{ m}^3/\text{s}$  for the pump flow rate. These values are also changed within the MATLAB workspace.

The Signal Constraint windows also show that the optimized response signals satisfy both sets of constraints. To see this more clearly, first remove all response signals from the axes by selecting **Plots > Clear Plots**. Next, plot the current response, based on the optimized parameter values, by selecting **Plots > Plot Current Response**. The Signal Constraint windows should now look like those in the following two figures for piston position and pump pressure, respectively.

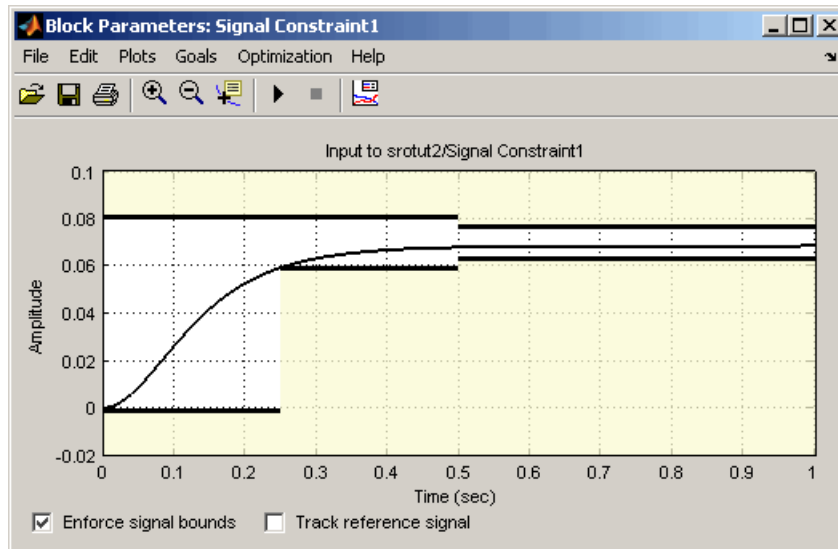

### Piston Position

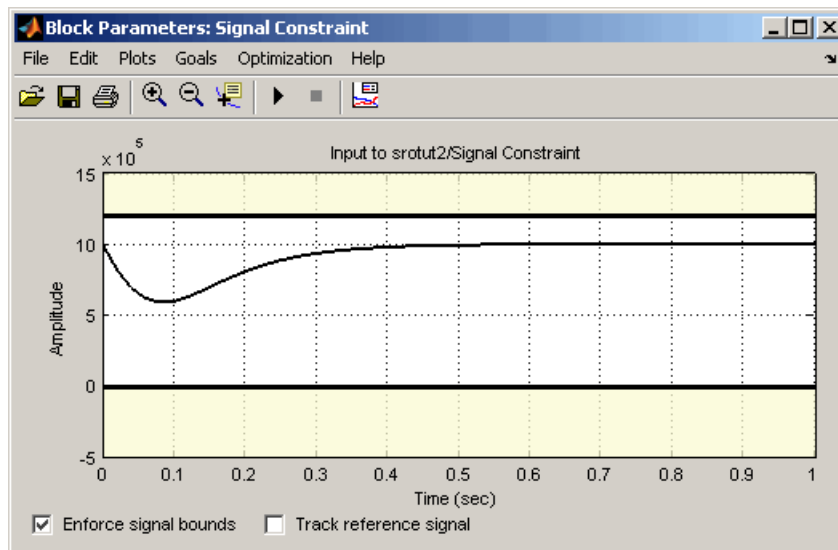

### Pump Pressure

See Chapter 4, “Troubleshooting” for more advice on adjusting the response optimization to achieve the desired results.

## Finding a Maximally Feasible Solution

Although the results in the previous section satisfy the constraints, the response signal for the piston position lies near the lower edge of the constraint region. This is because the optimization stops as soon as a feasible solution is found. To search for a solution that satisfies the constraints even better, you can

- 1** Select **Optimization > Optimization Options** from a Signal Constraint window to open the Options dialog.
- 2** Within the Options dialog, select **Look for maximally feasible solution**. By selecting this option, Simulink Response Optimization will continue to search for an optimal solution, after the initial solution is found.
- 3** Click **OK** to save the settings and close the Options dialog.
- 4** Click the Start button to run the optimization again.

The optimization finds a new solution that lies further inside the constraint region. The new optimized parameter values are  $0.0032 \text{ m}^2$  for the cross-sectional area of the piston, and  $0.0033 \text{ m}^3/\text{s}$  for the pump flow rate.



# Response Optimization Using Functions

---

In addition to the graphical user interface, Simulink Response Optimization has a command-line interface that lets you use functions to optimize the responses of signals within a Simulink model. This chapter includes an example outlining the use of these functions. A function reference is provided in the online documentation.

Control Design Example Using  
Functions (p. 3-2)

An example outlining the response  
optimization process using functions

## Control Design Example Using Functions


This example uses functions to optimize the response of a signal in the model `srotut1`. For a more detailed description of these functions, refer to the Function Reference in the online documentation.

### Choosing Signals to Constrain

Open the Simulink model `srotut1` by typing

```
srotut1
```

at the MATLAB prompt. The model opens and should look like that in the following figure.

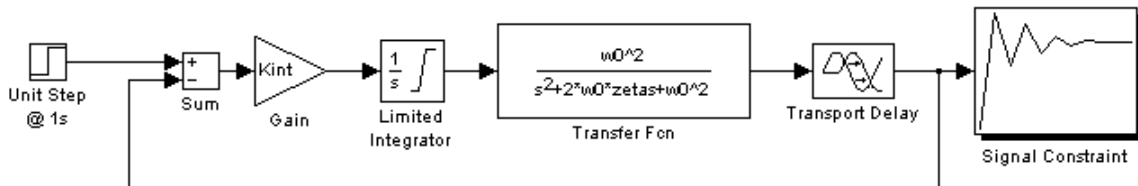

The first step in the response optimization process is to choose which signals in your Simulink model you would like to constrain and to attach Signal Constraint blocks to these signals. In `srotut1` there is already a Signal Constraint block attached to a signal. Refer to the online documentation for more information on the Signal Constraint block.

### Creating an Optimization Project

After attaching Signal Constraint blocks to the appropriate signals within your Simulink model, you need to create a Simulink Response Optimization project. This project is an object that contains information about the response optimization. There are two options for creating the project object:

- To create a default project with all project properties set to the default settings, use the `newsro` function.

- To create a project based on the current response optimization settings in the model, use the `getsro` function.

### Creating a Default Project

Create a new project with default settings using the following command.

```
proj=newsro('srotut1',{'Kint'})
```

The first input to the `newsro` function is the model name. The second input is a cell array of the tuned parameters. In this case `Kint` is the only tuned parameter.

This returns the following object.

```
Name: 'srotut1'  
Parameters: [1x1 ResponseOptimizer.Parameter]  
OptimOptions: [1x1 ResponseOptimizer.OptimOptions]  
Tests: [1x1 ResponseOptimizer.SimTest]  
Model: 'srotut1'
```

Simulink Response Optimization Project.

### Creating a Project Based on Current Response Optimization Settings

Create a new project based on the current response optimization settings in the model using the following command. This is useful when you previously saved a project for the model and would like to optimize this project at the command line or when you have set the project up with the graphical interface and would like to continue the analysis at the command line.

```
proj2=getsro('srotut1')
```

This command returns a project object with the same properties as the object returned with `newsro`, although these properties will possibly have different current values. The model must already be open to use the `getsro` function.

## Properties of a Response Optimization Project

Within the project object you can set characteristics of the tuned parameters, specify uncertain parameters, position constraint bound segments, and set options for the optimization and simulations.

### Specifying Tuned Parameter Attributes

To specify bounds and initial guesses for the tuned parameters, first extract the tuned parameters from the project object with the `findpar` function.

```
param=findpar(proj, 'Kint')
```

This returns a tuned parameter object.

```
        Name: 'Kint'  
        Value: 0  
InitialGuess: 0  
        Minimum: -Inf  
        Maximum: Inf  
TypicalValue: 0  
ReferencedBy: {0x1 cell}  
Description: ''  
        Tuned: 1
```

Tuned parameter.

Next, use dot notation to edit these properties to specify maximum values, minimum values, initial guesses, etc. For example, to set the initial guess to 0.4 and the minimum value to 0, use the following commands.

```
param.InitialGuess=0.4;  
param.Minimum=0
```

The new parameter settings are shown below.

```
        Name: 'Kint'  
        Value: 0  
InitialGuess: 0.4000  
        Minimum: 0  
        Maximum: Inf  
TypicalValue: 0
```



```

ReferencedBy: {0x1 cell}
Description: ''
Tuned: 1

```

Tuned parameter.

For more information on specifying tuned parameters, see the online documentation.

### Adjusting Signal Constraints

To define the constrain bound segments within which the optimized signal response must lie, first extract a signal constraint object from the project, using the function `findconstr`.

```
constr=findconstr(proj,'srotut1/Signal Constraint')
```

This function takes the project object and the location of a Signal Constraint block in the model as inputs and creates the following signal constraint object.


```

ConstrEnable: 'on'
  isFeasible: 1
  CostEnable: 'off'
    Enable: 'on'
      Name: 'Signal Constraint'
        SignalSize: [1 1]
          LowerBoundX: [3x2 double]
            LowerBoundY: [3x2 double]
              LowerBoundWeight: [3x1 double]
                UpperBoundX: [2x2 double]
                  UpperBoundY: [2x2 double]
                    UpperBoundWeight: [2x1 double]
                      ReferenceX: []
                        ReferenceY: []
                          ReferenceWeight: []

```


Signal Constraint.

To move the constraints, edit the LowerBoundX, LowerBoundY, UpperBoundX, and UpperBoundY matrices. These matrices specify the  $x$  and  $y$  positions of the endpoints of each segment. For example:

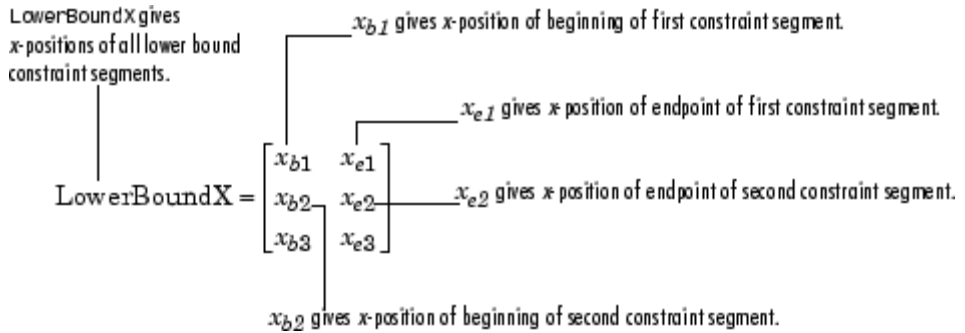

To move the constraint bounds to the positions shown in the following figure, use the following commands.

```
constr.LowerBoundX=[0 12;12 30;30 50];
constr.LowerBoundY=[0 0;0.9 0.9;0.99 0.99];
constr.UpperBoundX=[0 30;30 50];
constr.UpperBoundY=[1.1 1.1;1.01 1.01];
```

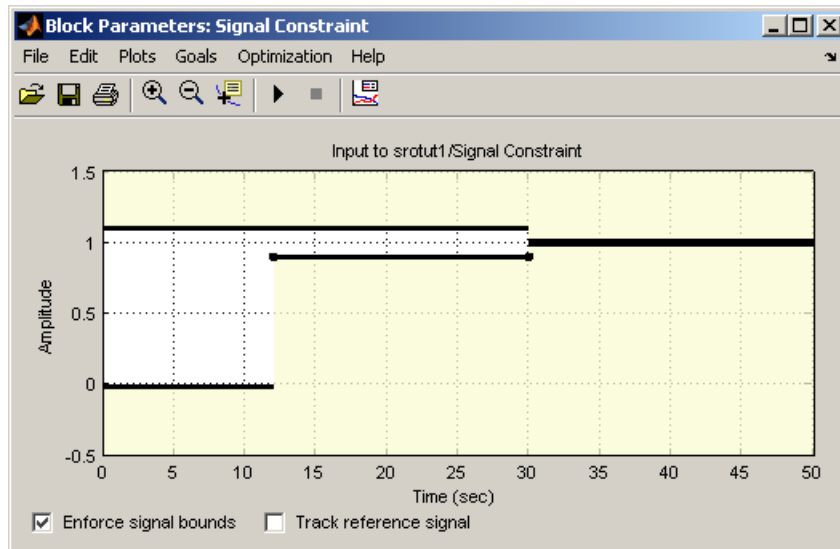

For more information on constraint bound segments, see the online documentation.

## Setting Optimization Options

Before running the optimization, it is sometimes useful to change or set some optimization options. These options define the algorithms and methods Simulink Response Optimization uses to optimize the signals. For a list of all options and their uses, see “Tuning the Optimization Results” in the online documentation or the documentation for the MATLAB function `optimset`.

Get the current optimization options settings with the `optimget` function.

```
optimget(proj)
```

This returns a list of the options and their current values.

```

        Algorithm: 'fmincon'
        Display: 'iter'
        GradientType: 'basic'
MaximallyFeasible: 0
        MaxIter: 100

```

```
TolCon: 1.0000e-003
TolFun: 1.0000e-003
TolX: 1.0000e-003
Restarts: 0
SearchMethod: []
```

Use the `optimset` function to change any values within the optimization options object. For example, to change the tolerance on the parameter values, `TolX`, to  $1e-4$  use the following command.

```
optimset(proj, 'TolX', 1e-4)
```

### Setting Simulation Options

In addition to specifying optimization options, it is sometimes useful to specify simulation options. These options define the solvers, simulation times, and other settings that Simulink Response Optimization uses when simulating the models during the response optimization. For a list of all options and their uses, see “Setting Options for the Simulation” in the online documentation or the documentation for the Simulink function `simset`.

Get the current simulation options settings with the `simget` function.

```
simget(proj)
```

This returns a list of the options and their current values.

```
AbsTol: 1.0000e-006
FixedStep: 'auto'
InitialStep: 'auto'
MaxStep: 'auto'
MinStep: 'auto'
RelTol: 1.0000e-003
Solver: 'ode45'
ZeroCross: 'on'
StartTime: '0.0'
StopTime: '50'
```

To change values within the simulation options object, use the `simset` function. For example, change the solver to `ode23` with the following command.

```
simset(proj, 'Solver', 'ode23')
```

## Specifying Uncertain Parameters

When some parameters in your model are not known exactly, but you do know the nominal plant and the level of uncertainty surrounding this model, you can include this uncertainty in your response optimization by specifying uncertain parameters in your model.

In this example, assume that `w0` varies between 0.8 and 1.2 while `zeta` varies between 0.95 and 1.05. First, create a set of sample parameter values within these ranges using the `randunc` function.

```
unc_rand=randunc(2, 'w0', {0.8 1.2}, 'zeta', {0.95 1.05});
```

The `randunc` function creates combinations of parameter values based on the endpoints of their uncertainty ranges. In addition, it creates several random parameter value combinations. The first argument to the function specifies the number of random parameter value combinations that the function creates. The remaining input arguments specify the uncertain parameters and the ranges over which they vary. This particular example creates two random combinations of `w0` and `zeta` values in addition to the combinations of parameter values at the endpoints.

When you would rather specify uncertain parameter values on a grid, use the `gridunc` function.

```
unc_grid=gridunc('w0', {0.8 0.9 1.0 1.1 1.2}, 'zeta', {0.95 1 1.05});
```

The `gridunc` function creates combinations of the given parameters at values specified in the cell-arrays of parameter values.

For more information on creating sets of uncertain parameter value combinations, see the reference pages for `randunc` and `gridunc`.

By default, when adjusting the tuned parameters, the response optimization algorithm does not take responses based on these uncertain parameter values into account. To include an uncertain parameter combination in the optimization, you must set its `Optimized` property to `true`.

For example, to include all the parameter combinations within `unc_rand`, enter the following command.

```
unc_rand.Optimized(1:end)=true
```

After creating the set of uncertain parameter values, and choosing to include some or all of them in the optimization, add these values to the project object with the `setunc` function.

```
setunc(proj,unc_rand)
```

For more information on specifying uncertain parameter values, see the online documentation.

### Running the Optimization

To run the optimization for this project, enter

```
optimize(proj)
```

The results appear in the MATLAB Command Window after each iteration. See the online documentation for more information on the optimization results.

During the optimization, Simulink Response Optimization changes the tuned parameter values in the MATLAB workspace. The optimization also displays the new, optimized parameter values after terminating. In this example, the optimized value of `Kint` is 0.1539.

# Troubleshooting

---

Where possible, Simulink Response Optimization provides visual cues to help you formulate problems and inform you about the progress of an optimization. However, sometimes problems can occur when optimizing signal responses. This chapter contains a list of common problems along with recommendations for dealing with them.

Common Questions About Response  
Optimization (p. 4-2)

Solutions for commonly encountered  
response optimization problems

## Common Questions About Response Optimization

The following list of questions represent commonly encountered problems with response optimization. For each question, solutions, advice and tips are given.

### Questions

#### How do I quit an optimization and revert to my initial parameter values?

Click the Stop button or select **Optimization > Stop** in a Signal Constraint window to stop the optimization, and then select **Edit > Undo Optimize Parameters** to revert to your initial parameter values.

#### The responses and parameter values do not change at all.

- The optimization problem you formulated might be nonsmooth. This means that small parameter changes have no effect on the amount by which response signals satisfy or violate the constraints and only large changes will make a difference. Try switching to a search-based algorithm such as simplex search or pattern search. Alternatively, look for initial guesses outside of the dead zone where parameter changes have no effect. You could also try removing nonlinear blocks such as the Quantizer or Dead Zone block.
- If you are using the Refined option for **Gradient type** with the gradient descent algorithm, try the Basic option for **Gradient type** instead. The gradient model that the Refined option uses might be invalid for your problem.

#### The optimization does not get close to an acceptable solution.

- If you're using gradient descent, the default algorithm, try the Refined option for **Gradient type**. This option yields more accurate gradient estimates when using variable-step solvers and can facilitate convergence.
- If you're using Pattern search, check that you have specified appropriate maximum and minimum values for all your tuned parameters. The pattern search algorithm looks inside these bounds for a solution. When they are



set to their default values of Inf and -Inf, the algorithm searches within  $\pm 100\%$  of the initial values of the parameters. In some cases this region is not large enough and changing the maximum and minimum values can expand the search region.

- Your optimization problem might have local minima. Consider running one of the search-based algorithms first to get closer to an acceptable solution.
- Reduce the number of tuned parameters by removing from the **Tuned parameters** list those parameters that you know only mildly influence the optimized responses. Once you identify reasonable values for the key parameters, add the fixed parameters back to the tunable list and restart the optimization using these reasonable values as initial guesses.

**The optimization terminates before exceeding the maximum number of iterations, with a solution that does not satisfy all the constraints.**

- It might not be possible to achieve your specifications. Try relaxing the constraints that the response signals violate the most. Once you find an acceptable solution to the relaxed problem, tighten some constraints again and restart the optimization.
- The optimization might have converged to a local minimum that is not a feasible solution. Restart the optimization from a different initial guess and/or use one of the search-based methods to identify another local minimum that satisfies the constraints.

**The optimization drives the tuned parameters to undesirable values.**

- When you know that a tuned parameter should remain positive, or when its value is physically constrained to a given range, enter this information in the Tuned Parameters dialog as lower and upper bounds (**Minimum** and **Maximum**). This information helps guide the optimization algorithm toward a reasonable solution.
- In the Tuned Parameters dialog, specify initial guesses that are within the range of desirable values.

### **The optimization is close to a solution but is taking a long time to converge.**

- Use the Stop button, or select **Optimization > Stop**, in a Signal Constraint window to interrupt the optimization when you think the current optimized response signals are acceptable.
- If you use the gradient descent algorithm, try restarting the optimization. This resets the Hessian estimate and might speed up convergence.
- Increase the convergence tolerances in the Optimization Options dialog to force earlier termination.
- Relax some of the constraints to increase the size of the feasibility region.

### **The response signal becomes unstable and does not recover.**

While the optimization formulation has explicit safeguards against unstable or divergent response signals, the optimization can sometimes venture into an unstable region where simulation results become erratic and gradient methods fail to find a way back to the stable region. In these cases, you can try one of the following solutions:

- Add or tighten the lower and upper bounds on parameter values. Instability often occurs when you allow some parameter values to become too large.
- Use a search-based algorithm to find parameter values that stabilize the response signals and then start the gradient-based algorithm using these initial values.

### **The optimization stalls.**

Certain parameter combinations can make the simulation stall for models with strong nonlinearities or frequent mode switching. In these cases the ODE solvers take smaller and smaller step sizes. Stalling can also occur when the model's ODEs become too stiff for some parameter combinations. A symptom of this behavior is when the Simulink model status is Running and clicking the Stop button fails to interrupt the optimization. When this happens, you can try one of the following solutions:

- Switch to a different ODE solver, especially one of the stiff solvers.
- Specify a minimum step size.

- Disable zero crossing detection if chattering is occurring.
- Tighten the lower and upper bounds on parameters that cause simulation difficulties. In particular, eliminate regions of the parameter space where some model assumptions are invalid and the model behavior can become erratic.

### **How do I accelerate the optimization?**

- Since the time it takes to simulate the model dominates the optimization time, using the Simulink Accelerator can dramatically reduce the optimization time.
- The choice of ODE solver can also significantly affect the overall optimization time. Use a stiff solver when the simulation takes many small steps, and use a fixed-step solver when such solvers yield accurate enough simulations for your model. (These solvers must be accurate in the entire parameter search space.)
- Reduce the number of tuned parameters and constrain their range to narrow the search space.
- When specifying parameter uncertainty, keep the number of sample values small since the number of simulations grows proportionally with the number of samples. For example, a grid of 3 parameters with 10 sample values for each parameter requires  $10^3=1000$  simulations per iteration.

### **How should I pick the start and stop time?**

By default, the start and stop time are inherited from the Simulink model. However, you can change them with the Simulation Options dialog. Choose a stop time that captures enough of the desired response's characteristics. When you want the response to settle to a final value, use at least 10-20% of the simulation time for constraining the steady-state response. This ensures the proper weighting of requirements on the final value and overall stability.

### **Should I worry about the scale of my responses and how constraints are discretized?**

No. Simulink Response Optimization automatically normalizes constraint and response data and, unlike its predecessor, the Nonlinear Control Design Blockset, it does not discretize the constraints.



# Examples

---

Use this list to find examples in the documentation.

## **Introductory Examples**

“Simple Control Design Example” on page 2-4

“Physical Modeling Example” on page 2-20

“Control Design Example Using Functions” on page 3-2

## A

algorithms  
    response optimization example 2-28

## C

common questions  
    response optimization 4-1  
constraint bounds  
    deleting 2-22  
    example 2-5  
    specifying using functions 3-5  
cumulative root mean square blocks 1-2

## E

Edit Constraint dialog  
    example 2-23

## F

findconstr function  
    example 3-5  
findpar function  
    example 3-4

## G

getsro function  
    example 3-3  
gridunc function  
    example 3-9

## M

maximally feasible solutions  
    example 2-31

## N

newsro function

example 3-3

Nonlinear Control Design Blockset  
    upgrading from 1-4

## O

optimget function  
    example 3-7  
optimize function  
    example 3-10  
optimset function  
    example 3-8

## R

randunc function  
    example 3-9  
reference signals 2-12  
response optimization  
    example with control design 2-4  
    example with functions 3-2  
    example with physical modeling 2-20  
    optimization options using functions 3-7  
    quick start 2-2  
    running with functions 3-10  
    simulation options using functions 3-8  
response optimization options 2-28  
    example 2-13  
response optimization projects  
    creating with functions 3-2  
    example 2-18  
    objects 3-4  
response optimization results  
    example 2-10

## S

setunc function  
    example 3-10  
signal constraints  
    objects 3-5

- signal tracking
  - example 2-12
- simget function
  - example 3-8
- simset function
  - example 3-9
- step responses
  - example 2-24
- system requirements 1-4

## **T**

- troubleshooting

- response optimization 4-1
- tuned parameters
  - example 2-8
  - multiple 2-26
  - object properties 3-4
  - specifying with functions 3-4

## **U**

- uncertain parameters
  - example 2-15
  - specifying with functions 3-9