

Simulink[®] Design Optimization[™]

Getting Started Guide



MATLAB[®]&SIMULINK[®]

R2016a



How to Contact MathWorks



Latest news: www.mathworks.com
Sales and services: www.mathworks.com/sales_and_services
User community: www.mathworks.com/matlabcentral
Technical support: www.mathworks.com/support/contact_us



Phone: 508-647-7000



The MathWorks, Inc.
3 Apple Hill Drive
Natick, MA 01760-2098

Simulink® Design Optimization™ Getting Started Guide

© COPYRIGHT 1993–2016 by The MathWorks, Inc.

The software described in this document is furnished under a license agreement. The software may be used or copied only under the terms of the license agreement. No part of this manual may be photocopied or reproduced in any form without prior written consent from The MathWorks, Inc.

FEDERAL ACQUISITION: This provision applies to all acquisitions of the Program and Documentation by, for, or through the federal government of the United States. By accepting delivery of the Program or Documentation, the government hereby agrees that this software or documentation qualifies as commercial computer software or commercial computer software documentation as such terms are used or defined in FAR 12.212, DFARS Part 227.72, and DFARS 252.227-7014. Accordingly, the terms and conditions of this Agreement and only those rights specified in this Agreement, shall pertain to and govern the use, modification, reproduction, release, performance, display, and disclosure of the Program and Documentation by the federal government (or other entity acquiring for or through the federal government) and shall supersede any conflicting contractual terms or conditions. If this License fails to meet the government's needs or is inconsistent in any respect with federal procurement law, the government agrees to return the Program and Documentation, unused, to The MathWorks, Inc.

Trademarks

MATLAB and Simulink are registered trademarks of The MathWorks, Inc. See www.mathworks.com/trademarks for a list of additional trademarks. Other product or brand names may be trademarks or registered trademarks of their respective holders.

Patents

MathWorks products are protected by one or more U.S. patents. Please see www.mathworks.com/patents for more information.

Revision History

March 2009	Online only	New for Version 1 (Release 2009a)
September 2009	Online only	Revised for Version 1.1 (Release 2009b)
March 2010	Online only	Revised for Version 1.1.1 (Release 2010a)
September 2010	Online only	Revised for Version 1.2 (Release 2010b)
April 2011	Online only	Revised for Version 1.2.1 (Release 2011a)
September 2011	Online only	Revised for Version 2.0 (Release 2011b)
March 2012	Online only	Revised for Version 2.1 (Release 2012a)
September 2012	Online only	Revised for Version 2.2 (Release 2012b)
March 2013	Online only	Revised for Version 2.3 (Release 2013a)
September 2013	Online only	Revised for Version 2.4 (Release 2013b)
March 2014	Online only	Revised for Version 2.5 (Release 2014a)
October 2014	Online only	Revised for Version 2.6 (Release 2014b)
March 2015	Online only	Revised for Version 2.7 (Release 2015a)
September 2015	Online only	Revised for Version 2.8 (Release 2015b)
March 2016	Online only	Revised for Version 3.0 (Release 2016a)

Product Overview

1

Simulink Design Optimization Product Description	1-2
Key Features	1-2
Optimization Support for Simulink Models Using Third-Party Applications	1-3
Ways to Speed Up Design Optimization Tasks	1-4
Speed Up Using Parallel Computing	1-4
Speed Up Using Fast Restart Mode	1-5
Speed Up Using Accelerator Mode	1-5
Required and Related Products	1-7

Parameter Estimation

2

Supported Data	2-2
Prepare Data for Parameter Estimation	2-3
About This Tutorial	2-3
Start a Parameter Estimation Tool Session	2-4
Create an Experiment for Parameter Estimation	2-6
Import Data	2-7
Analyze Data	2-7
Extract Data for Estimation	2-9
Replacing Outliers	2-10
Filtering Data	2-12
Saving the Session	2-14

Estimate Parameters from Measured Data	2-16
About This Tutorial	2-16
Estimate Model Parameters Using Default Estimation Settings	2-19
Improve Estimation Results Using Parameter Bounds	2-30
Validate Estimated Model Parameters	2-33

Response Optimization

3

Supported Design Requirements	3-2
Design Optimization to Meet Step Response Requirements (GUI)	3-4
Model Structure	3-4
Design Requirements	3-6
Specify Step Response Requirements	3-6
Specify Design Variables	3-9
Optimize Model Response	3-12
Save the Session	3-15
Design Optimization to Meet Step Response Requirements (Code)	3-17
Model Structure	3-17
Design Requirements	3-19
Specify Step Response Requirements	3-19
Specify Design Variables	3-20
Optimize Model Response	3-21
Design Optimization to Track Reference Signal (GUI)	3-25
Model Structure	3-25
Design Requirements	3-26
Specify Reference Signal	3-26
Specify Design Variables	3-34
Optimize Model Response	3-37
Design Optimization Using Frequency-Domain Check Blocks (GUI)	3-41
Model Structure	3-41
Design Requirements	3-42

Specify Design Requirements	3-42
Specify Design Variables	3-45
Optimize Design	3-46
Time-Domain Model Verification	3-53

Optimization-Based Linear Control Design

4

When to Use Optimization-Based Linear Control Design ...	4-2
Types of Time- and Frequency-Domain Design Requirements for Optimization-Based Control Design	4-3
Quick Start — Optimization-Based Linear Control Design .	4-4
Design Optimization-Based PID Controller for Linearized Simulink Model (GUI)	4-15
Model Structure	4-15
Design Requirements	4-16
Configure the Control System Designer App for Optimization-Based Control Design	4-16
Design an Initial PID Controller to Meet Bode Magnitude and Phase Margins Requirements	4-18
Refine the Controller Design to Meet Controller Output Bounds	4-32

Product Overview

- “Simulink Design Optimization Product Description” on page 1-2
- “Optimization Support for Simulink Models Using Third-Party Applications” on page 1-3
- “Ways to Speed Up Design Optimization Tasks” on page 1-4
- “Required and Related Products” on page 1-7

Simulink Design Optimization Product Description

Analyze model sensitivity and tune model parameters

Simulink Design Optimization provides functions, interactive tools, and blocks for analyzing and tuning model parameters. You can determine the model's sensitivity, fit the model to test data, and tune it to meet requirements. Using techniques like Monte Carlo simulation and Design of Experiments, you can explore your design space and calculate parameter influence on model behavior.

Simulink Design Optimization helps you increase model accuracy. You can preprocess test data, automatically estimate model parameters such as friction and aerodynamic coefficients, and validate the estimation results.

To improve system design characteristics such as response time, bandwidth, and energy consumption, you can jointly optimize physical plant parameters and algorithmic or controller gains. These parameters can be tuned to meet time-domain and frequency-domain requirements, such as overshoot and phase margin, and custom requirements.

Key Features

- Parameter estimation from test data
- Parameter tuning to meet time-domain, frequency-domain, and custom requirements
- Design exploration and sensitivity analysis
- Graphical requirement specification and optimization progress monitoring
- Robust design optimization, accounting for parameter variation or uncertainty

Optimization Support for Simulink Models Using Third-Party Applications

You can use Simulink Design Optimization software to optimize Simulink models that invoke third-party simulation tools or contain legacy simulation code. To do so, use the S-function block in Simulink. When using the command-line functions, use MATLAB[®] MEX functions.

References

Cherian, V., Shenoy, R., Stothert, A., Shriver, J. et al., "Model-Based Design of a SUV Anti-rollover Control System" SAE Technical Paper 2008-01-0579, 2008, doi:10.4271/2008-01-0579.

More About

- "Introducing MEX Files"

Ways to Speed Up Design Optimization Tasks

You can use the following ways to speed up parameter estimation, response optimization, and sensitivity analysis tasks:

In this section...
“Speed Up Using Parallel Computing” on page 1-4
“Speed Up Using Fast Restart Mode” on page 1-5
“Speed Up Using Accelerator Mode” on page 1-5

You can use a combination of these, but depending on the limitations associated with each, you may or may not see an increase in speed. For example, you can use parallel computing and fast restart together to speed up optimization. However, you do not see an increase in speed compared to using only parallel computing if the compilation phase of your model is short.

Speed Up Using Parallel Computing

You can use Parallel Computing Toolbox™ software to speed up parameter estimation, response optimization, and sensitivity analysis. When you use parallel computing, the software distributes the independent simulations on multiple MATLAB sessions. Thus, the simulations run in parallel, which reduces the optimization time.

Using parallel computing may reduce the optimization time in the following cases:

- The model contains many parameters to optimize, and you use the **Gradient descent** or **Nonlinear least squares** method.
- The **Pattern search** method is selected as the optimization method.
- The model contains many uncertain parameters and uncertain parameter values.
- The model is complex and takes a long time to simulate.

You can use parallel computing in the Parameter Estimation, Response optimization, and Sensitivity Analysis tools, or at the command line. For more information, see “Use Parallel Computing for Parameter Estimation”, “Use Parallel Computing for Response Optimization”, and “Use Parallel Computing for Sensitivity Analysis”.

Speed Up Using Fast Restart Mode

You can use the fast restart feature of Simulink to speed up design optimization of tunable parameters of a model.

Fast restart enables you to perform iterative simulations without compiling a model or terminating the simulation each time. Using fast restart, you compile a model only once. You can then tune parameters and simulate the model again without spending time on compiling. Fast restart associates multiple simulation phases with a single compile phase to make iterative simulations more efficient. You see a speedup of design optimization tasks using fast restart in models that have a long compilation phase. See “How Fast Restart Improves Iterative Simulations” in the Simulink documentation.

When you enable fast restart, you can only change tunable properties of the model during simulation. For more information about the limitations, see “Factors Affecting Fast Restart”.

You can configure fast restart in the Parameter Estimation, Response optimization, and Sensitivity Analysis tools, or at the command line. For more information see, “Improving Optimization Performance using Fast Restart (GUI)”, “Improving Optimization Performance using Fast Restart (Code)”, “Use Fast Restart Mode During Response Optimization”, or “Use Fast Restart Mode During Sensitivity Analysis”.

Speed Up Using Accelerator Mode

Simulink Design Optimization software supports **Normal** and **Accelerator** simulation modes. You can accelerate the design optimization computations by changing the simulation mode of your Simulink model to **Accelerator**. For information about these modes, see “How Acceleration Modes Work” in the Simulink documentation.

The default simulation mode is **Normal**. In this mode, Simulink uses interpreted code, rather than compiled C code during simulations.

In the **Accelerator** mode, Simulink Design Optimization software runs simulations during optimization with compiled C code. Using compiled C code speeds up the simulations and reduces the time to optimize the model response signals.

For information about the limitations, and how to use the **Accelerator** mode, see “Use Accelerator Mode During Simulations”.

Related Examples

- “Optimizing Time-Domain Response of Simulink® Models Using Parallel Computing”
- “Improving Optimization Performance using Fast Restart (GUI)”
- “Improving Optimization Performance using Fast Restart (Code)”

Required and Related Products

Simulink Design Optimization software requires MATLAB, Simulink, and Optimization Toolbox™ software.

The following table summarizes MathWorks® products that extend and complement the Simulink Design Optimization software. For current information about these and other MathWorks products, visit <http://www.mathworks.com/products/>.

Product	Description
Control System Toolbox	Enables you to design controllers for linear time-invariant (LTI) models using optimization methods.
Global Optimization Toolbox	Provides genetic algorithms, and direct search methods to estimate and optimize model parameters.
Neural Network Toolbox	Provides Simulink models of neural networks for optimization-based control design.
Parallel Computing Toolbox	Enables parallel computing on multicore processors and multiprocessor networks to speed up estimation and optimization.
Simulink Control Design	Lets you linearize Simulink models. Use Simulink Design Optimization software to design controllers for linearized models using optimization methods.
System Identification Toolbox	Lets you estimate linear and nonlinear models from measured data. Import the estimated model into Simulink software, and use Simulink Design Optimization software for optimization-based control design.

Parameter Estimation

- “Supported Data” on page 2-2
- “Prepare Data for Parameter Estimation” on page 2-3
- “Estimate Parameters from Measured Data” on page 2-16

Supported Data

From signal data, you can estimate model parameters and initial conditions of single or multiple input and output Simulink models.

Simulink Design Optimization software lets you estimate model parameters from the following types of data:

- *Time-domain* data — Data with one or more input variables $u(t)$ and one or more output variables $y(t)$, sampled as a function of time. See “Import Data for Parameter Estimation”.
- *Time-series* data — Data stored in time-series objects. See “Time-Series Data”.

Simulink Design Optimization software estimates model parameters by comparing the measured signal data with simulation data generated from the Simulink model. Using optimization techniques, the software estimates the parameters and initial conditions of states to minimize a user-selected cost function. The cost function typically calculates a least-square error between the measured and simulated data. To learn more, see “Estimate Parameters from Measured Data” on page 2-16.

More About

- “Time Series Objects”
- “Complex Data”

Prepare Data for Parameter Estimation

In this section...

- “About This Tutorial” on page 2-3
- “Start a Parameter Estimation Tool Session” on page 2-4
- “Create an Experiment for Parameter Estimation” on page 2-6
- “Import Data” on page 2-7
- “Analyze Data” on page 2-7
- “Extract Data for Estimation” on page 2-9
- “Replacing Outliers” on page 2-10
- “Filtering Data” on page 2-12
- “Saving the Session” on page 2-14

About This Tutorial

- “Objectives” on page 2-3
- “About the Sample Data” on page 2-4

Objectives

This tutorial explains how to import, analyze, and prepare measured input and output (I/O) data for estimating parameters of a Simulink model.

Note: Simulink Design Optimization software estimates parameters from real, time-domain data only.

Perform the following tasks using the Parameter Estimation tool:

- Import data from the MATLAB workspace.
- Analyze data quality using a time plot.
- Select a subset of data for estimation.
- Replace outliers.
- Filter high-frequency noise.

About the Sample Data

Load `spe_engine_throttle1.mat`, which contains I/O data measured from an engine throttle system. The MAT-file includes the following variables:

- `input1` — Input data samples
- `position1` — Output data samples
- `time1` — Time vector

Note: The number of input and output data samples must be equal to the length of the corresponding time vector.

The engine throttle system controls the flow of air and fuel mixture to the engine cylinders. The throttle body contains a butterfly valve which opens when a driver presses the accelerator pedal. Opening this valve increases the amount of fuel mixture entering the cylinders, which increases the engine speed. A DC motor controls the opening angle of the butterfly valve in the throttle system. The input to the throttle system is the motor current (in amperes), and the output is the angular position of the butterfly valve (in degrees).

`spe_engine_throttle1` contains the Simulink model of the engine throttle system.


Start a Parameter Estimation Tool Session

To perform parameter estimation, you must first start a Parameter Estimation tool session.

- 1 Open the engine throttle system model by typing the following at the MATLAB prompt:


```
spe_engine_throttle1
```

This command opens the Simulink model, and loads the data into the MATLAB workspace.

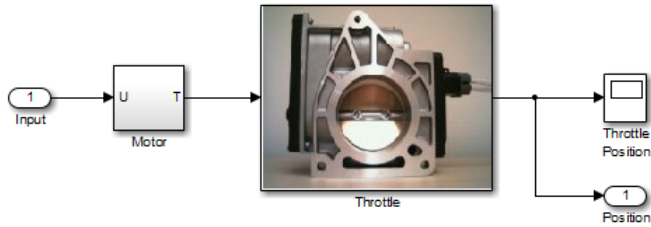Engine Throttle Model

- 2 In the Simulink model window, select **Analysis > Parameter Estimation**.

This action opens a new session, **Parameter Estimation - spe_engine_throttle1**, in the Parameter Estimation tool.

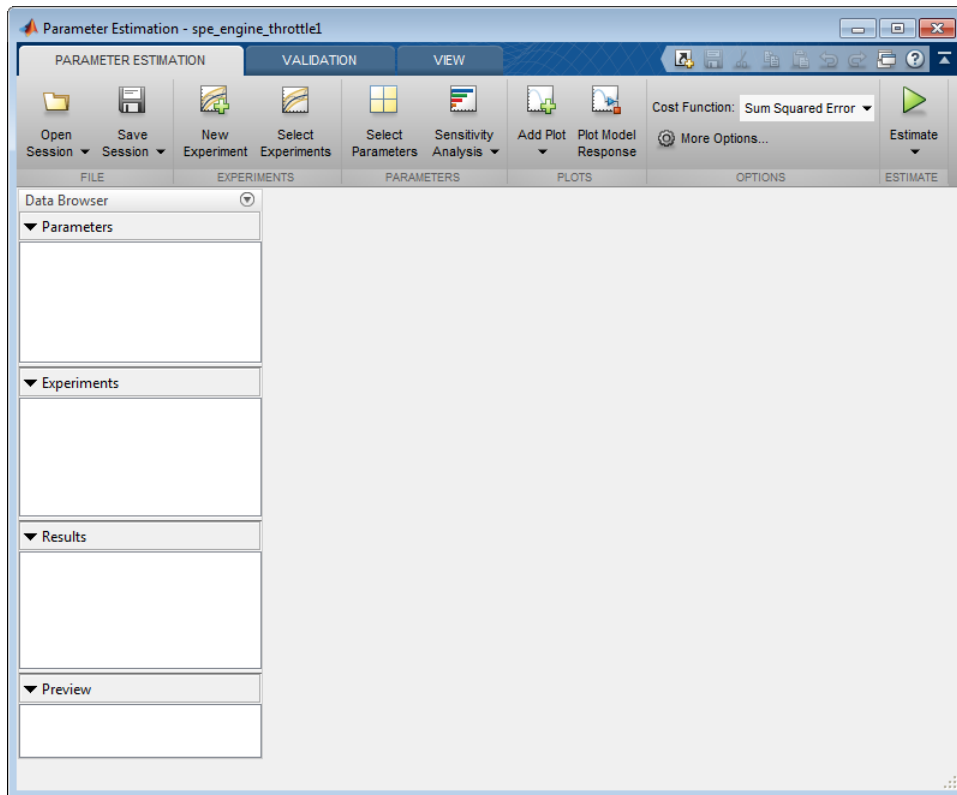

Note: The Simulink model must remain open to perform parameter estimation tasks.

Create an Experiment for Parameter Estimation


In the Parameter Estimation tool on the **Parameter Estimation** tab, click the **New Experiment** button. This will create an experiment with the name **Exp** in the **Experiments** list on the left pane. You can rename it by right-clicking and selecting **Rename** from the list. For example, call it **NewData1**.

Import Data

This portion of the tutorial explains how to import measured I/O data into the experiment in the Parameter Estimation tool. Importing data assigns the data to the corresponding model input and output signals.

The model input and output signals are designated with the Inport **Input** and Outport **Position** blocks, respectively. To learn more about the blocks, see the Inport and Outport block reference pages in the Simulink documentation.


To import data into the experiment, right-click and select **Edit...** to launch the experiment editor. Import the output data by typing `[time1,position1]` in the dialog box in the **Outputs** panel. Import the input data by typing `[time1,input1]` in the dialog box in the **Inputs** panel.

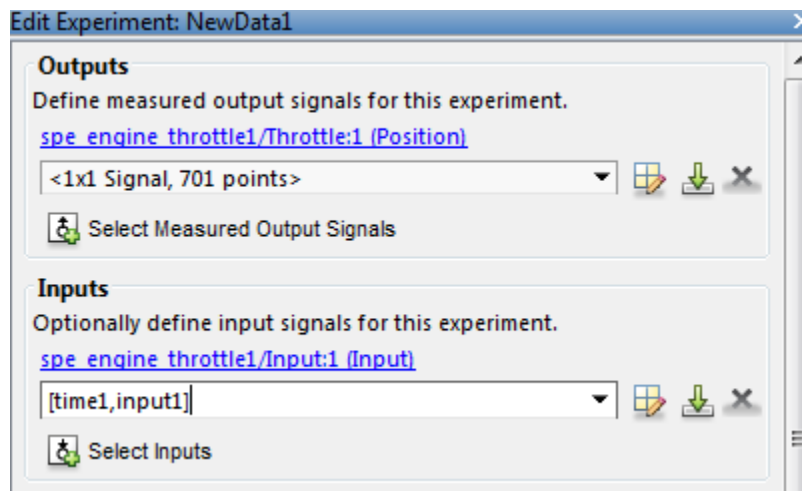

Analyze Data

This portion of the tutorial explains how to analyze the output data quality by viewing the data characteristics on a time plot. Based on the analysis, you can decide whether to preprocess the data before estimating parameters. For example, if the data contains noise, you might want to filter the noise from the system dynamics before estimating parameters.

To create an experiment plot, click **Add Plot** on the **Parameter Estimation** tab and select the experiment name, for example, **NewData1** under **Experiment Plots**.

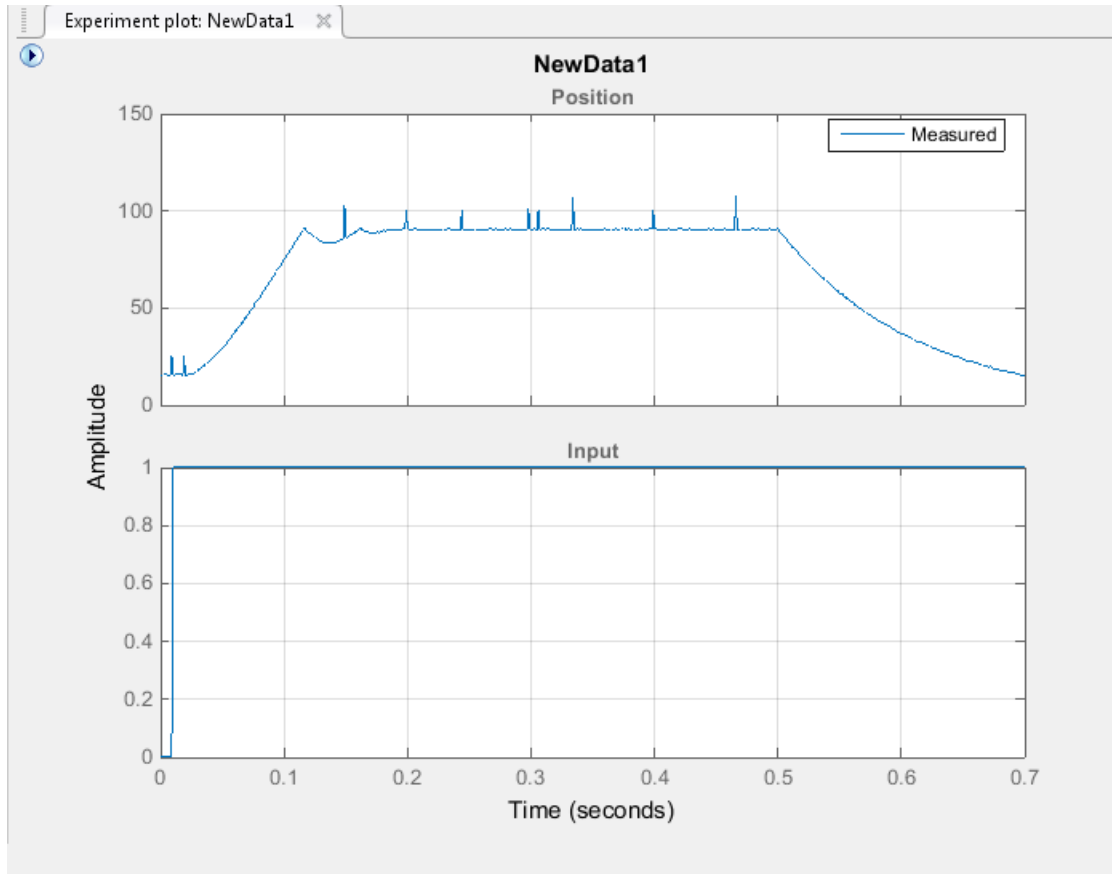

The time plot shows the output data in response to a step input, as described in “About the Sample Data” on page 2-4. The plot shows a rapid decrease in the response after $t = 0.5$ s because the system is shut down. To focus parameter estimation on the time period when the system is active, select the data samples between $t = 0$ s and $t = 0.5$ s, as in “Extract Data for Estimation” on page 2-9 .

The spikes in the data indicate *outliers*, defined as data values that deviate from the mean by more than three standard deviations. They might be caused by measurement errors or sensor problems. The response also contains noise. Before estimating model

parameters from this data, remove the outliers and filter the noise, as described in “Replacing Outliers” on page 2-10 and “Filtering Data” on page 2-12.

You can also plot the experiment data by right-clicking the experiment, for example **NewData1**, and selecting **Plot measured experiment data** from the list.

Extract Data for Estimation


This portion of the tutorial explains how to select a subset of I/O data for estimation. As described in “Analyze Data” on page 2-7, the system is shut down at $t = 0.5$ s. To focus the estimation on the time period before $t = 0.5$ s, exclude the data samples beyond $t = 0.5$ s. This operation selects the data between $t = 0$ s and $t = 0.5$ s for estimation.

First, import the data into the experiment, as described in “Import Data” on page 2-7.

To select the portion of data between $t = 0$ s and $t = 0.5$ s:

- 1 Plot the measured data as described in “Analyze Data” on page 2-7, to have access to the **Experiment Plot** tab.
- 2 On the **Experiment Plot** tab, click **Extract Data** to launch the **Extract Data** tab.
- 3 Enter 0 in the **Start Time:** field and 0.5 in the **End Time:** field.
- 4 Click **Save As** to save data in a new experiment, for example, **NewData1_1**.

The Parameter Estimation tool extracts the corresponding input data. To plot the new data, click on **Add Plot** on the **Parameter Estimation** tab. Select the experiment name, for example, **NewData1_1** in the **Experiment Plots** list to display the experiment plot of the data from $t = 0$ s to $t = 0.5$ s.

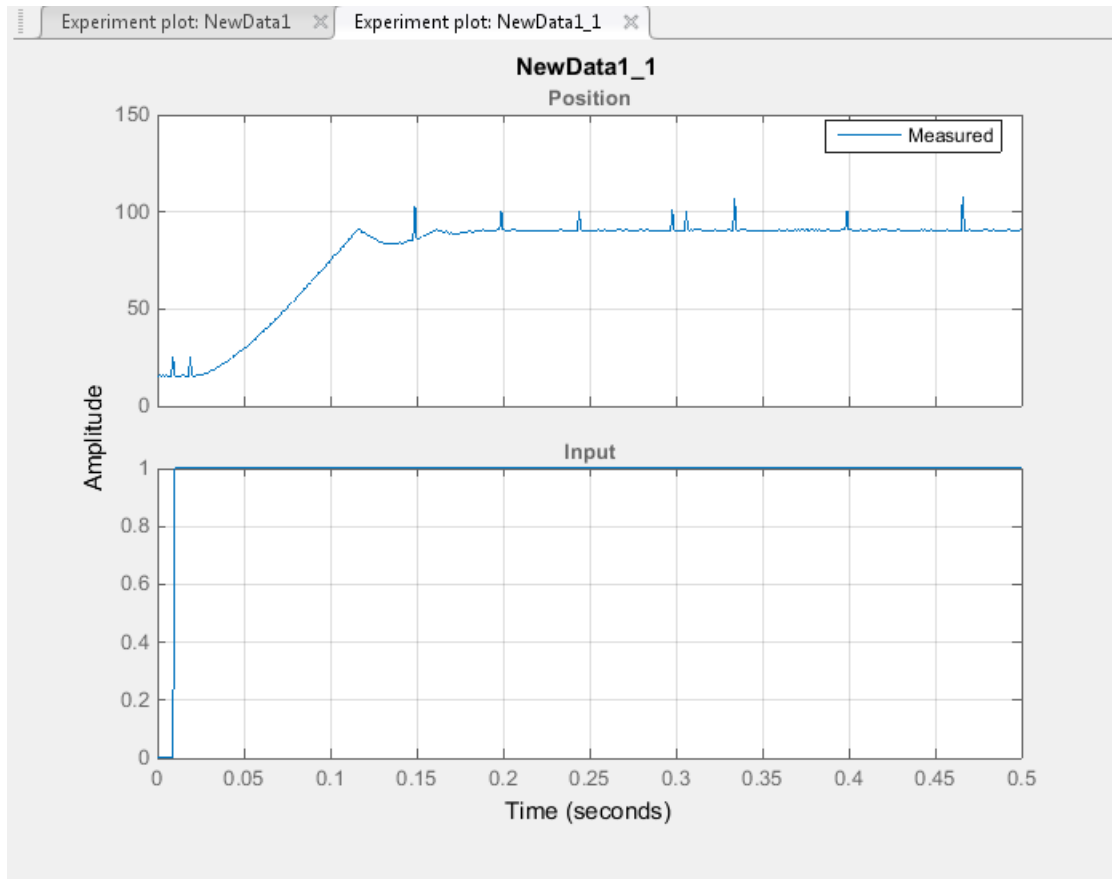

Replacing Outliers

- “Why Replace Outliers” on page 2-10
- “How to Replace Outliers” on page 2-11


Why Replace Outliers

Outliers are data values that deviate from the mean by more than three standard deviations. When estimating parameters from data containing outliers, the results might not be accurate. Hence, you might choose to replace the outliers in the data before you estimate the parameters.

How to Replace Outliers

In the experiment plot of the data extracted as in “Extract Data for Estimation” on page 2-9, you can visually detect the data points that seem to be outliers. To replace these points:

- 1** In the **Experiment Plot** tab, click **Replace data** to launch the **Replace data** tab. The experiment plot shows the preview data, which is in light brown. On the preview, select the data point that you want to replace.
- 2** On the **Replace Data** tab, click **Replace data** and select the constant value. For example, replace the output signal data that correspond to time points 0.00899 and 0.0189 with 15, that corresponds to the time point 0.149 with 86, and the rest of the outlier data points with 90.
- 3** Click the arrow in the **Apply** section and select **Save As: Create a new experiment from the modified data**. Parameter Estimation tool saves the modified data in the new experiment, for example, **NewData1_1_1**.
- 4** Click **Add Plot** on the **Parameter Estimation** tab and select the new experiment, for example, **NewData1_1_1**. This creates an experiment plot of the modified data. The spikes, that indicated outliers, no longer appear on the time plot.

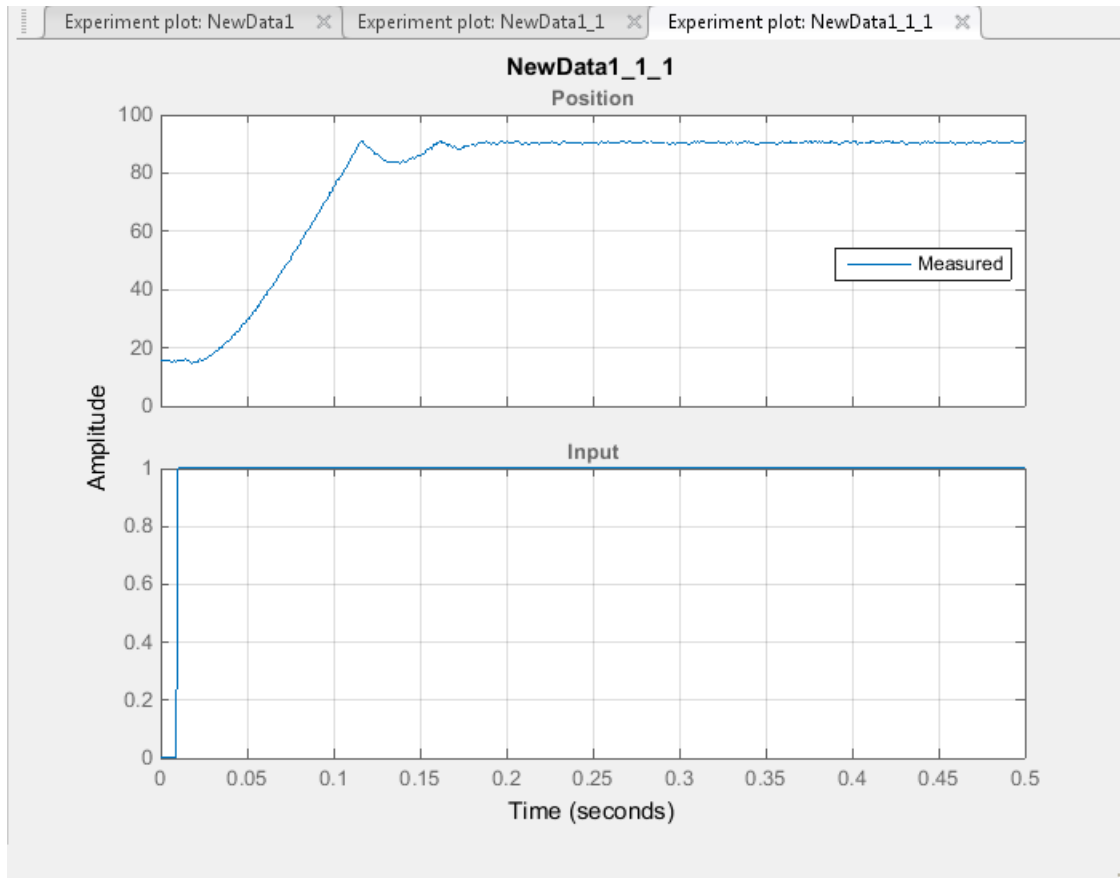


Filtering Data

This portion of the tutorial explains how to filter the noise and remove any periodic trends from the output data. First remove the outliers from the output data, as described in “Replacing Outliers” on page 2-10.


Click the experiment plot for the new experiment, for example, `NewData1_1_1`. On the **Experiment Plot** tab, click **Low-Pass Filter**.

- 1 On the **Low-Pass Filter** tab select **Filter all signals**.

- 2 Enter 0.4 in the **Normalized cutoff frequency** field.
- 3 Click **Options**. Enter 1 in the **Filter order** field and click **OK**.

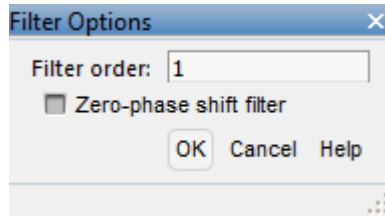

- 4 Click the arrow in the **Apply** section and select **Save As: Create a new experiment from the modified data**. Parameter Estimation tool saves the modified data in the new experiment, for example, `NewData1_1_1_1`.
- 5 Click **Add Plot** on the **Parameter Estimation** tab and select the new experiment, `NewData1_1_1_1`. This creates an experiment plot of the modified data. The noise is filtered and the output data appears smooth.

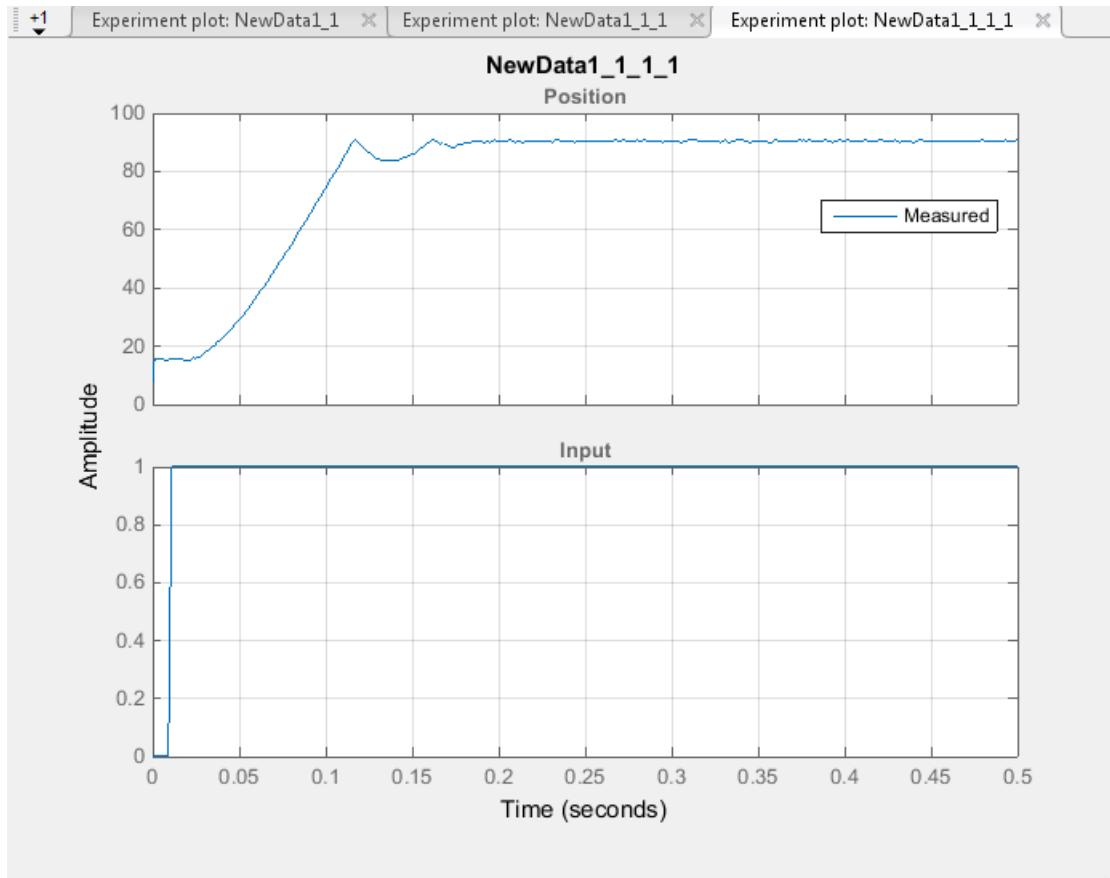

Saving the Session

After you prepare the data, delete the data in the older experiments, for example, `New Data1`, `New Data1_1`, `New Data1_1_1`. You can rename the last experiment, for example, `NewData1_1_1_1` as `NewData1`, and save the session.

To delete the experiments, right-click the experiment name in the **Experiments** pane, and select **Delete** from the list.

To save the session, click **Save Session** on the **Parameter Estimation** tab to select where to save the session. Specify a name for the session, for example,

spe_engine_throttle1_sdoession.mat in the **File name** or **Session** field, and then click **Save** or **OK**. This saves your parameter estimation session as a MAT-file.

To learn how to estimate parameters from this data, see “Estimate Parameters from Measured Data” on page 2-16.

Estimate Parameters from Measured Data

In this section...

“About This Tutorial” on page 2-16

“Estimate Model Parameters Using Default Estimation Settings” on page 2-19

“Improve Estimation Results Using Parameter Bounds” on page 2-30

“Validate Estimated Model Parameters” on page 2-33

About This Tutorial

- “Objectives” on page 2-16
- “About the Model” on page 2-16

Objectives

This tutorial shows how to estimate parameters of a single-input single-output (SISO) Simulink model from measured input and output (I/O) data.


Note: Simulink Design Optimization software estimates parameters from real, time-domain data only.

You can perform the following tasks using the Parameter Estimation tool:

- Load a saved session containing data
- Estimate model parameters using default settings
- Validate the model, and refine the estimation results

About the Model

This tutorial uses the `spe_engine_throttle1` Simulink model, which represents an engine throttle system.

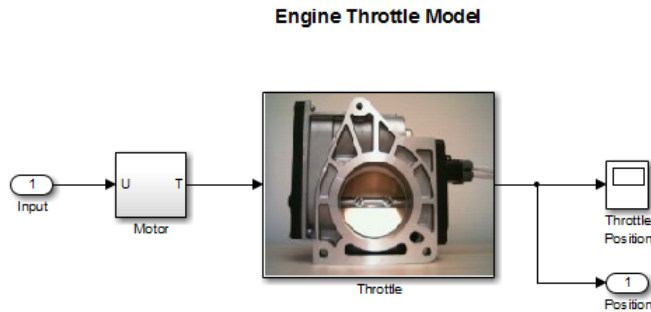


The throttle system controls the flow of air and fuel mixture to the engine cylinders. The throttle body contains a butterfly valve that opens when a driver presses the accelerator pedal. Opening this valve increases the amount of fuel mixture entering the cylinders, which increases the engine speed. A DC motor controls the opening angle of the butterfly valve in the throttle system. The models for these components are described in “Motor Subsystem” on page 2-17 and “Throttle Subsystem” on page 2-18.

The input to the throttle system is the motor current (in amperes), and the output is the angular position of the butterfly valve (in degrees).

Motor Subsystem

The **Motor** subsystem contains the DC motor model. To open the model, double-click the corresponding block.

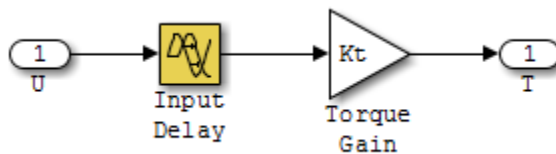


Components of the Motor subsystem	Description
Variables	U is the input current to the motor. T is the torque applied by the motor.
Parameters	K_t is the torque gain of the motor, represented by K_t in the model.

Components of the Motor subsystem	Description
	t_d is the input time delay of the motor, represented by <code>input_delay</code> in the model.
Equation	The torque applied by the motor is described in the following equation: $T(t) = K_t U(t - t_d)$ where t is time.
Input	U
Output	T

Throttle Subsystem

The `Throttle` subsystem contains the butterfly valve model. To open the model, right-click the corresponding block, and select **Mask > Look Under Mask**.

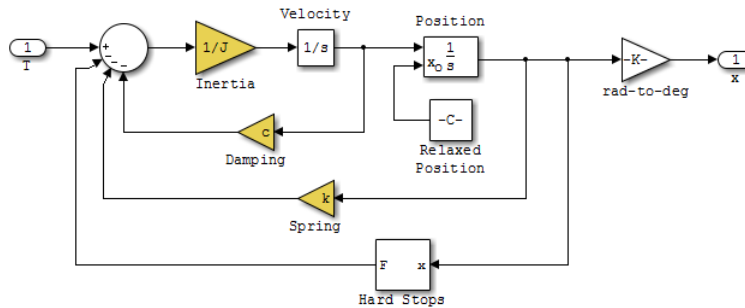

The `Hard Stops` block models the valve angular position limit of 15° to 90° .

The following table describes the variables, parameters, states, differential equations, inputs, and outputs of the .

Components of the Throttle subsystem	Description
Variables	T is the torque applied by the DC motor. θ is the angular position of the valve, represented by x in the model.

Components of the Throttle subsystem	Description
	$T_{hardstop}$ is the torque applied by the hard stop.
Parameters	<p>J is the valve inertia.</p> <p>c is the valve viscous friction.</p> <p>k is the valve spring constant.</p>
States	<p>θ is the angular position.</p> <p>$\dot{\theta}$ is the angular velocity.</p>
Equations	<p>The mathematical system for the butterfly valve is described in the following equation:</p> $J\ddot{\theta} + c\dot{\theta} + k\theta = T + T_{hardstop}$ <p>where $15^\circ \leq \theta \leq 90^\circ$, with initial conditions $\theta_0 = 15^\circ$, and $\dot{\theta}_0 = 0$.</p> <p>The torque applied by the Hard Stops block is described in the following equation:</p> $T_{hardstop} = \begin{cases} 0, & 15^\circ \leq \theta \leq 90^\circ \\ K(90^\circ - \theta), & \theta > 90^\circ \\ K(15^\circ - \theta), & \theta < 15^\circ \end{cases}$ <p>where K is the gain of the Hard Stops block.</p>
Input	T
Output	θ

Estimate Model Parameters Using Default Estimation Settings

- “Overview of the Estimation Process” on page 2-20
- “Specify Estimation Data and Parameters” on page 2-21

Overview of the Estimation Process

Simulink Design Optimization software uses optimization techniques to estimate model parameters. In each optimization iteration, it simulates the model with the current parameter values. It computes and minimizes the error between the simulated and measured output. The estimation is complete when the optimization method finds a local minimum.

To start the estimation process, first open the engine throttle system Simulink model by typing the following at the MATLAB prompt:

```
spe_engine_throttle1
```


In the Simulink Editor, select **Analysis > Parameter Estimation**.

This action opens a new session with the name **Parameter Estimation - spe_engine_throttle1** in the Parameter Estimation tool.


Note: The Simulink model must remain open to perform parameter estimation tasks.

Specify Estimation Data and Parameters

- 1 Load or import the estimation data.

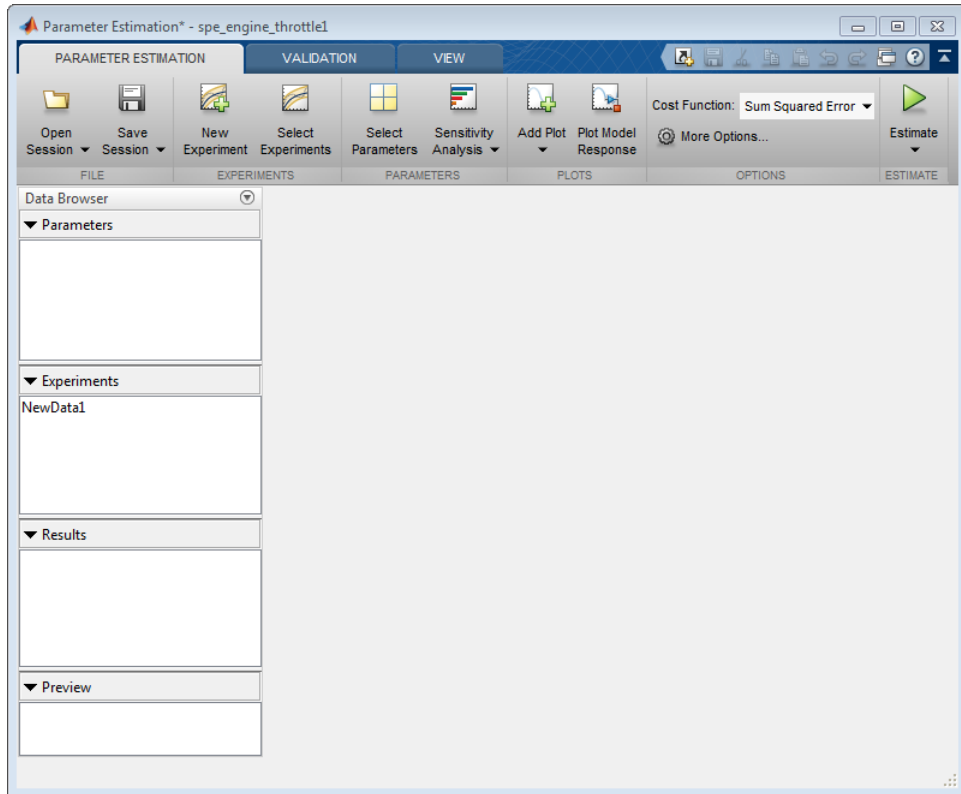


- a If you prepared data and saved your session as described in “Prepare Data for Parameter Estimation” on page 2-3, load the preconfigured session. On the **Parameter Estimation** tab, click the **Open Session** drop down list.

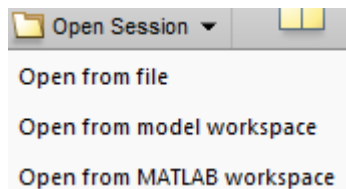

Select the correct option to browse to the location of your saved session, for example, **Open from file**. Then select the MAT-file.

- b** If you do not have a previously saved session, create a new experiment. on the **Parameter Estimation** tab, click **New Experiment** . In the **Experiments** list on the left pane. You can rename it by right-clicking and selecting **Rename** from the list. For example, call it **NewData1**.


To import data into the experiment, right-click and select **Edit...** to launch the experiment editor. Import the output data by typing in the dialog box in the **Outputs** panel, for example [**time1,position1**]. Import the input data by typing in the dialog box in the **Inputs** panel, for example [**time1,input1**].

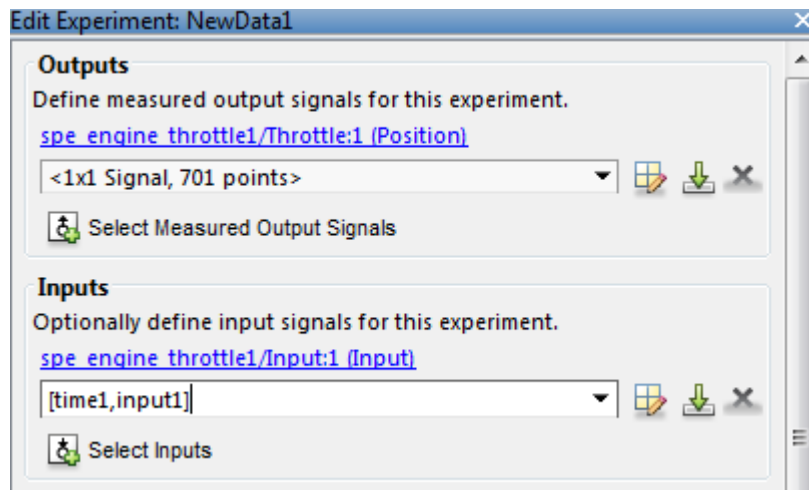


- 2** Specify parameters for estimation. On the **Parameter Estimation** tab, click the **Select Parameters** button to open the **Edit: Estimated Parameters** dialog box. In the **Parameters Tuned for all Experiments** panel, click the **Select parameters** button to launch the **Select Model Variables** dialog box.

Select the parameters **J**, **c**, **input_delay**, and **k**, and click **OK**.

Note: In your application, if the model parameters you want to estimate are not listed in the **Select Model Variables** dialog box, first specify these parameters as variables. See, “Add Model Parameters as Variables for Estimation”.

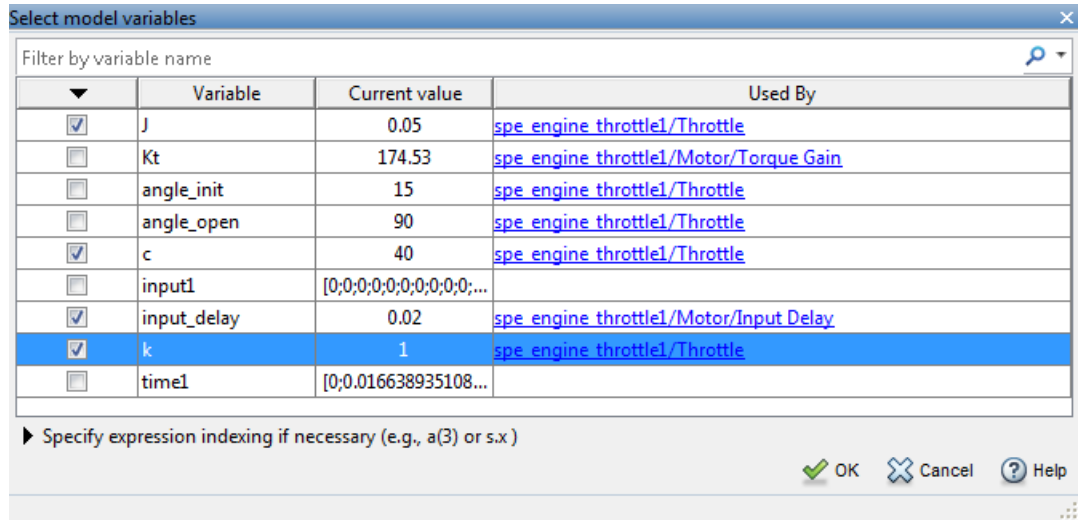

The **Edit: Estimated Parameters** window now looks as follows.

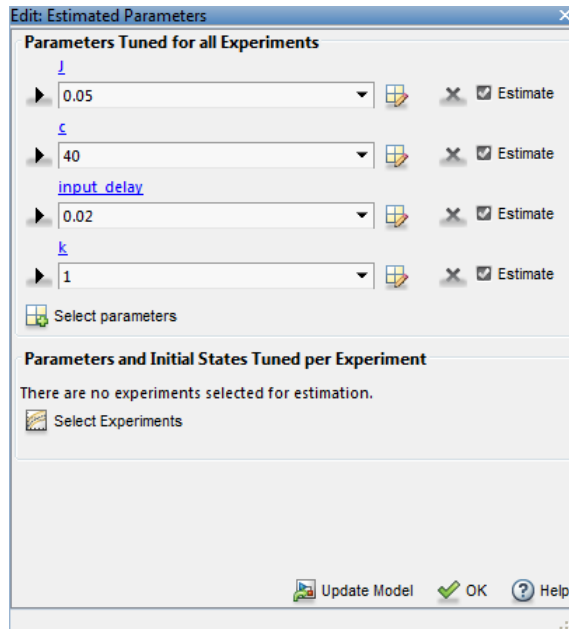


The tool selects the parameters you add for estimation by default. When estimating a large number of parameters, you can first select a subset of parameters to estimate.

You can also first use sensitivity analysis to identify the parameters that most influence the estimation, and then specify these parameters for estimation. To open the Sensitivity Analysis tool, in the **Parameter Estimation** tab, click




Sensitivity Analysis. In the Sensitivity Analysis tool, you can identify the model parameters that most influence the estimation problem and compute initial values for the estimation parameters.


- 3 Specify an experiment for estimation. On the **Parameter Estimation** tab, click **Select Experiments**, and select the box under the **Estimation** column. Click **OK**.

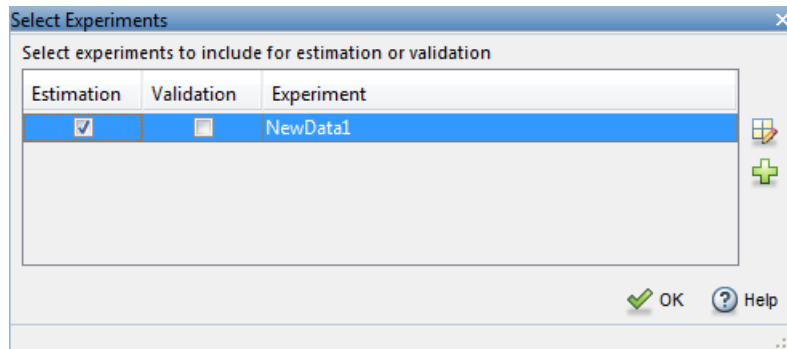

- 4 To add progress plots, click **Add Plot** on the **Parameter Estimation** tab. Here you can choose the **Parameter Trajectory** and **Estimation Cost** iteration plots. You can also choose an experiment plot of measured and simulated data for **NewData1**.
- 5 Estimate the parameters using the default settings. On the **Parameter Estimation** tab, click **Estimate** to open the **Parameter Trajectory** plot and **Estimation Progress Report** window and estimate the parameters. The **Parameter Trajectory** plot shows the change in the parameter values at each iteration.

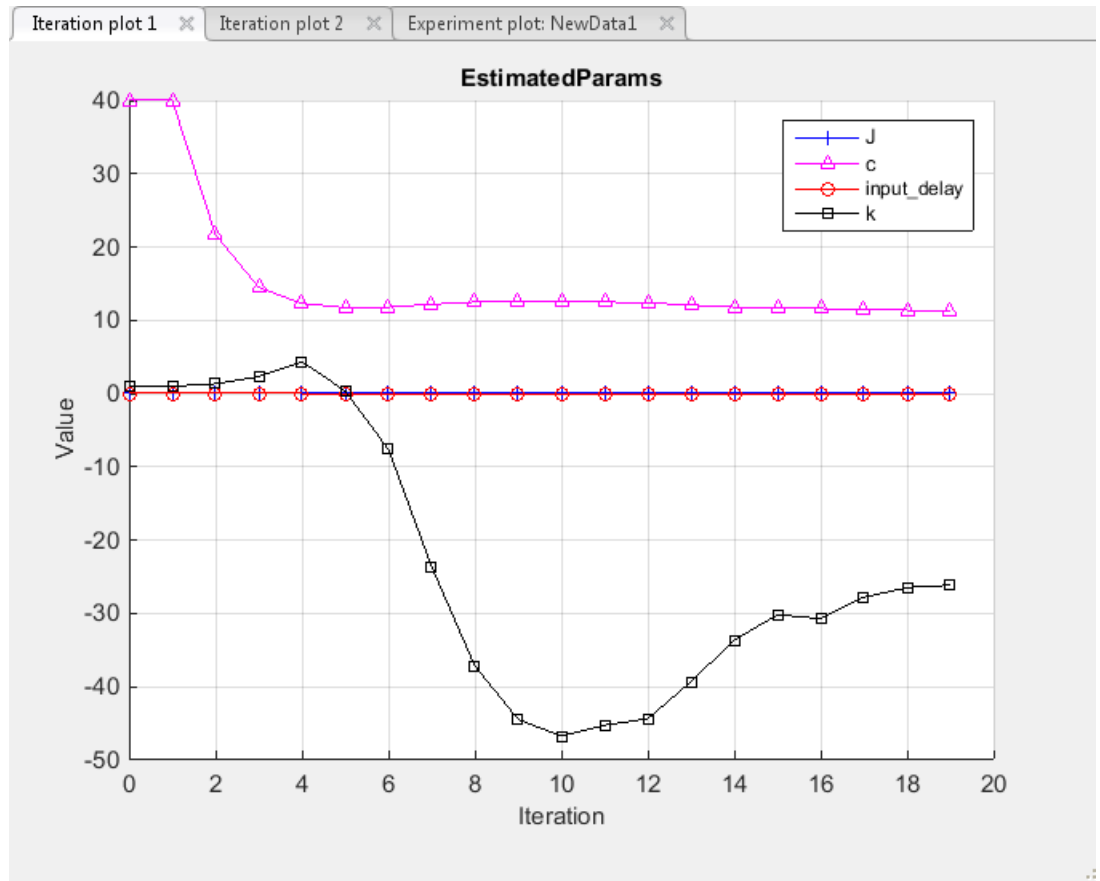

The **Estimation Progress Report** shows the iteration number, number of times the objective function is evaluated, and the value of the cost function at the end of each iteration. After the estimation converges, the **Estimation Progress Report** looks like this figure.

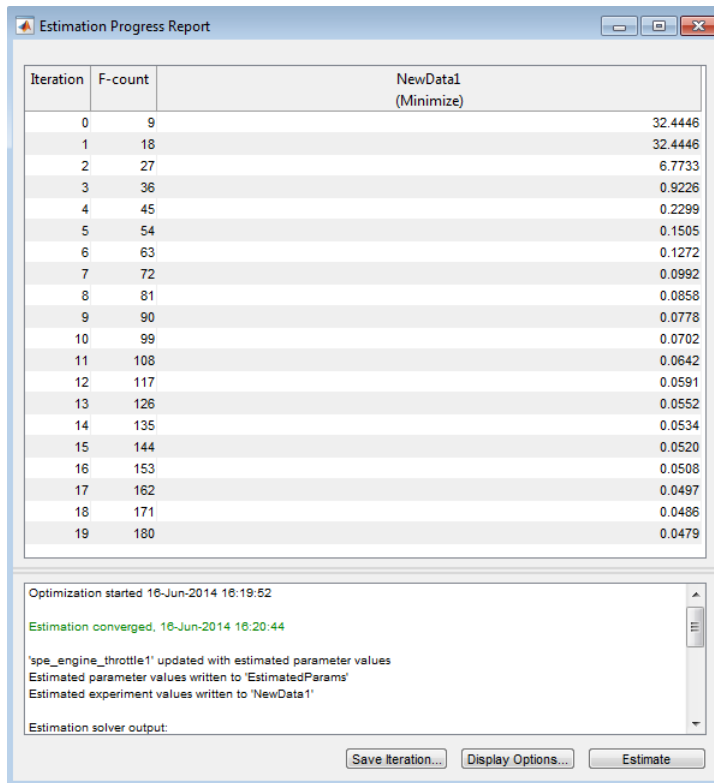


The screenshot shows a window titled "Estimation Progress Report" with a table of iteration data and a log of optimization progress. The table has three columns: "Iteration", "F-count", and "NewData1 (Minimize)". The log below the table shows the optimization starting on 16-Jun-2014 at 16:19:52, converging at 16:20:44, and updating parameter values for 'spe_engine_throttle1'.

Iteration	F-count	NewData1 (Minimize)
0	9	32.4446
1	18	32.4446
2	27	6.7733
3	36	0.9226
4	45	0.2299
5	54	0.1505
6	63	0.1272
7	72	0.0992
8	81	0.0858
9	90	0.0778
10	99	0.0702
11	108	0.0642
12	117	0.0591
13	126	0.0552
14	135	0.0534
15	144	0.0520
16	153	0.0508
17	162	0.0497
18	171	0.0486
19	180	0.0479


Optimization started 16-Jun-2014 16:19:52
Estimation converged, 16-Jun-2014 16:20:44
'spe_engine_throttle1' updated with estimated parameter values
Estimated parameter values written to 'EstimatedParams'
Estimated experiment values written to 'NewData1'
Estimation solver output:

Save Iteration... Display Options... Estimate


The estimated parameters are saved in the Parameter Estimation tool, in the **Results** section of the **Data Browser** pane, as **EstimatedParams**. Right-click **EstimatedParams**, and select **Open...** to view the results.

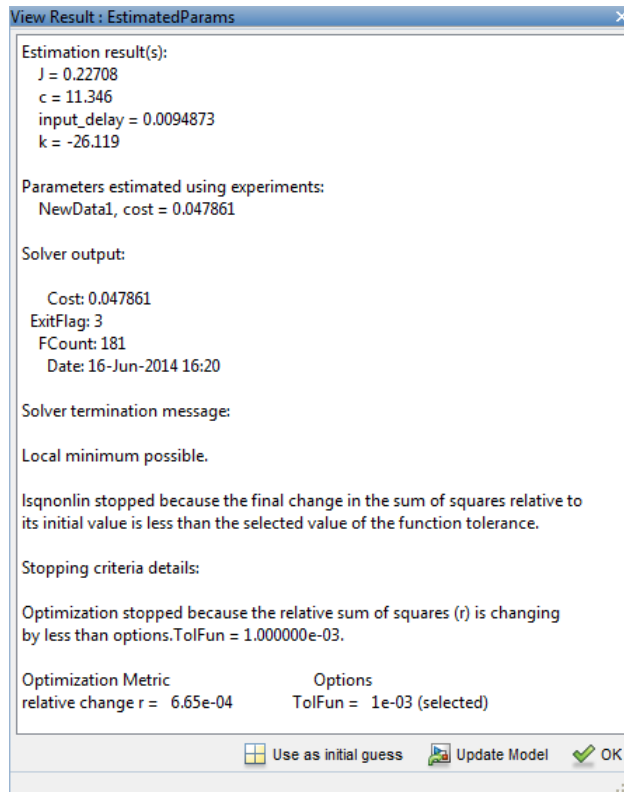

- 6 Examine the estimated cost function graph. Cost function is the error between the simulated and measured output. During estimation, the default optimization method **Nonlinear least squares**, `lsqnonlin`, minimizes the cost function by changing the parameter values. The following figure displays the change in the expected cost during iterations.

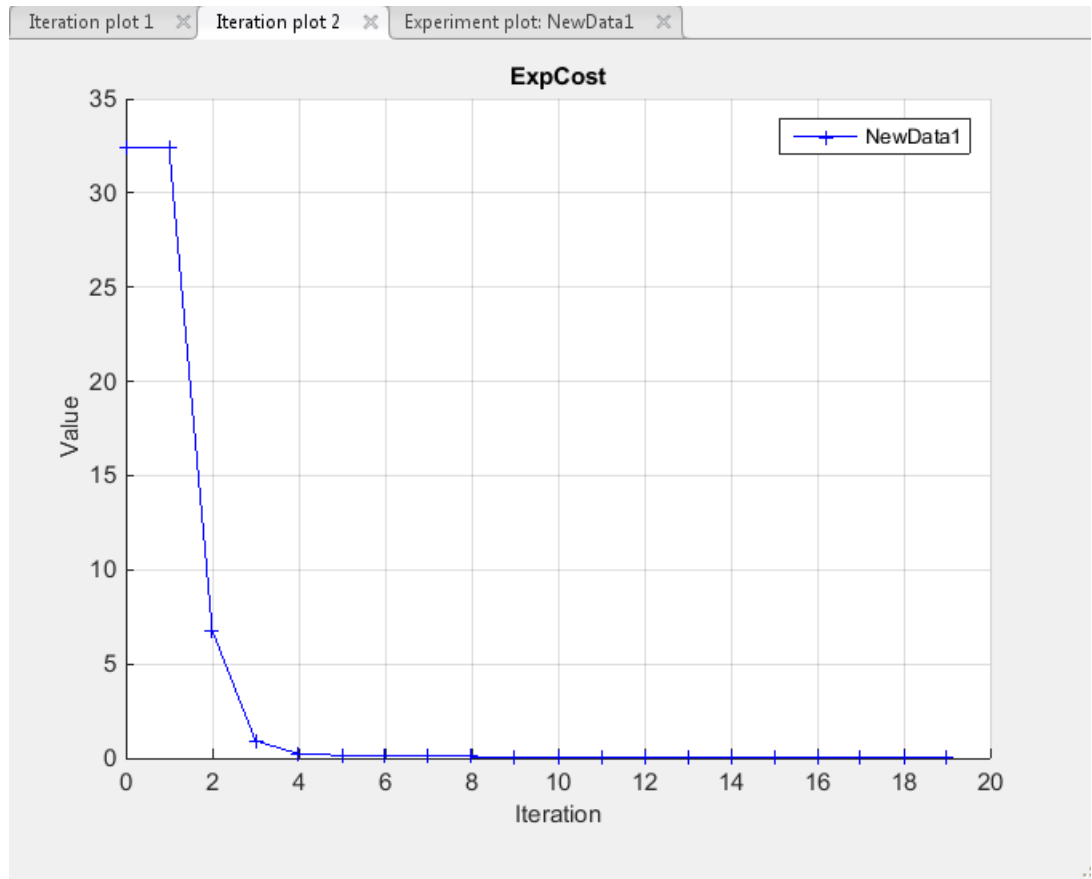

- 7 Examine the simulated response plot to see how well the simulated output matches the measured output. The experiment plot shows that the output simulated using the estimated parameters is close to the measured outputs.

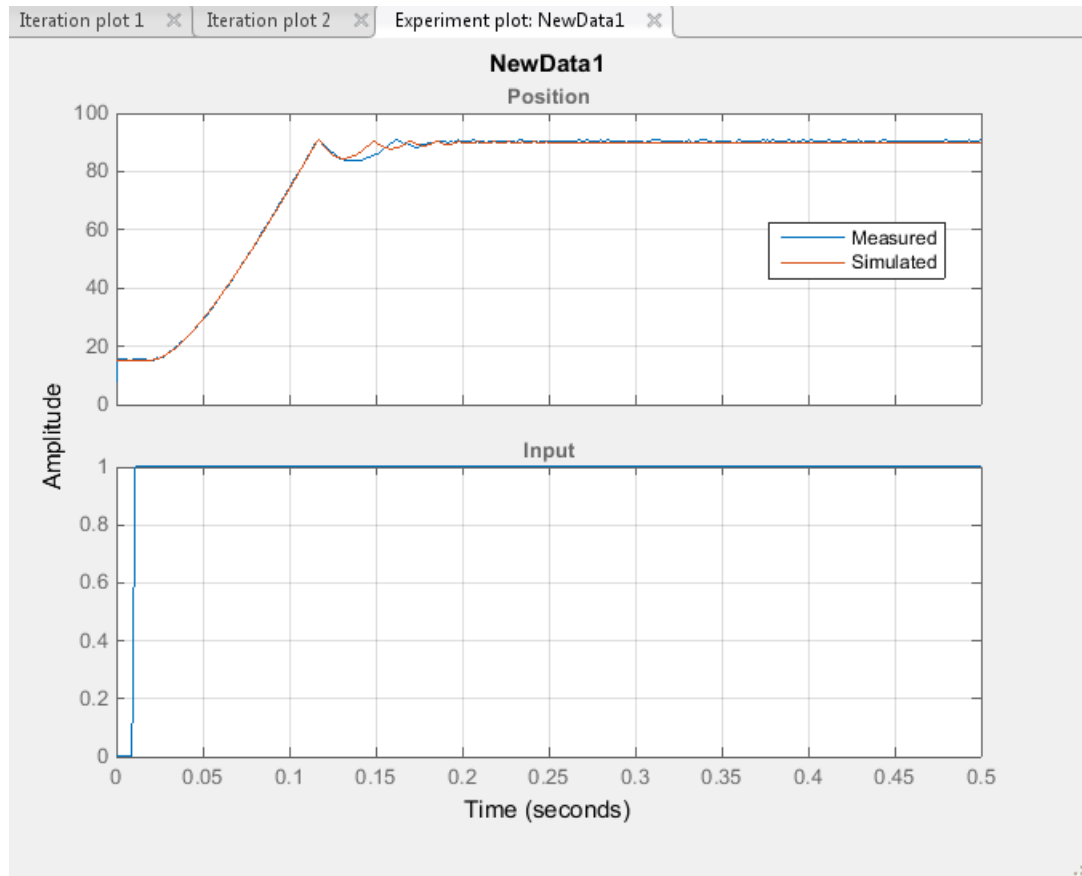

Improve Estimation Results Using Parameter Bounds

You can improve the accuracy of estimation by specifying bounds on parameter values. This technique restricts the region in which the optimization method searches for a local minima.

The engine throttle system has these characteristics:


- All parameter values are positive.
- Maximum time delay of the system, represented by `input_delay`, is 0.1 s.

Therefore, specify 0 as the minimum value for all parameters, and 0.1 as the maximum value of `input_delay`. In the Parameter Estimation tool, click the **Select Parameters** button to specify bounds on the parameter values. For each parameter, click the right arrow toggle to display the minimum, maximum, and scale fields. Specify the minimum value for each parameter by replacing `-Inf` with 0 in the **Minimum** field. Specify the maximum value for `input_delay` by replacing `+Inf` with 0.1 in the corresponding **Maximum** field.




The screenshot shows the parameter estimation interface for the parameter `input_delay`. The parameter name is displayed in blue text at the top left. Below it, there is a dropdown menu showing the current value `0.02`. To the right of this dropdown is a right-pointing arrow icon. Further right is a close button (an 'X' icon) and a checked checkbox labeled 'Estimate'. Below the main dropdown are three more dropdown menus, each with a right-pointing arrow icon to its right. The first is labeled 'Minimum:' and contains the value `0`. The second is labeled 'Maximum:' and contains the value `0.1`. The third is labeled 'Scale:' and contains the value `0.03125`.

After estimating the parameters, analyze the results using the experiment plot and the plot for expected cost.

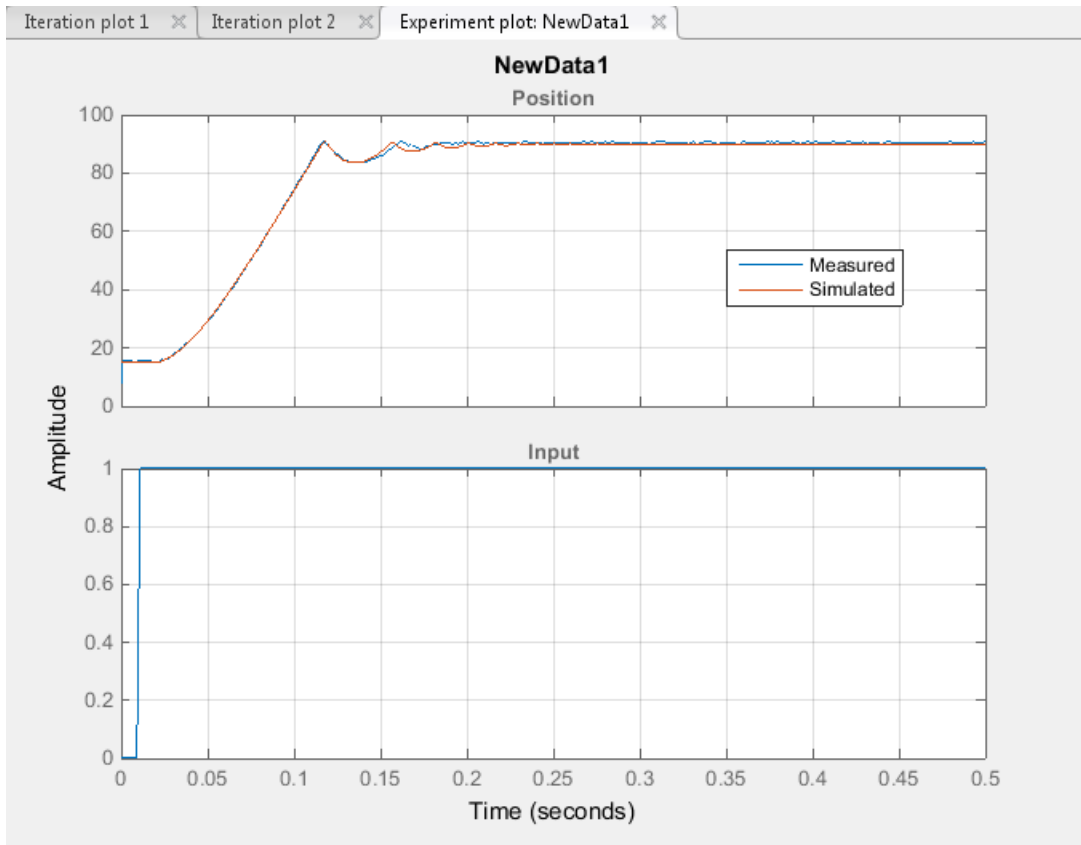

The data simulated using the estimated parameter values agree better with the measured data than when the parameter limits were not specified.

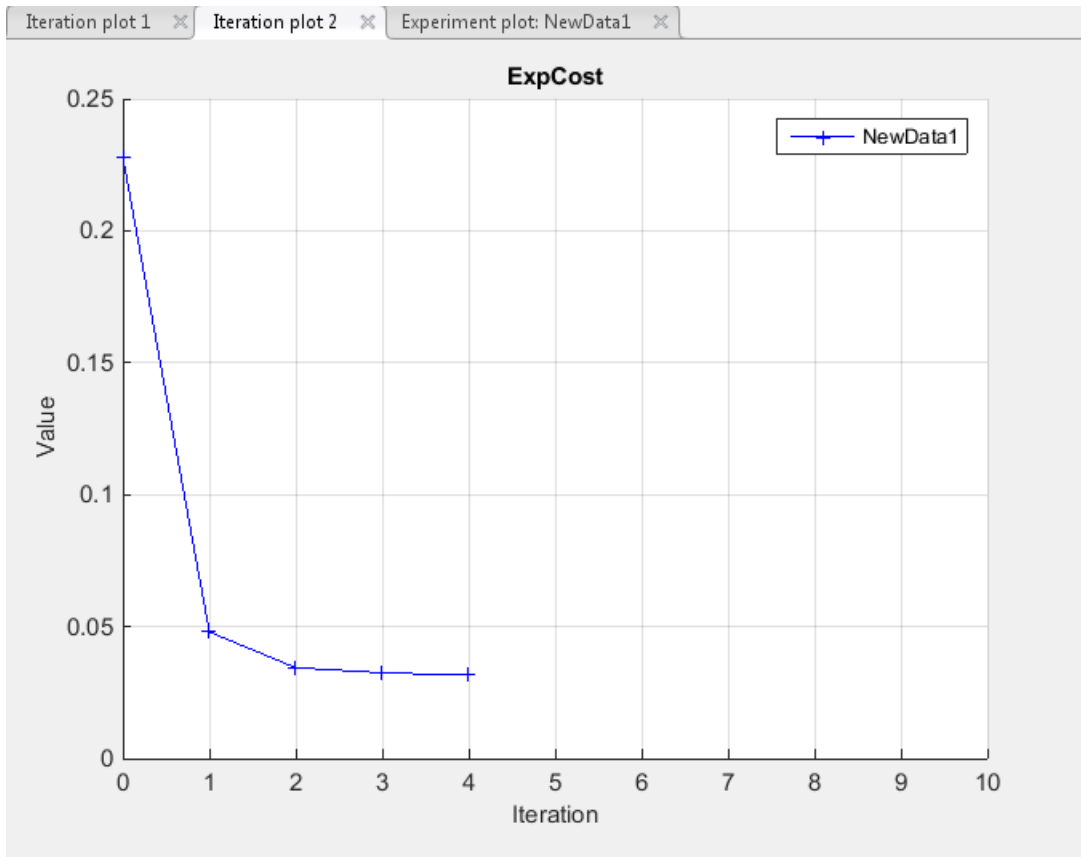


Validate Estimated Model Parameters

After estimating model parameters, validate the model using another data set (*validation data*). A good match between the simulated response and the validation data indicates that you have not overfitted the model.


To validate the estimated parameters using a validation data set:

- 1 Create a new experiment to use for validation. Name it `ValidationData`. Import the validation I/O data, `input2` and `position2`, and the time vector, `time2` in the `ValidationData` experiment. To do this, in the Parameter Estimation tool, in the Experiments pane, right-click `ValidationData` and select **Edit...** to open the


experiment editor. Then, type [time2,position2] in the output dialog box and [time2,input2] in the input dialog box. For more information, see “Import Data for Parameter Estimation”.

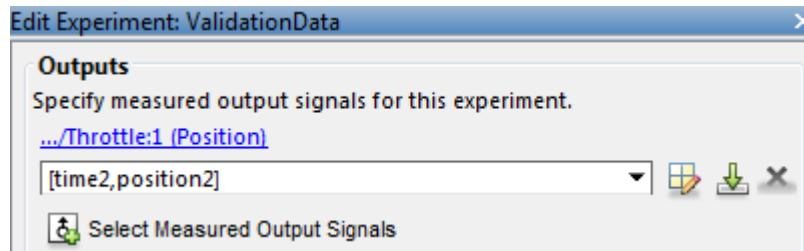


- 2 Select the experiment for validation. On the **Parameter Estimation** tab, click **Select Experiments**. By default, the **ValidationData** experiment is selected for estimation. Deselect the check box that corresponds to **ValidationData** for estimation and select the check box for validation.

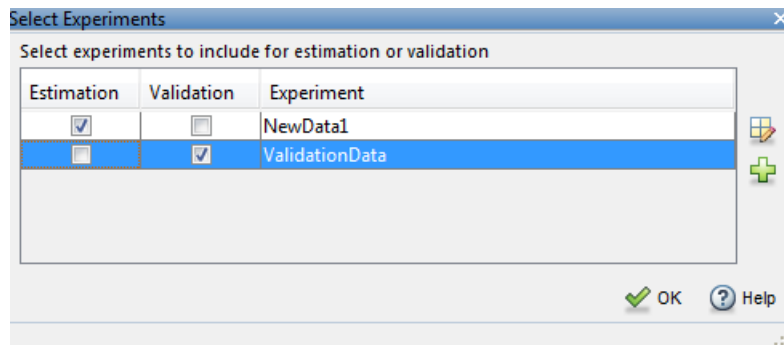


- 3 Select results to use. On the **Validation** tab, click **Select Results to Validate**.

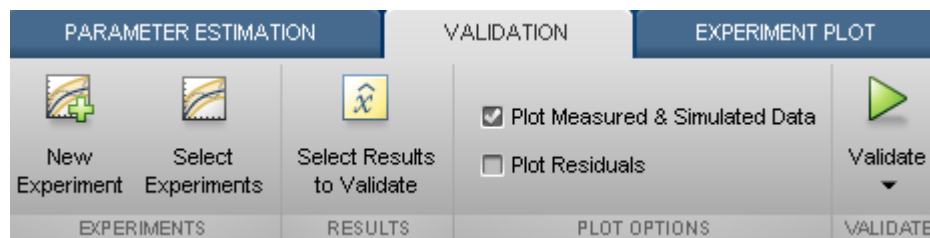

Deselect Use current parameter values and select EstimatedParams, and click **OK**.

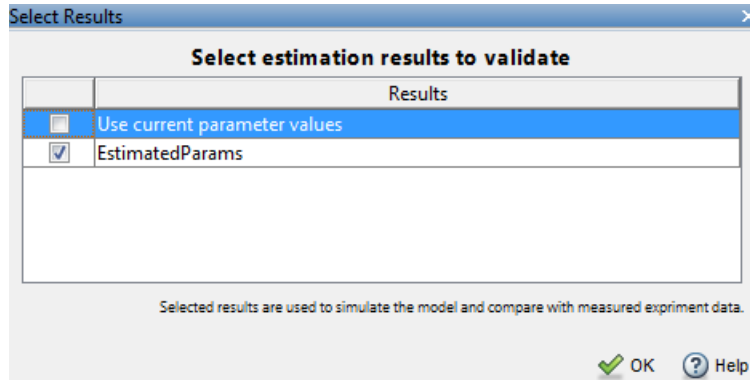


- 4 Select the plots for measured and simulated data, and residuals on the **Validation** tab. You can assess how much the data simulated using the estimated parameters agrees with the measured data using these plots.

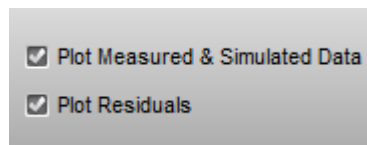


On the **Validation** tab, click **Validate** to start validation.

- 5 Examine the plots.
 - a Examine the experiment plot to see how well the simulated output matches the output data.

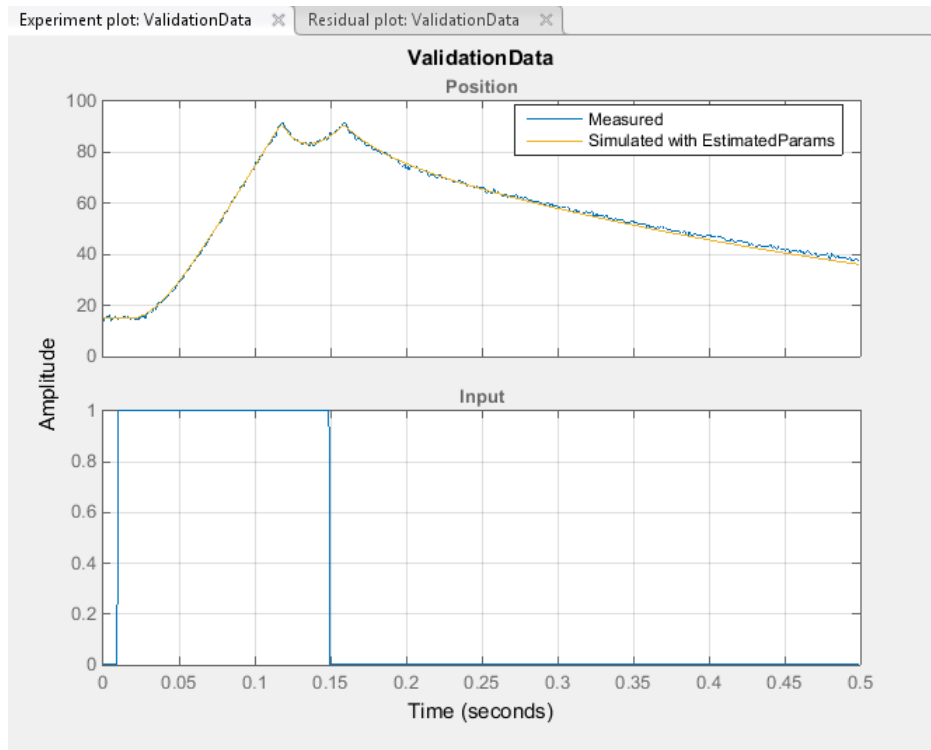


The simulated response as shown in light brown on the top experiment plot is overlaid on the measured out put data, and closely matches the measured validation data.

- b** Examine the residuals plot to compare the difference between the simulated response and measured data.

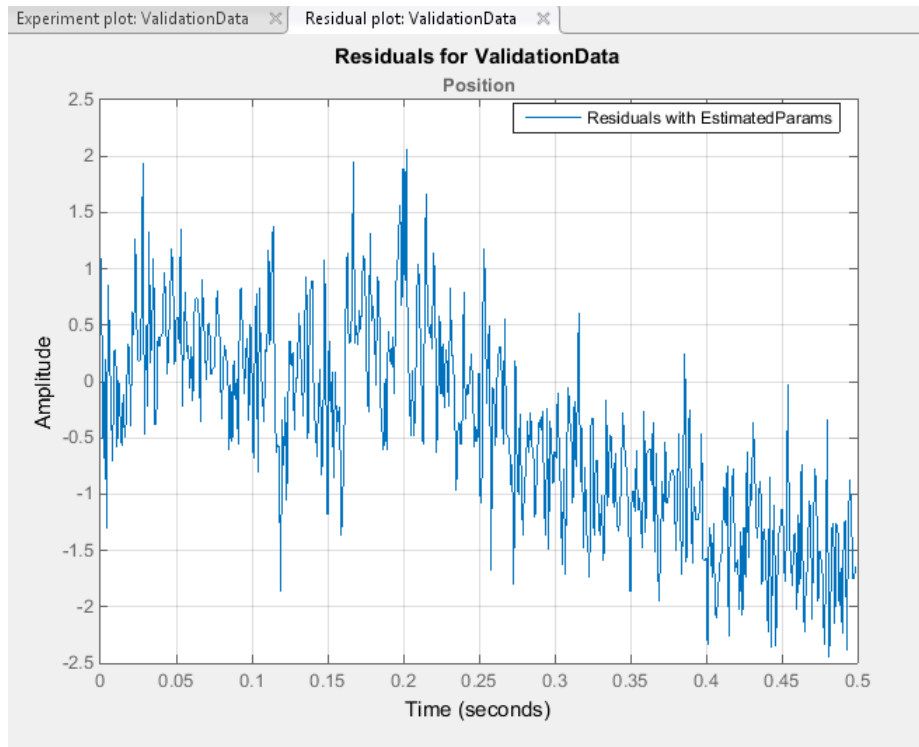

The difference between the simulated and measured data varies between 2 and -2.5. The residuals lie within 6% of the maximum output variation and do not display any systematic patterns. This indicates a good fit between the simulated output and measured data.

- 6 Save the session. On the **Parameter Estimation** tab, click **Save Session**.

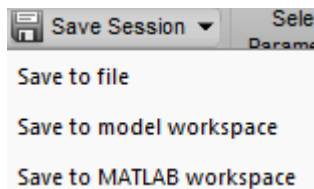

From the drop-down list select where to save the session. Specify the file name, and click **Save** or **OK** to save your parameter estimation session as a MAT-file.

Response Optimization

- “Supported Design Requirements” on page 3-2
- “Design Optimization to Meet Step Response Requirements (GUI)” on page 3-4
- “Design Optimization to Meet Step Response Requirements (Code)” on page 3-17
- “Design Optimization to Track Reference Signal (GUI)” on page 3-25
- “Design Optimization Using Frequency-Domain Check Blocks (GUI)” on page 3-41
- “Time-Domain Model Verification” on page 3-53

Supported Design Requirements

You can optimize response of Simulink models to meet time- and frequency-domain design requirements.

Simulink Design Optimization software optimizes model response by formulating the requirements into a constrained optimization problem. It then solves the problem using optimization methods.

- For time-domain requirements, the software simulates the model during optimization, compares the current response with the requirement and uses gradient methods to modify design variables (model parameters) to meet the objectives.

You can specify time-domain requirements either in blocks from the **Signal Constraints** library or without adding blocks to the model. You can also include requirements specified in **Check Static Range**, **Check Static Lower Bound** and **Check Static Upper Bound** blocks from the Simulink **Model Verification** library.

- For frequency-domain requirements, the software linearizes the portion of the model between specified linearization inputs and outputs, compares the linear system with the requirement and uses gradient methods to modify the design variables to meet the objectives.

If you have Simulink Control Design software, you can optimize the model to meet frequency-domain requirements, such as Bode magnitude and gain and phase margin bounds. You can specify the frequency-domain requirements without adding blocks to the model or by using the “Model Verification” blocks of the Simulink Control Design software library.

Related Examples

“Design Optimization to Meet Step Response Requirements (GUI)” on page 3-4

“Design Optimization to Meet Step Response Requirements (Code)” on page 3-17

“Design Optimization to Track Reference Signal (GUI)” on page 3-25

“Design Optimization to Meet Frequency-Domain Requirements (GUI)”

“Design Optimization Using Frequency-Domain Check Blocks (GUI)” on page 3-41

Design Optimization to Meet Time- and Frequency-Domain Requirements (GUI)

More About

“How the Optimization Algorithm Formulates Minimization Problems”

“Specify Time-Domain Design Requirements”

“Specify Frequency-Domain Design Requirements”

Design Optimization to Meet Step Response Requirements (GUI)

This example shows how to optimize controller parameters to meet step response design requirements using the Response Optimization tool. You specify the design requirements in a **Check Step Response Characteristics** block.

In this section...

“Model Structure” on page 3-4

“Design Requirements” on page 3-6

“Specify Step Response Requirements” on page 3-6

“Specify Design Variables” on page 3-9


“Optimize Model Response” on page 3-12

“Save the Session” on page 3-15


Model Structure

The Simulink model `watertank_stepinput` includes the nonlinear Water-Tank System plant and a PI controller in a single-loop feedback system.


The **Step** block applies a step input. You can also use other types of input, such as a ramp, to optimize the response generated by such inputs.

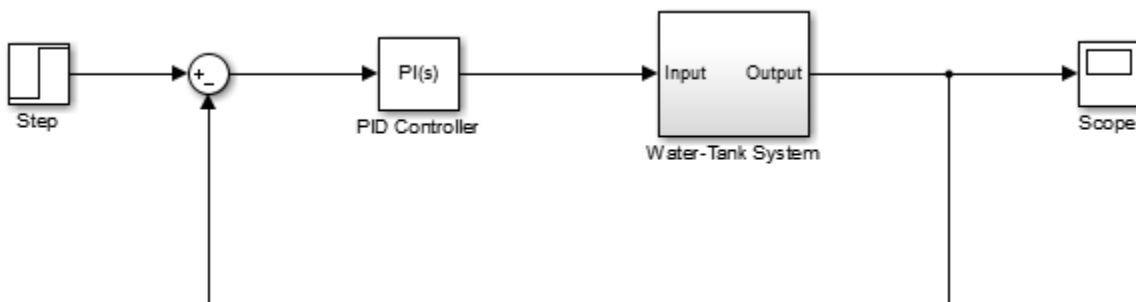

This figure shows the Water-Tank System.

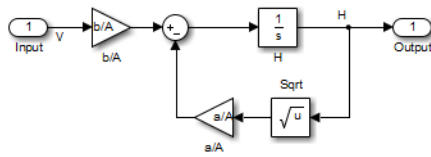

Water enters the tank at the top at a rate proportional to the valve opening. The valve opening is proportional to the voltage, V , applied to the pump. The water leaves through an opening in the tank base at a rate that is proportional to the square root of the water height, H . The presence of the square root in the water flow rate results in a nonlinear plant.

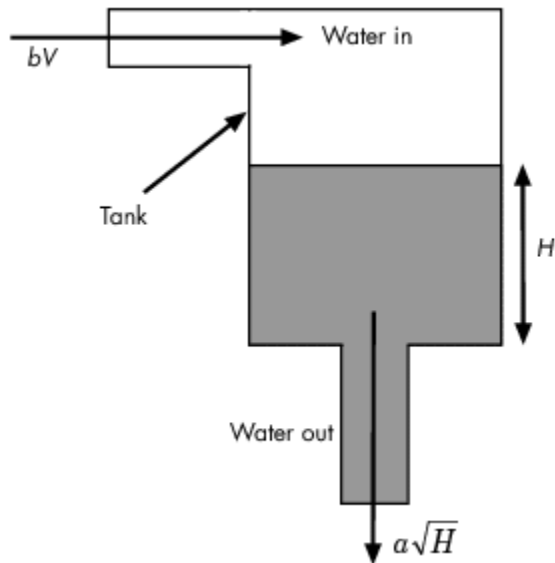

The following table describes the variables, parameters, differential equations, states, inputs, and outputs of the Water-Tank System.

Variables	<p>H is the height of water in the tank.</p> <p>Vol is the volume of water in the tank.</p> <p>V is the voltage applied to the pump.</p>
-----------	---

Parameters	<p>A is the cross-sectional area of the tank.</p> <p>b is a constant related to the flow rate into the tank.</p> <p>a is a constant related to the flow rate out of the tank.</p>
Differential equation	$\frac{d}{dt} Vol = A \frac{dH}{dt} = bV - a\sqrt{H}$
States	H
Inputs	V
Outputs	H

Design Requirements


The height of water in the tank, H , must meet the following step response requirements:

- Rise time less than 2.5 seconds
- Settling time less than 20 seconds
- Overshoot less than 5%

Specify Step Response Requirements


1 Open the Simulink model.

```
sys = 'watertank_stepinput';
open_system(sys);
```

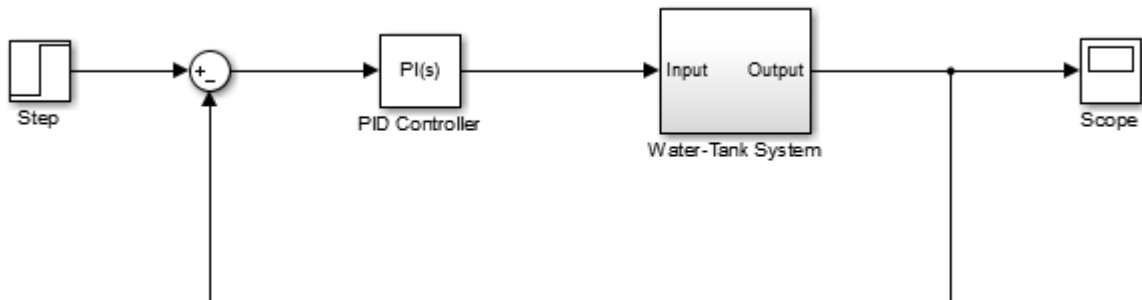


- 2 Add a Check Step Response Characteristics block to the model.

In the Simulink model window, select **View > Library Browser**. Expand the **Simulink Design Optimization** node and select **Signal Constraints**.

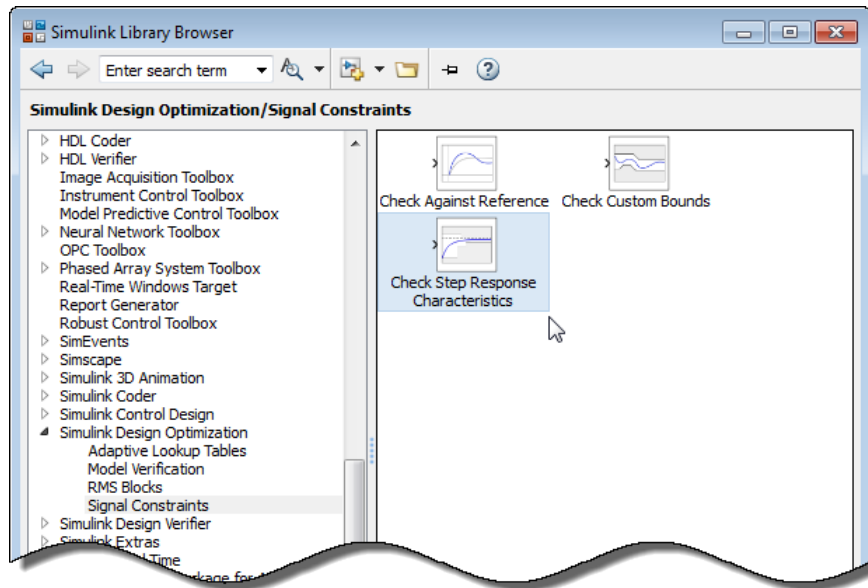

Drag and drop the **Check Step Response Characteristics** block into the model window and connect the block to the output. The block is connected to the signal for which you want to specify design requirements.

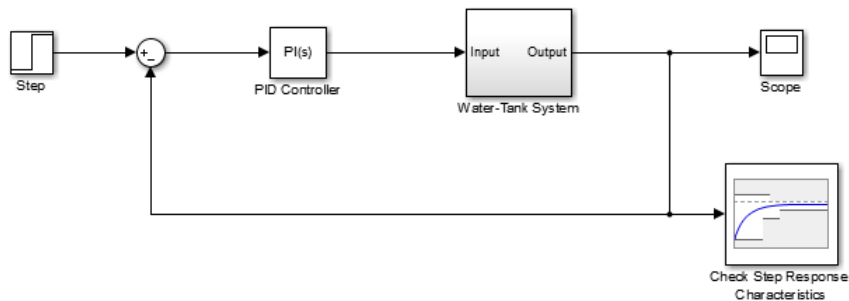


- 3 Specify step response requirements.

Double-click the Check Step Response Characteristics block to open the Sink Block Parameters: Check Step Response Characteristics dialog box.

- In **Rise time (seconds)**, enter 2.5.
- In **Settling time (seconds)**, enter 20.
- In **% Overshoot**, enter 5.
- In **Initial value**, enter 1.
- In **Final value**, enter 2.

Click **OK**.

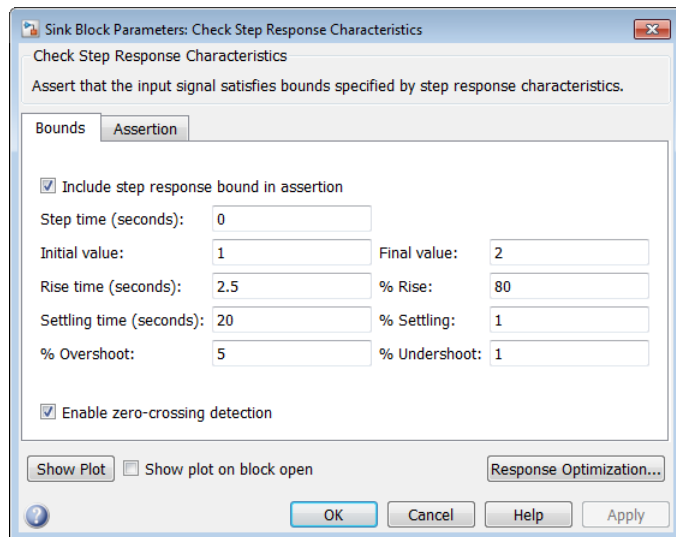

Instead of specifying time-domain requirements in the Check blocks, you can specify them in the Response Optimization tool without adding blocks. For an example that uses this approach, see “Design Optimization to Track Reference Signal (GUI)” on page 3-25.


Specify Design Variables

When you optimize the model response, the software modifies the design variable values to meet the design requirements. You specify which model parameters the software can modify.

- 1 Open a Response Optimization tool for the model.

In the Simulink model window, select **Analysis > Response Optimization**.


Alternatively, in the Sink Block Parameters dialog box, click **Response Optimization**.

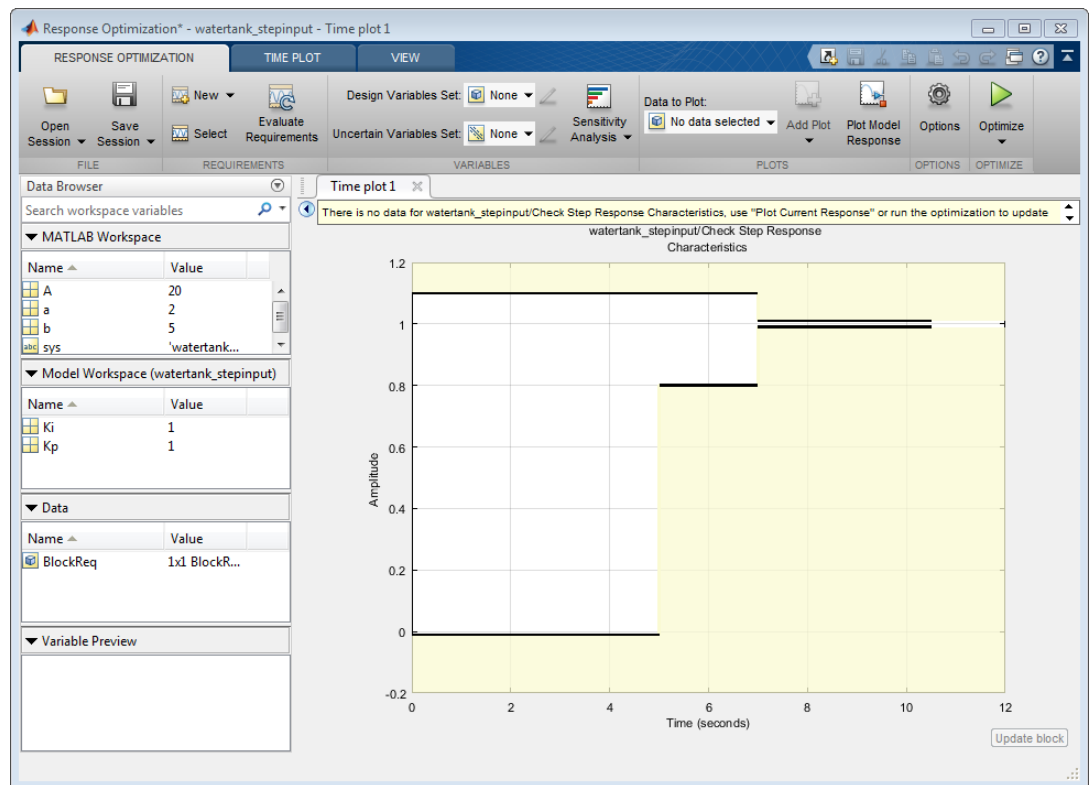

The region bounded by black line segments in **Time plot 1** shows the step response requirements that you specified in the Check Step Response Characteristics block.


- 2 Create a set of design variables.

In the **Design Variables Set** drop-down list, select **New**.

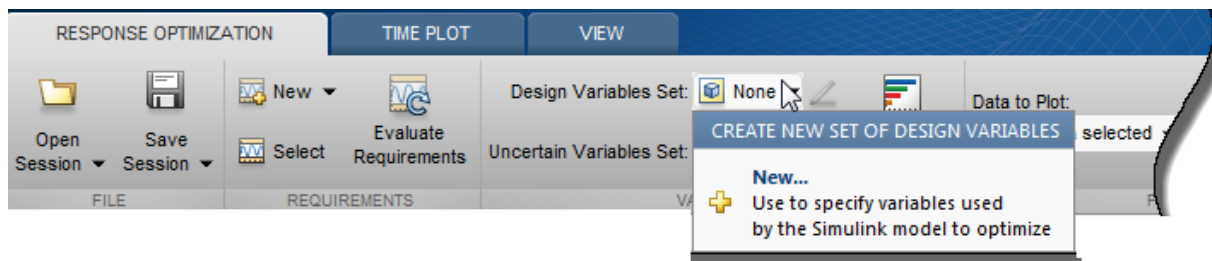


The Create Design Variables Set dialog box shows model parameters that you can use as design variables and indicates their locations within the model.

Note: In your application, if the model parameters you are interested in optimizing are not listed in the Create Design Variables Set dialog box, first specify these parameters as variables. See, “Add Model Parameters as Variables for Optimization”.

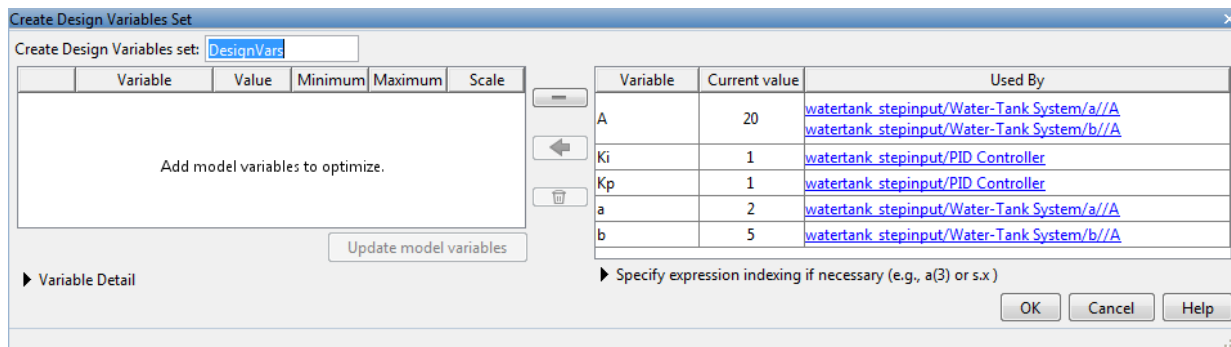


- 3 Add parameters to the design variables set.

Select K_i and K_p , and click  to add the selected parameters.

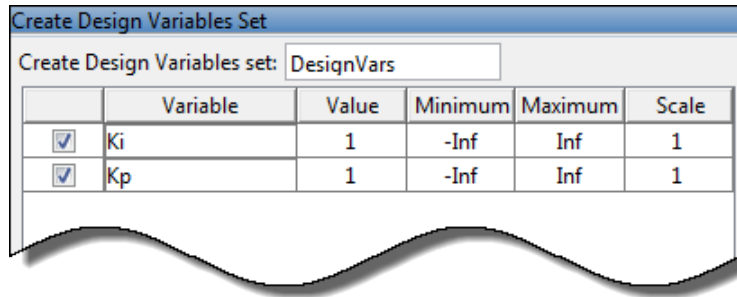


The design variables list displays the following variable settings:

- **Variable** — Variable name
 - **Value** — Current variable value
 - **Minimum** and **Maximum** — Variable bounds
 - **Scale** — Scaling factor for the variable
- 4 Limit the design variables to positive values. To do so, enter 0 for the minimum value of each variable in the corresponding **Minimum** field and press **Enter** on your keyboard.

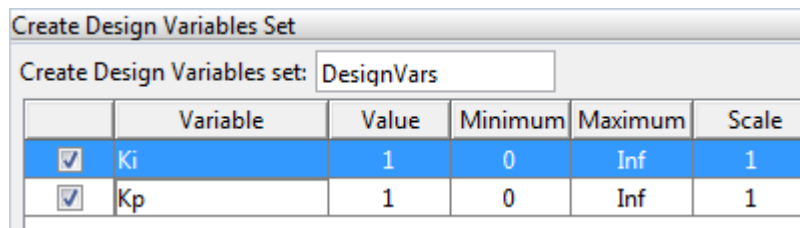


Click **OK**. A new design variable **DesignVars** is created and appears in the **Data** area of the Response Optimization tool. You can click the variable to view its contents in the **Variable Preview** area.

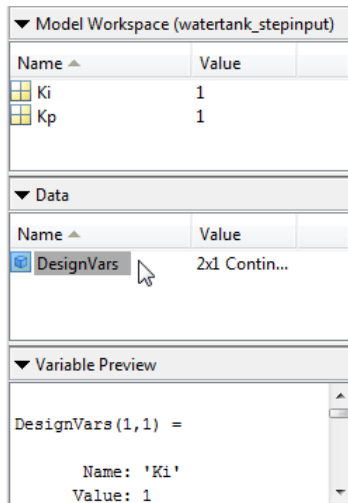

The screenshot shows the Model Workspace for 'watertank_stepinput'. It is divided into three sections:


- Model Workspace (watertank_stepinput):** A table with two rows: 'Ki' with value '1' and 'Kp' with value '1'.
- Data:** A table with one row: 'DesignVars' with value '2x1 Contin...'. A mouse cursor is pointing at the 'DesignVars' cell.
- Variable Preview:** A text area showing 'DesignVars (1,1) =' followed by 'Name: 'Ki'' and 'Value: 1'.


If your model has many parameters, you can first use sensitivity analysis to determine the most influential parameters to optimize, or to obtain initial guesses for the design variables. To open the Sensitivity Analysis tool, in the **Response Optimization**

tab, click  **Sensitivity Analysis**. In the Sensitivity Analysis tool, you can explore the response optimization design space by altering the design variables, identify the parameters that most influence the optimization problem, and compute initial values.

Optimize Model Response

1

To view the current response of the model, click  **Plot Model Response**.

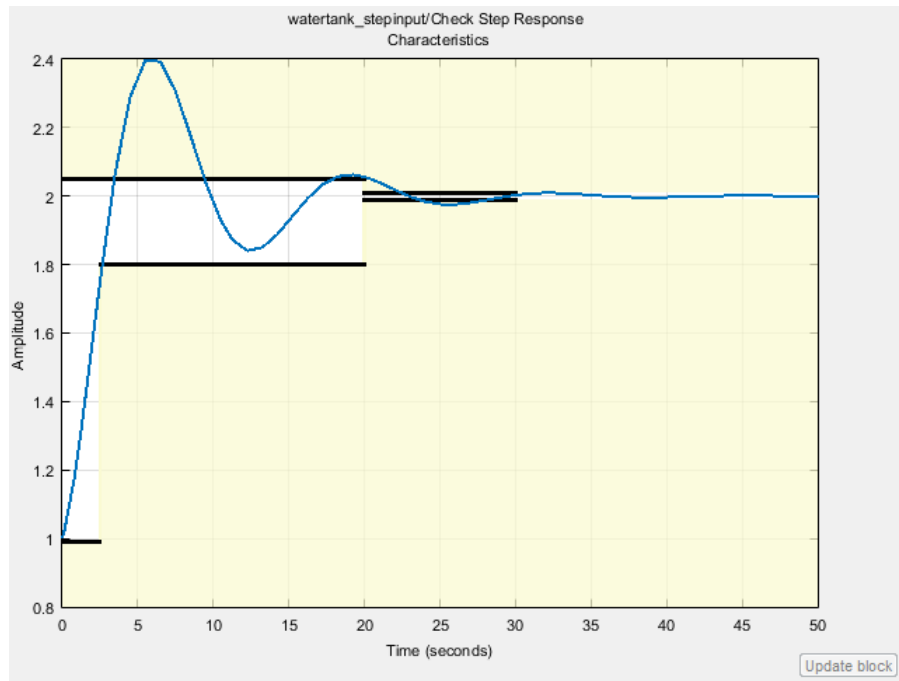

- 2 Click  **Optimize**.

The default optimization solver **Gradient descent (fmincon)** modifies the design variables at each iteration so that the simulated response lies within the design requirement line segments. For more information, see “How the Optimization Algorithm Formulates Minimization Problems”.


Iteration	F-count	Check Step Response Characteristics (Upper) (≤ 0)
0	5	0.8017
1	10	0.0376
2	15	0.0053
3	20	9.1446e-05
4	25	2.5688e-07

Optimization started 03-Oct-2014 15:42:55
Optimization converged, 03-Oct-2014 15:43:07
Optimized variable values written to 'DesignVars' in the Design Optimization workspace

Save Iteration... Display Options... Optimize

The message **Optimization converged** in the Optimization Progress Report indicates that the optimization solver found a solution that meets the design requirements within the tolerances and parameter bounds. For more information about the outputs displayed in the optimization, see “Iterative Display” in the Optimization Toolbox documentation.

- 3 Verify that the model output meets the step response requirements.

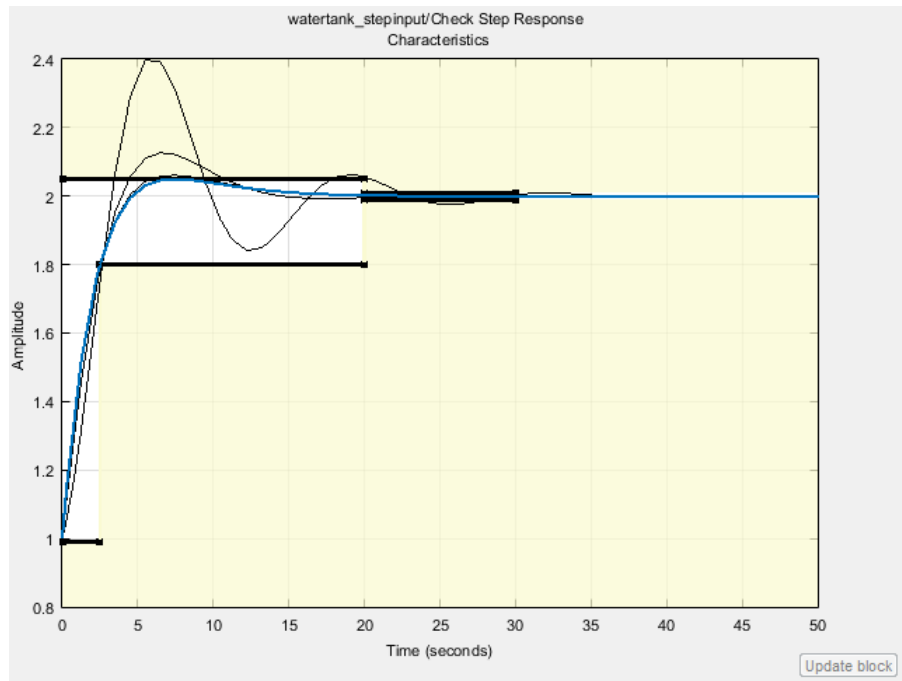

The plot displays the last five iterations. The final response using the optimized variable parameter appears as the thick blue line. The optimized response lies in the white region bounded by the design requirement line segments and thus meets the requirements.


- 4 View the optimized parameter values. Click **DesignVars** in **Model Workspace** and view the updated values in the **Variable Preview** area.

The optimized values of the design variables are automatically updated in the Simulink model.

Save the Session

After you optimize the model response to meet design requirements, you can save the Response Optimization tool session which includes the optimized parameter values.

In the Response Optimization tool, in the **Response Optimization** tab, in the **Save Session** drop-down list, select **Save to model workspace**.

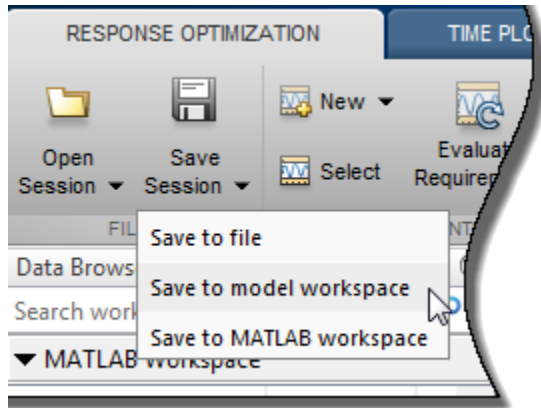

In the Save Session window, specify the session name in the **Session** field.

Tip To open the saved session, in the Response Optimization tool for the model, in the **Open Session** drop-down list, click the **Open from model workspace** option.

Related Examples

- “Design Optimization to Meet Step Response Requirements (Code)” on page 3-17
- “Design Optimization to Meet Step Response Requirements (Code)” on page 3-17
- “Design Optimization to Track Reference Signal (GUI)” on page 3-25

Design Optimization to Meet Step Response Requirements (Code)

In this section...

“Model Structure” on page 3-17

“Design Requirements” on page 3-19

“Specify Step Response Requirements” on page 3-19

“Specify Design Variables” on page 3-20


“Optimize Model Response” on page 3-21

This example shows how to programmatically optimize controller parameters to meet step response requirements using the `sdo.optimize` function.


Model Structure

The Simulink model `watertank_stepinput` includes the nonlinear Water-Tank System plant and a PI controller in a single-loop feedback system.


The **Step** block applies a step input. You can also use other types of input, such as a ramp, to optimize the response generated by such inputs.

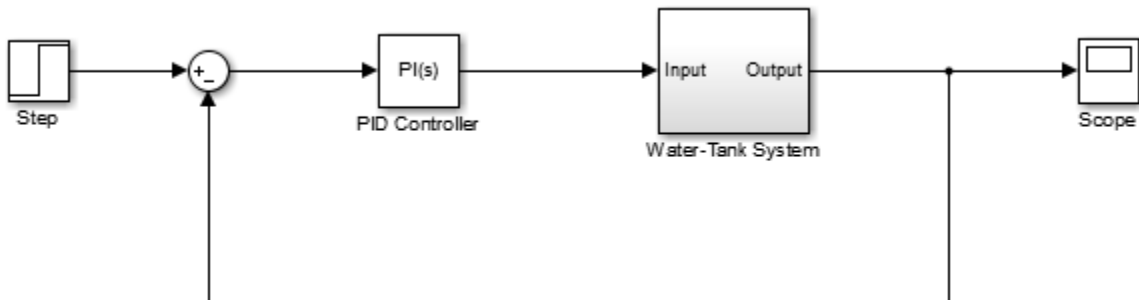

This figure shows the Water-Tank System.

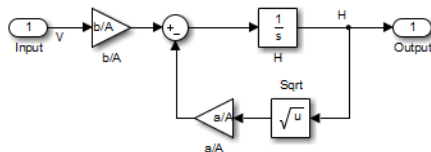

Water enters the tank at the top at a rate proportional to the valve opening. The valve opening is proportional to the voltage, V , applied to the pump. The water leaves through an opening in the tank base at a rate that is proportional to the square root of the water height, H . The presence of the square root in the water flow rate results in a nonlinear plant.

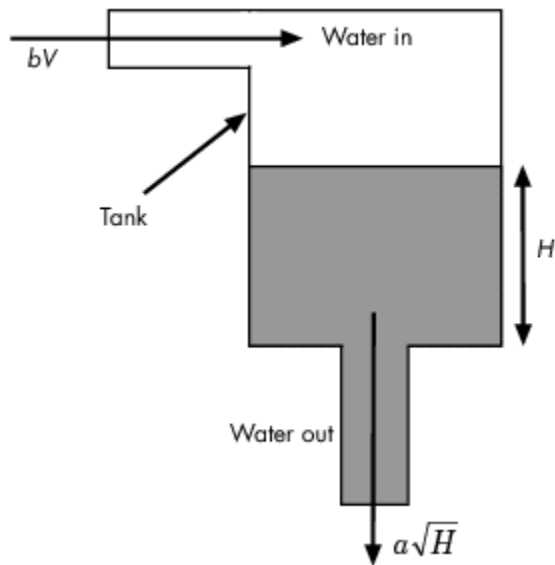

The following table describes the variables, parameters, differential equations, states, inputs, and outputs of the Water-Tank System.

Variables	<p>H is the height of water in the tank.</p> <p>Vol is the volume of water in the tank.</p> <p>V is the voltage applied to the pump.</p>
Parameters	<p>A is the cross-sectional area of the tank.</p> <p>b is a constant related to the flow rate into the tank.</p> <p>a is a constant related to the flow rate out of the tank.</p>

Differential equation	$\frac{d}{dt} Vol = A \frac{dH}{dt} = bV - a\sqrt{H}$
States	H
Inputs	V
Outputs	H

Design Requirements


The height of water in the tank, H , must meet the following step response requirements:

- Rise time less than 2.5 seconds
- Settling time less than 20 seconds
- Overshoot less than 5%

Specify Step Response Requirements

- 1 Open the Simulink model.

```
sys = 'watertank_stepinput';
open_system(sys);
```

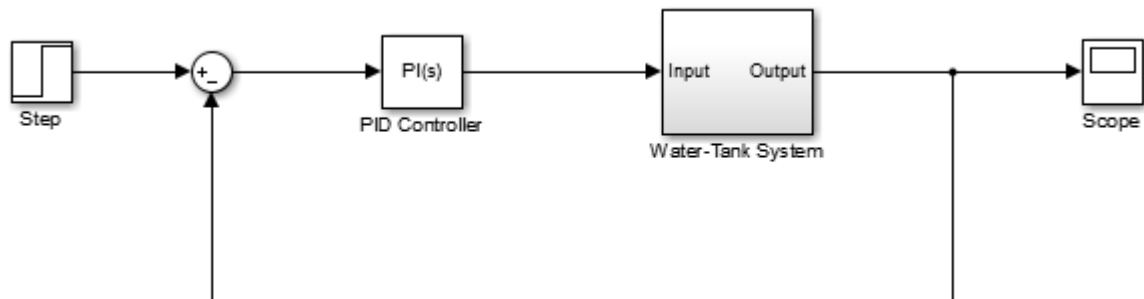

- 2 Log the water level, H .

During optimization, the model is simulated using the current value of the model parameters and the logged signal is used to evaluate the design requirements.

```
PlantOutput = Simulink.SimulationData.SignalLoggingInfo;
```

```
PlantOutput.BlockPath           = [sys '/Water-Tank System'];
PlantOutput.OutputPortIndex     = 1;
PlantOutput.LoggingInfo.NameMode = 1;
PlantOutput.LoggingInfo.LoggingName = 'PlantOutput';
```

- 3 Store the logging information.

```
simulator = sdo.SimulationTest(sys);
simulator.LoggingInfo.Signals = PlantOutput;
```

`simulator` is a `sdo.SimulationTest` object that you also use later to simulate the model.

- 4 Specify step response requirements.

```
StepResp = sdo.requirements.StepResponseEnvelope;
StepResp.RiseTime = 2.5;
StepResp.SettlingTime = 20;
StepResp.PercentOvershoot = 5;
StepResp.FinalValue = 2;
StepResp.InitialValue = 1;
```

`StepResp` is a `sdo.requirements.StepResponseEnvelope` object. The values assigned to `StepResp.FinalValue` and `StepResp.InitialValue` correspond to a step change in the water tank height from 1 to 2.

Specify Design Variables

When you optimize the model response, the software modifies parameter (design variable) values to meet the design requirements.

- 1 Select model parameters to optimize. Here, optimize the parameters of the PID controller.

```
p = sdo.getParameterFromModel(sys, {'Kp', 'Ki'});
```

`p` is an array of 2 `param.Continuous` objects.

- 2 To limit the parameters to positive values, set the minimum value of each parameter to 0.

```
p(1).Minimum = 0;
p(2).Minimum = 0;
```

Optimize Model Response

- 1 Create a design function to evaluate the system performance for a set of parameter values.

```
evalDesign = @(p) sldo_model1_design(p,simulator,StepResp);
```

`evalDesign` is an anonymous function that calls the cost function `sldo_model1_design`. The cost function simulates the model and evaluates the design requirements.

Tip Type `edit sldo_model1_design` to view this function.

- 2 Evaluate the current response. (Optional)
 - a Compute the model response using the current values of the design variables.

```
initDesign = evalDesign(p);
```

During simulation, the **Step Response** block throws assertion warnings at the MATLAB prompt, which indicate that the requirements specified in the block are not satisfied.

- b Examine the nonlinear inequality constraints.

```
initDesign.Cleq
```

```
ans =
```

```
    0.1739
    0.0169
   -0.0002
   -0.0101
   -0.0229
    0.0073
   -0.0031
    0.0423
```

Some `Cleq` values are positive, beyond the specified tolerance, which indicates the response using the current parameter values violates the design requirements.

- 3 Specify optimization options.

```
opt = sdo.OptimizeOptions;
opt.MethodOptions.Algorithm = 'sqp';
```

The software configures `opt` to use the default optimization method, `fmincon`, and the sequential quadratic programming algorithm for `fmincon`.

4 Optimize the response.

```
[pOpt,optInfo] = sdo.optimize(evalDesign,p,opt);
```

At each optimization iteration, the software simulates the model and the default optimization solver `fmincon` modifies the design variables to meet the design requirements. For more information, see “How the Optimization Algorithm Formulates Minimization Problems”.

After the optimization completes, the command window displays the following results:

Iter	F-count	f(x)	max constraint	Step-size	First-order optimality
0	5	0	0.1739		
1	10	0	0.03411	1	0.81
2	15	0	0	0.235	0.0429
3	15	0	0	2.26e-18	0

Local minimum found that satisfies the constraints.

Optimization completed because the objective function is non-decreasing in feasible directions, to within the selected value of the function tolerance, and constraints are satisfied to within the selected value of the constraint tolerance.

The message `Local minimum found that satisfies the constraints` indicates that the optimization solver found a solution that meets the design requirements within specified tolerances. For more information about the outputs displayed during the optimization, see “Iterative Display” in the Optimization Toolbox documentation.

5 Examine the optimization termination information contained in the `optInfo` output argument. This information helps you verify that the response meets the step response requirements.

For example, check the following fields:

- `Cleq`, which shows the optimized nonlinear inequality constraints.

```
optInfo.Cleq
```

```
ans =
```

```
-0.0001  
-0.0028  
-0.0050  
-0.0101  
-0.0135  
-0.0050  
-0.0050  
-0.0732
```

All values satisfy $C_{leq} \leq 0$ within the optimization tolerances, which indicates that the step response requirements are satisfied.

- `exitflag`, which identifies why the optimization terminated.

The value is 1, which indicates that the solver found a solution that was less than the specified tolerances on the function value and constraint violations.

6 View the optimized parameter values.

```
pOpt
```

```
pOpt(1,1) =
```

```
    Name: 'Kp'  
    Value: 2.0545  
  Minimum: 0  
  Maximum: Inf  
    Free: 1  
    Scale: 1  
    Info: [1x1 struct]
```

```
pOpt(2,1) =
```

```
    Name: 'Ki'  
    Value: 0.3801  
  Minimum: 0  
  Maximum: Inf  
    Free: 1  
    Scale: 1  
    Info: [1x1 struct]
```

7 Simulate the model with the optimized values.

- a Update optimized parameter values in the model.

```
sdo.setValueInModel(sys,pOpt);
```

- b** Simulate the model.

```
sim(sys);
```

See Also

`sdo.requirements.StepResponseEnvelope` | `param.Continuous` |
`sdo.getParameterFromModel` | `sdo.optimize` | `sdo.OptimizeOptions` |
`sdo.SimulationTest` | `Simulink.SimulationData.SignalLoggingInfo`

Related Examples

- “Design Optimization to Meet Step Response Requirements (GUI)” on page 3-4
- “Design Optimization to Track Reference Signal (GUI)” on page 3-25

Design Optimization to Track Reference Signal (GUI)

This example shows how to optimize controller parameters to track a reference signal using the Response Optimization tool. You specify the reference signal without adding any Check blocks to the model.

In this section...

“Model Structure” on page 3-25

“Design Requirements” on page 3-26


“Specify Reference Signal” on page 3-26

“Specify Design Variables” on page 3-34

“Optimize Model Response” on page 3-37

Model Structure


The model `sldo_model1` includes these blocks:

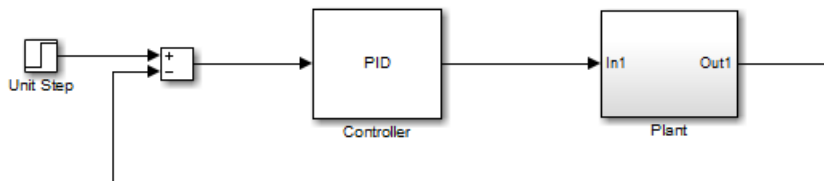

- **Controller** block, a PID controller, controls the output of the **Plant** subsystem.
- **Unit Step** block applies a step input.

You can also use other types of inputs, such as ramp, to optimize the response generated by such inputs.

- **Plant** subsystem is a second-order system with delay. It contains **Transfer Function** and **Transport Delay** blocks.

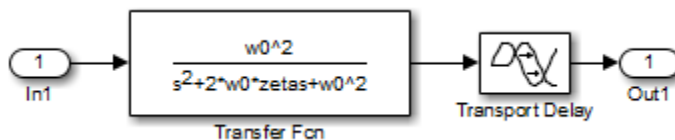


Design Requirements

The model output must track a reference signal $y = 1 - \exp(-0.1 \times t)$, where t is time.

Specify Reference Signal


- 1 Open the Simulink model.

```
sys = 'sldo_model1';  
open_system(sys);
```

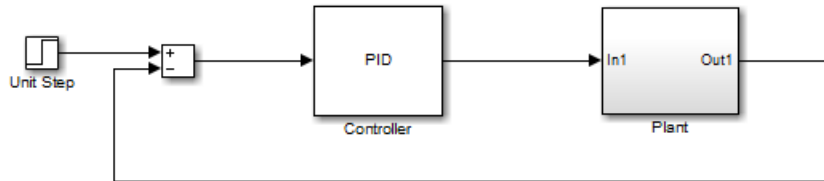



To learn more about the model, see “Model Structure” on page 3-25.

- 2 To open the Response Optimization tool, select **Analysis > Response Optimization**.

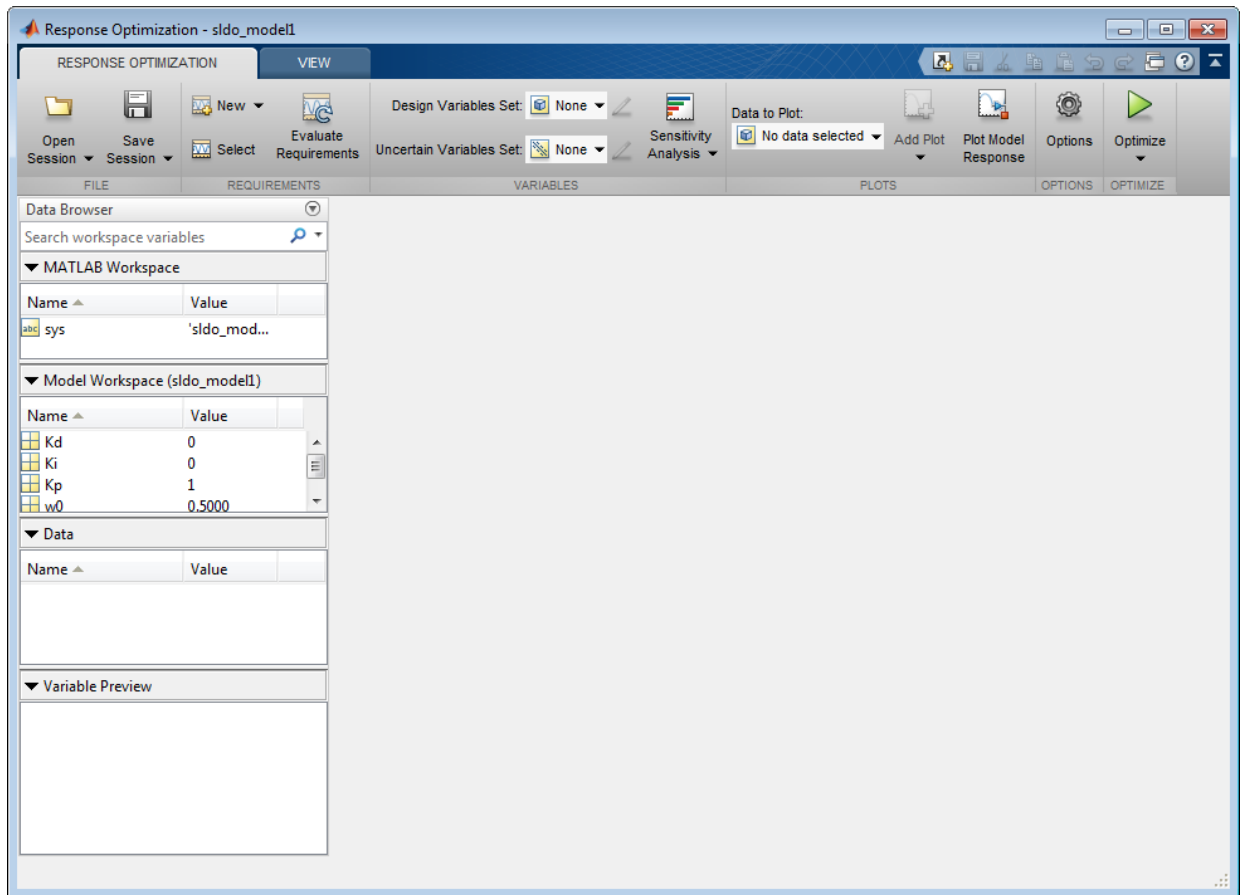


- 3 Select the model signal to track the reference signal.
 - a In the **New** drop-down list, select **Signal** to open the Create Signal Set window.

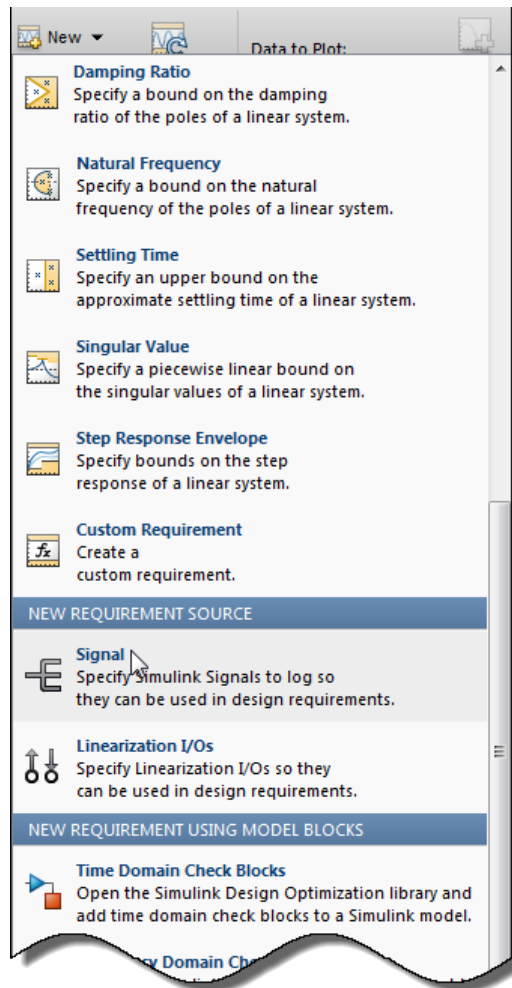


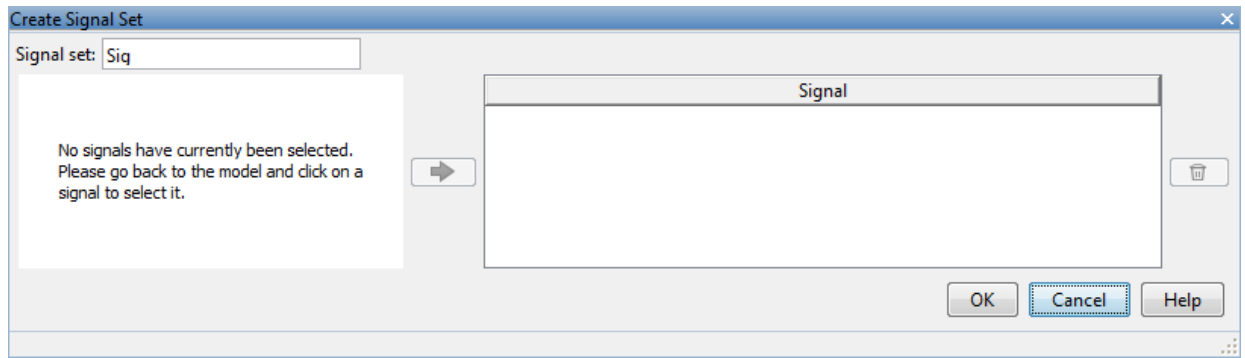

- b** To display the signal in the window, click the output of the Plant block in the Simulink model window.

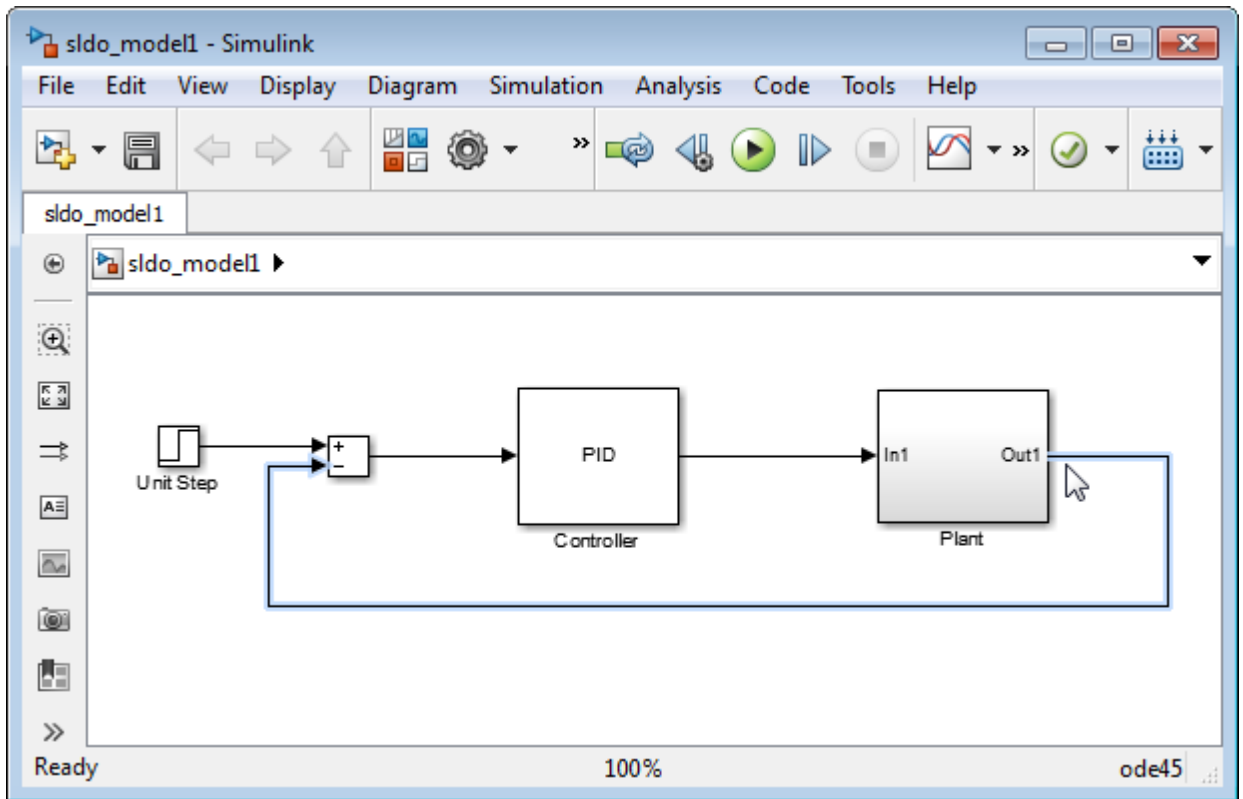


- c Select the signal, and click  to add it to the signal set.

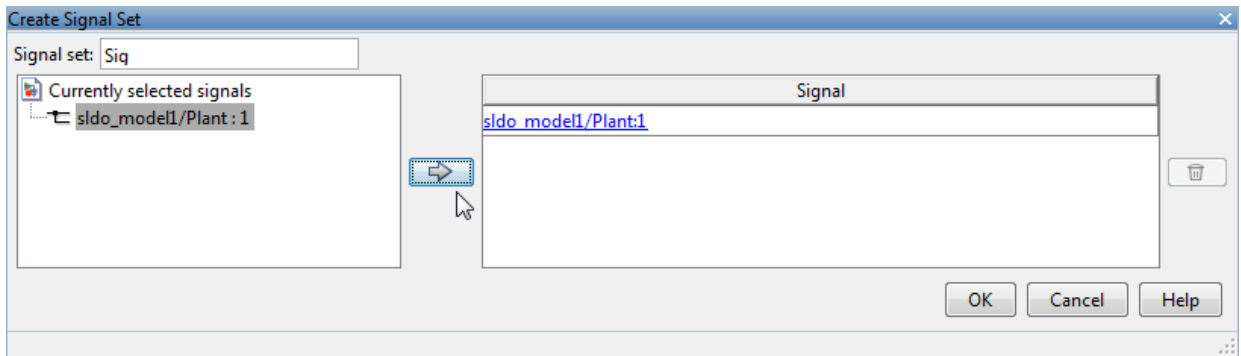

- d** In **Signal set**, enter `PlantOutput` as the selected signal name.

Click **OK** to create the variable `PlantOutput`. It appears in the **Data** area of the Response Optimization tool.

- 4** Specify the reference signal for the model output to track.
- a** In the **New** drop-down list, select **Signal Tracking** to open a Create Requirement window.
 - b** In the **Name** edit box, enter `ref_sig`.
 - c** In the **Time vector** edit box, enter `linspace(0,50,200)`
 - d** In the **Amplitude** edit box, enter `1-exp(-0.1*linspace(0,50,200))`.

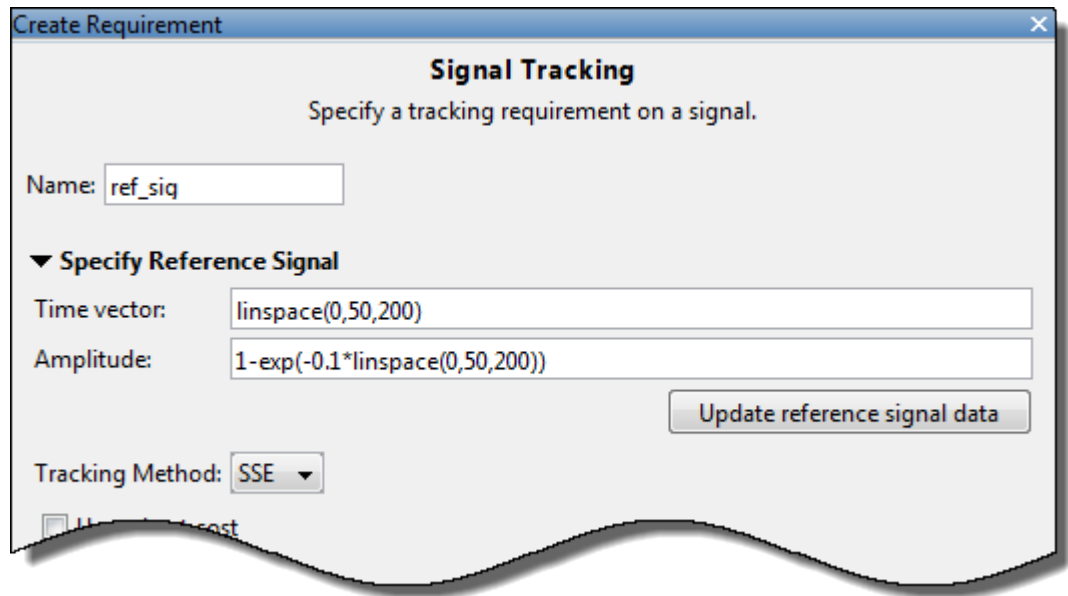

Leave the **Tracking Method** as SSE which means, at each optimization iteration, the solver attempts to reduce the sum of squared errors between the simulated output and reference signal.

- e Click **Update reference signal data**.
- f In the **Specify Signal to Track Reference Signal** area, select the check-box corresponding to the signal you selected in the previous step, and click **OK**.

Create Requirement [X]

Signal Tracking
Specify a tracking requirement on a signal.

Name:

▼ **Specify Reference Signal**

Time vector:

Amplitude:

Tracking Method:


Use robust cost

▼ **Specify Signal to Track Reference Signal**

	Signal
<input checked="" type="checkbox"/>	PlantOutput (sldo_model1/Plant:1)

Create Plot

A new reference signal `ref_sig` is created and appears in the **Data** area. The Response Optimization window updates to plot the reference signal.

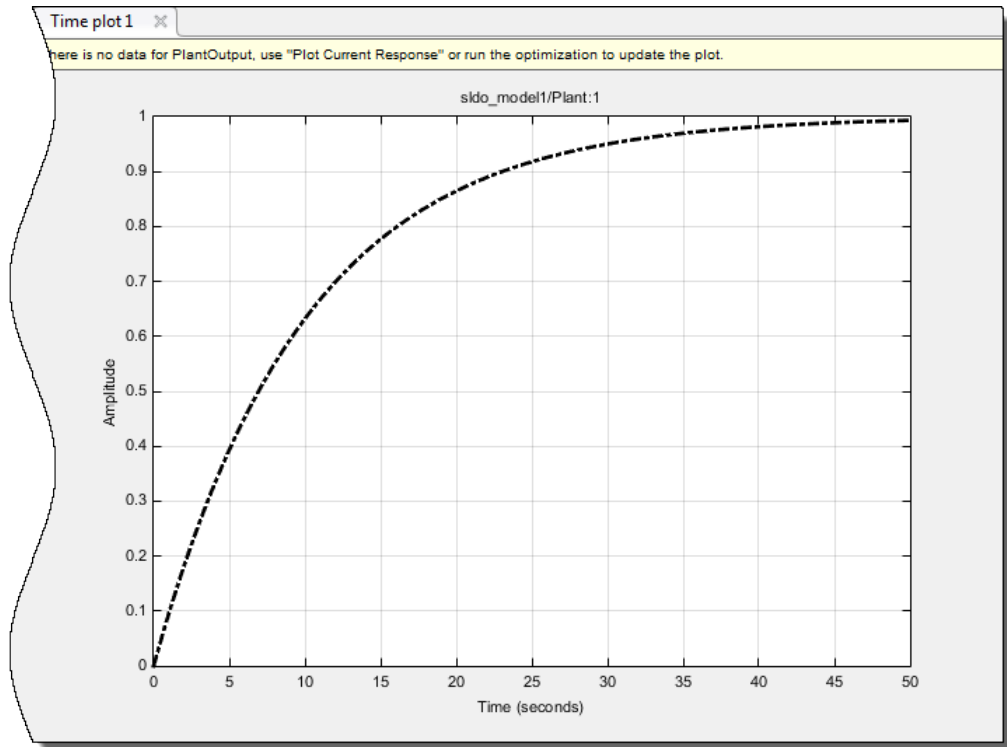


Specify Design Variables

When you optimize the model response, the software modifies the design variable values to meet the design requirements.


In the **Response Optimization** tab:

- 1 Create a new set of design variables.

In the **Design Variables Set** drop-down list select **New**.

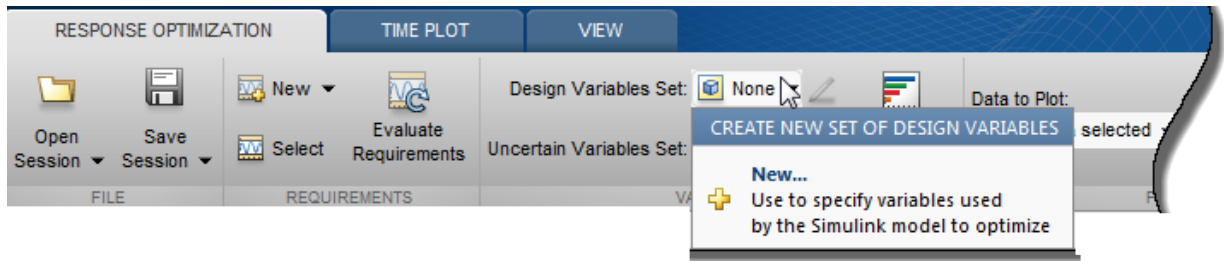


The Create Design Variables Set window shows model parameters that you can use as design variables and indicates their locations within the model subsystems.

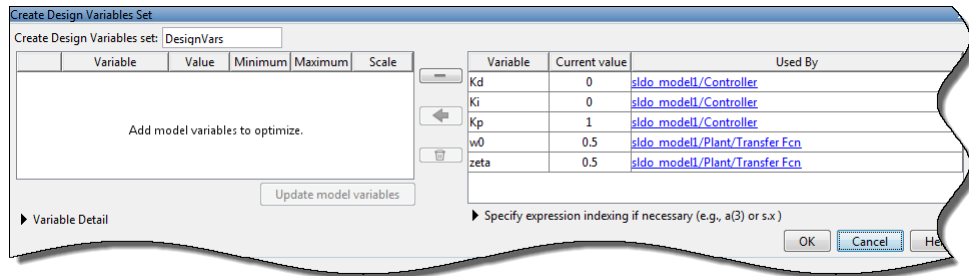

2 Add parameters to the design variables set.

Select Kd, Ki, and Kp, and click  to add the selected parameters.

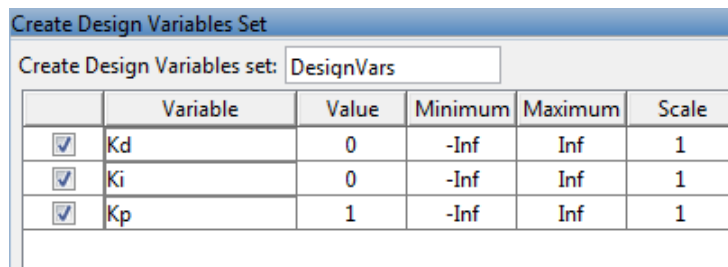

The design variables list displays the following parameter settings:

- **Variable** — Parameter name

- **Value** — Current parameter value
 - **Minimum** and **Maximum** — Parameter bounds
 - **Scale** — Scaling factor for the parameter
- 3 Limit the parameters to positive values. To do so, enter 0 for the minimum value of each parameter in the corresponding **Minimum** field, and press **Enter** on your keyboard.

Create Design Variables Set

Create Design Variables set: DesignVars

	Variable	Value	Minimum	Maximum	Scale
<input checked="" type="checkbox"/>	Kd	0	0	Inf	1
<input checked="" type="checkbox"/>	Ki	0	0	Inf	1
<input checked="" type="checkbox"/>	Kp	1	0	Inf	1

Click **OK**. A new design variable **DesignVars** is created and appears in the **Data** area of the Response Optimization tool.

Model Workspace (sldo_model1)

Name	Value
Kd	0
Ki	0
Kp	1

Data

Name	Value
DesignVars	3x1 Contin...
PlantOutput	1x1 Signal
ref_sig	1x1 Signal...


Variable Preview


```

DesignVars (1,1) =
    Name: 'Kd'
    Value: 0
    Minimum: 0
    Maximum: Inf
    Free: 1
    Scale: 1
    
```

Optimize Model Response

1

To view the current model response, click  **Plot Model Response**.

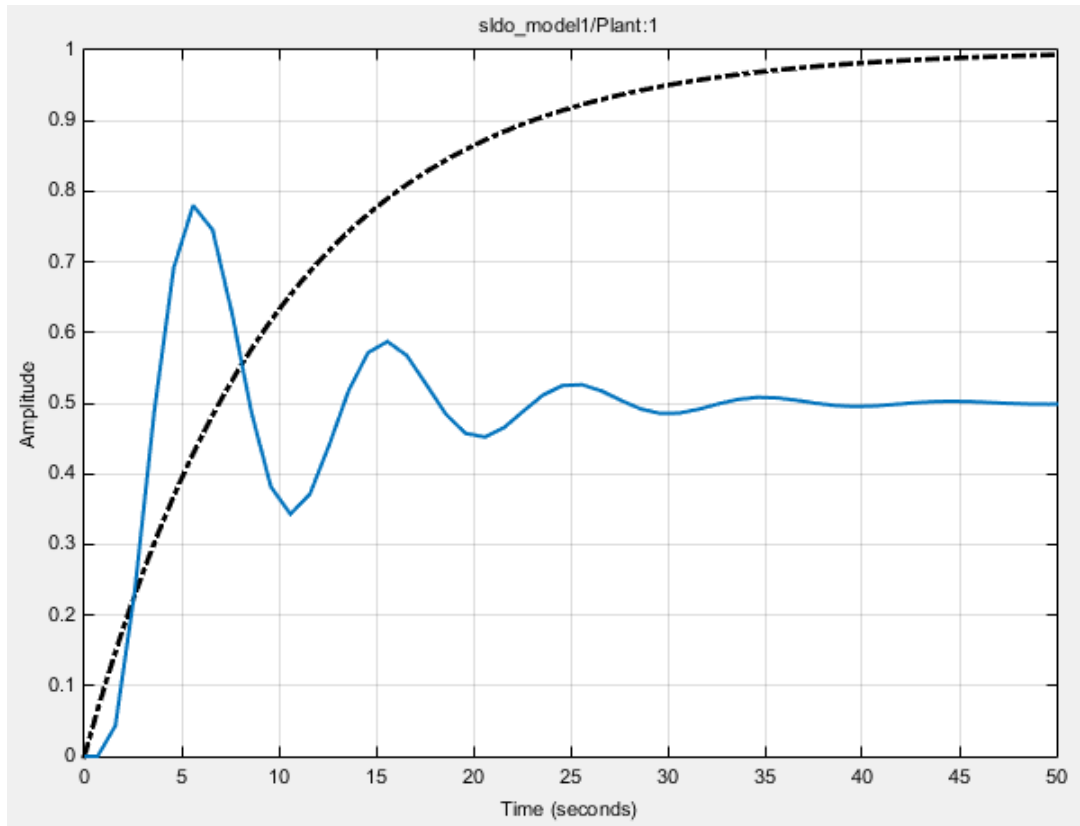


The plot shows that the model response does not track the reference signal.

2

Click  **Optimize**.

At each iteration, the optimization solver **Gradient descent (fmincon)** modifies the controller parameters to minimize the error between the simulated response and the reference signal. To learn more, see “How the Optimization Algorithm Formulates Minimization Problems”.

The message **Optimization converged** in the Optimization Progress Report indicates that the optimization method found a solution that tracks the reference signal within the tolerances and parameter bounds. For more information about the outputs displayed in the Optimization Progress Report, see “Iterative Display” in the Optimization Toolbox documentation.

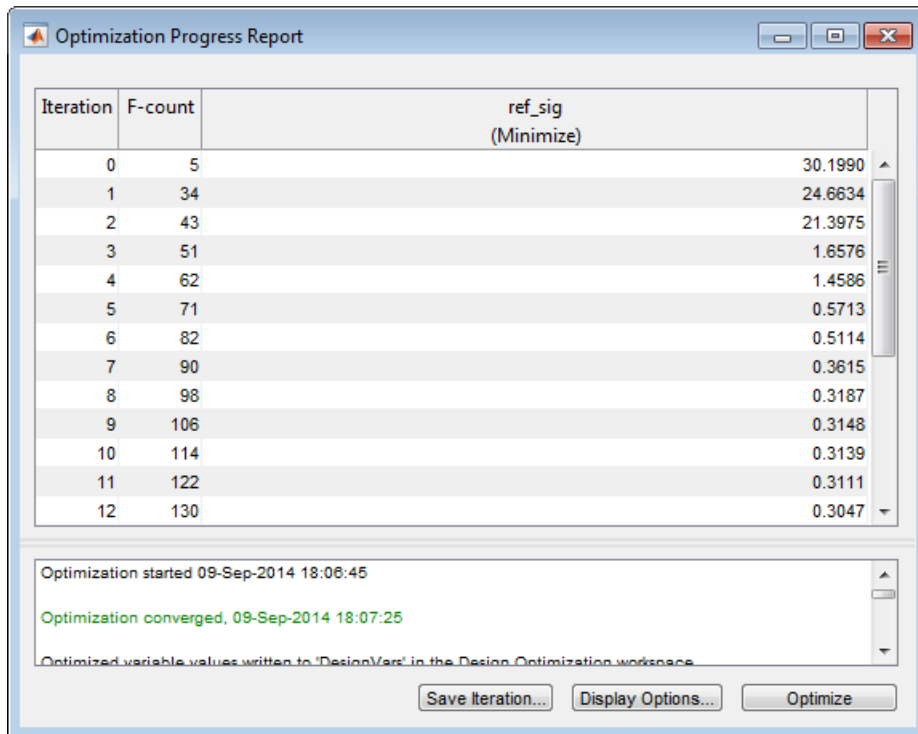


The screenshot shows a window titled "Optimization Progress Report" with a table of iteration data and a log of optimization events. The table has three columns: "Iteration", "F-count", and "ref_sig (Minimize)". The log shows the optimization started on 09-Sep-2014 at 18:06:45 and converged on 09-Sep-2014 at 18:07:25. The optimized variable values were written to 'DesignVars' in the Design Optimization workspace. There are three buttons at the bottom: "Save Iteration...", "Display Options...", and "Optimize".

Iteration	F-count	ref_sig (Minimize)
0	5	30.1990
1	34	24.6634
2	43	21.3975
3	51	1.6576
4	62	1.4586
5	71	0.5713
6	82	0.5114
7	90	0.3615
8	98	0.3187
9	106	0.3148
10	114	0.3139
11	122	0.3111
12	130	0.3047

Optimization started 09-Sep-2014 18:06:45
Optimization converged, 09-Sep-2014 18:07:25
Optimized variable values written to 'DesignVars' in the Design Optimization workspace

Save Iteration... Display Options... Optimize

- 3 Verify that the response tracks the reference signal by observing the amplitude versus time plot.

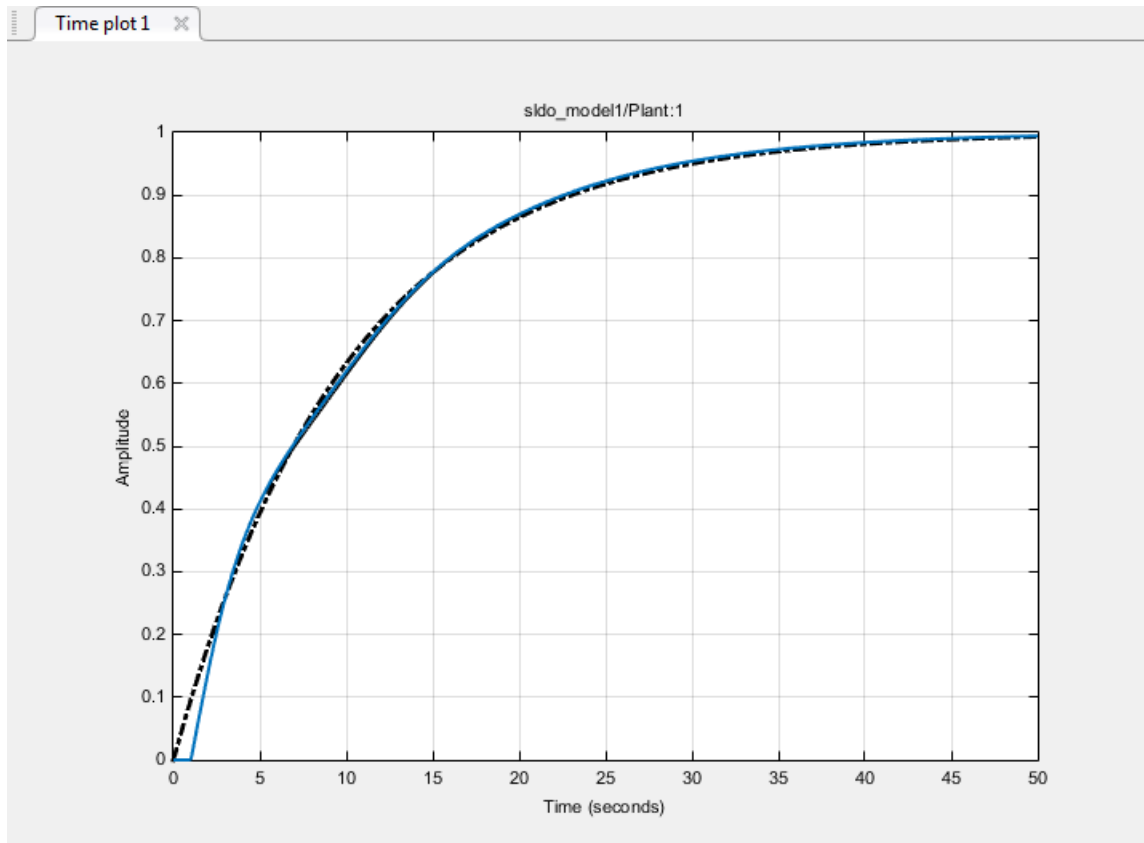

The optimized response closely tracks the reference signal.

- 4 To view the optimized parameter values, click **DesignVars** in the **Data** area of the Response Optimization tool. View the updated values in the **Variable Preview** area.

The optimized values of the design variables are automatically updated in the Simulink model.

Related Examples

- “Design Optimization to Meet Step Response Requirements (GUI)” on page 3-4

- “Design Optimization to Meet Step Response Requirements (Code)” on page 3-17

Design Optimization Using Frequency-Domain Check Blocks (GUI)

This example shows how to optimize a design to meet frequency-domain requirements using the Response Optimization tool. Simulink Control Design software must be installed to optimize a design to meet frequency-domain design requirements.


In this example, you specify the design requirements in a **Check Bode Characteristics** block. You optimize rectifier filter parameters to meet gain and bandwidth requirements by minimizing a custom objective.

In this section...

- “Model Structure” on page 3-41
- “Design Requirements” on page 3-42
- “Specify Design Requirements” on page 3-42
- “Specify Design Variables” on page 3-45
- “Optimize Design” on page 3-46

Model Structure

The model `sdorectifier` includes the following blocks:

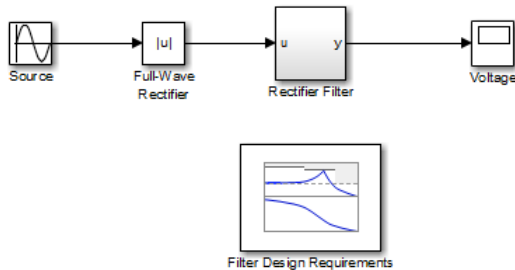

- **Full-Wave Rectifier** block — An **Abs** block
- **Rectifier Filter** subsystem — RLC filter implemented using integrator and gain blocks
- **Filter Design Requirements** block — **Check Bode Characteristics** block that specifies the gain and bandwidth design requirements

Design Requirements

The design optimization problem has several objectives. The design must:


- Have a -3 dB bandwidth of at least 2 Hz
- Limit the gain across the frequency range 2 Hz – 60 Hz to at most 0 dB
- Limit the gain above 60 Hz to at most -20 dB
- Maximize the filter resistance R
- Minimize the filter inductance L

The requirements ensure that the rectifier filter combination has minimal high frequency content, responds quickly to voltage changes, and limits filter currents.

Specify Design Requirements

- 1 Open the Response Optimization tool for the model.

```
sdotool('sdorectifier')
```

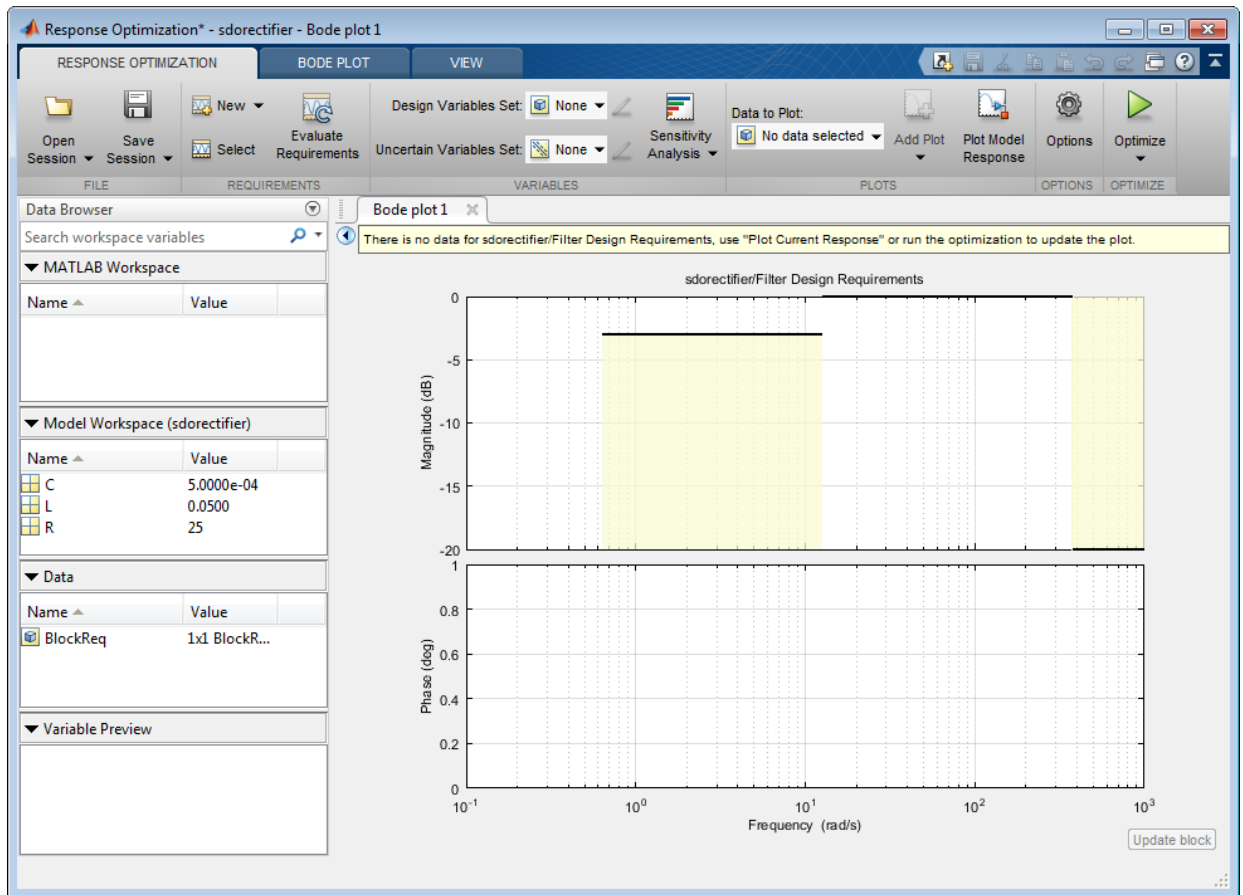
The **Bode plot 1** tab shows the gain and bandwidth requirements specified in the **Filter Design Requirements** block in the model. To see their values, double-click the block to open the Block Parameters dialog box, and select the **Bounds** tab.

- 2 Specify a custom objective to minimize the filter inductance and maximize the resistance.


The custom objective is already defined in the `sdorectifier_cost` function. The function accepts the design variables R and L and returns the objective to be minimized.

Tip Type `edit sdorectifier_cost` in the command line to view this function.

- a** In the **New** drop-down list, select **Custom Requirement**.

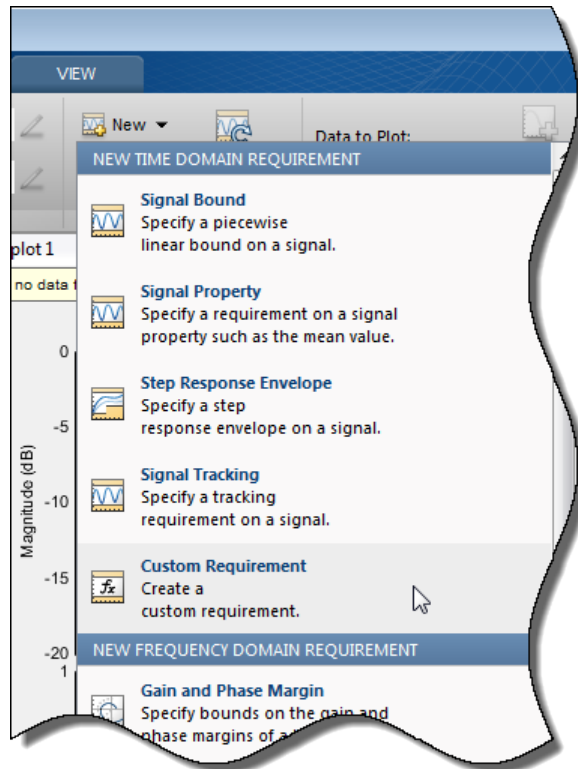

- b** Specify the following values in the Create Requirement window, and click **OK**:
- In the **Name** edit box, enter `MaxMinRL`.
 - In the **Type** edit box, select `Minimize` the function output
 - In the **Function** edit box, enter `@sdorectifier_cost`. The optimization solver calls the specified function handle.

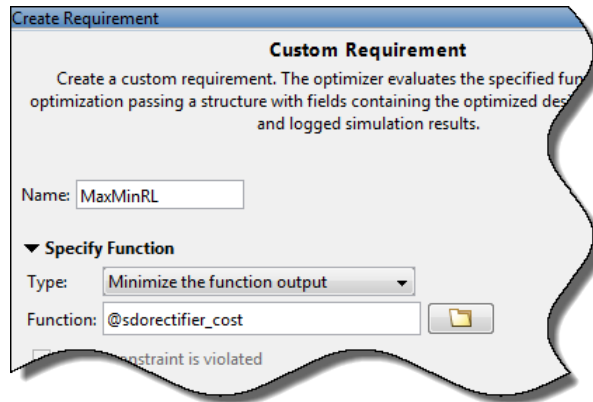



A new requirement variable MaxMinRL is created, and appears in the **Data** area in the Response Optimization tool. The **Iteration plot 1** tab shows the value of MaxMinRL at each iteration during the optimization.


Specify Design Variables

When you optimize the model response, the software modifies the design variable values to meet the design requirements.

- 1 In the **Design Variables Set** drop-down list, select **New**.

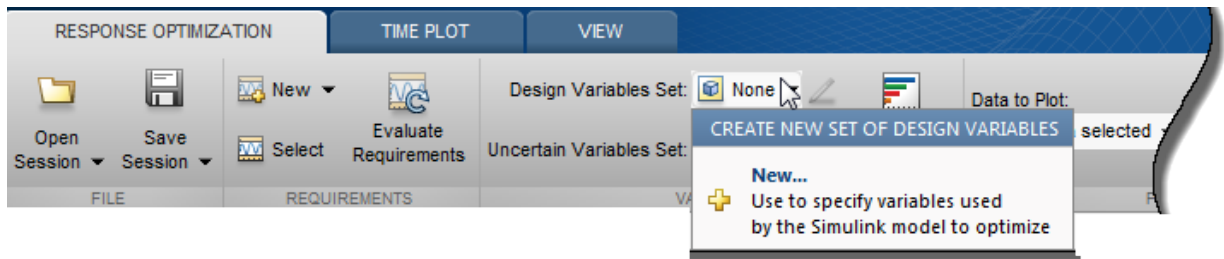


Select C, L, and R in the Create Design Variable Set window. Click  to add the selected parameters to a design variables set.

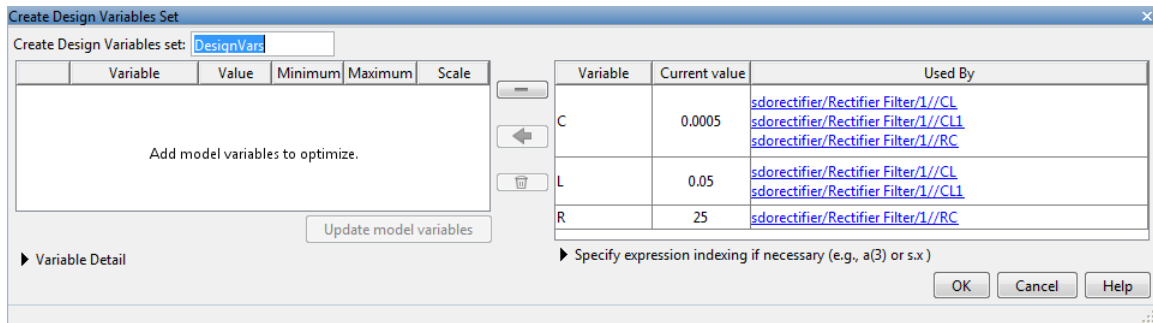

2 Specify the value range for each design variable, and click **OK**:


- C in the range 1 μ F–1 mF
- L in the range 1–500 mH
- R in the range 0.01–50 ohms

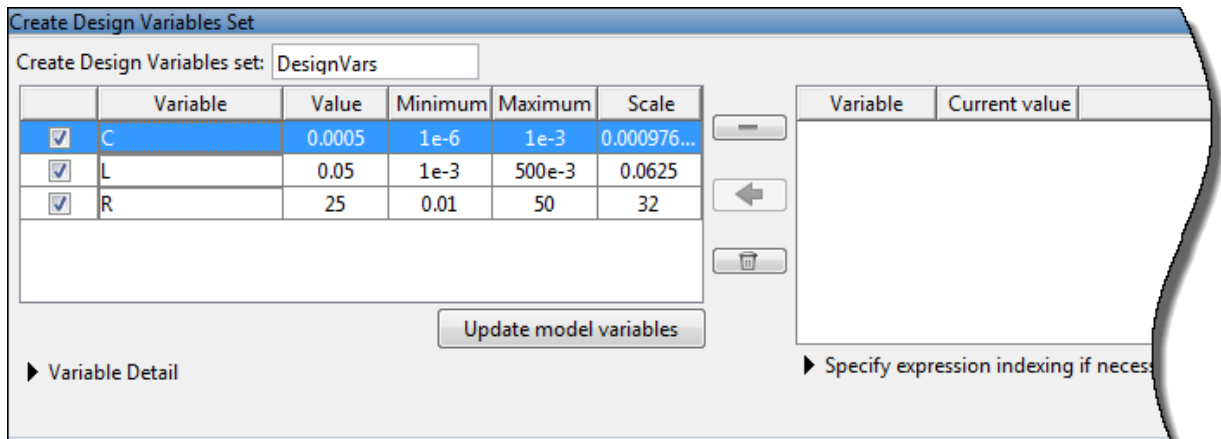


A new variable **DesignVars** is created, and appears in the **Data** area of the Response Optimization tool.

Optimize Design


1

To view the current response of the model, click  **Plot Model Response**.

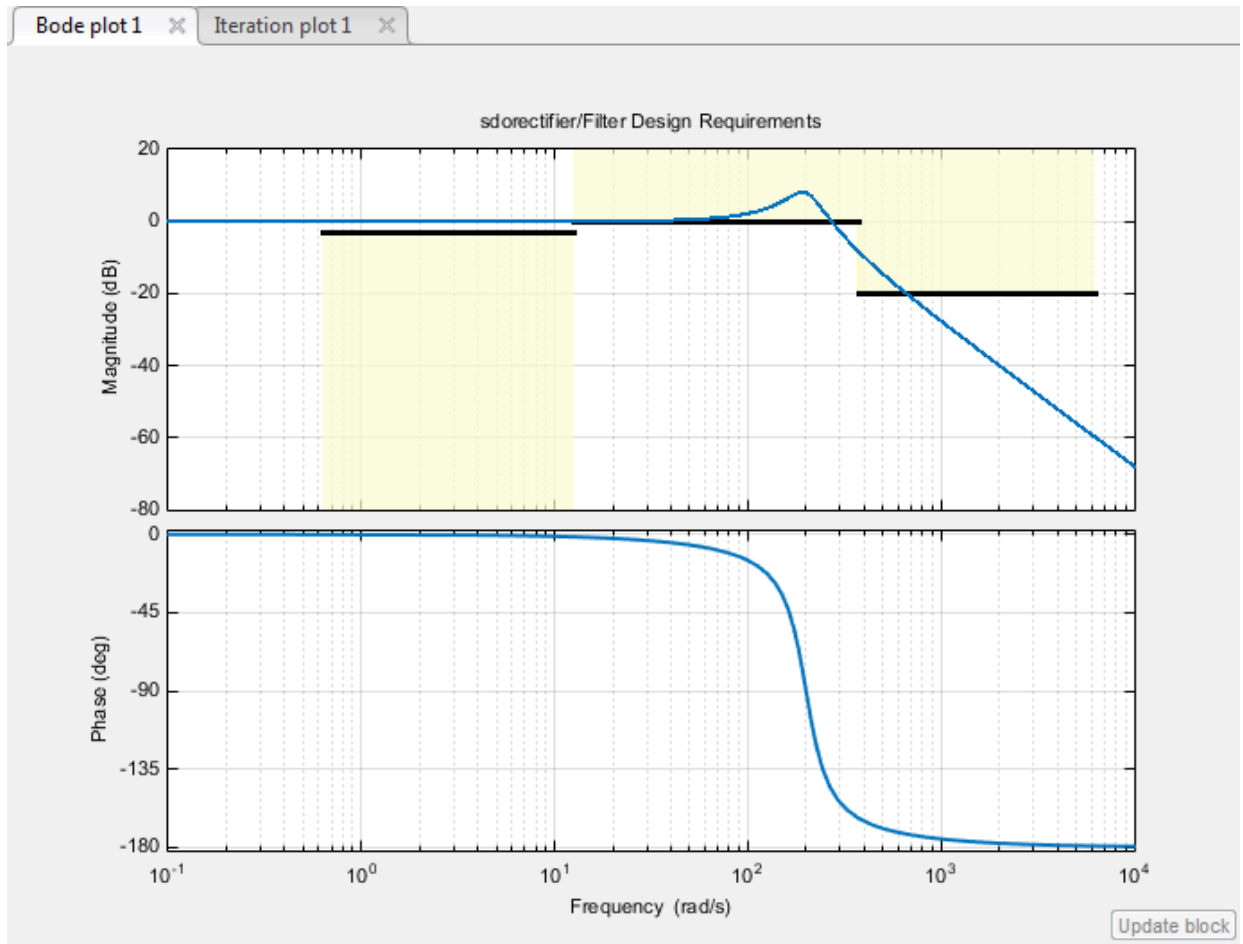

The **Bode plot 1** window in the Response Optimization tool shows that the model output goes out of the region bounded by the design requirement line segments.

In the **Voltage** scope window, you see that the filter voltage signal overshoots its steady-state value and contains significant harmonic content.

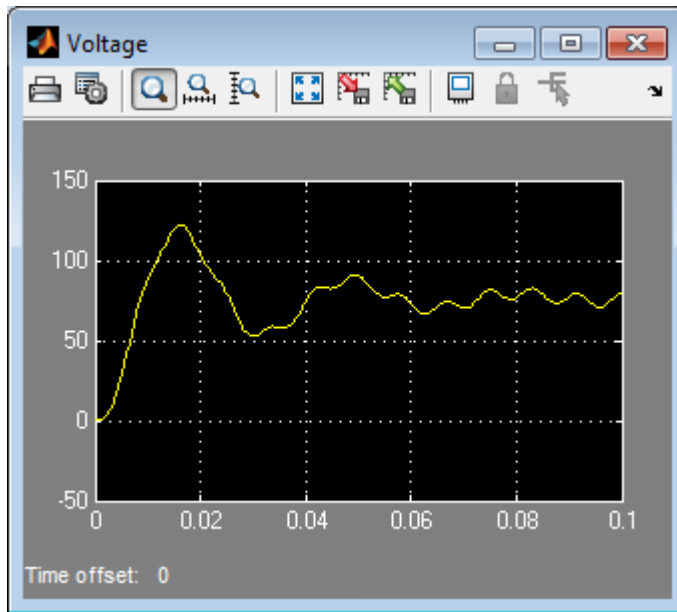

- 2 Click  **Optimize**.

The **Optimization converged** message in the Optimization Progress Report indicates that the optimization method found a solution to satisfy the filter bandwidth requirements.

The image shows a software window titled "Optimization Progress Report". It contains a table with 6 columns: Iteration, F-count, CustomReq (Minimize), Filter Design Requireme... (<=0), and Filter Design Requireme... (>=0). The table shows 12 iterations from 0 to 11. Below the table is a log area with text: "Optimization started 24-Sep-2014 15:24:16", "Optimization converged, 24-Sep-2014 15:25:09", and "Optimized variable values written to 'DesignVars1' in the Design Optimization workspace". At the bottom are three buttons: "Save Iteration...", "Display Options...", and "Optimize".

Iteration	F-count	CustomReq (Minimize)	Filter Design Requireme... (<=0)	Filter Design Requireme... (>=0)
0	8	1.5813	8.1361	1.0067
1	17	1.0970	0.3235	1.0000
2	26	1.5792	-0.2588	0.6625
3	34	1.2385	-0.1811	0.7478
4	45	0.8803	0.0074	0.8924
5	56	0.8611	-0.1050	0.8608
6	65	0.8167	-0.0634	0.8539
7	74	0.4039	-0.3095	0.6692
8	83	0.1967	-0.5002	0.2846
9	93	0.0714	-0.3137	0.5628
10	101	0.0166	-0.3731	0.4406
11	102	0.0166	-0.3731	0.4406


Optimization started 24-Sep-2014 15:24:16

Optimization converged, 24-Sep-2014 15:25:09


Optimized variable values written to 'DesignVars1' in the Design Optimization workspace

Save Iteration... Display Options... Optimize

The harmonic content in the filter voltage signal is reduced from the initial design.

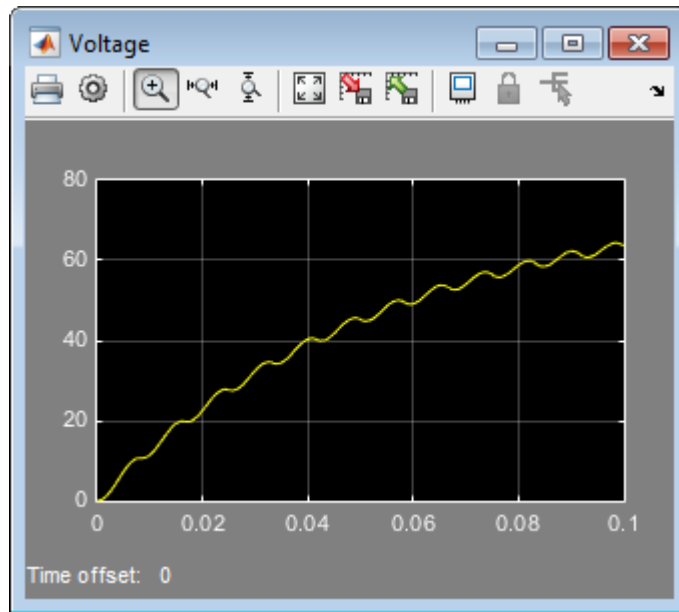

- 3 Verify that the model meets the gain and bandwidth requirements.

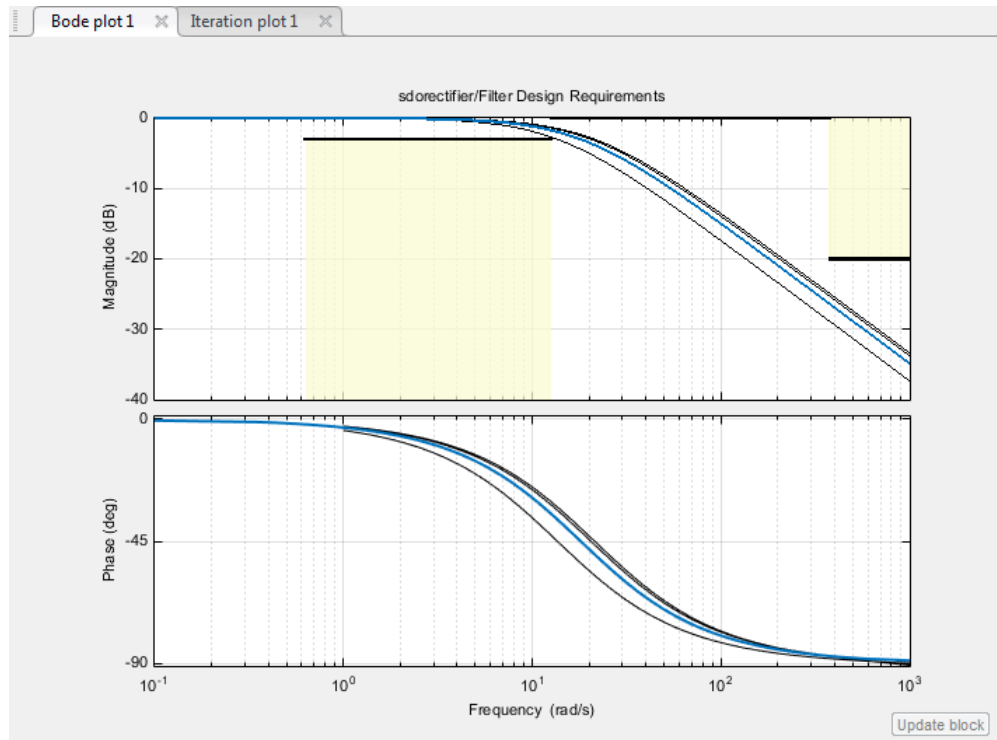

The plot displays the output of the last five iterations. The final response using the optimized parameter values appears as the thick blue line.

The optimized response lies in the white region bounded by the design requirement line segments and thus meets the requirements.

- 4 Click **DesignVars** in the **Data** area and view the updated values in the **Variable Preview** area.

The optimized values of the design variables are automatically updated in the Simulink model.

See Also

Check Bode Characteristics

Related Examples

- “Design Optimization to Meet Frequency-Domain Requirements (GUI)”


Time-Domain Model Verification

This example shows how to perform time-domain model verification using Simulink Design Optimization **Model Verification** blocks. During time-domain verification, the software monitors a signal to check if it meets time-domain characteristics such as step response characteristics and upper and lower amplitudes, or tracks a reference signal.


You can also use blocks from Simulink and Simulink Control Design **Model Verification** libraries to design complex assertion logic for time- and frequency-domain verification, and signal monitoring. If you have Simulink Verification and Validation software, you can construct simulation tests for your model using the Verification Manager tool in the Signal Builder.

- 1 Open Simulink model.

```
sys = 'sldo_model1_stepblk';  
open_system(sys);
```

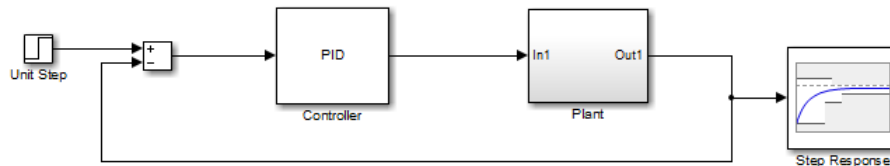

The model includes a **Step Response** block which is a **Check Step Response Characteristics** block from the Simulink Design Optimization **Model Verification** library and has default step response bounds.

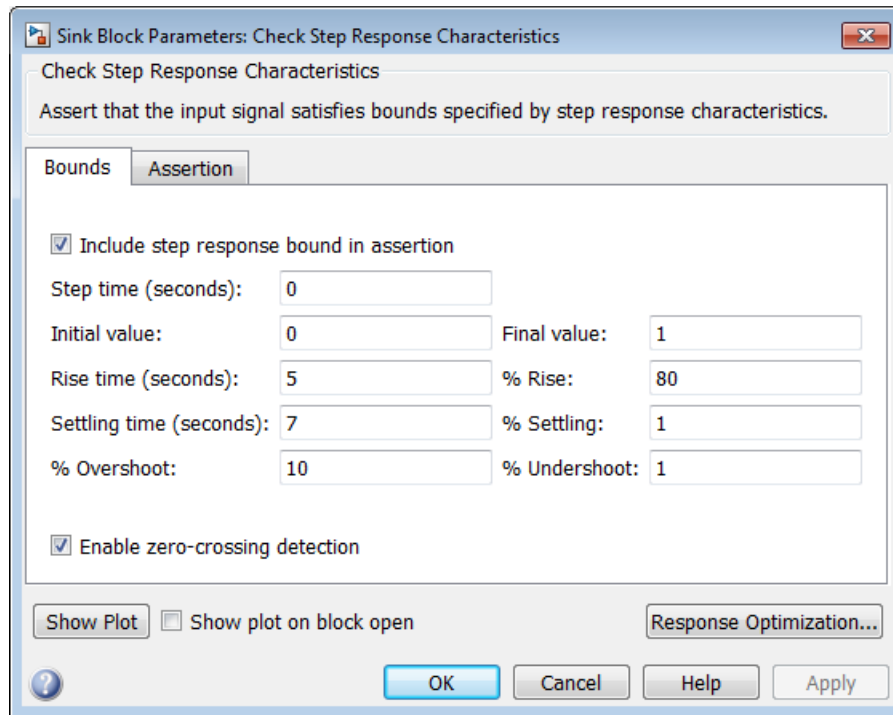

- 2 In the Simulink Editor, click **Simulation > Run**.

The block asserts multiple times during simulation because the signal to which the block is connected violates the specified bounds. Assertion warnings appear in the MATLAB command window.

You can optimize model parameters to satisfy the bounds and eliminate assertion warnings. See “Design Optimization to Meet Step Response Requirements (GUI)” on page 3-4.

Optimization-Based Linear Control Design

- “When to Use Optimization-Based Linear Control Design” on page 4-2
- “Types of Time- and Frequency-Domain Design Requirements for Optimization-Based Control Design” on page 4-3
- “Quick Start — Optimization-Based Linear Control Design” on page 4-4
- “Design Optimization-Based PID Controller for Linearized Simulink Model (GUI)” on page 4-15

When to Use Optimization-Based Linear Control Design

When you have Control System Toolbox software installed, you can design and optimize control systems for LTI models by optimizing controller parameters in the Control System Designer app. To use optimization methods for linear control design, also known as *optimization-based tuning*, you must already have an initial controller. You can then use optimization-based tuning to refine the controller design to meet additional design requirements. For more information on designing controllers, see the Control System Toolbox documentation.

Note: Optimization-based tuning only changes the value of the controller parameters and not the controller structure itself.

Optimization-based tuning provides flexibility in terms of specifying additional design requirements for the controller. When you have a large number of design requirements, you can first design an initial controller by selecting a subset of requirements and subsequently select additional requirements to refine the design.

Optimization-based tuning also provides flexibility in terms of selecting a subset of controller parameters to optimize, and specifying bounds on the controller parameters.

To design linear controllers for Simulink models using optimization-based tuning, you must first linearize the model using the Simulink Control Design software. For more information on linearizing Simulink models, see the Simulink Control Design documentation.

Related Examples

- “Optimize LTI System to Meet Frequency-Domain Requirements”
- “Design Optimization-Based PID Controller for Linearized Simulink Model (GUI)” on page 4-15

Types of Time- and Frequency-Domain Design Requirements for Optimization-Based Control Design

When you design linear controllers for LTI or Simulink models using the Simulink Design Optimization software, you can specify both time- and frequency-domain requirements on the system response. You can specify design requirements on the following plots:

- Root Locus plot
- Open-Loop and Prefilter Bode plots
- Open-Loop Nichols plot
- Step/Impulse Response plots

For more information, see “Time- and Frequency-Domain Requirements in Control System Designer App”.

Simulink Design Optimization software uses the frequency-domain requirements to compute the frequency response of the system. It then uses optimization methods to reduce the distance between the current response and the requirements by modifying the controller parameters. The software does not change the controller structure when optimizing the controller parameters.

Quick Start — Optimization-Based Linear Control Design

In this quick start, you get an overview of the typical tasks for optimization-based linear control design using the SISO Design Tool:

- 1 Open a SISO Design Tool session.
- 2 Configure a project for optimization-based control design.
- 3 Specify the controller parameters to design.
- 4 Specify the design requirements.
- 5 Design the controller.
- 6 Evaluate the controller design.

Note: The same workflow applies to optimization-based control design for LTI models created at the command line using Control System Toolbox software. To learn how to create LTI models, see “Linear (LTI) Models” in the Control System Toolbox documentation.

Prerequisites for optimization-based linear control design include:

- Simulink Compensator Design Task that contains a linearized version of the Simulink model and, optionally, any response plots you configure.


For more information on how to linearize a Simulink model for control design, see the Simulink Control Design documentation.

- Time- and frequency-domain design requirements

To design a controller using optimization methods:

- 1 Open a SISO Design Tool session by typing the following command at the MATLAB prompt:


```
controlSystemDesigner('projectname.mat')
```

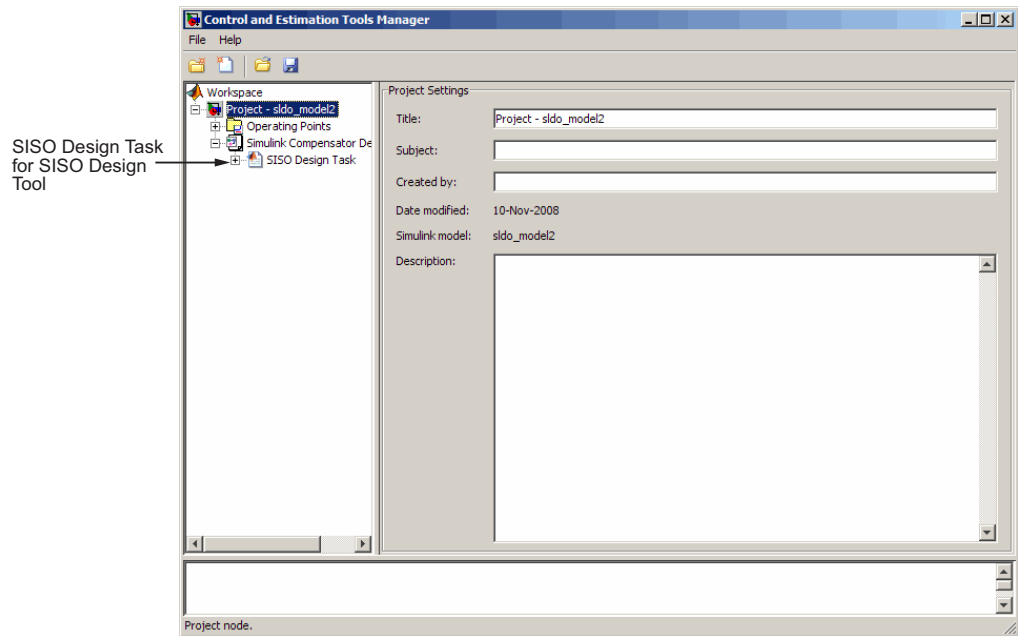
The command also opens a SISO Design for SISO Design Task window by default and any response plots you configured when you linearized the Simulink model using Simulink Control Design software.

- 2 Configure a project for optimization-based control design by clicking **Optimize Compensators** in the Automated Tuning tab of the **SISO Design Task**.


4 Optimization-Based Linear Control Design

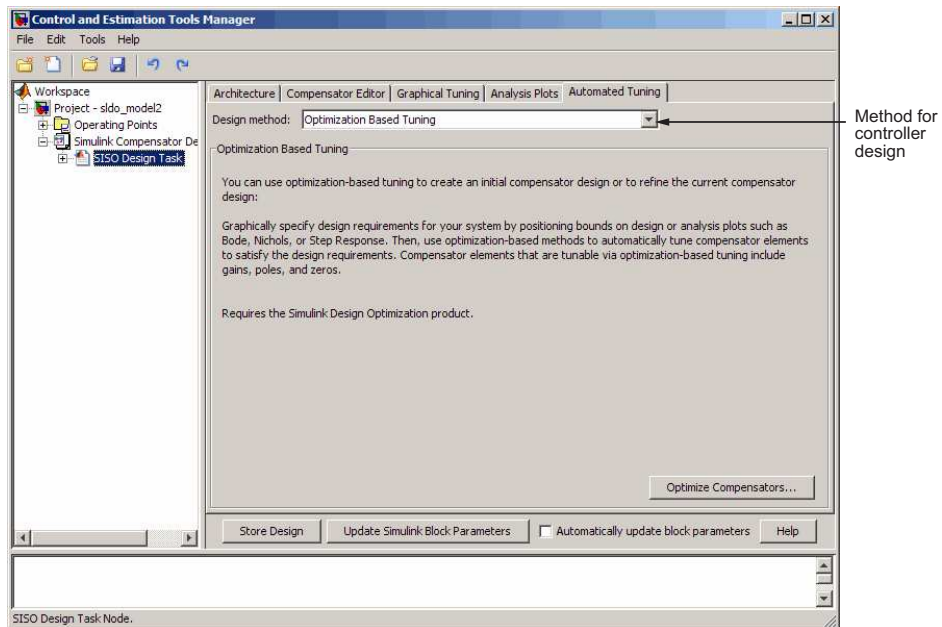

This action creates a new **Response Optimization** node in the Control and Estimation Tools Manager.

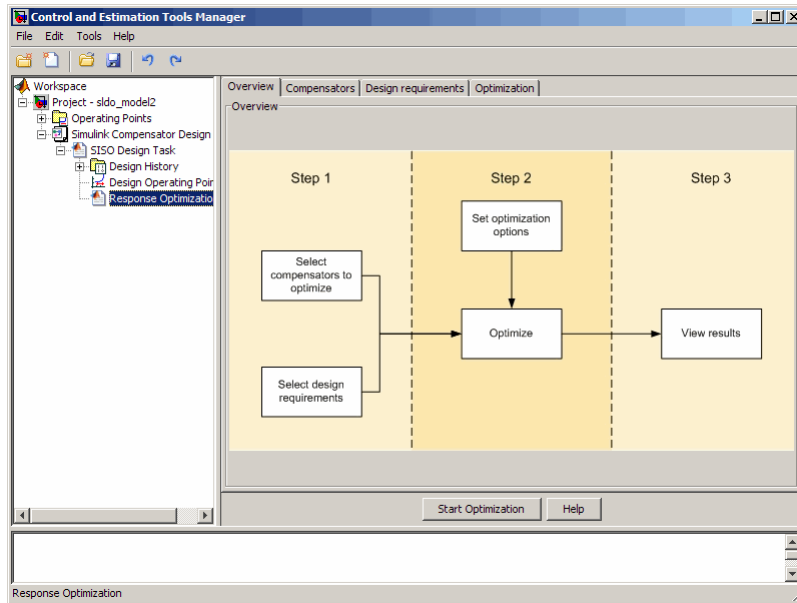


- 3 Specify the controller parameters to design in the **Compensators** tab.

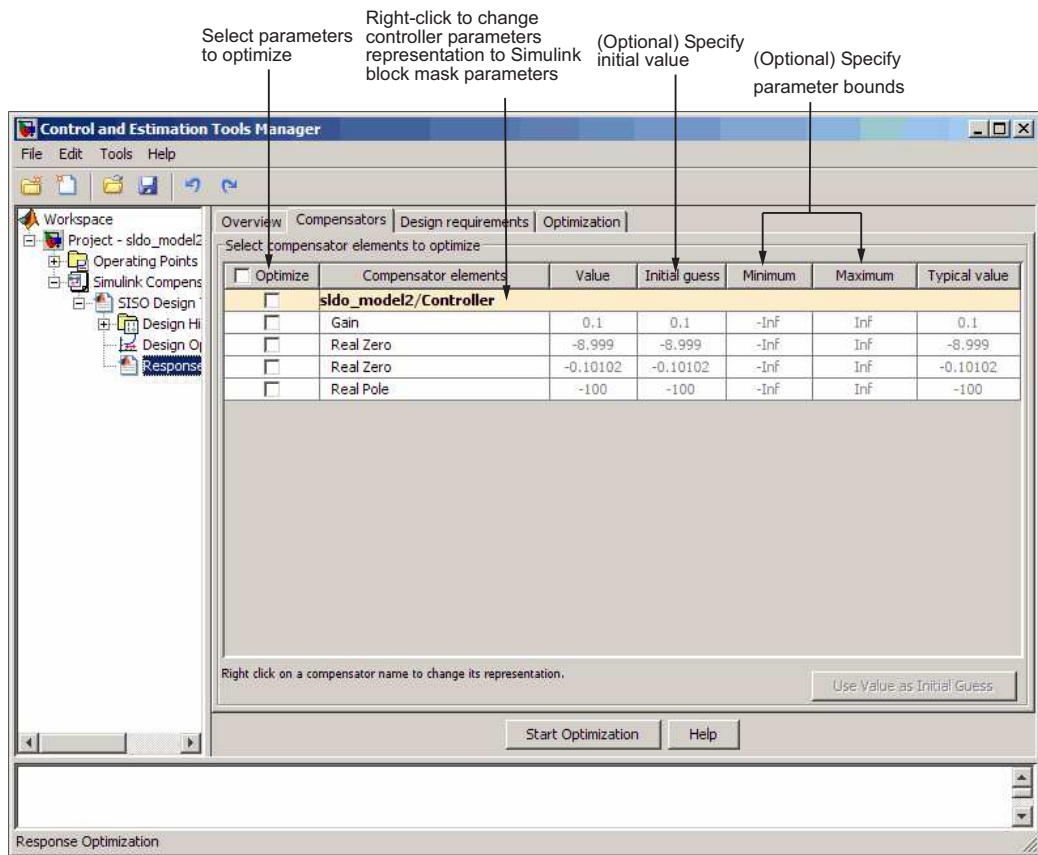


4 Specify the design requirements.


- a** In the **Design requirements** tab, click **Add new design requirement**. Specify the design requirements, for example Bode magnitude lower limit, in the New Design Requirement dialog box.

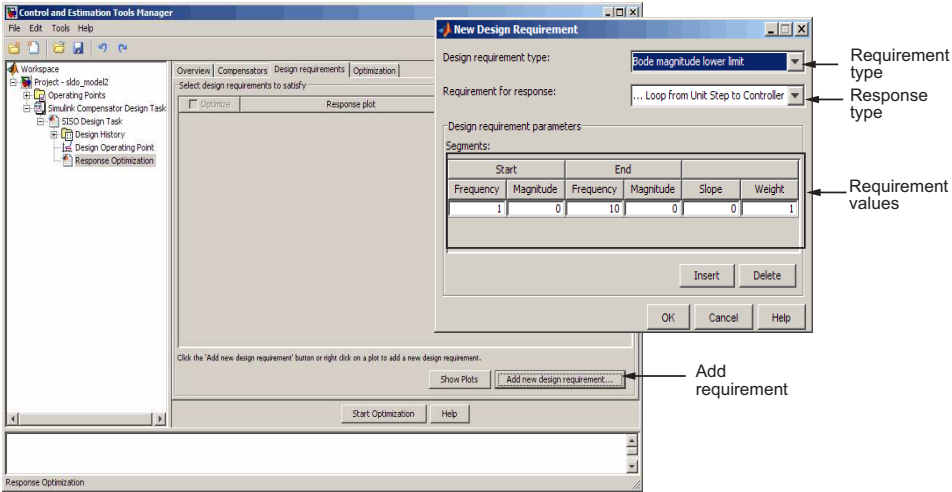

In the SISO Design window, the yellow region with the black line segment represents the design requirement on the response plot.

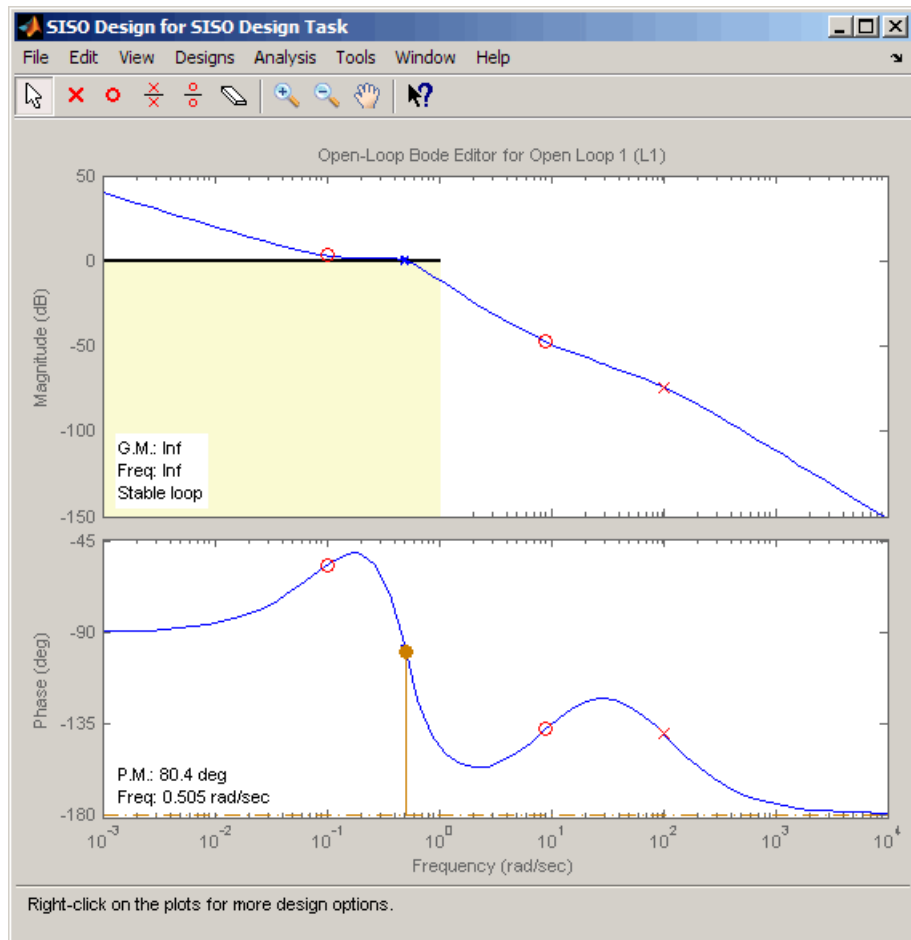


The **Design Requirements** tab also lists the design requirement.

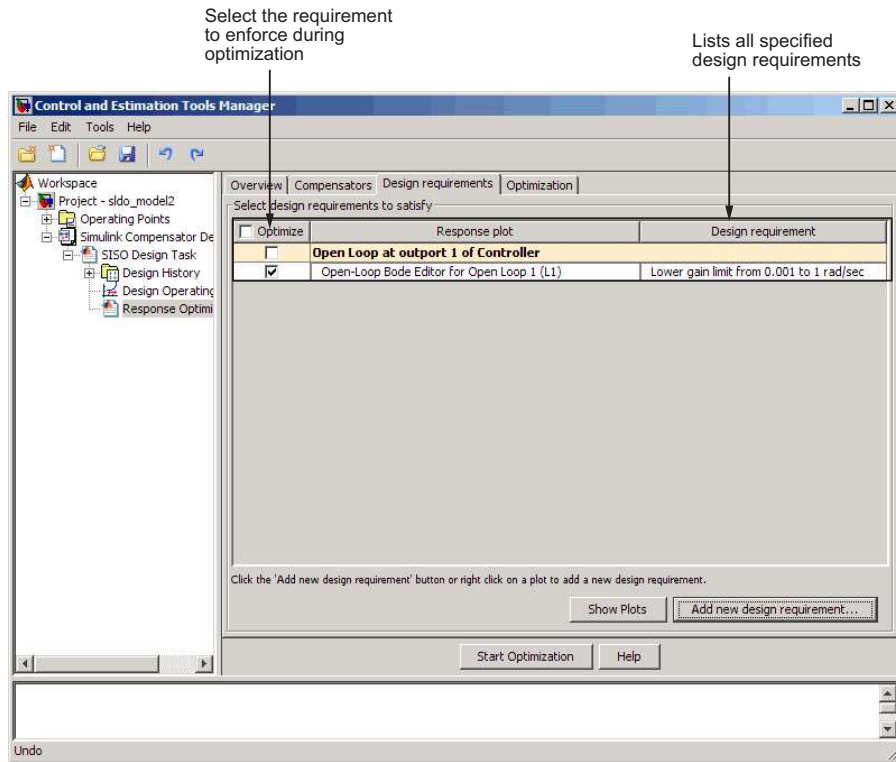


- b** Repeat step a to specify additional time- and frequency-domain requirements.
- 5** Start the optimization to design the controller by clicking **Start Optimization** in the **Optimization** tab.


4 Optimization-Based Linear Control Design

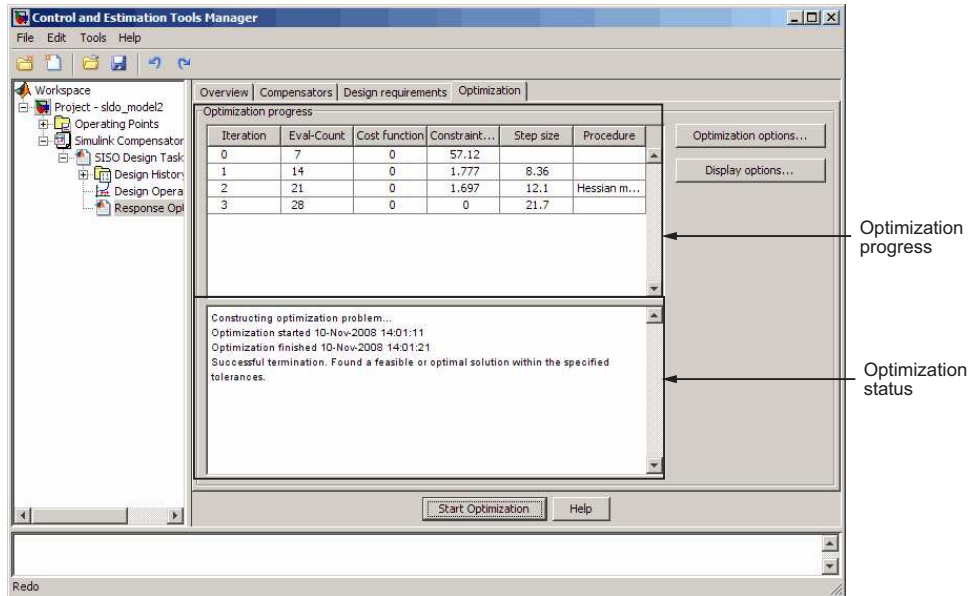

- 6 Evaluate the controller design.
 - a Examine the system's response in the response plot, for example the Bode plot, to see if it meets the requirements. The system's response must lie in the white region in order to meet the design requirement.

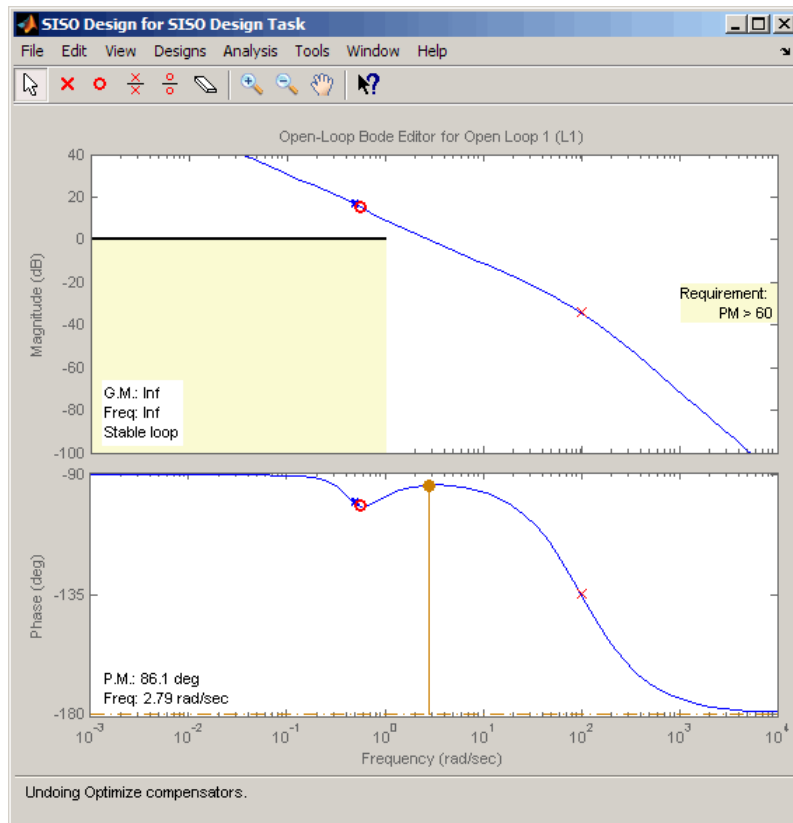

- b Examine the controller parameter values in the **Compensator** tab.

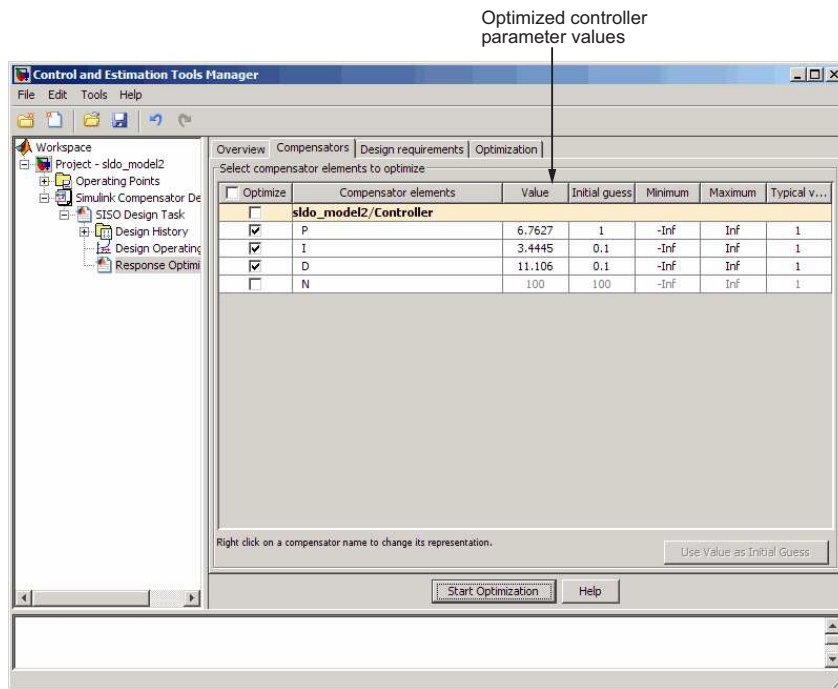

- 7 Write the controller parameter values into the Simulink model. To do so, click **Update Simulink Block Parameters** in the **SISO Design Task** node.

See Also: “Design Optimization-Based PID Controller for Linearized Simulink Model (GUI)” on page 4-15.

Design Optimization-Based PID Controller for Linearized Simulink Model (GUI)


This example shows how to perform optimization-based control design in the Control System Designer app when you have Control System Toolbox software. You design a PID controller for a linearized Simulink model.

You accomplish the following tasks:

- Specify frequency-domain Bode magnitude and phase margin requirements.
- Design an initial controller to meet the frequency-domain requirements.
- Refine the initial controller design to limit the controller output signal.


Model Structure

The Simulink model, `sldo_model2`, contains a **Controller** block, which is a PID Controller. This block controls the output of the **Plant** subsystem.

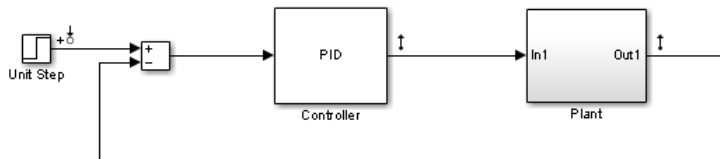

Using the Simulink Control Design software, the model has been linearized at the operating point specified in the model. The `sldo_model2.mat` file contains a preconfigured **Control System Designer** app session, saved after linearizing the model. To learn more about linearizing Simulink models for control design, see “Control System Design and Tuning” in the Simulink Control Design documentation.

The **Plant** subsystem is modeled as a second-order system with delay. It contains Transfer Function and Transport Delay blocks.



To learn more about the blocks, see the Transfer Fcn and Transport Delay block reference pages.

Design Requirements

The compensator you design must meet the following design requirements:

- Bode lower magnitude bound of 0 in the frequency range 1e-3 to 1 rad/sec
- Phase margin greater than 60 degrees
- Controller output bounds in the range [-250 550]

Configure the Control System Designer App for Optimization-Based Control Design

To design a linear controller for a Simulink model, first configure a **Control System Designer** app session.

- 1 Open a **Control System Designer** app session for the linearized Simulink model.


Type the following command at the MATLAB prompt:

```
controlSystemDesigner('sldo_model2.mat')
```

`sldo_model2.mat` file contains a preconfigured **Control System Designer** app session. This session was saved after Simulink Control Design software linearized `sldo_model2`.


The **Control System Designer** app opens with the following plots:

- Closed-loop step response of the system
- Output of the Controller block

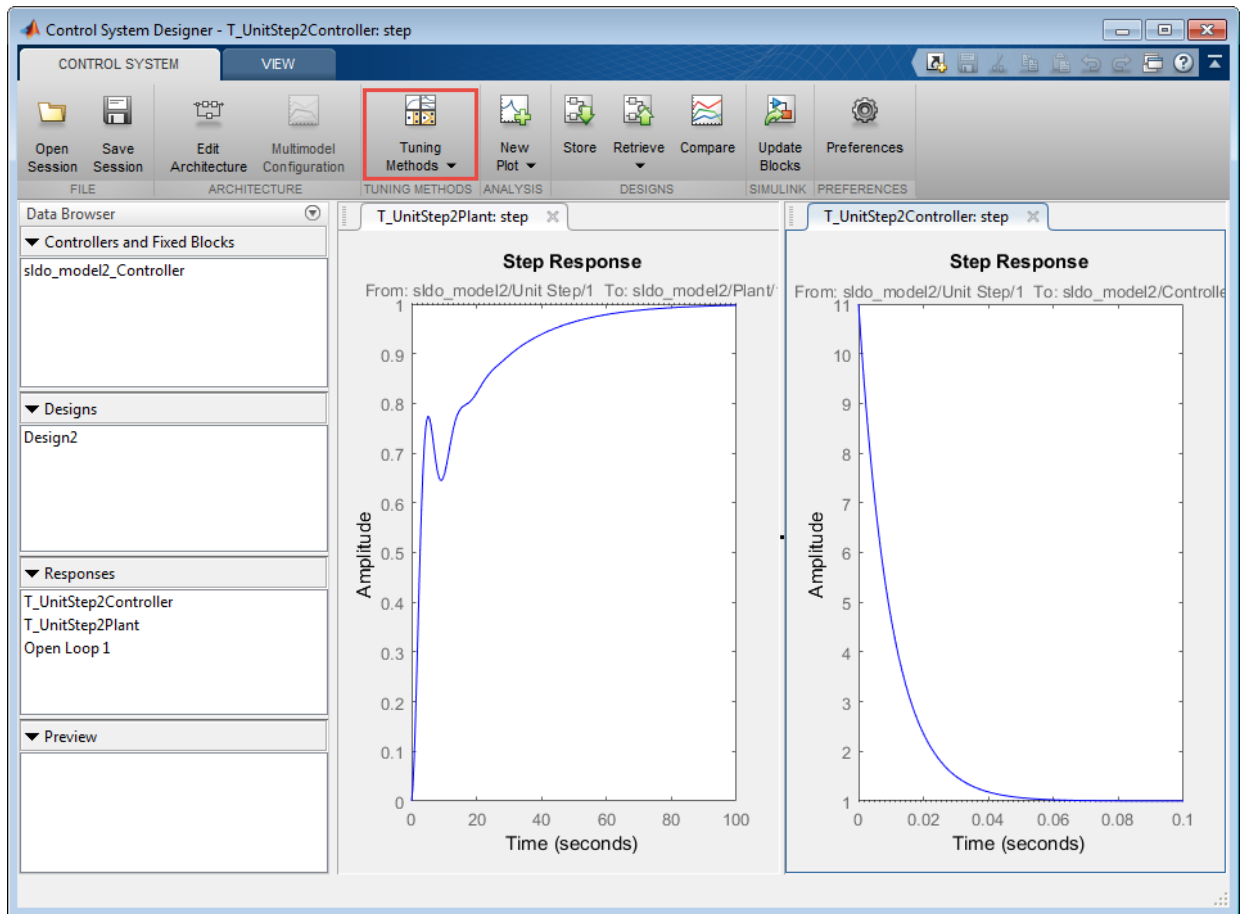

- 2 To perform response optimization, in the **Tuning Methods** drop-down list, select **Optimization Based Tuning**.

In the Response Optimization window, you can specify controller parameters and design requirements, and perform optimization.

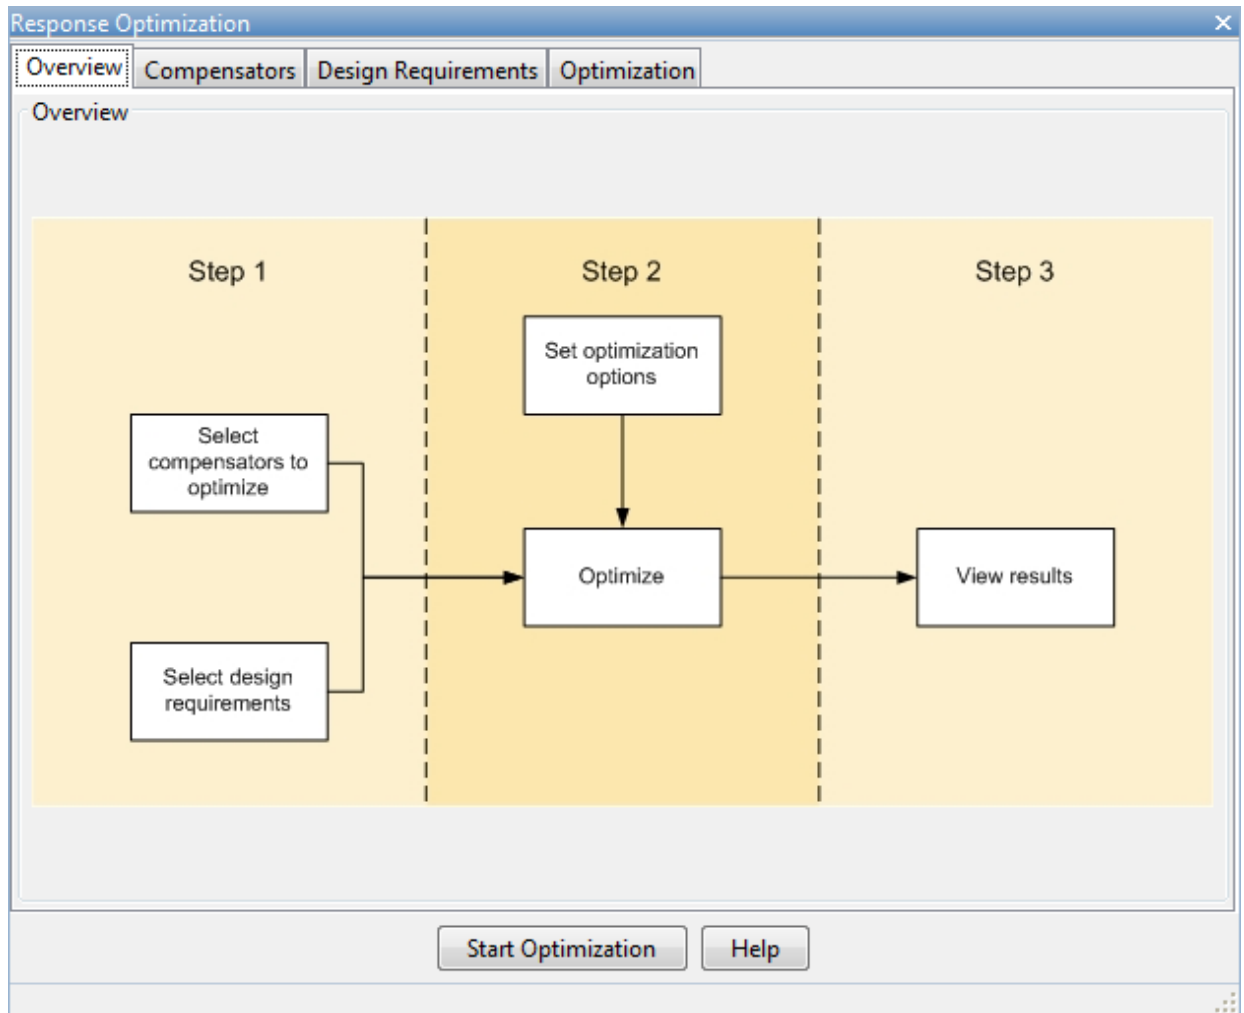


Design an Initial PID Controller to Meet Bode Magnitude and Phase Margins Requirements

Specify the Controller Parameters

To specify the controller parameters that are to be optimized:

- 1 In the Response Optimization window, select the **Compensators** tab.

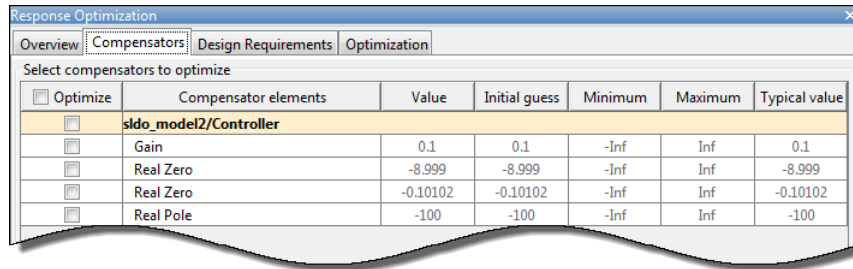

The **Compensators** tab displays the following parameter settings:

- **Value** — Current controller parameter value
- **Initial Guess** — Initial controller parameter value
- **Minimum** and **Maximum** — Controller parameter bounds
- **Typical Value** — Scaling factor for the controller parameter

Note: Compensator elements or parameters cannot have uncertainty when used with frequency-domain based response optimization.

The controller parameters appear as poles and zeros in the **Compensator elements** column:


- **Gain** — Overall gain of the controller
- **Real zeros** — Zeros resulting from the differentiator and integrator
- **Real pole** — Pole resulting from the low-pass filter of the differentiator

Tip To view the structure of the **Controller** block, right-click the block in the model, and select **Mask > Look Under Mask**.


- 2 Change the PID controller parameters to Simulink block mask parameters format.

Right-click the **sldo_model2/Controller** row, and select **Parameterized format**.

4 Optimization-Based Linear Control Design

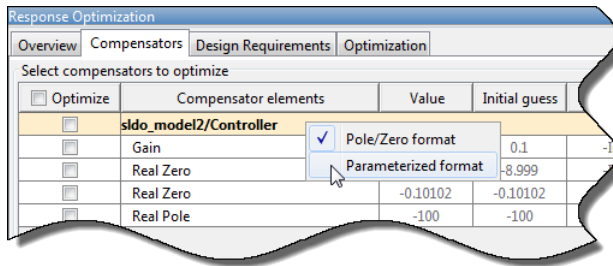


The controller parameters now display as Simulink block mask parameters, P, I, and D. For more information, see “Design Linear Controllers for Simulink Models”. To learn more about mask parameters, see “Mask Parameters” in the Simulink documentation.

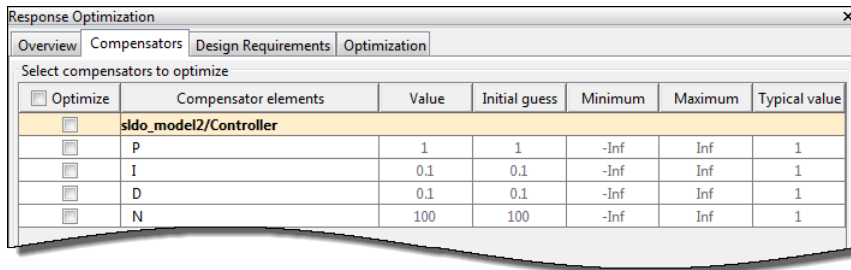

3 Select the controller parameters to optimize.


In the **Optimize** column, select P, I, and D.

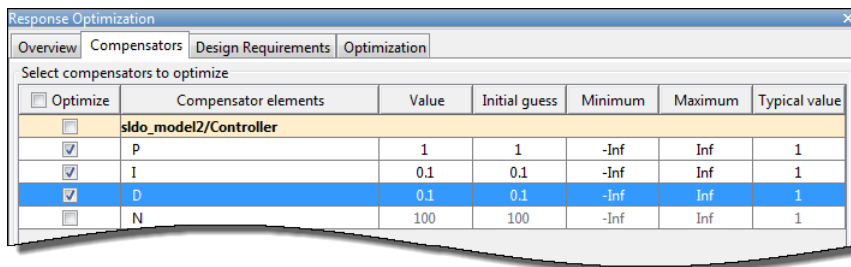


Specify Bode Magnitude and Phase Margin Design Requirements

Specify the Bode magnitude lower limit requirement:


- 1 In the **Design requirements** tab, click **Add new design requirement**. A New Design Requirement dialog box opens.
- 2 In the New Design Requirement dialog box, in the **Design requirement type** drop-down list, select **Bode magnitude lower limit**.
- 3 In the **Requirement for response** drop-down list, select **Open Loop 1**.
- 4 Specify the **Frequency** range as $1e-3$ to 1 .
- 5 Specify the **Magnitude** range as 0 to 0 .
- 6 Click **OK**.

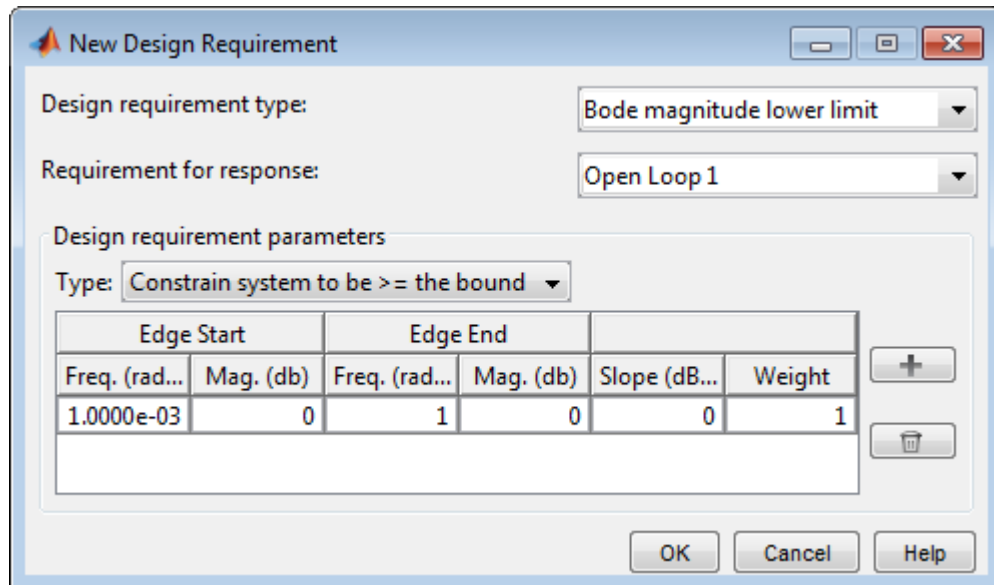

The Bode lower magnitude limit is added to the **Design requirements** tab.

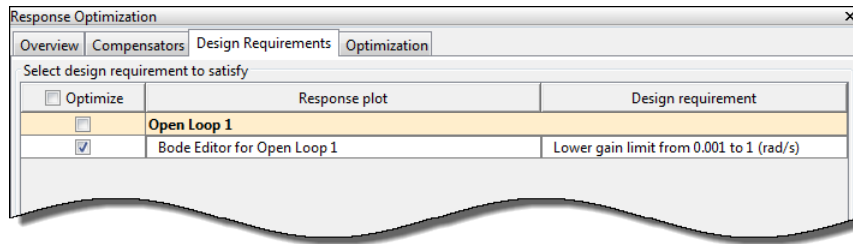


The **Control System Designer** app window updates to show the Bode plot in a **Bode Editor**. The design requirement is displayed as the black line segment.

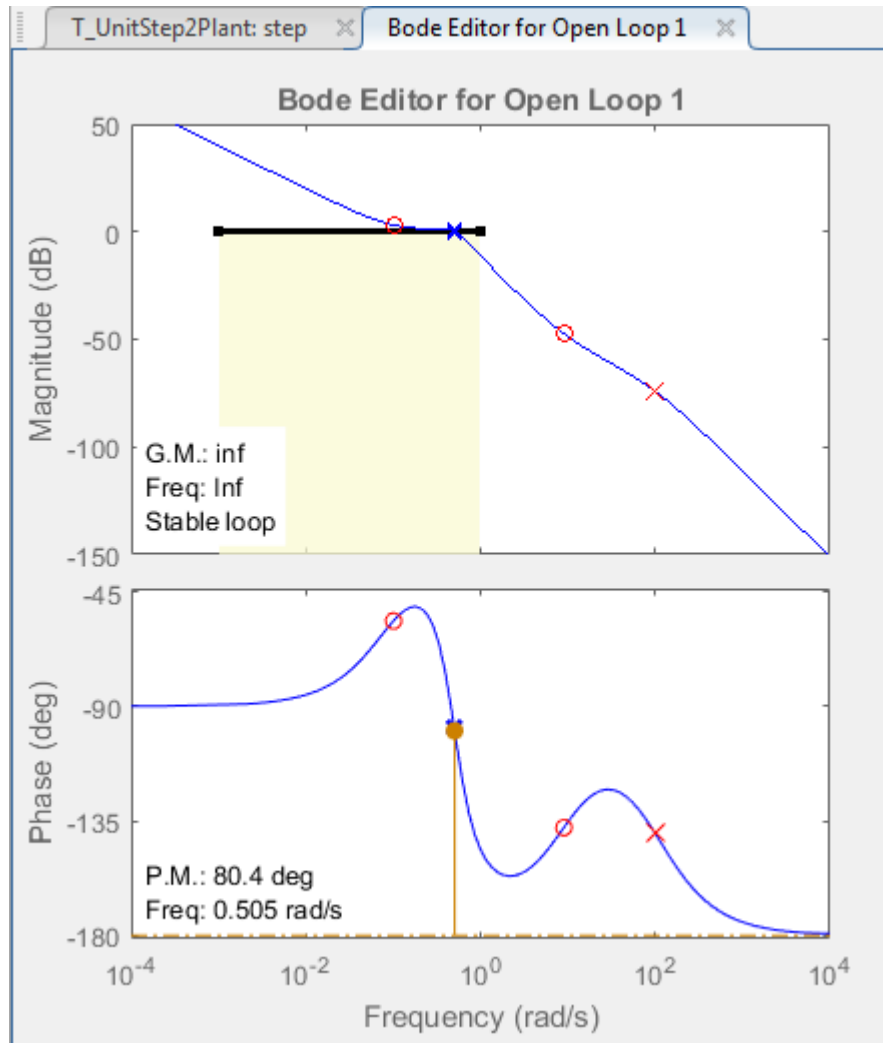


Specify the phase margin requirement:

- 1 Right-click within the white space of the Bode plot, and select **Design Requirements** > **New** to open the New Design Requirement dialog box.

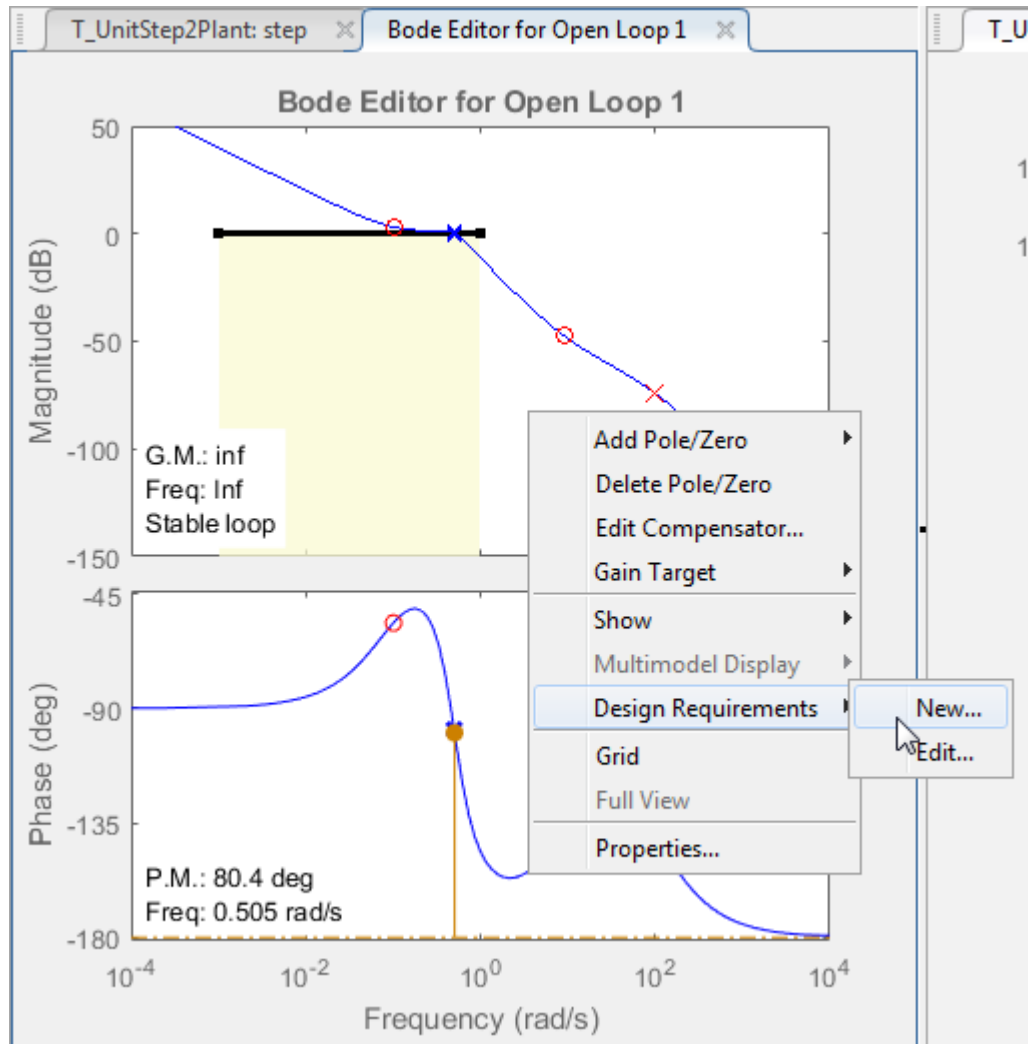


- 2 In the New Design Requirement dialog box, in the **Design requirement type** drop-down list, select **Gain & phase margins**.
- 3 Select the **Phase margin** check box, and specify the phase margin as 60.

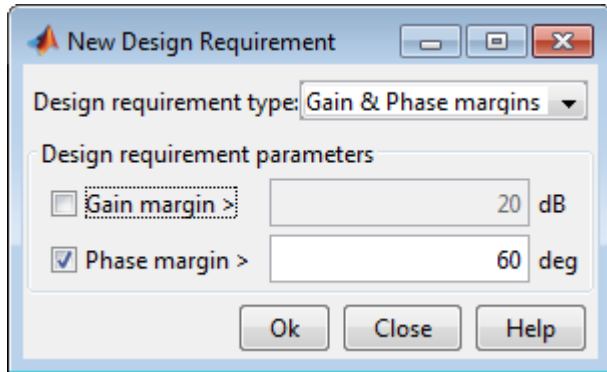


- 4 Click **OK**.

In the Response Optimization window, the **Design requirements** tab updates to display the phase margin requirement.

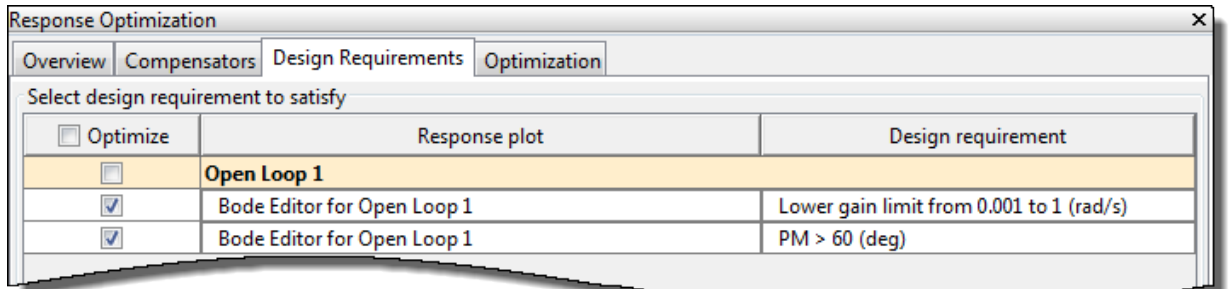

In the app, in the Bode Editor, the plot updates to display the phase margin requirement.

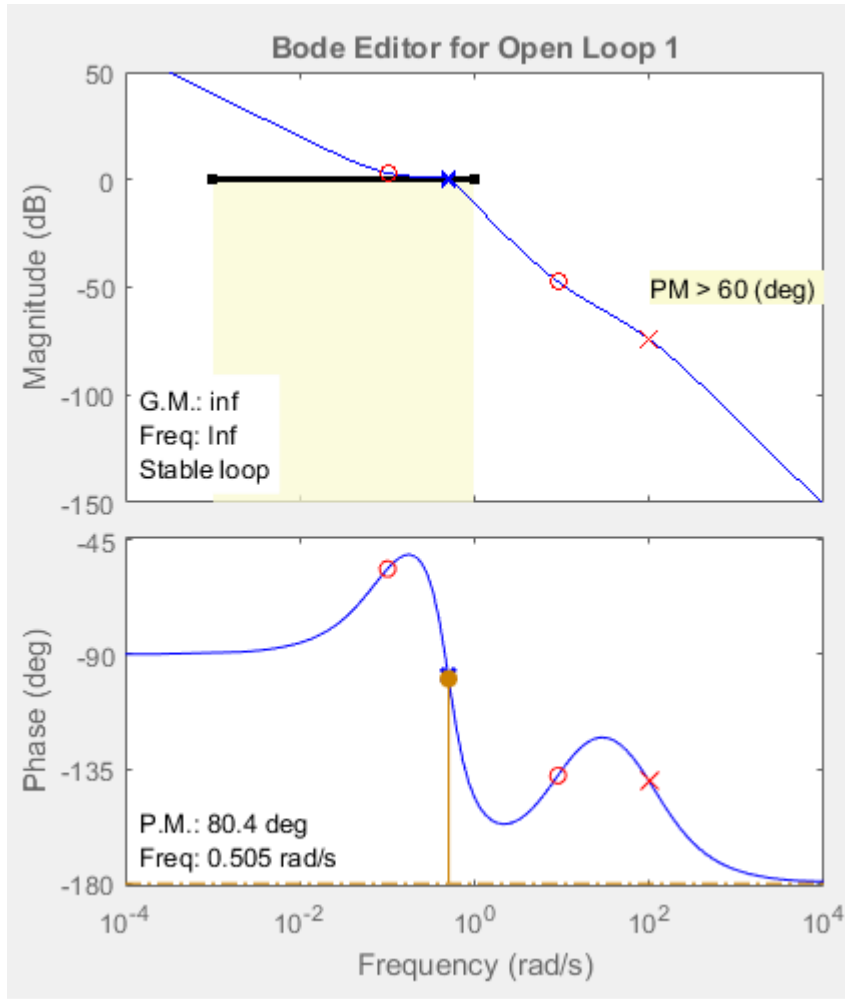

Design the Controller

To design the controller with specified design requirements:

- 1 In the Response Optimization window, in the **Optimization** tab, click **Start Optimization**.

At every optimization iteration, the default optimization method, **Gradient descent**, reduces the distance between the current response and the magnitude requirement line segment by modifying the controller parameters. Simultaneously, the software also computes the phase margin and reduces the distance between the current response and the phase margin. To learn more about the available optimization methods, click **Optimization Options**, and then click **Help** in the Options dialog box.

After the optimization completes, the **Optimization** tab displays the optimization iterations and status.

The screenshot shows the 'Response Optimization' window with the 'Optimization' tab selected. The window contains a table for 'Optimization Progress' and a log of optimization steps.

Iteration	Eval-Count	Cost function	Constraint vio...	Step size	Procedure
0	7	0	57.12		
1	14	0	1.777	8.36	
2	21	0	1.697	12.1	Hessian modi...
3	28	0	0	21.7	

Optimization options...
Display options...

Constructing optimization problem...
Optimization started 02-Dec-2015 17:04:04
Optimization finished 02-Dec-2015 17:05:01
Successful termination.
Found a feasible or optimal solution within the specified tolerances.

Start Optimization Help

The status message, **Successful termination**, indicates that the optimization method found a solution that meets the design requirements. For more information about the outputs displayed in the **Optimization progress** table, see “Iterative Display” in the Optimization Toolbox documentation.

- 2 Examine the controller parameters and the system response:
 - a In the **Compensator** tab, view the optimized parameter values in the **Value** column.

Response Optimization

Overview Compensators Design Requirements Optimization

Select compensators to optimize


<input type="checkbox"/> Optimize	Compensator elements	Value	Initial guess	Minimum	Maximum	Typical value
<input type="checkbox"/>	sldo_model2/Controller					
<input checked="" type="checkbox"/>	P	6.7627	1	-Inf	Inf	1
<input checked="" type="checkbox"/>	I	3.4445	0.1	-Inf	Inf	1
<input checked="" type="checkbox"/>	D	11.106	0.1	-Inf	Inf	1
<input type="checkbox"/>	N	100	100	-Inf	Inf	1

Right click on a compensator name to change its representation.


Use Value as Initial guess

Start Optimization Help

- b Examine the system response on the following plots:
 - The Bode plot:

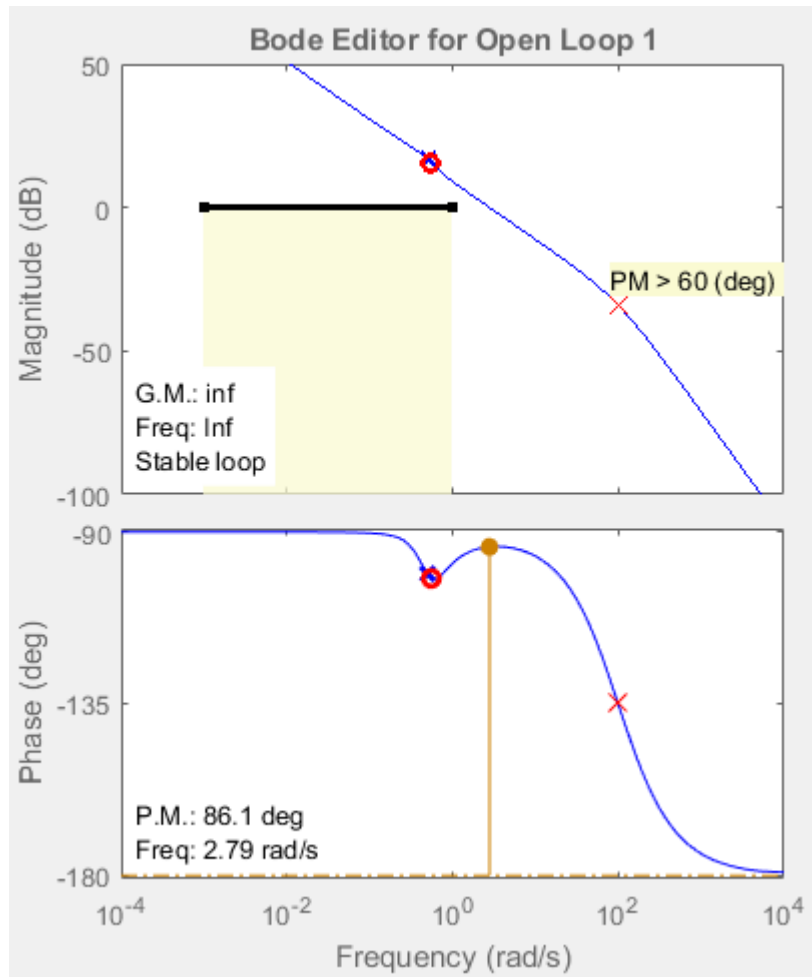


- The magnitude of the system, displayed as the blue curve in the top plot, lies outside the yellow region. This indicates that the system has met the Bode magnitude requirement.
- The phase plot displays the phase margin (P.M.) value of 86.1 degrees. This indicates that the system has met the phase margin design requirement of greater than 60 degrees.
- Closed-loop step response of the system:

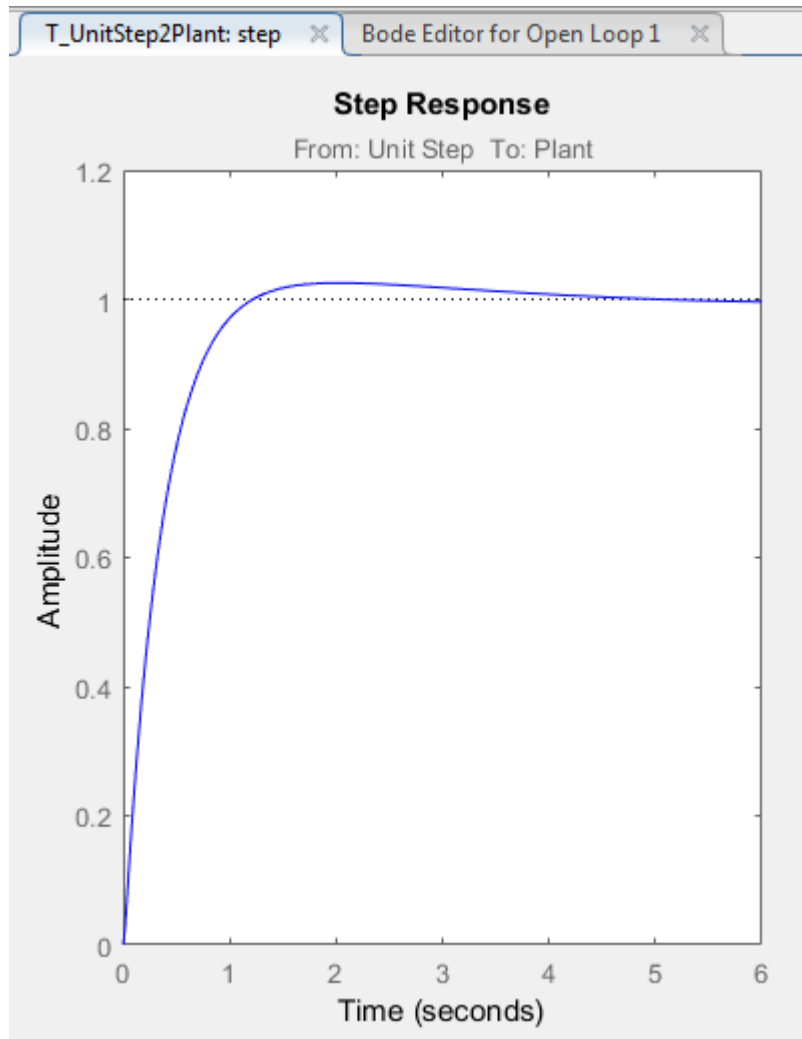

The plot shows that the closed-loop response of the system is stable. The system with the designed controller thus meets both the magnitude and phase margin requirements.

- Output of the Controller block:

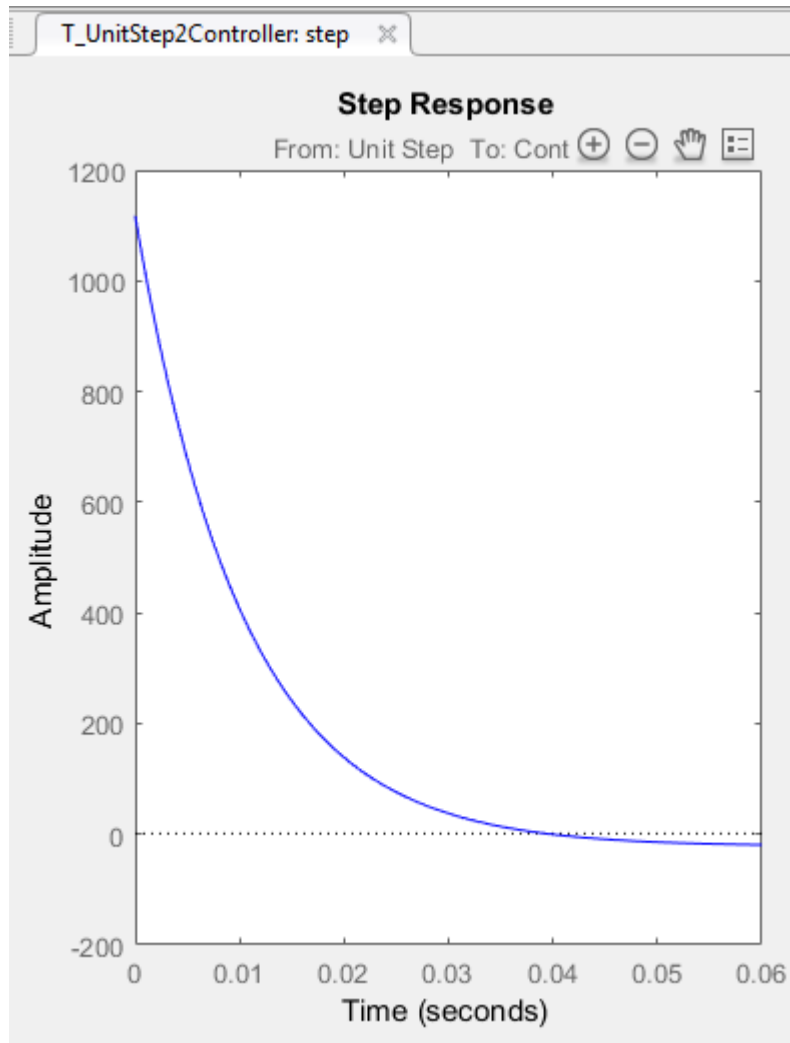


The plot shows that the peak value of the controller output is about 1100, which is large and can damage the plant. To limit the controller output, apply lower and upper bounds on the signal, as specified in “Design Requirements” on page 4-16.

Refine the Controller Design to Meet Controller Output Bounds

To tune the compensator parameters to meet the bounds on the controller output:


- 1 Add an upper-bound on the controller output:
 - a In the controller output plot, right-click the white area, and select **Design requirement > New**.

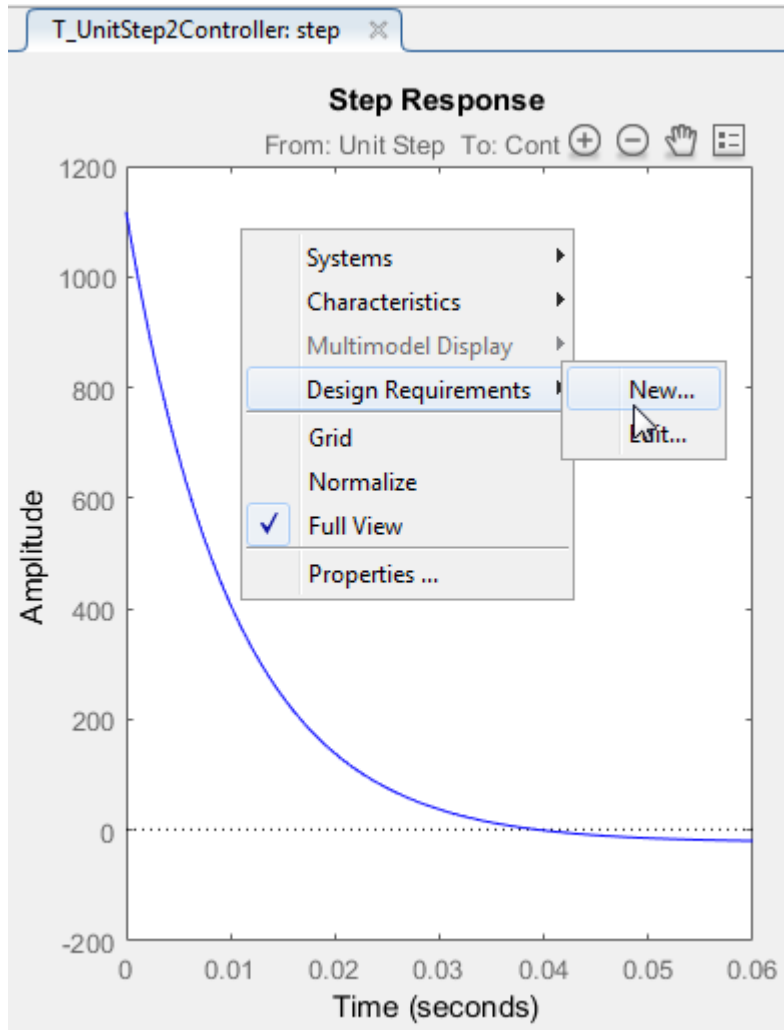


- b** In the New Design Requirement dialog box, in the **Design requirement type** drop-down list, select **Upper time response bound**.
- c** Specify the **Time** range as 0 to Inf.
- d** Specify the **Amplitude** range as 550 to 550.
- e** Click **OK**.

- 2 Add a lower-bound on the controller output:
 - a In controller output plot, right-click the white area, and select **Design requirement > New**.
 - b In the New Design Requirement dialog box, in the **Design requirement type** drop-down list, select **Lower time response bound**.
 - c Specify the **Time** range as 0 to Inf.
 - d Specify the **Amplitude** range as -250 to -250.
 - e Click **OK**.


In the Response Optimization window, the **Design requirements** tab updates to display the bounds on the controller output.

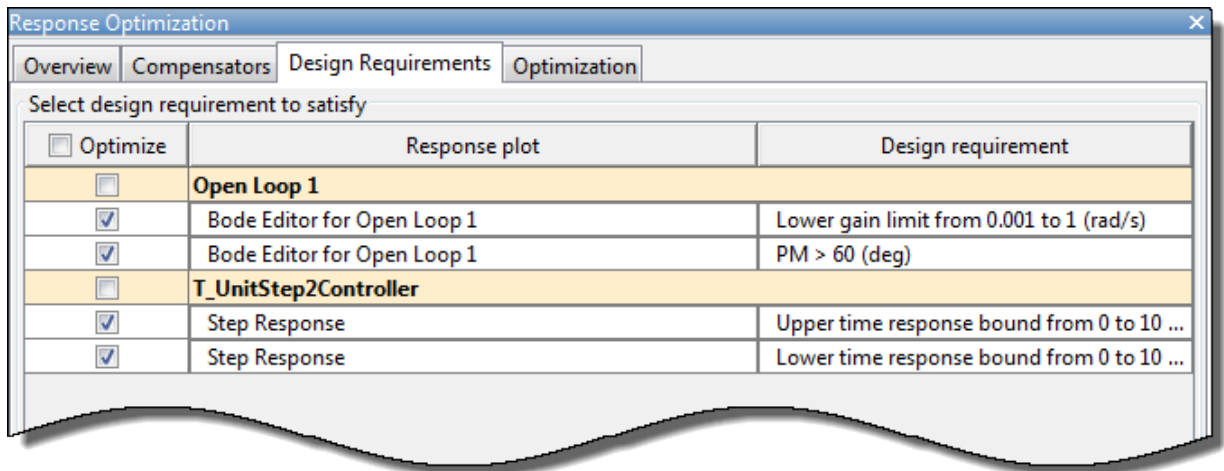


The plot of the output of the **Controller** block displays the new design requirements.

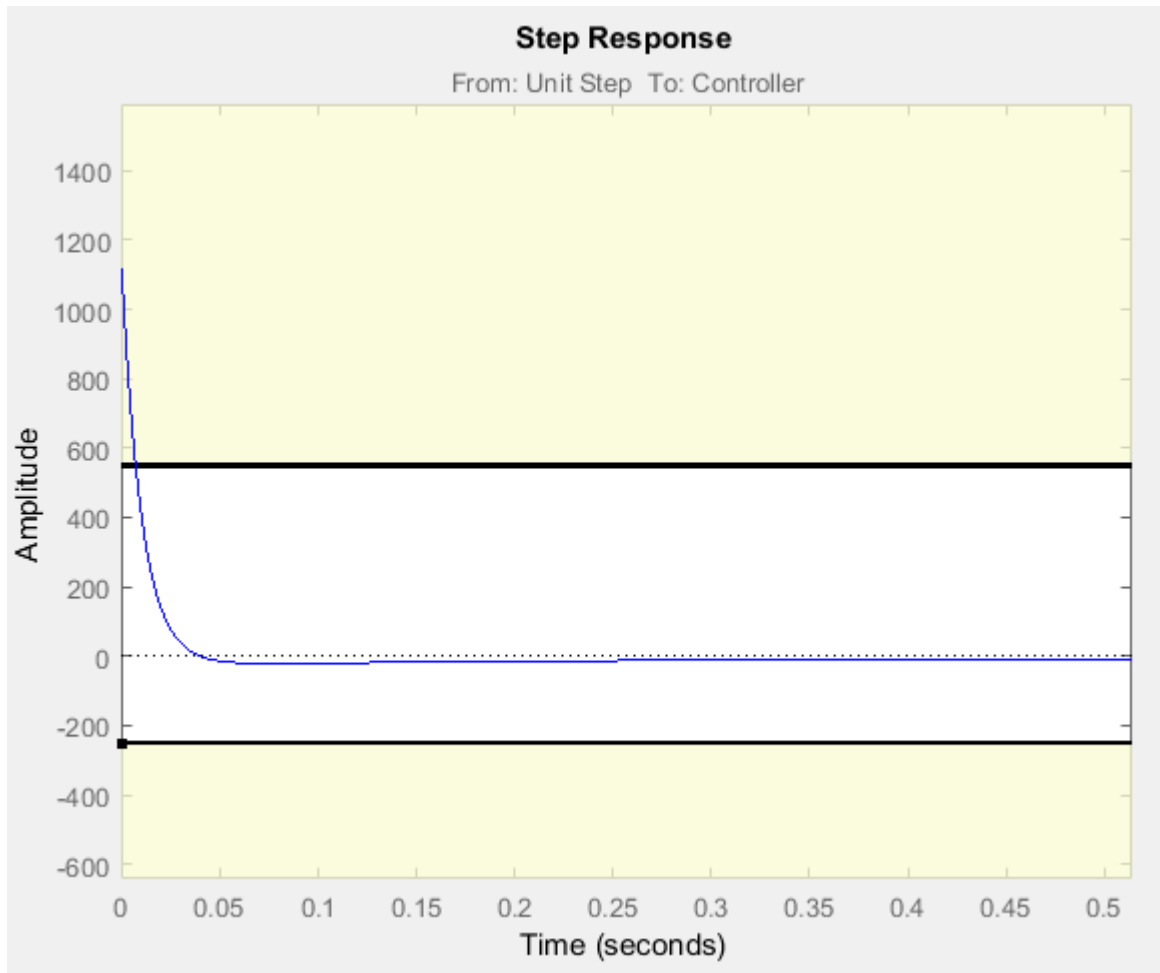


- 3 Optimize the parameters to meet the design requirements on the controller output:
 - a In the Response Optimization window, in the **Compensators** tab, select the rows containing P, I, and D, and click **Use Value as Initial Guess**.

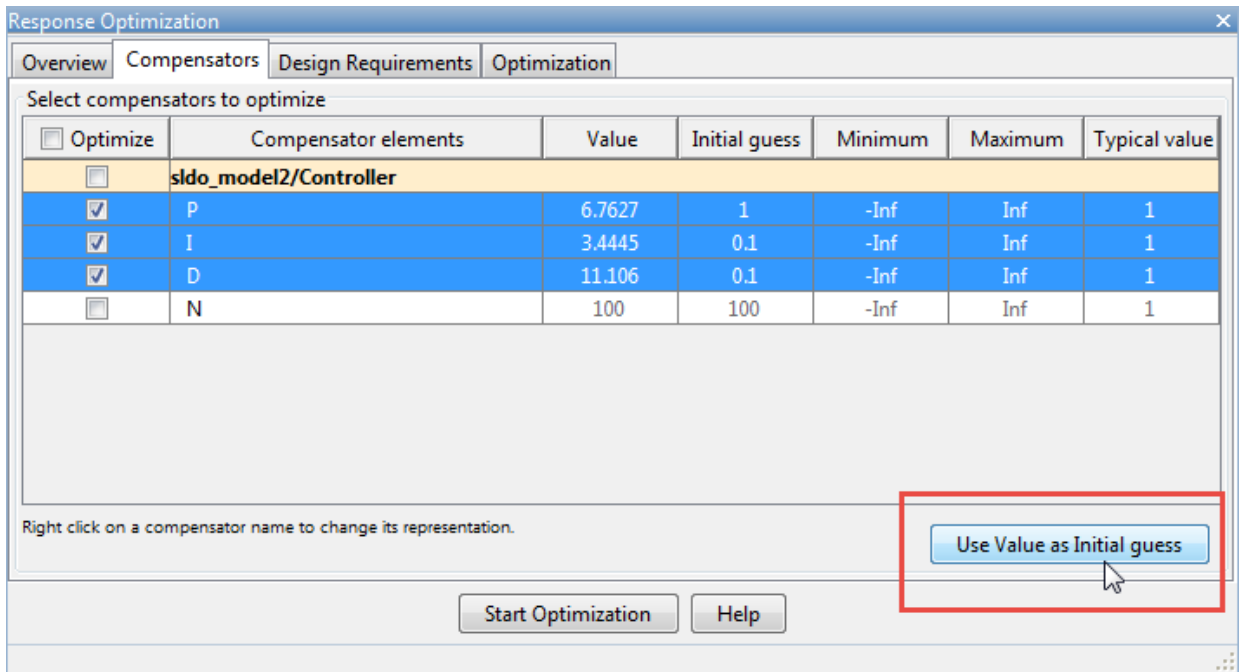

The values in the **Initial Guess** column update. When you run the optimization again, the optimization method uses the updated parameter values as the starting point for refining the values.

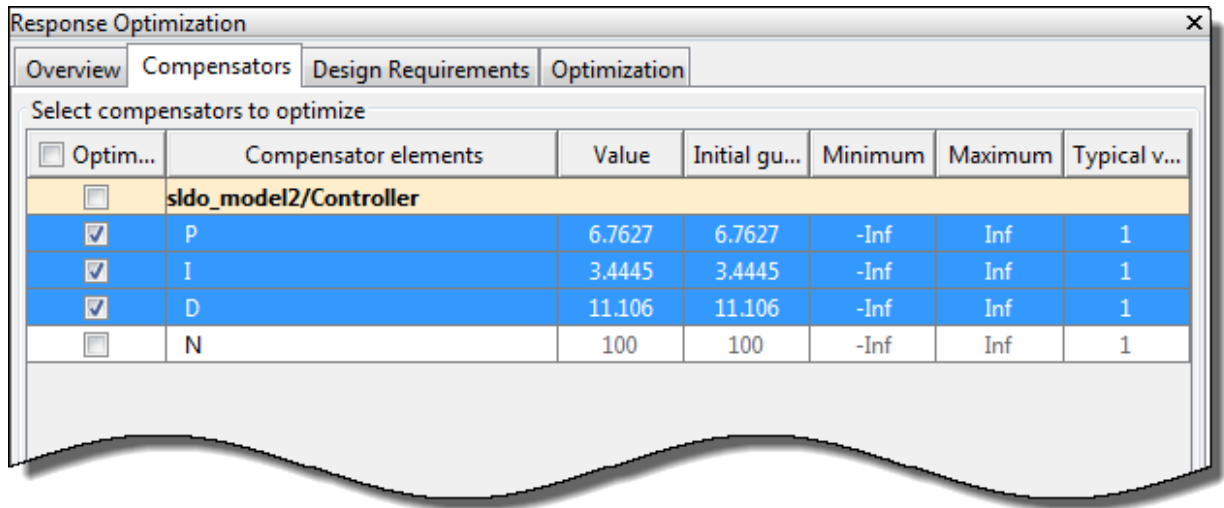


- b** In the **Optimization** tab, click **Start Optimization**. At every optimization iteration, the optimization method reduces the distance between the current response and the upper and lower bounds on the signal. After the optimization completes, the **Optimization** tab displays the optimization iterations and status.

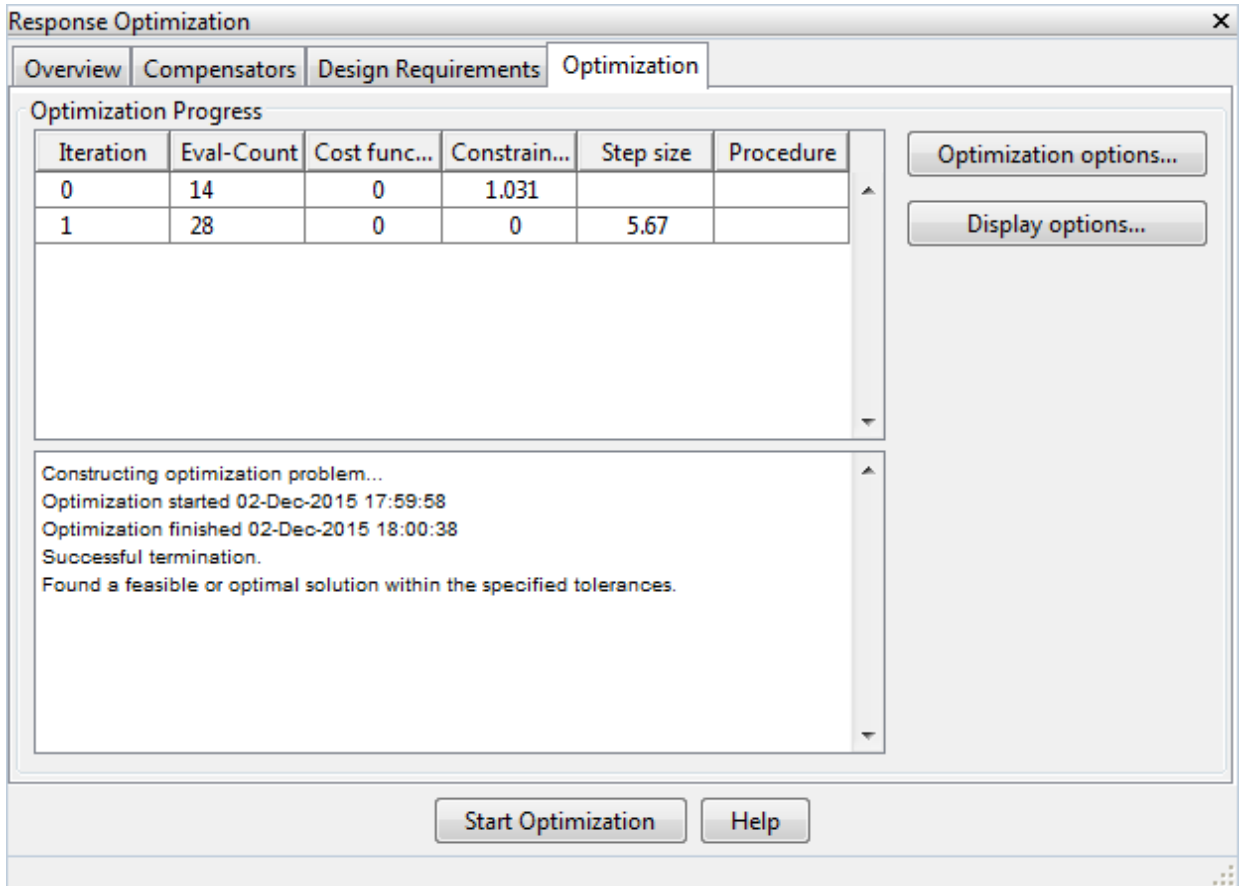


The status message, **Successful termination**, indicates that the optimization method found a solution that meets the design requirements.

4 Examine the response plots.


The Bode plots show that after refining the design, the system continues to meet the magnitude and phase margin requirements specified in “Design Requirements” on page 4-16.

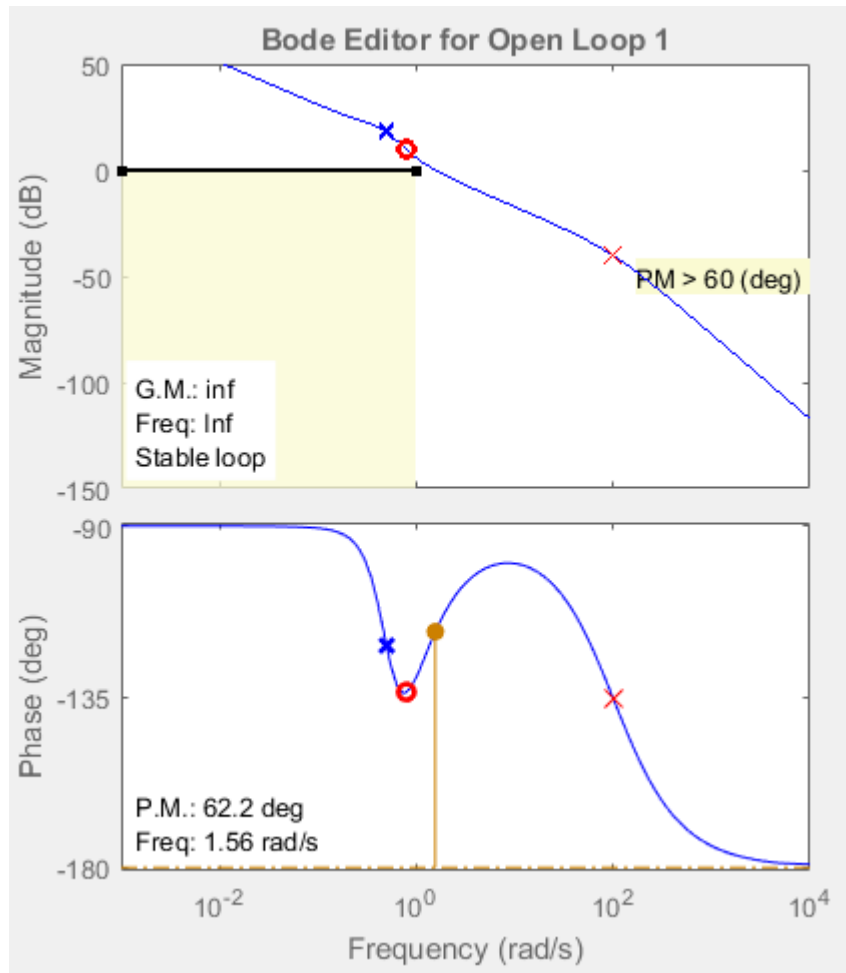

Verify that the closed-loop response of the system remains stable after refining the controller design.

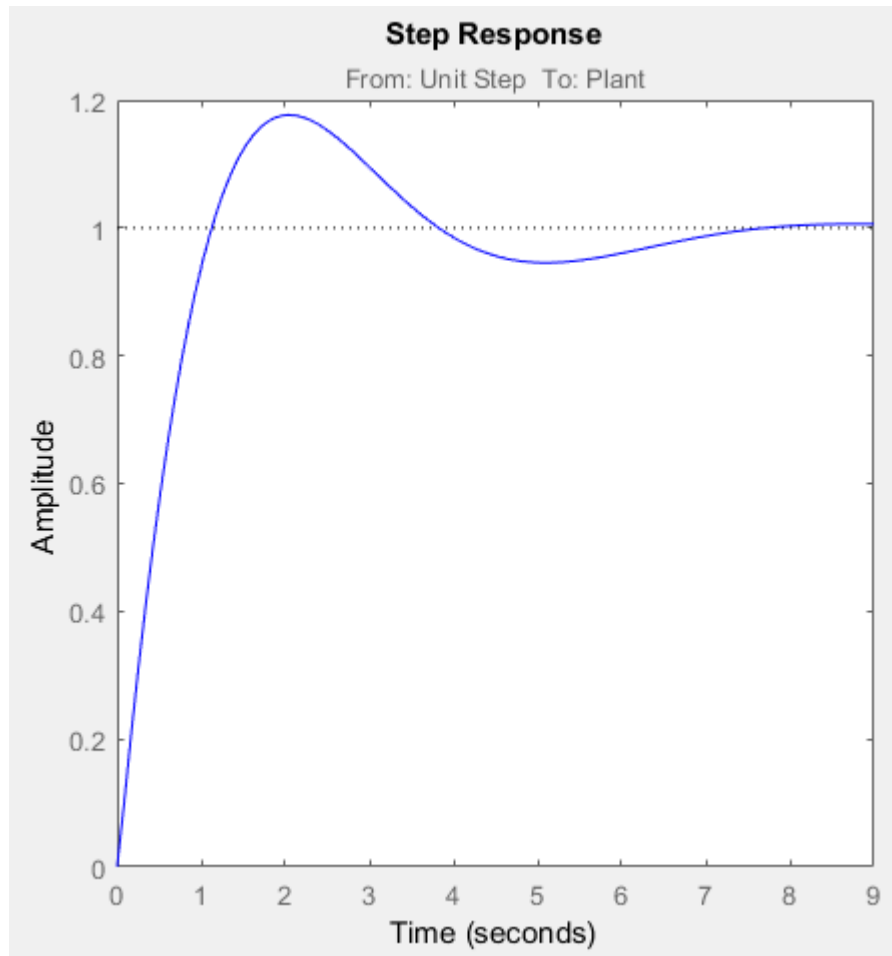

The plot of the output of the **Controller** block shows that the output lies between 550 and -250, and thus meets the design requirement on the bounds of the controller output.

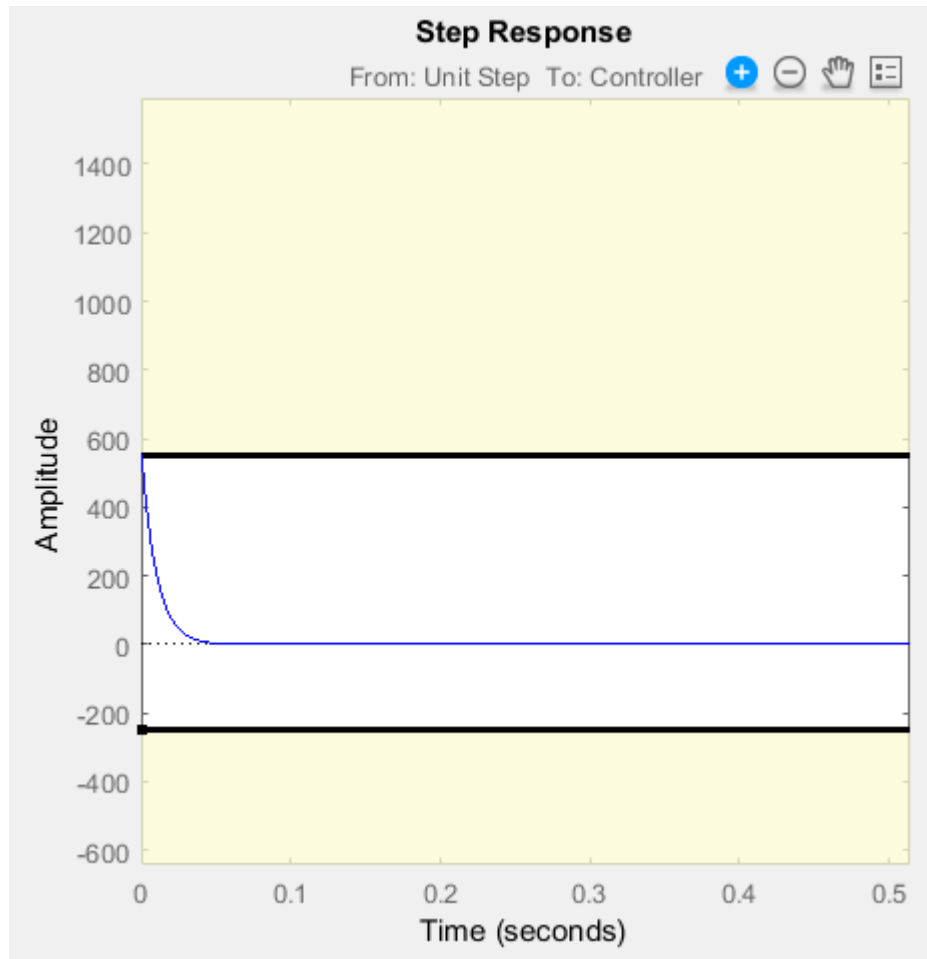

- 5 Examine the parameter values of the optimized controller.

In the Response Optimization window, in the **Compensators** tab, view the optimized controller parameter values in the **Value** column.

Response Optimization


Overview Compensators Design Requirements Optimization

Select compensators to optimize

<input type="checkbox"/> Optim...	Compensator elements	Value	Initial gu...	Minimum	Maximum	Typical v...
<input type="checkbox"/>	sldo_model2/Controller					
<input checked="" type="checkbox"/>	P	6.706	6.7627	-Inf	Inf	1
<input checked="" type="checkbox"/>	I	3.4445	3.4445	-Inf	Inf	1
<input checked="" type="checkbox"/>	D	5.4329	11.106	-Inf	Inf	1
<input type="checkbox"/>	N	100	100	-Inf	Inf	1

- Write the optimized controller parameter values to the Controller block in the Simulink model.

In the **Control System Designer** app, click **Update Blocks**.

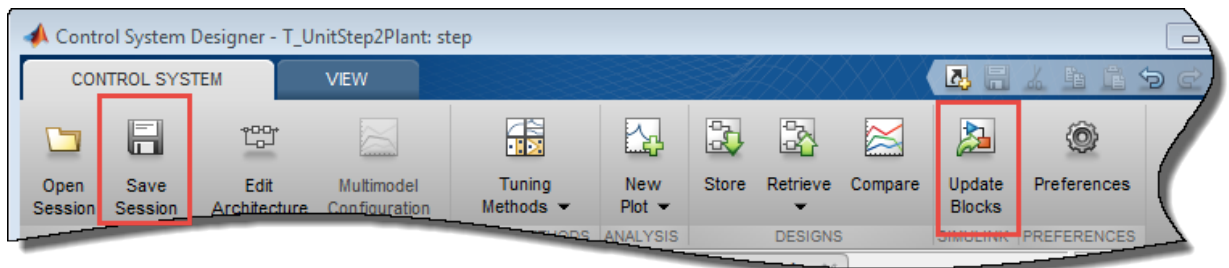

- Save a session with the optimized controller parameters.

In the **Control System Designer** app, select **Save Session**, and specify a name for the session.

More About

- “Design Linear Controllers for Simulink Models”
- “Optimize LTI System to Meet Frequency-Domain Requirements”