

**IMAQ<sup>TM</sup>**

# **NI-IMAQ Function Reference Manual**

October 1997 Edition  
Part Number 321387B-01



### **Internet Support**

support@natinst.com

E-mail: info@natinst.com

FTP Site: ftp.natinst.com

Web Address: <http://www.natinst.com>



### **Bulletin Board Support**

BBS United States: (512) 794-5422


BBS United Kingdom: 01635 551422

BBS France: 01 48 65 15 59



### **Fax-on-Demand Support**


(512) 418-1111



### **Telephone Support (U.S.)**

Tel: (512) 795-8248

Fax: (512) 794-5678



### **International Offices**

Australia 03 9879 5166, Austria 0662 45 79 90 0, Belgium 02 757 00 20,  
Canada (Ontario) 905 785 0085, Canada (Québec) 514 694 8521, Denmark 45 76 26 00,  
Finland 09 725 725 11, France 01 48 14 24 24, Germany 089 741 31 30,  
Hong Kong 2645 3186, Israel 03 5734815, Italy 02 413091, Japan 03 5472 2970,  
Korea 02 596 7456, Mexico 5 520 2635, Netherlands 0348 433466, Norway 32 84 84 00,  
Singapore 2265886, Spain 91 640 0085, Sweden 08 730 49 70, Switzerland 056 200 51 51,  
Taiwan 02 377 1200, United Kingdom 01635 523545

### **National Instruments Corporate Headquarters**

6504 Bridge Point Parkway Austin, TX 78730-5039 Tel: (512) 794-0100

# Important Information

---

## Warranty

The media on which you receive National Instruments software are warranted not to fail to execute programming instructions, due to defects in materials and workmanship, for a period of 90 days from date of shipment, as evidenced by receipts or other documentation. National Instruments will, at its option, repair or replace software media that do not execute programming instructions if National Instruments receives notice of such defects during the warranty period. National Instruments does not warrant that the operation of the software shall be uninterrupted or error free.

A Return Material Authorization (RMA) number must be obtained from the factory and clearly marked on the outside of the package before any equipment will be accepted for warranty work. National Instruments will pay the shipping costs of returning to the owner parts which are covered by warranty.

National Instruments believes that the information in this manual is accurate. The document has been carefully reviewed for technical accuracy. In the event that technical or typographical errors exist, National Instruments reserves the right to make changes to subsequent editions of this document without prior notice to holders of this edition. The reader should consult National Instruments if errors are suspected. In no event shall National Instruments be liable for any damages arising out of or related to this document or the information contained in it.

EXCEPT AS SPECIFIED HEREIN, NATIONAL INSTRUMENTS MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND SPECIFICALLY DISCLAIMS ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. CUSTOMER'S RIGHT TO RECOVER DAMAGES CAUSED BY FAULT OR NEGLIGENCE ON THE PART OF NATIONAL INSTRUMENTS SHALL BE LIMITED TO THE AMOUNT THEREFORE PAID BY THE CUSTOMER. NATIONAL INSTRUMENTS WILL NOT BE LIABLE FOR DAMAGES RESULTING FROM LOSS OF DATA, PROFITS, USE OF PRODUCTS, OR INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF. This limitation of the liability of National Instruments will apply regardless of the form of action, whether in contract or tort, including negligence. Any action against National Instruments must be brought within one year after the cause of action accrues. National Instruments shall not be liable for any delay in performance due to causes beyond its reasonable control. The warranty provided herein does not cover damages, defects, malfunctions, or service failures caused by owner's failure to follow the National Instruments installation, operation, or maintenance instructions; owner's modification of the product; owner's abuse, misuse, or negligent acts; and power failure or surges, fire, flood, accident, actions of third parties, or other events outside reasonable control.

## Copyright

Under the copyright laws, this publication may not be reproduced or transmitted in any form, electronic or mechanical, including photocopying, recording, storing in an information retrieval system, or translating, in whole or in part, without the prior written consent of National Instruments Corporation.

## Trademarks

CVI™, IMAQ™, LabVIEW™, NI-DAQ™, RTSI™, SCXI™, and StillColor™ are trademarks of National Instruments Corporation.

Product and company names listed are trademarks or trade names of their respective companies.

## WARNING REGARDING MEDICAL AND CLINICAL USE OF NATIONAL INSTRUMENTS PRODUCTS

National Instruments products are not designed with components and testing intended to ensure a level of reliability suitable for use in treatment and diagnosis of humans. Applications of National Instruments products involving medical or clinical treatment can create a potential for accidental injury caused by product failure, or by errors on the part of the user or application designer. Any use or application of National Instruments products for or involving medical or clinical treatment must be performed by properly trained and qualified medical personnel, and all traditional medical safeguards, equipment, and procedures that are appropriate in the particular situation to prevent serious injury or death should always continue to be used when National Instruments products are being used. National Instruments products are NOT intended to be a substitute for any form of established process, procedure, or equipment used to monitor or safeguard human health and safety in medical or clinical treatment.

## About This Manual

How to Use the NI-IMAQ Manual Set .....	ix
Organization of This Manual .....	ix
Conventions Used in This Manual .....	x
National Instruments Documentation .....	xi
Related Documentation .....	xii
Customer Communication .....	xii

## Chapter 1

### Introduction

Status Codes .....	1-1
Variable Data Types .....	1-1
Primary Types .....	1-2
Arrays .....	1-2
Programming Language Considerations .....	1-2
LabVIEW .....	1-2
LabWindows/CVI .....	1-3
Other Programming Environments .....	1-6
Code Examples .....	1-6
Geometric Definitions .....	1-7
Architecture .....	1-8

## Chapter 2

### Generic Functions

imgInterfaceOpen .....	2-2
imgSessionOpen .....	2-3
imgClose .....	2-4

## Chapter 3

### High-Level Functions

Snap Functions .....	3-1
imgSnap .....	3-2
imgSnapArea .....	3-3

Grab Functions .....	3-5
imgGrabSetup .....	3-6
imgGrab .....	3-7
imgGrabArea .....	3-8
Ring and Sequence Functions .....	3-10
imgRingSetup .....	3-11
imgSequenceSetup .....	3-13
imgSessionStartAcquisition .....	3-15
imgSessionStopAcquisition .....	3-16
Miscellaneous Functions .....	3-17
imgSessionStatus .....	3-18
imgSessionSetROI .....	3-19
imgSessionGetROI .....	3-21
imgSessionGetBufferSize .....	3-22

## Chapter 4

### Low-Level Functions

Interface Functions .....	4-1
imgInterfaceLock .....	4-2
imgInterfaceQueryNames .....	4-3
imgInterfaceReset .....	4-4
imgInterfaceUnlock .....	4-5
Session Functions .....	4-6
imgSessionAbort .....	4-7
imgSessionAcquire .....	4-8
imgSessionClearBuffer .....	4-9
imgSessionClearTriggers .....	4-10
imgSessionConfigure .....	4-11
imgSessionCopyArea .....	4-12
imgSessionCopyBuffer .....	4-14
imgSessionExamineBuffer .....	4-16
imgSessionGetTriggerStatus .....	4-18
imgSessionReleaseBuffer .....	4-19
imgSessionSaveBuffer .....	4-20
imgSessionSetRTSImap .....	4-21
imgSessionSetTrigger .....	4-23
imgSessionWait .....	4-25
imgSessionWaitAqdone .....	4-26
imgSessionWaitVblank .....	4-27
Miscellaneous Functions .....	4-28
imgCameraAction .....	4-29
imgCreateBuffer .....	4-30

imgCreateBufList .....	4-32
imgDisposeBuffer .....	4-33
imgDisposeBufList .....	4-34
imgGetAttribute .....	4-35
imgGetBufferElement .....	4-36
imgMemLock .....	4-37
imgMemUnlock .....	4-38
imgPlot .....	4-39
imgSetArrayPointerValue .....	4-41
imgSetAttribute .....	4-42
imgSetBufferElement .....	4-43
imgShowError .....	4-44

## **Appendix A**

### **Attributes and Constants**

## **Appendix B**

### **Status Codes**

## **Appendix C**

### **Customer Communication**

## **Glossary**

## **Index**

## **Figures**

Figure 1-1. Geometric Relationship .....	1-7
Figure 1-2. NI-IMAQ Architecture .....	1-8

## **Tables**

Table 1-1. Primary Type Names .....	1-2
Table 1-2. The LabWindows/CVI Function Tree for Image Acquisition.....	1-3
Table A-1. Attribute Summary .....	A-1
Table A-2. Constants Summary .....	A-9
Table B-1. Status Code Summary.....	B-1

---

The *NI-IMAQ Function Reference Manual* is for users of the NI-IMAQ software for PCI bus-based computers. NI-IMAQ is a powerful application programming interface (API) between your image acquisition (IMAQ) application and the National Instruments IMAQ board for PCI bus-based computers.

## How to Use the NI-IMAQ Manual Set

---

Before using this manual, you should read the NI-IMAQ release notes and the *NI-IMAQ User Manual*. The NI-IMAQ release notes contain instructions on how to install your NI-IMAQ software and how to use the online documentation set. The *NI-IMAQ User Manual* contains information on how to program using your National Instruments software. Then read Chapter 1, *Introduction*, of *Getting Started with Your IMAQ PCI/PXI-1408 and the NI-IMAQ Software for Windows 95/NT*, which contains a flowchart that illustrates the sequence of steps you should take to learn about and get started with NI-IMAQ.

When you are familiar with the material in the *NI-IMAQ User Manual*, use this manual, which contains detailed descriptions of the NI-IMAQ functions.

## Organization of This Manual

---

The *NI-IMAQ Function Reference Manual* is organized as follows:


- Chapter 1, *Introduction*, contains important information about how to apply the function descriptions in this manual to your programming language and environment.
- Chapter 2, *Generic Functions*, contains a detailed explanation of each generic NI-IMAQ function. The functions are arranged according to the order in which you will use them.

- Chapter 3, *High-Level Functions*, contains a detailed explanation of each high-level NI-IMAQ function. The functions are arranged according to the category of image acquisition procedure—snap, grab, ring and sequence functions, or miscellaneous functions—and then the order in which you will use them.
- Chapter 4, *Low-Level Functions*, contains a detailed explanation of each low-level NI-IMAQ function. The functions are arranged alphabetically under the type of image acquisition procedure—interface (board-specific) functions, session-specific functions, and miscellaneous functions.
- Appendix A, *Attributes and Constants*, describes the attributes and constants used by NI-IMAQ.
- *Appendix B, Status Codes*, describes the status codes returned by NI-IMAQ.
- Appendix C, *Customer Communication*, contains forms you can use to request help from National Instruments or to comment on our products and manuals.
- The *Glossary* contains an alphabetical list and description of terms used in this manual, including abbreviations, acronyms, metric prefixes, mnemonics, and symbols.
- The *Index* contains an alphabetical list of key terms and topics in this manual, including the page where you can find each one.

## Conventions Used in This Manual

---

The following conventions are used in this manual:

- » The » symbol leads you through nested menu items and dialog box options to a final action. The sequence **File»Page Setup»Options»Substitute Fonts** directs you to pull down the **File** menu, select the **Page Setup** item, select **Options**, and finally select the **Substitute Fonts** options from the last dialog box.
-  This icon to the left of bold italicized text denotes a note, which alerts you to important information.
- bold** Bold text denotes parameters, menus, menu items, or dialog box buttons or options.
- bold italic* Bold italic text denotes a note, caution, or warning.



<i>italic</i>	Italic text denotes emphasis, a cross reference, or an introduction to a key concept. This font also denotes text for which you supply the appropriate word or value, such as in Windows 3.x.
<i>italic monospace</i>	Italic text in this font denotes that you must supply the appropriate words or values in the place of these items.
monospace	Lowercase text in this font denotes text or characters that are to be literally input from the keyboard, sections of code, programming examples, and syntax examples. This font is also used for the proper names of disk drives, paths, directories, programs, subprograms, subroutines, device names, functions, variables, filenames, and extensions, and for statements and comments taken from program code.  The <i>Glossary</i> lists abbreviations, acronyms, metric prefixes, mnemonics, symbols, and terms.

## National Instruments Documentation

---

The *NI-IMAQ Function Reference Manual* is one piece of the documentation set for your IMAQ system. You could have any of several types of manuals, depending on the hardware and software in your system. Use the different types of manuals you have as follows:

- Your IMAQ hardware documentation—These documents have detailed information about the IMAQ hardware that plugs into or is connected to your computer. Use these manuals for hardware installation and configuration instructions, hardware specification information, and application hints.
- Software documentation—Examples of software documentation you might have are the LabVIEW and LabWindows™/CVI documentation, the IMAQ Vision documentation, and the NI-IMAQ documentation. After you have set up your hardware system, use either the application software (LabVIEW or LabWindows/CVI) or the NI-IMAQ documentation to help you write your application. If you have a large and complicated system, it is worthwhile to look through the software documentation before you configure your hardware.
- Accessory installation guide or manuals—If you are using accessory products, read the installation guides. They explain how to physically connect the relevant pieces of the system. Consult these guides when you are making your connections.

## Related Documentation

---

The following document contains information that you may find helpful as you read this manual:

- Your computer technical reference manual


## Customer Communication

---

National Instruments wants to receive your comments on our products and manuals. We are interested in the applications you develop with our products, and we want to help if you have problems with them. To make it easy for you to contact us, this manual contains comment and configuration forms for you to complete. These forms are in Appendix C, *Customer Communication*, at the end of this manual.

# Introduction

---

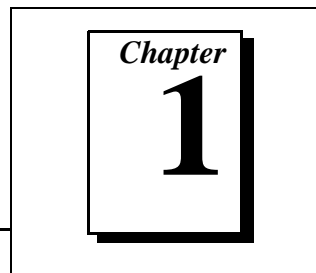

This chapter contains important information about how to apply the function descriptions in this manual to your programming language and environment.

## Status Codes

---

Every NI-IMAQ function is of the following form:

**rval** = Function\_Name (parameter 1, parameter 2, ... parameter  $n$ )

where  $n > 0$ . Each function returns a status code (**rval**) that indicates the success or failure of the function, as discussed in Appendix B, *Status Codes*.

## Variable Data Types

---

The NI-IMAQ application programming interface (API) is almost identical in Windows 95 and Windows NT, except for some of the parameter data types in each of the environments. LabWindows/CVI uses the same data types as Windows 95 and Windows NT. The following sections describe the notation used in those parameter tables and throughout the manual for variable data types.

## Primary Types

Table 1-1 shows the primary type names and their ranges.

**Table 1-1.** Primary Type Names

Type Name	Description	Range	Type
Int8	8-bit ASCII character	0 to 127, -128 to 0	char
uInt8	8-bit ASCII character	0 to 255	char
Int16	16-bit signed integer	-32,768 to 32,767	short
uInt16	16-bit unsigned integer	0 to 65,535	unsigned short
Int32	32-bit signed integer	-2,147,483,648 to 2,147,483,647	long
uInt32	32-bit unsigned integer	0 to 4,294,967,295	unsigned long

## Arrays

When a primary type is inside square brackets (for example, [Int16]) an array of the type named is required for that parameter.

## Programming Language Considerations

---

Apart from the data type differences, there are a few language-dependent considerations you need to be aware of when you use the NI-IMAQ API.



**Note:** *Be sure to include the NI-IMAQ function prototypes by including the appropriate NI-IMAQ header file in your source code.*

## LabVIEW

For information on how to use LabVIEW VIs with your IMAQ system, refer to the *NI-IMAQ VIs for G Reference Manual*.

## LabWindows/CVI

Inside the LabWindows/CVI environment, the NI-IMAQ functions appear in **Libraries»Image Acquisition**. Each function panel represents an NI-IMAQ function, which is displayed at the bottom of the panel.

Table 1-2 shows how the LabWindows/CVI function panel tree is organized, and the NI-IMAQ function name that corresponds to each function panel.

**Table 1-2.** The LabWindows/CVI Function Tree for Image Acquisition

LabWindows/CVI Function Panel	NI-IMAQ Function
<b>Generic Functions</b>	
Interface Open	imgInterfaceOpen
Session Open	imgSessionOpen
Close Object	imgClose
<b>High-Level Acquisition Functions</b>	
Snap	imgSnap
Snap Area	imgSnapArea
Grab Setup	imgGrabSetup
Grab	imgGrab
Grab Area	imgGrabArea
Ring Setup	imgRingSetup
Sequence Setup	imgSequenceSetup
Session Start Acquisition	imgSessionStartAcquisition
Session Stop Acquisition	imgSessionStopAcquisition

Table 1-2. The LabWindows/CVI Function Tree for Image Acquisition (Continued)

LabWindows/CVI Function Panel	NI-IMAQ Function
<b>High-Level</b>	
<b>Miscellaneous Functions</b>	
Session Status	<code>imgSessionStatus</code>
Session Set ROI	<code>imgSessionSetROI</code>
Session Get ROI	<code>imgSessionGetROI</code>
Session Get Buffer Size	<code>imgSessionGetBufferSize</code>
<b>Low-Level</b>	
<b>Interface Functions</b>	
Interface Query Names	<code>imgInterfaceQueryNames</code>
Interface Reset	<code>imgInterfaceReset</code>
Interface Lock	<code>imgInterfaceLock</code>
Interface Unlock	<code>imgInterfaceUnlock</code>
<b>Low-Level</b>	
<b>Session Functions</b>	
Session Configure	<code>imgSessionConfigure</code>
Session Acquire	<code>imgSessionAcquire</code>
Session Wait	<code>imgSessionWait</code>
Session Wait Vertical Blank	<code>imgSessionWaitVblank</code>
Session Abort	<code>imgSessionAbort</code>
Session Examine Buffer	<code>imgSessionExamineBuffer</code>
Session Release Buffer	<code>imgSessionReleaseBuffer</code>
Session Save Buffer	<code>imgSessionSaveBuffer</code>
Session Copy Buffer	<code>imgSessionCopyBuffer</code>

**Table 1-2.** The LabWindows/CVI Function Tree for Image Acquisition (Continued)

<b>LabWindows/CVI Function Panel</b>	<b>NI-IMAQ Function</b>
Session Clear Buffer	imgSessionClearBuffer
Session Copy Area	imgSessionCopyArea
Session Set Trigger	imgSessionSetTrigger
Session Clear Triggers	imgSessionClearTriggers
Session Get Trigger Status	imgSessionGetTriggerStatus
Session Set RTSI Map	imgSessionSetRTSImap
Session Wait Acquisition Done	imgSessionWait
<b>Low-Level Miscellaneous Functions</b>	
Set Attribute	imgSetAttribute
Get Attribute	imgGetAttribute
Create Buffer List	imgCreateBufList
Dispose Buffer List	imgDisposeBufList
Lock Buffer List Memory	imgMemLock
Unlock Buffer List Memory	imgMemUnlock
Create Buffer	imgCreateBuffer
Dispose Buffer	imgDisposeBuffer
Set Buffer Element	imgSetBufferElement
Get Buffer Element	imgGetBufferElement
Camera Action	imgCameraAction
Show Error	imgShowError
Plot Buffer to Window	imgPlot

## Other Programming Environments

For information on using other programming languages, such as Microsoft Visual C++, with your IMAQ system, refer to the *NI-IMAQ User Manual*.

## Code Examples

You can find code examples in the same directory in which you installed the NI-IMAQ driver software. You can find source code common to all environments in the `Samples` default subfolder.



# Geometric Definitions

Here are a few definitions you should be familiar with when performing image acquisition tasks:

- An *acquisition window* is the image size specific to a video standard or camera resolution. The default is 640 by 480 pixels. The window's starting position (0,0) varies according to camera.
- A *region of interest* (ROI) is a hardware-programmable rectangular portion of the acquisition window. This is a specific area of the image to acquire.
- An *area* is a rectangular portion of an ROI that software defines and controls. Figure 1-1 illustrates the geometric relationship of these terms.

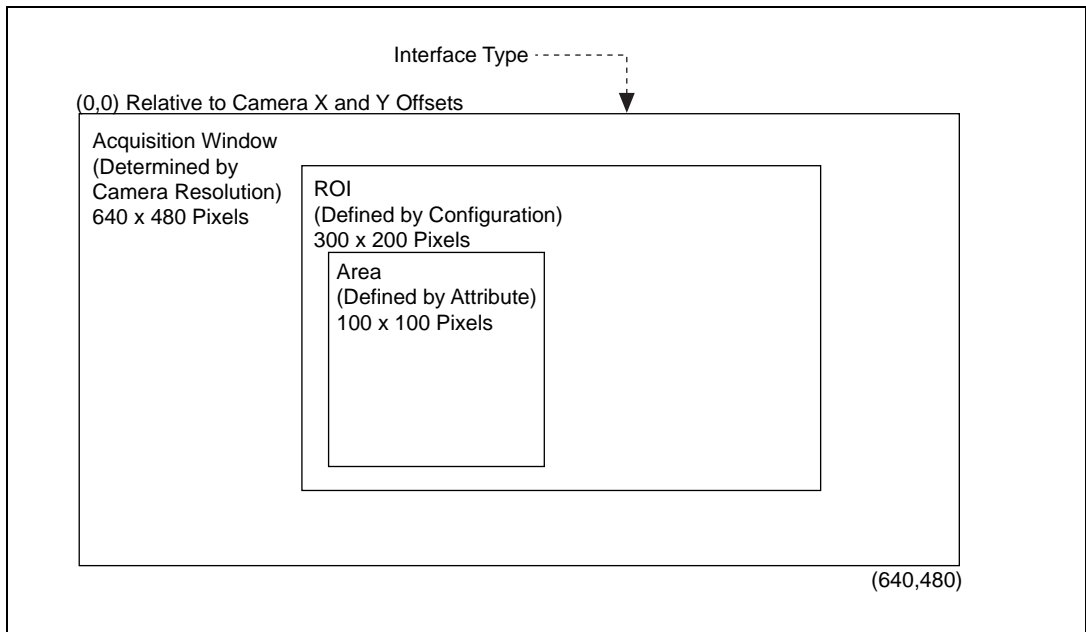
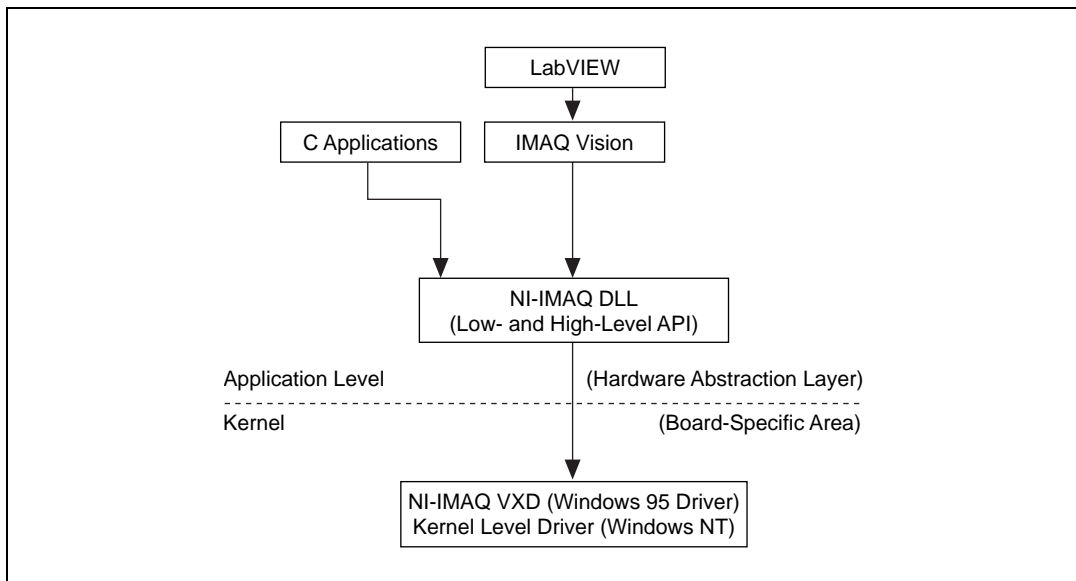


Figure 1-1. Geometric Relationship

# Architecture

A block diagram of the NI-IMAQ architecture shown in Figure 1-2 illustrates the low- and mid-level architecture for IMAQ devices.

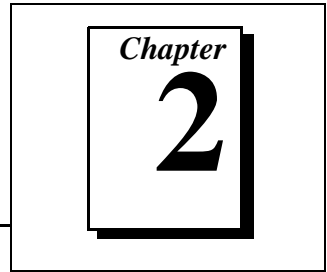


**Figure 1-2.** NI-IMAQ Architecture

The architecture uses a *hardware abstraction layer*, which separates software API capabilities, such as general acquisition and control functions, from hardware-specific information. This layer lets you use new IMAQ hardware without having to recompile your applications.

# Generic Functions

---



This chapter contains a detailed explanation of each generic NI-IMAQ function. The functions are arranged according to the order in which you will use them.

Generic functions include `imgInterfaceOpen`, `imgSessionOpen`, and `imgClose`. You will use these functions in combination with both high- and low-level functions. These functions set up your interface and session, and close both when you are finished with your application.

## imgInterfaceOpen

---

### Format

```
rval = imgInterfaceOpen(Int8* interface_name, INTERFACE_ID* pifid)
```

### Purpose

Opens by name an interface as specified in the NI-IMAQ configuration utility, IMAQconf. If it is successful, this function returns an INTERFACE\_ID.

### Parameters

Name	Type	Direction	Description
<b>interface_name</b>	Int8*	input	null terminates name of interface to open
<b>pifid</b>	INTERFACE_ID*	output	pointer to INTERFACE_ID type variable
<b>rval</b>	Int32	output	status

### Parameter Discussion

**interface\_name** needs a null terminated string that is the name of the interface to open `img0`, `img1`, or `img2`.

**pifid** passes a pointer to an area of memory reserved as an INTERFACE\_ID type variable. If the function succeeds, the variable will contain a valid INTERFACE\_ID that can be used in subsequent functions.

**rval** returns the following status codes:

IMG_ERR_BINT	bad interface
IMG_ERR_GOOD	no error occurred
IMG_ERR_OVRN	too many interfaces open
IMG_ERR_PAR1	null pointer
IMG_ERR_PAR2	null pointer



**Note:** *You can use `imgInterfaceQueryNames` to retrieve a valid list of interface names.*

## imgSessionOpen

---

### Format

```
rval = imgSessionOpen(INTERFACE_ID ifid, SESSION_ID* psid)
```

### Purpose

Opens a session of an unknown type and returns a session ID. This function inherits all data associated with the given interface.

### Parameters

Name	Type	Direction	Description
<b>ifid</b>	INTERFACE_ID	input	interface ID to open session
<b>psid</b>	SESSION_ID*	output	pointer to a session ID
<b>rval</b>	Int32	output	status

### Parameter Discussion

**ifid** is a valid INTERFACE\_ID type variable.

**psid** passes a pointer to an area of memory reserved for a SESSION\_ID type variable. If the function succeeds, the variable will contain a valid SESSION\_ID that can be used in subsequent functions.

**rval** returns the following status codes:

IMG_ERR_BCMF	bad camera file (check syntax)
IMG_ERR_GOOD	no error occurred
IMG_ERR_OVRN	too many interfaces open
IMG_ERR_PAR1	invalid INTERFACE_ID
IMG_ERR_PAR2	null pointer

## imgClose

---

### Format

```
rval = imgClose(uInt32 void_id, uInt32 freeResources)
```

### Purpose

Closes a session or interface and unlocks and releases all buffers associated with the data type.

### Parameters

Name	Type	Direction	Description
<b>void_id</b>	uInt32	input	session or interface ID
<b>freeResources</b>	uInt32	input	cleanup flag
<b>rval</b>	Int32	output	status

### Parameter Discussion

**void\_id** is a valid SESSION\_ID or INTERFACE\_ID type variable.

**freeResources** is the cleanup flag. If **freeResources** is TRUE, it indicates that all buffers and buffer lists associated with the session are to be released. If **freeResources** is FALSE, it indicates no buffer cleanup should be performed. If **void\_id** is an INTERFACE\_ID and **freeResources** is TRUE, all sessions associated with that interface will be closed.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid INTERFACE_ID or SESSION_ID



**Note:** *Closing an interface closes all sessions attached to that interface.*

# High-Level Functions

---

This chapter contains a detailed explanation of each high-level NI-IMAQ function. The functions are arranged according to the category of image acquisition procedure—snap, grab, ring and sequence functions, or miscellaneous functions—and then the order in which you will use them.

Using high-level functions, you can easily perform such functions as acquiring images in single-shot (snap) or continuous (ring) mode without advanced knowledge of the NI-IMAQ low-level function calls and image acquisition details.

## Snap Functions

---

Snap functions include `imgSnap` and `imgSnapArea`. You can use these functions to acquire a single image after opening a valid session, using `imgInterfaceOpen` and `imgSessionOpen` to obtain a valid `SESSION_ID`.

## imgSnap

---

### Format

```
rval = imgSnap(SESSION_ID sid, void* bufAddr)
```

### Purpose

Performs a single frame or field acquisition. This function uses the following attributes to perform an image acquisition:

```

IMG_ATTR_ACQWINDOW_LEFT
IMG_ATTR_ACQWINDOW_WIDTH
IMG_ATTR_ACQWINDOW_TOP
IMG_ATTR_ACQWINDOW_HEIGHT
IMG_ATTR_ROI_LEFT
IMG_ATTR_ROI_TOP
IMG_ATTR_ROI_HEIGHT
IMG_ATTR_ROI_WIDTH
IMG_ATTR_ROWBYTES
IMG_ATTR_YOFF_BUFFER

```

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>bufAddr</b>	void*	input	pointer to the buffer address
<b>rval</b>	Int32	output	no error

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**bufAddr** is a pointer to the buffer address.

**rval** returns IMG\_ERR\_GOOD if no error occurs.



## imgSnapArea

---

### Format

```
rval = imgSnapArea(SESSION_ID sid, void* bufAddr, uInt32 top, uInt32 left, uInt32 height,
                   uInt32 width, uInt32 rowBytes)
```

### Purpose

Performs an area-specific frame or field acquisition. This function does not modify any attributes.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>bufAddr</b>	void*	input	pointer to the buffer address
<b>top</b>	uInt32	input	top ordinate of the first pixel transferred
<b>left</b>	uInt32	input	left ordinate of the first pixel transferred
<b>height</b>	uInt32	input	height of rectangle to transfer
<b>width</b>	uInt32	input	width of the rectangle to transfer
<b>rowBytes</b>	uInt32	input	used in calculating the address of the next line
<b>rval</b>	Int32	output	status

## imgSnapArea

---

(Continued)

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**bufAddr** points to an area of memory in which to store the image. If **bufAddr** points to a NULL pointer, this call will allocate an appropriate size buffer and return the buffer address in the location specified by **bufAddr**.

**top** indicates the top vertical offset of the first pixel transferred.

**left** indicates the left horizontal offset of the first pixel transferred.

**height** indicates the height of area to transfer.

**width** indicates the width of the area to transfer.

**rowBytes** indicates the exact byte-width of the horizontal line to acquire. This parameter specifies the number of bytes to add to the line pointer for the next scan line. This value must be greater than or equal to the width parameter. Passing a zero for this value causes it to be ignored.

**rval** returns IMG\_ERR\_GOOD if no error occurs.

# Grab Functions

---

Grab functions include `imgGrabSetup`, `imgGrab`, and `imgGrabArea`. You can use the grab functions to perform a continuous acquisition.

To use the grab functions, you must first call `imgGrabSetup` to configure the session for grabbing and optionally start the acquisition process. If you do not start the acquisition via `imgGrabSetup`, you must start it by calling `imgSessionStartAcquisition` prior to calling the `imgGrab` and `imgGrabArea` functions. After the acquisition has started, you obtain an image copy by calling the `imgGrab` and `imgGrabArea`. To stop the acquisition, call `imgSessionStopAcquisition`.

## imgGrabSetup

---

### Format

**rval** = imgGrabSetup(**SESSION\_ID** sid, **uInt32** startNow)

### Purpose

Configures and optionally starts a continuous acquisition. This function uses the following attributes to perform an image acquisition:

IMG\_ATTR\_ACQWINDOW\_LEFT  
 IMG\_ATTR\_ACQWINDOW\_WIDTH  
 IMG\_ATTR\_ACQWINDOW\_TOP  
 IMG\_ATTR\_ACQWINDOW\_HEIGHT  
 IMG\_ATTR\_ROI\_LEFT  
 IMG\_ATTR\_ROI\_TOP  
 IMG\_ATTR\_ROI\_HEIGHT  
 IMG\_ATTR\_ROI\_WIDTH  
 IMG\_ATTR\_ROWBYTES  
 IMG\_ATTR\_YOFF\_BUFFER

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>startNow</b>	uInt32	input	start acquisition after setup completes
<b>rval</b>	Int32	output	status

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**startNow** starts a grab acquisition after setup has been completed. A non-zero value here specifies that the continuous requisition should start immediately. If the value is zero, start the grab acquisition with `imgSessionStartAcquisition`.

**rval** returns IMG\_ERR\_GOOD if no error occurs.

# imgGrab

---

## Format

**rval** = imgGrab(**SESSION\_ID** sid, void\* bufAddr, uInt32 syncOnVB)

## Purpose

Performs a transfer from a continuous acquisition session. Call this function only after calling `imgGrabSetup`. This function uses the following attributes:

IMG\_ATTR\_ROI\_LEFT  
 IMG\_ATTR\_ROI\_TOP  
 IMG\_ATTR\_ROI\_HEIGHT  
 IMG\_ATTR\_ROI\_WIDTH  
 IMG\_ATTR\_ROWBYTES  
 IMG\_ATTR\_YOFF\_BUFFER

## Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>bufAddr</b>	void*	input	pointer to the buffer address
<b>syncOnVB</b>	uInt32	input	vertical blank flag
<b>rval</b>	Int32	output	status

## Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**bufAddr** is a pointer to the buffer address. If **bufAddr** points to a NULL pointer, this call will allocate an appropriate size buffer and return the buffer address in the location specified by **bufAddr**.

**syncOnVB** indicates a wait for a vertical blank. If this parameter is TRUE, the transfer will be done according to and using the video synchronization. Using this option avoids mixing two different time bases within the same video field. If **syncOnVB** is FALSE, the transfer is done without considering the video synchronization.

**rval** returns IMG\_ERR\_GOOD if no error occurs.

## imgGrabArea

---

### Format

```
rval = imgGrabArea(SESSION_ID sid, void* bufAddr, uInt32 syncOnVB, uInt32 top,
                  uInt32 left, uInt32 height, uInt32 width, uInt32 rowBytes)
```

### Purpose

Performs a transfer from a continuous acquisition using the given parameters. This function does not modify any attributes. Call this function only after calling `imgGrabSetup`.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>bufAddr</b>	void*	input	pointer to the buffer address
<b>syncOnVB</b>	uInt32	input	vertical blank flag
<b>top</b>	uInt32	input	top ordinate of the first pixel transferred
<b>left</b>	uInt32	input	left ordinate of the first pixel transferred
<b>height</b>	uInt32	input	height of rectangle to transfer
<b>width</b>	uInt32	input	width of the rectangle to transfer
<b>rowBytes</b>	uInt32	input	used in calculating the address of the next line
<b>rval</b>	Int32	output	status

## imgGrabArea

---

(Continued)

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**bufAddr** points to an area of memory in which to store the image. If **bufAddr** points to a NULL pointer, this call will allocate an appropriate size buffer and return the buffer address in the location specified by **bufAddr**.

**syncOnVB** indicates a wait for a vertical blank. If **syncOnVB** is TRUE, the transfer will be done according to and using the video synchronization. Using this option avoids mixing two different time bases within the same video field. If **syncOnVB** is FALSE, the transfer is done without considering the video synchronization.

**top** indicates the top vertical offset of the first pixel transferred.

**left** indicates the left horizontal offset of the first pixel transferred.

**height** indicates the height of area to transfer.

**width** indicates the width of the area to transfer.

**rowBytes** indicates the exact byte-width of the horizontal line to acquire. This parameter specifies the number of bytes to add to the line pointer for the next scan line. This value must be greater than or equal to the width parameter. Passing a zero for this value causes it to be ignored.

**rval** returns IMG\_ERR\_GOOD if no error occurs.

## Ring and Sequence Functions

---

Ring and sequence functions include `imgRingSetup`, `imgSequenceSetup`, `imgSessionStartAcquisition`, and `imgSessionStopAcquisition`. You can use these functions to perform a continuous acquisition that loops or stops after a certain number of images have been captured.

To use the ring and sequence functions, you must first call `imgRingSetup` or `imgSequenceSetup` to configure the session and optionally start the acquisition process. If you do not start the acquisition via `imgRingSetup` or `imgSequenceSetup`, you must call `imgSessionStartAcquisition` to start it.



## imgRingSetup

---

### Format

```
rval = imgRingSetup(SESSION_ID sid, uInt32 numberBuffer, void* bufferList,
                   uInt32 skipCount, uInt32 startNow)
```

### Purpose

Prepares a session for acquiring continuously and looping into buffer list.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>numberBuffer</b>	uInt32	input	number of buffers used in the ring session
<b>bufferList[]</b>	void*	input	array of buffer pointers
<b>skipCount</b>	uInt32	input	number of frames or field to skip before each acquisition
<b>startNow</b>	uInt32	input	start acquisition after setup completes
<b>rval</b>	Int32	output	status

## imgRingSetup

---

(Continued)

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**numberBuffer** indicates the number of buffers in the buffer list.

**bufferList[]** is an array of buffer pointers. For each element in the buffer list that is initialized to NULL, **bufferList** will allocate a buffer and return this buffer address in the array element. If **bufferList[0]** contains a NULL pointer, this call allocates the number of buffers required and returns the buffer addresses in **bufferList[]**.

**skipCount** indicates the number of frames or field to skip before each acquisition. This number is the same for all acquisitions.

**startNow** starts a grab acquisition after setup has been completed. A non-zero value for **startNow** specifies that the continuous acquisition should start immediately. If **startNow** is zero, start the grab acquisition with `imgSessionStartAcquisition`.

**rval** returns IMG\_ERR\_GOOD if no error occurs.

## imgSequenceSetup

---

### Format

```
rval = imgSequenceSetup(SESSION_ID sid, uInt32 numberBuffer, void* bufferList[],
                        uInt32 skipCount[], uInt32 startnow, uInt32 async)
```

### Purpose

Prepares a session for acquiring a full sequence into the buffer list.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>numberBuffer</b>	uInt32	input	number of buffers used in the ring session
<b>bufferList[]</b>	void*	input	array of buffer pointers
<b>skipCount[]</b>	uInt32	input	array containing the number of frames or field to skip before each acquisition
<b>startNow</b>	uInt32	input	start acquisition after setup completes
<b>async</b>	uInt32	input	toggles between synchronous and asynchronous acquisition
<b>rval</b>	Int32	output	status

## imgSequenceSetup

---

(Continued)

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**numberBuffer** indicates the number of buffers in the buflist.

**bufferList[]** is an array of buffer pointers. For each element in the buffer list that is initialized to NULL, **bufferList[]** will allocate a buffer and return this buffer address in the array element.

**skipCount[]** is an array containing the number of frames or fields to skip before each acquisition.

**startNow** starts a grab acquisition after setup has been completed. A non-zero value for **startNow** specifies that the continuous acquisition should start immediately. If **startNow** is zero, start the grab acquisition with `imgSessionStartAcquisition`.

**async** toggles between asynchronous and synchronous acquisition. If **async** is non-zero, it indicates an asynchronous acquisition. If **async** is zero, it indicates a synchronous acquisition. This parameter is only valid if the **startNow** parameter is non-zero.

**rval** returns IMG\_ERR\_GOOD if no error occurs.

## imgSessionStartAcquisition

---

### Format

**rval** = imgSessionStartAcquisition(**SESSION\_ID** **sid**)

### Purpose

Starts a session acquisition identified by **sid**. Use this function with grab, ring, and sequence functions.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>rval</b>	Int32	output	status

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**rval** returns IMG\_ERR\_GOOD if no error occurs.

## imgSessionStopAcquisition

---

### Format

**rval** = imgSessionStopAcquisition(**SESSION\_ID** **sid**)

### Purpose

Stops a session acquisition identified by **sid**. Use this function with grab, ring, and sequence functions.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>rval</b>	Int32	output	status

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**rval** returns IMG\_ERR\_GOOD if no error occurs.

# Miscellaneous Functions

---

Miscellaneous functions include `imgSessionStatus`, `imgSessionSetROI`, `imgSessionGetROI`, and `imgSessionGetBufferSize`.

These functions obtain status information on a session, get and set a region of interest, and get the buffer size required for a session based on current attributes.

## imgSessionStatus

---

### Format

```
rval = imgSessionStatus(SESSION_ID sid, uInt32* status, uInt32* bufferNumber)
```

### Purpose

Gets the current session status.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>status</b>	uInt32*	input	current session status
<b>bufferNumber</b>	uInt32*	input	pointer to an area of memory reserved for the current buffer number
<b>rval</b>	Int32	output	status

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**status** indicates the current session status. If **status** is non-zero, the session currently is acquiring. If **status** is zero, the session is idle. This is the value returned by IMG\_ATTR\_ACQ\_IN\_PROGRESS in imgGetAttribute.

**bufferNumber** is a pointer to an area of memory reserved for the current buffer number.

**rval** returns IMG\_ERR\_GOOD if no error occurs.



## imgSessionSetROI

---

### Format

```
rval = imgSessionSetROI(SESSION_ID sid, uInt32 top, uInt32 left, uInt32 height,
                        uInt32 width)
```

### Purpose

Sets acquisition origin and dimension. You would typically make this call after creating a session and before calling the `imgSessionStartAcquisition`.

This function modifies the following attributes:

```
IMG_ATTR_ROI_TOP
IMG_ATTR_ROI_LEFT
IMG_ATTR_ROI_HEIGHT
IMG_ATTR_ROI_WIDTH
```

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>top</b>	uInt32	output	top ordinate of the first pixel transferred
<b>left</b>	uInt32	output	left ordinate of the first pixel transferred
<b>height</b>	uInt32	output	height of rectangle to transfer
<b>width</b>	uInt32	output	width of the rectangle to transfer
<b>rval</b>	Int32	output	status

## imgSessionSetROI

---

(Continued)

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**top** indicates the top vertical offset of the first pixel transferred.

**left** indicates the left horizontal offset of the first pixel transferred.

**height** indicates the height of area to transfer.

**width** indicates the width of the area to transfer.

**rval** returns IMG\_ERR\_GOOD if no error occurs.

## imgSessionGetROI

---

### Format

```
rval = imgSessionGetROI(SESSION_ID sid, uInt32* top, uInt32* left, uInt32* height,
                        uInt32* width)
```

### Purpose

Gets acquisition origin and dimensions.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>top</b>	uInt32*	output	current value of IMG_ATTR_ROI_TOP
<b>left</b>	uInt32*	output	current value of IMG_ATTR_ROI_LEFT
<b>height</b>	uInt32*	output	current value of IMG_ATTR_ROI_HEIGHT
<b>width</b>	uInt32*	output	current value of IMG_ATTR_ROI_WIDTH
<b>rval</b>	Int32	output	status

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**top** indicates the top vertical offset of the first pixel transferred.

**left** indicates the left horizontal offset of the first pixel transferred.

**height** indicates the height of area to transfer.

**width** indicates the width of the area to transfer.

**rval** returns IMG\_ERR\_GOOD if no error occurs.

## imgSessionGetBufferSize

---

### Format

**rval** = imgSessionGetBufferSize(**SESSION\_ID** sid, **uInt32\*** sizeNeeded)

### Purpose

Gets the minimum buffer size needed for frame buffer allocation. This function calculates the buffer size by using the following attributes:

IMG\_ATTR\_ROI\_HEIGHT  
 IMG\_ATTR\_ROWBYTES  
 IMG\_ATTR\_YOFF\_BUFFER

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>sizeNeeded</b>	uInt32*	output	buffer size
<b>rval</b>	Int32	output	status

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**sizeNeeded** returns the buffer size needed for an image based on the attributes listed above.

**rval** returns IMG\_ERR\_GOOD if no error occurs.

# Low-Level Functions

---

This chapter contains a detailed explanation of each low-level NI-IMAQ function. The functions are arranged alphabetically under the type of image acquisition procedure—interface (board-specific) functions, session-specific functions, and miscellaneous functions.

Low-level functions let you perform in-depth tasks that require a more advanced understanding of the IMAQ PCI-1408 and image acquisition, such as directly controlling video parameters like gain and offset level or locking down a buffer during a continuous acquisition.

## Interface Functions

---

Interface functions include `imgInterfaceLock`, `imgInterfaceQueryNames`, `imgInterfaceReset`, and `imgInterfaceUnlock`.

You can use these functions to perform operations specific to an interface. All interface functions require a valid `INTERFACE_ID`.

Interface functions operate on a board-wide basis. When you make a call to an interface function, it will affect all sessions connected to that interface in all processes. Interface function changes are global and must be done with care.

## imgInterfaceLock

---

### Format

**rval** = imgInterfaceLock(**INTERFACE\_ID ifid**)

### Purpose

Locks a logical interface so that another process cannot use it. To unlock an interface, call `imgInterfaceUnlock`. Each call to `imgInterfaceLock` causes the lock count associated with this interface to be incremented by one.

### Parameters

Name	Type	Direction	Description
<b>ifid</b>	INTERFACE_ID	input	interface ID
<b>rval</b>	Int32	output	status

### Parameter Discussion

**ifid** is a valid INTERFACE\_ID type variable.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_ILCK	interface locked by another process
IMG_ERR_PAR1	bad INTERFACE_ID
IMG_WRN_ILCK	warning, interface still locked

## imgInterfaceQueryNames

---

### Format

**rval** = imgInterfaceQueryNames(**uInt32 index**, **Int8\* queryName**)

### Purpose

Returns the interface name identified by the index parameter. To obtain a list of all the available interface names, call this function repeatedly until the function returns an error. Make the first call with the **index** parameter initialized to zero. Each successive call increments the index parameter by one.

### Parameters

Name	Type	Direction	Description
<b>index</b>	uInt32	input	interface number to obtain
<b>queryNames</b>	Int8*	input	pointer to an array of strings
<b>rval</b>	Int32	output	status

### Parameter Discussion

**index** is the interface number to obtain.

**queryNames** is a pointer to an array in memory large enough to hold the interface name returned (INTERFACE\_NAME\_SIZE).

**rval** returns the following status codes:

IMG_ERR_EMEM	not enough memory to perform the operation
IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	null pointer

## imgInterfaceReset

---

### Format

```
rval = imgInterfaceReset(INTERFACE_ID ifid)
```

### Purpose

Performs a hardware reset on the interface type and returns a status, either good or bad. This function sets the hardware associated with the interface to its default state and resets the onboard DMA controller.

### Parameters

Name	Type	Direction	Description
<b>ifid</b>	INTERFACE_ID	output	interface ID
<b>rval</b>	Int32	output	status

### Parameter Discussion

**ifid** is a valid INTERFACE\_ID type variable.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	bad INTERFACE_ID



## imgInterfaceUnlock

---

### Format

**rval** = imgInterfaceUnlock(**INTERFACE\_ID ifid**)

### Purpose

Unlocks a logical interface, allowing another process to use it. Each call to `imgInterfaceUnlock` causes the lock count associated with this interface to be decremented by one. If the interface is still locked after this call is made, the function will return the warning, `IMG_WRN_ILCK`.

### Parameters

Name	Type	Direction	Description
<b>ifid</b>	INTERFACE_ID	input	interface ID
<b>rval</b>	Int32	output	status

### Parameter Discussion

**ifid** is a valid `INTERFACE_ID` type variable.

**rval** returns the following status codes:

<code>IMG_ERR_GOOD</code>	no error occurred
<code>IMG_ERR_ILCK</code>	interface locked by another process
<code>IMG_ERR_PAR1</code>	bad <code>INTERFACE_ID</code>
<code>IMG_WRN_ILCK</code>	warning, interface still locked

## Session Functions

---

Session functions include `imgSessionAbort`, `imgSessionAcquire`, `imgSessionClearBuffer`, `imgSessionClearTriggers`, `imgSessionConfigure`, `imgSessionCopyArea`, `imgSessionCopyBuffer`, `imgSessionExamineBuffer`, `imgSessionGetTriggerStatus`, `imgSessionReleaseBuffer`, `imgSessionSaveBuffer`, `imgSessionSetRTSImap`, `imgSessionSetTrigger`, `imgSessionWait`, and `imgSessionWaitVblank`.

You can use the session functions to perform operations specific to a session. All session functions require a valid `SESSION_ID`.

Session functions operate on a channel basis. *Channels* are a physical connection to a camera. When you make a call to a session function, it affects the camera and the channel associated with your session. If you change a camera-related attribute on a session, you will change the camera setting for *all* sessions, whether in your process or not.

Since you must reprogram the hardware before you can lock the video source, your camera settings become everybody's camera settings for that interface. Be sure you have exclusive control of the interface (if sharing the interface) and channel before changing any camera-specific attributes in your session.

The NI-IMAQ driver software knows only about buffer lists, not sessions. You can have multiple sessions open on the same interface with the same or different buffer lists. If two sessions have the same buffer list, they will have the same buffers. In this case, the driver locks into memory a single instance of the buffers contained in the buffer list.

Calling `imgSessionConfigure` essentially calculates the permanent storage of your buffers for any figure acquisitions. No matter how you set up your buffers, after calling `imgSessionConfigure`, there can be only one set of data in the driver associated with that buffer; buffer storage areas in the driver are not allocated on a per process basis. If two sessions with the same buffer list both call `imgSessionConfigure`, the latter call defines the actual configuration for both sessions. If you wish to have multiple sessions open at one time, use different buffer lists for different sessions.

## imgSessionAbort

---

### Format

```
rval = imgSessionAbort(SESSION_ID sid, uInt32* buf_num)
```

### Purpose

Stops asynchronous acquisition or synchronous continuous acquisition immediately.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>buf_num</b>	uInt32*	output	pointer to the last valid buffer number
<b>rval</b>	Int32	output	status

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**buf\_num** points to an area of memory to return the last valid buffer number.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid SESSION_ID
IMG_ERR_PAR2	null pointer

## imgSessionAcquire

---

### Format

```
rval = imgSessionAcquire(SESSION_ID sid, uInt32 async, IMG_CALLBACK callback)
```

### Purpose

Starts acquisition synchronously or asynchronously to the frame buffers in the associated session buffer list.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>async</b>	uInt32	input	asynchronous flag
<b>callback</b>	IMG_CALLBACK	input	user completion routine
<b>rval</b>	Int32	output	status

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**async** is the asynchronous flag. If **async** is non-zero, it indicates an asynchronous acquisition. If **async** is zero, it indicates a synchronous acquisition.

**callback** is a pointer to a user completion routine. This routine is called at the completion of the acquisition.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid SESSION_ID

## imgSessionClearBuffer

---

### Format

**rval** = imgSessionClearBuffer(**SESSION\_ID sid**, **uInt32 bufElement**, **char pixel\_value**)

### Purpose

Clears a session's image data to the specified pixel value.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>bufElement</b>	uInt32	input	element number of the buffer to clear
<b>pixel_value</b>	char	input	pixel value to set data to
<b>rval</b>	Int32	output	status

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**bufElement** indicates a valid buffer list element number.

**pixel\_value** indicates a pixel value to set all the buffer data with.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_NCFG	invalid action, no buffers configured for session
IMG_ERR_ZBUF	zero buffer size, no bytes filled
IMG_ERR_PAR1	invalid SESSION_ID
IMG_ERR_PAR2	buffer element number out of range

## imgSessionClearTriggers

---

### Format

**rval** = imgSessionClearTriggers(**SESSION\_ID** sid)

### Purpose

Disables all triggers and trigger modes on the corresponding session.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>rval</b>	Int32	output	status

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid SESSION_ID

## imgSessionConfigure

---

### Format

**rval** = imgSessionConfigure(**SESSION\_ID** sid, **BUFLIST\_ID** bid)

### Purpose

Specifies the buffer list to use with this session. A valid BUFLIST\_ID must be passed. Upon successful completion of this call, you can then call imgSessionAcquire.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>bid</b>	BUFLIST_ID	input	a valid BUFLIST_ID
<b>rval</b>	Int32	output	status

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**bid** is a valid BUFLIST\_ID type variable.

**rval** returns the following status codes:

IMG_ERR_AIOP	cannot perform request, acquisition in progress
IMG_ERR_ELCK	cannot lock buffers down, no more memory
IMG_ERR_GOOD	no error occurred
IMG_ERR_NCAM	no camera defined for this channel
IMG_ERR_PAR1	invalid SESSION_ID
IMG_ERR_PAR2	invalid BUFLIST_ID

## imgSessionCopyArea

---

### Format

```
rval = imgSessionCopyArea(SESSION_ID sid, uInt32 bufElement, uInt32 top, uInt32 left,
                          uInt32 width, uInt32 height, Ptr buffer, uInt32 rowBytes,
                          uInt32 vsync)
```

### Purpose

Copies an area of a session's buffer to a user-specified buffer.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>bufElement</b>	uInt32	input	element number of buffer to copy
<b>top</b>	uInt32	input	pixel value to set data to top vertical coordinate of area
<b>left</b>	uInt32	input	left horizontal coordinate of area
<b>height</b>	uInt32	input	height of area
<b>width</b>	uInt32	input	width of area
<b>buffer</b>	Ptr	input	pointer to user image memory
<b>rowBytes</b>	uInt32	input	used in calculating the address of the next line
<b>vsync</b>	uInt32	input	wait until the next vertical blank to perform the copy
<b>rval</b>	Int32	output	status



## imgSessionCopyArea

---

(Continued)

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**bufElement** indicates a valid buffer list element number of the buffer to copy from.

**top** indicates the top vertical coordinate of the area to copy.

**left** indicates the left horizontal coordinate.

**height** indicates the height of the area to copy.

**width** indicates the width of the area to copy.

**buffer** indicates an address to a buffer that is large enough to hold the data.

**rowBytes** indicates the exact byte-width of the horizontal line to acquire. This parameter specifies the number of bytes to add to the line pointer for the next scan line. This value must be greater than or equal to the width parameter. Passing a zero for this value causes it to be ignored.

**vsync** controls when copying occurs. If **vsync** is TRUE, imgSessionCopyArea waits until the next vertical blank to perform the copy. If **vsync** is FALSE, imgSessionCopyArea does not wait.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid SESSION_ID
IMG_ERR_PAR2	invalid buffer element number
IMG_ERR_PAR3	invalid coordinate
IMG_ERR_PAR4	invalid coordinate
IMG_ERR_PAR5	invalid height
IMG_ERR_PAR6	invalid width
IMG_ERR_PAR7	null pointer
IMG_ERR_PAR8	invalid rowBytes

## imgSessionCopyBuffer

---

### Format

```
rval = imgSessionCopyBuffer(SESSION_ID sid, uInt32 bufElement, char* buffer,
                             uInt32 vsync)
```

### Purpose

Copies a session's image data to a user buffer format. If the board is capable, a DMA transfer is initiated to the host memory.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>bufElement</b>	uInt32	input	element number of buffer to copy
<b>buffer</b>	char*	input	pointer to user buffer
<b>vsync</b>	uInt32	input	wait until the next vertical blank to perform
<b>rval</b>	Int32	output	status

## imgSessionCopyBuffer

---

(Continued)

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**bufElement** indicates a buffer list element number that corresponds to the buffer you want to copy.

**buffer** points to an area of memory to receive the copy.

**vsync** controls a session's image data transfer. If **vsync** is TRUE, `imgSessionCopyBuffer` waits until a host vertical blank occurs before transferring. If **vsync** is FALSE, `imgSessionCopyBuffer` does not wait for a host vertical blank.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid SESSION_ID
IMG_ERR_PAR2	invalid buffer element number
IMG_ERR_PAR3	null pointer

## imgSessionExamineBuffer

---

### Format

```
rval = imgSessionExamineBuffer(SESSION_ID sid, uInt32 whichBuffer, uInt32 holdBuffer,
                               uInt32 waitANew, uInt32* elementNumber,
                               void* bufferAddrPtr)
```

### Purpose

Extracts a buffer from a live acquisition. This function lets you lock a buffer out of a continuous loop sequence for processing when you are using a ring (continuous) sequence.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>whichBuffer</b>	uInt32	input	identifies which buffer to get
<b>holdBuffer</b>	uInt32	input	controls the acquisition process
<b>waitANew</b>	uInt32	input	vertical blank flag
<b>elementNumber</b>	uInt32*	input	element number of the returned buffer
<b>bufferAddrPtr</b>	void*	input	a pointer to an address to store the address of the locked buffer
<b>rval</b>	Int32	output	status

## imgSessionExamineBuffer

(Continued)

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**whichBuffer** identifies which buffer to get. The available options are:

IMG_OLDEST_BUFFER	get the oldest buffer that has been acquired
IMG_LAST_BUFFER	get the latest buffer that has been acquired
IMG_CURRENT_BUFFER	wait for the end of the current buffer acquisition

**holdBuffer** controls the acquisition process. If **holdBuffer** is TRUE, `imgSessionExamineBuffer` prevents the acquisition process from loading new data into the buffer until it is released.

**waitANew** is the vertical blank flag. If **waitANew** is TRUE, buffers already have been processed, and `imgSessionExamineBuffer` waits for a new acquisition. If partial buffer data is available, `imgSessionExamineBuffer` waits for the next frame. If **waitANew** is FALSE, `imgSessionExamineBuffer` returns immediately when the buffer is filled.

**elementNumber** returns the buffer number of the returned buffer. If **waitANew** is FALSE, the returned value may be -1 to indicate there is no new buffer available.

**bufferAddrPtr** is a pointer to an address to store the address of the locked buffer.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_NBUF	no buffers available, too early in acquisition
IMG_ERR_PAR1	invalid SESSION_ID
IMG_ERR_PAR2	invalid command
IMG_ERR_PAR5	null pointer or invalid element number
IMG_ERR_PAR6	null pointer



**Note:** Use `imgSessionReleaseBuffer` to release the buffer being held with `imgSessionExamineBuffer`.

## imgSessionGetTriggerStatus

---

### Format

**rval** = imgSessionGetTriggerStatus(**SESSION\_ID** sid, **uInt32** trig\_num, **uInt32\*** status)

### Purpose

Returns a status on a specified trigger line.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>trig_num</b>	uInt32	input	trigger number constant
<b>status</b>	uInt32*	input	pointer to trigger status out
<b>rval</b>	Int32	output	status

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**trig\_num** is a valid trigger number as defined by the constants:

IMG\_EXT\_TRIG0  
 IMG\_EXT\_TRIG1  
 IMG\_EXT\_TRIG2  
 IMG\_EXT\_TRIG3  
 IMG\_EXT\_RTSI0  
 IMG\_EXT\_RTSI1  
 IMG\_EXT\_RTSI2  
 IMG\_EXT\_RTSI3

**status** is a pointer to an area of memory reserved as a trigger status variable. Returns TRUE if the trigger is currently enabled, FALSE if it is not enabled.

**rval** returns the following status codes:

IMG\_ERR\_GOOD      no error occurred  
 IMG\_ERR\_PAR1      invalid SESSION\_ID  
 IMG\_ERR\_PAR2      invalid trigger number  
 IMG\_ERR\_PAR3      null status pointer

## imgSessionReleaseBuffer

---

### Format

**rval** = imgSessionReleaseBuffer(**SESSION\_ID** sid, **uInt32** elementNumber)

### Purpose

Releases a buffer that was previously held with `imgSessionExamineBuffer`. This function has the effect of re-entering a buffer into a continuous ring buffer pool after analysis.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>elementNumber</b>	uInt32	input	buffer number to release
<b>rval</b>	Int32	output	status

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**elementNumber** indicates the buffer number to release as returned by `imgSessionExamineBuffer`.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid SESSION_ID
IMG_ERR_PAR2	invalid element number

## imgSessionSaveBuffer

---

### Format

```
rval = imgSessionSaveBuffer(SESSION_ID sid, uInt32 bufElement, char* file_name)
```

### Purpose

Saves a buffer of a session to disk in a native operating system-specific format such as bmp or PICT.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>bufElement</b>	uInt32	input	buffer number to save
<b>file_name</b>	char*	input	null terminated string describing a file name (optional path)
<b>rval</b>	Int32	output	status

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**bufElement** indicates a buffer list element number of the buffer to save.

**file\_name** indicates a file name used to save the image.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid SESSION_ID
IMG_ERR_PAR2	invalid buffer element number
IMG_ERR_PAR3	null pointer



## imgSessionSetRTSImap

---

### Format

**rval** = imgSessionSetRTSImap(**SESSION\_ID sid**, **uInt32 RTSImap**)

### Purpose

Maps the internal RTSI bus triggers to the external RTSI bus connector lines.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>RTSImap</b>	uInt32	input	a valid RTSI bus map constant
<b>rval</b>	Int32	output	status

### Parameter Discussion

**sid** is a valid SESSION\_ID.

**RTSImap** is one of the following RTSI map constants:

IMG\_TRIG\_MAP\_RTSI0\_DISABLED  
 IMG\_TRIG\_MAP\_RTSI0\_EXT0  
 IMG\_TRIG\_MAP\_RTSI0\_EXT1  
 IMG\_TRIG\_MAP\_RTSI0\_EXT2  
 IMG\_TRIG\_MAP\_RTSI0\_EXT3  
 IMG\_TRIG\_MAP\_RTSI0\_EXT4  
 IMG\_TRIG\_MAP\_RTSI0\_EXT5  
 IMG\_TRIG\_MAP\_RTSI0\_EXT6  
 IMG\_TRIG\_MAP\_RTSI1\_DISABLED  
 IMG\_TRIG\_MAP\_RTSI1\_EXT0  
 IMG\_TRIG\_MAP\_RTSI1\_EXT1  
 IMG\_TRIG\_MAP\_RTSI1\_EXT2  
 IMG\_TRIG\_MAP\_RTSI1\_EXT3  
 IMG\_TRIG\_MAP\_RTSI1\_EXT4  
 IMG\_TRIG\_MAP\_RTSI1\_EXT5  
 IMG\_TRIG\_MAP\_RTSI1\_EXT6

## imgSessionSetRTSImap

---

(Continued)

IMG\_TRIG\_MAP\_RTSI2\_DISABLED  
IMG\_TRIG\_MAP\_RTSI2\_EXT0  
IMG\_TRIG\_MAP\_RTSI2\_EXT1  
IMG\_TRIG\_MAP\_RTSI2\_EXT2  
IMG\_TRIG\_MAP\_RTSI2\_EXT3  
IMG\_TRIG\_MAP\_RTSI2\_EXT4  
IMG\_TRIG\_MAP\_RTSI2\_EXT5  
IMG\_TRIG\_MAP\_RTSI2\_EXT6  
IMG\_TRIG\_MAP\_RTSI3\_DISABLED  
IMG\_TRIG\_MAP\_RTSI3\_EXT0  
IMG\_TRIG\_MAP\_RTSI3\_EXT1  
IMG\_TRIG\_MAP\_RTSI3\_EXT2  
IMG\_TRIG\_MAP\_RTSI3\_EXT3  
IMG\_TRIG\_MAP\_RTSI3\_EXT4  
IMG\_TRIG\_MAP\_RTSI3\_EXT5  
IMG\_TRIG\_MAP\_RTSI3\_EXT6

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid SESSION_ID
IMG_ERR_PAR2	invalid RTSI map parameter

## imgSessionSetTrigger

---

### Format

```
rval = imgSessionSetTrigger(SESSION_ID sid, uInt32 trig_num, uInt32 trig_drive,
                             uInt32 trig_action, uInt32 trig_polarity)
```

### Purpose

Configures the specified trigger line with a drive, an action, and a polarity. You must set up each individual trigger line to externally drive or internally capture on a trigger assertion. You must also set a trigger mode using `imgSetAttribute` with the `IMG_ATTR_TRIGGER_MODE` attribute if you want to initiate acquisition as the result of a trigger.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>trig_num</b>	uInt32	input	trigger number constant
<b>trig_drive</b>	uInt32	input	trigger drive constant
<b>trig_action</b>	uInt32	input	trigger action constant
<b>trig_polarity</b>	uInt32	input	trigger polarity constant
<b>rval</b>	Int32	output	status

## imgSessionSetTrigger

---

(Continued)

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**trig\_num** is a valid trigger number as defined by the constants:

```

IMG_EXT_TRIG0
IMG_EXT_TRIG1
IMG_EXT_TRIG2
IMG_EXT_TRIG3
IMG_EXT_RTISI0
IMG_EXT_RTISI1
IMG_EXT_RTISI2
IMG_EXT_RTISI3

```

**trig\_drive** is a valid trigger drive as defined by the constants:

```

IMG_TRIG_DRIVE_DISABLED
IMG_TRIG_DRIVE_AQ_IN_PROGRESS
IMG_TRIG_DRIVE_AQ_DONE
IMG_TRIG_DRIVE_PIXEL_CLK
IMG_TRIG_DRIVE_ASSERTED
IMG_TRIG_DRIVE_HSYNC
IMG_TRIG_DRIVE_VSYNC

```

**trig\_action** is a valid trigger action as defined by the constants

```

IMG_TRIG_ACTION_CAPTURE
IMG_TRIG_ACTION_NONE

```

**trig\_polarity** is a valid trigger action as defined by the constants:

```

IMG_TRIG_POLAR_ACTIVEL
IMG_TRIG_POLAR_ACTIVEH

```

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid SESSION_ID
IMG_ERR_PAR2	invalid trigger number
IMG_ERR_PAR3	invalid trigger drive
IMG_ERR_PAR4	invalid trigger action
IMG_ERR_PAR5	invalid trigger polarity

## imgSessionWait

---

### Format

**rval** = imgSessionWait(**SESSION\_ID** sid)

### Purpose

Waits for an asynchronous acquisition to complete. If a user completion routine has been specified, it is invoked prior to this call returning.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>rval</b>	Int32	output	status

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_BDMA	bad DMA transfer
IMG_ERR_FIFO	FIFO overflow caused acquisition to halt
IMG_ERR_TIMO	wait timed out, acquisition not complete
IMG_ERR_PAR1	invalid SESSION_ID

## imgSessionWaitAqdone

---

### Format

**rval** = imgSessionWaitAqdone(**SESSION\_ID** **sid**)

### Purpose

Waits until the acquisition done interrupt is received by the IMAQ software which ensures that the last frame or field is completely finished transferring to memory.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>rval</b>	Int32	output	status

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**rval** returns IMG\_ERR\_GOOD if no error occurs.

## imgSessionWaitVblank

---

### Format

**rval** = imgInterfaceWaitVblank(**INTERFACE\_ID** ifid)

### Purpose

Waits for the start of the next camera vertical blank before returning.

### Parameters

Name	Type	Direction	Description
<b>ifid</b>	INTERFACE_ID	input	interface ID
<b>rval</b>	Int32	output	status

### Parameter Discussion

**ifid** is a valid INTERFACE\_ID type variable.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_FIFO	FIFO overflow caused acquisition to halt
IMG_ERR_PAR1	bad INTERFACE_ID

## Miscellaneous Functions

---

Miscellaneous functions include `imgCameraAction`, `imgCreateBuffer`, `imgCreateBufList`, `imgDisposeBuffer`, `imgDisposeBufList`, `imgGetAttribute`, `imgGetBufferElement`, `imgMemLock`, `imgMemUnlock`, `imgPlot`, `imgSetAttribute`, `imgSetBufferElement`, and `imgShowError`.

You can use these functions to wait for host- or interface-specific events, change acquisition parameters, create buffers, and dispose of sessions and interfaces.

Miscellaneous functions set up objects such as buffer lists, buffers, and session and interface attributes. When changing buffer list elements, make sure no other sessions depend on that buffer list to be in a known state. When changing attributes, remember that attributes are either interface- or session- (channel) specific.

Some attribute changes such as gain or white reference that are session-specific can take effect while a live acquisition is in progress. In this case, the driver will wait for a vertical blank before making the change. Most session attributes, however, require that you call `imgSessionConfigure` to reconfigure the driver, especially when changing the ROI width or height.

NI-IMAQ will not let you change any attribute that would have a detrimental effect on any acquisition in progress. If NI-IMAQ lets you change an attribute during a live acquisition, you should see the effect of the change immediately. If NI-IMAQ does not let you change an attribute during a live acquisition, stop the acquisition, change the attribute, call `imgSessionConfigure`, and restart the acquisition.

Calling `imgSessionConfigure` reprograms the video hardware and recalculates the DMA based on the attributes of the buffers in the session's buffer list.



## imgCameraAction

---

### Format

**rval** = imgCameraAction(**INTERFACE\_ID** ifid, void\* data)

### Purpose

Sends camera control information to a camera (if applicable).

### Parameters

Name	Type	Direction	Description
<b>ifid</b>	INTERFACE_ID	input	interface ID
<b>data</b>	void*	input	pointer to a camera control data structure
<b>rval</b>	Int32	output	status

### Parameter Discussion

**ifid** is a valid INTERFACE\_ID type variable.

**data** passes a pointer to a valid camera control structure.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_NCAP	function not implemented
IMG_ERR_PAR1	invalid SESSION_ID
IMG_ERR_PAR2	null pointer



**Note:** *Reserved for future use.*

## imgCreateBuffer

---

### Format

```
rval = imgCreateBuffer(SESSION_ID sid, uInt32 contiguous, uInt32 bufferSize,
                      void* bufPtrAddr)
```

### Purpose

Creates a user frame buffer based on the geometric definitions of the associated session. Passing a null or zero for the SESSION\_ID is valid. In this case, you must pass a buffer size. If you do not pass a buffer size, the buffer size is computed based on the ROI height\*rowBytes for the associated session. An error is returned if the buffer size is smaller than the minimum buffer size required for the session.

### Parameters

Name	Type	Direction	Description
<b>sid</b>	SESSION_ID	input	session ID
<b>contiguous</b>	uInt32	input	indicates contiguous or fragmented buffer memory allocation
<b>bufferSize</b>	uInt32	input	size of buffer to create
<b>bufPtrAddr</b>	void*	output	pointer to return the buffer address
<b>rval</b>	Int32	output	status

## imgCreateBuffer

---

(Continued)

### Parameter Discussion

**sid** is a valid SESSION\_ID type variable.

**contiguous** indicates contiguous or fragmented buffer memory allocation. If **contiguous** is non-zero, it indicates that the buffer allocated should be contiguous in physical memory. If **contiguous** is zero, the buffer can be fragmented.

**bufferSize** indicates the size of the buffer you want to create.

**bufPtrAddr** is a pointer to an area of memory that stores the new buffer address.

**rval** returns the following status codes:

IMG_ERR_BSIZ	buffer size used is too small for attributes
IMG_ERR_EMEM	not enough memory to perform the operation
IMG_ERR_MXBF	too many buffers already allocated
IMG_ERR_PAR1	invalid SESSION_ID
IMG_ERR_PAR2	invalid memory constant
IMG_ERR_PAR3	invalid buffer size
IMG_ERR_PAR4	null pointer

## imgCreateBufList

---

### Format

```
rval = imgCreateBufList(uInt32 numElements, BUFLIST_ID* bid)
```

### Purpose

Creates a buffer list. This buffer list is passed to `imgSessionConfigure`. The buffer list is initialized to an empty default state and must be filled before calling `imgSessionConfigure`.

### Parameters

Name	Type	Direction	Description
<b>numElements</b>	uInt32	input	number of entries in the buffer list
<b>bid</b>	BUFLIST_ID*	output	pointer to the new buffer list
<b>rval</b>	Int32	output	status

### Parameter Discussion

**numElements** indicates the maximum number of elements the buffer list should contain.

**bid** is a pointer to an area of memory that contains a BUFLIST\_ID type variable.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid SESSION_ID
IMG_ERR_PAR2	invalid number of elements
IMG_ERR_PAR3	null buffer list ID pointer

## imgDisposeBuffer

---

### Format

**rval** = imgDisposeBuffer(**void\*** buffPtr)

### Purpose

Disposes of a user frame buffer.

### Parameters

Name	Type	Direction	Description
<b>buffPtr</b>	void*	input	pointer to a buffer
<b>rval</b>	Int32	output	status

### Parameter Discussion

**buffPtr** is a pointer to a private buffer or a buffer created by `imgCreateBuffer`.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	null pointer



**Note:** *Make sure no active buffer lists contain this buffer before disposing of the user frame buffer.*

## imgDisposeBufList

---

### Format

```
rval = imgDisposeBufList(BUFLIST_ID bid, uInt32 freeResources)
```

### Purpose

Purges all image buffers associated with this buffer list. You must call `imgSessionConfigure` to reconfigure any session that was attached to the purged buffer list.

### Parameters

Name	Type	Direction	Description
<b>bid</b>	BUFLIST_ID	input	valid BUFLIST_ID
<b>freeResources</b>	uInt32	input	determines whether buffers and buffer list will be disposed or just the buffer list
<b>rval</b>	Int32	output	status

### Parameter Discussion

**bid** is a valid BUFLIST\_ID type variable.

**freeResources** determines whether both the buffers and the buffer list or just the buffer list will be disposed. If **freeResources** is non-zero, it indicates that all of the driver-allocated buffers assigned to this list should be disposed in addition to the buffer list. If **freeResources** is zero, only the buffer list is disposed.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid BUFLIST_ID

## imgGetAttribute

---

### Format

```
rval = imgGetAttribute(uInt32 void_id, uInt32 type, void* value)
```

### Purpose

Returns an attribute for an interface or session.

### Parameters

Name	Type	Direction	Description
<b>void_id</b>	uInt32	input	session or interface ID
<b>type</b>	uInt32	input	attribute type
<b>value</b>	void*	input/ output	pointer to a place attribute value
<b>rval</b>	Int32	output	status

### Parameter Discussion

**void\_id** indicates an area of memory reserved for a valid SESSION\_ID or INTERFACE\_ID type variable.

**type** passes a valid SESSION\_ID or INTERFACE\_ID attribute type. See Appendix A, *Attributes and Constants*, for valid types.

**value** passes a pointer to place attribute value.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid INTERFACE_ID or SESSION_ID
IMG_ERR_PAR2	invalid attribute type
IMG_ERR_PAR3	null pointer

## imgGetBufferElement

---

### Format

```
rval = imgGetBufferElement(BUFLIST_ID bid, uInt32 element, uInt32 itemType,
                           void* itemValue)
```

### Purpose

Gets an element of a specific type from a buffer list.

### Parameters

Name	Type	Direction	Description
<b>bid</b>	BUFLIST_ID	input	valid BUFLIST_ID
<b>element</b>	uInt32	input	element number the buffer list
<b>itemType</b>	uInt32	input	element item to set
<b>itemValue</b>	void*	input	new value for item
<b>rval</b>	Int32	output	status

### Parameter Discussion

**bid** is a valid BUFLIST\_ID type variable.

**element** is the element number of the buffer list item to modify.

**itemType** passes a valid buffer list element type.

**itemValue** passes a pointer to an area of memory reserved for the return type (32 bits).

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid BUFLIST_ID
IMG_ERR_PAR2	bad element number
IMG_ERR_PAR3	bad item type
IMG_ERR_PAR4	null pointer



**Note:** See Constants in Appendix A, Attributes and Constants, for valid element and command types.



## imgMemLock

---

### Format

**rval** = imgMemLock(**BUFLIST\_ID** bid)

### Purpose

Locks all session-associated image buffers in memory in preparation for an acquisition. The buffers must be successfully locked down before an acquisition can begin. The function does not do anything if the buffers exist in onboard memory.

### Parameters

Name	Type	Direction	Description
<b>bid</b>	BUFLIST_ID	input	buffer list ID
<b>rval</b>	Int32	output	status

### Parameter Discussion

**bid** is a valid BUFLIST\_ID type variable.

**rval** returns the following status codes:

IMG_ERR_BBUF	bad buffer pointer in list
IMG_ERR_ELCK	cannot lock buffers down, no more memory
IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid SESSION_ID

## imgMemUnlock

---

### Format

**rval** = imgMemUnlock(**BUFLIST\_ID** bid)

### Purpose

Unlocks all session-associated buffers.

### Parameters

Name	Type	Direction	Description
<b>bid</b>	BUFLIST_ID	input	buffer list ID
<b>rval</b>	Int32	output	status

### Parameter Discussion

**bid** is a valid BUFLIST\_ID type variable.

**rval** returns the following status codes:

IMG_ERR_BBUF	bad buffer pointer in list
IMG_ERR_ELCK	cannot lock buffers down, no more memory
IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid SESSION_ID

## imgPlot

---

### Format

```
rval = imgPlot(GUIHNDL window, void* buffer, uInt32 leftBufOffset, uInt32 topBufOffset,
               uInt32 xsize, uInt32 ysize, uInt32 xpos, uInt32 ypos, uInt32 invert)
```

### Purpose

Plots a buffer to a window given a native window handle. This function is an easy way to display a buffer after it is acquired.

### Parameters

Name	Type	Direction	Description
<b>window</b>	GUIHNDL	input	window handle
<b>buffer</b>	void*	input	pointer to video data
<b>leftBufOffset</b>	uInt32	input	x-offset into the buffer to start plotting
<b>topBufOffset</b>	uInt32	input	y-offset into the buffer to start plotting
<b>xsize</b>	uInt32	input	width of the image
<b>ysize</b>	uInt32	input	height of the image
<b>xpos</b>	uInt32	input	x-position to start plotting in the window
<b>ypos</b>	uInt32	input	y-position to start plotting in the window
<b>invert</b>	uInt32	input	flips image vertically
<b>rval</b>	Int32	output	status

## imgPlot

---

(Continued)

### Parameter Discussion

**window** is a native window handle designating the window to plot in.

**buffer** is a pointer to an area of memory containing a video frame buffer.

**leftBufOffset** is the left offset into the buffer to start plotting.

**topBufOffset** is the top offset into the buffer to start plotting.

**xsize** is the pixel width of the image.

**ysize** is the number of scanlines (pixel height) in the image.

**xpos** is the left position to start plotting in the window.

**ypos** is the top position to start plotting in the window.

**invert** is non-zero to have the image flipped vertically.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	bad window handle
IMG_ERR_PAR2	null pointer

## imgSetArrayPointerValue

---

### Format

```
rval = imgSetArrayPointerValue(uInt32* pl, uInt32 index, uInt32* mglPointers)
```

### Purpose

A Visual Basic helper function for constructing an array of 32-bit pointers.

### Parameters

Name	Type	Direction	Description
<b>pl</b>	uInt32*	input	32-bit pointer
<b>index</b>	uInt32	input	element number to set
<b>mglPointers</b>	uInt32*	input	array of 32-bit pointers
<b>rval</b>	Int32	output	status

### Parameter Discussion:

**pl** is a 32-bit pointer.

**index** is the array element in **mglPointers** to set with **pl**.

**mglPointers** is a pointer to an array of 32-bit pointer values.

**rval** returns IMG\_ERR\_GOOD if no error occurs.

## imgSetAttribute

---

### Format

```
rval = imgSetAttribute(uInt32 void_id, uInt32 type, uInt32 value)
```

### Purpose

Sets an attribute for an interface or session.

### Parameters

Name	Type	Direction	Description
<b>void_id</b>	uInt32	input	session or interface ID
<b>type</b>	uInt32	input	attribute type
<b>value</b>	uInt32	input	new attribute value
<b>rval</b>	Int32	output	status

### Parameter Discussion

**void\_id** indicates an area of memory reserved for a valid SESSION\_ID or INTERFACE\_ID type variable.

**type** passes a valid SESSION\_ID or INTERFACE\_ID attribute type. See Appendix A, *Attributes and Constants*, for valid types.

**value** passes a pointer to place attribute value.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid INTERFACE_ID or SESSION_ID
IMG_ERR_PAR2	invalid attribute type
IMG_ERR_PAR3	illegal attribute value

## imgSetBufferElement

---

### Format

```
rval = imgSetBufferElement(BUFLIST_ID bid, uInt32 element, uInt32 itemType,
                           uInt32 itemValue)
```

### Purpose

Sets a buffer list element of a given type to a specific value.

### Parameters

Name	Type	Direction	Description
<b>bid</b>	BUFLIST_ID	input	a valid BUFLIST_ID
<b>element</b>	uInt32	input	element number the buffer list
<b>itemType</b>	uInt32	input	element item to set
<b>itemValue</b>	uInt32	input	new value for item
<b>rval</b>	Int32	output	status

### Parameter Discussion

**bid** is a valid BUFLIST\_ID type variable.

**element** is the element number of the buffer list item to modify.

**itemType** describes the parameter of the element to set.

**itemValue** indicates the value of the element type to set.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid BUFLIST_ID
IMG_ERR_PAR2	bad element number
IMG_ERR_PAR3	bad item type
IMG_ERR_PAR4	bad command type



**Note:** See Constants in Appendix A, Attributes and Constants, for valid element and command types.

## imgShowError

---

### Format

```
rval = imgShowError(IMG_ERR error, Int8* text)
```

### Purpose

Returns a null terminated string describing the error code.

### Parameters

Name	Type	Direction	Description
error	IMG_ERR	input	a valid error code
text	Int8*	input	pointer to a character array of no less than 255 bytes
rval	Int32	output	status

### Parameter Discussion

**error** is a valid NI-IMAQ error code.

**text** is a pointer to an area of memory reserved for an error string.

**rval** returns the following status codes:

IMG_ERR_GOOD	no error occurred
IMG_ERR_PAR1	invalid error code
IMG_ERR_PAR2	null pointer



# Attributes and Constants

This appendix describes the attributes and constants used by NI-IMAQ.

## NI-IMAQ Attributes

Attributes describe a specific property of a session or interface. A summary of NI-IMAQ attributes is listed in Table A-1.

*Attribute* describes the constant name of the attribute. The *type* describes whether the get/set attribute function requires an INTERFACE\_ID (I) or SESSION\_ID (S) type parameter. *Imd.* describes whether the effect of setting the attribute is immediate (Yes), or whether it requires a subsequent `imgSessionConfigure` to take effect (No). *R/W* describes whether the attribute is read only (R), write only (W), or both (R/W). *Description* describes what values the attribute can take and the effect the setting of the attribute has or what values are returned.

**Table A-1.** Attribute Summary

Attribute	Type	Imd.	R/W	Description
IMG_ATTR_ACQ_IN_PROGRESS	S	Yes	R	Returns TRUE if an acquisition is in progress on the camera associated with this session
IMG_ATTR_ACQWINDOW_HEIGHT	S	No	R/W	Get/set the acquisition window height of the camera/channel associated with this session
IMG_ATTR_ACQWINDOW_LEFT	S	No	R/W	Get/set the acquisition window left of the camera/channel associated with this session
IMG_ATTR_ACQWINDOW_TOP	S	No	R/W	Get/set the acquisition window top of the camera/channel associated with this session
IMG_ATTR_ACQWINDOW_WIDTH	S	No	R/W	Get/set the acquisition window width of the camera/channel associated with this session
IMG_ATTR_BITSPERPIXEL	S	Yes	R	Returns the bits per pixel value of the camera/channel associated with this session

**Table A-1.** Attribute Summary (Continued)

Attribute	Type	Imd.	R/ W	Description
IMG_ATTR_BLACK_REF	S	Yes	R/ W	Set the black reference value of the channel associated with this session. Values are 0–63.
IMG_ATTR_BYTESPERPIXEL	S	Yes	R	Returns the bytes per pixel value of the camera/channel associated with this session
IMG_ATTR_CALLBACK	S	Yes	R	Not implemented
IMG_ATTR_CHANNEL	S	Yes	R	Returns the current channel selected on the interface (0–3)
IMG_ATTR_CHROMA_FILTER	S	Yes	R/ W	Set/get the antichrominance filter to be used. Values are: IMG_FILTER_NONE IMG_FILTER_NTSC IMG_FILTER_PAL
IMG_ATTR_CLAMP_START	S	Yes	R/ W	Clamp start
IMG_ATTR_CLAMP_STOP	S	Yes	R/ W	Clamp stop
IMG_ATTR_COLOR	I	Yes	R	Returns TRUE if the interface board is color-capable
IMG_ATTR_COLOR_AVG_COUNT	S	Yes	R/ W	Set/get the number of color images to be acquired and averaged for one output image (1–128). Default value is 1.
IMG_ATTR_COLOR_BLACK_REF	S	Yes	R/ W	Set/get the hardware white reference of your IMAQ device when StillColor is selected (0–63).
IMG_ATTR_COLOR_BLANK_START	S	Yes	R/ W	Color blank start
IMG_ATTR_COLOR_BLANK_START_REF	S	Yes	R/ W	Color blank start reference
IMG_ATTR_COLOR_BLANK_STOP	S	Yes	R/ W	Color blank stop
IMG_ATTR_COLOR_BLANK_STOP_REF	S	Yes	R/ W	Color blank stop reference

**Table A-1.** Attribute Summary (Continued)

Attribute	Type	Imd.	R/ W	Description
IMG_ATTR_COLOR_BRIGHTNESS	S	Yes	R/ W	Adjusts the brightness of the image. The unit is IRE (percentage of the white level). Default value is 0.
IMG_ATTR_COLOR_BURST_START	S	Yes	R/ W	Color burst start
IMG_ATTR_COLOR_BURST_START_REF	S	Yes	R/ W	Color burst start reference
IMG_ATTR_COLOR_BURST_STOP	S	Yes	R/ W	Color burst stop
IMG_ATTR_COLOR_BURST_STOP_REF	S	Yes	R/ W	Color burst stop reference
IMG_ATTR_COLOR_CLAMP_START	S	Yes	R/ W	Color clamp start
IMG_ATTR_COLOR_CLAMP_START_REF	S	Yes	R/ W	Color clamp start reference
IMG_ATTR_COLOR_CLAMP_STOP	S	Yes	R/ W	Color clamp stop
IMG_ATTR_COLOR_CLAMP_STOP_REF	S	Yes	R/ W	Color clamp stop reference
IMG_ATTR_COLOR_CONTRAST	S	Yes	R/ W	Adjusts the contrast of the image. The value is a scaling factor applied to every pixel. The contrast adjustment is centered around the median pixel value. (For example, an 8-bit image would be centered around 128.) Default value is 1.
IMG_ATTR_COLOR_GAIN	S	Yes	R/ W	Set/get the hardware gain of the IMAQ device when StillColor is selected. The gain settings are: 1.00 (0) 1.33 (1) 2.00 (2)

**Table A-1.** Attribute Summary (Continued)

Attribute	Type	Imd.	R/ W	Description
IMG_ATTR_COLOR_HUE_OFFS_ANGLE	S	Yes	R/ W	Set/get the offset angle for the hue calculation. A value of 0 (default) results in a red color to toggle between 0 and max (255 or 32,767). Changing this value will move the toggling point to other colors. The unit is degrees and corresponds to the rotation angle in the chromaticity space. Color hue offset angle
IMG_ATTR_COLOR_IMAGE_REP	S	Yes	R/ W	Specifies the type of image data that will be returned when a color image is acquired. Values are: IMG_COLOR_REP_RGB32 IMG_COLOR_REP_RED8 IMG_COLOR_REP_GREEN8 IMG_COLOR_REP_BLUE8 IMG_COLOR_REP_LUM8 IMG_COLOR_REP_HUE8 IMG_COLOR_REP_SAT8 IMG_COLOR_REP_INT8 IMG_COLOR_REP_LUM16 IMG_COLOR_REP_HUE16 IMG_COLOR_REP_SAT16 IMG_COLOR_REP_INT16 IMG_COLOR_REP_RGB48 IMG_COLOR_REP_RGB24 IMG_COLOR_REP_RGB16 IMG_COLOR_REP_HSL32 IMG_COLOR_REP_HSI32
IMG_ATTR_COLOR_IMAGE_X_SHIFT	S	Yes	R/ W	Color acquisition left shift
IMG_ATTR_COLOR_IMAGE_X_SHIFT_REF	S	Yes	R/ W	Color acquisition left shift reference
IMG_ATTR_COLOR_MODE	S	Yes	R/ W	Sets or gets the color acquisition mode. Values are: IMG_COLOR_MODE_DISABLED IMG_COLOR_MODE_RGB IMG_COLOR_MODE_COMPOSITE_STLC
IMG_ATTR_COLOR_NTSC_SETUP_ENABLE	S	Yes	R/ W	Set/get the enabling of the NTSC setup compensation (StillColor NTSC only): Disabled (0) Enabled (1)

**Table A-1.** Attribute Summary (Continued)

Attribute	Type	Imd.	R/ W	Description
IMG_ATTR_COLOR_NTSC_SETUP_VALUE	S	Yes	R/ W	Set/get the NTSC setup compensation value. The unit is IRE (percentage of white level). Default value is 7.5%. (StillColor NTSC only)
IMG_ATTR_COLOR_SATURATION	S	Yes	R/ W	Set/get the color saturation of the image. Saturation of 0 corresponds to a monochrome image. Default value is 1.
IMG_ATTR_COLOR_SW_CHROMA_FILTER	S	Yes	R/ W	Set/get the software filter to clean the chroma signal (StillColor NTSC only): Disabled (0) Enabled (1)
IMG_ATTR_COLOR_SW_POST_GAIN	S	Yes	R/ W	Color SW post-gain
IMG_ATTR_COLOR_TINT	S	Yes	R/ W	Set/get the tint of your image. Tint is specified in degrees and corresponds to the rotation of the UV color plane. Default value is 0.
IMG_ATTR_COLOR_WHITE_REF	S	Yes	R/ W	Set/get the hardware white reference of your IMAQ device when StillColor is selected (0–63).
IMG_ATTR_COLOR_ZERO_START	S	Yes	R/ W	Color zero start
IMG_ATTR_COLOR_ZERO_START_REF	S	Yes	R/ W	Color zero start reference
IMG_ATTR_COLOR_ZERO_STOP	S	Yes	R/ W	Color zero stop
IMG_ATTR_COLOR_ZERO_STOP_REF	S	Yes	R/ W	Color zero stop reference
IMG_ATTR_CURRENT_BUFLIST	S	Yes	R	Returns the BUFLIST_ID of the buffer list associated with this session
IMG_ATTR_FRAME_COUNT	S	Yes	R	Returns the number of frames acquired since the start of an acquisition
IMG_ATTR_FRAME_FIELD	I	Yes	R/ W	Sets/gets the current mode of the interface. IMG_FIELD_MODE sets field mode on the specified interface. IMG_FRAME_MODE sets frame mode on the specified interface.

**Table A-1.** Attribute Summary (Continued)

Attribute	Type	Imd.	R/ W	Description
IMG_ATTR_FRAMEWAIT_MSEC	S	No	R/ W	Get/Set the timeout value for a frame. Values are: IMG_FRAMETIME_STANDARD IMG_FRAMETIME_1SECOND IMG_FRAMETIME_2SECONDS IMG_FRAMETIME_5SECONDS IMG_FRAMETIME_10SECONDS IMG_FRAMETIME_1MINUTE IMG_FRAMETIME_2MINUTES IMG_FRAMETIME_5MINUTES IMG_FRAMETIME_10MINUTES
IMG_ATTR_FREE_BUFFERS	S	Yes	R	Returns the number of reserved driver buffers currently left
IMG_ATTR_GAIN	S	Yes	R/ W	Set the video gain for the channel associated with this session. Values are: IMG_GAIN_0DB IMG_GAIN_3DB IMG_GAIN_6DB
IMG_ATTR_GENLOCK_SWITCH_CHAN	S	Yes	R/ W	Determines if the board will relock to the video source when switching channels. If FALSE, the board will always relock to the video source when switching channels. If TRUE, the board will not relock to the video source when switching channels. Use this attribute if you have two genlocked cameras.
IMG_ATTR_HASRAM	I	Yes	R	Returns TRUE if the interface board has onboard memory
IMG_ATTR_HORZ_RESOLUTION	I	Yes	R	Returns the maximum horizontal resolution of the interface
IMG_ATTR_HSCALE	S	No	R/ W	Set/get the horizontal hardware scaling factor for the channel associated with this session. Values are: IMG_SCALE_NONE IMG_SCALE_DIV2 IMG_SCALE_DIV4 IMG_SCALE_DIV8
IMG_ATTR_INTERFACE_TYPE	I	Yes	R	Returns the type of interface: IMG_BOARD_INTERFACE IMG_OTHER_INTERFACE

**Table A-1.** Attribute Summary (Continued)

Attribute	Type	Imd.	R/ W	Description
IMG_ATTR_INVERT	S	No	R/ W	Set/get the invert image mode. Beneficial when calling <code>imgPlot</code> . Values are: 0 = no invert—image in memory is right-side up 1 = invert—image in memory is upside down
IMG_ATTR_LAST_VALID_BUFFER	S	Yes	R	Returns a buffer element number of the last received frame buffer
IMG_ATTR_LINE_COUNT	S	Yes	R	Returns the current line count of the frame being acquired
IMG_ATTR_LUT	I	Yes	R/ W	Programs the lookup table for the given interface. Pass values 0–6 to indicate the LUT you wish to use or you can pass a pointer to your own LUT. Returns an index 0–6 that indicates which LUT you are using.
IMG_ATTR_MEM_LOCKED	S	Yes	R	Returns TRUE if the session's buffer list is locked in memory
IMG_ATTR_NUM_BUFFERS	S	Yes	R	Returns the number of buffers in the buffer list associated with the session
IMG_ATTR_PIXDEPTH	I	Yes	R	Returns the maximum pixel depth of the interface board in bytes
IMG_ATTR_RAMSIZE	I	Yes	R	Returns the size of the RAM on the interface board
IMG_ATTR_ROI_HEIGHT	S	No	R/ W	Get/set the region of interest height of the camera/channel associated with this session
IMG_ATTR_ROI_LEFT	S	Yes	R/ W	Get/set the region of interest left of the camera/channel associated with this session
IMG_ATTR_ROI_TOP	S	Yes	R/ W	Get/set the region of interest top of the camera/channel associated with this session
IMG_ATTR_ROI_WIDTH	S	No	R/ W	Get/set the region of interest width of the camera/channel associated with this session
IMG_ATTR_ROWBYTES	S	No	R/ W	Set the true width of a horizontal line in memory. Used to calculate the next lines memory offset

**Table A-1.** Attribute Summary (Continued)

Attribute	Type	Imd.	R/ W	Description
IMG_ATTR_START_FIELD	S	No	R/ W	Returns the start field setting of the camera associated with this session
IMG_ATTR_TRIGGER_MODE	S	No	R/ W	Get/set the trigger mode for the channel associated with this session. Values are: IMG_TRIGMODE_NONE IMG_TRIGMODE_NOREPEAT IMG_TRIGMODE_REPEAT
IMG_ATTR_VERT_RESOLUTION	I	Yes	R	Returns the maximum vertical resolution of the interface
IMG_ATTR_VSCALE	S	No	R	Set/get the vertical hardware scaling factor for the channel associated with this session. Values are: IMG_SCALE_NONE IMG_SCALE_DIV2 IMG_SCALE_DIV4 IMG_SCALE_DIV8
IMG_ATTR_WHITE_REF	S	Yes	R/ W	Set the white reference value of the channel associated with this session. Values are 0–63.
IMG_ATTR_XOFF_BUFFER	S	No	R/ W	Set/get the buffer x-left offset for image displacement. Use this attribute to acquire an image into a private buffer at a different location other than the top-left corner. You must use a private buffer when using this attribute.
IMG_ATTR_YOFF_BUFFER	S	No	R/ W	Set/get the buffer y-line offset for image displacement. Use this attribute to acquire an image into a private buffer at a different location other than the top-left corner. You must use a private buffer when using this attribute.
IMG_ATTR_ZERO_START	S	Yes	R/ W	Zero start
IMG_ATTR_ZERO_STOP	S	Yes	R/ W	Zero stop



# Constants

Constants help clearly define specific function parameter values. These constants are included in your `niimaq.h` header file. Use these constants when coding the `imgGetAttribute` and `imgSetAttribute` functions when required.

Table A-2 lists the constant name, the function to which the constant applies, and a general description.

**Table A-2.** Constants Summary

Constant	Use With	Description
IMG_BOARD_INTERFACE	<code>imgGetAttribute</code>	Specifies the type of interface is a plug-in board
IMG_BUFF_ADDRESS	<code>imgGetBufferElement</code> <code>imgSetBufferElement</code>	Specifies the buffer address portion of a buffer list element
IMG_BUFF_COMMAND	<code>imgGetBufferElement</code> <code>imgSetBufferElement</code>	Specifies the command portion of a buffer list element
IMG_BUFF_SIZE	<code>imgGetBufferElement</code> <code>imgSetBufferElement</code>	Specifies the size portion of a buffer list element (the buffer's size). Required for private buffers.
IMG_BUFF_SKIPCOUNT	<code>imgGetBufferElement</code> <code>imgSetBufferElement</code>	Specifies the skip count portion of a buffer list element
IMG_BUFF_TRIGGER	<code>imgGetBufferElement</code> <code>imgSetBufferElement</code>	Specifies the trigger portion of a buffer list element. Set to TRUE for each buffer that will initiate a capture based on a trigger.
IMG_CMD_LOOP	<code>imgGetBufferElement</code> <code>imgSetBufferElement</code>	Specifies a buffer list command of LOOP. Used as the command for the last buffer element, this causes an acquisition to perform a continuous type of acquisition such as a ring.
IMG_CMD_NEXT	<code>imgGetBufferElement</code> <code>imgSetBufferElement</code>	Specifies a buffer list command of NEXT. This causes an acquisition to take place on the buffer and to proceed to the next buffer list element.

**Table A-2.** Constants Summary (Continued)

<b>Constant</b>	<b>Use With</b>	<b>Description</b>
IMG_CMD_PASS	imgGetBufferElement imgSetBufferElement	Specifies a buffer list command of PASS. Any buffer list element with this command is ignored. Use to reserved space for fast configuration.
IMG_COLOR_MODE_DISABLED	imgGetAttribute imgSetAttribute	Specifies that color mode is disabled
IMG_COLOR_MODE_RGB	imgGetAttribute imgSetAttribute	Specifies that color mode is StillColor RGB
IMG_COLOR_MODE_COMPOSITE_STLC	imgGetAttribute imgSetAttribute	Specifies that color mode is StillColor Composite
IMG_COLOR_REP_BLUE8	imgGetAttribute imgSetAttribute	Specifies 8-bit Blue color output
IMG_COLOR_REP_GREEN8	imgGetAttribute imgSetAttribute	Specifies 8-bit Green color output
IMG_COLOR_REP_HSI32	imgGetAttribute imgSetAttribute	A color image encoded in 32 bits—8 bits unused and 8 bits each for the Hue, Saturation, and Intensity planes
IMG_COLOR_REP_HSL32	imgGetAttribute imgSetAttribute	A color image encoded in 32 bits—8 bits unused and 8 bits each for the Hue, Saturation, and Luminance planes
IMG_COLOR_REP_HUE8	imgGetAttribute imgSetAttribute	Specifies 8-bit Hue color output
IMG_COLOR_REP_HUE16	imgGetAttribute imgSetAttribute	Specifies 16-bit Hue color output
IMG_COLOR_REP_INT8	imgGetAttribute imgSetAttribute	Specifies 8-bit Intensity color output
IMG_COLOR_REP_INT16	imgGetAttribute imgSetAttribute	Specifies 16-bit Intensity color output
IMG_COLOR_REP_LUM8	imgGetAttribute imgSetAttribute	Specifies 8-bit Light color output

**Table A-2.** Constants Summary (Continued)

<b>Constant</b>	<b>Use With</b>	<b>Description</b>
IMG_COLOR_REP_LUM16	imgGetAttribute imgSetAttribute	Specifies 16-bit Light color output
IMG_COLOR_REP_RED8	imgGetAttribute imgSetAttribute	Specifies 8-bit Red color output
IMG_COLOR_REP_RGB16	imgGetAttribute imgSetAttribute	Specifies 16-bit RGB color output (x 555)
IMG_COLOR_REP_RGB24	imgGetAttribute imgSetAttribute	Specifies 24-bit RGB color output (default)
IMG_COLOR_REP_RGB32	imgGetAttribute imgSetAttribute	Specifies 32-bit RGB color output
IMG_COLOR_REP_RGB48	imgGetAttribute imgSetAttribute	Specifies 48-bit RGB color output
IMG_COLOR_REP_SAT8	imgGetAttribute imgSetAttribute	Specifies 8-bit Saturation color output
IMG_COLOR_REP_SAT16	imgGetAttribute imgSetAttribute	Specifies 16-bit Saturation color output
IMG_CURRENT_BUFFER	imgSessionExamineBuffer	Specifies to examine current buffer in a live acquisition. Waits until vertical blank to return the buffer to you.
IMG_DEVICE_FRAME	imgCreateBuffer	Specifies the new buffer is created in onboard memory
IMG_EXT_RTISI0	imgSessionSetTrigger	Specifies the corresponding trigger line
IMG_EXT_RTISI1	imgSessionSetTrigger	Specifies the corresponding trigger line
IMG_EXT_RTISI2	imgSessionSetTrigger	Specifies the corresponding trigger line
IMG_EXT_RTISI3	imgSessionSetTrigger	Specifies the corresponding trigger line
IMG_EXT_TRIG0	imgSessionSetTrigger	Specifies the corresponding trigger line

**Table A-2.** Constants Summary (Continued)

<b>Constant</b>	<b>Use With</b>	<b>Description</b>
IMG_EXT_TRIG1	imgSessionSetTrigger	Specifies the corresponding trigger line
IMG_EXT_TRIG2	imgSessionSetTrigger	Specifies the corresponding trigger line
IMG_EXT_TRIG3	imgSessionSetTrigger	Specifies the corresponding trigger line
IMG_FIELD_EVEN	imgGetAttribute imgSetAttribute	Specifies the start field of the acquisition as even
IMG_FIELD_MODE	imgGetAttribute imgSetAttribute	Specifies the acquisition mode as field
IMG_FIELD_ODD	imgGetAttribute imgSetAttribute	Specifies the start field of the acquisition as odd
IMG_FILTER_NONE	imgGetAttribute imgSetAttribute	Specifies no video filter
IMG_FILTER_NTSC	imgGetAttribute imgSetAttribute	Specifies the video filter is NTSC
IMG_FILTER_PAL	imgGetAttribute imgSetAttribute	Specifies the video filter is PAL
IMG_FRAME_MODE	imgGetAttribute imgSetAttribute	Specifies the acquisition mode as interlaced
IMG_FRAMETIME_1MINUTE	imgGetAttribute imgSetAttribute	Specifies a frame timeout value of 1 minute
IMG_FRAMETIME_2MINUTES	imgGetAttribute imgSetAttribute	Specifies a frame timeout value of 2 minutes
IMG_FRAMETIME_5MINUTES	imgGetAttribute imgSetAttribute	Specifies a frame timeout value of 5 minutes
IMG_FRAMETIME_10MINUTES	imgGetAttribute imgSetAttribute	Specifies a frame timeout value of 10 minutes
IMG_FRAMETIME_1SECOND	imgGetAttribute imgSetAttribute	Specifies a frame timeout value of 1 s
IMG_FRAMETIME_2SECONDS	imgGetAttribute imgSetAttribute	Specifies a frame timeout value of 2 s

**Table A-2.** Constants Summary (Continued)

<b>Constant</b>	<b>Use With</b>	<b>Description</b>
IMG_FRAMETIME_5SECONDS	imgGetAttribute imgSetAttribute	Specifies a frame timeout value of 5 s
IMG_FRAMETIME_10SECONDS	imgGetAttribute imgSetAttribute	Specifies a frame timeout value of 10 s
IMG_FRAMETIME_STANDARD	imgGetAttribute imgSetAttribute	Specifies a frame timeout value of 100 ms
IMG_GAIN_0DB	imgGetAttribute imgSetAttribute	Specifies the gain is +0 dB
IMG_GAIN_3DB	imgGetAttribute imgSetAttribute	Specifies the gain is +3 dB
IMG_GAIN_6DB	imgGetAttribute imgSetAttribute	Specifies the gain is +6 dB
IMG_HOST_FRAME	imgCreateBuffer	Specifies the new buffer is created in host (computer) memory
IMG_LAST_BUFFER	imgSessionExamineBuffer	Specifies to examine the last valid buffer in a live acquisition
IMG_OLDEST_BUFFER	imgSessionExamineBuffer	Specifies to examine the oldest buffer in a live acquisition
IMG_OTHER_INTERFACE	imgGetAttribute	Specifies the type of interface is not a plug-in board
IMG_SCALE_DIV2	imgGetAttribute imgSetAttribute	Specifies scaling by divisions of 2
IMG_SCALE_DIV4	imgGetAttribute imgSetAttribute	Specifies scaling by divisions of 4
IMG_SCALE_DIV8	imgGetAttribute imgSetAttribute	Specifies scaling by divisions of 8
IMG_SCALE_NONE	imgGetAttribute imgSetAttribute	Specifies no scaling
IMG_TRIG_ACTION_CAPTURE	imgSessionSetTrigger	Specifies the action caused by an external trigger
IMG_TRIG_ACTION_NONE	imgSessionSetTrigger	Specifies the action caused by an external trigger

**Table A-2.** Constants Summary (Continued)

<b>Constant</b>	<b>Use With</b>	<b>Description</b>
IMG_TRIG_DRIVE_AQ_DONE	imgSessionSetTrigger	Specifies that the trigger line is driven on AQ_DONE
IMG_TRIG_DRIVE_AQ_IN_PROGRESS	imgSessionSetTrigger	Specifies that the trigger line is driven on AQ_IN_PROGRESS
IMG_TRIG_DRIVE_ASSERTED	imgSessionSetTrigger	Specifies to immediately drive the trigger line asserted
IMG_TRIG_DRIVE_DISABLED	imgSessionSetTrigger	Specifies that the trigger line is not driven
IMG_TRIG_DRIVE_HSYNC	imgSessionSetTrigger	Specifies that the trigger line is driven on HSYNC
IMG_TRIG_DRIVE_PIXEL_CLK	imgSessionSetTrigger	Specifies that the trigger line is driven on PIXEL_CLK
IMG_TRIG_DRIVE_UNASSERTED	imgSessionSetTrigger	Specifies to immediately drive the trigger line unasserted
IMG_TRIG_DRIVE_VSYNC	imgSessionSetTrigger	Specifies that the trigger line is driven on VSYNC
IMG_TRIG_EXTERNAL	imgGetAttribute imgSetAttribute	Specifies the trigger line as external (hardware trigger)
IMG_TRIG_INTERNAL	imgGetAttribute imgSetAttribute	Specifies the trigger line as internal (software trigger)
IMG_TRIG_MAP_RTSI0_DISABLED	imgSessionSetRTSImap	Specifies that the RTSI internal to external mapping is disabled
IMG_TRIG_MAP_RTSI1_DISABLED	imgSessionSetRTSImap	Specifies that the RTSI internal to external mapping is disabled
IMG_TRIG_MAP_RTSI2_DISABLED	imgSessionSetRTSImap	Specifies that the RTSI internal to external mapping is disabled
IMG_TRIG_MAP_RTSI3_DISABLED	imgSessionSetRTSImap	Specifies that the RTSI internal to external mapping is disabled
IMG_TRIG_MAP_RTSI <sub>x</sub> _EXT <sub>x</sub>	imgSessionSetRTSImap	Specifies which internal RTSI trigger maps to the external RTSI lines

**Table A-2.** Constants Summary (Continued)

<b>Constant</b>	<b>Use With</b>	<b>Description</b>
IMG_TRIG_NONE	imgGetAttribute imgSetAttribute	Specifies no trigger for the session
IMG_TRIG_POLAR_ACTIVEH	imgSessionSetTrigger	Specifies the polarity of a trigger as active HIGH
IMG_TRIG_POLAR_ACTIVEL	imgSessionSetTrigger	Specifies the polarity of a trigger as active LOW
IMG_TRIGMODE_NONE	imgGetAttribute imgSetAttribute	Specifies a trigger mode of disabled. Triggers will not cause an acquisition to occur.
IMG_TRIGMODE_NOREPEAT	imgGetAttribute imgSetAttribute	Specifies a trigger mode of no-repeat. Enabled triggers will cause an acquisition to occur on the buffers that have their buffer trigger attribute set. The sequence will not re-arm after the last buffer.
IMG_TRIGMODE_REPEAT	imgGetAttribute imgSetAttribute	Specifies a trigger mode of repeat. Enabled triggers will cause an acquisition to occur on the specified buffers, and the sequence automatically will re-arm to acquire the sequence again after the last buffer.
IMG_VIDEO_NTSC	imgGetAttribute	Specifies the video type is NTSC
IMG_VIDEO_PAL	imgGetAttribute	Specifies the video type is PAL
INTERFACE_NAME_SIZE	imgInterfaceQueryNames	Specifies the size of each array element in the interface names array

# Status Codes

## Appendix B

This appendix describes the status codes returned by NI-IMAQ.

Each NI-IMAQ function returns a status code that indicates whether the function was performed successfully. A summary of the status codes is listed in Table B-1.

**Table B-1.** Status Code Summary

Status Name	Description
IMG_ERR_AIOP	Cannot perform request, acquisition in progress
IMG_ERR_ALLOC	Error during large buffer allocation
IMG_ERR_BADCAMPARAM	Bad parameter from camera file
IMG_ERR_BADCAMTYPE	Bad camera type (not NTSC or PAL)
IMG_ERR_BADPIXTYPE	Camera not supported (not 8 bits)
IMG_ERR_BBLB	A buffer list, buffer is null
IMG_ERR_BBLE	Buffer list does contains an invalid command
IMG_ERR_BBLF	Buffer list does not contain a valid final command
IMG_ERR_BBUF	Bad buffer pointer in list
IMG_ERR_BCMF	Bad camera file (check syntax)
IMG_ERR_BDMA	Bad DMA transfer
IMG_ERR_BINT	Bad interface
IMG_ERR_BROI	ROI width is less than rowbytes
IMG_ERR_BROW	Rowbytes is less than region of interest
IMG_ERR_BSIZ	Buffer size used is too small for attributes



**Table B-1.** Status Code Summary (Continued)

Status Name	Description
IMG_ERR_BTAC	No trigger action—acquisition will time out
IMG_ERR_BTRG	Trigger loopback problem—cannot drive trigger with action enabled
IMG_ERR_DISE	Error releasing the image buffer
IMG_ERR_DLLE	DLL internal error, bad logic state
IMG_ERR_ELCK	Cannot lock buffers down, no more memory
IMG_ERR_EMEM	Not enough memory to perform the operation
IMG_ERR_FIFO	FIFO overflow caused acquisition to halt
IMG_ERR_GOOD	No error occurred
IMG_ERR_HLPR	Bad parameter to low-level—check attributes and high-level arguments
IMG_ERR_ILCK	Interface locked
IMG_ERR_MXBF	Too many buffers already allocated
IMG_ERR_MXBI	Exhausted buffer IDs
IMG_ERR_NAIP	No acquisition in progress
IMG_ERR_NBUF	No buffers available, too early in acquisition
IMG_ERR_NCAM	No camera defined for this channel
IMG_ERR_NCAP	Function not implemented
IMG_ERR_NCFG	Invalid action, no buffers configured for session
IMG_ERR_NDLL	Unable to load DLL (LabWindows/CVI only)
IMG_ERR_NEPK	No external pixel clock present
IMG_ERR_NFNC	Unable to find API function in DLL (LabWindows/CVI only)
IMG_ERR_NINF	No interface found

**Table B-1.** Status Code Summary (Continued)


Status Name	Description
IMG_ERR_NLCK	Buffer list is not locked
IMG_ERR_NOSR	Unable to allocate system resources (LabWindows/CVI only)
IMG_ERR_NVBL	Not successful because of hardware limitations
IMG_ERR_OSER	Operating system error occurred
IMG_ERR_OVRN	Too many interfaces open
IMG_ERR_PALKEYDTCT	PAL key detection error
IMG_ERR_PAR1	Function-specific, see function description
IMG_ERR_PAR2	Function-specific, see function description
IMG_ERR_PAR3	Function-specific, see function description
IMG_ERR_PAR4	Function-specific, see function description
IMG_ERR_PAR5	Function-specific, see function description
IMG_ERR_PAR6	Function-specific, see function description
IMG_ERR_PAR7	Function-specific, see function description
IMG_ERR_PAR8	Function-specific, see function description
IMG_ERR_PAR9	Function-specific, see function description
IMG_ERR_PAR10	Function-specific, see function description
IMG_ERR_PLCK	Partial lock—cannot perform acquisition
IMG_ERR_SCC1	RGB Color channel not set to 1
IMG_ERR_SCLM	Field scaling mode not supported
IMG_ERR_SMALLALLOC	Error during small buffer allocation
IMG_ERR_TIMO	Wait timed out, acquisition not complete
IMG_ERR_VLCK	Cannot get lock on video source

**Table B-1.** Status Code Summary (Continued)

<b>Status Name</b>	<b>Description</b>
IMG_ERR_ZBUF	Zero buffer size, no bytes filled
IMG_WRN_BCAM	Warning, corrupt camera file detected
IMG_WRN_BLK	Unstable blanking reference (StillColor mode)
IMG_WRN_BRST	Bad quality colorburst (StillColor mode)
IMG_WRN_CONF	Warning, change requires reconfiguration to take effect
IMG_WRN_ILCK	Warning, interface still locked

# Customer Communication

---

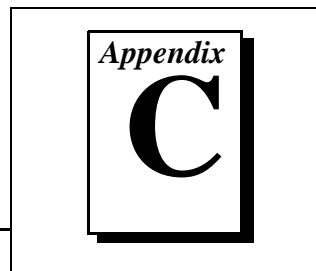

For your convenience, this appendix contains forms to help you gather the information necessary to help us solve your technical problems and a form you can use to comment on the product documentation. When you contact us, we need the information on the Technical Support Form and the configuration form, if your manual contains one, about your system configuration to answer your questions as quickly as possible.

National Instruments has technical assistance through electronic, fax, and telephone systems to quickly provide the information you need. Our electronic services include a bulletin board service, an FTP site, a Fax-on-Demand system, and e-mail support. If you have a hardware or software problem, first try the electronic support systems. If the information available on these systems does not answer your questions, we offer fax and telephone support through our technical support centers, which are staffed by applications engineers.

## Electronic Services



### Bulletin Board Support

National Instruments has BBS and FTP sites dedicated for 24-hour support with a collection of files and documents to answer most common customer questions. From these sites, you can also download the latest instrument drivers, updates, and example programs. For recorded instructions on how to use the bulletin board and FTP services and for BBS automated information, call (512) 795-6990. You can access these services at:

United States: (512) 794-5422

Up to 14,400 baud, 8 data bits, 1 stop bit, no parity

United Kingdom: 01635 551422

Up to 9,600 baud, 8 data bits, 1 stop bit, no parity

France: 01 48 65 15 59

Up to 9,600 baud, 8 data bits, 1 stop bit, no parity



### FTP Support

To access our FTP site, log on to our Internet host, `ftp.natinst.com`, as anonymous and use your Internet address, such as `joesmith@anywhere.com`, as your password. The support files and documents are located in the `/support` directories.



## Fax-on-Demand Support

Fax-on-Demand is a 24-hour information retrieval system containing a library of documents on a wide range of technical information. You can access Fax-on-Demand from a touch-tone telephone at (512) 418-1111.




## E-Mail Support (currently U.S. only)

You can submit technical support questions to the applications engineering team through e-mail at the Internet address listed below. Remember to include your name, address, and phone number so we can contact you with solutions and suggestions.

[support@natinst.com](mailto:support@natinst.com)

## Telephone and Fax Support

National Instruments has branch offices all over the world. Use the list below to find the technical support number for your country. If there is no National Instruments office in your country, contact the source from which you purchased your software to obtain support.



### Telephone



### Fax

Australia	03 9879 5166	03 9879 6277
Austria	0662 45 79 90 0	0662 45 79 90 19
Belgium	02 757 00 20	02 757 03 11
Canada (Ontario)	905 785 0085	905 785 0086
Canada (Quebec)	514 694 8521	514 694 4399
Denmark	45 76 26 00	45 76 26 02
Finland	09 725 725 11	09 725 725 55
France	01 48 14 24 24	01 48 14 24 14
Germany	089 741 31 30	089 714 60 35
Hong Kong	2645 3186	2686 8505
Israel	03 5734815	03 5734816
Italy	02 413091	02 41309215
Japan	03 5472 2970	03 5472 2977
Korea	02 596 7456	02 596 7455
Mexico	5 520 2635	5 520 3282
Netherlands	0348 433466	0348 430673
Norway	32 84 84 00	32 84 86 00
Singapore	2265886	2265887
Spain	91 640 0085	91 640 0533
Sweden	08 730 49 70	08 730 43 70
Switzerland	056 200 51 51	056 200 51 55
Taiwan	02 377 1200	02 737 4644
United Kingdom	01635 523545	01635 523154
United States	512 795 8248	512 794 5678

# Technical Support Form

Photocopy this form and update it each time you make changes to your software or hardware, and use the completed copy of this form as a reference for your current configuration. Completing this form accurately before contacting National Instruments for technical support helps our applications engineers answer your questions more efficiently.

If you are using any National Instruments hardware or software products related to this problem, include the configuration forms from their user manuals. Include additional pages if necessary.

Name \_\_\_\_\_

Company \_\_\_\_\_

Address \_\_\_\_\_

\_\_\_\_\_

Fax ( \_\_\_\_ ) \_\_\_\_\_ Phone ( \_\_\_\_ ) \_\_\_\_\_

Computer brand \_\_\_\_\_ Model \_\_\_\_\_ Processor \_\_\_\_\_

Operating system (include version number) \_\_\_\_\_

Clock speed \_\_\_\_\_ MHz RAM \_\_\_\_\_ MB Display adapter \_\_\_\_\_

Mouse \_\_\_yes \_\_\_no Other adapters installed \_\_\_\_\_

Hard disk capacity \_\_\_\_\_ MB Brand \_\_\_\_\_

Instruments used \_\_\_\_\_

\_\_\_\_\_

National Instruments hardware product model \_\_\_\_\_ Revision \_\_\_\_\_

Configuration \_\_\_\_\_

National Instruments software product \_\_\_\_\_ Version \_\_\_\_\_

Configuration \_\_\_\_\_

The problem is: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

List any error messages: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

The following steps reproduce the problem: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

# IMAQ Hardware and Software Configuration Form

Record the settings and revisions of your hardware and software on the line to the right of each item. Complete a new copy of this form each time you revise your software or hardware configuration, and use this form as a reference for your current configuration. Completing this form accurately before contacting National Instruments for technical support helps our applications engineers answer your questions more efficiently.

## National Instruments Products

IMAQ hardware \_\_\_\_\_

Interrupt level of hardware \_\_\_\_\_

DMA channels of hardware \_\_\_\_\_

Base I/O address of hardware \_\_\_\_\_

Programming choice \_\_\_\_\_

NI-IMAQ, IMAQ Vision, or LabVIEW version \_\_\_\_\_

Other boards in system \_\_\_\_\_

Base I/O address of other boards \_\_\_\_\_

DMA channels of other boards \_\_\_\_\_

Interrupt level of other boards \_\_\_\_\_

## Other Products

Computer make and model \_\_\_\_\_

Microprocessor \_\_\_\_\_

Clock frequency or speed \_\_\_\_\_

PCI chipset \_\_\_\_\_

Type of video board installed \_\_\_\_\_

Operating system version \_\_\_\_\_

Operating system mode \_\_\_\_\_

Programming language \_\_\_\_\_

Programming language version \_\_\_\_\_

Other boards in system \_\_\_\_\_

Base I/O address of other boards \_\_\_\_\_

DMA channels of other boards \_\_\_\_\_

Interrupt level of other boards \_\_\_\_\_

# Documentation Comment Form

National Instruments encourages you to comment on the documentation supplied with our products. This information helps us provide quality products to meet your needs.

**Title:** *NI-IMAQ Function Reference Manual*

**Edition Date:** October 1997

**Part Number:** 321387B-01

Please comment on the completeness, clarity, and organization of the manual.

---

---

---

---

---

---

---

---

If you find errors in the manual, please record the page numbers and describe the errors.

---

---

---

---

---

---

---

---

Thank you for your help.

Name \_\_\_\_\_

Title \_\_\_\_\_

Company \_\_\_\_\_

Address \_\_\_\_\_

\_\_\_\_\_

Phone ( \_\_\_\_ ) \_\_\_\_\_ Fax ( \_\_\_\_ ) \_\_\_\_\_

**Mail to:** Technical Publications  
National Instruments Corporation  
6504 Bridge Point Parkway  
Austin, TX 78730-5039

**Fax to:** Technical Publications  
National Instruments Corporation  
(512) 794-5678



Prefix	Meaning	Value
p-	pico-	$10^{-12}$
n-	nano-	$10^{-9}$
$\mu$ -	micro-	$10^{-6}$
m-	milli-	$10^{-3}$
k-	kilo-	$10^3$
M-	mega-	$10^6$
G-	giga-	$10^9$

## Numbers/Symbols

%	percent
+	positive of, or plus
+5V	5 V signal
-	negative of, or minus
/	per
$\pm$	plus or minus
$\Omega$	ohm

## A

A	amperes
AC	alternating current
acquisition window	the image size specific to a video standard or camera resolution
active line region	the region of lines actively being stored; defined by a line start (relative to VSYNC) and a line count
active pixel region	the region of pixels actively being stored; defined by a pixel start (relative to HSYNC) and a pixel count
A/D	analog-to-digital
ADC	analog-to-digital converter—an electronic device, often an integrated circuit, that converts an analog voltage to a digital number
address	character code that identifies a specific location (or series of locations) in memory
ANSI	American National Standards Institute
antichrominance filter	removes the color information from the video signal
API	application programming interface
AQ_DONE	signals that the acquisition of a frame or field is completed
AQ_IN_PROGRESS	signals that the acquisition of video data is in progress
area	a rectangular portion of an acquisition window or frame that is controlled and defined by software
array	ordered, indexed set of data elements of the same type
ASIC	Application-Specific Integrated Circuit—a proprietary semiconductor component designed and manufactured to perform a set of specific functions for a specific customer
aspect ratio	the ratio of a signal's width to its height

**B**

b	bit—one binary digit, either 0 or 1
B	byte—eight related bits of data, an eight-bit binary number; also used to denote the amount of memory required to store one byte of data
back porch	the area of the video signal between the rising edge of the horizontal sync signal and the active video information
black reference level	the level that represents the darkest an image can get <i>See also</i> white reference level.
buffer	temporary storage for acquired data
bus	the group of conductors that interconnect individual circuitry in a computer, such as the PCI bus; typically the expansion vehicle to which I/O or other devices are connected

**C**

C	Celsius
cache	high-speed processor memory that buffers commonly used instructions or data to increase processing throughput
CCIR	Comite Consultatif International des Radiocommunications—a committee that developed standards for color video signals
chrominance	the color information in a video signal
CMOS	complementary metal-oxide semiconductor
compiler	a software utility that converts a source program in a high-level programming language, such as Basic, C or Pascal, into an object or compiled program in machine language. Compiled programs run 10 to 1,000 times faster than interpreted programs <i>See also</i> Interpreter.
conversion device	device that transforms a signal from one form to another; for example, analog-to-digital converters (ADCs) for analog input and digital-to-analog converters (DACs) for analog output
CPU	central processing unit

CSYNC	composite sync signal; a combination of the horizontal and vertical sync pulses
CSYNCIN	composite sync in signal
CSYNCOUT	composite sync out signal

## D

D/A	digital-to-analog
DAC	digital-to-analog converter; an electronic device, often an integrated circuit, that converts a digital number into a corresponding analog voltage or current
DAQ	data acquisition—(1) collecting and measuring electrical signals from sensors, transducers, and test probes or fixtures and inputting them to a computer for processing; (2) collecting and measuring the same kinds of electrical signals with A/D or DIO boards plugged into a computer, and possibly generating control signals with D/A and/or DIO boards in the same computer
dB	decibel; the unit for expressing a logarithmic measure of the ratio of two signal levels: $dB=20\log_{10} V_1/V_2$ , for signals in volts
DC	direct current
default setting	a default parameter value recorded in the driver; in many cases, the default input of a control is a certain value (often 0) that means <i>use the current default setting</i> .
DIN	Deutsche Industrie Norme
DLL	dynamic link library—a software module in Microsoft Windows containing executable code and data that can be called or used by Windows applications or other DLLs; functions and data in a DLL are loaded and linked at run time when they are referenced by a Windows application or other DLLs
DMA	direct memory access—a method by which data can be transferred to and from computer memory from and to a device or memory on the bus while the processor does something else; DMA is the fastest method of transferring data to/from computer memory

DRAM	dynamic RAM
drivers	software that controls a specific hardware device such as an IMAQ or DAQ device.
dynamic range	the ratio of the largest signal level a circuit can handle to the smallest signal level it can handle (usually taken to be the noise level), normally expressed in dB

## E

EEPROM	electrically erasable programmable read-only memory—ROM that can be erased with an electrical signal and reprogrammed
external trigger	a voltage pulse from an external source that triggers an event such as A/D conversion

## F

field	For an interlaced video signal, a field is half the number of horizontal lines needed to represent a frame of video; the first field of a frame contains all the odd-numbered lines, the second field contains all of the even-numbered lines.
FIFO	first-in first-out memory buffer—the first data stored is the first data sent to the acceptor; FIFOs are used on IMAQ devices to temporarily store incoming data until that data can be retrieved. For example, an analog input FIFO stores the results of A/D conversions until the data can be retrieved into system memory, a process that requires the servicing of interrupts and often the programming of the DMA controller. This process can take several milliseconds in some cases. During this time, data accumulates in the FIFO for future retrieval.
flash ADC	an ADC whose output code is determined in a single step by a bank of comparators and encoding logic
frame	a complete image; in interlaced formats, a frame is composed of two fields
front porch	the area of a video signal between the start of the horizontal blank and the start of the horizontal sync
ft	feet

function a set of software instructions executed by a single line of code that may have input and/or output parameters and returns a value when executed; examples of functions are:

```
y = COS (x)
status = AO_config(board, channel, range)
```

## G

gamma the nonlinear change in the difference between the video signal's brightness level and the voltage level needed to produce that brightness

genlock circuitry that aligns the video timing signals by locking together the horizontal, vertical, and color subcarrier frequencies and phases and generates a pixel clock to clock pixel data into memory for display or into another circuit for processing

GND ground signal

GUI graphical user interface—an intuitive, easy-to-use means of communicating information to and from a computer program by means of graphical screen displays; GUIs can resemble the front panels of instruments or other objects associated with a computer program.

## H

h hour

hardware the physical components of a computer system, such as the circuit boards, plug-in boards, chassis, enclosures, peripherals, cables, and so on

HSYNC horizontal sync signal—the synchronization pulse signal produced at the beginning of each video scan line that keeps a video monitor's horizontal scan rate in step with the transmission of each new line

HSYNCIN horizontal sync input signal

hue represents the dominant color of a pixel. The hue function is a continuous function that covers all the possible colors generated using the R, G, and B primaries. *See also* RGB.

Hz hertz—the number of scans read or updates written per second

## I

IC	integrated circuit
ID	identification
IEEE	Institute of Electrical and Electronics Engineers
IMAQconf	a configuration and diagnostic utility included with IMAQ devices
in.	inches
INL	integral nonlinearity—A measure in LSB of the worst-case deviation from the ideal A/D or D/A transfer characteristic of the analog I/O circuitry
instrument driver	a set of high-level software functions, such as NI-IMAQ, that controls specific plug-in computer boards; instrument drivers are available in several forms, ranging from a function callable from a programming language to a virtual instrument (VI) in LabVIEW
interlaced	a video frame composed of two interleaved fields; the number of lines in a field are half the number of lines in an interlaced frame
interpreter	a software utility that executes source code from a high-level language such as Basic, C or Pascal, by reading one line at a time and executing the specified operation <i>See also</i> compiler.
interrupt	a computer signal indicating that the CPU should suspend its current task to service a designated activity
interrupt level	the relative priority at which a device can interrupt
I/O	input/output—the transfer of data to/from a computer system involving communications channels, operator interface devices, and/or data acquisition and control interfaces

**IRE** a relative unit of measure (named for the Institute of Radio Engineers). 0 IRE corresponds to the blanking level of a video signal, 100 IRE to the white level. Note that for CIR/PAL video the black level is equal to the blanking level or 0 IRE, while for RS-170/NTSC video the black level is at 7.5 IRE.

**IRQ** interrupt request

## **K**

**k** kilo—the standard metric prefix for 1,000, or  $10^3$ , used with units of measure such as volts, hertz, and meters

**K** kilo—the prefix for 1,024, or  $2^{10}$ , used with B in quantifying data or computer memory

**kbytes/s** a unit for data transfer that means 1,000 or  $10^3$  bytes/s

**Kword** 1,024 words of memory

## **L**

**library** a file containing compiled object modules, each comprised of one of more functions, that can be linked to other object modules that make use of these functions.

**line count** the total number of horizontal lines in the picture

**LSB** least significant bit

**luminance** the brightness information in the video picture. The luminance signal amplitude varies in proportion to the brightness of the video signal and corresponds exactly to the monochrome picture.

**LUT** look-up table—a selection in the `IMAQconf` configuration utility that contains formulas that let you implement simple imaging operations such as contrast enhancement, data inversion, gamma manipulation, or other nonlinear transfer functions

## **M**

**m** meters



M	(1) Mega, the standard metric prefix for 1 million or $10^6$ , when used with units of measure such as volts and hertz; (2) mega, the prefix for 1,048,576, or $2^{20}$ , when used with B to quantify data or computer memory
MB	megabytes of memory
Mbytes/s	a unit for data transfer that means 1 million or $10^6$ bytes/s
memory buffer	<i>See</i> buffer.
memory window	continuous blocks of memory that can be accessed quickly by changing addresses on the local processor
MSB	most significant bit
MTBF	mean time between failure
mux	multiplexer—a switching device with multiple inputs that selectively connects one of its inputs to its output
<b>N</b>	
NI-IMAQ	driver software for National Instruments IMAQ hardware
noninterlaced	a video frame where all the lines are scanned sequentially, instead of divided into two frames as in an interlaced video frame
NTSC	National Television Standards Committee—the committee that developed the color video standard used primarily in North America, which uses 525 lines per frame. <i>See also</i> PAL.
NVRAM	nonvolatile RAM—RAM that is not erased when a device loses power or is turned off
<b>O</b>	
operating system	base-level software that controls a computer, runs programs, interacts with users, and communicates with installed hardware or peripheral devices

**P**

PAL	Phase Alternation Line—one of the European video color standards; uses 625 lines per frame. <i>See also</i> NTSC.
PCI	Peripheral Component Interconnect—a high-performance expansion bus architecture originally developed by Intel to replace ISA and EISA; it is achieving widespread acceptance as a standard for PCs and workstations and offers a theoretical maximum transfer rate of 132 Mbytes/s
PCLK	pixel clock signal—times the sampling of pixels on a video line
PCLKIN	pixel clock in signal
PFI	programmable function input
PGIA	programmable gain instrumentation amplifier
picture aspect ratio	the ratio of the active pixel region to the active line region; for standard video signals like RS-170 or CCIR, the full-size picture aspect ratio normally is 4/3 (1.33)
pixel	picture element—the smallest division that makes up the video scan line; for display on a computer monitor, a pixel's optimum dimension is square (aspect ratio of 1:1, or the width equal to the height)
pixel aspect ratio	the ratio between the physical horizontal size and the vertical size of the region covered by the pixel; an acquired pixel should optimally be square, thus the optimal value is 1.0, but typically it falls between 0.95 and 1.05, depending on camera quality
pixel clock	divides the incoming horizontal video line into pixels
pixel count	the total number of pixels between two HYSNCs; the pixel count determines the frequency of the pixel clock
PLL	phase-locked loop—circuitry that provides a very stable pixel clock that is referenced to another signal, for example, an incoming HSYNC signal
protocol	the exact sequence of bits, characters, and control codes used to transfer data between computers and peripherals through a communications channel

pts                      points

## R

RAM                      random-access memory

real time                a property of an event or system in which data is processed as it is acquired instead of being accumulated and processed at a later time

relative accuracy      a measure in LSB of the accuracy of an ADC; it includes all nonlinearity and quantization errors but does not include offset and gain errors of the circuitry feeding the ADC

resolution              the smallest signal increment that can be detected by a measurement system; resolution can be expressed in bits, in proportions, or in percent of full scale. For example, a system has 12-bit resolution, one part in 4,096 resolution, and 0.0244 percent of full scale.

RGB                      red, green, and blue—the three primary colors used to represent a color picture. An RGB camera is a camera that deliver three signals, one for each primary.

ribbon cable            a flat cable in which the conductors are side by side

ROI                      region-of-interest; a hardware-programmable rectangular portion of the acquisition window

ROM                      read-only memory

RS-170                 the U.S. standard used for black-and-white television

RTSI bus                Real-Time System Integration Bus—the National Instruments timing bus that connects IMAQ and DAQ boards directly, by means of connectors on top of the boards, for precise synchronization of functions

## S

s                          seconds

saturation              the richness of a color. A saturation of zero corresponds to no color, that is, a gray pixel. Pink is a red with low saturation.

scaling down circuitry	circuitry that scales down the resolution of a video signal
scatter-gather DMA	a type of DMA that allows the DMA controller to reconfigure on-the-fly
SRAM	static RAM
StillColor	a post-processing algorithm that allows the acquisition of high-quality color images generated either by an RGB or composite (NTSC or PAL) camera using a monochrome video acquisition board.
sync	tells the display where to put a video picture; the horizontal sync indicates the picture's left-to-right placement and the vertical sync indicates top-to-bottom placement
syntax	the set of rules to which statements must conform in a particular programming language
system RAM	RAM installed on a personal computer and used by the operating system, as contrasted with onboard RAM

## T

transfer rate	the rate, measured in bytes/s, at which data is moved from source to destination after software initialization and set up operations; the maximum rate at which the hardware can operate
TRIG	trigger signal
trigger	any event that causes or starts some form of data capture
trigger control and mapping circuitry	circuitry that routes, monitors, and drives the external and RTSIbus trigger lines; you can configure each of these lines to start or stop acquisition on a rising or falling edge.
TTL	transistor-transistor logic

## U

UV plane	<i>See</i> YUV.
----------	-----------------

**V**

V volts

VCO voltage-controlled oscillator—an oscillator that changes frequency depending on a control signal; used in a PLL to generate a stable pixel clock

VI Virtual Instrument—(1) a combination of hardware and/or software elements, typically used with a PC, that has the functionality of a classic stand-alone instrument (2) a LabVIEW software module (VI), which consists of a front panel user interface and a block diagram program

video line a video line consists of a HSYNC, back porch, active pixel region, and a front porch

VSYNC vertical sync signal—the synchronization pulse generated at the beginning of each video field that tells the video monitor when to start a new field

VSYN CIN vertical sync in signal

**W**

white reference level the level that defines what is white for a particular video system  
*See also* black reference level.

**Y**

YUV a representation of a color image used for the coding of NTSC or PAL video signals. The luminance information is called Y, while the chrominance information is represented by two components, U and V representing the coordinates in a color plane.

**A**

acquisition functions, LabWindows/CVI, 1-3  
 acquisition window, definition, 1-7  
 architecture of NI-IMAQ, 1-8  
 area, definition, 1-7  
 attribute summary (table), A-1 to A-5

**B**

bulletin board support, C-1

**C**

constants summary (table), A-6 to A-11  
 customer communication, *xii*, C-1 to C-2

**D**

data types. *See* variable data types.  
 documentation  
   conventions used in manual, *x*  
   National Instruments documentation, *xi*  
   organization of manual, *ix-x*  
   related documentation, *xii*

**E**

electronic support services, C-1 to C-2  
 e-mail support, C-2

**F**

fax and telephone support, C-2  
 Fax-on-Demand support, C-2  
 FTP support, C-1

functions. *See also* high-level functions;  
 low-level functions.

  LabWindows/CVI function tree for image  
   acquisition, 1-3 to 1-5  
   status code summary (table), B-1 to B-3  
   status codes, 1-1

**G**

generic functions, 2-1 to 2-4  
   
   
   
 geometric definitions, 1-7  
 grab functions, 3-5 to 3-9  
   
   
   

**H**

high-level functions  
   grab functions, 3-5 to 3-9  
     
     
     
   LabWindows/CVI function tree, 1-3 to 1-4  
   miscellaneous functions, 3-17 to 3-22

- ring and sequence functions, 3-10 to 3-16
  - imgRingSetup, 3-11 to 3-12
  - imgSequenceSetup, 3-13 to 3-14
  - imgSessionStartAcquisition, 3-15
  - imgSessionStopAcquisition, 3-16
- snap functions, 3-1 to 3-4
  - imgSnap, 3-2
  - imgSnapArea, 3-3 to 3-4

**I**

- imgCameraAction function, 4-29
- imgClose function, 2-4
- imgCreateBuffer function, 4-30 to 4-31
- imgCreateBufList function, 4-32
- imgDisposeBuffer function, 4-33
- imgDisposeBufList function, 4-34
- imgGetAttribute function, 4-35
- imgGetBufferElement function, 4-36
- imgGrab function, 3-7
- imgGrabArea function, 3-8 to 3-9
- imgGrabSetup function, 3-6
- imgInterfaceLock function, 4-2
- imgInterfaceOpen function, 2-2
- imgInterfaceQueryNames function, 4-3
- imgInterfaceReset function, 4-4
- imgInterfaceUnlock function, 4-5
- imgMemLock function, 4-37
- imgMemUnlock function, 4-38
- imgPlot function, 4-39 to 4-40
- imgRingSetup function, 3-11 to 3-12
- imgSequenceSetup function, 3-13 to 3-14
- imgSessionAbort function, 4-7
- imgSessionAcquire function, 4-8
- imgSessionClearBuffer function, 4-9
- imgSessionClearTriggers function, 4-10
- imgSessionConfigure function, 4-11
- imgSessionCopyArea function, 4-12 to 4-13
- imgSessionCopyBuffer function, 4-14 to 4-15

- imgSessionExamineBuffer function, 4-16 to 4-17
- imgSessionGetBufferSize function, 3-22
- imgSessionGetROI function, 3-21
- imgSessionGetTriggerStatus function, 4-18
- imgSessionOpen function, 2-3
- imgSessionReleaseBuffer function, 4-19
- imgSessionSaveBuffer function, 4-20
- imgSessionSetROI function, 3-19 to 3-20
- imgSessionSetRTSImap function, 4-21 to 4-22
- imgSessionSetTrigger function, 4-23 to 4-24
- imgSessionStartAcquisition function, 3-15
- imgSessionStatus function, 3-18
- imgSessionStopAcquisition function, 3-16
- imgSessionWait function, 4-25
- imgSessionWaitAqdone function, 4-26
- imgSessionWaitVblank function, 4-27
- imgSetArrayPointerValue function, 4-41
- imgSetAttribute function, 4-42
- imgSetBufferElement function, 4-43
- imgShowError function, 4-44
- imgSnap function, 3-2
- imgSnapArea function, 3-3 to 3-4
- interface functions, 4-1 to 4-5
  - imgInterfaceLock, 4-2
  - imgInterfaceQueryNames, 4-3
  - imgInterfaceReset, 4-4
  - imgInterfaceUnlock, 4-5
- LabWindows/CVI function tree, 1-4

**L**

- LabVIEW application software, 1-2
- LabWindows/CVI function tree for image acquisition, 1-3 to 1-5
  - generic functions, 1-3
  - high-level functions
    - acquisition functions, 1-3

- miscellaneous functions, 1-4
- low-level functions
  - interface functions, 1-4
  - miscellaneous functions, 1-5
  - session functions, 1-4 to 1-5
- low-level functions
  - interface functions, 4-1 to 4-5
    - imgInterfaceLock, 4-2
    - imgInterfaceQueryNames, 4-3
    - imgInterfaceReset, 4-4
    - imgInterfaceUnlock, 4-5
  - LabWindows/CVI function tree, 1-4
- miscellaneous functions, 4-28 to 4-44
  - imgCameraAction, 4-29
  - imgCreateBuffer, 4-30 to 4-31
  - imgCreateBufList, 4-32
  - imgDisposeBuffer, 4-33
  - imgDisposeBufList, 4-34
  - imgGetAttribute, 4-35
  - imgGetBufferElement, 4-36
  - imgMemLock, 4-37
  - imgMemUnlock, 4-38
  - imgPlot, 4-39 to 4-40
  - imgSetArrayPointerValue function, 4-41
  - imgSetAttribute, 4-42
  - imgSetBufferElement, 4-43
  - imgShowError, 4-44
  - LabWindows/CVI function tree, 1-5
- session functions, 4-6 to 4-28
  - imgSessionAbort, 4-7
  - imgSessionAcquire, 4-8
  - imgSessionClearBuffer, 4-9
  - imgSessionClearTriggers, 4-10
  - imgSessionConfigure, 4-11
  - imgSessionCopyArea, 4-12 to 4-13
  - imgSessionCopyBuffer, 4-14 to 4-15
  - imgSessionExamineBuffer, 4-16 to 4-17
  - imgSessionGetTriggerStatus, 4-18

- imgSessionReleaseBuffer, 4-19
- imgSessionSaveBuffer, 4-20
- imgSessionSetRTSImap, 4-21 to 4-22
- imgSessionSetTrigger, 4-23 to 4-24
- imgSessionWait, 4-25
- imgSessionWaitAqdone function, 4-26
- imgSessionWaitVblank, 4-27
- LabWindows/CVI function tree, 1-4 to 1-5

## M

manual. *See* documentation.

miscellaneous functions

- high-level, 3-17 to 3-22

- imgSessionGetBufferSize, 3-22
- imgSessionGetROI, 3-21
- imgSessionSetROI, 3-19 to 3-20
- imgSessionStatus, 3-18
- LabWindows/CVI function tree, 1-4

- low-level, 4-28 to 4-44

- imgCameraAction, 4-29
- imgCreateBuffer, 4-30 to 4-31
- imgCreateBufList, 4-32
- imgDisposeBuffer, 4-33
- imgDisposeBufList, 4-34
- imgGetAttribute, 4-35
- imgGetBufferElement, 4-36
- imgMemLock, 4-37
- imgMemUnlock, 4-38
- imgPlot, 4-39 to 4-40
- imgSetArrayPointerValue function, 4-41
- imgSetAttribute, 4-42
- imgSetBufferElement, 4-43
- imgShowError, 4-44
- LabWindows/CVI function tree, 1-5



## N

- NI-IMAQ architecture, 1-8
- NI-IMAQ attribute summary (table), A-1 to A-5

## P

- programming language considerations, 1-2 to 1-6
  - code examples, 1-6
  - LabVIEW, 1-2
  - LabWindows/CVI, 1-3 to 1-5
  - other programming environments, 1-6

## R

- region of interest (ROI), definition, 1-7
- ring and sequence functions, 3-10 to 3-16
  - imgRingSetup, 3-11 to 3-12
  - imgSequenceSetup, 3-13 to 3-14
  - imgSessionStartAcquisition, 3-15
  - imgSessionStopAcquisition, 3-16

## S

- sequence functions. *See* ring and sequence functions.
- session functions, 4-6 to 4-27
  - imgSessionAbort, 4-7
  - imgSessionAcquire, 4-8
  - imgSessionClearBuffer, 4-9
  - imgSessionClearTriggers, 4-10
  - imgSessionConfigure, 4-11
  - imgSessionCopyArea, 4-12 to 4-13
  - imgSessionCopyBuffer, 4-14 to 4-15
  - imgSessionExamineBuffer, 4-16 to 4-17
  - imgSessionGetTriggerStatus, 4-18
  - imgSessionReleaseBuffer, 4-19
  - imgSessionSaveBuffer, 4-20
  - imgSessionSetRTSImap, 4-21 to 4-22
  - imgSessionSetTrigger, 4-23 to 4-24

- imgSessionWait, 4-25
- imgSessionWaitAqdone function, 4-26
- imgSessionWaitVblank, 4-27
- LabWindows/CVI function tree, 1-4 to 1-5

- snap functions, 3-1 to 3-4
  - imgSnap, 3-2
  - imgSnapArea, 3-3 to 3-4
- status codes, 1-1
  - summary (table), B-1 to B-3

## T

- technical support, C-1 to C-2

## V

- variable data types, 1-1 to 1-2
  - arrays, 1-2
  - primary type names and ranges (table), 1-2