

# **IMAQ™**

---

## **IMAQ PCI/PXI™ -1407 User Manual**

**High-Quality Monochrome Image Acquisition Boards  
for PCI, PXI, and CompactPCI Bus**

## **Worldwide Technical Support and Product Information**

www.ni.com

### **National Instruments Corporate Headquarters**

11500 North Mopac Expressway Austin, Texas 78759-3504 USA Tel: 512 794 0100

### **Worldwide Offices**

Australia 03 9879 5166, Austria 0662 45 79 90 0, Belgium 02 757 00 20, Brazil 011 284 5011,  
Canada (Calgary) 403 274 9391, Canada (Ontario) 905 785 0085, Canada (Québec) 514 694 8521,  
China 0755 3904939, Denmark 45 76 26 00, Finland 09 725 725 11, France 01 48 14 24 24,  
Germany 089 741 31 30, Greece 30 1 42 96 427, Hong Kong 2645 3186, India 91805275406,  
Israel 03 6120092, Italy 02 413091, Japan 03 5472 2970, Korea 02 596 7456, Mexico (D.F.) 5 280 7625,  
Mexico (Monterrey) 8 357 7695, Netherlands 0348 433466, Norway 32 27 73 00, Poland 48 22 528 94 06,  
Portugal 351 1 726 9011, Singapore 2265886, Spain 91 640 0085, Sweden 08 587 895 00,  
Switzerland 056 200 51 51, Taiwan 02 2377 1200, United Kingdom 01635 523545

For further support information, see the *Technical Support Resources* appendix. To comment on the documentation, send e-mail to [techpubs@ni.com](mailto:techpubs@ni.com)

# Important Information

---

## Warranty

The IMAQ PCI-1407 and PXI-1407 are warranted against defects in materials and workmanship for a period of one year from the date of shipment, as evidenced by receipts or other documentation. National Instruments will, at its option, repair or replace equipment that proves to be defective during the warranty period. This warranty includes parts and labor.

The media on which you receive National Instruments software are warranted not to fail to execute programming instructions, due to defects in materials and workmanship, for a period of 90 days from date of shipment, as evidenced by receipts or other documentation. National Instruments will, at its option, repair or replace software media that do not execute programming instructions if National Instruments receives notice of such defects during the warranty period. National Instruments does not warrant that the operation of the software shall be uninterrupted or error free.

A Return Material Authorization (RMA) number must be obtained from the factory and clearly marked on the outside of the package before any equipment will be accepted for warranty work. National Instruments will pay the shipping costs of returning to the owner parts which are covered by warranty.

National Instruments believes that the information in this document is accurate. The document has been carefully reviewed for technical accuracy. In the event that technical or typographical errors exist, National Instruments reserves the right to make changes to subsequent editions of this document without prior notice to holders of this edition. The reader should consult National Instruments if errors are suspected. In no event shall National Instruments be liable for any damages arising out of or related to this document or the information contained in it.

EXCEPT AS SPECIFIED HEREIN, NATIONAL INSTRUMENTS MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND SPECIFICALLY DISCLAIMS ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. CUSTOMER'S RIGHT TO RECOVER DAMAGES CAUSED BY FAULT OR NEGLIGENCE ON THE PART OF NATIONAL INSTRUMENTS SHALL BE LIMITED TO THE AMOUNT THEREFORE PAID BY THE CUSTOMER. NATIONAL INSTRUMENTS WILL NOT BE LIABLE FOR DAMAGES RESULTING FROM LOSS OF DATA, PROFITS, USE OF PRODUCTS, OR INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF. This limitation of the liability of National Instruments will apply regardless of the form of action, whether in contract or tort, including negligence. Any action against National Instruments must be brought within one year after the cause of action accrues. National Instruments shall not be liable for any delay in performance due to causes beyond its reasonable control. The warranty provided herein does not cover damages, defects, malfunctions, or service failures caused by owner's failure to follow the National Instruments installation, operation, or maintenance instructions; owner's modification of the product; owner's abuse, misuse, or negligent acts; and power failure or surges, fire, flood, accident, actions of third parties, or other events outside reasonable control.

## Copyright

Under the copyright laws, this publication may not be reproduced or transmitted in any form, electronic or mechanical, including photocopying, recording, storing in an information retrieval system, or translating, in whole or in part, without the prior written consent of National Instruments Corporation.

## Trademarks

BridgeVIEW™, ComponentWorks™, CVI™, IMAQ™, LabVIEW™, MITE™, National Instruments™, ni.com™, NI-IMAQ™, PXI™, and RTSI™ are trademarks of National Instruments Corporation.

Product and company names mentioned herein are trademarks or trade names of their respective companies.

## WARNING REGARDING USE OF NATIONAL INSTRUMENTS PRODUCTS

(1) NATIONAL INSTRUMENTS PRODUCTS ARE NOT DESIGNED WITH COMPONENTS AND TESTING FOR A LEVEL OF RELIABILITY SUITABLE FOR USE IN OR IN CONNECTION WITH SURGICAL IMPLANTS OR AS CRITICAL COMPONENTS IN ANY LIFE SUPPORT SYSTEMS WHOSE FAILURE TO PERFORM CAN REASONABLY BE EXPECTED TO CAUSE SIGNIFICANT INJURY TO A HUMAN.

(2) IN ANY APPLICATION, INCLUDING THE ABOVE, RELIABILITY OF OPERATION OF THE SOFTWARE PRODUCTS CAN BE IMPAIRED BY ADVERSE FACTORS, INCLUDING BUT NOT LIMITED TO FLUCTUATIONS IN ELECTRICAL POWER SUPPLY, COMPUTER HARDWARE MALFUNCTIONS, COMPUTER OPERATING SYSTEM SOFTWARE FITNESS, FITNESS OF COMPILERS AND DEVELOPMENT SOFTWARE USED TO DEVELOP AN APPLICATION, INSTALLATION ERRORS, SOFTWARE AND HARDWARE COMPATIBILITY PROBLEMS, MALFUNCTIONS OR FAILURES OF ELECTRONIC MONITORING OR CONTROL DEVICES, TRANSIENT FAILURES OF ELECTRONIC SYSTEMS (HARDWARE AND/OR SOFTWARE), UNANTICIPATED USES OR MISUSES, OR ERRORS ON THE PART OF THE USER OR APPLICATIONS DESIGNER (ADVERSE FACTORS SUCH AS THESE ARE HEREAFTER COLLECTIVELY TERMED "SYSTEM FAILURES"). ANY APPLICATION WHERE A SYSTEM FAILURE WOULD CREATE A RISK OF HARM TO PROPERTY OR PERSONS (INCLUDING THE RISK OF BODILY INJURY AND DEATH) SHOULD NOT BE RELIANT SOLELY UPON ONE FORM OF ELECTRONIC SYSTEM DUE TO THE RISK OF SYSTEM FAILURE. TO AVOID DAMAGE, INJURY, OR DEATH, THE USER OR APPLICATION DESIGNER MUST TAKE REASONABLY PRUDENT STEPS TO PROTECT AGAINST SYSTEM FAILURES, INCLUDING BUT NOT LIMITED TO BACK-UP OR SHUT-DOWN MECHANISMS. BECAUSE EACH END-USER SYSTEM IS CUSTOMIZED AND DIFFERS FROM NATIONAL INSTRUMENTS' TESTING PLATFORMS AND BECAUSE A USER OR APPLICATION DESIGNER MAY USE NATIONAL INSTRUMENTS PRODUCTS IN COMBINATION WITH OTHER PRODUCTS IN A MANNER NOT EVALUATED OR CONTEMPLATED BY NATIONAL INSTRUMENTS, THE USER OR APPLICATION DESIGNER IS ULTIMATELY RESPONSIBLE FOR VERIFYING AND VALIDATING THE SUITABILITY OF NATIONAL INSTRUMENTS PRODUCTS WHENEVER NATIONAL INSTRUMENTS PRODUCTS ARE INCORPORATED IN A SYSTEM OR APPLICATION, INCLUDING, WITHOUT LIMITATION, THE APPROPRIATE DESIGN, PROCESS AND SAFETY LEVEL OF SUCH SYSTEM OR APPLICATION.

# Compliance

---

## FCC/Canada Radio Frequency Interference Compliance\*

### Determining FCC Class


The Federal Communications Commission (FCC) has rules to protect wireless communications from interference. The FCC places digital electronics into two classes. These classes are known as Class A (for use in industrial-commercial locations only) or Class B (for use in residential or commercial locations). Depending on where it is operated, this product could be subject to restrictions in the FCC rules. (In Canada, the Department of Communications (DOC), of Industry Canada, regulates wireless interference in much the same way.)

Digital electronics emit weak signals during normal operation that can affect radio, television, or other wireless products. By examining the product you purchased, you can determine the FCC Class and therefore which of the two FCC/DOC Warnings apply in the following sections. (Some products may not be labelled at all for FCC, if so the reader should then assume these are Class A devices.)

FCC Class A products only display a simple warning statement of one paragraph in length regarding interference and undesired operation. Most of our products are FCC Class A. The FCC rules have restrictions regarding the locations where FCC Class A products can be operated.

FCC Class B products display either a FCC ID code, starting with the letters **EXN**, or the FCC Class B compliance mark that appears as shown here on the right.

The curious reader can consult the FCC web site <http://www.fcc.gov> for more information.



### FCC/DOC Warnings

This equipment generates and uses radio frequency energy and, if not installed and used in strict accordance with the instructions in this manual and the CE Mark Declaration of Conformity\*\*, may cause interference to radio and television reception. Classification requirements are the same for the Federal Communications Commission (FCC) and the Canadian Department of Communications (DOC).

Changes or modifications not expressly approved by National Instruments could void the user's authority to operate the equipment under the FCC Rules.

### Class A

#### Federal Communications Commission

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

#### Canadian Department of Communications

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

### Class B

#### Federal Communications Commission

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful

interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **Canadian Department of Communications**

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

## **European Union - Compliance to EEC Directives**

Readers in the EU/EEC/EEA must refer to the Manufacturer's Declaration of Conformity (DoC) for information\*\* pertaining to the CE Mark compliance scheme. The Manufacturer includes a DoC for most every hardware product except for those bought for OEMs, if also available from an original manufacturer that also markets in the EU, or where compliance is not required as for electrically benign apparatus or cables.

\* Certain exemptions may apply in the USA, see FCC Rules §15.103 **Exempted devices**, and §15.105(c). Also available in sections of CFR 47.

\*\* The CE Mark Declaration of Conformity will contain important supplementary information and instructions for the user or installer.

# Conventions

---

The following conventions are used in this manual:



The ♦ symbol indicates that the following text applies only to a specific product, a specific operating system, or a specific software version.



This icon denotes a note, which alerts you to important information.



This icon denotes a warning, which advises you of precautions to take to avoid being electrically shocked.

*italic*

Italic text denotes variables, emphasis, a cross reference, or an introduction to a key concept. This font also denotes text that is a placeholder for a word or value that you must supply.

# Contents

---

## Chapter 1

### Introduction

About Your PCI/PXI-1407 .....	1-1
Using PXI with CompactPCI.....	1-2
Software Programming Choices .....	1-2
NI-IMAQ Driver Software .....	1-4
National Instruments IMAQ Vision .....	1-5
IMAQ Vision Builder .....	1-5
Integration with DAQ.....	1-6
Vision and Motion.....	1-6

## Chapter 2

### Installation

What You Need to Get Started .....	2-1
Optional Equipment .....	2-2
How to Set up Your IMAQ System.....	2-2
Unpacking .....	2-4
Installation .....	2-4

## Chapter 3

### Hardware Overview

Functional Overview.....	3-1
Video Buffer.....	3-2
Gain and Offset Circuitry .....	3-2
8-Bit ADC and LUT .....	3-2
CSYNC Mux .....	3-3
Genlock SYNC Generator .....	3-3
Pixel Aspect Ratio Circuitry.....	3-3
Acquisition and Region-of-Interest Control.....	3-3
FIFO Buffer .....	3-3
Scatter-Gather DMA Controllers .....	3-3
PCI Interface.....	3-4
Trigger Control.....	3-4
Video Acquisition .....	3-4
Start Conditions .....	3-4
Acquisition Window Control .....	3-5
Programming Video Parameters.....	3-6
Acquisition Modes .....	3-7

## Chapter 4 Signal Connections

BNC Connectors.....	4-1
I/O Connector Signal Connection Descriptions.....	4-2

## Appendix A Specifications

## Appendix B Technical Support Resources

## Glossary

## Index

## Figures

Figure 1-1. The Relationship between the Programming Environment, NI-IMAQ, and Your Hardware.....	1-3
Figure 1-2. NI-IMAQ Functions.....	1-4
Figure 1-3. IMAQ Vision Builder and Application Development Tools .....	1-5
Figure 2-1. How to Set up Your IMAQ System.....	2-3
Figure 3-1. PCI/PXI-1407 Block Diagram.....	3-2
Figure 3-2. Positive Video Line.....	3-5
Figure 3-3. Video Field.....	3-6
Figure 4-1. PCI/PXI-1407 BNC I/O Connectors.....	4-1

## Table

Table 4-1. I/O Connector Signals.....	4-2
---------------------------------------	-----



---

# Introduction

This chapter describes the IMAQ PCI-1407 and PXI-1407 devices and describes your software programming choices.

## About Your PCI/PXI-1407

---

The PCI-1407 and PXI-1407 are high-accuracy, monochrome IMAQ boards for PCI, PXI, or CompactPCI chassis that support RS-170 and CCIR video standards. The boards feature an 8-bit flash analog-to-digital converter (ADC) that converts video signals into digital form. The PCI/PXI-1407 acquires frames in real time and transfers them directly to system memory.

The PCI/PXI-1407 is simple to configure so that you can easily install the board and begin your image acquisition. The PCI/PXI-1407 ships with NI-IMAQ, the National Instruments complete image acquisition driver software you can use to directly control your board. Using NI-IMAQ, you can quickly and easily start your application without having to program the board at the register level.

Featuring low cost and high accuracy, the PCI/PXI-1407 is ideal for both industrial and scientific environments. As a standalone board, the PCI/PXI-1407 supports one video source and an external I/O line that you can use as a trigger or digital I/O line. If you require more advanced triggering or additional I/O lines (either digital or analog), you can use the PCI/PXI-1407 and NI-IMAQ with the National Instruments data acquisition (DAQ) product line.

Detailed specifications of the PCI/PXI-1407 are in Appendix A, [\*Specifications\*](#).

## Using PXI with CompactPCI

---


Using PXI-compatible products with standard CompactPCI products is an important feature provided by the *PXI Specification*, Revision 1.0. If you use a PXI-compatible plug-in device in a standard CompactPCI chassis, you will be unable to use PXI-specific functions, but you can still use the basic plug-in device functions.

The CompactPCI specification permits vendors to develop sub-buses that coexist with the basic PCI interface on the CompactPCI bus. Compatible operation is not guaranteed between CompactPCI devices with different sub-buses nor between CompactPCI devices with sub-buses and PXI. The standard implementation for CompactPCI does not include these sub-buses. Your PXI-1407 device will work in any standard CompactPCI chassis adhering to the *PICMG 2.0 R2.1 CompactPCI* core specification.

## Software Programming Choices

---


Using NI-IMAQ, the National Instruments image acquisition driver software, you can program your IMAQ board to acquire and save images. You can use NI-IMAQ with other National Instruments software for a complete image acquisition and analysis solution, as shown in Figure 1. NI-IMAQ works with LabVIEW, BridgeVIEW, LabWindows/CVI, as well as conventional programming languages. National Instruments IMAQ Vision adds powerful image processing and analysis to these programming environments. You can also use IMAQ Vision Builder to quickly and easily prototype your IMAQ image analysis applications.

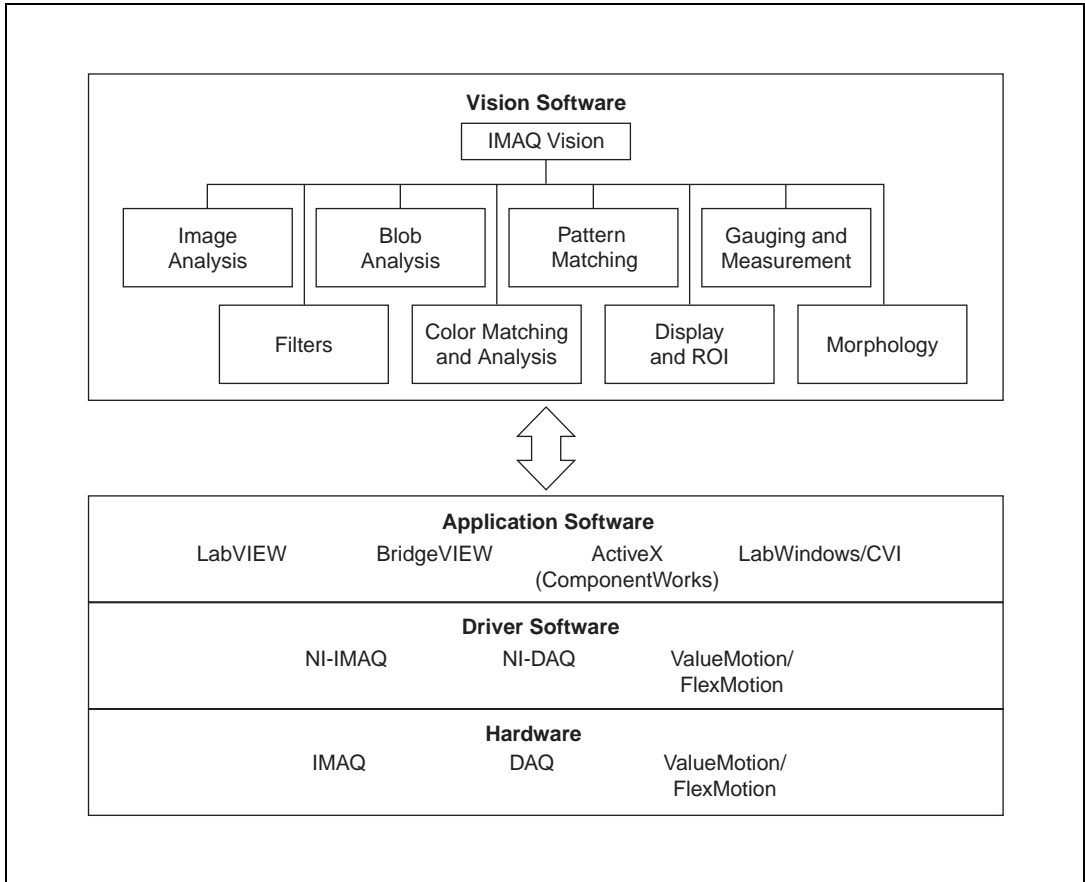

**Figure 1-1.** The Relationship between the Programming Environment, NI-IMAQ, and Your Hardware

## NI-IMAQ Driver Software

The NI-IMAQ driver software is included with your IMAQ device. NI-IMAQ has an extensive library of functions that you can call from your application programming environment. These functions include routines for video configuration, image acquisition (continuous and single-shot), memory buffer allocation, trigger control, and board configuration, as shown in Figure 1-2.

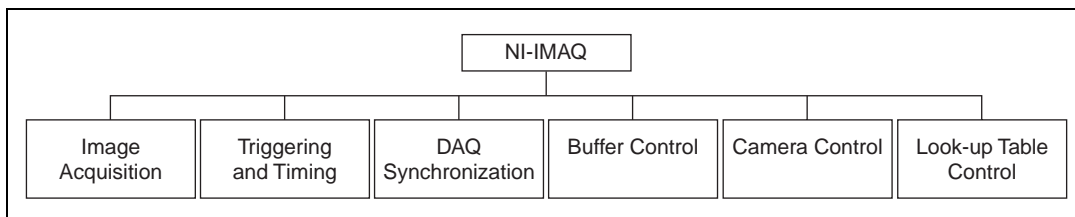

**Figure 1-2.** NI-IMAQ Functions

The NI-IMAQ driver software performs all functions required for acquiring and saving images. The NI-IMAQ software does not perform any image analysis. For image analysis functionality, refer to the *National Instruments IMAQ Vision* section in this chapter.

NI-IMAQ has both high-level and low-level functions for maximum flexibility and performance. Examples of high-level functions include the functions to acquire images in single-shot or continuous mode. An example of a low-level function is configuring an image sequence since it requires advanced understanding of your IMAQ device and image acquisition.

NI-IMAQ internally resolves many of the complex issues between the computer and your IMAQ device, such as programming interrupts and DMA controllers.

NI-IMAQ is also the interface path between LabVIEW, BridgeVIEW, LabWindows/CVI, or a conventional programming environment and your IMAQ device. The NI-IMAQ software kit includes a series of libraries for G, LabWindows/CVI, and ComponentWorks (ActiveX) that are functionally equivalent to the NI-IMAQ software.

## National Instruments IMAQ Vision

IMAQ Vision is an image acquisition, processing, and analysis library of more than 200 functions for grayscale, color, and binary image display, image processing, pattern matching, shape matching, blob analysis, gauging, and measurement.


You can use IMAQ Vision functions directly or in combination for unique image processing. With IMAQ Vision you can acquire, display, manipulate, and store images as well as perform image analysis, processing, and interpretation. Using IMAQ Vision, an imaging novice or expert can perform graphical programming of the most basic or complicated image applications without knowledge of any algorithm implementations.

IMAQ Vision is available for LabVIEW, BridgeVIEW, LabWindows/CVI, Microsoft Visual C++, or ComponentWorks.

## IMAQ Vision Builder

IMAQ Vision Builder is an interactive prototyping tool for machine vision and scientific imaging developers. With IMAQ Vision Builder, you can prototype vision software quickly or test how various vision image processing functions work.

As shown in Figure 1-3, IMAQ Vision Builder generates a Builder file, which is a text description that contains a recipe of the machine vision and image processing functions. This Builder file provides a guide you can use to develop applications with IMAQ Vision in LabVIEW, BridgeVIEW, LabWindows/CVI, and ComponentWorks.

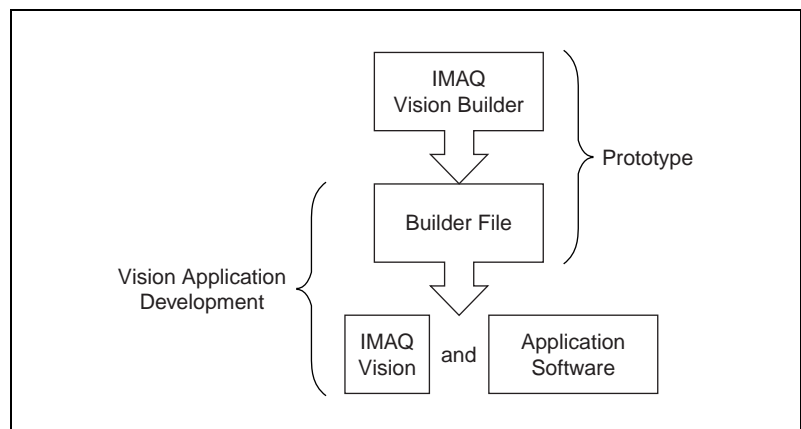

**Figure 1-3.** IMAQ Vision Builder and Application Development Tools

## Integration with DAQ

Any platform that supports NI-IMAQ also supports NI-DAQ and a variety of National Instruments DAQ boards, so your IMAQ device and NI-IMAQ development can integrate with National Instruments DAQ products.

## Vision and Motion

With National Instruments IMAQ hardware and IMAQ Vision pattern matching software you can quickly and accurately locate objects in instances where objects vary in size, orientation, focus, and even when the part is poorly illuminated. Use National Instruments high-performance stepper and servo motion control products with pattern matching software in inspection and guidance applications such as locating alignment markers on semiconductor wafers, guiding robotic arms, inspecting the quality of manufactured parts, and locating cells.

---

# Installation

This chapter lists what you need to get started acquiring images with your IMAQ device; describes optional equipment and custom cables; and explains how to unpack, configure, and install your IMAQ device.

## What You Need to Get Started

---

To set up and use your PCI/PXI-1407, you will need the following:

- One of the following 1407 devices:
  - PCI-1407
  - PXI-1407
- Getting Started with Your IMAQ System*
- NI-IMAQ release notes
- IMAQ PCI/PXI-1407 User Manual*
- NI-IMAQ for Windows 2000/NT/9x and online documentation
- Optional software packages and documentation:
  - IMAQ Vision for G, LabWindows/CVI, or ComponentWorks
  - IMAQ Vision Builder
  - LabVIEW
  - BridgeVIEW
  - LabWindows/CVI
- IMAQ BNC-1 shielded, 75  $\Omega$  BNC cable for VIDEO (included with your PCI-1407)
- Your Pentium-based PCI, PXI, or CompactPCI computer running Windows 2000, Windows NT, or Windows 9x
- A video camera or other video source



**Note** The IMAQ PCI/PXI-1407 relies on your computer's PCI interface chipset for the highest throughput to system memory. For the best results, your computer should have a Pentium or better processor and an Intel 430 or 440 series or compatible PCI interface chipset.

## Optional Equipment

---

National Instruments offers a variety of products for use with your PCI/PXI-1407, including other National Instruments DAQ devices for enhanced triggering, timing, or input/output.

For more specific information about these products, refer to your National Instruments catalogue or Web site, or call the office nearest you.

## How to Set up Your IMAQ System


---

Use Figure 2-1 as a guide while you install your software and hardware, configure your hardware, and begin using NI-IMAQ in your application programs.

Follow the instructions in the *Getting Started with Your IMAQ System* document to install your NI-IMAQ software and IMAQ hardware.

If you will be accessing the NI-IMAQ device drivers through LabVIEW or BridgeVIEW, you should read the NI-IMAQ release notes and the *NI-IMAQ VI Reference Manual* to help you get started.



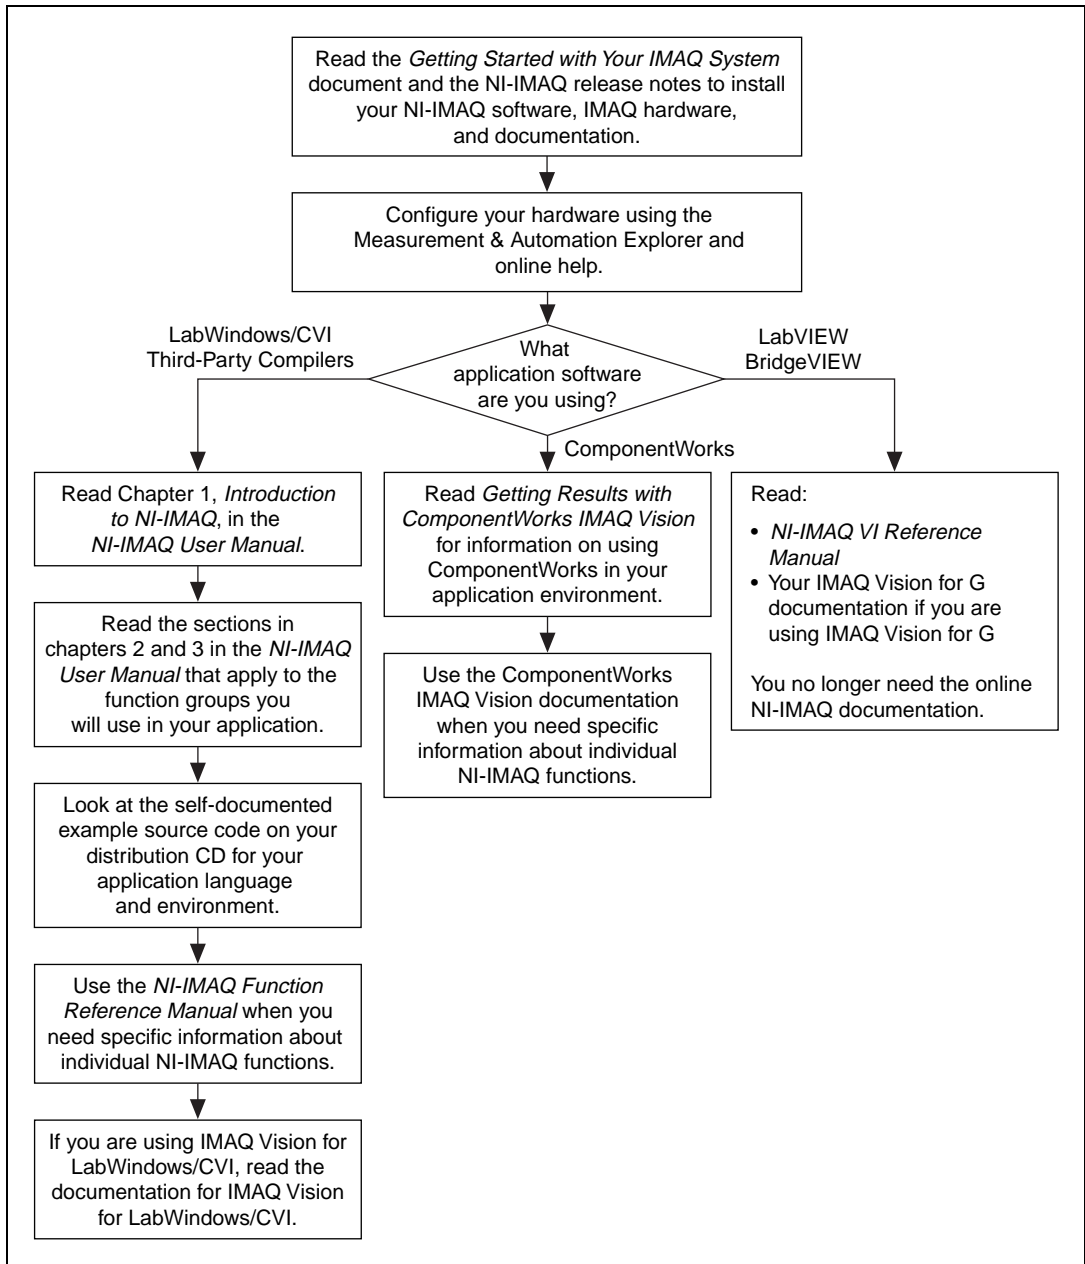

**Figure 2-1.** How to Set up Your IMAQ System

## Unpacking

---

Your PCI/PXI-1407 is shipped in an antistatic package to prevent electrostatic damage to the board. Electrostatic discharge can damage several components on the board. To avoid such damage in handling the board, take the following precautions:

- Ground yourself via a grounding strap or by holding a grounded object.
- Touch the antistatic package to a metal part of your computer chassis before removing the board from the package.
- Remove the board from the package and inspect the board for loose components or any other signs of damage. Notify National Instruments if the board appears damaged in any way. Do *not* install a damaged board in your computer.
- *Never* touch the exposed pins of connectors.

## Installation

---



**Note** You must install the NI-IMAQ driver software before installing your PCI/PXI-1407. For information on how to install NI-IMAQ, please see the *Getting Started with Your IMAQ System* document and your NI-IMAQ release notes.

◆ PCI-1407

You can install the PCI-1407 in any available PCI expansion slot in your computer. However, to achieve the best noise performance, you should leave as much room as possible between the PCI-1407 and other boards and hardware. The following are general instructions, but consult your computer user manual or technical reference manual for specific instructions and warnings.

1. Plug in but do not turn on your computer before installing the PCI-1407. The power cord grounds the computer and protects it from electrical damage while you are installing the module.



**Warning** To protect both yourself and the computer from electrical hazards, the computer should remain off until you finish installing the PCI-1407.

2. Remove the top cover or access port to the PCI bus.
3. Select any available PCI expansion slot.

4. Locate the metal bracket that covers the cut-out in the back panel of the chassis for the slot you have selected. Remove and save the bracket-retaining screw and the bracket cover.
5. Touch the metal part of the power supply case inside the computer to discharge any static electricity that might be on your clothes or body.
6. Line up the PCI-1407 with the BNC connectors near the cut-out on the back panel. Slowly push down on the top of the PCI-1407 until its card-edge connector is resting on the expansion slot receptacle. Using slow, evenly distributed pressure, press the PCI-1407 straight down until it seats in the expansion slot.
7. Reinstall the bracket-retaining screw to secure the PCI-1407 to the back panel rail.
8. Check the installation.
9. Replace the computer cover.

Your PCI-1407 is now installed.

◆ **PXI-1407**

You can install a PXI-1407 in any available 5 V peripheral slot in your PXI or CompactPCI chassis.

1. Turn off and unplug your PXI or CompactPCI chassis.
2. Choose an unused PXI or CompactPCI 5 V peripheral slot. Install the PXI-1407 in a slot that supports bus arbitration or bus-master cards. PXI-compliant chassis must have bus arbitration for all slots.
3. Remove the filler panel for the peripheral slot you have chosen.
4. Touch a metal part on your chassis to discharge any static electricity that might be on your clothes or body.
5. Insert the PXI-1407 in the selected 5 V slot. Use the injector/ejector handle to fully inject the device into place.
6. Screw the front panel of the PXI-1407 to the front panel mounting rails of the PXI or CompactPCI chassis.
7. Visually verify the installation.
8. Plug in and turn on the PXI or CompactPCI chassis.

Your PXI-1407 is now installed.

---

# Hardware Overview


This chapter presents an overview of the hardware functions on your PCI/PXI-1407 and explains the operation of each functional unit making up the PCI/PXI-1407.

## Functional Overview

---

The PCI/PXI 1407 features an 8-bit flash ADC that converts analog video signals into digital form. The board has both gain and offset circuitry to optimize the input signal range of the ADC. It also features a PCI interface for high-speed data transfer. The scatter-gather DMA controllers transfer the digitized image data from a set of first-in, first-out (FIFO) memory buffers to the computer's system memory via the PCI bus. The board also includes a trigger for controlling the image acquisition.

The block diagram in Figure 3-1 illustrates the key functional components of the PCI-1407 and PXI-1407.

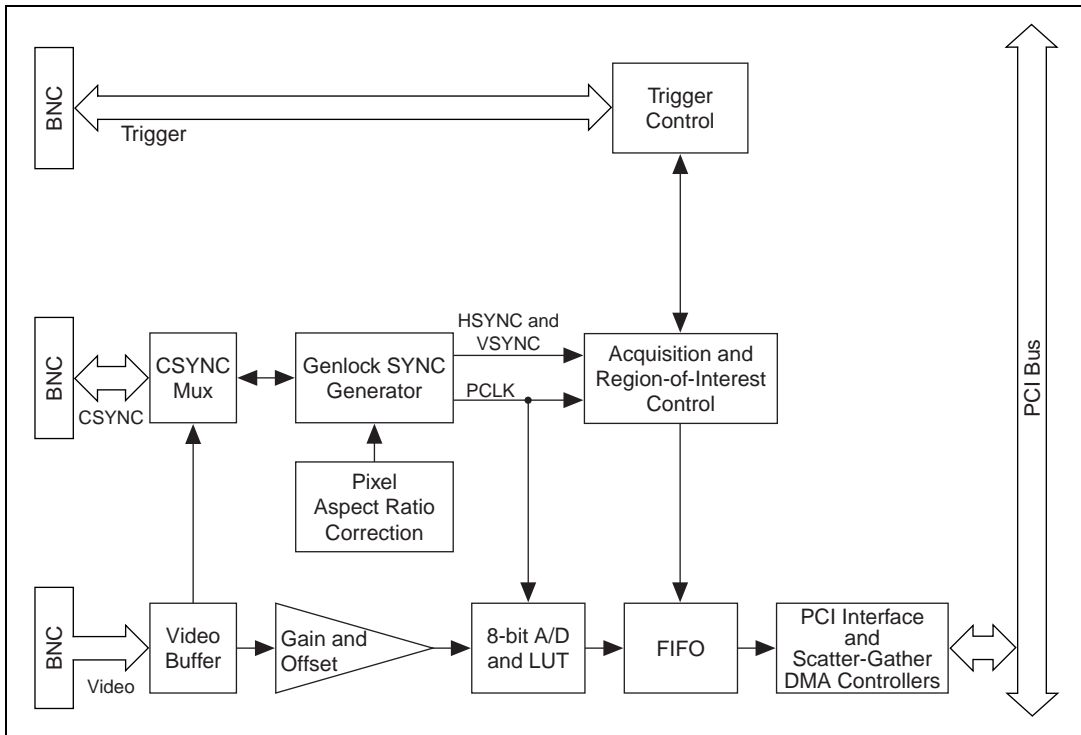

**Figure 3-1.** PCI/PXI-1407 Block Diagram

## Video Buffer

The video buffer provides a 75  $\Omega$  termination for the incoming video signal and drives the onboard electronics.

## Gain and Offset Circuitry

The PCI/PXI-1407 uses programmable gain and offset circuitry to optimize the input signal range.

## 8-Bit ADC and LUT

An 8-bit flash ADC digitizes the image, which is passed to a 256-by-8 bit lookup table (LUT) RAM. You can configure the input LUT to implement simple imaging operations such as contrast enhancement, data inversion, gamma manipulation, or other nonlinear transfer functions.

## CSYNC Mux

This multiplexer routes either the video signal or an external CSYNC signal to the genlock circuit. If this circuit routes the video signal to the genlock circuit, then the internally generated CSYNC can be routed to the BNC as an output signal.

## Genlock SYNC Generator

This circuit generates the necessary clock and synchronization signals to digitize the incoming video signal correctly. The genlock circuit can produce pixel clock frequencies between 11.66 MHz and 15.78 MHz, which accommodate RS-170 and CCIR-601 video standards.

## Pixel Aspect Ratio Circuitry

The pixel aspect ratio is the ratio between the horizontal size to the vertical size of the pixel. Use this value to adjust or correct the picture aspect ratio. For more information, see the [Acquisition Window Control](#) section later in this chapter.

## Acquisition and Region-of-Interest Control

The acquisition and region-of-interest control circuitry monitors the incoming video signal and routes the active pixels to the FIFO buffers. The PCI/PXI-1407 can digitize an entire frame and perform pixel and line scaling and region-of-interest acquisition. Pixel and line scaling lets the PCI-1407 transfer certain multiples (2, 4, or 8) of pixels and lines to the PCI bus. In region-of-interest acquisition, you select an area in the acquisition window to transfer to the PCI bus.

## FIFO Buffer

The PCI/PXI-1407 uses a 4 KB FIFO buffer for temporary storage of the image being transferred to the PCI system memory or display memory. The buffer stores six full video lines during image acquisition.

## Scatter-Gather DMA Controllers

The PCI/PXI-1407 uses three independent onboard direct memory access (DMA) controllers. The DMA controllers transfer data between the onboard first-in first-out (FIFO) memory buffers and the PCI bus. Each of these controllers supports scatter-gather DMA, which allows the DMA

controller to reconfigure on-the-fly. Thus, the PCI/PXI-1407 can perform continuous image transfers to either contiguous or fragmented memory buffers.

## PCI Interface

The PCI/PXI-1407 implements the PCI interface with a National Instruments custom application-specific integrated circuit (ASIC), the PCI MITE. The PCI interface can transfer data at a maximum rate of 132 Mbytes/s in master mode, which maximizes the available PCI bandwidth. The PCI/PXI-1407 can generate 8-, 16-, and 32-bit memory read and write cycles, both single and multiple. In slave mode, the PCI/PXI-1407 is a medium speed decoder that accepts both memory and configuration cycles. The interface logic ensures that the PCI/PXI-1407 meets the loading, driving, and timing requirements of the PCI specification.

## Trigger Control

This circuit controls the direction and functionality of the external trigger line. The trigger can start an image acquisition when used as an input signal. As an output signal, the control circuit can drive the line asserted or unasserted to trigger an external event. Also, it can connect internal signals such as HSYNC and VSYNC to the trigger line.

## Video Acquisition

---

The PCI/PXI-1407 can acquire video signals in a variety of modes and transfer the digitized fields or frames to PCI system memory.

## Start Conditions

The PCI/PXI-1407 can start acquisition on a variety of conditions:


- Software control—The PCI/PXI-1407 supports software control of acquisition start and stop. In addition, you can configure the PCI/PXI-1407 to capture a fixed number of frames. Use this configuration to capture single frames or a sequence of frames.
- Trigger control—You can also start an acquisition by using the external trigger line, which can start video acquisition on a rising or falling edge.

- Delayed acquisition—You can use either software or the trigger to start and stop acquisitions instantaneously or after capturing a desired number of frames or fields. Use this feature for trigger applications.
- Frame/field selection—With an interlaced camera and the PCI/PXI-1407 in frame mode, you can program the PCI/PXI-1407 to start acquisition on any odd field or any even field.

## Acquisition Window Control

You can configure numerous parameters on the PCI/PXI-1407 to control the video acquisition window. A brief description of each parameter follows:

- Active pixel region—The active pixel region is the region of pixels actively being stored. The active pixel region is defined by a pixel start (relative to HSYNC) and a pixel count.
- Horizontal count—The horizontal count is the total number of pixels between two HSYNC signals. The horizontal count determines the frequency of the pixel clock.
- Active line region—The active line region is the region of lines actively being stored. The active line region is defined by a line start (relative to VSYNC) and a line count.
- Line count—The line count is the total number of horizontal lines in the picture.
- Video line—A video line consists of an HSYNC, back porch, active pixel region, and a front porch. The 1407 device requires a positive video signal, as shown in Figure 3-2.

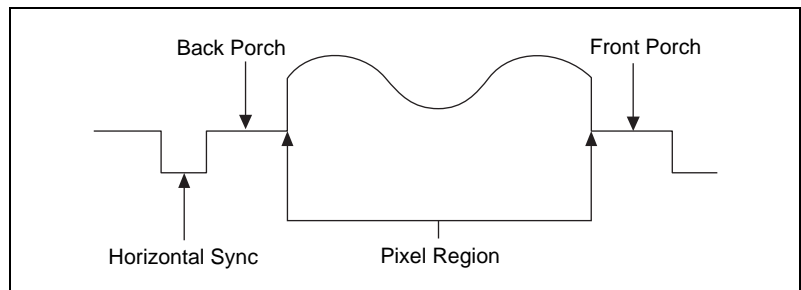


**Figure 3-2.** Positive Video Line

- Picture aspect ratio—The picture aspect ratio is the ratio of the active pixel region to the active line region. For standard video signals like RS-170 or CCIR, the full-size picture aspect ratio normally is 4/3 (1.33).



- Pixel aspect ratio—The pixel aspect ratio is the ratio between the physical horizontal size and the vertical size of the region covered by the pixel. An acquired pixel should optimally be square, thus the optimal value is 1.0, but typically it falls between 0.95 and 1.05, depending on camera quality.
- Field—For an interlaced video signal, a field is half the number of horizontal lines needed to represent a frame, as shown in Figure 3-3. The first field of a frame contains all the odd-numbered lines. The second field contains all of the even-numbered lines.

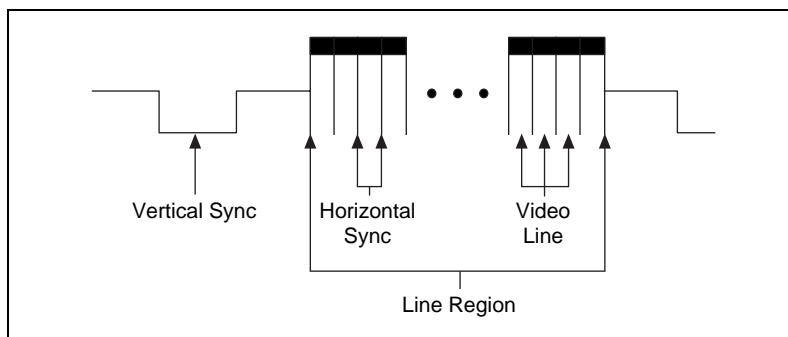

**Figure 3-3.** Video Field

- Frame—A frame is a complete image. In interlaced formats, a frame is composed of two fields.

## Programming Video Parameters

You can program all of these video parameters on the PCI/PXI-1407:

- Programmable pixel and line count—The PCI/PXI-1407 uses an advanced genlock circuit to generate an internal PCLK. This circuit generates a PCLK frequency from 11.7 to 15.8 MHz, depending on the total number of pixels per line. The standard sampling rate for RS-170 video signals is 12.27 MHz, and the standard sampling rate for CCIR is 14.75 MHz.

The PCI/PXI-1407 also includes a programmable line count, which you use to switch between RS-170 (525 lines) and CCIR (625 lines).

- Acquisition window—After setting the pixel and line count, you must program the active pixel region and active line region. The active pixel region selects the starting pixel and number of pixels to be acquired relative to the HSYNC signal. The active line region selects the starting line and number of lines to be acquired relative to the VSYNC signal.

- **Region of interest**—The PCI/PXI-1407 uses a second level of active pixel and active line regions for selecting a region of interest. When you disable the region-of-interest circuitry, the board stores the entire acquisition window in system memory. However, when you enable the region-of-interest circuitry, the board transfers only a selected subset of the digitized frame to system memory.
- **Scaling down**—The PCI/PXI-1407 can scale down a frame by reducing pixels, lines, or both. For active pixel selection, the PCI/PXI-1407 can select every pixel, every other pixel, every fourth pixel, or every eighth pixel. For active line selection, the PCI/PXI-1407 can select every line, every odd line, or multiples of odd lines, for example, every other odd line or every fourth odd line. You can use the scaling-down circuitry in conjunction with the region-of-interest circuitry.
- **Interlaced video**—The PCI/PXI-1407 supports both interlaced and noninterlaced video signals. In interlaced mode, the PCI/PXI-1407 combines the odd and even field into one contiguous frame for analysis. In noninterlaced mode, each field is treated as an independent frame.

## Acquisition Modes

---

The PCI/PXI-1407 supports two video acquisition modes:


- **Standard mode**—In standard mode, the PCI/PXI-1407 receives an incoming composite video signal from the external BNC connector and generates CSYNC, HSYNC, VSYNC, and PCLK signals. The generated CSYNC signal can be used by other image acquisition boards or to synchronize multiple cameras.
- **CSYNC external mode**—In CSYNC external mode, the PCI/PXI-1407 receives an incoming video signal (composite or luminance) and an external CSYNC signal from an external connector. The PCI/PXI-1407 takes the incoming CSYNC signal and generates HSYNC, VSYNC, and PCLK signals.

# Signal Connections

This chapter describes cable connections for the PCI/PXI-1407.

## BNC Connectors

The BNC external connectors supply an immediate connection to the PCI/PXI-1407 VIDEO, CSYNC and TRIG inputs. Use BNC cables to connect a camera to these inputs. You can configure the BNC connector only for referenced single-ended (RSE) mode.

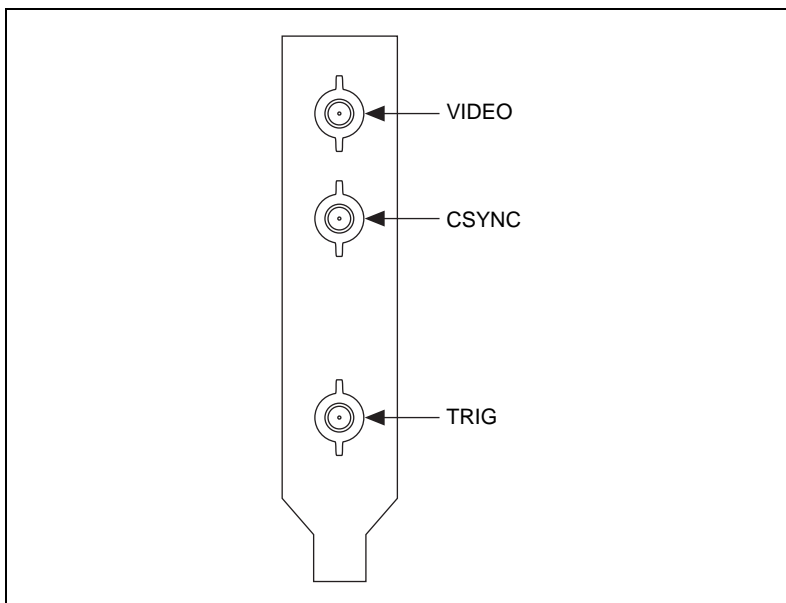

**Figure 4-1.** PCI/PXI-1407 BNC I/O Connectors

## I/O Connector Signal Connection Descriptions

Table 4-1 describes each signal connection on the three BNC connectors.

**Table 4-1.** I/O Connector Signals

Signal Name	Description
VIDEO	VIDEO± allows for an RSE connection to the video channel. The incoming video signal must be positive, as shown in Figure 3-2, <i>Positive Video Line</i> .
CSYNC	CSYNC is a TTL I/O line that is software programmable to be an input or an output. When the PCI/PXI-1407 is in CSYNC external mode, use the connector to input a CSYNC signal from the camera. In standard acquisition mode, the internally generated CSYNC can be routed to this connector as an output signal.
TRIG	The TRIG signal is a TTL I/O line used to start an acquisition or to control external events. You can program the triggers to be rising or falling edge sensitive. You can also program the triggers to be programmatically asserted or unasserted similar to the function of a digital I/O line or to contain internal status signals (by using the onboard events) or specific pulse widths.

# Specifications

This appendix lists the specifications of the PCI-1407 and PXI-1407. These specifications are typical at 25 °C, unless otherwise stated.

## Formats Supported

RS-170 .....	60 Hz (Interlaced mode: 30 frames/s)
CCIR .....	50 Hz (Interlaced mode: 25 frames/s)

## Video Input

Quantity .....	1 monochrome
Input impedance .....	75 $\Omega$
VIDEO .....	RSE (BNC)
Frequency response .....	20 MHz (–3 dB) typ
Gain .....	Programmable (1, 1.33, or 2)
Black reference .....	Programmable (0–1.26 V)
White reference .....	Programmable (0–1.26 V)

## A/D Conversion

Gray levels .....	256 (8 bit)
RMS noise .....	< 0.5 LSB rms
Signal-to-noise ratio .....	48 dB typ
Sampling rate .....	5 to 20 MHz

## External Connections

Trigger sense.....	TTL
Trigger level .....	Programmable (rising or falling)
CSYNC sense .....	TTL
CSYNC level .....	Programmable (rising or falling)
Minimum pulse width.....	50 ns
V <sub>IH</sub> (TTL) .....	2 V
V <sub>IL</sub> (TTL).....	0.8 V

## Internal Pixel Clock

Generated frequency.....	11.66 to 15.78 MHz
Aspect correction for standard video sources.....	-5% to +7%
Pixel jitter .....	< 5 ns peak

## PCI Interface

PCI initiator (master) capability .....	Supported
PCI target (slave) capability .....	Supported
Data path.....	32 bits
Card voltage.....	5 V only
Card type.....	32-bit half-size card
Parity generation/checking, error reporting .....	Supported
Target decode speed .....	Medium (1 clock)
Target fast back-to-back capability .....	Supported
Resource locking .....	Supported as a master and slave
PCI interrupts.....	Interrupts passed on INTA# signal

Expansion ROM..... 4 KB

PCI master performance

    Ideal ..... 133 Mbytes/s

    Sustained..... 100 Mbytes/s

## Power Requirements

Voltage ..... +5 V (1.34 A)

  +12 V (100 mA)

  -12 V (50 mA)

## Physical

Dimensions

    PCI-1407 ..... 10.7 by 17.5 cm  
  (4.2 by 6.9 in.)

    PXI-1407..... 16 by 10 cm  
  (6.3 by 3.9 in.)

Weight

    PCI-1407..... 0.127 kg (0.28 lb.)

    PXI-1407..... 0.145 kg (0.32 lb.)

## Environment

Operating temperature..... 0–55 °C

Storage temperature ..... –20 to 70 °C

Relative humidity ..... 5–90%, noncondensing

MTBF..... 1,601,183 h at 30 °C

Emissions ..... EN 55011:1991 Group 1 Class A  
  at 10 m FCC Class A at 10 m

Functional shock (PXI only).....MIL-T-28800 E Class 3 (per  
Section 4.5.5.4.1) Half-sine shock  
pulse, 11 ms duration, 30 g peak,  
30 shocks per face

Operational random vibration  
(PXI Only) .....5 to 500 Hz, 0.31 grms, 3 axes

Nonoperational random vibration  
(PXI Only) .....5 to 500 Hz, 2.5 grms, 3 axes



**Note** Random vibration profiles were developed in accordance with MIL-T-28800E and MIL-STD-810E Method 514. Test levels exceed those recommended in MIL-STD-810E for Category 1 (Basic Transportation, Figures 514.4-1 through 514.4-3).



---

# Technical Support Resources

This appendix describes the comprehensive resources available to you in the Technical Support section of the National Instruments Web site and provides technical support telephone numbers for you to use if you have trouble connecting to our Web site or if you do not have internet access.

## NI Web Support

---

To provide you with immediate answers and solutions 24 hours a day, 365 days a year, National Instruments maintains extensive online technical support resources. They are available to you at no cost, are updated daily, and can be found in the Technical Support section of our Web site at [www.ni.com/support](http://www.ni.com/support)

### Online Problem-Solving and Diagnostic Resources

- **KnowledgeBase**—A searchable database containing thousands of frequently asked questions (FAQs) and their corresponding answers or solutions, including special sections devoted to our newest products. The database is updated daily in response to new customer experiences and feedback.
- **Troubleshooting Wizards**—Step-by-step guides lead you through common problems and answer questions about our entire product line. Wizards include screen shots that illustrate the steps being described and provide detailed information ranging from simple getting started instructions to advanced topics.
- **Product Manuals**—A comprehensive, searchable library of the latest editions of National Instruments hardware and software product manuals.
- **Hardware Reference Database**—A searchable database containing brief hardware descriptions, mechanical drawings, and helpful images of jumper settings and connector pinouts.
- **Application Notes**—A library with more than 100 short papers addressing specific topics such as creating and calling DLLs, developing your own instrument driver software, and porting applications between platforms and operating systems.

## Software-Related Resources

- **Instrument Driver Network**—A library with hundreds of instrument drivers for control of standalone instruments via GPIB, VXI, or serial interfaces. You also can submit a request for a particular instrument driver if it does not already appear in the library.
- **Example Programs Database**—A database with numerous, non-shipping example programs for National Instruments programming environments. You can use them to complement the example programs that are already included with National Instruments products.
- **Software Library**—A library with updates and patches to application software, links to the latest versions of driver software for National Instruments hardware products, and utility routines.

## Worldwide Support

---

National Instruments has offices located around the globe. Many branch offices maintain a Web site to provide information on local services. You can access these Web sites from [www.ni.com/worldwide](http://www.ni.com/worldwide)

If you have trouble connecting to our Web site, please contact your local National Instruments office or the source from which you purchased your National Instruments product(s) to obtain support.

For telephone support in the United States, dial 512 795 8248. For telephone support outside the United States, contact your local branch office:

Australia 03 9879 5166, Austria 0662 45 79 90 0, Belgium 02 757 00 20,  
Brazil 011 284 5011, Canada (Calgary) 403 274 9391,  
Canada (Ontario) 905 785 0085, Canada (Québec) 514 694 8521,  
China 0755 3904939, Denmark 45 76 26 00, Finland 09 725 725 11,  
France 01 48 14 24 24, Germany 089 741 31 30, Greece 30 1 42 96 427,  
Hong Kong 2645 3186, India 91805275406, Israel 03 6120092,  
Italy 02 413091, Japan 03 5472 2970, Korea 02 596 7456,  
Mexico (D.F.) 5 280 7625, Mexico (Monterrey) 8 357 7695,  
Netherlands 0348 433466, Norway 32 27 73 00, Poland 48 22 528 94 06,  
Portugal 351 1 726 9011, Singapore 2265886, Spain 91 640 0085,  
Sweden 08 587 895 00, Switzerland 056 200 51 51,  
Taiwan 02 2377 1200, United Kingdom 01635 523545

# Glossary

---

Prefix	Meaning	Value
p-	pico-	$10^{-12}$
n-	nano-	$10^{-9}$
$\mu$ -	micro-	$10^{-6}$
m-	milli-	$10^{-3}$
k-	kilo-	$10^3$
M-	mega-	$10^6$
G-	giga-	$10^9$

## Numbers/Symbols

%	Percent.
+	Positive of, or plus.
-	Negative of, or minus.
/	Per.
$\pm$	Plus or minus.
$\Omega$	Ohm.

## A

A	Amperes.
A/D	Analog-to-digital.
AC	Alternating current.
acquisition window	The image size specific to a video standard or camera resolution.

active line region	The region of lines actively being stored. Defined by a line start (relative to the vertical synchronization signal) and a line count.
active pixel region	The region of pixels actively being stored. Defined by a pixel start (relative to the horizontal synchronization signal) and a pixel count.
ADC	Analog-to-digital converter. An electronic device, often an integrated circuit, that converts an analog voltage to a digital value.
address	Value that identifies a specific location (or series of locations) in memory.
ANSI	American National Standards Institute.
API	Application programming interface.
AQ_DONE	Signals that the acquisition of a frame or field is completed.
AQ_IN_PROGRESS	Signals that the acquisition of video data is in progress.
area	A rectangular portion of an acquisition window or frame that is controlled and defined by software.
array	Ordered, indexed set of data elements of the same type.
ASIC	Application-Specific Integrated Circuit. A proprietary semiconductor component designed and manufactured to perform a set of specific functions for specific customer needs.
aspect ratio	The ratio of a picture or image's width to its height.
<b>B</b>	
b	Bit. One binary digit, either 0 or 1.
B	Byte. Eight related bits of data, an eight-bit binary number; also used to denote the amount of memory required to store one byte of data
back porch	The area of the video signal between the rising edge of the horizontal synchronization signal and the active video information.
black reference level	The level that represents the darkest an image can get. <i>See also</i> white reference level.

buffer	Temporary storage for acquired data.
bus	A group of conductors that interconnect individual circuitry in a computer, such as the PCI bus; typically the expansion vehicle to which I/O or other devices are connected.

## C

C	Celsius.
cache	High-speed processor memory that buffers commonly used instructions or data to increase processing throughput.
CCIR	Comite Consultatif International des Radiocommunications. A committee that developed standards for video signals. Also used to describe signals, boards, and cameras that adhere to the CCIR standards.
CMOS	Complementary metal-oxide semiconductor.
CompactPCI	Refers to the core specification defined by the PCI Industrial Computer Manufacturer's Group (PICMG).
compiler	A software utility that converts a source program in a high-level programming language, such as Basic, C, or Pascal, into an object or compiled program in machine language. Compiled programs run 10 to 1,000 times faster than interpreted programs. <i>See also</i> interpreter.
conversion device	Device that transforms a signal from one form to another. For example, analog-to-digital converters (ADCs) for analog input and digital-to-analog converters (DACs) for analog output.
CPU	Central processing unit.
CSYNC	Composite synchronization signal. A combination of the horizontal and vertical synchronization pulses.

## D

D/A	Digital-to-analog.
DAC	Digital-to-analog converter. An electronic device, often an integrated circuit, that converts a digital number into a corresponding analog voltage or current.

DAQ	Data acquisition. (1) Collecting and measuring electrical signals from sensors, transducers, and test probes or fixtures and inputting them to a computer for processing. (2) Collecting and measuring the same kinds of electrical signals with A/D or DIO boards plugged into a computer, and possibly generating control signals with D/A and/or DIO boards in the same computer.
dB	Decibel. The unit for expressing a logarithmic measure of the ratio of two signal levels: $\text{dB} = 20\log_{10} V1/V2$ , for signals in volts.
DC	Direct current.
default setting	A default parameter value recorded in the driver; in many cases, the default input of a control is a certain value (often 0) that means <i>use the current default setting</i> .
DLL	Dynamic link library. A software module in Microsoft Windows containing executable code and data that can be called or used by Windows applications or other DLLs; functions and data in a DLL are loaded and linked at run time when they are referenced by a Windows application or other DLLs.
DMA	Direct memory access. A method by which data can be transferred to and from computer memory from and to a device or memory on the bus while the processor does something else; DMA is the fastest method of transferring data to/from computer memory.
DRAM	Dynamic RAM.
drivers	Software that controls a specific hardware device, such as an image acquisition board.
dynamic range	The ratio of the largest signal level a circuit can handle to the smallest signal level it can handle (usually taken to be the noise level), normally expressed in decibels.

## E

EEPROM	Electrically erasable programmable read-only memory. ROM that can be erased with an electrical signal and reprogrammed.
external trigger	A voltage pulse from an external source that triggers an event such as A/D conversion.

**F**

field	For an interlaced video signal, a field is half the number of horizontal lines needed to represent a frame of video. The first field of a frame contains all the odd-numbered lines, the second field contains all of the even-numbered lines.
FIFO	First-in first-out memory buffer. The first data stored is the first data sent to the acceptor; FIFOs are used on IMAQ devices to temporarily store incoming data until that data can be retrieved.
flash ADC	An ADC whose output code is determined in a single step by a bank of comparators and encoding logic.
frame	A complete image. In interlaced formats, a frame is composed of two fields.
front porch	The area of a video signal between the start of the horizontal blank and the start of the horizontal synchronization signal.
ft	Feet.
function	A set of software instructions executed by a single line of code that may have input and/or output parameters and returns a value when executed.

**G**

gamma	The nonlinear change in the difference between the video signal's brightness level and the voltage level needed to produce that brightness.
genlock	Circuitry that aligns the video timing signals by locking together the horizontal, vertical, and color subcarrier frequencies and phases and generates a pixel clock to clock pixel data into memory for display or into another circuit for processing.
GND	Ground signal.
GUI	Graphical user interface. An intuitive, easy-to-use means of communicating information to and from a computer program by means of graphical screen displays; GUIs can resemble the front panels of instruments or other objects associated with a computer program.

## H

h	Hour.
hardware	The physical components of a computer system, such as the circuit boards, plug-in boards, chassis, enclosures, peripherals, cables, and so on.
HSYNC	Horizontal synchronization signal. The synchronization pulse signal produced at the beginning of each video scan line that keeps a video monitor's horizontal scan rate in step with the transmission of each new line.
Hz	Hertz. Frequency in units of 1/second.

## I

I/O	Input/output. The transfer of data to/from a computer system involving communications channels, operator interface devices, and/or data acquisition and control interfaces.
IC	Integrated circuit.
IEEE	Institute of Electrical and Electronics Engineers.
in.	Inches.
INL	Integral nonlinearity. A measure in LSB of the worst-case deviation from the ideal A/D or D/A transfer characteristic of the analog I/O circuitry.
instrument driver	A set of high-level software functions, such as NI-IMAQ, that control specific plug-in computer boards. Instrument drivers are available in several forms, ranging from a function callable from a programming language to a virtual instrument (VI) in LabVIEW.
interlaced	A video frame composed of two interleaved fields. The number of lines in a field are half the number of lines in an interlaced frame.
interpreter	A software utility that executes source code from a high-level language such as Basic, C or Pascal, by reading one line at a time and executing the specified operation. <i>See also</i> compiler.



**interrupt** A computer signal indicating that the CPU should suspend its current task to service a designated activity.

**interrupt level** The relative priority at which a device can interrupt.

**IRQ** Interrupt request. *See* interrupt.

## **K**

**k** Kilo. The standard metric prefix for 1,000, or  $10^3$ , used with units of measure such as volts, hertz, and meters.

**K** Kilo. The prefix for 1,024, or  $2^{10}$ , used with B in quantifying data or computer memory.

**kbytes/s** A unit for data transfer that means 1,000 or  $10^3$  bytes/s.

**Kword** 1,024 words of memory.

## **L**

**library** A file containing compiled object modules, each comprised of one or more functions, that can be linked to other object modules that make use of these functions.

**line count** The total number of horizontal lines in the picture.

**LSB** Least significant bit.

**luma** The brightness information in the video picture. The luma signal amplitude varies in proportion to the brightness of the video signal and corresponds exactly to the monochrome picture.

**luminance** *See* luma.

**LUT** Look-up table. Table containing values used to transform the gray-level values of an image. For each gray-level value in the image, the corresponding new value is obtained from the look-up table.

## M

m	Meters.
M	(1) Mega, the standard metric prefix for 1 million or $10^6$ , when used with units of measure such as volts and hertz; (2) mega, the prefix for 1,048,576, or $2^{20}$ , when used with B to quantify data or computer memory.
MB	Megabyte of memory.
Mbytes/s	A unit for data transfer that means 1 million or $10^6$ bytes/s.
memory buffer	<i>See</i> buffer.
memory window	Continuous blocks of memory that can be accessed quickly by changing addresses on the local processor.
MSB	Most significant bit.
MTBF	Mean time between failure.
mux	Multiplexer. A switching device with multiple inputs that selectively connects one of its inputs to its output.

## N

NI-IMAQ	Driver software for National Instruments IMAQ hardware.
noninterlaced	A video frame where all the lines are scanned sequentially, instead of divided into two frames as in an interlaced video frame.
NVRAM	Nonvolatile RAM. RAM that is not erased when a device loses power or is turned off.

## O

operating system	Base-level software that controls a computer, runs programs, interacts with users, and communicates with installed hardware or peripheral devices.
------------------	--

**P**

PCI	Peripheral Component Interconnect. A high-performance expansion bus architecture originally developed by Intel to replace ISA and EISA. PCI offers a theoretical maximum transfer rate of 132 Mbytes/s.
PCLK	Pixel clock signal. Times the sampling of pixels on a video line.
picture aspect ratio	The ratio of the active pixel region to the active line region; for standard video signals like RS-170 or CCIR, the full-size picture aspect ratio normally is 4/3 (1.33).
pixel	Picture element. The smallest division that makes up the video scan line; for display on a computer monitor, a pixel's optimum dimension is square (aspect ratio of 1:1, or the width equal to the height).
pixel aspect ratio	The ratio between the physical horizontal size and the vertical size of the region covered by the pixel; an acquired pixel should optimally be square, thus the optimal value is 1.0, but typically it falls between 0.95 and 1.05, depending on camera quality.
pixel clock	Divides the incoming horizontal video line into pixels.
pixel count	The total number of pixels between two horizontal synchronization signals. The pixel count determines the frequency of the pixel clock.
protocol	The exact sequence of bits, characters, and control codes used to transfer data between computers and peripherals through a communications channel.
pts	Points.
PXI	PCI eXtensions for Instrumentation. An open specification that builds on the CompactPCI specification by adding instrumentation-specific features.

**R**

RAM	Random-access memory.
real time	A property of an event or system in which data is processed as it is acquired instead of being accumulated and processed at a later time.

relative accuracy	A measure in LSB of the accuracy of an ADC; it includes all nonlinearity and quantization errors but does not include offset and gain errors of the circuitry feeding the ADC.
resolution	The smallest signal increment that can be detected by a measurement system. Resolution can be expressed in bits, in proportions, or in percent of full scale. For example, a system has 12-bit resolution, one part in 4,096 resolution, and 0.0244 percent of full scale.
ROI	Region of interest. A hardware-programmable rectangular portion of the acquisition window.
ROM	Read-only memory.
RS-170	The U.S. standard used for black-and-white television.
RSE	Referenced single-ended. All measurements are made with respect to a common reference measurement system or a ground. Also called a grounded measurement system.
RTSI bus	Real-Time System Integration Bus. The National Instruments timing bus that connects IMAQ and DAQ boards directly, by means of connectors on top of the boards, for precise synchronization of functions.
<b>S</b>	
s	Seconds.
scaling down circuitry	Circuitry that scales down the resolution of a video signal.
scatter-gather DMA	A type of DMA that allows the DMA controller to reconfigure on-the-fly.
sync	Tells the display where to put a video picture. The horizontal sync indicates the picture's left-to-right placement and the vertical sync indicates top-to-bottom placement.
syntax	The set of rules to which statements must conform in a particular programming language.
system RAM	RAM installed on a personal computer and used by the operating system, as contrasted with onboard RAM.

**T**

transfer rate	The rate, measured in bytes/s, at which data is moved from source to destination after software initialization and set up operations. The maximum rate at which the hardware can operate.
TRIG	Trigger signal.
trigger	Any event that causes or starts some form of data capture.
trigger control and mapping circuitry	Circuitry that routes, monitors, and drives external and RTSI bus trigger lines. You can configure each of these lines to start or stop acquisition on a rising or falling edge.
TTL	Transistor-transistor logic.

**V**

V	Volts.
VI	Virtual Instrument. (1) A combination of hardware and/or software elements, typically used with a PC, that has the functionality of a classic stand-alone instrument (2) A LabVIEW software module (VI), which consists of a front panel user interface and a block diagram program.
video line	A video line consists of a HSYNC, back porch, active pixel region, and a front porch.
VSYNC	Vertical synchronization signal. The synchronization pulse generated at the beginning of each video field that tells the video monitor when to start a new field.

**W**

white reference level	The level that defines what is white for a particular video system. <i>See also</i> black reference level.
-----------------------	--

# Index

---

## Numbers

8-bit ADC and LUT, 3-2

## A

acquisition and region-of-interest control, 3-3

acquisition modes, 3-7

acquisition window

controlling, 3-5 to 3-6

programming video parameters, 3-6 to 3-7

active line region, 3-5

active pixel region, 3-5

A/D conversion specifications, A-1

ADC, 8-bit, 3-2

aspect ratio. *See* pixel aspect ratio.

## B

BNC connectors

pin assignments (figure), 4-1

signal connections, 4-2

board configuration. *See* configuration.

## C

cables

optional equipment, 2-2

required cable, 2-1

CompactPCI specifications, 1-2

composite synchronization. *See* CSYNC.

configuration. *See also* installation.

setting up IMAQ system, 2-2 to 2-3

CSYNC

acquisition window control, 3-5

CSYNC mux, 3-3

external acquisition mode, 3-7

CSYNC signal (table), 4-2

## D

delayed video acquisition, 3-5

DMA controllers, 3-3

## E

environment specifications, A-3 to A-4

equipment, optional, 2-2

external connection specifications, A-2

## F

field, for interlaced video signal, 3-6

FIFO buffer, 3-3

formats supported, A-1

frame

definition, 3-6

frame/field selection, 3-5

functional overview, 3-1 to 3-4

## G

gain and offset circuitry, 3-2

genlock synchronization generator, 3-3

## H

hardware overview, 3-1 to 3-7

8-bit ADC and LUT, 3-2

acquisition and region-of-interest control, 3-3

acquisition modes, 3-7

block diagram, 3-2

CSYNC mux, 3-3

FIFO buffer, 3-3

functional overview, 3-1 to 3-4

gain and offset circuitry, 3-2

- genlock synchronization generator, 3-3
- PCI interface, 3-4
- pixel aspect ratio circuitry, 3-3
- scatter-gather DMA controllers, 3-3 to 3-4
- trigger control, 3-4
- video acquisition, 3-4 to 3-7
  - acquisition window control, 3-5 to 3-6
  - programming video parameters, 3-6 to 3-7
  - start conditions, 3-4 to 3-5
  - video buffer, 3-2
- horizontal count, 3-5
- HSYNC
  - acquisition window control, 3-5
  - genlock synchronization generator, 3-3

## I

- IMAQ Vision software, 1-5
- IMAQ Vision Builder software, 1-5
- installation. *See also* configuration.
  - procedure for, 2-4 to 2-5
  - setting up IMAQ system, 2-2 to 2-3
  - unpacking the PCI/PXI-1407, 1-6
- integration with DAQ and motion control, 2-4
- interlaced video, 3-7
- internal pixel clock specifications, A-2
- I/O connector, 4-1 to 4-2
  - signal descriptions (table), 4-2

## L

- line count
  - definition, 3-5
  - programmable pixel and line count, 3-6
- line region, active, 3-5
- lookup table, 8-bit ADC and LUT, 3-2

## M

- motion control and DAQ, integrating with, 1-6

## N

- National Instruments web support, B-1 to B-2
- NI-IMAQ driver software, 1-4

## P

- PCI interface
  - overview, 3-4
  - specifications, A-2 to A-3
- PCI/PXI-1407 devices. *See also* hardware overview.
  - features and overview, 1-1
  - optional equipment, 2-2
  - requirements for getting started, 2-1 to 2-2
  - setting up IMAQ system, 2-2 to 2-3
  - software programming choices, 1-2 to 1-6
    - IMAQ Vision software, 1-5
    - IMAQ Vision Builder software, 1-5
    - NI-IMAQ driver software, 1-4
  - unpacking, 2-4
- PCLK
  - genlock synchronization generator, 3-3
  - internal pixel clock specifications, A-2
- physical specifications, A-3
- picture aspect ratio, 3-5
- pin assignments
  - BNC connectors (figure), 4-1
- pixel aspect ratio, defined, 3-6
- pixel aspect ratio circuitry, 3-3
- pixel clock. *See* PCLK.
- pixels
  - active pixel region, 3-5
  - horizontal count, 3-5
  - line count, 3-5
  - programmable pixel and line count, 3-6
- power requirements, A-3

programming video parameters. *See* video parameters, programming.  
 PXI-1407 device. *See also* PCI/PXI-1407 devices.  
     using with CompactPCI, 1-2

## R

region of interest  
     control circuitry, 3-3  
     programming video parameters, 3-6 to 3-7

## S

scaling-down circuitry, 3-7  
 scatter-gather DMA controllers, 3-3 to 3-4  
 signal connections, 4-1 to 4-2  
     BNC connectors, 4-1  
     external connection specifications, A-2  
     I/O connector, 4-1 to 4-2  
         pin assignments (figure), 4-1  
         signal descriptions (table), 4-2  
 software control of video acquisition, 3-4  
 software programming choices, 1-2 to 1-6  
     IMAQ Vision software, 1-5  
     IMAQ Vision Builder software, 1-5  
     NI-IMAQ driver software, 1-4  
 specifications, A-1 to A-4  
     A/D conversion, A-1  
     environment, A-3 to A-4  
     external connections, A-2  
     formats supported, A-1  
     internal pixel clock, A-2  
     PCI interface, A-2 to A-3  
     physical, A-3  
     power requirements, A-3  
     video input, A-1  
 standard acquisition mode, 3-7  
 start conditions, video acquisition, 3-4 to 3-5  
 system requirements, 2-1 to 2-2

## T

technical support resources, B-1 to B-2  
 TRIG signal (table), 4-2  
 trigger control, 3-4  
     video acquisition, 3-4

## V

vertical synchronization. *See* VSYNC.  
 video acquisition, 3-4 to 3-7  
     acquisition window control, 3-5 to 3-6  
     programming video parameters, 3-6 to 3-7  
     start conditions, 3-4 to 3-5  
 video buffer, 3-2  
 video input specifications, A-1  
 video line, 3-5  
 video parameters, programming, 3-6 to 3-7  
     acquisition window, 3-6  
     interlaced video, 3-7  
     programmable pixel and line count, 3-6  
     region of interest, 3-7  
     scaling down, 3-7  
 VIDEO signal (table), 4-2  
 VSYNC  
     acquisition window control, 3-5  
     genlock synchronization generator, 3-3

## W

Web support from National Instruments,  
     B-1 to B-2  
         online problem-solving and diagnostic resources, B-1  
         software-related resources, B-2  
 worldwide technical support, B-2