

**CHAPTER**

**77**

**ENGINE INDICATION**

**737-600/700/800/900  
AIRCRAFT MAINTENANCE MANUAL**

**CHAPTER 77  
ENGINE INDICATION**

Subject/Page	Date	COC	Subject/Page	Date	COC	Subject/Page	Date	COC
EFFECTIVE PAGES			77-21-01 (cont)			77-31-00 (cont)		
1	Jun 15/2009		O 603	Jun 15/2009		233	Oct 15/2008	
2	BLANK		R 604	Jun 15/2009		234	BLANK	
77-CONTENTS			605	Oct 15/2008		77-31-00		
1	Feb 15/2009		606	Oct 15/2008		501	Feb 10/2006	
2	Feb 15/2009		607	Oct 15/2008		502	Jun 10/2004	
3	Feb 15/2009		608	Oct 15/2008		503	Feb 15/2009	
4	BLANK		77-31-00			504	Feb 15/2009	
77-11-01			201	Feb 15/2009		505	Feb 15/2009	
401	Oct 15/2008		202	Feb 15/2009		506	Feb 15/2009	
402	Oct 15/2008		203	Feb 15/2009		507	Feb 15/2009	
403	Oct 10/2003		204	Feb 15/2009		508	Feb 15/2009	
404	Oct 10/2003		205	Feb 15/2009		509	Feb 15/2009	
R 405	Jun 15/2009		206	Feb 15/2009		510	BLANK	
406	Jun 15/2008		207	Jun 10/2007		77-31-03		
407	Jun 15/2008		208	Jun 10/2007		401	Oct 10/2003	
408	BLANK		209	Jun 10/2007		402	Jun 10/2005	
77-11-02			210	Jun 10/2007		403	Oct 10/2003	
401	Oct 15/2008		211	Feb 15/2009		404	Feb 15/2009	
402	Oct 15/2008		212	Feb 15/2009		405	Feb 15/2009	
403	Oct 10/2003		213	Feb 15/2009		406	Feb 15/2009	
R 404	Jun 15/2009		214	Feb 15/2009		407	Feb 15/2009	
405	Oct 10/2007		215	Feb 15/2009		408	Feb 15/2009	
406	BLANK		216	Feb 15/2009		77-31-04		
77-21-01			217	Feb 15/2009		401	Oct 10/2003	
401	Oct 15/2008		218	Feb 15/2009		402	Jun 10/2005	
402	Oct 15/2008		R 219	Jun 15/2009		403	Oct 10/2003	
403	Oct 15/2008		R 220	Jun 15/2009		R 404	Jun 15/2009	
404	Feb 10/2007		O 221	Jun 15/2009		405	Feb 15/2009	
405	Feb 10/2007		O 222	Jun 15/2009		406	BLANK	
406	Feb 10/2007		O 223	Jun 15/2009		77-31-05		
407	Feb 10/2007		224	Feb 15/2009		201	Oct 10/2003	
408	Feb 10/2007		225	Feb 15/2009		202	Oct 10/2003	
R 409	Jun 15/2009		226	Feb 15/2009		203	Oct 10/2003	
410	Feb 10/2007		227	Feb 15/2009		204	Oct 10/2003	
411	Feb 10/2007		228	Feb 15/2009				
412	BLANK		229	Feb 15/2009				
77-21-01			230	Feb 15/2009				
R 601	Jun 15/2009		231	Feb 15/2009				
O 602	Jun 15/2009		232	Feb 15/2009				

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

# 77-EFFECTIVE PAGES

## AIRCRAFT MAINTENANCE MANUAL

CHAPTER 77  
ENGINE INDICATION

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Conf</u>	<u>Page</u>	<u>Effect</u>
<u>N1 SPEED SENSOR - REMOVAL/ INSTALLATION</u>	77-11-01		401	HAP ALL
N1 Speed Sensor Removal TASK 77-11-01-000-801-F00			401	HAP ALL
N1 Speed Sensor Installation TASK 77-11-01-400-801-F00			405	HAP ALL
<u>N2 SPEED SENSOR - REMOVAL/ INSTALLATION</u>	77-11-02		401	HAP ALL
N2 Speed Sensor Removal TASK 77-11-02-000-801-F00			401	HAP ALL
N2 Speed Sensor Installation TASK 77-11-02-400-801-F00			404	HAP ALL
<u>T49.5 PROBE - REMOVAL/INSTALLATION</u>	77-21-01		401	HAP ALL
T49.5 Probe Removal TASK 77-21-01-000-801-F00			401	HAP ALL
T49.5 Probe Installation TASK 77-21-01-400-801-F00			409	HAP ALL
<u>T49.5 PROBE AND EGT SYSTEM - INSPECTION/CHECK</u>	77-21-01		601	HAP ALL
T49.5 Probe and EGT System Inspection TASK 77-21-01-200-801-F00			601	HAP ALL
<u>AIRBORNE VIBRATION MONITORING (AVM) SYSTEM - MAINTENANCE PRACTICES</u>	77-31-00		201	HAP ALL
Airborne Vibration Monitoring (AVM) System - System Test TASK 77-31-00-970-804-F00			201	HAP 001-005 PRE SB 737-77-1056
Airborne Vibration Monitoring (AVM) System - System Test TASK 77-31-00-970-802-F00			205	HAP 006-011 PRE SB 737-77-1056

# 77-CONTENTS

**737-600/700/800/900**  
**AIRCRAFT MAINTENANCE MANUAL**

**CHAPTER 77**  
**ENGINE INDICATION**

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Conf</u>	<u>Page</u>	<u>Effect</u>
Airborne Vibration Monitoring (AVM) System - System Test TASK 77-31-00-970-803-F00			211	HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069
Download The Advanced AVM (AAVM) Bearing Data With The Ground Support Software (GSS) TASK 77-31-00-970-805-F00			222	HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054, 101-106 POST SB 737-77-1069
ARINC 429 Data Bus Charts TASK 77-31-00-910-801-F00			232	HAP ALL
<u>AIRBORNE VIBRATION MONITORING (AVM)</u> <u>SYSTEM - ADJUSTMENT/TEST</u>	77-31-00		501	HAP ALL
Airborne Vibration Monitoring (AVM) System - Operational Test TASK 77-31-00-710-801-F00			501	HAP ALL
Airborne Vibration Monitor (AVM) Signal Conditioner - Self Test TASK 77-31-00-700-801-F00			506	HAP ALL
<u>AIRBORNE VIBRATION MONITOR (AVM)</u> <u>SIGNAL CONDITIONER - REMOVAL/ INSTALLATION</u>	77-31-03		401	HAP ALL
Airborne Vibration Monitor (AVM) Signal Conditioner Removal TASK 77-31-03-000-801-F00			401	HAP ALL
Airborne Vibration Monitor (AVM) Signal Conditioner Installation TASK 77-31-03-400-801-F00			404	HAP ALL
<u>FAN FRAME COMPRESSOR CASE (FFCC)</u> <u>VIBRATION SENSOR - REMOVAL/ INSTALLATION</u>	77-31-04		401	HAP ALL
FFCC Vibration Sensor Removal TASK 77-31-04-000-801-F00			401	HAP ALL
FFCC Vibration Sensor Installation TASK 77-31-04-400-801-F00			404	HAP ALL

# 77-CONTENTS

**AIRCRAFT MAINTENANCE MANUAL**
**CHAPTER 77  
ENGINE INDICATION**

<b><u>Subject</u></b>	<b><u>Chapter Section Subject</u></b>	<b><u>Conf</u></b>	<b><u>Page</u></b>	<b><u>Effect</u></b>
<b><u>NO. 1 BEARING VIBRATION SENSOR - MAINTENANCE PRACTICES</u></b>	77-31-05		201	HAP ALL
No. 1 Bearing Vibration Sensor Deactivation TASK 77-31-05-040-801-F00			201	HAP ALL
Number One Bearing Vibration Sensor Activation TASK 77-31-05-440-801-F00			203	HAP ALL

# 77-CONTENTS

## AIRCRAFT MAINTENANCE MANUAL

N1 SPEED SENSOR - REMOVAL/INSTALLATION**1. General**

A. This procedure has two tasks:

- (1) The removal of the N1 speed sensor
- (2) The installation of the N1 speed sensor.

**TASK 77-11-01-000-801-F00****2. N1 Speed Sensor Removal**

(Figure 401)

A. General

- (1) This task is the removal procedure for the N1 speed sensor (referred to as the sensor).
- (2) The N1 speed sensor is found on the fan frame at the 4:00 o'clock position.
  - (a) The probe is engaged in the fan frame strut 4.

B. References

Reference	Title
70-10-02-910-801-F00	General Precautions During the Removal and Installation of Engine Components (P/B 201)
71-11-02-010-801-F00	Open the Fan Cowl Panels (P/B 201)

C. Tools/Equipment

Reference	Description
STD-195	Container - 1 Quart (1 l), Oil/Fuel Resistant

D. Consumable Materials

Reference	Description	Specification
G00270	Tape - Scotch Flatback Masking 250	ASTM D6123 (Supersedes A-A-883)

E. Location Zones

Zone	Area
411	Engine 1 - Engine
421	Engine 2 - Engine

F. Prepare for the Removal

SUBTASK 77-11-01-860-001-F00

- (1) For Engine 1, open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
A	4	C01390	ENGINE 1 ALTN PWR CHAN B
A	5	C01314	ENGINE 1 ALTN PWR CHAN A
D	5	C01359	DISPLAY DEU 1 PRI

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	10	C01361	DISPLAY DEU 1 HOLDUP

EFFECTIVITY  
HAP ALL

D633A101-HAP

# 77-11-01

Page 401  
Oct 15/2008

## AIRCRAFT MAINTENANCE MANUAL

SUBTASK 77-11-01-860-002-F00

- (2) For Engine 2, open these circuit breakers and install safety tags:

F/O Electrical System Panel, P6-1

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
D	9	C01362	DISPLAY DEU 2 HOLDUP
D	11	C01360	DISPLAY DEU 2 PRI

F/O Electrical System Panel, P6-2

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
D	7	C01391	ENGINE 2 ALTN PWR CHAN B
D	8	C01315	ENGINE 2 ALTN PWR CHAN A

SUBTASK 77-11-01-010-001-F00

- (3) Do this task: Open the Fan Cowl Panels, TASK 71-11-02-010-801-F00.

## G. N1 Speed Sensor Removal

SUBTASK 77-11-01-020-002-F00

- (1) Do these steps to remove the sensor [5]:

- (a) Disconnect the electrical connectors, DP0701 (CH A) [7], DP0801 [8] (CH B) and DP0103 [10] from the sensor receptacles.
- (b) Put a 1 quart (1 l) oil/fuel resistant container, STD-195, below the guide tube.

**NOTE:** Oil leakage can occur, when you remove the sensor probe [3] from the guide tube.

**CAUTION:** BE CAREFUL WHEN YOU REMOVE THE N1 SPEED SENSOR. THE N1 SPEED SENSOR IS VERY LONG AND DAMAGE CAN OCCUR.

- (c) Remove the two bolts [12] that attach the sensor mounting flange to the guide tube flange.
- (d) Slowly and carefully pull the sensor [5] out of the guide tube.
- 1) Let the oil drain in the container.
- (e) Remove the sensor [5].
- (f) Remove and discard the packing [1] from the guide tube groove.
- (g) Put a protective cover on the probe tip [2] (TASK 70-10-02-910-801-F00).
- (h) Put Scotch Flatback Masking Tape 250, G00270, on the guide tube port.

————— **END OF TASK** —————


EFFECTIVITY  
HAP ALL

D633A101-HAP

77-11-01

Page 402  
Oct 15/2008

AIRCRAFT MAINTENANCE MANUAL



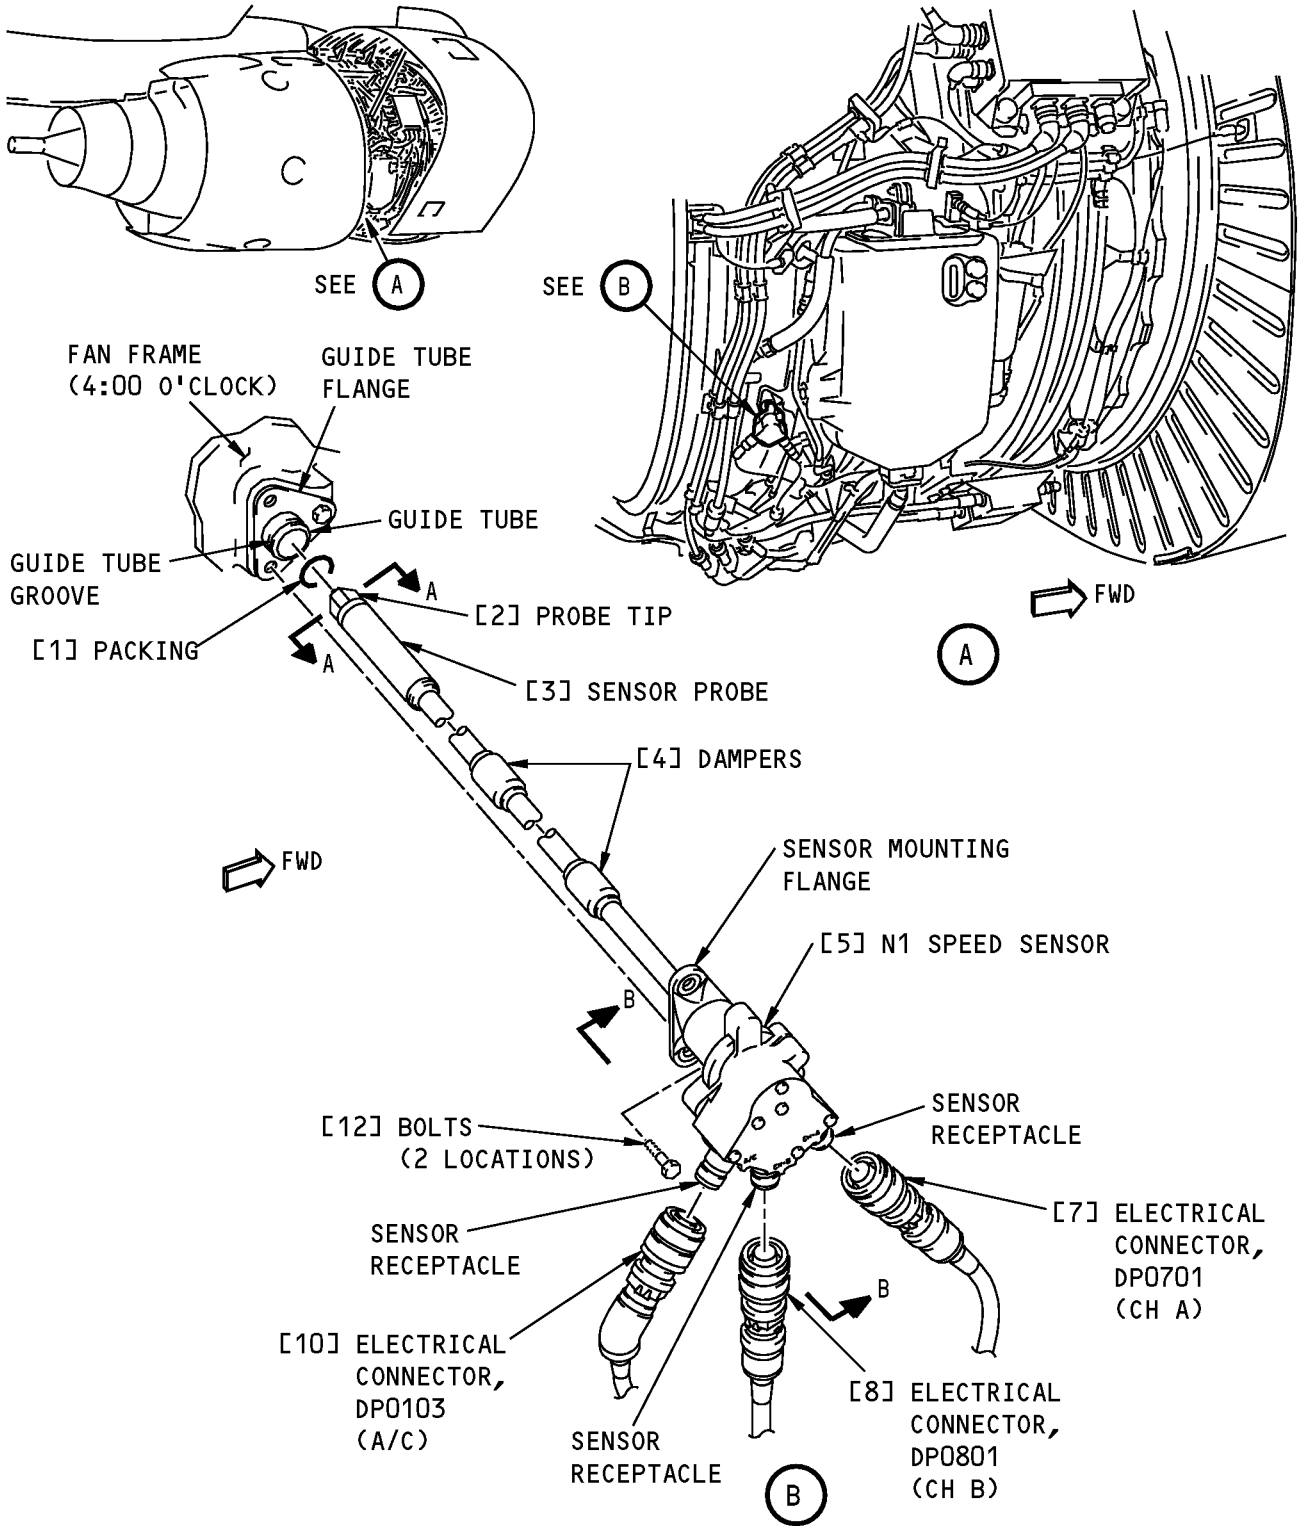


N1 Speed Sensor Installation  
Figure 401 (Sheet 1 of 2)/77-11-01-990-801-F00

EFFECTIVITY
HAP ALL

77-11-01



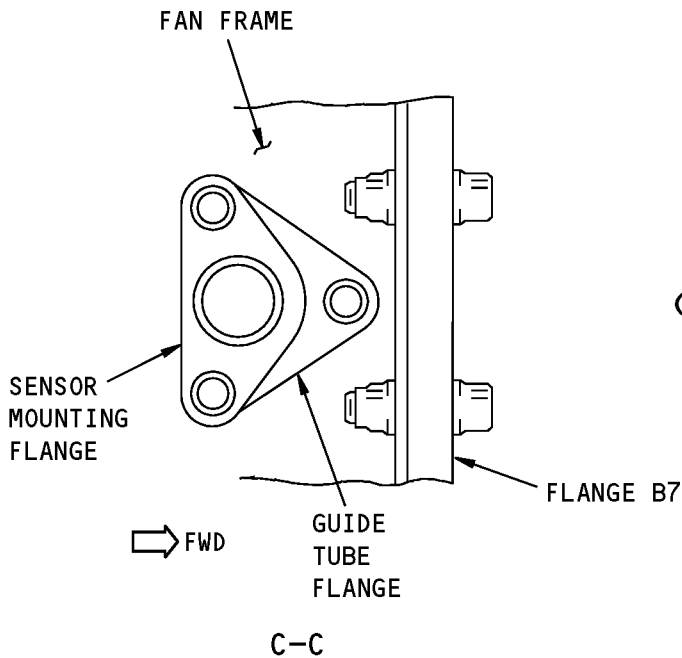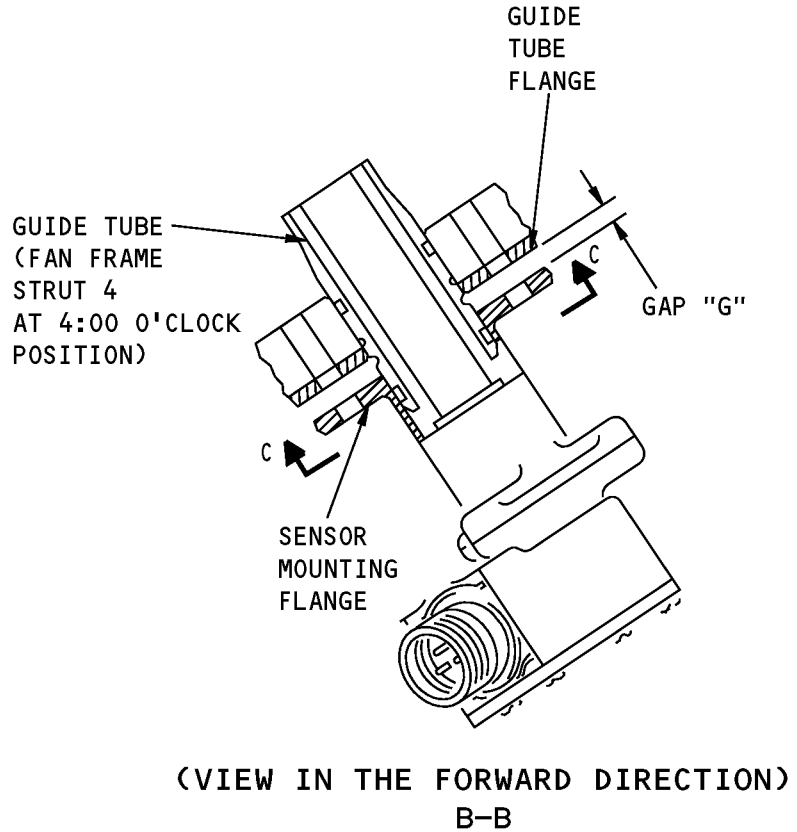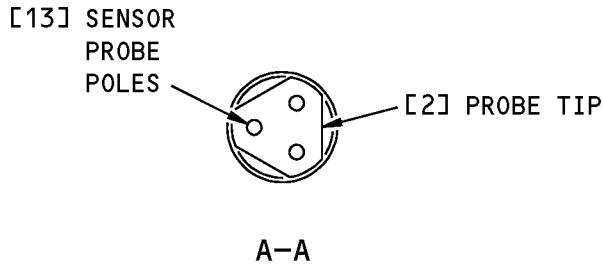

**N1 Speed Sensor Installation**  
**Figure 401 (Sheet 2 of 2)/77-11-01-990-801-F00**

EFFECTIVITY
HAP ALL

**77-11-01**

## AIRCRAFT MAINTENANCE MANUAL

## TASK 77-11-01-400-801-F00

3. N1 Speed Sensor Installation

(Figure 401)

## A. General

(1) This task is the installation procedure for the N1 speed sensor (referred to as the sensor).

## B. References

Reference	Title
70-10-02-910-801-F00	General Precautions During the Removal and Installation of Engine Components (P/B 201)
71-00-00-800-811-F00	Power Plant Test Reference Table (P/B 501)
71-11-02-410-801-F00	Close the Fan Cowl Panels (P/B 201)

## C. Tools/Equipment

Reference	Description
STD-1107	Gauge - Feeler, 0.0 - 0.5 Inch, Readable to 1/1000th

## D. Consumable Materials

Reference	Description	Specification
D00599 [CP2442]	Oil - Engine (CFMI SB 79-001)	
D00601 [CP2101]	Grease - Graphite, High Temperature	SAE AMS 2518
D00672 [CP5070]	Grease - Petrolatum	VV-P-236
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	BMS15-5
G02129	Tape - Adhesive - Permacel P-29	
G02352 [CP2179]	Lanolin - Industrial	

## E. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Packing	77-11-01-01-020	HAP ALL
5	Sensor	77-11-01-01-010	HAP ALL

## F. Location Zones

Zone	Area
411	Engine 1 - Engine
421	Engine 2 - Engine

## G. N1 Speed Sensor Installation

SUBTASK 77-11-01-640-001-F00

(1) Do these steps to prepare the sensor [5] for the installation (TASK 70-10-02-910-801-F00) (Figure 401):

- (a) Remove the protective cover from the probe tip [2].
- (b) Remove the tape from the guide tube port.
- (c) Use a piece of Permacel P-29 tape, G02129, to remove all the magnetic particles from the probe tip [2].
- (d) Carefully clean the three sensor probe poles [13] at the probe tip [2] with a cotton wiper, G00034.
- (e) Lubricate a new packing [1] with oil, D00599 [CP2442].

EFFECTIVITY
HAP ALL

**77-11-01**

D633A101-HAP

Page 405  
Jun 15/2009

## AIRCRAFT MAINTENANCE MANUAL

**CAUTION:** MAKE SURE YOU INSTALL THE PACKING CORRECTLY ON THE GUIDE TUBE GROOVE. IF YOU DO NOT INSTALL THE PACKING CORRECTLY, OIL LOSS CAN OCCUR DURING ENGINE OPERATION AND CAN CAUSE DAMAGE TO THE ENGINE.

- (f) Install the packing [1] on the guide tube groove.
- (g) Lubricate the dampers [4] with a thin layer of grease, D00672 [CP5070], or lanolin, G02352 [CP2179].

SUBTASK 77-11-01-420-001-F00

- (2) Do these steps to install the sensor [5] in the guide tube (Figure 401):

**CAUTION:** BE CAREFUL NOT TO USE TOO MUCH FORCE WHEN YOU ENGAGE THE N1 SPEED SENSOR IN THE GUIDE TUBE. IF YOU USE TOO MUCH FORCE, DAMAGE TO THE N1 SPEED SENSOR CAN OCCUR.

- (a) Align the probe tip [2] with the guide tube.
- (b) Engage the probe tip [2] in the guide tube.
- (c) Slowly, push the sensor [5] down the guide tube.
- (d) Be careful to keep the axial alignment and to use a smooth movement when you engage the sensor [5].
- (e) When you feel the sensor [5] touch the bottom of its recess, stop and do not push the sensor [5] in more.

SUBTASK 77-11-01-220-001-F00

- (3) Do these steps to make sure that the sensor [5] has the correct clearance (Figure 401):

- (a) With no bolts [12] installed, measure the clearance of GAP "G" between the machined surfaces of the sensor mounting flange and the guide tube flange.

**CAUTION:** THE SENSOR PROBE IS SPRING-LOADED TO KEEP ITS INNER END SHOULDER IN CONTACT WITH THE BOTTOM OF THE GUIDE TUBE RECESS. IF YOU DO NOT OBEY THE SPECIFIED GAP "G" LIMITS WITH ABOVE CONDITION, DAMAGE TO THE N1 SPEED SENSOR CAN OCCUR.

- (b) If the GAP "G" clearance is not 0.051-0.169 inch (1.30-4.30 mm), remove the sensor [5].
  - 1) Measure the GAP "G" clearance with a 0.0 - 0.5 Inch feeler gauge, STD-1107.
  - 2) Look for damage to the sensor [5] (distortion of the sensor probe [3], not positioned correctly, etc).
- (c) If you cannot install the sensor [5] with the correct GAP "G" clearance, replace the sensor [5].

SUBTASK 77-11-01-420-002-F00

- (4) Do these steps to tighten the sensor [5] (Figure 401):

- (a) Lubricate the threads of the two bolts [12] with grease, D00601 [CP2101].

**CAUTION:** TIGHTEN ONE BOLT AND THEN THE OTHER BOLT IN SMALL INCREMENTS TO PREVENT DISTORTION OF THE SENSOR PROBE. IF IT IS POSSIBLE, USE TWO RATCHET WRENCHES TO TIGHTEN THE BOLTS AT THE SAME TIME.

- (b) Install the two bolts [12].
  - 1) Tighten the bolts [12] to 110-120 pound-inches (12.5-13.5 Newton meters).
- (c) Connect the electrical connectors, DP0701 (CH A) [7], DP0801 (CH B) [8] and DP0103 [10] to the applicable sensor receptacles, CH A, CH B, and CH A/C.

EFFECTIVITY  
HAP ALL

D633A101-HAP

**77-11-01**

Page 406  
Jun 15/2008

## AIRCRAFT MAINTENANCE MANUAL

## H. Put the Airplane Back to Its Usual Condition

SUBTASK 77-11-01-410-002-F00

- (1) Do this task: Close the Fan Cowl Panels, TASK 71-11-02-410-801-F00.

SUBTASK 77-11-01-860-003-F00

- (2) For Engine 1, remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-2

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
A	4	C01390	ENGINE 1 ALTN PWR CHAN B
A	5	C01314	ENGINE 1 ALTN PWR CHAN A
D	5	C01359	DISPLAY DEU 1 PRI

F/O Electrical System Panel, P6-1

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
D	10	C01361	DISPLAY DEU 1 HOLDUP

SUBTASK 77-11-01-860-004-F00

- (3) For Engine 2, remove the safety tags and close these circuit breakers:

F/O Electrical System Panel, P6-1

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
D	9	C01362	DISPLAY DEU 2 HOLDUP
D	11	C01360	DISPLAY DEU 2 PRI

F/O Electrical System Panel, P6-2

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
D	7	C01391	ENGINE 2 ALTN PWR CHAN B
D	8	C01315	ENGINE 2 ALTN PWR CHAN A

## I. N1 Speed Sensor Installation Test

SUBTASK 77-11-01-800-001-F00

- (1) Do the tests that are listed in the Power Plant Test Reference Table (TASK 71-00-00-800-811-F00).

————— END OF TASK —————

EFFECTIVITY  
HAP ALL

D633A101-HAP

77-11-01

Page 407  
Jun 15/2008

## AIRCRAFT MAINTENANCE MANUAL

N2 SPEED SENSOR - REMOVAL/INSTALLATION**1. General**

A. This procedure has two tasks:

- (1) The removal of the N2 speed sensor
- (2) The installation of the N2 speed sensor.

**TASK 77-11-02-000-801-F00****2. N2 Speed Sensor Removal**

(Figure 401)

A. General

- (1) This task is the removal procedure for the N2 speed sensor (referred to as the sensor).
- (2) The N2 speed sensor is found on the forward side of the accessory gearbox (AGB), between the EEC alternator and the engine air starter.

B. References

Reference	Title
70-10-02-910-801-F00	General Precautions During the Removal and Installation of Engine Components (P/B 201)
71-11-02-010-801-F00	Open the Fan Cowl Panels (P/B 201)

C. Consumable Materials

Reference	Description	Specification
G00270	Tape - Scotch Flatback Masking 250	ASTM D6123 (Supersedes A-A-883)

D. Location Zones

Zone	Area
411	Engine 1 - Engine
421	Engine 2 - Engine

E. Prepare for the Removal

SUBTASK 77-11-02-860-001-F00

- (1) For Engine 1, open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
A	4	C01390	ENGINE 1 ALTN PWR CHAN B
A	5	C01314	ENGINE 1 ALTN PWR CHAN A
D	5	C01359	DISPLAY DEU 1 PRI

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	10	C01361	DISPLAY DEU 1 HOLDUP

EFFECTIVITY  
HAP ALL

D633A101-HAP

# 77-11-02

Page 401  
Oct 15/2008

## AIRCRAFT MAINTENANCE MANUAL

SUBTASK 77-11-02-860-002-F00

- (2) For Engine 2, open these circuit breakers and install safety tags:

F/O Electrical System Panel, P6-1

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
D	9	C01362	DISPLAY DEU 2 HOLDUP
D	11	C01360	DISPLAY DEU 2 PRI

F/O Electrical System Panel, P6-2

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
D	7	C01391	ENGINE 2 ALTN PWR CHAN B
D	8	C01315	ENGINE 2 ALTN PWR CHAN A

SUBTASK 77-11-02-010-001-F00

- (3) Do this task: Open the Fan Cowl Panels, TASK 71-11-02-010-801-F00.

## F. N2 Speed Sensor Removal

SUBTASK 77-11-02-020-002-F00

- (1) Do these steps to remove the sensor [4]:
- Disconnect the electrical connectors, DP0503 (CH A) [9], DP0603 (CH B) [10] and DP1201 [1] from the sensor receptacles.
  - Remove the two bolts [2] that attach the sensor [4] to the AGB boss.
  - Remove the sensor [4] from the AGB recess.
  - Remove and discard the packing [5].
  - Put a protective cover on the probe tip [6] (TASK 70-10-02-910-801-F00).
  - Put Scotch Flatback Masking Tape 250, G00270, on the AGB orifice.

————— **END OF TASK** —————


EFFECTIVITY  
HAP ALL

D633A101-HAP

# 77-11-02

Page 402  
Oct 15/2008

737-600/700/800/900  
**AIRCRAFT MAINTENANCE MANUAL**

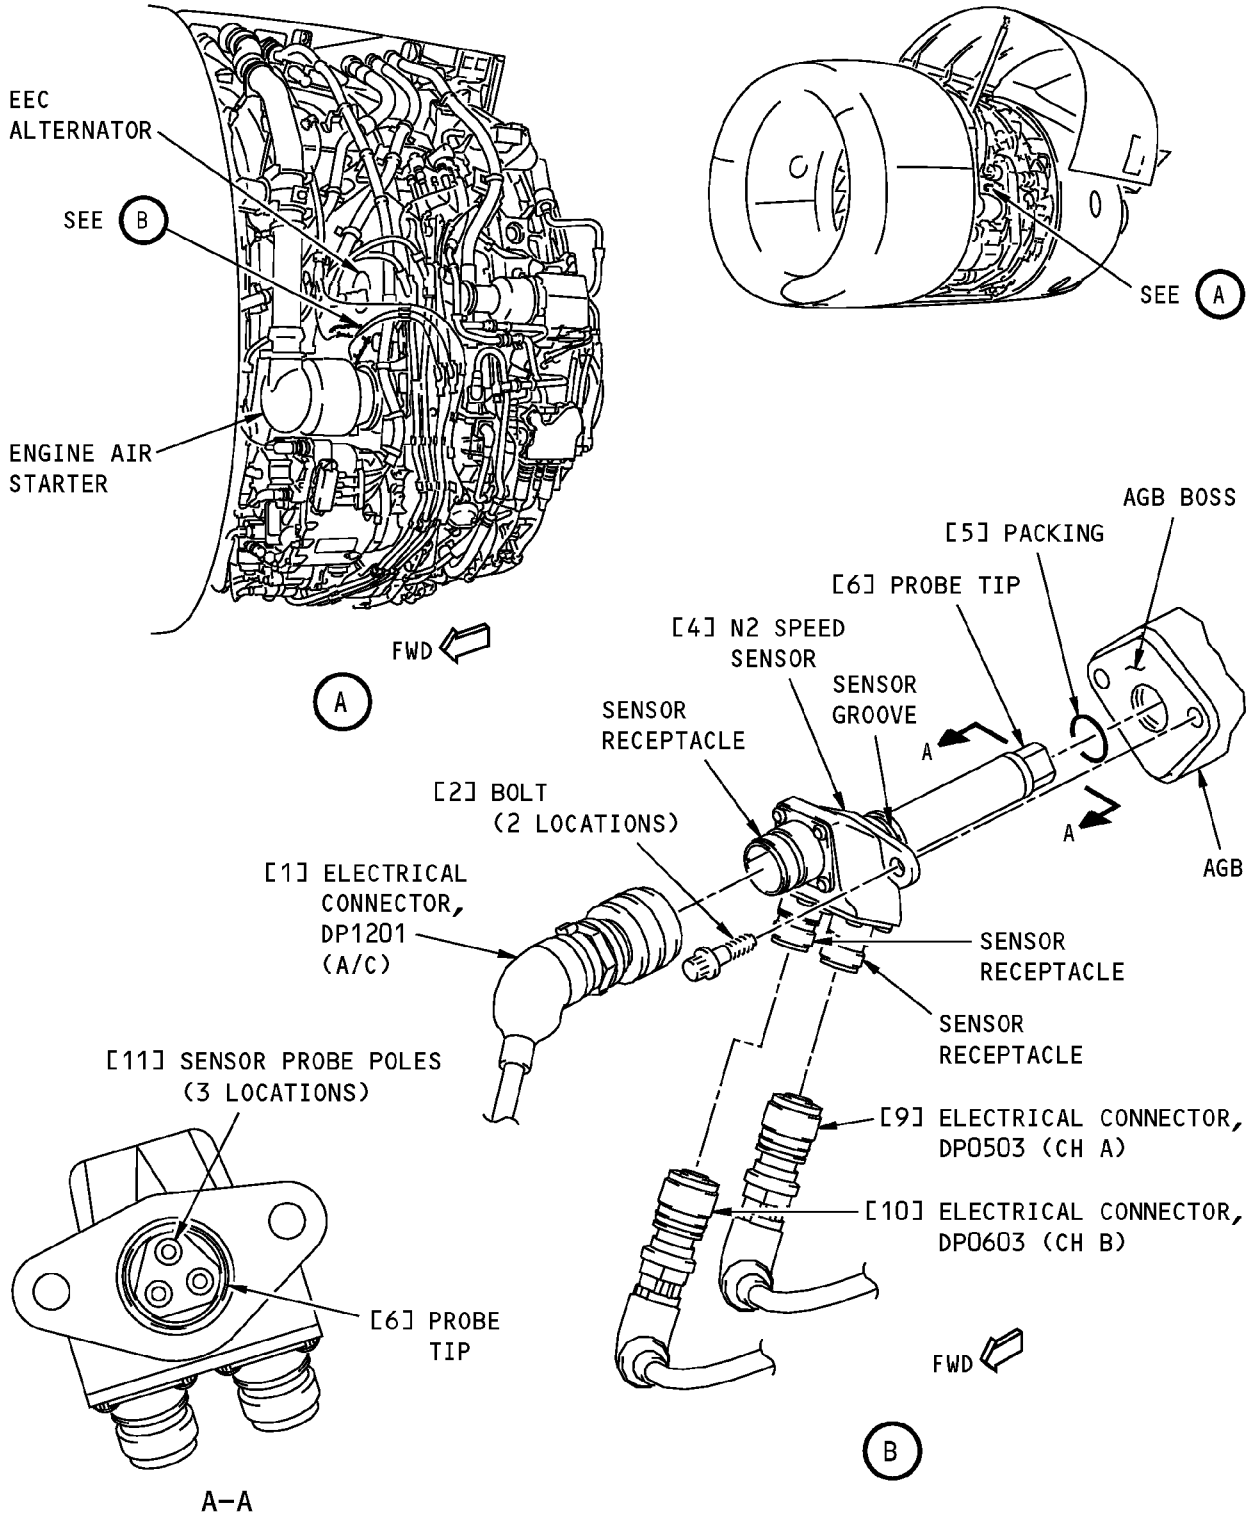

**N2 Speed Sensor Installation**  
 Figure 401/77-11-02-990-801-F00

EFFECTIVITY  
 HAP ALL

**77-11-02**

Page 403  
 Oct 10/2003

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

## TASK 77-11-02-400-801-F00

3. N2 Speed Sensor Installation

(Figure 401)

## A. General

(1) This task is the installation procedure for the N2 speed sensor (referred to as the sensor).

## B. References

Reference	Title
70-10-02-910-801-F00	General Precautions During the Removal and Installation of Engine Components (P/B 201)
71-00-00-800-811-F00	Power Plant Test Reference Table (P/B 501)
71-11-02-410-801-F00	Close the Fan Cowl Panels (P/B 201)

## C. Consumable Materials

Reference	Description	Specification
D00599 [CP2442]	Oil - Engine (CFMI SB 79-001)	
D00601 [CP2101]	Grease - Graphite, High Temperature	SAE AMS 2518
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	BMS15-5
G02129	Tape - Adhesive - Permacel P-29	

## D. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
4	Sensor	77-11-02-01-020	HAP ALL
5	Packing	77-11-02-01-015	HAP ALL

## E. Location Zones

Zone	Area
411	Engine 1 - Engine
421	Engine 2 - Engine

## F. N2 Speed Sensor Installation

SUBTASK 77-11-02-840-001-F00

(1) Do these steps to prepare the sensor [4] for the installation (TASK 70-10-02-910-801-F00) (Figure 401):

- (a) Remove the protective cover from the probe tip [6].
- (b) Remove the tape from the AGB orifice.
- (c) Use a piece of Permacel P-29 tape, G02129, to remove all the magnetic particles from the probe tip [6].
- (d) Carefully, clean the three sensor probe poles [11] with a cotton wiper, G00034.
- (e) Lubricate a new packing [5] with oil, D00599 [CP2442].

**CAUTION:** MAKE SURE YOU INSTALL THE PACKING CORRECTLY ON THE SENSOR GROOVE. IF YOU DO NOT INSTALL THE PACKING CORRECTLY, OIL LOSS CAN OCCUR DURING ENGINE OPERATION AND CAN CAUSE DAMAGE TO THE ENGINE.

- (f) Install the packing [5] on the sensor groove.

EFFECTIVITY
HAP ALL

77-11-02

Page 404  
Jun 15/2009

D633A101-HAP



## AIRCRAFT MAINTENANCE MANUAL

SUBTASK 77-11-02-420-001-F00

- (2) Do these steps to install the sensor [4] (Figure 401):
- Carefully put the sensor [4] into the AGB orifice.
  - Lubricate the threads of the two bolts [2] with grease, D00601 [CP2101].

**CAUTION:** TIGHTEN ONE BOLT AND THEN THE OTHER BOLT IN SMALL INCREMENTS TO PREVENT DISTORTION OF THE N2 SPEED SENSOR. IF IT IS POSSIBLE, USE TWO WRENCHES TO TIGHTEN THE BOLTS AT THE SAME TIME.

- Install the two bolts [2].
  - Tighten the bolts [2] to 98-110 pound-inches (11-12.5 Newton meters).
- Connect the electrical connectors, DP0503 (CH A) [9], DP0603 (CH B) [10] and DP1201 (A/C) [1] to the applicable sensor receptacles CH A, CH B, and A/C.

## G. Put the Airplane Back to Its Usual Condition

SUBTASK 77-11-02-410-001-F00

- (1) Do this task: Close the Fan Cowl Panels, TASK 71-11-02-410-801-F00.

SUBTASK 77-11-02-860-003-F00

- (2) For Engine 1, remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-2

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
A	4	C01390	ENGINE 1 ALTN PWR CHAN B
A	5	C01314	ENGINE 1 ALTN PWR CHAN A
D	5	C01359	DISPLAY DEU 1 PRI

F/O Electrical System Panel, P6-1

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
D	10	C01361	DISPLAY DEU 1 HOLDUP

SUBTASK 77-11-02-860-004-F00

- (3) For Engine 2, remove the safety tags and close these circuit breakers:

F/O Electrical System Panel, P6-1

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
D	9	C01362	DISPLAY DEU 2 HOLDUP
D	11	C01360	DISPLAY DEU 2 PRI

F/O Electrical System Panel, P6-2

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
D	7	C01391	ENGINE 2 ALTN PWR CHAN B
D	8	C01315	ENGINE 2 ALTN PWR CHAN A

## H. N2 Speed Sensor Installation Test

SUBTASK 77-11-02-800-001-F00

- (1) Do the tests that are listed in the Power Plant Test Reference Table (TASK 71-00-00-800-811-F00).

————— END OF TASK —————

EFFECTIVITY  
HAP ALL

D633A101-HAP

77-11-02

Page 405  
Oct 10/2007

## AIRCRAFT MAINTENANCE MANUAL

T49.5 PROBE - REMOVAL/INSTALLATION**1. General**

A. This procedure has two tasks:

- (1) The removal of the T49.5 probe
- (2) The installation of the T49.5 probe.

**TASK 77-21-01-000-801-F00****2. T49.5 Probe Removal**

(Figure 401)

A. General

- (1) This task is the removal procedure for the T49.5 probes (and thermocouples) of the exhaust gas temperature (EGT) indication system.
- (2) The engine has four T49.5 probes, each T49.5 probe has two thermocouples, a high temperature receptacle which is connected by a connector nut on the left or right harnesses, CJ10 or CJ9.
- (3) The T49.5 probes are installed on the LPT case at the 2:00, 5:00, 7:30 and 10:00 o'clock positions.
- (4) The removal and installation tasks for all four T49.5 probes are equivalent; but, for the references to the connectors, top left DP1013 (CH B), bottom left DP1012 (CH B), top right DP0912 (CH A) and bottom right DP0913 (CH A) and harnesses, left CJ10 (CH B) and right CJ9 (CH A).

B. References

Reference	Title
78-31-00-010-801-F00	Open the Thrust Reverser (Selection) (P/B 201)

C. Consumable Materials

Reference	Description	Specification
G00270	Tape - Scotch Flatback Masking 250	ASTM D6123 (Supersedes A-A-883)

D. Location Zones

Zone	Area
411	Engine 1 - Engine
421	Engine 2 - Engine

E. Prepare for the T49.5 Probe Removal

SUBTASK 77-21-01-860-001-F00

- (1) For Engine 1, open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
A	1	C00458	ENGINE 1 IGNITION RIGHT
A	3	C00153	ENGINE 1 IGNITION LEFT
A	4	C01390	ENGINE 1 ALTN PWR CHAN B
A	5	C01314	ENGINE 1 ALTN PWR CHAN A
B	8	C01103	ENGINE 1 START VALVE
D	5	C01359	DISPLAY DEU 1 PRI

EFFECTIVITY  
HAP ALL

D633A101-HAP

# 77-21-01

Page 401  
Oct 15/2008

## AIRCRAFT MAINTENANCE MANUAL

F/O Electrical System Panel, P6-1

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
D	10	C01361	DISPLAY DEU 1 HOLDUP

SUBTASK 77-21-01-860-002-F00

- (2) For Engine 2, open these circuit breakers and install safety tags:

F/O Electrical System Panel, P6-1

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
D	9	C01362	DISPLAY DEU 2 HOLDUP
D	11	C01360	DISPLAY DEU 2 PRI

F/O Electrical System Panel, P6-2

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
C	4	C00154	ENGINE 2 START VALVE
D	4	C00459	ENGINE 2 IGNITION RIGHT
D	6	C00151	ENGINE 2 IGNITION LEFT
D	7	C01391	ENGINE 2 ALTN PWR CHAN B
D	8	C01315	ENGINE 2 ALTN PWR CHAN A

SUBTASK 77-21-01-010-001-F00

**WARNING:** DO THESE SPECIFIED TASKS IN THE CORRECT SEQUENCE BEFORE YOU OPEN THE THRUST REVERSER: RETRACT THE LEADING EDGE, DO THE DEACTIVATION OF THE LEADING EDGE AND THE THRUST REVERSER (FOR GROUND MAINTENANCE), AND OPEN THE FAN COWL PANEL. IF YOU DO NOT OBEY THE ABOVE SEQUENCE, INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT CAN OCCUR.

- (3) Do this task: Open the Thrust Reverser (Selection), TASK 78-31-00-010-801-F00.

## F. T49.5 Probe Removal

SUBTASK 77-21-01-020-001-F00

**CAUTION:** BE CAREFUL OF THE FIRE DETECTOR HARNESSSES. DAMAGE TO EQUIPMENT CAN OCCUR WHEN YOU REMOVE THE T49.5 PROBE.

- (1) Do these steps to remove the T49.5 probe [3]:
- (a) Disconnect the applicable connector nut [2], DP1013 (top left), DP1012 (bottom left), DP0912 (top right) or DP0913 (bottom right) from the applicable receptacle.

**HAP ALL PRE SB CFM56-7B-72-088**

- (b) Remove the two nuts [4], washers [5], bolts [8] and washers [7] that attach the receptacle to the bracket.

**HAP ALL POST SB CFM56-7B-72-088**

- (c) Remove the two bolts [8] and washers [7] that attach the receptacle to the bracket.

**HAP ALL PRE SB CFM56-7B-72-0423**

- (d) Remove the four nuts [6] that attach the T49.5 probe [3] to the LPT case studs.

EFFECTIVITY  
HAP ALL

**77-21-01**

Page 402  
Oct 15/2008

D633A101-HAP

**AIRCRAFT MAINTENANCE MANUAL****HAP ALL PRE SB CFM56-7B-72-0423 (Continued)****HAP ALL POST SB CFM56-7B-72-0423**

- (e) Cut and remove the lockwire which attach the bolt to the specific washer.

NOTE: For the engine with T49.5 probe brackets repaired, you find a bolt which replaces a stud and a nut [6]. A lockwire lock the bolt to a specific washer located on the nut [6].

Write on the specific washer mark area, the number of SB CFM56-7B 72-0423.

- (f) Remove and keep the bolt which attach the T49.5 probe [3] to the bracket assembly on the turbine frame.
- (g) Remove the nut [6] which attach the T49.5 probe [3] to the turbine frame.
- (h) Remove and keep the specific washer.

**HAP ALL**

- (i) Carefully, remove the T49.5 probes [3] from the engine.
- (j) Put protective covers on the thermocouples.
- (k) Put a protective cover on the connector nut and receptacle.
- (l) Put Scotch Flatback Masking Tape 250, G00270 (metal tape) or protective covers on the two LPT case ports.

————— **END OF TASK** —————


EFFECTIVITY  
HAP ALL

D633A101-HAP

**77-21-01**

Page 403  
Oct 15/2008

737-600/700/800/900  
AIRCRAFT MAINTENANCE MANUAL

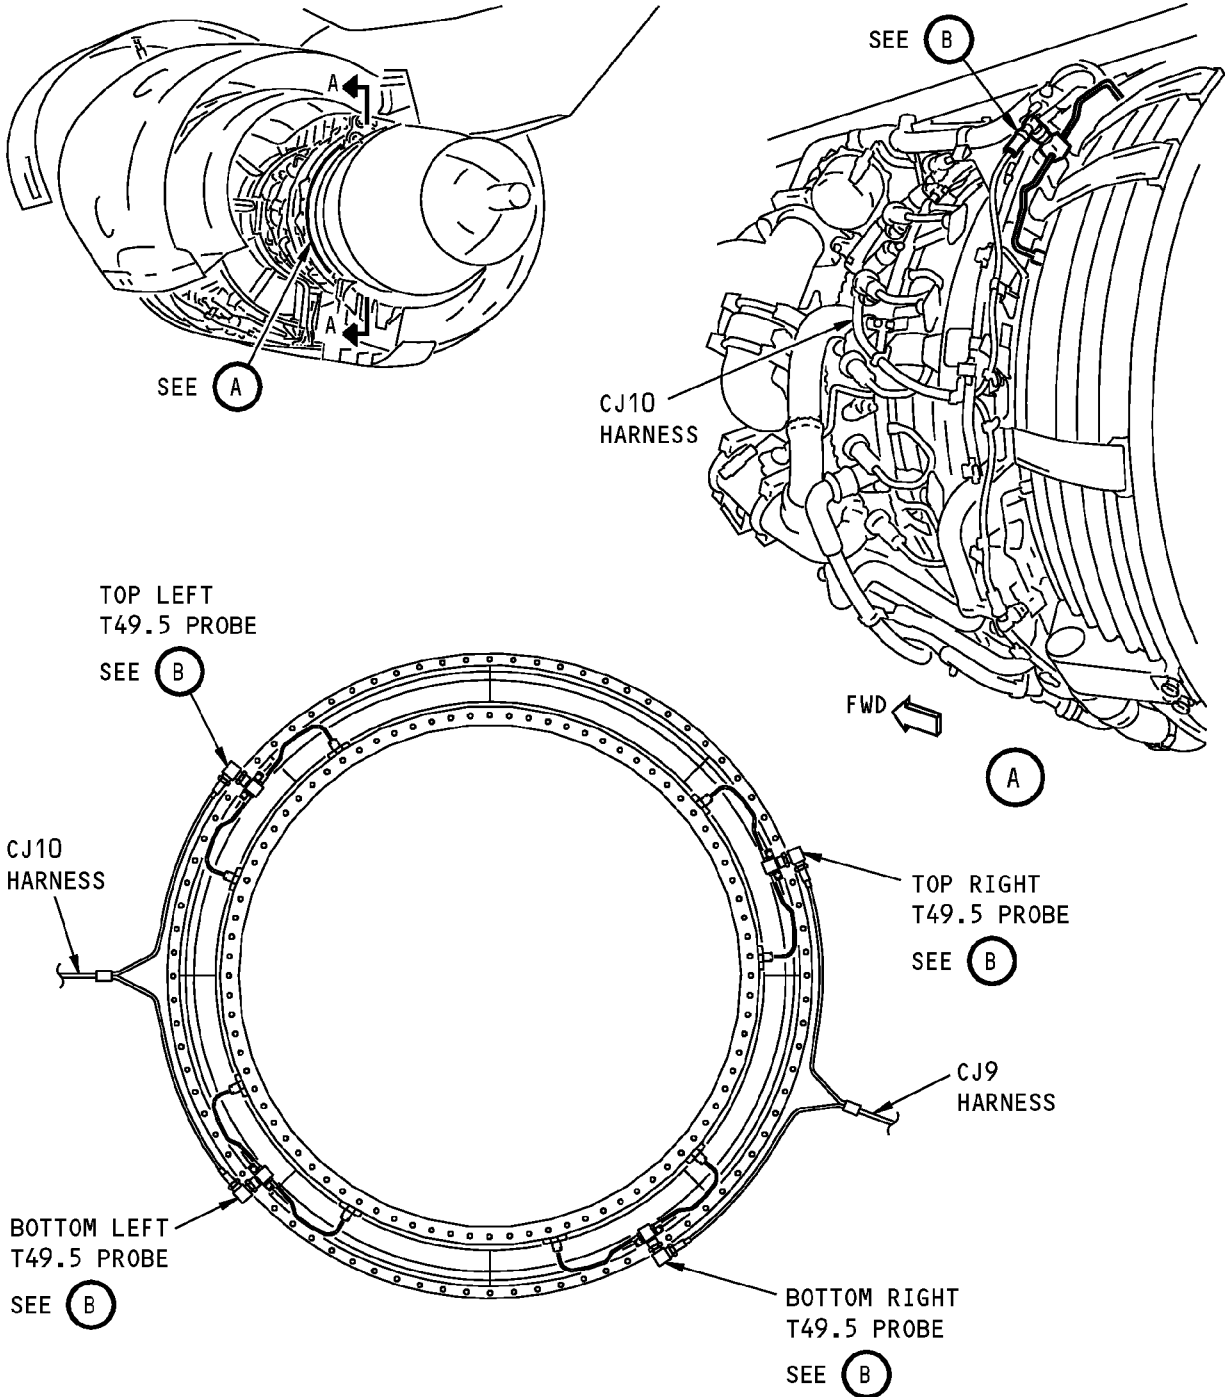

(VIEW IN THE FORWARD DIRECTION)

A-A

S-M56-MM-03269-00-B


**T49.5 Probe Installation**  
**Figure 401 (Sheet 1 of 5)/77-21-01-990-801-F00**

EFFECTIVITY
HAP ALL

**77-21-01**

## AIRCRAFT MAINTENANCE MANUAL

[2] TOP LEFT CONNECTOR NUT DP1013 (CH B)  
(BOTTOM LEFT CONNECTOR NUT DP1012 (CH B),  
TOP RIGHT CONNECTOR NUT DP0912 (CH A)  
AND BOTTOM RIGHT CONNECTOR NUT DP0913 (CH A)  
ARE EQUIVALENT)

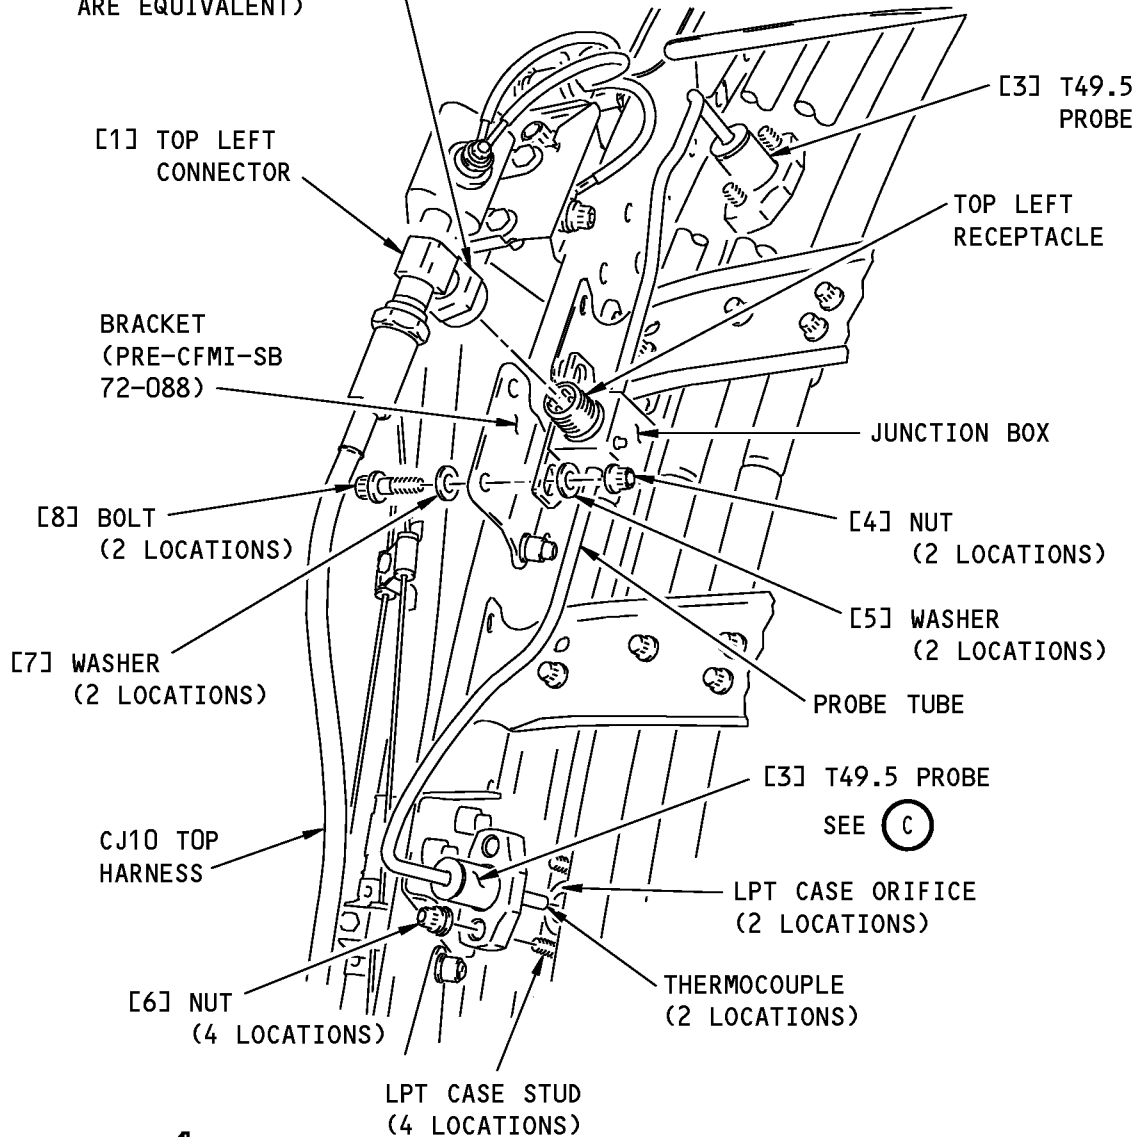

TOP LEFT T49.5 PROBE  
(BOTTOM LEFT, TOP RIGHT AND BOTTOM RIGHT  
T49.5 PROBES ARE EQUIVALENT)

(B)

## T49.5 Probe Installation

Figure 401 (Sheet 2 of 5)/77-21-01-990-801-F00

## EFFECTIVITY

HAP ALL POST SB CFM56-7B-72-0423 AND PRE SB  
CFM56-7B-72-088


77-21-01

Page 405  
Feb 10/2007

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

[2] TOP LEFT CONNECTOR NUT DP1013 (CH B)  
 (BOTTOM LEFT CONNECTOR NUT DP1012 (CH B),  
 TOP RIGHT CONNECTOR NUT DPO912 (CH A)  
 AND BOTTOM RIGHT CONNECTOR NUT DPO913 (CH A)  
 ARE EQUIVALENT)

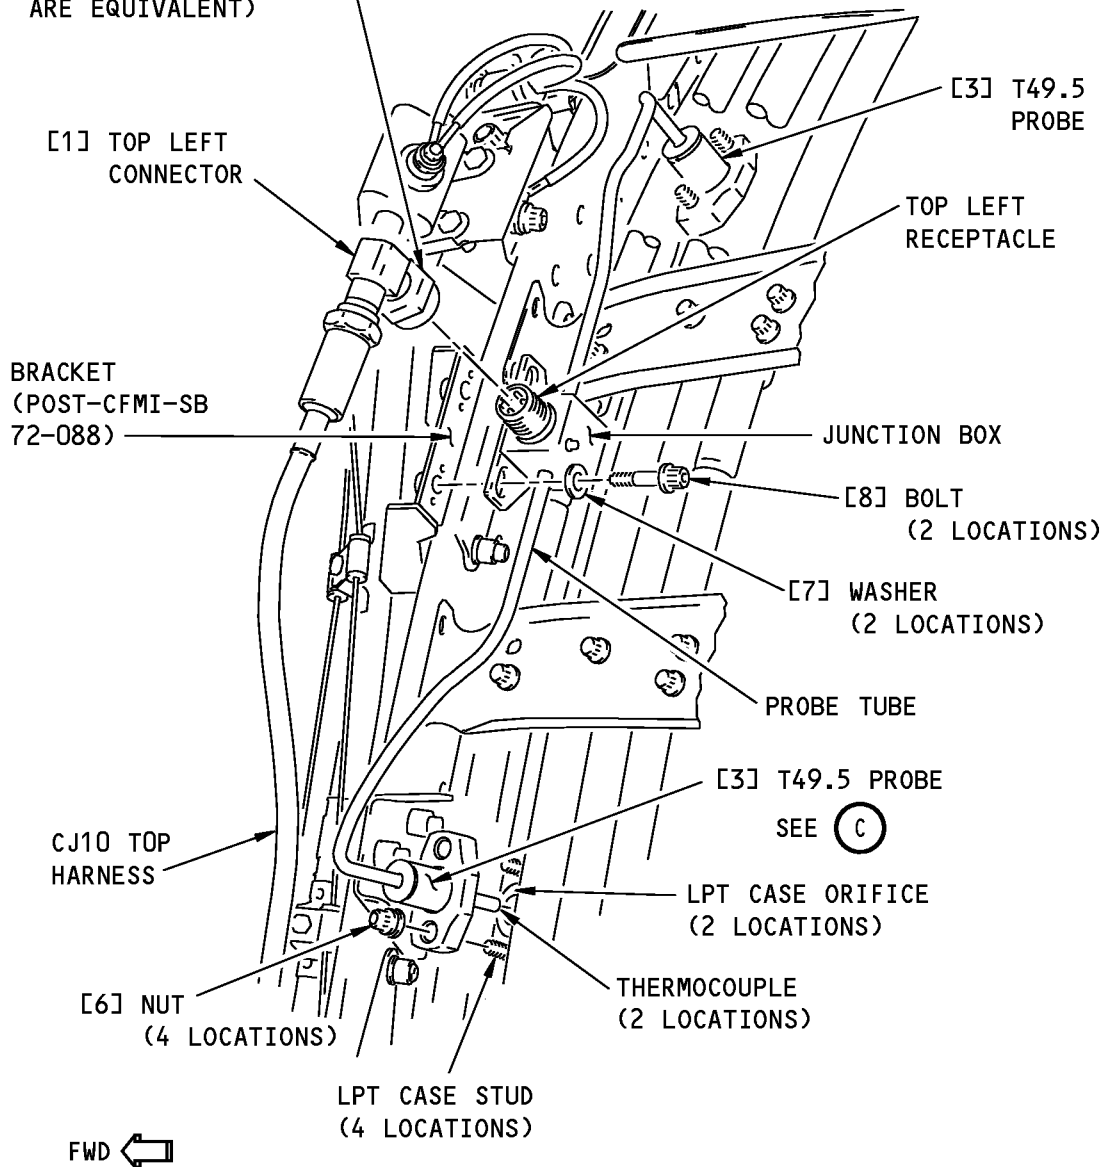

TOP LEFT T49.5 PROBE  
 (BOTTOM LEFT, TOP RIGHT AND BOTTOM RIGHT  
 T49.5 PROBES ARE EQUIVALENT)

(B)

## T49.5 Probe Installation

Figure 401 (Sheet 3 of 5)/77-21-01-990-801-F00

## EFFECTIVITY


HAP ALL POST SB CFM56-7B-72-088 AND POST SB  
 CFM56-7B-72-0423

D633A101-HAP

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

77-21-01

Page 406  
 Feb 10/2007

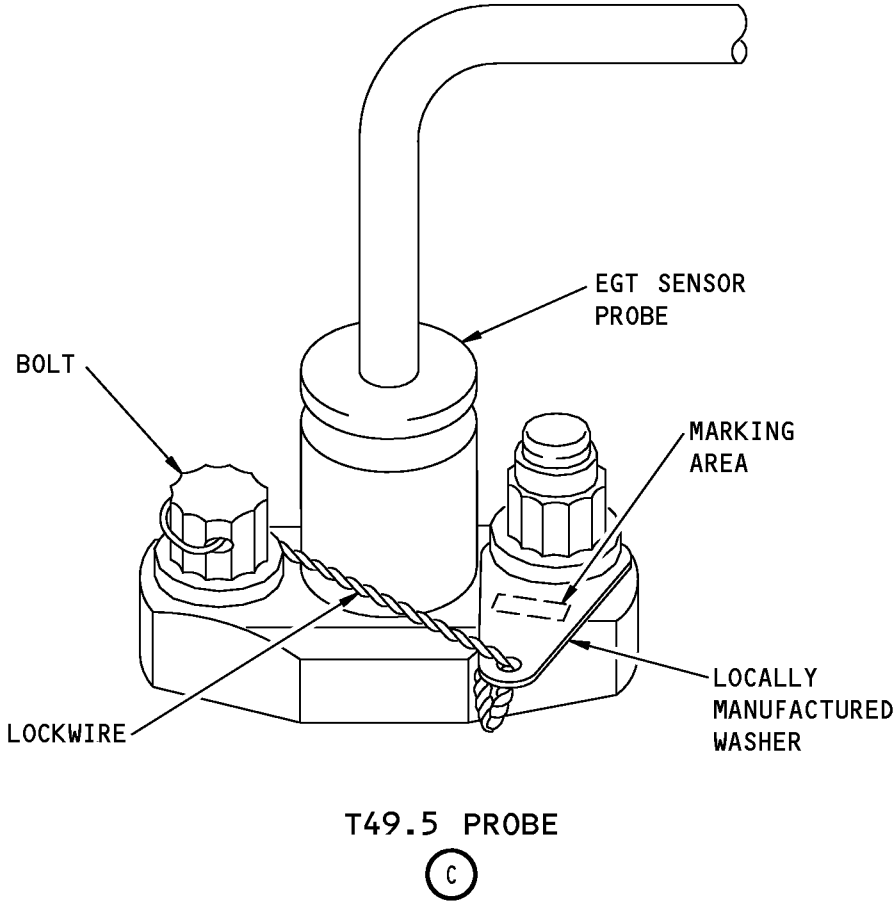


T49.5 Probe Installation  
Figure 401 (Sheet 4 of 5)/77-21-01-990-801-F00

EFFECTIVITY  
HAP ALL POST SB CFM56-7B-72-0423


77-21-01



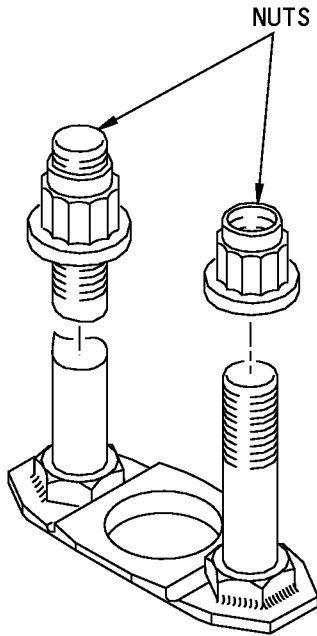

T49.5 PROBE  
(BEFORE  
BROKEN STUD)

(C)

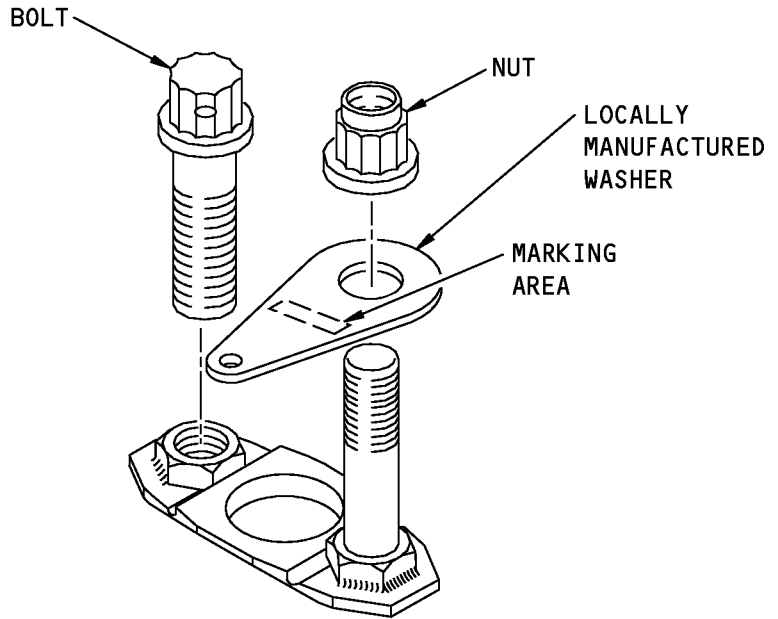

T49.5 PROBE  
(AFTER  
REPAIR)

(C)

**T49.5 Probe Installation**  
**Figure 401 (Sheet 5 of 5)/77-21-01-990-801-F00**

EFFECTIVITY  
HAP ALL POST SB CFM56-7B-72-0423

D633A101-HAP

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**77-21-01**

Page 408  
Feb 10/2007

## AIRCRAFT MAINTENANCE MANUAL

## TASK 77-21-01-400-801-F00

3. T49.5 Probe Installation

(Figure 401)

## A. General

(1) This task is the installation procedure for the T49.5 probes.

## B. References

Reference	Title
70-20-01-800-804-F00	Lockwire Installation (P/B 201)
71-00-00-800-811-F00	Power Plant Test Reference Table (P/B 501)
78-31-00-010-804-F00	Close the Thrust Reverser (Selection) (P/B 201)

## C. Consumable Materials

Reference	Description	Specification
D00601 [CP2101]	Grease - Graphite, High Temperature	SAE AMS 2518
D50068 [CP2544]	Lubricant - Molykote P37, Paste	
G02345 [CP8001]	Lockwire - Inconel (0.032 inch Dia.)	NASM20995~ N32
G50065 [CP8006]	Cable, Safety, Stainless Steel, 0.8mm (0.032inch) Diameter	

## D. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
3	Probe	77-21-01-01-030	HAP ALL

## E. Location Zones

Zone	Area
411	Engine 1 - Engine
421	Engine 2 - Engine

## F. T49.5 Probe Installation

SUBTASK 77-21-01-420-001-F00

- (1) Do these steps to prepare the T49.5 probe [3] for the installation:
- Remove the masking (metal) tape or protective covers from the two LPT case ports.
  - Remove the protective cover from the connector nut and receptacle.
  - Remove the protective covers from the thermocouples.
  - Lubricate the threads of the two bolts [8] with grease, D00601 [CP2101].
  - Lubricate the threads of the four LPT case studs with lubricant, D50068 [CP2544].

SUBTASK 77-21-01-420-002-F00

**CAUTION:** BE CAREFUL OF THE FIRE DETECTOR HARNESSSES. DAMAGE TO EQUIPMENT CAN OCCUR WHEN YOU INSTALL THE T49.5 PROBE.

- (2) Do these steps to install the T49.5 probe [3]:
- Carefully, install the T49.5 probes [3] in the LPT case ports.

**HAP ALL PRE SB CFM56-7B-72-0423**

- Loosely install the four nuts [6] to attach the T49.5 probe [3] to the LPT case studs.

EFFECTIVITY
HAP ALL

**77-21-01**Page 409  
Jun 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

## HAP ALL PRE SB CFM56-7B-72-0423 (Continued)

## HAP ALL POST SB CFM56-7B-72-0423

- (c) Lubricate the threads of the bolts that you have removed before with lubricant, D50068 [CP2544].

**NOTE:** For the engine with T49.5 probe [3] brackets repaired, you must replace a bolt to one missing stud and one nut [6] on each bracket.

- (d) Attach the T49.5 probe [3] to the turbine frame bracket with the bolts located in the holes threaded of the T49.5 probe [3] bracket.
- (e) Install the specific washer that you have removed before on the studs with the number engraved at the top.

**NOTE:** Be careful to set the plate of the specific washers turned to the head of the bolts.

- (f) Attach the T49.5 probe [3] to the studs with the nuts [6].
- (g) Tighten the nuts [6] and the bolts to 100 - 110 Pound-inches (11.5 - 12.5 Newton-meters).
- (h) Lock the bolts by a lockwire, G02345 [CP8001] or cable, G50065 [CP8006] (Ref. to Lockwire Installation, TASK 70-20-01-800-804-F00).
- 1) Install the lockwire through the head holes.
  - 2) Attach the specific washers.

## HAP ALL PRE SB CFM56-7B-72-088

- (i) Loosely install the two bolts [8], washers [7], washers [5] and nuts [4] to attach the receptacle to the bracket.

## HAP ALL POST SB CFM56-7B-72-088

- (j) Loosely install the two bolts [8] and washers [7] to attach the receptacle to the bracket.

## HAP ALL

- (k) Do a check for the gap between the probe tube (T49.5 probe to the junction box) and the adjacent parts (brackets, nuts, bolts, etc).
- 1) Make sure that the gap is not less than 0.12 inch (3 mm).
  - 2) Tighten the nuts [6] and [4] to 98-110 pound-inches (11-12.5 Newton meters), respectively.
- (l) Make sure that the connector nut [2] and receptacle is clean and clear of unwanted materials.
- (m) Connect the applicable connector nut [2], DP1013 (CH B, top left), DP1012 (CH B, bottom left), DP0912 (CH A, top right) or DP0913 (CH A, bottom right) to the applicable receptacle.
- 1) Tighten the connector nut [2] to 133-177 Pound-inches (15-20 Newton meters).
  - 2) Install the lockwire, G02345 [CP8001] or cable, G50065 [CP8006] to the connector nut [2].

## G. Put the Airplane Back to Its Usual Condition

SUBTASK 77-21-01-010-005-F00

**WARNING:** OBEY THE INSTRUCTIONS IN THE PROCEDURE TO CLOSE THE THRUST REVERSER. IF YOU DO NOT OBEY THE INSTRUCTIONS, INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT CAN OCCUR.

- (1) Do this task: Close the Thrust Reverser (Selection), TASK 78-31-00-010-804-F00.

EFFECTIVITY  
HAP ALL

**77-21-01**

Page 410  
Feb 10/2007

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

SUBTASK 77-21-01-860-011-F00

- (2) For Engine 1, remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-2

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
A	1	C00458	ENGINE 1 IGNITION RIGHT
A	3	C00153	ENGINE 1 IGNITION LEFT
A	4	C01390	ENGINE 1 ALTN PWR CHAN B
A	5	C01314	ENGINE 1 ALTN PWR CHAN A
B	8	C01103	ENGINE 1 START VALVE
D	5	C01359	DISPLAY DEU 1 PRI

F/O Electrical System Panel, P6-1

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
D	10	C01361	DISPLAY DEU 1 HOLDUP

SUBTASK 77-21-01-860-012-F00

- (3) For Engine 2, remove the safety tags and close these circuit breakers:

F/O Electrical System Panel, P6-1

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
D	9	C01362	DISPLAY DEU 2 HOLDUP
D	11	C01360	DISPLAY DEU 2 PRI

F/O Electrical System Panel, P6-2

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
C	4	C00154	ENGINE 2 START VALVE
D	4	C00459	ENGINE 2 IGNITION RIGHT
D	6	C00151	ENGINE 2 IGNITION LEFT
D	7	C01391	ENGINE 2 ALTN PWR CHAN B
D	8	C01315	ENGINE 2 ALTN PWR CHAN A

## H. T49.5 Probe Installation Test

SUBTASK 77-21-01-800-002-F00

- (1) Do this task: Power Plant Test Reference Table, TASK 71-00-00-800-811-F00.

————— **END OF TASK** —————

EFFECTIVITY  
HAP ALL

D633A101-HAP

# 77-21-01

Page 411  
Feb 10/2007

## AIRCRAFT MAINTENANCE MANUAL

T49.5 PROBE AND EGT SYSTEM - INSPECTION/CHECK**1. General**

A. This procedure contains one task, the electrical check of the T49.5 probe.

**TASK 77-21-01-200-801-F00****2. T49.5 Probe and EGT System Inspection**

(Figure 601)

**A. General**

- (1) This task is an electrical check for the complete system of the exhaust gas temperature (EGT) indication system.
- (2) The engine has four T49.5 probes, each T49.5 probe has two thermocouples, a high temperature receptacle which is connected by a connector nut on the left or right harnesses, CJ10 or CJ9.
- (3) The T49.5 probes are installed on the LPT case at the 2:00, 5:00, 7:30 and 10:00 o'clock positions.
- (4) The electrical check for all four T49.5 probes is equivalent; but, for the references to the connectors, top left DP1013 (CH B), bottom left DP1012 (CH B), top right DP0912 (CH A) and bottom right DP0913 (CH A) and harnesses, left CJ10 (CH B) and right CJ9 (CH A).
- (5) The T49.5 probe is made of alumel (AL) and chromel (CR) metals.

**B. References**

Reference	Title
71-00-00-800-811-F00	Power Plant Test Reference Table (P/B 501)
73-21-06-000-802-F00	3 O'clock Strut Harness Removal (P/B 401)
73-21-06-000-803-F00	Core Engine Harness Removal (P/B 401)
73-21-06-400-802-F00	3 O'clock Strut Harness Installation (P/B 401)
73-21-06-400-803-F00	Core Engine Harness Installation (P/B 401)
77-21-01-000-801-F00	T49.5 Probe Removal (P/B 401)
77-21-01-400-801-F00	T49.5 Probe Installation (P/B 401)
78-31-00-010-801-F00	Open the Thrust Reverser (Selection) (P/B 201)
78-31-00-010-804-F00	Close the Thrust Reverser (Selection) (P/B 201)

**C. Tools/Equipment**

**NOTE:** When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-1276	Tester - Insulation Resistance (Output Test Voltage 100/250/500/1000 VDC)
STD-1045	Ohmmeter - Resistance

**D. Consumable Materials**

Reference	Description	Specification
G02345 [CP8001]	Lockwire - Inconel (0.032 inch Dia.)	NASM20995~ N32
G50065 [CP8006]	Cable, Safety, Stainless Steel, 0.8mm (0.032inch) Diameter	

EFFECTIVITY  
HAP ALL

D633A101-HAP

**77-21-01**

Page 601  
Jun 15/2009

## AIRCRAFT MAINTENANCE MANUAL

## E. Location Zones

Zone	Area
411	Engine 1 - Engine
421	Engine 2 - Engine

## F. Prepare for the T49.5 Probe Inspection

SUBTASK 77-21-01-860-005-F00

- (1) For Engine 1, open these circuit breakers and install safety tags:

## CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
A	1	C00458	ENGINE 1 IGNITION RIGHT
A	3	C00153	ENGINE 1 IGNITION LEFT
A	4	C01390	ENGINE 1 ALTN PWR CHAN B
A	5	C01314	ENGINE 1 ALTN PWR CHAN A
B	8	C01103	ENGINE 1 START VALVE
D	5	C01359	DISPLAY DEU 1 PRI

## F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	10	C01361	DISPLAY DEU 1 HOLDUP

SUBTASK 77-21-01-860-006-F00

- (2) For Engine 2, open these circuit breakers and install safety tags:

## F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	9	C01362	DISPLAY DEU 2 HOLDUP
D	11	C01360	DISPLAY DEU 2 PRI

## F/O Electrical System Panel, P6-2

Row	Col	Number	Name
C	4	C00154	ENGINE 2 START VALVE
D	4	C00459	ENGINE 2 IGNITION RIGHT
D	6	C00151	ENGINE 2 IGNITION LEFT
D	7	C01391	ENGINE 2 ALTN PWR CHAN B
D	8	C01315	ENGINE 2 ALTN PWR CHAN A

SUBTASK 77-21-01-010-003-F00

**WARNING:** DO THESE SPECIFIED TASKS IN THE CORRECT SEQUENCE BEFORE YOU OPEN THE THRUST REVERSER: RETRACT THE LEADING EDGE, DO THE DEACTIVATION OF THE LEADING EDGE AND THE THRUST REVERSER (FOR GROUND MAINTENANCE), AND OPEN THE FAN COWL PANEL. IF YOU DO NOT OBEY THE ABOVE SEQUENCE, INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT CAN OCCUR.

- (3) Do this task: Open the Thrust Reverser (Selection), TASK 78-31-00-010-801-F00.

SUBTASK 77-21-01-020-004-F00

- (4) Disconnect the applicable connector nut, DP1013 (top left), DP1012 (bottom left), DP0912 (top right) or DP0913 (bottom right) from the applicable receptacle.

- (a) Do a visual inspection of the applicable connector nut and harness receptacle for corrosion.

EFFECTIVITY  
HAP ALL

77-21-01

Page 602  
Jun 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

- 1) If you find corrosion at the connector nut and harness receptacle, then clean the components and do the electrical checks below.

## G. EGT System Inspection

SUBTASK 77-21-01-760-001-F00

- (1) Do the electrical resistance check of the EGT system as follows:

- (a) Use an ohmmeter, STD-1045 or equivalent, with a precision of 0.01 Ohm and a range of 0-200 Ohms for the test.
- (b) Set the Ohmmeter to zero (range 0-200 Ohm).
- (c) Measure and record the resistance value (See tables below).
- (d) Change the direction of the ohmmeter wires for the subsequent resistance value.
- (e) Measure and record the resistance value between the pins A and B at the same receptacle, again.
- (f) Add the two values together and then, divide the result by two.

- 1) The calculated average value must be in accordance with the values given in the tables below:

- a) Electrical check of J wiring harness + CJ wiring harness + T49.5 probe

Measure from:	Sector	Pins	Line Resistance at 20 °C (68 °F)
J9 connector DP0909	S1	b-u	5.00 to 6.13 Ohms
J9 connector DP0909	S2	H-a	5.39 to 6.60 Ohms
J10 connector DP1010	S3	b-u	5.52 to 6.76 Ohms
J10 connector DP1010	S4	H-a	5.61 to 6.88 Ohms

**NOTE:** Line resistance values increases 10% higher at 80 °C (176 °F).

- b) Electrical check of CJ wiring harness + T49.5 probe

Measure from:	Sector	Pins	Line Resistance at 20 °C (68 °F)
CJ9 connector DP0911	S1	7-8	1.66 to 2.10 Ohms
CJ9 connector DP0911	S2	9-10	2.05 to 2.57 Ohms
CJ10 connector DP1011	S3	1-2	2.53 to 2.91 Ohms
CJ10 connector DP1011	S4	3-4	2.42 to 3.02 Ohms

**NOTE:** Line resistance values increases 10% higher at 80 °C (176 °F).

- c) Electrical check of T49.5 probe

Measure from:	Sector	Pins	Line Resistance at 20 °C (68 °F)
T49.5 probe connector DP0912	S1	A-B	0.6 to 0.8 Ohms
T49.5 probe connector DP0913	S2	A-B	0.6 to 0.8 Ohms

EFFECTIVITY  
HAP ALL

# 77-21-01

Page 603  
Jun 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

(Continued)

Measure from:	Sector	Pins	Line Resistance at 20 °C (68 °F)
T49.5 probe connector DP1012	S3	A-B	0.6 to 0.8 Ohms
T49.5 probe connector DP1013	S4	A-B	0.6 to 0.8 Ohms

**NOTE:** Line resistance values increases 10% higher at 80 °C (176 °F).

(g) If the values are not correct, replace the defective part. These are the tasks:

T49.5 Probe Removal, TASK 77-21-01-000-801-F00

T49.5 Probe Installation, TASK 77-21-01-400-801-F00

3 O'clock Strut Harness Removal, TASK 73-21-06-000-802-F00

3 O'clock Strut Harness Installation, TASK 73-21-06-400-802-F00

Core Engine Harness Removal, TASK 73-21-06-000-803-F00

Core Engine Harness Installation, TASK 73-21-06-400-803-F00.

SUBTASK 77-21-01-760-003-F00

(2) Do the insulation resistance check of the complete EGT system as follows:

(a) Measure the insulation resistance with a insulation resistance tester, COM-1276, between each pin and the receptacle housing.

(b) Make sure that the insulation resistance value is more than 20 MOhms.

1) Insulation resistance check of J wiring harness + CJ wiring harness + T49.5 probe

Measure from:	Sector	Pins	Line Resistance at 20 °C (68 °F)
J9 connector DP0909	S1	b-ground & u-ground	Higher than 20 MOhms
J9 connector DP0909	S2	H-ground & a-ground	Higher than 20 MOhms
J10 connector DP1010	S3	b-ground & u-ground	Higher than 20 MOhms
J10 connector DP1010	S4	H-ground & a-ground	Higher than 20 MOhms

2) Insulation resistance check of CJ wiring harness + T49.5 probe

Measure from:	Sector	Pins	Line Resistance at 20 °C (68 °F)
CJ9 connector DP0911	S1	7-ground & 8-ground	Higher than 20 MOhms
CJ9 connector DP0911	S2	9-ground & 10-ground	Higher than 20 MOhms
CJ10 connector DP1011	S3	1-ground & 2-ground	Higher than 20 MOhms
CJ10 connector DP1011	S4	3-ground & 4-ground	Higher than 20 MOhms

3) Insulation resistance check of T49.5 probe

EFFECTIVITY  
HAP ALL

D633A101-HAP

# 77-21-01

Page 604  
Jun 15/2009



## AIRCRAFT MAINTENANCE MANUAL

Measure from:	Sector	Pins	Line Resistance at 20 °C (68 °F)
T49.5 probe connector DP0912	S1	A-ground & B-ground	Higher than 20 MOhms
T49.5 probe connector DP0913	S2	A-ground & B-ground	Higher than 20 MOhms
T49.5 probe connector DP1012	S3	A-ground & B-ground	Higher than 20 MOhms
T49.5 probe connector DP1013	S4	A-ground & B-ground	Higher than 20 MOhms

(c) If the values are not correct, replace the defective part. These are the tasks:

T49.5 Probe Removal, TASK 77-21-01-000-801-F00

T49.5 Probe Installation, TASK 77-21-01-400-801-F00

3 O'clock Strut Harness Removal, TASK 73-21-06-000-802-F00

3 O'clock Strut Harness Installation, TASK 73-21-06-400-802-F00

Core Engine Harness Removal, TASK 73-21-06-000-803-F00

Core Engine Harness Installation, TASK 73-21-06-400-803-F00.

SUBTASK 77-21-01-420-005-F00

(3) Do these steps to connect the applicable connector nut:

(a) Connect the applicable connector nut, DP1013 (CH B, top left), DP1012 (CH B, bottom left), DP0912 (CH A, top right) or DP0913 (CH A, bottom right) to the applicable receptacle.

1) Tighten the connector nut to 133 in-lb (15 N·m)-177 in-lb (20 N·m).

2) Install lockwire, G02345 [CP8001] or cable, G50065 [CP8006] to the connector nut.

H. Put the Airplane Back to Its Usual Condition

SUBTASK 77-21-01-010-004-F00

**WARNING:** OBEY THE INSTRUCTIONS IN THE PROCEDURE TO CLOSE THE THRUST REVERSER. IF YOU DO NOT OBEY THE INSTRUCTIONS, INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT CAN OCCUR.

(1) Do this task: Close the Thrust Reverser (Selection), TASK 78-31-00-010-804-F00.

SUBTASK 77-21-01-860-009-F00

(2) For Engine 1, remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
A	1	C00458	ENGINE 1 IGNITION RIGHT
A	3	C00153	ENGINE 1 IGNITION LEFT
A	4	C01390	ENGINE 1 ALTN PWR CHAN B
A	5	C01314	ENGINE 1 ALTN PWR CHAN A
B	8	C01103	ENGINE 1 START VALVE
D	5	C01359	DISPLAY DEU 1 PRI

F/O Electrical System Panel, P6-1

Row	Col	Number	Name
D	10	C01361	DISPLAY DEU 1 HOLDUP

EFFECTIVITY  
HAP ALL

# 77-21-01

Page 605  
Oct 15/2008

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

SUBTASK 77-21-01-860-010-F00

- (3) For Engine 2, remove the safety tags and close these circuit breakers:

F/O Electrical System Panel, P6-1

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
D	9	C01362	DISPLAY DEU 2 HOLDUP
D	11	C01360	DISPLAY DEU 2 PRI

F/O Electrical System Panel, P6-2

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
C	4	C00154	ENGINE 2 START VALVE
D	4	C00459	ENGINE 2 IGNITION RIGHT
D	6	C00151	ENGINE 2 IGNITION LEFT
D	7	C01391	ENGINE 2 ALTN PWR CHAN B
D	8	C01315	ENGINE 2 ALTN PWR CHAN A

## I. T49.5 Probe Installation Test

SUBTASK 77-21-01-800-001-F00

- (1) Do the test that is listed in the Power Plant Test Reference Table (TASK 71-00-00-800-811-F00).


————— **END OF TASK** —————

EFFECTIVITY  
HAP ALL

D633A101-HAP

# 77-21-01

Page 606  
Oct 15/2008

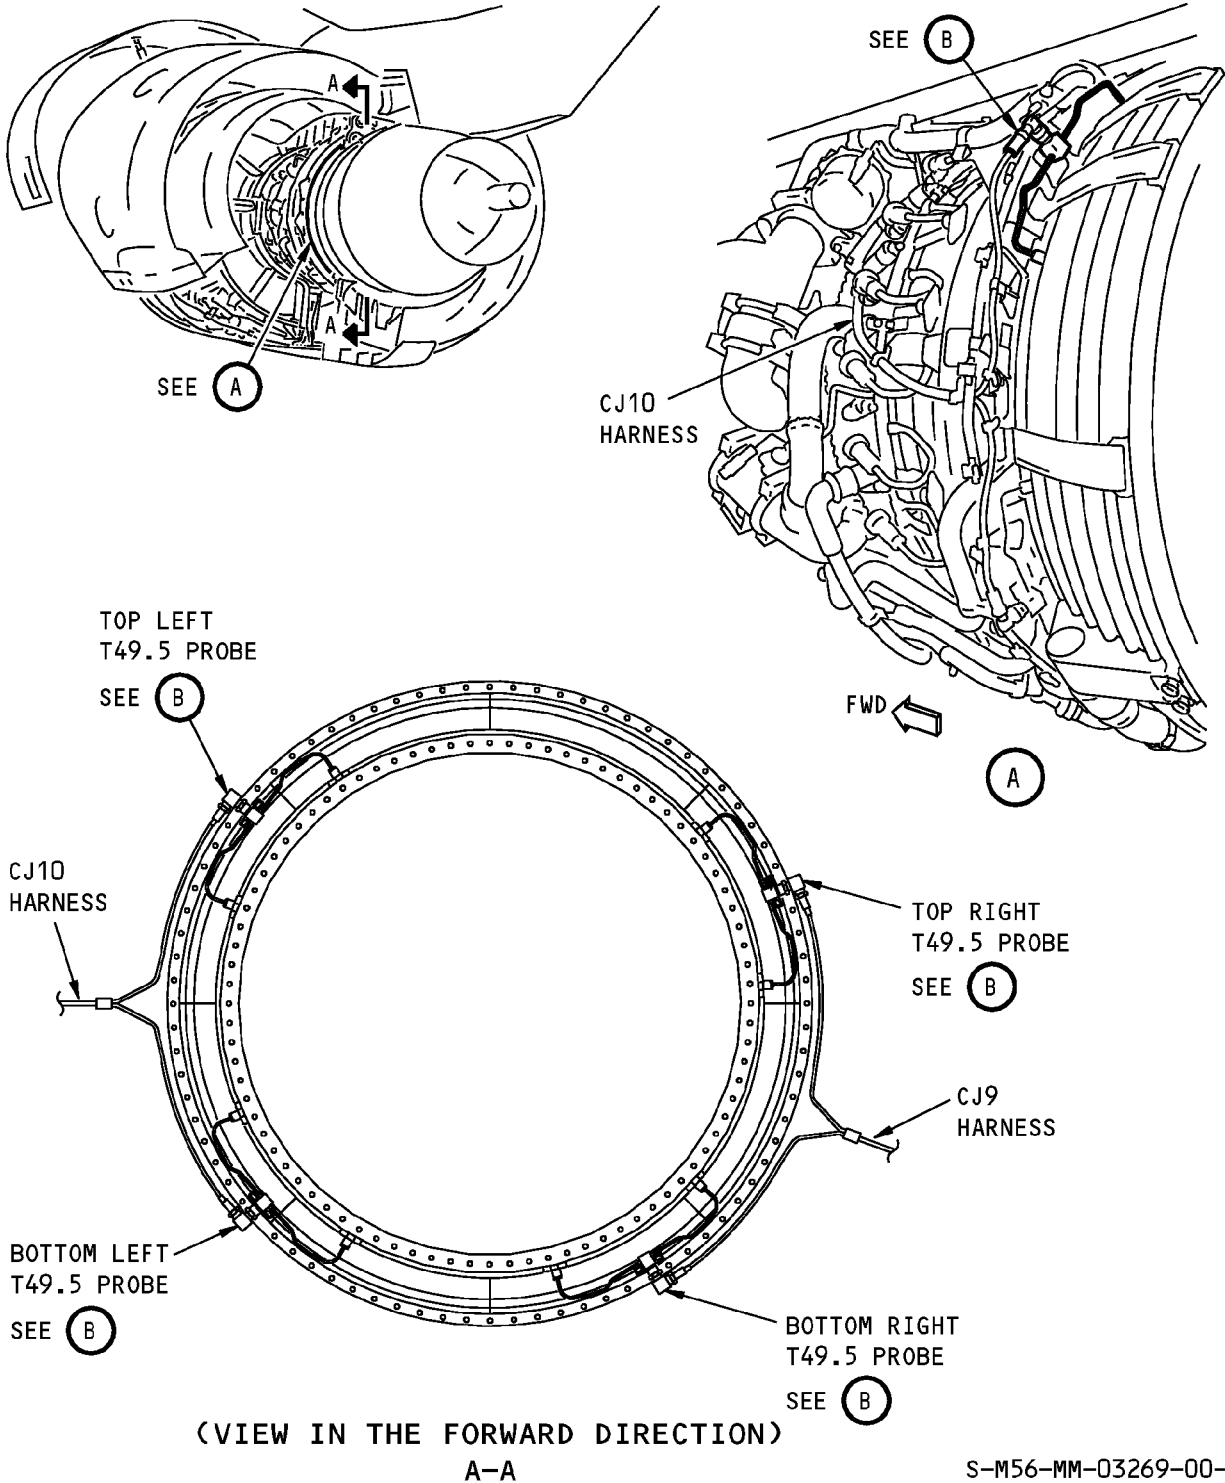




**T49.5 Probe Inspection**  
**Figure 601 (Sheet 1 of 2)/77-21-01-990-802-F00**

EFFECTIVITY
HAP ALL

**77-21-01**

737-600/700/800/900  
**AIRCRAFT MAINTENANCE MANUAL**

TOP LEFT CONNECTOR NUT DP1013 (CH B)  
 (BOTTOM LEFT CONNECTOR NUT DP1012 (CH B),  
 TOP RIGHT CONNECTOR NUT DP0912 (CH A)  
 AND BOTTOM RIGHT CONNECTOR NUT DP0913 (CH A)  
 ARE EQUIVALENT)

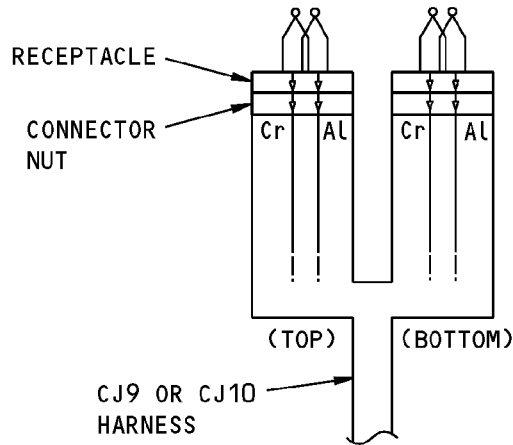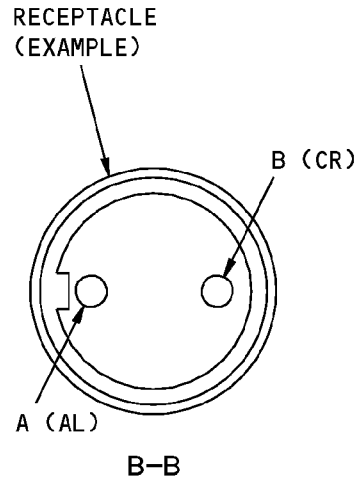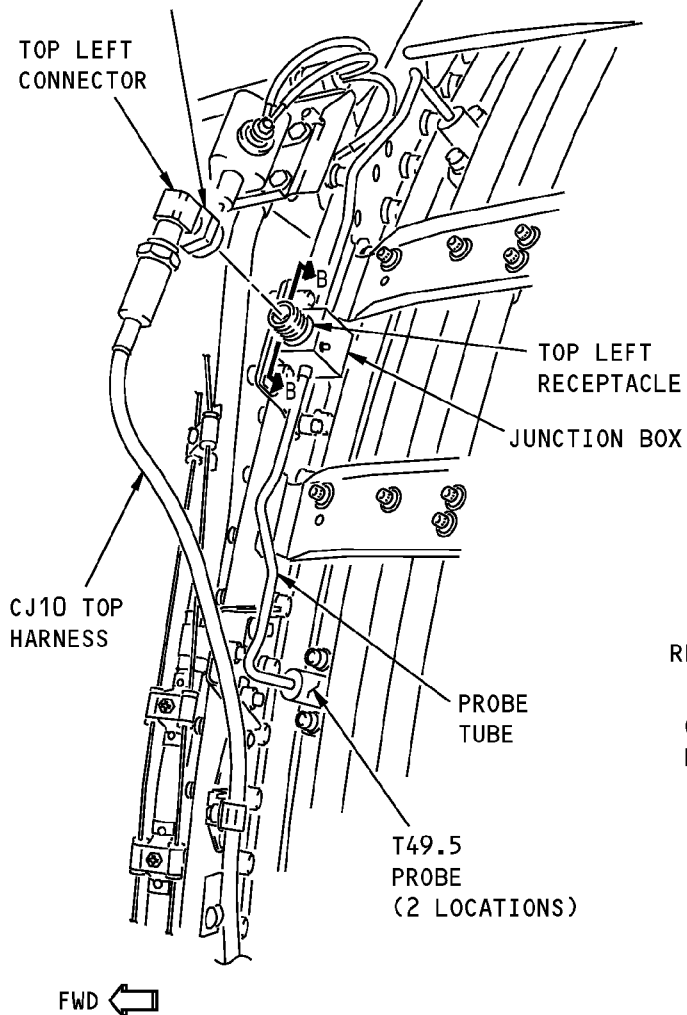

TOP LEFT T49.5 PROBE  
 (BOTTOM LEFT, TOP RIGHT AND BOTTOM  
 RIGHT T49.5 PROBES ARE EQUIVALENT)

(B)

T49.5 PROBE  
 WIRING DIAGRAM  
 (EXAMPLE)

S-M56-MM-03270-01-B

**T49.5 Probe Inspection**  
**Figure 601 (Sheet 2 of 2)/77-21-01-990-802-F00**

EFFECTIVITY  
 HAP ALL

D633A101-HAP

**77-21-01**

## AIRCRAFT MAINTENANCE MANUAL

AIRBORNE VIBRATION MONITORING (AVM) SYSTEM - MAINTENANCE PRACTICES**1. General**

- A. This procedure contains scheduled maintenance task data.
- B. This procedure contains these tasks:
  - (1) The system test for the airborne vibration monitoring (AVM) system.
  - (2) The ARINC 429 Data Bus Charts.

**HAP 001-005 PRE SB 737-77-1056****TASK 77-31-00-970-804-F00****2. Airborne Vibration Monitoring (AVM) System - System Test**

## A. General

- (1) This task is the system test procedure for the airborne vibration monitoring (AVM) system.
- (2) The AVM signal conditioner shows the Built-In Test Equipment Maintenance Messages first and then the flight history.
- (3) Use this procedure for the AVM signal conditioner with this part number:
  - (a) Boeing part number - S360N021-203.
  - (b) Supplier part number - Endevco 6672M203.
- (4) This AVM signal conditioner has a two (2) character display.
- (5) This procedure uses the Built-In Test Equipment in the AVM signal conditioner.
- (6) This procedure refers to the Built-In Test Equipment as the BITE.

## B. References

Reference	Title
FIM 77-31 TASK 801	AVM Signal Conditioner BITE Procedure

## C. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right

## D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

## E. Prepare to Read the BITE Maintenance Messages and the Flight History

SUBTASK 77-31-00-860-001-F00

- (1) Make sure that this circuit breaker is closed:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
A	2	C01076	ENGINE VIB MON

EFFECTIVITY
HAP ALL

**77-31-00**Page 201  
Feb 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

## HAP 001-005 PRE SB 737-77-1056 (Continued)

SUBTASK 77-31-00-010-001-F00

(2) Open this access panel:

<u>Number</u>	<u>Name/Location</u>
117A	Electronic Equipment Access Door

F. Read the BITE Maintenance Messages

SUBTASK 77-31-00-970-001-F00

(1) Do these steps to read the BITE maintenance messages (Table 201):

**NOTE:** If BITE maintenance messages are to be saved, you must record them before you read the flight history. Flight history can not be read unless all BITE maintenance messages are deleted.

Table 201/77-31-00-993-801-F00

BITE MAINTENANCE MESSAGES	
MAINTENANCE MESSAGES	DESCRIPTION
A9	SELF TEST FAILURE
B1	SIGNAL LOSS - TACH N1, ENG 1
B2	SIGNAL LOSS - TACH N2, ENG 1
B3	SIGNAL LOSS - TACH N1, ENG 2
B4	SIGNAL LOSS - TACH N2, ENG 2

(a) Find the DATA button on the front of the AVM signal conditioner.

**CAUTION:** RECORD THE BITE MAINTENANCE MESSAGES BEFORE YOU PUSH THE DATA BUTTON AGAIN. YOU WILL ERASE ALL THE BITE MAINTENANCE MESSAGES WHEN YOU PUSH THE DATA BUTTON AFTER THE LAST BITE MAINTENANCE MESSAGE. WHEN YOU READ FF, ALL BITE MAINTENANCE MESSAGES WERE DISPLAYED AND ONE MORE PUSH OF THE DATA BUTTON WILL DISPLAY THE FLIGHT HISTORY.

(b) Push and release the DATA button to show the most recent BITE maintenance message that was set.

**NOTE:** You will have no indication of the total number of BITE maintenance messages before they are erased. There are 5 different BITE maintenance messages. The AVM signal conditioner can keep 32 BITE maintenance messages in the storage memory. Each BITE maintenance message is recorded in the order of occurrence.

1) Record this BITE maintenance message before you get the subsequent BITE maintenance message.

(c) Push and release the DATA button to show each of the remaining BITE maintenance messages.

1) Record each BITE maintenance message before you push the DATA button again.

(d) Do one of the steps that follow to interrogate the AVM signal conditioner further:

EFFECTIVITY
HAP ALL

**77-31-00**Page 202  
Feb 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

HAP 001-005 PRE SB 737-77-1056 (Continued)

- 1) If you do not want to continue, push the TEST button.

**NOTE:** The TEST button will start a self test and turns the display off. This puts the AVM signal conditioner back to its standby mode.

- 2) When the last BITE maintenance message is displayed, push and release the DATA button if you want to erase all the BITE maintenance messages in storage memory.

**NOTE:** You will have no indication of the total number of BITE maintenance messages before they are erased. After you erase all the BITE maintenance messages, the code FF will show on the front display. The flight history follows code FF. The AVM signal conditioner is now in the flight history mode.

- a) If you do not want to continue, push the TEST button.

**NOTE:** The TEST button will start a self test and turns the display off. This puts the AVM signal conditioner back to its standby mode.

- (e) If there are no BITE maintenance messages in storage memory, then the front display will be blank.
- (f) If there are BITE maintenance messages, do the applicable corrective action that shows in the reference (FIM 77-31 TASK 801).

## G. Read the Flight History

SUBTASK 77-31-00-970-002-F00

- (1) Do these steps to read the flight history (Table 202):

**NOTE:** The AVM records the highest vibration level and rotor speed from each engine sensor for all the engine rotors. The AVM records the highest vibration level and rotor speed from each engine sensor for one rotor, then at the same time and engine speed, records the associated vibration level and rotor speed for the other rotor and records the time since engine start that the highest vibration occurred. The vibration level recorded at the same time for the other rotor may not be the highest vibration for that rotor if the vibration level does not exceed the highest level currently recorded for that sensor. There may be times when the vibration level shown for a rotor may not be the highest vibration that rotor has experienced and will never be recorded in Flight History until that rotor vibration exceeds the highest level previously recorded. If BITE maintenance messages are to be saved, you must record them before you read the flight history. Flight history can not be read unless all BITE maintenance messages are deleted.

Table 202/77-31-00-993-802-F00

FLIGHT HISTORY		
What button on the AVM signal conditioner to push and release	Front display of the AVM signal conditioner	Description of front display
DATA button	FF	Sequence Start
DATA button	00 <sup>*[3]</sup>	Flight Number
DATA button	E1	Engine 1 (E1)
DATA button	00 - 50 <sup>*[1]</sup>	Fan Vibration - E1 <sup>*[5]</sup>
DATA button	00 - 50 <sup>*[1]</sup>	HPC Vibration - E1 <sup>*[5]</sup>

EFFECTIVITY  
HAP ALL

# 77-31-00

Page 203  
Feb 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

HAP 001-005 PRE SB 737-77-1056 (Continued)

(Continued)

FLIGHT HISTORY		
What button on the AVM signal conditioner to push and release	Front display of the AVM signal conditioner	Description of front display
DATA button	00 - B9 <sup>*[2]</sup>	N1 Speed (%) - E1
DATA button	00 - B9 <sup>*[2]</sup>	N2 Speed (%) - E1
DATA button	> 01 <sup>*[1]</sup>	Time of Maximum Fan or HPC Vibration - E1 (Hours) <sup>*[4]</sup>
DATA button	00 - 50 <sup>*[1]</sup>	LPT Vibration - E1 <sup>*[5]</sup>
DATA button	00 - 50 <sup>*[1]</sup>	HPT Vibration - E1 <sup>*[5]</sup>
DATA button	00 - B9 <sup>*[2]</sup>	N1 Speed (%) - E1
DATA button	00 - B9 <sup>*[2]</sup>	N2 Speed (%) - E1
DATA button	> 01 <sup>*[1]</sup>	Time of Maximum LPT or HPT Vibration - E1 (Hours) <sup>*[4]</sup>
DATA button	E2	Engine 2 (E2)
DATA button	00 - 50 <sup>*[1]</sup>	Fan Vibration - E2 <sup>*[5]</sup>
DATA button	00 - 50 <sup>*[1]</sup>	HPC Vibration - E2 <sup>*[5]</sup>
DATA button	00 - B9 <sup>*[2]</sup>	N1 Speed (%) - E2
DATA button	00 - B9 <sup>*[2]</sup>	N2 Speed (%) - E2
DATA button	> 01 <sup>*[1]</sup>	Time of Maximum Fan or HPC Vibration - E2 (Hours) <sup>*[4]</sup>
DATA button	00 - 50 <sup>*[1]</sup>	LPT Vibration - E2 <sup>*[5]</sup>
DATA button	00 - 50 <sup>*[1]</sup>	HPT Vibration - E2 <sup>*[5]</sup>
DATA button	00 - B9 <sup>*[2]</sup>	N1 Speed (%) - E2
DATA button	00 - B9 <sup>*[2]</sup>	N2 Speed (%) - E2
DATA button	> 01 <sup>*[1]</sup>	Time of Maximum LPT or HPT Vibration - E2 (Hours) <sup>*[4]</sup>
DATA button	FF	Next Sequence
DATA button	01 <sup>*[3]</sup>	Flight Number

\*[1] Display will be XX but actual data is X.X.

\*[2] Display will show 00-99%, A0-A9% (100-109%), B0-B9% (110-119%).

\*[3] Last flight is 00, the flight before 01 to 31.

\*[4] Elapsed time from the start of the flight in hours.

\*[5] In Scalar Units (0.0 to 5.0).

EFFECTIVITY  
HAP ALL

# 77-31-00

Page 204  
Feb 15/2009

D633A101-HAP



## AIRCRAFT MAINTENANCE MANUAL

HAP 001-005 PRE SB 737-77-1056 (Continued)

- (a) Find the DATA button on the front of the AVM signal conditioner.

NOTE: Each push of the DATA button will show BITE maintenance messages; and, then at the end they will be deleted and show FF.

**CAUTION:** RECORD ALL THE BITE MAINTENANCE MESSAGES BEFORE YOU PUSH THE DATA BUTTON AGAIN. YOU WILL ERASE ALL THE BITE MAINTENANCE MESSAGES WHEN YOU PUSH THE DATA BUTTON AFTER THE LAST BITE MAINTENANCE MESSAGE.

- (b) Push and release the DATA button until the data shows what you want.

NOTE: You will have no indication of the total number of BITE maintenance messages before they are erased. There are 5 different BITE maintenance messages. The AVM signal conditioner can keep 32 BITE maintenance messages in the storage memory.

- (c) Make sure that the display shows FF.

- (d) Push and release the DATA button to get the last flight number 00.

- (e) Push and hold the DATA button for more than four seconds to scroll the flight numbers (flight number 01 to 31) and release.

NOTE: The flight numbers will scroll, once each second, until you release the DATA button.

- (f) Push and hold the DATA button until the data shows what you want and release.

NOTE: The AVM signal conditioner will keep the flight history data for 32 flights in the storage memory. You can not erase the flight history with the DATA or TEST button.

- 1) Record the flight history.

- (g) Push and release the DATA button until you record all the data that you want.

- (h) Push and release the TEST button to stop the flight history.

NOTE: The TEST button will start a self test and turns the display off. This puts the AVM signal conditioner back to its standby mode.

SUBTASK 77-31-00-410-001-F00

- (2) Close this access panel:

<u>Number</u>	<u>Name/Location</u>
117A	Electronic Equipment Access Door

————— END OF TASK —————

HAP 006-011 PRE SB 737-77-1056

TASK 77-31-00-970-802-F00

3. Airborne Vibration Monitoring (AVM) System - System Test

## A. General

- (1) This task is the system test procedure for the airborne vibration monitoring (AVM) system.
- (2) Use this procedure for the AVM signal conditioner with this part number:
- (a) Boeing part number - S360N021-213.
- (b) Supplier part number - Endevco 6672M213.

EFFECTIVITY  
HAP ALL

D633A101-HAP

77-31-00

Page 205  
Feb 15/2009

## AIRCRAFT MAINTENANCE MANUAL

## HAP 006-011 PRE SB 737-77-1056 (Continued)

- (3) This AVM signal conditioner has a digital display of three lines of eight (8) characters in each line.
- (4) This procedure uses the Built-In Test Equipment in the AVM signal conditioner.
- (5) The AVM signal conditioner shows the Built-In Test Equipment Maintenance Messages first and then the flight history.
- (6) This procedure refers to the Built-In Test Equipment as the BITE.

## B. References

Reference	Title
FIM 77-31 TASK 801	AVM Signal Conditioner BITE Procedure

## C. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right

## D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

## E. Prepare to Read the BITE Maintenance Messages and the Flight History

SUBTASK 77-31-00-860-007-F00

- (1) Make sure that this circuit breaker is closed:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
A	2	C01076	ENGINE VIB MON

SUBTASK 77-31-00-010-004-F00

- (2) Open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

## F. Read the BITE Maintenance Messages

SUBTASK 77-31-00-970-005-F00

- (1) Do these steps to read the main menus on the front display of the AVM signal conditioner:
  - (a) Push and release one of the four buttons to show SELF TEST? on the front display of the AVM signal conditioner.
 

**NOTE:** You can move up or down the main menus with the UP or DOWN ARROW buttons, but you can only exit with the NO button.
  - (b) Push and release the NO button to show X SYSTEM FAULTS SHOW? on the front display of the AVM signal conditioner.
 

**NOTE:** If NO SYSTEM FAULTS is displayed there are no BITE maintenance messages to view. If X SYSTEM FAULTS SHOW? is displayed, see the BITE maintenance message steps below.

EFFECTIVITY
HAP ALL

**77-31-00**Page 206  
Feb 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

HAP 006-011 PRE SB 737-77-1056 (Continued)

- (c) After X SYSTEM FAULTS SHOW?, push and release the NO button to show SHOW FLIGHT HISTORY? on the front display of the AVM signal conditioner.

NOTE: If NO FLIGHT HISTORY is displayed, there is no flight history data to view. If SHOW FLIGHT HISTORY? is displayed, see the flight history steps below.

- (d) After SHOW FLIGHT HISTORY?, push and release the NO button to show BALANCE ENGINES? on the front display of the AVM signal conditioner.
- (e) After BALANCE ENGINES?, push and release the NO button to show ERASE STORED DATA? on the front display of the AVM signal conditioner.
- (f) After ERASE STORED DATA?, push and release the NO button again, and the display will turn off.

SUBTASK 77-31-00-970-011-F00

- (2) Do these steps to read the BITE maintenance messages (Table 203):

Table 203/77-31-00-993-805-F00

BITE MAINTENANCE MESSAGES	
MAINTENANCE MESSAGES	DESCRIPTION
SELFTEST PASSED <sup>*[1]</sup>	SELF TEST OK - COMPLETE
SELFTEST FAILED REPLACE	SELF TEST FAILURE
E1N1TACH SEN/CABL FAULT-B1	SIGNAL LOSS - TACH N1, ENG 1
E1N2TACH SEN/CABL FAULT-B2	SIGNAL LOSS - TACH N2, ENG 1
E2N1TACH SEN/CABL FAULT-B3	SIGNAL LOSS - TACH N1, ENG 2
E2N2TACH SEN/CABL FAULT-B4	SIGNAL LOSS - TACH N2, ENG 2
NO BALANCE FUNCTION	Non Volatile RAM Fault

\*[1] Display message only.

- (a) Push and release one of the four buttons to show SELF TEST? on the front display of the AVM signal conditioner.

NOTE: You can move up or down the main menus with the UP or DOWN ARROW buttons, but you can only exit with the NO button.

- (b) Push and release the NO button to show X SYSTEM FAULTS SHOW? on the front display of the AVM signal conditioner.

NOTE: If NO SYSTEM FAULTS is displayed, there are no BITE maintenance messages to view. To turn the display off push the NO button again four times.

- (c) After X SYSTEM FAULTS SHOW?, push and release the YES button to show the most recent BITE maintenance message that was set.

NOTE: The BITE maintenance messages will not be erased unless the YES button is pushed while ERASE SYSTEM FAULTS? shows on the front of the AVM signal conditioner. The AVM signal conditioner can keep 32 BITE maintenance messages in the storage memory. The UP ARROW button can be used to review the BITE maintenance messages that were shown before.

EFFECTIVITY  
HAP ALL

77-31-00

Page 207  
Jun 10/2007

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

HAP 006-011 PRE SB 737-77-1056 (Continued)

- 1) Record this BITE maintenance message before you get the subsequent BITE maintenance message.
- (d) Push and release the DOWN ARROW button to show each of the remaining BITE maintenance messages.
  - 1) Record each BITE maintenance message before you get the subsequent BITE maintenance message.
- (e) If you do not want to continue, push and release the NO button to show X SYSTEM FAULTS SHOW? on the front display of the AVM signal conditioner.

NOTE: To turn the display off, push the NO button again four times.

- (f) If you push and release the DOWN ARROW button after the last BITE maintenance message, ERASE SYSTEM FAULTS? will show on the front display of the AVM signal conditioner.

NOTE: To turn the display off, push the NO button again five times.

- (g) Do one of the steps that follow to interrogate the AVM signal conditioner further:
  - 1) If you want to keep all the BITE maintenance messages after ERASE SYSTEM FAULTS?, push and release the NO button.

NOTE: X SYSTEM FAULTS SHOW? will show on the front display of the AVM signal conditioner.

- a) If you want to see the BITE maintenance messages again after X SYSTEM FAULTS SHOW?, push and release the YES button.
- b) If you want to see flight history after X SYSTEM FAULTS SHOW?, push and release the NO button.

NOTE: SHOW FLIGHT HISTORY? or NO FLIGHT HISTORY will show on the front display of the AVM signal conditioner. If SHOW FLIGHT HISTORY? is displayed, see the flight history steps below.

**CAUTION:** RECORD ALL OF THE BITE MAINTENANCE MESSAGES BEFORE YOU PUSH THE YES BUTTON AGAIN. YOU WILL ERASE ALL THE BITE MAINTENANCE MESSAGES WHEN YOU PUSH THE YES BUTTON WITH ERASE SYSTEM FAULTS? ON THE DISPLAY.

- 2) If you want to erase all the BITE maintenance messages in storage memory after ERASE SYSTEM FAULTS?, push and release the YES button.

NOTE: NO SYSTEM FAULTS will show on the front display of the AVM signal conditioner.

- a) If you do not want to continue, push and release the NO button four times.
- b) If you want to see flight history after NO SYSTEM FAULTS, push and release the NO button.

NOTE: SHOW FLIGHT HISTORY? will show on the front display of the AVM signal conditioner.

- (h) If there are BITE maintenance messages, do the applicable corrective action that shows in the reference (FIM 77-31 TASK 801).

EFFECTIVITY  
HAP ALL

# 77-31-00

Page 208  
Jun 10/2007

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

## HAP 006-011 PRE SB 737-77-1056 (Continued)

## G. Read the Flight History

SUBTASK 77-31-00-970-006-F00

- (1) Do these steps to read the flight history (Table 204):

NOTE: The AVM records the highest vibration level of all the engine rotors.

Table 204/77-31-00-993-804-F00

FLIGHT HISTORY		
What button on the AVM signal conditioner to push	Front display of the AVM signal conditioner	Description of front display
One of the four buttons, and then the NO button	SELF TEST?, then X SYSTEM FAULTS SHOW? or NO SYSTEM FAULTS	Sequence Start for self test, then number of faults
NO button again	SHOW FLIGHT HISTORY? or NO FLIGHT HISTORY?	Sequence Start for flight history
YES button	LEG 0 E1 <sup>*[1]</sup> <sup>*[2]</sup> FAN = X.X <sup>*[3]</sup> HPC = X.X <sup>*[3]</sup>	Engine 1 (E1) <sup>*[1]</sup> Fan Vibration - E1 HPC Vibration - E1
DOWN ARROW button	LEG 0 E1 <sup>*[1]</sup> <sup>*[2]</sup> N1 = XXX% <sup>*[4]</sup> N2 = XXX% <sup>*[4]</sup>	Engine 1 (E1) <sup>*[1]</sup> N1 Speed (%) - E1 N2 Speed (%) - E1
DOWN ARROW button	LEG 0 E1 <sup>*[1]</sup> <sup>*[2]</sup> ELP TIME X.X HR <sup>*[5]</sup>	Time of Maximum Fan or HPC Vibration - E1 (Hours) <sup>*[2]</sup>
DOWN ARROW button	LEG 0 E1 <sup>*[1]</sup> <sup>*[2]</sup> LPT = X.X <sup>*[3]</sup> HPT = X.X <sup>*[3]</sup>	Engine 1 (E1) <sup>*[1]</sup> LPT Vibration - E1 HPT Vibration - E1
DOWN ARROW button	LEG 0 E1 <sup>*[1]</sup> <sup>*[2]</sup> N1 = XXX% <sup>*[4]</sup> N2 = XXX% <sup>*[4]</sup>	Engine 1 (E1) <sup>*[1]</sup> N1 Speed (%) - E1 N2 Speed (%) - E1
DOWN ARROW button	LEG 0 E1 <sup>*[1]</sup> <sup>*[2]</sup> ELP TIME X.X HR <sup>*[5]</sup>	Time of Maximum LPT or HPT Vibration - E1 (Hours) <sup>*[2]</sup>
DOWN ARROW button	LEG 0 E2 <sup>*[1]</sup> <sup>*[2]</sup> FAN = X.X <sup>*[3]</sup> HPC = X.X <sup>*[3]</sup>	Engine 2 (E2) <sup>*[2]</sup> Fan Vibration - E2 HPC Vibration - E2
DOWN ARROW button	LEG 0 E2 <sup>*[1]</sup> <sup>*[2]</sup> N1 = XXX% <sup>*[4]</sup> N2 = XXX% <sup>*[4]</sup>	Engine 2 (E2) <sup>*[2]</sup> N1 Speed (%) - E2 N2 Speed (%) - E2
DOWN ARROW button	LEG 0 E2 <sup>*[1]</sup> <sup>*[2]</sup> ELP TIME X.X HR <sup>*[5]</sup>	Time of Maximum Fan or HPC Vibration - E2 (Hours) <sup>*[2]</sup>
DOWN ARROW button	LEG 0 E2 <sup>*[1]</sup> <sup>*[2]</sup> LPT = X.X <sup>*[3]</sup> HPT = X.X <sup>*[3]</sup>	Engine 2 (E2) <sup>*[2]</sup> LPT Vibration - E2 HPT Vibration - E2

EFFECTIVITY
HAP ALL

77-31-00

Page 209  
Jun 10/2007

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

HAP 006-011 PRE SB 737-77-1056 (Continued)

(Continued)

FLIGHT HISTORY		
What button on the AVM signal conditioner to push	Front display of the AVM signal conditioner	Description of front display
DOWN ARROW button	LEG 0 E2 <sup>*[1]</sup> <sup>*[2]</sup> N1 = XXX% <sup>*[4]</sup> N2 = XXX% <sup>*[4]</sup>	Engine 2 (E2) <sup>*[2]</sup> N1 Speed (%) - E2 N2 Speed (%) - E2
DOWN ARROW button	LEG 0 E2 <sup>*[1]</sup> <sup>*[2]</sup> ELP TIME X.X HR <sup>*[5]</sup>	Time of Maximum LPT or HPT Vibration - E2 (Hours) <sup>*[2]</sup>
For flights other than one, push and hold the DOWN ARROW button until you get the correct numbered flight.		

\*[1] Last flight is LEG 0, the flight before is LEG 1 to LEG31.

\*[2] E1 is Engine 1 and E2 is Engine 2.

\*[3] X.X is vibration in scaler units (0.0 to 5.0).

\*[4] XXX% is the percent RPM measured for the N1 and N2 shaft.

\*[5] Elapsed time from the start of the flight in hours.

- (a) Push and release one of the four buttons to show SELF TEST? on the front display of the AVM signal conditioner.
- (b) Push and release the NO button to show X SYSTEM FAULTS SHOW? on the front display of the AVM signal conditioner.

NOTE: If NO SYSTEM FAULTS shows, there are no BITE maintenance messages to view. To turn the display off, push the NO button again four times.

- (c) Push and release the NO button again to show SHOW FLIGHT HISTORY? on the front display of the AVM signal conditioner.

NOTE: If NO FLIGHT HISTORY shows, there is no flight history to view. To turn the display off push the NO button again three times.

- (d) Push and release the YES button to show the flight history of the most recent flight that was set.

NOTE: The flight history will not be deleted unless the YES button is pushed, each time, after ERASE STORED DATA?, ERASE FLIGHT HISTORY? and ARE YOU SURE? are displayed on the front display of the AVM signal conditioner. The AVM signal conditioner can keep 32 flights in the storage memory. The UP ARROW button can be used to review all the flight history data that was shown before.

- (e) Push and release the DOWN ARROW button to show each of the remaining flight history data.

- 1) Record the flight history data that you want.

EFFECTIVITY  
HAP ALL

# 77-31-00

Page 210  
Jun 10/2007

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

HAP 006-011 PRE SB 737-77-1056 (Continued)

- (f) To stop and not erase data after you recorded all of the flight history data that you wanted, push and release the NO button to show SHOW FLIGHT HISTORY? on the front display of the AVM signal conditioner.

NOTE: To turn the display off, push the NO button again three times.

- (g) Do one of the steps that follow to interrogate the AVM signal conditioner further:

- 1) If you want to see the flight history data again after SHOW FLIGHT HISTORY?, push and release the YES button.

NOTE: You can move up or down the flight history data with the UP or DOWN ARROW buttons, but you can only exit with the NO button.

- 2) If you want to see balance data after SHOW FLIGHT HISTORY?, push and release the NO button.

NOTE: BALANCE ENGINES? will show on the front display of the AVM signal conditioner.

- 3) To erase all the flight history data after SHOW FLIGHT HISTORY?, push and release the NO button twice.

NOTE: ERASE STORED DATA? will show on the front display of the AVM signal conditioner.

- a) After ERASE STORED DATA?, push and release the YES button to show ERASE FLIGHT HISTORY? on the front display of the AVM signal conditioner.

- b) After ERASE FLIGHT HISTORY?, push and release the YES button to show ARE YOU SURE? on the front display of the AVM signal conditioner.

NOTE: If you are not sure, push and release the NO button four times to show ERASE STORED DATA?.

- c) After ARE YOU SURE?, push and release the YES button to show FLIGHT HISTORY ERASED on the front display of the AVM signal conditioner.

NOTE: To turn the display off, push and release the NO button once.

SUBTASK 77-31-00-410-004-F00

- (2) Close this access panel:

<u>Number</u>	<u>Name/Location</u>
117A	Electronic Equipment Access Door

————— END OF TASK —————

HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069

**TASK 77-31-00-970-803-F00**

**4. Airborne Vibration Monitoring (AVM) System - System Test**

A. General

- (1) This task is the system test procedure for the airborne vibration monitoring (AVM) system.
- (2) Use this procedure for the AVM signal conditioner with this part number:
- (a) Boeing part number - S360N021-113 and -114.
- (b) Supplier part number - Vibro-meter P/N 241-258-032-109 and 241-258-032-110.
- (c) Boeing part number - S362A001-1, -10 and -12.

EFFECTIVITY  
HAP ALL

**77-31-00**

D633A101-HAP

Page 211  
Feb 15/2009



## AIRCRAFT MAINTENANCE MANUAL

HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069  
(Continued)

- (d) Supplier part number - Vibro-meter P/N 241-280-051-012, 241-280-053-013 and 241-280-056-014.

**HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054, 101-106 POST SB 737-77-1069**

- (e) Boeing part number - S362A001-11  
(f) Supplier part number - Vibro-meter P/N 241-298-002-011E.

**HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069**

- (3) This AVM signal conditioner has a digital display of three lines of eight (8) characters in each line.  
(4) This procedure uses the Built-In Test Equipment in the AVM signal conditioner.  
(5) The AVM signal conditioner shows the Built-In Test Equipment Maintenance Messages first and then the flight history.  
(6) This procedure refers to the Built-In Test Equipment as the BITE.

## B. References

Reference	Title
79-00-00-200-804-F00	Chip Detectors and Scavenge Screens Inspection (P/B 601)
FIM 77-31 TASK 801	AVM Signal Conditioner BITE Procedure

## C. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right

## D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

## E. Prepare to Read the BITE Maintenance Messages and the Flight History

SUBTASK 77-31-00-860-014-F00

- (1) Make sure that this circuit breaker is closed:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
A	2	C01076	ENGINE VIB MON

SUBTASK 77-31-00-010-005-F00

- (2) Open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

## F. Read the BITE Maintenance Messages

SUBTASK 77-31-00-970-012-F00

- (1) Do these steps to read the main menus on the front display of the AVM signal conditioner:

EFFECTIVITY  
HAP ALL

**77-31-00**

Page 212  
Feb 15/2009

D633A101-HAP



## AIRCRAFT MAINTENANCE MANUAL

HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069  
(Continued)

- (a) Push and release one of the four buttons to show Self Test? on the front display of the AVM signal conditioner.
- (b) After Self Test?, push and release the NO button to show Fault History? on the front display of the AVM signal conditioner.
- (c) After Fault History?, push and release the NO button to show Flight History? on the front display of the AVM signal conditioner.
- (d) After Flight History?, push and release the NO button to show Balance? on the front display of the AVM signal conditioner.
- (e) After Balance?, push and release the NO button to show Turn off Display? on the front display of the AVM signal conditioner.

**HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054, 101-106 POST SB 737-77-1069**

- 1) After Balance?, push and release the NO button to show AEVM? on the front display of the AVM signal conditioner
- 2) After AEVM?, push and release the NO button to show Turn off Display? on the front display of the AVM signal conditioner

**HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069**

- (f) After Turn off Display?, push and release the YES button to turn off the display.

SUBTASK 77-31-00-970-013-F00

- (2) Do these steps to read the BITE maintenance messages (Table 205):

Table 205/77-31-00-993-806-F00

BITE MAINTENANCE MESSAGES	
MAINTENANCE MESSAGES	DESCRIPTION
No Fault <sup>*[1]</sup>	No Faults in Non-volatile memory
XX Faults Display? <sup>*[1]</sup>	XX = total number of stored faults
Fault YY <sup>*[1]</sup> <sup>*[2]</sup>	YY = fault number
AVM Syst Fault ZZ <sup>*[3]</sup>	ZZ = fault code

\*[1] Display message only.

\*[2] Fault YY is the fault number.

\*[3] ZZ is the fault code.

- (a) Push and release one of the four buttons to show Self Test? on the front display of the AVM signal conditioner.

**NOTE:** You can move down the main menus with the NO button, but you can only exit with the NO button. The NO button is used to review all the main menus. Use the UP or DOWN to review faults, flight history, or imbalance data.

EFFECTIVITY  
HAP ALL

**77-31-00**

Page 213  
Feb 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069  
(Continued)

- (b) Push and release the NO button to show Fault History? on the front display of the AVM signal conditioner.

NOTE: The BITE maintenance messages will not be erased unless the YES button is pushed while Clear Faults Memory? shows on the front of the AVM signal conditioner. The AVM signal conditioner can keep 32 BITE maintenance messages in the storage memory. The YES button is used to review each menu.

- (c) After Fault History?, push and release the YES button to show XX Faults Display? on the front display of the AVM signal conditioner.

NOTE: The XX refers to the total number of faults in storage memory. If No Fault is displayed, there are no BITE maintenance messages to view. After No Fault, if the NO button is pushed, the front display will show Flight History?. If Flight History? is displayed, see the flight history steps below.

- (d) After XX Faults Display?, push and release the YES button to show the last BITE maintenance message that was set.

NOTE: The UP or DOWN ARROW button can be used to review all the BITE maintenance messages. The most recent BITE maintenance message is displayed first, followed by the most recent BITE maintenance message.

- 1) Record this BITE maintenance message before you get the subsequent BITE maintenance message.

- (e) Push and release the DOWN ARROW button to show each of the remaining BITE maintenance messages.

- 1) Record each BITE maintenance message before you get the subsequent BITE maintenance message.

- (f) If you do not want to continue, or if you want to keep the BITE maintenance messages, push and release the NO button to show Clear Faults Memory? on the front display of the AVM signal conditioner.

NOTE: After Clear Faults Memory?, push and release the NO button again to show the main menu (Flight History displayed).

- (g) If you push and release the DOWN ARROW button after the last BITE maintenance message, the first BITE maintenance message will show on the front display of the AVM signal conditioner.

- (h) Do one of the steps that follow to interrogate the AVM signal conditioner further:

- 1) If you want to see the BITE maintenance messages again after Flight History?, push and release the NO button four times.

- 2) If you want to see flight history after XX Faults Display?, push and release the NO button twice.

NOTE: Clear Faults Memory? and then, Flight History? will show on the front display of the AVM signal conditioner. If Flight History? is displayed, see the flight history steps below.

- 3) After Fault History?, push and release the NO button to show Flight History? on the front display of the AVM signal conditioner.

NOTE: If Flight History? is displayed, see the flight history steps below.

EFFECTIVITY  
HAP ALL

**77-31-00**

Page 214  
Feb 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069  
(Continued)

**CAUTION:** RECORD ALL OF THE BITE MAINTENANCE MESSAGES BEFORE YOU PUSH THE YES BUTTON AGAIN. YOU WILL ERASE ALL THE BITE MAINTENANCE MESSAGES WHEN YOU PUSH THE YES BUTTON WITH CLEAR FAULTS MEMORY? ON THE DISPLAY.

- 4) After XX Faults Display?, push and release the NO button to show Clear Faults Memory? on the front display of the AVM signal conditioner.

**NOTE:** After Clear Faults Memory?, if the NO button is pushed again the front display will show Flight History?. After Clear Faults Memory?, if the YES button is pushed the front display will show Faults Memory Cleared.

- (i) If there are BITE maintenance messages, do the applicable corrective action that shows in the FIM (FIM 77-31 TASK 801).

G. Read the Flight History

SUBTASK 77-31-00-970-014-F00

- (1) Do these steps to read the flight history (Table 206):

**NOTE:** The AVM records the highest vibration level of all the engine rotors.

Table 206/77-31-00-993-807-F00

FLIGHT HISTORY		
What button on the AVM signal conditioner to push	Front display of the AVM signal conditioner	Description of front display
One of the four buttons, and then the NO button	Self Test?, then Fault History?	Sequence Start for self test and fault history
NO button again	Flight History?	Sequence Start for flight history
YES button	XX Flights Display? <sup>*[1]</sup> or NO Flight Data	Total number of flights or no data
YES again	Flight XX? <sup>*[2]</sup>	Flight number, XX = 0-31
<b>HAP 101-999</b>		
S360N021-113/114		
YES button	FXX E1 <sup>*[3]</sup> <sup>*[4]</sup> N1 yy % <sup>*[5]</sup> N2 yy % <sup>*[5]</sup>	Engine 1 (E1) <sup>*[4]</sup> N1 Speed (%) - E1 N2 Speed (%) - E1
DOWN button	FAN n.nn <sup>*[6]</sup> HPC n.nn <sup>*[6]</sup> HPT n.nn <sup>*[6]</sup>	Fan Vibration - E1 HPC Vibration - E1 HPT Vibration - E1
DOWN button	LPT n.nn <sup>*[6]</sup> Time yy.y h	LPT Vibration - E1 yy.y = Time in hours from power-up
NO button	FXX E2 <sup>*[3]</sup> <sup>*[4]</sup> N1 yy % <sup>*[5]</sup> N2 yy % <sup>*[5]</sup>	Engine 2 (E2) <sup>*[4]</sup> N1 Speed (%) - E2 N2 Speed (%) - E2

EFFECTIVITY  
HAP ALL

**77-31-00**

Page 215  
Feb 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

## HAP 101-999 (Continued)

(Continued)

FLIGHT HISTORY		
What button on the AVM signal conditioner to push	Front display of the AVM signal conditioner	Description of front display
DOWN button	FAN n.nn <sup>*[6]</sup> HPC n.nn <sup>*[6]</sup> HPT n.nn <sup>*[6]</sup>	Fan Vibration - E2 HPC Vibration - E2 HPT Vibration - E2
DOWN button	LPT n.nn <sup>*[6]</sup> Time yy.y h	LPT Vibration - E2 yy.y = Time in hours from power-up
<b>HAP 023-026, 028-054, 107-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069; HAP 101-106 POST SB 737-77-1069</b>		
S362A001		
YES button	FXX E1 <sup>*[3]</sup> <sup>*[4]</sup> FAN n.nn <sup>*[6]</sup> HPC n.nn <sup>*[6]</sup>	Engine 1 (E1) <sup>*[4]</sup> Fan Vibration - E1 HPC Vibration - E1
DOWN button	N1 yyy % <sup>*[5]</sup> N2 yyy % <sup>*[5]</sup> Time yy.y h	N1 Speed (%) - E1 N2 Speed (%) yy.y = Time in hours of max.vib. NOB sensor
DOWN button	FXX E1 <sup>*[3]</sup> <sup>*[4]</sup> LPT n.nn <sup>*[6]</sup> HPT n.nn <sup>*[6]</sup>	Engine 1 (E1) <sup>*[4]</sup> LPT Vibration - E1 HPT Vibration - E1
DOWN button	N1 yyy % <sup>*[5]</sup> N2 yyy % <sup>*[5]</sup> Time yy.y h	N1 Speed (%) - E1 N2 Speed (%) - E1 yy.y = Time in hours of max.vib. FFCCV sensor
NO button	FXX E2 <sup>*[3]</sup> <sup>*[4]</sup> FAN n.nn <sup>*[6]</sup> HPC n.nn <sup>*[6]</sup>	Engine 2 (E2) <sup>*[4]</sup> Fan Vibration - E2 HPC Vibration - E2
DOWN button	N1 yyy % <sup>*[5]</sup> N2 yyy % <sup>*[5]</sup> Time yy.y h	N1 Speed (%) - E2 N2 Speed (%) yy.y = Time in hours of max.vib. NOB sensor
DOWN button	FXX E2 <sup>*[3]</sup> <sup>*[4]</sup> LPT Vibration - E2 HPT Vibration - E2	Engine 2 (E2) <sup>*[4]</sup> LPT Vibration - E2 HPT Vibration - E2
DOWN button	N1 Speed (%) - E2 N2 yyy % <sup>*[5]</sup> Time yy.y h	N1 Speed (%) - E2 N2 Speed (%) - E2 yy.y = Time in hours of max.vib. FFCCV sensor
<b>HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069</b>		

EFFECTIVITY
HAP ALL

**77-31-00**

D633A101-HAP

Page 216  
Feb 15/2009

## AIRCRAFT MAINTENANCE MANUAL

HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069  
(Continued)

\*[1] Total number of flights, XX = 1 to 32.

\*[2] Last flight is Flight 0, the flight before is Flight 1 to Flight 31.  
Use the DOWN button for Flights other than last the flight F0

\*[3] FXX = Flight number 0 to 31.

\*[4] E1 is Engine 1 and E2 is Engine 2.

\*[5] yyy% is the percent RPM measured for the N1 and N2 shaft.

\*[6] n.nn is vibration in scalar units (0.00 to 5.00).

- (a) Push and release one of the four buttons to show Self Test? on the front display of the AVM signal conditioner.

NOTE: The NO button is used to review all the main menus.

- (b) After Self Test?, push and release the NO button to show Fault History? on the front display of the AVM signal conditioner.

NOTE: If Fault History? is displayed, see the BITE maintenance message steps above.

- (c) After Fault History?, push and release the NO button to show Flight History? on the front display of the AVM signal conditioner.

NOTE: The flight history will not be erased unless the YES button is pushed after Clear Flight Memory? is displayed on the front display of the AVM signal conditioner. The AVM signal conditioner can keep 32 flights in the storage memory. The YES button is used to review each menu.

- (d) After Flight History?, push and release the YES button to show XX Flights Display? on the front display of the AVM signal conditioner.

NOTE: The XX refers to the total number of flights in storage memory. If No Flight Data shows, there is no flight history to view. After No Flight Data, if the NO button is pushed the front display will show Balance?.

- (e) After XX Flights Display?, push and release the YES button to show Flight XX? on the front display of the AVM signal conditioner.

- (f) After Flight XX?, push and release the YES button to show the most recent flight history data for engine 1 that was set.

NOTE: The UP or DOWN ARROW button can be used to review all the flight history data for engine 1.

- 1) Record the flight history data that you want.

- (g) If you are done looking at flight history data for engine 1, push and release the NO button to show the most recent flight history data for engine 2 that was set.

NOTE: The UP or DOWN ARROW button can be used to review all the flight history data for engine 2.

- 1) Record the flight history data, that you want, before you get the subsequent flight history data.

- (h) Push and release the NO button to show the subsequent flight number data that was set.

## AIRCRAFT MAINTENANCE MANUAL

HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069  
(Continued)

- (i) If you do not want to continue, or if you want to keep the flight history data, push and release the NO button twice to show Clear Flight Memory? on the front display of the AVM signal conditioner and then Balance?.
- (j) If you push and release the DOWN ARROW button after the last flight history data, the most recent flight history data will show on the front display of the AVM signal conditioner.
- (k) Do one of the steps that follow to interrogate the AVM signal conditioner further:
  - 1) If you want to see the flight history data again after Balance?, push and release the NO button four times.
  - 2) If you want to see balance data after XX Flights Display?, push and release the NO button twice.
 

NOTE: Clear Flight Memory? and then, Balance? will show on the front display of the AVM signal conditioner.
  - 3) After Flight History?, push and release the NO button to show Balance? on the front display of the AVM signal conditioner.

**CAUTION:** RECORD ALL OF THE FLIGHT HISTORY DATA BEFORE YOU PUSH THE YES BUTTON AGAIN. YOU WILL ERASE ALL THE FLIGHT HISTORY DATA WHEN YOU PUSH THE YES BUTTON WITH CLEAR FLIGHT MEMORY? ON THE DISPLAY.

- 4) After XX Flights Display?, push and release the NO button to show Clear Flight Memory? on the front display of the AVM signal conditioner.

NOTE: After Clear Flight Memory?, if the NO button is pushed again the front display will show Balance?. After Clear Flight Memory?, if the YES button is pushed the front display will show Flight Memory Cleared (all flight history is deleted). Push and release the NO button to show Balance?

HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054, 101-106 POST SB 737-77-1069

H. Use the Advanced Engine Vibration Monitor (AEVM) Menu (AEVM With 4R Bearing Data)

SUBTASK 77-31-00-970-016-F01

- (1) Do these steps to use the AEVM menu:
  - (a) Push and release one of the four buttons to show Self Test? on the front display of the AVM signal conditioner.
 

NOTE: The NO button is used to review all the main menus.
  - (b) After Self Test?, push and release the NO button to show Fault History? on the front display of the AVM signal conditioner.
 

NOTE: If Fault History? is displayed, see the BITE maintenance message steps above.
  - (c) After Fault History?, push and release the NO button to show Flight History? on the front display of the AVM signal conditioner.
 

NOTE: The flight history will not be erased unless the YES button is pushed after Clear Flight Memory? is displayed on the front display of the AVM signal conditioner. The AVM signal conditioner can keep 32 flights in the storage memory. The YES button is used to review each menu.

EFFECTIVITY  
HAP ALL

**77-31-00**

Page 218  
Feb 15/2009

D633A101-HAP

**AIRCRAFT MAINTENANCE MANUAL**

**HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054, 101-106 POST SB 737-77-1069 (Continued)**

- (d) After Flight History?, push and release the NO button to show Balance? on the front display of the AVM signal conditioner.
- (e) After Balance?, push and release the NO button to show AEVM Menu? on the front display of the AVM signal conditioner.
- (f) After AEVM Menu?, push and release the YES button to show #4 BRG? on the front display of the AVM signal conditioner. The AEVM menu will display this order of menus on the front display of the AVM signal conditioner:

**NOTE:** Use the applicable YES or NO button to get access to the applicable menu. Use the NO button to go to the next menu.

- 1) #4 BRG?
- 2) Config?
- 3) Data?
- 4) Altern.Accel.wiring?

- (g) After #4 BRG?, push and release the YES button to look for #4 BRG messages(Table 207).

Table 207/77-31-00-993-810-F01 AAVM #4 BRG

<b>#4 BRG MENU DISPLAY</b>	
#4 BRG EX NO MSG	EX is Engine No.
#4 BRG EX LEVEL Y	Y is message level 1,2,3

- 1) If there are no #4 BRG messages, the display will show NO MSG.
  - a) If NO MSG shows, no action is necessary.
- 2) The message level Y is 1 for the most critical and 3 for the least critical.
- 3) If there are #4 BRG maintenance messages, do the applicable steps for the message level:
  - a) For Level 3 messages, do these steps:
    - < 1 > Examine all chip detectors within 100 - 150. Do this task, Chip Detectors and Scavenge Screens Inspection, TASK 79-00-00-200-804-F00.
    - < 2 > Download the AAVM data within 100 -150 hours. Do this task, Download The Advanced AVM (AAVM) Bearing Data With The Ground Support Software (GSS), TASK 77-31-00-970-805-F00.  
Email the data to CFM Customer Support Center.
    - < 3 > Interrogate the AAVM Front Panel for BRG messages again every 150 hours.
  - b) For Level 2 messages, do these steps:
    - < 1 > Examine all chip detectors within 25 hours. Do this task, Chip Detectors and Scavenge Screens Inspection, TASK 79-00-00-200-804-F00.

EFFECTIVITY  
HAP ALL

**77-31-00**



## AIRCRAFT MAINTENANCE MANUAL

HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054, 101-106 POST SB 737-77-1069 (Continued)

- <2> Download the AAVM data within 25 hours. Do this task Download The Advanced AVM (AAVM) Bearing Data With The Ground Support Software (GSS), TASK 77-31-00-970-805-F00.  
Email the data to CFM Customer Support Center.
- <3> Interrogate the AAVM Front Panel for BRG messages again every 50 -75 hours.
- <4> Download the AAVM data again every 450 - 550 hours.
- c) For Level 1 messages, do these steps:
- <1> Examine all chip detectors within three flights. Do this task, Chip Detectors and Scavenge Screens Inspection, TASK 79-00-00-200-804-F00.
- <2> Download the AAVM data within 25 hours. Do this task Download The Advanced AVM (AAVM) Bearing Data With The Ground Support Software (GSS), TASK 77-31-00-970-805-F00.  
Email the data to CFM Customer Support Center.
- <3> Interrogate the AAVM Front Panel for BRG messages again every 50 -75 hours.
- <4> Examine all chip detectors again every 50 -75 hours.
- 4) Use the UP [back] and DOWN [next] buttons to go to and from Engine 1 (E1) and Engine 2 (E2).
- 5) Push and release the NO button to show Config? on the front display.
- (h) After Config?, push and release the YES button to look at the Config menu (Table 208).

Table 208/77-31-00-993-811-F01 AAVM CONFIG MENU

CONFIG MENU DISPLAY	
Main SW 249-109- 000-SSS	Main Processor Software SSS is version
DSP SW 249-110- 000-SSS	DSP Software SSS is version
Conf Tbl 249-113- 000-SSS	DSP Configuration Table SSS is version

- 1) Use the UP [back] and DOWN [next] buttons to go to and from Config displays of the part numbers.
- (i) After Data?, push and release the YES button to look at the Data menu (Table 209).

EFFECTIVITY  
HAP ALL

77-31-00

Page 220  
Jun 15/2009

D633A101-HAP



## AIRCRAFT MAINTENANCE MANUAL

HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054, 101-106 POST SB 737-77-1069 (Continued)

Table 209/77-31-00-993-812-F01 AAVM DATA MENU

DATA MENU DISPLAY	
E1 Flight Nbxxxxxx	Engine1 xxxxxx is the number of flights
E2 Flight Nbxxxxxx	
E1 duration hhhh:mm	Total duration hhhh in hours mm in minutes
E2 duration hhhh:mm	

- 1) Use the UP [back] and DOWN [next] buttons to go to and from the data displays.
  - 2) Push and release the NO button to show Altern.Accel.wiring? on the front display.
- (j) After Altern.Accel.wiring?, push and release the YES button to look at the Alternate Accelerometer menu (Table 210). Use the NO button to go to the next menu

**NOTE:** This menu is used to activate or deactivate the AEVM function which depends on the No.1 bearing sensor being functional. The selection options are standard, alternate or disconnected. Select YES for the menu option that matches the existing sensor condition. The default configuration is standard accelerometer selected. Use the NO button after selecting accelerometer configuration to exit the menu.

Table 210/77-31-00-993-813-F01 AAVM ACCELEROMETER SELECTION

ACCELEROMETER SELECTION MENU DISPLAY	IF YES SELECTED
Engine 1 Accel config.?	E1 Accel standard selected
Engine 2 Accel config.?	E2 Accel standard selected
Ex Accel standard select ?	Ex Accel standard selected
Ex Accel altern. select ?	Ex Accel altern. selected
Ex Accel discon. select ?	Ex Accel discon. selected

EFFECTIVITY  
HAP ALL

# 77-31-00

Page 221  
Jun 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054, 101-106 POST SB 737-77-1069 (Continued)

- 1) Ex is the Engine Number, E1 is Engine 1 and E2 is Engine 2.
  - 2) The standard accelerometer is the No.1 bearing vibration sensor.
  - 3) The alternate accelerometer is not an option for this airplane.
  - 4) If the No.1 bearing vibration sensor on the engine is disconnected, use the Accel discon. select.
  - 5) The AEVM is active only if the No.1 bearing (NOB) vibration sensor is connected.
  - 6) Select NO to return to the Altern.Accel.wiring? menu.
  - 7) If it is necessary, do the steps again for Engine 2.
- (k) After Altern.Accel.wiring?, push and release the NO button to show Turn off Display? on the front display

HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069

## I. Put the Airplane Back To Its Usual Condition

SUBTASK 77-31-00-410-005-F00

- (1) Close this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

## END OF TASK

HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054, 101-106 POST SB 737-77-1069

## TASK 77-31-00-970-805-F00

5. Download The Advanced AVM (AAVM) Bearing Data With The Ground Support Software (GSS)

## A. General

- (1) This task is to download the advanced airborne vibration monitoring (AAVM) bearing data with the ground support software (GSS).
- (2) Use this task when the AAVM has applicable bearing messages.
- (3) This task includes these procedures to use the GSS.
  - (a) Troubleshooting Tips
  - (b) Configure the GSS for Aircraft Identification
  - (c) Download the Contents of the AAVM Bearing Memory Using the GSS
  - (d) Erase the Memory of the AAVM Using the GSS

## B. Tools/Equipment

**NOTE:** When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
SPL-4905	Cable - Advanced Airborne Vibration Monitoring Equipment (Part #: 980-101-000-011, Supplier: S3960, A/P Effectivity: 737-300, -400, -500, -600, -700, -700C, -700ER, -700QC, -800, -900, -900ER)
SPL-4906	Software - Advanced Airborne Vibration Monitoring Equipment (Part #: 259-109-10X-SSS, Supplier: S3960, A/P Effectivity: 737-300, -400, -500, -600, -700, -700C, -700ER, -700QC, -800, -900, -900ER, -BBJ)

EFFECTIVITY
HAP ALL

77-31-00

Page 222  
Jun 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054, 101-106 POST SB 737-77-1069 (Continued)

## C. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right

## D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

## E. Prepare to Use the AAVM with the GSS

SUBTASK 77-31-00-860-016-F00

- (1) Make sure that this circuit breaker is closed:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
A	2	C01076	ENGINE VIB MON

SUBTASK 77-31-00-010-006-F00

- (2) Open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

## F. Troubleshooting Tips

SUBTASK 77-31-00-800-003-F00

- (1) This data is a guide to aid in troubleshooting of the AAVM and GSS (Table 211)

Table 211/77-31-00-993-814-F00 GSS Troubleshooting

SYMPTOM		POSSIBLE CAUSE	SOLUTION
No display on AAVM front panel	1	AAVM not powered	Apply electrical power to AAVM. Wait 30 seconds for AAVM to complete start up checks.
	2	Engine(s) running (valid tacho signal)	Wait until engine(s) are stopped.
AEVM? Menu not found.  This AAVM Submenu is not accessible when GSS cable is connected. Unplug cable to access AEVM menu and display data on front panel.	1	GSS cable was connected to AAVM when AVM was powered up.	Disconnect GSS cable and cycle AAVM power (cycle the circuit breaker ENGINE VIB MON C1076).
	2	Communication disruption between processors	Disconnect GSS cable and cycle AAVM power (cycle the circuit breaker ENGINE VIB MON C1076).
"Not in service" displayed on AAVM front panel.  (Displayed while in AEVM? Menu)	1	GSS cable is connected to front panel (GSS connection in progress)	Disconnect GSS cable and wait 30 seconds for AAVM to be ready.
	2	Communication disruption between processors	Reset the AAVM (cycle the circuit breaker ENGINE VIB MON C1076).

EFFECTIVITY
HAP ALL

**77-31-00**Page 223  
Jun 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054, 101-106 POST SB 737-77-1069 (Continued)

(Continued)

SYMPTOM		POSSIBLE CAUSE	SOLUTION
GSS shows "Communication Status: Down"	1	AAVM still not ready for GSS mode	Wait 30 seconds for AAVM to be ready after connecting GSS cable to AAVM.
	2	GSS cable incorrectly installed	Close the GSS software and ensure GSS cable is properly seated in AAVM connector and laptop Ethernet, restart GSS with cable attached.
	3	GSS cable damaged	Replace GSS cable.
	4	Communication port and/or IP address incorrect	Install GSS and configure communication port and/or IP address in accordance with GSS software installation procedures.
	5	Communication disruption between AAVM processors or between AAVM processor and laptop	Disconnect the GSS cable, close the GSS software and reset the AAVM (cycle the circuit breaker ENGINE VIB MON C1076). Restart communication procedure.
GSS does not download files	1	No engine selected for data download	Check Engine 1 and Engine 2 boxes on the "Auto Download" page of the GSS
Download files are empty	1	Alternate accel is selected	Select the Standard accel via the AAVM menu on the front panel display
	2	Standard accel is declared faulty or disconnected	Repair Standard accel or move AAVM to a different aircraft. The AAVM does not function if the No.1 bearing accel is disconnected.
	3	Accel line is declared faulty	Repair accel line or move AAVM to a different aircraft
"AVM syst Fault xx"	1	Internal failure	Replace the AAVM.

## G. Configure the GSS for Aircraft Identification

SUBTASK 77-31-00-970-017-F00

- (1) If it is necessary, do these step to configure the GSS AAVM software, SPL-4906 for aircraft identification (Figure 201):
  - (a) The laptop with the GSS does not need to be connected to the AAVM to perform this function. Pre-loading the airplane data will enable the flight line mechanic to select the applicable aircraft identifier from an existing list. This operation must be performed by user with Administrator privileges.
    - 1) On the laptop computer, double-click on the GSS AAVM icon to start the GSS software.
    - 2) GSS Version 1;

The GSS screen will show the hardware part number applicability information. Click on "Continue" or push the "F5" key.

EFFECTIVITY
HAP ALL

**77-31-00**Page 224  
Feb 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054, 101-106 POST SB 737-77-1069 (Continued)

- 3) The date and time are indicated on the login screen. Make sure that these values are correct, as this information will be used with the downloaded data.
- 4) Select the desired user level (Administrator) from the drop-down options and enter the corresponding password. Push the "Enter" key.
- 5) Select the "Aircraft Information" drop-down option at the top of the GSS screen.
- 6) To manually add an individual aircraft, select the "Add Aircraft" option.
  - a) This step is not necessary if the data was entered prior to downloading.
- 7) Enter an identifier in the "New Aircraft Identifier" field. This can be the aircraft tail number or designation that will individually identify an aircraft.
  - a) This step is not necessary if the data was entered prior to downloading.
- 8) Click on "OK" or push the "F5" key.
- 9) To load engine data click on "Aircraft Info" or push the "F6" key.
- 10) Select the "Aircraft Identifier" from the drop-down options.
- 11) Enter engine type and serial number and any additional data in the fields provided.
- 12) Click on "Save Changes" or push the "F5" key.
- 13) Click on the "Back (Esc)" button or press "Esc".
- 14) Click on the "Exit (Esc)" button or press "Esc" to close the GSS software.

## H. Download the Contents of the AAVM Bearing Memory Using the GSS

SUBTASK 77-31-00-970-021-F00

- (1) If it is necessary, do a check of the firmware version loaded in the AAVM
  - a) Do this task, Airborne Vibration Monitoring (AVM) System - System Test, TASK 77-31-00-970-803-F00
    - 1) Use the AEVM menu and look at the Config Menu Display.
      - a) If the Main SW shows 249-109-000-0XX, use AAVM software, SPL-4906 GSS version 1.
 

**NOTE:** This software version includes the 4R bearing algorithm only.
      - b) Refer to Vibro-Meter Service Bulletin 298-77-004 for more details.

SUBTASK 77-31-00-970-018-F00

- (2) Do these steps to Download the Contents of the AAVM Bearing Memory Using the GSS AAVM software, SPL-4906 (Figure 202):
  - (a) If it is necessary refer to the GSS Troubleshooting Tips and GSS Configure Aircraft.
  - (b) Make sure both engines are not running.
  - (c) Gain access to the electronics bay and locate the AAVM.
  - (d) Switch on the laptop PC and allow the boot process to complete.
  - (e) Make sure that electrical power is being supplied to the AAVM and that the AAVM has finished processing any flight data. Push one of the four buttons on the front panel to activate the front panel display. If the front panel display becomes active, then the required conditions have been met.
  - (f) Remove the protective cover from the maintenance connector (the larger of the two) on the front panel of the AAVM.

EFFECTIVITY
HAP ALL

**77-31-00**Page 225  
Feb 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054, 101-106 POST SB 737-77-1069 (Continued)

- (g) Connect the 50-pin sub-D type connector of the GSS AAVM adapter cable, SPL-4905 to the maintenance connector on the front panel of the AAVM.
- (h) Connect the RJ45 Ethernet connector of the GSS cable to the network connector of the laptop PC.
- (i) Wait until the 10 Mbits/s network connection show the status "connected". Depending on how the TCP/IP settings have been configured (use of the Alternate Configuration feature or not), some computers may take up to 1 minute to establish the communication.
  - 1) Refer to Vibro-Meter Service Bulletin 298-77-004 for more details.
- (j) On the laptop computer, double-click on the GSS AAVM icon to start the GSS software.
- (k) GSS Version 1;
 

The GSS screen will show the hardware applicability information. Click on the "Continue" button or push the "F5" key.
- (l) The date and time are indicated on the login screen. Make sure that these values are correct, as this information will be used with the downloaded data.
- (m) Click on the "Download" button or push the "F5" key.
- (n) Select a pre-configured aircraft identifier from the Auto Download menu pull-down options.
 

**NOTE:** If aircraft information has already been programmed, the information will be displayed when the aircraft is selected from the pull-down options. Otherwise, it can be entered at this point. See the task, Configure the GSS for Aircraft Identification.
- (o) Click on the "Continue Download" button or push the "F5" key.
- (p) The GSS will show the progression of the download.
 

**NOTE:** A complete download when the AAVM memory is full will take approximately two minutes to complete.
- (q) When the download is complete click on the "Done" button or push the "Enter" key to return to the main menu.
- (r) Disconnect the 50-pin sub-D type connector of the GSS cable from the maintenance connector on the front panel of the AAVM.
- (s) Replace the protective cover on the maintenance connector (the larger of the two) on the front panel of the AAVM.
- (t) Push one of the four buttons on the front panel to activate the front panel display.
- (u) Push the "No" button four times to access the "AEVM Menu" option.
- (v) Push the "Yes" button to access the applicable bearing menu option.
- (w) If the applicable bearing menu option is available no further action is necessary.
- (x) If the message "Not in service" is shown, cycle the circuit breaker ENGINE VIB MON C1076 panel P6-2, grid location A2 to reset the AAVM before the next flight

## I. Erase the Memory of the AAVM Using the GSS

SUBTASK 77-31-00-970-019-F00

- (1) If it is necessary, do these steps to Erase the Memory of the AAVM Using the GSS AAVM software, SPL-4906 (Figure 203)
  - (a) This procedure applies for these conditions:

EFFECTIVITY  
HAP ALL

**77-31-00**

Page 226  
Feb 15/2009

D633A101-HAP

**AIRCRAFT MAINTENANCE MANUAL****HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054, 101-106 POST SB 737-77-1069 (Continued)**

- 1) This procedure must be done after an engine change or when the AAVM is changed on the aircraft.
  - 2) Do not erase the memory after every download. AAVM functions require repeated detections on successive flights to indicate a bearing fault. Erasure of the memory after each download would potentially prevent fault detection rendering the advanced functions void.
  - 3) The GSS can be configured to automatically do a memory erase after a data download. This function should only be enabled when the AAVM is moved to another aircraft or an engine change on the current aircraft. It should be noted that if the GSS is configured to do a complete memory erase the process would take approximately 20 minutes.
- (b) To erase the AAVM memory, do these steps:
- 1) Make sure both engines are not running.
  - 2) Get access to the electronics bay and find the AAVM.
  - 3) Switch on the laptop PC and allow the boot process to complete.
  - 4) Make sure that electrical power is being supplied to the AAVM and that the AAVM has finished processing any flight data. Push one of the four buttons on the front panel to activate the front panel display. If the front panel display becomes active, then the required conditions have been met.
  - 5) Remove the protective cover from the maintenance connector (the larger of the two) on the front panel of the AAVM.
  - 6) Connect the 50-pin sub-D type connector of the GSS AAVM adapter cable, SPL-4905 to the maintenance connector on the front panel of the AAVM.
  - 7) Connect the RJ45 Ethernet connector of the GSS cable to the network connector of the laptop PC.
  - 8) Wait until the 10 Mbits/s network connection show the status "connected". Depending on how the TCP/IP settings have been configured (use of the Alternate Configuration feature or not), some computers may take up to 1 minute to establish the communication.
    - a) Refer to Vibro-Meter Service Bulletin 298-77-004 for more details.
  - 9) On the laptop computer, double-click on the GSS AAVM icon to start the GSS software.
  - 10) GSS Version 1;  
The GSS screen will show the hardware applicability information. Click on the "Continue" button or push the "F5" key.
  - 11) The date and time are indicated on the login screen. Make sure that these values are correct, as this information will be used with the downloaded data.
  - 12) Click on the "Clear" button or push the "F7" key.

**EFFECTIVITY**  
**HAP ALL**

D633A101-HAP

**77-31-00**Page 227  
Feb 15/2009



## AIRCRAFT MAINTENANCE MANUAL

HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054, 101-106 POST SB 737-77-1069 (Continued)

- 13) Select all check-boxes for Engine 1 Memory Clear and Engine 2 Memory Clear.

NOTE: Before using the AAVM on a different aircraft it is important to erase all memory options.

NOTE: Immediately following an engine change it is important to erase all memory options for the affected engine.

NOTE: Do not interrupt power to the AEVM during the memory erase to prevent memory corruption. Do not interrupt the memory erase with the Cancel [F8] key.

- 14) Click on the "Continue Clearing" button or push the "F5" key.

- 15) The GSS will show the progression of the memory erase.

NOTE: A complete memory erase (all options selected for each engine) will take approximately six minutes.

- 16) When the memory erase is complete click on the "Done" button or push the "Enter" key.

- 17) Disconnect the 50-pin sub-D type connector of the GSS cable from the maintenance connector on the front panel of the AAVM.

- 18) Replace the protective cover on the maintenance connector (the larger of the two) on the front panel of the AAVM.

- 19) Push one of the four buttons on the front panel to activate the front panel display.

- 20) Push the "No" button four times to access the "AEVM Menu" option.

- 21) Push the "Yes" button to access the applicable bearing menu option.

- 22) If the applicable bearing menu option is available no further action is necessary.

- 23) If the message "AEVM Comm Error" is shown, cycle the circuit breaker ENGINE VIB MON C1076 panel P6-2, grid location A2 to reset the AAVM before the next flight.

## J. Put the Airplane Back To Its Usual Condition

SUBTASK 77-31-00-410-006-F00

- (1) Close this access panel:

<u>Number</u>	<u>Name/Location</u>
117A	Electronic Equipment Access Door

————— END OF TASK —————

EFFECTIVITY  
HAP ALL



D633A101-HAP

77-31-00

Page 228  
Feb 15/2009



AIRCRAFT MAINTENANCE MANUAL

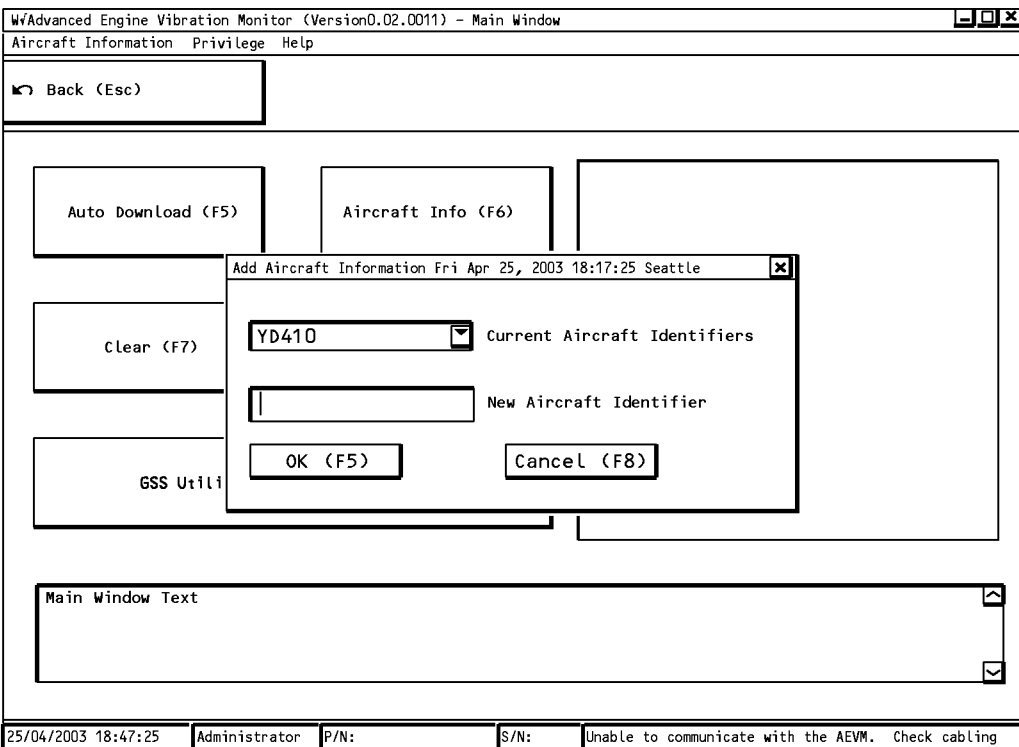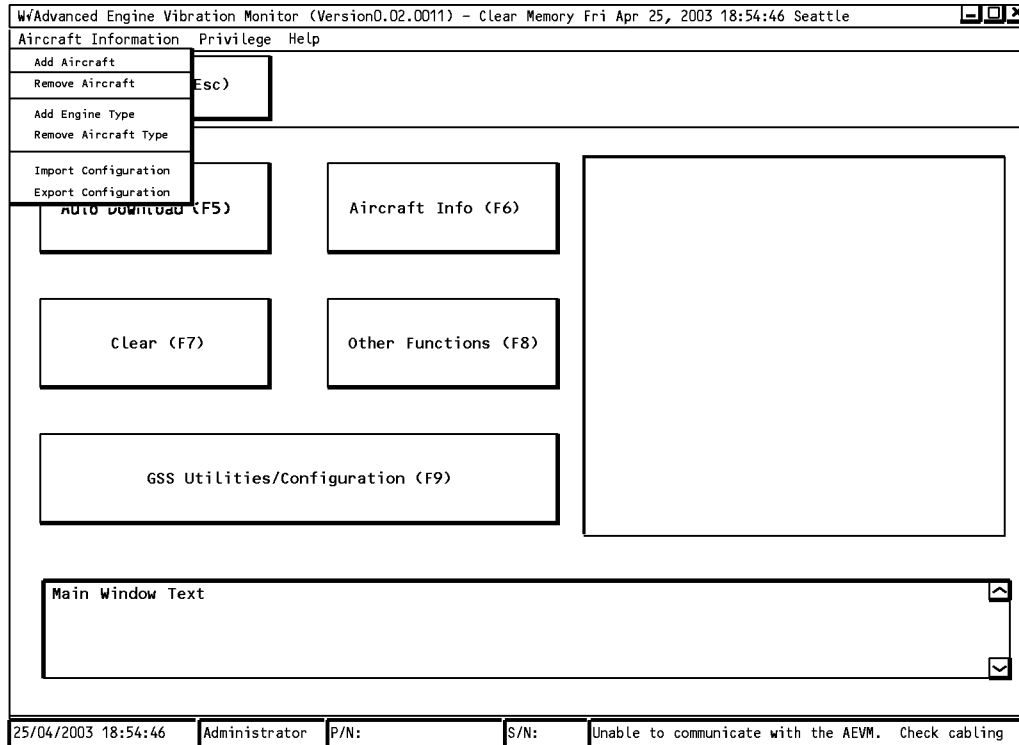

D84601 S0000166901\_V2

GSS Aircraft Configuration  
Figure 201/77-31-00-990-801-F00

EFFECTIVITY  
HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054,  
101-106 POST SB 737-77-1069

77-31-00

Page 229  
Feb 15/2009

D633A101-HAP

737-600/700/800/900  
AIRCRAFT MAINTENANCE MANUAL

W/Advanced Engine Vibration Monitor (Version0.02.0011) - Main Window

Aircraft Information Privilege Help

Aircraft Information Wed Apr 30, 2003 11:06:38 Seattle

Back

YD410 Aircraft Identifier

Shop ID (Optional)

Aut

Engine 1 (Optional)

CFM56-7 Engine Type

Serial Number

Install Date

Engine 2 (Optional)

CFM56-7 Engine Type

Serial Number

Install Date

Comments (Optional)

Auto

Continue Download (F5)

Cancel Download (F8)

30/04/2003 11:06:38 Flight Line P/N: abcdefghijklmnop S/N: 0000 Communication status OK

W/Advanced Engine Vibration Monitor (Version0.02.0011) - Main Window

Aircraft Information Privilege Help

Back (Esc)

Auto Download Status Wed Apr 30, 2003 11:06:38 Seattle

Processing complete

100%

Engine 1	Engine 2
Bearing 4 Data Download ...Completed	Bearing 4 Data Download ...Completed
Bearing 4 Post-Processing ...Completed	Bearing 4 Post-Processing ...Completed
Bearing 4 Data Memory Erase ...Not requested	Bearing 4 Data Memory Erase ...Not requested
Bearing 4 Defect History Erase ...Not requested	Bearing 4 Defect History Erase ...Not requested
Accel Line Defect History Erase...Not requested	Accel Line Defect History Erase...Not requested

Done (F5)

30/04/2003 11:13:39 Flight Line P/N: abcdefghijklmnop S/N: 0000 Communication status OK

D85264 S0000166903\_V3

AAVM Download With GSS  
Figure 202/77-31-00-990-802-F00

EFFECTIVITY

HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054,  
101-106 POST SB 737-77-1069

77-31-00

Page 230  
Feb 15/2009

D633A101-HAP

**737-600/700/800/900  
AIRCRAFT MAINTENANCE MANUAL**

W/Advanced Engine Vibration Monitor (Version0.02.0011) - Clear Memory Fri Apr 25, 2003 18:54:46 Seattle			
Aircraft Information Privilege Help			
<input type="button" value="Back (Esc)"/>			
<b>Engine 1 Memory Clear</b> <input checked="" type="checkbox"/> Bearing 4 Data <input type="checkbox"/> N4 Defect Detection History <input type="checkbox"/> Accel Line Defect Detection History		<b>Engine 2 Memory Clear</b> <input checked="" type="checkbox"/> Bearing 4 Data <input type="checkbox"/> N4 Defect Detection History <input type="checkbox"/> Accel Line Defect Detection History	
<input type="button" value="Continue Clearing (F5)"/>		<input type="button" value="Cancel (F8)"/>	
Clear Memory Text <input type="text"/>			
25/04/2003 18:54:46	Administrator	P/N:	S/N: Unable to communicate with the AEVM. Check cabling

D83174 S0000166904\_V2

**Erase AAVM Memory With GSS  
Figure 203/77-31-00-990-803-F00**

<b>EFFECTIVITY</b> <b>HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054, 101-106 POST SB 737-77-1069</b>
--

# 77-31-00

Page 231  
Feb 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

## TASK 77-31-00-910-801-F00

6. ARINC 429 Data Bus Charts

## A. General

- (1) The ARINC 429 data bus charts give the information necessary to analyze the ARINC transmitters, receivers and data buses.
- (2) To do a test of the ARINC 429 data bus, you can use an available terminal block or a connector on the LRU.

## B. Tools/Equipment

**NOTE:** When more than one tool part number is listed under the same "Reference" number, the tools shown are alternates to each other within the same airplane series. Tool part numbers that are replaced or non-procurable are preceded by "Opt:", which stands for Optional.

Reference	Description
COM-1562	Analyzer - Data Bus, ARINC 429 (Part #: 01-1404-00, Supplier: 41364, A/P Effectivity: 737-300, -400, -500, -600, -700, -700C, -700ER, -700QC, -800, -900, -900ER, -BBJ) (Part #: 429EBP, Supplier: 41364, A/P Effectivity: 737-300, -400, -500, -600, -700, -700C, -700ER, -700QC, -800, -900, -900ER, -BBJ) (Part #: 800-0630, Supplier: 1JSZ6, A/P Effectivity: 737-300, -400, -500, -600, -700, -700C, -700ER, -700QC, -800, -900, -900ER) (Part #: MODEL 429HBA, Supplier: 5J927, A/P Effectivity: 737-300, -400, -500, -600, -700, -700C, -700ER, -700QC, -800, -900, -900ER, -BBJ) (Part #: TYPE 030/026, Supplier: \$0494, A/P Effectivity: 737-300, -400, -500, -600, -700, -700C, -700ER, -700QC, -800, -900, -900ER, -BBJ)
SPL-2415	Box - Test, AVM (Part #: C77004-10, Supplier: 81205, A/P Effectivity: 737-300, -400, -500, -600, -700, -700C, -700ER, -700QC, -800, -900, -900ER, -BBJ)

## C. Procedure

SUBTASK 77-31-00-480-001-F00

- (1) Connect the box, SPL-2415 to the front panel of the airborne vibration monitor (AVM) signal conditioner.

SUBTASK 77-31-00-480-002-F00

- (2) Connect the analyzer, COM-1562 to the box, SPL-2415.

Table 212/77-31-00-993-808-F00

BUS NAME SOURCE	TYPE	BUS	CON	PINS	BUS FORMAT	BIT RATE	DATA BUS
AVM (L/R)	A	1	A	C06 D06	429	LO	AVM DATA

Table 213/77-31-00-993-809-F00

SIGNAL AVM (ID = 03D)	TYPE	LABEL	FORMAT	UPDATE RATE	SDI 10/9	BINARY RANGE	POSITIVE SENSE	UNITS
N1 VIB - ENG 1 FAN	A	354	BNR	5	01	5.00	ALWAYS POS	*[1]
N1 VIB - ENG 2 FAN	A	354	BNR	5	10	5.00	ALWAYS POS	*[1]
N2 VIB - ENG 1 HPC	A	355	BNR	5	01	5.00	ALWAYS POS	*[1]

EFFECTIVITY  
HAP ALL

77-31-00

D633A101-HAP

Page 232  
Feb 15/2009

**737-600/700/800/900  
AIRCRAFT MAINTENANCE MANUAL**

(Continued)

<b>SIGNAL AVM (ID = 03D)</b>	<b>TYPE</b>	<b>LABEL</b>	<b>FORMAT</b>	<b>UPDATE RATE</b>	<b>SDI 10/9</b>	<b>BINARY RANGE</b>	<b>POSITIVE SENSE</b>	<b>UNITS</b>
N2 VIB - ENG 2 HPC	A	355	BNR	5	10	5.00	ALWAYS POS	*[1]
N1 VIB - ENG 1 LPT	A	356	BNR	5	01	5.00	ALWAYS POS	*[1]
N1 VIB - ENG 2 LPT	A	356	BNR	5	10	5.00	ALWAYS POS	*[1]
N2 VIB - ENG 1 HPT	A	357	BNR	5	01	5.00	ALWAYS POS	*[1]
N2 VIB - ENG 2 HPT	A	357	BNR	5	10	5.00	ALWAYS POS	*[1]
STATUS WORD	A	270	DIS	5		N/A	N/A	

\*[1] Scalar Units.

————— **END OF TASK** —————

EFFECTIVITY  
HAP ALL

D633A101-HAP

**77-31-00**

Page 233  
Oct 15/2008

## AIRCRAFT MAINTENANCE MANUAL

AIRBORNE VIBRATION MONITORING (AVM) SYSTEM - ADJUSTMENT/TEST**1. General**

A. This procedure has two tasks:

- (1) The operational test of the airborne vibration monitoring system.
- (2) The self test of the airborne vibration monitor signal conditioner.

**TASK 77-31-00-710-801-F00****2. Airborne Vibration Monitoring (AVM) System - Operational Test**

A. General

- (1) This task is the operational test procedure for the airborne vibration monitoring (AVM) system.
- (2) The operational test consists of three parts as follows:
  - (a) A Built-In Test Equipment (BITE) test of the AVM signal conditioner.
  - (b) A BITE check of the complete AVM system for faults external to the AVM signal conditioner from the recent flight(s).
  - (c) An engine operation (one engine at idle) to check that AVM system is operational.
- (3) You can use the operational test to make sure that the AVM signal conditioner operates after a component replacement.

B. References

Reference	Title
71-00-00-700-819-F00	Stop the Engine Procedure (Usual Engine Stop) (P/B 201)
71-00-00-800-807-F00	Start the Engine Procedure (Selection) (P/B 201)
77-31-00-970-802-F00	Airborne Vibration Monitoring (AVM) System - System Test (P/B 201)
77-31-00-970-803-F00	Airborne Vibration Monitoring (AVM) System - System Test (P/B 201)
77-31-00-970-804-F00	Airborne Vibration Monitoring (AVM) System - System Test (P/B 201)
FIM 77-31 TASK 801	AVM Signal Conditioner BITE Procedure

C. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right
211	Flight Compartment - Left
212	Flight Compartment - Right

D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

E. Prepare to Do the Operational Test of the AVM System

SUBTASK 77-31-00-860-015-F00

- (1) Make sure that the center display system is on.

SUBTASK 77-31-00-860-002-F00

- (2) Make sure that this circuit breaker is closed:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
A	2	C01076	ENGINE VIB MON

EFFECTIVITY  
HAP ALL

# 77-31-00

Page 501  
Feb 10/2006

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

SUBTASK 77-31-00-010-002-F00

(3) Open this access panel:

<u>Number</u>	<u>Name/Location</u>
117A	Electronic Equipment Access Door

F. Do the Operational Test of the AVM System

**HAP 001-005 PRE SB 737-77-1056**

SUBTASK 77-31-00-860-008-F00

(1) ENDEVCO -203 AVM;

Do these steps to do a self test of the AVM signal conditioner:

- (a) Make sure that the two VIB indicators on the center instrument panel (P2) show  $0 \pm 0.25$  units.

NOTE: If the circuit breaker is closed, the two VIB indicators on the center instrument panel (P2) should show 0. If the circuit breaker was open, the two VIB indicators on the center instrument panel (P2) will not show. If the circuit breaker is closed and the two VIB indicators on the center instrument panel (P2) do not show, then do the fault isolation for Engine VIB Indication Blank (FIM 77-05 TASK 806).

- (b) Push and release the TEST button on the AVM signal conditioner.
- 1) If the front display on the AVM signal conditioner stays blank, do this task: (FIM 77-05 TASK 809)..
- (c) Make sure that the AVM signal conditioner shows 88 for less than 1 second, and then turns the display off.
- 1) If the display goes out of view, the AVM signal conditioner passed the self test.
  - 2) If 88 remains on, there is a failure of the AVM signal conditioner and it should be replaced.
    - a) Do the self test again.
- (d) If the AVM signal conditioner shows code A9 or is blank, there is a failure of the AVM signal conditioner.
- 1) Replace the AVM signal conditioner and do the self test again.

**HAP 006-011 PRE SB 737-77-1056; AIRPLANES WITH ENDEVCO -213 AVM**

SUBTASK 77-31-00-860-009-F00

(2) Do these steps to do a self test of the AVM signal conditioner:

- (a) Make sure that the two VIB indicators on the center instrument panel (P2) show  $0 \pm 0.25$  units.

NOTE: If the circuit breaker is closed, the two VIB indicators on the center instrument panel (P2) will show 0. If the circuit breaker was open, the two VIB indicators on the center instrument panel (P2) will not show. If the circuit breaker is closed and the two VIB indicators on the center instrument panel (P2) do not show, then do the fault isolation for Engine VIB Indication Blank (FIM 77-05 TASK 806).

- (b) Push and release one of the four buttons on the front display of the AVM signal conditioner.
- 1) If the front display on the AVM signal conditioner stays blank, do this task: (FIM 77-05 TASK 809)..
- (c) The AVM signal conditioner will show SELF TEST?.

EFFECTIVITY  
HAP ALL

**77-31-00**

Page 502  
Jun 10/2004

D633A101-HAP

**AIRCRAFT MAINTENANCE MANUAL****HAP 006-011 PRE SB 737-77-1056; AIRPLANES WITH ENDEVCO -213 AVM (Continued)**

- (d) Push and release the YES button on the front display of the AVM signal conditioner.

NOTE: The front display will then illuminate all the pixels on the display for 1-3 seconds.

- (e) Make sure that the AVM signal conditioner shows SELFTEST PASSED.

NOTE: The AVM signal conditioner passed the self test. The front display will then go out of view.

- (f) If the AVM signal conditioner shows SELFTEST FAILED REPLACE or is blank, there is a failure of the AVM signal conditioner.

- 1) Replace the AVM signal conditioner and do the self test again.

**HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069**

SUBTASK 77-31-00-860-012-F00

**(3) VIBRO-METER AVM;**

Do these steps to do a self test of the AVM signal conditioner:

- (a) Make sure that the two VIB indicators on the center instrument panel (P2) show  $0 \pm 0.25$  units.

NOTE: If the circuit breaker is closed, the two VIB indicators on the center instrument panel (P2) will show 0. If the circuit breaker was open, the two VIB indicators on the center instrument panel (P2) will not show. If the circuit breaker is closed and the two VIB indicators on the center instrument panel (P2) do not show, then do the fault isolation for the Engine VIB Indication Blank (FIM 77-05 TASK 806).

- (b) Push and release one of the four buttons on the front display of the AVM signal conditioner.

- 1) If the front display on the AVM signal conditioner stays blank, do this task: (FIM 77-05 TASK 809).

- (c) The AVM signal conditioner will show Self Test?.

- (d) Push and release the YES button on the front display of the AVM signal conditioner.

- (e) The AVM signal conditioner will show the hardware and software versions and engine type for 10 seconds, then show Test in progress for a couple seconds.

- 1) Make sure the engine type is correct.

- (f) Make sure that the AVM signal conditioner shows Test OK.

NOTE: The AVM signal conditioner passed the self test. After Test OK, push and release the NO button to show Fault History? on the front display of the AVM signal conditioner. If the AVM signal conditioner is left alone for 5 minutes, the display will then turn off.

EFFECTIVITY  
HAP ALL

D633A101-HAP

**77-31-00**

Page 503  
Feb 15/2009



## AIRCRAFT MAINTENANCE MANUAL

**HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069**  
(Continued)

- (g) If the AVM signal conditioner shows XX Faults Display? or is blank, there is a failure of the AVM signal conditioner.

NOTE: XX is the total number of faults.

**HAP 023-026, 028-054, 107-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069;**  
**HAP 101-106 POST SB 737-77-1069**

NOTE: If the AVM displays CONFIG FAULT, make sure the wiring change per SB 737-77-1056 is done.

**HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069**

- 1) If the front display on the AVM signal conditioner is blank, replace the AVM signal conditioner and do the self test again.
- 2) Interrogate the AVM system, do this task: Airborne Vibration Monitoring (AVM) System - System Test, TASK 77-31-00-970-803-F00.

**HAP 001-005 PRE SB 737-77-1056**

SUBTASK 77-31-00-970-003-F00

- (4) ENDEVCO -203 AVM ;

For the BITE maintenance messages only, do this task: Airborne Vibration Monitoring (AVM) System - System Test, TASK 77-31-00-970-804-F00.

NOTE: If you find BITE maintenance messages, these are the faults from other flights or other engine operations.

**HAP 006-011 PRE SB 737-77-1056; AIRPLANES WITH ENDEVCO -213 AVM**

SUBTASK 77-31-00-970-007-F00

- (5) For the BITE maintenance messages only, do this task: Airborne Vibration Monitoring (AVM) System - System Test, TASK 77-31-00-970-802-F00.

NOTE: If you find BITE maintenance messages, these are the faults from other flights or other engine operations.

**HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069**

SUBTASK 77-31-00-970-015-F00

- (6) VIBRO-METER AVM;

For the BITE maintenance messages only, do this task: Airborne Vibration Monitoring (AVM) System - System Test, TASK 77-31-00-970-803-F00.

NOTE: If you find BITE maintenance messages, these are the faults from other flights or other engine operations.

**HAP ALL**

SUBTASK 77-31-00-800-001-F00

- (7) Do this task: Start the Engine Procedure (Selection), TASK 71-00-00-800-807-F00.
- (a) Operate only one engine to do this test.
  - (b) Operate the engine at idle power.

EFFECTIVITY  
HAP ALL

D633A101-HAP

**77-31-00**

Page 504  
Feb 15/2009

## AIRCRAFT MAINTENANCE MANUAL

SUBTASK 77-31-00-710-001-F00

- (8) Monitor the VIB indication on the Center Instrument Panel (P2) in the flight compartment.
- Make sure that the VIB indication is more than zero.
  - Make sure that the VIB indication is shown for the engine that you operate.
  - Slowly move the thrust lever forward to 70% N1.
  - Let the engine operation become stable for 2 minutes.
  - Move the thrust lever rearward to idle power.

SUBTASK 77-31-00-800-002-F00

- (9) Do this task: Stop the Engine Procedure (Usual Engine Stop), TASK 71-00-00-700-819-F00.

**HAP 001-005 PRE SB 737-77-1056**

SUBTASK 77-31-00-970-004-F00

**CAUTION:** RECORD THE BITE MAINTENANCE MESSAGES BEFORE YOU PUSH THE DATA BUTTON AGAIN. YOU WILL ERASE ALL THE BITE MAINTENANCE MESSAGES WHEN YOU PUSH THE DATA BUTTON AFTER THE LAST BITE MAINTENANCE MESSAGE.

- (10) ENDEVCO -203 AVM ;

For the BITE maintenance messages only, do this task: Airborne Vibration Monitoring (AVM) System - System Test, TASK 77-31-00-970-804-F00.

**HAP 006-011 PRE SB 737-77-1056; AIRPLANES WITH ENDEVCO -213 AVM**

SUBTASK 77-31-00-970-008-F00

- (11) For the BITE maintenance messages only, do this task: Airborne Vibration Monitoring (AVM) System - System Test, TASK 77-31-00-970-802-F00.

**HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069**

SUBTASK 77-31-00-970-010-F00

- (12) VIBRO-METER AVM;

For the BITE maintenance messages only, do this task: Airborne Vibration Monitoring (AVM) System - System Test, TASK 77-31-00-970-803-F00.

**HAP ALL**

SUBTASK 77-31-00-810-001-F00

- (13) If there are new BITE maintenance messages, do the applicable corrective action that shows in the reference (FIM 77-31 TASK 801).

SUBTASK 77-31-00-860-004-F00

- (14) Do this test again for the other engine.

SUBTASK 77-31-00-410-002-F00

- (15) Close this access panel:

<u>Number</u>	<u>Name/Location</u>
117A	Electronic Equipment Access Door

————— **END OF TASK** —————

EFFECTIVITY  
HAP ALL

**77-31-00**

Page 505  
Feb 15/2009

D633A101-HAP

**737-600/700/800/900**  
**AIRCRAFT MAINTENANCE MANUAL**

**TASK 77-31-00-700-801-F00****3. Airborne Vibration Monitor (AVM) Signal Conditioner - Self Test****A. General**

- (1) This task is the self test procedure for the airborne vibration monitor (AVM) signal conditioner.
- (2) This procedure refers to the Built-In Test Equipment as the BITE.
- (3) The self test does a check of the AVM signal conditioner.
  - (a) The self test makes sure that the AVM signal conditioner operates correctly.
  - (b) The self test does not display BITE maintenance messages or flight history.

**B. References**

Reference	Title
77-31-00-970-803-F00	Airborne Vibration Monitoring (AVM) System - System Test (P/B 201)

**C. Location Zones**

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right
211	Flight Compartment - Left
212	Flight Compartment - Right

**D. Access Panels**

Number	Name/Location
117A	Electronic Equipment Access Door

**E. Prepare to Do the Self Test of the AVM Signal Conditioner**

SUBTASK 77-31-00-860-005-F00

- (1) Make sure that this circuit breaker is closed:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
A	2	C01076	ENGINE VIB MON

SUBTASK 77-31-00-010-003-F00

- (2) Open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

**F. Do the Self Test of the AVM Signal Conditioner****HAP 001-005 PRE SB 737-77-1056**

SUBTASK 77-31-00-860-010-F00

- (1) ENDEVCO -203 AVM ;

Do these steps to do a self test of the AVM signal conditioner:

EFFECTIVITY  
HAP ALL

D633A101-HAP

**77-31-00**

Page 506  
Feb 15/2009

## AIRCRAFT MAINTENANCE MANUAL

## HAP 001-005 PRE SB 737-77-1056 (Continued)

- (a) Make sure that the two VIB indicators on the center instrument panel (P2) show  $0 \pm 0.25$  units.

**NOTE:** If the circuit breaker is closed, the two VIB indicators on the center instrument panel (P2) will show 0. If the circuit breaker was open, the two VIB indicators on the center instrument panel (P2) will not show. If the circuit breaker is closed and the two VIB indicators on the center instrument panel (P2) do not show, then do the fault isolation for Engine VIB Indication Blank (FIM 77-05 TASK 806).

- (b) Push and release the TEST button on the AVM signal conditioner.
- 1) If the front display on the AVM signal conditioner stays blank, do this task: (FIM 77-05 TASK 809).
- (c) Make sure that the AVM signal conditioner shows 88 for less than 1 second, and then turns the display off.
- 1) If the display goes out of view, the AVM signal conditioner passed the self test.
  - 2) If 88 remains on, there is a failure of the AVM signal conditioner and it should be replaced.
    - a) Do the self test again.
- (d) If the AVM signal conditioner shows code A9 or is blank, there is a failure of the AVM signal conditioner.
- 1) Replace the AVM signal conditioner and do the self test again.

**HAP 006-011 PRE SB 737-77-1056; AIRPLANES WITH ENDEVCO -213 AVM**

SUBTASK 77-31-00-860-011-F00

- (2) Do these steps to do a self test of the AVM signal conditioner:

- (a) Make sure that the two VIB indicators on the center instrument panel (P2) show  $0 \pm 0.25$  units.

**NOTE:** If the circuit breaker is closed, the two VIB indicators on the center instrument panel (P2) will show 0. If the circuit breaker was open, the two VIB indicators on the center instrument panel (P2) will not show. If the circuit breaker is closed and the two VIB indicators on the center instrument panel (P2) do not show, then do the fault isolation for Engine VIB Indication Blank (FIM 77-05 TASK 806).

- (b) Push and release one of the four buttons on the front display of the AVM signal conditioner.
- 1) If the front display on the AVM signal conditioner [1] stays blank, do this task: (FIM 77-05 TASK 809).
- (c) The AVM signal conditioner will show SELF TEST?.
- (d) Push and release the YES button on the front display of the AVM signal conditioner.

**NOTE:** All of the front display will illuminate for 1-3 seconds.

- (e) Make sure that the AVM signal conditioner shows SELFTEST PASSED.

**NOTE:** The AVM signal conditioner passed the self test. The front display will then go out of view.

- (f) If the AVM signal conditioner shows SELFTEST FAILED REPLACE or is blank, there is a failure of the AVM signal conditioner.
- 1) Replace the AVM signal conditioner and do the self test again.

EFFECTIVITY  
HAP ALL

**77-31-00**

Page 507  
Feb 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

HAP 006-011 PRE SB 737-77-1056; AIRPLANES WITH ENDEVCO -213 AVM (Continued)

HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069

SUBTASK 77-31-00-860-013-F00

(3) VIBRO-METER AVM;

Do these steps to do a self test of the AVM signal conditioner:

- (a) Make sure that the two VIB indicators on the center instrument panel (P2) show  $0 \pm 0.25$  units.

NOTE: If the circuit breaker is closed, the two VIB indicators on the center instrument panel (P2) will show 0. If the circuit breaker was open, the two VIB indicators on the center instrument panel (P2) will not show. If the circuit breaker is closed and the two VIB indicators on the center instrument panel (P2) do not show, then do the fault isolation for Engine VIB Indication Blank (FIM 77-05 TASK 806).

- (b) Push and release the one of the four buttons on the front display of the AVM signal conditioner.
- 1) If the front display on the AVM signal conditioner stays blank, do this task: (FIM 77-05 TASK 809).
- (c) The AVM signal conditioner will show Self Test?.
- (d) Push and release the YES button on the front display of the AVM signal conditioner.
- (e) The AVM signal conditioner will show the hardware and software versions and engine type for 10 seconds, then show Test in progress for a couple seconds.
- 1) Make sure the engine type is correct.
- (f) Make sure that the AVM signal conditioner shows Test OK.

NOTE: The AVM signal conditioner passed the self test. After Test OK, push and release the NO button to show Fault History? on the front display of the AVM signal conditioner. If the AVM signal conditioner is left alone for 5 minutes, the display will then turn off.

- (g) If the AVM signal conditioner shows XX Faults? or is blank, there is a failure of the AVM signal conditioner.

NOTE: XX is the total number of faults.

HAP 023-026, 028-054, 107-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069;  
HAP 101-106 POST SB 737-77-1069

NOTE: If the AVM displays CONFIG FAULT, make sure the wiring change per SB 737-77-1056 is done.

HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069

- 1) If the front display on the AVM signal conditioner is blank, replace the AVM signal conditioner and do the self test again.
- 2) Interrogate the AVM system, do this task: Airborne Vibration Monitoring (AVM) System - System Test, TASK 77-31-00-970-803-F00.

HAP ALL

EFFECTIVITY
HAP ALL

77-31-00

Page 508  
Feb 15/2009

D633A101-HAP

**AIRCRAFT MAINTENANCE MANUAL**

SUBTASK 77-31-00-410-003-F00

(4) Close this access panel:

<u>Number</u>	<u>Name/Location</u>
117A	Electronic Equipment Access Door

————— **END OF TASK** —————

EFFECTIVITY  
HAP ALL

D633A101-HAP

**77-31-00**

Page 509  
Feb 15/2009

## AIRCRAFT MAINTENANCE MANUAL

AIRBORNE VIBRATION MONITOR (AVM) SIGNAL CONDITIONER - REMOVAL/INSTALLATION**1. General**

A. This procedure has two tasks:

- (1) The removal of the airborne vibration monitor (AVM) signal conditioner.
- (2) The installation of the airborne vibration monitor (AVM) signal conditioner.

**TASK 77-31-03-000-801-F00****2. Airborne Vibration Monitor (AVM) Signal Conditioner Removal**

(Figure 401)

## A. General

- (1) This task is the removal procedure for the airborne vibration monitor (AVM) signal conditioner.
- (2) The AVM signal conditioner is installed on the E3-2 shelf in the main equipment center.
  - (a) When you remove the AVM signal conditioner, do not supply the electrical power to the AVM system.
  - (b) A lever that is part of the handle holds the AVM signal conditioner in the E3 rack mount.

## B. References

Reference	Title
20-10-07-000-801	E/E Box Removal (P/B 201)
20-40-12-000-802	ESDS Handling for Metal Encased Unit Removal (P/B 201)

## C. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right

## D. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

## E. Procedure

SUBTASK 77-31-03-860-001-F00

- (1) Open this circuit breaker and install safety tag:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
A	2	C01076	ENGINE VIB MON

SUBTASK 77-31-03-010-001-F00

- (2) Open this access panel:

Number	Name/Location
117A	Electronic Equipment Access Door

EFFECTIVITY  
HAP ALL

D633A101-HAP

# 77-31-03

Page 401  
Oct 10/2003

**AIRCRAFT MAINTENANCE MANUAL**

SUBTASK 77-31-03-840-001-F00

**CAUTION:** DO NOT TRY TO REMOVE THE AVM SIGNAL CONDITIONER BEFORE YOU DO THE PROCEDURE FOR DEVICES THAT ARE SENSITIVE TO ELECTROSTATIC DISCHARGE. ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE AVM SIGNAL CONDITIONER.

- (3) Before you touch the AVM signal conditioner [1], do this task: ESDS Handling for Metal Encased Unit Removal, TASK 20-40-12-000-802.

SUBTASK 77-31-03-020-002-F00

- (4) To remove the AVM signal conditioner [1], do this task: E/E Box Removal, TASK 20-10-07-000-801.

————— **END OF TASK** —————


EFFECTIVITY  
HAP ALL

D633A101-HAP

**77-31-03**Page 402  
Jun 10/2005



**AIRCRAFT MAINTENANCE MANUAL**

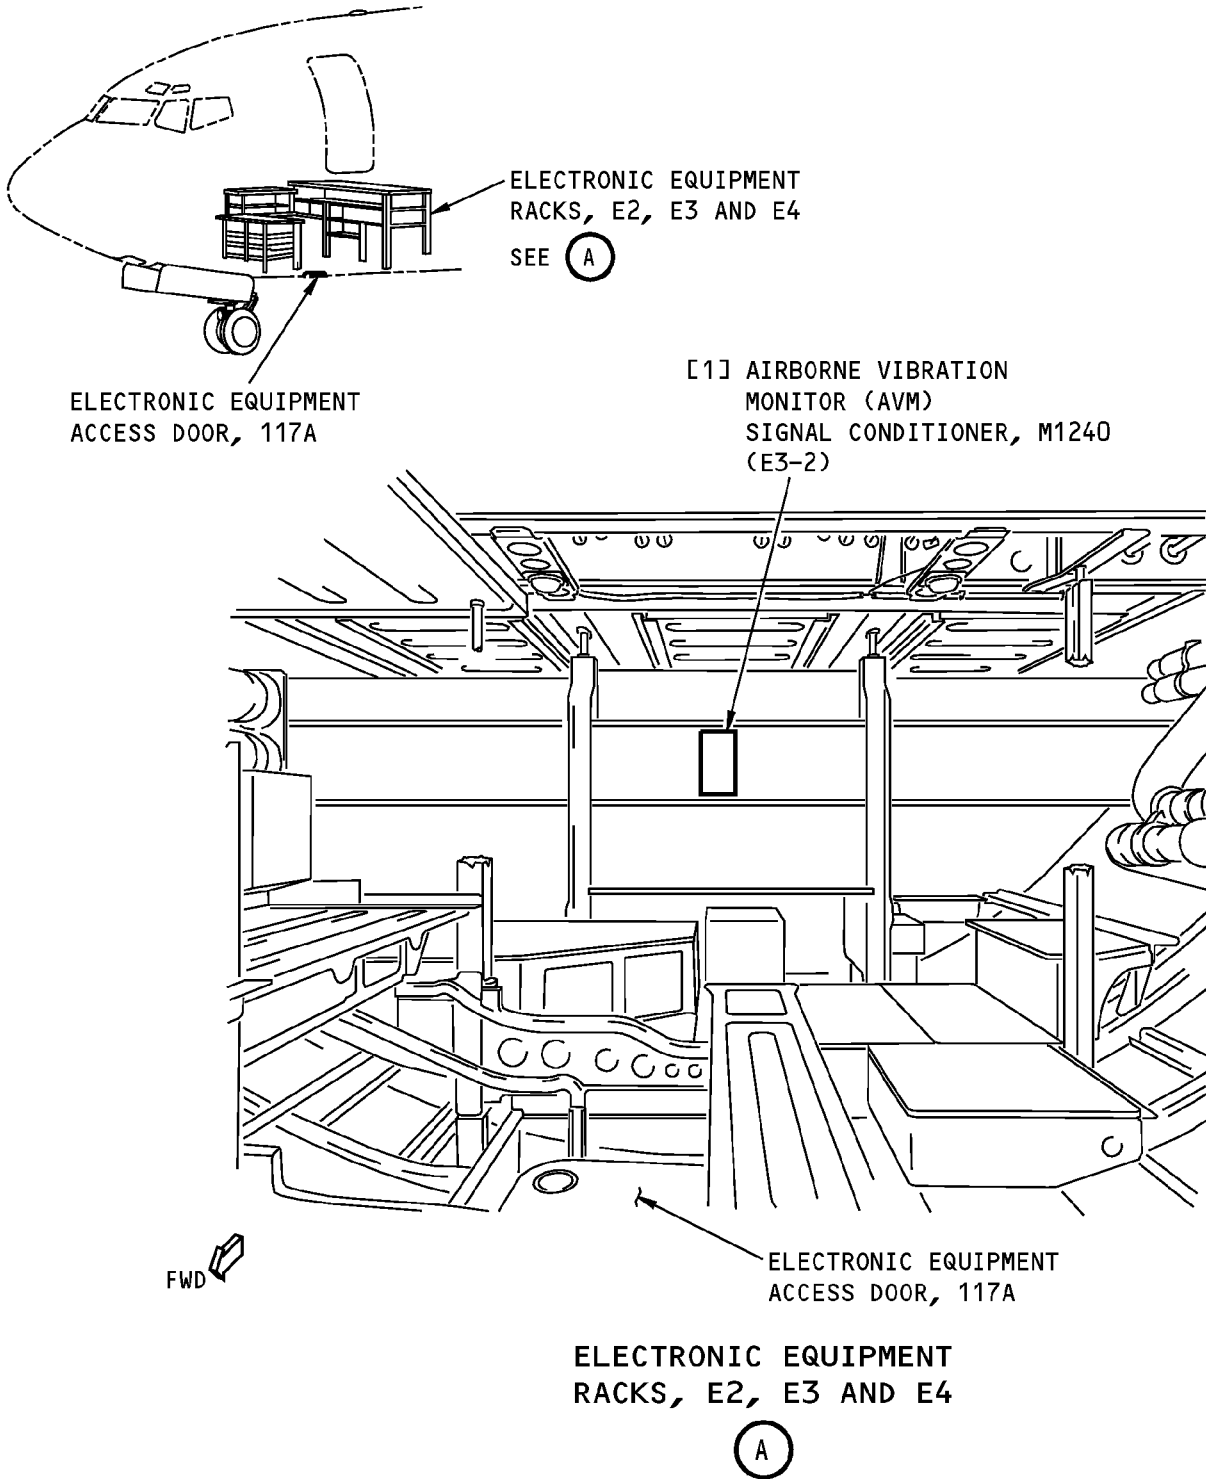

**Airborne Vibration Monitor (AVM) Signal Conditioner Installation**  
Figure 401/77-31-03-990-801-F00

EFFECTIVITY
HAP ALL

**77-31-03**

## AIRCRAFT MAINTENANCE MANUAL

## TASK 77-31-03-400-801-F00

3. Airborne Vibration Monitor (AVM) Signal Conditioner Installation

(Figure 401)

## A. General

- (1) This task is the installation procedure for the airborne vibration monitor (AVM) signal conditioner.

## B. References

Reference	Title
20-10-07-400-801	E/E Box Installation (P/B 201)
20-40-12-400-802	ESDS Handling for Metal Encased Unit Installation (P/B 201)
71-00-00-750-803-F00	Test 14B - Fan Trim Balance (On Board Procedure - Vibro-meter AVM S360N021-113, S360N021-114, and Universal AVM S362A001-1) (P/B 501)
71-00-00-750-804-F00	Test 14B - Fan Trim Balance (On Board Procedure - Endevco AVM S360N021-213) (P/B 501)
77-31-00-970-802-F00	Airborne Vibration Monitoring (AVM) System - System Test (P/B 201)
77-31-00-970-803-F00	Airborne Vibration Monitoring (AVM) System - System Test (P/B 201)
77-31-00-970-804-F00	Airborne Vibration Monitoring (AVM) System - System Test (P/B 201)
77-31-00-970-805-F00	Download The Advanced AVM (AAVM) Bearing Data With The Ground Support Software (GSS) (P/B 201)

## C. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
1	Conditioner	77-31-03-01-005	HAP 012, 013, 015-026, 028-030
		77-31-03-01-006	HAP 012, 013, 015-026, 028-030
		77-31-03-02-020	HAP 001-011
		77-31-03-03-020	HAP 031-054, 101-999

## D. Location Zones

Zone	Area
117	Electrical and Electronics Compartment - Left
118	Electrical and Electronics Compartment - Right
211	Flight Compartment - Left
212	Flight Compartment - Right

## E. Access Panels

Number	Name/Location
117A	Electronic Equipment Access Door

EFFECTIVITY  
HAP ALL

# 77-31-03

Page 404  
Feb 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

## F. AVM Signal Conditioner Installation

SUBTASK 77-31-03-840-002-F00

**CAUTION:** DO NOT TOUCH THE AVM SIGNAL CONDITIONER BEFORE YOU DO THE PROCEDURE FOR DEVICES THAT ARE SENSITIVE TO ELECTROSTATIC DISCHARGE. ELECTROSTATIC DISCHARGE CAN CAUSE DAMAGE TO THE AVM SIGNAL CONDITIONER.

- (1) Before you touch the AVM signal conditioner [1], do this task: ESDS Handling for Metal Encased Unit Installation, TASK 20-40-12-400-802.

SUBTASK 77-31-03-420-001-F00

- (2) To install the AVM signal conditioner [1], do this task: E/E Box Installation, TASK 20-10-07-400-801.

## G. AVM Signal Conditioner Installation Test

SUBTASK 77-31-03-860-003-F00

- (1) Remove the safety tag and close this circuit breaker:

F/O Electrical System Panel, P6-2

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
A	2	C01076	ENGINE VIB MON

**HAP 001-005 PRE SB 737-77-1056**

SUBTASK 77-31-03-860-006-F00

- (2) ENDEVCO -203 AVM;

Do these steps to do a self test of the AVM signal conditioner [1]:

- (a) Make sure that the two VIB indicators on the center instrument panel (P2) show  $0 \pm 0.25$  units.

**NOTE:** If the circuit breaker is closed, the two VIB indicators on the center instrument panel (P2) will show 0. If the circuit breaker was open, the two VIB indicators on the center instrument panel (P2) will not show. If the circuit breaker is closed and the two VIB indicators on the center instrument panel (P2) do not show, then do the fault isolation for Engine VIB Indication Blank (FIM 77-05 TASK 805)..

- (b) Push and release the TEST button on the AVM signal conditioner [1].
- 1) If the front display on the AVM signal conditioner stays blank, do this task: AVM Signal Conditioner Display Blank - Fault Isolation (FIM 77-05 TASK 809)..
- (c) Make sure that the AVM signal conditioner [1] shows 88 for less than 1 second, and then turns the display off.
- 1) If the display goes out of view, the AVM signal conditioner passed the self test.
  - 2) If 88 remains on, there is a failure of the AVM signal conditioner and it should be replaced.
    - a) Do the self test again.
- (d) If the AVM signal conditioner [1] shows code A9 or is blank, there is a failure of the AVM signal conditioner [1].
- 1) Replace the AVM signal conditioner [1] and do the self test again.

SUBTASK 77-31-03-070-001-F00

- (3) ENDEVCO -203 AVM;

EFFECTIVITY  
HAP ALL

**77-31-03**

Page 405  
Feb 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

## HAP 001-005 PRE SB 737-77-1056 (Continued)

Do these steps to remove all of the AVM data:

- (a) Do these steps on the BITE maintenance message and flight history menus (TASK 77-31-00-970-804-F00):
  - 1) Erase the BITE maintenance messages.
  - 2) Erase the flight history.

**HAP 006-011 PRE SB 737-77-1056; AIRPLANES WITH ENDEVCO -213 AVM**

SUBTASK 77-31-03-860-007-F00

- (4) Do these steps to do a self test of the AVM signal conditioner [1]:
  - (a) Make sure that the two VIB indicators on the center instrument panel (P2) show  $0 \pm 0.25$  units.
 

NOTE: If the circuit breaker is closed, the two VIB indicators on the center instrument panel (P2) will show 0. If the circuit breaker was open, the two VIB indicators on the center instrument panel (P2) will not show. If the circuit breaker is closed and the two VIB indicators on the center instrument panel (P2) do not show, then do the fault isolation for Engine VIB Indication Blank (FIM 77-05 TASK 805).
  - (b) Push and release one of the four buttons on the front display of the AVM signal conditioner [1].
    - 1) If the front display on the AVM signal conditioner stays blank, do this task: AVM Signal Conditioner Display Blank - Fault Isolation (FIM 77-05 TASK 809)..
  - (c) The AVM signal conditioner [1] will show SELF TEST?
  - (d) Push and release the YES button on the front display of the AVM signal conditioner [1].
 

NOTE: All of the front display will illuminate for 1-3 seconds.
  - (e) Make sure that the AVM signal conditioner [1] shows SELFTEST PASSED.
 

NOTE: The AVM signal conditioner passed the self test. The front display will then go out of view.
  - (f) If the AVM signal conditioner [1] shows SELFTEST FAILED REPLACE or is blank, there is a failure of the AVM signal conditioner [1].
    - 1) Replace the AVM signal conditioner [1] and do the self test again.

SUBTASK 77-31-03-070-002-F00

- (5) Do these steps to remove all of the AVM data:
  - (a) Do these steps on the BITE maintenance message and flight history menus (TASK 77-31-00-970-802-F00):
    - 1) Erase the BITE maintenance messages.
    - 2) Erase the flight history.
  - (b) Do these steps on the trim balance menu (TASK 71-00-00-750-804-F00):
    - 1) Make sure the engine balance weights agree with the AVM data.
    - 2) Erase the imbalance data.

EFFECTIVITY  
HAP ALL

D633A101-HAP

**77-31-03**

Page 406  
Feb 15/2009

## AIRCRAFT MAINTENANCE MANUAL

HAP 006-011 PRE SB 737-77-1056; AIRPLANES WITH ENDEVCO -213 AVM (Continued)

HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069

SUBTASK 77-31-03-860-009-F00

## (6) VIBRO-METER AVM;

Do these steps to do a self test of the AVM signal conditioner [1]:

- (a) Make sure that the two VIB indicators on the center instrument panel (P2) show  $0 \pm 0.25$  units.

**NOTE:** If the circuit breaker is closed, the two VIB indicators on the center instrument panel (P2) will show 0. If the circuit breaker was open, the two VIB indicators on the center instrument panel (P2) will not show. If the circuit breaker is closed and the two VIB indicators on the center instrument panel (P2) do not show, then do the fault isolation for Engine VIB Indication Blank (FIM 77-05 TASK 805).

- (b) Push and release one of the four buttons on the front display of the AVM signal conditioner [1].

1) If the front display on the AVM signal conditioner stays blank, do this task: AVM Signal Conditioner Display Blank - Fault Isolation (FIM 77-05 TASK 809).

- (c) The AVM signal conditioner [1] will show Self Test?.

- (d) Push and release the YES button on the front display of the AVM signal conditioner [1].

- (e) The AVM signal conditioner [1] will show the hardware and software versions and engine type for 10 seconds, then show Test in progress for approximately two seconds.

1) Make sure the engine type is correct.

- (f) Make sure that the AVM signal conditioner [1] shows Test OK.

**NOTE:** The AVM signal conditioner passed the self test. After Test OK, push and release the NO button to show Fault History? on the front display of the AVM signal conditioner. If the AVM signal conditioner is left alone for 5 minutes, the display will then turn off.

- (g) If the AVM signal conditioner [1] shows XX Faults? or is blank, there is a failure of the AVM signal conditioner [1].

**NOTE:** XX is the total number of faults.

HAP 023-026, 028-054, 107-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069;  
HAP 101-106 POST SB 737-77-1069

**NOTE:** If the AVM displays CONFIG FAULT, make sure the wiring change per SB 737-77-1056 is done.

HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069

- 1) If the front display on the AVM signal conditioner is blank, replace the AVM signal conditioner and do the self test again.

- 2) Interrogate the AVM system, do this task: Airborne Vibration Monitoring (AVM) System - System Test, TASK 77-31-00-970-803-F00.

SUBTASK 77-31-03-070-003-F00

## (7) VIBRO-METER AVM;

Do these steps to remove all of the AVM data:

EFFECTIVITY  
HAP ALL

77-31-03

D633A101-HAP

Page 407  
Feb 15/2009

## AIRCRAFT MAINTENANCE MANUAL

HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-77-1056 OR POST SB 737-77-1069  
(Continued)

- (a) Do these steps on the BITE maintenance message and flight history menus (TASK 77-31-00-970-803-F00):
  - 1) Erase the BITE maintenance messages.
  - 2) Erase the flight history.
- (b) Do these steps on the trim balance menu (TASK 71-00-00-750-803-F00):
  - 1) Make sure the engine balance weights agree with the AVM data.
  - 2) If you do an on-board fan trim balance, make sure the flight data was recorded while this AVM unit was installed on the airplane.

**HAP 048-053, 107-999; HAP 001-013, 015-026, 028-047, 054, 101-106 POST SB 737-77-1069**

SUBTASK 77-31-03-740-001-F00

- (8) Erase the memory of the AAVM using the GSS (TASK 77-31-00-970-805-F00):

**HAP ALL**

SUBTASK 77-31-03-010-003-F00

- (9) Close this access panel:

<u>Number</u>	<u>Name/Location</u>
117A	Electronic Equipment Access Door

————— **END OF TASK** —————

EFFECTIVITY  
HAP ALL

**77-31-03**

Page 408  
Feb 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

FAN FRAME COMPRESSOR CASE (FFCC) VIBRATION SENSOR - REMOVAL/INSTALLATION**1. General**

A. This procedure has two tasks:

- (1) The removal of the fan frame compressor case (FFCC) vibration sensor
- (2) The installation of the fan frame compressor case (FFCC) vibration sensor.

**TASK 77-31-04-000-801-F00**

**2. FFCC Vibration Sensor Removal**

(Figure 401)

A. General

- (1) This task is the removal procedure for the fan frame compressor case vibration sensor (referred to as the FFCC vibration sensor).
- (2) The FFCC vibration sensor is installed on the aft face of the fan frame at the 3:00 o'clock position.

B. References

Reference	Title
70-10-02-910-801-F00	General Precautions During the Removal and Installation of Engine Components (P/B 201)
78-31-00-010-801-F00	Open the Thrust Reverser (Selection) (P/B 201)

C. Location Zones

Zone	Area
411	Engine 1 - Engine
421	Engine 2 - Engine

D. Prepare for the Removal

SUBTASK 77-31-04-860-001-F00

- (1) For Engine 1, open these circuit breakers and install safety tags:

CAPT Electrical System Panel, P18-2

Row	Col	Number	Name
A	4	C01390	ENGINE 1 ALTN PWR CHAN B
A	5	C01314	ENGINE 1 ALTN PWR CHAN A

SUBTASK 77-31-04-860-002-F00

- (2) For Engine 2, open these circuit breakers and install safety tags:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
D	7	C01391	ENGINE 2 ALTN PWR CHAN B
D	8	C01315	ENGINE 2 ALTN PWR CHAN A

EFFECTIVITY  
HAP ALL

D633A101-HAP

# 77-31-04

Page 401  
Oct 10/2003

**AIRCRAFT MAINTENANCE MANUAL**

SUBTASK 77-31-04-010-001-F00

**WARNING:** DO THESE SPECIFIED TASKS IN THE CORRECT SEQUENCE BEFORE YOU OPEN THE THRUST REVERSER: RETRACT THE LEADING EDGE, DO THE DEACTIVATION OF THE LEADING EDGE AND THE THRUST REVERSER (FOR GROUND MAINTENANCE), AND OPEN THE FAN COWL PANELS. IF YOU DO NOT OBEY THE ABOVE SEQUENCE, INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT CAN OCCUR.

- (3) For the right thrust reverser, do this task: Open the Thrust Reverser (Selection), TASK 78-31-00-010-801-F00.

## E. FFCC Vibration Sensor Removal

SUBTASK 77-31-04-020-001-F00

- (1) Do these steps to remove the FFCC vibration sensor [2]:
- (a) Disconnect the electrical connector, DP1101 [3] from the FFCC vibration sensor receptacle.
  - (b) Remove the two bolts [1] to disconnect the FFCC vibration sensor [2] from the aft face of the fan frame.
  - (c) Remove the FFCC vibration sensor [2].
  - (d) Install protective covers on the FFCC vibration sensor receptacle and the electrical connector, DP1101 [3] (TASK 70-10-02-910-801-F00).


————— **END OF TASK** —————

EFFECTIVITY  
HAP ALL

D633A101-HAP

**77-31-04**Page 402  
Jun 10/2005



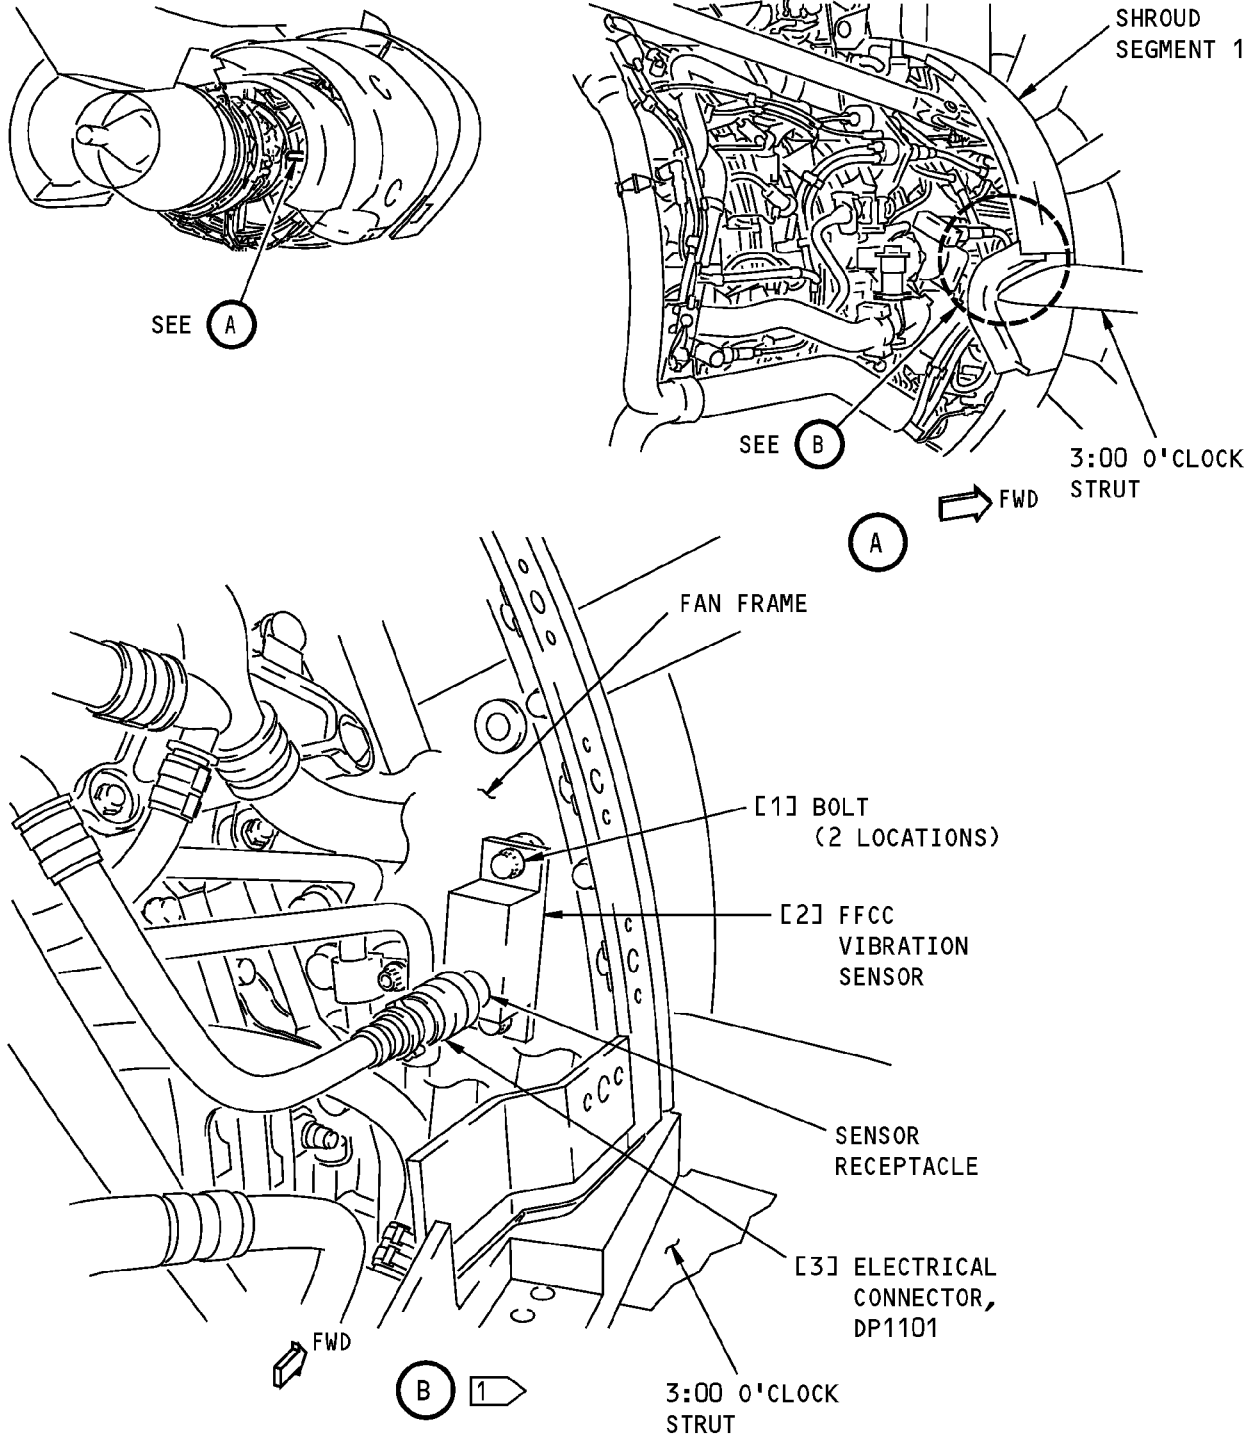

1 SHROUD SEGMENT  
1 SHOWN REMOVED

**Fan Frame Compressor Case (FFCC) Vibration Sensor Installation**  
Figure 401/77-31-04-990-801-F00

EFFECTIVITY  
HAP ALL

**77-31-04**

## AIRCRAFT MAINTENANCE MANUAL

## TASK 77-31-04-400-801-F00

3. FFCC Vibration Sensor Installation

(Figure 401)

## A. General

- (1) This task is the installation procedure for the fan frame compressor case vibration sensor (referred to as the FFCC vibration sensor).

## B. References

Reference	Title
70-10-02-910-801-F00	General Precautions During the Removal and Installation of Engine Components (P/B 201)
71-00-00-800-811-F00	Power Plant Test Reference Table (P/B 501)
78-31-00-010-804-F00	Close the Thrust Reverser (Selection) (P/B 201)

## C. Consumable Materials

Reference	Description	Specification
B00130	Alcohol - Isopropyl	TT-I-735
D00601 [CP2101]	Grease - Graphite, High Temperature	SAE AMS 2518
G00034	Cotton Wiper - Process Cleaning Absorbent Wiper (Cheesecloth, Gauze)	BMS15-5

## D. Expendables/Parts

AMM Item	Description	AIPC Reference	AIPC Effectivity
2	Sensor	77-31-04-01-015	HAP ALL

## E. Location Zones

Zone	Area
411	Engine 1 - Engine
421	Engine 2 - Engine

## F. Prepare for the Installation

SUBTASK 77-31-04-840-001-F00

- (1) Do these steps to prepare the FFCC vibration sensor [2] for the installation (TASK 70-10-02-910-801-F00):
- Remove the protective covers from the FFCC vibration sensor receptacle and from the electrical connector, DP1101 [3].
  - Clean the flanges on the FFCC vibration sensor [2] and the fan frame with alcohol, B00130 and a cotton wiper, G00034.
  - Make sure that all the flanges on the FFCC vibration sensor [2] and the fan frame are clean and in good condition.

## G. FFCC Vibration Sensor Installation

SUBTASK 77-31-04-420-001-F00

- (1) Do these steps to install the FFCC vibration sensor [2]:
- Lubricate the threads of the two bolts [1] with grease, D00601 [CP2101].
  - Put the FFCC vibration sensor [2] in its position.
  - Install the two bolts [1] to attach the FFCC Vibration Sensor [2] to the aft face of the fan frame.

EFFECTIVITY
HAP ALL

**77-31-04**Page 404  
Jun 15/2009

D633A101-HAP

## AIRCRAFT MAINTENANCE MANUAL

- 1) Tighten the bolts [1] to 98-110 pound-inches (11-12.5 Newton meters).

SUBTASK 77-31-04-420-002-F00

- (2) Connect the electrical connector, DP1101 [3] to the FFCC vibration sensor receptacle.

H. Put the Airplane Back to Its Usual Condition

SUBTASK 77-31-04-410-001-F00

**WARNING:** OBEY THE INSTRUCTIONS IN THE PROCEDURE TO CLOSE THE THRUST REVERSER. IF YOU DO NOT OBEY THE INSTRUCTIONS, INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT CAN OCCUR.

- (1) Do this task: Close the Thrust Reverser (Selection), TASK 78-31-00-010-804-F00.

SUBTASK 77-31-04-860-003-F00

- (2) For Engine 1, remove the safety tags and close these circuit breakers:

CAPT Electrical System Panel, P18-2

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
A	4	C01390	ENGINE 1 ALTN PWR CHAN B
A	5	C01314	ENGINE 1 ALTN PWR CHAN A

SUBTASK 77-31-04-860-004-F00

- (3) For Engine 2, remove the safety tags and close these circuit breakers:

F/O Electrical System Panel, P6-2

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
D	7	C01391	ENGINE 2 ALTN PWR CHAN B
D	8	C01315	ENGINE 2 ALTN PWR CHAN A

I. FFCC Vibration Sensor Installation Test

SUBTASK 77-31-04-800-001-F00

- (1) Do the tests that are listed in the Power Plant Test Reference Table (TASK 71-00-00-800-811-F00).

————— **END OF TASK** —————

EFFECTIVITY  
HAP ALL

D633A101-HAP

**77-31-04**

Page 405  
Feb 15/2009

## AIRCRAFT MAINTENANCE MANUAL

NO. 1 BEARING VIBRATION SENSOR - MAINTENANCE PRACTICES**1. General**

- A. The deactivation of the No. 1 Bearing Vibration Sensor
- B. The activation of the No. 1 Bearing Vibration Sensor.

**TASK 77-31-05-040-801-F00****2. No. 1 Bearing Vibration Sensor Deactivation**

## A. General

- (1) This task is used for deactivation of the No. 1 bearing (NOB) vibration sensor (referred to as the NOB vibration sensor).
- (2) The steps that follow are the effects that a deactivated NOB vibration sensor has on the airborne vibration monitoring (AVM) system for the applicable engine:
  - (a) The on-wing fan trim balance feature of the AVM signal conditioner will not function correctly.
  - (b) The computed balance solution will not be correct.
  - (c) The fan imbalance data will not be stored in the AVM signal conditioner.
  - (d) The flight history data for the fan and high pressure compressor (HPC) will show 0.0 scaler units, regardless of the actual fan and HPC vibration.
- (3) Use this task for flight dispatch.

## B. References

Reference	Title
77-31-00-710-801-F00	Airborne Vibration Monitoring (AVM) System - Operational Test (P/B 501)

## C. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right

## D. Access Panels

Number	Name/Location
821	Forward Cargo Door

## E. Procedure

SUBTASK 77-31-05-860-001-F00

- (1) Open this circuit breaker and install safety tag:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
A	2	C01076	ENGINE VIB MON

SUBTASK 77-31-05-010-001-F00

- (2) Open this access panel:

Number	Name/Location
821	Forward Cargo Door

EFFECTIVITY
HAP ALL

**77-31-05**Page 201  
Oct 10/2003

D633A101-HAP

**737-600/700/800/900**  
**AIRCRAFT MAINTENANCE MANUAL**

SUBTASK 77-31-05-040-001-F00

(3) Do these steps to deactivate the NOB vibration sensor for engine 1:

- (a) Remove the forward bulkhead cargo liner in the forward cargo bay.
- (b) Find the bracket, AE0302A, at the rear of the E3-2 electronic equipment rack.
- (c) Disconnect the electrical connector, D40594P, from the bracket, AE0302A.

NOTE: The electrical connector, D40594P, is attached to the bracket, AE0302A, at position 16.

- (d) Remove the pins A3, B3 and A4 from the electrical connector, D40594P (two NOB sensor wires and shield).
- (e) Cap and stow the wires.
- (f) Connect the electrical connector, D40594P, to the bracket, AE0302A.
- (g) Install the forward bulkhead cargo liner in the forward cargo bay.

SUBTASK 77-31-05-040-002-F00

(4) Do these steps to deactivate the NOB vibration sensor for engine 2:

- (a) Remove the forward bulkhead cargo liner in the forward cargo bay.
- (b) Find the bracket, AE0302A, at the rear of the E3-2 electronic equipment rack.
- (c) Disconnect the electrical connector, D43080P, from the bracket, AE0302A.

NOTE: The electrical connector, D43080P, is attached to the bracket, AE0302A, at position 54.

- (d) Remove the pins B8, B9 and B10 from the electrical connector, D43080P (two NOB sensor wires and shield).
- (e) Cap and stow the wires.
- (f) Connect the electrical connector, D43080P, to the bracket, AE0302A.
- (g) Install the forward bulkhead cargo liner in the forward cargo bay.

SUBTASK 77-31-05-860-002-F00

(5) Remove the safety tag and close this circuit breaker:

F/O Electrical System Panel, P6-2

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
A	2	C01076	ENGINE VIB MON

SUBTASK 77-31-05-010-002-F00

(6) Close this access panel:

<u>Number</u>	<u>Name/Location</u>
821	Forward Cargo Door

SUBTASK 77-31-05-710-001-F00

(7) Do this task: Airborne Vibration Monitoring (AVM) System - Operational Test, TASK 77-31-00-710-801-F00.

————— **END OF TASK** —————

EFFECTIVITY  
HAP ALL

D633A101-HAP

# 77-31-05

Page 202  
Oct 10/2003

## AIRCRAFT MAINTENANCE MANUAL

## TASK 77-31-05-440-801-F00

3. Number One Bearing Vibration Sensor Activation

## A. References

Reference	Title
77-31-00-710-801-F00	Airborne Vibration Monitoring (AVM) System - Operational Test (P/B 501)

## B. Location Zones

Zone	Area
121	Forward Cargo Compartment - Left
122	Forward Cargo Compartment - Right

## C. Access Panels

Number	Name/Location
821	Forward Cargo Door

## D. Procedure

SUBTASK 77-31-05-860-003-F00

- (1) Open this circuit breaker and install safety tag:

F/O Electrical System Panel, P6-2

Row	Col	Number	Name
A	2	C01076	ENGINE VIB MON

SUBTASK 77-31-05-010-003-F00

- (2) Open this access panel:

Number	Name/Location
821	Forward Cargo Door

SUBTASK 77-31-05-040-003-F00

- (3) Do these steps to activate the NOB vibration sensor for engine 1:

- (a) Remove the forward bulkhead cargo liner in the forward cargo bay.
- (b) Find the bracket, AE0302A, at the rear of the E3-2 electronic equipment rack.
- (c) Disconnect the electrical connector, D40594P, from the bracket, AE0302A.

**NOTE:** The electrical connector, D40594P, is attached to the bracket, AE0302A, at position 16.

- (d) Remove the caps and install the wires.
- (e) Install the pins A3, B3 and A4 in the electrical connector, D40594P (two NOB vibration sensor wires and shield).
- (f) Connect the electrical connector, D40594P, to the bracket, AE0302A.
- (g) Install the forward bulkhead cargo liner in the forward cargo bay.

SUBTASK 77-31-05-040-004-F00

- (4) Do these steps to activate the NOB vibration sensor for engine 2:

- (a) Remove the forward bulkhead cargo liner in the forward cargo bay.
- (b) Find the bracket, AE0302A, at the rear of the E3-2 electronic equipment rack.

EFFECTIVITY  
HAP ALL

D633A101-HAP

77-31-05

Page 203  
Oct 10/2003

## AIRCRAFT MAINTENANCE MANUAL

- (c) Disconnect the electrical connector, D43080P, from the bracket, AE0302A.

NOTE: The electrical connector, D43080P, is attached to the bracket, AE0302A, at position 54.

- (d) Remove the caps and install the wires.
- (e) Install the pins B8, B9 and B10 in the electrical connector, D43080P (two NOB vibration sensor wires and shield).
- (f) Connect the electrical connector, D43080P, to the bracket, AE0302A.
- (g) Install the forward bulkhead cargo liner in the forward cargo bay.

SUBTASK 77-31-05-860-004-F00

- (5) Remove the safety tag and close this circuit breaker:

F/O Electrical System Panel, P6-2

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
A	2	C01076	ENGINE VIB MON

SUBTASK 77-31-05-010-004-F00

- (6) Close this access panel:

<u>Number</u>	<u>Name/Location</u>
821	Forward Cargo Door

SUBTASK 77-31-05-710-002-F00

- (7) Do this task: Airborne Vibration Monitoring (AVM) System - Operational Test, TASK 77-31-00-710-801-F00.

————— END OF TASK —————

EFFECTIVITY  
HAP ALL

D633A101-HAP

**77-31-05**

Page 204  
Oct 10/2003