

**Test Lab Co.
Lab Copy
DO NOT SELL**

INSTRUCTION MANUAL
MODEL 849TA



Invertron[®] AC POWER EQUIPMENT

**California Instruments
Corporation**

9025 Balboa Avenue, San Diego, CA 92123-1509

**(619) 279-8620
FAX (619) 279-8139**

(800) 4-AC-POWER



Revision D
November 1994

Copyright © 1985, 1986, 1988, 1989
1994 by California Instruments.
All rights reserved

P/N 4849-960

INSTRUCTION MANUAL
MODEL 849TA

Invertron®

849TA POWER CONTROLLER

TABLE OF CONTENTS

<u>Section</u>		<u>Page</u>
I	GENERAL DESCRIPTION	
1.1	INTRODUCTION	5
1.2	DESCRIPTION	5
1.3	SPECIFICATIONS	7
1.4	INSTRUMENT IDENTIFICATION	11
1.4.1	OPTIONS	12
1.5	ACCESSORY EQUIPMENT	12
II	INSTALLATION	
2.1	GENERAL	14
2.2	UNPACKING	14
2.3	POWER REQUIREMENTS	14
2.4	FUSE REQUIREMENTS	14
2.5	INSTALLATION	15
2.6	STANDARD OPERATING MODES AND OPTIONS	15
2.6.1	WAVEFORM	15
2.6.2	VOLTAGE RANGE	16
2.6.3	FREQUENCY LIMITS	18
2.6.4	CURRENT LIMITS	18
2.6.5	PHASE INITIALIZATION	18
2.6.6	EXTERNAL SYNC	18
2.6.6.1	EXTERNAL SYNC. INPUT	19
2.6.8	EXTERNAL CLOCK	19
2.7	POWER SOURCE INTERCONNECTION	20
2.8	INTERFACE CONNECTIONS	22
2.9	AMPLITUDE RANGE OPTIONS	22
2.10	MASTER/SLAVE/CURRENT LIMIT OPTIONS	23
2.11	ACCEPTANCE TEST	23
III	OPERATION	
3.1	GENERAL	26
3.2	DISPLAY	26
3.3	KEYBOARD	26
3.4	ERROR MESSAGES	26
3.4.1	RANGE ERROR MESSAGE	26
3.4.2	SYNTAX ERROR MESSAGE	30
3.4.3	SOURCE FAULT MESSAGE	30

849TA POWER CONTROLLER
TABLE OF CONTENTS

<u>Section</u>	<u>Page</u>
3.5 LOCAL OPERATION	30
3.5.1 MENU SCREEN.	30
3.5.2 PARAMETER SCREENS.	31
3.5.2.1 SYNCHRONIZE SCREEN (SNC=01)	34
3.5.2.2 CLOCK SCREEN (CLK=02)	38
3.5.2.3 WAVEFORM SCREEN (WVF=03)	38
3.5.2.4 RANGE SCREEN (RNG=04)	38
3.5.2.5 AMPLITUDE SCREEN (AMP=05)	39
3.5.2.6 FREQUENCY SCREEN (FRQ=06)	39
3.5.2.7 PHASE SCREEN (PH=07)	39
3.5.2.8 CURRENT LIMIT SCREENS	40
3.5.2.9 RAMP SCREEN (RMP=09)	40
3.5.2.9.1 RAMP A SCREEN (RMP A=09)	40
3.5.2.9.2 RAMP B SCREEN (RMP B=10)	42
3.5.2.10 ELAPSED TIME SCREEN (ELT=11)	43
3.5.3 AUXILIARY SCREENS.	43
3.5.3.1 CALIBRATION SCREEN (CAL=12)	45
3.5.3.2 CONFIGURATION SCREEN (CFG=13)	45
3.5.3.2.1 UNIT ADDRESS (LSN)	46
3.5.3.2.2 CONFIGURATION BYTE (CFB)	46
3.5.3.2.3 PHASE C INITIAL VALUE (PHZ)	47
3.5.3.3 AMPLITUDE LIMIT SCREEN (ALM=14)	47
3.5.3.3.1 RANGE PAIRS (RNG)	47
3.5.3.3.2 LOW FREQUENCY LIMIT (LLM)	47
3.5.3.3.3 HIGH FREQUENCY LIMIT (HLM)	48
3.5.3.4 FREQUENCY LIMIT SCREEN (FLM=15)	48
3.5.3.4.1 INITIAL FREQUENCY (FRQ)	48
3.5.3.4.2 LOW FREQUENCY LIMIT (LLM)	48
3.5.3.4.3 HIGH FREQUENCY LIMIT (HLM)	50
3.5.4 SPECIAL PURPOSE KEYS	50
3.5.4.1 REG (REGISTER) KEY.	50
3.5.4.2 REC (RECALL) KEY.	50
3.5.4.3 CLR/SRQ (CLEAR/SERVICE REQUEST)	51
3.5.4.4 SIMULTANEOUS PARAMETER ENTRY.	52
3.6 REMOTE OPERATION.	52
3.6.1 UNIT ADDRESS	54
3.6.2 MESSAGE FORMAT	56
3.6.2.1 PROGRAM HEADERS	56
3.6.2.1.1 AMPLITUDE (AMP)	59
3.6.2.1.2 CALIBRATE (CAL)	59
3.6.2.1.3 CLOCK (CLK)	60
3.6.2.1.4 CURRENT LIMIT (CRL)	60
3.6.2.1.5 DELAY (DLY)	61
3.6.2.1.6 FREQUENCY (FRQ)	61
3.6.2.1.7 PHASE (PHZ)	61
3.6.2.1.8 REGISTER (REG)	62
3.6.2.1.9 RECALL (REC)	62
3.6.2.1.10 RANGE (RNG)	62
3.6.2.1.11 SYNCHRONIZE (SNC)	62

849TA POWER CONTROLLER
TABLE OF CONTENTS

<u>Section</u>	<u>Page</u>
3.6.2.1.12 SERVICE REQUEST (SRQ)	63
3.6.2.1.13 STEP (STP)	63
3.6.2.1.14 TALK (TLK)	63
3.6.2.1.15 TRIGGER (TRG)	65
3.6.2.1.16 VALUE (VAL)	65
3.6.2.1.17 WAVEFORM (WVF)	67
3.6.2.2 NUMERIC DATA FIELD	67
3.6.2.2.1 UNSIGNED VALUE WITH DECIMAL POINT	67
3.6.2.2.2 UNSIGNED VALUE WITH DECIMAL POINT AND EXPONENT	68
3.6.2.2.3 SIGNED VALUE	68
3.6.2.3 MESSAGE SEPARATOR	68
3.6.2.4 DELIMITER	69
3.6.2.5 NULL CHARACTERS	69
3.6.3 SERVICE REQUEST	70
3.6.4 STATUS BYTE	70
3.6.5 TRIGGER	70
3.6.6 HEWLETT PACKARD SERIES 80 GPIB CONTROLLER PROGRAMMING	71
3.6.6.1 SERIES 80 CONTROLLER STATEMENTS	71
3.6.6.1.1 OUTPUT	71
3.6.6.1.2 TRIGGER	74
3.6.6.1.3 SERVICE REQUEST	74
 IV ADJUSTMENT PROCEDURE	
4.1 GENERAL	76
4.2 RECOMMENDED TEST EQUIPMENT	76
4.3 PRELIMINARY STEPS	76
4.4 FREQUENCY ADJUSTMENT	76
4.5 OPEN SENSE ADJUSTMENT	77
4.6 FULL SCALE ADJUSTMENT	77
4.7 REMOTE CALIBRATION	78

LIST OF ILLUSTRATIONS

<u>Figure</u>		<u>Page</u>
2-1A	Polyphase Power Source System Connections Using Individual Units	21
2-1B	Polyphase Power Source System Connections Using Single Unit.	21
2-2	Performance Error Limits	24
3-1	Keyboard	25
3-2	Error Messages	27
3-3	Menu Screen Sequence	32
3-4	Menu Screens	33
3-5	Parameter Screens.	35
3-6	Parameter Screen Sequence.	37
3-7	Auxiliary Screens.	44
4-1	Calibration Flow Diagram	79
4-2	Calibration Subroutine	82

LIST OF TABLES

<u>Table</u>		<u>Page</u>
1-1	Specifications	7
1-2	Option Modifications	13
2-1	Voltage Range Options.	17
2-2	Jumper Configuration	20
3-1	Keyboard Key Descriptions.	28
3-2	Range Pair Codes	49
3-3	Commonly Used GPIB Abbreviations	53
3-4	Unit Address Group	55
3-5	Program Headers.	57
3-6	TLK Arguments.	64
3-7	Talk String Response	66
3-8	Null (Unexecutable) Characters	69
3-9	Status Byte Values	72
3-10	HP Series 80 Controller Statements	73

SECTION 1 - GENERAL DESCRIPTION

1.1 INTRODUCTION

This manual contains information pertaining to the installation, operation and calibration of California Instruments' Model 849TA AC Power Controller.

1.2 DESCRIPTION

The Model 849TA AC Power Controller is a frequency, amplitude and phase controller designed to plug into all California Instruments' T Series AC power sources. The frequency, amplitude and phase of the power source output may be locally controlled using a keyboard on the front of the controller, or remotely controlled through its IEEE-488 interface.

The controller output is a variable frequency, variable amplitude, variable phase AC voltage. It provides the three-phase input signal for the associated power source where it is amplified to produce the high-power, multi-phase output. Sense inputs for each of the three phases assures that the voltage at the remote sense point equals the programmed value. If the programmed voltage value cannot be maintained within specified limits, the controller reduces the power source output then displays an error message on its control panel. The displayed message indicates which of the phases has not been maintained at the programmed value. Microprocessor-controlled, digital logic is employed in the controller for frequency generation. Its sine wave outputs are produced by a precision digital-to-analog converter. Frequency accuracy is maintained by a quartz crystal whose temperature stability is ± 5 parts per million per degree celsius.

The Model 849TA AC Power Controller provides many features.

These features include:

- High-reliability CMOS design uses less than 2 watts of power.
- More than 20 programmable functions.
- Multi-page menu screen and 17 parameter screens for total system programming and monitoring.
- Independent control of amplitude, phase angle, frequency, voltage range and current limit on multi-phase systems.

- Master/Slave configurations for applications requiring more than 3 phases.
- 4 decades of frequency output with resolution to 0.01 Hz.
- Automatic frequency range changing.
- Amplitude, frequency, phase angle and current limit may be ramped incrementally via program control. Start, finish, step size and step duration are independently programmable.
- Sine or square wave output independently selectable on each phase.
- Programmable voltage ranges.
- Simple IEEE-488 software using Abbreviated Plain English (APE).
- Alphanumeric prompting display is user-friendly; no reference codes are required.
- 32 character alphanumeric display.
- 20 key keypad for complete front panel control.
- Complete programming (including IEEE-488 bus address and calibration from the front panel) - no inside adjustments are needed.
- Non-volatile memory for instant set-up to pre-programmed test parameters.
- Non-volatile and volatile registers for storage of programmable parameters.
- System diagnostics with error messages on front panel display.
- Internal clock tracks total elapsed time.
- Internal counter tracks the frequency of an external signal from 45 Hz to 450 Hz to provide a low distortion output.

1.3 SPECIFICATIONS

Operating specifications for the Model 849TA are shown in Table 1-1.

SPECIFICATIONS

MODEL 849TA AC POWER CONTROLLER

TABLE 1-1

Amplitude Program (Independent or simultaneous program)
(Sinewave or Squarewave)

VOLTAGE RANGES:	135.0/270.0 is standard. Others require component value and software changes)
VOLTAGE ACCURACY: (25 degrees C \pm 1 degree C) (Based on Full-Wave Avg)	\pm 0.1% of full scale from default voltage to full scale (\pm 0.2% above 5 KHz)
TEMPERATURE COEFFICIENT:	\pm 0.01% of full scale per degree C average from 25 degrees C.
LOAD REGULATION:	\pm 0.01% of full scale no-load to full load.
LINE REGULATION:	\pm 0.01% of full scale for \pm 10% line change
LONG TERM STABILITY: (25 degrees C \pm 5 degrees C At Constant Line and Load)	\pm 0.02% of full scale per 1000 hrs.
DISTORTION:	Less than 1% from 5% of full scale to full scale.
DEFAULT VOLTAGE:	5.0 Volts for 135V or 270V ranges. 5.0 Volts above 40.0/80.0 (LLM/HLM) and .5 volts above 4.00/8.00 (LLM/HLM). 2.0 Volts below 40.0/80.0 (LLM/HLM) and .2 volts below 4.00/8.00 (LLM/HLM).

FREQUENCY PROGRAM

FREQUENCY RANGE: Four decade resolution from 45.00
(or other low limit) to 9999 Hz.
(or other high limit)

FREQUENCY RESOLUTION: 0.01 Hz from 45.00 to 99.90 Hz
0.1 Hz from 100.0 to 999.9 Hz
1.0 Hz from 1000 to 9999 Hz

FREQUENCY ACCURACY: $\pm 0.001\%$ of programmed value
(25 degrees C ± 1 degree C)

TEMPERATURE COEFFICIENT: ± 5 ppm/degrees C from 25 degrees C

LONG TERM STABILITY: ± 15 PPM of Programmed Value per
(25 degrees C ± 1 degree C) Year.

DEFAULT (Initial Value): ANY

PHASE ANGLE: 0 to ± 999.9 degrees in .1
(Phase B and C relative increments
to A)

DEFAULT (Phase C) ANY, but 0 defines Single Phase
Any value except 0 and 120 defines
Two Phase
120 defines Three Phase

PHASE ACCURACY: ± 1 degree; add 0.5 degrees per KHz
above 2 KHz

DISPLAY:

DATA: Two lines, 16 characters long, of
alphanumeric information

SCREENS:

ALM	RNG,LLM		
	HLM		
AMP	A,B,C		
PHZ	A,B,C	ELT	H,M,S
CRL	A,B,C	CFG	LSN,CFB, PHZ
FLM	FRQ,LLM, HLM	MNU	
FRQ			
WVF	SNW,SQW		
RNG	A,B,C		
SNC	INT,EXT		
CLK	INT,EXT		
CAL	A,B,C		

LOCAL CONTROL:

20-key membrane keyboard

REMOTE PROGRAMMING:

IEEE-488-1978 SUBSETS: SH1, AH1,
T6, L3, SR1, RL2, DC1, DT1

IEEE-728-1982 OPERATING CODES AND
FORMATS:

NUMERIC REPRESENTATION; NR1,
NR2 OR NR3.
HEADERS; HR1 OR HR2 (UPPER OR
LOWER CASE)
MESSAGE SEPARATORS; SR1

DATA TRANSFER RATE:

200K bytes/second using DMA methods

DMA BUFFER SIZE:

128 bytes

END OF STRING:

Standard: (CR), (LF) or (END)
Field Optional: (LF) or (END)
Field Optional: (CR) or (END)

ERROR MESSAGES (Status Byte):

Data Display message and status
byte.

STATUS BYTE (Decimal):

FAULT

64	Phase A
65	Phase B
66	Phase A,B
67	Phase C
68	Phase A,C
69	Phase B,C
70	Phase A,B,C
71	Current Limit
72	Current Limit A
73	Current Limit B
74	Current Limit A,B
75	Current Limit C
76	Current Limit A,C
77	Current Limit C,B
78	Current Limit A,B,C
79	
80	Keyboard Entry 0 SRQ
81	Keyboard Entry 1 SRQ
82	Keyboard Entry 2 SRQ
83	Keyboard Entry 3 SRQ
84	Keyboard Entry 4 SRQ
85	Keyboard Entry 5 SRQ
86	Keyboard Entry 6 SRQ
87	Keyboard Entry 7 SRQ

88	Keyboard Entry 8 SRQ
89	Keyboard Entry 9 SRQ
90	Amplitude Range Limit Error
91	Amplitude Range Error
92	Frequency Range Error
93	Phase Range Error
94	Current Range Error
95	Ramp Range Error
96	Program Syntax Error
97	Bus message sent with Controller in Local
98	EXT SNC Frequency Limit
99	ROM SUM Check Error
100	Exceeds DMA buffer size

PROGRAM SYNTAX:

ABBREVIATED PLAIN ENGLISH


ALM	Amplitude Limit
AMP	Amplitude
CAL	Calibrate
CFG	Configuration
CLK	Clock
CRL	Current Limit
DLY	Delay
ELT	Elapsed Time
EXT	External
FLM	Frequency Limit
FRQ	Frequency
HLM	High Limit
INT	Internal
LLM	Low Limit
MNU	Menu
PHZ	Phase
PRG	Program
REC	Recall
REG	Register
RNG	Range
SNC	Synchronize
SNW	Sine Wave
SQW	Square Wave
SRQ	Service Request
STP	Step
TLK	Talk
TRG	Trigger
VAL	Value
WVF	Waveform
#	Present Value

DATA FORMAT:

Scientific notation or explicit point

1.4 INSTRUMENTS IDENTIFICATION

The Model 849TA is identified by specifying its phase, frequency upper limit, initialization frequency, voltage range and two functional status indicators of the unit with a six digit suffix.

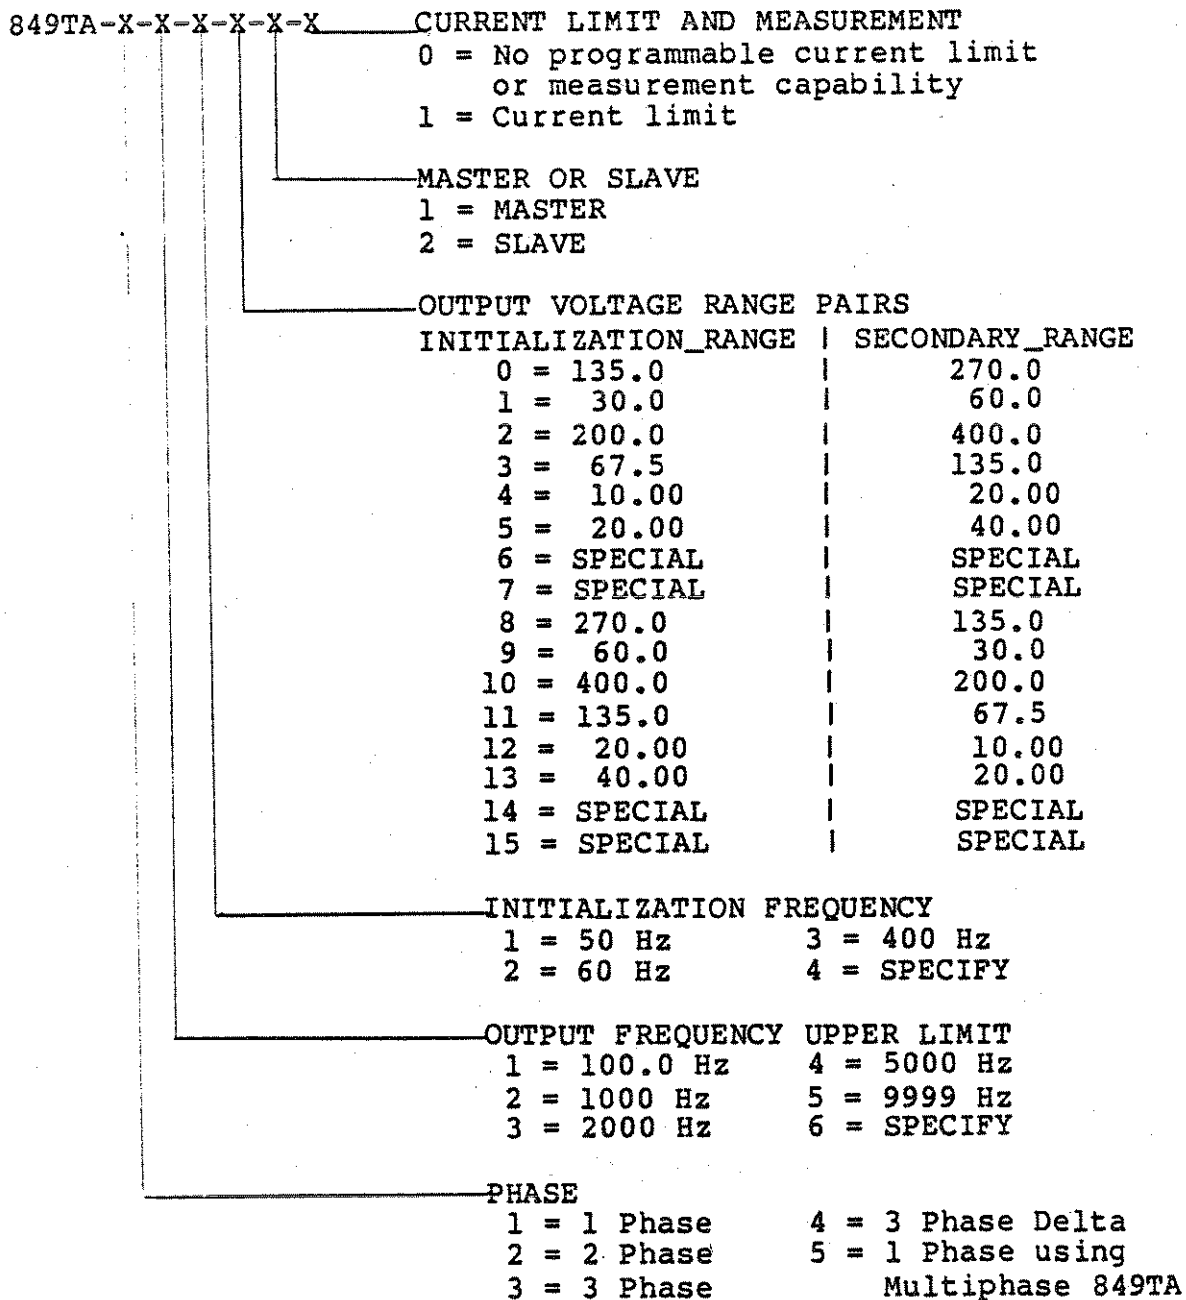

1.4.1 OPTIONS

The modifications to the Model 849TA to give the various options described by the model number are listed in Table 1-2.

1.5 ACCESSORY EQUIPMENT

An Extender Assembly, Part Number 4800-703, is available to permit test and adjustment of the Model 849TA external to the power source. An Extender Cable, Part Number 4849-203-1, is also used for the printed circuit boards.

TABLE 1-2
OPTION MODIFICATIONS

PHASE

-1-X-X-X-X	849TA-1-4-2-8-1
-2-X-X-X-X	849TA-3-4-2-8-1
-3-X-X-X-X	849TA-3-4-2-8-1
-4-X-X-X-X	849TA-3-4-2-8-1
-5-X-X-X-X	849TA-3-4-2-8-1

FREQUENCY UPPER LIMIT

-X-1-X-X-X	Set in Test	-X-4-X-X-X	Set in Test
-X-2-X-X-X	Set in Test	-X-5-X-X-X	Set in Test
-X-3-X-X-X	Set in Test	-X-6-X-X-X	Set in Test

INITIALIZATION FREQUENCY

-X-X-1-X-X	Set in Test
-X-X-2-X-X	Set in Test
-X-X-3-X-X	Set in Test
-X-X-4-X-X	Set in Test

VOLTAGE RANGE

	4849-704		4849-700 (If Used)	
	A5R28,R38	R22,R23,R24,R25	R25,R27,R28,R30	
-X-X-X-0-X	10K (STD)	CIC522 (STD)		10K (STD)
-X-X-X-1-X	44.2K	CIC522 (STD)		44.2K
-X-X-X-2-X	6.65K	CIC522 (STD)		6.65K
-X-X-X-3-X	12.1K	CIC522 (STD)		12.1K
-X-X-X-4-X	12.4K	CIC523		12.4K
-X-X-X-5-X	6.65K	CIC523		6.65K
-X-X-X-6-X				
-X-X-X-7-X				
-X-X-X-8-X	10K (STD)	CIC522 (STD)	10K (STD)	(560762)
-X-X-X-9-X	44.2K	CIC522 (STD)	44.2K	(560774)
-X-X-X-10-X	6.65K	CIC522 (STD)	6.65K	(560895)
-X-X-X-11-X	12.1K	CIC522 (STD)	12.1K	(560756)
-X-X-X-12-X	12.4K	CIC523	12.4K	(560760)
-X-X-X-13-X	6.65K	CIC523	6.65K	(560895)
-X-X-X-14-X				
-X-X-X-15-X				

MASTER/SLAVE/CURRENT LIMIT

	4849-701	4849-704
-X-X-X-X-1X	W1,W4	
-X-X-X-X-2X	W2,W3	
-X-X-X-X-X3		U4 (360441)

SECTION 2 - INSTALLATION

2.1 GENERAL

This section describes unpacking and installation requirements for the Model 849TA AC Power Controller.

2.2 UNPACKING

The Controller is shipped in a corrugated carton and supported within the carton by protective, cushioning material. If the carton has been damaged during transit, conduct a detailed inspection to determine if the Controller has also been damaged. If damage is in evidence, notify the carrier's agent immediately. Retain the Controller and the shipping carton in the same condition as received until it has been examined by the carrier's representative.

2.3 POWER REQUIREMENTS

The AC Power Controller requires 115 volts AC at 10 VA. This AC voltage is rectified, filtered and regulated to +5 volts DC at 400 MA for powering the digital circuitry and to +15 volts DC at 100 MA and -15 volts DC at 100 MA for powering the analog circuitry.

CAUTION

Voltages up to 270 volts AC are present inside Power Sources. This equipment uses potentially lethal voltages

DEATH

On contact may result if safety precautions are not observed. Do not touch any of the internal circuits when power is applied.

2.4 FUSE REQUIREMENTS

Only one fuse, F1, is contained in the Controller. It is located on the 4849-704-1 assembly and acts as a ground-fault interrupt to protect other equipment connected to the IEEE-488 bus. This fuse is fabricated from a strand of #24 11/36 wire.

2.5 INSTALLATION

CAUTION

REMOVE POWER FROM THE POWER SOURCE BEFORE INSTALLING OR REMOVING THE CONTROLLER.

The Controller consists of a mother board, and several circuit boards which plug into it and which contain the control circuits. The assembly is designed to mount in the front panel opening of the Power Source. Installation of the Controller is accomplished with the following procedure.

Verify that the control panel is properly connected to the Controller. Note the GPIB ribbon cable extending through the opening in the front panel of the Power Source. Lift the ribbon cable connector to the top of the opening and stretch the cable gently to keep it clear of the center of the opening. Engage the longest printed circuit board of the Controller (the one with gold plated card-edge fingers) into the guides behind the opening. Resistance will be encountered when the board engages the card edge connector. Push gently but firmly on the Controller to complete insertion of the circuit board in the card edge connector. Verify that the board is firmly seated in the connector.

Carefully plug the front panel assembly into the Controller mother board. Place the control panel in position over the opening and fasten its two captive screws.

2.6 STANDARD OPERATING MODES AND OPTIONS

The 849TA has the capability to operate in many different modes with a mixture of output parameters. It is necessary to ensure that these parameters are compatible with the companion power source. If the associated power sources are not compatible with the parameter that would normally be displayed on a screen, that screen will be inhibited.

2.6.1 WAVEFORM

Most standard power sources will not sustain a square wave waveform below approximately 400 Hz. Special power sources have been designed to accept a 60 Hz square wave.

Before programming a square wave below 400 Hz ensure the power source will sustain the waveform.

2.6.2 VOLTAGE RANGE

The 849TA has the capability to operate on several different voltage range pairs. The standard 849TA hardware is designed for either a 135/270 or 120/240 range pair. For other range pairs refer to Table 2-1 for the component value changes.

The voltage range pair full scale limits are set on the ALM screen. To select the ALM screen, refer to paragraphs 3.5.4 and 3.5.4.3.

The A value is the range pair code. To review the value depress the A key. The B value (LLM) is the limit for the low voltage range. The C value (HLM) is the limit for the high voltage range.

To change the limit for either range, select the B or C value and enter the new limit followed by the PRG and ENT keys.

CAUTION

Changing the parameters in the CFG,ALM and FLM screens will change the operating characteristics of the 849TA. Do not attempt to change these parameters without complete knowledge of them.

TABLE 2-1
VOLTAGE RANGE OPTIONS

RANGE PAIR	RANGE CODE	4849-704		4849-700 (IF USED)
		A5R28, R38	R22, 423, R24, R25	R25, R27, R28, R30
270.0/ 135.0	0*	10K	CIC522	10K
60.0/ 30.0	1	44.2K	CIC522	44.2K
400.0/ 200.0	2	6.65K	CIC522	6.65K
150.0/ 75.0	3*	12.1K	CIC522	12.1K
20.00/ 10.00	4	12.4K	CIC523	12.4K
40.00/ 20.00	5	6.65K	CIC523	6.65K
75/37.5	6			
SPECIAL	7			
135.0/ 270.0	8*	10K	CIC522	10K
30.0/ 60.0	9	44.2K	CIC522	44.2K
200.0/ 400.0	10	6.65K	CIC522	6.65K
75.0/ 150.0	11*	12.1K	CIC522	12.1K
10.00/ 20.00	12	12.4K	CIC523	12.4K
20.00/ 40.00	13	6.65K	CIC523	6.65K
37.5/75	14		CIC522	
SPECIAL	15			

*NOTE: Standard Configuration

2.6.3 FREQUENCY LIMITS

The upper and lower frequency limits are shown on the FLM screen. Refer to paragraphs 3.5.3 and 3.5.3.4 for access to this screen. The Low Limit (LLM) can be reviewed by depressing the B key. The High Limit (HLM) can be reviewed by depressing the C key.

After power-up the A value of the FLM screen will be the output frequency.

2.6.4 CURRENT LIMITS (Option)

The standard 849TA software supports current limit programming.

To implement current limit programming the 849TA must be used with a power source compatible with this feature. In addition, IC ASU4 must be installed on the bottom PC assembly (4849-704).

2.6.5 PHASE INITIALIZATION

In the CFG screen the C value (PHZ) is used to set the power-up phase angle of phase C. If this value is any value except a 0 or 120 the 849TA will be configured with phase A and C as a two phase system. It will ignore interrupt faults from phase B to allow operation with only two power sources.

The standard two-phase configuration is for C = 90 degrees

The three-phase delta uses only two sources with C = 60 degrees.

If the C value is "0" the 849TA will be configured as a single-phase system. With C set to 120 the 849TA will be configured for a three-phase system with three power sources and all interrupts enabled.

2.6.6 EXTERNAL SYNCHRONIZATION

The SNC screen allows the 849TA to operate in the External (EXT) SNC mode. This mode will allow the 849TA to synchronize to an external signal.

2.6.6.1 EXTERNAL SYNCHRONIZATION INPUT

When the EXT SNC mode is selected on screen 1 the 849TA will frequency lock and phase lock to an external TTL compatible signal. The external signal is applied to pins 6 (HI) and 1 (LO) of TBI on the rear panel of a single phase power source or pins 8 (HI) and 1 (LO) of a three phase power source. The signal should have a 50% duty cycle and a frequency between the Low Limit value and 450 Hz.

In the EXT SNC mode the frequency of the external signal is displayed on the FRQ screen. If this signal changes frequency at a rapid rate the 849TA will track the frequency at a faster rate while not displaying the external frequency.

NOTE

If amplitudes are to be programmed while tracking the external signal, diode A5 CR5 on the bottom PC assembly (4849-704) must be removed.

The phase of the phase A output relative to the External Synchronization input is programmed on the PHZ screen. This value is initialized at 90 degrees. When operating in this mode with a two or three phase system this value should not be programmed within 20 degrees of a zero crossing.
(ex. 20<A<160,200<A<340)

2.6.7 EXTERNAL CLOCK

The External Clock (EXT CLK) mode of operation is selected from the CLK screen. This mode allows the 849TA to operate from the Clock and Lock signals from a master 849TA. This mode of operation allows multiphase systems to be configured with up to six outputs. The slave 849TA will program its phase A output relative to phase A of the master with the A value on the PHZ screen. Phase B and C of the slave 849TA remain programmed relative to phase A of the slave.

All phases of the slave 849TA will program relative to phase A of the master if jumper A5W1 is removed and A5 W2 is added on the bottom PC assembly (4849-704).

CAUTION

Before selecting the EXT CLK mode ensure that the External Clock and Lock signals are applied to the coax connectors at the rear panel of the power source. Selecting this mode without the signals may result in damage to the power source.

Refer to Table 2-2 to configure the 849TA as a master or slave.

TABLE 2-2

849TA	JUMPER CONFIGURATION ASSEMBLY 4849-701
MASTER	W1, W4
SLAVE	W2, W3

2.7 POWER SOURCE INTERCONNECTION

The oscillator Phase A, B and C outputs are available respectively on TBI pins 3, 4 and 5 of a single phase power source. A three-phase power source has its oscillator phase A, B and C outputs on TBI pins 3, 5 and 7 respectively. The common is available at TBI pin 1 for both the single and three-phase power source. The power source signal input is available at TBI pin 2 for the single-phase power source and at TBI pins 2, 4 and 6 for the three-phase power source. Refer to Figure 2-1 for the power source connections.

All two-phase 849TA models (849TA-2-X-X-X-X and 849TA-4-X-X-X-X) use the phase A and C oscillator outputs.

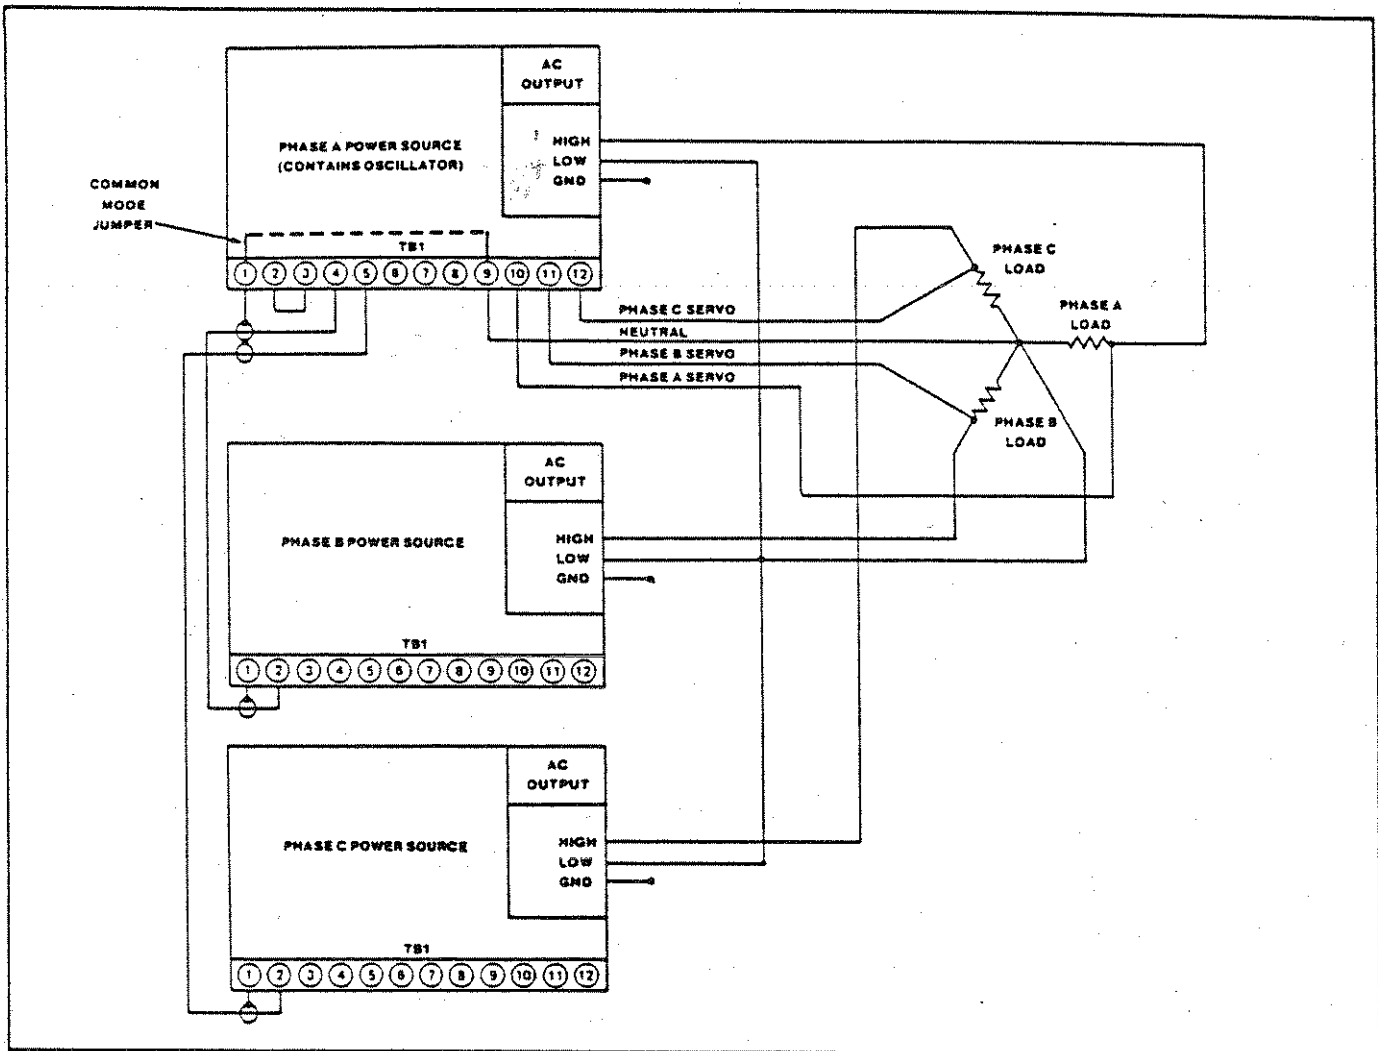


Figure 2-1A. Polyphase Power Source System Connections Using Individual Units.

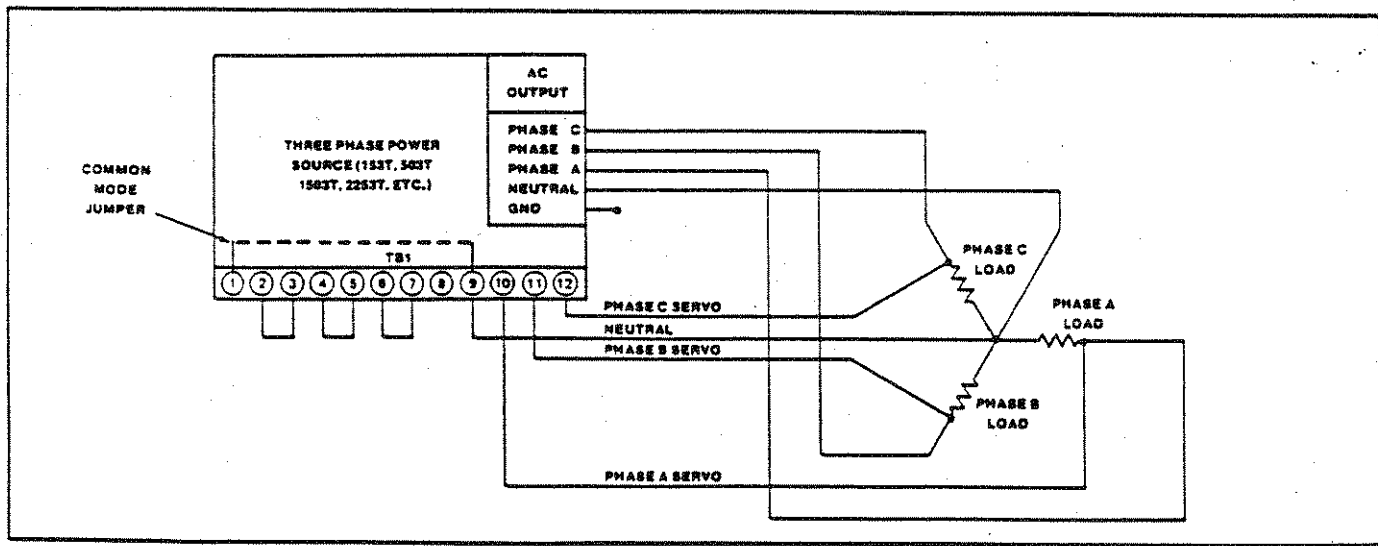


Figure 2-1B. Polyphase Power Source System Connections Using Single Unit.

CAUTION

Failure to connect the sense leads across the load or to the power source output(s) will result in an error message on the 849TA's Display and the inability to program an output voltage.

CAUTION

REMOVE POWER FROM THE POWER SOURCE BEFORE REMOVING OR INSERTING THE PLUG-IN OSCILLATOR.

The remote sense leads for the phase A, B and C must be connected to the associate power source's TBl pins 9, 10, 11, and 12 respectively. For single-phase, remote sense leads should be TBl pin 9 to output low, TBl pin 10 to output high. For two-phase or open DELTA operation, connect remote sense leads as follows:

øA Low to TBl pin 9
øA High to TBl pin 10
øC Low to TBl pin 9
øC High to TBl pin 13

For three-phase operation see Figure 2-1.

2.8 INTERFACE CONNECTIONS

The Model 849TA can be remotely controlled by an IEEE-488 bus controller. The controller must be connected to the bus connector at the rear panel of the power source. Up to 15 instruments may be controlled by a bus controller at one time.

2.9 AMPLITUDE RANGE OPTIONS

The Model 849TA provides different voltage ranges. These voltage ranges are set up at the factory according to the 849TA model number suffix (refer to paragraph 1.4) to operate from 2 volts to 400 volts. The voltage ranges and their corresponding range codes are shown in Table 2-1. Only those ranges shown by * are standard. The other ranges require different hardware and should be used with the proper power source. The ranges may be changed in the field to any of the optional non-standard voltage ranges. (See Table 2-1).

2.10 MASTER/SLAVE/CURRENT LIMIT

The Model 849TA may be used under three modes; master or slave and current limit. Each mode needs special power sources with external clock and lock coax cable. The modes are not recommended to be changed in the field.

2.11 ACCEPTANCE TEST

To conduct these tests, the 849TA must be installed into an AC Power Source. The remote sense input must be connected as shown in figure 2-1. Program any voltage and frequency combination and confirm the voltage accuracy to Figure 2-2. The voltage error for all the ranges are shown in Figure 2-2. The voltage error for both the 135 and 270 volt ranges are shown in Figure 2-2 separated by a slash (/).

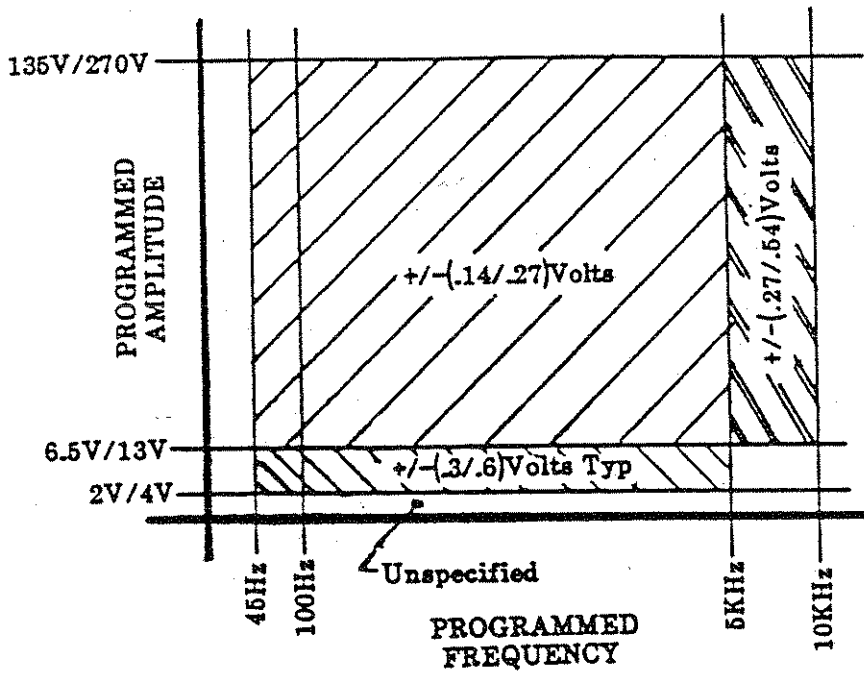


Figure 2-2
Performance Error Limits

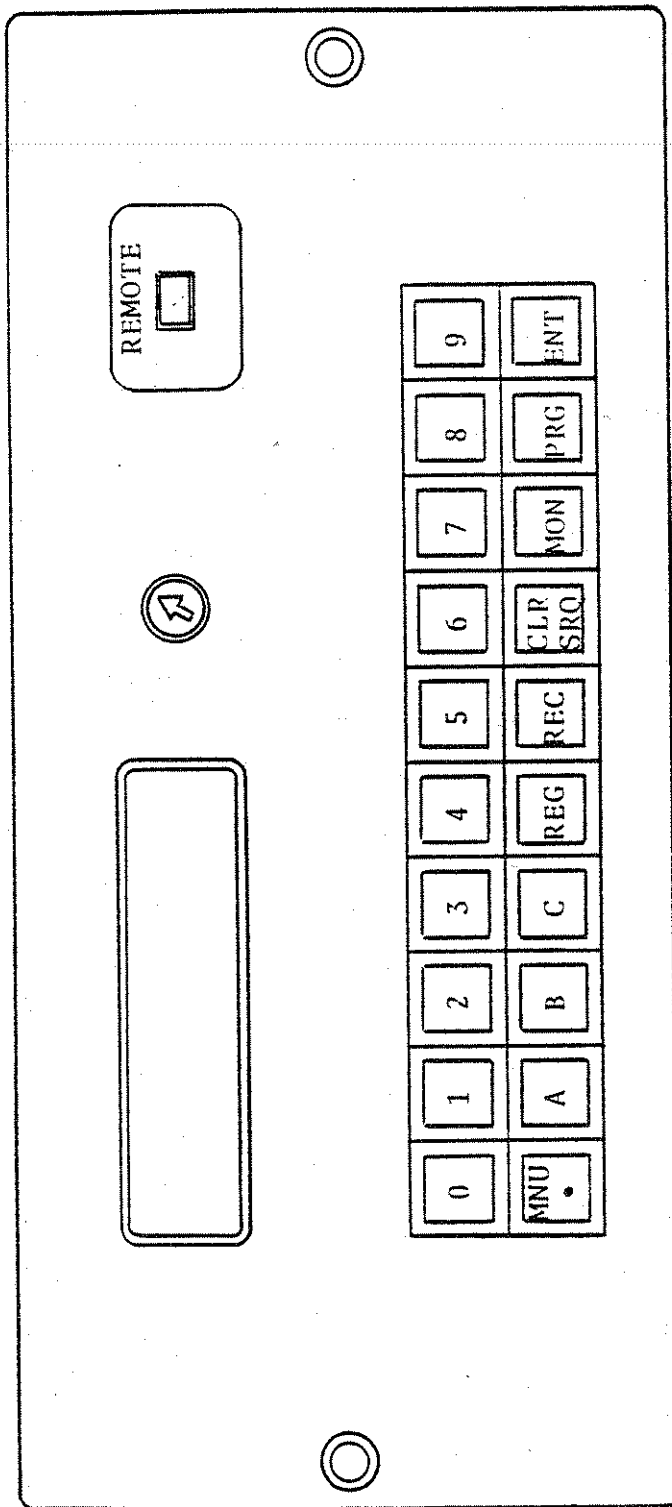


FIGURE 3-1 KEYBOARD

SECTION 3 - OPERATION

3.1 GENERAL

This section of the manual describes the operation of the Model 849TA front panel display and keyboard. The operation of the IEEE-488 interface is also explained. Several program examples using the Hewlett Packard Series 80 Controller are also shown.

3.2 DISPLAY

The display is a liquid crystal display that offers two 16 character long lines of alphanumeric information. Each display presentation (screen) shows the programmed output parameters and error messages.

3.3 KEYBOARD

All local programming is performed on a 20 key keyboard. Refer to Figure 3-1 for a pictorial of the keyboard. There are eleven number and decimal point keys five of which have double functions. There are three phase select (A,B,C) keys, one register program (REG) key, one register recall (REC) key, one menu (MNU) key, one service request/clear (SRQ/CLR) key, a program (PRG) key a monitor (MON) key and an enter (ENT) key. Table 3-1 describes the function of the twenty keyboard keys.

3.4 ERROR MESSAGES

There are three types of error messages displayed on the 849TA for range errors, syntax errors and output faults. The three types are shown in Figure 3-2. The display will identify the parameter, the output and the equivalent Status Byte value identified for the error.

3.4.1 RANGE ERROR MESSAGE

If an out-of-range value is programmed for any of the programmable parameters (AMP, RNG, FRQ, PHZ, CRL) a RANGE ERROR message display will be shown. In addition a Range Error message will be generated for any erroneous RMP parameter. The following example will generate the RANGE ERROR message shown in Figure 3-2.

AMP = 300 when programmed to the 270 RNG.

FIGURE 3-2
ERROR MESSAGES

RANGE ERROR
AMP ABC STB = 91

SYNTAX ERROR
STB = 96

SOURCE FAULT
AMP A STB = 64

EXT SNC LMT
STB = 98

RANGE ERROR
RMP B STB=95

TABLE 3-1
KEYBOARD KEY DESCRIPTIONS

KEY	SCREEN	DESCRIPTION
0 through 9 and .	AMP, FRQ, CRL, PHZ, RNG, CAL	Sets the numeric value for the output parameter identified by parameter screen. Selects status bytes 80 through 89 for keys 0 through 9. Selects registers 0 through 9.
SNW, SQW	WVF	Sets the A,B, or C output to Sine wave (SNW) or Square wave (SQW)
INT, EXT	SNC	Selects the External (EXT) sync. input or Internal (INT) operation.
INT, EXT	CLK	Selects the External (EXT) clock and lock input or Internal (INT) operation.
MNU		Selects the Menu (MNU) screens for all parameter screens. Will not show CAL, CFG, ALM, FLM or ADC screens.
A, B, C	AMP, CRL, PHZ, RNG, CAL, WVF	Selects the A, B or C out to program the parameter identified by the displayed parameter screen.
A, B, C	CFG	A (LSN) selects Listen Address, B (CFB) selects the configuration byte C (PHZ) selects phase C Initialization Phase.
A, B, C	ALM	A (RNG) selects the voltage range pair and the initial range, B (LLM) sets the value for the low range, C (HLM) sets value for the high range.
A, B, C	FLM	A (FRQ) sets the initial frequency, B (LLM) sets the low frequency limit, C (HLM) sets the high frequency limit.
A, B, C	RMP (A)	A (DLY) sets the step delay time in seconds, B (STP) sets the step size in units related to the ramp parameter, C (VAL) sets the final value.
B, C	RMP (B)	B (STP) sets the step size of the dependant parameter, C (VAL) sets the final step value for step function of dependant parameter.

TABLE 3-1 (CONT.)
KEYBOARD KEY DESCRIPTIONS

REG	Load program register
REC	Recall program register
CLR/SRQ	Generate GPIB Service Request, Clear
MON	Display current output value
PRG	Display program or present value
ENT	Enter Parameter Program (PRG) values

3.4.2 SYNTAX ERROR MESSAGE

The SYNTAX ERROR message will be generated for any non recognizable mnemonic sent on the IEEE-488 interface. The following string will generate a Syntax Error message:

F,R,4,0,0,

3.4.3 SOURCE FAULT MESSAGE

An Output Fault message will be generated in the event that the output voltage can't be maintained at the programmed value. A short on the phase A output will cause the 849TA to generate the Source Fault message in Figure 3-2.

3.5 LOCAL OPERATION

3.5.1 MENU SCREEN

After power-up or GPIB device clear (DCL), the menu #2 screen will be displayed. This screen will show the assigned numeric value for AMP, FRQ, PHZ, and CRL* as 5, 6, 7 and 8 respectively. Depressing the MNU key will cause the menu #3 screen to be displayed with RMP A, RMP B and ELT with equivalent values of 9, 10 and 11 respectively.

Depressing the MNU key a second time will cause the menu #1 screen to be displayed with SNC, CLK*, WVF and RNG equal to values 1, 2, 3 and 4 respectively.

Subsequent depressions of the MNU key will cause the cycle described above to be repeated. Refer to Figure 3-4 for all menu screen displays.

Any parameter screen (ex. FRQ) described in the menu screen will show the programmed value for that parameter and will allow that parameter to be changed while viewing the screen. To display a parameter screen, enter the screen number followed by the ENT key.

The following example illustrates the procedure to select the AMP screen:

5,ENT

*These screens will not be displayed if the 849TA and associated power sources do not have compatible hardware.

NOTE

Parameters and outputs not enabled by the Configuration of the 849TA will not be displayed in the menu screens or parameter screens.

3.5.2 PARAMETER SCREENS

To program any 849TA output parameter from the Local program mode the parameter screen must first be selected. Refer to Figure 3-5 for the parameter screens.

Any parameter screen may be selected while any other screen is displayed (except SNC, CLK or WVF) by entering the one or two digit screen number followed by depressing the ENT key.

The following example will select the ELT screen from any screen except SNC, CLK or WVF.

1,0,ENT

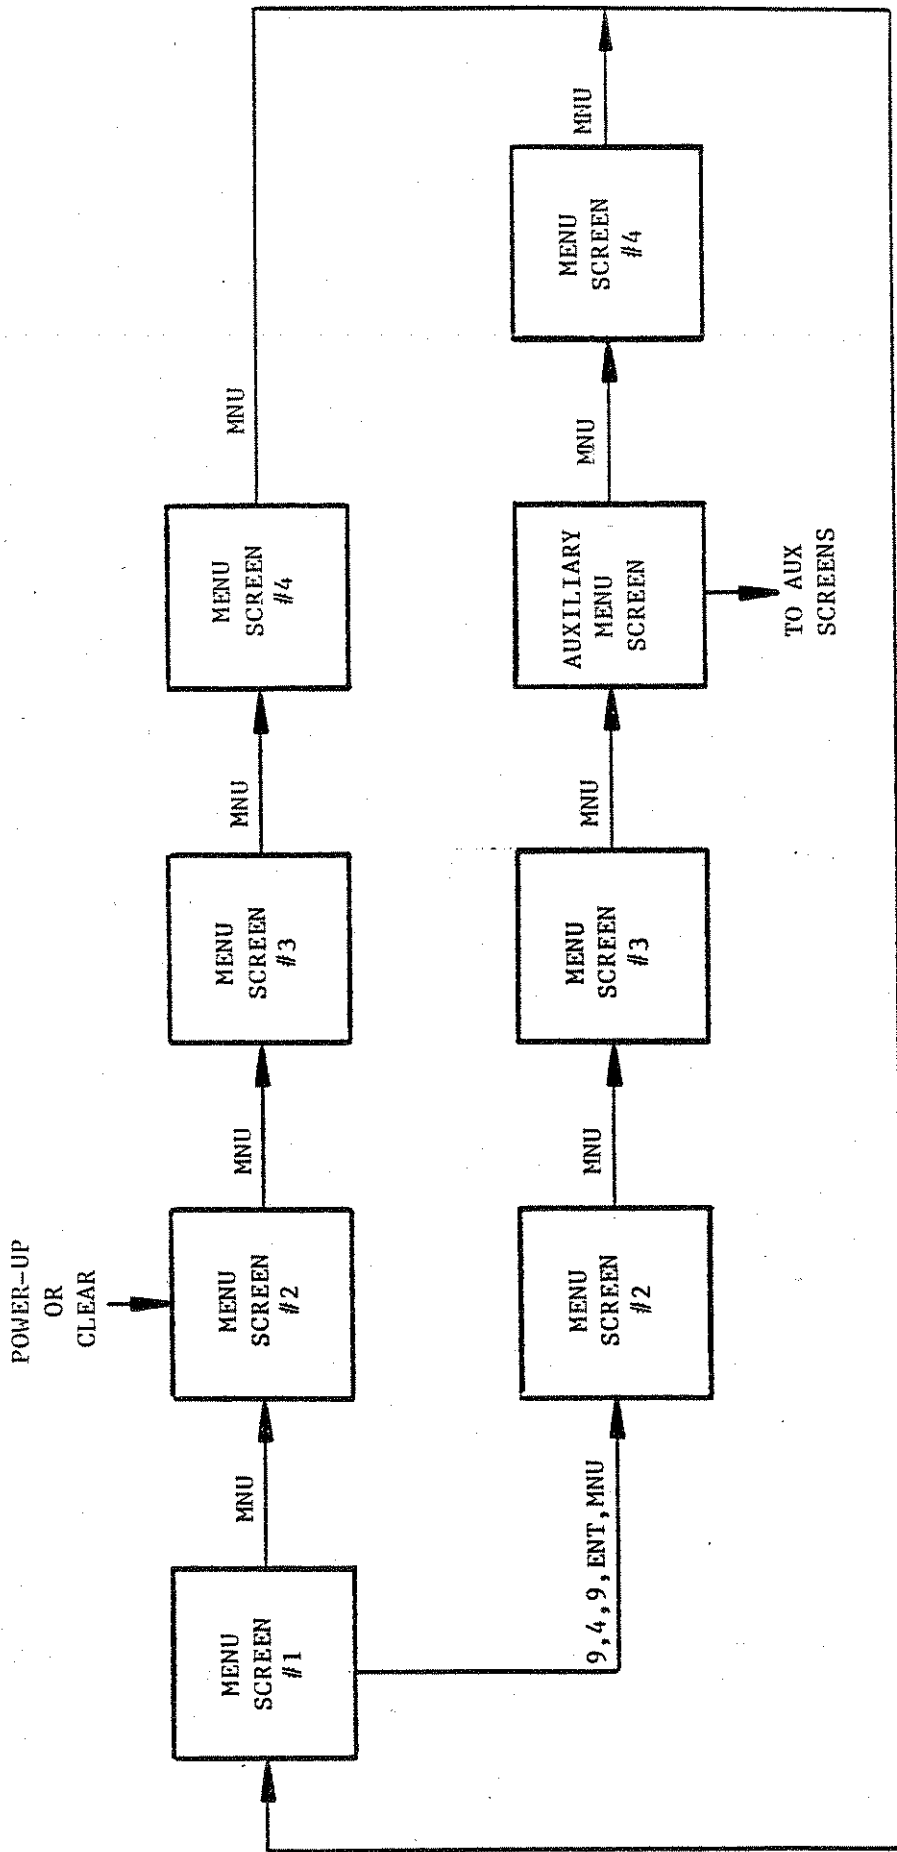


FIGURE 3-3
MENU SCREEN SEQUENCE

FIGURE 3-4
MENU SCREENS

MENU #1 SCREEN

SNC = 01	CLK = 02
WVF = 03	RNG = 04

MENU #2 SCREEN

AMP = 05	FRQ = 06
PHZ = 07	CRL = 08

MENU #3 SCREEN

RMP (A) = 09	ELT = 11
--------------	----------

AUXILIARY MENU SCREEN

CAL = 12	CFG = 13
ALM = 14	FLM = 15

While viewing any of the first eight screens (1 through 11) the screen may be sequenced in ascending order by depressing the MON key or descending order by the PRG key.

While viewing the AMP screen depressing the MON will cause the FRQ screen to be displayed. While viewing the FRQ screen depressing the PRG key will cause the AMP screen to be displayed.

3.5.2.1 SYNCHRONIZE SCREEN (SNC = 01)

The SNC screen displays whether the external or internal SNC mode of operation has been selected. While viewing this screen to select the external SNC mode depress the EXT key or any odd numeric key followed by the PRG and ENT key:

Example: EXT,PRG,ENT

While operating in the EXT SNC mode the FRQ screen will display the frequency of the External Sync. signal. The signal must be between the low frequency limit and 450 Hz or the High Frequency Limit.

NOTE

When viewing the SNC, CLK or WVF screens the MON or PRG keys must be used to sequence to the desired screen. The MNU key can also be used to return to the menu then followed by any screen selection.

To return to the internal SNC mode of operation depress the INT key or any even numeric key followed by the PRG and ENT key while viewing the SNC screen.

Example: INT,PRG,ENT

If the External Sync. signal is not between the Low Frequency Limit and 450 Hz, or the High Frequency Limit, an error message will be displayed. See Figure 3-2. In addition, the 849TA will return to the INT mode of operations.

FIGURE 3-5
PARAMETER SCREENS

SCREEN (#)

SNC (01)

SNC MON	A = INT
B = INT	C = INT

CLK (02)

CLK MON	A = INT
B = INT	C = INT

WVF (03)

WVF MON	A = SNW
B = SNW	C = SNW

RNG (04)

RNG MON	A = 135.0
B = 135.0	C = 135.0

AMP (05)

AMP MON	A = 2.0
B = 2.0	C = 2.0

FRQ (06)

FRQ MON	A = 60.00
B = 60.00	C = 60.00

PHZ (07)

PHZ MON	A = 90.0
B = 240.0	C = 120.0

CRL (08)

CRL MON	A = 10.0
B = 10.0	C = 10.0

FIGURE 3-5 (CONTINUED)

PARAMETER SCREENS

SCREEN (#)

RMP (A) (09)

RMP (A) "1"	A = DLY
B = STP	C = VAL

RMP (B) (10)

RMP (B) "2"	
B = STP	C = VAL

ELT (11)

ELT MON	H =
M =	S =

"1" Independent Parameter can be AMP, FRQ, PHZ, CRL or CAL.

"2" Dependant Parameter can be AMP, PHZ, CRL, SNC, CLK or WVF.

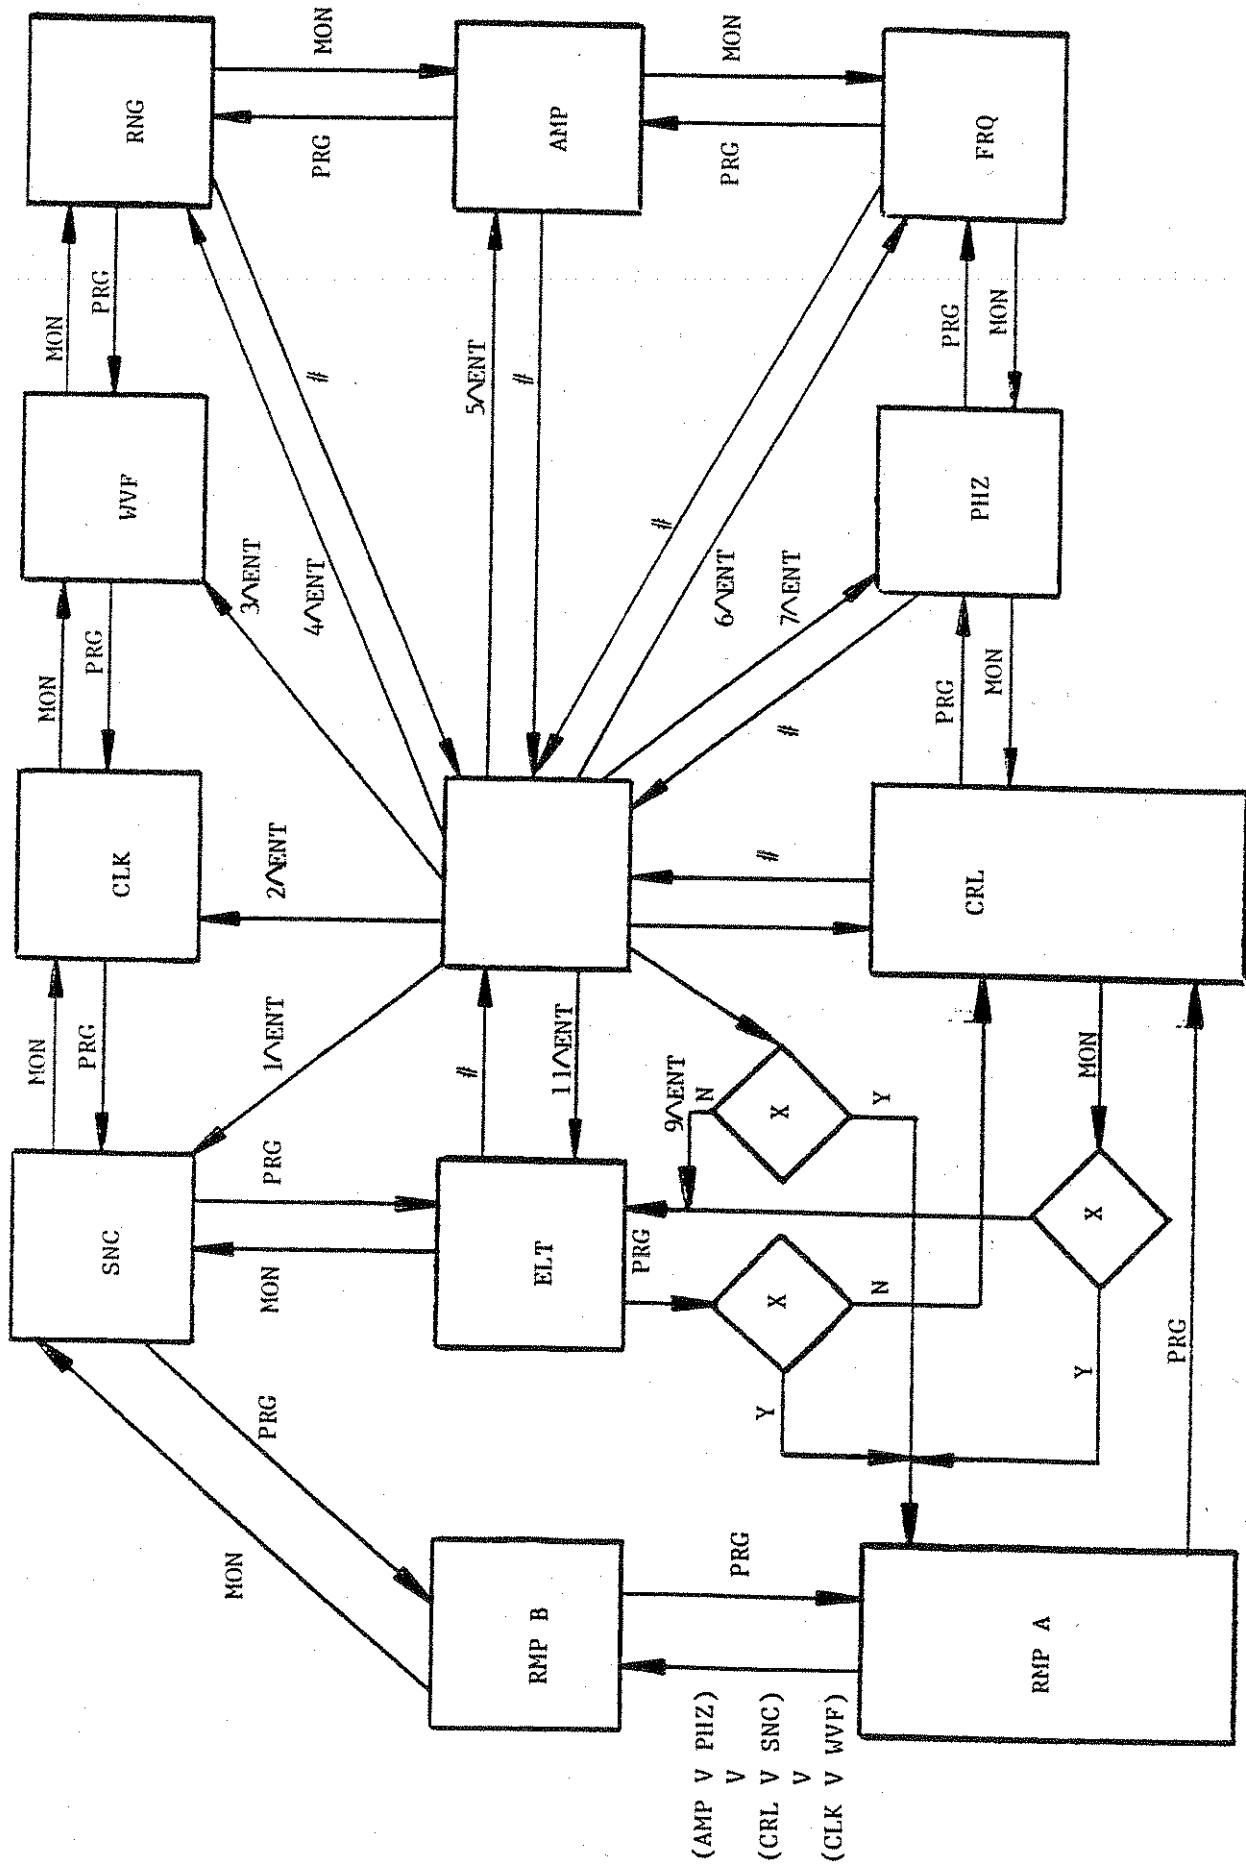


FIGURE 3-6 AME SCR SEQ DE

3.5.2.2. CLOCK SCREEN (CLK = 02)

The CLK screen displays whether the 849TA is operating in the external (EXT) or internal (INT) CLK mode of operation. While viewing this screen to select the EXT CLK mode depress the EXT key or any odd numeric key followed by the PRG and ENT key:

Example: EXT,PRG,ENT

NOTE

Before selecting the External Clock mode ensure that the power source containing the 849TA has the proper clock and lock signals applied to the BNC connectors at the rear panel. Failure to have the proper clock and lock signals when the EXT CLK mode of operation is selected may result in damage to the power source.

To return to the internal (INT) CLK mode of operation depress the INT or any even numeric key followed by the PRG and ENT key while viewing the CLK screen.

Example: INT,PRG,ENT

3.5.2.3 WAVEFORM SCREEN (WVF = 03)

The WVF screen square wave displays the type of waveform selected, sine wave (SNW) or square wave (SQW), for each of the three outputs. To program a square wave, depress the SQW or any odd number key followed by any combination of the A, B or C key, the PRG key and ENT key. If no phase key is depressed, the new waveform will be programmed for all outputs.

To program phase A and C to square wave: SQW, A, C, PRG, ENT

To select the sine wave waveform for any phase depress the SNW or any even number key followed by the key sequence described above.

3.5.2.4 RANGE SCREEN (RNG = 04)

The RNG screen has two purposes; to select a range defined by the range pair selected in the amplitude limit (ALM) screen and to set an upper voltage limit less than that specified by the ALM screen, LLM or HLM values. If the range pair 135/270 has been selected in the ALM screen with LLM=135 and HLM=270, the 135 range of the power source will be programmed by the RNG screen for any value of 135 or less. The value programmed will then be the maximum value allowed to be programmed in the Amplitude (AMP) screen.

Example to select the 270 V range.

2,7,0,PRG,ENT

The RNG value must be entered before the AMP value in an entry sequence (before depressing the ENT key) containing both parameters.

3.5.2.5 AMPLITUDE SCREEN (AMP = 05)

The AMP screen displays the amplitude value programmed for phase A, B and C. To program a new value, with the limit defined by the ALM screen, depress the numeric key sequence for the desired program (PRG) value followed by any combination of the phase keys, the PRG and ENT key. If no phase key is depressed the new AMP value will be common to all outputs.

Example to program all outputs to 102.3 volts:

1,0,2,..,3,PRG,ENT

Example to program ϕ A to 204.7, ϕ B to 200 and ϕ C to 190.3 (Must have the 270 RNG selected).

1,9,0,..,3,C,PRG,2,0,0,B,PRG,2,0,4,..,7,A,PRG,ENT

3.5.2.6 FREQUENCY SCREEN (FRQ = 06)

The FRQ screen displays the programmed frequency in Hertz for all operating modes except External CLK. In the EXT SNC mode the FRQ screen displays the actual frequency of the External sync. signal. While displaying the FRQ screen, any frequency from the low limit (LLM) to the high limit (HLM) may be programmed.

Example to program 60.57 Hz:

6,0,..,5,7,PRG,ENT

Example to program 5100 Hz:

5,1,0,0,PRG,ENT

3.5.2.7 PHASE SCREEN (PHZ = 07)

The phase screen displays the phase angle in degrees of the B and C outputs leading the A output.

In the EXT CLK mode the A value represents the angle of the A output leading the A output of the master 849TA controller.

In the EXT SNC mode the A value represents the angle of the A output leading the External Sync. TTL input. This angle should not be programmed closer than 20 degrees to any zero crossing of the waveform (20 degrees<A<160 degrees, 200 degrees<A<340 degrees etc.).

Example to program ϕ B to 45.3 degrees:

4,5,..,3,B,PRG,ENT

Example to program ϕ B to 90 degrees and ϕ C to 180 degrees:

9,0,B,PRG,1,8,0,C,PRG,ENT

3.5.2.8 CURRENT LIMIT SCREEN (CRL = 08) (Option)

The CRL screen displays the Current Limit value in percent of the California Instruments power source full scale current.

The programmable current limit feature must be used with a power source that incorporates the correct limit feature.

Example to program all outputs to 100 percent of full scale current.

1,0,0,PRG,ENT

Example to program output A to 50 percent.

5,0,A,PRG,ENT

If the 849TA is used with a power source not compatible with current limit programming the CRL screen will not be displayed. The current limit will then be fixed by the power source.

3.5.2.9 RAMP SCREENS

3.5.2.9.1 RAMP A SCREEN (RMP A = 09)

The RMP A screen allows any programmable parameter (AMP, FRQ, PHZ CAL or CRL) to be Stepped (STP) with a Delay (DLY) for each step to a final value (VAL).

There are two types of programs that may be specified by the RMP screen a step and a ramp.

The step program will program the output parameter value specified by a previous screen for the time specified for the DLY value in seconds. The parameter will then return to a final value specified by the VAL value.

The ramp program will step the output parameter value specified by a previous screen with the STP value, the DLY time per step and the final VAL setup in the RMP A screen. The ramp will increment if the VAL value is larger than the parameter value. It will decrement if it is less than the parameter value.

NOTE

The DLY, STP or VAL parameters must be specified (A,B or C key depressed) before the numeric value for the parameter is entered.

When ramping frequency, an error message will result with an attempt to step the frequency with greater resolution than that possible by the initial or final values. The frequency resolution is four decades.

The following is an example to program 130V for 2.5 seconds and then return to a final value of 115V.

First select the AMP screen and program 130V:

```
5,ENT,1,3,0,PRG*
```

Next select the RMP A screen, program a DLY of 2.5, a final VAL of 115 and run the program:

```
9,ENT,A,2,..,5,PRG,C,1,1,5,PRG,ENT
```

The following is an example to program 400 Hz with the B and C outputs fixed while the A output ramps from 10V to 110V in 1 volt step each step lasting .5 seconds:

```
6,ENT,4,0,0,PRG,5,ENT,1,0,A,PRG,9,ENT,A,0,..,5,PRG,B,1,PRG,C,1,1,0,PRG,ENT
```

The preceding example illustrates that all fixed output parameters may be setup in a Ramp. This may also be accomplished in a step.

The parameter screen immediately preceding the selection of the RMP A screen will be the parameter operated on by the Range function.

To enter DLY or STP values less than 1 the number 0 must precede the decimal point.

The ramp may be terminated at any time by depressing the ENT key.

*If the ENT key is depressed at this point the AMP would be programmed to and remain at 130 volts.

3.5.2.9.2 RAMP B SCREEN (RMP B=10)

The RMP B screen allows two parameters to be ramped simultaneously. The parameter programmed just prior to entering the RMP A screen, will be the independent parameter and will be identified in that screen. The parameter loaded prior to the independent parameter will be the dependent parameter.

NOTE

When ramping the FRQ parameter with any other, it must be the independent parameter. When AMP is ramped with any other parameter other than FRQ, it must be independent for the best DLY accuracy.

The following example will ramp frequency from 360 to 440 Hz at a rate of .2 Hz per .2 second, while each .2 Hz step causes the amplitude to go from 10 volts to 210 volts in .5 volt steps.

```
5,ENT,1,0,PRG,6,ENT,3,6,0,PRG,9,ENT,A,0,..2,PRG,B,0,..2,PRG,C,4,4,0,PRG,1,0,ENT,B,0,..5,PRG,ENT
```

The final value of the dependent parameter, AMP, will be determined by the number of steps of the independent parameter and the STP value, .5V, specified in RMP B.

```
FINAL VALUE = INITIAL VALUE + RMP B STP * NO. STEPS  
NO. STEPS = DEP. PAR. (FINAL VALUE - INITIAL VALUE)/STEP SIZE
```

In this example:

```
NO. STEPS = (440 - 360)/.2 = 400
```

```
FINAL AMP VALUE = 10 + .5 X 400 = 210 Volts
```

If the final value exceeds the RNG value, an error message will be generated.

The following example will simultaneously program the output frequency to 400 Hz, the waveform to squarewave and the amplitude to 130 volts for 2 seconds before returning to a 115 volts sine wave.

```
6ENT4,0,0,PRG,3,ENT,SQW,PRG,MON,MON,1,3,0,PRG,9,ENT,A,2,PRG,C,1,1,5,PRG,MON,C,SNW,PRG,ENT
```

3.5.2.10 ELAPSED TIME SCREEN (ELT = 11)

This screen displays the total run time accumulated on the 849TA.

H = Hours

M = Minutes

S = Seconds

3.5.3 AUXILIARY SCREENS

CAUTION

Changing the parameters in the CFG,ALM and FLM screens will change the operating characteristics of the 849TA. None of the parameters except the Listen Address (LSN) and the Calibration (CAL) can be changed.

There are four auxiliary screens not shown on any page of the Menu Screen without first entering a special key sequence. They can be used to change the Calibration (CAL), Unit Address (LSN). The voltage range pair (RNG), Low Frequency Limit (LLM), High Frequency Limit (HLM), Initial Frequency (FRQ), the Phase Configuration (PHZ), the amplitude limit for the low voltage range (LLM) and the amplitude limit for the high voltage range (HLM) can be displayed only.

Figure 3-7 shows the special screens and their related selection numbers. To select the auxiliary screens, first select menu screen #1. Enter the numeric code 949 then ENT. Depress the MNU key three times to display the Auxiliary screens. Enter the screen number desired followed by depressing the ENT key.

All values displayed in the auxiliary screens are stored in Nonvolatile RAM (NVRAM).

TO ACCESS ALL THE AUXILIARY SCREEN FUNCTIONS:

1. Turn power off, wait 10 seconds then turn power on.
2. Press "11ENT".this displays the ELT screen.
Write down the minutes and seconds displayed.
3. Calculate the password as follows: password=mmss
Where mm is the minutes and ss is the seconds.
if the minutes is less than 10 there is no leading zero required. If the seconds are less than 10 you must add a leading zero. Example m=34 s=7 password =3407
m=5 s=33 password = 533.
4. Press mon key to exit the elt screen.
5. Press MNU key until the first menu screen appears.
SNC=01,WVF=03,RNG=04
6. Press 949ENT. press MNU until the Aux screen appears.
CAL=12,CFG=13,ALM=14,FLM=15
7. Press 13ENT.
8. Press B,Press password (I.E. 3407), Press PRG.
You should now be able to change the values in the Auxiliary screens.

FIGURE 3-7
AUXILIARY SCREENS

SCREEN (#)

CAL (12)

CAL MON	A =
B =	C =

CFG (13)

CFG MON	A = LSN
B = CFB	C = PHZ

ALM (14)

ALM MON	A = RNG
B = LLM	C = HLM

FLM (15)

FLM MON	A = FRQ
B = LLM	C = HLM

3.5.3.1 CALIBRATION SCREEN (CAL=12)

CAUTION

The 849TA has been calibrated at the factory. Do not select the CAL screen unless recalibration with an external digital voltmeter is to be performed.

The calibration screen displays the calibration coefficient assigned to each of the three outputs. The calibration coefficient is a relative value from 0 to 255. The calibration coefficient range will vary the output $\pm 1.24\%$ from the nominal calibration point.

Each increment of the coefficient changes the output by .01% of the output if the calibration voltage is 135.0 (used for the 135 RNG). Each step represents approx. .01 volts. Each step is .02 volts for the 270.0 calibration point. During the calibration mode the calibration coefficient can be incremented or decremented from any starting value.

For example, if the calibration coefficient for an output is 0 and the output is .5 volts low at 135.0, start the calibration at approximately 40.

Example to calibrate the A output at 135.0 volts starting with a calibration coefficient of 40 with 1 second per step:

First program the output to 135 volts:

```
5,ENT,1,3,5,PRG,ENT
```

Next enable the selection of the auxiliary screens as described in paragraph 3.5.3, select the CAL screen and enter the starting point for phase A:

```
1,2,ENT,4,0,A,PRG
```

Next select the RMP A screen and start the calibration ramp:

```
9,ENT,A,2,PRG,ENT
```

Depress the ENT key when the output voltage reaches the programmed voltage.

3.5.3.2 CONFIGURATION SCREEN (CFG = 13)

The CFG screen shows three parameters identified by the A, B and C designators.

3.5.3.2.1 UNIT ADDRESS (LSN)

Depressing the A key shows the IEEE-488 Unit Address (LSN). Any value from 0 through 30 may be entered for the equivalent Unit Address.

Example to set the Listen address to 16:

A,1,6,PRG,ENT

3.5.3.2.2 CONFIGURATION BYTE (CFB)

Depressing the B key shows the 849TA Configuration Byte. This byte is a numeric value from 0 to 255 that describes the hardware options with which the 849TA is configured.

CFB Weight	128	64	32	16	8	4	2	1
Function	PWR	CUR	VLT	CRL	PHZ	FRQ	WVF	CLK

1 = enabled, 0 = inhibited

With CLK enabled, the power source must have the CLOCK and LOCK hardware in place.

With WVF enabled, the power source must be characterized for square wave operation.

With FRQ enabled, the 849TA will allow the frequency to be programmed. With FRQ disabled, the FRQ will remain at its initial frequency.

With PHZ enabled, the 849TA will allow phase programming. Disabled, the phase will remain at its initial configuration value(s).

With CRL enabled, the power source and 849TA must have the current limit option.

The 849TA does not support the VLT,CUR or PWR options.

CFB=14 enables WVF,FRQ and PHZ

3.5.3.2.3 PHASE C INITIAL VALUE (PHZ)

Depressing the C key shows the Phase (PHZ) initial value. Any value may be displayed for this parameter but 0 indicates that a single phase power source is being used and 120 indicates a three phase power system has been configured. Any value except 0 or 120 will be interpreted as a two phase system using the A and C outputs. The 849TA CPU will enable the appropriate amplitude fault interrupt based on the number of phases it has identified by the PHZ value.

For example when C=90 the 849TA will be used in a two-phase system with phase C initialized to 90 degrees leading phase A:

A PHZ value of 0 will delete phase B and C information from all parameter screens.

Any other value except 120 will cause all phase B information to be deleted.

3.5.3.3 AMPLITUDE LIMIT SCREEN (ALM = 14)

Like the CFG screen the ALM screen uses the A, B and C designators to identify three parameters.

3.5.3.3.1 RANGE PAIRS (RNG)

Depressing the A key shows the voltage Range (RNG) pair code identified in Table 3-2. Each range pair has a complement code that will allow the 849TA to initialize on the opposite range.

3.5.3.3.2 LOW LIMIT (LLM)

Depressing the B key shows the value of the lowest voltage range of the range pair. The range for this parameter is any value from zero to the lowest value defined by the range pair code.

3.5.3.3.3 HIGH LIMIT (HLM)*

Depressing the C key shows the value of the highest voltage range of the range pair. The range for this parameter is any value from zero to the highest value defined by the range pair.

The following example defines the 135.0/270.0 with initialization on the 135V range.

ALM screen values:

RNG = 0
LLM = 135.0
HLM = 270.0

3.5.3.4 FREQUENCY LIMIT SCREEN (FLM=15)

The A, B and C designators identify the FRQ, LLM and HLM parameters respectively.

3.5.3.4.1 INITIAL FREQUENCY (FRQ)

Depressing the A key shows the 849TA power-up frequency.

3.5.3.4.2 LOW FREQUENCY LIMIT (LLM)

Depressing the B key shows the Low Frequency Limit (LLM) value.

TABLE 3-2
RANGE PAIR CODES

RNG #	RANGE PAIR	INITIAL RANGE
0	200.0/400.0	LLM
1	20.00/40.00	LLM
2	20.00/200.0	LLM
3	20.00/400.0	LLM
4	40.00/200.0	LLM
5	40.00/400.0	LLM
8	400.0/200.0	HLM
9	40.00/20.00	HLM
10	200.0/20.00	HLM
11	400.0/40.00	HLM
12	200.0/40.00	HLM
13	400.0/40.00	HLM

3.5.3.4.3 HIGH FREQUENCY LIMIT (HLM)

Depressing the C key shows the High Frequency Limit (HLM).

3.5.4 SPECIAL PURPOSE KEYS

There are three keys on the 849TA that serve a purpose other than the programming of output parameters; the REG, REC and CLR/SRQ keys.

3.5.4.1 REG (REGISTER) KEY

The 849TA has 10 registers 0 through 9 that are available to store any mixture of the output parameters WVF, RNG, AMP, FRQ, PHZ, CRL and RMP. The A, B and C outputs may each have different values for each parameter.

A parameter not specified in a register will assume the existing operating parameter when the register is recalled.

This example will store the following parameters into register 9:

WVF A,B,C = SNW	FRQ = 400
PHZ B = 240	AMP A = 80
PHZ C = 120	AMP B = 100
	AMP C = 120

3,ENT,SNW,PRG,MON,MON,7,ENT,2,4,0,B,PRG,1,2,0,C,PRG,PRG,4,0,0,PRG,PRG,8,0,A,PRG,1,0,0,B,PRG,1,2,0,C,PRG,9,REG

The display will show the REG mnemonic with the register number after a store operation.

Values stored into register 0 will be stored in non-volatile (NVRAM) and hence will be retained during power down.

3.5.4.2 REC (RECALL) KEY

The recall key is used to recall the output parameters stored in any of the ten registers.

After a recall operation the display will show the REC mnemonic with the register number recalled. An attempt made to recall an empty register will cause the display to indicate a Recall operation but the output parameters will remain unchanged after the ENT key is depressed.

The following example will recall and output all parameters stored in 3.5.4.1

9,REC,ENT

CAUTION

Any parameter not specified in a register will remain unchanged after a Recall operation.

3.5.4.3 CLR/SRQ (CLEAR/SERVICE REQUEST)

The CLR/SRQ key serves two functions. It is used to generate an IEEE-488 (GPIB) Service Request interrupt to Bus Controller. During a subsequent serial poll the 849TA will send a Status Byte (STB) to the controller that is a function of the number key depressed preceding the CLR/SRQ key. The decimal value of the STB will equal the number key plus 80. Ten STB can be generated from the keyboard with values 80 through 89.

The following key sequence example will generate an SRQ with a Status Byte of 80:

0,SRQ

The second function of the CLR/SRQ is that of a Clear key. During the programming of parameters the setup data may be cleared by depressing the SRQ key. This is a safety precaution to ensure that no data will be changed if the ENT key is depressed.

All numeric data entered on the display screen prior to depressing the PRG key will be cleared by depressing the CLR/SRQ key once. After the PRG key has been depressed, two depressions of the CLR/SRQ are required. Depressing the key three times will clear set-up parameters in other screens.

If the following key sequence is followed 5,ENT,1,3,5,PRG, the output will be 135 volts after the ENT key is depressed.

Depressing the CLR/SRQ key twice will clear the setup data and prevent the existing output parameters from changing if the ENT key is depressed.

3.5.4.4 SIMULTANEOUS PARAMETER ENTRY

The parameters SNC, CLK, WVF, RNG, AMP, FRQ, PHZ, CRL and RMP may all be entered simultaneously.

The following example will change all parameters except SNC and CLK with the same entry sequence. In addition the C output will ramp from 0 degrees to 720 degrees in .5 degrees/.5 sec. steps.

NOTE

For simplicity the following example uses the notation () to enclose the desired parameter screen instead of the actual key sequence.

```
(WVF), SNW, PRG, (RNG), 1, 3, 0, PRG, (FRQ), 4, 0, 0, PRG, (AMP), 1, 0, 0, PRG,  
(PHZ), 2, 4, 0, B, PRG, 0, C, PRG, (RMP), A, 0, ., 5, PRG, B, 0, ., 5, PRG, C, 7, 2,  
0, PRG
```

NOTE

For simultaneous parameter entry of RNG and AMP the entry sequence must have the RNG parameter precede the AMP parameter or a syntax error will be generated.

The parameter change will occur whenever the ENT key is depressed. The parameters may be reviewed before depressing the ENT key by sequencing through the screens with the PRG key. When the program parameters are correct, depress the ENT key to change the parameters and start the ramp.

3.6 REMOTE OPERATION

Remote programming for the 849TA IEEE-488 GPIB interface consists of sending the unit address and the proper ASCII alphanumeric characters to identify the parameter and the numerical value or other argument. The description of the abbreviations for GPIB messages used in this section are listed in Table 3-3.

These abbreviations must not be confused with the device dependent abbreviations used to describe the 849TA operating parameters (ex. FRQ = Frequency etc.)

TABLE 3-3

COMMONLY USED GPIB ABBREVIATIONS

ABBREVIATION	DEFINITION
ATN	Attention. A logic line on the GPIB asserted only by the controller to indicate the data on the bus represents a bus message.
CR	An ASCII carriage return.
DCL	Device Clear. A universal bus message to initialize all instruments to their power-on states.
END	End. A message conveyed when a talker uses the EOI line with the last data byte of a data string.
EOI	End Or identify. A logic line on the GPIB asserted by a talker to indicate the last byte of a data string.
EOS	End Of String. A delimiter message that consists of a data byte(s) to indicate the end of a data string.
GET	Group Execute Trigger. A GPIB message to trigger an addressed instrument.
GTL	Go To Local. A GPIB message to put an addressed instrument in the local control mode.
IFC	Interface Clear. A logic line on the GPIB asserted by the controller to clear all interfaces (ex., default to unlisten and untalk).
LF	An ASCII line feed.
REN	Remote Enable. A logic line on the GPIB asserted by the controller. REN enables an instrument to go to local when addressed.
SDC	Selected Device Clear. A GPIB message to initialize an addressed instrument to its Power-on state.

3.6.1 UNIT ADDRESS

This is the A value (LSN) set in the CFG screen (Ref. 3.5.3.2.1). The Unit Address 0 through 30 corresponds to the HEX value 20 through 3E. Refer to Table 3-4 for the equivalent HEX, Binary, ASCII and Decimal equivalents. The Unit Address is set at the factory to 1.

TABLE 3-4
UNIT ADDRESS GROUP

LISTEN ADDRESS	HEX	BINARY					DECIMAL	ASCII	
		A5	A4	A3	A2	A1			
0	20	001	0	0	0	0	0	32	SP
1	21	001	0	0	0	0	1	33	!
2	22	001	0	0	0	1	0	34	"
3	23	001	0	0	0	1	1	35	#
4	24	001	0	0	1	0	0	36	\$
5	25	001	0	0	1	0	1	37	%
6	26	001	0	0	1	1	0	38	&
7	27	001	0	0	1	1	1	39	'
8	28	001	0	1	0	0	0	40	(
9	29	001	0	1	0	0	1	41)
10	2A	001	0	1	0	1	0	42	*
11	2B	001	0	1	0	1	1	43	+
12	2C	001	0	1	1	0	0	44	,
13	2D	001	0	1	1	0	1	45	-
14	2E	001	0	1	1	1	0	46	.
15	2F	001	0	1	1	1	1	47	/
16	30	001	1	0	0	0	0	48	0
17	31	001	1	0	0	0	1	49	1
18	32	001	1	0	0	1	0	50	2
19	33	001	1	0	0	1	1	51	3
20	34	001	1	0	1	0	0	52	4
21	35	001	1	0	1	0	1	53	5
22	36	001	1	0	1	1	0	54	6
23	37	001	1	0	1	1	1	55	7
24	38	001	1	1	0	0	0	56	8
25	39	001	1	1	0	0	1	57	9
26	3A	001	1	1	0	1	0	58	:
27	3B	001	1	1	0	1	1	59	;
28	3C	001	1	1	1	0	0	60	<
29	3D	001	1	1	1	0	1	61	=
30	3E	001	1	1	1	1	0	62	>
UNL	3F	001	1	1	1	1	1	63	?

3.6.2 MESSAGE FORMAT

The message sent to the 849TA must have the following format for each parameter:

HHHDXXX-----E±NND

where

H = Three letter mnemonic for each message header
D = Optional header extension to specify output (ref. table 3-5)
X = Alpha, numeric argument or # for message header argument.
E = Optional ASCII E for exponent identification
± = Exponent sign
N = Exponent value 0 to ±63
D = Message string delimiter. (CR) (LF) standard

More than one message header with its corresponding argument may be sent in one setup string with a common delimiter.

The ASCII # symbol is used in a ramp program to designate that the start of the ramp is the existing output value. This feature is useful when remotely calibrating the 849TA without knowing the existing CAL coefficient.

3.6.2.1 PROGRAM HEADERS

A Program Header is a mnemonic of a series of three ASCII characters used to select an 849TA function or identify the data it precedes. The header is an abbreviation of the program function it identifies.

The header may be followed by a header extension to separately program each output to different values. If an extension is not added to the header all outputs will be programmed to the header's argument. See Table 3-5 for the definition of the Program Headers and their related arguments.

Any header that is sent to the 849TA without an argument will cause the front panel display to show the corresponding screen.

The program header extension works on the trailing exception rule. This characteristic can be used to shorten the setup string. The following example demonstrates the trailing exception rule by programming the phase A and B outputs to the square wave waveform and phase C to a sine wave.

WVF SOW WVF C SNW

TABLE 3-5
PROGRAM HEADERS

HEADER	EXTENSION	ARGUMENT	DEFINITION
AMP	A, B, C	# or numeric from 0.0 to RNG value.	Amplitude in volts.
CAL	A, B, C	# or numeric data from 0.0 to 255	Calibration Coefficient
CLK		INT,EXT	Clock source
CRL	A, B, C	# or numeric data from 0.0 to 100.0	Current limit in amps
DLY		Numeric data from 0.00 to 9999	Delay in seconds
FRQ		Numeric data from 45.00 or LLM to HLM value	Frequency in hertz.
PHZ	A, B, C	# or numeric data from 0.0 to ±999.9	Phase angle in degrees.
PRG		0 through 9	Register load
REC		0 through 9	Recall register
REG		0 through 9	Register load
RNG	A, B, C	0.0 to limit value of range	Amplitude range and limit value in volts.
SNC		INT,EXT	Synchronize
SRQ		1 or 0	Service Request enable or disable.

TABLE 3-5 (CONT.)
PROGRAM HEADERS

HEADER	EXTENSION	ARGUMENT	DEFINITION
STP		From parameter minimum to maximum value	Step size
TLK		Any program header or other argument	Set-up 849TA to talk argument when talk addressed.
TRG			Execute (Trigger) set-up parameters on GPIB "GET" message.
VAL		From parameter minimum to maximum value.	Final ramp or step value in volts, hertz, amps, degrees, sine wave or square wave.
WVF	A, B, C	SNW, SQW	Waveform

NOTE: If Extension does not follow the header, the argument will be applied to all phases.

3.6.2.1.1 AMPLITUDE (AMP)

The AMP header with the optional A, B or C extension is used to identify the amplitude command. The argument is a numeric data field from 0.0 to the limit set by the RNG value. An attempt to program a value higher than this value will generate an error and a SRQ on the GPIB. The # symbol may also be used when ramping the AMP parameter.

The following examples represent ASCII strings the 849TA will recognize for various amplitudes:

A,B,C 0.0 volts	AMP0	or	AMPA0AMPB0AMPC0
A,B,C 10.5 volts	AMP10.5	or	AMP1.05E1 or AMP105E-1
A,B,C 100 volts	AMP100	or	AMP100.0 or AMP1E2
A,B = 110.5, C = 115	AMP110.5AMPB110.5AMPC115	or	AMP110.5AMPC115

3.6.2.1.2 CALIBRATE (CAL)

CAUTION

Do not program the CAL header unless an external digital voltmeter has been set-up for calibration. Refer to paragraph 4.6.

The CAL header with the required A, B or C extension is used to identify the Calibrate command. The argument is a relative starting coefficient from 0 to 255 or # symbol.

The CAL ramp is terminated with the GPIB message Group Execute Trigger (GET).

The CAL header can be used with a Delay (DLY) command to allow the external calibration AC DVM time to settle. Refer to paragraph 3.5.4.1 for additional information.

A CAL coefficient can be programmed without a ramp by including the VAL header with the same argument as the CAL header.

To program the CAL A coefficient to 55 use the following string:

CALA55 VAL55

To calibrate phase A at 135.0 volts, start the CAL routine with a GPIB GET message with the CAL coefficient starting at 20 and with each step lasting 2 seconds use the following string:

```
AMP135.0 CALA20 DLY2 TRG
```

In this example the output will program to 135.0 and start to change the output by stepping the CAL value after a "GET" message. The ramp will terminate after a second "GET" message.

To calibrate phase A at 135 volts and start the ramp with the existing CAL coefficient reducing the output with steps lasting one second:

```
AMP135.0 CALA# DLY1 VAL0
```

Again the ramp must be terminated with the bus "GET" message when the external AC calibration DVM indicates the correct voltage.

3.6.2.1.3 CLOCK (CLK) (Option)

The CLK header is used to select the clock and lock source for the 849TA. If external clock and lock signals are connected to J5 and J6 at the rear panel of the power source, the signals may be selected by following string:

```
CLK EXT
```

The normal or internal (INT) mode of operation for the 849TA is selected by sending:

```
CLK INT
```

CAUTION

Failure to have an external clock signal connected to J5 with jumper W3 installed on the 849TA Reference Board when the external clock mode is selected may result in severe damage to the power source.

3.6.2.1.4 CURRENT LIMIT (CRL) (Option)

The CRL header with the optional A, B or C extension is used to identify the Current Limit Command. The argument is a numeric data field from 0.0 to 100.0 percent of the full scale current of the associated California Instruments power source.

The following string will program a current limit of 100 percent for all three phases:

```
CRL 100
```

3.6.2.1.5 DELAY (DLY)

The DLY header is used with a parameter that has a numeric argument (ex. AMP, FRQ, PHZ, CRL, CAL) in a single step program.

The STP header with VAL may be used with DLY to completely specify a ramp program.

The following string will first step the voltage to 125 volts for 2.55 seconds and return to 115 volts.

```
AMP 125 DLY 2.55 VAL 115
```

The following string will ramp the voltage from 10 volts to 115 volts with 1.5 volt/.5 sec. steps

```
AMP 10 DLY .5 STP 1.5 VAL 115
```

3.6.2.1.6 FREQUENCY (FRQ)

The FRQ header is used to identify the following numeric data as frequency.

The following string will program the frequency to 60.56 Hz.

```
FRQ 60.56
```

3.6.2.1.7 PHASE (PHZ)

The PHZ header with the optional A, B or C extension is used to identify the following numeric data as phase.

The PHZ header sent with no extension will program the B and C outputs in phase with phase A. The phase of the A output will lead the EXT SNC signal or EXT lock and clock signal by the value programmed.

The following example will program the A, B and C outputs to 90 degrees relative to an external sync. signal when operating in the EXT SNC mode:

```
PHZ 90
```

The following example will program the B and C phases to 240.5 degrees and 119.3 degrees respectively leading phase A.

```
PHZB 240.5 PHZ C 119.3
```

3.6.2.1.8 REGISTER (REG)

The REG header is used to load the register specified by the following single digit numeric data with the preceding data. The PRG header is identical to the REG header and is included to standardize other AC power controllers with the 849TA.

The following example will load a ramp program that will step the voltage from 10 to 115 volts with 1 volt/.5 sec. steps at 400 Hz into register 0.

```
FRQ 400 AMP 10 DLY .5 STP 1 VAL 115 REG 0
```

Refer to paragraph 3.5.5.1 for additional information.

3.6.2.1.9 RECALL (REC)

The REC header is used to recall previously loaded data from a register identified by the following single digit numeric data.

The following example recalls and outputs the parameters stored in register 0 by the example in paragraph 3.6.2.1.8.

```
REC 0
```

The following example recalls the parameters in register 0 and outputs the parameters after the IEEE-488 "GET" bus message.

```
REC 0 TRG
```

3.6.2.1.10 RANGE (RNG)

The RNG header with the A, B and C extension is used to select a range defined by the ALM screen RNG, LLM and HLM values. The numeric value following the RNG header will also define the upper limit for the AMP value. The RNG value will select the higher range if the value is greater than the lower range value defined by the ALM screen.

If the range and voltage amplitude are to be programmed by the same data string the RNG header and argument must precede the AMP header or a syntax error will be generated.

The following example will select the 270 range from the 135/270 range pair with an upper amplitude limit of 210 volts.

```
RNG 210
```

3.6.2.1.11 SYNCHRONIZE (SNC)

The SNC header is used with the EXT argument to synchronize to an external TTL input. The EXT SNC mode can also be used to program the phase A output at the point on the waveform defined by the PHZ A value.

3.6.2.1.12 SERVICE REQUEST (SRQ)

After power-up the GPIB Service Request (SRQ) will be generated by the 849TA after any error (ex. syntax, output fault, etc.) or depressing the front panel SRQ key. This SRQ output can be inhibited by the SRQ header followed by the single digit "0". The SRQ can be reenabled by the SRQ header followed by 1.

The following example disables the 849TA GPIB SRQ.

```
SRQ 0
```

3.6.2.1.13 STEP (STP)

The STP header is used to identify the following argument numeric value as the increment or decrement value for a FRQ, CRL, AMP, PHZ or CAL ramp. Refer to paragraph 3.5.2.9 for additional information.

The following example will ramp all outputs from 130 volts in 1.5 volt/.5 sec. steps to 10 volts.

```
AMP 130 DLY .5 STP 1.5 VAL 10
```

3.6.2.1.14 TALK (TLK)

The TLK header is used to set-up the 849TA to talk data. The argument of the TLK header identifies the type of data to be talked in Table 3-6. It can be any parameter, configuration, or limit header identified in Table 3-6.

The ALM,CFG,ELT and FLM arguments contain data shown in Table 3-6. This data is represented by mnemonics other than A,B or C. This data however can be pointed-to by the A,B or C nomenclature in the TLK string.

The following string will cause the 849TA to talk only the total elapsed hours instead of hours, minutes and seconds.

```
TLK ELT A
```

NOTE

For the response message to be repeated, the 849TA must receive a new TLK string for each of its responses.

TABLE 3-6
TLK ARGUMENTS

ARGUMENT	EXTENTION	DATA	DEFINITION
ALM		RNG,LLM,HLM	TLK ALM will set-up the 849TA to talk the ALM screen when addressed to talk.
CFG		LSN,CFB,PHZ	TLK CFG will set-up the 849TA to talk the CFG screen when addressed to talk.
ELT		H,M,S	TLK ELT will set-up the 849TA to talk the total accumulated time.
FLM		FRQ,LLM,HLM	TLK FLM will cause the 849TA to talk the FLM screen.
MNU		All headers in vocabulary enabled	TLK MNU will set-up the 849TA to talk all headers of screens enabled.
ANY PROGRAM HEADER			Will set-up the 849TA to talk the programmed value of the Argument.

NOTE: If Extension does not follow the argument, the data will contain A, B and C information.

3.6.2.1.15 TRIGGER (TRG)

The TRG header has no argument. When the TRG mnemonic is included in a setup string to the 849TA it will delay execution of the string until the GPIB Device Trigger message is sent by the bus controller.

The Trigger mode may also be enabled in the local mode by programming setup parameters without depressing the ENT key. The 849TA will then execute the setup values in the remote mode when the Device Trigger is received.

The following example will recall the parameters from register 0 and delay execution until the GET message is received. (Note: GET is the abbreviation for the GPIB Group Execute Trigger message and does not represent a series of ASCII characters).

```
REC 0 TRG
```

3.6.2.1.16 VALUE (VAL)

The header VAL is used to identify the following numeric argument as the final Value of a ramp or step.

If the VAL argument is larger than the initial value for the parameter to be ramped, the ramp will increment with step size defined by STP and DLY. With the VAL argument less than the initial value the ramp will decrement from the initial parameter. Refer to paragraphs 3.5.2.9, 3.6.2.1.5 and 3.6.2.1.13 for additional information.

A ramp or step operation can be stopped at anytime by the GPIB message Group execute trigger.

The following example will decrement the output amplitude of phase A only from 120 in .1 volt/.2 sec. steps to 100 volts after a Device Trigger.

```
AMP A 120 DLY .2 STP .1 VAL 100 TRG
```

The following example will simultaneously ramp the Frequency from 400 to 5000 Hz at a rate of 10 Hz per second and the Amplitude from 5 volts in increments of .5 volts per step:

```
RNG270 AMP5 FRQ400 STP10 DLY 1 VAL5000 STP.5
```

TABLE 3-7
TALK STRING RESPONSE

TLK STRING SENT TO 849TA	RESPONSE FROM 849TA AFTER ADDRESSED TO TALK
TLK ALM	ALM RNG0 LLM135 HLM270
TLK AMP	AMP A005.0 B005.0 C005.0
TLK CAL	CAL A0155 B0188 C0183
TLK CFG	CFG LSN0001 CFB0210 PHZ0120
TLK CLK	CLK INT
TLK CRL	CRL A100.0 B100.0 C100.0
TLK ELT	ELT H0052 M0027 S0010
TLK FLM	FLM FRQ0400 LLM0045 HLM5000
TLK FRQ	FRQ 400.0
TLK MNU	MNU SNC CLK WVF RNG AMP FRQ PHZ CRL ELT CAL CFG ALM FLM VLT CUR PWR PWF PRG REC DLY STP VAL
TLK PHZ	PHZ A090.0 B240.0 C120.0
TLK REG 0	REG 0 ACTUAL CONTENTS OF REGISTOR 0
TLK SNC	SNC INT
TLK WVF	WVF A SNW B SNW C SNW

3.6.2.1.17 WAVEFORM (WVF)

The header WVF with the optional A, B or C extension is used to identify the following argument as the Sine wave (SNW) or Square wave (SQW) function of the Waveform.

The following example will program all outputs to the square wave function.

WVF SQW

The following example will program only output B to the square wave function:

WVF B SQW

3.6.2.2 NUMERIC DATA FIELD

Parameter values may be sent to the 849TA as an unsigned value with a decimal point or a decimal point with an exponent. Phase may be sent as a signed value.

3.6.2.2.1 UNSIGNED VALUE WITH DECIMAL POINT

The Decimal Point for numeric data values may be either sent or inferred. The two following ASCII strings will represent 115 volts to the Model 849TA.

AMP115
AMP115.0

There may be any number of digits following the decimal point, not to exceed the 128 byte DMA buffer, but only the Least Significant Digit (LSD) of resolution will be recognized. The LSD for amplitude is tenths of volts. The LSD for frequency is either hundredths, tenths or Hertz for up to 99.99 Hz, 999.9 Hz or 9999 Hz respectively.

3.6.2.2.2 UNSIGNED VALUE WITH DECIMAL POINT AND EXPONENT

Any parameter's numeric value may be of a mixed form with a decimal point and exponent.

The exponent may be a numeric, with or without leading zeros, up to a value of ± 63 . The following ASCII strings will represent 115 volts to the 849TA:

```
AMP1.15E2  
AMP1.15E+2  
AMP1.15E+02  
AMP1150E-1
```

A positive exponent value is represented by either an ASCII "+" or an unsigned value.

3.6.2.2.3 SIGNED VALUE

The phase numeric value may have a + or - sign to correspond to a leading or lagging phase angle with respect to phase A. The following ASCII strings will represent 120.5 degrees for Phase C.

```
PHZC 120.5  
PHZC-239.5  
PHZC 1.205 E+2  
PHZC-2.395 E+2  
PHZC+480.5  
PHZC-599.5
```

3.6.2.3 MESSAGE SEPARATOR

A complete message consists of a header and an argument. Since more than one message can be sent in a setup string message separators included in the string between the message will make it more readable to the human operator. There are three message separators recognized by the 849TA: the coma (,), semicolon (;), and space. Since these separators are treated as no-ops they may be dispersed throughout a setup string.

The following are two examples of the use of separators:

```
FRQ400;AMPA100,AMPB110,AMPC120;WVF SQW
```

```
FRQ,400;AMP,A,100;AMP,B,110;AMP,C,120;WVF,SQW
```

3.6.2.4 DELIMITER

The End of String (EOS) delimiter recognized by the 849TA is the ASCII Carriage Return (CR), Line Feed (LF). The End or Identify (EOI) IEEE-488 message END will also be recognized.

An END or End of String (EOS) message will be recognized by 849TA as a message delimiter.

The END message is sent by setting the IEEE-488 End or Identify line true with the last data byte.

The EOS message will be recognized by the 849TA as the ASCII Carriage Return (CR), Line Feed (LF). The EOS message may be changed to Line Feed (LF) by changing jumper A4W2 to position A4W1. When the jumper is changed to position A4W3 the ASCII Carriage Return will represent the EOS message.

3.6.2.5 NULL CHARACTERS

An ASCII character that can be included anywhere in the setup string without altering the meaning of the string is called a null character.

Whenever the 849TA encounters a null character, it ignores the character. See Table 3-8 for all acceptable ASCII null characters.

TABLE 3-8

NULL (Unexecutable) CHARACTERS

ASCII	HEX	DECIMAL
SP	20	32
,	2C	44
;	3B	59

3.6.3 SERVICE REQUEST

The IEEE-488 Service Request (SRQ) is used by the 849TA to indicate to the bus controller that it needs service.

Any malfunction detected by the 849TA in the remote mode will cause it to generate the SRQ. In addition, the SRQ will be generated in the local control mode by the keyboard SRQ key.

Only operational faults detected in the remote program mode will cause the SRQ to be generated. The operational faults consist of range errors, syntax error, or phase A, B or C faults (See Table 3-9).

3.6.4 STATUS BYTE

Once the bus controller has detected the SRQ it must determine the instrument needing service by the Serial Poll. During the polling routine the instrument needing service will return a Status Byte (STB) greater than decimal 63. As part of the error screen on the 849TA display the 849TA will display the decimal equivalent of the STB with which it will respond. The Status Byte values for various faults are given in Table 3-9.

3.6.5 TRIGGER

The trigger mode of the 849TA is enabled when the mnemonic TRG is added to a setup string. The trigger command may be inserted anywhere in the string. When the mnemonic is detected by the 849TA, it will delay execution of the new setup values until the GPIB Device Trigger is sent by the bus controller.

The trigger mode may also be enabled in the local control mode by programming parameter values without depressing the ENT key. The Model 849TA will then execute the setup values in the remote mode when the Device Trigger is received.

The following setup string will recall the values from register 9 and delay execution until the GET message is received. (note: GET is the abbreviation for the GPIB Group Execute Trigger message and does not represent a series of ASCII characters. (See Table 3-3).

REC9TRG

To set up 0 volts, 400 hertz and wait for GET:

FRQ400AMP0TRG

3.6.6 HEWLETT PACKARD SERIES 80 CONTROLLER PROGRAMMING

For the following program examples the 849TA listen address is "1" and the controller interface is select code "7".

3.6.6.1 SERIES 80 CONTROLLER STATEMENTS

Table 3-8 lists some of the Series 80 Controller statements that may be useful in programming the 849TA on the GPIB. For additional statements and their descriptions refer to the Hewlett Packard I/O Programming Guide for the Series 80 Computer.

3.6.6.1.1 OUTPUT

The following program will step the 849TA program voltage from 0 volts to 130 volts in .1 volt steps:

```
10 REMOTE 7
20 FOR V=0 TO 130 STEP .1
30 OUTPUT 701; "AMP"; V
40 NEXT V
50 END
```

TABLE 3-9
STATUS BYTE VALUES

STATUS BYTE (DECIMAL)	FAULT
64	Phase A
65	Phase B
66	Phase A,B
67	Phase C
68	Phase A,C
69	Phase B,C
70	Phase A,B,C
71	Current Limit
72	Current Limit A
73	Current Limit B
74	Current Limit A,B
75	Current Limit C
76	Current Limit A,C
77	Current Limit C,B
78	Current Limit A,B,C
79	
80	Keyboard Entry 0 SRQ
81	Keyboard Entry 1 SRQ
82	Keyboard Entry 2 SRQ
83	Keyboard Entry 3 SRQ
84	Keyboard Entry 4 SRQ
85	Keyboard Entry 5 SRQ
86	Keyboard Entry 6 SRQ
87	Keyboard Entry 7 SRQ
88	Keyboard Entry 8 SRQ
89	Keyboard Entry 9 SRQ
90	Amplitude Range Limit Error
91	Amplitude Range Error
92	Frequency Range Error
93	Phase Range Error
94	Current Range Error
95	Ramp Range Error
96	Program Syntax Error
97	Bus message sent with Controller in Local
98	EXT SNC Frequency Limit
99	ROM SUM Check Error
100	Exceeds DMA buffer size

TABLE 3-10
HP SERIES 80 CONTROLLER STATEMENTS

STATEMENT	DESCRIPTION
CLEAR 7	Universally sets all instruments to their power-on states by sending the GPIB message DCL
CLEAR 701	Sets only instrument with listen address "1" to its power-on state by sending the GPIB message SDC.
LOCAL 7	Universally sets all instruments into their local control mode by deasserting REN.
LOCAL 701	Sets only instrument with listen address "1" to its local control mode by sending the GTL message.
REMOTE 7	Sets REN true.
REMOTE 701	Sets instrument with listen address "1" to remote.
ABORTIO 7	Clears all instrument interfaces to unlisten and untalk by toggeling IFC.
RESUME 7	Sets ATN false.
OUTPUT 701; "AMP"; V	Sends the data string AMP followed by the numerical value of variable V to the instrument with listen address "1".
STATUS 7,1;A	This statement reads the SRL register of the series 80 controller for the interrupt cause. This statement is necessary to clear the Service Request flag in the controller.
ENABLE INTR 7; 8	This statement allows the series 80 controller program to be interrupted when a GPIB instrument generates an SRQ.
ON INTR 7 GOSUB100	This statement will cause the program to go to an interrupt subroutine at 100.
TRIGGER 7	This statement triggers all addressed instruments by sending the GET message.
TRIGGER 701	This statement will trigger only the instrument with listen address "1" by sending the GET message.
A=SPOLL (7)	Sets variable A equal to the decimal value of the Status Byte of an instrument previously addressed to talk.
A=SPOLL (701)	Sets variable A equal to the decimal value of the Status Byte of the instrument with listen address "1".

3.6.6.1.2 TRIGGER

The following program will load the parameters of 115 volts and 400 hertz. The Model 849TA will output the parameters only after the K1 special function key of the Series 80 Controller is depressed to send the GET message.

```
10 REMOTE 701
20 OUTPUT 701 ; "AMP115 FRQ400 TRG"
30 ENABLE KBD 32+64 ! ENABLE PAUSE AND SPECIAL FUNCTION KEYS
40 ON KEY # 1 GOTO 100 ! USE KEY K1 FOR DEVICE TRIGGER
50 GOTO 40

100 TRIGGER 701
110 END
```

3.6.6.1.3 SERVICE REQUEST STATEMENTS

The program example for SRQ uses the statements STATUS, ON INTR, ENABLE INTR, and SPOLL.

The LOCAL statement in line 30 puts the 849TA into local.

The STATUS statement in line 40 is necessary to clear the Controller status register from any possible previous Service Request (SRQ) interrupts. The HP I/O Programming Manual is not clear on the use of the STATUS statement but it must be used after every SRQ and before enabling or reenabling the SRQ interrupt to prevent false SRQ indication. Line 50 causes the program to go to the interrupt subroutine at line 100.

The ENABLE INTR statement in line 60 enables the SRQ to generate an interrupt. A worthless program follows in lines 70 and 80 that executes until a SRQ is generated by the 849TA. The SRQ interrupt subroutine is between lines 100 and 210.

The STATUS statement in line 120 clears the SRQ.

Line 130 generates a Status Byte from the 849TA with listen/talk address "1". The variable A will be equal to the value of 80 through 89 for the SRQ keyboard entry of 0 through 9 respectively.

If the value is between 80 and 89 the Status byte value will be displayed with line 170.

Since the 849TA is in the local mode of operation, there will be no other error messages. If the 849TA were left in the Remote mode, other fault messages would be displayed by line 190.

```
20 ! PUT 849TA INTO LOCAL FOR KEYBOARD SRQ
30 LOCAL 701
40 STATUS 7,1;Z ! READ STATUS TO CLEAR HP SERIES 80 STATUS
REGISTER
50 ON INTR 7 GOSUB 100
60 ENABLE INTR 7;8 ! ENABLE SRQ TO GENERATE INTERRUPT
70 ! SAMPLE PROGRAM TO WAIT FOR SRQ INTERRUPT
80 GOTO 70
100 ! SERVICE REQUEST FOR DEVICE 1

110 ! USE SERIAL POLL TO DETERMINE STATUS BYTE
120 STATUS 7,1;Z ! READ STATUS TO CLEAR SRQ
130 A=SPOLL (701)
140 ! EVALUATE STATUS BYTE TO CHECK FOR SYSTEM FAULT
150 IF A>89 OR A<80 THEN GOTO 190
160 ! KEYBOARD GENERATED STATUS MESSAGE
170 DISP "THE KEYBOARD MESSAGE IS ";A
180 GOTO 200
190 DISP "THE SYSTEM FAULT MESSAGE IS ";A
200 ENABLE INTR 7;8 ! REENABLE INTERRUPT
210 RETURN
```


SECTION 4 - ADJUSTMENT PROCEDURE

4.1 GENERAL

The following adjustment procedure, or any part of it, may be performed on a routine basis to ensure that the 849TA remains within the specified performance limits. Paragraph 4.4 only needs to be performed if a related component has been replaced.

Calibration of the 849TA requires a compatible power source(s) connected as shown in figure 2-1.

4.2 RECOMMENDED TEST EQUIPMENT

Scanner	Keithley Model 705 with Model 7054 card
Digital AC Voltmeter	Keithley Model 192 with Model 1923 IEEE-488 and Model 1910 AC Converter
Frequency Counter	Philips PM 6671

4.3 PRELIMINARY STEPS

1. Connect the remote sense inputs as shown in Figure 2-1.
2. Apply power to the AC power system and allow at least fifteen minutes for temperature stabilization.
3. Monitor the AC output voltage and frequency at the power source(s) rear panel terminals. Connect channel 1 of the scanner to phase A, channel 2 to phase B and channel 3 to phase C. Connect the scanner card LO to the 849TA sense input LO at J2 pin 3 at the rear panel of the phase A source.

4.4 FREQUENCY ADJUSTMENT

1. Connect the frequency counter across the phase A output.
2. Program 100 volts and 400 Hz.
3. Check that the output frequency is $400.0000 \pm .004$ Hz.

If the frequency is not within the limit remove power from the power source. Use the Extender Assembly, Part No. 4000-718 to mount the 849TA and install the assembly into the power source.

Locate the adjustment capacitor A3C5 on the left side of the second card from the bottom of the PC card stack.

1. Reapply power to the power source.
2. Reprogram 100 volts and 400 Hz.
3. Adjust A3C5 for 400.0000 Hz.
4. Remove the power to the power source.
5. Reinstall the 849TA without the Extender Assembly.

4.5 OPEN SENSE ADJUSTMENT

1. Open the phase A, B and C sense lines by removing all connections to J2, J3 and J4 at the rear panel of the power source.
2. Program the 849TA to 100 volts. Hold the ENT key depressed - the last key stroke - to prevent the 849TA from defaulting to 5.0 volts.
3. Adjust the phase A, B and C power source gain controls for 110 volts \pm 1 volt.
4. Reconnect the remote sense inputs as shown in Figure 2-1.

4.6 FULL SCALE ADJUSTMENT

The full scale adjustment should be made either at 135.0 volts on the 135 volt range or at 270.0 volts on the 270 volt range.

1. Connect the AC voltmeter to the phase to be calibrated.
2. Program 135.0 or 270.0 volts and 400 Hz.
3. Select the CAL screen (12) by selecting the first Menu Screen, then entering the key sequence: 9,4,9,ENT. Next depress the MNU key until the Menu Screen with CAL=12 is displayed. Select the CAL screen with the key sequence: 1,2,ENT.
4. Enter the number 0 and the key A, B or C for the phase to be calibrated.
5. Depress the ENT key to begin the calibration routine.
6. When the external AC voltmeter indicates the programmed value depress the ENT key to terminate the CAL routine.

7. Repeat steps 1 through 6 for the other outputs to be calibrated.
8. If it is found that the 849TA ramps the calibration coefficient too rapidly for the external AC voltmeter a delay (DLY) value can be selected on screen 9 before starting the CAL routine.

The following keystroke example will step the phase A calibration coefficient from 10 with the delay for each step of .5 seconds.

First select the CAL screen as described in step 3. Next the keystroke sequence will perform the calibration with a delay:

```
1,0,A,PRG,9,ENT,A,0,..5,PRG,ENT
```

4.7 REMOTE CALIBRATION

The ASCII # symbol can be used with remote calibration to greatly reduce the calibration time.

The ASCII # is used in place of a calibration coefficient to start the CAL ramp to start at the existing CAL coefficient and ramp up or down for a VAL argument of 255 or 0 respectively.

The following string will cause the CAL coefficient to ramp down with a delay of .2 seconds per step:

```
CAL A # DLY.2 VAL0
```

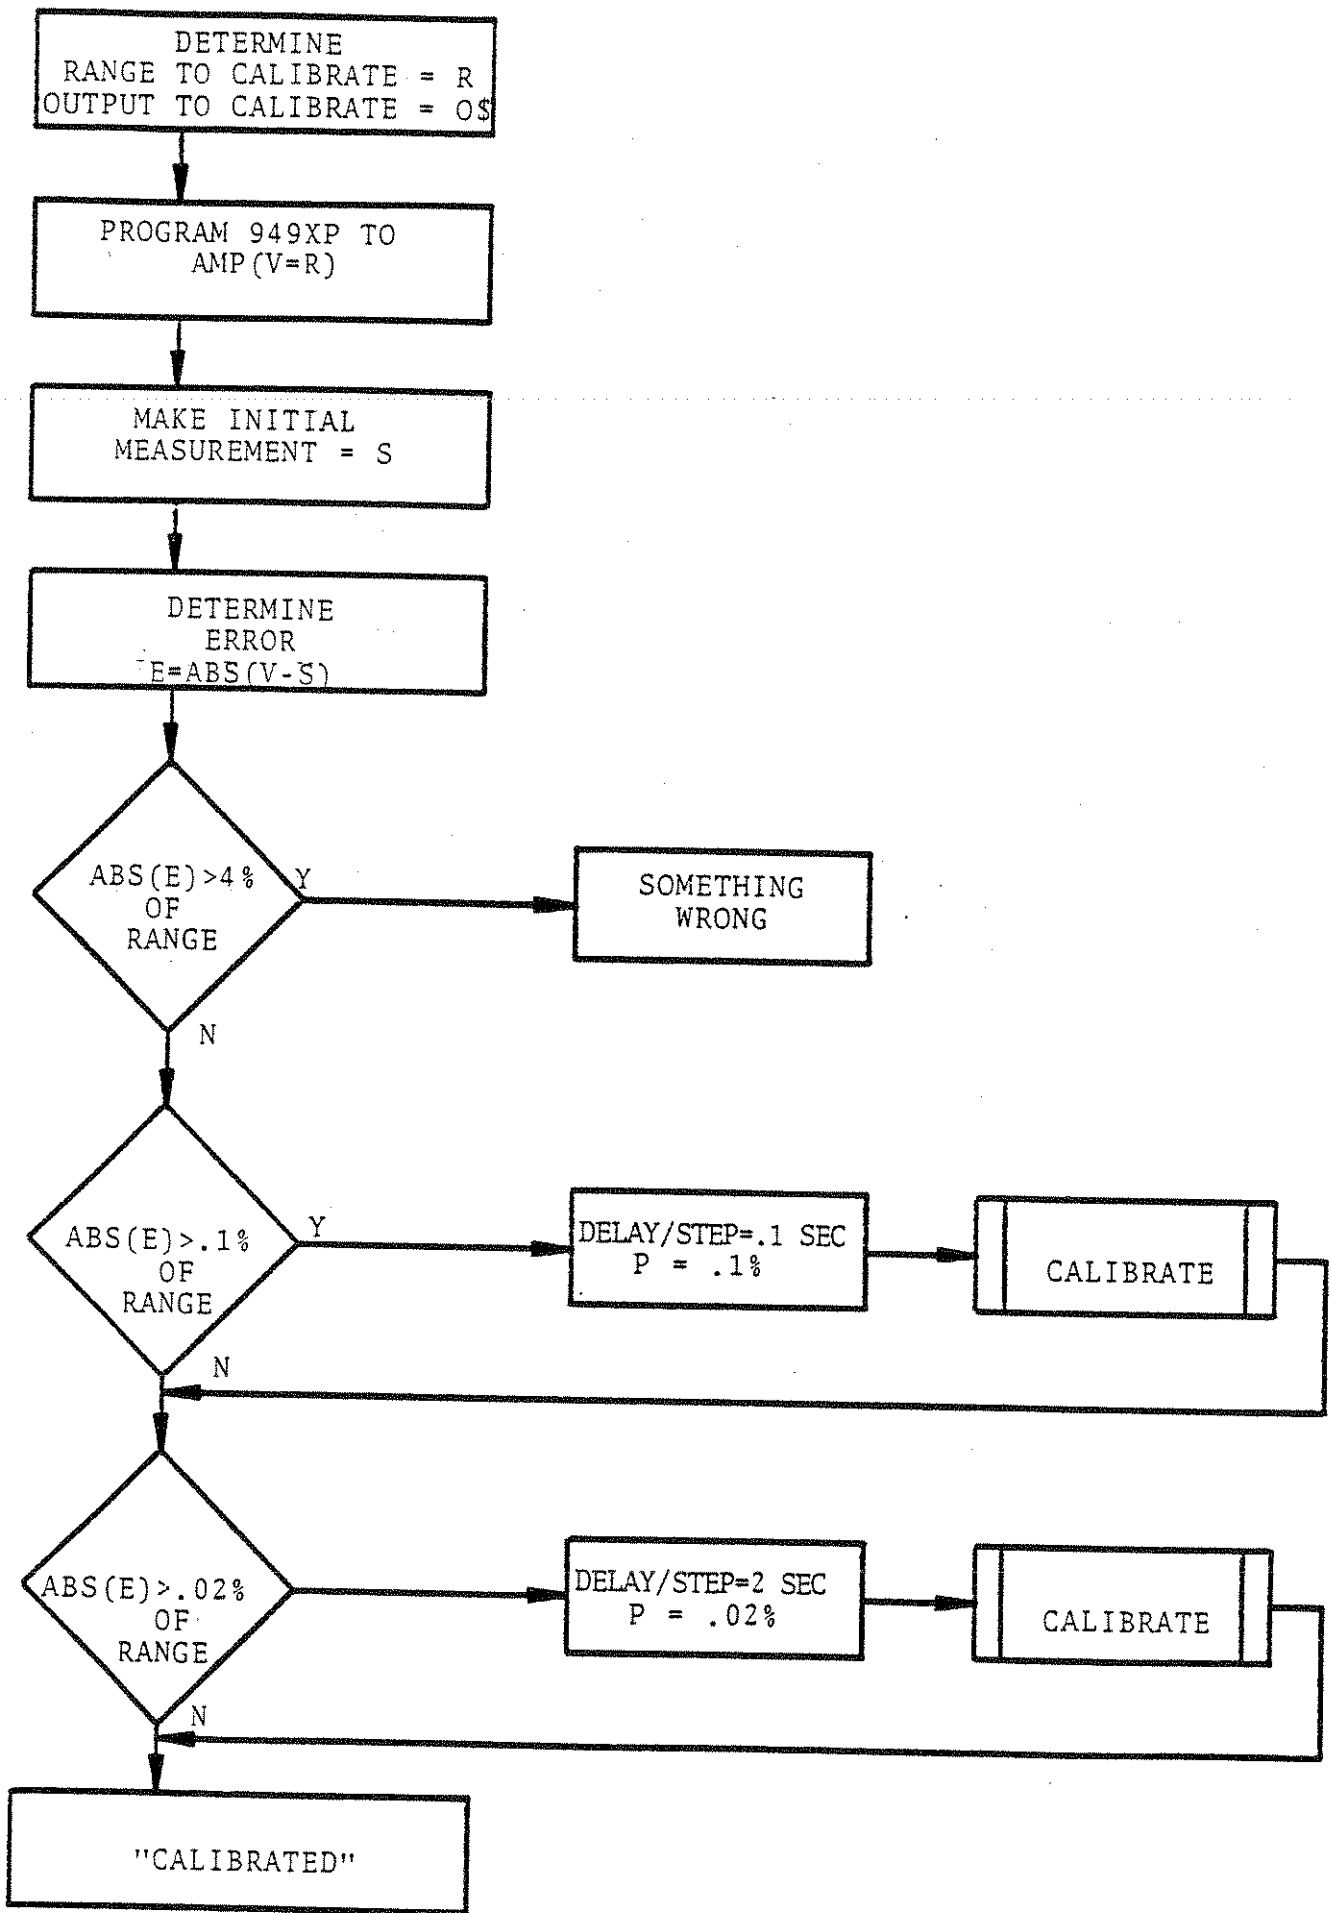


FIGURE 4.1
Remote Calibration
Flow Diagram

```

10 | 949XP CAL
20 SET TIMEOUT 7;5000 | SET BUS TIMEOUT TO 2SEC
30 CLEAR 701 | SEND SELECTED DEVICE CLEAR TO UNIT ADDRESS 1
40 CLEAR
50 ABORTIO 7
60 R=135
70 O$="A"
80 DISP "THE 949XP ADDRESS MUST BE 1"
90 DISP "THE AC DVM ADDRESS MUST BE 3"
100 DISP "THE SCANNER ADDRESS MUST BE 5"
110 DISP "PRESS K1 TO CONTINUE"
120 ON KEY# 1 GOTO 140
130 GOTO 130
140 OFF KEY#
150 DISP "WHAT VOLTAGE RANGE TO CAL 135 OR 270(DEFAULT IS ";R;")"
160 INPUT C$
170 IF C$ <> "" THEN R=VAL (C$)
174 V=R
176 IF R=270 THEN OUTPUT 703 ;"F1R5X"
178 IF R=135 THEN OUTPUT 703 ;"F1R4X"
180 CLEAR
185 DISP "DO YOU HAVE A SCANNER(Y/N)"
190 INPUT A$
195 IF POS (A$,"Y")=1 THEN GOTO 380
200 IF POS (A$,"N")=1 THEN GOTO 220
210 GOTO 185
220 DISP "WHICH OUTPUT TO CAL(DEFAULT IS ";O$;")"
230 INPUT V$
240 IF V$ <> "" THEN O$=V$
250 CLEAR
260 DISP "CONNECT THE AC DVM TO OUTPUT ";O$;" SELECT AUTORANGE."
270 DISP "PRESS K1 TO CAL."
280 ON KEY# 1 GOTO 300
290 GOTO 290
300 OFF KEY#
310 GOSUB 1000
320 | OUTPUT CALIBRATED TO WITHIN .02%
330 DISP "OUTPUT ";O$;" CALIBRATED. CAL ANOTHER OUTPUT(Y/N)"
340 INPUT A$
350 IF POS (A$,"Y")=1 THEN GOTO 220
360 LOCAL 7
370 END
380 O$="A"
385 REMOTE 7
390 OUTPUT 705 ;"RX"
400 OUTPUT 705 ;"C1X"
410 GOSUB 1000
420 O$="B"

```

```

430 OUTPUT 705 ; "RX"
440 OUTPUT 705 ; "C2X"
450 GOSUB 1000
460 O$="C"
465 OUTPUT 705 ; "RX"
470 OUTPUT 705 ; "C3X"
475 GOSUB 1000
480 LOCAL 7
485 DISP "949XP IS CALIBRATED"
490 END
500 ! CAL SUBROUTINE
510 ! DETERMINE IF OUTPUT IS WITHIN P% OF R
512 WAIT 2000 ! WAIT 2SEC FOR DVM TO SETTLE
515 GOSUB 800
520 IF ABS (E)<P/100*R THEN GOTO 600
530 ! DETERMINE DIRECTION OF CAL COEFF. RAMP
540 IF E<0 THEN C=0 ELSE C=255
545 ON TIMEOUT 7 GOTO 3000
550 OUTPUT 701 ; "CAL";O$;"#DLY";D;"STP";Z;"VAL";C
560 X=255
562 GOSUB 800
564 IF ABS (E)>ABS (X)+.005 THEN GOTO 590
566 IF ABS (E)<P/100*R THEN GOTO 590
568 WAIT D*1000
570 X=E
580 GOTO 562
590 TRIGGER 701 ! STOP CAL RAMP WITH DEVICE TRIGGER
600 RETURN
800 ! MEASURE ROUTINE
810 ENTER 703 ; S
820 S=1.0005*S ! TO COMPENSATE FOR 1K LEAD RESISTANCE
830 E=V-S
840 RETURN
1000 ! GEN CAL
1010 ! PROGRAM 949XP TO SELECTED RANGE AND AMPLITUDE
1020 OUTPUT 701 ; "FRQ400RNG";R;"AMP";V
1030 WAIT 2000 ! WAIT 2SEC FOR DVM TO SETTLE
1040 ON TIMEOUT 7 GOTO 2000
1050 GOSUB 800
1070 IF ABS (E)>.04*R THEN GOTO 3000
1080 D=.1 @ P=.1 @ Z=10 ! DLY=.1SEC FOR CAL TO APPROX. .1%
1090 GOSUB 500
1100 D=1 @ P=.02 @ Z=1 ! DLY=1SEC FOR CAL TO .02%
1110 GOSUB 500
1120 RETURN
2000 DISP "DVM IS INACTIVE. INSURE ADDRESS IS 3."
2010 GOTO 360
3000 DISP "CHECK THAT THE 949XP ADDRESS IS 1."
3010 DISP "THE MEASURED OUTPUT IS ";S
3020 GOTO 360

```


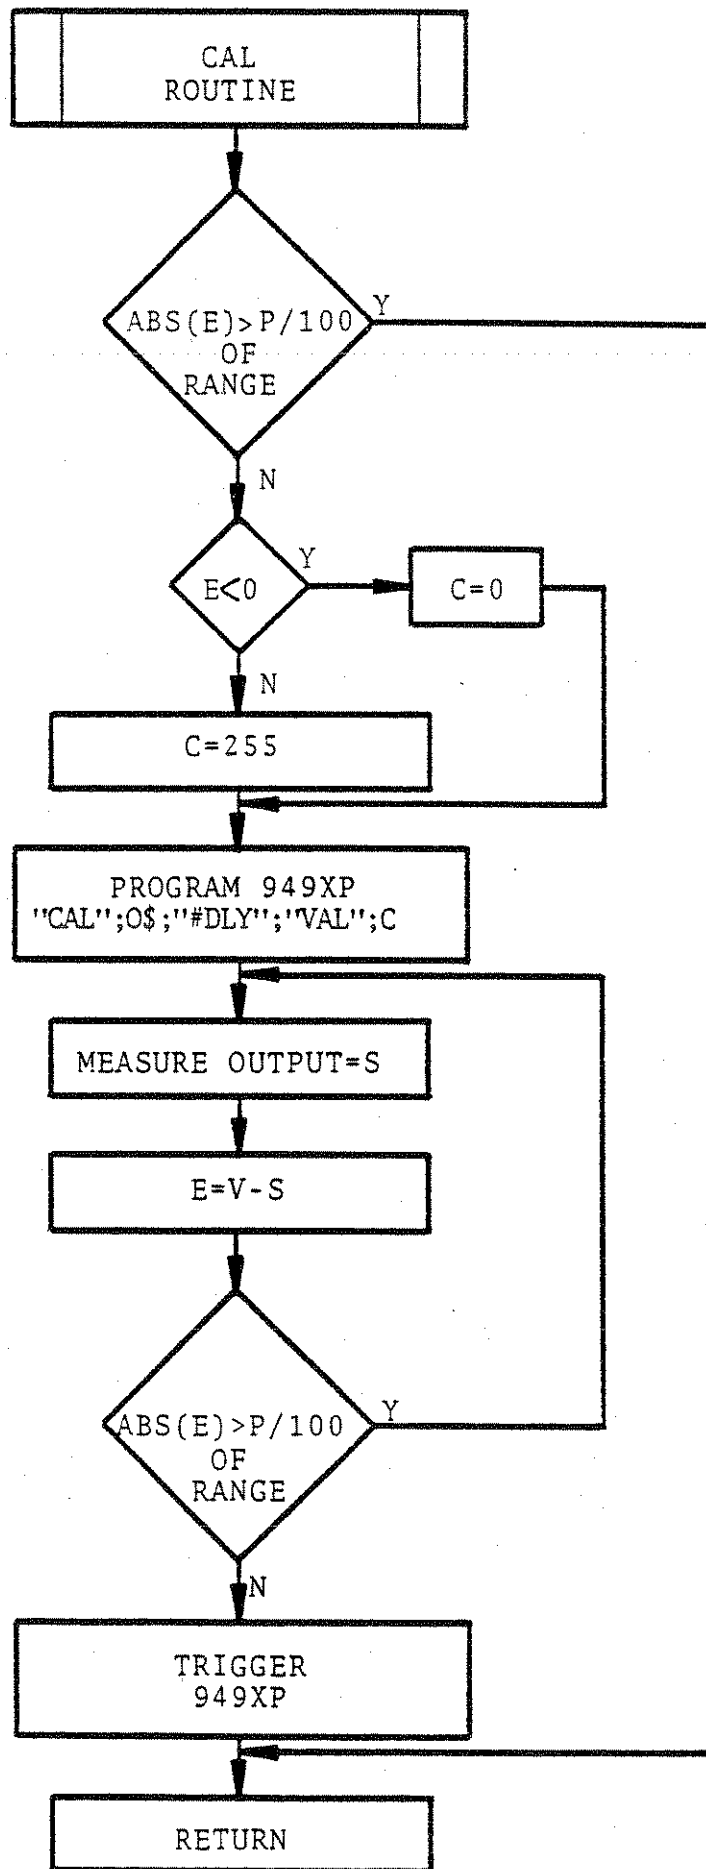


FIGURE 4-2
Calibration Subrouting
82

ENSURE THAT PIN ONE'S OF CONNECTORS ARE PROPERLY ALIGNED WITH MATING HALVES.

NOTES (UNLESS OTHERWISE SPECIFIED)

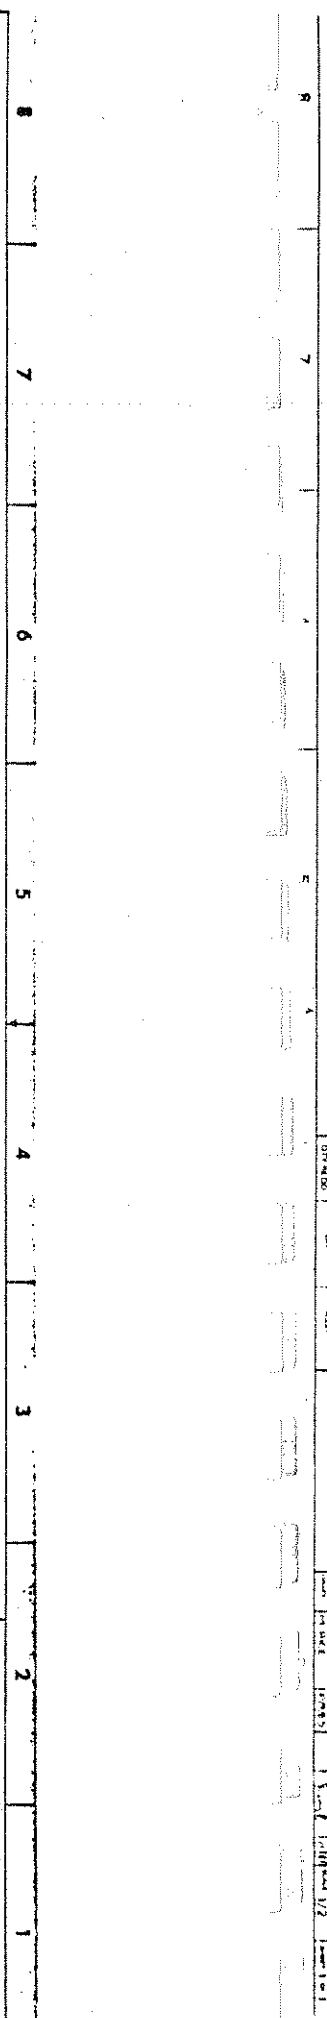


FOR PARTS LIST SEE PL 4849-406-113

REV		REVISIONS	
NO.	DATE	DESCRIPTION	BY
1		REVISED ASSEMBLY PARTS LIST	
2		REVISED ASSEMBLY PARTS LIST	

NO.	TITLE	PART OR IDENTIFYING NO.	DESCRIPTION	MATERIAL SPECIFICATION	QUANTITY	NOTE
1	TOP ASSEMBLY	8421A				
LIST OF MATERIAL						
<p>DATE OF THIS DRAWING: 11/15/67 DRAWN BY: J. L. BROWN CHECKED BY: J. L. BROWN APPROVED BY: J. L. BROWN TITLE: TOP ASSEMBLY PART OR IDENTIFYING NO.: 8421A DRAWING NO.: 4849-406-113</p>						

DATE	BY	FOR PARTS LIST SEE PL 4849-406-113
11/15/67	J. L. BROWN	

REV A ADDED ITEM 2 PLCS
 REV B ADDED 2nd PIECE ITEM 6
 JSSC
 DATE 11/18/85
 BY [Signature]
 APPR [Signature]

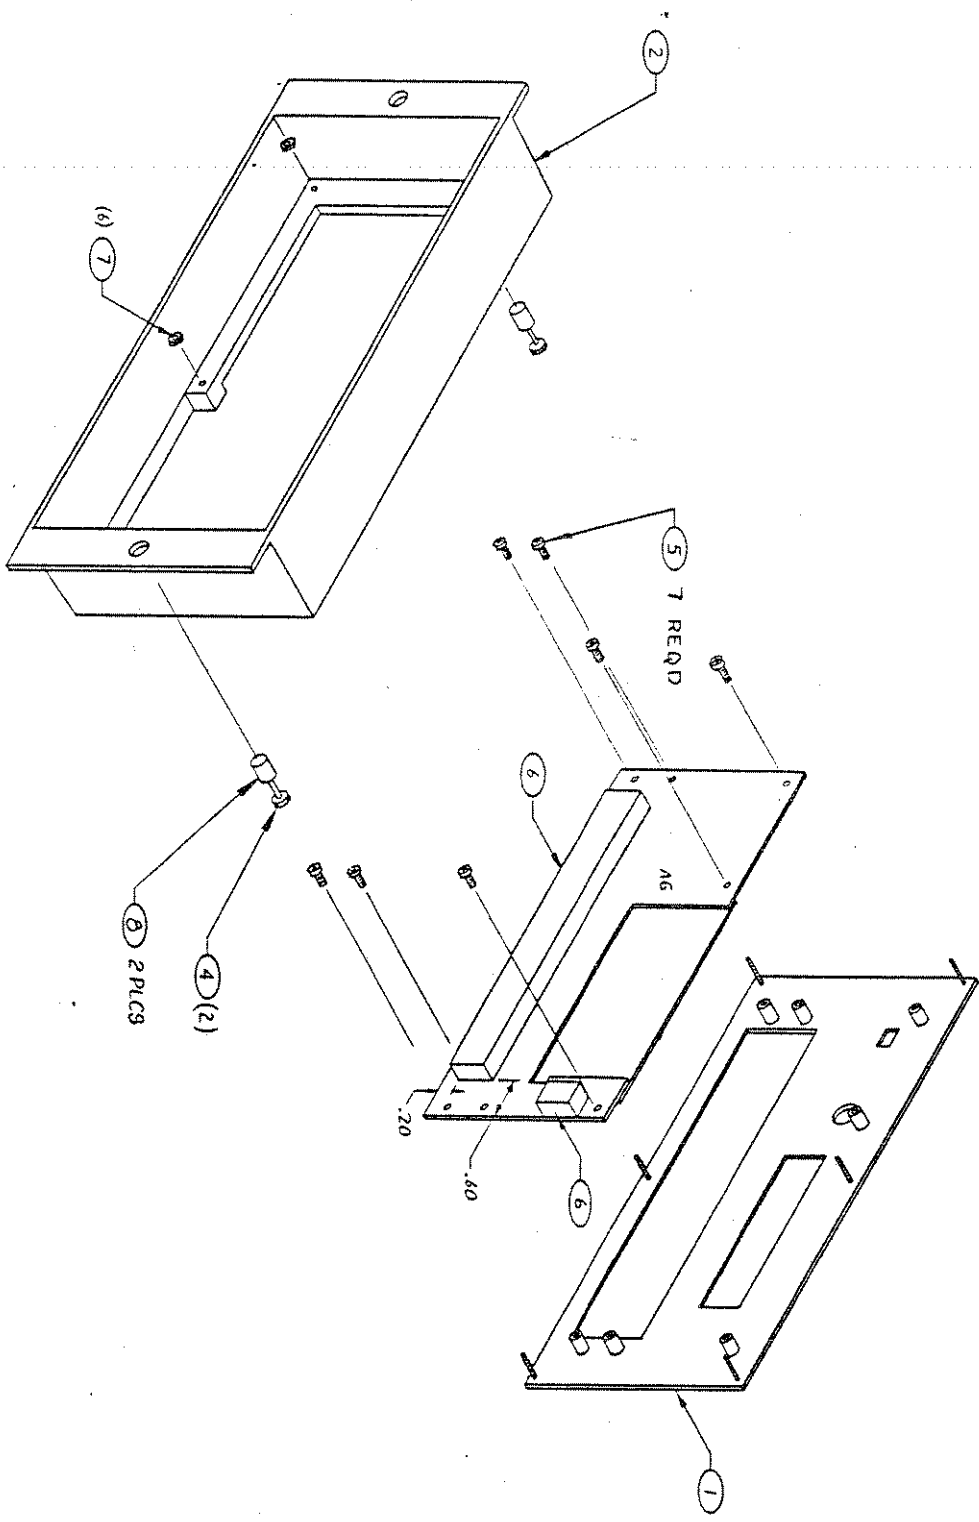

ITEM NO.	PART OR IDENTIFYING NO.	DESCRIPTION	MATERIAL - SPECIFICATION	CODE IDENT.	NOTE NO.
-1-2	ASSY	SEE PL 4849-409-1,-2			

QTY	RECD	USED	ON	NEXT ASSY
1				
1				
1				
1				
-2				
-1				

QTY	RECD	USED	ON	NEXT ASSY
1				
1				
1				
1				
-2				
-1				

FINISH	SIZE	EXCEPT AS OTHERWISE PROVIDED BY CONTRACT THESE DIMENSIONS AND SPECIFICATIONS ARE THE BASIS FOR THE FABRICATION OF THIS PART AND SHALL NOT BE REFUSED ON GROUND OF DISCREPANCY WITH THE MANUFACTURER'S STANDARD PRACTICES UNLESS THE CONTRACT SPECIFICATIONS REQUIRE OTHERWISE.
XXX	.03	
XX	.05	
X	.30	

DATE	DESIGN	CHECK	RELEASE	PROJ ENG	ADDITIONAL APPROVALS	DWG NO	SCALE	SHEET	OF
10/10/85	J.SPROUT		11/18/85	M.F.M./D.G.		4849-409	NONE	1	1

California INSTRUMENTS
 A DIVISION OF
 MARTIN TECHNOLOGICAL PRODUCTS CO., INC.
 CONTRACT NO. 16067
 CODE REV. B

NOTES: (UNLESS OTHERWISE SPECIFIED)

PARENT ITEM NO.
4849-406-1

TOP ASSY,849TA-1PH
ENGR DRAW NO. 4849-406 REV B

PAGE 1
4/01/87

SEQ NO.	COMPONENT ITEM NO.	DESCRIPTION TRUNCATED	ENGINEERING DRAWING NO.	VENDOR	QTY	UM
A2	4849-713-1	PC ASSY,MOTHER	4849-713 REV	16067	1.0	EA
A3	4849-701-1	PC ASSY,VOLT/FRQ REF BD	4849-701 REV H	16067	1.0	EA
A4	4949-705-1	PC ASSY,CPU/INTERFACE	4949-705-REV M	16067	1.0	EA
A5	4849-704-1	PC ASSY,PHASE A	4849-704 REV P	16067	1.0	EA
	1 210773	STANDOFF,6-32 X 5/8",PHEN	8158-PH-0632	06540	2.0	EA
	3 210847	STANDOFF,6-32 X 1 7/16 P	8168-PH-0632	06540	1.0	EA
	6 210258	SPACER, #6 X 3/4"	2103	83330	1.0	EA
	7 210171	SCREW,PNH,S/S,6-32X1-1/4	MS51957-35	96906	1.0	EA
	8 FS1026	SCREW,PNH,S/S,6-32X1/4	MS51957-26	96906	2.0	EA
	9 FS1073	WASHER,SPLT,S/S,#6	MS35338-136	96906	4.0	EA
10	4848-210-1	INSULATOR,PWB,BOTTOM	4848-210-1	16067	1.0	EA
12	4849-409-1	FRONT PANEL/BEZEL ASSY	4849-409 REV B	16067	1.0	EA
13	FS1038	SCREW,PNH,S/S,6-32X1	MS51957-34	96906	1.0	EA
14	FS1030	SCREW,PNH,S/S,6-32X3/8	MS51957-28	96906	1.0	EA
15	FS1038	SCREW,PNH,S/S,6-32X1	MS51957-34	96906	1.0	EA
16	210283	SCREW,PNH,S/S,2-56X1/4	MS51957-3	81349	1.0	EA
17	4848-211-102	INSULATOR	4848-211 REV	16067	1.0	EA

PARENT ITEM NO.
4849-406-3

TOP ASSY,849TA-3PH
ENGR DRAW NO. 4849-406 REV B

PAGE 1
4/01/87

SEQ NO.	COMPONENT ITEM NO.	DESCRIPTION TRUNCATED	ENGINEERING DRAWING NO.	VENDOR	QTY	UM
A1	4849-700-1	PC ASSY,PHASE B/C	4849-700 REV G	16067	1.0	EA
A2	4849-713-1	PC ASSY,MOTHER	4849-713 REV	16067	1.0	EA
A3	4849-701-1	PC ASSY,VOLT/FREQ REF BD	4849-701 REV H	16067	1.0	EA
A4	4949-705-1	PC ASSY,CPU/INTERFACE	4949-705-REV M	16067	1.0	EA
A5	4849-704-1	PC ASSY,PHASE A	4849-704 REV P	16067	1.0	EA
1	210773	STANDOFF,6-32 X 5/8",PHEN	8158-PH-0632	06540	3.0	EA
2	210774	SPACER, #6 X 5/8",PHEN	9230-PH-140	06540	1.0	EA
3	210775	SPACER, #6 X 17/16",PHEN	9243-PH-140	06540	1.0	EA
6	210258	SPACER, #6 X 3/4"	2103	83330	1.0	EA
7	210171	SCREW,PNH,S/S,6-32X1-1/4	MS51957-35	96906	1.0	EA
8	FS1026	SCREW,PNH,S/S,6-32X1/4	MS51957-26	96906	2.0	EA
9	FS1073	WASHER,SPLT,S/S,#6	MS35338-136	96906	4.0	EA
10	4848-210-1	INSULATOR,PWB,BOTTOM	4848-210-1	16067	1.0	EA
12	4849-409-1	FRONT PANEL/BEZEL ASSY	4849-409 REV B	16067	1.0	EA
13	FS1038	SCREW,PNH,S/S,6-32X1	MS51957-34	96906	1.0	EA
14	FS1030	SCREW,PNH,S/S,6-32X3/8	MS51957-28	96906	1.0	EA
15	210830	SCREW,PNH,S/S,6-32X1-3/4	MS51957-37	81349	1.0	EA
16	210283	SCREW,PNH,S/S,2-56X1/4	MS51957-3	81349	1.0	EA
17	4848-211-102	INSULATOR	4848-211 REV	16067	1.0	EA

PARENT ITEM NO.
4849-409-1

FRONT PANEL/BEZEL ASSY
ENGR DRAW NO. 4849-409 REV B

PAGE 1
10/23/86

SEQ NO.	COMPONENT ITEM NO.	DESCRIPTION TRUNCATED	ENGINEERING DRAWING NO.	VENDOR	QTY	UM
A6	4849-712-1	PC ASSY, DISPLAY	4849-712 REV B	16067	1.0	EA
1	4849-208-1	PANEL, FRONT W/4849-208	4849-208-1	16067	1.0	EA
2	4848-201-1	BEZEL, FRONT PANEL	4848-201-1	16067	1.0	EA
4	210755	FSTNR, CAPTIVE SCREW	PFK-632-62	46384	2.0	EA
5	FS1009	SCREW, PNH, S/S, 4-40X3/16	MS51957-12	81349	7.0	EA
6	FS4020	RUBBER STRIP, ADHESIVE	1/2WIDEX1/4DEEP	81349	5.5	IN
7	210099	NUT, HEX, S/S, 2-56	MS35649-224	81349	6.0	EA
8	FS4022	ADHESIVE/SEALANT, LOCTIT	495-95	08028	.0	OZ

ONE YEAR WARRANTY

CALIFORNIA INSTRUMENTS CORPORATION warrants each instrument manufactured by them to be free from defects in material and workmanship for a period of one year from the date of shipment to the original purchaser. Excepted from this warranty are fuses and batteries which carry the warranty of their original manufacturer where applicable. CALIFORNIA INSTRUMENTS will service, replace, or adjust any defective part or parts, free of charge, when the instrument is returned freight prepaid, and when examination reveals that the fault has not occurred because of misuse, abnormal conditions of operation, user modification, or attempted user repair. Equipment repaired beyond the effective date of warranty or when abnormal usage has occurred will be charged at applicable rates. CALIFORNIA INSTRUMENTS will submit an estimate for such charges before commencing repair, if so requested.

PROCEDURE FOR SERVICE

If a fault develops, notify CALIFORNIA INSTRUMENTS or its local representative, giving full details of the difficulty, including the model number and serial number. On receipt of this information, service information or a Return Material Authorization (RMA) number will be given. Add RMA number to shipping label. Pack instrument carefully to prevent transportation damage, affix label to shipping container, and ship freight prepaid to the factory. CALIFORNIA INSTRUMENTS shall not be responsible for repair of damage due to improper handling or packing. Instruments returned without RMA No. or freight collect will be refused. Instruments repaired under Warranty will be returned by prepaid surface freight. Instruments repaired outside the Warranty period will be returned freight collect, F.O.B. CALIFORNIA INSTRUMENTS, San Diego, CA. If requested, an estimate of repair charges will be made before work begins on repairs not covered by the Warranty.

DAMAGE IN TRANSIT

The instrument should be tested when it is received. If it fails to operate properly, or is damaged in any way, a claim should be filed immediately with the carrier. A full report of the damage should be obtained by the claim agent, and a copy of this report should be forwarded to us. CALIFORNIA INSTRUMENTS will prepare an estimate of repair cost and repair the instrument when authorized by the claim agent. Please include model number and serial number when referring to the instrument.

