

iR105

SERVICE MANUAL

REVISION 0

Canon

JULY 2001

FY8-13HF-000

Application

This manual has been issued by Canon Inc. for qualified persons to learn technical theory, installation, maintenance, and repair of products. This manual covers all localities where the products are sold. For this reason, there may be information in this manual that does not apply to your locality.

Corrections

This manual may contain technical inaccuracies or typographical errors due to improvements or changes in products. When changes occur in applicable products or in the contents of this manual, Canon will release technical information as the need arises. In the event of major changes in the contents of this manual over a long or short period, Canon will issue a new edition of this manual.

The following paragraph does not apply to any countries where such provisions are inconsistent with local law.

Trademarks

The product names and company names used in this manual are the registered trademarks of the individual companies.

Copyright

This manual is copyrighted with all rights reserved. Under the copyright laws, this manual may not be copied, reproduced or translated into another language, in whole or in part, without the written consent of Canon Inc.

COPYRIGHT © 2001 CANON INC.

Printed in Japan











Imprimé au Japon

Caution

Use of this manual should be strictly supervised to avoid disclosure of confidential information.

1 Symbols Used

This documentation uses the following symbols to indicate special information:

| Symbol | Description |
|--|---|
|  | Indicates an item of a non-specific nature, possibly classified as Note, Caution, or Warning. |
|  | Indicates an item requiring care to avoid electric shocks. |
|  | Indicates an item requiring care to avoid combustion (fire). |
|  | Indicates an item prohibiting disassembly to avoid electric shocks or problems. |
|  | Indicates an item requiring disconnection of the power plug from the electric outlet. |
|  Memo | Indicates an item intended to provide notes assisting the understanding of the topic in question. |
|  REF. | Indicates an item of reference assisting the understanding of the topic in question. |
|  | Provides a description of a service mode. |
|  | Provides a description of the nature of an error indication. |
|  | Refers to the Copier Basics Series for a better understanding of the contents. |

2 Outline of the Manual

This Service Manual provides basic facts and figures about the iR105 and the side paper deck designed as an accessory to the copier; use the information for servicing the machine in the field, thus ensuring the initial product quality.

For the DADF and other accessories, separate service manuals are made available for information, refer to their respective manuals.

This Service Manual consists of the following chapters:


| | |
|---------------------------------------|---|
| Chapter 1 Introduction: | features, specifications, names of parts, operation of the machine |
| Chapter 2 New Functions: | differences from the GP605 (iR600) in terms of various mechanisms, disassembly/assembly of mechanical systems |
| Chapter 3 Main Controller: | outline of the main controller |
| Chapter 4 Installation: | requirements for the site of installation, installation procedure, relocation procedures, and installation of accessories |
| Chapter 5 Maintenance and Inspection: | periodically replaced parts, consumables and durables tables, scheduled servicing chart |
| Chapter 6 Troubleshooting: | standards, adjustments, arrangement of electrical components, troubleshooting image faults, troubleshooting malfunctions, upgrading |
| Appendix: | general timing chart, general circuit diagram |
| Service Modes | |
| Error Codes | |

The contents of this Service Manual are subject to change for product improvement, and major changes will be communicated in the form of Service Information bulletins.

All service persons are expected to be familiar with the contents of this Service Manual and the Service Information bulletins, equipping themselves with the ability to isolate and correct possible faults in the machine.

3 iR105 System Configuration

The iR105 may be configured with the following options:

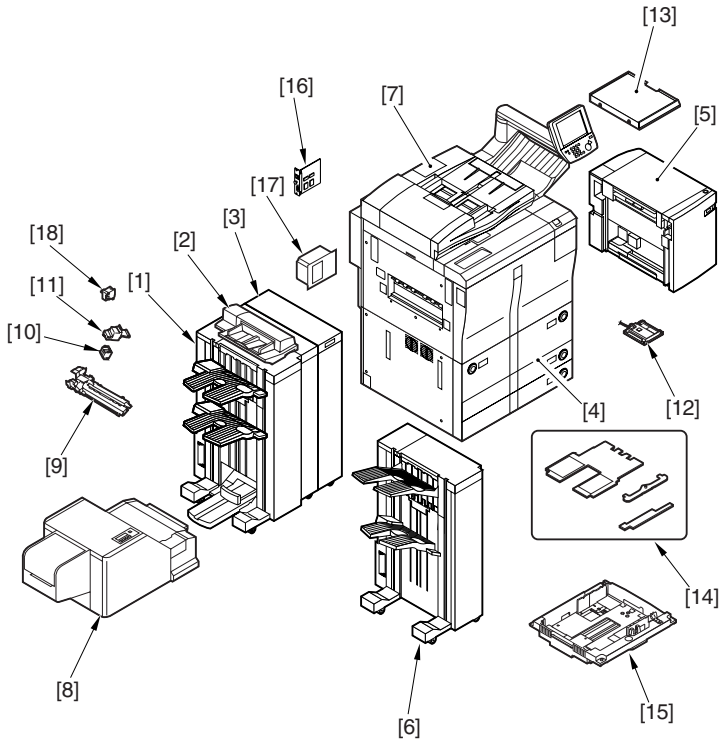

F00-300-01


- | | |
|-----------------------------|--|
| [1] Saddle Finisher-K3N/K4N | [11] Stapler Cartridge-H1 |
| [2] Inserter-B1 | [12] Card Reader-D1 |
| [3] Paper Folding Unit-C1 | [13] Original Holder-D1 |
| [4] iR105 | [14] Index Paper Attachment-A1 |
| [5] Side Paper Deck-N1 | [15] FL Cassette-P4 |
| [6] Finisher-K1N/K2N | [16] Network LIPS Printer Kit |
| [7] DADF-J1 (standard) | [17] NE Controller-A1/Copy Data Controller-B1/B2/Copy Data Controller-A1 |
| [8] Trimmer-A1 | [18] Stapler-D2 |
| [9] Puncher Unit-E1/E2 | |
| [10] Stapler-G1/Stapler-H1 | |

Not all products are necessarily available in all sales areas.

**Points to Note When Turning Off the Main Power Switch**

Be sure to turn off the main power switch and disconnect the power plug before disassembly work; in addition, keep the following in mind.

1. If you turn off the main power switch while the printer function is in use, the data being processed can be lost. Check to make sure that the Operation/Memory lamp on the control panel is off before operating the main power switch.
2. Do not turn off the main power switch while downloading is taking place; otherwise, the machine may stop operating.
3. If the heater switch is turned on, the cassette heater and the drum heater will remain powered even when the main power switch is turned off.
4. Take care as some components remain powered even when the front cover is opened as long as the main power switch remains on.

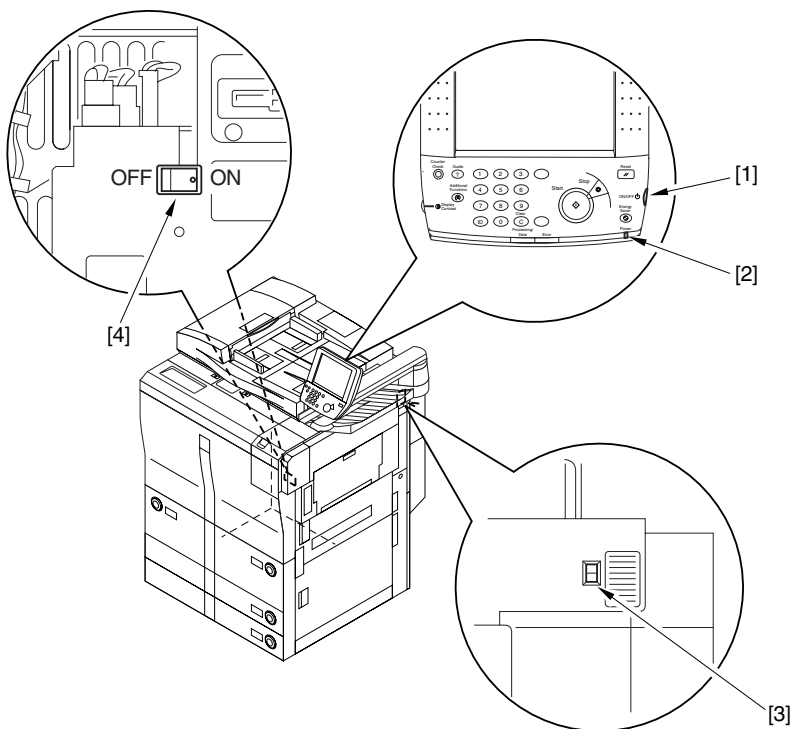

[1] Control panel power switch
[2] Operation/Memory lamp

[3] Main power switch
[4] Heater switch

F00-300-02

4 Safety

4.1 Safety of Laser Light


Laser light can prove to be harmful to the human body. The machine's laser system, however, is sealed inside a protective housing and external covers to prevent leakage of laser light to its outside, ensuring the safety of the user as long as the machine is used for its intended functions.

4.2 CDRH Ordinances

The Center for Devices and Radiological Health (CDRH) of the US Food and Drug Administration put into force ordinances related to laser products on August 2, 1976.

These ordinances apply to laser products manufactured on and after August 1, 1976, and sale of laser products is prohibited within the US unless they bear a certificate of compliance.

The following is the label that indicates compliance with the CDRH ordinances, and it must be found on all laser products sold in the US.

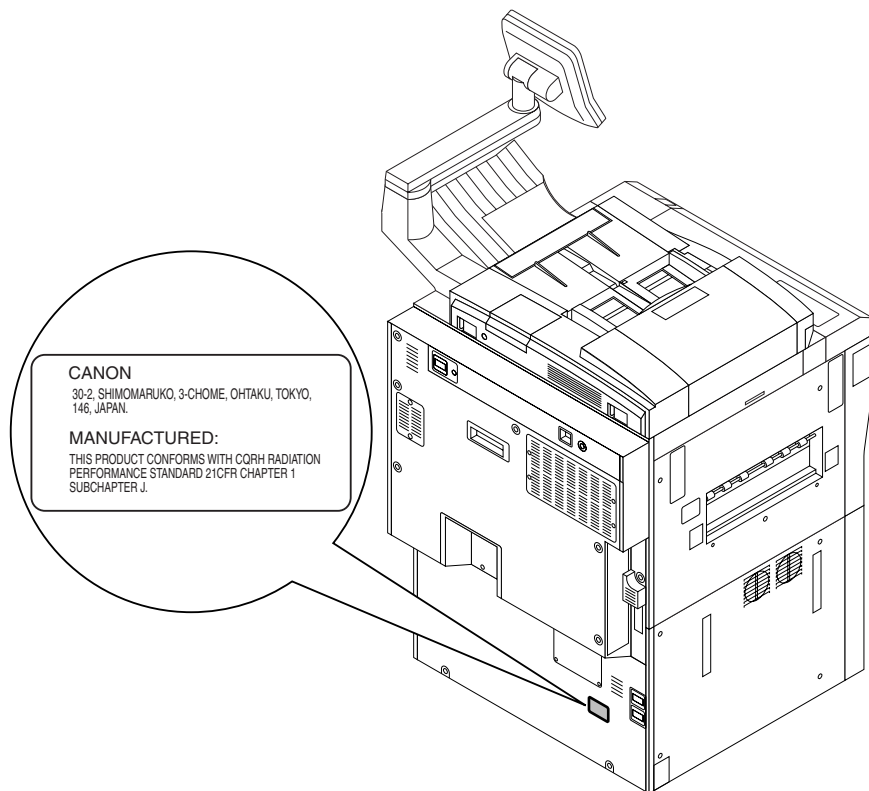

F00-402-01



The description may vary from model to model.

4.3 Handling the Laser System


You must take extra care when servicing the area around the machine's laser system, as by not bringing a high-reflectance screwdriver into the laser path.

Take such precautions as removing the watch and rings before starting the work (to prevent reflection of laser light to the eye).

The machine's laser light is red, and covers that can reflect laser light are identified by the following label. Take full care whenever servicing areas of the machine behind these covers.



This label is attached to all covers inside the machine where hazards from laser light exist.

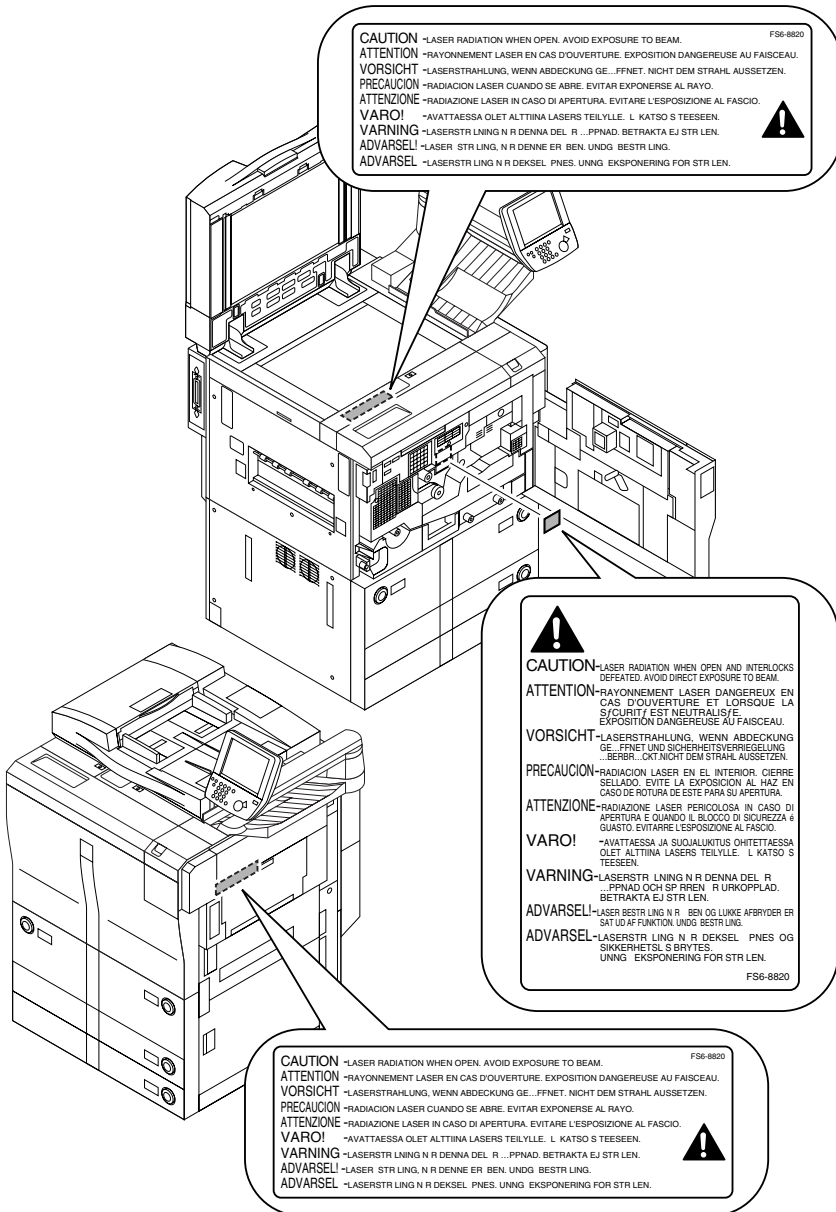

F00-403-01

4.4 Safety of Toner

The machine's toner is a non-toxic product consisting of plastic, iron, and small amounts of dyes.

If your skin or clothes have come into contact with toner, try removing as much of it as possible with dry paper tissues, and wash off with water. (Do not use warm water, as it would turn the toner jelly-like and become fused with the fibers of the fabric.)

In addition, avoid bringing toner into contact with plastic material, as it tends to dissolve easily.



Do not throw toner into fire to avoid explosion.

Contents

CHAPTER 1 INTRODUCTION

| | | | |
|---|-----|--------------------------------|------|
| 1 Features | 1-1 | 2.1 Copier..... | 1-3 |
| 1.1 High Speed, High Quality | 1-1 | 2.1.1 Type | 1-3 |
| 1.2 High Durability, High Reliability | 1-1 | 2.1.2 System | 1-3 |
| 1.3 High-Performance Controller, Large-Capacity Hard Disk | 1-1 | 2.1.3 Functions | 1-4 |
| 1.4 Ease of Operation | 1-1 | 2.1.4 Others | 1-11 |
| 1.5 Large-Capacity Paper Source | 1-1 | 2.2 Side Paper Deck-N1 | 1-14 |
| 1.6 Various Delivery Processing (with options) | 1-2 | 3 Names of Parts | 1-15 |
| 1.7 High-Level Printer Functions to Support Networking Requirements | 1-2 | 3.1 External View | 1-15 |
| 2 Specifications | 1-3 | 3.2 Cross Section | 1-18 |
| | | 4 Operation | 1-20 |
| | | 4.1 Power Switch | 1-20 |
| | | 4.2 Control Panel | 1-21 |
| | | 4.3 Extension Mode Items | 1-22 |
| | | 4.4 User Mode | 1-23 |

CHAPTER 2 NEW FUNCTION

| | | | |
|---|------|--|------|
| 1 Basic Construction | 2-1 | 2.9.2 Scanner Drive Assembly | 2-17 |
| 1.1 Outline of the Basic Construction | 2-1 | 2.9.3 PCBs | 2-24 |
| 1.2 Wiring Diagram of the Major PCBs | 2-2 | 2.9.4 Others | 2-29 |
| 2 Original Exposure System | 2-3 | 3 Image Processing System | 2-37 |
| 2.1 Outline of the Original Exposure System | 2-3 | 3.1 Outline of the Image Processing System | 2-37 |
| 2.2 Changes Made to the Original Exposure System | 2-4 | 3.2 Changes Made to the Image Processing System | 2-38 |
| 2.3 Enlargement/Reduction | 2-5 | 3.3 4-Channel High-Speed Reading CCD | 2-39 |
| 2.4 Preventing Overheating of the Scanner Motor | 2-6 | 3.4 CCD Adjustment | 2-40 |
| 2.5 Arrangement of PCBs | 2-7 | 3.5 Analog Image Processing | 2-41 |
| 2.6 Stabilizing the Scanning Lamp | 2-8 | 3.6 Digital Image Processing | 2-42 |
| 2.7 Detecting the State (open/closed) of the ADF | 2-8 | 3.7 Detecting the Orientation of Originals | 2-43 |
| 2.8 Detecting Dust in Stream Reading | 2-10 | 3.8 Disassembly/Assembly | 2-44 |
| 2.9 Disassembly/Assembly | 2-12 | 3.8.1 CCD Unit | 2-45 |
| 2.9.1 No. 1 Mirror Base Assembly | 2-13 | 3.8.2 Hard Disk | 2-47 |
| | | 4 Laser Exposure System | 2-51 |
| | | 4.1 Outline of the Laser Exposure System | 2-51 |
| | | 4.2 Changes Made to the Laser Exposure System | 2-53 |

| | | | | | |
|-------|--|-------|-------|--|-------|
| 4.3 | Disassembly/Assembly | 2-54 | 6.6.6 | Others | 2-103 |
| 4.3.1 | Laser Unit | 2-55 | 7 | Fixing System | 2-105 |
| 4.3.2 | BD Unit | 2-56 | 7.1 | Outline of the Fixing System | 2-105 |
| 5 | Image Formation System | 2-59 | 7.2 | Changes Made to the Fixing System | 2-107 |
| 5.1 | Outline of the Image Formation System | 2-59 | 7.3 | Fixing Temperature Control ... | 2-109 |
| 5.2 | Changes Made to the Image Formation System | 2-61 | 7.4 | Transparency Mode | 2-110 |
| 5.3 | Addition of the Pre-Transfer Exposure LED | 2-62 | 7.5 | Thick Paper Mode | 2-111 |
| 5.4 | Measures Against Overheating of the Developing Unit | 2-62 | 7.6 | Power Save Mode | 2-112 |
| 5.5 | Addition of the Developing Fan | 2-62 | 7.7 | Detecting an Error | 2-113 |
| 5.6 | Modifying the Developing Cylinder Cover | 2-63 | 7.8 | Down Sequence Control | 2-114 |
| 5.7 | Preventing Adhesion of Toner to the Cleaning Blade | 2-64 | 7.9 | Disassembly/Assembly | 2-115 |
| 5.8 | Disassembly/Assembly | 2-65 | 7.9.1 | Fixing Heater and the Control Parts | 2-116 |
| 5.8.1 | Process Unit | 2-66 | 7.9.2 | Fixing Roller Assembly ... | 2-122 |
| 5.8.2 | Drum Cleaner Unit | 2-71 | 7.9.3 | Delivery Assembly | 2-125 |
| 5.8.3 | Charging Wires | 2-74 | 7.9.4 | Paper Sensors | 2-128 |
| 5.8.4 | Area Around the Process Unit | 2-80 | 8 | Externals/Auxiliary Controls | 2-131 |
| 6 | Pickup/Feeding System | 2-83 | 8.1 | Changes Made to Externals/ Auxiliary Controls | 2-131 |
| 6.1 | Outline of the Pickup/Feeding System | 2-83 | 8.2 | Fans | 2-132 |
| 6.2 | Changes Made to the Pickup/ Feeding System | 2-84 | 8.3 | Sequence of Fan Operation ... | 2-134 |
| 6.3 | Optical Sensors | 2-86 | 8.4 | Disassembly/Assembly | 2-136 |
| 6.4 | Image Write Start Sensor | 2-86 | 8.4.1 | External Covers | 2-137 |
| 6.5 | Index Paper Attachment | 2-88 | 8.4.2 | Control Panel | 2-145 |
| 6.6 | Disassembly/Assembly | 2-89 | 8.4.3 | Fans | 2-153 |
| 6.6.1 | Manual Feed Tray Assembly | 2-90 | 8.4.4 | Drive Assembly | 2-166 |
| 6.6.2 | Cassette Pickup Assembly | 2-94 | 8.4.5 | Switches | 2-170 |
| 6.6.3 | Vertical Path Roller Assembly | 2-96 | 8.4.6 | PCBs | 2-172 |
| 6.6.4 | Registration Feed Assembly | 2-99 | 8.4.7 | Others | 2-184 |
| 6.6.5 | Duplex Unit | 2-100 | 9 | Side Paper Deck-N1 | 2-187 |
| | | | 9.1 | Outline of the Side Paper Deck | 2-187 |
| | | | 9.2 | Changes made to the Side Paper Deck | 2-189 |
| | | | 9.3 | Optical Sensors | 2-190 |
| | | | 9.4 | Disassembly/Assembly | 2-191 |
| | | | 9.4.1 | Removing the Deck Pickup Sensor Unit | 2-192 |
| | | | 9.4.2 | Removing the Deck Feed Sensor Unit | 2-193 |

CHAPTER 3 MAIN CONTROLLER

| | | | |
|---|------|--|------|
| 1 Basic Operation | 3-1 | 2.3.2 SDRAM | 3-10 |
| 1.1 Functional Construction | 3-1 | 2.4 Output Image Processing | 3-11 |
| 1.2 Outline of the Electrical Circuitry | 3-2 | 2.4.1 Smoothing | 3-11 |
| 1.2.1 Outline | 3-2 | 2.4.2 Thickening (PDL output only) | 3-11 |
| 1.2.2 Main Controller PCB | 3-2 | 2.4.3 Binary-Binary Conversion (read image output only) ... | 3-11 |
| 1.2.3 Hard Disk Drive | 3-2 | 3 Soft Counters | 3-12 |
| 1.3 Start-Up Sequence | 3-4 | 4 Controlling the Power Supply | 3-14 |
| 1.3.1 Outline | 3-4 | 4.1 Outline | 3-14 |
| 1.3.2 Start-Up Sequence | 3-5 | 4.2 Power Supply Mode | 3-14 |
| 1.3.3 Construction of the System Software | 3-6 | 4.3 Standby Mode (normal operation) | 3-14 |
| 1.4 Inputs/Outputs the Major PCBs | 3-7 | 4.4 Power Save Mode | 3-14 |
| 1.4.1 Connection Diagram of the Major PCBs | 3-7 | 4.5 Low Power Mode | 3-15 |
| 2 Digital Image Processing | 3-8 | 4.5.1 Shift from Standby Mode (standby → low power) | 3-15 |
| 2.1 Outline | 3-8 | 4.5.2 Shift to Standby Mode (low power → standby) | 3-15 |
| 2.2 Input Image Processing | 3-9 | 4.6 Sleep Mode | 3-15 |
| 2.2.1 Image Data from the Reader Unit | 3-9 | 4.6.1 Shift from Standby Mode (standby → sleep) | 3-15 |
| 2.2.2 Enlargement/Reduction (main scanning direction) | 3-9 | 4.6.2 Shift from Low-Power Mode (low power → sleep) | 3-15 |
| 2.2.3 Edge Emphasis | 3-9 | 4.6.3 Return to Standby Mode (sleep → standby) | 3-15 |
| 2.2.4 Edit Processing | 3-9 | 4.7 OFF Mode | 3-16 |
| 2.2.5 Density Conversion (LUT) | 3-9 | 4.7.1 Shift from Standby Mode (standby → OFF mode) | 3-16 |
| 2.2.6 Binary Processing (error diffusion method T-BIC) | 3-9 | 4.7.2 Shift from Low-Power Mode (low-power → OFF mode) | 3-16 |
| 2.2.7 Binary (dither screen method) | 3-10 | 4.7.3 Return to Standby Mode (OFF mode → standby) | 3-16 |
| 2.3 Controlling the Image Memory | 3-10 | 4.8 Power Supply OFF Mode | 3-16 |
| 2.3.1 Compression/Expansion, Rotation, and Enlargement/ Reduction | 3-10 | | |

CHAPTER 4 INSTALLATION

| | | | |
|--|------|--|------|
| 1 Selecting the Site | 4-1 | 2.11 Cassette | 4-32 |
| 2 Unpacking and Installation | 4-4 | 2.12 Index Paper Attachment | 4-33 |
| 2.1 Points to Note Before Starting the Work | 4-4 | 2.13 Attaching the Labels, Setting Paper, Checking Images/Operations, and User Mode | 4-34 |
| 2.1.1 Attachments | 4-5 | 2.14 Changing the Paper Size for the Front Deck (right, left) | 4-38 |
| 2.2 Unpacking | 4-6 | 3 Relocating the Machine | 4-40 |
| 2.3 Mounting the Scanner | 4-11 | 4 Installing the Card Reader-D1 | 4-41 |
| 2.4 Installing the Fixing Assembly | 4-12 | 4.1 Installing the Card Reader-D1 | 4-41 |
| 2.5 Mounting the Charging Assemblies | 4-14 | 5 Installing the NE Controller-A1/ NE Controller-B1/Copy Data Controller-A1 | 4-46 |
| 2.6 Checking the Developing Assembly | 4-19 | 5.1 Installing the NE Controller-A1/ NE Controller-B1/Copy Data Controller-A1 | 4-46 |
| 2.7 Mounting the Pickup Assembly | 4-21 | | |
| 2.8 Mounting the Control Panel | 4-23 | | |
| 2.9 Supplying the Toner | 4-29 | | |
| 2.10 Mounting the ADF | 4-31 | | |

CHAPTER 5 MAINTENANCE AND INSPECTION

| | | | |
|--|-----|----------------------------------|------|
| 1 Periodically Replaced Parts | 5-1 | 4 Scheduled Service Items | 5-12 |
| 2 Guide to Replacement of Durables | 5-3 | 4.1 Copier | 5-12 |
| 2.1 Copier | 5-3 | 4.2 Scheduled Service Work | 5-16 |
| 2.2 Side Paper Deck | 5-7 | 4.2.1 Work 1 | 5-16 |
| 3 Scheduled Service Chart | 5-8 | 4.2.2 Work 2 | 5-19 |

CHAPTER 6 TROUBLESHOOTING

| | | | |
|--|-----|---|------|
| 1 Guide to the Troubleshooting Tables | 6-1 | 2.1.1 Adjusting the Image Position for Printer Output | 6-9 |
| 1.1 Image Adjustment Basic Procedure | 6-3 | 2.1.2 Adjusting the Image Position of Copier Output (book mode) | 6-14 |
| 1.1.1 Making Pre-Checks | 6-3 | 2.1.3 Adjusting the Image Position of Copier Output (ADF mode) | 6-17 |
| 1.1.2 Making Checks on the Printer Side (1/2) | 6-4 | 2.2 Scanning System | 6-18 |
| 1.1.3 Making Checks on the Printer Side (2/2) | 6-5 | 2.2.1 Replacing the Scanner Drive Cable | 6-18 |
| 1.1.4 Making Checks on the Scanner Side | 6-6 | 2.2.2 Adjusting the Scanner Mirror Base | 6-18 |
| 2 Standards and Adjustments | 6-9 | | |
| 2.1 Image Adjustment-Related Items | 6-9 | | |

| | | | | | |
|--------|---|------|--------|---|------|
| 2.2.3 | When Replacing the Standard White Plate ... | 6-18 | 2.4.12 | Position the Fixing/ Feeder Unit Locking Solenoid (SL4) | 6-30 |
| 2.2.4 | When Replacing the Scanning Lamp | 6-18 | 2.4.13 | Position of the Multifeed Latch Solenoid (SL6) | 6-31 |
| 2.3 | Image Formation System | 6-19 | 2.4.14 | Position of the Deck (right) Pickup Solenoid (SL7) | 6-32 |
| 2.3.1 | Stringing the Grid Wire of the Primary Charging Assembly | 6-19 | 2.4.15 | Position of the Deck (Left) Pickup Solenoid (SL8) | 6-33 |
| 2.3.2 | Stringing the Charging Wire of the Charging Assemblies | 6-19 | 2.4.16 | Position of the Cassette 3/4 Pickup Solenoid (SL9/10) | 6-34 |
| 2.3.3 | Mounting the Drum Cleaning Blade | 6-19 | 2.4.17 | Position of the Side Paper Deck Pickup Roller Releasing Solenoid | 6-35 |
| 2.4 | Pickup/Feeding System | 6-20 | 2.4.18 | Fitting the Side Guide Timing Belt of the Manual Feed Tray Assembly | 6-35 |
| 2.4.1 | Orientation of the Deck/ Cassette Pickup Roller | 6-20 | 2.4.19 | Fitting the Drive Belt | 6-36 |
| 2.4.2 | Orientation of the Deck/ Cassette Separation Roller .. | 6-21 | 2.5 | Fixing System | 6-37 |
| 2.4.3 | Orientation of the Feeding Roller of the Deck/Cassette Pickup Assembly | 6-21 | 2.5.1 | Points to Note When Mounting the Fixing Heater | 6-37 |
| 2.4.4 | Orientation of the Pickup Roller of the Manual Feed Tray/Side Paper Deck | 6-22 | 2.5.2 | Adjusting the Lower Roller Pressure (nip) | 6-38 |
| 2.4.5 | Orientation of the Feeding Roller of the Manual Feed Tray | 6-23 | 2.6 | Laser Exposure System | 6-39 |
| 2.4.6 | Orientation of the Feeding Roller of the Side Paper Deck | 6-23 | 2.6.1 | When Replacing the Laser Unit | 6-39 |
| 2.4.7 | Adjusting the Pressure of the Deck/Cassette Separation Roller | 6-24 | 2.6.2 | Checking the Laser Power | 6-39 |
| 2.4.8 | Adjusting the Pressure of the Pickup/Feeding Roller of the Manual Feed Tray | 6-25 | 2.7 | Electrical Parts-Related Items | 6-42 |
| 2.4.9 | Locations of the Solenoid | 6-26 | 2.7.1 | Electrical Parts Requiring Work After Replacement ... | 6-42 |
| 2.4.10 | Location of the Fixing Web Solenoid (SL2) | 6-27 | 2.7.2 | When Replacing the Scanning Lamp | 6-42 |
| 2.4.11 | Position of the Delivery Flapper Solenoid (SL3) | 6-29 | 2.7.3 | When Replacing the CCD Unit | 6-42 |
| | | | 2.7.4 | When Replacing Reader Controller PCB | 6-42 |
| | | | 2.7.5 | When Replacing the Main Controller PCB | 6-42 |

| | | | | | |
|--------|---|------|--------|---|------|
| 2.7.6 | When Replacing the HDD Unit | 6-42 | 3.3.2 | The output is too light (solid black area) | 6-72 |
| 2.7.7 | When Replacing the DC Controller PCB | 6-42 | 3.3.3 | The output is too light (overall, considerably) | 6-72 |
| 2.7.8 | When Replacing the HV-DC PCB | 6-42 | 3.3.4 | The output has uneven density (darker at the front) | 6-74 |
| 2.7.9 | When Replacing the Laser Unit | 6-42 | 3.3.5 | The output has uneven density (lighter at the front) | 6-74 |
| 2.7.10 | When Replacing the Potential Sensor/ Potential Control PCB | 6-43 | 3.3.6 | The output is foggy (overall) | 6-75 |
| 2.7.11 | Checking the Surface Potential Control System ... | 6-47 | 3.3.7 | The output has vertical fogging | 6-76 |
| 2.8 | Potential Control System Conversion Table | 6-53 | 3.3.8 | The output has black lines (vertical, fuzzy, thick) | 6-76 |
| 2.9 | Checking the Environment Sensor | 6-57 | 3.3.9 | The output has black lines (vertical, fine) | 6-77 |
| 2.10 | Checking the Photointerrupters | 6-58 | 3.3.10 | The output has white spots (vertical) | 6-78 |
| 2.11 | Checking the Optical Sensors | 6-64 | 3.3.11 | The output has white lines (vertical) | 6-78 |
| 3 | Troubleshooting Image Faults | 6-65 | 3.3.12 | The output has white spots (horizontal) | 6-80 |
| 3.1 | Making Initial Checks | 6-65 | 3.3.13 | The back of the output is soiled | 6-81 |
| 3.1.1 | Checking the Side of Installation | 6-65 | 3.3.14 | The output has a fixing fault | 6-81 |
| 3.1.2 | Checking the Originals | 6-65 | 3.3.15 | The output has a displaced leading edge (considerably large margin) | 6-82 |
| 3.1.3 | Checking the Copyboard Cover, Copyboard Glass, and Standard White Plate | 6-66 | 3.3.16 | The output has a displaced leading edge (large margin) | 6-82 |
| 3.1.4 | Checking the Charging Assemblies | 6-66 | 3.3.17 | The output has a displaced leading edge (no margin) | 6-82 |
| 3.1.5 | Checking the Developing Assembly | 6-66 | 3.3.18 | The output is blurred | 6-83 |
| 3.1.6 | Checking the Paper | 6-66 | 3.3.19 | The output has horizontal fogging | 6-84 |
| 3.1.7 | Checking the Periodically Replaced Parts | 6-66 | 3.3.20 | The output has poor sharpness | 6-84 |
| 3.1.8 | Others | 6-67 | 3.3.21 | The output is solid blank ... | 6-85 |
| 3.2 | Sample Faulty Images | 6-70 | 3.3.22 | The output is solid black ... | 6-86 |
| 3.3 | Troubleshooting Image Faults | 6-71 | | | |
| 3.3.1 | The output is too light (halftone area) | 6-71 | | | |

| | | | |
|--------------------------------------|-------|---------------------------------|-------|
| 4 Troubleshooting Malfunctions | 6-87 | 4.1.38 E243 | 6-106 |
| 4.1 Troubleshooting by | | 4.1.39 E251 | 6-106 |
| Malfunction | 6-87 | 4.1.40 E302 | 6-107 |
| 4.1.1 E000 | 6-87 | 4.1.41 E315 | 6-107 |
| 4.1.2 E001 | 6-88 | 4.1.42 E320 | 6-107 |
| 4.1.3 E002 | 6-89 | 4.1.43 E400 | 6-108 |
| 4.1.4 E003 | 6-89 | 4.1.44 E402 | 6-108 |
| 4.1.5 E004 | 6-89 | 4.1.45 E404 | 6-110 |
| 4.1.6 E005 | 6-90 | 4.1.46 E405 | 6-111 |
| 4.1.7 E010 | 6-90 | 4.1.47 E410 | 6-112 |
| 4.1.8 E012 | 6-91 | 4.1.48 E422 | 6-113 |
| 4.1.9 E013 | 6-91 | 4.1.49 E601 | 6-114 |
| 4.1.10 E014 | 6-92 | 4.1.50 E602 | 6-114 |
| 4.1.11 E015 | 6-92 | 4.1.51 E676 | 6-115 |
| 4.1.12 E019 | 6-93 | 4.1.52 E677 | 6-115 |
| 4.1.13 E020 | 6-93 | 4.1.53 E710-0001 (reader | |
| 4.1.14 E025 | 6-94 | controller), E710-002 | |
| 4.1.15 E032 | 6-94 | (DC controller), E710- | |
| 4.1.16 E043 | 6-94 | 0003 (main controller) | 6-115 |
| 4.1.17 E051 | 6-95 | 4.1.54 E711-0001 (reader | |
| 4.1.18 E065 | 6-96 | controller), E711-0002 | |
| 4.1.19 E067 | 6-97 | (DC controller), E711- | |
| 4.1.20 E068 | 6-98 | 0003 (main controller) | 6-115 |
| 4.1.21 E069 | 6-100 | 4.1.55 E712 | 6-116 |
| 4.1.22 E100 | 6-101 | 4.1.56 E713 | 6-116 |
| 4.1.23 E110 | 6-101 | 4.1.57 E717 | 6-117 |
| 4.1.24 E111 | 6-102 | 4.1.58 E732 | 6-117 |
| 4.1.25 E121-0001 | 6-102 | 4.1.59 E733 | 6-117 |
| 4.1.26 E121-0002 | 6-103 | 4.1.60 E737 | 6-118 |
| 4.1.27 E202 (The keys in | | 4.1.61 E740 | 6-118 |
| the control panel are | | 4.1.62 E741 | 6-118 |
| locked.) | 6-103 | 4.1.63 E744 | 6-119 |
| 4.1.28 E204 (The keys in | | 4.1.64 E800 | 6-119 |
| the control panel are | | 4.1.65 E804 | 6-120 |
| locked.) | 6-104 | 4.1.66 E805 | 6-120 |
| 4.1.29 E211 | 6-104 | 4.1.67 E820 | 6-121 |
| 4.1.30 E215 | 6-104 | 4.1.68 E823 | 6-121 |
| 4.1.31 E218 | 6-104 | 4.1.69 E824 | 6-122 |
| 4.1.32 E219 | 6-105 | 4.1.70 E830 | 6-122 |
| 4.1.33 E220 | 6-105 | 4.1.71 AC power is absent | 6-123 |
| 4.1.34 E222 | 6-105 | 4.1.72 The DC power supply | |
| 4.1.35 E226 | 6-105 | fails to operate. 1 | 6-124 |
| 4.1.36 E240 | 6-105 | 4.1.73 Pickup fails | 6-125 |
| 4.1.37 E241 | 6-106 | | |

| | | | |
|--|-------|--|-------|
| 4.1.74 The lifter fails to move up | 6-127 | 4.1.93 The deck lifter fails to move up (side paper deck) | 6-142 |
| 4.1.75 The lifter fails to move up (pickup from cassette) | 6-128 | 5 Troubleshooting Feeding Problems | 6-143 |
| 4.1.76 Pickup fails (multifeeder) | 6-129 | 5.1 Copy Paper Jams | 6-143 |
| 4.1.77 The vertical path roller fails to rotate | 6-131 | 5.1.1 Pickup Assembly | 6-144 |
| 4.1.78 The registration roller fails to rotate | 6-133 | 5.1.2 Separation/Feeding Assembly | 6-145 |
| 4.1.79 The No. 1 mirror base fails to move | 6-134 | 5.1.3 Fixing Assembly, Delivery Assembly | 6-146 |
| 4.1.80 The pre-exposure lamp fails to go ON | 6-135 | 5.1.4 Fixing assembly, Delivery assembly (reversal delivery assembly) | 6-147 |
| 4.1.81 The scanning lamp fails to go ON | 6-135 | 5.1.5 Cleaner assembly | 6-147 |
| 4.1.82 The toner feed motor (M6) inside the cartridge fails to operate | 6-136 | 5.1.6 Lower Feeding Assembly | 6-148 |
| 4.1.83 The feed motor (M18) inside the hopper fails to operate | 6-136 | 5.2 Feeding Faults | 6-149 |
| 4.1.84 The drum heater fails to operate | 6-137 | 5.2.1 Double Feeding | 6-149 |
| 4.1.85 The Add Toner message fails to go ON | 6-137 | 5.2.2 Wrinkles | 6-149 |
| 4.1.86 The Add Toner message fails to go ON | 6-138 | 6 Arrangement and Function of Electrical Parts | 6-150 |
| 4.1.87 The Set Card Reader message fails to go ON | 6-138 | 6.1 Clutches | 6-150 |
| 4.1.88 The Set Control Card message fails to go OFF | 6-138 | 6.2 Solenoids | 6-152 |
| 4.1.89 The Add Paper message fails to go OFF (deck light/left) | 6-139 | 6.3 Motors | 6-154 |
| 4.1.90 The Add Paper message fails to go OFF (cassette 3/4) | 6-139 | 6.4 Fans | 6-156 |
| 4.1.91 The fixing heater fails to operate | 6-140 | 6.5 Sensor 1 | 6-158 |
| 4.1.92 Pickup fails (side paper deck) | 6-141 | 6.6 Sensor 2 | 6-160 |
| | | 6.7 Switches | 6-162 |
| | | 6.8 Counters, There, Fuses, and Others | 6-164 |
| | | 6.9 PCBs | 6-166 |
| | | 6.10 Side Paper Deck-N1 | 6-168 |
| | | 6.11 Variable Resistors (VR), Light-Emitting Diodes (LED), and Check Pins by PCB | 6-170 |
| | | 6.11.1 Main Controller PCB | 6-170 |
| | | 6.11.2 Reader Controller PCB | 6-171 |
| | | 6.11.3 DC controller PCB | 6-171 |
| | | 6.11.4 HV-DC PCB | 6-172 |
| | | 7 Upgrading | 6-173 |
| | | 7.1 Outline | 6-173 |

| | | | | | |
|-------|---|-------|-------|--|-------|
| 7.1.1 | Download Mode | 6-173 | 7.5.2 | Starting Formatting | 6-192 |
| 7.1.2 | Making Pre-Checks | 6-174 | 7.5.3 | Points to Note When Formatting the Hard Disk | 6-198 |
| 7.2 | Data Control | 6-177 | 7.6 | Upgrading by Replacing the DIMM/ROM | 6-199 |
| 7.3 | Downloading the System Software, RUI, and Language Module | 6-180 | 8 | Backing Up Data | 6-201 |
| 7.3.1 | Making Connections | 6-180 | 8.1 | Outline | 6-201 |
| 7.3.2 | Downloading | 6-180 | 8.2 | Backing Up Data | 6-202 |
| 7.3.3 | After Downloading | 6-186 | 8.2.1 | Making Preparations | 6-202 |
| 7.4 | Upgrading the BOOT ROM ... | 6-186 | 8.2.2 | Making Connections | 6-202 |
| 7.4.1 | Making Preparations | 6-186 | 8.2.3 | Backing Up Data | 6-203 |
| 7.4.2 | Connection | 6-187 | 8.2.4 | Downloading Backup Data | 6-208 |
| 7.4.3 | Preparing BOOT ROM | 6-187 | 8.2.5 | Managing Backup Data ... | 6-212 |
| 7.4.4 | After Downloading | 6-191 | | | |
| 7.5 | Formatting the HDD | 6-192 | | | |
| 7.5.1 | Making Connections | 6-192 | | | |

APPENDIX

| | | | | | |
|---|---|-----|---|------------------------------|------|
| 1 | GENERAL TIMING CHART | A-1 | 3 | GENERAL CIRCUIT DIAGRAM | A-7 |
| 2 | LIST OF SIGNALS/ ABBREVIATIONS | A-3 | 4 | Special Tools Table | A-11 |
| | | | 5 | Solvents/Oils | A-14 |

SERVICE MODE

| | | | | | |
|-------|--|------|-----|----------------|-------|
| 1 | Construction of Service Mode | S-1 | 2.4 | FUNCTION | S-72 |
| 1.1 | Outline | S-1 | 2.5 | OPTION | S-90 |
| 1.2 | Starting Service Mode and Making Selections | S-2 | 2.6 | TEST | S-110 |
| 1.3 | Ending Service Mode | S-3 | 2.7 | COUNTER | S-117 |
| 1.4 | Backing Up Service Mode Settings | S-3 | 3 | FEEDER | S-123 |
| 1.5 | Using Service Mode | S-4 | 3.1 | DISPLAY | S-123 |
| 1.5.1 | Initial Screen | S-4 | 3.2 | ADJUST | S-123 |
| 1.5.2 | Level 1/2 Screen | S-4 | 3.3 | FUNCTION | S-125 |
| 1.5.3 | Level 3 Screen | S-5 | 3.4 | OPTION | S-126 |
| 2 | COPIER | S-6 | 4 | SORTER | S-127 |
| 2.1 | DISPLAY | S-6 | 4.1 | ADJUST | S-127 |
| 2.2 | I/O | S-25 | 4.2 | OPTION | S-128 |
| 2.3 | ADJUST | S-55 | 5 | BOARD | S-129 |
| | | | 5.1 | OPTION | S-129 |

ERROR CODE

| | | | | | |
|---|-------------------|-----|-----|------------------------------|-----|
| 1 | Error Codes | E-1 | 1.1 | Outline of Error Codes | E-1 |
|---|-------------------|-----|-----|------------------------------|-----|

CHAPTER 1

INTRODUCTION

1 Features

1.1 High Speed, High Quality

- The use of a high-speed engine based on a twin-laser exposure technology promises high-speed operation and high-quality image reproduction.
- The CCD is a 4-channel CCD.
- Operating Speed:
105 copies/min (A4/LTR, 1-to-N; from cassette/deck)
- Reading Resolution: 600 × 600 dpi
- Printing Resolution
Copier mode: 1200 (equivalent) × 600 dpi (with smoothing ON)
Printer mode: 2400 (equivalent) × 600 dpi

1.2 High Durability, High Reliability

- The machine is designed for high durability and high reliability, as by using an amorphous silicon photosensitive drum.

1.3 High-Performance Controller, Large-Capacity Hard Disk

- The machine uses an iR controller (mounted on the main controller) for parallel processing of multiple tasks, thereby ensuring highly efficient control and extremely high speed data processing.
- The machine comes with a built-in large-capacity of hard disk (10 GB). When used as image memory, it enables memory sorting.
- The Box function makes storage of large volumes of data possible.

1.4 Ease of Operation

- The large-size, high-resolution, upright LCD color touch panel (1/1VGA) offers a high degree of recognition.

1.5 Large-Capacity Paper Source

- Addition of options will make a source of paper capable of accommodating as many as 7,650 sheets (80 g/m² paper):

| | |
|------------------------------|----------------------------|
| Right deck: | 1500 sheets (1700 sheets)* |
| Left deck: | 1500 sheets (1700 sheets)* |
| Cassette 3: | 550 sheets (600 sheets)* |
| Cassette 4: | 550 sheets (600 sheets)* |
| Manual feed tray: | 50 sheets |
| Side Paper Deck-N1 (option): | 3500 sheets (4000 sheets)* |

* The number in parentheses indicates when the count is based on 64 g/m² paper.

1.6 Various Delivery Processing (with options)

a. Stapling

- A stack of as many as 100 sheets may be stapled.(1-point or 2-point stapling; with a Finisher-K1N/K2N or Saddle Finisher-K3N/K4N in use)



| | |
|---------------------|--|
| 100-sheet stapling: | Stapler-G1 |
| | Stapler cartridge (standard with finisher) |
| 50-sheet stapling: | Stapler-H1 |
| | Stapler Cartridge -H1 |

b. Saddle Stitching

- A sheet of paper may be stapled in the middle, folded, and delivered (with a Saddle Finisher-K3N/K4N in use).

c. Punching

- A sheet of paper may be punched to open 2, 3, or 4 holes and delivered (with a Finisher-K2N or Saddle Finisher-K3N/K4N, and Puncher Unit-E1/F1 in use).



| | |
|----------------------|------------|
| Finisher-K2N: | 2/3 holes. |
| Saddle Finisher-K3N: | 2/3 holes. |
| Saddle Finisher-K4N: | 4 holes. |

d. Folding

- A sheet of paper may be folded into a Z and delivered (with a Paper Folding Unit-C1 in use).

e. Trimming

- A booklet which is produced by a Saddle Finisher may be fitted for cutting its edge and delivered (with a Trimmer-A1 in use).



| |
|--|
| The term “trimming” is used to refer to cutting and smoothing the edge of a booklet. |
|--|

1.7 High-Level Printer Functions to Support Networking Requirements

- The use of a Network Multi-PDL printer kit (option) will enable a higher level of network printing.

2 Specifications

2.1 Copier

2.1.1 Type

| Item | Description |
|-----------------------|--------------------------------------|
| Body | Console |
| Copyboard | Fixed |
| Light source | Fluorescent lamp |
| Lens | Lens array (F3.7) |
| Photosensitive medium | Amorphous silicon drum (108-mm dia.) |

T01-201-01

2.1.2 System

| Item | Description |
|-------------------------|--|
| Reproduction | Indirect electrostatic |
| Charging | Corona |
| Exposure | Twin laser unit |
| Copy density adjustment | Auto, or manual (9 settings) |
| Development | Dry, 1-component toner projection Retard (center reference) |
| Pickup | <ul style="list-style-type: none"> • Paper deck (2 cassettes; right deck, left deck) • Cassette (2 cassettes; cassette 3, caste 4) • Manual feed tray (5.5 mm deep, approx.; about 50 sheets of 80 g/m² paper) |
| Transfer | Corona; post charging/exposure (ON for Jpn; OFF for non-Jpn) |
| Separation | Electrostatic, air |
| Cleaning | Blade |
| Fixing | Heat roller 200 V: 1150 W (main) + 565 W (sub) 208 V: 1220 W (main) + 600 W (sub) 230 V: 1185 W (main) + 645 W (sub) |
| Counter | Soft counter |
| Toner | Magnetic, positive toner (toner cartridge) |

T01-201-02

2.1.3 Functions

| Item | Description |
|---------------------------------------|--|
| Original type | Sheet, book, 3-D object (2 kg max.) |
| Maximum original size | A3/279.4 × 431.8 mm (11 × 17) |
| Reproduction ratio | Direct 1:1 Reduce I 1:0.250 Reduce II 1:0.500 Reduce III 1:0.611 Reduce IV 1:0.707 Reduce V 1:0.816 Reduce VI 1:0.865 Enlarge I 1:1.154 Enlarge II 1:1.224 Enlarge III 1:1.414 Enlarge IV 1:2.000 Enlarge V 1:4.000 Zoom: 1:0.250 to 4.000 (25% to 400% in 1% increments) |
| Fine adjustment of Reproduction ratio | Set ratio in user mode when setting 100% |
| Wait time | 6 min or less (at 20°C room temperature, rated input) |
| First copy time | 4.1 sec or less: (stream reading, right deck pick up selected manually, Direct, A4/LTR, non-AE, straight delivery, fluorescent lamp pre-activation ON) 2.9 sec or less: (book mode, right deck pickup selected manually, 1 original, Direct, A4/LTR, non-AE, straight delivery, fluorescent lamp pre-activation ON) |
| Continuous reproduction | 1 to 999 pages |
| Size of output | Single-sided AB: A3 max., postcard (vertical feed) min. Inch: 279.4 × 431.8 mm (11 × 17) max., STMT (vertical feed) min. Double-sided AB: A3 max., A5 (vertical feed) min. Inch: 279.4 × 431.8 mm (11 × 17) max., STMT (vertical feed) min. |
| Reading speed | 450 mm/s |
| Printing speed | 500 mm/s |
| Resolution | 600 × 600 dpi in reading; 1200 (equivalent) × 600 dpi in copier mode; 2400 (equivalent) × 600 dpi in printer mode |
| Gradation | TBIC method, binary |

T01-201-03

| Item | Description |
|--------------------|---|
| Right deck pick up | <ul style="list-style-type: none"> Plain paper (64 to 80 g/m²) A4, B5, LTR |
| Left deck pick up | <ul style="list-style-type: none"> Recycled paper (64 to 80 g/m²) A4, B5, LTR Eco paper (80 g/m²) A4 Tracing paper A4, B5 Colored paper (recommended type) A4 Thick paper (90 to 200 g/m²) A4, B5, LTR 3-hole paper (horizontal feed; restrictions on orientation) LTR |
| Cassette 3 pick up | <ul style="list-style-type: none"> Plain paper (64 to 80 g/m²) A3, B4, A4, B5, A4R, B5R, A5R, 279.4 × 431.8 mm (11 × 17), LGL, LTR, LTRR, STMTR |
| Cassette 4 pick up | <ul style="list-style-type: none"> Recycled paper (64 to 80 g/m²) A3, B4, A4, B5, A4R, B5R, A5R, 279.4 × 431.8 mm (11 × 17), LGL, LTR, LTRR, STMTR Eco paper (80 g/m²) A3, A4, A4R Colored paper (recommended type) B4, A4, A4R Thick paper (90 to 200 g/m²) A3, B4, A4, B5, A4R, B5R, LTR, LTRR 3-hole paper (horizontal feed; restrictions on orientation) LTR, LTRR Index paper (attachment required) A4, LTR |

T01-201-04

| Item | Description |
|------------------|---|
| Manual feed tray | <ul style="list-style-type: none">• Plain paper (64 to 80 g/m²) A3, B4, A4, B5, A4R, B5R, A5R, 279.4 × 431.8 mm (11 × 17), LGL, LTR, LTRR, STMT (vertical feed)• Recycled paper (64 to 80 g/m²) A3, B4, A4, B5, A4R, B5R, A5R, 279.4 × 431.8 mm (11 × 17), LGL, LTR, LTRR, STMT (vertical feed)• Eco paper (80 g/m²) A3, A4, A4R• Tracing paper (free of curl and adhesion) A3, B4, A4, B5, A4R, B5R• Transparency (recommended type; horizontal feed, mirror image, straight delivery) A4, A4R, LTR, LTRR• Colored paper (recommended type) B4, A4, A4R• Postcard (horizontal feed) 4-piece postcard pad• Label paper (recommended type) B4, A4, A4R, LTR, LTRR• Thick paper (90 to 200 g/m²) A3, B4, A4, B5, A4R, B5R, LTR, LTRR• 3-hole sheet (horizontal feed) LTR, LTRR |

T01-201-05

| Item | Description |
|-------------------|---|
| Single-sided mode | <ul style="list-style-type: none"> • Plain paper (64 to 80 g/m²) A3, B4, A4, B5, A5, A4R, B5R, A5R, 279.4 × 431.8 mm (11 × 17), LGL, LTR, LTRR, STMT (vertical feed) • Recycled paper (64 to 80 g/m²) A3, B4, A4, B5, A4R, B5R, A5R, 279.4 × 431.8 mm (11 × 17), LGL, LTR, LTRR, STMT (vertical feed) • Eco paper (80 g/m²) A3, A4, A4R • Tracing paper (free of curl, and adhesion) A3, B4, A4, B5, A4R, B5R • Transparency (recommended type; horizontal feed, mirror image, straight delivery) A4, LTR • Colored paper (recommended type) B4, A4, A4R • Postcard (horizontal feed) 4-piece postcard pad • Lavel paper (recommended type) B4, A4, A4R, LTR, LTRR • Thick paper (90 to 200 g/m²) A3, B4, A4, B5, A4R, B5R, LTR, LTRR • 3-hole paper (horizontal feed) LTR, LTRR • Index paper A4, LTR |

T01-201-06

| Item | Description |
|-------------------------|---|
| Face-down delivery mode | <ul style="list-style-type: none"> • Plain paper (64 to 80 g/m²) A3, B4, A4, B5, A5, A4R, B5R, A5R, 279.4 × 431.8 mm (11 × 17), LGL, LTR, LTRR, STMTR • Recycled paper (64 to 80 g/m²) A3, B4, A4, B5, A5, A4R, B5R, A5R, 279.4 × 431.8 mm (11 × 17), LGL, LTR, LTRR, STMTR • Eco paper (80 g/m²) A3, A4, A4R • Tracing paper (free of curl and adhesion) A3, B4, A4, B5, A4R, B5R • Colored paper (recommended type) B4, A4, A4R • Postcard (horizontal feed) 4-piece postcard pad • Label paper (recommended type) B4, A4, A4R, LTR, LTRR • Thick paper (90 to 200 g/m²) A3, B4, A4, B5, A4R, B5R, LTR, LTRR • 3-hole paper (horizontal feed) LTR • Index paper (from cassette) A4, LTR |
| Double-sided Auto mode | <ul style="list-style-type: none"> • Plain paper (64 to 80 g/m²) A3, B4, A4, B5, A4R, B5R, A5R, 279.4 × 431.8 mm (11 × 17), LGL, LTR, LTRR, STMT (vertical feed) • Recycled paper (64 to 80 g/m²) A3, B4, A4, B5, A4R, B5R, A5R, 279.4 × 431.8 mm (11 × 17), LGL, LTR, LTRR, STMT (vertical feed) • Eco paper (80 g/m²) A3, A4, A4R • Colored paper (recommended type) B4, A4, A4R • Thick paper (90 to 200 g/m²) A3, B4, A4, B5, A4R, B5R, LTR, LTRR • 3-hole paper (horizontal feed) LTR, LTRR |

T01-201-07

| Item | Description |
|-------------------|---|
| Double-sided mode | <ul style="list-style-type: none"> • Plain paper (64 to 80 g/m²) A3, B4, A4, B5, A4R, B5R, A5R, 279.4 × 431.8 mm (11 × 17), LGL, LTR, LTRR, STMT (vertical feed) • Recycled paper (64 to 80 g/m²) A3, B4, A4, B5, A4R, B5R, A5R, 279.4 × 431.8 mm (11 × 17), LGL, LTR, LTRR, STMT (vertical feed) • Eco paper (80 g/m²) A3, A4, A4R • Colored paper (recommended type) B4, A4, A4R • Postcard (horizontal feed) 4-piece postcard pad • Thick paper (90 to 200 g/m²) A3, B4, A4, B5, A4R, B5R, LTR, LTRR • 3-hole paper (horizontal feed) LTR, LTRR |

T01-201-08

| Item | Description |
|-------------------------|---|
| Tray | |
| Right/left deck | 162 mm deep approx. (about 1500 sheets of 80 g/m ² paper) |
| Cassette 3, 4 | 55 mm deep approx. (about 550 sheets of 80 g/m ² paper) |
| Capacity of Hard Disc | 10 GB |
| Non-mage width | |
| Leading edge | Direct/R-E: 4.0 + 1.5/-1.0 mm <4.0 ± 1.8 mm/-1.4 mm>* |
| Trailing edge | Direct/R-E: 2.5 ± 1.5 mm <2.5 ± 1.8 mm>* |
| Left/right (first side) | Direct/R-E: 2.5 ± 1.5 mm <2.5 ± 2.0 mm>* |
| Image margin | |
| Leading edge | Direct/R-E: 4.0 + 1.5/-1.0 mm <4.0 ± 1.5/-1.0 mm>* |
| Trailing edge | Direct/R-E: (one-sided) 2.5 ± 1.5 mm <2.5 ± 1.5 mm>* |
| | Direct/R-E: (two-sided) 2.5 ± 2.0 mm <2.5 ± 2.0 mm>* |
| Left/right (first side) | Direct/R-E: 2.5 + 1.5 mm <2.5 ± 1.5 mm>* (on left, 0.5 mm or more) |
| Auto clear | Yes (2 min standard; may be changed between 0 and 9 min in 1-min increments) |
| Auto power off | No |
| Power save mode | |
| Low power mode | Yes (15 min standard; may be changed in user mode: 10, 15, 20, 30, 40, 50, 60, 90 min; 2, 3, 4 hr) |
| Auto sleep | Yes (60 min standard; may be changed in user mode: 10, 15, 20, 30, 40, 50, 60, 90 min; 2, 3, 4 hr) |
| Power save mode | Yes (-10% standard; may be changed in user mode: -10%, -25%, -50%, 0% no recovery time) |
| Option | Finisher-K1N Finisher-K2N Saddle Finisher-K3N Saddle Finisher-K4N FL Cassette-P4 Network Multi-PDL Printer Kit-B1 Stapler-G1 Stapler Cartridge-H1 Stapler-H1 Stapler-D2 Paper Folding Unit-C1 Inserter-B1 Side Paper Deck-N1 Index Paper Attachment-A1 Card Reader-D1 Original holder-D1 Cassette heater (for 230V model only; standard with 200V model; none available for 208V model) Trimmer-A1 |

* The number in parentheses indicates when an ADF is used.

T01-201-09

2.1.4 Others

| | Item | Description |
|-----------------------------|-----------------------|---|
| Operating environment | Temperature | 15 to 30°C |
| | Humidity | 5 to 80% |
| | Atmospheric pressure | 810.6 to 1013.3 hpa (0.8 to 1.0 atm) |
| Power supply | 200 V/12 A (50/60 Hz) | LQP---- |
| | 208 V/12 A (60 Hz) | MPB---- |
| | 230 V/13 A (50 Hz) | UNN---- |
| | | QNF---- |
| | | SNF---- |
| | | TNE---- |
| | | PNK---- |
| | | DNL---- |
| Power consumption | Maximum | 200 V: 3.0 kw or less |
| | | 208 V/230 V: 3.0 kw or less |
| Noise | In operation | 78 dB or less |
| | In standby | 55 dB or less |
| Ozone | | Initial: 0.02 ppm or less (avr), 0.05 ppm or less (max.) |
| | | Later (after 250,000 pages): 0.05 ppm or less (avr), |
| | | 0.10 ppm or less (max.) |
| Dimensions | | 764 (W) × 795 (D) × 1395 (H) mm (approx.) |
| Weight | | 280 kg (approx.; including ADF) |
| Consumables storage | Paper | Keep wrapped to protect against humidity. |
| | Toner | Avoid direct sunlight, and keep under 40°C, 85% |
| Environmental consideration | | • Drum Heater (82 W) common for all countries |
| | | • Cassette Heater (20 W) 200 V model: standard 208 V model: none available 230 V model: option |
| | | • Fluorescent Lamp Heater (36 W) common for all countries |
| | | |
| | | |

T01-201-10

| Enlargement/reduction | Size | Paper size | Copies/min (1-to-N) |
|-----------------------|--------------------|------------|---------------------|
| Direct | A3 (297 × 420 mm) | A3 | 50 |
| | A4 (210 × 297 mm) | A4 | 105 |
| | B4 (257 × 364 mm) | B4 | 57 |
| | B5 (182 × 257 mm) | B5 | 105 |
| | A4R (297 × 210 mm) | A4R | 72 |
| | B5R (257 × 182 mm) | B5R | 84 |
| | A5R (210 × 148 mm) | A5R | 105 |
| Reduce | II (50.0%) | A3 → A5R | A5R |
| | | | 105 |
| | III (61.1%) | A3 → B5R | B5R |
| | | | 84 |
| | IV (70.7%) | B4 → B5R | B5R |
| | | | 84 |
| | | A3 → A4R | A4R |
| | | | 72 |
| V (81.6%) | | B4 → A4R | A4R |
| | | | 72 |
| | | B5R → A5R | A5R |
| | | | 105 |
| VI (86.5%) | | A4 → B5 | B5 |
| | | | 105 |
| | | A3 → B4 | B4 |
| | | | 57 |
| Enlarge | IV (200.0%) | A5R → A3 | A3 |
| | | | 50 |
| | III (141.4%) | A4R → A3 | A3 |
| | | | 50 |
| | | B5R → B4 | B4 |
| | | | 57 |
| | II (122.4%) | A4R → B4 | B4 |
| | | | 57 |
| | | A5 → B5 | B5 |
| | | | 105 |
| | I (115.4%) | B4 → A3 | A3 |
| | | | 50 |
| | | B5 → A4 | A4 |
| | | | 105 |

Delivery from copier, auto paper select, density auto adjust, non-sort, deck/cassette

T01-201-11

| Enlargement/reduction Size | | Paper size | Copies/min (1-to-N) |
|----------------------------|--|-------------------------------|---------------------|
| Direct | 279.4 × 431.8 mm (11 × 17) | 279.4 × 431.8 mm (11 × 17) | 49 |
| | LTR | LTR | 105 |
| | LGL | LGL | 59 |
| | LTRR | LTRR | 77 |
| | STMTR | STMTR | 105 |
| Reduce II (50.0%) | 279.4 × 431.8 mm (11 × 17) → STMTR | STMTR | 105 |
| | III (64.7%) 279.4 × 431.8 mm (11 × 17) → LTRR | LTRR | 77 |
| | IV (73.3%) 279.4 × 431.8 mm (11 × 17) → LGL | LGL | 59 |
| | V (78.6%) LGL → LTRR | LTRR | 77 |
| Enlarge III (200.0%) | STMTR* → 279.4 × 431.8 mm (11 × 17) | 279.4 × 431.8 mm (11 × 17) | 49 |
| | II (129.4%) LTRR → 279.4 × 431.8 mm (11 × 17) | 279.4 × 431.8 mm (11 × 17) | 49 |
| | I (121.4%) LGL → 279.4 × 431.8 mm (11 × 17) | 279.4 × 431.8 mm (11 × 17) | 49 |

* STMTR may not be used in the ADF.

Delivery from copier, auto paper select, density auto adjust, non-sort, deck/cassette

T01-201-12

| |
|---|
| The above specifications are subject to change for product improvement. |
|---|

2.2 Side Paper Deck-N1


| Item | Description |
|-----------------------|---|
| Pickup | Separation roller |
| Paper accommodation | Side tray |
| Copy paper type | <ul style="list-style-type: none">• Plain paper (64 to 80 g/m²) A4, B5, LTR• Recycled paper (64 to 80 g/m²) A4, B5, LTR• Eco paper (80 g/m²) A4• Tracing paper A4, B5• Colored paper (recommended type) A4• Thick paper (90 to 200 g/m²) A4, B5, LTR• 3-hole paper (horizontal feed, restrictions on orientation) LTR |
| Stack height | 385 mm (approx.; about 3,500 sheets of 80 g/m ² paper, about 4,000 sheets of 64 g/m ² paper) |
| Serial number | XCB---(A4) XCE---(LTR) |
| Paper size switch | by switching size guide plate (multiple settings) and size in service mode (OPTION) |
| Dimensions | 326.2 (W) × 583 (D) × 574.5 (H) mm (approx.) |
| Weight | 46 kg (approx.) |
| Power supply/ | DC from host copier |
| Operating environment | Same as copier |

T01-202-01

| |
|---|
| The above specifications are subject to change for product improvement. |
|---|


3 Names of Parts

3.1 External View

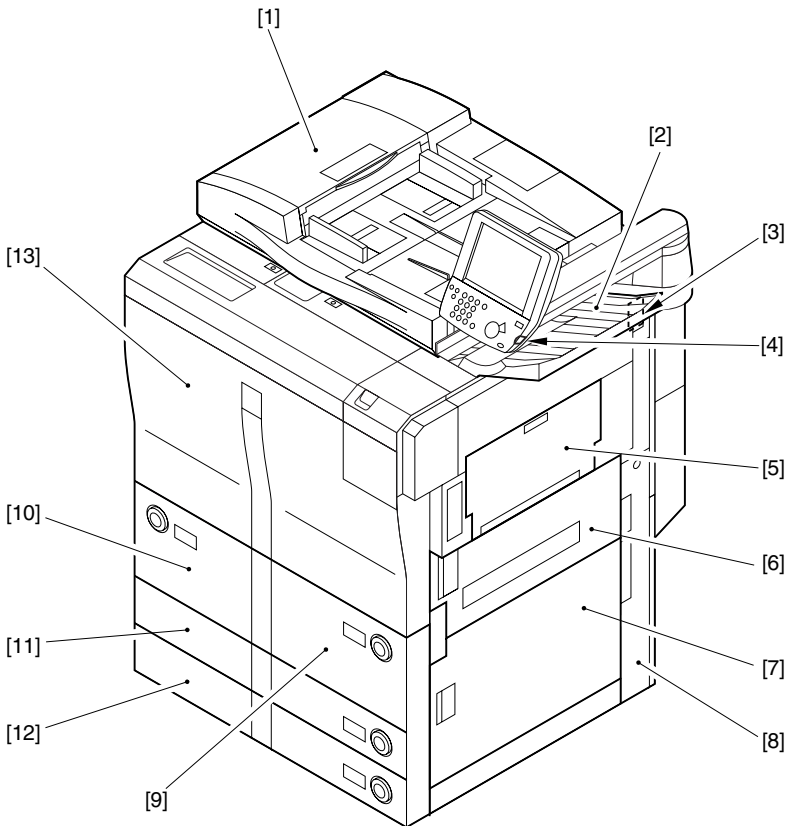

- | | |
|---------------------------------|--|
| [1] ADF | [8] Waste toner box/drum protection sheet case |
| [2] Original delivery tray | [9] Right deck |
| [3] Main power switch | [10] Left deck |
| [4] Control panel power switch | [11] Cassette 3 |
| [5] Manual feed tray | [12] Cassette 4 |
| [6] Vertical path cover (upper) | [13] Front cover |
| [7] Vertical path cover (lower) | |

F01-301-01

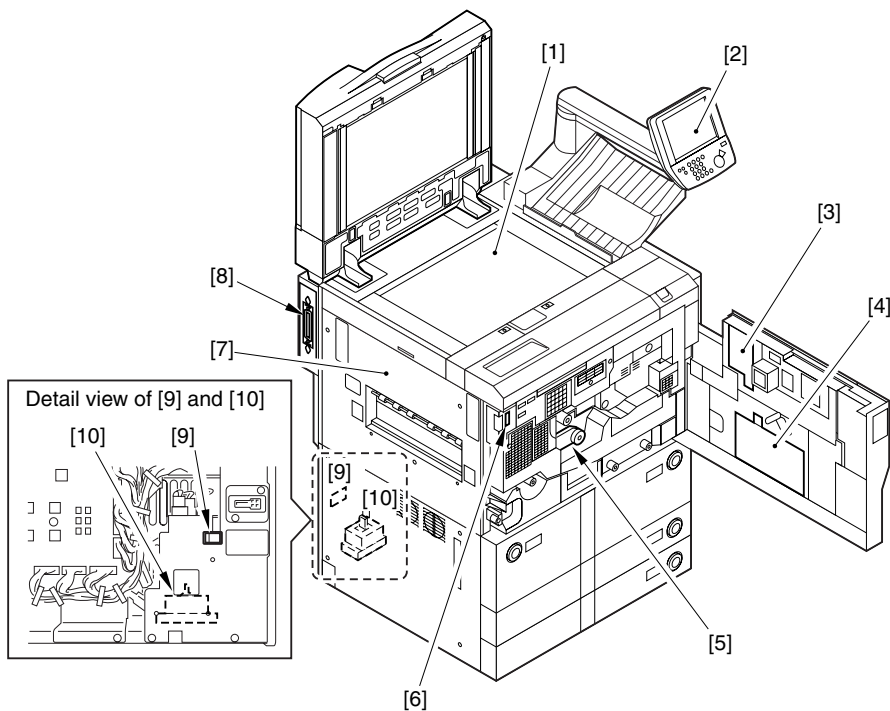


- | | |
|--------------------------------------|---------------------------|
| [1] Copyboard glass | [6] Cover switch assembly |
| [2] Control panel | [7] Delivery cover |
| [3] Grip/drum rotation stopper case | [8] Parallel connector |
| [4] Service Book Case | [9] Heater switch |
| [5] Feeding assembly releasing lever | [10] Leakage breaker |

F01-301-02

Blank page

3.2 Cross Section

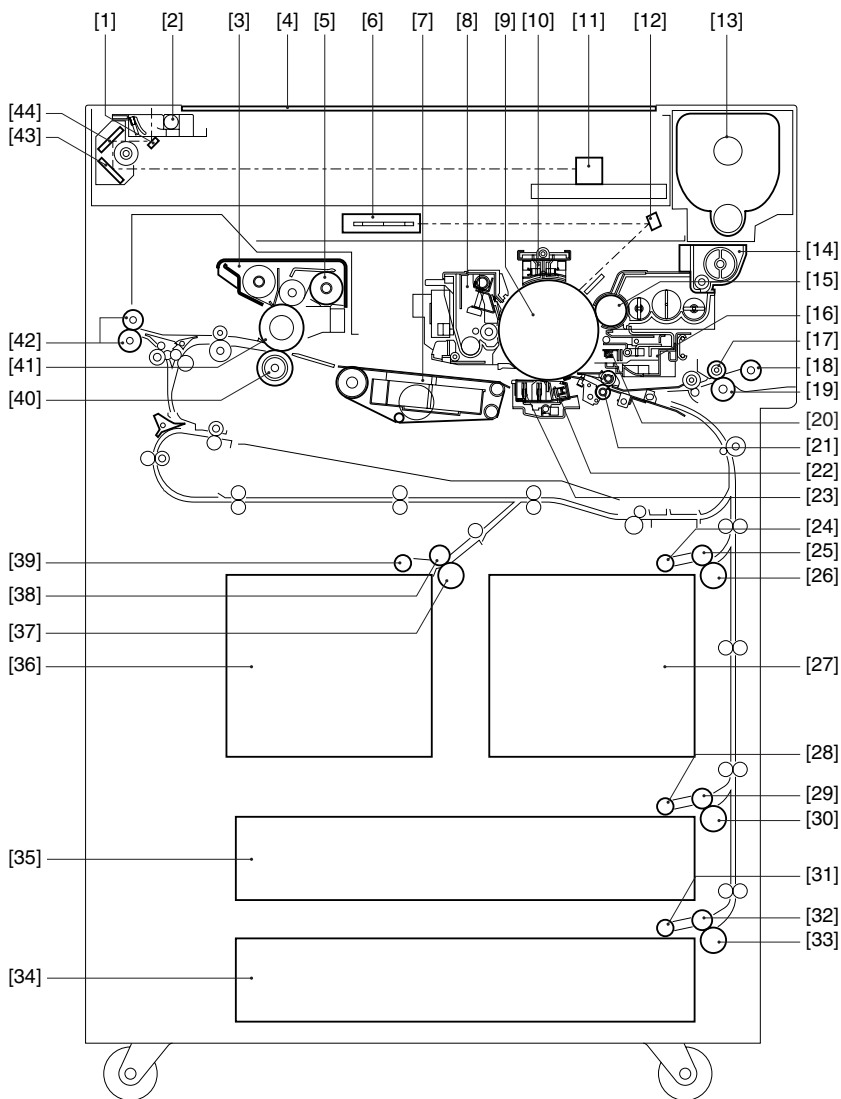


F01-302-01

- | | |
|-------------------------------------|-----------------------------------|
| [1] No.1 mirror | [23] Separate charging assembly |
| [2] Scanning lamp | [24] Right deck pickup roller |
| [3] Fixing assembly | [25] Right deck feeding roller |
| [4] Copyboard glass | [26] Right deck separation roller |
| [5] Fixing web | [27] Right deck |
| [6] Laser unit | [28] Cassette 3 pickup roller |
| [7] Feeding assembly | [29] Cassette 3 feeding roller |
| [8] Drum cleaner assembly | [30] Cassette 3 separation roller |
| [9] Photosensitive drum | [31] Cassette 4 pickup roller |
| [10] Primary charging assembly | [32] Cassette 4 feeding roller |
| [11] CCD unit | [33] Cassette 4 separation roller |
| [12] Bending mirror | [34] Cassette 4 |
| [13] Toner cartridge | [35] Cassette 3 |
| [14] Hopper | [36] Left deck |
| [15] Developing cylinder | [37] Left deck separation roller |
| [16] Pre-transfer charging assembly | [38] Left deck feeding roller |
| [17] Manual feed feeding roller | [39] Left deck pickup roller |
| [18] Manual feed pick roller | [40] Fixing lower roller |
| [19] Manual feed separation roller | [41] Fixing upper roller |
| [20] Pre-transfer exposure LED | [42] External delivery roller |
| [21] Registration roller | [43] No.3 mirror |
| [22] Transfer charging assembly | [44] No.2 mirror |

4 Operation

4.1 Power Switch

The machine is equipped with two power switches: main power switch and control panel power switch. It is turned on when the main power switch is turned on; to end power save mode, low power mode, or sleep mode, turn on the control panel power switch.

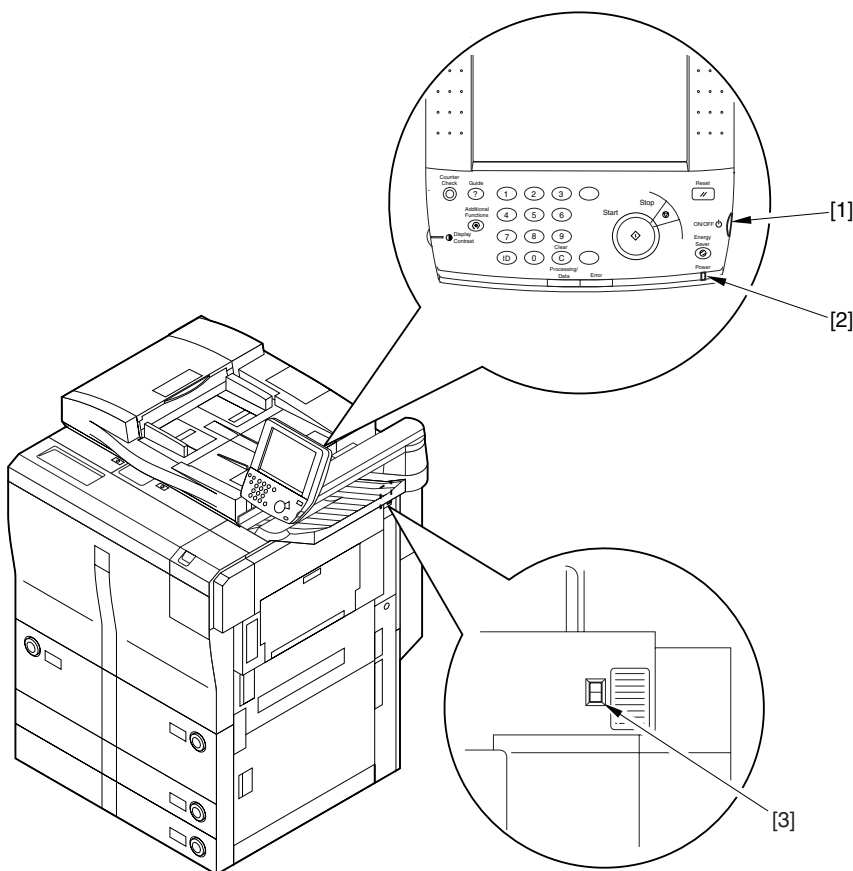


- [1] Control panel power switch
- [2] Main power lamp

- [3] Main power switch

F01-401-01

4.2 Control Panel

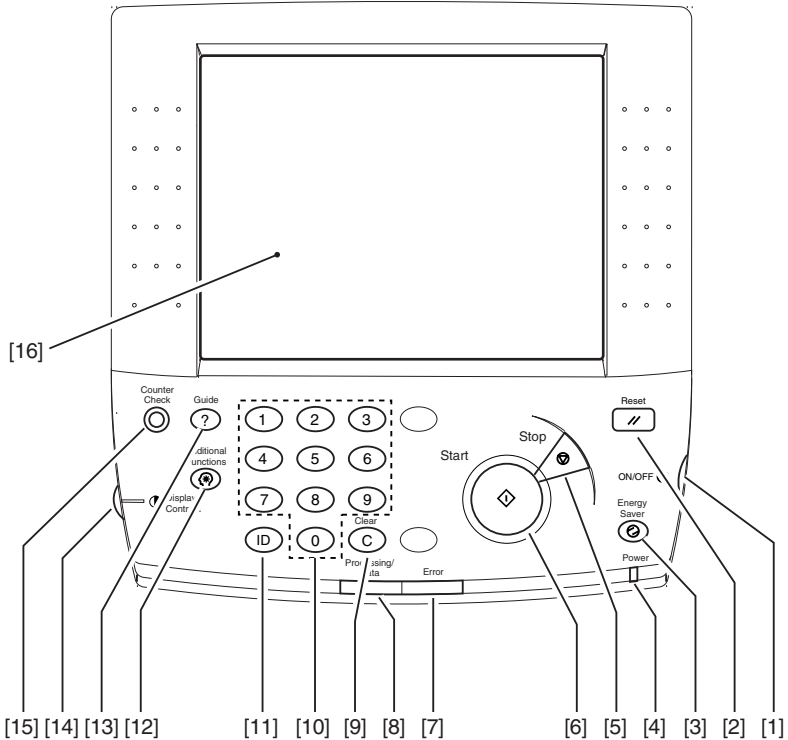

- | | |
|--------------------------------|--------------------------|
| [1] Control panel power switch | [9] Clear key |
| [2] Reset key | [10] Keypad |
| [3] Power Save key | [11] ID key |
| [4] Main power lamp | [12] User Mode key |
| [5] Stop key | [13] Guide key |
| [6] Start key | [14] Image contrast dial |
| [7] Error lamp | [15] Counter Check key* |
| [8] Operation/Memory lamp | [16] Touch panel display |

* Indicates the readings of counters on the touch panel display.

F01-402-01

4.3 Extension Mode Items

| Item | Description |
|----------------------------|---|
| Page separation | Use it to copy left and right pages of an open book on separate sheets by a single operation. Note: only used book mode |
| Cover/Interleaf | Use it to use sheets different from those used for the body for a cover, back cover, interleaf, or chapter leaf. Copies may also be made on sheets for insertion. |
| Reduced Page Composition | Use it for automatic reduction of 2, 4, or 8 originals, or a double-sided original or a book original for printing on a single sheet of paper (single-/double-sided). |
| Shift | Use it to shift the entire image of an original to any point (center, corner) for printing. |
| Book Making | Use it to print single-sided or double-sided originals when producing a booklet. |
| Transparency Interleaf | Use it to insert a sheet of paper between transparencies used in manual mode. The sheets may also be used to copy the original. |
| Enlarged Image Composition | Use it for automatic enlargement of a single original after dividing it into 2 or 4 parts for copying on paper of a specified size. |
| Bind Margin | Use it to create a margin of a specified size on the edge of the copy as binding margin (left, right, top, bottom). |
| Mixed Sizes | Use it when using originals of different sizes in an ADF for printing according to each size. The originals must, however, be of the same length on one side, e.g., A3 and A4 or B4 and B5. |
| Continuous Reading | Use it for continuous reading of different sets of originals for printing as a single set. |
| Frame Erase | Use it to erase the shadow, frame, or image of holes from copies. |
| Negative/Positive Reversal | Use it to reverse the black and white areas of the original for printing. |
| Image Repeat | Use it to repeat a single image on copies for as many times as needed (until the entire page is covered) in vertical or horizontal direction. |
| Mirror Image | Use it to print a mirror image of an image on the original. |
| Sharpness | Use it to emphasize the contrast of the image for a sharper impression. |
| Index Paper | Use it when inserting an index sheet/when printing in the index area of an index sheet. |
| Mode Memory | Use it to store or call a copying mode (9 settings max.). |
| Call | Use it to call back any of the three most recent copying modes for printing. |

T01-403-01

4.4 User Mode



The items associated with the printer are indicated when the printer functions are installed.

| Level 1 | Level 2 | Level 3 |
|-----------------|----------------------------------|---|
| Common Settings | Initial Functions | Copy*/Mail Box Set [System Monitor] as the Initial Function: On/Off* Set [Device] as the default screen for [System Monitor]: On/Off Initial Function*/Selected Function |
| | Auto Clear Setting | Entry Tone/Error Tone/Job Done Tone (for each, On*/Off) |
| | Audible Tones | On/Off* (208V model: On*/Off) |
| | Inch Entry | Copy/Printer/Mail Box/Other (Bypass: On/Off*; each cassette: On*/Off) |
| | Drawer Eligibility For APS/ADS | Consider Paper Type: On/Off* |
| | Store Paper Type | Paper Deck (left/right), Side Paper Deck : Plain*/Recycled/Color/Heavy/Tracing Paper Cassette (3/4): Plain*/Recycled/Color/Heavy/Tracing Paper/Tab Paper |
| | Energy Saver Mode | -10%*/-25%/-50%/None |
| | Energy Consumption in Sleep Mode | Low*/High |
| | Tray Designation | Tray A: copier*/printer*/other* Tray B: copier*/printer*/other* |
| | Printing Priority | 1 copier (priority)/2 printer/3 other |
| | Stack Bypass Standard Settings | On/Off* |

* Factory default.

| Level 1 | Level 2 | Level 3 |
|---------------|-------------------------------|---|
| | Standard Local Print Settings | Paper Select: auto*/pickup position select Copies: 1* to 2000 Finisher: with Finisher-K1N installed, non-sort/Collate/Offset-Collate*/Group/ Offset-Group/Staple (corner (Top Left/Bot- tom Left/Top Right/Bottom Right), Double (left/right)) with Finisher-K2N, Saddle Finisher-K3N/ K4N installed non-sort/Collate/Offset-Collate*/Group/ Offset-Group/Staple (corner (Top Left/Bot- tom Left/Top Right/Bottom Right), Double (left/right))/Hole Punch with Saddle Finisher-K3N/K4N + Paper Folding Unit-C1 installed non-sort/Collate/Offset-Collate*/Group/ Offset-Group/Staple (corner (Top Left/Bot- tom Left/Top Right/Bottom Right), Double (left/right))/Hole Punch/Z-Fold) Two-sided Print: On/Off* Erase Document After Printing: On/Off* Merge Documents: On/Off* On/Off* Japanese, English, French, German, Italian Yes/No |
| | Language Switch | |
| | Initialize Common Settings | |
| Copy Settings | Standard key 1 Settings | each mode (No Settings*) |
| | Standars key 2 Settings | each mode (No Settings*) |
| | Auto Collate | On*/Off |
| | Image Orientation Priority | On/Off* |
| | Job Duration Display | On/Off* |
| | Auto Orientation | On*/Off |
| | Photo Mode | On/Off* |
| | Smart Scan | Initial Setting: On*/Off Change Original Type: On/Off* Recognizable Text: Japanese/European/Rus- sian |
| | Standard Settings | Store/Initialize |
| | Initialize Copy Settings | Yes/No |

* Factory default.

| Level 1 | Level 2 | Level 3 |
|--------------------------|--------------------------------------|---|
| Timer Settings | Data & Time Settings | Time Zone: GMT – 12:00 to GMT + 12:00 Daylight Saving Time: On/Off* |
| | Auto Sleep Tme | 10, 15, 20, 30, 40, 50 min, 1 hr*, 90 min, 2 to 4 hr (1-hr increments) |
| | Auto Clear Time | 0, 1 to 9 min (1-min increments); 2 min* |
| | Time Until Unit Quiets Down | 0, 1 to 9 min (1-min increments); 1 min* |
| | Daily Timer Settings | Sun/Mon/Tue/Wed/Thu/Fri/Sat |
| | Low-power Mode Time | 10, 15*, 20, 30, 40, 50 min, 1 hr, 90 min, 2 to 4 hr (1-hr increments) |
| Adjustment/Clean- ing | Zoom Fine Adjustment | X/Y each: -1.0 to +1.0% (in 0.1% increments); 0%* |
| | Saddle Stitcher Staple Repositioning | Start |
| | Saddle Stitch Position Adjustment | position: -2.0 to 2.0 mm (0.25-mm increments); 0 mm* (A3, 11 ´ 17/B4/A4R, LTRR) |
| | Double Staple Space Adjustment | 70 to 150 mm (1-mm increments); 120 mm* 2_3/4 to 5_7/8 inch (1/16 inch increments) |
| | Exposure Recalibration | Light/Dark/9 steps/5 steps* |
| | Feeder Cleaning | Start |
| | Wire Cleaning | Start |
| Mail Box Settings | Box Set/Store | Box No.: 0 to 99 |
| | | Store Box Name |
| | | Password |
| | | Doc. Auto Erase: 1, 2, 3, 6, 12 hr; 1, 2, 3, 7, 30 days; none, 3 days* |
| | | Initialize |
| | Photo Mode | On/Off* |
| | Standard Scan Settings | Store/Initialize |
| Report Settings | User's Data List | Print |

* Factory default.

| Level 1 | Level 2 | Level 3 |
|-----------------|-----------------------------|---|
| System Settings | System Manager Settings | System Manager ID |
| | | System Password |
| | | System Manager |
| | | E-mail Address |
| | | Contact Information |
| | Dept. ID Management | Comment |
| | | On/Off* |
| | | (Store Dept. ID/Password, Print Totals, Accept Jobs With Unknown ID) |
| | Remote UI | On*/Off |
| | Device Information Settings | Device name |
| | | Location |
| | Network Settings | TCP/IP Settings |
| | | IP Address Setting, DNS Server Setting, PING Command, WINS Configuration, LPD Banner Page |
| | | NetWare Setting |
| | | Use NetWare (On/Off*) |
| | | AppleTalk Setting |
| | | Use AppleTalk (On/Off*) |
| | | SMB Setting |
| | | Server, Printer, Workgroup, Comment, LM Announce (On/Off*) |
| | | On/Off* |
| | | Startup Time Settings (0 to 300 sec; 60 sec) |
| | Use Spooler | Ethernet Driver Settings |
| | | Auto Detect (On*/Off), Communication Mode, Ethernet Type, MAC Address |
| | | Yes/No |
| | Clear Message Board | On/Off* |
| | Auto Offline | |

* Factory default.


CHAPTER 2

NEW FUNCTIONS

1 Basic Construction


1.1 Outline of the Basic Construction

The following shows functions newly added to the machine:

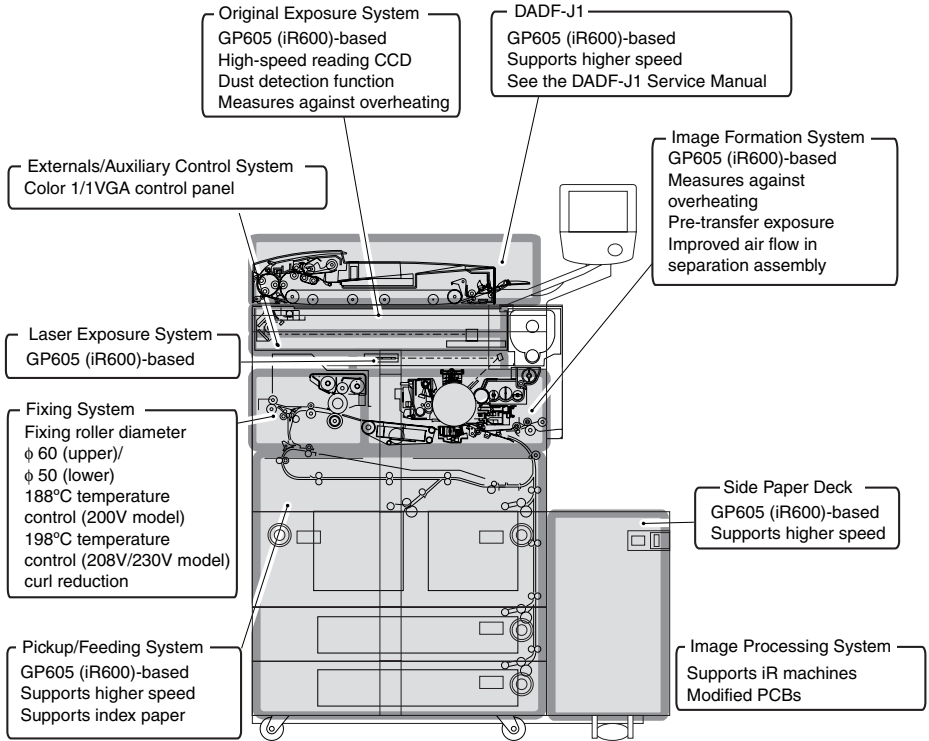

F02-101-01

1.2 Wiring Diagram of the Major PCBs

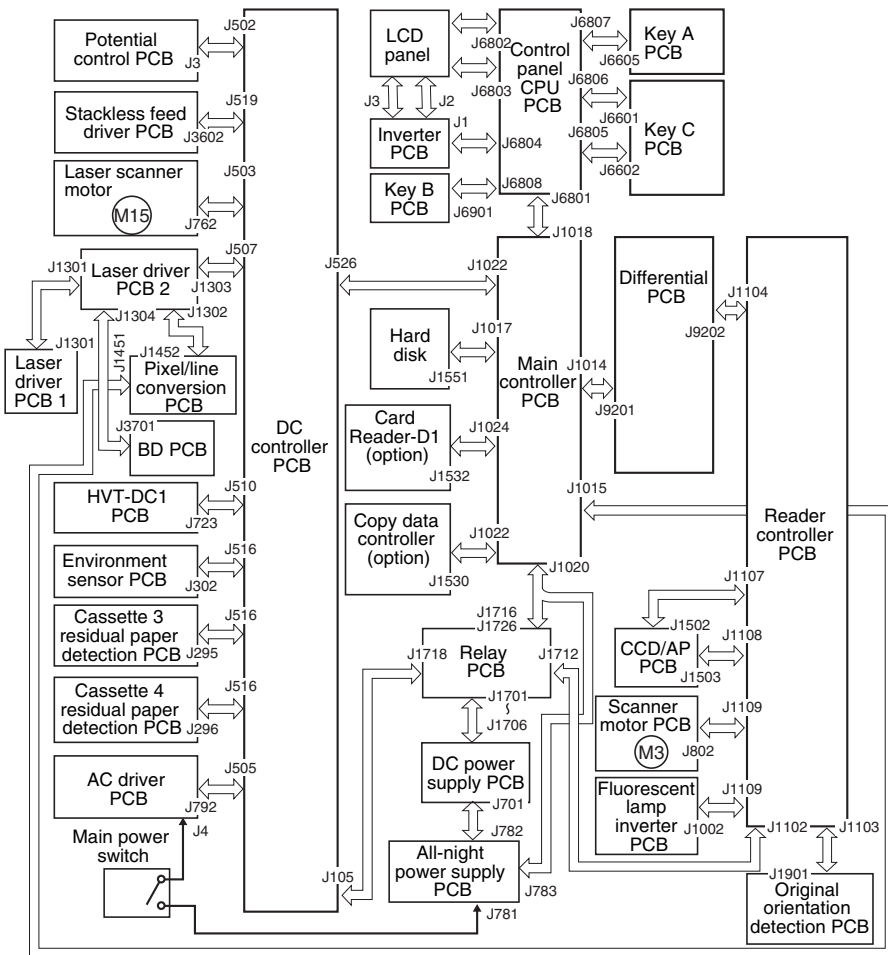

Note: The in the diagram indicates major wiring between PCBs, not the direction of signals.

F02-102-01

2 Original Exposure System

2.1 Outline of the Original Exposure System

The major changes made to the original exposure system are as follows:

- Enlargement/Reproduction
- 4-channel high-speed reading CCD (see discussions of image processing system)
- CCD adjustment (see discussions of image processing system)
- PCB arrangement
- ADF mechanism (new)

For others, see T02-202-01 for a table of differences.

2.2 Changes Made to the Original Exposure System

| Unit/location | Change from GP605 (iR600) | Purpose of change | Remarks | Reference |
|-------------------|--|--|---|--|
| Reading method | Changed the scanning speed at 100% to 450 mm/sec. | To support higher speed of operation. | In the GP605 (iR600), 260 mm/sec. | 2.3 Enlargement/Reduction |
| | Used digital enlargement/reduction (between 25% and 400%). | To support higher speed of operation. | In the GP605 (iR600), scanner enlargement/reduction only. | 2.3 Enlargement/Reduction |
| Reader unit | Added a scanner motor fan. | To prevent overheating of the scanner motor. | | 2.4 Preventing Overheating of the Scanner Motor |
| | Added a transformer PCB. | To ensure stable inverter power. | | 2.6 Stabilizing the Scanning Lamp |
| Reader controller | Located the reader controller PCB where the image processor PCB was found. | | | 2.5 Arrangement of PCBs |
| | Added a dust detection mechanism. | To prevent image faults. | | 2.8 Dust Detection Function in stream reading |
| ADF | Added open/closed detection to the ADF. | To prevent wrong detection. | | 2.7 Detecting the State (open/closed) of the ADF |

T02-202-01

2.3 Enlargement/Reduction

| Change | iR105 | GP605 (iR600) |
|--|---|---|
| Scanning speed at 100% copying | 450 mm/s | 260 mm/s |
| Enlargement/reduction according to range | By scanner, between 25% and 400% In combination with digital method: 400%; no digital method used in fixed reading, between 25% and 49.9%; in stream reading with ADF in use, between 25% and 84.9% | By scanner only, between 25% and 400%; no digital method used |

The machine scans originals faster to support its higher speed of printing. Under specific conditions, it uses a digital method for enlargement/reduction in combination to enable a higher scanning speed, while keeping the speed of the scanner motor to more or less the same as that of the GP605 (iR600).


Normally, copying with the ADF in use is in stream reading; however, fixed reading is used for reduction between 25% and 49.9% and for all ratios in double-sided mode and in book mode.

The digital method of enlargement/reduction is used for the following:

- for fixed reading, if between 25% and 49.9%
- for stream reading, if between 25% and 84.9%

2.4 Preventing Overheating of the Scanner Motor

The machine is provided with a scanner motor cooling fan to prevent overheating of the scanner motor.

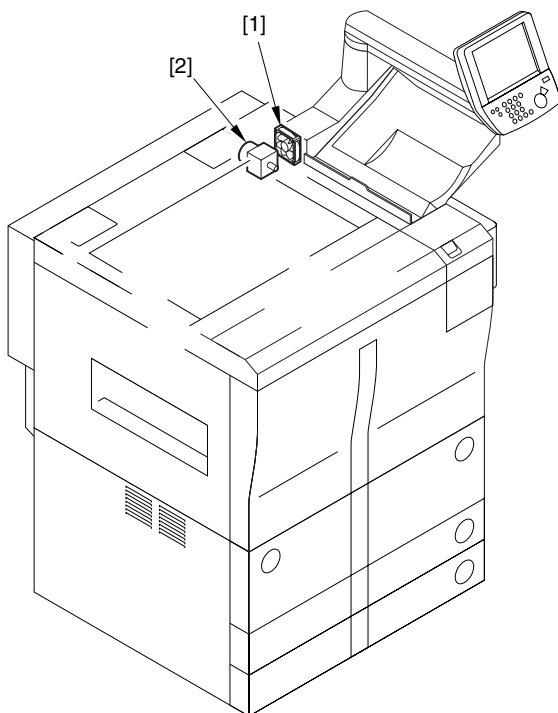

[1] Scanner motor cooling fan

[2] Scanner motor


F02-204-01

The scanner motor cooling fan is driven in fixed reading mode under the following conditions to cool the scanner motor:

| Operating mode | Fan rotation control |
|---|----------------------|
| In stream reading mode and standby | Stop |
| Between 60% and 68.9% reduction and fixed reading | Full speed |
| Other than above in fixed reading | Half speed |

2.5 Arrangement of PCBs

The PCBs of the reader unit are arranged as follows:

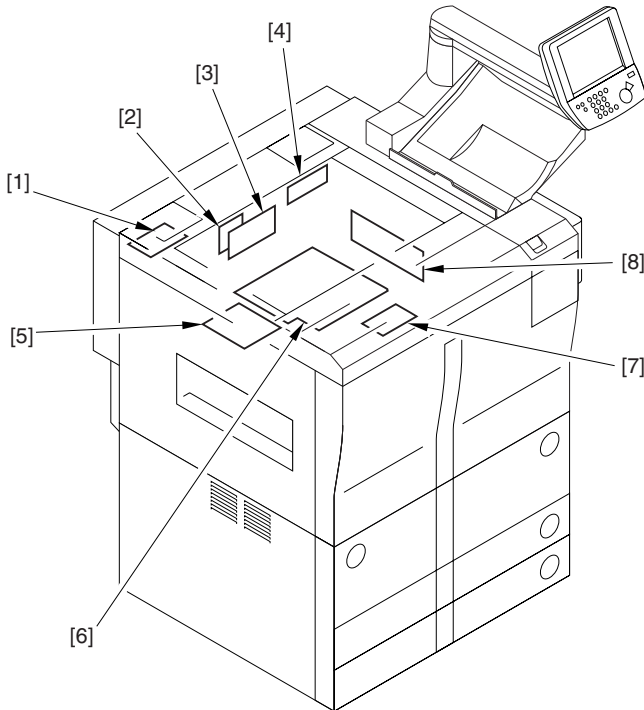

- | | |
|-----------------------------------|--|
| [1] Transformer PCB | [5] Original orientation detection PCB |
| [2] Light adjustment control PCB | [6] Reader controller PCB |
| [3] Fluorescent lamp inverter PCB | [7] Laser scanner motor driver PCB |
| [4] Scanner motor driver PCB | [8] CCD/AP PCB |

The reader controller PCB is located where the image processor PCB was found.

F02-205-01


2.6 Stabilizing the Scanning Lamp

A transformer PCB has been added to increase the voltage supplied to the inverter power supply from 38 to 40 V so that the intensity of the scanning lamp remains stable.

2.7 Detecting the State (open/closed) of the ADF

In addition to the open/closed detection sensor (ON at 30°) used in the GP605 (iR600), the machine's ADF is also equipped with an open/closed detection sensor (ON at 5°), thus enabling the detection of the state (open/closed) of the ADF.


If, for some reason, the state of the ADF sensor cannot be checked, detection will be based solely on the state of the sensor in the machine (as in the case of the GP605 (iR600)).

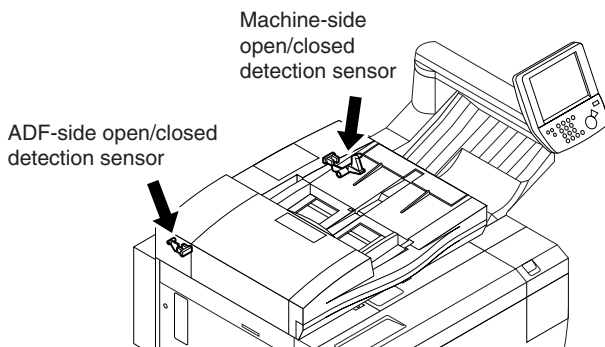

F02-207-01

• When the ADF Is Opened


When the ADF is opened, the ADF-side sensor goes ON as soon as it is opened 5° or higher [1], causing the machine to assume that the ADF has been opened and that the original has been removed; as a result, the size of the original that has been detected automatically will be cleared. Thereafter, when the ADF is opened farther and to 30° or higher [2], the machine-side sensor goes ON, enabling automatic detection of original size.

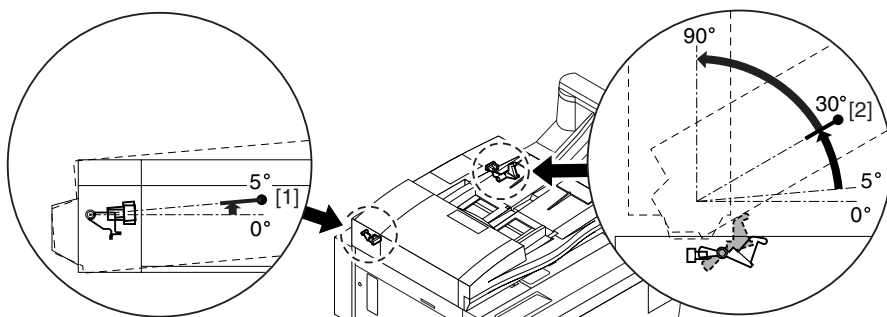

F02-207-02

- When the ADF Is Closed

When the ADF is closed, the machine-side sensor goes ON as soon as it is closed to 30° or lower [3], causing the machine to assume that the ADF is starting to close; 4 sec thereafter, the machine assumes that the ADF is fully closed [4].

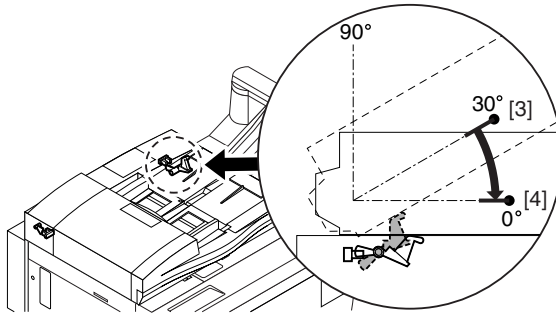

F02-207-03



Memo

Detecting the Size of an Original


The GP605 (iR600) is designed assuming that the ADF is fully closed 3 sec after the machine-side sensor is ON. It compares the states of the original size sensors when the machine-side sensor goes ON and 3 sec thereafter to identify the size of the original on the copyboard glass. If the user, therefore, does not close the ADF within 3 sec after the machine-side sensor goes ON, the GP605 (iR600) can wrongly identify the size as being A3. In the case of the machine, it uses 5 sec for the detection of original size without affecting the first copy time (i.e., by making use of the 2 sec required by the fluorescent lamp to go ON).

2.8 Detecting Dust in Stream Reading

In addition to the common points for stream reading, the machine uses an additional 6 points each for small-size and large-size sheets at intervals of 0.5 mm to avoid areas of dust (in total, 7 points for small-size and 7 points for large-size).

Normally, the machine uses the same point for reading as the GP605 (iR600); if it detects dust, however, it changes the point of reading to prevent dust from appearing in images. The detection of dust is executed at the end of each single job that uses stream reading; the machine moves the ADF belt idly when stream reading is selected and identifies any black line as an area of dust.


When it detects dust, it resets the current point of stream reading, and uses the point of reference on the leftmost edge for dust detection; if dust is detected, it moves the point of stream reading to the right by 1 point (0.5 mm) for detection of dust for a second time. If dust is not detected, the machine uses that point as the point for stream reading. If dust is detected once again, it will use the next point. If dust is detected at all 7 points, the machine will indicate the message “Copyboard Glass Soiled,” which will remain until the ADF is opened and the copyboard glass is cleaned. The machine will not use stream reading but use fixed reading as long as the message remains.

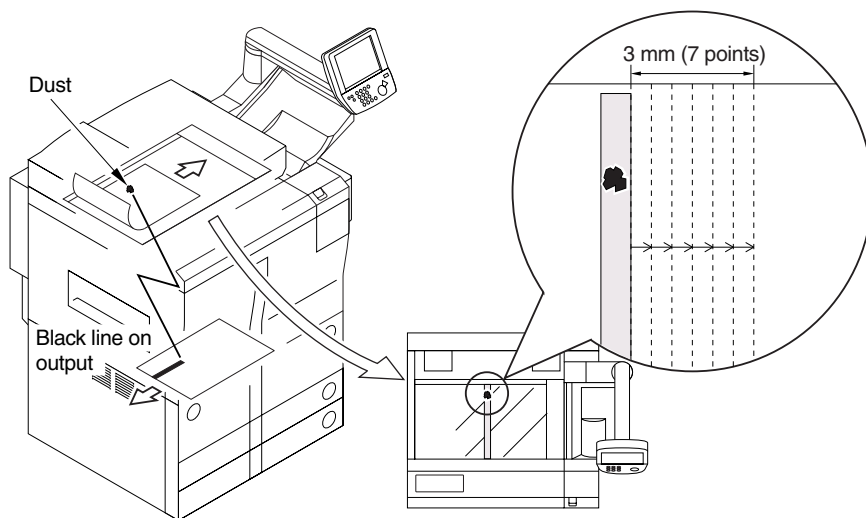

F02-208-01

Advise the user to clean the area where the CCD stops in stream reading if the message has appeared. A label indicating the points for stream reading (for small-size and large-size) is attached to the rear of the copyboard glass.

If a jam has occurred, the machine will not execute dust detection at the end of a job. If the ongoing job is cancelled, it will execute dust detection at the end of operation.

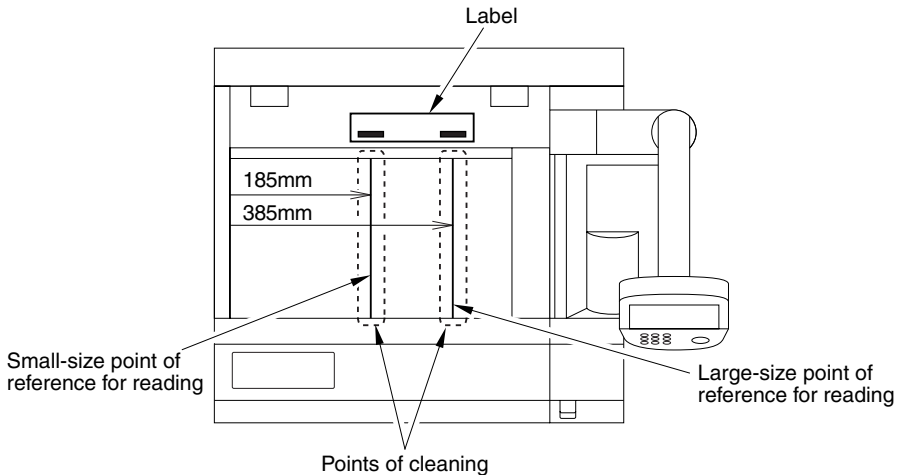

F02-208-02




For the following, the machine can indicate the cleaning message in the absence of dust on the glass:

- The ADF feeding belt is appreciably soiled.
- CCD-ADJ/LUT-ADJ is not executed correctly.

If the message appears, clean the belt (using alcohol) or execute CCD-ADJ/LUT-ADJ.

2.9 Disassembly/Assembly


The mechanical characteristics of the machine are as described herein; disassemble/assemble the machine as instructed and with the following in mind:

1.  Before starting any disassembly/assembly work, turn off the main power switch, and disconnect the power plug.
2. Unless otherwise specifically instructed, assemble the machine by reversing the steps used to disassemble it.
3. Identify the screws by type (length, diameter) and location.
4. To protect against static charges, one of the mounting screws of the rear cover comes with a toothed washer. Be sure not to leave out the washer when assembling the machine.
5. To ensure electrical continuity, the mounting screw for the grounding wire and the varistor comes with a washer. Be sure not to leave out the washer when assembling the machine.
6. As a rule, do not operate the machine with any of its parts removed.
7. When sliding out the duplex feeder unit or the fixing assembly, be sure to turn off the front cover switch or the power switch.

2.9.1 No. 1 Mirror Base Assembly


a. Remove the Scanning Lamp/Scanning Lamp Heater

- 1) Remove the 2 screws [1], and detach the right glass retainer [2].
- 2) Shift the copyboard glass [3] to the right to detach; then, detach the scanning lamp cover [4].

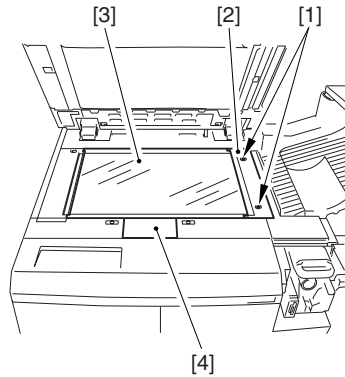

F02-209-01

- 3) Remove the 4 screws [1], and detach the original lamp inside cover [2].

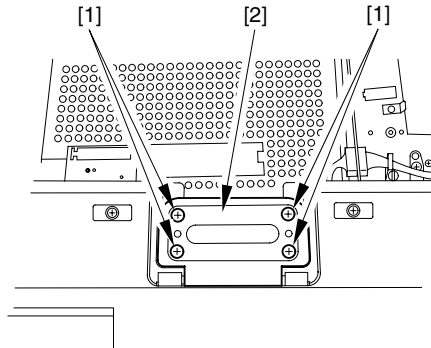


F02-209-02

- 4) Move the No. 1 mirror base [1] to where the scanning lamp mirror inside cover has been removed; then, remove the 2 screws [2], and detach the anti-reflection plate [3].




When moving the mirror base, be sure not to touch the mirror or the lamp or impose force on them to avoid dirt or damage.

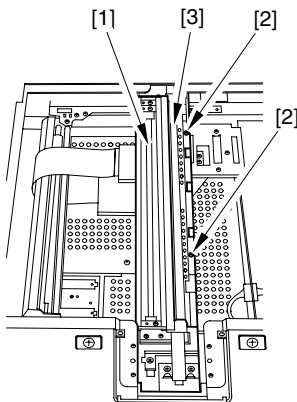


F02-209-03



When mounting the anti-reflection plate, be sure to fit the plate firmly in the cut-in ([2] at front, [3] at rear) of the No. 1 mirror base. Also, be sure that the connector in step 5) is firmly to the anti-reflection plate.

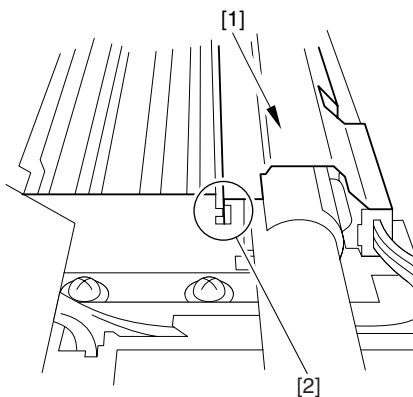


F02-209-04

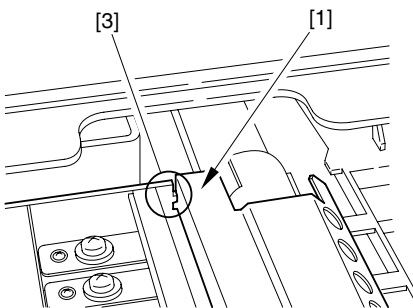


F02-209-05

- 5) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the scanning lamp [4] from the electrode plate (front) [3].

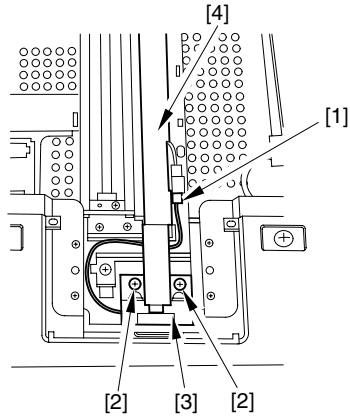


F02-209-06

- 6) Remove the scanning lamp [1] (w/ scanning heater) to the front.

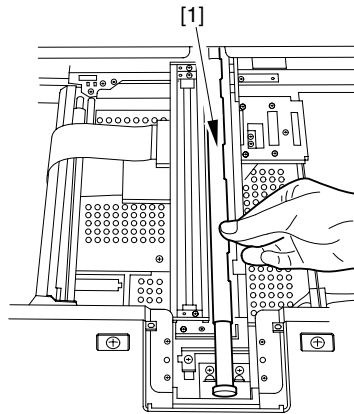

F02-209-07


- 7) Detach the scanning lamp heater [1] from the scanning lamp [2].

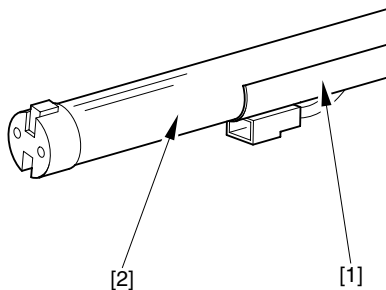

F02-209-08

b. Points to Note When Replacing the Scanning Lamp

- Do not work if the surface of the scanning lamp is hot.
- Do not leave fingerprints on the surface of the scanning lamp.
- If the surface of the scanning lamp is soiled, dry wipe it.
- When mounting the scanning lamp heater [2] to the scanning lamp [1], be sure to fit it with reference to the marking [3]. (The connector [4] of the scanning lamp heater must be to the front of the machine.)
- Also, make sure that the distance A between the top edge of the scanning lamp and the top edge of the light opening [5] is about 6 to 7 mm when viewed from the side.
- When mounting the scanning lamp to the machine, be sure not to touch the light opening [5].

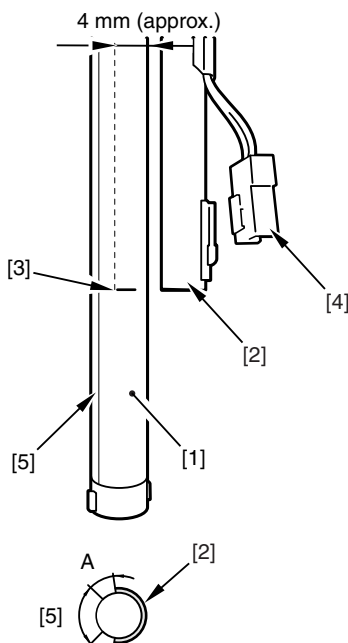

F02-209-09

c. When Replacing the Scanning Lamp

- 1) Check to make sure that the Execute/Memory lamp in the control panel is OFF, and turn off the main power switch.
- 2) Disconnect the power plug from the power outlet.



The machine remains powered as long as the power plug is connected. Be sure to disconnect the power plug from the power outlet without fail.


- 3) Replace the scanning lamp.
- 4) Assemble the machine, and connect the power plug to the power outlet; then, turn on the main power switch.
- 5) Execute the following in service mode in sequence:
 1. COPIER>FUNCTION>CCD>CCD-ADJ
 2. COPIER>FUNCTION>CCD>LUT-ADJ
- 6) Implement the service mode described below to the service sheet which is to be kept in the service log book case.

COPIER>FUNCTION>MISC-P>LBL-PRNT
- 7) Turn off and then on the main power switch.

2.9.2 Scanner Drive Assembly


a. Removing the Scanner Motor

- 1) Remove the ADF.
- 2) Remove the upper right cover. (See 8.4.2.a.)
- 3) Remove the rear cover. (See 8.4.1.e.)
- 4) Remove the upper cover. (2 screws)
- 5) Remove the harness band [1].
- 6) Remove the 2 screws [2], and detach the rear over support plate [3].

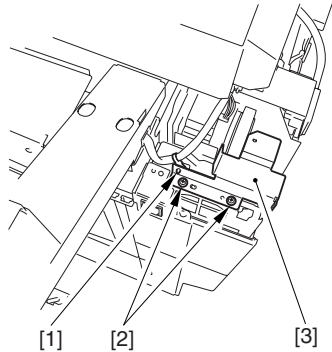

F02-209-10

- 7) Remove the right pocket plate. (3 screws)
- 8) Lift the upper rear cover [1], and remove the 2 screws [2]; then, detach the DF connector unit [3].

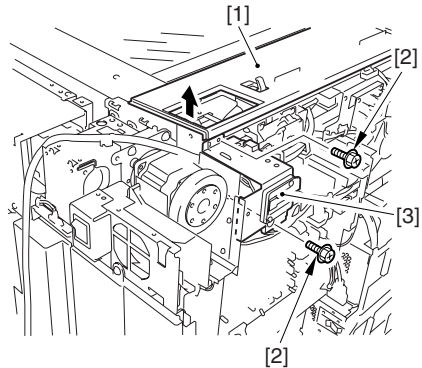


F02-209-11

- 9) Disconnect the connector [1], and free the harness from the 2 edge saddles [2].
- 10) Remove the 3 screws [3], and detach the scanner motor [4].



REF.

When mounting it, be sure to set the tension to 10 ± 2 N (1 ± 0.2 kgf) using a spring gauge for correct positioning.

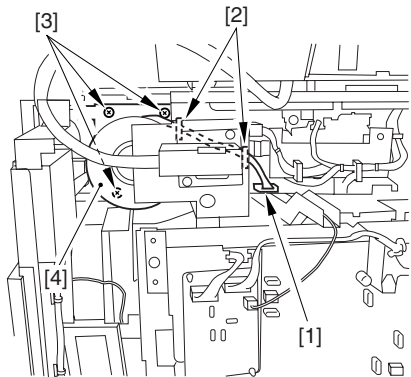

F02-209-12

b. Scanner Drive Cable


b-1 Adjusting the Tension of the Scanner Drive Cable

When attaching the scanner cable, be sure to keep a mirror positioning tool (FY9-3040) on hand.


- 1) Remove the ADF.
- 2) Remove the copyboard glass. (see 2.9.1.a.)
- 3) Remove the upper front cover unit. (See 8.4.1.g.)
- 4) Remove the inverter unit. (See 2.9.3.b.)
- 5) Move the No. 1 mirror case where the cable fixing [1] of the base is visible from the opening in the side plate of the machine.



When moving the mirror base, be sure not to touch the mirror or the lamp or impose force to avoid dirt and damage.

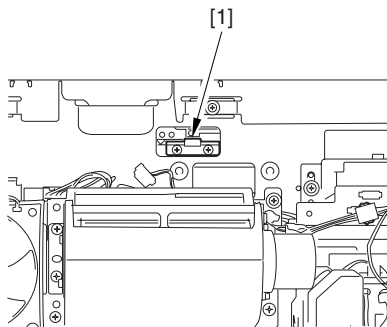


F02-209-13

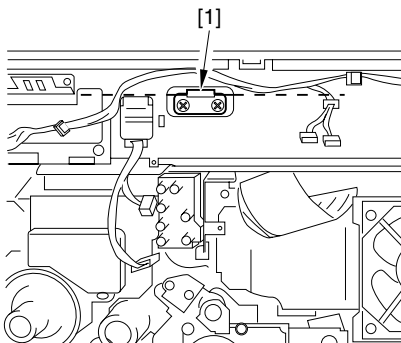

Rear

F02-209-14


- 6) Fit the scanner cable on the pulley and the hook as indicated.

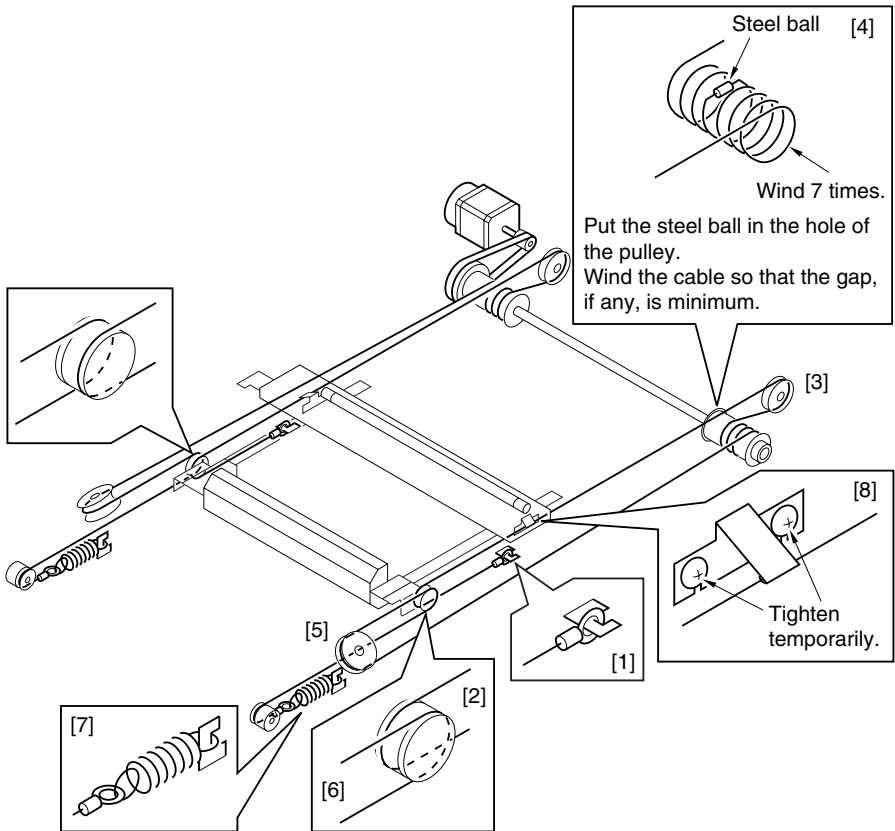

F02-209-15


- 7) Fit the mirror positioning tool [1] between the No. 1 mirror base and the No. 2 mirror base; then, fit the pin [2] attached to the mirror positioning tool.

(front)

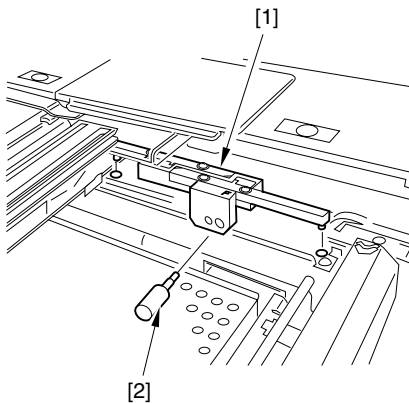

F02-209-16


(rear)

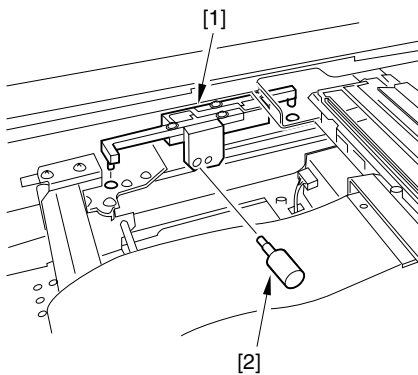

F02-209-17


- 8) Secure the cable fixing [1] that was temporarily fixed in place in step 6) by tightening the 2 screws [2] from the opening in the side plate.

(front)

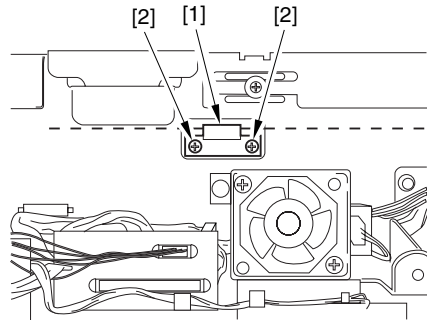

F02-209-18

(rear)

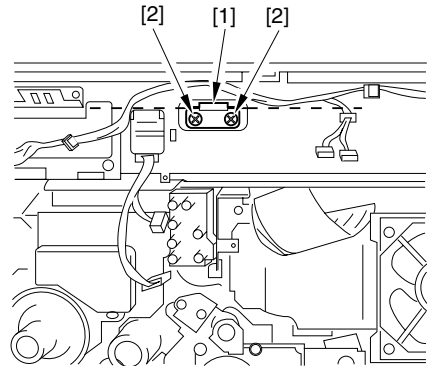

F02-209-19

- 9) Detach the mirror positioning tool.
10) Reverse steps 1) through 4).

b-2 Removing the No. 1 Mirror Case Flexible Cable




Do not disconnect the connector (connected to the No. 1 mirror base) of the flexible cable unless you are replacing the No. 1 mirror base. (Clean the mirror without detaching the cable.)

- 1) Remove the right glass retainer. (2 screws)
- 2) Remove the copyboard.
- 3) Move the No. 1 mirror base [1] to the center.




When moving the mirror base, be sure not to touch the mirror or the lamp or impose force to avoid dirt or damage.

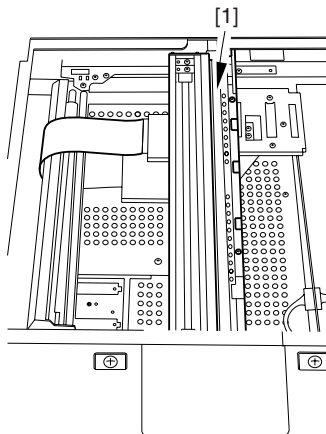


F02-209-20

- 4) Peel off the Warning label [1] from the flexible cable [2].

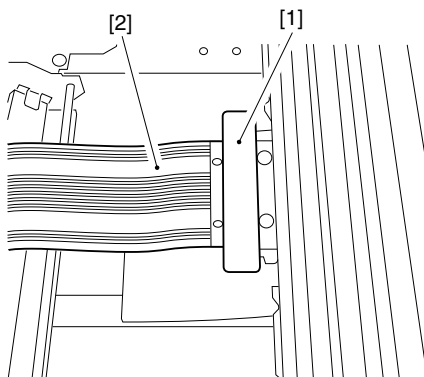

F02-209-21

- 5) Push in the claw [1] inside to free the flexible cable fixing plate [2] of the connector.

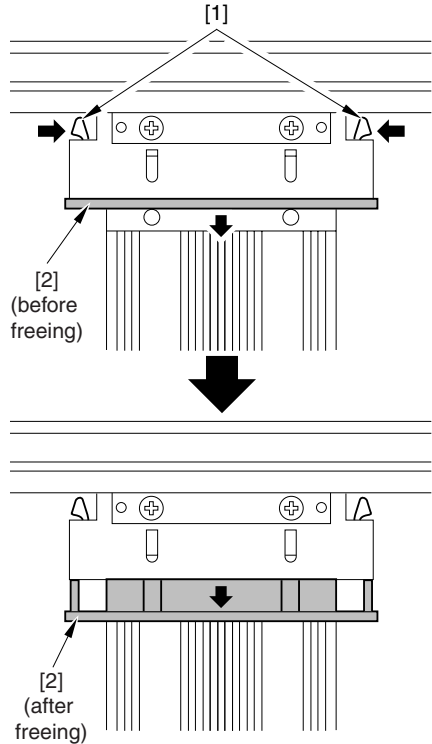


F02-209-22

- 6) Using a small screwdriver [1], push the 2 protrusions [3] used to hook the flexible cable [2] to disconnect the cable from the connector.



- When mounting it, butt and keep the flexible cable against the rearmost, and push in the fixing plate while holding it level.
- When pushing in the fixing plate, take care not to touch the reflecting plate.

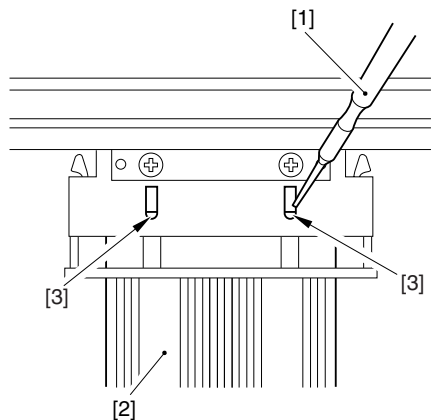


F02-209-23

2.9.3 PCBs


a. Removing the Light Adjustment PCB

- 1) Remove the copyboard glass.
- 2) Remove the screw [1] from the No. 1 mirror base assembly; then, while pushing down the claws [2], detach the light adjustment PCB holder.

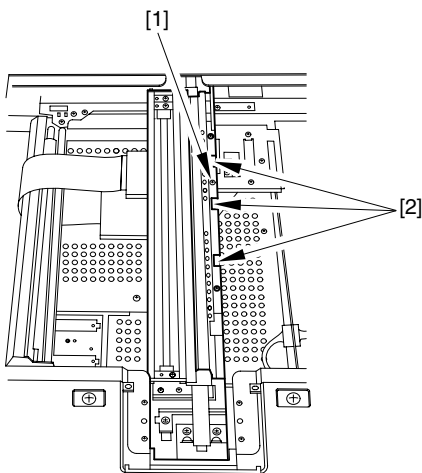

F02-209-24


- 3) Disconnect the connector J165 [1], and remove the screw [2]; then, detach the light adjustment PCB [3].

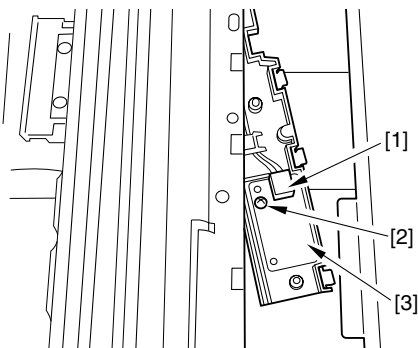

F02-209-25


b. Removing the Inverter PCB

- 1) Remove the rear cover. (See 8.4.1.e.)
- 2) Remove the rear upper cover (2 screws)
- 3) Remove the inverter cooling fan duct. (See 8.4.3.h.)
- 4) Remove the 2 screws [1], and disconnect the 7 connectors [2].

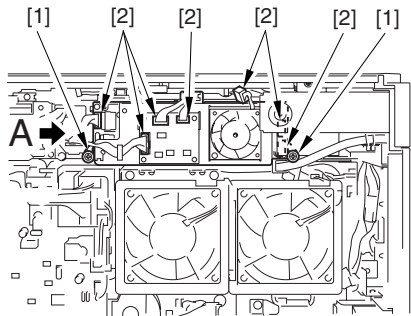

F02-209-26


- 5) Free the left and right hooks [2] (1 pc. each) on the mounting plate of the inverter unit [1], and detach them upward.

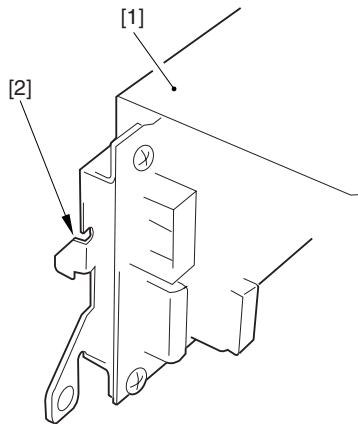

View from A

F02-209-27


- 6) Remove the 6 screws [1], and detach the inverter PCB [2].

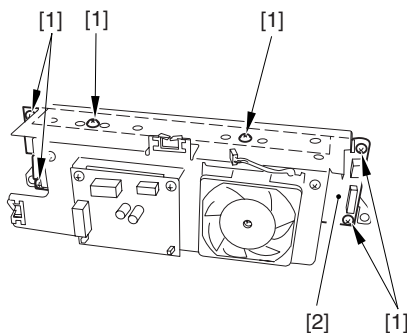

F02-209-28

c. Removing the Transformer Unit


- 1) Remove the rear cover. (See 8.4.1.e.)
- 2) Remove the rear upper cover (2 screws), and remove the upper left cover (3 screws).
- 3) Remove the inverter cooling fan duct. (See 8.4.3.h.)
- 4) Remove the 2 screws [1], and free the reader controller communication cable [2] from the wire saddle [3]; then, detach the transformer unit [4].

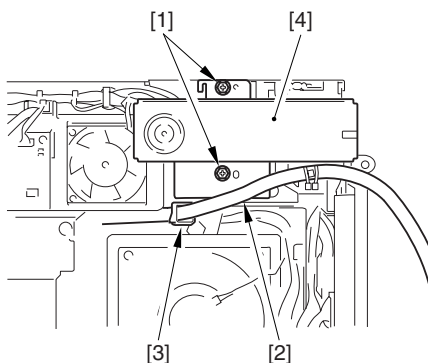

F02-209-29

d. Removing the Transformer PCB


- 1) Remove the rear upper cover. (2 screws)
- 2) Remove the inverter cooling fan duct. (See 8.4.3.h.)
- 3) Disconnect the connectors [1], and remove the 4 screws [2]; then, detach the transformer PCB [3].

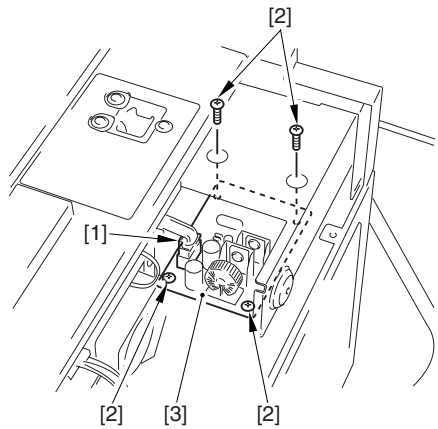

F02-209-30

e. Removing the Reader Controller PCB

- 1) Remove the original size sensor. (See 2.9.4.a.b.)
- 2) Remove the reader controller cover. (See 2.9.4.h.)
- 3) Disconnect all connectors on the Reader Controller PCB.
- 4) Disconnect the DDIS cable [1] and the 2 flexible cables [2]; then, remove the 9 screws [3] and the stepped screw [4], to detach the reader controller PCB [5] in the direction of the arrow.

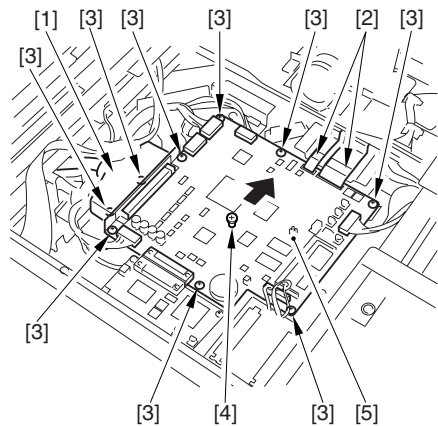

F02-209-31

f. Points to Note When Replacing the reader controller PCB

- 1) Execute the following two items in service mode to print out settings stored under items: COPIER>FUNCTION>MISC-P>LBL-PRNT and COPIER>FUNCTION>MISC-P>USER-PRT.
- 2) Check to make sure that the Execute/Memory lamp in the control panel is OFF, and turn off the main power switch.
- 3) Disconnect the power plug from the power outlet.




The machine remains powered as long as the power plug is connected. Be sure to disconnect the power plug from the wall outlet.

- 4) Replace the reader controller PCB.
- 5) Assemble the machine, and connect the power plug to the power outlet; then, turn on the main power switch.
- 6) Execute the following in service mode: COPIER>FUNCTION>CLEAR>R-CON.
- 7) Turn off and then on the main power switch.
- 8) Execute the following in service mode: COPIER>FUNCTION>CCD>CCD-ADJ.
- 9) Enter the settings printed out in step 1) for the following:
 - service mode
 - COPIER>ADJUST>ADJ-XY (4 items)
 - COPIER>ADJUST>LAMP (1 item)
 - COPIER>ADJUST>CCD (29 items)
 - user mode
- 10) Turn off and then on the main power switch, and execute the following in service mode to generate a service label; keep the service label in the service book case: COPIER>FUNCTION>MISC-P>LBL-PRNT.

g. Removing the Original Orientation Detection PCB


- 1) Remove the reader controller cover.
(See 2.9.4.h.)
- 2) Remove the 3 screws [1], and remove the original orientation detection PCB [2] in the direction of the arrow.

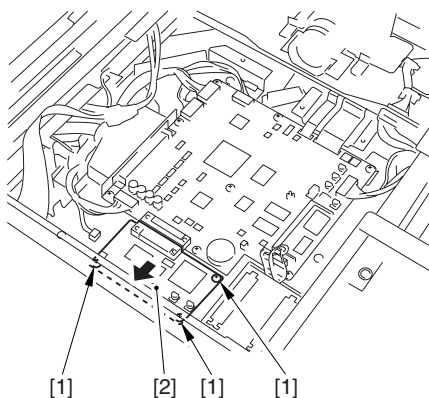

F02-209-32

h. Removing the Reader Controller PCB Unit

- 1) Remove the reader controller cover.
(See 2.9.4.h.)
- 2) Disconnect the 8 connectors of the reader controller PCB, DDIS cable, and 2 flexible cables.
- 3) Remove the 8 screws [1], and detach the reader controller PCB unit [2].

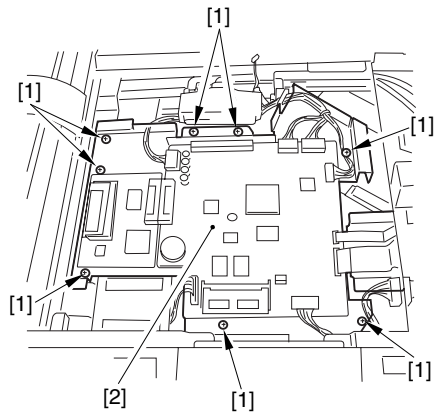


F02-209-33

2.9.4 Others


a. Removing the Original Size Sensor 1/2

- 1) Remove the copyboard glass. (See 2.9.1.a.)
- 2) Move the No. 1 mirror base to the right edge.
- 3) Remove the 2 screws [1], and disconnect the connector [2]; then, detach the original size sensor unit (front) [3].

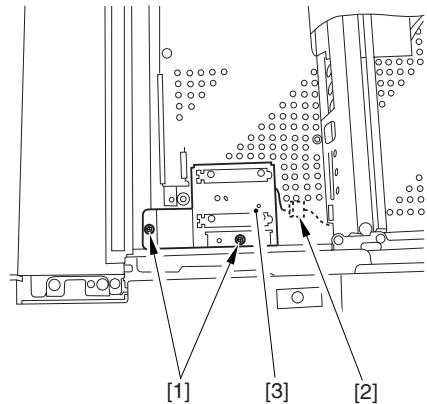

F02-209-34


- 4) Disconnect the connector [1] (1 pc. each), and detach the original size 1/2 [2].

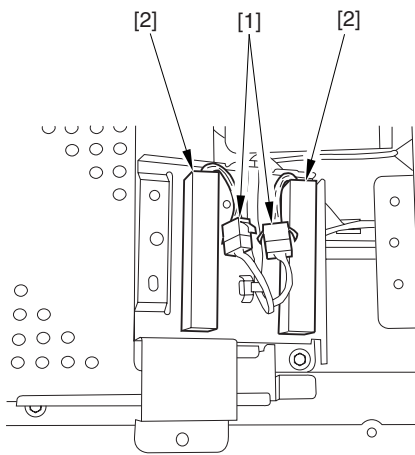

F02-209-35


b. Removing the Original Size Sensor 3/4

- 1) Remove the copyboard glass. (See 2.9.1.a.)
- 2) Move the No. 1 mirror base to the left edge.
- 3) Remove the screw, and disconnect the connector [2]; then, detach the original size sensor unit (rear) [3].

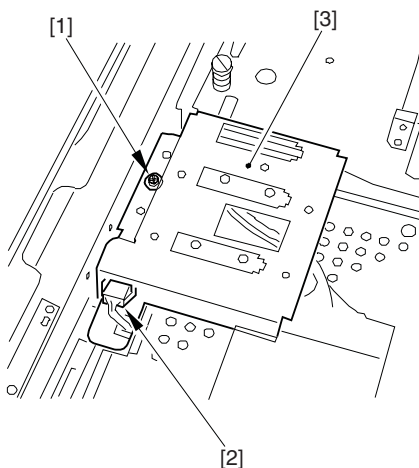

F02-209-36


- 4) Disconnect the connector [1] (1 pc. each), and detach the original size sensor 3/4 [2].

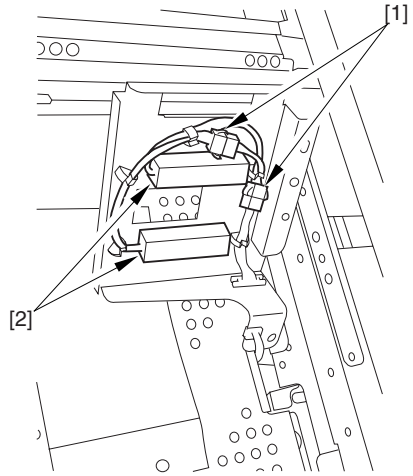

F02-209-37


c. Removing the Scanner Home Position Sensor

- 1) Remove the transformer unit. (See 2.9.3.c.)
- 2) Free the harness from the wire saddle [1]; then, disconnect the connector [2], remove the screw [3], and detach the sensor mounting plate [4].

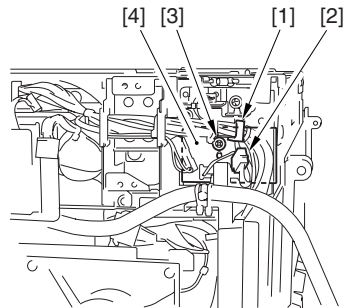

F02-209-38


- 3) Disconnect the connector [1], and remove the screw [2]; then, detach the scanner home position sensor [3].

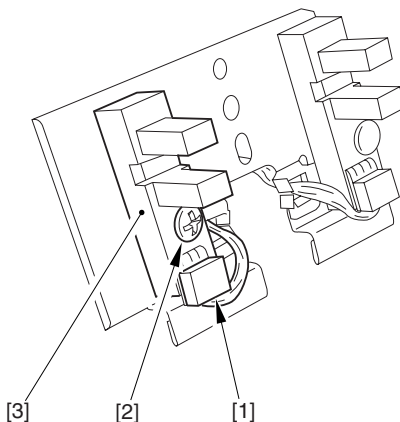

F02-209-39


d. Removing the Copyboard Glass Sensor

- 1) Remove the transformer unit. (See 2.9.3.c.)
- 2) Free the harness from the wire saddle [1], and remove the screw [2]; then, detach the sensor mounting plate [3].

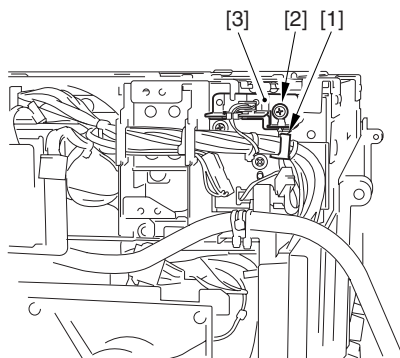

F02-209-40


- 3) Disconnect the connector [1], and detach the copyboard glass sensor [2].

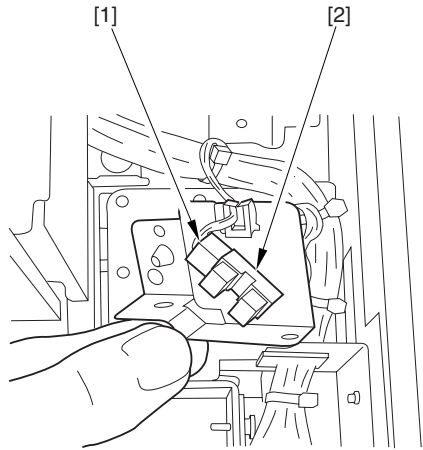

F02-209-41


e. Removing the Image Leading Edge Sensor

- 1) Remove the transformer unit. (See 2.9.3.c.)
- 2) Free the harness from the wire saddle [1]; then, disconnect the connector [2], remove the screw [3], and detach the sensor mounting plate [4].

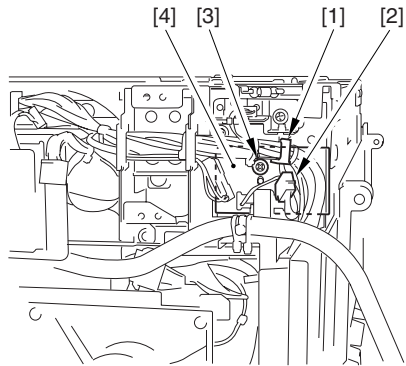

F02-209-42


- 3) Disconnect the connector [1], remove the screw [2], and detach the image leading edge sensor [3].

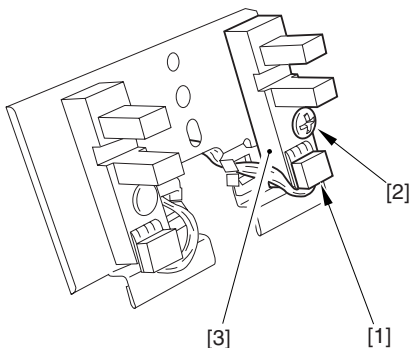

F02-209-43


f. Removing the Standard White Plate

- 1) Remove the copyboard glass. (See 2.9.1.a.)
- 2) Remove the small cover [1] for the standard white plate with a flat-blade screwdriver.

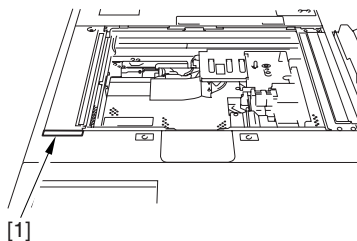


F02-209-44

- 3) Remove the 2 screws [1], and detach the standard white plate cover [2].

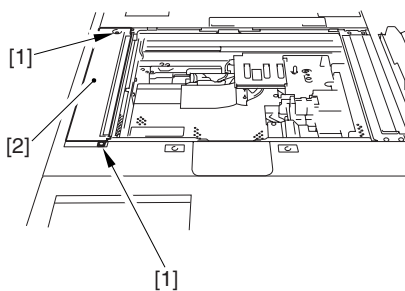

F02-209-45

- 4) Remove the 4 screws [1], and detach the standard white plate [2].

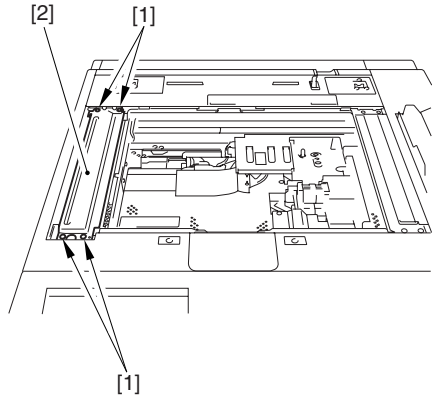

F02-209-46

g. When Replacing the Standard White Plate

- 1) Check to be sure that the Execute/Memory lamp in the control panel is OFF, and turn off the main power switch.
- 2) Disconnect the power plug from the power outlet.




The machine remains powered as long as its power plug is connected. Be sure to disconnect the power plug from the power outlet.

- 3) Replace the standard white plate.
- 4) Assemble the machine, and connect the power plug; then, turn on the main power switch.
- 5) Execute the following in service mode in sequence:
 1. COPIER>FUNCTION>CCD>CCD-ADJ
 2. COPIER>FUNCTION>CCD>LUT-ADJ
- 6) Implement the service mode described below to the service sheet which is to be kept in the service log book case.
COPIER>FUNCTION>MISC-P>LBL-PRNT
- 7) Turn off and then on the main power switch.


h. Removing the Reader Controller Cover

- 1) Remove the original size sensor unit (rear). (See 2.9.4.b.)
- 2) Remove the 2 screws [1], and detach the flexible cable [2] together with the cover sheet [3].
- 3) Disconnect the flexible cable [2] from the connector [4].

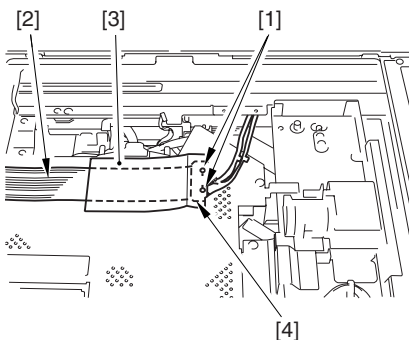

F02-209-47

- 4) Remove the 6 screws [1], and detach the reader controller cover [2].

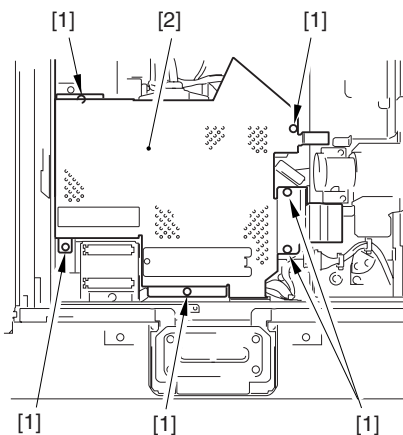

F02-209-48


3 Image Processing System

3.1 Outline of the Image Processing System

The image processing system has the following major functions:

- CCD (image sensor)
 - number of lines: 1; number of pixels: 7500; pixel size: $7 \times 7 \mu\text{m}$
- Shading Correction
 - shading adjustment: executed in service mode
 - shading correction: executed for each copy
- Auto Density Adjustment (AE)
 - executed for each single line in main scanning direction

The following is the functional construction of the image processing system:

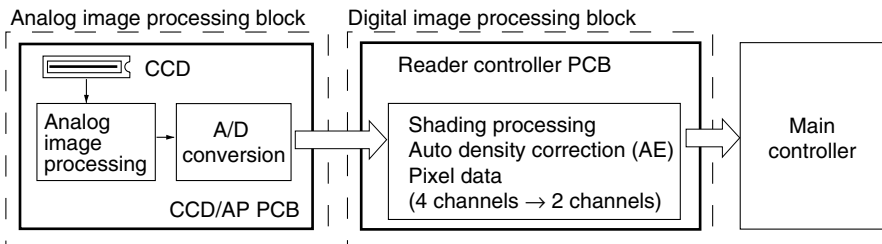

F02-301-01

Each PCB of the image processing system has the following functions:

- [1] **CCD/AP PCB**
CCD drive, analog image processing, A/D conversion
- [2] **Reader Controller PCB**
shading correction, auto density adjustment (AE), image data conversion (4 channels → 2 channels)

3.2 Changes Made to the Image Processing System

| Unit/location | Changes from GP605 (iR600) | Purpose of change | Remarks | Reference |
|------------------------|---|--|---|--|
| Image processing block | Modified the composition for the image processing PCB. | To support iR machines; composition of PCB, IP PCB, MFC PCB. | In the GP605 (iR600), mainly the CCD circuit. | 3.1 Outline of the Image Processing System |
| Main controller | Made to support iR machines. | | | Chapter 3 Main Controller |
| HDD | Changed the HDD capacity to 10 GB. | To enhance image processing performance. | In the GP605 (iR600), 2 GB. | |
| Binary processing | Used the TBIC method as the error diffusion method for text, text/photo, print photo modes. | To enhance image processing performance. | In the GP605 (iR600), the R-ED method. | Chapter 3 Main Controller |
| | Made to use 141 lines for the dither screen method for print photo mode. | To enhance the resolution of print photos. | For the GP605 (iR600), 106 lines. | Chapter 3 Main Controller |
| Reader controller | Made to detect the orientation of only the 1st original. | To review the specifications. | In the GP605 (iR600), the orientation of all originals. | 3.7 Detecting the Orientation of Originals |


T02-302-01

3.3 4-Channel High-Speed Reading CCD

To support high-speed reading at 80 ipm, the machine uses a 4-channel high-speed reading CCD. It consists of two CCDs connected to form a single entity (each, half length of a common CCD); the entire CCD is divided in the middle into first half and last half.

Reading starts simultaneously at both left and right sides, thereby cutting the data transfer time required for reading by half and ultimately enabling high-speed reading.

The image data is divided into 4 channels: first-half even-numbered pixels, first-half odd-numbered pixels, last-half even-numbered pixels, and last-half odd-numbered pixels. The following diagram shows how CCD data is transferred:

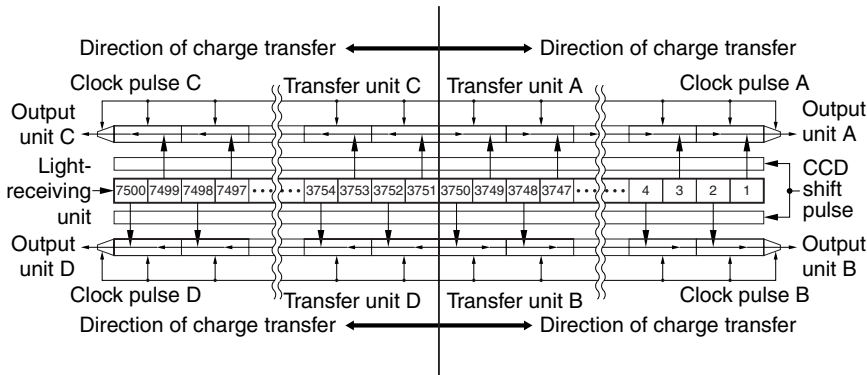

F02-303-01

3.4 CCD Adjustment

As mentioned, the CCD consists of two segments. If the CCD gain characteristics differ between its first half and its last half, the image density read on the left side and the right side of its joint will differ, causing a discrepancy in density in the image.

If the reader controller PCB or the CCD/AP PCB is replaced or when the CCD correction data stored in the S-RAM of the reader controller PCB is lost, CCD correction must be executed in service mode, thereby making the gain around the joint between first half and last half virtually the same. The parameters that occur after adjustment will all be stored in the S-RAM on the reader controller PCB.

The following three methods may be used for adjustment:



A. COPIRE>FUNCTION>CCD>CCD-ADJ (shading auto correction)

Use it to execute shading correction for the CCD (same as the GP605 (iR600)).

B. COPIRE>FUNCTION>CCD>LUT-ADJ (gain simple correction)

Use it to execute CCD gain correction with a blank sheet.

C. COPIRE>FUNCTION>CCD>LUT-ADJ2 (gain full correction)

Use it if CCD simple correction fails. Use it with the 10-Gradation Chart.

Use any of the above methods as needed.




Start with A, and then B; if both fail, execute C. Do not move to B or C without correctly executing A.

3.5 Analog Image Processing

Analog image processing is performed by the CCD/AP PCB, and it mainly consists of the following:

- CCD drive
- CCD output gain correction, offset correction
- CCD output A/D conversion

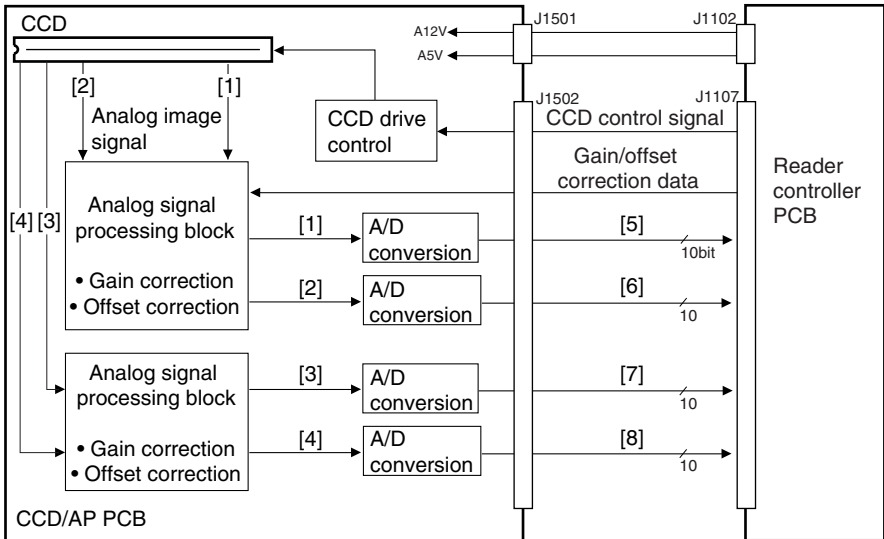


- [1] 1st half even-numbered pixel analog image signal
- [2] 1st half odd-numbered pixel analog image signal
- [3] 2nd half even-numbered pixel analog image signal
- [4] 2nd half odd-numbered pixel analog image signal
- [5] 1st half even-numbered pixel digital image signal
- [6] 1st half odd-numbered pixel digital image signal
- [7] 2nd half even-numbered pixel digital image signal
- [8] 2nd half odd-numbered pixel digital image signal

F02-305-01

3.6 Digital Image Processing

Digital image processing is performed by the reader controller PCB, and it mainly consists of the following:

- shading correction
- auto density correction (AE)
- conversion of 4-channel pixel data to 2-channel pixel data

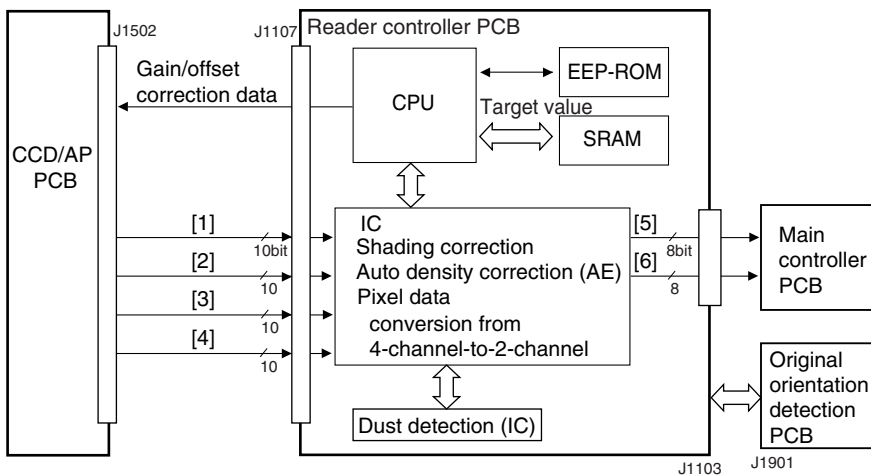

- [1] 1st-half even-numbered pixel digital image signal
- [2] 1st-half odd-numbered pixel digital image signal
- [3] 2nd-half even-numbered pixel digital image signal
- [4] 2nd-half odd-numbered pixel digital image signal
- [5] even-numbered pixel digital image signal
- [6] odd-numbered pixel digital image signal


F02-306-01

3.7 Detecting the Orientation of Originals

The orientation of an original placed in the ADF is detected in relation to the direction of the test area of the original by reading text data. The GP605 (iR600) detects the orientation of each original, making necessary changes for each if necessary. On the other hand, the machine detects the orientation of only the first original, and uses the detected orientation as a reference for changes needed for subsequent pages. The machine uses the result of detection to determine the following:

- binding margin position
- stapling position
- layout orientation for reduced page composition


As needed, the machine rotates the image, thereby reducing waste of paper. The time it saves from not having to detect the orientation of all originals also helps increase its productivity.

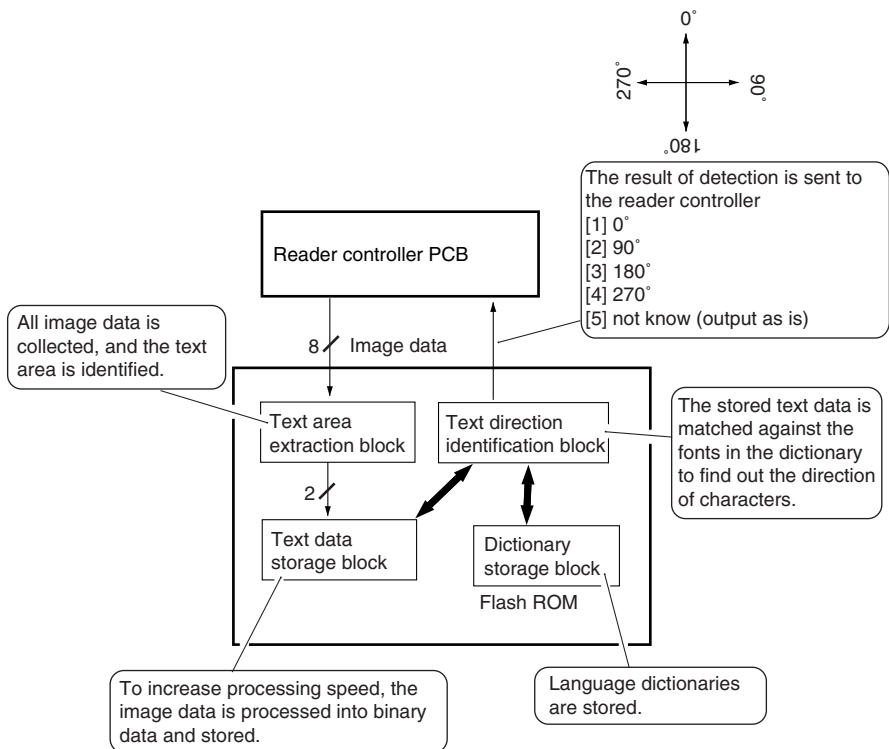

F02-307-01

3.8 Disassembly/Assembly


The mechanical characteristics of the machine are as described herein; assemble/assemble the machine as instructed and with the following in mind:

1.  Before starting any disassembly/assembly work, turn off the main power switch, and disconnect the power plug.
2. Unless otherwise specifically instructed, assemble the machine by reversing the steps used to disassemble it.
3. Identify the screws by type (length, diameter) and location.
4. To protect against static charge, one of the mounting screws of the rear cover comes with a toothed washer. Be sure not to leave out the washer when assembling the machine.
5. To ensure electrical continuity, the mounting screw for the grounding wire and the varistor comes with a washer. Be sure not to leave out the washer when assembling the machine.
6. As a rule, do not operate the machine with any of its parts removed.
7. When sliding out the duplex feeder unit or the fixing assembly, be sure to turn off the front cover switch or the power switch.

3.8.1 CCD Unit


a. Removing the CCD Unit

- 1) Remove the reader controller cover.
(See 2.9.4.h.)
- 2) Free the front/rear claw [2] of the CCD cover [1], and detach the CCD cover.

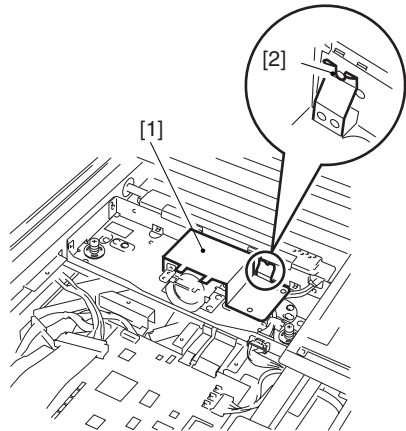

F02-308-01

- 3) Remove the fixing screw [1], spring [2], and spring plate [3], and disconnect the connector (3 locations); then, disconnect the 2 flat cables [5] from the reader controller PCB, and detach the CCD unit [6].

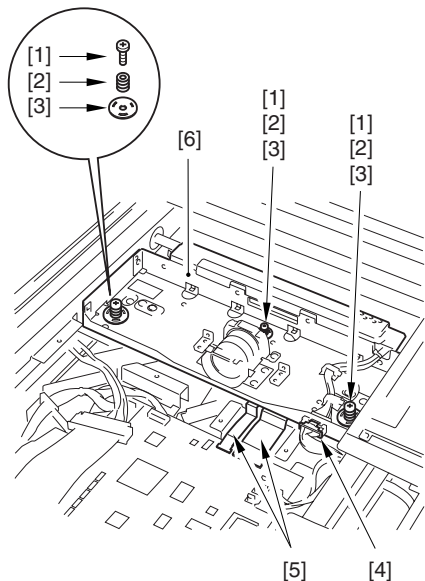

F02-308-02


b. When Replacing the CCD Unit

- 1) Check to make sure that the Execution/Memory lamp in the control panel is OFF, and turn off the main power switch.
- 2) Disconnect the power plug from the power outlet.



The machine remains powered as long as the power plug is connected. Be sure to disconnect the power plug from the power outlet.


- 3) Replace the CCD unit.
- 4) Assemble the machine, and connect the power plug to the power outlet; then, turn on the main power switch.
- 5) Execute the following in service mode in sequence:
 1. COPIER>FUNCTION>CCD>CCD-ADJ
 2. COPIER>FUNCTION>CCD>LUT-ADJ
- 6) All items of the following will be updated; record them on the service label:
COPIER>ADJUST>CCD, COPIER>ADJUST>LAMP>L-DATA.
- 7) Turn off and then on the main power switch.
- 8) Make test copies in book mode and feeder mode to make sure that the images are not displaced; if displaced, execute the following:
Book Mode
A: COPIER>ADJUST>ADJ-XY>ADJ-X
B: COPIER>ADJUST>ADJ-XY>ADJ-Y

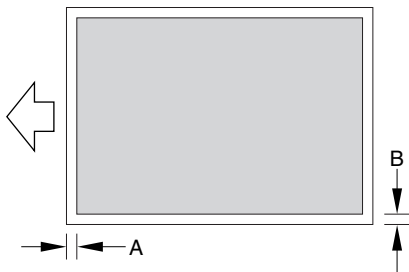

F02-308-03

Feeder Mode

C: COPIER>ADJUST>ADJ-Y-DF

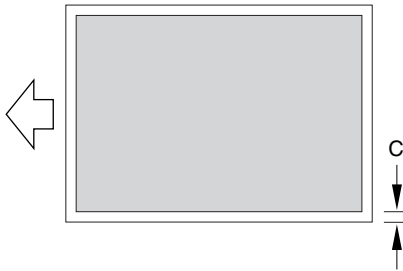

F02-308-04

- 9) Execute the following in service mode to print out a service label, and store away the service label in the service book case.


3.8.2 Hard Disk



as Hard Disks are susceptible to vibration, handle with care.


a. Removing the Hard disk

- 1) Remove the main control box.
- 2) Remove the 5 screws [1], and detach the cover [2].

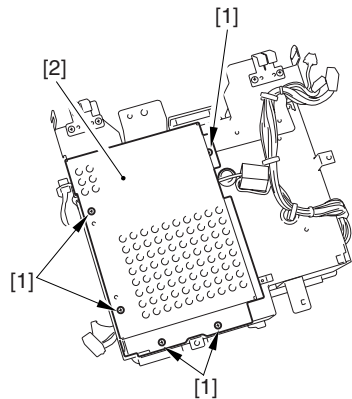


F02-308-05

- 3) Remove the 4 screws [1], and detach the hard disk cover [2].

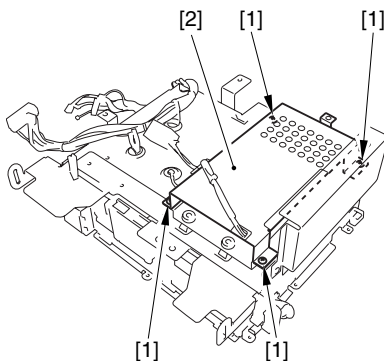


F02-308-06

- 4) Remove the 3 screws [1], and detach the lower cover plate [2].

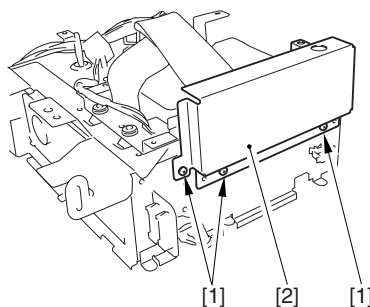


F02-308-07

- 5) Remove the 4 screws [1], disconnect the 2 connectors [2], and remove the mounting screws [4] of the grounding wires [3]; then, detach the hard disks [5] together with the mounting base.

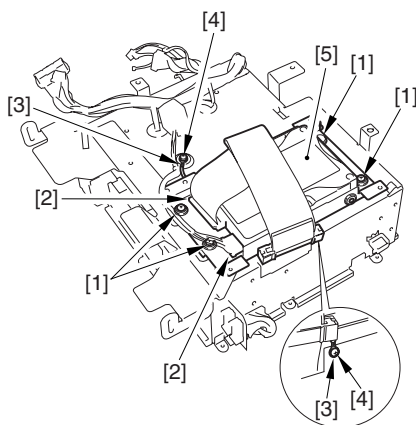

F02-308-08

- 6) Remove the 4 screws [1], and detach the hard disk [2].

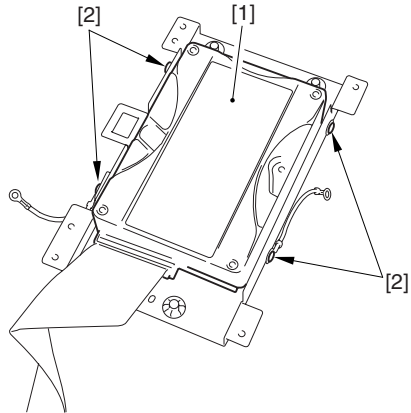

F02-308-09

b. When Replacing the Hard Disk



When replacing the hard disk unit, be sure of the following:


1. Take measures against static charges to protect against static damage.
 2. Do not subject the hard disk unit to impact.
-
- 1) Replace the hard disk unit.
 - 2) Assemble the machine, and connect the power plug to the power outlet.
 - 3) Connect a PC to which the Service Support Tool has been installed.
 - 4) Turn on the PC, and turn on the main power switch while pressing '2' and '8' in the control panel at the same time.
 - 5) Using the Service Support Tool, format the hard disk unit and install the system software.

Blank page

4 Laser Exposure System

4.1 Outline of the Laser Exposure System

The laser exposure system consists of a laser unit (source of laser beams) and a polygon mirror. It scans the photosensitive drum (main scanning direction) to create a latent static image. It is a twin-laser mechanism (laser A, laser B), and its basic construction is as shown in F02-401-01 and T02-401-01.

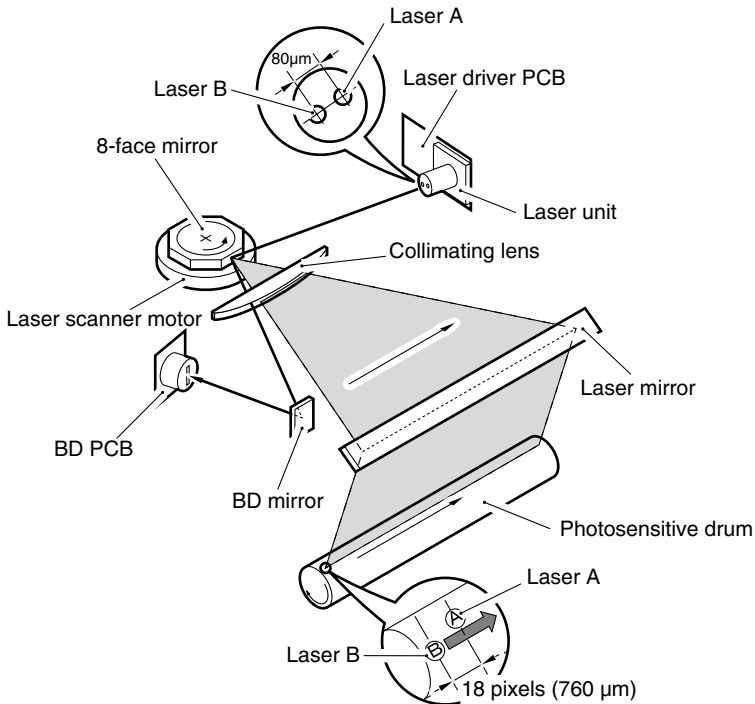

F02-401-01

| Component | Description |
|--------------------------|--|
| Laser semi-conductor | Visible laser light (wave length: 675 nm; output: 7 mW), twin-laser exposure |
| Laser scanner motor (M4) | DC motor, 2-speed control; rotation speed: 44000 rpm |
| Polygon mirror | 8-face |
| BD mirror/BD PCB | Used to detect laser beams. |
| Laser driver PCB | Used to control laser activation. |
| Scanner motor driver PCB | Used to control the rotation of the laser scanner motor. |

T02-401-01


4.2 Changes Made to the Laser Exposure System

| Unit/location | Changes to GP605 (iR600) | Purpose of change | Remarks | Reference |
|------------------------------|---|----------------------------------|---|-----------|
| Laser unit Polygon mirror | Increased the laser output to 7 mW. | To support higher process speed. | In the GP605 (iR600), 5 mW. | |
| | Increased the rotation speed to about 44000 rpm (full speed). | To support higher process speed. | In the GP605 (iR600), about 27000 rpm. (In the GP605 (iR600), about 20000 rpm) | |
| | (in standby, about 22000 rpm) | | | |
| | Made to use full speed mode in standby. | To support higher process speed. | For the GP605 (iR600), standby rotation. | |

T02-402-01

4.3 Disassembly/Assembly


The mechanical characteristics of the machine are as described herein; assemble/assemble the machine as instructed and with the following in mind:

1.  Before starting any disassembly/assembly work, turn off the main power switch, and disconnect the power plug.
2. Unless otherwise specifically instructed, assemble the machine by reversing the steps used to disassemble it.
3. Identify the screws by type (length, diameter) and location.
4. To protect against static charge, one of the mounting screws of the rear cover comes with a toothed washer. Be sure not to leave out the washer when assembling the machine.
5. To ensure electrical continuity, the mounting screw for the grounding wire and the varistor comes with a washer. Be sure not to leave out the washer when assembling the machine.
6. As a rule, do not operate the machine with any of its parts removed.
7. When sliding out the duplex feeder unit or the fixing assembly, be sure to turn off the front cover switch or the power switch.

4.3.1 Laser Unit


a. Removing the Laser Unit

- 1) Remove the CCD unit. (See 3.8.1.a.)
- 2) Remove the reader PCB unit.
- 3) Remove the 6 screws [1], and detach the laser driver PCB cover [2].

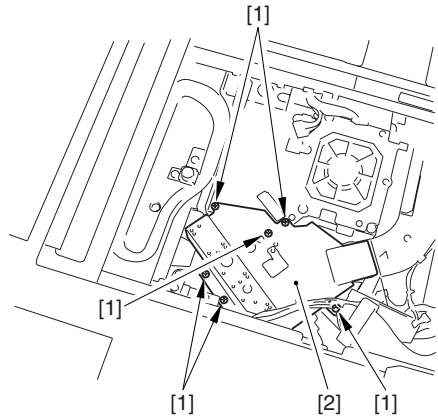

F02-403-01

- 4) Disconnect the 4 connectors [1], and remove the video cable [2]; then, remove the 8 screws [3], and detach the laser scanner unit [4].

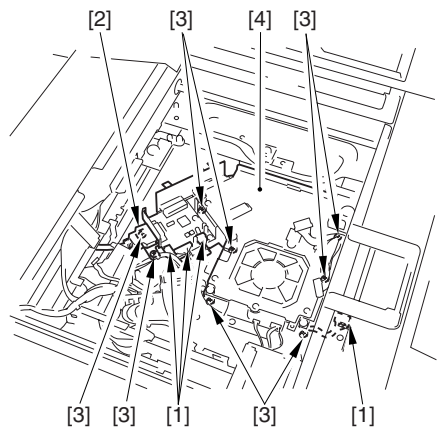

F02-403-02

b. Points to Note When Replacing the Laser Unit

- 1) Check to make sure that the Execute/Memory lamp in the control panel is OFF; then, turn off the main power switch.
- 2) Disconnect the power plug from the power outlet.




The machine remains powered as long as the power plug is connected to the power outlet. Be sure to disconnect it.

- 3) Replace the laser unit.
- 4) Record the values (LA-DELAY) indicated on the label attached to the new laser unit.
- 5) Assemble the machine, and connect the power plug to the power outlet; then, turn on the main power switch.
- 6) Enter the values recorded in step 4) using service mode:
COPIER>ADJUST>LASER>LA-DELAY.

4.3.2 BD Unit


a. Removing the BD Unit

- 1) Remove the stream read fan duct. (See 8.4.3.d.)
- 2) Remove the 3 screws [1], and disconnect the 2 connectors [2]; then, remove the laser fan unit [3].
- 3) Slide out the process unit. (See 5.7.1.)

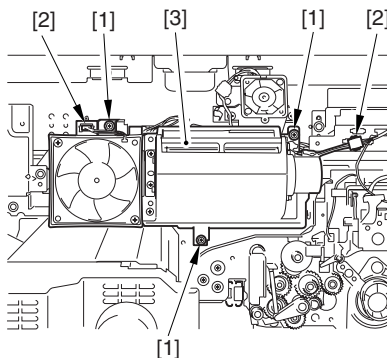


F02-403-03

- 4) Mark the position of the BD unit [1] with a scribe for later reference.
- 5) Remove the screw [2], and slide out the BD unit [1] to the front.

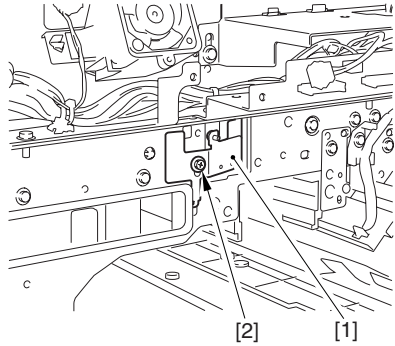

F02-403-04

- 6) Disconnect the connector [1], and take out the BD unit [2].

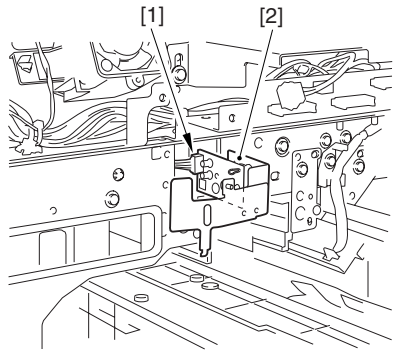

F02-403-05

Blank page


5 Image Formation System

5.1 Outline of the Image Formation System


F02-501-01 shows the major components of the image formation system; F02-501-02, on the other hand, shows the basic sequence of operation. The major changes made to the image formation system are as follows:

- photosensitive drum
- pre-transfer exposure LED (added)
- measures against overheating of developing unit
- measures for enhanced image quality for developing unit
- measures against overheating of cleaning blade

For others, see T02-502-01 for a table of differences.

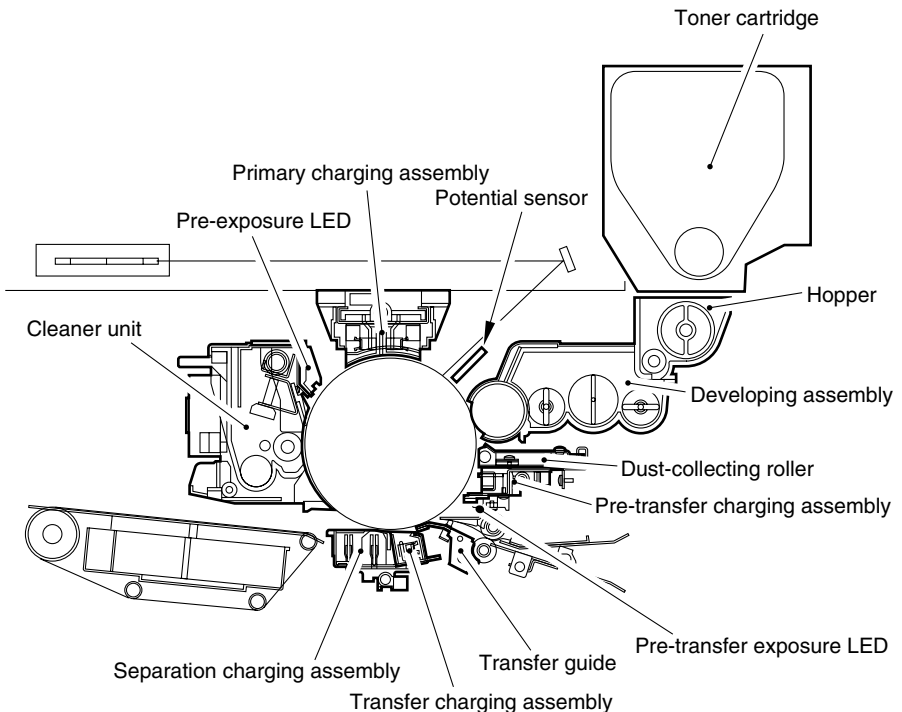

F02-501-01

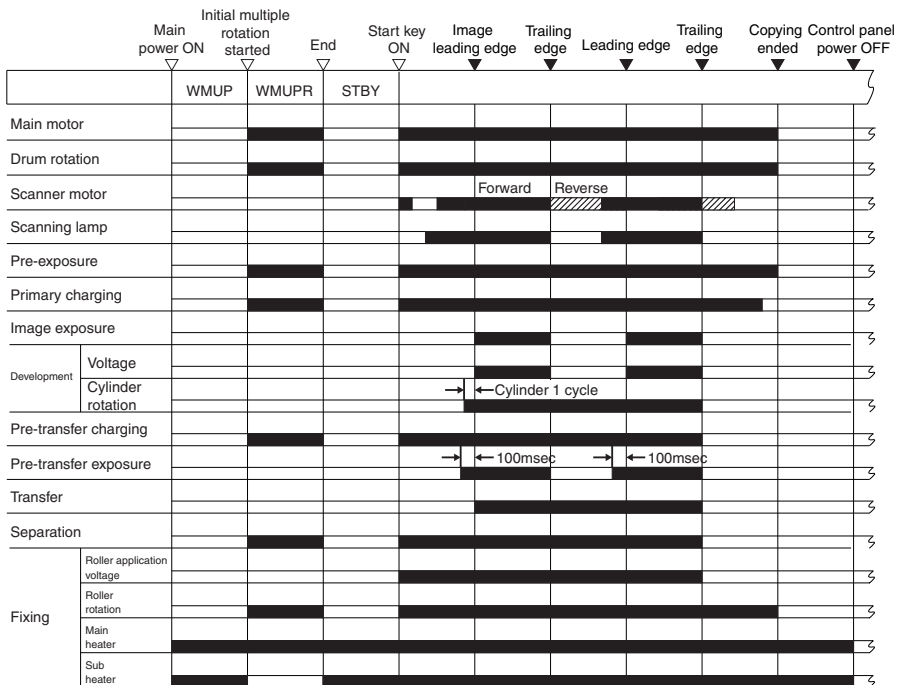

F02-501-02

5.2 Changes Made to the Image Formation System

| Unit/location | Changes to GP605 (iR600) | Purpose of change | Remarks | Reference |
|---------------------------------------|---|---|--|---|
| Photosensitive drum | Increased the charging capacity of the photopositive drum. | To support higher speed of operation. | | |
| Pre-transfer charging assembly | Added a pre-transfer exposure unit. | To improve separation. | | 5.3 Addition of the Pre-Transfer Exposure Unit |
| Developing assembly | Added a developing fan for cooling the developing assembly to the front. | To cool the developing assembly. | | 5.5 Addition of the Developing Fan |
| | Changing the developing cylinder cover to a heat sink shape. | To enhance cooling of the developing assembly. | | 5.6 Modifying the Developing Cylinder Cover |
| | Modifying the developing cylinder | To enhance image quality. | | |
| | Changing the developing bias Vp-p (1.2 kV). | To enhance image quality. | | |
| | Modifying the developing contrast. | To enhance image quality. | | |
| Transfer separation charging assembly | Changing the transfer charging wire height to 9.5 ±0.3 mm. | For enhance transfer performance. | In the GP605 (iR600), 9.6 ±0.4 mm. | |
| | Changing the No. 2 separation wire height to 17.1 ±0.3 mm. (other charging wires same as GP605 (iR600)) | To enhance separation performance. | In the GP605 (iR600), 15.7 ±0.3 mm. | |
| | Increasing the frequency of the separation AC voltage to 10.0 kV/2 kHz. | To enhance separation performance. | In the GP605 (iR600), 10.5 kV/700 Hz. | |
| Cleaner | Changed the air flow. (added slit to polygon primary duct) | To cool the cleaning blade. | | |
| | Blade vibration unit added. | To prevent adhesion of toner to the cleaning blade. | | See 5.7 "Measures Against Adhesion of Toner to the Cleaning Blade." |

T02-502-01

5.3 Addition of the Pre-Transfer Exposure LED

The machine uses a process speed of 500 mm/sec (as opposed to 300 mm/sec in the GP605 (iR600)) to support a copying speed of 105 pages/min (A4, Direct). To make up for the decrease in charging on the photosensitive drum caused by the increase in the process speed, the machine uses a photosensitive drum with a high degree of charging capacity and a pre-exposure lamp with a short wave length (660 nm), thus ensuring a specific degree of charging.

The higher process speed also decreases static charges used for separation; the pre-transfer exposure LED is used to compensate for the decrease:



Pre-Transfer Exposure

Function: In an initial phase of the transfer process, the charges on the photosensitive drum (background potential) are reduced in advance, thereby weakening the stack bonding between the photosensitive drum and the transfer paper and ultimately encouraging separation.

Timing: The LED is turned on 100 msec before the leading edge of an image reaches a specific point until its trailing edge leaves it; (See F02-502-02)



The pre-transfer exposure LED is enabled/disabled according to paper type in service mode (COPIER>OPTION>BODY>PAPER-TY):

PAPER-TY=1 (paper for 200V model) → ON

PAPER-TY=2 (paper for 208V/230V model) → OFF

5.4 Measures Against Overheating of the Developing Unit

The machine must consider possible overheating of the developing unit caused by the increased process speed. When double-sided copying is performed continuously for a long time, the heat used when fixing on the first sides can heat the developing unit, affect the toner, and cause fogging. To prevent overheating, the following measures have been taken:

- addition of a developing fan
- modification of the developing cylinder cover


5.5 Addition of the Developing Fan

To prevent overheating of the developing assembly [1], a developing fan has been added to the front of the machine. (See 8.2 Fans)

5.6 Modifying the Developing Cylinder Cover

The developing cylinder cover [3] has been turned into a heat sink shape to encourage discharge of heat. A heat pipe [4] is also laid inside of the developing cylinder cover. (See F02-506-01)


The heat pipe has a high degree of heat conductivity, and the air cooled by the developing fan cools the front side of the pipe, ultimately cooling the entire developing cylinder cover to prevent overheating of the developing assembly.

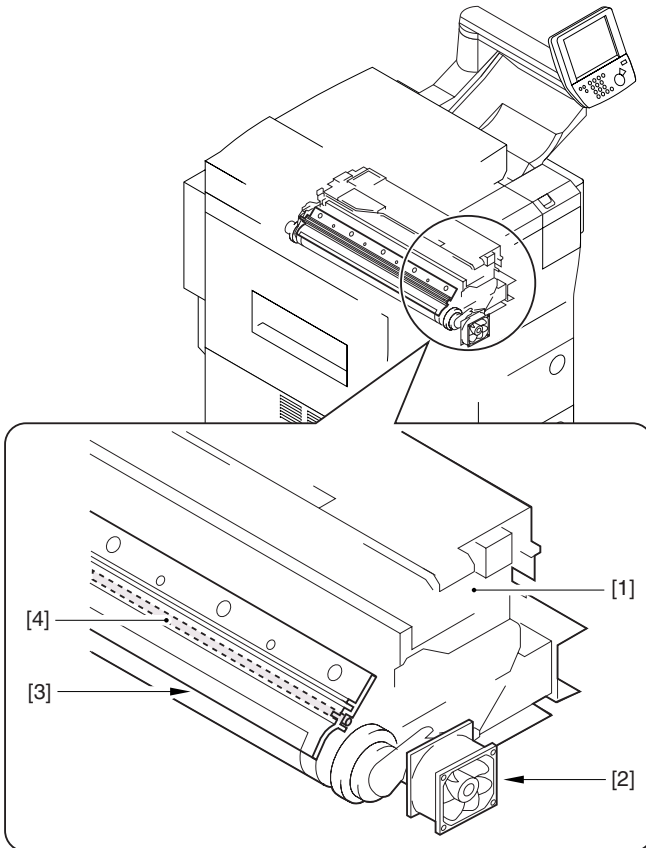

F02-506-01

5.7 Preventing Adhesion of Toner to the Cleaning Blade

The presence of caking toner on the cleaning blade inside the cleaner unit can adversely affect the cleaning of the drum. To prevent caking of toner, the blade of the machine is equipped with 2 blade vibrating units, which vibrate the blade to break and drop cakes of toner, thus preventing drum cleaning faults.

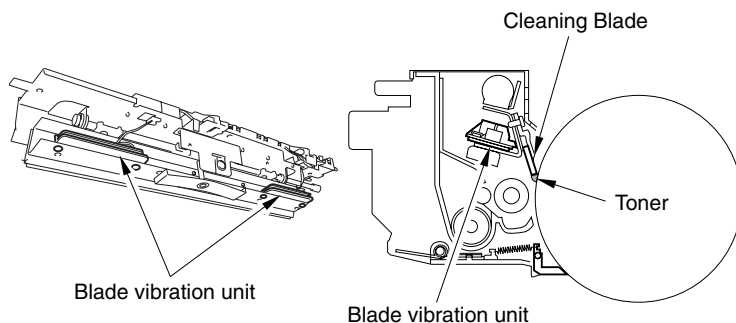

F02-507-01

The blade vibrating units go ON as follows:

- after initial multiple rotation at time of main power-on (5 times or once)
- at stop sequence (once)
- when cleaning wire (pre-transfer, transfer, separation; once)

When vibrating once, it remains ON for 0.6 sec.

When vibrating 5 times, it remains ON for 0.6 sec and OFF for 0.3 sec.




These settings may be changed in service mode to suit the site of installation: COPIER>OPTION>BODY>VBR-M-SW.

The operation of the blade vibrating units may be checked in service mode: COPIER>FUNCTION>PART-CHK>MTR.

5.8 Disassembly/Assembly


The mechanical characteristics of the machine are as described herein; assemble/assemble the machine as instructed and with the following in mind:

1.  Before starting any disassembly/assembly work, turn off the main power switch, and disconnect the power plug.
2. Unless otherwise specifically instructed, assemble the machine by reversing the steps used to disassemble it.
3. Identify the screws by type (length, diameter) and location.
4. To protect against static charge, one of the mounting screws of the rear cover comes with a toothed washer. Be sure not to leave out the washer when assembling the machine.
5. To ensure electrical continuity, the mounting screw for the grounding wire and the varistor comes with a washer. Be sure not to leave out the washer when assembling the machine.
6. As a rule, do not operate the machine with any of its parts removed.
7. When sliding out the duplex feeder unit or the fixing assembly, be sure to turn off the front cover switch or the power switch.

5.8.1 Process Unit


a. Removing the Process Unit

- 1) Remove the developing assembly.
- 2) Remove the process unit cover. (4 screws).
- 3) Slide out the fixing/feeder unit.
- 4) Remove the fixing toner cover; take out the drum protective sheet; and lay it over the fixing/feeder unit.
- 5) Disconnect the connector [1], and release the stopper lever [2]; then, detach the primary charging assembly [3].
- 6) Disconnect the connector [4], and release the stopper lever [5]; then, detach the pre-transfer charging assembly [6].

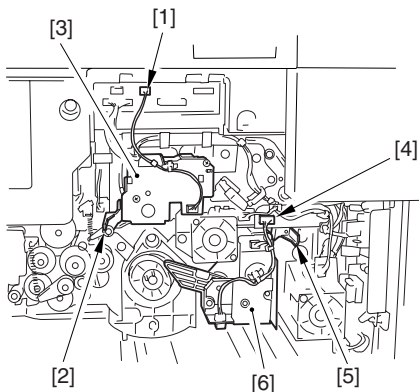


F02-508-01

- 7) While using the drum stop [1] (found inside the compartment behind the front cover) to fix the drum in place, remove the screw [2], and detach the drum fixing block [3].
- 8) Detach the drum stopper [1].
- 9) Remove the 3 screws [4], and disconnect the connector [5]; then, slide out the process unit [6].

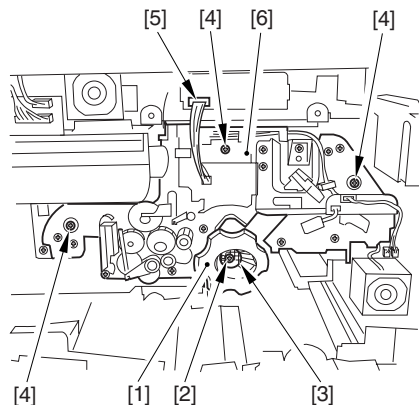

F02-508-02


- 10) Slide fully out the process unit [1], and pull out the grip [2] on the right side.
- 11) Holding the grip [2] on the right and the grip [3] on the left, lift it upward.

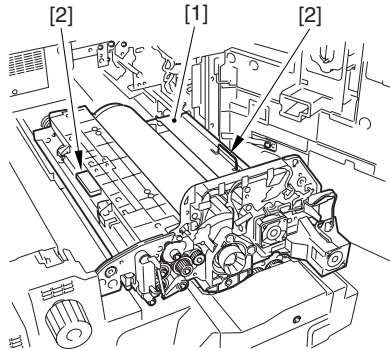

F02-508-03



When placing the removed process unit, turn the kit support plate [1] counterclockwise, and be sure to create a gap from the floor to prevent damage.

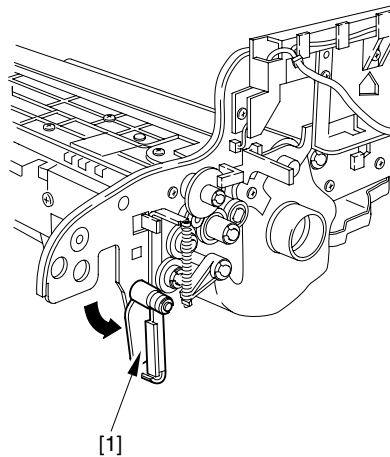

F02-508-04


b. Mounting the Process Unit

Keep the following in mind when mounting the process unit [1] to the slide rail:

- 1) Be sure to match the notch [2] found at the tip of the left slide rail against the front plate [3] of the process unit.
- 2) Be sure to match the bend [4] at the front of the right slide rail against the front plate [3] of the process unit.



Waste toner can drop on the duplex unit when the process unit is removed. After mounting the process unit, be sure to slide out the duplex unit and remove the waste toner.

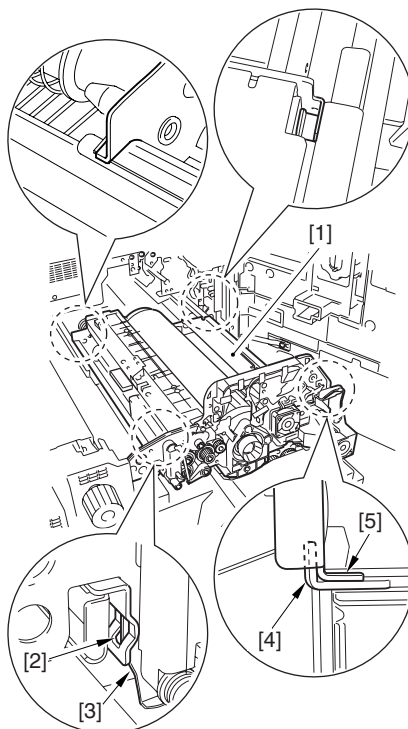

F02-508-05

c. Removing the Photosensitive Drum


Points to Note When Handling the Photosensitive Drum

The machine's photosensitive drum is made of high-sensitivity amorphous silicon, and thus its sensitivity can deteriorate if it or the process unit is not placed properly. When handling the process unit or the photosensitive drum, keep the following in mind:

1. If you have removed the process unit from the machine, protect the photosensitive drum from light by using the photosensitive drum protection sheet or by wrapping 6 or more A3 or larger sheets.
2. Do not place the process unit or the photosensitive drum in an area exposed to direct rays of the sun.
3. Do not place the process unit or the photosensitive drum in an area subject to high temperature/humidity or low temperature/humidity or rapid changes in temperature or humidity.
4. Do not place the process unit or the photosensitive drum in an area subject to dust, ammonium gas, or organic solvent gas.


The foregoing equally holds true for the photosensitive drums of all models.

- 1) Remove the developing fan. (See 8.4.3.m.)
- 2) Slide out the process unit. (See 5.8.1.a.)
- 3) Remove the 3 screws [1], and disconnect the 2 connectors [2]; then, detach the sub plate assembly [3].

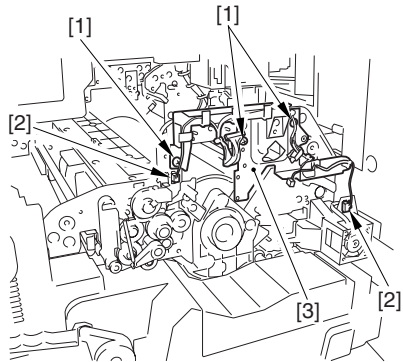


F02-508-06

- 4) Remove the 2 screws [1], and detach the positioner holder [2].

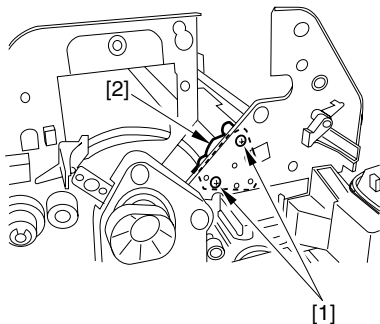


F02-508-07

- 5) Remove the 3 screws [1], and detach the drum fixing plate [2].

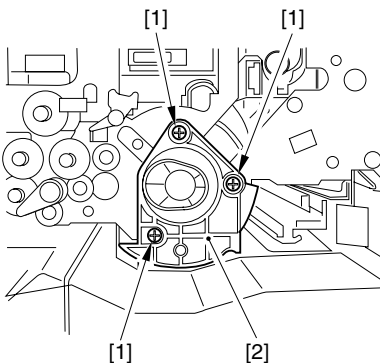

F02-508-08


- 6) Remove the screw [1], and detach the bearing stopper [2]; then, shift the photosensitive drum [3] to the front (in the direction of the arrow) to lift.

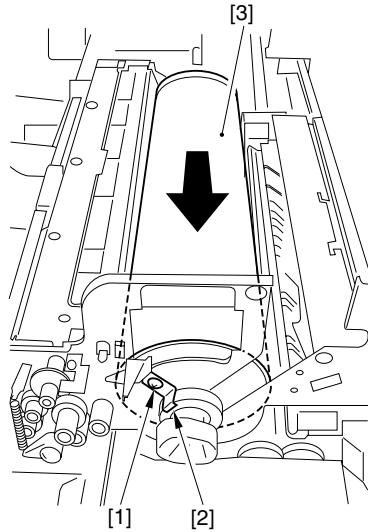

F02-508-09

5.8.2 Drum Cleaner Unit


a. Construction

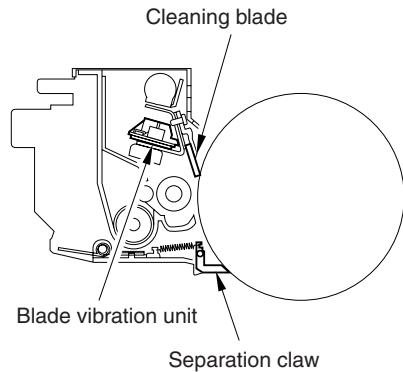

F02-508-10


b. Removing the Cleaning Blade

- 1) Slide out the process unit.
- 2) Remove the screw [1], and detach the reciprocating arm [2].

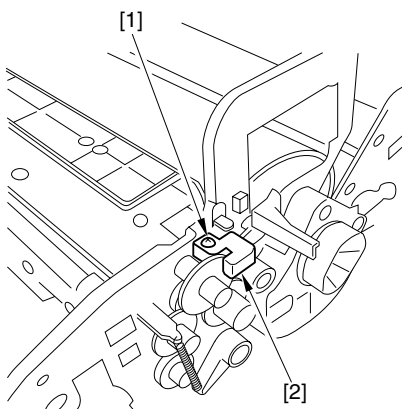

F02-508-11

- 3) Disconnect the 2 connectors [1], and remove the 5 screws [2]; then, lift the rear and push it in to detach the cleaning blade together with the mounting plate [3].

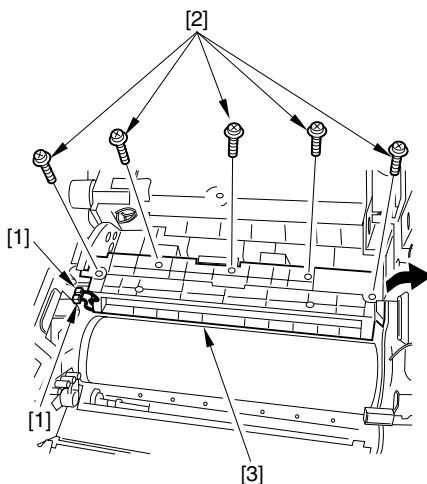


F02-508-12

- 4) Remove the E-ring [1], and detach the pressure plate [2] to detach the cleaning blade assembly [3].




The pressure plate looks like the one used for the GP600 Sires or iR8500 Series machines; however, it is a different part with a different parts number. Do not use the wrong part.

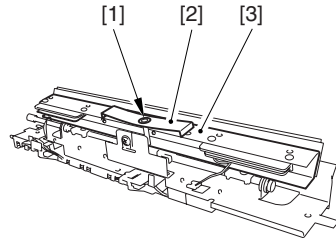

F02-508-13

- 5) Remove the 5 screws [1], and detach the blade retaining plate [2] to detach the cleaning blade [3].

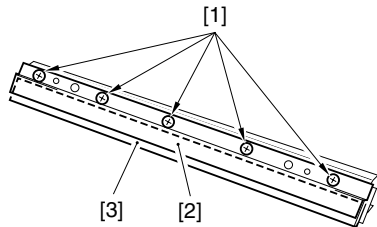


F02-508-14

c. Mounting the Cleaning Blade

See Chapter 5.

d. Removing the Blade Vibrating Unit

- 1) Remove the blade unit.
 - 2) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the blade vibrating unit [3].
- (The rear and front blade vibrating units may be disassembled in the same way.)

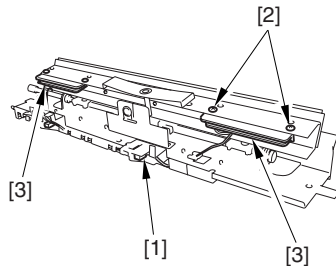

F02-508-15


5.8.3 Charging Wires

a. Outline

As many as 3 charging wires are found around the photosensitive drum (primary, pre-transfer, transfer/separation); these wires are 0.06 mm in diameter.


b. Removing the Wire Cleaner for the Primary Charging Assembly

- 1) Remove the primary charging assembly.
- 2) Move the clip base [1] fully to the rear, and remove the screw [2]; then, remove the support plate [4] of the wire clean motor shaft [3], and detach the clip base [1] from the cut-off [6] of the shielding plate [5] together with the wire cleaner motor shaft [3].

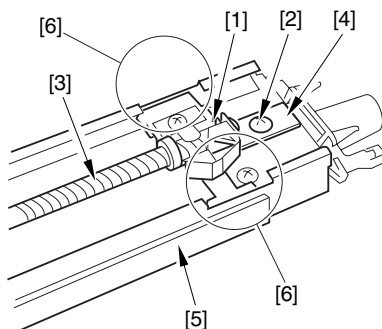

F02-508-16

- 3) Pick the wire cleaner with small pliers, and free the hook with your fingers.

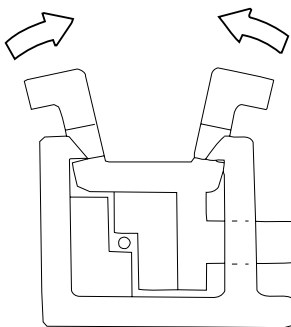

F02-508-17

c. Stringing the Charging Wire

As a rule, the charging wire (except the grid wire) may be strung in the same way for all charging assemblies. The following uses the primary charging assembly as an example:

- 1) Remove the 2 screws [1], and detach the shielding plate (left, right) [2] of the charging assembly.
To prevent deformation (slack) of the primary charging assembly, be sure to work on the left and right shielding plates separately. (Do not loosen the screw for the left/right shielding plate.)
- 2) Remove the wire cleaner.




For other charging assemblies, remove the lid (2 pc.)


- 3) Free a length of about 5 cm from a charging wire reel (wire dia. of 0.06 mm), and form a loop at the end about 2 mm in diameter.



To form a loop, wind the charging wire once around a hex key, and twist the key 3 to 4 times.

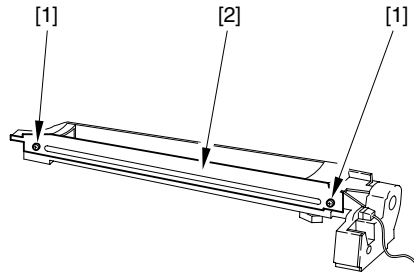


F02-508-18

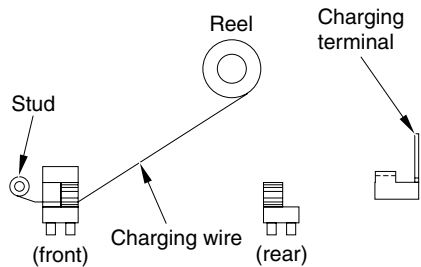


F02-508-19

- 4) Cut the end (excess) for the twisted charging wire.
- 5) Hook the loop on the stud.
- 6) Hook the charging wire on the charging wire positioner at the rear, and hook the charging wire tension spring on the charging wire, and twist it.

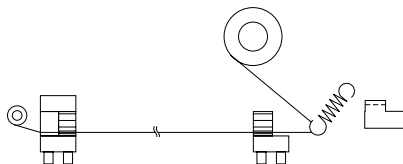

F02-508-20

- 7) Cut the excess of the charging wire with a nipper.
- 8) Pick the end of the charging wire tension spring with tweezers, and hook it on the charging wire terminal. In the case of the pre-transfer charging assembly, hook the spring at the front.




F02-508-21



Be sure of the following:

- The charging wire is free of bends and twists.
- The charging wire is in the bottom of the V-groove of the charging wire positioner.

Grid side



(correct)



(wrong)

F02-508-22


- 9) Fit the cushion to the front of the charging wire. (except for primary charging assembly)
- 10) Mount the shielding plate (left, right).



For other charging assemblies, fit the lid (2 pc.).




After stringing the charging wire of each charging assembly, check to make sure that the length of the tension spring is as follows:

| | | |
|--------------------------------|--------------------------|---|
| Primary charging assembly | $A=12.0\pm 1\text{mm}$ |  |
| Pre-transfer charging assembly | $A=12.0\pm 1\text{mm}$ | |
| Transfer charging assembly | $A=12.0\pm 0.5\text{mm}$ | |
| Separation charging assembly | $A=12.0\pm 0.5\text{mm}$ | |

- 11) Mount the wire cleaner. At this time, pay attention to the orientation of the wire cleaner.
- 12) Wipe the charging wire with lint-free paper moistened with alcohol.


d. Stringing the Grid of the Primary Charging Assembly

- 1) Check to make sure that the 4 screws used to keep the front/rear block and shielding plate are not loose. Then, hook the end of the charging wire on stud A, and then route it for 41 runs; then, hook it on B, C, and D; thereafter, fit it between the double washers [1], give a 1/2 turn around the screw [2], and secure it in place.

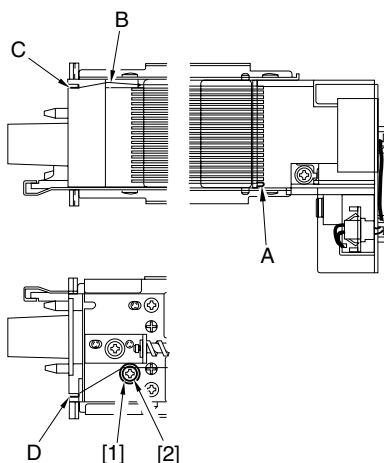





F02-508-23

- 2) Loosen the screws [1], [2], [3], [4]; then, tighten the screw [5] to a torque of $1.5 \pm 0.2 \text{ kg}\cdot\text{cm}$. thereafter, tighten the screws [1], [2], [3], [4] to a torque of 8 $\text{kg}\cdot\text{cm}$ in the order indicated.

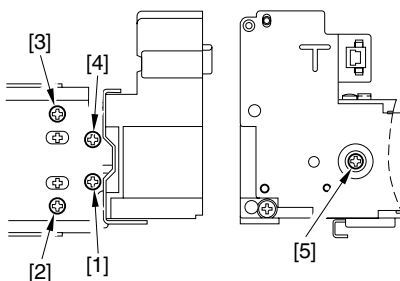

F02-508-24

e. Adjusting the Height of the Charging Wire
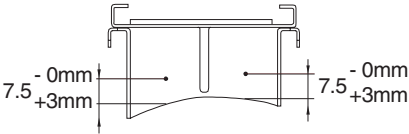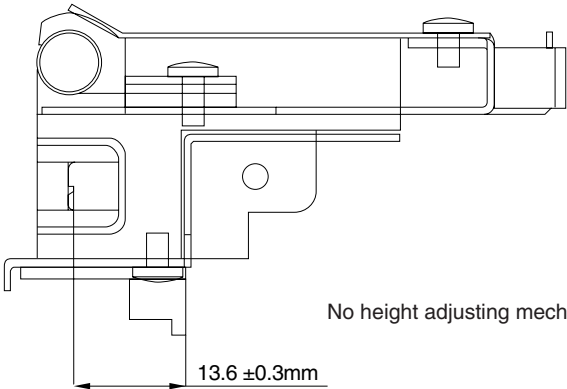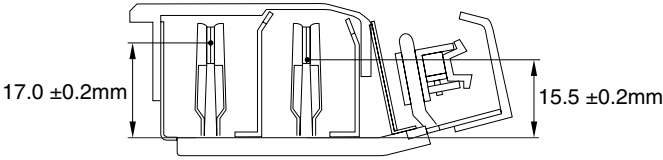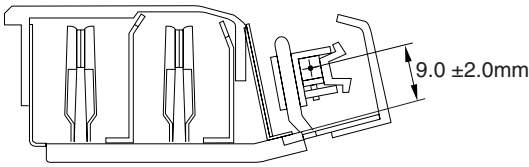
| Charging assembly | Height of charging wire |
|-------------------|--|
| Primary |  |
| Pre-transfer |  <p>No height adjusting mechanism</p> |
| Separation |  |
| Transfer |  |

F02-508-25



The height (position) of the primary and transfer charging wires may be adjusted by turning the screw found at the rear of the charging assembly. A full turn of the screw changes the position of the charging wire by about 0.7 mm.

5.8.4 Area Around the Process Unit


a. Removing the Pre-Transfer Exposure LED

- 1) Slide out the pre-transfer charging assembly.




When placing the removed pre-transfer charging assembly, be sure to take care not to subject the LED to impact.

- 2) Turn over the pre-transfer charging assembly, and remove the 3 screws [1] found on the bottom; then, detach the LED cover [2].

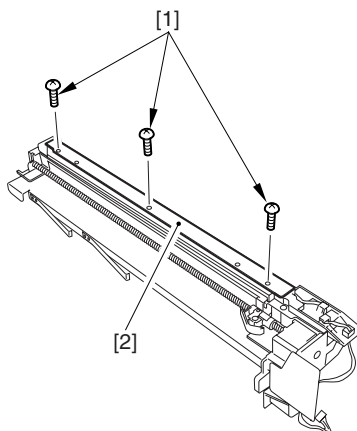

F02-508-26


- 3) Disconnect the connector [1], and remove the pre-transfer exposure LED [2].

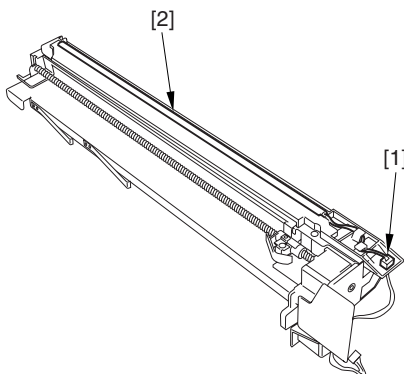

F02-508-27


b. Remove the Developing Cylinder Deceleration Clutch

- 1) Remove the high-voltage transformer (DC) assembly. (See 8.4.7.c.)
- 2) Remove the flywheel.
- 3) Disconnect the 2 connectors [1], and remove the 5 screws [2]; then, detach the clutch mounting plate [3].

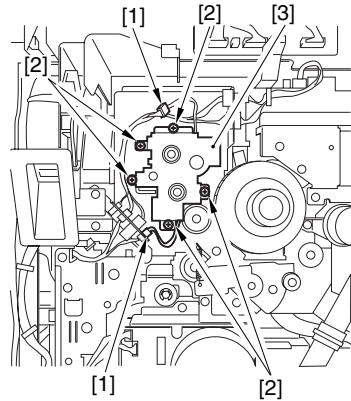


F02-508-28

- 4) Remove the heater developing cylinder deceleration clutch [1].

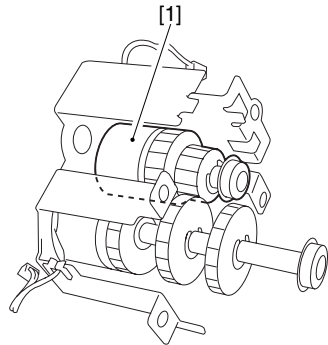

F02-508-29


- 5) Remove the 6 E-rings [1], 2 bearings [2], gear [3], and pin [4]; then, detach the clutch [5].

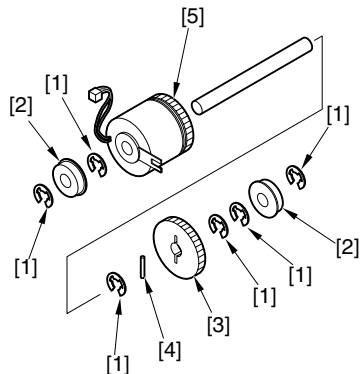

F02-508-30


c. Remove the Developing Cylinder Clutch

- 1) Remove the clutch mounting plate.
- 2) Take out the developing cylinder clutch [1].

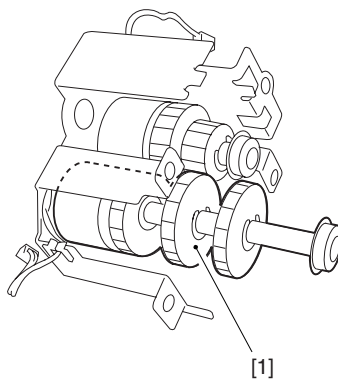

F02-508-31

- 3) Remove the 8 E-rings [1], 2 beatings [2], 2 gears [3], and pin [4]; then, detach the clutch [5].

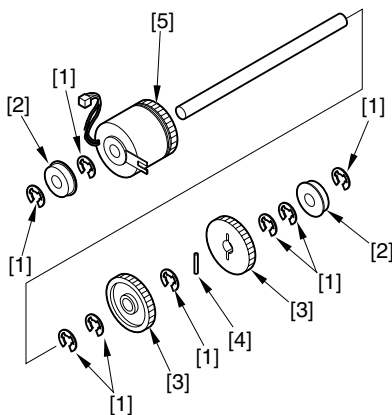

F02-508-32

6 Pickup/Feeding System

6.1 Outline of the Pickup/Feeding System

The major changes made to the pickup/feeding system are as follows:

- To support the increased speed in the process (500 mm/sec), an optical sensor is used instead of a photointerrupter for the following: right/left deck pickup sensor, right/left feed sensor, cassette 3/4 pickup sensor, vertical path 3/4 sensor.
- The use of index paper is allowed as a transfer medium.

For others, see T02-602-01 and T02-602-02.

6.2 Changes Made to the Pickup/Feeding System

| Unit/location | Changes from GP605 (IR600) | Propose of change | Remarks | Reference |
|------------------------------|---|--|--|----------------------------|
| Pickup roller | Changed the material. | To support higher speed of operation. | | |
| Separation roller | Changed the material. | To support higher speed of operation. | | |
| Static eliminator | Added a static eliminator. | To suppress noise; for grounding of the pull-off roller. | Upward compatible; right deck, cassette 3/4. | |
| Manual feed tray assembly | Added a noise damper. | To suppress noise caused by impact occurring at time of release of the pick roller. | | |
| Registration roller assembly | Changed the registration brake clutch. | To use a set screw for the joint between shaft and clutch, thereby preventing variation in the leading edge registration during high-speed operation. | | |
| | Changed the shape of the registration cover roller. | To accommodate the change in the speed of the shaft caused by the use of a set screw stop clutch. | | |
| | Changed the shape of the registration clutch cover. | To accommodate the shape of the cover caused by the use of a set screw clutch. | | |
| | Added a bearing coupling gear. | To suppress the wobbling of the gear by fitting the bearing by force into the coupling, thereby eliminating the variation in the transmission of the drive caused by fluctuations in the load in the coupling (of the registration transfer assembly). | | |
| Index paper attachment | To support the use of index paper. | To support the use of index paper. (The attachment is made available as an option.) | | 6.5 Index Paper Attachment |


T02-602-01

| Unit/location | Changes from GP605 (IR600) | Purpose of change | Remarks | Reference |
|-------------------------------------|---|---|--|-----------|
| Sensor | Made to use an optical sensor as the right/left deck pickup sensor. | To support high-speed operation. | A prism is mounted in the opposite side. | |
| | Made to use an optical sensor as the right/left deck feed sensor. | | | |
| | Made to use optical sensors as the vertical path 3/4 sensors. | | | |
| | Eliminated the U-turn sensor. | To support the design in which the duplex outlet sensor is used as the point of reference. | | |
| | Eliminated the reversal sensor. | To support the design in which the duplex reversal sensor is used as the point of reference. | | |
| Torque limiter of separation roller | Added a duplex outlet sensor. | To ensure accurate movement of paper coming from the vertical path assembly at high accuracy by correctly identifying the position of the paper form the duplex feeding assembly. | | |
| | Added a image write start sensor | To enable the shortest possible sheet-to-sheet distance. | | |
| | Increased the torque. | To ensure separation. | | |
| | | | | |
| | | | | |

T02-602-02

6.3 Optical Sensors


To accommodate the increase in the process speed, the machine uses a combination of an optical sensor [1] and a prism [2] instead of a photo sensor and a sensor flag for some of the sensors in the pickup/feeding assembly, thus ensuring correct detection of paper. (For the position of the sensors, see F02-604-01.)

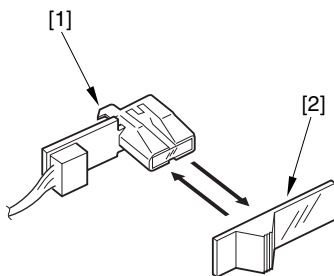

F02-603-01

6.4 Image Write Start Sensor

The image write start sensor is used to support the increased speed of operation. It detects the leading edge of paper before it reaches the registration roller, preparing the printer for printing operation. The presence of this sensor enables the shortest possible sheet-to-sheet distance. (For the position for the sensor, see F02-604-01.)

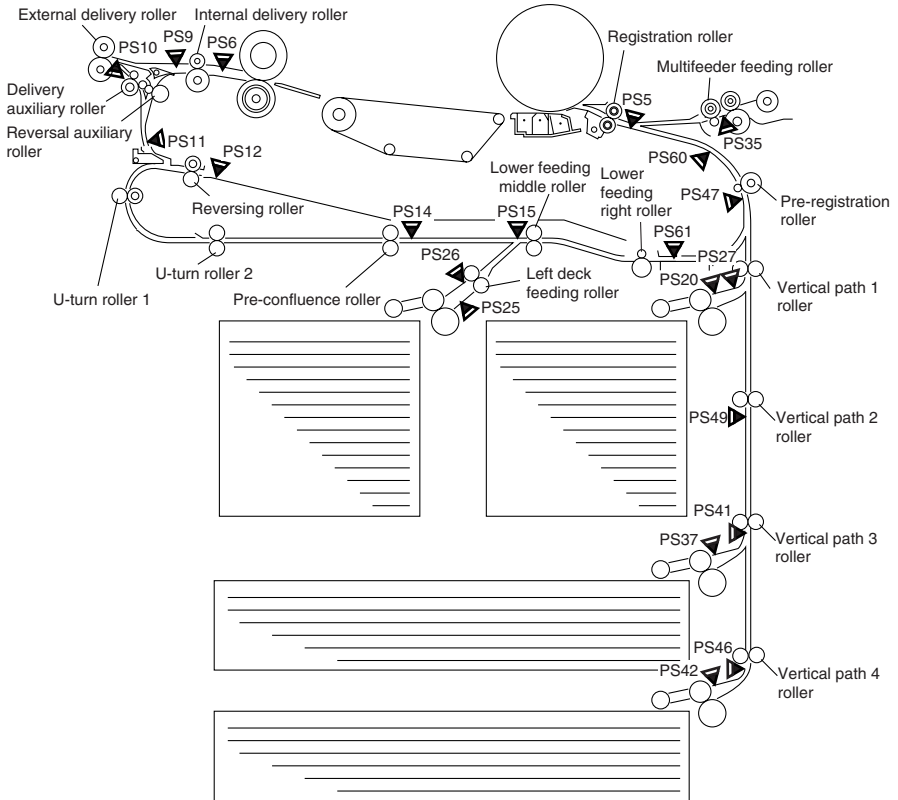

PS5: registration sensor
PS6: claw jam sensor
PS9: internal delivery sensor
PS10: external delivery sensor
PS11: fixing/feeding outlet sensor
PS12: duplex reversal sensor
PS14: pre-confluence reversal sensor
PS15: post-confluence sensor
PS20: right deck pickup sensor*
PS25: left deck pickup sensor*
PS26: left deck feed sensor*


PS27: right deck feed sensor*
 PS35: multifeed pickup sensor
 PS37: cassette 3 pickup sensor*
 PS41: vertical path 3 sensor*
 PS42: cassette 4 pickup sensor*
 PS46: vertical path 4 sensor *
 PS47: vertical path 1 sensor
 PS49: vertical path 2 sensor
 PS60: image write start sensor
 PS61: duplex outlet sensor

* Optical sensor.

6.5 Index Paper Attachment

The machine allows the use of index paper as a transfer medium. Start user mode, and select index paper copy mode and fit an Index Paper Attachment-A1 (option; F02-605-01) so that an index sheet may be inserted between copy sheets (index sheet insert mode) or print in the index area (index production mode).


Index sheets are fed from the source of index sheets (cassette 3/4) selected from the control panel. (For details, see the User Guide.)

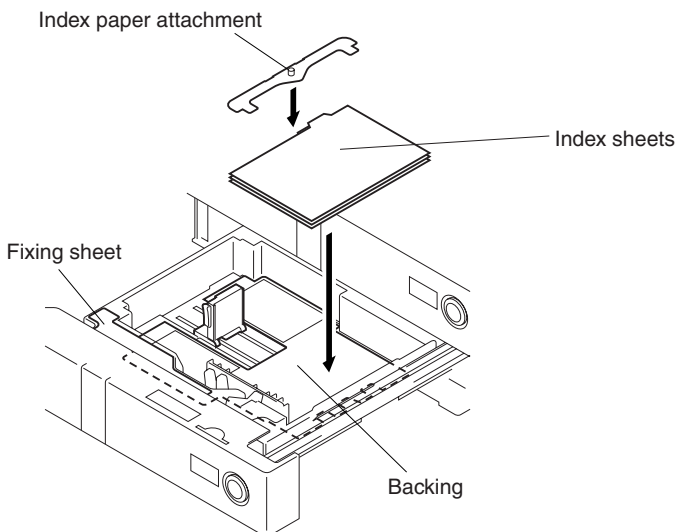

F02-605-01

6.6 Disassembly/Assembly


The mechanical characteristics of the machine are as described herein; disassemble/assemble the machine as instructed and with the following in mind:

1.  Before starting any disassembly/assembly work, turn off the main power switch, and disconnect the power plug.
2. Unless otherwise specifically instructed, assemble the machine by reversing the steps used to disassemble it.
3. Identify the screws by type (length, diameter) and location.
4. To protect against static charge, one of the mounting screws of the rear cover comes with a toothed washer. Be sure not to leave out the washer when assembling the machine.
5. To ensure electrical continuity, the mounting screw for the grounding wire and the varistor comes with a washer. Be sure not to leave out the washer when assembling the machine.
6. As a rule, do not operate the machine with any of its parts removed.
7. When sliding out the duplex feeder unit or the fixing assembly, be sure to turn off the front cover switch or the power switch.

6.6.1 Manual Feed Tray Assembly

a. Removing the Manual Feed Tray Unit


- 1) Remove the control panel unit. (See 8.4.2.a.)
- 2) Remove the upper right cover.
- 3) Open the manual feed tray unit [1].
- 4) Remove the screw [2], and detach the door tape [3] from the machine side.
- 5) Remove the screw [4], and detach the connector cover [5].
- 6) Disconnect the connector [6], and detach the manual feed tray unit [1] upward while it is kept open at about 90°.

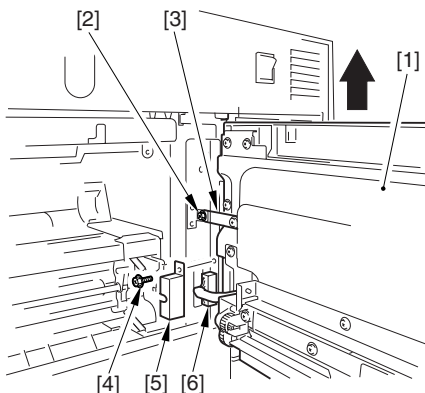

F02-606-01

b. Fitting the Side Guide Timing Belt for the Manual Feed Tray Assembly


- 1) Butt the rack plate [1] of the manual feed tray against section A (in open state).
- 2) Move the slide volume [2] in the direction of B, and fit the timing belt [3] to the pulley [4] and the pulley [5].

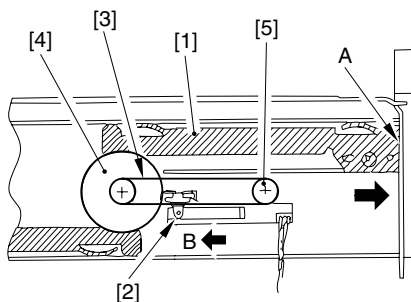

F02-606-02


c. Removing the Manual Feed Tray Paper Sensor

- 1) Open the manual feed tray unit, and remove the door tape from the machine side.
- 2) Remove the mounting screw [1], and detach the solenoid cover [3]. (A claw [2] is hooked on the L-shaped opening; pull it down lightly, and move it as if to open it.)

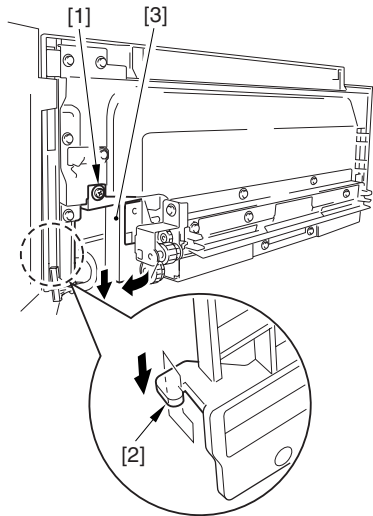


F02-606-03

- 3) Disconnect the connector [1].
- 4) Remove heater mounting screw [2], and detach the pickup roller releasing solenoid [3] together with the support plate.

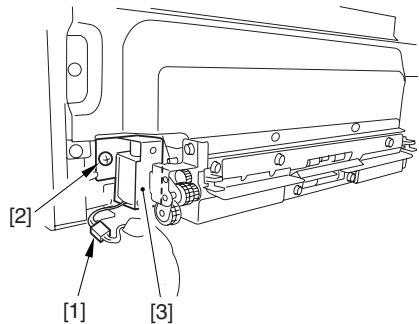


F02-606-04

- 5) Remove the screw [1], and detach the connector cover [2]; then, disconnect the connector [3].

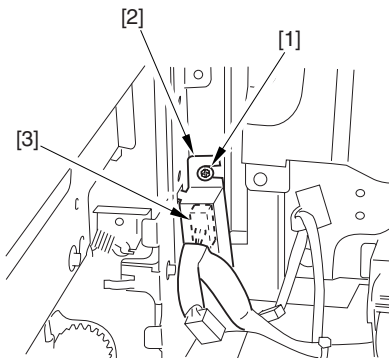


F02-606-05

- 6) Open the manual feed tray.
 7) Remove the 11 mounting screws [1], and detach the manual feed tray pickup assembly [2].

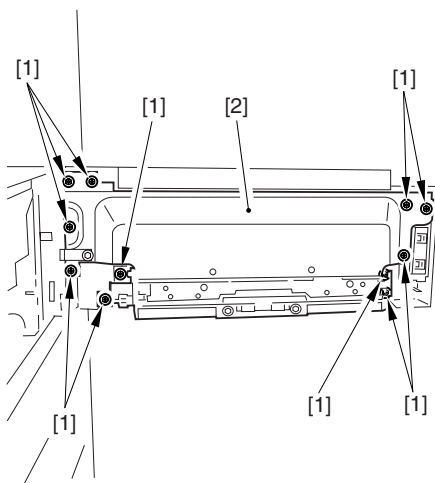


F02-606-06

- 8) Remove the 2 mounting screws [1], and detach the upper guide plate [2].

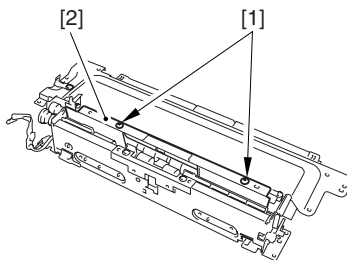


F02-606-07

- 9) Remove the 2 mounting screws [1] found at the bottom, and detach the lower cover [2].

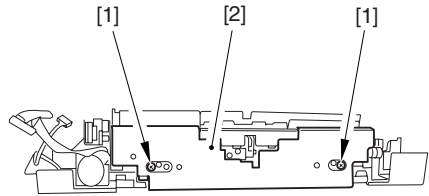


F02-606-08

- 10) Remove the 2 mounting screws [1], and detach the middle guide plate [2].

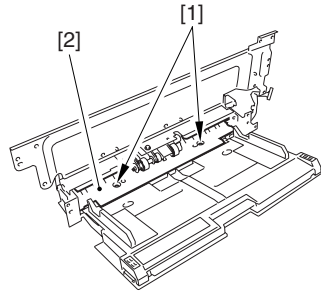


F02-606-09

- 11) Remove the 2 mounting screws [2] of the sensor unit [1].

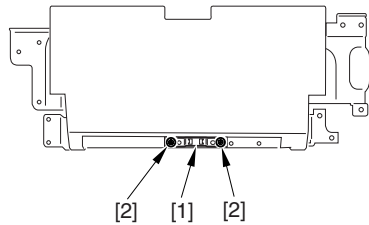

F02-606-10

- 12) Disconnect the connector [1], and detach the sensor unit [2].
- 13) Remove the sensor [3] from the sensor unit [2].

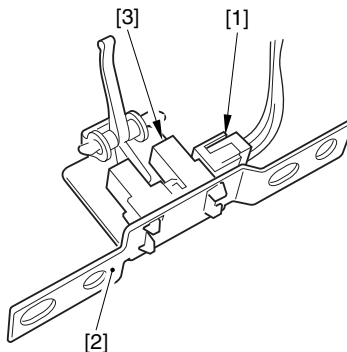


F02-606-11

6.6.2 Cassette Pickup Assembly

a. Removing the Left Deck Pickup Sensor

- 1) Remove the front deck (left) pickup assembly.
- 2) Remove the screw [1], and detach the pickup sensor unit [2].

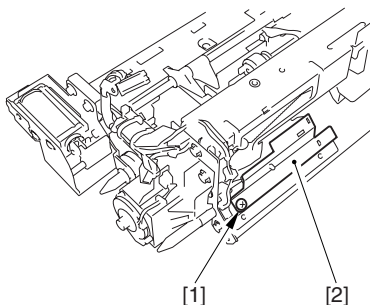


F02-606-12

- 3) Disconnect the connector [1], and detach the left deck pickup sensor [2].




When removing the scanner sensor, be sure to remove the paint used to lock the claw in place in advance to prevent breaking the claw. When mounting it, be sure the claw is not displaced or the sensor is not disoriented.

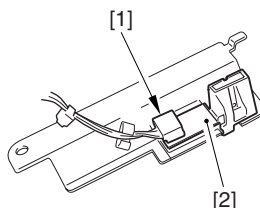

F02-606-13


b. Removing the Right Deck Feed Sensor/Right Deck Pickup Sensor

- 1) Remove the front deck (right) pickup assembly.
- 2) Remove the guide plate [1].

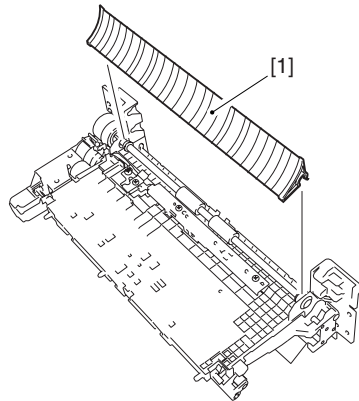

F02-606-14

- 3) Remove the screw [1], and detach the stack eliminator [2].
- 4) Remove the 2 screws [3], and detach the pickup assembly sensor base [4].

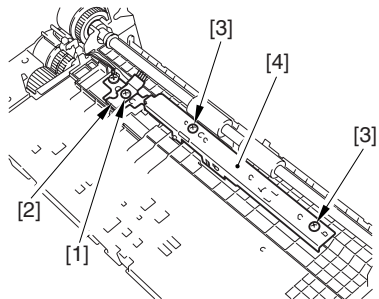


F02-606-15

- 5) Disconnect the connector [1] (1 pc. each), and free the claw; then, detach the right deck feed sensor [2] and the right deck pickup sensor [3].




When removing the scanner sensor, be sure to remove the paint used to lock the claw in place in advance to prevent breaking the claw. When mounting it, be sure the claw is not displaced or the sensor is not disoriented.

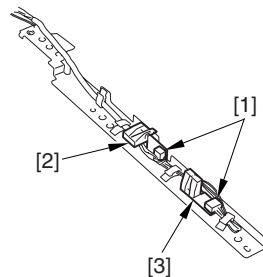

F02-606-16


c. Removing the Vertical Path 3/4 Sensor and the Cassette 3/4 Pickup Sensor

- 1) Remove the cassette 3/4 pickup assembly.
- 2) Remove the screw, and detach the static eliminator [2].
- 3) Remove the screw [3], and detach the pickup assembly sensor base.

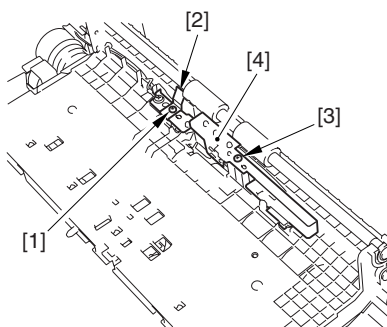

F02-606-17

- 4) Disconnect the connector [1] (1 pc. each), and free the claw; then, detach the vertical path 3/4 sensor [2] and the cassette 3/4 pickup sensor [3].

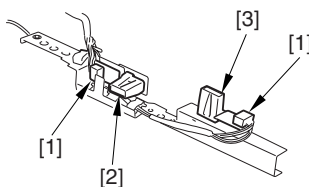


F02-606-18

6.6.3 Vertical Path Roller Assembly


a. Removing the Vertical Path Roller 1/3/4

- 1) Remove the deck right/cassette pickup assembly.
- 2) Remove the E-ring [1] and the bearing [2] from the front, and remove the grip ring [3], clutch [4], and bearing [5] from the rear.

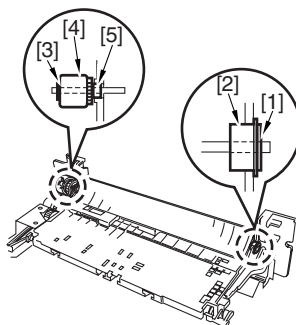


F02-606-19

- 3) Remove the E-ring [1] of the front and the rear of the roller shaft, and move the bearings [2] toward the inside; then, detach the guide plate [3].

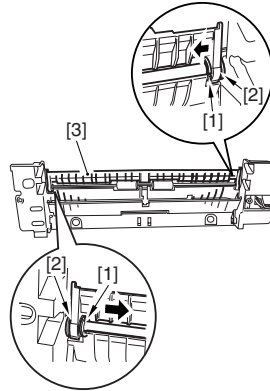

F02-606-20


- 4) Remove the E-ring [1], and remove the bearing [2] to detach the vertical path roller [3].

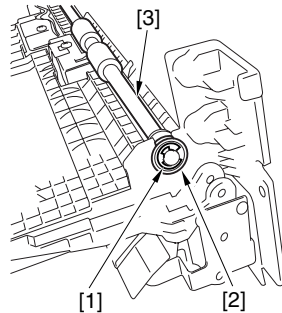

F02-606-21


b. Removing the Vertical Path Roller 2

- 1) Slide out the deck (right) and the caste 3/4.
- 2) Remove the 3 screws [1], and detach the right lower front cover [2].

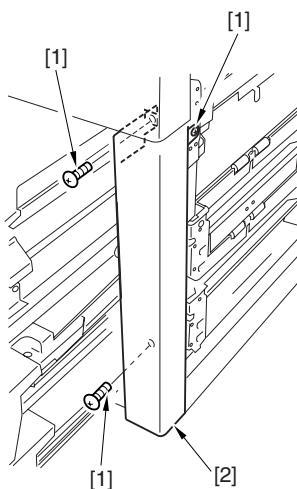


F02-606-22

- 3) Disconnect the connector [1] and the screw [2]; then, detach the guide plate [3].

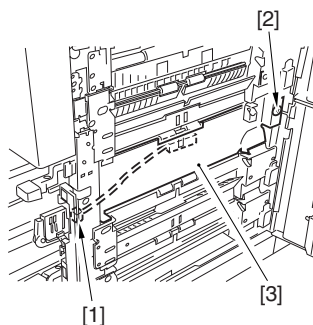

F02-606-23

- 4) Remove the E-ring [1] at the front of the roller shaft, and move the bearing [2] toward the inside; then, detach the vertical path roller 2 [3].

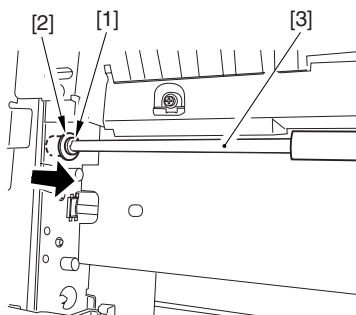


F02-606-24

6.6.4 Registration Feed Assembly


a. Removing the Registration Clutch

- 1) Remove the fixing/feed unit.
- 2) Shift up the releasing lever.
- 3) Disconnect the connector [1], and detach the harness of the clutch from the clutch cover [2].
- 4) Remove the screw [3], and detach the clutch cover [2] and the bearing [4].

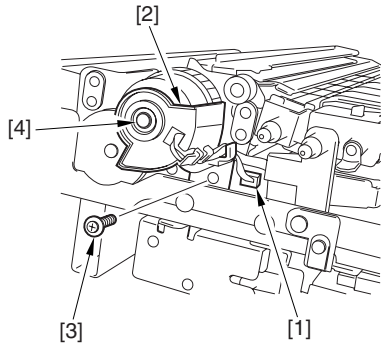

F02-606-25


- 5) Loosen the 2 adjusting screws [1], and detach the registration clutch [2].

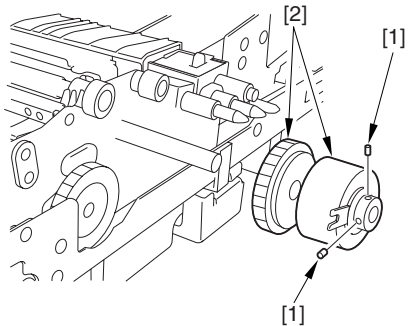

F02-606-26




When mounting the registration clutch, be sure to hook the clutch stop [A] on the protrusion [B] of the clutch cover.

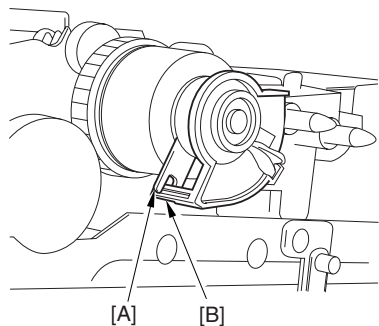

F02-606-27

b. Removing the Registration Brake Clutch

- 1) Remove the transfer separation charging assembly front cover. (1 screw)
- 2) Disconnect the connector [1], and loosen the 2 screws [2] (w/ hex hole); then, detach the registration brake clutch [3].

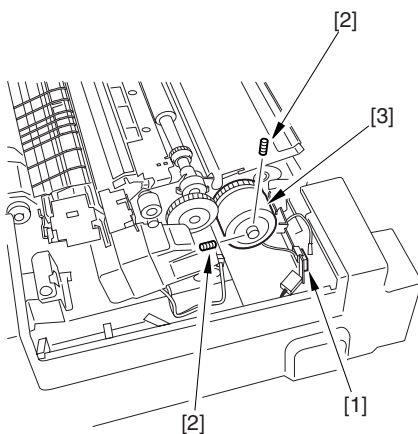


F02-606-28

6.6.5 Duplex Unit

a. Removing the Reversal Motor


- 1) Remove the duplex feed fan unit. (See 8.4.3.r.)
- 2) Loosen the screw [1]; then, while pulling the tension support plate [2] in the direction of the arrow, tighten the screw [1] (to loosen the tension of the belt [2]).
- 3) Disconnect the connector [4], and remove the 2 screws [5]; then, detach the reversal motor [6].

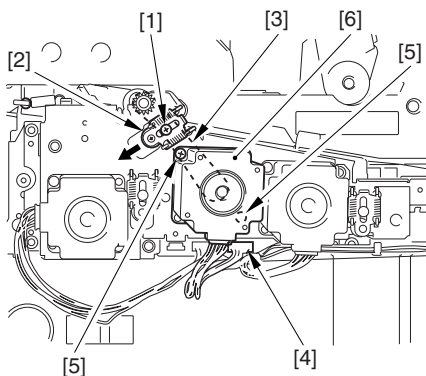

F02-606-29

b. Removing the Duplex Left Feed Motor


- 1) Remove the duplex feed fan unit. (See 8.4.3.r.)
- 2) Loosen the screw [1]; then, while pulling the tension support plate [2] in the direction of the arrow, tighten the screw [1] (to loosen the tension of the belt [3]).
- 3) Disconnect the connector [4], and remove the 2 screws [5]; then, detach the duplex left feed motor [6].

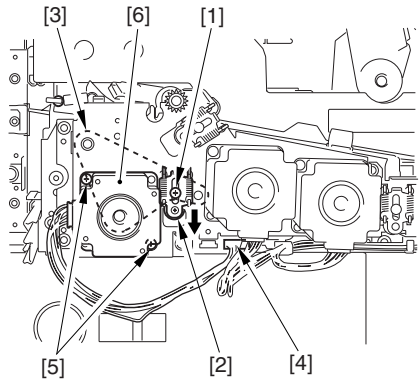

F02-606-30

c. Removing the Duplex Right Feed Motor


- 1) Remove the front cover of the duplex unit. (4 screws, 3 knobs)
- 2) Loosen the screw [1]; then, while pulling the tension support plate [2] in the direction of the arrow, tighten the screw [1] (to loosen the tension of the belt [3]).
- 3) Disconnect the connector [4], and remove the 2 screws [5]; then, detach the duplex right feed motor [6].

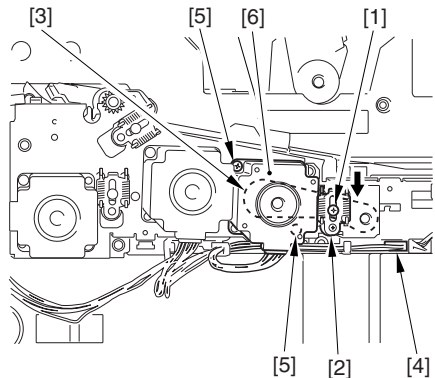

F02-606-31

d. Removing the Left Deck Feed Sensor

- 1) Slide out the duplex unit assembly.
- 2) Remove the screw [1], and detach the sensor base [2].

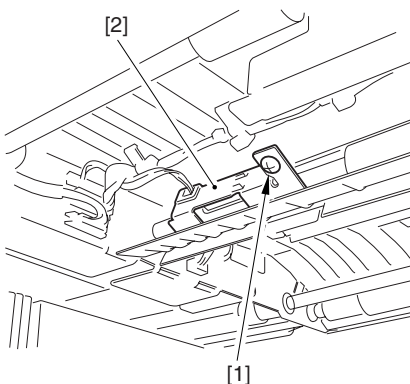


F02-606-32

- 3) Disconnect the connector [1], and free the claw to detach the left deck feed sensor [2].



When removing the scanner sensor, be sure to remove the paint used to lock the claw in place in advance to prevent breaking the claw. When mounting it, be sure the claw is not displaced or the sensor is not disoriented.

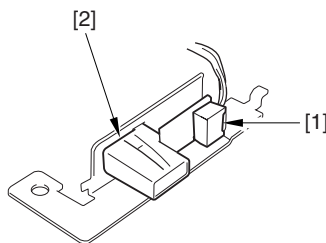


F02-606-33

6.6.6 Others

a. Removing the Fixing/Feed Unit

- 1) Slide out the fixing/feed unit.
- 2) Remove the 2 stepped screws [1].

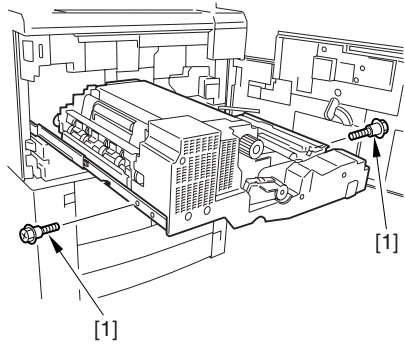


F02-606-34

- 3) Remove the fixing /feed unit [1] from the slide rail [2].



Be sure to work as a group of two.

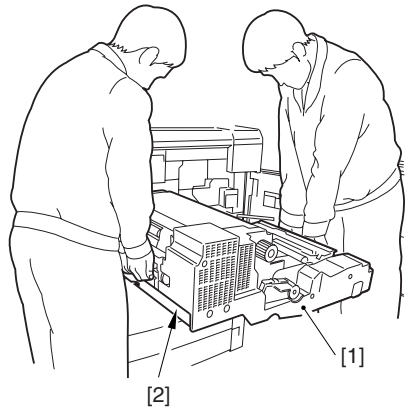

F02-606-35

Blank page

7 Fixing System


7.1 Outline of the Fixing System

The following are major changes made in relation to the fixing system:


- fixing temperature control (while paper is on the move, 188°C for 200V model, 198°C for 208V/230V model)
- fixing heater power

For others, see T02-702-01.

The major components of the fixing system are shown in F02-701-01 and F02-701-02.

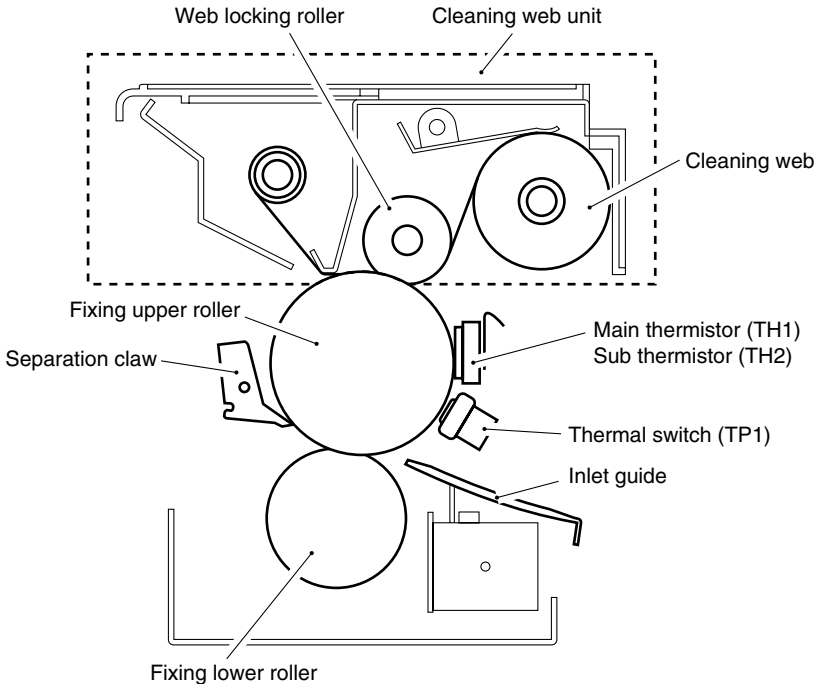

F02-701-01

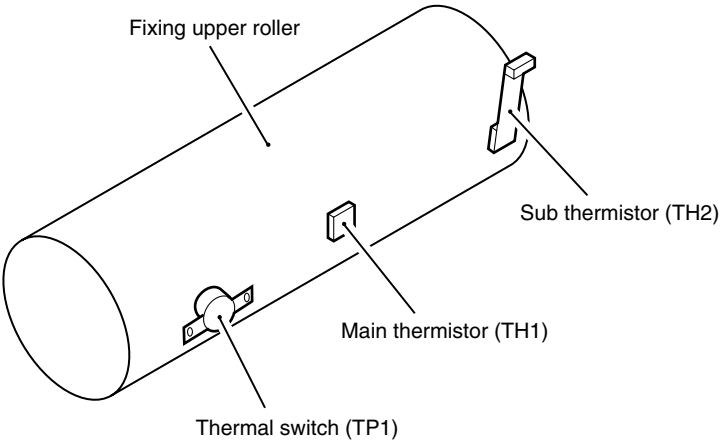

F02-701-02

| Component | Notation | Description |
|---------------------|----------|--|
| Fixing upper roller | | Heat roller, 60-mm dia. |
| Fixing lower roller | | Pressure roller, 50-mm dia. |
| Fixing motor | M3 | DC motor, 33 W |
| Main heater | H1 | 200V model: 1150 W 208V model: 1220 W 230V model: 1185 W |
| Sub heater | H2 | 200V model: 565 W 208V model: 600 W 230V model: 645 W |
| Main thermistor | TH1 | Temperature control, error detection |
| Sub thermistor | TH2 | Error detection |
| Thermal switch | TP1 | Operating temperature: 228°C |
| Cleaning web | | Driven by web drive solenoid (SL2); for large-size paper (B4 or larger), goes ON twice; for small-size paper (smaller than B4), goes on once |
| Inlet guide | | Fixed |

T02-701-01

7.2 Changes Made to the Fixing System

| Unit/location | Changes from GP605 (IR600) | Purpose of change | Remarks | Reference |
|-----------------|--|---|---------|----------------------------------|
| Fixing | Changed the diameter of the fixing roller (from 50 to 60 mm dia) | To support higher speed of operation. | | |
| | Changed the diameter of the pressure roller (from 38 to 50 mm dia) | To support higher speed of operation. | | |
| | Changed the diameter of the web locking roller (from 24 to 28 mm dia) | To prevent slippage of the thermistor. | | |
| | Increased the pressure of the web locking roller by 1.5 times. | To prevent slippage of the thermistor. | | |
| | Eliminated the insulating material for the pressure roller. | To accommodate the increase in the diameter of the pressure roller. | | |
| | Fixed the inlet guide swing mechanism in place. | To enhance feeding performance and prevent wrinkling. | | |
| | Changed the distance of the pressure roller static eliminator (from 1.5 to 4 mm) | To reduce soiling of the back of paper by the pressure roller. | | |
| | Made to use temperature control for standby and paper passage. | | | 7.3 Fixing Temperature Control |
| | Thermal switch. | To accommodate the change in the edge temperature of the fixing assembly (from 223°C to 228°C). | | |
| | Increased the power supply (1715 W/200 V, 1820 W/208 V, 1830 W/230 V). | In the GP605 (IR600), 850 W (100 V/20 A model). | | 7.1 Outline of the Fixing System |
| Separation claw | Changed the location of the separation claw. | To reduce soiling of paper edges. | | |
| | Changed the leading edge angle (from 70 μ to 30 μ) | To reduce claw jams. | | |
| | Decreased the escape pressure of the holder. | To reduce wear on the roller. | | |
| | Changed the shape of the bottom of the holder. | To reduce the wear on the roller. | | |
| | Changed the shape for the claw stopper. | To reduce the water to the roller. | | |


T02-702-01

| Unit/location | Changes from GP605 (IR600) | Purpose of change | Remarks | Reference |
|------------------------------|---|--|--|-----------|
| Delivery roller construction | Changed the number of internal delivery rollers (from 4 to 6). | To reduce curling. | | |
| | Changed the number of external delivery rollers (from 4 to 6). | To reduce curling. | | |
| | Changed the shape of the roller in the curl-reducing mechanism. | To reduce curling. | | |
| | Changed the material. (internal delivery, reversal auxiliary, curl-reducing roller) | To increase durability. | | |
| Delivery roller material | Eliminated the curl guide. | To accommodate the use of an external delivery roller with a collar. | | |
| Delivery | | | | |
| Duplex | Made to use the leading edge for the reversal sequence. | To accommodate the use of tab sheets. | In the GP605 (IR600), the reference is to the trailing edge. | |

T02-702-02

7.3 Fixing Temperature Control


F02-703-01 shows the basic sequence of operation sued of the fixing system:

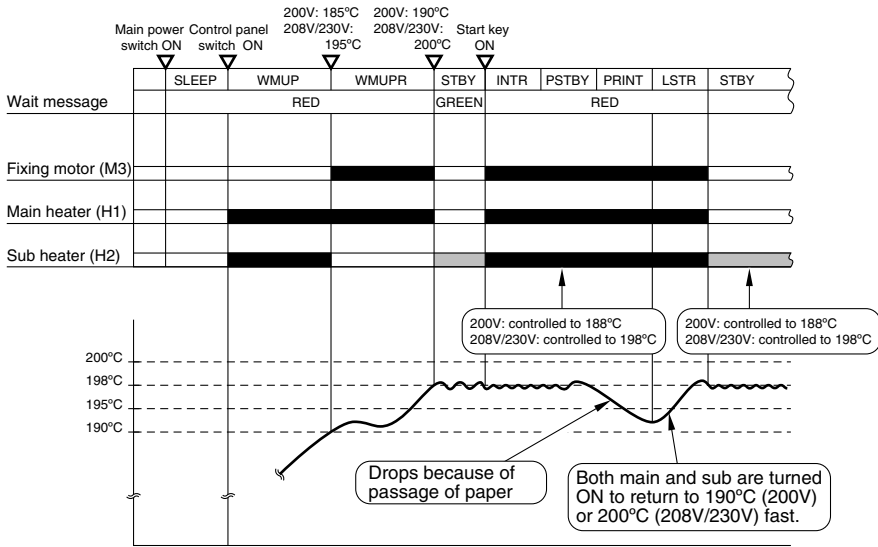

F02-703-01

7.4 Transparency Mode

To prevent wrapping of a transparency around the fixing roller (thus causing the transparency to melt because of heat of the fixing roller), the fixing roller temperature is reduced in transparency mode. F02-704-01 shows the sequence of operation used in transparency mode:

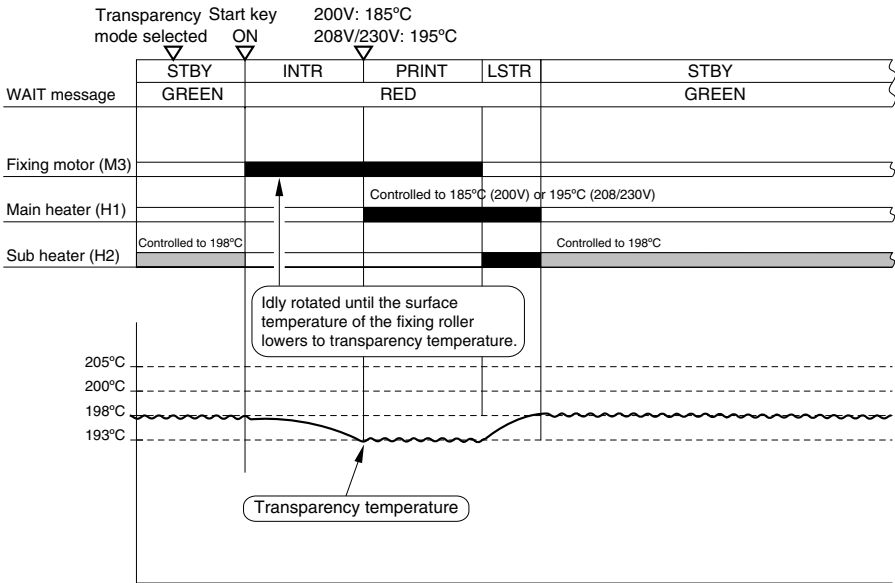

F02-704-01



COPIRE>OPTION>BODY>OHP-TEMP
(changing the temperature settings for the transparency mode)
0: 198°C (default)
1: 193°C
2: 188°C
3: 183°C

7.5 Thick Paper Mode

To prevent drops in the surface temperature of the fixing roller occurring when thick paper moves past it, the down sequence shift temperature increased.

If thick paper is selected when registering paper type in user mode (common settings), the down sequence for thick mode will be executed.




COPIRE>OPTION>BODY>FIX-TEMP

(setting the down sequence start temperature for thick paper mode)

| Setting | 86 cpm | 74 cpm | Suspend | Resume |
|---------|--------|--------|---------|--------|
| 0 | 194°C | 193°C | 183°C | 198°C |
| 1 | 189°C | 188°C | 178°C | 193°C |
| 2 | 184°C | 183°C | 173°C | 188°C |

7.6 Power Save Mode

When the Power Save mode key is pressed in the control panel, the control temperature in STBY is made lower than normal to reduce power consumption. F02-706-01 shows the sequence of operation used in power save mode.

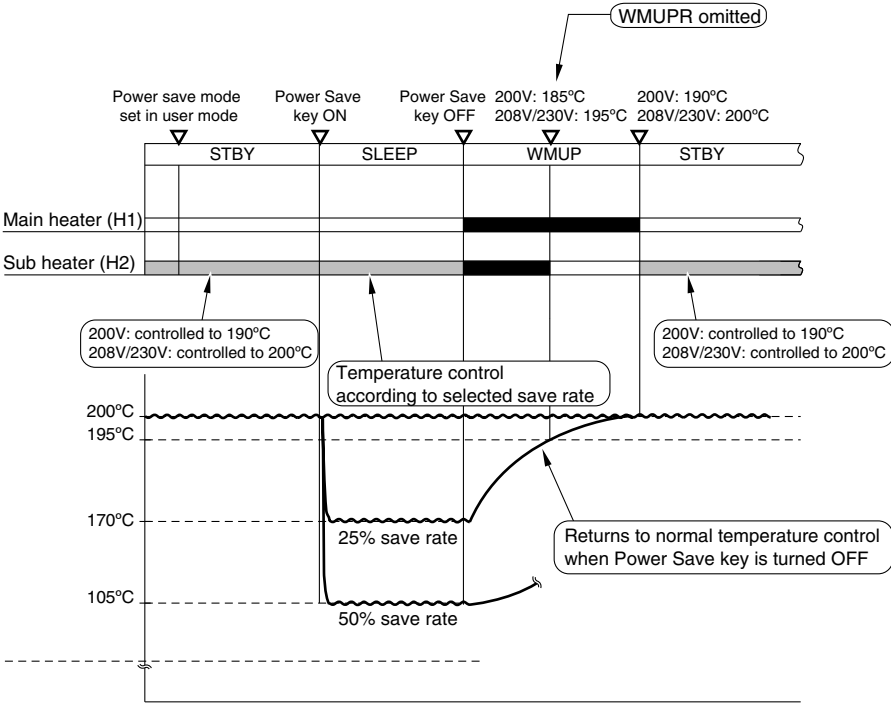


F02-706-01

7.7 Detecting an Error


The following errors are detected in relation to fixing temperature control:

1. temperature control error by main thermistor (TH1)
2. sensor error by sub thermistor (TH2)
3. overheating error by thermal switch (TP1)

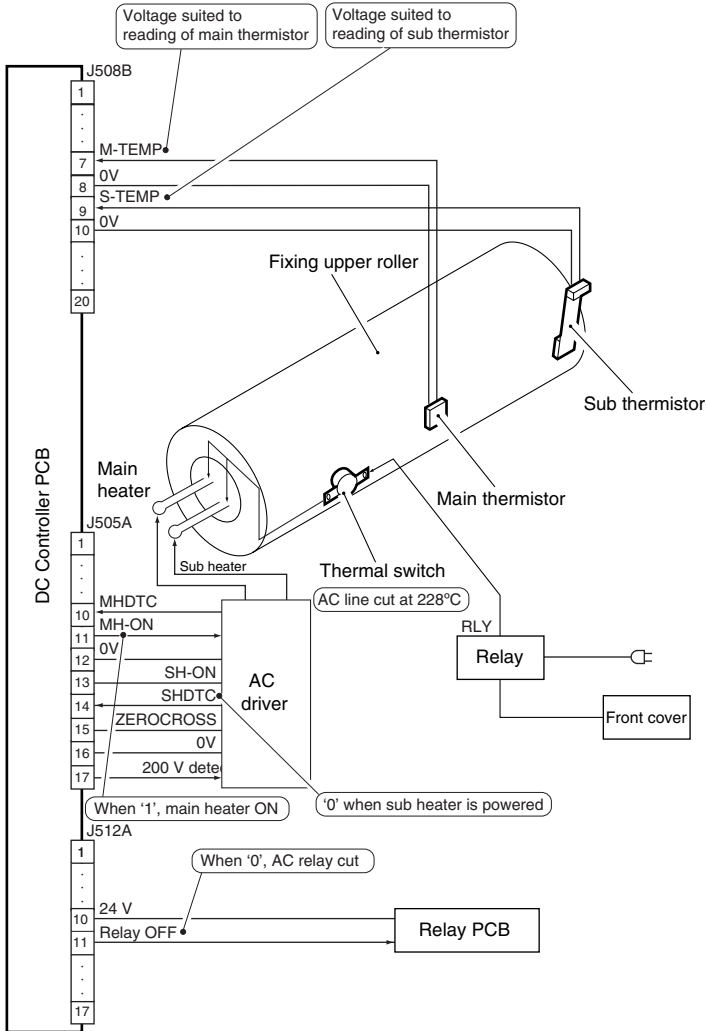

F02-707-01

7.8 Down Sequence Control

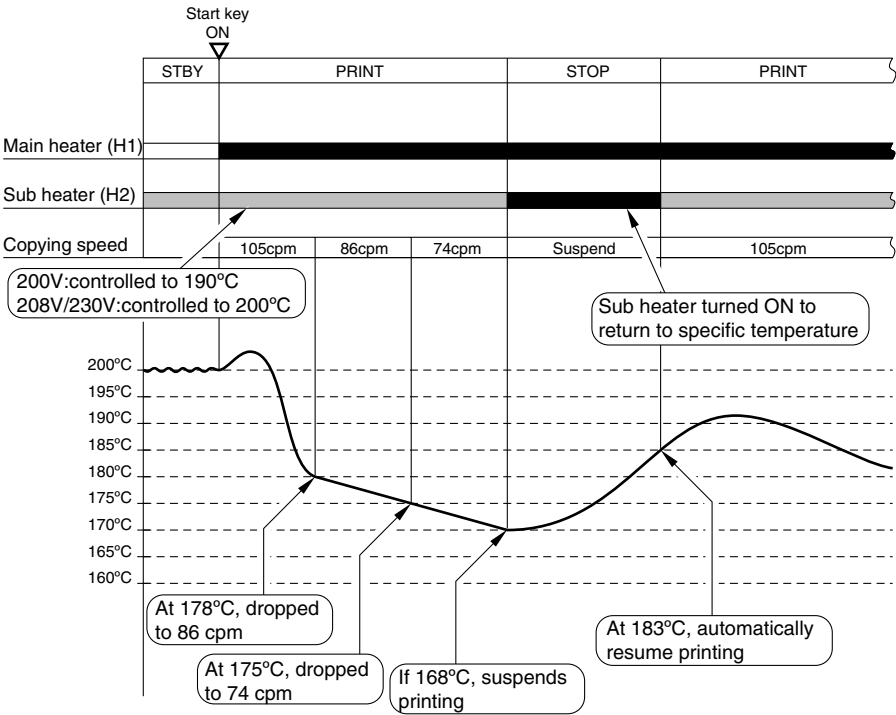

F02-708-01




COPIRE>OPTION>BODY>FIX-TMP1 (setting the down sequence)

| Setting | 86 cpm | 74 cpm | Suspend | Resume |
|---------------------|--------|--------|---------|--------|
| Setting 0 | 183°C | 178°C | 173°C | 188°C |
| Setting 1 (default) | 178°C | 173°C | 168°C | 183°C |
| Setting 2 | 173°C | 168°C | 163°C | 178°C |

Select setting 0 if priority is on image quality; select setting 2 if priority is on speed.

7.9 Disassembly/Assembly


The mechanical characteristics of the machine are as described herein; disassemble/assemble the machine as instructed and with the following in mind:

1.  Before starting any disassembly/assembly work, turn off the main power switch, and disconnect the power plug.
2. Unless otherwise specifically instructed, assemble the machine by reversing the steps used to disassemble it.
3. Identify the screws by type (length, diameter) and location.
4. To protect against static charge, one of the mounting screws of the rear cover comes with a toothed washer. Be sure not to leave out the washer when assembling the machine.
5. To ensure electrical continuity, the mounting screw for the grounding wire and the varistor comes with a washer. Be sure not to leave out the washer when assembling the machine.
6. As a rule, do not operate the machine with any of its parts removed.
7. When sliding out the duplex feeder unit or the fixing assembly, be user to turn off the front cover switch or the power switch.

7.9.1 Fixing Heater and the Control Parts


a. Removing the Main/Sub Heater

- 1) Remove the fixing assembly.
- 2) Remove the 2 screws [1], and detach the fixing connector unit [2]; then, remove the screw [3] and the terminal plate [4] at the rear to pull out the faston [5]. (2 locations)

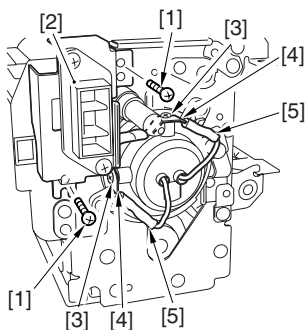


F02-709-01

- 3) Remove the 2 screw [1], and detach the heater positioning plate (rear) [2].

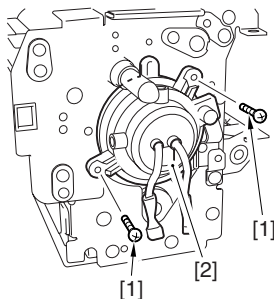

F02-709-02

- 4) Remove the 2 fastons [1] at the front, and remove the screw [2] to detach the heater positioning plate (front) [3].

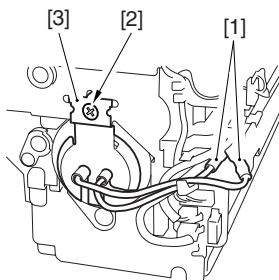


F02-709-03

- 5) Remove the main/sub heater.

b. Mounting the Main/Sub Heater

To mount the fixing heater, reverse the steps used to remove it with the following in mind:


- a. Do not touch the surface of the heater.
- b. For both, mount the heater so that the side with the longer harness is to the front.
- c. Viewing from the front of the fixing assembly, mount the main heater [1] to the right and the sub heater [2] to the left.

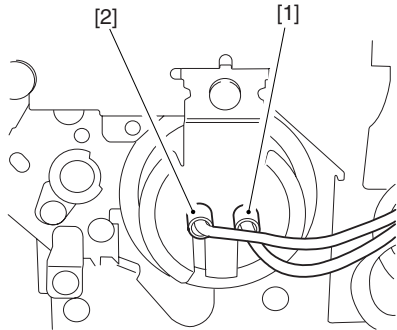

F02-709-04


c. Removing the Thermal Switch Unit

- 1) Remove the fixing assembly.
- 2) Remove the fixing web; then, remove the 2 screws [1] and the oil pan [2], and detach the fixing harness cover [3].

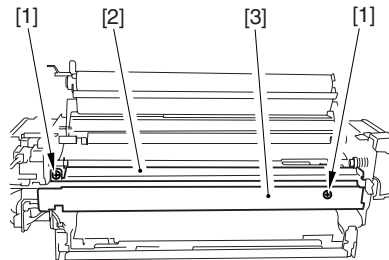


F02-709-05

- 3) Remove the faston [1], and remove the 2 screws [2]; then, detach the electrode assembly [3] and the thermal switch holder [4].

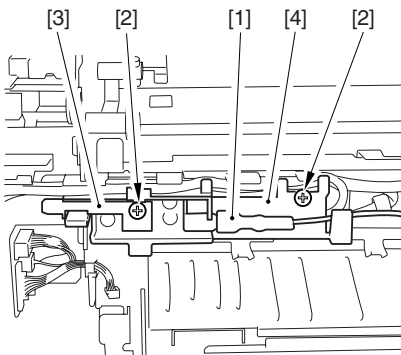

F02-709-06

- 4) Remove the 4 screws [1], and detach the thermal switch unit [2].

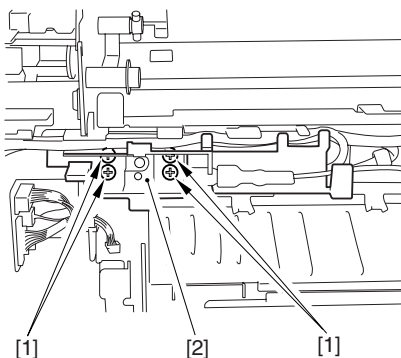


F02-709-07

d. Mounting the Thermal Switch Unit



- When mounting the thermal switch [1], be sure that it is in contact with the fixing roller [2] as shown.
- The thermal switch must be replaced as the thermal switch unit.
- Do not use again the thermal switch wolve contact point become open.

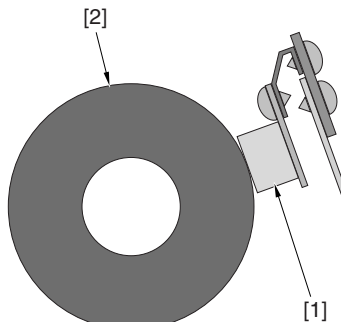


F02-709-08

e. Removing the Main Thermistor

- 1) Remove the fixing assembly.
- 2) Remove the fixing web and the oil pan.
- 3) Remove the fixing harness cover.
- 4) Disconnect the connector [1] of the thermistor. Remove the screw [2], and shift the thermistor assembly [3] to the rear to detach.




When shifting the thermistor assembly to the rear, take care not to damage the fixing roller with the thermistor.

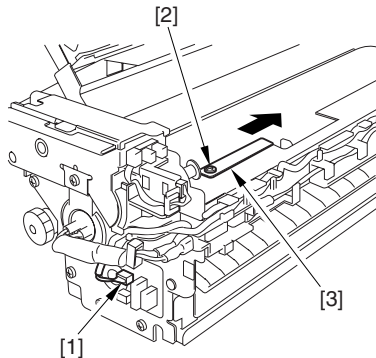

F02-709-09

- 5) Remove the 2 thermistor retaining springs [1], and detach the main thermistor [2].

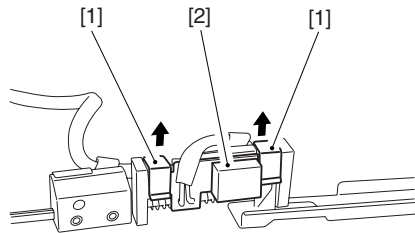


F02-709-10

f. Mounting the Main Thermistor

When mounting the main thermistor to the fixing assembly, be sure that the tie-wrap [1] is as shown.

The tie-wrap serves as a stopper by butting against the claw [2].


Check also to be sure that the main thermistor and the fixing roller are not away from each other.

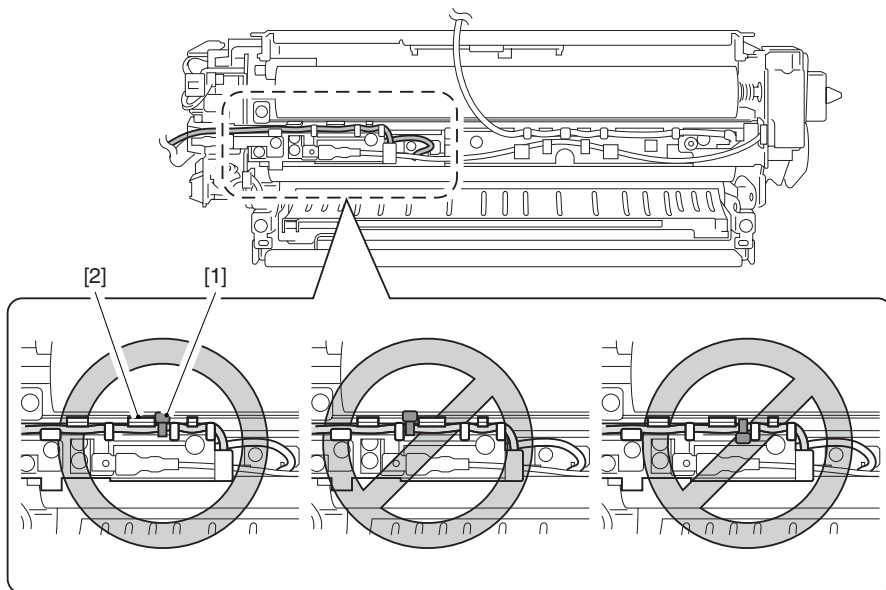

F02-709-11


g. Removing the Sub Thermistor

- 1) Slide out the fixing assembly.
- 2) Remove the fixing web and the oil pan.
- 3) Remove the fixing harness cover.
- 4) Disconnect the connector [1] and remove the screw [2]; then, detach the sub thermistor assembly [3].

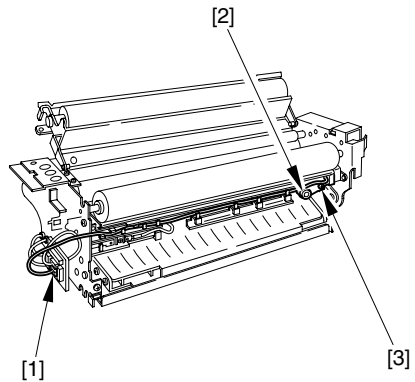

F02-709-12

- 5) Remove the screw [1], and detach the sub thermistor [2].

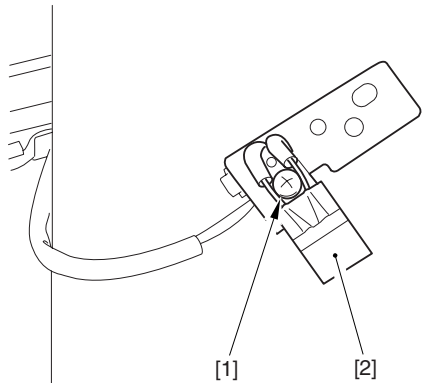


F02-709-13

7.9.2 Fixing Roller Assembly


a. Removing the Fixing Upper Roller

- 1) Remove the fixing assembly.
- 2) Remove the fixing web, and clean the oil pan.
- 3) Remove the 2 fixing heaters.
- 4) Remove the screw [1], and detach the pressure support plate [2] at the front.

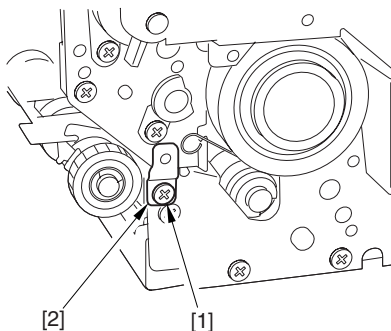

F02-709-14

- 5) Remove the screw, and detach the pressure support plate [2] at the rear.

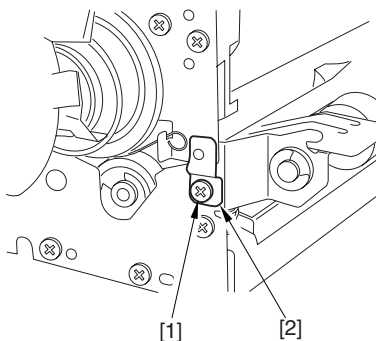


F02-709-15

- 6) Open the fixing upper unit [1].




When opened, the fixing upper unit becomes unstable. Be sure to use a screwdriver as shown to support it.

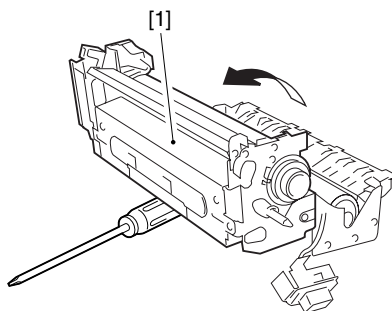


F02-709-16

- 7) Remove the stopper [1] from the front and the rear.

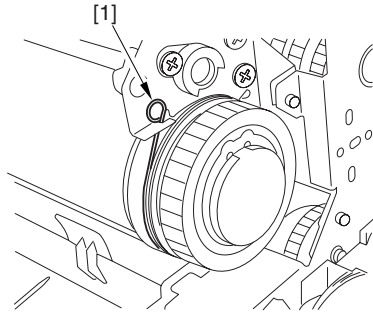


F02-709-17

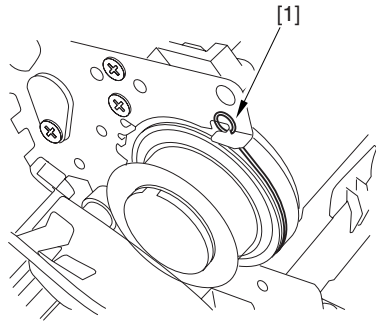


F02-709-18

- 8) While paying attention to the thermal switch and the thermistor, remove the upper roller assembly.
- 9) Remove the C-ring [1] at the front, and remove the gear [2], bushing [3], and bearing [4].

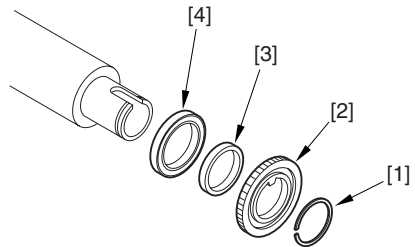

F02-709-19

- 10) Remove the C-ring [1] at the rear, and remove the electrode plate [2], spacer [3], bearing [4], and bushing [5].

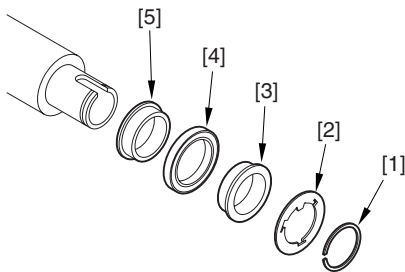


F02-709-20

b. Mounting the Fixing Upper Roller


Mount the upper roller by reversing the steps used to remove it.



- a. To prevent the surface of the roller from dirt or damage, wrap paper after removing it.
- b. Be sure that the longer cut-off A shown in F02-709-21 is toward the rear.
- c. When mounting, clean the electrode plate [1] and the electrode terminal [2].

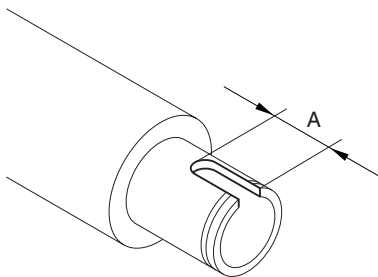

F02-709-21

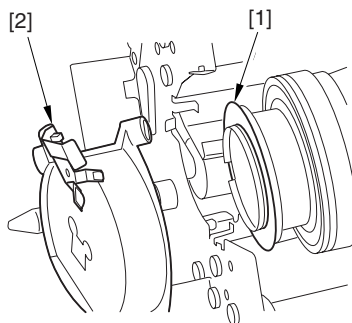


F02-709-22

7.9.3 Delivery Assembly


a. Removing the External Delivery Roller

- 1) Remove the fixing assembly.
- 2) Remove the 3 screws [1]; then, while opening the upper delivery assembly [2], remove the delivery roller guide [3].

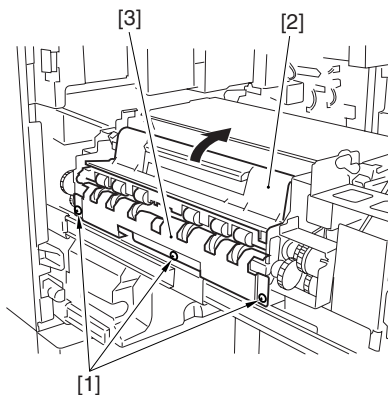


F02-709-23

- 3) Remove the E-ring [1] at the front, slide the bearing [2] in the direction of the gear.

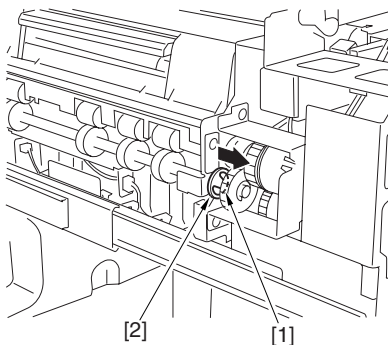

F02-709-24

- 4) Remove the E-ring [1], and slide the bearing [2] toward the rear; then, detach the external delivery roller assembly [3].

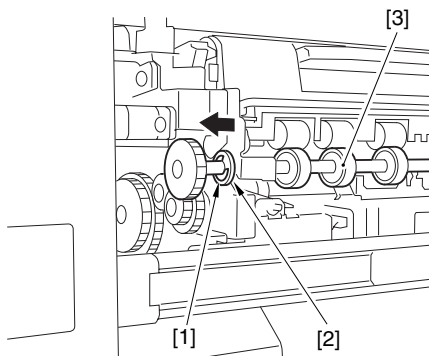


F02-709-25

- 5) Remove the E-ring [1], one-way gear [2], and bearing [3] at the rear of the external roller shaft; then, remove the 2 E-rings [4] and the 2 rollers [5] of each roller.




Take care not to lose the parallel pin used in each roller.

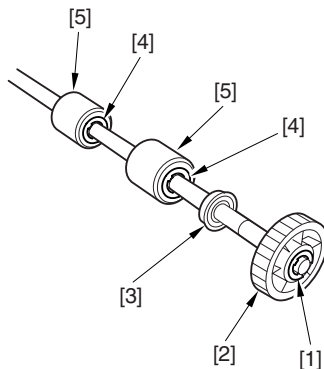

F02-709-26


b. Removing the Internal Delivery Roller

- 1) Remove the fixing assembly.
- 2) Remove the internal delivery roller [1], bearing [2], 3 E-rings [3], and bushing holder [4]; then, detach the drive gear [5].

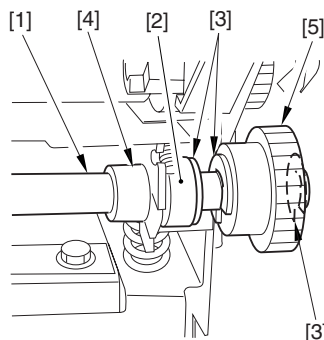

F02-709-27


- 3) Remove the E-ring [1] and the bushing [2] at the rear of the shaft; then, detach the internal delivery roller [3].

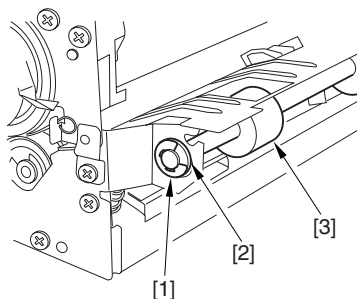

F02-709-28

c. Removing the Delivery Speed Switching Clutch

- 1) Slide out the fixing/feeder unit.
- 2) Remove the fixing motor.
- 3) Remove the 3 screws [1], and detach the fixing front support base [2].

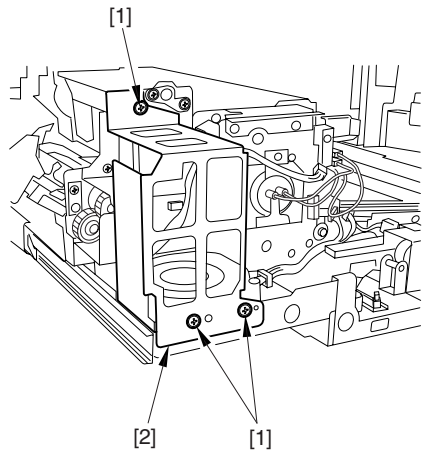


F02-709-29

- 4) Disconnect the 2 connectors [1], and remove the 2 screws [2]; then, detach the delivery speed switching clutch [3].



When detaching the delivery speed switching clutch, take care not to lose the bearings on both ends of the clutch shaft and the washer at the rear.

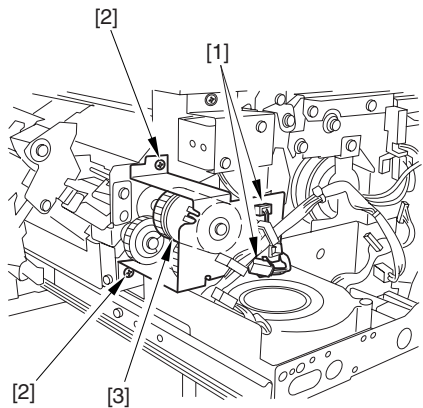


F02-709-30

7.9.4 Paper Sensors

a. Removing the Claw Jam Sensor


- 1) Remove the fixing assembly.
- 2) Remove the 2 screws, and detach the lower separation claw assembly.
- 3) Detach the claw jam sensor [1] from the right side of the lower delivery assembly.

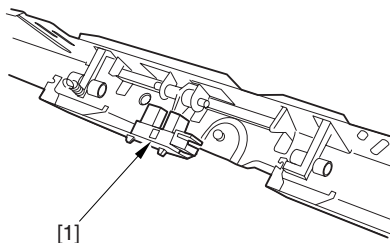

F02-709-31


b. Remove the External Delivery Sensor

- 1) Remove the external delivery roller.
- 2) Remove the 2 screws [1], and disconnect the connector [2]; then, detach the external sensor assembly [3].

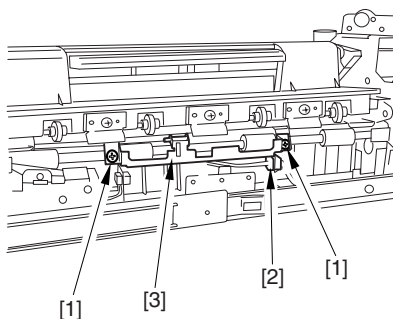

F02-709-32


- 3) Disconnect the connector [1], and detach the external delivery sensor [2].

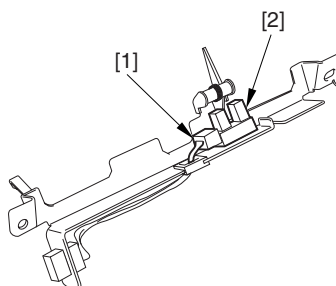

F02-709-33


c. Removing the Internal Delivery Sensor

- 1) Remove the fixing assembly.
- 2) Open the upper delivery assembly, and remove the 2 screws [1]; then, detach the internal delivery sensor assembly [2].

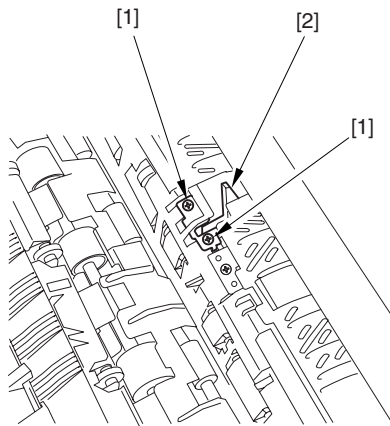

F02-709-34


- 3) Disconnect the connector [1], and detach the internal delivery sensor [2].

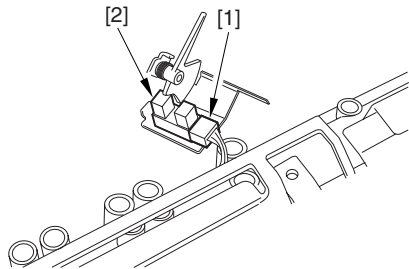

F02-709-35


d. Remove the Fixing/Feeder Unit Outlet Sensor

- 1) Slide out the fixing/feed unit
- 2) Remove the screw [1] from the bottom face of the fixing/feeder unit; then, detach the fixing/feed outlet sensor [2].

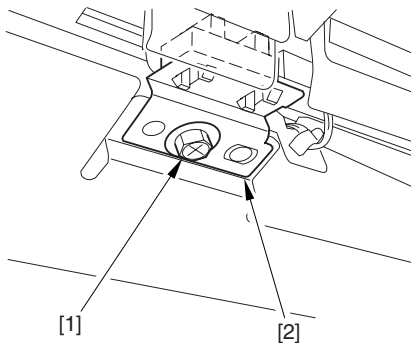

F02-709-36

- 3) Disconnect the connector [1], and detach the fixing/feed outlet sensor [2].

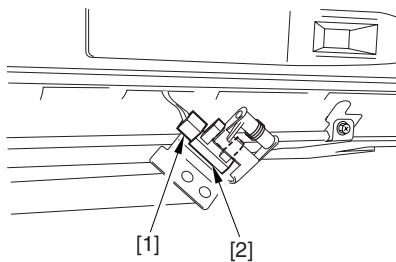

F02-709-37

8 Externals/Auxiliary Controls

8.1 Changes Made to Externals/Auxiliary Controls

| Unit/location | Changes from GP605 (IR600) | Purpose of change | Remarks | Reference |
|---------------|--|--|---------|-----------|
| Fan | Added a developing fan. | To cool the developing unit. | | 8.2 Fans |
| | Added a system fan. | To cool the inside of the system box. | | 8.2 Fans |
| | Added a delivery adhesion preventing fan. | To cool the delivery assembly. | | 8.2 Fans |
| | Added a scanner motor cooling fan. | To cool the scanner motor. | | 8.2 Fans |
| | Added a laser motor cooling fan. | To accommodate the integration of the primary charging assembly and the laser scanner motor cooling fan functions. | | 8.2 Fans |
| | Added a duplex/feeding fan. | To cool the duplexing/feeding assembly. | | 8.2 Fans |
| Externals | Added a separation heat discharge fan. | To enhance discharge of heat from around the separation assembly and to enhance separation performance. | | 8.2 Fans |
| | Eliminated the primary charging assembly fan. | To accommodate the use of the laser motor cooling fan. | | |
| | Eliminated the feeding fan. | To accommodate the use of the separation fan. | | |
| | Eliminated the laser scanner motor cooling fan. | To accommodate the use of the laser motor cooling fan. | | |
| | Changed the design of the system cover (it remains in the body). | To improve the serviceability of the main controller PCB-related work. | | |
| | Added an angular opening for duct suction in the rear upper cover. | To cool the inverter. | | |
| | Added a gasket to the rear upper cover. | To suppress noise. | | |
| | Added a new louver to the left lower cover (upward compatible). | To cool the all-night power supply unit. | | |
| | Added a side louver to the front cover. | To prevent overheating of the developing assembly, cleaner, and laser scanner. | | |
| | Made to use 2 heat discharge openings in the rear cover. | To prevent overheating. | | |
| Cassette | Made to use an upright display for the control panel. | To improve recognition. | | |
| | Changed the exterior appearance of the cassette. | To standardize the design. | | |


T02-801-01

8.2 Fans

F02-802-01 show the arrangement of fans used in the machine and the direction of air for each; for the name and function of each, see T02-801-01:

The fans added to the machine are as follows:

- [1] Laser motor cooling fan (FM1)
- [13] Developing fan (FM15)
- [14] System fan (FM16)
- [15] Delivery adhesion-preventing fan (FM17)
- [16] Scanner motor fan (FM18)
- [17] Duplex/feeding fan (FM19)
- [18] Separation heat discharge fan (FM20)

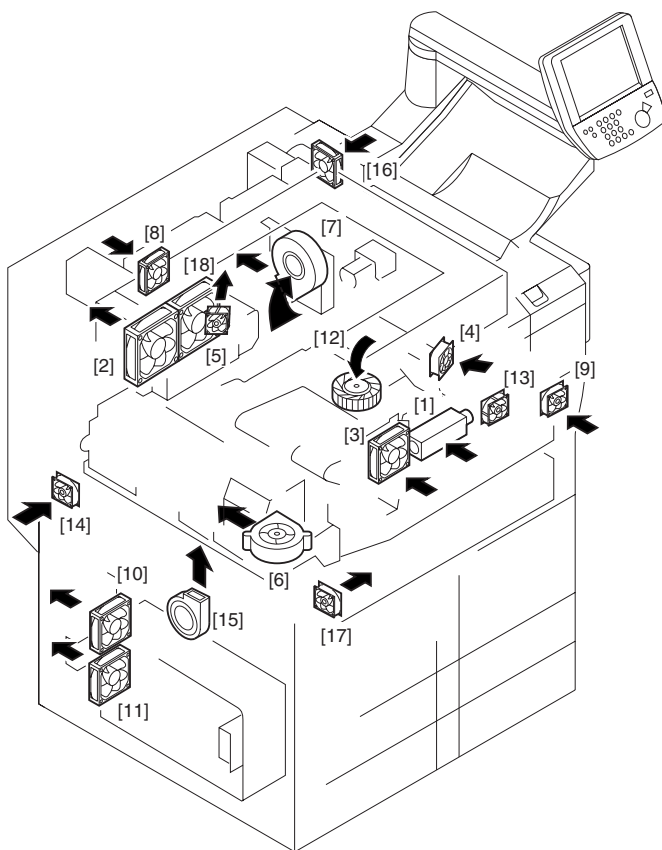

F02-802-01

| Ref. | Notation | Name | Function | Error code | Alarm code |
|------|----------|---------------------------------------|--|------------|-------------|
| [1] | FM1 | laser motor cooling fan | cools laser scanner motor, insulates heat for fixing assembly, prevents soiling of wire in primary charging wire | E111 | |
| [2] | FM2 | fixing heater discharge fan | discharges heat from around fixing assembly | E805-0001 | - |
| [3] | FM3 | laser cooling fan 1 | cools laser scanner unit | E121-0001 | - |
| [4] | FM4 | stream reading fan | cools copyboard glass in stream reading mode | - | 330010 |
| [5] | FM5 | laser cooling fan 2 | cools laser driver PCB | E121-0002 | - |
| [6] | FM6 | curl-reducing fan | cools paper | - | 330001 |
| [7] | FM8 | drum fan | draws and cools ozone around drum and stray toner | E820 | - |
| [8] | FM9 | inverter cooling fan | cools control panel inverter | E251 | - |
| [9] | FM10 | pre-transfer charging assembly fan | discharges ozone from around pre-transfer charg- ing assembly | E823 | - |
| [10] | FM11 | power supply cooling fan 1 | cools DC power supply PCB | E804 | - |
| [11] | FM12 | power supply cooling fan 2 | cools DC power supply PCB | E804 | - |
| [12] | FM13 | separation fan | assists separation of paper from drum | E830 | - |
| [13] | FM15 | developing fan | cools developing assembly | - | 330006 |
| [14] | FM16 | system fan | cools PCBs inside system box | E804-0004 | 000804-0004 |
| [15] | FM17 | delivery adhesion-pre- venting fan | cools paper upon delivery | - | 330007 |
| [16] | FM18 | scanner motor cooling fan | cools scanner motor | - | 330005 |
| [17] | FM19 | duplexing/feeding fan | cools duplex/feeding motor | | 330009 |
| [18] | FM20 | separation heat dis- charge fan | discharges heat from around separation assembly and to enhance separation performance | E805-0002 | |

T02-802-01

8.3 Sequence of Fan Operation

The machine's fans may be either ones operating in conjunction with the state of the printer unit or ones operating in conjunction with the state of the scanning lamp, as shown in either F02-803-01 or F02-803-02.

The scanner cooling fan and the power supply fan operate in relation to the states of both printer unit and the scanning lamp; they are, however, controlled to the higher speed.

When a fan error occurs or the door is opened, the state which the fan was in prior to the error will be used.

• Fans Opening in Keeping with the State of the Printer Unit

Main power switch ON

| | Warm-up | Initial multiple rotation | Standby | Copying | Printing | standby after copying (other environment) | standby after copying (above 4/ Hor 29) | Preheating | Sleep | E indication | Jam | Cover open |
|--------------------------------------|---------|---------------------------|---------|---------|----------|---|---|------------|----------------------|--------------|-----|----------------|
| Primary polygon fan (FM20) | | | | | | | | | Full-speed (B → OFF) | | | |
| Fixing heat discharge fan (FM2) | | | | | | Full-speed (B) → half-speed | Full-speed (B) → half-speed | | Half-speed (B) → OFF | | | OFF/half-speed |
| Laser cooling fan 1 (FM3) | | | | | | | | | Full-speed (B) → OFF | | | |
| Laser cooling fan 2 (FM5) | | | | | | | | | Full-speed (B) → OFF | | | |
| Curl-reducing fan (FM6) | | | | | | | | | | | OFF | OFF |
| Drum suction fan (FM8) | | | | | | | | | Half-speed (B) → OFF | | | |
| Post fan (FM10) | | | | | | | | | | | | OFF/full-speed |
| Power supply cooling fan 1 (FM11) | | | | | | | | | Half-speed (B) → OFF | | | |
| Power supply cooling fan 2 (FM12) | | | | | | | | | Half-speed (B) → OFF | | | |
| Separation fan (FM13) | | | | | | | | | | | | |
| Developing fan (FM15) | | | | | | | | | | | | OFF/half-speed |
| Delivery adhesion fan (FM17) | | | | | | | | | | | | |
| Duplex/feeding fan (FM21) | | | | | | | | | | | | |
| Separation heat discharge fan (FM19) | | | | | | | | | Half-speed (B) → OFF | | | |

Full speed

Half-speed

F02-803-01

• Fans Operating in Keeping with the State of the Scanning Lamp

Main power switch ON
↓


| Scanning lamp | Lamp ON | Lamp OFF | Standby | Jam | Pre-heat | Scanner ON | Scanner OFF | |
|---|------------|------------|------------|------------|------------|------------|-------------|---|
| Optical cooling fan (FM3) | Full speed | Half speed | | | Half speed | | | ↘ |
| Stream reading fan (FM4) | Full speed | Half speed | Half speed | | Half speed | | | ↘ |
| Inverter cooling fan (FM9) | Full speed | Half speed | Half speed | | Half speed | | | ↘ |
| Power supply cooling fan 1/2 (FM11, FM12) | | | Half speed | Half speed | Half speed | Full speed | Half speed | ↘ |

Full speed Half speed

F02-803-02

8.4 Disassembly/Assembly

The mechanical characteristics of the machine are as described herein; disassemble/assemble the machine as instructed and with the following in mind:


1.  Before starting any disassembly/assembly work, turn off the main power switch, and disconnect the power plug.
2. Unless otherwise specifically instructed, assemble the machine by reversing the steps used to disassemble it.
3. Identify the screws by type (length, diameter) and location.
4. To protect against static charge, one of the mounting screws of the rear cover comes with a toothed washer. Be sure not to leave out the washer when assembling the machine.
5. To ensure electrical continuity, the mounting screw for the grounding wire and the varistor comes with a washer. Be sure not to leave out the washer when assembling the machine.
6. As a rule, do not operate the machine with any of its parts removed.
7. When sliding out the duplex feeder unit or the fixing assembly, be sure to turn off the front cover switch or the power switch.

8.4.1 External Covers

a. Names of the Part


Those covers that can be detached by mere removal of mounting screws are omitted from the discussions (number of screws indicated).

- [1] Upper front cover (8.4.1.g)
- [2] Copyboard glass
- [3] Left glass retainer (2 screws)
- [4] Left pocket plate (8.4.1)
- [5] Upper rear cover (8.4.1.h)
- [6] Right pocket plate (3 screws)
- [7] Original delivery tray (8.4.2.a)
- [8] Manual feed tray (6.6.1.a)
- [9] Lower vertical path cover
- [10] Toner cartridge cover (2 screws)
- [11] Front cover (8.4.1.b)

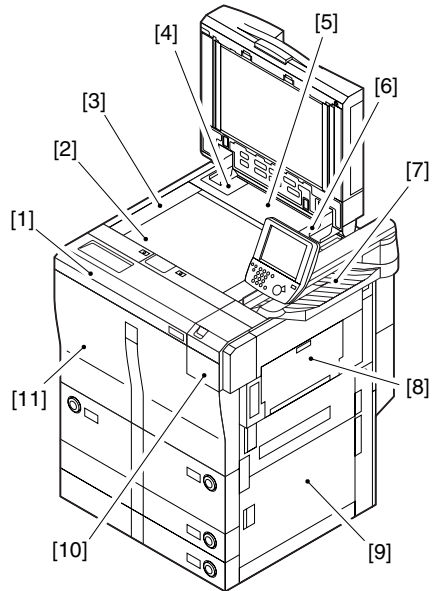


F02-804-01-a

- [12] Right glass retainer (2 screws)
- [13] Scanning lamp cover
- [14] Control panel (8.4.2.a)
- [15] Upper right cover (8.4.2.a)
- [16] Right rear cover (8.4.2.a)
- [17] Waste toner cover (1 screw)
- [18] Right lower cover (2 screws)
- [19] Upper vertical path cover (8.4.1.f)
- [20] Manual feed tray unit (6.6.1.a)
- [21] Face plate cover

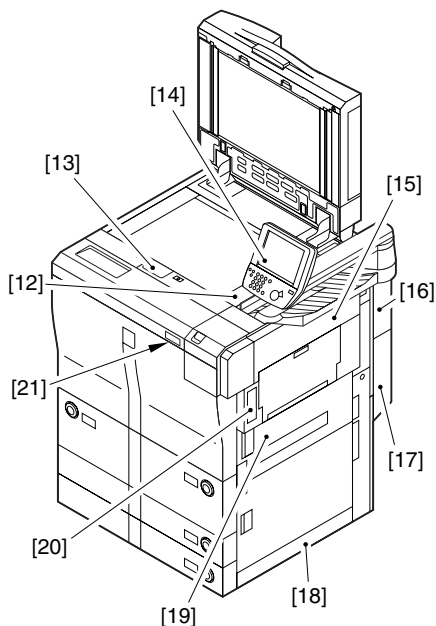


F02-804-01-b

- [22] Control panel unit (8.4.2.a)
- [23] Upper front cover unit (8.4.1.g)
- [24] Upper left cover (3 screws)
- [25] Left upper cover (9 screws; after removing left lower cover)
- [26] Left lower cover (4 screws)
- [27] System connector cover (2 screws)
- [28] Rear cover (8.4.1.e)
- [29] Rear upper cover (2 screws)

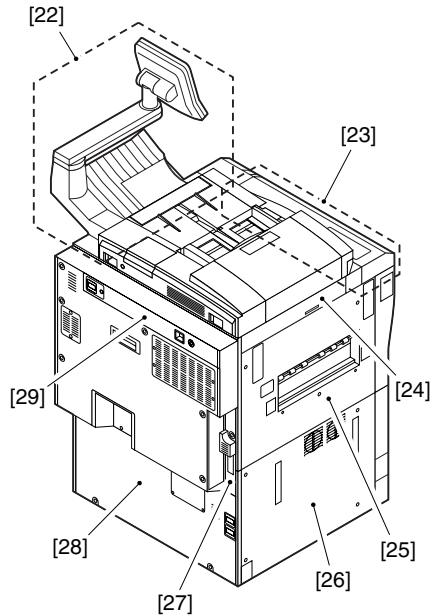


F02-804-02-a

- [30] Inside upper cover (8.4.1.c)
- [31] Primary assembly cover (1 screw)
- [32] Process unit cover
- [33] Compartment cover
- [34] Pre-transfer charging assembly cover (1 screw)
- [35] Transfer/separation charging assembly cover (1 screw)
- [36] Inside right lower cover (2 screws; 1 screw used in common with front cover tape)
- [37] Duplex unit cover (4 screws, 3 knobs)
- [38] Fixing/feeder unit cover (6.6.6.a)

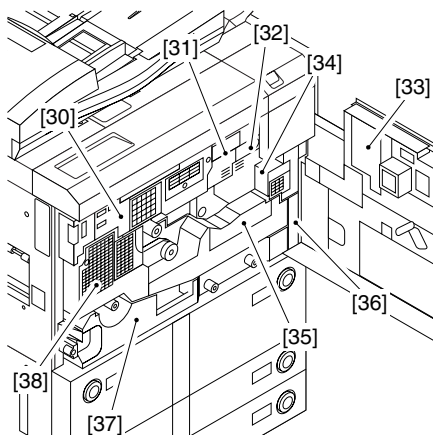

F02-804-02-b

- [39] ADF
- [40] Drum protective sheet (after removing waste toner cover)
- [41] Right deck
- [42] Cassette 4
- [43] Cassette 3
- [44] Left deck

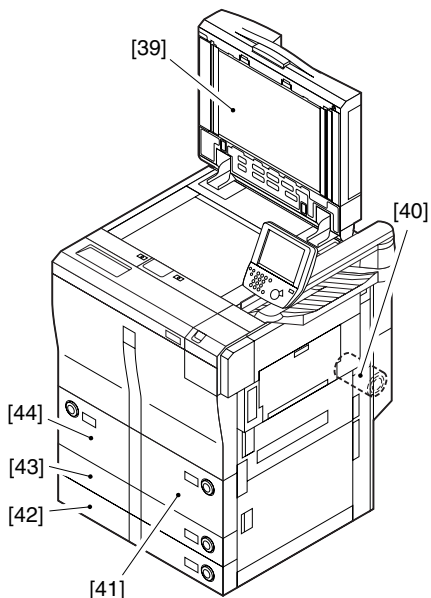


F02-804-02-c

Remove the covers as necessary when cleaning, checking, or repairing the inside of the machine.

b. Removing the Front Cover


- 1) Open the toner cartridge cover [1].
- 2) Open the front cover, and remove the mounting screw [3] for the cover type [2].
- 3) Push up the hinge pin [4] found on the front cover, and turn it to the front 90° to pull it off downward.
- 4) Pull off the front cover at an angle.

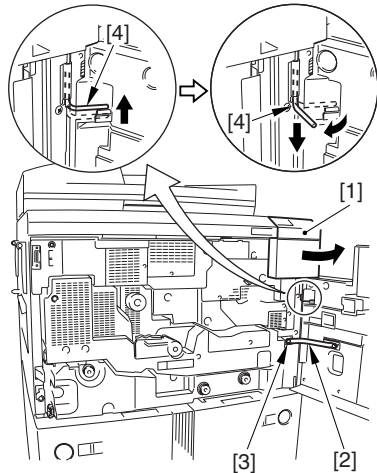

F02-804-03


c. Removing the Inside Upper Cover

- 1) The toner cartridge cover.
- 2) Open the front cover.
- 3) Remove the mounting screw [1], and detach the primary charging assembly cover [2].
- 4) Shift down the fixing/feeding lever [3], and slide out the fixing/feeder unit [4].

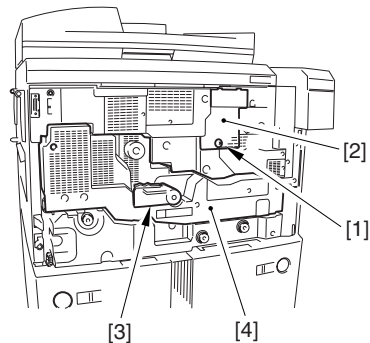

F02-804-04


- 5) Disconnect the 2 connectors [1].
- 6) Remove the 5 mounting screws [2], and detach the inside upper cover [3].

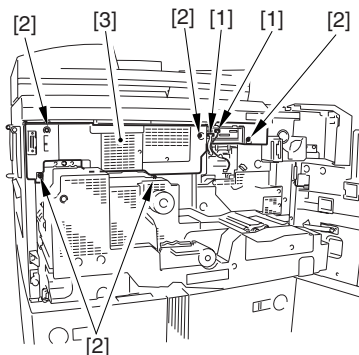

F02-804-05


d. Removing the Fixing/Feeder Unit Cover

- 1) Open the front cover, and shift down the fixing/feeding lever to slide out the fixing/feeding unit.
- 2) Remove the mounting screw [2] of the releasing lever [1]; then, pushing the releasing lever link [3] found at the rear of the fixing/feeder unit, remove the releasing lever while keeping it shifted up.

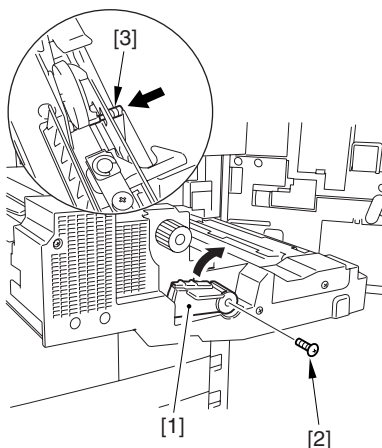

F02-804-06


- 3) Remove the mounting screw [1], and detach the fixing knob [2].
- 4) Remove the mounting screw [3], and detach the transfer separation charging assembly cover [4].
- 5) Remove the 2 mounting screws [5], and detach the fixing/feeder unit cover [6].

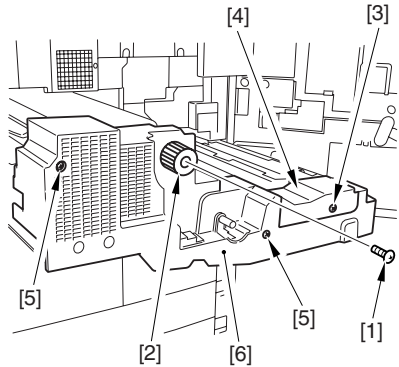

F02-804-07

e. Removing the Rear Cover


- 1) Remove the 11 mounting screws [1], and detach the rear cover [2].

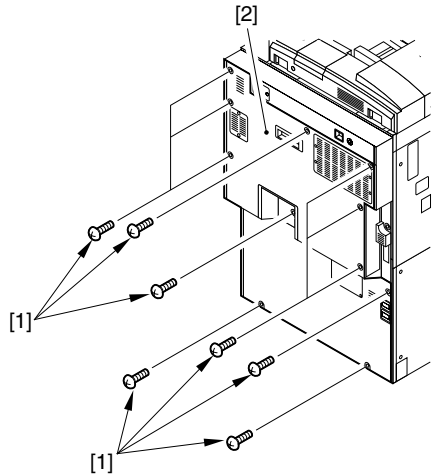

F02-804-08

f. Removing the Upper Vertical Path Cover


- 1) Open the Manual feed tray unit.
- 2) Open the upper vertical path cover [2].
- 3) Holding the Manual feed tray unit [1] slightly up, pull out the upper vertical path cover [2] upward.

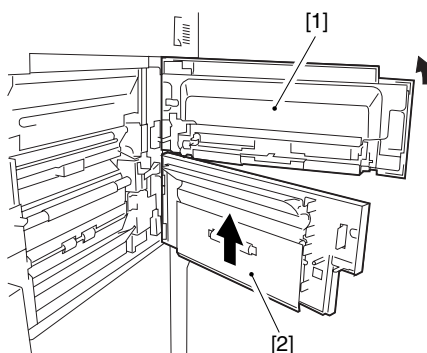

F02-804-09

g. Removing the Upper Front Cover Unit


- 1) Remove the inside upper cover.
- 2) Remove the flat-headed screw [1] (1 pc. each), and detach the 2 magnet catches [2].
- 3) Remove the face plate [3], and remove the 3 screws [4]; then, detach the upper front cover unit [5].

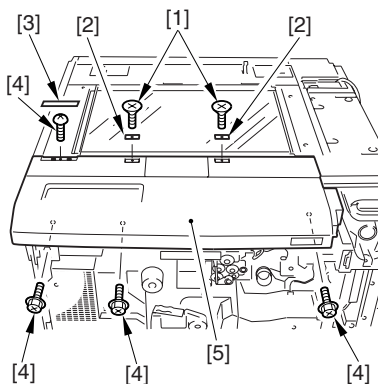

F02-804-10



If the card reader is mounted, be sure to disconnect the connector [1].

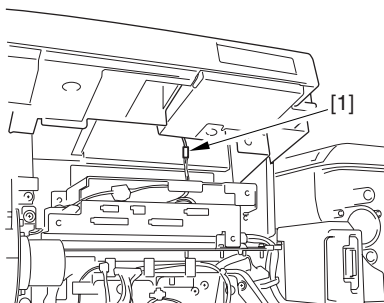


F02-804-11

h. Removing the Upper Rear Cover

- 1) Remove the ADF.
- 2) Remove the 3 screws [1], and detach the right pocket plate [2].
- 3) Remove the 3 screws [3], and detach the left pocket plate [4].



Mark the position of the screw [3] so that the left pocket plate [4] may be mounted back to its original position.

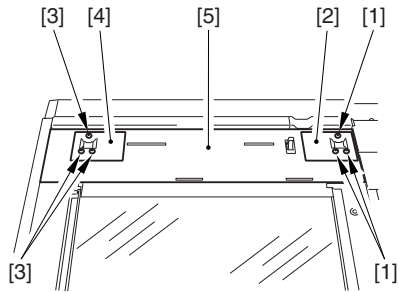


F02-804-12

- 4) Remove the upper rear cover [5].

8.4.2 Control Panel

a. Removing the Control Panel Unit


- 1) Disconnect the connector [1].

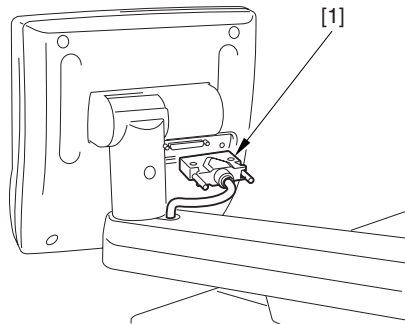

F02-804-13a




If for a 230V model, detach the ferrite core [2].

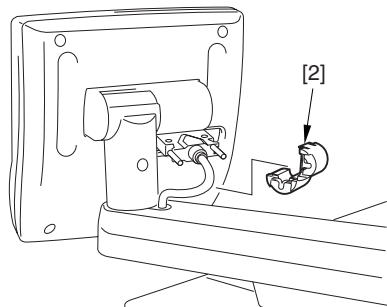


F02-804-13b

- 2) Remove the binding screw [1], and detach the lower arm cover [2].
- 3) Remove the 2 binding screws [4] used to keep the upper arm cover [3] in place.

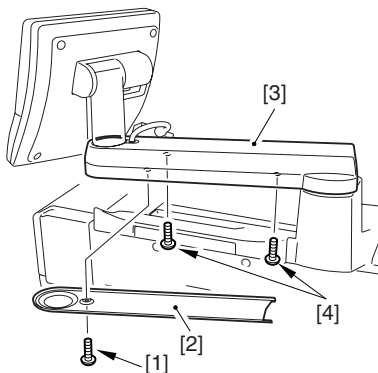

F02-804-14

- 4) Remove the binding screw [1], and detach the rear support cover [2].
- 5) Remove the double washer screw [3] and the flat-headed screw [4], and detach the control panel [5].

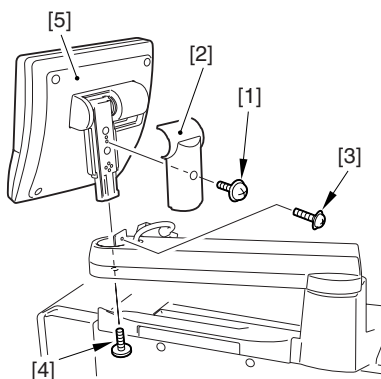


F02-804-15

- 6) While paying attention to the claw [2], detach the upper arm cover [1].
- 7) Remove the harness clip [3].



The harness clip will divide into two during the work. Continue the work, as it will not adversely affect any function.

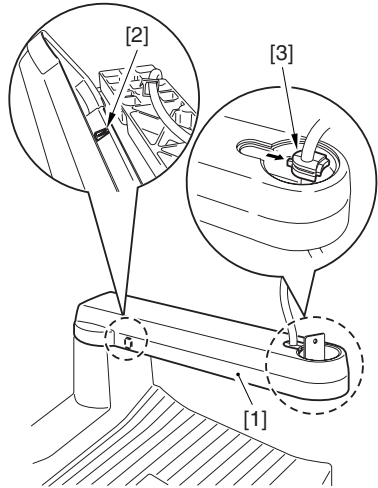


F02-804-16

- 8) Free the control panel harness [2] from the 2 wire saddles [1].
- 9) Remove the 4 binding screws [3] and the positioning binding screw [4]; then, while paying attention to the claw [6], detach the upper arm [5].
At this time, be sure to take a note of the position of the binding screw [4].




When mounting, be sure to match the marking [7] of the control panel harness against the wire saddle at the rear.

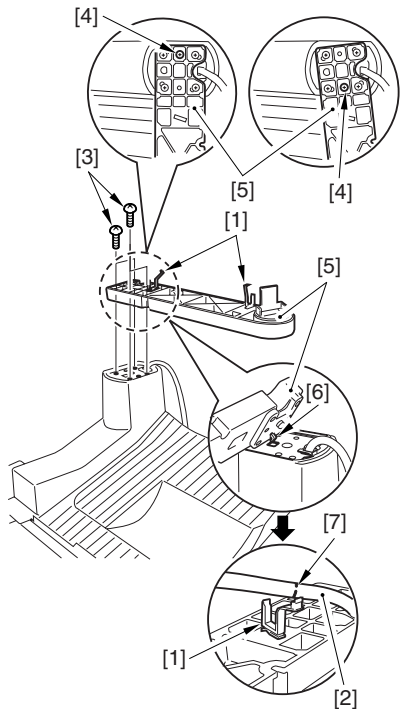


F02-804-17

- 10) Remove the 2 RS tightening screws [1], and detach the original delivery tray [2].

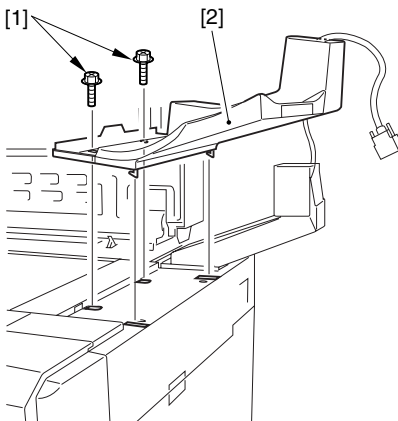


F02-804-18

- 11) Open the toner cartage [1], and remove the 3 RS tightening screws [2]; then, while paying attention to the claw [4], detach the upper right cover [3].

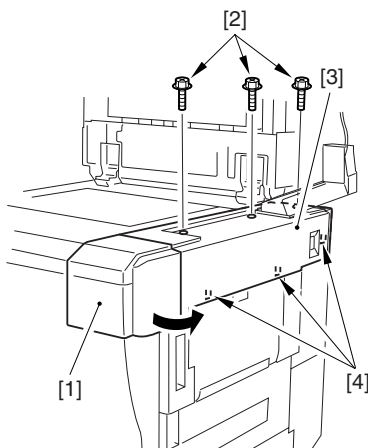


F02-804-19

- 12) Remove the 6 RS tightening screws [1]; then, while paying attention to the claw [3], detach the lower arm [2].

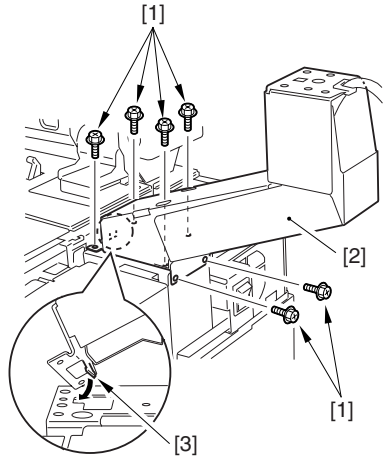

F02-804-20


- 13) Open the 2 edge saddles [1], and pull out the control panel harness [3] from the lower arm [2].

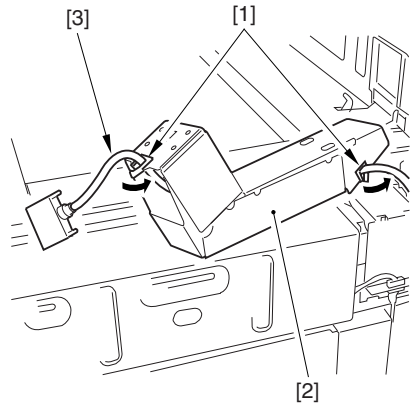

F02-804-21


b. Removing the Control Panel Support Unit

- 1) Remove the 2 screws [1], and detach the support front cover [2].
- 2) Remove the 5 screws [3], and detach the control panel rear cover [4].

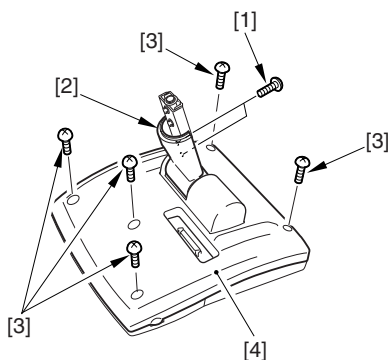

F02-804-22


- 3) Remove the 2 screws [1], 2 connector fixing screws [2], and 2 spring washers [3]; then, detach the connector cover [4].
- 4) Remove the 9 screws [5], and detach the control panel support unit [6].

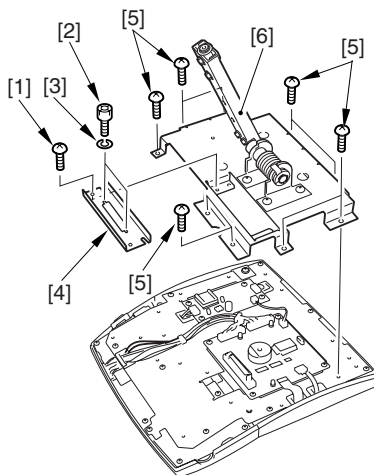

F02-804-23

c. Removing the Control Panel Controller (CPU) PCB


- 1) Remove the control panel support unit.
- 2) Disconnect the 3 connectors [1], and detach the 2 flat cables [2].
- 3) Remove the 4 screws [3], and detach the control panel controller (CPU) PCB [4].

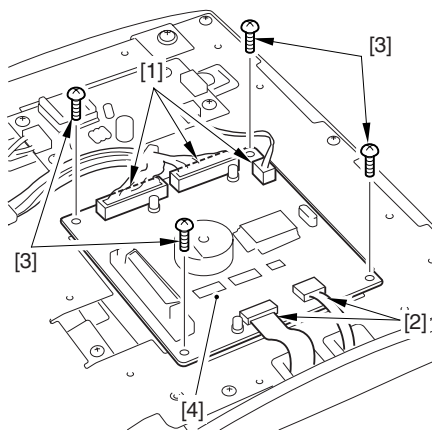

F02-804-24

d. Removing the Control Panel Inverter PCB


- 1) Remove the control panel support unit.
- 2) Disconnect the 3 connectors [1].
- 3) Remove the 4 screws [2], and detach the control panel inverter PCB [3].

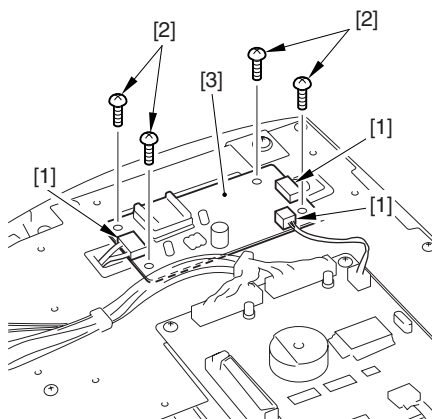

F02-804-25


e. Removing the LCD Panel

- 1) Remove the control panel controller (CPU) PCB.
- 2) Remove the control panel inverter PCB.
- 3) Remove the W washer screw [1], and detach the grounding sheet [2].
- 4) Remove the screw [3], and detach the LCD panel unit [4].

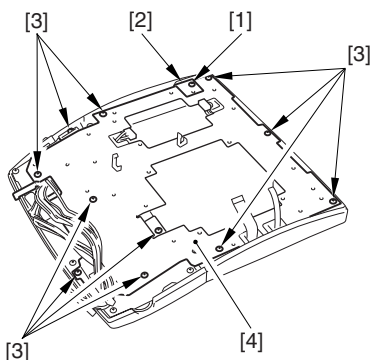

F02-804-26


- 5) Remove the 4 screws [1], and detach the LCD panel [2].

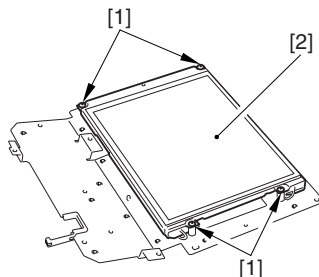

F02-804-27

f. Removing the Control Panel PCB

- 1) Remove the LCD panel unit.
- 2) Remove the harness sheet [1].
- 3) Remove the 10 screws [2], and detach the control panel PCB [3].

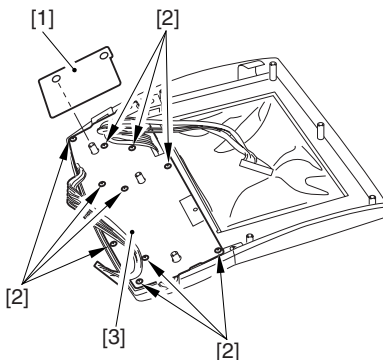


F02-804-28

8.4.3 Fans

a. Removing the Laser Motor Cooling Fan (FM1)

- 1) Remove the inside upper cover. (See 8.4.1.c.)
- 2) Disconnect the connector [1], and remove the harness lock [2] from the plate.
- 3) Remove the 4 screws [3], and detach the laser motor cooling fan [4].

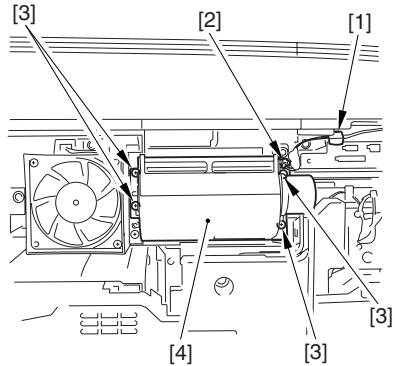


F02-804-29

b. Removing the Fixing Heat Discharge Fan (FM2)

- 1) Remove the rear cover. (See 8.4.1.e.)
- 2) Remove the 2 screws [1], and disconnect the connector [2]; then, detach the fixing heat discharge fan [3].



When mounting the fan, be sure that the direction of air current is as indicated by the arrow.

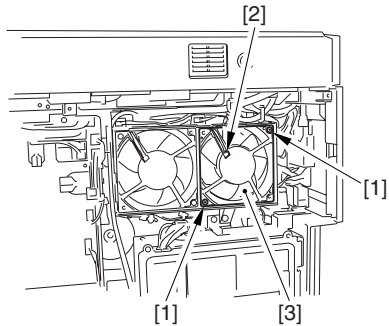


F02-804-30

c. Removing the Laser Cooling Fan 1 (FM3)

- 1) Remove the inside upper cover. (See 8.4.1.c.)
- 2) Disconnect the connector, and remove the 2 screws [2]; then, detach the laser cooling fan 1 [3].



When mounting the fan, be sure that the direction of air current is as indicated by the arrow.

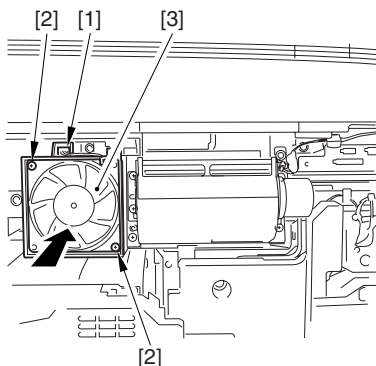


F02-804-31

d. Removing the Stream Reading Fan (FM4)

- 1) Remove the upper front cover unit. (See 8.4.1.g.)
- 2) Remove the 2 screws [1], and detach the stream read fan dust [2].




When mounting the fan, be sure that the direction of air current is as indicated by the arrow.

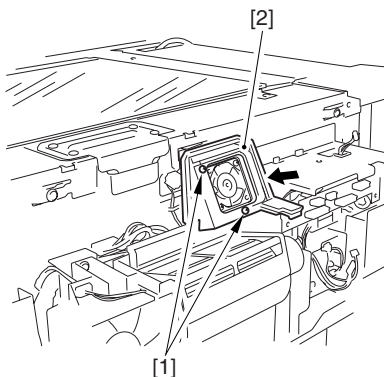


F02-804-32

- 3) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the stream read fan unit [3].

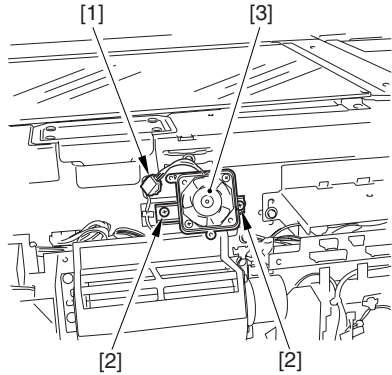

F02-804-33


- 4) Remove the 2 screws [1], and detach the stream read fan [2].

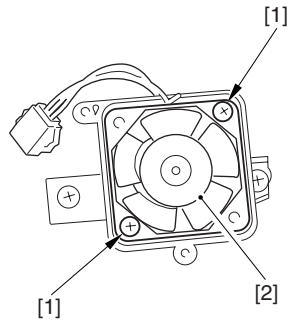

F02-804-34

e. Removing the Laser Cooling Fan 2 (FM5)

- 1) Remove the reader controller PCB. (See 2.9.3.e.)
- 2) Remove the 2 screws [1], and disconnect the connector; then, detach the laser driver cooling fan [3] together with the mounting base.

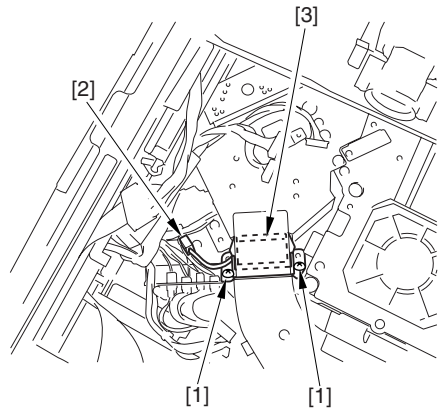


F02-804-35

- 3) Remove the 2 screws [1], and detach the laser driver cooling fan [2].




When mounting the fan, be sure that the direction of air current is as indicated by the arrow.

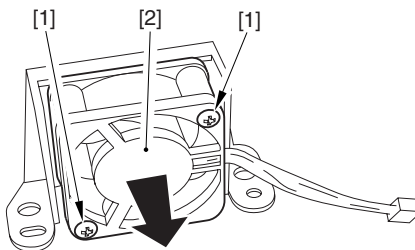

F02-804-36

f. Removing the Curl-Reducing Fan (FM6)

- 1) Remove the fixing/feeding unit cover. (See 8.4.1.d.)
- 2) Disconnect the 4 connectors [1], and remove other 4 screws [2]; then, detach the fixing motor base [3].

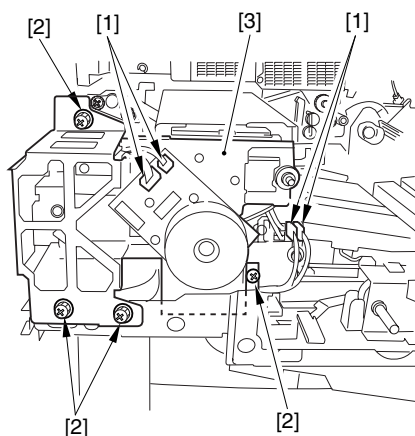


F02-804-37

- 3) Remove the 2 screws [1], and disconnect the 2 connectors [2]; then, detach the delivery speed switching clutch [3].




When removing the delivery speed switching clutch, take care not to lose the bearings and the washers (rear only) on both ends of the clutch shaft.

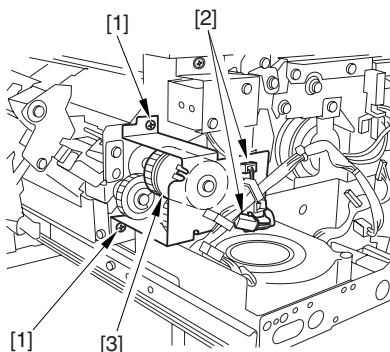

F02-804-38


- 4) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the curl-reducing fan [3].

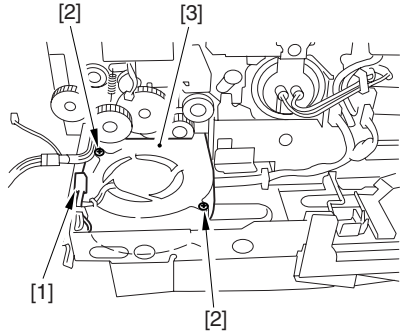

F02-804-39


g. Removing the Drum Fan (FM8)

- 1) Remove the HV-DC PCB. (See 8.4.7.c.)
- 2) Remove the 2 screws [1], and disconnect that connector [2]; then, detach the drum fan unit [3].

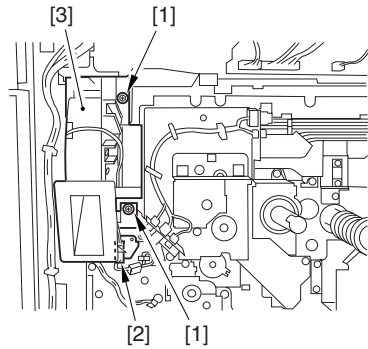

F02-804-40


- 3) Disconnect the connector [1], and remove the 3 screws [2]; then, detach the drum fan [3].

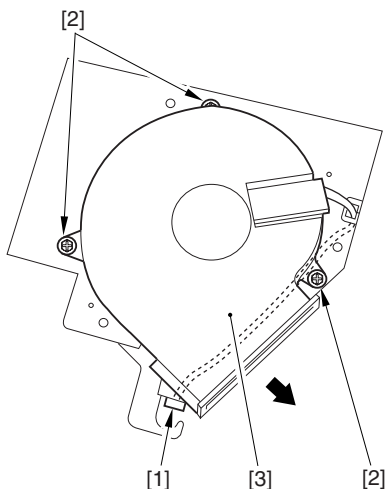

F02-804-41

h. Removing the Inverter Cooling Fan (FM9)

- 1) Remove the rear cover. (See 8.4.1.e.)
- 2) Remove the rear upper cover. (2 screws)
- 3) Remove the screw [1], and detach the inverter cooling fan duct [2].

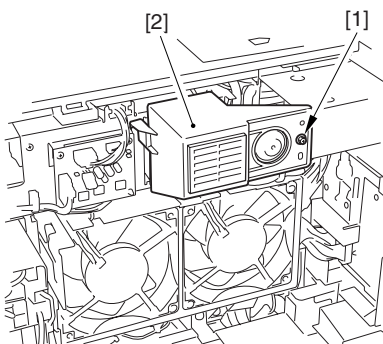


F02-804-42

- 4) Remove the 2 screws [1], and slide out the inverter fan [2].




When mounting the fan, be sure that the direction of air current is as indicated by the arrow.

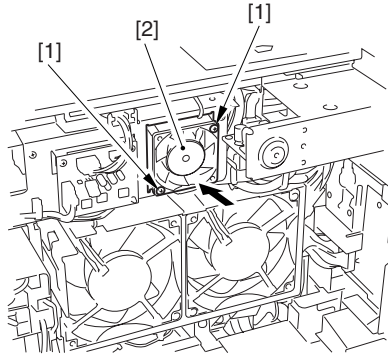

F02-804-43


- 5) Disconnect the connector [1], and detach the inverter cooling fan [2].

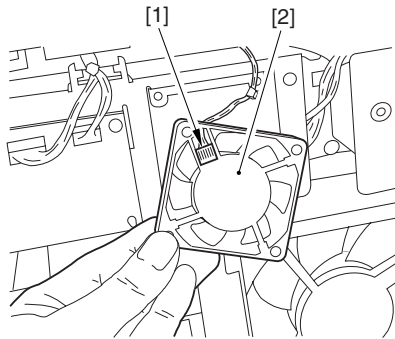

F02-804-44

i. Removing the Pre-Transfer Charging Assembly Fan (FM10)

- 1) Remove the process unit cover. (4 screws)
- 2) Remove the 2 screws [1], and disconnect the 2 connectors [2]; then, detach the fan motor [3].

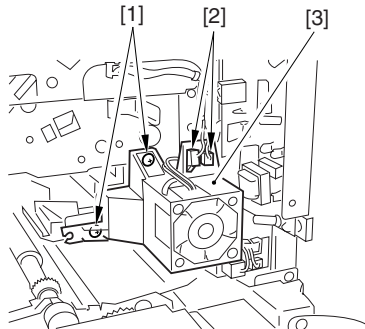


F02-804-45

- 3) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the pre-transfer charging assembly fan [3].




When mounting the fan, be sure that the direction of air current is as indicated by the arrow.

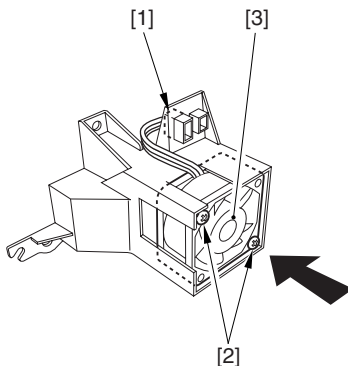

F02-804-46

j. Removing the Power Supply Cooling Fan 1 (FM11)

- 1) Remove the left lower cover. (4 screw)
- 2) Remove the power supply unit. (See 8.4.7.a.)
- 3) Remove the 3 screws [1], and detach the fan mounting base [2].

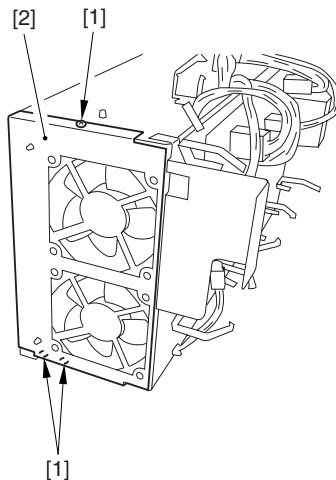


F02-804-47

- 4) Remove the 2 screws [1], and disconnect the connector [2]; then, detach the power supply cooling fan [3].



When mounting the fan, be sure that the direction of air current is as indicated by the arrow.

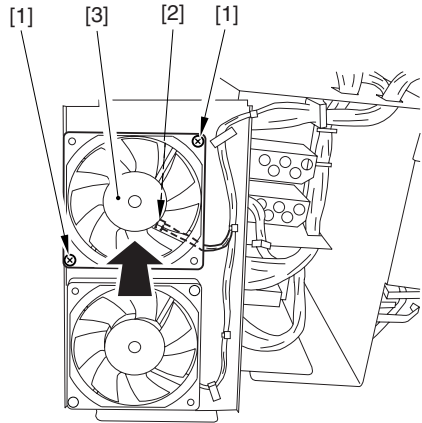


F02-804-48

k. Removing the Power Supply Cooling Fan 2 (FM12)

- 1) Remove the fan mounting base.
(8.4.3.j.)
- 2) Remove the 2 screws [1], and disconnect the connector [2]; then, detach the power supply cooling fan 2 [3].




When mounting the fan, be sure that the direction of air current is as indicated by the arrow.

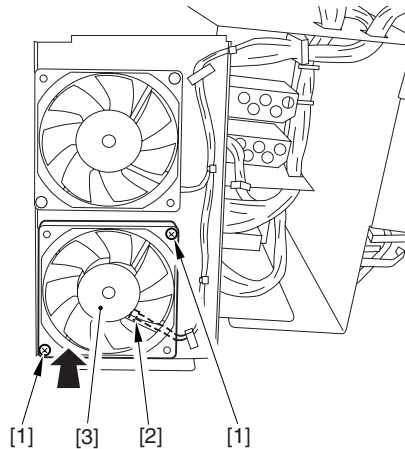

F02-804-49


I. Removing the Separation Fan (FM13)

- 1) Slide out the fixing/feeder unit.
- 2) Remove the 4 screws [1], and detach the fixing/feeding lower cover (1) [2] and the fixing/feeding lower cover (2) [3].

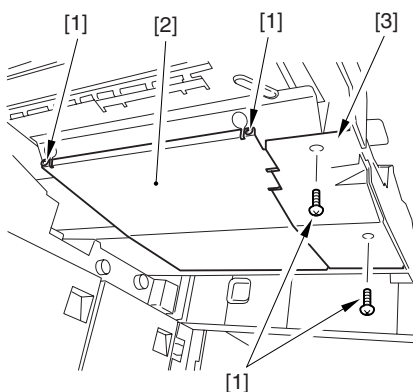

F02-804-50


- 3) Disconnect the connector [1], and remove the heater 3 screws [2]; then, detach the separation fan [3].

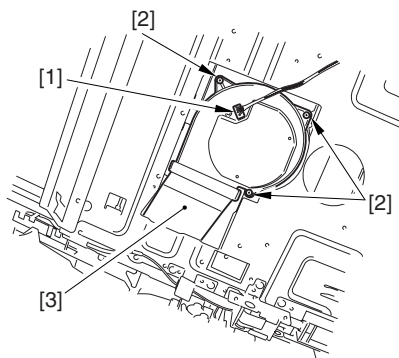

F02-804-51

m. Removing the Developing Fan (FM15)

- 1) Remove the primary charging assembly.
- 2) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the fan unit [3].

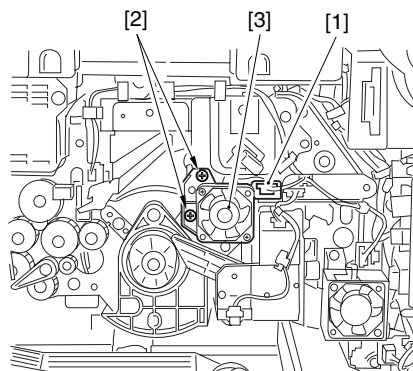


F02-804-52

- 3) Remove the 2 screws [1], and detach the developing assembly fan [2].




When mounting the fan, be sure that the direction of air current is as indicated by the arrow.

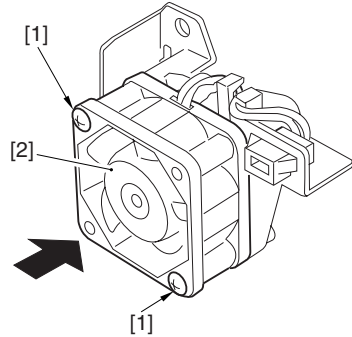

F02-804-53

n. Removing the System Fan (FM16)

- 1) Remove the rear cover. (See 8.4.1.e.)
- 2) Disconnect the connector [1].
- 3) Remove the 2 screws [2], and detach the system connector cover [3].

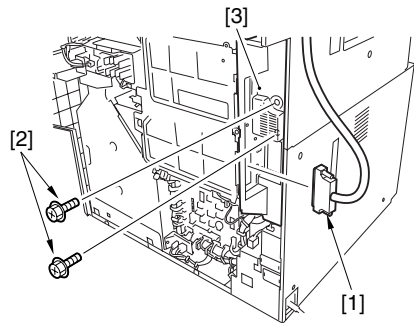


F02-804-54

- 4) Remove the main controller box cover.
- 5) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the system fan [3].




When mounting the fan, be sure that the direction of air current is as indicated by the arrow.

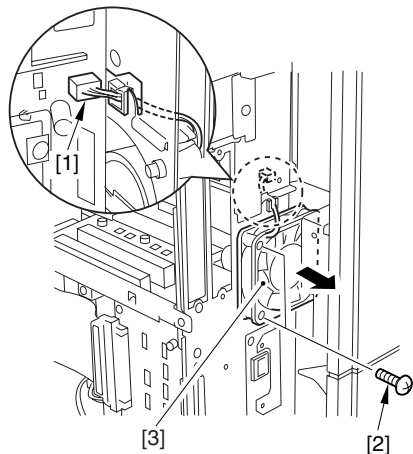

F02-804-55


p. Removing the Delivery Anti-Adhesion Fan (FM17)

- 1) Remove the left lower cover. (4 screws)
- 2) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the fan unit [3].

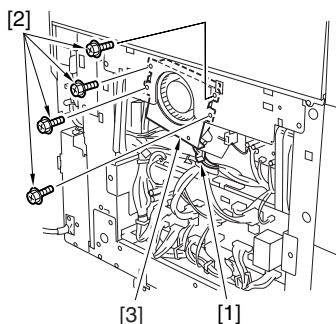

F02-804-56


- 3) Remove the 2 screws [1], and detach the fan [2].

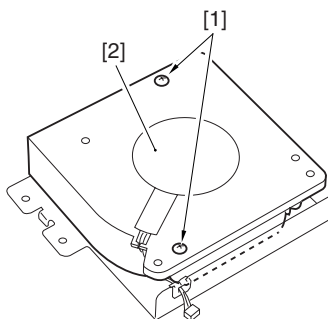

F02-804-57

q. Removing the Scanner Motor Cooling Fan (FM18)

- 1) Remove the rear cover. (See 8.4.1.e.)
- 2) Disconnect the connector [1] on the machine side.
- 3) Remove the 2 screws [2], and detach the scanner motor cooling fan unit [3].

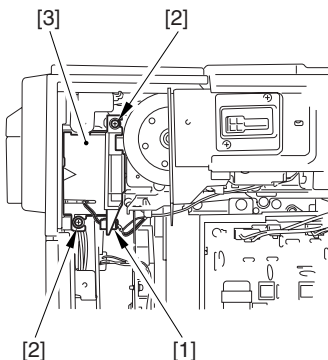


F02-804-58

- 4) Disconnect the connector [1], and remove the 2 screws [2]; then, detach the scanner motor cooling fan [3].




When mounting the fan, be sure that the direction of air is as indicated by the arrow.

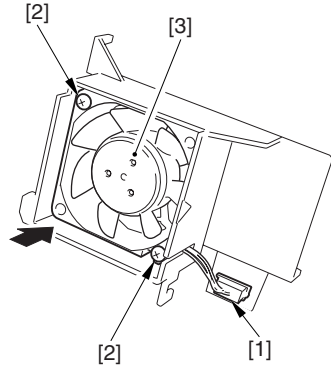

F02-804-59

r. Removing the Duplex Feed Fan (FM19)

- 1) Remove the duplex unit cover. (4 screws, 3 knobs)
- 2) Disconnect the connector [1], and remove the 3 screws [2]; then, detach the duplex feed fan unit [3].
At this time, keep in mind that the shift assembly [4] will also come off.

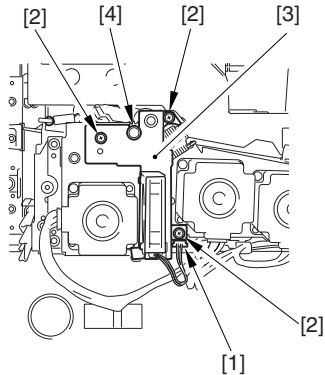


F02-804-60

- 3) Remove the 2 screws [1], and detach the duplex feed fan [2].




When mounting the fan, be sure that the direction of air current is as indicated by the arrow.

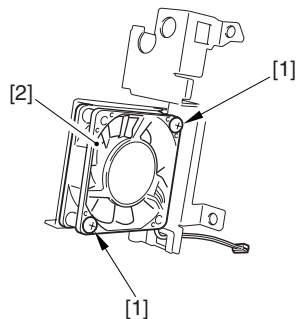

F02-804-61

s. Removing the Separation Heat Discharge Fan (FM20)

- 1) Remove the rear cover. (See 8.4.1.e.)
- 2) Disconnect the connector, and remove the 2 screws [2]; then, detach the separation heat discharge fan [3].

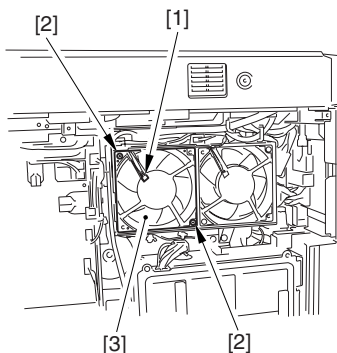


F02-804-62

8.4.4 Drive Assembly

a. Removing the Drive Assembly

- 1) Remove the HV-DC PCB. (See 8.4.7.c.)
- 2) Remove the 2 screws [1], and detach the flywheel [2].

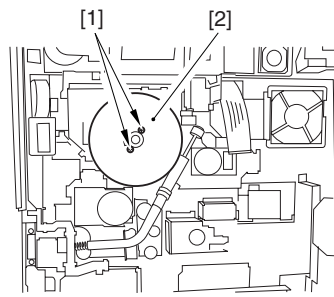


F02-804-63

- 3) Loosen the 2 screws [1] (w/ hex hole), and remove the binding screw [2] (w/ spring); then, detach the gear [3] of the drum shaft.




When removing the screw from the drum shaft gear, be sure to pay attention to the direction of gear rotation, i.e., turn it counterclockwise.

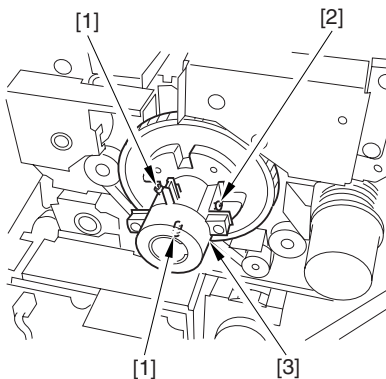


F02-804-64

- 4) Remove the water toner case; then, remove the 5 screws [1], and disconnect the 4 connectors [2] to detach the waste toner case base [3].

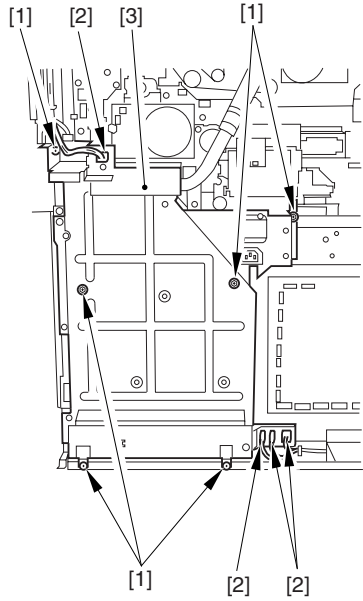


F02-804-65

- 5) Remove the E-ring [2] at the tip of the waste toner pipe [1], and shift the bushing [3] up to remove the 2 screws [4]; then, detach the waste toner pipe [1].

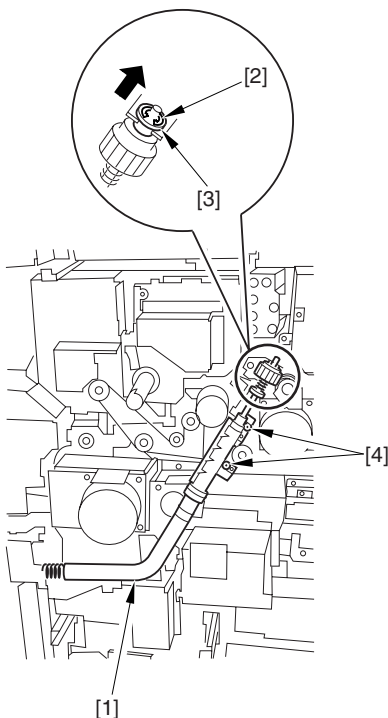


F02-804-66

- 6) Remove the screw [1], and detach the drum cleaner pipe cover [2].

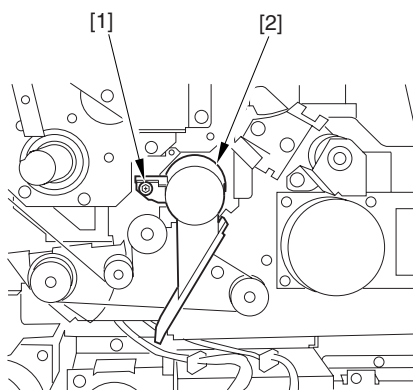

F02-804-67


- 7) Disconnect the 4 connectors [1], and remove the 5 screws [2]; then, detach the drum drive assembly [3].

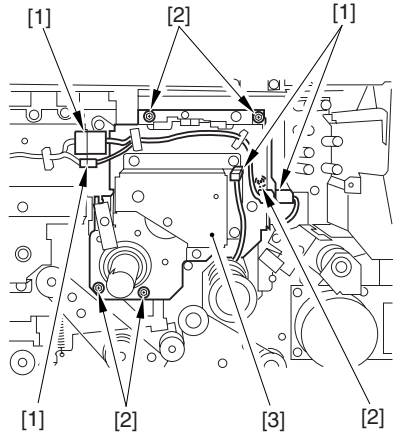

F02-804-68

b. Removing the Cassette Pickup Drive Assembly

- 1) Remove the waste toner case base.
- 2) Remove the cassette pickup assembly (upper, lower).
- 3) Remove the 5 screws [1], and detach the cassette pickup drive assembly [2].

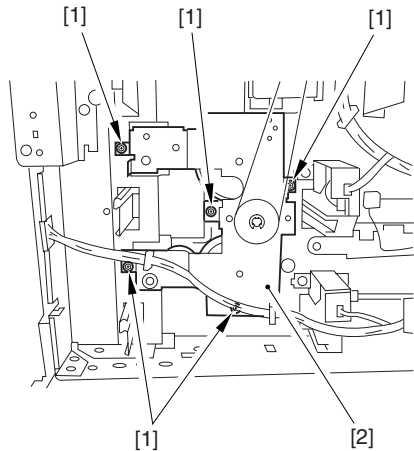


F02-804-69

8.4.5 Switches


a. Removing the Front Cover Switch Assembly

- 1) Remove the upper front cover unit. (See 8.4.1.g.)
- 2) Remove the 3 screws [1], and detach the cover switch assembly [2].

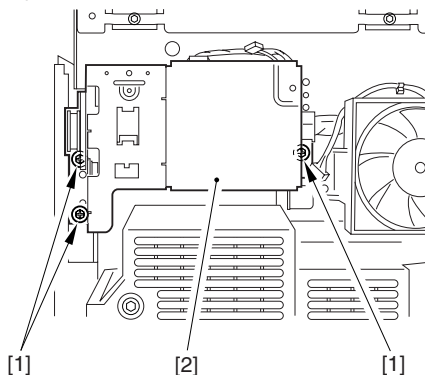

F02-804-70


- 3) Disconnect the 3 connectors [1], and detach the cover switch assembly [2].

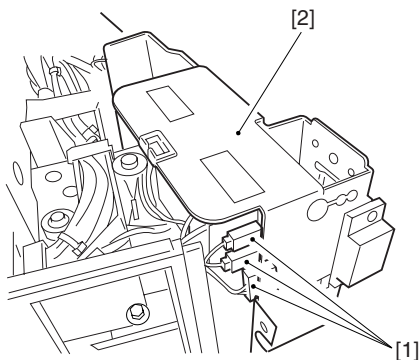

F02-804-71


b. Removing the Manual Feed Tray Switch Assembly

- 1) Remove the process unit cover. (4 screws)
- 2) Remove the 2 screws [1], and disconnect the 2 connectors [2]; then, detach the pre-transfer charging assembly fan [3].

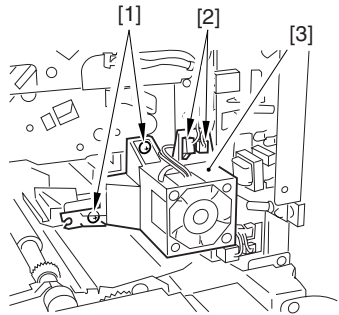


F02-804-72

- 3) Disconnect the 3 connectors [1], and remove the screw [2]; then, detach the potential sensor PCB [3].

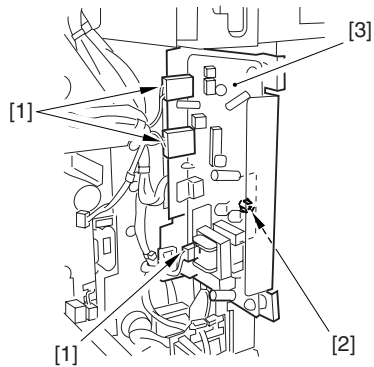

F02-804-73


- 4) Remove the screw [1], and disconnect the 2 connectors [2]; then, detach the manual feed tray switch assembly [3].

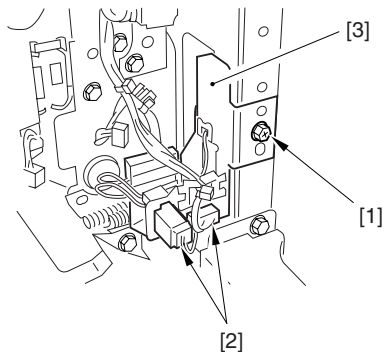

F02-804-74

c. Removing the Drum Heater Switch Assembly

- 1) Remove the rear cover. (See 8.4.1.e.)
- 2) Remove the left lower cover. (4 screws)
- 3) Remove the 3 screws [1], and disconnect the 7 connectors [2]; then, detached power cord base [3]. thereafter, free the fixing claw to detach the drum heat switch [4].

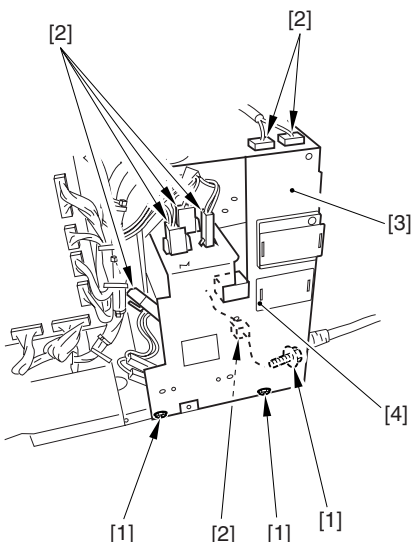

F02-804-75


8.4.6 PCBs

For the following, see their appropriate sections:

- transformer PCB
(2 “Original Exposure System”)
- reader controller PCB
(2 “Original Exposure System”)
- hard disk
(3 “Image Processing System”)
- control panel controller (CPU) PCB
(8.4.2 “Control Panel”)
- control panel inverter PCB
(8.4.2 “Control Panel”)
- control panel PCB
(8.4.2 “Control Panel”)

a. Removing the DC Controller PCB


- 1) Remove the rear cover. (See 8.4.1.e.)
- 2) Disconnect all connectors of the PCB, and remove the 4 screws [1]; then, detach the DC controller PCB [2].

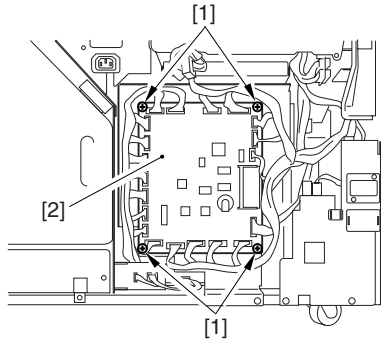

F02-804-76

b. When Replacing the DC Controller PCB

- 1) If possible, print out the user mode/service mode data.
- 2) Replace the DC controller PCB.
- 3) Execute the following in service mode to clear the RAM:
COPIER>FUNCTION>CLEAR>DC-CON.
- 4) Assemble the machine; then, connect the power plug to the power outlet, and turn on the main power switch.
- 5) Enter the following indicated on the service label:
COPIER>ADJUST>LASER (all items)
COPIER>ADJUST>DEVELOP (all items)
COPIER>ADJUST>DENS (all items)
COPIER>ADJUST>BLANK (all items)
COPIER>ADJUST>V-CONT (all items)
COPIER>ADJUST>HV-PRI (all items)
COPIER>ADJUST>HV-TR (all items)
COPIER>ADJUST>HV-SP (all items)
COPIER>ADJUST>FEED-ADJ (all items)
COPIER>ADJUST>CST-ADJ (all items)
COPIER>ADJUST>EXP-LED (all items)
- 6) Execute the following in service mode: COPIER>FUNCTION>MISC-P>CL-ADJ (all items)
COPIER>FUNCTION>SEEN>ADJ (all items)
- 7) Enter the values (4 types) indicated on the label attached to the new DC controller PCB in service mode.

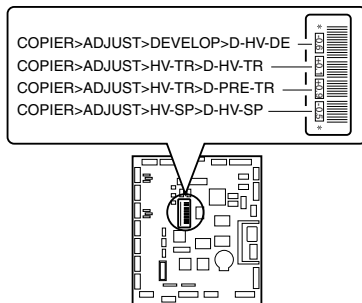


F02-804-77

- 8) Turn off and then on the main power switch.


c. Removing the Differential PCB

- 1) Remove the rear cover. (See 8.4.1.e.)
- 2) Disconnect the reader controller communications cable [1].

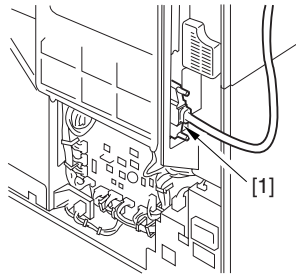


F02-804-78

- 3) Remove the 2 screws [1], and detach the left stop fixing [2]; then, detach the main controller box cover [3].

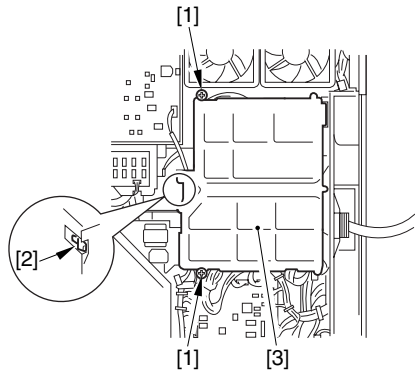


F02-804-79

- 4) Disconnect the main controller communications cable [1] and the connector [2].

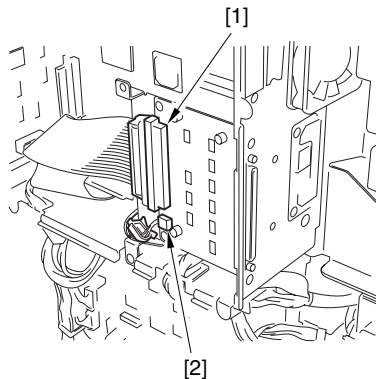

F02-804-80


- 5) Remove the 4 screws [1], and detach the differential PCB [2] together with the mounting base.

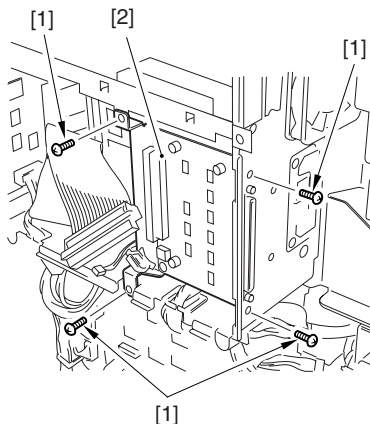

F02-804-81


d. Removing the Pixel/Line Conversion PCB

- 1) Remove the rear cover. (See 8.4.1.)
- 2) Remove the main control box cover.
- 3) Remove the 3 screws [1], and detach the PCB base [2].

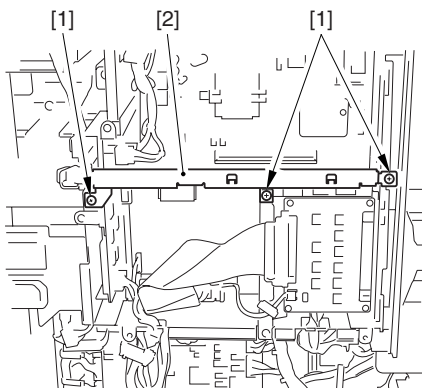


F02-804-82

- 4) Remove the 2 screws [1], and disconnect the 2 connectors [2]; then, detach the pixel/line conversion PCB [3] together with the mounting base.

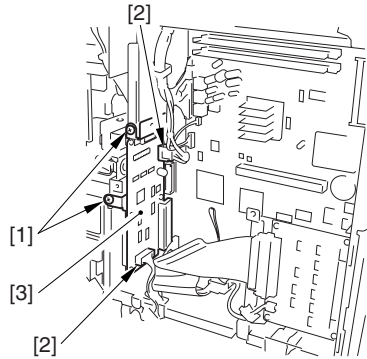

F02-804-83


- 5) Remove the 6 screws [1], and detach the pixel/line conversion PCB [2] from the mounting base.

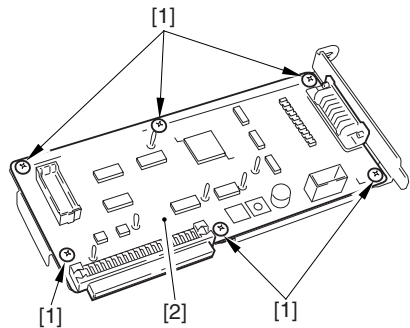

F02-804-84


e. Removing the Main Controller PCB

- 1) Remove the system connector cover.
- 2) Remove the differential PCB (8.4.6.c).
- 3) Remove the pixel/line conversion PCB (8.4.6).
- 4) Disconnect all connectors from the main controller PCB [1].
- 5) Disconnect the connector [2].

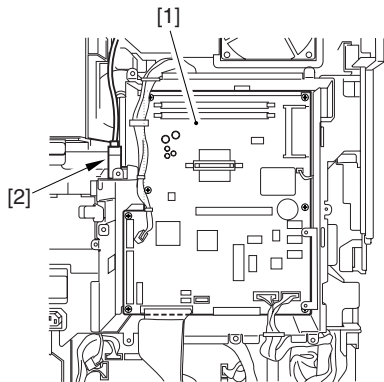


F02-804-85

- 6) Remove the 4 screws [1], and open the main controller box [2].

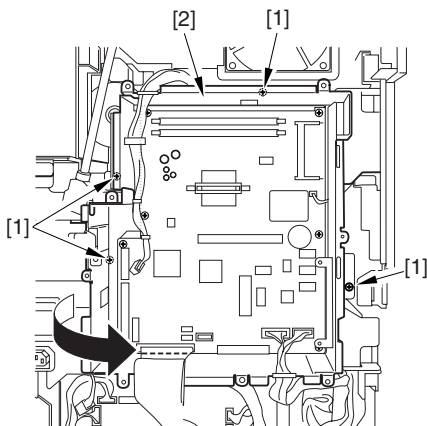


F02-804-86

- 7) Remove the 3 screws [1], and detach the lower cover [2] for the main controller box.

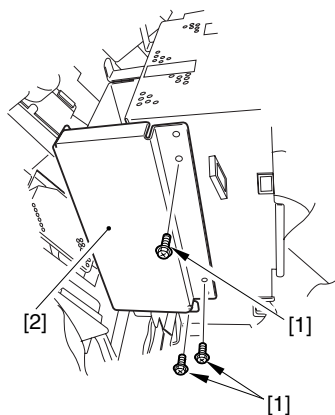

F02-804-87


- 8) Disconnect the cable [1] from the hard disk; then, remove the 8 screws [2], and detach the main controller PCB [3].

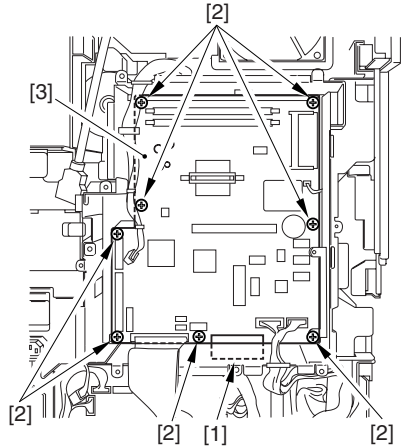

F02-804-88

f. When Replacing the Main Controller PCB

- 1) Replace the main controller PCB.
- 2) Detach the following from the existing PCB, and mount them to the new PCB:
 - SD-RAM [1]
 - BOOT-ROM [2]
 - counter memory PCB [3]

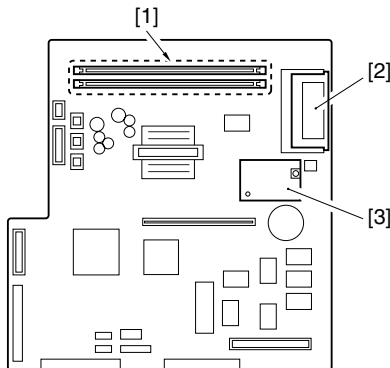


F02-804-89

- 3) Assemble the machine; then, connect the power plug to the power outlet, and turn on the main power switch.

g. Removing the AC Driver PCB


- 1) Detach delivery anti-adhesion fan mounting base. (See 8.4.6.i.)
- 2) Remove the mounting screw [2] of the grounding wire [1].
- 3) Disconnect the 8 connectors [3], and remove the 3 screws [4]; then, detach the AC driver PCB [5].

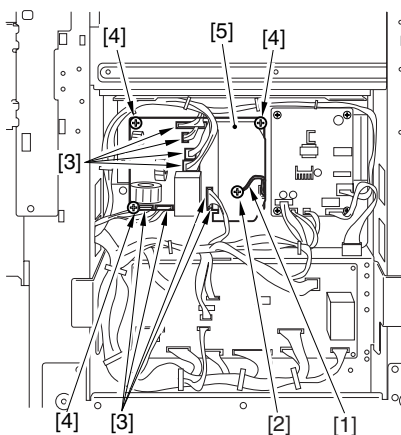

F02-804-90

h. Removing the HV-AC PCB


- 1) Remove the rear cover. (See 8.4.1.e.)
- 2) Disconnect the 2 connectors [1], and remove the 4 screws [2]; then, detach the HV-AC PCB [3].

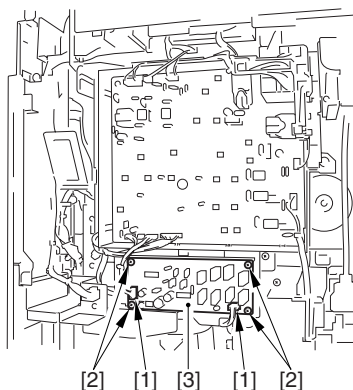

F02-804-91


i. Removing the All Night Power Supply PCB

- 1) Remove the left lower cover (4 screws), and remove the left upper cover (9 screws).
- 2) Disconnect the connector [1], and remove the 6 screws [2]; then, detach the delivery anti-adhesion fan mounting case [3].

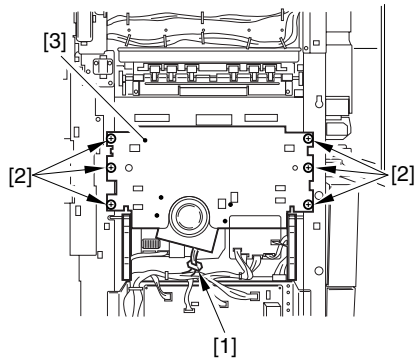

F02-804-92


- 3) Disconnect the 5 connectors [1], and remove the 4 screws [2]; then, detach the all-night power supply PCB [3].

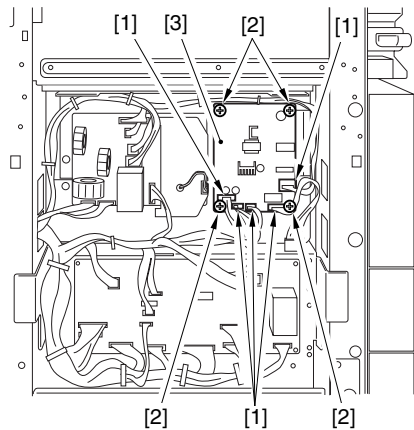

F02-804-93


j. Removing the Bi-centronics PCB

- 1) Remove the rear cover. (See 8.4.1.e.)
- 2) Remove the rear upper cover (2 screws), left lower cover (2 screw), left upper cover (9 screws), and upper left cover (3 screws).
- 3) Disconnect the 3 connectors [1].

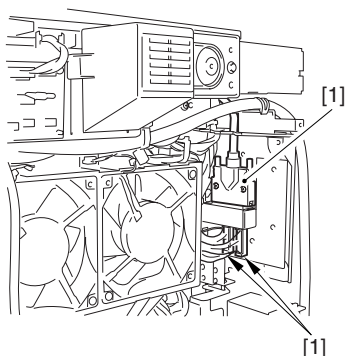


F02-804-94

- 4) Remove the screw [1], and detach the harness fixing plate [2].

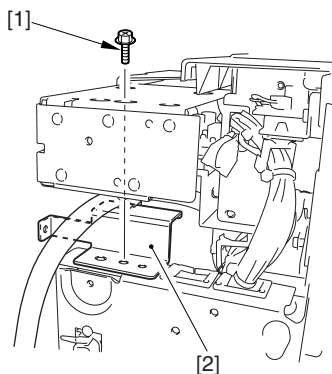


F02-804-95

- 5) Remove the 2 screws [1], and detach the positioning pin [2].
- 6) Remove the 5 screws [3], and detach the Bi-centronics PCB unit [4].

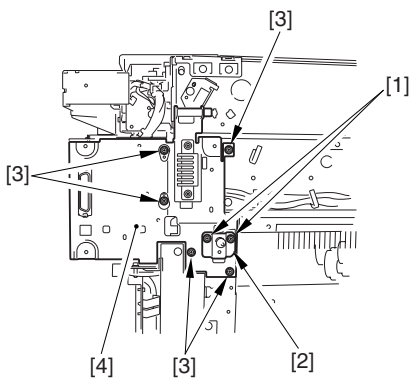


F02-804-96

- 7) Remove the 6 screws [1] and the 2 locking supports [2], and detach the Bi-centronics PCB [3] together with the connector cover.

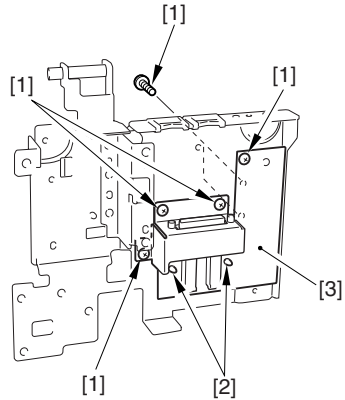

F02-804-97


- 8) Remove the 2 connector fixing screws [1], and detach the connector cover [3] from the Bi-centronics PCB [2].

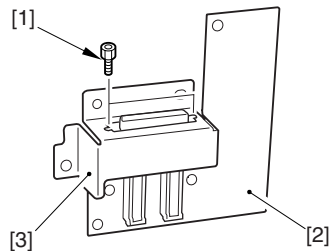

F02-804-98

k. Removing the Relay PCB

- 1) Remove the left lower cover. (4 screws)
- 2) Disconnect the connector from the PCB; then, remove the screw [1], and detach the relay PCB [1] from the four PCB holders [2].

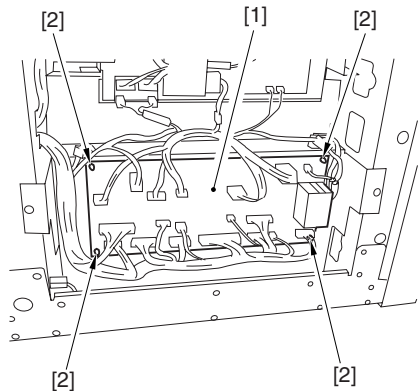


F02-804-99

8.4.7 Others


a. Removing the Power Supply Unit

- 1) Remove the left lower cover. (4 screws)
- 2) Disconnect the 2 connectors [1], and disconnect the connector from the relay PCB [2].

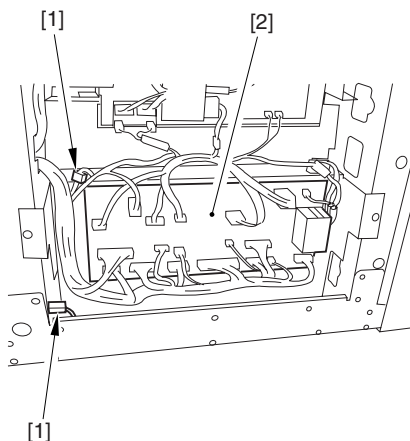

F02-804-100


- 3) Remove the 2 screws [1], and detach the cover plate [2]; them, remove the 2 screws [3], and detach the power supply unit [4].

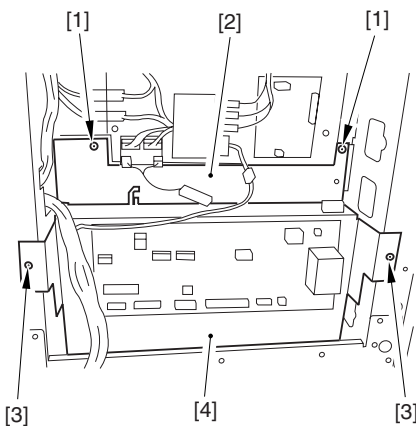

F02-804-101


b. Removing the High-Voltage Transformer Assembly (AC)

- 1) Remove the rear cover. (See 8.4.1.e.)
- 2) Disconnect the 2 connectors [1], and remove the 2 screws [2]; then, detach the HV-AC PCB [3] together with the mounting base.

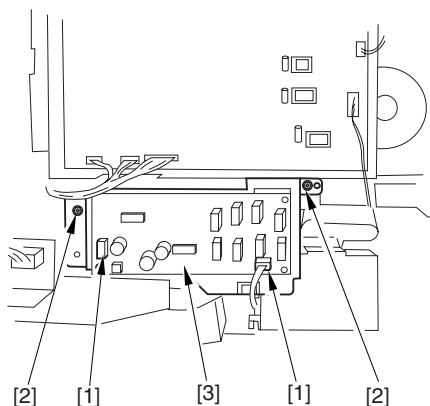

F02-804-102


- 3) Disconnect the 3 connectors [1], and remove the screw [2]; then, detach the high-voltage transformer assembly (AC) [3].

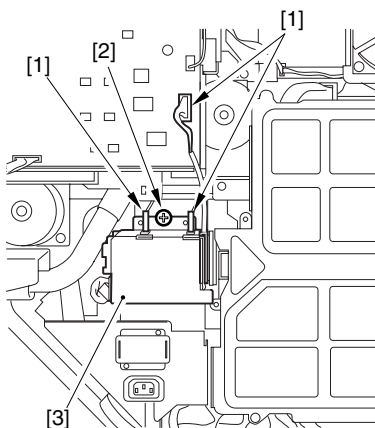

F02-804-103

c. Removing the HV-DC PCB


- 1) Remove the rear cover. (See 8.4.1.e.)
- 2) Disconnect the 5 connectors [1], and remove the 3 screws [2]; then, slide the HV-DC PCB [3] along the left and right rails [4] to detach to the front.
- 3) Detach the HV-DC PCB [3] from the cut-offs of the rails.

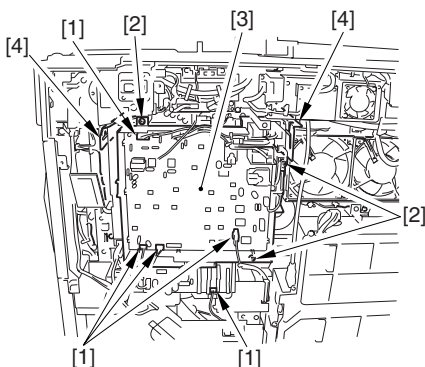

F02-804-104

d. When Replacing the HV-DC PCB

- 1) Replace the HV-DC PCB.
- 2) Check to make sure that the slide switch (SW101) on the PCB is on the UP side.
- 3) Assemble the machine; then, connect the power plug to the power outlet, and turn on the main power switch.
- 4) Enter the values (4 types) indicated on the label attached to the new HV-DC PCB in service mode.

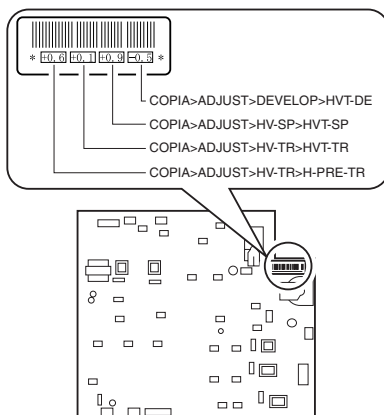

F02-804-105

- 5) Turn off and then on the main power switch.


9 Side Paper Deck-N1

9.1 Outline of the Side Paper Deck


The side paper deck is capable of accommodating as many as 3500 sheets of paper (A4/LTR/B5; 80 g/m² paper), and operates to pick up paper in response to the control signals from the machine's DC controller PCB.

F02-901-01 shows the basic construction of the side paper deck, and F02-901-02 shows the basic sequence of operation while F02-901-03 shows the drive control mechanism.


It differs from the Side Paper Deck-M1 used in the GP605 (iR600) in relation to the rotation speed of motors to support higher speed of operation. In addition, the machine uses optical sensors (instead of the GP605 (iR600)'s photointerrupters) for its pickup/feeding assembly, and uses a more durable material for its pickup/separation roller as extra considerations for higher speed of operation.

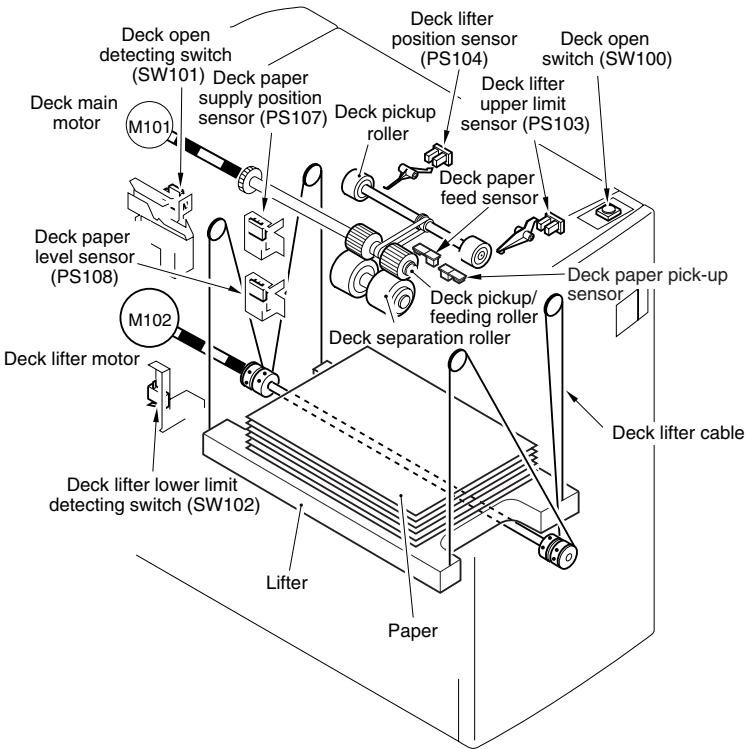

F02-901-01

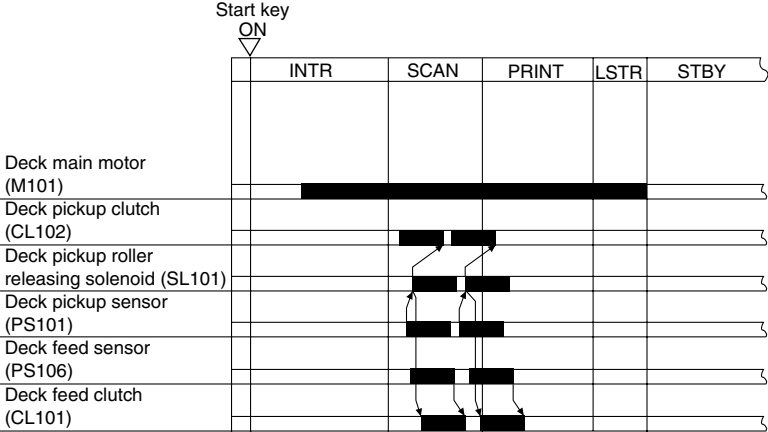

F02-901-02

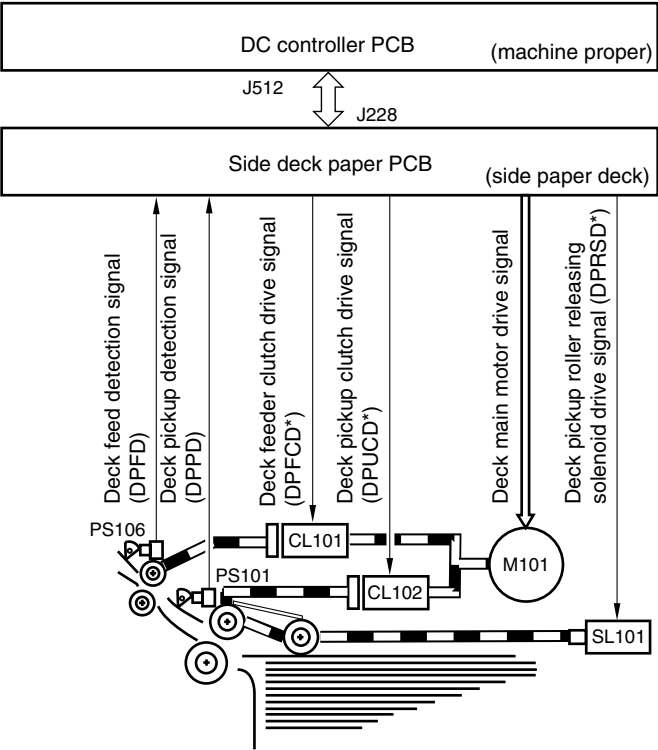

F02-901-03

9.2 Changes made to the Side Paper Deck

| Unit/location | Changes from GP605 (IR600) | Purpose of change | Remarks | Reference |
|------------------------|------------------------------|---------------------------------------|---|-----------|
| Deck main motor | Increased feeding speed. | To support higher speed of operation. | | |
| Deck feeding roller | Changed the material. | To support higher speed of operation. | | |
| Deck separation roller | Changed the material. | To support higher speed operation. | | |
| Deck feed sensor | Made to use optical sensors. | Support higher speed of operation. | In the GP605 (IR600), photointerrupters. | |
| Deck pick-up sensor | Made to use optical sensors. | To support higher speed of operation. | In the GP605 (IR600), photointerrupters. | |


T02-902-01

9.3 Optical Sensors

For discussions on optical sensors, see “Pickup/Feeding System.”


9.4 Disassembly/Assembly

The mechanical characteristics of the machine are as described herein; disassemble/assemble the machine as instructed and with the following in mind:

1.  Before starting any disassembly/assembly work, turn off the main power switch, and disconnect the power plug.
2. Unless otherwise specifically instructed, assemble the machine by reversing the steps used to disassemble it.
3. Identify the screws by type (length, diameter) and location.
4. To protect against static charges, some mounting screws are equipped with toothed washers. Be sure not to leave them behind.
5. As a rule, do not operate the machine with any of its parts removed.
6. If the deck is equipped with an anti-moisture heater, be sure to disconnect the power plug of the heater for safety.

9.4.1 Removing the Deck Pickup Sensor Unit

- 1) Remove the deck upper cover.
- 2) Remove the screw [1], and detach the deck pickup sensor unit [2].

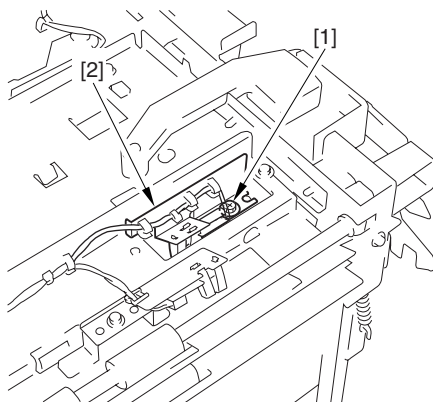


F02-904-01

- 3) Disconnect the connector [1], and free the claw to detach the deck pickup sensor [2].




When removing the scanner sensor, be sure to remove the paint used to lock the claw in place in advance to prevent breaking the claw. When mounting it, be sure the claw is not displaced or the sensor is not disoriented.

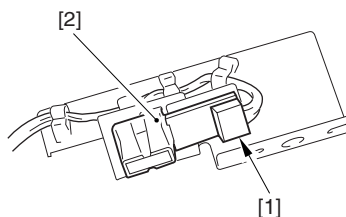

F02-904-02

9.4.2 Removing the Deck Feed Sensor Unit

- 1) Remove the deck upper cover.
- 2) Remove the screw [1], and detach the deck feed sensor unit [2].

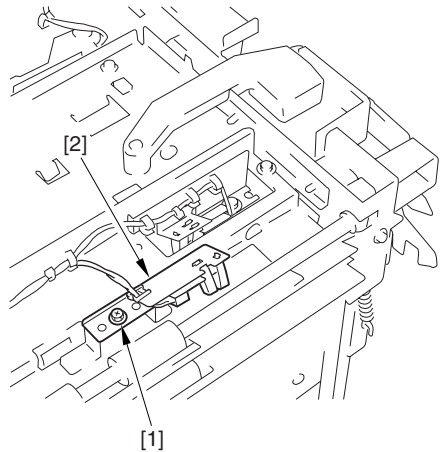


F02-904-03

- 3) Disconnect the connector [1], and free the claw to remove the deck feed sensor [2].



When removing the scanner sensor, be sure to remove the paint used to lock the claw in place in advance to prevent breaking the claw. When mounting it, be sure the claw is not displaced or the sensor is not disoriented.

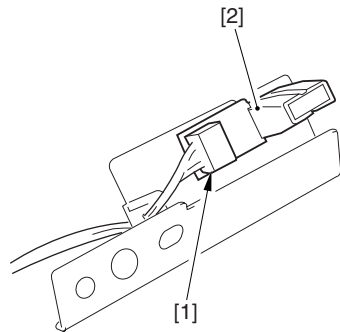

F02-904-04


CHAPTER 3

MAIN CONTROLLER

1 Basic Operation

1.1 Functional Construction

The machine may be broadly divided into the following functional blocks (controller area in the shaded block):

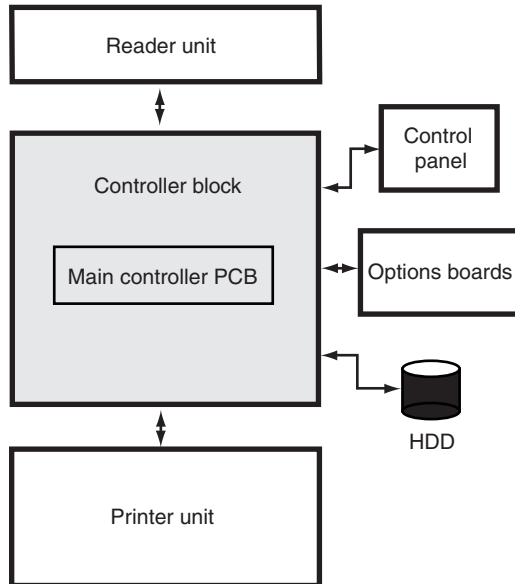

F03-101-01

1.2 Outline of the Electrical Circuitry

1.2.1 Outline

The major electrical mechanisms of the controller block are controlled by the CPU on the main controller PCB; the following table shows the functions of the IC and hard disk located around the CPU (e.g., RAM, DIMM) and of the CPU itself:

1.2.2 Main Controller PCB


| Name | Description |
|----------|--|
| CPU | <ul style="list-style-type: none">• Controlling image processing of input image data from the reader unit• Controlling image processing of output image data to the printer unit• Controlling the hard disk drive• Controlling the following: network interface, DMA controller, PCI interface, ROM/RAM interface |
| RAM | <ul style="list-style-type: none">• Storing temporarily program data and image data |
| DIMM-ROM | <ul style="list-style-type: none">• Storing the system control program• Storing the boot program |

T03-102-01 List of Functions

1.2.3 Hard Disk Drive

| Name | Description |
|------|---|
| HDD | <ul style="list-style-type: none">• Storing system software• Storing image data for the box function |

T03-102-02

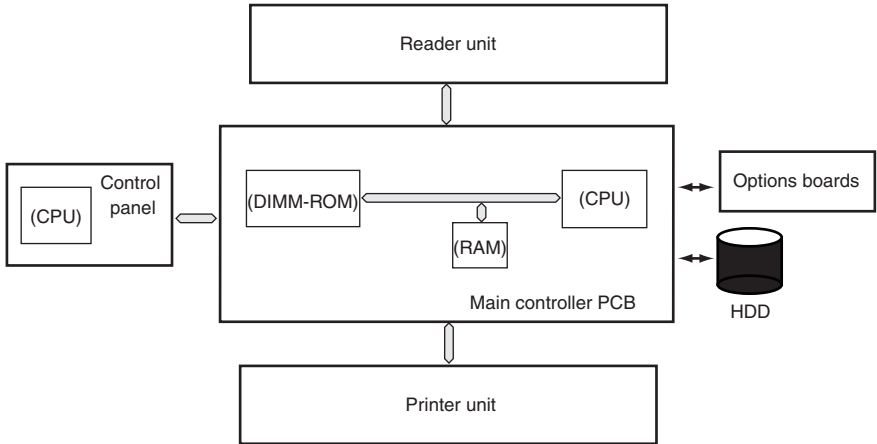

F03-102-01 Arrangement of Major PCBs


1.3 Start-Up Sequence

1.3.1 Outline

The system software used to control the machine is stored on the HDD. The CPU on the main controller PCB reads the system software from the HDD to write to the SDRAM mounted on the DIMM socket of the main controller PCB, requiring time before the control panel becomes ready for operation after the main power switch is turned on.

While the CPU reads the system software from the HDD to the SDRAM, the following screen remains in the control panel, with the progress bar on the screen indicating the changing stages of the start-up sequence:

Start-Up Screen

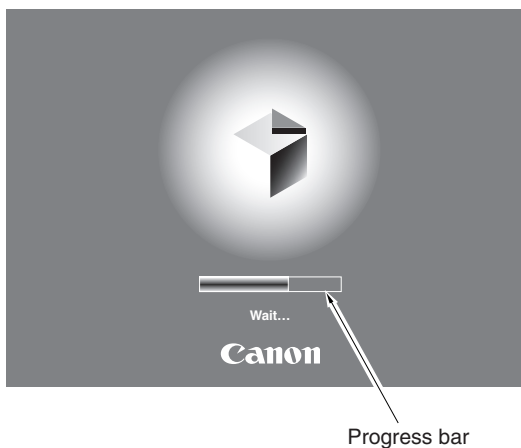


F03-103-01

1.3.2 Start-Up Sequence

When the main power switch is turned on, the CPU on the main controller PCB first executes the self-diagnosis program stored in the boot ROM.

The self-diagnosis program checks the condition of the SDRAM and the HDD; if a fault is found, it will indicate an error code in the control panel.

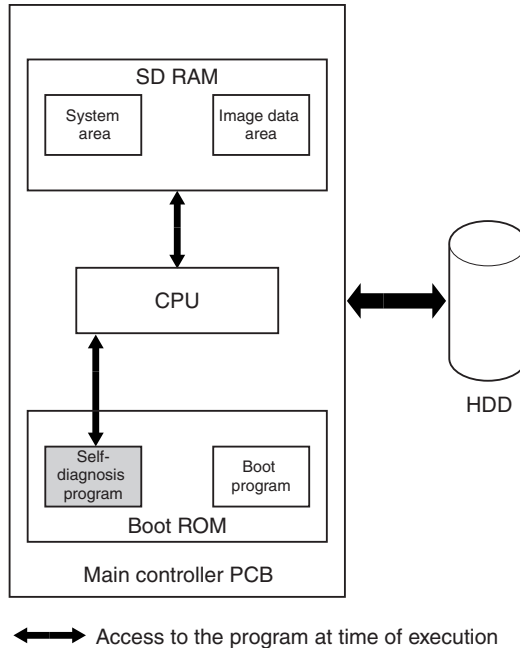

F03-103-02



E601-0000, -0001

Indicates an error in image transfer data.


E602-0001, -0002

Indicates a write/read error.

When the self-diagnosis ends normally, the boot program stored in the boot ROM starts up to read the system software from the HDD to write to the system area of the SDRAM.

When the write operation ends, the system software in the SDRAM starts up to initialize the components of the machine (at the end of which the normal operating screen will appear in the control panel) and, at the same time, the LED lamp of the Start key will change from red to green to indicate that the machine is ready to accept a job.

The system software of the machine consists of multiple modules, and specific modules as needed at specific times are called into the system area of the SDRAM for execution.

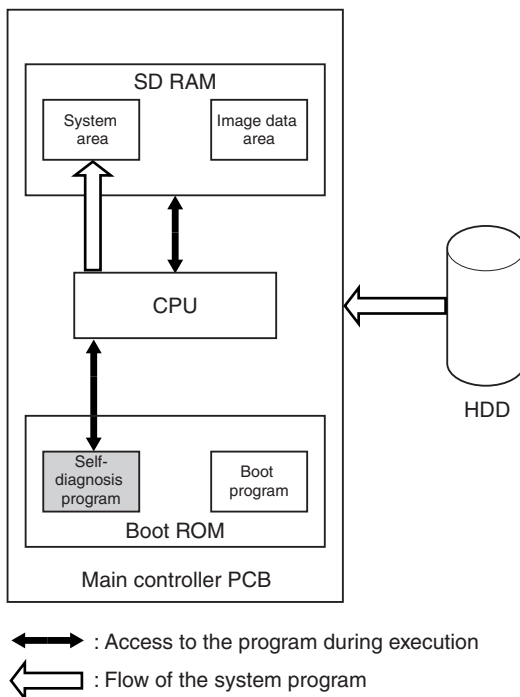

F03-103-03


1.3.3 Construction of the System Software

The system software of the machine can broadly be divided into system modules (for control) and language modules (for indication on the control panel LCD).

To upgrade the machine, you will have to upgrade both the system modules and the language modules.

1.4 Inputs/Outputs the Major PCBs

1.4.1 Connection Diagram of the Major PCBs

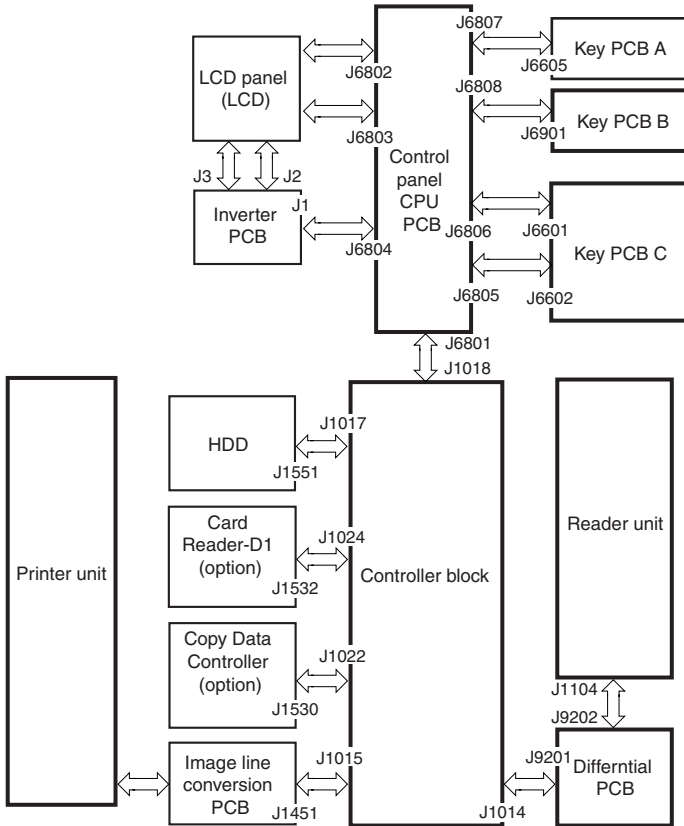


The symbol \longleftrightarrow in the diagram indicates the connection between major PCBs, not the direction of signals.

F03-104-01 Connection Diagram of the Major PCBs

2 Digital Image Processing

2.1 Outline

The digital processing and controlling of image memory of the machine are performed by the main controller PCB. The following is a block diagram showing its digital image processing:

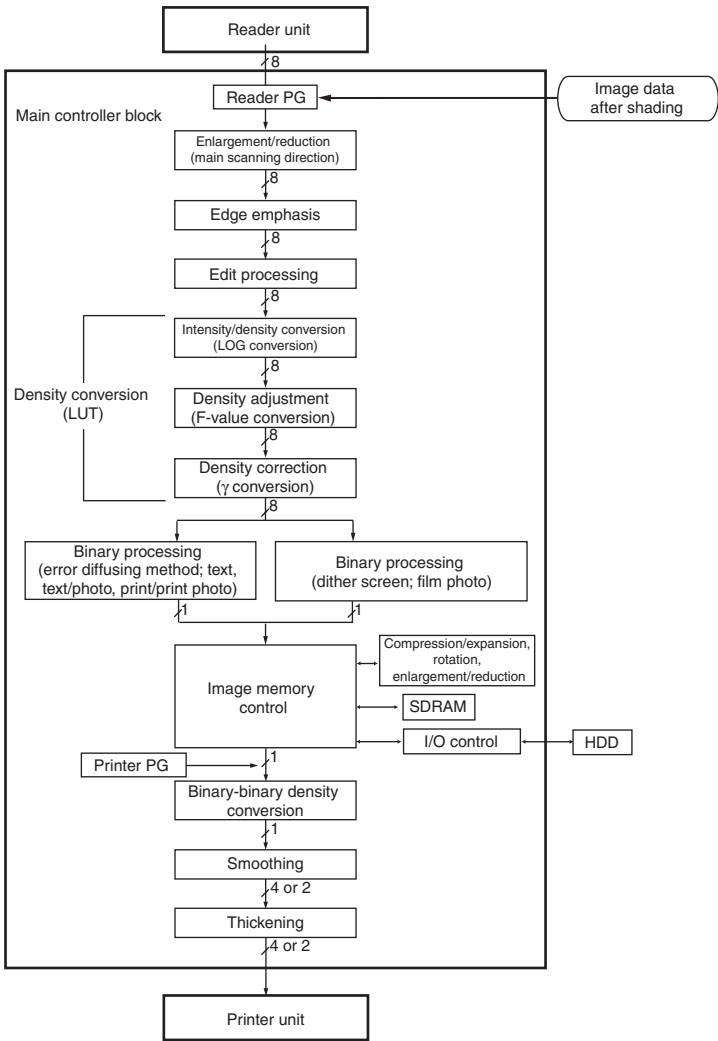

F03-201-01 Block Diagram

2.2 Input Image Processing

Input image data from the reader unit is processed as follows:

2.2.1 Image Data from the Reader Unit

The image signals from the reader unit is subjected to shading correction and turned into 8-bit, 256-gradation intensity signals.

The input is from 2 signal lines: even-bit pixels and odd-bit pixels.

2.2.2 Enlargement/Reduction (main scanning direction)

Image data is processed when it is written into or read from image memory for enlargement or reduction.

2.2.3 Edge Emphasis

Edge emphasis is performed so that the text, text/photo, print photo, or print photo images may be made sharp so as to reduce moiré.

2.2.4 Edit Processing

Edit processing is performed to enable the following: blanking/framing, negative/positive reversal, slant, mirror, fold, repeat.

2.2.5 Density Conversion (LUT)

In this block, intensity signals are converted into density signals; in addition, processing is also performed so that the output density curve best suited to each mode is obtained.

a. LOG Conversion

Using a LOG conversion table, the intensity signals are converted into toner density signals in relation to reflected light.

b. Density Adjustment (F-value conversion)

Using an F-value table selected in relation to the setting of the Density key in the control panel, density adjustment is performed. It, however, will not be performed in memory copy mode.

c. Density Conversion (γ conversion)

Using a γ conversion table, density correction is performed for text, text/photo, print photo, or film photo mode.

2.2.6 Binary Processing (error diffusion method T-BIC)

The error diffusion method (TBIC) is used to control the texture, subjecting data to binary processing so that it becomes most suited for printing. Specifically, the 8-bit image density signals of text, text photo, or print photo mode are converted into 1-bit image density signals (binary).

2.2.7 Binary (dither screen method)

The dither screen method is used to control the texture, subjecting the data to binary processing. Specifically, the 8-bit image density signals in film photo mode are converted into 1-bit image density signals (binary).

Although binary, images are produced in 144 gradations owing to the 12×12 dither screen processing.

2.3 Controlling the Image Memory

The binary image data is controlled in image memory as follows:

2.3.1 Compression/Expansion, Rotation, and Enlargement/Reduction

Binary images are processed for compression/expansion (for electronic sorting), rotation, or resolution conversion.

2.3.2 SDRAM

The image data is temporarily stored as part of image memory control.

2.4 Output Image Processing

The output image data sent to the printer unit is processed as follows:

2.4.1 Smoothing

a. Read Image Output

In the case of text/print photo mode, the 600×600 -dpi input images are subjected to smoothing for conversion into 1200-equivalent $\times 600$ dpi images.

In smoothing, the image data is compared to several hundred templates of 7×7 -pixel matrices for replacing of pixels in question.

Notch processing is also performed in this block, as a pattern unique to read images.

b. Printer (PDL) Image Output

Smoothing most suited to PDL is performed, converting 300×300 -dpi or 600×600 -dpi data into 2400-equivalent $\times 600$ -dpi data.

2.4.2 Thickening (PDL output only)

If selected using a printer driver, thickening is performed to thicken fine lines for better reproduction.

PDL output images are thickened by adding 1/2 pixels (1200 dpi) to the top of a horizontal line or 1/2 pixels (1200 dpi) to the right of a vertical line.

2.4.3 Binary-Binary Conversion (read image output only)

Binary-binary density conversion is used as an auxiliary means to correct density during copying operation.

3 Soft Counters

The machine is equipped with soft counters to keep count of prints it makes. The counter readings are checked by pressing the Check key in the control panel.

The counters are controlled by the main controller PCB, and the readings are incremented when the following sensors detect paper during copying or printing.

| Copying/printing operation | Counter sensor |
|----------------------------|------------------------------------|
| Single-sided | Finisher delivery sensor |
| Double-sided | 1st side: PS14 |
| | 2nd side: finisher delivery sensor |

T03-300-01

The counter mechanism consists of 16 items for large-size and small-size sheet, each with 8 mode items.

| Copying/printing mode | Large-size | Small-size*1 |
|-----------------------|------------|--------------|
| Load copy | A | B |
| PDL print | C | D |
| Box print | E | F |
| Remote copy print | G | H |
| FAX reception print*2 | I | J |
| Report print | K | L |
| Double-sided print | M | N |
| Scan | O | P |

T03-300-02

- *1: At time of shipment from the factory, B4 or smaller; to count B4 as large-size, use service mode.
- *2: Not counted; the machine is not equipped with fax functions.

The counters are set as follows when the machine is shipped from the factory to suit its country of installation:

| Counter | Description*1 | Default | | Default change*2 |
|-----------|----------------------|------------|-----------------|------------------|
| | | 100V model | 208V/230V model | |
| Counter 1 | Total (A through L) | ON | ON | Fixed |
| Counter 2 | Total large (ACEGIK) | OFF | ON | May be changed |
| Counter 3 | Copy 1 (ABGH) | OFF | ON | May be changed |
| Counter 4 | Copy 1 large (AG) | OFF | ON | May be changed |
| Counter 5 | Print 1 total (CDEF) | OFF | OFF | May be changed |
| Counter 6 | FAX total (IJ) | OFF | OFF | May be changed |

T03-300-03

*1: The notation within parenthesis indicates modes supported by the basic counter (see T02-300-02).

*2: To change the contents of a counter or to enable/disable indication, use service mode. (This, however, does not apply to counter 1, whose data cannot be changed.)

4 Controlling the Power Supply

4.1 Outline

The main controller PCB controls the power supply for the following 5 power supply modes except for power-off mode, initiated by turning off the main power switch.

- Standby mode (normal operation)
- Power save mode
- Low power mode
- Sleep mode
- Off mode

4.2 Power Supply Mode

The machine affects its power supplies as follows: +3.3V all night (3.3 VB), +3.3 V non-all night (3.3 VA), +5 V non-all night (5 V), +24 V:

| Mode | +3.3 V all night | +3.3 V non-all night | +5 V | +24 V |
|------------|------------------|----------------------|------|-------|
| Standby | ○ | ○ | ○ | ○ |
| Power save | ○ | ○ | ○ | ○ |
| Low power | ○ | ○ | ○ | ○ |
| Sleep | ○ | × | × | × |
| Off | ○ | × | × | × |
| Power off | × | × | × | × |

T03-402-01

4.3 Standby Mode (normal operation)

In standby mode, the machine is in normal operation or is ready to start normal operation at any moment; in other words, most of power supplied are in operation.

Not only the main controller PCB, but also the reader unit, printer unit, and control panel are all ready for communication and control.

4.4 Power Save Mode

Most of power supplies are in operation (same as in standby mode).

According to the selected rate of saving, the control temperature of the fixing assembly for standby is lowered to reduce power consumption (140°C for 200V model; 198°C for 208V/230V model, for which no specifications are provided).

4.5 Low Power Mode

In low power mode, the fixing assembly temperature is kept low (140°C for 200V model, 198°C for 208V/230V model), and the power consumed by the reader unit and the printer unit is lowered to reduce the total power consumption for the machine.

4.5.1 Shift from Standby Mode (standby → low power)

A shift from standby mode to low power mode is made for the following:

- Standby mode has continued for a specific period of time, i.e., a specific period of time as may be selected in user mode.

4.5.2 Shift to Standby Mode (low power → standby)

A shift from low power mode to standby mode is made on the following condition:

- The control panel power switch (soft switch) is turned on.
- PDL data has been received from the network (parallel port); in terms of electrical mechanisms, the control panel is OFF as in standby mode.

4.6 Sleep Mode

In sleep mode, only the +3.3V all-night (3.3 VB) power supply is ON. In this mode, the CPU on the main controller PCB is also at rest (in wait for an interrupt and not running the program) to reduce power consumption.

This mode is used only when the machine is configured as a printer equipped with a network print option and a PDL print option.

4.6.1 Shift from Standby Mode (standby → sleep)

A shift from standby mode to sleep mode is made on the following condition:

- The control panel power switch (soft switch) is off.
- Standby mode has lasted for a specific period of time, i.e., a specific period of time as may be selected in user mode.

4.6.2 Shift from Low-Power Mode (low power → sleep)

A shift from low power mode to sleep mode is made on the following condition:

- The control panel power switch (soft switch) is off.
- Low power mode has lasted for a specific period of time, i.e., a specific period of time as selected in user mode.

4.6.3 Return to Standby Mode (sleep → standby)

A shift from sleep mode to standby mode is made on the following condition:

- The control panel power switch (soft switch) is on.
- PDL data has been received from the network (parallel port); in electrical terms, the control panel is off as in standby mode.

4.7 OFF Mode

In OFF mode, the +3.3V all-night power supply of the CPU itself is off, leaving a minimum logic circuitry of the main controller PCB on.

This mode is used when the machine is configured as a copier without a network print option or a PDL print option.

4.7.1 Shift from Standby Mode (standby → OFF mode)

A shift from standby to OFF mode is made on the following condition:

- The control panel power mode (soft switch) is off.
- Standby mode has lasted for a specific period of time, i.e., a specific period of time as selected in user mode.

4.7.2 Shift from Low-Power Mode (low-power → OFF mode)

A shift from low power mode to OFF mode is made on the following condition:

- The control panel power switch (soft switch) is off.
- Low power mode has lasted for a specific period of time, i.e., a specific period of time as selected in user mode.

4.7.3 Return to Standby Mode (OFF mode → standby)

In OFF mode, a command from outside cannot cause a shift to standby; the control panel power switch (soft switch) or the main power switch must be turned off and then on to return to standby mode.

The operation at time of return will be exactly the same as when the machine is first turned on.

4.8 Power Supply OFF Mode

In power supply OFF mode, the machine remains in a state exactly the same as when its main power switch is off.

To return from power OFF mode, the main power switch must be turned on, in response to which the machine will automatically enter standby mode.

CHAPTER 4

INSTALLATION

1 Selecting the Site


The site of installation must meet the following requirements; if possible, visit the user's before delivery of the machine:

1. The site must provide with a power outlet that is rated to suit the machine and that can be used exclusively by the machine; 200V Model (180 to 220V, 12A or more), 208V Model (188 to 228V, 12A or more), 230V Model (198 to 264V, 13A or more).
2. The site must be between 15° and 30°C in temperature and between 5% and 80% in humidity. Particularly, be sure to avoid areas near water faucets, water boilers, humidifiers, and refrigerators.
3. The site must not be near a source of fire, subject to dust or ammonium gas, or exposed to direct rays of the sun. As necessary provide curtains.
4. The level of ozone generated by the machine will not affect the health of individuals around it. Some, however, may find its odor unpleasant as while remaining in contact with it for long hours. Be sure that the room is well ventilated.
5. Make sure that the feet of the machine will remain in contact with the floor, and the machine will be kept level.
6. Make sure that the machine will be at least 10 cm away from any walls, allowing enough space for work.

7. Make sure that the area is well ventilated.

If multiple machines are installed, in particular, be sure that the exhaust of another will not be drawn by the machine.


Be sure also not to install a machine near an air vent.

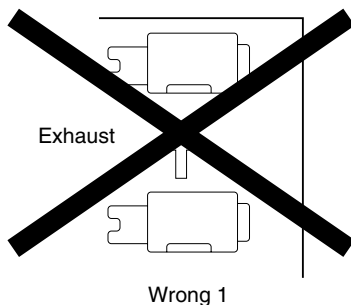

Wrong 1

F04-100-01

(In general, the silicon gas (vapor of silicone oil from the fixing assembly) tends to soil the corona charging wire, reducing its life. This is particularly true of a low humidity environment.)

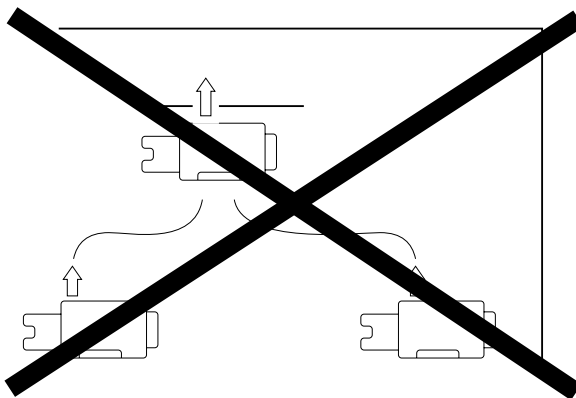


Wrong 2

F04-100-02

Outline of the Work Space


Use the following as a guide when considering space for service work:

■ Copier + Finisher

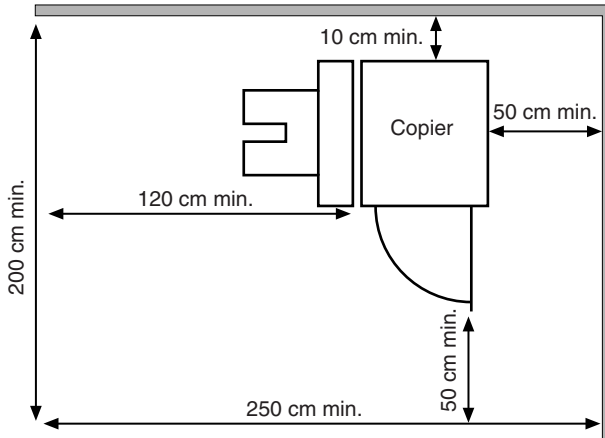

F04-100-03

■ Copier + Finisher + Side Paper Deck

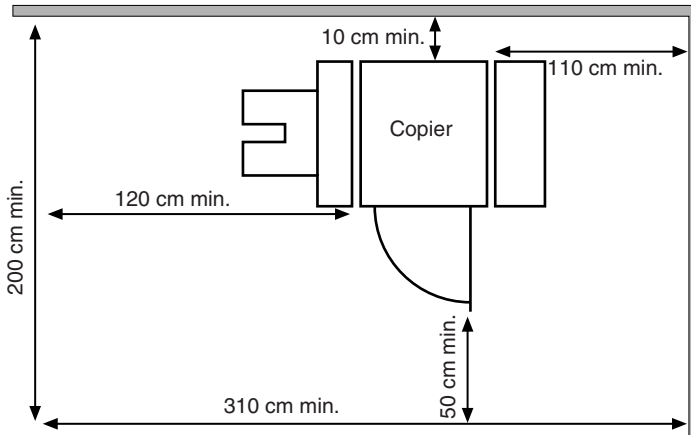

F04-100-04

2 Unpacking and Installation

2.1 Points to Note Before Starting the Work

Go through the following before starting to install the machine:






1. If the machine is moved from a cold to warm place, it can develop condensation in the form of droplets of water on its metal surfaces. Use of the machine while it suffers from condensation can lead to image faults. If the machine has been moved from a cold to warm place, be sure to leave it for 1 hour or more without unpacking so that it becomes fully used to the new place.
 2. If stairs are used to move the machine into or out of the site of installation, keep the following in mind:
 - a. Take out the ADF, fixing/feeding assembly, holding tray assembly, and copy paper, and carry them separately from the main body.
 - b. When lifting the machine, do not use the grips on the pickup assembly/delivery assembly. Instead, be sure to support the machine at four corners of its bottom.
 3. Shift up the 2 adjusters (front) found on the bottom of the machine to be sure that they are unlocked. The adjusters can slip out of the bottom of the machine because of vibration during transportation. Take care not to loose them.
 4. Be sure to work as a group of three or more. When removing the pad, in particular, one must hold the rear grip and one the front grip, while the other removes the pad.
 5. Be sure to remove the accessories (side paper deck, finisher, paper folding unit) when moving the machine into or out of the site of installation to prevent damage.
-



2.1.1 Attachments



Before starting the installation work, check to be sure that none of the following is missing:



| | | | |
|--|-------|---------------------------------------|---------|
| 0. Developing assembly | 1 pc. | T. Service Book | |
| 1. Developing assembly locking plate | | (200V model only) | 1 pc. |
| | 1 pc. | U. User Card (200 V model only) | 1 pc. |
| 2. Control panel unit | 1 pc. | V. Warranty Card | |
| 3. Upper arm | 1 pc. | (English; 208V model only) | 1 pc. |
| 4. Lower arm | 1 pc. | W. Warranty Card | |
| 5. Upper arm cover | 1 pc. | (French; 208V model only) | 1 pc. |
| 6. Lower arm cover | 1 pc. | X. Drum Warranty Card | |
| 7. Harness clip | 1 pc. | (English; 208V model only) | 1 pc. |
| 8. Ferrite core (230V model only) | 1 pc. | Y. Drum Warranty Card | |
| 9. ADF delivery tray unit | 1 pc. | (French; 208V model only) | 1 pc. |
| A. Cassette size label | 2 pc. | Z. Registration Card | |
| B. Universal cassette label | 2 pc. | (English; 208V model only) | 1 pc. |
| C. Size plate | 2 pc. | a. Registration Card | |
| D. Deck size label | 2 pc. | (French; 208V model only) | 1 pc. |
| E. 3-hole paper set label | 1 pc. | b. Installation Check Card | |
| F. Grip | 1 pc. | (208V model only) | 1 pc. |
| G. Non-inch block | 6 pc. | c. Manual Feed Set label | |
| H. Toner (200/230V, ITA model) | 1 pc. | (208/230V model) | 1 pc. |
| J. Index paper attachment | 1 pc. | d. RS tightening screw (M4x10) | |
| K. Backing | 1 pc. | | 3+6 pc. |
| L. Attachment sheet | 1 pc. | e. TP screw (M4x6) | 6 pc. |
| M. Deck locking plate | 1 pc. | f. Binding screw (M4x6) | 1 pc. |
| N. Copyboard base | | g. Binding screw (M4x14) | 5 pc. |
| (208V model only) | 1 pc. | h. P tightening screw (M4x10) | 2 pc. |
| P. User's Guide | 1 pc. | j. W sems screw (M4x12) | 1 pc. |
| Q. Copier Manual | 1 pc. | k. Flat-head screw (M4x10) | 1 pc. |
| R. Box Guide | 1 pc. | m. iR105 Installation Procedure | 1 pc. |
| S. QR sheet (200V model only) | 1 pc. | | |


2.2 Unpacking
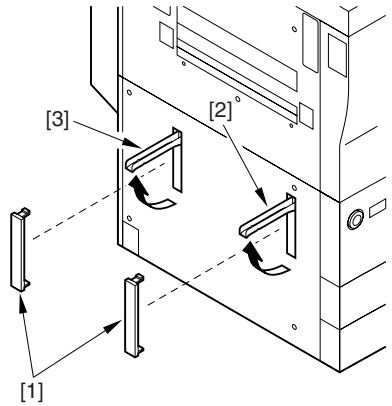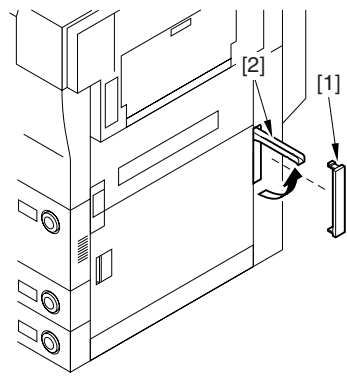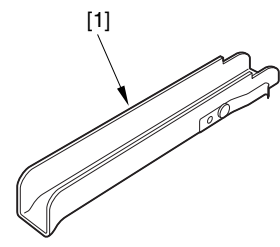
| No. | Work | Checks/remarks |
|-----|---|---|
| 1 | <p>Unpack the copier.</p> <p>Remove the plastic bag.</p> <p>Insert a flat-blade screwdriver into the top of the grip cover [1] (2 pc.; front, rear) on the left of the machine, and remove it.</p> <p>Shift up the grips at the front [2] and the rear [3].</p> |  <p>F04-202-01</p> |
| 2 | <p>Remove the grip cover (rear) [1] from the right of the machine with a flat-blade screwdriver, and shift up the grip [2] at the rear.</p> |  <p>F04-202-02</p> |
| 3 | <p>Remove the grip [1] from the box that comes with the machine.</p> |  <p>F04-202-03</p> |
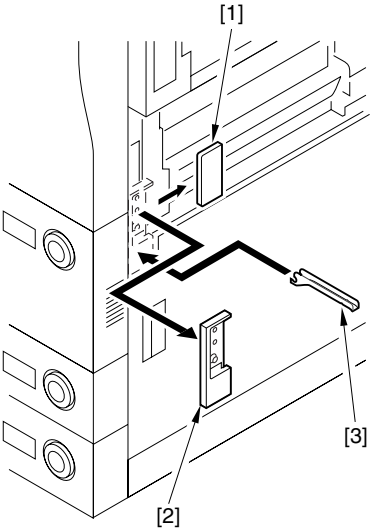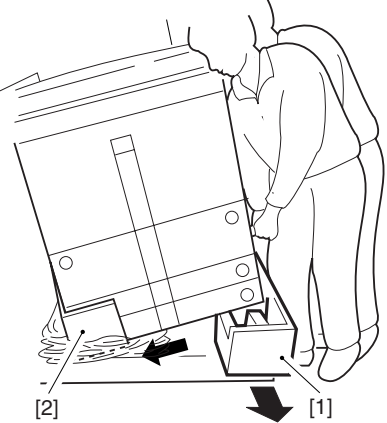
| No. | Work | Checks/remarks |
|-----|---|---|
| 4 | <p>Open the right upper cover, and slide the face cover (small) [1] to the rear to detach; then, detach the face cover (large) [2].</p> <p>Fit the grip [3] removed in step 3 to the front.</p> <p>Close the right upper cover.</p> |  <p>F04-202-04</p> |
| 5 | <p>Holding the grips on the pickup side (front, rear) of the copier, lift the machine slightly, and remove the pad [1]. At this time, move the plastic bag [2] toward the pad side.</p> |  <p>F04-202-05</p> |
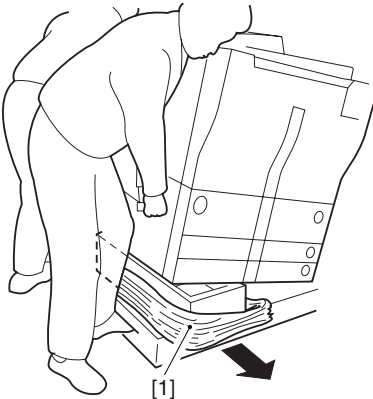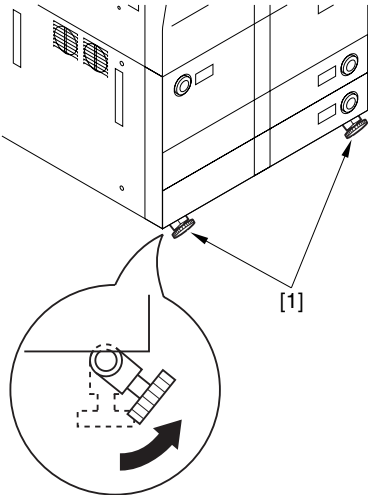
| No. | Work | Checks/remarks |
|-----|---|---|
| 6 | Holding the grips on the delivery side (front, rear) of the copier, lift the machine slightly, and remove the remaining pad and the plastic bag [1] at the same time. |  <p>[1]</p> <p>F04-202-06</p> |
| 7 | Shift up the 2 adjusters (front) [1] found on the bottom of the copier, and check to make sure that they are unlocked. |  <p>[1]</p> <p>F04-202-07</p> |

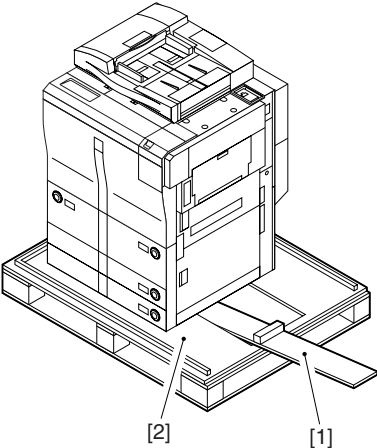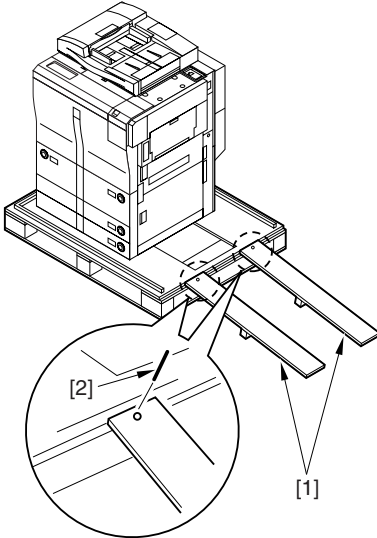
| No. | Work | Checks/remarks |
|-----|--|--|
| 8 | <p>Take out the two slope plates [1] from the center of the skid [2].</p> |  <p>F04-202-08</p> |
| 9 | <p>Detach the 2 pins taped to the slope plates.</p> <p>Turn over the slope plates [1], and match the pins [2] hole in the skid and the pin hole in the slope plate; then, fit the pin [2] (1 pc. each).</p> <p>Holding the grips (front, rear) on the delivery side of the copier, slide the copier down the slope plates to move it off the skid.</p> |  <p>F04-202-09</p> |
| 10 | <p>For the cardboard box that comes with the machine, take out the parts and the attachments. Check to make sure that none of the foregoing items is missing.</p> | |
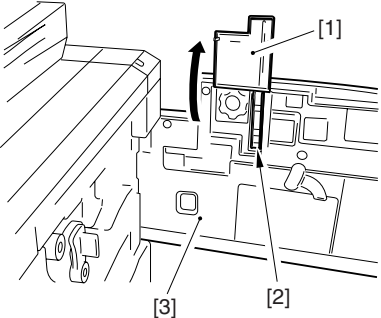
| No. | Work | Checks/remarks |
|-----|--|---|
| 11 | <p>Open the front cover, and then open the compartment cover [1]; put the grip [2] used in step 4 inside the compartment (found behind the front cover [3]) for storage.</p> <p>Close the compartment cover [1], and then close the front cover [3].</p> |  <p>F04-202-10</p> |
| 12 | <p>Mount the removed face covers to the right side and the left side of the machine.</p> <p>Open the right upper cover, and mount the face cover (small) and the face cover (large).</p> <p>Close the right upper cover.</p> | |








If condensation is found on the outside or inside of the copier, stop the work immediately, and wait until it becomes fully used to the room temperature. If no condensation is found, continue the work.

2.3 Mounting the Scanner


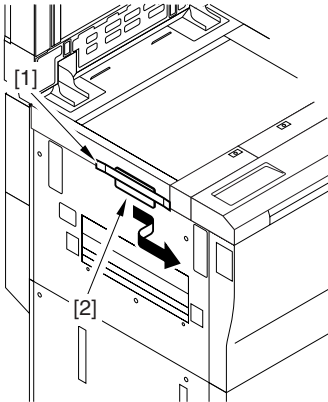
| No. | Work | Checks/remarks |
|-----|--|---|
| 1 | Remove the packing tape from the copier. | |
| 2 | Open the ADF. Remove the copyboard glass protective pad. | |
| 3 | Remove the packing tape [1] from the scanner fixing. Slide the scanner fixing [2] to the front to detach. (Store away the fixing, as you will need it to secure the scanner when relocating the machine.) |  F04-203-01 |




2.4 Installing the Fixing Assembly

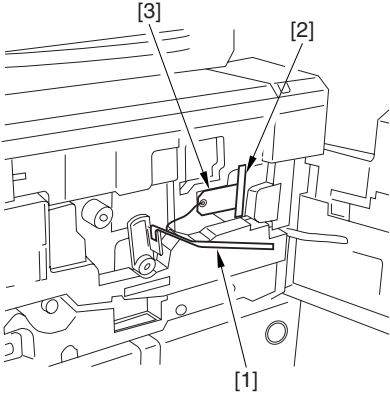
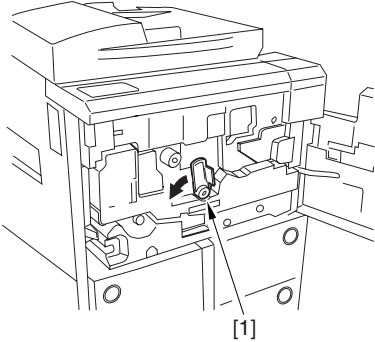

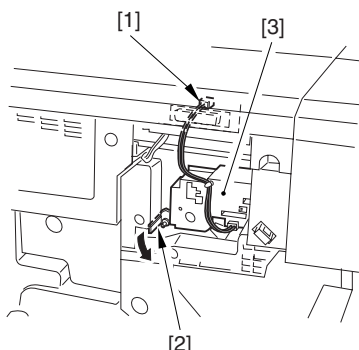
| No. | Work | Checks/remarks |
|-----|--|--|
| 1 | Open the front cover. | |
| 2 | Remove the double-sided tape [1] from the inside cover and the tape [2] used to keep the tag [3] in place. |  <p>F04-204-01</p> <p>Shift the fixing/feeding assembly releasing lever [1] in the direction of the arrow (left) to release the transfer/separation charging assembly.</p>  <p>F04-204-02</p> |

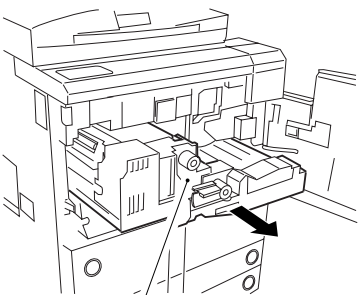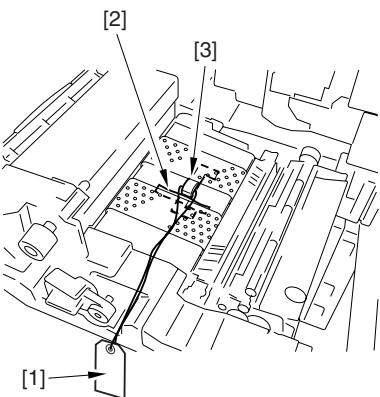
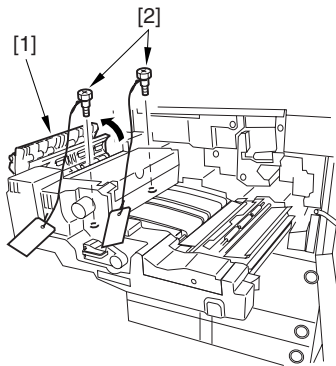
| No. | Work | Checks/remarks |
|-----|---|--|
| | <p>Slide out the fixing/feeding unit [1] to the front.</p> |  <p>[1]</p> <p>F04-204-03</p> |
| 3 | <p>Remove the tag [1] and tape [2] from the fixing/feeding assembly.</p> <p>Remove the separation releasing member [3].</p> <div data-bbox="207 758 291 837"></div> <div data-bbox="308 758 543 845"><p>Remove all foreign matter (e.g., tape glue) from the feed belt.</p></div> |  <p>[2]</p> <p>[3]</p> <p>[1]</p> <p>F04-204-04</p> |
| 4 | <p>Remove the tape used to keep the tag in place; then, open the fixing/feeding unit top [1], and remove the two screws [2] from the front and the rear (fixing nip release).</p> <p>Close the fixing/feeding unit top [1].</p> |  <p>[1]</p> <p>[2]</p> <p>F04-204-05</p> |


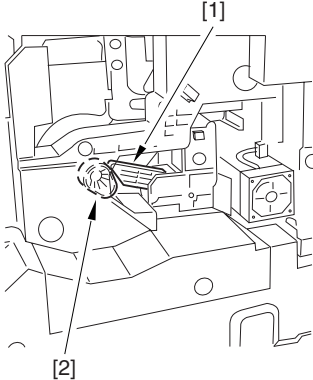
2.5 Mounting the Charging Assemblies
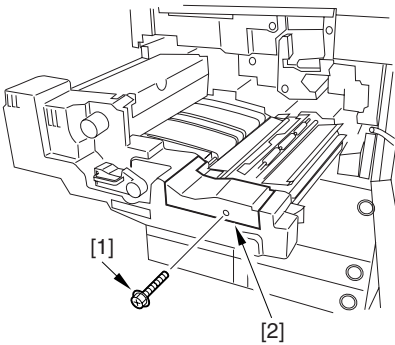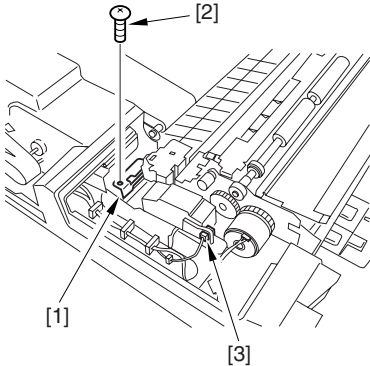
| No. | Work | Checks/remarks |
|-----|---|--|
| 1 | Remove the screw [1], and detach the transfer/separation charging assembly front cover [2]. |  <p>F04-205-01</p> |
| 2 | Remove the fixing [1] (1 screw [2]), and disconnect the connector [3]. |  <p>F04-205-02</p> |
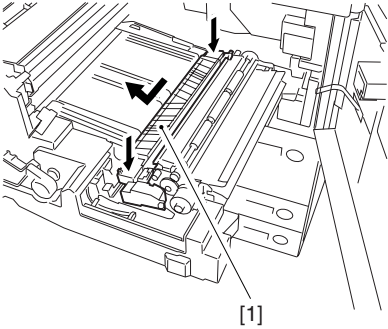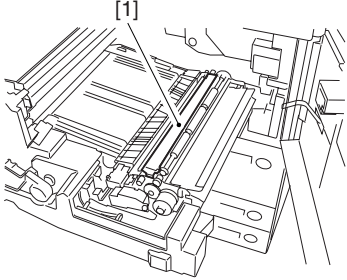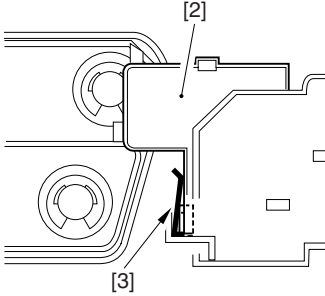
| No. | Work | Checks/remarks |
|-----|--|--|
| 3 | <p>While pressing the front and the rear of the transfer/separation charging assembly [1], pull it about 1 cm to the front; then, detach it to the rear upper left.</p> <p>Using alcohol, clean the transfer/separation charging wire.</p> |  <p>F04-205-03</p> |
| 4 | <p>While observing the following, mount the transfer/separation charging assembly:</p> <ul style="list-style-type: none"> • The solvent must be fully dry. • The gut wire is not brought into contact with the transfer guide [1] to avoid a cut. • The ground plate [2] is found outside the charging assembly [3] frame as shown. |  <p>F04-205-04</p>  <p>F04-205-05</p> |
| 5 | <p>Connect the connector of the transfer/separation charging assembly, and fit the fixing.</p> | |
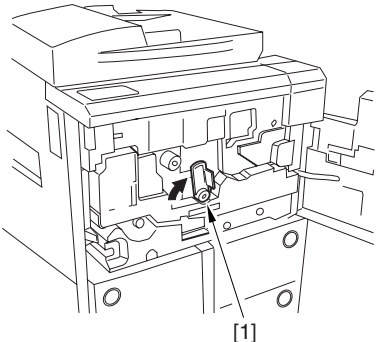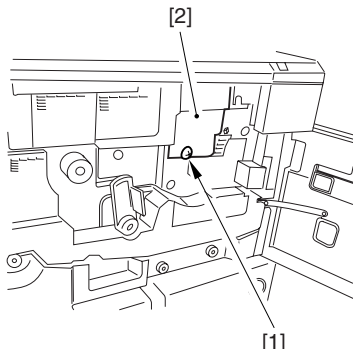
| No. | Work | Checks/remarks |
|-----|---|--|
| 6 | <p>Mount the transfer/separation charging assembly front cover with a screw.</p> <p>Push in the fixing/feeding assembly inside the machine, and shift the fixing/feeding assembly releasing lever [1] to SET position.</p> |  <p>[1]</p> <p>F04-205-06</p> |
| 7 | <p>Remove the screw [1], and detach the primary charging assembly front cover [2].</p> |  <p>[2]</p> <p>[1]</p> <p>F04-205-07</p> |
| 8 | <p>Disconnect the connector [1], and release the locking lever [2] of the primary charging assembly; then, take out the charging assembly [3].</p> <p>Using alcohol, clean the primary charging wire and grid wire.</p> <div data-bbox="162 1305 246 1380"><p>REF.</p></div> <div data-bbox="263 1305 481 1388"><p>Do not mount it until the solvent is fully dry. Wait until later.</p></div> |  <p>[1]</p> <p>[3]</p> <p>[2]</p> <p>F04-205-08</p> |
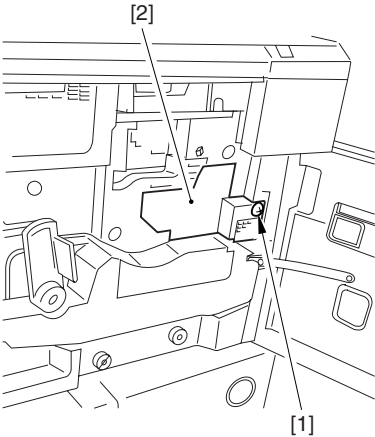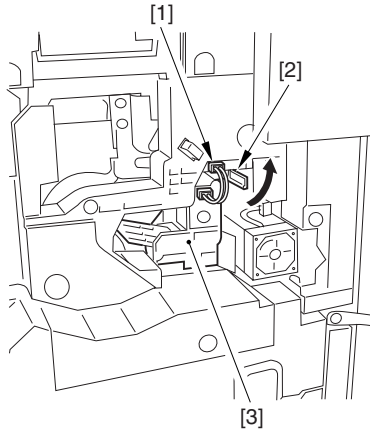
| No. | Work | Checks/remarks |
|-----|--|--|
| 9 | Remove the screw [1], and detach the pre-transfer change assembly front cover [2]. |  <p>F04-205-09</p> |
| 10 | <p>Disconnect the connector [1], and release the locking lever [2] of the pre-transfer charging assembly; then, take out the charging assembly [3].</p> <p>Using alcohol, clean the pre-transfer charging wire.</p> |  <p>F04-205-10</p> |
| 11 | <p>With the lock released, fit the primary charging assembly, and connect the connector.</p> <div data-bbox="207 1332 291 1404"></div> <div data-bbox="308 1324 571 1388"><p>Check to make sure that the solvent is fully dry.</p></div> | |



| No. | Work | Checks/remarks |
|-----|--|---|
| 12 | <p>With the lock released, fit the pre-transfer charging assembly, and connect the connector.</p> <div><ul style="list-style-type: none">• Check to make sure that the solvent is fully dry.• Check to make sure that the one-way arm [1] of the pre-transfer charging assembly is on the eccentric cam [2].</div> |  <p>F04-205-11</p> |
| 13 | Mount the primary charging assembly cover and the pre-transfer charging assembly cover with a screw (1 pc. each). | |
| 14 | Close the front cover. | |


2.6 Checking the Developing Assembly

| No. | Work | Checks/remarks |
|-----|--|-------------------------------------|
| 1 | <p>Open the manual feed tray unit [1], and remove the screw [2] from the door tape [3].</p> <div data-bbox="208 363 288 440"> </div> <p>Do not open the manual feed tray unit too wide; otherwise, the door tape may tear.</p> | <p>F04-206-01</p> |
| 2 | <p>Take out the developing assembly from the package that comes with the machine.</p> <p>Turn the developing cylinder by hand to check it for scratches.</p> | |
| 3 | <p>Holding the developing assembly [1] as shown, mount it to the machine.</p> <div data-bbox="208 906 288 983"> </div> <p>When mounting the developing assembly, fit it from a high position, and take care not to bring the developing cylinder into contact with the plate of the developing assembly base.</p> <p>Connect the 2 connectors [1].</p> | <p>F04-206-02</p> <p>F04-206-03</p> |

| No. | Work | Checks/remarks |
|-----|---|---|
| 4 | <p data-bbox="157 188 532 272">Secure the developing assembly locking unit [1] with the 6 TP screws [2] (M4x6; black) that come with the machine.</p> <div data-bbox="157 304 247 384"></div> <p data-bbox="262 304 532 507">Be sure that the developing assembly locking unit is firmly in contact and is free of displacement to avoid image faults. (Particularly, it must not ride overt the boss found at the bottom.)</p> | <p data-bbox="695 587 822 611">F04-206-04</p> |
| 5 | <p data-bbox="157 627 532 711">Fit the previously removed screw to the door tape of the manual feed tray cover. (Keep the manual tray cover open.)</p> | |



2.7 Mounting the Pickup Assembly

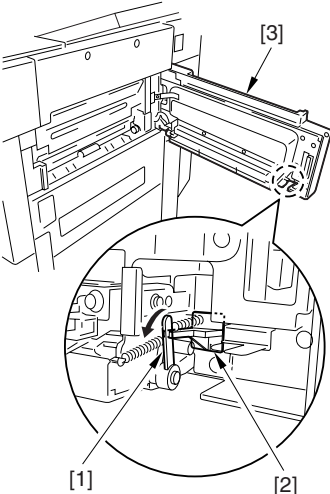
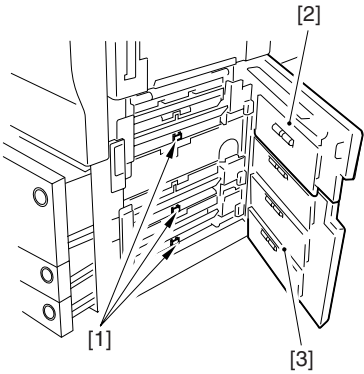
| No. | Work | Checks/remarks |
|-----|--|--|
| 1 | <p>Shift down the lever [1] in the direction of the arrow, and remove the pickup roller releasing spacer [2].</p> <p>Close the manual feed tray unit [3].</p> |  <p>F04-207-01</p> |
| 2 | <p>Open the right upper cover and the right lower cover, and push the release buttons of the front deck (right) and cassette 3/4; then, slide them halfway out.</p> | |
| 3 | <p>Remove the three pickup roller releasing spacers [1].</p> <p>Close the upper vertical path cover [2] and the lower vertical path cover [3].</p> <p>Fit the front deck (right) and the cassette 3/4 back in.</p> |  <p>F04-207-02</p> |


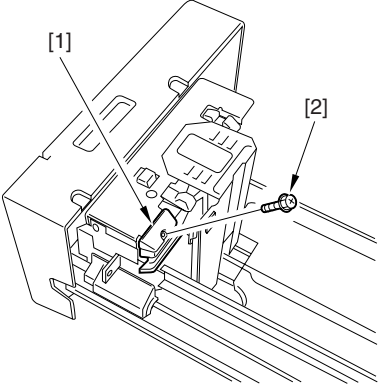
| No. | Work | Checks/remarks |
|-----|--|---|
| 4 | <p>Press the releasing button of the front deck (left), and slide it to the front.</p> <p>Secure the deck locking plate [1] to the front deck (left) with an RS tightening screw [2] (M4x10; white).</p> <p>Close the front deck (left).</p> |  <p>F04-207-03</p> |

2.8 Mounting the Control Panel




| No. | Work | Checks/remarks |
|-----|--|-------------------|
| 1 | <p>Open the toner cartridge cover [1], and remove the 3 RS tightening screws [2]; then, detach the upper right cover [3] while paying attention to the three claws [4] found inside the upper right cover.</p> <p>When detaching it, be sure to lift the claw side of the upper right cover.</p> | <p>F04-208-01</p> |
| 2 | <p>Open the 2 edge saddles [1] of the lower arm [2], and thread the control panel harness [3] through the lower arm. At this time, keep the control panel harness routed to the connector side so that it will not be slack.</p> <p>Close the 2 edge saddles.</p> | <p>F04-208-02</p> |
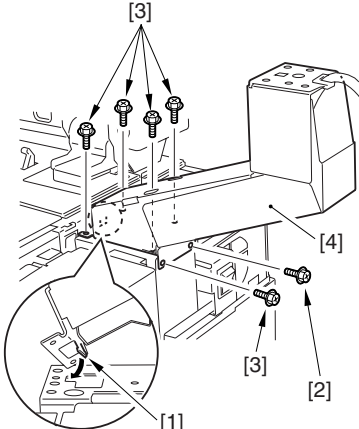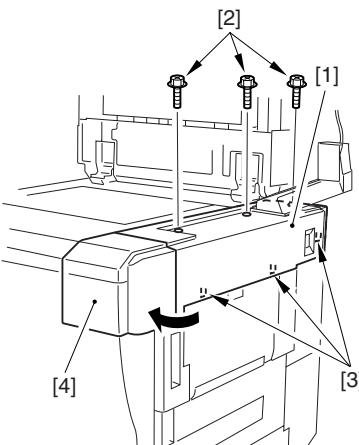
| No. | Work | Checks/remarks |
|-----|--|--|
| 3 | <p>Fit the claw [1] found at the bottom of the lower arm into the copier.</p> <p>Fit the RS tightening screw [2] (M4x10) of the right rear; after positioning, fit the remaining 5 RS tightening screws [3] (M4x10) to secure the lower arm [4].</p> |  <p>F04-208-03</p> |
| 4 | <p>Mount the upper right cover [1] with 3 RS tightening screws [2].</p> <p>At this time, check to make sure that the 3 claws [3] inside are fully engaged and the over is firmly in contact.</p> <p>Close the toner cartridge cover [4].</p> |  <p>F04-208-04</p> |

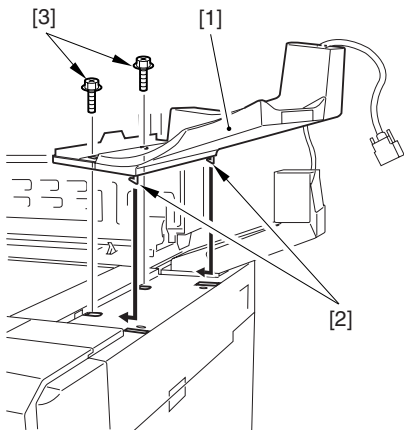
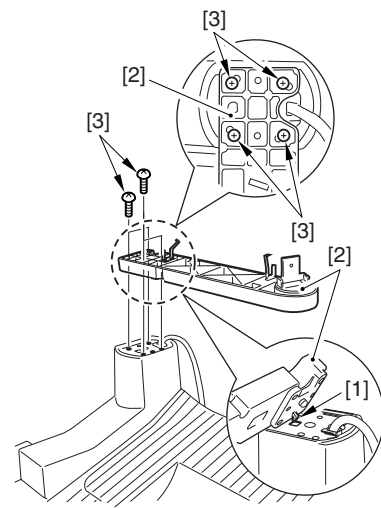
| No. | Work | Checks/remarks |
|-----|---|--|
| 5 | <p>Put the original delivery tray [1] over the lower arm, and hook the 2 claws [2] found at the bottom for the original delivery tray in the notches of the right upper cover; check that there is no gap, and then secure it in place with 2 RS tightening screws [3] (M4x10).</p> |  <p>F04-208-05</p> |
| 6 | <p>Hook the claw [1] of the upper arm [2] on the hole in the lower arm, and temporarily fix the upper arm in place with 4 binding screws [3] (M4x14).</p> |  <p>F04-208-06</p> |

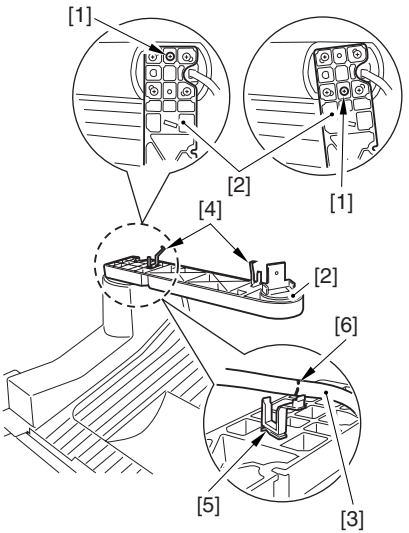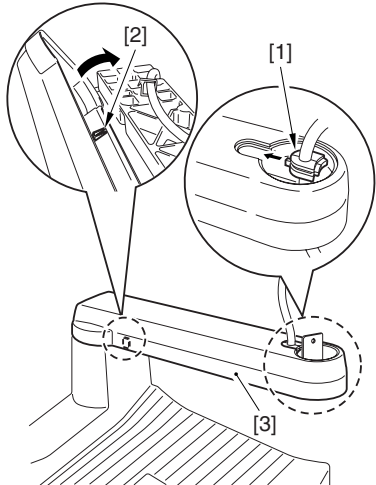
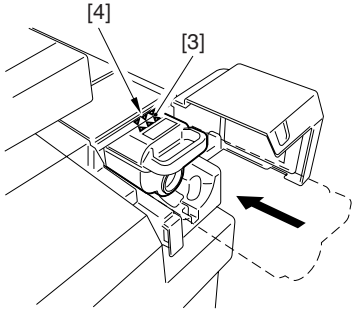
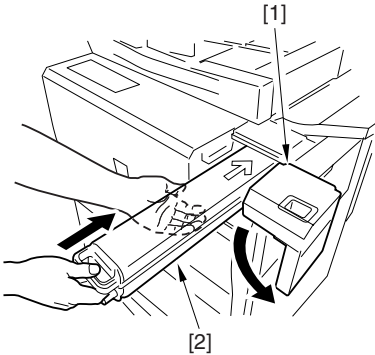
| No. | Work | Checks/remarks |
|-----|--|--|
| 7 | <p>Fit the positioning binding screw [1] (M4x14) so that the upper arm [2] is at the angle desired by the user; then, fully tighten the binding screw that was temporarily tightened.</p> <p>Lead the control panel harness [3] through the 2 wire saddles [4]. At this time, check to make sure that the wire saddle [5] at the rear matches the marking [6] on the control panel harness.</p> |  <p>F04-208-07</p> |
| 8 | <p>Pinch the control panel harness with a harness clip [1], and fit it to the upper arm.</p> <p>Hook the claw [2] found on the left side of the fate upper arm cover [3], and put it over the upper arm.</p> <div data-bbox="162 1061 246 1141"></div> <div data-bbox="263 1061 520 1292"><p>Keep the harness clip [1] so that the side with a protrusion (thicker side) is at the bottom.</p><p>The harness clip [1] will separate into two during the work. Continue the work, as it will not affect its function.</p></div> |  <p>F04-208-08</p> |

| No. | Work | Checks/remarks |
|-----|---|-------------------|
| 9 | Remove the binding screw [1], and detach the rear support cover [2] of the control panel unit [3]. | <p>F04-208-09</p> |
| 10 | Put the control panel unit [1] on the upper arm, and secure it in place with a flat-head screw [2] (M4x10) and a W sems screw [3] (M4x12). Mount the rear support cover [4] with a binding screw [5]. | <p>F04-208-10</p> |

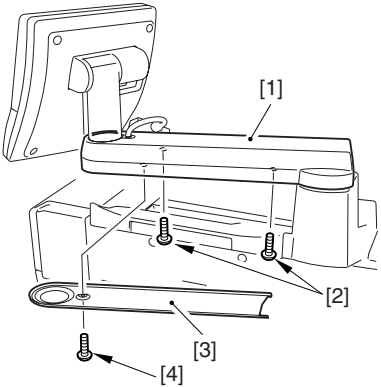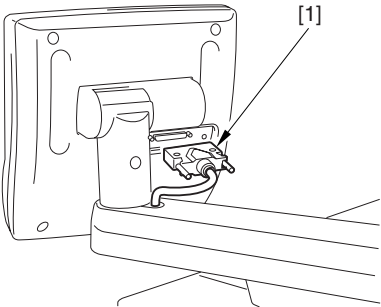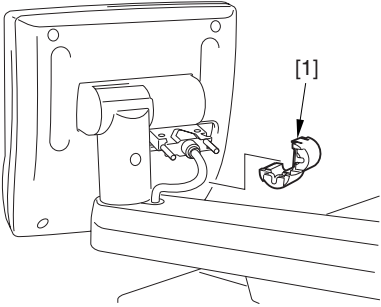
| No. | Work | Checks/remarks |
|-----|--|---|
| 11 | <p>Secure the upper arm cover [1] with 2 P tightening screws [2] (M4x10). Mount the lower arm cover [3] with a binding screw [4] (M4x6).</p> |  <p>F04-208-11</p> |
| 12 | <p>Connect the connector [1] of the control panel harness to the control panel unit.</p> |  <p>F04-208-12</p> |
| 13 | <p>If for a 230V model, fit a ferrite core [1] to the control panel harness.</p> |  <p>F04-208-13</p> |

2.9 Supplying the Toner

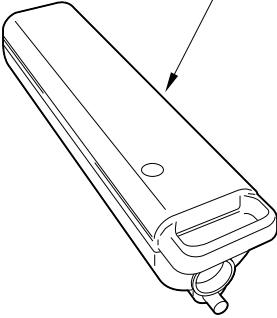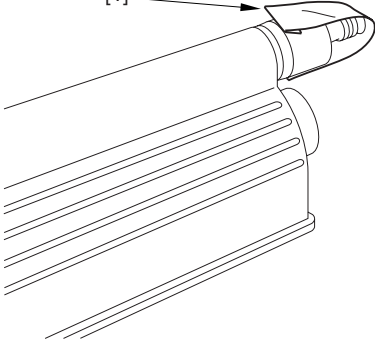
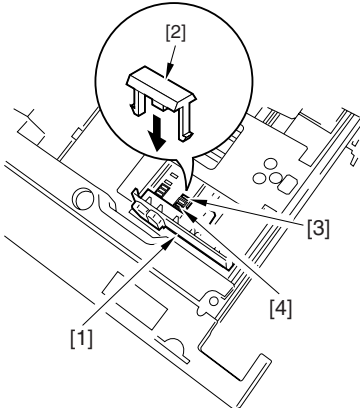
| No. | Work | Checks/remarks |
|-----|---|--|
| 1 | Take out the toner cartridge [1] for the packaging box. |  <p>F04-209-01</p> |
| 2 | Remove the fixing tape [1]. |  <p>F04-209-02</p> |

| No. | Work | Checks/remarks |
|-----|---|---|
| 3 | <p>Open the toner cartridge cover [1], and fit the toner cartridge [2] from the front of the copier.</p> <div></div> <p>Be sure to insert the toner cartridge so that the ▲ marking [3] on it matches the ▼ marking [4] on the copier.</p>  <p>F04-209-03</p> |  <p>F04-209-04</p> |
| 4 | Close the hoper cover. | |


2.10 Mounting the ADF
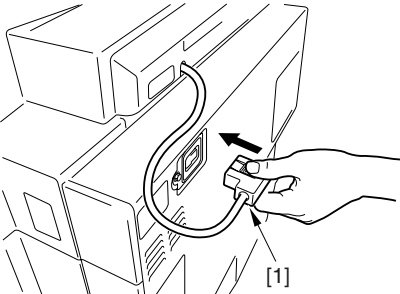
| No. | Work | Checks/remarks |
|-----|--|--|
| 1 | Remove the face plate for the ADF connector from the copier. | |
| 2 | Fit the ADF connector [1] into the socket found at the back of the copier. |  <p>F04-210-01</p> |





2.11 Cassette




| No. | Work | Checks/remarks |
|-----|--|---|
| 1 | <div><div>Perform this step if the user is not planning to use Inch papers.</div></div> <p>Press the releasing buttons of the cassette 3 and 4, and slide out the cassettes to the front; then, take out the packing material.</p> | |
| 2 | <p>Set the side guide plate [1] of the cassette (3/4) against the hole (A4/A3) identified by the marking M.</p> <p>Fit the non-inch block [2] that comes with the machine into the following hole, making sure that it will not be pushed up from inside the cassette.</p> <p>Hole with marking A [3]: STMT-R Hole with marking H [4]: LTR-R</p> | <div><p>F04-211-01</p></div> |

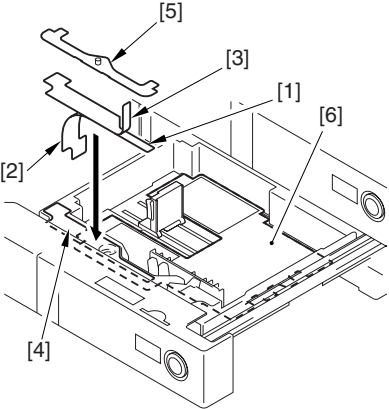
2.12 Index Paper Attachment


| No. | Work | Checks/remarks |
|-----|--|--|
| 1 | <p>Decide on either cassette 3 or 4 for use for index paper.</p> <p>Press the releasing button for the cassette, and slide it out to the front.</p> <p>Peel the backing sheet [2] and the protective sheet [3] from the attachment sheet [1], and attach the attachment sheet to the area [4] indicated in the figure.</p> |  <p>F04-212-01</p> |
| 2 | <p>Place the index paper attachment [5] over the attachment sheet.</p> | |
| 3 | <p>Fit the base sheet [6] in the cassette.</p> <p>Slid out the cassette.</p> | |

2.13 Attaching the Labels, Setting Paper, Checking Images/Operations, and User Mode

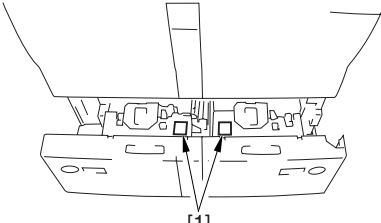
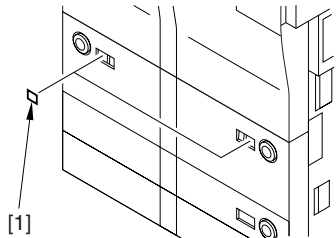
| No. | Work | Checks/remarks |
|-----|--|--|
| 1 |  <p>Check to make sure that the front deck and the cassette are free of any packing material.</p> | |
| 2 | Connect the power plug to the power outlet, and turn on the main power switch. | <ul style="list-style-type: none"> Adjust the contrast of the control panel display using the Image Contrast dial for the best view, and advise the user on the use of the dial. Check to see that the Add Paper message goes ON. Press the keys on the keypad and the Clear key to see that the copy count is correctly indicated. |
| 3 | Check with the user to decide on a paper size. | |
| 4 | Press the release button, and slide out the right/left deck. |  <p>To change the size of the front deck (right/left), refer to 2.14.</p> |
| 5 | Attach the 3-Hole Paper Set labels [1]. |  <p>[1]</p> <p>F04-213-01</p> |
| 6 | Put paper in the right/left deck. | |
| 7 | Slide in the right /left deck, and attach the deck size labels [1] to the paper size plate of the deck. |  <p>[1]</p> <p>F04-213-02</p> |

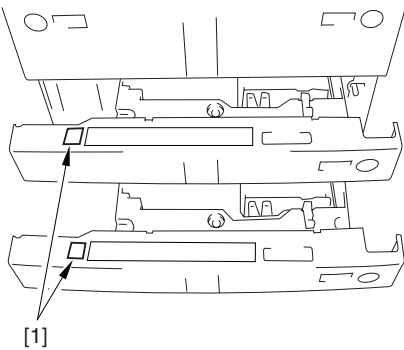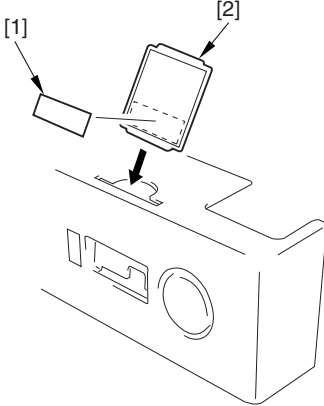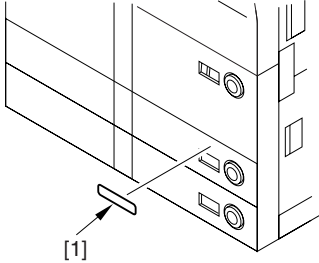
| No. | Work | Checks/remarks |
|-----|--|---|
| 8 | Press the release button, and slide out the cassette 3/4. | |
| 9 | Attach the 3-Hole Paper Set labels [1]. |  <p data-bbox="739 622 873 646">F04-213-03</p> |
| 10 | Attach the size label [1] to the paper size plate [2] of the cassette, and set it to the cassette cover. |  <p data-bbox="739 1093 873 1117">F04-213-04</p> |
| 11 | Push in the cassettes into the copier. | FL cassette/W1 set |
| 12 | Attach the universal cassette label [1] to the cassette to suit the user's needs. |  <p data-bbox="739 1444 873 1468">F04-213-05</p> |

| No. | Work | Checks/remarks |
|-----|---|---|
| 13 | <p>Start service mode.</p> <p>Make the following selections: COPIER>FUNCTION>INSTALL>TONER-S.</p> <p style="text-align: center;">↓</p> <p>See that the following message has appeared: 'Check the Developer'.</p> <p style="text-align: center;">↓</p> <p>Check to see that the developing assembly and the developing assembly locking plate are correctly mounted; then, press the OK key.</p> <p style="text-align: center;">↓</p> <p>The machine starts to supply toner. (about 10 min; progress shown on display by count-down)</p> <p style="text-align: center;">↓</p> <p>At the end, make the following selections to generate 2 A3 solid black copies to ensure stable images: COPIER>TEST>PG>PG_PICK.</p> <p style="text-align: center;">↓</p> <p>Enter the number of the source of paper containing A3 paper, and press the OK key. ('3' for cassette 3, or '4' for cassette 4)</p> <p style="text-align: center;">↓</p> <p>Make the following selections: COPIER>TEST>PG>TYPE.</p> <p style="text-align: center;">↓</p> <p>Enter '6', and press the OK key. ('6' for solid black; PG-TYPE6)</p> <p style="text-align: center;">↓</p> <p>Preset the Start key twice to generate 2 solid black copies (A3).</p> <p style="text-align: center;">↓</p> <p>At the end, press the Reset key twice to end service mode.</p> | <p>Starting Service mode</p> <ol style="list-style-type: none"> 1) Press the User Mode key. 2) Press the '2' and '8' keys at the same time on the keypad. 3) Press the User Mode key. <div style="display: flex; align-items: center;">  <div> <p>Never turn off the power while the machine is in operation.</p> </div> </div> |

| No. | Work | Checks/remarks |
|-----|--|---|
| 14 | <p>Place the Test Sheet on the copyboard glass, and check the copy image.</p> <p>Check to make sure that pickup from each source of paper is normal. (Make 3 test copies each from the decks and the cassettes.)</p> <div data-bbox="208 459 288 533">  </div> <p>The first 10 copies or so may show soiled images because of toner dropping from the drum separation claw. This symptom will disappear as more and more copies are made.</p> | <ul style="list-style-type: none"> • Check to make sure that there is no abnormal noise. • Check the quality of copy images for each default ratio. • Check to make sure that as many copies as set are made. • Check to make sure that copying operation is normal. • If there is a difference in density between left and right, adjust the height of the rear of the primary charging assembly. |
| 15 | Make double-sided copies, and check the operation. | |
| 16 | Make user mode and service mode settings to suit the needs of the user. | |
| 17 | Press the Rest key twice to end service mode. | |
| 18 | Clean up the area around the copier. | |
| 19 | Move the copier to its final location, and secure it in place using the adjusters. | |
| 20 | If you are installing accessories, do so by referring to the Installation Procedure that comes with each accessory. | For the Card Reader-D1, see 4.1 "Installing the Card Reader-D1." |
| 21 | Fill out the Service Sheet. | |

2.14 Changing the Paper Size for the Front Deck (right, left)
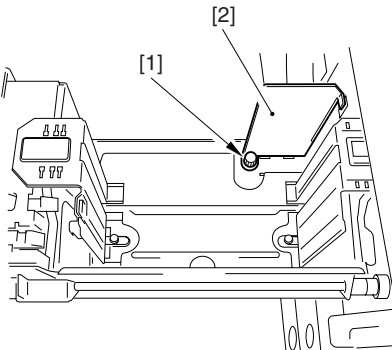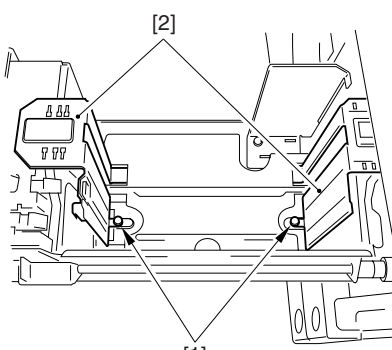
| No. | Work | Checks/remarks |
|-----|---|--|
| 1 | Press the release button, and slide out the deck. | |
| 2 | Remove the screw [1] of the rear end guide plate [2], and secure the guide plate [2] to the desired position. |  <p>F04-214-01</p> |
| 3 | Remove the screw [1] (1 pc. each) from the left and right of the guide plate [2], and secure the guide plate [2] to the desired position. |  <p>F04-214-02</p> |
| 4 | Put paper in the deck. | |
| 5 | Slide the deck inside the copier. | |
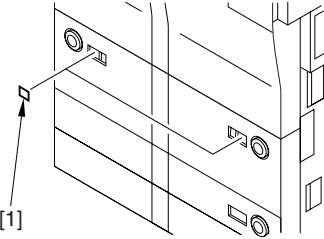
| No. | Work | Checks/remarks |
|-----|---|---|
| 6 | Attach the new Deck Size labels [1] to the paper size plate of the deck. |  <p data-bbox="744 470 868 494">F04-214-03</p> |
| 7 | Start service mode, and register the paper size of the front deck. Thereafter, turn off and then on the main power switch. | Right deck : COPIER>OPTION>CST>P-SZ-C1 Left deck : COPIER>OPTION>CST>P-SZ-C2 A4=6 (200V model default), B5=15, LTR=18 |

3 Relocating the Machine

After installation, if the machine must be relocated by truck or other means of transportation, perform the following:

| No. | Work | Checks | Remarks |
|-----|---|--|---------|
| 1 | Make a copy in Direct. | | |
| 2 | Take out all paper from all cassette. | | |
| 3 | Turn off the power switch, and disconnect the power plug from the power outlet. | | |
| 4 | Fix the No. 2 mirror base in place from the left cover side with scanner fixing. | Check to make sure that the No. 2 mirror base does not move. | |
| 5 | Take out the developing assembly. | Carry the developing assembly in a separate box. | |
| 6 | Tape the transfer charging assembly, fixing/feeding assembly, releasing lever, and lower feeding assembly in place to protect them against vibration. | | |
| 7 | Tape the front door, hopper cover, cassettes, and right door (upper, lower) in place. | | |
| 8 | Place A3 copy paper on the copyboard glass, and tape the ADF in place. | | |



A. If stairs are used to move the copier into or out of the user's place, keep the following in mind:

1. Take out the fixing/feeding assembly, holding tray, and copy paper from the copier, and carry them separately. (If an ADF is installed, remove it also.)
2. When lifting the copier, do not use the grips on the pickup/delivery assembly; instead, support it at four corners of the machine bottom.

B. Shift up the 2 adjusters (front) found on the bottom of the copier, and check to make sure that they are unlocked. Take care, as the adjusters can slip out of the machine because of vibration while in transit.



C. Be sure to remove the accessories (side paper deck, finisher) when moving the copier into or out of the user's place.



4 Installing the Card Reader-D1




4.1 Installing the Card Reader-D1



Install the Card Reader-D1 as follows:

| No. | Work | Checks/remarks |
|-----|---|-------------------|
| 1 | Start service mode (COPIER>FUNCTION>INSTALL>CARD), and enter the lowest card number (from 1 to 2001). As many as 1000 cards, starting with the number, may be used. | |
| 2 | Turn off the main power switch of the copier, and disconnect the power plug. | |
| 3 | Open the front cover. | |
| 4 | Remove the screw [1], and detach the primary charging assembly front cover [2]. | <p>F04-401-01</p> |
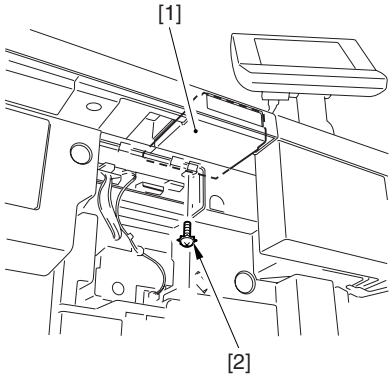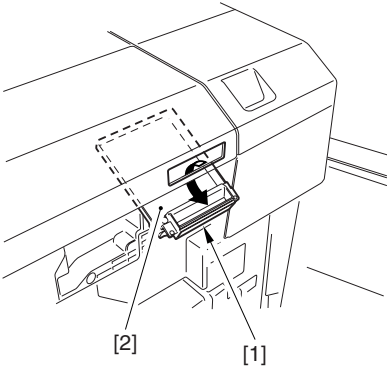
| No. | Work | Checks/remarks |
|-----|---|--|
| 5 | <p>While supporting the card reader base [1], remove the screw (w/ washer) [2]. (You will need the screw and the washer later.)</p> |  <p>F04-401-02</p> |
| 6 | <p>Push in the face plate [1] lightly, and take out the card reader base assembly [2] from below.</p> |  <p>F04-401-03</p> |
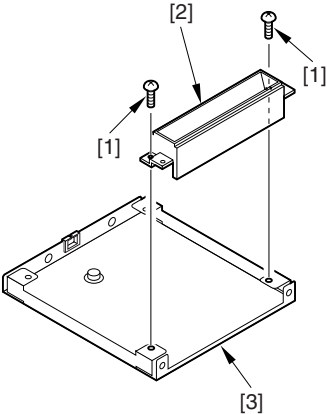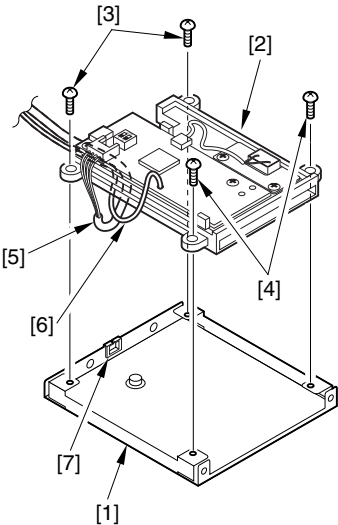
| No. | Work | Checks/remarks |
|-----|--|--|
| 7 | <p>Remove the 2 screws [1], and detach the face plate [2] from the card reader base assembly [3].</p> <p>(You will use the removed parts later.)</p> |  <p>F04-401-04</p> |
| 8 | <p>Remove the 2 screws that remain on the top of the card reader [1].</p> <p>Mount the card reader [2] using the 2 removed screws [3] and the 2 screws [4] used to keep the face plate in place. (At this time, be sure to route the harness [5] and the grounding wire [6] under the card reader as indicated.)</p> <p>Route the harness through the edge saddle [7].</p> |  <p>F04-401-05</p> |
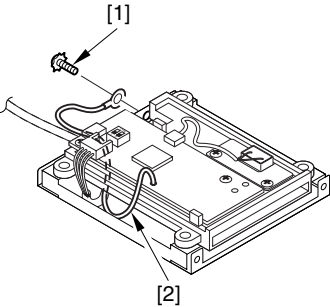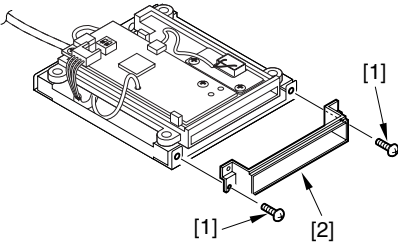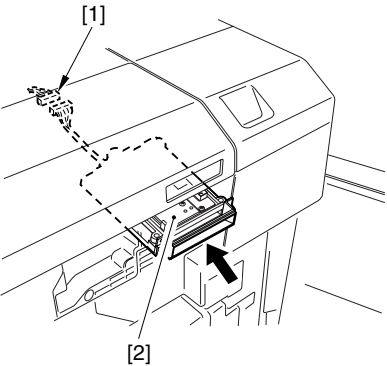
| No. | Work | Checks/remarks |
|-----|---|--|
| 9 | <p>Remove the screw (w/washer) [1] from the rear of the card reader base.</p> <p>Secure the grounding wire [2] with the removed screw (w/ washer) [1].</p> |  <p>F04-401-06</p> |
| 10 | <p>Remove the 2 screws [1] from the front of the card reader base.</p> <p>Secure the face plate [2] removed in step 4 with 2 screws [1] as shown.</p> |  <p>F04-401-07</p> |
| 11 | <p>Connect the connector [1] of the copier and the harness of the card reader to which a relay post heater is attached.</p> <p>Push the harness into the copier, and fit in the card reader assembly [2].</p> |  <p>F04-401-08</p> |

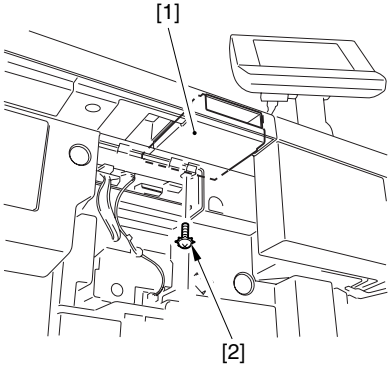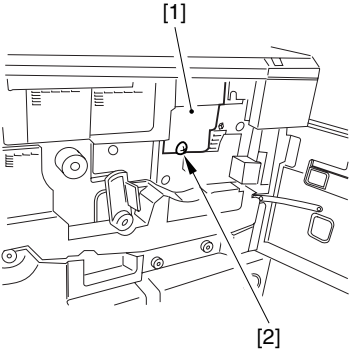
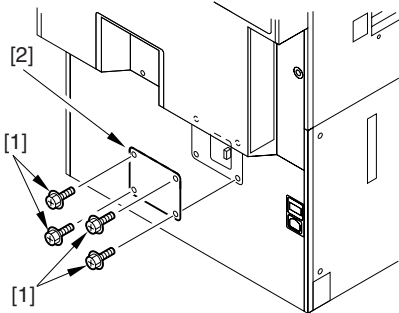
| No. | Work | Checks/remarks |
|-----|---|--|
| 12 | While supporting it, mount the card reader assembly [1] with the screw (w/ washer) [2] removed in step 5. |  <p>F04-401-09</p> |
| 13 | Mount the primary charging assembly front cover [1] with a screw [2]. |  <p>F04-401-10</p> |
| 14 | Close the front cover. | |
| 15 | Connect the power plug of the copier, and turn on the main power switch. | |

5 Installing the NE Controller-A1/NE Controller-B1/ Copy Data Controller-A1



5.1 Installing the NE Controller-A1/NE Controller-B1/Copy Data Controller-A1




Here, the instructions are limited to installation to an iR105. For how to make various settings, checks to make, and points to note, see the Installation Procedure that comes with a specific controller.

| No. | Work | Checks/remarks |
|-----|--|--|
| 1 | <div>Remove the 4 screws [1] that come with the rear cover of the host machine, and remove the face cover [2].</div> <div><div>If you are installing a Copy Data Controller-A1 to a 230V machine, go to step 4.</div></div> | <div></div> <div>F04-501-01</div> |

| No. | Work | Checks/remarks |
|-----|--|-------------------|
| 2 | Connect the connector J525 [1] of the host machine with the cable [3] of the controller. | <p>F04-501-02</p> |
| 3 | Mount the controller [2] with 4 screws [1]. | <p>F04-501-03</p> |
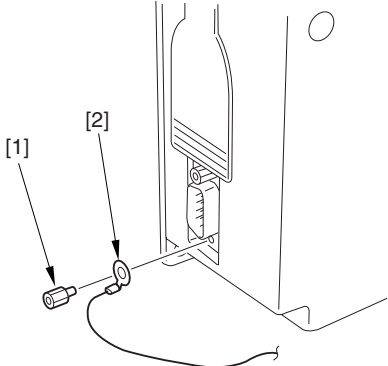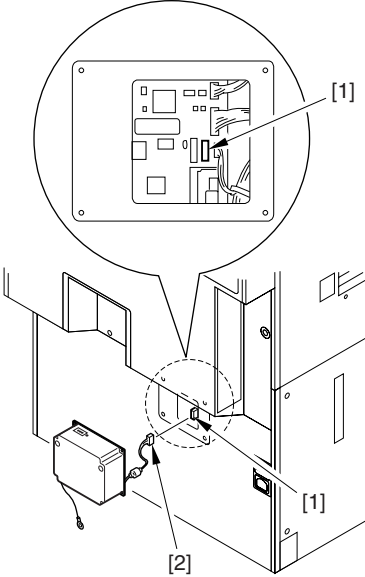
| No. | Work | Checks/remarks |
|-----|---|--|
| 4 | <p>[When Installing a Copy Data Controller-A1 to a 230V Model]</p> <p>Remove the connector fixing screw (bottom) [1].</p> <p>Bend the terminal of the grounding wire [2] that comes with the machine to the outside, and mount it using a connector fixing screw [1].</p> |  <p>F04-501-04</p> |
| 5 | <p>Connect the connector J525 [1] of the host machine and the cable [3] of the controller.</p> |  <p>F04-501-05</p> |
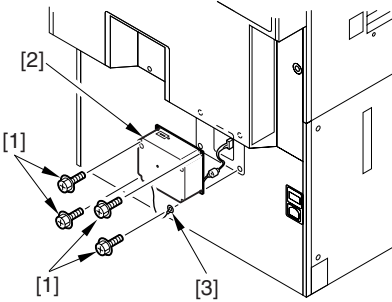
| No. | Work | Checks/remarks |
|-----|--|--|
| 6 | Mount the controller [2] using 4 screws. At this time, be sure to tighten the other terminal [3] of the grounding wire using the right lower screw. |  <p>F04-501-06</p> |

CHAPTER 5

MAINTENANCE AND INSPECTION

1 Periodically Replaced Parts

Some parts of the machine must be replaced on a periodical basis to ensure a specific level of product performance; once they fail, the consequences will be appreciable.

If possible, plan the replacement to coincide with a scheduled visit.

As of May 2001

| No. | Parts name | Parts No. | Q'ty | Life (pages) | Remarks |
|-----|--|--------------|------|--------------|--|
| 1 | Pre-transfer/transfer/separation charging wire | FB4-3687-000 | AR | 500,000* | If high temperature/humidity, every 250,000 pages. If high temperature/humidity, every 250,000 pages. If normal temperature/low humidity, every 400,000 pages. |
| | Primary charging wire | FB4-3687 | AR | 500,000* | |
| 2 | Primary grid wire | FY1-0883-000 | AR | 500,000 | |
| 3 | Main thermistor | FG6-7748 | 1 | 500,000 | |
| 4 | Sub thermistor | FH7-7464-000 | 1 | 500,000 | |
| 5 | Thermal switch unit | FG6-7745-000 | 1 | 1,000,000 | |
| 6 | Ozone filter (drum) | FB6-0776-000 | 1 | 1,000,000 | |
| 7 | Ozone filter (separation) | FB6-0397-000 | 1 | 1,000,000 | |
| 8 | Ozone filter (fixing) | FB6-0403-000 | 1 | 1,000,000 | |

Note: The above figures are estimates only, and are subject to change based on future data.


* Older type (full-plated) must not be used.

After replacing the charging wire, be sure to execute wire cleaning in service mode:

COPIER>FUNCTION>CLEANING>WIRE-CLN.

* After servicing the charging assembly, be sure to mount it back while moving the cleaning holder toward the front.

T05-100-01

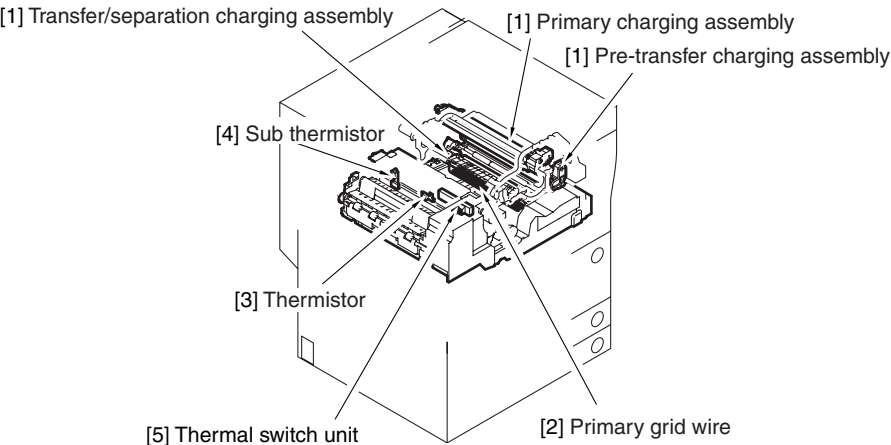

F05-100-01

2 Guide to Replacement of Durables

Some parts of the machine may prove to require replacement once or more over the period of product warranty because of wear or damage. Replace them when they fail; see the following for a guide:

2.1 Copier

As of May 2001

| No. | Parts name | Parts No. | Q'ty | Life (pages) | Remarks |
|-----|--|-----------|------|---------------------------------------|---|
| 1 | Scanning lamp | FH7-3347 | 1 | 200 hr or 150,000 activa- tions | Check in service mode: ■Period of Activation COPIER>COUNTER> DRBL-1>SCN- LMP ■Number of Activations COPIER>DISPLAY> MISC>SCAN-LMP |
| 2 | Developing cylinder | FB6-2370 | 1 | 1,000,000 | |
| 3 | Developing assembly roll | FS5-6579 | 2 | 1,000,000 | |
| 4 | Cleaner separation claw | FB4-8018 | 3 | 500,000 | |
| 5 | Cleaning blade | FB6-2720 | 1 | 1,000,000 | Use both edges, each for 500,000 pages; apply toner upon re- placement. |
| 6 | Primary charging assembly | FG6-7313 | 1 | 1,000,000 | |
| 7 | Transfer/separation charging assembly | FG6-8733 | 1 | 1,000,000 | |
| 8 | Pre-transfer charging assem- bly | FG6-7424 | 1 | 1,000,000 | |
| 9 | Primary charging wire cleaner 1 | FF5-6883 | 2 | 500,000 | If high temperature/ humidity, every 250,000 pages. |
| 10 | Primary charging wire cleaner 2 | FF5-6884 | 2 | 500,000 | If high temperature/ humidity, every 250,000 pages. |
| 11 | Transfer charging wire cleaner 1 | FF5-6883 | 1 | 500,000 | |
| 12 | Transfer charging wire cleaner 2 | FF5-6884 | 1 | 500,000 | |
| 13 | Separation charging wire cleaner | FF5-7891 | 1 | 500,000 | |

T05-201-01

| No. | Parts name | Parts No. | Q'ty | Life (pages) | Remarks |
|-----|--|---|------|--------------|--|
| 14 | Pre-transfer charging wire cleaner | FF5-9552 | 1 | 500,000 | |
| 15 | Pre-transfer charging assembly scraper | FF6-1031 | 1 | 500,000 | |
| 16 | Fixing upper roller | FB5-6930 | 1 | 500,000 | |
| 17 | Fixing lower roller | FB5-6952 | 1 | 500,000 | |
| 18 | Fixing web | FY1-1157 | 1 | 500,000 | |
| 19 | Insulating bush (front/rear) | FB5-6934 | 2 | 500,000 | Replace together with fixing upper roller. |
| 20 | Fixing roller bearing | XG9-0421 | 2 | 1,000,000 | |
| 21 | Fixing pressure roller bearing | XG9-0447 | 2 | 1,000,000 | |
| 22 | Delivery upper separation claw | FB5-3625 | 6 | 500,000 | |
| 23 | Delivery lower separation claw | FA2-9037 | 2 | 1,000,000 | |
| 24 | Pickup roller (deck, cassette) | FF5-7829 (front) FF5-7830 (rear) | 8 | 500,000 | Actual number of pages (2 pc. each). Number may be checked in service mode*: left deck: LD-PU-RL right deck: RD-PU-RL cassette 3: C3-PU-RL cassette 4: C4-PU-RL |
| 25 | Delivery roller (deck, cassette) | FB6-0615 | 8 | 500,000 | Actual number of pages (2 pc. each). Number may be checked in service mode*: left deck: LD-FD-RL right deck: RD-FD-RL cassette 3: C3-FD-RL cassette 4: C4-FD-RL |


* COPIER>COUNTER>DRBL-1.

T05-201-02


| No. | Parts name | Parts No. | Q'ty | Life (pages) | Remarks |
|-----|---|---|------|--------------|--|
| 26 | Separation roller (deck, cassette) | FB5-6586 | 4 | 500,000 | Actual number of pages processed. (1 pc. for each holder) May be checked in service mode*: left deck: LD-SP-RL right deck: RD-SP-RL cassette 3: C3-SP-RL cassette 4: C4-SP-RL |
| 27 | Pickup roller (manual feed tray) | FF9-1763 (front) FF9-1764 (rear) | 2 | 120,000 | Actual number of pages processed. May be checked in service mode*: M-UP-RL |
| 28 | Feed roller (manual feed tray) | FB4-2035 | 2 | 120,000 | Actual number of pages processed. May be checked in service mode*: MM-FD-RL |
| 29 | Separation roller (manual feed tray) | FB2-7545 | 1 | 120,000 | Actual number of pages processed. May be checked in service mode*: M-SP-RL |
| 30 | Cleaner side scraper (font) | FB5-6868 | 1 | 1,000,000 | |
| 31 | Cleaner side scarper (rear) | FB5-6869 | 1 | 1,000,000 | |

* COPIER>COUNTER>DRBL-1.

T05-201-03

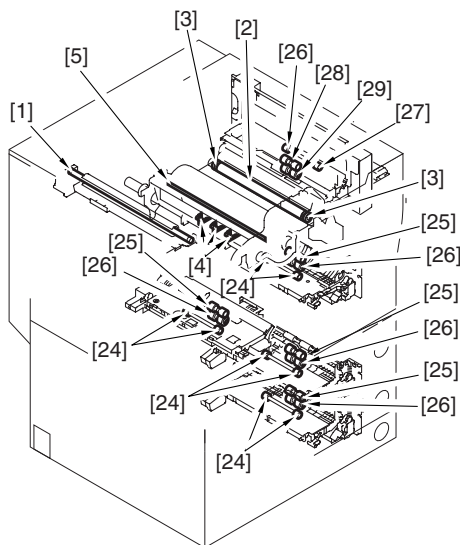

F05-201-01

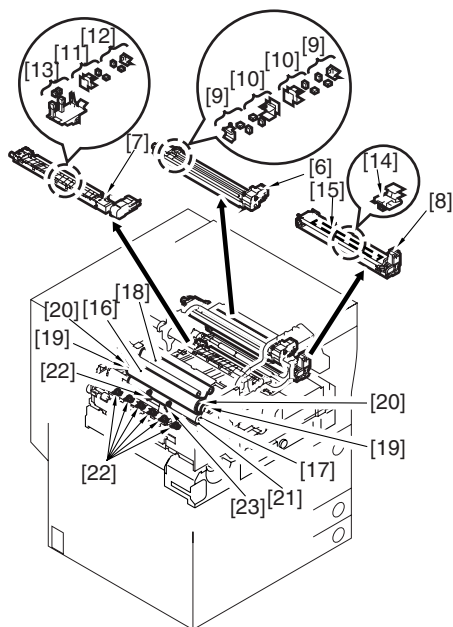


F05-201-02

2.2 Side Paper Deck

| | | | | | As of May 2001 |
|-----|-----------------------------------|---|------|--------------|--|
| No. | Parts name | Parts No. | Q'ty | Life (pages) | Remarks |
| 1 | Side Paper Deck Feed Roller | FF5-7829 (front) FF5-7830 (rear) | 2 | 500,000 | Actual number may be checked in service mode.* PD-PU-RL |
| 2 | Side Paper Deck Delivery Roller | FB6-0615 | 2 | 500,000 | Actual number may be checked in service mode.* PD-FD-RL |
| 3 | Side Paper Deck Separation Roller | FB5-6586 | 1 | 500,000 | Actual number may be checked in service mode.* PD-SP-RL |

* COPIER>COUNTER>DRBL-2.

T05-202-01

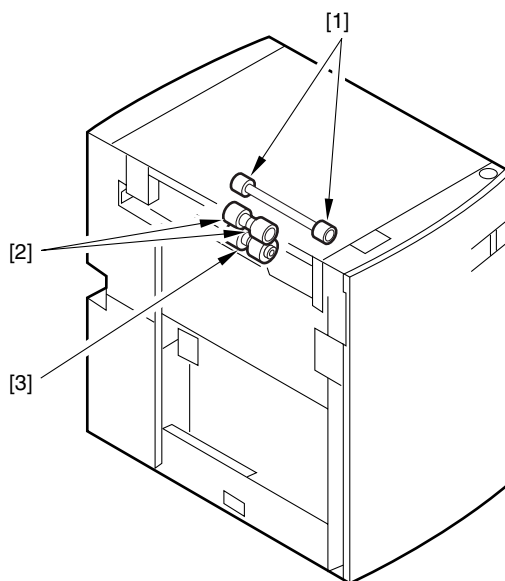

F05-202-01

3 Scheduled Service Chart



1. As a rule, provide scheduled service every 500,000 copies.
2. Check the Service Book before setting out for a visit, and take parts expected to require replacement.
3. If you have cleaned a charging wire with alcohol, check to be sure that the solvent has dried before mounting it back to the machine.
4. If the power plug is left connected for a long time in an area subject to excessive dust, humidity, or smoke (containing oil vapor), an insulation fault and, ultimately, a fire can occur (owing to the build-up of moist dust.)
Be sure to disconnect the power plug on a periodical basis, and wipe the area and the power plug clean with a dry cloth.

As of May 2001

| No. | Work | Checks | Remarks |
|-----|--|--|---|
| 1 | Meet the person in charge. | Check the general condition. | |
| 2 | Record the counter readings. | Check the faulty copies. | |
| 3 | Make test copies. | a. Image density b. Soiled background c. Character clarity d. Leading edge margin e. Fixing, displaced registration, soiled back | Standards (single-sided) Leading edge: 4.0±1.5, -1.0 mm Left/right: 2.5±1.5 mm Trailing edge: 2.5±1.5 mm |
| 4 | Clean the charging assemblies: <ul style="list-style-type: none">• Charging wire (primary, pre-transfer, transfer/separation)• Grid wire (primary charging assembly)• Shielding plate (charging assembly)• Roller electrode | | Dry wipe with lint-free paper, and clean with alcohol. |


T05-300-01



Points to Note When Cleaning/Replacing the Charging Wire or Replacing the Charging Wire Cleaner


At the end of the following work, check to be sure that the charging wire is in the middle of the charging wire cleaner; otherwise, image faults can occur:

- Cleaning the charging wire.
- Replacing the charging wire.
- Moving the charging wire cleaner by hand.
- Replacing the charging wire cleaner.

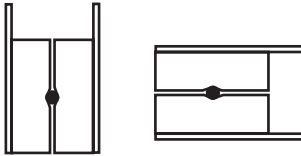

Correct

F05-300-01

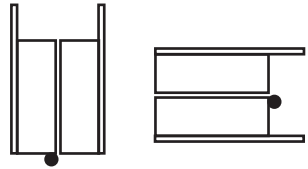




Wrong

F05-300-02

| No. | Work | Checks | Remarks |
|-----|--|--|--|
| 5 | Clean the optical assembly: <ul style="list-style-type: none"> • No. 1/2/3 mirror • Dust-proof glass • Reflecting plate • Standard white plate | | Clean with a blower brush; if dirt cannot be removed, use alcohol. |
| 6 | Check the scanner system: <ul style="list-style-type: none"> • Scanner cable • Scanner rail | Check the tension of the cable. Clean the sliding areas, and apply silicone oil (FY9-6011). | Check the scanner cable only after making the first 250,000 pages. |
| 7 | Check the waste toner case. | If the case is more than half full, dispose of the toner in a plastic bag. Or, replace the case. | |
| 8 | Clean the filters: <ul style="list-style-type: none"> • Ozone filter • Dust-proof filter | | Remove the dust from the filter surface. |
| 9 | Clean the developing assembly: <ul style="list-style-type: none"> • Developing assembly roll | Clean the developing assembly roll. | |
| 10 | Clean the pickup feeding assembly: <ul style="list-style-type: none"> • Transfer guide (upper, lower) plate • Registration roller (upper, lower) • Feeding belt • Feeding rollers • Scanner sensor cleaning (prism) | | Clean with an air blower or dry wipe. (Do not use solvent.) |
| 11 | Clean the fixing/delivery assembly: <ul style="list-style-type: none"> • Separation claw (upper, lower) • Feed rollers • Inlet guide • Web (check) • Web oil receptacle • Thermistor • Sub thermistor • Thermal switch | | |

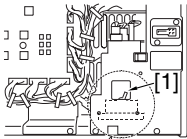T05-300-02

| No. | Work | Checks | Remarks |
|-----|--|---|---|
| 12 | Clean the cleaner assembly: • Side scraper | | |
| 13 | Clean the duplex assembly: • Duplex horizontal registration sensor | | |
| 14 | Clean the copyboard glass. | | |
| 15 | Make test copies. | | |
| 16 | Make sample copies. | | |
| 17 | Press the leakage breaker test switch to make sure that it operates normally. Thereafter, turn off the power switch, and shift the lever to the ON side; then, turn on the power switch. | With the power switch set to ON and, in addition, the lever [1] of the leakage breaker in ON state, press the test switch. If normal, the lever should flip to the OFF side, cutting the power. (Pay attention to its orientation when replacing it.) If you have replaced the leakage breaker, be sure to make this check. |   <p>F05-300-03</p> |
| |  <p>Check to make sure that the grounding is correct. Otherwise, possible leakage will not turn on the leakage breaker.</p> | | |
| 18 | Put the sample copies into order, and clean up the area around the machine. | | |
| 19 | Record the last counter readings. | | |
| 20 | Fill out the Service Book, and report to the person in charge. | Be user to describe the check on the leakage breaker in the Service Book. | |

T05-300-03

4 Scheduled Service Items



Do not use solvents or oils not indicated herein.

4.1 Copier

△: Clean ●: Replace ×: Lubricate □: Adjust ◎: Check

| Unit | Location | Service interval | | | Remarks |
|--------------------------------|---|-------------------|------------------|--------------------|--|
| | | installa- tion | every 500,000 | every 1,000,000 | |
| Externals and con- trols | Copyboard glass | | △ | | |
| | Ozone filter (FM2, FM8, FM19) | | △ | ● | Remove dust from the filter surface. See F05-401-01. |
| | Dust filter (FM1 (2 pc.), FM3, FM10, front cover, upper front cover) | | △ | | Remove dust from the filter surface. See F05-401-01. |
| Scanner system | Scanner wire | | ◎ □ | | Check only at initial 500,000 pages. |
| | Scanner rail | | △ × | | Use silicone oil S-20 (FY9-6011) |
| Optical system | No. 1 to No. 3 mir- rors | | △ | | |
| | Dust-proof glass | | △ | | |
| | Reflecting plate | | △ | | |
| | Standard white plate | | △ | | |
| | Pre-transfer expo- sure LED | △ | ● | | |


T05-401-01

| Unit | Location | Service interval | | | Remarks |
|-------------------------------|---|-------------------|------------------|--------------------|---|
| | | installa- tion | every 500,000 | every 1,000,000 | |
| Charging assembly | Charging wire (primary) | △ | ● | | If high temperature/humid- ity, every 250,000 pages. |
| | Charging wire (transfer/separa- tion) | △ | ● | | If high temperature/humid- ity, every 250,000 pages. |
| | Charging wire (Pre- transfer) | △ | ● | | If high temperature/humid- ity, every 250,000 pages. If normal temperature/low humidity, every 400,000 pages. |
| | Grid wire (primary) | △ | ● | | |
| | Charging assembly shielding plate | △ | △ | | If high temperature/humid- ity, every 250,000 pages. |
| | Electrode | △ | △ | | If high temperature/humid- ity, every 250,000 pages. |
| Photo- sensitive drum | Photosensitive drum | | △ | | Clean with alcohol and drum cleaning powder (CK- 0429). For instructions, see 4.2>4.2.2 work 2. |
| | Electrode for stop ring (drum heater) | | | △ × | Clean the following with alcohol; then, apply FY9- 67008 to the dust-collecting brush: <ul style="list-style-type: none"> • Electrode of slip spring • Wall surface of protrusion (electrode) • Dust-collection brush |
| Develop- ing as- sembly | Developing cylin- der | ◎ | | | |
| | Developing roll | | △ | | |
| Cleaner | Side scraper | | △ | | For instructions, see 4.2>4.2.1 work 1. |
| | Toner receptacle (rear/front) | | △ | | For instructions, see 4.2>4.2.1 work 1. |
| | Magnet roller | | △ | | For instructions, see 4.2>4.2.2>work 2. |

T05-401-02

| Unit | Location | Service interval | | | Remarks |
|---|--|-------------------|------------------|--------------------|---|
| | | installa- tion | every 500,000 | every 1,000,000 | |
| Fixing assembly | Inlet guide | | △ | | |
| | Web | ◎ | | | |
| | Oil receptacle | | △ | | |
| | Thermistor | | ● | | |
| | Sub thermistor | | ● | | |
| | Thermal switch | | | ● | |
| Scanner sensor | Sensor | | △ | | If high temperature/humid- ity, every 250,000 pages. |
| | Prism | | △ | | If high temperature/humid- ity, every 250,000 pages. |
| Waste toner collect- ing as- sembly | Waste toner case | | ◎ | | Check and dispose of the toner as necessary. |
| Pickup/ feeding assembly | Transfer guide | | △ | | |
| | Registration roller (upper, lower) | | △ | | |
| | Feeding belt | | △ | | |
| | Feeding rollers | | △ | | |
| Duplex assembly | Duplex horizontal registration sensor | | △ | | |
| | Duplex roller | | △ | | |

T05-401-03

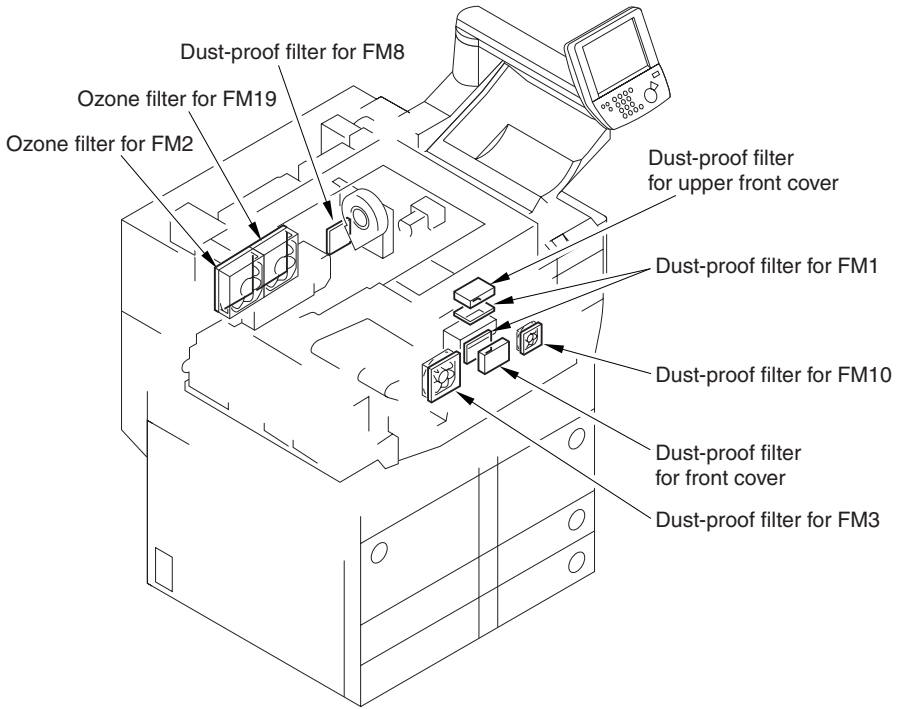

F05-401-01

4.2 Scheduled Service Work

Perform the following when maintaining the area around the drum as part of scheduled service work:

4.2.1 Work 1

- a. Cleaning the side scraper assembly
- b. Cleaning the toner receptacle




During the work, take care not to rotate the magnet roller drive assembly. Otherwise, waste toner will drop from the cleaner assembly.

- 1) Slide out the process unit. (See 5.8.1 in Chapter 2.)




Be sure to place a protective sheet over the fixing/feeder unit.

- 2) Take out the photosensitive drum.
- 3) Take out the cleaner blade assembly.
- 4) While keeping the magnet roller [1] and the scraper [2] at the front, move the build-up of waste toner with a piece of paper [3] or the like toward the feedscrew rear.

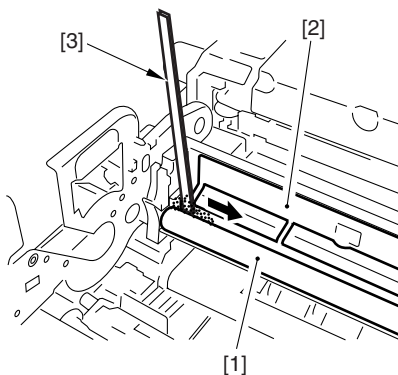


F05-402-01

- 5) Release the locks [1] of the slide rail, and draw the fixing/feeding unit [2] farthr to the front.

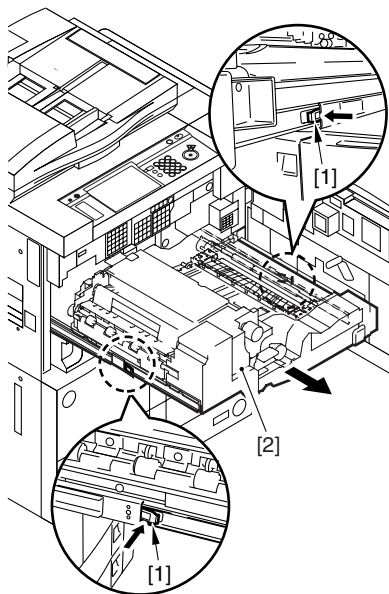


F05-402-02

- 6) With the cleaner assembly [1] halfway slid put, remove the screw [2] (1 each), and detach the two toner receptacle fixing plates [3].
- 7) Remove the front toner receptacle, and remove the toner from the front toner receptacle [4].

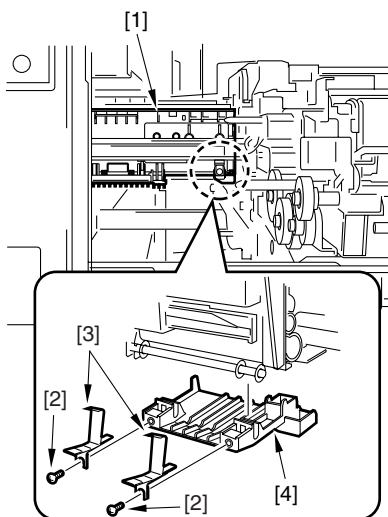

F05-402-03

- 8) Slide out the cleaner assembly [1], and remove the screw [2] (1 each); then, detach the two toner receptacle fixing plates [3].
- 9) Remove the rear toner receptacle, and remove the toner from the rear toner receptacle [4].

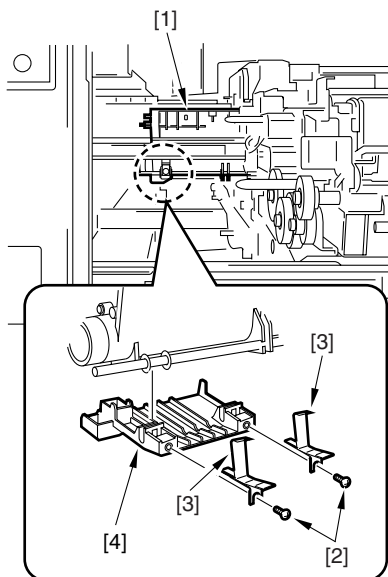

F05-402-04

4.2.2 Work 2

- a. Cleaning the photosensitive drum
- b. Removing the toner from the magnet roller assembly
- c. Turning over or replacing the cleaner blade




During the work, take care not to turn the magnet roller drive assembly. Otherwise, waste toner can drop from the cleaner assembly.

- 1) Slide out the process unit. (See 5.7.1 in Chapter 2.)



Be sure to place a drum protective sheet over the fixing/feeding unit.

- 2) Remove the photosensitive drum.
- 3) Moisten lint-free paper [1] with 5 to 10 cc of alcohol [2], and collect 0.2 to 0.3 g of drum cleaning powder (CK-0429) [3] with the lint-free paper.

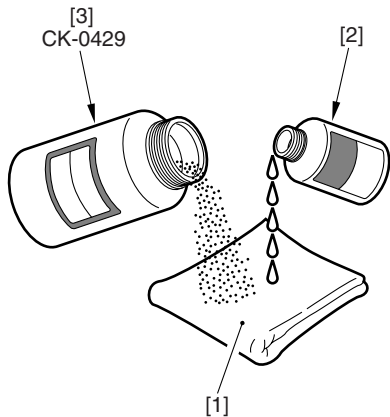


F05-402-05

- 4) While forcing the lint-free paper against the photosensitive drum, wipe the drum as if to rub it from the front to the rear and then from the rear to the front with force.




- Clean the drum in widths of 5 to 10 cm in peripheral direction.
- For a single width, you may force the lint-free paper back and forth 15 to 20 times without damaging the drum.

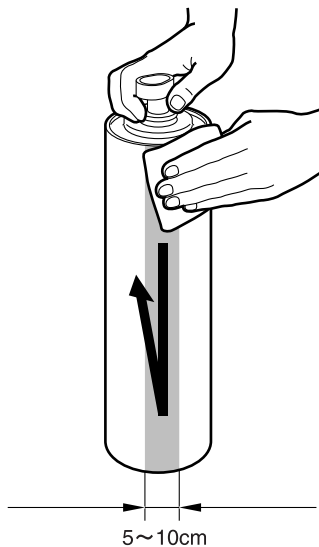

F05-402-06

- 5) Wait until the alcohol has evaporated; then, dry wipe the drum with lint-free paper. If traces remain, repeat step 4) and increase the number of trips made.
- 6) Rotate the drum so that new areas may be cleaned (5 to 10 cm). Repeat steps 3) to 5) until the entire surface of the drum has been cleaned.
- 7) Remove the cleaning blade assembly.

- 8) Insert a ruler [3] between the magnet roller [1] and the scraper [2]; then, move it from the front to the rear and then from the rear to the front to break the caking toner.
- 9) Turn the magnet roller [1] to make sure that the coating of waste toner is even. If as follows, repeat step 8):
 - The surface of the magnet roller is coated in distinct lines.
 - The surface has dents in some areas.
 - The surface has lumps of toner.

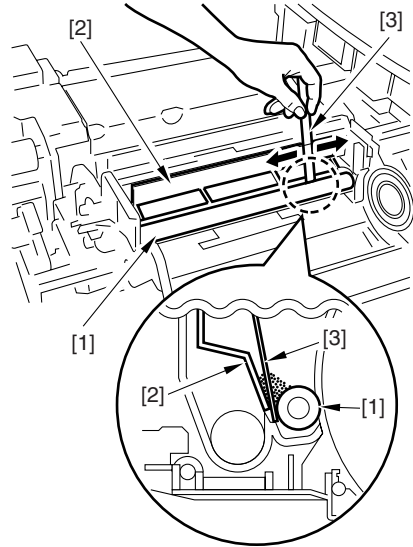


F05-402-07

- 10) Remove the cleaning blade from the cleaning blade assembly. (See 5.8.2.b in Chapter 2.)
- 11) Butt the edge of the cleaning blade [7] that has been turned over or newly mounted against the rear of the blade cleaning plate [8].



When butting the blade, be sure to force it so that there is no gap.

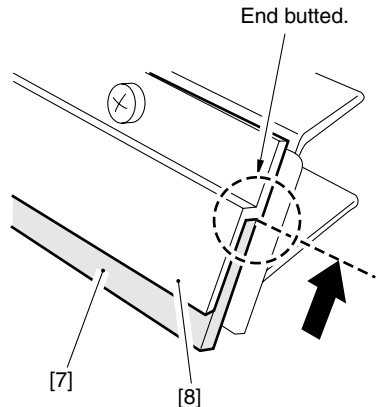


F05-402-08

- 12) Secure the blade retaining plate with screws as indicated.
- For now, temporarily tighten screws 1 through 5.



With the blade pressed down by the plate, temporarily tighten the screws.

- Fully tighten screws 6 through 10.

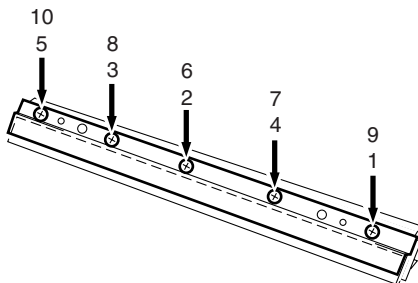

F05-402-09


- 13) Apply toner to the area of the cleaning blade coming into contact with the photosensitive drum, and mount the cleaning blade.



When mounting the cleaning blade, be sure to put the blade sub plate between the blade support plate and the blade back plate.



After mounting the cleaning blade, rotate the drum; if the toner is not collected by the cleaning blade, repeat the foregoing steps. If it is not corrected after tightening the screws once again, replace the cleaning blade.

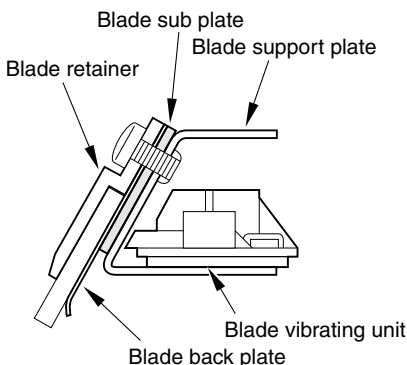

F05-402-10

CHAPTER 6

TROUBLESHOOTING

1 Guide to the Troubleshooting Tables


The troubleshooting tables used in this chapter are based on commonly found troubleshooting flow charts; study the following for an idea of how to use the tables:

EX: The AC power is absent.

| | |
|-------------------|--|
| Power plug | 1) Is the power plug connected? NO: Connect the plug. |
| Covers | 2) Is the front cover closed properly? NO: Close the cover. |
| Main power supply | 3) Is the rated voltage present at the outlet? NO: The problem is not of the copier. Advise the user. |
| ----- | 4) Is the rated voltage present between J1-1 and J1-2? (J1 is found near the power cord base.) YES: Go to step 6). |

Rest omitted.

- To find out the possible cause (faulty part) of a specific problem, see the “Cause” column of the table. In the case of the above, i.e., “absence of AC power,” suspect that the power plug may be disconnected, the front cover may not be closed properly, or the main power supply is absent.
- To find out checks to make and actions to take for a specific problem, make the check indicated under “Checks” and answer the question in terms of “YES” or “NO”; if yes, take the action indicated, otherwise, go to the next step.

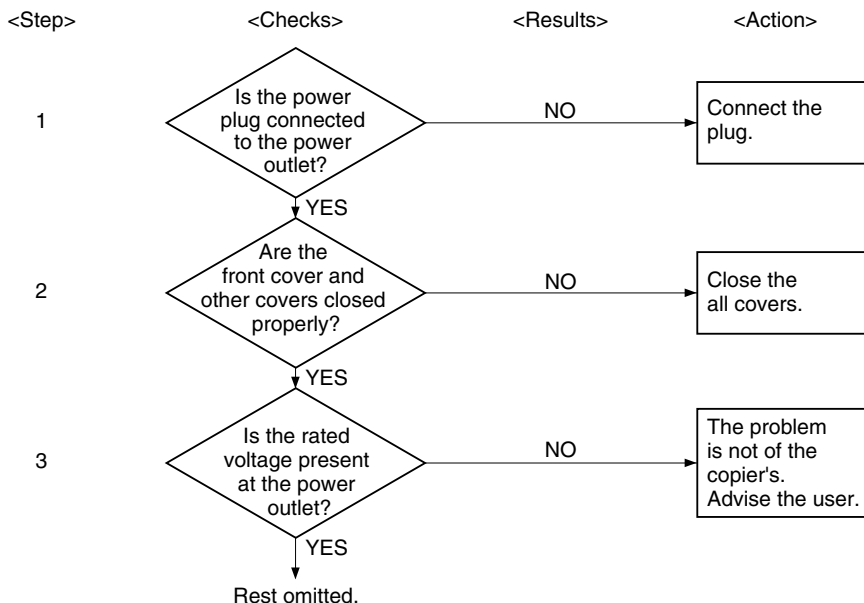


F06-100-01

- When checking the voltage using a meter, you may encounter an expression like the following: “Measure the voltage between J109-1 (+) and -2 (–) on the DC controller PCB,” the symbol (+) indicating the positive probe of the meter, while the symbol (–) indicating the negative probe of the meter.

In the case of the example, you are expected to connect the positive probe to J109-1 and the negative probe to J109-2.


1.1 Image Adjustment Basic Procedure

1.1.1 Making Pre-Checks

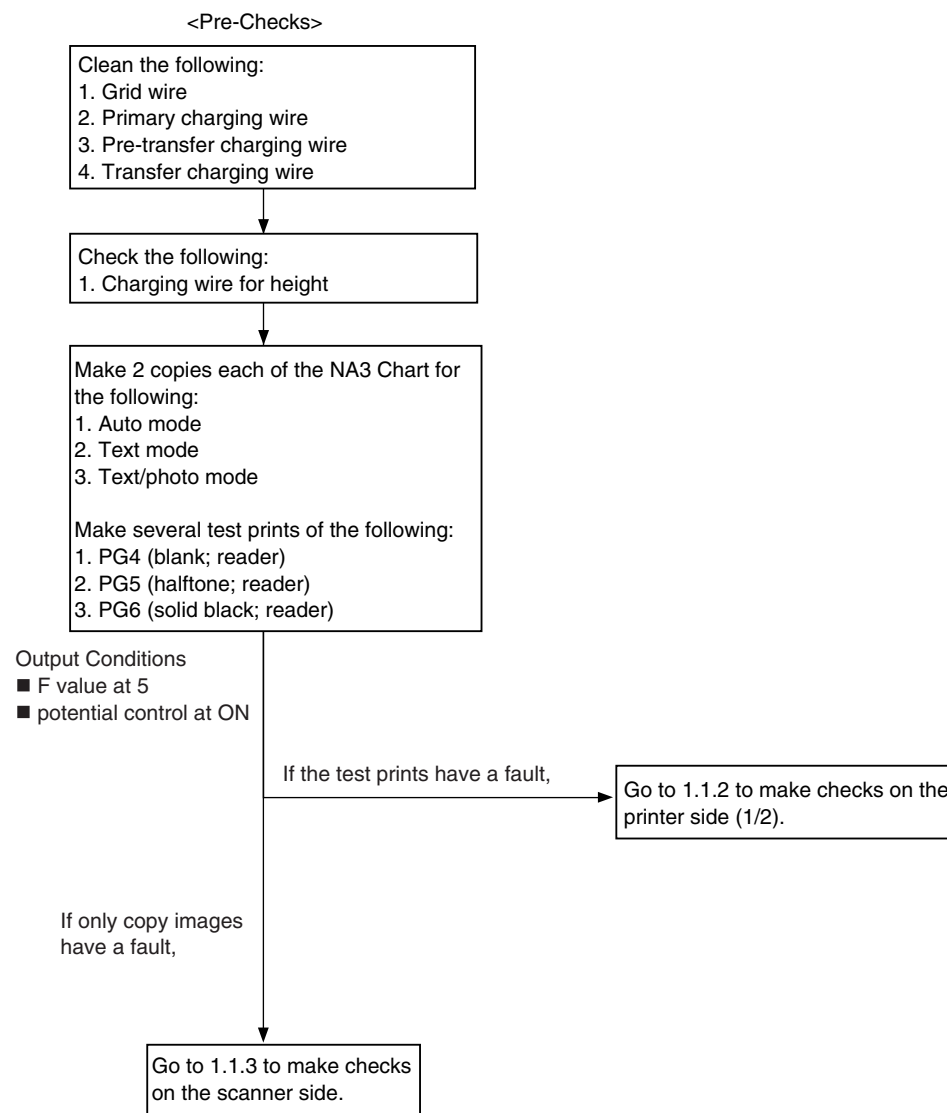


F06-101-01

1.1.2 Making Checks on the Printer Side (1/2)

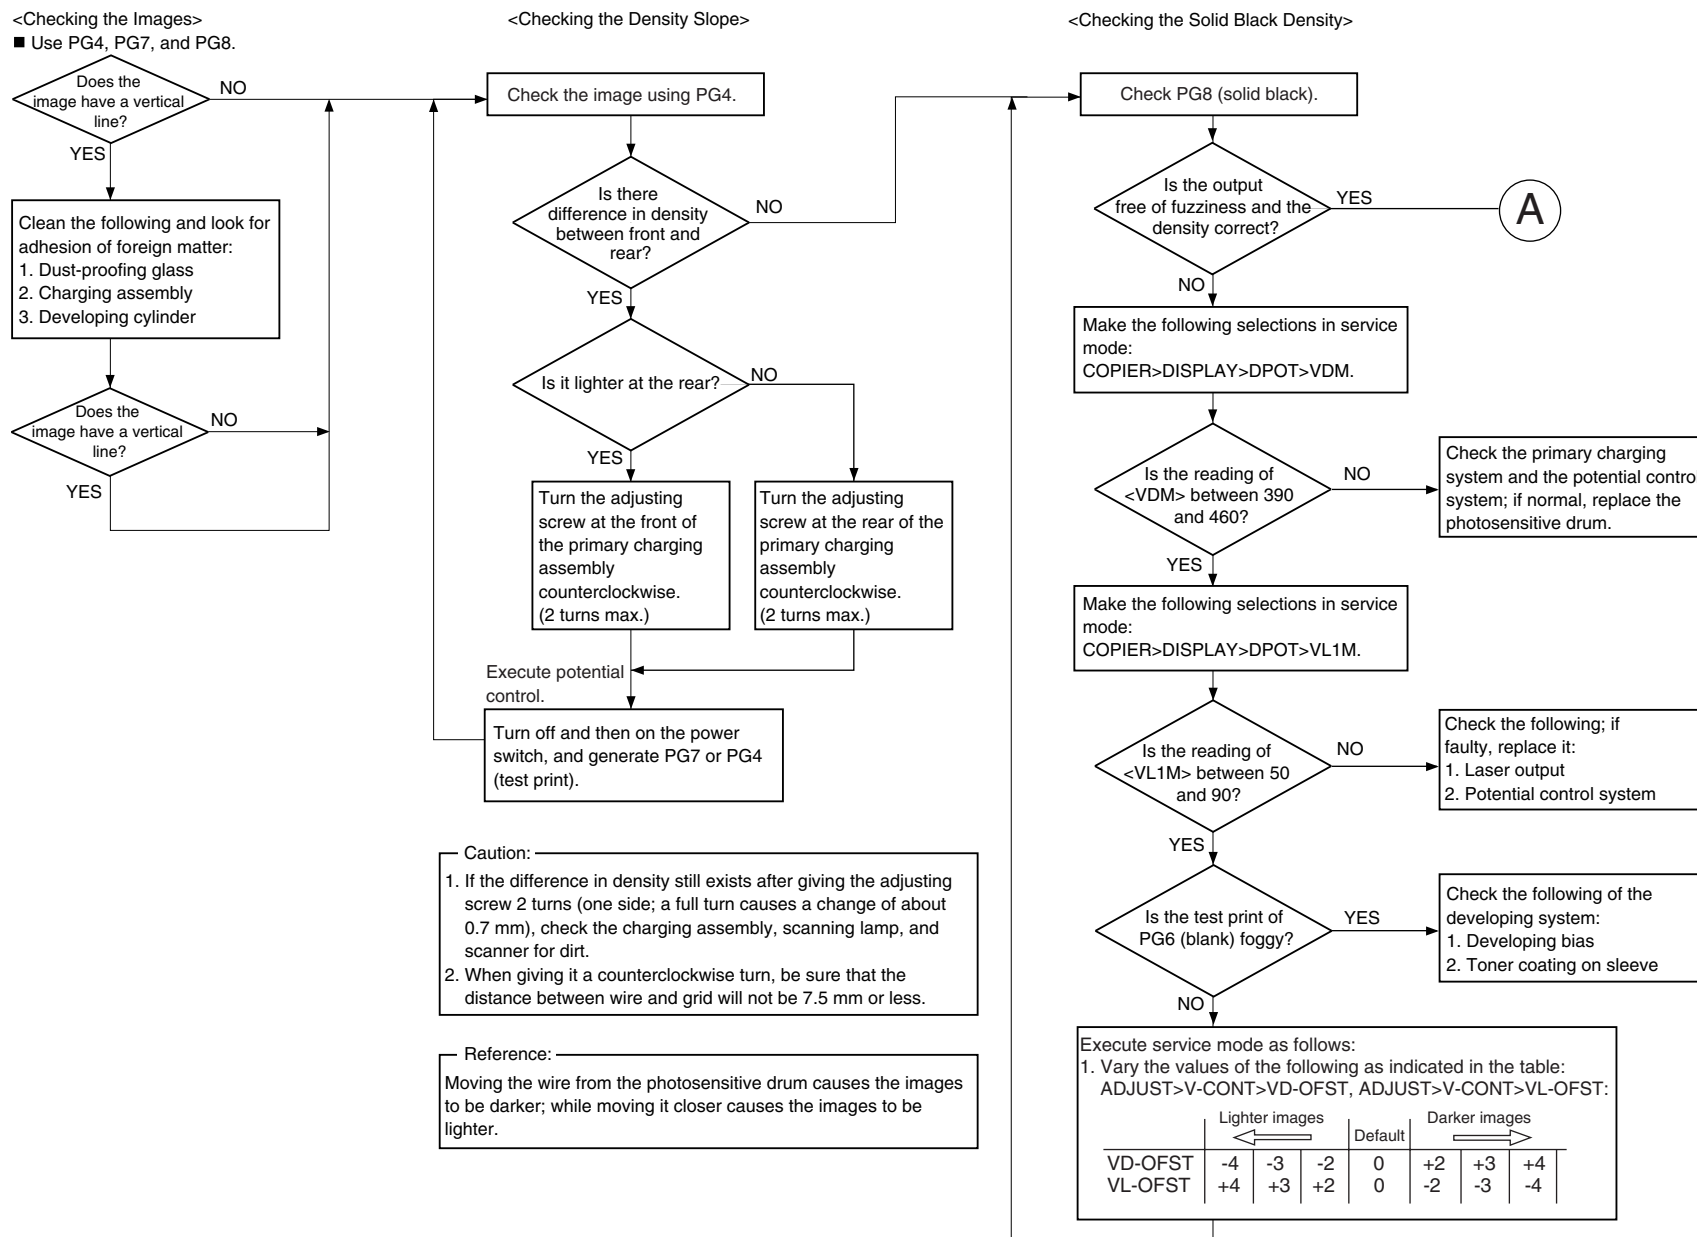


1.1.3 Making Checks on the Printer Side (2/2)

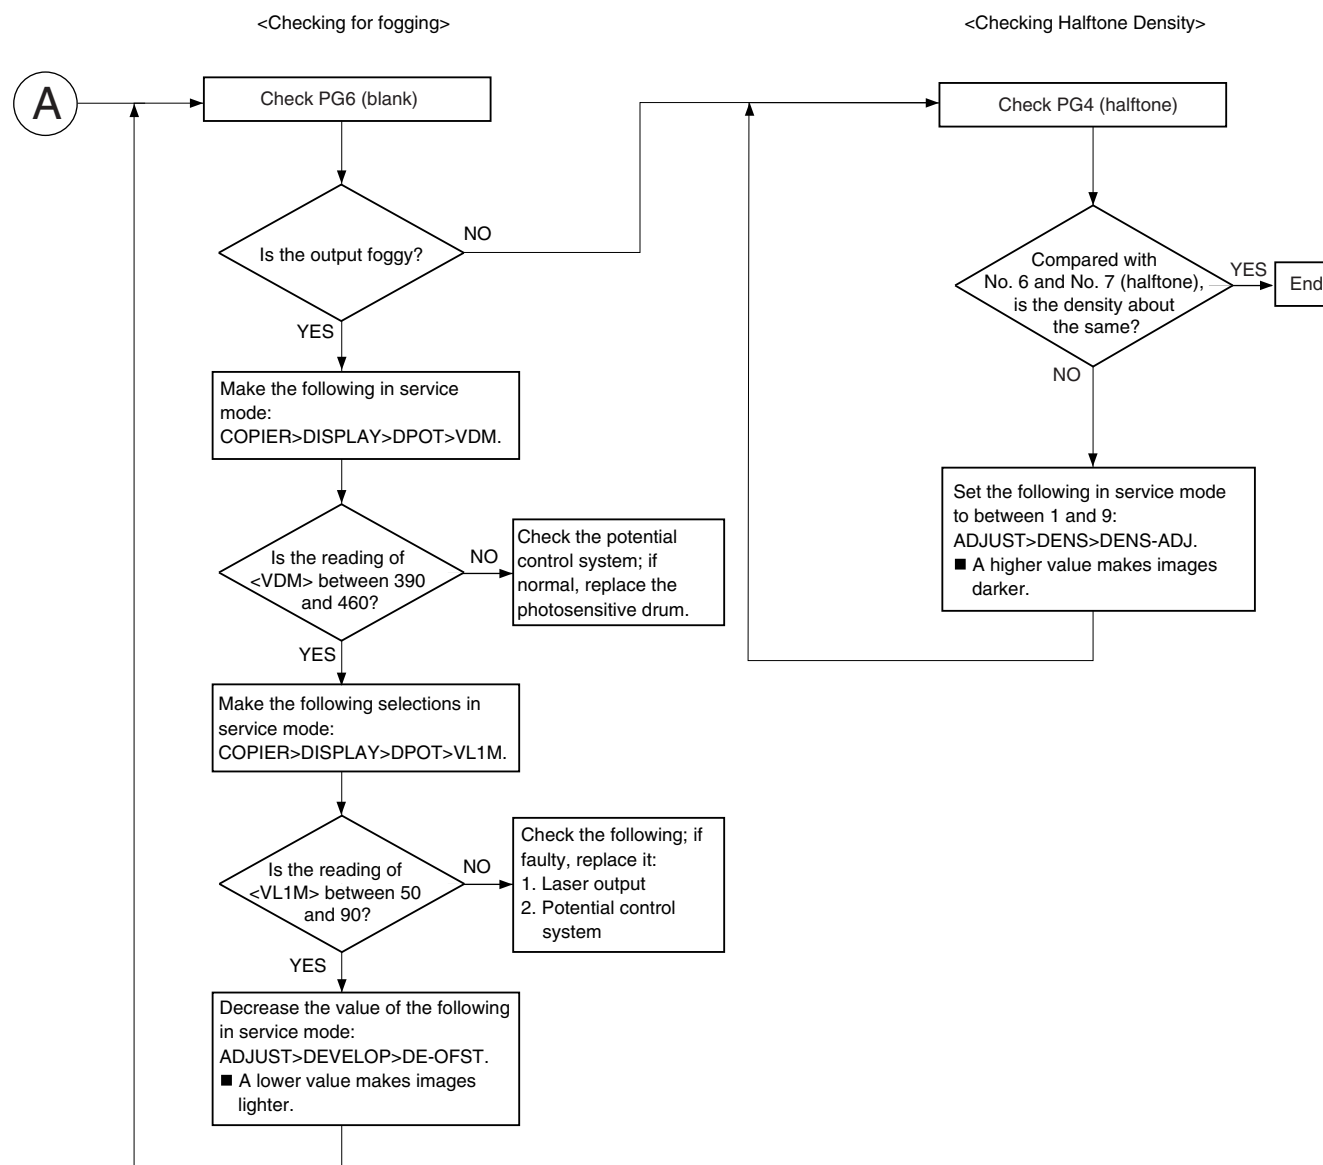

F06-101-03

1.1.4 Making Checks on the Scanner Side

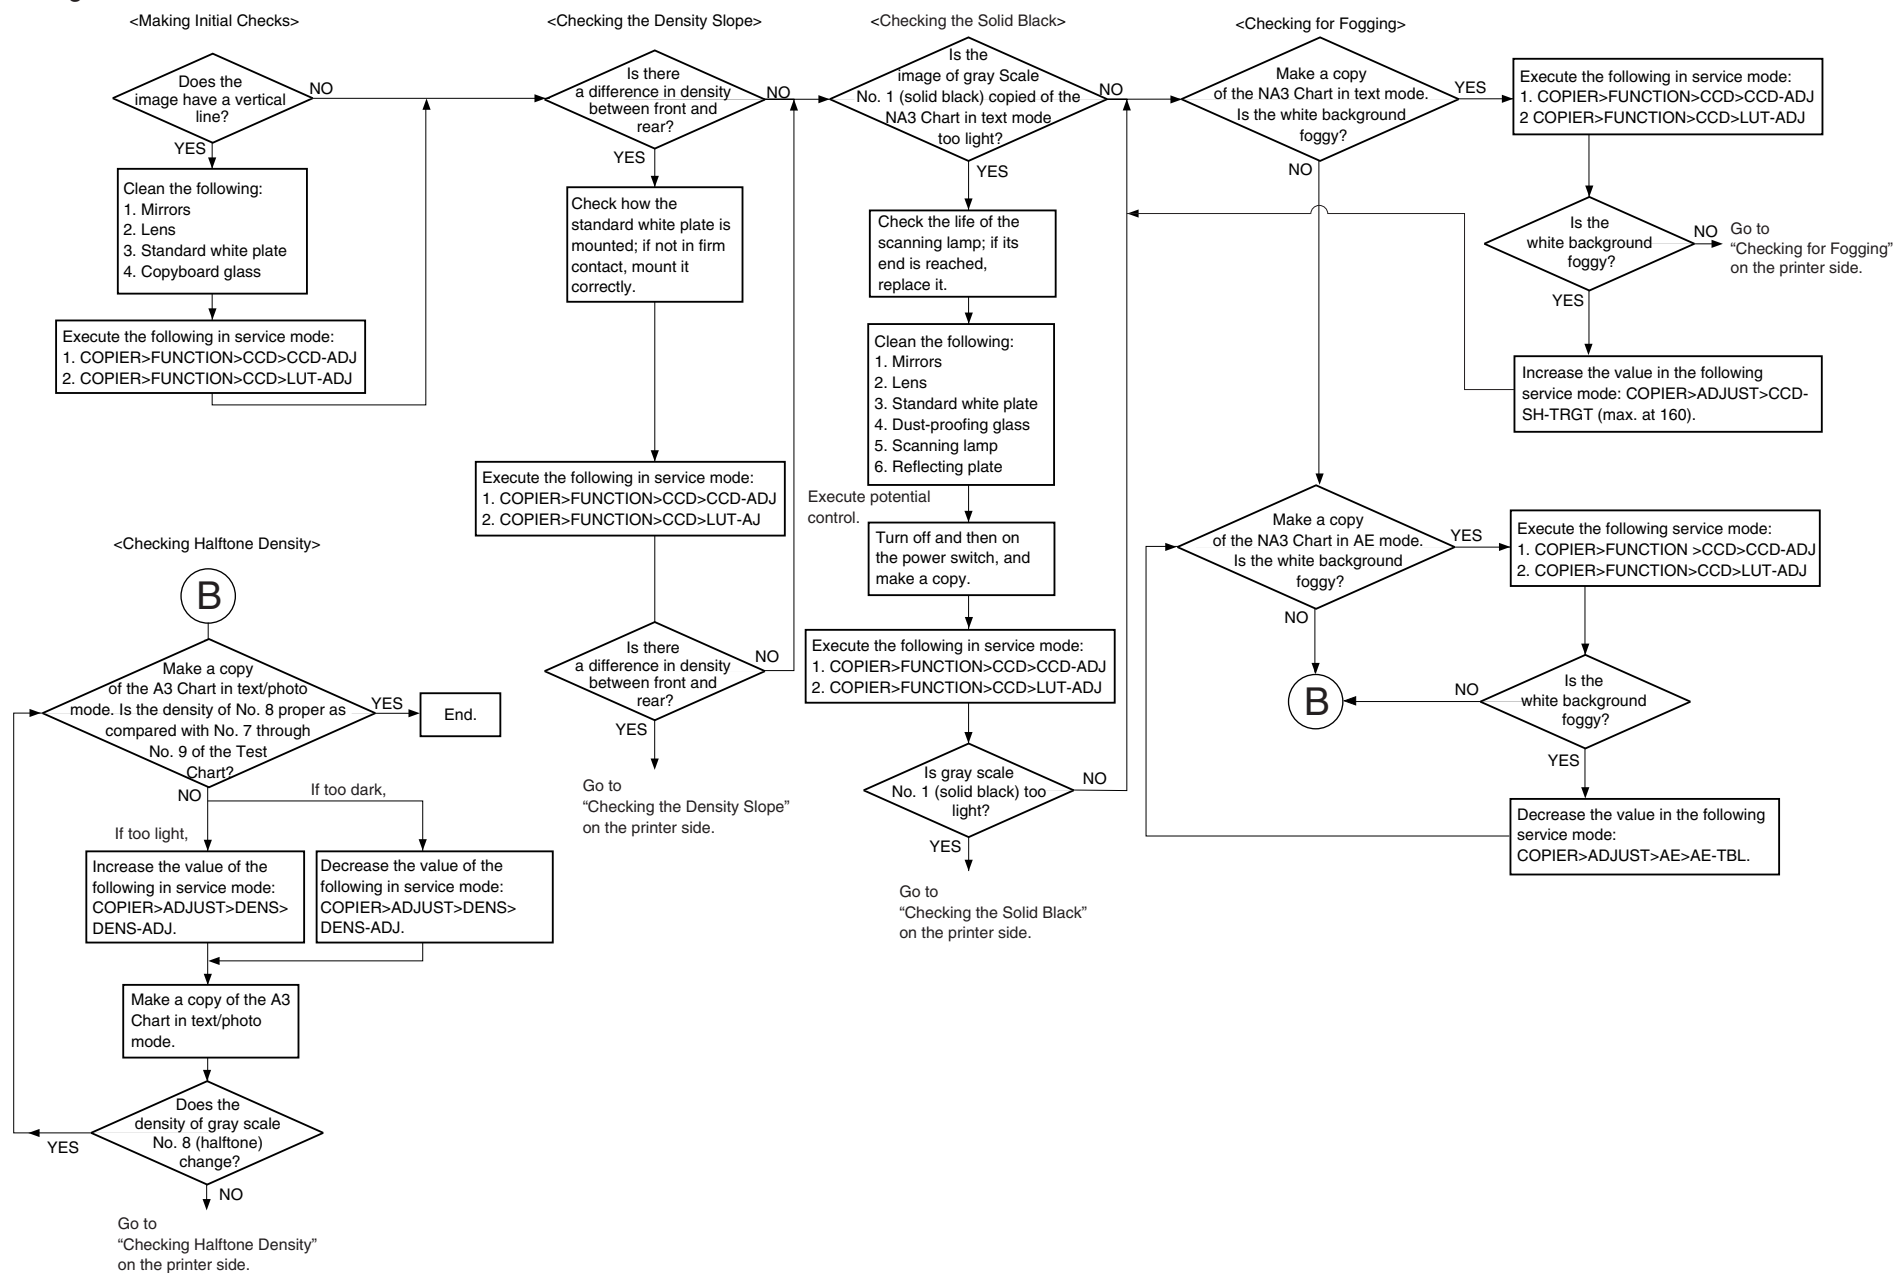


Caution:

- Be sure to check the block (front, rear) for melting, thermal deformation, cracking, or discoloration caused by leakage. If found, be sure to replace it with a new one without delay.
- Be sure to check and clean the block (front, rear) thoroughly (all the way to its inside).
- Never use a cloth carrying any metal powder.
- Unless specifically indicated, do not use a moist cloth. Use lint-free paper to dry wipe, and use alcohol thereafter. Be sure that the alcohol has completely evaporated before fitting the part back into the machine.
- Be sure to provide scheduled servicing and replace periodically replaced parts at specific intervals.

| Part | Tool/agent | Work/remarks |
|-----------------------------|---------------------------------|---|
| Pre-exposure map | Alcohol | Cleaning |
| Copyboard glass | Alcohol | Cleaning |
| Scanning lamp | Lint-free paper | Dry wiping |
| Standard white plate | Lint-free paper | Dry wiping |
| Reflecting plate | Blower brush | Cleaning |
| No. 1 through No. 3 mirrors | Blower brush or lint-free paper | Cleaning or using blower brush; if dirt is excessive, dry wiping with lint-free paper |

| Part | Tool/agent | Work/remarks |
|--|-------------------------------|--------------|
| Separation claw | Solvent and lint-free paper | Cleaning |
| Upper roller, Lower roller | Cleaning oil, lint-free paper | Cleaning |
| Paper guide | Solvent and lint-free paper | Cleaning |
| Feeding assembly | Moist cloth (Note 1) | Cleaning |
| Feeding assembly | | Cleaning |
| Re-pickup assembly, Reversing roller | Alcohol and lint-free paper | Cleaning |
| Re-pickup assembly, Pickup roller, Registration roller | Alcohol and lint-free paper | Cleaning |

Note 1: Be sure not to leave any droplets of water.

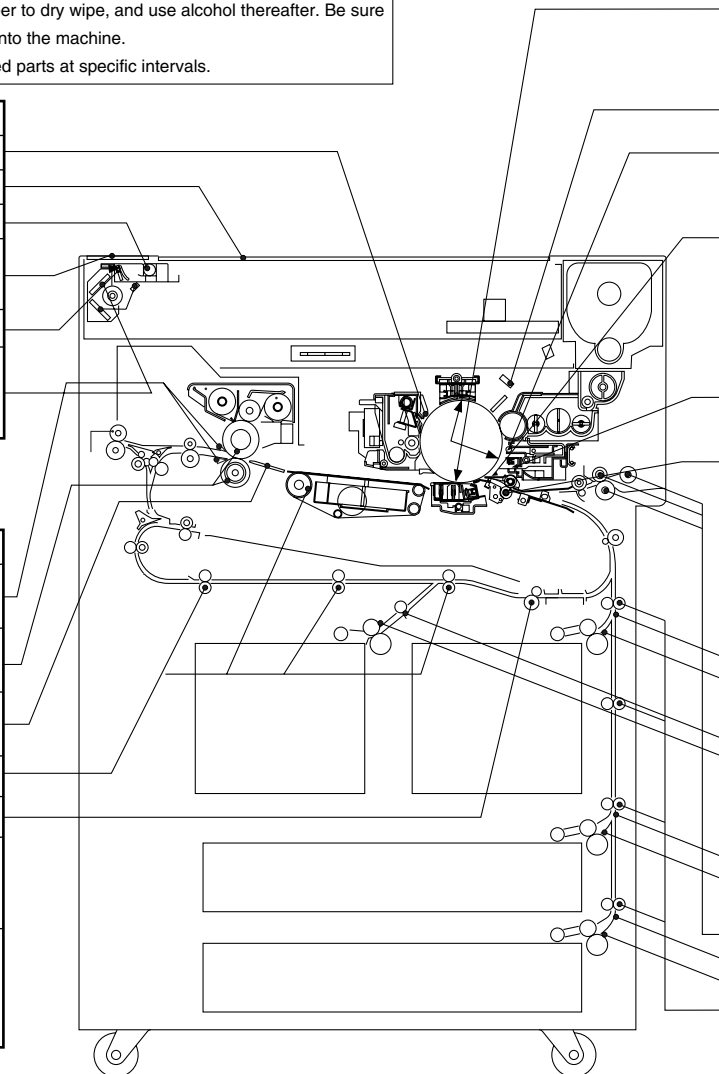

| Part | Tool/agent | Work/remarks |
|--|-----------------------------|--|
| Primary charging assembly, Transfer/separation charging assembly, Pre-transfer charging assembly | Alcohol and lint-free paper | Dry wiping; then, cleaning with lint-free paper moistened with alcohol |
| Dust-proofing glass | Lint-free paper | Cleaning |
| Dust-collecting roller | | Disposing of toner trapped dust-collecting roller |
| Transfer guide (upper, lower) | Alcohol and lint-free paper | Dry wiping; then, cleaning with lint-free paper moistened with alcohol |
| Pre-transfer exposure lamp | Alcohol and lint-free paper | Dry wiping; then, cleaning with lint-free paper moistened with alcohol |
| Developing assembly base | Moist cloth (Note 1) | Cleaning |
| Registration roller | Alcohol and lint-free paper | Cleaning |

Note 1: Be sure not to leave droplets of water.

| Part | Tool/agent | Work/remarks |
|---|---------------------------------|--|
| Prism (pickup sensor) (feeding sensor) (vertical path sensor) | Blower brush or lint-free paper | <ul style="list-style-type: none"> • Cleaning with lower brush • If dirt is excessive, dry wiping with lint-free paper (Do not use solvents other than the one indicated.) |

| Part | Tool/agent | Work/remarks |
|--|-----------------------------|--------------|
| Manual feed tray, Pickup roller, Feed roller | Alcohol and lint-free paper | Cleaning |
| Vertical path roller | Alcohol and lint-free paper | Cleaning |

F06-101-05

2 Standards and Adjustments

2.1 Image Adjustment-Related Items


Adjusting the Image Position

Be sure to adjust the image position in the following sequence:

1. image position adjustment of printer output
2. image position adjustment for copier output (book mode)
3. image position adjustment for copier output (ADF mode)

2.1.1 Adjusting the Image Position for Printer Output

Image Position Standards

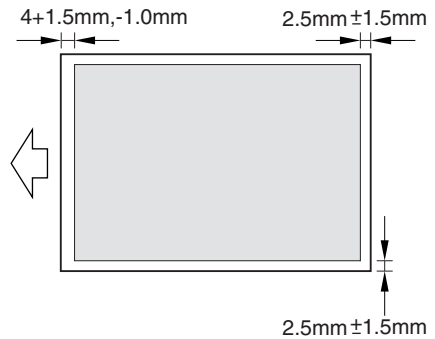

F06-201-01

1) Adjusting the Image Position in Main Scanning Direction

Check to make sure that the value for the following matches that indicated on the service label: COPIER>ADJUST>LASER>PVE-OFST. If different, enter the value indicated on the service label.



The value is used to center the image position on the photosensitive drum. Changing the value can cause deformation at the edge of an image.

- 2) Check to make sure that the value of the following is '106':
COPIER>ADJUST>BLANK>BLANK-T. If not, enter '106'.
- 3) Adjusting the Image Leading Edge Margin


Generate output using the following to check the image leading edge margin:

COPIER>TEST>PG5>

Standard: 4 +1.5 mm, -1.0 mm

Adjustment: COPIER>ADJUST>FEED-ADJ>REGIST

- A higher value increases the margin.
- A lower value decreases the margin.

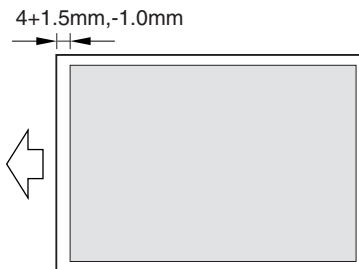


F06-201-02

- 4) Adjusting the Image Trailing Edge Margin
- Generate output of the following to check the image trailing edge margin:
COPIER>TEST>PG5.

Standard: 2.5 ±1.5 mm

Adjustment: COPIER>ADJUST>BLANK>BLANK-B

- A higher value increases the margin.
- A lower value decreases the margin.

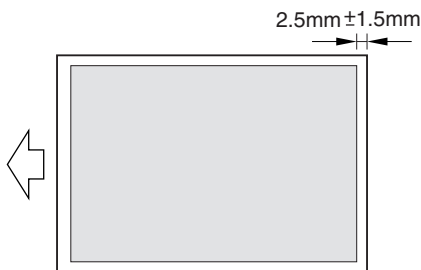

F06-201-03

5) Adjusting the Image Front Margin for Each Source of Paper

Make the following selections to select '1' (right deck): COPIER>TEST>PG-PICK.

Then, generate the following to check the image front margin: COPIER>TEST>PG56.

Likewise, make the following selections to select '2', '3', '4', and '8':

COPIER>TEST>PG5. Then, generate COPIER>TEST>PG5 to check the image front margin.


Standard: 2.5 ± 1.5 mm

PG-PICK 1: right deck

PG-PICK 2: left deck

PG-PICK 3: cassette 3

PG-PICK 4: cassette 4

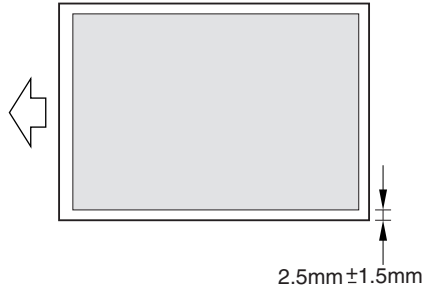


F06-201-04

Adjustment: Adjusting the Fixing Position of Each Source of Paper


■ Front Deck (left, right)

- 1) Slide out the deck, and loosen the 4 screws [2] and the 2 fixing screws [3] of the cassette front cover [1].

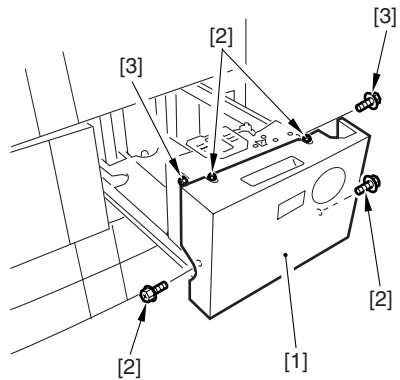

F06-201-05


- 2) Move the cassette guide assembly (front) [4] to the front or the rear to make adjustments.

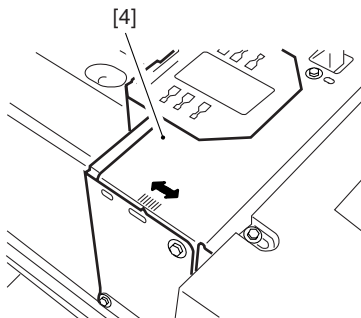

F06-201-06


■ Cassette (3/4)

- 1) Slide out the cassette, and remove the 2 screws [2] for the cassette front cover [1].

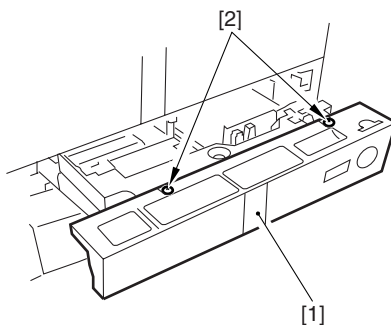

F06-201-07

- 2) Loosen the 2 fixing screws [3] found on the left/right of the cassette, and adjust the position using the fixing screw [4].

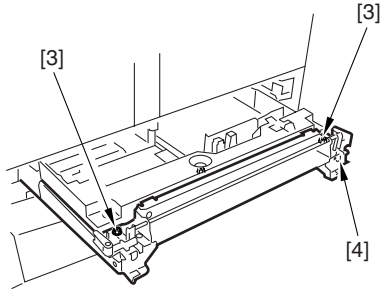

F06-201-08



If you have adjusted the cassette 3 or cassette 4, be sure to execute the following:

- If you have replaced the cassette 3,
COPIER>ADJUST>CST-ADJ>C3-STMTR
COPIER>ADJUST>CST-ADJ>C3-A4R

- If you have replaced the cassette 4,
COPIER>ADJUST>CST-ADJ>C4-STMTR
COPIER>ADJUST>CST-ADJ>C4-A4R

2.1.2 Adjusting the Image Position of Copier Output (book mode)



Make these adjustments only after you have adjusted the image position of printer output.


1) Adjusting the Image Leading Edge Non-Image Width

Place the NA3 Test Chart on the copyboard glass, and make a copy to check the image leading edge non-image width:

Standard: 4 ± 1.5 mm, -1.0 mm

Adjustment: COPIER>ADJUST>ADJ-XY>ADJ-X

- A higher value increases the margin.
- A lower value decreases the margin.

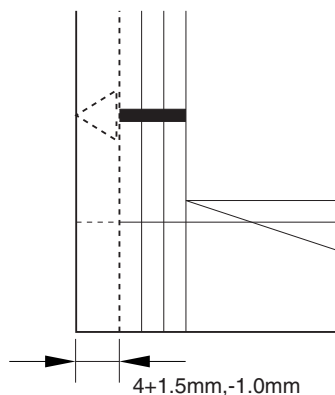

F06-201-09


2) Adjusting the Image Front Non-Image Width

Place the NA3 Test Chart on the copyboard glass, and make a copy to check the image front non-image width.

Standard: 2.5 ± 1.5 mm

Adjustment: COPIER>ADJUST>ADJ-XY>ADJ-Y

- A higher value increases the margin.
- A lower value decreases the margin.

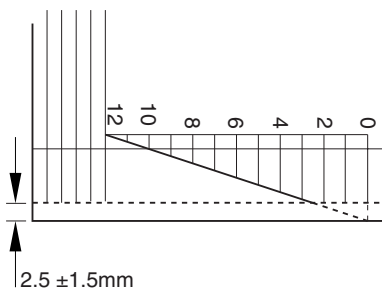

F06-201-10


3) Adjusting the Image Front Non-Image Width of Double-Sided Copy Images

Place the NA3 Test Chart on the copyboard glass, and make a double-sided copy to check the front non-image width of the 2nd side.

Standard: 2.5 ± 2.0 mm

Adjustment: COPIER>ADJUST>FEED-ADJ>ADJ-REFER

- A higher value increases the margin.
- A lower value decreases the margin.

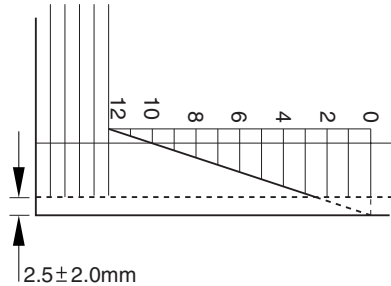


F06-201-11

4) Adjusting the Image Front Margin for the Manual Feed Tray and the Side Paper Deck (accessory)

Place the NA3 Test Chart on the copyboard glass, and make a double-sided copy to check the front non-image width of the 2nd side image.

Standard: 2.5 ± 1.5 mm

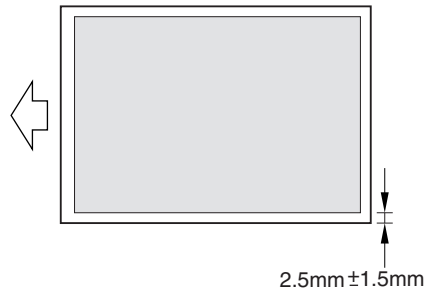


F06-201-12

Adjustment: Adjusting the Fixing Plate of Each Source of Paper

■ Manual Feed Tray


- 1) Loosen the 2 mounting screws [1] of the manual feed tray to adjust the manual feed tray position.

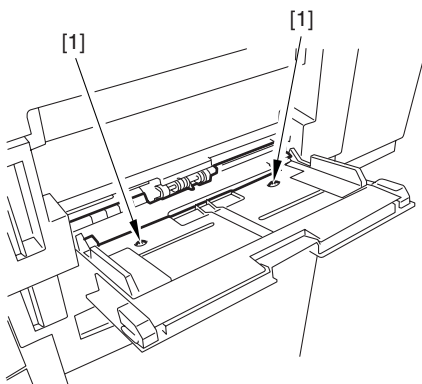

F06-201-13

■ Side Paper Deck (accessory)

- 1) Slide out the compartment, and adjust the position of the latch plate [1] of the deck open solenoid using the 2 screws [2]. (At this time, use the index [3] on the latch plate as a reference.)

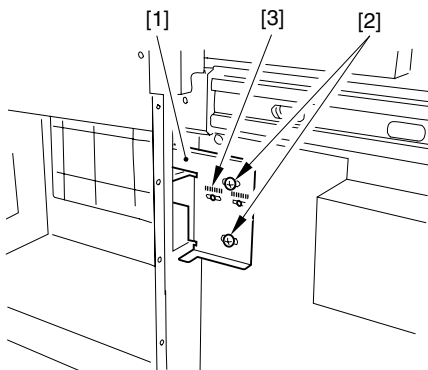

F06-201-14

2.1.3 Adjusting the Image Position of Copier Output (ADF mode)



Make these adjustments after you have adjusted the “image position of printer output” and the “image position of copier output (book mode).”

1) Adjusting the Image Leading Edge Non-Image Width


Place an A3 test chart and an A4 test chart on the ADF original tray, and make a copy to check the image leading edge non-image width.

Standard: 4 ± 1.5 mm, -1.0 mm

Adjustment: FEEDER>ADJUST>STRD-S (A4 original)

FEEDER>ADJUST>STRD-L (A3 original)

- A higher value increases the margin.
- A lower value decreases the margin.

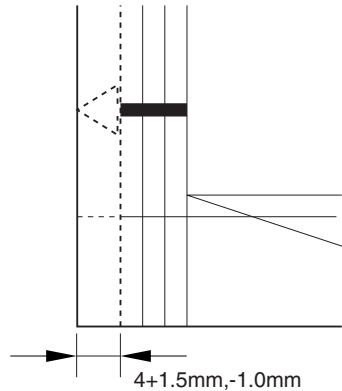


F06-201-15

2) Adjusting the Image Front Non-Image Width

Place an A3 size test chart in the ADF original tray, and make a copy to check the image front non-image width.

Standard: 2.5 ± 1.5 mm

Adjustment: Adjust the ADF original tray fixing position.

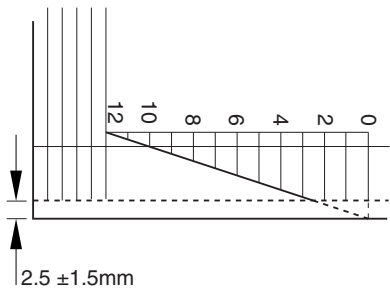

F06-201-16

2.2 Scanning System

2.2.1 Replacing the Scanner Drive Cable

See 2.9.2.b. “Scanner Drive Cable” in Chapter 2.

2.2.2 Adjusting the Scanner Mirror Base

See 2.9.2.b. “Scanner Drive Cable” in Chapter 2.

2.2.3 When Replacing the Standard White Plate

See 2.9.4.g. “When Replacing the Standard White Plate” in Chapter 2.

2.2.4 When Replacing the Scanning Lamp

See 2.9.1.c. “When Replacing the Scanning Lamp” in Chapter 2.

2.3 Image Formation System

2.3.1 Stringing the Grid Wire of the Primary Charging Assembly

See 5.8.3.d “Stringing the Grid Wire of the Primary Charging Assembly” in Chapter 2.

2.3.2 Stringing the Charging Wire of the Charging Assemblies

See 5.8.3.c “Stringing the Charging Wire” in Chapter 2.

2.3.3 Mounting the Drum Cleaning Blade

See 4.2.2 “Work 2” in Chapter 5.


2.4 Pickup/Feeding System

2.4.1 Orientation of the Deck/Cassette Pickup Roller

The deck/cassette pickup roller may be mounted by reversing the steps used to remove it; however, keep the following in mind:


- The pickup rollers used at the front and the rear of the machine are not interchangeable.
- The collar of the pickup roller used at the front of the machine is gold-colored.

When mounting the pickup roller [1] to the pickup assembly, be sure that the round marking [2] found on the side of the roller and the round marking [3] on the collar (gold-colored) are toward the front of the machine.

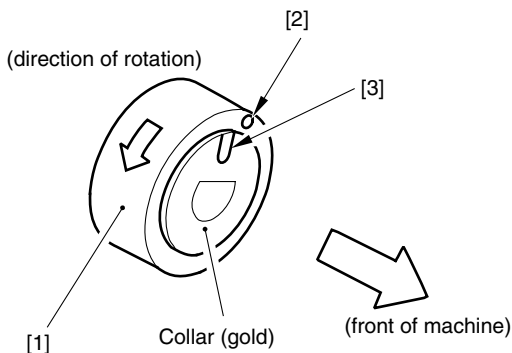

F06-204-01


- The collar of the pickup roller used at the rear is silver-colored. When mounting the pickup roller [4] to the pickup assembly, be sure that the round marking [5] on the side of the roller and the round marking [6] on the collar (silver-colored) are toward the rear of the machine.

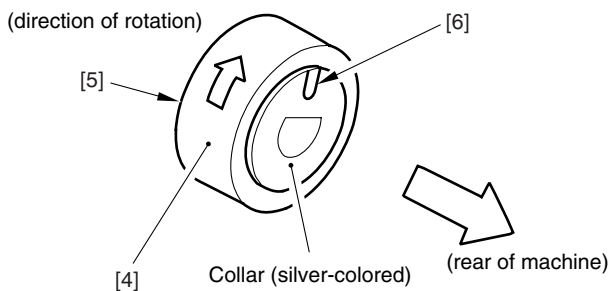

F06-204-02

2.4.2 Orientation of the Deck/Cassette Separation Roller


When replacing the separation roller, be sure that it is oriented as shown

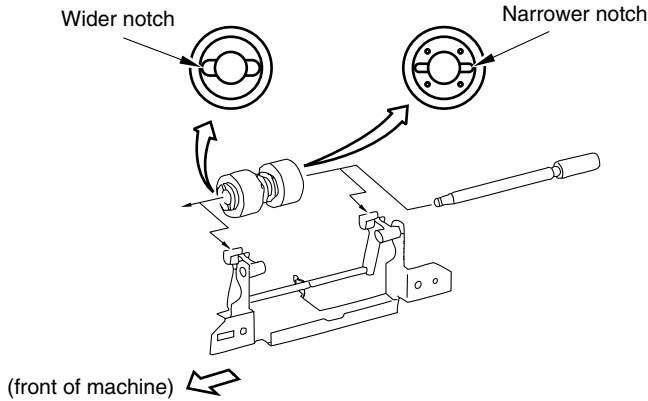

F06-204-03

2.4.3 Orientation of the Feeding Roller of the Deck/Cassette Pickup Assembly

When mounting the feeding roller assembly to the deck/cassette pickup assembly, be sure that the belt pulley [2] is to the front of the machine. When mounting the feeding roller [3] to the feeding roller shaft [4], be sure that the round marking [5] is toward the front of the machine.

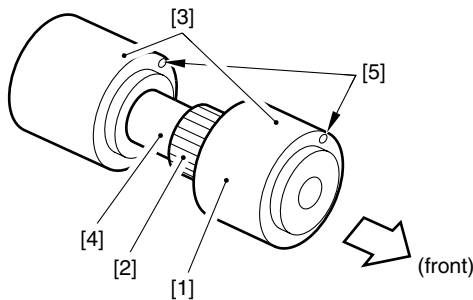


F06-204-04

2.4.4 Orientation of the Pickup Roller of the Manual Feed Tray/Side Paper Deck

The pickup roller may be mounted by reversing the steps used to remove it; however, keep the following in mind:

- The pickup rollers used at the front and the rear of the machine are not interchangeable.
- The collar of the pickup roller used at the front of the machine is silver-colored.

When mounting the pickup roller [1] to the pickup assembly, be sure that the round marking [2] of the color (silver-colored) is toward the front of the machine.

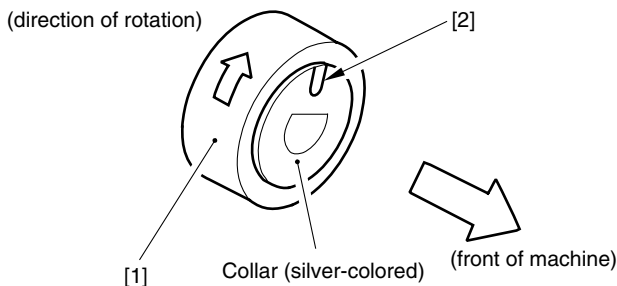


[1] Pickup roller

[2] Marking (collar)

F06-204-05

- The collar of the pickup roller used at the rear of the machine is gold-colored.

When mounting the pickup roller [4] to the pickup assembly, be sure that the round marking [5] on the side of the roller and the round marking [6] on the collar (gold-colored) are toward the rear of the machine.

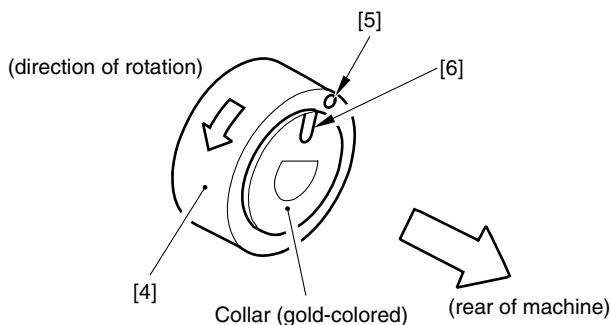

[4] Pickup roller


[5] Marking (roller)

[6] Marking (collar)

F06-204-06

2.4.5 Orientation of the Feeding Roller of the Manual Feed Tray


When mounting the feeding roller assembly [1] to the manual feed tray pickup assembly, be sure that the belt pulley [2] is toward the front of the machine. When mounting the feeding roller [3] to the feeding roller shaft [4], be sure that the round marking [5] is toward the front of the machine.

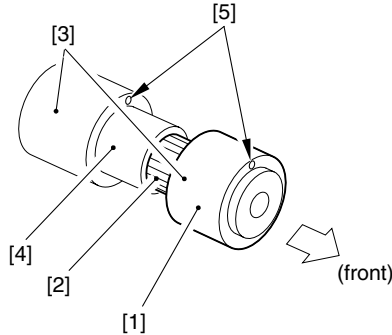

F06-204-07

2.4.6 Orientation of the Feeding Roller of the Side Paper Deck

When mounting the feeding roller assembly [1] to the side paper deck pickup assembly, be sure that the belt pulley [2] is toward the front of the machine. When mounting the feeding roller [3] to the feeding roller shaft [4], be sure that the round marking [5] is toward the rear of the machine.

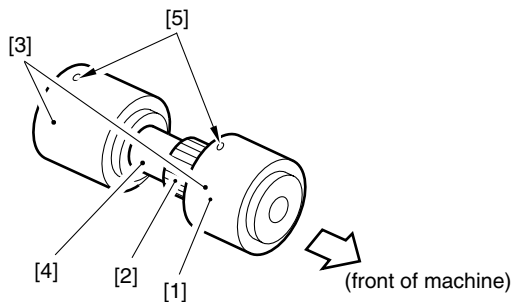


F06-204-08

2.4.7 Adjusting the Pressure of the Deck/Cassette Separation Roller

If double feeding or pickup failure occurs during pickup, adjust the position of the pressure spring of the separation roller.

- If double feeding occurs, move the hook of the spring in the direction of arrow B.
- If pickup failure occurs, move the hook of the spring in the direction of arrow A.

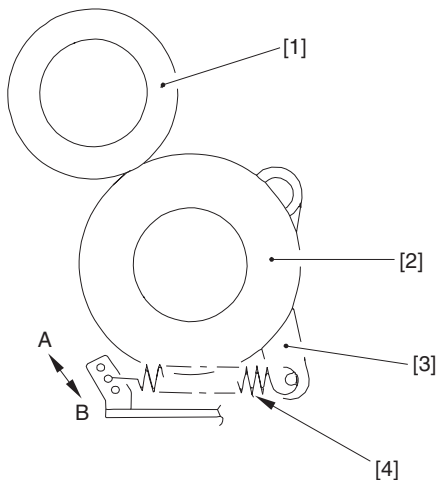


- | | |
|--------------------|-----------------------|
| [1] Feeding roller | [2] Separation roller |
| [3] Locking lever | [4] Pressure spring |

F06-204-09

2.4.8 Adjusting the Pressure of the Pickup/Feeding Roller of the Manual Feed Tray


If double feeding or pickup failure occurs during pickup, adjust the position of the pressure spring of the separation roller.

- If double feeding occurs, move the hook of the spring in the direction of arrow A.
- If pickup failure occurs, move the hook of the spring in the direction of B.

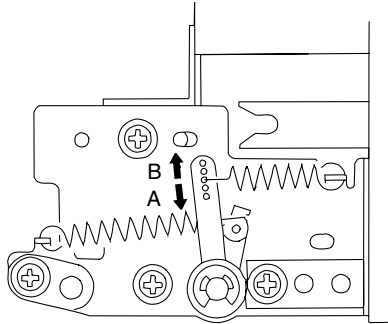

F06-204-10

2.4.9 Locations of the Solenoid

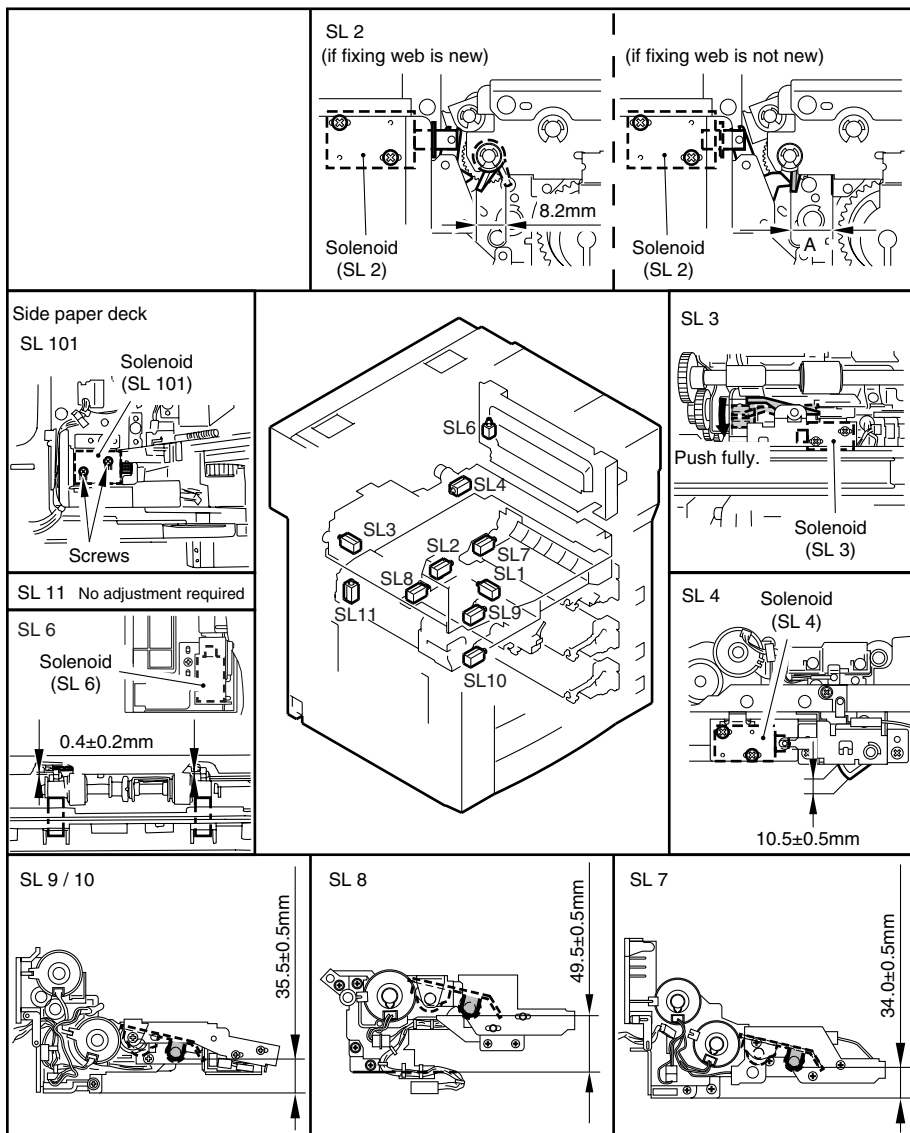


F06-204-11

2.4.10 Location of the Fixing Web Solenoid (SL2)

a. If the Fixing Web Is New


Use the position of the solenoid [1] using the screw [2] so that the travel of the drive lever is 8.2 mm.

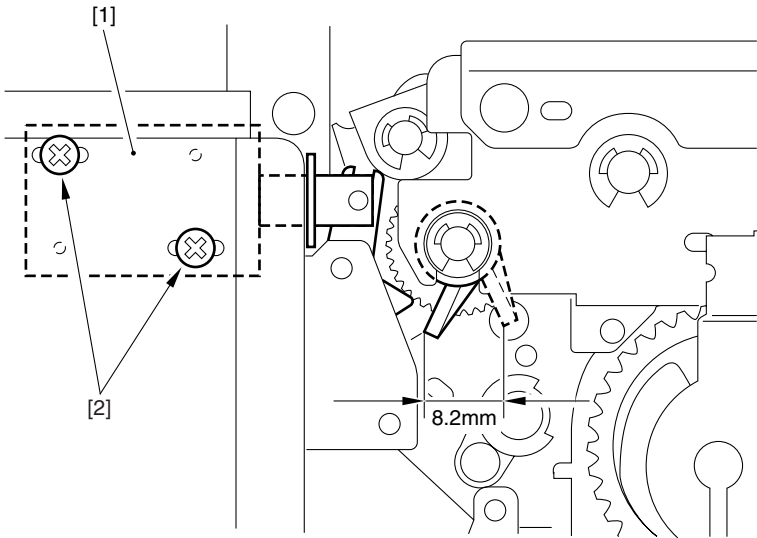

F06-204-12

b. If the Fixing Web Is Not New


Before removing the solenoid, check the position [A] of the drive lever when the solenoid [1] is ON. After replacing the solenoid, make adjustments using the screw [2] so that the position of the drive lever is the same (when the solenoid is ON).

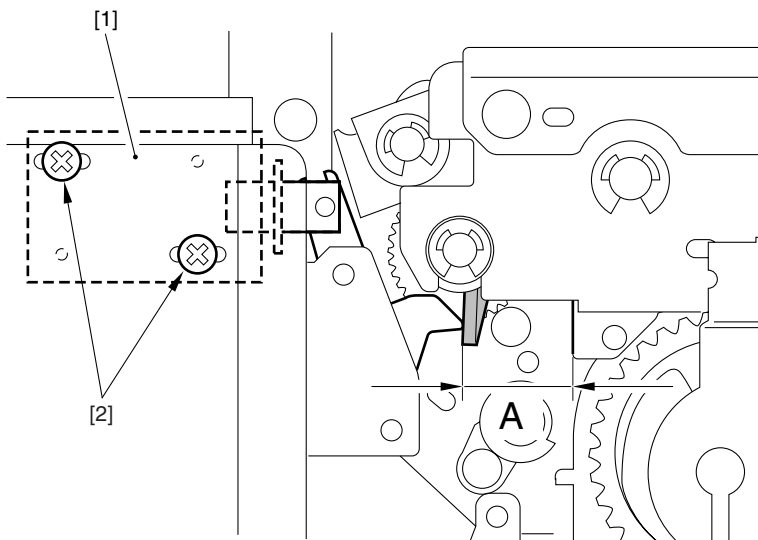

F06-204-13

2.4.11 Position of the Delivery Flapper Solenoid (SL3)


Use the screw [2] to adjust the position of the solenoid [1] so that the drive lever is fully pushed when the solenoid is ON (i.e., when the steel core is drawn).

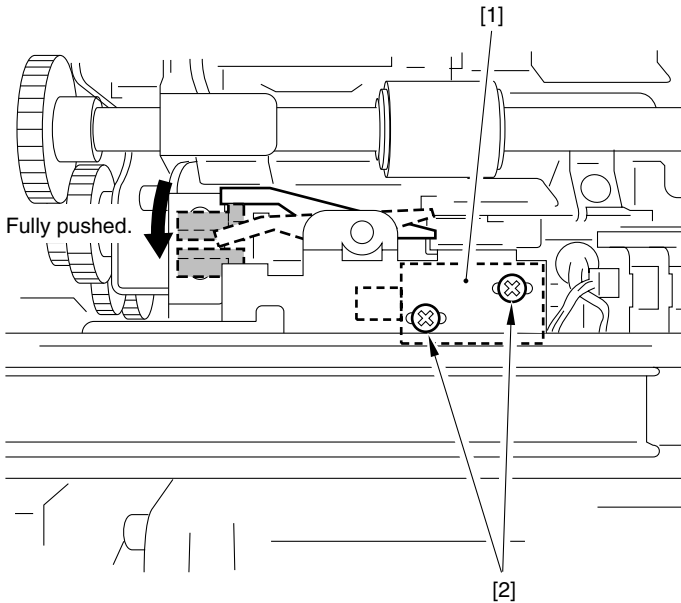

F06-204-14

2.4.12 Position the Fixing/Feeder Unit Locking Solenoid (SL4)


Use the screw [3] to adjust the position of the solenoid [1] so that the locking lever [2] is 10.5 ± 0.5 mm away from the frame when the solenoid is ON (i.e., when the steel core is drawn).

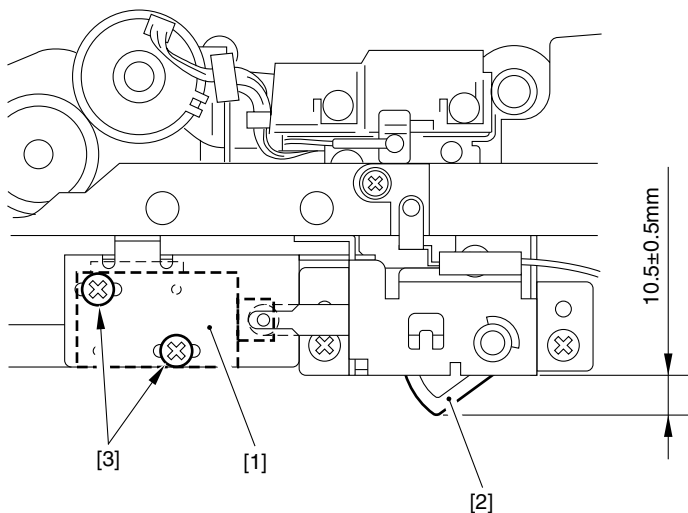


F06-204-15

2.4.13 Position of the Multifeeder Latch Solenoid (SL6)

Slide the solenoid in the direction of A so that the gap between the shutter [1] and the shutter plate [2] is 0.4 ± 0.2 mm when the solenoid is drawn.

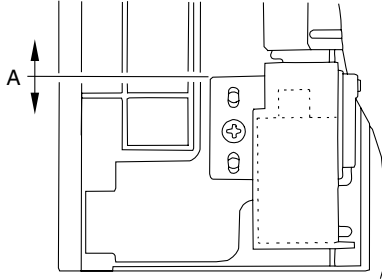


F06-204-16

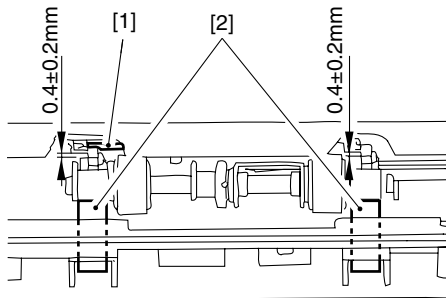

F06-204-17

2.4.14 Position of the Deck (right) Pickup Solenoid (SL7)


Use the screw [3] so that the distance from the pickup unit bottom of each cassette holder and the bushing bottom edge of the A roller support plate is 34.0 ± 0.5 mm when the plunger of the pickup roller releasing solenoid is drawn (as occurring when [1] and [2] are operated as shown). (After adjustment, make sure that the distance between the paper face and the A roller is 2.5 ± 0.5 mm when the A roller is in UP position.)

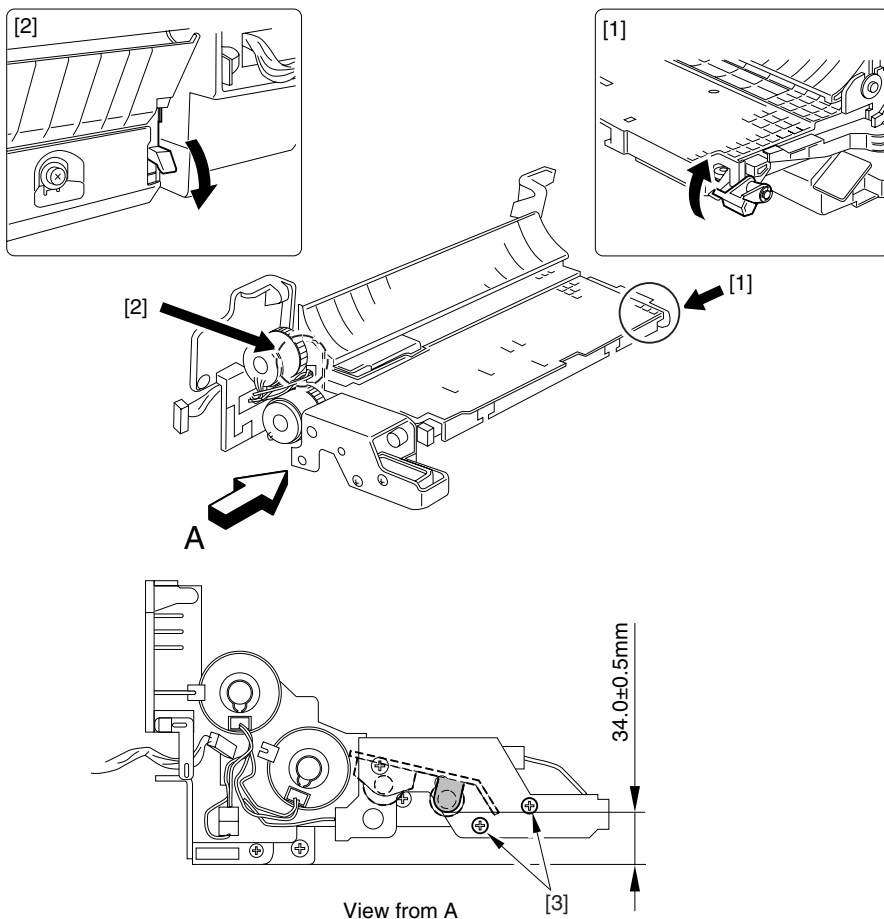

F06-204-18

2.4.15 Position of the Deck (Left) Pickup Solenoid (SL8)


Use the screw [3] so that the distance from the pickup unit bottom face to the bushing bottom edge of the A roller support plate is 49.5 ± 0.5 mm when the plunger of the pickup releasing solenoid is drawn (as occurring when [1] and [2] are operated as shown). (After adjustment, make sure that the distance between the paper face and the A roller is 2.5 ± 0.5 mm when the A roller is in UP position.)

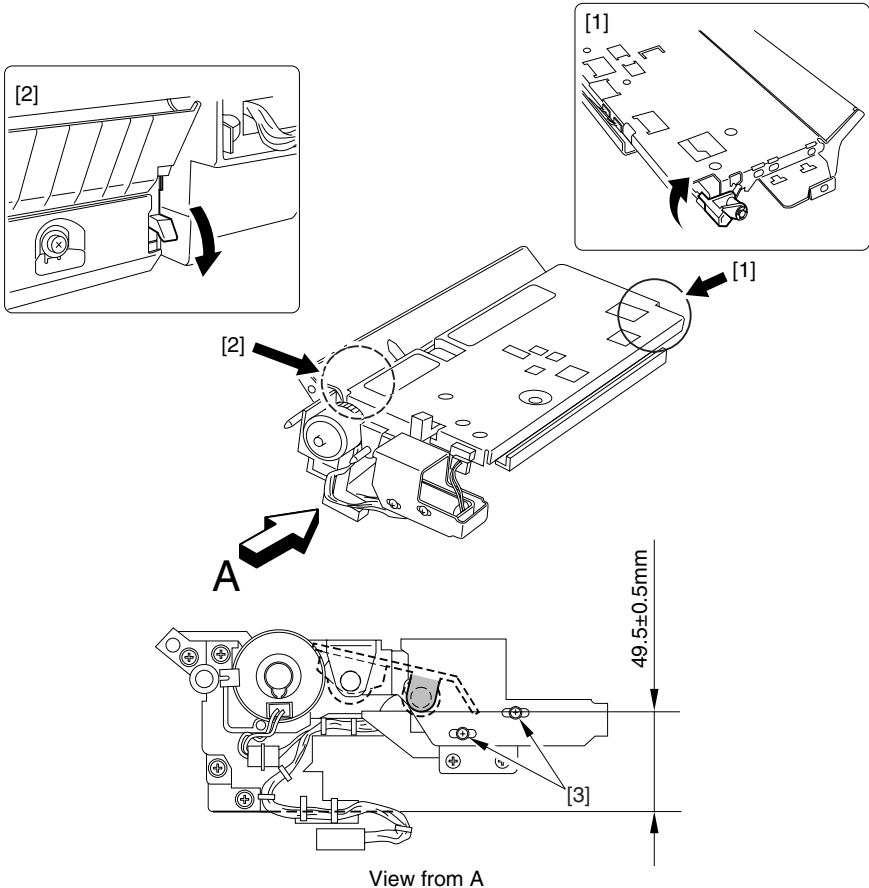

F06-204-19

2.4.16 Position of the Cassette 3/4 Pickup Solenoid (SL9/10)

Use the screw [3] so that the distance from the pickup unit bottom face of each cassette holder and the bushing bottom edge of the A roller support plate is 35.5 ± 0.5 mm when the plunger of the pickup roller releasing solenoid is drawn (as occurring when [1] and [2] are operated as shown). (After adjustment, make sure that the distance between the paper face and the A roller is 2.5 ± 0.5 mm when the A roller is in UP position.)

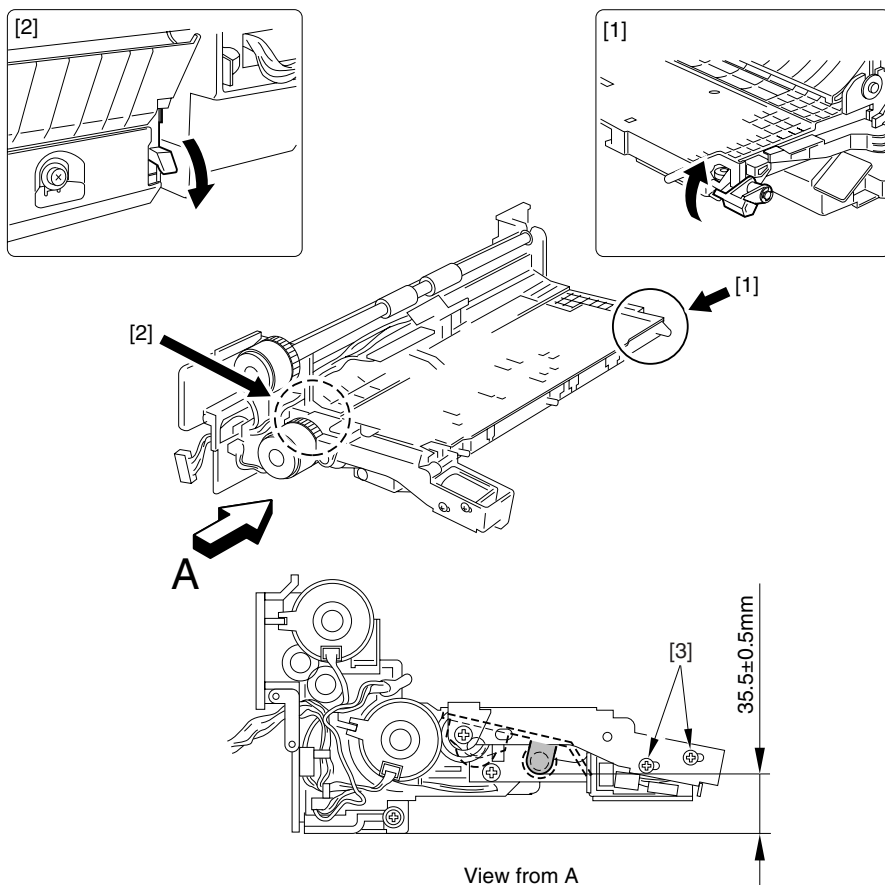


F06-204-20

2.4.17 Position of the Side Paper Deck Pickup Roller Releasing Solenoid

Before removing the deck pickup roller releasing solenoid [1] from the support plate, make mental notes of the positions of the 2 fixing screws [2] of the solenoid with reference to the index on the support plate. (Or, mark the position of the solenoid on the support plate with a scribe.)

If you are replacing the solenoid on its own, you must secure it in its initial position.

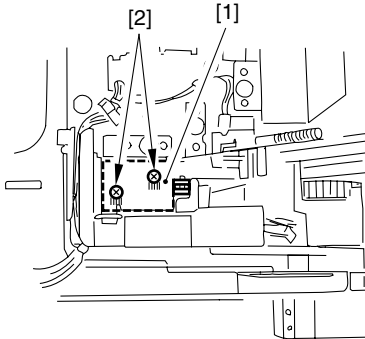


F06-204-21

2.4.18 Fitting the Side Guide Timing Belt of the Manual Feed Tray Assembly

Butt the rack plate [1] of the manual feed tray against section A (open state).


Move the slide volume [2] in the direction of B, and fit the timing belt [3] to the pulley [4].

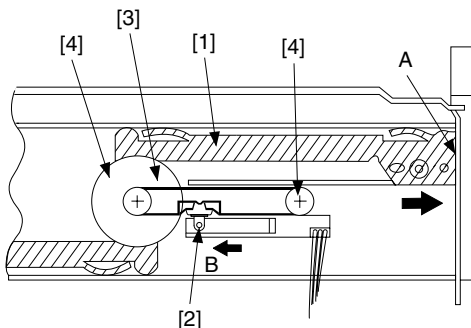

F06-204-22

2.4.19 Fitting the Drive Belt

Fit the drive belt to the pulleys and rollers as follows:

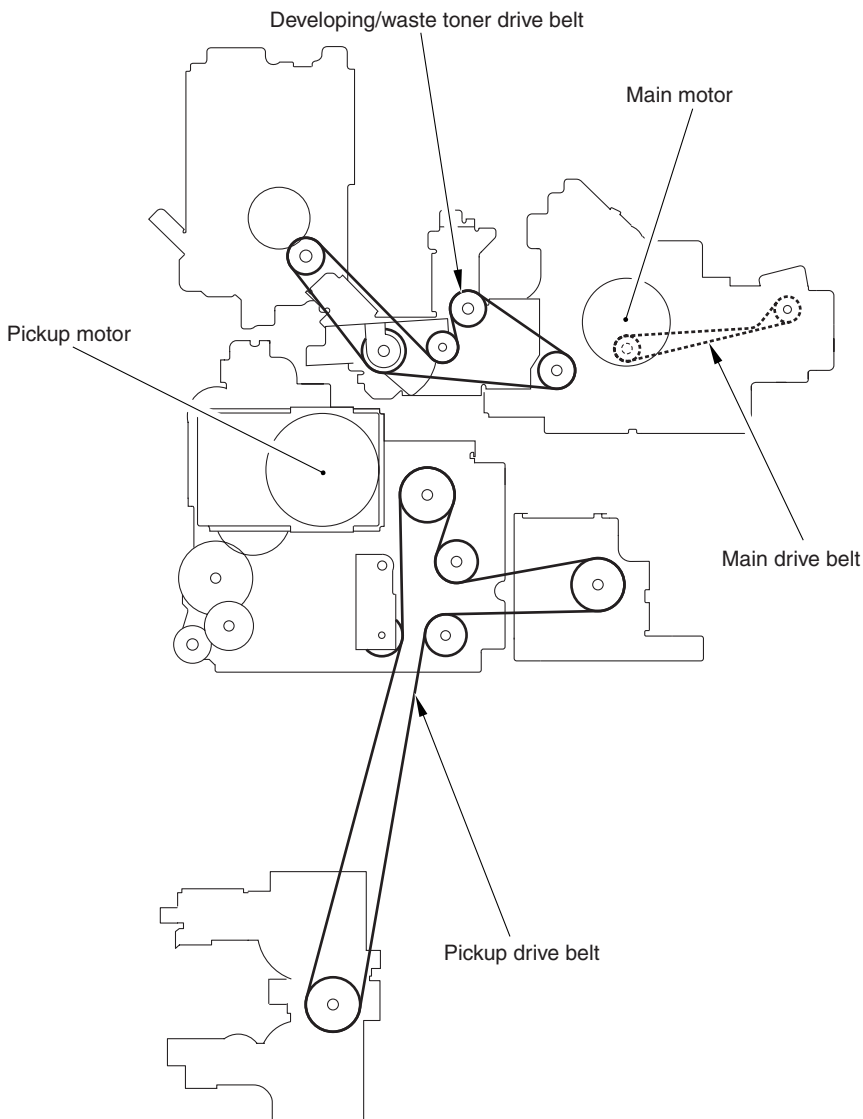


F06-204-23

2.5 Fixing System

2.5.1 Points to Note When Mounting the Fixing Heater

1. Do not touch the heater surface.
2. For both heaters, mount so that the side with the longer heater harness is toward the front.
3. Viewing from the front of the fixing assembly, mount the main heater on the right (for 200V model, 1150 W; for 208V model, 1220 W; for 230V model, 1185 W) and the sub heater on the left (for 200V model, 565 W; for 208V model, 600 W; for 230V model, 645 W).
4. Viewing from the rear, connect the right side of the faston of the heater at the rear to the main heater, and connect the top side to the sub heater.

Height of the Fixing Inlet Guide

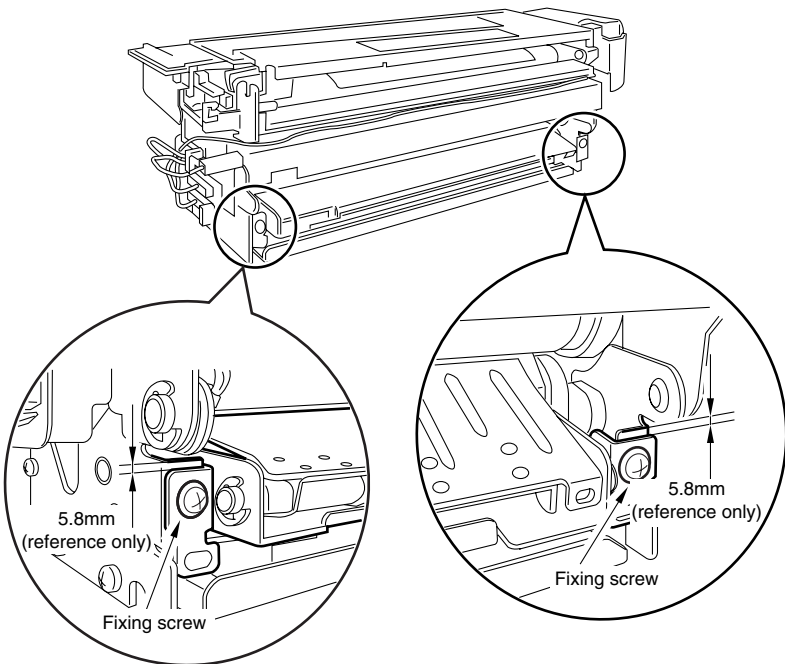


F06-205-01



Do not loosen the fixing screw on the inlet guide, as you will have to adjust the position of the inlet guide if you remove the inlet guide base. If you must loosen it, be sure to adjust the position of the inlet guide afterward by referring to the index on the fixing assembly.

2.5.2 Adjusting the Lower Roller Pressure (nip)

The nip width must be as indicated in T06-205-01; if not, adjust it using the pressure adjusting nut.

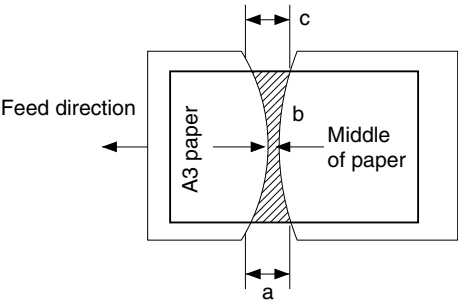

F06-205-02



a and c are points 10 mm from both edges of paper.

| Dimension | Measure with upper and lower rollers fully heated |
|-----------|---|
| b | 200 V: 9.0 ±0.5 mm, 208/230 V: 10.0 ±0.5 mm |
| a-c | 0.5 mm or less |

T06-205-01

a. Generating Output for Nip Width Measurement

Wait for 15 min after the copier ends its warm-up period; make 20 A4 copies, and measure the nip.

- 1) Place A3 copy paper in the manual feed tray.
- 2) Make the following selections in service mode to generate output:
COPIER>FUNCTION>FIXING>NIP-CHK.

The A3 paper will be picked up, and a copy like the one shown in F06-205-02 will be delivered.


2.6 Laser Exposure System

2.6.1 When Replacing the Laser Unit

See 4.3.1.b. “When Replacing the Laser Unit” in Chapter 2.

2.6.2 Checking the Laser Power


- 1) Check to make sure that the Data lamp in the control panel is OFF, and turn off the main power switch.
- 2) Disconnect the power plug from the power outlet.
- 3) Remove the copyboard glass.
- 4) Open the laser power checker slot cover [1].

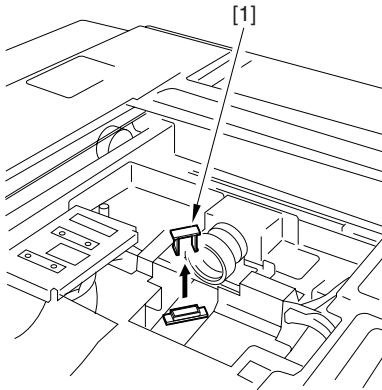

F06-206-01


- 5) Shift the switch of the laser power checker (FY9-40008) to '2'.

- 6) While orienting the laser power checker so that its light-receiving face [1] is as shown, fit it in.

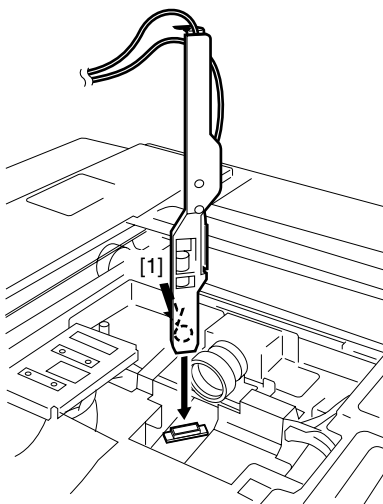

F06-206-02

- 7) Connect the probe lines of the laser power checker to a digital multimeter.

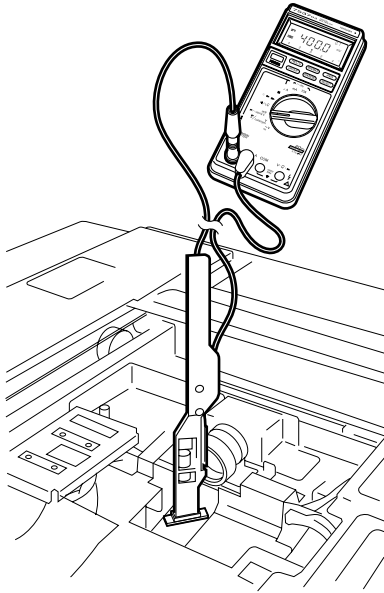

F06-206-03

- 8) Connect the power plug to the power outlet, and turn on the main power switch.
9) Make the following selections in service mode: COPIER>FUNCTION>LASER.
10) Select <POWER-A>, and press the OK key.
11) Check to see that the reading of the digital multimeter is 9 to 11 mV, indicating that the power of the laser A is correct.
12) Select <POWER-B>, and press the OK key.
13) Check to see that the reading of the digital multimeter is 9 to 11 mV, indicating that the power of the laser B is correct.

2.7 Electrical Parts-Related Items

2.7.1 Electrical Parts Requiring Work After Replacement

| Parts name |
|--|
| Scanning lamp |
| CCD unit |
| Reader controller PCB |
| Main controller PCB |
| HDD unit |
| DC controller PCB |
| HV-DC PCB |
| Laser unit |
| Potential sensor/potential control PCB |

2.7.2 When Replacing the Scanning Lamp

See 2.9 “Disassembly/Assembly” in Chapter 2.

2.7.3 When Replacing the CCD Unit

See 3.8.1.b. “When Replacing the CCD Unit” in Chapter 2.

2.7.4 When Replacing Reader Controller PCB

See 2.9 “Disassembly/Assembly” in Chapter 2.

2.7.5 When Replacing the Main Controller PCB

See 8.4.6.f. “When Replacing the Main Controller PCB” in Chapter 2.

2.7.6 When Replacing the HDD Unit

See 3.8.2.b. “When Replacing the Hard Disk” in Chapter 2.

2.7.7 When Replacing the DC Controller PCB

See 8.4.6.b. “When Replacing the DC Controller PCB” in Chapter 2.

2.7.8 When Replacing the HV-DC PCB

See 8.4.7.d. “When Replacing the HV-DC PCB” in Chapter 2.

2.7.9 When Replacing the Laser Unit

See 4.3.1.b. “When Replacing the Laser Unit” in Chapter 2.

2.7.10 When Replacing the Potential Sensor/Potential Control PCB

- 1) Check to make sure that the Execute/Memory lamp in the control panel is OFF, and turn off the main power switch.
- 2) Disconnect the power plug from the power outlet.




The machine remains powered after the main power switch is turned off as long as the power plug is connected to the power outlet. Be sure to disconnect the power plug from the power outlet.

- 3) Replace the potential sensor/potential control PCB.




The potential sensor and the potential control PCB are adjusted as a pair. Be sure to replace them at the same time.

- 4) Remove the developing assembly, and slide out the process unit.
- 5) Disconnect the connector [1] of the potential sensor.

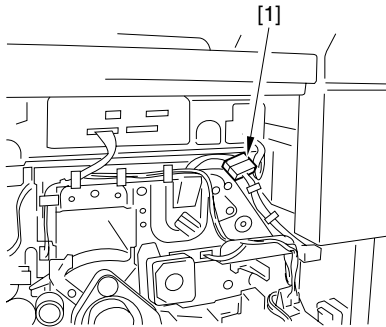


F06-207-01

- 6) Remove the 2 screws [1], and detach the potential sensor support plate [2].

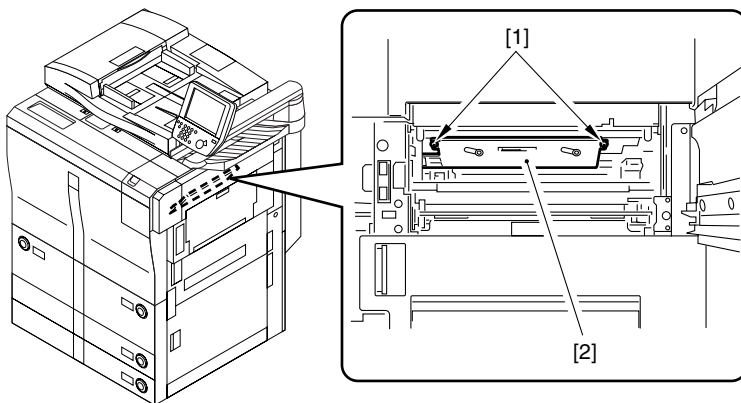


F06-207-02

- 7) Put back the developing assembly and the process unit.
8) Connect the connector [1] of the potential sensor.

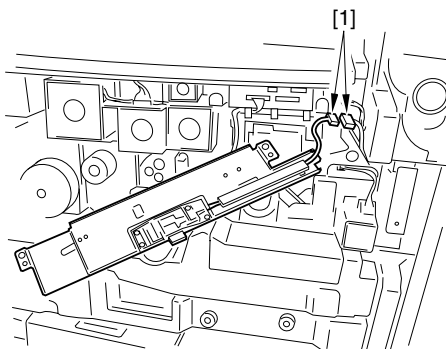

F06-207-03

- 9) Fit the potential checker electrode (FY9-3041) [2] to the potential sensor [1].

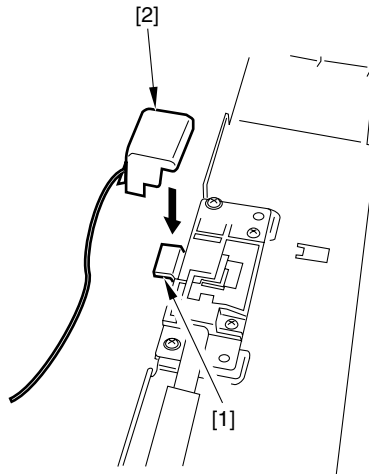

F06-207-04




When fitting the checker electrode to the potential sensor, make sure that the magnet of the checker electrode will not come into contact with the potential sensor cover.

- 10) Connect the cable [1] of the potential sensor checker electrode to the frame assembly (GND) [2] of the machine.



Never bring the clip into contact with the sensor cover. Be sure to fit it fully away from the sensor window.

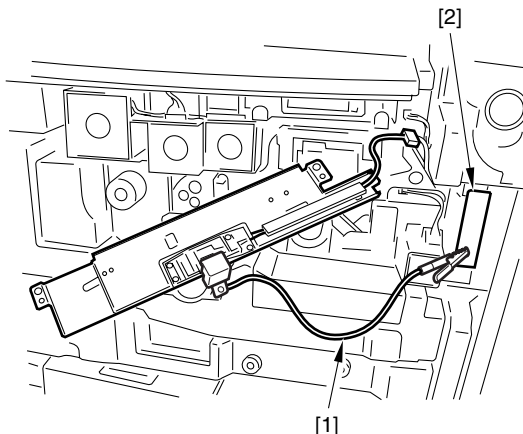

F06-207-05

- 11) Fit the door switch actuator in the door switch assembly.
- 12) Connect the power plug to the power outlet, and turn on the main power switch.
- 13) Execute the following in service mode: COPIER>FUNCTION>DPC>OFST.
- 14) Record the value of <OFST> on the service label.
- 15) Turn off the main power switch.
- 16) Disconnect the power plug from the power outlet.
- 17) Detach the potential sensor checker electrode.
- 18) Put back the potential sensor support plate.
- 19) Connect the power plug, and turn on the main power switch.

2.7.11 Checking the Surface Potential Control System

a. Outline

If image faults occur, it is important to find out whether the cause is in the latent static image formation block (including the photosensitive drum and the potential control system) or it is in the developing/transfer system, requiring a check on the surface potential. (You can check the surface potential in service mode.)

b. Disabling the Auto Control Mechanisms

As a way of checking the mechanisms used for corona current control, lamp intensity control, or developing bias control, you may disable the auto control mechanisms (hereafter, non-auto control mode).

As a first-aid measure when a fault exists in the auto control mechanism, you may use non-auto control mode; keep in mind that all outputs in non-auto control mode are fixed to standard values.

1. Procedure

- 1) Make the following selections in service mode, and enter '0':
COPIER>OPTION>BODY>PO-CNT.
- 2) Press the Reset key twice.



In non-auto control mode, all settings used for coronal current control, intensity control, developing bias control will be set to standard settings stored in ROM.

2. Making Use of Non-Auto Control Mode

If a fault occurs in images, use the mode to find out if the cause is on the input side or output side of the microprocessor on the DC controller PCB.

In non-auto control mode, if the fault is corrected somewhat, you may suspect the potential measurement unit or the DC controller PCB.

c. Zero-Level Check


One way of finding out if the surface potential control circuit is good or not is to use a zero-level check.



A zero-level check is made to see if the microprocessor registers 0 V when the surface potential of the drum is 0 V.

Using the result of the check, you can find out if the microprocessor on the DC controller PCB or the measurement unit is good or not; a zero-level check may take either of the following two methods:

1. Method 1
 - 1) Turn off the power switch.
 - 2) Short the connectors J522-1 and -2 on the DC controller PCB with a jumper wire, and disconnect the connector J3 of the potential control PCB.

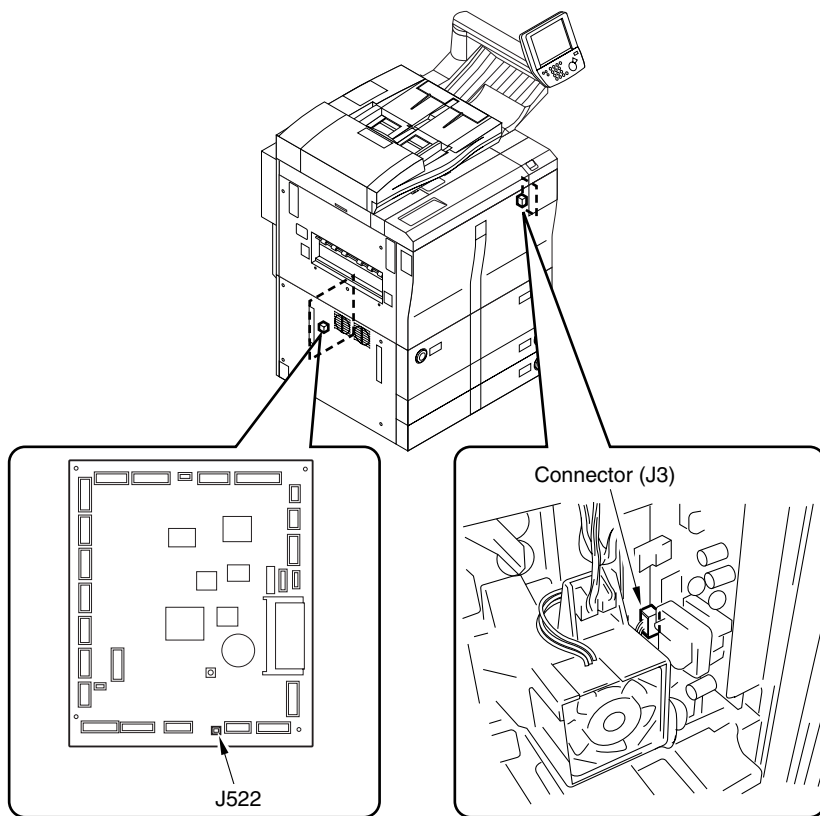


F06-207-06

- 3) Fit the door switch actuator into the door switch assembly, and turn on the power switch.
- 4) Make the following selections in service mode, and check to see if the reading is between 0 and 30 during initial rotation: COPIER>DISPLAY>DPOT>DPOT-K.


If the reading is not as indicated, you may suspect a fault in the DC controller PCB.

- 5) Turn off the power switch, and detach the door switch actuator.
 - 6) Detach the jumper wire from the DC controller PCB.
 - 7) Connect the connector to J3 of the potential control PCB.
 - 8) Turn on the power switch.
2. Method 2
- 1) Turn off the power switch.
 - 2) Remove the developing assembly, and slide out the process unit.
 - 3) Disconnect the connector [1] of the potential sensor.

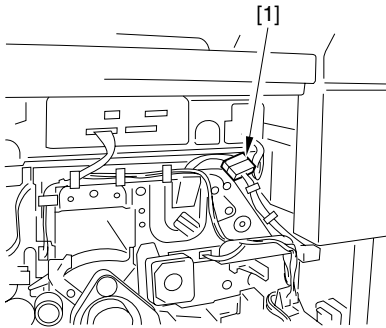


F06-207-07

- 4) Remove the 2 screws [1], and detach the potential sensor support plate [2].

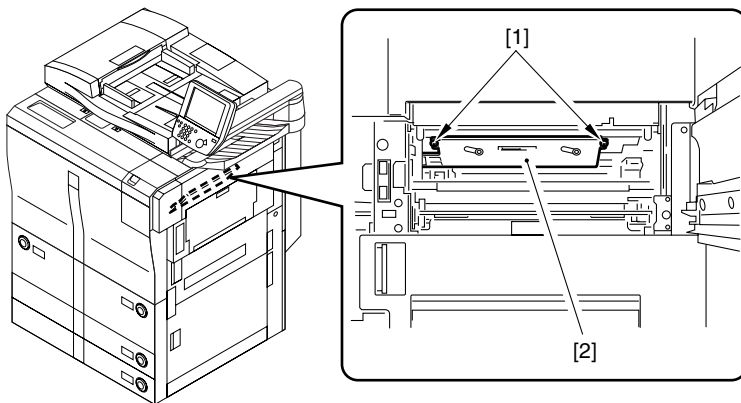

F06-207-08

- 5) Put back the developing assembly and the process unit.
6) Connect the connector [1] of the potential sensor.

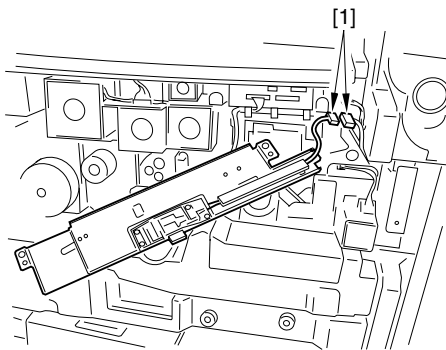


F06-207-09

- 7) Fit the potential sensor checker electrode (FY9-3041) [2] to the potential sensor [1].



When fitting the checker electrode to the potential sensor, be sure that the magnet of the checker electrode will not come into contact with the potential sensor cover.

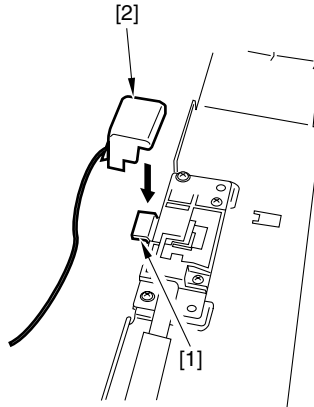


F06-207-10

- 8) Connect the cable [1] of the potential sensor checker electrode to the frame (GND) [2] of the machine.



Never bring the clip into contact with the sensor cover. Be sure to keep it fully away from the sensor window.

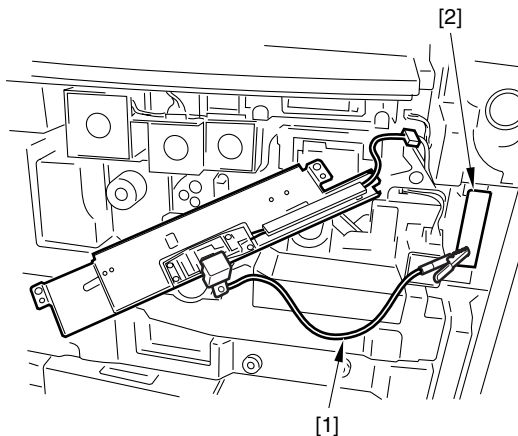

F06-207-11

- 9) Fit the door switch actuator into the door switch assembly.
- 10) Turn on the power switch.



Once you have turned on the power switch, do not touch the potential sensor assembly.

- 11) Make the following selections in service mode, and check to make sure that the reading is between 0 and 30 during initial rotation: COPIER>DISPLAY>DPOT>DPOT-K.



-
1. If the reading is as indicated in Method 1 but is not in Method 2, suspect dirt on the sensor or a fault in the potential measurement unit.
 2. If the reading is as indicated in both Method 1 and Method 2, assume that the signal path and the operation from the potential sensor unit to the microprocessor on the DC controller PCB are normal.
-

- 12) Turn off the power switch.
- 13) Remove the potential sensor checker electrode.
- 14) Mount the potential sensor support plate.
- 15) Turn on the power switch.

2.8 Potential Control System Conversion Table

| Control (V) | Primary (μ A) | Developing bias (V) | Pre-transfer (μ A) | Transfer (μ A) | Separation (μ A) |
|----------------|-----------------------|------------------------|----------------------------|------------------------|--------------------------|
| 3.00 | 1600 | 0 | +0 | +0 | +0 |
| 3.05 | 1590 | 3 | +2 | -4 | +5 |
| 3.10 | 1580 | 7 | +4 | -8 | +10 |
| 3.15 | 1570 | 11 | +6 | -12 | +15 |
| 3.20 | 1560 | 15 | +8 | -16 | +20 |
| 3.25 | 1550 | 18 | +10 | -20 | +25 |
| 3.30 | 1540 | 22 | +12 | -24 | +30 |
| 3.35 | 1530 | 26 | +14 | -28 | +35 |
| 3.40 | 1520 | 30 | +15 | -32 | +40 |
| 3.45 | 1510 | 33 | +17 | -36 | +45 |
| 3.50 | 1500 | 37 | +19 | -40 | +50 |
| 3.55 | 1490 | 41 | +21 | -44 | +55 |
| 3.60 | 1480 | 45 | +23 | -48 | +60 |
| 3.65 | 1470 | 48 | +25 | -52 | +65 |
| 3.70 | 1460 | 52 | +27 | -56 | +70 |
| 3.75 | 1450 | 56 | +29 | -60 | +75 |
| 3.80 | 1440 | 60 | +30 | -65 | +80 |
| 3.85 | 1430 | 63 | +32 | -69 | +85 |
| 3.90 | 1420 | 67 | +34 | -73 | +90 |
| 3.95 | 1410 | 71 | +36 | -77 | +95 |
| 4.00 | 1400 | 75 | +38 | -81 | +100 |
| 4.05 | 1390 | 78 | +40 | -85 | +105 |
| 4.10 | 1380 | 82 | +42 | -89 | +110 |
| 4.15 | 1370 | 86 | +44 | -93 | +115 |
| 4.20 | 1360 | 90 | +45 | -97 | +120 |
| 4.25 | 1350 | 93 | +47 | -101 | +125 |
| 4.30 | 1340 | 97 | +49 | -105 | +130 |
| 4.35 | 1330 | 101 | +51 | -109 | +135 |
| 4.40 | 1320 | 105 | +53 | -113 | +140 |
| 4.45 | 1310 | 108 | +55 | -117 | +145 |
| 4.50 | 1300 | 112 | +57 | -121 | +150 |
| 4.55 | 1290 | 116 | +59 | -125 | +155 |
| 4.60 | 1280 | 119 | +60 | -129 | +160 |
| 4.65 | 1270 | 123 | +62 | -134 | +165 |
| 4.70 | 1260 | 127 | +64 | -138 | +170 |
| 4.75 | 1250 | 131 | +66 | -142 | +175 |
| 4.80 | 1240 | 134 | +68 | -146 | +180 |
| 4.85 | 1230 | 138 | +70 | -150 | +185 |
| 4.90 | 1220 | 142 | +72 | -154 | +190 |
| 4.95 | 1210 | 146 | +74 | -158 | +195 |

T06-208-01

| Control (V) | Primary (μ A) | Developing bias (V) | Pre-transfer (μ A) | Transfer (μ A) | Separation (μ A) |
|----------------|-----------------------|------------------------|----------------------------|------------------------|--------------------------|
| 5.00 | 1200 | 150 | +75 | -162 | +200 |
| 5.05 | 1190 | 153 | +77 | -166 | +205 |
| 5.10 | 1180 | 157 | +79 | -170 | +210 |
| 5.15 | 1170 | 161 | +81 | -174 | +215 |
| 5.20 | 1160 | 165 | +83 | -178 | +220 |
| 5.25 | 1150 | 168 | +85 | -182 | +225 |
| 5.30 | 1140 | 172 | +87 | -186 | +230 |
| 5.35 | 1130 | 176 | +89 | -190 | +235 |
| 5.40 | 1120 | 180 | +90 | -195 | +240 |
| 5.45 | 1110 | 183 | +92 | -199 | +245 |
| 5.50 | 1100 | 187 | +94 | -203 | +250 |
| 5.55 | 1090 | 191 | +96 | -207 | +255 |
| 5.60 | 1080 | 195 | +98 | -211 | +260 |
| 5.65 | 1070 | 198 | +100 | -215 | +265 |
| 5.70 | 1060 | 202 | +102 | -219 | +270 |
| 5.75 | 1050 | 206 | +104 | -223 | +275 |
| 5.80 | 1040 | 210 | +105 | -227 | +280 |
| 5.85 | 1030 | 213 | +107 | -231 | +285 |
| 5.90 | 1020 | 217 | +109 | -235 | +290 |
| 5.95 | 1010 | 221 | +111 | -239 | +295 |
| 6.00 | 1000 | 225 | +113 | -243 | +300 |
| 6.05 | 990 | 228 | +115 | -247 | +305 |
| 6.10 | 980 | 232 | +117 | -251 | +310 |
| 6.15 | 970 | 236 | +119 | -255 | +315 |
| 6.20 | 960 | 240 | +120 | -260 | +320 |
| 6.25 | 950 | 243 | +122 | -264 | +325 |
| 6.30 | 940 | 247 | +124 | -268 | +330 |
| 6.35 | 930 | 251 | +126 | -272 | +335 |
| 6.40 | 920 | 255 | +128 | -276 | +340 |
| 6.45 | 910 | 258 | +130 | -280 | +345 |
| 6.50 | 900 | 262 | +132 | -284 | +350 |
| 6.55 | 890 | 266 | +134 | -288 | +355 |
| 6.60 | 880 | 269 | +135 | -292 | +360 |
| 6.65 | 870 | 273 | +137 | -296 | +365 |
| 6.70 | 860 | 277 | +139 | -300 | +370 |
| 6.75 | 850 | 281 | +141 | -304 | +375 |
| 6.80 | 840 | 285 | +143 | -308 | +380 |
| 6.85 | 830 | 288 | +145 | -312 | +385 |
| 6.90 | 820 | 292 | +147 | -316 | +390 |
| 6.95 | 810 | 296 | +149 | -320 | +395 |
| 7.00 | 800 | 300 | +150 | -325 | +400 |

T06-208-02

| Control (V) | Primary (μ A) | Developing bias (V) | Pre-transfer (μ A) | Transfer (μ A) | Separation (μ A) |
|----------------|-----------------------|------------------------|----------------------------|------------------------|--------------------------|
| 7.05 | 790 | 303 | +152 | -329 | +405 |
| 7.10 | 780 | 307 | +154 | -333 | +410 |
| 7.15 | 770 | 311 | +156 | -337 | +415 |
| 7.20 | 760 | 315 | +158 | -341 | +420 |
| 7.25 | 750 | 318 | +160 | -345 | +425 |
| 7.30 | 740 | 322 | +162 | -349 | +430 |
| 7.35 | 730 | 326 | +164 | -353 | +435 |
| 7.40 | 720 | 330 | +165 | -357 | +440 |
| 7.45 | 710 | 333 | +167 | -361 | +445 |
| 7.50 | 700 | 337 | +169 | -365 | +450 |
| 7.55 | 690 | 341 | +171 | -369 | +455 |
| 7.60 | 680 | 345 | +173 | -373 | +460 |
| 7.65 | 670 | 348 | +175 | -377 | +465 |
| 7.70 | 660 | 352 | +177 | -381 | +470 |
| 7.75 | 650 | 356 | +179 | -385 | +475 |
| 7.80 | 640 | 360 | +180 | -390 | +480 |
| 7.85 | 630 | 363 | +182 | -394 | +485 |
| 7.90 | 620 | 367 | +184 | -398 | +490 |
| 7.95 | 610 | 371 | +186 | -402 | +495 |
| 8.00 | 600 | 375 | +188 | -406 | +500 |
| 8.05 | 590 | 378 | +190 | -410 | +505 |
| 8.10 | 580 | 382 | +192 | -414 | +510 |
| 8.15 | 570 | 386 | +194 | -418 | +515 |
| 8.20 | 560 | 390 | +195 | -422 | +520 |
| 8.25 | 550 | 393 | +197 | -426 | +525 |
| 8.30 | 540 | 397 | +199 | -430 | +530 |
| 8.35 | 530 | 401 | +201 | -434 | +535 |
| 8.40 | 520 | 405 | +203 | -438 | +540 |
| 8.45 | 510 | 408 | +205 | -442 | +545 |
| 8.50 | 500 | 412 | +207 | -446 | +550 |
| 8.55 | 490 | 416 | +209 | -450 | +555 |
| 8.60 | 480 | 419 | +210 | -454 | +560 |
| 8.65 | 470 | 423 | +212 | -459 | +565 |
| 8.70 | 460 | 427 | +214 | -463 | +570 |
| 8.75 | 450 | 431 | +216 | -467 | +575 |
| 8.80 | 440 | 434 | +218 | -471 | +580 |
| 8.85 | 430 | 438 | +220 | -475 | +585 |
| 8.90 | 420 | 442 | +222 | -479 | +590 |
| 8.95 | 410 | 446 | +224 | -483 | +595 |
| 9.00 | 400 | 450 | +225 | -487 | +600 |
| 9.05 | 390 | 453 | +227 | -491 | +605 |

T06-208-03

| Control (V) | Primary (μ A) | Developing bias (V) | Pre-transfer (μ A) | Transfer (μ A) | Separation (μ A) |
|----------------|-----------------------|------------------------|----------------------------|------------------------|--------------------------|
| 9.10 | 380 | 457 | +229 | -495 | +610 |
| 9.15 | 370 | 461 | +231 | -499 | +615 |
| 9.20 | 360 | 465 | +233 | -503 | +620 |
| 9.25 | 350 | 468 | +235 | -507 | +625 |
| 9.30 | 340 | 472 | +237 | -511 | +630 |
| 9.35 | 330 | 476 | +239 | -515 | +635 |
| 9.40 | 320 | 480 | +240 | -520 | +640 |
| 9.45 | 310 | 483 | +242 | -524 | +645 |
| 9.50 | 300 | 487 | +244 | -528 | +650 |
| 9.55 | 290 | 491 | +246 | -532 | +655 |
| 9.60 | 280 | 495 | +248 | -536 | +660 |
| 9.65 | 270 | 498 | +250 | -540 | +665 |
| 9.70 | 260 | 502 | +252 | -544 | +670 |
| 9.75 | 250 | 506 | +254 | -548 | +675 |
| 9.80 | 240 | 510 | +255 | -552 | +680 |
| 9.85 | 230 | 513 | +257 | -556 | +685 |
| 9.90 | 220 | 517 | +259 | -560 | +690 |
| 9.95 | 210 | 521 | +261 | -564 | +695 |
| 10.00 | 200 | 525 | +263 | -568 | +700 |
| 10.05 | 190 | 528 | +265 | -572 | +705 |
| 10.10 | 180 | 532 | +267 | -576 | +710 |
| 10.15 | 170 | 536 | +269 | -580 | +715 |
| 10.20 | 160 | 540 | +270 | -585 | +720 |
| 10.25 | 150 | 543 | +272 | -589 | +725 |
| 10.30 | 140 | 547 | +274 | -593 | +730 |
| 10.35 | 130 | 551 | +276 | -597 | +735 |
| 10.40 | 120 | 555 | +278 | -601 | +740 |
| 10.45 | 110 | 558 | +280 | -605 | +745 |
| 10.50 | 100 | 562 | +282 | -609 | +750 |
| 10.55 | 90 | 566 | +284 | -613 | +755 |
| 10.60 | 80 | 570 | +285 | -617 | +760 |
| 10.65 | 70 | 573 | +287 | -621 | +765 |
| 10.70 | 60 | 577 | +289 | -625 | +770 |
| 10.75 | 50 | 581 | +291 | -629 | +775 |
| 10.80 | 40 | 585 | +293 | -633 | +780 |
| 10.85 | 30 | 588 | +295 | -637 | +785 |
| 10.90 | 20 | 592 | +297 | -641 | +790 |
| 10.95 | 10 | 596 | +299 | -645 | +795 |
| 11.00 | 0 | 600 | +300 | -650 | +800 |

T06-208-04

2.9 Checking the Environment Sensor

1) Checking the Environment Sensor

Make the following selections in service mode, and check and record the temperature/humidity indicated on the screen in the control panel: COPIER>DISPLAY>ANALOG.

Data A

'RTMP' °C data A1

'RHUM' % data A2

- 2) Press the Rest key twice to turn off the power switch.
- 3) Remove the environment sensor, and fit the environment sensor jig (FY9-3014) in its place.
- 4) Turn on the power switch, and leave the machine alone for 5 min.
- 5) Make the following selections in service mode, and check and record the temperature/humidity indicated on the screen in the control panel: COPIER>DISPLAY>ANALOG:
Data B
'RTMP' °C data B1
'RHUM' % data B2
- 6) Compare data A and data B.
 - difference between data A 1 and data B1 is 0 ± 5
 - difference between data A2 and data B2 is 0 ± 20If the difference between data A and data B is outside the range, replace the environment sensor.
- 7) Press the Reset key twice, and turn off the power switch.
- 8) Detach the environment sensor jig, and fit the environment sensor.
- 9) Put back all covers.



The environment sensor jig (FY9-301) is precisely adjusted at the factory.
Be sure to keep it in an air-tight case with a drying agent.

2.10 Checking the Photointerrupters

The machine allows the use of a conventional meter or its service mode for checks on its photointerrupters:

a. Using a Meter

- 1) Set the meter range to 30 VDC.
- 2) Connect the - probe of the meter to GND of the DC controller PCB.
- 3) Connect the + probe of the meter to the terminal (DC controller PCB) indicated in the table that follows.
- 4) Make checks as indicated.

b. Using Service Mode

- 1) Start service mode (CPEOR>I/O), and check the corresponding address.



Take full care. The sensor goes on and off, at times causing the motors and the like to operate.

| Sensor | Connector No. I/O address | | Checks | I/O | Volt- age |
|---|------------------------------|---|--|--------|--------------|
| PS1 Scanner HP sensor | J1110-A1 - | Move the scanner by hand in standby. | The light-blocking plate is at PS1. The light-blocking plate is not at PS1. | 1 0 | 5 V 0 V |
| PS3 Image leading edge sensor | J1110-A4 - | Move the scanner by hand in standby. | The light-blocking plate is at PS3. The light-blocking plate is not at PS3. | 1 0 | 5 V 0 V |
| PS4 Copyboard cover open/ closed sensor | J1110-B9 P001-4 | Move the copyboard cover by hand in standby. | The cover is closed. The cover is open. | 1 0 | 5 V 0 V |
| PS5 Registration paper sensor | J509-A2 P010-11 | Put paper over PS5 in standby. | Paper is not over PS5. Paper is over PS5. | 1 0 | 5 V 0 V |
| PS6 Fixing claw jam sensor | J508-B15 P010-15 | Put paper over PS6 in standby. | Paper is not over PS6. Paper is over PS6. | 0 1 | 0 V 5 V |
| PS7 Fixing web length sensor | J508-B2 P003-3 | Move the detecting lever of PS7 by hand in standby. | The web is present. The web is absent. | 0 1 | 0 V 5 V |
| PS8 Fixing web length warning sensor | J508-B5 P003-4 | Move the detecting lever of PS8 in standby. | The No Web warning is present. The No Web warning is absent. | 1 0 | 5 V 0 V |
| PS9 Inside delivery sensor | J508-A2 P010-12 | Put paper over the detect- ing lever assembly of PS9 in standby. | Paper is put. Paper is removed. | 1 0 | 5 V 0 V |
| PS10 Outside deliv- ery sensor | J508-A8 P010-13 | Put paper over the detect- ing lever of PS10 in standby. | Paper is put. Paper is removed. | 1 0 | 5 V 0 V |
| PS11 Fixing/feeding unit outlet sen- sor | J508-A11 P010-14 | Put paper over the detect- ing lever assembly of PS11 in standby. | Paper is put. Paper is removed. | 1 0 | 5 V 0 V |
| PS12 Duplexing re- versal sensor | J519-B10 P002-1 | Put paper over the detect- ing lever of PS12 in standby. | Paper is put. Paper is removed. | 0 1 | 0 V 5 V |
| PS14 Pre-confluence sensor | J519-B12 P002-3 | Put paper over the detect- ing lever assembly of PS14 in standby. | Paper is put. Paper is not put. | 1 0 | 5 V 0 V |

T06-210-01

| Sensor | Connector No. I/O address | Checks | | I/O | Voltage |
|---|------------------------------|---|--|-----|---------|
| PS15 Post-confluence sensor | J519-B13 | Put paper over the detecting lever assembly of PS15 in standby. | Paper is put. | 1 | 5 V |
| | P002-4 | | Paper is not put. | 0 | 0 V |
| PS17 Manual feed tray paper sensor | J510-B9 | Move the rear partitioning plate by hand in standby. | Paper is put. | 1 | 5 V |
| | P004-12 | | Paper is not put. | 0 | 0 V |
| PS18 Horizontal registration sensor | J519-B14 | Put paper over PS18 in standby. | Paper is over PS18. | 1 | 5 V |
| | P025-7 | | Paper is not over PS18. | 0 | 0 V |
| PS19 Waste toner case full sensor | J514-A2 | Put paper over the detecting lever of PS19 in standby. | Paper is put. | 1 | 5 V |
| | P003-7 | | Paper is removed. | 0 | 0 V |
| PS21 Right deck lifter sensor | J511-A6 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS21. | 1 | 5 V |
| | P004-0 | | The light-blocking plate is not at PS21. | 0 | 0 V |
| PS22 Right deck paper sensor | J511-A9 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS22. | 1 | 5 V |
| | P004-8 | | The light-blocking plate is not at PS22. | 0 | 0 V |
| PS23 Right deck open/closed sensor | J511-B2 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS23. | 1 | 5 V |
| | P005-4 | | The light-blocking plate is not at PS23. | 0 | 0 V |
| PS24 Right deck limit sensor | J511-B13 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS24. | 1 | 5 V |
| | P004-14 | | The light-blocking plate is not at PS24. | 0 | 0 V |
| PS28 Fixing/feeding unit releasing lever sensor | J509-B9 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS28. | 1 | 5 V |
| | P005-14 | | The light-blocking plate is not at PS28. | 0 | 0 V |
| PS31 Left deck lifter sensor | J518-A2 | Move the detecting lever by hand in standby. | The light-detecting plate is at PS31. | 1 | 5 V |
| | P004-1 | | The light-blocking plate is not at PS31. | 0 | 0 V |

T06-210-02

| Sensor | Connector No. I/O address | | Checks | I/O | Voltage |
|---------------------------------------|------------------------------|--|--|--------|------------|
| PS32 Left deck paper sensor | J518-A5 P004-9 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS32. The light-blocking plate is not at PS32. | 1 0 | 5 V 0 V |
| PS33 Left deck open/closed sensor | J518-B2 P005-5 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS33. The light-blocking plate is not at PS33. | 1 0 | 5 V 0 V |
| PS34 Left deck limit sensor | J518-B5 P004-15 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS34. The light-blocking plate is not at PS34. | 1 0 | 5 V 0 V |
| PS35 Manual feed inlet sensor | J510-B3 P010-10 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS35. The light-blocking plate is not at PS35. | 1 0 | 5 V 0 V |
| PS38 Cassette 3 lifter sensor | J515-A6 P004-2 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS38. The light-blocking plate is not at PS38. | 1 0 | 5 V 0 V |
| PS39 Cassette 3 paper sensor | J515-A9 P004-10 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS39. The light-blocking plate is not at PS39. | - - | 5 V 0 V |
| PS40 Cassette 3 open/closed sensor | J515-B2 P005-6 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS40. The light-blocking plate is not at PS40. | 1 0 | 5 V 0 V |
| PS43 Cassette 4 lifter sensor | J517-A6 P004-3 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS43. The light-blocking plate is not at PS43. | 1 0 | 5 V 0 V |
| PS44 Cassette 4 paper sensor | J517-A9 P004-11 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS44. The light-blocking plate is not at PS44. | 1 0 | 5 V 0 V |
| PS45 Cassette 4 open/closed sensor | J517-B2 P005-7 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS45. The light-blocking plate is not at PS45. | 1 0 | 5 V 0 V |

T06-210-03

| Sensor | Connector No. I/O address | | Checks | I/O | Volt- age |
|--|------------------------------|---|--|--------|--------------|
| PS47 Vertical path 1 paper sensor | J502-B5 P010-4 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS47. The light-blocking plate is not a PS47. | 1 0 | 5 V 0 V |
| PS48 Right lower cover open/ closed sensor | J516-A2 P005-9 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS48. The light-blocking plate is not at PS48. | 1 0 | 5 V 0 V |
| PS49 Vertical path 2 paper sensor | J516-B9 P010-5 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS49. The light-blocking plate is not at PS49. | 1 0 | 5 V 0 V |
| PS51 Right deck pa- per level middle sensor | J513-B9 P004-4 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS51. The light-blocking plate is not at PS51. | 1 0 | 5 V 0 V |
| PS52 Right deck pa- per level high sensor | J513-B12 P004-5 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS52. The light-blocking plate is not at PS52. | - - | 5 V 0 V |
| PS54 Left deck paper level middle sensor | J514-B9 P004-6 | Move the detecting lever by hand in standby. | The light-blocking plate at PS54. The light-blocking plate is not at PS54. | 1 0 | 5 V 0 V |
| PS55 Left deck paper level high sen- sor | J514-B12 P004-7 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS55. The light-blocking plate is not at PS55. | - - | 5 V 0 V |
| PS56 Manual feed tray cover open/closed sensor | J502-A2 P005-10 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS56. The light-blocking plate is not at PS56. | 1 0 | 5 V 0 V |
| PS58 Right upper cover open/ closed sensor | J502-B2 P005-8 | Move the detecting lever by hand in standby. | The light-blocking plate is at PS58. The light-blocking plate is not at PS58. | 1 0 | 5 V 0 V |

T06-210-04

| Sensor | Connector No. I/O address | | Checks | I/O | Volt- age |
|------------------------------|------------------------------|----------------------------|--|-----|--------------|
| PS59 | J512-B2 | Move the detecting lever | The light-blocking plate | 1 | 5 V |
| Toner cartridge | P005-12 | by hand in standby. | is at PS59. | | |
| cover open/ closed sensor | | | The light-blocking plate is not at PS59 | 0 | 0 V |
| PS61 | J519-B11 | Put paper over the detect- | Paper is put. | 1 | 5 V |
| Duplex output | P002-2 | ing assembly of PS61 in | Paper is removed. | 0 | 0 V |
| sensor | | standby. | | | |

T06-210-05

2.11 Checking the Optical Sensors

| Sensor | Connector No. I/O address | Checks | | I/O | Volt- age |
|---|------------------------------|------------------------------------|--|--------|--------------|
| PS20 Right deck pickup sensor | J511-B6 P010-0 | Put paper over PS20 in standby. | Paper is at PS20. Paper is not at PS20. | 1 0 | 5 V 0 V |
| PS25 Left deck pickup sensor | J518-A9 P010-1 | Put paper over PS25 in standby. | Paper is at PS25. Paper is not at PS25. | 1 0 | 5 V 0 V |
| PS26 Left deck feed sensor | J519-B16 P010-9 | Put paper over PS26 in standby. | Paper is at PS26. Paper is not at PS26. | 1 0 | 5 V 0 V |
| PS27 Right deck feed sensor | J511-B10 P010-8 | Put paper over PS27 in standby. | Paper is at PS27. Paper is not at PS27. | 1 0 | 5 V 0 V |
| PS37 Cassette 3 pickup sensor | J515-B6 P010-2 | Put paper over PS37 in standby. | Paper is at PS37. Paper is not at PS37. | - - | 5 V 0 V |
| PS41 Vertical path 3 paper sensor | J515-B10 P010-6 | Put paper over PS41 in standby. | Paper is at PS41. Paper is not at PS41. | 1 0 | 5 V 0 V |
| PS42 Cassette 4 pickup sensor | J517-B6 P010-3 | Put paper over PS42 in standby. | Paper is at PS42. Paper is not at PS42. | 1 0 | 5 V 0 V |
| PS46 Vertical path 4 paper sensor | J517-B10 P010-7 | Put paper over PS46 in standby. | Paper is at PS46. Paper is not at PS46. | 1 0 | 5 V 0 V |
| PS60 Image write start sensor | J503-B8 P002-5 | Put paper over PS60 in standby. | Paper is at PS60. Paper is not at PS60. | 1 0 | 5 V 0 V |

T06-211-01

3 Troubleshooting Image Faults

3.1 Making Initial Checks

3.1.1 Checking the Site of Installation

Check the site of installation against the following requirements:

- a. The voltage of the power supply must be as rated ($\pm 10\%$). The power plug must remain connected day and night.
- b. The site must not be subject to high temperature/humidity (near a water faucet, water boiler, humidifier). The machine must not be installed in a cold place or in an area near a source of fire or subject to dust.
- c. The site must not be subject to ammonium gas.
- d. The site must not be subject to direct rays of the sun. As necessary, curtains must be provided.
- e. The site must be well ventilated.
- f. The machine must be kept level.
- g. The machine must remain powered throughout the night.

3.1.2 Checking the Originals

Check the originals to find out whether the problem is caused by the originals used or is in the machine:

- a. The copy density setting is optimum at 5 ± 1 .
- b. If the original has a reddish background, copies can suffer poor contrast.



Red sheets, slips, and the like.

- c. The density of the original can have the following effects:



if the original is a diazo copy or is rather transparent, copies can be mistaken as being “foggy.”
if the original is prepared in pencil, copies can be mistaken as being “too light.”

3.1.3 Checking the Copyboard Cover, Copyboard Glass, and Standard White Plate

Check the copyboard cover, copyboard glass, and standard white plate for dirt or scratches. If dirt is found, clean it with a solution of mild detergent or alcohol; if a scratch is found, on the other hand, replace it.

3.1.4 Checking the Charging Assemblies

- a. Check the charging assemblies for dirt and a faulty charging wire.
- b. Clean the charging wire and the shielding plate of the charging assemblies. (If dirt cannot be removed, replace it.)
- c. Check the type and height of the charging wire.
- d. Check to make sure that the charging assemblies are firmly fitted.
- e. Check the charging wire spring for rusting.
- f. Check the charging wire cleaning pad (of each charging assembly) for displacement.

3.1.5 Checking the Developing Assembly

- a. Check to make sure that the rolls on both ends of the developing assembly are in contact with the drum.
- b. Check to make sure that the surface of the developing cylinder is coated with an even layer of toner.
- c. Check the connectors between the developing assembly and the machine for connection.
- d. Check to make sure that the slide switch (SW101) of the HV-DC PCB is in UP position.
- e. Check to make sure that the 4th page <DEV-SLO> of the following in service mode in '2': COPIER>OPTION>BODY.

3.1.6 Checking the Paper

- a. Check to see if the paper is a type recommended by Canon.
- b. Check to see if the paper is moist. Try paper fresh out of package.

3.1.7 Checking the Periodically Replaced Parts

Check with the Periodical Servicing Chart and the Periodically Replaced Parts Table, and replace those parts that have reached the end of their lives.

3.1.8 Others

In winter, bringing a machine from a cold to warm place can cause the inside of the machine to develop condensation, leading to various problems.



-
- a. Condensation in the scanning system (glass, mirrors, lenses) will produce darker images.
 - b. Condensation in the charging system will cause electrical leakage.
 - c. Condensation on the pickup/feeding guide will cause feeding faults.
- If condensation is found, dry wipe the part or leave the machine alone and powered for 60 min.
-



If the density is uneven (different between front and rear) or the image is too light or is foggy, perform the “Image Adjustment Basic Procedure” in advance.

Blank page

3.2 Sample Faulty Images

Note: These samples have been prepared artificially. They may appear somewhat different from actual faulty images because they have been generated using A3 copies made of the NA3 Test Sheet and reducing them to about 19%.

3.3 Troubleshooting Image Faults

3.3.1 The output is too light (halftone area)

| | |
|---------------------|---|
| ----- | 1) Perform the Image Adjustment Basic Procedure. Is the problem corrected? YES: End. |
| Scanner (dirt) | 2) Does the problem occur only in copy images? YES: The cause is between scanner and CCD. Perform the following once again: [1] Check the standard white plate for dirt. [2] Execute the following in service mode: COPIER>FUNCTION>CDD>CCD-ADJ. |
| AE adjustment | 3) Make copies in AE mode. Is the density normal? YES: End. |
| Developing assembly | 4) Are the rolls of the developing assembly in firm contact with the drum? NO: Check the mounting of the developing assembly locking mechanism. YES: Check to see if the coating of toner on the developing cylinder is even. |
| Image processing | 5) Is the setting of the following in service mode too low: COPIER>ADJUST>DENS>DEN>ADJ? YES: Set it to '5'. 6) Check to see if the slide switch (SW101) of the HV-DC PCB is in UP position. |

3.3.2 The output is too light (solid black area)

3.3.3 The output is too light (overall, considerably)

| | |
|-------------------|---|
| Copy paper | <p>1) Try paper fresh out of package. Is the problem corrected?</p> <p>YES: 1. The paper may be moist. Advise the user on the correct method of storing paper.</p> <p>2. Advise the user that using non-recommended paper may not bring about the best results.</p> |
| ----- | <p>2) Perform the Image Adjustment Basic Procedure. Is the problem corrected?</p> <p>YES: End.</p> |
| ----- | <p>3) Turn off the power switch in the middle of copying, and open the front cover. Is the toner image on the surface of the photosensitive drum before transfer more or less normal?</p> <p>NO: The cause is before transfer. Go to step 8.</p> |
| Transfer (fault) | <p>4) Is the transfer/separation charging assembly fully fitted?</p> <p>NO: Fit the charging assembly fully.</p> <p>5) Make copies by varying the setting of the following in service mode between '1' and '3' to suit the environment:</p> <p>COPIER>OPTION>BODY>FUZZY. Is the problem corrected?</p> <p>YES: End. (The problem is caused by the environment.)</p> <p>NO: Se the settings of 'FUZZY' back to '1', and go to the next step.</p> |
| Transfer (faulty) | |
| Transfer guide | <p>6) Measure the resistance between the transfer guide and the base (metal portion) for the feeding assembly using a meter. Is the electrical resistance 0 Ω?</p> <p>YES: Check to find out if the transfer guide is in contact with a metal portion (e.g., side plate of the feeding assembly).</p> |
| DC controller PCB | <p>NO: Check the high-voltage transformer (HVT) and the DC controller PCB.</p> |

Development (faulty)

Developing assembly (position)

- 7) Is the developing assembly firmly fitted? Are the rolls of the developing assembly in firm contact with the photosensitive drum?**

Pre-transfer charging assembly

- 8) Is the pre-transfer charging assembly fully fitted?**

NO: Fit the charging assembly fully.

Potential control, Photosensitive drum

Developing bias control

- 9) Turn off and then on the power switch. Then, check the setting of the following in service mode: COPIER>DISPLAY>DPOT>VL1M, VDM. Is it as follows?**

VL1M: 50 to 90

VDM: 390 to 460

NO: Check the power supply system; if normal, replace the photosensitive drum.

YES: Check the developing bias control system.

- 10) Check to see that the slide switch (SW101) of the HV-DC PCB is in UP position.**

3.3.4 The output has uneven density (darker at the front)

3.3.5 The output has uneven density (lighter at the front)

| | |
|--|---|
| ----- | 1) Perform the Image Adjustment Basic Procedure. Is the problem corrected? YES: End. |
| Development assembly (position) | 2) Are the rolls of the developing assembly in firm contact with the photosensitive drum? NO: Check the developing assembly locking unit. |
| Scanner (dirt) | 3) Clean the scanning lamp, reflecting plate, side reflecting plate, mirrors, lenses, and dust-proofing glass. Is the problem corrected? |
| Pre-exposure lamp | 4) Does the pre-exposure lamp ON evenly during copying operation? NO: [1] Replace the pre-exposure lamp. [2] Replace the DC controller PCB. |
| Developing assembly Charging assembly, Copy paper | 5) Is the developing cylinder coated with an even layer of toner? NO: [1] Clean the edge of the blade of the developing assembly (by dry wiping). [2] Clean the surface of the developing cylinder. [3] Check to see if the toner inside the developing assembly is level or not. YES: [1] Clean all charging wires once again, and check the position of each once again. [2] Try replacing the copy paper. [3] Check the nip of the fixing roller. |

3.3.6 The output is foggy (overall)

| | |
|--------------------------------------|--|
| ----- | 1) Perform the Image Adjustment Basic Procedure. Is the problem corrected? YES: End. |
| Scanner (dirt) | 2) Does the problem occur only in copy images? YES: The cause is between scanner and CCD. Perform the following: [1] Check the scanning lamp for dirt and the end of its life. [2] Check the reflecting plate, mirrors, lenses, and standard white plate for dirt. |
| High-voltage DC PCB (settings) | 3) Is the switch SW101 on the high-voltage PCB set to UP position? NO: Set it to UP position. |
| Potential control system | 4) Set the following in service mode '0' to turn off potential control: COPIER>OPTION>BODY>PO-CNT. Is the problem corrected? YES: The cause is in the potential control system. Make checks as instructed for checking the surface potential control system (2.7.12). |
| Cleaner assembly | 5) Is the cleaning blade mounted correctly? NO: Mount the cleaning blade correctly. |
| Pre-exposure lamp, DC controller PCB | 6) Does the pre-exposure lamp remain ON during copying? NO: [1] Replace the pre-exposure lamp. [2] Replace the DC controller PCB. |
| Developing roll, Developing cylinder | 7) Is the developing roll worn? YES: Replace the developing roll. NO: Replace the developing cylinder. |
| Developing bias (control) | 8) Is the setting of the following in service mode high: COPIER>ADJUST>V-CONT>DE-OFT, OHP-OFST? YES: Try decreasing the setting. |
| Developing cylinder speed control | 9) Is the setting of the following in service mode '2': COPIER>OPTION>BODY>DEVL-SLOW? NO: Set it to '2'. |

3.3.7 The output has vertical fogging

3.3.8 The output has black lines (vertical, fuzzy, thick)

| | |
|----------------------------------|---|
| Scanner (dirt) | <p>1) Does the problem occur only in copy images? YES: The cause is between scanner and CCD. Perform the following:</p> <ul style="list-style-type: none"> [1] Check the scanning lamp for print and the end of its life. [2] Check the reflecting plate, mirrors, lenses, and standard white plate for dirt. |
| Potential control system | <p>2) Set the following in service mode to '0' to turn off potential control: COPIER>OPTION>BODY>PO-CNT. Is the problem corrected? YES: the cause is in the potential control system. Make checks as instructed for checking the potential control system in Chapter 2 (standards and adjustments).</p> |
| Primary charging assembly | <p>3) Clean the primary charging wire, grid wire, and shielding plate. Is the problem corrected? YES: End.</p> |
| Pre-exposure lamp | <p>4) Clean the pre-exposure lamp. Is the problem corrected? YES: End.</p> |
| Fixing assembly | <p>5) Using the door switch actuator, make a copy with the front cover open. Turn off the power switch when the copy paper is in the feeding assembly, and check the image. Is the copy image normal? YES: The cause is after the fixing system. Check the fixing assembly upper/lower roller for dirt.</p> |
| Development Drum cleaner unit | <p>6) Is the surface of the developing cylinder coated with an even layer of toner?</p> <p>NO: [1] Check the edge of the blade of the developing assembly. [2] Check to make sure that the front fixing plate of the developing magnet is secured in place.</p> <p>YES: [1] Remove the drum cleaning blade, and check the edge. [2] Check the drum cleaner unit.</p> |

3.3.9 The output has black lines (vertical, fine)

| | |
|--|--|
| Scanner (dirt) | <p>1) Does the problem occur only in copy images? YES: The cause is between scanner and CCD. Perform the following: [1] Check the standard white plate and the mirrors for dirt. [2] Execute the following in service mode: COPIER>FUNCTION>CCD>CCD-ADJ.</p> |
| Fixing system | <p>2) Using the door switch actuator, make a copy with the front cover open. Turn off the power switch when the copy paper is in the feeding assembly, and check the image. Is the copy image normal? YES: The cause is after the fixing system. Perform the following: [1] Check the fixing upper roller for scratches and black lines. [2] Check the web for dirt. [3] Check the thermistor and the separation claw for dirt. Check the reciprocating movement.</p> |
| Primary charging assembly (dirt) | <p>3) Clean the primary charging assembly. Is the problem cord? YES: End.</p> |
| Photosensitive drum cleaner assembly | <p>4) Is foreign matter (e.g., paper) trapped by the cleaning blade of the cleaner unit? YES: Remove the foreign matter, and clean the cleaning blade and the outside of the cleaner unit.</p> <p>5) Is there a scratch on the edge of the cleaner blade? (Put a finger on the edge of the cleaning blade, and feel for a scratch.) YES: Turn over the edge. If both edges have a scratch, replace the cleaning blade.</p> |
| Photosensitive drum, Developing assembly | <p>6) Is there a scratch or black line in the peripheral direction of the surface of the photosensitive drum? YES: Replace the photosensitive drum. If a scratch is found, be sure to find out its cause. NO: Check the developing system.</p> |

3.3.10 The output has white spots (vertical)

3.3.11 The output has white lines (vertical)

| | |
|---------------------|--|
| Copy paper | <p>1) Try paper fresh out of package. Is the problem corrected?</p> <p>YES: The copy paper is most. Advise the user on the place and method of storage.</p> |
| Dust-proofing glass | <p>2) Clean the dust-proofing glass. Is the problem corrected?</p> <p>YES: End.</p> |
| Scanner (dirt) | <p>3) Does the problem occur only in copy images?</p> <p>YES: The cause is between scanner and CCD. Perform the following:</p> <ul style="list-style-type: none">[1] Check the standard white plate for dirt.[2] Execute the following in service mode: COPIER>FUNCTION>CCD>CCD-ADJ. |
| Photosensitive drum | <p>4) Is there a scratch on the surface of the photosensitive drum in peripheral direction corresponding to the problem in the images?</p> <p>YES: Find out the cause of the problem, and replace the photosensitive drum.</p> |
| Developing assembly | <p>5) Is the surface of the developing cylinder coated with an even layer of toner?</p> <p>NO: [1] Check if paper lint is trapped on the edge of the blade of the developing assembly.</p> <p>[2] Check to make sure that the connector at the front of the developing assembly is securely connected with the machine.</p> |
| Fixing assembly | <p>6) Using the door switch actuator, generate a test print (PG-TYPE6, solid black) with the front cover open. Turn off the switch immediately before the copy paper enters the fixing assembly, and check the image. Is the image normal?</p> <p>YES: The cause is after the fixing system. Perform the following:</p> <ul style="list-style-type: none">[1] Check the fixing upper roller for offset. |

Transfer/separation charging assembly, Pre-transfer charging assembly

7) Clean the pre-transfer charging assembly and the transfer/separation charging assembly. Is the problem corrected?

YES: End.

NO: Perform the following:

[1] Vary the setting of the following in service mode:

COPIER>OPTION>TRNSG-SW.

[2] Vary the setting for the following in service mode:

COPIER>OPTION>BODY>FUZZY.

Charging wire cleaner

8) Is the charging wire cleaning pad stopped midway?

YES: Execute wire pad cleaning in user mode ('adjust/clean').

3.3.12 The output has white spots (horizontal)

Developing assembly

1) Does the problem occur at intervals of about 79 mm?

- YES: [1] Clean the developing rolls.
 [2] Dry wipe the surface of the developing cylinder.
 [3] If the site of installation is at a high elevation, electrical leakage is a possibility between the developing cylinder and the drum. Try switching DIPSW from UP to DOWN on the high-voltage PCB (rear of the machine). This, however, lowers density.
 [4] If there is a scratch on the surface of the developing cylinder, replace the developing cylinder.

Drum

2) Does the problem occur at intervals of about 340 mm?

- YES: [1] Clean the drum (especially, where the developing rolls are in contact on both ends).
 [2] If there is a scratch on the surface of the drum, replace the drum.

Copy paper

3) Try paper fresh out of package. Is the problem corrected?

- YES: The copy paper is moist. Advise the user on the place of storage and the method of storage.

Scanner rail, Scanner cable

4) Does the problem occur only in copy images?

- YES: [1] Check the scanner cable for foreign matter.
 [2] Adjust the scanner cable for tension.

Charging wire (dirt), Photosensitive drum

5) Clean the charging wire. Is the problem corrected?

- YES: End.

6) Is there a scratch on the surface of the photosensitive drum?

- NO: Clean the charging assemblies.
 YES: Replace the photosensitive drum.

3.3.13 The back of the output is soiled

| | |
|-----------------|--|
| Transfer guide | 1) It the transfer guide soiled with toner? YES: [1] Clean the transfer guide. [2] Check the transfer guide bias. [3] Check the developing assembly for leakage of toner. |
| Drum Cleaner | 2) Is the paper feeding assembly soiled with toner? YES: [1] Clean the feeding assembly. [2] Check the drum cleaning assembly for leakage of toner. |
| Fixing assembly | 3) Is the fixing lower roller soiled? YES: [1] Clean the fixing lower roller. [2] Clean the inlet guide of the fixing assembly. [3] Check the fixing upper roller and the web for dirt. NO: Perform the following [1] Check the registration roller for dirt. [2] Check the delivery roller and the separation claw for dirt. |

3.3.14 The output has a fixing fault

| | |
|-----------------|---|
| Copy paper | 1) Is the paper of a type that adversely affect fixing (e.g., thick paper)? YES: Select thick paper in user mode (common settings>paper type). Advise the user to select a cassette for thick paper. 2) Is the paper of a recommended type? NO: Try recommended paper. If the results are good, advise the user to use recommended paper. |
| Fixing assembly | 3) Does the problem occur in vertical direction? YES: Check the fixing assembly for scratches and dirt. NO: Check the nip of the fixing roller. |

- 3.3.15 The output has a displaced leading edge (considerably large margin)
- 3.3.16 The output has a displaced leading edge (large margin)
- 3.3.17 The output has a displaced leading edge (no margin)

| | |
|--|---|
| Original placement | <div>1) Is the original placed correctly? NO: Place the original correctly.</div> |
| ----- | <div>2) Make copies using the following sources of paper; do they show different results of displacement? [1] left/right front deck [2] cassette [3] side paper deck [4] duplex feeding assembly YES: Check the source of paper with displacement of the following: [1] life of the rollers [2] paper lint on the rollers [3] dirt in the power path</div> |
| Registration clutch, Registration roller | <div>3) Make adjustments in the following service mode: COPIER>ADJUST>FEED-ADJ>REGIST. Is the problem corrected? NO: [1] Check the registration roller for deformation and wear. [2] Check the registration roller drive system. YES: End.</div> |

3.3.18 The output is blurred

Scanner drive cable

- 1) Does the cable runs wound around the cable pulley overlap when the scanner is moving? Or, is the cable too loose or too taut?**

YES: [1] String the cable once again.

[2] If the cable is twisted or frayed, replace it.

Scanner rail

- 2) Move the No. 1 mirror base by hand. Does it move smoothly?**

NO: Clean the surface of the scanner rail with alcohol. Thereafter, apply a small amount of silicone oil (S-20).

Photosensitive drum

- 3) Does the problem occur at intervals of about 340 mm?**

YES: [1] Check the drum gear.

[2] Check the drum ends (where the developing rolls are in contact) for scratches and bumps.

Drum drive gear

- 4) Does the problem occur at intervals of about 4 mm?**

YES: Check the drum drive gear.

Developing gear

- 5) Does the problem occur at intervals of about 2 mm?**

YES: Check the developing assembly.

Drum drive system

- 6) Does the problem occur at intervals of about 10 mm?**

YES: [1] Check the cleaner assembly.

[2] Check the drum drive system.

3.3.19 The output has horizontal fogging

| | |
|---|--|
| ----- | 1) Does the problem occur at the same location on copies made in Direct? YES: Go to step 3. |
| Scanning lamp, Lamp regulator | 2) Does the scanning lamp flicker when the scanner is moving forward? YES: Check the scanning lamp and the lamp regulator. |
| Scanner (wobbling), Feeding system (wobbling) | 3) Make a reduced copy, and compare it against a Direct copy. Are the locations of the problem different? NO: Check the scanner system. YES: Check the feeding system. 4) Does the problem occur at intervals of about 79 mm? YES: If the dirt is in the form of dots, dry wipe the surface of the developing cylinder. If it is spread, go to 1.1.3 (checks on printer side 2/2; F06-101-03). |

3.3.20 The output has poor sharpness

| | |
|--|---|
| Copyboard glass | 1) Is there adhesion of oil or the like on the copyboard glass? YES: Clean the copyboard glass. |
| Mirror (position) | 2) Is the horizontal reproduction ratio of Direct copies as indicated? NO: Adjust the distance between NO. 1 mirror and NO. 2 mirror. |
| Scanner (Dirt) | 3) Clean the scanning lamp, reflecting plate, mirrors, lens, and dust-proofing glass. Is the problem corrected? YES: End. |
| Photosensitive Drum, Lens drive assembly | 4) Try replacing the photosensitive drum. Is the problem corrected? YES: End. |

3.3.21 The output is solid blank

Developing assembly (locking mechanism)

- 1) Is the developing assembly locked in place to the photosensitive drum during copying operation?**

NO: Check the locking mechanism for the developing assembly.

Developing assembly drive assembly

- 2) Is the developing assembly rotating during copying operation?**

NO: Check the drive system of the developing assembly.

Transfer charging assembly

- 3) Is the transfer charging assembly fully fitted all the way to the rear?**

NO: Fit the transfer charging assembly fully to the rear.

- 4) Do electrical leakage occur in the transfer charging assembly?**

YES: Check the transfer charging assembly.

CCD unit, Relay PCB

- 5) Is the voltage supplied to the CCD unit as rated?**

NO: [1] Check the relay PCB.

[2] Check the power path between the CCD unit and the relay PCB; if normal, replace the CCD unit.

Laser unit reader controller PCB, Drum unit

- 6) Is the laser output normal?**

NO: [1] Replace the laser unit.

[2] Replace the image processor PCB.

- 7) Are the connector J1452 on the left side of the controller box and the connector J1302 on the laser drive PCB firmly connected?**

NO: Connect them firmly (so that they are locked in place).

YES: Replace the drum unit.

Developing bias connector

- 8) Is the developing bias connector (machine rear) connected?**

NO: Connect tit.

3.3.22 The output is solid black

| | |
|---------------------------------|---|
| Scanning lamp | 1) Does the scanning lamp go ON? NO: See “The scanning lamp fails to go ON.” |
| Pre-exposure lamp | 2) Is the connector of the pre-exposure lamp connected? NO: Connect it. |
| Primary charging assembly | 3) Make the following selections in service mode: COPIER>DISPLAY>DPOT. Is the setting of <VDM> between 390 and 460? NO: Check the primary charging assembly. |
| ----- | 4) Is the connection among the following normal? [1] reader controller PCB [2] CCD unit [3] DC controller PCB [4] relay PCB NO: Connect them correctly. |
| Reader controller PCB, CCD unit | 5) Does the problem occur only in copy images? NO: [1] Replace the reader controller PCB. [2] Replace the DC controller PCB. YES: Replace the CCD unit. |

4 Troubleshooting Malfunctions

4.1 Troubleshooting by Malfunction



If you are removing or mounting any of the sensors, be sure to pay attention to the orientation/position of the spring used to keep the detecting lever in place.

4.1.1 E000

Thermistor

- 1) **Reset E000, and turn off and then on the power switch. Make the following selections in service mode: COPIER>DISPLAY>ANALOG. Do readings of both <FIX-C> and <FIX-E> indicate an increase in temperature?**
- YES: The cause is in the thermistor. Check the following:
- thermistor for how it is mounted
 - thermistor for dirt on its surface
 - connection

DC controller PCB

- 2) **Turn off the power switch, and let the fixing upper roller cool sufficiently. Then, turn on the power switch. Reset E000, and turn off and then on the power switch. Make the following selections in service mode: COPIER>I/O>DC-CON. Are bit 0 and bit 1 of IO-P012 '0'?**
- YES: Replace the DC controller PCB.

Heater (open circuit), AC driver (triac; faulty)

- 3) **Is the electrical continuity of each heater normal?**
- NO: Replace the heater.
- YES: Check the wiring; if normal, replace the AC driver PCB.

4.1.2 E001

Triac (inside AC driver; short circuit)

- 1) **Keeping the power switch OFF**, let the fixing upper roller cool sufficiently. In the meantime, check each thermistor for dirt on its surface, mounting, and connection.
Turn on the power switch, and reset E001 by making the following selections in service mode, and turn off and then on the power switch: **COPIER>FUNCTION>CLEAR>ERR.**
Make the following selections in service mode:
COPIER>DISPLAY>ANALOG. Are the readings of both <FIX-C> and <FIX-E> **198°C or higher?**
YES: Replace the AC driver PCB.

Thermistor (TH1/TH2; faulty), DC controller PCB

- 2) **Try replacing the thermistor. Is the problem corrected?**
YES: End.
NO: Replace the DC controller PCB.

4.1.3 E002

4.1.4 E003

| | |
|---------------------------------|---|
| ----- | <p>1) Turn on the power switch, and reset E002 and E003 by making the following selections in service mode: COPIER>FUNCTION>CLEAR>ERR. Then, turn off and then on the power switch. Is any of the following true?</p> <ul style="list-style-type: none"> • The fixing heater fails to operate. • E002 or E003 is indicated. <p>YES: Go to each relevant section.</p> |
| ----- | <p>2) Is the contact of the connector J505 on the DC controller PCB and the connectors inside the fixing assembly good? Also, is the wiring from the thermistor to the DC controller PCB good?</p> <p>NO: Make corrections.</p> |
| Main thermistor (TH1; mounting) | <p>3) Is the thermistor in even contact with the fixing upper roller?</p> <p>NO: Mount it correctly.</p> |
| Main thermistor (TH1; dirt) | <p>4) Clean the contact face of the thermistor. Is the problem corrected?</p> <p>YES: End.</p> |
| Main thermistor (TH1; faulty) | <p>5) Try replacing the thermistor. Is the problem corrected?</p> |
| DC controller PCB | <p>6) Try replacing the heater. Is the problem corrected?</p> <p>YES: End.</p> <p>NO: Replace the DC controller PCB.</p> |

4.1.5 E004

| | |
|----------------------------------|---|
| AC driver pcb, DC controller PCB | <p>1) Try replacing the AC driver PCB. Is the problem corrected?</p> <p>YES: End.</p> <p>NO: Replace the DC controller PCB.</p> |
|----------------------------------|---|

4.1.6 E005

| | |
|---------------------------|--|
| Web | 1) Is the web of the fixing assembly taken up? YES: Replace it with a new web. |
| Web detecting lever | 2) Is the position of the web detecting lever correct? NO: Correct the position of the lever. |
| DC controller PCB, Sensor | 3) Is the web absent sensor (PS7) normal? (See instructions on how to check photointerrupters.) YES: Replace the DC controller PCB. NO: Replace the sensor. |

4.1.7 E010

| | |
|------------------------------------|---|
| ----- | 1) Are the connectors J611 and J612 of the main motor connected? NO: Connect the connectors. |
| ----- | 2) Is the connector J1720 of the relay PCB connected? NO: Connect the connector. |
| Relay PCB | 3) Close all doors. Is the voltage between connectors J1720-1 and -2 on the relay PCB about 38 V when the power switch is tuned on? NO: Replace the relay PCB. |
| DC controller PCB, Main motor (M1) | 4) Does the voltage between J514-B5 (+) and J514-B3 (-) on the DC controller PCB change from 0 to about 5 V when the Start key is pressed? NO: Replace the DC controller PCB. YES: Replace the main motor. |

4.1.8 E012

Relay PCB, Drum motor (M0)

- 1) **Turn on the power switch, and measure the voltage between connectors J1721-9 and -10 on the relay PCB when all doors are closed. Is it 38 V?**

NO: If the connection of the cable up to the relay PCB is normal, replace the relay PCB.

DC controller PCB

- 2) **Does the voltage between J512-B10 (+) and J512-B8 (-) on the DC controller PCB change from 0 to 5 V when the Start key is pressed?**

NO: If the connection of the cable up to the DC controller PCB is normal, replace the DC controller PCB.

Connector

- 3) **Are the connectors J601 and J602 of the drum motor connected firmly?**

NO: Connect them firmly.

YES: Replace the drum motor.

4.1.9 E013

Waste toner feedscrew (locked)

- 1) **Is the waste tone feedscrew drive gear pushing the waste toner feedscrew lock detecting switch (MSW2)?**

NO: The feedscrew inside the waste toner pipe is likely to be stuck. Remove the waste toner pipe, and try turning the screw by hand. If it turns easily, mount it back and see what happens. If the screw cannot be turned by hand, replace the waste toner pipe, and remove the cause.

MSW2, DC controller PCB

- 2) **Make the following selections in service mode: COPIER>I/O>DC-CON. Is bit 6 of P003 '0', indicating clogging with toner?**

YES: Replace the MSW2.

NO: Replace the DC controller PCB.

4.1.10 E014

| | |
|--------------------------------------|--|
| ----- | 1) Are the connectors J651 and J652 of the fixing motor connected? NO: Connect the connectors. |
| Relay PCB | 2) Is 38 V present between J651-1 and -2 of the fixing motor when the power switch is turned on with all doors closed? NO: Replace the relay PCB. |
| DC controller PCB, Fixing motor (M3) | 3) Does the voltage between connectors J508-A18 (+) and J508-A16 (-) on the DC controller PCB change from 0 to about 5 V when the Start key is pressed? NO: Replace the DC controller PCB. YES: Replace the fixing motor. |

4.1.11 E015

| | |
|--------------------------------------|---|
| ----- | 1) Are the connectors J621 and J622 of the pickup motor connected? NO: Connect the connectors. |
| Relay PCB | 2) Is 38 V present between J1721-11 and -11 of the relay PCB when all doors are closed? NO: Replace the relay PCB. |
| DC controller PCB, Pickup motor (M2) | 3) Does the voltage between J513-A3 (+) and J513-A1 (-) on the DC controller PCB change from 0 to about 5 V when the Start key is pressed? NO: Replace the DC controller PCB. YES: Replace the pickup motor. |

4.1.12 E019

| | |
|---|---|
| Waste toner case full | 1) Is the waste toner case full of toner? YES: Dispose of the toner inside the waste toner case. |
| Waste toner case base | 2) Is the movement of the waste toner case smooth? NO: Correct it. |
| Connector | 3) Is the connector J514 on the DC controller PCB firmly connected? NO: Connect the connector firmly. |
| Waste toner case full sensor, DC controller PCB | 4) Try replacing the waste toner case full sensor (PS19). Is the problem corrected? YES: If the connection of the cable up to the DC controller PCB is normal, replace the waste toner case full sensor (PS19). NO: Replace the DC controller PCB. |

4.1.13 E020

| | |
|-------------------------------------|--|
| Toner feedscrew, Toner sensor (TS3) | 1) Remove the developing assembly, and detach the top cover of the assembly. Is there toner inside the assembly? YES: Check the rotation of the toner feedscrew inside the developing assembly; if normal, replace the toner sensor (TS3). |
| ----- | 2) Make the following selections in service mode: COPIER>FUNCTION>PART-CHK. Check the operation of the hopper drive clutch (CL1) using <CL>. Does the clutch operate? NO: Check the connection; if normal, replace the clutch. |
| Hopper drive clutch (CL1) | 3) Check the operation of the hopper motor (M18) using <MTR>. Does the motor operate? NO: Check the connection; if normal, replace the motor. YES: Check the following: <ul style="list-style-type: none"> ■ magnet roller inside the hopper for rotation ■ clogging of toner between and inside the hopper and the developing assembly |

4.1.14 E025

| | |
|---|--|
| Connector | 1) Is the connector J512 on the DC controller PCB firmly connected? NO: Connect it firmly |
| Drive system, Toner feed motor (M6; inside cartridge) | 2) Does the drive system for toner feeding inside the cartridge operate smoothly? NO: Correct it. YES: Replace the toner feed motor inside the cartridge. |

4.1.15 E032

| | |
|--|--|
| Connector | 1) Is the copy data controller or the NE controller connected firmly, i.e., connectors J525 and J526 on the DC controller PCB? NO: Connect it firmly. |
| DC controller PCB, Copy data controller or NE controller | 2) Try replacing the copy data controller or the NE controller. Is the problem corrected? NO: Replace the DC controller PCB. YES: Make corrections. |

4.1.16 E043

| Side deck drive PCB | 1) Is there electrical continuity between the following connectors on the side deck drive PCB? <table border="1" data-bbox="330 1029 658 1121"> <thead> <tr> <th>Signal</th><th>Connectors</th></tr> </thead> <tbody> <tr> <td>38VU</td><td>J106-1 \longleftrightarrow J101-1</td></tr> <tr> <td>0VU</td><td>J106-2 \longleftrightarrow J101-2</td></tr> </tbody> </table> | Signal | Connectors | 38VU | J106-1 \longleftrightarrow J101-1 | 0VU | J106-2 \longleftrightarrow J101-2 |
|---|---|--------|------------|------|-------------------------------------|-----|-------------------------------------|
| Signal | Connectors | | | | | | |
| 38VU | J106-1 \longleftrightarrow J101-1 | | | | | | |
| 0VU | J106-2 \longleftrightarrow J101-2 | | | | | | |
| | NO: Replace the side deck driver PCB. | | | | | | |
| Deck main motor (M101), DC controller PCB | 2) Try replacing the deck main motor (M101) of the side paper deck. Is the problem corrected? YES: End. NO: Check the harness from the DC controller PCB to the motor; if normal, replace the DC controller PCB. | | | | | | |

4.1.17 E051

Horizontal registration home position sensor (PS18)

1) Is the horizontal registration home position sensor (PS18) normal?

NO: Replace PS18.

Horizontal registration motor M15)

2) Disconnect J3603 of the stackless feed driver PCB. Is there electrical continuity between the following pins of the jacks on the motor side?

J3603-B4 and -B5 and -B3

J3603-B2 and -B6 and -B1

NO: Replace the horizontal registration motor (M15).

Manual feed tray open/closed detecting switch (MSW5)

3) Is the mounting of the manual feed tray open/closed detecting switch (MSW5) normal?

NO: Correct the mounting.

Stackless feed driver PCB, DC controller PCB


4) Try replacing the stackless drive PCB. Is the problem corrected?

YES: end.

NO: Replace the DC controller PCB.

4.1.18 E065


| | |
|----------------------------------|---|
| Primary charging assembly (dirt) | 1) Is the primary charging assembly soiled with paper lint or the like? YES: Clean the primary charging assembly. |
| Mounting | 2) Is the primary charging assembly mounted firmly? NO: Mount it firmly. |
| Contact | 3) Is the contact of the primary charging assembly clean? NO: Clean or correct it. |
| Connection | 4) Is the connection of the following on the HV-DC PCB firm? (See F06-401-01.) <ul style="list-style-type: none">• T601• J723• J730 NO: Connect them firmly. |
| Wiring, HV-DC PCB | 5) Is the wiring from the HV-DC PCB to the primary charging assembly normal? NO: Correct the wiring. YES: Replace the HV-DC PCB. |

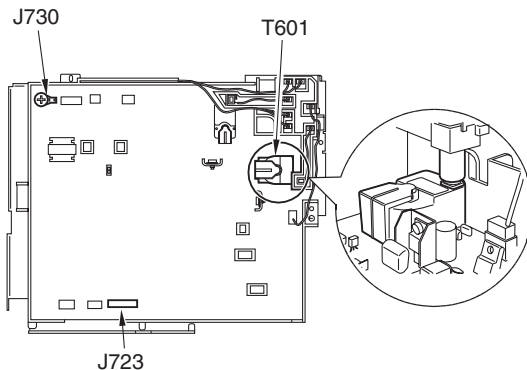

F06-401-01

4.1.19 E067

| | |
|----------------------|--|
| Mounting | <p>1) Are the primary charging assembly, pre-transfer charging assembly, and transfer/separation charging assembly mounted firmly? NO: Mount them firmly.</p> |
| Connection | <p>2) Are the following connectors on the HV-DC PCB and the screws connected and tightened firmly? (See F05-401-02.)</p> <ul style="list-style-type: none"> • J721 • J723 • J730 <p>NO: Connect or tighten firmly.</p> |
| Wiring | <p>3) Is the wiring from the HV-DC PCB to each charging assembly and the wiring from the HV-AC PCB to each charging assembly normal? NO: Corrected the wiring.</p> |
| HV-AC PCB, HV-DC PCB | |
| | <p>4) Disconnect the connector J722 of the HV-DC PCB, and execute copying. Is E067 indicated?</p> <p>NO: Replace the HV-AC PCB, and connector the connector J722. YES: Replace the HV-DC PCB, and connect the connector J722.</p> |

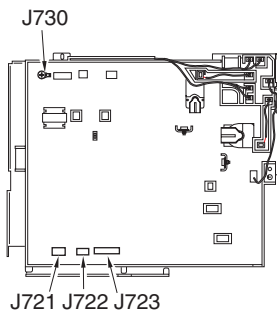

F06-401-02

4.1.20 E068


| Mounting | <p>1) Is the transfer/separation charging assembly mounted firmly? NO: Mount it firmly.</p> | | | | |
|---|---|-----------|-----------|---|---|
| Connection | <p>2) Are the following connectors on the HV-DC PCB and HV-AC PCB and the screws connected and tightened firmly? (See F06-401-03.)</p> <table><tr><th>HV-DC PCB</th><th>HV-AC PCB</th></tr><tr><td><ul style="list-style-type: none">• J722• J722• J722• J734</td><td><ul style="list-style-type: none">• J741• J742</td></tr></table> <p>NO: Connect and tighten them firmly.</p> | HV-DC PCB | HV-AC PCB | <ul style="list-style-type: none">• J722• J722• J722• J734 | <ul style="list-style-type: none">• J741• J742 |
| HV-DC PCB | HV-AC PCB | | | | |
| <ul style="list-style-type: none">• J722• J722• J722• J734 | <ul style="list-style-type: none">• J741• J742 | | | | |
| Separation charging assembly | <p>3) Disconnect the connector T1-S from the transformer assembly of the HV-AC PCB, and execute copying. Is E068 indicated? (See F06-401-04.)</p> <p>NO: Clean the separation charging assembly. If E068 still is indicated when executing copying, replace the separation charging assembly.</p> | | | | |

Pre-transfer charging assembly, HV-DC PCB


- 4) **Disconnect the connector T1-Q from the transformer assembly of the HV-AC PCB, and execute copying. Is E068 indicated? (See F06-401-04.)**

NO: Clean the pre-transfer charging assembly. If E068 is still indicated when copying is executed, replace the pre-transfer charging assembly.

YES: Replace the HV-AC PCB.

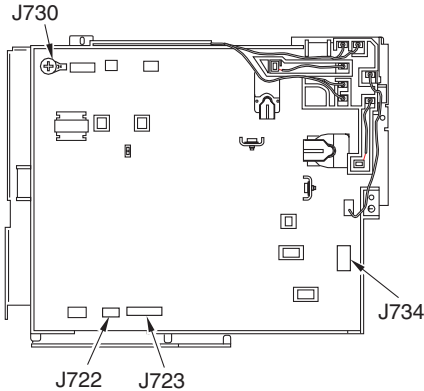


F06-401-03

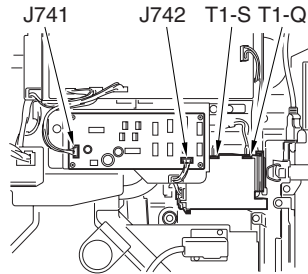

F06-401-04

4.1.21 E069

| | |
|--|--|
| Mounting | <p>1) Is the transfer/separation charging assembly mounted firmly? NO: Mount it firmly.</p> |
| Connection | <p>2) Are the following connectors on the HV-DC PCB and the screws connected and tightened firmly?</p> <ul style="list-style-type: none">• T701• J723• J730 <p>NO: Connect and tighten them firmly.</p> |
| Wiring | <p>3) Is the wiring from the HV-DC PCB to the transfer/separation charging assembly (transfer charging assembly side) normal? NO: Correct the wiring.</p> |
| HV-DC PCB, Transfer/separation charging assembly | |
| | <p>4) Try replacing the transfer/separation charging assembly. NO: Replace the transfer/separation charging assembly. YES: End.</p> |

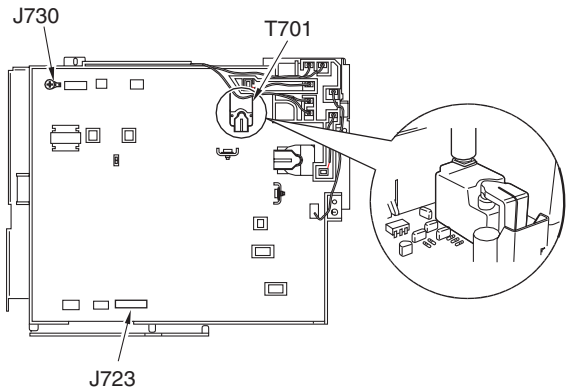

F06-401-05

4.1.22 E100

| | |
|--------|--|
| BD PCB | <p>1) Make the following selections in service mode: COPIER>DISPLAY>DPOT. Is the reading of <VLIM> between 50 and 90?</p> <p>YES: Check the connection of the BD PCB, laser driver PCB, and DC controller PCB; and check the position of the BD PCB. If normal, replace the BD PCB.</p> |
|--------|--|

Laser output, DC controller PCB

- 2) **Is the reading of <VDM> between 360 and 420?**
- YES: Check the following:
- laser output
 - laser path for foreign matter
- NO: Replace the DC controller PCB

4.1.23 E110

| | |
|-----------|--|
| Connector | <p>1) Is the connector J762 on the laser scanner motor driver PCB connected firmly?</p> <p>NO: Connect it firmly.</p> |
| Connector | <p>2) Is the connector J503 on the DC controller PCB connected firmly?</p> <p>NO: Connect it firmly.</p> |

Laser scanner unit, DC controller PCB

- 3) **Try replacing the laser scanner unit. Is the problem corrected?**
- NO: End.
- YES: Replace the DC controller PCB.

4.1.24 E111

| | |
|---|--|
| Foreign matter | 1) It here foreign matter that prevents the rotation of the laser scanner motor cooling fan? YES: Remove the foreign matter. |
| Connector | 2) Is the connector J503 on the DC controller PCB connected firmly? NO: Connect it firmly |
| Laser scanner fan (FM14), DC controller PCB | 3) Try replacing the laser scanner motor fan (FM14). Is the problem corrected? YES: End. NO: Replace the DC controller PCB. |

4.1.25 E121-0001

| | |
|--|---|
| Foreign matter | 1) Is there foreign matter that prevents the rotation of the scanner cooling fan? YES: Remove the foreign matter. |
| Connector | 2) Is the connector J503 on the reader controller PCB connected firmly? NO: Connector it firmly. |
| Scanner cooling fan (FM3), Reader controller PCB | 3) Try replacing the scanner cooling fan (FM3). Is the problem corrected? NO: End. YES: Replace the reader controller PCB. |

4.1.26 E121-0002

| | |
|---|--|
| Foreign matter | <p>1) Is there foreign matter that prevents the rotation of the laser driver cooling fan? YES: Remove the foreign matter.</p> |
| Connector | <p>2) Is the connector J503 on the DC controller PCB connected firmly? NO: Connect it firmly.</p> |
| Laser driver cooling fan (FM5), DC controller PCB | <p>3) Try replacing the laser drive cooling fan (FM5). Is the problem corrected? NO: End. YES: Replace the DC controller PCB.</p> |

4.1.27 E202 (The keys in the control panel are locked.)

| | |
|---|--|
| ----- | <p>1) Is the scanner in home position when E202 is indicated? NO: See “The scanner fails to move forward.”</p> |
| Connector | <p>2) Is the connector J1702 on the relay PCB connected firmly? NO: Connect it firmly.</p> |
| Scanner home position sensor (PS1), Reader controller PCB | <p>3) Is the scanner home position sensor (PS1) normal? (See the instructions on how to check photointerrupters.) YES: Check the wiring from the reader controller PCB to PS1; if normal, replace PS1. NO: Replace the reader controller PCB.</p> |

4.1.28 E204 (The keys in the control panel are locked.)

| | |
|--|--|
| ----- | 1) Does the scanner move forward when the Start key is pressed? NO: See “The scanner fails to move forward.” |
| Scanner image leading edge sensor (PS3), Reader controller PCB | 2) Is the scanner image leading edge sensor (PS3) normal? (See the instructions on how to check photointerrupters.) NO: Check the wiring from the reader controller PCB to PS3; if normal, replace PS3. YES: Replace the reader controller PCB. |

4.1.29 E211

4.1.30 E215

| | |
|--|---|
| Connector | 1) Are the connectors J852 and J853 on the light control PCB firmly connected? NO: Connector them firmly. |
| Fluorescent lamp heater | 2) Try replacing the fluorescent lamp heater. Is the problem corrected? YES: End. |
| Light control PCB, Reader controller PCB | 3) Try replacing the light control PCB. Is the problem corrected? YES: End. NO: Replace the reader controller PCB. |

4.1.31 E218

| | |
|---|---|
| Mounting | 1) Is the fluorescent lamp mounted firmly? NO: Mount it firmly. |
| Connector | 2) Are the connectors J1002 and J1003 on the inverter PCB firmly connected? NO: Connect them firmly. |
| Fluorescent lamp, Reader controller PCB | 3) Try replacing the fluorescent lamp. YES: End. NO: Replace the reader controller PCB. 4) Is J1702 on the relay PCB connected correctly? NO: Connect it correctly. |

4.1.32 E219

4.1.33 E220

4.1.34 E222

| | |
|--|---|
| Connector | 1) Are the connectors J852 and J853 on the light control PCB firmly connected? NO: Connect them firmly. |
| Fluorescent lamp heater | 2) Try replacing the fluorescent heater. Is the problem corrected? YES: End. |
| Light control PCB, Reader controller PCB | 3) Try replacing the light control PCB. YES: End. NO: Replace the rear controller PCB. |

4.1.35 E226

| | |
|--|---|
| Foreign matter | 1) Is there foreign matter that prevents the rotation of the scanner cooling fan? YES: Remove the foreign matter. |
| Connector | 2) It the connector J503 on the reader controller PCB connected firmly? NO: Connect them firmly. |
| Scanner cooling fan (FM3), Reader controller PCB | 1) Try replacing the scanner cooling fan (FM3). Is the problem corrected? NO: End. YES: Replace the reader controller PCB. |

4.1.36 E240

| | |
|-------------------|---|
| DC controller PCB | 1) Turn off and then on the power switch. Is the problem corrected? YES: End. NO: Replace the DC controller PCB. |
|-------------------|---|

4.1.37 E241

| | |
|-----------------------|--|
| Mounting | 1) Is the original orientation detection PCB mounted firmly? NO: Mount it firmly. |
| Reader controller PCB | 2) Try replacing the original orientation PCB. Is the problem corrected? YES: End. NO: Replace the rear controller PCB. |

4.1.38 E243

| | |
|-------------------|--|
| Controller PCB | 1) Turn off and then on the power switch. YES: End. NO: Replace the controller PCB. |
| Control panel PCB | 2) Try replacing the control panel PCB. Is the problem corrected? YES: End. |

4.1.39 E251

| | |
|---|--|
| Foreign matter | 1) Is there foreign matter that prevents the rotation of the inverter cooling fan? YES: Remove the foreign matter. |
| Connector | 2) Is the connector J1110 on the reader controller PCB connected firmly? NO: Connect it firmly. |
| Inverter cooling fan (FM9), Reader controller PCB | 3) Try replacing the inverter cooling fan (FM9). Is the problem corrected? NO: End. YES: Replace the reader controller PCB. |

4.1.40 E302

| | |
|--------------------------------|--|
| Connector | 1) Are the connectors J1502 and J1503 on the CCD PCB and the J1107 and J1108 on the reader controller PCB connected firmly? NO: Connector them firmly. |
| CCD PCB, Reader controller PCB | 2) Try replacing the CCD PCB. Is the problem corrected? YES: End. NO: Replace the reader controller PCB. |

4.1.41 E315

| | |
|---------------------|---|
| Rear controller PCB | 1) Try replacing the reader controller PCB. Is the problem corrected? YES: End. |
| Main controller PCB | 2) Try replacing the main controller PCB. Is the problem corrected? YES: End. |

4.1.42 E320

| | |
|--------------------------------|--|
| Connector | 1) Are the connectors J1502 and J1503 on the CCD PCB and the J1107 and J1108 on the reader controller PCB connected firmly? NO: Connector them firmly. |
| CCD PCB, Reader controller PCB | 3) Try replacing the CCD PCB. Is the problem corrected? YES: End. NO: Replace the reader controller PCB. |

4.1.43 E400

Communication cable

- 1) **Is the connection of the communication cable between ADF and the machine normal?**

NO: Correct it.


ADF controller PCB

- 2) **Try replacing the ADF controller PCB. Is the problem corrected?**

YES: End.

4.1.44 E402

- 1) **Set the bits of the DIP switch (SW1) on the ADF controller PCB as follows:**




F06-401-06

Does the belt motor (M2) rotate when the push switch (SW2) is pressed? (To stop, press the push switch (SW2) once again.)

YES: Go to step 3.

Belt motor (M2)

- 2) **Disconnect the connector (J62) on the belt motor driver PCB. Set the meter range to X1, and connect the probes of the meter to the connectors on the cable side as follows. Is the resistance about 1.1Ω?**

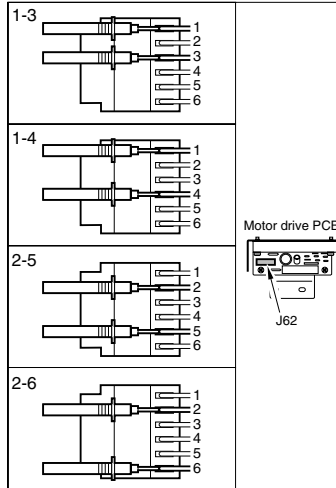

F06-401-07

NO: Replace the belt motor (M2).

Belt motor clock sensor (PI1)

- 3) **Set the meter range to 10 VDC. Does the voltage between the connectors J12-2 (+) and J12-1 (-) on the ADF controller PCB alternate between 0 and 5 V when the belt motor is turned by hand?**

NO: Replace the belt motor clock sensor (PI1).

Cable

- 4) **Is the cable between the belt motor driver PCB and the ADF controller PCB connected correctly?**

NO: Connect it correctly.

Belt motor drive PCB, ADF controller PCB


- 5) **Try replacing the belt motor drive PCB. Is the problem corrected?**

YES: Replace the belt motor driver PCB.

NO: Replace the ADF controller PCB.

4.1.45 E404

- 1) Set the bits of the DIP switch (SW1) on the ADF controller PCB as follows:




F06-401-08

Does the delivery motor (M5) rotate when the push switch (SW2) is pressed? (To stop, press the push switch (SW2) once again.)

YES: Go to step 3.

Delivery motor (M5)

- 2) Disconnect the connector J2 from the ADF controller PCB. Set the meter range to $\times 1\Omega$, and connect the meter probes to the connectors on the cable side. Is the resistance about 15Ω ?

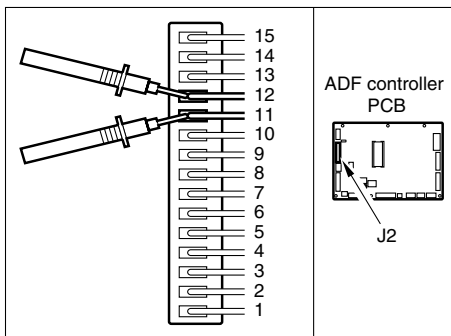

F06-401-09

NO: Replace the delivery motor (M5).
After replacement, be sure to perform "adjustment of the sensors and the delivery motor."

Delivery motor clock sensor (PI11), ad controller PCB

- 3) Set the meter range to 10 VDC. Does the voltage between the connectors J3-2 (+) and J3-1 (-) on the ADF controller PCB alternate between 0 and 5 V when the delivery motor is turned by hand?

NO: Replace the delivery motor clock sensor (PI11).

YES: Replace the ad controller PCB.

4.1.46 E405

- 1) **Set the bits of the DIP switch (SW1) on the ADF controller PCB as follows:**




F06-401-10

Does the separation motor (M4) rotate when the push switch (SW2) is pressed? (To stop, press the push switch (SW2) once again.)

YES: Go to step 3.

Separation motor (M4)

- 2) **Disconnect the connector (J8) on the ADF controller PCB. Set the meter range to $\times 1\Omega$, and connect the meter probes to the connectors on the cable side. Is the resistance about 5.0Ω ?**

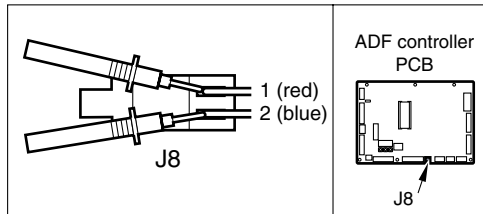

F06-401-11

NO: Replace the separation motor (M4).

Separation motor clock sensor (PI2), ADF controller PCB


- 3) **Set the meter range to 10 VDC. Does the voltage between the connectors J12-5 (+) and J12-4 (-) on the ADF controller PCB alternate between 0 and 5 V when the separation motor is turned by hand?**

NO: Replace the separation motor clock sensor (PI2).

YES: Replace the ADF controller PCB.

4.1.47 E410

- 1) Set the bits of the DIP switch (SW1) on the ADF controller PCB as follows:




F06-401-12

Does the motor (M3) rotate when the push switch SW2 is pressed and then push switch SW3/SW4 is pressed? (To stop, press the push switch (SW2) once again.)

YES: Go to step 3.

Pickup motor (M3)

- 2) Disconnect the connector (J11) of the ADF controller PCB. Set the meter range to $\times 1\Omega$, and connect the meter probes to the connectors on the cable side. Is the resistance about 74Ω ?

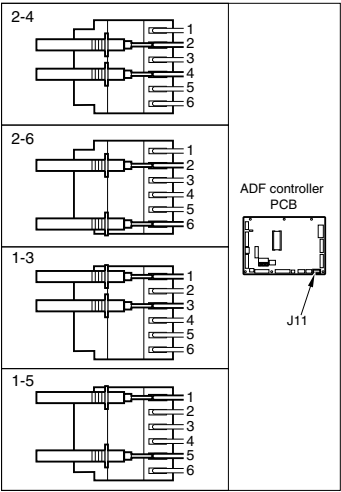

F06-401-13

NO: Replace the pickup motor (M3).

Pickup roller height sensor 1 (PI8)

- 3) Set the meter range to 10 VDC. Does the voltage between the connectors J14-A8 (+) and J14-A7 (-) on the ADF controller PCB alternate between 0 and 5 V when the pickup roller unit (rear) is moved up and down by hand?**

NO: Replace the pickup roller height sensor 1 (PI8).

Pickup roller height sensor 2 (PI9)

- 4) Set the meter range to 10 VDC. Does the voltage between the connectors J14-A11 (+) and J14-A10 (-) on the ADF controller PCB alternate between 0 and 5 V when the pickup roller unit (front) is moved up and down by hand?**

NO: Replace the pickup roller height sensor 2 (PI9).

Pickup roller home position sensor (PI7)

- 5) Set the meter range to 10 VDC. Is there voltage of the connectors J14-A5 (+) and J14-A4 (-) on the ADF controller PCB about 5 V when the pickup roller is moved back to home position by hand?**

NO: Replace the pickup roller home position sensor (PI7).

ADF controller PCB

- 6) Try replacing the ADF controller PCB. Is the problem corrected?**

YES: Replace the ADF controller PCB.

4.1.48 E422

Communication cable

- 1) Is the connection of the communication cable between the ADF controller PCB and the machine normal?**

NO: Correct it.

Connector

- 2) Is there connection of the connector J1 on the ADF controller PCB normal?**

NO: Correct it.

Cable, ADF controller PCB

- 3) Is the cable from the connector J1 of the ADF controller PCB to the communication cable normal?**

NO: Correct the cable.

YES: Replace the ADF controller PCB.

4.1.49 E601

HDD Connector

- 1) **Are the connectors and the cables between the Hard disk drive and the main controller PCB firmly connected?**

NO: Correct them.

Wiring

- 2) **Are the connectors and the cables between the DC controller PCB and the main controller PCB firmly connected?**

NO: Correct them.

Hard disk

- 3) **Try replacing the hard disk. Is the problem corrected?**

YES: End.

DC controller PCB, Main controller PCB

- 4) **Try replacing the DC controller PCB. Is there problem corrected?**

YES: End.

NO: Replace the main controller PCB.

4.1.50 E602

System software (installation)

- 1) **Is the installation of the system software complete?**

NO: Install the system software.

Connector

- 2) **Are the connectors and the cables between the HDD and the main controller PCB correct?**

NO: Correct them.

HDD, Main controller PCB

- 3) **Using the Service Support Tool, format the HDD; then, install the system software once again. Is there problem corrected?**

YES: End.

NO: Make the following selections in service mode to repair the faulty sectors: FUNCTION>SYSTEM>HD-Check (0). Is the problem corrected?

- 4) **Try replacing the hard disk drive. Is the problem corrected?**

YES: End.

NO: Replace the main controller PCB.

4.1.51 E676

4.1.52 E677

| | |
|--------------------------------|--|
| Connector | 1) Is the connection for the printer board (accessory) correct? NO: Correct it. |
| Connector | 2) Is the connector between the riser PCB and the main controller PCB correct? NO: Correct it. YES: Correct it. |
| Riser PCB, Main controller PCB | 3) Try replacing the riser PCB. Is the problem corrected? YES: End. NO: Replace the main controller PCB. |
| E677-5802 | 4) Machine types are not compatible between Boot ROM and System. (e.g., Boot ROM for the iR8500 Copy model is mounted on the system for the iR8500 PS/PCL model.) YES: Replace Boot ROM with an appropriate one. |

4.1.53 E710-0001 (reader controller), E710-0002 (DC controller), E710-0003 (main controller)

4.1.54 E711-0001 (reader controller), E711-0002 (DC controller), E711-0003 (main controller)

Malfunction, DC controller PCB

- | | |
|--|--|
| 1) Turn off and then on the power switch. Is the problem corrected? YES: End. NO: Replace the reader controller PCB. (0001) Replace the DC controller PCB. (0002) Replace the main controller PCB. (0003) | |
|--|--|

4.1.55 E712

| | |
|---|--|
| Malfunction | 1) Turn off and then on the power switch. Is the problem corrected? YES: End. |
| Connector | 2) Is the connector (J772) used to connect the and the copier connected firmly to the copier? NO: Replace the reader controller PCB. |
| ADF controller PCB, Reader controller PCB | 3) Try replacing the ADF controller PCB. Is the problem corrected? YES: End. NO: Replace the reader controller PCB. |

4.1.56 E713

| | |
|--|---|
| Malfunction | 1) Turn off and then on the power switch. Is the problem corrected? YES: End. |
| Connector | 2) Is the connector (J152) used to connector the finisher and the copier connected firmly to the copier? NO: Replace the DC controller PCB. |
| Finisher controller PCB, DC controller PCB | 3) Try replacing the finisher controller PCB. Is the problem corrected? YES: End. NO: Replace the DC controller PCB. |

4.1.57 E717

| | |
|---------------------------------------|--|
| Power supply | 1) Is the copy data controller or the NE controller correctly supplied with power? NO: Correct it. Note: You must clear the error in service mode: COPIER>FUNCTION>CLEAR>ERR. |
| Wiring | 2) Is there cable between the copy data controller or the NE controller and the machine normal? NO: Correct it. Note: You must clear the error in service mode: COPIER>FUNCTION>CLEAR>ERR. |
| Copy data controller or NE controller | 3) Try replacing the copy data controller or the NE controller. Is the problem corrected? YES: End. |

4.1.58 E732

| | |
|-----------------------|--|
| Wiring | 1) Are the connectors and the cables for the main controller PCB and the reader controller PCB normal? NO: Correct them. |
| Reader controller PCB | 2) Try replacing the reader controller PCB. Is the problem corrected? YES: End. NO: Replace the main controller PCB. |

4.1.59 E733

| | |
|-------------------|--|
| Wiring | 1) Are the connectors and cables between the main controller PCB and the DC controller PCB normal? NO: Correct them. |
| DC controller PCB | 2) Try replacing the DC controller PCB. Is the problem corrected? YES: End. NO: Replace the main controller PCB. |

4.1.60 E737

| | |
|------------------|---|
| SDRAM (mounting) | 1) Is the SDRAM on the main controller mounted correctly? NO: Mount it correctly. |
| SDRAM | 2) Try replacing the SDRAM. Is the problem corrected? YES: End. NO: Replace the main controller PCB. |

4.1.61 E740

| | |
|--------------------------|--|
| Ethernet card (mounting) | 1) Is the Ethernet card mounted correctly? NO: Correct it. |
| Ethernet card | 2) Try replacing the Ethernet card. Is the problem corrected? NO: Replace the main controller PCB. |

4.1.62 E741

| | |
|------------------------|---|
| Riser board (mounting) | 1) Is the riser board mounted correctly? NO: Correct it. |
| LIPS board (mounting) | 2) Is the LIPS board mounted correctly? NO: End. YES: Replace the main controller PCB. |

4.1.63 E744

Language module

1) Was the language module installed during upgrading work?

NO: Install it.

Version (system and boot ROM)

2) Is the boot ROM designed for a different model?

YES: Replace the boot ROM with a correct one.

E744-1000

**3) Machine models are not identical between Boot ROM and System.
(e.g., Boot ROM for the iR5000 Copy model is mounted on the Sys-
tem for the iR8500 Copy model)**

YES: Replace Boot ROM with an appropriate one.

E744-2000

**4) HDD stored the system for another machine model is connected.
(e.g., HDD for the iR8500 Copy model is changed the HDD for the
iR105 Copy model)**

YES: Replace HDD with the one in which appropriate system is stored.

4.1.64 E800

Malfunction

1) Turn off and then on the power switch. Is the problem corrected?

YES: End.

J24

**2) Is the connector J505 on the DC controller PCB and then connector
J1719 on the relay PCB connected securely?**

NO: Connect the connectors securely.

Relay PCB, DC controller PCB

**3) Is the voltage of the connector J505-B13 on the DC controller PCB
about 0 V?**YES: Check the wiring and electrical continuity from the DC controller
PCB to the relay board PCB; if normal, replace the relay board
PCB.

4.1.65 E804

| | |
|---|--|
| Foreign matter | 1) Is there foreign matter that prevents the rotation of the power supply cooling fan (1/2)? YES: Remove the foreign matter. |
| Connector | 2) Is the connector (J505) of the DC controller PCB connected firmly? NO: Connect it firmly. |
| Power supply cooling fan 1/2 (FM11/12), DC controller PCB | 3) Try replacing the power supply fan (1/2). Is the problem corrected? NO: End. YES: Replace the DC controller PCB. |

4.1.66 E805

| | |
|--|--|
| Foreign matter | 1) Is there foreign matter that prevents the rotation of the fixing assembly heat discharge fan? YES: Remove the foreign matter. |
| Connector | 2) Is the connector (J503) on the controller PCB connected firmly? NO: Connect it firmly. |
| Fixing heat discharge fan (FM2), DC controller PCB | 3) Try replacing the fixing the discharge fan (FM2). Is the problem corrected? NO: End. YES: Replace DC controller PCB. |

4.1.67 E820

| | |
|-----------------------------------|--|
| Foreign matter | 1) Is there foreign matter that prevents the rotation of the drum fan? YES: Remove the foreign matter. |
| Connector | 2) Is the connector (J512) on the DC controller PCB connected firmly? NO: Connect it correctly. |
| Drum fan (FM8), DC controller PCB | 3) Try replacing the drum fan (FM8). Is the problem corrected? NO: End. YES: Replace the DC controller PCB. |

4.1.68 E823

| | |
|--|---|
| Foreign matter | 1) Is there foreign matter that prevents the rotation of the pre-transfer charging assembly fan? YES: Remove the foreign matter. |
| Connector | 2) Is the connector (J504) on the DC controller PCB firmly connected? NO: Connect it firmly. |
| Pre-transfer charging assembly fan (FM10), DC controller PCB | 3) Try replacing the pre-transfer charging assembly (FM10). Is the problem corrected? NO: End. YES: Replace the DC controller PCB. |

4.1.69 E824

| | |
|--|---|
| Foreign matter | 1) Is there foreign matter that prevents the rotation of the primary charging assembly fan? YES: Remove the foreign matter. |
| Connector | 2) Is the connector (J503) on the DC controller PCB connected firmly? NO: Connect it firmly. |
| Primary charging assembly fan (FM1), DC controller PCB | 3) Try replacing the primary charging fan (FM1). Is the problem corrected? NO: End. YES: Replace the DC controller PCB. |

4.1.70 E830

| | |
|--|---|
| Foreign matter | 1) Is there foreign matter that prevents the rotation of the separation fan? YES: Remove the foreign matter. |
| Connector | 2) Is the connector (J509) on the DC controller PCB connected firmly? NO: Connect it firmly. |
| Separation fan (FM13), DC controller PCB | 3) Try replacing the separation fan (FM13). Is the problem corrected? NO: End. YES: Replace the DC controller PCB. |

4.1.71 AC power is absent

| | |
|----------------------------|--|
| Power plug | 1) Is the work plug connected to the power outlet? NO: Connect the power plug. |
| Source power | 2) Is the rated AC voltage present at the power outlet? NO: The problem is not of the copier's. Advise the user. |
| Leakage breaker | 3) Remove the rear cover, and check to find out if the leakage breaker mounted to the power cord base has gone ON (at ○). YES: Remove the cause of activation, and shift the switch of the leakage breaker to the 'I' marking. |
| Power cord, AC driver PCB | 4) Try replacing the power cord and the AC driver PCB. Is AC power supplied? YES: End. NO: Check the wiring for AC power, and check the connectors for poor contact. |
| Connector | 5) Turn on the control panel power switch. Is the power supplied to the connector (J28) on the DC power supply PCB? NO: Check the connection between the main controller PCB (J1021) and the all-night power supply PCB (J785). |
| All-night power supply PCB | 6) Turn on the control panel power switch. Is 3.3 V supplied to the connectors (J1021-1 and -2) on the main controller PCB? NO: Replace the all-night power supply PCB. |
| Power switch (SW1), Wiring | 7) Connect the meter probes across both terminals of the power switch (SW1). Is the resistance 0Ω when the switch is ON, and $\infty\Omega$ when the switch is OFF? NO: Replace the power switch. YES: Check the wiring for AC power, and check the connector for contact. |

4.1.72 The DC power supply fails to operate. 1

Control pane power switch-related items

1) Is the main power lamp ON?

YES: See “The DC power supply fails to operate. 2”

AC power supply

2) Is the rated voltage present between J28-1 and J28-5 and between J28-2 and J28-7 on the DC power supply PCB?

NO: See “AC power is absent.”

Wiring

3) Is the cable of the connector J1701-4 (overcurrent detection signal 1) on the relay PCB normal?

NO: Correct it.

Fuse (FU101)

4) Is the fuse (FU101) on the DC power supply PCB blown?

YES: Remove the cause, and replace the fuse.

Wiring, DC load, DC power supply PCB

5) Turn off the main power switch. When the main power switch is turned on in about 3 min, is the voltage between the following terminals of the relay PCB normal?

| Connector | Pin No. | Output voltage | Remarks |
|-----------|---------|----------------|-----------|
| J1704 | 1 | 12V | +7%, -10% |
| | 3 | 3.3V | ±5% |
| J1705 | 1 | +8V | ±10% |
| | 3 | -8V | ±10% |
| | 5 | 15V | ±10% |
| J1706 | 1 | 5V | ±4% |

However, the output voltages in the table are based on a tolerance in AC input of ±10%.

YES: Turn off the power switch, and disconnect the following connectors of the relay PCB:

- J1711
- J1712
- J1714
- J1716
- J1718

Connect one of the disconnected connectors, and turn on the power switch. Repeat this for all connectors to find the connector for which the protective circuit goes ON. Then, check the wiring and DC loads connected to the connector.

NO: Replace the DC power supply PCB.

4.1.73 Pickup fails

| | |
|---|--|
| ----- | 1) Slide in and out the cassette. Are the sounds of the lifter drop and the lifter motor turning heard? NO: See "The lifer fails to move up." |
| Drive gear | 2) Is the drive belt attached correctly? NO: Attach the drive belt correctly. |
| Right upper cover, Right lower cover | 3) Are the right upper cover and the right lower cover fully closed? NO: Close the covers fully. |
| Pressure spring | 4) Are the right upper cover and the right lower cover locking the vertical path rollers 1, 2, 3, and 4 in place? NO: Check the locking spring. |
| Vertical path 1 clutch (CL8), Vertical path 2 clutch (CL9), Vertical path 3 clutch (CL13), Vertical path 4 clutch (CL15), Pre-registration roller clutch (CL5) | 5) Open the right upper cover and the right lower cover; then, put paper over the cover open/closed sensor assembly, and press the Start key. Does the vertical path rollers 1, 2, 3, and 4 and the pre-registration roller rotate? NO: Check the wiring; if normal, replace the clutch. |
| Registration roller drive clutch | 6) Is the leading edge of the copy paper as far as the registration roller assembly? YES: See "The registration roller fails to rotate." |
| Pickup assembly | 7) Open the right upper cover and the right lower cover. With a screwdriver fitted in the door switch, press the Start key. Does the feeding/separation roller rotate? YES: Go to step 9. |

Pickup clutch, DC controller PCB

- 8) **Set the meter range to 30 VDC, and connect the meter probes to the connectors of the DC controller PCB as indicated in the following table. Does the voltage change from 24 to 0 V when the Start key is pressed?**

| Cassette | Clutch | + | - |
|------------|--------|---------|-----|
| Right deck | CL10 | J511-A1 | GND |
| Left deck | CL11 | J518-B7 | GND |
| 3 | CL12 | J515-A1 | GND |
| 4 | CL14 | J517-A1 | GND |

YES: Check the wiring; if normal, replace the clutch.

NO: Replace the DC controller PCB.

Sensor, Pickup assembly

- 9) **In service mode (COPIER>I/O>IP), find out which sensor has detected the jam. Is the sensor normal?**

NO: Check the wiring and the lever; if normal, replace the sensor.

YES: Remove the pickup assembly, and check the springs and the like.

4.1.74 The lifter fails to move up

| | |
|---------------------------------|---|
| Gear lever | <p>1) Remove the deck, and move the lifter by hand. Does it move smoothly? NO: Remove the pickup assembly, and check the gear and the lever.</p> |
| Spring lever | <p>2) Push down the pickup roller releasing lever with your finger. Does the pickup roller move down? NO: Remove the pickup assembly, and check the spring and the lever.</p> |
| Deck open/closed sensor | <p>3) Is the voltage of the following connectors on the DC controller PCB about 5 V when the deck is slid in? right deck (PS25): J511-B5 left deck (PS33): J518-B2 NO: Check the sensor flag and the wiring; if normal, replace the sensor.</p> |
| Deck limit sensor | <p>4) Is the voltage of the following connectors on the DC controller about 0 V? right deck (PS24): J511-B8 left deck (PS34): J518-B5 NO: Check the sensor flag and the wiring; if normal, replace the sensor.</p> |
| Lifter motor, DC controller PCB | <p>5) Turn on the main power switch and the control panel power switch. Set the meter range to 30 VDC. Connect the - probe to ground and + probe to the connector of the DC controller PCB. Does the voltage change from about 0 V to 24 V when the deck is slid in? right deck (M13): J514-A4 left deck (M14): J514-B1 YES: Replace the deck lifter motor. NO: Replace the DC controller PCB.</p> |

4.1.75 The lifter fails to move up (pickup from cassette)

Cassette size detecting switch

1) Is the size of the cassette indicated in the message display?

NO: Check the cassette size detecting switch.

Cassette (latch assembly)

2) Is the movement of the cassette open button normal?

NO: Mount it correctly.

Spring lever

3) Push up the pickup roller releasing lever with a finger. Does the pickup roller move down?

NO: Remove the pickup assembly, and check the spring and the lever.

Cassette open/closed sensor

4) Is the voltage of the following connectors on the DC controller about 5 V when the cassette is slid in?**cassette 3 (PS40): J515-B5****cassette 4 (PS45): J517-B5**

NO: Check the sensor flag and the wiring; if normal, replace the sensor.

Lifter motor, DC controller PCB

5) Turn on the power switch and the control panel power switch, and set the meter range to 30 VDC. Connect the - probe to ground, and connect the + probe to the following jack. Does the voltage change from about 0 to 24 V when the cassette is slid in?**cassette 3 (M16): J516-A4****cassette 4 (M17): J516-B1**

YES: Remove the lifter assembly, and check the gears and the like; if normal, replace the motor.

NO: Replace the DC controller PCB.

4.1.76 Pickup fails (multifeeder)

| | |
|---|--|
| Wiring | <p>1) Is the connector (to the machine) of the multifeeder connected correctly? NO: Connect it correctly.</p> |
| ----- | <p>2) Is the leading edge of paper as far as the registration roller? YES: See “The registration roller fails to rotate.”</p> |
| Pickup roller, Pickup/feeding roller, Separation roller | <p>3) Is the orientation of the pickup roller, pickup/feeding roller, and separation roller correct? NO: Mount them correctly.</p> |
| Manual feed tray paper sensor (PS17) | <p>4) Execute the following service mode. Does the bit change from 0 to 1 when paper is placed in the multifeeder assembly? COPIER>I/O>DC-CON>P004 (bit 12) NO: Check the wiring and the sensor flag; if normal, replace the sensor (PS17). (DC controller PCB J510-B7, B8, B9)</p> |
| Manual feed tray pickup clutch (CL7) | <p>5) Execute the following in service mode. Is the sound of the clutch (CL7) operating heard? COPIER>FUNCTION>PART-CHK>CL1 ↓ OK ↓ COPIER>FUNCTION>PART-CHK>CL-ON ↓ OK NO: Check the wiring; if normal, replace the clutch (CL7). (DC controller PCB J513-A8, A9)</p> |
| Manual feed tray feeding clutch (CL18) | <p>6) Execute the following. Is the sound of the clutch (CL18) operating heard? COPIER>FUNCTION>PART-CHK>CL16 ↓ OK ↓ COPIER>FUNCTION>PART-CHK>CL-ON ↓ OK NO: Check the wiring; if normal, replace the clutch (CL18). (DC controller PCB J513-A6, A7)</p> |

Multifeeder pickup latch solenoid (SL6)

7) Execute the following in service mode. Does the multifeeder pickup roller move up and down?

COPIER>FUNCTION>PART-CHK>SL5 (up)

COPIER>FUNCTION>PART-CHK>SL6 (down)

↓
OK

COPIER>FUNCTION>PART-CHK>LS-ON

↓
OK

NO: Check the wiring and the like; if normal, replace the solenoid (SL6). (DC controller PCB J510-10-, -11, -12)

DC controller PCB

8) Try replacing the DC controller PCB. Is the problem corrected?

YES: End.

4.1.77 The vertical path roller fails to rotate

Belt, Gear, Coupling

- 1) **Is the drive transmitted to each vertical path roller through the belt, gear, and coupling?**

NO: Attach the belt, gear, and coupling properly.

Vertical path 1 clutch

- 2) **Execute the following in service mode. Is the sound of the clutch (CL8) heard?**

COPIER>FUNCTION>PART-CHK>CL7

↓
OK

COPIER>FUNCTION>PART-CHK>CL-ON

↓
OK

NO: Check the wiring; if normal, replace the clutch (CL8).
(DC controller PCB; J511-A3, -A4)

Vertical path 2 clutch

- 3) **Execute the following in service mode. Is the sound of the clutch (CL9) heard?**

COPIER>FUNCTION>PART-CHK>CL9

↓
OK

COPIER>FUNCTION>PART-CHK>CL-ON

↓
OK

NO: Check the wiring; if normal, replace the clutch (CL9).
(DC controller PCB; J514-A6, A7)

Vertical path 3 clutch

- 4) **Execute the following in service mode. Is the sound of the clutch (CL13) heard?**

COPIER>FUNCTION>PART-CHK>CL3

↓
OK

COPIER>FUNCTION>PART-CHK>CL-ON

↓
OK

NO: Check the wiring; if normal, replace the clutch (CL13).
(DC controller PCB; J515-A3, -A4)

Vertical path 4 clutch, DC controller PCB

- 5) **Execute the following in service mode. Is the sound of the clutch (CL15) heard?**

COPIER>FUNCTION>PART-CHK>CL5



[OK]



COPIER>FUNCTION>PART-CHK>CL-ON



[OK]

NO: Check the wiring; if normal, replace the clutch (CL15).
(DC controller PCB; J517-A3, -A4)

YES: Replace the DC controller PCB.

4.1.78 The registration roller fails to rotate

Belt, Gear, Coupling

- 1) **Is the drive of the main motor (M1) transmitted to the registration roller through the belt, gear, and coupling?**

NO: Attach the belt, gear, and coupling properly.

Registration paper sensor (PS5)

- 2) **Execute the following in service mode. Does the state of bit 11 change from '0' to '1' when paper is placed over the registration paper sensor?**

COPIER>I/O>DC-CON>P001

NO: Check the wiring and the sensor flag; if normal, replace the sensor.
(DC controller PCB, J509-A1, -A2, -A3)

Registration clutch (CL2), DC controller PCB

- 3) **Execute the following in service mode. Is the sound of the clutch (CL2) heard?**

COPIER>FUNCTION>PART-CHK>CL19



OK



COPIER>FUNCTION>PART-CHK>CL-ON



OK

NO: Check the wiring; if normal, replace the clutch (CL2).
(DC controller PCB, J509 A4, A5)

YES: Replace the DC controller PCB.

4.1.79 The No. 1 mirror base fails to move

Copyboard glass

1) Is the copyboard glass mounted correctly?

NO: Mount the copyboard glass so that the copyboard glass sensor (PS57) is actuated correctly.

Copyboard glass sensor (PS57)

2) Measure the voltage of J804-2 of the scanner motor driver. Is it as follows?

- with the copyboard glass mounted, 5 V
- with the copyboard glass removed, 0 V

NO: If the voltage remains unchanged when the sensor is pushed by hand and, in addition, the wiring is normal, replace the sensor.

Cable (broken, displaced)

3) Is the cable used to drive the scanner strung correctly?

NO: String the cable correctly.

Scanner path (foreign matter)

4) Is the scanner rail free of dirt and does the scanner move smoothly when pushed by hand?

NO: Check the surface of the scanner rail for dirt and foreign matter and for an object that comes into contact with the scanner; as necessary, clean, lubricate, or repair.

Reference: If the rail is soiled, clean it with alcohol, and apply a small amount of silicone oil (FY9-6010).

Relay PCB

5) Measure the voltage of J801 on the scanner motor driver PCB.

- J801-1: 38 V
- J801-3: 12 V
- J801-5: -12 V
- J801-6: 5 V

NO: Check the AC line up to the relay PCB; if normal, replace the relay PCB.

Reader controller PCB

6) Measure the voltage of J1109-A12 on the reader controller PCB. Is it as follows?

- with the control panel power switch ON, changing from 0 to 5 V

NO: If the wiring is normal, replace the reader controller PCB.

Scanner motor driver PCB, Scanner motor (M5)

7) Try replacing the scanner motor driver PCB. Is the problem corrected?

YES: End.

NO: Replace the scanner motor (M5).

4.1.80 The pre-exposure lamp fails to go ON

| | |
|--|---|
| Pre-exposure lamp PCB | <p>1) Select the following in service mode: COPIER>I/O>IP. Does the state of bit 0 at address P016 change from '0' to '1' when the Start key is pressed?</p> <p>YES: Check the wiring from DC controller PCB to the pre-exposure lamp PCB; if normal, replace the pre-exposure lamp.</p> |
| DC controller PCB, Pre-exposure lamp PCB | <p>2) Set the meter range to 300 VDC. Does the voltage between J504-A1 (+) on the DC controller PCB and GND change from 0 to 24 V when the Start key is pressed?</p> <p>NO: Replace the DC controller PCB.</p> <p>YES: Check the wiring from the DC controller PCB to the pre-exposure lamp PCB; if normal, replace the pre-exposure lamp PCB.</p> |

4.1.81 The scanning lamp fails to go ON

| | |
|-------------------------------------|---|
| Connector | <p>1) Make the following selections in service mode: COPIER>FUNCTION>MISC-R>SCANLAMP. Does the scanning lamp remain ON for 3 sec when the OK key is pressed?</p> <p>YES: The connector may have poor contact. Check the connector.</p> |
| Lamp | <p>2) Is the scanning lamp (LA1) mounted correctly?</p> <p>NO: Disconnect the power plug from the power outlet, and mount the lamp correctly.</p> |
| Relay PCB | <p>3) Measure the voltage of J1001-1 on the inverter PCB. Is it 38 V?</p> <p>NO: Check the AC line up to the relay PCB; if normal, replace the relay PCB.</p> |
| Inverter PCB, Reader controller PCB | <p>4) Measure the voltage of J1109-B11 on the reader controller PCB. Does it change from 5 to 0 V when the control panel power switch is tuned on?</p> <p>YES: If the wiring is normal, replace the inverter PCB.</p> <p>NO: If the wiring is normal, replace the DC controller PCB.</p> |

4.1.82 The toner feed motor (M6) inside the cartridge fails to operate

| | |
|--|--|
| ----- | <p>1) Execute the following in service mode: COPIER>FUNCTION>PART-CHK>MTR. Does the toner feed motor inside the cartridge rotate? NO: Go to step 3).</p> |
| DC controller PCB, Connectors (J243, J245) | <p>2) Execute the following service mode to turn on the hopper motor: COPIER>FUNCTION>PART-CHK>MTR. Is the voltage between J512-B4 (+) and J512-B5 (-) on the DC controller PCB 24 V? NO: Replace the DC controller PCB. YES: Check the connection of the relay connectors J243 and J245.</p> |

4.1.83 The feed motor (M18) inside the hopper fails to operate

| | |
|---|--|
| ----- | <p>1) Execute the following in service mode: COPIER>FUNCTION>PART-CHK>MTR. Does the toner feed motor inside the hopper rotate? NO: Go to step 3.</p> |
| DC controller PCB, Connector (J138, J143) | <p>2) Execute the following in service mode: COPIER>FUNCTION>PART-CHK>MTR. Is the voltage between J504-B12 (-) and J504-B13 (-) on the DC controller PCB about 24 V? NO: Replace the DC controller PCB. YES: Check the connection of the relay connectors (J138, J143).</p> |

4.1.84 The drum heater fails to operate

| | |
|--|--|
| ----- | <p>1) Open the front door, and release the fixing/feeding assembly. Are the ends of the drum warm? (Do not touch the surface of the drum.)</p> <p>YES: The drum heater is operating.</p> |
| DC controller PCB | <p>2) Set the meter range to 12 VDC. Connect the probes to J505-A7 (-) and J505-A8 (-) on the DC controller PCB. Is the voltage across the terminals 5 V in standby?</p> <p>NO: Replace the DC controller PCB.</p> |
| AC driver PCB | <p>3) Try replacing the AC driver PCB. Is the problem corrected?</p> <p>YES: End.</p> |
| Drum heater (H3), drum heater controller PCB | <p>4) Remove the drum. Set the meter range to Wx1. Does the index of the meter swing when the probes are connected to both terminals of the heater?</p> <p>NO: Replace the drum heater.</p> <p>YES: Replace the drum heater controller PCB.</p> |

4.1.85 The Add Toner message fails to go ON

| | |
|--|---|
| ----- | <p>1) Is toner inside the hopper assembly?</p> <p>NO: Go to step 2.</p> |
| Toner sensor (hopper assembly), DC controller PCB, DC controller PCB/control panel | <p>2) Make the following selections in service mode: COPIER>I/O>DC-CON. Spread apart the toner to expose the toner sensor (TS1). At this time, is the sate of bit 0 at address P003 '0' (absence of toner)?</p> <p>NO: 1. Replace TS1. 2. Replace the DC controller PCB.</p> <p>YES: 1. Replace the DC controller PCB. 2. Replace the control panel.</p> |

4.1.86 The Add Toner message fails to go ON

| | |
|---|---|
| Toner | <p>1) Is toner present at the rear of the hopper assembly? NO: The toner level inside the hopper is low. Replenish the hopper with toner.</p> |
| Toner sensor (TS1), DC controller PCB/control panel | <p>2) Make the following selections in service mode: COPIER>I/O>DC-CON. At this time, is the state of bit 0 of address P003 '0' (absence of toner)? YES: Replace the toner sensor (TS1) of the hopper assembly. NO: 1. Replace the DC controller PCB. 2. Replace the control panel.</p> |

4.1.87 The Set Card Reader message fails to go ON

| | |
|------------------------------------|---|
| Card reader | <p>1) Check to see that the card reader has been installed. Enter '1' using the following service mode: COPIER>FUNCTION>INSTALL>CARD. Turn off and then on the power switch. Does the message go ON? YES: Check the connector of the card reader for a short circuit.</p> |
| Control panel, Main controller PCB | <p>2) Try replacing the control panel. Does the message go ON? YES: End. NO: Replace the main controller PCB.</p> |

4.1.88 The Set Control Card message fails to go OFF

| | |
|----------------------------------|---|
| Card | <p>1) Is a card fitted to the card reader correctly? NO: Fit the card correctly.</p> |
| Main controller PCB, Card reader | <p>2) Can copies be made? NO: Replace the main controller PCB. YES: Replace the card reader.</p> |

4.1.89 The Add Paper message fails to go OFF (deck light/left)

Deck paper sensor (deck right, PS22; deck left, PS32)

- | | |
|----|---|
| 1) | Is the deck paper sensor mounted correctly? Also, is the movement of the sensor flag normal? |
|----|---|

| | |
|-----|-----------------------------|
| NO: | Mount the sensor correctly. |
|-----|-----------------------------|

4.1.90 The Add Paper message fails to go OFF (cassette 3/4)

Cassette paper sensor (cassette 3, PS39; cassette 4, PS44)

- | | |
|----|---|
| 1) | Is the cassette paper sensor mounted correctly? Is the movement of the sensor flag normal? |
|----|---|

| | |
|-----|-----------------------------|
| NO: | Mount the sensor correctly. |
|-----|-----------------------------|

Cassette pickup assembly

- | | |
|----|--|
| 2) | Is the gear engagement between the output gear of the lifter motor and the gear in the cassette pickup assembly faulty? |
|----|--|

| | |
|------|---|
| YES: | Mount the lifter motor correctly. Or, replace the lifter motor and the cassette pickup assembly at the same time. |
|------|---|

4.1.91 The fixing heater fails to operate

| Multimeter cover | <p>1) Is the multifeeder cover closed firmly? NO: Close the multifeeder cover firmly.</p> | | | | | | |
|---|--|--------|-----|------------------|----------|-----------------|----------|
| Multifeeder cover open/closed sensor (PS56) | <p>2) Is the multifeeder cover open/closed sensor mounted correctly? NO: Mount the multifeeder open/closed correctly. YES: Replace the multifeeder open/closed sensor.</p> | | | | | | |
| Fixing/feeding unit releasing lever sensor (PS28) | <p>3) Is the fixing/feeding unit releasing lever sensor mounted correctly? NO: Mount the fixing/feeding unit releasing lever sensor. YES: Replace the fixing/feeding unit releasing lever sensor.</p> | | | | | | |
| Thermal switch (TP1) | <p>4) Slide out the fixing assembly, and connect the meter probes across both terminals of the thermal switch (TP1). Is there electrical continuity? NO: Replace the thermal switch unit.</p> | | | | | | |
| Fixing heater (H1, H2) | <p>5) Slide out the fixing assembly, and connect the meter probes across both terminals of the fixing heater (H1, H2). Is there electrical continuity? NO: Replace the fixing heater.</p> | | | | | | |
| AC driver PCB, DC controller PCB | <p>6) Is the voltage of the following connectors on the DC controller PCB about 5 V?</p> <table><tr><th>Heater</th><th>(+)</th></tr><tr><td>Main heater (H1)</td><td>J505-A11</td></tr><tr><td>Sub heater (H2)</td><td>J505-A13</td></tr></table> <p>YES: Replace the AC driver PCB. NO: Replace the DC controller PCB.</p> | Heater | (+) | Main heater (H1) | J505-A11 | Sub heater (H2) | J505-A13 |
| Heater | (+) | | | | | | |
| Main heater (H1) | J505-A11 | | | | | | |
| Sub heater (H2) | J505-A13 | | | | | | |

4.1.92 Pickup fails (side paper deck)

| | |
|--|--|
| Right upper door, Right lower door | 1) Are the right upper door and the right lower door closed firmly? NO: Close the doors firmly. |
| Lifter | 2) Does the lifter move down when the compartment is slid out from the deck? Also, is the sound of the lifter move up heard when the compartment is slid in? NO: See “The deck lifter fails to move up.” |
| Deck pickup roller | 3) Does the pickup roller rotate? YES: If the roller is soiled, clean it with alcohol. If it is deformed because of wear, replace it. |
| Belt (displacement) | 4) Is the belt used to transmit drive to the pickup roller attached correctly? NO: Attach the belt correctly. |
| Drive belt, Gear, Coupling | 5) Is the drive from the deck main motor transmitted to the pickup assembly through the drive belt, gear, and coupling? NO: Check the drive belt, gear, and coupling. |
| Side deck driver PCB output, Deck pickup/vertical path clutch (pickup, CL102; feed, CL101) | 6) Measure the voltage of the following connectors on the side deck PCB. Does it change from 24 to 0 V when the Start key is pressed? <ul style="list-style-type: none"> • J104-7 (CL101) • J104-12 (CL102) NO: Replace the side deck driver PCB. YES: Check the wiring up to the clutch; if normal, replace the clutch. |

4.1.93 The deck lifter fails to move up (side paper deck)

Side paper deck

1) It the deck mounted correctly?

NO: Mount the deck correctly.

Lifter cable

2) Is the lifter cable strung correctly?

NO: String the lifter cable correctly.

Spring, Lever

3) Push up the pickup roller releasing lever with your finger. Does the pickup roller move down?

NO: Remove the pickup assembly, and check the spring and lever.

Deck lifter motor (M102)

4) Does the deck lifter motor rotate?

YES: Go to step 6.

Deck lifter driver PCB, Deck open detecting switch (SW101)

5) Does the voltage between J109-3 on the side deck driver PCB and GND (-) change from about 0 to 5 V when the deck is closed?

NO: Replace the side deck driver PCB.

YES: Check the wiring up to the switch; if normal, replace the switch.

Deck lifer lower limit switch (SW102), Side deck driver PCB

6) Is the voltage between J107-8 (-) note side deck driver PCB and GND (-) as follows?

- When the deck is opened, 0 V.

- When the deck is closed, 5 V.

YES: Check the lever and wiring; if normal, replace the sensor.

NO: Replace the side deck driver PCB.


5 Troubleshooting Feeding Problems

5.1 Copy Paper Jams

Jams occurring inside the machine may be grouped according to their locations as follows:

1. pickup assembly
2. separation/feeding assembly
3. fixing/delivery assembly
4. drum cleaner assembly
5. holding tray assembly
6. feeding assembly

The descriptions that follow are also given in reference to the locations of jams. The location or type of jam may be checked in service mode (COPIER>DISPLAY>JAM).

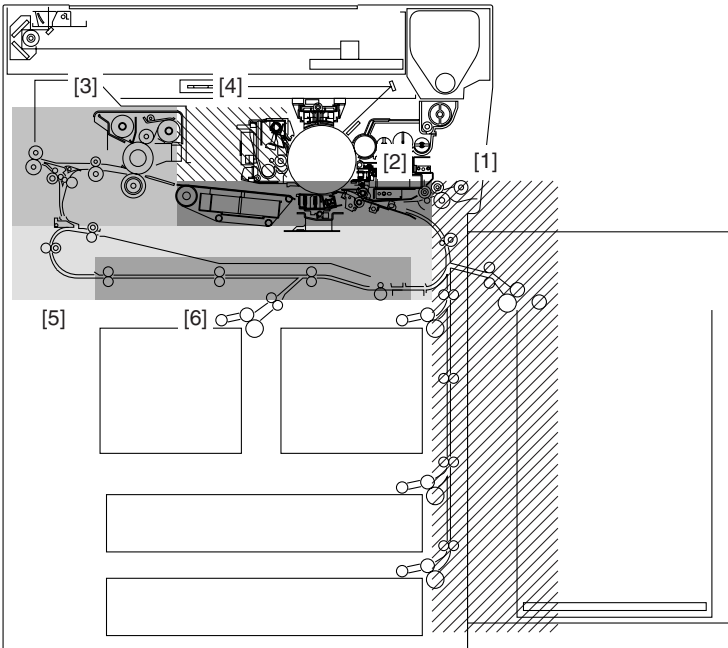

F06-501-01

5.1.1 Pickup Assembly

Delivery assembly

1) Is the copy paper curled or wavy?

YES: Replace the paper. Advise the user on the correct method of storing paper.

2) Try paper of a recommended type. Is the problem corrected?

YES: Advise the user to use recommended paper.

DC controller PCB, Pickup clutch

3) During copying, does the pickup roller of the selected source of paper (cassette, deck, manual feed tray) rotate?

NO: See “Pickup fails” for each source of paper.

Pickup roller, Guide plate, Optical sensor (prism)

4) Is the pickup roller deformed or worn?

YES: Replace the pickup roller.

NO:

- Check the guide plate for deformation.
- Check the prism for dirt. If soiled, clean it with a blower brush. (If the dirt cannot be removed, dry wipe with lint-free paper.)

5.1.2 Separation/Feeding Assembly

| | |
|---------------------------------------|--|
| Copy paper | 1) Is the leading edge of the copy paper past the registration roller? YES: Go to step 5. |
| Registration roller | 2) Is the coupling of the registration roller connected correctly? NO: Mount the fixing/feeding unit correctly. 3) Is the registration roller deformed because of wear or soiled? YES: If soiled, clean it with alcohol; if deformed, replace it. 4) Are the retaining springs on both ends of the registration roller mounted correctly? NO: Mount them correctly. YES: Check the transfer guide for foreign matter and deformation. |
| Registration clutch | 5) Is the operation of the registration clutch normal? NO: Check the registration clutch. |
| Transfer/separation charging assembly | 6) Is the transfer/separation charging assembly fitted firmly? YES: Check the transfer/separation charging assembly. 7) Are there burrs on the paper guide of the transfer/separation charging assembly? YES: Remove the burrs. |
| Copy paper | 8) Try paper of a recommended type. Is the problem corrected? YES: Advise the user to use recommended paper. |
| Separation claw (cleaner assembly) | 9) Is the serration claw found under the cleaner assembly damaged? YES: Replace the separation claw. |
| Feeding belt, Feed fan | 10) Are the two feeding belts moving correctly? NO: Check the belt and the pulley. YES: Check the feed fan to see if it is operating. |

5.1.3 Fixing Assembly, Delivery Assembly

| | |
|--|--|
| Separation claw (delivery assembly) | 1) Is the separation claw worn/deformed? YES: 1. Replace the separation claw. 2. If soiled, clean it with solvent. |
| Fixing assembly, Upper/lower roller | 2) Is the upper/lower roller deformed or damaged? YES: Replace the roller. |
| Paper guide | 3) Is the paper guide soiled with toner? YES: Clean it with solvent. |
| | 4) Is the height of the paper guide correctly? NO: Correct the height. |
| Nip | 5) Is the lower roller pressure (nip) as indicated? NO: Correct it. |
| Delivery assembly, Web | 6) Is the web taken up correctly? NO: Check the fixing cleaner assembly. |
| Sensor lever | 7) Does each sensor lever move smoothly? NO: Adjust the lever so that it moves smoothly. |
| Delivery sensor | 8) Are the external delivery sensor (PS10) and the claw jam sensor (PS6) normal? NO: Replace the sensor. |
| Delivery reflecting plate | 9) Is the delivery reflecting plate oriented in the direction of delivery? NO: Correct the orientation of the delivery reflecting plate. |
| Leading edge margin, Delivery roller drive assembly | 10) Does the delivery roller move smoothly? NO: Check the delivery roller drive assembly. YES: Check the leading edges of copies for a margin. (3.0 mm or more) |

5.1.4 Fixing assembly, Delivery assembly (reversal delivery assembly)

Duplex reversal sensor (PS12)

1) Is the duplex reversal sensor (PS12) normal?

NO: Replace the sensor.

Internal delivery sensor (PS9)

2) Is the internal delivery sensor (PS9) normal?

NO: Replace the sensor.

Delivery flapper solenoid (SL3)

3) Does the delivery flapper move correctly?

NO: Adjust the position of the delivery flapper solenoid, or replace it.

Reversing flapper solenoid (SL11)

4) Does the reversing flapper move correctly?

NO: Adjustment position of the reversal flapper solenoid, or replace it.

Reversal motor (M11)

5) Does the reversal motor (M11) rotate at the correct timing?

NO: Replace the reversal motor (M11).

YES: If the timing belt is worn or torn, replace it. If it is slack or displaced, attach it correctly.

5.1.5 Cleaner assembly

Transfer/separation charging assembly, Pre-transfer charging assembly

1) Is the transfer/separation charging assembly and the pre-transfer charging assembly fitted correctly?

NO: Fit the transfer/separation charging assembly and the pre-transfer charging assembly correctly.

2) Is the height of the charging wire as indicated?

NO: Correct the height of the charging wire.

Separation claw (cleaning assembly)

3) Is the separation claw found under the cleaner assembly damaged?

YES: Replace the separation claw.

Copy paper, High-voltage transformer, DC controller PCB

4) Try paper of a recommended type. Is the problem corrected?

YES: Advise the user to use recommended paper.

NO: 1. Check the high-voltage transformer.

2. Check the DC controller PCB.

5.1.6 Lower Feeding Assembly

| | |
|---|---|
| ----- | 1) Is the lower feeding assembly fitted correctly? NO: Fit it correctly. |
| Lower feeding middle clutch (CL16), Lower feeding right clutch (CL17) | 2) Does the roller inside the lower feeding assembly rotate correctly? NO: Replace the CL16 or CL17. |
| Pre-confluence sensor (PS14), Post-confluence sensor (PS15) | 3) Are the pre-confluence sensor (PS14) and the post-confluence sensor (PS15) normal? NO: Replace PS14 or PS15. |

5.2 Feeding Faults

5.2.1 Double Feeding

Separation roller, Spring

1) Is the separation roller deformed or worn?

YES: Replace the separation roller.

NO: Replace the spring used to pull the separation roller.

5.2.2 Wrinkles

Pickup assembly

1) Turn off the power while copy paper is moving through the feeding assembly. At this time, is the copy paper wrinkled? Or, is it moving askew?

YES: Check the pickup assembly. Check the registration roller.

Cop paper

2) Try paper fresh out of package. Is the problem corrected?

YES: The paper is likely to be moist. Advise the user on the correct method of storing paper.

3) Try paper of a recommended type. Is the problem corrected?

YES: Advise the user to use recommended paper.

Fixing assembly, Paper guide

4) Is the paper guide soiled with foreign matter (e.g., toner)?

YES: Clean it with solvent.

5) Is the height of the paper guide correct?

NO: Adjust the height of the paper guide.

Lower roller pressure, Upper/lower roller pressure


6) Is the lower roller pressure (nip) as indicated?

NO: Adjust it.

YES: Try replacing the upper and lower rollers one after the other.

6 Arrangement and Function of Electrical Parts

6.1 Clutches

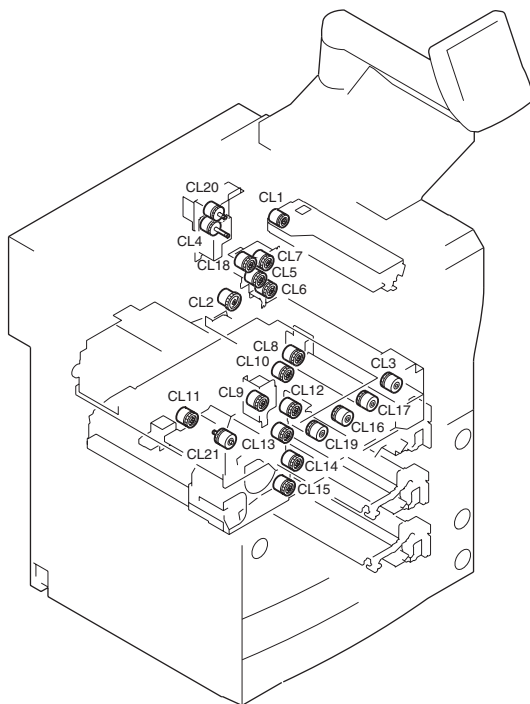


F06-601-01

| Name | Notation | Function |
|--|----------|--|
| Inside hopper magnet roller drive clutch | CL1 | Drives the inside hopper magnet roller. |
| Registration clutch | CL2 | Drives the registration roller. |
| Registration brake clutch | CL3 | Drives the registration brake. |
| Development 1 clutch | CL4 | Drives the developing cylinder (1). |
| Pre-registration clutch | CL5 | Drives the pre-registration roller. |
| Pre-registration brake clutch | CL6 | Drives the pre-registration brake. |
| Manual feed tray pickup clutch | CL7 | Drives the manual feed tray pickup roller. |
| Vertical path 1 clutch | CL8 | Drives the vertical path 1 roller. |
| Vertical path 2 clutch | CL9 | Drives the vertical path 2 roller. |
| Deck (right) pickup clutch | CL10 | Drives the deck (right) pickup roller. |
| Deck (left) pickup clutch | CL11 | Drives the deck (left) pickup roller. |
| Cassette 3 pickup clutch | CL12 | Drives the cassette 3 pickup roller. |
| Vertical path 3 clutch | CL13 | Drives the vertical path 3 roller. |
| Cassette 4 pickup clutch | CL14 | Drives the cassette 4 pickup roller. |
| Vertical path 4 clutch | CL15 | Drives the vertical path 4 roller. |
| Lower feeder middle clutch | CL16 | Drives the lower feeder middle roller. |
| Lower feeder right clutch | CL17 | Drives the lower feeder right roller. |
| Manual feed tray feeding clutch | CL18 | Drives the manual feed tray drive roller. |
| Deck (left) feeding clutch | CL19 | Drives the deck (left) feeding roller. |
| Developing 2 clutch | CL20 | Drives the developing cylinder (2). |
| Delivery speed switching clutch | CL21 | Switches delivery speed. |

T06-601-01

6.2 Solenoids

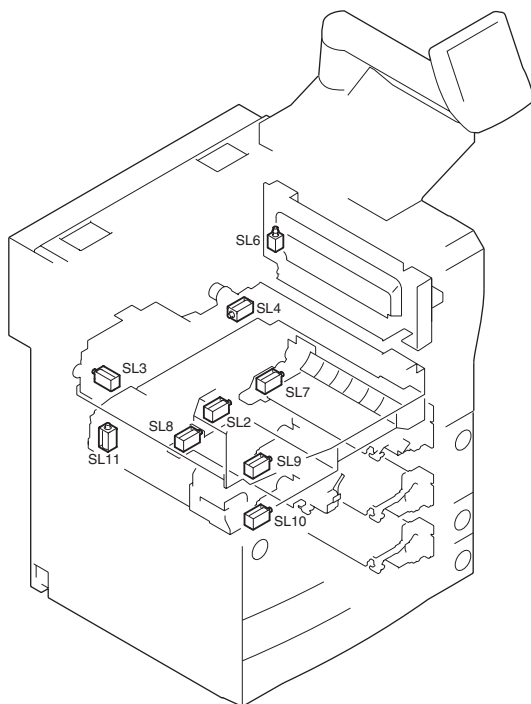


F06-602-01

| Name | Notation |
|-------------------------------------|----------|
| Fixing web solenoid | SL2 |
| Delivery flapper solenoid | SL3 |
| Fixing/feeder unit locking solenoid | SL4 |
| Manual feed pickup latch solenoid | SL6 |
| Deck (right) pickup solenoid | SL7 |
| Deck (left) pickup solenoid | SL8 |
| Cassette 3 pickup solenoid | SL9 |
| Cassette 4 pickup solenoid | SL10 |
| Reversing flapper solenoid | SL11 |

T06-602-01

6.3 Motors

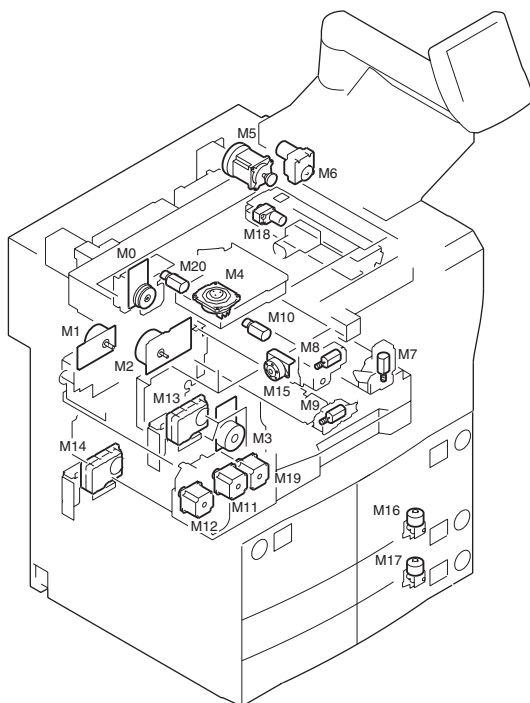


F06-603-01

| Name | Notation |
|---|----------|
| Drum motor | M0 |
| Main motor | M1 |
| Pickup motor | M2 |
| Fixing motor | M3 |
| Laser scanner motor | M4 |
| Scanner motor | M5 |
| Inside cartridge toner feeder motor | M6 |
| Pre-transfer charging wire cleaner motor | M7 |
| Primary charging wire cleaner motor | M8 |
| Transfer/separation charging wire cleaner motor | M9 |
| Vibration motor | M10/M20 |
| Duplex reversal motor | M11 |
| Duplex feeder motor (left) | M12 |
| Deck (right) lifter motor | M13 |
| Deck (left) lifter motor | M14 |
| Horizontal registration motor | M15 |
| Cassette 3 lifter motor | M16 |
| Cassette 4 lifter motor | M17 |
| Inside hoper toner feeder motor | M18 |
| Duplex feeder motor (right) | M19 |

T06-603-01

6.4 Fans

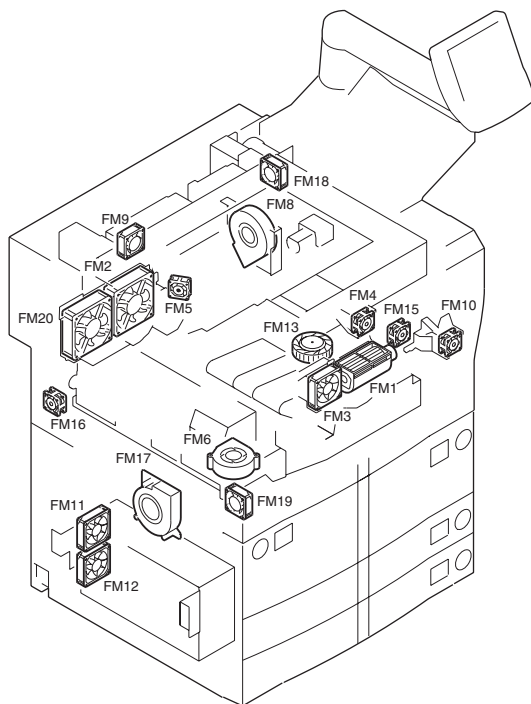


F06-604-01

| Name | Notation |
|------------------------------------|----------|
| Laser motor cooling fan | FM1 |
| Fixing heat discharge fan | FM2 |
| Laser cooling fan 1 | FM3 |
| Stream reading fan | FM4 |
| Laser cooling fan 2 | FM5 |
| Curl-reducing fan | FM6 |
| Drum fan | FM8 |
| Inverter cooling fan | FM9 |
| Pre-transfer charging assembly fan | FM10 |
| Power supply cooling fan 1 | FM11 |
| Power supply cooling fan 2 | FM12 |
| Separation fan | FM13 |
| Developing fan | FM15 |
| System fan | FM16 |
| Delivery anti-adhesion fan | FM17 |
| Scanner motor cooling fan | FM18 |
| Duplex feeder fan | FM19 |
| Separation heat discharge fan | FM20 |

T06-604-01

6.5 Sensor 1

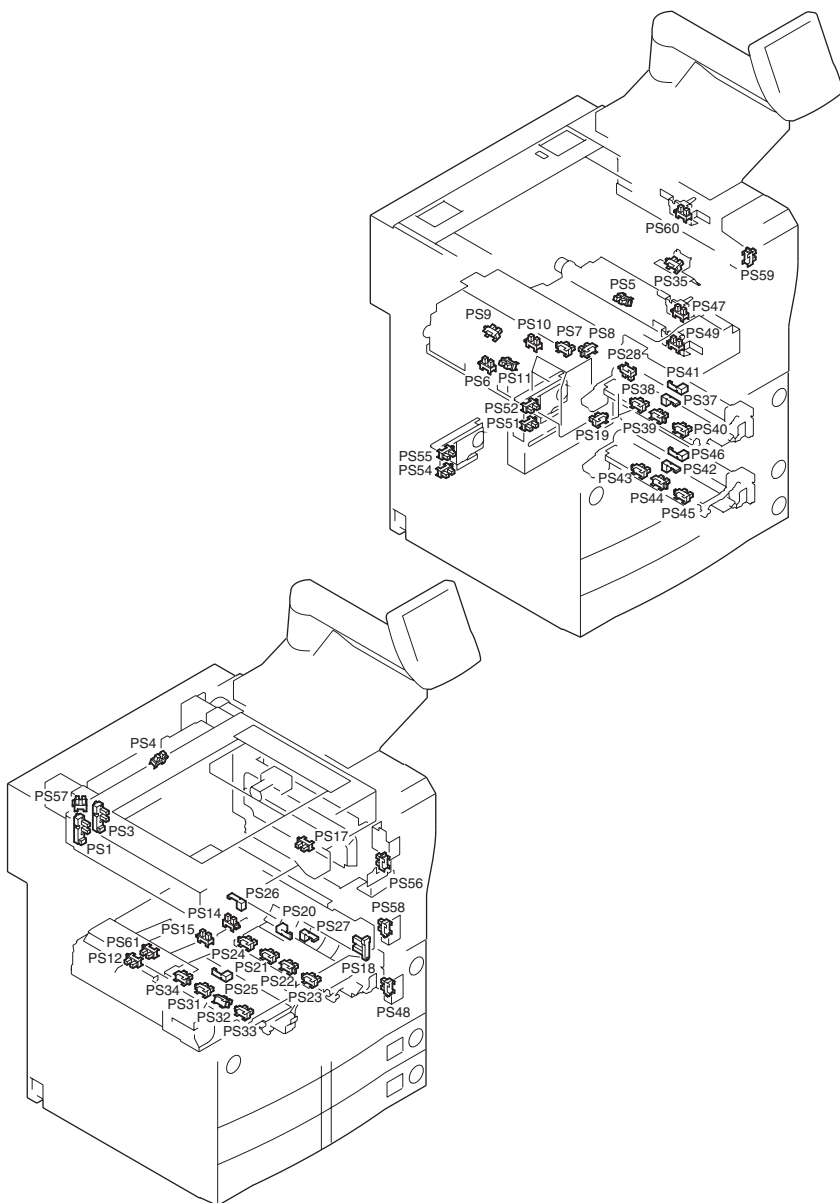


F06-605-01

| Name | Notation |
|---|----------|
| Scanner home position sensor | PS1 |
| Image leading edge sensor | PS3 |
| Copyboard cover open/closed sensor | PS4 |
| Registration paper sensor | PS5 |
| Fixing cable jam sensor | PS6 |
| Fixing web length sensor | PS7 |
| Fixing web length warning sensor | PS8 |
| Internal delivery sensor | PS9 |
| External delivery sensor | PS10 |
| Fixing/feeder unit outlet sensor | PS11 |
| Duplex reversal sensor | PS12 |
| Pre-confluence sensor | PS14 |
| Post-confluence sensor | PS15 |
| Manual feed tray paper sensor | PS17 |
| Horizontal registration sensor | PS18 |
| Waste toner case full sensor | PS19 |
| Right deck pickup sensor | PS20 |
| Right deck lifter sensor | PS21 |
| Right deck paper sensor | PS22 |
| Right deck open/closed sensor | PS23 |
| Right deck limit sensor | PS24 |
| Left deck pickup sensor | PS25 |
| Left deck feed sensor | PS26 |
| Right deck feed sensor | PS27 |
| Fixing/feeder unit releasing lever sensor | PS28 |
| Left deck lifter sensor | PS31 |
| Left deck paper sensor | PS32 |
| Left deck open/closed sensor | PS33 |
| Left deck open/closed sensor | PS34 |
| Manual feed feeder inlet sensor | PS35 |
| Cassette 3 pickup sensor | PS37 |
| Cassette 3 lifter sensor | PS38 |
| Cassette 3 paper sensor | PS39 |
| Cassette 3 open/closed sensor | PS40 |
| Vertical path 3 paper sensor | PS41 |
| Cassette 4 pickup sensor | PS42 |
| Cassette 4 lifter sensor | PS43 |
| Cassette 4 paper sensor | PS44 |
| Cassette 4 open/closed sensor | PS45 |
| Vertical path 4 paper sensor | PS46 |
| Vertical path 1 paper sensor | PS47 |
| Right lower cover open/closed sensor | PS48 |
| Vertical path 2 paper sensor | PS49 |
| Right deck paper level medium sensor | PS51 |
| Right deck paper level upper sensor | PS52 |
| Left deck paper level medium sensor | PS54 |
| Left deck paper level upper sensor | PS55 |
| Manual feed tray cover open/closed sensor | PS56 |
| Copyboard glass sensor | PS57 |
| Right upper cover open/closed sensor | PS58 |
| Toner cartridge cover open /closed sensor | PS59 |
| Image write start sensor | PS60 |
| Duplex outlet sensor | PS61 |

T06-605-01


6.6 Sensor 2

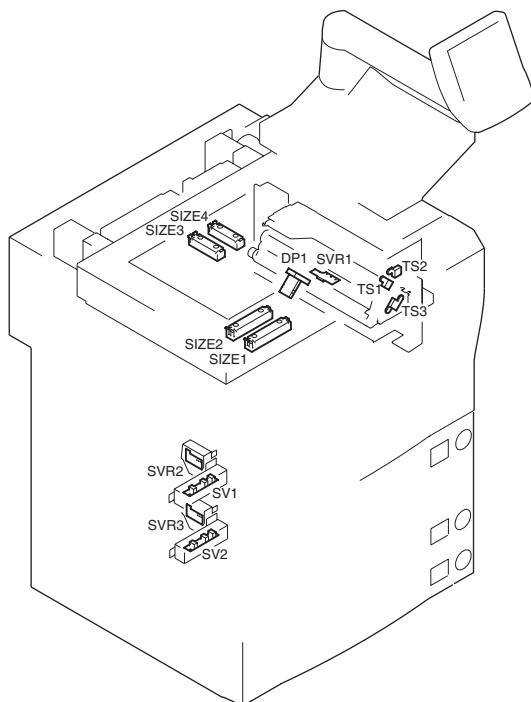

F06-606-01

| Name | Notation |
|---|------------|
| Original size sensor 1 | SIZE1 |
| Original side sensor 2 | SIZE2 |
| Original side sensor 3 | SIZE3 |
| Original size sensor 4 | SIZE4 |
| Cassette 3 paper length sensor | SV1 |
| Cassette 4 paper length sensor | SV2 |
| Manual feed tray paper width detecting volume | SVR1 |
| Cassette 3 paper width detecting volume | SVR2 |
| Cassette 4 paper width detecting volume | SVR3 |
| Inside hopper toner sensor | TS1 |
| Inside hopper toner lower limit sensor | TS2 |
| Inside developing assembly toner sensor | TS3 |
| Potential sensor | DP1 |
| | T06-606-01 |


6.7 Switches

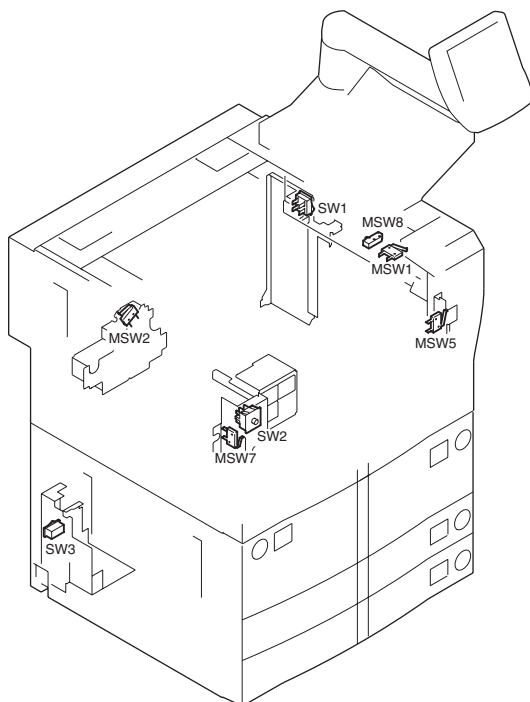

F06-607-01

| Name | Notation |
|---|------------|
| Main switch | SW1 |
| Front cover switch | SW2 |
| Drum heater switch | SW3 |
| Cartridge detecting switch | MSW1 |
| Waste toner clog detecting switch | MSW2 |
| Manual feed tray cover open/ closed detecting switch | MSW5 |
| Front cover open/closed detecting switch | MSW7 |
| Cartridge motor drive switch | MSW8 |
| | T06-607-01 |

6.8 Counters, There, Fuses, and Others

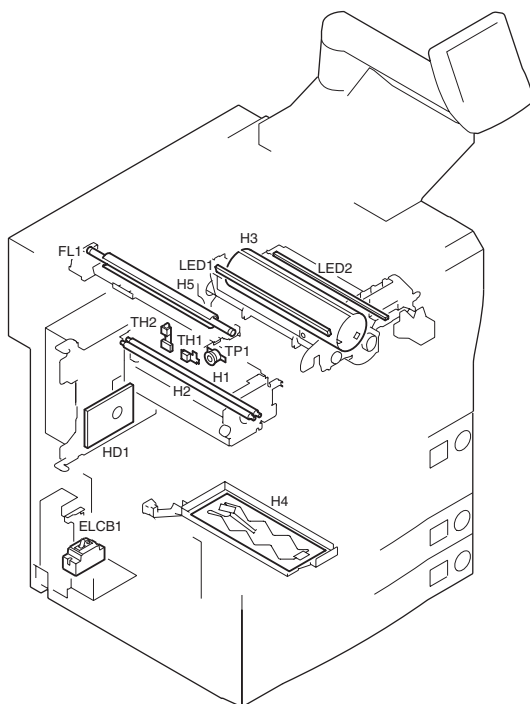


F06-608-01

| Name | Notation | Description |
|----------------------------------|----------|-------------------------------------|
| Scanning lamp (fluorescent lamp) | FL1 | Scanning lamp |
| Heater | H1 | Fixing main heater |
| | H2 | Fixing sub heater |
| | H3 | Drum heater |
| | H4 | Cassette heater |
| | H5 | Scanning amp heater |
| Thermistor | TH1 | Fixing heater main thermistor |
| | TH2 | Fixing heater sub thermistor (edge) |
| Thermal switch | TP1 | Fixing heater thermal switch |
| Leakage breaker | ELCB1 | Leakage breaker |
| Pre-exposure lamp | LED1 | Drum pre-exposure |
| Pre-transfer exposure lamp | LED2 | Pre-transfer exposure |
| Hard disk | HD1 | Hard disk |

T06-608-01

6.9 PCBs

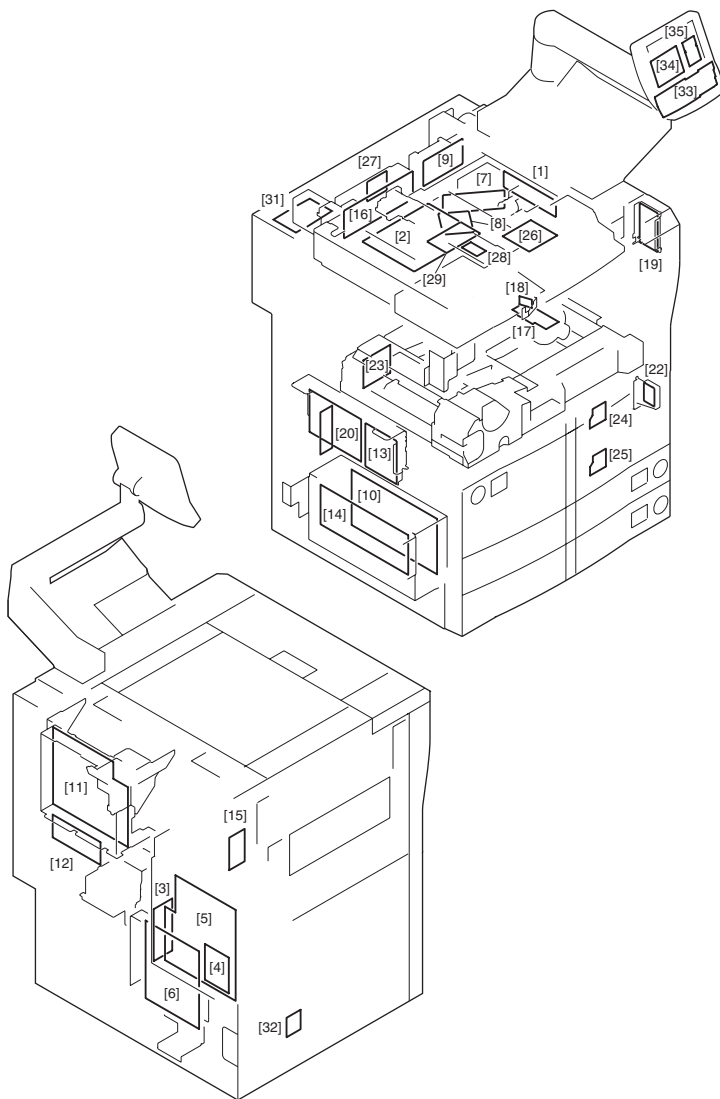


F06-609-01


| Name | Notation | Function |
|--------------------------------------|----------|---|
| CCD/AP PCB | PCB1 | Drives the CCD/processes analog images. |
| Reader controller PCB | PCB2 | Controls the reader unit. |
| Pixel/line conversion PCB | PCB3 | Executes pixel/line conversion. |
| Differential PCB | PCB4 | Executes communication signal conversion. |
| Main controller PCB | PCB5 | Controls the system. |
| DC controller PCB | PCB6 | Controls the printer unit. |
| Laser driver PCB 1 | PCB7 | Drives the laser diode. |
| Laser driver PCB 2 | PCB8 | Controls the laser intensity. |
| Scanner motor drive PCB | PCB9 | Drives the scanner motor. |
| DC power supply PCB | PCB10 | Supplies DC power. |
| HV-DC PCB | PCB11 | Generates high-voltage DC components. |
| HV-AC PCB | PCB12 | Generates high-voltage AC components. |
| All-day power supply PCB | PCB13 | Supplies DC power. |
| Relay PCB | PCB14 | Distributes DC power supply. |
| Bi-Centronics PCB | PCB15 | Serves as a download interface. |
| Fluorescent lamp inverter PCB | PCB16 | Controls the activation of the fluorescent lamp. |
| Drum heater control PCB | PCB17 | Drives the drum heater. |
| BD PCB | PCB18 | Detects the laser beam. |
| Potential control PCB | PCB19 | Controls the drum surface potential. |
| AC driver PCB | PCB20 | Drive the fixing heater. |
| Environment sensor PCB | PCB22 | Detects the machine outside temperature/humidity. |
| Stackless feeder driver PCB | PCB23 | Drives the duplex/feeder unit. |
| Cassette 3 paper level detection PCB | PCB24 | Detects the level of paper in the cassette 3. |
| Cassette 4 paper level detection PCB | PCB25 | Detects the level of paper in the cassette 4. |
| Laser scanner motor drive PCB | PCB26 | Drives the laser scanner motor. |
| Light adjustment control PCB | PCB27 | Controls the intensity of the fluorescent lamp. |
| Light adjustment sensor PCB | PCB28 | Detects the intensity of the fluorescent lamp. |
| Original orientation detection PCB | PCB29 | Detects the orientation of the original. |
| Transformer PCB | PCB31 | Supplies inverter power. |
| Capacitor PCB (200V model only) | PCB32 | Prevents electrical noise |
| Controls panel CPU PCB | PCB33 | Controls the control panel. |
| Control panel PCB | PCB34 | Controls panel key inputs and LED indications. |
| Control panel inverter PCB | PCB35 | Controls the activation of the LCD. |

T06-609-01

6.10 Side Paper Deck-N1

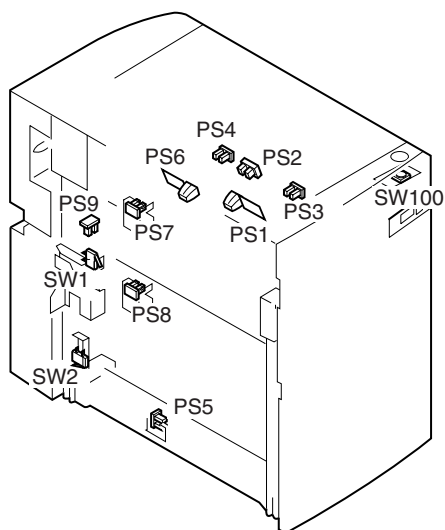

F06-610-01

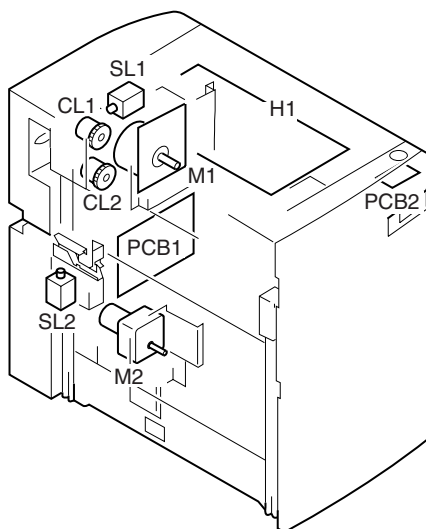

F06-610-02

| Name | Notation |
|--|----------|
| Deck pickup sensor | PS1 |
| Deck paper absent sensor | PS2 |
| Deck lifter upper limit sensor | PS3 |
| Deck lift position sensor | PS4 |
| Deck set sensor | PS5 |
| Deck feed sensor | PS6 |
| Deck paper supply position sensor | PS7 |
| Deck paper level sensor | PS8 |
| Compartment open sensor | PS9 |
| Compartment open detecting switch | SW1 |
| Deck lifter lower limit detecting switch | SW2 |
| Compartment open switch | SW100 |
| Deck main motor | M1 |
| Deck lifter motor | M2 |
| Deck feeding clutch | CL1 |
| Deck pickup clutch | CL2 |
| Deck pickup roller releasing solenoid | SL1 |
| Compartment open solenoid | SL2 |
| Deck heater (option for 200/230V model) | H1 |
| Deck drive PCB | PCB1 |
| Open switch PCB | PCB2 |

T06-610-01

6.11 Variable Resistors (VR), Light-Emitting Diodes (LED), and Check Pins by PCB

Of the variable VRs, LEDs, and switches used in the machine, those needed when servicing in the field are discussed.



1. Some LEDs emit dim light even when OFF because of leakage current; this is a normal condition, and must be kept in mind.
2. VRs that may be used in the field




VRs that must not be used in the field




Do not touch the VRs and check pins not discussed herein. They are exclusively for use at the factory, and require special tools and high precision.

6.11.1 Main Controller PCB

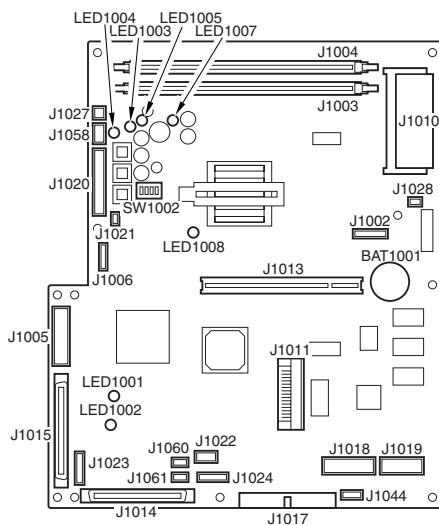


F06-611-01

6.11.2 Reader Controller PCB

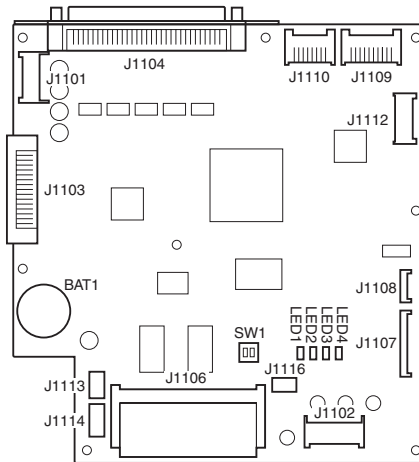


F06-611-02

6.11.3 DC controller PCB

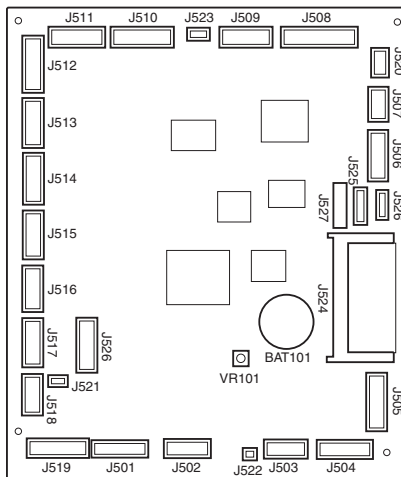

F06-611-03

6.11.4 HV-DC PCB

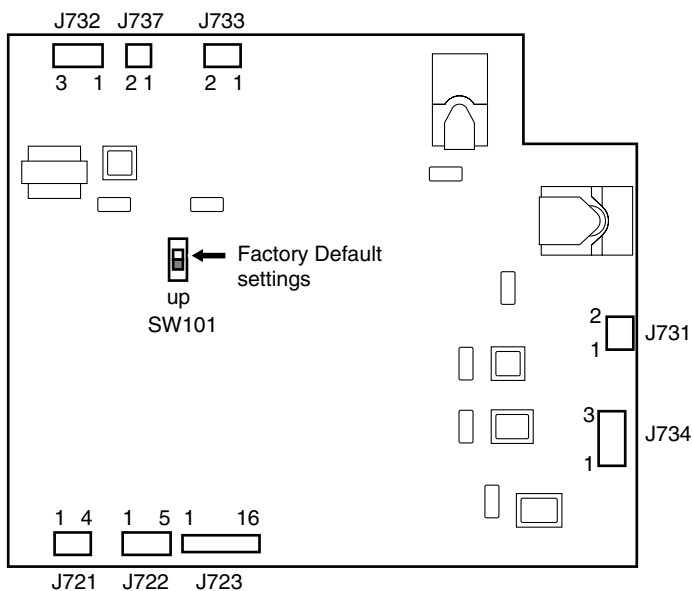

F06-611-04



Normally, keep the slide switch (SW101) in UP position. Keep this in mind when replacing the PCB.

7 Upgrading

7.1 Outline

The machine is upgraded either by downloading data from a PC or by replacing its DIMM/ROM.

The following five items are upgraded by downloading from a PC:

- BOOT ROM (machine J1009 DIMM ROM)
- HD Format (machine HDD; formatting)
- Language (machine HDD)
- RUI (machine HDD)
- System (machine HDD)

For instructions on upgrading by means of replacing the DIMM/ROM, see 7.6 “Upgrading by Replacing the DIMM/ROM.”

7.1.1 Download Mode

The machine provides two types of download modes; although any of the two may be used to download all files, select with care if you want to format the hard disk (select the HD Format), as a specific partition must be selected.

You can use any of the two when using a parallel cable; however, the use of a network cable will require you to start up the machine’s network environment, necessitating the use of downloading in service mode.

- **Downloading in Download Mode**

To start download mode,

- 1) While holding down ‘2’ and ‘8’ on the keypad at the same time, turn on the power switch.
- 2) Hold down ‘2’ and ‘8’ on the keypad until the bottom of the touch panel indicates the message “Download Mode.”

Partition Available for Formatting the Hard Disk
/BOOTDEV
ALL

- Downloading in Service Mode

To start download mode,

- 1) Start service mode.
- 2) Make the following selection: COPIER>FUNCTION>SYSTEM>DOWNLOAD. Then, press 'OK' so that the machine will be in download standby mode (message "STANDBY").

Partition Available for Formatting the Hard Disk

/PDLDEV

/FSTDEV

/DOSDEV



If you use the Service Support Tool while the machine is not in download mode, the machine will treat data from the interface as a local print job and, accordingly, will increment the job count.

When you use the Service Support Tool, be sure to switch the machine to download mode in advance by following the instructions on the screen.

7.1.2 Making Pre-Checks

Prepare the following:


- PC to which the Service Support Tool (version 1.28 or later) has been installed
- System CD
- Connection cable

The type of cable depends on how the machine is to be connected to the PC.

- In the case of a bi-Centronics interface, obtain a parallel cable (indicating IEEE 1284Std-compliant).
- Using a Network Cable

Connect the machine with the PC using a cross Ethernet cable or a straight Ethernet cable and a HUB.


The following shows how a cross Ethernet cable may be used.

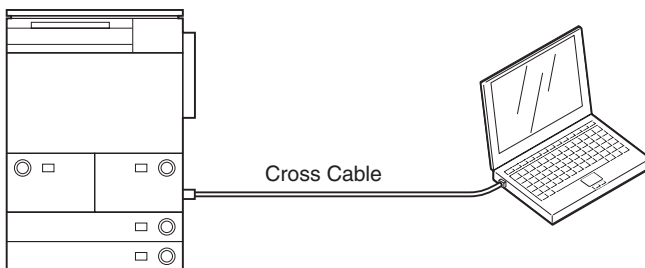

F06-701-01



If you are using a straight Ethernet cable and a HUB, you are encouraged to connect the machine with the PC on a one-on-one basis, outside the user's network environment.

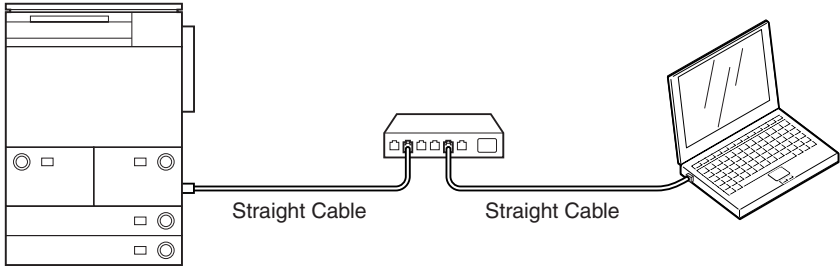

F06-701-02



Differences in Connection Between Bi-Centronics Cable and Network Cable

Each has its own advantages and disadvantages; select one to suit specific needs:

Connection with a Bi-Centronics Cable (using a parallel cable)

Advantages:

- You can use the Service Support Tool without considering the environment of the user's network.
- If the system is not installed on the hard disk, the system may be installed or the hard disk may be formatted using download mode.

Disadvantages:

- The specifications of the PC used or the chip set may not allow the use of high-speed mode, i.e., it has a low level of compatibility.
- The PC must have a parallel interface.
- You can not use high-speed mode on Windows NT or Windows 2000.

Connection with a Network Cable

Advantages:

- It is relatively high speed.
- It is less dependent on the PC to be used.
- The use of a cross cable enables direct connection.

Disadvantages:

- You must change the network settings of the machine or the PC to suit the user's network environment. More importantly, you must change the machine back to its initial settings after the task.
 - You must have a good knowledge of networking.
 - The system must start up normally and the network settings must be correct.
-




Points to Note When Using a Bi-Centronics Interface and a Network

The Service Support Tool allows you to select one of two interfaces to suit specific needs. If both are in use, you must turn the machine off and then on first before making a switch-over (i.e., from Bi-Centronics to Network or vice versa), thereby preventing errors in the event of simultaneous writing operations.

7.2 Data Control


You must install the files to use (System, RUI, HD Format , BOOT, Language) before executing downloading.

- 1) Start up the Service Support Tool.
- 2) Under 'Controlling Data', select 'To Next'.

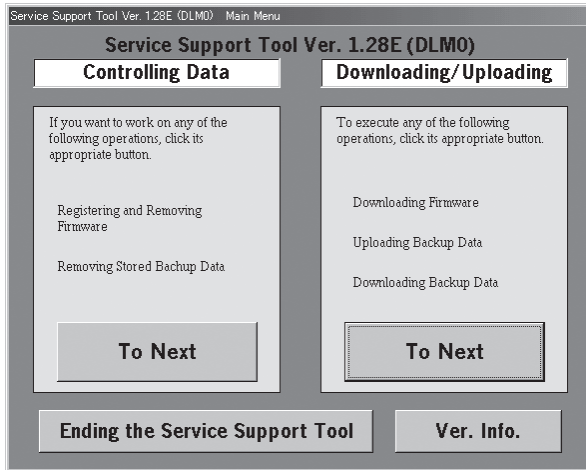


F06-702-01

- 3) From the Control Work screen of the firmware, select 'Registering Firmware'.

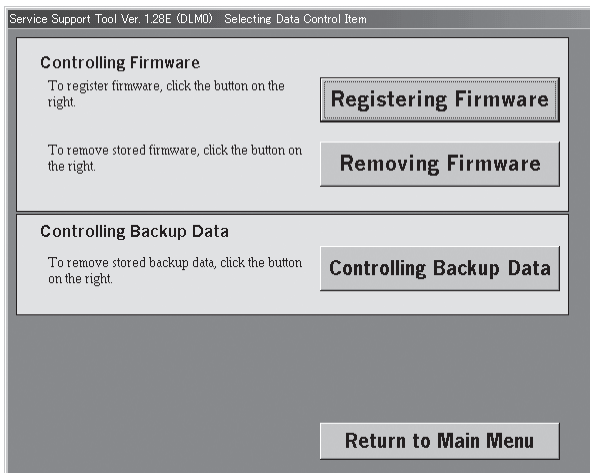


F06-702-02

- 4) From the following screen, select 'Register from selected folder'.

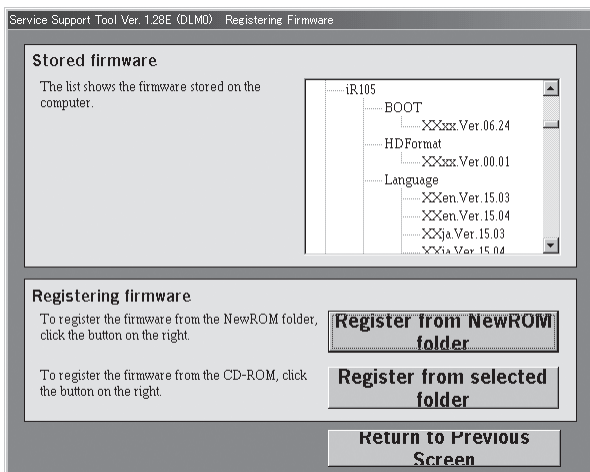

F06-702-03

- 5) Select the drive to which you have inserted the System CD.
- 6) Select the folder of the suitable version, and click 'Register'.

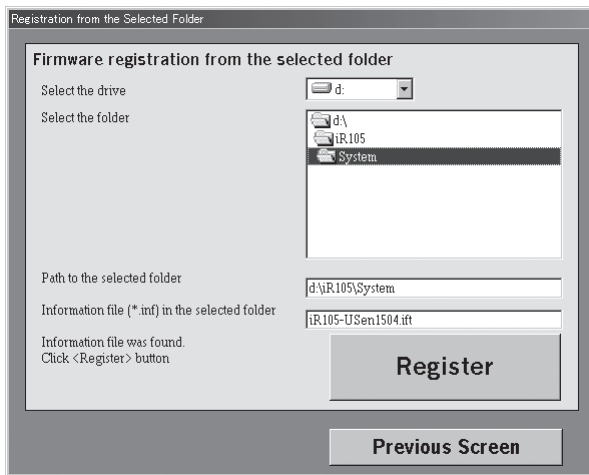

F06-702-04

7.3 Downloading the System Software, RUI, and Language Module


7.3.1 Making Connections

The discussions that follow are based on the use of a parallel cable:

- Check to make sure that the Processing/Data lamp is OFF.
 - 1) Turn off the machine's main power switch, and disconnect the power plug and the network cable.
 - 2) Using a parallel cable, connect the PC to the parallel connector on the left side of the controller.
- At this time, the PC must remain OFF.
- Connect the 25-pin connector of the cable to the PC and the 36-pin connector to the machine.
- 3) Turn on the power switch of the PC, and start up the Service Support Tool.
- 4) Connect the machine's power plug to the power outlet, and turn on the main power switch.


7.3.2 Downloading

- 1) Under 'Downloading/Uploading', select 'To Next'.

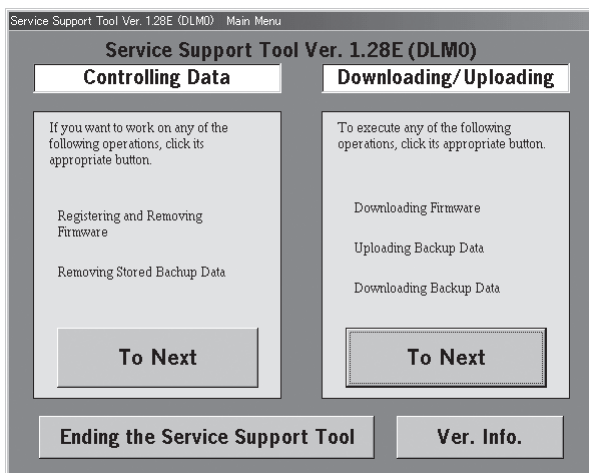

F06-703-01

- 2) Start the machine's service mode, and make the following selections: COPIER>FUNCTION>SYSTEM>DOWNLOAD. Then, press 'OK' so that the machine will be in download standby mode (notation "STNDBY").
- 3) Select SYSTEM, RUI, or Language, and select the interface (either Bi-Centronics or Network). The discussions that follow assume that you have selected bi-Centronics.

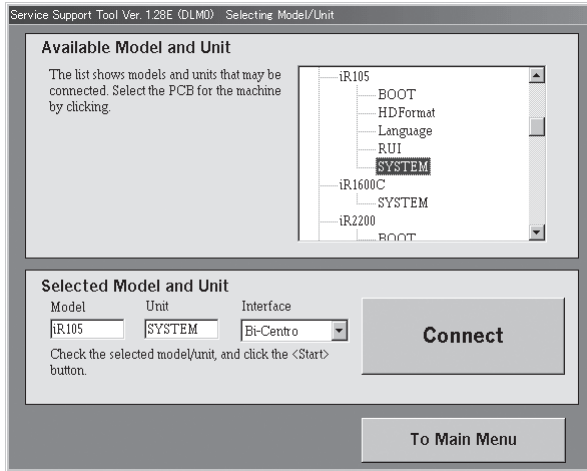

F06-703-02




Memo

About the Language Module (Language)

A language module is a unit containing the language data needed to indicate messages in the control panel, each module designed for a specific language. Install only those language modules you need, thus saving time spent for downloading. You can switch among installed language modules in user mode: common settings> display language. At time of shipment, five modules (languages) are installed. The modules will be lost once you format the hard disk, requiring you to install them once again to suit the needs of the user. To check the version of the modules, make the following selections: COPIER>DISPLAY>VERSION>LANG-XX. Check to make sure that the version of each language module matches the version of the installed system software; otherwise, use the language module built into the system software to start up. The built-in module is not part of the modules that may be selected as the display language; for this reason, you will not be able to make use of the language switch unless you have installed modules independently of the system software. If you replace an existing language module with a module of an inappropriate version, 'E744-0001' will be indicated when the machine is started up for the first time; to reset the error, install a module of the correct version.

- 4) If the notation in the upper right of the screen is 'High-Speed', go to step 6); if 'Low-Speed', go to step 5).

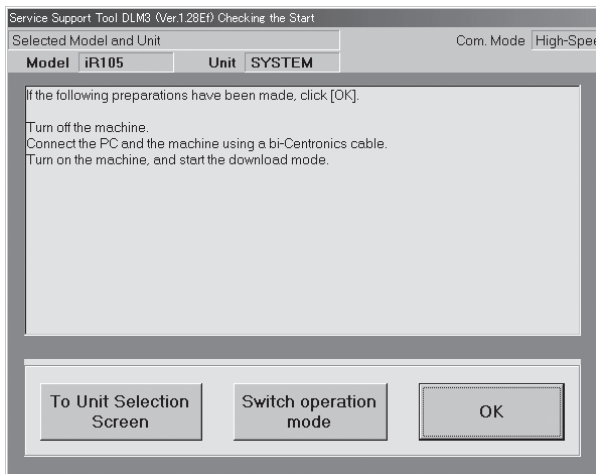


F06-703-03

- 5) Click 'Switch operation mode' to bring up the Centronics Communication Mode Change screen. Select 'High-Speed', and press 'OK' to move to step 6).




High-speed mode is not supported on Windows NT and Windows 2000.

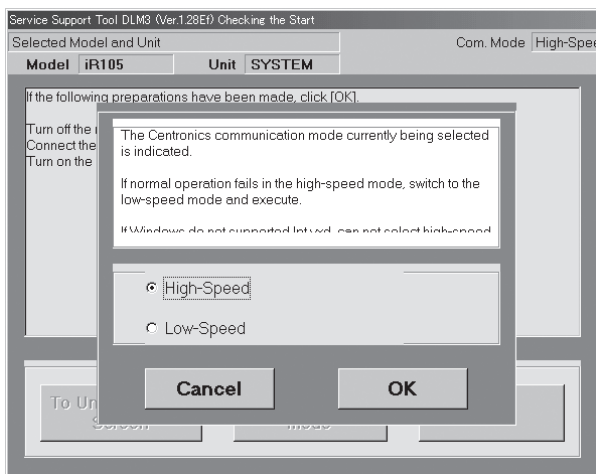


F06-703-04

- 6) Click 'OK' to start connection.

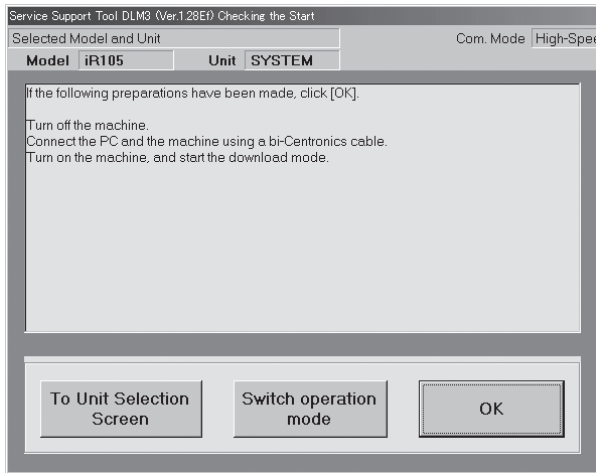

F06-703-05

- 7) When connection is done, the following screen will appear. Click 'OK'.

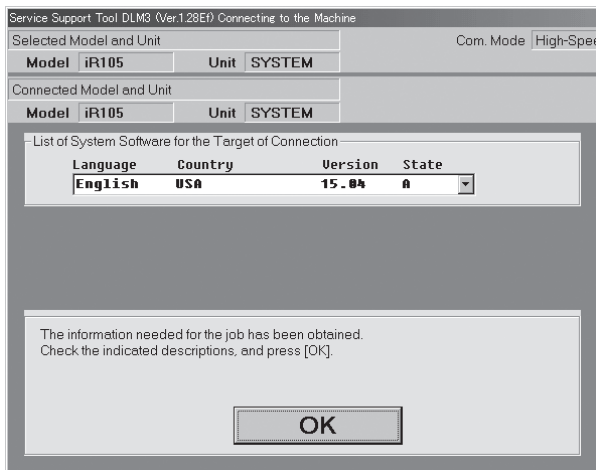

F06-703-06

- 8) Select 'System Software Download' of the Service Support Tool screen.

Service Support Tool DLM3 (Ver.1.28E) Selecting a Job

Connected Model and Unit

Model **iR105** Unit **SYSTEM** Com. Mode | High-Speed

List of System Software for the Target of Connection

| Language | Country | Version | State |
|----------|---------|---------|-------|
| English | USA | 15.04 | A |

Selecting a SYSTEM Job

Click the job key for SYSTEM.

Write the system software to the machine.

Recover the system software that has been backed up.

Save the backup data of the machine.

Write the saved backup data to the machine.

System Software Download

Recover the Backup system

Upload the Backup Data

Download the backup Data

To Unit Selection Screen

F06-703-07

- 9) Select the files suited to the language and the country in question from the 'list of software' on the Service Support Tool screen, and click 'Start'.

Service Support Tool DLM3 (Ver.1.28E) Selecting a Version

Connected Model and Unit

Model **iR105** Unit **SYSTEM** Com. Mode | High-Speed

List of System Software for the Target of Connection

| Language | Country | Version | State |
|----------|---------|---------|-------|
| English | USA | 15.04 | A |

System Software Versions Available for Selection

Click the appropriate version to select from among the available system software versions.

Information on the selected version will be indicated at the bottom.

| Language | Country | Version |
|----------|---------|---------|
| English | USA | 15.04 |
| Japanese | Japan | 15.04 |

Selected Version

Language **English** Country **USA** Version **15.04**

Start

Previous Screen

F06-703-08

- 10) The following screen will appear to indicate the types of software that will be downloaded: “Function: COPY/PRINTER” “NetWare: YES/NO.” If the indications are correct, click ‘Start’.

Service Support Tool DLM3 (Ver.1.28E) Selecting a Version

Connected Model and Unit
Model: **iR105** Unit: **SYSTEM** Com. Mode: **High-Speed**

List of System Software for the Target of Connection

| Language | Country | Version | State |
|----------|---------|---------|-------|
| English | USA | 15.04 | A |

Connected target has functions below.

Function: COPY
NetWare: NO

Select Again Start

Selected Version

| Language | Country | Version |
|----------|---------|---------|
| English | USA | 15.04 |

Start

Previous Screen

F06-703-09



Installing System Software with Different Functions

Normally, you cannot upgrade existing system software by means of downloading unless the old and new systems have the same functions; an attempt to do so will result in an error. If the user obtains the official Upgrading kit and follow the appropriate procedure, however, such upgrading is possible; for details, see the Installation Procedure that comes with the Upgrading kit.

- 11) Check the progress bar, which indicates the progress of downloading.
- 12) When downloading ends, turn off the PC by making the following selections: OK>To Unit Selection Screen>OK>To Main Menu>Ending the Service Support Tool>End.

7.3.3 After Downloading

- 1) Turn off the machine's main power switch, and disconnect its power plug.
- 2) Turn off the PC.
- 3) Disconnect the parallel cable from the PC and the machine.
- 4) If a network cable is connected, connect it to its correct location, and turn on the machine's main power switch.
- 5) When the machine has started up, start service mode to check the system version for the HDD: COPIER>DISPLAY>VERSION>MN-CONT.

7.4 Upgrading the BOOT ROM

7.4.1 Making Preparations

When you upgrade the machine's BOOT ROM, you will directly replace the contents of the ROM DIMM. Take full care.

- 1) Check to see that the machine's Data lamp is OFF.
- 2) Turn off the machine's main power switch, and disconnect the power plug and the network cable.



Limits on Preparing the BOOT ROM

You will not be able to prepare the BOOT ROM unless the following conditions are met:

- The model of the machine is the same; e.g., you cannot use the iR8500 BOOT ROM data to upgrade an iR5000.
- The parameter "function" (COPY or PRINTER) must match when downloading the system software; i.e., you cannot use the iR8500N (PS/PCL model) BOOT ROM data to upgrade an iR8500. (The same is true of from PS/PCL model to COPY.)

Any attempt made in disregard of the above will cause a mismatch error when the machine runs a check before writing.

7.4.2 Connection

The following discussions assume the use of a network cable (cross cable).

Making Preparations

If you want to download firmware to the machine using a network, you need to set up the PC and the machine's network environment.


Use TCP/IP as the communication protocol for downloading from a network using the Service Support Tool. Connect the PC to the machine by way of the network, and check to make sure that all are ready for communication by sending a PING command from the PC or the machine.

- 1) Connect the machine's network connector (RJ-45) and the network connector of the PC using a network cable (cross cable).
- 2) Turn on the PC, and start up the Service Support Tool.
- 3) Connect the machine's power plug to the power outlet, and start service mode; make the following selections: COPIER>FUNCTION>SYSTEM>DOWNLOAD. Then, click 'OK' so that the machine will be in download standby mode (notation "STNDBY").

7.4.3 Preparing BOOT ROM


The discussions that follow assume upgrading an iR8500 (COPY model).

- 1) User 'Downloading/Uploading', select 'To Next'.

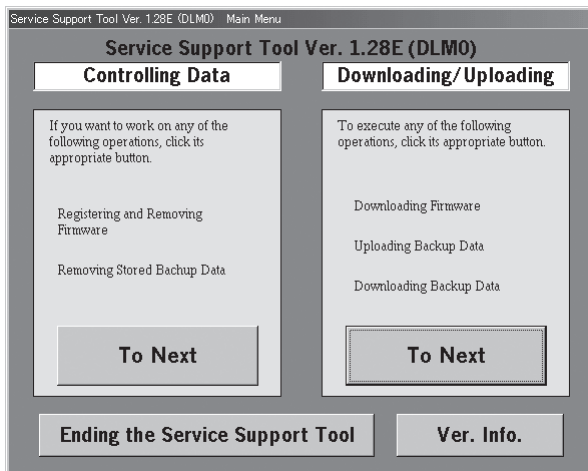


F06-704-01

- 2) Select the correct BOOT, and select an interface (bi-Centronics or Network). (The example selects iR8500 for BOOT, and Network is selected for Interface.)

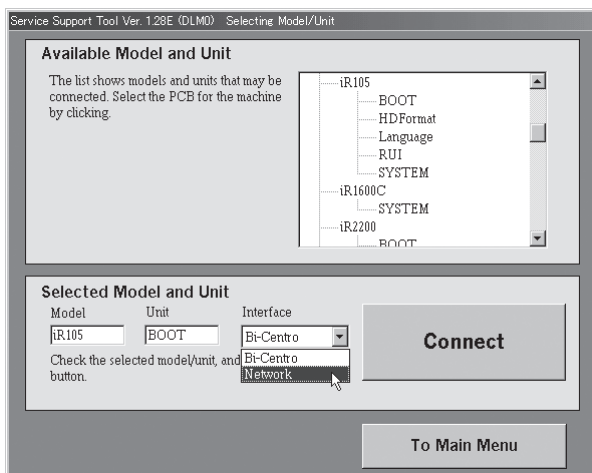


F06-704-02

- 3) To enter the IP address or the host name of the machine to connect, click 'Set host name'.

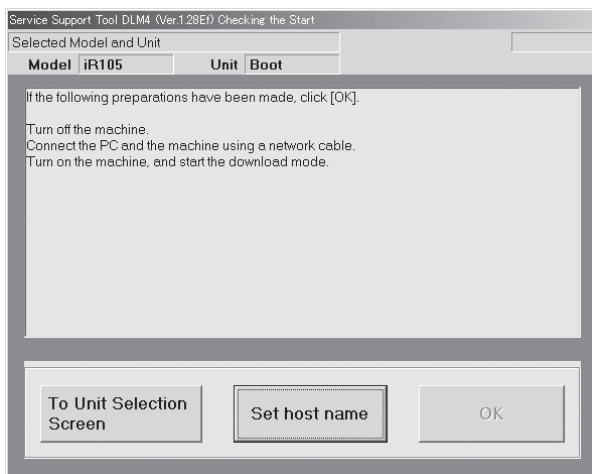


F06-704-03

- 4) Enter the IP address or the host name (here, 172.16.1.1), and click 'Save'. Then, click 'OK'.

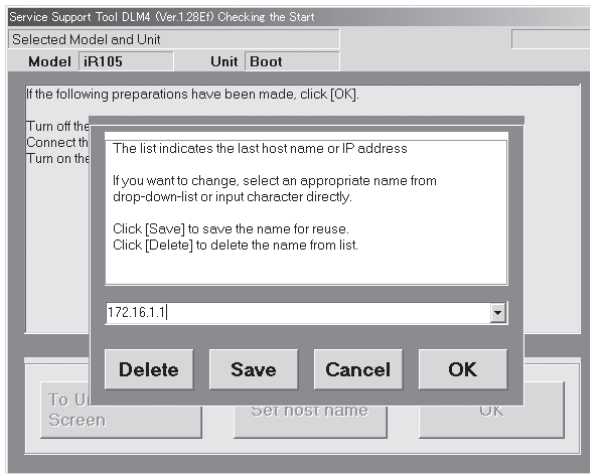

F06-704-04

- 5) Check to see that the notation in the upper right indicates the IP address or the host name of the machine to connect; then, click 'OK' to start connection.

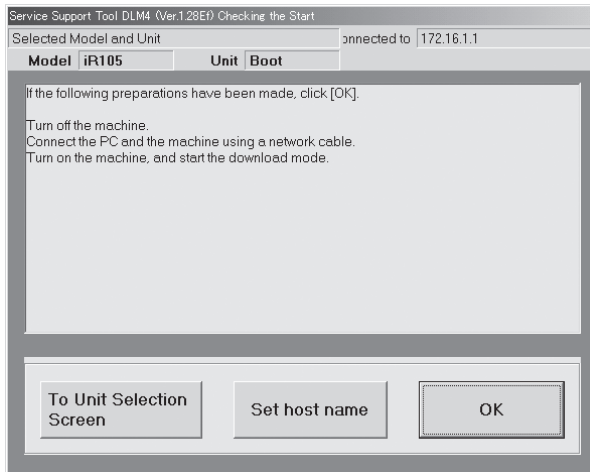

F06-704-05

- 6) When connection is done, the following screen appears. Click 'OK'.

Service Support Tool DLM4 (Ver.1.28E) Connecting to the Machine

Selected Model and Unit Connected to 172.16.1.1

| Model | iR105 | Unit | Boot |
|--------------------------|-------|------|------|
| Connected Model and Unit | | | |
| Model | iR105 | Unit | Boot |

- List of System Software for the Target of Connection

| Language | Country | Version | State |
|----------|---------|---------|-------|
| English | USA | 15.04 | A |

- BootROM of the Target of Connection

| Language | Country | Version |
|----------|---------|---------|
| Common | All | 06.24 |

The information needed for the job has been obtained.
Check the indicated descriptions, and press [OK].

OK

F06-704-06

- 7) Select 'BOOT ROM Download' on the Service Support Tool screen.

Service Support Tool DLM4 (Ver.1.28E) Selecting a Job

Connected Model and Unit Connected to 172.16.1.1

| Model | iR105 | Unit | Boot |
|--------------------------|-------|------|------|
| Connected Model and Unit | | | |
| Model | iR105 | Unit | Boot |

- List of System Software for the Target of Connection

| Language | Country | Version | State |
|----------|---------|---------|-------|
| English | USA | 15.04 | A |

- BootROM of the Target of Connection

| Language | Country | Version |
|----------|---------|---------|
| Common | All | 06.24 |

- Selecting a BootROM Job

Click the job key for BootROM.

Write the boot program to the machine.

BootROM Download

To Unit Selection Screen

F06-704-07

- 8) Select the files for the version in question of the Service Support Tool from ‘list of software’; then, click ‘Start’ to start downloading.

Service Support Tool DLM4 (Ver.1.28E) Selecting a Version

Connected Model and Unit: Connected to 172.16.1.1

Model: iR105 Unit: Boot

| BootROM of the Target of Connection | | |
|-------------------------------------|---------|---------|
| Language | Country | Version |
| Common | All | 06.24 |

BootROM Versions Available for Selection

Click the appropriate version to select from among the available BootROM versions.

Information of the selected version will be indicated at the bottom.

| Language | Country | Version |
|----------|---------|---------|
| Common | All | 06.24 |

Selected Version

Language: Common Country: All Version: 06.24

Start

Previous Screen

F06-704-08

- 9) See the progress bar, which indicates the progress of downloading.



Take full care so that the machine and the PC will not be turned off while downloading is taking place. Otherwise, they may fail to start up.

- 10) When downloading ends, turn off the PC by making the following selections: OK>To Unit Selection Screen>OK>To Main Menu>Ending the Service Support Tool>End.

7.4.4 After Downloading

- 1) Turn off the machine's main power switch, and disconnect the power plug.
- 2) Turn off the PC.
- 3) Disconnect the network cable (cross cable) and the PC from the machine.
- 4) If a network cable is connected, connect it to the correct location, and turn on the machine's main power switch.
- 5) When the machine has started up, start service mode, and check the version of the BOOT ROM: COPIER>DISPLAY>VERSION>BOOT-ROM.

7.5 Formatting the HDD

If you have replaced the HDD, you must format it and then download the system software, RUI, and language.


7.5.1 Making Connections

The discussions that follow assume the use of a parallel cable:

- 1) Using a parallel cable, connect the PC to the parallel connector on the left side of the controller.
 - At this time, the PC must remain OFF.
 - Connect the 25-pin connector of the bi-Centronics cable to the PC and the 36-pin connector to the machine.
- 2) Turn on the PC, and start up the Service Support Tool.
- 3) Connect the machine's power plug to the power outlet; while holding down '2' and '8' of the keypad at the same time, turn on the main power switch.


7.5.2 Starting Formatting

- 1) Under 'Downloading/Uploading', select 'To Next'.

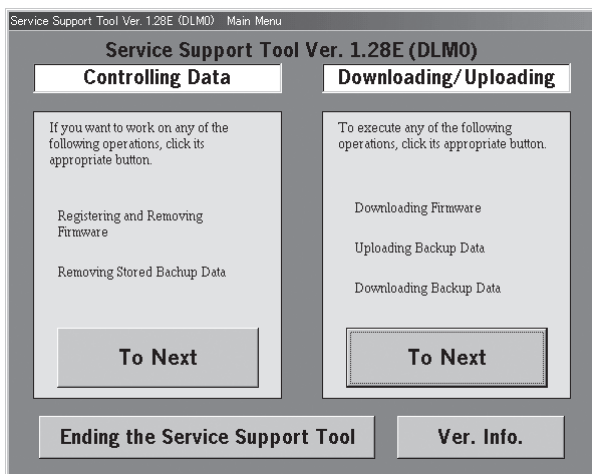


F06-705-01

- 2) Select 'HD Format', and select 'Connect'.

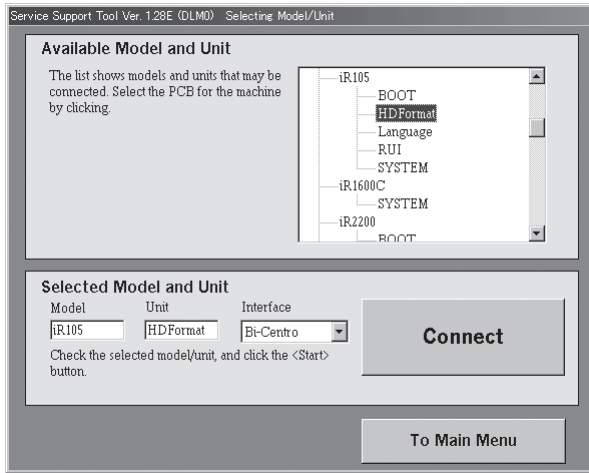


F06-705-02

- 3) At this time, if the notation in the upper right of the screen is 'High-Speed', go to step 5); if 'Low-Speed', go to step 4).

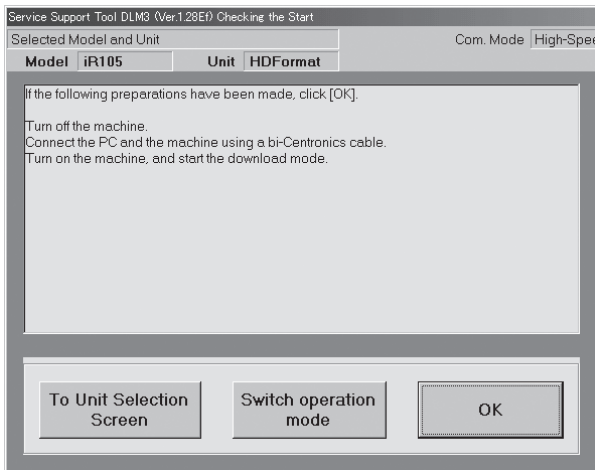


F06-705-03

- 4) Click 'change operation mode' so that the Centronics Communication Mode change screen will appear. Select 'high-speed', and click 'OK'; then, go to step 6).

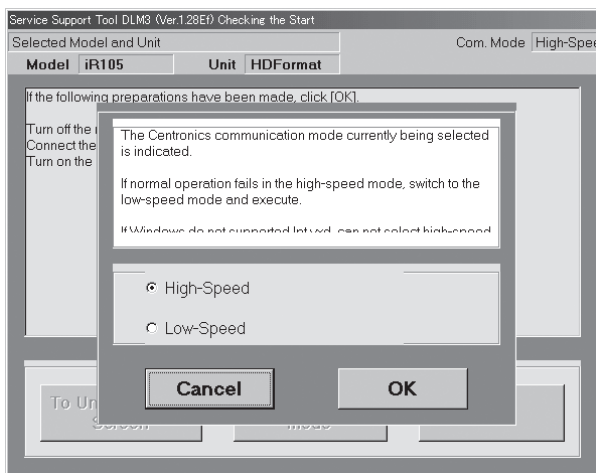


F06-705-04

- 5) Click 'OK' to start connection.

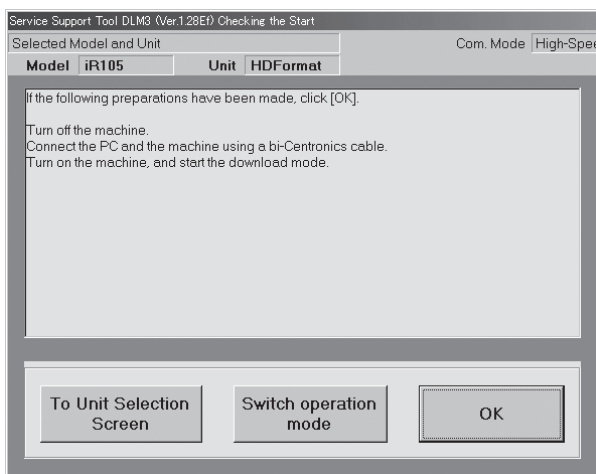


F06-705-05

- 6) When connection is done, the following screen will appear. Select 'OK'.

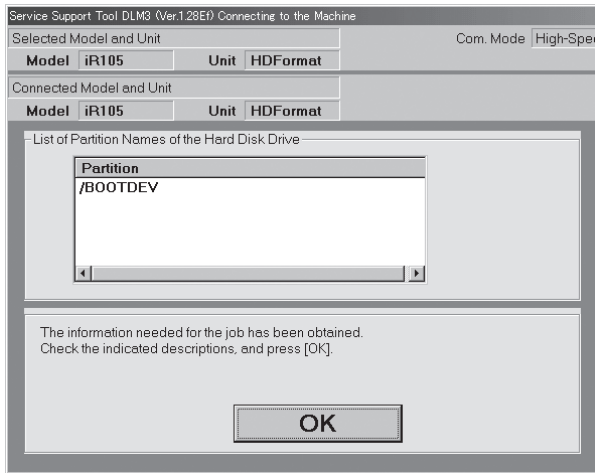


F06-705-06

- 7) When the Check screen appears, select 'Format'.

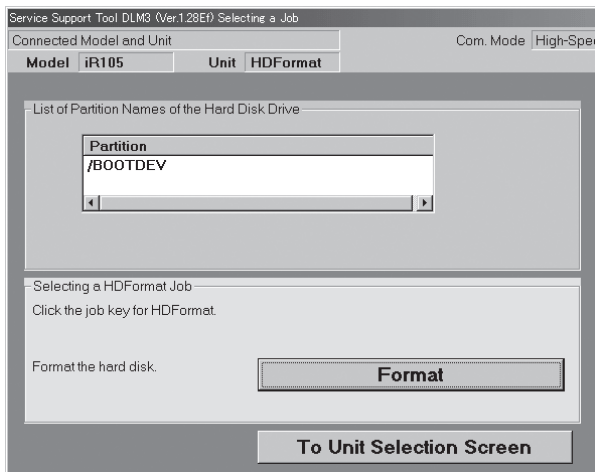


F06-705-07

- 8) When the Start Check screen appears, select 'Start' to format all partitions.

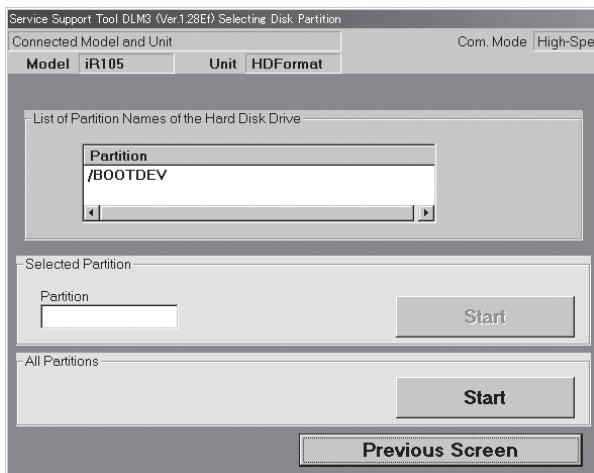


F06-705-08

- 9) When the Start Check screen appears once again, select 'Start'.

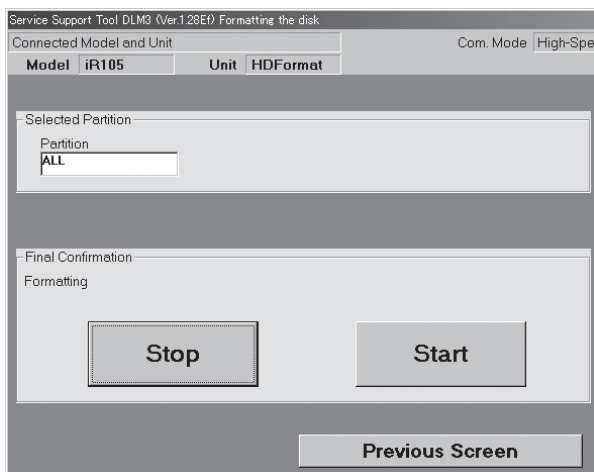


F06-705-09

- 10) When formatting is done, the message “Format Finished” appears. Click ‘OK’.

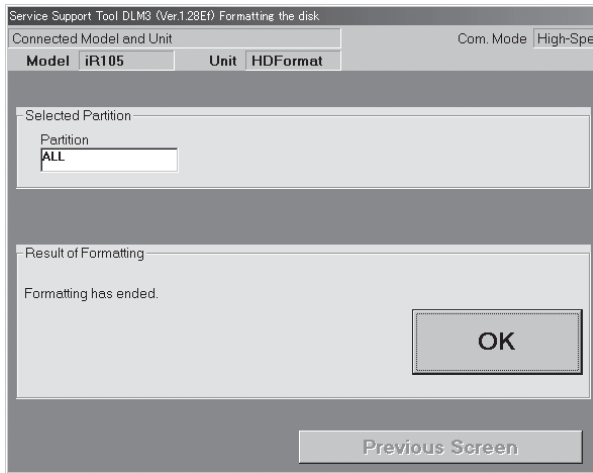

F06-705-10

- 11) To continue downloading system, select ‘To Unit Selection Screen’, and click ‘OK’. Then, start downloading system.

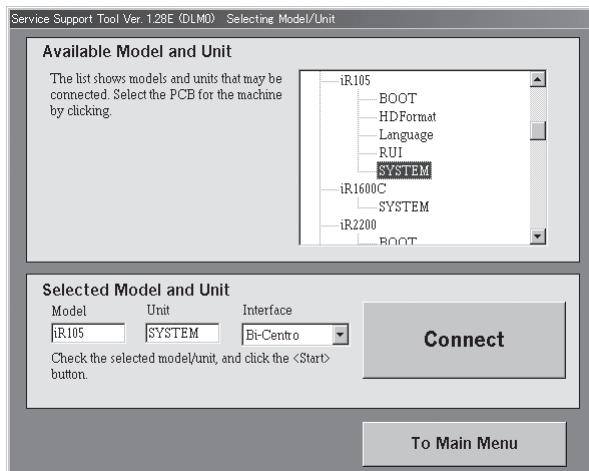

F06-705-11

- 12) When the system downloading ends, install the RUI and the Language module in the same way.

Service Support Tool DLM3 (Ver.1.28E) Selecting a Version

Connected Model and Unit Com. Mode | High-Speed

Model: **iR105** Unit: **Language**

List of System Software for the Target of Connection

| Language | Country | Version | State |
|----------|---------|---------|-------|
| English | USA | 15.04 | H |

Language List for the Target of Connection

| Language | Country | Version | State |
|----------|---------|---------|-------|
| | | | |

Language Versions Available for Selection
Click the appropriate version to select from among the available Language versions. Information on the selected version will be indicated at the bottom.

| Language | Country | Version |
|----------|---------|---------|
| English | All | 15.04 |
| Japanese | All | 15.03 |

Selected Version

| Language | Country | Version |
|----------|---------|---------|
| English | All | 15.04 |

Start

Previous Screen

F06-705-12

7.5.3 Points to Note When Formatting the Hard Disk



1. If you have formatted the hard disk, you must also download the system software at the same time. Otherwise, 'E602-0002' will be indicated when you turn on the power.
If the system software is yet to be installed to the hard disk, the hard disk may still be formatted or the system software may be downloaded in download mode.
Connecting to the Network (using network cable)
2. If you want to install the Language module after installing the system software, you must be sure that its version is compatible with the version of the system software. If you install a Language module not compatible with the system software in question and, in addition, if that language is selected in user mode, 'E744-0001' will be indicated.
3. If you installed the system software after formatting the hard disk, you may notice a faulty image on the control panel display. This is a normal condition, and will disappear when you turn off and then on the machine twice.

7.6 Upgrading by Replacing the DIMM/ROM

The following items may be upgraded by replacing the DIMM/ROM; the DIMM/ROM will be provided as a service part on its own:

- Copier

Reader controller PCB: by replacement of flash ROM DIMM [1]; J1106

DC controller PCB: by replacement of flash ROM DIMM [2]; J521

Main controller PCB: by replacement of BOOT ROM [7]; J1010, see MEMO

DADF-J1

ADF controller PCB: by replacement of ROM [4]; IC1 (DIP type)

Finisher-K1N/K2N

by replacement of ROM [5]; IC110 (DIP type)

Saddle Finisher-K3N/K4N


Finisher controller PCB: by replacement of ROM [5]; IC110 (DIP type)

Saddle stitcher controller PCB: by replacement of ROM [6]; Q2 (DIP type)



In addition to the program for the master CPU, the ROM of the finisher controller PCB contains programs for the slave CPU, requiring you to upgrade the slave CPU software whenever you have replaced the ROM. For details, see the Service Manual of the finisher.

The BOOT ROM [7] on the main controller PCB may be upgraded using a PC. For details, see the descriptions under 7.4 “Upgrading the BOOT ROM.”

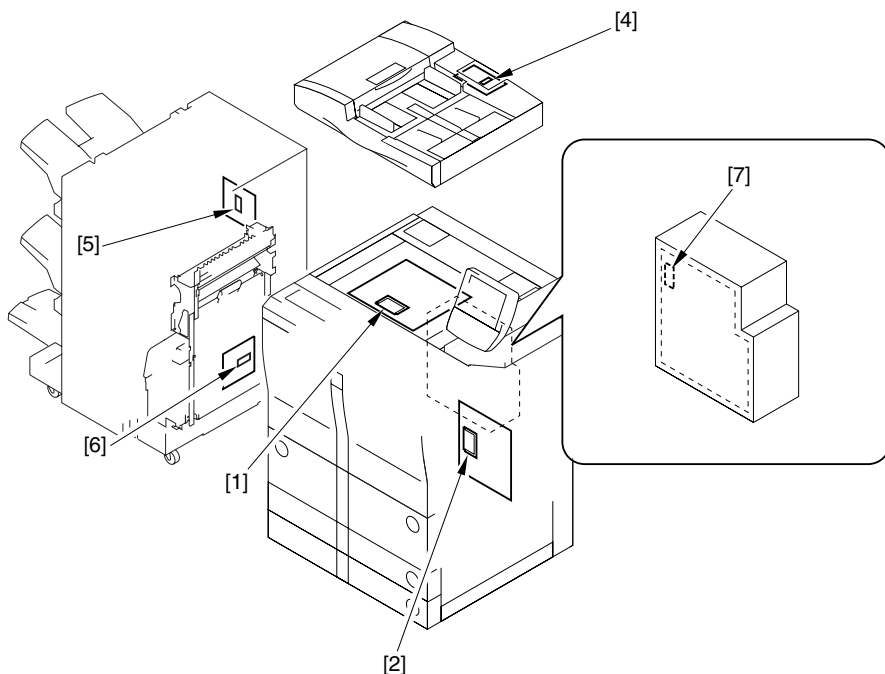

F06-706-01

8 Backing Up Data

8.1 Outline

Using the Service Support Tool, you can back up the data of the SRAM mounted to the main controller PCB.

The SRAM contains the following items of data:

- Service mode settings
- User mode settings
- Various MACHINE DATA

Once you have backed up the data, you may write it to the main controller PCB after replacing the PCB; or, you can simplify the work involved in entering service mode or user mode settings.

It is recommended to back up the data whenever possible using the Service Support Tool when you have updated the service mode settings or the user mode settings.

8.2 Backing Up Data

8.2.1 Making Preparations

- Install the system software to the Service Support Tool, making sure that its version is the same as that of the machine in question.
- Check to make sure that the machine's Data lamp is OFF.
- Turn off the machine's main power switch, and disconnect the power plug; as necessary, disconnect the network cable.

8.2.2 Making Connections

The discussions that follow assume the use of a parallel cable:


- 1) Using a parallel cable, connect the PC to the parallel connector on the right side of the controller.
 - At this time, the PC must remain OFF.
 - Connect the 25-point connector of the parallel cable to the PC and the 36-pin connector to the machine.
- 2) Turn on the power switch of the PC, and start up the Service Support Tool.
- 3) Connect the machine's power plug to the power outlet, and turn on its main power switch.
- 4) Start service mode.
- 5) Make the following selections so that the machine will enter download standby mode (notation "STNDBY"): COPIER>FUNCTION>SYSTEM>DOWNLOAD.



You can select 'network' as the interface for data backup. Here, the use of a bi-Centronics cable is assumed.


8.2.3 Backing Up Data

- 1) Under 'Downloading/Uploading', select 'To Next'.

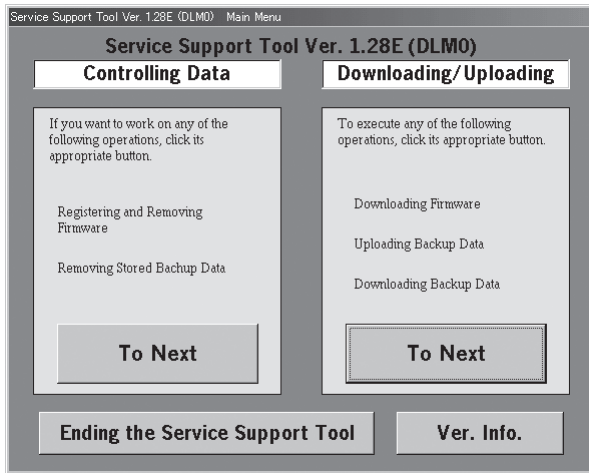


F06-802-01

- 2) Select 'SYSTEM', and select 'Connect'. The discussions that follow assume the use of a bi-Centronics cable as the interface.

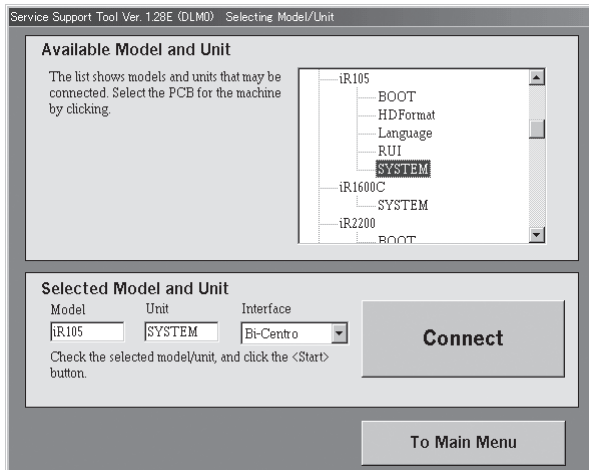


F06-802-02

- 3) At this time, if the notation in the upper right of the screen is 'High-Speed', go to step 5); if 'Low-Speed', go to step 4).

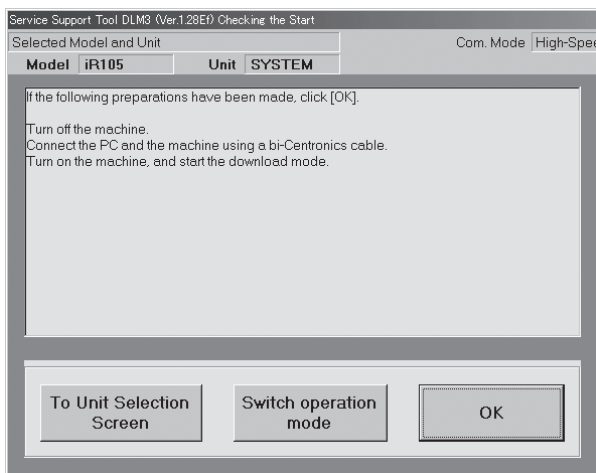


F06-802-03

- 4) Click 'Switch operation mode' to bring up the Centronics Communication Mode Change screen. Select 'High-Speed', and click 'OK' to move to step 5).

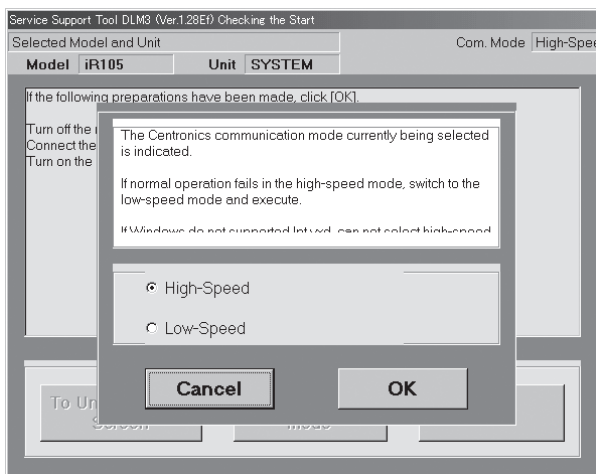


F06-802-04

- 5) Click 'OK' to start connection.

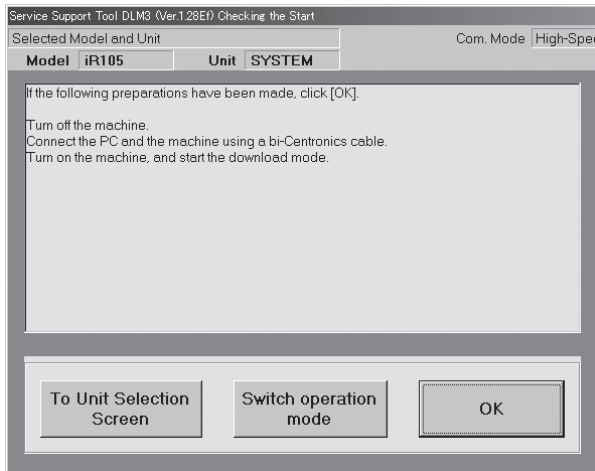

F06-802-05

- 6) When connection is done, the following screen appears. Click 'OK'.

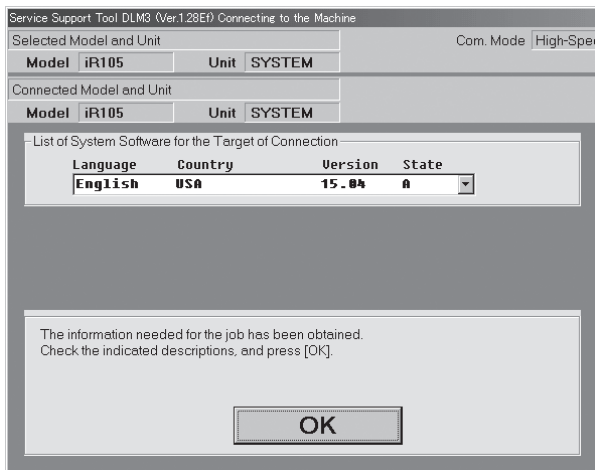

F06-802-06

- 7) Select 'Upload the Backup Data' on the Service Support Tool screen.

Service Support Tool DLM3 (Ver.1.28E) Selecting a Job

Connected Model and Unit Com. Mode High-Speed

Model iR105 **Unit** SYSTEM

List of System Software for the Target of Connection

| Language | Country | Version | State |
|----------|---------|---------|-------|
| English | USA | 15.04 | A |

Selecting a SYSTEM Job

Click the job key for SYSTEM.

Write the system software to the machine. **System Software Download**

Recover the system software that has been backed up. **Recover the Backup system**

Save the backup data of the machine. **Upload the Backup Data**

Write the saved backup data to the machine. **Download the backup Data**

To Unit Selection Screen

F06-802-07

- 8) Select 'ALL', and select 'Start Storing'.

Service Support Tool DLM3 (Ver.1.28E) Selecting Backup Data

Connected Model and Unit Com. Mode High-Speed

Model iR105 **Unit** SYSTEM

List of System Software for the Target of Connection

| Language | Country | Version | State |
|----------|---------|---------|-------|
| English | USA | 15.04 | A |

Backup Data Available for Selection

The list indicates the data that may be saved, from among data saved on the hard disk of the selected unit.

Click the appropriate data to save. The selected data will be indicated at the bottom.

| Name |
|---------|
| ALL |
| COUNTER |
| DEPTMNG |
| LOGDATA |

Selected Backup Data


| Data Type | Language | Country | Version |
|-----------|----------|---------|---------|
| ALL | English | USA | 15.04 |

Start Storing

Previous Screen


F06-802-08

- 9) See the progress bar, indicating the progress of the save operation.
- 10) Select the drive to save the data to, and enter the file name; then, select 'Save'.

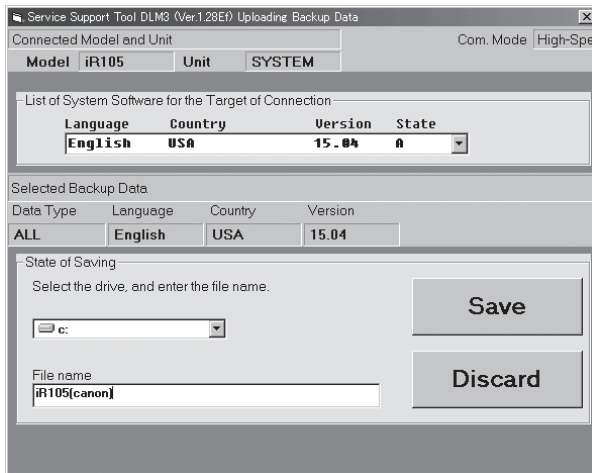

F06-802-09


- 11) When the selected file has been stored on the selected drive, the following screen will appear; make the following selections to end the Service Support Tool: OK>To Unit Selection Screen>OK>To Main Menu>Ending the Service Support Tool>End.

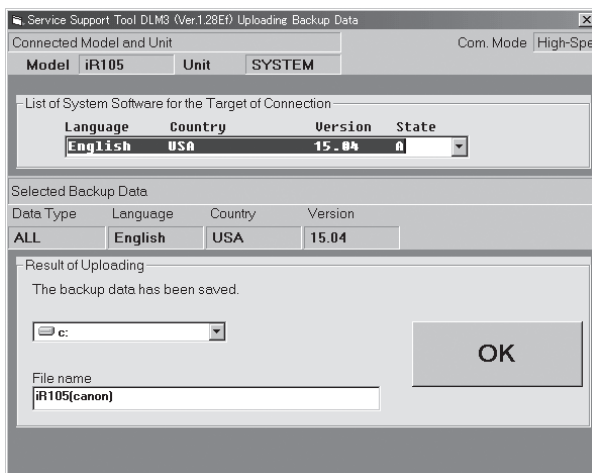

F06-802-10


8.2.4 Downloading Backup Data

- 1) Under 'Downloading/Uploading', select 'To Next'.

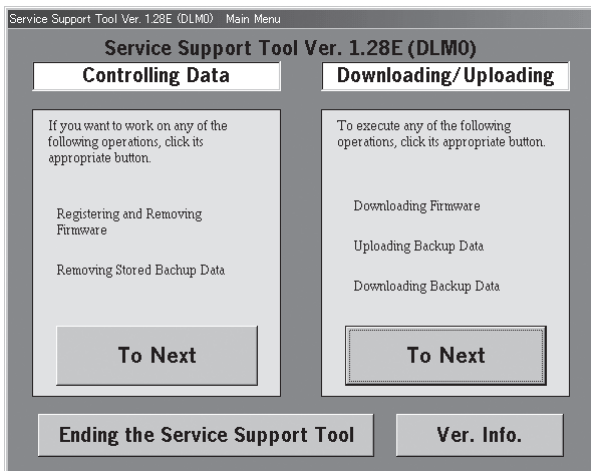


F06-802-11

- 2) Select 'SYSTEM', and select 'Connect'.

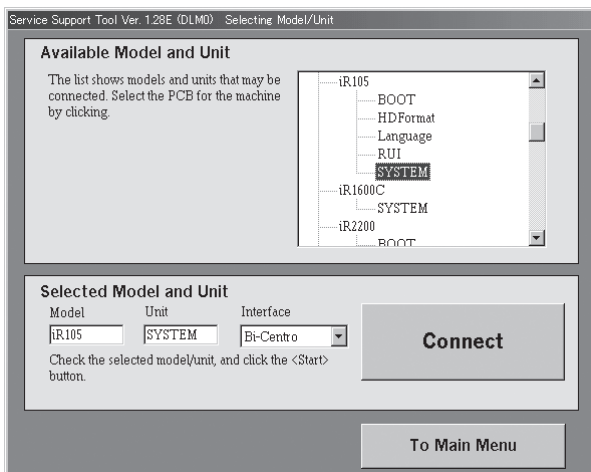


F06-802-12

- 3) Select 'OK', and start connection.

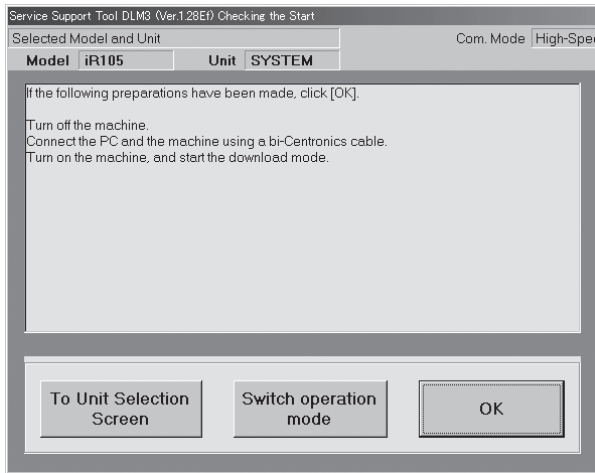

F06-802-13

- 4) When connection is done, the following screen appears. Click 'OK'.

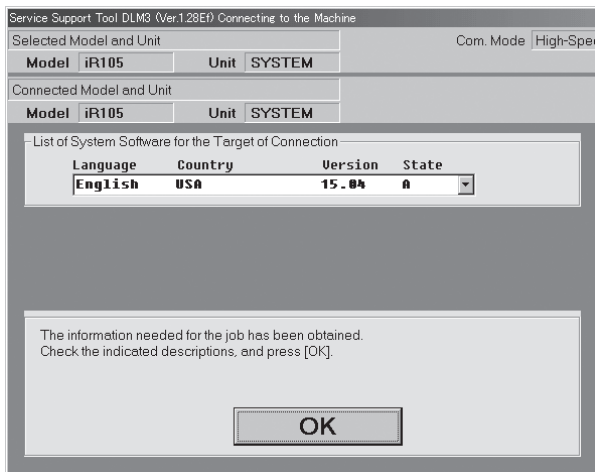

F06-802-14

- 5) Select 'Download the backup Data'.

Service Support Tool DLM3 (Ver.1.28E) Selecting a Job

Connected Model and Unit Com. Mode High-Speed

Model iR105 **Unit** SYSTEM

List of System Software for the Target of Connection

| Language | Country | Version | State |
|----------|---------|---------|-------|
| English | USA | 15.04 | A |

Selecting a SYSTEM Job

Click the job key for SYSTEM.

Write the system software to the machine.

Recover the system software that has been backed up.

Save the backup data of the machine.

Write the saved backup data to the machine.

System Software Download

Recover the Backup system

Upload the Backup Data

Download the backup Data

To Unit Selection Screen

F06-802-15

- 6) Select the file to download, and select 'Start Writing'.

Service Support Tool DLM3 (Ver.1.28E) Selecting Backup Data

Connected Model and Unit Com. Mode High-Speed

Model iR105 **Unit** SYSTEM

List of System Software for the Target of Connection

| Language | Country | Version | State |
|----------|---------|---------|-------|
| English | USA | 15.04 | A |

Backup Data Available for Selection

The list shows data that may be downloaded.

Click the data to download to select. Information on the selected data will be indicated at the bottom.

c: \

| Name |
|------------------|
| iR105(canon).upd |

Select Backup Data

| Model | Unit | Language | Country | Version |
|-------|--------|----------|---------|---------|
| iR105 | SYSTEM | English | USA | 15.04 |


| File Name | Data Type | Date | Time |
|------------------|-----------|------------|----------|
| iR105(canon).upd | ALL | 2001/07/09 | 22:28:24 |

Start Writing

Previous Screen

F06-802-16

- 7) See the progress bar, indicating the progress of the downloading operation. At the end, the following screen will appear. Select 'OK'.

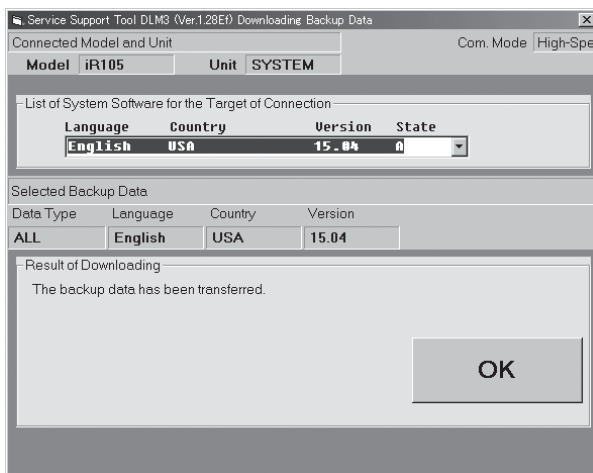

F06-802-17


- 8) Make the following selections to end the Service Support Tool: To Unit Selection Screen>OK>To Main Menu>Ending the Service Support Tool>End.

8.2.5 Managing Backup Data

You can delete backup data that has become obsolete as follows:


You need not connect a PC to the machine to do so.

- 1) Under 'Controlling Data', select 'To Next'.

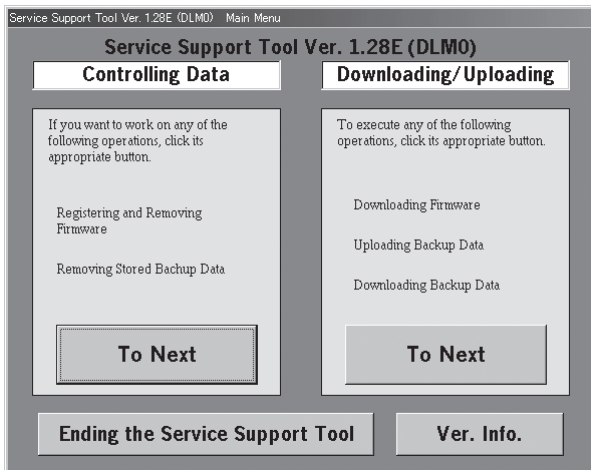


F06-802-18

- 2) Select 'Controlling Backup Data'.

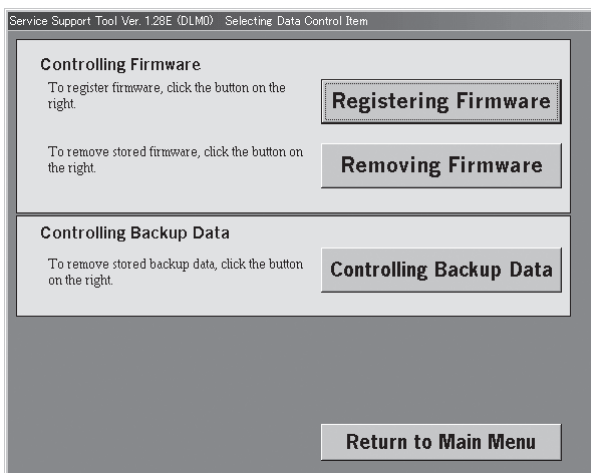


F06-802-19

- 3) Select the file to delete from the list of 'Backup Data Stored on Computer'; then select 'Remove'.

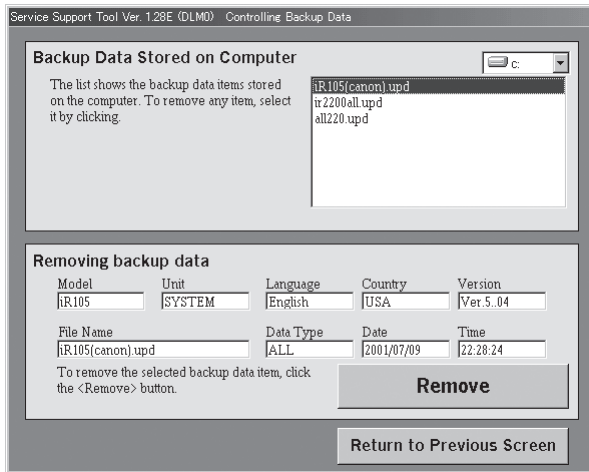


F06-802-20

- 4) When the Delete Check screen appears, check the description for the selected file, and select 'Remove'.

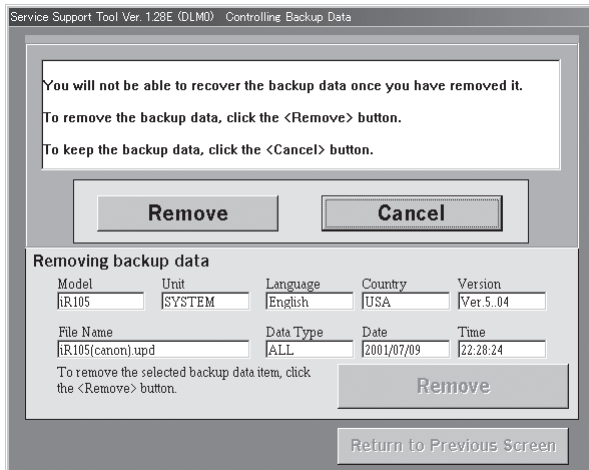

F06-802-21

- 5) When the Delete Finish screen appears, click 'OK'. Make the following selections to end the Service Support Tool: Return to Previous Screen>Return to Main Menu>Ending the Service Support Tool>End.

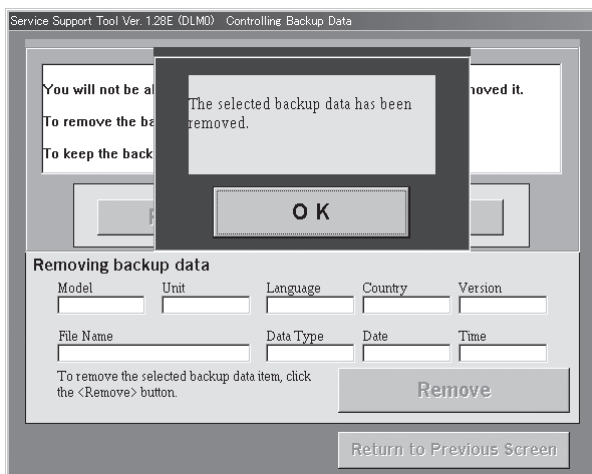


F06-802-22


APPENDIX

1 GENERAL TIMING CHART

A4, 2 Originals, Single-Sided Copy

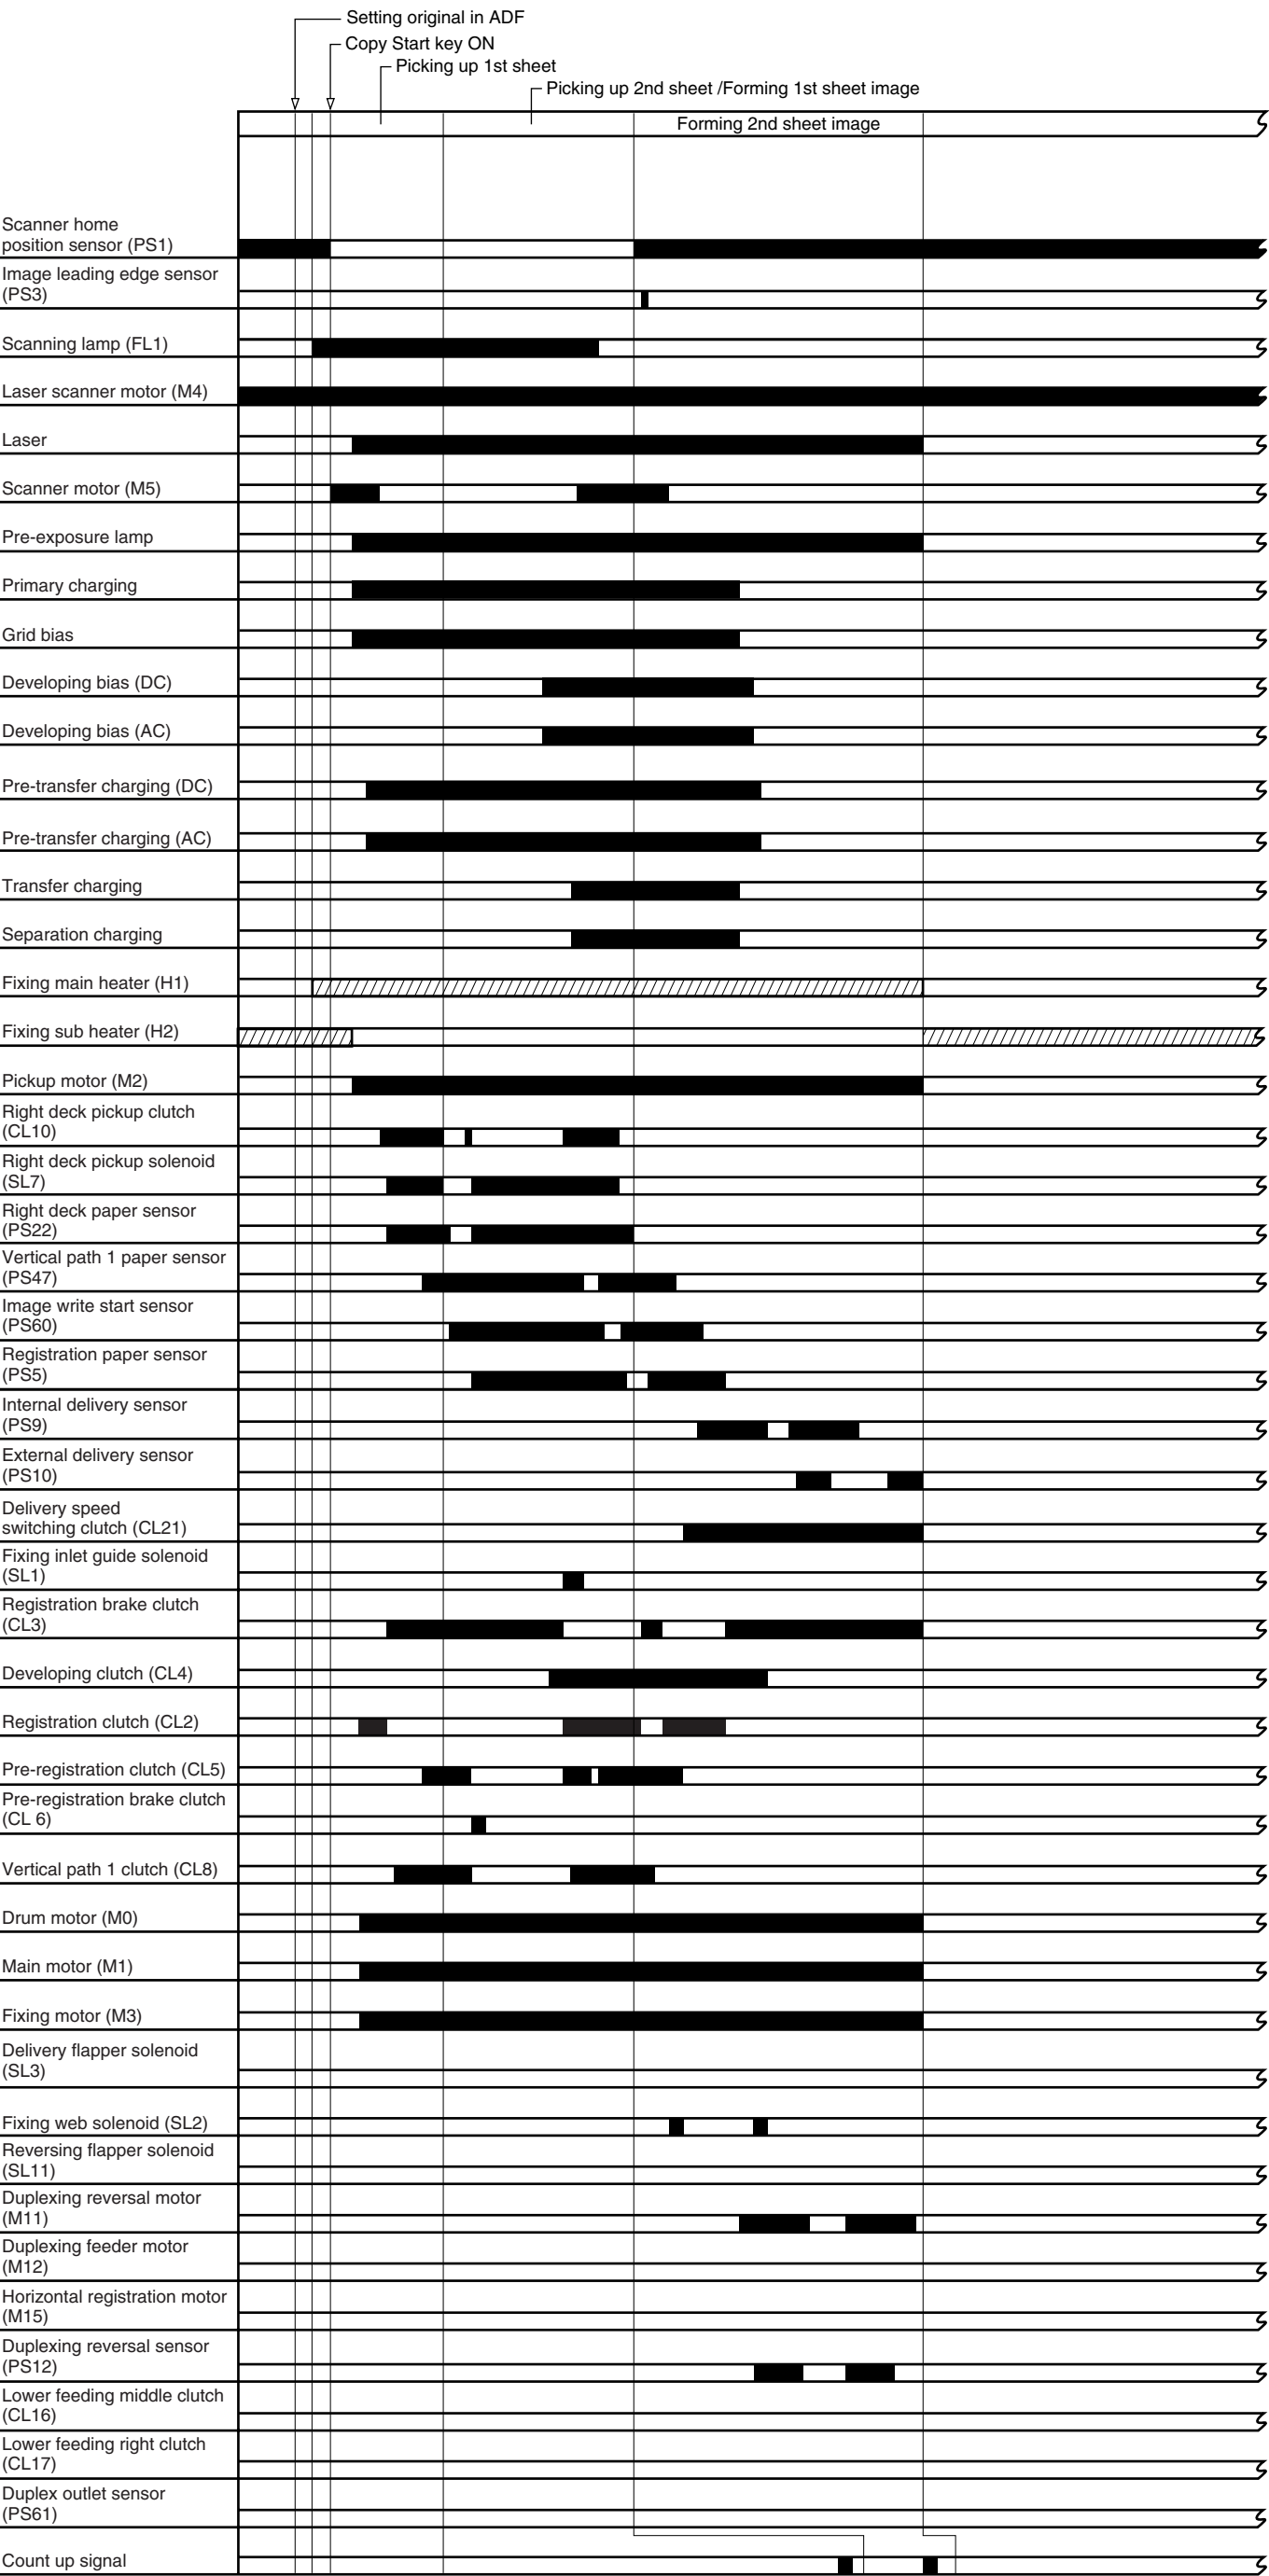

A4, 4 Originals, Double-Sided Copy

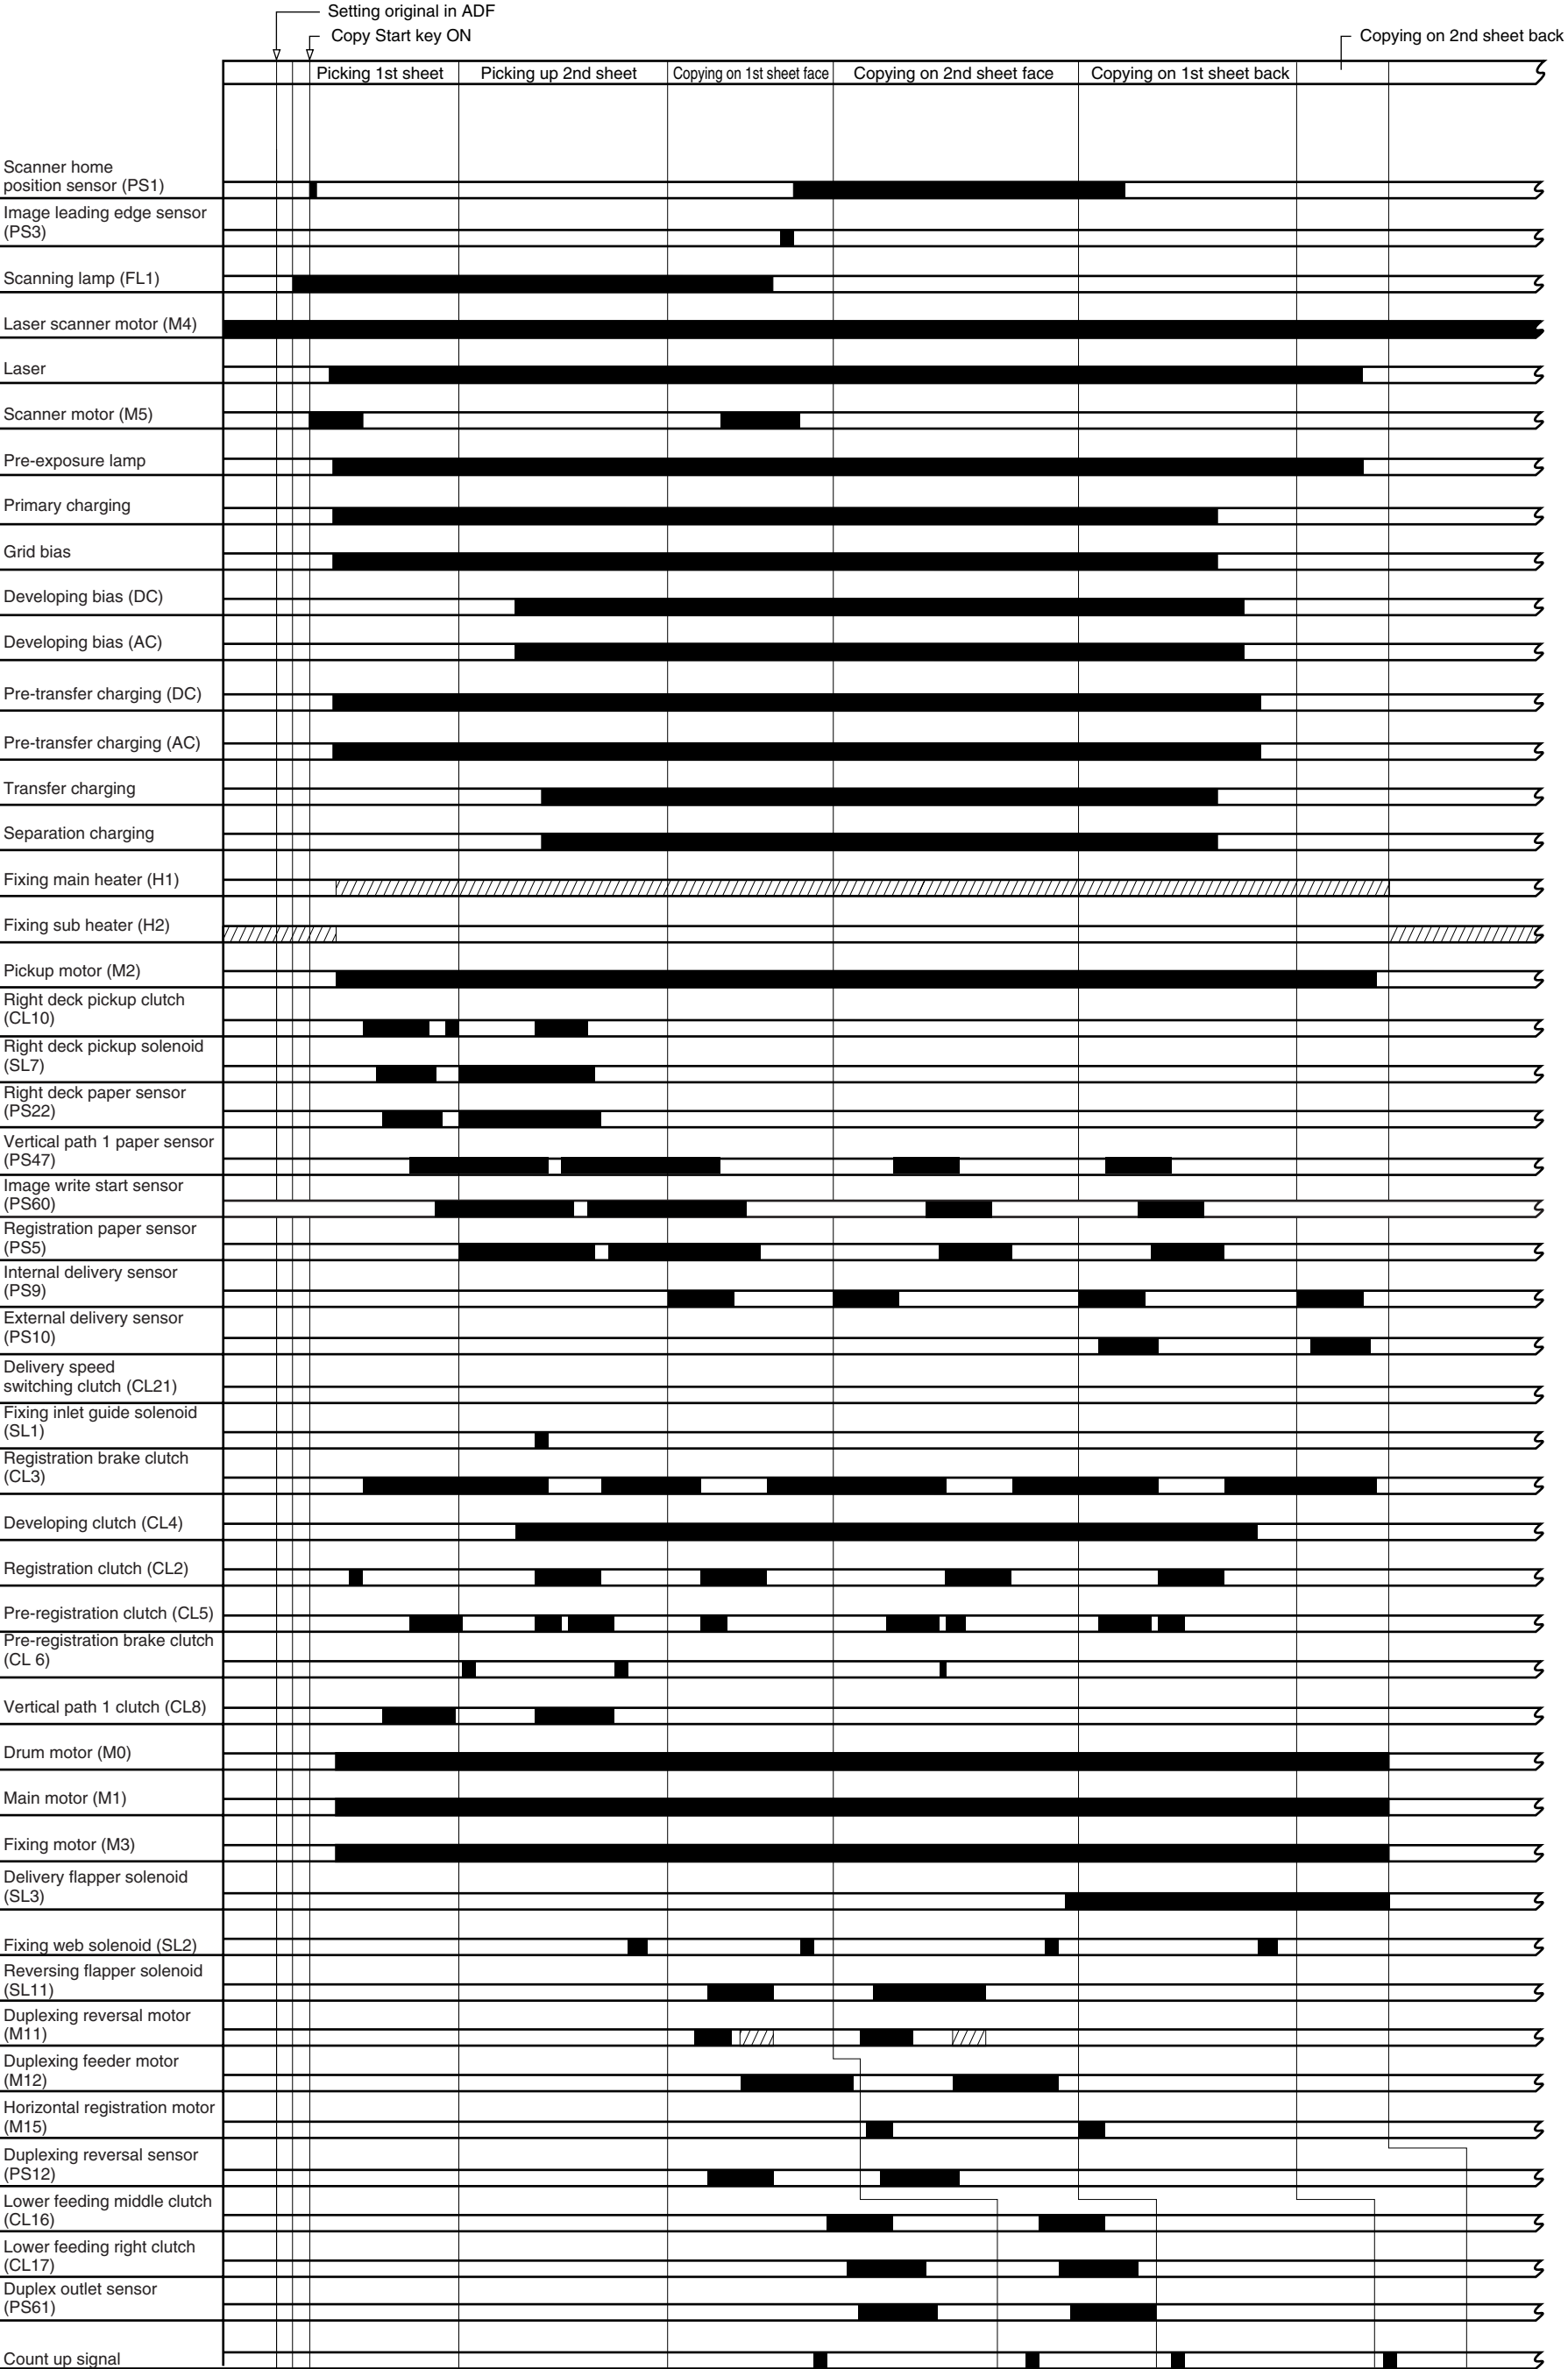

2 LIST OF SIGNALS/ABBREVIATIONS

The following is a list of the signals and abbreviations used in this chapter and the circuit diagrams.




The abbreviations in parentheses are electrical signals, but are analog signals, which cannot be expressed in terms of '1' or '0'. Others are digital signals, which may be expressed in terms of '1' or '0'.

| | |
|------------------|---|
| AFTER_JOIN_PS | Post-confluence sensor detection signal |
| BUFFER_CL | Hopper internal magnet roller drive clutch drive command |
| BUFFER_MOTOR(-) | Hopper internal toner feeder motor drive command 2 |
| BUFFER_MOTOR(+) | Hopper internal toner feeder motor drive command 1 |
| BUFFER_NG | Hopper internal toner lower limit sensor detection signal |
| BUFFER_WARNING | Hopper internal toner sensor detection signal |
| C3_FEED_CL_ON | Cassette 3 pickup clutch drive command |
| C3_FEED_PS | Cassette 3 pickup sensor detection signal |
| C3_LENGTH | Cassette 3 paper length sensor detection signal |
| C3_LIFT_PS | Cassette 3 lifter sensor detection signal |
| C3_LIFTER_MOTOR | Cassette 3 lifter motor drive command |
| C3_OPEN_PS | Cassette 3 open/closed sensor detection signal |
| C3_PAPER_PS | Cassette 3 paper sensor detection signal |
| C3_PICKUP_SL | Cassette 3 pickup solenoid drive command |
| C3_PLEVER_VR | Cassette 3 paper level detection signal |
| C3VR | Cassette 3 paper width volume detection signal |
| C4_FEED_CL_ON | Cassette 4 pickup clutch drive command |
| C4_FEED_PS | Cassette 4 pickup sensor detection signal |
| C4_LENGTH | Cassette 4 paper length sensor detection signal |
| C4_LIFT_PS | Cassette 4 lifter sensor detection signal |
| C4_LIFTER_MOTOR | Cassette 4 lifter motor drive command |
| C4_OPEN_PS | Cassette 4 open/closed sensor detection signal |
| C4_PAPER_PS | Cassette 4 paper sensor detection signal |
| C4_PICKUP_SL_ON | Cassette 4 pickup solenoid drive command |
| C4_PLEVER_VR | Cassette 4 paper level detection signal |
| C4VR | Cassette 4 paper width volume detection signal |
| CARTRIGE_DETECT | Cartridge detecting switch detection signal |
| CARTRIGE_MOTOR- | Cartridge internal toner feeder motor drive command |
| CARTRIGE_MOTOR+ | Cartridge internal toner feeder motor drive command |
| CARTRIGE_OPEN_PS | Toner cartridge cover open/closed sensor detection signal |
| CLEW_PS | Fixing claw jam sensor detection signal |
| CURL_FAN_STOP | De-curling fan lock detection signal |
| DCP_FAN1_STOP | Power supply cooling fan 1 lock detection signal |
| DCP_FAN2_STOP | Power supply cooling fan 2 lock detection signal |
| DECK_PULL_PS | Front deck (left) feeding sensor detection signal |

| | |
|-------------------|--|
| DEV_FAN_STOP | Developing fan lock detection signal |
| DEV_SLEEVE_CL_ON | Developing cylinder deceleration clutch drive command |
| DEV1_SLEEVE_CL_ON | Developing clutch drive command |
| DEVELOP_IS | Developing assembly internal toner sensor detection signal |
| DOCUMENT_TOP | Image leading edge sensor detection signal |
| DRUN_FAN_STOP | Drum fan lock detection signal |
| DRUN_MOTOR_LOCK | Drum motor lock detection signal |
| DRUN_MOTOR_ON | Drum motor drive command |
| DUP-INV_PS | Duplexing reversal sensor detection signal |
| EXHAUST_FAN_STOP | Fixing assembly heat discharge fan lock detection signal |
| EXIT_DEL_PS | External delivery sensor detection signal |
| EXIT_FAN1_LOCK | Delivery adhesion-proofing fan lock detection signal |
| FEED_MOTOR_FG | Pickup motor frequency signal |
| FEED_MOTOR_ON | Pickup motor drive command |
| FIXEXIT_DEL_PS | Fixing feeding unit outlet sensor detection signal |
| FL_TH | Scanning lamp thermal sensor detection signal |
| FLAP_SL | Delivery flapper solenoid drive command |
| FREAD_FAN_STOP | Stream reading fan lock detection signal |
| FRONT_DR_OPEN | Front cover open/closed detecting switch detection signal |
| FRONT_JOIN_PS | Pre-confluence sensor detection signal |
| FUSE_M_LOCK | Fixing motor lock detection signal |
| FUSE_M_ON | Fixing motor drive command |
| GLASS_PS | Copyboard glass sensor detection signal |
| INT_DEL_PS | Internal delivery sensor detection signal |
| INV_FAN_STOP | Inverter cooling fan lock detection signal |
| INV_GUIDE_SL | Reversing flapper solenoid drive command |
| KAKIKOMI_PS | Image write start sensor detection signal |
| LASER1_FAN_STOP | Scanner cooling fan lock detection signal |
| LASER2_FAN_STOP | Laser driver cooling fan lock detection signal |
| LDECK_FEED_CL | Deck (left) pickup clutch drive command |
| LDECK_FEED_PS | Front deck (left) pickup sensor detection signal |
| LDECK_LIFT_MOTOR | Deck (left) lifter motor drive command |
| LDECK_LIFT_PS | Front deck (left) lifter sensor detection signal |
| LDECK_LIMIT_PS | Front deck (left) limit sensor detection signal |
| LDECK_OPEN_PS | Front deck (left) open/closed sensor detection signal |
| LDECK_PAPER_PS | Front deck (left) paper sensor detection signal |
| LDECK_PICKUP_SL | Deck (left) pickup solenoid drive command |
| LDECK_PLEVEL_M | Front deck (left) paper level middle sensor detection signal |
| LDECK_PLEVEL_U | Front deck (left) paper level high sensor detection signal |
| LDECK_PULL_CL | Deck (left) feeding clutch drive command |
| LOCK | System fan lock detection signal |
| LOCK | Duplex feed fan lock detection signal |
| LOW_DR_OPEN | Lower right cover open/closed sensor detection signal |
| LOWPASS_C_CL | Lower feeding middle clutch drive command |


| | |
|---------------------|--|
| LOWPASS_R_CL | Lower feeding right clutch drive command |
| MAIN_MOTOR_FG | Main motor frequency signal |
| MAIN_MOTOR_ON | Main motor drive command |
| MAIN_TENP | Fixing main thermistor detection signal |
| MLT_CURL_ENTRY | Manual feed sensor detection signal |
| MLT_DR_OPEN | Manual feed tray cover open/closed sensor detection signal |
| MLT_FEED_CL | Manual feed tray pickup clutch drive command |
| MLT_PAPER_PS | Manual feed tray paper sensor detection signal |
| MLT_PICKUP_SL_BACK | Manual feed pickup clutch solenoid drive command |
| MLT_PICKUP_SL_PULL | Manual feed pickup clutch solenoid drive command |
| MLT_PULL_CL | Manual feed tray feeding clutch drive command |
| MLT_VOLUME | Manual feed tray paper width volume detection signal |
| MOTOR_ON | Vibration motor drive command |
| MUTI DOOR OPEN | Manual feed tray cover open/closed detecting sensor detection signal |
| OPT_HP1 | Scanner home position sensor detection signal |
| OPT_MOTOR_FAN_STOP | Scanner moter cooling fan lock detection signal |
| ORI_SIZE_ON/OFF | Original size sensor ON/OFF detection signal |
| ORI_SIZE1 | Original size sensor detection signal 1 |
| ORI_SIZE2 | Original size sensor detection signal 2 |
| ORI_SIZE3 | Original size sensor detection signal 3 |
| ORI_SIZE4 | Original size sensor detection signal 4 |
| PATH1_CL_ON | Vertical path 1 clutch drive command |
| PATH1_PS | Vertical path 1 paper sensor detection signal |
| PATH2_CL_ON | Vertical path 2 clutch drive command |
| PATH2_PS | Vertical path 2 paper sensor detection signal |
| PATH3_CL_ON | Vertical path 3 clutch drive command |
| PATH3_PS | Vertical path 3 paper sensor detection signal |
| PATH4_CL_ON | Vertical path 4 clutch drive command |
| PATH4_PS | Vertical path 4 paper sensor detection signal |
| POST_FAN_STOP | Pre-transfer charging fan lock detection signal |
| POST_M.C_BK | Pre-transfer charging wire cleaning motor drive command (reverse) |
| POST_M.C_FW | Pre-transfer charging wire cleaning motor drive command (forward) |
| POTENTIAL_ON | Potential sensor detection signal |
| POTENTIAL_SIG | Potential sensor detection signal |
| PRESSING_PLATE_OPEN | Copyboard cover open/closed sensor detection signal |
| PRIM_FAN_STOP | Primary charging assembly fan lock detection signal |
| PRIMARY_V.C_BK | Primary charging wire cleaning motor drive command (reverse) |
| PRIMARY_V.C_FW | Primary charging wire cleaning motor drive command (forward) |
| PRIREGI_BRAKE_CL_ON | Pre-registration brake clutch drive command |

| | |
|------------------------|--|
| PRIREGI_CL_ON | Pre-registration clutch drive command |
| RDECK_FEED_CL | Deck (right) pickup clutch drive command |
| RDECK_FEED_PS | Front deck (right) pickup sensor detection signal |
| RDECK_LIFT_MOTOR(24VU) | Deck (right) lifter motor drive command |
| RDECK_LIFTER_PS | Front deck (right) lifter sensor detection signal |
| RDECK_LIMIT_PS | Front deck (right) limit sensor detection signal |
| RDECK_OPEN_PS | Front deck (right) open/closed sensor detection signal |
| RDECK_PAPER_PS | Front deck (right) paper sensor detection signal |
| RDECK_PICKUP_SL_ON | Deck (right) pickup solenoid drive command |
| RDECK_PLEVEL_M | Front deck (right) paper level middle sensor detection signal |
| RDECK_PLEVEL_U | Front deck (right) paper level high sensor detection signal |
| RDECK_PULL_PS | Front deck (right) feeding sensor detection signal |
| REGI_BRAKE_CL | Registration brake clutch drive command |
| REGIST_CL | Registration clutch drive command |
| REGIST_PS | Registration paper sensor detection signal |
| REVER_OPEN_PS | Fixing/feeding unit releasing lever sensor detection signal |
| RUP_DR_OPEN | Upper right cover open/closed sensor detection signal |
| SEP_EXAUST_FAN_STOP | Scanner motor cooling fan lock detection signal |
| SIDE_REGI_PS | Horizontal registration sensor detection signal |
| SPEED_DEL_CL | Delivery speed switching clutch drive command |
| STOP | Separation fan lock detection signal |
| SUB_TEMP | Fixing sub thermistor detection signal |
| T/S_W.C_OUT1 | Transfer/separation charging wire cleaning motor drive command 1 |
| T/S_W.C_OUT2 | Transfer/separation charging wire cleaning motor drive command 2 |
| TERN_HUM_SENSOR | Environment sensor detection signal |
| UNITLOCK_SL_BACK | Fixing feeding unit locking solenoid drive command (back) |
| UNITLOCK_SL_PULL | Fixing feeding unit locking solenoid drive command (pull) |
| U-TURN_PS | Duplex outlet sensor detection signal |
| VASIE_TONER_PACKED_DTC | Waste toner clog detecting switch detection signal |
| WASTE_TONER_OVER_PS | Waste toner case full sensor detection signal |
| WEB_LESS | Fixing cleaning belt sensor detection signal |
| WEB_SL | Fixing cleaning belt solenoid drive command |
| WEB_WARNING | Fixing cleaning belt warning sensor detection signal |

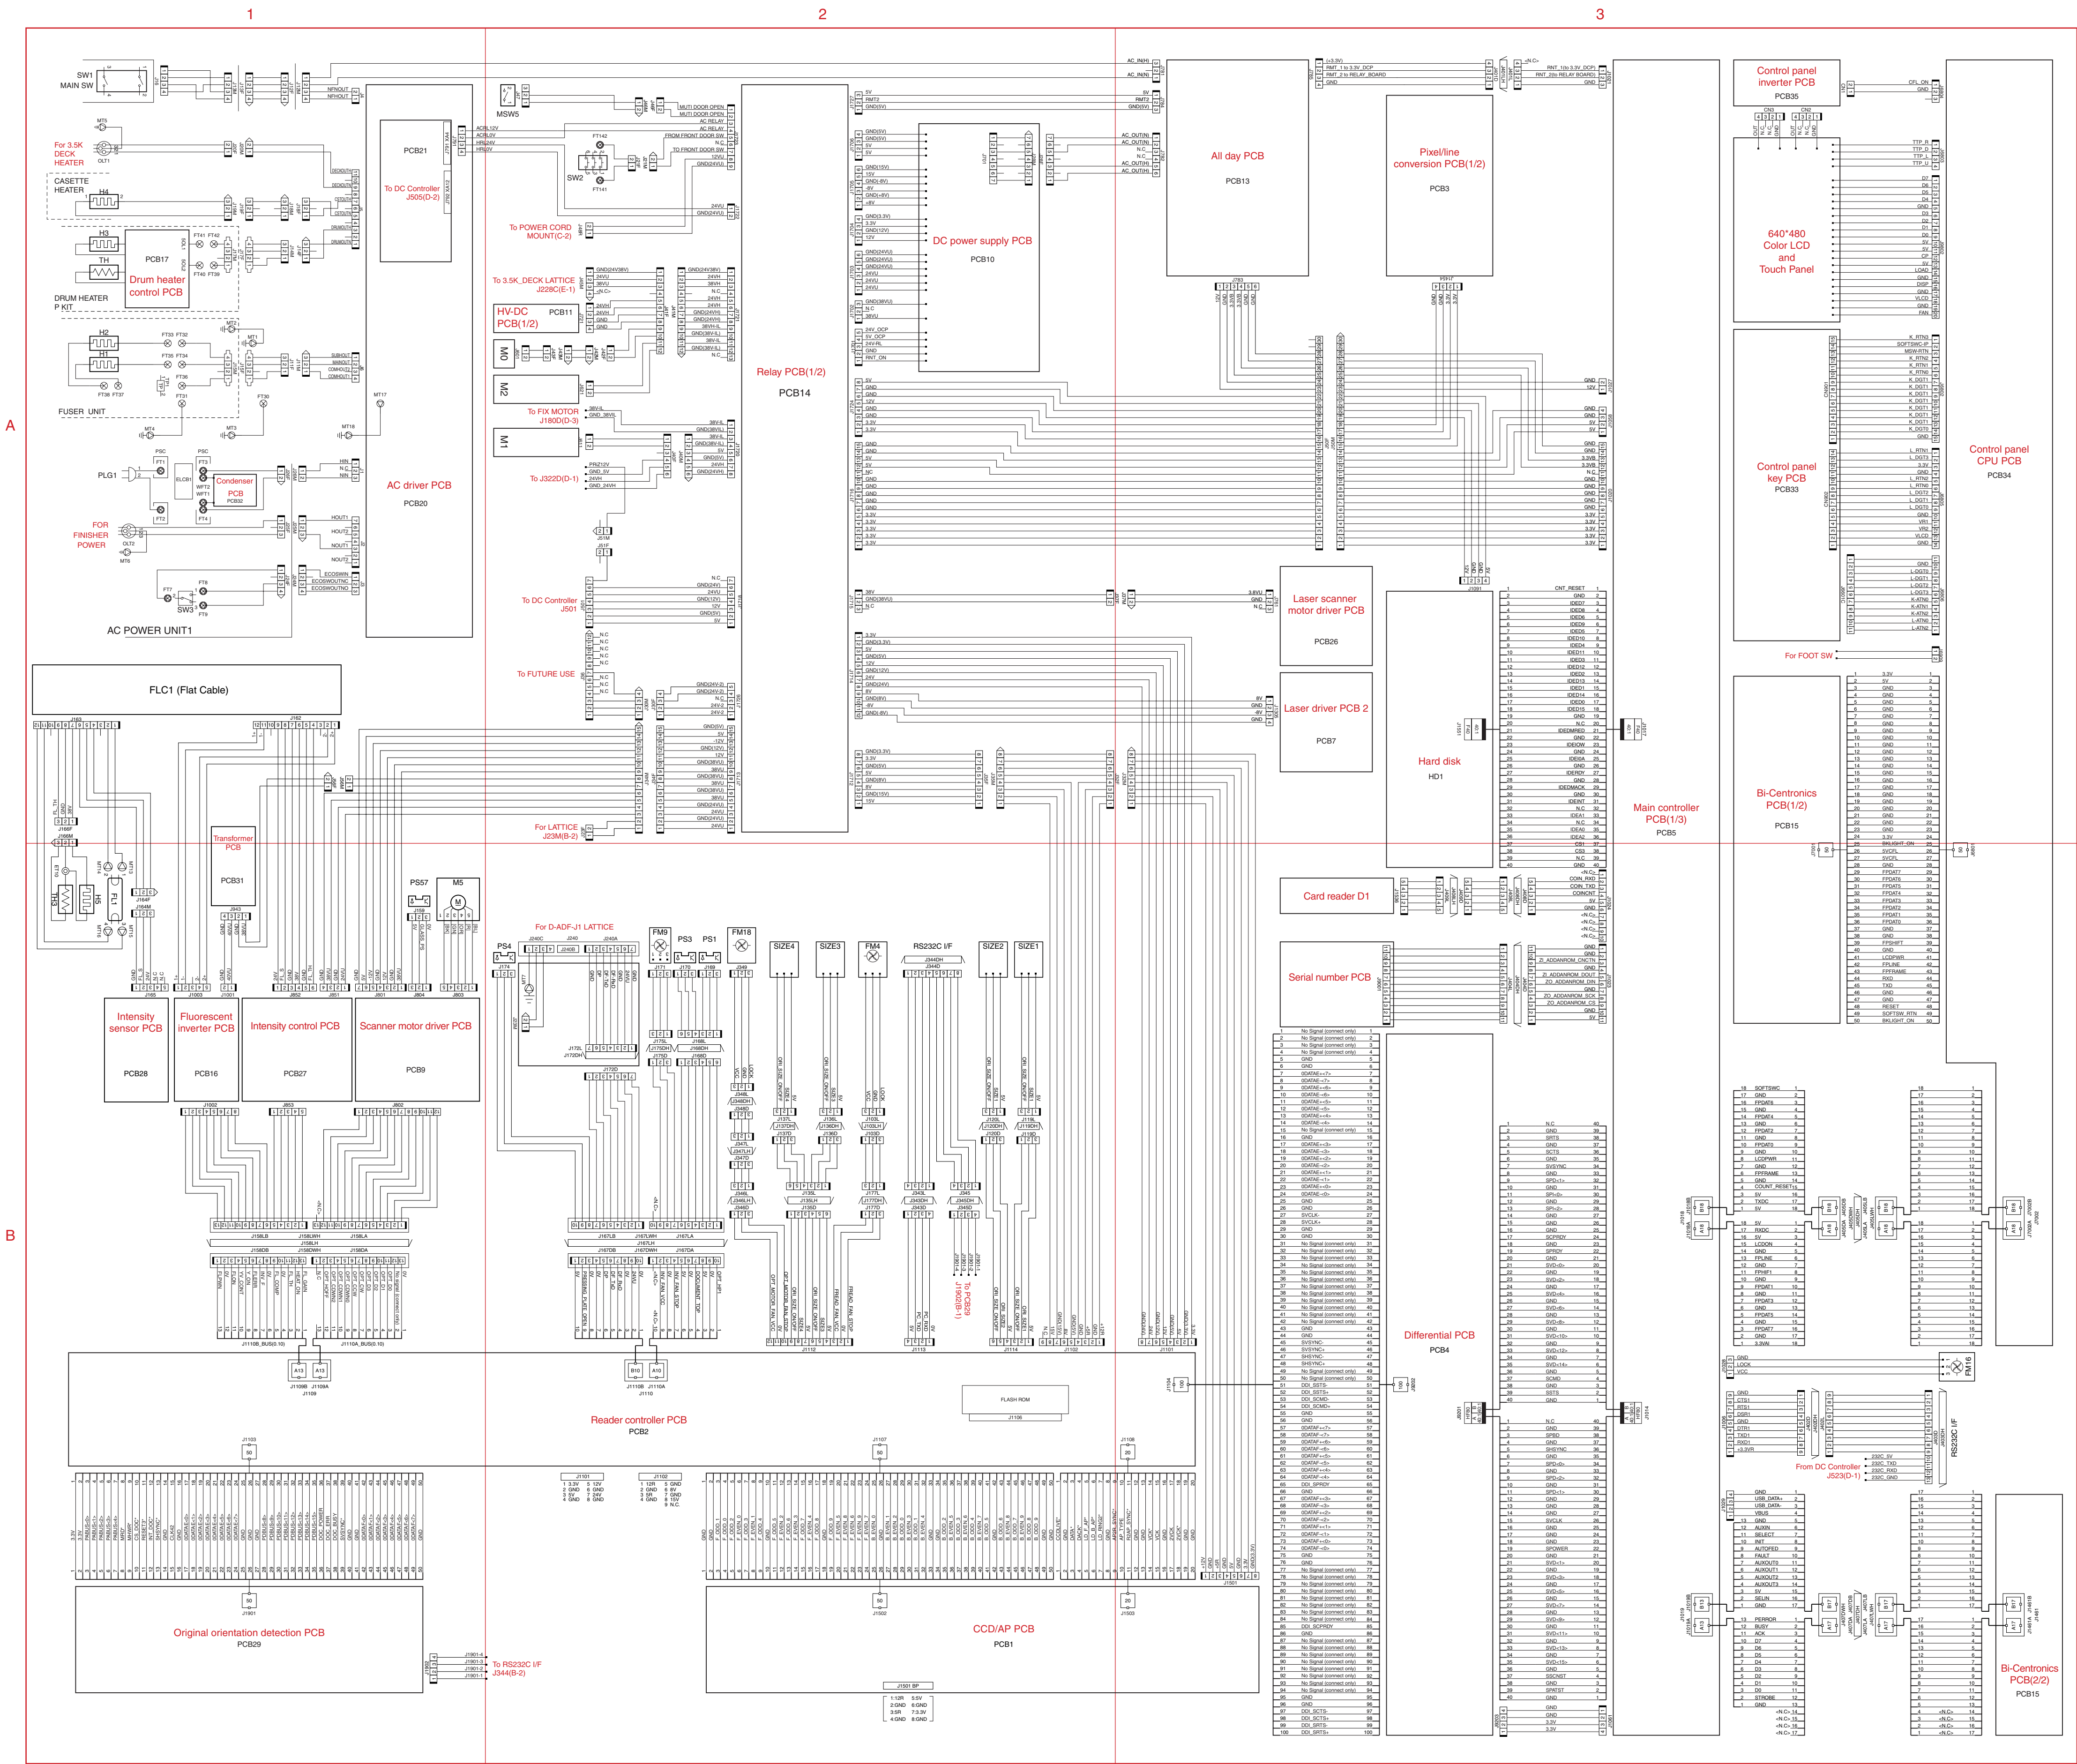

| MAP | NAME |
|-------|---|
| PS1 | B-2 Scanner home position sensor |
| PS3 | B-2 Image leading edge sensor |
| PS4 | B-2 ADF open/closed sensor |
| PS57 | B-1 Copyboard glass sensor |
| MSW5 | A-2 Manual feed tray cover open/closed detection sensor |
| SIZE1 | B-2 Original size sensor 1 |
| SIZE2 | B-2 Original size sensor 2 |
| SIZE3 | B-2 Original size sensor 3 |
| SIZE4 | B-2 Original size sensor 4 |
| TH3 | B-1 Thermal sensor |
| M0 | A-2 Drum motor |
| M1 | A-2 Main motor |
| M2 | A-2 Pickup motor |
| M5 | B-1 Scanner motor |
| FM4 | B-2 Stream reading fan |
| FM9 | B-2 Inverter cooling fan |
| FM16 | B-3 System fan |
| FM18 | B-2 Scanner motor cooling fan |
| FL1 | B-1 Scanning lamp |
| H1 | A-1 Fixing main heater |
| H2 | A-1 Fixing sub heater |
| H3 | A-1 Drum heater |
| H4 | A-1 Cassette heater |
| H5 | B-1 Scanning lamp heater |
| SW1 | A-1 Main switch |
| SW2 | A-2 Front cover switch |
| SW3 | A-1 Environment switch |
| TP1 | A-1 Fixing heater thermal switch |
| ELCB1 | A-1 Leakage breaker |
| HD1 | A-3 Hard disk |






| MAP | NAME |
|-------|--|
| PCB1 | B-2 CCD/AP PCB |
| PCB2 | B-2 Reader controller PCB |
| PCB3 | A-3 C-3 Pixel/line conversion PCB |
| PCB4 | B-3 Differential PCB |
| PCB5 | A-3 C-3 D-1 Main controller PCB |
| PCB6 | D-3 DC controller PCB |
| PCB7 | C-3 Laser driver PCB 1 |
| PCB8 | A-3 C-3 Laser driver PCB 2 |
| PCB9 | B-1 Scanner motor driver PCB |
| PCB10 | A-2 DC power supply PCB |
| PCB11 | A-2 E-2 HV-DC PCB |
| PCB12 | E-3 HV-AC PCB |
| PCB13 | A-3 All day PCB |
| PCB14 | A-2 C-2 Relay PCB |
| PCB15 | A-3 B-3 Bi-Centronics PCB |
| PCB16 | B-1 Fluorescent inverter PCB |
| PCB17 | A-1 Drum heater control PCB |
| PCB18 | D-3 BD PCB |
| PCB19 | C-1 Potential control PCB |
| PCB20 | A-1 AC driver PCB |
| PCB21 | A-1 AC driver sub PCB |
| PCB22 | D-2 Environment sensor PCB |
| PCB23 | D-1 No-stacking PCB |
| PCB24 | D-2 Cassette 3 paper level detection PCB |
| PCB25 | D-2 Cassette 4 paper level detection PCB |
| PCB26 | C-1 Laser scanner motor driver PCB |
| PCB27 | B-1 Intensity sensor PCB |
| PCB28 | B-1 Intensity sensor PCB |
| PCB29 | B-1 Original orientation detection PCB |
| PCB30 | B-3 Serial number PCB |
| PCB31 | B-1 Transformer PCB |
| PCB32 | A-1 Condenser PCB |
| PCB33 | A-3 Control panel key PCB |
| PCB34 | A-3 Control panel CPU PCB |
| PCB35 | A-3 Control panel inverter PCB |
| A-3 | Color LCD and Touch Panel |





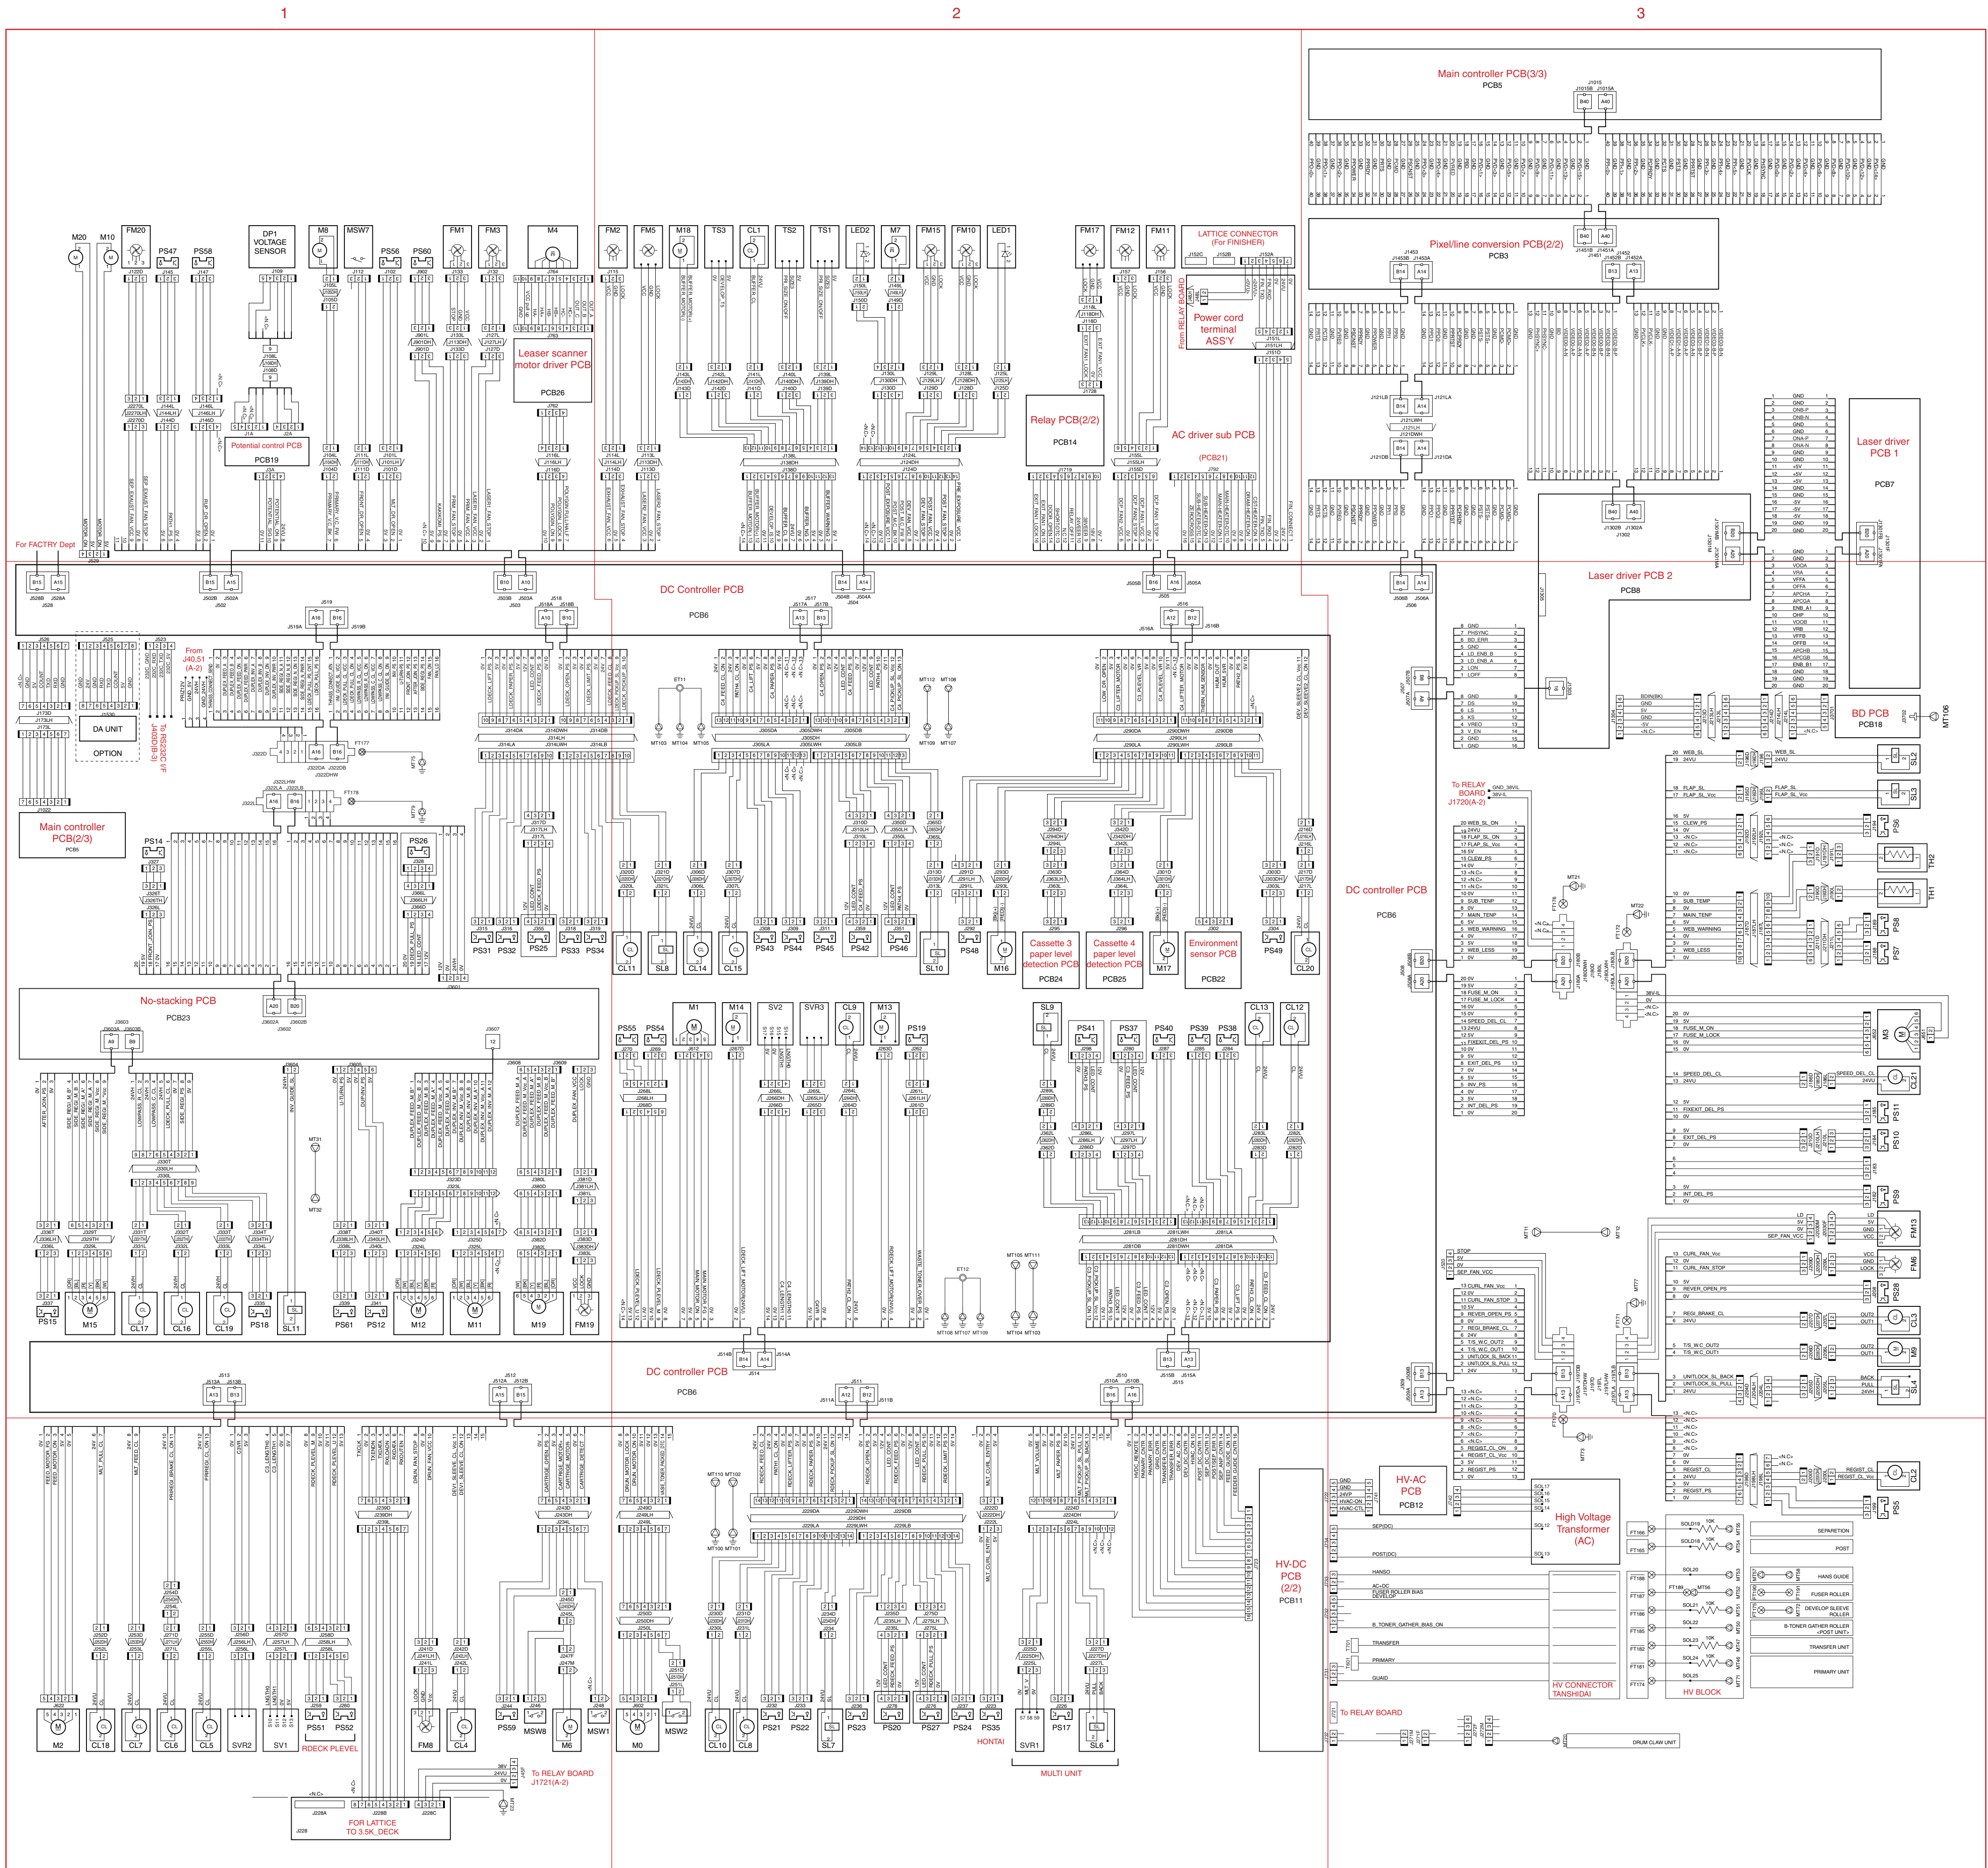



| MAP | NAME |
|------|---|
| PS5 | E-3 Registration paper sensor |
| PS6 | D-3 Fixing claw jam sensor |
| PS7 | D-3 Fixing cleaning belt sensor |
| PS8 | D-3 Fixing cleaning belt warning sensor |
| PS9 | D-3 Internal delivery paper sensor |
| PS10 | D-3 External delivery paper sensor |
| PS11 | D-3 Fixing feeding unit outlet paper sensor |
| PS12 | D-1 Duplexing reversal paper sensor |
| PS14 | D-1 Pre-confluence paper sensor |
| PS15 | D-1 Post-confluence paper sensor |
| PS17 | E-2 Manual feed tray paper detection sensor |
| PS18 | D-1 Horizontal registration paper sensor |
| PS19 | D-2 Waste toner case full sensor |
| PS20 | E-2 Front deck (right) pickup paper sensor |
| PS21 | E-2 Front deck (right) lifter position sensor |
| PS22 | E-2 Front deck (right) paper sensor |
| PS23 | E-2 Front deck (right) open/closed sensor |
| PS24 | E-2 Front deck (right) lifter upper limit sensor |
| PS25 | D-1 Front deck (left) pickup paper sensor |
| PS26 | D-1 Front deck (left) feeding paper sensor |
| PS27 | E-2 Front deck (right) feeding paper sensor |
| PS28 | D-3 Fixing/feeding unit releasing lever sensor |
| PS31 | D-1 Front deck (left) lifter position sensor |
| PS32 | D-1 Front deck (left) paper sensor |
| PS33 | D-1 Front deck (left) open/closed sensor |
| PS34 | D-1 Front deck (left) lifter upper limit sensor |
| PS35 | E-2 Manual feed tray de-curling inlet paper sensor |
| PS37 | D-2 Cassette 3 pickup paper sensor |
| PS38 | D-2 Cassette 3 lifter position sensor |
| PS39 | D-2 Cassette 3 paper sensor |
| PS40 | D-2 Cassette 3 open/closed sensor |
| PS41 | D-2 Vertical path 3 roller paper sensor |
| PS42 | D-2 Cassette 4 pickup paper sensor |
| PS43 | D-2 Cassette 4 lifter position sensor |
| PS44 | D-2 Cassette 4 paper sensor |
| PS45 | D-2 Cassette 4 open/closed sensor |
| PS46 | D-2 Vertical path 4 roller paper sensor |
| PS47 | C-1 Vertical path roller 1 paper sensor |
| PS48 | D-2 Lower right cover open/closed sensor |
| PS49 | D-2 Vertical path 2 roller paper sensor |
| PS51 | E-1 Front deck (right) medium level paper sensor |
| PS52 | E-1 Front deck (right) upper level paper sensor |
| PS54 | D-2 Front deck (left) medium level paper sensor |
| PS55 | D-2 Front deck (left) upper level paper sensor |
| PS56 | C-1 Manual feed tray cover open/closed sensor |
| PS58 | C-1 Middle right cover open/closed sensor |
| PS59 | E-1 Toner cartridge cover open/closed sensor |
| PS60 | C-1 Image write start sensor |
| PS61 | D-1 Duplex outlet sensor |
| MSW1 | E-1 Cartridge sensor |
| MSW2 | E-2 Waste toner clogging sensor |
| MSW7 | C-1 Front cover open/closed sensor |
| MSW8 | E-1 Cartridge motor drive |
| SV1 | E-1 Cassette 3 paper length sensor |
| SV2 | D-2 Cassette 4 paper length sensor |
| SVR1 | E-2 Manual feed tray paper width sensor |
| SVR2 | E-1 Cassette 3 paper width sensor |
| SVR3 | D-2 Cassette 4 paper width sensor |
| TS1 | C-2 Hopper inside toner level sensor |
| TS2 | C-2 Hopper inside toner lower limit sensor |
| TS3 | C-2 Developing assembly inside toner level sensor |
| TH1 | D-3 Fixing heater main thermistor |
| TH2 | D-3 Fixing heater sub thermistor (end part) |
| DP1 | C-1 Drum surface potential measurement |
| CL1 | C-2 Hopper clutch |
| CL2 | E-3 Registration roller clutch |
| CL3 | D-3 Registration roller brake clutch |
| CL4 | E-1 Developing cylinder clutch |
| CL5 | E-1 Pre-registration roller clutch |
| CL6 | E-1 Pre-registration roller brake clutch |
| CL7 | E-1 Manual feed tray pickup roller clutch |
| CL8 | E-2 Vertical path 1 roller clutch |
| CL9 | D-2 Vertical path 2 roller clutch |
| CL10 | E-2 Front deck (right) pickup roller clutch |
| CL11 | D-2 Front deck (left) pickup roller clutch |
| CL12 | D-2 Cassette 3 pickup roller clutch |
| CL13 | D-2 Vertical path 3 roller clutch |
| CL14 | D-2 Cassette 4 pickup roller clutch |
| CL15 | D-2 Vertical path 4 roller clutch |
| CL16 | D-1 Lower feeding middle roller clutch |
| CL17 | D-1 Lower feeding right roller clutch |
| CL18 | E-1 Manual feed tray feeding roller clutch |
| CL19 | D-1 Front deck (left) feeding roller clutch |
| CL20 | D-2 Developing cylinder deceleration clutch |
| CL21 | D-3 Switches delivery speed clutch |
| SL2 | D-3 Fixing cleaning belt solenoid |
| SL3 | D-3 Delivery flapper solenoid |
| SL4 | D-3 Locks the fixing/feeding unit solenoid |
| SL6 | E-2 Manual feed tray pickup latch solenoid |
| SL7 | E-2 Front deck (right) pickup mechanism solenoid |
| SL8 | D-2 Front deck (left) pickup mechanism solenoid |
| SL9 | D-2 Cassette 3 pickup mechanism solenoid |
| SL10 | D-2 Cassette 4 pickup mechanism solenoid |
| SL11 | D-1 Reversing flapper solenoid |
| M0 | E-3 Drum motor |
| M1 | D-2 Main motor |
| M2 | E-1 Pickup motor |
| M3 | D-3 Fixing motor |
| M4 | C-1 Laser scanner motor |
| M6 | E-1 Cartridge motor |
| M7 | C-2 Pre-transfer charging wire cleaner motor |
| M8 | C-1 Primary charging wire cleaner motor |
| M9 | D-3 Transfer separation charging wire cleaner motor |
| M10 | C-1 Vibration motor |
| M11 | D-1 Reversal motor |
| M12 | D-1 Duplexing feeding left motor |
| M13 | D-2 Front deck (right) lifter motor |
| M14 | D-2 Front deck (left) lifter motor |
| M15 | D-1 Horizontal registration motor |
| M16 | D-1 Cassette 3 lifter motor |
| M17 | D-2 Cassette 4 lifter motor |
| M18 | C-2 Hopper inside toner feeder motor |
| M19 | D-1 Duplexing feeding right motor |
| M20 | C-1 Vibration motor |
| FM1 | C-1 Primary charging fan |
| FM2 | C-2 Fixing heat discharge fan |
| FM3 | C-1 Scanner cooling fan |
| FM5 | C-2 Laser driver cooling fan |
| FM6 | D-3 Curt removing fan |
| FM8 | E-1 Drum fan |
| FM10 | C-2 Pre-transfer charging assembly fan |
| FM11 | C-2 Power supply cooling fan 1 |
| FM12 | C-2 Power supply cooling fan 2 |
| FM13 | D-3 Separation fan |
| FM15 | C-2 Development fan |
| FM17 | C-2 Delivery adhesion-proofing fan |
| FM19 | D-1 Duplex feed fan |
| FM20 | C-1 Separation heat discharge fan |
| LED1 | C-2 Pre-exposure lamp |
| LED2 | C-2 Pre-transfer exposure lamp |

4 Special Tools Table

You will need the following tools in addition to the standard tools set to service the copier.
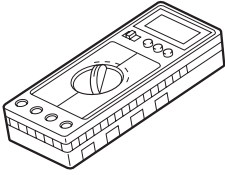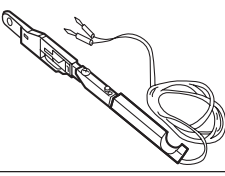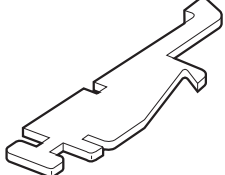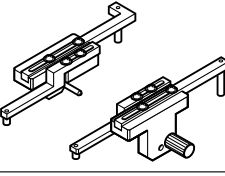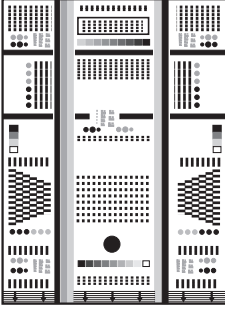
| No. | Tool name | Tool No. | Shape | Rank* | Remarks |
|-----|---------------------------------------|----------|---|-------|--|
| 1 | Digital multimeter | FY9-2002 |  | A | For adjusting the laser intensity together with the laser power checker (for electrical checks). |
| 2 | Laser power checker | FY9-4008 |  | A | For adjusting the light intensity together with the digital multimeter. |
| 3 | Door switch | TKN-0093 |  | A | |
| 4 | Mirror positioning tool (front, rear) | FY9-3040 |  | B | For adjusting the distance between No. 1 and No. 2 mirrors. |
| 5 | NA-3 test sheet | FY9-9196 |  | A | For adjusting images and making checks. |
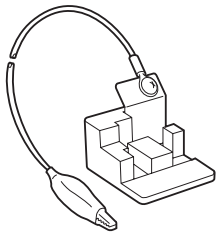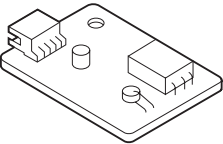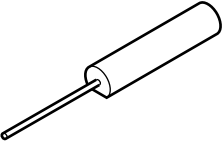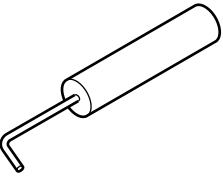
| No. | Tool name | Tool No. | Shape | Rank* | Remarks |
|-----|-----------------------------------|--------------|---|-------|--|
| 6 | Potential sensor tester electrode | FY9-3041 |  | B | For checking the zero level of the surface potential sensor. |
| 7 | Environment sensor meter sensor | FY9-3014 |  | B | For checking the environment sensor. |
| 8 | Tester extension pin | FY9-3038 |  | A | For making electrical checks (attachment to the meter). |
| 9 | Tester extension Pin (L-tipped) | FY9-3039 |  | A | For making electrical checks (attachment to the meter). |
| 10 | D-10 Test Sheet | FY9-9129-000 |  | B | For adjusting images. |
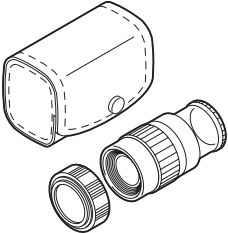
| No. | Tool name | Tool No. | Shape | Rank* | Remarks |
|-----|-----------|-------------|---|-------|----------------------|
| 11 | Loupe | CK-0056-000 |  | B | For checking images. |

*Rank:

- A: Each service person is expected to carry one.
- B: Each five or so service persons is expected to carry one.
- C: Each workshop is expected to carry one.

5 Solvents/Oils


| No. | Name | Uses | Composition | Remarks |
|-----|-----------------------|---|--|--|
| 1 | Alcohol | Cleaning; e.g., glass, plastic, rubber (external covers) | Hydrocarbon of the fluorine family, alcohol, surface activating agent, water | <ul style="list-style-type: none"> • Do not bring near fire. • Procure locally. • IPA (isopropyl alcohol) |
| 2 | Solvent | Cleaning; e.g., metal areas; removing oil or toner. | Hydrocarbon of fluorine family, hydrocarbon of chlorine family, alcohol | <ul style="list-style-type: none"> • Do not bring near fire. • Procure locally. |
| 3 | Heat-resisting grease | Lubricating; e.g., fixing drive parts. | Lithium soap of mineral family, molybdenum disulfide | • CK-0427 (500 g/can) |
| 4 | Lubricant | | Mineral oil (paraffin family) | • CK-0524 (100 cc) |
| 5 | Lubricant | Lubricating; e.g., friction parts. | Silicone oil | • CK-0551 (20 g) |
| 6 | Drum cleaning powder | Cleaning; e.g., photosensitive drum. | Selenium oxide | • CK-0429 |
| 7 | Lubricant | Lubricating; e.g., scanner rail. | Silicone oil | • FY9-6011 (50 cc) |
| 8 | Conducting grease | Drum heater contact | Fluorine poly ethyl, Poly tetra fluorine ethylene | • FY9-6008 (10 g) |

Service Mode

1 Construction of Service Mode


1.1 Outline

The service mode screens are arranged in a 3-level construction: Initial screen, Level 1/2 screen, Level 3 screen.

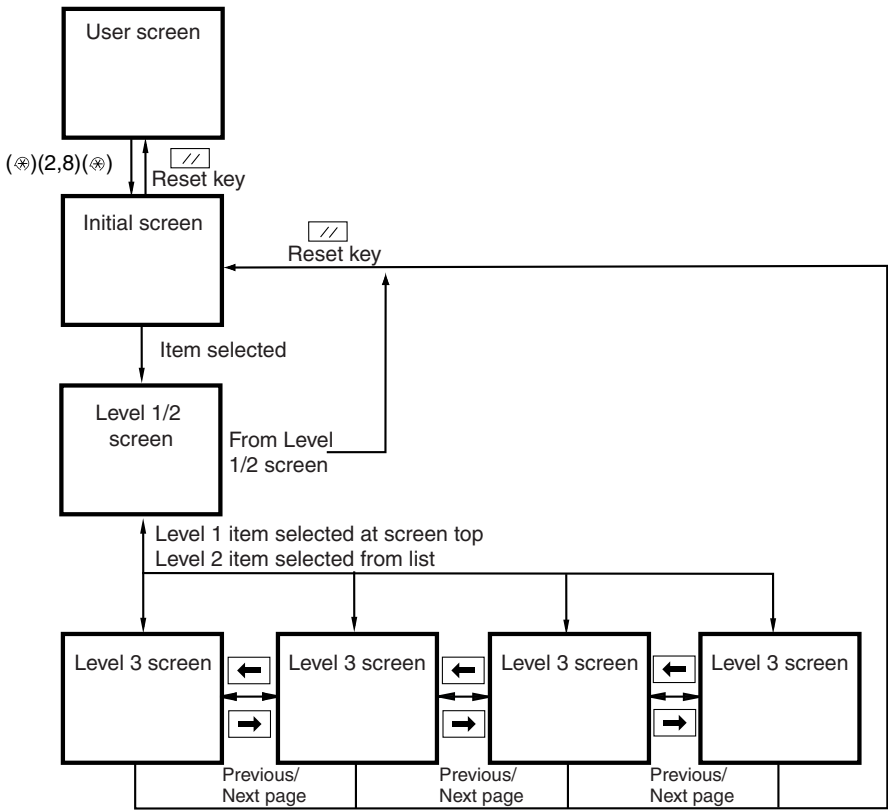

F00-101-01

The machine’s service mode consists of the following 7 types:

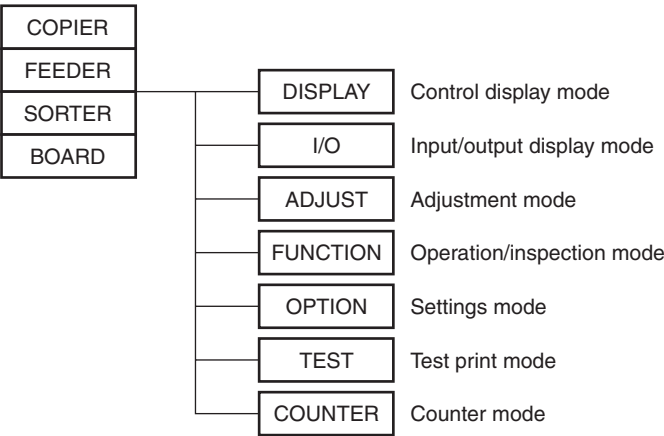


F00-101-02

1.2 Starting Service Mode and Making Selections

- 1) Press the User Mode key “⊗” in the control panel.
- 2) Press ‘2’ and ‘8’ keys at the same time on the keypad.
- 3) Press the User Mode key “⊗” in the control panel.

The following Initial screen will appear as a result:

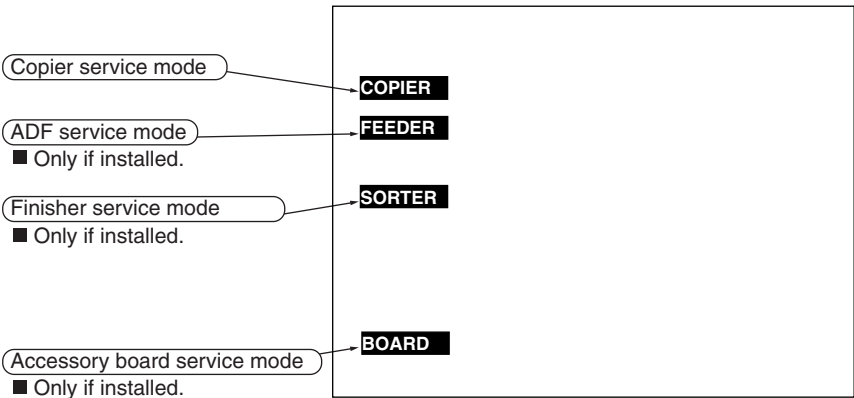

F00-102-01

1.3 Ending Service Mode

- Press the Reset key once to return to the Service Mode Initial screen (F00-102-01).
- Press the Reset key twice to leave service mode and return to the User screen (Standard screen).




If you used service mode (ADJUST, FUNCTION, OPTION), be sure to turn off and then on the main power switch after leaving service mode.

1.4 Backing Up Service Mode Settings

At time of shipment from the factory, each machine is adjusted, and the adjustment values are recorded in the Service Sheet (found in the service book case behind the front cover).

If you have replaced the reader controller PCB or the DC controller PCB, or if you have executed RAM clear for each, the ADJUST and OPTION adjustment values will be initialized to their default settings. If you have made adjustments in the field, be sure to print out a service sheet (COPIER>FUNCTION>MISC-P>LBL-PRINT>OK), and store it away. If the sheet does not show a specific item, use its blank space.


You can also use service mode (COPIER>FUNCTION>MISC-P>P-PRINT>OK) to print out all service mode settings (i.e., under COPIER>ADJUST/OPTION/COUNTER) at once.

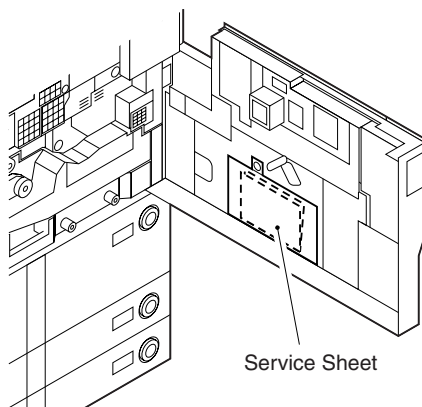

F00-104-01


1.5 Using Service Mode

1.5.1 Initial Screen

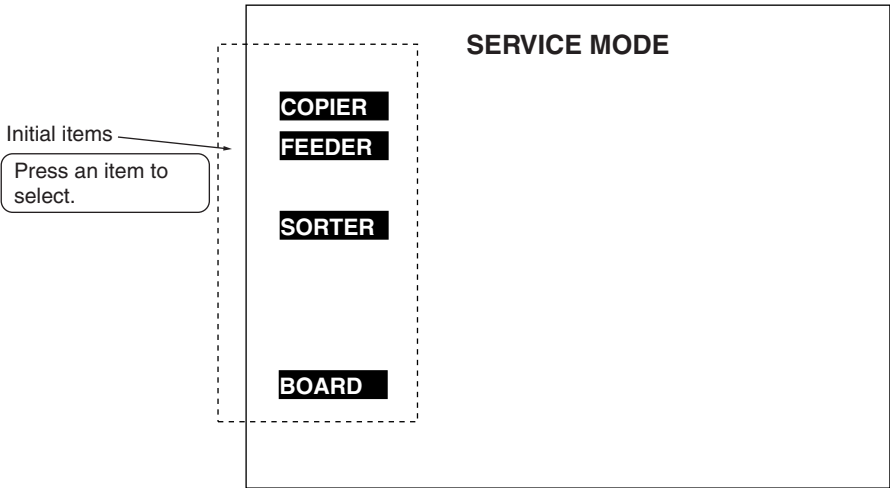


F00-105-01

1.5.2 Level 1/2 Screen

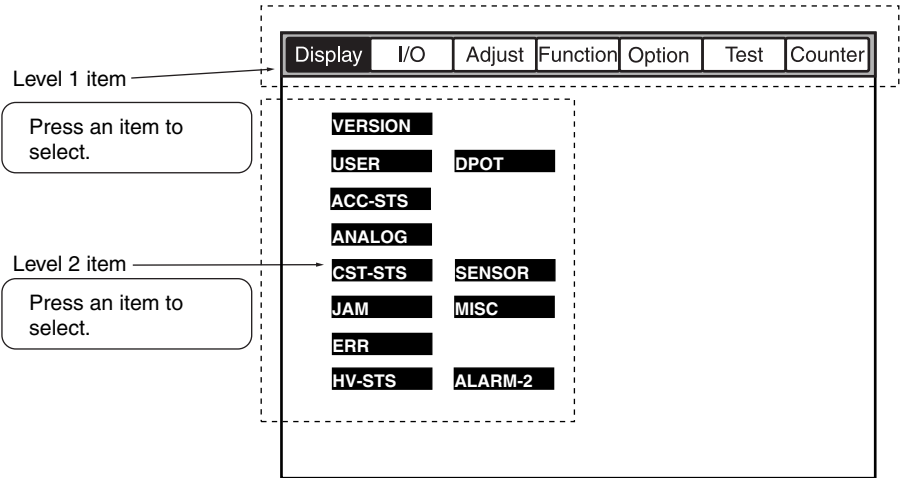


F00-105-02

1.5.3 Level 3 Screen

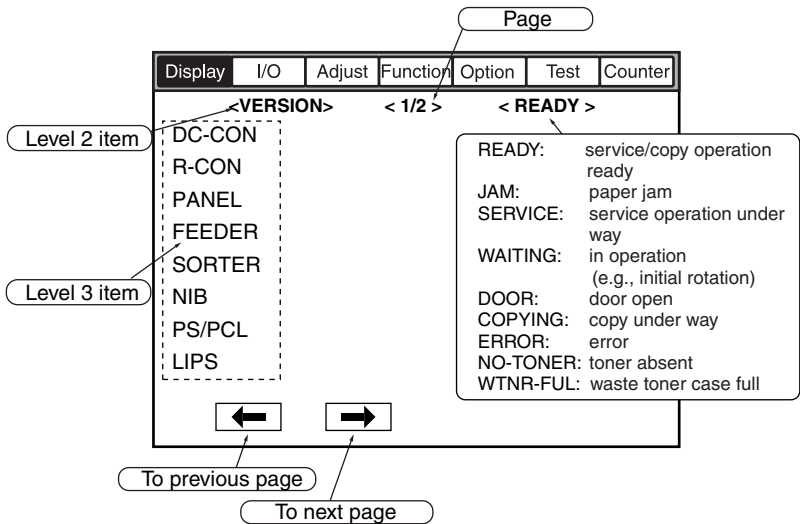

F00-105-03

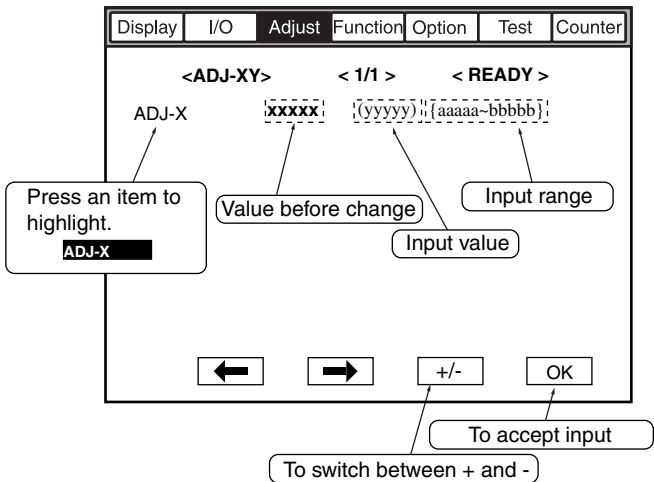

- Stop** key: press to stop ongoing operation.
- Clear** key: press to clear a value.
- Start** key: press to make a copy without leaving service mode.

F00-105-04

2 COPIER

2.1 DISPLAY

The following shows the Display screen (COPIER>DISPLAY):

| Display | I/O | Adjust | Function | Option | Test | Counter |
|----------------|----------------|--------|----------|--------|------|---------|
| VERSION | | | | | | |
| USER | DPOT | | | | | |
| ACC-ST5 | | | | | | |
| ANALOG | | | | | | |
| CST-ST5 | SENSOR | | | | | |
| JAM | MISC | | | | | |
| ERR | | | | | | |
| HV-ST5 | ALARM-2 | | | | | |

F00-201-01

<VERSION>

Indicates the ROM version of the machine and of the PCB of a specific accessory.

Indication <xx, yy> xx: version number, yy: R&D control number

| | |
|----------|---|
| DC-CON | Indicates the ROM version of the DC controller PCB. |
| R-CON | Indicates the ROM version of the reader controller PCB. |
| PANEL | Indicates the ROM version of the control panel CPU PCB. |
| FEEDER | Indicates the ROM version of the ADF controller PCB. |
| SORTER | Indicates the ROM version of the finisher controller PCB. |
| NIB | Indicates the version of the network interface board. |
| PS/PCL | Indicates the version of the printer board (PS/PCL). |
| LIPS | Indicates the version of the printer board (LIPS). |
| SDL-STCH | Indicates the ROM version of the saddle stitcher controller PCB. |
| MN-CONT | Indicates the version of the software of the main controller PCB. |
| RIP1 | not used |
| BOOT-ROM | Indicates the version of the boot ROM of the main controller. |

COPIER>DISPLAY>VERSION

| | |
|----------|---|
| DIAG-DVC | Indicates the version of the self-diagnostic device. |
| RUI | Indicates the version of the remote UI. |
| LANG-EN | Indicates the version of the English language module. |
| LANG-FR | Indicates the version of the French language module. |
| LANG-DE | Indicates the version of the German language module. |
| LANG-IT | Indicates the version of the Italian language module. |
| LANG-JP | Indicates the version of the Japanese language module. |
| LANG-CS | Indicates the version of the Czech language module. |
| LANG-DA | Indicates the version of the Danish language module. |
| LANG-EL | Indicates the version of the Greek language module. |
| LANG-ES | Indicates the version of the Spanish language module. |
| LANG-ET | Indicates the version of the Estonian language module. |
| LANG-FI | Indicates the version of the Finnish language module. |
| LANG-HU | Indicates the version of the Hungarian language module. |
| LANG-KO | Indicates the version of the Korean language module. |

COPIER>DISPLAY>VERSION

| | |
|---------|--|
| LANG-NL | Indicates the version of the Dutch language module. |
| LANG-NO | Indicates the version of the Norwegian language module. |
| LANG-PL | Indicates the version of the Polish language module. |
| LANG-PT | Indicates the version of the Portuguese language module. |
| LANG-RU | Indicates the version of the Russian language module. |
| LANG-SL | Indicates the version of the Slovenian language module. |
| LANG-SV | Indicates the version of the Swedish language module. |
| LANG-TW | Indicates the version of the Chinese (classic) language module. |
| LANG-ZH | Indicates the version of the Chinese (simplified) language module. |

COPIER>DISPLAY>USER
<USER>

Indicates items related to the User screen and the user.

| | |
|-----------------|--|
| LANGUAGE | Indicates the language used/paper size configuration. Indication <LANGUAGE xxyy.zz.aa> xx (upper 2 digits): country code yy (lower 2 digits): language code zz: destination code (00: Canon, 01: OEM) aa: paper size configuration code (00: AB, 01: inch, 02: A, 03: all sizes) |
| COUNTER | Indicates the type of count control for the soft counter (00: 100 V, 01: 208/ 230 V) |
| MODEL | Indicates the type of model. 1: iR8500 2: iR105 |

<ACC-STS>

Indicates the connection of accessories.

| | |
|----------|---|
| FEEDER | Indicates the connection of ADF. (0: absent, 1: present) |
| SORTER | Indicates the connection of a finisher and a puncher unit. Indication <u>XY</u> <u>X</u> = 0: finisher absent, 1: finisher, 2: saddle finisher, 3: saddle finisher + inserter, 4: saddle finisher + paper deck folding unit, 5: saddle finisher + inserter + paper folding unit <u>Y</u> = 0: puncher unit absent, 1: 2-hole, 2: 2/3-hole, 3: 4-hole (FRN), 4: 4-hole (SWDN) |
| DECK | Indicates the connection of a paper deck (accessory). (0: absent, 1: present) |
| CARD | Indicates the presence/absence of a card reader. (if no card reader is connected, '1') (0: absent, 1: present) |
| DATA-CON | Indicates the connection of a self-diagnostic device. (0: absent, 1: copy data controller, 2: NE controller) |
| RAM | Indicates the capacity of the memory mounted to the machine controller. (192 MB) |
| NIB | Indicates the connection of a network interface board. (0: absent, 1: Ether board, 2: TokenRing, 3: both) |
| LIPS-RAM | Indicates the capacity of the memory mounted to the LIPS board. (xx MB) |

COPIER>DISPLAY>ANALOG

| | |
|---------|---|
| LIPS | Indicates the connection of the LIPS board. (0: absent, 1: present) |
| PS/PCL | Indicates the connection of the PS/PCL board. (0: absent, 1: PS/PCL, 2: PS Kanji) |
| RIP1 | not used |
| NETWARE | Indicates the presence (installation) of the NetWare firmware. (0: absent, 1: installed) |

<ANALOG>

Indicates the reading from the analog sensor.

| | |
|---------|--|
| TEMP | Indicates the machine internal temperature (environment sensor; °C). |
| HUM | Indicates the machine internal humidity (environment sensor; %). |
| ABS-HUM | Indicates the machine internal absolute humidity (absolute water content; g). |
| OPTICS | Indicates the temperature of the scanner (°C). |
| FIX-C | Indicates the temperature of the middle of the fixing upper roller (°C). |
| FIX-E | Indicates the temperature of the edge of the fixing upper roller (°C). |



<CST-STS>

Indicates the paper size of the cassette and the manual feed tray.

| | |
|----------|--|
| WIDTH-C3 | Indicates the width of paper in the cassette 3 in terms of paper size. |
| WIDTH-C4 | Indicates the width of paper in the cassette 4 in terms of paper size. |
| WIDTH-MF | Indicates the width of paper in the manual feed tray. |

COPIER>DISPLAY>JAM
<JAM>

Indicates the jam data.

| Display | I/O | Adjust | Function | Option | Test | Counter |
|---|------|--------|---|--------|-----------|----------------|
| < JAM > | | | < 1/7 > | | < READY > | |
| AA | BBBB | CCCC | DDDD | E | FFff | G HHHHHH IIIII |
| AA | BBBB | CCCC | DDDD | E | FFff | G HHHHHH IIIII |
| AA | BBBB | CCCC | DDDD | E | FFff | G HHHHHH IIIII |
| AA | BBBB | CCCC | DDDD | E | FFff | G HHHHHH IIIII |
| AA | BBBB | CCCC | DDDD | E | FFff | G HHHHHH IIIII |
| AA | BBBB | CCCC | DDDD | E | FFff | G HHHHHH IIIII |
| AA | BBBB | CCCC | DDDD | E | FFff | G HHHHHH IIIII |
| AA | BBBB | CCCC | DDDD | E | FFff | G HHHHHH IIIII |
|  | | |  | | | |

F00-201-02

| Item | Description | Remarks |
|--------|---------------------------------------|--|
| AA | Order of jams (the higher, the older) | 1 to 50 (50 max.) |
| BBBB | Date of occurrence | Month, day (2 digits each) |
| CCCC | Time of occurrence | 24-hr notation |
| DDDD | Recovery time | 24-hr notation (if no recovery, FFFF) |
| E | Location of occurrence | 0: copier 1: feeder 2: finisher |
| FFff | Jam code | FF: type of copier jam (T00-201-01) ff: copier sensor (T00-201-02) FF: type of finisher jam (T00-201-03) ff: finisher jam sensor (T00-204-04) FFff: ADF jam code (T00-201-05) (T00-201-06) |
| G | Source of paper | |
| HHHHHH | Source soft counter | |
| IIIII | Paper size | |

COPIER>DISPLAY>JAM

FF: Type of Copier Jam

| Code | Type |
|------|-----------------------|
| 00xx | ADF jam |
| 01xx | delay jam |
| 02xx | stationary jam |
| 0Axx | power-on residual jam |
| 0Bxx | front cover open jam |

T00-201-01

FF: Type of Finisher Jam

| Code | Jam |
|------|-----------------------|
| 10xx | delay jam |
| 11xx | stationary jam |
| 13xx | power-on residual jam |
| 14xx | front cover open jam |
| 15xx | staple jam |
| 16xx | punch jam |
| 17xx | other |

ff: Copier Jam Sensor

| Code | Sensor |
|------|---|
| xx00 | no sensor in particular |
| xx01 | right deck pickup sensor (PS20) |
| xx02 | left deck pickup sensor (PS25) |
| xx03 | cassette 3 pickup sensor (PS37) |
| xx04 | cassette 4 pickup sensor (PS42) |
| xx05 | vertical path 1 paper sensor (PS47) |
| xx06 | vertical path 2 paper sensor (PS49) |
| xx07 | vertical path 3 paper sensor (PS41) |
| xx08 | vertical path 4 paper sensor (PS46) |
| xx09 | registration paper sensor (PS5) |
| xx0A | fixing claw jam sensor (PS6) |
| xx0B | internal delivery sensor (PS9) |
| xx0C | external delivery sensor (PS10) |
| xx0D | fixing/feeder unit outlet sensor (PS11) |
| xx0F | duplexing reversal sensor (PS12) |
| xx10 | duplexing outlet sensor (PS61) |
| xx11 | pre-confluence sensor (PS14) |
| xx12 | post-confluence sensor (PS15) |
| xx13 | left deck feed sensor (PS26) |
| xx14 | right deck feed sensor (PS27) |
| xx15 | side paper deck feed sensor (PS106) |
| xx16 | manual feed sensor (PS35) |
| xx17 | side paper deck pickup sensor (PS101) |

T00-201-02

T00-201-03

ff: Finisher Jam Sensor

| Code | Sensor |
|------|--|
| xx00 | no sensor in particular |
| xx11 | fold path paper residual sensor 1 delay jam (PI73) |
| xx12 | fold path paper residual sensor 2 delay jam (PI77) |
| xx13 | fold path paper residual sensor 3 delay jam (PI75) |
| xx14 | fold path paper residual sensor 4 delay jam (PI74) |
| xx15 | saddle inlet sensor delay jam (PI59) |
| xx16 | inlet path paper sensor delay jam (S1) |
| xx17 | buffer path rear sensor delay jam (PI3) |
| xx18 | non-sort delivery sensor delay jam (PI6) |
| xx19 | sort delivery sensor delay jam (PI4) |
| xx1A | inserter separation sensor 1/2 delay jam (PI62/PI63) |
| xx1B | inserter feed sensor 3 delay jam (PI61) |
| xx21 | feed path paper sensor 1 stationary jam (PI76) |
| xx22 | feed path paper sensor 2 stationary jam (S7) |
| xx23 | feed path paper sensor 3 stationary jam (S8) |
| xx24 | feed path paper sensor 4 stationary jam (PI74) |
| xx25 | saddle inlet sensor stationary jam (PI59) |
| xx26 | inlet path paper sensor stationary jam (S1) |

T00-201-04 (1/2)

COPIER>DISPLAY>JAM

| Code | Sensor |
|------|---|
| xx27 | buffer path rear paper sensor stationary jam (PI3) |
| xx28 | non-sort delivery sensor stationary jam (PI6) |
| xx29 | sort delivery sensor stationary jam (PI4) |
| xx2A | inserter separation sensor 1/2 stationary jam (PI62/PI63) |
| xx2B | inserter feed path paper sensor 3 stationary jam (PI61) |
| xx2C | knurled belt HP sensor/stack delivery sensor stationary jam (PS31/32) |
| xx31 | inserter paper set sensor pickup paper absent jam (S9) |
| xx32 | shutter jam |
| xx33 | inserter separation sensor 1/2 skew jam (PI62/PI63) |
| xx86 | stitcher home position sensor front/rear staple jam (MS34/MS32) |
| xx87 | No. 1 paper sensor /delivery sensor stationary jam (PI60/PI52) |
| xx88 | outlet cover sensor/inlet cover sensor open jam (paper present) (PI46/PI51) |
| xx89 | outlet cover sensor/inlet cover sensor open jam (paper absent) (PI46/PI51) |
| xx91 | No. 1 paper sensor delay jam (PI60) |
| xx92 | delivery sensor/vertical path paper sensor delay jam (PI52/PI57) |
| xxA1 | No. 1/2/3 paper sensor stationary jam (PI60/61/62) |
| xxA2 | delivery sensor/vertical path sensor stationary jam (PI52/PI57) |

T00-201-04 (2/2)

FFff: ADF Jam Code

| Code | Jam |
|------|--|
| 0011 | pickup trailing edge skew |
| 0012 | pickup fault 1 |
| 0013 | pickup fault 2 |
| 0014 | reversal delay |
| 0015 | reversal pickup trailing edge skew |
| 0016 | reversal pickup fault 1 |
| 0019 | residual original |
| 001A | 1st sheet pickup trailing edge skew rear |
| 001B | 1st sheet reversal pickup trailing edge rear |
| 001C | 1st sheet pickup fault 1 |
| 001D | 1st sheet pickup fault 2 |
| 001E | 1st sheet reversal delay |
| 001F | 1st sheet reversal pickup fault 1 |
| 0022 | separation delay |
| 0023 | pickup delay |
| 0024 | pickup leading edge skew |
| 0025 | pre-reversal delay 1 |
| 0026 | pre-reversal delay 2 |
| 0027 | pre-reversal delay 3 |
| 002A | 1st sheet pickup leading edge skew |
| 002B | 1st sheet pre-reversal delay 1 |
| 002C | 1st sheet pre-reversal delay 2 |
| 002D | 1st sheet pre-reversal delay 3 |
| 0031 | pickup stationary 1 |
| 0032 | pickup stationary 2 |
| 0033 | pre-reversal stationary 1 |
| 0034 | pre-reversal stationary 2 |
| 0035 | pre-reversal stationary 3 |
| 0036 | pre-reversal stationary 4 |
| 003A | 1st sheet pickup stationary 1 |
| 003B | 1st sheet pickup stationary 2 |
| 003C | 1st sheet pre-reversal stationary 1 |
| 003D | 1st sheet pre-reversal stationary 2 |
| 003E | 1st sheet pre-reversal stationary 3 |
| 003F | 1st sheet pre-reversal stationary 4 |
| 0041 | reversal stationary |
| 004A | 1st sheet reversal stationary |

T00-201-05 (1/3)

COPIER>DISPLAY>JAM

| Code | Jam |
|------|--|
| 0052 | reversal pickup delay |
| 0054 | reversal pickup stationary |
| 0055 | pre-reversal pickup delay |
| 0056 | pre-reversal pickup stationary 1 |
| 0057 | pre-reversal pickup stationary 2 |
| 005A | 1st sheet reversal pickup delay |
| 005B | 1st sheet reversal pickup stationary |
| 005C | 1st sheet pre-reversal pickup delay |
| 005D | 1st sheet pre-reversal pickup stationary 1 |
| 005E | 1st sheet pre-reversal pickup stationary 2 |
| 0081 | delivery delay |
| 0082 | delivery stationary 1 |
| 0083 | delivery stationary 2 |
| 008A | 1st sheet delivery delay |
| 008B | 1st sheet delivery stationary 1 |
| 008C | 1st sheet delivery stationary 2 |
| 0092 | manual feed registration delay |
| 00A1 | manual feed registration stationary |
| 00A2 | manual feed reversal stationary |
| 00A3 | manual feed delivery stationary |
| 00A4 | manual feed delivery delay |
| 00A5 | manual feed residual original |
| 00A6 | manual feed original size error |
| 00E1 | ADF open |
| 00E2 | cover open |
| 00E3 | cycle NG |
| 00E4 | initial stay |
| 00E5 | timing error |
| 00E6 | original size error |
| 00E7 | user ADF open |
| 00E8 | user cover open |
| 00E9 | power-down |
| 00EA | time leading edge error |
| 00EB | 1st sheet image leading position error |
| 00F1 | belt speed setting error |
| 00F2 | belt speed switch-over error |
| 00F3 | belt status error |
| 00F4 | image leading edge output timing error |

T00-201-05 (2/3)

| Code | Jam |
|------|-----------------------------------|
| 00F8 | reversal speed setting error |
| 00F9 | reversal speed switch-cover error |
| 00FA | reversal status error |
| 00FD | last sheet error |
| 00FE | error |
| 00FF | program |

T00-201-05 (3/3)

G: Source of Paper

| Code | Description |
|------|------------------|
| 1 | right front deck |
| 2 | left front deck |
| 3 | cassette 3 |
| 4 | cassette 4 |
| 5 | not used |
| 6 | not used |
| 7 | side paper deck |
| 8 | manual feed tray |
| 9 | duplexing unit |

T00-201-06

COPIER>DISPLAY>ERR
<ERR>

Indicates the error data.

| Display | I/O | Adjust | Function | Option | Test | Counter |
|--|-----|--------|----------|--------|------|---------|
| <div>< ERR > < 1/7 > < READY ></div> <div>AA BBBB CCCC DDDD EEEE FFff G HH</div> <div>AA BBBB CCCC DDDD EEEE FFff G HH</div> <div>AA BBBB CCCC DDDD EEEE FFff G HH</div> <div>AA BBBB CCCC DDDD EEEE FFff G HH</div> <div>AA BBBB CCCC DDDD EEEE FFff G HH</div> <div>AA BBBB CCCC DDDD EEEE FFff G HH</div> <div>AA BBBB CCCC DDDD EEEE FFff G HH</div> <div>AA BBBB CCCC DDDD EEEE FFff G HH</div> <div><div>←</div><div>→</div></div> | | | | | | |

F00-201-03

| Item | Description | Remarks |
|------|---|---|
| AA | Order of errors (higher the number, older the error) | 1 to 50 (50 max.) |
| BBBB | Date of error | Month, day (2 digits each) |
| CCCC | Time of error | 24-hr notation |
| DDDD | Time of recovery | 24-hr notation (if no recovery, FFFF) |
| EEEE | Error code | See the chapter on error code. |
| FFff | Detail code | If none, '00000'. |
| G | Location | 0: copier/main controller 1: feeder 2: finisher 3: not used 4: reader 5: printer 6: PDL |
| HH | not used | |

<HV-STS>

Indicates the readings of the voltage and current systems.

| | |
|----------|--|
| PRIMARY | Indicates the level of current of primary charging. (μA) |
| PRI-GRID | Indicates the grid voltage of primary charging. (V) |
| PRE-TR | Indicates the level of current of pre-transfer charging. (μA) |
| TR | Indicates the level of current of transfer charging. (μA) |
| SP | Indicates the level of current of separation charging. (μA) |
| BIAS | Indicates the level of developing bias. (V) |

COPIER>DISPLAY>DPOT
<DPOT>

Indicates the photosensitive drum surface potential control data.

| | |
|--------|--|
| DPOT-K | Indicates the surface potential of the photosensitive drum. (V) |
| VL1T | Indicates the target value for the light-area potential (VL1) for the copier. (V) |
| VL1M | Indicates the reading of the light-area potential (VL1) for the copier. (V) (reference optimum: VL1T \pm 6 V) |
| VDT | Indicates the target value of the dark-area potential (VD) for the copier. (V) |
| VDM | Indicates the reading of the dark-area potential (VD) for the copier. (V) (reference optimum: VDT \pm 6 V) |
| VDM-P | Indicates the reading of the dark-area potential (VD) for printer (PDL) images. (V) (reference optimum: VDT-P \pm 6 V) |
| VDT-P | Indicates the target value for the dark-area potential (VD) for printer (PDL) images. (V) |

<SENSOR>

Indicates the state of the sensor.

| | |
|---------|---|
| DOC-SZ | Indicates the original size detected by the original size sensor. |
| DOC-SZ1 | Indicates the sensor output detected by the original size sensor 1. |
| DOC-SZ2 | Indicates the sensor output detected by the original size sensor 2. |
| DOC-SZ3 | Indicates the sensor output detected by the original size sensor 3. |
| DOC-SZ4 | Indicates the sensor output detected by the original size sensor 4. |

<MISC>

Indicates other states.

| | |
|----------|---|
| FL-LIFE | Indicates the duty ratio of when the scanning lamp is ON. (%) |
| STM-P-L | Indicates the lamp stop position for stream reading mode (large size). (0 to 6) |
| STM-P-S | Indicates the lamp stop position for stream reading mode (small size) (0 to 6) |
| SCAN-LMP | Indicates the reading of the counter (the number of times the scanning lamp has gone ON). |

COPIER>DISPLAY>ALARM-2
<ALARM-2>

Indicates the alarm data.

| Display | I/O | Adjust | Function | Option | Test | Counter |
|--|-----|--------|----------|--------|------|---------|
| <div>< ALARM-2 > < 1/7 > < READY ></div> <div>AA BBBB CCCC DDDD EEffff GGGG HHHHHHHH</div> <div>AA BBBB CCCC DDDD EEffff GGGG HHHHHHHH</div> <div>AA BBBB CCCC DDDD EEffff GGGG HHHHHHHH</div> <div>AA BBBB CCCC DDDD EEffff GGGG HHHHHHHH</div> <div>AA BBBB CCCC DDDD EEffff GGGG HHHHHHHH</div> <div>AA BBBB CCCC DDDD EEffff GGGG HHHHHHHH</div> <div>AA BBBB CCCC DDDD EEffff GGGG HHHHHHHH</div> <div>AA BBBB CCCC DDDD EEffff GGGG HHHHHHHH</div> <div><div>←</div><div>→</div></div> | | | | | | |

F00-201-04

| Item | Description | Remarks |
|----------|---|--|
| AA | Order of alarms (the higher, the older) | 1 to 50 (50 max.) |
| BBBB | Date of alarm | Month, day (2 digits each) |
| CCCC | Time of alarm | 24-hr notation |
| DDDD | Time of alarm recovery | 24-hr notation (if no recovery, FFFF) |
| EE | Location code | T00-201-07 |
| ffff | Alarm code | T00-201-07 |
| GGGG | Detail code | |
| HHHHHHHH | Total counter reading at time of alarm | |

COPIER>DISPLAY>ALARM-2

List of Alarm Codes

| EE | Location code | ffff | Code |
|----|---------------------------|------|--|
| 00 | error code | 0804 | system fan alarm (detail code: 00004) |
| 02 | reader assembly (scanner) | 0003 | dust detection small 1 |
| | | 0004 | dust detection small 2 |
| | | 0005 | dust detection small 3 |
| | | 0006 | dust detection small 4 |
| | | 0007 | dust detection small 5 |
| | | 0008 | dust detection small 6 |
| | | 0009 | dust detection small 7 |
| | | 0010 | dust detection large 1 |
| | | 0011 | dust detection large 2 |
| | | 0012 | dust detection large 3 |
| | | 0013 | dust detection large 4 |
| | | 0014 | dust detection large 5 |
| | | 0015 | dust detection large 6 |
| | | 0016 | dust detection large 7 |
| | | 0017 | small position stream reading prohibit |
| | | 0018 | large position stream reading prohibit |
| | | 0019 | scanner lamp intensity low |
| 04 | pickup/feeding system | 0001 | right deck lifter alarm |
| | | 0002 | left deck lifer alarm |
| | | 0003 | cassette 3 lifter alarm |
| | | 0004 | cassette 4 lifter alarm |
| | | 0007 | manual feed tray lifter alarm |
| | | 0008 | side paper deck lifter alarm |
| | | 0011 | right deck retry alarm |
| | | 0012 | left deck retry alarm |
| | | 0013 | cassette 3 retry alarm |
| | | 0014 | cassette 4 retry alarm |
| | | 0017 | manual feed retry alarm |
| | | 0018 | side paper deck retry alarm |
| 30 | high-voltage system | 0001 | primary charging assembly leakage |
| | | 0002 | transfer charging assembly leakage |
| | | 0003 | separation charging assembly leakage |
| 32 | potential control system | 0001 | potential control VD alarm |
| | | 0002 | potential control VL alarm |

T00-201-07 (1/2)


COPIER>DISPLAY>ALARM-2

| EE | Location | fff | Code |
|----|--------------------------------|------|---|
| 33 | fan system | 0001 | delivery assembly curl-reducing fan alarm |
| | | 0005 | scanner motor fan alarm |
| | | 0006 | developing fan alarm |
| | | 0007 | delivery adhesion prevention fan alarm |
| | | 0009 | duplex feeding fan alarm |
| | | 0010 | stream reading fan alarm |
| 61 | sorter/finisher stapler system | 0001 | staple absent |
| 62 | saddle stitcher system | 0001 | stitch staple absent |
| 65 | sorter/finisher puncher system | 0001 | punch waste case full |

T00-201-07 (2/2)


2.2 I/O

The following shows the Input/Output screen (COPIER>I/O):

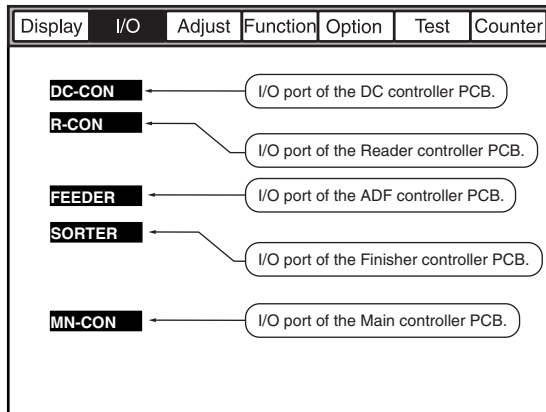

F00-202-01

Guide to the Screen



COPIER>I/O>DC-CON

DC-CON

Indicates the input/output ports of the DC controller PCB.

<DC-CON (1/10)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|--|----------|------------------|
| P001 | 0 | laser motor cooling fan stop detection signal | FM1 | 1: stop |
| | 1 | fixing heat discharge fan stop detection signal | FM2 | 1: stop |
| | 2 | laser scanner fan stop detection signal | FM3 | 1: stop |
| | 3 | laser drive cooling fan stop detection signal | FM5 | 1: stop |
| | 4 | curl-reducing fan stop detection signal | FM6 | 1: stop |
| | 5 | not used | | |
| | 6 | drum fan stop detection signal | FM8 | 1: stop |
| | 7 | pre-transfer charging assembly fan stop | FM10 | 1: stop |
| | 8 | power supply cooling fan 1 stop detection signal | FM11 | 1: stop |
| | 9 | power supply cooling fan 2 stop detection signal | FM12 | 1: stop |
| | 10 | separation fan stop detection signal | FM13 | 1: stop |
| | 11 | not used | | |
| | 12 | delivery adhesion prevention fan stop detection signal | | |
| | 13 | developing fan stop detection signal | FM15 | 1: stop |
| | 14 | not used | | |
| | 15 | not used | | |
| P002 | 0 | not used | | |
| | 1 | duplex reversal sensor | PS12 | 1: paper present |
| | 2 | duplex outlet sensor | PS61 | 1: paper present |
| | 3 | pre-confluence sensor | PS14 | 1: paper present |
| | 4 | post-confluence sensor | PS15 | 1: paper present |
| | 5 | image write start sensor | PS60 | 1: paper present |
| | 6 | not used | | |
| | 7 | not used | | |
| | 8 | not used | | |
| | 9 | not used | | |
| | 10 | not used | | |
| | 11 | not used | | |
| | 12 | not used | | |
| | 13 | DDI | | |
| | 14 | DDI | | |
| | 15 | DDI | | |
| P003 | 0 | inside hopper toner sensor | TS1 | 0: toner absent |
| | 1 | inside hopper toner lower limit sensor | TS2 | 0: toner absent |

<DC-CON (2/10)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|---|----------|------------------------------|
| | 2 | inside developing assembly toner sensor | TS3 | 0: toner absent |
| | 3 | fixing web length sensor | PS7 | 1: web absent |
| | 4 | fixing web length warning sensor | PS8 | 1: web absent pre-caution |
| | 5 | cartridge detection | MSW1 | 0: present |
| | 6 | waste toner clog detection | MSW2 | 0: clogged |
| | 7 | waste toner case full sensor | PS19 | 1: toner case full |
| | 8 | not used | | |
| | 9 | not used | | |
| | 10 | not used | | |
| | 11 | not used | | |
| | 12 | not used | | |
| | 13 | not used | | |
| | 14 | not used | | |
| | 15 | not used | | |
| P004 | 0 | right deck lifter sensor | PS21 | 1: paper present |
| | 1 | left deck lifter sensor | PS31 | 1: paper present |
| | 2 | cassette 3 lifter sensor | PS38 | 1: paper present |
| | 3 | cassette 4 lifter sensor | PS43 | 1: paper present |
| | 4 | right deck paper level middle sensor | PS51 | 1: paper present |
| | 5 | right deck paper level high sensor | PS52 | 1: paper present |
| | 6 | left deck paper level middle sensor | PS54 | 1: paper present |
| | 7 | left deck paper level high sensor | PS55 | 1: paper present |
| | 8 | right deck paper sensor | PS22 | 1: paper present |
| | 9 | left deck paper sensor | PS32 | 1: paper present |
| | 10 | cassette 3 paper sensor | PS39 | 1: paper present |
| | 11 | cassette 4 paper sensor | PS44 | 1: paper present |
| | 12 | manual feed tray paper sensor | PS17 | 1: paper present |
| | 13 | finisher connector | | 0: connected |
| | 14 | right deck limit sensor | PS24 | 1: limit |
| | 15 | left deck limit sensor | PS34 | 1: limit |
| P005 | 0 | cassette 3 paper length sensor | SV1 | |
| | 1 | cassette 3 paper length sensor | SV1 | |
| | 2 | cassette 4 paper length sensor | SV2 | |
| | 3 | cassette 4 paper length sensor | SV2 | |
| | 4 | right deck open/closed sensor | PS23 | 1: closed |
| | 5 | left deck open/closed sensor | PS33 | 1: closed |
| | 6 | cassette 3 open/closed sensor | PS40 | 1: closed |
| | 7 | cassette 4 open/closed sensor | PS45 | 1: closed |

COPIER>I/O>DC-CON

<DC-CON (3/10)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|---|----------|------------------|
| | 8 | right upper cover open/closed sensor | PS58 | 1: closed |
| | 9 | right lower cover open/closed sensor | PS48 | 1: closed |
| | 10 | manual feed tray cover open/closed sensor | PS56 | 1: closed |
| | 11 | front cover open/closed detection | MSW7 | 0: closed |
| | 12 | through path tray attached/detached sensor | PS59 | 1: closed |
| | 13 | through path tray in/out detection | | 0: attached |
| | 14 | fixing feeder unit release lever sensor | PS28 | 1: released |
| | 15 | BD error detection | | 1: error |
| P006 | 0 | drum motor lock detection | M0 | 0: low speed |
| | 1 | laser scanner motor lock detection | M4 | 0: low speed |
| | 2 | fixing motor lock detection | M3 | 0: low speed |
| | 3 | primary charging error detection | PCB11 | 1: error |
| | 4 | transfer charging error detection | PCB11 | 1: error |
| | 5 | separation/pre-transfer charging error detection | PCB11 | 1: error |
| | 6 | inside hopper toner feed motor error detection | | 1: error (E020) |
| | 7 | inside cartridge toner feed motor error detection | | 1: error (E025) |
| | 8 | not used | | |
| | 9 | separation heat discharge fan stop detection | | 1: stop |
| | 10 | not used | | |
| | 11 | duplex feed fan stop detection | | 1: stop |
| | 12 | not used | | |
| | 13 | AC relay shut-off open circuit detection | | 1: error |
| | 14 | overcurrent notice (24 V) | PCB14 | 1: overcurrent |
| | 15 | overcurrent notice (38 V) | PCB14 | 1: overcurrent |
| P007 | 0 | primary charging wire cleaner drive | M8 | 1: move to rear |
| | 1 | primary charging wire cleaner drive | M8 | 1: move to front |
| | 2 | pre-transfer charging wire cleaner drive | M7 | 1: move to front |
| | 3 | pre-transfer charging wire cleaner drive | M7 | 1: move to rear |
| | 4 | transfer/separation charging wire cleaner drive | M9 | 1: move to rear |
| | 5 | transfer/separation charging wire cleaner drive | M9 | 1: move to front |
| | 6 | not used | | |
| | 7 | not used | | |
| | 8 | drum motor drive | M0 | 0: ON |
| | 9 | main motor drive | M1 | 0: ON |
| | 10 | pickup motor drive | M2 | 0: ON |
| | 11 | fixing motor drive | M3 | 0: ON |
| | 12 | laser scanner motor drive | M4 | 0: ON |
| | 13 | cartridge motor drive | M6 | 1: ON |

<DC-CON (4/10)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|---|----------|------------------|
| | 14 | hopper motor drive | M18 | 1: ON |
| | 15 | laser scanner motor switch-over | M4 | 0: high-speed |
| P008 | 0 | fixing main heater | | 1: ON |
| | 1 | fixing sub heater | | 1: ON |
| | 2 | cassette heater | | 0: ON |
| | 3 | drum heater | | 1: ON |
| | 4 | drum heater full wave/half wave | | 0: half-wave |
| | 5 | separation heat discharge fan full wave | FM20 | 0: current up |
| | 6 | not used | | |
| | 7 | separation heat discharge fan half speed | FM20 | 0: stop |
| | 8 | laser motor cooling fan full speed | FM1 | 1: ON |
| | 9 | laser motor cooling fan half speed | FM1 | 1: ON |
| | 10 | laser scanner fan full speed | FM3 | 1: ON |
| | 11 | laser scanner fan half speed | FM3 | 1: ON |
| | 12 | pre-transfer charging assembly fan full speed | FM10 | 1: ON |
| | 13 | pre-transfer charging assembly fan half speed | FM10 | 1: ON |
| | 14 | laser scanner motor cooling fan full speed | FM14 | 1: ON |
| | 15 | duplex feeding fan full speed | FM19 | 1: ON |
| P009 | 0 | not used | | |
| | 1 | not used | | |
| | 2 | separation fan full speed | FM13 | 1: ON |
| | 3 | not used | | |
| | 4 | curl-reducing fan full speed | FM6 | 1: ON |
| | 5 | developing fan full speed | FM15 | 1: ON |
| | 6 | developing fan half speed | FM15 | 1: ON |
| | 7 | not used | | |
| | 8 | fixing heat discharge fan full speed | FM2 | 1: ON |
| | 9 | fixing heat discharge fan half speed | FM2 | 1: ON |
| | 10 | not used | | |
| | 11 | delivery adhesion prevention fan full speed | FM17 | 1: ON |
| | 12 | drum fan full speed | FM8 | 1: ON |
| | 13 | drum fan half speed | FM8 | 1: ON |
| | 14 | power supply fan full speed | FM11/12 | 1: ON |
| | 15 | power supply fan half speed | FM11/12 | 1: ON |
| P010 | 0 | right deck pickup sensor | PS20 | 1: paper present |
| | 1 | left deck pickup sensor | PS25 | 1: paper present |
| | 2 | cassette 3 pickup sensor | PS37 | 1: paper present |
| | 3 | cassette 4 pickup sensor | PS42 | 1: paper present |

COPIER>I/O>DC-CON

<DC-CON (5/10)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|--|----------|------------------|
| | 4 | vertical path 1 paper sensor | PS47 | 1: paper present |
| | 5 | vertical path 2 paper sensor | PS49 | 1: paper present |
| | 6 | vertical path 3 paper sensor | PS41 | 1: paper present |
| | 7 | vertical path 4 paper sensor | PS46 | 1: paper present |
| | 8 | right deck feed sensor | PS27 | 1: paper present |
| | 9 | left deck feed sensor | PS26 | 1: paper present |
| | 10 | manual feed sensor | PS35 | 1: paper present |
| | 11 | registration paper sensor | PS5 | 1: paper present |
| | 12 | internal delivery sensor | PS9 | 1: paper present |
| | 13 | external delivery sensor | PS10 | 1: paper present |
| | 14 | fixing feeder unit outlet sensor | PS11 | 1: paper present |
| | 15 | fixing claw jam sensor | PS6 | 1: paper present |
| P011 | 0 | not used | | |
| | 1 | right deck pickup clutch | CL10 | 1: ON |
| | 2 | left deck pickup clutch | CL11 | 1: ON |
| | 3 | cassette 3 pickup clutch | CL12 | 1: ON |
| | 4 | cassette 4 pickup clutch | CL14 | 1: ON |
| | 5 | vertical path 1 clutch | CL8 | 1: ON |
| | 6 | vertical path 2 clutch | CL9 | 1: ON |
| | 7 | vertical path 3 clutch | CL13 | 1: ON |
| P012 | 0 | not used | | |
| | 1 | vertical path 4 clutch | CL15 | 1: ON |
| | 2 | manual feed tray pickup clutch | CL7 | 1: ON |
| | 3 | manual feed tray feed clutch | CL18 | 1: ON |
| | 4 | pre-registration clutch | CL5 | 1: ON |
| | 5 | left deck feed clutch | CL19 | 1: ON |
| | 6 | lower feed middle clutch | CL16 | 1: ON |
| | 7 | lower feed right clutch | CL17 | 1: ON |
| P013 | 0 | not used | | |
| | 1 | not used | | |
| | 2 | speed switch-over delivery clutch | | |
| | 3 | inside hopper magnet roller drive clutch | CL1 | 1: ON |
| | 4 | developing cylinder clutch | CL4 | 1: ON |
| | 5 | developing cylinder deceleration clutch | CL20 | 1: ON |
| | 6 | vibration motor 1 | | 1: ON |
| | 7 | vibration motor 2 | | 1: ON |
| P014 | 0 | not used | | |
| | 1 | right deck pickup solenoid | SL7 | 1: ON |

<DC-CON (6/10)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|---|----------|------------------------------|
| | 2 | left deck pickup solenoid | SL8 | 1: ON |
| | 3 | cassette 3 pickup solenoid | SL9 | 1: ON |
| | 4 | cassette 4 pickup solenoid | SL10 | 1: ON |
| | 5 | manual feed pickup latch solenoid (return) | SL6 | 1: ON |
| | 6 | manual feed pickup latch solenoid (draw) | SL6 | 1: ON |
| | 7 | delivery flapper solenoid | SL3 | 1: ON |
| P015 | 0 | not used | | |
| | 1 | reversing flapper solenoid | SL11 | 1: ON |
| | 2 | fixing web solenoid | SL2 | 1: ON |
| | 3 | fixing feeder unit lock solenoid (return) | SL4 | 0: ON |
| | 4 | fixing feeder unit lock solenoid (draw) | SL4 | 1: ON |
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | not used | | |
| P016 | 0 | not used | | |
| | 1 | pre-exposure lamp | LED1 | 1: ON |
| | 2 | potential sensor | PCB19 | 1: ON |
| | 3 | HVT DC component | HVT | 0: high-voltage output ON |
| | 4 | HVT developing AC component | HVT | 0: ON |
| | 5 | HVT pre-transfer AC/separation AC component | HVT | 0: ON |
| | 6 | paper feed guide bias | PCB11 | 0: ON |
| | 7 | paper feed guide bias switch-over | PCB11 | 0: 200V, 1: 600V |
| P017 | 0 | not used | | |
| | 1 | not used | | |
| | 2 | not used | | |
| | 3 | not used | | |
| | 4 | not used | | |
| | 5 | not used | | |
| | 6 | duplex reversal motor ON/OFF | | 0: ON |
| | 7 | duplex reversal motor current switch-over | | 1: excited |
| P018 | 0 | not used | | |
| | 1 | not used | | |
| | 2 | not used | | |
| | 3 | not used | | |
| | 4 | not used | | |
| | 5 | not used | | |
| | 6 | duplex feed motor (right/let) ON/OFF | | 0: ON |
| | 7 | duplex feed motor current switch-over | | 1: excited |

SERVICE MODE

COPIER>I/O>DC-CON

<DC-CON (7/10)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|---|----------|---------------------------|
| P019 | 0 | not used | | |
| | 1 | not used | | |
| | 2 | not used | | |
| | 3 | not used | | |
| | 4 | not used | | |
| | 5 | not used | | |
| | 6 | horizontal registration motor ON/OFF | | 0: ON |
| | 7 | horizontal registration motor switch-over | | 1: excited |
| P020 | 0 | not used | | |
| | 1 | not used | | |
| | 2 | not used | | |
| | 3 | not used | | |
| | 4 | not used | | |
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | not used | | |
| P021 | 0 | not used | | |
| | 1 | not sued | | |
| | 2 | not used | | |
| | 3 | not used | | |
| | 4 | not used | | |
| | 5 | not used | | |
| | 6 | waste toner case full detection reset | | 0: reset |
| | 7 | shut off | SW1 | 1: shut off |
| P022 | 0 | not used | | |
| | 1 | not used | | |
| | 2 | DDI spare | | |
| | 3 | DDI spare | | |
| | 4 | printer power ready | | L: READY, H: Not READY |
| | 5 | printer command reception ready | | L: ready |
| | 6 | not used | | |
| | 7 | not used | | |
| P023 | 0 | not used | | |
| | 1 | not used | | |
| | 2 | right deck lifer | PS21 | : ON |
| | 3 | left deck lifter | PS31 | : ON |
| | 4 | cassette 3 lifter | PS38 | : ON |
| | 5 | cassette 4 lifer | PS43 | : ON |
| | 6 | not used | | |
| | 7 | not used | | |

<DC-CON (8/10)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|---|----------|------------------------------|
| P024 | 0 | not used | | |
| | 1 | not used | | |
| | 2 | not used | | H: 5V drive, L: 12V drive |
| | 3 | not used | | |
| | 4 | not used | | |
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | not used | | |
| P025 | 0 | not used | | |
| | 1 | not used | | |
| | 2 | relay ON signal state detection | | L: relay ON, H: relay OFF |
| | 3 | not used | | |
| | 4 | not used | | |
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | horizontal registration sensor | | H: detected |
| P026 | 0 | Paper Deck LED | | |
| | 1 | Paper Deck pickup roller release solenoid | | |
| | 2 | Paper Deck drawing clutch | | |
| | 3 | Paper Deck pickup clutch | | |
| | 4 | Paper Deck pickup motor | | |
| | 5 | Paper Deck lifter motor | | |
| | 6 | Paper Deck lifter motor up/down | | |
| | 7 | Paper Deck open solenoid | | |
| | 8 | Paper Deck chip select | | (H: CL, etc., L: sensor) |
| | 9 | Paper Deck latch IC control | | (ON only at power-on) |
| | 10 | Paper Deck sensor switch-over | | (L: pickup, H: draw) |
| | 11 | Paper Deck sensor LED | | (H: forced OFF, L: ON) |
| | 12 | Paper Deck speed switch-over 1 | | |
| | 13 | Paper Deck speed switch-over 2 | | |
| | 14 | not used | | |
| P027 | 0 | Paper Deck open switch | | L: OPEN |
| | 1 | Paper Deck paper present | | H: present |
| | 2 | Paper Deck pickup position sensor | | H: ON |
| | 3 | Paper Deck pickup sensor ON | | H: ON |

COPIER>I/O>DC-CON

<DC-CON (9/10)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|---|----------|------------------|
| | 4 | Paper Deck draw sensor ON | | H: ON |
| | 5 | Paper Deck feed solenoid ON | | H: ON |
| | 6 | Paper Deck motor lock detection | | H: detected |
| | 7 | Paper Deck paper supply position sensor | | H: ON |
| | 8 | Paper Deck paper level detection | | H: detected |
| | 9 | Paper Deck lifter lower limit detection | | H: detected |
| | 10 | Paper Deck connection to copier detection | | H: set |
| | 11 | Paper Deck closed | | H: closed |
| | 12 | Paper Deck lifter motor overcurrent detection | | H: detected |
| | 13 | not used | | |
| | 14 | Paper Deck connection detection | | (H: detected) |
| | 15 | Paper Deck connection detection | | (L: detected) |
| P028 | 0 | not used | | |
| | 1 | not used | | |
| | 2 | not used | | |
| | 3 | not used | | |
| | 4 | not used | | |
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | not used | | |
| | 8 | not used | | |
| | 9 | not used | | |
| | 10 | not used | | |
| | 11 | not used | | |
| | 12 | not used | | |
| | 13 | not used | | |
| | 14 | not used | | |
| | 15 | not used | | |
| P029 | 0 | not used | | |
| | 1 | not used | | |
| | 2 | not used | | |
| | 3 | not used | | |
| | 4 | not used | | |
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | not used | | |
| P030 | 0 | sub SSR error | | H: short circuit |
| | 1 | main SSR error | E004 | H: short circuit |
| | 2 | fixing thermistor 2 error detection | | H: error |
| | 3 | fixing thermistor 1 error detection | B001 | H: error |

<DC-CON (10/10)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|--|----------|-----------------|
| | 4 | fixing thermistor 2 open circuit detection | | H: open circuit |
| | 5 | fixing thermistor 1 open circuit detection | | H: open circuit |
| | 6 | fixing motor zero-cross error | | H: error |
| | 7 | not used | | |
| | 8 | open by sub SSR | | H: open |
| | 9 | open by main SSR | | H: open |
| | 10 | open by fixing thermistor 2 error | | H: open |
| | 11 | open by fixing thermistor 1 error | | H: open |
| | 12 | open by fixing thermistor 2 open circuit | | H: open |
| | 13 | open by fixing thermistor 1 open circuit | | H: open |
| | 14 | not used | | |
| | 15 | not used | | |

R-CON

Indicates the input/output ports of the reader controller PCB.

<R-CON (1/3)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|--|----------|---------------|
| P001 | 0 | original size detection 1 | | 0: detected |
| | 1 | original size detection 2 | | 0: detected |
| | 2 | original size detection 3 | | 0: detected |
| | 3 | original size detection 4 | | 0: detected |
| | 4 | copyboard open/closed detection | | 1: closed |
| | 5 | not used | | |
| | 6 | not used | | |
| P002 | 7 | not used | | |
| | 0 | fluorescent lamp absent | | 1: absent |
| | 1 | fluorescent lamp ON detection | | 1: ON, 0: OFF |
| | 2 | not used | | |
| | 3 | not used | | |
| | 4 | scanner motor cooling fan | | 1: stop |
| | 5 | stream reading fan | | 1: stop |
| P003 | 6 | inverter fan | | 1: stop |
| | 7 | not used | | |
| | 0 | original orientation detection PCB power detection | | 0: connected |
| | 1 | original orientation detection PCB busy detection | | 0: busy |

COPIER>I/O>R-CON

<R-CON (2/3)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|--|----------|---------------------|
| | 2 | original orientation detection PCB error detection | | 0: error |
| | 3 | not used | | |
| | 4 | not used | | |
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | CCD/AP type detection | | |
| P004 | 0 | inverter fan full speed | | 1: ON (24V) |
| | 1 | inverter fan half speed | | 1: ON (12V) |
| | 2 | scanner motor cooling fan full speed | | 1: ON (24V) |
| | 3 | scanner motor cooling fan half speed | | 1: ON (12V) |
| | 4 | stream reading fan ON | | 1: ON (24V) |
| | 5 | not used | | |
| | 6 | image leading select | | 1: copier, 0: ADF |
| | 7 | size detection on/off | | 1: ON |
| P005 | 0 | scanner motor D0 | | |
| | 1 | scanner motor D1 | | |
| | 2 | scanner motor D2 | | |
| | 3 | scanner motor D3 | | |
| | 4 | scanner motor CDWN0 | | |
| | 5 | scanner motor CDWN1 | | |
| | 6 | scanner motor CDWN2 | | |
| | 7 | not used | | |
| P006 | 0 | scanner motor CW/CCW | | 1: CW, 0: CCW |
| | 1 | scanner motor OFF | | 0: OFF |
| | 2 | not used | | |
| | 3 | not used | | |
| | 4 | fluorescent lamp pre-heat ON | | 0: ON |
| | 5 | fluorescent lamp heater ON | | 0: ON |
| | 6 | fluorescent lamp ON | | 0: ON |
| | 7 | not used | | |
| P007 | 0 | CCD/AP ON/OFF | | 1: stop, 0: operate |
| | 1 | CCD/AP sync clock | | |
| | 2 | CCD/AP sync data | | |
| | 3 | CCD/AP RING2 load signal | | |
| | 4 | CCD/AP F-AP load signal | | |
| | 5 | CCD/AP B-AP load signal | | |
| | 6 | not used | | |
| | 7 | not used | | |

<R-CON (3/3)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|-------------|----------|---------|
| P008 | 0 | not used | | |
| | 1 | not used | | |
| | 2 | not used | | |
| | 3 | not used | | |
| | 4 | not used | | |
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | not used | | |

FEEDER

Indicates the input/output ports of the ADF controller PCB.



The indication will be '0' while the machine is in operation (reading an original).

<FEEDER (1/4)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|-------------------------------------|----------|---------------------|
| IO-P01 | 0 | pre-reversal solenoid | SL3 | 1: ON |
| | 1 | belt motor cooling fan | | 0: ON |
| | 2 | reversal solenoid | SL1 | 1: ON |
| | 3 | delivery solenoid (position 1) | SL4 | 1: ON |
| | 4 | delivery solenoid (position 2) | SL4 | 1: ON |
| | 5 | stopper plate solenoid (position 1) | SL2 | 1: ON |
| | 6 | stopper plate solenoid (position 2) | SL2 | 1: ON |
| | 7 | solenoid timer | | 0: ON |
| IO-P02 | 0 | not used | | |
| | 1 | not used | | |
| | 2 | not used | | |
| | 3 | not used | | |
| | 4 | pickup roller home position | PI7 | 1: HP |
| | 5 | pickup roller height sensor 2 | PI9 | 1: original present |
| | 6 | pickup roller height sensor 1 | PI8 | 1: original present |
| | 7 | pre-reversal sensor | PI4 | 1: original present |
| IO-P03 | 0 | not used | | |
| | 1 | original detection sensor LED | | 0: emit |
| | 2 | not used | | |
| | 3 | not used | | |
| | 4 | not used | | |

COPIER>I/O>FEEDER
<FEEDER (2/4)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|--|----------|--|
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | not used | | |
| IO-P04 | 0 | original sensor | S6 | 0: original present |
| | 1 | original trailing edge sensor | | 1: original present |
| | 2 | last original front sensor | S8 | 1: original present |
| | 3 | not used | | |
| | 4 | separation motor | M4 | |
| | 5 | delivery motor | M5 | |
| | 6 | 24V logic down detection | | |
| IO-P05 | 7 | 24V power down detection | | |
| | 0 | separation sensor | S4 | 0: original present |
| | 1 | separation sheet-to-sheet clock | | during outputs, repeats '0' and '1' |
| | 2 | belt motor clock detection | PI1 | during outputs, repeats '0' and '1' |
| | 3 | registration roller rear paper sensor | S3 | 0: original present |
| | 4 | manual feed registration roller paper sensor | S9 | 1: original present |
| | 5 | not used | | |
| IO-P06 | 6 | not used | | |
| | 7 | not used | | |
| | 0 | serial data output | | 1: transmit |
| | 1 | D/A load path | | 1: transmit |
| | 2 | EEPROM serial input | | 1: receive |
| | 3 | EEPROM chip select | | 0: select EEPROM |
| | 4 | serial reference clock | | during outputs, repeats '0' and '1' |
| IO-P07 | 5 | separation motor clock detection | PI2 | during outputs, repeats '0' and '1' |
| | 6 | not used | | |
| | 7 | not used | | |
| | 0 | belt motor mode 1 | M2 | at all times, '0' |
| | 1 | belt motor mode 2 | M2 | at all times, '0' |
| | 2 | belt motor reference clock | M2 | during outputs, repeats '0' and '1' |
| | 3 | belt motor CW/CCW | M2 | 0: delivery direction |
| | 4 | separation motor PWM | M4 | during outputs, repeats '0' and '1' |
| | 5 | reversal motor phase B | M1 | during outputs, repeats '0' and '1' |

COPIER>I/O>FEEDER

<FEEDER (3/4)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|--|----------|--|
| | 6 | delivery motor PWM | M5 | during outputs, repeats '0' and '1' |
| | 7 | reversal motor phase A | M1 | during outputs, repeats '0' and '1' |
| IO-P08 | 0 | image leading edge signal | | 1: leading edge |
| | 1 | pre-registration roller paper sensor | S2 | 0: original present |
| | 2 | separation motor reference clock | | during outputs, repeats '0' and '1' |
| | 3 | delivery motor clock detection | PI11 | during outputs, repeats '0' and '1' |
| | 4 | pickup motor phase A | | during outputs, repeats '0' and '1' |
| | 5 | pickup motor phase B | | during outputs, repeats '0' and '1' |
| | 6 | pickup motor hold | | 1: output present |
| | 7 | AD trigger | | 1: output present |
| IO-P09 | 0 | not used | | |
| | 1 | separation clutch | CL | 1: ON |
| | 2 | skew sensor | S5 | 1: original present |
| | 3 | original delivery sensor | PI13 | 1: original present |
| | 4 | manual feed set sensor | PI12 | 1: original present |
| | 5 | not used | | |
| | 6 | reversal sensor | S1 | 1: original present |
| | 7 | registration roller rotation detection | PI5 | during outputs, repeats '0' and '1' |
| IO-P10 | 0 | DIP switch (DIPSW1) | | 0: ON |
| | 1 | signal DIP switch (DIPSW2) signal | | 0: ON |
| | 2 | DIP switch (DIPSW3) signal | | 0: ON |
| | 3 | DIP switch (DIPSW4) signal | | 0: ON |
| | 4 | DIP switch (DIPSW5) signal | | 0: ON |
| | 5 | DIP switch (DIPSW6) signal | | 0: ON |
| | 6 | upper cover front sensor (front) | | 1: closed |
| | 7 | upper cover rear sensor (rear) | | 1: closed |
| IO-P11 | 0 | 7-segment LED0 | | 0: ON |
| | 1 | 7-segment LED1 | | 0: ON |
| | 2 | 7-segment LED2 | | 0: ON |
| | 3 | 7-segment LED3 | | 0: ON |
| | 4 | 7-segment LED4 | | 0: ON |
| | 5 | 7-segment LED5 | | 0: ON |
| | 6 | 7-segment LED6 | | 0: ON |
| | 7 | ADF open/closed sensor | | 1: closed |

COPIER>I/O>FEEDER

<FEEDER (4/4)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|--|----------|---------------------------|
| IO-P12 | 0 | original width detecting switch 0 | | 1: ON |
| | 1 | original width detection switch 1 | | 1: ON |
| | 2 | original width detecting switch 2 | | 1: ON |
| | 3 | original width detecting switch 3 | | 1: ON |
| | 4 | original width detecting switch 4 | | 1: ON |
| | 5 | push switch 1 | | 0: ON |
| | 6 | push switch 2 | | 0: ON |
| | 7 | push switch 3 | | 0: ON |
| AD-P01 | | tray volume | | (hereafter, analog ports) |
| AD-P02 | | separation rear sensor analog input | | |
| AD-P03 | | read sensor analog input | | |
| AD-P04 | | delivery reversal sensor analog input | | |
| AD-P05 | | not used | | |
| AD-P06 | | not used | | |
| AD-P07 | | not used | | |
| AD-P08 | | not used | | |
| DA-P01 | | reversal motor | | (hereafter, analog ports) |
| DA-P02 | | belt motor | | |
| DA-P03 | | original sensor adjustment | | |
| DA-P04 | | trailing edge sensor adjustment | | |
| DA-P05 | | separation rear sensor adjustment | | |
| DA-P06 | | skew sensor adjustment | | |
| DA-P07 | | pre-registration-roller sensor adjustment | | |
| DA-P08 | | post-registration-roller sensor adjustment | | |
| DA-P09 | | reversal sensor adjustment | | |
| DA-P10 | | manual feed registration sensor adjustment | | |
| DA-P11 | | pre-cycle end sensor adjustment | | |
| DA-P12 | | separation motor | | |

SORTER

Indicates the input/output ports of the finisher controller PCB.

<SORTER (1/12)>

Finisher Block

| Address | Bit | Description | Notation | Remarks |
|---------|-----|----------------------------------|----------|---------------------------------------|
| P001 | 0 | buffer motor A | M2 | during output, repeats '0' and '1' |
| | 1 | buffer motor B | M2 | during output, repeats '0' and '1' |
| | 2 | buffer motor A* | M2 | during output, repeats '0' and '1' |
| | 3 | buffer motor B* | M2 | during output, repeats '0' and '1' |
| | 4 | delivery motor A | M3 | during output, repeats '0' and '1' |
| | 5 | delivery motor B | M3 | during output, repeats '0' and '1' |
| | 6 | upper path switch-over solenoid | SL2 | 0: ON |
| | 7 | buffer path switch-over solenoid | SL1 | 1: wrap, 0: release |
| P002 | 0 | front aligning plate motor B | M4 | during output, repeats '0' and '1' |
| | 1 | front aligning plate motor A | M4 | during output, repeats '0' and '1' |
| | 2 | inlet motor brake | M1 | 1: braking |
| | 3 | buffer path rear paper sensor | PI3 | 1: paper present |
| | 4 | rear aligning plate motor B | M5 | during output, repeats '0' and '1' |
| | 5 | rear aligning plate motor A | M5 | during output, repeats '0' and '1' |
| | 6 | stack delivery motor clock | M7 | during output, repeats '0' and '1' |
| | 7 | inlet motor clock | M1 | during output, repeats '0' and '1' |
| P003 | 0 | EEPROM serial output | - | - |
| | 1 | slave write serial output | - | - |
| | 2 | EEPROM serial output | - | - |
| | 3 | slave write serial output | - | - |
| | 4 | EEPROM serial clock | - | - |
| | 5 | EEPROM load signal | - | - |
| | 6 | not used | | |
| | 7 | not used | | |

COPIER>I/O>SORTER

<SORTER (2/12)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|---|----------|---------------------------------------|
| P004 | 0 | tray A paper detection | PI20 | 1: paper present |
| | 1 | puncher identification 1 | - | - |
| | 2 | puncher identification 2 | - | - |
| | 3 | delivery sensor | PI32 | 1: paper present |
| | 4 | lower path paper sensor | PI4 | 1: paper present |
| | 5 | upper path paper sensor | PI6 | 1: paper present |
| | 6 | inlet path paper sensor | PI2 | 1: paper present |
| | 7 | buffer path paper sensor | PI3 | 1: paper present |
| P005 | 0 | delivery motor ON | M3 | 1: stop, 0: ON |
| | 1 | delivery motor current switch-over | M3 | 1: constant speed, 0: accelerate |
| | 2 | inlet motor On | M1 | 1: OFF, 0: ON |
| | 3 | inlet motor CW*/CCW | M1 | 1: CCW, 0: CW |
| | 4 | not used | | |
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | not used | | |
| P006 | 0 | trimmer connection detected | | 1: connected |
| | 1 | DRAM chip select | | 0: cs |
| | 2 | stapler interference position detection | | 1: interfere, 0: ready |
| | 3 | staple cartridge indication | | 1: 50 sheets, 0: 100 sheets |
| | 4 | punch path sensor | S1 | 0: paper present |
| | 5 | stack delivery motor FG | PI11 | during output, repeats '0' and '1' |
| | 6 | inserter motor FG* | PI67 | during output, repeats '0' and '1' |
| | 7 | buffer motor FG* | M2 | during output, repeats '0' and '1' |
| P007 | 0 | not used | | |
| | 1 | not used | | |
| | 2 | not used | | |
| | 3 | not used | | |
| | 4 | not used | | |
| | 5 | delivery motor FG* | M3 | during output, repeats '0' and '1' |
| | 6 | inlet motor FG* | M1 | during output, repeats '0' and '1' |
| | 7 | fold motor FG* | M71 | during output, repeats '0' and '1' |

COPIER>I/O>SORTER

<SORTER (3/12)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|---|----------|--|
| P008 | 0 | slave write signal | | 1: normal, 0: write |
| | 1 | slave CPU reset | | 0: reset |
| | 2 | master busy signal | | 0: busy |
| | 3 | not used | | |
| | 4 | not used | | |
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | not used | | |
| P009 | 0 | handling tray solenoid ON | | 1: ON, 0: OFF |
| | 1 | expander chip select | | 0: cs |
| | 2 | IPC chip select | | 0: cs |
| | 3 | PIO chip select | | 0: cs |
| | 4 | EPROM chip select | | 0: cs |
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | not used | | |
| P010 | 0 | staple absent detection | | 1: staple absent, 0: staple present |
| | 1 | READY detection | | 1: NO, 0: ready |
| | 2 | stack tray approach detection | | 0: ON |
| | 3 | door 24V down detection | | 1: down |
| | 4 | feed path paper detection 1 | PI76 | 1: paper present |
| | 5 | feed path paper detection 2 | S7 | 1: paper present |
| | 6 | feed path paper detection 3 | S8 | 1: paper present |
| | 7 | feed path paper detection 4 | PI75 | 1: paper present |
| P011 | 0 | inserter cover open/closed detection | | 1: open |
| | 1 | stack wall safety detection | | 1: error |
| | 2 | inserter unit detection | | 1: absent, 0: present |
| | 3 | punch unit detection | | 1: absent, 0: present |
| | 4 | paper folding unit detection | | 1: absent, 0: present |
| | 5 | saddle unit detection | | 1: absent, 0: present |
| | 6 | stapler interference sensor connection detection | | 1: connected |
| | 7 | fan rotation error detection | | 1: error, 0: normal |

COPIER>I/O>SORTER

<SORTER (4/12)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|---|----------|---------------------------------------|
| P012 | 0 | swing motor high-speed setting | M8 | 1: ON |
| | 1 | swing motor medium speed setting | M8 | 1: ON |
| | 2 | swing motor low speed setting | M8 | 1: ON |
| | 3 | swing motor ON* | M8 | 1: OFF, 0: ON |
| | 4 | power fan ON signal | FM1 | 1: ON, 0: OFF |
| | 5 | buffer motor ON signal | M2 | 1: OFF, 0: ON |
| | 6 | buffer motor current switch-over | M2 | 1: constant speed, 0: acceleration |
| | 7 | trailing edge drop solenoid ON | SL5 | 0: ON |
| P013 | 0 | stack delivery motor CW* | M7 | 1: CCW, 0: CW |
| | 1 | stack delivery motor ON* | M7 | 1: OFF, 0: ON |
| | 2 | stack delivery start-up current switch-over | | 1: up, 0: down |
| | 3 | front aligning plate motor ON | M4 | 1: OFF, 0: ON |
| | 4 | rear aligning plate motor ON | M5 | 1: OFF, 0: ON |
| | 5 | tray sub plate motor A | | |
| | 6 | tray sub plate motor B | | |
| | 7 | tray sub plate motor ON | | 1: OFF, 0: ON |
| P014 | 0 | knurled belt motor phase A | M20 | |
| | 1 | knurled belt motor phase B | M20 | |
| | 2 | knurled belt motor ON | M20 | 1: OFF, 0: ON |
| | 3 | paddle motor A | M9 | |
| | 4 | paddle motor B | M9 | |
| | 5 | paddle motor ON | M9 | 1: OFF, 0: ON |
| | 6 | folder motor gain switch-over | M71 | 1: high-speed, 0: low-speed |
| | 7 | not used | | |
| P015 | 0 | paddle home position detection | PI14 | 0: HP |
| | 1 | folder set detection | PI71 | 1: present, 0: absent |
| | 2 | inserter open detection | PI66 | 1: closed, 0: open |
| | 3 | front door switch open detection | | 1: closed, 0: open |
| | 4 | folder upper door switch | MSW71 | 1: closed, 0: open |
| | 5 | upper cover open/closed detection | PI72 | 1: closed, 0: open |
| | 6 | fold path residual paper detection 1 | PI73 | 1: present, 0: absent |
| | 7 | saddle inlet front path sensor | PI59 | 1: paper present, 0: paper absent |

<SORTER (5/12)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|---|----------|--------------------------------------|
| P016 | 0 | puncher waste feed motor ON | M16 | 1: ON |
| | 1 | sub tray solenoid ON | | |
| | 2 | punch power supply ON | | 1: ON |
| | 3 | inlet motor gain adjustment | | 1: high speed, 0: low speed |
| | 4 | power OFF | | 1: down |
| | 5 | saddle path flapper solenoid ON | SL44 | 0: ON |
| | 6 | inserter motor ON | M61 | 1: OFF, 0: ON |
| | 7 | unit identification signal | | 1: identified |
| P017 | 0 | inserter separation detection 1 | PI62 | 1: paper present, 0: paper absent |
| | 1 | inserter separation detection 2 | PI63 | 1: paper prevent, 0: paper absent |
| | 2 | inserter feed detection 3 | PI61 | 1: paper prevent, 0: paper absent |
| | 3 | tray B paper detection | PI17 | 1: paper prevent, 0: paper absent |
| | 4 | tray A paper detection | PI20 | 1: paper prevent, 0: paper absent |
| | 5 | swing guide closed detection | PI14 | 0: closed |
| | 6 | swing guide home position detection | PI15 | 1: HP |
| | 7 | handling tray paper detection | PI32 | 1: paper present, 0: paper absent |
| P018 | 0 | punch waste case detection | PI26 | 1: set |
| | 1 | punch waste feed motor error detection | PI27 | 1: normal, 0: error |
| | 2 | feed cooling fan error detection | FM2 | 1: error, 0: normal |
| | 3 | knurled belt home position detection | PI31 | 1: HP |
| | 4 | shutter home position sensor | | 0: HP |
| | 5 | rear aligning plate home position sensor | PI8 | 1: HP |
| | 6 | front aligning plate home position sensor | PI7 | 1: HP |
| | 7 | tray sub plate withdraw sensor | PI10 | 1: HP |
| P019 | 0 | check switch 1 (for test mode) | | 0: ON |
| | 1 | check switch 2 (for test mode) | | 0: ON |
| | 2 | check switch 3 (for test mode) | | 0: ON |
| | 3 | check switch 4 (for test mode) | | 0: ON |
| | 4 | check switch 5 (for test mode) | | 0: ON |
| | 5 | check switch 6 (for test mode) | | 0: ON |
| | 6 | check switch 7 (for test mode) | | 0: ON |
| | 7 | check switch 8 (for test mode) | | 0: ON |

COPIER>I/O>SORTER

<SORTER (6/12)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|--------------------------------------|----------|--------------------------------------|
| P020 | 0 | P switch for ENTER | | 0: ON |
| | 1 | P switch for + | | 0: ON |
| | 2 | P switch for - | | 0: ON |
| | 3 | puncher identification | | |
| | 4 | for adjustment 0 | | 0: ON |
| | 5 | for adjustment 1 | | 0: ON |
| | 6 | for adjustment 2 | | 0: ON |
| | 7 | for adjustment 3 | | 0: ON |
| P021 | 0 | segment a (dot) | | 1: ON |
| | 1 | segment b (middle) | | 1: ON |
| | 2 | segment c (left upper) | | 1: ON |
| | 3 | segment d (left lower) | | 1: ON |
| | 4 | segment e (lower) | | 1: ON |
| | 5 | segment f (right lower) | | 1: ON |
| | 6 | segment g (right upper) | | 1: ON |
| | 7 | segment dot (upper) | | 1: ON |
| P022 | 0 | not used | | |
| | 1 | inserter motor speed switch-over 1 | M61 | |
| | 2 | inserter motor speed switch-over 2 | M61 | 1: ON |
| | 3 | inserter separation sensor | PI61/62 | 1: paper present, 0: paper absent |
| | 4 | inserter paper set sensor | S9 | 1: paper present, 0: paper absent |
| | 5 | inserter pickup solenoid | SL61 | 1: ON |
| | 6 | inserter stopper plate solenoid | SL62 | 0: ON |
| | 7 | inserter separation clutch | CL61 | 1: ON |
| P023 | 0 | fold feed motor ON | | 1: ON |
| | 1 | folder inlet solenoid ON | | 1: ON |
| | 2 | decompression solenoid ON | | 1: ON |
| | 3 | B4 fold No. 2 stopper solenoid ON | SL72 | 1: ON |
| | 4 | locking solenoid ON | | 1: ON |
| | 5 | B4 fold No. 1 stopper solenoid ON | SL75 | 1: ON |
| | 6 | fold path residual paper detection 2 | PI77 | 1: paper present |
| | 7 | fold path residual paper detection 3 | PI74 | 1: paper present |

<SORTER (7/12)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|---|----------|----------------------|
| P024 | 0 | address bus 8 | | |
| | 1 | address bus 9 | | |
| | 2 | address bus 10 | | |
| | 3 | punch 2/3-hole detection | PI33 | 1: 3-hole, 0: 2-hole |
| | 4 | punch motor home position detection | PI22 | 1: HP |
| | 5 | sample tray position detection 1 | | 1: light-block |
| | 6 | sample tray position detection 2 | | 1: light-block |
| | 7 | sample tray position detection 3 | | 1: light-block |
| P025 | 0 | tray B lift motor A | M12 | |
| | 1 | tray B lift motor B | M12 | |
| | 2 | tray B lift motor A* | M12 | |
| | 3 | tary B lift motor B* | M12 | |
| | 4 | tray A lift motor A | M13 | |
| | 5 | tray A lift motor B | M13 | |
| | 6 | tray A lift motor A* | M13 | |
| | 7 | tray A lift motor B* | M13 | |
| P026 | 0 | stack tray position detection 1 | | 1: light-block |
| | 1 | stack tray position detection 2 | | 1: light-block |
| | 2 | stack tray position detection 3 | | 1: light-block |
| | 3 | stapler home position detection | | 0: HP |
| | 4 | not used | | |
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | not used | | |
| P027 | 0 | salve busy R | | 0: busy |
| | 1 | stapler shift home position detection | PI16 | 1: HP |
| | 2 | punch home position detection | PI24 | |
| | 3 | not used | | |
| | 4 | not used | | |
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | paper edge sensor slide home position detection | PI23 | 1: HP |

COPIER>I/O>SORTER

<SORTER (8/12)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|--------------------------------|----------|---|
| P028 | 0 | waste detection sensor | | 0: paper waste absent, 1: paper waste present |
| | 1 | lower path sensor adjustment | | 1: normal, 0: error |
| | 2 | tray A sensor | | 1: absent, 0: present |
| | 3 | tray B sensor | | 1: absent, 0: present |
| | 4 | tray A paper detection | PI20 | 1: absent, 0: present |
| | 5 | tray A paper detection | PI17 | 1: absent, 0: present |
| | 6 | punch feed path detection | S1 | |
| | 7 | buffer path sensor | PI3 | |
| P029 | 0 | punch paper edge detection 1 | PI21 | |
| | 1 | punch paper edge detection 2 | PI21 | |
| | 2 | tray B idle rotation detection | PI18 | |
| | 3 | tray A idle rotation detection | PI19 | |
| | 4 | punch position detection | PI25 | 1: rear, 0: front |
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | not used | | |
| P030 | 0 | D/A serial output | | |
| | 1 | flash serial output | | |
| | 2 | punch motor ON | M18 | 1: OFF, 0: ON |
| | 3 | flash serial input | | |
| | 4 | D/A serial lock | | |
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | not used | | |
| P031 | 0 | stapler shift motor ON* | M10 | 1: retain, 0: drive |
| | 1 | D/A load signal | | |
| | 2 | stapler shift motor A | M10 | |
| | 3 | stapler shift more B | M10 | |
| | 4 | stapler shift motor A* | M10 | |
| | 5 | stapler shift motor B* | M10 | |
| | 6 | stapler motor CCW* | M11 | 0: CCW |
| | 7 | stapler motor CW* | M11 | 0: CW |

COPIER>I/O>SORTER

<SORTER (9/12)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|---|----------|-------------------------------------|
| P032 | 0 | punch motor PWM | M18 | |
| | 1 | DRAM chip select | | |
| | 2 | punch slide motor clock | PI34 | 1: ON, 0: OFF |
| | 3 | punch motor | M18 | |
| | 4 | punch slide motor direction switch-over | | 1: rear, 0: front |
| | 5 | punch motor direction switch-over CW | M18 | 1: OFF, 0: ON |
| | 6 | punch motor direction switch-over CCW | M18 | 1: OFF, 0: ON |
| | 7 | punch slide motor current switch-over | | 1: constant speed, 0: accelerate |
| P033 | 0 | stitch motor (rear) CW signal | M46 | 0: CW |
| | 1 | stitch motor (rear) CCW signal | M46 | 0: CCW |
| | 2 | stitch motor (front) CW signal | M47 | 0: CW |
| | 3 | stitcher motor (front) CCW signal | M47 | 0: CCW |
| | 4 | paper fold motor CW drive signal | M42 | 0: CW |
| | 5 | paper fold motor CCW drive signal | M42 | 0: CCW |
| | 6 | No. 1 paper deflect solenoid drive signal | SL41 | 0: ON |
| | 7 | No. 2 paper deflect solenoid drive signal | SL42 | 0: ON |
| P034 | 0 | not used | | |
| | 1 | not used | | |
| | 2 | not used | | |
| | 3 | not used | | |
| | 4 | not used | | |
| | 5 | feed roller contact drive signal | SL43 | 1: ON |
| | 6 | solenoid timer (full suction) output | | 0: ON |
| | 7 | paper portioning plate motor power | M44 | 0: ON |
| P035 | 0 | 24V power supply down detection | | 1: down |
| | 1 | paper pushing plate leading edge position | PI56 | 1: leading edge |
| | 2 | delivery detection | PI52 | 0: paper present |
| | 3 | not used | | |
| | 4 | not used | | |
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | not used | | |

COPIER>I/O>SORTER

<SORTER (10/12)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|---|----------|-----------------|
| P036 | 0 | not used | | |
| | 1 | not used | | |
| | 2 | paper pushing plate home position detection | PI55 | 1: HP |
| | 3 | aligning plate home position detection | PI48 | 0: HP |
| | 4 | saddle tray home position detection | PI41 | 0: HP |
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | not used | | |
| P037 | 0 | paper positioning plate home position detection | PI49 | 0: HP |
| | 1 | not used | | |
| | 2 | inlet cover open detection connector connection | PI51 | 0: connected |
| | 3 | not used | | |
| | 4 | feed roller phase detection | PI53 | 1: flag present |
| | 5 | aligning plate home position detection connection | PI48 | 0: HP |
| | 6 | not used | | |
| | 7 | not used | | |
| P038 | 0 | paper positioning plate motor phase A | M44 | |
| | 1 | paper positioning plate motor phase B | M44 | |
| | 2 | paper pushing plate motor PWM | M48 | |
| | 3 | feed motor | M41 | 0: ON |
| | 4 | feed motor phase A | M41 | |
| | 5 | feed motor phase B | M41 | |
| | 6 | feed motor reference clock | M41 | |
| | 7 | paper pushing plate motor CCW | M48 | 0: CCW |
| P039 | 0 | alignment motor phase A | M45 | |
| | 1 | alignment motor phase B | M45 | |
| | 2 | paper fold motor PWM | M42 | |
| | 3 | paper pushing plate motor CW | M48 | 0: CW |
| | 4 | guide motor phase A | M43 | |
| | 5 | guide motor phase B | M43 | |
| | 6 | guide motor | M43 | 0: ON |
| | 7 | alignment motor | M45 | 0: ON |

<SORTER (11/12)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|---|----------|------------------|
| P040 | 0 | No. 2 paper detection | PI61 | 0: paper present |
| | 1 | No. 3 paper detection | PI62 | 0: paper present |
| | 2 | stitching home position detection (rear) | MS32 | 1: HP |
| | 3 | stitching home position detection (front) | MS34 | 1: HP |
| | 4 | paper position plate detection | PI50 | 0: paper present |
| | 5 | No. 1 paper detection | PI60 | 0: paper present |
| | 6 | vertical path paper detection | PI57 | 0: paper present |
| | 7 | not used | | |
| P041 | 0 | aligning plate home position detection connector connection | PI48 | 1: connected |
| | 1 | not used | | |
| | 2 | outlet cover open detection connector connection | PI46 | 1: connected |
| | 3 | not used | | |
| | 4 | paper pushing plate leading edge position detection connector connection | PI56 | 1: connected |
| | 5 | paper pushing plate home position detection connector connection | PI55 | 1: connected |
| | 6 | saddle tray paper detection 2 | PI43 | 1: paper present |
| | 7 | saddle tray paper detection 3 | PI44 | 1: paper present |
| P042 | 0 | not used | | |
| | 1 | LED1 drive | | |
| | 2 | saddle tray motor phase A | M49 | |
| | 3 | saddle tray motor phase B | M49 | |
| | 4 | not used | | |
| | 5 | not used | | |
| | 6 | not used | | |
| | 7 | not used | | |
| P043 | 0 | staple present detection (front) | MS33 | 0: staple absent |
| | 1 | staple present detection (rear) | MS31 | 0: staple absent |
| | 2 | not used | | |
| | 3 | not used | | |
| | 4 | outlet over open detection | PI46 | 0: open |
| | 5 | not used | | |
| | 6 | inlet cover open detection | PI51 | 0: open |
| | 7 | not used | | |

COPIER>I/O>SORTER

<SORTER (12/12)>

| Address | Bit | Description | Notation | Remarks |
|---------|------|---|----------|------------------------------------|
| P044 | 0 | DIPSW1 Bit 8 | | 0: ON |
| | 1 | DISPW1 Bit 7 | | 0: ON |
| | 2 | DIPSW1 Bit 6 | | 0: ON |
| | 3 | DIPSW1 Bit 5 | | 0: ON |
| | 4 | DIPSW1 Bit 4 | | 0: ON |
| | 5 | DIPSW1 Bit 3 | | 0: ON |
| | 6 | DIPSW1 Bit 2 | | 0: ON |
| | 7 | DIPSW1 Bit 1 | | 0: ON |
| P045 | AN1 | not used | | |
| P046 | AN6 | not used | | |
| P047 | AN7 | not used | | |
| P048 | DA1 | not used | | |
| P049 | DA2 | not used | | |
| P050 | DA3 | not used | | |
| P051 | DA4 | not used | | |
| P052 | DA5 | not used | | |
| P053 | DA6 | not used | | |
| P054 | DA7 | not used | | |
| P055 | DA8 | not used | | |
| P056 | DA9 | not used | | |
| P057 | DA10 | not used | | |
| P058 | DA11 | not used | | |
| P059 | DA12 | not used | | |
| P060 | AN0 | staple present (rear) | MS31 | if 92 or higher, staple present |
| P061 | AN1 | staple present (front) | MS33 | if 92 or higher, staple present |
| P062 | AN2 | not used | | |
| P063 | AN3 | inlet over open detection connector connection | PI51 | if 128 or higher, connected |
| P064 | AN4 | saddle tray home position detection connector connection | PI41 | if 128 or higher, connected |
| P065 | AN5 | guide home position detection connector connection | PI54 | if 128 or higher, connected |
| P066 | AN6 | not used | | |
| P067 | AN7 | paper pushing plate leading edge detection connector connection | PI56 | if 128 or higher, connected |

MN-CON

Indicates the input/output port of the main controller PCB.

<MN-CON(1/2)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|--|----------|--|
| P001 | 0 | not used (fixed to 1) | | |
| | 1 | not used (fixed to 1) | | |
| | 2 | not used (fixed to 1) | | |
| | 3 | not used (fixed to 1) | | |
| P002 | 0 | DDI-S general-purpose input | | not used |
| | 1 | DDI-S general-purpose input | | not used |
| | 2 | DDI-S general-purpose input | | not used |
| | 3 | SPRTST signal, printer start-up signal | SPI | 0: reader image start |
| P003 | 0 | DDI-P general-purpose input | | not used |
| | 1 | DDI-P general-purpose input | | not used |
| | 2 | DDI-P general-purpose input | | not used |
| | 3 | PSCNTST signal (scanner start-up signal) | PPI | 0: reader start |
| P004 | 0 | DDI-S general-purpose output | | not used |
| | 1 | DDI-S general-purpose output | | not used |
| | 2 | 3.3V emergency power-off signal | | 0: normal (ON), 1=5W (OFF) sleep mode |
| | 3 | SSCNST signal | SP0 | not used |
| P005 | 0 | DDI-P general-purpose output | | not used |
| | 1 | DDI-P general-purpose output | | not used |
| | 2 | DDI-P general-purpose output | | not used |
| | 3 | PPRTST signal | PP0 | 0: printer image start |
| P006 | 0 | battery alarm | | 0: normal, 1: error |
| | 1 | parallel EEPROM R/B# | | 0: busy, 1: ready |
| | 2 | flash ROM R/B# | | 0: busy, 1: ready |
| | 3 | serial ROM connection detection | | 1: connected |
| | 4 | operation enable (card reader) | | 0: enabled |
| | 5 | operation enable (coin robot) | | 0: enabled (not used) |
| | 6 | serial EEPROM DO | | access port to EEPROM |
| | 7 | HD connection detecting | GPI | 0: HD present, 1: HD absent |
| P007 | 0 | battery charge control | | 0: Enable, 1: Disable |
| | 1 | not used | | |
| | 2 | not used | | |
| | 3 | not used | | |
| | 4 | PCI (PDL) soft reset | | 0: LIPS board forced reset |
| | 5 | serial EEPROM CS | | for factory adjustment |

COPIER>I/O>MN-CON

<MN-CON (2/2)>

| Address | Bit | Description | Notation | Remarks |
|---------|-----|-------------------------------|----------------------|------------------------|
| | 6 | serial EEPROM SCK | | for factory adjustment |
| | 7 | serial EEPROM DIN | | for factory adjustment |
| | 8 | pickup count | 1: count | |
| | 9 | delivery count | 1: count | |
| | 10 | coin robot pickup count | 1: count (not used) | |
| | 11 | coin robot delivery count | 1: count (not used) | |
| | 12 | LCD back-light control | 1: ON | |
| | 13 | not used | | |
| | 14 | parallel EEPROM write protect | 0: Write, 1: Protect | |
| | 15 | not used | | |
| P008 | 0 | not used | | |
| | 1 | not used | | |
| | 2 | not used | | |
| | 3 | color UI detection | 0: color UI present | |
| | 4 | B&W UI detection | 0: B&W UI present | |
| | 5 | BAT board detection | 0: present | |
| | 6 | not used | | |
| | 7 | not used | | |

2.3 ADJUST

The following shows the Adjust screen (COPIER>ADJUST):

| Display | I/O | Adjust | Function | Option | Test | Counter |
|---------|-----|--------|----------|--------|---------|---------|
| LAMP | | BLANK | | | | |
| AE | | V-CONT | | | | |
| ADJ-XY | | | | | EXP-LED | |
| CCD | | | FEED-ADJ | | | |
| LASER | | HV-PRI | CST-ADJ | | | |
| | | HV-TR | | | | |
| DEVELOP | | HV-SP | | | | |
| DENS | | | | | | |

F00-203-01



A change to any of the items under COPIER>ADJUST becomes valid when the main power switch is turned off and then on again.

COPIER>ADJUST>LAMP>AE
<LAMP>

Use it to adjust the voltage used to turn on the scanning lamp.

L-DATA

Range of
adjustment

Use it to enter the scanning lamp intensity data.

0 to 1023

- A higher input value increases the intensity.
- A lower input value decreases the intensity.

If the output shows faulty images after execution of the following, enter the values indicated on the service sheet: COPIER>FUNCTION>CCD>CCD-ADJ.

<AE>


Use it to make AE adjustments.

AE-TBL

Range of
adjustment

Use it to adjust the density of the text for image density adjustment.

1 to 9; default: 5

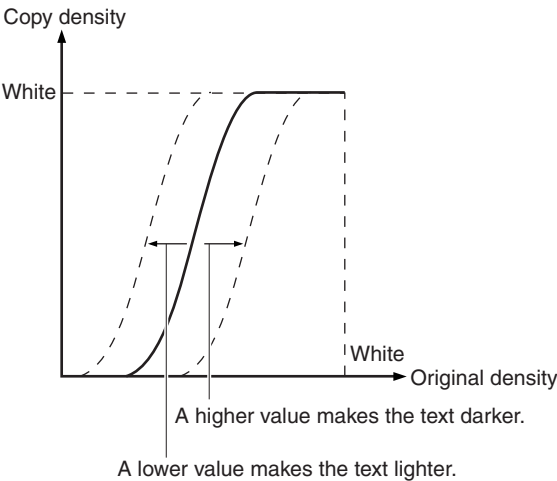

F00-203-02

<ADJ-XY>

Use it to adjust the image read start position.

If you have replaced the reader controller PCB or cleared the RAM of the reader controller PCB, enter the values indicated on the service sheet.

ADJ-X

**Range of
adjustment**


Use it to adjust the image read start position (main scanning direction).

0 to 2970 (unit: 0.1 mm)



Be sure to execute it before adjusting the margin.

Be sure not to use it to create a margin.

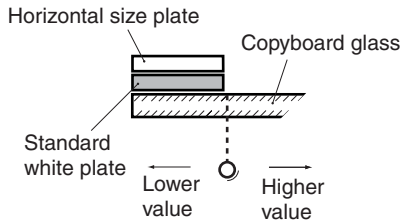


F00-203-03

ADJ-Y

**Range of
adjustment**

Use it to adjust the image read start position (sub scanning direction).

0 to 1000 (unit: 0.1 mm)

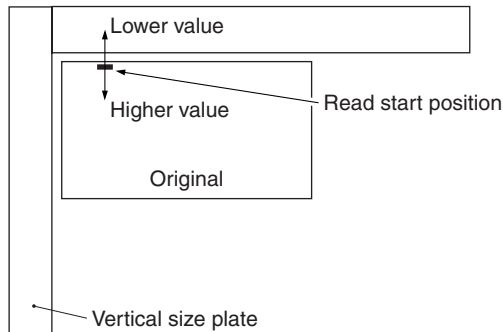

F00-203-04

COPIER>ADJUST>ADJ-XY

ADJ-S


Range of
adjustment

Use it to adjust the scanner home position.

0 to 4 (unit: 0.1 mm)



If dirt exists on the copyboard glass, use it so that the machine reads the standard white plate while avoiding the area.

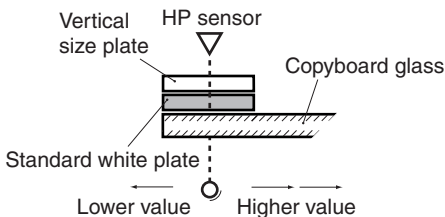


F00-203-05

ADJ-Y-DF

Range of
adjustment

Use it to adjust the read start position in main scanning direction (ADF horizontal registration adjustment).

0 to 1000 (unit: 0.1 mm)

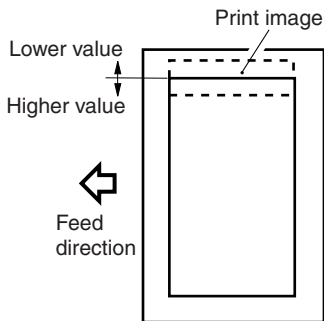

F00-203-06

<CCD>

Use it to make CCD-related (shading) adjustments.

If the output shows faulty images after execution of the following, enter the values indicated on the service sheet: COPIER>FUNCTION>CCD>CCD-ADJ, LUT-ADJ (LUT-ADJ2).

| | |
|----------|--|
| SH-TRGT | Use it to enter the white level target value for shading correction. 1 to 2043 |
| GAIN-E-R | Use it to enter the gain value for the last half even-numbered pixels of the CCD. 0 to 1023 |
| GAIN-O-R | Use it to enter the gain value of the last half odd-numbered pixels of the CCD. 0 to 1023 |
| GAIN-E-F | Use it to enter the gain value for the first half even-numbered pixels of the CCD. 0 to 1023 |
| GAIN-O-F | Use it to enter the gain value for the first half odd-numbered pixels of the CCD. 0 to 1023 |
| OFST-E-R | Use it to enter the offset value for the last half even-numbered pixels of the CCD. 0 to 1023 |
| OFST-O-R | Use it to enter the offset value for the last half odd-numbered pixels of the CCD. 0 to 1023 |
| OFST-E-F | Use it to enter the offset value for the first half even-numbered pixels of the CCD. 0 to 1023 |
| OFST-O-F | Use it to enter the offset value for the first half odd-numbered pixels of the CCD. 0 to 1023 |
| LUT-O-R1 | Use it to enter the link correction data value for the last half odd-numbered pixels of the CCD. 0 to 1023 |
| LUT-O-R2 | Use it to enter the link correction data value for the last half odd-numbered pixels of the CCD. 0 to 1023 |

COPIER>ADJUST>CCD




| | |
|----------|---|
| LUT-O-R3 | Use it to enter the link correction data value for the last half odd-numbered pixels of the CCD. 0 to 1023 |
| LUT-O-R4 | Use it to enter the link correction data value for the last half odd-numbered pixels of the CCD. 0 to 1023 |
| LUT-O-R5 | Use it to enter the link correction data value for the last half odd-numbered pixels of the CCD. 0 to 1023 |
| LUT-E-R1 | Use it to enter the link correction data value for the last half even-numbered pixels of the CCD. 0 to 1023 |
| LUT-E-R2 | Use it to enter the link correction data value for the last half even-numbered pixels of the CCD. 0 to 1023 |
| LUT-E-R3 | Use it to enter the link correction data value for the last half even-numbered pixels of the CCD. 0 to 1023 |
| LUT-E-R4 | Use it to enter the link correction data value for the last half even-numbered pixels of the CCD. 0 to 1023 |
| LUT-E-R5 | Use it to enter the link correction data value of the last even-numbered pixels of the CCD. 0 to 1023 |
| LUT-O-F1 | Use it to enter the link correction data value for the first half odd-numbered pixels of the CCD. 0 to 1023 |
| LUT-O-F2 | Use it to enter the link correction data value for the first half odd-numbered pixels of the CCD. 0 to 1023 |
| LUT-O-F3 | Use it to enter the link correction data value for the first half odd-numbered pixels of the CCD. 0 to 1023 |
| LUT-O-F4 | Use it to enter the link correction data value for the first half odd-numbered pixels of the CCD. 0 to 1023 |

| | |
|----------|--|
| LUT-O-F5 | Use it to enter the link correction data value for the first half odd-numbered pixels of the CCD. 0 to 1023 |
| LUT-E-F1 | Use it to enter the link correction data value for the first half even-numbered pixels of the CCD. 0 to 1023 |
| LUT-E-F2 | Use it to enter the link correction data value for the first half even-numbered pixels of the CCD. 0 to 1023 |
| LUT-E-F3 | Use it to enter the link correction data value for the first half even-numbered pixels of the CCD. 0 to 1023 |
| LUT-E-F4 | Use it to enter the link correction data value for the first half even-numbered pixels of the CCD. 0 to 1023 |
| LUT-E-F5 | Use it to enter the link correction data value for the first half even-numbered pixels of the CCD. 0 to 1023 |

COPIER>ADJUST>LASER
<LASER>



Use it to adjust the laser output.

If you have replaced the DC controller PCB or cleared the RAM of the DC controller PCB, enter the values indicated on the service sheet.

| | |
|---|--|
| PVE-OFST Range of adjustment | <p>Use it to adjust the laser B spot position.</p> <p>-300 to 300</p> <ul style="list-style-type: none"> • A higher value moves the spot toward the rear. • A smaller value moves the stop to the front. <p>The laser A spot moves in keeping with the laser B spot.</p> |
| LA-DELAY Range of adjustment | <p>Use it to enter the delay value of the laser unit.</p> <p>0 to 4807</p> <p>Use it to adjust the delay line of the pixel used to coordinate the laser A and laser B in main scanning direction.</p> <p> If you have replaced the laser unit, enter the values indicated on the label attached to the laser unit.</p> |
| LA-PWR-A Range of adjustment | <p>Use it to enter the power adjustment value for the laser A.</p> <p>0 to 255</p> <p> If you have replaced the laser unit, enter the power adjustment value for the laser A indicated on the label attached to the unit.</p> |
| LA-PWR-B Range of adjustment | <p>Use it to enter the power adjustment value for the laser B.</p> <p>0 to 255</p> <p> If you have replaced the laser unit, enter the power adjustment value for the laser B indicated on the label attached to the unit.</p> |
| DLY-FINE Range of adjustment | <p>Use it to fine-adjust the displacement of the laser A or laser B.</p> <p>-16 to 16</p> |

<DEVELOP>

Use it to adjust the developing bias.

| | |
|----------------------------|---|
| DE-DC | Use it to enter the DC output value for image formation. |
| Range of adjustment | 0 to 600 |
| DE-NO-DC | Use it to enter the development DC output value for non-image formation. |
| Range of adjustment | 0 to 600 |
| HVT-DE | Use it to enter the offset value for the developing high-voltage output of the high-voltage unit. |
| Range of adjustment | -50 to 50  If you have replaced the high-voltage unit, be sure to enter the value indicated on the label attached to the new high-voltage unit. If you have replaced the DC controller PCB or cleared the RAM on the DC controller PCB, be sure to enter the value indicated on the service sheet. |
| D-HV-DE | Use it to enter the offset value for the developing high-voltage output of the DC controller PCB. |
| Range of adjustment | -100 to 100  If you have replaced the DC controller PCB, be sure to enter the value indicated on the label attached to the new DC controller PCB. If you have cleared the RAM on the DC controller PCB, be sure to enter the value indicated on the service sheet. |


COPIER>ADJUST>DENS>BLANK
<DENS>

Use it to fine-tune the copy density auto correction mechanism.

DENS-ADJ

Use it to correct the density of images (copier/printer).
If the output has fogging or its high density area is fuzzy, the F value table is to be corrected.

Range of adjustment 1 to 9; default: 5

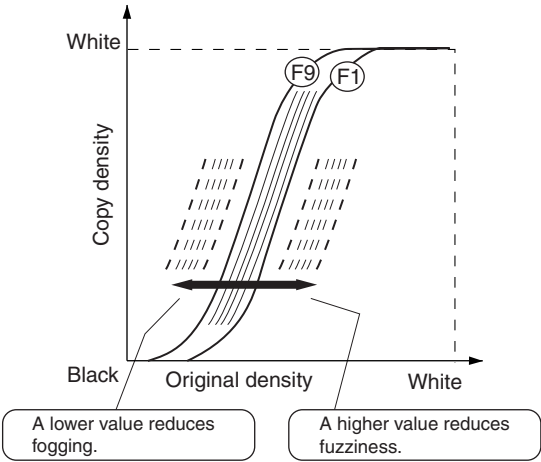

F00-203-07

<BLANK>

Use it to adjust the non-image width.
If you have replaced the DC controller PCB or cleared the RAM of the DC controller PCB, enter the value indicated on the service sheet.

BLANK-T

Use it to enter a value for the image leading edge non-image width.

Range of adjustment 0 to 2392

BLANK-B

Use it to enter a value for the image trailing edge non-image width.

Range of adjustment 0 to 2392

COPIER>ADJUST>V-CONT

| | |
|----------------------------|--|
| BLANK-TE | Use it to enter a value of the non-image width in image main scanning direction (left, right). |
| Range of adjustment | 10 to 50 (unit: 0.1 mm), default: 25 |

<V-CONT>

Use it to adjust the potential control system.

If you have replaced the DC controller PCB or cleared the RAM of the DC controller PCB, enter the values indicated on the service sheet.

| | |
|----------------------------|--|
| EPOTOFST | Use it to enter an offset value for the voltage potential sensor. |
| Range of adjustment | 0 to 30 |
| VL-OFST | Use it to enter an offset value for the voltage potential control light-area target voltage potential. |
| Range of adjustment | -50 to 50 (unit: 1 V) |
| VD-OFST | Use it to enter an offset value for the voltage potential control dark-area target voltage potential. |
| Range of adjustment | -50 to 50 (unit: 1 V) |
| DE-OFST | Use it to enter an offset value for voltage potential control Vdc. |
| Range of adjustment | -50 to 50 (unit: 1 V) |
| OHP-OFST | Use it to enter an offset value for Vdc for transparency voltage potential control. |
| Range of adjustment | -50 to 50 (unit: 1 V) |

COPIER>ADJUST>HV-PRI>HV-TR
<HV-PRI>




Use it to control the output of the primary charging assembly.





If you have replaced the DC controller PCB or cleared the RAM on the DC controller PCB, enter the values indicated on the service sheet.

| | |
|----------------------------|--|
| GRID | Use it to enter an adjustment value for the grid current of the primary charging assembly. |
| Range of adjustment | 400 to 900 |

<HV-TR>

Use it to adjust output of the transfer charging assembly/pre-transfer charging assembly.

| | |
|----------------------------|---|
| TR-N1 | Use it to enter an output adjustment value for the transfer charging current (for printing on a single-sided print or on the 1st side of a double-sided print using plain paper). |
| Range of adjustment | -650 to 0  If you have replaced the DC controller PCB or cleared the RAM on the DC controller, be sure to enter the value indicated on the service sheet. |
| TR-N2 | Use it to enter an output adjustment value for the transfer charging current (for printing on 2nd side of a double-sided print using plain paper). |
| Range of adjustment | -650 to 0  If you have replaced the DC controller PCB or cleared the RAM on the controller PCB, be sure to enter the value indicated on the service sheet. |
| PRE-TR | Use it to enter an output adjustment value for the pre-transfer charging. |
| Range of adjustment | 0 to 300  If you have replaced the DC controller PCB or cleared the RAM on the DC controller PCB, be sure to enter the value indicated on the service sheet. |

| | |
|---|--|
| HVT-TR Range of adjustment | <p>Use it to enter an offset value for the transfer high-voltage output of the high-voltage unit.</p> <p>-100 to 100</p> <p> If you have replaced the high-voltage unit, be sure to enter the value indicated on the label attached to the new high-voltage unit. If you have replaced the DC controller PCB or cleared the RAM of the DC controller PCB, be sure to enter the value indicated on the service sheet.</p> |
| H-PRE-TR Range of adjustment | <p>Use it to enter an offset value for the pre-transfer high-voltage output of the high-voltage unit.</p> <p>-100 to 100</p> <p> If you have replaced the high-voltage unit, be sure to enter the value indicated on the label attached to the new high-voltage unit. If you have replaced the DC controller PCB or cleared the RAM on the DC controller PCB, be sure to enter the value indicated on the service sheet.</p> |
| D-PRE-TR Range of adjustment | <p>Use it to enter an offset value for the pre-transfer high-voltage output of the DC controller PCB.</p> <p>-100 to 100</p> <p> If you have replaced the DC controller PCB, be sure to enter the value indicated on the label attached to the new DC controller PCB. If you have cleared the RAM of the DC controller PCB, be sure to enter the value indicated on the service sheet.</p> |
| D-HV-TR Range of adjustment | <p>Use it to enter an offset value for the transfer high-voltage output of the DC controller PCB.</p> <p>-100 to 100</p> <p> If you have replaced the DC controller PCB, be sure to enter the value indicated on the label attached to the new DC controller PCB. If you have cleared the RAM on the DC controller PCB, be sure to enter the value indicated on the service sheet.</p> |

SP-N1

Range of adjustment

0 to 800



If you have replaced the DC controller PCB or cleared the RAM on the DC controller PCB, be sure to enter the value indicated on the service sheet.

SP-N2

Range of adjustment

0 to 800



If you have replaced the controller PCB or cleared the RAM of the DC controller PCB, be sure to enter the value indicated on the service sheet.

HVT-SP

Range of adjustment

-100 to 100



If you have replaced the high-voltage unit, be sure to enter the value indicated on the label attached to the new high-voltage unit. If you have cleared the RAM of the DC controller PCB, be sure to enter the value indicated on the service sheet.

D-HV-SP

Range of adjustment

-100 to 100





If you have replaced the DC controller PCB, be sure to enter the value indicated on the label attached to the new DC controller PCB. If you have cleared the RAM of the DC controller PCB, be sure to enter the value indicated on the service sheet.

<FEED-ADJ>

Use it to adjust the feeding system.






If you have replaced the DC controller PCB or cleared the RAM on the DC controller PCB, be sure to enter the value indicated on the service sheet.



| | |
|---------------------|--|
| REGIST | Use it to adjust the timing at which the registration roller clutch goes ON.  A higher value delays the timing at which the registration roller clutch goes ON, thus decreasing the leading edge margin. |
| Range of adjustment | -100 to 100 (unit: 0.1 mm) |
| ADJ-REFE | Use it to adjust the horizontal registration for re-pickup. • If the image is displaced to the front, increase the value. |
| Range of adjustment | -100 to 100 (unit: 0.1 mm)  After setting the value, please turn the power switch off and then on. |

COPIER>ADJUST>CST-ADJ
<CST-ADJ>

Use it to make cassette/manual feed-related adjustments.

If you have replaced the DC controller PCB or cleared the RAM on the DC controller PCB, be sure to enter the values indicated on the service sheet.

| | |
|----------------------------|--|
| C3-STMTR | Use it to enter a paper width basic value for the cassette 3. (STMTR) |
| Range of adjustment | 0 to 255  If you have replaced the paper width detecting VR, execute the following service mode: FUNCTION>CST. |
| C3-A4R | Use it to enter a paper width basic value for the cassette 3. (A4R) |
| Range of adjustment | 0 to 255  If you have replaced the paper width detecting VR, execute the following in service mode: FUNCTION>CST. |
| C4-STMTR | Use it to enter a paper width basic value for the cassette 4. (STMTR) |
| Range of adjustment | 0 to 255  If you have replaced the paper width detecting VR, execute the following in service mode: FUNCTION>CST. |
| C4-A4R | Use it to enter a paper width basic value for the cassette 4. (A4R) |
| Range of adjustment | 0 to 255  If you have replaced the paper width detection VR, execute the following in service mode: FUNCTION>CST. |
| MF-A4R | Use it to enter a paper basic value for the manual feed tray. (A4R) |
| Range of adjustment | 0 to 255  If you have replaced the paper width detecting VR, execute the following in service mode: FUNCTION>CST. |

| | |
|---------|---|
| MF-A6R | <p>Use it to enter a paper width basic value for the manual feed tray. (A6R)</p> <p>Range of adjustment 0 to 255</p> <p> If you have replaced the paper width detecting VR, be sure to execute the following service mode: FUNCTION>CST.</p> |
| MF-A4 | <p>Use it to enter a paper width basic value for the manual feed tray. (A4)</p> <p>Range of adjustment 0 to 255</p> <p> If you have replaced the paper width detecting VR, execute the following in service mode: FUNCTION>CST.</p> |
| C3-LVOL | <p>Use it to enter a stack height for the cassette 3. (50 sheets)</p> <p>Range of adjustment 0 to 255</p> |
| C3-HVOL | <p>Use it to enter a stack height for the cassette 3. (250 sheets)</p> <p>Range of adjustment 0 to 255</p> |
| C4-LVOL | <p>Use it to enter a stack height for the cassette 4. (50 sheets)</p> <p>Range of adjustment 0 to 255</p> |
| C4-HVOL | <p>Use it to enter a stack height for the cassette 4. (250 sheets)</p> <p>Range of adjustment 0 to 255</p> |

<EXP-LED>

Use it to adjust the exposure lamp.

If you have replaced the DC controller PCB or cleared the RAM on the DC controller PCB, be sure to enter the value on the service sheet.

| | |
|--------|---|
| PRE-TR | <p>Use it to enter the output adjustment value for the pre-transfer exposure lamp.</p> <p>Range of adjustment 20 to 80</p> |
|--------|---|

2.4 FUNCTION


The following shows the Function screen (COPIER>FUNCTION).

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|----------|--------|----------|--------|------|---------|---------|--------|--------|-----|-------|--|-------|----------|--|--|-------|--|--|--------|--|-----|--------|--|-----|--|--|----------|----------|--|
| Display | I/O | Adjust | Function | Option | Test | Counter | | | | | | | | | | | | | | | | | | | | | | | | |
| <table><tr><td>INSTALL</td><td>FIXING</td><td>SYSTEM</td></tr><tr><td>CCD</td><td>PANEL</td><td></td></tr><tr><td>LASER</td><td>PART-CHK</td><td></td></tr><tr><td></td><td>CLEAR</td><td></td></tr><tr><td></td><td>MISC-R</td><td></td></tr><tr><td>DPC</td><td>MISC-P</td><td></td></tr><tr><td>CST</td><td></td><td></td></tr><tr><td>CLEANING</td><td>SENS-ADJ</td><td></td></tr></table> | | | | | | | INSTALL | FIXING | SYSTEM | CCD | PANEL | | LASER | PART-CHK | | | CLEAR | | | MISC-R | | DPC | MISC-P | | CST | | | CLEANING | SENS-ADJ | |
| INSTALL | FIXING | SYSTEM | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| CCD | PANEL | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| LASER | PART-CHK | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | CLEAR | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | MISC-R | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DPC | MISC-P | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| CST | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| CLEANING | SENS-ADJ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

F00-204-01

<INSTALL>

Use it to operate the machine as part of installation work.

| | |
|---------|--|
| TONER-S | <p>Use it to supply toner from the hopper to the developing assembly and to stir the toner inside the developing assembly.</p> <div><ul style="list-style-type: none">• Before pressing the OK key, check to make sure that the developing assembly is securely mounted.• Before pressing the OK key, check to make sure that the control panel monitor indicates the message ‘Copier Ready’.• Never turn off the power while the machine is operating.</div> <p><Using the Mode></p> <ol style="list-style-type: none">1) Select the item, and press the OK key.2) See that the machine performs toner supply. (about 8 to 10 min)<ul style="list-style-type: none">• While the machine supplies toner, it indicates a countdown of the supply time (in sec, starting at 600 sec).3) See the machine automatically stops at the end of toner supply. |
| CARD | <p>Use it to set a number for the card reader.</p> <p>1 to 200</p> <p>Default: 0 (not connected)</p> <p>As many as 1000 cards can be used starting with the one given the pre-set number.</p> <p>EX:</p> <ul style="list-style-type: none">• If the input is ‘1’, cards from 1 to 1000 can be used.• If the input is 2001, cards from 2001 to 3000 can be used. |

COPIER>FUNCTION>CCD
<CCD>

Use it to execute CCD/shading-related auto adjustments.

CCD-ADJ

Use it to execute CCD auto adjustments.




- If you have replaced any of the following or cleared the RAM of the reader controller PCB, execute this mode and LUT-ADJ (LUT-ADJ2): reader controller PCB, CCD, AP PCB, CCD unit, copyboard lamp, fluorescent lamp inverter PCB, copyboard glass, standard white plate, light adjustment PCB, light adjustment sensor PCB.

- Use the whitest of all papers (not for color processing) used by the user as the standard white paper.

<Using the Mode>

- 1) Place the standard white paper (10 sheet or more) on the copyboard glass.
- 2) Select an item, and press the OK key.
- 3) Execute auto adjustment. (about 1 min)
- 4) See that the machine automatically stops after adjustment.
- 5) All items under the following are updated; print out a service sheet, and store it away: COPIER>ADJUST>LAMP, COPIER>ADJUST>CCD.

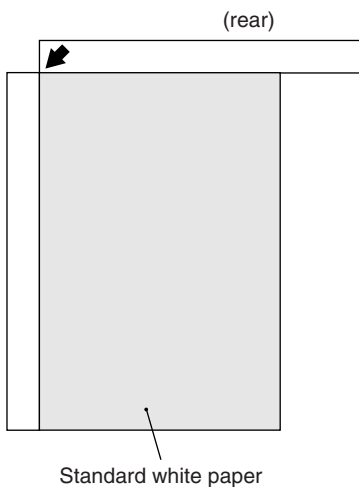

F00-204-02

LUT-ADJ

Use it to execute CCD gain simplified correction.



- After executing CCD-ADJ, execute this mode to adjust the density along the middle of images.
- Be sure to execute CCD-ADJ before executing this mode.

<Using the Mode>

- 1) Select the item, and press the OK key.
- 2) Execute auto adjustment.
- 3) See that the machine automatically stops after adjustment.
- 4) All items under the following are updated; print out a service sheet, and store it away: COPIER>ADJUST>LAMP, COPIER>ADJUST>CCD.

LUT-ADJ2


Use it to execute CCD gain detail correction.

- If the density is not corrected using LUT-ADJ (CCD gain simplified correction), execute this mode using the 10-gradation chart.

<Using the Mode>

- 1) As shown, place the 10-gradation chart (D-10 Test Sheet) on the copyboard glass.
- 2) Select the item, and press the OK key.
- 3) See that the machine executes auto adjustment.
- 4) See that the machine stops automatically after adjustment.
- 5) All items under the following are updated; print out a service sheet, and store it away: COPIER>ADJUST>LAMP, COPIER>ADJUST>CCD.

Place the chart so that the side with gradation faces down.

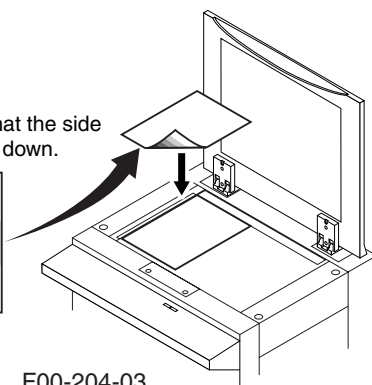

F00-204-03

COPIER>FUNCTION>LASER>DPC
<LASER>

Use it to make laser-related adjustments.

POWER-A

Use it to turn on the laser A.

<Using the Mode>

- 1) Select <POWER-A> to highlight, and press the OK key.
- 2) See that the laser goes ON, and the display indicates 'Start→ACTIVE' (flashing); the upper right of the screen indicates <SERVICE>.
- 3) See that the message goes OFF automatically in about 60 sec, and the display indicates 'OK!'.

POWER-B

Use it to turn on the laser B.

<Using the Mode>

- 1) See the instructions under POWER-A.

<DPC>

Use it to make voltage potential sensor-related adjustments.

OFST

Use it to execute offset adjustment of the potential sensor.



This mode is part of the procedure to be performed when replacing the potential sensor unit; do not execute it on its own.

<Using the Mode>

- 1) Select the item, and press the OK key.
- 2) See that the machine automatically stops after offset adjustment.

<CST>

Use it to execute size auto adjustment for the cassette/manual feed tray.

C3-STMTR
C3-A4R
C4-STMTR
C4-A4R

Use it to register a paper width basic value for the cassette 3/4.
STMTR width: 139.5 mm, A4R width: 210 mm



To make fine adjustments after registering the basic value, execute the following: ADJUST>CST-ADJ>C3-STMTR, C3-A4R, C4-STMTR, C4-A4R.

<Using the Mode>

- 1) Place STMTR paper in the cassette, and see the side guide plate to STMTR width.
- 2) Select C3-STMTR (C4-STMTR), and press the OK key.
 - The machine performs auto adjustment and stores the value.
- 3) Likewise, repeat steps 1) and 2) to enter a basic value.

MF-A4R
MF-A6R
MF-A4

Use it to enter a paper width basic value for the manual feed tray.
A4R width: 210 mm, A6R width: 105 mm, A4 width: 297 mm



To make fine adjustments after registering the basic value, execute the following: ADJUST>CST-ADJ>MF-A4R, MF-A6R, MF-A4.

<Using the Mode>

- 1) Place A4R paper in the manual feed tray, and set the side guide to A4R width.
- 2) Select MF-A4R, and press the OK key.
 - The machine performs auto adjustment and registers the value.
- 3) Likewise, repeat steps 1) and 2) for A6R and A4.

COPIER>FUNCTION>CLEANING
<CLEANING>

Cleaning operation.

WIRE-CLN

Use it to execute auto cleaning of the charging wire 5 times continuously (round trip).



If you have replaced the primary charging wire or the transfer charging wire, be sure to execute this mode.

<Using the Mode>

- 1) Select the item, and press the OK key.
- 2) See that the machine performs auto cleaning of the charging wire 5 times continuously.
- 3) See that the machine automatically stops after cleaning.

<FIXING>


Use it to execute fixing assembly-related auto adjustment.

NIP-CHK

Use it to generate output for measuring the fixing nip width.

<Using the Item>

- 1) Make about 20 A4 prints using the test sheet.
- 2) Place A4 paper in the tray.
- 3) Select the item to highlight, and press the OK key.
 - The paper will be picked up and is stopped between the fixing rollers once, and then will be delivered in about 20 sec.
- 4) Measure the width of the area shaded in the figure.

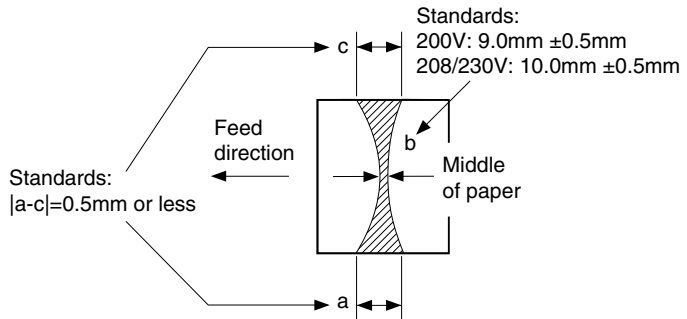

F00-204-04



a and b are measurements at 10 mm from either edge of paper.

COPIER>FUNCTION>PANEL
<PANEL>

Use it to turn on the control panel.

LCD-CHK

Use it to check the touch panel for missing dots.

<Using the Mode>

- 1) Select the item, and press the OK key.
 - The entire face of the touch panel repeats turning white, black, red, green, and blue.
- 2) Press the Stop key to stop the operation.

LED-CHK

Use it to check the LEDs of the control panel.

<Using the Mode>

- 1) Select the item, and press the OK key.
 - The LEDs go ON in sequence.
- 2) Select LED-OFF to stop the operation.

LED-OFF

Use it to end a check on the LEDs of the control panel.

<Using the Mode>

- 1) Select the item to end LED-CHECK.

KEY-CHK

Use it to check key inputs.

<Using the Mode>

- 1) Select the item.
- 2) Press the key to check. If normal, its corresponding character appears on the touch panel. (T00-204-01)
- 3) At the end, select KEY-CHECK once again to end the operation.

TOUCHKEY

Use it to adjust the coordinates of pressing and locations on the touch panel.



- Try to match a press on the touch panel and its coordinates on the LCD.
- If you have replaced the LCD assembly, execute this mode.

<Using the Mode>

- 1) Select the item, and press the OK key.
- 2) Press the 9 locations indicated by '+' on the touch panel.

COPIER>FUNCTION>PART-CHK

<Input Keys and Display>

| Key | Display | Key | Display |
|---------------|---------|------------|----------|
| counter check | BILL | Start | START |
| 0 to 9 | 0 to 9 | Reset | RESET |
| Stop | STOP | Power Save | STAND BY |
| ID | ID | Clear | CLEAR |
| User Mode | USER | Guide | ? |

T00-204-01

<PART-CHK>

Use it to check the operation of each load.

| | |
|--------|--|
| CL | <p>Use it to select the clutch to check.</p> <p><Using the Mode></p> <ol style="list-style-type: none"> 1) Select the item. 2) Using the keypad, enter the code (T00-204-02) of the clutch in question. 3) Press the OK key. |
| CL-ON | <p>Use it to check the operation of a clutch.</p> <p><Using the Mode></p> <ol style="list-style-type: none"> 1) Select the item, and press the OK key. <ul style="list-style-type: none"> • ON → 10 sec OFF → ON → 10 sec OFF → ON → OFF |
| MTR | <p>Use it to select the motor to check.</p> <p><Using the Mode></p> <ol style="list-style-type: none"> 1) Select the item. 2) Enter the code (T00-204-03) of the motor using the keypad. 3) Press the OK key. |
| MTR-ON | <p>Use it to check the operation of a motor.</p> <p><Using the Mode></p> <ol style="list-style-type: none"> 1) Select the item, and press the OK key. <ul style="list-style-type: none"> • 20 sec ON → OFF • for hopper and duplex horizontal registration motor, 10 sec ON → OFF • for shift tray motor, stops at front/rear HP • for vibration motor (M10/M20), ON/OFF operation repeats at intervals of about 5 sec |

COPIER>FUNCTION>PART-CHK

SL

Use it to select a solenoid to check.

<Using the Mode>

- 1) Select the item.
- 2) Using the keypad, enter the code (T00-204-04) of the solenoid.
- 3) Press the OK key.

SL-ON

Use it to check the operation of a solenoid.

<Using the Item>

- 1) Select the item, and press the OK key.
 - ON → 10 sec OFF → ON → 10 sec OFF → ON → OFF

<Codes/Clutch Names>

| Code | Name | Code | Name |
|------|--------------------------------------|------|--|
| 1 | manual feed tray pickup clutch (CL7) | 12 | lower feeder right clutch (CL17) |
| 2 | cassette 3 pickup clutch (CL12) | 13 | deck (left) feed clutch (CL19) |
| 3 | vertical path 3 clutch (CL13) | 14 | delivery speed switch-over clutch (CL21) |
| 4 | cassette 4 pickup clutch (CL14) | 15 | registration brake clutch (CL3) |
| 5 | vertical path 4 clutch (CL15) | 16 | manual feed tray feed clutch (CL18) |
| 6 | deck (right) pickup clutch (CL10) | 17 | inside hopper magnet roller drive clutch (CL1) |
| 7 | vertical path 1 clutch (CL8) | 18 | developing sleeve clutch (CL4) |
| 8 | deck (left) pickup clutch (CL11) | 19 | registration clutch (CL2) |
| 9 | vertical path 2 clutch (CL9) | 20 | side paper deck feed clutch (CL101) |
| 10 | pre-registration clutch (CL5) | 21 | side paper deck pickup clutch (CL102) |
| 11 | lower feeder middle clutch (CL6) | | |

T00-204-02

<Codes/Motor Names>

| Code | Name | Code | Name |
|------|--|------|-------------------------------------|
| 1 | Drum motor (M0) | 8 | Horizontal registration motor (M15) |
| 2 | Main motor (M1) | 9 | Duplex reversal motor (M11) |
| 3 | Pickup motor (M2) | 10 | duplex feed motor (M12) |
| 4 | Fixing motor (M3) | 11 | deck main motor (M101) |
| 5 | Laser scanner motor (M4) | 12 | vibration motor 1 (M10) |
| 6 | Inside cartridge toner feed motor (M6) | 13 | vibration motor 2 (M20) |
| 7 | Inside hopper toner feed motor (M18) | | |

T00-204-03

COPIER>FUNCTION>PART-CHK**<Codes/Solenoid Names>**

| Code | Name | Code | Name |
|------|--|------|--------------------------------------|
| 1 | deck (right) pickup solenoid (SL7) | 8 | reversal flapper solenoid (SL11) |
| 2 | deck (left) pickup solenoid (SL8) | 9 | fixing web solenoid (SL2) |
| 3 | cassette 3 pickup solenoid (SL9) | 10 | fixing feed unit lock solenoid (SL4) |
| 4 | cassette 4 pickup solenoid (SL10) | 11 | fixing feed unit lock solenoid (SL4) |
| 5 | manual feed pickup clutch solenoid (SL6) | 12 | shut-off |
| 6 | manual feed pickup clutch solenoid (SL6) | 13 | side paper deck pickup solenoid |
| 7 | delivery flapper solenoid (SL3) | 14 | relay |

T00-204-04

COPIER>FUNCTION>CLEAR
<CLEAR>

Use it to clear the RAM/jam history/error code history.

Be sure to turn off and then on the main power switch for the change to be stored.

| | |
|----------|---|
| ERR | <p>Use it to clear an error code.</p> <p><Using the Mode></p> <ol style="list-style-type: none"> 1) Select the item, and press the OK key. 2) Turn off and then on the main power switch. |
| DC-CON | <p>Use it to clear the RAM of the DC controller PCB.</p> <p><Using the Mode></p> <ol style="list-style-type: none"> 1) Select the item and press the OK key. 2) Turn off and then on the main power switch. |
| R-CON | <p>Use it to clear the RAM of the reader controller PCB.</p> <p><Using the Mode></p> <ol style="list-style-type: none"> 1) Select the item, and press the OK key. 2) Turn off and then on the main power switch. |
| SERVICE | <p>Use it to clear the backup data of service mode (COPIER>OPTION).</p> <p><Using the Mode></p> <ol style="list-style-type: none"> 1) Use the item, and press the OK key. 2) Turn off and then on the main power switch. |
| JAM-HIST | <p>USE it to clear the jam history.</p> <p><Using the Mode></p> <ol style="list-style-type: none"> 1) Select the item, and press the OK key. 2) Turn off and then on the main power switch. |
| ERR-HIST | <p>USE it to clear the error history.</p> <p><Using the Mode></p> <ol style="list-style-type: none"> 1) Select the item, and press the OK key. 2) Turn off and then on the main power switch. |
| E354-CLR | --- |
| E355-CLR | --- |

| | |
|----------|--|
| PWD-CLR | <p>Use it to clear the password of the system administrator set in user mode. <Using the Mode></p> <ol style="list-style-type: none"> 1) Select the item, and press the OK key. 2) Turn off and then on the main power switch. |
| ADRS-BK | <p>Use it to clear all addresses registered in the address book. <Using the Mode></p> <ol style="list-style-type: none"> 1) Select the item, and press the OK key. 2) Turn off and then on the main power switch. |
| CNT-MCON | <p>Use it to clear the counter readings used for service work on the main controller PCB. <Using the Mode></p> <ol style="list-style-type: none"> 1) Select the item, and press the OK key. 2) Turn off and then on the main power switch. |
| CNT-DCON | <p>Use it to clear the counter readings for service work on the DC controller PCB. <Using the System></p> <ol style="list-style-type: none"> 1) Select the item and press the OK key. 2) Turn off and then on the main power switch. |
| MMI | <p>Use it to clear the backup data entered in user mode (machine settings, ID mode, group ID, mode memory). <Using the Mode></p> <ol style="list-style-type: none"> 1) Select the item, and press the OK key. 2) Turn off and then on the main power switch. |
| CARD | <p>Use it to clear the group ID of the card reader. <Using the Mode></p> <ol style="list-style-type: none"> 1) Select the item, and press the OK key. 2) Turn off and then on the main power switch. |
| ALARM | <p>Use it to clear the alarm history. <Using the Mode></p> <ol style="list-style-type: none"> 1) Select the mode, and press the OK key. 2) Turn off and then on the main power switch. |

COPIER>FUNCTION>MISC-R>MISC-P
<MISC-R>

Use it to check the operation of the reader system.

SCANLAMP

Use it to check the activation of the scanning lamp.

<Using the Mode>

- 1) Select the item, and press the OK key.
 - See that the scanning lamp goes ON.
- 2) See that the scanning lamp remains ON for several seconds and go OFF automatically.

<MISC-P>

Use it to check the operation of the printer system.

P-PRINT

Use it to print out a list of service mode settings (COPIER>ADJUST/OP-TION/COUNTER).

<Using the Mode>

- 1) Select the item, and press the OK key.
 - See that a list of service mode settings is printed out.

KEY-HIST

Use it to print out the history of key inputs made from the control panel.

<Using the Mode>

- 1) Select the item, and press the OK key.
 - See that the history of key inputs is printed out.

HIST-PRT

Use it to print out the jam history, error history, and alarm history of service mode.

<Using the Mode>


- 1) Select the item, and press the OK key.
 - See that histories of jams, errors, and alarms are printed out.

USER-PRT

Use it to print out a list of user mode settings from service mode.

<Using the Mode>

- 1) Select the item, and press the OK key.
 - See that a list of user mode settings is printed out.

| | |
|----------|---|
| P-TR-EXP | <p>Use it to check the activation of the pre-transfer exposure lamp.</p> <p><Using the Mode></p> <ol style="list-style-type: none"> 1) Select the item, and press the OK key. <ul style="list-style-type: none"> • The pre-transfer exposure lamp goes ON. 2) See that the pre-transfer exposure lamp remains ON for several seconds and go OFF automatically. |
| LBL-PRNT | <p>Use it to print out the service sheet.</p> <p><Using the Mode></p> <ol style="list-style-type: none"> 1) Place paper in the manual feed tray. <div data-bbox="293 497 344 545" style="display: inline-block; vertical-align: middle;">  </div> When printing out the service sheet, be sure to use the manual feed tray as the source of paper. 2) Select the item, and press the OK key. <ul style="list-style-type: none"> • The service sheet is printed out. • Store the service sheet in the service book case behind the front cover. |
| PRE-EXP | <p>Use it to check the activation of the pre-exposure lamp.</p> <p><Using the Mode></p> <ol style="list-style-type: none"> 1) Select the item, and press the OK key. <ul style="list-style-type: none"> • See that the pre-exposure lamp goes ON. 2) See that the pre-exposure lamp goes OFF automatically in several seconds. |
| CL-ADJ | <p>Use it to measure the clutch lock/unlock mechanism.</p> <p><Using the Mode></p> <ol style="list-style-type: none"> 1) Place 2 or more sheets of paper in the left deck and 1 sheet or more in the cassette 4 (if a Paper Deck is connected, 1 sheet in it); use A4/LTR plain paper. 2) Select the item, and press the OK key. <ul style="list-style-type: none"> • See that the 2 sheets are picked from the left deck and 1 sheet from the cassette 4 (1 sheet from the Paper Deck if connected). 3) When all sheets have been delivered, see that the machine indicates 'NG' to shows that the mechanism is normal; otherwise, it will indicate 'NG'. |

COPIER>FUNCTION>SENS-ADJ>SYSTEM
<SENS-ADJ>

Use it to adjust sensors.

OP-SENS

Use it to adjust optical sensor.

<Using the Mode>

- 1) Check to make sure that paper is found in all paper cassettes.
- 2) Select the item, and press the OK key.
- 3) See that the machine indicates 'ACTIVE' during adjustment and 'OK' when the sensor is normal; otherwise, it will indicate 'NG'.

<SYSTEM>

Use it to check system-related operations.

DOWNLOAD

Use it to switch to download mode of the system program.



Use it when downloading the system program.

<Using the Mode>

- 1) Turn off the copier and the PC.
- 2) Disconnect the network-related cable from the copier.
- 3) Connect the copier and the PC with a bi-Centronics cable or a network cable.
- 4) Turn on the PC.
- 5) Turn on the copier.
- 6) Select the item, and press the OK key.
- 7) Perform downloading using the service support tool. (See 7. of Chapter 6.)
- 8) When downloading ends, turn off and then on the main power switch.

CHK-TYPE

Use it to select a partition number for execution of HD-CHECK, HD-CLEAR.

<Using the Mode>

- 1) Select the item.
- 2) Select a partition number using the keypad.
 - 0: entire HDD
 - 1: image storage area
 - 2: general-purpose file storage area
 - 3: PDL-related file storage area
 - 4: program file storage area
- 3) Press the OK key.

HD-CHECK

Use it to check and recover the partition selected using CHK-TYPE.

<Using the Mode>

- 1) Select the item.
- 2) Press the OK key.
- 3) See the result.

OK/NG (hardware)/NG (software) recovery sector/alternative sector

HD-CLEAR

Use it to initialize the partition selected using CHK-TYPE.

<Using the Mode>

- 1) Select the item.



CHK-TYPE: 0 and 4 are invalid

- 2) Press the OK key.
- 3) At the end, see that 'OK' is indicated.

2.5 OPTION

The following shows the Option screen (COPIER>OPTION).

| | | | | | | |
|--|-----|--------|----------|--------|------|---------|
| Display | I/O | Adjust | Function | Option | Test | Counter |
| <div>BODY</div> <div>USER</div> <div>CST</div> <div>ACC</div> <div>INT-FACE</div> | | | | | | |


F00-205-01






Be sure to turn off and then on the main power switch so that changes made to any of the items under COPIER>OPTION are effective.




<BODY>

Use it to select copier-related settings.




| | |
|-----------------|---|
| PO-CNT | |
| Setting | Use it to turn on and off the potential control mechanism. 0: OFF 1: ON (default) |
| TRNSG-SW | |
| Setting | Use it to select toner guide bias control mode. 0: 200 V for absolute water content of 22 g or more; 600 V for others 1: fixed to 600 V 2: fixed to 200 V 3: 200 V for absolute water content of 18 g or more; 600 V for others (default) 4: 200 V for absolute water content of 14 g or more; 600 V for others |
| MODEL-SZ | |
| Setting | Use it to switch default reproduction ratio display and ADF original size detection. 0: AB (6R5E) 1: INCH (5R4E) 2: A (3R3E) 3: AB/INCH (6R5E) |
| FIX-TEMP | |
| Setting | Use it to set the down sequence start temperature for thick paper mode. 0: 194°C 1: 189°C (default) 2: 184°C |
| IDL-MODE | |
| | Use it to select idle rotation mode for the developing assembly. |
| |  Set it to '2' or '3' if the image becomes distorted or too light. |
| Setting | 0: OFF (no idle rotation) 1: auto control based on readings of environment sensor (default) 2: start idle rotation when fixing roller temperature reaches 100°C 3: start idle rotation when main power switch goes ON |

COPIER>OPTION>BODY

| | |
|----------|--|
| FUZZY | <p>Use it to set fuzzy control (on/off) and environment settings</p>  <ul style="list-style-type: none"> • It affects the pre-transfer, transfer, and separation charging current levels. • Setting it between '1' and '3' makes the control independent of the readings of the environment sensor. <p>Setting</p> <p>0: fuzzy control ON (default)</p> <p>1: low humidity environment mode (uses level lower than standard)</p> <p>2: normal humidity environment mode</p> <p>3: high humidity environment mode (uses level higher than standard)</p> |
| SCANSLCT | <p>Use it to turn ON/OFF the original size detection mechanism by the ADF.</p>  <p>When ON, the scan size is determined according to the size of an original.</p> <p>Setting</p> <p>0: OFF (default)</p> <p>1: ON</p> |
| OHP-TEMP | <p>Use it to switch among temperature settings for transparency mode.</p>  <p>The fixing temperature will be lowered to improve separation of transparencies from the fixing roller.</p> <p>Setting</p> <p>0: 198°C (default)</p> <p>1: 193°C</p> <p>2: 188°C</p> <p>3: 183°C</p> |
| OHP-CNT | <p>Use it to turn ON/OFF the potential control mechanism for transparency mode.</p> <p>Setting</p> <p>0: use target value obtained in potential control of transparency mode (default)</p> <p>1: do not use potential control in transparency mode</p> |
| CNT-W/PR | <p>Use it to turn ON/OFF the mechanism to change density during printing (PDL input).</p> <p>Setting</p> <p>0: correct target value to enable change of density during printing (default)</p> <p>1: do not change density during printing</p> |

| | |
|----------|---|
| FIX-TMP1 | <p>Use it to select a temperature for starting down-sequence for plain paper.</p> <p> If the user wants priority on image quality, set it to '0'; on speed, set it to '2'.</p> <p>Setting</p> <p>0: 183°C 1: 178°C (default) 2: 173°C</p> |
| TRSW-P-B | <p>Use it to turn ON/OFF the transfer current output correction mechanism at the trailing edge of paper.</p> <p>Setting</p> <p>0: ON 1: OFF (default)</p> |
| SP-MODE | <p>Use it to turn ON/OFF the separation current output correction mechanism.</p> <p>Setting</p> <p>0: standard mode (default) 1: low voltage mode</p> |
| FTMP-DWN | <p>USE it to select enhanced stacking mode.</p> <p> The fixing temperature is lowered to enhance stacking in the finisher.</p> <p>Setting</p> <p>0: OFF (default) 1: decrease by -5°C 2: decrease by -10°C 3: decrease by -15°C</p> |
| DRUM-CLN | <p>Use it to select enhanced drum cleaning mode (stop sequence).</p> <p> • The rotation of the drum is stopped for about 1 sec as soon as a specific number of prints have been made during copying, thereby recovering the cleaning performance of the cleaning blade. • If cleaning faults occur, use this mode to change the setting. • A higher setting brings stronger results.</p> <p>Setting</p> <p>0: 1000 single-sided copies (500 double-sided copies) (default) 1: 500 single-sided copies (250 double-sided copies) 2: 250 single-sided copies (125 double-sided copies) 3: if absolute water content is 9 g or more, 1000 single-sided copies (500 double-sided copies) after passage of paper if absolute water content is less than 9 g, 250 single-sided copies (125 double-sided copies) after passage of paper 4: do not stop rotation</p> |

COPIER>OPTION>BODY

| | |
|--------------------------------|---|
| <p>DRM-IDL</p> <p>Setting</p> | <p>Use it to set idle rotation mode for the photosensitive drum executed at time of power-on.</p> <p> The photosensitive drum is rotated idly to prevent adhesion of toner to the drum. Set it between '1' and '4' if the image is distorted or too light.</p> <p>0: do not use idle rotation (default) 1: if absolute water content is 18 g or more, rotate for 30 sec 2: if absolute water content is 18 g or more, rotate for 2 min 3: regardless of environment, rotate for 30 sec 4: regardless of environment, rotate for 2 min 5: regardless of environment, rotate for 2 min; after wire cleaning, rotate for 5 sec 6: regardless of environment, rotate for 2 min; after wire cleaning, rotate for 10 sec 7: regardless of environment, rotate for 2 min; after wire cleaning, rotate for 30 sec</p> |
| <p>FX-FANSW</p> <p>Setting</p> | <p>Use it to set the control mechanism for the fixing heat discharge fan.</p> <p> If set to '1', the fan is controlled to half speed after copying/printing.</p> <p>0: full speed (default) 1: half speed</p> |
| <p>CONFIG</p> <p>Setting</p> | <p>Use it to select from multiple pieces of firmware stored on the hard disk for country, language, destination, paper size configuration.</p> <p>XXYYZZAA XX: country (JP), YY: language (ja), ZZ (00): destination, AA (00): paper size configuration; as determined by COPIER>DISPLAY>USER>LANGUAGE. The selections in parentheses indicate default selections.</p> <p><Using the Mode> 1) Select 'CONFIG'. 2) Select a specific item to change (highlight), and press the +/- key.</p> <p> You can change XX: country and AA (00) paper size configuration.</p> <p>3) Press the +/- key to scan through the selections. 4) Bring up the selections for each time, and press the OK key. 5) Turn off and then on the main power switch.</p> |

| | |
|----------|---|
| SHARP | Use it to change the sharpness level of images. • A higher value makes images sharper. |
| Setting | 1 to 5 (default: 3) |
| FDW-DLV | Use it to switch between face-up and face-down delivery mode, thereby ensuring good stacking when making multiple prints. |
| Setting | 0: normal (face-up for all when using 1 original) 1: when using 1 original, face-up if for one set; face-down if for multiple sets (default) |
| COTDPC-D | Use it to set toner save mode. |
| Setting | 0: do not use toner save mode (default) 1: VDT-20V of coy image, VDT-P25V of print image (target of -10%, approx.) 2: VDT-40V of copy image, VDT-P-50V of print image (target of -20%, approx.) 3: VDT-60V of copy image, VDT-P-75V of print image (target of -30%, approx.) |
| RMT-LANG | not used |
| TR-SP-C1 | Use it to set the transfer/separation output setting when the right deck is selected, thereby preventing faults otherwise occurring. |
| Setting | 0: setting for plain paper (default) 1: setting for recycled paper 2: setting for tracing paper |
| TR-SP-C2 | Use it to set the transfer/separation output setting when the left deck is used, thereby preventing faults otherwise occurring. |
| Setting | 0: setting for plain paper (default) 1: setting for recycled paper 2: setting for tracing paper |


COPIER>OPTION>BODY

| | |
|----------|---|
| TR-SP-C3 | |
| Setting | <p>Use it to set the transfer/separation output setting when the cassette 3 is used, thereby preventing faults otherwise occurring.</p> <p>0: setting for plain paper (default) 1: setting for recycled paper 2: setting for tracing paper</p> |
| TR-SP-C4 | |
| Setting | <p>Use it to set the transfer/separation output setting when the cassette 4 is used, thereby preventing faults otherwise occurring.</p> <p>0: setting for plain paper (default) 1: setting for recycled paper 2: setting for tracing paper</p> |
| TR-SP-MF | |
| Setting | <p>Use it to set the transfer/separation output setting when the manual feed tray is used, thereby preventing faults otherwise occurring.</p> <p>0: setting for plain paper (default) 1: setting for recycled paper 2: setting for tracing paper</p> |
| TR-SP-DK | |
| Setting | <p>Use it to set the transfer/separation output setting when the side paper deck is used.</p> <p>0: setting for plain power (default) 1: setting for recycled paper 2: setting for tracing paper</p> |
| DF-BLINE | |
| Setting | <p>Use it to turn ON/OFF the dust detection mechanism for ADF stream reading mode.</p> <p>0: ON (default) 1: OFF</p> |
| THICK-PR | |
| Setting | <p>Use it to set the potential control mechanism for thick paper mode.</p> <p>0: use value determined by potential control in plain paper mode (default) 1: use value determined by potential control in transparency mode</p> |
| DEV-SLOW | |
| Setting | <p>Use it to set the speed of the developing sleeve.</p> <p>0: in relation to environment 1: fixed to high speed 2: fixed to low speed (default)</p> |

| | |
|----------|---|
| TEMP-TBL | Use it to select a fixing temperature. |
| Setting | 200V 208V/230V 0: 183°C 0: 193°C 1: 193°C 1: 198°C 2: 178°C 2: 188°C 3: 173°C 3: 183°C 4: 168°C 4: 178°C |
| DRM-H-SW | Use it to set the night drum heater OFF mode. |
| Setting | 0: night drum heater ON (default) 1: monitor ambient humidity every 2 hr; turn off drum heater if absolute water content is 9 g or less |
| DEV-IDLR | Use it to set black band developing forced idle rotation mode used at time of power-on. |
| Setting | 0: execute black band developing idle rotation sequence at power-on if 2000 copies or more were made on previous day and, in addition, absolute water content is 16 g or more (default) 1: execute black band developing idle rotation sequence at power-on at all times |
| BK-BD-1 | Use it to set black band monthly remedial mode (for January). |
| Setting | 0: do not execute if absolute water content is less than 9 g execute every 200 copies if absolute water content is 9 g or more (default) 1: execute black band sequence every 60 copies 2: execute black band sequence every 20 copies 3: execute black band sequence every 6 copies |
| BK-BD-2 | Use it to set black band monthly remedial mode (for February). |
| Setting | Same as for January. |
| BK-BD-3 | Use it to set black band monthly remedial mode (for March). |
| Setting | Same as for January. |
| BK-BD-4 | Use it to set black band monthly remedial mode (for April). |
| Setting | Same as for January. |


COPIER>OPTION>BODY

| | |
|----------|---|
| BK-BD-5 | |
| Setting | Use it to set black band monthly remedial mode (for May). Same as for January. |
| BK-BD-6 | |
| Setting | Use it to set black band monthly remedial mode (for June). Same as for January. |
| BK-BD-7 | |
| Setting | Use it to set black band monthly remedial mode (for July). Same as for January. |
| BK-BD-8 | |
| Setting | Use it to set black band monthly remedial mode (for August). Same as for January. |
| BK-BD-9 | |
| Setting | Use it to set black band monthly remedial mode (for September). Same as for January. |
| BK-BD-10 | |
| Setting | Use it to set black band monthly remedial mode (for October). Same as for January. |
| BK-BD-11 | |
| Setting | Use it to set black band monthly remedial mode (for November). Same as for January. |
| BK-BD-12 | |
| Setting | Use it to set black band monthly remedial mode (for December). Same as for January. |
| PAPER-TY | |
| Setting | Use it to switch paper types. 0 to 2 0: destination (as set at time of shipment; default) 1: for 200V model 2: for 208/230V model |



| | |
|----------|---|
| VBR-M-SW | Use it to set vibration motor mode. |
| Setting | 0 to 4 0: ON only if water content is 9 g/kg (after multiple rotation) and during pre-transfer/separation charging assembly wire cleaning. 1: OFF regardless of water content (stop interval of stop sequence set at 1.5 sec) 2: ON for after multiple rotation and during STOP sequence regardless of water content 3: ON after multiple rotation and during STOP sequence only if water content is less than 9 g/kg 4: ON after multiple rotation and during STOP sequence and for transfer/separation charging assembly wire cleaning (default)  During initial multiple rotation (at first power-on), the mode is turned ON 5 times; for others, it is turned ON once. |


<USER>

Use it to make user-related machine settings.


| | |
|----------|--|
| COPY-LIM | Use it to change the upper limit imposed on the number of copies to make. |
| Setting | 1 to 999 copies (default: 999) |
| SLEEP | Use it to turn ON/OFF sleep mode. |
| Setting | 0: OFF 1: ON (default) |
| WEB-DISP | Use it to turn ON/OFF the fixing web length message. |
| Setting |  0: OFF (do not issue; but issued only when in service mode) 1: ON (issue) |
| SIZE-DET | Use it to turn ON/OFF the original size detection mechanism. |
| Setting | 0: OFF (default) 1: ON |

COPIER>OPTION>USER

| | |
|----------|--|
| W-TONER | <p>Use it to turn ON/OFF the waste toner case full warning message.</p> <p> 0: OFF (do not issue; but issue only when in service mode)</p> <p>Setting 0: OFF (do not issue; default) 1: ON (issue)</p> |
| COUNTER1 | <p>Use it to set the soft counter 1 in the control panel.</p> <p>Setting 101: total 1 (default: fixed to 101; T00-205-01)</p> <p> You cannot change the type of the soft counter 1.</p> |
| COUNTER2 | <p>Use it to change the type of the counter 2 to suit the user's or the dealer's needs.</p> <p>Setting 000 to 804 (T00-205-01; default: 000 for 100V mode, 103 for 208/230V model)</p> |
| COUNTER3 | <p>Use it to change the type of the counter 3 to suit the user's or the dealer's needs.</p> <p>Setting 000 to 804 (T00-205-01; default: 00 for 100V model, 201 for 208/230V model)</p> |
| COUNTER4 | <p>Use it to change the type of the counter 4 to suit the user's or the dealer's needs.</p> <p>Setting 000 to 804 (T00-205-01; default: 000 for 100V model, 203 for 208/230V model)</p> |
| COUNTER5 | <p>Use it to change the type of the soft counter 5 to suit the user's or the dealer's needs.</p> <p>Setting 00 to 804 (T00-205-01; default: 000)</p> |
| COUNTER6 | <p>Use it to change the type of the soft counter 6 to suit the user's or the dealer's needs.</p> <p>Setting 00 to 804 (T00-205-01; default: 000)</p> |

| | |
|----------|---|
| DATE-DSP | <p>Use it to change the mode of notation for the 208V model.</p>  For the 208V model, the default is '1'. |
| Setting | <p>0: YYYY MM/DD (default) 1: DD/MM YYYY 2: MM/DD/YYYY</p> |
| MB-CCV | <p>Use it to impose restrictions on the Box function (not used for the copier in question; by Control Card IV).</p> <p>0: for remote, enable operation and printing regardless of presence/absence of card and do not charge 1: for remote, enable operation regardless of presence/absence of card. A print job may be sent, but printing will not occur in the absence of a card; if a card is used, printing is enabled but is changed. (default) 2: for remote, disable operation. No print job may be sent.</p> |
| PR-D-SEL | <p>Use it to set the density for printing (PDL input).</p> <p>0 (light) ⇔ 4 (standard (default)) ⇔ 8 (dark)</p> |
| CONTROL | <p>Use it to enable/disable the PDL count function. (not used in the copier in question)</p> <p>0: do not count PDL output 1: count PDL output if control card is connected</p> |
| B4-L-CNT | <p>Use it to specify whether soft counter 1 through 6 should count B4 as large-size or small-size.</p> <p>0: small-size (default) 1: large-size</p> |
| TRY-STP | <p>Use it to prohibit suspension of printing in relation to the number of sheets in a stack to staple or a stack of different size sheets in the finisher.</p> <p>0: normal mode (suspend printing for number of sheets/mix of different size sheets; default) 1: suspend printing if height sensor is ON (full of paper)</p> |

COPIER>OPTION>USER

| | |
|----------|---|
| MF-LG-ST | |
| Setting | <p>Use it to display the Extra Length key for paper up to 630 mm in manual feed, or up to 630 mm in ADF feed.</p> <p>0: normal mode (default) 1: extra length mode (display key)</p> |
| SPECK-DP | |
| Setting | <p>Use it to enable/disable the warning for the result of dust detection for stream reading.</p> <p>0: disable 1: enable (default)</p> |
| CNT-DISP | |
| Setting | <p>Use it to enable/disable the indication of the serial number in response to a press on the Counter Check key.</p> <p>0: enable (default) 1: disable</p> |
| PH-D-SEL | |
| Setting | <p>Use it to see the number of lines in photo mode printing.</p> <p>0: 141 lines (default) 1: 134 lines</p> |
| COPY-JOB | |
| Setting | <p>Use it to disable copy job auto start when a card reader and the coin robot is used.</p> <p>0: enable copy job auto start (default) 1: disable copy job auto start</p> |
| NW-SCAN | |
| Setting | <p>Use it to enable/disable the network scan function.</p> <p> • You cannot make a change in the 100V model. • You can make a change in the 208/230V model; however, for the PS/PCL model, it is fixed to '1'.</p> <p>0: disable (default) 1: enable</p> |
| INS-C/S | |
| Setting | <p>Use it to expand the inserter function.</p> <p>0: cover mode (default) 1: Not used (for future expansion)</p> |
| TBIC-RNK | |
| Setting | <p>Use it to reduce uneven density occurring at specific intervals.</p> <p>1 to 5 (default: 2)</p> |

ORG-ODR

Use it to set the sequence in which double-sided originals are read when the original orientation detection mechanism is enabled.

Setting

0: back → face (default)

1: face → back

COPIER>OPTION>USER

<Soft counter Specifications>

The soft counters are grouped into the following in reference to input numbers:

| | |
|--------------------|-----------------------|
| 100s: total | 500s: scan |
| 200s: copy | 600s: box |
| 300s: print | 700s: reception print |
| 400s: copy + print | 800s: report print |

- Guide to Symbols Used in the Table -

- ○: counter enabled in copier
- 4C: full color
- Mono: mono color (Y, M, C; R, G, B; aged mono)
- Bk: black mono
- L: large size (larger than B4)
- S: small size (B4 or smaller)
- Number in Counters
 - 1: up by 1 for large-size sheet
 - 2: up by 2 for large-size sheet

You can set the machine in service mode so that B4 and larger may be counted as B4:

COPIER>OPTION>USER>B4-L-CNT.

| Support No. | Counter | Support No. | Counter |
|-------------|-------------------------------|-------------|-----------------------|
| ○ 000 | not indicated | ○ 204 | copy (S) |
| ○ 101 | total 1 | ○ 205 | copy A (total 1) |
| ○ 102 | total 2 | ○ 206 | copy A (total 2) |
| ○ 103 | total (L) | ○ 207 | copy A (L) |
| ○ 104 | total (S) | ○ 208 | copy A (S) |
| 105 | total (4C1) | ○ 209 | local copy (total 1) |
| 106 | total (4C2) | ○ 210 | local copy (total 2) |
| 107 | total (Mono) | ○ 211 | local copy (L) |
| 108 | total (Bk1) | ○ 212 | local copy (S) |
| 109 | total (Bk2) | ○ 213 | remote copy (total 1) |
| 110 | total (Mono/L) | ○ 214 | remote copy (total 2) |
| 111 | total (Mono/S) | ○ 215 | remote copy (L) |
| 112 | total (Bk/L) | ○ 216 | remote copy (S) |
| 113 | total (Bk/S) | 217 | copy (4C1) |
| ○ 114 | total | 218 | copy (4C2) |
| | (4C + Mono + Bk/double-sided) | 219 | copy (Mono1) |
| | total 1 (double-sided) | 220 | copy (Mono2) |
| ○ 115 | total 2 (double-sided) | 221 | copy (Bk1) |
| ○ 116 | L (double-sided) | 222 | copy (Bk2) |
| ○ 117 | S (double-sided) | 223 | copy (4C/L) |
| ○ 201 | copy (total 1) | 224 | copy (4C/S) |
| ○ 202 | copy (total 2) | 225 | copy (Mono/L) |
| ○ 203 | copy (L) | 226 | copy (Mono/S) |

T00-205-01

COPIER>OPTION>USER

| Support No. | Counter | Support No. | Counter |
|-------------|-----------------------------|-------------|----------------------------|
| 227 | copy (Bk/L) | ○ 331 | PDL print (total 1) |
| 228 | copy (Bk/S) | ○ 332 | PDL print (total 2) |
| 229 | copy (4C + Mono/L) | ○ 333 | PDL print (L) |
| 230 | copy (4C + Mono/S) | ○ 334 | PDL print (S) |
| 231 | copy (4C + Mono/2) | 401 | copy + print (4C/L) |
| 232 | copy (4C + Mono/1) | 402 | copy + print (4C/S) |
| 233 | copy (4C/L/double-sided) | 403 | copy + print (Bk/L) |
| 234 | copy (4C/S/double-sided) | 404 | copy + print (Bk/S) |
| 235 | copy (Mono/L/double-sided) | 405 | copy + print (Bk2) |
| 236 | copy (Mono/S/double-sided) | 406 | copy + print (Bk1) |
| 237 | copy (Bk/L/double-sided) | 407 | copy + print (4C + Mono/L) |
| 238 | copy (sided/S/double-sided) | 408 | copy + print (4C + Mono/S) |
| ○ 301 | print (total 1) | 409 | copy + print (4C + Mono/2) |
| ○ 302 | print (total 2) | 410 | copy + print (4C + Mono/1) |
| ○ 303 | print (L) | 411 | copy + print (L) |
| ○ 304 | print (S) | 412 | copy + print (S) |
| ○ 305 | print A (total 1) | 413 | copy + print (2) |
| ○ 306 | print A (total 2) | 414 | copy + print (1) |
| ○ 307 | print A (L) | 501 | scan (total 1) |
| ○ 308 | print A (S) | | copy scan (total/4) |
| 309 | print (4C1) | 502 | scan (total 2) |
| 310 | print (4C2) | 503 | scan (L) |
| 311 | print (Mono1) | | copy scan (L/4) |
| 312 | print (Mono2) | 504 | scan (S) |
| 313 | print (Bk1) | | copy scan (S/4) |
| 314 | print (Bk2) | ○ 505 | Bk scan (total 1) |
| 315 | print (4C/L) | | copy scan (Bk) |
| 316 | print (4C/S) | ○ 506 | Bk scan (total 2) |
| 317 | print (Mono/L) | ○ 507 | Bk scan (L) |
| 318 | print (Mono/S) | | copy scan (Bk/L) |
| 319 | print (Bk/L) | ○ 508 | Bk scan (S) |
| 320 | print (Bk/S) | | copy scan (Bk/S) |
| 321 | print (4C + Mono/L) | 509 | color scan (total 1) |
| 322 | print (4C + Mono/S) | | copy scan (4C) |
| 323 | print (4C + Mono/2) | 510 | color scan (total 2) |
| 324 | print (4C + Mono/1) | 511 | color scan (L) |
| 325 | print (4C/L/double-sided) | | copy scan (4C/L) |
| 326 | print (4C/S/double-sided) | 512 | color scan (S) |
| 327 | print (Mono/L/double-sided) | | copy scan (4C/S) |
| 328 | print (Mono/S/double-sided) | 513 | copy scan (L) |
| 329 | print (Bk/L/double-sided) | 514 | copy scan (S) |
| 330 | print (Bk/S/double-sided) | 515 | copy scan (total) |

T00-205-02

COPIER>OPTION>USER

| Support | No. | Counter | Support | No. | Counter |
|-----------------------|-----|---------------------------|-----------------------|-----|------------------------|
| <input type="radio"/> | 601 | box print (total 1) | <input type="radio"/> | 703 | reception print (L) |
| <input type="radio"/> | 602 | box print (total 2) | <input type="radio"/> | 704 | reception print (S) |
| <input type="radio"/> | 603 | box print (L) | <input type="radio"/> | 801 | report print (total 1) |
| <input type="radio"/> | 604 | box print (S) | <input type="radio"/> | 802 | report print (total 2) |
| <input type="radio"/> | 701 | reception print (total 1) | <input type="radio"/> | 803 | report print (L) |
| <input type="radio"/> | 702 | reception print (total 2) | <input type="radio"/> | 804 | report print (S) |

T00-205-03

<CST>

Use it to make cassette-related settings.

| | |
|--|---|
| U1-NAME U2-NAME U3-NAME U4-NAME | |
| Setting | Use it to enable/disable paper name indications in relation to the detection of paper size groups (U1 through U4). 0: OFF ('U1' through 'U4' indicated on touch panel; default) 1: ON (paper name selected under CST-U1 through CST-U4 indicated) |
| CST-U1 | |
| Setting | Use it to select a paper name to be used for paper size group U1. 22: K-LGL 31: G-LTR (default) |
| CST-U2 | |
| Setting | Use it to select a paper name to be used for paper size group U2. 24: FOOLSCAP (default) 26: OFFICIO 27: E-OFFI 28: B-OFI 33: A-LGL 36: A-OFI 37: M-OFI |
| CST-U3 | |
| Setting | Use it to select a paper name to be used for paper size group U3. 25: A-FLS 34: G-LGL (default) 35: FOLIO |
| CST-U4 | |
| Setting | Use it to select a paper name be used for paper size group U4. 18: LTR (default) 29: A-LTR |

COPIER>OPTION>CST

P-SZ-C1

P-SZ-C2

Use it to select a paper size to be used for the front deck (C1: right deck, C2: left deck).



Select a paper size, and turn off and then on the main power switch.

Setting

6: A4 (default)**15: B5****18: LTR**

<Codes and Paper Notations>

| Code | Notation | Name | Code | Notation | Name |
|------|----------|------------|------|----------|---------------------|
| 01 | A1 | A1 | 22 | K-LGL | Korean |
| 02 | A2 | A2 | | | Government |
| 03 | A3R | A3R | 23 | K-LGLR | Korean |
| 04 | A3 | A3 | | | Government R |
| 05 | A4R | A4R | 24 | FLSC | FOOLSCAP |
| 06 | A4 | A4 | 25 | A-FLS | Australian FOOLSCAP |
| 07 | A5 | A5 | 26 | OFI | OFFICIO |
| 08 | A5R | A5R | 27 | E-OFI | Ecuadorian OFFICIO |
| 09 | B1 | B1 | 28 | B-OFI | Bolivian OFFICIO |
| 10 | B2 | B2 | 29 | A-LTR | Argentine LETTER |
| 11 | B3 | B3 | 30 | A-LTRR | Argentine LETTERR |
| 12 | B4R | B4R | 31 | G-LTR | Government LETTER |
| 13 | B4 | B4 | 32 | G-LTRR | Government LETTERR |
| 14 | B5R | B5R | 33 | A-LGL | Argentine LEGAL |
| 15 | B5 | B5 | 34 | G-LGL | Government LEGAL |
| 16 | 11x17 | 11x17 | 35 | FOLI | FOLIO |
| 17 | LTRR | LETTERR | 36 | A-OFI | Argentine OFFICIO |
| 18 | LTR | LETTER | 37 | M-OFI | Mexican OFFICIO |
| 19 | STMT | STATEMENT | 38 | | |
| 20 | STMTR | STATEMENTR | 39 | | |
| 21 | LGL | LEGAL | 40 | ALL | |

T00-205-04

COPIER>OPTION>ACC>INT-FACE

<ACC>

Use it to make accessory-related settings.

COIN

Use it to turn ON/OFF the coin vendor notation. (not used in copier in question)



The 'Control Card Set' notation indicated in the control panel will be replaced with the 'Coin Vendor' notation.

Setting

0: OFF (default)

1: ON (for coin vendor)

DK-P

Use it to select a paper size to be used for the side paper deck.

Setting

0: A4 (default)

1: B5

2: LTR

<INT-FACE>

Use it to make settings if an external controller is connected.

IMG-CONT

Use it to enable/disable the external controller detection switch.


Setting

0: external controller absent (default)

1: external controller present

2.6 TEST

The following shows the Test screen (COPIER>TEST).

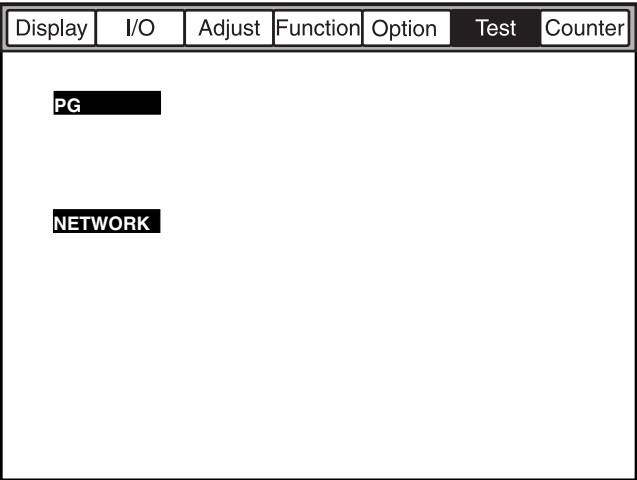

F00-206-01

<PG>

Use it to select a type of test printing and generate it.


| | |
|---------|--|
| TYPE | Select the item, enter the type No. of the test print, and press the Start key to print it out. |
| Setting | 0: normal print, 1 to 9: T00-206-01 |
| TXPH | Use it to switch between text mode and photo mode for test printing. |
| Setting | 0: text mode, 1: photo mode |
| PG_PICK | Use it to select the source of paper for test printing. |
| Setting | 1: right deck (default), 2: left deck, 3: cassette 3, 4: cassette 4, 5: side paper deck, 6 to 8: not used |

<TYPE Input No./Test Print Type>

| Input No. | Description | Input No. | Description |
|-----------|--|-----------|----------------------------------|
| 0 | image from CCD (normal printing) | 4 | blank |
| 1 | grid | 5 | halftone |
| 2 | 17 gradations (with image correction) | 6 | solid black |
| 3 | 17-gradation (without image correction) | 7 | vertical straight lines |
| | | 8 | horizontal straight lines |
| | | 9 | halftone (for laser delay check) |


T00-206-01

1 Grid (PG-TYPE1)

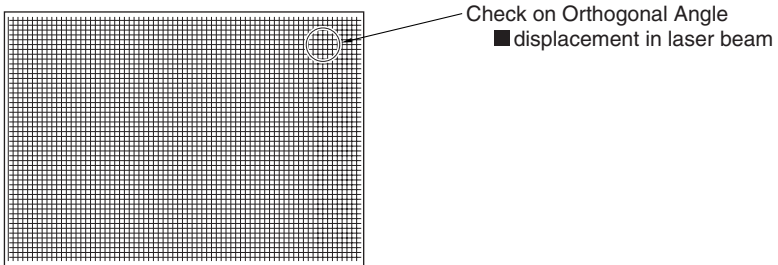

F00-206-02


2 17-Gradation (with image correction; PG-TYPE2)

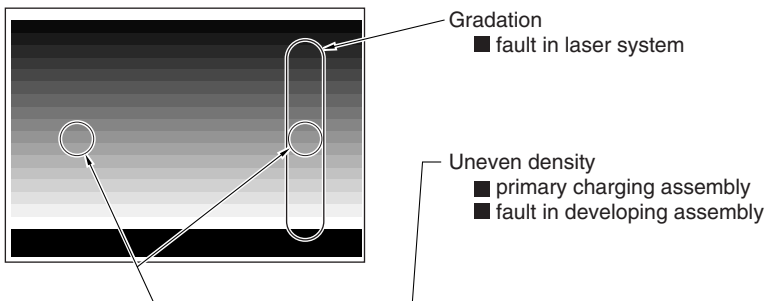

F00-206-03


COPIER>TEST>PG

3 17-Gradation (without image correction; PG-TYPE3)

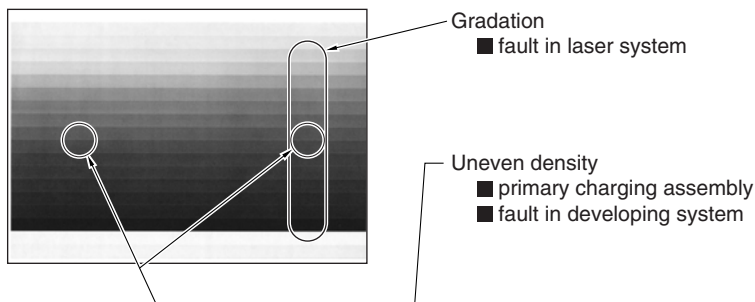

F00-206-04

4 Blank (PG-TYPE4)

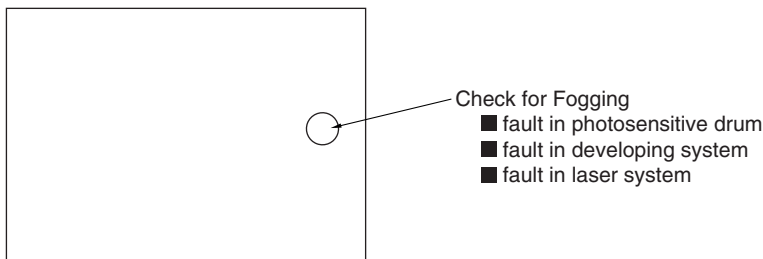


F00-206-05

5 Halftone (PG-TYPE5)

- Halftone Subjected to Density Correction Block (image processing)

In addition to the performance of the image formation system, such density correction mechanisms as AE affect the result.

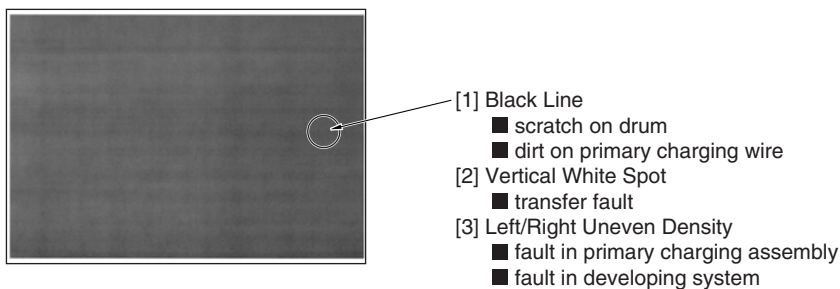

F00-206-06


6 Solid Black (PG-TYPE6)



- [1] White Spot
 ■ transfer fault
- [2] White Line
 ■ shading fault
 (e.g., dirt on standard white plate)

F00-206-07


7 Vertical Lines (PG-TYPE7)

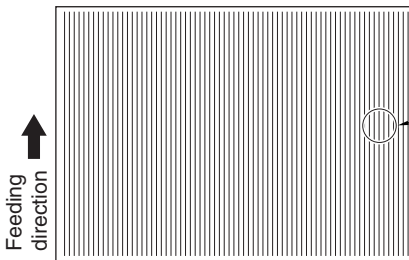

- Straight lines
 (sub scanning direction)
 ■ BD fault

F00-206-08

8 Horizontal Lines (PG-TYPE8)

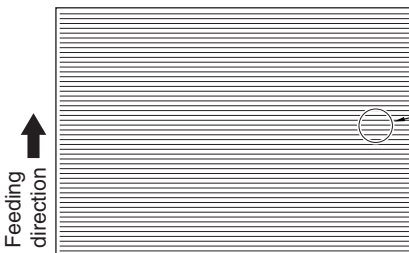

- Straight lines
 (main scanning direction)
 ■ displacement in laser beam


F00-206-09

COPIER>TEST>PG

9 Halftone (for laser delay check; PG-TYPE9)

[A] Laser A scanning Line

[B] Laser B scanning Line

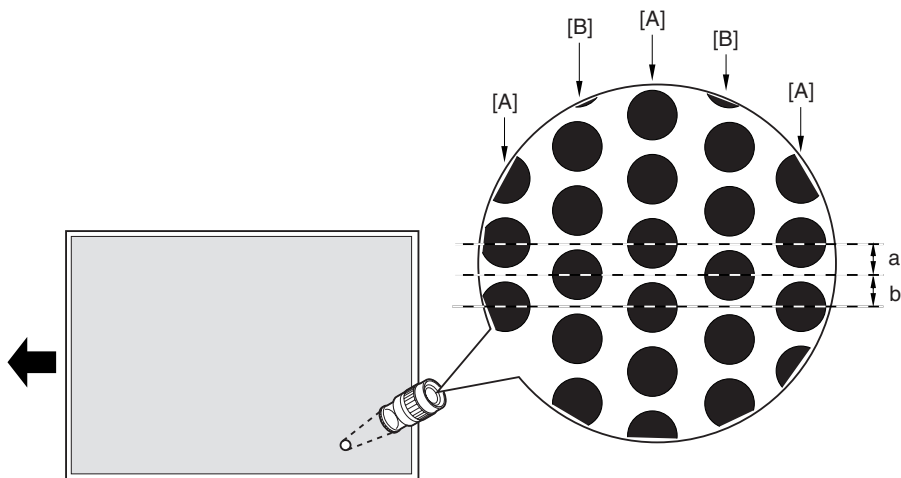

F00-206-10



Memo

Laser Delay Check

Use a magnifying glass (CK-0056-000) to make sure that the intervals between a and b in the figure are even; otherwise, adjust the setting using the following: COPIER>ADJUST>LASER>DLY-FINE.

- COPIER.>ADJUST>LASER>DLY-FINE

Range of adjustment: -16 to 16

(in 1/16 pixel; 1 pixel equals to sum of a and b)

<NETWORK>

Use it to check the network-related connections.

PING

Use it to check the connection between the copier and the network (TCP/IP only).



Use to check the connection to the network at time of installation and when a fault occurs when a connection is made to the network.

| | | | | | | |
|---------|-----|--------|----------|--------|------|---------|
| Display | I/O | Adjust | Function | Option | Test | Counter |
|---------|-----|--------|----------|--------|------|---------|

<NETWORK>
< 1/1 >
<READY >

Result (OK/NG)

0 . 0 . 0 . 0

IP address input

←

→

+/-

OK

F00-206-11

<Using the Mode>

(at time of installation and connection fault)

- 1) Turn off the main power switch.
- 2) Connect the network cable, and turn on the main power switch.
- 3) Inform the user's system administrator that the copier has been installed, and ask him/her to set up the network.
- 4) Inform the system administrator that you are going to check the network connection, and obtain the remote address (IP address of a PC terminal note user network) from which PING is entered.

COPIER>TEST>NETWORK

- 5) Make the following selections in service mode:
COPIER>TEST>NETWORK>PING. Enter the IP address obtained in step 4); then, press the OK key and then the Start key.
- If the connection to the network is normal, 'OK' will be indicated. (end of work)
 - If 'NG' is indicated, check the physical connection of the network cable; if normal, go to step 6).
If a fault is found in the network cable connection, correct it, and go to step 5).
- 6) Make the following selections in service mode:
COPIER>TEST>NETWORK>PING. Then, enter the loop-back address* (127.0.0.1); press the OK key and then the Start key.
- If 'NG' is indicated, suspect a fault in the TCP/IP setting; go back to step 3).
 - If 'OK' is indicated, assume that the sender's TCP/IP is free of a fault. Instead, suspect a fault in the connection of the network interface board (NIC) or on the NIC itself; go to step 7).
- * The signal returns without reaching the NIC, enabling a check on the sender's TCP/IP setting.
- 7) Make the following selections in service mode:
COPIER>TEST>NETWORK>PING. Then, enter the load host address (IP address of the sender), and press the OK key.
- If 'NG' is indicated, suspect a fault in the NIC connector or on the NIC itself; check the connection of the NIC, or replace it.
 - If 'OK' is indicated, assume that the network settings of the sender or the NIC is free of a fault.
- In this case, suspect a fault in the network environment: communicate to the system administrator for correction.

2.7 COUNTER

The following shows the Counter screen (COPIER>COUNTER).

| Display | I/O | Adjust | Function | Option | Test | Counter |
|----------------|-----|--------|----------|--------|------|---------|
| TOTAL | | | | | | |
| SCANNER | | | | | | |
| PICK-UP | | | | | | |
| PRDC-1 | | | | | | |
| FEEDER | | | | | | |
| JAM | | | | | | |
| DRBL-1 | | | | | | |
| MISC | | | | | | |
| DRBL-2 | | | | | | |

F00-207-01

<Clearing the Counter Reading>

- 1) Select to highlight the item to clear.
- 2) Press the Clear key in the control panel.
 - The counter will be initialized to '00000000'.

<Distinguishing Between Small-Size and Large-Size in the Mode>

Large (L) size: larger than A4, LTR

Small (S) size: A4, LTR or smaller

COPIER>COUNTER

<Guide to the Periodically Replaced Parts and Durables Counters>

The copier is equipped with periodically replaced parts/durables counters (PRDC-1/DRBL-1/DRBL-2), providing estimates for parts replacement.

<EX.>

PRM-WIRE / 00000027 / 00500000 / 0% !! 000082
[1] [2] [3] [4] [5] [6]

- [1] indicates a part name; in the example, the primary charging wire.
- [2] indicates the counter reading (actual number of sheets handled); be sure to press the Clear key to reset the reading.
- [3] indicates the limit (timing of replacement in terms of the number of sheets); use the keypad to change; after making a change, press the OK key.
- [4] indicates the ratio of a counter reading in relation to the limit.
- [5] indicates an exclamation mark (!) if the ratio is between 90% and 100%; 2 marks if 100% or higher; in the example, no mark will be indicated.
- [6] indicates the number of days to the time of replacement; in the example, 82 days.

List of COUNTER Items**Level 1: COUNTER****Mode**

Level 2: TOTAL

| | |
|-------------------|-----------------------------|
| Level 3: SERVICE1 | total counter 1 for service |
| SERVICE2 | total counter 2 for service |
| COPY | copy counter |
| PDL-PRT | PDL print counter |
| RMT-PRT | remote copy/print counter |
| BOX-PRT | Box print counter |
| RPT-PRT | report print counter |
| 2-SIDE | double-sided print counter |
| SCAN | scan counter |

Level 2: SCANNER

| | |
|-----------------|--------------------------------|
| Level 3: SC-TTL | scanner total scan counter |
| SC-STRM | scanner stream reading counter |
| SC-NRM | scanner fixed reading counter |

Level 2: PICK-UP

| | |
|-------------|--------------------------------------|
| Level 3: C1 | right deck pickup counter |
| C2 | left deck pick counter |
| C3 | cassette 3 pickup counter |
| C4 | cassette 4 pickup counter |
| MF | manual feed tray pickup counter |
| DK | side paper deck pickup counter |
| 2-SIDE | double-sided 2nd side pickup counter |

Level 2: FEEDER

| | |
|---------------|---|
| Level 3: FEED | feeder pickup total counter |
| L-FEED | large size original feeder pickup total counter |
| S-FEED | small-size original feeder pickup total counter |
| TTL-MF | manual feed pickup total counter |

Level 2: JAM

| | |
|----------------|-------------------------------|
| Level 3: TOTAL | copier total jam counter |
| FEEDER | feeder (ADF) jam counter |
| SORTER | sorter (finisher) jam counter |
| 2-SIDE | duplex jam counter |
| MF | manual feed tray jam counter |
| C1 | right deck jam counter |
| C2 | left deck jam counter |
| C3 | cassette 3 jam counter |
| C4 | cassette 4 jam counter |
| DK | side paper deck jam counter |

Level 2: MISC

| | |
|------------------|---|
| Level 3: FIX-WEB | fixing web counter (Be sure to clear the reading after replacing the fixing web.) |
| WST-TNR | waste toner counter (Be sure to clear the reading after disposing of the waste toner.) |
| R-PD-SEN | right deck pickup sensor |
| L-PD-SEN | left deck pickup sensor |
| C3-SEN | cassette 3 pickup sensor |
| C4-SEN | cassette 4 pickup sensor |
| SDPD-SEN | deck pickup sensor |
| RK-F-SEN | right deck draw sensor |
| LK-F-SEN | left deck draw sensor |
| VPT3-SEN | vertical path 3 sensor |
| VPT4-SEN | vertical path 4 sensor |
| SP-F-SEN | deck feed sensor |

Level 2: PRDC-1

| | |
|-------------------|--|
| Level 3: PRM-WIRE | primary charging wire counter |
| PRM-GRID | primary grid wire counter |
| PO-WIRE | pre-transfer charging wire counter |
| TR-WIRE | transfer charging wire counter |
| PRM-CLN | primary charging wire cleaner counter |
| TR-CLN | transfer charging wire cleaner counter |
| PO-CLN | pre-transfer charging wire cleaner counter |
| FIX-TH1 | fixing main thermistor (TH1) counter |
| FIX-TH2 | fixing sub thermistor (TH2) counter |
| FX-TSW | fixing thermal switch (TP1) counter |
| OZ-FIL1 | ozone filter counter |
| AR-FIL1 | air filter counter |

COPIER>COUNTER

Level 2: DRBL-1

| | |
|------------------|--|
| Level 3: SCN-LMP | scanning lamp activation counter (in sec) |
| PRE-LMP | pre-exposure lamp activation counter |
| LSR-DRV | laser drive counter |
| LSR-MTR | laser scanner motor counter |
| LSR-FAN | laser motor cooling fan counter |
| LSR-FAN | laser cooling fan 1 counter |
| SC-M-FAN | scanner motor cooling fan counter |
| STRM-FAN | stream reading fan counter |
| LSR-FAN2 | laser cooling fan 2 counter |
| SCN-MTR | scanner motor counter |
| PRM-UNIT | primary charging assembly counter |
| PO-UNIT | pre-transfer charging assembly counter |
| POST-FAN | pre-transfer charging assembly fan counter |
| PO-SCRPR | pre-transfer charging assembly scraper counter |
| TR-UNIT | transfer charging assembly counter |
| SP-FAN | separation fan counter |
| P-TR-EXP | pre-transfer exposure lamp counter |
| SP-FAN | separation heat discharge fan counter |
| DRM-MTR | drum motor counter |
| DRM-FAN | drum fan counter |
| CLN-BLD | cleaner blade counter |
| SP-CLAW | cleaner separation claw counter |
| DVG-CYL | developing cylinder counter |
| DVG-ROLL | developing assembly roll counter |
| TNR-F-CL | developing assembly magnet roller clutch counter |
| DEV-1CL | developing cylinder clutch counter |
| DEV-2CL | developing assembly cylinder clutch counter |
| TNR-FD-M | toner feed motor counter |
| VBR-MTR | vibration motor counter |
| C3-PU-RL | cassette 3 pickup roller counter |
| C3-SP-RL | cassette 3 separation roller counter |
| C3-PU-CL | cassette 3 pickup clutch counter |
| C4-PU-RL | cassette 4 pickup roller counter |
| C4-SP-RL | cassette 4 separation roller counter |
| C4-PU-CL | cassette 4 pickup clutch counter |
| LD-PU-RL | left deck pickup roller counter |
| LD-SP-RL | left deck separation roller counter |
| LD-PU-CL | left deck pickup clutch counter |
| RD-SP-RL | right deck separation roller counter |
| RD-PU-CL | right deck pickup clutch counter |
| RD-PU-RL | right deck feed roller counter |
| M-PU-RL | manual feed tray pickup roller counter |
| M-SP-RL | manual feed tray separation roller counter |

COPIER>COUNTER

| | |
|----------|---|
| M-PU-CL | manual feed tray pickup clutch counter |
| PICK-MTR | pickup motor counter |
| REG-CL | registration clutch counter |
| VP1-CL | vertical path 1 clutch counter |
| VP2-CL | vertical path 2 clutch counter |
| LD-PL-CL | left deck feed clutch counter |
| RD-PL-CL | right deck feed clutch counter |
| C3-PL-CL | cassette 3 feed clutch counter |
| C4-PL-CL | cassette 4 feed clutch counter |
| M-PL-CL | manual feed tray pickup clutch counter |
| FEED-MTR | feed motor counter |
| REG-B-CL | pre-registration clutch counter |
| P-R-B-CL | pre-registration brake clutch counter |
| DL-SW-CL | delivery speed switch-over clutch counter |
| C3-PU-SL | cassette 3 pickup solenoid counter |
| C4-PU-CL | cassette 4 pickup solenoid counter |
| LD-PU-SL | left deck pickup solenoid counter |
| RD-PU-SL | right deck pickup solenoid counter |
| M-PU-SL | manual feed tray pickup solenoid counter |
| RV-FP-SL | reversing flapper solenoid counter |
| DUP-R-CL | lower feed right clutch counter |
| DUP-C-CL | lower feed middle clutch counter |
| DUP-RV-M | duplex reversal motor counter |
| DUP-FD-M | duplex feed motor counter |
| DP-FAN | duplex feed fan counter |
| FX-UP-RL | fixing upper roller counter |
| FX-LW-RL | fixing lower roller counter |
| FX-MTR | fixing motor counter |
| FHTR-M | fixing main heater counter |
| FHTR-S | fixing sub heater counter |
| FX-IN-BS | fixing insulating bush counter |
| FX-FAN | fixing fan counter |
| FIX-WEB | fixing web counter |
| FX-BRG-U | fixing upper separation counter |
| FX-BRG-L | fixing lower bearing counter |
| DLV-UCLW | delivery upper separation claw counter |
| DLV-LCLW | delivery lower separation claw counter |
| CURL-FAN | curl-reducing fan counter |
| DEV-FAN | developing fan counter |
| DV-FP-SL | delivery flapper solenoid counter |
| DLV-FAN | delivery adhesion prevention fan counter |
| PWS-FAN | power supply fan counter |
| INV-FAN | inverter cooling fan counter |

COPIER>COUNTER

Level 2: DRBL-2

| | |
|-------------------|---|
| Level 3: DF-PU-RL | ADF pickup roller counter |
| DF-FD-RL | ADF feed roller counter |
| PD-FD-RL | side paper deck pickup roller counter |
| PD-SP-RL | side paper deck separation roller counter |
| PD-PU-CL | side paper deck pickup clutch counter |
| PD-PL-CL | side paper deck feed clutch counter |
| PD-PU-MR | side paper deck pickup motor counter |
| PD-PU-SL | side paper deck pickup solenoid counter |
| NON-SORT | non-sort path counter |
| SORT | sort path counter |
| FIN-STPR | finisher staple counter |
| SADDLE | saddle counter |
| FOLD | folder fold path counter |
| SDL-STPL | saddle staple counter |
| PUNCH | punch counter |
| INSERTER | inserter counter |
| U-L-PTH1 | finisher upper/lower path counter 1 |
| U-L-PTH2 | finisher upper/lower path counter 2 |
| SORT-2 | finisher lower path counter |
| INSRTR2 | finisher inserter 2 counter |
| STCK | finisher stack processing counter |
| SDL-STCK | finisher saddle stack processing counter |

3 FEEDER

3.1 DISPLAY

FEEDSIZE

Use it to indicate the size of an original detected by the ADF.

3.2 ADJUST

DOCST

Range of adjustment

Use it to adjust the original stop position when the ADF is used (original tray pickup).




- A higher value decreases the leading edge margin.
- The data is retained by the ADF controller PCB.

-30 to 30 (unit: 0.5 mm)

<Using the Mode>

- 1) Place an original in the original tray.
- 2) Select the item, check the setting, and press the OK key.
- 3) Press the OK key. The original will be picked up.
- 4) Open the ADF, and check the original stop position.
- 5) Press the OK key. The original will be delivered.

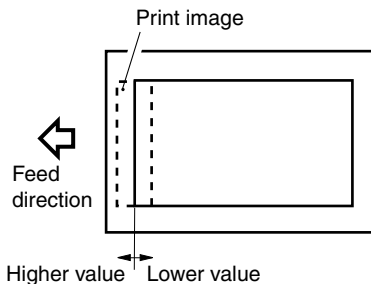

F00-302-01

DOCST-M

Range of adjustment


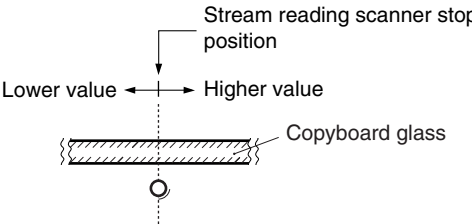

Use it to adjust the original stop position when the ADF is used (manual feed tray).

-30 to 30 (unit: 0.5 mm)

Using the Mode

Same as in FEEDER>ADJUST>DOCST.

FEEDER>DISPLAY/ADJUST

| | |
|----------|--|
| LA-SPEED | <p>Use it to adjust the original feed speed in ADF stream reading mode.</p> <div>Memo</div> <ul style="list-style-type: none">• A higher value increases the speed.• The data is retained by the ADF controller PCB. <p>Range of adjustment -30 to 30 (unit: 0.1 %)</p> |
| STRD-S | <p>Use it to adjust the scanner stop position for stream reading mode (small-size).</p> <p>Range of adjustment -25 to 25 (unit: 0.1 mm)</p> <div></div> <p>F00-302-02</p> |
| STRD-L | <p>Use it to adjust the scanner stop position for stream reading mode (large-size).</p> <p>Range of adjustment -25 to 25 (unit: 0.1 mm)</p> <p><Using the Mode> Same as in FEEDER>ADJUST>STRD-S.</p> |
| RVM-SPD | <p>Use it to adjust the speed of the reversal motor.</p> <div>Memo</div> <p>A higher value increases the speed.</p> <p>Range of adjustment -30 to 30 (unit: 0.1 %)</p> |

3.3 FUNCTION

SENS-IN

Use it to adjust the sensitivity of each sensor of the ADF.



Be sure to clean the sensor first.

<Using the Mode>

- 1) Select the item, and press the OK key.
- 2) Set that the machine stops automatically after adjustment.

BLT-CLN

Use it to clean the separation belt of the ADF.

<Using the Mode>

- 1) Select the item, and press the OK key.
- 2) Set that the machine drives the separation belt. Press the Stop key to stop the operation.

REG-CLN


Use it to clean the registration roller of the ADF.

<Using the Mode>

- 1) Select the mode, and press the OK key.
- 2) Set that the machine rotates the registration roller. Press the Stop key to stop the operation.

FEEDER>OPTION

3.4 OPTION

| | |
|----------|---|
| DOC-F-SW | |
| Setting | Use it to turn ON/OFF stream reading mode. 0: enable stream reading (default) 1: enable stream reading for small-size only 2: disable stream reading |
| SIZE-SW | |
| Setting | Use to turn ON/OFF detection of a mix of AB and Inch paper sizes. 0: disable detection (default) 1: enable detection  Detection is enabled only when '3: AB/INCH' is selected under COPIER>OPTION>BODY>MODEL-SZ. |
| SLW-SPRT | |
| Setting | Use it to decelerate the separation speed for original pickup. 0: normal mode (default) 1: deceleration mode |

4 SORTER

4.1 ADJUST

PNCH-HLE

Use it to adjust the punch hole position (paper feed direction) when the puncher unit is used.




A higher value moves the punch hole toward the leading edge of paper (middle of paper).

Range of adjustment

-23 to 23 (unit: about 0.5 mm)

<Using the Mode>

- 1) Make a print of the Test Chart, and check the position of the holes.
- 2) Select the item, and change the setting to adjust.
- 3) Press the OK key.
- 4) Make a print of the Test Chart once again, and check to see if the position of the holes is as indicated.

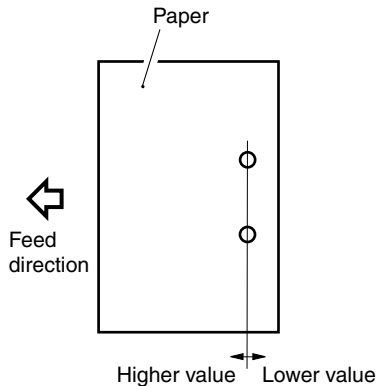

F00-401-01

SORTER>OPTION

4.2 OPTION


BLNK-SW

Setting

Use it to set the margin width (W) for both sides of the folding line when the saddle stitcher is used.

0: normal width (5 mm; default)

1: larger width (10 mm)

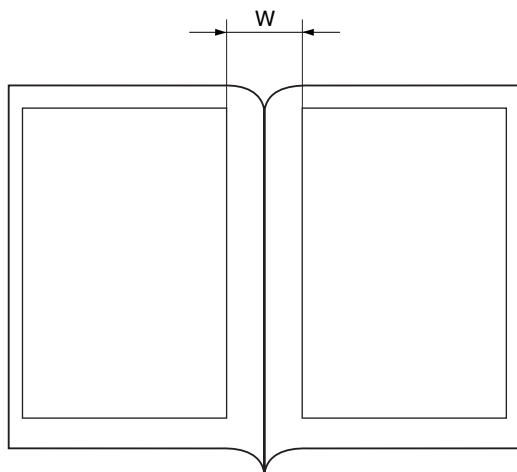

F00-402-01

5 BOARD

5.1 OPTION

| | |
|----------|--|
| MENUE-1 | Use it to display Level 1 of the Printer Settings menu. |
| Setting | 0: disable display (default) 1: enable display |
| MENUE-2 | Use it to display Level 2 of the Printer Settings menu. |
| Setting | 0: disable display (default) 1: enable display |
| MENUE-3 | Use it to display Level 3 of the Printer Settings menu. |
| Setting | 0: disable display (default) 1: enable display |
| MENUE-4 | Use it to display Level 4 of the Printer Settings menu. |
| Setting | 0: disable display (default) 1: enable display |
| PCI1-OFF | Use it to turn OFF the function of the slot 1 (PCI) when the board fitted to it goes out of order. |
| Setting | 0: normal (default) 1: OFF (do not use board function) |
| PCI2-OFF | Use it to turn OFF the function of the slot 2 (PCI) when the board fitted to it goes out of order. |
| Setting | 0: normal (default) 1: OFF (do not use board function) |
| PCI3-OFF | Use it to turn OFF the function of the slot 3 (PCI) when the board fitted to it goes out of order. |
| Setting | 0: normal (default) 1: OFF (do not use the board function) |

Error Code

1 Error Codes

1.1 Outline of Error Codes

The CPU on the machine's main controller PCB and DC controller PCB is equipped with a self diagnostic mechanism that monitors the condition of the machine (especially of the sensors); upon detection of a fault, it indicates the fact in the control panel using an error code.

A description of each code and the timing of its detection are as discussed hereafter; the suffix that may follow each code is a detail code, which may be checked in service mode (COPIER>DISPLAY>JAM/ERR).

The error codes are grouped as follows according to the items they refer to:

| | |
|--------------|--|
| E000 to E399 | error code related to the copier |
| E400 to E499 | error code related to the ADF |
| E500 to E514 | error code related to the finisher |
| E515 | error code related to the inserter |
| E518 | error code related to the paper folding unit |
| E530 to E595 | error code related to the finisher |
| E5F0 to E5F9 | error code related to the saddle stitch assembly |
| E601 to E830 | error code related to the copier |



When the self diagnostic mechanism has gone ON, the machine may be reset by turning its power switch. This, however, does not apply to E000, E001, E002, E003, E004, E005, E013, E020, or E717, indicating a fault which can lead to serious consequences if the machine is reset without removing the cause (i.e., melting thermistor, which will overheat the fixing roller, or overflowing of toner from the hopper).

If the code is from E000 to E003, the power switch will go OFF in about 30 sec if it is turned ON without resetting; in the case of E004, the power switch will go OFF in about 3 sec after indicating E000 if the power switch is turned ON without resetting.

You will have to clear the data in the RAM on the DC controller PCB for the following: E000, E001, E002, E003, E004, E005, E013, E020, and E717.

<Clearing Errors>

- 1) Execute the following in service mode: COPIER>FUNCTION>CLEAR>ERR.
- 2) Press the Reset key twice to return to the Copy Mode screen.
- 3) Turn off and the on the main power switch.

• Copier (from E000 to E399)

| | |
|-------------|---|
| E000 | |
| Main cause | The main thermistor (TH1) has poor contact or an open circuit. The thermal switch (TP1) has an open circuit. The fixing heater has an open circuit. The SSR is faulty. The DC controller PCB is faulty. |
| Condition | <p>0000 When the main power switch is turned on, the reading of the main thermistor does not reach 70°C within 3 min 30 sec.</p> <p>0010 The power is turned off and then on without clearing the error.</p> |
| Caution | You must clear the error in service mode (COPIER>FUNCTION>CLEAR>ERR). |
| E001 | |
| Main cause | The main thermistor (TH1) has a short circuit. The sub thermistor (TH2) detects overheating. The SSR is faulty. The DC controller PCB is faulty. |
| Condition | <p>0001 The hardware port detects a fault.</p> <p>0002 Either the main thermistor or the sub thermistor detects 230°C or higher for 2 sec.</p> <p>0003 The reading of the main thermistor is higher than that of the sub thermistor by 50°C or more for 1 sec.</p> <p>0004 The reading of the main thermistor is lower than that of the sub thermistor by 50°C or more for 1 sec.</p> <p>0010 The power is turned off and then on without clearing the error.</p> |
| Caution | You must clear the error in service mode (COPIER>FUNCTION>CLEAR>ERR). |

| | |
|-------------|---|
| E002 | |
| Main cause | The main thermistor (TH1) has poor contact or an open circuit. The thermal switch (TP1) has an open circuit. The fixing heater has an open circuit. The SSR is faulty. The DC controller PCB is faulty. |
| Condition | <p>0000 The reading of the main thermistor (TH1) does not reach 100°C 2 min 30 sec after it has exceeded 70°C.</p> <p>0001 The reading of the main thermistor does not reach 150°C within 2 min 30 sec after it has exceeded 100°C.</p> <p>0010 The power has been turned off and then on without clearing the error.</p> |
| Caution | You will have to clear the error in service mode (COPIER>FUNCTION>CLEAR>ERR). |
| E003 | |
| Main cause | The main thermistor (TH1) has poor contact or an open circuit. The thermal switch (TP1) has an open circuit. The fixing heater has an open circuit. The SSR is faulty. The DC controller PCB is faulty. |
| Condition | <p>0000 The reading of the main thermistor is 70°C or lower for 2 sec or more after it has reached 100°C.</p> <p>0010 The power has been turned off and then on without clearing the error.</p> |
| Caution | You will have to clear the error in service mode (COPIER>FUNCTION>CLEAR>ERR). |
| E004 | |
| Main cause | The SSR has a short circuit. The DC controller PCB is faulty. |
| Condition | <p>0000 The SSR used to drive the fixing heater has a short circuit (detection by hardware circuitry).</p> |
| Caution | You will have to clear the error in service mode (COPIER>FUNCTION>CLEAR>ERR). |

| | |
|-------------|---|
| E005 | <p>The fixing web has been taken up. The fixing web length sensor (PS7) is faulty. The DC controller PCB is faulty.</p> <p>0000 The length of the fixing web that has been taken up is more than a specific value and the fixing web length sensor (PS7) has detected the absence of the web for 5 sec or more.</p> <p>0010 The power is turned off and then on without clearing the error.</p> <p>Caution After replacing the fixing web, you will have to clear the two web counters in service mode (COPIER>COUNTER>MISC>FIX-WEB and COPIER>COUNTER>DRBL-1>FIX-WEB).</p> |
| E010 | <p>The main motor (M1) is faulty. The DC controller PCB is faulty.</p> <p>0000 No clock pulse arrive for 2 sec or more after the main motor drive signal (MMFG) has been generated.</p> |
| E012 | <p>The drum motor (M0) is faulty. The DC controller PCB is faulty.</p> <p>0000 No clock pulse arrives for 2 sec or more after the drum motor drive signal (DMFG) has been generated.</p> |
| E013 | <p>The waste toner feedscrew is faulty. The waste toner clog detecting switch (MSW2) is faulty. The DC controller PCB is faulty.</p> <p>0000 The waste toner feedscrew fails to rotate normally, and the switch MSW2 is pressed multiple times within a specific period of time.</p> <p>0010 The power is tuned off and then on without clearing the error.</p> |
| E014 | <p>The fixing motor (M3) is faulty. The DC controller PCB is faulty.</p> <p>0000 The motor clock signal is not detected for 2 sec or more after the fixing motor drive signal has been generated.</p> |

| | |
|-------------|---|
| E015 | |
| Main cause | The pickup motor (M2) is faulty. The DC controller PCB is faulty. |
| Condition | 0000 The motor lock signal is not detected for 2 sec or more after the pickup motor drive signal has been generated. |
| E019 | |
| Main cause | The waste toner case is full. The waste toner case full sensor (PS19) is faulty. The DC controller PCB is faulty. |
| Condition | 0000 More than a specific number of pages are printed without disposing of the waste toner after the waste toner case has been found to be full. |
| E020 | |
| Main cause | The hopper connector is disconnected. The toner feed motor (M18) inside the hopper is faulty. The magnet roller drive clutch (CL1) inside the hopper is faulty. The toner sensor (TS3) inside the developing assembly is faulty. The DC controller PCB is faulty. |
| Condition | 0000 Although the developing assembly is supplied with toner, the absence of toner inside it is detected for 3 sec or more. 0010 The power is turned off and then on without clearing the error. |
| E025 | |
| Main cause | The toner feed motor (M6) inside the cartridge is faulty. The DC controller PCB is faulty. |
| Condition | 0000 The DC controller PCB detects an overcurrent flowing to the toner feed motor (M6) inside the cartridge for 10 sec or more twice. (In response to the first detection, it indicates the message "Shake the Toner Case, and Set.") |

| | |
|-------------|---|
| E032 | |
| Main cause | The copy data controller or the NE controller is faulty. The main controller PCB is faulty. |
| Condition | 0000 The copy data controller or the NE controller are disconnected after they have once been connected. |
| E043 | |
| Main cause | The side paper deck main motor (M101) is faulty. The side deck driver PCB is faulty. The DC controller PCB is faulty. |
| Condition | 0000 The PLL lock signal (DMPLK) does not arrive for 2 sec or more after the side paper deck main motor drive signal has been generated. |
| E051 | |
| Main cause | The horizontal registration sensor (PS18) is faulty. The horizontal registration motor (M15) is faulty. The DC controller PCB is faulty. |
| Condition | <p>0001 Departure from home position is not detected within 5 sec during a horizontal registration home position search.</p> <p>0002 Home position is not detected within 5 sec during a horizontal registration home position search.</p> <p>0003 The horizontal registration detection movement for the preceding sheet does not end within 5 sec at the start of a horizontal registration search during printing.</p> |
| E065 | |
| Main cause | The primary charging assembly is faulty. The HV-DC PCB is faulty. The wiring is faulty (short circuit, open circuit). |
| Condition | 0000 An error (leakage) is detected in the high-voltage output to the primary charging assembly. |

| | |
|-------------|--|
| E067 | <p>The HV-DC PCB is faulty. The HV-AC PCB is faulty. The wiring is faulty (short circuit, open circuit).</p> |
| Main cause | |
| Condition | <p>0000 An error is detected in two or more of the following at the same time: the primary high voltage, pre-transfer high voltage, transfer high voltage, and separation high voltage. Or, an error (leakage) in the high-voltage output to the separation charging assembly is detected.</p> |
| E068 | <p>The HV-DC PCB is faulty. The HV-AC PCB is faulty. The separation charging assembly is faulty. The wiring is faulty (short circuit, open circuit).</p> |
| Main cause | |
| Condition | <p>0000 An error (leakage) to the high-voltage output to the separation charging assembly is detected.</p> |
| E069 | <p>The HV-DC PCB is faulty. The HV-AC PCB is faulty. The transfer charging assembly is faulty. The wiring is faulty (short circuit, open circuit).</p> |
| Main cause | |
| Condition | <p>0000 An error (leakage) is detected in the high-voltage output to the transfer charging assembly.</p> |
| E100 | <p>The BD PCB is faulty. The DC controller PCB is faulty. The laser unit is faulty. The laser driver PCB 1 is faulty. The laser driver PCB 2 is faulty. The wiring is faulty (short circuit, open circuit).</p> |
| Main cause | |
| Condition | <p>0000 The BD signal does not arrive within 1 sec after the laser drive signal has been generated. Or, the BD signal does not arrive for 1 sec or more while the laser remains ON.</p> |

| | |
|-------------|--|
| E110 | |
| Main cause | The laser scanner motor (M4) is faulty. The laser scanner drive PCB is faulty. The wiring is faulty (short circuit, open circuit). The DC controller PCB is faulty. |
| Condition | 0000 The constant speed rotation signal (LM-RDY) does not arrive for 20 sec or more after the laser scanner motor (M4) drive signal has been generated. |
| E111 | |
| Main cause | The laser motor cooling fan (FM1) is faulty. The DC controller PCB is faulty. The wiring is faulty (short circuit, open circuit). |
| Condition | 0000 The lock signal arrives for 5 sec or more although the laser motor cooling fan (FM1) is being driven. |
| E121 | |
| Main cause | The laser cooling fan 1 (FM3) or the laser cooling fan 2 (FM5) is faulty. The DC controller PCB is faulty. The wiring is faulty (short circuit, open circuit). |
| Condition | 0001 The lock signal arrives for 5 sec or more although the laser cooling fan 1 (FM3) is being driven. 0002 The lock signal arrives for 5 sec or more although the laser cooling fan 2 (FM5) is being driven. |
| E202 | |
| Main cause | The scanner HP sensor (PS1) is faulty. The scanner motor (M5) is faulty. The reader controller PCB is faulty. The copyboard glass is displaced. |
| Condition | 0000 Scanner home position cannot be detected within a specific period of time after the power switch is turned on or the Start key is pressed. |
| Caution | No code will be indicated. The keys will be locked. You can check the code in service mode (COPIER>DISPLAY>ERR). |

| | |
|-------------|---|
| E204 | |
| Main cause | The scanner motor (M5) is faulty. The image leading edge sensor (PS3) is faulty. The ADF controller PCB is faulty. The reader controller PCB is faulty. |
| Condition | 0000 During forward movement in fixed reading mode or during a home position search, the image leading signal does not occur; or, in stream reading mode, the image leading edge signal does not arrive from the ADF controller PCB. |
| Caution | No code will be indicated. The keys will be locked. You can check the code in service mode (COPIER>DISPLAY>ERR). |
| E211 | |
| Main cause | The thermistor (TH3) inside the fluorescent lamp heater is faulty. The light adjustment control PCB is faulty. The reader controller PCB is faulty. The wiring is faulty (short circuit, open circuit). |
| Condition | 0000 While the power is ON, the ambient temperature of the fluorescent lamp does not exceed 10°C 2 min after the florescent heater has gone ON; or, after the power is turned on, the reading of the ambient temperature of the fluorescent lamp is 0°C or lower. |
| E215 | |
| Main cause | The thermistor (TH3) inside the fluorescent heater has a short circuit. The light adjustment control circuit is faulty. The reader controller PCB is faulty. The wiring is faulty (short circuit, open circuit). |
| Condition | 0000 While the fluorescent lamp is OFF, the reading of the ambient temperature is 170°C or higher. |
| E218 | |
| Main cause | The fluorescent lamp is not mounted properly. |
| Condition | 0000 When the power is turned on, the absence of the fluorescent lamp is detected. |

| | |
|-------------|---|
| E219 | |
| Main cause | The fluorescent lamp has reached the end of its life. The thermistor (TH3) inside the fluorescent lamp is faulty. |
| Condition | 0000 While the fluorescent lamp is ON, the reading of the ambient temperature is 170°C or higher. |
| E220 | |
| Main cause | The fluorescent lamp is faulty. The light adjustment sensor is faulty. The light adjustment control PCB is faulty. The inverter PCB is faulty. The reader controller PCB is faulty. |
| Condition | 0000 The fluorescent lamp does not reach a specific intensity within 10 sec after it is tuned on (if the room temperature is 10°C or lower, within 60 sec). Or, the ON detection signal (FL-DTCT) does not go OFF within 5 sec after the fluorescent lamp is turned off; during shading adjustment, the ON detection signal (FL-DTCT) does not go ON within 60 sec after the fluorescent lamp is turned on. |
| E222 | |
| Main cause | The lamp heater (H5) is faulty. The light adjustment control PCB is faulty. The reader controller PCB is faulty. The wiring is faulty (short circuit, open circuit). |
| Condition | 0000 During the initial activation after power-on, the reading does not reach 70°C within 5 min after the heater is turned on. Or, during standby or reading operation, the reading does not reach 75°C within 3 min after the heater is tuned on. |
| E226 | |
| Main cause | The scanner cooling fan is faulty. |
| Condition | 0000 The scanner cooling fan stop signal is detected for 5 sec or more although the scanner cooling fan is being driven. |

| | |
|-------------|---|
| E240 | |
| Main cause | The main controller PCB is faulty. The DC controller PCB is faulty. The wiring is faulty (short circuit, open circuit). |
| Condition | 0000 A communication fault exists between the CPUs of the main controller PCB and the DC controller PCB. |
| E241 | |
| Main cause | The original orientation detection PCB is faulty. The wiring is faulty (short circuit, open circuit). The reader controller PCB is faulty. |
| Condition | 0000 The initial communication between the CPUs of the original orientation detection PCB and the reader controller PCB fails. 0001 When the orientation of an original is detected, the result of detection is not communicated by the original orientation detection PCB until the next original is read. 0002 The result of detection of the last original is not communicated 5 sec after the end of reading the last original. |
| E243 | |
| Main cause | The control panel CPU PCB is faulty. The main controller PCB is faulty. |
| Condition | 0000 A communication fault exists between the CPUs of the control panel CPU PCB and the main controller PCB. |
| E251 | |
| Main cause | The inverter cooling fan (FM9) is faulty. The wiring is faulty (short circuit, open circuit). The read controller PCB is faulty. |
| Condition | 0000 The lock signal (FM9LCK) arrives for 5 sec or more although the inverter cooling fan (FM9) is being driven. |
| E302 | |
| Main cause | The CCD/AP PCB is faulty. The wiring is faulty (short circuit, open circuit). The reader controller PCB is faulty. |
| Condition | 0000 During shading operation, the reader controller PCB fails to end shading processing. |

| | |
|--|--|
| E315 Main cause Condition | The reader controller PCB is faulty. The main controller PCB is faulty. 0000 During image rotation, the encoding/decoding has a fault. |
| E320 Main cause Condition | The CCD/AP PCB is faulty. The wiring is faulty (short circuit, open circuit). The reader controller PCB is faulty. 0000 While an image is being read, the image read end notice does not arrive at the reader controller PCB within 60 sec from the CCD/AP PCB. |

- ADF (from E400 to E420)

E400

Main cause

The communication cable between ADF and copier is faulty. The ADF controller PCB is faulty.

Condition

0000 While the ADF is in standby, the communication between ADF and copier is interrupted for 5 sec or more. Or, when the ADF is in operation, the communication between ADF and copier is disrupted for 0.5 sec or more.

E402

Main cause

The belt motor (M2) inside the ADF is faulty. The belt motor clock sensor (PI1) is faulty. The ADF controller PCB is faulty.

Condition

0000 The clock signal does not occur for 100 msec when the belt motor drive signal is generated.

E404

Main cause

The delivery motor (M5) is faulty. The delivery motor clock sensor (PI11) is faulty. The ADF controller PCB is faulty.

Condition

0000 The clock signal does not occur for 200 msec when the delivery motor drive signal is generated.

E405

Main cause

The separation motor (M4) is faulty. The separation motor clock sensor (PI2) is faulty. The ADF controller PCB is faulty.

Condition

0000 The clock signal does not occur for 200 msec when the separation motor drive signal is generated.

| | |
|---|--|
| E410 Main cause Condition | <p>The pickup motor (M3) is faulty. The pickup roller height sensor 1 (PI8) is faulty. The pickup roller height sensor 2 (PI9) is faulty. The pickup roller home position sensor (PI7) is faulty. The ADF controller PCB is faulty.</p> <p>0000 The pickup roller height sensor 1 (PI8) or 2 (PI9) does not generate a signal within 2 sec after the pickup motor is driven. Or, the pickup roller home position sensor (PI7) does not generate a signal within 2 sec after the pickup motor is driven.</p> |
| E412 Main cause Condition | <p>The cooling fan (FM1) is faulty. The ADF controller PCB is faulty.</p> <p>0000 The lock signal arrives for 100 msec or more although the cooling fan is being driven.</p> |
| E420 Main cause Condition Caution | <p>The EEPROM is faulty. The ADF controller PCB is faulty.</p> <p>0000 The backup data of the EEPROM cannot be read when the connected device is tuned on. Or, the data that has been read has a fault.</p> <p>If the self diagnostic mechanism of the ADF has gone ON, the error may be cleared by turning off and then on the connected device. While the ADF remains out of order, printing may be continued by disconnecting the lattice connector of the ADF, opening the ADF, and placing the original on the copyboard glass.</p> |

- Finisher (from E500 to E514)

E500

| | |
|------------|---|
| Main cause | The finisher controller PCB is faulty (data communication with the copier). The DC controller PCB is faulty. |
| Condition | 0000 The communication between copier and finisher is disrupted and, in addition, is not recovered despite retransmission for 5 sec. The disruption and the recovery have been repeated three times in 5 sec. (This error is detected by the finisher.) |

E501

| | |
|------------|---|
| Main cause | The finisher controller PCB is faulty (data communication with the slave CPU). |
| Condition | 0000 The communication between the master CPU (IC106) and the slave CPU (IC125) is disrupted. |

E503

| | |
|------------|---|
| Main cause | The saddle stitcher controller PCB is faulty. The finisher controller PCB is faulty (data communication with the saddle). |
| Condition | 0000 The communication between saddle stitcher controller PCB and the finisher controller PCB is disrupted. |

E505

| | |
|------------|--|
| Main cause | The EEPROM is faulty. The finisher controller PCB is faulty. The punch driver PCB is faulty. |
| Condition | 0001 The checksum of the EEPROM is faulty (offset value error of the aligning plate). 0002 The checksum of the EEPROM is faulty (D/A conversion value error of the motor drive or sensor adjustment value). |

| | |
|---------------------------------|--|
| E506 | <p>Downloading to the built-in flash of the slave CPU (IC125) is faulty.</p> |
| <p>Main cause Condition</p> | <p>0001 error in serial communication for data transfer 0002 error in flash memory write operation (write not possible) 0003 error in transfer of user program (checksum mismatch) 0004 error in transfer of slave program (checksum mismatch) 0005 As long as 3 min has passed without operation after a shift to download mode, or start-up is executed without finishing downloading.</p> |
| E510 | <p>The inlet motor (M1) is faulty. The finisher controller PCB is faulty.</p> |
| <p>Main cause Condition</p> | <p>00FF A condition is detected for 1 sec or more in which the clocks from the inlet motor are 50 mm/sec or less while the motor is in operation.</p> |
| E514 | <p>The stack delivery motor (M7) is faulty. The stack delivery motor clock sensor (PI12) is faulty. The finisher controller PCB is faulty.</p> |
| <p>Main cause Condition</p> | <p>00FF A condition is detected for 1 sec or more in which the clocks from the stack delivery motor clock sensor is 50 mm/sec or less while the motor is in operation.</p> |
| <p>• Inserter (E515)</p> | |
| E515 | <p>The inserter motor clock sensor (PI42) is faulty. The inserter motor (M15) is faulty. The inserter drive PCB is faulty.</p> |
| <p>Main cause Condition</p> | <p>00FF The clocks from the inserter motor drop below a specific value while the motor is in operation.</p> |

• Paper Deck Folding Unit (E518)

E518

Main cause
Condition

The folder motor (M14) is faulty. The folder driver PCB is faulty.

00FF The clocks from the folder motor drop below a specific value while the motor is in operation.

• Finisher (from E530 to E595)

E530

Main cause
Condition

The rear aligning plate home position sensor (PI9) is faulty. The rear alignment motor (M5) is faulty. The finisher controller PCB is faulty.

0001 The aligning plate does not return to home position when the rear aligning plate motor is driven for a specific period of time.
0002 The aligning plate does not leave home position when the rear aligning plate motor is driven for a specific period of time.

E531

Main cause
Condition

The stapling home position sensor (inside the stapler) is faulty. The stapler motor (M11) is faulty. The swing guide safety switch (MSW2) is faulty. The stapler safety switch (front; MSW6) is faulty. The stapler safety switch (rear; MSW7) is faulty. The finisher controller PCB is faulty.

0001 The stapler does not return to stapling home position when the stapler motor is driven for 0.5 sec.
0002 The stapler does not leave stapling home position when the stapler motor is driven for 0.5 sec.

E532

Main cause
Condition

The stapler shift home position sensor (PI16) is faulty. The stapler shift motor (M10) is faulty. The swing guide safety switch (MSW2) is faulty. The stapler safety switch (front; MSW6) is faulty. The stapler safety switch (rear; MSW7) is faulty. The finisher controller PCB is faulty.

0001 The stapler does not return to stapler shift home position when the stapler shift motor is driven for 4 sec.
0002 The stapler does not leave stapler shift home position when the stapler shift motor is driven for 4 sec.

| | |
|-------------|---|
| E535 | |
| Main cause | The swing guide open sensor (PI15) is faulty. The swing guide closed sensor (P14) is faulty. The swing motor (M8) is faulty. The finisher controller PCB is faulty. |
| Condition | <p>0001 The swing guide closed sensor does not go ON when the swing motor is driven for 2 sec.</p> <p>0002 The swing guide open sensor does not go ON when the swing motor is driven for 1 sec.</p> |
| E537 | |
| Main cause | The front aligning plate home position sensor (PI7) is faulty. The front aligning plate motor (M4) is faulty. The finisher controller PCB is faulty. |
| Condition | <p>0001 The aligning plate does not return to home position when the front aligning plate motor is driven for 4 sec.</p> <p>0002 The aligning plate does not leave home position when the front aligning plate motor is driven for 4 sec.</p> |
| E540 | |
| Main cause | The tray A lift motor (M13) is faulty. The tray A idle rotation sensor (PI19) is faulty. The tray A paper sensor (PI 20) is faulty. The tray approach switch (MSW3) is faulty. |
| Condition | <p>0001 clock error (The click from the tray A idle rotation sensor is disrupted for 250 msec when the motor is rotating.)</p> <p>0002 area error (The position of the tray A is found to be below the area of the tray B.)</p> <p>0003 safety switch error</p> <p>0004 time-out (The ascent/decent operation does not end within 25 sec when the tray A lift motor is driven.)</p> |

| | |
|-------------|---|
| E542 | |
| Main cause | The tray B lift motor (M12) is faulty. The tray B idle rotation sensor (PI18) is faulty. The tray B lower limit sensor (PI24) is faulty. The tray B paper sensor (PI17) is faulty. |
| Condition | <p>0001 clock error (The clock from the tray B idle rotation sensor is disrupted for 250 msec whether motor is rotating.)</p> <p>0002 area error (The position of the tray B is found to be above the area of the tray A.)</p> <p>0003 safety switch error</p> <p>0004 time-out (The ascent/descent operation does not end within 25 sec when the tray B lift motor is driven.)</p> |
| E551 | |
| Main cause | Power supply fan (FM1) is faulty. The feeder cooling fan (FM2) is faulty. |
| Condition | <p>0001 The power supply fan is at rest for 2 sec or more.</p> <p>0002 The feeder cooling fan is at rest for 2 sec or more.</p> |
| E577 | |
| Main cause | The paddle motor (M9) is faulty. The paddle home position sensor (PI14) is faulty. |
| Condition | <p>0001 The paddle home position sensor does not detect the paddle within 5 sec after the motor is driven.</p> |
| E578 | |
| Main cause | The knurled belt motor (M20) is faulty. The knurled belt home position sensor (PI34) is faulty. |
| Condition | <p>0001 The knurled belt motor does not return to home position when the knurled belt motor is driven for 1 sec or more.</p> <p>0002 The knurled belt does not leave home position when the knurled belt motor is driven for 1 sec or more.</p> |

| | |
|-------------|---|
| E583 | |
| Main cause | The tray sub plate motor (M6) is faulty. The tray retraction sensor (PI11) is faulty. |
| Condition | <p>0001 The tray sub plate retraction sensor does not go ON a specific period of time after the tray sub plate motor is driven.</p> <p>0002 The tray sub plate retract sensor does not go OFF a specific period of time after the tray sub plate motor is driven.</p> |
| E584 | |
| Main cause | The paddle motor (for driving the shutter; M9) is faulty. The shutter home position sensor (PI12) is faulty. |
| Condition | <p>0001 The shutter does not return to home position when the paddle motor is driven for 1 sec or more.</p> <p>0002 The shutter does not leave home position when the paddle motor is driven for 1 sec or more.</p> |
| E590 | |
| Main cause | The punch home position sensor (PI24) is faulty. The punch 2/3-home sheet sensor (PI33) is faulty. The punch motor clock sensors (PI34) is faulty. The punch motor (M18) is faulty. The punch driver PCB is faulty. |
| Condition | <p>0001 The puncher does not return to home position when the punch motor is driven for a specific period of time.</p> <p>0002 The puncher does not leave home position when the punch motor is driven for a specific period of time.</p> <p>0003 The braking start position of the punch motor is faulty.</p> <p>0004 The puncher is not at home position at the time of a 5-hole sheet switch-over (2/3-hole sheet puncher only).</p> |

| | |
|-------------|---|
| E593 | |
| Main cause | The slider home position sensor (PI22) is faulty. The punch registration motor (M17) is faulty. The punch driver PCB is faulty. |
| Condition | <p>0001 The puncher does not return to horizontal registration home position when the punch registration motor is driven for a specific period of time.</p> <p>0002 The puncher does not leave horizontal registration home position when the punch registration motor is driven for a specific period of time.</p> |
| E594 | |
| Main cause | The punch sensor home position sensor (PI23) is faulty. The punch sensor slide motor (M19) is faulty. The punch driver PCB is faulty. |
| Condition | <p>0001 The punch paper edge sensor (PI21) does not return to home position when the punch sensor slide motor is driven for a specific period of time.</p> <p>0002 The punch paper edge sensor (PI21) does not leave home position when the punch sensor slide motor is driven for a specific period of time.</p> |
| E595 | |
| Main cause | The punch waste paper feed motor (M16) is faulty. The punch waste paper feed sensor (PI27) is faulty. The punch driver PCB is faulty. |
| Condition | <p>0000 The input from the punch waste paper feed sensor does not change when the punch waste paper feed motor is driven.</p> |

- Saddle Stitcher (from E5F0 to E5F9)

E5F0

| | |
|------------|--|
| Main cause | The paper positioning plate home position sensor (PI49) is faulty. The paper positioning plate motor (M44) is faulty. The saddle stitcher controller PCB is faulty. |
| Condition | <p>0001 The paper position plate home position sensor does not go ON when the paper position plate motor is driven for 1.25 sec or more.</p> <p>0002 The paper positioning plate home position sensor does not go OFF when the paper position plate motor is driven for 1 sec or more.</p> |

E5F1

| | |
|------------|---|
| Main cause | The fold motor clock sensor (PI47) is faulty. The paper fold motor (M42) is faulty. The saddle stitcher controller PCB is faulty. |
| Condition | <p>0001 The number of detection pulses of the fold motor clock sensor drops below a specific value.</p> |

E5F2

| | |
|------------|--|
| Main cause | The guide home position sensor (PI54) is faulty. The guide motor (M43) is faulty. The saddle stitcher controller PCB is faulty. |
| Condition | <p>0001 The guide home position sensor does not go ON when the guide motor is driven for 0.4 sec or more.</p> <p>0002 The guide home position sensor does not go OFF when the guide motor is driven for 1 sec or more.</p> |

E5F3

| | |
|------------|---|
| Main cause | The aligning plate home position sensor (PI48) is faulty. The alignment motor (M45) is faulty. The saddle stitcher controller PCB is faulty. |
| Condition | <p>0001 The aligning plate home position sensor does not go ON when the alignment motor is driven for 0.5 sec or more.</p> <p>0002 The alignment plate home position sensor does not go OFF when the alignment motor is driven for 1 sec or more.</p> |

| | |
|-------------|--|
| E5F4 | |
| Main cause | The saddle rear stapler home position switch (MS32) is faulty. The saddle rear stapler motor (M46) is faulty. The saddle stitcher controller PCB is faulty. |
| Condition | <p>0001 The saddle rear stapler home position switch does not go ON when the saddle rear stapler motor is driven clockwise for 0.5 sec or more.</p> <p>0002 The saddle rear stapler home position switch does not go OFF when the saddle rear stapler motor is driven counterclockwise for 0.5 sec or more.</p> |
| E5F5 | |
| Main cause | The saddle front home position switch (MS34) is faulty. The saddle front motor (M47) is faulty. The saddle stitcher controller PCB is faulty. |
| Condition | <p>0001 The saddle front home position switch does not go ON when the saddle front motor is driven clockwise for 0.5 sec or more.</p> <p>0002 The saddle front home position switch does not go OFF when the saddle front motor is driven counterclockwise for 0.5 sec or more.</p> |
| E5F6 | |
| Main cause | The paper pushing plate motor clock sensor (PI45) is faulty. The paper pushing plate leading edge sensors (PI56) is faulty. The paper pushing plate home position sensor (PI55) is faulty. The paper pushing plate motor (M48) is faulty. The saddle stitcher controller PCB is faulty. |
| Condition | <p>0001 The paper pushing plate home position sensor does not go ON when the paper pushing plate motor is driven for 0.3 sec or more.</p> <p>0002 The paper pushing plate home position sensor does not go OFF when the paper pushing plate motor is driven for 0.3 sec or more.</p> <p>0003 The paper pushing plate leading edge sensor does not go OFF when the paper pushing plate motor is driven for 0.3 sec or more.</p> <p>0004 The number of detection pulses of the paper pushing plate motor drops below a specific value.</p> |

| | |
|--|---|
| E5F7 Main cause Condition | <p>The saddle tray motor (M49) is faulty. The saddle tray home position sensor (PI41) is faulty. The saddle stitcher controller PCB is faulty.</p> <p>0001 The saddle tray home position sensor does not go ON when the saddle motor is driven for 8 sec or more.</p> <p>0002 The saddle tray home position sensor does not go OFF when the saddle tray motor is driven for 1 sec or more.</p> |
| E5F8 Main cause Condition | <p>The guide home position sensor (PI54) is faulty. The paper pushing plate home position sensor (PI55) is faulty. The paper pushing plate leading edge position sensor (PI56) is faulty. The saddle stitcher controller PCB is faulty.</p> <p>0001 The connector of the guide home position sensor is disconnected.</p> <p>0002 The connector for the paper pushing plate home position sensor is disconnected.</p> <p>0003 The connector of the paper pushing plate lading edge sensor is disconnected.</p> |
| E5F9 Main cause Condition | <p>The inlet cover open/closed sensor (PI51) is faulty. The outlet cover open sensor (PI46) is faulty. The saddle stitcher controller PCB is faulty.</p> <p>0001 The inlet cover is found to be open for 1 sec or more from the start of initial rotation of the connected device with the inlet cover, front cover, and delivery cover closed.</p> <p>0002 The exit cover is found to be open for 1 sec or more from the start of printing or from the start of initial rotation of the connected device with the inlet cover, front cover, and delivery cover closed.</p> |

- Copier (from E601 to E830)

E601

Main cause

The wiring is faulty (short circuit, open circuit). The hard disk drive is faulty. The DC controller PCB is faulty. The main controller PCB is faulty.

Condition

0000 The main controller PCB detects a fault in control information for image transfer between the main controller PCB and the hard disk drive. Or, the DC controller PCB detects a fault in control information for image transfer between main controller PCB and DC controller PCB.

E602

Main cause

The wiring is faulty (short circuit, open circuit, connector disconnection). The installed system file is faulty. The hard disk drive is faulty. The main controller PCB is faulty.

Condition

0001 A fault in the mounting of the hard disk is detected when the boot ROM starts up the system on the hard disk.
0002 No appropriate system is found on the hard disk when the boot ROM tries to start up the system on the hard disk.
0003 A sector error occurs on the hard disk when the boot ROM starts up the system on the hard disk.

E604

Main cause

The image memory is faulty. The main controller PCB is faulty.

Condition

0000 A fault exists in the image memory.

E605

Main cause

The battery for image memory is faulty. The main controller PCB is faulty.

Condition

0000 A fault is detected in the voltage of the battery for the image memory.

E674

Main cause

The fax board is faulty.

Condition

0000 An error exists on the FAX board.

| | |
|-------------------------|--|
| E676 | Any of the various printer boards (accessories) is faulty. |
| Main cause Condition | 0000 A fault exists in any of the printer boards (accessories). |
| E677 | Any of the various printer boards (accessories) is faulty. The main controller PCB is faulty. |
| Condition | 0000 A communication fault exists between the main controller PCB and any of the various printer boards (accessories). |
| Caution | <p>In the case of E677,</p> <ul style="list-style-type: none"> • If it occurs when the main power supply is turned on, Suspect a hardware fault. Keep in mind that switching off and then on the power switch too fast can cause E677 to be indicated because of a specific timing interval needed to initialize the copier and the printer board. Be sure to wait for 5 sec or more before turning the main power switch back on. • If it occurs during normal use, If it occurs during printing and can be corrected after canceling the print job and turning off and then on the power switch, suspect an overload on the CPU. If an overload was imposed on the CPU of the printer board for some time (as when processing a large volume print data while receiving a large volume data from the network), E677 can be indicated at times. If so, cancel all print jobs, and turn off and then on the main power switch of the copier; advise the user to send print data on a job-by-job basis. |
| Main cause | Machine types are not compatible between Boot ROM and System. (e.g., Boot ROM for the iR8500 Copy model is mounted on the system for the iR8500 PS/PCL model.) |
| Condition | 5802 |

| | |
|-------------|---|
| E710 | |
| Main cause | The DC controller PCB is faulty. The reader controller PCB is faulty. The main controller PCB is faulty. |
| Condition | <p>0001 The IPC (IC5) on the reader controller PCB cannot be initialized when the main power supply is turned on.</p> <p>0002 The IPC (IC40) on the DC controller PCB cannot be initialized when the main power supply is turned on.</p> <p>0003 The IPC (IC1003) on the machine controller PCB cannot be initialized when the main power is turned on.</p> |
| E711 | |
| Main cause | The connector is not connected properly. The NE controller PCB is faulty. The copy data controller PCB is faulty. The ADF controller PCB is faulty. The finisher controller PCB is faulty. |
| Condition | <p>0001 Data has been written to the error register of the IPC (IC5) on the reader controller PCB 4 times or more within 1.5 sec.</p> <p>0002 Data has been written to the error register of the IPC (IC40) on the DC controller PCB 4 times or more within 2 sec.</p> <p>0003 Data has been written to the error register of the IPC (IC1003) on the main controller PCB 4 times or more within 2 sec.</p> |
| E712 | |
| Main cause | The connector is not connected properly. The 24V power supply for the ADF is faulty. The ADF controller PCB is faulty. The reader controller PCB is faulty. |
| Condition | <p>0000 The communication IC (IPC) on the ADF controller PCB goes out of order.</p> |
| E713 | |
| Main cause | The connector is not connected properly. The accessories power supply PCB for the finisher is faulty. The finisher controller PCB is faulty. The DC controller PCB is faulty. |
| Condition | <p>0000 The communications IC (IPC) on the finisher controller PCB goes out of order.</p> |

| | |
|---|--|
| E717 Main cause Condition Caution | The wiring is faulty. (short circuit, open circuit). The copy data controller or the NE controller is faulty. The main controller PCB is faulty. 0001 The copy data controller or the NE controller is out of order or the wiring has an open circuit. You must clear the error in service mode (COPIER>FUNCTION>CLEAR>ERR). |
| E719 Main cause Condition Caution | The wiring is faulty (short circuit, open circuit). The coin vendor is faulty. The main controller PCB is faulty. 0002 The communication between coin vendor and controller PCB is disrupted. You must clear the error in service mode (COPIER>FUNCTION>CLEAR>ERR). |
| E732 Main cause Condition | The cable connector is not connected properly. The reader controller PCB is faulty. 0001 The main controller PCB detects a fault in the communication between rear controller PCB and main controller PCB. |
| E733 Main cause Condition | The connector is not connected properly. The DC controller PCB is faulty. 0000 The machine controller PCB detects a fault in the communication between DC controller PCB and main controller PCB. |
| E737 Main cause Condition | The SDRAM is faulty. The main controller PCB is faulty. 0000 A fault exists in the SDRAM. |

| | |
|-------------|--|
| E740 | |
| Main cause | The Ethernet card is faulty. The main controller PCB is faulty. |
| Condition | 0000 An Ethernet card fault is detected. |
| E741 | |
| Main cause | The PCI bus is not connected properly. The main controller PCB is faulty. |
| Condition | 0000 A fault exists in the PCI bus. |
| E744 | |
| Main cause | A mismatch of versions exists between the language module (Language) and the system installed to the hard disk; or, no language that can be used exist. |
| Condition | <p>0001 The version of the system installed to the hard disk and the version of the langue module selected in user mode do not match.</p> <p>0002 The size of the downloaded language module exceeds a specific size.</p> <p>0003 The display language module selected in user mode does not exit; or, it is not an appropriate language module.</p> <p>0004 Downloading of the language module fails.</p> |
| Caution | In response to the error, the machine will automatically cancel the language selection of user mode; as such, when the machine is turned off and then on next time, it will use the language module (Japanese or English) that is built into the system. |
| Main cause | Machine models are not identical between Boot ROM and System. (e.g., Boot ROM for the iR5000 Copy model is mounted on the System for the iR8500 Copy model) |
| Condition | 1000 |
| Main cause | HDD stored the system for another machine model is connected. (e.g., HDD for the iR8500 Copy model is changed the HDD for the iR105 Copy model) |
| Condition | 2000 |

| | |
|-------------|---|
| E745 | <p data-bbox="104 212 216 236">Main cause</p> <p data-bbox="104 272 202 296">Condition</p> <p data-bbox="247 212 966 268">Token Ring Board related error (e.g. faulty board, poor connection, wrong setting)</p> <p data-bbox="260 301 941 416"> 0001 Token Ring PCI initialization error 0002 MAC address is out of the specified range (The upper 3 bytes of the MAC address are other than 000085) 0003 Token Ring board access error </p> |
| E800 | <p data-bbox="104 510 216 534">Main cause</p> <p data-bbox="104 571 202 595">Condition</p> <p data-bbox="247 510 949 566">The auto power-off circuit has an open circuit. The DC controller PCB is faulty.</p> <p data-bbox="260 600 983 651">0000 An open circuit is detected in the auto power-off circuit for 3 sec or more.</p> |
| E804 | <p data-bbox="104 750 216 774">Main cause</p> <p data-bbox="104 839 202 863">Condition</p> <p data-bbox="104 986 182 1010">Caution</p> <p data-bbox="247 750 983 834">The system fan (FM16) is faulty. The power supply cooling fan 1 (FM11) is faulty. The power cooling fan 2 (FM12) is faulty. The DC controller PCB is faulty. The main controller PCB is faulty.</p> <p data-bbox="260 868 953 983"> 0000 The lock signal is detected for 5 sec or more although the power supply cooling fan (1 and 2) is being driven. 0004 The reading of the ambient temperature of the main controller is 80°C or higher. </p> <p data-bbox="247 986 983 1038">In the case of a fault in the system fan, the data will be indicated in the form of an alarm (0008040004; alarm-2).</p> |
| E805 | <p data-bbox="104 1137 216 1161">Main cause</p> <p data-bbox="104 1227 202 1251">Condition</p> <p data-bbox="247 1137 975 1222">The wiring is faulty (short circuit, open circuit). The fixing assembly heat discharge fan (FM2) is faulty. The DC controller PCB is faulty. The separation heat discharge fan is faulty.</p> <p data-bbox="260 1256 960 1369"> 0001 The lock signal is detected for 5 sec or more although the fixing assembly heat discharging fan is being driven. 0002 The lock signal is detected for 5 sec or more although the separation heat discharging fan is being driven. </p> |

| | |
|-------------|---|
| E820 | |
| Main cause | The wiring is faulty (short circuit, open circuit). The drum fan (FM8) is faulty. The DC controller PCB is faulty. |
| Condition | 0000 The lock signal is detected for 5 sec or more although the drum fan is being driven. |
| E823 | |
| Main cause | The wiring is faulty (short circuit, open circuit). The pre-transfer charging assembly fan (FM10) is faulty. The deck controller PCB is faulty. |
| Condition | 0000 The lock signal is detected for 5 sec or more although the pre-transfer charging assembly fan is being driven. |
| E830 | |
| Main cause | The wiring is faulty (short circuit, open circuit). The separation fan (FM13) is faulty. The DC controller PCB is faulty. |
| Condition | 0000 The lock signal is detected for 5 sec or more although the separation cooling fan is being driven. |

**Prepared by
Office Imaging Products Quality Assurance Center
CANON INC.
Printed in Japan**

REVISION 0 (JULY 2001) (21767, 32205, 23715)

5-1, Hakusan 7-chome, Toride-shi, Ibaraki 302-8501 Japan



This publication is
printed on 100%
recycled paper.

Canon