

**CALIBRATION LAB
INSTRUCTION MANUAL FOR**

DMM

Model #: *8860A* Date: *13 Apr 98*

Cal Tech: *J. Klech*

8860A

Digital Multimeter

Operator Manual

P/N 541268
April 1980



WARRANTY

Notwithstanding any provision of any agreement the following warranty is exclusive:

The JOHN FLUKE MFG. CO., INC., warrants each instrument it manufactures to be free from defects in material and workmanship under normal use and service for the period of 1-year from date of purchase. This warranty extends only to the original purchaser. This warranty shall not apply to fuses, disposable batteries (rechargeable type batteries are warranted for 90-days), or any product or parts which have been subject to misuse, neglect, accident, or abnormal conditions of operations.

In the event of failure of a product covered by this warranty, John Fluke Mfg. Co., Inc., will repair and calibrate an instrument returned to an authorized Service Facility within 1 year of the original purchase; provided the warrantor's examination discloses to its satisfaction that the product was defective. The warrantor may, at its option, replace the product in lieu of repair. With regard to any instrument returned within 1 year of the original purchase, said repairs or replacement will be made without charge. If the failure has been caused by misuse, neglect, accident, or abnormal conditions of operations, repairs will be billed at a nominal cost. In such case, an estimate will be submitted before work is started, if requested.

THE FOREGOING WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS, OR ADEQUACY FOR ANY PARTICULAR PURPOSE OR USE. JOHN FLUKE MFG. CO., INC., SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER IN CONTRACT, TORT, OR OTHERWISE.

If any failure occurs, the following steps should be taken:

1. Notify the JOHN FLUKE MFG. CO., INC., or nearest Service facility, giving full details of the difficulty, and include the model number, type number, and serial number. On receipt of this information, service data, or shipping instructions will be forwarded to you.
2. On receipt of the shipping instructions, forward the instrument, transportation prepaid. Repairs will be made at the Service Facility and the instrument returned, transportation prepaid.

SHIPPING TO MANUFACTURER FOR REPAIR OR ADJUSTMENT

All shipments of JOHN FLUKE MFG. CO., INC., instruments should be made via United Parcel Service or "Best Way" prepaid. The instrument should be shipped in the original packing carton; or if it is not available, use any suitable container that is rigid and of adequate size. If a substitute container is used, the instrument should be wrapped in paper and surrounded with at least four inches of excelsior or similar shock-absorbing material.

CLAIM FOR DAMAGE IN SHIPMENT TO ORIGINAL PURCHASER

The instrument should be thoroughly inspected immediately upon original delivery to purchaser. All material in the container should be checked against the enclosed packing list. The manufacturer will not be responsible for shortages against the packing sheet unless notified immediately. If the instrument is damaged in any way, a claim should be filed with the carrier immediately. (To obtain a quotation to repair shipment damage, contact the nearest Fluke Technical Center.) Final claim and negotiations with the carrier must be completed by the customer.

The JOHN FLUKE MFG. CO., INC., will be happy to answer all applications or use questions, which will enhance your use of this instrument. Please address your requests or correspondence to: JOHN FLUKE MFG. CO., INC., P.O. BOX C9090, EVERETT, WASHINGTON 98206, ATTN: Sales Dept. For European Customers: Fluke (Holland) B.V., P.O. Box 5053, 5004 EB, Tilburg, The Netherlands.

*For European customers, Air Freight prepaid.

John Fluke Mfg. Co., Inc., P.O. Box C9090, Everett, Washington 98206

Table of Contents


SECTION	TITLE	PAGE
1	INTRODUCTION AND SPECIFICATIONS	1-1
	1-1. THE 8860A INSTRUCTION MANUAL SET	1-1
	1-4. DESCRIPTION	1-2
	1-11. SPECIFICATIONS	1-3
2	SHIPPING AND SERVICE INFORMATION	2-1
	2-1. INTRODUCTION	2-1
	2-4. SERVICE INFORMATION	2-1
	2-7. QUESTIONS/PROBLEMS	2-1
3	INSTALLATION AND MAINTENANCE	3-1
	3-1. INTRODUCTION	3-1
	3-4. INSTALLATION	3-1
	3-5. Bench-Top	3-1
	3-9. Rack-Panel Mounting	3-1
	3-11. Input Line Voltage	3-2
	3-14. OPERATOR MAINTENANCE	3-2
	3-16. Fuse Replacement	3-2
	3-18. Cleaning	3-2
4	OPERATING INSTRUCTIONS	4-1
	4-1. INTRODUCTION	4-1
	4-3. OPERATING FEATURES	4-1
	4-5. OPERATING NOTES	4-4
	4-7. Initial Turn-On	4-4
	4-9. Input Overload Limits	4-4
	4-11. Measurement Connections	4-4
	4-22. Display Indications	4-6
	4-35. Front Panel Push Buttons	4-8
	4-56. OPERATION	4-14
	4-58. Turn-On Procedures	4-14
	4-60. Making Measurements	4-14
5	OPTION AND ACCESSORY INFORMATION	5-1
	5-1. TABLE OF CONTENTS	5-1
A	FLUKE SALES AND SERVICE CENTERS	A-1

List of Tables

TABLE	TITLE	PAGE
	8860A Options	1-3
1-1.	Option Compatability	1-3
1-2.	8860A Specifications	1-4
1-3.	8860A Panel-Mount Kits	3-2
3-1.	8860A Panel-Mount Kits	4-2
4-1.	Front Panel Controls, Indicators, and Connectors	4-4
4-2.	Rear Panel Connectors	4-5
4-3.	Input Overload Limit	4-5
4-4.	Ω 2T and Ω 4T Test Current and Open Circuit Voltage	4-8
4-5.	8860A Error Codes	A-2
A-1.	Fluke Technical Service Centers - U.S. and Canada	A-2
A-2.	Fluke Technical Service Centers - International	A-4
A-3.	Sales Representatives - U.S. and Canada	A-5
A-4.	Sales Representatives - International	

List of Illustrations

FIGURE	TITLE	PAGE
Fontispiece	8860A Digital Multimeter	vi
1-1.	Outline Drawing	1-7
3-1.	Rack Mount Kits	3-3
4-1.	Front Panel Controls, Indicators, and Connectors	4-1
4-2.	Rear Panel Connectors	4-3
4-3.	Test Connections for Four-Terminal Resistance Measurements	4-6
4-4.	Guard Connections	4-7

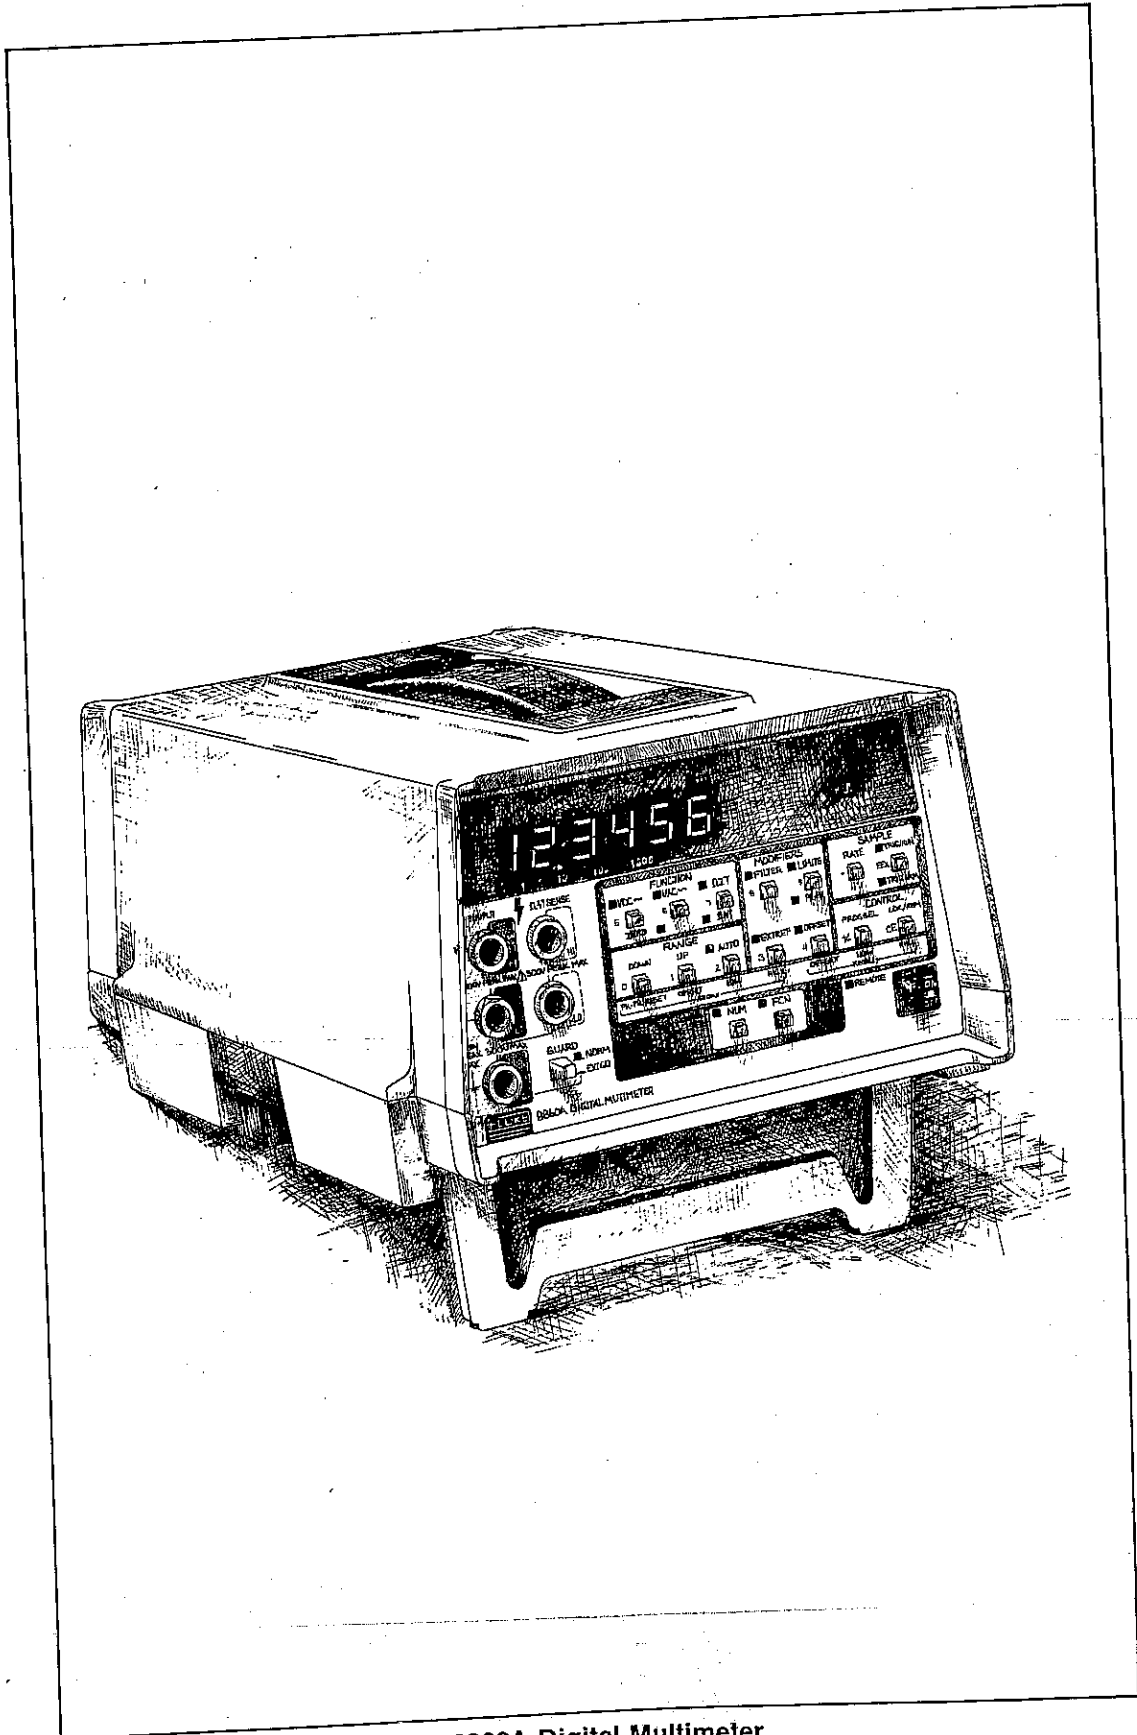

8860A Digital Multimeter

Section 1

Introduction and Specifications

1-1. THE 8860A INSTRUCTION MANUAL SET

1-2. The John Fluke Model 8860A Digital Multimeter is documented by a set of five manuals: Operator, Calibration, Calculating Controller User Handbook, Service, and a Reference Guide. The Operator Manual includes a description of the unit, installation information, operating instructions, and routine operator maintenance. The Calibration Manual is designed for use by the Calibration Technician. It contains specifications, general maintenance information, access procedures, performance tests, and calibration adjustment procedures. The Calculating Controller User Handbook contains the operating instructions for the Calculating Controller Option (-004). The Service Manual contains the theory of operation, troubleshooting information, a list of replaceable parts, and schematics. Condensed operating information for both the 8860A and the Calculating Controller are included in the Reference Guide. The five manuals can be separated for use in different areas or joined together in a single three-ring binder.

1-3. The Operator Manual is divided into the following sections:

- | | |
|---------------------------------------|--|
| 1 INTRODUCTION
AND SPECIFICATIONS | Introduces the 8860A Instruction Manual Set, describes the 8860A and its features, and lists the instrument specifications. |
| 2 SHIPPING AND SERVICE
INFORMATION | Provides unpacking and information. Instructions for contacting your local Fluke Service Center and the John Fluke Mfg. Co., Inc. are also included. |
| 3 INSTALLATION AND
MAINTENANCE | Bench-top and rack-panel mounting procedures are followed by an input line voltage verification procedure and operator maintenance procedures. |
| 4 OPERATING
INSTRUCTIONS | Includes an illustrated description of the 8860A controls and indicators, detailed operating notes, and operating procedures. |
| 5 OPTION AND ACCESSORY
INFORMATION | Provides a description and the specifications for each of the options and accessories available for use with the 8860A. Operating instructions are also provided for the options. Accessory operating information is provided with the individual accessories. |

1-4. DESCRIPTION

1-5. The 8860A is a fully-guarded, microprocessor-controlled, 5-1/2 digit, five-function digital multimeter designed for bench-top applications. Its measurement functions include: VDC, true RMS VAC (ac coupled), true RMS VAC (dc coupled), two-terminal ohms, and four-terminal ohms. Each voltage function is provided with five ranges. Six ranges are available for each of the ohms functions. The ranges can be selected automatically (autorange) or manually.

1-6. Several other performance features are provided with the 8860A. They include:

- Total push-button control
- Dual slope a/d conversion
- Push-button zero for V dc and ohms
- Selectable sample rate and resolution (4-1/2 or 5-1/2 digits)
- Selectable internal/external guard connection
- Selectable trigger mode: auto, manual, external
- Three math functions: offset, limits and peak-to-peak.
- Numeric data entry push-buttons for use in loading the constants for the offset, limits, and peak-to-peak functions.
- A 5-1/2 digit measurement display (mantissa) field with sign and floating decimal point.
- A two-digit exponent field with sign for displaying exponents of 10 and high, low, pass (H,L,P) limits information. Exponents are automatically displayed for recalled data.
- Measurement units annunciators that operate in conjunction with the display decimal point to display the selected range.
- Overload protection for all functions and ranges.
- Selectable local/remote operation.

1-7. The 8860A is housed in a plastic Portable Test Instrument (PTI) case. The case includes a retractable carrying handle and a fold-down bail. When extended, the bail provides a convenient tilt for bench-top operation. The PTI design allows the 8860A to be stacked and latched with other instruments in the Fluke PTI product line. Stacking saves bench space and allows the instruments in the stack to be moved as a single unit.

1-8. Operating power for the 8860A is selectable for the following configurations: 100, 120, 220, or 240V ac $\pm 10\%$; 50 or 60 Hz. The unit is shipped in the configuration specified at the time of purchase. Since the voltages are selectable, they can be reset in the field by a qualified technician. (Instructions for line-voltage selection are given in the Calibration manual.)

1-9. Several options and accessories are available for use with the 8860A. The options are listed and briefly defined in Table 1-1. A description of each option and its

specifications and operating instructions are given in Section 5, Option and Accessory Information. (Operation of the Calculating Controller Option (-004) is described in detail in the Calculating Controller Handbook.) Each option is field installable. Option compatibility is defined in Table 1-2.

Table 1-1. 8860A Options

OPTION NO.	DESCRIPTION	FUNCTION
-004	Calculating Controller	Scientific Calculator/Controller
-005	IEEE-488 Interface	IEEE-488 Bus Interface (talker, listener)
-006	Rear Input	Rear input terminals
-007	External Reference	External reference for making ratio measurements

Table 1-2. Option Compatibility

OPTIONS	-004	-005	-006	-007
-004		o		
-005	o			
-006				
-007				
o = Not Compatible				

1-10. Available accessories include panel-mounting kits and a series of probes. Accessory descriptions are included in Section 5 of this manual. Operating instructions are provided with the individual accessories.

1-11. SPECIFICATIONS

1-12. The specifications for the 8860A are given in Table 1-3.

Table 1-3. 8860A Specifications

DC VOLTS

Ranges ± 200 mV, 2V, 20V, 200V, 1000V
Ranging Fully automatic or manual
Polarity of Input Automatic polarity selection and display
Resolution (Max.) 0.0005% of full scale (1 μ V on 200 mV range) with 5-1/2 digit display.
Accuracy Using front panel zero, \pm (% input + no. of digits)

5-1/2 DIGIT DISPLAY*

RANGE	24 HR 23°C \pm 1°C	90DAY 18°C - 28°C	1 YR 18°C - 28°C	NORMAL MODE REJECTION	
				NO FILTER	FILTER
200 mV	(0.004 + 3)	(0.008 + 3)	(0.01 + 3)	>60 dB 50, 60 Hz	>100 dB 50, 60 Hz
2V-200V	(0.004 + 2)				
1000V					

4-1/2 DIGIT DISPLAY*

RANGE	90DAY 18°C - 28°C	1 YR 18°C - 28°C	NORMAL MODE REJECTION	
			NO FILTER	FILTER
All	(0.01 + 2)	(0.015 + 3)	>60 dB 50, 60 Hz	>100 dB 50, 60 Hz

*Settling Time: 30 ms to within .01% of input step size, with filter 300 ms.

3-1/2 DIGIT DISPLAY (Available with -004 or -005 options only)

RANGE	1 YR 18°C - 28°C	NORMAL MODE REJECTION	
		NO FILTER	FILTER
All	(0.1 + 1)	None	>40 dB 50, 60 Hz

Settling Time: 5 ms to within .1% of input step size, with filter 250 ms.

Common Mode Rejection

CONDITIONS Line frequency switch properly set.
 Line frequency at 50 or 60 Hz \pm 0.1%.
 One kilohm in either lead.

4-1/2 AND 5-1/2 DIGIT RATE

Normal Guard >130 dB
 External Guard (Driven) >150 dB

3-1/2 DIGIT RATE

Normal Guard >70 dB
 External Guard (Driven) >90 dB

DC, ALL READING RATES >160 dB

Input Resistance

200 mV, 2V RANGES >10,000 M Ω
 20V, 200V, 1000V RANGES 10 M Ω

Table 1-3. 8860A Specifications (cont)

Input Bias Current (@ 23°C) <100 pA
Zero Stability
 (after 1 hour warmup) ±10 µV for 90 days
Maximum Input ±1000V Pk input HI to LO
 ±500V Pk input LO to Earth
 ±30V Pk input LO to Guard

AC VOLTS (True RMS, AC only or AC + DC)

Ranges 200 mV, 2V, 20V, 200V, 700V
Ranging Fully automatic or manual
Resolution (Max) 0.0005% F.S. (1 µV on 200 mV range) with 5-1/2 digit display.

Accuracy ±(% INPUT + DIGITS), 0.5% F.S. to F. S. AC only*

FREQUENCY	RANGE(S)	90 DAY 18°C-28°C			1 YR 18°C-28°C		
		% INPUT	DIGITS		% INPUT	DIGITS	
			5-1/2	4-1/2		5-1/2	4-1/2
20 Hz-50 Hz	All	0.25	70	10	0.25	100	13
50 Hz-10 kHz	All	0.15	70	10	0.15	100	13
10 kHz-50 kHz	2V-700V	0.4	150	18	0.4	300	33
	200 mV	0.7	150	18	0.7	300	33
50 kHz-100 kHz	2V-700V				1.0	350	38
	200 mV				2.5	350	38
100 kHz-300 kHz	All				8.0	700	73

*For AC + DC operation, add 0.1% of input +50 digits for 5-1/2 digit resolution.
 For AC + DC operation, add 0.1% of input + 5 digits for 4-1/2 digit resolution.

Bandwidth (typical) ≤ 3 dB @ 1 MHz
Crest Factor 3 at full range, increasing down range
Input Impedance 10 MΩ, ≤ 70 pF
Maximum Input 700V rms, 1000V Pk, or 2 x 10⁷ volt/Hz, whichever is less.

OHMS (2-terminal or 4-terminal)

Ranges 200Ω, 2 kΩ, 20 kΩ, 200 kΩ, 2 MΩ, 20 MΩ
Ranging Fully Automatic or Manual
Resolution (Max) 0.0005% F.S. (1 mΩ on 200Ω range) with 5-1/2 digit display

Table 1-3. 8860A Specifications (cont)

Accuracy Using front panel zero, \pm (% of input + no. of digits)

5-1/2 DIGIT DISPLAY

RANGE	24 HR 23°C \pm 1°C	90 DAY 18°C - 28°C	1 YR 18°C - 28°C
200	(0.008 + 4)	(0.012 + 4)	(0.015 + 4)
2k-200 k Ω	(0.006 + 2)	(0.01 + 2)	(0.013 + 2)
2M	(0.01 + 3)	(0.014 + 3)	(0.017 + 3)
20M	(0.07 + 3)	(0.09 + 3)	(0.10 + 3)

4-1/2 DIGIT DISPLAY

RANGE	90 DAY 18°C - 28°C	1 YR 18°C - 28°C
200 - 2 M Ω	(0.01 + 2)	(0.02 + 3)
20 M Ω	(0.1 + 2)	(0.14 + 3)

3-1/2 DIGIT DISPLAY

RANGE	1 YR 18°C - 28°C
200 Ω - 2 M Ω	(0.1 + 1)
20 M Ω	(0.3 + 1)

INPUT CHARACTERISTICS

RANGE	CURRENT THRU RX	OPEN CIRCUIT VOLTAGE
200	1 mA	6.0V MAX
2 k Ω	1 mA	
20 k Ω	100 μ A	
200 k Ω	10 μ A	
2 M Ω	1 μ A	
20 M Ω	.1 μ A	

Maximum Input 300V DC or Peak AC

Ohms Settling Times

RANGE	5-1/2 and 4-1/2 DIGIT (TO .01% OF STEP)		3-1/2 DIGIT (TO .1% OF STEP)	
	NO FILTER	FILTER	NO FILTER	FILTER
200 - 20 k Ω	100 ms	<300 ms	<15 ms	<300 ms
200 k Ω		<1.1s		<800 ms
2m		<650 ms		<500 ms
20m	<1.5s*	<6.8s	<600 ms*	<4.5s

*For these ranges the filter is recommended. This will reduce the effects of noise pick-up common to all high impedance measurements.

Table 1-3. 8860A Specifications (cont)

GENERAL

DISPLAY	RESOLUTION (% FS)	MAX READING/SEC	LINE FREQ. (HZ)	A/D INTEGRATE TIME (MS)
5-1/2	0.0005	2.5	50, 60	100
4-1/2	0.005	15 12	60 50	16-2/3 20
3-1/2*	0.05	30	50, 60	2

*Accessible through IEEE-488 or Calculating Controller options only.

Temperature 0°C to +50°C operating; -40°C to +75°C non-operating.

Temperature Coefficient ±0.1 x applicable accuracy specification per °C

Relative Humidity ≤80% to +35°C; ≤70% to +50°C

Shock & Vibration MIL-T - 28800B, class 4

Power 100, 120, 220, 240V AC ±10%, 250V AC MAX., 50 Hz or 60 Hz

Size 13.08 cm x 20.45 cm x 32.69 cm (HxWxL)
(5.15 in x 8.05 in x 12.85 in) See Figure 1-1.

Weight 3.39 kg (7.48 lbs.)

Protection Class 1 Relates solely to insulating or grounding properties defined in IEC 348

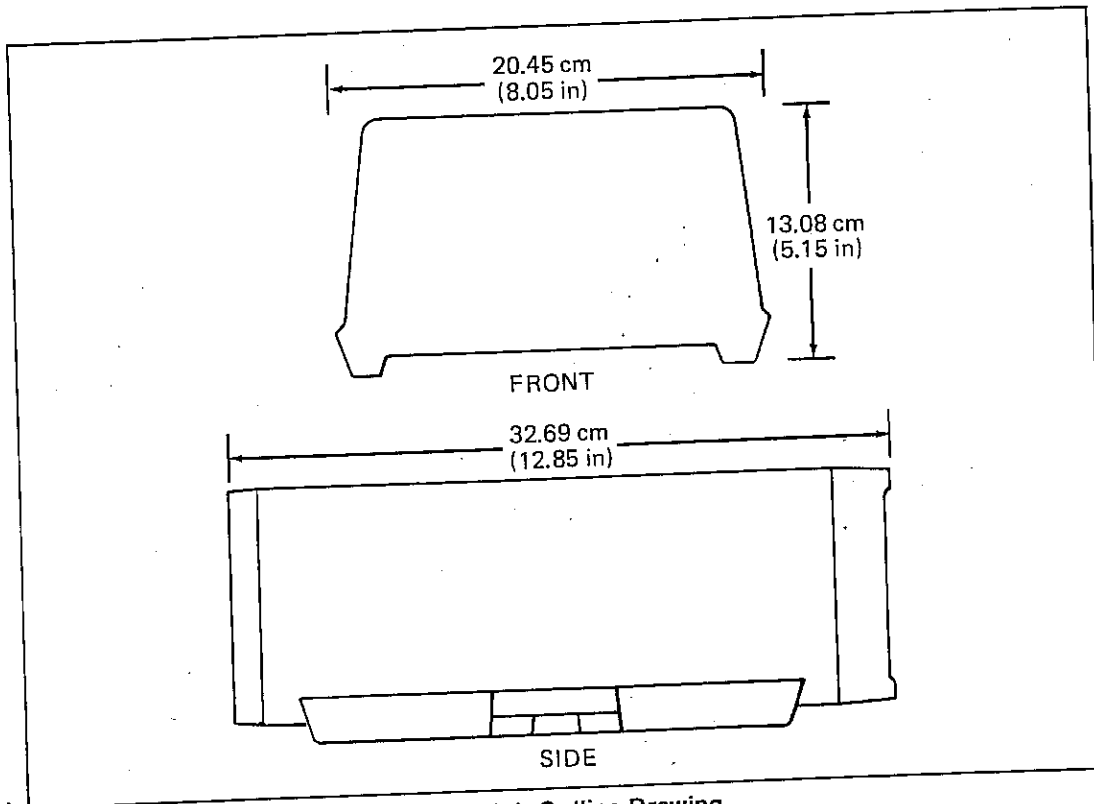


Figure 1-1. Outline Drawing

0000A

Section 2

Shipping and Service Information

2-1. INTRODUCTION

2-2. The 8860A is packaged and shipped in a foam-packed container. Upon receipt of the instrument, inspect it thoroughly for possible shipping damage. Special instructions for inspection and claims are included on the shipping container.

2-3. If reshipment is necessary, use the original container. If the original container is not available, order a new one from John Fluke Mfg. Co., Inc.; P.O. Box 43210; Mountlake Terrace, WA 98043; telephone (206) 774-2211.

2-4. SERVICE INFORMATION

2-5. Each John Fluke Model 8860A Digital Multimeter is warranted for a period of 1 year upon delivery to the original purchaser. The WARRANTY is located at the front of this manual.

2-6. Factory authorized calibration and service for each Fluke product is available at various worldwide locations. A complete list of these service centers is given in Appendix A. If requested, an estimate will be provided before any work begins on instruments that are beyond the warranty period.

2-7. QUESTIONS/PROBLEMS

2-8. For any additional information, contact your nearest John Fluke Sales Representative (see Appendix A) or the John Fluke Mfg. Co., Inc. at the address or telephone number given above.

Section 3

Installation and Maintenance

3-1. INTRODUCTION

3-2. This section of the manual contains installation and operator maintenance information for the basic 8860A. Review the installation information prior to using the instrument. Have a qualified technician perform any procedures that require internal access to the 8860A. Perform the operator maintenance procedures as required.

3-3. Installation and maintenance procedures that apply to the 8860A Options are included in Section 5 of this manual. The installation of these options must be performed by a qualified technician. However, some routine maintenance procedures, such as battery replacement, can be accomplished by the operator.

3-4. INSTALLATION

3-5. Bench-Top

3-6. The 8860A is designed primarily as a bench-top instrument. It is housed in a Fluke Portable Test Instrument (PTI) case. The case includes: non-marring rubber feet, a fold-down bail for tilting the unit, a retractable carrying handle, and the ability to stack and lock with other PTI instruments.

3-7. The fold-down bail is located on the bottom front of the instrument. To use the bail: pull it away from the bottom of the instrument by its cross-bar, and lock it in the extended position by pressing it up into the case. To retract the bail: pull it out of the locked position, fold it up, and press it into its retracted position latch.

3-8. The stacking feature of the PTI case allows the 8860A to be stacked with, and locked to other Fluke instruments in the PTI product line. Use the following procedure to stack PTI instruments:

1. Locate and pull the black latches on both sides of the unit to their extended position.
2. Place the unit on top of the PTI stack with the front panel toward the front of the stack.
3. When the unit is properly seated, push both latches in. This will lock the unit to the stack.

3-9. Rack-Panel Mounting

3-10. A series of rack-panel-mount kits (accessories) are available for installing the 8860A in a standard 19-inch equipment rack or in a DIN-size panel opening. The available kits are shown in Table 3-1. Typical kit configurations are shown in Figure 3-1. Installation instructions are included with each kit.

Table 3-1. 8860A Panel-Mount Kits

DESCRIPTION	MODEL NUMBER
Rack Mount, 19-inch, Offset-Right	Y2016
Rack Mount, 19-inch, Side-by-side	Y2017
Panel Mount, DIN-Size	Y2021

3-11. Input Line Voltage

3-12. The 8860A is internally configured to operate from a 100, 120, 220, or 240V ac $\pm 10\%$ (250V ac maximum), 50 or 60 Hz $\pm 0.1\%$ power line. A decal on the rear panel of the instrument specifies the voltage selected prior to shipment. The procedure to select another voltage or frequency is given in the 8860A Calibration Manual. The selection procedure should be performed only by a qualified technician.

3-13. Line voltage is applied to the 8860A by way of a rear-panel, three-prong power connector. Use the three-wire line cord supplied with the unit to make the connection between line power and the 8860A. The offset prong on the line cord should be connected to a high quality earth ground.

3-14. OPERATOR MAINTENANCE

3-15. Operator maintenance for the 8860A is limited to cleaning and fuse replacement. Detailed calibration and service procedures are included in the Calibration and Service Manuals.

3-16. Fuse Replacement

3-17. The fuse is located in the lower-left corner of the rear panel. When fuse replacement is necessary, remove the fuse-cap by turning it $1/8$ of a turn counterclockwise with a screwdriver. The fuse will pull out with the fuse-cap. Replace the fuse with one of the proper rating:

For 110 or 120V ac, use 1/4A slo-blo 250V
 For 220 or 240V ac, use 1/8A slo-blo 250V

3-18. Cleaning

3-19. Periodically clean the front panel using a soft cloth dampened with a mild solution of detergent and water. Use low pressure air (< 20 psi) to clear dust from corners, crevices, and rear-panel connectors.

CAUTION

Do not use aromatic hydrocarbons or chlorinated solvents for cleaning the 8860A. They have adverse effects on plastic materials.

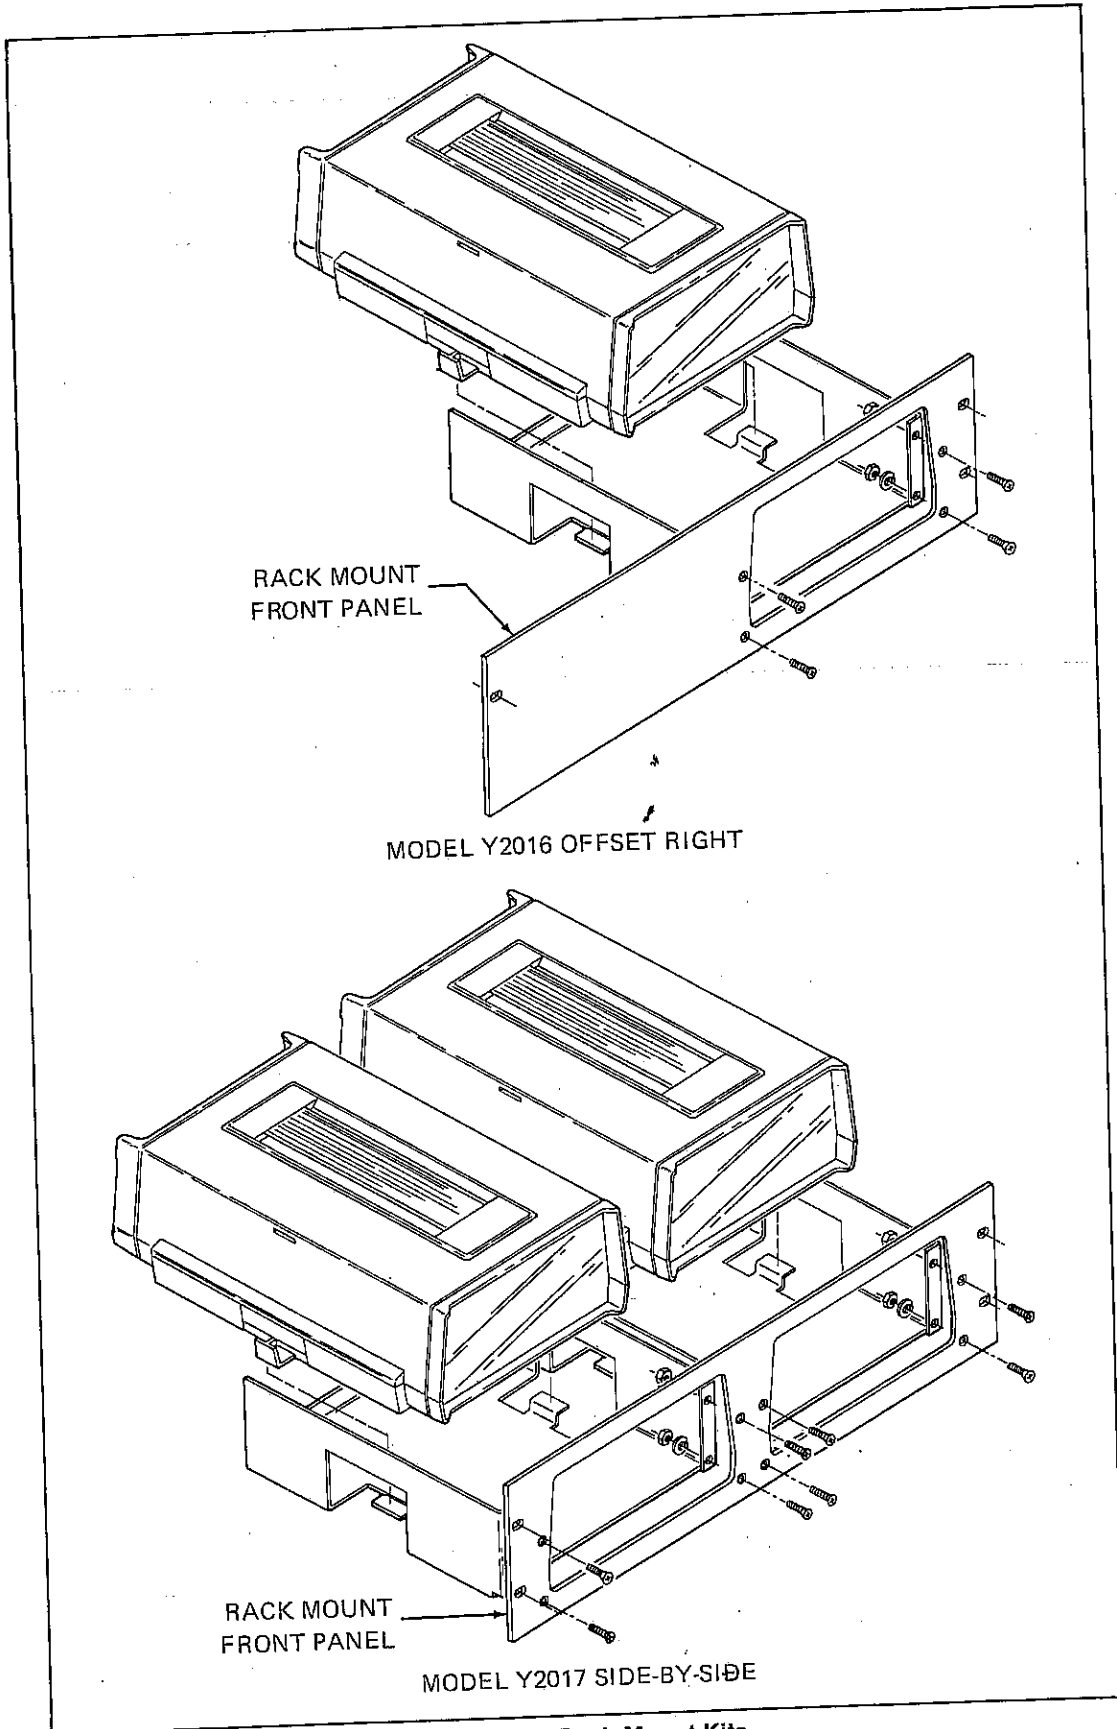


Figure 3-1. Rack Mount Kits

Section 4 Operating Instructions

4-1. INTRODUCTION

4-2. This section of the manual contains the operating instructions for the 8860A. Successful and efficient operation of the 8860A requires an understanding of the unit's features and capabilities. Both are described in detail under Operating Features and Operating Notes. They are followed by operating instructions that assume a knowledge of the instrument's features and capabilities.

4-3. OPERATING FEATURES

4-4. The 8860A front-panel controls, indicators, and connectors are shown in Figure 4-1 and described in Table 4-1. Similarly, the rear-panel features are shown in Figure 4-2 and described in Table 4-2.

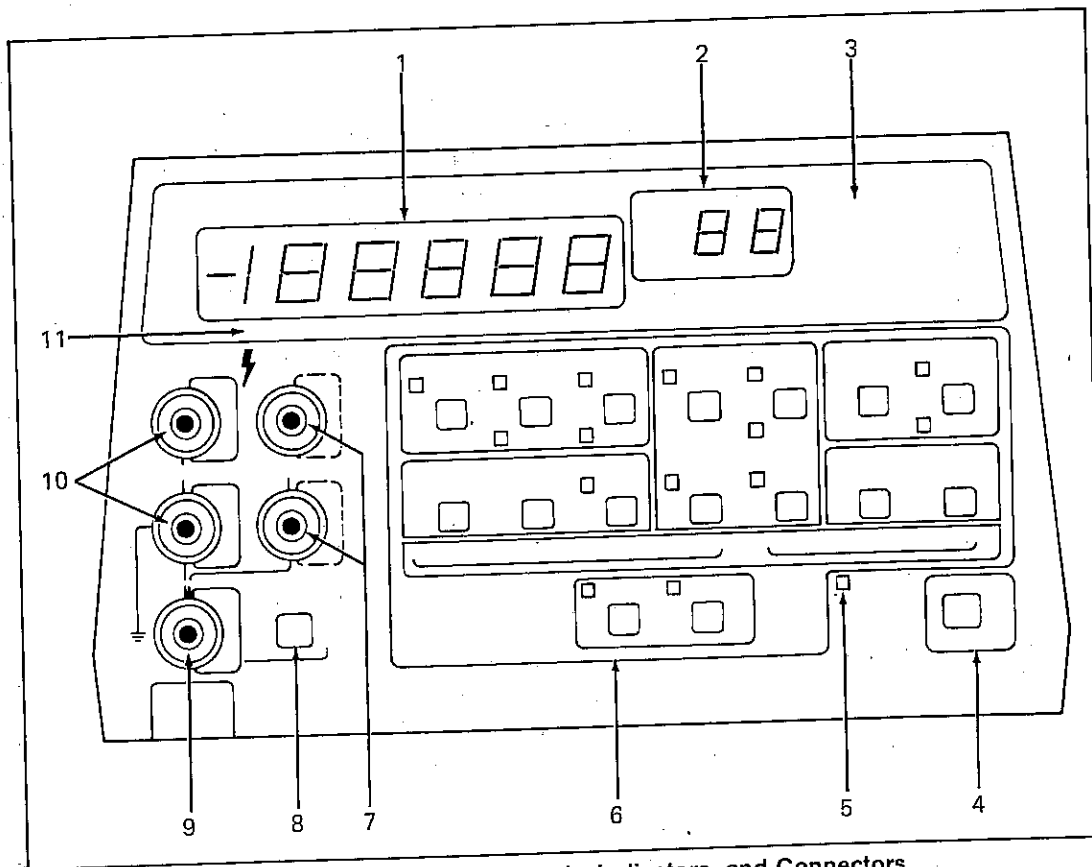


Figure 4-1. Front Panel Controls, Indicators, and Connectors

Table 4-1. Front Panel Controls, Indicators, and Connectors

REF. NO.	NAME	FUNCTION
1	Mantissa Field	The mantissa field is a 5-1/2 digit LED display complete with polarity indicator and a floating decimal point. Measurement data and other operator data is displayed in the mantissa field.
2	Exponent Field	The exponent field is a two digit LED display plus a negative sign. It is used for displaying error codes, limit results (H, L, P), and exponents of 10. Exponents are used for entering, storing, and recalling data. It is not used to display basic measurement data.
3	Annunciators	Measurement units of the selected measurement function are defined by the annunciators. They include: V, mV, Ω , k Ω , and M Ω .
4	POWER Switch	The POWER switch is a push-push switch used to turn the 8860A on and off.
5	REMOTE Indicator	Lights to indicate that the 8860A is in the remote operating mode. When the light is off, the 8860A is in the local mode.
6	Control	All 8860A measurement, control, and data functions are governed by these multi-function push-button switches. The switches are divided into functional groups. They are: Measurement FUNCTIONS Measurement RANGE Measurement MODIFIERS Measurement SAMPLE Local/Remote CONTROL Numeric Data STORE Numeric Data RECALL NUM and FCN (Alternate switch assignment selectors, NUM enables gray assignments, FCN enables rust assignments)
7	Ω 4T SENSE Connectors	Two recessed banana connectors (HI and LO). They are used for connecting the sense leads when making four-terminal resistance measurements.
8	GUARD Switch	A push-push switch used to connect the internal guard shield to the GD (guard) connector (EXT GD) or to the LO INPUT connector (NORM). The GD connector is open when the GUARD switch is set to NORM.
9	GD (Guard) Connector	A recessed banana connector for making external guard connections when the GUARD switch is set to EXT GD. The GD connector is open when the GUARD switch is set to NORM.

Table 4-1. Front Panel Controls, Indicators, and Connectors (cont)

REF. NO.	NAME	FUNCTION
10	INPUT Connectors	Two recessed banana connectors (HI and LO). They serve as the input connections for voltage and two-terminal resistance measurements. They operate as the current source output connections when making four-terminal resistance measurements.
11	Range	The range indicators are the decimal points in the mantissa field. The annunciators define the measurement units and the range indicators define the range in terms of the measurement units, e.g., 10 (range indicator), M Ω (measurement units) is the 10 M Ω range).

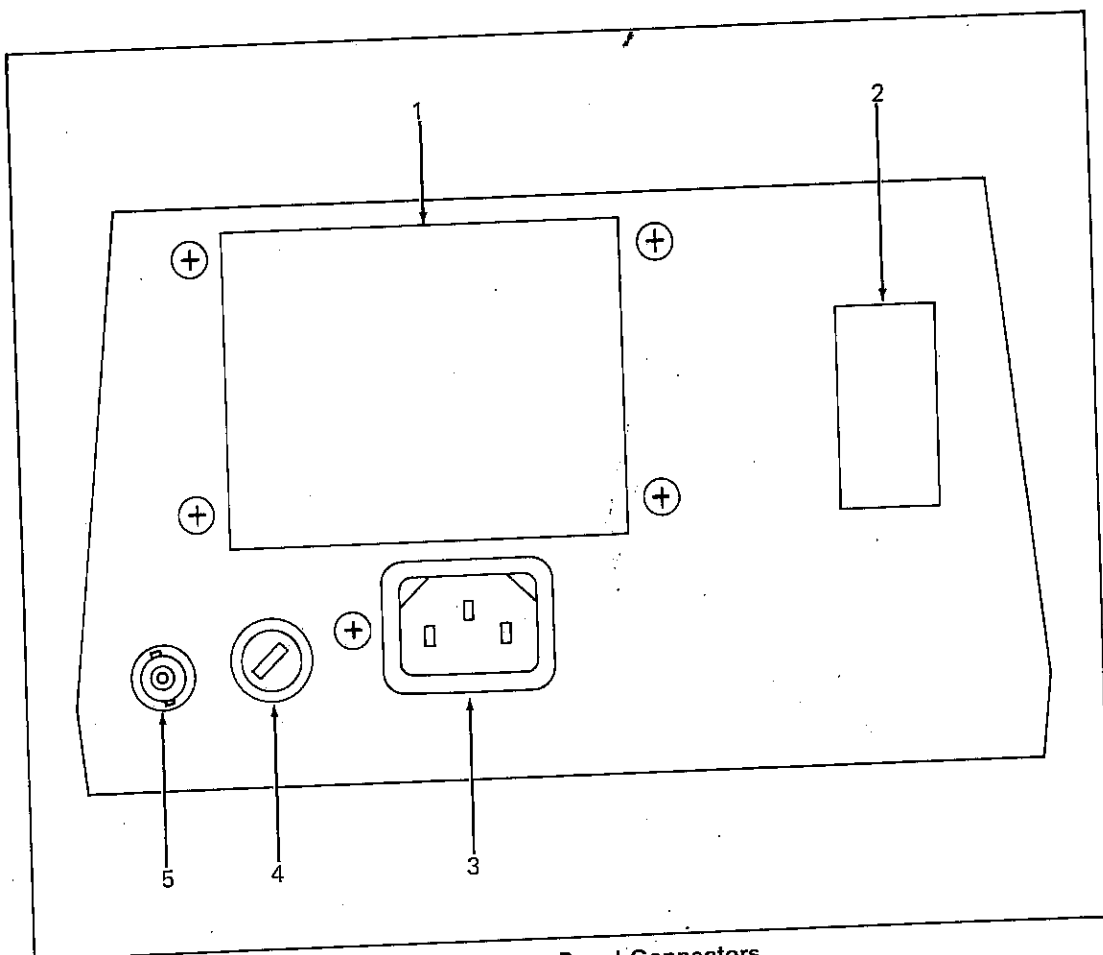


Figure 4-2. Rear Panel Connectors

Table 4-2. Rear Panel Connectors

REF.NO.	NAME	FUNCTION
1	I/O Cover	A protective cover that is present when the Calculating Controller Option (-004) or the IEEE-488 Interface Option (-005) is not installed. Connectors are in this location if either of these options is installed in the 8860A.
2	Rear Input Cover	A protective cover that is present when the Rear Input Option (-006) or the DC External Reference Option (-007) is not installed. Connectors are in this location if either option is installed.
3	Input Power Connector	Three-prong power connector for connecting the 8860A, by way of the line cord, to line power.
4	Fuse	Houses the line power fuse.
5	EXT TRIG Connector	Provides BNC connection for an external trigger input.

4-5. OPERATING NOTES

4-6. The following operating notes describe various conditions, capabilities, and procedures that the operator should be aware of before attempting to operate the 8860A.

4-7. Initial Turn-On

4-8. After input line power is connected to the 8860A, as described in Section 3, turn the unit on by pressing the POWER switch to ON. The unit will initialize to the following configurations: VDC, autorange, all MODIFIERS disabled, slow SAMPLE RATE (2-1/2 readings per second, 5-1/2 digit resolution). The display will remain blank until initialization is complete.

4-9. Input Overload Limits

WARNING




TO AVOID SHOCK HAZARD OR EQUIPMENT DAMAGE, DO NOT APPLY INPUT POTENTIALS THAT EXCEED THE INPUT OVERLOAD LIMITS.

4-10. All 8860A measurement functions are input overload protected. The overload limits are given in Table 4-3. Exceeding these limits may damage the instrument and/or pose a shock hazard to the operator.

4-11. Measurement Connections

4-12. There are five test-lead connectors on the 8860A front panel. They are divided into three groups: INPUT HI and LO, SENSE HI and LO, and GD (guard). The following paragraphs discuss test lead connection and the proper use of each of the three connector groups.

Table 4-3. Input Overload Limit

TERMINALS	FUNCTIONS	MAXIMUM INPUT
Input	VDC  VAC  VAC 	HI to LO 1000V peak LO to GD, 30V LO to earth ground, 500V peak
	Ω 2T Ω 4T	HI to LO 300V dc or peak ac
Sense	Ω 4T	HI to LO, 300V peak
EXT TRIG	ALL	5V peak

4-13. INPUT HI AND LO

4-14. Connect the test leads to the INPUT HI and LO connectors for all voltage and two-terminal resistance measurements. The test leads are interchangeable for two-terminal resistance measurements unless a semiconductor device is being measured. In this event, the HI connector lead is positive with respect to the LO connector lead. Test currents and open circuit voltage for all resistance ranges are listed in Table 4-4.

4-15. When making voltage measurements, connect the LO connector lead probe to circuit common or the lowest of the two potentials with respect to earth ground. This establishes the reference level for the measurement and ensures a proper polarity indication for dc measurements. It also minimizes the possibility of exceeding the 500V peak limit between LO INPUT connector and earth ground. Connect the HI connector lead to the highest of the two terminals with respect to earth ground.

4-16. SENSE HI AND LO

4-17. The Ω 4T SENSE connectors provide for the connection of sense leads when making four-terminal measurements. They are used in conjunction with the INPUT connectors. A constant test current is supplied to the test resistor with the INPUT connector test leads. The sense test leads are connected across the resistor as voltage sensors. As a result, errors caused by the voltage drop across the INPUT connector test leads are eliminated from the measurement.

Table 4-4. Ω 2T and Ω 4T Test Current and Open Circuit Voltage

RANGE	TEST CURRENT	OPEN CIRCUIT VOLTAGE
100 Ω 1 k Ω 10 k Ω 100 k Ω 1 M Ω 10 M Ω	1 mA 1 mA 100 μ A 10 μ A 1 μ A 100 nA	< 6V dc on all ranges

4-18. Proper use of the SENSE HI and LO connector is shown in Figure 4-3. Notice that the HI and LO test leads for both the INPUT and SENSE connectors are paired at

the test resistor, i.e., INPUT HI and SENSE HI are connected together, as are INPUT LO and SENSE LO. The test current and the open circuit voltages for four-terminal measurement are the same as those listed in Table 4-4.

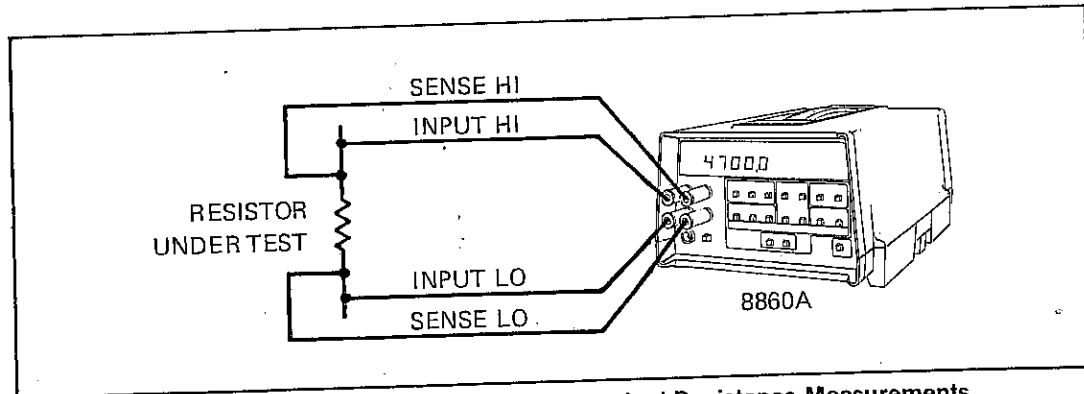


Figure 4-3. Test Connections for Four-Terminal Resistance Measurements

4-19. GD (GUARD)

4-20. The GD connector operates in conjunction with the GUARD switch to eliminate measurement errors associated with common mode voltages which are encountered when making floating measurements. Figure 4-4 shows some typical measurement connections using the guard. If external guarding is not required for a measurement, set the GUARD switch to the NORMAL position.

4-21. The GUARD switch is a two-position, mechanical latching switch. When the switch is set to the out position (NORMAL), it connects the internal guard shield to the LO INPUT connector and disconnects the front-panel GD connector from the internal guard shield. When the Guard switch is set to the in position (EXT GD), it disconnects the internal guard shield from the LO INPUT connector and connects the front-panel GD connector to the internal guard shield.

4-22. Display Indications


4-23. The display, as shown in Figure 4-1, consists of a 5-1/2 digit mantissa field, a two digit exponent field, range indicators, and function annunciators. A given display reading uses a combination of these indicators to communicate with the user. Display information is presented in one of the following forms: measurement data; overrange/overvoltage indications; high, low, pass indications; numeric input data and error codes.

4-24. MEASUREMENT DATA

4-25. Basic measurement data is displayed in the mantissa field as a 4-1/2 or 5-1/2 (selectable) digit reading with a floating decimal point and function annunciator. Range information is provided by the decimal point and a function annunciator. The exponents are not used in displaying measurement data.

4-26. OVERRANGE AND OVERVOLTAGE

4-27. An overrange display indicates a reading above the limit or capability of the present range. It appears as a 1 in the most significant digit of the mantissa field (with polarity for VDC), and the decimal point indicates the range. The rest of the display is blank. Removing the input condition or changing to an acceptable range clears the indication.

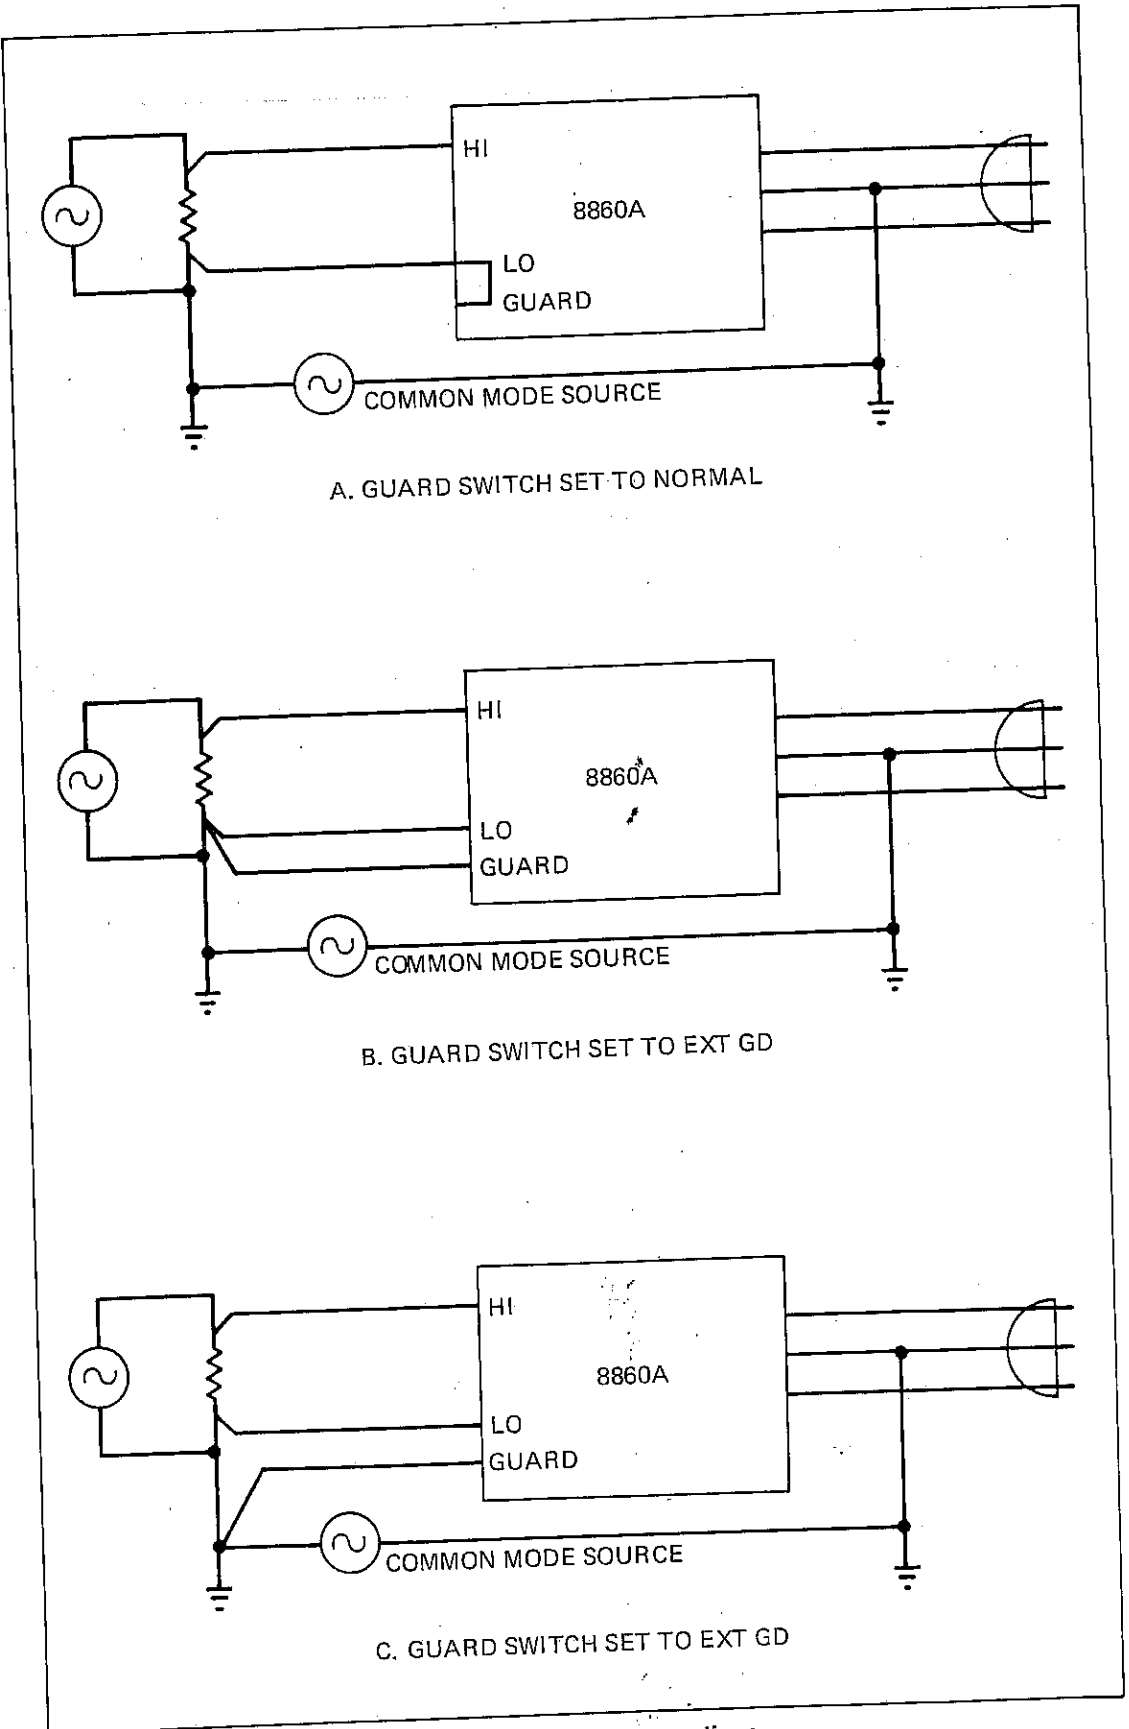

A. GUARD SWITCH SET TO NORMAL

B. GUARD SWITCH SET TO EXT GD

C. GUARD SWITCH SET TO EXT GD

Figure 4-4. Guard Connections

4-28. An overvoltage display indicates that the input voltage level exceeds the maximum input specified for the instrument (1000V dc or 700V rms ac). It only occurs on the 1000V range. The display will indicate the measured value, but will flash to indicate the overvoltage condition and the potential for instrument damage.

4-29. HIGH-PASS-LOW

4-30. Part of the display for limits and pk-pk measurements is a single H, P, or L (high, pass, or low) character in the exponent field. This character is the result of a comparison and complements the measurement data. Refer to the limits and pk-pk functions described later in this section.

4-31. NUMERIC INPUT DATA

4-32. Numeric data can be entered manually from the front panel of the 8860A. The data is displayed as it is entered. It appears as a left justified, dimensionless number with a decimal point. Exponents may be used with numeric input data. The exponent field includes polarity and a two digit exponent of 10.

4-33. ERROR CODES

4-34. The 8860A has built-in diagnostic software for analysing operation of the front-panel controls. An error code is displayed when an improper operation is detected. The code is displayed as Err in the mantissa field and a two digit number in the exponent field. Table 4-5 lists and defines the 8860A error codes. Errors that are not caused by hardware failures are automatically cancelled when the next reading is taken or another function is selected.

Table 4-5. 8860A Error Codes

ERROR CODE	DEFINITIONS
10	External reference not present. Connect reference or cancel selection.
11	Input greater than analog zero range (99 μ V or 99 $m\Omega$). Verify DMM Calibration.
12	A/D data received is not BCD.
13	Exponent magnitude too large.
14	Guard Crossing data error. Cannot start receiver.
15	Guard Crossing data error. Bit error in receiver.
16	Guard Crossing data error. Cannot start transmitter.
17	Guard Crossing data error. Bit error in transmitter.
18	Offset result cannot be displayed. Overrange indication has priority over display of this error code. Reduce offset or input.

4-35. Front-Panel Push Buttons

4-36. All push-button switches on the 8860A front panel, except NUM, FCN, GUARD, and POWER, have multifunction assignments. Their primary assignments are labeled in black above each switch. Alternate assignments are labeled in gray and rust, beside and below each switch. The alternate functions are enabled by pressing either the NUM or the FCN switch. The NUM switch enables the gray functions next to the

switches. The NUM light is lit while the gray functions are enabled. Pressing NUM again turns off the NUM light and returns the push-button switches to their primary (black) assignments. The FCN switch is used in the same manner as the NUM switch. Pressing FCN enables the rust switch assignments.

4-37. The black and rust assignments are used for DMM control and storage functions. The gray assignments are the equivalent of a numeric keyboard; they are used to manually enter numeric data. Numeric entries are used in conjunction with, and as supplements to the control and storage functions. Each of the front-panel switch assignments and the proper use of each switch is described in the following paragraphs. The descriptions are keyed to the switch grouping as outlined on the front panel.


NOTE


The function and operation of the POWER and GUARD switches are described earlier in this section under Initial Turn-On and Measurement Connections.

4-38. FUNCTION


4-39. The FUNCTION switches provide for the selection of the measurement function. They are electronically interlocked so that only one function can be selected at any given time. Available functions include: VDC, VAC \sim , VAC $\overline{\sim}$, Ω 2T, Ω 4T. Pressing any one of the FUNCTION switches will enable that function and disable the previous function. Remember, the alternate rust assignments require the use of the FCN switch. Proper selection is verified by a light next to the switch assignments. (The ZERO function is a momentary control and does not require a light).


4-40. Each of the FUNCTION switches, their operation, and their interaction with switch groups is described in the following list:

VDC \equiv  The VDC \equiv function is used for making dc voltage measurements. It can be used in conjunction with the FILTER MODIFIER and the ZERO FUNCTION switches. Noise rejection is improved when the filter is enabled. Unwanted voltage offsets can be eliminated from a measurement by enabling the ZERO function. The proper use of the zero feature is described later in this list.

VAC \sim  The VAC \sim function is used for making ac coupled, true rms ac voltage measurements. The FILTER and the ZERO switches have no effect when the VAC \sim function is enabled.

The VAC $\overline{\sim}$ function is used for making dc coupled, true rms ac voltage measurements; the dc component is included in the measurement result. The FILTER and the ZERO switches have no effect when the VAC function is enabled.

Ω 2T  The Ω 2T function is used for making two-terminal resistance measurements. The measured resistance is sensed at the INPUT connectors. As a result, lead resistance is included in the measurement. Short the test leads and enable the ZERO function to eliminate unwanted lead resistance from the measurement. The zero for VDC and Ω 2T are separate and independent operations. Enable the FILTER to improve noise rejection.




The $\Omega 4T$ function is used for making four-terminal resistance measurements. The measured resistance is sensed at the test resistor. As a result, lead resistance is eliminated from the measurement. Proper connections for four-terminal resistance measurements are described earlier in this section under Input Connections. The ZERO and FILTER are functional if required.



The ZERO function is used for making zero offset corrections when using the VDC, $\Omega 2T$, or $\Omega 4T$ measurement functions. Separate and independent corrections are stored for VDC and ohms. To correctly zero a function, short the test leads and enable the ZERO function. Zero corrections are limited to the range of ± 99 μV or 99 m Ω . An Err 11 is displayed if the correction value is not within the usable range.

4-41. RANGE

4-42. Measurement ranges for the enabled measurement function are selected using the RANGE switches. These include: AUTO (autorange), UP, and DOWN. Autoranging is enabled or disabled each time the AUTO switch is pressed (toggle operation). The operation and interaction of the switches is described in the following list:



Autorange is enabled when the AUTO light is on. When the light is off, ranges are selected manually using the UP and DOWN switches. When autorange is disabled the present range remains enabled, as indicated by the decimal point in the mantissa field.

Autorange is disabled by pressing the AUTO switch to turn off the AUTO light. It is also disabled when the UP or DOWN switch is pressed, and the indicated range change is possible. If a change is not possible (i.e., the highest, UP, or lowest, DOWN, range is already selected), autorange remains enabled.



The UP switch is used to manually select the ranges above the one indicated by the decimal point in the mantissa field. Each press of the UP switch increments the 8860A to the next higher range. If it is pressed while autorange is enabled, it cancels autorange and selects the next higher range. If a higher range is not available, the command is ignored unless a voltage function is enabled. In this event autorange is cancelled.



The DOWN switch is used to select the ranges below the one indicated by the decimal point in the mantissa field. Each press of the DOWN switch decrements the 8860A to the next lower range. If it is pressed while autorange is enabled, it cancels autorange and selects the next lower range. If a lower range is not available, the command is ignored.

4-43. MODIFIERS

4-44. The MODIFIER switches control independent functions that supplement the basic measurement functions. They include: FILTER, LIMITS, PK-PK, EXT REF, and OFFSET. The switches operate in a toggle fashion and are not interactive except for LIMITS and PK-PK. A light next to each switch is lit when the modifier is enabled. The function and operation of each of the MODIFIER switches is given in the following list.



The filter, when enabled, provides additional noise rejection for measurements using the VDC, $\Omega 2T$, and $\Omega 4T$ FUNCTIONS. The VAC \sim and VAC \curvearrowright FUNCTIONS are not affected by the FILTER modifier. When the FILTER light is on the filter is enabled.

- EXT REF The EXT REF modifier is functional only when the External Reference, Option -007, is installed in the 8860A. If the External Reference Option is not installed, an error code (Err 10) is displayed when EXT REF is enabled.

When the External Reference Option is installed and enabled, a voltage applied to the rear panel EXT REF terminals (± 1 to 11V dc) is used in place of the internal voltage reference. Measurements are displayed as 10X the ratio of the input voltage (VDC, VAC \sim , or VAC $\overline{\sim}$) to the external reference voltage. Refer to Section 5 of this manual for a description of the External Reference function and details for making resistance ratio measurements.

- OFFSET The offset feature is used to subtract the numeric contents of the Offset Data Register from the present measurement and display the result. An error code, Err 18, is displayed when the computed offset value is beyond range for the selected measurement function.

The offset value subtracted from the display is stored in the Offset Data Register. The stored value can be taken from a displayed reading or keyed in manually from the front panel. Stored data is retained for future use when the offset function is disabled. Instructions for storing and recalling data from the Data Registers are given later in this section under Data Registers and Alternate Switch Assignments.

- LIMITS Pressing the LIMITS switch will enable the limits function and cancel the PK-PK function if enabled. The limits function compares the present measurement to the contents of the High and Low Data Registers and displays an L, P, or H in the exponent field.

H when reading is $>$ high limit
L when reading is $<$ low limit
P when low \leq reading \leq high

- PK-PK Enabling the PK-PK function cancels the LIMITS function if enabled. The PK-PK function is used to store the high and low level changes that occur about a reference level. It can be used with all measurement functions.

When a PK-PK measurement is initiated, each new measurement is compared with the values stored in the High/Low Data Registers. If the measurement is higher than the high limit value, the High Data Register is updated to the measurement value, and an H is displayed momentarily in the exponent field. If the measurement is lower than the measurement value, the Low Data Register is updated to the measurement value, and an L is displayed momentarily in the exponent field.

The high and low limit values can be set to specific values prior to starting PK-PK measurements, or they can both be preset to the present measurement value. Instructions for operating the Data Registers are given later in this section.

4-45. SAMPLE

4-46. The SAMPLE switches are used to select the trigger mode and to establish the display resolution. Trigger selections include continuous, manual, and external. Two

switches control the sample mode: TRIG ARM and RATE. The TRIG/RUN switch is used primarily as a manual trigger. The function and operation of each of the SAMPLE switches follow:

RATE The Rate switch selects one of two continuous sample rates. Display resolution and integration period are a function of the selected sample rate. The sample rates (readings per second, rps) resolution (digits), and integration periods (ms) are as follows:

1. 2-1/2 rps, 5-1/2 digits, 100 ms
2. 15 rps (60 Hz), 4-1/2 digits, 16-2/3 ms
12-1/2 rps (50 Hz), 4-1/2 digits, 20 ms

The selected reading rate (slow or fast) can be determined by observing the TRIG/RUN light while continuous sample is enabled. The light blinks once for each sample.

TRIG ARM The TRIG ARM switch is used to select the trigger mode (continuous sample or trigger sample). Continuous sample is enabled when the TRIG ARM light is off. When the TRIG ARM light is on, continuous sample is disabled. However, the selected resolution and integration period are not altered. A sample is initiated by pressing the TRIG/RUN switch or by using an external trigger at the rear-panel EXT TRIG connector. The TRIG/RUN light blinks to indicate that a sample is being taken.

TRIG/RUN The TRIG/RUN switch is active when the TRIG ARM light is on. It is used in the local mode to manually initiate a measurement. The TRIG/RUN light blinks to indicate that a measurement is being taken.

In the remote mode, the TRIG/RUN switch is used with the Calculating Controller (Option -004) as a RUN command. It is also used with the IEEE-488 Interface (Option -005). Refer to Section 5 of this manual for information concerning the -004 and -005 Options.

4-47. CONTROL

4-48. The CONTROL switches are used to select the operating mode (local or remote) and remote programs associated with the Calculating Controller (Option -004). They include: LOC/REM and PROG SEL. They are active only when either the Calculating Controller (-004) or the IEEE-488 Interface (-005) Option is installed. The operation of each is described in the following list:

LOC/REM The LOC/REM switch alternately selects the local and remote operating modes. When remote is enabled, the REMOTE light (to the left of the POWER switch) is on. Local operation is enabled when the light is off.

PROG SEL The PROG SEL switch is only active in the local mode. When it is pressed (in local), measurement samples are stopped and a P is displayed in the mantissa field. The P is a prompt to enter a program label (0-9) for selecting a remote Calculating Controller program.

4-49. DATA REGISTERS (OFFSET - HIGH - LOW)

4-50. The Data Registers are used in conjunction with the OFFSET, LIMITS, and PK-PK MODIFIERS. They are controlled by the STORE and RECALL switch groups. The STORE switches are used to enter numeric display values into the registers. The values

can be taken from a measurement reading or from manually entered data using the front-panel numeric switches (i.e., the gray switch assignments associated with the NUM switch). The RECALL switches are used to display the values present in the registers.

4-51. When the 8860A is initially turned on, the Data Registers are reset to zero. To verify the contents of each of the registers, press the FCN switch followed by one of the RECALL switches. The contents of the recalled register is displayed as long as the RECALL switch is held in. The display returns to the measurement function within a few seconds after the switch is released.

4-52. Values are stored in the Data Registers as dimensionless numbers expressed as exponents of 10. However, when the number is selected for storage it does not have to be expressed as a exponent of 10. Thus, measurement values can be stored directly from the display or they can be manually entered. The exponent of 10 conversion is accomplished by the 8860A.

4-53. The range of values that can be stored in the Data Register is $\pm 1.99999 \pm 99$. If the maximum value is exceeded, an error code, Err 13, is displayed. A summary of the Data Register operations follows:

STORE Use these switch sequences to store presently displayed numeric values (including exponents if any) in the addressed Data Register:

FCN STORE OFFSET
FCN STORE HIGH
FCN STORE LOW

Use this switch sequence to store presently displayed numeric values (including exponents if any) in both the High and Low Data Registers.

FCN STORE PK-PK


RECALL Use these switch sequences to recall stored numeric values to the display. The recalled value is displayed while the RECALL switch is held in. The value is removed from the display a few seconds after the switch is released.

FCN RECALL OFFSET
FCN RECALL HIGH
FCN RECALL LOW

4-54. ALTERNATE SWITCH ASSIGNMENTS (SHIFT)

4-55. The FCN and NUM switches are toggle action switches, push to enable, push to clear. They are used to enable or clear the alternate rust and gray switch assignments. The FCN switch controls the rust assignments, and the NUM switch controls the gray assignments. Selecting either assignment will cancel the other. A light next to each switch (FCN or NUM) is turned on to indicate the enabled assignment. When both lights are turned off, the primary (black) switch assignments are enabled. The operation of both the rust and gray switch assignments is described in the following list:

- FCN** Press the FCN switch to turn on the FCN light and enable the rust switch assignments. Continuous sampling is stopped and the NUM (gray) switch assignments are cleared if active. Perform the desired rust function by pressing the appropriate switch. After the function is executed, the FCN light is turned off, clearing the rust assignments.



Press the FCN switch to turn on the NUM light and enable the gray switch assignments. Continuous sampling is stopped and the FCN switch assignments are cleared if active. Perform the desired numeric entry using the switches as a numeric keyboard. Enter digits, decimal point, and change sign (+/-) before keying in the two-digit exponent (EEX) and its sign. Use the clear entry (CE) switch to cancel an entry. The following guidelines apply to the entry of numeric data:

1. Numbers that have a floating decimal point and are within the range of $\pm 1.99999 \pm 99$ may be entered in the mantissa field. The decimal point is ignored after its first use, and numeric entries are ignored after the field is filled.
2. The change sign (+/-) is active in the mantissa field until EEX is pressed. It is then active in the exponent field.
3. Exponents enter the field on the right and shift to the left.
4. The normal exit sequence from a numeric entry is to store the value in one of the Data Registers (PK-PK Reset, Offset, High, or Low). Each store sequence is as follows:

FCN STORE PK-PK RESET
 FCN STORE OFFSET
 FCN STORE LOW
 FCN STORE HIGH

4-56. OPERATION

4-57. With reference to the previous paragraphs, use the following procedures to make voltage and resistance measurements.

4-58. Turn-On Procedures

4-59. Use the following procedure to turn on the 8860A.

1. Verify the line power requirements shown on the rear of the 8860A, and connect the unit to an appropriate power line. Use the line cord supplied with the unit.
2. Set the POWER switch to ON. The display remains blank until the unit is initialized. Initial front panel conditions are: VDC, autorange, 5-1/2 digit display.

4-60. Making Measurements

4-61. The same basic procedure is used for making all measurements. The only exception is the use of the ZERO and FILTER switches. They are only functional when making VDC or resistance measurements. Proceed as follows:

1. Select the desired FUNCTION.
2. Select the desired RANGE.
3. Connect the appropriate test leads, and ZERO the display if the VDC, $\Omega 2T$, or $\Omega 4T$ FUNCTION is selected.
4. Select the desired MODIFIERS.

5. Select the desired SAMPLE conditions.
6. Connect the test leads to the test circuit and, if continuous sample is not enabled, trigger a sample. The measurement will appear on the display.
7. STORE and RECALL data as required to satisfy the enabled MODIFIERS and the measurement requirements.

Section 5

Option and Accessory Information

OPTION/ MODEL NO.	DESCRIPTION	PAGE
ACCESSORIES		
Y2016	Offset Rack Mount Kit	500-1
Y2017	Side-by-Side Rack Mount Kit	500-1
Y2021	PTI-to-DIN-Panel Adapter	500-1
Y2023	Accessory Case	500-2
Y7203	2-Foot Ribbon Cable, PTI	500-2
Y7204	5-Foot Ribbon Cable, PTI	500-2
Y8001	IEEE-488 Cable, 1 meter	500-2
Y8002	IEEE-488 Cable, 2 meter	500-2
Y8003	IEEE-488 Cable, 4 meter	500-2
Y8100	DC/AC Current Probe	500-2
Y8134	Test Lead Set	500-4
Y8140	Test Lead Set	500-4
Y8833	Memory Cartridge (for -004 option only)	500-6
80K-40	High Voltage Probe	500-7
80T-150	Temperature Probe	500-8
81RF	High Frequency Probe	500-9
82RF	High Frequency Probe	500-9
80J-10	Current Shunt	500-10
OPTIONS		
-004	Calculating Controller	004-1
-006	Rear Input	006-1
-007	External Reference	007-1

5-1. INTRODUCTION

5-2. This section of the manual documents the accessories and options available for use with the 8860A. It consists of a table of contents and an introduction followed by a series of subsections. The first subsection provides a description and the specifications for each of the applicable accessories. Subsequent subsections document the available options.

5-3. Unique page and paragraph numbers are used to identify each of the subsections. For example, the 500-x series identifies the accessories, and the 004-x series identifies the subsection for the -004 Option (where x is the sequential page and paragraph number).

Accessories

500-1. INTRODUCTION

500-2. This subsection describes the accessories available for use with the Model 8860A Digital Multimeter. Each accessory is described separately. The description is intended to acquaint the prospective user with the features and capabilities of the accessory. Further information is supplied with the accessory.

500-3. Y2016 OFFSET RACK MOUNT KIT

500-4. The Y2016 Rack Mount Kit is illustrated in Section 3 of this manual. It supports a single D-size PTI instrument, such as the 8860A, in a standard 19-inch equipment rack. The instrument occupies the right half of the mounting panel; the left half of the panel is blank.

500-5. Y2017 SIDE-BY-SIDE RACK MOUNT KIT

500-6. The Y2017 Rack Mount Kit supports two D-size PTI instruments side-by-side in a standard 19-inch equipment rack. The Y2017 is illustrated in Section 3 of this manual.

500-7. Y2021 PTI-TO-DIN PANEL ADAPTER

500-8. The Y2021, shown in Figure 500-1, adapts a single D-size PTI instrument, like the 8860A, to a panel with a DIN-size opening. The supplied front panel dimensions are 14.55 cm x 21.4 cm.

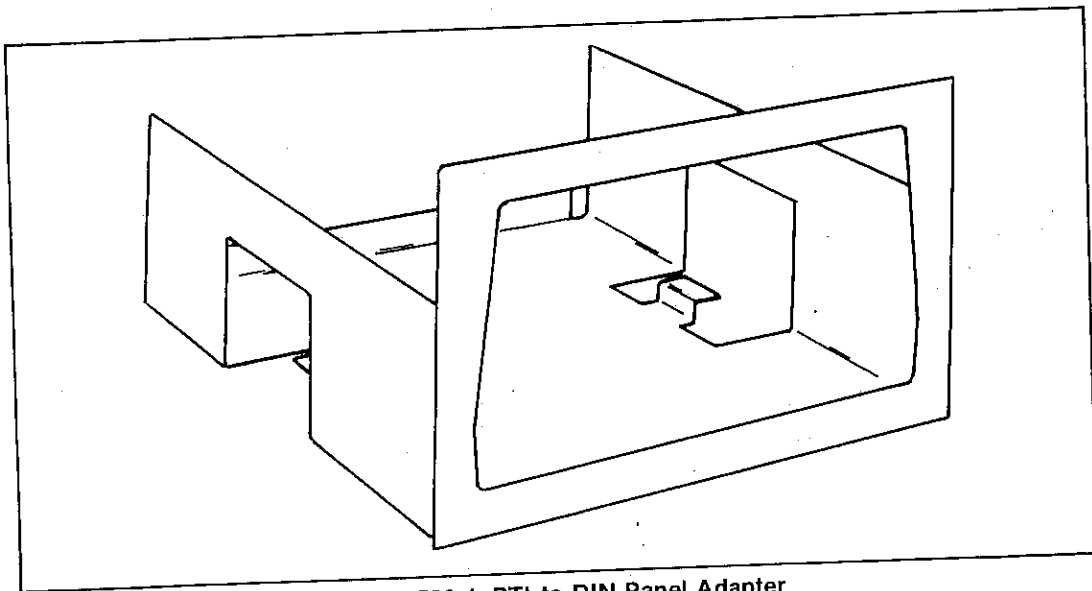


Figure 500-1. PTI-to-DIN Panel Adapter

500-9. Y2023 ACCESSORY CASE

500-10. The Model Y2023A is a PTI-style case. As shown in Figure 500-2, it has a sliding drawer that provides convenient storage for small accessories. It is designed to stack with and latch to the 8860A.

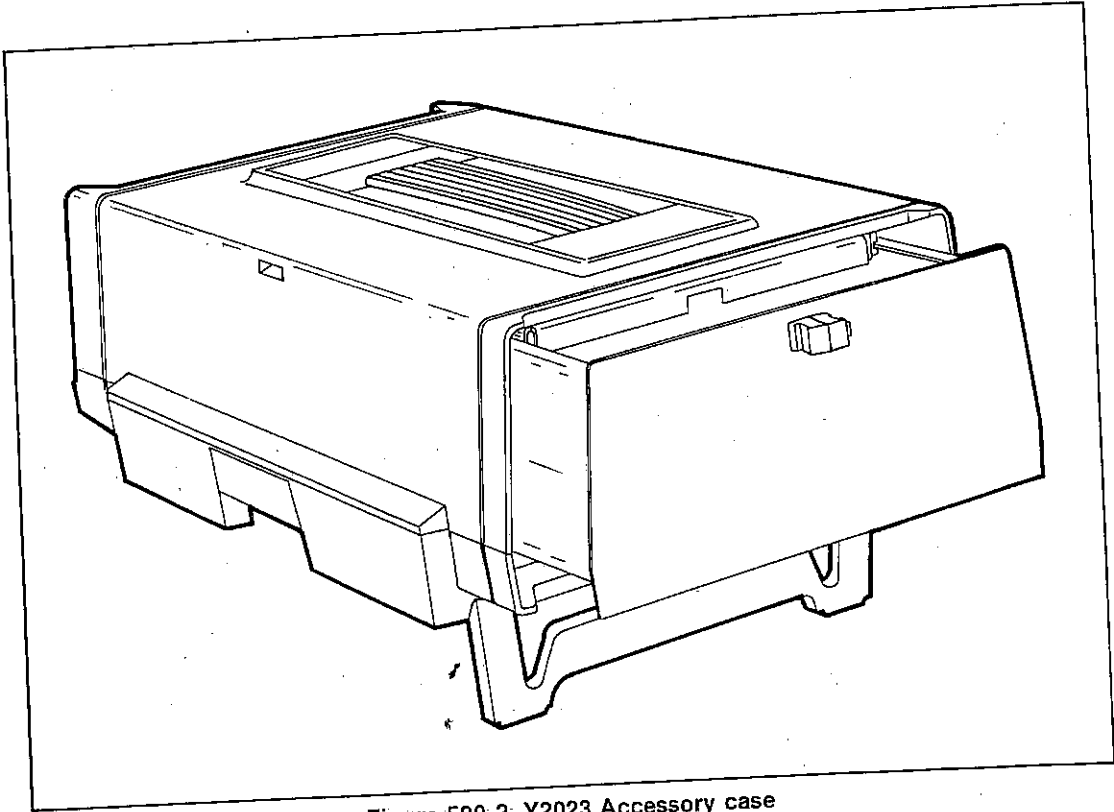


Figure 500-2: Y2023 Accessory case

500-11. Y7203, Y7204, PTI RIBBON CABLE

500-12. Accessory Models Y7203 and 7204 are 36-conductor cables used to connect the Calculating Controller (Option -004) to an external printer. The cables are identical except for length; Y7023 is 2 feet and Y7204 is 5 feet. Amp Champ, 36-pin connectors are provided on both ends of the cable; male on one end, female on the other.

500-13. Y8001, Y8002, Y8003 IEEE-488 CABLES

500-14. IEEE-488 cables are available in three lengths: 1 meter (Y8001), 2 meter (Y8002), and 4 meter (Y8003). See Figure 500-3. These cables attach the 8860A-005 to any other IEEE device. Each cable has double IEEE 24-pin connectors at both ends to enable stacking. Metric-threaded mounting screws are provided with each connector.

500-15. Y8100 DC/AC CURRENT PROBE**500-16. Description**

500-17. The Model Y8100, as shown in Figure 500-4, is a battery-powered clamp-on current probe for measuring currents up to 200A dc or ac rms. Two ranges are provided on the probe, 20A and 200A. The probe produces a dc output voltage proportional to the measured current. At full scale the output of the probe is 2V dc. Current carrying conductors up to 1.9 cm (0.75 inches) in diameter can be placed within the probe clamp. Batteries and a 5-foot cable (dual banana plug on both ends) are supplied with the probe.

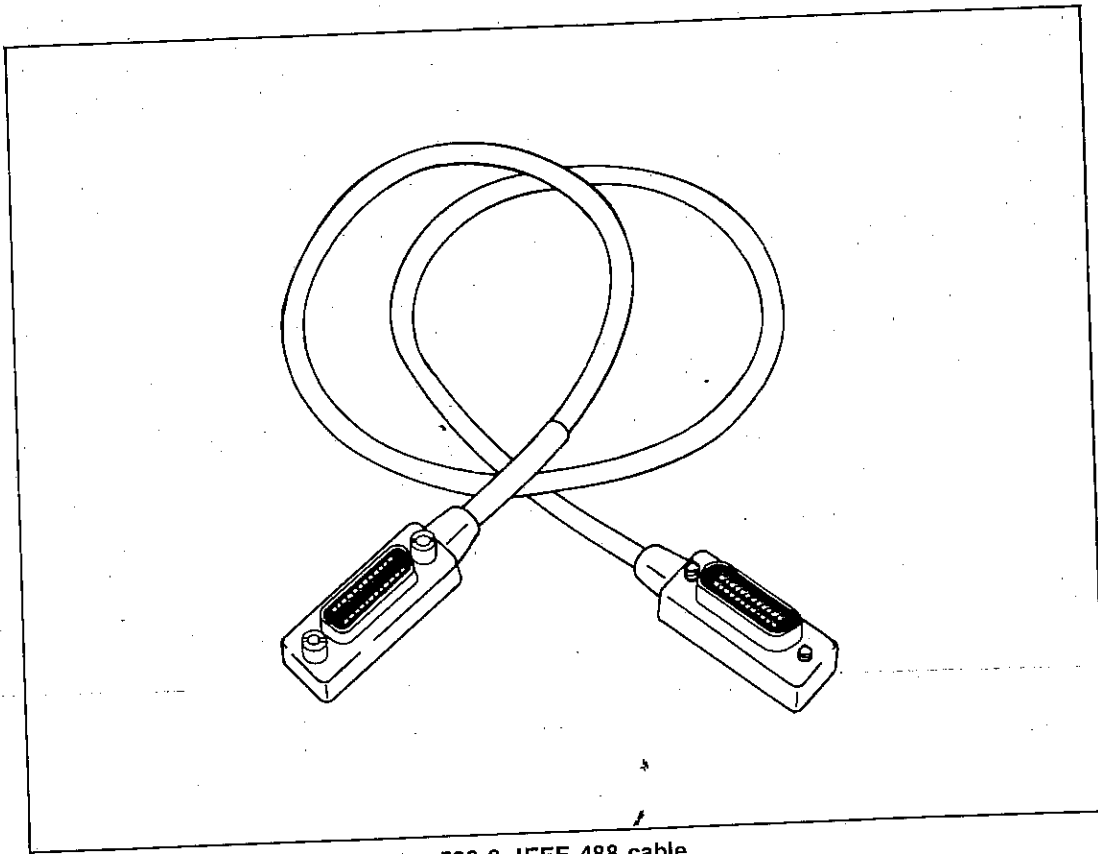


Figure 500-3. IEEE-488 cable

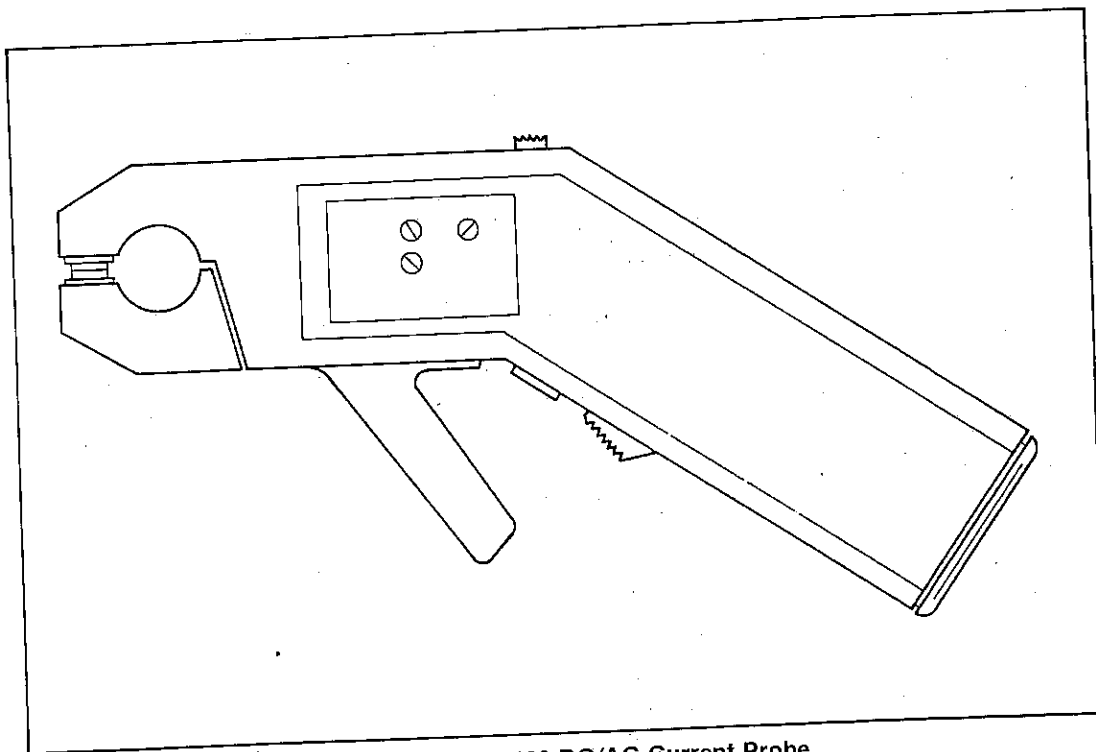


Figure 500-4. Y8100 DC/AC Current Probe

500-18. Specifications

FULL RANGE OUTPUT	... 2V dc
ACCURACY (Output)	
DC to 200 Hz $\pm 2\%$ of Range
200 Hz to 1 kHz $< 100A$ add $\pm 3\%$ of reading
 $> 100A$ add $\pm 6\%$ of reading
FREQUENCY RESPONSE	.. dc to 1.0 kHz
RECOMMENDED LOAD	.. > 3 kilohms
TEMPERATURE RANGE	
Operating $+15^{\circ}C$ to $+35^{\circ}C$
Storage and Operation $-10^{\circ}C$ to $+50^{\circ}C$
at Reduced Accuracy	
HEATING LIMITATION	... Prolonged operation above 200A ac or 1 kHz can damage the probe
WORKING VOLTAGE	
RATING Core to output: 600V dc or 480V ac maximum
 Output to ground: 42V dc or 30V ac maximum

500-19. Y8134 TEST LEAD SET**500-20. Description**

500-21. The Y8134 Test Lead Set is shown in Figure 500-5. It includes a pouch and the following attachments:

1. Two test leads (one red, one black) with shrouded banana connectors at both ends. Rated 10A max, 2000V max.
2. Two test probes (one red, one black). Rated 10A max, 2000V max.
3. Two insulated alligator clips (one red, one black).
4. Two spade lugs.
5. One squeeze hook. Rated 1A max, 1000V max.

500-22. Y8140 TEST LEAD SET

500-23. The Y8140 Test Lead Set consists of one red and one black 60-inch (1.52 meter) test lead, as shown in Figure 500-6. Each lead has a standard banana plug on one end and an extendable tip probe on the other. This flexible metallic tip conductor may be extended up to 2-1/2 inches, and has a clear insulation to within 1/10 of an inch of its tip. Intended primarily for measuring voltages (to 1000V rms), the Y8140 leads may also be used for measuring currents to 2A.

500-24. Y8833 MEMORY CARTRIDGE

500-25. The Y8833 Memory Cartridge is shown in Figure 500-7. It is used with the Calculating Controller (Option -004). It contains the program memory plus the first ten data registers for the Controller. It plugs into the rear of the 8860A-004. Instructions for installing and using the cartridge are given in the Calculating Controller User Handbook. One Y8833 is provided with the -004 option.

500-26. Two watch batteries are used inside the Y8833 to continuously maintain the memory when the cartridge is not powered by the 8860A. Life expectancy for the batteries is at least 1 year. The procedure for replacing the batteries is given in Appendix F of the Calculating Controller User Handbook.

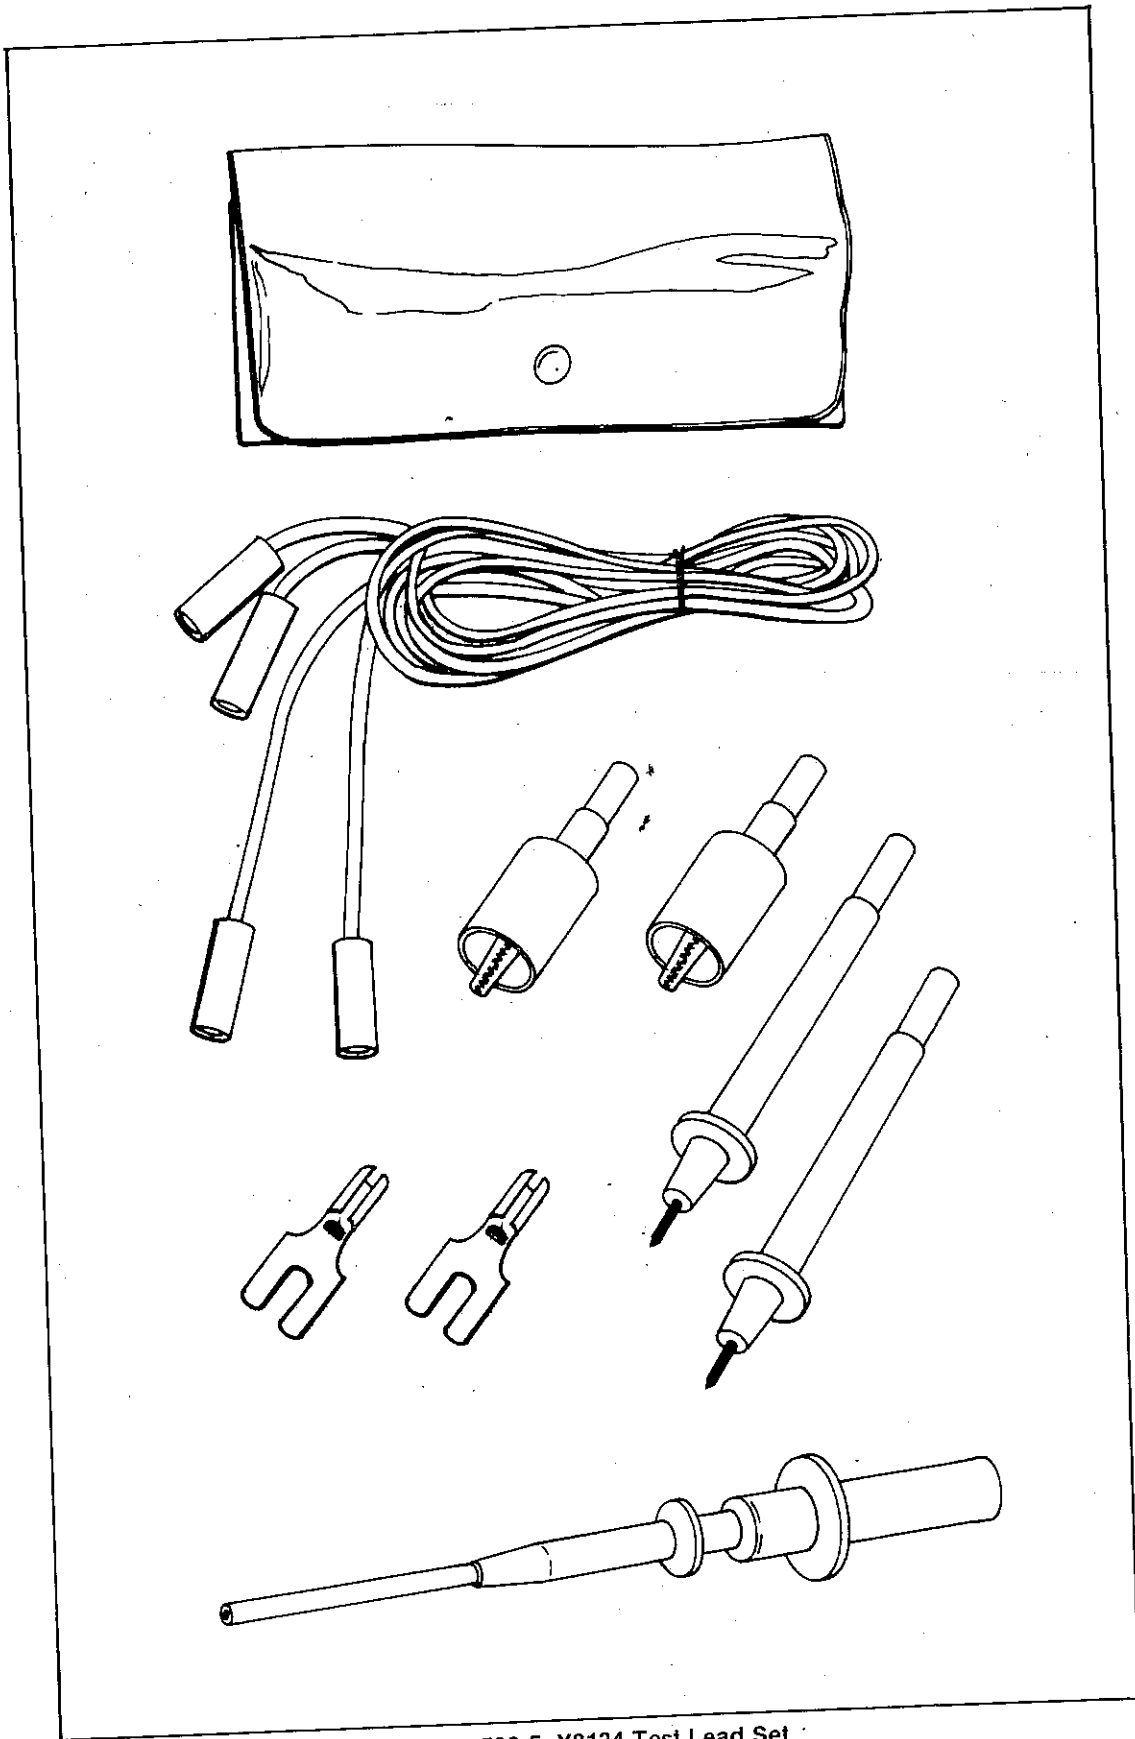


Figure 500-5. Y8134 Test Lead Set

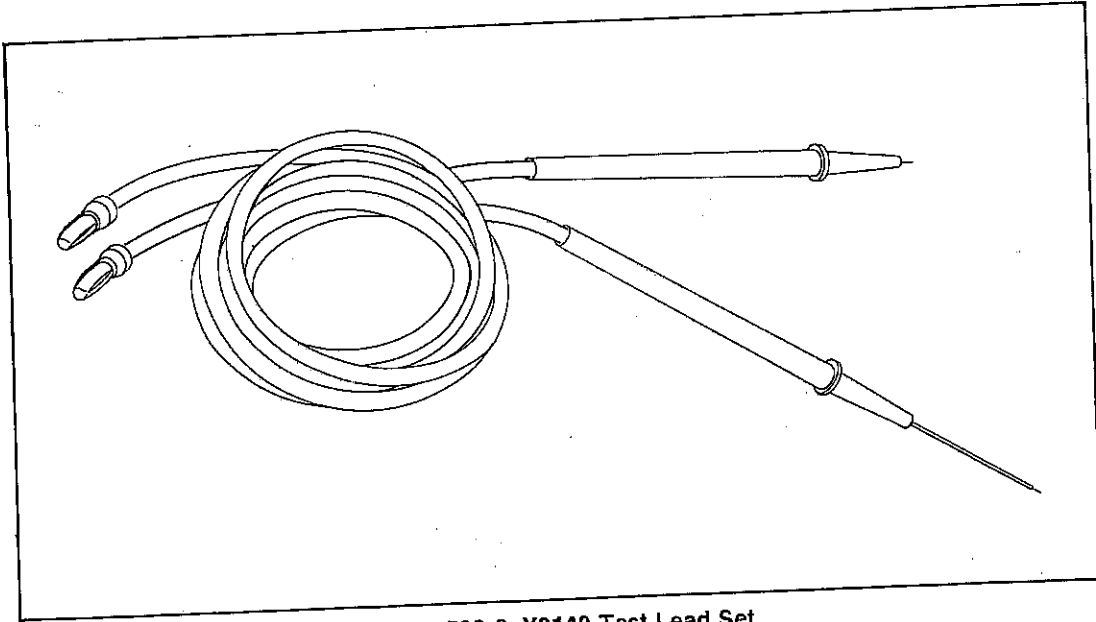


Figure 500-6. Y8140 Test Lead Set

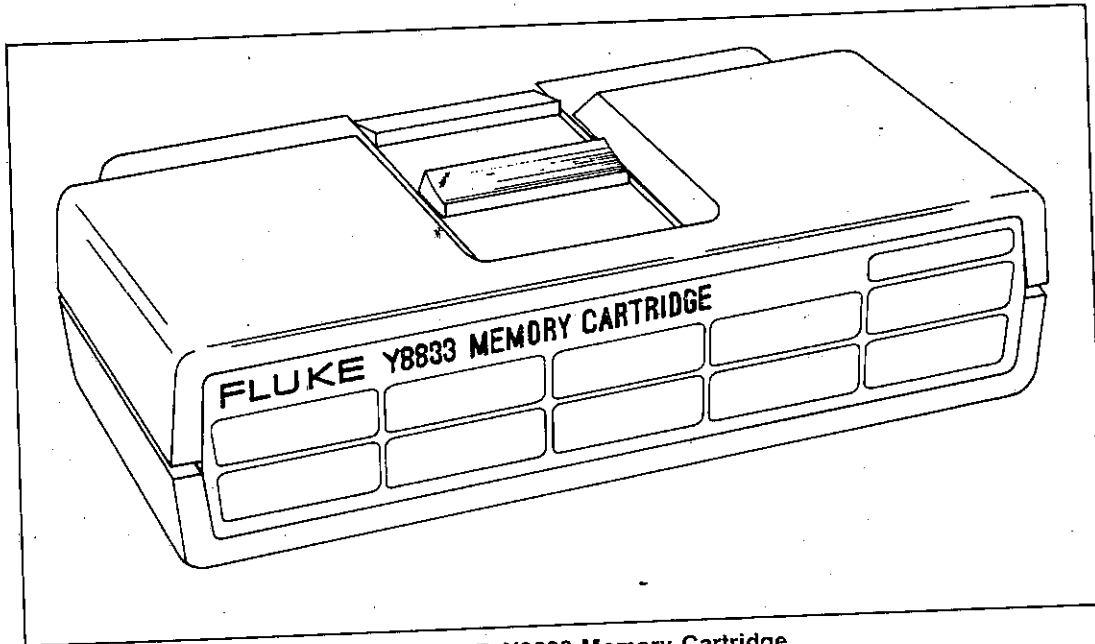


Figure 500-7. Y8833 Memory Cartridge

500-27. 80K-40 HIGH VOLTAGE PROBE**500-28. Description**

500-29. 80K-40 is a high voltage probe designed to extend the ac and dc voltage measuring capability of the DMM up to 40 kV. The physical characteristics of the probe are shown in Figure 500-8. In essence, the probe is a 1000 :1 divider formed by two matched metal-film resistors. The unusually high input impedance offered by these resistors minimizes circuit loading and optimizes measurement accuracy. A special plastic body houses the divider and provides the user with isolation and protection from the voltage being measured. Requires a 10 M Ω resistor be placed across the output when 8860A is on the two lowest ranges.

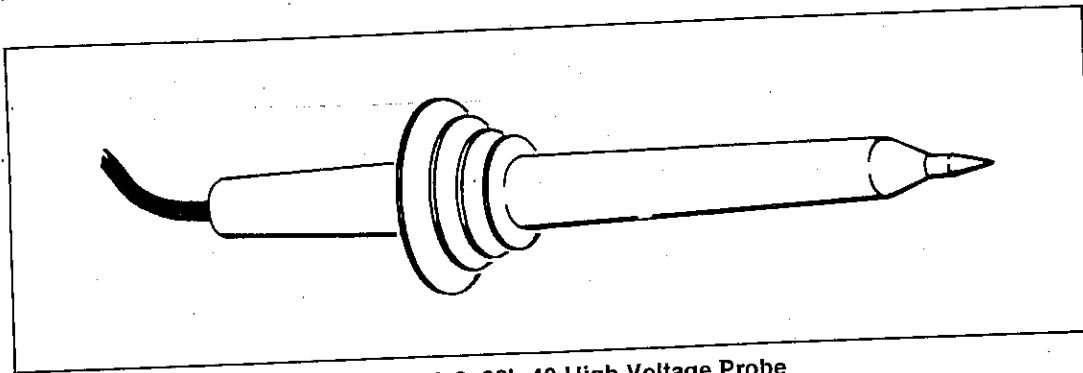


Figure 500-8. 80k-40 High Voltage Probe

500-30. Specifications

500-31. The following specifications assume that the probe is used with a voltmeter having a 10 megohm input impedance. A correction factor or a shunt resistor must be used if the input impedance of the voltmeter is other than 10 megohms.

VOLTAGE RANGE	1 kV to 40 kV dc or peak ac, 28 kV rms AC
INPUT RESISTANCE	1000 megohms
DIVISION RATIO	1000:1
ACCURACY		
DC		
1 kV to 20 kV	Linear change from $\pm 4\%$ to $\pm 2\%$
20 kV to 30 kV	$\pm 2\%$ (calibrated to 1% at 25 kV)
30 kV to 40 kV	Linear change from $\pm 2\%$ to $\pm 4\%$
AC	$\pm 5\%$ at 60 Hz

500-32. 80T-150 TEMPERATURE PROBE

500-33. Description

500-34. The Model 80T-150, as shown in Figure 500-9, is a universal temperature probe designed to provide a DMM with temperature measuring capability. Temperature is sensed at the probe tip and converted into a voltage for use by the DMM. The conversion factor is 1 mV per degree. Temperature scales in degrees Celsius or Fahrenheit may be specified at the time of purchase or selected by the user. Operating power for the probe is supplied by a disposable battery. Battery life is 1000 hours of continuous use. An on/off switch is provided to conserve battery life when the unit is not in use.

500-35. Specifications

RANGE	-50°C to $+150^{\circ}\text{C}$, -58°F to $+302^{\circ}\text{F}$
RANGE SELECTION	Internal Jumpers (and re-calibrate)
SENSITIVITY	1 mV per $^{\circ}\text{C}$ or $^{\circ}\text{F}$
RESOLUTION	0.1°C or 0.1°F recommended maximum
AMBIENT TEMPERATURE RANGE	0°C to $+50^{\circ}\text{C}$
RELATIVE HUMIDITY	$< 80\%$ non condensing
ACCURACY	Including nominal $\pm 0.25\%$ voltmeter error at $+15^{\circ}\text{C}$ to $+35^{\circ}\text{C}$ ambient. Add 1°C to the accuracy specifications if ambient temperature is below $+15^{\circ}\text{C}$ or above $+35^{\circ}\text{C}$.
-50°C to -25°C	$\pm 3^{\circ}\text{C}$
-25°C to $+125^{\circ}\text{C}$	$\pm 2^{\circ}\text{C}$
$+125^{\circ}\text{C}$ to $+150^{\circ}\text{C}$	$\pm 3^{\circ}\text{C}$

VOLTMETER INPUT	
IMPEDANCE	≥ 10 megohm
MAXIMUM VOLTAGE	Probe tip to circuit low, 350V dc or peak ac
SETTLING TIME	8 seconds to settle to within 1 degree after a 100 degree step change at the probe tip
POWER	Internal disposable battery, 1000 hours of continuous use
CONTROLS	Power on/off switch

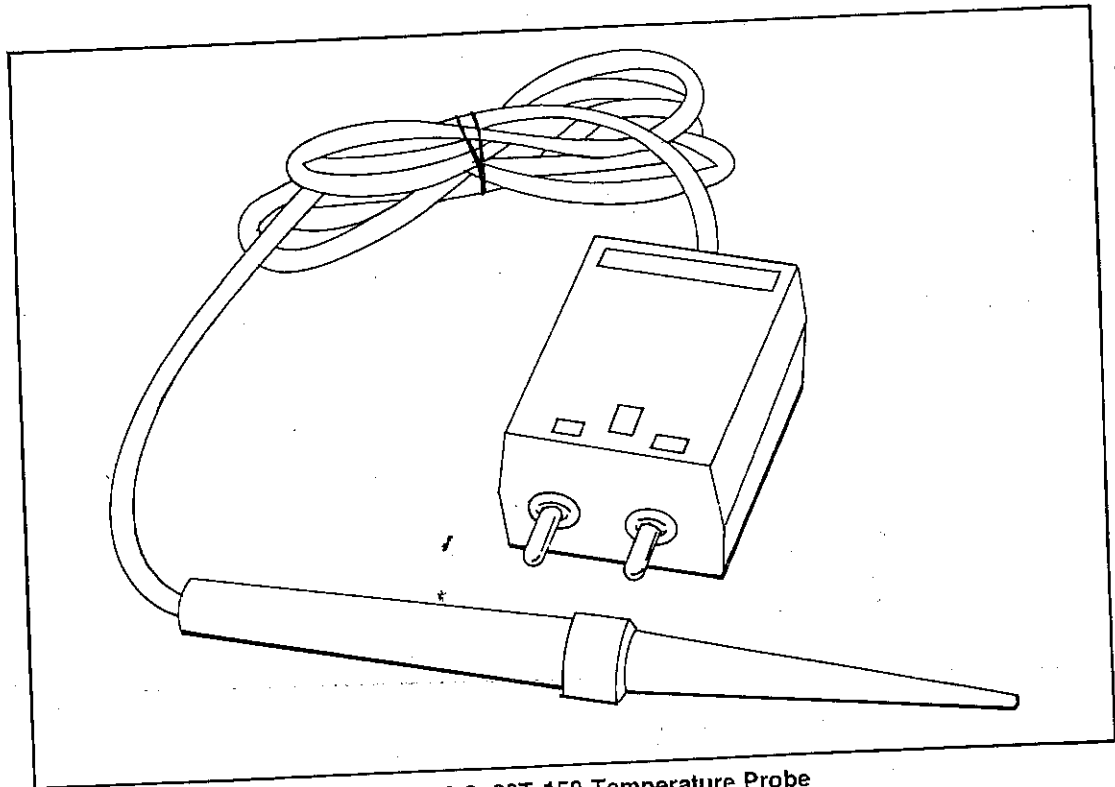


Figure 500-9. 80T-150 Temperature Probe

500-36. 81RF HIGH FREQUENCY PROBE

500-37. Description

500-38. The Model 81RF is designed to convert a dc voltmeter with a 10 megohm input impedance into a high frequency ac voltmeter. It provides a useful frequency range of 20 kHz to 250 MHz. Physical characteristics of the probe are shown in Figure 500-10. The output of the probe is a dc voltage calibrated to equal the rms value of a 1 MHz sine wave input. Requires a 10 MΩ resistor across output when 8860A is on two lowest ranges.

500-39. Specifications

FREQUENCY RESPONSE .. ± 1 dB from 100 kHz to 100 MHz
(Relative to ac/dc transfer ratio)

AC-to-DC TRANSFER RATIO
(23 \pm 5°C)

RMS Input (100 kHz)	DC Output
0.25 to 0.5V	0.25 to 0.5V ± 1.5 dB
0.5 to 2.0V	0.5 to 2.0V ± 0.5 dB
2.0 to 30V	2.0 to 30V ± 1.0 dB

EXTENDED FREQUENCY RESPONSE	Useful for relative readings from 20 kHz to 250 MHz
RESPONSE	Responds to peak value of input; Calibrated to read rms value of a sine wave.
VOLTAGE RANGE	0.25 to 30V rms
MAXIMUM DC INPUT	350V dc
TEMPERATURE COEFFICIENT	<0.1 of ac-to-dc transfer ratio specification per °C
(0 to 18 °C, 28 to 50°C)	
INPUT IMPEDANCE	12 megohm shunted by 15 pF

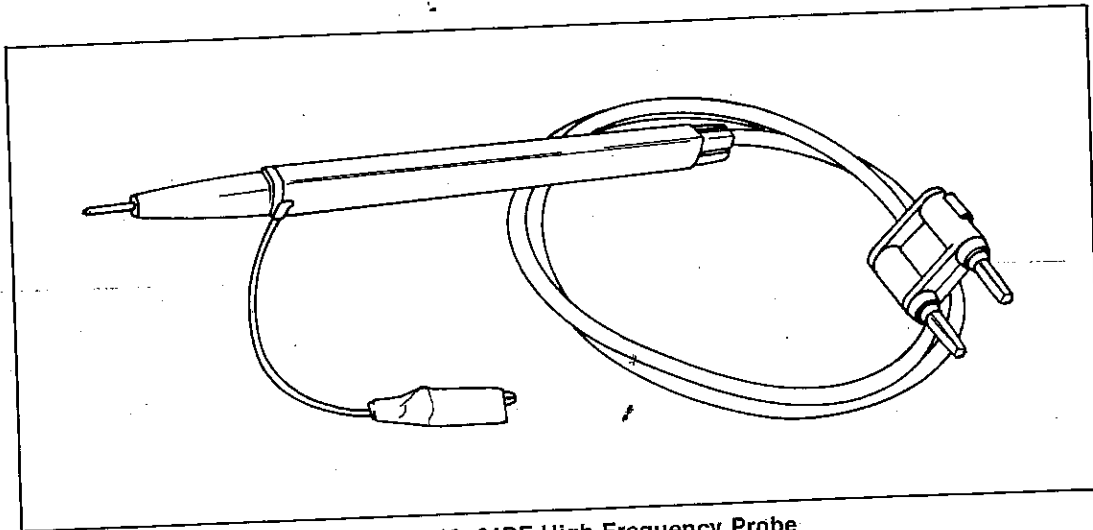


Figure 500-10. 81RF High Frequency Probe

500-40. 82RF HIGH FREQUENCY PROBE

500-41. Description

500-42. The Model 82RF is designed to convert a dc voltmeter with a 10 megohm input impedance into a high frequency voltmeter. It provides a useful frequency range of 20 kHz to 700 MHz. Physical characteristics of the probe are shown in Figure 500-11 (a BNC probe tip adapter is supplied with the 82RF). The output of the probe is a dc voltage calibrated to equal the rms value of a sine wave input. Requires a 10 MΩ resistor across the output when 8860A is on two lowest ranges.

500-43. Specifications

500-44. The frequency response and the ac-to-dc transfer ratio specifications assume the use of the BNC adapter supplied with the probe and a voltmeter with a 10 megohm input impedance shunted by less than 200 pF.

FREQUENCY RESPONSE ..	Relative to ac/dc transfer ratio
100 kHz to 200 MHz	±1 dB
200 MHz to 500 MHz	±3 dB
AC-to-DC TRANSFER RATIO	
(23 ±5°C)	
RMS Input (10 MHz)	DC Output
0.25 to 0.5V	0.25 to 0.5V ±1.5 dB
0.5 to 2.0V	0.5 to 2.0V ±0.5 dB
2.0 to 5.0V	2.0 to 5.0V ±1.0 dB
5.0 to 30V	5.0 to 30V ±1.5 dB

EXTENDED FREQUENCY RESPONSE	Useful for relative readings from 20 kHz to 700 MHz
RESPONSE	Responds to peak value of input; Calibrated to read rms value of a sine wave.
VOLTAGE RANGE	0.25 to 30V rms
MAXIMUM INPUT VOLTAGE	30V rms, 200V dc
INPUT IMPEDANCE	2 megohms shunted by <10 pF
TEMPERATURE COEFFICIENT	<0.1 of ac-to-dc transfer ratio specification per °C
OUTPUT CONNECTOR	Fits standard 0.75-inch spaced dual banana connectors
BNC ADAPTER	Slip-on BNC adapter is supplied with the probe

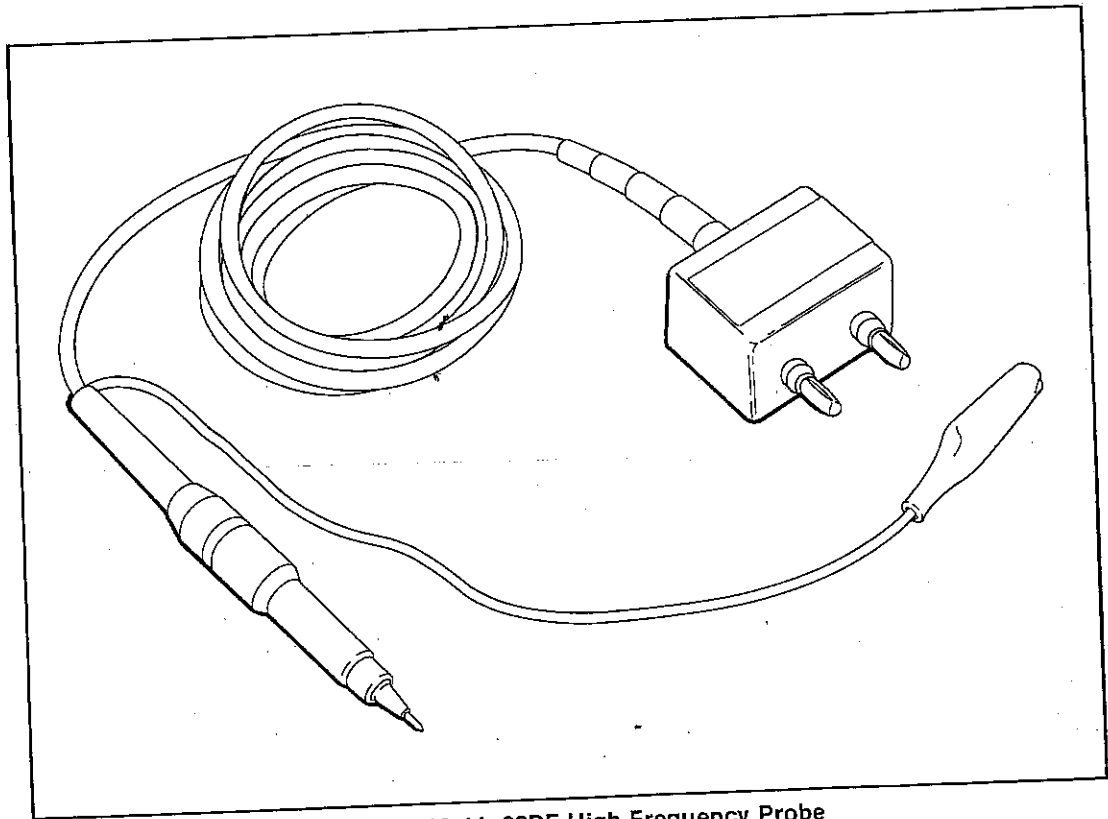


Figure 500-11. 82RF High Frequency Probe

500-45. 80J-10 CURRENT SHUNT

500-46. Description

500-47. The Model 80J-10 is a plug-in shunt designed to convert a voltmeter into a current meter. Two banana plugs, see Figure 500-12, with 0.75 inch spacing are used to connect the shunt to the input terminals of the voltmeter. Input connections to the shunt are made at two 5-way binding posts. The shunt value is selected to provide a 10 mV per ampere output.

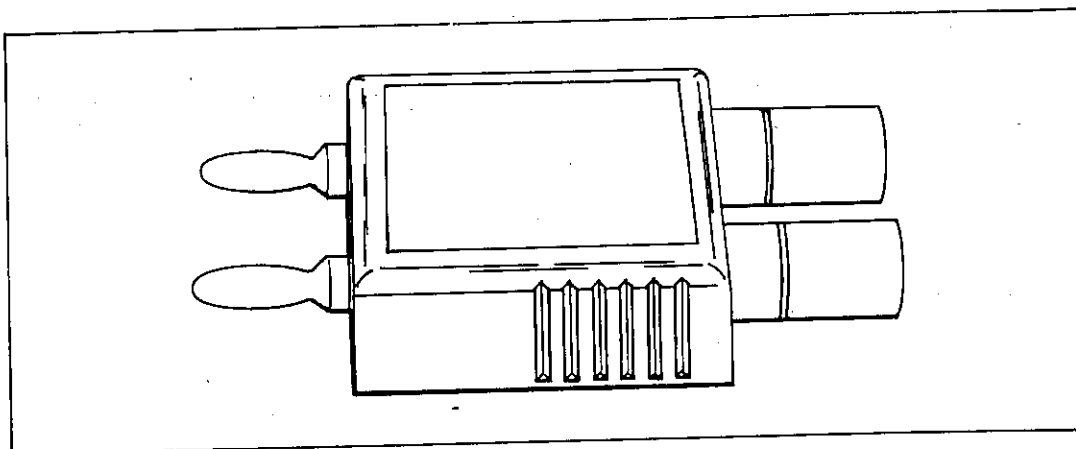


Figure 500-12. 80J-10 Current Shunt

500-48. Specifications

SENSITIVITY	10 mV per ampere
SHUNT RESISTANCE	0.01 ohms
ACCURACY	$\pm 0.25\%$ from dc to 10 kHz, rising 1 dB at 100 kHz
SERIES INDUCTANCE	8.3 nH
OVERLOAD	>20A, not fused

500-49. GENERAL PURPOSE ACCESSORIES

500-50. Several other general purpose accessories; such as adapters, connectors, and attenuators are available from Fluke. These are listed and described in Table 500-1.

Table 500-1. General Purpose Accessories

MODEL NO.	DESCRIPTION
Y9100	6 dB Attenuator (2X), 50 ohm, 2 watt, BNC
Y9101	14 dB Attenuator (5X), 50 ohm, 2 watt, BNC
Y9102	20 dB Attenuator (10X), 50 ohm, 2 watt, BNC
Y9103	50 ohm BNC Feed-Through Termination
Y9104	Alligator Clip to fit pin tip
Y9105	Alligator Clip to fit banana plug
Y9106	BNC Tee (3 Jacks)
Y9107	BNC Tee (Jack-Plug-Jack)
Y9108	BNC Jack to Dual Banana Plug
Y9109	Binding Posts to BNC Plug
Y9110	BNC Jack to PCB Pins
Y9111	3-Foot BNC Cable (97 cm)
Y9112	6-Foot BNC Cable (1.95m)
Y9113	BNC Plug to Dual Banana Plug
Y9114	BNC Jack to 1/4in. Phone Plug
Y9115	1/4in. Phone Jack to BNC Plug
Y9116	BNC Jack to Phono Plug
Y9117	Phono Jack to BNC Plug
Y9118	1/4in. Phone Jack to Dual Banana Plug
Y9119	Phono Jack to Dual Banana Plug

Option -004 Calculating Controller

004-1. INTRODUCTION

004-2. The Calculating Controller option is a programmable scientific calculator which has the 8860A DMM under its program control. Included in this option are the following three pieces of hardware:

1. A pair of circuit boards connected by a ribbon cable (mounted inside the 8860A chassis).
2. A handheld Control Keyboard (plugs into rear option board).
3. Memory Cartridge (also plugs into rear option board).

004-3. Use of this option is mutually exclusive with use of the IEEE-488 Interface option (-005). The Calculating Controller has the following features:

- SAMPLE key for initiating DMM measurements
- Programmable capability -- 72 programmable functions
- Full scientific math function capabilities
- RPN logic with XYZT stack
- Non-volatile, interchangeable program memory (Memory Cartridge)
- 100 merged program steps
- 50 data registers, 10 of which are non-volatile
- Four levels of subroutines
- Indirect addressing capability
- Ten conditionals (eight for branching, two for loop control)
- I/O functions (for hardwiring to an external device)
- Printer functions (for accessory printer)

004-4. Documentation for the Calculating Controller is spread among four manuals as follows:

- 8860A Operator Manual -- option section. Brief description of Calculating Controller; installation procedure.
- 8860A Calculating Controller User Handbook. How to use the Control Keyboard; detailed description of each function; how to program the 8860A.
- 8860A Calculating Controller Reference Guide. Brief pocket-size summary of the User Handbook, with helpful reminders.
- 8860A Service Manual -- option section. Theory of operation; service information; parts lists; schematics.

004-5. INSTALLATION

004-6. The Calculating Controller option is field installable. Install the option as follows:

1. Disconnect the 8860A from its line power, remove all front (and rear) panel inputs.
2. Remove the four screws located on the bottom of the unit, and pull the top cover straight up and off.
3. Remove the 2-1/4in. x 3-3/4in. (60 x 90 cm) metal plate from the rear panel, by unscrewing the four screws which hold it in place.
4. Plug the large circuit board of the Calculating Controller into the option slot, as shown in Figure 004-1. Make sure the edge-connector tab at the bottom of the board plugs firmly into its socket. The two tabs at the top of the board fit into metal slots to hold it vertical.
5. Install the small printed circuit board inside the rear panel hole, and secure it with the four screws removed earlier.
6. Fold the excess ribbon cable between the transformer and the Rear Interface board, as shown in Figure 004-1.
7. Reinstall the top cover and secure it using the four cover screws.

004-7. OPERATION

004-8. Refer to the 8860A Calculating Controller User Handbook for operating instructions.

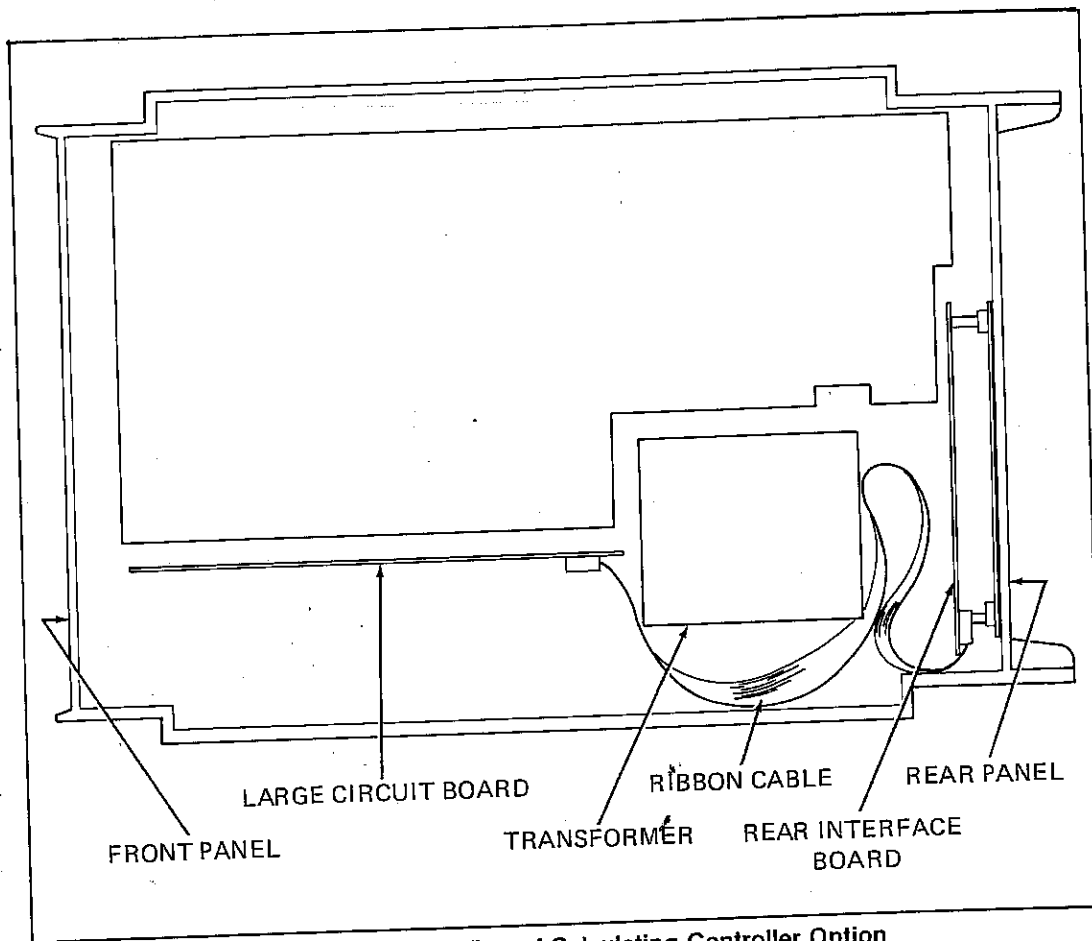


Figure 004-1. Top View of Calculating Controller Option

Option -006 Rear Input

006-1. INTRODUCTION

006-2. The Rear Input option relocates the five input connections from the 8860A front panel banana jacks to a 20-pin connector located at the rear panel. The 8860A then makes its voltage and resistance (both two- and four- terminal) measurements from this rear-input connector. With the Rear Input installed, the five front panel input jacks are completely disconnected. The Rear Input option is intended for system applications where single cable connections to the instrument are required.

006-3. This option is compatible with the External Reference option. The External Reference uses pins K and L of the 20-pin Rear Input connector.

006-4. SPECIFICATIONS

006-5. Specifications for the Rear Input option are identical to the front panel input specifications, except for slightly different input load characteristics: input capacitance approximately 30 pF added. The additional lead resistance of the Rear Input option requires rezeroing the DMM for the 200 ohm range. The voltage ratings between terminals are also identical to those printed on the front panel.

006-6. INSTALLATION

006-7. The Rear Input option is field installable. Install the option as follows:

1. Disconnect the 8860A from its line power, and remove all signals from the front panel inputs.
2. Unscrew the four screws located on the bottom of the unit, and pull the top cover straight up and off.
3. Remove the guard cover by unscrewing its four top screws. (The guard cover is the large, gold-colored metal cover with adjustment holes.)
4. Determine whether or not the External Reference (option -007) is installed. The External Reference is easily identified by a dual banana jack mounted in the rear panel where the rear input connector will go (as in Figure 006-1).
 - a. If the External Reference is not installed in the 8860A:
 1. Remove the A/D-Ohms circuit board (see Figure 006-1) from the mainframe by lifting the board out.

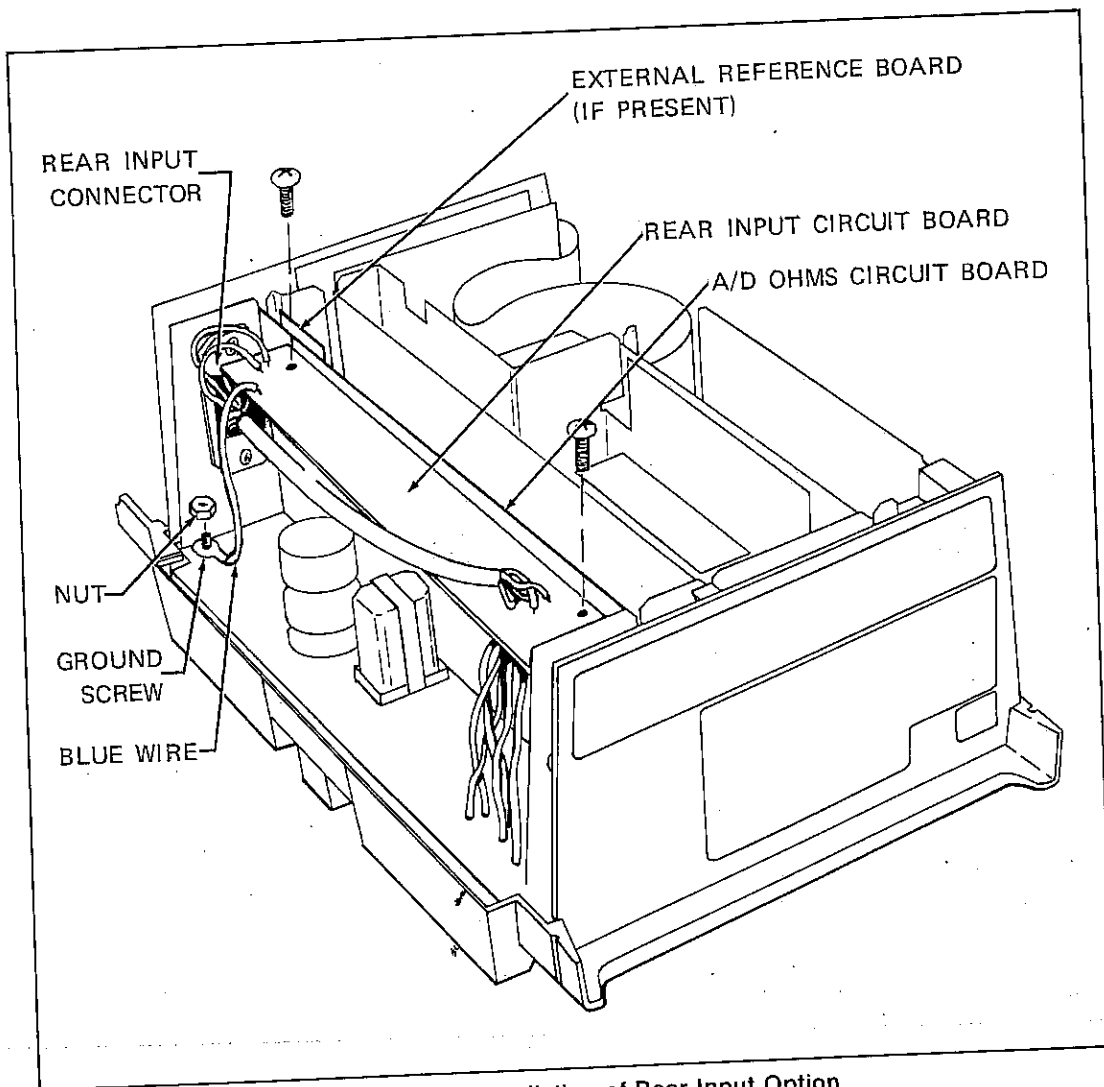


Figure 006-1. Installation of Rear Input Option

2. Remove the small (3/4in. x 1-1/2in.) plastic dummy plug, which covers a hole in the rear panel. Save this plastic plug. It can be reinserted if the Rear Input is ever removed.
- b. If there is an External Reference installed:
1. Disconnect the two External Reference wires (Violet and Gray) from the dual banana jack mounted to the rear panel. These wires are force fitted; pull them straight out.
 2. Remove the A/D-Ohms circuit board by lifting it out.
 3. Remove the dual banana jack by unfastening its two screws.
 4. Remove the External Reference circuit board (identified in Figure 006-1) from the A/D-Ohms circuit board by first unfastening the single screw holding it in place. This will allow the left-hand angle bracket of Figure 006-2 to be installed.

5. Disconnect the five input wires where they attach to the front panel input jacks by pulling them straight off.
6. Fasten the two small angle brackets to the A/D-Ohms board (already removed), using the two screws and nuts as shown in Figure 006-2. (Note each angle bracket has one threaded hole. Mount the non-threaded hole against the A/D-Ohms circuit board.)
7. If the External Reference option is being installed, then reinstall its circuit board on the A/D-Ohms board by first threading its two wires through the hole, and then fastening it with the single screw.
8. Orient the Rear Input connector with the holes marked A, B, C, and D at the top, as shown in the close-up, Figure 006-3. Fasten this connector to the rear panel with two screws, as in Figure 006-1.
9. Reinstall A/D-Ohms circuit board in its slot in the main instrument.
10. Connect the five color-coded wires to the Rear Analog input board according to the colors designated on that board. Push the connectors all the way on.
11. If the External Reference option is present, then connect the Violet and Gray wires of that option to the pins labeled VIO and GRA on the Rear Input circuit board. Push the connectors all the way on. *
12. Fasten the Rear Input circuit board to the A/D-Ohms board by installing two screws in the angle brackets, as in Figure 006-1.
13. Lead the Blue ground wire behind the shielded wire, and to the ground screw in the corner of the guard, as in Figure 006-1. Using a nut, fasten the Blue wire to the ground screw.
14. Reinstall the guard cover (four screws).
15. Reinstall the top cover (four screws).

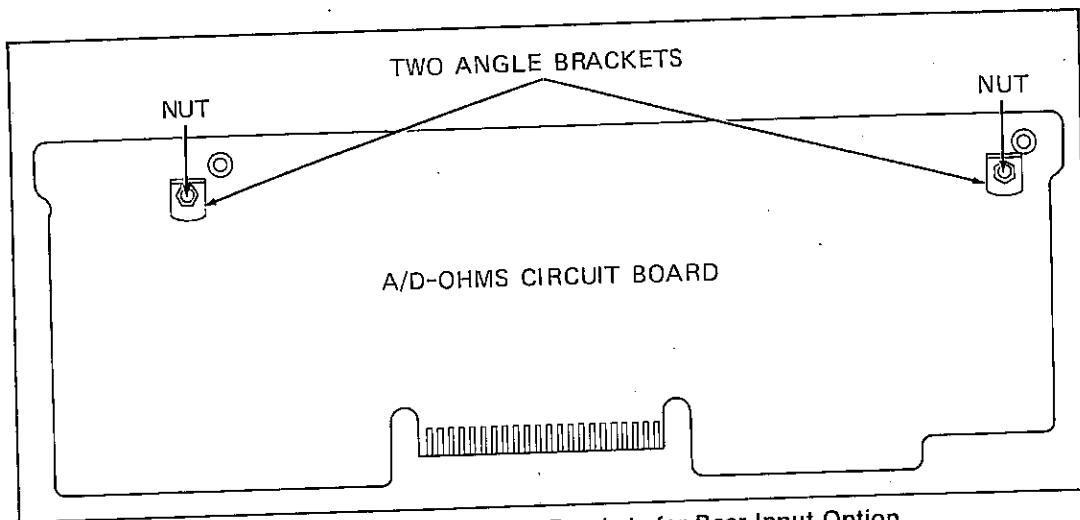


Figure 006-2. Installing Angle Brackets for Rear Input Option

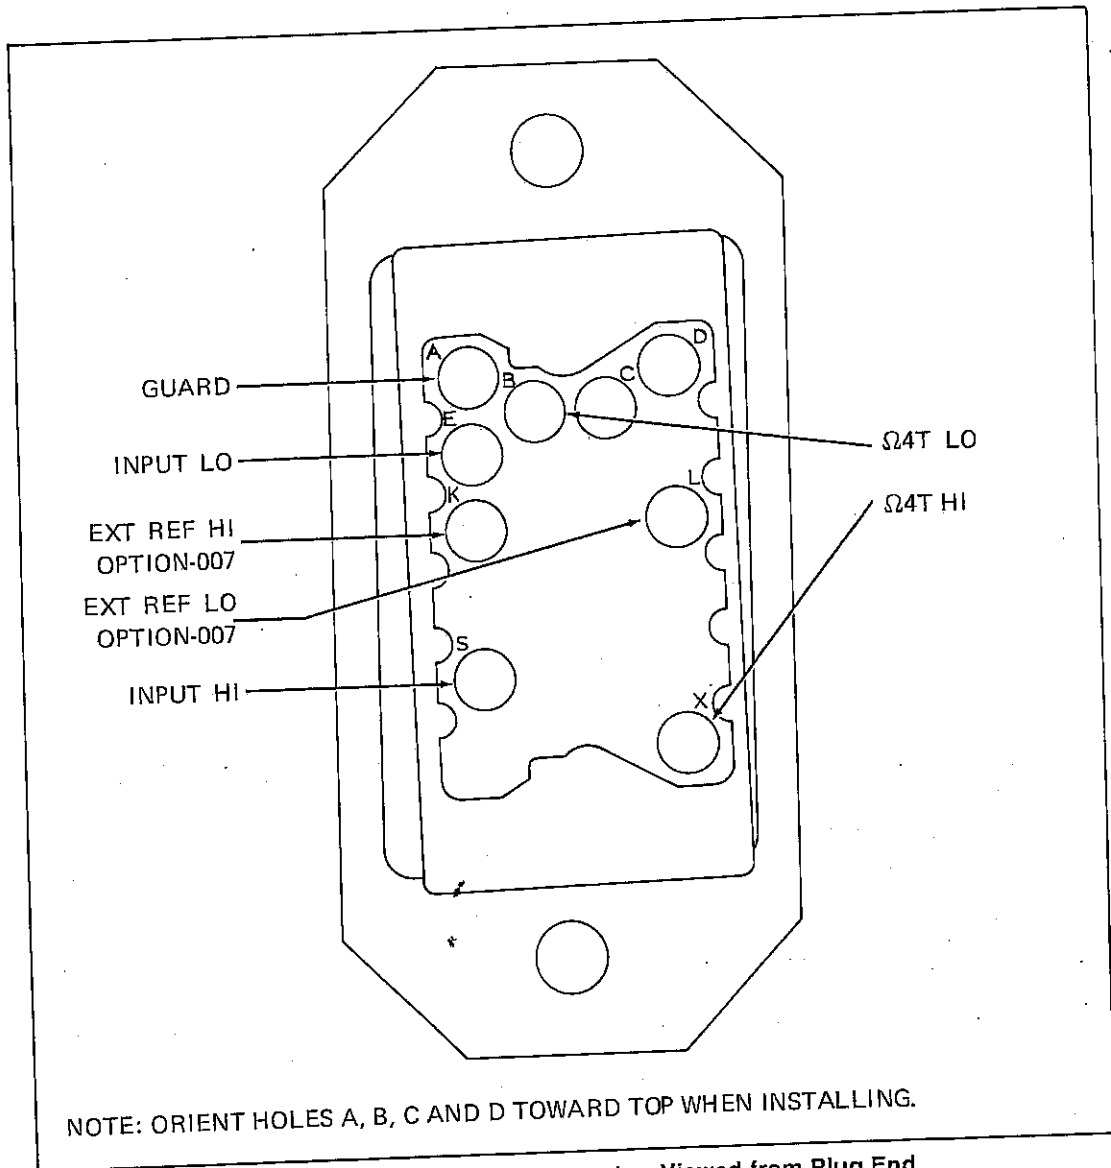


Figure 006-3. Rear Input Connector, Viewed from Plug End

006-8. OPERATION

006-9. Operation of the Rear Input is identical to that of the front panel inputs, except for the type of connector used. The pin designations are given in Figure 006-3. The plug which mates with the rear-panel-mounted Rear Input connector can be ordered using part number 541797, Hardware Connector Kit, from John Fluke Mfg. Co., Inc. This kit includes a cable connector (part # 369231), and the necessary solder contacts (part # 369298).

Option -007

External Reference

007-1. INTRODUCTION

007-2. The External Reference option (-007), when enabled, scales the display reading by the quantity $10/V_{REF}$. It substitutes for the internal reference used by the analog-to-digital converter. The option is useful for measuring the ratio (multiplied by ten) of two voltages -- V_{IN} to V_{REF} .

007-3. SPECIFICATIONS

007-4. The specifications for the External Reference option are listed in Table 007-1. Note that the input resistance varies according to the circuit connections. Figure 007-1 shows the internal input stage of the External Reference, which causes this input resistance to differ according to the external connection to Input Lo.

Table 007-1. Specifications for External Reference Option

EXTERNAL REFERENCE	
Range	$\pm 1.0V$ DC to $\pm 11.0V$ DC
Display	$10(V_{IN}/V_{REF})$
Accuracy	(1 yr, 18°C-28°C) add to specified accuracy for input range and function
5-1/2 DIGIT	$\pm (.01\% + 2 \text{ Digits}) \times (10/V_{REF})$
4-1/2 DIGIT	$\pm (0.01\% + 2 \text{ Digits}) \times (10/V_{REF})$
3-1/2 DIGIT	$\pm (2 \text{ Digits}) \times (10/V_{REF})$
Input Resistance	2 M Ω when EXT REF HI is tied to INPUT LO 1 M Ω when EXT REF LO is tied to INPUT LO
Maximum Input	$\pm 11V$ EXT REF HI to LO $\pm 11V$ EXT REF LO to INPUT LO $\pm 11V$ EXT REF HI to INPUT LO

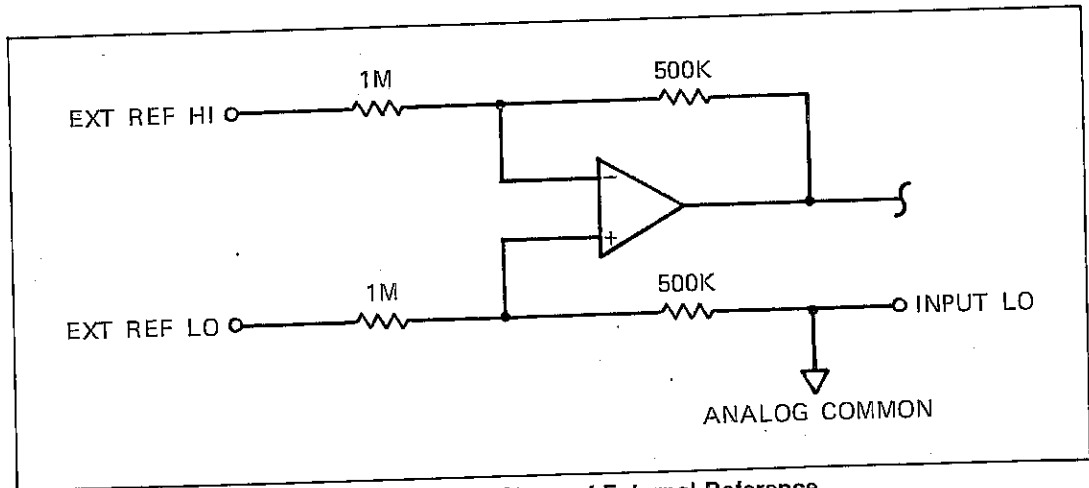


Figure 007-1. Input Stage of External Reference

007-5. INSTALLATION

007-6. The External Reference option (-007) is field installable. This option is compatible with the Rear Input option (-006). The following procedure describes installation of the External Reference (Ext. Ref.) without the Rear Input option.

007-7. If the External Reference option is being installed with the Rear Input option, the 20-pin Rear Input connector will be used rather than the dual banana jacks. In this case, follow the installation procedure given in the Rear Input option.

1. Disconnect the 8860A from its line power; remove all signals from its front (and rear) panel inputs.
2. Remove the top cover by unscrewing the four screws located on the bottom of the unit and pulling the cover straight up and off.
3. Remove the guard cover by unscrewing its four top screws. (The guard cover is the large, gold-colored metal cover with adjustment holes.)
4. Lift out the A/D-Ohms circuit board, shown in Figure 007-2.
5. Thread the two wires (Gray and Violet) from the External Reference circuit board through the hole at the rear, and from the component side of the A/D-Ohms board, as in Figure 007-2.
6. Plug the External Reference board into the A/D-OHMS board (9-pin connector). Fasten the External Reference board in place with a screw from the other side.
7. Reinstall the A/D-Ohms circuit board into its slot in the main instrument.
8. Remove the small (3/4in. x 1-1/2in.) dummy plug, which covers a hole in the rear panel, by pushing it out. Save this plug; it can be reinserted if the Rear Input is ever removed.
9. From the inside, install the dual banana jack connector in the rear panel hole. Fasten it with two screws. You will need a short, stubby screwdriver or a right-angle screwdriver to fasten the lower screw.

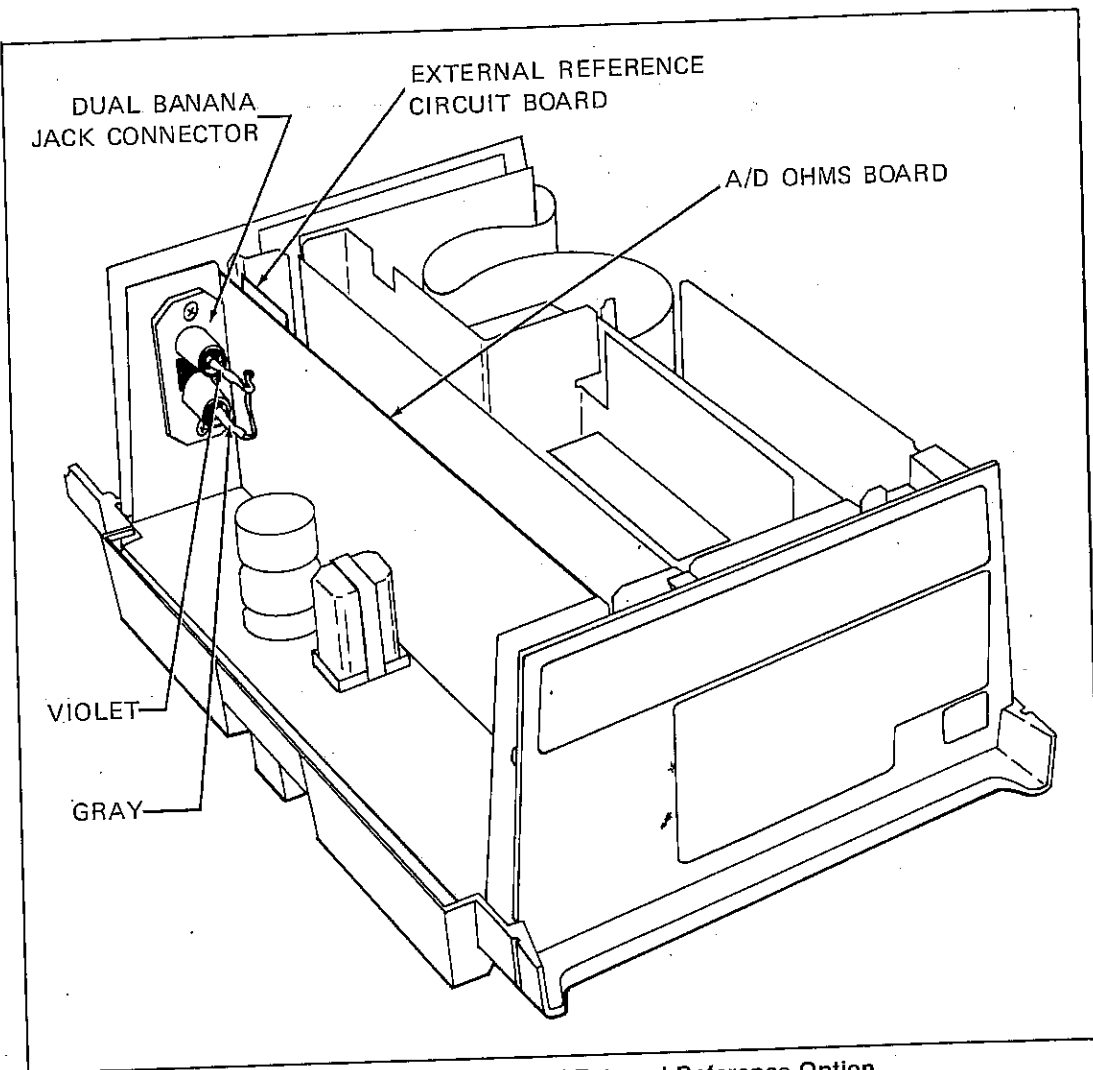


Figure 007-2. Installation of External Reference Option

10. Connect the Gray wire to the lower jack and the Violet wire to the upper jack, as in Figure 007-2.
11. Reinstall the guard cover (four screws).
12. Calibrate REF GAIN, NULL, and REF OFFSET pots according to the instructions given under External Reference in the 8860A Calibration Manual. These three pots are located on the External Reference circuit card.
13. Reinstall the top cover (four screws).

007-8. OPERATION

NOTE

The External Reference conditioning circuitry will not operate if the external voltage is not referenced to the front panel INPUT LO. This can be accomplished by tying either end of the external reference to INPUT LO, or referencing it to some constant voltage above or below INPUT LO.

007-9. To operate the External Reference option, use the following procedure.

1. Apply a dc voltage to the External Reference connector (the upper pin is positive).
2. Select the appropriate function and range.
3. Activate the External Reference (and disable the internal reference) by pressing FCN, EXT REF on the 8860A front panel. The indicator light next to the EXT REF switch turns on.
4. For voltage measurements, the display will now read a number equal to:

$$V_{IN} \times \frac{10}{V_{REF}}$$

and for resistance measurements:

$$R_{IN} \times \frac{10}{V_{REF}}$$

Section 3

Theory of Operation

3-1. INTRODUCTION

3-2. This section of the manual contains the theory of operation for the 8860A. The theory is presented in two parts, an overall block diagram description followed by a detailed block diagram description. The theory of operation for the options is covered in Section 6 in this manual.

3-3. OVERALL BLOCK DIAGRAM DESCRIPTION

3-4. The overall block diagram description of the 8860A is keyed to the simplified block diagram shown in Figure 3-1. The description concentrates on the guard and measurement circuits.

3-5. Guard Circuit

3-6. The guard circuit establishes a physical and electrical separation between the analog measurement (in-guard) circuits of the 8860A and the control, display, and power supply (out-guard) circuits. The separation provides the shielding and isolating qualities required to enable accurate low-level measurements in the presence of common mode voltages. Since the guard forms a natural division of the 8860A circuitry, circuit functions and components are hereafter referred to as being in-guard or out-guard circuitry.

3-7. In-Guard and Out-Guard Processors

3-8. The 8860A uses two 8-bit microprocessors, one inside the guard (in-guard) and the other outside the guard (out-guard). The in-guard microprocessor implements function and range selection (including autoranging), controls the measurement cycle, and communicates with the out-guard microprocessor via optical couplers.

3-9. When the out-guard microprocessor receives the measurement data, it can modify or analyze the data if an offset, limits, or peak to peak function is selected. The resulting data is then sent to the display. In addition, the out-guard microprocessor monitors and responds to front-panel key selection (function, range, etc.), initiates each A/D conversion cycle, and controls the operation of either of two digital options.

3-10. Voltage Measurements

3-11. When the VDC, VAC, or VAC+VDC function is selected, the unknown voltage applied to the HI and LO INPUT terminals is directed through the input protection circuit to the AC/DC scaling and filtering circuit. AC measurements are either capacitively coupled (VAC) or directly coupled (VAC+VDC) into the scaling amplifier. Here the input voltage is either amplified by 10 (200 mV range), passed unscaled (2V range), or divided by 100 or 1000 (20V, 200V, 1000V ranges). A full-range input on any range is scaled to $\pm 2V$ dc or 2V rms (see Table 3-1). Measurements which are strictly dc (VDC, $\Omega 2T$, and $\Omega 4T$ functions) continue directly from the scaling amplifier to the A/D Converter. All ac measurements (VAC and VAC+VDC functions) pass through the RMS-to-DC Converter where they are converted to a dc voltage.

3-12. Resistance Measurements

3-13. When the $\Omega 2T$ or $\Omega 4T$ function is selected, two operations occur concurrently at the input terminals:

1. A precision current is applied to the unknown resistor via the HI and LOW INPUT terminals. This current is generated by the Ohms Converter (also known as the Ohms Source). The value of source current for each range (except the 200 ohm range) is established at a level that will generate a two volt full-scale voltage for the 200 ohm range is 200 mV.
2. The voltage generated across the unknown resistor is sensed at the HI and LO INPUT terminals (for $\Omega 2T$), or at the $\Omega 4T$ SENSE HI and LO terminals (for $\Omega 4T$). This voltage passes unscaled into the A/D Converter (except on the 200 Ω range where it is first amplified by a factor of 10).

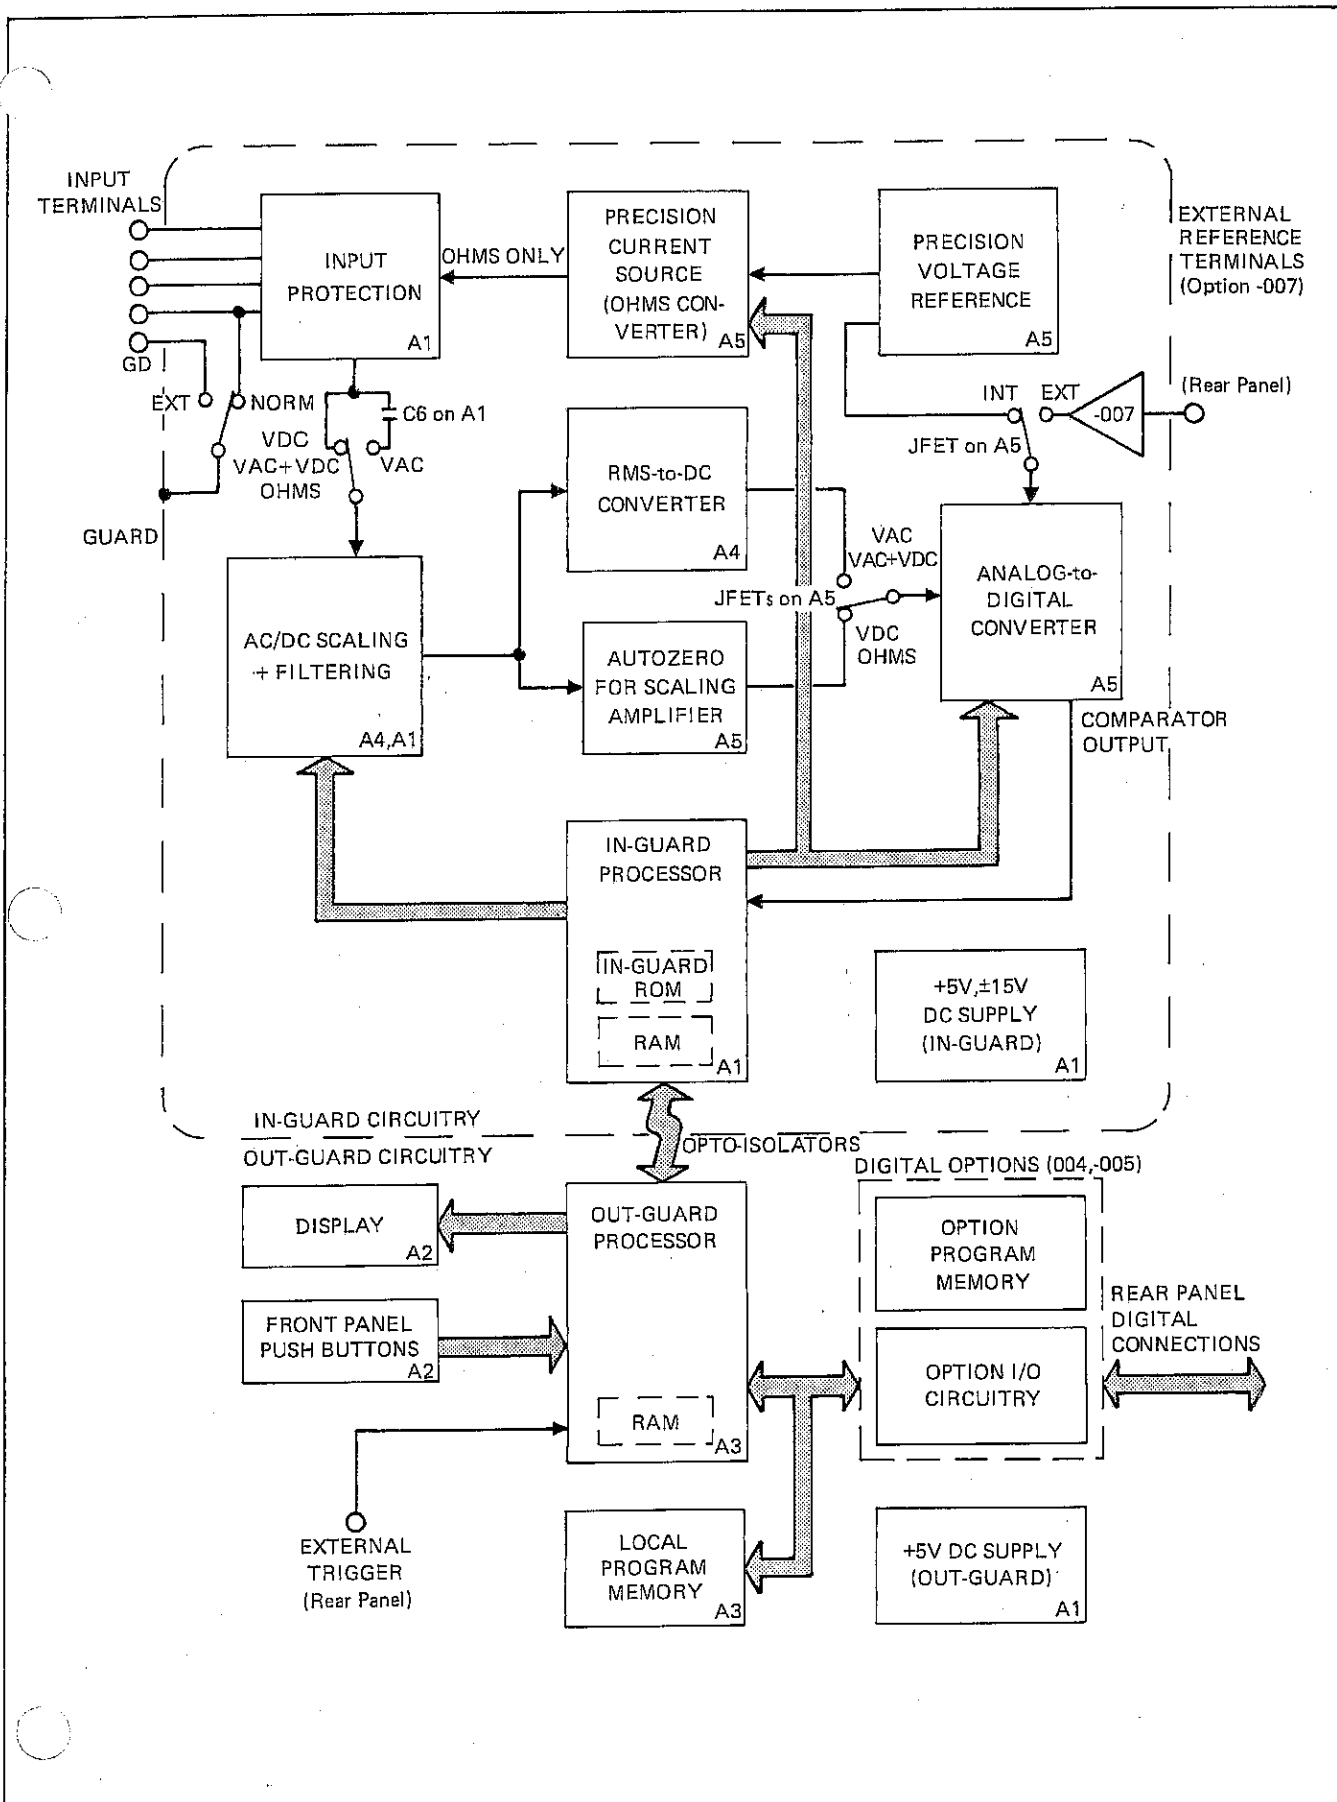


Figure 3-1. 8860A Block Diagram

Table 3-1. Scaling of Input Signals

FUNCTION	RANGE (FULL-SCALE INPUT)	OHMS CONVERTER SOURCE CURRENT (OHMS ONLY)	AC/DC SSCALING		FULL-SCALE OUTPUT OF AC/DC SCALING
			INPUT DIVIDER	SCALING AMPLIFIER	
Volts VDC, VAC, VAC + VDC	200 mV	—	÷1	×10	±2V dc (VDC) or 2V rms (VAC, VAC + VDC)
	2V	—	÷1	×1	
	20V	—	÷100	×10	
	200V	—	÷100	×1	
	1000VDC 700 VAC	—	÷1000	×1	
Ohms Ω2T, Ω4T	200 Ω	1 mA	NOT CONNECTED	×10	+2V dc
	2 KΩ	1 mA		×1	
	20 KΩ	100 μA		×1	
	200 KΩ	10 μA		×1	
	2 MΩ	1 μA		×1	
	20 MΩ	.1 μA		×1	

3-14. A/D Converter

3-15. The input to the A/D Converter is a scaled dc voltage (2V max) proportional to the 8860A input voltage or resistance. In conjunction with the in-guard micro-processor, the A/D Converter uses a dual-slope integration technique to convert the analog value to a digital representation.

3-16. DETAILED BLOCK DIAGRAM DESCRIPTION

3-17. The following paragraphs describe each of the blocks appearing in the 8860A block diagram, Figure 3-1. The description covers the power supply first, then traces the measurement signal path starting at the input terminals and ending at the display.

3-18. Drawing numbers for the applicable schematic diagrams are shown in parentheses following the description headings. The schematics are located in Section 8 of this manual.

3-19. Circuit descriptions often refer to IC and connector pin-numbers. ICs mentioned in the text are identified by U-numbers, e.g., U6. An IC pin number is identified by a dash and a number following the U-number. For example, U6-1 identifies pin 1 of IC U6. Pin 1 of each integrated circuit is identified on the pcb by a square solder pad. To identify a signal path through a series of connectors, refer to the Interconnect Diagram located in the schematic section. When two boards are connected, the pin numbers on both boards match, although the connector identifica-

tion numbers (the J and P numbers) may not match. For example, pin J3-42 (Main board) mates to P1-42 (Controller board).

3-20. Power Supply (Schematic 8860-1001)

3-21. The operating voltages for the 8860 are generated on the A1 Main PCB. Operating voltages for the in-guard circuitry include +5, +15, and -15 volts. A separate +5 volt supply provides the operating voltage for the out-guard circuitry. Elsewhere, +9, -9 and -4 volt supplies are derived from the main operating voltages. Table 4-2 lists the circuitry powered by each supply.

3-22. As a troubleshooting aid, the ± 15 volt supplies for the RMS-to-DC Converter and the Ohms Converter can be disconnected by removing jumper wires on the appropriate plug-in board. Refer to Troubleshooting in Section 4 for detailed procedures.

3-23. FUSING

3-24. The replaceable fuse located on the rear panel protects against excessive current in the power supply due to a short circuit. An additional non-replaceable thermal fuse, located inside the transformer, protects the 8860A against fire hazard.

3-25. +5 VOLT SUPPLIES

3-26. Functionally, the +5 volt supplies for the in-guard and the out-guard circuitry are nearly identical. Each has a full-wave rectifier (CR10-13), a filter (C1, C2, C7), and a 5-volt regulator (VRI, VR3).

3-27. +/-15 VOLT SUPPLIES

3-28. The +15 volt supply is regulated by a 15-volt regulator (VR2). The -15 volt supply uses the output of the +15 volt supply as a reference. That is, as the output of the +15 volt supply becomes more positive, the -15 volt output becomes more negative. The tracking is accomplished by a precision inverter (U1, R6, R12, and R13) in which the voltage across R13 is equal to the voltage across R12. Power transistor Q6 is not short-circuit protected. Therefore, care must be taken to avoid shorting the -15 volt output to ground.

3-29. Notice the -15 volt supply requires that the +5 volt in-guard supply be working, since U1 is supplied by the +5 volt supply. The +15 volt supply is unaffected by the +5 volt supply.

3-30. CIRCUIT COMMON AND THE GUARD

3-31. The 8860A is capable of making fully floating measurements since its LO INPUT terminal is not internally connected to earth ground. To isolate the sensitive analog circuitry from the digital circuits, a guard is used. The circuitry outside the guard must interact with the outside world via the IEEE-488 option and external trigger BNC jack. Therefore, its common must sit at or close to earth ground. Thus, there are two electrically separate circuit commons: the in-guard common (also referred to as analog common), and the out-guard common (referred to as digital common). The out-guard common is connected through a 10 M Ω resistor to the center pin of the ac line cord, and thereby grounded to earth. The in-guard common is connected to the LO INPUT terminal; it is left floating, and can rise up to \pm 500 volts peak above the out-guard common (earth).

3-32. The guard is a separate metal shield which encloses the analog circuitry and in-guard microprocessor. By use of the GUARD switch, the guard may be connected to the in-guard common, or to an external common via the front panel GD terminal. Use of the guard switch and terminal is described in the 8860A Operator Manual.

3-33. Input Protection (Schematic 8860A-1001)

3-34. The input protection circuit, located on the A1 Main PCB Assembly, protects the 8860A against sustained input voltages within its maximum input rating. The circuit also provides protection against voltage transients beyond this range. Sustained voltages beyond the rated range may damage the instrument.

3-35. The input protection description which follows is sectioned according to the various input paths:

1. DC and AC Voltage Sense
2. Ohms Source
3. Ω 4T Sense
4. Guard

3-36. The relays located on the A1 Main PCB Assembly are not part of the input protection circuitry. Instead, they route the input signal according to the selected range and function. Additional relay details are provided later in this section under Scaling and Filtering.

3-37. PROTECTION FOR DC AND AC VOLTAGE SENSE

3-38. For dc or ac input signals the sense path is from the INPUT HI terminal through R7 (2 k Ω , 7W resistor). At the junction of R7 and R10, four metal oxide varistors (MOV) RV1 through RV4 are connected to analog LO. These bipolar MOVs limit high voltage transients to \pm 2 kV at point E3. If the MOVs overheat and fail, they short circuit and thereby continue to provide protection for the scaling circuitry.

3-39. Coils L1 and L2 suppress arcing when the contacts of K1 are switching high voltages. The individual switches on K1, K2, and K4 are wired in series to obtain the 1000V isolation required for input switching. Resistors R10 and R11 protect the contacts of relay K3 from current surges when capacitor C6 discharges through K3.

3-40. OHMS SOURCE PROTECTION

3-41. The protection path for the ohms source is through R6. Varistors RV5 through RV8 limit high voltage transients to \pm 2 kV, as described previously. The thermistor RT1 (nominally 1 k Ω) protects against high sustained voltages up to 300V peak. As the temperature of RT1 rises, its resistance increases and effectively isolates the ohms source circuitry from the HI INPUT terminal. The clamp circuit (Q8, Q9, Q10, CR6, R14, and R15) serves two purposes: first, it clamps the open-circuit voltage of the current source (point E8) to about 5V; second it protects the Ohms Converter from voltage spikes at the input by limiting positive spikes to +5V (via Q8 and Q10) and negative spikes to -2V (via CR6 and Q9). Capacitor C16 helps to shunt transient voltages to ground.

3-42. FOUR-TERMINAL OHMS SENSE PROTECTION

3-43. Resistors R8 and R9 provide protection for the 4-terminal ohms sense circuitry. To prevent ac cross talk, FET Q13 grounds the Ω 4T input line when VAC or VAC+VDC is selected. Transistor Q7 keeps the Ω 4T SENSE LO line within -7V to +9V of the in-guard common. This clamping of the sense inputs protects JFET A1-E on the AC/DC Scaling circuit.

3-44. GUARD PROTECTION

3-45. Components R25, C17, and R29 prevent the guard from making fast voltage transitions. As a result, voltage spikes at the GD terminal do not reach the guard itself.

3-46. Scaling and Filtering (Schematic 8860A-1004, Sheet 1 of 2)

3-47. The ranging and filtering for the selected function takes place on the AC/DC Scaling PCB (A4). When a range is selected, either manually or automatically, the AC/DC scaling circuitry conditions the input signal to produce a $\pm 2V$ dc or 2V rms signal for a full-range input.

3-48. AC/DC SCALING

3-49. The amount of scaling for each range and function is given in Tables 3-1. Figure 3-2 shows how the scaling takes place. Either JFET switch A1-A, A1-B, or Q13 is ON to divide by 1, 100, or 1000. FETs Q12 and Q18 configure the scaling amplifier for a gain of either 1 or 10. For both voltage resistance measurements, a conditioned signal of 2 volts dc at the A/D Converter is recognized as a full scale-input for all ranges.

3-50. For all resistance measurements (except on the 200 Ω range) the sense voltage generated across the unknown resistor is scaled to the 2V range by the current source (Ohms Converter). The 200 Ω range has a full-scale sense voltage of 200 mV. Consequently, the AC/DC Scaling amplifier multiplies this voltage by 10 to establish the required 2V dc at full scale. The JFET state tables are located with the AC/DC Scaling schematic in Section 8.

3-51. The scaling amplifier (Q17 and U14) is the first amplifier an input signal encounters. In VDC, the differential JFET input stage Q17 provides an input resistance greater than 10,000 M Ω for the 200 mV and 2V ranges. The input divider presents a 10 M Ω input resistance for the higher voltage ranges. Capacitors C2 through C7, connected to the resistive divider, are adjusted to maintain a flat frequency response for the divider ranges.

3-52. The voltage clamp (Q2, Q3, Q7, Q8, VR1, VR2) limits the voltage applied to the scaling amplifier to $\pm 10V$ peak on the two lowest voltage ranges (both ac and dc) and all ranges of ohms. The other voltage ranges do not require clamping since the largest voltage that can appear at the scaling amplifier is 10V (1000V divided by 100).

3-53. JFET BIAS AMPLIFIERS

3-54. The high-impedance, unity-gain, JFET amplifier, Q16 and U5, follows the input voltage to pull up the gate of each conducting JFET in the scaling circuit. Amplifier U6A performs the same bias function for JFET switches A1-G, Q12, and Q18.

3-55. FILTERING

3-56. A passive and an active filter are a part of the AC/DC Scaling network. Both are shown in simplified form in Figure 3-2.

3-57. If either the Calculating Controller Option (-004) or the IEEE-488 Interface Option (-005) is installed, a settling

delay (Modifier A4) may be enabled. In this case, each measurement is initiated only after the filter voltages have settled. The amount of delay is controlled by the in-guard processor.

3-58. Passive Filtering

3-59. The passive filter consists of capacitor C9, JFET Q15, and the resistive component (approximately 100 kilohms) of the input divider. The VDC and the ohms functions allow the filter to be selected using the front panel filter switch. If the filter is not selected, its state is conditional as described in the state table (see schematic). Selecting either the VAC or the VAC+VDC functions disables both filters regardless of other operating conditions.

3-60. 3-Pole Active Filtering

3-61. The front panel FILTER modifier, for certain functions and ranges, inserts a low-pass 3-pole Butterworth filter (U3) with a corner frequency of approximately 7 Hz. It provides additional noise rejection in VDC, $\Omega 2T$, and $\Omega 4T$.


3-62. AUTOZERO

3-63. The scaling amplifier (Q17 & U14) has an inherent input offset voltage which drifts with time and temperature. In the VDC and ohms functions the autozero circuitry eliminates the effect of this error at the start of every VDC or ohms measurement cycle. (In VAC and VAC+VDC the autozero routine is not performed.) Functionally, the auto zero circuit may be divided into the following three groups:

1. Components to momentarily short the input of Q17 to ground through A1-G and either JFET A1-D (for VDC and $\Omega 2T$), or A1-E (for $\Omega 4T$). The drive signal for A1-G is \overline{INT} .
2. Components to store and subtract the offset voltage from the output of U14: C15 and Q10 located on the A/D Converter board.
3. Components to correct for charge injection during the measurement cycle: C1, R5, C44.

3-64. A functional grouping of the autozero components is shown in Figure 3-3. The auto zero sequence is performed under the control of the in-guard microprocessor as follows: FETs Q10 and A1-G close simultaneously. The input of Q17 is grounded causing capacitor C15 to charge to the combined offset voltage of Q17 and U14. Then Q10 and A1-G open causing the corrected input signal to be applied to the input buffer of the A/D Converter, A2-J.


3-65. In the four-terminal ohms function, the DMM autozeros through JFET A1-E to the $\Omega 4T$ SENSE LO terminal. This terminal is the measurement reference, giving true four-terminal sense.

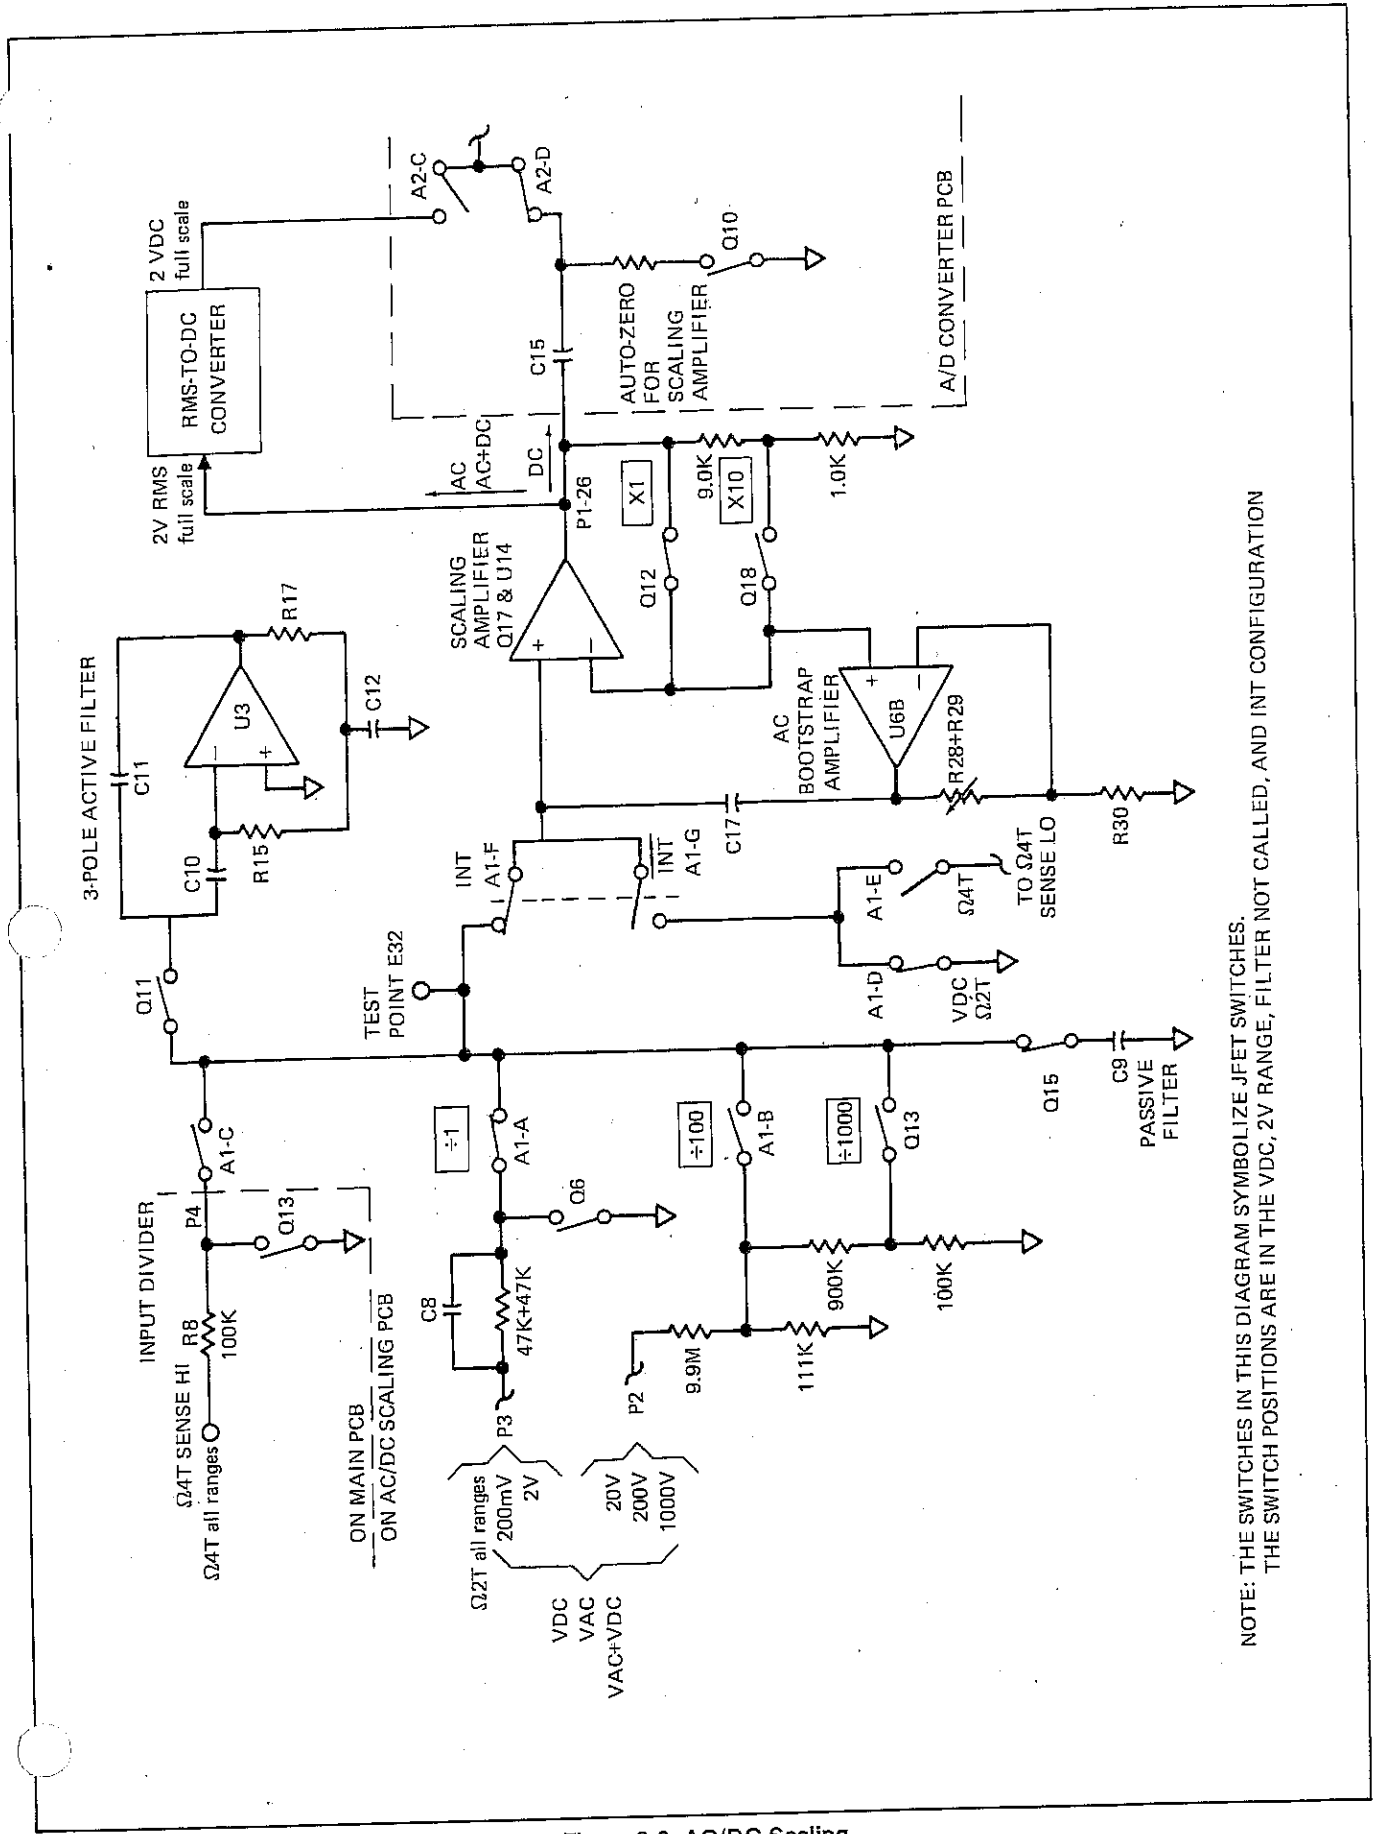

NOTE: THE SWITCHES IN THIS DIAGRAM SYMBOLIZE JFET SWITCHES. THE SWITCH POSITIONS ARE IN THE VDC, 2V RANGE, FILTER NOT CALLED, AND INT CONFIGURATION.

Figure 3-2. AC/DC Scaling

A. CHARGING C15 TO OFFSET VOLTAGE

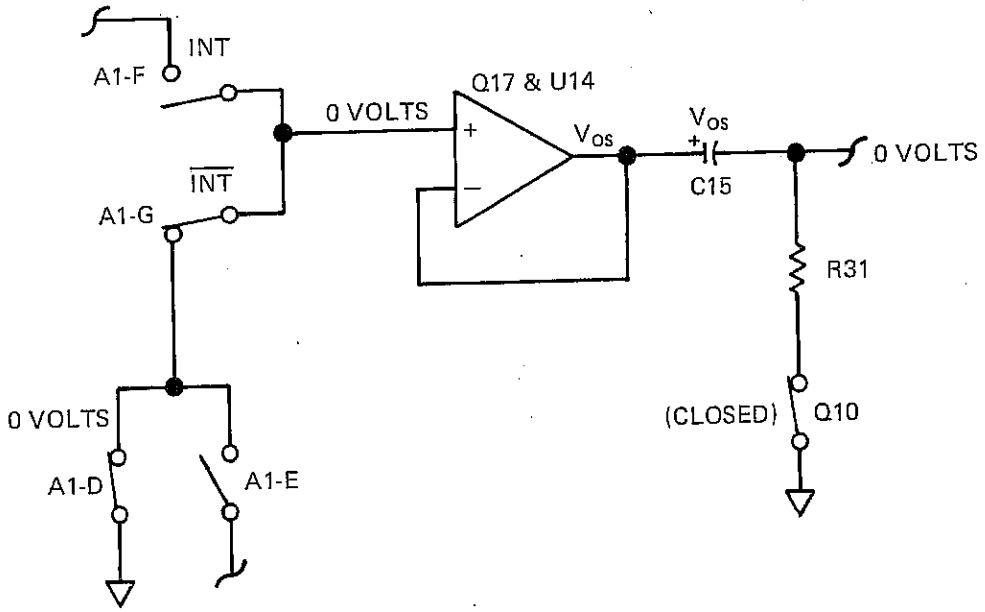

B. CONFIGURATION FOR APPLYING V_{in} TO A/D CONVERTER

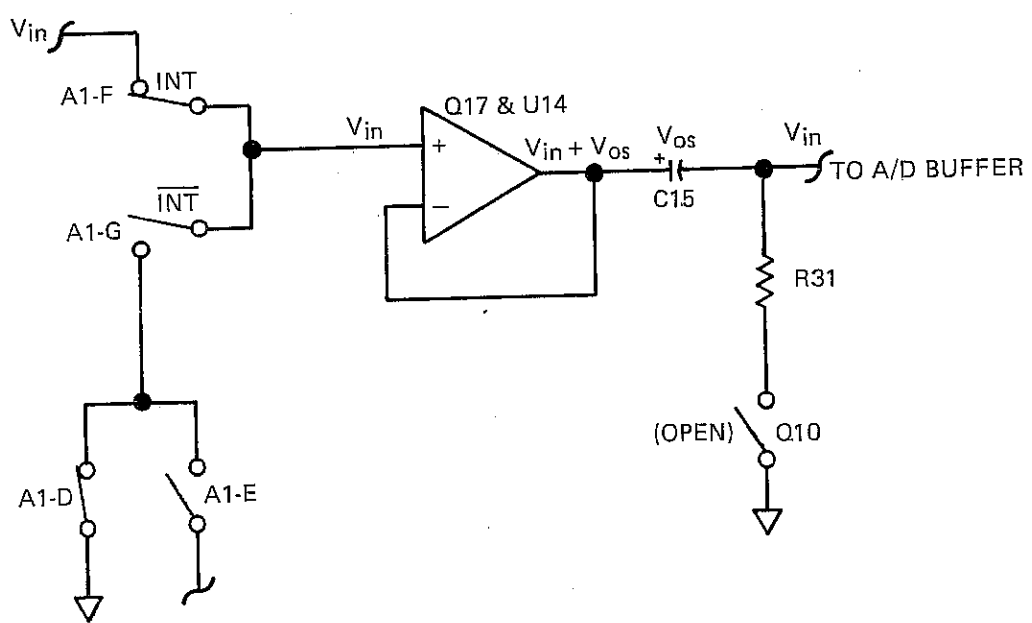


Figure 3-3. Autozero Routine

3-66. During the measurement cycle, switching signals are capacitively coupled into the input node of Q17. Capacitor C1 is driven with the INT signal to correct for charge injection errors.

3-67. AC BOOTSTRAP AMPLIFIER

3-68. Operational amplifier U6B is capacitively coupled to the non-inverting input of Q17. At higher frequencies U6B operates as a bootstrap to compensate for the high frequency rolloff of ac signals in the 200 mV and 2V ranges. The rolloff is due to the parasitic capacitance of the JFET switches connected to pin 17 of A1. Amplifier U6B has a gain of 1.75 to 2.00 (depending on how R29 is set). JFET Q19 is turned on for VDC and ohms measurements to reduce the gain of U6B. This gain reduction eliminates charge transfer through C17 during the autozero process, and keeps input bias current to a minimum. The charge transfer is especially evident when making high resistance (greater than 10 megohm) measurements.

3-69. RMS-to-DC Converter (Schematic 8860A-1004, Sheet 2 of 2)

3-70. The RMS-to-DC Converter, hereafter referred to as the RMS Converter, is located on the AC/DC Scaling PCB. For the VAC and the VAC+VDC functions the converter generates a positive dc voltage with a magnitude equal to the true rms value of the input (up to crest factor of 2). The RMS Converter, shown in Figure 3-4, computes the rms voltage using a log-antilog circuit.

3-71. The following description of the RMS Converter is divided into four separate sections:

1. Absolute Value Converter
2. 2X Log Amplifier
3. Log Feedback Amplifier
4. Antilog Amplifier

3-72. The absolute value converter, composed of U8 and its associated components, forms a full-wave rectifier which converts a bipolar voltage to a positive collector current at U17A. A positive input voltage (V_{in}) causes a collector current of $V_{in}/40k$ (I_1 in Figure 3-4). When V_{in} is positive, I_2 is zero since CR6 is off; diode CR7 is turned on.

3-73. A negative input voltage (V_{in}) produces the same U17A collector current, but in a different manner. Diode CR6 is turned on, and CR7 is turned off. The negative input voltage appears at the cathode of CR6, inverted (with unity gain). Half of current I_2 flows through the 40 kilohm resistor and the other half ($V_{in}/40k$) flows into the collector of U17A.

3-74. The offset compensation amplifier U15 corrects for the dc offset of U8. The correction improves the dc stability of U8 over the operating temperature range of the 8860A.

3-75. The 2X Log Amplifier takes the logarithm of the U17A collector current and multiplies the logarithm by 2. Transistors U17A and U20A are the logarithmic elements in the amplifier. The logarithmic function is derived from the relationship of base-emitter voltage to collector current of a bipolar transistor.

3-76. A few components in the 2X Log Amplifier help to improve stability and high frequency response. For example, Q14, a transconductance amplifier, assures loop stability; RC network R75 and C41 provide ac compensation; and R61 adjusts the loop gain of the circuit to improve high frequency response. Low voltage power supplies are used with U16 to ensure low power dissipation and improved stability.

3-77. The amplifier consisting of U19A and U20B performs the antilog function of the RMS Converter. The collector current of U20B ($V_3/400 k\Omega$) is logarithmically related to the difference between its base and emitter voltages (V_2 and V_1). Capacitor C34 operates as a filter and U19B operates as the log feedback amplifier.

3-78. In operation the output of U19A is a dc voltage equal to five times the rms value of the input to the RMS Converter. At full scale, its output is 10V. Resistive divider network U18 divides the output of U19A by five to obtain a full scale output of 2 volts. Jumper wires W5 through W8 are removed as necessary during factory calibration to bring the divider output within the adjustment range of R67. The output is filtered by R59 and C32 before being applied to the A/D Converter.

3-79. Jumpers W5 through W8 are selectively cut at the factory during pre-calibration, and should not be altered unless the U17 or U20 transistor arrays are replaced. See Table 4-5 for the jumper selection guide.

3-80. Ohms Converter (Schematic 8860A-1005, Sheet 1 of 2)

3-81. The Ohms Converter is physically located at the forward end of the A/D and Ohms Converter PCB. The Ohms Converter is enabled when the $\Omega 2T$ or $\Omega 4T$ function is selected. Circuit operation is the same for both functions. The Ohms Converter supplies a source current through the unknown resistance (R_x), generating a dc voltage proportional to R_x . This voltage is sensed and measured in the same way as a dc input voltage, but is displayed in ohms.

3-82. SOURCE CURRENT

3-83. Figure 3-5 shows a simplified schematic of the Ohms Converter. Source current for R_x flows through relay K4, to the front panel terminal labeled INPUT HI, through R_x (the resistor being measured), and returns to the source through the INPUT LO terminal. This current is scaled according to the selected resistance range. The scaled values for each range are shown in Table 3-1. The 200 Ω range has a 1 mA source current and produces a full-range voltage of 200 mV. All other ranges produce a 2 volt output at full-range.


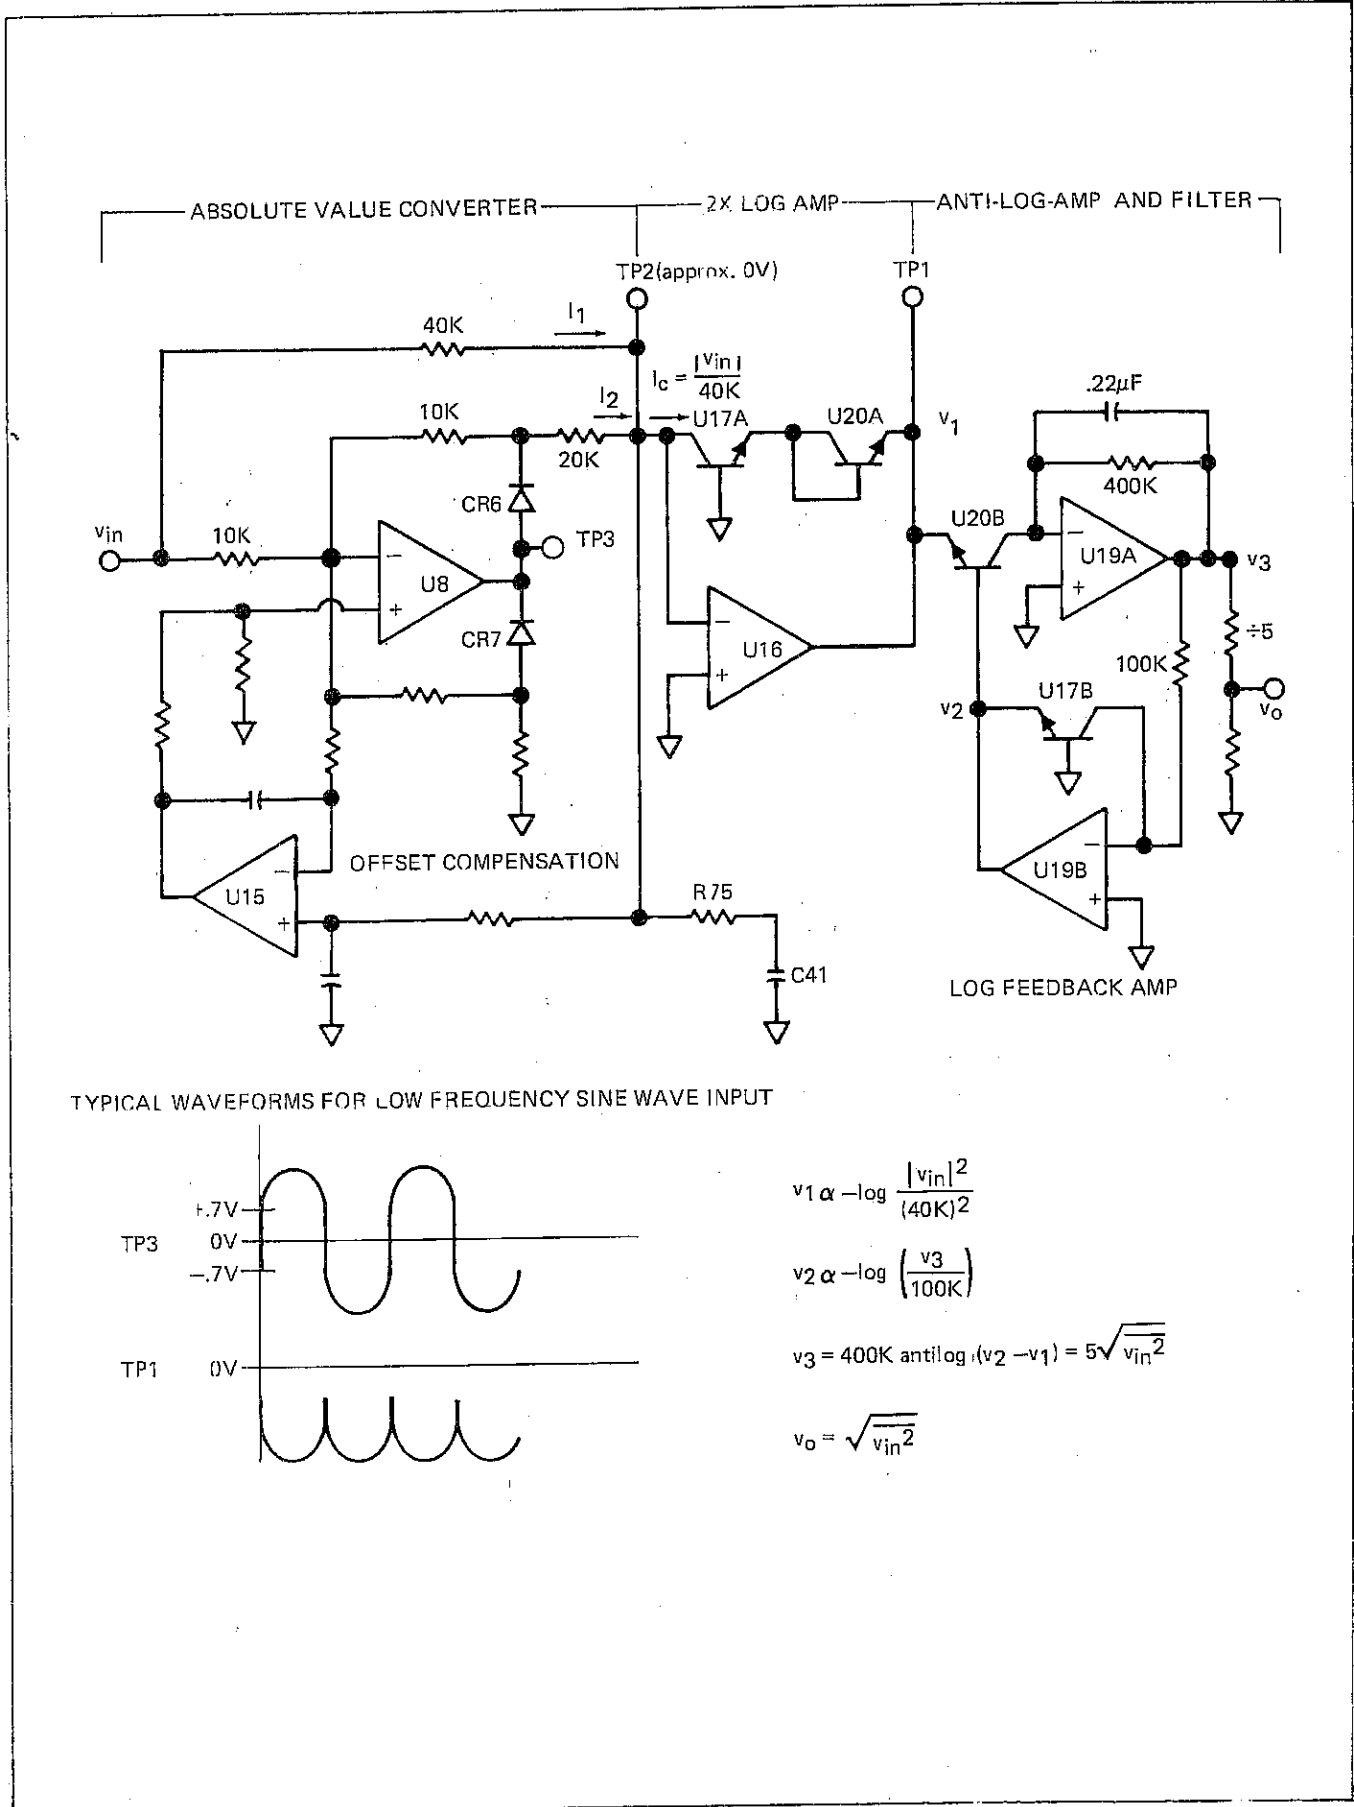


Figure 3-4. RMS-to-DC Converter — Simplified Schematic

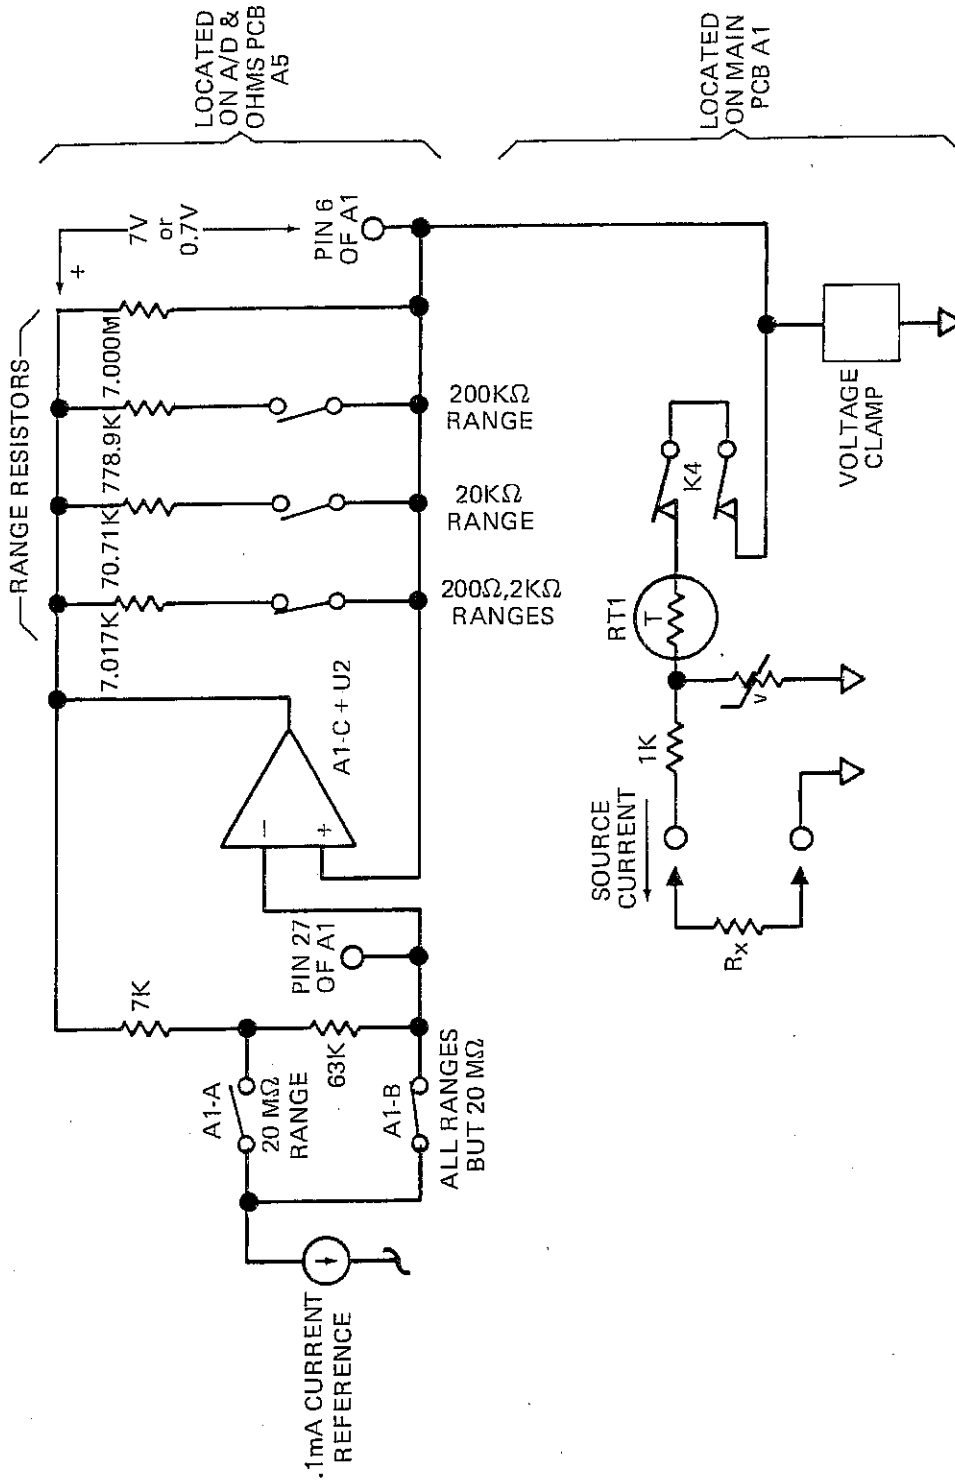

The FETs, shown here as switches, are conducting only for the ranges shown.
 The FETs are shown switched for the 200Ω and 2KΩ ranges.

Figure 3-5. Ohms Converter—Simplified Schematic

3-84. RANGING VIA JFET SWITCHING

3-85. The ranging resistors are switched into the circuit by a series of JFETs located on the A1 hybrid assembly. ICs U6 and U7 are quad comparators with open-collector outputs. They translate digital control signals to voltage levels suitable for driving JFET switches. The JFET gate voltage requirements are -15 volts for turn off and a value equal to the channel voltage for turn on. The 2 to 4 decoder, U21, controls (through U6 and U7) the selection of four precision range resistors. The U21 truth table is given in Section 8, Ohms Converter.

3-86. On the lowest five resistance ranges, the 0.1 mA reference current flows through 70 k Ω (R9 + 63K + 7K) to produce a constant +7 volt drop across the enabled range resistor. Holding the voltage across the selected range resistors produces the constant source current for Rx. For example, on the 200 Ω range, +7 volts across 7 kilohms produces a 1 mA source current. On the 20 M Ω range, JFETs A1-A and A1-B switch the 0.1 mA through the 7 kilohm reference resistor, producing a +0.7 volts drop across the 7 megohm reference resistor. The 0.7 volt drop maintains the 0.1 μ A source current for Rx.

3-87. Amplifier U4, configured as a unity-gain amplifier, tracks the channel voltage of the A1 switching FETs. The output of U4 is used to supply the on-state gate bias voltage for all of the A1 switching JFETs. By tracking the voltage at pin 6 of A1, U4 maintains a constant, low junction voltage for all input voltages, thus keeping leakage effects constant. U4 also bootstraps the protection circuit on the main board to minimize leakage errors.

3-88. A/D Converter (Schematic 8860A-1005, Sheet 2 of 2)

3-89. The A/D Converter is located on the A/D and Ohms Converter PCB. Its purpose is to convert a measured quantity from analog to digital form for the purpose of display. Figure 3-6 is a simplified circuit diagram of the A/D Converter. The entire A/D conversion process, including timing, is under the control of the in-guard microprocessor. The A/D Converter indicates the polarity of the input (for selection of the reference) and signals the processor when the correct count has been reached.

3-90. The A/D Converter uses a dual-slope conversion technique and operates in both polarities. The dc voltage input to the A/D Converter represents the unknown resistance or voltage at the 8860A input terminals. This dc voltage is integrated (charges C7) for a fixed amount of time, called the integration period; see Figure 3-7. At the end of this period the input of the A/D converter switches to either an internal or an external reference voltage with a polarity that is opposite that of the input voltage. This discharges capacitor C7 at a controlled rate. A comparator interrupts the microprocessor and ends the discharge period when the charge remaining on C7 is equal to the charge that was present just prior to integration.

3-91. Figure 3-7 illustrates and describes the various periods within a measurement cycle. Figures 4-4 and 4-5 in Section 4 of this manual give the associated JFET timing diagrams and signal waveforms.

3-92. The in-guard microprocessor derives the digital readout by counting at a 1 MHz rate during the discharge cycle. If the counter reached 199,999 counts without being interrupted (in the 5-1/2 digit mode), the display will indicate overrange.

3-93. PRECISION VOLTAGE REFERENCE

3-94. The Precision Voltage Reference, Figure 3-8, provides the voltage standard for all 8860A measurements by establishing a precise discharge rate for C7. Reference amplifier U22 is a temperature compensated 6.5 volt zener reference. Op amp U23A is connected in a bootstrap configuration to supply a very stable +11 volt output to R40 and R41, assuring highly stable currents for U22. Resistor R40 sets the zener current. Resistors R41 and R42 are selected to set the correct temperature compensation current for the reference amplifier.

3-95. Amplifier U23B fixes the collector of U22 at zero volts and buffers the output of U22 for use by the reference divider network, U10. Jumper wires W4-W8 are removed as necessary during factory calibration to bring the reference divider output voltage within the adjustment range of R17. Diode CR11 and R44 assure that the reference circuit always powers up to the correct polarity.

3-96. PRECISION CURRENT REFERENCE


3-97. Amplifier U5 taps 5.480V dc from U10 and applies it to R11 and R12 to generate a precise 0.1 mA dc reference current for the Ohms Converter. JFET Q3 assures a constant output current over the entire compliance voltage range of the Ohms Converter.

3-98. A/D SWITCHING NETWORK

3-99. Hybrid A2 on the A/D Converter PCB contains a series of JFET switches. These switches are used to perform the following functions:


1. Select the VDC, Ohms (via A2-C), or VAC (via A2-D) functions for processing during the integrate period.
2. Enables the internal reference (via A2-B) or the external reference (via A2-A) for use during the counting period. (This selection is made from the front panel.)
3. Switches the polarity of the 1V reference (via A2-F, G, H, and C14) for the A/D Converter.

3-100. Items 2 and 3 are described further under Internal/External Reference.

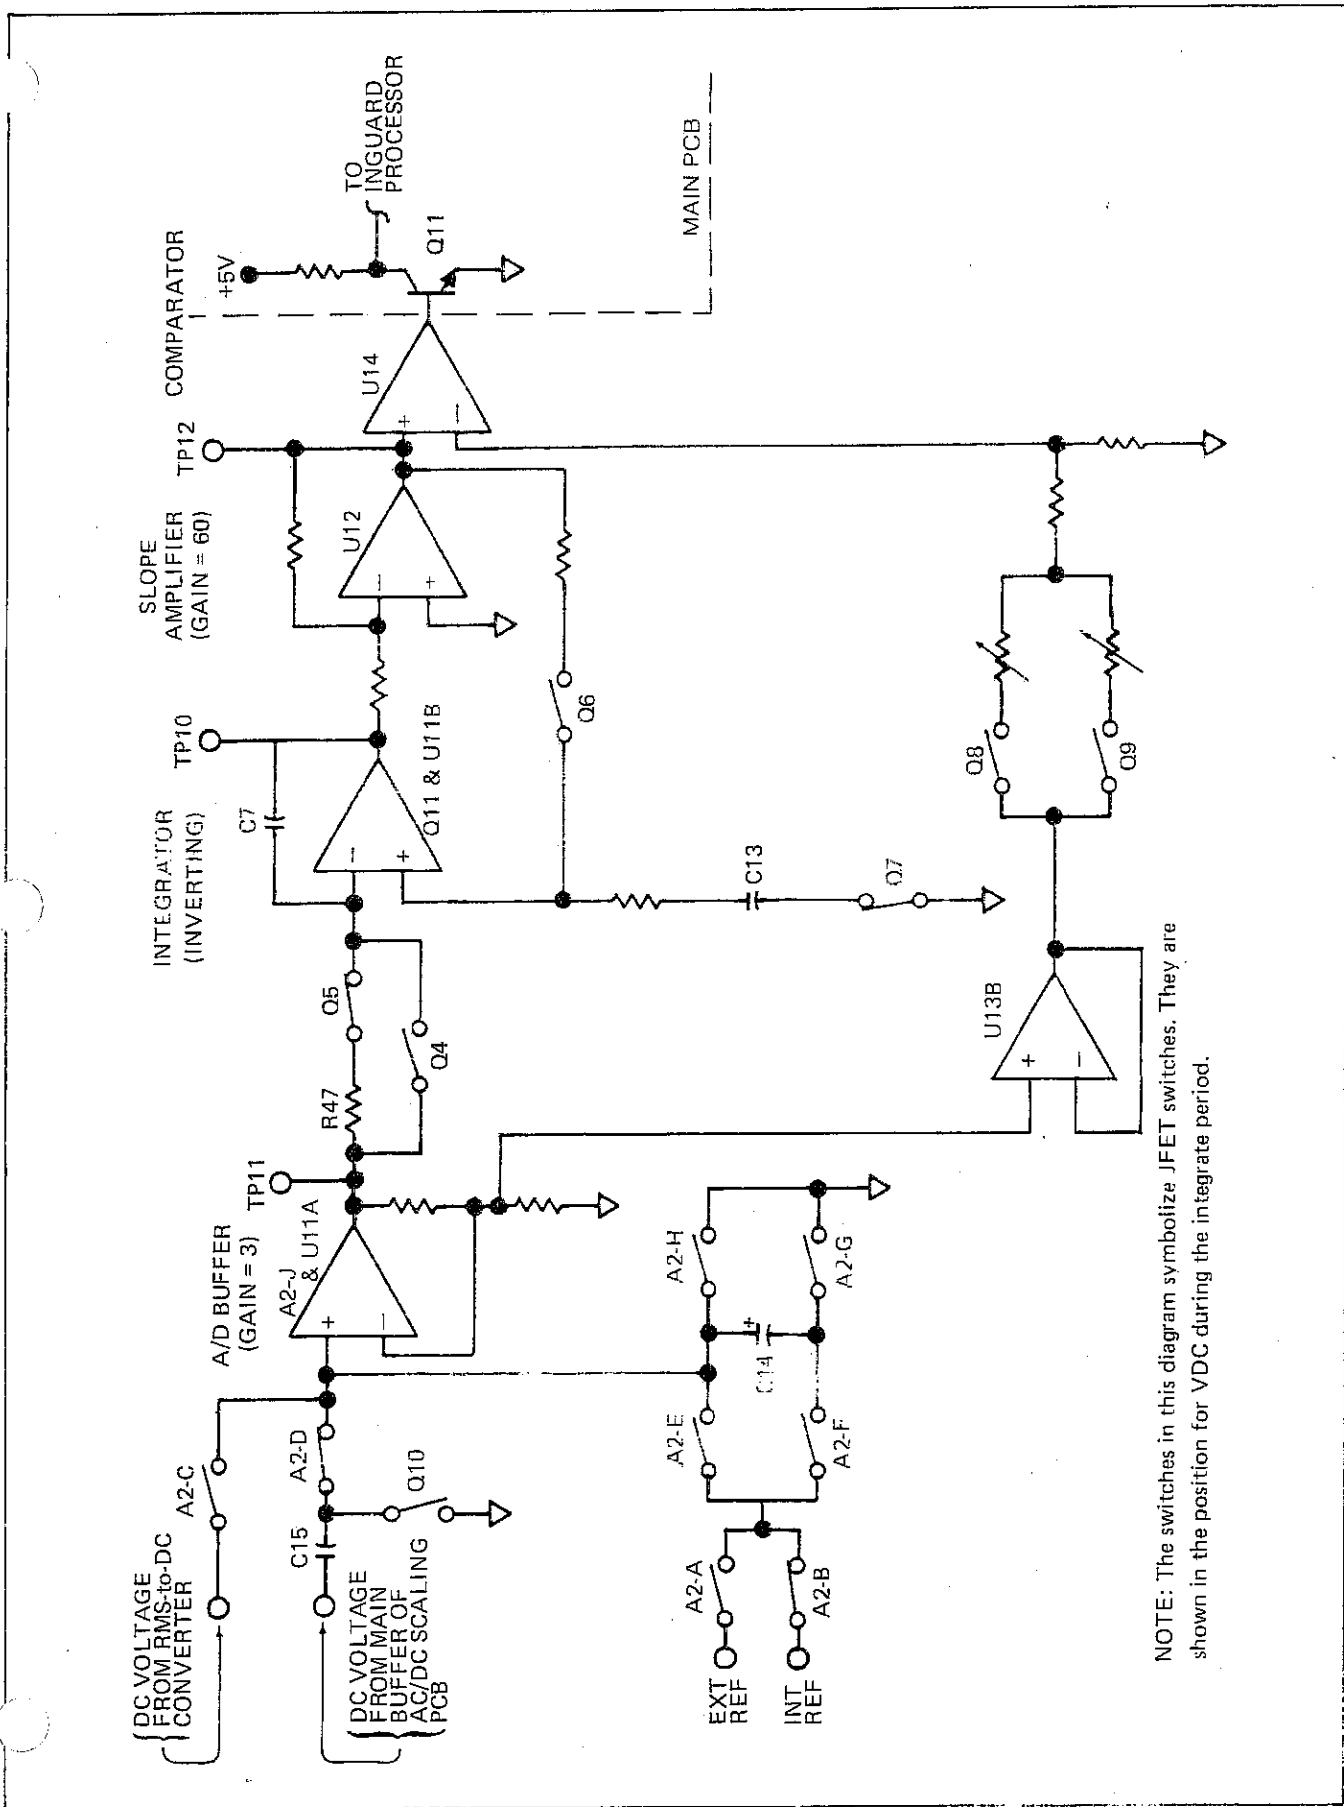

NOTE: The switches in this diagram symbolize JFET switches. They are shown in the position for VDC during the integrate period.

Figure 3-6. A/D Converter—Simplified Schematic

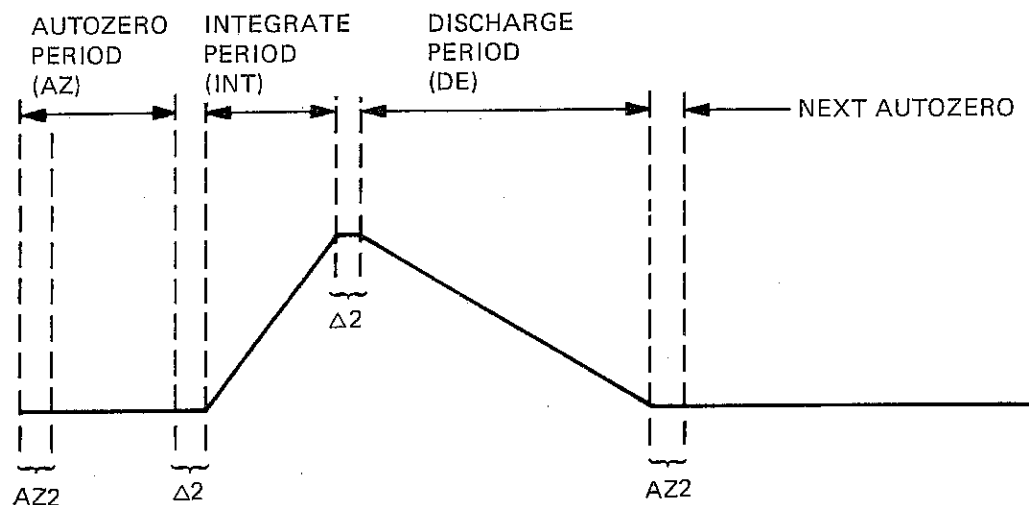

AUTOZERO PERIOD (AZ)

The initial small voltages on C7 and C13 are established during this period with Q6 switched on and the A/D buffer input grounded through A2-H. AZ2 assures fast recovery from overloads.

TIME-OUT PERIODS (Delta-2)

Each of these .5 ms periods allows the A/D buffer to respond to the switched-in voltage and settle, before the voltage is applied to the integrator.

INTEGRATE PERIOD (INT)


C7 charges to a voltage proportional to the applied input. The length of the integrate period depends on the sample rate chosen, as follows:

RESOLUTION	AC LINE FREQUENCY	INTEGRATION PERIOD (INT)	MEASUREMENT CYCLE (approximate)
5½ digit	50 Hz or 60 Hz	100 ms	400 ms
4½ digit	50 Hz	20 ms	66.7 ms
	60 Hz	16-2/3 ms	
3½ digit	50 Hz or 60 Hz	2 ms	20 to 50 ms

DISCHARGE PERIOD (DE)

C7 discharges for a length of time proportional to the applied input, during which digital counts accumulate. This count represents the value of the input resistance or voltage being measured. The rate of discharge is the same for all A/D conversion speeds when the internal reference is chosen.

Figure 3-7. A/D Converter Measurement Cycle

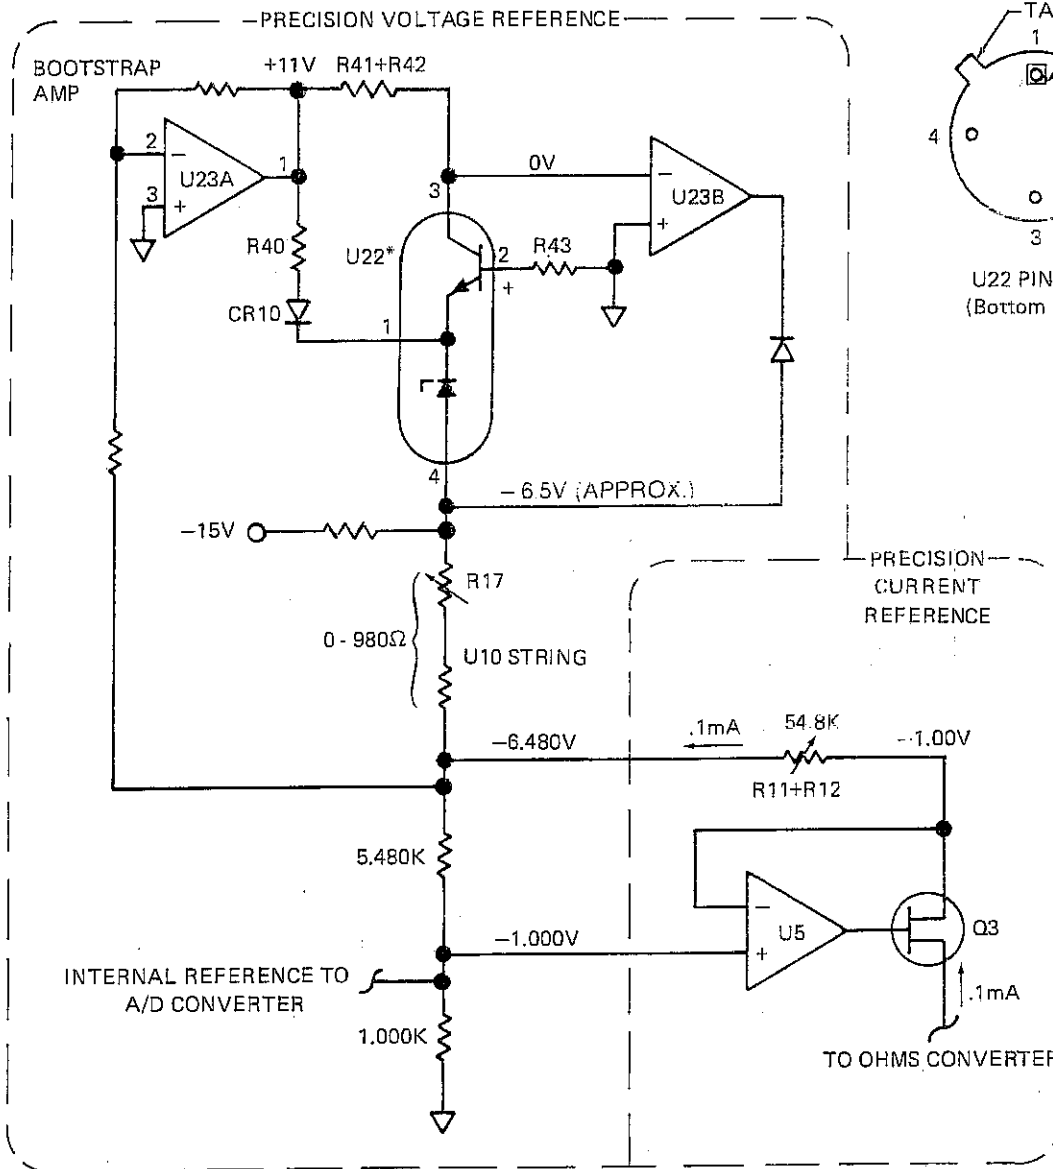

*R41, R42, and U22 are replaced only as a set.

Figure 3-8. Precision Voltage and Current References—Simplified Schematic

3-101. The JFET switches of A2 are controlled by comparators U15 through U18, which in turn are controlled by the in-guard microprocessor. The timing for the JFET switches is shown in Figure 4-4. IC U21 decodes two lines from the microprocessor into a 1-of-4 output.

3-102. Amplifiers U13A and U13B supply gate bias to JFET switches which must conduct non-zero voltages. This bias arrangement assures a constant switch resistance for all voltage levels.

3-103. A/D BUFFER

3-104. The A/D buffer, as shown in Figure 3-6, consists of dual JFET A2-J and amplifier U11A. The buffer receives a scaled dc input from the AC/DC scaling circuits, amplifies the input by a factor of 3, and provides the integrator with the amplified signal.

3-105. INTEGRATOR AMPLIFIER

3-106. The integrator consists of Q11, U11B, R47 and C7. JFET Q5 is on during the integrate and discharge periods to allow C7 to charge and discharge. JFET Q5 is switched off for 0.5 ms (Delta-2) before the charge and discharge periods. Clamp transistor Q12 ensures that Q5 does not conduct current during these off times. The Delta-2 periods serve to isolate the integrator from transient voltages due to switching of the A/D buffer input. In addition, input polarity is sensed during the second Delta-2 so that the appropriate reference can be applied to the A/D buffer.

3-107. JFET Q4 is normally off and Q7 is normally on. However, they change state simultaneously for a short time (called AZ2) at the beginning of the autozero period. Q4 switches on during AZ2 to rapidly remove any residual charge on C7. Q7 switches off to minimize disturbance of the charge stored on C13 during the previous autozero. The AZ2 period is the key to high-speed operation of the A/D Converter (4-1/2 and 3-1/2 digit modes). AZ2 also assures rapid overload recovery. Resistors R22 and R23 provide a small amount of linearity correction.

3-108. INTERNAL/EXTERNAL REFERENCE

3-109. The selected reference, internal or external, is applied to the A/D Buffer during the discharge period. The internal reference is a precise +1 or -1 volt level. It is applied with a polarity opposite the scaled dc input voltage in order to discharge C7. The precision -1 volt internal reference is available via JFET A2-B.

3-110. The +1 volt reference is derived by storing the precision -1 volt level on capacitor C14 and then reversing the capacitor's connections. JFETs A2-F and A2-H are switched on for the duration of the autozero period to charge C14. When the positive reference is required, A2-G is switched on during the discharge period.

3-111. An external reference voltage may be of either polarity since the A/D Converter incorporates a precision

inversion circuit. The inversion is accomplished by connecting C14 to the reference voltage during autozero and reversing the capacitor's connections during the discharge period.

3-112. SLOPE AMPLIFIER AND COMPARATOR

3-113. Op amp U12 is configured as an inverting amplifier with a gain of 60. Its output is used to improve the accuracy of zero-crossing detection (via U14) at the end of the discharge period, and to assure accurate and repeatable autozeroing of the integrator during the autozero period (via Q6). JFET Q6 conducts during the autozero period to close the loop which initializes the voltages on C7 and C13.

3-114. The comparator is composed primarily of U14, and includes Q11 on the Main PCB. The output of the comparator indicates polarity during the second Delta-2, and interrupts the counter at the end of the discharge period.

3-115. Diodes CR5, 6, 8, and 9 limit the slope amplifier output to ensure pinchoff of Q6 during the integrate and discharge periods. A dc voltage (70 mV to 120 mV) determined by R29 and R30 is applied to U14-4 during the discharge period. When the output of the slope amplifier reaches the same voltage as U14-4, the comparator changes state and interrupts the in-guard microprocessor. Q9 is enabled for positive inputs, and Q8 for negative inputs.

3-116. In-Guard Microprocessor (Schematic 8860A-1001)

3-117. The in-guard controller is an 8-bit microprocessor, complete with RAM and ROM. It plugs into a socket on the Main PCB Assembly and controls the entire measurement cycle. Measurement cycle control includes:

1. Implementing front panel selections: function, range, autoranging, zero, filter, sample rate, external reference, and trigger arm.
2. Timing the JFET switching associated with the A/D Converter.
3. Transmitting the measured value to the out-guard microprocessor at the end of every measurement cycle.

3-118. The in-guard microprocessor controls autoranging. When autoranging is selected, the 8860A begins in the highest range and downranges. If the input signal represents less than 18000 counts (in the 5-1/2 digit mode), the 8860A switches to the next lower range. If at any time the input signal represents more than 199999 counts, the 8860A upranges.

3-119. The front panel ZERO function allows the in-guard microprocessor to store an offset value for the

VDC and resistance measurement functions (2- or 4-terminal). The value is stored in three separate and independent RAM locations, and is subtracted from measured value before sending it to the out-guard microprocessor.

3-120. The in-guard microprocessor is powered by the +5V in-guard supply. A reset circuit at U6-39 momentarily holds the microprocessor in the reset state during power-up to initialize internal conditions.

3-121. Guard-Crossing Circuitry (Schematic 8860A-1001)

3-122. The guard-crossing, located on the Main PCB Assembly, is an optically coupled data transmission path for communication between the in-guard and out-guard microprocessors. The use of opto-isolators allows a differential of up to ± 500 volts between out-guard common and in-guard common.

3-123. Communication between the microprocessors employs detection and correction, and is fully self-restarting when data is lost or incorrectly transmitted. Inadvertent loss of data is usually indicated by an error message on the display.

3-124. In each direction there are two transmission paths, clock and data, which carry parallel signals. Transmissions either direction, out-guard to in-guard (through U9 and U10) or in-guard to out-guard (through U7 and U8), are fully symmetrical. The following description of one of the guard-crossing data paths applies to all four.

3-125. A digital signal from J3-15 (Controller PCB connector) drives the inverting input of a comparator in U2. The output of the comparator drives the input of optoisolator U10. A low input to U10 produces an isolated high output level (+0.42 to +0.6V dc). This signal drives the inverting input of another comparator (contained in U5) that has a switching threshold of +0.2 volts to 0.35 volts. The output of this comparator (pin 14) drives U6-14, the Receive Clock input to the in-guard microprocessor. The signal is inverted three times in crossing the guard, resulting in a net signal inversion.

3-126. Out-Guard Microprocessor (Schematic 8860A-1003)

3-127. The out-guard controller U2 is an 8-bit microprocessor which plugs into a socket on the A3 Controller PCB Assembly. It is supported with external ROM and expanded I/O capability.

3-128. OUT-GUARD MICROPROCESSOR SOFTWARE

3-129. The out-guard microprocessor (U2) has an external program ROM (U9). This ROM contains the program which operates the 8860A in the local mode;

another ROM takes over in the remote mode. From local ROM, the out-guard microprocessor:

1. Reads the front panel keys and internal switches.
2. Communicates front panel selections to the in-guard microprocessor.
3. Passes all triggers to the in-guard microprocessor, including continuous triggers and those from manual, external, and bus sources.
4. Receives measurements from the in-guard microprocessor.
5. Processes numerical data entered from the front panel.
6. Performs limits and peak to peak comparisons.
7. Performs offset subtraction.
8. Controls the display and front panel LEDs.
9. Performs self-diagnostic error checks.
10. Interfaces with the two digital options: the Calculating Controller (-004) and the IEEE-488 Interface (-005).

3-130. Table 3-2 shows how the various ROMs are sectioned into four address spaces, and how each section is accessed using ports P23, P26, and P50. The table also shows the state of the control lines for each ROM device. The RAM internal to the out-guard microprocessor holds the three stored values for offset, high limit, and low limit.

3-131. OUT-GUARD MICROPROCESSOR HARDWARE

3-132. The four major components which support the operations listed previously are located on the Controller PCB. They are:

1. U2, Out-Guard Microprocessor
2. U9, Local Program Memory (ROM)
3. U10, 8-Bit Latch
4. U3, I/O Expander

3-133. Operating power for the Controller PCB Assembly comes from the +5 volt out-guard supply. At power-up, capacitor C1 charges slowly through an internal resistor in U2 to release the reset line (pin 4) after a delay. This initial delay sets the logic on the Controller PCB Assembly to a known state on power-up.

Table 3-2. Out-Guard ROM Selection

	ROM DEVICE		ROM ADDRESS	PORT NO.		
				P23 U2-24	P26 U2-37	P50 U3-1
BASIC INSTRUMENT (LOCAL ROM)	U9		0-2047	0	X	0
			2048-4095	0	X	1
OPTION (OPTION ROM)	IEEE	CALC.	0-2047	1	0	X
	U4	U10				
		U19				
<p>X = don't care</p> <p>Device/pin numbers refer to schematic 8860A-1003, Controller circuit board; U2-24, for example, means device U2, pin 24.</p>						

3-134. The out-guard microprocessor communicates with the other ICs (U9, U10, and the two digital options) by way of the data bus, lines D80 through D87. This bus is multiplexed; the data and the eight lower-order address bits appear at different times on these lines. The eight-bit latch (U10) holds the address at its output for the local program memory (U9). The address is latched from the data bus by a signal called ALE (Address Latch Enable). ALE is generated by the out-guard microprocessor.

3-135. The local ROM U9 actually requires a total of 12 address bits. The upper four bits of U9 are static during program memory read operations; the processor outputs them directly to U9 on lines P20 to P23.

3-136. The I/O Expander U3 expands lines P20 through P23 to 16 bits. Table 3-3 shows the functions that are assigned to each pin of U3. Notice that most of the pin assignments are bidirectional (input and output data). This expanded I/O operates the multiplexed display, reads the option identification, and reads the three slide switches S1, S2, and S3. The pin labeled PROG controls the timing of U3.

3-137. The display receives its control from the output ports of U2 and U3. Non-inverting drivers U4, U5 and U7 buffer the port outputs. Resistor network U6, and resistors R4, R5, and R6 are series resistors to limit the drive current to the display LEDs.

3-138. The two D-type flip-flops of U1 operate as signal conditioners for the out-guard microprocessor. The first flip-flop (pins 1-5) is part of the external trigger circuitry. The second (pins 9-13) conditions signals arriving from the installed digital option. The IEEE-488 option uses this line

to interrupt the out-guard microprocessor. The Calculating Controller option, however, uses this line as simply another input to the out-guard microprocessor.

3-139. EXTERNAL TRIGGER CIRCUITRY

3-140. The external trigger circuit is designed to trigger from either a switch opening or a rising TTL signal. The signal passes through two stages of conditioning. One-shot U11, when triggered, eliminates switch bounce by producing a positive output pulse of approximately 40 ms. This pulse sets D-type flip-flop U1 to signal the microprocessor that a trigger has been received. The microprocessor clears the flip-flop after it detects the set condition.

3-141. Front Panel Push Buttons (Schematic 8860A-1002)

3-142. The front panel push buttons are scanned by the out-guard microprocessor at the rate of two keys every 2.5 ms (regardless of the A/D sample rate). The out-guard microprocessor interrupts whatever it is doing to perform this function. (The IEEE-488 option causes the scan rate to slow when certain bus interrupts occur. This is because data communication between the GPIA and the out-guard microprocessor has priority over the 2.5 ms scan interrupts.)

3-143. A binary sequence at the input of U1 (pins 13, 14 and 15) sets each of the eight output lines of U1 low, one at a time. In this way the sixteen keys are strobed a column at a time through diodes CR1 through CR8. The two strobed keys are read simultaneously via pins 16 and 17 of J1. A line is low (at zero volts) only if the corresponding key is depressed. Thus the entire keyboard is read over a 20 ms interval.

3-144. Display (Schematic 8860A-1002)

45. The same U1 strobe lines that scan the front panel push-buttons also strobe the eight display digits, 6 decimal points, 2 units annunciators, and 15 indicator lights. When pin 1 of U1 goes low, Q1 turns on, activating the first seven segment readout and three indicator lights. Signals applied to the cathodes of the segments determine which segments

will light. As this first column of lights is lit, all other columns (transistors Q2 through Q8 and their display lights) are turned off. The eight columns are strobed one at a time, at a rate high enough to make all digits appear to be on at the same time. A timer interrupt occurs every 2.5 ms (except with IEF1-488 Interface) to advance columns. The sequence continues in an unending loop, completing a full cycle once every 20 ms.

Table 3-3. I/O Expander (U3) Pin Assignments

PORT	U3 PIN NO.	OUTPUT FUNCTION	INPUT FUNCTION
P40	2	Send data	Test Mode 0 switch (S3)
P41	3	Send clock	
P42	—	(not used)	(not used)
P43	—	(not used)	(not used)
P50	1	ROM bank switch control	(pulled to logic 0)
P51	23	LSB	50/60 Hz switch (S2)
P52	22	middle bit	(not used)
P53	21	MSB	(not used)
P60	20	LSB	ID0 } Option Identification
P61	19	middle bit	
P62	18	MSB	
P63	17	(not used)	
P70	13	(not used)	Receive data } Guard crossing bit
P71	14	(not used)	
P72	15	(not used)	Bottom row } Front panel keyboard
P73	16	(not used)	

Section 4

Troubleshooting

4-1. INTRODUCTION

4-2. This section of the manual contains troubleshooting information for the 8860A. The information is divided into five major parts. They are:

1. General Maintenance
2. Troubleshooting Approach
3. Analog Troubleshooting
4. Digital Troubleshooting
5. Troubleshooting Aids

4-3. GENERAL MAINTENANCE

4-4. Disassembly Procedure

WARNING

TO AVOID ELECTRICAL SHOCK HAZARD, DISCONNECT LINE POWER AND ANY INPUT CONNECTIONS FROM THE 8860A BEFORE STARTING THE DISASSEMBLY PROCEDURE.

4-5. Disassemble the 8860A as follows:

1. Disconnect the 8860A from line power; remove all front (and rear) panel inputs.
2. Remove the four screws located on the bottom of the chassis, and pull the top cover straight up and off.
3. For access to the analog circuitry, remove the guard cover by unscrewing its four top screws (the guard cover is the large metal cover with adjustment holes). Both analog circuit boards can be removed by pulling them straight up.
4. Remove the Display PCB by pulling the bottom off the chassis, disconnecting the five INPUT terminal wires, and pulling the entire front panel assembly forward. The front panel and the circuit board are held together by the connector to the Controller PCB.

5. Refer to Section 8 for identification of the circuit board assemblies. Each assembly unplugs from its connector.

CAUTION

Do not contaminate the area around the INPUT terminal connections on the main PCB or the front end of the AC/DC Scaling PCB. Low level leakage can result in calibration errors.

4-6. Cleaning

4-7. To clean the front panel and exterior surfaces of the 8860A, use a soft cloth dampened with either a mild solution of detergent and water or anhydrous ethyl alcohol.

CAUTION

Do not get water on the transformer. The transformer will absorb the water and eventually fail. Use special care when cleaning the fragile hybrid assemblies; they are easily damaged.

CAUTION

If fluorocarbons or other solvents are used to clean the pcbs, keep it off switches and potentiometers. Solvents will remove the lubricants from these components and shorten service life.

4-8. To clean the interior of the unit, use clean, dry air at low pressure (<20 psi). If contaminants remain, clean the individual pcbs using warm water. The AC/DC Scaling and the A/D and Ohms PCBs may be safely washed with all components intact; the Main PCB requires special handling.

4-9. The Main PCB may also be cleaned using warm water. However, in doing so do not get the armature relays or the transformer wet. The recommended approach is to cover the transformer and remove the armature relays

during the washing process. Remove relays K1, K3, and K4 by unplugging them from the pcb; do not remove the reed relay.

4-10. After washing the pcbs, remove excess water using clean dry air at low pressure. Dry the pcbs in an oven at a temperature of 50° C or less.

4-11. Fuse Replacement

WARNING

TO AVOID ELECTRICAL SHOCK HAZARD, DISCONNECT THE POWER CORD BEFORE SERVICING THE FUSE. AC LINE VOLTAGE IS PRESENT WHEN THE POWER CORD IS CONNECTED.

4-12. The power fuse (F1) is accessible from the rear panel. Replace the fuse, if necessary, with an MDL (slow-blow) ¼-ampere fuse with a voltage rating (125V or 250V ac) exceeding the line voltage.

4-13. Static Awareness

4-14. Whenever troubleshooting, follow procedures outlined on the yellow Static Awareness sheet located in this manual. These procedures are intended to prevent damage to MOS devices due to static charge.

4-15. Pin Numbering

4-16. Note that pin 1 of each integrated circuit is identified by a square solder pad on the circuit board. Connector pins are numbered as shown in Section 8, in the figure labeled Interconnection of Assemblies.

4-17. Extender Cards

4-18. The following extender cards are available for troubleshooting the 8860A plug-in pcb assemblies. The extenders may be used during troubleshooting and functional testing. However, all extenders must be removed during the performance test and the calibration procedure. Order by model number.

EXTENDER BOARD	MODEL NUMBER
A/D and Ohms Converter PCB	8860A-4007
AC/DC Scaling PCB	8860A-4008
Calculating Controller (-004) and IEEE-488 Interface (-005)	8860A-4009

4-19. TROUBLESHOOTING APPROACH

4-20. Figure 4-1 shows the recommended approach for troubleshooting the 8860A. When the instrument fails to perform as expected, use Table 4-1 to identify the fault as analog, digital, or power supply related. Then proceed to the analog or digital troubleshooting procedures. If additional circuit details are required after the fault area is located, refer to the theory of operation in Section 3 and the schematic diagrams in Section 8.

4-21. POWER SUPPLY CHECK

4-22. Table 4-2 lists the basic power supply voltages, their test points and tolerances, and the circuits they supply. Test point locations are shown in Figure 4-2. Check each of the power supply voltages using the following procedures:

1. In-Guard Supply

Connect the common lead of a DMM to In-Guard Common. Measure each of the three in-guard voltages (+5V, +15V, -15V). Each supply voltage should be within the tolerance indicated in Table 4-2.

2. Out-Guard Supply

Connect the common lead of the DMM to Out-Guard Common. Measure the outguard +5V supply. It should measure within the tolerance indicated in Table 4-2.

NOTE

By clipping jumper wires, you can remove the ±15 volt supply to the RMS-to-DC Converter (wires W3 and W4) and Ohms Converter (wires W10 and W11). This should only be done to help locate a fault which is overloading the ±15 volt supplies.

4-23. ANALOG TROUBLESHOOTING

4-24. A list of test points for troubleshooting the analog section of the 8860A is shown in Table 4-3. Verify the overall operation of the analog section by confirming the presence of these voltages. If a voltage is incorrect, make a detailed check of the indicated circuit location or section. Procedures for troubleshooting the individual analog sections are given in the following paragraphs. The sections are covered in the following order:

- AC/DC Scaling
- RMS-to-DC Converter
- Ohms Converter
- Precision Voltage Reference
- A/D Converter

NOTE

The A/D & Ohms board can be operated with the AC/DC Scaling board removed; however, the reverse is not true. DO NOT TRY TO OPERATE THE AC/DC SCALING BOARD WITH THE A/D & OHMS BOARD REMOVED. (The AC/DC Scaling ground connections are made on the A/D & Ohms board.)

4-25. AC/DC Scaling

4-26. The following procedures assume that the signal path from the front panel INPUT terminals to the AC/DC Scaling PCB has been checked and is operating properly. The AC/DC Scaling Extender Card is necessary for the following procedures.

4-27. The AC/DC Scaling circuitry is functionally divided into two parts, the Front End and the Amplifier Section.

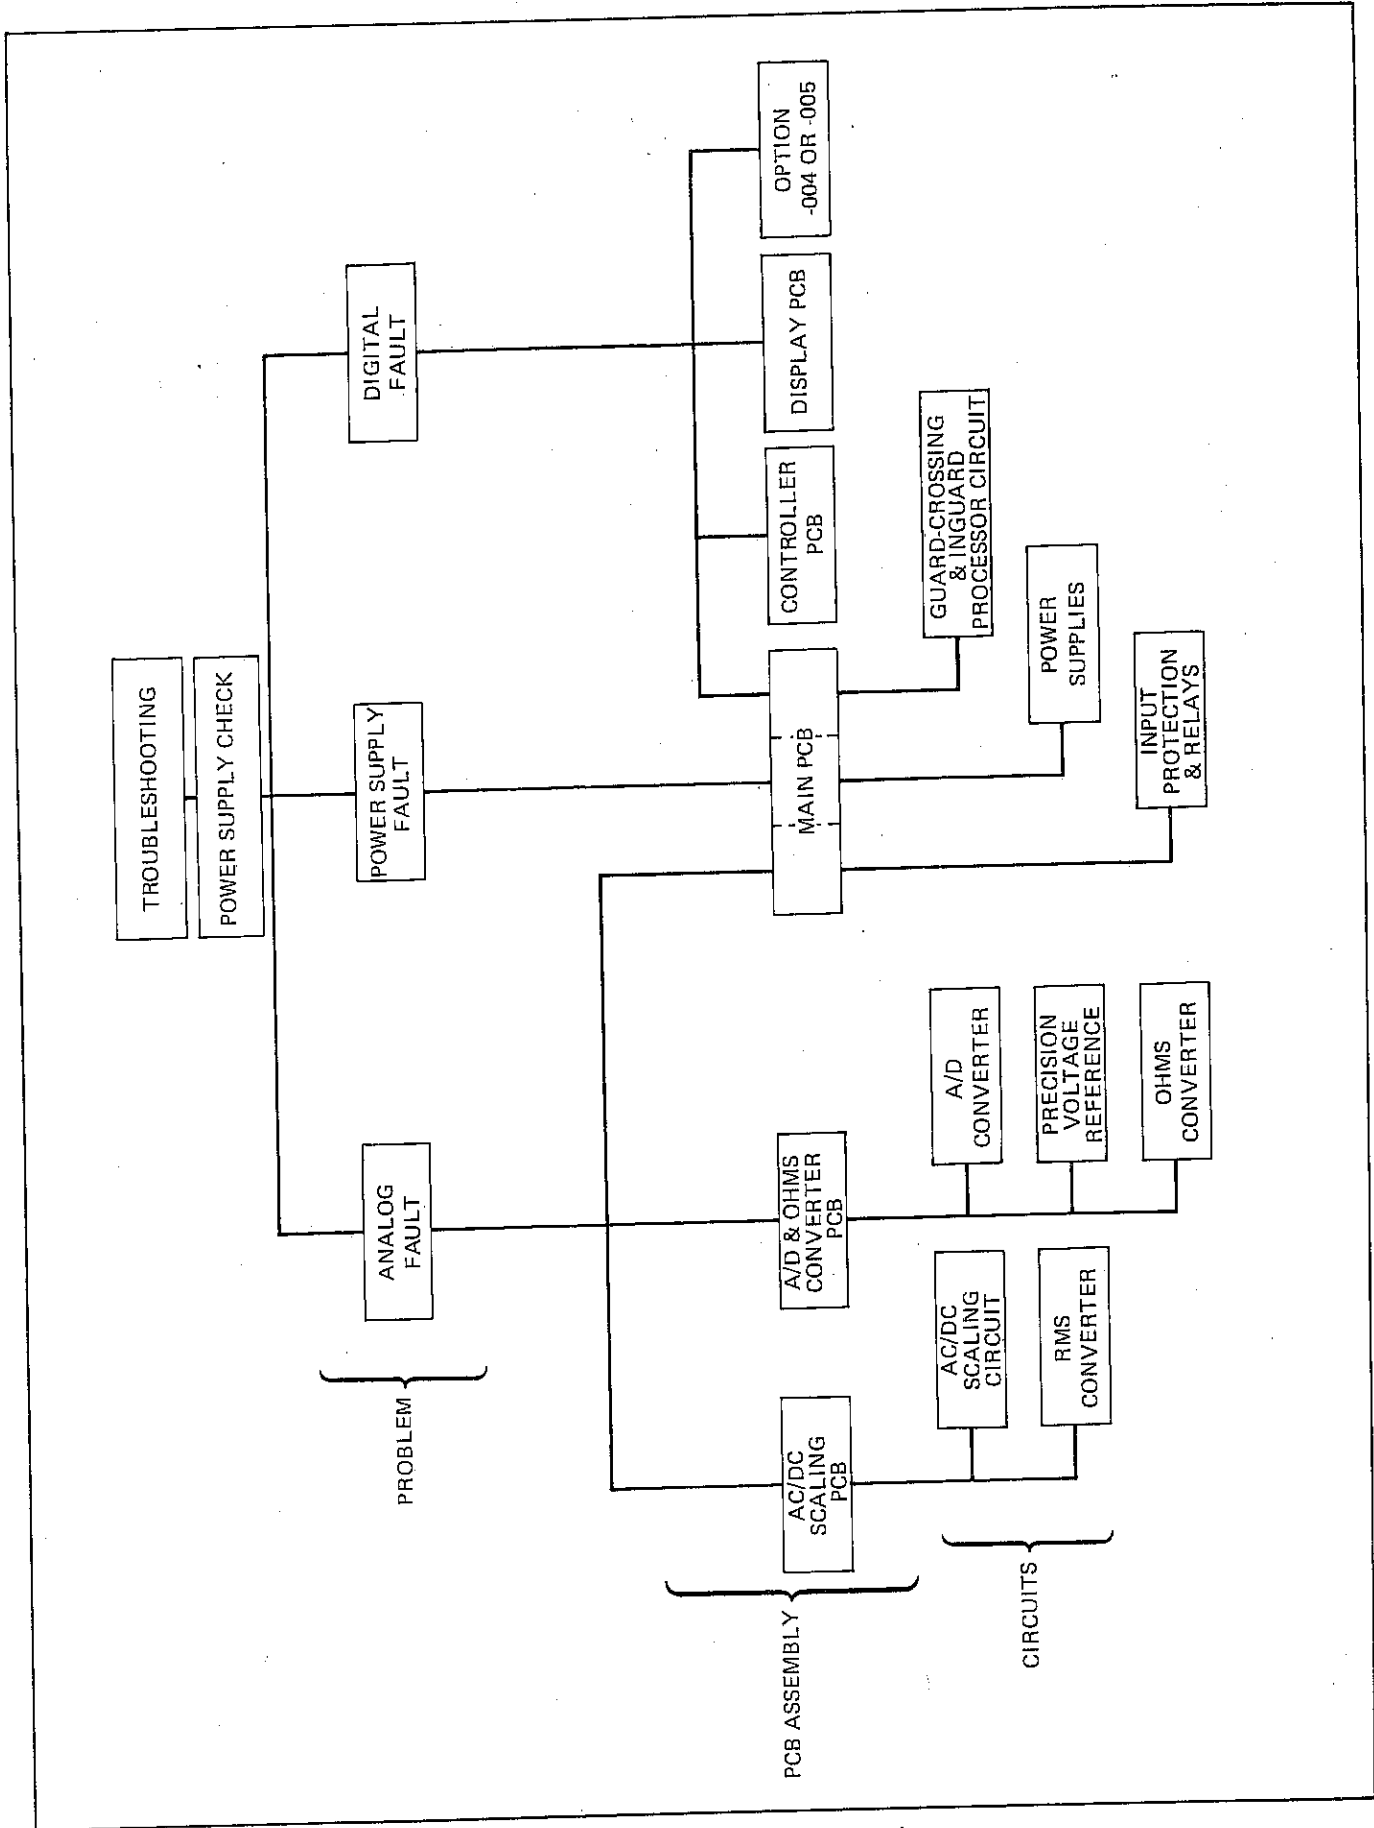


Figure 4-1. Troubleshooting Approach

Table 4-1. Distinguishing Analog and Digital Faults at Front Panel

ANALOG FAULT

An analog fault exists if a measurement reading is incorrect, but the following functions operate correctly:

- ✓ Front panel indicator lights respond properly when a measurement function is selected (e.g., switch from VDC to VAC to Ω 2T).
- ✓ Decimal point is positioned correctly in response to a range change.
- ✓ Annunciators (mV, V, Ω , k Ω , M Ω) light up properly for each function and range.
- A number can be stored and recalled from the High, Low, or Offset registers.

Analog faults are located inside the guard on one of three pcbs:

- Main PCB Assembly
- AC/DC Scaling PCB Assembly
- A/D and Ohms Converter PCB Assembly

DIGITAL FAULT

A digital fault usually exhibits at least one of the following symptoms:

- Display appears faulty; reading does not change or display segments do not light.
- One digit is bright, others are off.
- All display and indicator lights are off.
- Instrument fails to respond to a front panel push button.

Digital faults are located on one of four PCB Assemblies:

- Controller PCB Assembly
- Display PCB Assembly
- Main PCB Assembly
- Option -004 or -005 PCB Assemblies

1. The Front End includes:
 - a. Input Divider U1 and associated capacitors
 - b. Voltage clamp circuit
 - c. JFET switches, including A1
 - d. Active Filter U3
2. The amplifier section includes:
 - a. Dual JFET Q17 and amplifier U14
 - b. Bootstrap Amplifiers Q16 (with U5), U6A, and U6B

4-28. Proper waveforms for the AC/DC Scaling board are shown in Figure 4-3, for a +1V dc input, VDC. These signals are referred to in Table 4-4, which lists typical fault symptoms for the AC/DC Scaling PCB. When troubleshooting frequency response problems, voltage test measurements can load the front end circuitry. To avoid circuit loading, measure front end voltages only at the specified test points. Voltages below 2V rms may be injected at various points in the front end (e.g., A1-17, A1-6, A1-9) and measured at appropriate test points.

4-29. Excessive leakage current in the front end JFETs can be pinpointed using the following guidelines:

1. Leakage in a JFET adversely affects a circuit only when the JFET is off (not conducting).
2. The leakage path may be from drain to source, preventing a fully off condition, or from gate to source.
3. Identify and inspect those JFETs that are off when leakage symptom is present. For example, if a dc offset disappears when the filter is enabled (Q11 on), then Q11 is probably defective.

4-30. RMS-to-DC Converter

4-31. Table 4-5 lists some general fault symptoms and corrections for the RMS Converter. Detailed procedures which may be used to check various functional aspects of the RMS Converter are given in the following paragraphs. The first procedure checks the VAC+VDC function. The second checks the VAC function. If a fault is identified, investigate the components that precede the test point location.

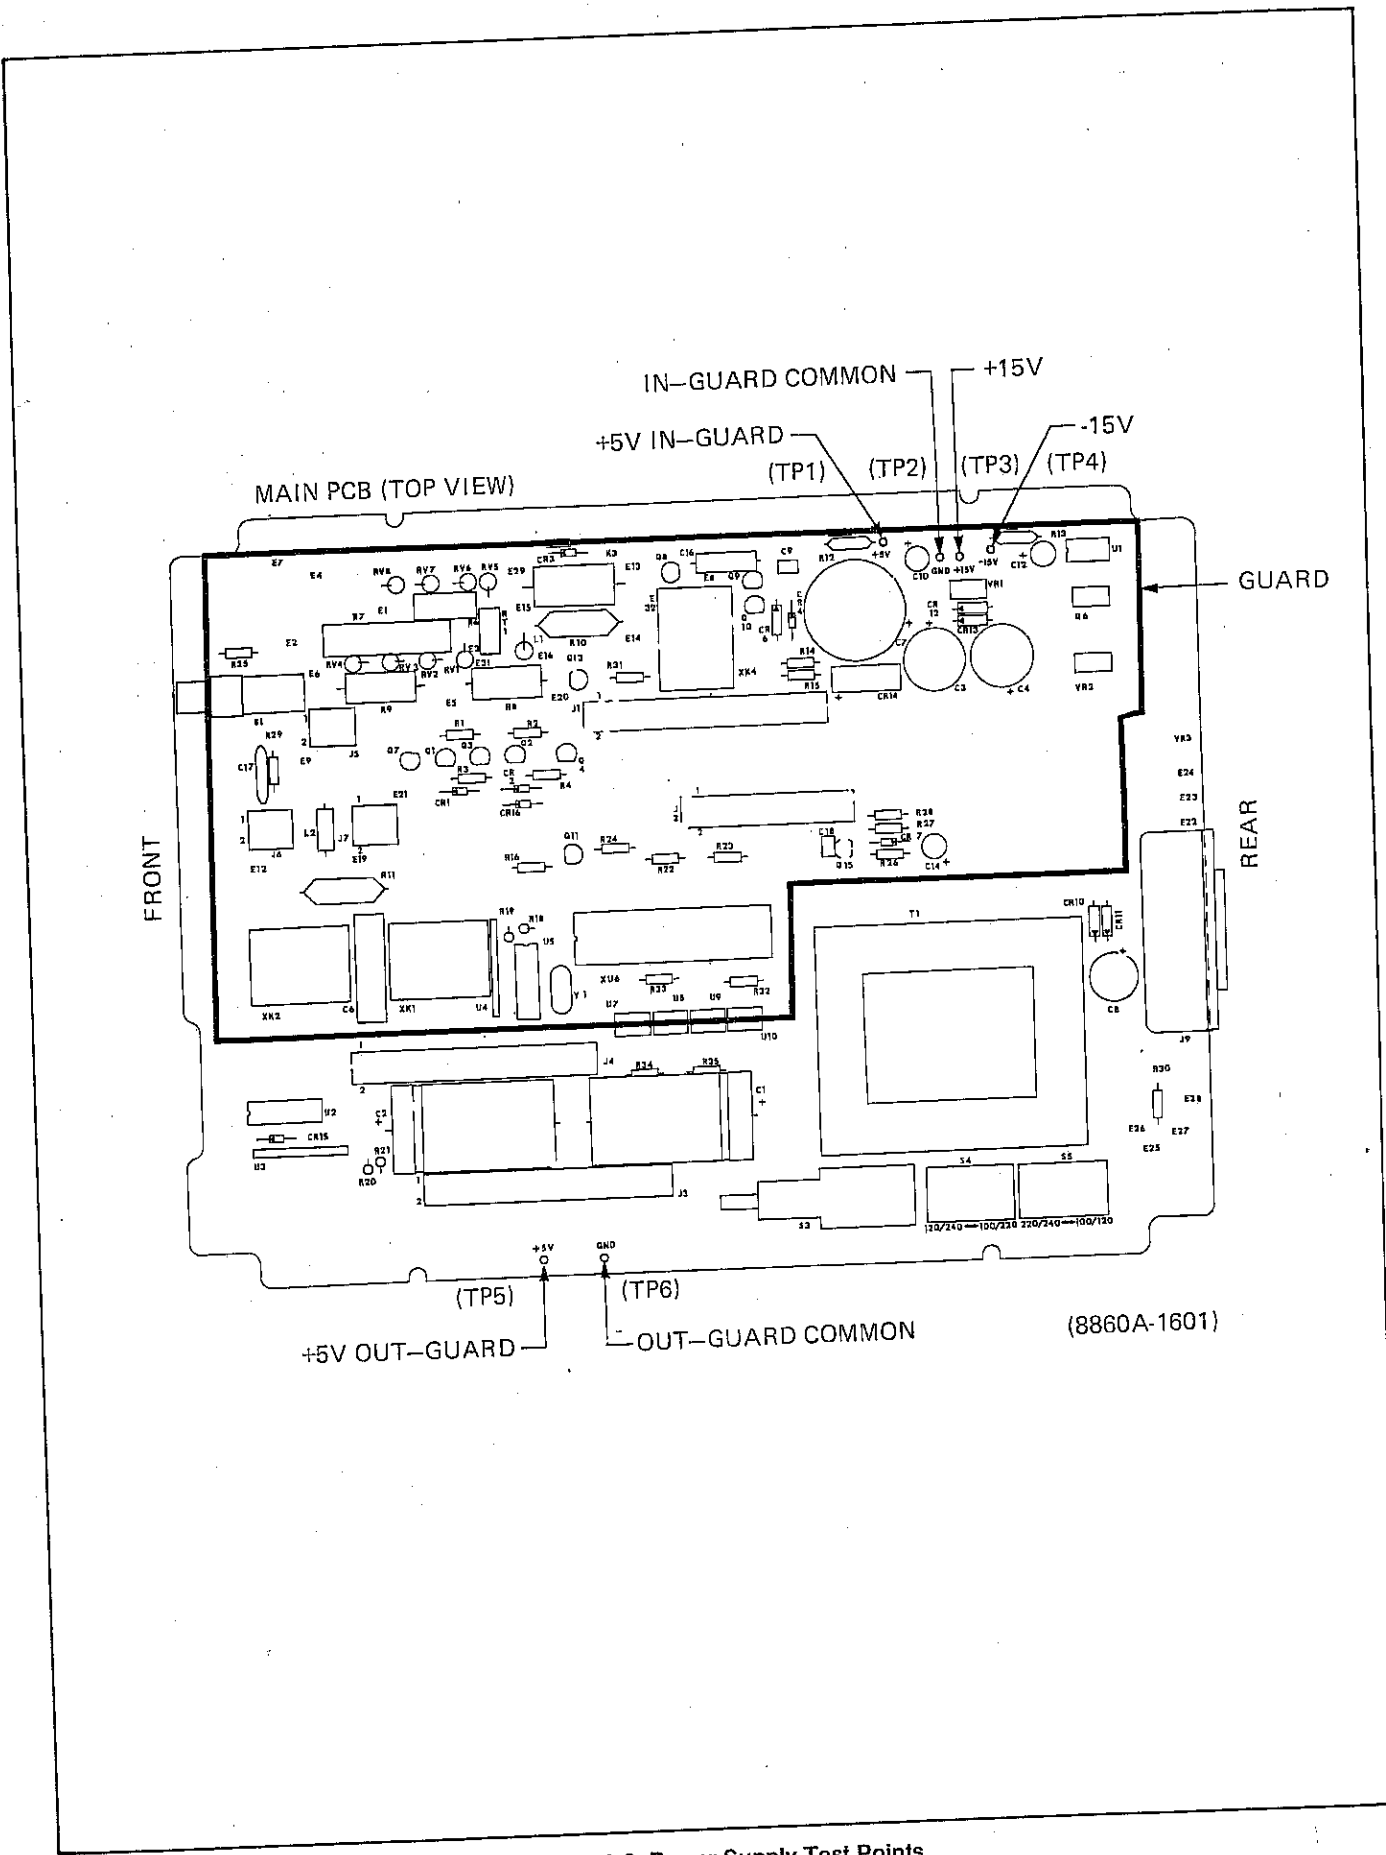


Figure 4-2. Power Supply Test Points

Table 4-2. Power Supply Assignments
(Troubleshooting Section, Power Supply)

POWER SUPPLY	TEST POINTS	TOLERANCE	SUPPLIES ONLY THE FOLLOWING CIRCUITRY
In-guard +15V -15V (relative to inguard common, TP2)	TP3 TP4	14.25V to 15.75V -14.25V to -15.75V	On the AC/DC Scaling PCB (A4): all circuitry except comparator reference level (R40, R41) On the A/D & Ohms PCB (A5): all circuitry except U21 and comparator reference level (U20)
In-guard +5V (relative to inguard common, TP2)	TP1	4.7V to 5.3V	On the Main PCB (A1): -15V supply (U1) in-guard processor (U6) opto-isolator circuitry (U5) relay coils (K1-K4) On the AC/DC Scaling PCB (A4): comparator reference level (R40, R41) On the A/D & Ohms PCB (A5): binary to 1-of-4 decoder (U21) comparator reference levels (U20)
Out-guard +5V (relative to outguard common, TP6)	TP5	4.7V to 5.3V	On the Main PCB (A1): opto-isolator circuitry (U2) The entire Display PCB (A2) The entire Controller PCB (A3), which includes: outguard processor local ROM external-trigger one-shot associated latches, flip-flops, and drivers The entire Calculating Controller Option (-004) The entire IEEE-488 Interface Option (-005)
Note: The test points are labeled on the schematic, but not on the circuit board itself.			

4-32. This procedure functionally checks the RMS Converter by tracing a dc signal through the converter while the dc-coupled VAC+VDC function is enabled. Set the 8860A to the VAC+VDC function and the 2V range.

1. Apply +1.000V dc between the HI and LO INPUT terminals of the 8860A.
2. Using the test DMM, measure TP5 on the AC/DC Scaling PCB. The measurement should be within 10 mV of the input value.
3. Move the DMM input to test point E2, the input to the RMS Converter. The voltage measured should be the same as that at TP5.
4. Measure the voltage at TP3, the output of U8. It should measure approximately -1.6V.
5. Reverse the polarity of the input signal and measure the voltage at TP3 again. It should

measure approximately +1.6V. If tests 4 and 5 fail, U8, U15, CR6, or CR7 may be at fault.

6. Measure the voltage at TP2. It should be 0V \pm 20mV.
7. Measure the voltage at TP1. It should be -1.2V \pm 0.1V.
8. Measure the voltage at U19A-1. It should be +5.0V \pm 25mV.
9. Measure the voltage at E3. It should be +1.0V \pm 5mV. An offset may be present since auto-zero is not functional for VAC+VDC measurements.

4-33. This procedure functionally checks the RMS Converter by tracing an ac signal through the converter while the VAC function is enabled. Set the 8860A to the VAC function and the 2V range.

Table 4-3. Quick Check to Locate Faulty Analog Circuit

TEST POINTS ON THE MAIN PCB			
Use these test points to check the signal path from the front panel input terminals, through the input relays, to the AC/DC Scaling PCB:			
TEST POINT	LOCATION	TEST POINT VOLTAGE UNDER THESE CONDITIONS:	
		1V DC INPUT, VAC+VDC, 2V RANGE	1V rms @ 300 Hz INPUT, VAC, 2V RANGE
E2	Junction of W6 and R7	1V dc	—
E19	Junction of W11 and L2 (checks K1)	1V dc	—
E29	Junction of K3 and W12 (checks K3)	1V dc	—
E19	Checks K2	—	1V rms
TEST POINTS ON THE AC/DC SCALING PCB			
TEST POINT	LOCATION	TEST POINT VOLTAGE UNDER THESE CONDITIONS:	
		10V DC INPUT, VDC, 20V RANGE TRIG ARM ENABLED	10V DC INPUT, VAC+VDC, 20V RANGE, TRIG ARM DISABLED
TP8	AC/DC Scaling (output of JFET bias amplifier)	100 mV dc +/-25 mV*	100 mV dc +/-25 mV*
TP5	AC/DC Scaling (Output of scaling amplifier)	0V dc +/-10 mV*	1V dc +/-10 mV*
TP2	RMS Converter (U16 inverting input)	0V dc +/-20 mV*	0V dc +/-20 mV*
TP3	RMS Converter (Output of absolute value converter)	0V dc +/-500 mV* (Will be very noisy)	Approx. -1.6V dc
TP1	RMS Converter (Output of 2X log amplifier)	—	Approx. -1.2V dc
E3	RMS Converter (Output of RMS Converter)	0V dc +/-5 mV	1V dc +/-5 mV*
*These are dc offset voltages; the tolerances are approximate. Steady, noise free readings are more important than accuracy.			

Table 4-3. Quick Check to Locate Faulty Analog Circuit (cont.)

TEST POINTS ON THE A/D & OHMS CONVERTER PCB					
TEST POINT	LOCATION	TEST POINT VOLTAGE ACCORDING TO RANGE WITH THE INPUT TERMINALS SHORTED			
		200Ω/ 2 kΩ	20 kΩ	200 kΩ/ 2 MΩ	20 MΩ
U1-10	Ohms Converter	8.6V to 9.7V	7.1V to 7.3V	6.95V to 7.05V	0.69V to 0.71V
TP9	Ohms Converter	7.00V below the reading at U1-10			
U10-2	Precision Reference	-0.99980V to -1.00000V dc			
U10-3	Precision Reference	-6.478V to -6.482V dc			
Enable the TRIG ARM function before measuring the following test points:					
TP11	A/D Converter	0Vdc +/-50 mV			
TP12	A/D Converter	0V dc +/-50 mV			
TP13	A/D Converter	0V dc +/-50 mV			
Turn the 8860A power off, and remove the AC/DC Scaling PCB. Turn the power back on, and select the VAC function, 2V range. Temporarily connect A2-7 (A/D input) to U10-2 (-1 volt reference) with a clip-lead wire. The display reading should be a value from .99960 to 1.00020. Reinstall the AC/DC Scaling PCB after this test.					

- Apply a 1V, 100 Hz sine wave to the 8860A HI and LO INPUT terminals. Using a scope, monitor TP5 on the AC/DC Scaling PCB. The ac input should appear as a clean, undistorted sine wave.
- Move the scope probe to TP3 of the absolute value converter. The signal should appear as in Figure 3-4 (TP3).
- Move the scope probe to TP1 of the 2X Log Amplifier. The signal should appear as in Figure 3-4 (TP1). The waveform should be free of oscillations and noise. Waveform symmetry is not critical. If the waveform is not correct the problem is in the 2X log amplifier, the log feedback amplifier, or the antilog amplifier.
- Using the DMM, measure the dc output voltage of the RMS-to-DC converter at E3. It should measure +1V dc with an applied input of 1V rms ac.
- Measure the voltage at TP2. It should be 0 ± 0.01 mV dc.
- Using a scope, check TP3 to see that R46 can provide adjustment on either side of zero. If the adjustment is not possible, U15 or the 2X log amplifier may be at fault.

4-35. Ohms Converter

4-36. If the voltage at point U1-10 is outside the values given in Figure 4-3 the Ohms Converter is at fault. To isolate the fault, temporarily disable the feedback loop by connecting a short across R4 with a clip lead. Then check the operational amplifier by placing a short across the 8860A INPUT terminals, selecting Ω 2T function and 2 MΩ range, and shorting TP9 on the Ohms Converter to (E5). In this configuration, pins 26 and 29 of hybrid A1 should measure within 10 mV of each other (at approximately +12.75V dc). Also, the voltage at U4-6 should be within 7 mV of TP9.

NOTE

Disconnect the jumper from TP9 and E5 before continuing.

4-37. The reference current can be tested by checking the voltage between TP9 and the cathode of CR1 while the 8860A is on the 2 KΩ range. The voltage should be 7.00V dc. (The short across R4 may be left in place.) JFETs Q8

4-34. The following tests should be performed if the RMS-to-DC Converter is functional but will not calibrate properly:

- Short the 8860A input terminals. Select VAC function, 20V range.
- Measure the voltage at TP5. It should be 0 ± 0.01 mV dc.

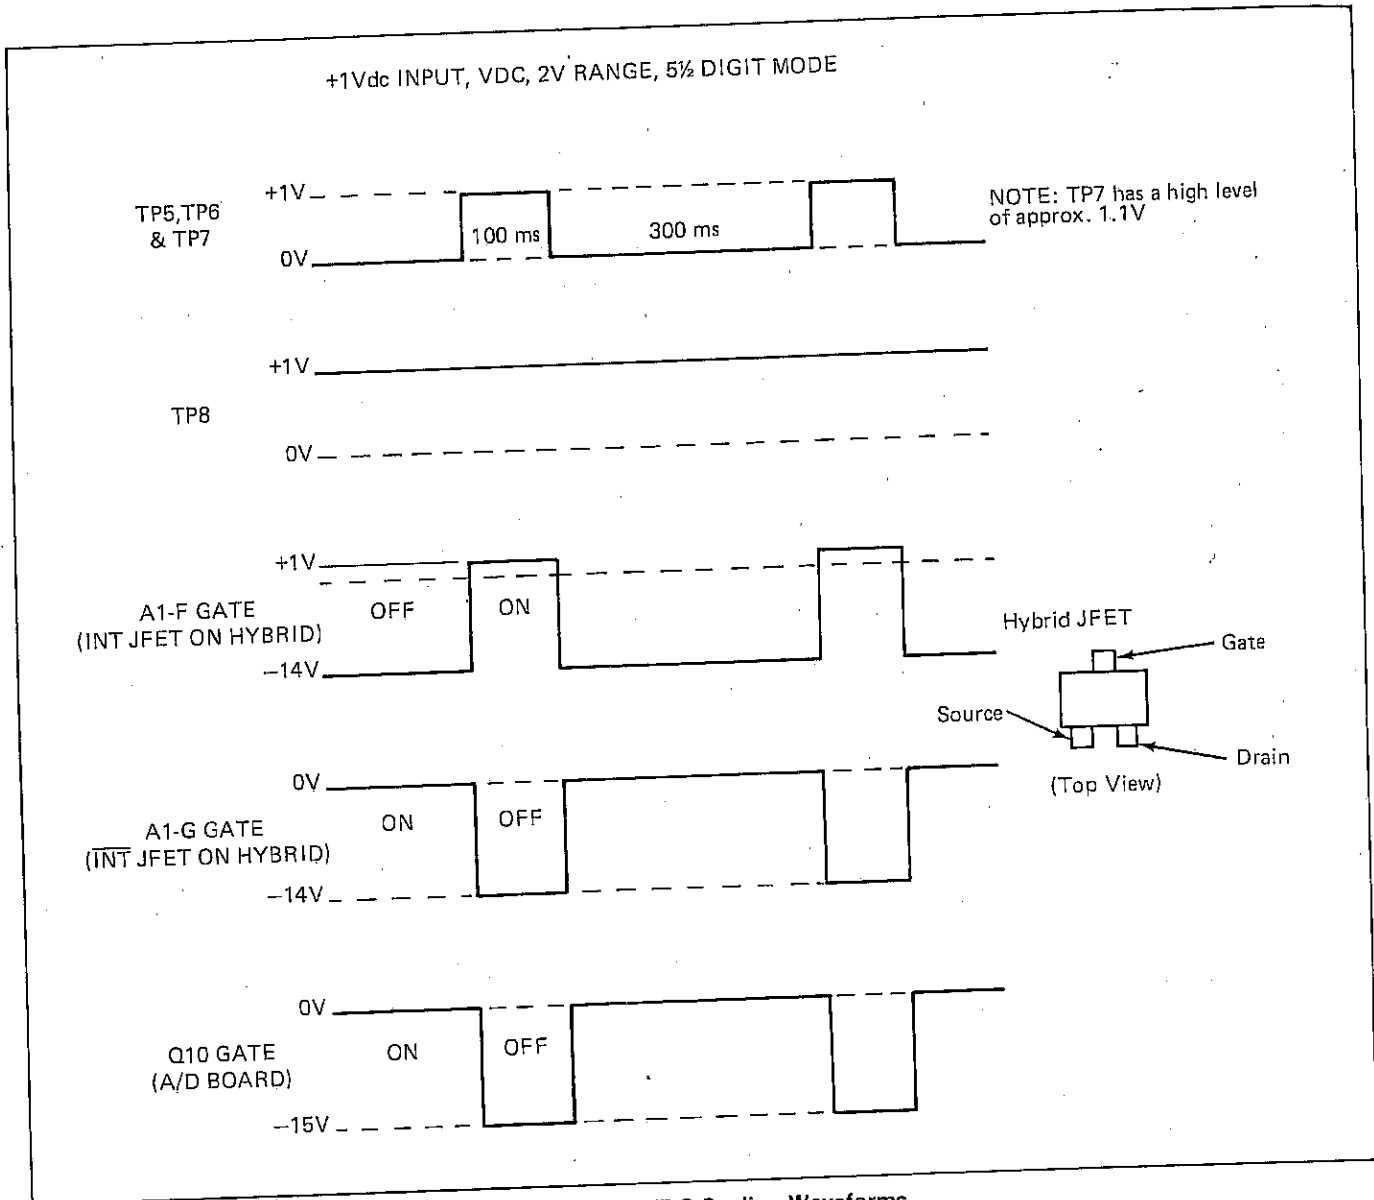


Figure 4-3. AC/DC Scaling Waveforms

and Q9 on the Main PCB are important for leakage control as well as protection. If either JFET leaks excessively, readings on the high-resistance ranges will drift during warm-up.

4-38. If the Ohms Converter malfunctions only on certain ranges, then the output voltages from U6 and U7 should be checked. Use the switch state table shown with the Ohms Converter schematic in Section 8.

4-39. The voltages across the U1 resistors 7.017, 70.71, and 778.9 kilohms should be 7.00V dc when the associated range is selected, and 0.00V dc otherwise. Each resistor can be checked in-circuit for the correct resistance value with an ohmmeter when either the 2M Ω or 20 M Ω range is selected. Isolation between pins 9, 12, and 16 on A1 can also be measured with either the 2 M Ω or 20 M Ω range selected. For example, the resistance between pins 12 and 16 of A1 should be approximately 77.8 kilohms, which is the series value of R3, 70.71 kilohms and 7.017 kilohms.

4-40. Precision Voltage Reference

4-41. Voltage readings at pins 1, 2 and 3 of resistor network U10 should be within the following limits. Refer to the theory of operation (Precision Voltage Reference) in Section 3 for help in troubleshooting the voltage reference.

- | | | |
|----|--------|-------------------------|
| 1. | U10-1: | 0.0V |
| 2. | U10-2: | -1.0V \pm 100 μ V |
| 3. | U10-3: | -6.48V \pm 1 mV |

4-42. The reference amplifier U22, and resistors R41 and R42 must be replaced as a set if U22 is faulty. After U22 is replaced, perform the jumper selection procedure given at the end of this section under Post Repair Procedures.

4-43. A/D Converter

4-44. Troubleshooting information for the A/D Converter is presented in four parts. First, a list of possible problems and symptoms is given in Table 4-6. This is followed by a functional check of the A/D Converter with

Table 4-4. Typical Symptoms of AC/DC Scaling Faults

SYMPTOMS	INSTRUCTIONS OR COMMENTS
<p>DC PROBLEMS</p> <ol style="list-style-type: none"> 1. Input bias current at front panel terminals exceeds 100 pA* 2. Downscale performance in VDC, 200 mV and 20V ranges is out of specification 3. Downscale, low frequency signals read too high on 200 mV range of VAC but not in VAC+VDC (see following note) 	<p>Symptom may indicate excessive leakage current in a JFET (dual JFETs Q16 and Q17 are usually not at fault). If the faulty JFET is localized to hybrid A1, replace the entire hybrid assembly. Otherwise, replace discrete JFETs one at a time until the fault clear. Use the guidelines mentioned in the preceding paragraph to identify leaking FETs.</p>
<p style="text-align: center;">NOTE</p> <p>In VAC and VAC+VDC, the display will indicate a reading (typically less than 400 counts in the 200 mV range) even when the input is shorted. This reading will not affect the rated accuracy over the specified input range and does not indicate a fault condition.</p>	
<p>4. VDC function inoperative, VAC operative</p> <p>AC PROBLEMS</p> <ol style="list-style-type: none"> 1. Excessive peaking of frequency response on the 20, 200, or 700 VAC ranges 2. Poor frequency response on the 200 mV or 2V range, VAC 	<p>Check for the presence of the waveforms shown in Figure 4-3. Check operation of the INT, $\overline{\text{INT}}$, or A1-D JFETs.</p> <p>Check the voltage at TP8. If it exhibits peaking, then the fault is ahead of the scaling amplifier in the front end. Check both Q6 on the AC/DC Scaling PCB and Q13 on the Main PCB.</p> <p>Check R10, R11, C8, and the JFET switches in the front end. Check U6B and C17, and the voltage at TP7; it should be approximately 2 X Vin. Check the ON resistance of Q12 and Q18. It should be less than 30 ohms.</p>
<p>*To measure input bias current, select VDC and the 200 mV range, short the input terminals and note the display reading. Remove the short and replace it with a 1 megohm resistor in parallel with 0.1 uF capacitor. Note the new reading. A large difference between readings indicates a large input bias current. Calculate the bias current by dividing the difference between voltage readings by 1 megohm. For example, a 100 uV difference corresponds to a 100 pA input bias current</p>	

autozero enabled. Next, timing diagrams and waveforms are given for a properly operating A/D Converter. Finally, a few useful troubleshooting tips are given.

4-45. INITIAL A/D CHECK IN AUTOZERO

4-46. Enable the autozero mode by pressing FCN, then TRIG ARM on the front panel, or by changing the setting of switch S3, as shown in Figure 4-6. Measure the voltages at TP11, 10, and 12. If they are within the following limits, autozero is working.

1. TP11 should read $0V \pm 25$ mV dc.
2. TP10 should read $0V \pm 10$ mV dc.
3. TP12 should read $0V \pm 10$ mV dc; its ac-coupled rms voltage should be less than 1 mV ac.

4-47. A/D TIMING DIAGRAM

4-48. A timing diagram for the switching JFETs in the A/D Converter is shown in Figure 4-4.

4-49. A/D WAVEFORMS

4-50. The waveforms for a functional A/D Converter are shown in Figure 4-5. These waveforms occur when the 8860A is operating in the continuous mode rather than locked into the autozero mode.

4-51. With +1V dc applied to the 8860A INPUT terminals, the waveform at TP11 should appear as shown in Figure 4-5. There should be no droop or rise in voltage during the INT (integrate) or DE (discharge) periods. Droop can be caused by either a leaky or shorted JFET or

Table 4-5. Typical Symptoms of RMS Converter Faults

SYMPTOMS	INSTRUCTIONS OR COMMENTS
<ol style="list-style-type: none"> 1. RMS Converter does not respond 2. RMS Converter is functional, but the reading is noisy. 3. Poor downscale performance on all ranges. 	<p>Check voltages at TP3 and TP1 as described earlier in this section under RMS-to-DC Converter. If the voltages at TP3 are incorrect, the problem is usually in the absolute value circuitry. If TP1 is incorrect, the problem is probably in the 2X log amplifier, the log feedback amplifier or the anti-log amplifier. If U17 or U20 require changing, jumpers W5 through W8 need to be reconfigured. Refer to the Post Repair Procedures at the end of this section for the jumper replacement procedures.</p> <p>U15 may be defective. Also check U16, U8 and the logging arrays (U17 and U20).</p> <p>Check calibration adjustments for TP5 (R27), RMS Zero (R46), RMS offset (R54), or R73. Also check U15 and U19.</p>

Table 4-6. Typical Symptoms of A/D Converter Faults

SYMPTOM	POSSIBLE CAUSE
<ol style="list-style-type: none"> 1. Incorrect Scale Factor 2. Nonlinear Response 3. Persistent Overrange Indication 4. Unstable (Noisy) Reading 5. Excessive Offset 6. Full Scale Reading Not Possible 	<ul style="list-style-type: none"> • Precision reference malfunction. • Q10 faulty or has drive signal missing. • One or more JFETs on the A2 hybrid are faulty. • AZ2 or Delta-2 operation is faulty. • Precision reference malfunction. • Integrator, slope amplifier, or A/D comparator malfunction. • Faulty op amps or JFETs within the autozero loop. C7 may also be defective. • Faulty JFETs in the autozero loop, or drive signals missing. • Q8 or Q9 faulty, or their drive signals are absent. • Offset is not properly adjusted. • Integrator malfunction or faulty operation of Q4.

by a defective JFET driver (U15-U17). The figure also shows the correct response to a +1 mV dc and a +1.9V dc input. Notice that the DE width varies in proportion to the magnitude of the input signal.

4-52. The waveform shown in Figure 4-5 for the junction of C7 and Q5 is the signal that should appear at the integrator summing junction with inrange and overrange inputs. Improper response to overrange inputs suggests a malfunction during AZ2, particularly of Q4 or its driver.

4-53. The waveforms shown for the junction of R47 and Q5 give a quick check of JFET Q5 and transistor Q12. The pulses occur during the two Delta-2 periods.


4-54. The two TP10 waveforms of Figure 4-5 show the normal signal at the integrator output for inputs of +1V dc

and overrange. Note during overrange that the voltage returns very rapidly to zero during the AZ2 period.

4-55. The two TP12 waveforms of Figure 4-5 show the signal that should be present at TP12 for +1V dc and 0.0V dc (shorted) inputs. Voltage limiting is caused by diodes CR5, 6, 8, and 9. When the input voltage is zero, one of two waveforms is present at TP12, depending on the sign of the display (+0.0 or -0.0). The voltage at TP12 should not change more than 3 mV during the integrate period.

4-56. A/D TROUBLESHOOTING TIPS

4-57. Signal paths ahead of the A/D Converter can be bypassed by removing the AC/DC Scaling board and applying dc test voltages to A2-3 for VDC and A2-7 for VAC. When VAC is selected, no polarity sign appears.

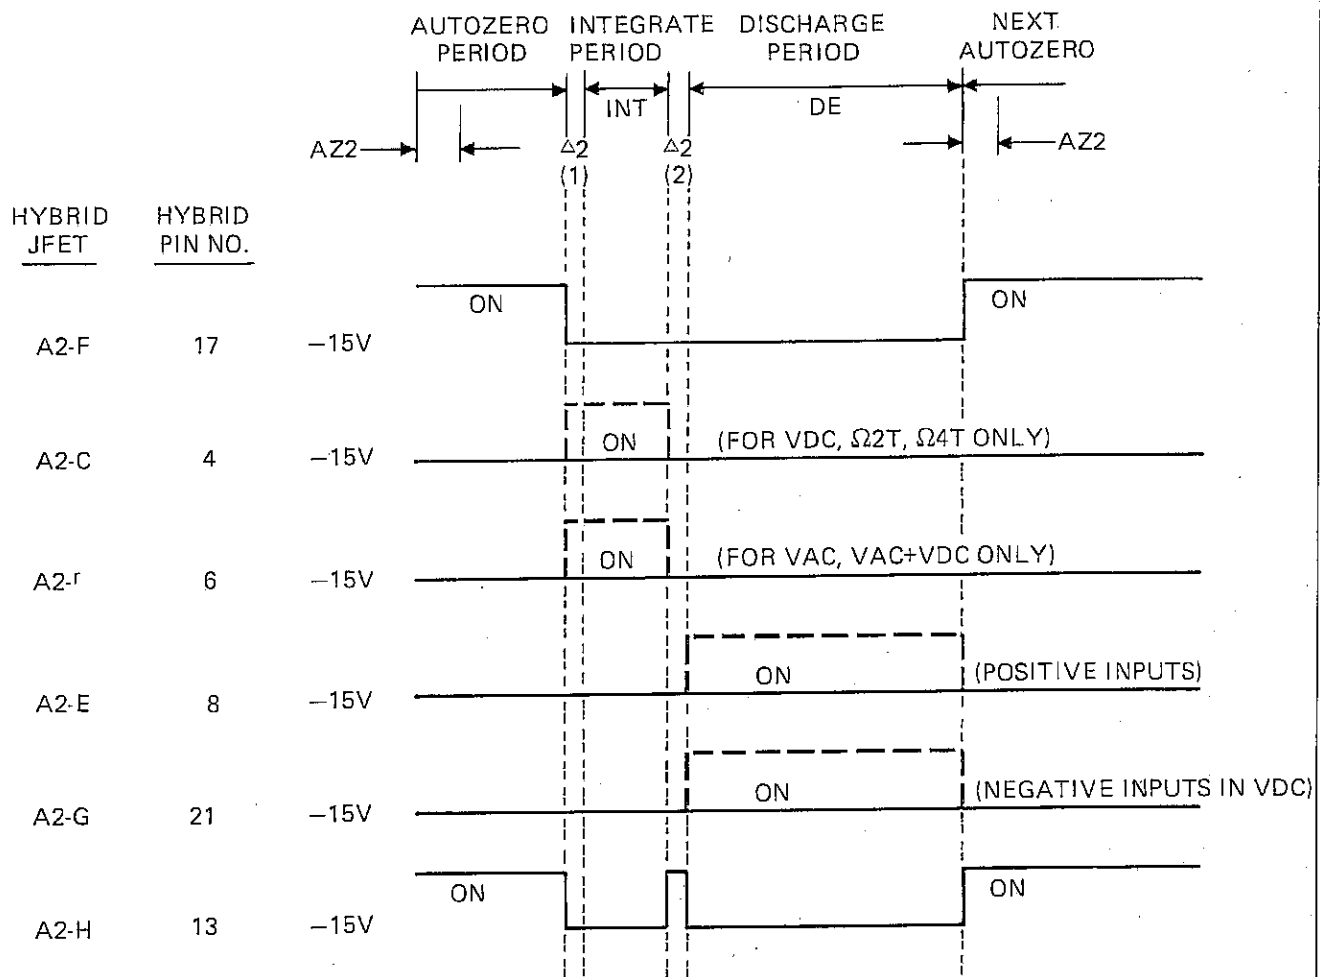

NOTE:

1. Each JFET timing diagram represents the gate voltage. In the high state the gate is pulled up to the same voltage as the JFET channel.
2. The transitions with dashed lines are conditional as indicated.
3. Hybrid JFET A2-A is ON and stays ON as long as EXT. REF. is selected.
Hybrid JFET A2-B is ON and stays ON as long as EXT. REF. is not selected
4. The lengths of the $\Delta 2$ periods are exaggerated for clarity.

Figure 4-4. Timing Diagram for A/D Converter JFETs

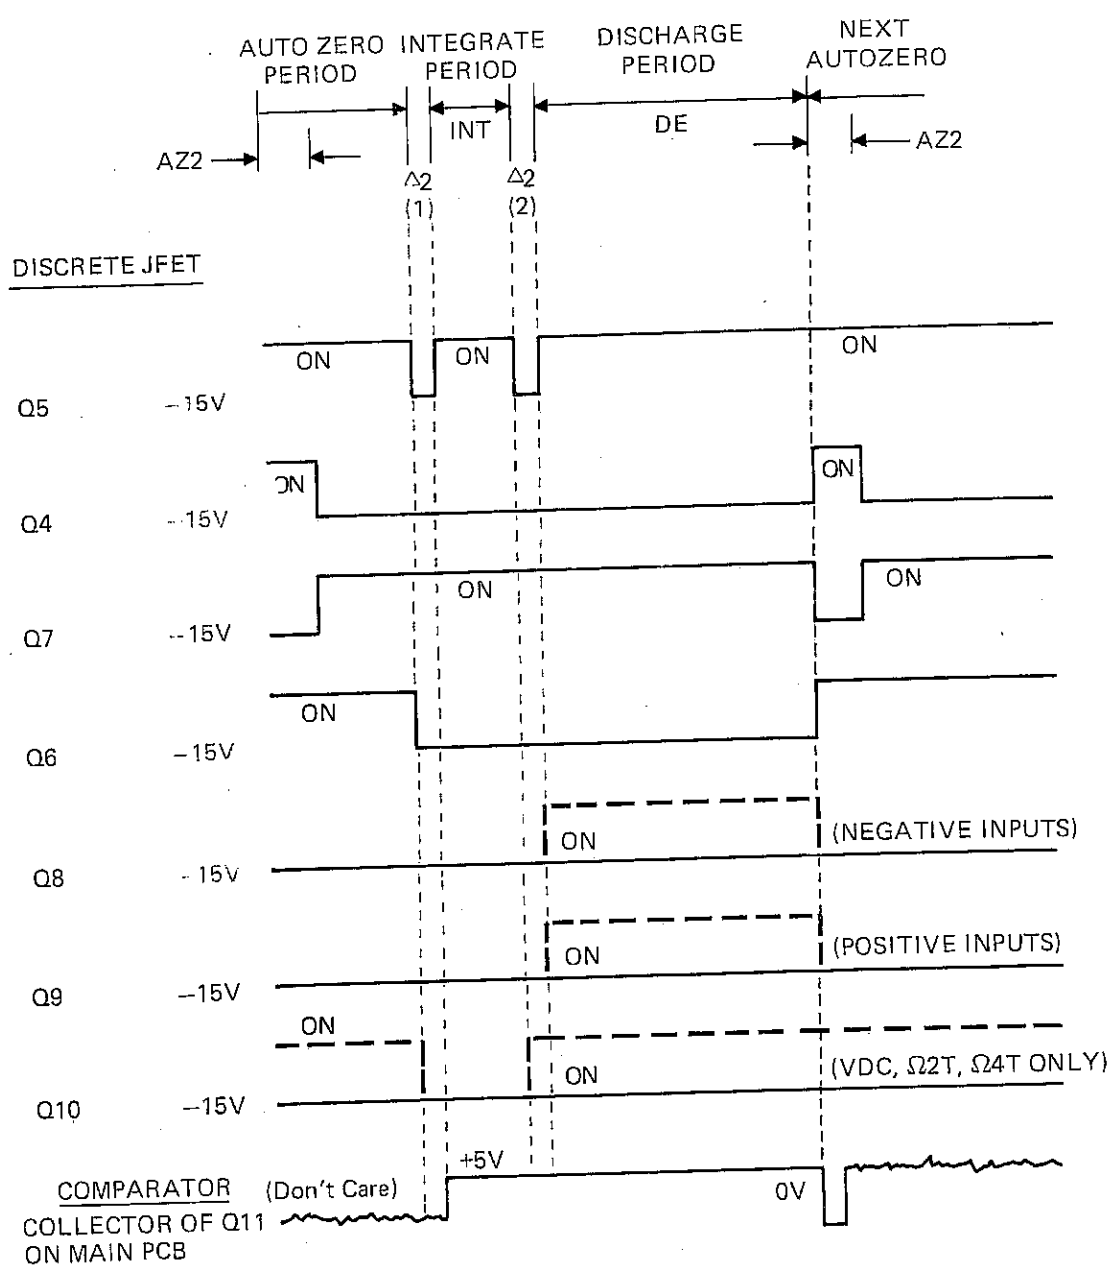


Figure 4-4. Timing Diagram for A/D Converter JFETs (cont)


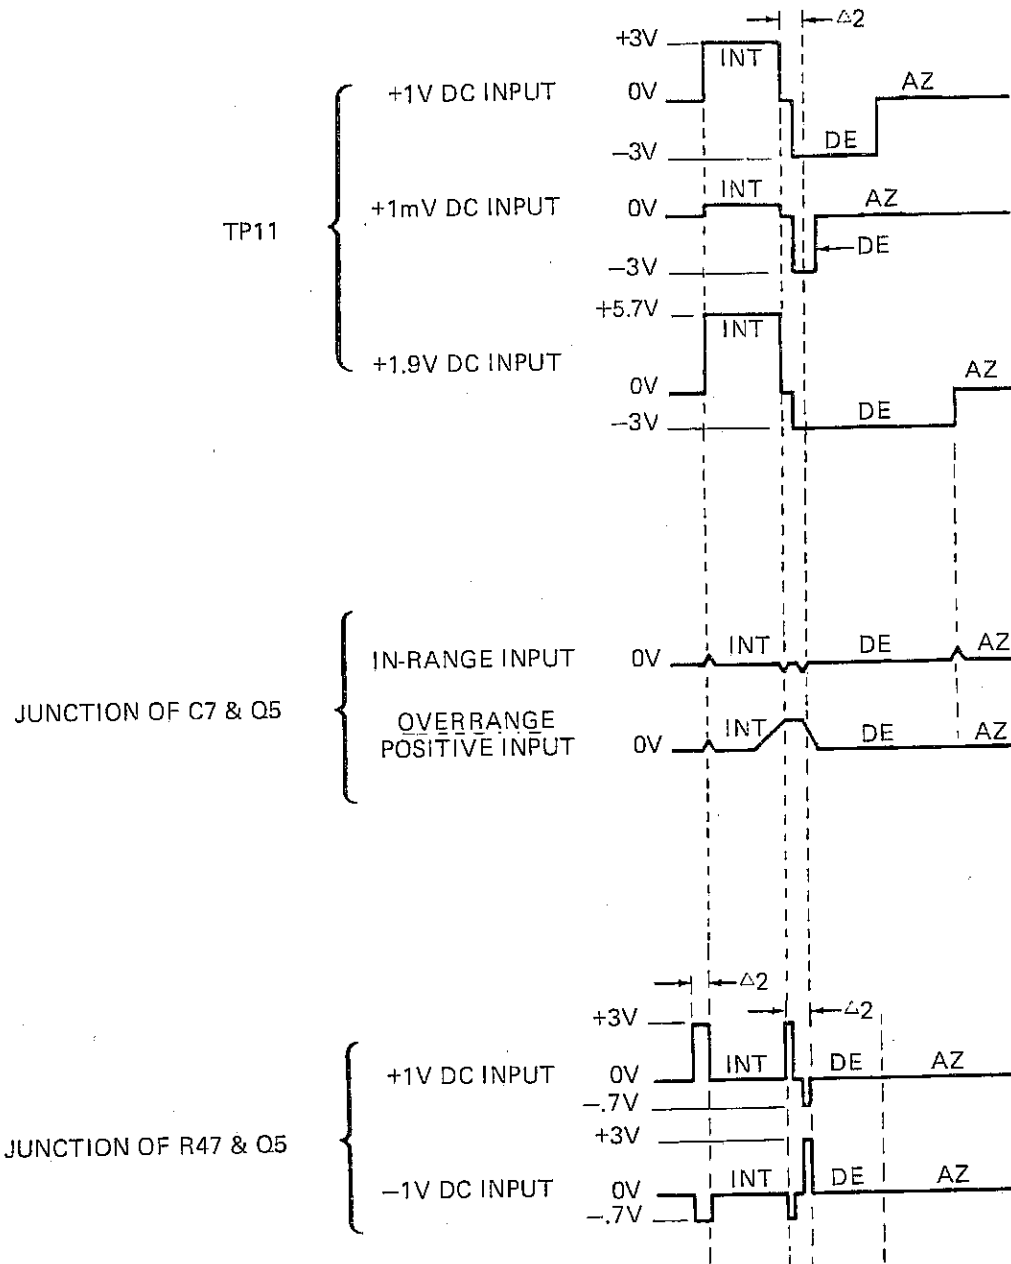


Figure 4-5. Signal Waveforms in A/D Converter

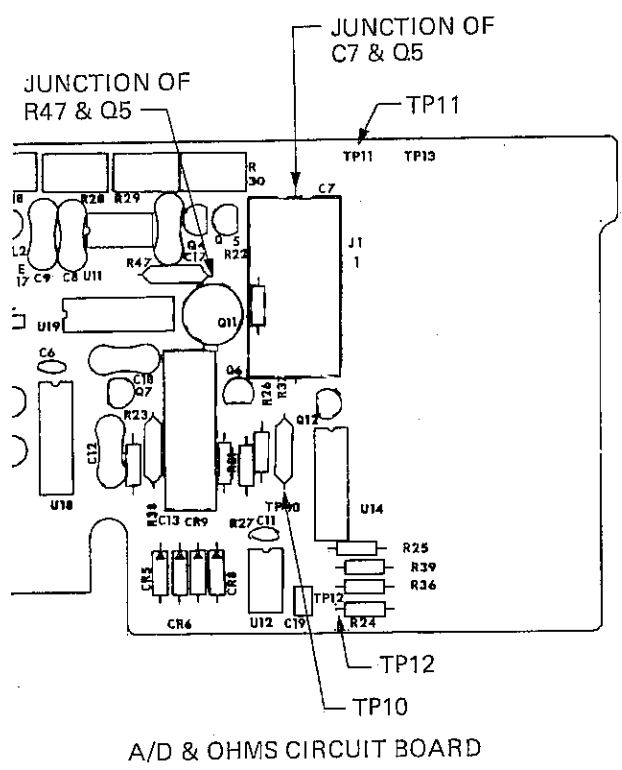

A/D & OHMS CIRCUIT BOARD

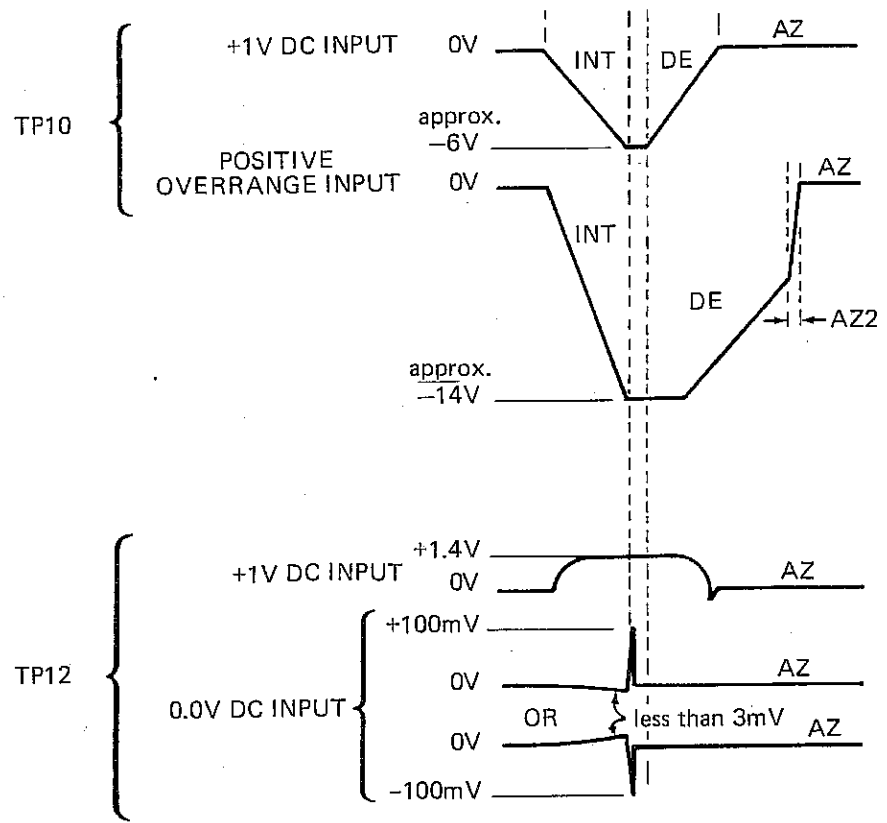


Figure 4-5. Signal Waveforms in A/D Converter (cont)

4-58. Operation in the $4\frac{1}{2}$ or $3\frac{1}{2}$ digit mode makes the A/D cycle easier to observe, due to the higher sample rate. To select the $3\frac{1}{2}$ digit mode, set switch S1 to the TM1 position. This switch, shown in Figure 4-6, is located on the top edge of the Controller PCB.

NOTE

Be sure to return both S1 and S3 slide switches to NORM after trouble shooting. Otherwise the instrument will remain in autozero or in the $3\frac{1}{2}$ digit mode.

4-59. DIGITAL TROUBLESHOOTING OF BASIC INSTRUMENT

4-60. General troubleshooting information for the digital section of the 8860A is given in Table 4-7. The table provides a list of solutions for general symptoms. The symptoms are separated into two categories: error message displayed or no error message displayed. Error code descriptions follow the table.

4-61. Error Messages

4-62. Basic instrument error messages fall into two categories: user errors and internal DMM errors. User errors can generally be corrected at the front panel. They are:

Err 10 — External reference has been selected, but the -007 option circuit board is not installed. To correct, install the option or cancel the selection.

Err 11 — Front panel ZERO function has been attempted, but the input is greater than the allowed range of $\pm 99 \mu\text{V}$ or $\pm 99 \text{ m}\Omega$. To correct, verify that the input terminals are shorted.

Err 13 — Exponent magnitude is too large. This occurs when attempting to enter a number which exceeds $\pm 1.99999 \times 10^{99}$ into the High, Low, or Offset register (e.g., NUM 2 EEX 99 FCN STORE HIGH).

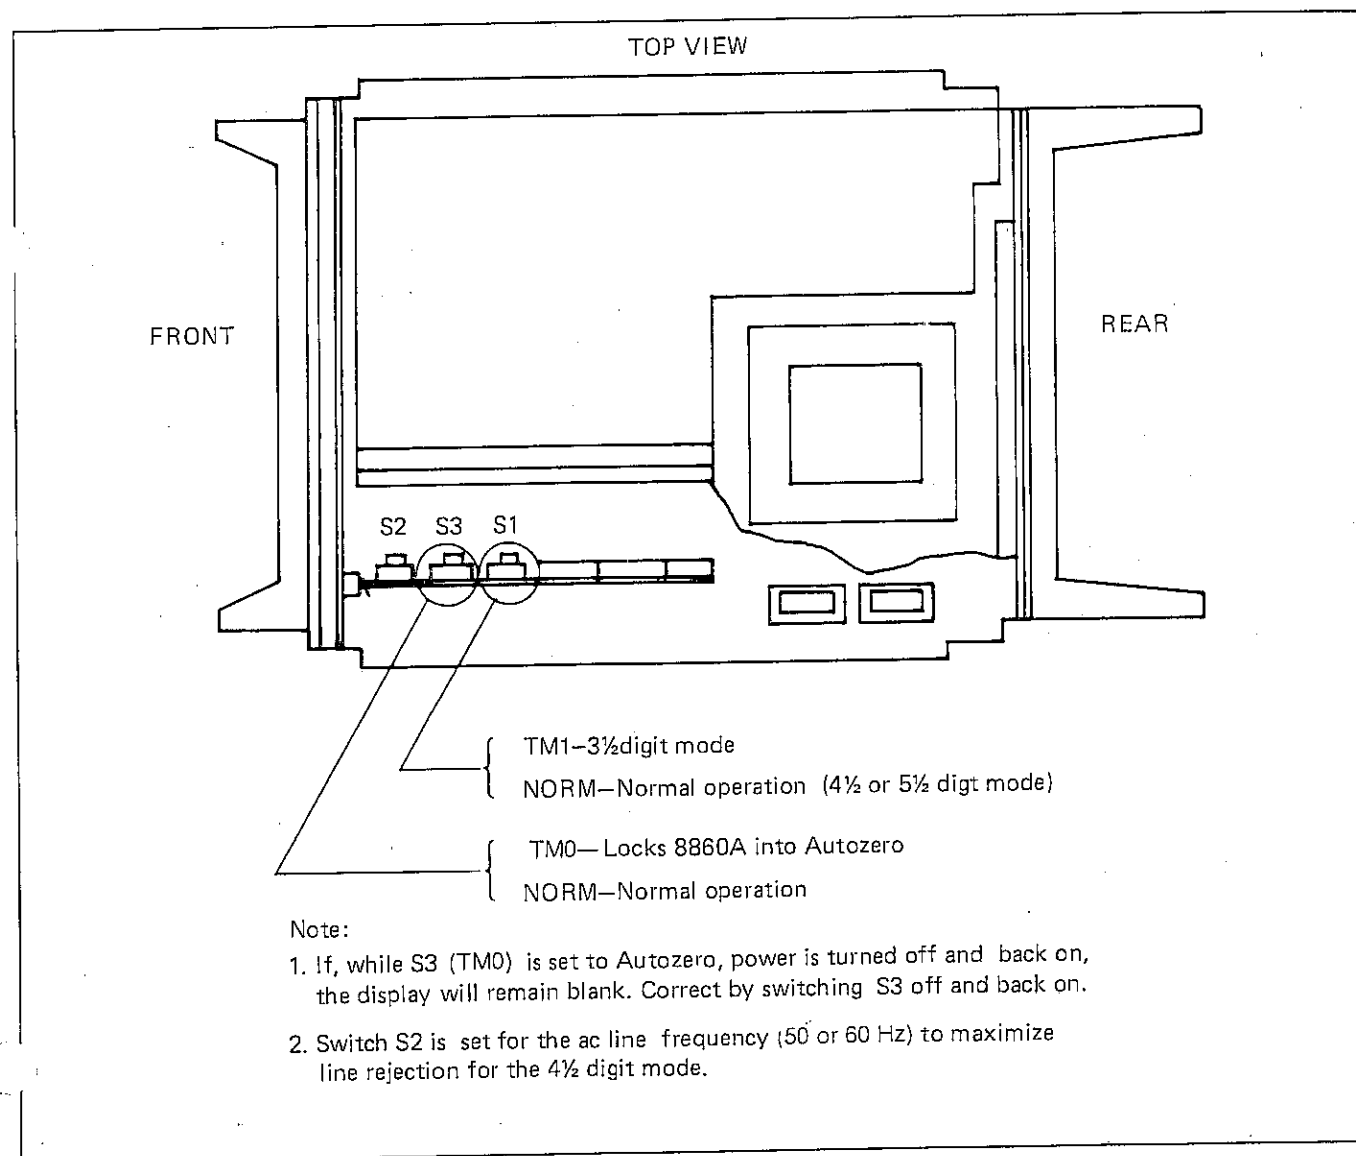


Figure 4-6. Slide Switches Used in Troubleshooting

Table 4-7. Digital Troubleshooting of Basic Instrument

<p>This table is divided into two sequences: choose the first if an error message is displayed, or the second if an error message is not displayed. Both sequences assume that the fault is digital and not analog. Perform the steps in sequence; stop when the fault disappears. Remove the 8860A from line power before unplugging printed circuit boards or removing components.</p> <p>IF AN ERROR MESSAGE IS DISPLAYED (Err 12, 14, 15, 16, or 17), the fault is confined to the guard-crossing circuitry, one of the microprocessors, or the interconnections:</p>	
SUSPECT AREA	INSTRUCTION
<ol style="list-style-type: none"> 1. Loose Connector 2. Power Supply (Main PCB) 3. Out-guard Microprocessor (U2 on Controller PCB) 4. In-guard Microprocessor (U1 on Main PCB) 5. Guard-Crossing Circuitry (on Main PCB) 6. I/O Expander (U3 on Controller PCB) 	<p>Remove and reseat the Controller PCB (in case it was jarred loose from its connector). Check to see if this clears the fault.</p> <p>Measure the +5V out-guard supply voltage. It should be +4.7 to +5.3V dc.</p> <p>Replace U2, observing static precautions.</p> <p>Replace U1.</p> <p>With any of these error messages, transmissions between microprocessors will stop. Test each opto-isolator individually, as in Table 4-8, and observe the waveform at the noted test point. A good opto-isolator will produce an inverted 5V square wave at the test point.</p> <p>If the fault has still not cleared, check the PROG control line (pin 7) and data lines (pins 8, 9, 10, 11). Replace this device (U3) if any lines are stuck high or low. (Access these pins from the non-component side of the board.)</p>
<p>IF NO ERROR MESSAGE IS DISPLAYED, then the in-guard microprocessor and guard-crossing circuits are probably good. The fault is instead on either the Controller or Display PCB. The following sequence of steps checks all integrated circuits, U1 through U11, on the Controller PCB. Perform these steps in sequence:</p>	
SUSPECT AREA	INSTRUCTION
<ol style="list-style-type: none"> 1. Connector or Slide Switches (on Controller PCB) 2. Digital Option (-004 or -005) 3. Power Supply (on Main PCB) 4. Out-guard Microprocessor (U2 on Controller PCB) 5. Crystal 	<p>Remove and reseat the Controller PCB (in case it was jarred loose from its connectors). Also make sure that slide switches S1 (TM1/NORM) and S3 (TM0/NORM) at the top edge of the board are in their normal position (NORM).</p> <p>If present, remove the option PCB (Calculating Controller or IEEE-488). If the fault clears, troubleshoot the option assembly using the procedures given in Section 6 of this manual.</p> <p>Check the output of the +5V out-guard supply. It should be 4.7V to 5.3V.</p> <p>Replace U2 observing static precautions. Check pin 4, the reset line. It should be at +5V after power up; if stuck low, C1 may be defective.</p> <p>Check line ALE (pin 11 of U2) for a 400 kHz square wave. If this signal is not present, crystal Y1 or capacitors C2 or C3 may be defective. Check either pin of the crystal for a 1V pk-pk sinusoid, 6MHz waveform.</p>

Table 4-7. Digital Troubleshooting of Basic Instrument (cont)

SUSPECT AREA	INSTRUCTION
6. Display PCB	If one or more of the 7-segment display digits never light up, check pins 2, 4, and 6 of U7 on the Controller PCB for activity (these lines scan the display and keyboard). If all lines are switching, the Controller PCB is probably good; check the Display PCB, devices U1 and Q1 through Q8. All U1 outputs should be switching. Also make sure the Controller and display PCBs are firmly seated in their connectors. If at least one of pins 2, 3, or 6 of U7 (on the Controller PCB) is stuck high or low, suspect the Controller PCB, especially devices U3 or U7. Check the corresponding input pins of U7 for activity.
7. Bad LED Display Segment	Replace the 7-segment digit.
8. Segment Drivers	If the same segment on all digits is out, suspect segment driver U4 or U5 on the Controller PCB. Also check the series resistors U6, R4, R5, R6, and the connector (P2).
9. Local Program Memory (ROM) (U9 on Controller PCB)	Replace if a spare is available; check to see if fault has cleared.
10. Control Lines (on Controller PCB)	With a known good out-guard microprocessor in place, look at the control signals PSEN, ALE, and PROG generated by the processor; all should be switching. If one is stuck high or low, remove the ICs connected to that line until the line is freed.
11. Data Bus (on Controller PCB)	Check the data bus for a stuck line; all lines should be switching. If a line is stuck high or low, suspect U9 or U10. Check U10 as described in step 12.
12. Address Latch (U10 on Controller PCB)	If you suspect that address latch U10 is faulty, use a dual-trace scope to check its operation. Trigger the scope on ALE and look at the input and output of each bit. If ALE and the latch are working properly, the output follows the input value when ALE is high and latches when ALE goes low.
13. Resistor Network (U8 on Controller PCB)	Check U8 for a bad resistor, using a low-voltage ohmmeter (to prevent diode turn-on). With U8 in the circuit, all resistors should measure somewhere between 5 k Ω and 40 k Ω .
14. External Trigger	U11 and half of U1 is used to condition the external trigger signal (the other half of U1 is used to condition a signal from a digital option). If devices U1 or U11 are faulty, they will not hang up the instrument unless U1-13 is low. This pin should be high when a digital option is not present in the instrument.

Err 18 — An input or offset value exceeds 1999.99V or 19.9999 M Ω . To correct, reduce the value to an acceptable level.

4-63. Error numbers 12, 14, 15, 16, and 17 represent external DMM errors, and when they persist, generally indicate a hardware failure in the guard-crossing. Hardware faults associated with these error codes are confined to the opto-isolator circuitry, the in-guard microprocessor, the I/O Expander U3, the out-guard microprocessor, or

the paths connecting these devices. The troubleshooting procedure is basically the same for each of these errors, and is given in Table 4-7. (A high input voltage transient may cause an Err 14, 15, 16, or 17 to be displayed for up to 4 seconds. This is not considered a fault condition.)

4-64. When the in-guard and out-guard microprocessors communicate, they check the accuracy of the transmission in each direction: Err 12, 14, and 15 indicate errors in communication from in-guard to out-guard circuits; Err 16

Table 4-8. Testing Guard-Crossing Circuitry

1. For out-guard to in-guard circuit paths:
 - a. Remove the Controller PCB from connector J3.
 - b. Check the clock path by applying a square wave (0 to +5V) to J3-15, and, using a scope, observe the resulting waveform at U6-14. Record the propagation time.
 - c. To check the data path, repeat step b using J3-13 as the input and U6-15 as the output.
2. For in-guard to out-guard circuit paths:
 - a. Remove U6 (the in-guard microprocessor) and the Controller PCB from their sockets.
 - b. Check the clock path by applying a square wave (0 to +5V) to U6-12, and, using a scope observe the resulting waveform at U2-1. Record the propagation time.
 - c. To check the data path, repeat step b using U6-13 as the input and U2-2 as the output.
3. The measured propagation times of the two paths should differ by less than 7 us. A greater difference will cause occasional transmission errors. A difference greater than 15 us will cause a continuous error message to be displayed.
4. Measure the voltage at pin 4 of each opto-isolator with the square wave applied as in steps 1 and 2. The high level should be at least 0.42V.
5. If either the propagation delay or the voltage level requirements are not met, replace the opto-isolator.

and 17 indicate errors in communication from out-guard to in-guard circuits.

Err 12 — Measurement data received by the out-guard microprocessor from in-guard circuitry is not BCD. The out-guard microprocessor receives measurement data bit-by-bit. Every four bits is verified as a BCD character (0-9). If a hexadecimal character (A, B, C, D, E, or F) occurs, for whatever reason (e.g., bad data or lost synchronization), Err 12 is declared.

Err 14 — The out-guard microprocessor cannot start receiving data from in-guard circuitry. After transmitting command data to the in-guard circuits, the out-guard microprocessor waits up to 3.5 seconds in remote or 4.2 seconds in local for the in-guard microprocessor to respond. This is enough time for any complete measurement cycle. If the out-guard microprocessor does not receive a message or receives a wrong message, it declares Err 14.

Err 15 — The out-guard microprocessor has received either invalid data or no data. If, after the in-guard microprocessor starts transmitting, the out-guard microprocessor receives the incorrect clock bit, or has to wait longer than 518 μ s for data, Err 15 is declared.

Err 16 — The out-guard microprocessor cannot start transmitting to the in-guard microprocessor. When the out-guard microprocessor is ready to transmit to the in-guard circuit, it sends a ready message. If the in-guard microprocessor does not echo the message within 3.4 seconds, Err 16 is declared.

Err 17 — A transmission error from the out-guard microprocessor to the in-guard microprocessor has occurred. When data is sent to the in-guard microprocessor, each bit is echoed back to the out-guard microprocessor. The in-guard microprocessor must correctly echo each bit within 495 μ s, or Err 17 is declared.

4-65. Messages are transmitted across the guard using parallel clock and data lines. The clock bit toggles with each transmitted data bit. As a data message is sent, the receiving microprocessor returns (echos) the data and clock bits to the sender for comparison. For instance, if the out-guard microprocessor transmits data bit 1, the in-guard microprocessor sends back data bit 1. This echo assures the out-guard microprocessor that the message was correctly received. The data echo occurs for each bit transmitted in either direction. Error 15 or 17 is declared when an echo bit differs from the bit sent.

4-66. Error codes 14 and 16 usually occur when the microprocessors have lost synchronization, and a transmission cannot get started. Errors 15 and 17 mean that the microprocessors started in sync, but then lost a bit. The out-guard microprocessor is the master, and the in-guard microprocessor is the slave. Whenever the echo time period elapses, the in-guard microprocessor defaults to receiving, while the out-guard microprocessor defaults to transmitting.

4-67. Error messages are buffered one deep. If, for example, two errors occur and clear within milliseconds of each other, both errors will be displayed, one after the other, for approximately 1.1 seconds each.

4-68. TROUBLESHOOTING AIDS**4-69. Visual inspection**

4-70. Visual inspection can sometimes quickly locate instrument faults, saving troubleshooting time. Use the Disassembly procedure presented earlier in this section to remove the top cover. Carefully inspect each circuit board for:

- loose or broken wires and component leads
- improperly seated plug-in assemblies
- physically damaged components
- discoloration due to arcing or overheating
- discolored or burnt capacitors or resistors
- cracked or bulging resistors, diodes, thermistors

4-71. Short Circuit in Power Supply

4-72. Current Tracer probes, such as the HP 547A, are usually the best way to locate a short that loads the power supply. To locate such a short, start at the output of the power supply and move the Current Tracer along the supply output path until the short is found. The Current Tracer will glow brightest at the terminal of the shorted component. Shorted logic elements are more difficult to locate because of the small currents involved.

4-73. Intermittent Faults

4-74. To locate intermittent and temperature induced faults, alternately warm and cool the suspect circuits. A heat gun and a can of aerosol circuit cooler are recommended as the heating and cooling agents.

4-75. Connectors with Poor Contacts

4-76. If connectors are suspected of making poor contact, clean the circuit board fingers by rubbing them with a cotton swab moistened with isopropyl alcohol. Do not use abrasives to clean the gold-plated contacts.

4-77. POST REPAIR PROCEDURES

4-78. The 8860A contains a series of factory selected jumpers in the RMS Converter and the Precision Voltage Reference circuits. After either of these circuits have been repaired by parts replacement, it may be necessary to change their jumper settings. The parts that affect the jumper settings are as follows:

- RMS Converter U17 or U20
- Precision Voltage Reference U22

4-79. Instructions for verifying and or relocating the jumper settings are given in Tables 4-9 and 4-10. Table 4-9 contains the procedure for the RMS Converter. The procedure for the Precision Voltage Reference is given in Table 4-10.

Table 4-9. Jumper Selection, RMS Converter

After replacing U17 or U20 on the RMS Converter, use the following procedure to verify and/or select the jumper locations:

1. Locate the row of sleeved jumpers adjacent to U18, the RMS resistor network.
2. Solder short lengths of solid wire in place of any jumpers that have been previously cut.
3. Install all pcb assemblies, and turn-on power to the 8860A.
4. Connect a short between the 8860A INPUT terminals, and select the VAC function, 2V range.
5. Connect a DMM between the INPUT LO terminal of the 8860A and each of the following test points on the AC/DC Scaling PCB Assembly. At each test point measure the dc voltage. If necessary, bring the voltage within limits by making the indicated adjustment.

Test Point	Adjustment	DC Voltage Reading
TP5	R27 Buffer Offset	0.0 +/-0.2 mV
TP2	R54 RMS Offset	0.0 +/-0.2 mV
TP3	R46 RMS Zero	0.0 +/-100 mV*

*Reading will be unsteady.

6. Disconnect both the DMM and the short across the INPUT terminals.
7. Connect an AC Calibrator with a 1V, 200 Hz output to the 8860A input terminals.
8. Center the 1V, 200 Hz adjustment (R67) and the 10 mV, 200 Hz adjustment (R73). Record the 8860A display reading.
9. Use the recorded reading and the list at the end of this procedure to determine which jumpers need to be cut.
10. Turn off power to the 8860A, remove the AC/DC Scaling PCB, and cut the appropriate jumpers.
11. Install the PCB in the 8860A, and perform the calibration procedure (see the Calibration Manual).

RECORDED DISPLAY READING	JUMPERS			
	W5	W6	W7	W8
1.00339 to 0.99664	-----	-----	-----	-----
0.99663 to 0.99497	-----	-----	-----	cut
0.99496 to 0.98999	-----	-----	cut	-----
0.98998 to 0.98508	-----	-----	cut	cut
0.98507 to 0.98023	-----	cut	-----	-----
0.98022 to 0.97544	-----	cut	-----	cut
0.97543 to 0.97071	-----	cut	cut	-----
0.97070 to 0.96603	-----	cut	cut	cut
0.96602 to 0.96141	cut	-----	-----	-----
0.96140 to 0.95685	cut	-----	-----	cut
0.95684 to 0.95234	cut	-----	cut	-----
0.95233 to 0.94788	cut	-----	cut	cut
0.94787 to 0.94347	cut	cut	-----	-----
0.94346 to 0.93912	cut	cut	-----	cut
0.93911 to 0.93481	cut	cut	cut	-----
0.93480 to 0.93056	cut	cut	cut	cut

Table 4-10. Jumper Selection, Precision Voltage Reference

After replacing U22, R41, and R42 in the Precision Voltage Reference Circuit (A/D and Ohms Converter PCB), use the following procedure to verify and/or select the jumper locations:

1. Connect a precision 1.0V dc source to the INPUT terminals of the 8860A; select the VDC function, 2V range.
2. Adjust R17 (+1V CAL) for a display reading of +1.00000. If this adjustment is achieved, the existing jumper locations are correct; perform the calibration procedure (see Calibration Manual). If the adjustment cannot be made, continue with this procedure.
3. Locate the row of sleeved jumpers adjacent to U10 in the Precision Voltage Reference circuit.
4. Solder short lengths of solid wire in place of jumpers which have been previously cut.
5. Install all pcb assemblies, and turn-on power to the 8860A.
6. With the precision 1.0V dc source still connected to the INPUT terminals, turn R7 counterclockwise until the reading no longer decreases. Record the reading.
7. Use the recorded reading and the list at the end of this procedure to determine which jumpers need to be cut.
8. Turn off the 8860A, remove the A/D and Ohms Converter PCB, and cut the appropriate jumpers.
9. Install the pcb in the 8860A, and perform the calibration procedure (see the Calibration Manual).

RECORDED DISPLAY READING	JUMPERS				
	W4	W5	W6	W7	W8
0.99923 to 0.99372	----	----	----	----	----
0.99371 to 0.98827	----	----	----	----	cut
0.98826 to 0.98287	----	----	----	cut	----
0.98286 to 0.97753	----	----	----	cut	cut
0.97752 to 0.97225	----	----	cut	----	----
0.97224 to 0.96703	----	----	cut	----	cut
0.96702 to 0.96186	----	----	cut	cut	----
0.96185 to 0.95675	----	----	cut	cut	cut
0.95674 to 0.95169	----	cut	----	----	----
0.95168 to 0.94669	----	cut	----	----	cut
0.94668 to 0.94173	----	cut	----	cut	----
0.94712 to 0.93683	----	cut	----	cut	cut
0.93682 to 0.93198	----	cut	cut	----	----
0.93197 to 0.92718	----	cut	cut	----	cut
0.92717 to 0.92243	----	cut	cut	cut	----
0.92242 to 0.91773	----	cut	cut	cut	cut
0.91772 to 0.91307	cut	----	----	----	----
0.91306 to 0.90846	cut	----	----	----	cut
0.90845 to 0.90390	cut	----	----	cut	----
0.90389 to 0.89939	cut	----	----	cut	cut
0.89938 to 0.89491	cut	----	cut	----	----
0.89490 to 0.89049	cut	----	cut	----	cut
0.89048 to 0.88610	cut	----	cut	cut	----
0.88609 to 0.88176	cut	----	cut	cut	cut
0.88175 to 0.87746	cut	cut	----	----	----
0.87745 to 0.87321	cut	cut	----	----	cut
0.87320 to 0.86899	cut	cut	----	cut	----
0.86898 to 0.86482	cut	cut	----	cut	cut
0.86481 to 0.86068	cut	cut	cut	----	----
0.86067 to 0.85659	cut	cut	cut	----	cut
0.85658 to 0.85253	cut	cut	cut	cut	----
0.85252 to 0.84851	cut	cut	cut	cut	cut

Section 5

List of Replaceable Parts

TABLE OF CONTENTS

ASSEMBLY NAME	DRAWING NO.	TABLE	PAGE	FIGURE	PAGE
Final Assembly	8860A-TB FA	5-1	5-2	5-1	5-4
A1 Main PCB Assembly	8860A-4001T	5-2	5-7	5-2	5-10
A2 Display PCB Assembly	8860A-4002T	5-3	5-11	5-3	5-12
A3 Controller PCB Assembly	8860A-4003T	5-4	5-13	5-4	5-14
A4 AC DC Scaling PCB Assembly	8860A-4004T	5-5	5-15	5-5	5-18
A5 A D and Ohms Converter PCB Assembly	8860A-4005T	5-6	5-19	5-6	5-22

5-1. INTRODUCTION

2. This section contains an illustrated parts breakdown of the instrument. A similar parts listing for each of the Options will be found in Section 6. Components are listed alphanumerically by assembly. Both electrical and mechanical components are listed by reference designation. Each listed part is shown in an accompanying illustration.

5-3. Parts lists include the following information:

1. Reference Designation.
2. Description of each part.
3. FLUKE Stock Number.
4. Federal Supply Code for Manufacturers. (See Section 7 for Code-to-Name list).
5. Manufacturer's Part Number.
6. Total Quantity of components per assembly.
7. Recommended Quantity: This entry indicates the recommended number of spare parts necessary to support one to five instruments for a period of 2 years. This list presumes an availability of common electronic parts at the maintenance site. For maintenance for 1 year or more at an isolated site, it is recommended that at least one of each assembly in the instrument be stocked (see paragraph 5-7). In the case of optional subassemblies, plug-ins, etc., that are not always part of the instrument, or are deviations from the basic instrument model, the REC QTY column lists the recommended spares quantity for the items in that particular assembly.

5-4. HOW TO OBTAIN PARTS

5-5. Components may be ordered directly from the manufacturer by using the manufacturer's part number, or from the John Fluke Mfg. Co., Inc. or its authorized representatives by using the FLUKE STOCK NUMBER. In the event the part you order has been replaced by a new or improved part, the replacement will accompany an explanatory note and installation instructions, if necessary.

5-6. To ensure prompt and efficient handling of your order, include the following information:

1. Quantity.
2. FLUKE Stock Number.
3. Description.
4. Reference Designation.
5. Printed Circuit Board Part Number and Revision Letter.
6. Instrument Model and Serial Number.

5-7. A Recommended Spare Parts Kit for your basic instrument is available from the factory. This kit contains those items listed in the REC QTY column of the parts list in the quantities recommended.

5-8. Parts price information is available from the John Fluke Mfg. Co., Inc. or its representatives. Prices are also available in a Fluke Replacement Parts Catalog, which is available on request.

CAUTION 


Indicated devices are subject to damage by static discharge.

Table 5-1. 8860A Final Assembly

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	N O T E
	FINAL ASSEMBLY FIGURE 5-1 (8860A-5001/TB)	8860A	89535				
A1	MAIN PCB ASSEMBLY	531640	89536	531640	1		
A2	DISPLAY PCB ASSEMBLY	502708	89536	502708	1		
A3	⊗ CONTROLLER PCB ASSEMBLY	502716	89536	502716	1		
A4	AC/DC SCALING PCB ASSEMBLY	526665	89536	526665	1		
A5	⊗ A/D AND OHMS CONVERTER PCB ASSEMBLY	526673	89536	526673	1		
F1	FUSE, SLO-BLO, 1/4 AMP	166306	71400	MDL1-4	1		5
H1	SCREW, FHP/SS, 4-40 X 3/16	149567	89536	149567	9		
H2	SCREW, FHP/SS, 6-32 X 1/4	385401	89536	385401	4		
H3	SCREW, 6-32 X 1/4	543447	89536	543447	4		
H4	SCREW, FHP THD/FORM, 2-28 X 3/8	493965	89536	493965	2		
H5	SCREW, FHP, 6-32 X 3/8, S/S	334458	89536	334458	1		
H6	SCREW, FHP, 4-40 X 1/4	256156	89536	256156	1		
H7	SCREW, FHP, U/CUT, 6-32 X 1/4	320093	89536	320093	4		
H8	SCREW, FHP, 4-40 X 3/8	256164	89536	256164	1		
H9	WASHER, FLAT, S/STEEL	260471	89536	260471	3		
H10	WASHER, SPLIT/LOCK, S/STEEL	147603	89536	147603	5		
H11	WASHER, SHOULDER	436386	89536	436386	1		
H12	NUT, HEX, S/STEEL, 4-40	147611	89536	147611	3		
MP1	COVER, GUARD	502575	89536	502575	1		
MP2	PANEL, BLANK SUB-	531004	89536	531004	2		
MP3	CUSHION	541896	89536	541896	2		
MP4	COVER, D-SIZE (WITHOUT SHIELD)	516682	89536	516682	1		
MP5	CUSHION	541870	89536	541870	2		
MP6	CUSHION	545871	89536	545871	1		
MP7	RETAINER STRAP, RELAY	381624	77342	27E348	3		
MP8	PANEL, FRONT	502534	89536	502834	1		
MP9	BUTTON, GRAY (FRONT PANEL)	509232	89536	509232	14		
MP10	BUTTON, ORANGE (FRONT PANEL)	509265	89536	509265	1		
MP11	BUTTON (FRONT PANEL)	509356	89536	509356	1		
MP12	DECAL, FRONT PANEL	507574	89536	507574	1		
MP13	DECAL, BASE SIDES	473652	89536	473652	2		
MP14	PANEL, REAR	502559	89536	502559	1		
MP15	GUARD, MAIN BOARD	509273	89536	509273	1		
MP16	PLUG, REAR PANEL	530998	89536	530998	1		
MP17	GUARD, BASE	502567	89536	502567	1		
MP18	INSULATOR, XSTR	508630	55285	7403-09FR-51	1		
MP19	SPRING CONTACT, SHIELD	525261	89536	525261	3		
MP20	BASE (STANDARD)	454702	89536	454702	1		
MP21	BAIL STAND	467555	89536	467555	1		
MP22	LATCH	467548	89536	467548	2		
MP23	FOOT, NON-SKID	467571	89536	467571	4		
MP24	CONN, BNC FE PANEL MOUNT	414201	02660	31-010	1		


Table 5-1. 8860A Final Assembly (cont)

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	N O T E
TM1	8860A INSTRUCTION MANUAL SET (NOT SHOWN)	545004	89536	545004	1		
VR3	VOLTAGE REGULATOR, 3-TERMINAL	538108	89536	538108	1	1	
W1	LINE CORD WITH INTRNL CONN, (NOT SHOWN)	343723	89536	343723	1		
W2	WIRE ASSEMBLY (GRN/YEL)	509348	89536	509349	1		
W18	WIRE ASSY, (BLK)	538165	89536	538165	1		
W19	WIRE ASSY, (BRN)	538173	89536	538173	1		
W20	WIRE ASSY, (BLU)	538181	89536	538181	1		
W21	WIRE ASSY, (WHT)	538199	89536	538199	1		
XF1	FUSEHOLDER (BODY/NUT ONLY)	375188	89536	375188	1		1
	FUSEHOLDER CAP (CAP ONLY)	460238	89536	460238	1		1
	LEAD & PROBE ASSEMBLY (NOT SHOWN)	516666	89536	Y8132	1		
	RECOMMENDED SPARE PARTS LIST/KIT	583500	89536	583500			
1	MUST BE ORDERED AS SEPARATE ITEMS.						

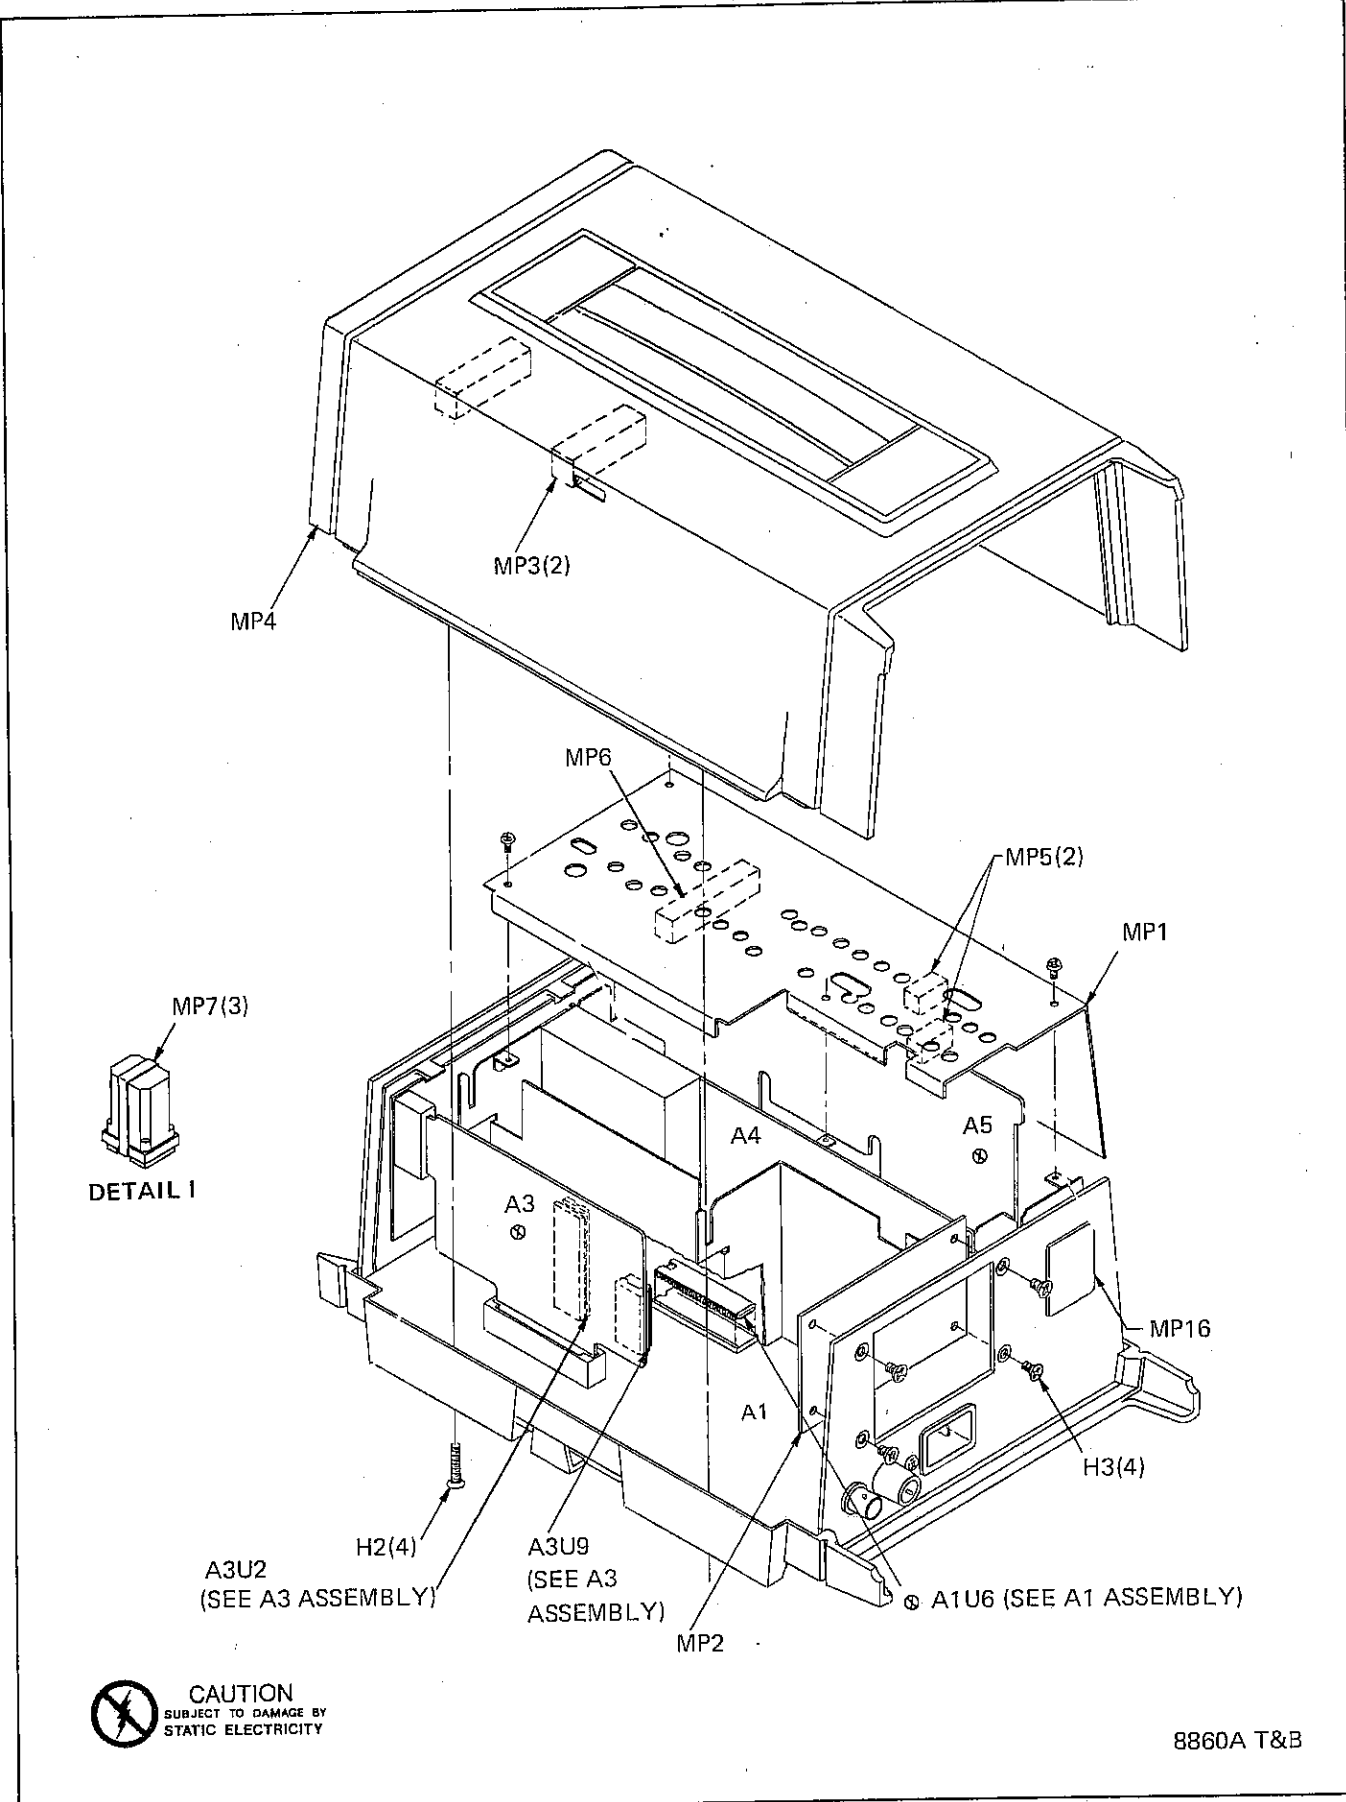


8860A T&B

Figure 5-1. Final Assembly

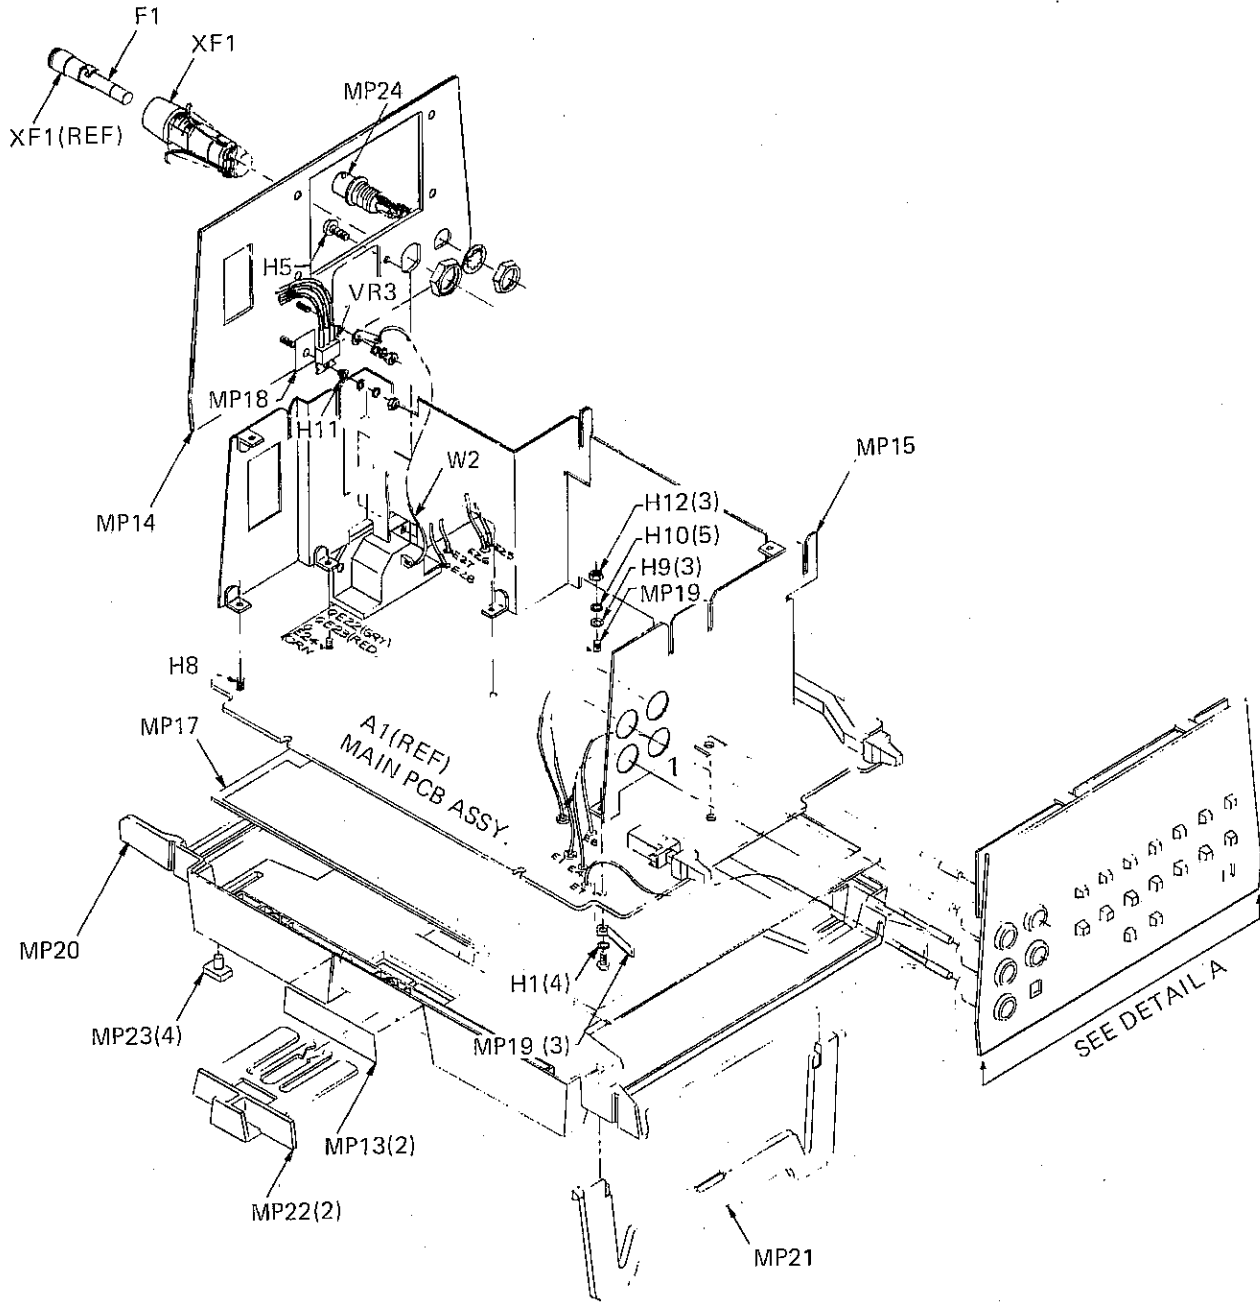

8860A-5001
(1 of 2)

Figure 5-1. Final Assembly (cont)

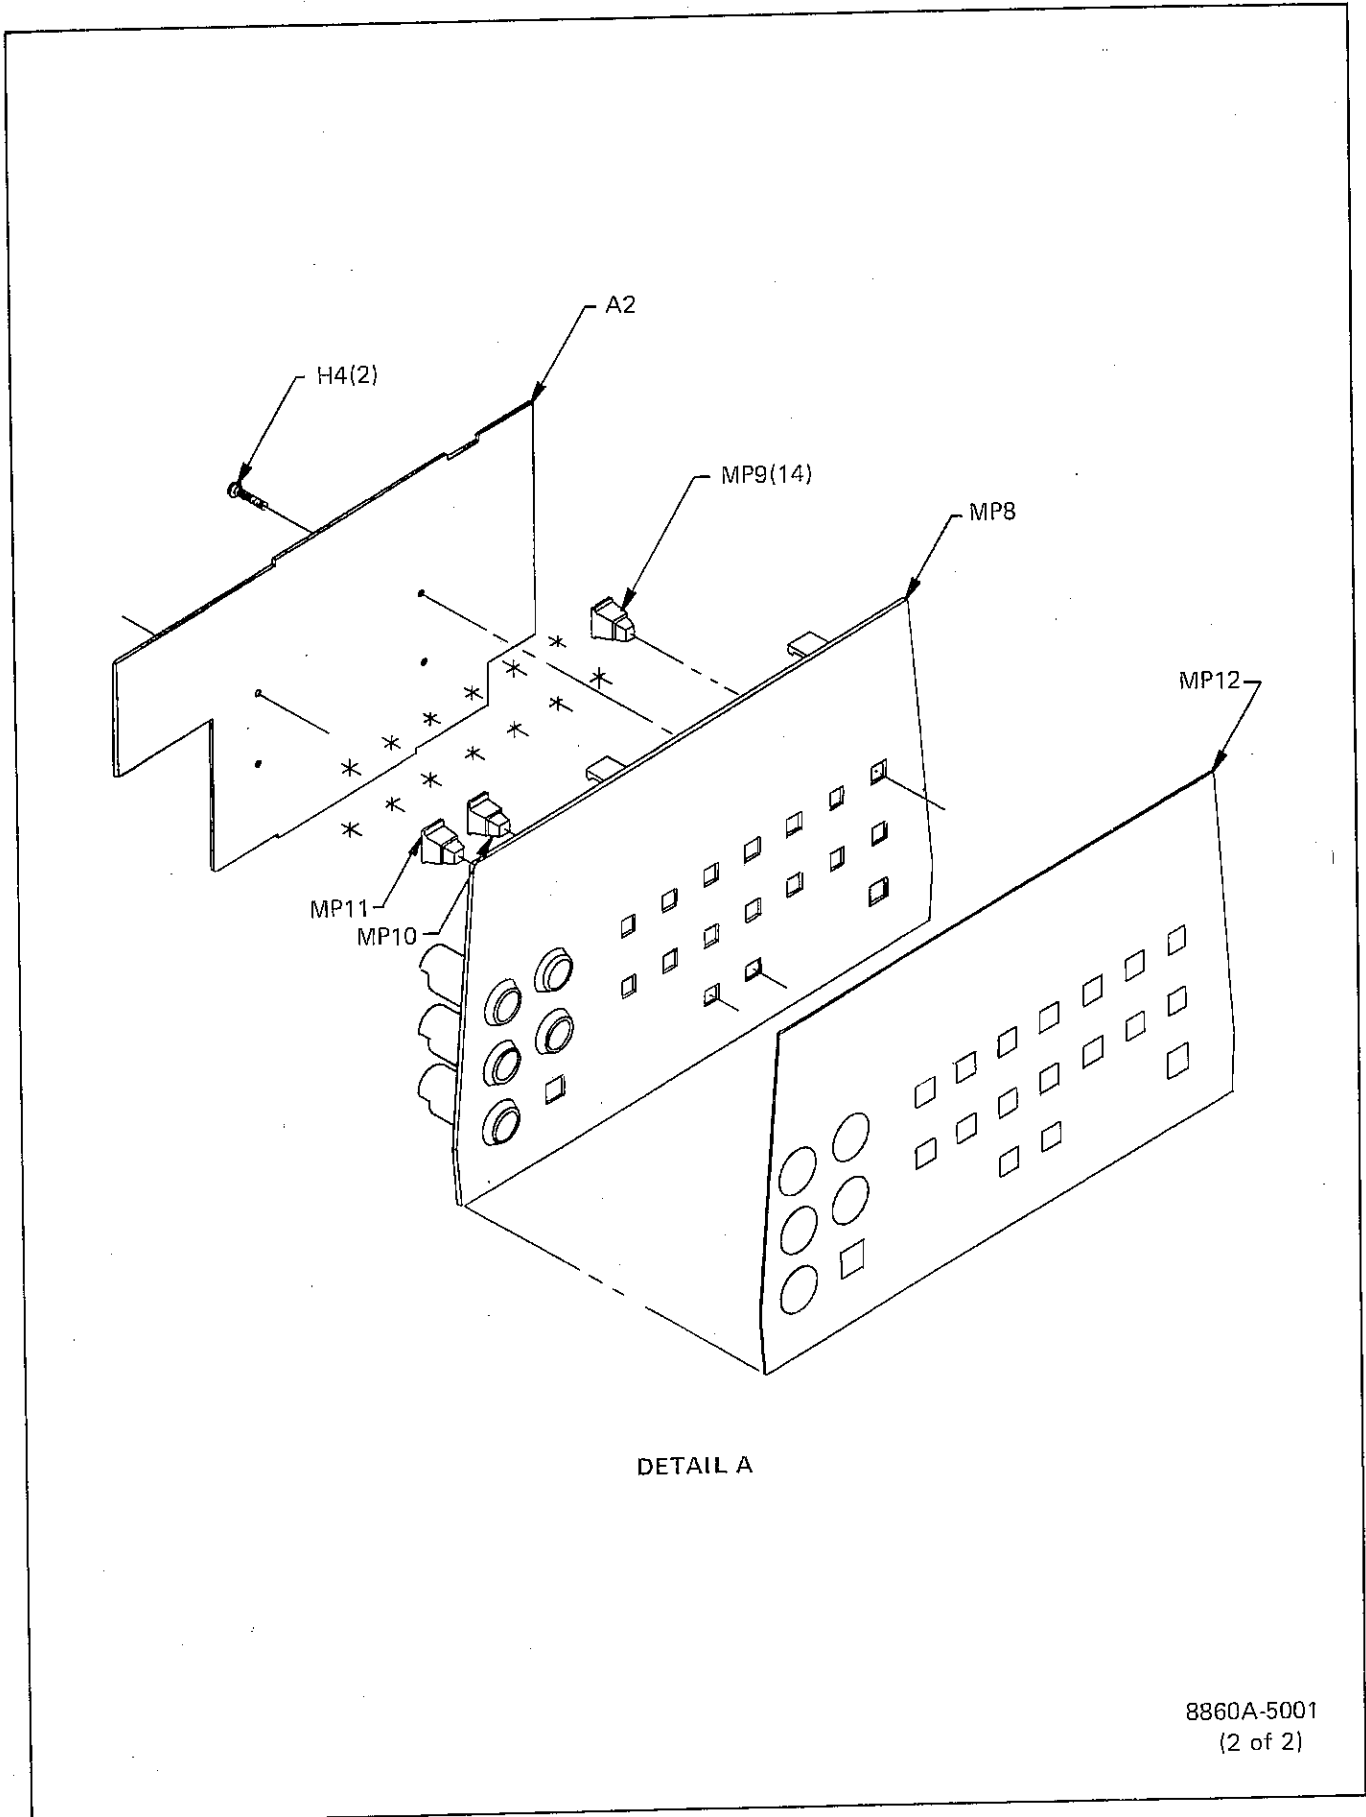

DETAIL A

8860A-5001
(2 of 2)

Figure 5-1. Final Assembly (cont)

Table 5-2. Main PCB Assembly

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	NOTE
A1	MAIN PCB ASSEMBLY FIGURE 5-2 (8860A-1001T)	531640	89536	531640			REF
C1	CAP, ELECT, 4700 UF -10/+100%, 15V	379370	80031	3050HJ472U015	2		
C2	CAP, ELECT, 4700 UF -10/+100%, 15V	379370	80031	3050HJ472U015			REF
C3	CAP, ELECT, 470 UF -10/+25%, 35V	478792	89536	478792	2		
C4	CAP, ELECT, 470 UF -10/+25%, 35V	478792	89536	478792			REF
C6	CAP, MYLAR, FXD, 0.047 UF +/-10%, 1000V	529446	03797	1.600.047/10/1000	1		
C7	CAP, ELECT, 4700 UF -10/+100%, 100V	460261	54473	ECE-T16R4700S	1		
C8	CAP, ELECT, 1200 UF -10/+100%, 2000VDC	500322	56289	672D128H6R3DS2C	1		
C9	CAP, CER, 0.22 UF, +/-20%, 50V	519157	51406	RPE11125U224M50V	2		
C10	CAP, TA, 4.7 UF +/-20%, 25V	161943	56289	196D475X0025KA1	2		
C12	CAP, TA, 4.7 UF +/-20%, 25V	161943	56289	196D475X0025KA1			REF
C14	CAP, TA, 2.2 UF +/-20%, 20V	161927	56289	196D2225X0020HA1	1		
C16	CAP, MYLAR, 0.0047 UF +/-20%, 200V	106054	56289	152P47202	1		
C17	CAP, CERAM, 0.05 UF -20/+80%, 500V	105676	56289	33C58B	1		
C18	CAP, CER, 0.22 UF, +/-20%, 50V	519157	51406	RPE11125U224M50V			REF
CR1	DIODE, SI, HI-SPEED SWITCHING	203323	07910	1N4448	7		2
CR2	DIODE, SI, HI-SPEED SWITCHING	203323	07910	1N4448			REF
CR3	DIODE, SI, HI-SPEED SWITCHING	203323	07910	1N4448			REF
CR4	DIODE, SI, HI-SPEED SWITCHING	203323	07910	1N4448			REF
CR6	DIODE, SI	343491	04713	1N4002	5		1
CR7	DIODE, SI, HI-SPEED SWITCHING	203323	07910	1N4448			REF
CR10	DIODE, SI	343491	04713	1N4002			REF
CR11	DIODE, SI	343491	04713	1N4002			REF
CR12	DIODE, SI	343491	04713	1N4002			REF
CR13	DIODE, SI	343491	04713	1N4002			REF
CR14	RECTIFIER BRIDGE	296509	21845	F903C-22	1		1
CR15	DIODE, SI, HI-SPEED SWITCHING	203323	07910	1N4448			REF
CR16	DIODE, SI, HI-SPEED SWITCHING	203323	07910	1N4448			REF
E:	WIRE TERMINATIONS						
H1	NUT, 6-32 (NOT SHOWN)	110551	89536	110551	1		
H2	WASHER, EXT/LK #4 (NOT SHOWN)	169235	73734	1322	1		
J1	CONN, 44 CONTACT	542258	00779	1-530843-5	3		
J2	CONN, 30 CONTACT	520163	00779	1-530843-3	1		
J3	CONN, 44 CONTACT	542258	00779	1-530843-5			REF
J4	CONN, 44 CONTACT	542258	00779	1-530843-5			REF
J5	CONN, CARD-EDGE	291708	91662	6308-006-313-001	3		
J6	CONN, CARD-EDGE	291708	91662	6308-006-313-001			REF
J7	CONN, CARD-EDGE	291708	91662	6308-006-313-001			REF
J9	CONNECTOR, AC	461806	89536	461806	1		
K1	RELAY, DPDT, 4.5V	514240	89536	514240	3		
K2	RELAY, DPDT, 4.5V	514240	89536	514240			REF
K3	REED RELAY, HV, 1000VDC	520247	71707	UF-40115	1		
K4	RELAY, DPDT, 4.5V	514240	89536	514240			REF
L1	INDUCTOR 10 UH +/-10%	249078	24759	MR-10	2		
L2	INDUCTOR 10 UH +/-10%	249078	24759	MR-10			REF
MP1	CONNECTOR (FASTON TAP)	512889	02660	62395-1834	6		
MP2	HEATSINK (TO VR1, VR2 AND Q6)	428805	13103	6046P8	3		
MP3	TERMINAL (TEFLON)(NOT SHOWN)	529297	98291	011-6812-00-0-206	12		

Table 5-2. Main PCB Assembly (cont)

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	N O T E
MP4	TERMINAL (TEFLON)(NOT SHOWN)	529305	98291	011-6811-00-0-202	4		
MP5	BUTTON, SWITCH (TO S3) GREEN	445197	89536	445197	1		
MP6	BUTTON, SWITCH (TO S1) GREY	425900	89536	425900	1		
MP8	PUSH ROD	509380	89536	509380	1		
MP9	COVER, AC SWITCH (W/S3)	475681	89536	475681	1		
Q1	XSTR, SI, PNP	195974	64713	2N3906	4	1	
Q2	XSTR, SI, PNP	195974	64713	2N3906	REF		
Q3	XSTR, SI, PNP	195974	64713	2N3906	REF		
Q4	XSTR, SI, PNP	195974	64713	2N3906	REF		
Q6	XSTR, PWR, PNP, SI	325753	09214	D45C5	1	1	
Q7	XSTR, SI, NPN	218396	89536	218396	4	1	
Q8	XSTR, SI, NPN	218396	89536	218396	REF		
Q9	XSTR, SI, NPN	218396	89536	218396	REF		
Q10	XSTR, SI, PNP	340026	07263	MPS6563	1	1	
Q11	XSTR, SI, NPN	218396	89536	218396	REF		
Q13	XSTR, J-FET, N-CHANNEL	343830	89536	343830	2	1	
Q15	XSTR, SI, NPN	218396	89536	218396	REF		
R1	RES, DEP. CAR, 2.2K +/-5%, 1/4W	343400	80031	CR251-4-5P2K2T	4		
R2	RES, DEP. CAR, 2.2K +/-5%, 1/4W	343400	80031	CR251-4-5P2K2T	REF		
R3	RES, DEP. CAR, 2.2K +/-5%, 1/4W	343400	80031	CR251-4-5P2K2T	REF		
R4	RES, DEP. CAR, 2.2K +/-5%, 1/4W	343400	80031	CR251-4-5P2K2T	REF		
R6	RES, FXD WW, 1000 +/-10%, 2W	474080	89536	474080	1		
R7	RES, MTL. FILM, 2K +/-1%, 7W	500033	89536	500033	1		
R8	RES, COMP 100K +/-5%, 2W	285056	89536	285056	2		
R9	RES, COMP 100K +/-5%, 2W	285056	89536	285056	REF		
R10	RES, MTL. FILM, 2K +/-1%, 1/2W	151266	91637	CMF552001F	2		
R11	RES, MTL. FILM, 2K +/-1%, 1/2W	235226	91637	CMF552001F	REF		
R12	RES, MTL. FILM, 10K +/-1%, 1/8W	168260	91637	CMF551002F	2		
R13	RES, MTL. FILM, 10K +/-1%, 1/8W	168260	91637	MFF1-81002F	REF		
R14	RES, DEP. CAR, 1.3K +/-5%, 1/4W	441394	80031	CR251-4-5P1K3	1		
R15	RES, DEP. CAR, 3.6K +/-5%, 1/4W	442343	80031	CR251-4-5P3K6	2		
R16	RES, DEP. CAR, 3.6K +/-5%, 1/4W	442343	80031	CR251-4-5P3K6	REF		
R18	RES, DEP. CAR, 6.2K +/-5%, 1/4W	442368	80031	CR251-4-5P6K2	5		
R19	RES, DEP. CAR, 6.2K +/-5%, 1/4W	442368	80031	CR251-4-5P6K2	REF		
R20	RES, DEP. CAR, 6.2K +/-5%, 1/4W	442368	80031	CR251-4-5P6K2	REF		
R21	RES, DEP. CAR, 6.2K +/-5%, 1/4W	442368	80031	CR251-4-5P6K2	REF		
R22	RES, DEP. CAR, 2.7K +/-5%, 1/4W	386490	80031	CR251-4-5P2K7T	3		
R23	RES, DEP. CAR, 2.7K +/-5%, 1/4W	386490	80031	CR251-4-5P2K7T	REF		
R24	RES, DEP. CAR, 2.7K +/-5%, 1/4W	386490	80031	CR251-4-5P2K7T	REF		
R25	RES, DEP. CAR, 15K +/-5%, 1/4W	348854	80031	CR251-4-5P15K	1		
R26	RES, DEP. CAR, 6.2K +/-5%, 1/4W	442368	80031	CR251-4-5P6K2	REF		
R27	RES, DEP. CAR, 2K +/-5%, 1/4W	441469	80031	CR251-4-5P2K	1		
R28	RES, DEP. CAR 220 +/-5%, 1/4W	342626	80031	CR251-4-5P220ET	1		
R29	RES, COMP, 10M +/-5%, 1/4W	194944	01121	CB1065	2		
R30	RES, COMP, 10M +/-5%, 1/4W	194944	01121	CB1065	REF		
R31	RES, DEP. CAR, 100K +/-5%, 1/4W	348920	80031	CR251-4-5P100K	1		
R32	RES, DEP. CAR, 150K +/-5%, 1/4W	348938	80031	CR251-4-5P150K	4		
R33	RES, DEP. CAR, 150K +/-5%, 1/4W	348938	80031	CR251-4-5P150K	REF		
R34	RES, DEP. CAR, 150K +/-5%, 1/4W	348938	80031	CR251-4-5P150K	REF		
R35	RES, DEP. CAR, 150K +/-5%, 1/4W	348938	80031	CR251-4-5P150K	REF		

Table 5-2. Main PCB Assembly (cont)

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	N O T E
RT1	THERMISTER, 1K, +/-40%	494740	50157	180Q10215	1		
RV1-8	VARISTOR, 390V	423475	09214	V390MAX781	8		
S1	SWITCH, DPDT	520437	89536	520437	1		
S3	SWITCH, POWER, ON-OFF	453605	89536	453605	1		
S4	SWITCH, SLIDE, DPDT	504738	82389	11A-1437	2		
S5	SWITCH, SLIDE, DPDT	504738	82389	11A-1437	REF		
T1	TRANSFORMER, POWER	531558	89536	531558	1		
U1	IC, LIN, OP-AMP	413740	12040	LM307N	1	1	
U2	IC, LIN, QUAD, COMPARATOR	387233	12040	LM339N	2	1	
U3	NETWORK, RESISTOR	520353	89536	520353	2	1	
U4	NETWORK, RESISTOR	520353	89536	520353	REF		
U5	IC, LIN, QUAD, COMPARATOR	387233	12040	LM339N	REF		
U6	IC, MICROCOMPUTER	504563	89536	504563	1	1	
U7	IC, PHOTOTRANSISTOR, OPTICALLY COUPLED	504977	29083	MCT2E	4	1	
U8	IC, PHOTOTRANSISTOR, OPTICALLY COUPLED	504977	29083	MCT2E	REF		
U9	IC, PHOTOTRANSISTOR, OPTICALLY COUPLED	504977	29083	MCT2E	REF		
U10	IC, PHOTOTRANSISTOR, OPTICALLY COUPLED	504977	29083	MCT2E	REF		
VR1	VOLTAGE REGULATOR, LIN, FXD	428847	04713	MC805TP	1	1	
VR2	VOLTAGE REGULATOR, LIN, RCD	413187	04713	MC7815CT	1	1	
VR3	VOLTAGE REGULATOR, 3-TERMINAL	538108	89536	538108	1	1	
W1-W24	JUMPER WIRE (NOT SHOWN)				3		
XK1	SOCKET RELAY	376665	77342	27E501	REF		
XK2	SOCKET RELAY	376665	77342	27E501	REF		
XK4	SOCKET RELAY	376665	77342	27E501	REF		
XU6	SOCKET, IC, 40-PIN	429282	09922	DILB40P-108	1		
Y1	CRYSTAL 4 MHZ, QUARTZ	474072	89536	474072	1	1	

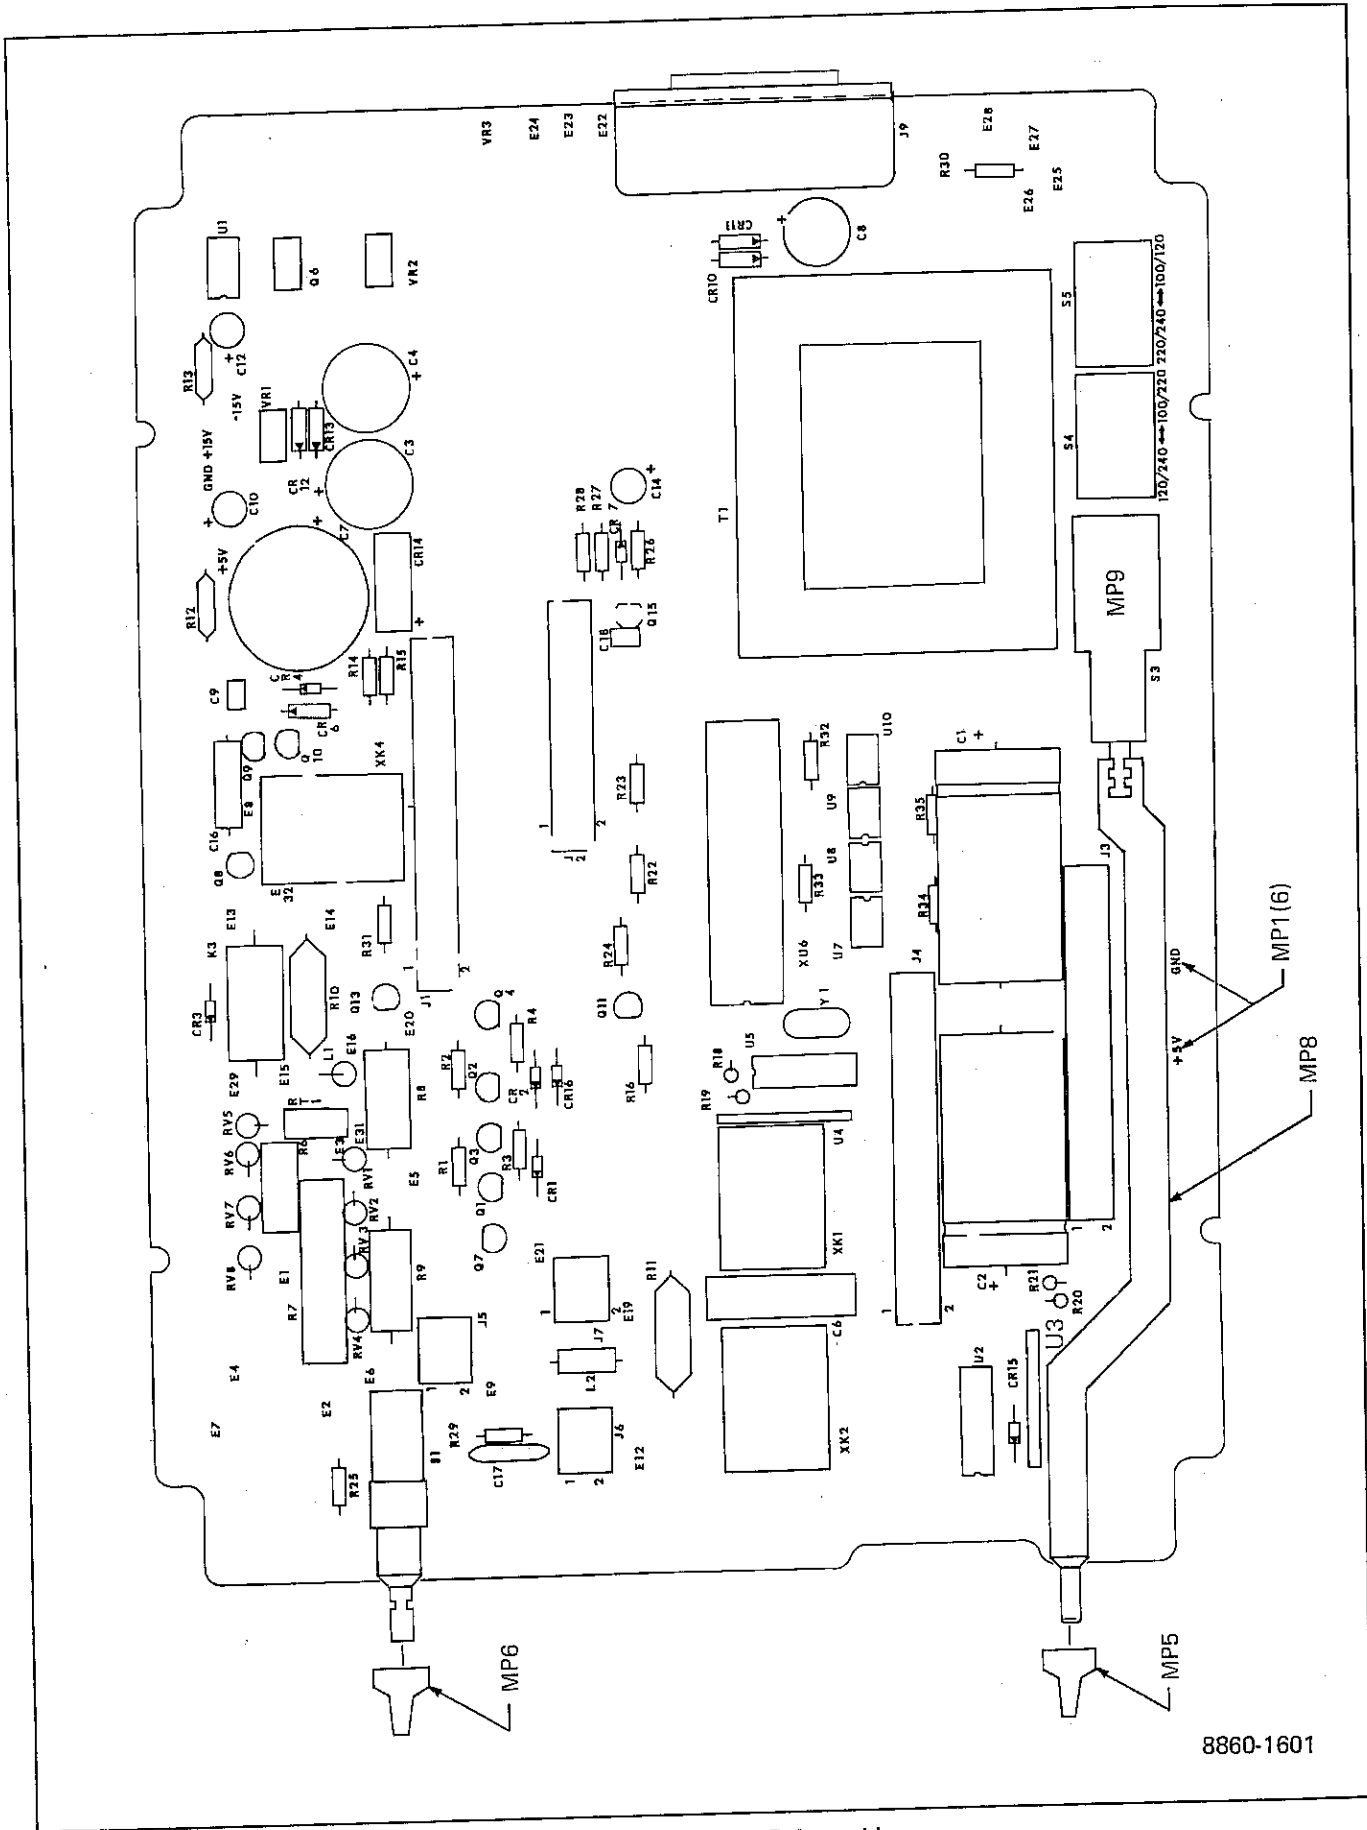


Figure 5-2. A1 Main PCB Assembly

8860-1601

Table 5-3. Display PCB Assembly

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	NOTE
A2	DISPLAY PCB ASSEMBLY FIGURE 5-3 (8860A-1002T)	502708	89536	502708	REF		
C1	CAP, TA, 1UF, +/-20%, 35V	161919	56289	196D105X0020JA1	3		
C2	CAP, TA, 1UF, +/-20%, 35V	161919	56289	196D105X0020JA1	REF		
C3	CAP, TA, 1UF, +/-20%, 35V	161919	56289	196D105X0020JA1	REF		
CR1	DIODE, HI-SPEED SWITCHING	203323	07910	1N4448	8	2	
CR2	DIODE, HI-SPEED SWITCHING	203323	07910	1N4448	REF		
CR3	DIODE, HI-SPEED SWITCHING	203323	07910	1N4448	REF		
CR4	DIODE, HI-SPEED SWITCHING	203323	07910	1N4448	REF		
CR5	DIODE, HI-SPEED SWITCHING	203323	07910	1N4448	REF		
CR6	DIODE, HI-SPEED SWITCHING	203323	07910	1N4448	REF		
CR7	DIODE, HI-SPEED SWITCHING	203323	07910	1N4448	REF		
CR8	DIODE, HI-SPEED SWITCHING	203323	07910	1N4448	REF		
DS1	DISPLAY, LED	504787	89536	504787	1	1	
DS2	DISPLAY, LED, 7-SEGMENT	418012	28480	5082-7651	5	1	
DS3	DISPLAY, LED, 7-SEGMENT	418012	28480	5082-7651	REF		
DS4	DISPLAY, LED, 7-SEGMENT	418012	28480	5082-7651	REF		
DS5	DISPLAY, LED, 7-SEGMENT	418012	28480	5082-7651	REF		
DS6	DISPLAY, LED, 7-SEGMENT	418012	28480	5082-7651	REF		
DS7	DISPLAY, LED	495457	28480	QDSP3507	1		
DS8	DISPLAY, LED	504779	89536	504779	1		
DS9	DISPLAY, LED	504779	89536	504779	REF		
DS10-22	DISPLAY, LED	504753	28480	HLMP-1301	16	4	
DS23	LIGHT EMITTING DIODE	504761	14936	MV57124	5	1	
DS24	LIGHT EMITTING DIODE	504761	14936	MV57124	REF		
DS25	LIGHT EMITTING DIODE	504761	14936	MV57124	REF		
DS26	DISPLAY, LED	504753	28480	HLMP-1301	REF		
DS27	LIGHT EMITTING DIODE	504761	14936	MV57124	REF		
DS28	LIGHT EMITTING DIODE	504761	14936	MV57124	REF		
DS29	DISPLAY, LED	504753	28480	HLMP-1301	REF		
DS30	DISPLAY, LED	504753	28480	HLMP-1301	REF		
J1	RECEPTACLE	520189	01295	H421121-18	1		
MP1	KEYBOARD, FRONT PANEL (NOT SHOWN)	504886	89536	504886	1		
MP2	SOCKET, COMPONENT LEAD (NOT SHOWN)	376418	22526	75060-007	42		
Q1	XSTR, SI, PNP, SM. SIG	418707	04713	MPS56562	8	2	
Q2	XSTR, SI, PNP, SM. SIG	418707	04713	MPS56562	REF		
Q3	XSTR, SI, PNP, SM. SIG	418707	04713	MPS56562	REF		
Q4	XSTR, SI, PNP, SM. SIG	418707	04713	MPS56562	REF		
Q5	XSTR, SI, PNP, SM. SIG	418707	04713	MPS56562	REF		
Q6	XSTR, SI, PNP, SM. SIG	418707	04713	MPS56562	REF		
Q7	XSTR, SI, PNP, SM. SIG	418707	04713	MPS56562	REF		
Q8	XSTR, SI, PNP, SM. SIG	418707	04713	MPS56562	REF		
U1	IC, 4-LINE TO 10-LINE DECODER	408716	01295	SN74LS42N	1	1	
U2	RESISTOR NETWORK, 270 OHMS	501239	89536	501239	1	1	


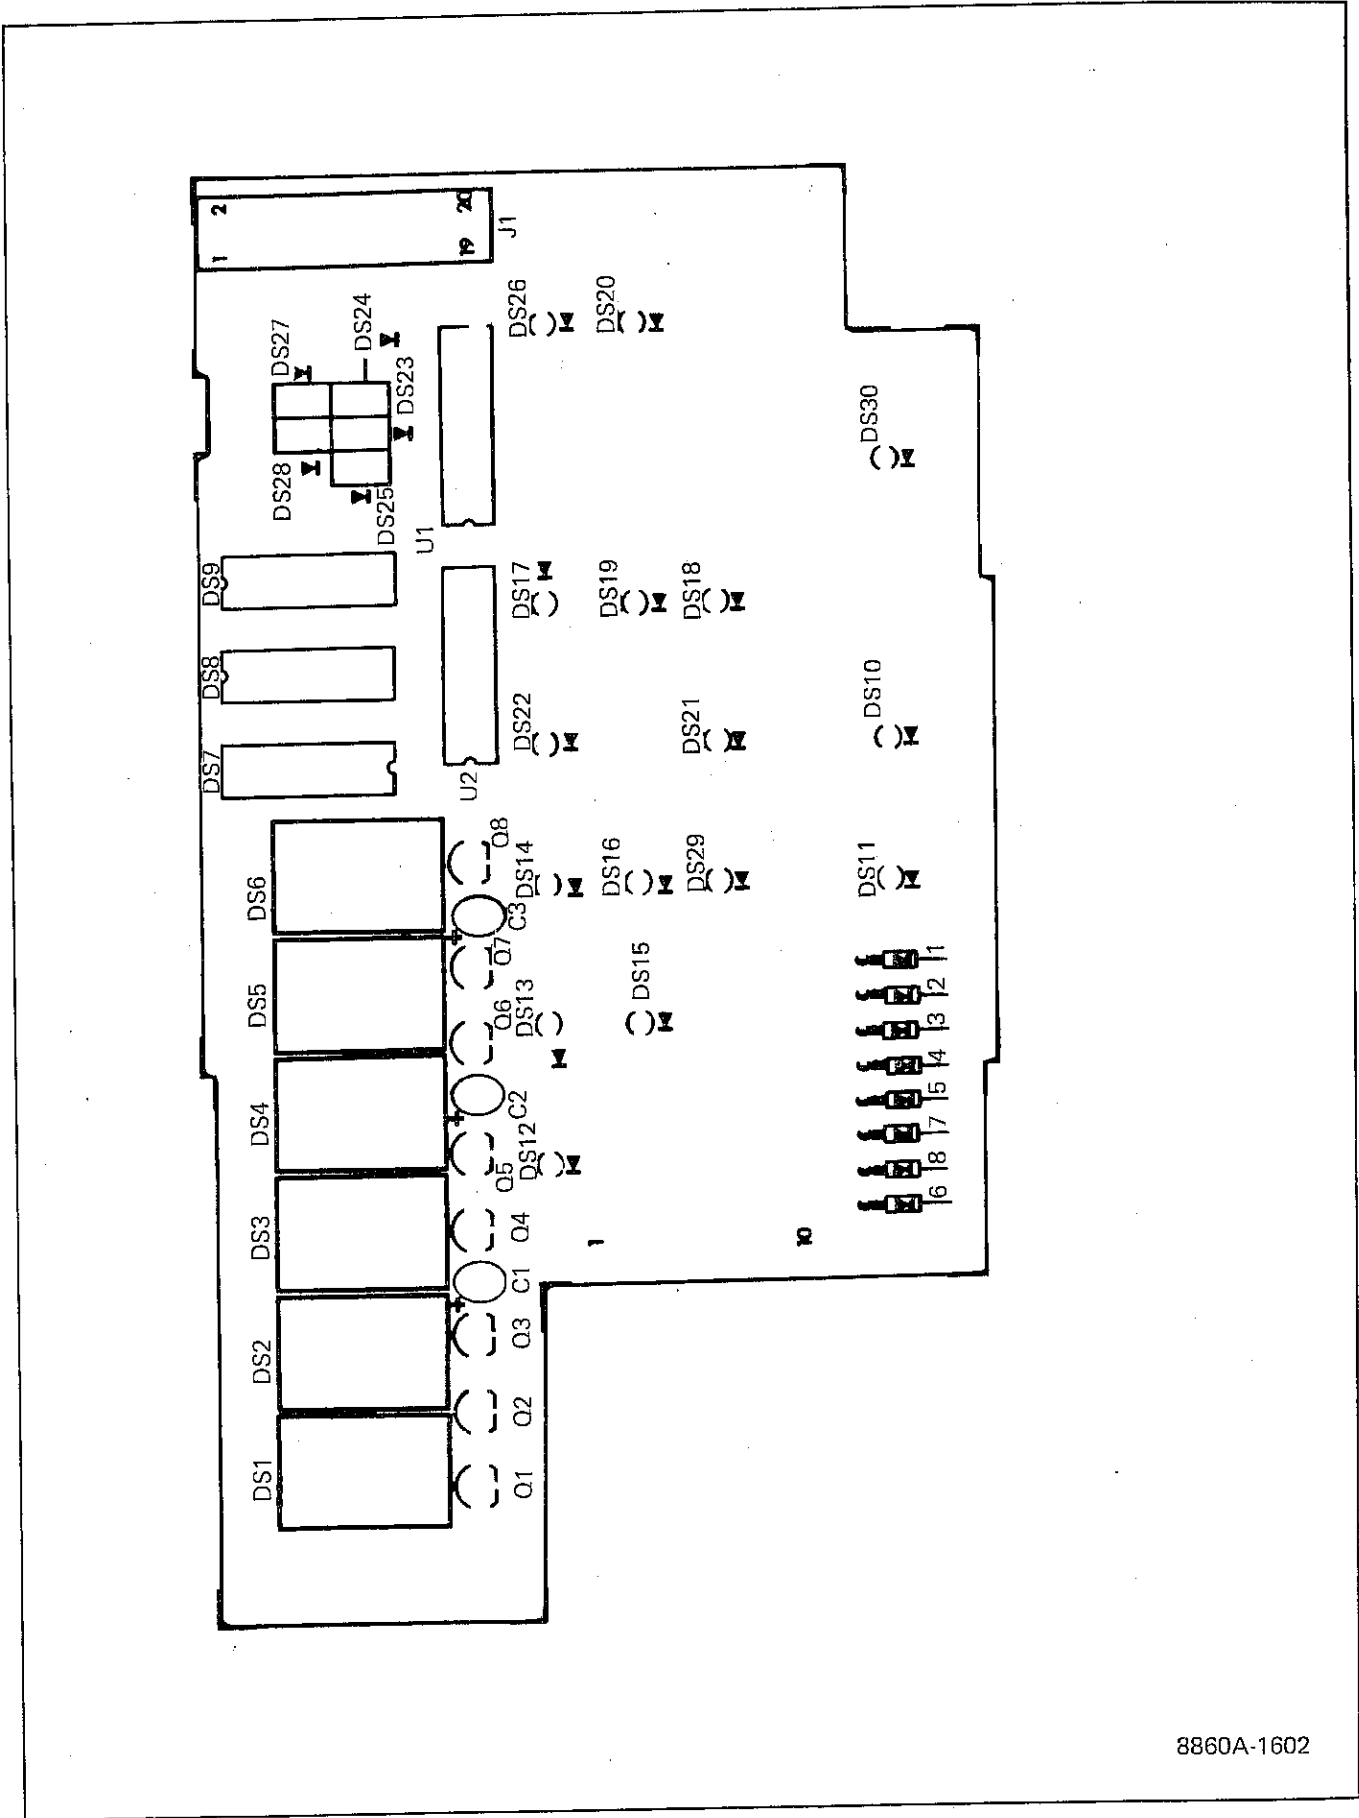



Figure 5-3. A2 Display PCB Assembly

8860A-1602

Table 5-4. A3 Controller PCB Assembly

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	NO TE
A3	⊕ CONTROLLER PCB ASSEMBLY FIGURE 5-4 (8860A-4003T)	502716	89536	502716	REF		
C1	CAP, TA, 1UF, +/-20%, 35V	161919	56289	196D105X0020JA1	4		
C2	CAP, CERAM, 20 PF +/-10%	106369	56289	561CT2HBA102AE200K	2		
C3	CAP, CERAM, 20 PF +/-10%	106369	56289	561CT2HBA102AE200K	REF		
C4	CAP, CERAM, 0.22 UF +/-20%, 50V	519157	51406	RPE111Z5U224M50V	5		
C5	CAP, CERAM, 0.22 UF +/-20%, 50V	519157	51406	RPE111Z5U224M50V	REF		
C6	CAP, CERAM, 0.22 UF +/-20%, 50V	519157	51406	RPE111Z5U224M50V	REF		
C7	CAP, CERAM, 20 PF +/-10%, 500V	357806	71590	CF-102	1		
C8	CAP, CERAM, .05 UF +/-20%, 50V	149161	56289	55C23A1	1		
C10	CAP, CERAM, 0.22 UF +/-20%, 50V	519157	51406	RPE111Z5U224M50V	REF		
C11	CAP, CERAM, 0.22 UF +/-20%, 50V	519157	51406	RPE111Z5U224M50V	REF		
CR1	DIODE, SI, HI-SPEED SWITCHING	203323	07910	1N4448	1	1	
P1	BOARD CONNECTION CIRCUIT						
P2	BOARD CONNECTION CIRCUIT						
Q1	XSTR, SI, NPN	218396	07263	2N3904	1	1	
R1	RES, DEP. CAR, 10K +/-5%, 1/4W	348839	80031	CR251-4-5P10K	2		
R2	RES, DEP. CAR, 10K +/-5%, 1/4W	348839	80031	CR251-4-5P10K	REF		
R3	RES, DEP. CAR, 33K +/-5%, 1/4W	348888	80031	CR251-4-5P33K	2		
R4	RES, DEP. CAR, 51 +/-5%, 1/4W	414540	80031	CR251-4-5P51E	3		
R5	RES, DEP. CAR, 51 +/-5%, 1/4W	414540	80031	CR251-4-5P51E	REF		
R6	RES, DEP. CAR, 51 +/-5%, 1/4W	414540	80031	CR251-4-5P51E	REF		
R7	RES, DEP. CAR, 6.2K +/-5%, 1/4W	442368	80031	CR251-4-5P6K2	4		
R8	RES, DEP. CAR, 6.2K +/-5%, 1/4W	442368	80031	CR251-4-5P6K2	REF		
R9	RES, DEP. CAR, 6.2K +/-5%, 1/4W	442368	80031	CR251-4-5P6K2	REF		
R10	RES, DEP. CAR, 6.2K +/-5%, 1/4W	442368	80031	CR251-4-5P6K2	REF		
R11	RES, DEP. CAR, 33K +/-5%, 1/4W	348888	80031	CR251-4-5P33K	REF		
R12	RES, DEP. CAR, 300K +/-5%, 1/4W	441535	80031	CR251-4-5P300K	1		
R13	RES, DEP. CAR, FXD, 2K +/-5%, 1/4W	441469	80031	CR251-4-5P2K	1		
R14	RES, DEP. CAR, 220 +/-5%, 1/4W	342626	80031	CR251-4-5P220E	1		
S1	SWITCH, SLIDE	477984	79727	GS-115	3	1	
S2	SWITCH, SLIDE	477984	79727	GS-115	REF		
S3	SWITCH, SLIDE	477984	79727	GS-115	REF		
U1	IC, C-MOS, DUAL D F/F	340117	02735	CD4013AE	1	1	
U2	IC, MICRO PROCESSOR	524827	89536	524827	1	1	
U3	IC, N-MOS, INPUT OUTPUT EXPANDER	507293	34649	P8243	1	1	
U4	IC, TTL, DIGITAL, COLLECTOR	328021	01295	SN7417N	2	1	
U5	IC, TTL, DIGITAL, COLLECTOR	328021	01295	SN7417N	REF		
U6	RESISTOR NETWORK, 82 OHMS	478859	89536	478859	1	1	
U7	IC, C-MOS, HEX BUFF/INVERTER	381830	02735	CD650AE	1	1	
U8	RESISTOR NETWORK	501494	89536	501494	1	1	
U9	IC, 4K X 8 BIT	525048	89536	525048	1	1	
U10	IC, TTL, DIGITAL	504514	01295	SN74LS373	1	1	
U11	⊕ IC, C-MOS, MONO/ASTABLE MLTVBRTR	535575	12040	CD4047E	1	1	
XU2	SOCKET, IC, 40-PIN	429282	09922	DILB40P-108	1		
XU9	SOCKET, IC, 24-PIN	418970	91506	324-AG39D	1		
Y1	CRYSTAL, 6 MEZ +/-0.015%	461665	89536	461665	1	1	

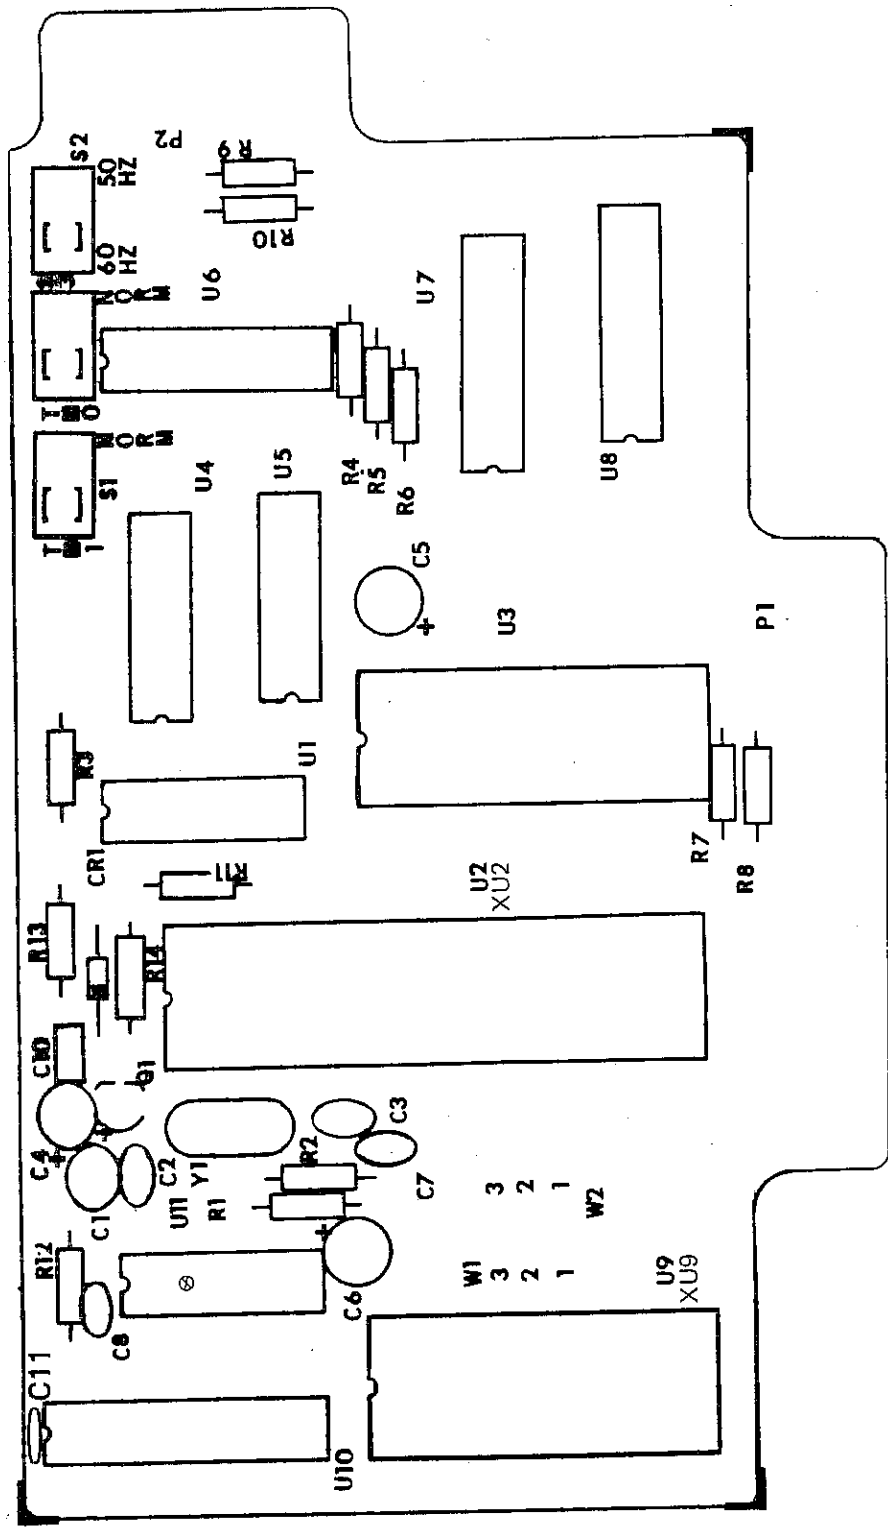

 **CAUTION**
SUBJECT TO DAMAGE BY
STATIC ELECTRICITY

8860A-1603

Figure 5-4. A3 Controller PCB Assembly

Table 5-5. A4 AC/DC Scaling PCB Assembly


REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	N O T E
A4	AC/DC SCALING PCB ASSEMBLY FIGURE 5-5 (8860A-4004T)	526665	89536	526665			REF
A4A1	CIRCUIT, HYBRID, AC/DC	496349	89536	496349	1	1	
C1	CAP, VAR, .25 - 1.5 PF, 2000VDC	435016	72082	530-006	3		
C2	CAP, VAR, .25 - 1.5 PF, 2000VDC	435016	72082	530-006			REF
C3	CAP, VAR, .25 - 1.5 PF, 2000VDC	435016	72082	530-006			REF
C4	CAP, MICA, 270 PF, +/-5%, 500V	148452	72136	DM15F271J	1		
C5	CAP, VAR, 1.7 - 10 PF, 250V	375238	56289	GKC10000	2		
C6	CAP, MICA, 27 PF, +/-5%, 500V	177998	72136	DM15E270J	1		
C7	CAP, MICA, 330 PF, +/-5%, 500V	148445	72136	DM15E331J	2		
C8	CAP, CERAM, 68 PF	519181	71590	DD-3R3	1		
C9	CAP, POLYPROP, .033 UF	519850	52763	MKP-1840/1841	1		
C10	CAP, POLYPROP, .22 UF +/-10%, 50V	423210	89536	423210	2		
C11	CAP, POLYPROP, .22 UF +/-10%, 50V	423210	89536	423210			REF
C12	CAP, MYLAR, .22 UF +/-10%, 100V	436113	73445	C280MAH/A220K	2		
C13	CAP, MYLAR, .047 UF +/-10%, 250V	162008	73445	C280MAE/A47K	1		
C14	CAP, TA, 4.7 UF +/-20%, 25V	161943	56289	196D685X9035KA1	5		
C15	CAP, MICA, 100 PF +/-5%, 500V	148494	72136	DM15F101J	1		
C17	CAP, CERAM, 33PF +/-5%, 100V	354852	80031	2222-638-10339	1		
C18	CAP, TA, 4.7 UF +/-20%, 25V	161943	56289	196D685X9035KA1			REF
C19	CAP, TA, 4.7 UF +/-20%, 25V	161943	56289	196D685X9035KA1			REF
C20	CAP, MICA, 680 PF	148403	02799	DM15F101J	1		
C21	CAP, CERAM, 4.7 UF +/-0.25%, 100V	362731	89536	362731	3		
C22	CAP, VAR, 1.7 - 10 PF, 250V	375238	56289	GKC10000			REF
C23	CAP, CERAM, 2.2 PF +/-0.25%, 100V	362731	89536	362731			REF
C25	CAP, MICA, 150 PF +/-5%, 500V	148478	72136	DM15F151J	1		
C26	CAP, CERAM, 2.2 PF +/-0.25%, 100V	362731	89536	362731			REF
C27	CAP, CERAM, .22 UF +/-20%, 50V	309849	71590	CW30C224K	1		
C28	CAP, CERAM, .01 UF +/-20%, 100V	149153	56289	C0238101F103M	2		
C29	CAP, MICA, 330 PF, +/-5%, 500V	148445	72136	DM15E331J			REF
C30	CAP, TA, 4.7 UF +/-20%, 25V	161943	56289	196D685X9035KA1			REF
C31	CAP, TA, 4.7 UF +/-20%, 25V	161943	56289	196D685X9035KA1			REF
C32	CAP, POLY, .47 UF +/-10%, 100V	446807	89536	446807	1		
C34	CAP, POLY, .22 UF +/-10%, 100V	614172	73445	C280MCH/A220K	1		
C35	CAP, CERAM, 22 PF +/-5%, 100V	448449	80031	2222-638-10229	2		
C36	CAP, CERAM, 22 PF +/-5%, 100V	448449	80031	2222-638-10229			REF
C38	CAP, CERAM, .01 UF +/-20%, 100V	149153	56289	C0238101F103M			REF
C40	CAP, CERAM, 1.0 PF	436477	80031	2222-638-03108	1		
C41	CAP, MYLAR, .22 UF +/-10%, 100V	436113	73445	C280MAH/A220K			REF
C42	CAP, CERAM, 4700 PF	362871	72982	8121-A100-W5R-472M	1		
C43	CAP, CERAM, 22 PF +/-5%, 100V	448449	80031	2222-638-10229			REF
C44	CAP, CERAM, .68 PF +/-1%, 100V	485011	89536	485011	1		
CL1	DIODE, FED, CURRENT REG.	393454	07910	TCR5290	1	1	
CR6	DIODE, LOW-LEAK, LO-CAP	375907	07263	FD7222	4	1	
CR7	DIODE, LOW-LEAK, LO-CAP	375907	07263	FD7222			REF
CR8	DIODE, LOW-LEAK, LO-CAP	375907	07263	FD7222			REF
CR9	DIODE, LOW-LEAK, LO-CAP	375907	07263	FD7222			REF
E1-E49	(SEE INSERT A, WIRE LIST)						
H1	SCREW, FHP, S/S, 6-32 X 1/4 (ON SHIELD)	385401	89536	385401	3		

Table 5-5. A4 AC/DC Scaling PCB Assembly (cont)

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	NO TE
MP1	SHIELD, AC/DC (NOT SHOWN)	502591	89536	502591	1		
MP2	SUPPORT, RES. NETWORK (ON SHIELD)	531046	89536	531046	1		
MP3	TERMINAL, FEED-THRU/TEFLON	529305	98291	011-6811-00-0-202	14		
MP4	TERMINAL, FEED-THRU/TEFLON	529297	98291	011-6812-00-0-206	9		
MP5	HEATSINK (WITH U17, U20)	354993	98978	TXC20CB	2		
Q2	XSTR, J-FET, N-CHAN	343830	89536	343830	5		2
Q3	XSTR, J-FET, N-CHAN	535039	89536	535039	1		1
Q6	XSTR, J-FET, N-CHAN	343830	89536	343830		REF	
Q7	XSTR, J-FET, N-CHAN	343830	89536	343830		REF	
Q8	XSTR, J-FET, N-CHAN	508697	21845	FS933	1		1
Q11	XSTR, J-FET, N-CHAN	429977	21845	F2811	1		1
Q12	XSTR, FET, N-CHAN	261578	89536	261578	3		1
Q13	XSTR, J-FET, N-CHAN	343830	89536	343830		REF	
Q14	XSTR, SI, PNP	229898	04713	MPS6522	1		1
Q15	XSTR, J-FET, N-CHAN	343830	89536	343830		REF	
Q16	XSTR, DUAL FET, N-CHAN	419283	89536	419283	1		1
Q17	XSTR, DUAL FET, N-CHAN	578799	89536	578799	1		1
Q18	XSTR, FET, N-CHAN	261578	89536	261578		REF	
Q19	XSTR, FET, N-CHAN	386730	12040	SF-1102	1		1
R2	RES, DEP. CAR, 47K +/-5%, 1/4W	348896	80031	CR251-4-5P47K	6		
R3	RES, DEP. CAR, 47K +/-5%, 1/4W	348896	80031	CR251-4-5P47K		REF	
R4	RES, DEP. CAR, 47K +/-5%, 1/4W	348896	80031	CR251-4-5P47K		REF	
R5	RES, DEP. CAR, 22K +/-5%, 1/4W	348870	80031	CR251-4-5P22K	1		
R8	RES, VAR. CERMET, 200 +/-10%, 1/2W	285148	89536	285148	3		
R9	RES, VAR. CERMET, 200 +/-10%, 1/2W	285148	89536	285148		REF	
R10	RES, COMP, 47K +/-5%, 1/4W	150219	01121	CB4735	2		
R11	RES, COMP, 47K +/-5%, 1/4W	150219	01121	CB4735		REF	
R12	RES, DEP. CAR, 100K +/-5%, 1/4W	348920	80031	CR251-4-5P100K	3		
R13	RES, DEP. CAR, 10K +/-5%, 1/4W	348839	80031	CR251-4-5P10K	3		
R14	RES, DEP. CAR, 10K +/-5%, 1/4W	348839	80031	CR251-4-5P10K		REF	
R15	RES, MTL FILM, 100K +/-1%, 1/8W	248807	91637	MFF1-81003F	2		
R17	RES, MTL FILM, 100K +/-1%, 1/8W	248807	91637	MFF1-81003F		REF	
R20	RES, DEP. CAR, 3.3K +/-5%, 1/4W	348813	80031	CR251-4-5P3K3	2		
R21	RES, DEP. CAR, 3.3K +/-5%, 1/4W	348813	80031	CR251-4-5P3K3		REF	
R23	RES, MTL FILM, 10K +/-1%, 1/8W	168260	91637	MFF1-81002F	2		
R24	RES, DEP. CAR, 4.3K +/-5%, 1/4W	441576	80031	CR251-4-5P4K3	1		
R25	RES, MTL FILM, 10K +/-1%, 1/8W	168260	91637	MFF1-81002F		REF	
R27	RES, VAR. 50 +/-10%, 1/2W	285122	89536	285122	1		
R28	RES, MTL FILM, 3.83K +/-1%, 1/8W	260323	91637	CMF553831F	1		
R29	RES, VAR. 2K +/-10%, 1/2W	285163	89536	285163	1		
R30	RES, MTL FILM, 3.65K +/-1%, 1/8W	168252	91637	CMF553651F	1		
R31	RES, MTL FILM, 392 +/-1%, 1/8W	260299	91637	MFF1-83920F	1		
R32	RES, DEP. CAR, 7.5K +/-5%, 1/4W	441667	80031	CR251-4-5P7K5	1		
R33	RES, DEP. CAR, 47K +/-5%, 1/4W	348896	80031	CR251-4-5P47K		REF	
R34	RES, MTL FILM, 3.57K +/-1%, 1/8W	226217	91637	MFF1-83571F	1		
R35	RES, DEP. CAR, 47K +/-5%, 1/4W	348896	80031	CR251-4-5P47K		REF	
R36	RES, DEP. CAR, 47K +/-5%, 1/4W	348896	80031	CR251-4-5P47K		REF	
R37	RES, DEP. CAR, 100 +/-5%, 1/4W	348771	80031	CR251-4-5P100E	1		
R38	RES, MTL FILM, 143K +/-1%, 1/8W	291336	91637	MFF1-81433F	1		
R39	RES, VAR. CERMET, 50K +/-10%, 1/2W	288290	89536	288290	1		

Table 5-5. A4 AC/DC Scaling PCB Assembly (cont)

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	NO TE
R40	RES, DEP. CAR, 4.7K +/-5%, 1/4W	348821	80031	CR251-4-5P4K7	3		
R41	RES, DEP. CAR, 4.7K +/-5%, 1/4W	348821	80031	CR251-4-5P4K7	REF		
R43	RES, VAR. CERMET, 100 +/-10%, 1/2W	285130	89536	285130	1		
R45	RES, COMP, 22M +/-5%, 1/4W	221986	01121	CB2265	1		
R46	RES, VAR. CERMET, 100K +/-10%, 1/4W	288308	89536	288308	2		
R49	RES, DEP. CAR, 43K +/-5%, 1/4W	442418	80031	CR251-4-5P43K	2		
R50	RES, DEP. CAR, 43K +/-5%, 1/4W	442418	80031	CR251-4-5P43K	REF		
R54	RES, VAR. CERMET, 25K +/-10%, 1/2W	289678	89536	289678	1		
R57	RES, DEP. CAR, 100K +/-5%, 1/4W	348920	80031	CR251-4-5P100K	REF		
R59	RES, DEP. CAR, 100K +/-5%, 1/4W	348920	80031	CR251-4-5P100K	REF		
R61	RES, VAR. CERMET, 10K +/-10%, 1/2W	285171	89536	285171	1		
R63	RES, DEP. CAR, 6.2K +/-5%, 1/4W	442368	80031	CR251-4-5P6K2	1		
R64	RES, DEP. CAR, 1 +/-5%, 1/4W	357665	80031	CR251-4-5P1E	1		
R65	RES, DEP. CAR, 10K +/-5%, 1/4W	348839	80031	CR251-4-5P10K	REF		
R66	RES, MTL FILM, 1K +/-1%, 1/8W	320333	91637	CMF551001F	1		
R67	RES, VAR. CERMET, 200 +/-10%, 1/2W	285148	89536	285148	REF		
R68	RES, DEP. CAR, 120K +/-5%, 1/4W	441386	80031	CR251-4-5P120K	1		
R70	RES, MTL FILM, 402K +/-1%, 1/8W	217984	91637	MFF1-84023F	1		
R71	RES, COMP, 2.7M +/-5%, 1/4W	193490	01121	CB2755	1		
R72	RES, DEP. CAR, 1.8K +/-5%, 1/4W	441444	80031	CR251-4-5P1K8	1		
R73	RES, VAR. CERMET, 100K +/-10%, 1/4W	288308	89536	288308	REF		
R75	RES, MTL FILM, 715 +/-1%, 1/8W	313080	91637	CMF557150F	1		
R76	RES, DEP. CAR, 4.7K +/-5%, 1/4W	348821	80031	CR251-4-5P4K7	REF		
1	RES. NETWORK, INPUT DIVIDER	510636	89536	510636	1		1
02	IC, LIN, QUAD, COMPARATOR	387233	12040	LM339N <i>ECG 834</i>	4		1
U3	IC, LIN, OP-AMP	478107	12040	LM308A	1		1
U4	IC, LIN, QUAD, COMPARATOR	387233	12040	LM339N	REF		
U5	IC, OP-AMP, J-FET INPUT	418780	12040	LF351	1		1
U6	IC, LIN, J-FET INPUT, DUAL OP-AMP	495192	12040	LF353BN	1		1
U7	IC, LIN, QUAD, COMPARATOR	387233	12040	LM339N	REF		
U8	IC, LIN, OP-AMP, J-FET INPUT	535856	01295	TL081ACL	1		1
U9	IC, LIN, QUAD, COMPARATOR	387233	12040	LM339N	REF		
U10	RES. NETWORK, OUTPUT DIVIDER	511196	89536	511196	1		1
U13	RESISTOR NETWORK	520387	89536	520387	1		1
U14	IC, LIN, OP-AMP	495051	18324	NE5534N	1		1
U15	IC, LIN, OP-AMP, PROGRAMMABLE, 8 PIN DIP	418913	12040	LM4250CN	1		1
U16	IC, OP-AMP, MONO, J-FET INPUT	524033	12040	LF356H	1		1
U17	IC, XSTR ARRAY	504191	89536	504191	2		1
U18	RES. NETWORK, RMS	511147	89536	511147	1		1
U19	IC, LIN, SELECTED	473777	89536	473777	1		1
U20	IC, XSTR ARRAY	504191	89536	504191	REF		
VR1	DIODE, ZENER, 6.2V +/-5%	325811	04713	1N753A	2		1
VR2	DIODE, ZENER, 6.2V +/-5%	325811	04713	1N753A	REF		
VR3	DIODE, ZENER, 9.1V +/-5%	386557	04713	1N960B	2		1
VR4	DIODE, ZENER, 9.1V +/-5%	386557	04713	1N960B	REF		
W1-W25	WIRE, JUMPER AND HOOK-UP (SEE INSERT A, WIRE TERMINATIONS Figure 5-5)						

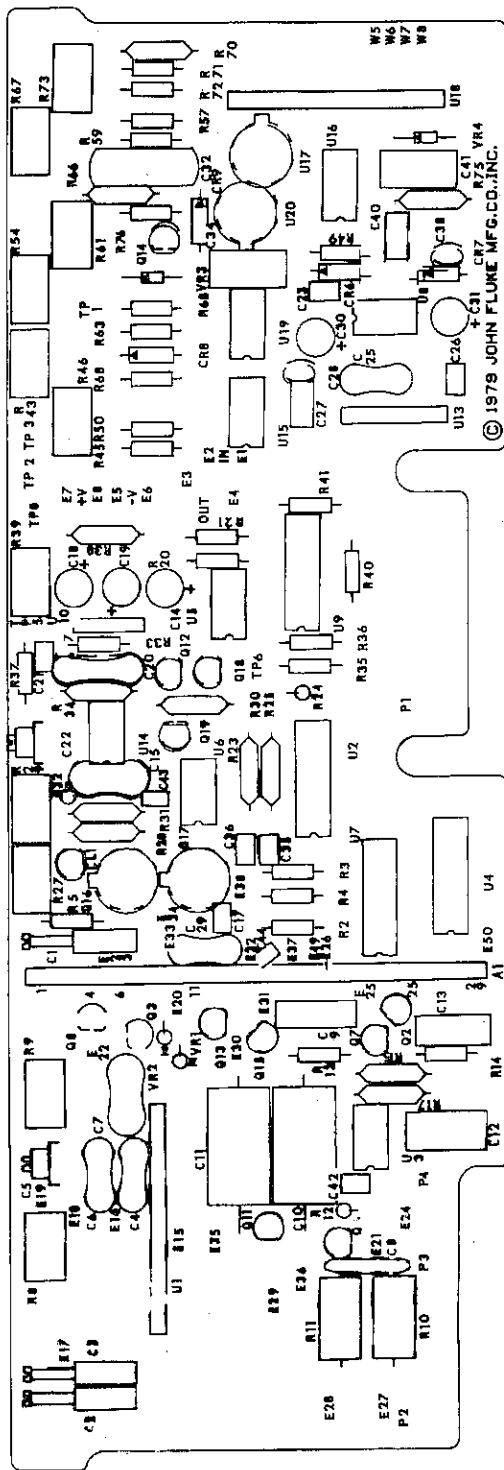

WIRE TERMINATIONS

WIRE LIST		
NO.	FROM	TO
W22	E33	E34
W23	E35	E36
W24	E37	E38
W25	E49	E50

WIRE LIST		
NO.	FROM	TO
W15	E22	E23
W16	E24	E25
W17	E25	E26
W18	E27	E28
W19	E29	E30
W20	E31	E32
W21	E32	E33

WIRE LIST		
NO.	FROM	TO
W8	E13	E14
W9	E15	E16
W10	E17	E18
W11	E16	E18
W12	E18	E19
W13	E19	E20
W14	E21	E22

WIRE LIST		
NO.	FROM	TO
W1	E1	E2
W2	E3	E4
W3	E5	E6
W4	E7	E8
W5	E10	E11
W6	E11	E12
W7	E12	E13

INSERT "A"

Figure 5-5. A4 AC/DC Scaling PCB Assembly

Table 5-6. A/D And Ohms Converter PCB Assembly


REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	NOTE
A5	⊗ A/D AND OHMS CONVERTER PCB ASSEMBLY FIGURE 5-6 (8860A-4005T)	526673	89536	526673	REF		
A5A1	IC, OHMS RANGE HYBRID	496356	89536	496356	1	1	
A5A2	IC, A-D SWITCHING HYBRID	496364	89536	496364	1	1	
C1	CAP, CERAM, .05 UF +/-20%, 50V	175232	56289	C023B101H253M	3		
C2	CAP, FXD, .01 UF +/-20%, 400V	402818	72445	C280MAF/A10K	1		
C3	CAP, CERAM, 33 PF +/-2%, 100V	354852	80031	2222-638-10339	4		
C5	CAP, CERAM, 33 PF +/-2%, 100V	354852	80031	2222-638-10339	REF		
C6	CAP, CERAM, .005 UF +/-20%, 50V	175232	56289	C023B101E502M	REF		
C7	CAP, POLYPRO, 0.47 UF +/-5%, 50V	364042	84411	JF78B	1		
C8	CAP, MICA, 150 PF +/-5%, 500V	148478	02799	DM150F101J	2		
C9	CAP, MICA, 150 PF +/-5%, 500V	148478	02799	DM150F101J	REF		
C10	CAP, CERAM, 33 PF +/-2%, 100V	354852	80031	2222-638-10339	REF		
C11	CAP, CERAM, .005 UF +/-20%, 50V	175232	56289	C023B101E502M	REF		
C12	CAP, MICA, 430 PF +/-5%, 500V	177980	02799	DM430F101J	1		
C13	CAP, POL. CAR, 2.2 UF +/-10%, 100V	306522	80031	C280MC	1		
C14	CAP, FXD, 1MF +/-10%, 100V	447847	73445	C280MAH/A1M	2		
C15	CAP, FXD, 1MF +/-10%, 100V	447847	73445	C280MAH/A1M	REF		
C16	CAP, CERAM, 100 PF +/-2%, 100V	369173	80031	2222-638-1010	1		
C17	CAP, MICA, 2 PF +/-10%, 500V	175208	02799	DM02C101D	1		
C18	CAP, MICA, 8 PF +/-10%, 500V	216986	02799	DM08C101K	1		
C19	CAP, CERAM, 33 PF +/-2%, 100V	354852	80031	2222-638-10339	REF		
C20	CAP, MICA, 270 PF +/-5%, 500V	148452	02799	DM270F101J	1		
CL1	DIO, (FED) 0.47 NOM., 400 MW	393454	07910	TCR5290	2	1	
CL2	DIO, (FED) 0.47 NOM., 400 MW	393454	07910	TCR5290	REF		
CR1	DIO, SI, LO-CAP/LO-LEAK	375907	07263	FD7223	7	2	
CR5	DIO, SI, LO-CAP/LO-LEAK	375907	07263	FD7223	REF		
CR6	DIO, SI, LO-CAP/LO-LEAK	375907	07263	FD7223	REF		
CR8	DIO, SI, LO-CAP/LO-LEAK	375907	07263	FD7223	REF		
CR9	DIO, SI, LO-CAP/LO-LEAK	375907	07263	FD7223	REF		
CR10	DIO, SI, LO-CAP/LO-LEAK	375907	07263	FD7223	REF		
CR11	DIO, SI, LO-CAP/LO-LEAK	375907	07263	FD7223	REF		
E	JUMPER WIRE CONNECTIONS						
J1	CONN, HEADER	519751	89536	519751	1		
MP1	SOCKET, COMPONENT LEAD (NOT SHOWN)	376418	22526	75060-007	4		
MP2	TRANSISTOR PAD, SPACER (NOT SHOWN)	152207	07047	10123-DAP	1		
Q3	XSTR, J-FET, N-CHAN	343830	89536	343830	6	2	
Q4	XSTR, FET	429977	89536	429977	2	1	
Q5	XSTR, FET	429977	89536	429977	REF		
Q6	XSTR, J-FET, N-CHAN	343830	89536	343830	REF		
Q7	XSTR, J-FET, N-CHAN	343830	89536	343830	REF		
Q8	XSTR, J-FET, N-CHAN	343830	89536	343830	REF		
Q9	XSTR, J-FET, N-CHAN	343830	89536	343830	REF		
Q10	XSTR, J-FET, N-CHAN	343830	89536	343830	REF		
Q11	XSTR, J-FET, N-CHAN	419283	32293	ITS3079	1	1	
Q12	XSTR, NPN	218396	89536	218396	1	1	
R1	RES, VAR, SIDE-ADJUST, 20K	291609	75378	360S-203AZ	1		
R2	RES, VAR, 2K +/-10%	285163	75378	360T-202AZ	1		
R3	RES, VAR, 200 +/-10%	285148	75378	360T-200AZ	3		


Table 5-6. A/D And Ohms Converter PCB Assembly (cont)

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	NO TE
R4	RES, COMP, 4.7M +/-5%, 1/4W	220046	01121	CB4755	1		
R5	RES, DEP. CAR, 10K +/-5%, 1/4W	348839	80031	CR251-4-5P10K	1		
R6	RES, MTL. FILM, 10K +/-1%, 1/8W	168260	91637	CMF55103	2		
R7	RES, MTL. FILM, 10K +/-1%, 1/8W	168260	91637	CMF55103	REF		
R8	RES, DEP. CAR, 2.0K +/-5%, 1/4W	441469	80031	CR251-4-5P2K	2		
R9	RES, VAR, 20 +/-10%	285114	75378	360T-020A2	1		
R10	RES, VAR, 50 +/-10%	285122	75378	360T-050A2	1		
R11	RES, VAR, 200 +/-10%	285148	75378	360T-200AZ	REF		
R12	RES, 54.7K +/-0.05%, 1/4W	492223	89536	492223	1		
R17	RES, VAR, 50, RECT.	267815	11236	190PC500B	1		
R18	RES, VAR, 100K +/-10%	288308	75378	360T-102A2	1		
R19	RES, DEP. CAR, 1M +/-5%, 1/4W	348987	80031	CR251-4-5P1M	1		
R20	RES, DEP. CAR, 10 +/-5%, 1/4W	340075	80031	CR251-4-5P10E	1		
R21	RES, DEP. CAR, 2.0K +/-5%, 1/4W	441469	80031	CR251-4-5P2K	REF		
R22	RES, COMP, 1.5M +/-5%, 1/4W	182857	01121	CB1555	1		
R23	RES, COMP, 10 +/-5%, 1/4W	147868	01121	CB1005	1		
R24	RES, DEP. CAR, 1K +/-5%, 1/4W	343426	80031	CR251-4-5P1K	2		
R25	RES, DEP. CAR, 33K +/-5%, 1/4W	348888	80031	CR251-4-5P33K	2		
R26	RES, DEP. CAR, 8.2K +/-5%, 1/4W	441675	80031	CR251-4-5P8K2	1		
R27	RES, DEP. CAR, 1K +/-5%, 1/4W	343426	80031	CR251-4-5P1K	REF		
R28	RES, VAR, 200 +/-10%	285148	75378	360T-200AZ	REF		
R29	RES, VAR, 5K +/-10%	288282	75378	360T-052A2	2		
R30	RES, VAR, 5K +/-10%	288282	75378	360T-052A2	REF		
R31	RES, DEP. CAR, 82K +/-5%, 1/4W	348912	80031	CR251-4-5P82K	1		
R32	RES, DEP. CAR, 200K +/-5%, 1/4W	441485	80031	CR251-4-5P200K	1		
R36	RES, DEP. CAR, 68K +/-5%, 1/4W	376632	80031	CR251-4-5P68K	1		
R37	RES, MTL. FILM, 6.81K +/-1%, 1/8W	268417	91637	CMF556813F	1		
R38	RES, MTL. FILM, 402K +/-1%, 1/8W	217984	91637	CMF554023	1		
R39	RES, DEP. CAR, 33K +/-5%, 1/4W	348888	80031	CR251-4-5P33K	REF		
R40	RES, MTL. FILM, 3.74K +/-1%, 1/8W	272096	91637	CMF553743F	2		
R41	PART OF U22 REF AMP SET						
R42	PART OF U22 REF AMP SET						
R43	RES, MTL. FILM, 3.74K +/-1%, 1/8W	272096	91637	CMF553743F	REF		
R44	RES, COMP, 3.3K +/-5%, 1/4W	148056	01121	CB3325	1		
R45	RES, MTL. FILM, 64.9K +/-1%, 1/8W	288530	91637	CMF556493F	1		
R46	RES, MTL. FILM, 110K +/-1%, 1/8W	234708	91637	CMF551103F	1		
R47	RES, MTL. FILM, 113K +/-1%, 1/8W	291302	91637	CMF551133F	1		
TP	TEST POINTS						
U1	RESISTOR NETWORK	511097	89536	511097	1	1	
U2	IC, OP AMP	413732	12040	LM308N	2	1	
U4	IC, OP AMP	413732	12040	LM308N	REF		
U5	IC, LINEAR	478107	12040	LM308A	1	1	
U6	IC, LIN, QUAD COMPARATOR	387233	12040	LM339N	6	2	
U7	IC, LIN, QUAD COMPARATOR	387233	12040	LM339N	REF		
U10	RES NETWORK, 5.6K	511048	89536	511048	1	1	
U11	IC, LIN, J-FET	495192	12040	LF353BN	3	1	
U12	IC, LIN, OP AMP	495051	18324	NE5534N	1	1	
U13	IC, LIN, J-FET	495192	12040	LF353BN	REF		
U14	IC, LIN, NPN, 5-XSTR, SIL. ARRAY	248906	02735	CA3046	1	1	
U15	IC, LIN, QUAD COMPARATOR	387233	12040	LM339N	REF		

Table 5-6. A/D And Ohms Converter PCB Assembly (cont)

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	N O T E
U16	IC, LIN, QUAD COMPARATOR	387233	12040	LM339N	REF		
U17	IC, LIN, QUAD COMPARATOR	387233	12040	LM339N	REF		
U18	IC, LIN, QUAD COMPARATOR	387233	12040	LM339N	REF		
U19	RES NETWORK, MIXED VALUE +/-2%, 1/8W	520379	89536	520379	1	1	
U20	RES NETWORK, MIXED VALUE +/-2%, 1/8W	520361	89536	520361	1	1	
U21	⊗ IC, C-MOS, DUAL MULTIPLEXER	408369	95303	CD4556BE	1	1	
U22	REF AMP SET (WITH R41 & R42)	523407	89536	532407	1	1	
U23	IC, LIN, J-FET	495192	12040	LF353BN	REF		
W4-W8	JUMPER WIRE CONNECTIONS						

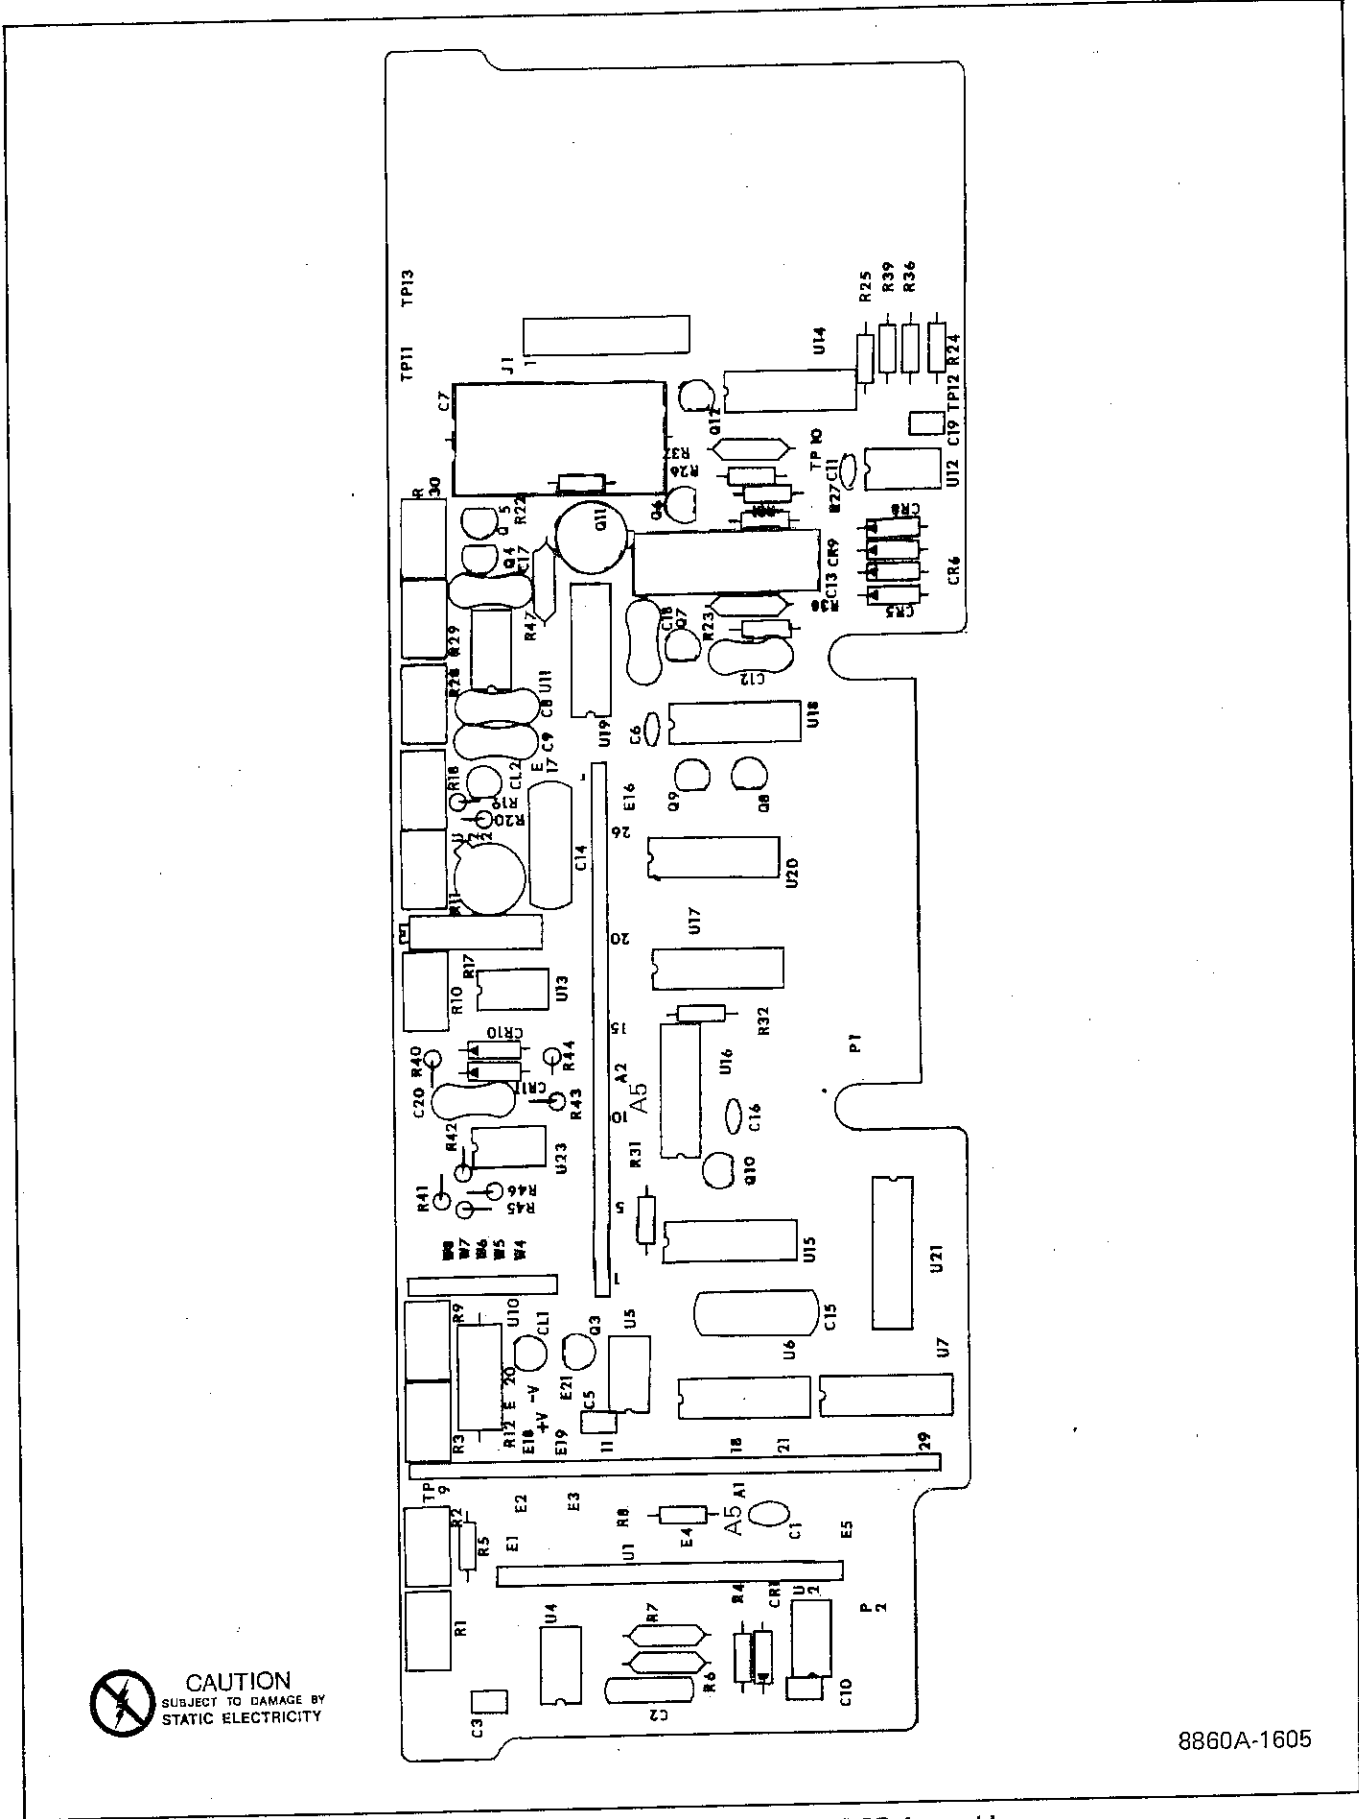


CAUTION
 SUBJECT TO DAMAGE BY
 STATIC ELECTRICITY

8860A-1605

Figure 5-6. A5 A/D and Ohms Converter PCB Assembly

Section 6 Option Information

TABLE OF CONTENTS

OPTION	DESCRIPTION	PAGE
-004	Calculating Controller	004-1
-005	IEEE-488 Interface	005-1
-006	Rear Input	006-1
-007	External Reference	007-1

6-1. INTRODUCTION

This section of the manual contains service information for the 8860A options. Each option has its own subsection which includes: a theory of operation, trouble-

shooting information, and a list of replaceable parts. The schematics for the options are located in Section 8. The option number is used in the page and paragraph numbers of each option. For instance, option -004 starts on page 004-1.

Option -004

Calculating Controller

004-1. THEORY OF OPERATION

004-2. The Calculating Controller, Option (-004) is composed of the following four circuit boards. The schematic diagram for each circuit board is located in Section 8. A simplified block diagram is shown in Figure 004-1.

- Calculator/Printer PCB Assembly
- Rear Interface PCB Assembly
- Memory Cartridge PCB Assembly
- Control Keyboard PCB Assembly

004-3. The first two boards listed are connected with a ribbon cable and are installed inside the 8860A chassis. The latter two boards are external to the chassis and plug into the connectors on the Rear Interface board. The Calculating Controller main board is described first.

004-4. Local/Remote Switching

004-5. Selecting the local or remote control function switches the program memory which directs the out-guard microprocessor. In local, the local program memory is in control. When remote is selected, the option program memory is in control.

004-6. The local program memory directs the operations mentioned under Out-guard Processor Software in the Theory of Operation for the basic instrument. The additional operations required by the Calculating Controller option are directed by the option program memory when the remote control function is selected.

004-7. In remote, the option program memory calls parts of the local program memory as subroutines. For example, the option program memory calls on the local program memory routine to scan the keyboard and strobe the display. When the 8860A is switched back to local, control returns to the local program memory.

004-8. Option Program Memory

004-9. The program memory is split between two ROMs

(U19 and U10) on the Calculating Controller main board. The active ROM is determined by a group of gates (U17). The out-guard microprocessor controls these gates via P26. The ROMs are custom devices, mask-programmed with the Calculating Controller software. Table 3-2 shows how the two ROMs are accessed using ports P23, P26, and P50.

004-10. Calculator

004-11. The number-oriented processor (U5) executes all the math functions and contains the XYZT stack. A divide-by-5 circuit (U16) provides a 400-kHz clock for U5. Processor U5 interfaces to the out-guard microprocessor through U2, an I/O Expander with RAM. For example, when the square root function is executed, U5 performs the calculation and U2 reports the result back to the out-guard microprocessor for display. U2 also receives and responds to switch closures from the handheld Control Keyboard. A 256-byte RAM in U2 holds the contents of the addressable registers R10-R49 and the print buffer.

004-12. The two ports of U10 communicate with the rear panel Data Port. The Data Port is the interface for the optional printer or the user I/O functions, R50-R57. Tri-state buffers U7, U11, U12, and U13 provide bi-directional data buffering to the Data Port. U10 also contains a 2 kbyte ROM.

004-13. Data Bus and Address Bus

004-14. The out-guard microprocessor communicates over the data bus DB0-DB7 with the ROM and I/O expanders (U2, U10, and U19), the Memory Cartridge, the optional printer, and the User I/O. Control lines which identify and route each byte on the data bus are $\overline{\text{ALE}}$ (address latch enable), $\overline{\text{PSEN}}$ (program store enable), $\overline{\text{RD}}$, and $\overline{\text{WR}}$.

- ALE (address latch enable) is a steady 400 kHz.
- PSEN (program select enable) is active whenever

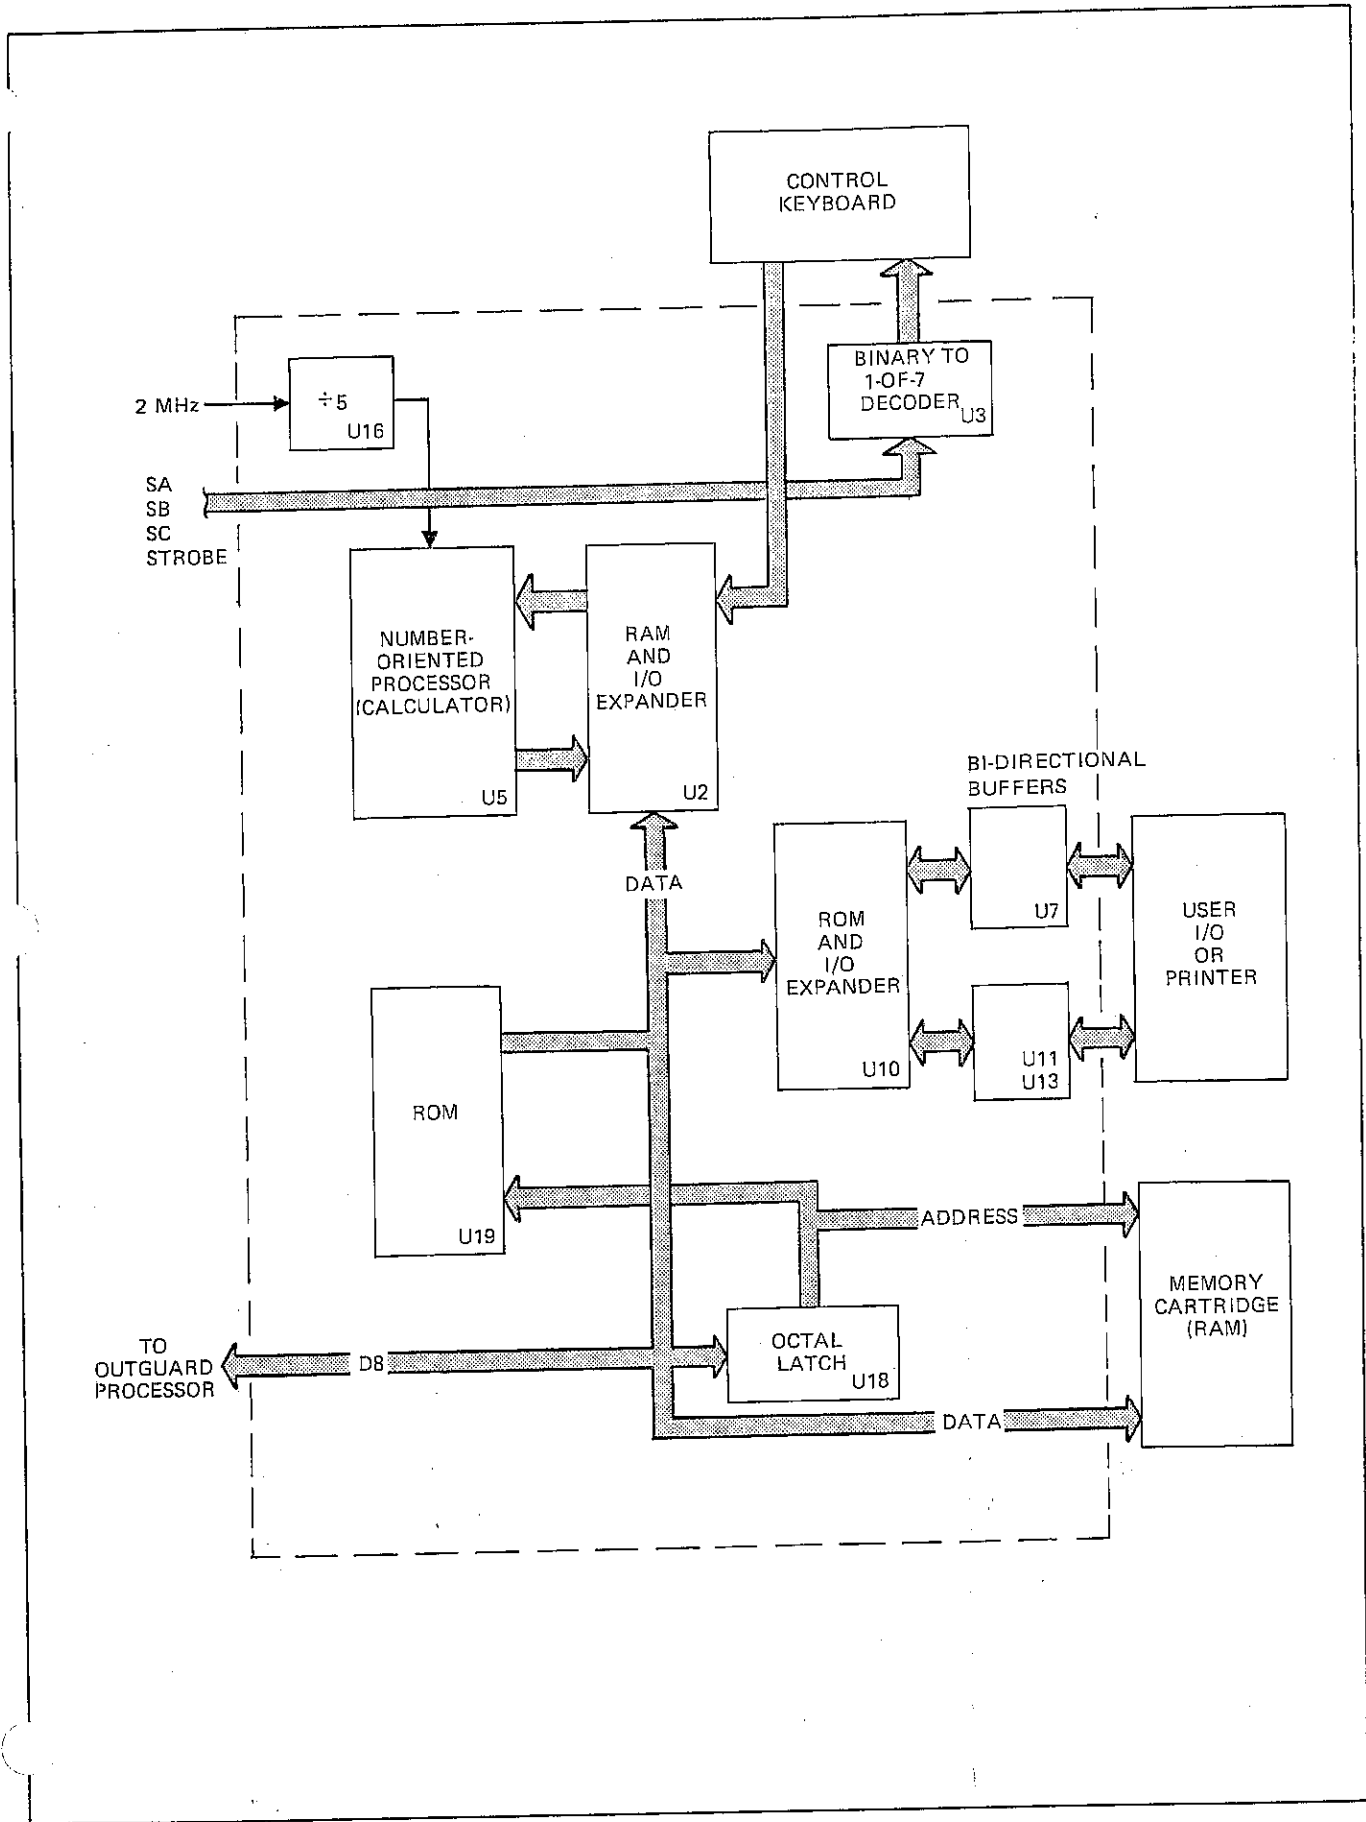


Figure 004-1. Calculating Controller Option-004 Block Diagram

the processor is reading its program ROM, which it does regularly.

- RD (read) and WR (write) are used only when Option -004 or -005 is installed. They are active when the processor is using the data bus for communication other than reading the program memory. For instance, they are active when the processor is reading the Control Keyboard.

004-15. The address and data for ROM U10 are multiplexed over the data bus. By contrast, the address and data for ROM U19 and the Memory Cartridge RAM are carried on separate lines. The 8-bit latch U18 stores the address for these latter two devices. The upper four bits of address, A8-A11, travel on their own lines, P20-P23, to U19 and U10.

004-16. Power Supply

004-17. All circuits operate off the +5V out-guard supply. IC U5, the only P-channel MOS device, requires an additional -4V supply derived through CR1, CR2, CR3, Q1, and the power transformer secondary.

004-18. Three level shifters in U4 convert a TTL level (0V to 5V) to a PMOS level (-4V to +5V) for pins 7, 9, and 11 of U5.

004-19. Memory Cartridge (Schematic 8860A-1013)

004-20. The Memory Cartridge contains two CMOS RAM devices to hold addressable registers R00 through R09 and all of programmable memory, steps 00 through 99. All data and address lines are pulled to ground through 100 k Ω resistors to keep the current drain at a minimum.

004-21. Two silver-oxide watch batteries (TB1, TB2) supply power to the RAMs when the cartridge is not receiving power from the 8860A. Three diodes (CR1 on the memory Cartridge board; CR4 and CR5 on the Calculating Controller main board) prevent the +5V supply from

attempting to charge the batteries. The RAM devices draw a current of 50 nA to 1 μ A from the batteries at approximately 2.5V.

004-22. Jumper W1 at pin 22 of U1 allows power to be removed from U1 during troubleshooting. If it is discovered that the Memory Cartridge is drawing an excessive amount of current from the batteries, remove this jumper to identify the faulty RAM.

004-23. TROUBLESHOOTING THE CALCULATING CONTROLLER

004-24. Table 004-1 contains troubleshooting information for the Calculating Controller. Before using the table, remove the Option -004 PCB from its slot in the 8860A, and check the operation of the basic DMM. If the DMM is operating properly, reinstall the PCB, and refer to the table.

004-25. The troubleshooting table is a series of symptoms and solutions. Check the unit for the symptoms in sequence. When a symptom is identified, clear the fault using the solutions listed for that fault. All devices mentioned in the table are located on the Calculating Controller PCB.

CAUTION

To avoid instrument damage, remove power from the 8860A before unplugging the circuit board or removing plug-in devices.

004-26. LIST OF REPLACEABLE PARTS

004-27. A list of replaceable parts for the Calculating Controller is given in Table 004-2. Refer to Section 5 of this manual for ordering information.

CAUTION

Indicated devices are subject to damage by static discharge.

Table 004-1. Calculating Controller Troubleshooting

SYMPTOM	INSTRUCTIONS
<p>1. The 8860A does not operate in local when the -004 Option PCB is installed, but works when the board is removed.</p> <p>2. With the option installed, the 8860A operates in local but not in remote.</p>	<ul style="list-style-type: none"> • Suspect the Memory Cartridge, U19, U2 or U10. • Remove these devices one at a time, until the basic instrument operates normally (in local). These devices are all in sockets and all sit on the internal bus. Replace the device which clears the fault. • Replace U10, U19, U2, and U5. • Check U17 (pin 6 is high when pins 4 and 10 are both high). • Check U18 as described in step 7. • Check U12 for high state at pin 9. • Check U16 for 2 MHz at pin 1, and 400 kHz at pin 8. • Check U4 for 400 kHz at pin 2, +4.5V to -3.5V swing. • Check U5, pin 21, for a dc voltage between -3.5V and -4.5V (negative supply). • Check U5, pin 11, for a dc voltage between -3.5V and -4.5V (release of initial reset). • Check U2, pin 28, for a low state (drives U5, pin 11).
<p>3. Cannot store or recall Memory Cartridge data</p>	<ul style="list-style-type: none"> • Check Q2, Q3, U14 (on Option -004 mainboard); pin 11 of U14 should be high after initial turn-on delay. • Check U15, pin 11, for continuous switching. • Check control lines as described in step 8.
<p>4. User I/O and/or Print functions do not work.</p>	<ul style="list-style-type: none"> • Replace U10. Check U7, U11, and U13 as follows (with nothing connected to the data port): <ul style="list-style-type: none"> • RCL 50 causes pin 1 of U7 and U11 to go low. • ST0 50 causes pin 1 of U13 and U7 to go low. • Check U12, pins 13 and 14, and U10 pin 31 for a low state when nothing is connected to the data port. • With the printer connected (make sure the printer is a 2020A with Option -001 installed; Option -004 or a Model 2030A Printer will also work): <ul style="list-style-type: none"> • U12, pins 14 and 13, and U10 pin 31 should all be high when the printer is on. Pins 1, 6, and 7 of U7 and pin 1 of U11 should remain low for the duration of a print function (Print X, for example). During this time, 18 pulses should occur on pins 4, 5, 9, and 10 of U7 and on pins 37 and 39 of U10.
<p>5. Control Keyboard cannot be read</p>	<ul style="list-style-type: none"> • Check U3; outputs should sequentially pulse low. • Replace U2 if pins 33 through 36 switch, but are not affected when a key is pressed.
<p>6. Math Functions and XYZT Stack are inoperative.</p>	<ul style="list-style-type: none"> • Check the following points for switching when a key is pressed (x-exchange-y key, for instance): <ul style="list-style-type: none"> • Pin 10 of U2, \overline{WR} (normally high), for one negative pulse. • Pin 6 of U15 (normally low) for one positive pulse. • Pin 8 of U15 (normally high) for approximately 12 pulses. • Pins 1 and 3 of U14 (normally high) for approximately 12 pulses. • Pin 4 of U14 (normally high) for one negative pulse. • Pin 5 of U12 (normally high) for approximately 12 pulses. • Check pin 9 of U12 (normally low) to go high on Err 99.
<p>7. Faulty Address Latch (U18)</p>	<ul style="list-style-type: none"> • Check U18 with a dual-trace scope. Trigger the scope on ALE and look at the input and output of each latch. If ALE and the latch are working properly, then the latch output follows the latch input when ALE is high. The latch input is stored when ALE goes low.
<p>8. Faulty Control Line</p>	<ul style="list-style-type: none"> • Check \overline{PSEN}, pin 20 of U19, for continuous switching. • Check ALE, pin 11 of U2, for continuous switching. • Check \overline{RD}, pin 9 of U2, for continuous switching.

Table 004-2. Calculating Controller Assembly

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	N O T E
-004	CALCULATING CONTROLLER ASSEMBLY FIGURE 004-2 (8860A-004)	ORDER	BY	OPTION -004			
	CONTROL KEYBOARD	533588	89536	533588	1		
	MEMORY CARTRIDGE	Y8833	89536	Y8833	1		
	CALCULATOR/PRINTER PCB ASSEMBLY	516328	89536	516328	1		
H1	HARDWARE KIT	512400	89536	512400	2		
MP1	PANEL, (SUB) CAL PRINTER	531038	89536	531038	1		
MP2	INSULATOR	541862	89536	541862	1		
MP3	CUP	541888	89536	541888	1		


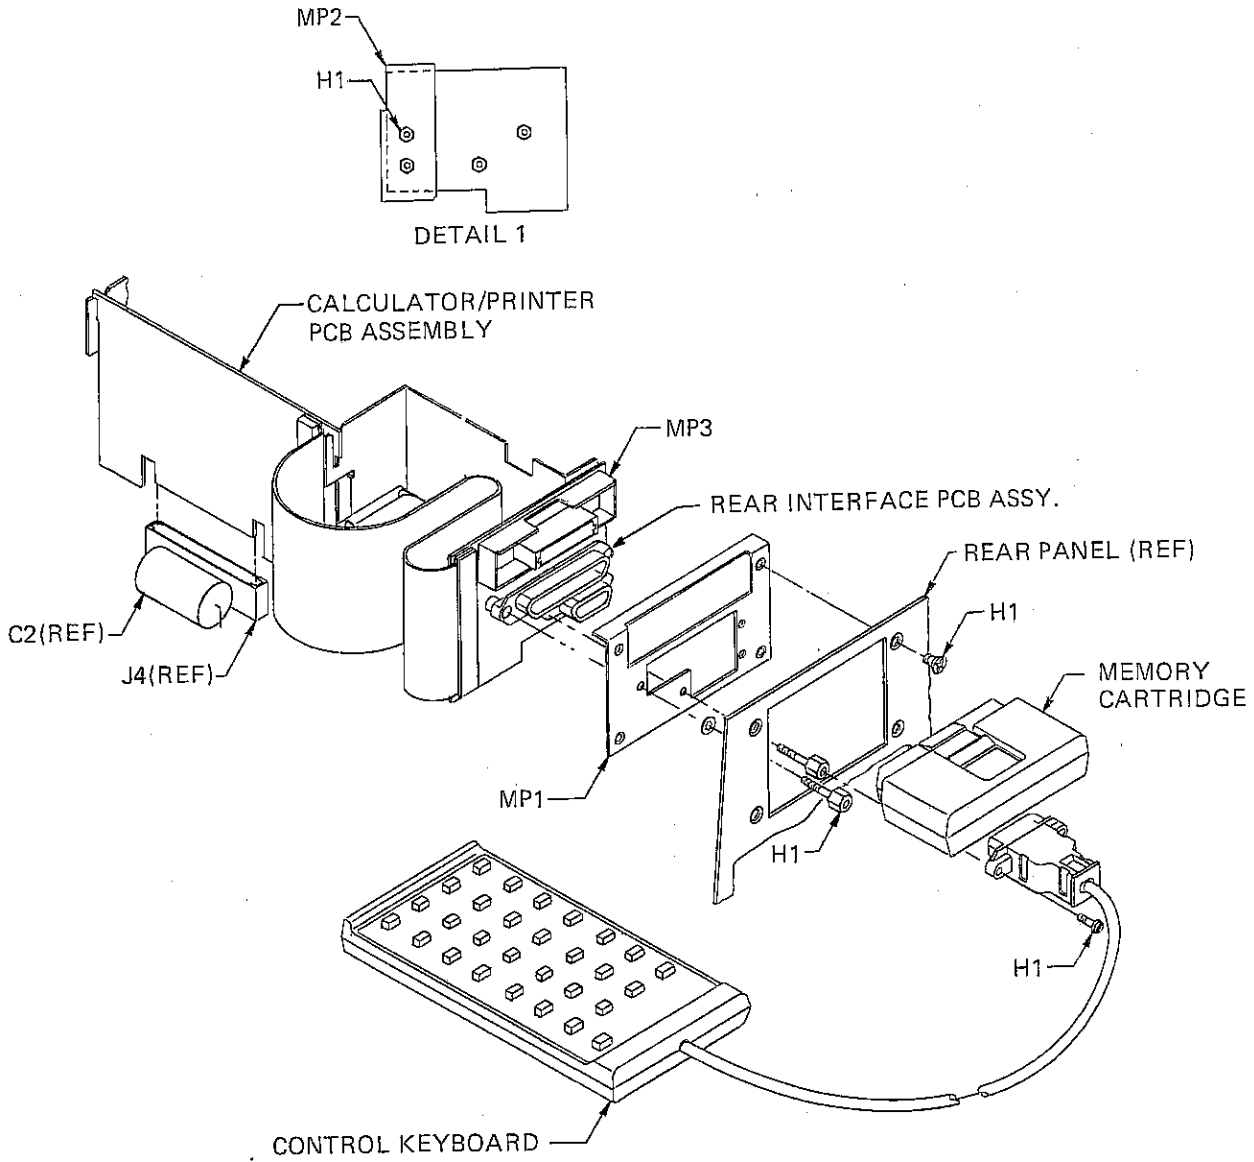


Figure 004-2. Calculating Controller Assembly


Table 004-3. Control Keyboard Assembly

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	N O T E
	CONTROL KEYBOARD ASSEMBLY FIGURE 004-3 (8860A-4026)	533588	89536	533588			REF
H1	SCREW, FHP, 4-40 X 7/16	542225	89536	542225	2		
MP1	CASE, FRONT	509406	89536	509406	1		
MP2	CASE, REAR	509281	89536	509281	1		
MP3	BUTTON, SLIDE SWITCH (W/S10)	509331	89536	509331	1		
MP4	FOOT, CASE	507624	89536	507624	4		
MP5	BUTTON, GREY	509398	89536	509398	14		
MP6	BUTTON, ORANGE	509364	89536	509364	1		
MP7	BUTTON, WHITE	509372	89536	509372	12		
MP8	BUTTON, DARK GREY	509257	89536	509257	1		
MP9	DECAL	507616	89536	507616	1		
MP10	SPRING (ALL SWITCHES)	414516	00779	62353-3	28		
MP11	CONTACT, FIXED (ALL SWITCHES)	416875	00779	62380-4	28		
P1	HEADER, 14-PIN	519652	22526	65521-114	1		
S10	SWITCH, SLIDE (W/MP3)	477984	79727	GS-115	1		
W1	CALCULATOR CABLE	534099	89536	534099	1		
X	CALCULATOR KEYBOARD PCB	ORDER	NEXT	HIGHER ASSY.			

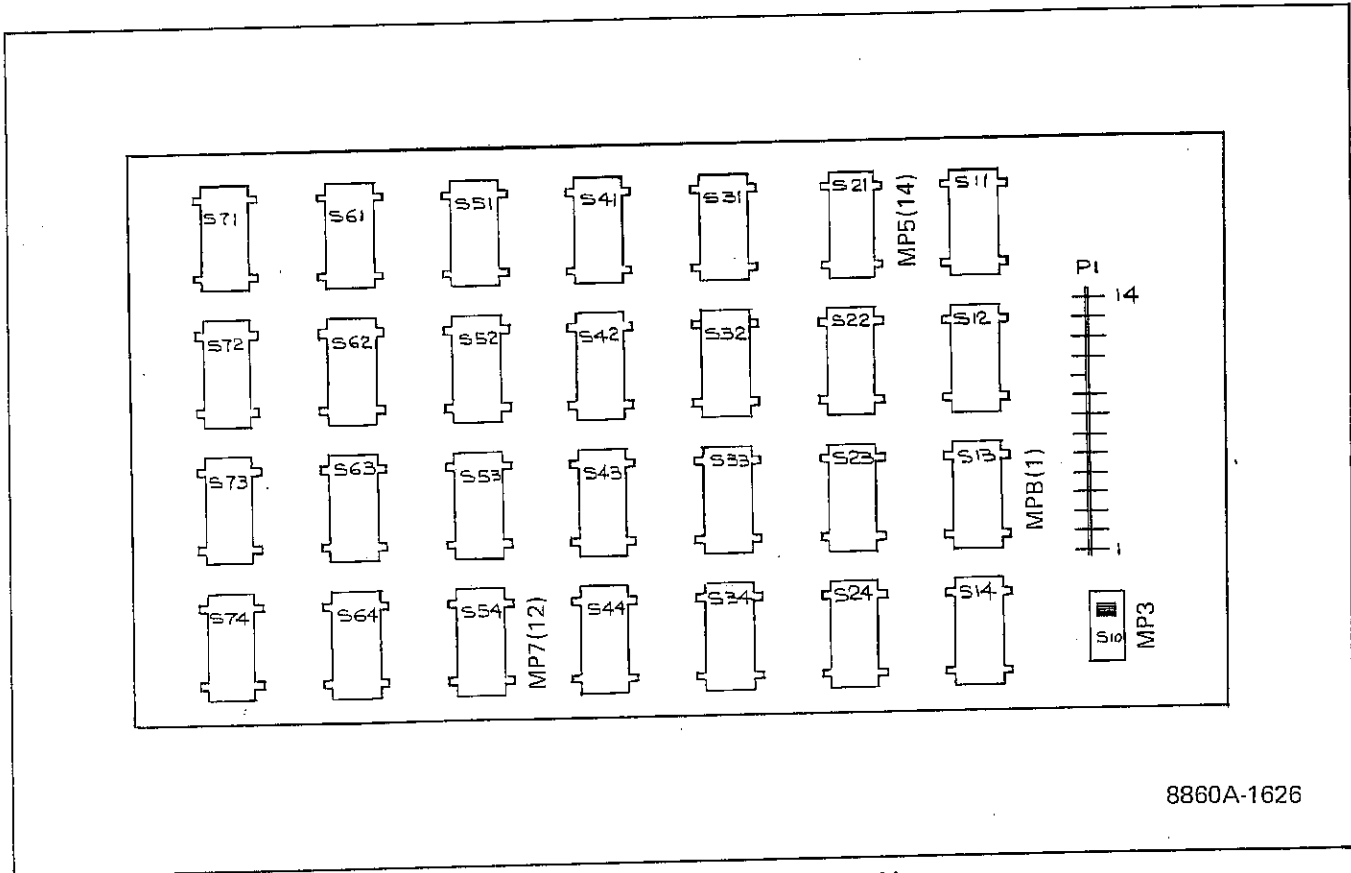

8860A-1626

Figure 004-3. Control Keyboard PCB Assembly

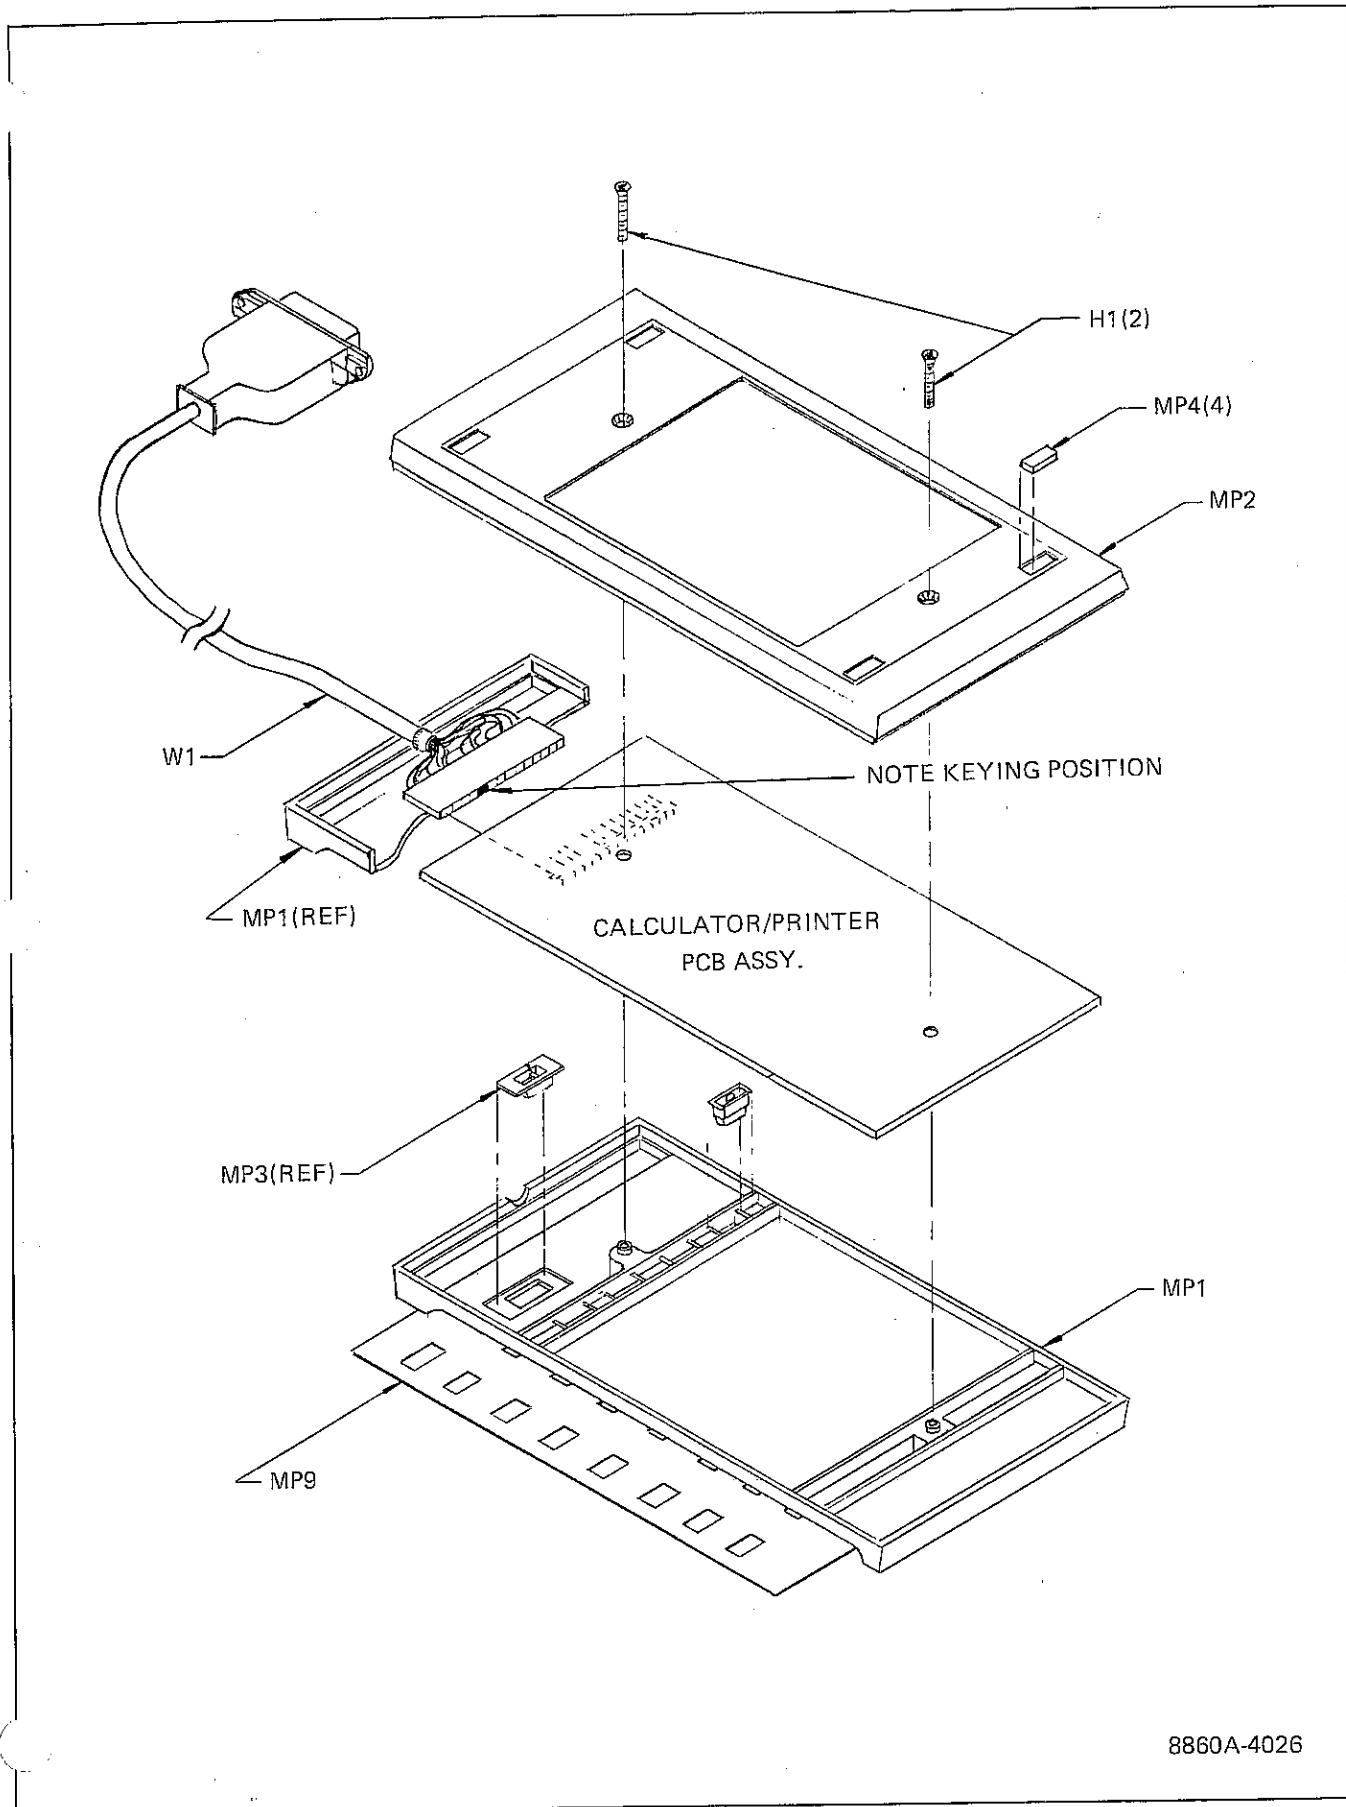


8860A-4026

Figure 004-3. Control Keyboard PCB Assembly (cont)

Table 004-4. Memory Cartridge

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	NOTE
⊗ MEMORY CARTRIDGE FIGURE 004-4 (Y8833)		ORDER	BY	Y8833			
MEMORY PCB ASSEMBLY							
BT1	BATTERY, SILVER OXIDE	520221	89536	520221	2		A
BT2	BATTERY, SILVER OXIDE	520221	89536	520221	REF		
C1	CAP, CER, 0.22 UF +/-20%, 50V	309849	71590	CW30C224K	1		B
CR1	DIO, SI, HI-SPEED SWITCHING	203323	07910	1N4448	1	1	B
H1	SCREW FHP, 6-20 X 5/8	529479	89536	529479	2		
H2	SPRING, BATTERY CONTACT	525287	89536	525287	1		
MP1	CASE, BOTTOM	509240	89536	509240	1		
MP2	CASE, TOP	509323	89536	509323	1		
MP3	DECAL, MEMORY MODULE	534438	89536	534438	1		B
MP4	SPRING CONTACT (NOT SHOWN)	525287	89536	525287	1		
P1	BOARD CONNECTION				2		B
R1	RES, DEP. CAR, 100K +/-5%, 1/4W	348920	89536	348920	REF		B
R2	RES, DEP. CAR, 100K +/-5%, 1/4W	348920	89536	348920	2	1	B
U1	⊗ IC, C-MOS, STATIC RAM, 3-STATE OUTPUT	429860	89536	MCM51L01P65	2	1	B
U2	RESISTOR NETWORK, 100K	461038	89536	461038	2		B
U3	RESISTOR NETWORK, 100K	461038	89536	461038	REF		B
U4	⊗ IC, C-MOS, STATIC RAM, 3-STATE OUTPUT	429860	89536	MCM51L01P65	REF		B
W1	JUMPER WIRE	529271	89536	529271	REF		B
A	WARNING, DO NOT RECHARGE! BATTERIES MAY EXPLODE OR LEAK.						
B	ITEMS ON MEMORY PCB ASSEMBLY.						

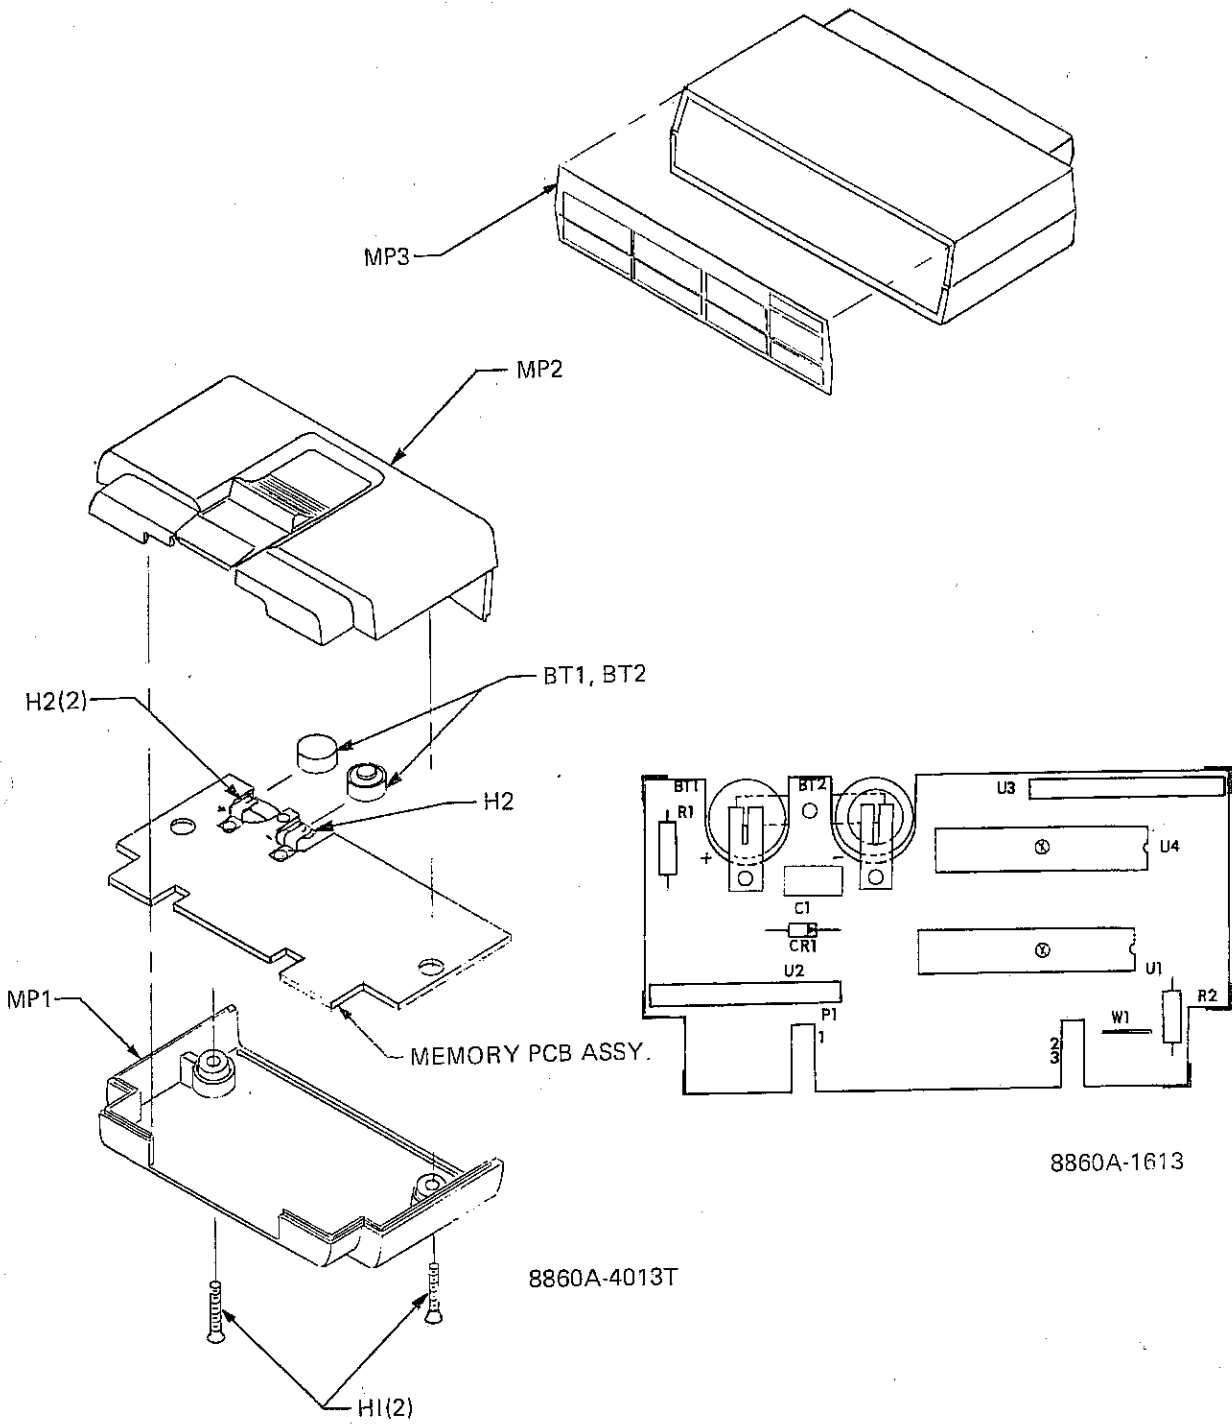

8860A-4013T

8860A-1613

 CAUTION
SUBJECT TO DAMAGE BY
STATIC ELECTRICITY


Figure 004-4. Memory Cartridge

Table 004-5. Calculator/Printer PCB Assembly


REF DES.	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	N O T E
	⊗ CALCULATOR/PRINTER PCB ASSEMBLY FIGURE 004-5 (8860A-4014T)	516328	89536	516328			REF
	REAR INTERFACE PCB ASSEMBLY	ORDER	NEXT	HIGHER ASSEMBLY			
C1	CAP, TA, 47 UF +/-20%, 20V	348516	56289	A96D476X0020KE4			1
C2	CAP, TA/DISC, 10 UF +/-20%, 10V	176214	56289	196D106X0010KA1			1
C3	CAP, TA, 15 UF, 20V	519686	56289	196D156X0020KE4			1
C4	CAP, TA, 68 UF, 6V/8V	519702	56289	196D686X0008KE4			1
C5	CAP, TA, 39 MF +/-20%, 6V	163915	56289	196D394X0020KA1			1
C6	CAP, TA/DISC, 4.7 UF +/-20%, 20V	161943	56289	196D476X0020KA1			1
C7	CAP, CERAM, 0.22 UF +/-20%, 50V	309849	72982	8131-050-651-022			6
C8	CAP, CERAM, 0.22 UF +/-20%, 50V	309849	72982	8131-050-651-022			REF
C9	CAP, CERAM, 0.22 UF +/-20%, 50V	309849	72982	8131-050-651-022			REF
C10	CAP, CERAM, 0.22 UF +/-20%, 50V	309849	72982	8131-050-651-022			REF
C11	CAP, CERAM, 0.22 UF +/-20%, 50V	309849	72982	8131-050-651-022			REF
C12	CAP, CERAM, 0.22 UF +/-20%, 50V	309849	72982	8131-050-651-022			REF
CR1	DIODE, SIL RECTIFIER, 1A, 100V	343491	03877	1N4002			2
CR2	DIODE, SIL RECTIFIER, 1A, 100V	343491	03877	1N4002			REF
CR3	DIODE, ZENER, 400 MW, 4.7V	524058	14552	1N751			1
CR4	DIODE, SI, HI-SPEED SWITCHING	203323	06001	1N4448			2
CR5	DIODE, SI, HI-SPEED SWITCHING	203323	06001	1N4448			REF
J1	CONN, 50-PIN	519918	52152	3426-0000T			1
MP1	COVER, CONN (TO J1)	519934	89536	519934			2
P1	BOARD CONNECTION						
P26	BOARD CONNECTION						3
Q1	XSTR, SI, PNP	195974	64713	2N3906			REF
Q2	XSTR, SI, PNP	195974	64713	2N3906			REF
Q3	XSTR, SI, PNP	195974	64713	2N3906			REF
R1	RES, DEP. CAR, 27K +/-5%, 1/4W	441501	89536	441501			1
R2	RES, DEP. CAR, 470 +/-5%, 1/4W	343434	89536	343434			1
R3	RES, DEP. CAR, 10K +/-5%, 1/4W	348839	89536	348839			2
R4	RES, DEP. CAR, 82 +/-5%, 1/4W	442277	89536	442277			1
R5	RES, DEP. CAR, 33K +/-5%, 1/4W	348888	89536	348888			1
R6	RES, DEP. CAR, 2K +/-5%, 1/4W	441469	89536	441469			1
R7	RES, DEP. CAR, 39K +/-5%, 1/4W	442400	89536	442400			1
R8	RES, DEP. CAR, 10K +/-5%, 1/4W	348839	89536	348839			REF
R9	RES, DEP. CAR, 1.1K +/-5%, 1/4W	348797	89536	348797			1
R10	RES, DEP. CAR, 270 +/-5%, 1/4W	348789	89536	348789			1
R11	RES, DEP. CAR, 2.7K +/-5%, 1/4W	386490	89536	386490			1
R12	RES, DEP. CAR, 5.6K +/-5%, 1/4W	442350	89536	442350			1
R13	RES, DEP. CAR, 100K +/-5%, 1/4W	348920	89536	348920			1
U1	RESISTOR NETWORK, SIP, 3.6K +/-2%, 1/8W	478818	89536	478818			1
U2	IC, 2K X 8 BIT RAM, PROGRAMMABLE TIMER	524884	34649	P8155			1
U3	IC, DEMULTIPLEXER	508473	01295	SN74LS156N			1
U4	IC, LIN, QUAD COMPARATOR	387233	12040	LM339N			1
U5	MICROCOMPUTER, PROCESSOR, MOS/LSI	524066	12040	MM57109			1
U6	RESISTOR NETWORK, 10K	412924	89536	412924			1
U7	⊗ IC, C-MOS, HEX NON-INVERT BUFFER	407759	12040	MM80C97N			3
U8	RESISTOR NETWORK, 5.1 X 1K	519694	89536	519694			1

Table 004-5. Calculator/Printer PCB Assembly (cont)


REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	N O T E
U9	RESISTOR NETWORK, 10K	500876	89536	500876	1	1	
U10	IC, DIGITAL 2KX8 BIT ROM	524876	34649	P8355	1	1	
U11	IC, 3-STATE BUFFER	454819	07263	4009PC	1	1	
U12	⊗ IC, C-MOS, HEX NON-INVERT BUFFER	407759	12040	MM80C97N	REF		
U13	⊗ IC, C-MOS, HEX NON-INVERT BUFFER	407759	12040	MM80C97N	REF		
U14	⊗ IC, C-MOS, QUAD 2-IN & GATE	408401	02735	CD4081EE	1	1	
U15	IC, QUAD 2-IN POS-OR GATE	393108	01295	SN74LS32N	1	1	
U16	IC, TTL MSI, DECADE COUNTER	402545	01295	SN74LS90W	1	1	
U17	IC, TTL MSI, QUAD 2-IN POS-NAND GATE	393033	07263	74LS00PC	1	1	
U18	IC, TTL, OCTAL "D"TYPE F/F	504514	01295	SN74LS373	1	1	
W1	CABLE, 50-STRAND FLAT	404822	89536	404822	1		
XU2	SOCKET, 40-PIN	429282	09922	DILB40P-108	2		
XU5	SOCKET, 7-PIN	520809	30035	SS-109-1-07	4		
XU10	SOCKET, 40-PIN	429282	09922	DILB40P-108	REF		
XU18	SOCKET, 12-PIN	417733	30035	SS-109-1-12	2		
XU19	SOCKET, 12-PIN	417733	30035	SS-109-1-12	REF		

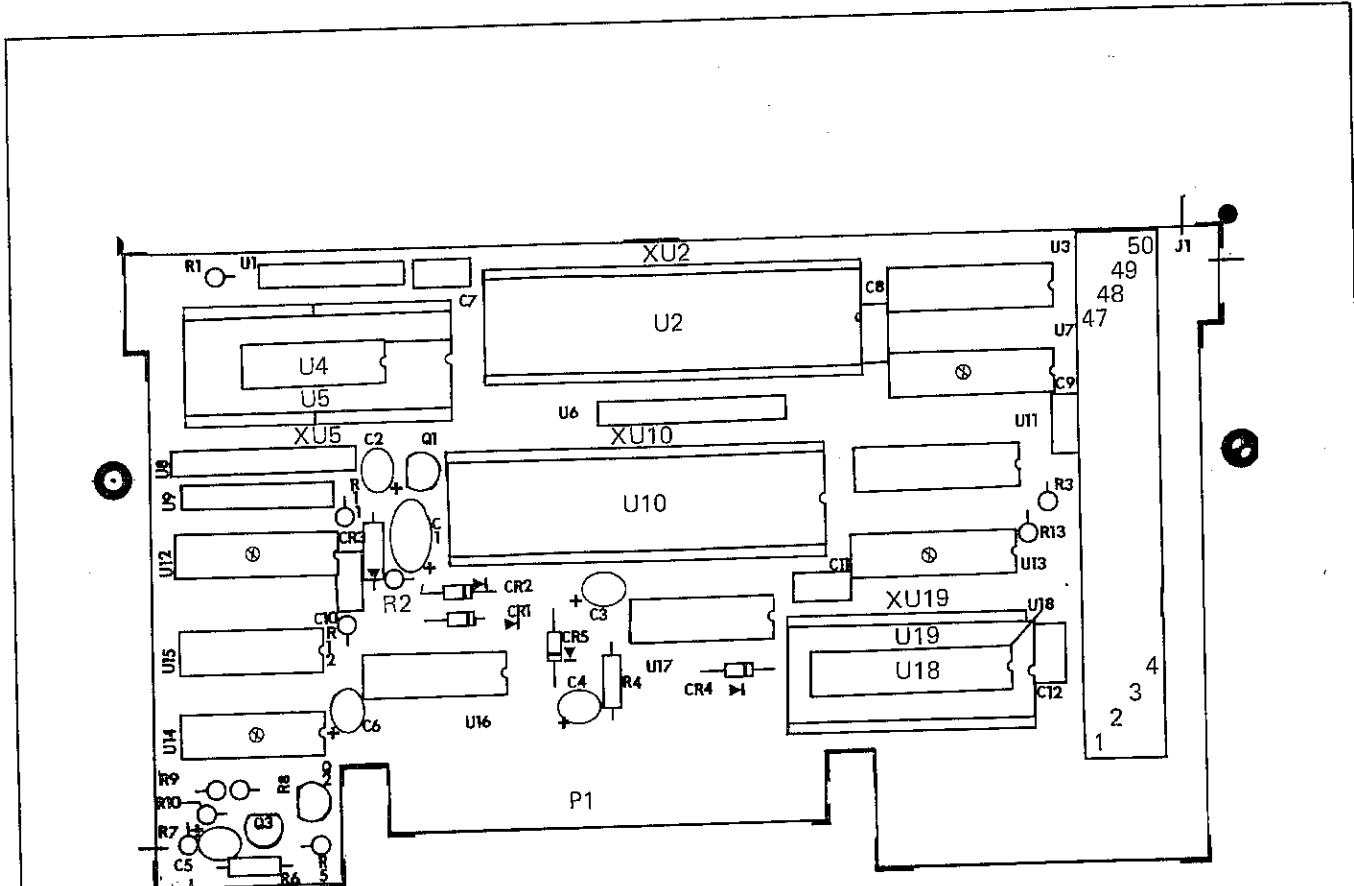

8860A-1614

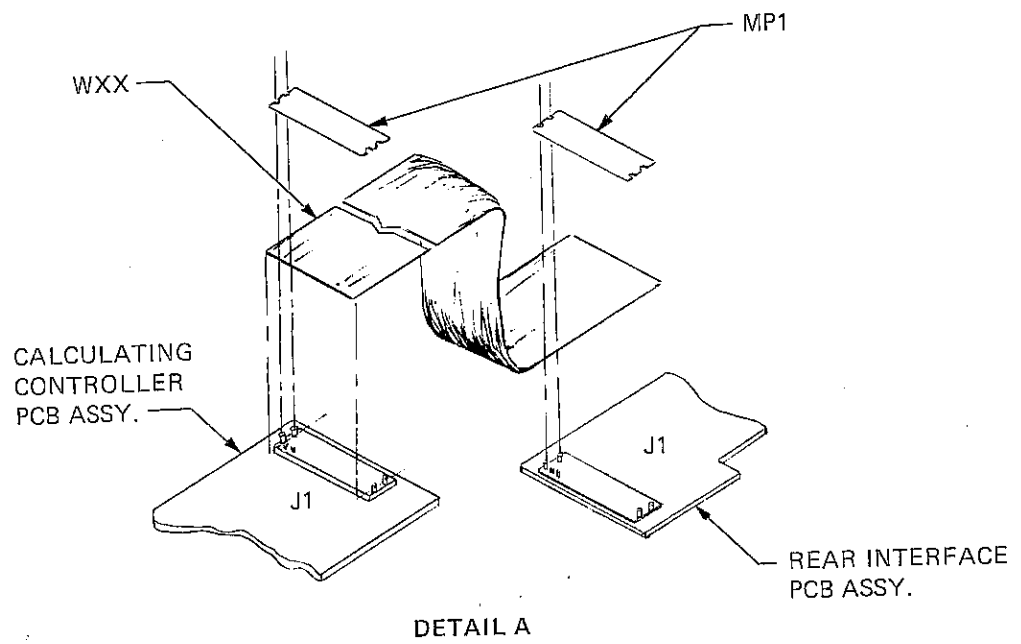

DETAIL A



CAUTION
 SUBJECT TO DAMAGE BY
 STATIC ELECTRICITY

8860A-1614

Figure 004-5. Calculator/Printer PCB Assembly

Table 004-6. Rear interface PCB Assembly

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	N O T E
	REAR INTERFACE PCB ASSEMBLY FIGURE 004-6 (8860A-4024)	ORDER	NEXT	HIGHER ASSEMBLY	REF		
J1	CONNECTOR, 50-POSITION	519918	52152	3426-0000T	1		
J2	CONNECTOR, 24-POSITION	519397	01295	H421121-18	1		
J3	CONNECTOR, 36-POSITION	479261	00779	552235-1	1		
J4	CONNECTOR, 14-POSITION	512392	00779	552212-1	1		
U1	IC, RES. NETWORK, 56K +/-2%, 1/8W	529131	89536	529131	1	1	

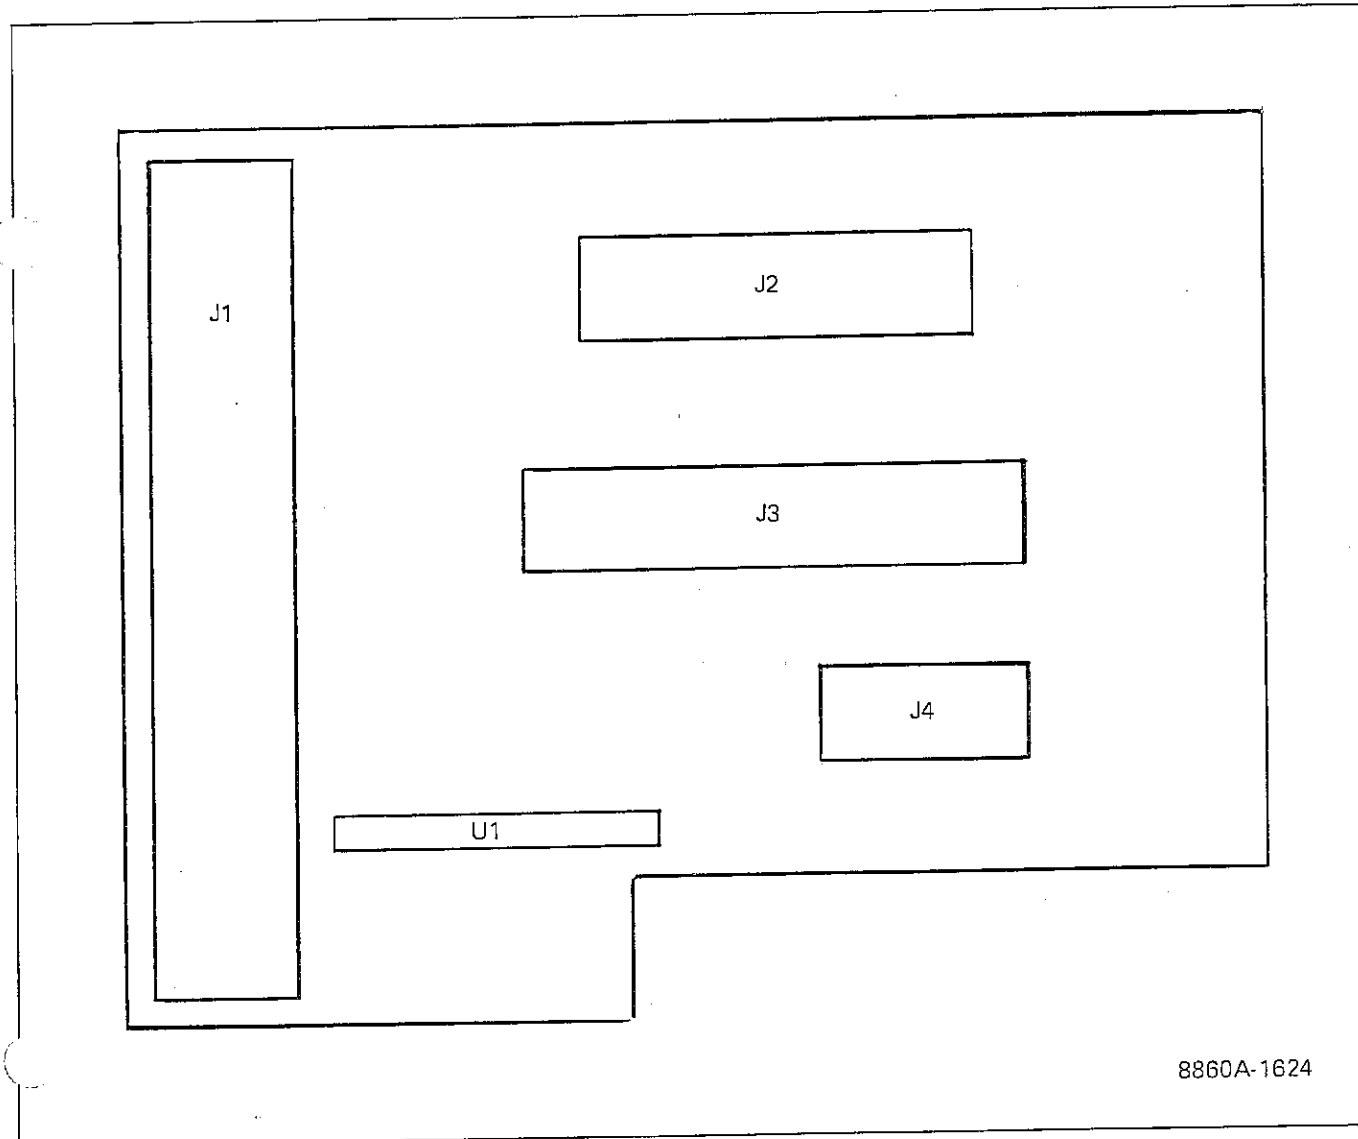

8860A-1624

Figure 004-6. Rear Interface PCB Assembly

Option -005

IEEE-488 Interface

005-1. THEORY OF OPERATION

005-2. The IEEE-488 Interface, Option -005, consists of two circuit boards: the IEEE-488 Interface PCB (Schematic 8860A-1015) and the Rear Interconnect PCB (Schematic 8860A-1025). These boards are connected with a ribbon cable. The IEEE connector and the six IEEE address switches are located on the Rear Interconnect PCB. The schematic diagram for each of the two circuit boards is located in Section 8.

005-3. A simplified schematic of the IEEE-488 Interface is shown in Figure 005-1. The IEEE-488 Bus is located at the left, the 8860A basic instrument is at the right.

005-4. Local/Remote Switching

005-5. When the IEEE-488 Interface is installed, the option program memory (U4) is in control for both local and remote operation. Control can be passed to the local program memory (U9 on the Controller PCB), but is always returned to the option program memory. For example, the option program memory calls on the local program memory to perform the measurement routine. When the measurement cycle is finished and the result is obtained, the option program memory again becomes active.

005-6. General Purpose Interface Adapter

005-7. The main device on the IEEE-488 Interface PCB is U1, the general purpose interface adapter (GPIA). This device is designed specifically to interface 8-bit microprocessor data and address buses to the IEEE-488 bus. The GPIA handles the bus protocol functions, including the bus handshake. The GPIA communicates with the bus through two bidirectional bus transceivers (U2 and U5).

005-8. The GPIA contains the serial poll register where the present 8860A measurement status is stored. When a serial poll occurs, the contents of this register are loaded directly onto the IEEE-488 bus.

005-9. Data Bus and Address Bus

005-10. The internal 8-bit data bus, DB0 through DB7,

carries information between the devices (GPIA, ROM, RAM) and the out-guard microprocessor. The 8-bit address used by each of these devices is latched by U10. Gates U6 and U8 are used to enable devices (U1, U3, and/or U4) to read or write on the internal bus.

005-11. The rear panel IEEE address switches and the Talk-Only switches connect to the data bus through a hex inverter (U11). The tri-state outputs are enabled by a line from U1. The switch output is read at regular intervals.

005-12. Option Program Memory

005-13. The program memory is contained in U4. Figure 3-2 in Section 3 of this manual shows how the ROM is partitioned and how it is accessed from ports P23, P26, and P50. This ROM (U4) is a custom device that is mask-programmed with the IEEE-488 Interface software.

005-14. DATA STORAGE RAM

005-15. A 128-byte RAM (U3) is used for storing I/O data that appears on the data bus. It contains the input buffer for handling input commands, the output buffer for handling output data, and locations for other data storage.

005-16. TROUBLESHOOTING THE IEEE-488 OPTION

005-17. The following troubleshooting procedure requires that the basic 8860A is working properly. Before starting the procedure, remove the IEEE-488 Interface from its slot in the 8860A, and check the operation of the basic DMM. If the 8860A is operating properly, reinstall the option pcb and proceed with the troubleshooting information given in Table 005-1.

005-18. The troubleshooting table is a series of symptoms and solutions. Check the unit for the symptoms in sequence. When a symptom is identified, clear the fault using the solutions listed for that fault. All devices mentioned in the table are located on the IEEE-488 Interface PCB.

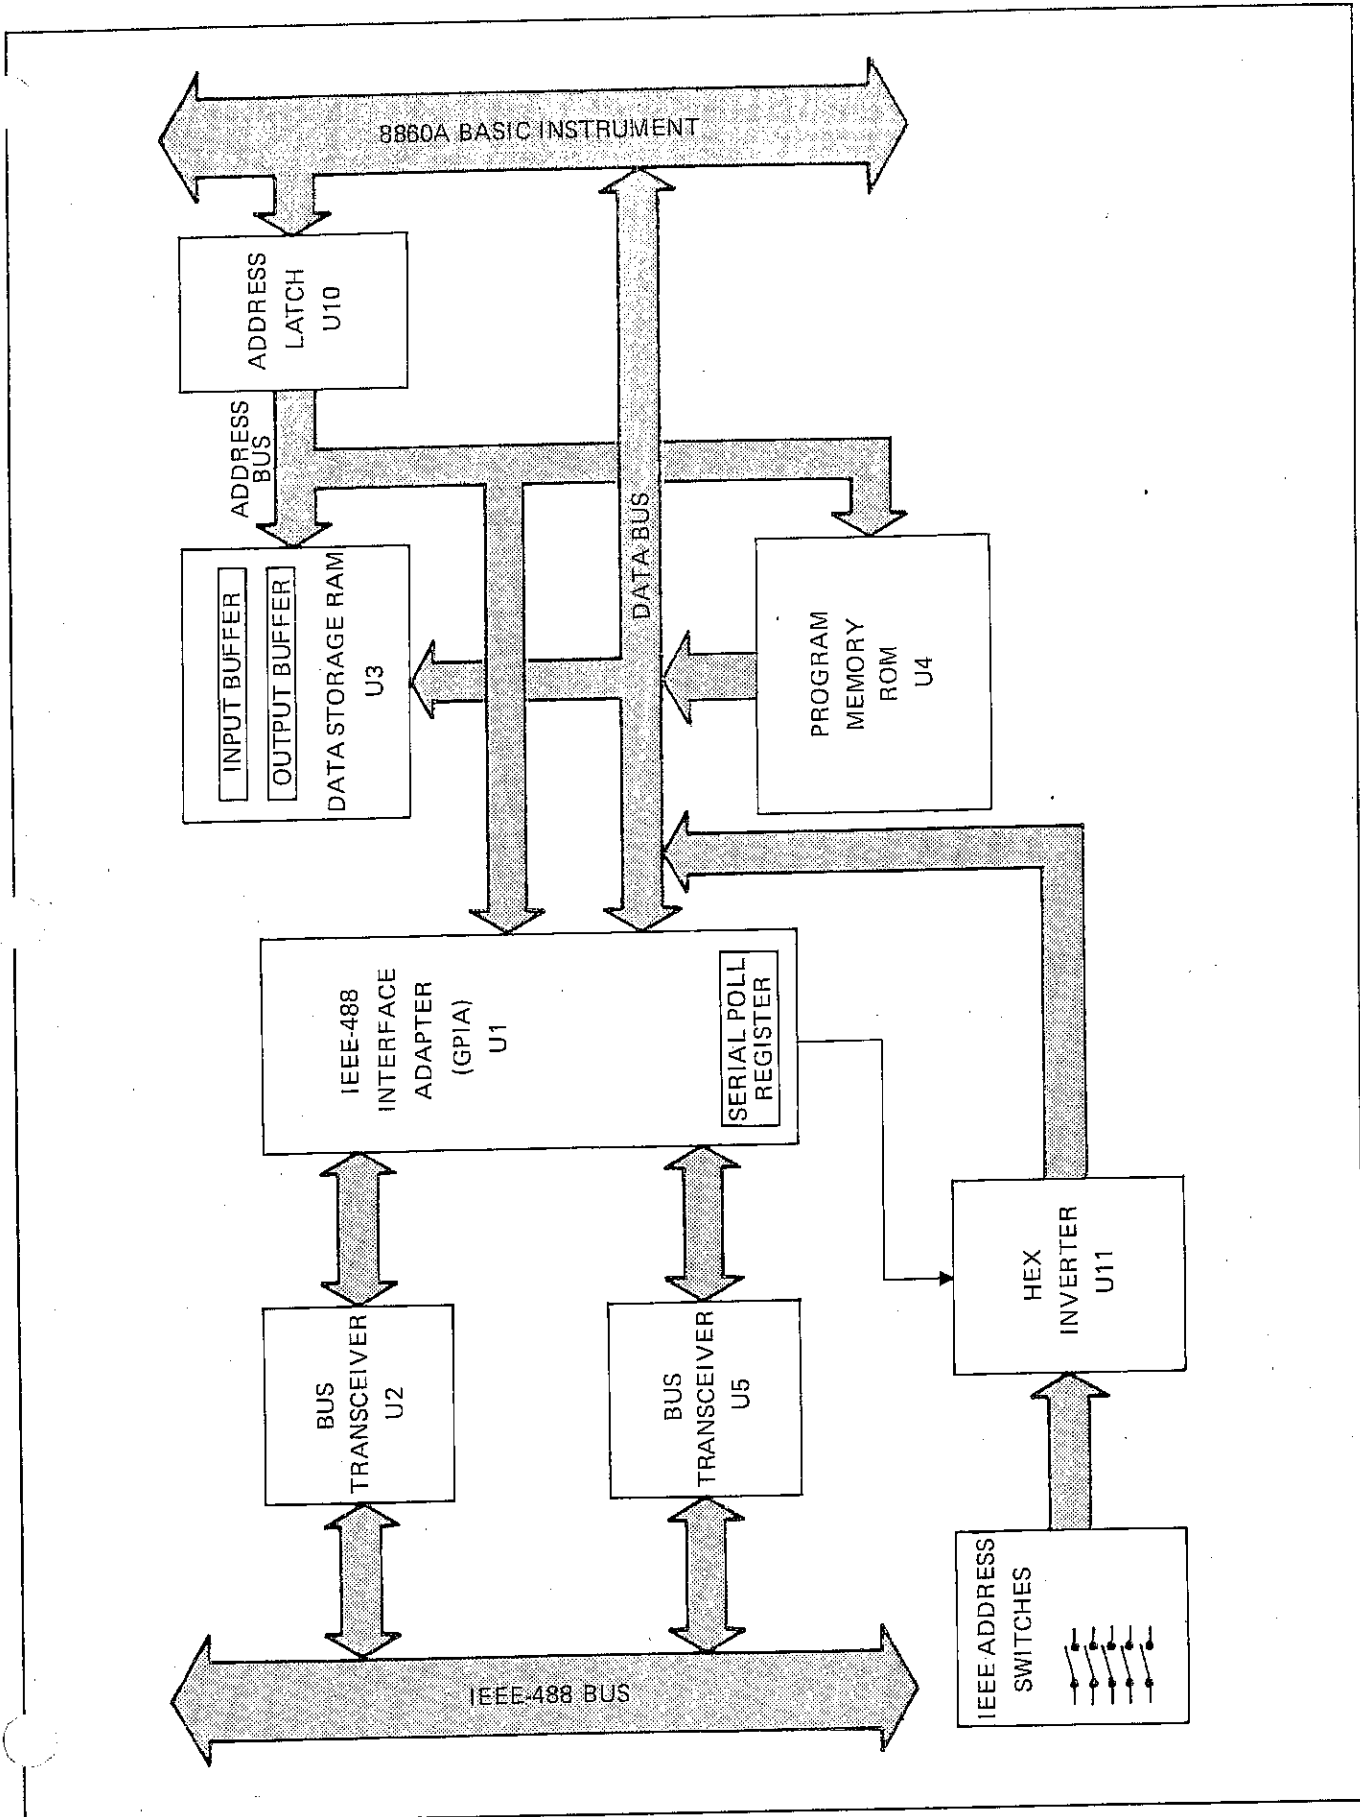


Figure 005-1. IEEE-488 Interface Block Diagram

Table 005-1. IEEE-488 Interface Troubleshooting

SYMPTOM	INSTRUCTIONS
<ol style="list-style-type: none"> 1. Any fault—(initial check) 2. The 8860A does not respond to front panel local controls (or IEEE-488 bus commands) when the -005 Option is installed. 3. The 8860A operates properly from the front panel (with the -005 Option installed), but will not respond to IEEE-488 bus commands. 4. The displayed IEEE address (using PROG SEL) is different than that selected at the rear panel IEEE switches. 5. Faulty Address Latch (U10) 	<ul style="list-style-type: none"> • Check ALE at U10-11 for 400 kHz. • Check for a high state (+5V) at U1-19 to ensure that reset is released. • Check for a high state (+5V) at U1-4 (\overline{ASE}, address switch enable). • Suspect, U1, U3, U4, U6, U8, or U11. Remove these devices one at a time, until the 8860A returns to proper operation. These devices are socketed (except U11) and all sit on the internal bus. • Suspect U1, U3, U2, U5, U6, U8 (in that order). • Suspect faulty IEEE address switches or U11. • Check U10 with a dual-trace scope. Trigger the scope on ALE and look at the input and output of each bit. If ALE and the latch are working properly, then the output follows the input value when ALE is high and latches when ALE goes low.

CAUTION

To avoid instrument damage, remove power from the 8860A before unplugging the circuit board or removing plug-in devices.

005-19. LIST OF REPLACEABLE PARTS

005-20. A list of replaceable parts for the IEEE-488

Interface is given in Table 005-2. Refer to Section 5 of this manual for ordering information.

CAUTION 

Indicated devices are subject to damage by static discharge.

Table 005-2. IEEE-488 interface

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	NOTE
-005	IEEE-488 INTERFACE FIGURE 005-2 (8860A-005)	ORDER	BY	OPTION -005			
	IEEE-488 INTERFACE PCB ASSEMBLY	516310	89536	516310	1		
	REAR INTERCONNECT PCB ASSEMBLY	521294	89536	521294	1		
H1	HARDWARE KIT	543736	89536	543736	1		
MP1	PANEL, (SUB) IEEE INTERFACE	531020	89536	531020	1		


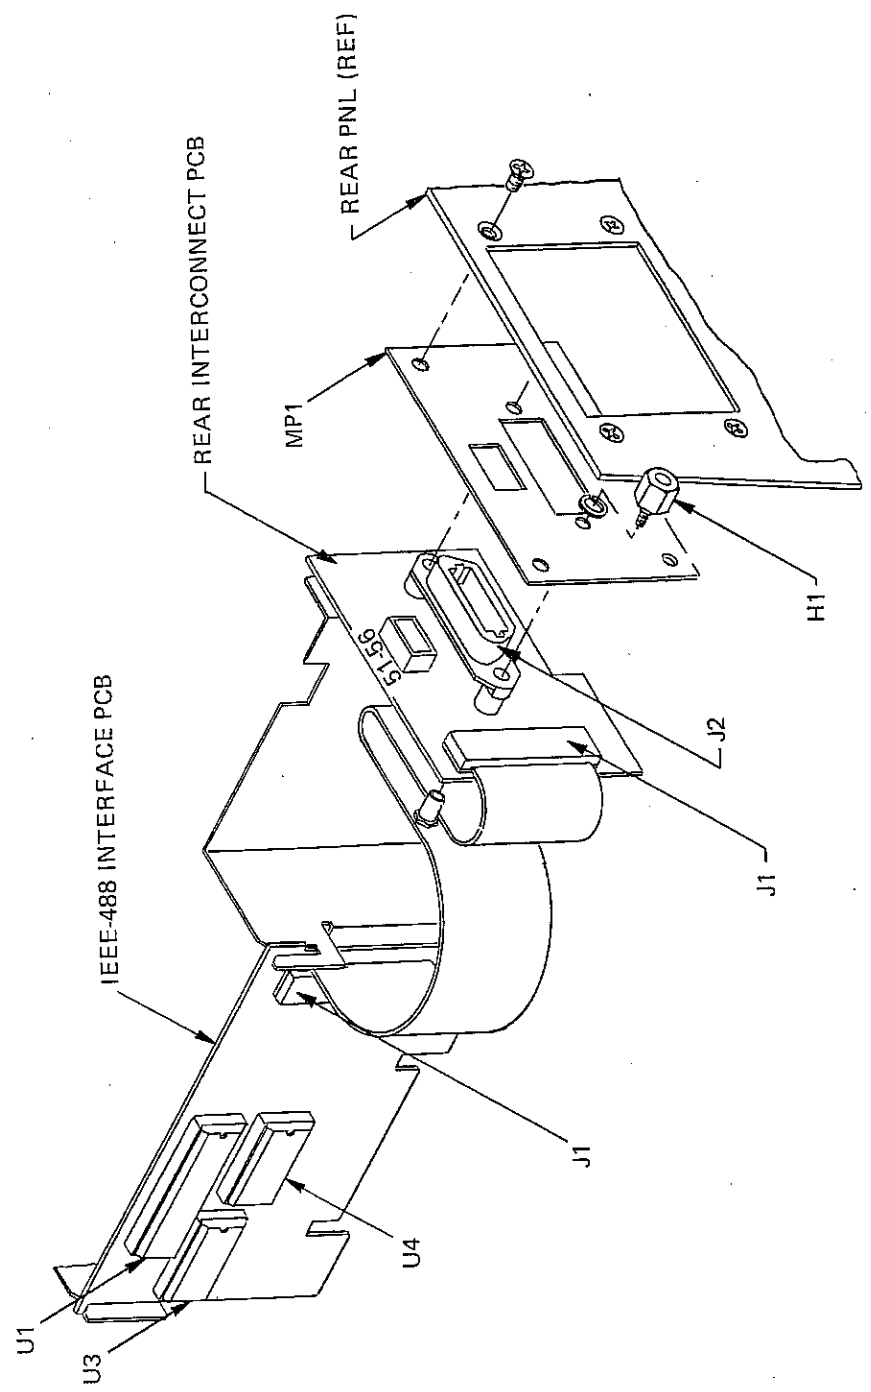



Figure 005-2. IEEE-488 Interface Assembly

Table 005-3. IEEE-488 Interface PCB Assembly

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	NOTE
	⊗ IEEE-488 INTERFACE PCB ASSEMBLY FIGURE 005-3 (8860A-4015T)	516310	89536	516310	REF		
C1	CAP, TA, 1 UF +/-20%, 35V	161919	56289	196D105X0020JA1	6		
C2	CAP, TA, 1 UF +/-20%, 35V	161919	56289	196D105X0020JA1	REF		
C3	CAP, TA, 1 UF +/-20%, 35V	161919	56289	196D105X0020JA1	REF		
C4	CAP, TA, 1 UF +/-20%, 35V	161919	56289	196D105X0020JA1	REF		
C5	CAP, TA, 1 UF +/-20%, 35V	161919	56289	196D105X0020JA1	REF		
C6	CAP, TA, 1 UF +/-20%, 35V	161919	56289	196D105X0020JA1	REF		
J1	CONNECTOR BODY	295337	52152	3402-0000T	1		
MP1	COVER, CONNECTOR (TO J1)	295329	52152	3402-0001T	2		
MP2	MYLAR INSULATOR (NOT SHOWN)	443903	89536	443903	1		
R1	RES, DEP. CAR, 2.7K +/-5%, 1/4W	386490	80031	CR251-4-5P2K7T	1	1	
U1	⊗ IC, MOS, N-CHANNEL, SI	477794	04713	MC68488P	1	1	
U2	IC, BUS TRANSCIEVER, DIGITAL	524835	04713	MC3447P	2	1	
U3	⊗ IC, MOS RAM, 128 X 8 BIT	524843	07263	F6810PC	1	1	
U4	IC, DIGITAL, 4K X 8 BIT, MOS ROM	535070	55576	SYP233	1	1	
U5	IC, BUS TRANSCIEVER, DIGITAL	524835	04713	MC3447P	REF		
U6	IC, POS NOR, TOTEM POLE OUTPUTS	393041	01295	SN74LS02N	1	1	
U8	IC, TTL, QUAD, 2-INPUT, POS, NAND GATE	393033	01295	SN74SL00N	1	1	
U9	RES. NETWORK, SIP, 33K +/-2%, 1/8W	484741	89536	484741	1	1	
U10	IC, TTL, OCTAL "D" TYPE F/F	504514	01295	SN74LS373	1	1	
U11	⊗ IC, C-MOS, 3-STATE, INVERTER BUFFER	454819	07263	40098PC	1	1	
U12	RES. NETWORK, SIP, 4.7K +/-2%, 1/8W	412916	89536	412916	1	1	
W1	CABLE, 34 STRAND	519926	89536	519926			
XU1	SOCKET, IC, 40 PIN	429282	09922	DILB40P-108	1		
XU3	SOCKET, IC, 24 PIN	376236	91506	324-AG39D	2		
XU4	SOCKET, IC, 24 PIN	376236	91506	324-AG39D	REF		

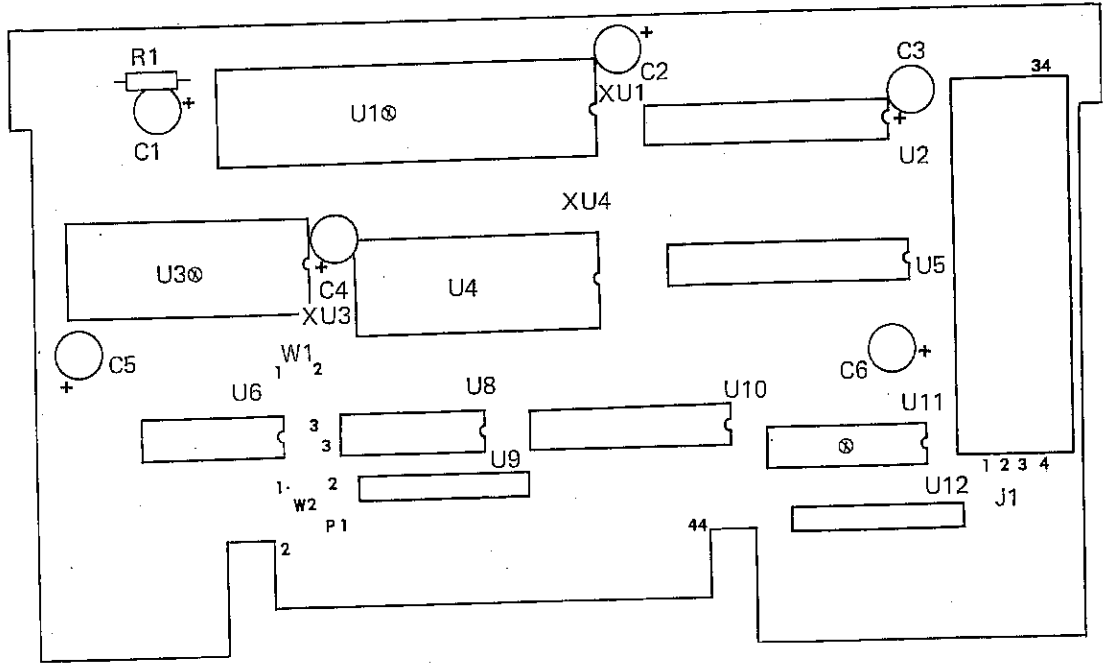


 **CAUTION**
SUBJECT TO DAMAGE BY
STATIC ELECTRICITY

8860A-1615

Figure 005-3. IEEE-488 Interface PCB Assembly

Table 005-4. Rear Interconnect PCB Assembly

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	NOTE
	REAR INTERCONNECT PCB ASSEMBLY FIGURE 005-4 (8860A-4025)	521294	89536	521294			REF
J1	CONNECTOR, 34 POS	295337	52152	3402-0000T	1		
J2	CONNECTOR, 24 POS	513234	00779	552224-1	1		
S1-6	SWITCH, DIL, 6-POS, SPST, ASSY	454124	00779	435166-4	1	1	

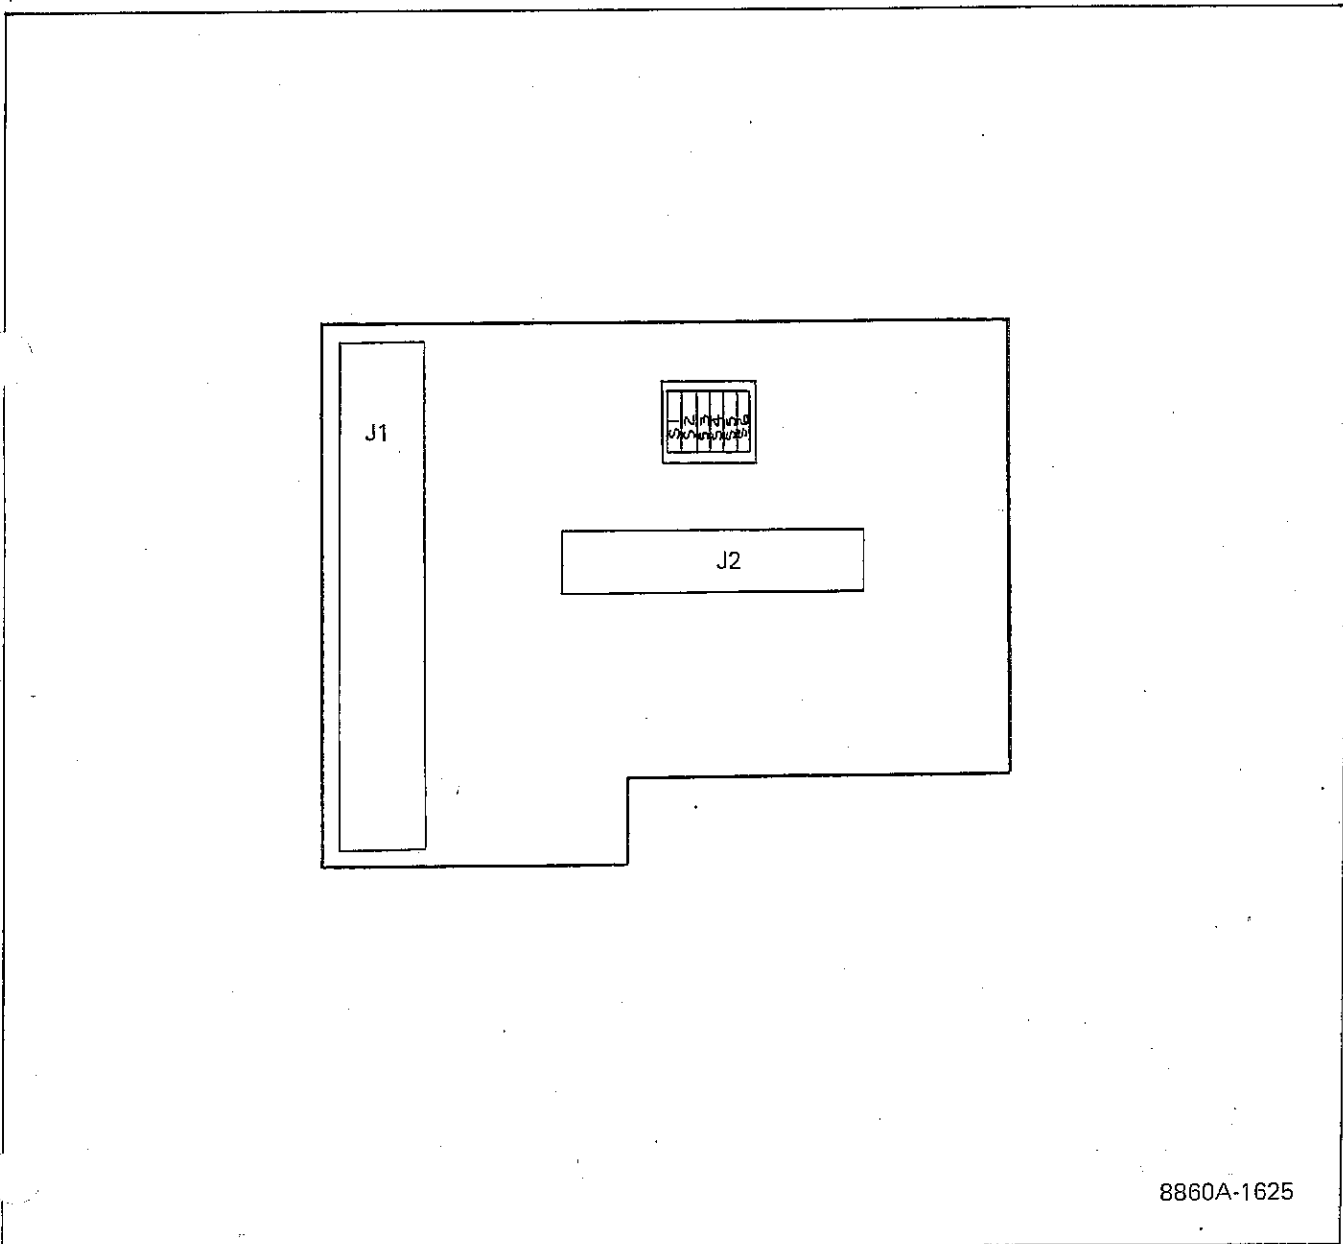

8860A-1625

Figure 005-4. Rear Interconnect PCB Assembly

Option -006 Rear Input

006-1. THEORY OF OPERATION

006-2. The Rear Input, Option -006, consists of a circuit board and a 20-pin connector. The circuit board mounts on the A/D and Ohms PCB. A schematic diagram for the option is shown in Figure 006-1.

006-3. The Rear Input option electrically relocates the five INPUT terminal connections from the front panel banana jacks to a 20-pin connector mounted to the rear panel. This enables all voltage and resistance measurement connections (both two- and four-terminal) to be made at the rear panel.

006-4. TROUBLESHOOTING

006-5. Any fault which occurs in the Rear Input connector will usually consist of either poorly soldered connections or broken wires, which can be traced visually or with an ohmmeter. The two ceramic capacitors ensure stable readings by suppressing high voltage ac crosstalk to the A/D Converter.

006-6. LIST OF REPLACEABLE PARTS

006-7. A list of replaceable parts for the Rear Input Assembly is given in Table 006-1. Refer to Section 5 of this manual for ordering information.


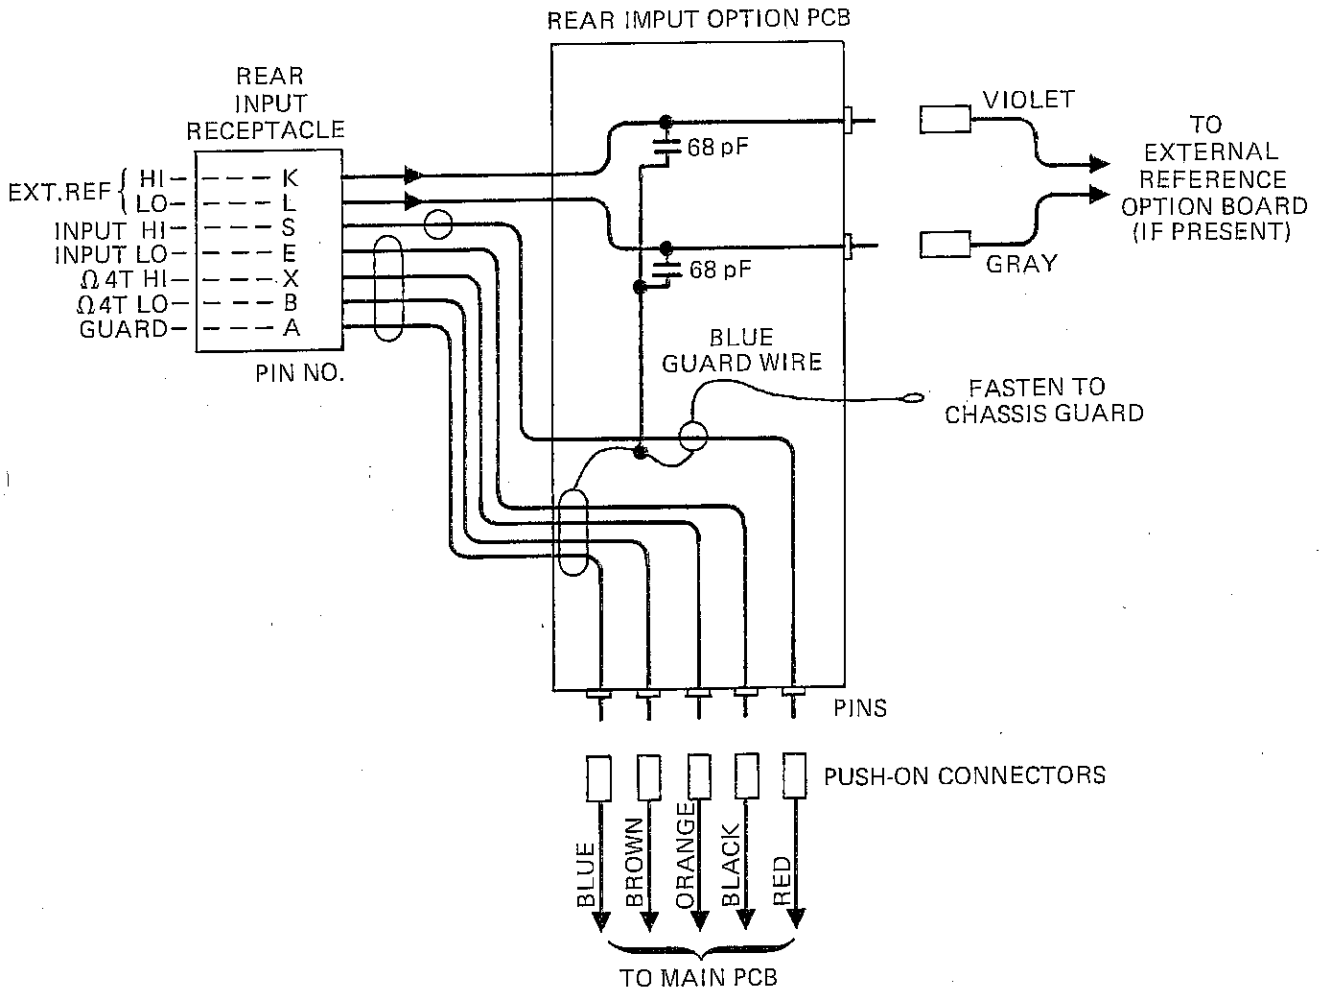


Figure 006-1. Rear Input Option Schematic

Table 006-1. Rear Input

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	NOTE
-006	REAR INPUT FIGURE 006-2 (8860A-006)	ORDER	BY	OPTION -006			
	REAR INPUT PCB ASSEMBLY	538264	89536	538264	1		
H1	NUT, HEX 4-40	147611	89536	147611	3		
H2	SCREW, 4-40 X 1/4 PHP	256156	89536	256156	2		
H3	SCREW, 4-40 X 3/16 PHP	149567	89536	149567	2		
H4	SCREW, 6-32 X 1/4 FH UC	320093	89536	320093	2		
KIT	HARDWARE CONNECTOR KIT	541797	89536	541797	1		
MP1	BRACKET, ANGLE 4-40	474239	89536	474239	2		

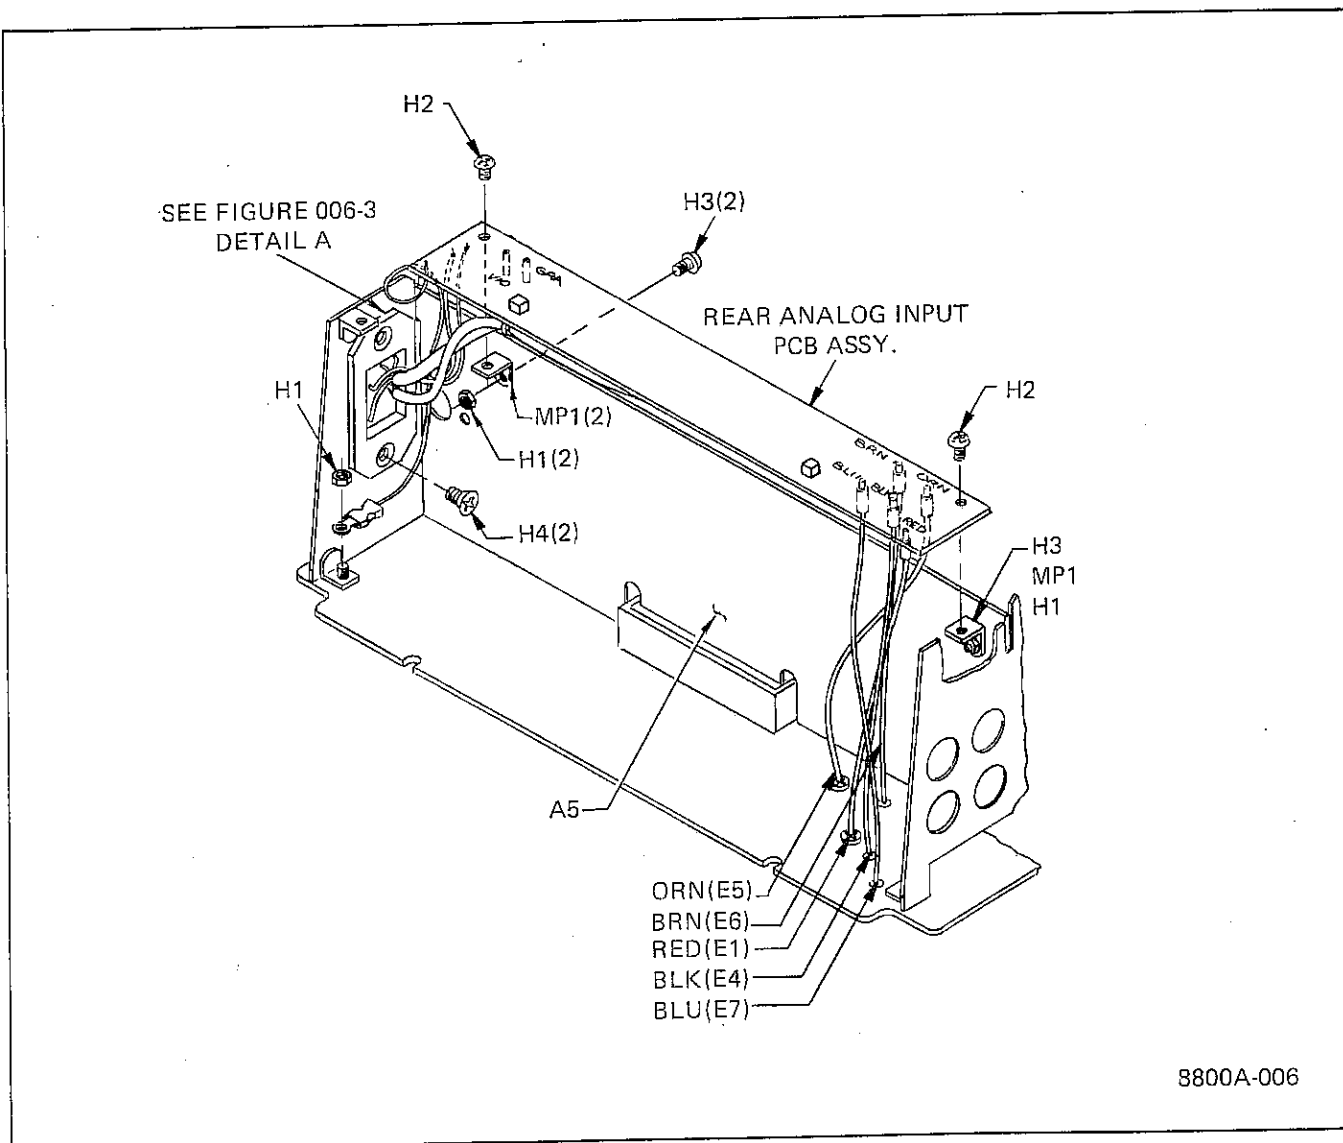


8800A-006

Figure 006-2. Rear Input

Table 006-2. Rear Input PCB Assembly

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	NOTE
	REAR INPUT PCB ASSEMBLY FIGURE 006-3 (8860A-4027)	538264	89536	538264	REF		
C1	CAP, CER, 68 PF +/-2%, 100V	519181	71590	DD-3R3	2		
C2	CAP, CER, 68 PF +/-2%, 100V	519181	71590	DD-3R3	REF		
H1	NUT, HEX, 2-56	355453	73734	67023	2		
H2	SCREW, 2-56 X 3/4	530246	89536	530246	2		
J1	CONNECTOR 20-PIN RECEPT.	369249	91662	00-8016-020-000-707	1		
MP1	CABLE TIE	172080	06383	SST-1M	2		
MP2	RECEPTACLE PIN	529263	00779	350491-1	7		
MP3	MOUNTING BLOCK	516765	89536	516765	1		
W1	CHASSIS GROUND WIRE ASSY.	537795	89536	537795	1		
W2	WIRE ASSEMBLY - SINGLE COND.	537738	89536	537738	1		
W3	CABLE ASSY. 4-COND	537712	89536	537712	1		
W4	GRAY WIRE ASSY.	537753	89536	537753	1		
W5	VIOLET WIRE ASSY.	537704	89536	537704	1		
W6	ORANGE WIRE ASSEMBLY	537720	89536	537720	1		
W7	BLUE WIRE ASSEMBLY	537746	89536	537746	1		

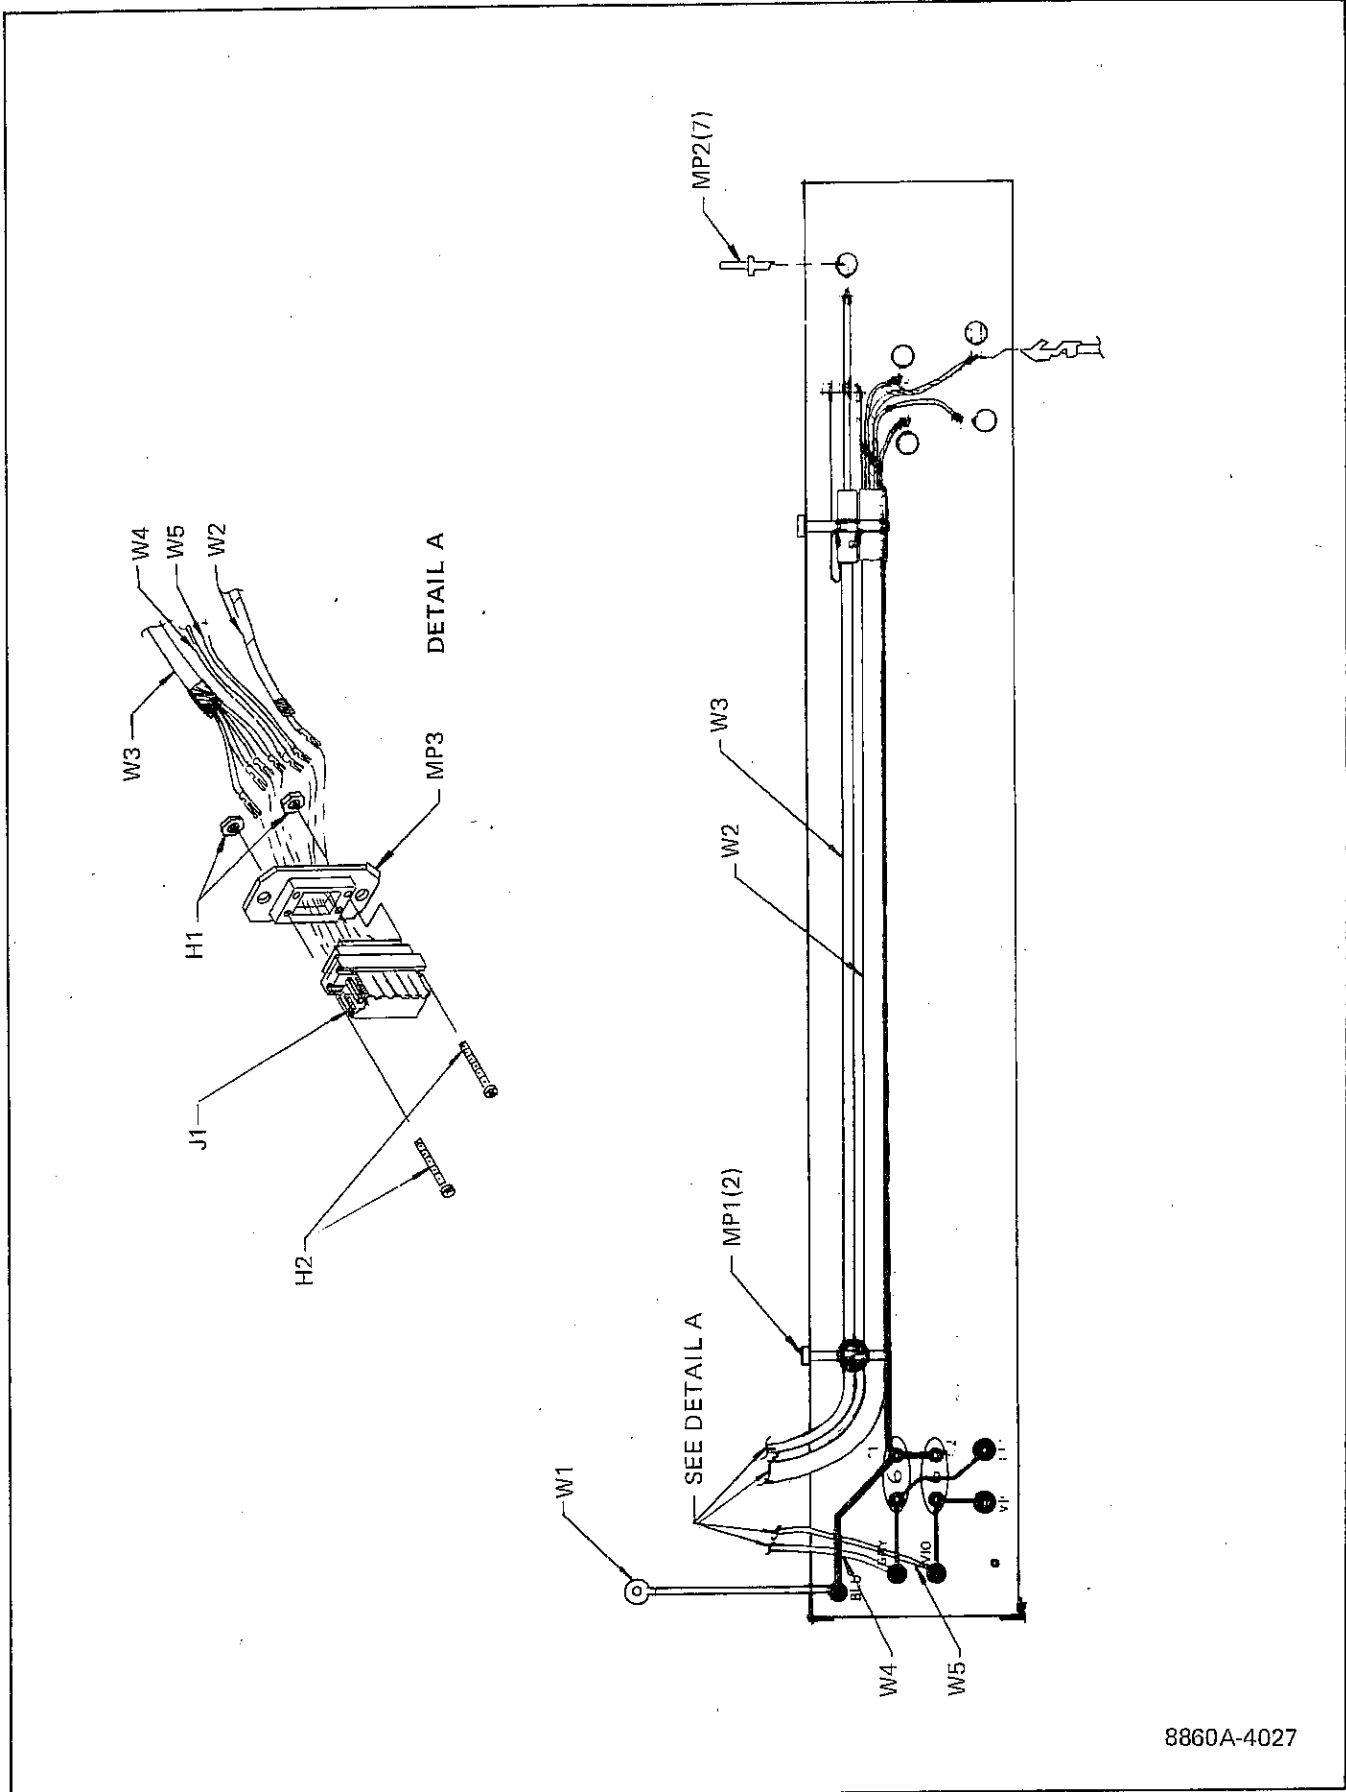

8860A-4027

Figure 006-3. Rear Input PCB Assembly

Option -007

External Reference

007-1. THEORY OF OPERATION

007-2. The External Reference, Option -007, consists of a single circuit board and a dual banana connector. The circuit board mounts on the A/D and Ohms PCB. The schematic (8860A-1016) is located in Section 8.

007-3. The External Reference is a conditioning circuit which divides an externally applied dc voltage by 10 and changes the polarity of the result. If, for example, a +10V dc signal is applied at the input, a -1V dc signal appears at the output, P1-2. The circuit contains a two-pole active Butterworth low-pass filter to give 40 dB of noise rejection at 50 Hz.

007-4. The input buffer amplifier U2 is connected with a gain of one-half in a differential-input configuration. The floating input allows the option to receive a voltage which is not ground-referenced. The output of U2 is filtered by U3, which in turn is divided by five. This is the reference voltage sent on to the A/D Converter. Precision resistor network U1 contains all of the required voltage divider networks.

007-5. Protection devices Q1 and Q2 protect against overvoltages appearing at the external reference input terminals. Variable resistor R1 helps correct for the dc offset voltages of U2 and U3. Variable resistors R4 and R5 are calibration adjustments.

007-6. When selected, the output of the external reference replaces the internal reference used to discharge the A/D integrator. The external reference polarity is detected at pin P1-5 by the in-guard microprocessor which reverses the polarity (at the A/D Converter) if necessary, in order to discharge the capacitor. Thus, the polarity is selected to be

opposite that of the applied input. Such a reversal is necessary, for instance, when the 8860A is measuring an ac voltage with a negative external reference.

007-7. Pins P1-6 and P1-7 form a shorting link to tell the in-guard microprocessor that the external reference is installed. If the option is not installed, an error message is displayed when external reference (EXT REF) is selected at the front panel.

007-8. TROUBLESHOOTING

007-9. Troubleshooting the External Reference for a failed IC is a matter of tracing the signal path. Use the A/D and Ohms Extender Card for easy circuit access.

007-10. Connect the External Reference input LO to the front panel INPUT LO. Apply a +10v dc signal at the external reference input HI. The following signals should be present on the External Reference PCB.

1. -5V dc at U2-6 and U3-6
2. -1V dc at the output, P1-2.

007-11. When a step input is applied to the External Reference, the settling time of the External Reference circuitry should not exceed 5 seconds. If either C3 or C4 is defective, the response of the external reference may be very slow.

007-12. LIST OF REPLACEABLE PARTS


007-13. A list of replaceable parts for the External Reference is given in Table 007-1. Refer to Section 5 of this manual for ordering information.

CAUTION


Indicated devices are subject to damage by static discharge.

Table 007-1. External Reference

REF DES	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CODE	MFG PART NO.	TOT QTY	REC QTY	NOTE
-007	EXTERNAL REFERENCE FIGURE 007-1 (8860A-4016T)	ORDER	BY	OPTION -007			
C1	CAP, CERAM, 33 PF +/-2%, 100V	354852	80031	2222-638-10339	2		
C2	CAP, CERAM, 33 PF +/-2%, 100V	354852	80031	2222-638-10339	REF		
C3	CAP, MYLAR, .22 UF +/-10%, 100V	436113	73445	C280MAH/A220K	2		
C4	CAP, MYLAR, .22 UF +/-10%, 100V	436113	73445	C280MAH/A220K	REF		
H1	SCREW, FH, UC, 6-32 1/4	320093	89536	320093	2		
H2	SCREW, FHP/SS, 6-32 X 3/4	114504	89536	114504	1		
MP1	SPACER, CENTER	352021	89536	352021	1		
MP2	MOUNTING BLOCK	530980	89536	530980	1		
P1	CONNECTOR, 9-POSITION	519744	89536	519744	1		
Q1	XSTR, J-FET	343830	12040	NSSF50024	2	1	
Q2	XSTR, J-FET	343830	12040	NSSF50024	REF		
R1	RES, VAR, 50K +/-10%, 1/2W	288290	75378	360S-502AZ	1		
R2	RES, MTL. FILM, 150K +/-1%, 1/8W	241083	91637	CMF551503F	2		
R3	RES, MTL. FILM, 150K +/-1%, 1/8W	241083	91637	CMF551503F	REF		
R4	RES, VAR. CERMET, 1K +/-10%, 1/2W	285155	71450	360S102A	2		
R5	RES, VAR, CER, 1K +/-10%, 1/2W	285155	71420	360S102A	REF		
R6	RES, MTL. FILM, 37.4K +/-1%, 1/8W	226241	91637	CMF553742F	1		
R7	RES, DEP. CAR, 1 +/-5%, 1/4W	357665	80031	CR251-4-5P1E	1		
R8	RES, MTL. FILM, 301K +/-1%, 1/8W	289488	91637	CMF5530102F	1		
U1	RESISTOR NETWORK	510990	89536	510990	1	1	
J2	IC, LIN, OP-AMP, MTL. CAN	478107	12040	308A	2	1	
J3	IC, LIN, OP-AMP, MTL. CAN	478107	12040	308A	REF		
W1	WIRE ASSEMBLY, VIOLET	538215	89536	538215	1		
W2	WIRE ASSEMBLY, GRAY	538207	89536	538207	1		

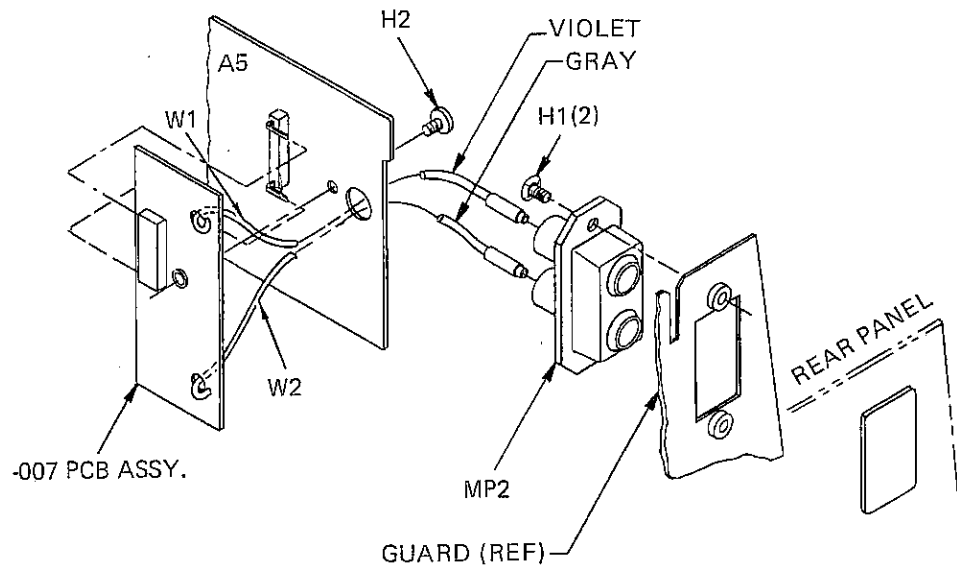

8860A-007

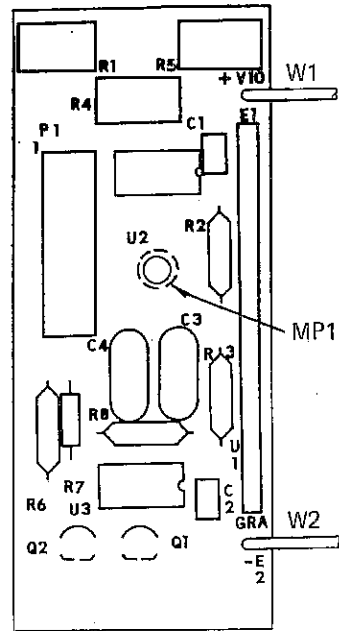

8860A-1616

Figure 007-1. External Reference, option 007

Table 7A-2. Material Affected By a Change

TYPE OF CHANGE	MATERIAL AFFECTED = •		
	Parts List	Schematic	Component Location
Electrical Value	•	•	
Part Number	•		
Hardware	•		•
Size/Location (physical)			•
Addition/Deletion (electrical)	•	•	•

Change #1 13321
A/D and Ohms Converters PCB Assembly

Change R5
FROM: Res, dep car, 10k $\pm 5\%$, $\frac{1}{4}$ W/ 348839/ 89536/ 348839
TO: Res, dep car, 100k $\pm 5\%$, $\frac{1}{4}$ W/ 348920/ 89536/ 348920

Change #2 13322
AC/DC Scaling PCB Assembly

Change C35 and C36
FROM: Cap, cer, 15pF $\pm 2\%$, 100V/ 369074/ 89536/ 369074
TO: Cap, cer, 12pF $\pm 2\%$, 100V/ 376871/ 89536/ 376871

Change R37
FROM: Res, dep car, 200 $\pm 5\%$, $\frac{1}{4}$ W/ 441451/ 80031/ 441451
TO: Res, dep car, 2k $\pm 5\%$, $\frac{1}{4}$ W/ 441469/ 80031/ 441469

Change #3 13636
AC/DC Scaling PCB Assembly

Change R30
FROM: Res, mf, 511k $\pm 1\%$, $\frac{1}{8}$ W/ 292868/ 89536/ 292868
TO: Res, mf, 2k $\pm 1\%$, $\frac{1}{8}$ W/ 235226/ 89536/ 235226

Change R28
FROM: Res, mf, 3.83k $\pm 1\%$, $\frac{1}{8}$ W, 235143, 89536/ 235143
TO: Res, mf, 1.19k $\pm 1\%$, $\frac{1}{8}$ W, 349126/ 89536/ 349126

Change R29
FROM: Res, var, 1k $\pm 10\%$, $\frac{1}{2}$ W/ 285155/ 89536/ 285155
TO: Res, var, 500 $\pm 10\%$, $\frac{1}{2}$ W/ 291120/ 89536/ 291120

Change C17
FROM: Cap, cer, 33pF $\pm 2\%$, 100V, 354852/ 89536/ 354852
TO: Cap, cer, 22pF $\pm 5\%$, 100V, 448449/ 89536/ 448449

Change the part number of Q19
FROM: 386730/ 89536/ 386730
TO: 261578/ 89536/ 261578

Change R37
FROM: Res, dep car, 100 $\pm 5\%$, $\frac{1}{4}$ W/ 348771/ 89536/ 348771
TO: Res, dep car, 200 $\pm 5\%$, $\frac{1}{4}$ W/ 441451/ 89536/ 441451

Change R5
FROM: Res, dep car, 22k $\pm 5\%$, $\frac{1}{4}$ W, 348870/ 89536/ 348870
TO: Res, dep car, 10k $\pm 5\%$, $\frac{1}{4}$ W, 348839/ 89536/ 348839

Change R2, R3, R4, R33, R35, and R36
FROM: Res, dep car, 47k $\pm 5\%$, $\frac{1}{4}$ W/ 348896/ 89536/ 348896
TO: Res, dep car, 22k $\pm 5\%$, $\frac{1}{4}$ W/ 348870/ 89536/ 348870

Change R68
FROM: Res, dep car, 100k $\pm 5\%$, $\frac{1}{4}$ W/ 348920/ 89536/ 348920
TO: Res, dep car, 91k $\pm 5\%$, $\frac{1}{4}$ W/ 441709/ 89536/ 441709

Delete C43
Cap, cer, 22pF $\pm 5\%$, 100V/ 448449/ 89536/ 448449

Delete C44
Cap, cer, 0.68pF, 458011/ 89536/ 458011

Delete CR9
Diode, Si, low cap, 375907/ 89536/ 375907


Change #4 13643
Main PCB Assembly

Add Q14
Transistor, JFET/ 343830/ 89536/ 343830

Delete C18
Cap, Ta, 22uF $\pm 20\%$, 15V/ 423012/ 89536/ 423012

Delete CR7
Diode, Si/ 203323/ 89536/ 203323

Change schematic to:

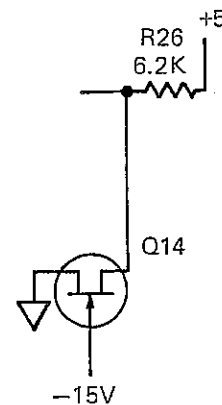

Change #5 13834
A/D and Ohms Converters PCB Assembly

Change C1
FROM: Cap, cer, .005 uF $\pm 20\%$, 50V/ 175232/ 89536/ 175232
TO: Cap, cer, .05 uF $\pm 20\%$, 50V/ 149161/ 89536/ 149161

Change R26
FROM: Res, dep car, 8.2k $\pm 5\%$, $\frac{1}{4}$ W/ 441675/ 89536/ 441675
TO: Res, dep car, 6.8k $\pm 5\%$, $\frac{1}{8}$ W/ 368761/ 89536/ 368761

Change #6 13835
Main PCB Assembly

Change R32, R33, R34, and R35
FROM: Res, dep car, 150k $\pm 5\%$, $\frac{1}{4}$ W/ 348938/ 89536/ 348938
TO: Res, dep car, 390k $\pm 5\%$, $\frac{1}{4}$ W/ 442475/ 89536/ 442475

Change #7 13899
AC/DC Scaling PCB Assembly

Change U17
FROM: IC, Xstr array, dual/ 504191/ 89536/ 504191
TO: IC, Xstr array, quad/ 445213/ 89536/ 445213

Change R68
FROM: Res, dep car, 120k $\pm 5\%$, $\frac{1}{4}$ W/ 441386/ 89536/ 441386
TO: Res, dep car, 100k $\pm 5\%$, $\frac{1}{4}$ W/ 348920/ 89536/ 348920

Delete U20
IC, Xstr array, dual/ 504191/ 89536/ 504191

Delete R66
Res, mf, 1k $\pm 1\%$, $\frac{1}{8}$ W/ 320309/ 89536/ 320309

Delete
Heatsink, xstr, U17 and U20/ 354993/ 89536/ 354993

Add R60
Res, var, 3 $\pm 25\%$, $\frac{1}{2}$ W/ 347963/ 89536/ 347963
Connect between U17-7 and U17-4/5.
Locate between R54 and R67.

Add R64

Res, dep car, $1 \pm 5\%$, $\frac{1}{4}W$ / 357665/ 89536/ 357665
 Connect between U17-10 and junction of R68/ U17-2.
 Locate between R50 and R68.

Change #8 13925

A/D and Ohms Converter PCB Assembly

Change R6 and R7

FROM: Res, mf, $10k \pm 1\%$, $\frac{1}{4}W$ / 168260/ 89536/ 168260
 TO: Res, mf, $20k \pm 1\%$, $\frac{1}{4}W$ / 291872/ 89536/ 291872

Change #9 13936

Controller PCB Assembly

Change U6

FROM: Res, network, 82/ 478859/ 89536/ 478859
 TO: Res, network, 51/ 501502/ 89536/ 501502

Change #10 13965

AC/DC Scaling PCB Assembly

Change R24

FROM: Res, dep car, $4.3k \pm 5\%$, $\frac{1}{4}W$ / 441576/ 89536/ 441576
 TO: Res, dep car, $6.8k \pm 5\%$, $\frac{1}{8}W$ / 368761/ 89536/ 368761

Change U19

FROM: IC, op amp, linear / 473777/ 89536/ 473777
 TO: IC, op amp, linear / 507947/ 89536/ 507947

Change #11 13970

AC/DC Scaling PCB Assembly

Change C21

FROM: Cap, cer, $2.2 pF \pm 2\%$, 100V/ 362731/ 89536/ 362731
 TO: Cap, cer, $4.7 pF \pm 2\%$, 100V/ 362772/ 89536/ 362772

Change #12 14385

AC/DC Scaling PCB Assembly

Change R75

FROM: Res, mf, $715 \pm 1\%$, $\frac{1}{8}W$ / 313080/ 89536/ 313080
 TO: Res, mf, $806 \pm 1\%$, $\frac{1}{8}W$ / 223552/ 89536/ 223552

Change #13 14397

AC/DC Scaling PCB Assembly

Add Q10

Xstr, JFET/ 343830/ 89536/ 343830
 Connect in parallel with Q11.
 Locate between U1 and R11.

Change Q3

FROM: Xstr, JFET/ 535039/ 89536/ 535039
 TO: Xstr, JFET/ 343830/ 89536/ 343830

Change Q8

FROM: Xstr, JFET/ 508697/ 89536/ 508697
 TO: Xstr, JFET/ 343830/ 89536/ 343830

Change Q11

FROM: Xstr, JFET/ 429977/ 89536/ 429977
 TO: Xstr, JFET/ 343830/ 89536/ 343830

Change R30

FROM: Res, mf, $4.99k \pm 1\%$, $\frac{1}{8}W$ / 168252/ 89536/ 168252
 TO: Res, mf, $5.11k \pm 1\%$, $\frac{1}{8}W$ / 294868/ 89536/ 294868


Change #14 14528

Controller PCB Assembly

Delete

C10/ Cap, cer, $.22 \mu F \pm 2\%$, 50V/ 519157/ 89536/ 519157
 Q1 / Xstr, NPN/ 218396/ 89536/ 218396
 R13/ Res, dep car, $2k \pm 5\%$, $\frac{1}{4}W$ / 441469/ 89536/ 441469
 R14/ Res, dep car, $220 \pm 5\%$, $\frac{1}{4}W$ / 342626/ 89536/ 342626

Change schematic to:

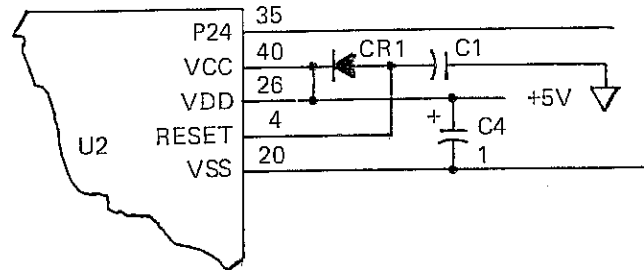

Change #15 14529

Main PCB Assembly

Change C8

FROM: Cap, elect, 1200 μF -10/+100%, 200V/ 500322/ 89536/
 500322
 TO: Cap, Ta, $150 \mu F \pm 20\%$, 20V/ 422576/ 89536/
 422576

Change C9

FROM: Cap, cer, $.22 \mu F \pm 20\%$, 50V/ 519157/ 89536/ 519157
 TO: Cap, Ta $150 \mu F \pm 20\%$, 20V/ 422576/ 89536/ 422576


Change C18

FROM: Cap, cer, $.22 \mu F \pm 20\%$, 50V/ 519157/ 89536/ 519157
 TO: Cap, Ta $22 \mu F \pm 20\%$, 15V/ 423012/ 89536/ 423012

Delete

C14/ Cap, Ta, $2.2 \mu F \pm 20\%$, 20V/ 161927/ 89536/ 161927
 Q15/ Xstr, Si, NPN/ 218396/ 89536/ 218396
 R27/ Res, dep car, $2k \pm 5\%$, $\frac{1}{4}W$ / 441469/ 89536/ 441469
 R28/ Res, dep car, $220 \pm 5\%$, $\frac{1}{4}W$ / 342626/ 89536/ 342626

Change schematic to:

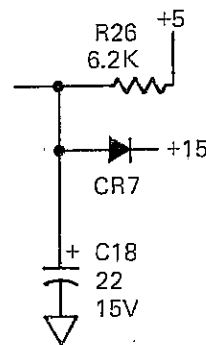

Change #16 14624

AC/DC Scaling PCB Assembly

Change C35 and C36

FROM: Cap, cer, $22 pF \pm 5\%$, 100V/ 448449/ 89536/ 448449

TO: Cap, cer, 15 pF $\pm 2\%$, 100V/ 369074/ 89536/ 369074
 Change #17 14663
 AC/DC Scaling PCB Assembly

Change R28
 FROM: Res, mf, 3.4k $\pm 1\%$, $\frac{1}{8}W$ / 260323/ 89536/ 260323
 TO: Res, mf, 3.83k $\pm 1\%$, $\frac{1}{8}W$ / 235143/ 89536/ 235143

Change R29
 FROM: Res, var, 2k $\pm 10\%$, $\frac{1}{2}W$ / 285163/ 89536/ 285163
 TO: Res, var, 1k $\pm 10\%$, $\frac{1}{2}W$ / 285155/ 89536/ 285155

Change #18 14872
 AC/DC Scaling PCB Assembly

Change C32
 FROM: Cap, mylar, .47 uF $\pm 10\%$, 100V/ 369124/ 89536/
 369124
 TO: Cap, mylar, .47 uF $\pm 10\%$, 100V/ 446807/ 89536/
 446807

Change C34
 FROM: Cap, poly, .22 uF $\pm 10\%$, 100V/ 614172/ 89536/ 614172
 TO: Cap, mylar, .22 uF $\pm 10\%$, 100V/ 436113/ 89536/
 436113

Change #19 14887
 AC/DC Scaling PCB Assembly

Add C24
 Cap, cer, .22 uF $\pm 20\%$, 50V/ 309849/ 89536/ 309849
 Connect between Pins 2 and 3 of U13.
 Locate between C25 and C26.

Change #20 15061
 Controller PCB Assembly

Change C4, C5, and C6
 FROM: Cap, cer, .22 uF $\pm 20\%$, 50V/ 519157/ 89536/ 519157
 TO: Cap, Ta 1 uF $\pm 20\%$, 35V/ 161919/ 89536/ 161919

Delete C11
 Cap, cer, .22 uF $\pm 20\%$, 50V/ 519157/ 89536/ 519157

Section 8

Schematic Diagrams

FIGURE	TABLE OF CONTENTS TITLE	PAGE
8-1	8860A PCB Locations	8-2
8-2	8860A PCB Interconnect Diagram	8-3
8-3	A1 Main PCB Assembly	8-4
8-4	A2 Display PCB Assembly	8-6
8-5	A3 Controller PCB Assembly	8-8
8-6	A4 AC/DC Scaling PCB Assembly	8-10
	RMS-to-DC Converter	8-10
8-7	A5 A/D and Ohms Converters PCB Assembly	8-14
	Calculating Controller, Option -004	8-18
8-8	Calculator/Printer PCB Assembly	8-20
8-9	Rear Interface PCB Assembly	8-21
8-10	Memory Cartridge PCB Assembly	8-22
8-11	Control Keyboard PCB Assembly	8-23
	IEEE-488 Interface, Option -005	8-24
8-12	IEEE-488 Interface PCB Assembly	8-25
8-13	Rear Interconnect PCB Assembly	8-25
8-14	Rear Input PCB Assembly, Option -006	8-26
8-15	External Reference PCB Assembly, Option -007	8-26

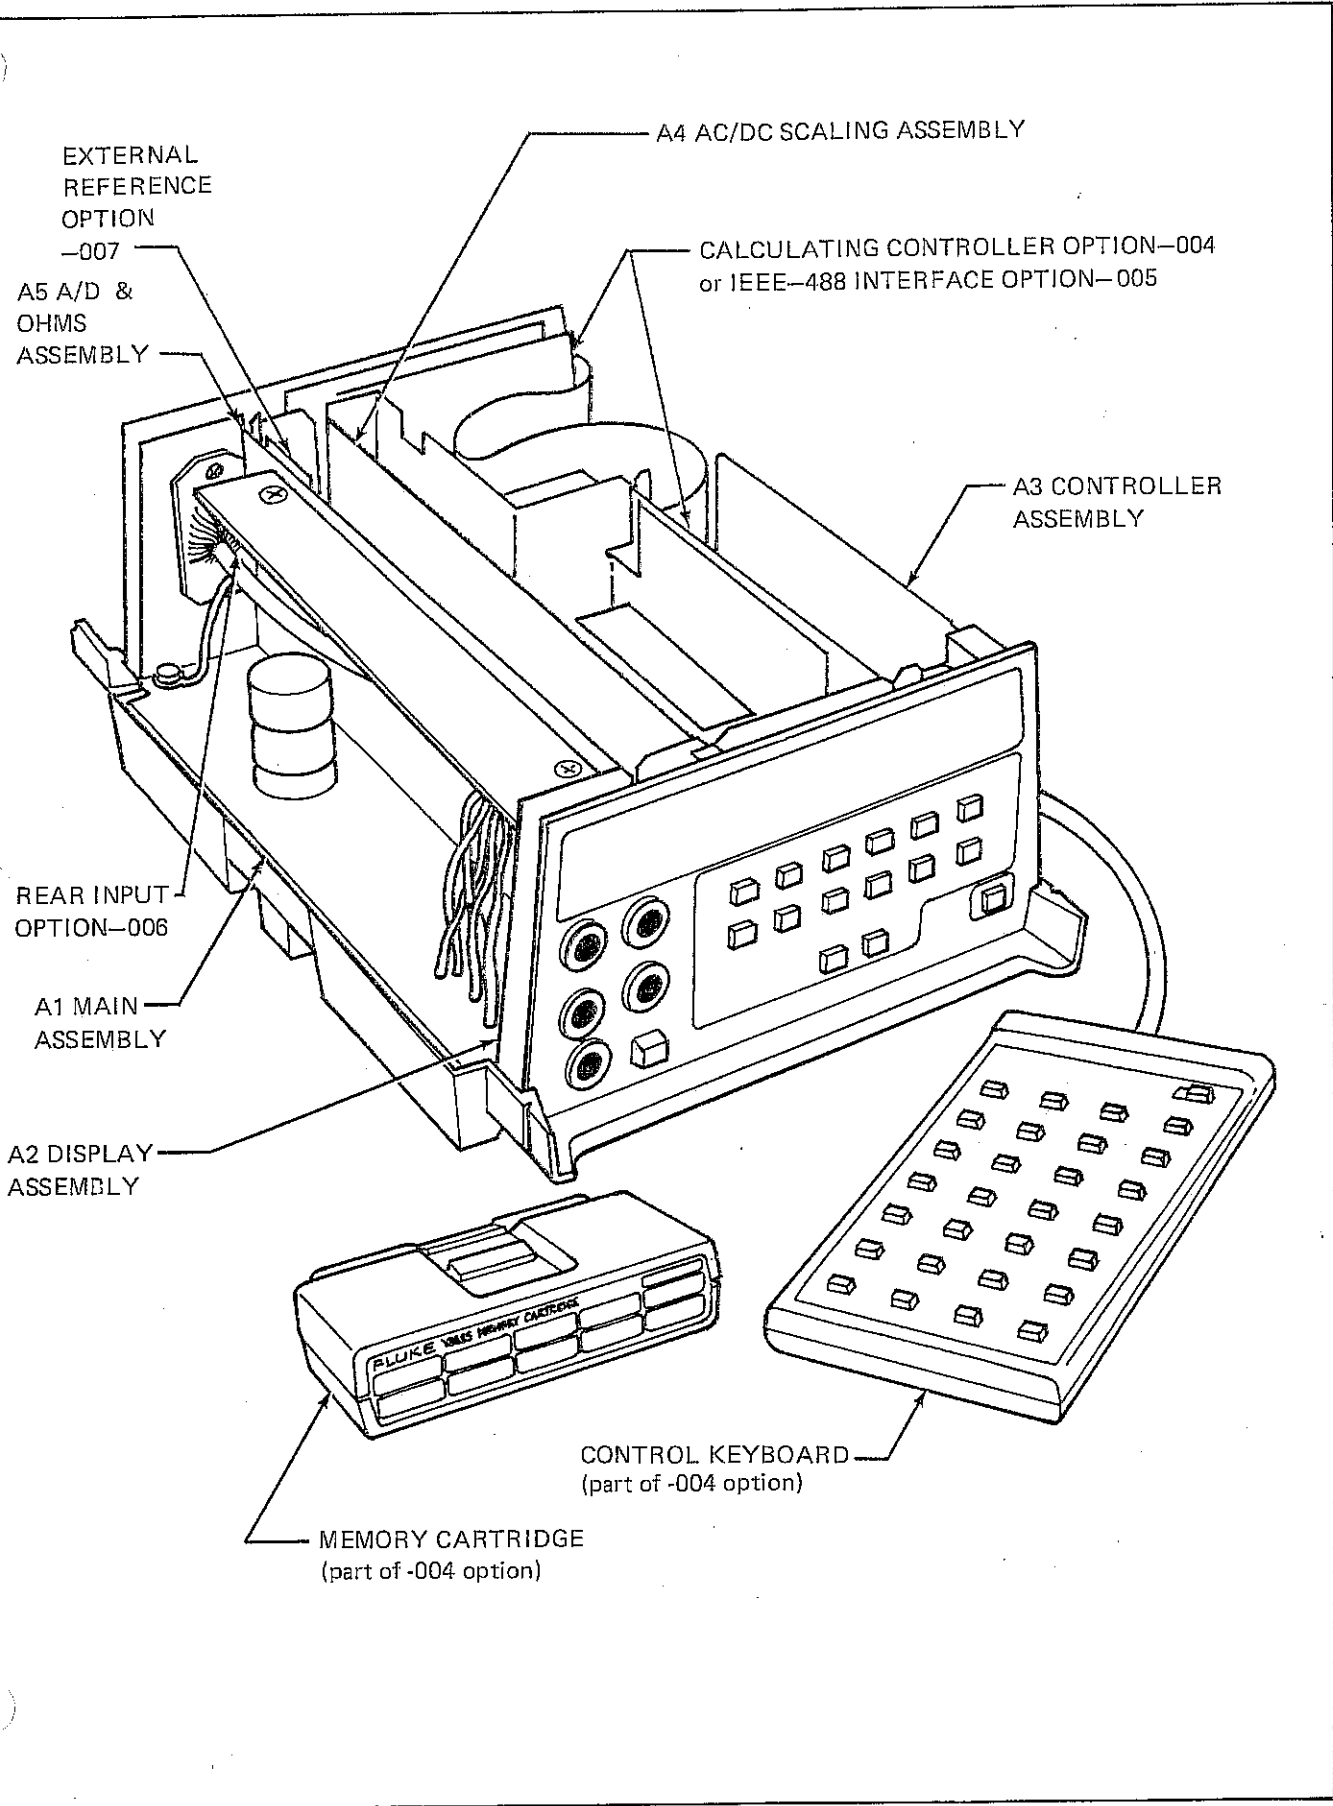


Figure 8-1. 8860A PCB Locations


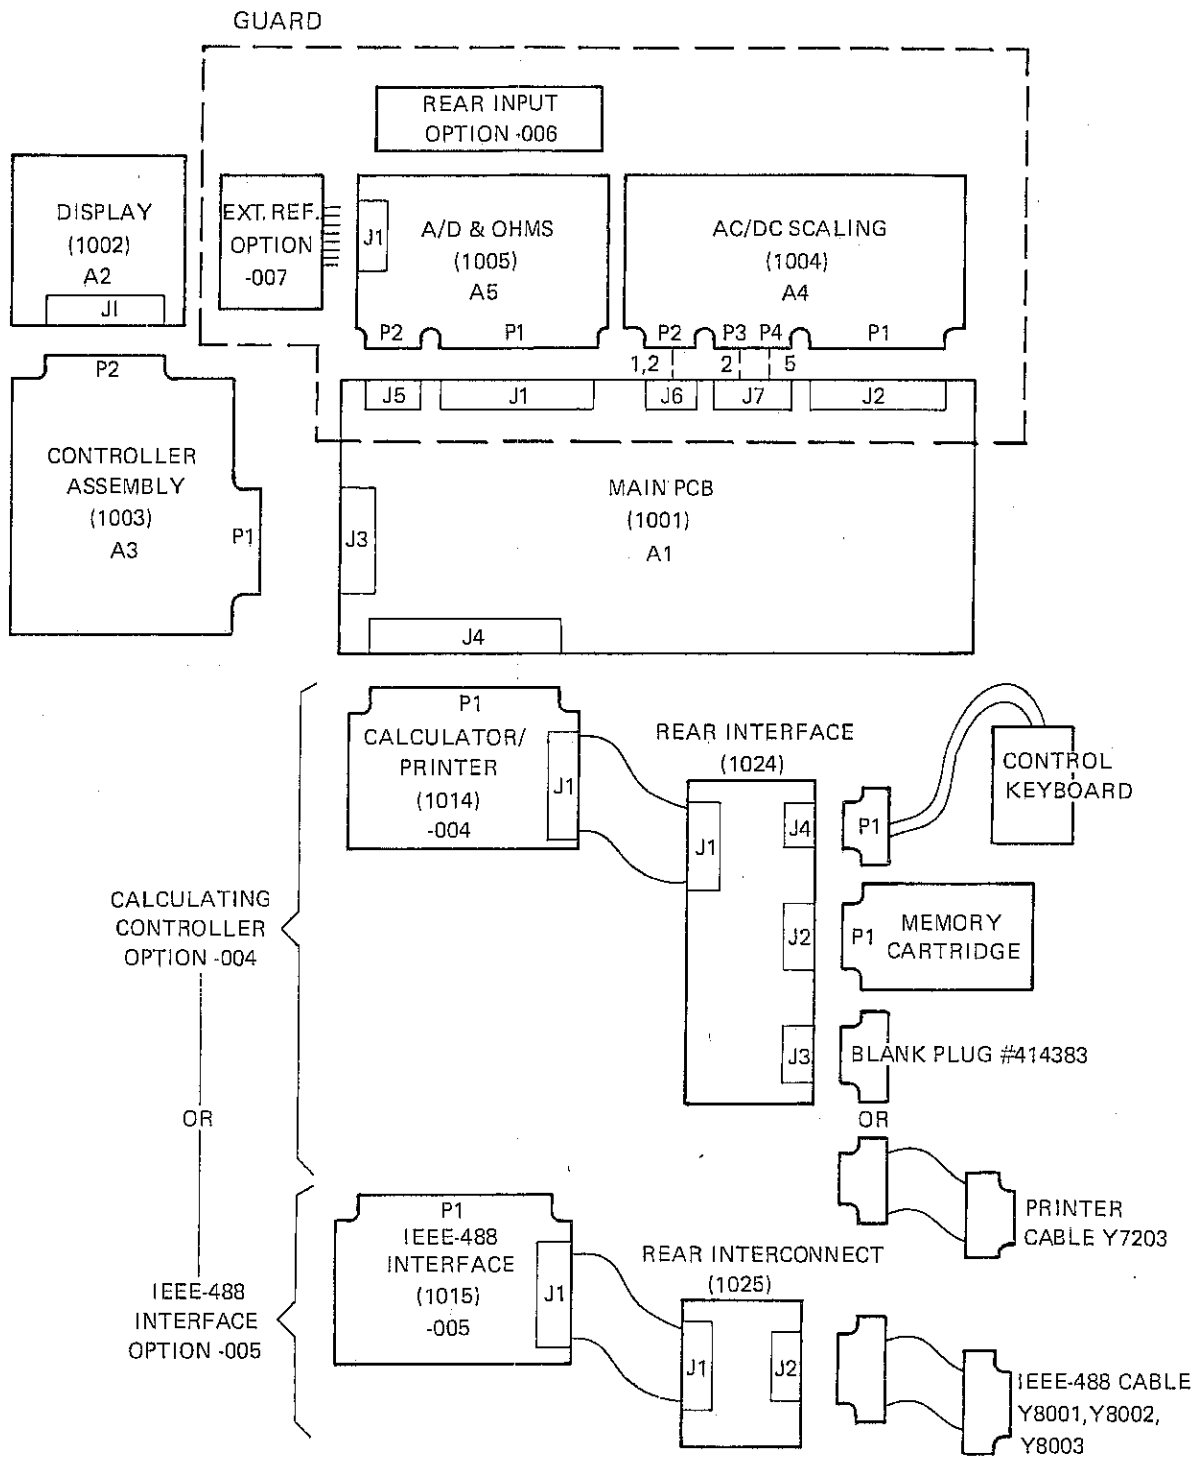


Figure 8-2. 8860A PCB Interconnect Diagram

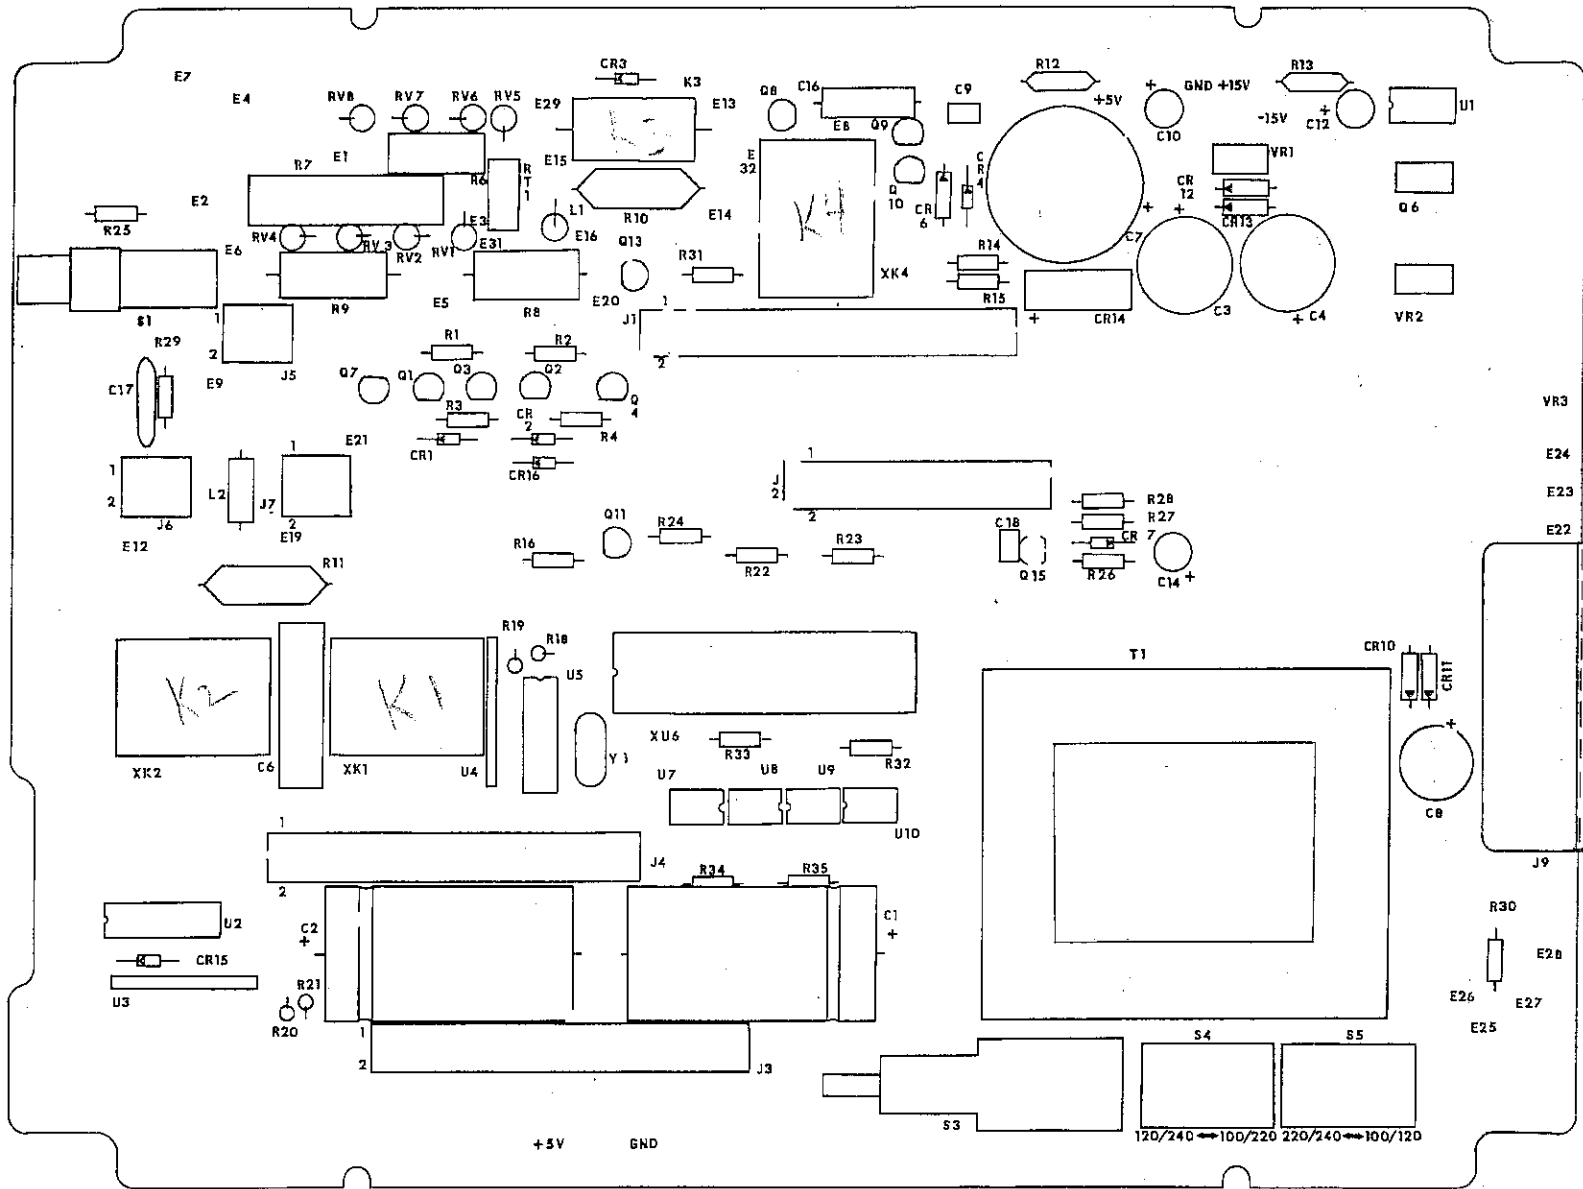

RELAY STATE TABLE

OFF = Relay coil de-energized, contacts are in the relaxed position shown on the schematic.
 ON = Relay coil energized, contacts are switched opposite the position shown on the schematic.

SWITCH	VDC	VAC	VAC +VDC	Ω2T	Ω4T	
RELAY K1						
200 mV	ON	OFF	ON	ON	ON	200 Ω
2 V	ON	OFF	ON	ON	ON	2 K Ω
20 V	OFF	OFF	OFF	ON	ON	20 K Ω
200 V	OFF	OFF	OFF	ON	ON	200 K Ω
1000 V	OFF	OFF	OFF	ON	ON	2 M Ω
				ON	ON	20 M Ω
RELAY K2						
200 mV	ON	ON	OFF	ON	ON	200 Ω
2 V	ON	ON	OFF	ON	ON	2 K Ω
20 V	OFF	OFF	OFF	ON	ON	20 K Ω
200 V	OFF	OFF	OFF	ON	ON	200 K Ω
1000 V	OFF	OFF	OFF	ON	ON	2 M Ω
				ON	ON	20 M Ω
RELAY K3						
200 mV	OFF	OFF	ON	OFF	OFF	200 Ω
2 V	OFF	OFF	ON	OFF	OFF	2 K Ω
20 V	ON	OFF	ON	OFF	OFF	20 K Ω
200 V	ON	OFF	ON	OFF	OFF	200 K Ω
1000 V	ON	OFF	ON	OFF	OFF	2 M Ω
				OFF	OFF	20 M Ω
RELAY K4						
All ranges	OFF	OFF	OFF	ON	ON	

JFET STATE TABLE

FET Q13 (ON = conducting, OFF = non-conducting)						
All ranges	OFF	ON	ON	OFF	OFF	

Figure 8-3. A1 Main PCB Assembly

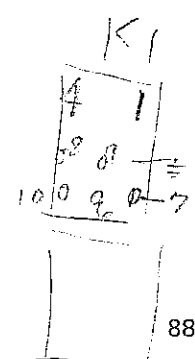
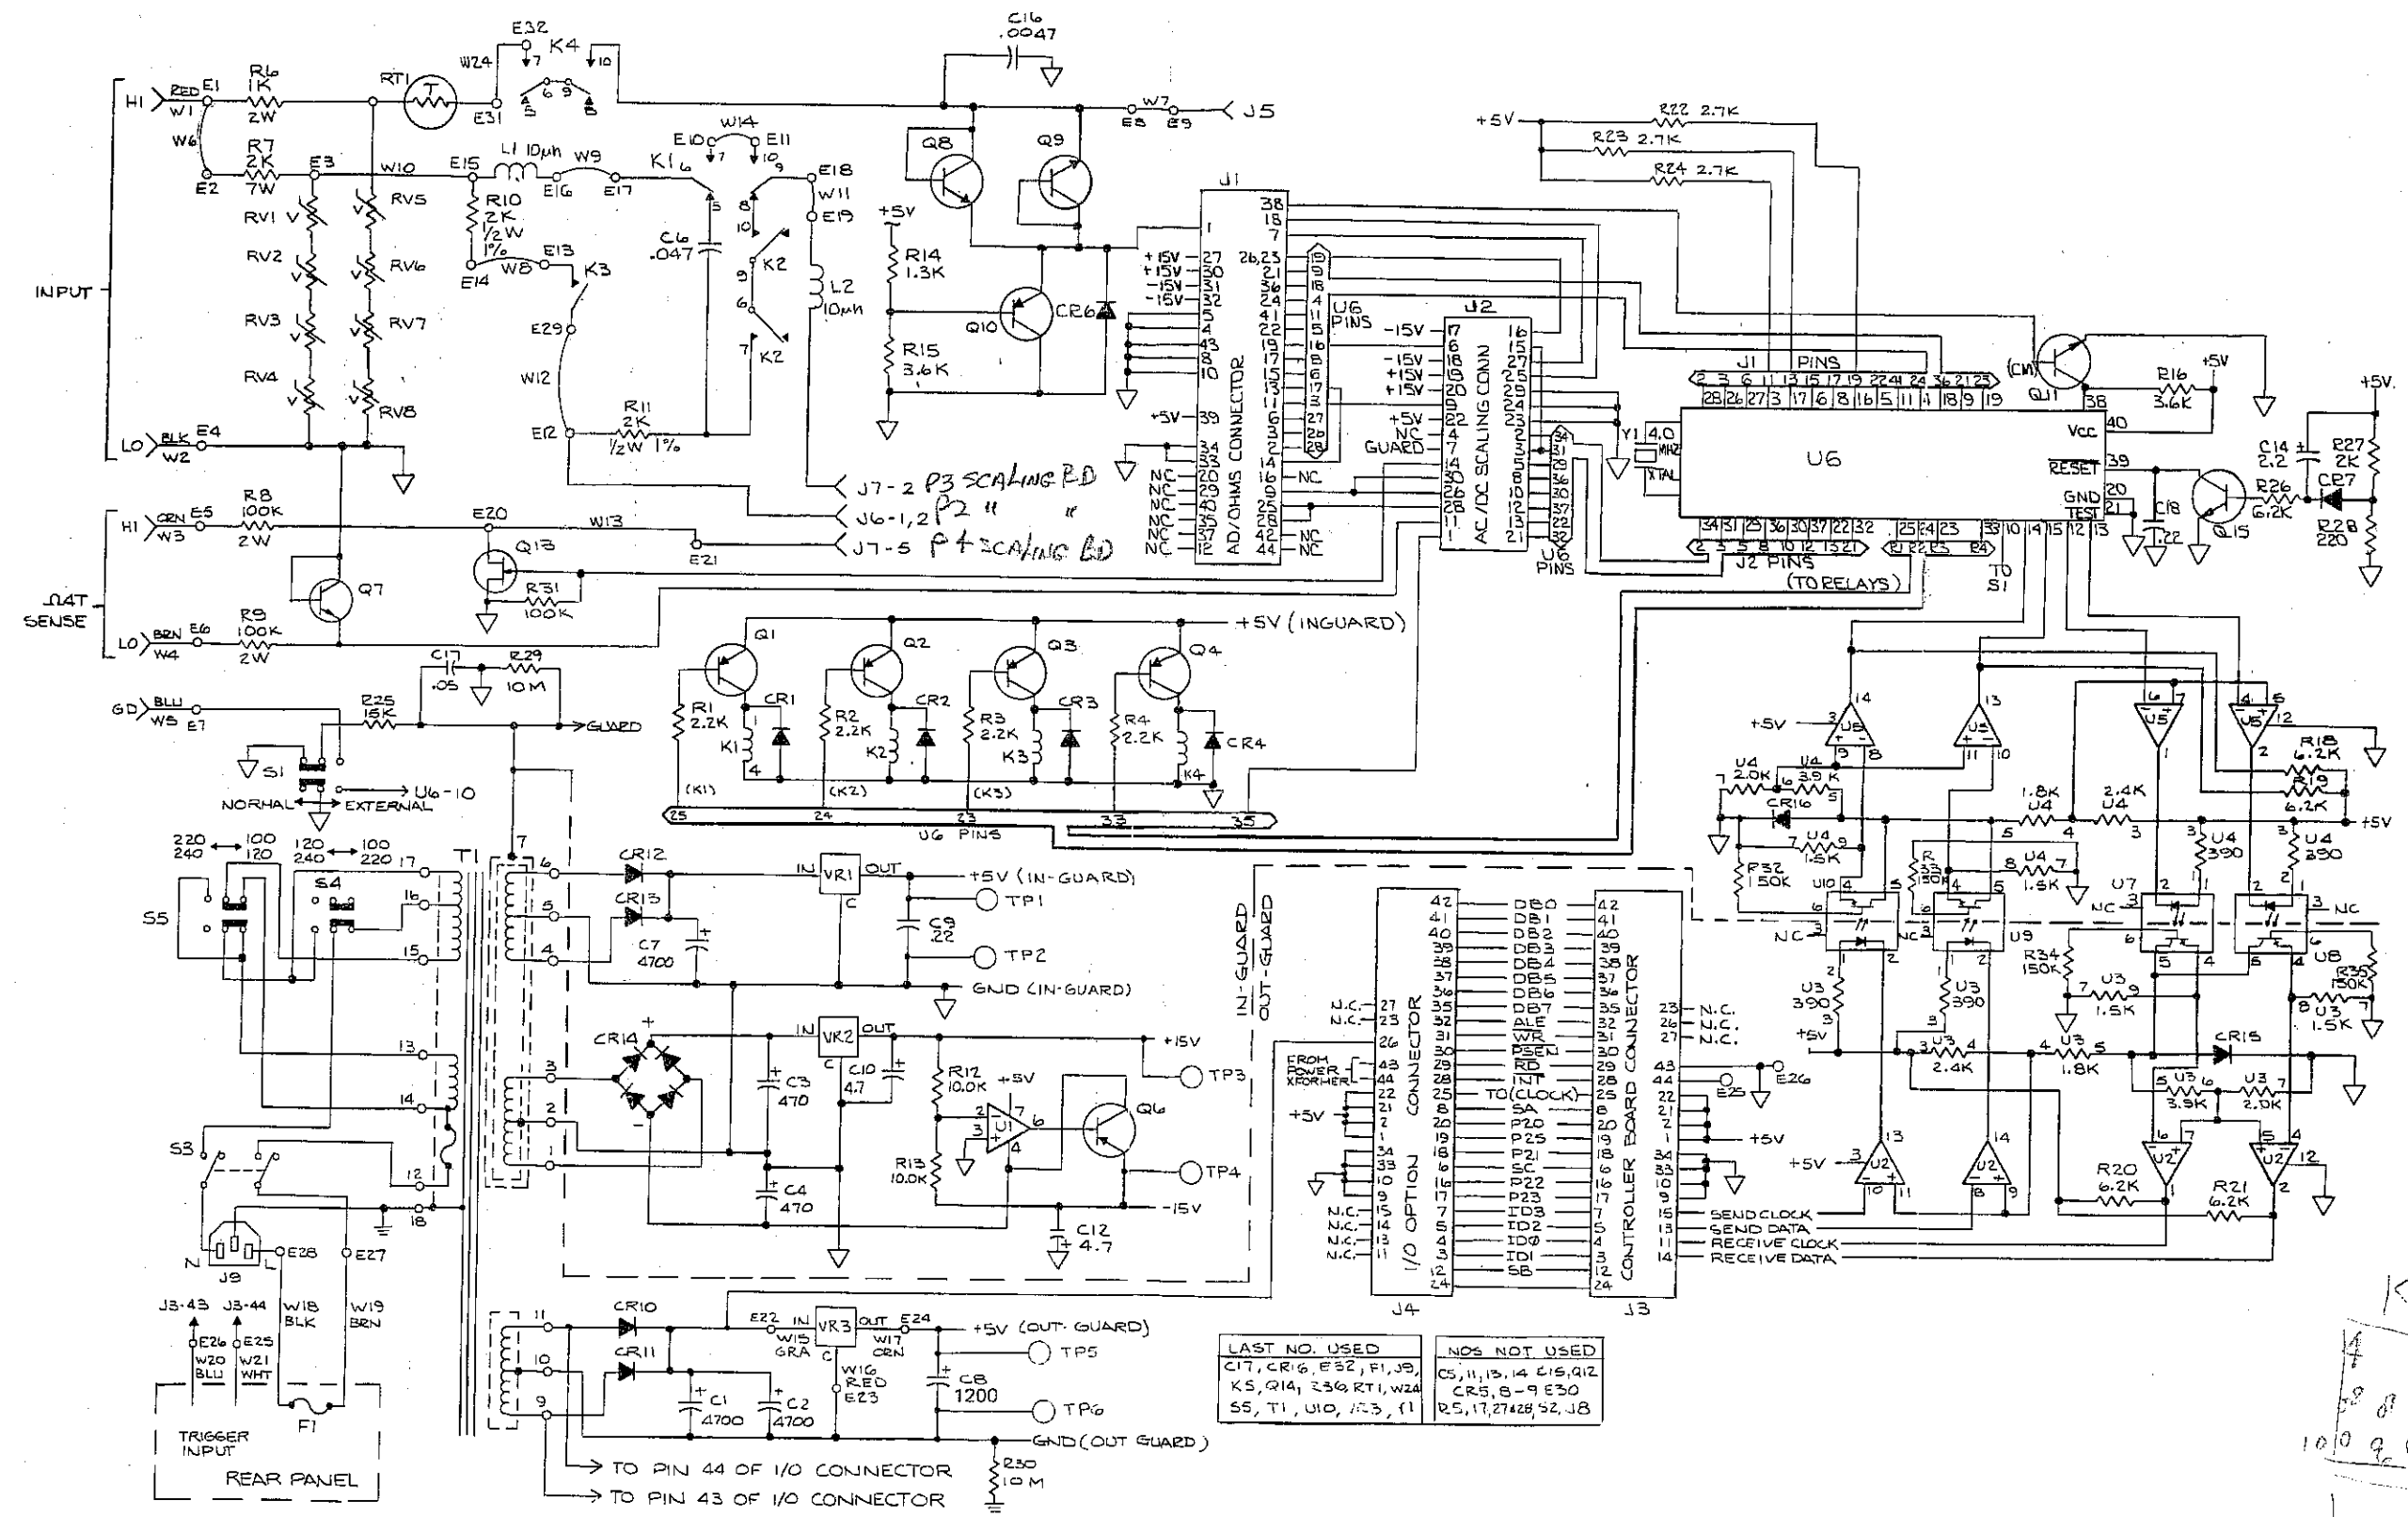


Figure 8-3. A1 Main PCB Assembly (cont)


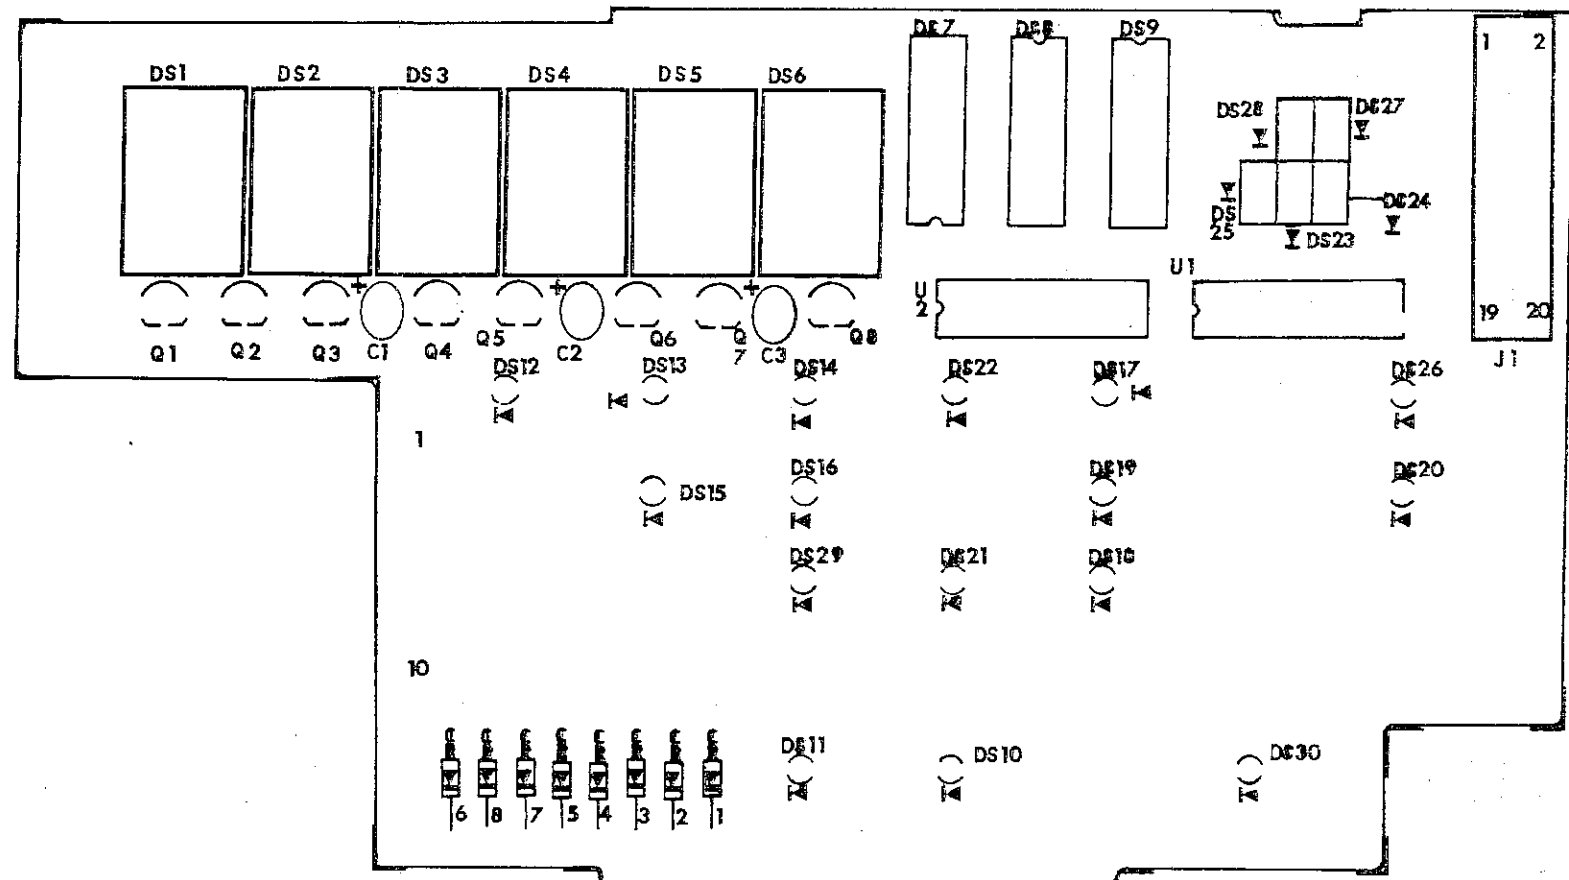


Figure 8-4. A2 Display PCB Assembly

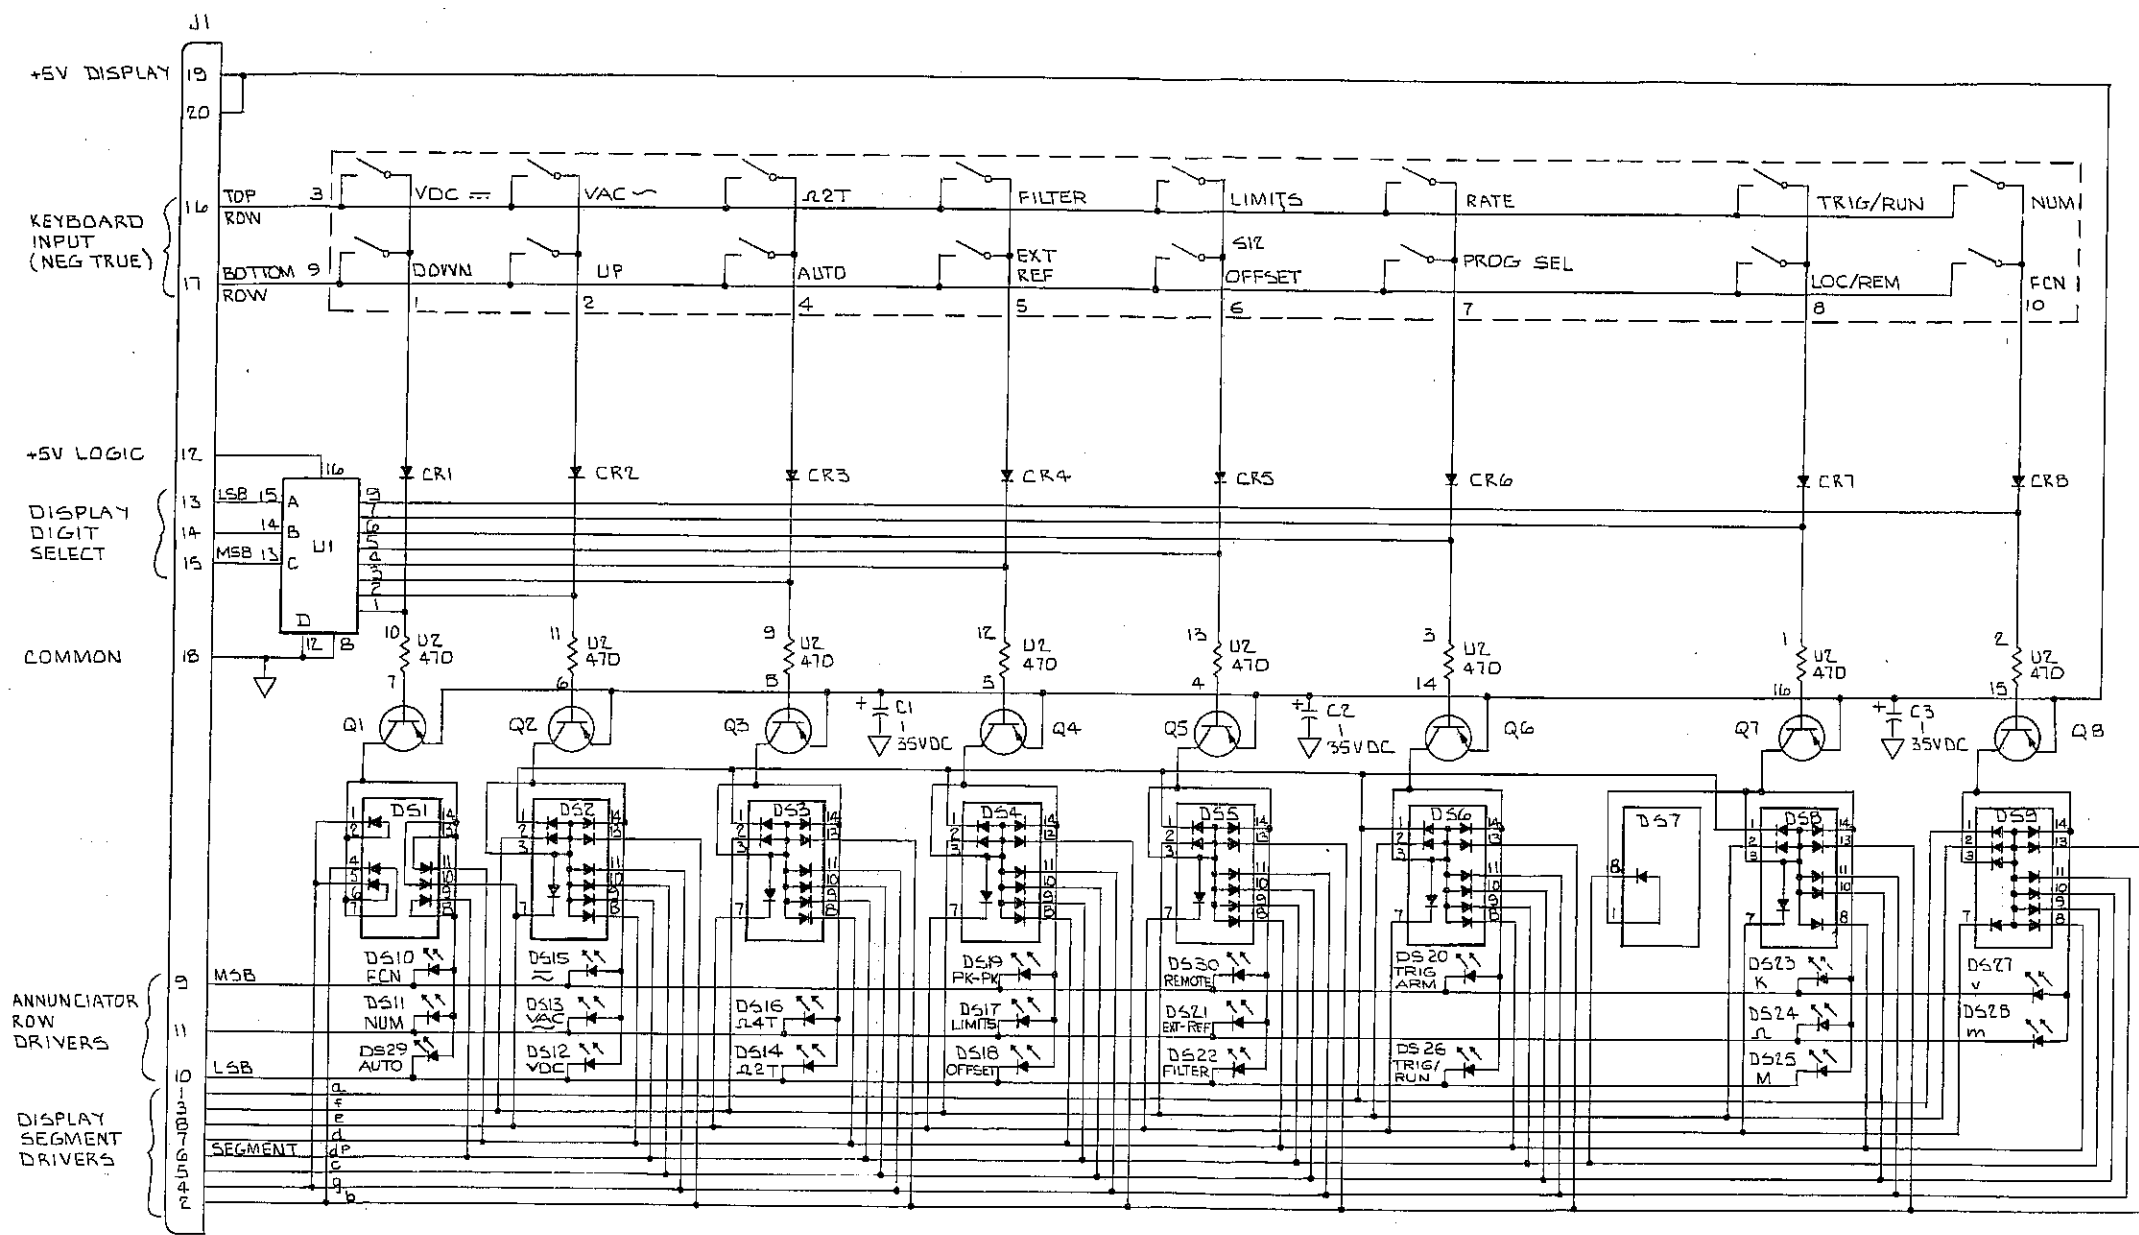

NOTES: UNLESS OTHERWISE SPECIFIED:
 ALL RESISTANCE VALUES ARE IN OHMS,
 ALL CAPACITANCE VALUES ARE IN MICROFARADS.

LAST NO. USED	
C3	CRB
DS30	JZ
Q8	RZ
S16	UZ

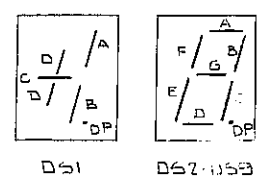


Figure 8-4. A2 Display PCB Assembly (cont)

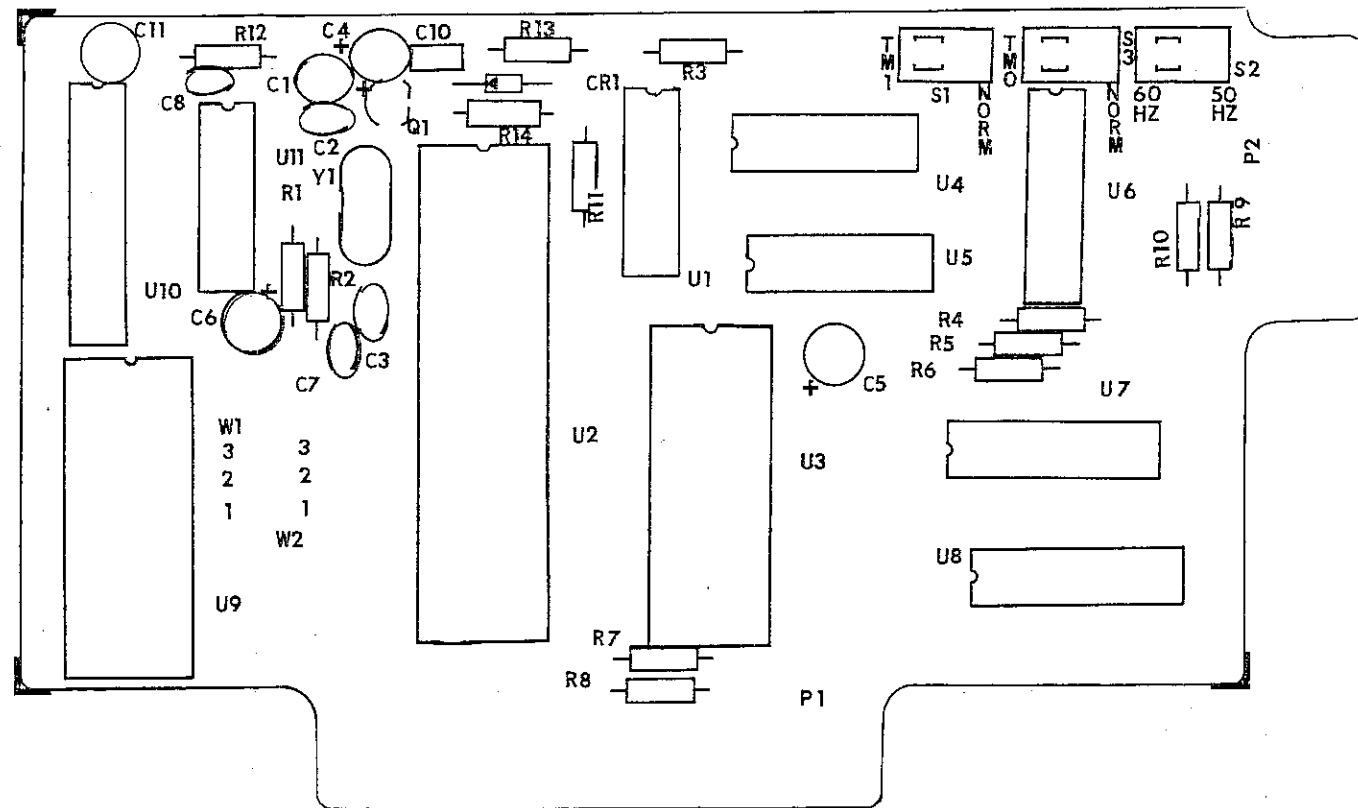


Figure 8-5. A3 Controller PCB Assembly

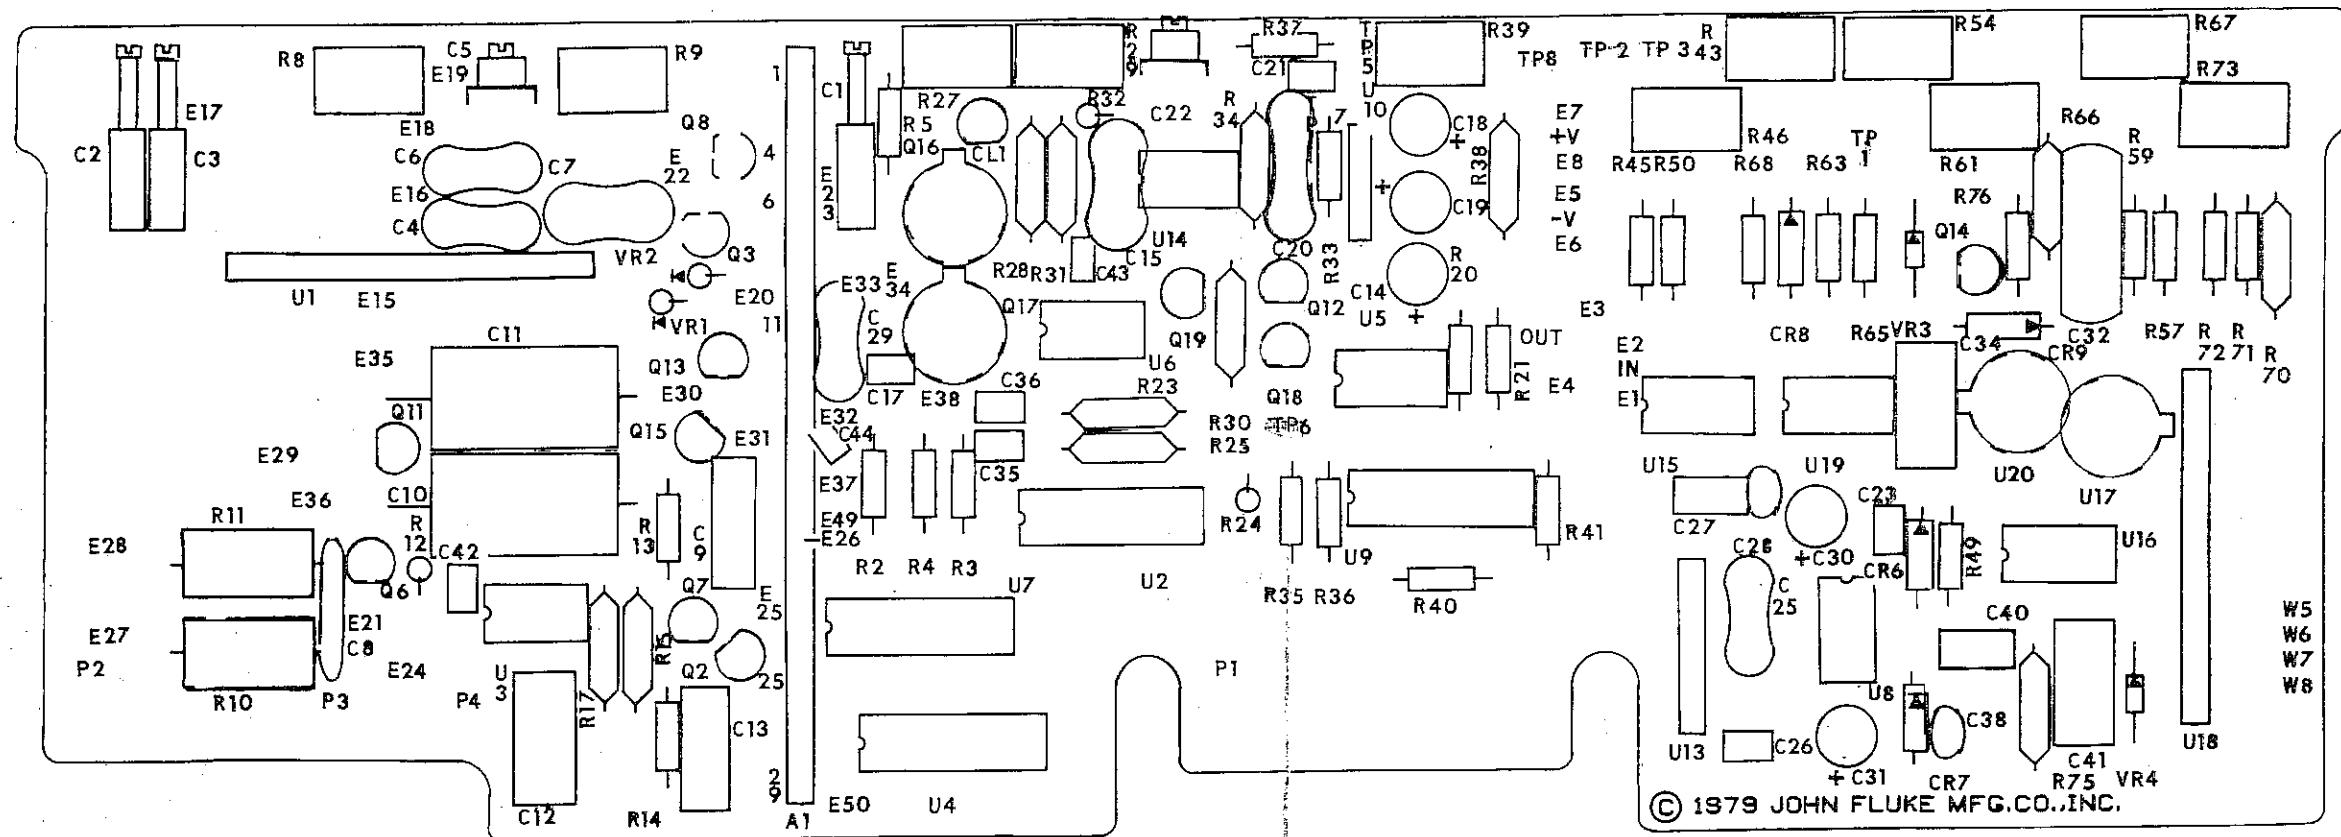


Figure 8-6. A4 AC/DC Scaling PCB Assembly

gate { ON - LO * 2.000
OFF HI * 4VCC (-15V)

JFET STATE TABLES

OFF = FET is not conducting.
ON = FET is conducting.

	VDC	VAC	VAC +VDC	Ω2T	Ω4T	
Q6						
200 mV, 2V	OFF	OFF	OFF	OFF	OFF	200 Ω, 2KΩ
20 V-1000 V	ON	ON	ON	OFF	OFF	20 KΩ - 20 MΩ
A1-A (gate pin 4)						
200 mV, 2V	ON	ON	ON	ON	OFF	200 Ω, 2KΩ
20 V-1000 V	OFF	OFF	OFF	ON	OFF	20 K - 20 MΩ
A1 - C (gate pin 22), A1 - E (gate pin 25)						
All ranges	OFF	OFF	OFF	OFF	ON	
A1 - D (gate pin 26)						
All ranges	ON	ON	ON	ON	OFF	
A1 - B (gate pin 3)						
200 mV, 2V	OFF	OFF	OFF	OFF	OFF	200 Ω, 2 KΩ
20 V, 200 V	ON	ON	ON	OFF	OFF	20 KΩ, 200 KΩ
1000 V	OFF	OFF	OFF	OFF	OFF	2 MΩ, 20 MΩ
Q13						
200 mV, 2V	OFF	OFF	OFF	OFF	OFF	200 Ω, 2KΩ
20 V, 200 V	OFF	OFF	OFF	OFF	OFF	20 KΩ, 200 KΩ
1000 V	ON	ON	ON	OFF	OFF	2 MΩ, 20 MΩ
A1 - F (gate pin 29)						
All ranges	INT	ON	ON	INT	INT	
A1 - G (gate pin 28)						
All ranges	INT	OFF	OFF	INT	INT	

	VDC	VAC	VDC +VAC	Ω2T	Ω4T	
Q19						
All ranges	ON	OFF	OFF	ON	ON	
Q12						
200 mV	OFF	OFF	OFF	OFF	OFF	200 Ω
2 V	ON	ON	ON	ON	ON	2 KΩ
20 V	OFF	OFF	OFF	ON	ON	20 KΩ
200 V, 1000 V	ON	ON	ON	ON	ON	200 KΩ - 20 MΩ
Q18						
200 mV	ON	ON	ON	ON	ON	200 Ω
2 V	OFF	OFF	OFF	OFF	OFF	2 KΩ
20 V	ON	ON	ON	OFF	OFF	20 KΩ
200 V, 1000 V	OFF	OFF	OFF	OFF	OFF	200 KΩ - 20 MΩ


	VDC	VDC +FIL	VAC	VAC +VDC	Ω2T	Ω2T +FIL	Ω4T	Ω4T +FIL	
Q11 (3-Pole Active Filter)									
200 mV-1000 V	OFF	ON	OFF	OFF	OFF	ON	OFF	ON	200 Ω - 200 KΩ
	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	2 MΩ, 20 MΩ
Q15 (Passive Filter)									
200 mV-1000 V	*	ON	OFF	OFF	*	ON	*	ON	200 Ω - 200 KΩ
	*	ON	OFF	OFF	OFF	ON	OFF	ON	2 MΩ, 20 MΩ


INT
D S E

* = { ON when in 4½ or 5½ digit mode, or if autoranging in 3½ digit mode
OFF when in 3½ digit mode, and not autoranging.

Figure 8-6. A4 AC/DC Scaling PCB Assembly (cont)

Form sheet 8860A-1001

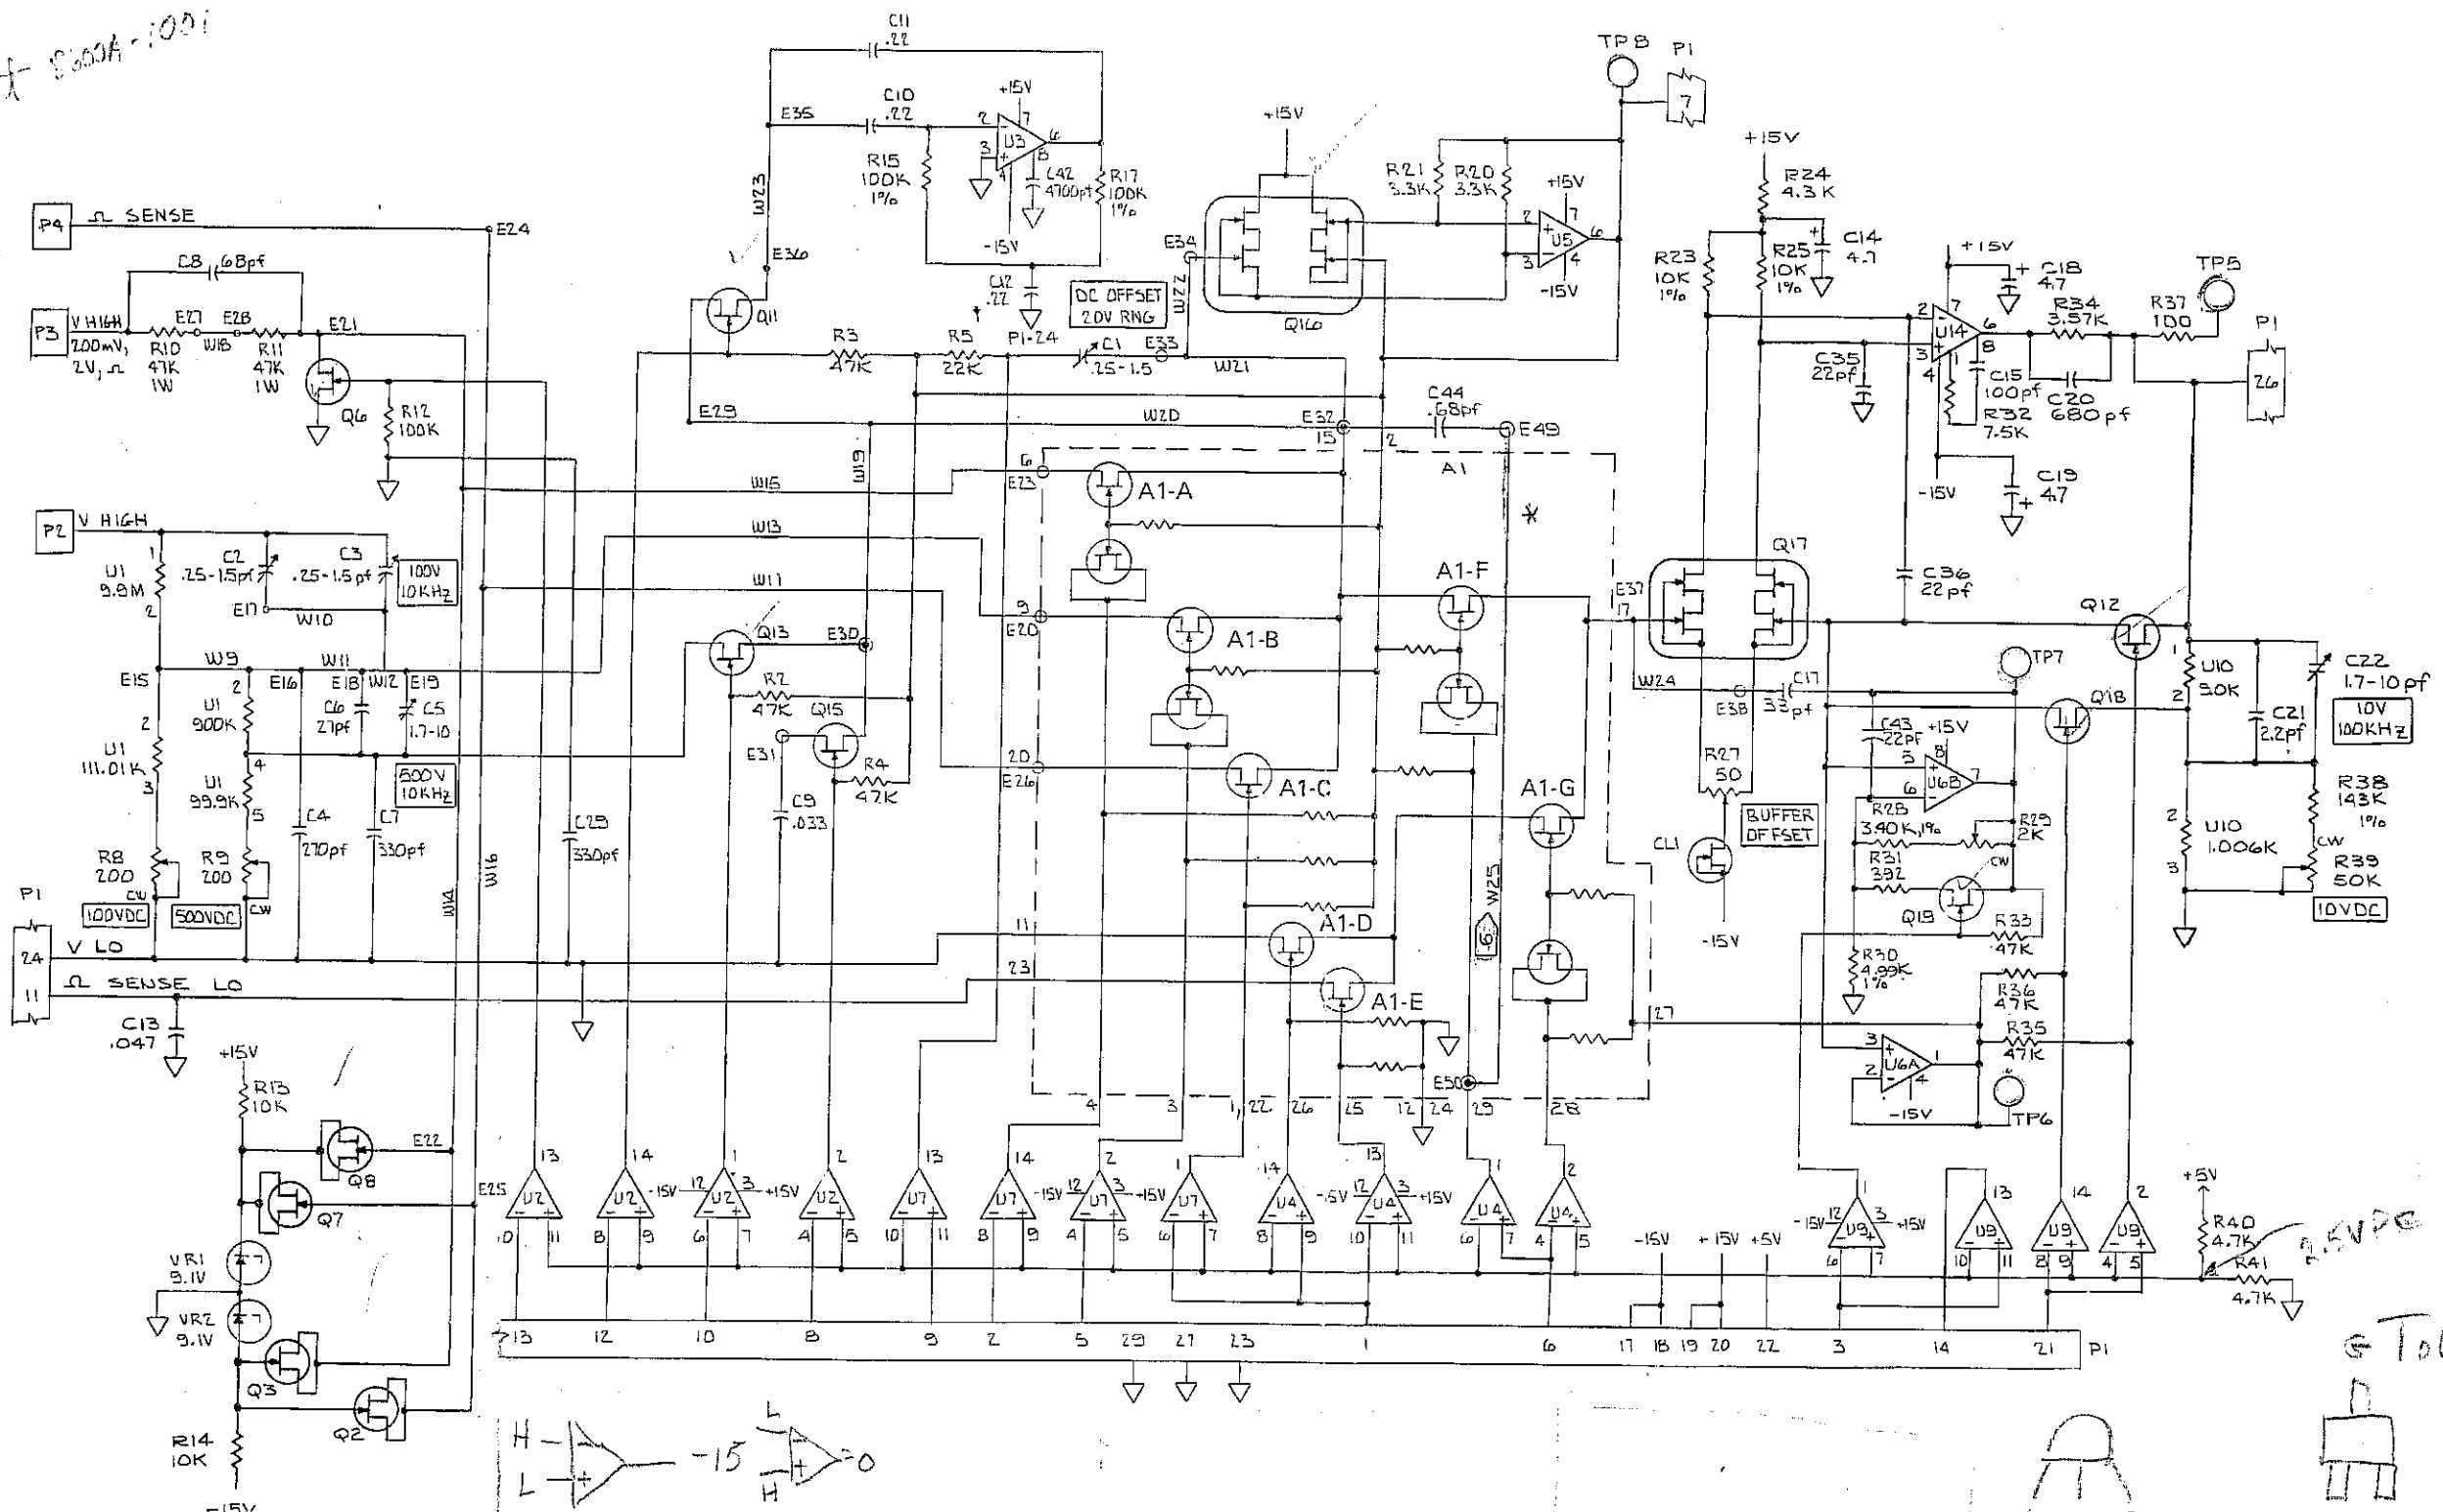

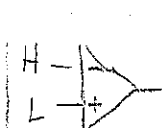

 H -15V L
 L -15V H
 W25 MAY BE REMOVED
 * removed on S/N 3665004


 D S G


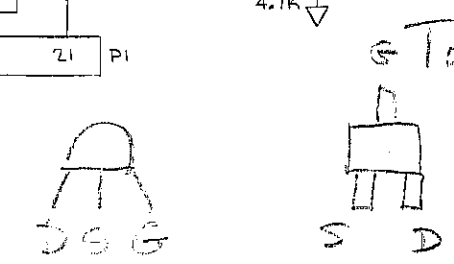
Top View


Figure 8-6. A4 AC/DC Scaling PCB Assembly (cont)

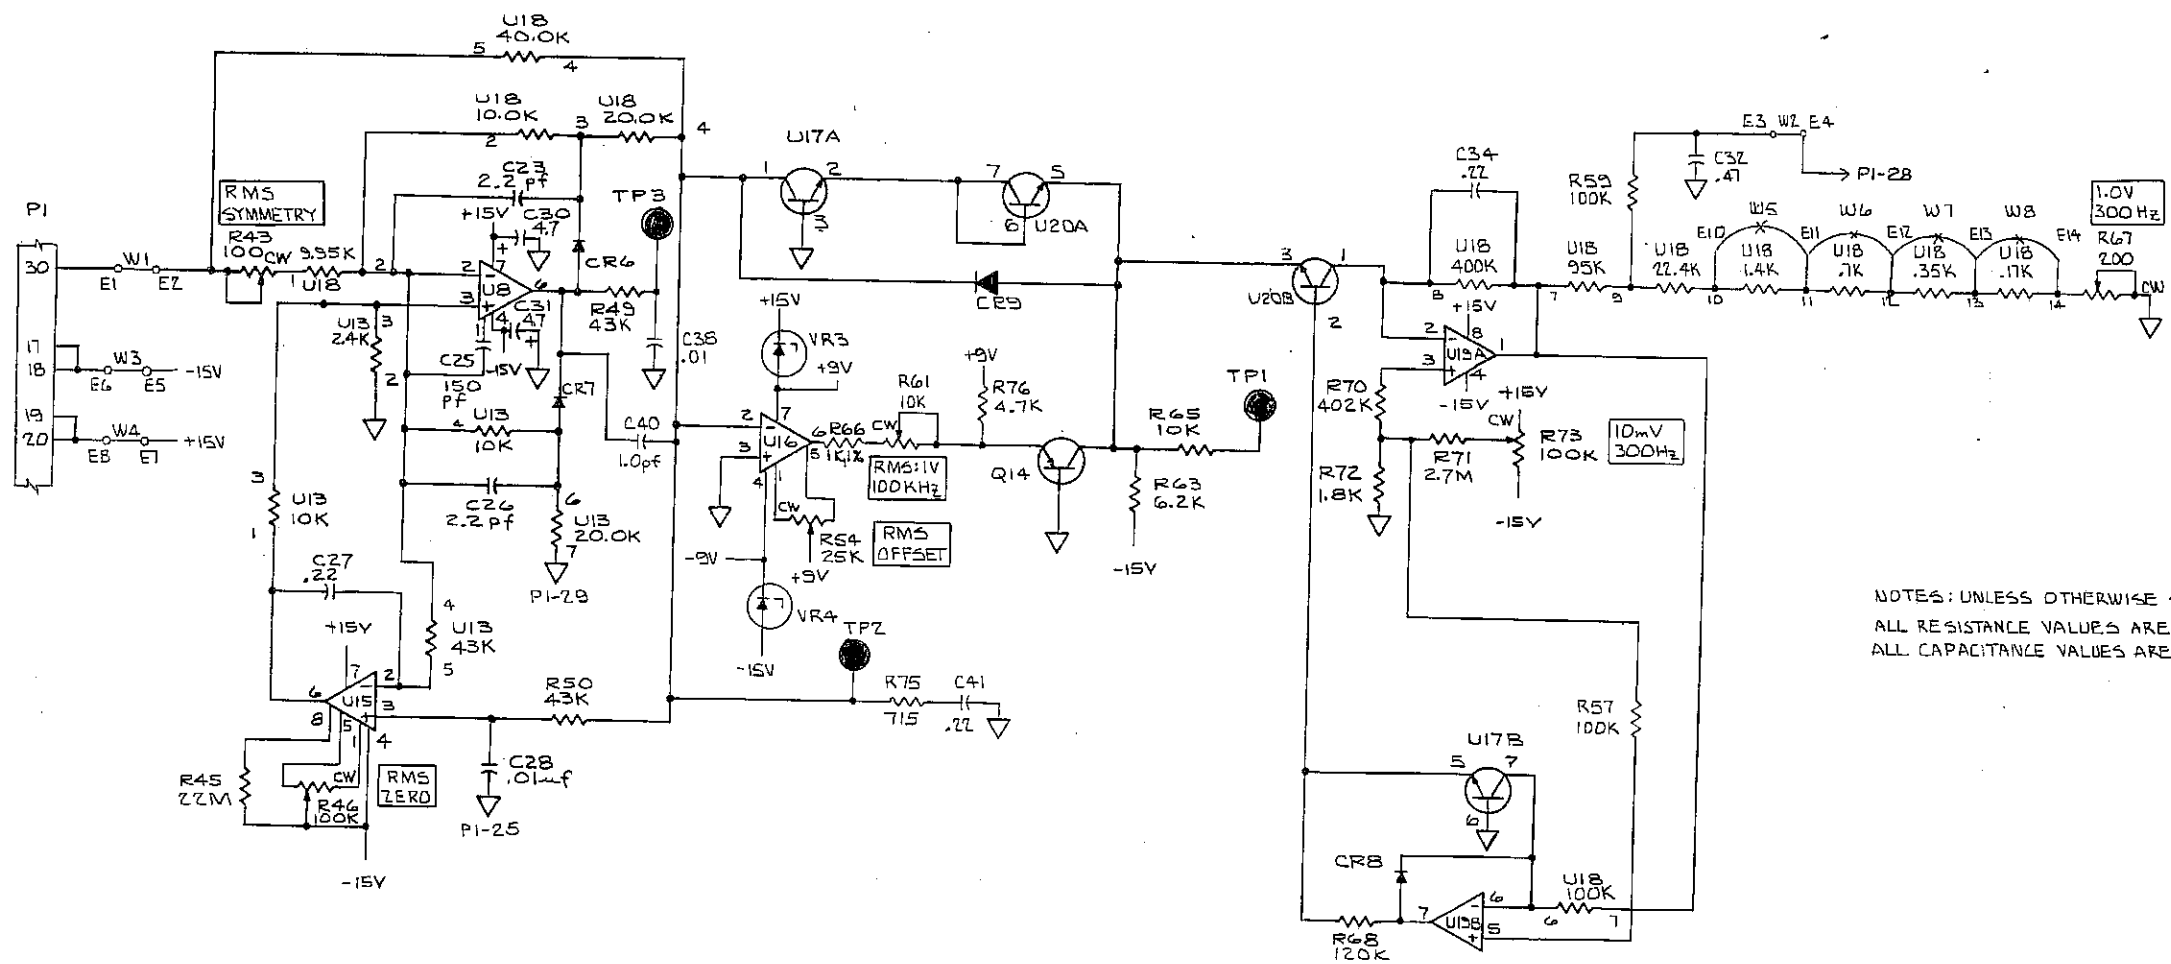

RMS CONVERTER

NOTES: UNLESS OTHERWISE SPECIFIED:
 ALL RESISTANCE VALUES ARE IN OHMS,
 ALL CAPACITANCE VALUES ARE IN MICROFARADS.

Figure 8-6. A4 AC/DC Scaling PCB Assembly (cont)

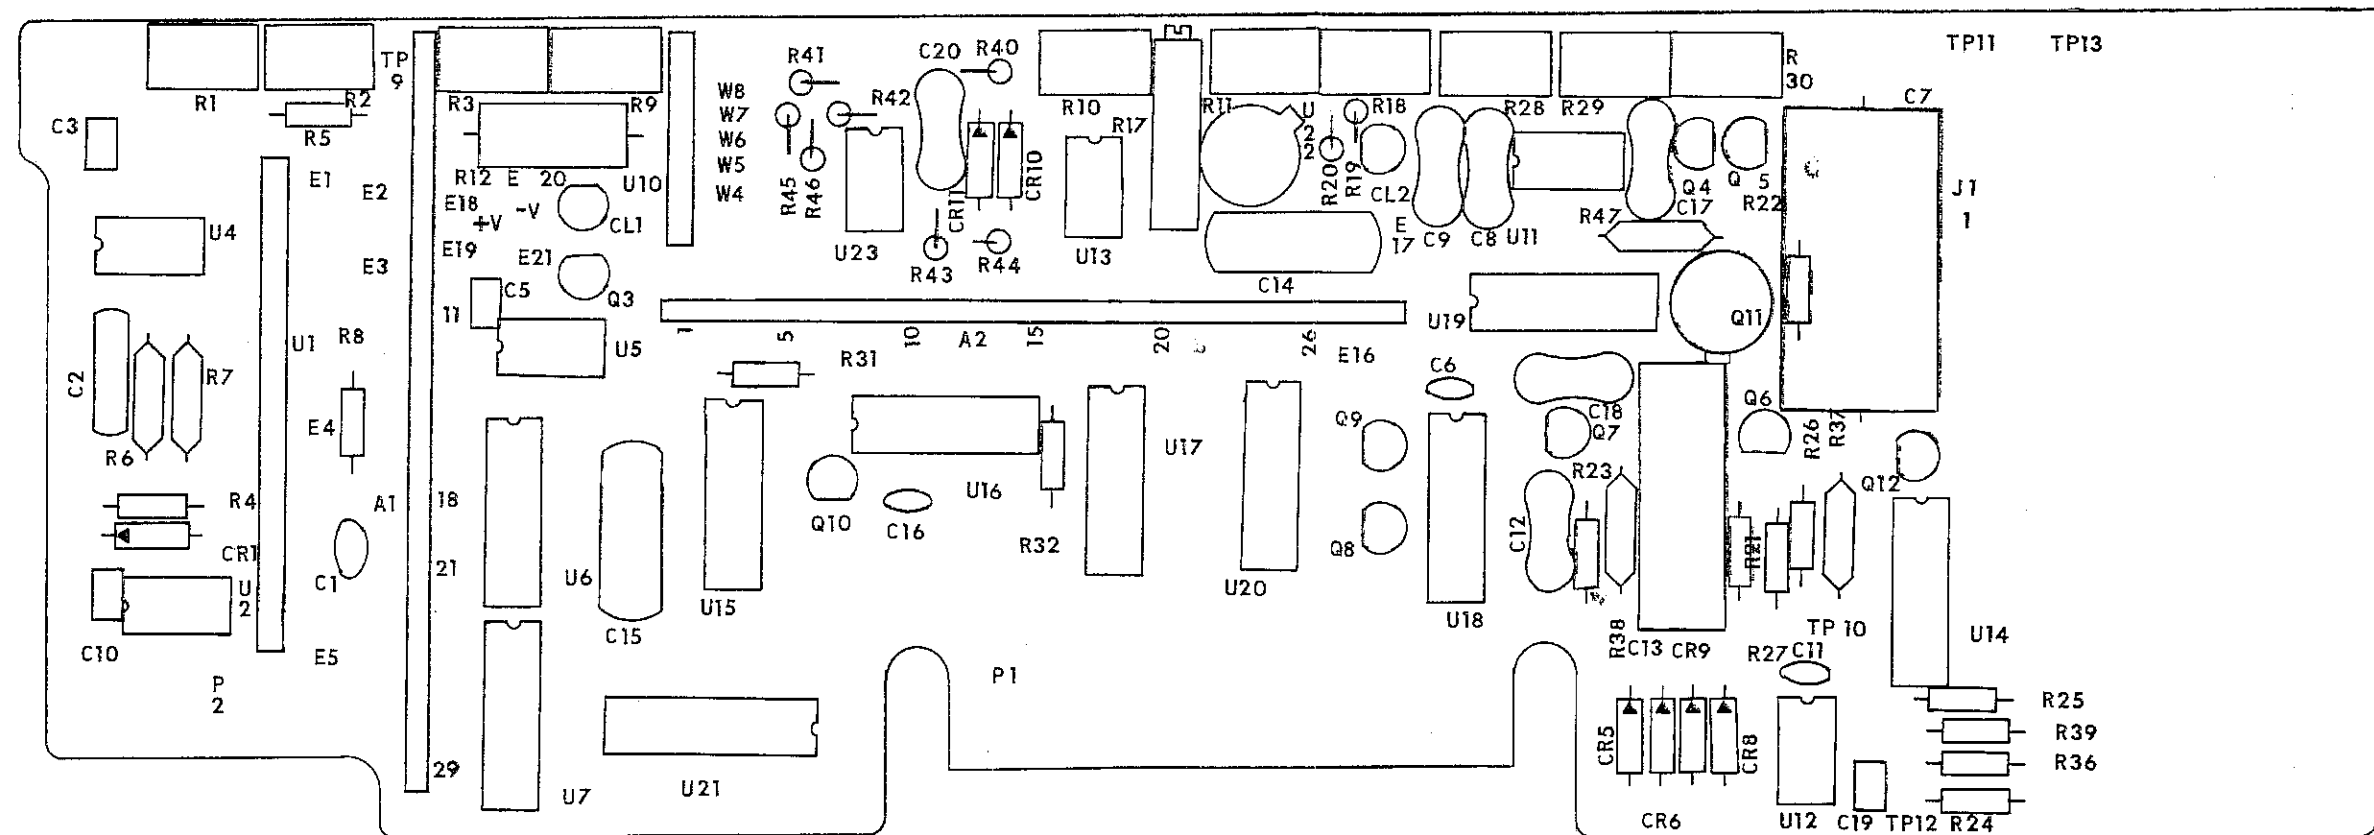


Figure 8-7. A5 A/D and Ohms Converter
PCB Assembly

JFET STATE TABLE

ON = JFET is conducting
 OFF = JFET is not conducting

OHMS CONVERTER						
For $\Omega 2T$ and $\Omega 4T$ functions, the JFETs on the A1 hybrid circuit are switched as follows:						
(gate-pin 12) A1 - E, F	(pin 13) A1 - G, H	(pin 11) A1 - I, J	(pin 18) A1 - D	(pin 21) A1 - A	(pin 24) A1 - B	
ON	OFF	OFF	OFF	OFF	ON	200 Ω
ON	OFF	OFF	OFF	OFF	ON	2 k Ω
OFF	ON	OFF	OFF	OFF	ON	20 k Ω
OFF	OFF	ON	OFF	OFF	ON	200 k Ω
OFF	OFF	OFF	ON	OFF	ON	2 M Ω
OFF	OFF	OFF	ON	ON	OFF	20 M Ω

(When a function other than $\Omega 2T$ or $\Omega 4T$ is selected, these FETs default to the 2 M Ω position.)


U21 BINARY TO 1 - OF - 4 DECODER

TRUTH TABLE

PIN #	INPUTS		OUTPUTS			
	13	14	9	10	11	12
	0	0	1	1	1	0
	0	1	1	1	0	1
	1	0	1	0	1	1
	1	1	0	1	1	1

0 = 0V
 1 = +5V

Figure 8-7. A5 A/D and Ohms Converter
 PCB Assembly (cont)

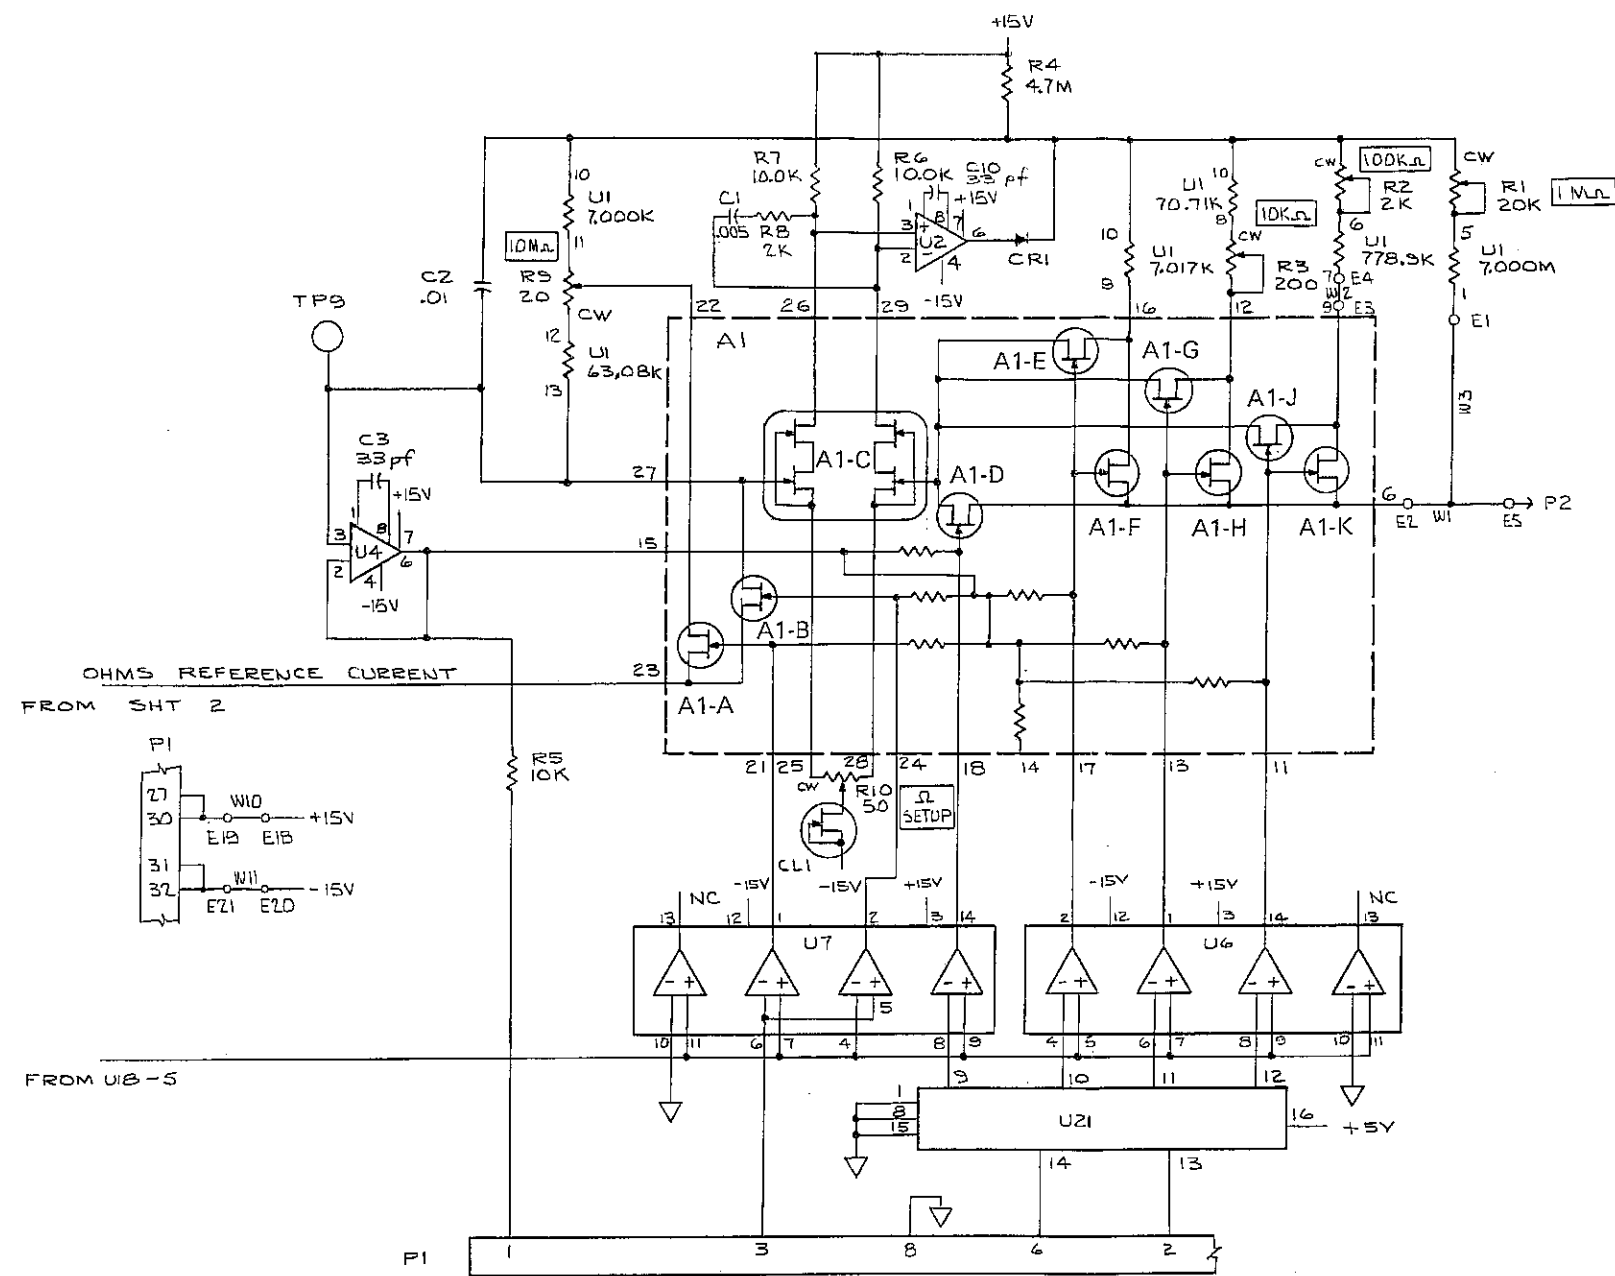


NOTES:-
 ALL RESISTANCE VALUES ARE IN OHMS,
 ALL CAPACITANCE VALUES ARE IN MICROFARADS.

LAST NO. USED	NOS NOT USED
A2, C20, CL2, CR11, E21, J1, P1, Q12, R41, U23, W11, TPS	C4 CR 2,3,7 Q1,2 R13-16, 33-35 U3, 8, 9



OHMS CONVERTER

Figure 8-7. A5 A/D and Ohms Converter
 PCB Assembly (cont)

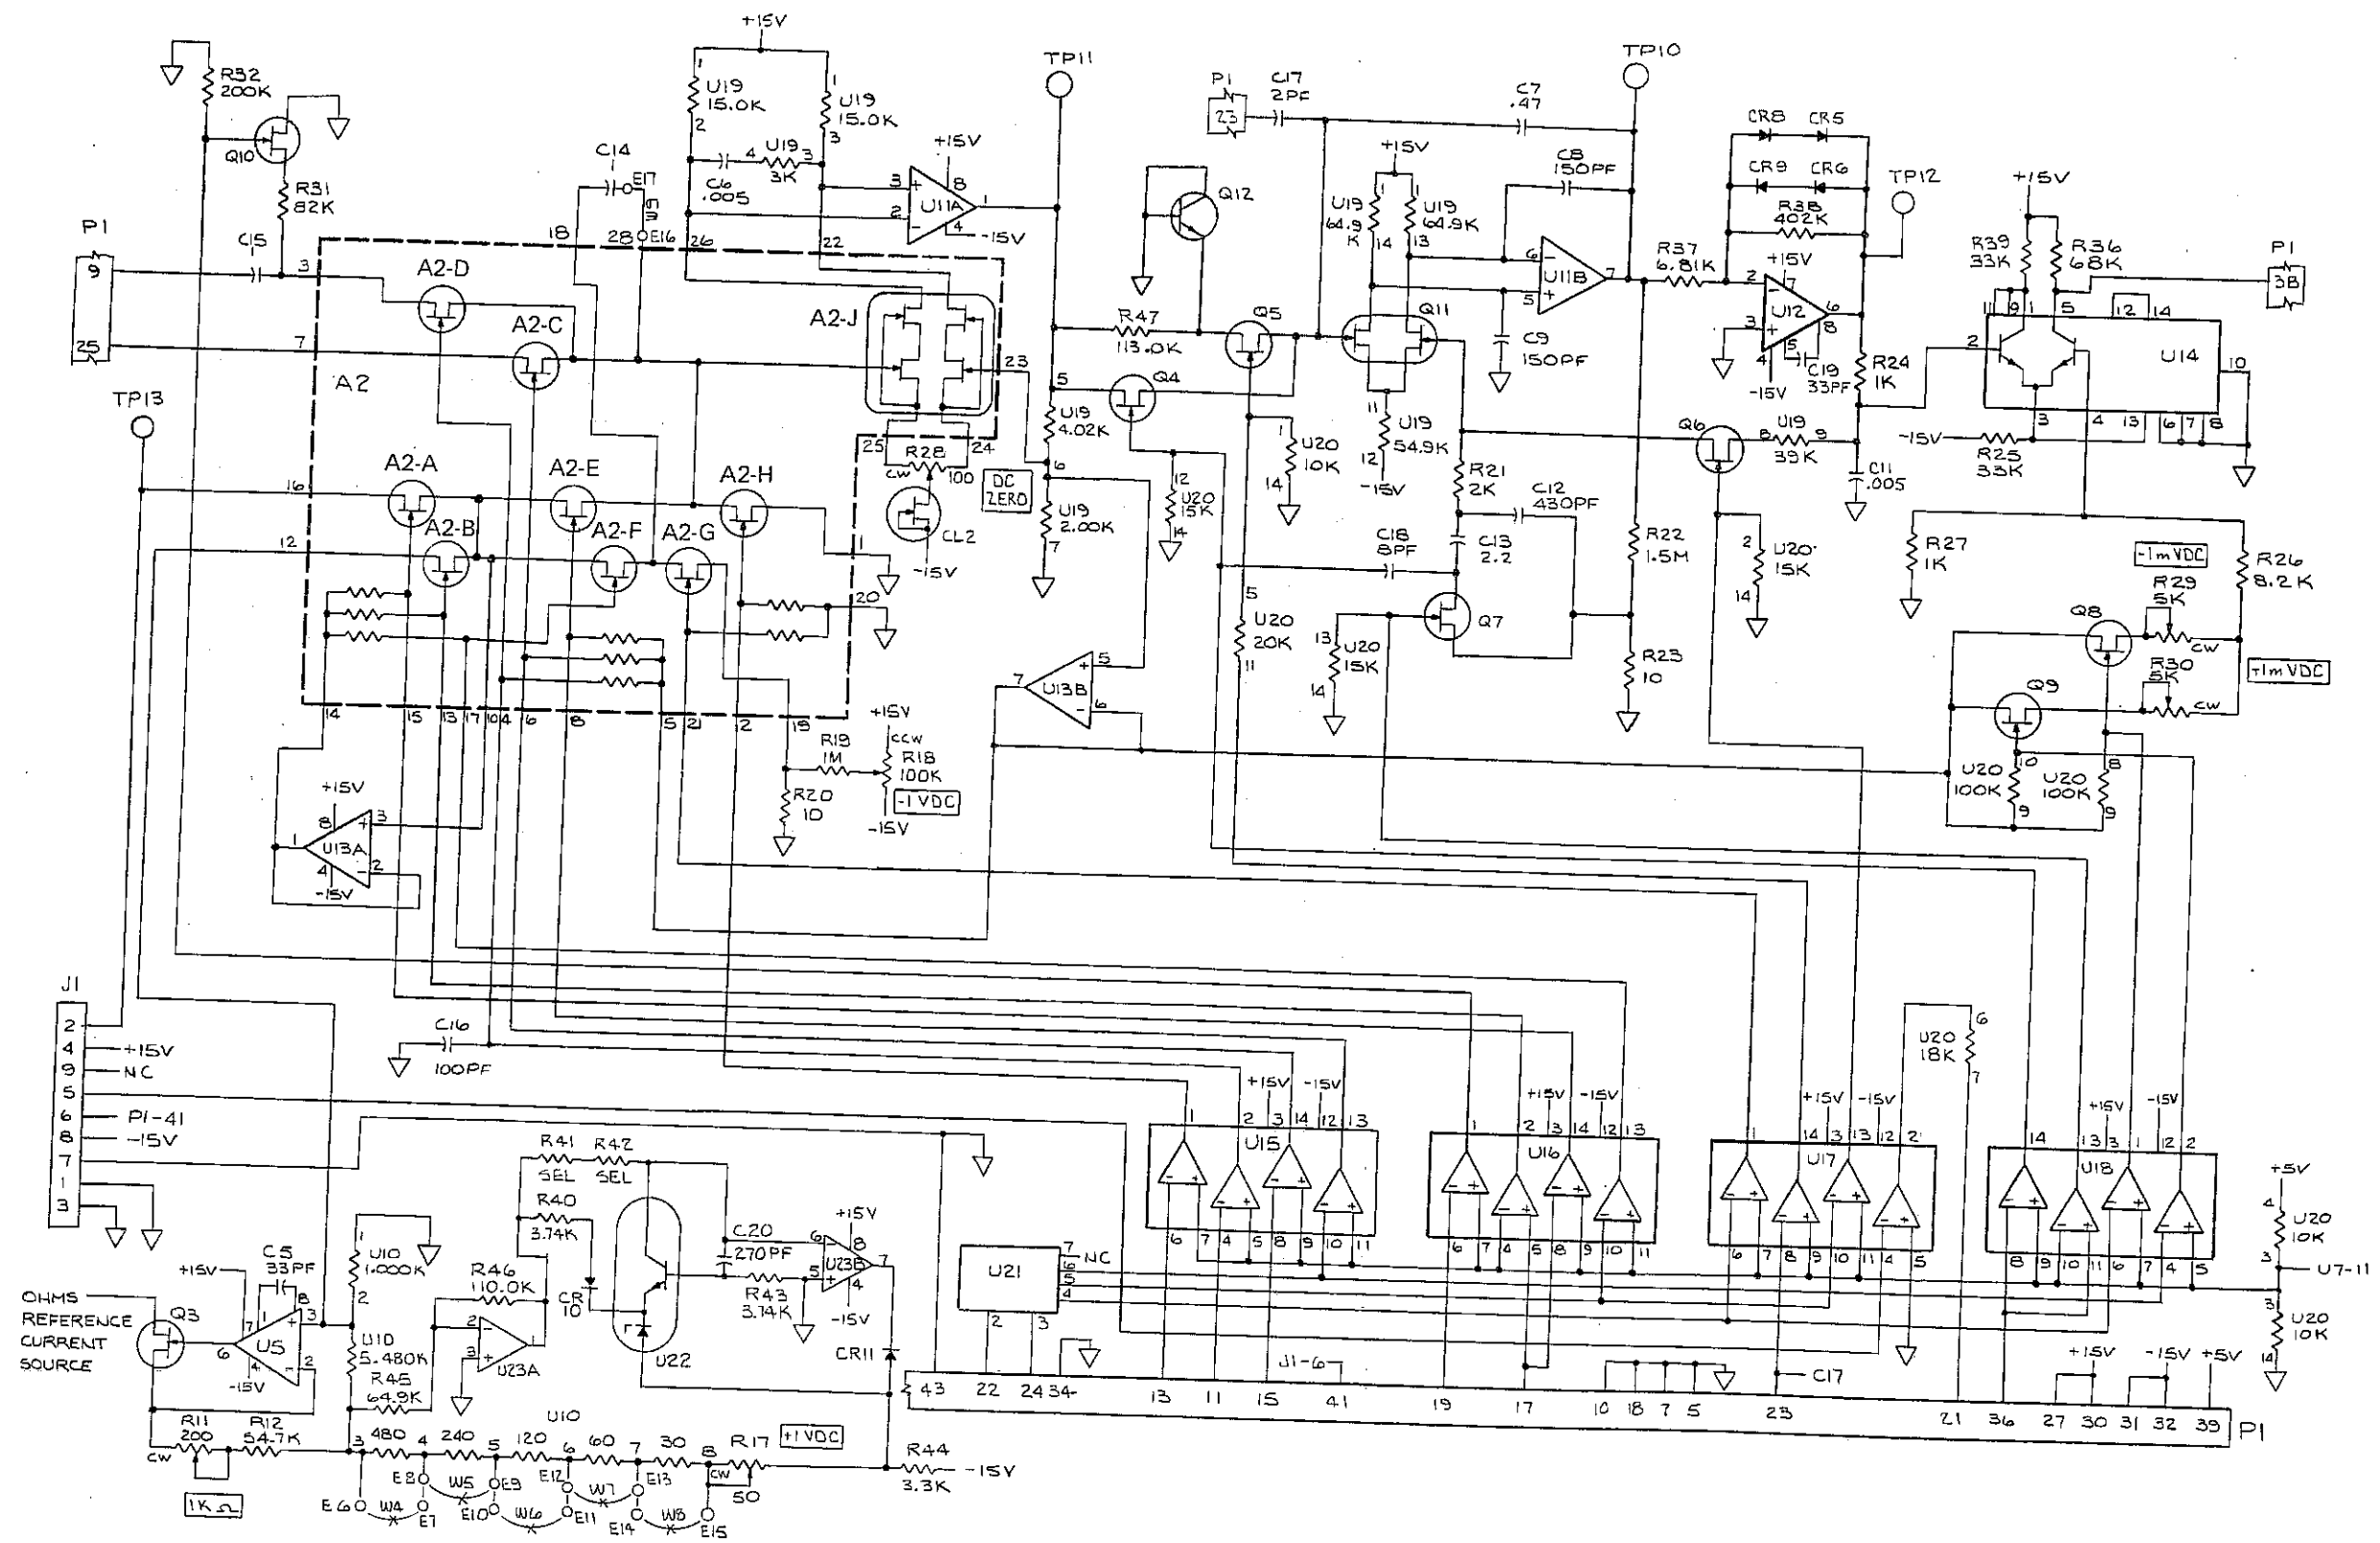

8860A-1005
(2 of 2)

Figure 8-7. A5 A/D and Ohms Converter PCB Assembly (cont)

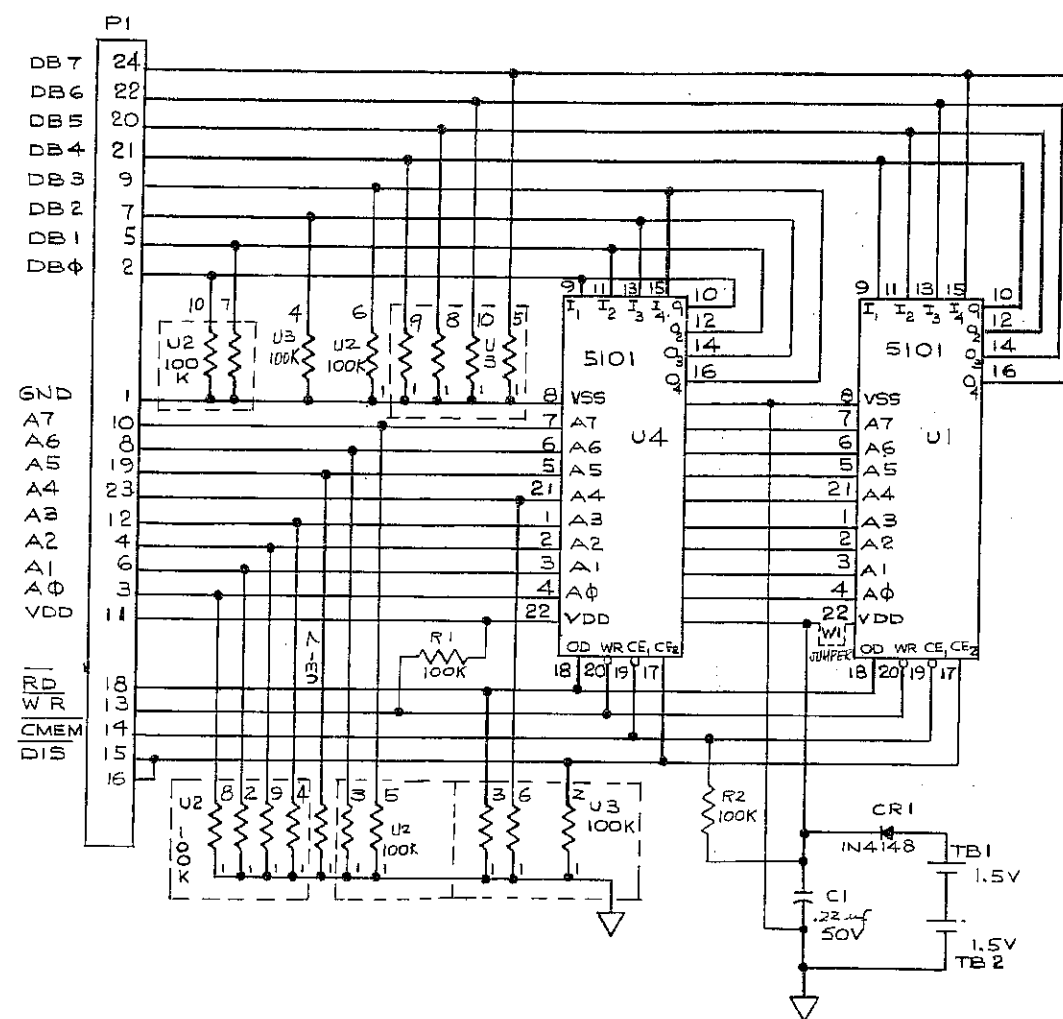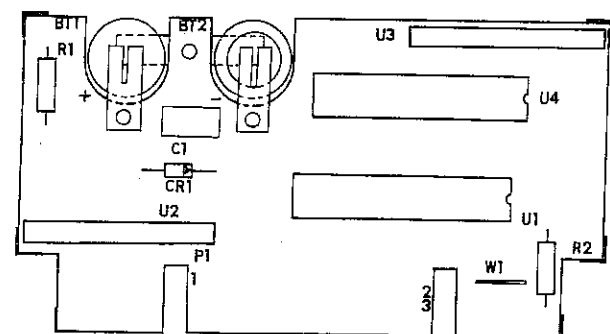

8860A-1613

8860A-1013

Figure 8-10. Memory Cartridge PCB Assembly




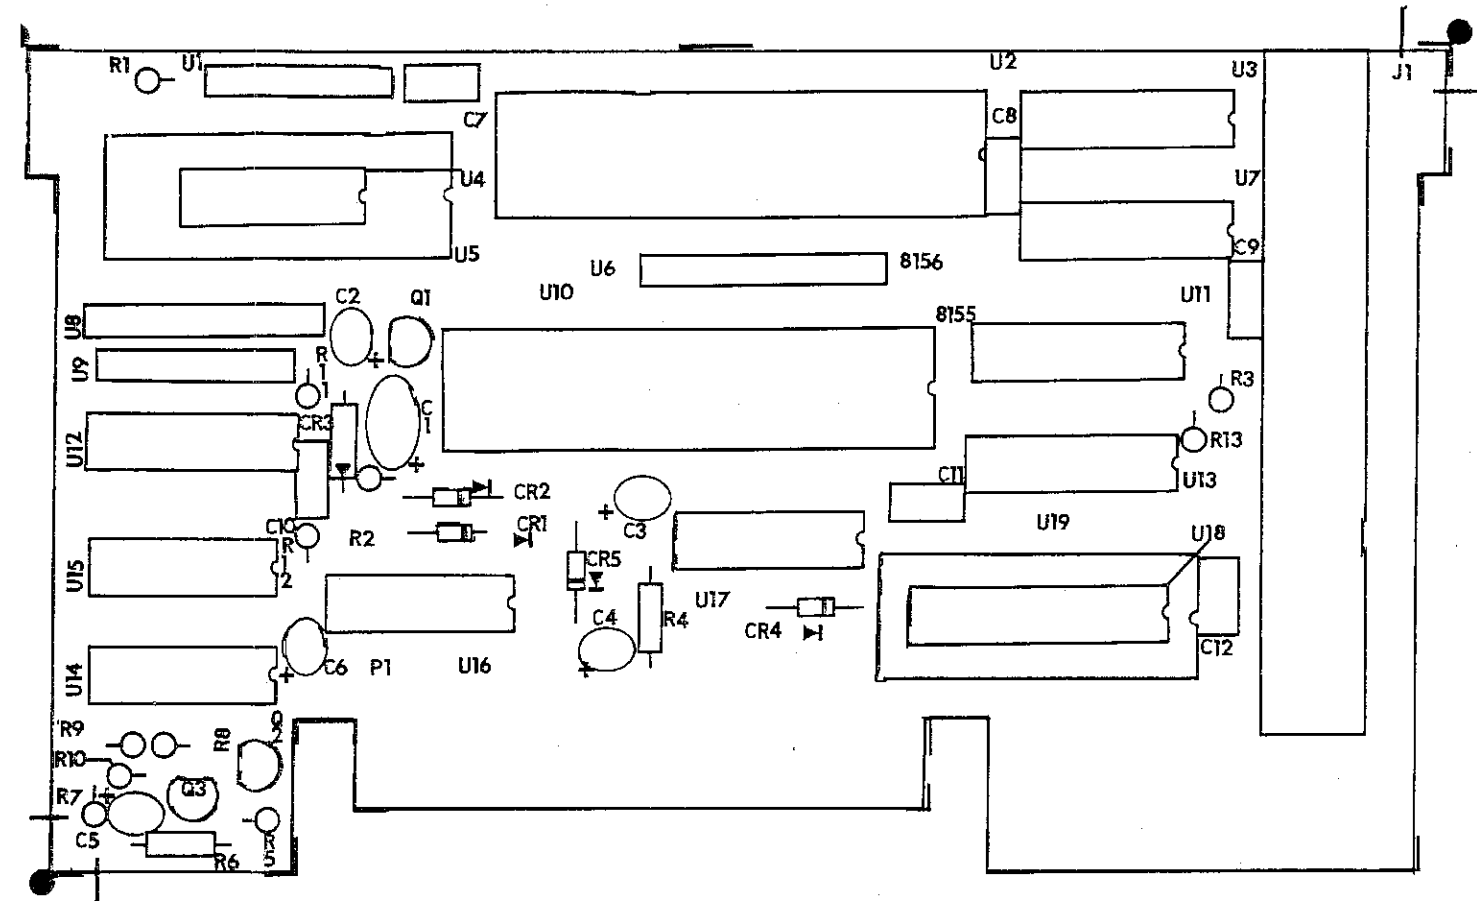


Figure 8-8. Calculator/Printer PCB Assembly

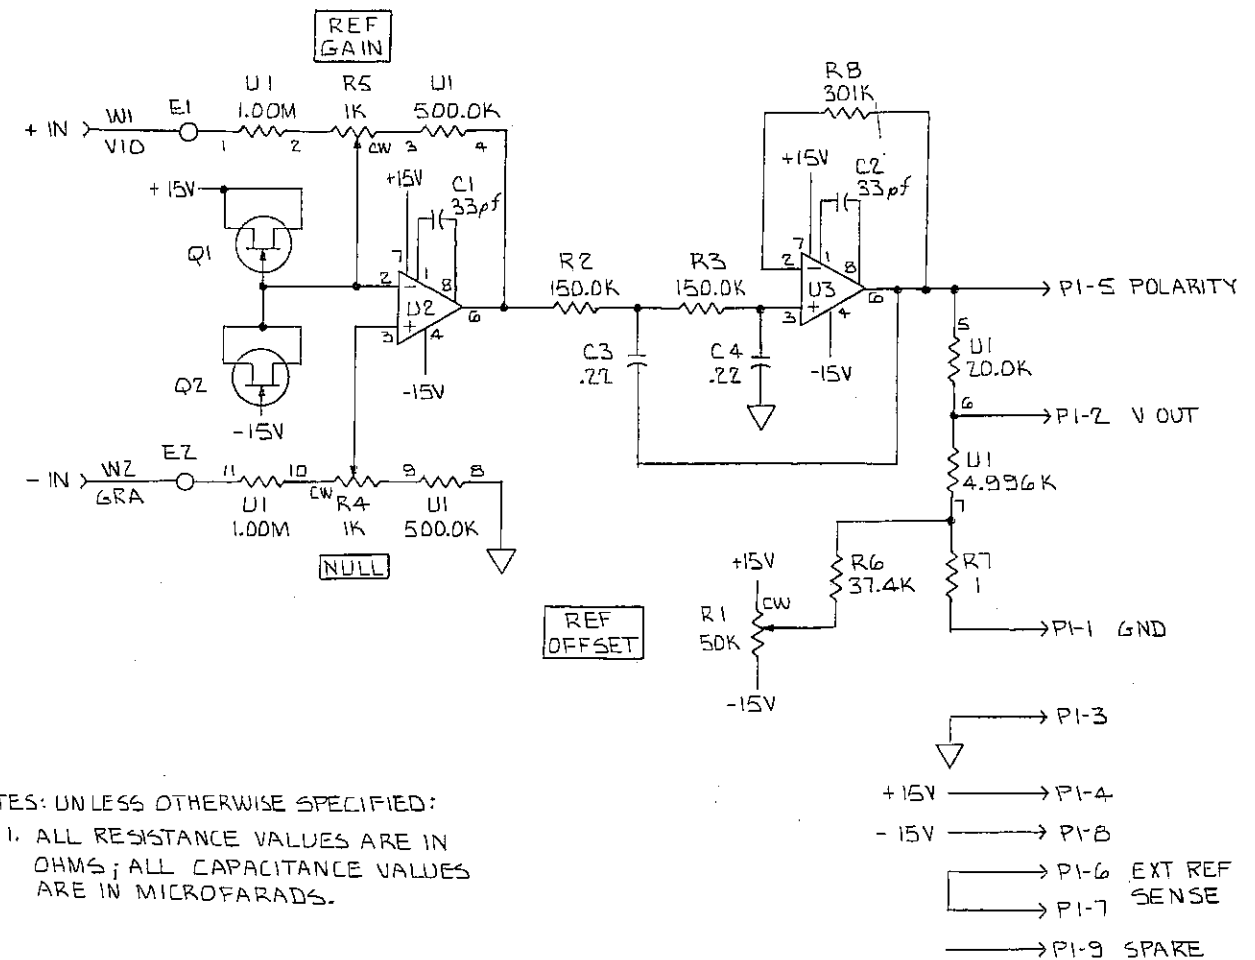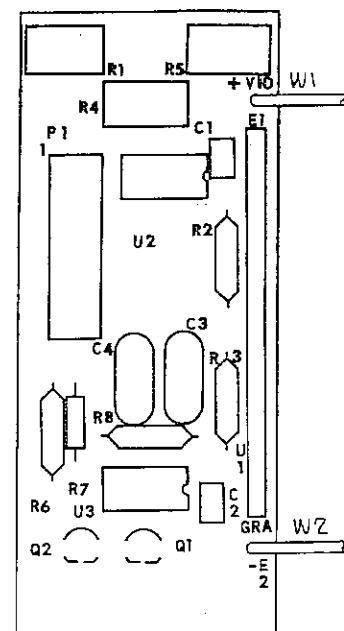


NOTES: UNLESS OTHERWISE SPECIFIED:
 1. ALL RESISTANCE VALUES ARE IN OHMS; ALL CAPACITANCE VALUES ARE IN MICROFARADS.

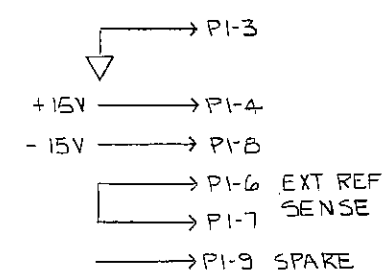


LAST NO. USED
C4 P1 Q2 U3
E2 R8 W2

Figure 8-15. External Reference PCB Assembly, Option -007

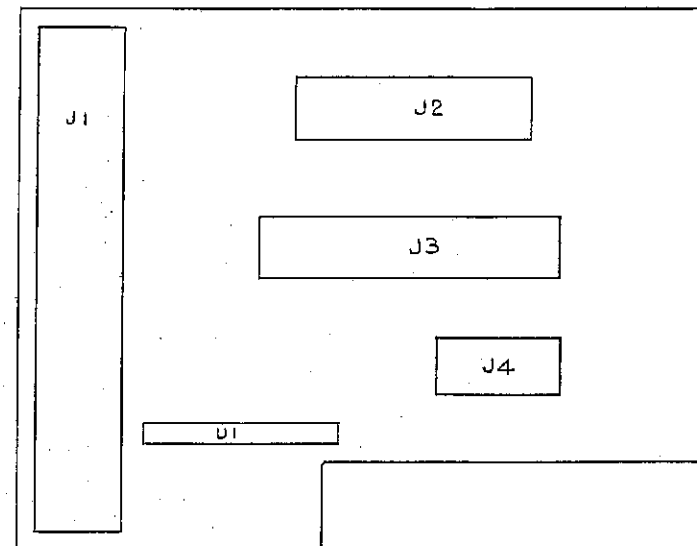

8860A-1624

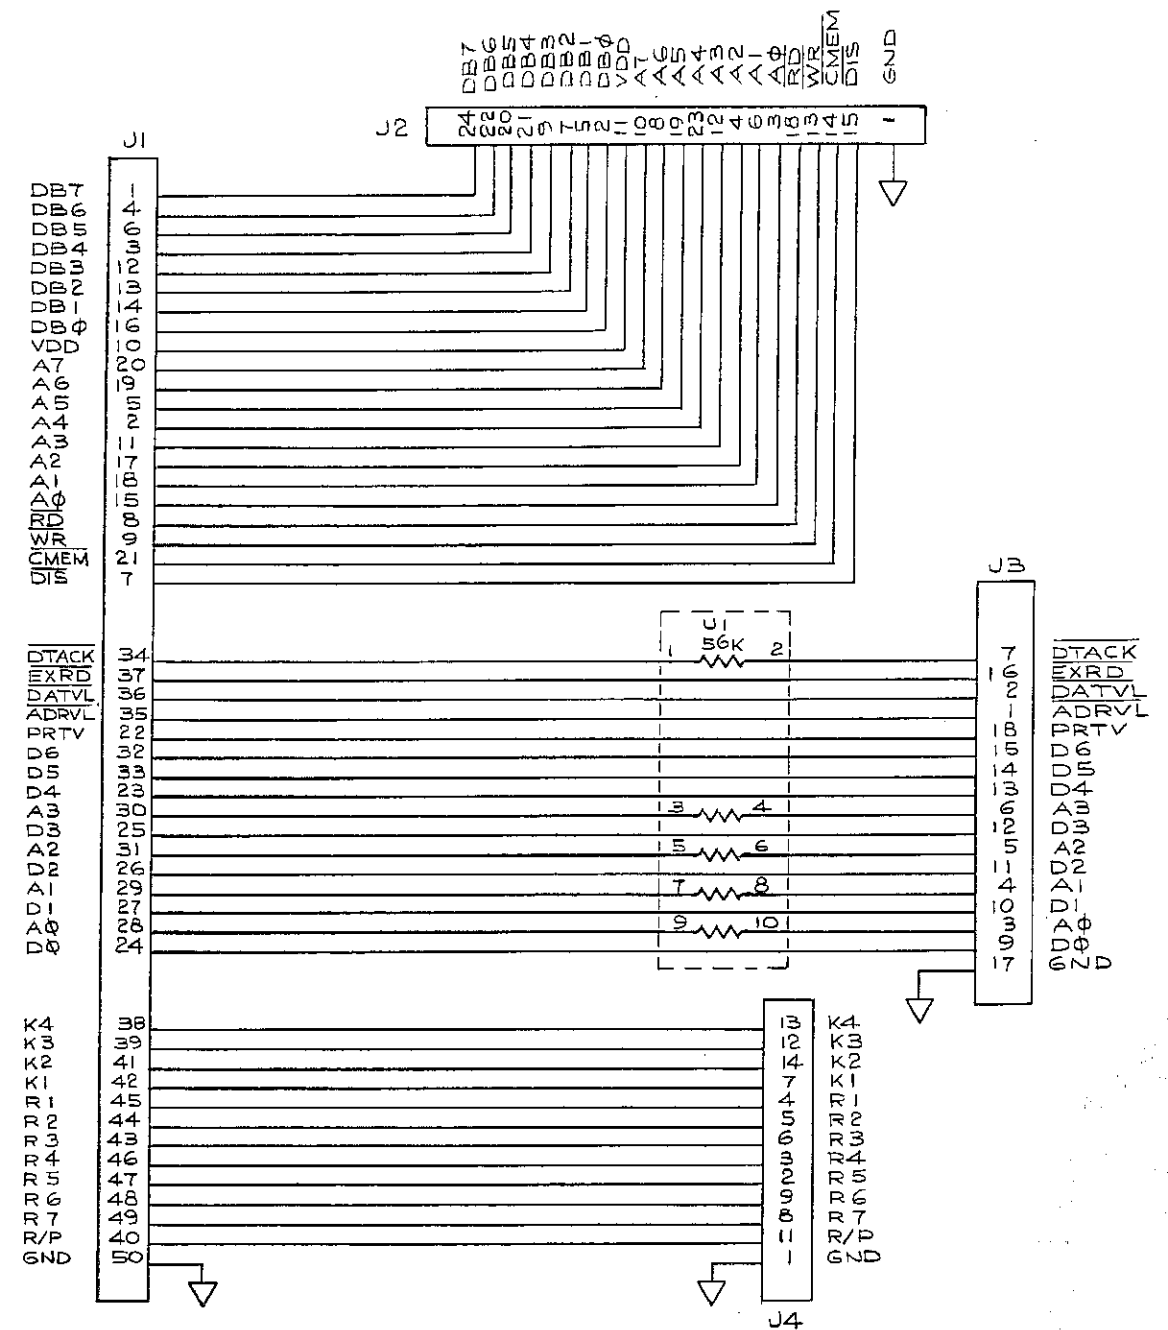

8860A-1024

Figure 8-9. Rear Interface PCB Assembly

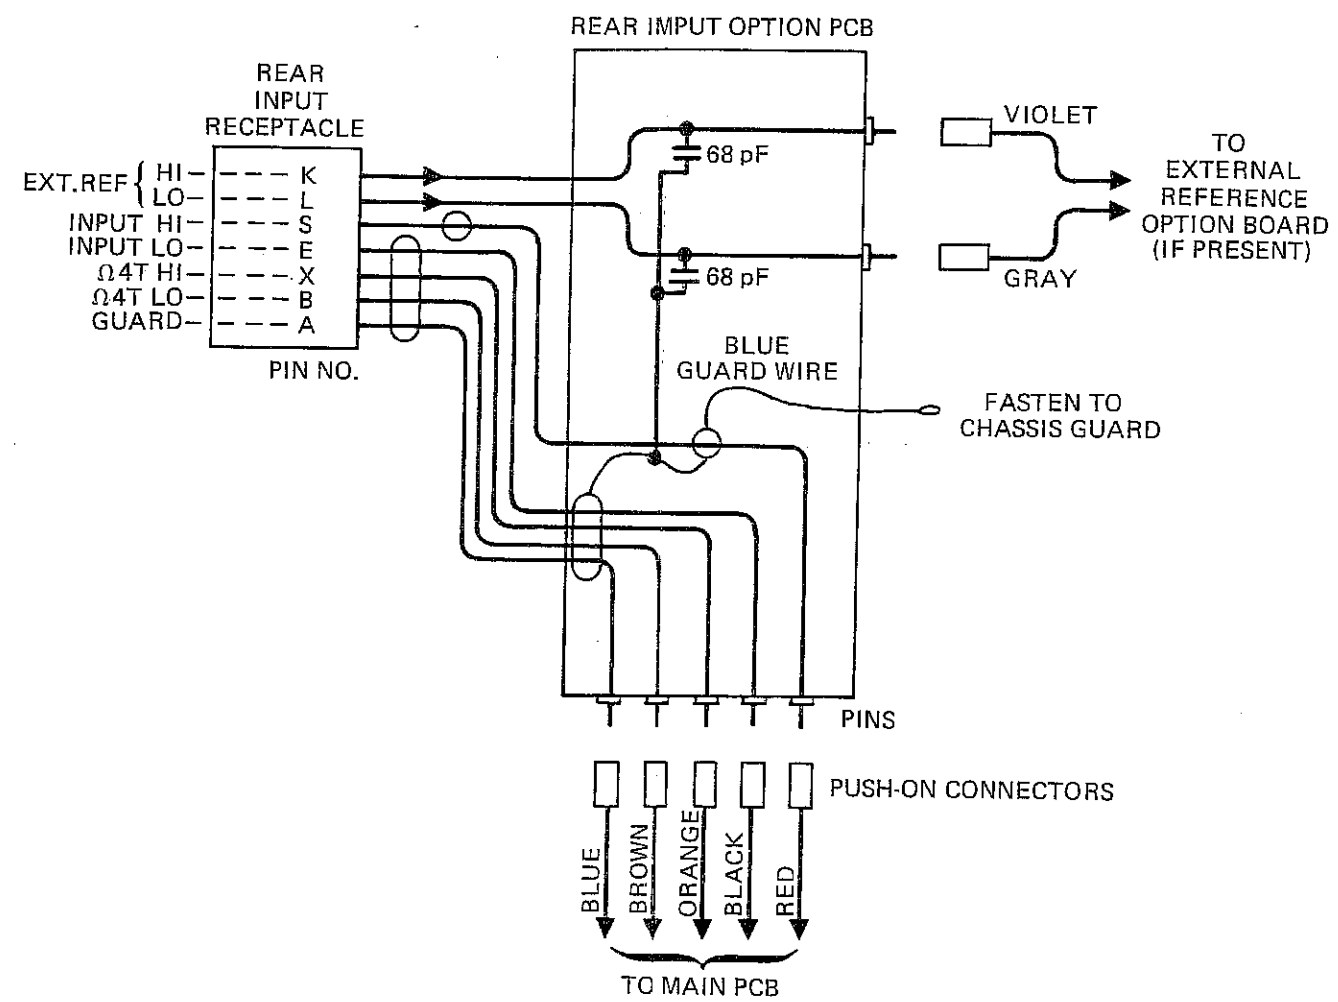


Figure 8-14. Rear Input PCB Assembly,
Option -006

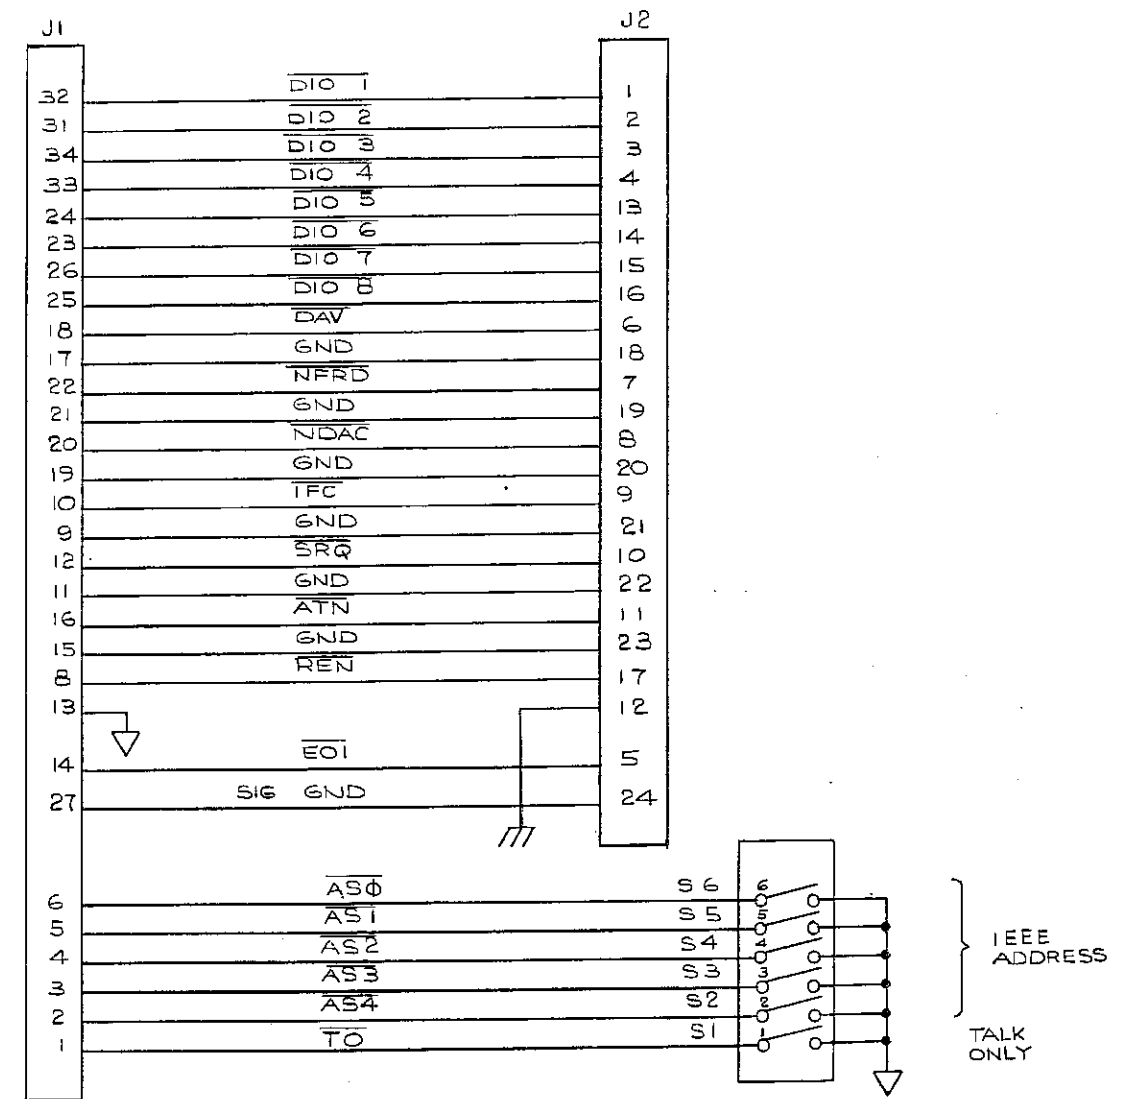
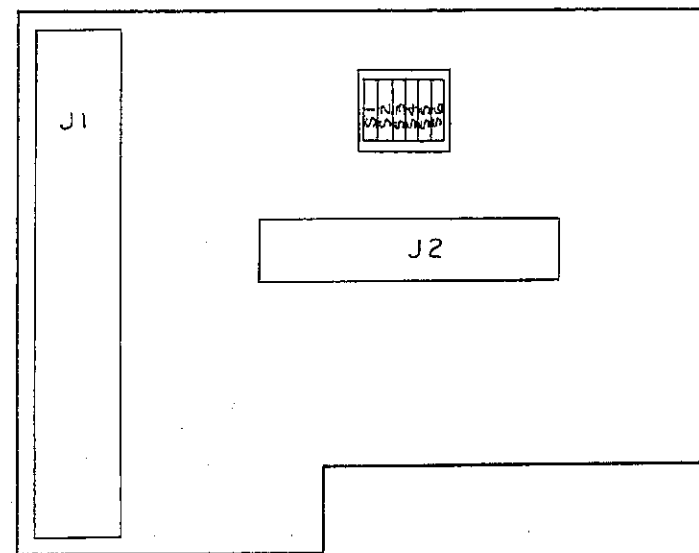


Figure 8-13. Rear Interconnect PCB Assembly

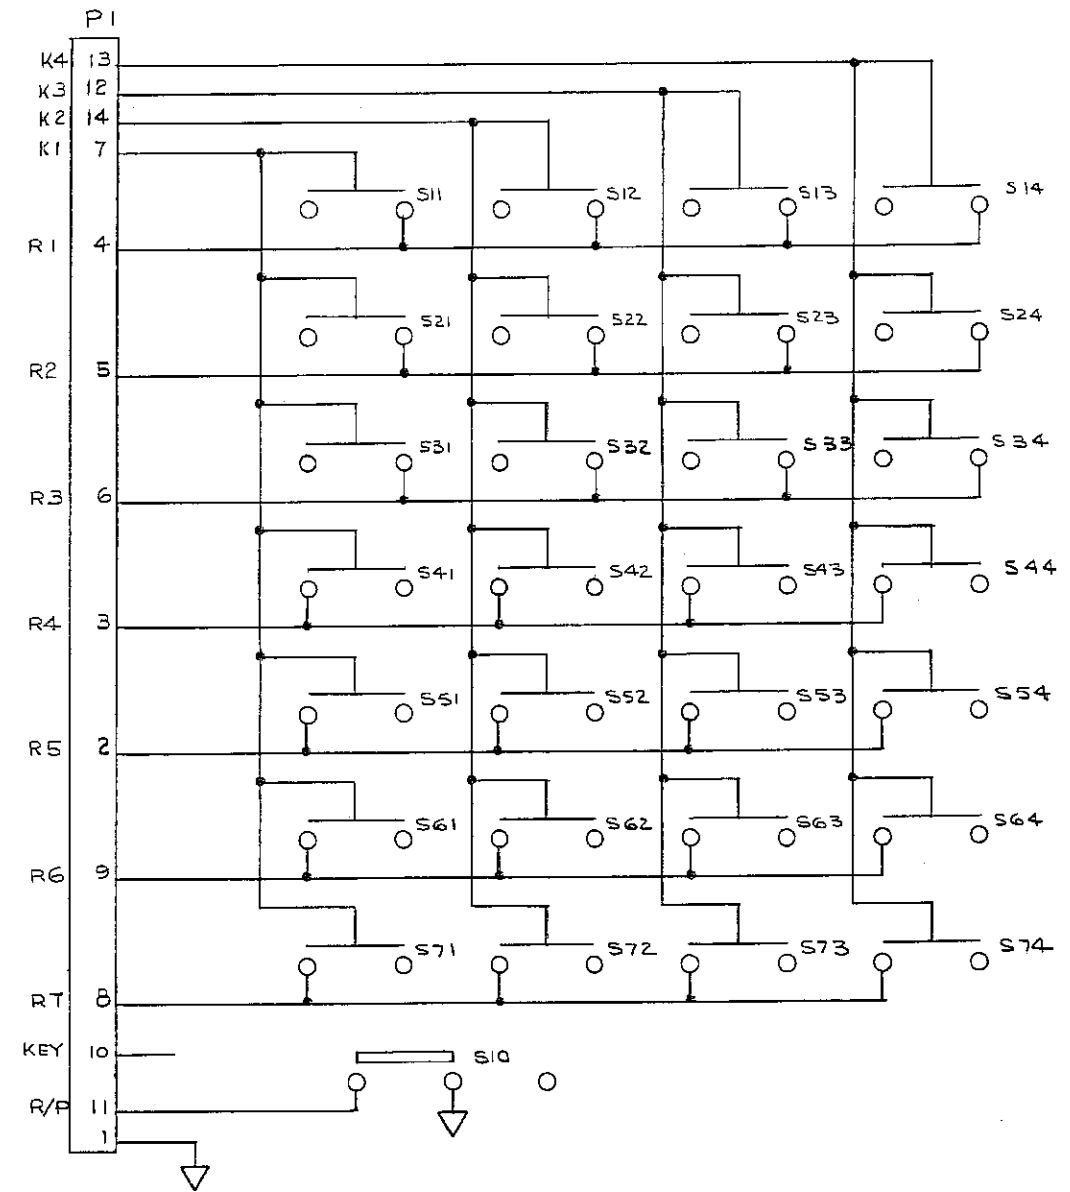
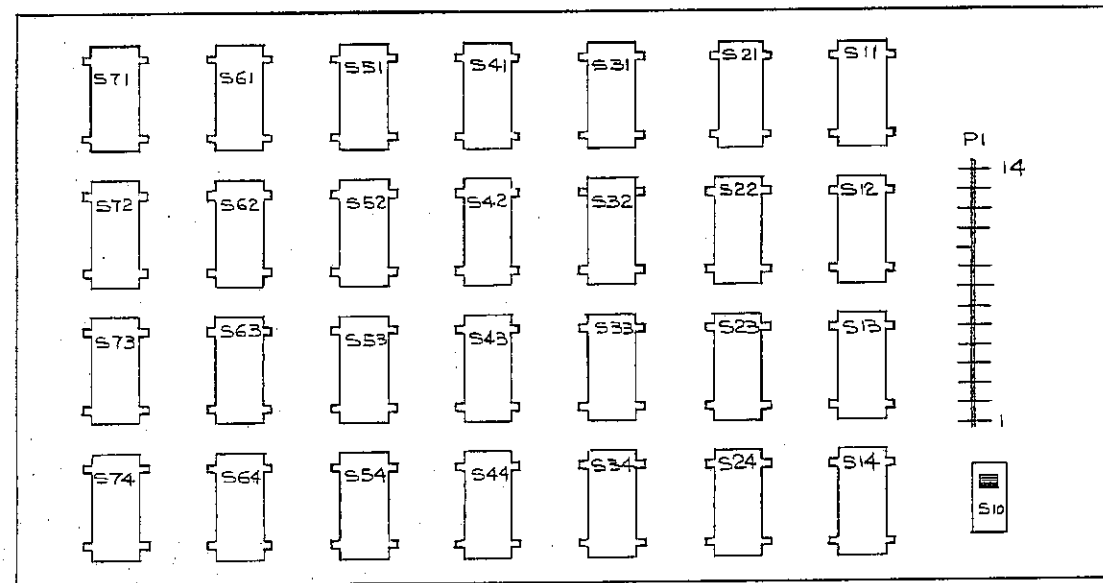


Figure 8-11. Control Keyboard PCB Assembly