

OPERATING AND SERVICE MANUAL

8116A PROGRAMMABLE PULSE/FUNCTION GENERATOR 50 MHz

(Including Option 001)

SERIAL NUMBERS

This manual applies directly to instrument with serial number 2334G02896 and higher. Any changes made in instruments having serial numbers higher than the above number will be found in a "Manual Changes" supplement supplied with this manual. Be sure to examine this supplement for any changes which apply to your instrument and record these changes in the manual. Backdating information for instruments with lower serial numbers can be found in Section 7 (yellow pages).

© HEWLETT-PACKARD GMBH 1982
HERRENBERGER STR. 110, D-7030 BÖBLINGEN
FEDERAL REPUBLIC OF GERMANY

MANUAL PART NO. 08116-90002
MICROFICHE PART NO. 08116-95002

PRINTED: JUNE 1984



CERTIFICATION

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

This Hewlett-Packard product is warranted against defects in material and workmanship for a period of one year from date of shipment. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.

HP warrants that its software and firmware designated by HP for use with an instrument will execute its programming instructions when properly installed on that instrument. HP does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

For products returned to HP for warranty service, Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.



EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

ASSISTANCE

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

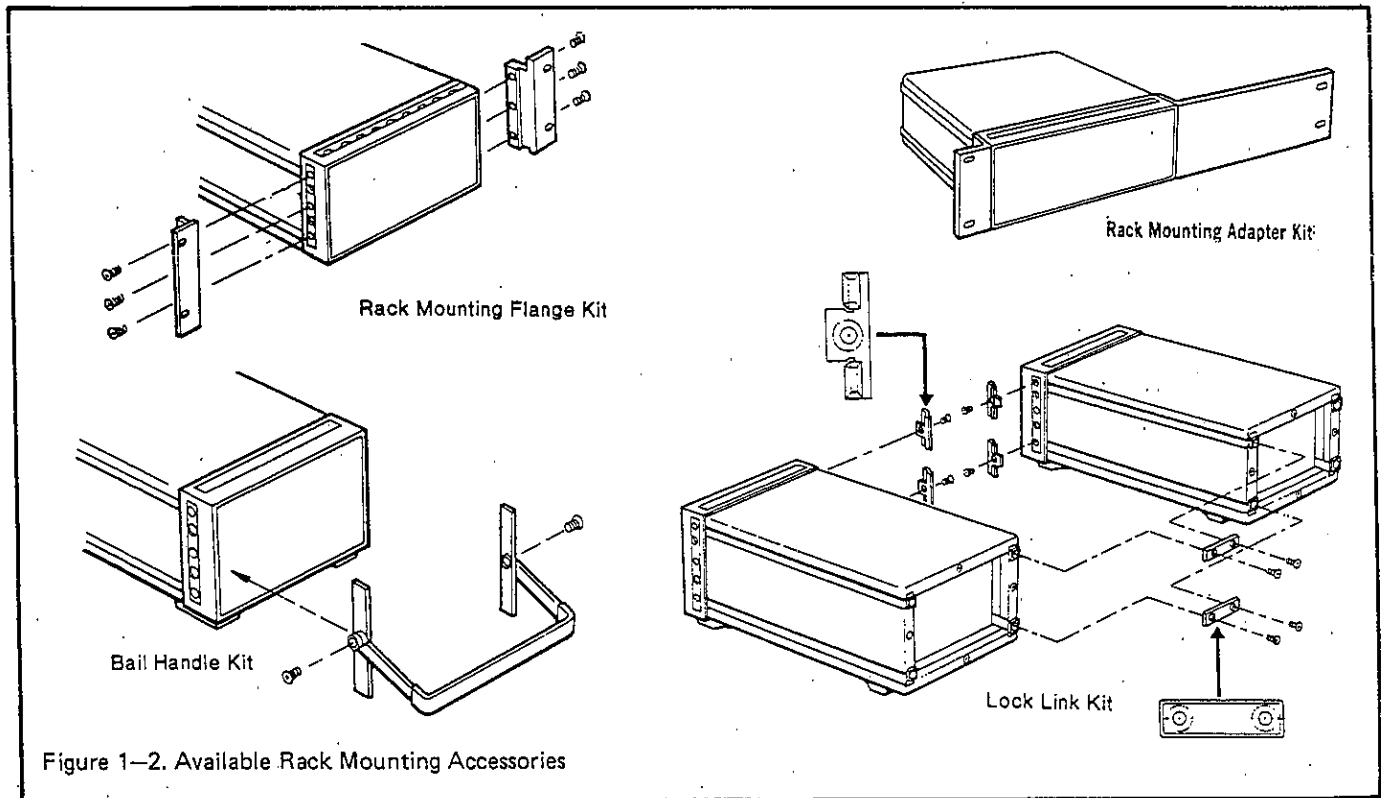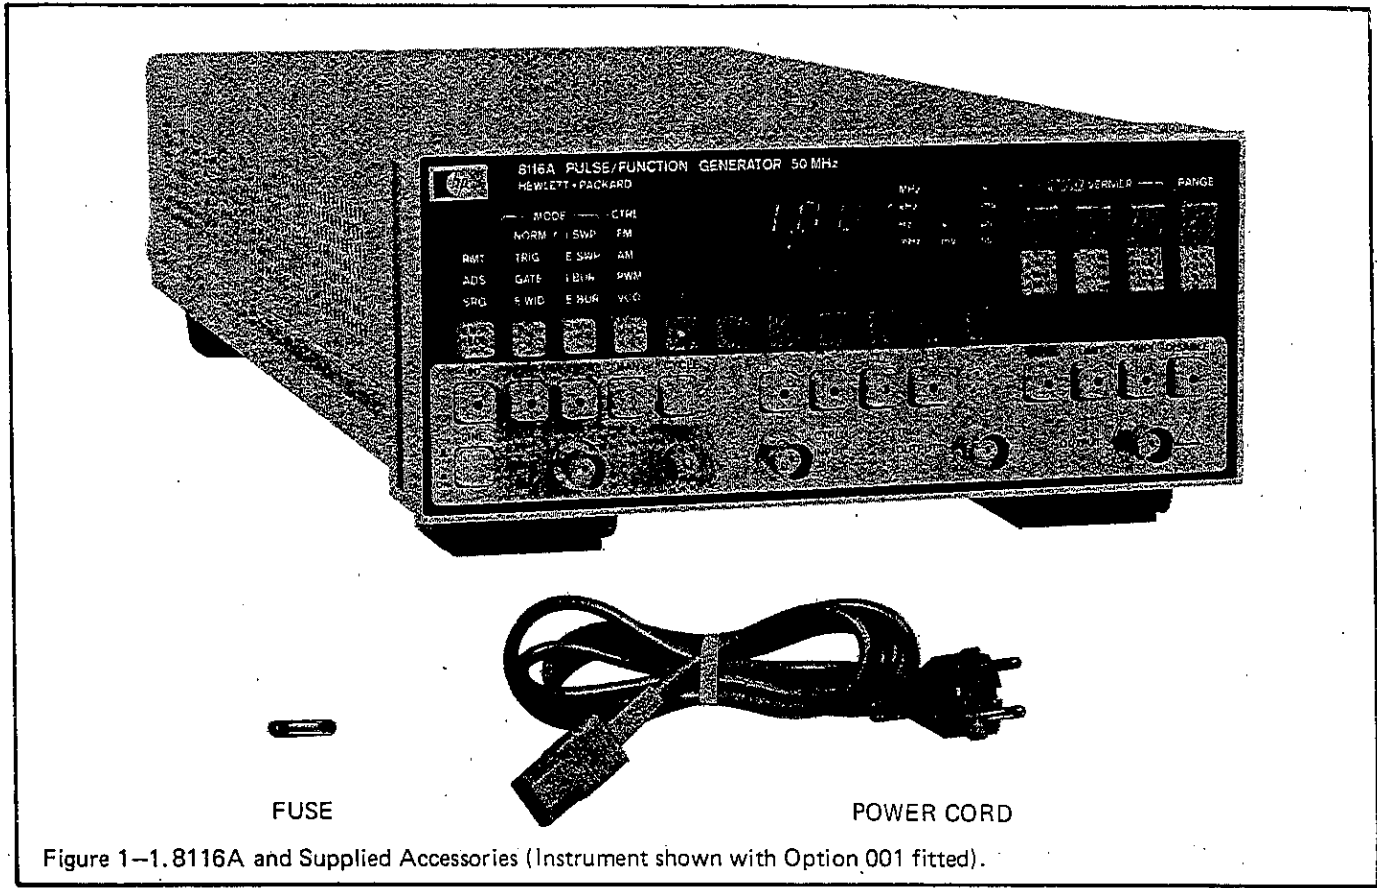

)

)

)

SECTION I GENERAL INFORMATION

1-1 INTRODUCTION

1-2 This Operating and Service Manual contains information required to install, operate, test, adjust and service the Hewlett-Packard Model 8116A. Figure 1-1 shows the mainframe and accessories supplied. This section covers instrument identification, description, accessories, specifications, and other basic information.

1-3 A Microfiche version of this manual is available on 4 x 6 inch microfilm transparencies (order number on title page). Each microfilm contains up to 60 photoduplicates of the manual pages. The microfiche package also includes the latest Manual Changes supplement as well as all pertinent Service Notes.

1-4 SPECIFICATIONS

1-5 Instrument specifications are listed in Table 1-2. These specifications are the performance standards or limits against which the instrument is tested.

1-6 SAFETY CONSIDERATIONS

1-7 The 8116A is a Safety Class 1 instrument (it has an exposed metal chassis that is directly connected to earth via the power supply cable). Before operation, the instrument and manual, including the red safety page, should be reviewed for safety markings and instructions. These must then be followed to ensure safe operation and to maintain the instrument in a safe condition.

1-8 INSTRUMENTS COVERED BY MANUAL

1-9 Attached to the rear of this instrument is a serial number plate (Figure 1-3). The first four digits of the serial number only change when there is a significant change to the instrument. The last five digits are assigned to instruments sequentially. The contents of this manual apply directly to the instrument serial number quoted on the title page. For instruments with lower serial numbers, refer to the backdating information in Section VII of this manual. For instruments with higher serial numbers, refer to the Manual Change sheets at the end of this manual. In addition to change information, the Manual Change sheets may contain information for correct-

ing errors in the manual. To keep this manual as up-to-date and accurate as possible, Hewlett-Packard recommends that you periodically request the latest Manual Change supplement. The supplement for this manual is identified with the manual's print date and part number, both of which appear on this manual's title page. Complimentary copies of the supplement are available from Hewlett-Packard.



Figure 1-3. Serial-Number Plate

1-10 DESCRIPTION

1-11 The HP 8116A Programmable Pulse/Function Generator operates over the frequency range 1 mHz to 50 MHz and up to 32 V peak-to-peak amplitude. Capabilities include:

- Multiwaveform generation (sine, square, triangle, pulse)
- 6 ns transition time for pulse and square-wave
- Variable pulse width down to 10 ns
- AM/FM/PWM modulation modes
- VCO control mode
- Fully HP-IB programmable
- Internal and external logarithmic sweep (Opt. 001)
- Internal and external burst mode for all waveforms (Opt. 001)

1-12 A unique self-prompting operating concept, plus the full HP-IB programmability, provide an easy means to execute single manual operation or complex automatic tasks.

1-13 8116A Options.

1-14 Option 001. The 8116A can provide increased capabilities with the addition of Option 001. Added capabilities include:

- Logarithmic sweep (selectable internal or external triggering)
- Counted burst (selectable internal or external triggering)
- Hold input for sine, triangle and squarewave.

1-15 ACCESSORIES SUPPLIED

1-16 The 8116A is supplied complete with the following items:

ITEM	HP PART NUMBER
750 mA fuse for 220/240 V operation or, 1.5 A fuse for 100/120 V operation	2110-0063
Power cable	See Figure 2-2

1-17 ACCESSORIES AVAILABLE

ITEM	HP PART NUMBER
Carrying handle - Bail Handle Kit	5061-2001
Rack mounting adaptors: Rack mounting flange and filler panel for rack mounting a single 8116A.	5061-0072
Rack mounting flange and lock link kit	5061-0074
for rack mounting two 8116A's	5061-0094

1-18 RECOMMENDED TEST EQUIPMENT

1-19 Equipment required to maintain the 8116A is listed in Table 1-1. Alternative equipment can be substituted provided that it meets or exceeds the critical specifications listed in the table.

Table 1-1. Recommended Test Equipment

Instrument	Recommended Model	Required characteristics	Adequate Substitute	Use*
Counter	HP 5335A	50 MHz, Start/Stop, T1, A to B	HP 5345A + HP 5363B	P, A P, A
DVM	HP 3455A	DC .1 V-10 V, .004 % acc.	HP 3456A	P, A
DMM	HP 3465A	AC .1 V-10 V	HP 3466A	P, A, T
Function Generator	HP 3325A	DC .1mA - 10mA 20 MHz, THD < .1 %		P, A
Real Time Scope	HP 1740A	100 MHz Bandwidth	HP 1743A	P, A, T
Sampling Scope	TEK 7603 with 7T11/7S11 and S-3A	1 GHz	HP 140A/ 1410A	P, A
Spectrum Analyzer	HP 3580A	5 Hz - 50 kHz	HP 3585A	P, A
Spectrum Analyzer	HP 181T/ 8557A	350 MHz		P
Signature Analyzer	HP 5005A		HP 5004A	T
Logic Probe	HP 545A	TTL		T

* P = Performance Test; A = Adjustments; T = Troubleshooting

Table 1-2. Specifications

The following specifications apply with 50 Ohm load resistance. Output levels double when driving into high impedance (up to 32 Vpp). Accuracy specifications apply from 15°C to 35°C. For temperatures below 15°C and above 35°C see "General" information.

WAVEFORMS

Sine, Triangle, Ramp, Square, Pulse, Haversine, Havertriangle, DC

TIMING CHARACTERISTICS

Frequency

Range: 1.00 MHz to 50.0 MHz
Resolution: 3 digits

Accuracy (% of setting)	Pulse mode or 50 % duty cycle	≠ 50 % duty cycle
1.0 MHz to 99.9 kHz	± 3 % ± 0.3 MHz	± 3 % ± 0.6 MHz
100 kHz to 9.99 MHz	± 5 %	± 10 %
10.0 MHz to 50 MHz	± 5 %	-----

Repeatability: Factor 4 better than accuracy
Jitter: < 0.1 % + 100 ps (50 % duty cycle and pulse mode)
< 0.2 % + 100 ps (= 50 % duty cycle)
Stability: ± 0.2 % (1 hour)
± 0.5 % (24 hours)

Duty Cycle (sine, triangle, square)

Range: 10 % to 90 % (1 MHz to 999 kHz)
20 % to 80 % (1 MHz to 9.99 MHz)
Resolution: 1 %
Accuracy: ± 0.5 digits (100 MHz to 999 kHz)
± 3.0 digits (1 MHz to 9.99 MHz)

Pulse Width (pulse mode)

Range: 10.0 ns to 999 ms
Resolution: 3 digits
Accuracy: ± 5 % of setting ± 2 ns
Repeatability: Factor 4 better than accuracy
Jitter: 0.2 % + 200 ps (width ≤ 10 μs)
0.1 % (width > 10 μs)
Max. Width: Period -10 ns

OUTPUT CHARACTERISTICS

Output Impedance: 50 Ohm ± 5 %
Reflection: < 12 % (ampl. ≥ 100 mVpp)

Amplitude/Offset

Amplitude and offset are independently variable within the following two level windows

Level window	± 800 mV	± 8.00 V
Amplitude range	10.0 mVpp to 99.9 mVpp	100 mVpp to 16.0 Vpp
Ampl. resolution	3 digits	3 digits
Ampl. accuracy*	± 5 % [0.45 dB]	± 5 % [0.45 dB]
Repeatability	Factor 4 better than accuracy	
Offset range	0 to ± 795 mV	0 to ± 7.95 V
Offset resolution	3 digits (best case 100 μV)	3 digits (best case 1 mV)
Offset accuracy	± 1 % of setting ± 1 % of amplitude ± 4 mV	± 0.5 % of setting ± 1 % of amplitude ± 40 mV
Repeatability	Factor 4 better than accuracy	

* The amplitude accuracy for sine and triangle is specified at 1 kHz. For other frequencies see the following flatness specifications.

Amplitude Flatness (50 % duty cycle)	Sine	Triangle
1.00 MHz to 999 kHz	± 3 % (0.26 dB)	± 3 %
1.00 MHz to 9.99 MHz	± 5 % (0.45 dB)	± 5 %
	+ 5 % (0.45 dB)	+ 5 %
10.0 MHz to 50.0 MHz	- 15 % (1.41 dB)	- 25 %

DC Voltage (all waveform selection keys deactivated)

Range: 0 to ± 7.95 V
Resolution: 3 digits (best case 1 mV)
Accuracy: ± 0.5 % of setting ± 20 mV

WAVEFORM CHARACTERISTICS

Sine (Normal Mode, 50 % duty cycle)

Total Harmonic Distortion (THD): < 1 % (-40 dB), (10 Hz to 50 kHz)
Harmonic Signals: More than 34 dB below fundamental (50 kHz to 1 MHz)
More than 23 dB below fundamental (1 MHz to 50 MHz, > 20 mVpp -8 Vpp)
THD may increase by 3 dB below 10°C

Triangle, Ramp

Non-linearity: < ± 3 % (10 % to 90 % of amplitude, 100 MHz to 1 MHz)

Square, Pulse

Rise/Fall time: < 6 ns (10 % to 90 % of amplitude)
Pulse Perturbations: < ± 5 % of amplitude ± 2 mV

OPERATING MODES

Norm: Continuous waveform is generated

Trig*: Each input cycle generates a single output cycle

Gate*: External signal enables oscillator. First output cycle synchronous with active trigger slope. Last cycle always completed.

External Width: External signal will be shaped to (pulse mode only) determine output pulse width and period. Amplitude and offset controls are active.

Sweep: Logarithmic sweep for all waveforms up to full range (1 mHz to 50 MHz) between selected start and stop frequency. Sweep time per decade selectable in 1-2-5 sequence between 10 ms and 500 s.

Int. Sweep: Continuous sweep cycles.

Ext. Sweep: One sweep cycle generated on receipt of external signal.

(Duty Cycle 50 %)

Burst*: Preprogrammed number of periods (1 to 1999) is generated. Minimum time between bursts is 100 ns. For bursts with only one period, min time between bursts is 0 ns.

Int. Burst: (pulse mode not available) Internally generated signal starts burst.

Repetition time: 20 ns to 999 ms

Ext. Burst: (all waveforms) External signals starts burst.

Freq max = 40 MHz

* Startphase of sine and triangle switchselectable to 0° and -90° for haversine and havertriangle.

AUXILIARY OPERATING MODES

Man: Simulates external input.

1 Cycle: Provides a single output period in I. BURST (Opt. 001 only) and E. BURST mode.

Auto: In NORM mode, all parameters can be automatically incremented or decremented with selectable resolution. Pushing the AUTO button activates the AUTO vernier, which then can be started with the selected vernier key. AUTO vernier stop is accomplished by an external trigger input or pushing AUTO.

Limit: Maximum high and low levels into 50 Ohm can be limited to protect the device under test. Pushing the limit key will set the limits to the actual levels, which then cannot be exceeded as long as the mode is active.

Compl: Switchselectable normal/complement output.

Disable: Relay disconnects all output circuitry.

CONTROL MODES (external voltage modulates output signal)

FM (frequency modulation)

Deviation: $\pm 5\%$ max

Sensitivity: 1 V for 1 % deviation

Modulation bandwidth: dc to 20 KHz (carrier frq. < 10MHz)
dc to 3kHz (carrier frq. > 10MHz)

AM (amplitude modulation)

Sensitivity: ± 2.5 V for 100 % modulation depth
 $+ 2.5$ V, -7.5 V for DSBSC

Modulation bandwidth: dc to 1 MHz

Envelope distortion: < 1 % for modulation depth less than 90 % (dc to 50 kHz) NOT COMPL

PWM (pulse width modulation)

Pulse width ratio: 10:1 max

Sensitivity: ± 6.5 V typical for ratio 10:1.

Pulse width ranges: 10 ns to 1 s in eight nonoverlapping decade ranges

VCO (voltage controlled oscillator)

External voltage linearly sweeps 2 full frequency decades.

Modulation range: 1:100 with 0.1 V to 10 V

Modulation bandwidth: dc to 1 kHz

SUPPLEMENTARY PERFORMANCE CHARACTERISTICS

(Supplementary characteristics are intended to provide information useful in applying the instrument by giving non-warranted typical performance parameters).

AUXILIARY INPUTS AND OUTPUTS

Ext. Input: Threshold level: ± 10 V adjustable

Max input voltage: ± 20 V

Sensitivity: 500 mVpp

Min pulse width: 10 ns

Input impedance: 10 kOhm

Trigger slope: pos./neg. and trigger off

Control Input Max input voltage: ± 20 V

Input impedance: 10 kOhm

Trigger Output Output levels: 0/2.4 V into 50 Ohm

0/4.8 V into open

Output impedance: 50 Ohm

X-Output (Opt. 001 only): Increasing X-Output voltage with increasing sweep frequency. 0 V corresponds to start frequency and slope is 1.5 V/frequency decade. The max. output voltage is 10 V.

Marker Output (Opt. 001 only): TTL compatible voltage with positive transition at selected marker frequency.

Hold Input (Opt. 001 only): Main output will hold at the instantaneous voltage level when input signal becomes TTL high. Applicable for sine, triangle and square below 10 Hz.

Droop: 0.01 % of amplitude/s

Max input voltage: ± 20 V

HP-IB CAPABILITY


All modes and parameters can be programmed. The external input threshold level is not programmable.

Programming Times

Listen (time for 8116A to receive and verify message)

Data transmission time: 130 μs per ASCII character.


Modes: 11 ms

Waveforms: 

	24 ms	
	330 ms	
		in one string
DTY	60 ms	} 42 ms
FRQ	60 ms	
WID	24 ms	} 38 ms
HIL	110 ms	} 60 ms
LOL	100 ms	
AMP	150 ms	} 90 ms
OFS	150 ms	
ENABLE, DISABLE, LIMIT, NORM/COMPL	60 ms	

EXAMPLE:

"M1 W3 FRQ 1 KHz DTY 20 % HIL 3 V LOL 1 V D1"

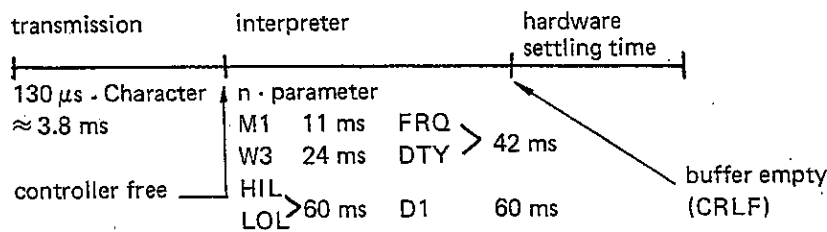

Talk (time for 8116A to transmit a message)
Learn Mode, Error recognition: 1 ms/character.
Status: < 15 ms.

Settling Times (time to execute message)
Frequency, Duty Cycle, Width, Amplitude: 5 ms
Offset, DC Voltage: 30 ms

GENERAL

Warm-up Time: 15 min to meet all specifications

Environmental:

Storage temperature: -40°C to 70°C

Operating temperature: 0°C to 55°C

Accuracy Specifications apply from 15°C to 35°C.

Accuracy derating factor for temperatures outside this range: 1 + 0.05 x Δ°C.

Δ°C is the temperature deviation below 15°C and above 35°C.

Humidity Range: 95 % R.H., 0°C to 40°C.

Power-off storage: After eight hours of operation, battery maintains all current mode and parameter information up to half a year with instrument switched off.

Power: 100/120/220/240 V rms +5 %, -10 %;
48-440 Hz, 120 VA max.

Weight: Net 5.9 kg (13 lbs), Shipping 8.0 kg (18 lbs).

Dimensions: 89 mm high, 213 mm wide, 450 mm deep
(3.5 x 8.4 x 17.7 in)

Options:

001 Burst, Sweep and Hold

910 Additional Operating and Service Manual
(Part No.: 08116-90001).

SECTION II INSTALLATION

2-1 INTRODUCTION

2-2 This section provides installation instructions for the instrument and its accessories. It also includes information about initial inspection and damage claims, preparation for use, and packaging, storage and shipment.

2-3 INITIAL INSPECTION

2-4 Inspect the shipping container for damage. If the container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked for completeness and the instrument has been checked mechanically and electrically. The contents of the shipment should be as shown in Figure 1-1 plus any accessories that were ordered with the instrument. Procedures for checking the electrical operation are given in Section 4. If the contents are incomplete, if there is a mechanical damage or defect, or if the instrument does not pass the operator's checks, notify the nearest Hewlett-Packard office. Keep the shipping materials for carrier's inspection. The HP office will arrange for repair or replacement without waiting for settlement.

2-5 PREPARATION FOR USE

WARNING

To avoid hazardous electrical shock, do not perform electrical tests when there are signs of shipping damage to any portion of the outer enclosure (covers, panels, meters).

2-6 Power Requirements

2-7 The instrument requires a power source of 100/120/220 or 240 Vrms (+5% - 10%) at a frequency of 48-440 Hz single phase. The maximum power consumption is 120 VA.

2-8 Line Voltage Selection

CAUTION

BEFORE SWITCHING ON THIS INSTRUMENT make sure that the instrument is set to the local line voltage. The line voltage selector switches can be seen through the left-hand side of the instrument cover to the rear. The correct setting for the country of destination will have been made at the factory. The instrument power fuse is located on the rear panel. To access the line selector switches, first DISCONNECT the power cord, then remove instrument top cover by releasing the captive securing screw at rear and sliding cover off.

CAUTION

Do not change the LINE SELECTOR switch settings with the instrument on or with power connected to the rear panel.

2-9 Figure 2-1 provides information for line voltage and fuse selection:

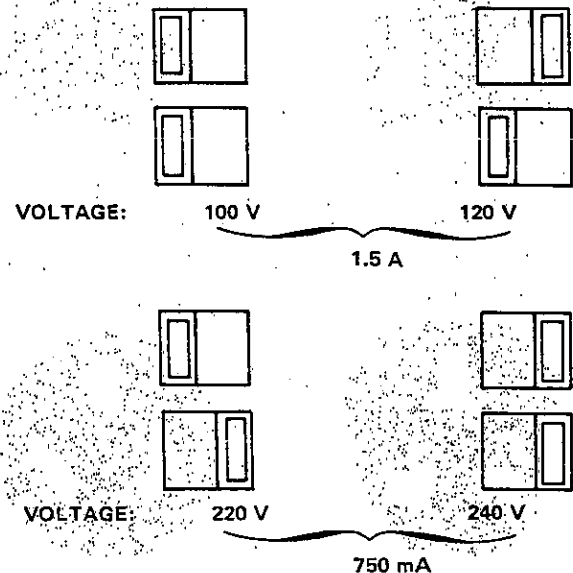


Figure 2-1. Sliding Switches Positions for different Line Voltages

2-10 Power Cable

WARNING

To avoid the possibility of injury or death, the following precautions must be followed before the instrument is switched on:

- a. If this instrument is to be energized via an autotransformer for voltage reduction, make sure that the common terminal is connected to the grounded pole of the power source.
- b. The power cable plug shall only be inserted into a socket outlet provided with a protective ground contact. The protective action must not be negated by the use of an extension cord without a protective conductor.
- c. Before switching on the instrument, the protective ground terminal of the instrument must be connected to a protective conductor of the power cable. This is verified by checking that the resistance between the instrument chassis and the front panel and the ground pin of the power cable plug is zero ohms.

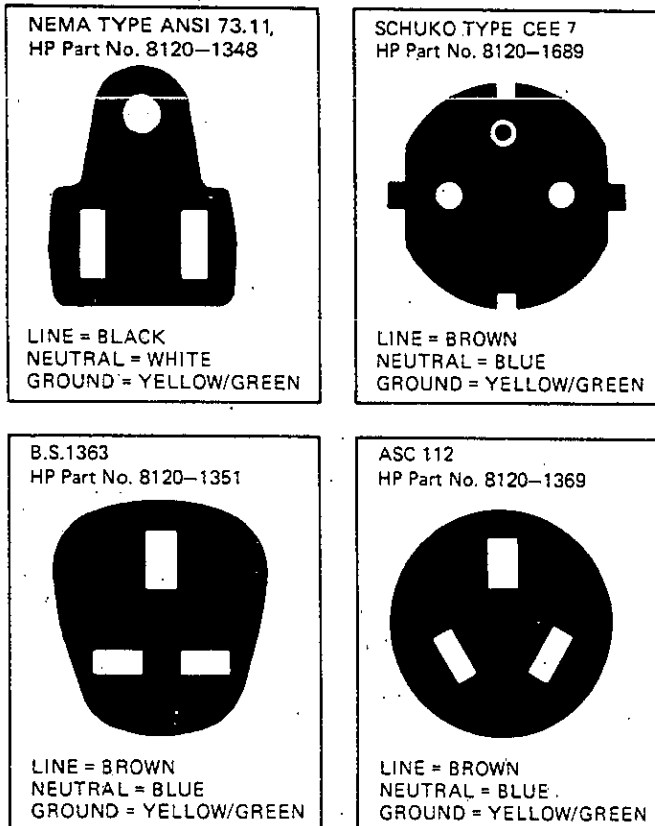


Figure 2-2. Power Cables Available: Plug Identification

2-11 In accordance with international safety standards, this instrument is equipped with a three-wire power cable. When connected to an appropriate ac power receptacle, this cable grounds the instrument cabinet. The type of power cable shipped with each instrument depends on the country of destination. Refer to Figure 2-2 for the part number of the power cords available.

2-12 The following work should be carried out by a qualified electrician and all local electrical codes must be observed. If the plug on the cable supplied does not fit your power outlet, or if the cable is to be attached to a terminal block, then cut the cable at the plug end and re-wire it. The colour coding used in the cable will depend on the cable supplied (see Figure 2-2). If a new plug is to be connected, the plug should meet local safety requirements and include the following features:

- adequate load-carrying capacity (see table of specifications in Section 1)
- ground connection
- cable clamp

2-13 HP-IB Connector

2-14 The rear panel HP-IB connector (Figure 2-3) is compatible with the connectors on Cable Assemblies 10833A, B, C and D. If a cable is to be locally-manufactured, use connector male, HP part number 1251-0293.

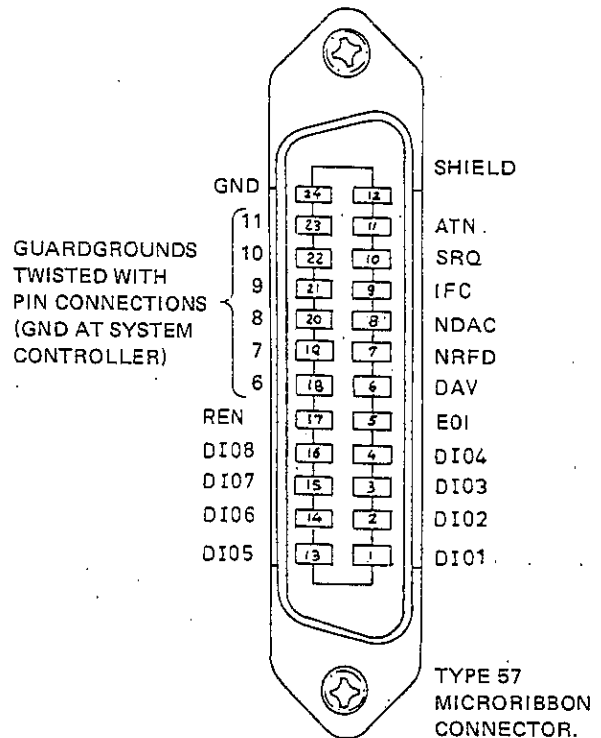


Figure 2-3. HP-IB Connector

2-15 HP-IB Logic Levels

2-16 The 8116A HP-IB lines use standard TTL logic. Logic levels are as follows:

True = low = digital ground or 0V dc to +0.4V dc,
False = high = open or +2.5V dc to +5V dc.

All HP-IB lines have LOW assertion ("1") states. High states are held at +3V dc by pullups within the instrument. When a line functions as an input, approximately 3.2mA of current is required to pull it low through a closure to digital ground. When a line functions as an output, it will sink up to 48mA in the low state and approximately 0.6mA in the high state.

CAUTION

Isolation. The HP-IB line screens are not isolated from outer chassis (frame) ground.

2-17 Operating Environment

The operating temperature limits are 0°C to 55°C. The specifications also apply over this temperature range.

2-18 CLAIMS AND REPACKAGING

2-19 Claims for Damage

2-20 If physical damage is evident or if the instrument does not meet specification when received, notify the carrier and the nearest Hewlett-Packard Sales/Service Office. The Sales/Service Office will arrange for repair or replacement of the unit without waiting for settlement of the claim against the carrier.


2-21 Storage and Shipment

2-22 The instrument can be stored or shipped at temperatures between -40°C and 75°C. The instrument should be protected from temperature extremes which cause condensation within it.

2-23 If the instrument is to be shipped to a Hewlett-Packard Sales/Service Office, attach a tag showing owner, return address, model number and full serial number and the type of service required. The original shipping carton and packaging material may be re-usable but the Hewlett-Packard Sales/Service office will also provide information and recommendations on materials to be used if the original packing is not available or re-usable. General instructions for re-packing are as follows:

1. Wrap instrument in heavy paper or plastic.
2. Use strong shipping container. A double wall carton made of 350-pound test material is adequate.
3. Use enough shock-absorbing material (3 to 4-inch layer) around all sides of instrument to provide firm cushion and prevent movement inside container. Protect control panel with cardboard.
4. Seal shipping container securely.
5. Mark shipping container FRAGILE to encourage careful handling.
6. In any correspondence, refer to instrument by model number and serial number.

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100

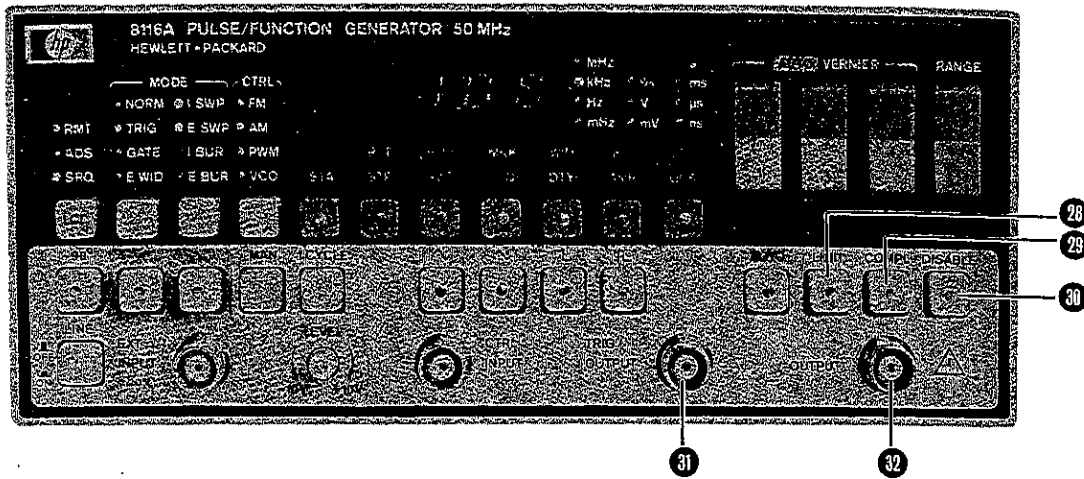

OUTPUT CONTROLS / CONNECTORS


28 LIMIT pushbutton. Maximum high (HIL) and low (LOL) levels into 50 Ohm can be limited to protect the device under test. Pushing the LIMIT key sets the limits to the currently active levels, which cannot be exceeded as long as the LIMIT key is active (pushbutton LED illuminated).

29 COMPLEMENT pushbutton. Provides switch-selectable normal/complement output. When pushbutton LED is illuminated, output is complement.

30 DISABLE pushbutton. Pressing this pushbutton disables the 8116A output. (Disable state indicated by illuminated LED).

31 TRIG OUTPUT connector. BNC connector for providing a trigger output signal.

32 OUTPUT connector. BNC connector for providing the 8116A output signal.

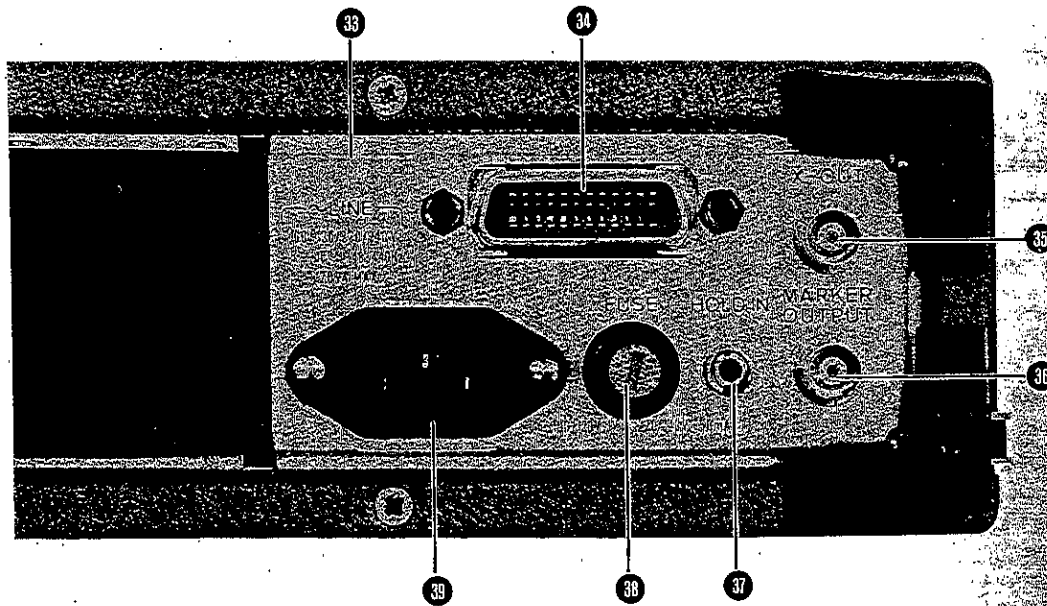

REAR PANEL CONTROLS / CONNECTORS

33 HP-IB device address switch (5 bits A1 to A5).

34 HP-IB connector.


35 X-OUTPUT connector (Opt. 001). Delivers increasing output voltage with logarithmically increasing frequency in sweep mode. 0 V corresponds to start frequency, and slope is 1.5 V/frequency decade. The maximum output voltage is 10 V.

36 MARKER OUTPUT connector (Opt. 001). Provides a TTL compatible voltage with positive-going step at the selected marker frequency in sweep mode.

37 HOLD INPUT connector (Opt. 001). An input signal at this connector causes the 8116A output to hold at that voltage instantaneous to the input signal attaining 10% high. Applicable for sine, triangle and squarewave below 10 MHz.

38 FUSE. Accepts standard fuses to provide instrument protection in case of current overload. A 750 mA slow blow fuse must be used when operating from a 220/240 V power source. A 1.5 A fuse is used when operating from a 100/120 V power source.


39 LINE. A three pronged receptacle to provide chassis ground through the power cable for operator protection.

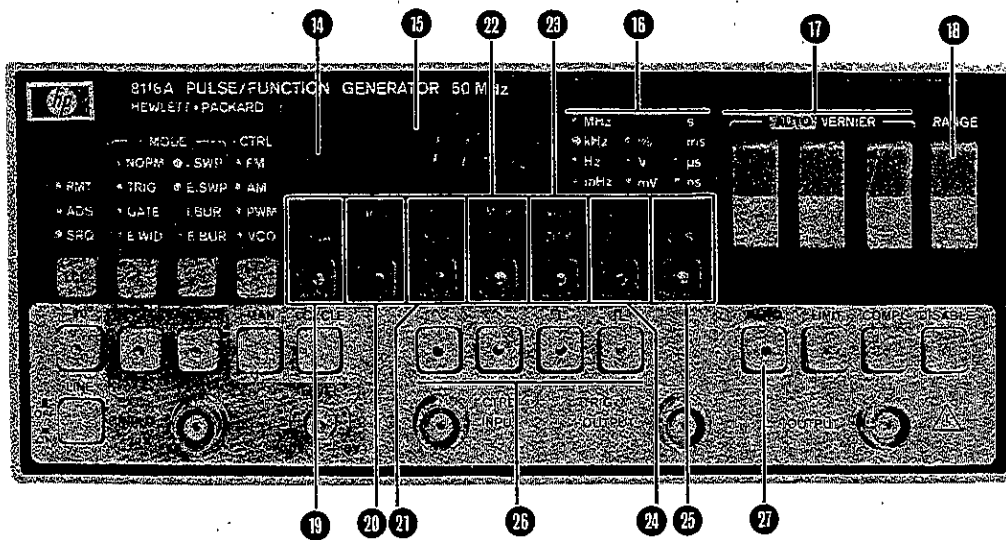

PARAMETER/WAVEFORM SELECTION

- 14** ERROR LED. Indicates erroneous mode settings and incompatible timing settings.
- 15** Digital display. Indicates numerical value of currently displayed parameter.
- 16** Units LEDs. Indicates in which units the currently displayed parameter is measured.
- 17** VERNIER rocker keys. Used to vary parameter values.
- 18** RANGE rocker key. Used to change the range of the currently selected parameter.
- 19** to **25** Parameter selection pushbuttons and their associated mnemonics. On pressing a pushbutton, the built-in LED illuminates and the current value of the selected parameter becomes displayed. For each pushbutton, the selected parameter is indicated by an illuminated mnemonic (automatically controlled by the 8116A). Once selected, the parameter value can be varied via the RANGE/VERNIER keys. Individual details of each pushbutton are given in the following:
- 19** (Option 001). Only active in sweep modes, and selects sweep start frequency (STA) parameter for display and setting.
- 20** (Option 001). Selected mode determines mnemonic illumination, hence parameter selection. Mnemonics are:
- RPT: REPEAT is illuminated to indicate that the "time between bursts" is currently selectable.
- or STP: STOP is illuminated to indicate that "sweep stop frequency" is currently selectable.
- 21** (Option 001). Selected mode determines mnemonic illumination, hence parameter selection. Mnemonics are:
- BUR: BURST. Illuminated to indicate that "burst number" is currently selectable.
- or SWT: SWEEP TIME. Illuminated to indicate that SWEEP TIME is currently selectable.
- 22** Selected mode determines mnemonic illumination, hence parameter selection. Mnemonics are:
- MRK: MARKER (Opt. 001). Only illuminated in sweep modes to indicate that "sweep marker frequency" is currently selectable.
- or FRQ: FREQUENCY. Illuminated in all modes, except sweep modes, to indicate that "frequency" is currently selectable.
- 23** Selected waveform determines mnemonic illumination hence parameter selection. Mnemonics are:
- WID: WIDTH. Illuminated with pulse waveforms selected to indicate that "width" is currently selectable.
- or DTY: DUTY CYCLE. Illuminated when sine, triangle (ramp) or squarewave is selected to indicate that "duty cycle" is currently selectable. (RANGE key and lefthand VERNIER key inactive).
- 24** Parameter selection is user-dependent. Pressing pushbutton once selects parameter indicated by currently illuminated mnemonic. Pressing the illuminated pushbutton a second time changes parameter selection (mnemonic illumination) e.g. HIGH LEVEL (HIL) to AMPLITUDE (AMP) or vice-versa.
- 25** Parameter selection is user-dependent. Pressing pushbutton once selects parameter indicated by currently illuminated mnemonic. Pressing the illuminated pushbutton a second time changes parameter selection (mnemonic illumination) e.g. LOW LEVEL (LOL) to OFFSET (OFS) or vice-versa.
- 26** Waveform pushbuttons. Select the desired waveform to be generated by the 8116A output. The currently selected waveform is indicated by an illuminated pushbutton LED. Pressing the illuminated pushbutton a second time switches waveforms off for d.c. mode.
- 27** AUTO pushbutton. In NORM mode only, all parameters can be automatically incremented or decremented with selectable resolution. Pushing the AUTO pushbutton activates the AUTO VERNIER, which can then be started with the selected VERNIER key. Any of 3 conditions causes an AUTO VERNIER "wait" state i.e. AUTO VERNIER active, but no increment/decrement takes place. The conditions are:
1. Timing error exists.
 2. At instrument specification limits e.g. frequency 50 MHz.
 3. At output level limits set via the LIMIT key.
- AUTO VERNIER switch-off is accomplished by any of the following:
1. External trigger input.
 2. Pressing any key other than the VERNIER keys.
 3. Pressing the AUTO key.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

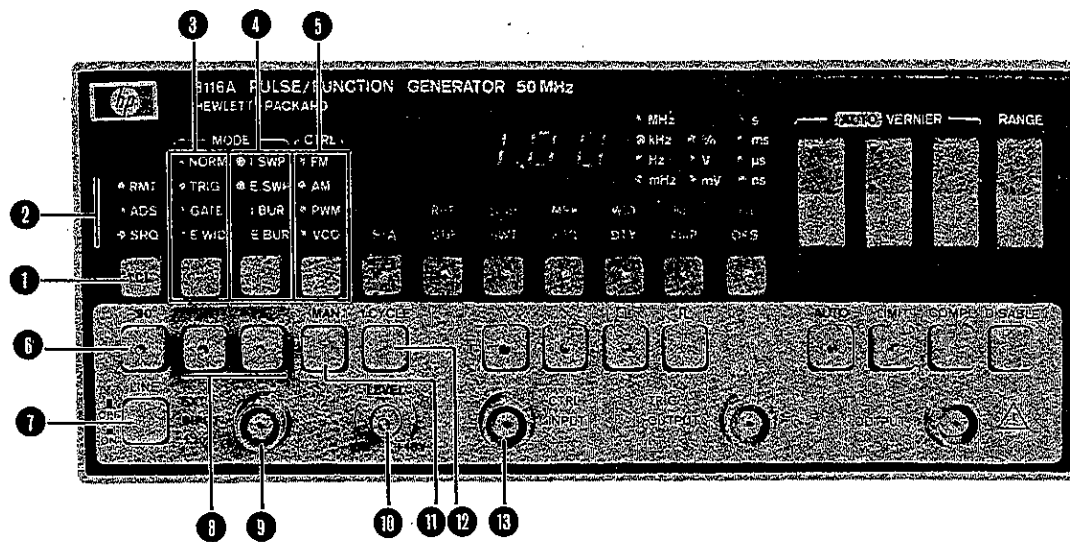

OPERATING AND CONTROL MODE SELECTION

- 1** This pushbutton returns the 8116A to local manual operation. (NOTE: Pushbutton disabled when LOCAL LOCK-OUT command sent by the controller to the 8116A). In local mode pressing this pushbutton causes the currently selected HP-IB address to be displayed.
- 2** Program status LEDs. When illuminated, they indicate the following:

 - RMT:** Indicates REMOTE control and all frontpanel push-buttons are disabled (except LCL).
 - ADS:** Indicates that the 8116A is being ADDRESSED under program control, although frontpanel push-buttons may be operational depending on whether the RMT LED is lit or unlit.
 - SRQ:** Indicates that the SERVICE REQUEST has been sent to the controller.
- 3** Standard mode selection pushbutton and associated LEDs. Repetitive operation of this pushbutton steps through the modes in the sequence indicated by the LED column. The modes are as follows:

 - NORM:** NORMAL mode with internal rate generator free-running.
 - TRIG:** A TRIGGER signal, either at the EXT INPUT connector or via the MANUAL pushbutton, initiates one output pulse.
 - GATE:** A GATE signal, either at the EXT INPUT connector or via the MANUAL pushbutton, generates an output for the duration of that signal.
 - E.WID:** (Pulse waveform only). The EXTERNAL WIDTH mode allows the signal applied to the EXT INPUT to be shaped in order to determine output pulse width and period.
- 4** Option mode selection pushbutton and associated LEDs. Repetitive operation steps through the modes in the same sequence as the LED column. The modes are as follows:

 - I.SWP:** INTERNAL SWEEP. Continuous sweep cycles between the selected start and stop frequency. Frequency increment is logarithmic. Sweep direction always upwards.
 - E.SWP:** EXTERNAL SWEEP. A trigger signal, either at the EXT INPUT connector or via the MANUAL pushbutton, generates a single sweep between the start and stop frequencies. (Further triggering details are given later in this section under External Triggering/MANUAL descriptions).
 - I.BUR:** (Pulse waveform excluded). INTERNAL BURST. Preselected number of cycles (1 to 1999) generated continuously. Time between bursts set via RPT key.
 - E.BUR:** (All waveforms). EXTERNAL BURST. A burst trigger, either at the EXT INPUT connector or via the MANUAL pushbutton, generates a preselected number of output cycles (1 to 1999).
- 5** Control mode select pushbutton and associated LEDs. Repetitive operation steps through the modes in the same sequence as the LED column. The modes are as follows:

 - FM:** FREQUENCY MODULATION mode. The 8116A's output can be frequency modulated by applying a voltage to the frontpanel CONTROL INPUT connector.
 - AM:** AMPLITUDE MODULATION mode. The 8116A's output can be amplitude modulated by applying a voltage to the frontpanel CONTROL INPUT connector.
 - PWM:** PULSE WIDTH MODULATION mode. The 8116A's output can be pulse width modulated by applying a voltage to the frontpanel CONTROL INPUT connector.
 - VCO:** VOLTAGE CONTROLLED OSCILLATOR mode. In this mode, a signal applied to the CONTROL INPUT connector determines the 8116A output frequency.
- 6** Phase pushbutton. In TRIG, GATE and optional BURST modes the start phase may be shifted through -90 degrees in sine or triangle generation using this pushbutton. Haversine or haverstriangle can thus be generated.
- 7** LINE switch. Power on/off pushbutton.
- 8** TRIGGER SLOPE pushbuttons. In external triggering modes, the trigger slope of the signal applied to the EXT INPUT connector is selected using these pushbuttons. The currently selected slope is indicated by an illuminated pushbutton LED.
- 9** EXTERNAL INPUT connector. BNC connector for external trigger signals.
- 10** LEVEL adjust. Enables the external input trigger level to be adjusted in the range -10 V to 10 V.
- 11** MANUAL pushbutton. Used to simulate an external trigger signal. In optional sweep modes, it starts a single sweep cycle and resets from stop frequency to start frequency.
- 12** 1 CYCLE pushbutton. (Opt. 001). Pressing this pushbutton generates a single output period in I.BURST and E.BURST modes.
- 13** CONTROL INPUT connector. BNC connector for external control signals.

Figure 3-1. Controls and Indicators (Option 001 included)

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

SECTION III OPERATING AND PROGRAMMING

3-1 INTRODUCTION

3-2 The following operating information explains the functions of the controls and indicators of the Model 8116A Pulse/Function Generator. Front and rear panel controls, indicators and connectors are identified and briefly described in Figure 3-1, which should be read before continuing with the following description. Programming information is given at the end of this section.

3-3 SPECIAL OPERATING CONSIDERATIONS



3-4 Read the following four notes before applying power to the Model 8116A.

1. Read the Safety Summary at the beginning of this manual.
2. Ensure the power selector switches are set properly for the power source being used to avoid instrument damage. This can be done by checking the line selection label on the rear panel.

CAUTION: Do not change the LINE SELECT switch setting with the instrument on or with power connected to the rear panel.

3. Ensure that load cannot be overdriven by the 8116A output (16 Vpp into 50 Ω ; 32 Vpp into high impedance).
4. Do not apply an external voltage or electrostatic discharge (ESD) to the output connectors.

3-5 OPERATOR'S CHECKS

3-6 The 8116A performs a 'self check' at power switch-on. During this check, all LED's should be momentarily lit. In the event of a fault, an error code appears in the 8116A frontpanel digital display. The error codes are as follows:

- Indicates that a frontpanel key is jammed in the depressed position.
- E11- Indicates a fault by Auto Vernier/ External Sweep Trigger
- E21- Indicates a fault in the internal rep. rate generator
- E31- Indicates a fault in the internal width circuits. The width setting in pulse mode and the 'time between bursts' in I.BUR mode are affected.
- E41/42- Indicates an output amplifier fault.
- E51-E62 Error indications for dedicated service tests.

3-7 OPERATING INSTRUCTIONS

3-8 Operating modes and parameters can be set on the frontpanel (local operation) or programmed using the HP-IB. The current operating mode is indicated by an illuminated LED in the MODE column on the frontpanel. Parameter selection for the 8116A digital display is indicated by an illuminated pushbutton LED. Similarly, current output waveform is also indicated by an illuminated pushbutton LED:

3-9 At power switch-on, the 8116A performs a self-test and automatically assumes the operating state prevailing at switch-off with the output disabled (DISABLE key LED lit) to protect externally connected devices. The operator should then select the required mode (NORM, TRIG, GATE, E.WID or an Opt. 001 mode when available) and output waveform. Upon selection, the 8116A automatically displays the parameters (mnemonically e.g. FRQ, DTY, AMP, OFS) which can be set within this mode. Parameter keys other than those which select the displayed parameters are not operational.

3-10 Pressing a parameter key then calls the current value of that parameter into the 8116A digital display, and a new value can be set using the RANGE and VERNIER keys. When all parameters are set to the required values, the DISABLE key should then be pressed to enable the output (key LED no longer illuminated).

3-11 In addition to the operating modes, the 8116A offers 4 control modes for modulating or controlling the output signal i.e. FM, AM, PWM, VCO. Table 3-1 shows which control mode can be combined with which operating mode. In the event of the operator selecting an erroneous combination e.g. E.WID and FM, the 8116A automatically displays ERROR and the E.WID and FM LED's will flash. Similarly, in NORM mode, when the operator makes incompatible timing settings (e.g. width greater than frequency) the 8116A displays ERROR.

Table 3-1. Operating/Control Mode Combinations

Mode Modulate	NORM	TRIG	GATE	E.WID	I.SWP	E.SWP	I.BUR	E.BUR
FM	•	•	•	—	•	•	•(2)	•
AM	•	•	•	•(1)	•	•	•(2)	•
PWM	•(1)	•(1)	•(1)	—	•(1)	•(1)	—	•(1)
VCO	•	•	•	—	—	—	•	•

- = All waveforms
- (1) = Pulse waveform only
- (2) = All waveforms except pulse
- = Error combination

3-12 PARAMETERS

3-13 Figure 3-2 (Timing) and Figure 3-3 (Output Levels) illustrate the output signal parameters of the standard 8116A. A description of the various parameter-setting controls is given in Figure 3-1.

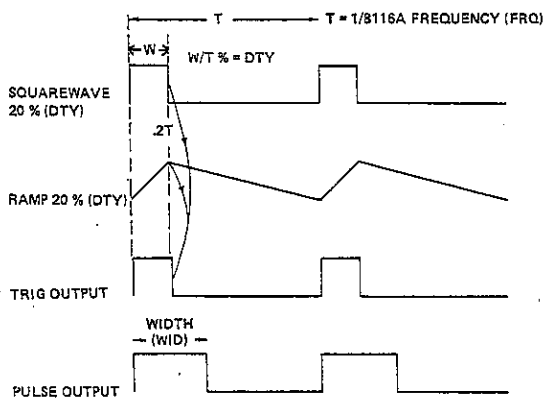


Figure 3-2. Timing Parameters

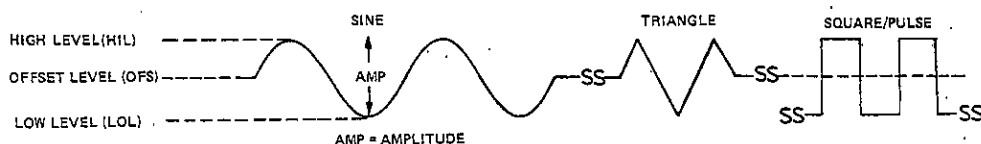


Figure 3-3. Output Level Parameters

3-14 As described in Figure 3-1, the parameter selection of the amplitude/offset keys is user-dependent. With any change to the HIL or LOL settings, the 8116A automatically calculates and stores the new amplitude and offset values.

3-15 Option 001 mode parameters are explained and illustrated under the respective mode description.

3-16 VERNIER / RANGE OPERATION

3-17 The vernier comprises 3 rocker-switches corresponding to the 3 display digits. Incrementing/decrementing a display digit is accomplished by pressing the upper/lower switch section respectively. (Continuous pressing causes continuous increment/decrement of the related display digit).

3-18 The RANGE key is also a rocker-switch for multiplying/dividing the displayed value by factor 10. For the offset parameter, pressing the key twice provides a quick means of setting 0 V.

3-19 AUTO VERNIER OPERATION

3-20 In NORM mode only, all parameters can be automatically incremented/decremented with selectable resolution. To activate AUTO VERNIER operation, first select the parameter to be incremented/decremented, then press the AUTO key. AUTO VERNIER can now be started by pressing any of the VERNIER keys.

3-21 There are 3 conditions, any of which causes an AUTO VERNIER 'wait' state i.e. AUTO VERNIER active (key LED lit), but no increment/decrement takes place. The conditions are:

1. timing error exists
2. at instrument specification limits e.g. frequency 50 MHz
3. at output level limits set via the LIMIT key.

AUTO VERNIER switch-off is accomplished by any of the following:

1. external signal to the EXT INPUT connector
2. pressing any key other than the vernier keys
3. pressing the AUTO key.

3-22 LIMIT OPERATION

3-23 Maximum high (HIL) and low (LOL) levels into 50 Ohm can be set to protect the device under test. Pushing the LIMIT key sets the currently active high and low levels as the 8116A output limits — which cannot be exceeded as long as LIMIT operation is active (key LED lit).

3-24 EXTERNAL TRIGGERING

3-25 Five pushbuttons, a trigger level adjust and BNC connector (EXT INPUT) facilitate external triggering of the 8116A. The function of the individual pushbuttons in the various external triggering modes is described in the following.

3-26 -90°

3-27 With TRIG, GATE or E.BUR (Opt. 001) mode selected, and output waveform set to sine or triangle, pressing this pushbutton shifts the start phase to -90°. As a result, haversine and havertriangle signals can be generated by the 8116A.

3-28 Trigger Slopes

3-29 Positive or negative slope is selectable for triggering on the signal applied to the EXT INPUT connector. With no slope selected (both key LED's off), the EXT INPUT is switched off.

3-30 Triggering level on the selected slope is set via the LEVEL adjust.

3-31 Note that in E.SWP mode (Opt. 001), two trigger pulses may be required. If the 8116A is not set to the start frequency (STA) i.e. STA key LED not illuminated, the first trigger pulse sets the 8116A to the STA frequency. The second trigger pulse then starts the sweep.

3-32 MANUAL

3-33 In external trigger modes, the 8116A can be triggered manually via the MAN pushbutton:

TRIG Mode. Each operation of the MAN key generates one output cycle, cycle time being determined by the 8116A frequency setting.

GATE Mode. The 8116A outputs continuously for as long as the MAN key is depressed. Frequency is determined by the 8116A frequency setting.

E.SWP Mode (Opt. 001). MAN key operation starts the sweep only if the 8116A is set to the start frequency (STA) i.e. STA key LED illuminated. Otherwise, MAN key must be pressed twice; the first time to reset the 8116A to STA, the second to start the sweep.

E.BUR Mode (Opt. 001). Each operation of the MAN key triggers a burst output.

3-34 1 CYCLE (OPTION 001)

3-35 In E.BUR and I.BUR modes, each operation of this key generates a single cycle at the 8116A output.

3-36 STANDARD PARAMETER SET

3-37 The Standard Parameter Set is available for two reasons. Firstly it serves to overcome RAM corruption, should it occur as a result of battery charge deterioration, by giving an error-free display at switch-on. Secondly, when incompatible mode selection causes an error condition (i.e. E.WID and Sine), the instrument may be switched OFF then ON again to revert to the Standard Parameter Set, thus overcoming any condition previously displayed. The Standard Parameter Set is as follows:

NORM	ON
FRQ (active)	1.00 kHz
DTY	50 %
HIL	+0.5 V
LOL	-0.5 V
	ON

Selecting I.SWP mode gives:

STA	1.00 kHz
STP	100 kHz
SWT	50 ms
MRK	1.00 kHz
DTY	50 %
HIL	+0.5 V
LOL	-0.5 V

Selecting I.BUR mode gives:

RPT	100 ms
BUR	1
FRQ	1.00 kHz
DTY	50 %
HIL	+0.5 V
LOL	-0.5 V

Selecting E.BUR withdraws the RPT parameter from the display mnemonics.

Selecting Pulse mode makes WID available (500 μ s):

The Standard Parameter Set can be accessed when the 8116A is operating on the HP-IB by sending the command:

CLR 7 (BASIC) CLEAR 7 (HPL)

3-38 CONTROL MODES

3-39 The 8116A output signal can be modulated (AM, FM, PWM) or controlled (VCO) by applying a signal to the CTRL INPUT connector. Table 3-1 indicates the permitted operating mode/control mode combination, a brief description of each control mode being given in the following. For specification details in each mode — see Table 1-2.

3-40 FREQUENCY MODULATION (FM)

3-41 The 8116A's output can be frequency modulated by applying a signal to the CTRL INPUT connector.

3-42 AMPLITUDE MODULATION (AM)

3-43 The 8116A's output can be amplitude modulated by applying a signal to the CTRL INPUT connector. A ground symmetrical modulating signal provides a modulation of 0-100 %. 200 % modulation (DSBSC) can also be obtained. Figure 3-4 illustrates 100 % modulation and DSBSC.

3-44 PULSE WIDTH MODULATION (PWM)

3-45 In pulse mode, the 8116A's output can be pulse width modulated by applying a signal to the CTRL INPUT connector. Pulse width modulation is available in any one of 8 non-overlapping decade ranges, as illustrated in Figure 3-5.

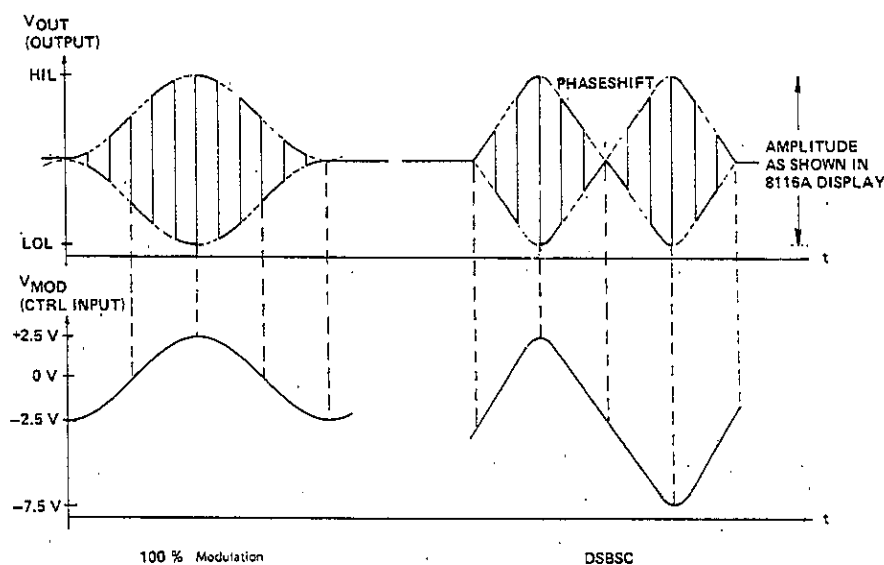


Figure 3-4. Amplitude Modulation

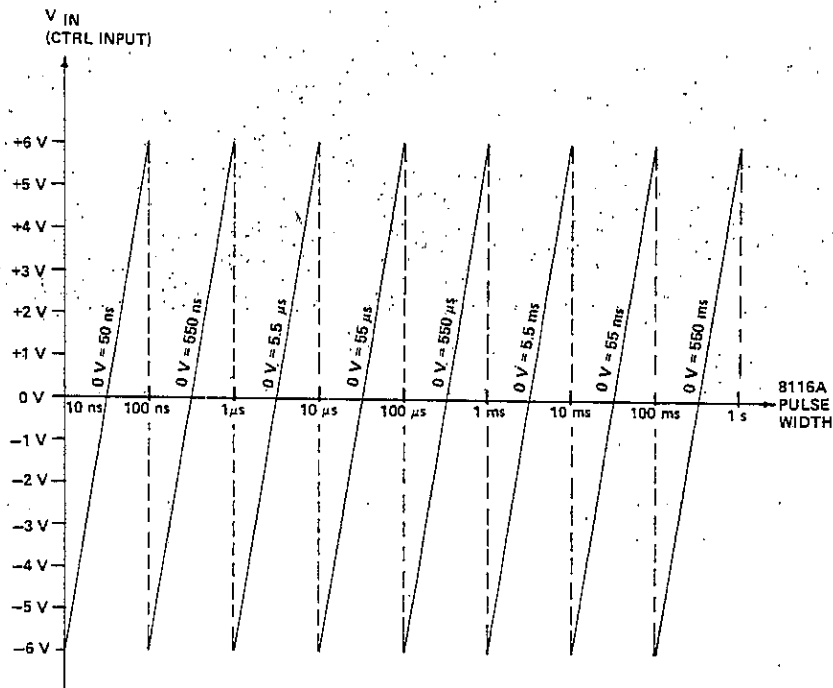


Figure 3-5. PWM Characteristics

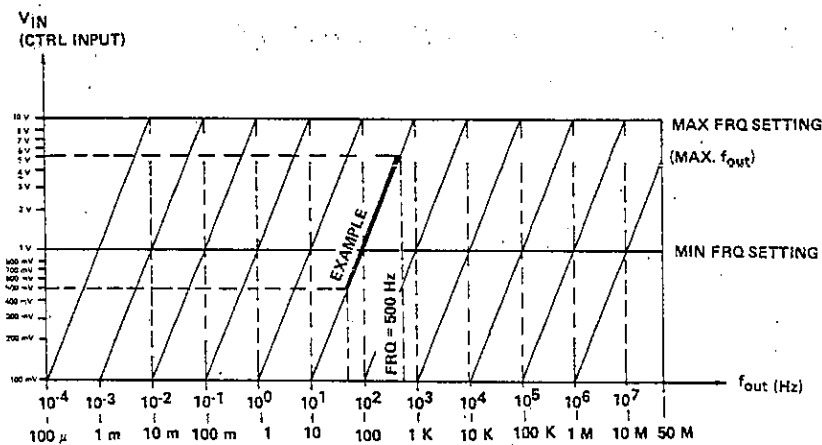


Figure 3-6. VCO Characteristics

3-46 VOLTAGE CONTROLLED OSCILLATOR (VCO)


3-47 In this mode, a signal applied to the CTRL INPUT connector determines the output frequency. Output frequency range is a maximum 1:100 as shown in Figure 3-6.

Range selection is automatically determined by the 8116A frequency (FRQ) setting, the selected range being that whose upper decade brackets the FRQ setting. Figure 3-6 gives a range selection example for an FRQ setting of 500 Hz.

3-48 OPERATING MODES


3-49 Each of the 8 operating modes (standard and Opt. 001) is described briefly. For each mode, a short procedure is given to aid quick mode entry together with timing diagrams to illustrate the various outputs in the described mode. Each 8116A operating mode illustration highlights the parameter mnemonics, hence parameter settings for the presented mode.

NORM MODE

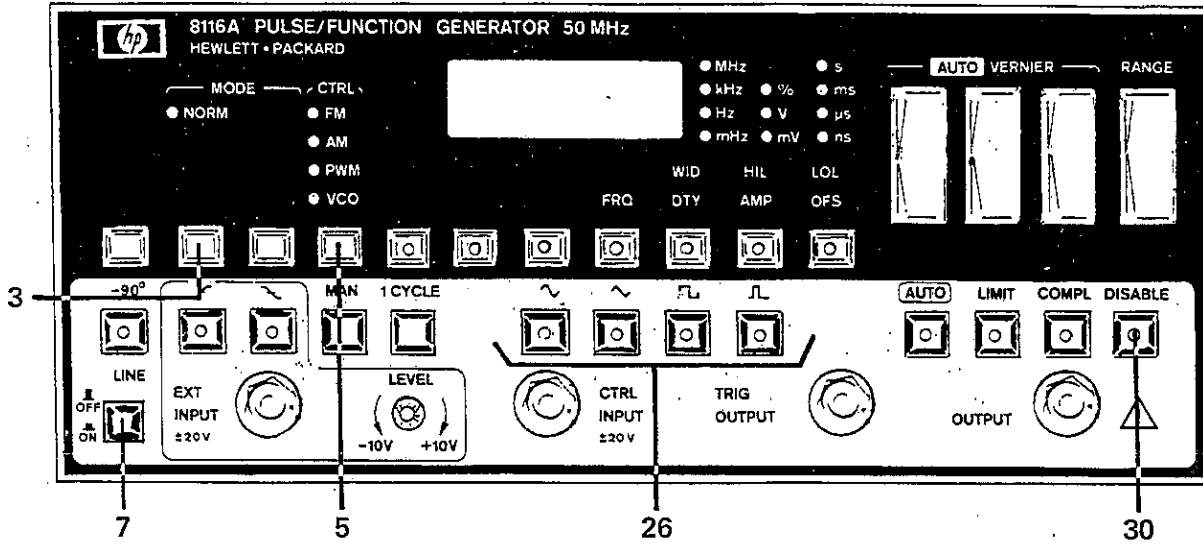


NOTE: For parameter specifications, see Table 1-2.

1. Set the LINE switch (7) to the ON position.
2. Select NORM mode (if necessary) via key (3). Standard modes are stepped-through by repetitive operation of this key.
3. Select the desired waveform at row (26). The parameter menu will automatically be illuminated as shown above (WID only illuminated if pulse waveform selected; also, although HIL, LOL, AMP and OFS can all be selected, only HIL/LOL or AMP/OFS will be illuminated at any one point in time — see Figure 3-1 description).
4. Select each parameter, in turn, via its associated key, and set it to the desired value using the RANGE/VERNIER keys and the digital display.
5. If a modulated output is required, select the desired modulation via key (5), and apply the modulating signal to the CTRL INPUT connector.
6. Press key (30) to enable the 8116A output. Key LED should no longer be illuminated. The following timing diagram illustrates the outputs in NORM mode.

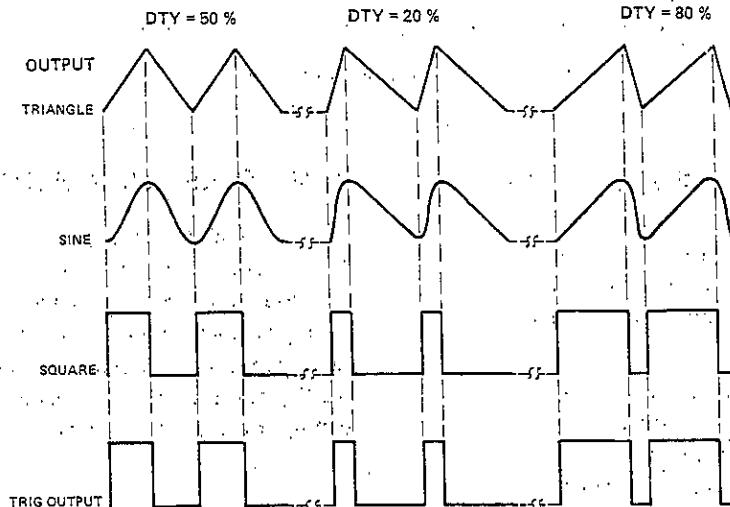

TRIG MODE

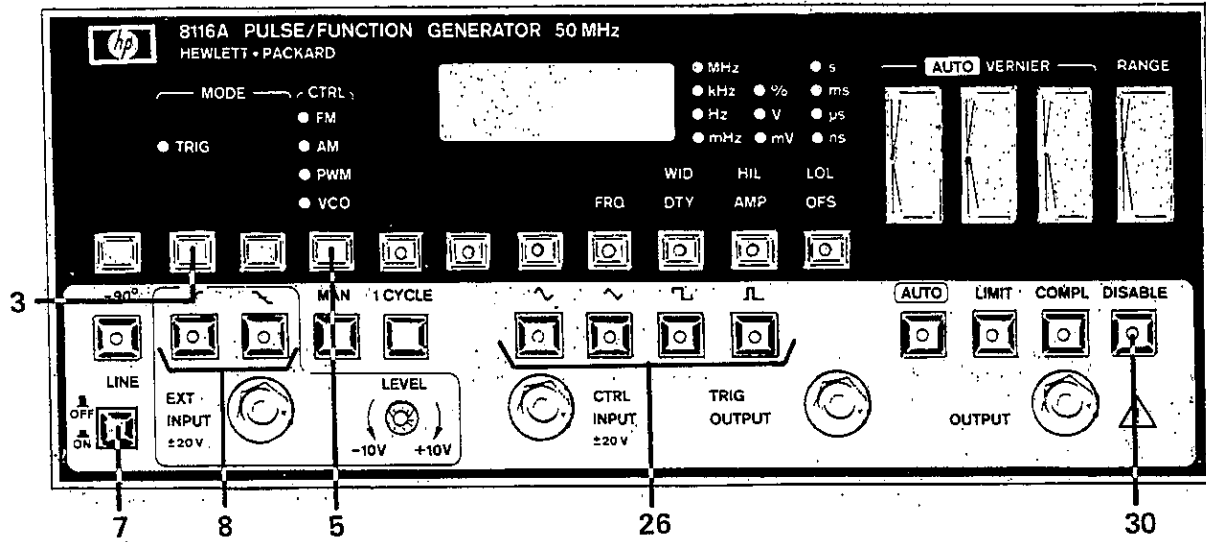


NOTE: For parameter specifications, see Table 1-2.

1. Set the LINE switch (7) to the ON position.
2. Select TRIG mode via key (3). Standard modes are stepped-through by repetitive operation of this key.
3. Select the desired waveform at row (26). The parameter menu will automatically be illuminated, this being a combination of those shown above, e.g. WID only illuminated if pulse waveform selected.
4. Select each parameter, in turn, via its associated key, and set it to the desired value using the RANGE/VERNIER keys and the digital display. Note that the frequency setting should be set less than the frequency of the trigger signal.
5. If triggering is by an external signal, select the trigger slope at (8), and apply the trigger signal to the EXT INPUT connector. Triggering can also be simulated by press the MAN key.
6. If a modulated output is required, select the desired modulation via key (5), and apply the modulating signal to the CTRL INPUT connector.
7. Press key (30) to enable the 8116A output. This key LED should no longer be illuminated. The following timing diagrams illustrate some outputs in TRIG mode.


FUNCTIONS

0° START PHASE
(DTY = 50%)


-90° START PHASE
(DTY = 50%)

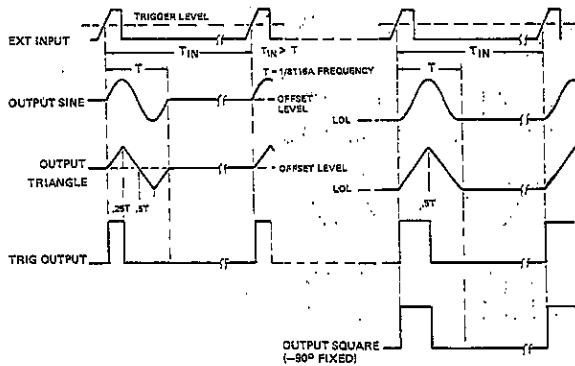

PULSE

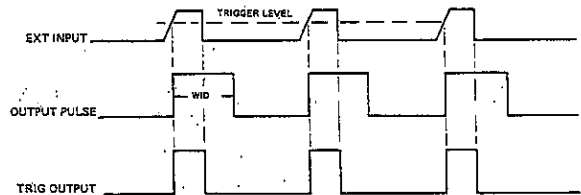


GATE MODE

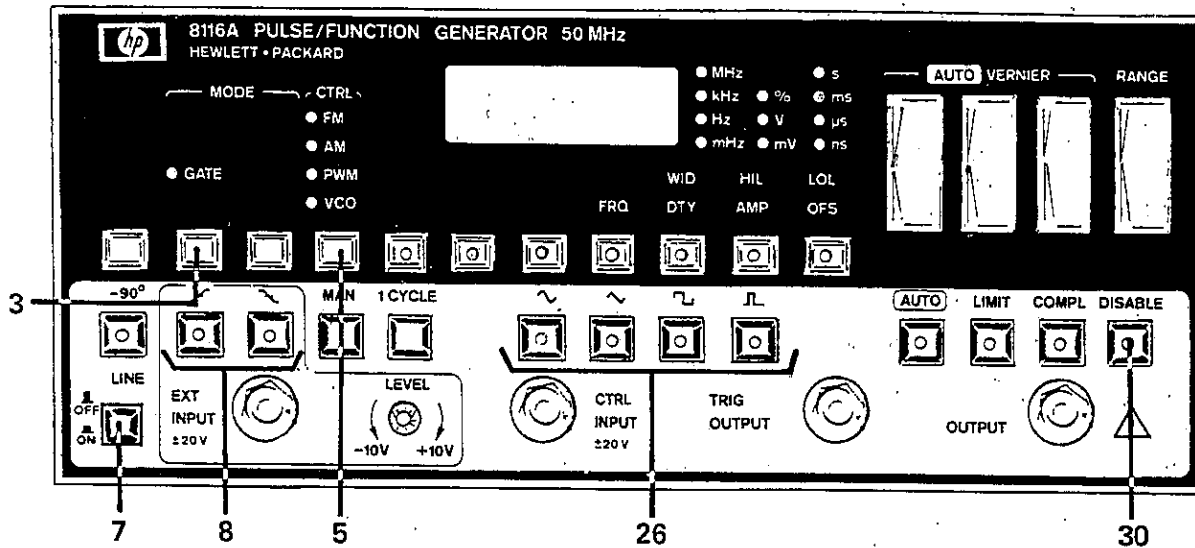


NOTE: For parameter specifications, see Table 1-2.

1. Set the LINE switch (7) to the ON position.
2. Select GATE mode via key (3). Standard modes are stepped through by repetitive operation of this key.
3. Select the desired waveform at row (26). The parameter menu will automatically be illuminated, this being a combination of those shown above e.g. WID only illuminated if pulse waveform selected.
4. Select each parameter, in turn, and set it to the desired value using the RANGE/VERNIER keys and the digital display.
5. If gating by an external signal, select the trigger slope at (9), and apply the gate signal to the EXT INPUT connector.
6. If a modulated output is required, select the desired modulation via key (5), and apply the modulating signal to the CTRL INPUT connector.
7. Press key (30) to enable the 8116A output. This key LED should no longer be illuminated. The following timing diagrams illustrate some outputs in Gate mode.

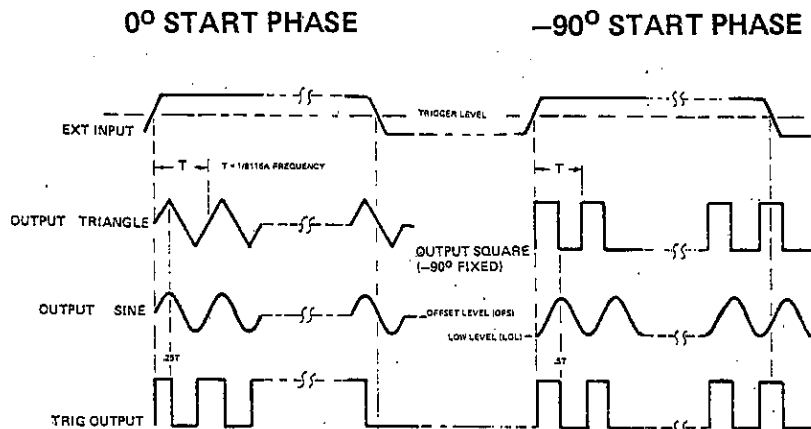


E.WID

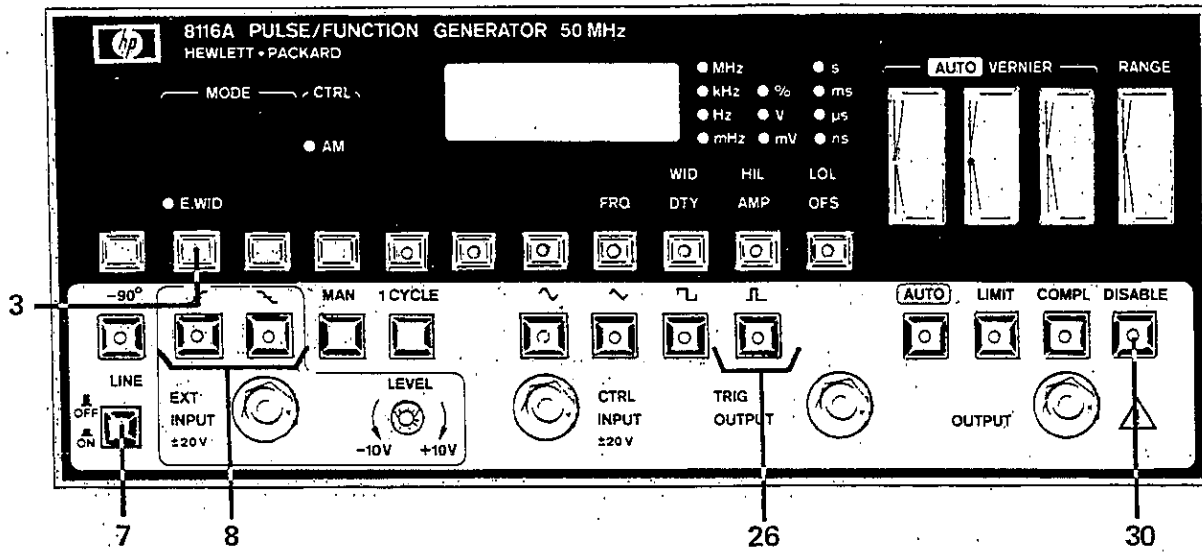


NOTE: For parameter specifications, see Table 1-2.

1. Set the LINE switch (7) to the ON position.
2. Select E.WID mode via key (3). Standard modes are stepped — through by repetitive operation of this key.
3. Select pulse waveform at row (26). The parameter menu will automatically be illuminated, i.e. AMP/OFS or HIL/LOL — see Figure 3-1 description of these parameter keys.
4. Select each parameter in turn, and set it to the desired value using the RANGE/VERNIER keys and the digital display.
5. Apply the external signal to be shaped to the EXT INPUT connector and select the trigger slope at (8).
6. Press key (30) to enable the 8116A output. This key LED should no longer be illuminated. A timing diagram illustrating an output in this mode is given in the following.

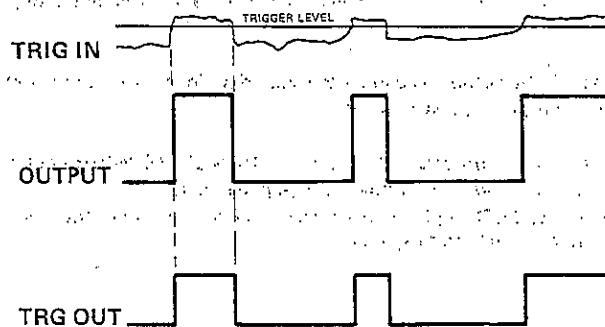


SWEEP MODES

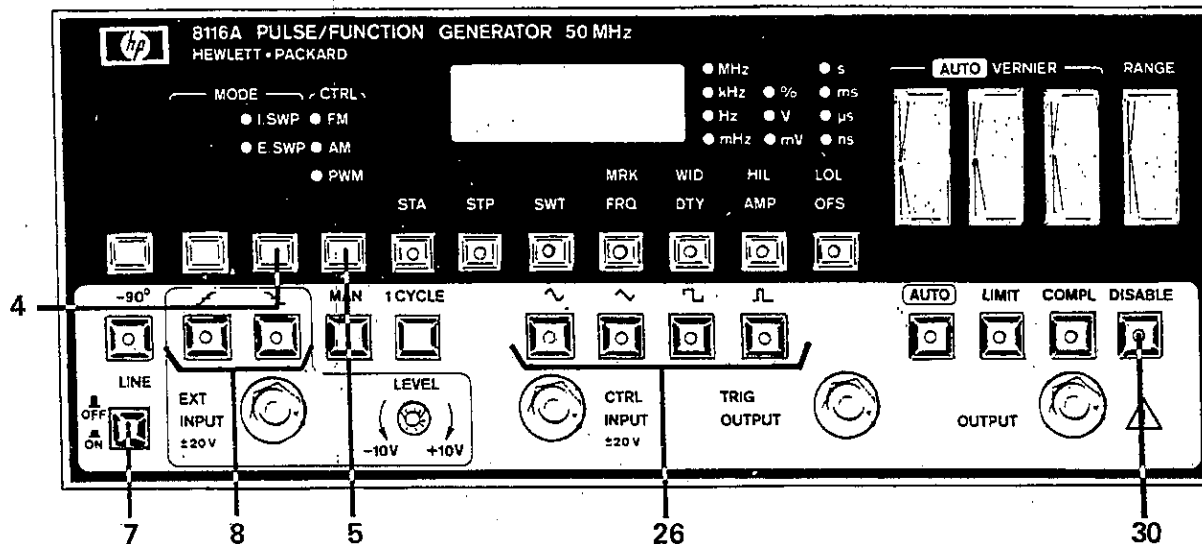

NOTE: For parameter specifications, see Table 1-2.

1. Set the LINE switch (7) to the ON position.
2. Select a sweep mode (Internal or External) via key (4). Repetitive operation of this key steps through the Opt. 001 modes.
3. Select the desired waveform at row (26). The parameter menu will be automatically illuminated in mnemonic form, e.g. AMP for amplitude. The sweep-related parameters (STA, STP, SWT, MRK) are illustrated in the following timing diagrams.
4. Select each parameter, in turn, and set it to the required value using the RANGE/VERNIER keys and the digital display.
5. If triggering via an external signal (E. SWP), select the trigger slope at (8), and apply the trigger signal to the EXT INPUT connector. Triggering can also be simulated by pressing the MAN key. In either case, note the trigger requirements i.e. a 'reset' pulse is required prior to the 'start' pulse if the 8116A is not currently set to the STA frequency.
6. If a modulated output is required, select modulation via key (5) and apply the modulating signal to the CTRL INPUT connector.
7. Press key (30) to enable the 8116A output. The key LED should no longer be illuminated. The following timing diagrams illustrate the 8116A outputs in sweep modes.


- NOTES:**
1. When external sweep is in process ('IP' in display), RANGE/VERNIER keys are disabled (also disabled during period 't₁' in following timing diagrams).
 2. Sweep (I. SWP and E. SWP) can be interrupted by pressing any key other than RANGE/VERNIER/MAN/1 CYCLE keys.

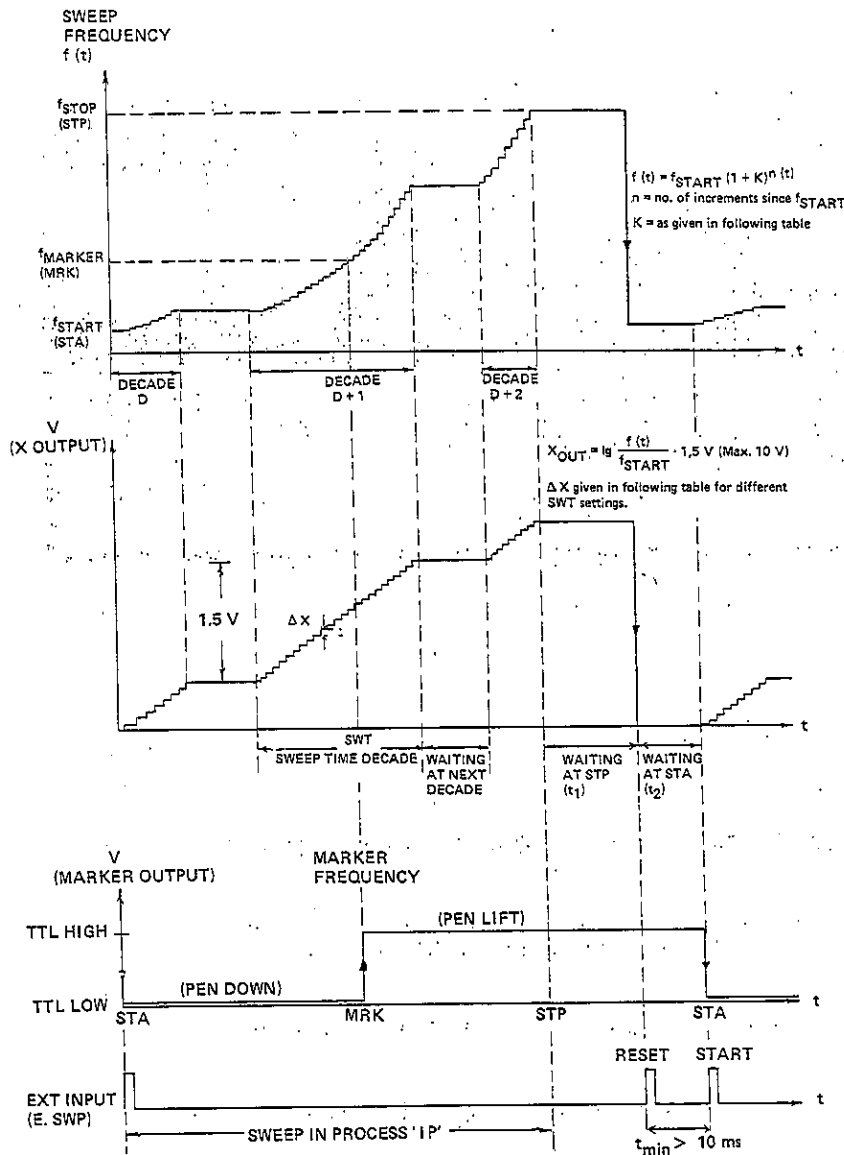

SWT (Sweep time/Decade)	K Factor	DEC (increments/decade)	ΔX (X_{OUT} / increment)
10 ms	0.0625	38	40 mV
20 ms	0.03125	75	20 mV
50 ms	0.015625	149	10 mV
100 ms	0.015625	149	10 mV
200 ms	0.015625	149	10 mV
500 ms	0.015625	149	10 mV
1 s	0.015625	149	10 mV
2 s	0.015625	149	10 mV
5 s	0.015625	149	10 mV
10 s	0.015625	149	10 mV
20 s	0.015625	149	10 mV
50 s	0.015625	149	10 mV
100 s	0.015625	149	10 mV
200 s	0.015625	149	10 mV
500 s	0.015625	149	10 mV

SWT is set in multiples of 1, 2 or 5 via the VERNIER keys, or in decades by the RANGE key.

BURST MODES

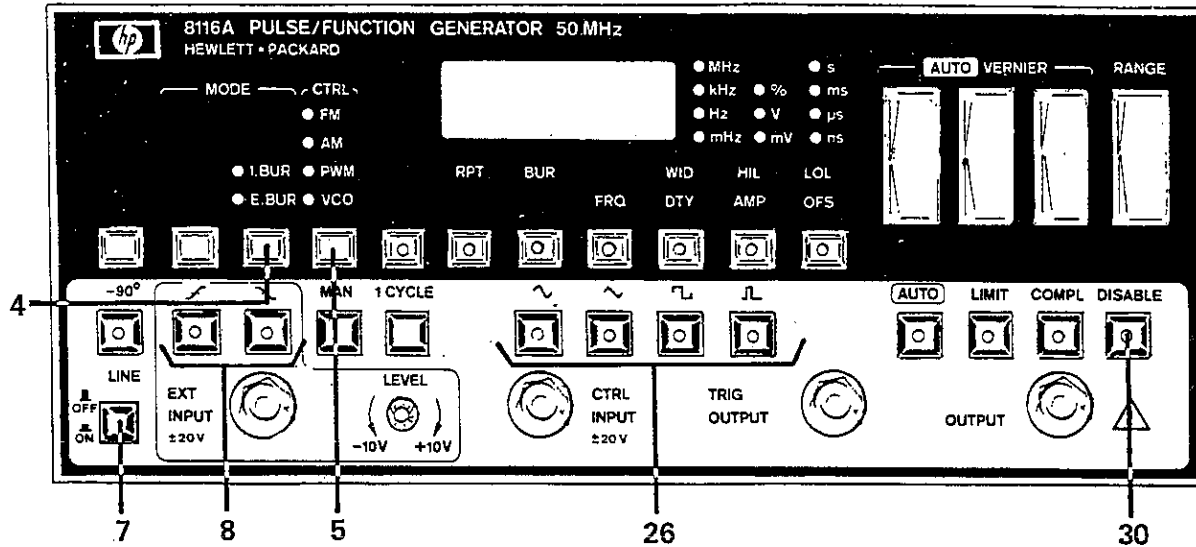

NOTE: For parameter specifications, see Table 1-2.

1. Set the LINE switch (7) to the ON position.
2. Select a burst mode (Internal or External) via key (4). Repetitive operation of this key steps through the Opt. 001 modes.
3. Select the desired waveform at row (26) (Pulse mode not available with I. BUR). The parameter menu will automatically be displayed in mnemonic form. The burst-related parameters (RPT, BUR) are defined in the following timing diagrams.
4. Select each parameter in turn, and set it to the required value using the RANGE/VERNIER keys and the digital display.
5. If triggering via an external signal (E.BUR), select the trigger slope at (8), and apply the trigger signal to the EXT INPUT connector.
6. If a modulated output is required, select modulation via key (5), and apply the modulating signal to the CTRL INPUT connector. See Table 3-1 for burst/control mode combinations.
7. Press key (30) to enable the 8116A output. The key LED should no longer be illuminated. The following timing diagrams illustrate the 8116A output in burst modes.


I. BUR

0° START PHASE

(BUR = 2; DTY = 50 %)

-90° START PHASE

(BUR = 2; DTY = 50 %)

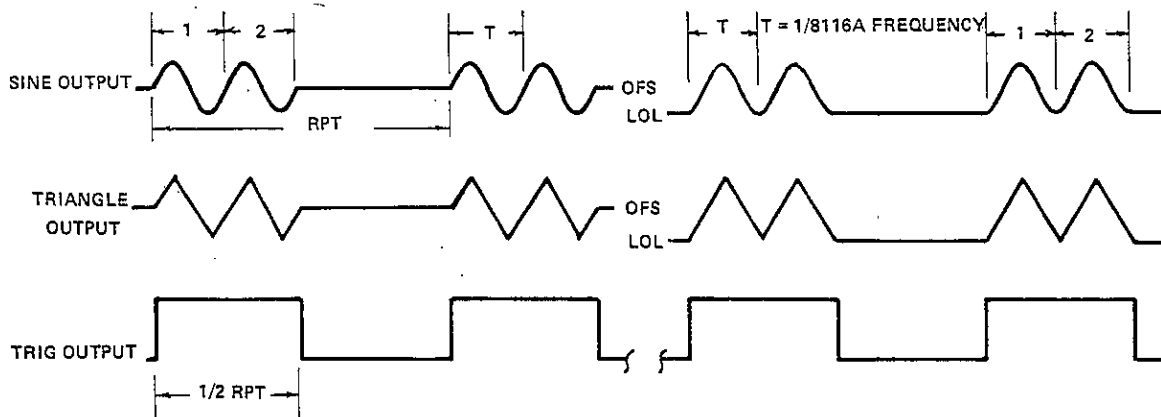


E. BUR

0° START PHASE

(BUR = 2; DTY = 50 %)

-90° START PHASE

(BUR = 2; DTY = 50 %)

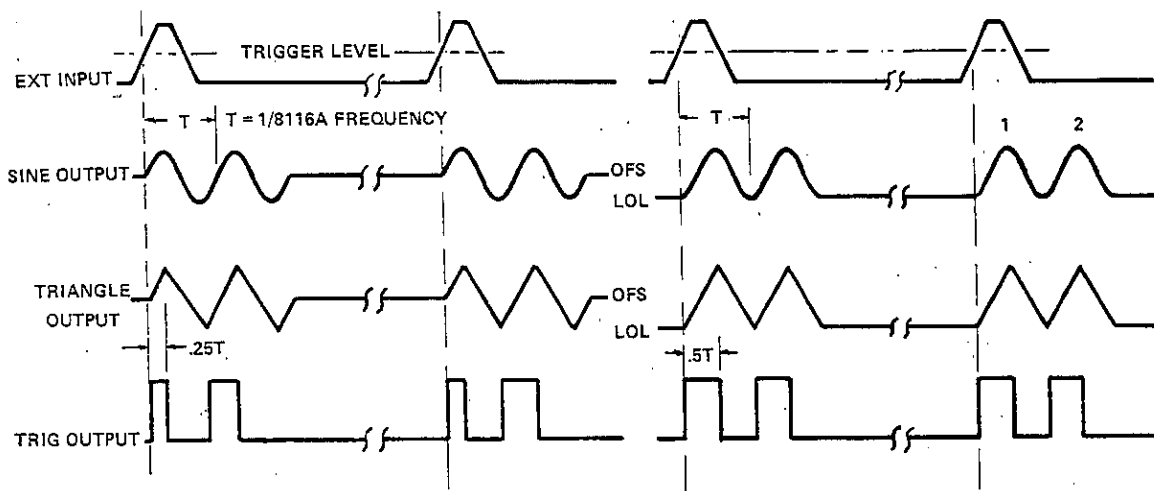

3-50 PROGRAMMING

3-51 General

3-52 The 8116A operates on the HP-IB as follows:

Listens: to messages from the HP-IB system controller. In this state, all modes and parameters, except external trigger LEVEL adjust, are programmable. Also provided are special HP-IB only functions to aid the programmer.

Talks: provides error messages and reports operating parameters.

3-53 As shown in Figure 3-13, the bus lines are as follows (all use negative logic):

8-bit data bus (lines DIO 1 to 8)

handshake lines – DAV (data valid), NRFD (not ready for data), NDAC (data not accepted).

control lines – IFC (interface clear), ATN (attention), SRQ (service request), REN (remote enable), EOI (end or identify).

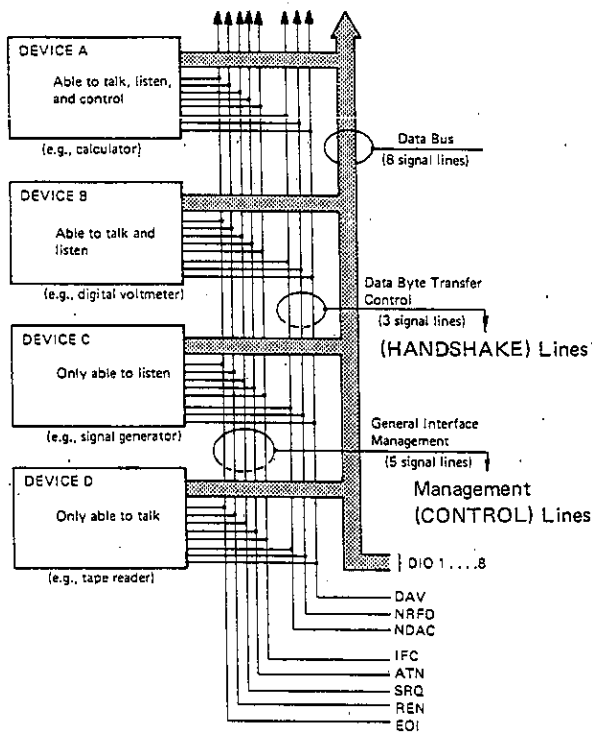


Figure 3-13. Interface Connections + Bus Structure

The 8116A uses all lines on the bus, terminations, logic levels and pinouts being described in Section II. In this manual, bus information will generally be restricted to 8116A specifics. For this reason, handshake lines are not discussed, and control lines are only mentioned in connection with specific 8116A activity. Permissible codes are presented in Table 3-9. For detailed bus information, refer to any of the following publications:

IEEE	Interface Standard 488-1975
ANSI	Interface Standard MC1.1.
HP	Publication 59401-90030
HP	Publication 5952-0058

3-54 Address Assignment

3-55 The 8116A's HP-IB address is determined by an internal storage register. This register is initialised upon power turn-on by reading the address bits A1 through A5 from the HP-IB ADDRESS switch on the rear panel. Note that this switch is factory preset to decimal 16. To change the address, first change the bit settings on the rear panel switch, then press the LCL key to read the new address into the register (alternatively, switch power off and on). Table 3-2 lists all the possible addresses on the bus.

3-56 The current HP-IB address can be checked by pressing the LCL key. The address is then displayed in decimal form.

3-57 Talk and listen addresses are transmitted by the system controller over the data bus with the ATN line true. When an instrument recognizes its address, it will respond accordingly i.e. listen if listen address has been transmitted; talk if talk address has been transmitted. When allocating addresses, make sure no two instruments have the same address. To program an address, set ATN true and arrange that the ASCII character derived from Table 3-2 appears on the bus. For deaddressing, use UNL, UNT commands (or address another device).

IMPORTANT!

Users of instruments with serial numbers 2124G01235 or lower should perform the following check:

Switch 8116A ON, and select E.WID and sine ~.

This combination will give an ERROR condition. Switch the instrument OFF and ON again. Select WID. If the value displayed is 100 μ s; it will be necessary to refer to SECTION 7 – Backdating before proceeding with any programming. If the display reads 500 μ s, proceed with this section.

Table 3-2. Available Addresses (ATN true)

Data bus (DIO lines)						Address in ASCII				
Fixed		Selectable				Talk	Listen			
8	7	5	4	3	2				1	DEC
0	T	0	0	0	0	0	0	@	Space	
0	T	0	0	0	0	1	1	A	!	
0	T	0	0	0	1	0	2	B	"	
0	T	0	0	0	1	1	3	C	#	
0	T	0	0	1	0	0	4	D	\$	
0	T	0	0	1	0	1	5	E	%	
0	T	0	0	1	1	0	6	F	&	
0	T	0	0	1	1	1	7	G	'	
0	T	0	1	0	0	0	8	H	(
0	T	0	1	0	0	1	9	I)	
0	T	0	1	0	1	0	10	J	*	
0	T	0	1	0	1	1	11	K	+	
0	T	0	1	1	0	0	12	L	,	
0	T	0	1	1	0	1	13	M	-	
0	T	0	1	1	1	0	14	N	.	
0	T	0	1	1	1	1	15	O	/	
0	T	1	0	0	0	0	16	P	0	← 8116A set to this address at factory.
0	T	1	0	0	0	1	17	Q	1	
0	T	1	0	0	1	0	18	R	2	
0	T	1	0	0	1	1	19	S	3	
0	T	1	0	1	0	0	20	T	4	
0	T	1	0	1	0	1	21	U	5	← Usually controller address!
0	T	1	0	1	1	0	22	V	6	
0	T	1	0	1	1	1	23	W	7	
0	T	1	1	0	0	0	24	X	8	
0	T	1	1	0	0	1	25	Y	9	
0	T	1	1	0	1	0	26	Z	:	
0	T	1	1	0	1	1	27	[;	
0	T	1	1	1	0	0	28	\	<	
0	T	1	1	1	0	1	29]	=	
0	T	1	1	1	1	0	30	^	>	
0	T	1	1	1	1	1	31	—	?	← Forbidden setting! UNT, UNL commands.

3-58 Remote Operator's Checks

3-59 A quick check of the 8116A's talk/listen functions is provided in Figure 3-14. [Program example assumes the 8116A address is set to the factory value 16].


3-60 Also implemented in the 8116A is a RAM/hardware self-test routine initialized via HP-IB message 'EST' — see Figure 3-15. Tested hardware functions include:

- Repetition rate generator
- Width generator
- Shaper/output amplifier
- Auto vernier

3-61 In the event of fault detection, the 8116A sets bits 4 and 7 (System Failure and Service Request) of its HP-IB Status Byte to '1'. More information on this status byte is given later under 'Error Reporting'.

3-62 Mode and Parameter Settings (Listener Function)

3-63 When the 8116A is in remote and has been listen addressed, it accepts messages which change parameter and/or mode settings. Each mode and parameter-setting message comprises either a number of ASCII data bytes transmitted serially over the data lines with ATN false or an HP-IB Universal Command. The coding for the bytes is given in Table 3-3, which summarizes all mode/parameter-setting messages. Note: The HP-IB program code syntax for parameters is identical to the front panel mnemonics e.g. AMP for amplitude. Reference may be made to Table 3-9 to convert each ASCII byte to a bit pattern on the data bus.

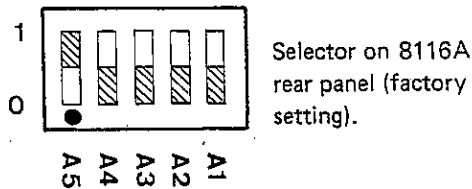

L = 1 for listen address, 0 for talk address
 T = 1 for talk address, 0 for listen address

Figure 3-14. TALK/LISTEN FUNCTION CHECK

Flowchart	HPL Statements (HP 9826 Desktop Computer)	BASIC Statements (HP 85 Desktop Computer)	Visual Indicators
START			
Set REN line true to ensure 8116A is in remote enable state	rem 716	REMOTE 716	RMT LED on
Program 8116A frequency to 1 Hz	wrt 716, "FRQ 1 Hz"	OUTPUT 716; "FRQ 1 Hz"	RMT and ADS LED's on. FRQ key LED on. '1.00 Hz' displayed.
Interrogate 8116A frequency setting	wrt 716, "IFRQ" dim A\$ [12] red 716, A\$	OUTPUT 716; "IFRQ" ENTER 716; A\$	
Print 8116A frequency	prt A\$	PRINT A\$	Printout "FRQ 1.00 Hz"
END			

Figure 3-15. RAM / HARDWARE CHECK

Flowchart	HPL Statement (HP 9826)	BASIC Statement (HP 85)
START		
Set REN line true to ensure 8116A is in remote enable state	rem 716	REMOTE 716
Program 8116A to execute self-test	wrt 716, "EST"	OUTPUT 716; "EST"
Read status of 8116A HP-IB Status Register, and store decimal value of status byte in B	rds (716) → A	A=SPOLL (716)
Decision: B # 1		
no		
yes	IF B (BIT 3); PRT "8116A FAULT"	B=BIT (A, 3) IF BIT = 1 THEN PRINT "8116A FAULT"
CONTINUE		
Print "8116A FAULT"		
END		

3-64 When programming, it is possible to put the instrument into an error condition in the same way as when under local (frontpanel) control.

For example:

current settings: HIL 2.5V, LOL 1.5V
FRQ 10kHz, WID 10 μ s

program settings: LOL 3.0V, FRQ 1MHz

Both of the new program settings will put the instrument into an error condition. However, if BOTH HIL and LOL and/or FRQ and WID values are re-programmed in the same string, e.g.

HIL 3.5V, LOL 3.0V
FRQ 1MHz, WID 100ns

no error will occur. The above is applicable to HIL, LOL, AMP, OFS, FRQ, WID, DTY, STA and STP. In the event of an error occurring, a "Service Request" will be sent to the controller. More information on parameter programming sequence is given under "Error Reporting".

3-65 The 8116A does not necessarily respond to program codes in the order in which they are sent. The 'Universal' messages such as operating and control modes, waveform and trigger slope selections are processed before parameter data. For some applications, the operator will require a parameter to be changed before, say, an operating mode. To achieve this, the CRLF ("") message must be sent immediately after the parameter value, and the operating mode data sent in a separate string. The following examples illustrate this point.

```
10 OUTPUT 716; "T0, HIL 4.00V, LOL -1.00V, M1"
```

In this case, messages T0 and M1 will be processed before the HIL and LOL data.

```
10 OUTPUT 716; "HIL 4.00V, LOL -1.00V"
20 OUTPUT 716; "T0, M1"
```

In this case, HIL and LOL settings will be processed before T0 and M1. Should the operator require a time interval of, say, 550 ms before line 20 is executed, the input to the controller should look like this:

```
10 OUTPUT 716; "HIL 4.00V, LOL -1.00V"
20 WAIT 550
30 OUTPUT 716; "T0, M1"
40 END
```

The End of String message (EOS) must be the ASCII character sequence CRLF or the bus END command (EOI true and ATN false).

3-66 Mode and Parameter Settings (Talker Function)

3-67 The 8116A can send data messages, concerning its mode/parameter settings, when in remote and addressed to talk. The available output modes are:

- Learn String
- Interrogate Function
- Status

Table 3-4 lists the ASCII commands associated with each of these modes.

3-68 The Learn String message ("CST") consists of an 89 (161 for Opt. 001 instruments) character ASCII string representing the 8116A current settings. The order in which data is presented is always the same, the exception to the rule being whether HIL/LOL or OFS/AMP is currently active on the frontpanel. Below are examples to show what the Learn String messages look like.

CST

```
M1,CT0,T1,W1,H0,A0,LO,C0,D1,BUR
001 #, RPT 100 MS, STA 1.00 KHZ
,STP 100 KHZ, SWT 50.0 MS, MRK 1.0
0 KHZ, FRQ 1.00 KHZ, DTY 50 %, WID
100 US, AMP 1.00 V, OFS 100 MV
AMP and OFS active
```

CST

```
M1,CT0,T1,W1,H0,A0,LO,C0,D1,BUR
0001 #, RPT 100 MS, STA 1.00 KHZ
,STP 100 KHZ, SWT 50.0 MS, MRK 1.0
0 KHZ, FRQ 1.00 KHZ, DTY 50 %, WID
100 US, HIL 0.30 V, LOL -0.70 V
HIL and LOL active
```

3-69 The Status Function sends an 8-bit byte in response to a Serial Poll. Bits 5 and 6 of bits 1 through 8 are allocated for current operating conditions:

Bit 5 set to one (16 dec) indicates
"Autovernier in Progress"

Bit 6 set one (32 dec) indicates
"Sweep in Progress"

A more detailed description of the Status Byte is given under 'Error Reporting'.

3-70 In all talker modes, the 8116A terminates its data message with the ASCII character sequence CR/LF.

Table 3-3. Mode / Parameter Messages (listen function)

MESSAGE	MNEMONICS ASCII CODE	ASCII CODE DELIMITERS	SAMPLE STATEMENTS
Operating Modes select NORM select TRIG select GATE select E.WID select I.SWP select E.SWP select I.BUR select E.BUR	M1 M2 M3 M4 M5 M6 } M7 } Opt. M8 } 001		HPL (HP 9826)
Control Modes off select FM select AM select PWM select VCO	CT0 CT1 CT2 CT3 CT4		BASIC (HP 85) OUTPUT 716; wrt 716, "M2, T1, W2" "M2, T1, W2"
Trigger Slope off select positive slope select negative slope	T0 T1 T2		selects trigger mode with triggering on the positive slope of external signal, and triangle output.
Haversine (-90°) off on	H0 H1		
Waveform off (dc) select sine select triangle select square select pulse	W0 W1 W2 W3 W4		
Parameters set frequency set duty cycle set width set amplitude set offset	FRQ DTY WID AMP OFS	MZ = Millihertz HZ = Hertz KHZ = Kilohertz MHZ = Megahertz % NS = Nanoseconds US = Microseconds MS = Milliseconds MV = Millivolts V = Volts MV = Millivolts V = Volts	

Table 3-3. Mode / Parameter Messages (cont'd)

MESSAGE	MNEMONICS ASCII CODE	ASCII CODE DELIMITERS	SAMPLE STATEMENTS	
set high level	HIL	V = Volts	HPL	BASIC
set low level	LOL	V = Volts	wrt 716, "FRQ 1 KHZ, DTY 50 %, BUR 7 #, RPT 100 MS"	OUTPUT 716;"FRQ 1 KHZ, DTY 50 %, BUR 7 #, RPT 100 MS"
			<hr/> sets frequency to 1 kHz, duty cycle to 50 %, burst number to 7 and time between burst 'starts' to 100ms	
set burst number	BUR	#		
set repetition rate for internal burst	RPT	NS = Nanoseconds US = Microseconds MS = Milliseconds		
set sweep start frequency	STA	MZ = Millihertz HZ = Hertz KHZ = Kilohertz MHZ = Megahertz		
set sweep stop frequency	STP	MZ = Millihertz HZ = Hertz KHZ = Kilohertz MHZ = Megahertz	Opt. 001	
set sweep marker frequency	MRK	MZ = Millihertz HZ = Hertz KHZ = Kilohertz MHZ = Megahertz		
set sweep time	SWT	S = Seconds MS = Milliseconds		
Sign				
+	+			
+	-			
Decimal point	.			
Limit				
off	LO			
on	LI			
Complement				
off (normal output)	C0			
on	C1			

Table 3-3. Mode / Parameter Messages (cont'd)

MESSAGE	MNEMONICS ASCII CODE	ASCII CODE DELIMITERS	SAMPLE STATEMENTS	
Disable off (output enabled) on Autovernier mode off on Autovernier start most significant digit up second significant digit up least significant digit up most significant digit down second significant digit down least significant digit down Execute Self-Test	D0 D1 A0 A1 MU SU LU MD SD LD EST		HPL wrt 716, "OFS 120 MV, A1, LU"	BASIC OUTPUT 716; "OFS 120 MV, A1, LU"
			offset is incremented in 1mV steps with offset start value 120 mV	
HP-IB Universal Commands Device Clear (DCL) Selected Device Clear (SDC) Group Execute Trigger (GET)		Loads standard parameter set stored in 8116A ROM's. 8116A does not remain in remote mode e.g. CLEAR 7 Loads standard parameter set stored in 8116A ROM's. 8116A remains in remote mode. When the 8116A is in trigger, external sweep mode, this message initiates a single cycle, burst or sweep respectively.	HPL clr 7 clr 716 trg 716	BASIC CLEAR 7 CLEAR 716 TRIGGER 716

- NOTES:**
1. Lower case letters can replace any or all of the ASCII capitals.
 2. When programming a parameter for which delimiters are given, the parameter string must be terminated with a delimiter e.g. wrt 716, "BUR-17 #".
↑
 3. The Autovernier function **MUST** be enabled **BEFORE** incrementing/decrementing of any digit can be achieved. Without "A1" appearing in the program string the Autovernier digit commands cannot be executed.

Table 3-4. Mode/Parameter Messages (Talker Function)

Message	ASCII Mnemonics	Sample Statements	
Current Parameter Setting	CST	HPL (HP 9826) dim A\$ [89] or [161] wrt 716, "CST" red 716, A\$	BASIC (HP 85) DIM A\$ [89] or [161] OUTPUT 716; "CST" ENTER 716; A\$
Interrogate Parameter	IERR IFRQ IDTY IWID IHIL ILOL IAMP IOFS IBUR IRPT ISTA ISTP IMRK ISWT	dim B\$ [12] wrt 716, "IFRQ" red 716, B\$	DIM B\$ [12] OUTPUT 716; "IFRQ" ENTER 716; B\$
Status Byte (Serial Poll Enable/ Serial Poll Disable)		rds (716) → A	A = SPOLL (716)

3-71 Error Reporting

3-72 In general, whenever a program attempts to put the 8116A into an error condition, the 8116A responds by making a Service request i.e. set SRQ line true. Under these circumstances, the system controller will address the 8116A as talker using a serial poll command (SPE), the 8116A then responding by putting an error message on the data bus. This message consists of a single 8-bit byte in which SRQ bit 7 is set true ('1') and bits 1 to 3 comprise an error code. The contents of this byte are shown in Table 3-5.

3-73 As can be seen from Table 3-5, bits 1 to 3 are each allocated to an error type. i.e. TIMING, PROGRAMMING and SYNTAX. In each case the bit is set to '1' for error indication.

3-74 Should a more detailed description of the error be required (e.g. duty cycle error or width error when TIMING ERROR is indicated by the status byte), this can be done via the 'interrogate error' (IERR) command. Table 3-6 and 3-7 list the 8116A responses to the IERR command for TIMING and PROGRAMMING errors respectively.

3-75 Service Request. Bit 7 of the HP-IB Status Byte is usually set in conjunction with any of bits 1-4

(error indicators). However, in the case of the TIMING ERROR indication (bit 1), the 'Service Request' message can be suppressed via the command "SR1"

e.g. (HPL) wrt 716, "SR1"
(BASIC) OUTPUT 716; "SR1"

Note: In the permanently stored mode/parameter settings in the 8116A's ROM's, 'SR' is set to '0'. Should these settings be called up as current settings, the service request function can be re-activated for timing errors by programming 'SR' to '0'

e.g. (HPL) wrt 716, "SR0"
(BASIC) OUTPUT 716; "SR0"

3-76 In the event of a FRQ or DTY correction error, SRQ will be displayed until the error has been interrogated by SPOLL. If the current data, for example, includes "FRQ 20 MHZ, W4", and new program data includes "DTY 50 %, W3", SRQ will become active until interrogated, at which time it will be withdrawn. Note that the new DTY value is displayed as 50 % in this case. The reason for this is that at 20 MHz, Duty Cycle selection is not available in Pulse mode. Note also that an "IERR" command will NOT clear SRQ in the event of a DTY or FRQ correction error.

Table 3-5. HP-IB Status Byte

HP-IB Status Byte								Sample Statements	
Bit 8 (DIO 8)	Bit 7 (DIO 7)	Bit 6 (DIO 6)	Bit 5 (DIO 5)	Bit 4 (DIO 4)	Bit 3 (DIO 3)	Bit 2 (DIO 2)	Bit 1 (DIO 1)	HPL (HP 9826) rds (716) → A	BASIC (HP 85) A = SPOLL (716)
								"1" = TIMING ERROR (Causes SRQ)	
								"1" = PROGRAMMING ERROR (Causes SRQ)	
								"1" = SYNTAX ERROR (Causes SRQ)	
								Allocated for error detection during self-test routine — see para 3-60. "1" = SYSTEM FAILURE (Causes SRQ)	
								"1" = AUTOVERNIER IN PROCESS (no SRQ)	
								"1" = SWEEP IN PROCESS (no SRQ)	
								"1" = SERVICE REQUEST	
								"1" = BUFFER NOT EMPTY	
e.g. 0 1 0 0 0 1 0 0 (68 decimal) indicates SYNTAX ERROR									

Table 3-6. Timing Error Messages (Response to 'interrogate error' statement 'IERR')

ASCII String	Comments
WAVEFORM ERROR (15 characters)	<ol style="list-style-type: none"> This message is sent when any of the following conditions are not observed: <ol style="list-style-type: none"> In PWM control mode, pulse waveform must be selected. In E:WID mode, pulse waveform must be selected. With E:WID mode and pulse waveform selected, the only permissible control mode is AM. In I.BUR mode, pulse waveform is not allowed. <p>Table 3-1 provides a complete overview of permissible mode/waveform combinations.</p> The 8116A output remains unchanged during the error condition, and front panel LED's blink to indicate the erroneous settings. SRQ cannot be suppressed for this error (see 'Service Request' description).
DUTY C. ERROR (14 characters)	<ol style="list-style-type: none"> This message is sent to indicate 'duty cycle error' when either of the following conditions are not observed: <ol style="list-style-type: none"> In frequency range 1 MHz to 9.99 MHz, duty cycle limits are 20 % to 80 %. For frequencies ≥ 10 MHz, duty cycle must be set to 50 %. The erroneous duty cycle setting is not stored in the 8116A memory, and the output remains unchanged. SRQ cannot be suppressed for this error — see 'Service Request' description.

Table 3-6. Timing Error Messages (cont'd)

WIDTH ERROR (12 characters)	<ol style="list-style-type: none"> 1. This message is sent when the width and frequency settings are incompatible. 2. 8116A hardware detects this error condition which causes the output to change. 3. SRQ can be suppressed for this error via the HP-IB message "SR1". In this case, the first bit of the HP-IB status byte is still set to '1' during error condition. "SR1" is the 8116A's default value.
TIMING ERROR (13 characters) (OPT 001 ONLY)	<ol style="list-style-type: none"> 1. This message is sent in I.BUR mode to indicate timing error when: $\text{BUR} \times 1/\text{FRQ} > \text{RPT}$ where BUR = Burst number FRQ = 8116A frequency setting RPT = Burst repetition time 2. 8116A hardware detects this error condition which causes the output to change. 3. SRQ can be suppressed for this error via the HP-IB message "SR1". In this case, the first bit of the HP-IB status byte is still set to '1' during error condition. "SR1" is the 8116A's default value.
<p>NOTE: The 8116A can output more than one error message in response to a single 'IERR' command. e.g. "WAVEFORM ERROR WIDTH ERROR". When multiple errors are suspected, be sure to dimension enough memory space to accommodate the possible character strings.</p>	

Table 3-7. Programming Error Messages (Response to interrogate error statement 'IERR')

ASCII String	Comments
HANDLING ERROR (15 characters)	<ol style="list-style-type: none"> 1. A handling error occurs when: <ol style="list-style-type: none"> a) User attempts to select Autovernier operation ("A1") when the 8116A is not in NORM ("M1") mode. b) User attempts to exit NORM mode (e.g. program "M2" for TRIG mode) with Autovernier operation selected. The 8116A output changes to correspond to the new mode. c) User attempts to program a parameter value outside the specification limits. e.g. "FRQ 60 MHZ". The 8116A output and display remain unchanged during this error condition. NOTE: Display overflows are NOT indicated.
LEVEL ERROR (12 characters)	<ol style="list-style-type: none"> 1. This message is sent when either of the following conditions are not observed: <ol style="list-style-type: none"> a) For amplitudes ≥ 100 mV, the HIL/LOL voltage window is ± 8.00 V. b) For amplitudes ≤ 100 mV, the HIL/LOL voltage window is ± 800 mV. Error detection is determined via the following formula: $\text{HIL} = \text{OFS} + 1/2 \text{ AMP.}$ $\text{LOL} = \text{OFS} - 1/2 \text{ AMP}$ 2. The 8116A output remains unchanged during the error condition. 3. The programmed level is outside the specification limits. e.g. "HIL 20 V".
LIMIT ERROR (12 characters)	<ol style="list-style-type: none"> 1. Conditions are described for 'LEVEL ERROR' except that the HIL/LOL window is determined by the currently active levels when LIMIT operation is selected.
<p>NOTE: The 8116A can output more than one error message in response to a single 'IERR' command e.g. "HANDLING ERROR LEVEL ERROR". When multiple errors are suspected, be sure to dimension enough memory space to accommodate the possible character strings.</p>	

3-77 Universal HP-IB Commands

3-78 The 8116A will respond to the universal commands listed in Table 3-8, which are sent in the command modes (ATN true).

Table 3-8. HP-IB Universal Commands

Mnemonic	Command	ASCII Code
DCL	Device Clear	DC4
LLO	Local Lockout	DC1
MLA	My Listen Address	(selectable)
MTA	My Talk Address	(selectable)
SPD	Serial Poll Disable	EM
SPE	Serial Poll Enable	CAN
UNL	Unlisten	?
UNT	Untalk	-
GET	Group Execute Trigger	BS
GTL	Go to Local	SOH
SDC	Selected Device Clear	EOT

3-79 Local, Remote and Local Lockout

3-80 **Local Capability.** In local mode, the 8116A can communicate on the bus by sending a Status Byte indicating 'autovernier in process' or 'sweep in process', as well as responding to the Remote Message.

3-81 **Remote Capability.** In remote mode, the 8116A's front panel controls are disabled except the LINE switch, LCL key and LEVEL adjust. When addressed to listen, the 8116A will respond to the following bus messages: Data, Trigger, Clear, Remote, Local, Local Lockout, Clear Lockout/Set Local and Abort. When addressed to talk, the 8116A will send one of the following messages: Data, Require Service, or Status Byte.

3-82 The RMT LED is on when the 8116A is in remote mode. The ADS LED is on when the 8116A is currently addressed to talk or listen. The 8116A front panel digital display shows the value of the last programmed parameter.

3-83 **Local-to-Remote Change.** The 8116A switches to remote upon receipt of the two part Remote Message. The two parts are:

Remote Enable (REN)

Addressed to Listen or Talk (MLS or MTA)

The 8116A's output signal and all control settings remain unchanged with the local-to-remote transition.

3-84 **Remote-to-Local Change.** The 8116A returns to local control upon receipt of the Local or Clear Lockout/Set Local message. It can also be set to local by pressing the front panel LCL key (assuming that local lockout is not in effect). The output signal and all control settings remain unchanged with the remote-to-local transition.

3-84 **Local Lockout.** When a data transmission is interrupted, which can happen by returning the 8116A to local with the front panel LCL key, the data could be lost. This would leave the 8116A in an unknown state. To prevent this, a local lockout is recommended to disable the LCL key. Local lockout remains in effect until the 8116A is returned to the local state by either turning the LINE switch off/on or by programming the Local Message.

Table 3-9. Code Assignments (ASCII) for the 8116A

APPLIES ONLY IN COMMAND MODE (ATN TRUE)
 THESE CHARACTERS CAUSE SRQ
 THESE CHARACTERS ARE IGNORED (ATN FALSE)

DATA MODE
(ATN FALSE)

SAME INTERPRETATION
SAME INTERPRETATION

HP-IB DATA LINES				7	6	5	4	3	2	1	0	0	0	0	0	1	1	1	1	
				0	0	0	0	0	0	0	0	0	0	0	1	1	1	1		
				0	0	1	1	1	1	1	1	0	0	0	0	0	0	0		
4	3	2	1	0																
0	0	0	0	0	NUL									SP	0		P		p	
0	0	0	1	1	SOH	GTL											A	Q	a	q
0	0	1	0	2	STX												B	R	b	r
0	0	1	1	3	ETX									#	2		C	S	c	s
0	1	0	0	4	END	SDC											D	T	d	t
0	1	0	1	5	ENC									%	3		E	U	e	u
0	1	1	0	6	ACK												F	V	f	v
0	1	1	1	7	BEL													W		w
1	0	0	0	8	BS	GEL											H		h	
1	0	0	1	9	HT													Y		y
1	0	1	0	10	LF													Z		z
1	0	1	1	11	VT									+	4		K		k	
1	1	0	0	12	FF												L		l	
1	1	0	1	13	CR									-	5		M		m	
1	1	1	0	14	SO									.	6		N		n	
1	1	1	1	15	SI												O		o	

