



# SONET User Guide



*OmniBER 725*



**Agilent Technologies**

---

Copyright © 2000 Agilent Technologies Limited.

All rights reserved. Reproduction, adaption, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

Agilent Part No. J1409-90003

Printed in U.K. November 2000.

## Warranty

The information contained in this document is subject to change without notice.

*Agilent Technologies makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties or merchantability and fitness for a particular purpose.*


Agilent Technologies shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

## WARNING

Warning Symbols Used on the Product



The product is marked with this symbol when the user should refer to the instruction manual in order to protect the apparatus against damage.



The product is marked with this symbol to indicate that hazardous voltages are present



EN 60825 1991

The product is marked with this symbol to indicate that a laser is fitted. The user should refer to the laser safety information in the Verification Manual.

---

# OmniBER 725 User Guide

---

# About This Book

This book tells you how to select the features that you want to use for your test.

The selections available are presented in the following groups:

- Connecting to a device for testing
- Transmit and receive interfaces
- Test features, for example, the addition of errors and alarms to the test signal
- Measurements including test timing
- Jitter selection and measurement (J1409A only)
- Storing, logging and printing results with general printer information
- Using instrument and disk storage
- Using the “Other” features.

The selections available will depend on the options fitted to your instrument. The examples given in this book cover all options and therefore may include selections which are not available on your instrument.

## Introduction

Product Description .....	10
Conventions .....	11
Cleaning Optical Connectors .....	12
Connecting Accessories .....	13
OmniBER 725 Options .....	14

## Connecting to a Device for Testing

Connecting to the Module Under Test.....	16
Optical Interface Connectors .....	17
Front Panel Soft Recovery (Cold Start) .....	19

## Setting the Interfaces

Selecting Framed/Unframed Operation .....	22
Setting SONET Transmit Interface.....	24
Setting SONET Receive Interface .....	29
Selecting Unframed SONET Transmit Interface .....	30
Selecting Unframed SONET Receive Interface .....	31
Setting SONET THRU Mode .....	32
Using Smart Test .....	35

## Selecting Test Features

Using Transmit Overhead Setup.....	40
------------------------------------	----

Using Receive Overhead Monitor .....	42
Setting Overhead Trace Messages .....	44
Setting Overhead Labels .....	45
Generating Overhead Sequences .....	46
Using Receive Overhead Capture .....	48
Adding Frequency Offset to SONET Signal .....	50
Adding Frequency Offset to the Unframed SONET Signal .....	51
Adding Errors and Alarms ..... at the SONET Interface	52
Adding Errors and Alarms at the Unframed SONET Interface .....	53
Adding Pointer Adjustments .....	54
Using Pointer Graph Test Function .....	62
Stressing Optical Clock Recovery Circuits .....	64
Generating Automatic Protection Switch Messages .....	66
Inserting and Dropping the Data Communications Channel .....	67

## **Making Measurements**

Using Overhead BER Test Function .....	70
Performing a Trouble Scan .....	71
Test Timing .....	73
Making SONET Analysis Measurements .....	74
Measuring Frequency .....	75
Measuring Optical Power .....	76
Performing a SONET Tributary Scan .....	77
Performing an SONET Alarm Scan .....	80
Monitoring Errors and Alarms in an Unframed SDH Signal .....	81

## **Jitter Operation (J1409A only)**

Setting Jitter Transmit Interface .....	84
Setting Jitter Receive Interface .....	86
Measuring Jitter .....	87
Setting Extended Jitter Receive Interface .....	89
Measuring Extended Jitter .....	90
Setting Wander Transmit Interface .....	92
Setting Wander Receive Interface .....	93
Measuring Wander .....	94
Measuring Jitter Tolerance .....	96
Measuring Jitter Transfer .....	99
Generating a New Jitter Mask .....	108
Changing the Parameters of a User-defined Jitter Mask .....	110

## **Storing, Logging and Printing**

Saving Graphics Results to Instrument Store .....	114
Recalling Stored Graph Results .....	115
Viewing the Bar Graph Display .....	117
Viewing the Graphic Error and Alarm Summaries .....	119
Logging Graph Displays .....	121
Logging Results .....	123
Logging on Demand .....	126
Logging Jitter Tolerance Results .....	128
Logging Jitter Transfer Results .....	130
Logging Results to Parallel (Centronics) Printer .....	132
Logging Results to GPIB Printer .....	133
Logging Results to Internal Printer .....	134
Logging Results to RS-232-C Printer .....	135

Logging Data to Disk.....	136
Printing Results from Disk .....	137
Connecting a Printer to a Parallel Port .....	138
Changing Internal Printer Paper.....	139
Cleaning Internal Printer Print Head.....	142

## **Using Instrument and Disk Storage**

Storing Configurations in Instrument Store.....	144
Titling Configuration in Instrument Store .....	145
Recalling Configurations from Instrument Store.....	146
Formatting a Disk .....	147
Labeling a Disk.....	148
Accessing Directories and Selecting Files .....	149
Storing/Retrieving Data to/from Disk.....	151
Saving Graphical Results to Disk .....	152
Recalling Graphics Results from Disk.....	154
Copying Graphics Results from Instrument Store to Disk .....	155
Saving Configurations to Disk.....	157
Recalling Configuration from Disk .....	158
Copying Configuration from Instrument Store to Disk .....	159
Copying Configuration from Disk to Instrument Store .....	161
Managing Files and Directories on Disk .....	163

## **Selecting and Using "Other" Features**

Coupling Transmit and Receive Settings.....	170
Setting Time & Date .....	171



Enabling Keyboard Lock .....	172
Enabling Beep on Received Error .....	173
Suspending Test on Signal Loss .....	174
REI-L Result/Enable .....	175
Graph Storage Resolution .....	176
Setting Error Threshold Indication .....	177
Setting Screen Brightness and Color .....	178
Dumping Display to Disk .....	179
Running Self Test .....	181
STS-1 SPE Background Patterns .....	185
ETSI/ANSI Terminology .....	187
ETSI/ANSI Conversion and Equivalent Terms .....	188
Glossary of Terms .....	191



"Product Description " page 10

"Conventions " page 11

"Cleaning Optical Connectors " page 12

"Connecting Accessories " page 13

"OmniBER 725 Options " page 14

---

## **Introduction**

## **Product Description**

OmniBER Communications Performance Analyzers provide all the test capability you need to fully verify the performance of today's high-capacity transmission systems and networks.



The main features of this instrument are:

- Multi-rate transmission testing to OC-48.
- Framed or unframed generation and measurement.
- Binary inputs and outputs available
- Concatenated payloads testing to OC-48c.
- Powerful thru-mode testing for SONET ring turn-up.
- Comprehensive SDH/SONET overhead testing.
- Fast access to key measurement tasks via Agilent Smart Test capability.

---

## Conventions

The conventions used in this manual to illustrate instrument keys and display information are as follows:

### **TRANSMIT**


This is an example of a hardkey. Hardkeys (located to the right of the display) are used to give access to different sets of instrument settings, or select dedicated instrument functions. The key shown here displays the transmit settings.

### **PARALLEL**

This is an example of a softkey. Softkeys (located below the display) are used to select instrument settings. The values associated with softkeys change as you move the display cursor from one instrument setting to another.



These are the cursor control keys. They are used to move the display cursor from one instrument setting to another.

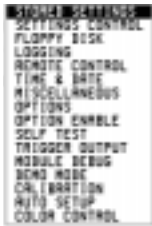

This is an example of a pop-up menu. Pop-up menus are an alternative way of selecting instruments settings (instead of using softkeys). To access a pop-up menu, highlight an instrument setting, then use the **SET** key.



This symbol (when it appears next to settings on the display) indicates that there is a pop-up application associated with the instrument setting. To access a pop-up application, highlight the instrument setting which has this symbol, then use the **SET** key.



This symbol appears at the bottom right of the display when an optical transmit module is fitted to the instrument. The symbol's background changes from black to yellow when the optical output goes active.

## Cleaning Optical Connectors

It is recommended that the optical connectors be cleaned at regular intervals using the following materials:

Description	Part Number
Blow Brush	9300-1131
Isopropyl Alcohol	8500-5344
Lens Cleaning Paper	9300-0761
Adhesive Tape Kit	15475-68701

---

**CAUTION**

---

Do not insert any tool or object into the IN or OUT ports of the instrument as damage to or contamination of the optical fibre may result.

- 1 Recall Default settings (STORED SETTINGS 0) and remove the power from the OmniBER 725.
- 2 Remove the adapters from the IN and OUT ports. Use an 11 mm spanner to slacken the nut securing the adapter. On re-assembly tighten the nut using a torque spanner to 1.5 Nm.
- 3 Using the blow brush with the brush removed blow through the ferrule of the standard flexible connector and the adapter.

---

**CAUTION**

---

If the optical fibre of the fixed connector requires further cleaning this entails disassembly of the module which should only be carried out by suitably trained service personnel.

- 4 Apply some isopropyl alcohol to a piece of the cleaning paper and clean the barrel of the adapter. Using a new piece of cleaning paper, clean the face of the adapter. Repeat this operation, using a new piece of cleaning paper each time.
- 5 Lightly press the adhesive side of the tape provided against the front of the adapter, then remove it quickly - repeat twice. This removes any particles of cleaning paper which may be present.
- 6 Replace the adapters on the flexible connector.

## **Connecting Accessories**

**LID** Provides the output for the option 602 printer which is fitted in the cover (LID) of the instrument.

**VGA** Provides the output for a display monitor.

**HANDSET** Allows connection of a telephone handset for communication across the network.

**Printer** External printer connection details are given on page 138.  
**GPIB , RS232,** The port selected for external printer use is not available for remote control.  
**PARALLEL ONLY**

**Remote Control** Remote control connection is given in the Remote Control Manual.  
**GPIB, RS232,** The port selected for remote control use is not available for an external printer.  
**10 BASE -T**

### **10 Base-T Lan Connection Radiated Emissions**

To ensure compliance with EN 55011 (1991) a category 5, FTP patch lead, RJ45 cable should be used to connect the LAN port on the processor module marked "10 Base-T".

## **OmniBER 725 Options**

This section explains the features offered with each instrument and its associated options.

<b>Description</b>	<b>Product/Option</b>
OmniBER 725 communications performance analyzer mainframe with provision for framed/unframed operation and with binary input/output capability.	J1408A
As above with jitter generation and measurement capability.	J1409A
OC-48/12/3/1 and STM-16/4/1/0 transmit and receive 1310 nm optical interfaces	104
OC-48/12/3/1 and STM-16/4/1/0 transmit and receive 1550 nm optical interfaces	105
OC-48/12/3/1 and STM-16/4/1/0 transmit and receive 1310 nm and 1550 nm optical interfaces	106
SDH only	001
SDH/SONET dual standard	002
LAN, GPIB and RS-232 remote control	601
In-lid printer	602
SC connectors	610
ST connectors	611



"Connecting to the Module Under Test " page 16

"Optical Interface Connectors " page 17

"Front Panel Soft Recovery (Cold Start) " page 19

---

## **Connecting to a Device for Testing**

---

## Connecting to the Module Under Test


The connectors are located on the side of the instrument. The connections available depend on the options fitted to your instrument.

Before connecting, note the Warning and Caution information given.

### All Connectors

---

#### CAUTION

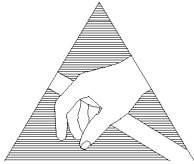

When connecting or disconnecting, ensure that you are grounded or, make contact with the metal surface of the Mainframe with your free hand to bring you, the module, and the mainframe to the same static potential.

Modules remain susceptible to ESD damage while the module is installed in the Mainframe

Additional ESD information is required when servicing, see your Installation/ Verification manual for further information.

The OmniBER 725 has Binary clock and data input and output ports. These ports provide/accept electrical binary signals equivalent to the electrical and optical coded inputs and outputs. The binary input level range is 200 mV to 1.2 V and the output levels are within the range 600 mV to 800 mV.

---

#### CAUTION

The Binary Interface Terminators supplied should be fitted to the binary connectors when the connectors are not in use.

J1409A instruments have jitter capability. The jitter generation and measurement module has provision for the connection of an external jitter source.

Before using the optical connectors the following section of this manual "Optical Interface Connectors " page 17 should be reviewed.

## Optical Interface Connectors

For your protection, review all laser information given in this manual and the Verification manual before installing or using the instrument.

---

### WARNING

---

**Ensure the information given below is reviewed before operating the module.  
To prevent personal injury.  
To avoid use that may be hazardous to others.  
To maintain the module in a safe condition.**

#### Laser Product Classification

All optical modules are classified as Class I (non-hazardous) laser product in the USA which complies with the United States Food and Drug Administration (FDA) Standard 21 CFR Ch.1 1040.10, and are classified as Class 1 (non-hazardous) laser products in Europe which complies with EN 60825-1 (1994).

To avoid hazardous exposure to laser radiation, it is recommended that the following practices are observed during system operation:

- **ALWAYS DEACTIVATE THE LASER BEFORE CONNECTING OR DISCONNECTING OPTICAL CABLES.**
- When connecting or disconnecting optical cables between the module and device-under-test, observe the connection sequences given below.
  - Connecting:** Connect the optical cable to the input of the device-under-test **before** connecting to the module's *Optical Out* connector.
  - Disconnecting:** Disconnect the optical cable from the module's *Optical Out* connector **before** disconnecting from the device-under-test. Always fit the fibre optic connector dust caps over the laser aperture.
- NEVER examine or stare into the open end of a broken, severed, or disconnected optical cable when it is connected to the module's *Optical Out* connector.
- Arrange for service-trained personnel, who are aware of the hazards involved, to repair optical cables.

## Getting Started

### Optical Interface Connectors

---

#### CAUTION

1. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
  2. Always fit the fibre optic connector dust caps on each connector when not in use. Before connection is made, *always* clean the connector ferrule tip with acetone or alcohol and a cotton swab. Dry the connector with compressed air. Failure to maintain cleanliness of connectors is liable to cause excessive insertion loss.
- 

#### Laser Warning Symbols

The front panel of the optical module has the following label:

#### **CLASS 1 LASER PRODUCT**

---

#### NOTE

CLASS 1 LASER PRODUCT translates as follows:

Finnish - LUOKAN 1 LASERLAITE

Finnish/Swedish - KLAS 1 LASER APPARAT

---

This label indicates that the radiant energy present in this instrument is non-hazardous.

#### **OPTICAL IN**

Allows connection of an optical signal, wavelength 1200 to 1600 nm, at a maximum power level of -8 dBm (OmniBER 725 2.5 Gb/s).

**NEVER EXCEED +3 dBm.**

Accepts STM-0, STM-1 and STM-4. Also accepts SONET signals OC-1, OC-3, OC-12, and OC-48 depending on the model and options fitted.

#### **OPTICAL OUT**

Provides an STM-0, STM-1, STM-4 or STM-16 optical signal (OC-1, OC-3, OC-12 or OC-48 SONET signals) at wavelength 1280 to 1335nm, and/or 1480 to 1580 nm, at a nominal power level of +1 dBm depending on model and options.

---

## **Front Panel Soft Recovery (Cold Start)**

Use the following procedure if you need to perform a front panel soft recovery (i.e. cold start) of the instrument. This procedure will return the instrument to the default settings.

### **Soft Recovery Procedure**

- 1** Switch off the instrument.
- 2** On the instrument front panel - press and hold softkeys 0 and 4 simultaneously (the softkeys immediately below the display; key 0 is on the extreme left).
- 3** Power up the OmniBER 725 while holding the softkeys pressed.
- 4** When the LOS LED has flashed OFF and then ON again, the keys can be released.
- 5** The LOS LED will flash OFF/ON again several times (7), followed by an audible 'beep' and the display indicating 'Initializing Instrument'.
- 6** When the initiations is complete the display will indicate:  
'Firmware Revision Update'  
'Default settings assumed'  
Hit any key to attempt restart'
- 7** Hit any key, then wait approximately 10 seconds. The instrument should return to its default settings and normal operation.

Getting Started

**Front Panel Soft Recovery (Cold Start)**

- "Selecting Framed/Unframed Operation " page 22
- "Setting SONET Transmit Interface" page 24
- "Setting SONET Receive Interface" page 29
- "Selecting Unframed SONET Transmit Interface " page 30
- "Selecting Unframed SONET Receive Interface " page 31
- "Setting SONET THRU Mode" page 32
- "Using Smart Test" page 35

---

## Setting the Interfaces

This chapter tells you how to set the instrument interfaces to match the network being tested.

---

# Setting the Interfaces

---

## Selecting Framed/Unframed Operation

### Laser On/Off selection (see display below)

Always switch off the laser before connecting or disconnecting optical cables.

When the laser is on the laser symbol at the bottom right of the display is illuminated (yellow).



### TIP:

If you wish to set the OmniBER 725 transmitter and receiver to the same interface settings choose **(OTHER) SETTINGS CONTROL COUPLED**.



## Setting the Interfaces

### Selecting Framed/Unframed Operation



#### **HOW TO:**

- 1 Make your choice of transmit operating mode by pressing **TRANSMIT** and selecting **SONET** or **UNFRAMED SONET**.
- 2 If you are setting the Receive operation independently, make your choice of the receiver operating mode by pressing **RECEIVE** and selecting **SONET** or **UNFRAMED SONET**.
- 3 If you selected Framed SONET, set the Transmit and Receive interfaces as "Setting SONET Transmit Interface " page 24 and "Setting SONET Receive Interface " page 29.
- 4 If you selected Unframed SONET, see "Selecting Unframed SONET Transmit Interface " page 30 and "Selecting Unframed SONET Receive Interface " page 31.

---

#### **NOTE**

For analysis results it is necessary to select framed operation

## Setting SONET Transmit Interface

### Payload Selection

One of the key features of the OmniBER 725 is the ability to test concatenated payloads. The following gives a brief description of concatenated payloads, and the benefits of using them.

### Concatenated Payloads

Bulk filled or contiguous payload structures eg. (STS-48c) are designed to carry broadband services. The entire payload area is used to carry the service with no structured mapping or channelization.

In the case of a concatenated STS-48 (denoted STS-48c), the virtual container area is entirely filled by a single STS-48c SPE. This STS-48c SPE consists one Path Overhead and a single container capable of carrying a tributary signal operating at rates up to approximately 2.4 Gb/s. Once assembled a STS-48c SPE is multiplexed, switched and transported through the network as a single entity.

**Benefits:** Test the entire bandwidth in one go, and reduce test times. The following table illustrates the reduced test times using concatenated payloads.

	Test Time (based on 100 errors)	
Performance test limit	STS-48c SPE payload	STS-3c SPE payload
$10^{-14}$	48 days	>2 years
$10^{-13}$	4.8 days	77 days
$10^{-12}$	11.6 hours	7.7 days
$10^{-11}$	1.2 hour	18.5 hour
$10^{-10}$	7 minutes	1.9 hours

## Setting the Interfaces

### Setting SONET Transmit Interface

#### *Description*

SONET transmit interface settings should match the network equipment settings of Rate, Wavelength and Mapping. Determine the payload to be tested and set background conditions to prevent alarms while testing.

#### *TIP:*

If you wish to set the OmniBER 725 transmitter and receiver to the same interface settings choose **OTHER** **SETTINGS CONTROL** **COUPLED**

#### **Laser On/Off selection (see display below)**

Always switch off the laser before connecting or disconnecting optical cables.

When the laser is on the laser symbol at the bottom right of the display is illuminated (yellow).




#### *HOW TO:*

- 1 Make your choice of SIGNAL rate.  
If Option 106, Dual Wavelength optical module, is fitted and an optical rate is chosen, choose the required wavelength (1550 or 1310).  
If STS-1 is chosen, choose the required interface level.  
Choose **INTERNAL** unless **THRU MODE** is required. If **THRU MODE** is chosen, see "Setting SONET THRU Mode " page 32.

## Setting the Interfaces

### Setting SONET Transmit Interface

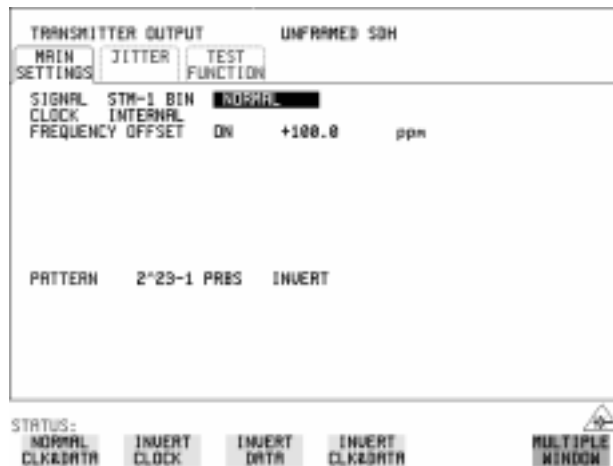


- 2 If a binary signal has been chosen, choose the clock and data polarity **NORMAL CLOCK & DATA** **INVERT CLOCK** **INVERT DATA** **INVERT CLOCK & DATA**.
- 3 Make your choice of CLOCK synchronization source. The clock can be internally recovered from the instrument, recovered from the signal at the optical RECEIVE port or externally recovered from the CLOCK REF IN PORT (MTS, BITS or 10MHz REF).
- 4 If required choose the FREQUENCY OFFSET value. See “Adding Frequency Offset to SONET Signal” page 50.
- 5 Choose the required **F/G MAPPING** and PAYLOAD, then **B/G MAPPING** and BACKGROUND selection. The FOREGROUND selection is the tributary (TU for SONET and VT for SONET) that is chosen for test purposes. The BACKGROUND patterns are not used for test purposes and are either user programmable or set to a fixed value.

Mapping may be selected from a pictorial display by moving the cursor to MAPPING and pressing **SET**.

## Setting the Interfaces

### Setting SONET Transmit Interface

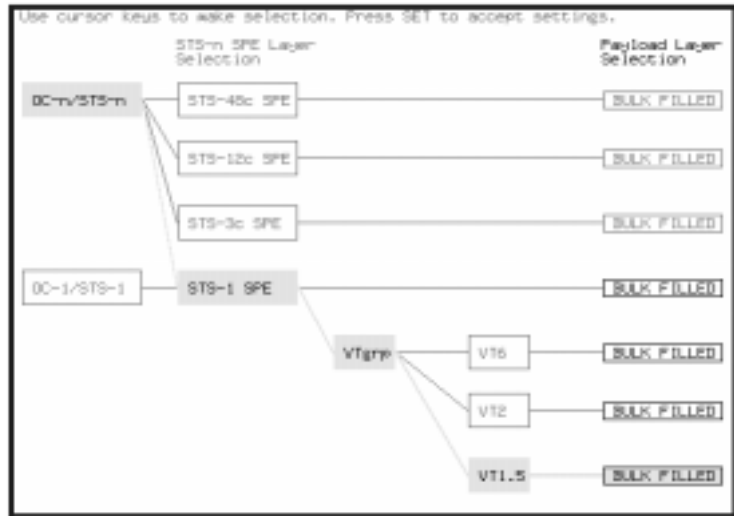

Use **→** and **←** to move between STS Layer choice, VT Layer choice and Payload Layer choice. Use **↑** and **↓** to choose the mapping.

Use **SET** to confirm your choice and return to the **SONET MAIN SETTINGS** display.

- 6 If VT-6 mapping is chosen, VT CONCATENATION selection is enabled, choose **OFF** or the tributary at which the concatenation begins, VT6-2C through VT6-6C.

The BACKGROUND, PATTERN IN OTHER VT-6s is fixed at NUMBERED, that is, each VT-6 contains a unique number to allow identification in case of routing problems.

- 7 If FULL SPE, VT-6, VT-2 or VT-1.5 mapping is chosen, choose the test tributary CHANNEL, including the STS-3 for an OC-12/OC-48 signal.
- 8 Choose the PATTERN type and PRBS polarity.

## Setting the Interfaces

### Setting SONET Transmit Interface

TRANSMITTER OUTPUT		SONET	
MAIN SETTINGS	JITTER	TEST FUNCTION	OVERHEAD SETUP
SIGNAL	DC-12	1310	<input checked="" type="checkbox"/> INTERNAL
CLOCK	INTERNAL		
FREQUENCY OFFSET	DN	+800.0	ppm
MAPPING	<input checked="" type="checkbox"/> STS-1		BACKGROUND UT1.5 BULK FILLED
CHANNEL	STS-3 1	STS-1 1	UTRP 1
PATTERN	2*15-1 PRBS	INVERT	ITU

STATUS:  
 LASER OFF     LASER ON

MULTIPLE WINDOW

- 9 Choose the mapping required in the background (non-test) STS's. Refer to Appendix A for a table of background patterns for STS-1 SPE.
- 10 If VT mapping is chosen for the test STS, choose the PATTERN IN OTHER VT's.

## Setting the Interfaces

### Setting SONET Receive Interface

---

## Setting SONET Receive Interface

### *Description*

SONET Receive interface settings should match the equipment settings of Rate and Mapping, and determines the payload to be tested.

### *TIP:*

If you wish to set the OmniBER 725 transmitter and receiver to the same interface settings, choose **OTHER** **SETTINGS CONTROL** **COUPLED**.



### *HOW TO:*

- 1 Choose the required SIGNAL source either electrical or optical. If STS-1 or STS-3 is chosen, choose the required LEVEL. If the LEVEL chosen is **MONITOR** choose the required GAIN.
- 2 If a binary signal has been chosen, choose the clock and data polarity **NORMAL CLOCK & DATA** **INVERT CLOCK** **INVERT DATA** **INVERT CLOCK & DATA**.
- 3 Choose mapping and type of payload.
- 4 If VT-6 mapping is chosen, and CONCATENATION is enabled, choose the tributary at which the concatenation begins. If VT-6, VT-2 or VT-1.5 mapping is chosen, choose the test tributary under CHANNEL.
- 5 Choose the PATTERN type and PRBS polarity.

## Setting the Interfaces

### Selecting Unframed SONET Transmit Interface

---

## Selecting Unframed SONET Transmit Interface

### *Description*

Unframed SONET transmit interface settings should match the equipment settings of Rate and Wavelength and determines the pattern to be tested.

### **Laser On/Off selection**

Always switch off the laser before connecting or disconnecting optical cables.



### **HOW TO:**

- 1 Make your choice of SIGNAL rate.  
If Option 106, Dual Wavelength optical module, is fitted and an optical rate is chosen, choose the required wavelength (1550 or 1310).  
If STS-1 is chosen, choose the required interface level.  
Choose **INTERNAL** unless **THRU MODE** is required. If **THRU MODE** is required, see "Setting SONET THRU Mode " page 32.



---

## Selecting Unframed SONET Receive Interface

*Description*

SONET Receive interface settings should match the equipment settings of Rate and Mapping, and determines the payload to be tested.

*TIP:*

If you wish to set the OmniBER 725 transmitter and receiver to the same interface settings, choose **OTHER** **SETTINGS CONTROL** **COUPLED**



*HOW TO:*

- 1 Choose the required SIGNAL source either electrical or optical.  
If STS-1 or STS-3 is chosen, choose the required LEVEL.  
If the LEVEL chosen is **MONITOR** choose the required GAIN.
- 2 If a binary signal has been chosen, choose the clock and data polarity  
**NORMAL CLOCK & DATA** **INVERT CLOCK** **INVERT DATA**  
**INVERT CLOCK & DATA**.
- 3 Choose the PATTERN type and PRBS polarity.

## Setting the Interfaces

### Setting SONET THRU Mode

---

## Setting SONET THRU Mode

### Description

THRU mode is used to monitor SONET lines where no protected monitor points are available without disturbing line traffic. To enable THRU mode select the **TRANSMIT MAIN SETTINGS** page. Select SIGNAL RATE before selecting THRU mode.

The entire frame can be errored at a user defined rate if PAYLOAD OVERWRITE and TOH+POH CHANNEL OVERWRITE are both set to **OFF**. If either overwrite is enabled the ENTIRE FRAME ERROR RATE function is disabled.

There are nominally three modes of operation as follows:

**1. Transparent mode:** This is the case when the PAYLOAD OVERWRITE field is set to OFF. The received signal is passed through the transmitter completely unchanged. The figure below illustrates the settings for this mode.



### 2. Hitless THRU Mode:

This mode enables you to change the channel under test and the payload mapping without causing errors in the line signal or any other payload channel, or having to switch out of THRU mode. When you select a Payload Overwrite choice (other than OFF) an additional field is displayed which allows you to enable/disable Payload Overwrite. If Payload Overwrite is disabled the instrument remains transmitting while you select another channel/tributary (see figure on next page). In this mode any Section or Line CV errors are recalculated before transmission.

## Setting the Interfaces

### Setting SONET THRU Mode

**3. Payload Overwrite:** In this mode you can overwrite the payload as explained in the following text. Any Path CV errors are recalculated before transmission. Use the **HOW TO** procedure below to setup your instrument for THRU Mode operation.

#### OC-1/STS-1, OC-3/STS-3

You can substitute a new payload, Section and Line Overhead (TOH) and Path overhead (POH) in the received OC-1/STS-1 or OC-3/STS-3 signal for testing.

#### OC-12, OC-48

The overhead and payload may be overwritten for STS-3c SPE and STS-1. PAYLOAD OVERWRITE is not available for STS-12C or STS-48C. TOH+POH CHANNEL overwrite is available for STS-12C and STS-48C.



#### **HOW TO:**

- 1 Make the required SIGNAL RATE choice, and select THRU MODE on the SONET **TRANSMIT** display, See "Setting SONET Transmit Interface " page 24.
- 2 Make the PAYLOAD OVERWRITE choice required.  
**Hitless Mode:** The default setting for the Payload Overwrite enable/disable field (next to the PAYLOAD OVERWRITE field) is OFF.

If STS-3c SPE, STS-1 SPE, VT-6, VT-2 or VT-1.5 is chosen, the Section, Line and Path CVs are recalculated before transmission and the Mapping, Selected VT, VT Payload, Pattern, Tributary Offset and Pattern in other VT's settings are displayed. To choose the settings in these, See "Setting SONET Transmit Interface " page 24, steps 4 through 10.

## Setting the Interfaces

### Setting SONET THRU Mode

- 3 Switch the PAYLOAD OVERWRITE enable/disable field to ON. Test functions are available whilst Payload Overwrite is enabled. Select the **TEST FUNCTION** folder and setup as required.
- 4 Make the TOH+POH CHANNEL OVERWRITE choice required.  
The Section, Line and Path CVs are recalculated before transmission.

---

## Using Smart Test

### Smart Setup

The Smart Setup feature simplifies instrument operation by:

- Allowing the instrument to configure automatically on the incoming signal.
- It will attempt to identify signal structure, and detect mixed payload signal structures and alarms.
- The OmniBER 725 automatically displays all of the J1 trace identifiers.

Once the received signal has been identified you can select a channel of interest and explore further into the payload.

### Smart Tests

Allow you to quickly access the most commonly used instrument features such as:

- Signal quality
- Functional tests
- Jitter tests (J1409A only)
- Settings (stored, logging, Tx/Rx coupling and trigger output enable)

### HOW TO:

- 1 Connect the 37725A to the network and choose if necessary the required SONET **RECEIVE** interface on the 37725A (Smartsetup will not select between SDH and SONET).
- 2 Press **SMART TEST**.



## Setting the Interfaces

### Using Smart Test

- 3 With Smartsetup highlighted, press **START** to obtain information about the receive signal. Or press **CANCEL** to exit Smart Tests.

An example of a typical display after choosing to RUN Smartsetup is shown below.

**Note:** The Path Trace information displayed is the one obtained the last time a RESCAN was performed. If you have changed the input signal since the last Smartsetup you must perform a RESCAN now.

STSIE	Payload	Path trace
1	STS-1 Unreq	
2	STS-1 Unreq	
3	STS-1 Unreq	
4	STS-1 Unreq	
5	STS-1 Unreq	
6	STS-1 Unreq	RESCAN HOLDUP-PICKUPD, STYED UNTESTD, NOORUD
7	STS-1 Unreq	
8	STS-1 Unreq	
9	STS-1 Unreq	
10	STS-1 Unreq	
11	STS-1 Unreq	
12	STS-1 Unreq	

STATUS: CANCEL EXPLORE FURTHER RESCAN

#### To run a Smart Test (Signal Quality - Frequency Measurement):

- 1 Ensure a valid signal is connected to one of the instrument's Receive ports.
- 2 Press **SMART TEST**.
- 3 Use the down cursor control key to select Signal quality.
- 4 Use the right cursor control key to access the tests.
- 5 Use the down cursor control key to select Frequency Measurement.

## Setting the Interfaces

### Using Smart Test



- 6 Press **SELECT** to display the frequency measurement screen. Or press **CANCEL** to exit Smart Tests.

Setting the Interfaces  
**Using Smart Test**



- “Using Transmit Overhead Setup” page 40
- “Using Receive Overhead Monitor” page 42
- “Setting Overhead Trace Messages” page 44
- “Setting Overhead Labels” page 45
- “Generating Overhead Sequences” page 46
- “Using Receive Overhead Capture” page 48
- “Adding Frequency Offset to SONET Signal” page 50
- “Adding Frequency Offset to the Unframed SONET Signal ” page 51
- “Adding Errors and Alarms at the SONET Interface” page 52
- “Adding Errors and Alarms at the Unframed SONET Interface ” page 53
- “Adding Pointer Adjustments” page 54
- “Using Pointer Graph Test Function” page 62
- “Stressing Optical Clock Recovery Circuits” page 64
- “Generating Automatic Protection Switch Messages” page 66
- “Inserting and Dropping the Data Communications Channel” page 67

---

## Selecting Test Features

## Selecting Test Features


### Using Transmit Overhead Setup

---

## Using Transmit Overhead Setup

### Description

You can set an overhead byte to a known static state to aid troubleshooting. For example, to quickly check for "stuck bits" in path overhead bytes. Transport Overhead, Path Overhead, Trace Messages and Labels can be set using this feature.

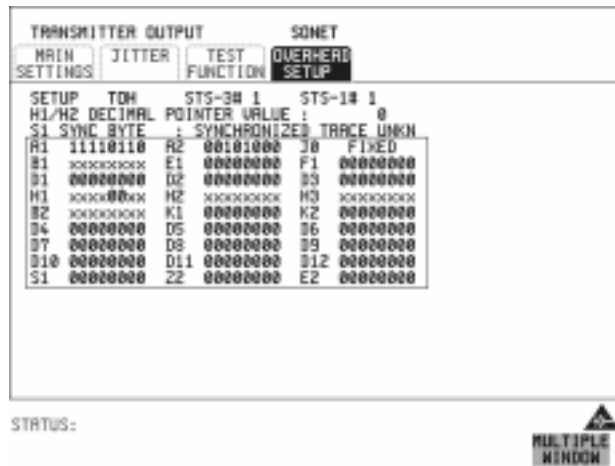



### HOW TO:

- 1 Set up the SONET transmit interface and payload required. See "Setting SONET Transmit Interface " page 24.
- 2 Choose the type of overhead to SETUP.  
If OC-12 or OC-48 is chosen as the SONET interface, choose the STS-3# and STS-1# you wish to set up.  
If STS-3 is chosen as the SONET interface, choose the STS-1# you wish to set up.  
DEFAULT - Use to set all overhead bytes to the standard values defined by Bellcore/ANSI.  
If a test function is active then the overhead byte value is determined by the choices made in the Test Function. If APS Messages is chosen, for example, K1K2 value is set by the APS Messages setup.  
If **TOH** (Transport Overhead) is chosen, choose the STS-1 to be displayed.  
Many bytes in **STS-1# 2** and **STS-1#3** are not labeled as the other overhead functions have not yet been defined.

## Selecting Test Features

### Using Transmit Overhead Setup

If **STS-1# 1,2,3** is chosen, the hexadecimal value of all 81 bytes of the STS-3 section & line overhead selected are displayed (all 324 bytes of an OC-12 or 1,296 bytes of an OC-48 are displayed 81 bytes at a time by selecting each STS-3 in turn). The value of the bytes can be set using **DECREASE DIGIT** **INCREASE DIGIT**  .

If BYTE NAMES is chosen, the labels for the **STS-1# 1,2,3** overhead bytes are displayed.

- 3 If POH (Path Overhead) is chosen, choose the TYPE of overhead within STS-1 under test to be setup.  
J1 and J2 bytes can be set under Path Overhead or Trace Messages. H4 byte has a choice of sequences for VT-2, VT-1.5 and VT-6 mapping:  
**Full Sequence** - 48 byte binary sequence.  
**Reduced Sequence** - Binary count sequence of 0 to 3 i.e. 111111(00 to 11).  
**COC1 Sequence** - Binary count sequence of 0 to 3 i.e. 110000(00 to 11).  
H4 byte is transmitted as all zero's for 34 Mb/s and DS3.
- 4 If TRACE MESSAGES is chosen, see "Setting Overhead Trace Messages " page 44.

---

#### NOTE

---

Any bit of an overhead byte which is displayed as x or s cannot be set. All other bits can be set to 0 or 1.

#### TIP:

You can set all overhead bytes to the default state by selecting SETUP **DEFAULT**.

You can set all overhead bytes and test functions to the default state by recalling Stored Settings [0] on the **OTHER** display.

---


## Using Receive Overhead Monitor

### Description

When first connecting to a SONET network, a start up confidence check can be made by viewing the behavior of all the overhead bytes. If the SONET network shows alarm indications, some diagnosis of the problem may be gained from viewing all the overhead bytes. The OVERHEAD MONITOR display is updated once per second (once per 8000 frames) approximately.

### TIP:

A snapshot of the received overhead can be logged to the chosen logging device. See "Logging on Demand " page 126.

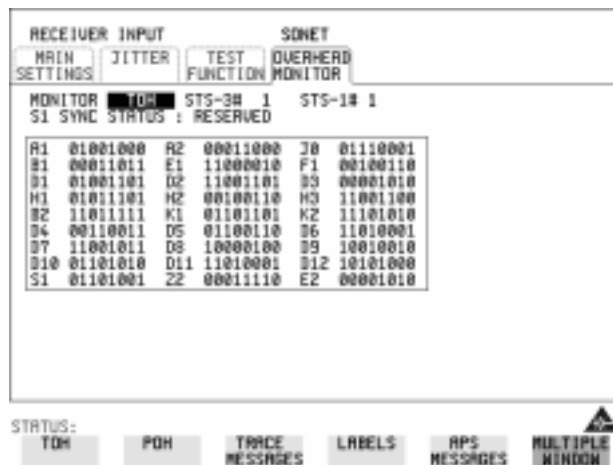

### HOW TO:

- 1 Set up the receive SONET interface and payload as required. See "Setting SONET Receive Interface" page 29.
- 2 Choose the type of overhead to MONITOR.
- 3 If **TOH** (Transport Overhead) is chosen, choose the STS-3 # and STS-1# to be displayed.  
Many bytes in **STS-1# 2** and **STS-1#3** are not labeled because the other overhead functions have not yet been defined.  
If **STS-1# 1,2,3** is chosen, the hexadecimal value of all 81 bytes of section overhead is displayed (all 324 bytes of an OC-12 or 1,296 bytes of an OC-48 are displayed 81 bytes at a time by selecting each STS-3 in turn).  
If BYTE NAMES is chosen, the labels for the **STS-1# 1,2,3** overhead bytes are displayed.

## Selecting Test Features

### Using Receive Overhead Monitor

- 4 If POH (Path Overhead) is chosen, choose the source of the overhead, SPE or VTSPE.  
J1 and J2 bytes can be monitored under Path Overhead or Trace Messages
- 5 If TRACE MESSAGES is chosen, you can monitor a data message to verify portions of the network.  
If the 16 byte CRC7 message structure is detected, the 15 characters within the message are displayed.  
If the CRC7 structure is not detected in J1, the 64 byte message format is assumed and displayed.  
If the CRC7 structure is not detected for J0 or J2, all 16 bytes are displayed.
- 6 If LABELS is chosen, the S1 sync status, STS path label (C2) and the VT Path label (V5) are monitored.
- 7 If APS MESSAGES is chosen, choose the TOPOLOGY, **LINEAR** (GR-253) or **RING** (GR-1230). The K1 and K2 bits are monitored.

**TIP:**

If any abnormal behavior is observed on a particular path or section overhead byte, or an associated group of bytes (3XA1,3XA2; D1 - D3), the **RECEIVE TEST FUNCTION** display of **OVERHEAD CAPTURE** can be used to check the suspect byte or bytes on a frame by frame basis. See "Using Receive Overhead Capture " page 48.

## Selecting Test Features

### Setting Overhead Trace Messages

---

## Setting Overhead Trace Messages


### Description

You can insert a data message to verify parts of the network:

J0 verifies the section overhead.

J1 verifies the STS-1 SPE or STS-3c SPE path connection.

J2 verifies the VT SPE path connection.

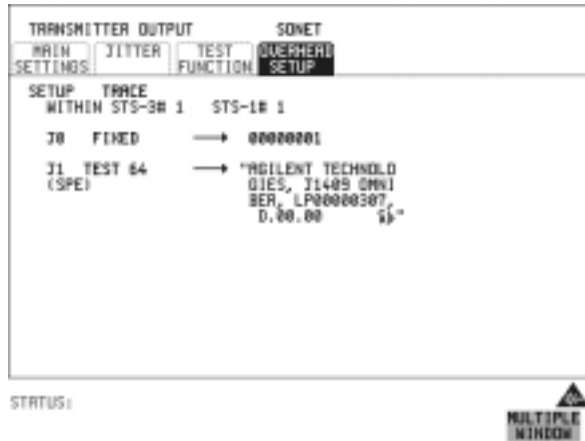



### HOW TO:

- 1 Choose the message for insertion in the chosen trace channel.

### How to Edit User Messages

There are two ways you can edit a user message.

- Use the edit keys at the bottom of the display JUMP, PREVIOUS CHAR, NEXT CHAR  and  that are displayed when you position the cursor on a User message.

OR

- Use the POP UP alphanumeric keypad that is displayed when you press the front panel **SET** key. Detailed instructions on how to change instrument settings using the POP UP keypad is given in the Quick Start Guide (page 13) under the heading "Changing Instrument Settings".

## Selecting Test Features

### Setting Overhead Labels

---

## Setting Overhead Labels



### *Description*

Choosing LABELS in TRACE MESSAGES allows the setting of the S1 SYNC STATUS, STS PATH LABEL (C2) and VT PATH LABEL (V5).



### How to Edit User Defined Labels

There are two ways you can edit a label as follows;

- Use the edit keys at the bottom of the display JUMP, PREVIOUS CHAR, NEXT CHAR  and  that are displayed when you position the cursor on a User defined label .

OR


- Use the POP UP alphanumeric keypad that is displayed when you press the front panel **SET** key. Detailed instructions on how to change instrument settings using the POP UP keypad is given in the Quick Start Guide (page 13) under the heading “Changing Instrument Settings”.

---

## Generating Overhead Sequences

### Description

You may insert a pattern into a functional group of overhead bytes for testing or troubleshooting purposes.

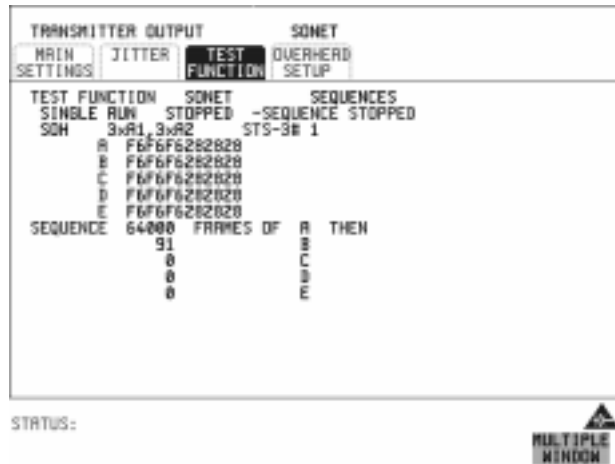

### HOW TO:

- 1 Set up the SONYET transmit interface and payload required. See “Setting SONYET Transmit Interface” page 24.
- 2 Select **TEST FUNCTION** , SONYET, SEQUENCES as shown above.
- 3 Choose the type of sequence required.  
SINGLE RUN - runs the sequence once and then stops.  
REPEAT RUN - runs the sequence repeatedly until STOPPED is chosen.
- 4 Choose the overhead type as required.  
SOH- Section Overhead  
LOH- Line Overhead  
POH - Path Overhead
- 5 Choose the byte or bytes of overhead required.
- 6 Set up the required number of data patterns and the number of frames in which each data pattern should appear.  
Your sequence is derived from up to 5 blocks of hexadecimal data. Each block can be transmitted in up to 64,000 frames.  
The data and the number of frames are set using **DECREASE DIGIT** **INCREASE DIGIT** .



## Selecting Test Features

### Generating Overhead Sequences

7 Start the sequence by choosing **START**.

---

**NOTE**

---

When you start the sequence illustrated, one Out of Frame alarm and one Loss of Frame alarm should occur every eight seconds.

#### A1A2 Boundary Function

A1A2 provide a frame alignment pattern (A1=F6 H, A2=28 H). Use A1A2 to test the 6 framing bytes at the A1A2 boundary in the section overhead (see display on previous page). The 6 bytes across the boundary are:

#### STS-n

STS-3 channel:	#n-2	#n-1	#n	#1	#2	#3
Overhead byte:	A1 #3	A1 #3	A1 #3	A2 #1	A2 #1	A2 #1

A network element will use three of these bytes (which ones are not defined in the standards, so will vary between manufacturers) to gain and maintain frame synchronisation. The ability to stress test across the boundary is necessary to verify a correct synchronisation algorithm within a network element.

## Selecting Test Features

### Using Receive Overhead Capture

---


## Using Receive Overhead Capture

### Description

Section, Line and Path overhead provide network support functions, responding dynamically to network conditions and needs. It is therefore useful to capture overhead activity on a frame by frame basis.

### TIP:

The Overhead Capture display can be logged to the chosen logging device. See "Logging on Demand " page 126.

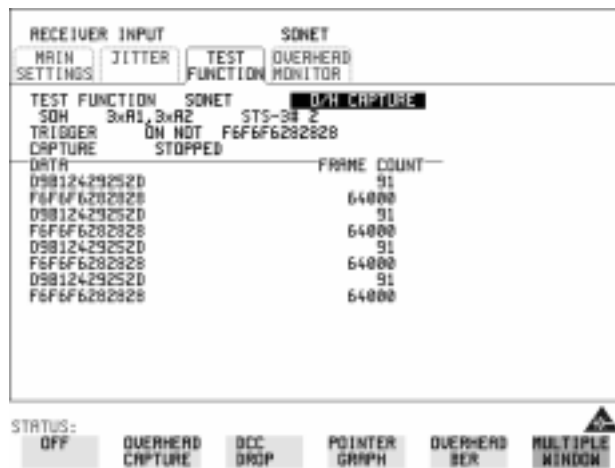

### HOW TO:

- 1 Set up the receive SONET interface and payload as required. See "Setting SONET Receive Interface" page 29.
- 2 Select **TEST FUNCTION**, SONET, O/H CAPTURE as shown above.
- 3 Choose the overhead type as required.  
SOH- Section Overhead  
LOH- Line Overhead  
POH- Path Overhead
- 4 Choose the Byte or bytes of overhead to be captured.  
Choose the TRIGGER to determine the start point of the capture.  
**OFF** - starts immediately the capture is initiated. Can be used to provide a frame by frame monitor of the chosen byte or bytes.  
**ON** -captures activity after your specified overhead state has occurred. Can be used for transient detection from a specified expected state.

## Selecting Test Features

### Using Receive Overhead Capture

**ON NOT** - captures activity after the first occurrence of a deviation from your specified overhead state. Can be used for transient detection from a specified expected state.

- 5 Up to 16 records of overhead state are provided. Each record will represent between 1 and 64,000 frames. A capture is started by pressing **CAPTURE START** and terminates when up to 16 records have been captured. The capture can be terminated earlier by pressing **CAPTURE STOP**.

## Selecting Test Features


### Adding Frequency Offset to SONET Signal

---

## Adding Frequency Offset to SONET Signal



### *Description*

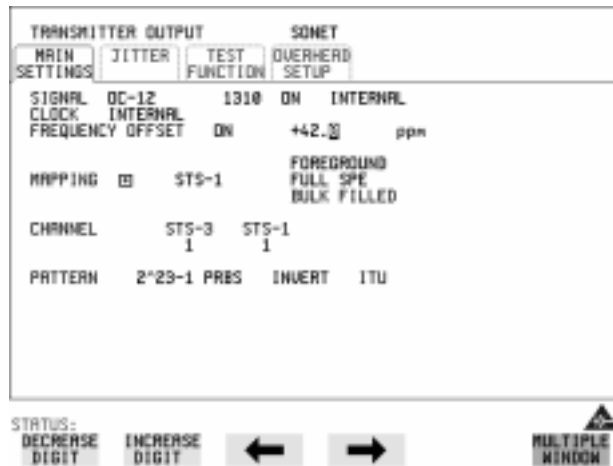Frequency offset can be added to the SONET interface rate signal and to the payload signal.



### *HOW TO:*


#### SONET Line Rate Offset

- 1 Choose the amount of frequency offset required.  
You can set the Frequency Offset in the range -999 ppm to +999 ppm in 1 ppm steps using **DECREASE DIGIT** **INCREASE DIGIT**  and  or press **SET** for a pop-up numerical keypad.  
The amount of applied Frequency Offset can be varied while measurements are taking place.
- 2 If the value of the SONET line rate offset chosen is sufficient to cause the maximum stuff rate to be exceeded, the asynchronous payload is offset to prevent bit errors occurring and the maximum stuff rate is maintained.

## Adding Frequency Offset to the Unframed SONET Signal

**Description**

Frequency offset can be added to the SONET interface rate signal.

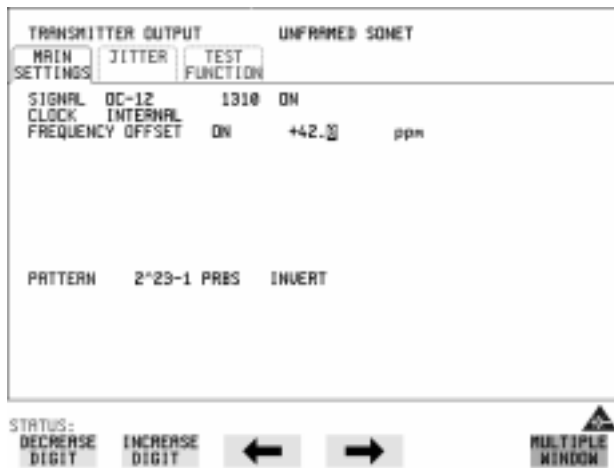

**HOW TO:**

**Line Rate Offset**

Choose the amount of frequency offset required.

You can set the Frequency Offset in the range -999 ppm to +999 ppm in 1 ppm steps using **DECREASE DIGIT** **INCREASE DIGIT** and


The amount of applied Frequency Offset can be varied while measurements are taking place.

If the value of the SONET line rate offset chosen is sufficient to cause the maximum stuff rate to be exceeded, the asynchronous payload is offset to prevent bit errors occurring and the maximum stuff rate is maintained.

## Adding Errors and Alarms at the SONET Interface

*Description*

Errors and alarms can be added to an SONET signal during testing.

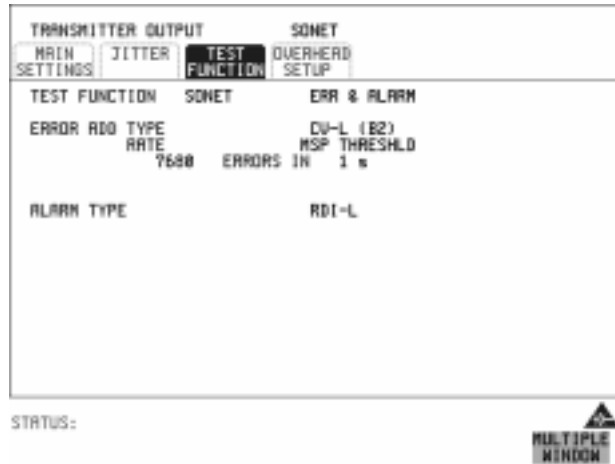

*HOW TO:*

- 1 Set up the SONET transmit interface and payload required. See "Setting SONET Transmit Interface " page 24.
- 2 Select **TEST FUNCTION** , SONET, ERR & ALARM as shown above.
- 3 Choose the ERROR ADD TYPE and RATE required.  
 Errors can be added at preset rates and at USER programmable rate. With the exception of ENTIRE FRAME and A1A2 FRAME, errors can be added at ERROR ALL rate.  
 If CV-L errors are chosen, errors can be added to trigger an APS THRESHOLD. This takes the form of N errors in T time period. N and T are both selectable.
- 4 Choose the ALARM TYPE  
 Errors and Alarms can be added at the same time.

---

## **Adding Errors and Alarms at the Unframed SONET Interface**

***Description***

Bit Errors and LOS alarms can be added on the Unframed SONET signal during testing



***HOW TO:***

- 1 Set up the Unframed SONET transmit interface and pattern required. See “Selecting Unframed SONET Transmit Interface” page 30.
- 2 Select **TEST FUNCTION** , as shown above.
- 3 Choose the ERROR ADD RATE required.

Choose the ALARM TYPE **OFF** or **LOS** .  
Errors and Alarms can be added at the same time.

## **Adding Pointer Adjustments**

### ***Introduction***

Pointers perform a critical role in the error free transmission of payload data (subscriber data) through an SONET network. They also enable individual payload channels to be inserted or extracted from a high speed OC-n line signal (for example the functionality provided by ADMs).

Pointer adjustments are often necessary to compensate for asynchronous operation between different nodes within an SONET network. These adjustments however can result in jitter being added to a DS<sub>n</sub> signal transmitted from an SONET network element.

### **Jitter caused by Pointer Adjustments**

Pointer adjustments are the mechanisms within SONET to compensate for frequency and phase differences between VCs and outgoing SONET frames. These pointer adjustments are byte wide and since they can occur randomly, they may cause significant amounts of payload signal jitter. It is therefore necessary to control the jitter on payload signals that is due to pointer adjustments.

Pointer adjustment activity within a network can be randomly spaced individual pointer adjustments, pointer bursts or periodic pointer adjustments.

The ITU-T G.783 and ETSI TM-1015 recommendations define a set of pointer sequences to be used when evaluating an NE's pointer adjustment jitter performance.

The OmniBER 725 generates a set of test sequences which can be used to simulate network pointer adjustment activity. This allows the amount of tributary jitter due to different types of pointer adjustment to be measured in the OmniBER 725.



## Selecting Test Features

### Adding Pointer Adjustments

#### *Description*

The transmitted SPE or VT pointer value can be adjusted for testing purposes.



#### *HOW TO:*

- 1 Set up the SONET transmit interface and payload required. See "Setting SONET Transmit Interface " page 24.
- 2 Choose the POINTER TYPE.
- 3 Choose the ADJUSTMENT TYPE required.  
BURST - You determine the size of the burst by the number of PLACES chosen. If, for example, you choose 5 PLACES the pointer value will be stepped 5 times in unit steps e.g. 0 (start value), 1, 2, 3, 4, 5 (final value). The interval between steps is as follows:  
For STS-SPE the minimum spacing between adjustments is 500 us. For VT the minimum spacing between adjustments is 2ms.  
Choose ADJUST POINTER [ON] to add the chosen burst.

NEW POINTER - You can choose a pointer value in the range 0 to 782 with or without a New Data Flag.

The current pointer value is displayed for information purposes.

Choose ADJUST POINTER [ON] to transmit the new pointer value.

OFFSET - You can frequency offset the line rate or the SPE/VT rate, relative to each other, thus producing pointer movements. If you offset the SPE pointer, an 87:3 sequence of pointer movements is generated. The available configurations are listed in the following table.

If you are currently adding Frequency Offset to the SONET interface or payload, pointer OFFSET is not available.

## Selecting Test Features

### Adding Pointer Adjustments

Pointer Type	Line Rate	SPE Rate	VT Rate
SPE	Constant	Offset	Tracks STS Payload
SPE	Offset	Constant	Constant
VT	Constant	Constant	Offset
VT	Offset	Tracks Line Rate	Constant


**T1.105/GR-253** - Provides pointer movements according to T1.105 and GR-253:

- 4 Choose the T1.105/GR-253 ADJUSTMENT TYPE.
- 5 Choose the POLARITY, INTERVAL and PATTERN (where applicable) for the selected sequence.
- 6 Choose POINTER SEQUENCES **START INIT** to generate the selected G.783 sequence and **STOP INIT** to stop the pointer sequences.

### T1.105/GR-253 Pointer Sequences Explained

In addition to the BURST, NEW POINTER and OFFSET pointer movements described, the OmniBER 725 can also generate pointer sequences (pointer movements) according to T1.105.03 and GR-253.

Before running a pointer sequence you can elect to run an initialization sequence, followed by a cool down period, and then run the chosen sequence. This is selected using the START INIT softkey shown in the display on the previous page. Initialized pointer sequences are made up of three periods: the *Initialization Period*, the *Cool Down Period*, and the *Sequence (Measurement) Period*, an example is given in the figure below.

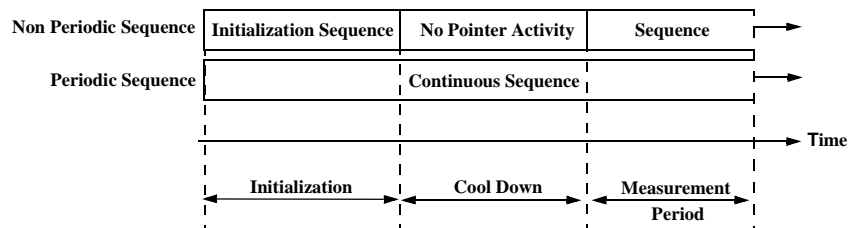

Note: SINGLE (A1), BURST (A2) and PHASE TRANSIENT(A3) are Non Periodic Sequences.

## Selecting Test Features

### Adding Pointer Adjustments

#### Initialization Period

For SINGLE A1, BURST A2 and PHASE TRANSIENT A3 sequences the initialization sequence consists of 60 seconds of pointer adjustments applied at a rate of 2 adjustments per second and in the same direction as the specified pointer sequence.

#### Cool Down Period

A period following the initialization period which for SINGLE e), BURST f) and PHASE TRANSIENT sequences is 30 seconds long when no pointer activity is present.

#### Sequence (Measurement) Period

The period following the Cool Down period where the specified pointer sequence runs continuously.

#### Periodic Test Sequences

For periodic test sequences (for example PERIODIC ADD) both the 60 second initialization and 30 second cool down periods consist of the same sequence as used for the subsequent measurement sequence. If the product of the period T and the selected Optional background pattern (87+3 or 26+1) exceeds 60 seconds then the longer period is used for the initialization. For example, if T is set for 10 seconds then the initialization period may be extended to 900 seconds.

The OmniBER 725 displays a message indicating which phase (initialization, cool down or measurement) the transmitter is currently generating.

---

#### NOTE


---

The following conditions apply for pointer sequence generation:  
The sequences can only be applied to the SPE pointer when the SPE does not contain a VT structure, otherwise it is applied to the VT pointer. Pointer sequence generation is not available when a frequency offset is being applied to the Line Rate.

The following figure gives an example of a T1.105/GR-253, 87-3 Pointer Sequence.

Selecting Test Features  
**Adding Pointer Adjustments**

**T1.105 A4 and A5, 87-3 Pattern**

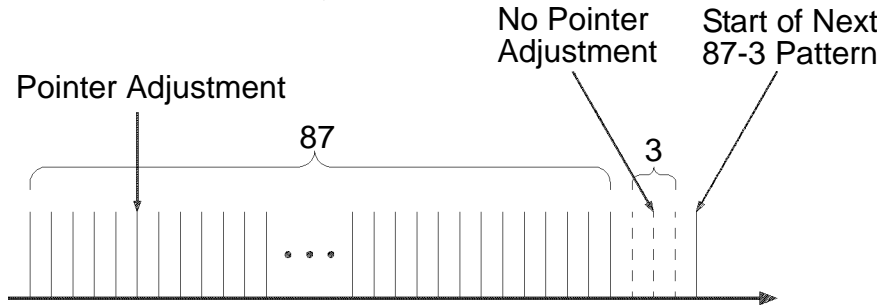

**An Example of a Pointer Sequence**

Pointer Sequence	Description
<b>T1.105 A1 SINGLE GR-253 5-29</b>	Periodic Single adjustments, all of the same polarity which is selectable. Separation between pointer adjustments is fixed at approximately 30 seconds.
<b>T1.105 A2 BURST OF 3 GR-253 5-30</b>	Periodic bursts of 3 adjustments, all of the same polarity which is selectable. The interval between bursts is fixed at approximately 30 seconds. The interval between adjustments within a burst is set to the minimum.
<b>T1.105 A3 PHASE TRANSIENT GR-253 5031</b>	Phase transient pointer adjustment burst test sequence. All adjustments are of the same polarity, which is selectable. The interval between bursts is fixed at 30 seconds. Each burst consists of 7 pointer movement. The first 3 in each burst are 0.25 s apart, and the interval between the 3 and 4 movement, and each remaining movement 0.5 seconds.
<b>T1.105 A4 PERIODIC NORMAL (87-3 Pattern) GR-253 5-33(b)</b>	An 87-3 pattern is selected. The sequence pattern is 87 pointer movements followed by 3 missing pointer movements. Pointer polarity is selectable and the time interval between pointer adjustments settable.
<b>T1.105 A4 PERIODIC NORMAL (Continuous Pattern) GR-253 5-34(b)</b>	Provides a continuous sequence of pointer adjustments. The polarity of the adjustments is selectable, and the time interval between adjustments can be set (see Note 1).

Selecting Test Features  
**Adding Pointer Adjustments**

Pointer Sequence	Description
<b>GR-253 5-32(b) PERIODIC NORMAL (26-1 Pattern)</b>	This selection is only available if you have selected VT1.5 mapping. The sequence pattern is 26 pointer movements followed by 1 missing pointer movement. Pointer polarity is selectable and the time interval between pointer adjustments programmable to 200 ms, 500 ms, 1 s, 2 s, 5 s or 10 seconds.
<b>T1.105 A5 PERIODIC ADD (87-3 Pattern) GR-253 5-33(c)</b>	An 87-3 pattern is selected. The sequence pattern is 87 pointer movements followed by 3 missing pointer movements with an added pointer movement after the 43rd pointer. The spacing between the added adjustment and the previous adjustment is set to the minimum. Pointer polarity is selectable. The time interval between pointer adjustments can be set (see Note 1). Added adjustments occur every 30 seconds or every repeat of the 87-3 pattern, whichever is longer.
<b>T1.105 A5 PERIODIC ADD (Continuous Pattern) GR-253 5-34(c)</b>	Periodic Single adjustments, with selectable polarity and added adjustment (1 extra). The spacing between the added adjustment and the previous adjustment is set to the minimum, (see Note 2). The time interval between pointer adjustments can be set (see Note 1). Added adjustments occur every 30 seconds or every repeat of the 87-3 pattern, whichever is longer.
<b>GR-253 5-32(c) PERIODIC ADD (26-1 Pattern)</b>	This selection is only available if you have selected VT1.5 mapping. The sequence pattern is 26 pointer movements followed by 1 missing pointer movement. The added adjustment occurs 2 ms after the 13th pointer adjustment. Pointer polarity is selectable and the time interval between pointer adjustments programmable to 200 ms, 500 ms, 1 s, 2 s, 5 s or 10 s. Added adjustments occur every 30 seconds or every repeat of the 26-1 pattern, whichever is longer.
<b>T1.105 A5 PERIODIC CANCEL (87-3 pattern) GR-253 5-33(d)</b>	An 87-3 pattern is selected. The sequence pattern is 87 pointer movements followed by 3 missing pointer movements with a cancelled pointer movement at the 87th pointer. Pointer polarity is selectable, and the time interval between pointer adjustments can be set (see Note 1). Cancelled adjustments occur every 30 seconds or every repeat of the 87-3 pattern, whichever is longer.

Selecting Test Features  
**Adding Pointer Adjustments**

Pointer Sequence	Description
<b>T1.105 A5 PERIODIC CANCEL (Continuous Pattern)</b> <b>GR-253 5-34(d)</b>	Periodic Single adjustments, with selectable polarity and cancelled adjustment (1 less). The time interval between pointer adjustments can be set (see Note 1). Cancelled adjustments occur every 30 seconds or every repeat of the 87-3 pattern, whichever is longer.
<b>GR-253 5-32(d) PERIODIC CANCEL (26-1 pattern)</b>	This selection is only available if you have selected VT1.5 mapping. The sequence pattern is 26 pointer movements followed by 1 missing pointer movement. The cancelled adjustment is the 26th pointer adjustment, that is the one before the regular gap of 1. Pointer polarity is selectable and the time interval between pointer adjustments programmable to 200 ms, 500 ms, 1 s, 2 s, 5 s or 10s. Cancelled adjustments occur every 30 seconds or every repeat of the 26-1 pattern, whichever is longer.

**NOTE**

For SPE pointers the sequence interval is selectable from 7.5 ms, 10, 20, 30, 34 ms; 40 to 100 ms in 10 ms steps, 100 to 1000 ms in 100 ms steps, 1, 2, 5, 10 seconds.  
 For VT pointers the sequence interval is selectable from: 200 ms, 500 ms, 1, 2, 5 and 10 seconds.  
 For SPE pointers the minimum spacing between adjustments is 500 us.  
 For VT pointers the minimum spacing between adjustments is 2 ms.

**Table 1** **Pointer Sequences Available with Selected Mapping**

POINTER SEQUENCE	MAPPING		
	SPE	VT6, VT2	VT1.5
A1 SINGLE	√	√	√
A2 BURST OF 3	√	√ 3	√
A3 PHASE TRANSIENT	√	√	√
A4 PERIODIC NORMAL(87-3)	√		
A4 PERIODIC NORMAL (Continuous)	√	√	√

Selecting Test Features  
**Adding Pointer Adjustments**

**Table 1** **Pointer Sequences Available with Selected Mapping**


POINTER SEQUENCE	MAPPING		
	SPE	VT6, VT2	VT1.5
PERIODIC NORMAL (26-1)			√
A5 PERIODIC ADD (87-3)	√		
A5 PERIODIC ADD (Continuous)	√	√	√
PERIODIC ADD (26-1)			√
A5 PERIODIC CANCEL (g) 87-3	√		
A5 PERIODIC CANCEL (Continuous)	√	√	√
PERIODIC CANCEL 26-1			√

---

## Using Pointer Graph Test Function

Pointer Graph shows the relative offset during the measurement period. This allows the time relationship of SPE or VT pointer movements to be observed. Up to 4 days of storage allows long term effects such as Wander to be observed. If an alarm occurs during the measurement period, a new graph starts at the centre of the display (offset zero) after recovery from the alarm.

**TIP:** The Pointer Graph display can be logged to the chosen logging device. See "Logging on Demand " page 126.

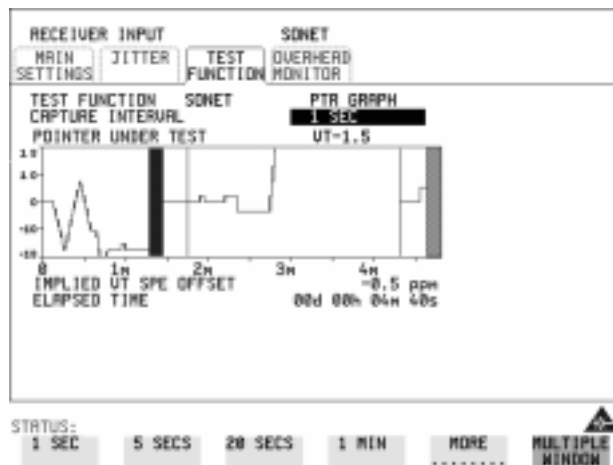

**TIP:** The graph can also be viewed on the **RESULTS** **SONET RESULTS** display at the end of the measurement.

**HOW TO:**

- 1 Set up the receive SNET interface and payload as required. See "Setting SNET Receive Interface" page 29.
- 2 Choose the CAPTURE INTERVAL required.  
The capture interval determines the time between captures. Low values of capture interval should be chosen when a high degree of pointer movements is expected. High values of capture interval should be chosen when a low degree of pointer movements is expected, for example Wander over 1 day, use 5 MINS and Wander over 4 days, use 20 MINS.  
If, during a long term measurement (4 days), an event occurs at a particular time each day, a short term measurement can be made at the identified time to gain more detail of the event.



## Selecting Test Features

### Using Pointer Graph Test Function

- 3 Choose the POINTER UNDER TEST type.
- 4 Press **RUN/STOP** to start the measurement.

***TIP:***

If the event occurs outside normal working hours, a Timed Start measurement can be made.

The values of capture interval available and the approximate total capture window is as follows:

- 1 SEC - display window of approximately 5 minutes.
- 5 SECS - display window of approximately 25 minutes.
- 20 SECS - display window of approximately 1 hour 40 minutes.
- 1 MIN - display window of approximately 5 hours.
- 5 MIN - display window of approximately 1 day.
- 20 MIN - display window of approximately 4 days.

## Stressing Optical Clock Recovery Circuits

### *Description*

This test is essentially designed for testing optical clock recovery circuits in the presence of long runs of zero's (after scrambling). The test function page allows control of the test pattern and the block length. The maximum block length is 2 bytes less than the width of the SPE.

When the test is enabled, the instrument applies the selected pattern immediately after the first row of Section Overhead bytes **after scrambling**. The location of the start of the pattern is byte 4 at 52 Mb/s (i.e. after the first three bytes of overhead), byte 10 at 155 Mb/s, byte 37 at 622 Mb/s and byte 145 at 2488 Mb/s. The remainder of the SPE will contain the signal structure and pattern as defined on the TRANSMITTER, MAIN SETTINGS page.

The payload is overwritten in such a way that the transmitted B1 and B2 values are correct.

When using this feature to test network equipment clock recovery, long runs of zero's may be inserted at the input of the UUT (unit under test) and by monitoring B1 and B2 at the UUT output, error free transmission can be verified.

The stress test is available at all optical rates.



### **HOW TO:**

- 1 Set up the SONET transmit interface and payload required. See "Setting SONET Transmit Interface " page 24.

## Selecting Test Features

### **Stressing Optical Clock Recovery Circuits**

Choose the required STRESSING PATTERN.

The G.958 test pattern consists of 7 consecutive blocks of data as follows: the first row of section overhead bytes, ALL ONES, a PRBS, the first row of section overhead bytes, ALL ZEROS, a PRBS and the first row of section overhead bytes.

- 2** If you choose ALL ONES or ALL ZEROS as the stressing pattern, choose the number of bytes in the BLOCK LENGTH.

## Generating Automatic Protection Switch Messages

**Description**

You can program the K1 and K2 bytes to exercise the APS functions for Both LINEAR (GR-253) and RING (GR1230) topologies.



**HOW TO:**

- 1 Set up the SONYET transmit interface and payload required. See "Setting SONYET Transmit Interface " page 24.
- 2 Choose the ITU-T TOPOLOGY required.
- 3 Choose the message to be transmitted.  
 If LINEAR topology is chosen, choose the CHANNEL, the BRIDGED CHANNEL NO., the ARCHITECTURE and the RESERVED bits you require.  
 If RING topology is chosen, choose the DESTINATION NODE ID, the SOURCE NODE ID, the type of PATH and the status code (K2 Bits 6->8)  
 The current TX and RX, K1 and K2, values are displayed for reference only.
- 4 Choose **DOWNLOAD** to transmit the new K1/K2 values.

## Inserting and Dropping the Data Communications Channel

### *Description*

The Data Communications Channel (DCC) of the regenerator and multiplexer section overhead can be verified by protocol testing. The Insert and Drop capability provides access to the DCC via the RS-449 connector on the front panel of the Multirate Analyser module.

DCC INSERT is available on the **TRANSMIT**, **SONET**, **TEST FUNCTION** display.

DCC DROP is available on the **RECEIVE** **SONET** **TEST FUNCTION** display.



### *HOW TO:*

- 1 Connect the Protocol Analyzer to the DCC port on the Multirate Analyser module.
- 2 Choose the required DCC.

Selecting Test Features

**Inserting and Dropping the Data Communications Channel**

- “Using Overhead BER Test Function” page 70
- “Performing a Trouble Scan” page 71
- “Test Timing” page 73
- “Making SONET Analysis Measurements” page 74
- “Measuring Frequency” page 75
- “Measuring Optical Power” page 76
- “Performing a SONET Tributary Scan” page 77
- “Performing an SONET Alarm Scan” page 80
- “Monitoring Errors and Alarms in an Unframed SDH Signal ” page 81

---

## **Making Measurements**

## Making Measurements

### Using Overhead BER Test Function


---

## Using Overhead BER Test Function

### *Description*

You can perform a Bit Error Rate test on chosen bytes of the section, line and path overhead bytes.

You can access the transmit Overhead BER on the **TRANSMIT** **SONET** **TEST FUNCTION** display.

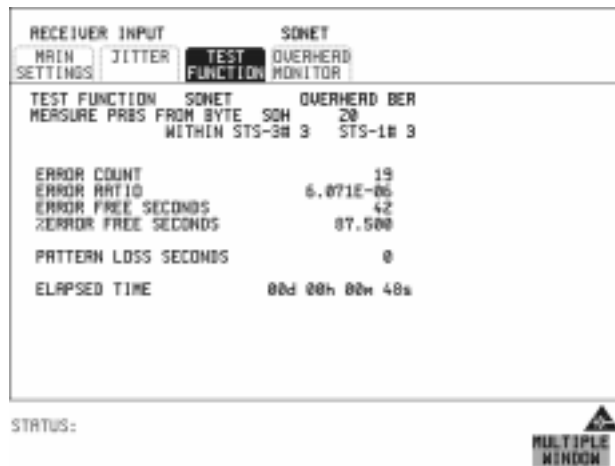

### *HOW TO:*

- 1 Set up the SONET transmit interface and payload required. See "Setting SONET Transmit Interface " page 24.
- 2 Set up the receive SONET interface and payload as required. See "Setting SONET Receive Interface " page 29.
- 3 Choose the overhead byte to be tested on the **RECEIVE** **SONET** **TEST FUNCTION** display.
- 4 Choose the overhead byte to be tested on the **TRANSMIT** **SONET** **TEST FUNCTION** display.
- 5 Press **RUN/STOP** to start the test.
- 6 The PRBS pattern can be errored by pressing **SINGLE**.



## Performing a Trouble Scan

When first connecting to the network it can be useful to have an indication of any problems that exist before starting testing. In the OmniBER 725 this feature is provided by Trouble Scan.

All possible error sources and alarms are scanned simultaneously. If any error counts are not zero then these are displayed. Up to 4 non-zero error counts are displayed in priority order.



If all error counts are zero and any alarms are detected "ALARMS DETECTED" is displayed.

Press **SHOW** and the alarm led's can be used to determine which alarms were detected.

If no alarms are detected and all error counts are zero then "NO TROUBLE" is displayed.

**Error Count Priority** - see the Table on the following page for a list of error count priority.

Making Measurements  
**Performing a Trouble Scan**

**Error Count Priority**

<b>DSn</b>	<b>SONET</b>
CRC CODE DS3FR (DS1FR) P-BIT C-BIT FEBE BIT	CV-S CV-L CV-P CV-V FRAME CRC DS3FR (DS1FR, FAS2) REI-L REI-P CV-IEC REI-V P-BIT C-BIT REBE (FEBE) BIT

## Test Timing

---

### Test Timing

#### *Description*

There are two aspects to test timing:

- Error results may be displayed as short term or cumulative over the measurement period. If short term error measurements are required, the short term period may be selected.
- The period of the test may be defined or controlled manually.



#### *HOW TO:*

- 1 Choose **TIMING CONTROL** on the **RESULTS** display.
- 2 Choose the SHORT TERM PERIOD to the timing required for short term results.
- 3 Choose the type of TEST TIMING required:  
For manual control with **RUN/STOP** choose **MANUAL**.  
For a single timed measurement period started with **RUN/STOP**, choose **SINGLE** and choose the Test duration.  
For a timed period starting at a specified time, choose **TIMED**, choose the Test duration and the test START date and time.

## Making Measurements

### Making SONET Analysis Measurements

---

## Making SONET Analysis Measurements

### Description

G.826, M.2101, M.2110 and M.2120 analysis results are provided for all relevant SONET error sources from a framed signal.

In addition the following results are provided:

- Cumulative error count and error ratio
- Short Term error count and error ratio
- Alarm Seconds
- Frequency
- Pointer Values
- Pointer Graph

RESULTS		SONET		ERROR ANALYSIS	
G.826	M.2101	M.2110	M.2120		
ERROR TYPE CU-L(B2)					
CU-L(B2) ANALYSIS (G.826)					
EB	426612	ES		0	
SES	0	URS		57	
PLUG	57	BBE		0	
ESR	0	SESA		0	
BBER	0				
ELAPSED TIME		00d 00h 03m 20s			

STATUS: MULTIPLE WINDOW

### HOW TO:

- 1 Set up the receive framed SONET interface and payload required. See "Setting SONET Receive Interface " page 29.
- 2 If required set up the framed SONET transmit interface and payload. See "Setting SONET Transmit Interface " page 24.
- 3 Press RUN/STOP to start the measurement.
- 4 You can view the analysis results on the RESULTS SONET ANALYSIS display.

### TIP:

The measurement will not be affected if you switch between the different results provided.

---

## Measuring Frequency

### Description

The signal frequency and the amount of offset from the standard rate can be measured to give an indication of probability of errors.



### HOW TO:

- 1 Connect the signal to be measured to the IN port of the DSN Receive module or the IN port of the Multirate Analyzer module (SONET electrical) or the IN port of the Optical Interface module (SONET optical).
- 2 Choose the required SIGNAL rate and LEVEL on the **PDH/DSr** **RECEIVE** **MAIN SETTINGS** or **SONET** **RECEIVE** **MAIN SETTINGS** display.

---

### NOTE

1. Frequency measurement is always available even if test timing is off.
2. The result is only valid if a complete sweep of the highlighted bar has occurred since the input was applied. Also if you select an External or Received clock source the measurement result will depend on the accuracy of the applied clock source.


### Test Period

Two counter gate periods, selected in the **GATE** field are provided simultaneously, 1s and 16s. For the 16s gate period a “Fuel Gauge” indicates progress towards the next update.

## Measuring Optical Power

### Description

Optical power measurement can be performed on the SONET signal connected to the Optical module IN port.

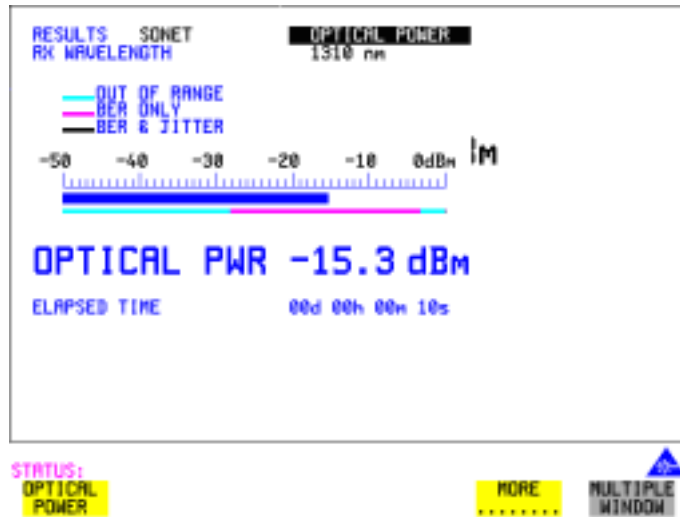

### HOW TO:

- 1 Connect the SONET optical signal to the IN port of the Optical Interface module.
- 2 Choose the received input signal rate on the **RECEIVE** **SONET** display.
- 3 Select **RESULTS**, SONET, **OPTICAL POWER** as shown above.

---

### NOTE

1. Optical power measurement is always available even if test timing is off.
  2. The white portion of the colored bar shows the power range for accurate jitter measurement (only displayed if a jitter option is fitted). The green portion of the colored bar shows the power range for accurate BER measurement.
-


## Performing a SONET Tributary Scan

*Description*

### Verifying an ADM Installation

An important part of the ADM installation process is the verification of path routing through the ADM (or Digital Cross Connect). In order to verify the routing of STS-n paths which are terminated by the network element, the mapped payload, dropped to a PDH tributary port, must be looped back at the digital distribution frame and mapped into the STS-n at the PDH tributary insert port. STS-n paths which are not terminated must be looped back at the STS-n level.

Using the OmniBER 725 Tributary Scan feature the installation of ADM's can be automated and any Bit errors or Pattern Loss flagged on the RESULTS display.

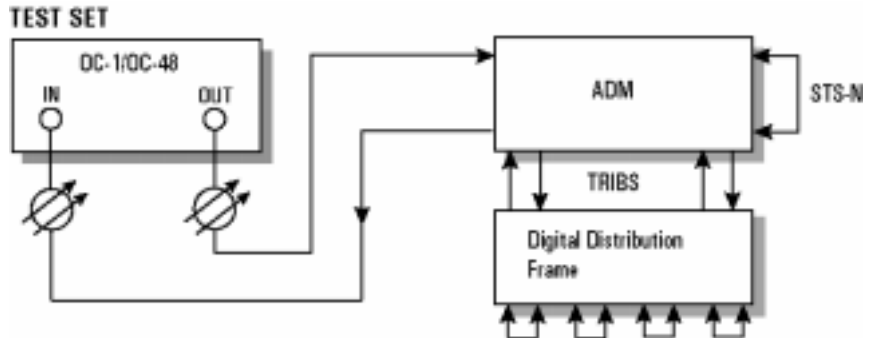

## Making Measurements

### Performing a SONET Tributary Scan

Tributary Scan tests each tributary for error free operation and no occurrence of Pattern Loss. A failure is indicated by highlighting the tributary in which the failure occurred. The **TRANSMIT** **SONET** **MAIN SETTINGS**, mapping setup determines the tributary structure. The OmniBER 725 will configure the Transmitter to the Receiver and the PATTERN is forced to the payload it will fill.

**TIP:** The SONET Tributary Scan display can be logged to the chosen logging device. See "Logging on Demand " page 126.



- HOW TO:**
- 1 Set up the transmit and receive SONET interfaces and payload as required. See "Setting SONET Transmit Interface " page 24 and "Setting SONET Receive Interface " page 29.
  - 2 Choose the required BIT ERROR THRESHOLD.  
This determines the error rate above which a failure is declared.
  - 3 Choose the required TEST TIMING.  
The value you choose is the test time for each individual tributary and not the total test time.  
For example, 28 VT-1.5 tributaries in an STS-1 SPE - the time taken to complete the Tributary Scan will be 28 X TEST TIMING choice.



## Making Measurements

### Performing a SONET Tributary Scan

- 4 The Tributary Scan results can be viewed on the **RESULTS** **SONET TRIBSCAN** display.

The Scan can be started on the **TRANSMIT** **SONET** **TEST FUNCTION** display or the **RESULTS** display by choosing **START**.


If the Scan is started on the **TRANSMIT** **SONET** **TEST FUNCTION** display, the OmniBER 725 changes to the **RESULTS** display.

If a single path, for example, **MAPPING STS-3c SPE** is chosen, then Tributary Scan is disabled.

---

#### NOTE

The keyboard is locked during tributary scan.

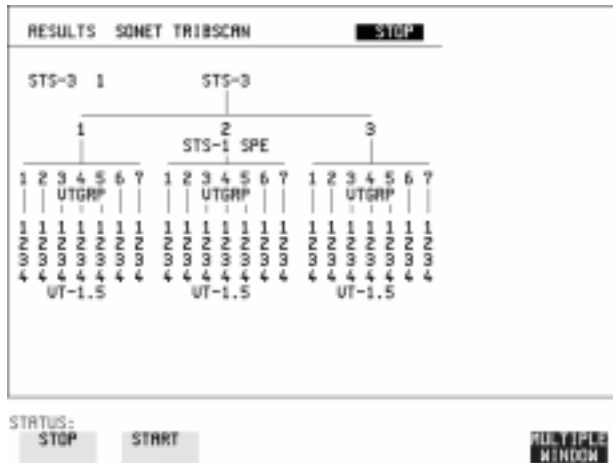

## Making Measurements

### Performing an SONET Alarm Scan

---

## Performing an SONET Alarm Scan

### Description

SONET Alarm Scan tests each channel for alarm free operation and identifies and indicates any unequipped channels.

You can configure the Scan to check for the occurrence of any Path layer CV errors above a chosen threshold.

The channel in which an alarm occurred is highlighted if any of the following alarms occur:

**STS SPE:** LOP-P, RDI-P, AIS-P,

**VT-1.5:** LOP-P, AIS-P, RDI-P, H4 LOM, LOP-V, AIS-V, RDI-V

### TIP:

The SONET Alarm Scan display can be logged to the chosen logging device. See "Logging on Demand " page 126.



### HOW TO:

- 1 Set up the receive SONET interface and payload as required. See "Setting SONET Receive Interface" page 29.
- 2 Choose **SONET ALM SCAN** on the **RESULTS** display.
- 3 Choose AUTO or RX SETTINGS.  
RX SETTINGS: The scan checks the structure set on the **RECEIVE** **SONET** display.  
AUTO: The scan checks the structure being received. This can be particularly useful when receiving mixed payloads.
- 4 Choose the CV error threshold.
- 5 Choose **START** to start the Alarm Scan.

---

## Monitoring Errors and Alarms in an Unframed SDH Signal

*Description*

Bit error count or ratio may be monitored on an unframed signal.



Power Loss, Loss of Signal (LOS) and Pattern Loss Seconds may be displayed.



Making Measurements

**Monitoring Errors and Alarms in an Unframed SDH Signal**

“Setting Jitter Transmit Interface”	page 84
“Setting Jitter Receive Interface”	page 86
"Measuring Jitter "	page 87
“Setting Extended Jitter Receive Interface”	page 89
"Measuring Extended Jitter "	page 90
“Setting Wander Transmit Interface”	page 92
“Setting Wander Receive Interface”	page 93
"Measuring Wander "	page 94
"Measuring Jitter Tolerance "	page 96
"Measuring Jitter Transfer "	page 99
"Generating a New Jitter Mask "	page 108
"Changing the Parameters of a User-defined Jitter Mask "	page 110

---

## **Jitter Operation (J1409A only)**


Jitter Operation (J1409A only)  
**Setting Jitter Transmit Interface**

---

## Setting Jitter Transmit Interface

*Description:*  
**Model J1409A is required for Jitter operation.**

You can add jitter to the transmitted SONET signal STS-3, OC-3, OC-12, and OC-48. You can source the jitter modulation internally or from an external source.

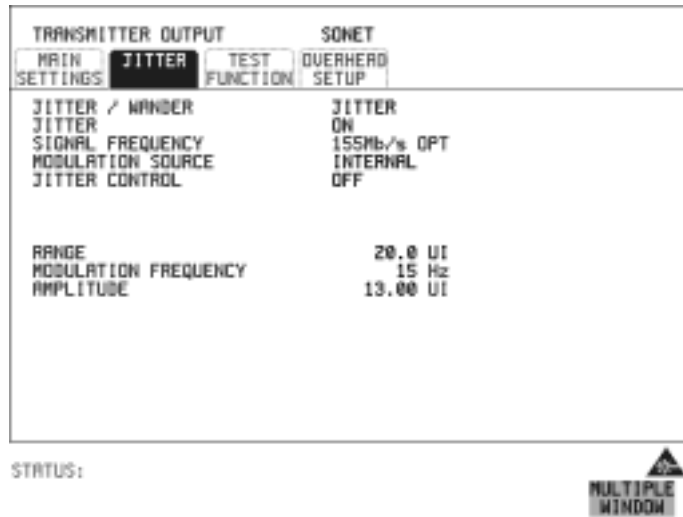


**HOW TO:**

- 1 Set up the SONET transmit interface. See "Setting SONET Transmit Interface" page 24.
- 2 Choose JITTER/WANDER **JITTER**.  
If you wish to add wander to the SONET signal, See "Setting Wander Transmit Interface" page 92.
- 3 Choose JITTER **ON**.  
If you wish to perform a Jitter Tolerance measurement, choose **AUTO TOLERANCE**. See "Measuring Jitter Tolerance" page 96.  
If you wish to perform a Jitter Transfer measurement choose **TRANSFER FUNCTION**. See "Measuring Jitter Transfer" page 99.
- 4 Choose the modulation source.  
If adding jitter to the SONET signal and **EXTERNAL** is chosen, connect the external source to the MOD IN port of the SONET Clock module. Up to 20 UI of external jitter modulation can be added at the MOD IN port.

## Jitter Operation (J1409A only)

### Setting Jitter Transmit Interface

- 5 If you choose an **INTERNAL** Modulation Source, choose the JITTER CONTROL setting required. You can choose the jitter range, jitter modulating frequency and jitter amplitude if **OFF** is chosen. If you choose **SWEPT**, the OmniBER 725 will "sweep" through the ITU-T jitter mask (G.958, G.825 or GR-253) adjusting the jitter amplitude according to the jitter frequency. With the **SWEPT** field selected, press SET on the instrument front panel for a display of the jitter mask sweep (an example is given below).

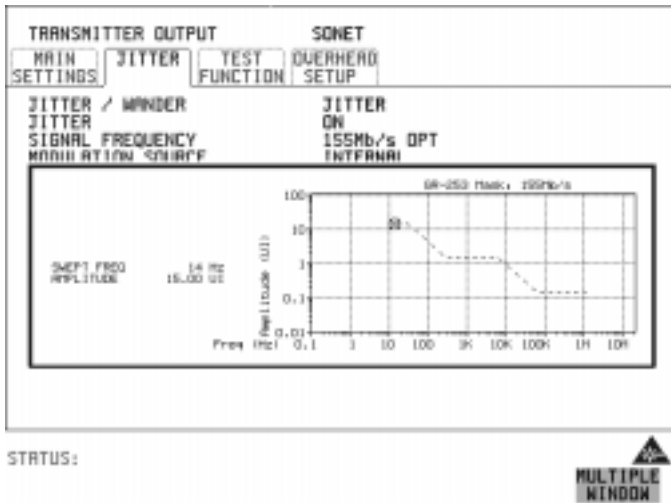

If you choose **SPOT**, you can choose the "spot" jitter frequency. The jitter amplitude is adjusted and controlled according to your jitter frequency choice.

**TIP:**

If, when using the SWEPT MASK capability, a problem occurs around a certain frequency, stop the sweep at that point by choosing **SPOT**. You can then control the "spot" jitter frequency to make closer examination of the problem.

Jitter Operation (J1409A only)  
**Setting Jitter Receive Interface**

---


## Setting Jitter Receive Interface

**Description:**  
*Model J1409A is required for Jitter operation.*

Jitter and error measurements are made simultaneously when a jitter option is fitted. Jitter measurement up to 2.5 Gb/s is also available when ATM is selected as a payload. The jitter receive interface is selected with **RECEIVE PDH/DSn JITTER** or **RECEIVE SONET JITTER** MEASUREMENT TYPE **JITTER**.

The choices made on the jitter receive interface determine the jitter measurement range, the threshold level for determining a jitter hit and which filters are used in the jitter measurement.

RECEIVER INPUT	SONET
MAIN SETTINGS	TEST FUNCTION OVERHEAD MONITOR
MEASUREMENT TYPE	JITTER
SIGNAL FREQUENCY	155Mb/s NON
RECEIVER RANGE	16 UI
HIT THRESHOLD FILTER	1.0 UI HP1
FILTER VALUES	500 Hz HP1

STATUS: 

**HOW TO:**

- 1 Choose the RECEIVER RANGE - the jitter measurement range.
- 2 Choose the HIT THRESHOLD level - if the received jitter exceeds the value chosen a jitter hit is recorded.
- 3 Choose the FILTER you wish to include in the peak to peak and RMS jitter measurement. The choices are:  
OFF, LP, HP1, HP2, 12kHz HP, LP+HP1, LP+HP2, LP+12kHz HP
- 4 If you have selected a PDH/DSn Receive Interface you can also select FILTER VERSION, O.171 or O.172/GR-499. The selection is not available with a SONET Receive Interface.



## Measuring Jitter

---

### Measuring Jitter

**Description:**  
*Model J1409A is required for Jitter operation.*

**Jitter Measurement Filters**

Jitter and error measurements are made simultaneously when a jitter option is fitted.

Cumulative and Short Term results of Jitter Amplitude and Jitter Hits are provided on the **RESULTS JITTER** display.

Graph and Text results for Jitter Transfer and Jitter Tolerance are also provided.

LP, HP1 and HP2 filters to ITU-T O.171 and O.172 /Bellcore GR-499.

Bit Rate (kb/s)	HP1 (Hz)	HP2 (kHz)	LP (kHz)	HP rms (kHz)
51840	100	20	400	12
155520	500	65	1300	12
622080	1000	250	5000	12
2488320	5000	1000	20000	12

Please note that the instrument measurement bandwidth varies depending on the Receiver Range selected (i.e. the bandwidth is reduced when not on the 1.6 UI range). If you change the Receiver Range selection check the Filter Values displayed at the bottom right of the display meet your measurement requirements.


---

#### NOTE

To obtain optimum performance while measuring jitter on optical signals ensure the signal optical power level is within the measurement window. See “Measuring Optical Power” page 76

## Jitter Operation (J1409A only)

### Measuring Jitter

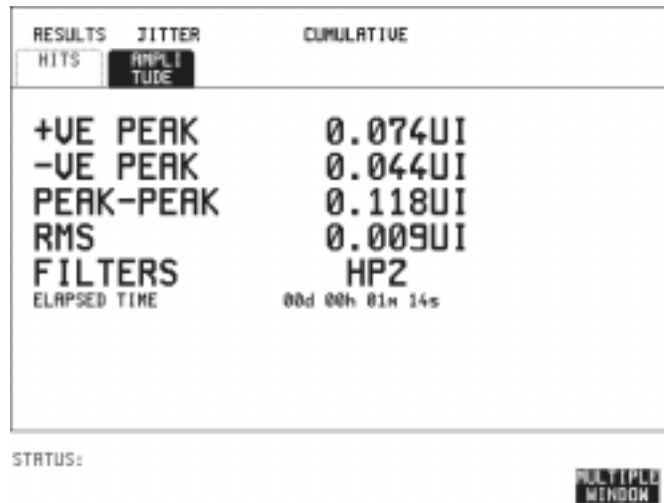

#### HOW TO:

- 1 If measuring jitter on an SONET Optical signal, check on the **RESULTS** **SONET RESULTS** **OPTICAL POWER** display that the measured optical power level falls within the white portion of the colored bar. This ensures the accuracy of the Jitter results
- 2 Set up the receive SONET interface and the receive Jitter interface. See “Setting SONET Receive Interface” page 29 and “Setting Jitter Receive Interface ” page 86
- 3 If performing a Jitter Tolerance measurement, See “Measuring Jitter Tolerance” page 96. If performing a Jitter Transfer measurement, See “Measuring Jitter Transfer” page 99.
- 4 Press **RUN/STOP** to start the measurement.
- 5 You can view the Jitter hits and Amplitude results on the **RESULTS** **JITTER** display.


---

## Setting Extended Jitter Receive Interface

**Description:**  
*Model J1409A is required for Jitter operation.*

Extended Jitter measurements are made in a jitter bandwidth of 0.1 Hz to 25 kHz. These measurements are made at the upper end of the standard wander frequency range and the lower end of the standard jitter frequency range. The extended jitter receive interface is selected with **RECEIVE PDH/DSn JITTER** or **RECEIVE SONET JITTER** MEASUREMENT TYPE **EXTENDED**.

The choices made on the jitter receive interface determine the threshold level for determining a jitter hit. The measurement Range and the Filters are not selectable.

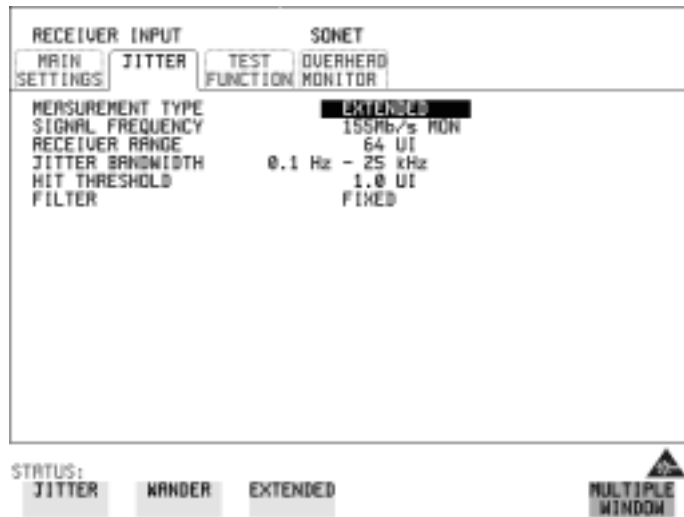

**HOW TO:**

- 1 Choose MEASUREMENT TYPE **EXTENDED**.
- 2 Choose the HIT THRESHOLD level - if the received jitter exceeds the value chosen a jitter hit is recorded.

**Measuring Extended Jitter**

**Measuring Extended Jitter**

*Description:*  
**Model J1409A is required for Jitter operation.**

Extended Jitter measurements are made at the upper end of the standard wander frequency range and the lower end of the standard jitter frequency range.

When **EXTENDED** is chosen (on the Receiver Input Jitter page) Jitter results are provided. Cumulative and Short Term results of Jitter Amplitude and Jitter Hits are provided on the **RESULTS JITTER** display. The following Table gives the Extended range receiver measurement bandwidth.


Bit Rate (kb/s)	Range	Jitter measurement bandwidth*			
		F <sub>L</sub> (Hz) lower 3dB point**	F <sub>MIN</sub> (Hz)	F <sub>MAX</sub> (kHz)	F <sub>U</sub> (kHz) upper 3dB point
51840	64	0.15	1	20	25
155520	64	0.15	1	20	25
622080	256	0.15	1	20	25
2488320	1024	0.15	1	20	20

\* The measurement accuracy is specified between F<sub>MIN</sub> and F<sub>MAX</sub> only.

\*\* Nominal value.

## Jitter Operation (J1409A only)

### Measuring Extended Jitter

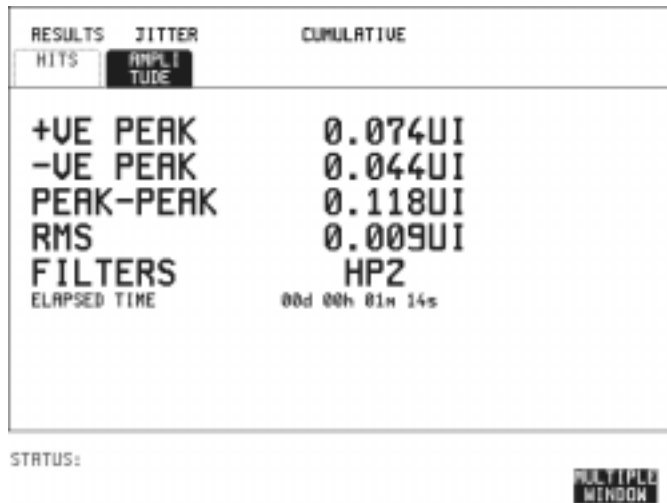

#### *HOW TO:*

- 1 If measuring Extended jitter on an SONET Optical signal, check on the **RESULTS** **SONET RESULTS** **OPTICAL POWER** display that the measured optical power level falls within the white portion of the colored bar. This ensures the accuracy of the Jitter results.
- 2 Set up the receive SONET interface and the receive Jitter interface. See "Setting SONET Receive Interface" page 29 and "Setting Extended Jitter Receive Interface" page 89.
- 3 Press **RUN/STOP** to start the measurement.


Jitter Operation (J1409A only)  
**Setting Wander Transmit Interface**

---

## Setting Wander Transmit Interface

*Description:*  
*Model J1409A is required for Wander operation.*

You can add Wander to the STS-3, OC-3, OC-12 or OC-48 SONET signal.

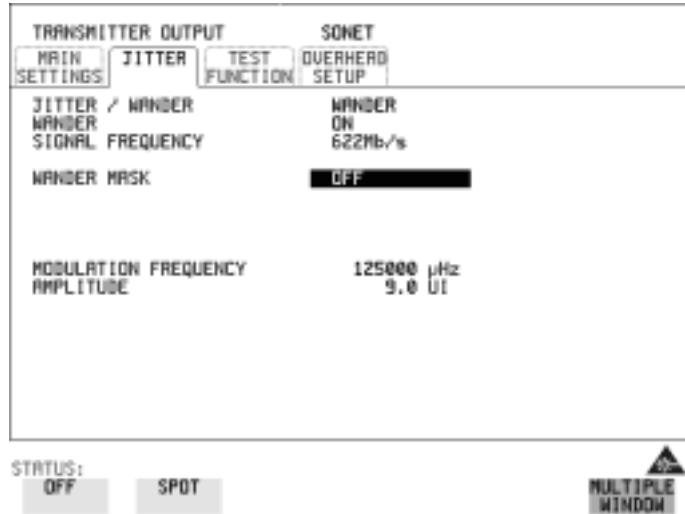

### HOW TO:

- 4 Set up the SONET transmit interface. See "Setting SONET Transmit Interface" page 24.
- 5 Choose JITTER/WANDER **WANDER**.  
If you wish to add jitter to the SONET signal, see "Setting Jitter Transmit Interface" page 84.
- 6 Choose WANDER **ON**.
- 7 Choose the WANDER MASK setting required.  
You can choose the wander modulating frequency and wander amplitude if **OFF** is chosen.  
If you choose **SPOT**, you can choose the "spot" wander frequency. The wander amplitude is adjusted and controlled according to your wander frequency choice.


Jitter Operation (J1409A only)  
**Setting Wander Receive Interface**

---

## Setting Wander Receive Interface

*Description:*  
*Model J1409A is required for Wander operation.*

You can measure Wander at all SONET rates. An external timing reference should be selected on the **SONET MAIN SETTINGS** display to ensure accurate Wander results.

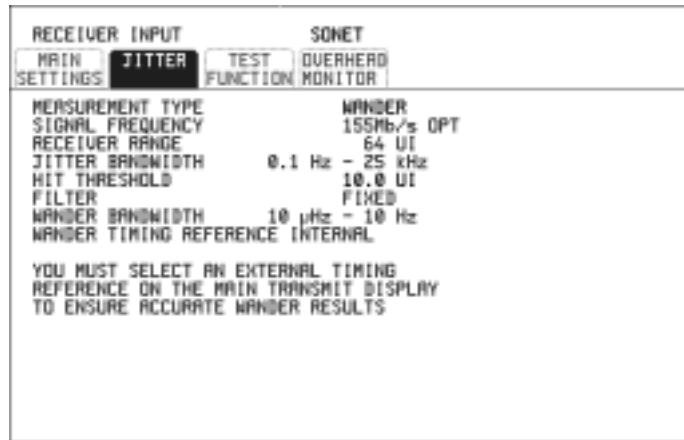

STATUS:



**HOW TO:**

- 1 Choose an external timing reference on the **TRANSMIT SONET MAIN SETTINGS** display. See, "Setting SONET Transmit Interface" page 24.
- 2 Set up the SONET receive interface. See, "Setting SONET Receive Interface" page 29.
- 3 Choose MEASUREMENT TYPE **WANDER**.
- 4 Choose the wander HIT THRESHOLD - if the received wander exceeds the value chosen a wander hit is recorded.


## Measuring Wander

**Description:**  
**Model J1409A is required for Wander operation.**

Wander is defined as the long-term variations of the significant instants of a digital signal from their ideal positions in time, where long-term implies phase oscillations of frequency less than or equal to a demarcation point that is specified for each interface rate. Refer to ANSI T1.102 for the demarcation frequencies for each digital signal.

Accurate Wander measurements require a Wander reference derived from a master timing external source. Connect your external timing source to the appropriate port on the instrument clock module. Wander results are displayed in UI or nanoseconds. Jitter Amplitude and Jitter Hits results are also available.

Problems may arise due to wrongly configured equipment running on internal clocks or at the junction of different operator's network equipment. Since the timing sources may operate at slightly different frequencies and exhibit long term frequency drift, phase difference (Wander) may occur between the incoming data and the network equipment. This causes "Bit Slips" in the network equipment buffers and results in frames being repeated or deleted thus reducing the efficiency of data transfer.

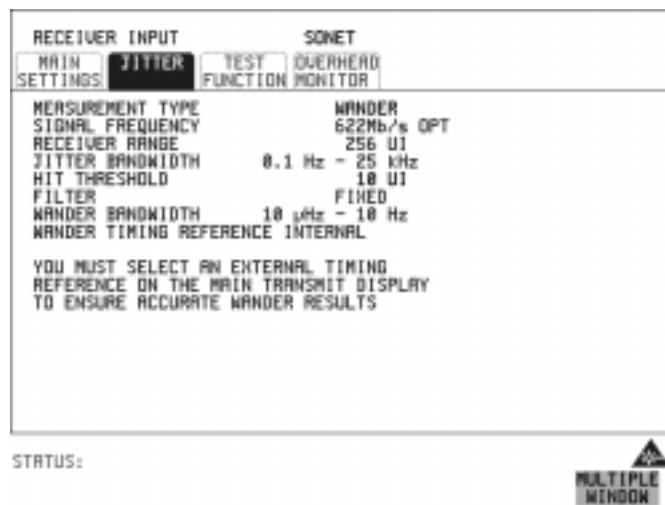



## Jitter Operation (J1409A only)

### Measuring Wander

#### HOW TO:

#### Make The Measurement

##### 1 SONET Operation Wander Reference

Select the **TRANSMIT** **SONET** **MAIN SETTINGS** display and set the CLOCK field to **EXTERNAL**. Choose the CLOCK SOURCE required from the menu provided (i.e. MTS 2M CLOCK/DATA, MTS 64k CLOCK, BITS 1.5Mb/s and 10MHz REF). Connect your external timing source to the appropriate port on the instrument clock module. See, “Setting SONET Transmit Interface” page 24.

2 If measuring wander on an SONET Optical signal, check on the **RESULTS** **SONET RESULTS** **OPTICAL POWER** display that the measured optical power level falls within the white portion of the colored bar. This ensures the accuracy of the Wander results.

3 Set up the SONET receive interface. See, “Setting SONET Receive Interface” page 29.


4 Choose MEASUREMENT TYPE **WANDER**.

5 Choose the WANDER HIT THRESHOLD level - if the received wander exceeds the value chosen a wander hit is recorded.

6 Press **RUN/STOP** to start the measurement.

#### HOW TO:

#### View the Results

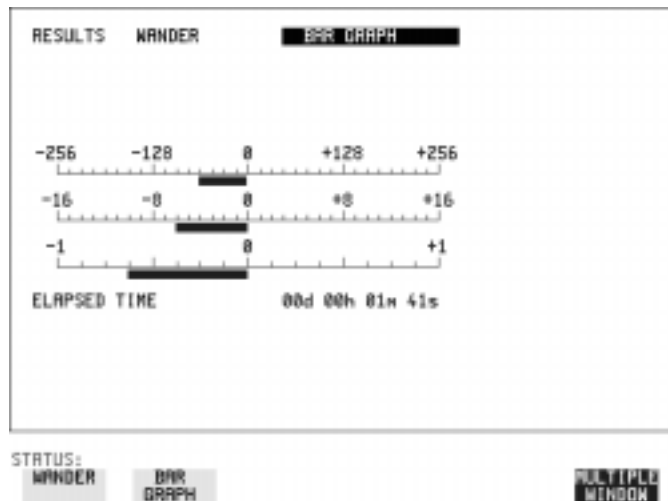

1 Choose **WANDER** on the **RESULTS** display, choose the display units required: TIME displays the wander results in nanoseconds. UI displays the wander results in Unit Intervals

## Measuring Jitter Tolerance

---

## Measuring Jitter Tolerance

**Description:**  
**Model J1409A is required for Jitter operation.**

The jitter auto tolerance feature provides jitter tolerance measurements within the relevant Bellcore mask.

SONET masks are taken from BELLCORE GR-253 -CORE.

For SDH the masks provided are those specified in ITU-T G.958, type A or B, and in ITU-T G.825.

PDH/DSn User Selectable Masks

### SONET User Selectable Masks

Line Rate	GR.253	G.825	G.958 Type A	G.958 Type B
STS-1	↳			
STS-3	↳	↳	↳	↳
STS-12	↳	↳	↳	↳
STS-48	↳	↳	↳	↳

Jitter is generated at a range of frequencies within the mask and an error measurement is made. If no errors occur (PASS), the jitter amplitude at that frequency point is increased until errors occur (FAIL) or the maximum jitter amplitude is reached. The highest jitter amplitude at which PASS occurs is plotted on the graph as the Jitter Tolerance for that jitter frequency.

### User-Programmable Masks

There are 5 user programmable masks provided allowing you to create, edit and title up to 5 jitter masks. Please refer to "Generating a New Jitter Mask " page 108 and "Changing the Parameters of a User-defined Jitter Mask " page 110 for instructions on how to generate or edit a user programmable mask.

**TIP:**

The transmitter and receiver can be set to different rates to allow testing across multiplexers, HOW TO:


### Make the Measurement

- 1 If you are performing jitter tolerance on an SONET Optical signal, check on the

## Jitter Operation (J1409A only)

### Measuring Jitter Tolerance

**RESULTS** **SONET RESULTS** **OPTICAL POWER** display that the measured optical power level falls within the white portion of the colored bar. This ensures the accuracy of the Jitter results.

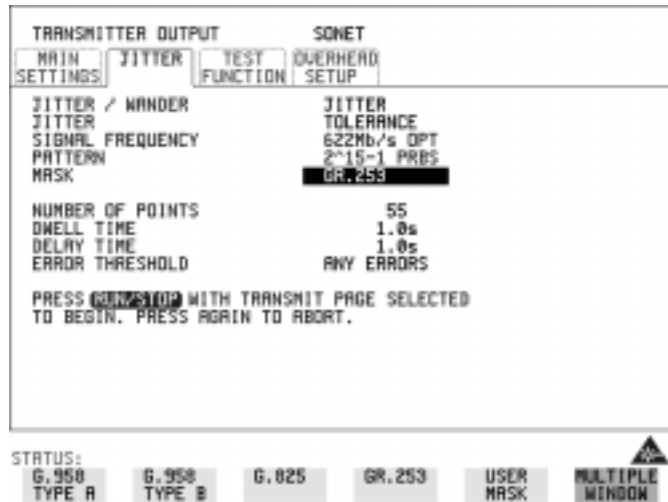


- 2 If you are performing jitter tolerance on the SONET signal, set up the SONET transmit and receive interfaces, including the required test PATTERN. See “Setting SONET Transmit Interface” page 24 and “Setting SONET Receive Interface” page 29.
- 3 Select the JITTER page and select AUTO TOLERANCE and a MASK (see display above).
- 4 Choose the NUMBER OF POINTS at which jitter is transmitted (3 to 55)
- 5 Choose the DWELL TIME - the time jitter is generated at each jitter frequency point (0.1 to 99.9 seconds).
- 6 Choose the DELAY TIME - the time delay between the jitter frequency/ amplitude being applied and the error measurement being made. This allows the network equipment to settle as jitter frequency is changed. (0.1 to 99.9 seconds).
- 7 Choose the ERROR THRESHOLD.  
If ANY ERRORS is chosen, any BIP or BIT error will result in a FAIL.  
If BIT ERRORS is chosen, choose a value between 1 and 1,000,000 to determine the bit error threshold for the jitter tolerance PASS/FAIL decision.

## Jitter Operation (J1409A only)

### Measuring Jitter Tolerance

BER>= shows the bit error ratio calculated from the bit error threshold choice and the dwell time choice.

- Press **RUN/STOP** to start the jitter auto tolerance measurement. The measurements progress can be monitored on the **TRANSMIT** display. At the end of the test the results can be viewed on the **TRANSMIT** or **RESULTS** displays. The **TRANSMIT** display is cleared when **TRANSMIT** is pressed but the results remain on the **RESULTS** display until the next jitter tolerance measurement is made.

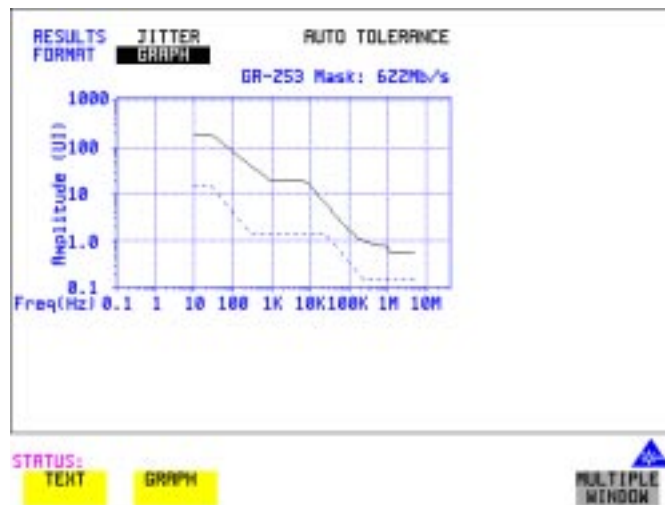

#### HOW TO:

#### View the Results

- Choose the results FORMAT.  
If **GRAPH** is chosen, a plot of the jitter tolerance results against the ITU-T mask is displayed.  
If **TEXT** is chosen, the results from which the graph is constructed are displayed, Point number, Frequency, Mask amplitude, Tolerance, Result.  
If applicable, points 13 through 55 can be viewed on pages 2 through 5.

If you wish to log the jitter tolerance results to a printer, See "Logging Jitter Tolerance Results" page 128.

## Measuring Jitter Transfer

---

### Measuring Jitter Transfer

***Description:***  
***Model J1409A is required for Jitter operation.***

With the OmniBER 725 you can perform Jitter transfer measurements at STS-1, STS-3, STS-12, STS-48, OC-1, OC-3, OC-12 and OC-48.

Jitter transfer defines the ratio of output jitter amplitude to input jitter amplitude versus jitter frequency for a given bit rate. In network equipment some of the jitter present at the input port of a regenerator will be transmitted to the output port. On networks with cascaded equipment on long trunk routes it is important to limit jitter transfer.

The jitter generator provides the stimulus for the jitter transfer measurement. Narrow band filtering is used in the jitter receiver thus allowing selection and measurement of the relevant jitter components to provide accurate and repeatable results.

The jitter transfer results are presented in graphical and tabular form.

Graphical results are plotted as Gain V Frequency.

The relevant Pass Mask is also displayed on the graph. Please refer to the OmniBER 725 Specifications book provided with your instrument for detailed information on Jitter Transfer input and pass masks.

---

#### **NOTE**

The Transmitter and Receiver must be set to the same interface rate.

## Jitter Operation (J1409A only)

### Measuring Jitter Transfer

#### **HOW TO:**

#### **Achieve the required accuracy:**

- 1 The OmniBER 725 Transmit and Receive ports must be connected back to back in order to perform a calibration cycle before making a Jitter Transfer measurement. The back to back connection depends on the type of device being tested (see the table below)

Transmitter of device to be tested	OmniBER back to back connection
Optical	Optical*
Binary	Binary
Coded Electrical	Coded Electrical

\* When performing tests on optical signals, use an attenuator to keep the optical power at the optimum level.

- 2 The OmniBER 725 must have been switched on for 1 hour before starting a calibration cycle.
- 3 The climatic conditions must remain stable from switch-on to end of measurement.
- 4 The Jitter Transfer measurement must be started within 10 minutes of completion of the Calibration.
- 5 If maximum Delay time, maximum Dwell time and maximum number of Points is selected, the accuracy specification cannot be guaranteed as the time from start of calibration to end of measurement (test period) will be approximately two hours. It is recommended that the maximum test period does not exceed 90 minutes.  
Test Period =(Delay Time + Dwell Time + 5 Seconds) X Number of Points X 2 (Calibration + Measurement).

---

#### **NOTE**

For best results a Dwell Time of 20 seconds and Delay Time of 10 seconds are recommended.

## Jitter Operation (J1409A only)

### Measuring Jitter Transfer

#### HOW TO:

#### Perform Jitter Transfer Calibration

- 1 The calibration setup depends on the device being tested, select the appropriated settings from the following table.

---

#### CAUTION

---

If OC-1/3/12/48 SONET Optical Jitter Transfer is required, a 15 dB attenuator must be connected between the IN and OUT ports of the Optical Interface module.


Transmitter of device to be tested	Calibration Setup
Optical	<ul style="list-style-type: none"><li>• Connect the OmniBER Optical Interface OUT (1550 or 1310 nm) port to the IN port (via a suitable 15 dB optical attenuator).</li><li>• Check that the measured optical power level falls within the white portion of the coloured bar display on the <b>RESULTS</b> <b>SONET RESULTS</b> <b>OPTICAL POWER</b>. This ensures the accuracy of the Jitter results.</li><li>• Set up the Transmit and Receive interfaces for OC-1, OC-3, OC-12 or OC-48, as appropriate. See "Setting SONET Transmit Interface" page 24, "Setting SONET Receive Interface" page 29.</li></ul>
Binary	<ul style="list-style-type: none"><li>• Connect the OmniBER Binary Interface Receive <u>CLOCK</u>, <u>CLOCK</u>, <u>DATA</u> and <u>DATA</u> ports to the respective Transmit <u>CLOCK</u>, <u>CLOCK</u>, <u>DATA</u> and <u>DATA</u> ports.</li><li>• Set up the Transmit and Receive interfaces for STS-1 BINARY, STS-3 BINARY, STS-12 BINARY or STS-48 BINARY, as appropriate. See "Setting SONET Transmit Interface" page 24, "Setting SONET Receive Interface" page 29.</li></ul>
Coded Electrical	<ul style="list-style-type: none"><li>• Connect the OmniBER Multirate Analyzer DATA IN (52/155 Mb/s) and DATA OUT (52/155 Mb/s) ports.</li><li>• Set up the Transmit and Receive interfaces for STS-1 or STS-3.</li></ul>

- 2 Set up the Receive Jitter interface. See "Setting Jitter Receive Interface " page 86.

## Jitter Operation (J1409A only)

### Measuring Jitter Transfer

- 3 Choose JITTER **TRANSFER FUNCTION** on the **TRANSMIT** **JITTER** display.

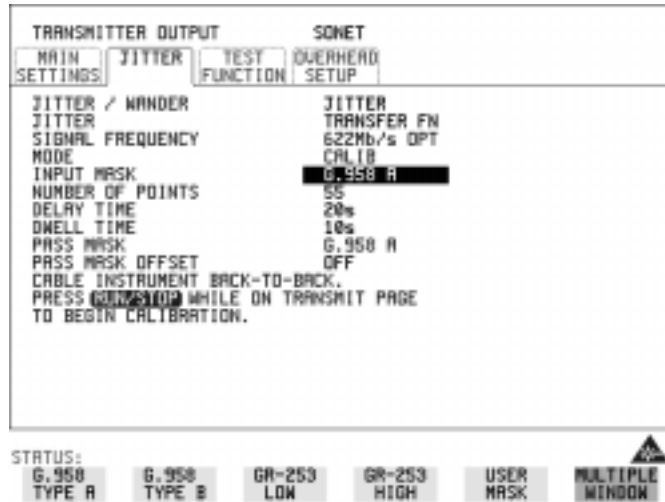

- 4 Choose the INPUT MASK.  
If measuring SONET jitter transfer, the Bellcore GR-253 mask can be High or Low. You can also select from 1 of 5 user programmable jitter masks see (**USER**) paragraph below.  
GR-253 Low masks cover the lower frequency band.  
GR-253 High masks cover the upper frequency band.  
  
If **USER** is chosen, choose the mask jitter frequencies, F1, F2, F3 and F4, and mask jitter amplitudes A1 and A2, see "Changing the Parameters of a User-defined Jitter Mask " page 110 for instructions on how to change the parameters of a user mask and "Generating a New Jitter Mask " page 108.
- 5 Choose the NUMBER OF POINTS at which jitter is transmitted (1 to 55)
- 6 Choose the DELAY TIME - the time delay between the jitter frequency/ amplitude being applied and the error measurement being made. This allows the network equipment to settle as jitter frequency is changed (5 to 30 seconds).
- 7 Choose the DWELL TIME - the Dwell Time is the test period spent at each amplitude/frequency point (5 to 30 seconds). The result recorded is the maximum peak-to-peak jitter detected during the Dwell Time test period.
- 8 Select a PASS MASK if a choice is given.



## Jitter Operation (J1409A only)

### Measuring Jitter Transfer

#### Pass Mask Offset

- 9 An offset in the range -2.00 dB to +2.00 dB in steps of 0.01 dB can be added to the selected Pass Mask. Select PASS MASK OFFSET and use the edit keys to select an offset. Select **END EDIT** when finished selecting an offset.
- 10 With MODE set to **CALIB** press **RUN/STOP** to start the calibration. The Jitter Transfer display is replaced by an information display for the duration of the Calibration.  
A bar graph showing the progress of the calibration will appear on the display. When the Calibration is complete, the display will revert to the **TRANSMIT** **JITTER** display.



**Measuring Jitter Transfer**

**HOW TO:**                      **Start the Jitter Transfer Measurement**

**NOTE**

Changing any of the OmniBER receiver settings after it has been calibrated will invalidate the calibration. The Jitter Transfer measurement must be started within 10 minutes of the completion of calibration.

- 1 After the CALIBRATION is completed, remove the back to back connection then connect the device to be tested (see the table below).

Receiver of device to be tested	Transmitter of device to be tested	Measurement Setup
Optical	Optical	<ul style="list-style-type: none"> <li>• Connect the OmniBER Optical Interface OUT (1550 or 1310 nm) port to the optical input of the device to be tested.</li> <li>• Connect the optical output of the device to be tested to the OmniBER Optical Interface IN port.</li> </ul>
Binary	Optical	<ul style="list-style-type: none"> <li>• Connect the appropriate OmniBER Binary Interface Transmit CLOCK, <math>\overline{\text{CLOCK}}</math>, DATA and <math>\overline{\text{DATA}}</math> ports to the respective binary inputs of the device to be tested.</li> <li>• Connect the optical output of the device to be tested to the OmniBER Optical Interface IN port.</li> <li>• Set up the Transmit interface of the OmniBER for STS-1 BINARY, STS-3 BINARY, STS-12 BINARY or STS-48 BINARY, as appropriate. See “Setting SONET Transmit Interface” page 24.</li> </ul>
Optical	Binary	<ul style="list-style-type: none"> <li>• Connect the OmniBER Optical Interface OUT (1550 or 1310 nm) port to the optical input of the device to be tested.</li> <li>• Connect the binary outputs of the device to be tested to the appropriate OmniBER Binary Interface Receive CLOCK, <math>\overline{\text{CLOCK}}</math>, DATA and <math>\overline{\text{DATA}}</math> ports.</li> <li>• Set up the Transmit interface of the OmniBER for OC-1, OC-3, OC-12 or OC-48, as appropriate. See “Setting SONET Transmit Interface” page 24.</li> </ul>

## Jitter Operation (J1409A only)

### Measuring Jitter Transfer

Receiver of device to be tested	Transmitter of device to be tested	Measurement Setup
Binary	Binary	<ul style="list-style-type: none"><li>• Connect the appropriate OmniBER Binary Interface Transmit CLOCK, CLOCK, DATA and DATA ports to the respective binary inputs of the device to be tested.</li><li>• Connect the binary outputs of the device to be tested to the appropriate OmniBER Binary Interface Receive CLOCK, CLOCK, DATA and DATA ports.</li></ul>
Coded Electrical	Coded Electrical	<ul style="list-style-type: none"><li>• Connect the OmniBER Multirate Analyzer DATA OUT (52/155 Mb/s) to the STS-1 or STS-3 electrical input of the device to be tested.</li><li>• Connect the STS-1 or STS-3 electrical output of the device to be tested to the OmniBER Multirate Analyzer DATA IN (52/155 Mb/s) ports.</li></ul>

- 2 Choose MODE **MEASURE** on the **TRANSMIT** **JITTER** display and press **RUN/STOP**.  
The measurement's progress can be monitored on the **TRANSMIT** display.

---

#### NOTE

If the instrument is set up to transmit an optical signal, it also outputs the binary equivalent via the Binary Interfaces module. If you then change the instrument settings to transmit a binary signal, the instrument will continue to output both the binary and optical signals.

If a power interrupt was now to occur, i.e. the instrument switches off and then on again. When the power is re-applied to the instrument, the optical signal is disabled (for safety reasons), but the binary signal continues to transmit. If you want to transmit both signal types after a power interrupt, you will need to manually re-select the optical signal.

---

#### HOW TO:

##### View the Results

- 1 Select **RESULTS**, **JITTER** and **TRANSFER FN**, then choose the results FORMAT.  
If **GRAPH** is chosen, a plot of the jitter transfer results against the ITU-T mask is displayed.  
If **TEXT** is chosen, the results from which the graph is constructed are displayed: Point number, Frequency, Mask amplitude (dB), Jitter Gain (dB), Result.  
If applicable, points 13 through 55 can be viewed on pages 2 through 5.

## Jitter Operation (J1409A only)

### Measuring Jitter Transfer

RESULTS		JITTER		TRANSFER FN	
FORMAT	TEST	PAGE			
GB24 Mask: 053					
Pt	Frequency	Ampl	Mask(dB)	Gain(dB)	RsIt
34	6491	0.46	-36.15	0.00	FAIL
35	7899	0.38	-37.05	0.00	FAIL
36	9612	0.31	-39.55	0.01	FAIL
37	11696	0.26	-41.25	0.00	FAIL
38	14231	0.21	-42.94	0.00	FAIL
39	17317	0.17	N/A	0.01	PASS
40	21072	0.14	N/A	0.02	PASS
41	25640	0.12	N/A	0.01	PASS
42	31200	0.10	N/A	0.01	PASS
43	37964	0.10	N/A	0.00	PASS
44	45195	0.10	N/A	0.00	PASS
45	56211	0.10	N/A	0.00	PASS

STATUS: TEXT GRAPH MULTIPLE WINDOW

2 If **GRAPH** is chosen, choose the SCALE required.

**WIDE** provides a vertical axis range of +5 to -60 dB and is recommended for viewing the high frequency portion of the graph. This allows a clearer view of the difference between the actual result and the ITU-T pass mask.

**NARROW** provides a vertical axis range of +3 to -3 dB and is recommended for viewing the low frequency portion of the graph. This allows a clearer view of the difference between the actual result and the ITU-T pass mask.

## Jitter Operation (J1409A only)

### Measuring Jitter Transfer



- 3 If you wish to log the jitter tolerance results to a printer see “Logging Jitter Transfer Results” page 130.

---

## Generating a New Jitter Mask

*Description:*  
*Model J1409A is required for Jitter operation.*

This feature enables the user to quickly generate a new mask, without having to set each point in the mask. The procedure is as follows:

- 1 Select **OTHER**, **JITTER MASKS**, you will have to select **MORE** to access the JITTER MASKS key.
- 2 Check the mask LOCK is set to **OFF**, then select a USER MASK NUMBER (from 1 to 5). Note that it is not possible to edit a User Mask when there is a User Mask currently in use (i.e. when running a measurement). When this occurs the LOCK field displays “ON (IN USE)”.

- 3 Position the cursor on DISPLAY and select **GENERATE MASK**.
- 4 Position the cursor on POINTS and set the required number of points in the mask.



- 5 Using the **↑**, **↓** and edit keys setup the amplitude and frequency of the user-selectable points given on the display (i.e. A1, A2 fa, f0, ft, fb).
- 6 Position the cursor on the UPDATE SELECTED USER MASK field and select **GENERATE**.



---

### NOTE

A status message “Illegal mask parameters” will occur if the specified frequency and amplitude points are invalid. Check that the frequency points are in ascending order and that the A1 and A2 amplitudes are valid for the specified frequencies.

## Jitter Operation (J1409A only)

### Generating a New Jitter Mask

#### 7 Select DISPLAY **MASK POINTS**.

Note that the GENERATE action has resulted in a new mask being calculated and placed into the frequency and amplitude fields. Further editing can now take place as required, using the edit keys.

For example, selecting NUMBER OF POINTS will allow you to change the number of points in the mask. Selecting PAGE enables you to select pages 1 to 5 and edit the frequency and amplitude of each point on the mask.

FUNCTION		JITTER MASKS			
USER MASK NUMBER		1			
LOCK		OFF			
DISPLAY		<b>MASK POINTS</b>			
NUMBER OF POINTS		50			
PAGE		1			
	FREQ(Hz)	AMP(U)	FREQ(Hz)	AMP(U)	
01	9989	1.30	07	23277	1.30
02	11582	1.30	08	26882	1.30
03	13243	1.30	09	30860	1.30
04	15248	1.30	10	35533	1.30
05	17557	1.30	11	40913	1.30
06	20216	1.30	12	47108	1.30

STATUS: MASK TITLE MASK POINTS GENERATE MASK

MULTIPLE WINDOW

#### 8 The new edits are automatically saved into the mask selected. There is no need to generate a new mask.

### Locking the Mask

To prevent accidental changes to the masks when finished set the LOCK to **ON**.

---

## Changing the Parameters of a User-defined Jitter Mask

*Description:*  
*Model J1409A is required for Jitter operation.*

- 1 Select **OTHER**, and set FUNCTION to **JITTER MASKS**; you will have to select **MORE** to access the JITTER MASKS key.

### To Edit a User Mask Title

- 2 Check the Mask LOCK is set to **OFF**, then select USER MASK NUMBER, and select the appropriate user mask (1 to 5).
- 3 Position the cursor on DISPLAY, then select **MASK TITLE**.
- 4 Position the cursor on the MASK (1 to 5) to be edited, and enter a new title using the edit keys.








## Jitter Operation (J1409A only)

### Changing the Parameters of a User-defined Jitter Mask

#### To Edit Mask Points

- 1 Position the cursor on DISPLAY and select **MASK POINTS**.
- 2 Select NUMBER OF POINTS and using the ,  keys, and edit keys (INCREASE/DECREASE DIGIT) select the number of points in the mask (maximum 55) and the frequency and amplitude at each point. Use the PAGE field to switch between pages to access all 55 points in the mask.



The screenshot shows the 'JITTER MASKS' menu. At the top, 'FUNCTION' is 'JITTER MASKS'. Below that, 'USER MASK NUMBER' is '2', 'LOCK' is 'OFF', and 'DISPLAY' is 'MASK POINTS'. 'NUMBER OF POINTS' is '55' and 'PAGE' is '1'. A table of mask points is displayed with columns for 'FREQ(Hz)' and 'AMP(U)' for two columns of points. Below the table, there are three yellow buttons: 'MASK TITLE', 'MASK POINTS', and 'GENERATE MASK'. At the bottom right, there is a 'MULTIPLE WINDOW' button with a triangle icon.

	FREQ(Hz)	AMP(U)		FREQ(Hz)	AMP(U)
01	200	1.50	07	592	1.27
02	240	1.50	08	710	1.06
03	287	1.50	09	850	0.89
04	344	1.50	10	1019	0.75
05	412	1.50	11	1221	0.63
06	494	1.50	12	1463	0.52

- 3 Note that it is not possible to edit a user mask when a user mask is currently in use (i.e. a measurement is running). When this occurs the LOCK field displays "ON (IN USE)".
- 4 The new edits are automatically saved into the mask selected. There is no need to generate a new mask.

Jitter Operation (J1409A only)

## **Changing the Parameters of a User-defined Jitter Mask**

- “Saving Graphics Results to Instrument Store” page 114
- “Recalling Stored Graph Results” page 115
- “Viewing the Bar Graph Display” page 117
- “Viewing the Graphic Error and Alarm Summaries” page 119
- “Logging Graph Displays” page 121
- “Logging Results” page 123
- “Logging on Demand” page 126
- “Logging Jitter Tolerance Results” page 128
- “Logging Jitter Transfer Results” page 130
- “Logging Results to Parallel (Centronics) Printer” page 132
- “Logging Results to GPIB Printer” page 133
- “Logging Results to Internal Printer” page 134
- “Logging Results to RS-232-C Printer” page 135
- “Logging Data to Disk ” page 136
- “Printing Results from Disk” page 137
- “Connecting a Printer to a Parallel Port” page 138
- “Changing Internal Printer Paper” page 139
- “Cleaning Internal Printer Print Head” page 142

---


## **Storing, Logging and Printing**

## Saving Graphics Results to Instrument Store

### *Description*

Graphical representation of measurement results is very useful particularly during a long measurement period. It provides an overview of the results and can be printed for record keeping.

Graphics results can be stored in instrument graph storage or on floppy disk.

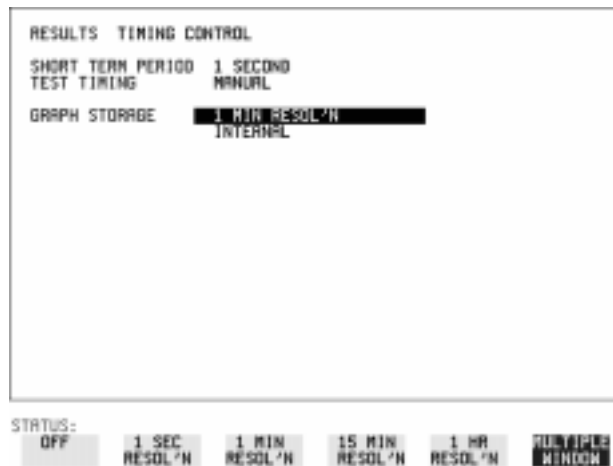

### *HOW TO:*

- 1 Before starting your measurement, choose the GRAPH STORAGE resolution and location.  
The resolution chosen affects the ZOOM capability when viewing the bar graphs. If 1 MIN is selected, 1 MIN/BAR, 15 MINS/BAR and 60 MINS/BAR are available. If 15 MINS is selected, 15 MINS/BAR and 60 MINS/BAR are available. If 1 HOUR is selected, 60 MINS/BAR is available.  
The graphics results can be stored in the instrument - INTERNAL or stored on DISK. Storage to disk will use a default file name unless a file name is specified on the **OTHER FLOPPY DISK** display. See "Saving Graphical Results to Disk" page 152.
- 2 Press **RUN/STOP** to start the measurement. Graphical results will be stored in the chosen location.

---

## Recalling Stored Graph Results



### Description

Results stored from a previous measurement can be recalled to the graphics displays for viewing and printing.

STORE	STORE DATE	STORE TIME	TEST DURATION	STORE USE
DISK				
-9				
-8				
-7				
-6				
-5				
-4				
-3				
-2	10-JUL-1997	15:20	16h 20m 34s	2%
-1	11-JUL-1997	07:50	00h 01m 04s	<1%
LAST	12-JUL-1997	07:51	00h 01m 19s	11%
STORAGE 1 SEC			TOTAL USED	2%
RESOL'N COMPRESSED			RAM FREE	98%
FREE STORE 19626 EVENTS				

STATUS:  
GRAPH RESULTS    TEXT RESULTS    DELETE STORE    DELETE ALL    **CONFIRM WINDOW**



### HOW TO:

- 1 If currently viewing the bar graph display, select **TEXT RESULTS** then **STORE STATUS**. If currently viewing the error or alarm summary, select **STORE STATUS**.
- 2 Using  and , move the highlighted cursor to the store location which contains the required results.  
If the required results are stored on Disk, move the highlighted cursor to DISK and choose RECALL GRAPHICS on the FLOPPY DISK display. See "Recalling Graphics Results from Disk" page 154.
- 3 Choose **GRAPH RESULTS** if you wish to view the bar graphs.  
The display will change to the bar graph display of the highlighted results.
- 4 Choose **TEXT RESULTS** if you wish to view the error and alarm Summaries.  
The display will change to the text results display of the highlighted results.  
**DELETE STORE** deletes the results in the highlighted store.  
If **DELETE ALL** is chosen, a **CONFIRM DELETE** ; **ABORT DELETE** choice prevents accidental deletion of all the stored results.

## Storing, Logging and Printing

### Recalling Stored Graph Results

The top row of the display comprises five fields:

<b>Store</b>	Memory location in which the displayed bar graph data is stored. Move the highlighted cursor, to the STORE location desired, using  and  .
<b>Start Date</b>	The start date of the test, which produced the stored results.
<b>Start Time</b>	The start time of the test, which produced the stored results.
<b>Test Duration</b>	The duration of the test, which produced the stored results.
<b>Store Use</b>	The percentage (%) of the overall storage capacity occupied by each set of stored results. The TOTAL percentage used and the percentage still FREE is provided at the bottom of the STORE USE column.

---

## Viewing the Bar Graph Display

### Description

All the graphic results obtained during the measurement are available for viewing. Identify a period of interest and zoom in for more detailed examination.



### HOW TO:

- 1 To view the current bar graphs, press **GRAPH** and use **CHANGE UPPER** and **CHANGE LOWER** to obtain the bar graphs required. Press **SET** to obtain a choice of options.
- 2 To view previously stored graphs, see "Recalling Stored Graph Results " page 115.
- 3 For more detailed inspection of the bar graph, position the cursor centrally within the area of interest using **→**, **←** and select **ZOOM IN** to reduce the time axis to 15 MINS/BAR. This is only possible if the graphics results were stored with a STORAGE resolution of 1 SEC,1 MINS or 15 MINS.  
For further reduction of the time axis to 01 MINS/BAR or 01 SECS/BAR, position the cursor centrally within the area of interest and select **ZOOM IN** until the required time axis is obtained.



The top row of the display comprises three fields:

- Store** Memory location in which the displayed bar graph data is stored. Store can only be changed when the status of stored results is displayed. See "Recalling Stored Graph Results " page 115.
- Zoom** The width, in minutes, of each "bar" in the bar graph, controlled

Storing, Logging and Printing  
**Viewing the Bar Graph Display**

by **ZOOM IN** / **ZOOM OUT**.

**Cursor**

The cursor position in terms of time and date, controlled by  and . The cursor position changes in steps of 1 second, 1 minute, 15 minutes or 60 minutes dependent upon the ZOOM setting. The cursor is physically located between the two graphs.



---

## Viewing the Graphic Error and Alarm Summaries

**Description**

The error and alarm summaries of the measurement chosen are displayed on the **TEXT RESULTS** display. The error summary or alarm summary can be viewed at any time.

**HOW TO:**

- 1 To view the error or alarm summary associated with the current bar graphs, press **GRAPH** then **TEXT RESULTS**.
- 2 To view the error or alarm summary associated with previously stored bar graphs, see "Recalling Stored Graph Results " page 115.
- 3 To view the Alarms which have occurred during the measurement, select **ALARM SUMMARY**. Use **NEXT SUMMARY** to view the SONET Alarm Summaries in turn if applicable.
- 4 To view the Errors which have occurred during the measurement select **ERROR SUMMARY**. Use **NEXT SUMMARY** to view the SONET Error Summaries in turn if applicable.

## Storing, Logging and Printing

### Viewing the Graphic Error and Alarm Summaries

The top row of the display comprises three fields:

<b>Store</b>	Memory location in which the bar graphs, error summary and alarm summary are stored. Store can only be changed when the status of stored results is displayed. See "Recalling Stored Graph Results " page 115.
<b>Start</b>	The start time and date of the test, that produced the displayed results.
<b>Stop</b>	The stop time and date of the test, that produced the displayed results.

---

## Logging Graph Displays

### *Description*

The 'bar graphs' and 'error and alarm summaries' can be logged to the disk for printing at a later date or logged to an internal printer if option 602 is fitted. If Option 601, Remote Control, is fitted, the 'bar graphs' and 'error and alarm summaries' can be logged to an external DeskJet printer at the end of the test period. If a printer is not immediately available, the graphics results remain in memory and can be logged at a later time when a printer becomes available. Suitable HP printers are the HP 660, HP 690C, HP 500 or HP 400.



### *HOW TO:*

#### Log to an External Printer

- 1 Connect an external RS-232-C HP printer to the OmniBER 725 RS232 port. See "Logging Results to RS-232-C Printer " page 135 or connect an external HP-IB HP printer to the OmniBER 725 HP-IB port. See "Logging Results to GPIB Printer " page 133 or connect a Parallel DeskJet printer to the OmniBER 725 Parallel port. See "Logging Results to Parallel (Centronics) Printer " page 132.
- 2 Make the required selections on the **OTHER LOGGING** display: Set LOGGING SETUP to **DEVICE**, then set LOGGING PORT [HPIB] or [RS232] or [PARALLEL]. Now set the LOGGING SETUP field to **CONTROL** and set LOGGING to **ON**.
- 3 To log the Error and Alarm summaries, the displayed Bar graphs and the Alarm

## Storing, Logging and Printing

### Logging Graph Displays

graph to the printer, choose **PRINT** on the bar graph display.

- 4 Choose to confirm or stop the print.  
To confirm the print and only print the portion of the graph displayed and the summaries choose **THIS SCREEN**.  
To confirm the print and print the graph for the whole measurement period and the summaries choose **CURSOR TO END**.  
To stop the print choose **ABORT**.
- 5 To log the selected Error and Alarm summaries to the printer, choose **PRINT** on the Text Results display.

#### *HOW TO:*

#### **Log to the Disk Drive**

- 1 Insert a floppy disk in the disk drive.
- 2 Choose LOGGING PORT **DISK** on the **OTHER LOGGING** display.  
Enter a filename on the **OTHER FLOPPY DISK** display. See "Storing/Retrieving Data to/from Disk " page 151.
- 3 To log the Error and Alarm summaries, the displayed Bar graphs and the Alarm graph to the disk, choose **PRINT** on the bar graph display.
- 4 Choose to confirm or stop the print.  
To confirm the print and only print the portion of the graph displayed and the summaries choose **THIS SCREEN**.  
To confirm the print and print the graph for the whole measurement period and the summaries choose **CURSOR TO END**.  
To stop the print choose **ABORT**.
- 5 To log the selected Error and Alarm summaries to the disk, choose **PRINT** on the Text Results display.

---

## Logging Results

### *Description*

#### **Test Period Logging**

If degradations in system performance are observed at an early stage, then the appropriate remedial action can be taken to maximize circuit availability and avoid system crashes. Test period logging allows you to monitor the error performance of your circuit. At the end of the test period the selected results are logged. Results can be logged at regular intervals during the test period by selecting a LOGGING PERIOD of shorter duration than the test period. An instant summary of the results can be demanded by pressing **PRINT NOW** without affecting the test in progress.

#### **Error Event Logging**

Manual tracing of intermittent faults is time consuming. Error event logging allows you to carry out unattended long term monitoring of the circuit. Each occurrence of the selected error event is logged.

The results obtained during the test are retained in memory until they are overwritten by the next set of results. The results can be logged at any time during the test period and at the end of the test period. The results required are selected using **OTHER LOGGING LOGGING SETUP CONTROL**.

Any Alarm occurrence results in a timed and dated message being logged.

BER and Analysis results can be selected by the user.

Cumulative and Period versions of the results are calculated and can be selected by the user.

**Period**                    The results obtained over a set period of time during the test.  
The Period is defined by the LOGGING PERIOD selection.

**Cumulative**            The results obtained over the time elapsed since the start of the test.

The results can be logged to the following devices, selectable using **OTHER LOGGING LOGGING SETUP DEVICE**:

- Optional Internal printer fitted into the instrument front cover (Option 602)
- External HP-IB printer (option 601)
- External RS-232-C printer (option 601)

## Storing, Logging and Printing

### Logging Results

- External Parallel Port printer (option 601)
- Internal Disk Drive

FUNCTION		LOGGING
LOGGING SETUP		CONTROL
LOGGING PERIOD		ON
RESULTS LOGGED		USER PROGRAM
WHEN		10 MINS
CONTENT		SELECTED
LOG ERROR SECONDS		PERIOD EC>0
LOG AT END OF TEST		ER & ANAL
LOG ON DEMAND		PER & CUMUL
		ON
		ALL RESULTS
		RESULTS

STATUS-  
STORED SETTINGS    SETTINGS CONTROL    FLOPPY DISK    LOGGING    MORE .....    MULTIPLE WINDOW

#### HOW TO:

- 1 Choose LOGGING [ON] - enables the logging of results and alarms.
- 2 Choose LOGGING PERIOD - determines how regularly the results and alarms are logged.  
USER PROGRAM provides a choice of 10 minutes to 99 hours.
- 3 Choose RESULT LOGGED - allows you to log all results to or choose only those results you require.
- 4 Choose WHEN - allows you to choose to only log when the error count for the logging period is greater than 0. If the error count is 0 then the message NO BIT ERRORS is displayed.
- 5 Choose CONTENT - allows you a choice of error results to be logged.  
Error Results, Analysis or Error and Analysis (ER & ANAL)  
and  
Period, Cumulative or Period and Cumulative (PER & CUMUL).
- 6 If LOG ERROR SECONDS [ON] is chosen a timed and dated message is logged each time an error second occurs (excessive occurrences of error seconds during the logging period will result in heavy use of printer paper).
- 7 Choose the logging DEVICE.  
If RS232 is chosen, see "Logging Results to RS-232-C Printer " page 135.  
If GPIB is chosen, see "Logging Results to GPIB Printer " page 133.  
If PARALLEL is chosen, see "Logging Results to Parallel (Centronics) Printer " page 132.

## Storing, Logging and Printing

### **Logging Results**

If DISK is chosen, see “Storing/Retrieving Data to/from Disk” page 151.

If Option 602, Internal Printer, is fitted and INTERNAL is chosen, see "Logging Results to Internal Printer " page 134.


---

## Logging on Demand

### *Description*

When **PRINT NOW** is pressed the chosen results are logged to the chosen logging device. The choice of results for logging is:

- RESULTS SNAPSHOT - last recorded measurement results
- OVERHEAD SNAPSHOT - last recorded overhead values of the chosen STS-3
- OVERHEAD CAPTURE - Overhead Capture display
- SCREEN DUMP - allows logging of the chosen display
- POINTER GRAPH - Pointer Graph display
- SONET TRIBUTARY SCAN - SONET Tributary Scan display
- SONET ALARM SCAN - SONET Alarm Scan display
- SELFTTEST FAILS - Last recorded selftest failures

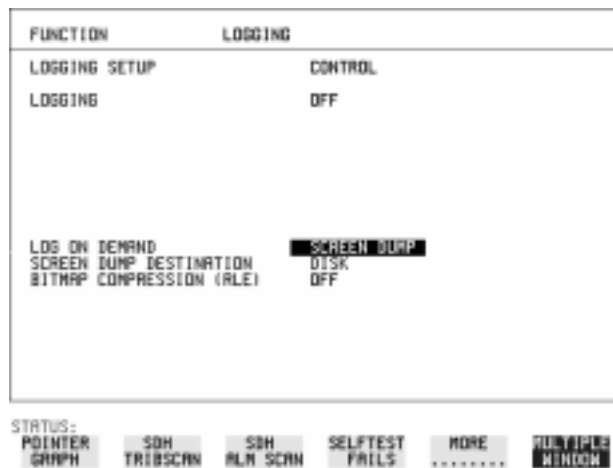

### **HOW TO:**

- 1 Choose LOG ON DEMAND to determine results to be logged when **PRINT NOW** is pressed.  
SCREEN DUMP allows you to log the selected display when **PRINT NOW** is pressed. (Logging or Disk displays cannot be logged using this feature).
- 2 Choose the logging DEVICE.  
If RS232 is chosen, see "Logging Results to RS-232-C Printer " page 135.  
If GPIB is chosen, see "Logging Results to GPIB Printer " page 133.  
  
If PARALLEL is chosen, see "Logging Results to Parallel (Centronics) Printer " page 132.



## Storing, Logging and Printing

### **Logging on Demand**

If DISK is chosen, see “Storing/Retrieving Data to/from Disk” page 151.

If Option 602, Internal Printer, is fitted and INTERNAL is chosen, see "Logging Results to Internal Printer " page 134.


---

## Logging Jitter Tolerance Results

### *Description*

The jitter auto tolerance feature provides jitter tolerance measurements within the relevant ITU-T mask BELLCORE GR-253 for SONET (ITU-T G.958 and G.825 for SDH).

You can log the jitter auto tolerance results to a printer for record keeping purposes. The **GRAPH** version or the **TEXT** version of the jitter tolerance results can be logged to an external printer.

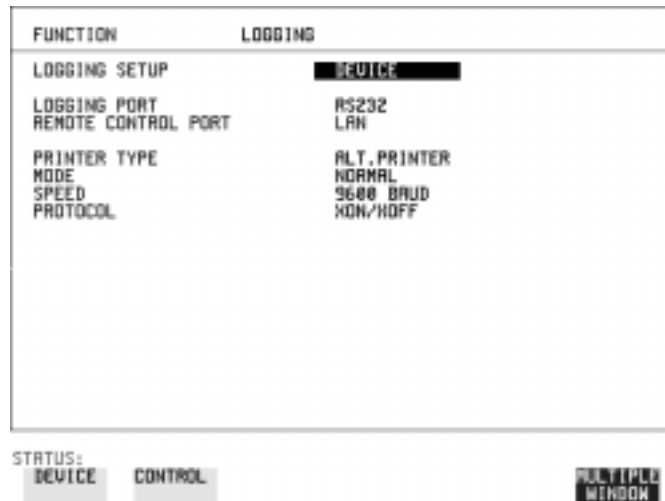

### *HOW TO:*

- 1 If logging to a Parallel Port (Centronics) printer, connect the printer to the PARALLEL port. See "Connecting a Printer to a Parallel Port " page 138.
- 2 If a non-HP printer is connected choose **ALT. PRINTER** .
- 3 Choose 80 character column width ( **NORMAL** ) or 40 character column width ( **COMPRESS** ) according to the capabilities of your printer.
- 4 If logging to an GPIB printer, connect a GPIB printer to the GPIB port. See "Logging Results to GPIB Printer " page 133.
- 5 If logging to an RS-232-C printer, connect an RS-232-C printer to the RS-232-C port. See "Logging Results to RS-232-C Printer " page 135.
- 6 If a non HP printer is connected, choose **ALT. PRINTER** .
- 7 Choose 80 character column width ( **NORMAL** ) or 40 character column width

## Storing, Logging and Printing

### Logging Jitter Tolerance Results

- ( **COMPRESS** ) according to the capabilities of your printer.
- 8 Choose the same baud SPEED as chosen on your printer.
  - 9 Choose the PROTOCOL required for the transfer of logging data.
  - 10 Choose LOGGING **ON** on the LOGGING SETUP **CONTROL** display.
  - 11 Choose **GRAPH** on the **RESULTS** **AUTO TOLER** display if you wish to log the graph to the printer.  
Choose **TEXT** and the PAGE number on the **RESULTS** **AUTO TOLER** display if you wish to log the text results to the printer.
  - 12 Press **PRINT NOW** to log the chosen results to the printer.

## Logging Jitter Transfer Results

### *Description*

The jitter transfer feature provides jitter transfer measurements within the relevant ITU-T mask, GR-253 for SONET.

You can log the jitter transfer results to a printer for record keeping purposes. The **GRAPH** version or the **TEXT** version of the jitter transfer results can be logged to an external printer.

FUNCTION	LOGGING
LOGGING SETUP	<b>DEVICE</b>
LOGGING PORT	RS232
REMOTE CONTROL PORT	LAN
PRINTER TYPE	ALT. PRINTER
MODE	NORMAL
SPEED	9600 BAUD
PROTOCOL	XON/XOFF

STATUS: **DEVICE** CONTROL **MULTIPLE WINDOW**

### *HOW TO:*

- 1 If logging to a Parallel Port (Centronics) printer, connect the printer to the PARALLEL port. See "Connecting a Printer to a Parallel Port " page 138.
- 2 If a non-HP printer is connected, choose **ALT. PRINTER** .
- 3 Choose 80 character column width (**NORMAL**) or 40 character column width (**COMPRESS**) according to the capabilities of your printer.
- 4 If logging to a GPIB printer, connect a GPIB printer to the GPIB port. See "Logging Results to GPIB Printer " page 133.
- 5 If logging to an RS-232-C printer, connect an RS-232-C printer to the RS-232-C port. See "Logging Results to RS-232-C Printer " page 135.
- 6 If a non HP printer is connected, choose **ALT. PRINTER** .
- 7 Choose 80 character column width (**NORMAL**) or 40 character column width (**COMPRESS**) according to the capabilities of your printer.

Storing, Logging and Printing  
**Logging Jitter Transfer Results**

- 8 Choose the same baud SPEED as chosen on your printer.
- 9 Choose the PROTOCOL required for the transfer of logging data.
- 10 Choose LOGGING **ON** on the LOGGING SETUP **CONTROL** display.
- 11 Choose **GRAPH** and SCALE **NARROW** or **WIDE** on the **RESULTS**  
**JITTER** **TN FUNCTION** display if you wish to log the graph to the printer.  
Choose TEXT and the PAGE number on the **RESULTS** **JITTER**  
**TN FUNCTION** display if you wish to log the text results to the printer.
- 12 Press **PRINT NOW** to log the chosen results to the printer.

## Storing, Logging and Printing

### Logging Results to Parallel (Centronics) Printer

---

## Logging Results to Parallel (Centronics) Printer

### *Description*

If Option 601, Remote Control Interface, is fitted, you can log the results and alarms to an external Parallel printer connected to the PARALLEL port. The Parallel port provides a standard IEEE 1284-A compatible interface.

FUNCTION	LOGGING
LOGGING SETUP	DEVICE
LOGGING PORT	<b>PARALLEL</b>
REMOTE CONTROL PORT	HP1B
PRINTER TYPE	HP PRINTER

STATUS: RS232    HP1B    DISK    **PARALLEL**    MULTIPLE WINDOW

---

### **CAUTION**

Damage to the instrument may result if a serial connection is made to this port.

### **HOW TO:**

- 1 Connect the Parallel printer to the PARALLEL port. See "Connecting a Printer to a Parallel Port " page 138.
- 2 If a non HP printer is connected choose ALT PRINTER.  
Choose **NORMAL** 80 character column width or **COMPRESS** 40 character column width according to the capabilities of your printer.
- 3 Choose LOGGING SETUP **CONTROL** and set up the display as required. See "Logging Results " page 123 or "Logging on Demand " page 126.

## Logging Results to GPIB Printer

*Description*

If Option 601, Remote Control Interface, is fitted, you can log the results and alarms to an external GPIB printer connected to the GPIB port.



*HOW TO:*

- 1 Connect a GPIB printer to the GPIB port.

---

**NOTE**

---

Choosing GPIB external printer for logging prevents the use of GPIB remote control.

- 2 Choose the LOGGING SETUP **CONTROL** and set up the display as required. See "Logging Results " page 123 or "Logging on Demand " page 126.

Storing, Logging and Printing  
**Logging Results to Internal Printer**

---

## Logging Results to Internal Printer

*Description*

If Option 602, Internal Printer is fitted, you can log the results and alarms to the in-lid printer.

FUNCTION	LOGGING
LOGGING SETUP	DEVICE
LOGGING PORT	<b>INTERNAL</b>
REMOTE CONTROL PORT	HP1B

STATUS:	<b>INTERNAL</b>	RS232	HP1B	DISK	PARALLEL	MULTIPLE WINDOW
---------	-----------------	-------	------	------	----------	-----------------

*HOW TO:*

- 1 Choose the LOGGING SETUP **CONTROL** and set up the display as required. See "Logging Results " page 123.



---

## Logging Results to RS-232-C Printer

### *Description*

If Option 601, Remote Control Interface, is fitted, you can log the results and alarms to an external RS-232-C printer connected to the RS-232-C port.

FUNCTION	LOGGING
LOGGING SETUP	DEVICE
LOGGING PORT	<b>RS232</b>
REMOTE CONTROL PORT	LAN
PRINTER TYPE	ALT. PRINTER
MODE	NORMAL
SPEED	9600 BAUD
PROTOCOL	NON/XOFF

STATUS: **RS232**    HP1B    DISK    PARALLEL    **MULTIPLE WINDOW**

### *HOW TO:*

- 1 Connect an RS-232-C printer to the RS-232-C port.

---

### **NOTE**

---

Choosing RS232 external printer for logging prevents the use of RS-232-C remote control.

- 2 If a non HP printer is connected choose ALT PRINTER.  
Choose **NORMAL** 80 character column width or **COMPRESS** 40 character column width according to the capabilities of your printer.
- 3 Choose the LOGGING SETUP **CONTROL** and set up the display as required.  
See "Logging Results " page 123 or "Logging on Demand " page 126.

## Storing, Logging and Printing

### Logging Data to Disk

---

## Logging Data to Disk

### Description

Data Logging can be saved to a file on disk. The disk can be transferred to a personal computer (PC) and the logging investigated at a later date.

FUNCTION	FLOPPY DISK
DISK OPERATION	SAVE
FILE TYPE NAME	DATA LOGGING FILENAME, PRN APPEND TO FILE
A:\ LABEL:	FREE: Bytes

STATUS:

OVER-  
WRITE

APPEND  
TO FILE

MULTIPLE  
WINDOW

### HOW TO:

- 1 Choose the directory in which to save the logging results. See “Accessing Directories and Selecting Files” page 149.
- 2 Choose DISK OPERATION **SAVE** FILE TYPE **DATA LOGGING** and enter your choice of filename using **PREVIOUS CHAR** **NEXT CHAR** **→** **←** or press **SET** twice and use the pop-up keypad.  
The filename can contain up to 8 alphanumeric characters.  
The filename extension is fixed as .PRN.
- 3 If you wish to add the data logging to a file which already exists, choose APPEND TO FILE. The data logging is added to the named file on Disk in the available free space.  
If you wish to overwrite the contents of the named file with the data logging, choose OVERWRITE.
- 4 Set up the **OTHER LOGGING** display. See “Logging Results” page 123.  
When the named file is opened, data logging is saved on the disk:  
As each logging output occurs during the measurement or when **PRINT NOW** is pressed.

## **Printing Results from Disk**

*Description*

The results and alarms you logged to Disk can be printed by removing the Disk from the OmniBER 725 and inserting it into a personal computer (PC).

### **PC Instructions**

*HOW TO:*

**Print from DOS Prompt**

copy/b a:\<filename> <printer name>

*HOW TO:*

**Print from Windows**

- 1** Choose the required file from Filemanager.
- 2** Choose FILE - COPY FILE TO  
<printer name>

## **Connecting a Printer to a Parallel Port**

*Description*

If Remote Control Option, 601, is fitted, the OmniBER 725 has the capability of interfacing with an HP printer or, an alternative suppliers printer, via the PARALLEL port.

---

**CAUTION**

---

Do not connect a serial printer e.g. RS-232-C or GPIB to the OmniBER 725 Parallel port as this will damage the interface.

*HOW TO:*

- 1 Connect the OmniBER 725 Parallel port to your Printer Parallel port using printer cable HP 24542D.

## Changing Internal Printer Paper

### *Description*

The printer accepts rolls of thermal paper with the following dimensions:

- Width:** 216 mm (8.5 in) or 210 mm (8.27 in) (A4)  
tolerance +2.0 mm - 1.0 mm
- Maximum Outside Diameter:** 40 mm
- Inside Core Diameter:** Between 12.5 mm and 13.2 mm

Suitable rolls of paper are available from Hewlett Packard, Part Number 9270-1360.


---

### **WARNING**

The paper tear-off edge is **SHARP**. This edge is exposed when the printer cover is raised. Note the  **CAUTION SHARP EDGE** label on the cover.

### **HOW TO:**

- 1 Raise the two locking tabs on the sides of the printer cover and then raise the cover.
- 2 Raise the printer mechanism front cover. This releases the paper drive. Remove any remaining paper from the front (in the normal direction of operation).

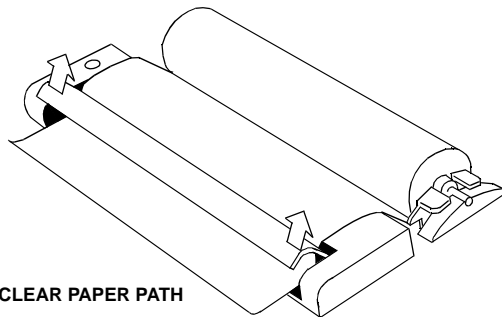

- 3 Lift out the spindle. Adjust the paper width adaptor to the width of the paper being used.
- 4 Put the paper roll on the spindle such that the sensitive side (slightly shiny) will be on the underside of the print mechanism. Ensure that the relocation of the spindle locks the blue width adaptor in position.

## Storing, Logging and Printing

### Changing Internal Printer Paper


---

#### NOTE

The paper must be installed such that when it is in the print mechanism, the sensitive side (slightly shiny) is the underside.


The illustrations here show the correct fitting for HP 9270-1360 paper which has the sensitive side on the outside of the roll.

---

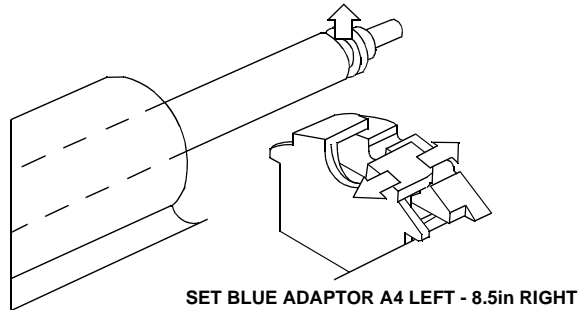

- 5 Feed the paper into the upper entry of the print mechanism. When the front cover of the print mechanism is closed, the printer should automatically feed the paper through until there is approximately 2.5 cm (1 in) clear at the front of the print mechanism.

Align paper with the leftmost edge of the printer mechanism slot

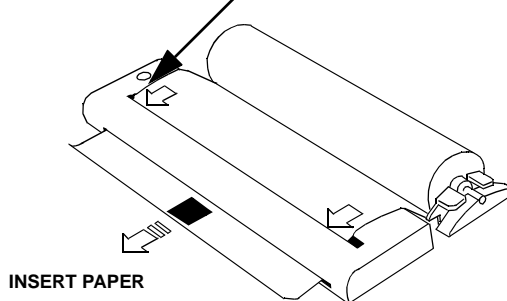

---


#### CAUTION

Do not close the outer cover until the automatic paper feed is complete.

---

Storing, Logging and Printing  
**Changing Internal Printer Paper**

- 6 If the printer paper is incorrectly aligned, raise the printer mechanism front cover to releases the paper drive and realign the paper.

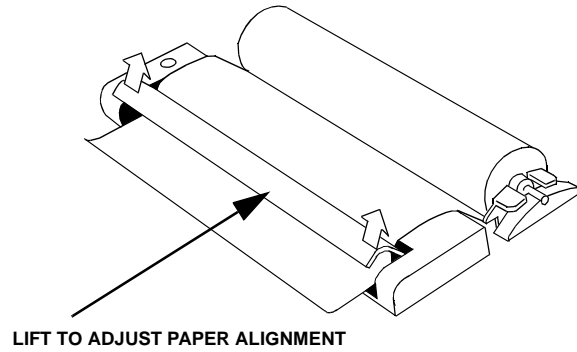

## **Cleaning Internal Printer Print Head**

### *Description*

The print head should be cleaned when broken or light characters occur in a vertical line on the page. To maintain a high quality print, clean the print head after 200 to 300 prints.

The print head is cleaned with a special cleaning paper which is supplied with the instrument.

---

### **WARNING**

**The paper tear-off edge is SHARP. This edge is exposed when the printer cover is raised. Note the  CAUTION SHARP EDGE label on the cover.**

### *HOW TO:*

- 1** Open the printer as for changing the paper. See "Changing Internal Printer Paper " page 139.  
If printer paper is fitted, remove it from the printer.
- 2** Feed the cleaning paper into the top entry of the print mechanism with the rough black side, which contains the cleaning material, towards the rear of the printer.
- 3** When the automatic feed is complete and the paper stops moving use the instrument front panel key **PAPER FEED** to move the cleaning paper through the print mechanism.
- 4** Remove the cleaning paper and replace the normal printer paper. See "Changing Internal Printer Paper " page 139.

---

### **NOTE**

Retain the cleaning paper. It is designed to last for the life of the printer.



<b>Instrument Storage</b>	“Storing Configurations in Instrument Store” page 144
	“Titling Configuration in Instrument Store” page 145
	“Recalling Configurations from Instrument Store” page 146
<b>Disk Formatting and Labeling</b>	“Formatting a Disk” page 147
	“Labeling a Disk” page 148
<b>Disk Storage</b>	“Accessing Directories and Selecting Files” page 149
	“Storing/Retrieving Data to/from Disk” page 151
<b>Graphical Results - Saving, Copying and Recalling</b>	“Saving Graphical Results to Disk” page 152
	“Recalling Graphics Results from Disk” page 154
	“Copying Graphics Results from Instrument Store to Disk” page 155
<b>Configuration(s) - Saving, Copying and Recalling</b>	“Saving Configurations to Disk” page 157
	“Recalling Configuration from Disk” page 158
	“Copying Configuration from Instrument Store to Disk” page 159
	“Copying Configuration from Disk to Instrument Store” page 161
<b>Files and Directories - Creating, Renaming, Deleting and Adding Discriptors</b>	“Managing Files and Directories on Disk” page 163

---

## Using Instrument and Disk Storage

## Storing Configurations in Instrument Store

### *Description*

You can store measurement settings which are used regularly and recall them with a single operation.

One preset store is provided which cannot be overwritten, STORED SETTING NUMBER [0]. This store is used to set the instrument to a known state, the FACTORY DEFAULT SETTINGS.




### *HOW TO:*

- 1 Set the OmniBER 725 to the configuration you wish to store.
- 2 Choose the STORED SETTING NUMBER to receive the configuration.
- 3 Choose LOCK **OFF**.
- 4 Choose ACTION **SAVE** to store the configuration in the chosen store.
- 5 To add a descriptive title see "Titling Configuration in Instrument Store " page 145.

## Titling Configuration in Instrument Store

*Description*

When storing configurations, you can give them an easily remembered title for identification at a later date.

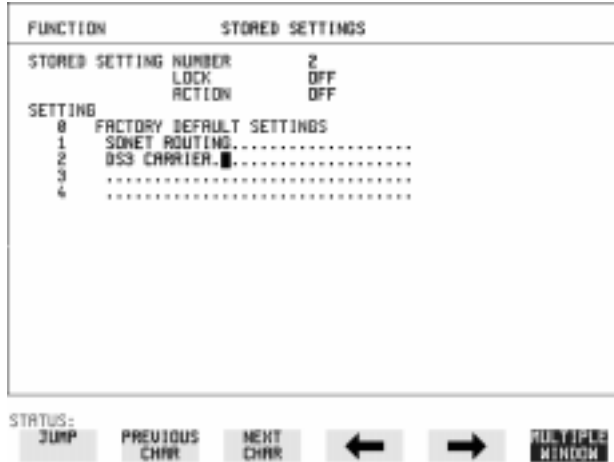

*HOW TO:*

- 1 Choose the STORED SETTING NUMBER which contains the stored configuration.
- 2 Choose LOCK **OFF**.
- 3 Use **JUMP**; **NEXT CHAR**; **PREVIOUS CHAR**; **→** and **←** to title the settings.

## Using Instrument and Disk Storage

### Recalling Configurations from Instrument Store

---

## Recalling Configurations from Instrument Store

### *Description*

Having stored a configuration for future use, you must be able to recall that configuration in the future.

FUNCTION		STORED SETTINGS	
STORED SETTING NUMBER		2	
LOCK		OFF	
ACTION		OFF	
SETTING			
0	FACTORY DEFAULT SETTINGS		
1	SONET ROUTING.....		
2	B3S CARRIER.....		
3	.....		
4	.....		

STATUS: OFF    RECALL    SAVE    MULTIPLE WINDOW

### *HOW TO:*

- 1 Choose the STORED SETTING NUMBER which contains the stored configuration.
- 2 Choose ACTION **RECALL** to recall the stored configuration.  
The recall operation can be verified by checking the relevant display settings.

---

## Formatting a Disk

### *Description*

Disks can be formatted in an IBM compatible PC or the OmniBER 725. It is recommended that you use the OmniBER 725 to format your disk as this will ensure full compatibility with the Floppy Disk power fail recovery included in the OmniBER 725.



---

### **NOTE**

Only 1.44M, MS-DOS compatible disks can be used in the OmniBER 725. Any other format or capacity will result in a disk access error being displayed.

---

### **HOW TO:**

- 1 Press **OTHER**, then select FLOPPY DISK.
- 2 Choose DISK OPERATION **DISK FORMAT**.
- 3 Insert the disk into the Disk drive.
- 4 Choose **OK** to Format the disk.

A warning that this operation will erase all data is displayed and asks “do you wish to continue”.

If YES is selected, all the data on the Disk will be erased and the disk will be formatted.

If NO is selected, the operation is aborted. This allows you to view the data on the Disk and verify that it is no longer needed.

## Labeling a Disk

### *Description*

You can use the OmniBER 725 to assign an identification label to your disk.



### *HOW TO:*

- 1 Press **OTHER**, then select FLOPPY DISK.
- 2 Choose DISK OPERATION **DISK LABEL**.
- 3 Label the Disk using **PREVIOUS CHAR** **NEXT CHAR** **→** **←** or press **SET** and use the pop-up keypad.
- 4 Choose **OK** to confirm the label is correct.  
The label is displayed at the bottom of the display to confirm the operation has taken place.

## Accessing Directories and Selecting Files

### *Description*

Four different file types (\*.CNF, \*.SMG, \*.PRN and \*.BMP) can be stored on disk, but only one file type can be displayed at a time. The following procedure first shows you how to select the file type you want, then shows you how to access directories, and finally shows you how to select files. The “Files Pop-up Window Features” in step 3 below, also describes how you can create a new file.

### *HOW TO:*

#### **Select file type:**

- 1 Press **OTHER**, then select FLOPPY DISK.
- 2 Choose DISK OPERATION **SAVE**.
- 3 Choose FILE TYPE you wish to view.

This acts as a filter on the filename extension:

**CONFIGURATION** - .CNF filter, **GRAPHICS** - .SMG filter,  
**DATA LOGGING** - .PRN filter, **SCREEN DUMP** - .BMP filter.

#### **Access directories:**

- 4 Move the highlighted cursor to the NAME field and press **SET**.

### **Files Pop-up Window Features**

**Title Bar** - Located on the top line of the window, it shows the current directory name and selected file types.

**NEW ..** - To create a new file name, move the highlighted cursor to this line then press **SET**. Using the pop-up keypad to enter the new filename (use the cursor keys and **SET** to select each character), then choose **ENTER** when you have finished. Press **SET** to return to the file manager display.

**. <DIR>** - Denotes the Current Directory.

**.. <DIR>** - Denotes the Parent directory. To access the parent directory, move the highlighted cursor to this line and press **SET**.

**SON1.PRN** - A file (with named extension) in current directory. To select this file, move the highlighted cursor to this line and press **SET**. The display will return to the **SAVE** display and the selected file name will appear in the FILE NAME field.

**NEXT PAGE** - To access the next page of file names, move the highlighted cursor to this line then press **SET**.

**PREV PAGE** - To access the previous page of file names, move the highlighted cursor to this line then press **SET**.





## **Storing/Retrieving Data to/from Disk**

You can store graphical result and instrument configuration files on disk. These files can then be recalled so that you can review graphical results at your convenience, or re-establish a specific instrument configuration.

If the instrument's own store has graphical results or configuration settings currently stored in it, these too can be copied to disk.

Finally, you can copy a configuration file from disk to the instrument's store.

## Saving Graphical Results to Disk


### *Description*

When you start a measurement the graphical results can be saved to a file on disk. However, before you can gather graphical results you must first select an appropriate graphical resolution. See “Saving Graphics Results to Instrument Store” page 114. Also ensure that you have an appropriately formatted disk loaded into the disk drive.

There are two methods of assigning names to files:

**Automatic**            If you do not enter a filename then the instrument automatically assigns a filename (in the form meas001).

**Your Choice**        If you want to assign the filename, you must enter it before you start the measurement. Your choice of filename will override the automatically generated filename. If the filename you chose already exists, the graphics results will be saved to an automatically generated filename. This prevents existing files from being overwritten each time a measurement is started.

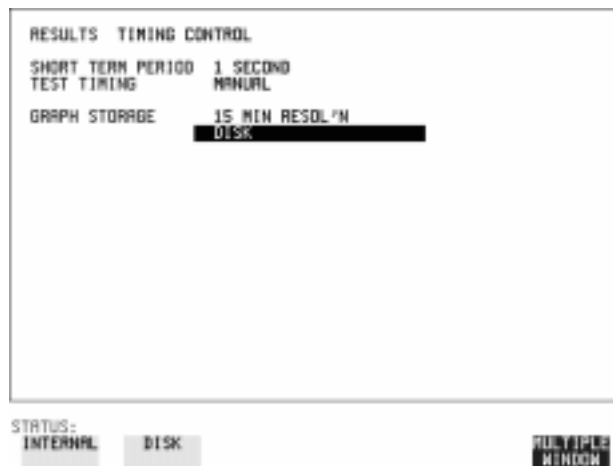

### *HOW TO:*

- 1 Press **[RESULTS]**.
- 2 Choose GRAPH STORAGE **[DISK]** and the required Graph Storage resolution.

## Using Instrument and Disk Storage

### Saving Graphical Results to Disk

- 3 Press **OTHER**.

FUNCTION	FLOPPY DISK
DISK OPERATION	SAVE
FILE TYPE NAME	<b>GRAPHICS</b> FILENAME.SMG
A:\ LABEL:	FREE: Bytes

STATUS:

**CONFIG-  
URATION**

**GRAPHICS**

**DATA  
LOGGING**

**MULTIPLE  
WINDOW**

- 4 Choose DISK OPERATION **SAVE** FILE TYPE **GRAPHICS**.
- 5 Choose the directory in which to save the graphics results. See "Accessing Directories and Selecting Files" page 149.
- 6 If you wish to use the automatically generated filename, no further action is required and the graphics results will be saved on Disk when the measurement is completed.
- 7 If you wish to enter your own choice of filename, move the highlighted cursor to NAME and enter the filename using **PREVIOUS CHAR** **NEXT CHAR** **→** **←** or press **SET** twice and use the pop-up keypad.  
The filename can contain up to 8 alphanumeric characters.  
The filename extension is fixed as .SMG.  
The graphics results will be saved on Disk at the end of the measurement.

## Recalling Graphics Results from Disk

### *Description*

The procedure below shows you how to recall graphical results from a graphics file stored on disk. You need to recall graphical results from disk before they can be viewed via the **GRAPH** display.

FUNCTION	FLOPPY DISK
DISK OPERATION	RECALL
FILE TYPE NAME	GRAPHICS FILENAME.SMG
Select OK to perform operation	<input type="checkbox"/> OFF
A:\ LABEL:	FREE:          Bytes

STATUS:

OFF

OK

MULTIPLE  
WINDOW

### *HOW TO:*

- 1 Choose the directory that contains the graphics file to be recalled. See "Accessing Directories and Selecting Files " page 149.
- 2 Choose DISK OPERATION **RECALL** FILE TYPE **GRAPHICS** and enter your choice of filename using **PREVIOUS CHAR** **NEXT CHAR** **→** **←**. The filename can contain up to 8 alphanumeric characters. The filename extension is fixed as .SMG.
- 3 To recall the graphics results from disk to instrument, choose **OK**.
- 4 To view the graphics results, see "Recalling Stored Graph Results" page 115.

---

## Copying Graphics Results from Instrument Store to Disk

### *Description*

You can copy Graphics Results from the instrument store to the Disk. This is useful under the following conditions:

- If you have graphics results stored in the instrument that you wish to prevent from being overwritten by a future measurement (only 10 store locations in the instrument)
- If you wish to retrieve the graphics results for viewing via a spreadsheet.

FUNCTION	FLOPPY DISK
DISK OPERATION	FILE COPY GRAPHICS
FROM: STORE	-9
TO: NAME FORMAT	FILENAME.SMG NORMAL
Select OK to perform operation	<input type="checkbox"/> OFF
A:\ LABEL:	FREE: Bytes

STATUS:

 OFF OK MULTIPLE WINDOW

### *HOW TO:*

- 1 Choose the directory to receive the graphics file. See "Accessing Directories and Selecting Files " page 149.
- 2 Choose DISK OPERATION **FILE COPY GRAPHICS** and enter the Instrument Store number using **DECREASE DIGIT** and **INCREASE DIGIT** or press **SET** and use the pop-up keypad.
- 3 Enter the filename the graphic results are to be copied to using **PREVIOUS CHAR** **NEXT CHAR** **→** **←** or press **SET** twice and use the pop-up keypad.  
The file name can contain up to 8 alphanumeric characters.  
The filename extension is fixed as .SMG.

### Copying Graphics Results from Instrument Store to Disk

- 4 If you wish to view the graphic results at a later date via a spreadsheet, choose FORMAT **CSV**. CSV is Comma Separated Variable.  
If you wish to view the graphic results at a later date on an OmniBER 725, choose FORMAT **NORMAL**.
- 5 To copy the configuration from instrument to Disk, choose **OK**.  
If you have entered a filename which already exists, a warning “File exists - are you sure you wish to continue” is displayed.  
If YES is selected, the data on the Disk will be overwritten.  
If NO is selected, the operation is aborted.  
This allows you the opportunity to view the data on the Disk and verify that it is no longer needed.

---

## Saving Configurations to Disk

### *Description*

A large number of measurement settings which are used regularly can be stored (as configuration files) on disk and recalled when required.

The disk can be used in other instruments which have the same option structure.



### *HOW TO:*

- 1 Set the OmniBER 725 to the configuration you wish to store.
- 2 Choose the directory in which you wish to save the OmniBER 725 configuration. See "Accessing Directories and Selecting Files " page 149.
- 3 Choose DISK OPERATION **SAVE**, FILE TYPE **CONFIGURATION** and enter the filename using **PREVIOUS CHAR** **NEXT CHAR** **→** **←** or press **SET** twice and use the pop-up keypad.  
The filename extension is fixed as .CNF.  
The filename can contain up to 8 alphanumeric characters.
- 4 Choose **OK** to save the current configuration to disk.  
If you have entered a filename which already exists, a warning "File exists - are you sure you wish to continue" is displayed.  
If YES is selected, the configuration will be saved.  
To cancel, change OK to OFF and enter new filename. See "Accessing Directories and Selecting Files " page 149.

---

## Recalling Configuration from Disk

### *Description*

The procedure below shows you how to recall measurement settings from a configuration file stored on disk.

FUNCTION	FLOPPY DISK	
DISK OPERATION	RECALL	
FILE TYPE NAME	CONFIGURATION FILENAME.CNF	
Select OK to perform operation	OFF	
A:\ LABEL:	FREE:	Bytes

STATUS:  
CONFIG-  
URATION

GRAPHICS

MULTIPLE  
WINDOW

### *HOW TO:*

- 1 Choose the directory that contains the configuration file to be recalled. See "Accessing Directories and Selecting Files " page 149.
- 2 Choose DISK OPERATION **RECALL** FILE TYPE **CONFIGURATION** and enter your choice of filename using **PREVIOUS CHAR** **NEXT CHAR** **←** **→**.  
The filename can contain up to 8 alphanumeric characters.  
The filename extension is fixed as .CNF.
- 3 To recall the configuration from disk to instrument, choose **OK**.  
The recall operation can be verified by checking the relevant display settings.



---

## Copying Configuration from Instrument Store to Disk

### *Description*

If you have a configuration in the instrument store that you wish to use on another instrument, you can copy it to disk. The configuration can then be downloaded from the disk in to another OmniBER 725 with the same options as the original instrument.

FUNCTION	FLOPPY DISK
DISK OPERATION	FILE COPY CONFIGURATION
FROM: 1 ATM27.....	
TO: NAME	FILENAME.CNF
Select OK to perform operation	<input type="checkbox"/> OFF
A:\ LABEL:	FREE: Bytes

STATUS:

OFF

OK

MULTIPLE WINDOW

### *HOW TO:*

- 1 Choose the directory to receive the configuration file. See "Accessing Directories and Selecting Files " page 149.
- 2 Choose DISK OPERATION **FILE COPY CONFIGURATION** and enter the Instrument Store number using **DECREASE DIGIT** and **INCREASE DIGIT** or press **SET** and use the pop-up keypad.  
The Stored Settings description appears alongside the store number.  
If required the description can be modified using **JUMP NEXT CHAR** **PREVIOUS CHAR** **←** **→** or press **SET** and use the pop-up keypad.  
The description can contain up to 24 alphanumeric characters.
- 3 Enter the chosen filename using **PREVIOUS CHAR** **NEXT CHAR** **→** **←** or press **SET** twice and use the pop-up keypad.  
The file name can contain up to 8 alphanumeric characters.  
The filename extension is fixed as .CNF.

## Using Instrument and Disk Storage

### Copying Configuration from Instrument Store to Disk

- 4 To copy the configuration from instrument to Disk choose **OK**.  
If you have entered a filename which already exists, a warning “File exists - are you sure you wish to continue” is displayed.  
If YES is selected, the data on the Disk will be overwritten.  
If NO is selected, the operation is aborted.

---

## Copying Configuration from Disk to Instrument Store

*Description*

If you have a configuration in the instrument store and you want to use it on another instrument, you can copy the configuration to disk. The configuration can then be downloaded from the disk to another OmniBER 725 with the same options as the original instrument.

FUNCTION	FLOPPY DISK
DISK OPERATION	FILE COPY CONFIGURATION
TO:	4 ATMTEST.....
FROM:	NAME FILENAME.CNF
Select OK to perform operation <input type="checkbox"/> OFF	
A:\ LABEL:	FREE: Bytes

STATUS:

OFF

OK

MULTIPLE WINDOW

*HOW TO:*

- 1 Choose the directory containing the configuration file. See "Accessing Directories and Selecting Files " page 149.
- 2 Choose DISK OPERATION **FILE COPY CONFIGURATION** and enter the Instrument Store number using **DECREASE DIGIT** and **INCREASE DIGIT** or press **SET** and use the pop-up keypad.  
Enter a description of the configuration using **PREVIOUS CHAR** **NEXT CHAR** **→** **←** or press **SET** and use the pop-up keypad.  
The description can contain up to 24 alphanumeric characters.
- 3 Enter the filename the configuration is to be copied from using **PREVIOUS CHAR** **NEXT CHAR** **→** **←** or press **SET**, highlight the file to be copied on the file manager display and press **SET**.  
The file name can contain up to 8 alphanumeric characters.  
The filename extension is fixed as .CNF.

**Copying Configuration from Disk to Instrument Store**

- 4 To copy the configuration from Disk to instrument, choose **OK**.  
If you have entered a instrument store number which already contains a configuration, a warning “Are you sure you wish to continue” is displayed.  
If YES is selected, the data in the instrument store will be overwritten.  
If NO is selected, the operation is aborted.

## Managing Files and Directories on Disk

### *Description*

File and directory structures allow you to store information in an organized manner on disk - This helps to speed up the transfer of data between the instrument and the disk drive.

It is recommended that you create a directory structure as an aid to efficient file management particularly when the disk is moved to a PC.

### Creating a Directory on Disk

FUNCTION	FLOPPY DISK	
DISK OPERATION	FILE CREATE DIRECTORY	
NAME	SONET	
Select OK to perform operation	OFF	
A:\ LABEL:	FREE:	Bytes

STATUS:  
OFF      OK      MULTIPLE WINDOW

### *HOW TO:*

- 1 Press **OTHER**, then select FLOPPY DISK.
- 2 Choose DISK OPERATION **FILE CREATE DIRECTORY**.
- 3 Enter the directory name using **PREVIOUS CHAR** **NEXT CHAR** **→** **←** or press **SET** and use the pop-up keypad.  
The directory name can contain up to 8 alphanumeric characters.
- 4 To create the directory choose **OK**.  
This will create a sub directory of the directory displayed at the bottom of the display. In this example A:\SONET will be created.

## Using Instrument and Disk Storage

### Managing Files and Directories on Disk

#### Deleting a Directory on Disk

##### *Description*

Obsolete Directories should be deleted to aid to efficient file management.

FUNCTION	FLOPPY DISK	
DISK OPERATION	FILE DELETE DELETE DIRECTORY	
Select OK to perform operation	<input type="checkbox"/> OFF	
A:\ LABEL:	FREE:	Bytes

STATUS:  
 OFF     OK

MULTIPLE  
WINDOW

---

##### **NOTE**

A directory cannot be deleted until all the files within the directory have been deleted. See "Deleting a File on Disk " page 166.

##### **HOW TO:**

- 1 Choose the directory you wish to delete (it will appear on the display). See "Accessing Directories and Selecting Files " page 149.
- 2 Choose DISK OPERATION **FILE DELETE** **DELETE DIRECTORY**.
- 3 To delete the directory choose **OK**.  
A warning "Are you sure you wish to continue" is displayed.  
If YES is selected, the directory is deleted.  
If NO is selected, the operation is aborted.  
This prevents accidental deletion of a wanted directory.  
If the directory is not empty the messages "delete directory failed" "directory is not empty" are displayed.
- 4 If files need to be deleted to prepare the directory for deletion. See "Deleting a File on Disk " page 166.

## Using Instrument and Disk Storage

### Managing Files and Directories on Disk

#### Renaming a File on Disk

##### *Description*

Files can be renamed to aid to efficient file management.

FUNCTION	FLOPPY DISK
DISK OPERATION	FILE RENAME
FROM:NAME	FILENAME.CNF
TO: DIRECTORY NAME	A:\ FILENAME.CNF
Select OK to perform operation	<input type="checkbox"/> OFF
A:\ LABEL:	FREE: Bytes

STATUS:

OFF

OK

MULTIPLE  
WINDOW

##### *HOW TO:*

- 1 Press **OTHER**, then select FLOPPY DISK.
- 2 Choose DISK OPERATION **FILE RENAME**.
- 3 Enter the FROM filename using **PREVIOUS CHAR** **NEXT CHAR** **→** **←** or Choose the directory which contains the file to be renamed. See "Accessing Directories and Selecting Files " page 149. Move the highlighted cursor to the file to be renamed and press **SET** to return to the **FILE RENAME** display. The filename, with extension, can contain up to 12 alphanumeric characters.
- 4 Choose the directory in which to locate the renamed file (it will appear on the display). See "Accessing Directories and Selecting Files " page 149.
- 5 Enter the TO filename using **PREVIOUS CHAR** **NEXT CHAR** **→** **←** or press **SET** twice and use the pop-up keypad. The filename can contain up to 8 alphanumeric characters. The file extension is fixed to the FROM filename extension.
- 6 To rename the file choose **OK**.  
If you have entered a filename which already exists, a warning "File exists - are you sure" you wish to continue is displayed.  
If YES is selected, the data in the file will be overwritten. If NO is selected, the operation is aborted.  
This allows you the opportunity to verify before renaming.

## Using Instrument and Disk Storage

### Managing Files and Directories on Disk

#### Deleting a File on Disk

##### *Description*

Obsolete files can be deleted to aid to efficient file management.

FUNCTION		FLOPPY DISK	
DISK OPERATION	FILE DELETE DELETE FILE		
NAME	FILENAME.EXT		
Select OK to perform operation			<input type="checkbox"/> OFF
A:\ LABEL:	FREE:		Bytes

STATUS:  
 OFF     OK

MULTIPLE  
WINDOW

##### *HOW TO:*

- 1 Press **OTHER**, then select FLOPPY DISK.
- 2 Choose DISK OPERATION **FILE** **DELETE** **DELETE FILE**.
- 3 Choose the directory containing the file to be deleted. See "Accessing Directories and Selecting Files " page 149.
- 4 Enter the filename to be deleted using **PREVIOUS CHAR** **NEXT CHAR** **→** **←** or press **SET**, highlight the file to be deleted on the file manager display, and press **SET**.  
The file name can contain up to 12 alphanumeric characters, including the filename extension.
- 5 To delete the file choose **OK**.  
A warning "Are you sure you wish to continue" is displayed.  
If YES is selected, the file is deleted.  
If NO is selected, the operation is aborted.  
This prevents accidental deletion of a wanted file.



## Using Instrument and Disk Storage

### Managing Files and Directories on Disk

#### Adding Descriptors to Disk Files

##### *Description*

When storing configurations or graphics on disk, you can give them an easily remembered descriptor for identification at a later date.

Descriptors can be added to .CNF and .SMG files.

FUNCTION	FLOPPY DISK
DISK OPERATION	FILE PROPERTIES
DISPLAY OPTION	<b>FILE DESCRIPTOR</b>
FILE NAME DESCRIPTOR	FILENAME.CNF ..... Press SET to select filename popup
Select OK to perform operation	OFF
A:\ LABEL:	FREE: Bytes

STATUS:

**TIME & DATE**

**FILE DESC**

**MULTIPLE WINDOW**

##### *HOW TO:*

- 1 Choose the directory containing the file you wish to add the descriptor to. See "Accessing Directories and Selecting Files " page 149.
- 2 Choose DISK OPERATION **FILE PROPERTIES** and DISPLAY OPTION **FILE DESCRIPTOR**.
- 3 Move the highlighted cursor to the FILE NAME DESCRIPTOR field. Enter the file descriptor using **PREVIOUS CHAR** **NEXT CHAR** **→** **←** or press **SET**, highlight the file required on the file manager display, and press **SET**.
- 4 Move the highlighted cursor to Select OK to perform operation and choose OK. The File List will show the descriptor instead of the TIME and DATE information as long as FILE DESCRIPTOR is selected.

---

##### **NOTE**

This slows down the updating of the display.



- “Coupling Transmit and Receive Settings” page 170
- “Setting Time & Date” page 171
- “Enabling Keyboard Lock” page 172
- “Enabling Beep on Received Error” page 173
- “Suspending Test on Signal Loss” page 174
- “REI-L Result/Enable” page 175
- “Graph Storage Resolution” page 176
- “Setting Error Threshold Indication” page 177
- “Setting Screen Brightness and Color” page 178
- “Dumping Display to Disk” page 179
- “Running Self Test” page 181

---

## Selecting and Using "Other" Features

Selecting and Using "Other" Features  
**Coupling Transmit and Receive Settings**


---

## Coupling Transmit and Receive Settings

*Description*

When generating and measuring at the same interface level, you can have the transmit and receive settings coupled together. Any settings change made on the transmit display will automatically occur on the receive display. Any settings change made on the receive display will automatically occur on the transmit display.

This function is available on the **OTHER SETTINGS CONTROL** display.

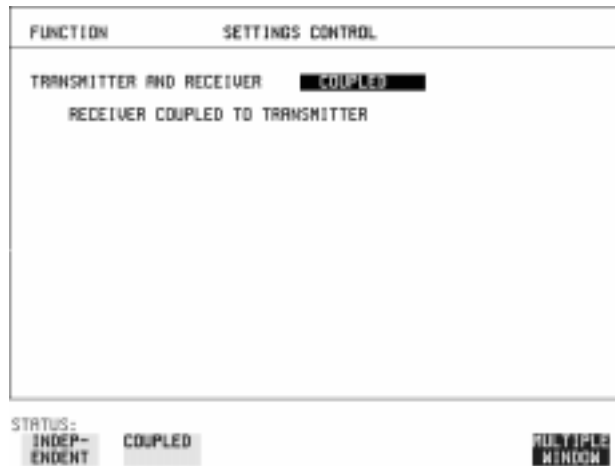

**HOW TO:**


- 1 Choose TRANSMITTER AND RECEIVER **COUPLED**.

## Setting Time & Date

### Setting Time & Date

*Description*

When making Bit error measurements and recording results you can have certain events timed chronologically, for example, Alarms, Error Seconds. The capability to set the Time and Date is provided on the **OTHER** **TIME & DATE** display.

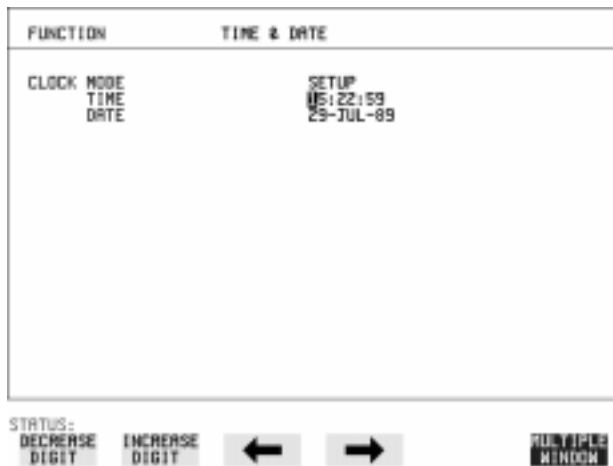

*HOW TO:*

- 1 Choose CLOCK MODE **SETUP** and set the Time and Date using **↑**; **↓**; **←**; **→**; **INCREASE DIGIT** and **DECREASE DIGIT**.
- 2 Choose CLOCK MODE **RUN** to complete the setting of Time and Date.

## Selecting and Using "Other" Features

### Enabling Keyboard Lock

---

## Enabling Keyboard Lock

### *Description*

You can protect the measurement settings from interference during a test.

This function is provided in the OmniBER 725 on the **OTHER** **MISCELLANEOUS** display.

The following keys are not affected by Keyboard Lock:

- Display keys **TRANSMIT**; **RECEIVE**; **RESULTS**; **GRAPH**; **OTHER**
- cursor keys **←** **↑** **↓** and **→**
- **SHOW** **PAPER FEED** **LOCAL** **SMART TEST**

The following display functions are not affected by Keyboard Lock:

- RESULTS type on the **RESULTS** display
- KEYBOARD LOCK on the **OTHER** display



### HOW TO:

- 1 Choose KEYBOARD LOCK **ON**.

## Selecting and Using "Other" Features

### Enabling Beep on Received Error

---

## Enabling Beep on Received Error

### *Description*

You can have an audible indication of an error which is particularly useful when the display on the test set is hidden from view.

This function is provided in the OmniBER 725 on the **OTHER** **MISCELLANEOUS** display.



**HOW TO:** 1 Choose BEEP ON RECEIVED ERROR **ON**.

## Selecting and Using "Other" Features Suspending Test on Signal Loss

---

### Suspending Test on Signal Loss

When running a test, you can choose to suspend the test during periods of signal loss.

This function is available on the **OTHER** **MISCELLANEOUS** display.



**HOW TO:** 1 Choose SUSPEND TEST ON SIGNAL LOSS **ON**.



## Selecting and Using "Other" Features REI-L Result/Enable

---

### REI-L Result/Enable

#### *Description*

Before running a test, you can choose to enable or disable the SOMET measurement of REI-L.

This function is available on the **OTHER** **MISCELLANEOUS** display.



#### **HOW TO:**

- 1 Choose REI-L ENABLE **ON** or **OFF** as required.

When set to **OFF**, the REI-L measurement is suppressed. Cumulative, Short Term and Analysis measurements are affected alike.


## Selecting and Using "Other" Features Graph Storage Resolution

---

### Graph Storage Resolution

*Description*

The total graphics store capacity is normally 20,000 events. If GRAPH STORAGE RESOLUTION **FULL** is selected the capacity reduces to 10,000 events.

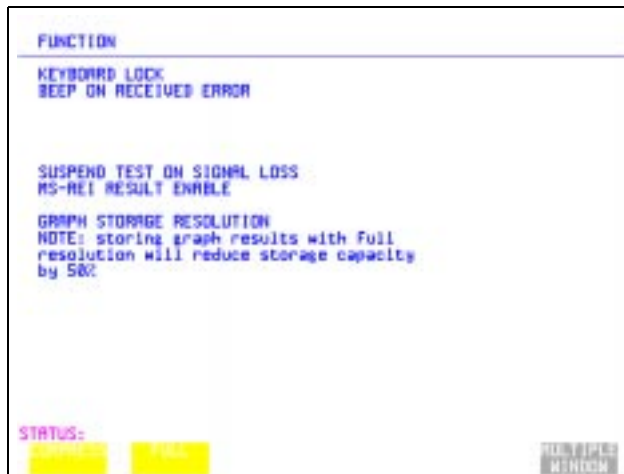

---

## Setting Error Threshold Indication

### *Description*

When making error measurements, you can have an indication of when an error count or error ratio threshold has been exceeded. You can set the OmniBER 725 to indicate this by a color change, from yellow to red, of the bar on the **GRAPH** display and the result on the **RESULTS** display. You can choose the thresholds at which the color change occurs.

The Count and Ratio selections are independent.

This function is available on the **OTHER** **COLOR CONTROL** display.



### *HOW TO:*

- 1 Choose COLOR ENHANCE RESULTS **ON**.
- 2 Choose the COUNT THRESHOLD and RATIO THRESHOLD.

## Selecting and Using "Other" Features

### Setting Screen Brightness and Color

---

## Setting Screen Brightness and Color

### *Description*

The OmniBER 725 screen can be set to single or two color using the COLOR PALETTE selection on the **OTHER**, **COLOR CONTROL** display.

The screen brightness can be set to full or half brightness.

The half brightness setting is used when the room brightness is such that half brightness is desirable. It will also prolong the life of the screen.

If the brightness is set to FULL and there have been no key presses in the last hour, then the screen automatically dims to the half brightness level and the status message "Display set to half brightness" is shown. Any key press will return the screen to full brightness.

This function is available on the **OTHER**, **COLOR CONTROL** display.

FUNCTION	COLOR CONTROL
COLOR ENHANCE RESULTS	ON
COUNT THRESHOLD	10000
RATIO THRESHOLD	10 <sup>-3</sup>
COLOR PALETTE	TWO
DISPLAY BRIGHTNESS	<b>FULL</b>

STATUS: **HALF** **FULL** **MULTIPLE WINDOW**

### *HOW TO:*

- 1 Choose the DISPLAY BRIGHTNESS to suit the operating environment.

## Selecting and Using "Other" Features

### Dumping Display to Disk

---

## Dumping Display to Disk

### *Description*

The chosen display may be stored on disk in bitmap format using the Screen Dump feature of the OmniBER 725. Logging and Floppy Disk must be set up for screen dump. The current display is stored on disk when **PRINT NOW** is pressed.

FUNCTION		LOGGING
LOGGING SETUP		CONTROL
LOGGING		OFF
LOG ON DEMAND		SCREEN DUMP
SCREEN DUMP DESTINATION		DISK
BITMAP COMPRESSION (RLE)		OFF

STATUS: STORED SETTINGS FLOPPY LOGGING MORE MULTIPLE WINDOW

### *HOW TO:*

- 1 Choose LOGGING SETUP **DEVICE** and LOGGING PORT **DISK** on the **OTHER**, **LOGGING** display.
- 2 Choose LOGGING SETUP **CONTROL** LOG ON DEMAND **SCREEN DUMP** on the **OTHER**, **LOGGING** display.
- 3 If compression is required to save disk space, select BITMAP COMPRESSION (RLE) **ON**.

## Selecting and Using "Other" Features

### Dumping Display to Disk

FUNCTION	<b>FLOPPY DISK</b>
DISK OPERATION	SAVE
FILE TYPE	SCREEN DUMP
NAME	FILENAME.BMP
BMP DIR :	A:\
BMP FILE:	SDUMP029.BMP
A:\	
LABEL: no label	FREE: unknown Bytes

STATUS: **STORED** SETTINGS FLOPPY LOGGING MORE MULTIPLE  
SETTINGS CONTROL DISK ..... WINDOW

- 4 Choose the directory in which to save the Screen Dump. See "Accessing Directories and Selecting Files " page 149.
- 5 If you wish to enter your own choice of filename, choose DISK OPERATION **SAVE** FILE TYPE **SCREEN DUMP**.

---

#### NOTE

You have the option of an auto generated filename or entering your chosen filename. The file name can have a maximum of 8 characters. The file extension is fixed as .BMP. The file name must satisfy DOS requirements, that is, there must be no spaces or other illegal characters.

- 6 Move the highlighted cursor to NAME and enter the filename using **PREVIOUS CHAR** **NEXT CHAR** **→** **←** or press **SET** twice and use the pop-up keypad.
- 7 Choose the display you want to store on disk and press **PRINT NOW**. After a few second the message "SAVING SCREEN DUMP . . . (XX% COMPLETE)" is displayed.

## Selecting and Using "Other" Features

### Running Self Test

---

## Running Self Test

### Description

Before using the OmniBER 725 to make measurements, you can run Self Test ALL TESTS to ascertain the integrity of the OmniBER 725. These tests take between at least 1 hour to complete depending on the options fitted. Alternatively you can run Confidence Tests which only takes 2 to 3 minutes to complete. This is not a full verification but performs BER measurements with internal and external loopbacks fitted.



### HOW TO:

#### Run ALL TESTS

- 1 Choose TEST TYPE **ALL TESTS** on the **[OTHER] SELF TEST** display.
- 2 Insert a formatted disk into the instrument disk drive.
- 3 Make the loopback connections listed below:  
Connect Transmit module 75Ω OUT to Receive module 75Ω IN  
Connect Transmit module 100/120Ω OUT to Receive module 100/120Ω IN  
Connect Transmit module 75Ω MUX to Receive module 75Ω DEMUX  
Connect Transmit module 100/120Ω MUX to Receive module 100/120Ω DEMUX  
Connect Multirate Analyser IN to OUT  
Connect Optical OUT to Optical IN via a 15 dB attenuator.

---

### NOTE

If any or all of these connections are not made the OmniBER 725 will FAIL Self Test.

## Selecting and Using "Other" Features

### Running Self Test

- 4 Press **RUN/STOP** to activate the Self Test. TEST STATUS RUNNING will be displayed.

The information relating to TEST TYPE, TEST NUMBER and SUBTEST NUMBER will change as the Self Test progresses.

If the OmniBER 725 is functioning correctly, after a time of at least 1 hour, TEST STATUS PASSED is displayed.

If TEST STATUS [FAIL nnn] is displayed, the OmniBER 725 should be returned to a service office for repair.



#### HOW TO:

#### Run Confidence TESTS

- 1 Choose TEST TYPE **CONF. TESTS** on the **OTHER SELF TEST** display.
- 2 Insert a formatted disk into the instrument disk drive.
- 3 Make the loopback connections listed below:  
Connect Transmit module 75Ω OUT to Receive module 75Ω IN  
Connect Transmit module 100/120Ω OUT to Receive module 100/120Ω IN  
Connect Transmit module 75Ω MUX to Receive module 75Ω DEMUX  
Connect Transmit module 100/120Ω MUX to Receive module 100/120Ω DEMUX  
Connect Multirate Analyser IN to OUT  
Connect Optical OUT to Optical IN via a 15 dB attenuator.
- 4 Press **RUN/STOP** to activate the Self Test. TEST STATUS RUNNING will be displayed.  
The information relating to TEST TYPE, TEST NUMBER and SUBTEST NUMBER will change as the Self Test progresses.



## Selecting and Using "Other" Features

### Running Self Test

If the OmniBER 725 is functioning correctly, after a time of 2 to 3minutes, TEST STATUS PASSED is displayed.

If TEST STATUS [FAIL nnn] is displayed, the OmniBER 725 should be returned to a service office for repair.

---

#### NOTE

---

Each individual self test requires unique loopback connections. To obtain a list of the connections required move the highlighted cursor to CABLING INFO and press **SET**. The Loopbacks list will appear on the display.

FUNCTION	SELF TEST
TEST TYPE	PDH TESTS
TEST NUMBER	3
SUBTEST NUMBER	---
TEST STATUS	<b>READY</b>

PDH SELFTEST - CABLING INFORMATION

REQUIRED WIRELESS CONNECTIONS:

- CONNEC: PDH OUT TO PDH IN (BRUNNEN 300) (24x/24 24x/24)
- CONNEC: PDH OUT TO PDH IN (BRUNNEN 300/2)
- CONNEC: PDH TO PDH (BRUNNEN 300)
- CONNEC: PDH TO PDH (BRUNNEN 300/2)

STATUS:

**MULTIPLE  
WINDOW**

Selecting and Using "Other" Features  
**Running Self Test**

---

# Appendix A

---

## STS-1 SPE Background Patterns

The following tables list the background patterns available when selecting specific foregrounds.

STS-1 SPE Background Patterns

**Table 1 STS-1 SPE Background Patterns**

<b>Foreground</b>	<b>Background choice in Foreground TUG-3</b>	<b>Background choice in other AU-3</b>
STS-1 SPE	-----	VT-1.5, VT-2 Mapping or SPE Word (8 bit user programmable word).
VT-6	Pattern in other VT-6s is numbered. They contain the word 11NNNNNx, where NNNNN is the binary number of the TU.	VT-1.5, VT-2 Mapping or SPE Word (8 bit user programmable word).
VT-2 (2 Mb/s) Unframed	VT-2 structure, unframed with 2E15-1, 2E9-1 PRBS or 1100 word pattern in all information bits.	VT-2, VT-1.5 Mapping or SPE Word (8 bit user programmable word).
VT-1.5 (DS1) Unframed	VT-1.5 structure, D4 framed with 2E15-1, 2E9-1 PRBS or 1100 Word pattern in other TU-11s.	VT-2, VT-1.5 Mapping or SPE Word (8 bit user programmable word).

---

# Appendix B

---

## ETSI/ANSI Terminology

A table of ETSI terms with their ANSI equivalents.



ETSI/ANSI Terminology  
**ETSI/ANSI Conversion and Equivalent Terms**

**Table 2** **ETSI / ANSI Terminology , continued**

ETSI Term	ANSI Term
MS-RDI	Line FERF / RDI-L
Multiplexer Section Overhead	Line Overhead
Network Node Interface	Line Interface
OOF	SEF (severely errored frame defect)
Path AIS / AU-AIS	AIS-P
Path REI / HP REI	REI-P
Path FERF / HP RDI	RDI-P
Path IEC / AU-IEC	IEC-P
Path Overhead	Path Overhead
Regenerator	Repeater
Regenerator Section (RS)	Section
Regenerator Section Overhead	Section Overhead
Remote Alarm Indicator	RAI
RS-DCC	Section DCC (DCC-S)
Section Overhead (SOH)	Transport Overhead (TOH)
S-n.1 or S-n.2 short haul	Short Reach (SR)
SOH	TOH
STM-m	OC-n / STS-n (where $m = n \div 3$ for $m \geq 1$ )
STM-0	STS-1
STM-1	OC3c / STS-3c
STM-4	OC-12 / STS-12
STM-16	OC-48 / STS-48
Tributary Unit (TU)	Virtual Tributary (VT)

ETSI/ANSI Terminology  
**ETSI/ANSI Conversion and Equivalent Terms**

**Table 2** **ETSI / ANSI Terminology , continued**

ETSI Term	ANSI Term
TU	VT
TU-11	VT 1.5
TU-12	VT 2
TU-2	VT 6
TU-3	NONE
TU BIP	VT BIP (CV-V)
TU RDI / LP-RDI	RDI-V
TUG	VT Group
TUG2	VT Group (12 columns)
TUG3	VT Group (86 columns)
TU multiframe	VT superframe
TU PATH AIS	VT AIS (AIS-V)
VC	SPE
VC4	STS3C SPE
Virtual Container (VC)	Synchronous Payload Envelope (SPE)

NOTE: VC is an ETSI abbreviation for Virtual Container and an ETSI / ANSI abbreviation for (ATM) Virtual Channel. The context of VC must therefore be taken into account when converting between standards.



---

# Appendix C

---

## Glossary of Terms

A brief explanation of terms and abbreviations used in the OmniBER 725.

## Glossary of Terms

### Glossary

<b>A</b>		BPV	Bipolar Violation
AAL	ATM Adaptation Layer	<b>C</b>	
ABR	Available Bit Rate	CAS	Channel Associated Signaling
ADDF	Automatic Digital Distribution Frame	CBR	Constant Bit Rate
ADM	Add Drop Multiplexer	CCITT	Consultative Committee on International Telegraphy and Telephony
ADPCM	Adaptive Differential Pulse Coded Modulation	CCS	Common Channel Signaling
AIM	ATM Inverse Multiplexer	CDT	Cell Delay Tolerance
AIS	Alarm Indication Signal	CDV	Cell Delay Variation
AMI	Alternate Mark Inversion	CEPT	Committee of European PTTs
ANSI	American National Standards Institute	CMI	Coded Mark Inversion
APS	Automatic Protection Switching	CO	Central Office
ASCII	American Standard Code for Information Interchange	CPE	Customer Premises Equipment
ATM	Asynchronous Transfer Mode	CRC	Cyclic Redundancy Check
AU	Administrative Unit	CSES	Consecutive Severely Errored Seconds
AU-AIS	AU Pointer Justification Event	<b>D</b>	
AU-LOP	Loss of AU Pointer	D/I	Drop and Insert
AU-NDP	AU Pointer New Data Flag	DACS	Digital Access and Cross-connect Switches
<b>B</b>		dB	Decibel
BBER	Background Block Error Ratio	DCC	Data Communications Channel
BC	Background Channel	DCS	Digital Cross-connect Switches
BCD	Binary Coded Decimal	DDF	Digital Distribution Frame
BER	Bit Error Rate	DDN	Digital Data Network
BERT	Bit Error Rate Testing	DTMF	Dual Tone Multifrequency Signaling
BIP	Bit Interleaved Parity		
BPS	Bits Per Second		

## Glossary of Terms

DWDM	Dense Wave Division Multiplexing	HP-IB	Hewlett-Packard Interface Bus (IEEE 488)
DXC	Digital Cross Connect	HP-PLM	High Path Payload Label Mismatch
<b>E</b>		HP-RDI	High Path Remote Defect Indication
EB	Error Block	HP-REI	High Path Remote Error Indication
EOW	Engineering Orderwire	HP-TIM	High Path Trace Identifier Mismatch
ES	Error Seconds	HP-UNEQ	High Path Unequipped
ESF	Extended Superframe Format	Hz	Hertz (cycles per second)
ESR	Errored Second Ratio		
ETSI	European Telecommunications Standards Institute	<b>I</b>	
<b>F</b>		ISDN	Integrated Services Digital Network
FAS	Frame Alignment Signal	ISO	International Standards Organization
FC	Foreground Channel	ITU	International Telecommunications Union
FDDI	Fiber Distributed Data Interface		
FEAC	Far End Alarm Channel	<b>L</b>	
FEBE	Far End Block Error	LAN	Local Area Network
FEC	Forward Error Connection	LO	Low Order
FERF	Far End Receive Failure	LOF	Loss of Frame
<b>G</b>		LOP	Loss of Path
GUI	Graphical User Interface	LOS	Loss of Signal
<b>H</b>		LP-PLM	Low Path Payload Label Mismatch
HDB3	High Density Bipolar 3	LP-RDI	Low Path Remote Defect Indication
HEC	Header Error Control	LP-REI	Low Path Remote Error Indication
HO Path RAI	High Order Path Remote Alarm Indication	LP-RFI	Low Path Remote Failure Indication
HO PTE	High Order Path Terminating Equipment	LP-TIM	Low Path Trace Identifier Mismatch
HO	High Order	LP-UNEQ	Low Path Unequipped
		LSB	Least Significant Bit

## Glossary of Terms

LTE	Line Terminal Equipment	PBX	Private Branch Exchange	
LTM	Line Terminal Multiplexer	PC	Personal Computer	
<b>M</b>		PCM	Pulse Code Modulation	
		PCN	Personal Communications Network	
	MS	Multiplex Section	PCR	Peak Cell Rate
	MS-AIS	Multiplex Section AIS	PDH	Plesiochronous Digital Hierarchy
	MSOH	Multiplex Section Overhead	PES	Percentage Error Second
	MS-RDI	Multiplex Section Remote Defect Indication	POH	Path Overhead
			POTS	Plain Old Telephone Service
	MS-REI	Multiplex Section Remote Error Indication	PRBS	Pseudo Random Binary Sequence
	MTBF	Mean Time Between Failures	PSN	Packet Switched Network
	MTIJ	Maximum Tolerance Input Jitter	PSTN	Public Switched Telephone Network
MUX	Multiplexer	PT	Payload Type	
<b>N</b>		PTT	Public Telephone and Telegraph	
	NDF	New Data Flag	PTE	Path Terminating Equipment
	NE	Network Element	PU	Physical Unit
	NFAS	Non Frame Alignment Signal		
			<b>Q</b>	
<b>O</b>		QoS	Quality of Service	
	OAM	Operations, Administration and Maintenance	<b>R</b>	
	OC	Optical Carrier	RAI	Remote Alarm Indication
	OH	Overhead	RDI	Remote Defect Indication
	OLTU	Optical Line Terminal Unit	REBE	Remote End Block Error
	OOF	Out of Frame	REI	Remote Error Indication
	OS	Operations System	RF	Radio Frequency
			RS	Regenerator Section
<b>P</b>				
	P/AR	Peak-to-Average Ratio		

## Glossary of Terms

RSOH	Regenerator Section Overhead	TE	Terminal Equipment
RSTE	Regenerator Section Terminating Equipment	TMN	Telecommunications Management Network
RS-TIM	Regenerator Section Trace Identifier Mismatch	TOH	Transport Overhead
RX	Receiver	TU	Tributary Unit
<b>S</b>		TU-AIS	TU Alarm Indication Signal
S/N	Signal to Noise Ratio	TUG	Tributary Unit Group
SCPI	Standard Commands for Programmable Instrumentation	TU-LOM	TU Loss of Multiframe
SDH	Synchronous Digital Hierarchy	TU-LOP	Loss of TU Pointer
SDXC	Synchronous Digital Cross Connect	TU-NDF	TU Pointer New Data Flag
SEF	Severely Errored Frame	TX	Transmitter
SES	Severely Errored Second	<b>U</b>	
SESR	Severely Errored Seconds Ratio	UI	Unit Interval
SF	Super Frame	<b>V</b>	
SOH	Section Overhead	VBR	Variable Bit Rate
SONET	Synchronous Optical Network	VC	Virtual Channel
SPE	Synchronous Payload Envelope	VC-n	Virtual Container
STE	Section Terminating Equipment	VP	Virtual Path
STM	Synchronous Transport Module	VT	Virtual Tributary
STS	Synchronous Transport Signal	VXI	VMEbus Extensions for Instrumentation
SUT	System Under Test	<b>W</b>	
<b>T</b>		WAN	Wide Area Network
TDM	Time Division Multiplexing	WDM	Wave Division Multiplexing
TDMA	Time Division Multiple Access		

Glossary of Terms

---

# Index

---

## A

A1A2 Boundary Function, 47  
Accessories, 13  
  Connection, 13  
Alarm scan  
  SONET, 80  
Alarms & errors  
  SONET add, 52  
Analysis measurement  
  SONET, 74  
APS messages  
  generation, 66  
  monitoring, 43  
  test function, 66  
Automatic protection switch  
  message generation, 66  
Autotolerance, 96

## B

B/G mapping selection SDH, 26  
B/G mapping selection SONET, 26  
Background mapping selection SDH, 26  
Background mapping selection SONET,  
  26  
Background Patterns, 186  
Beep on received error, 173  
Binary interface selection  
  Receive interface, 29  
  Transmit interface, 26

## C

Capture overhead, 48  
Centronics printer, 132  
Cleaning Optical Connectors  
  Optical Connector cleaning, 12  
Clock and Data polarity selection  
  SDH receive, 29, 31  
  SDH transmit, 26  
Cold Start, 19  
Color control for error threshold indica-  
  tion, 177  
Confidence tests, 182  
Configuration  
  copy from disk to instrument, 161  
  copy from instrument to disk, 159  
  recall from disk, 158  
  recall from instrument, 146  
  store in instrument, 144

  store on disk, 157  
Connecting  
  Accessories, 13  
  ESD Precautions Necessary, 16  
  To the Network, 16  
Connectors  
  Optical Interface, 17  
Conventions, 11  
Copy configuration  
  from disk to instrument, 161  
  from instrument to disk, 159  
Coupling, 170  
Create directory, 163

## D

Data  
  logging to disk, 136  
Date & time, 171  
DCC  
  drop, 67  
  insert, 67  
DCC Insert test function, 67  
Delay time, jitter tolerance, 97  
Delete  
  directory, 164  
  file, 166  
Directory  
  create, 163  
  delete, 164  
  management, 163

## Disk

  accessing a directory, 149  
  accessing files, 149  
  adding descriptors to files, 167  
  copy configuration from instrument, 159  
  copy configuration to instrument, 161  
  copy graphics results from instrument,  
  155  
  create directory, 163  
  delete directory, 164  
  delete file, 166  
  format a disk, 147  
  label a disk, 148  
  managing directories, 163  
  managing files, 163  
  recall configuration, 158  
  recall graphics results, 154  
  rename a file, 165

  save graphics results, 152  
Drop  
  DCC, 67  
DSn  
  frequency measurement, 75  
Dumping display to disk, 179  
Dwell time, jitter tolerance, 97

## E

Error Indication  
  Audio setting, 173  
Error threshold indication  
  setting, 177  
Error threshold, jitter tolerance, 97  
Errors & alarms  
  SONET add, 52  
Errors and alarms SONET test function, 52  
ESD Precautions  
  For the Service Engineer, 16  
Extended jitter  
  measurement, 90  
  receive interface, 89  
External printer  
  connecting to parallel port, 138

## F

F/G mapping selection SDH, 26  
F/G mapping selection SONET, 26  
File  
  accessing, 149  
  delete, 166  
  descriptors, 167  
  management, 163  
  rename, 165  
Foreground mapping selection SDH, 26  
Foreground mapping selection SONET, 26  
Format a disk, 147  
Framed/Unframed Operation selection, 22  
Frequency measurement, 75  
Frequency offset  
  SDH line rate, 51  
  SONET, 50  
  SONET line rate, 50  
Front panel soft recovery, 19  
Functional Tests (Smart Test), 35

## G

Glossary of Terms, 191

---

# Index

---

- Glossary of terms, 191
- GPIB printer, 133
- graph storage, 176
- Graph storage resolution, 176
- Graphics
  - copy results from instrument to disk, 155
  - logging displays, 121
  - recall results from disk, 154
  - recall stored results, 115
  - saving results to disk, 152
  - saving to instrument, 114
  - storage resolution, 114
  - viewing error & alarm summaries, 119
  - viewing the bar graphs, 117
- H**
- H4 byte
  - sequence setting, 41
- HANDSET Connector, 13
- HP path label monitoring, 43
- I**
- Insert
  - DCC, 67
- Internal printer
  - change paper, 139
  - logging, 134
  - print head cleaning, 142
- J**
- J1, J2 bytes
  - setting, 41
- Jitter
  - measurement, 87, 90
  - receive interface, 86, 89
  - transmit interface, 84
- Jitter mask, 108, 110
- Jitter Tests (Smart Test), 35
- Jitter tolerance
  - delay time, 97
  - dwell time, 97
  - error threshold, 97
  - graph result, 98
  - logging results, 128
  - measurement, 96
  - number of points, 97
  - text result, 98
- Jitter transfer
  - accuracy, 99
  - calibration, 101
  - delay time, 102
  - dwell time, 102
  - graph results, 105
  - input mask, 102
  - logging results, 130
  - measurement, 99
  - number of points, 102
- K**
- Keyboard lock, 172
- L**
- Labeling a disk, 148
- Labels, overhead monitoring, 43
- Laser apertures
  - Location, 18
- LID Connector, 13
- Line overhead
  - insertion, 46
- Location of Laser Apertures, 18
- Lock keyboard, 172
- Locking the Mask
  - Jitter, 109
- Logging
  - content, 124
  - control, 124
  - device, 124, 126
  - error event, 123
  - graph displays, 121
  - jitter tolerance results, 128
  - jitter transfer results, 130
  - on Demand, 126
  - Overhead Capture, 126
  - overhead snapshot, 126
  - Pointer Graph, 126
  - result logged, 124
  - results, 123
  - results snapshot, 126
  - selftest failures, 126
  - SONET Tributary Scan, 126
  - test period, 123
  - to Centronics printer, 132
  - to GPIB printer, 133
  - to internal printer, 134
  - to RS-232-C printer, 135
  - when, 124
- Logging Data to Disk, 136
- LOH
  - insertion, 46
- M**
- Managing
  - disk directories, 163
  - disk files, 163
- Measuring
  - extended jitter, 90
  - frequency, 75
  - jitter, 87
  - jitter tolerance, 96
  - optical power, 76
  - overhead BER, 70
  - SONET analysis, 74
  - wander, 94
- Monitor
  - receive overhead, 42
- MSP messages
  - generation, 66
  - monitoring, 43
  - test function, 66
- O**
- Optical
  - clock stress, 64
  - power measurement, 76
- OPTICAL IN Connector, 18
- Optical Interface Connectors, 17
- OPTICAL OUT Connector, 18
- Overhead
  - all labels, 41
  - APS messages monitoring, 43
  - BER test, 70
  - capture, 48
  - default transmit, 40
  - H4 byte sequences, 41
  - Labels monitoring, 43
  - monitor receive, 42
  - path monitor, 43
  - path transmit, 41
  - sequence generation, 46
  - TOH transmit, 40
  - trace messages, 44
  - transmit, 40
- Overhead capture
  - trigger, 48



---

# Index

---

Overhead capture test function, 48  
Overhead sequence  
  repeat run, 46  
  single run, 46

## P

Paper change  
  internal printer, 139  
Parallel port  
  connecting Centronics printer, 138  
Path overhead  
  capture and display, 48  
  insertion, 46  
POH  
  capture and display, 48  
  insertion, 46  
  monitor, 43  
  setting, 41  
Pointer adjustments  
  burst, 55  
  new pointer, 55  
  offset, 55  
Pointer adjustments test function, 54  
Pointer graph, 62  
Pointer graph test function, 62  
Polarity, binary clock and data selection,  
  26, 29, 31  
Precautions  
  ESD when connecting, 16  
Print head cleaning, 142  
Printer  
  Centronics, 132  
  Centronics, connecting to parallel port,  
    138  
  Centronics, logging to, 132  
  GPIB, logging to, 133  
  internal, changing paper, 139  
  internal, cleaning print head, 142  
  internal, logging to, 134  
  RS-232-C, logging to, 135  
Printer HP-IB, RS232, PARALLEL  
  ONLY Connector, 13  
Printing results from disk, 137

## R

Recall  
  configuration from disk, 158  
  configuration from instrument, 146

  graphics results from disk, 154  
  stored graph results, 115  
Receive interface  
  extended jitter, 89  
  jitter, 86, 89  
  SONET, 29  
  wander, 93  
Receive settings  
  Coupled to transmit, 170  
REI-L enable/disable, 175  
REI-L result enable, 175  
Remote Control HP-IB, RS232, 10 BASE  
  -T Connector, 13  
Rename a file, 165  
Resolution, 176  
Result, 175  
Results Definitions  
  Trouble Scan, 71  
RS-232-C  
  logging to printer, 135

## S

S1 sync status monitoring, 43  
Save  
  configuration to disk, 157  
  graphics results to disk, 152  
  graphics results to instrument, 114  
Screen dump to disk, 179  
SDH  
  line rate offset, 51  
  Mapping selection, 26  
Self Test  
  confidence tests, 182  
  Self test, 181  
Sequence generation test function, 46  
Sequences  
  Overhead generation, 46  
Settings (Smart Test), 35  
Short term period selection, 73  
Signal, 36  
Signal Loss  
  suspending test on, 174  
Signal Quality (Smart Test), 35, 36  
Smart Setup, 35  
Smart Test, 35  
SONET  
  alarm scan, 80  
  analysis measurement, 74

  APS messages, 66  
  DCC insert, 67  
  errors & alarms add, 52  
  frequency measurement, 75  
  frequency offset, 50  
  line rate offset, 50  
  Mapping selection, 26  
  MSP messages, 66  
  optical clock stress, 64  
  optical power measurement, 76  
  overhead BER test, 70  
  overhead capture, 48  
  overhead monitor, 42  
  overhead sequences, 46  
  overhead trace messages, 44  
  overhead transmit, 40  
  pointer adjustments, 54  
  pointer graph, 62  
  receive interface, 29  
  thru mode, 32  
  transmit interface, 24  
  tributary scan, 77

## Store

  configuration in instrument, 144  
  configuration on disk, 157  
Stress test test function, 64  
STS-1 SPE Background Patterns, 186  
Suspending Test on Signal Loss, 174  
Suspending test on signal loss, 174  
Synchronization source  
  SONET, 26

## T

Test function  
  APS messages, 66  
  DCC insert, 67  
  errors & alarms SONET, 52  
  MSP messages, 66  
  overhead BER test, 70  
  overhead capture, 48  
  pointer adjustments, 54  
  pointer graph, 62  
  sequence generation, 46  
  stress test, 64  
  tributary scan, 77  
Test period selection, 73  
Test Timing, 73  
Threshold indication setting, 177

---

---

# Index

---

Thru mode SONET, 32  
Time & date, 171  
TOH  
  Setting, 40  
Trace messages, 44  
Transmit interface  
  jitter, 84  
  SONET, 24  
  wander, 92  
Transmit settings  
  Coupled to Receive, 170  
Tributary scan, 77  
Trouble Scan, 71

## U

Unframed Operation selection, 22  
User defined, 110

## V

VGA Connector, 13  
Viewing  
  bar graphs, 117  
  graphics error & alarm summaries, 119

## W

Wander  
  measurement, 94  
  receive interface, 93  
  transmit interface, 92  
warning symbols, 18

---

**About This Edition**

This edition of the OmniBER 725 SONET User Guide documents the product as of November 2000.

Copyright © 2000 Agilent Technologies Limited. All rights reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

**Sales and Service Offices**

An up-to-date list of Agilent Offices is available through the Agilent Website at URL:  
<http://www.agilent.com>

## **In This Book**

This book tells you how to select and use the various instrument functions available.



Printed in U.K. 11/00  
J1409-90003



**Agilent Technologies**