


8265 Nways ATM Switch



Command Reference Guide

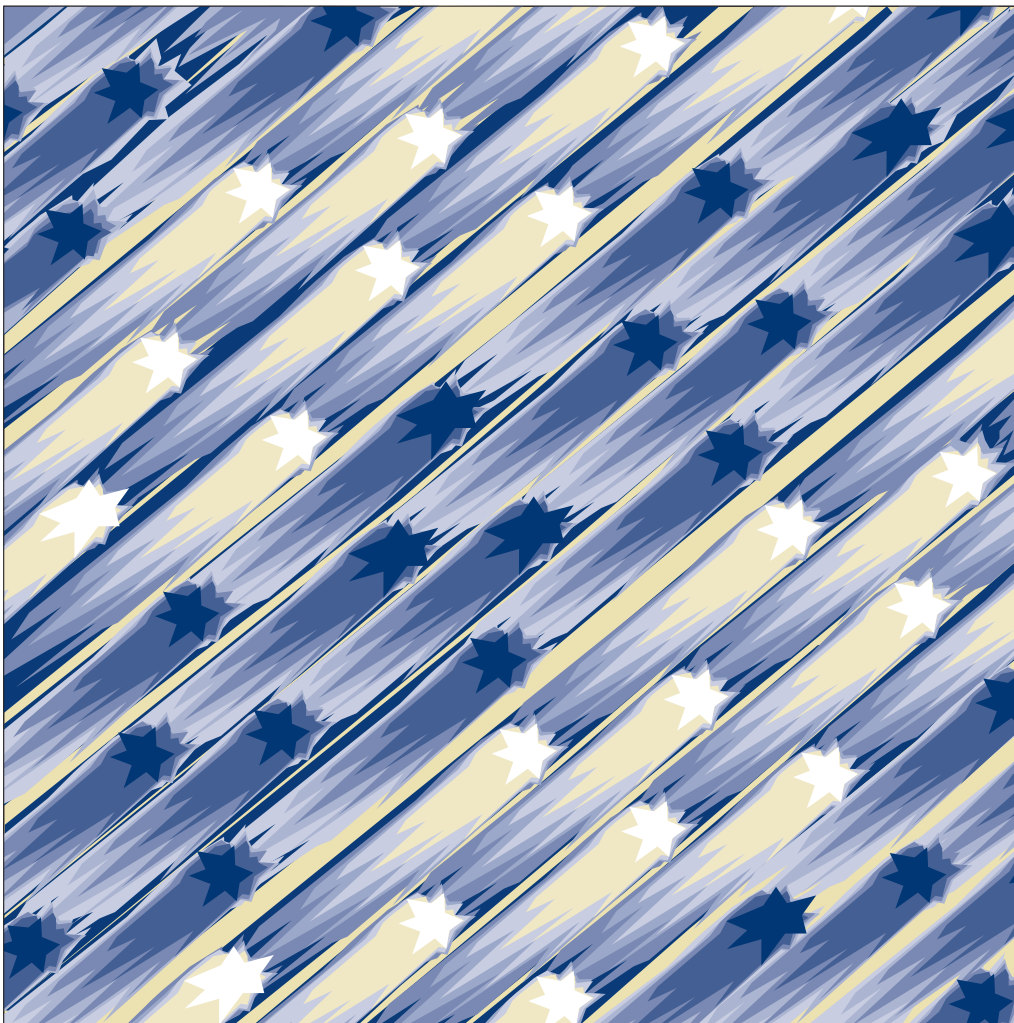

8265 Nways ATM Switch



Command Reference Guide

Note!

Before using this information and the product it supports, be sure to read the general information under Appendix C, "Notices" on page 241.

Third Edition (September 1998)

The information contained in this manual is subject to change from time to time. Any such changes will be reported in subsequent revisions.

Order publications through your IBM representative or the IBM branch office serving your locality. Publications are not stocked at the address given below.

A form for readers' comments appears at the back of this publication. If the form has been removed, address your comments to:

IBM France
Centre d'Etudes et Recherches
Service 0798 - BP 79
06610 La Gaude
France

- FAX: 33 4 93 24 77 97
- E-mail: FRIBMQF5 at IBMMAIL
- IBM Internal Use: LGERCF AT LGEPROFS
- Internet: rcf_lagaude@vnet.ibm.com

When you send information to IBM, you grant IBM a non-exclusive right to use or distribute the information in any way it believes appropriate without incurring any obligation to you.

© **Copyright International Business Machines Corporation 1997, 1998. All rights reserved.**

Note to U.S. Government Users — Documentation related to restricted rights — Use, duplication or disclosure is subject to restrictions set forth in GSA ADP Schedule Contract with IBM Corp.

Contents

About this Book	vii
Who Should Use this Book	vii
How to Use this Book	vii
Prerequisite Knowledge	vii
Where to Find More Information	vii
New and Changed Commands	viii
New Commands	viii
Changed Commands	ix
Chapter 1. Introduction	1
Where to Enter ATM Commands	1
Keyboard Functions	1
Command Modes	2
Command Syntax Diagrams	3
Command-Line Help (?)	4
Chapter 2. ATM Commands	7
ATM_PING	7
CLEAR COMMUNITY	9
CLEAR DEVICE LAN_EMULATION_CLIENT	10
CLEAR E164	11
CLEAR ERROR_LOG	12
CLEAR HOST	13
CLEAR LAN_EMUL CONFIGURATION_SERVER	14
CLEAR PARTY	15
CLEAR PNNI SUMMARY_ADDRESS	16
CLEAR PVC	17
CLEAR REACHABLE_ADDRESS	18
CLEAR SECURITY ATM_ADDRESS	19
CLEAR SECURITY VIOLATION_LOG	20
CLEAR TRACE_LOG	21
CLEAR VPC_LINK	22
COMMIT PNNI	23
DOWNLOAD	24
DUMP PNNI	26
DUMP SIGNALLING	27
LOGOUT	28
MAINTAIN	29
PING	30
RESET ATM_SUBSYSTEM	31
RESET HUB	32
RESET MODULE	33
REVERT	34
SAVE	36
SET ALERT	38
SET CLOCK	39
SET COMMUNITY	40
SET DEVICE ACCOUNTING	42
SET DEVICE ARP_SERVER	43
SET DEVICE CONFIG_FUNCTIONS	44

SET DEVICE CONTACT	45
SET DEVICE DEFAULT_GATEWAY	46
SET DEVICE DIAGNOSTICS	47
SET DEVICE DUPLICATE_ATM_ADDRESSES	48
SET DEVICE ETHERNET_MAC_ADDRESS	49
SET DEVICE IP_ADDRESS	50
SET DEVICE LAN_EMULATION_CLIENT	51
SET DEVICE LOCATION	53
SET DEVICE NAME	54
SET DEVICE PASSWORD	55
SET DEVICE ROLE	57
SET E164	58
SET HOST	59
SET LAN_EMUL CONFIGURATION_SERVER	60
SET LAN_EMUL SERVER	61
SET MODULE	63
SET PARTY_PVC	65
SET PNNI CRANKBACK	67
SET PNNI NODE:n ATM_ADDRESS	68
SET PNNI NODE:n CONFIGURED NOT_CONFIGURED	69
SET PNNI NODE:n LEADER_PRIORITY	70
SET PNNI NODE:n LEVEL_IDENTIFIER	71
SET PNNI NODE:n PEER_GROUP_ID	72
SET PNNI NODE:n SUMMARY_ADDR	73
SET PNNI PATH_SELECTION	74
SET PORT	75
SET POWER MODE	88
SET POWER OVERHEAT_AUTO_POWER_DOWN	89
SET POWER SLOT	90
SET PROFILE THRESHOLD	91
SET PVC	92
SET REACHABLE_ADDRESS	95
SET SECURITY ATM_ADDRESS	97
SET SECURITY AUTOLEARN	98
SET SECURITY DEFAULT	99
SET SECURITY ESI_ADDRESS	101
SET SECURITY LOG	102
SET SECURITY MODE	103
SET SECURITY PORT	104
SET SECURITY TRAP	106
SET SIGNALLING CALL_PACING	107
SET TERMINAL BAUD	108
SET TERMINAL CONSOLE_PORT_PROTOCOL	109
SET TERMINAL DATA_BITS	110
SET TERMINAL HANGUP	111
SET TERMINAL PARITY	112
SET TERMINAL PROMPT	113
SET TERMINAL SLIP_ADDRESSES	114
SET TERMINAL STOP_BITS	115
SET TERMINAL TIMEOUT	116
SET TFTP FILE_NAME	117
SET TFTP FILE_TYPE	118
SET TFTP SERVER_IP_ADDRESS	120
SET TFTP TARGET_MODULE	121

SET TFTP TARGET_PORT	122
SET THRESHOLD MODULE	123
SET THRESHOLD PORT	124
SET TRACE	125
SET VPC_LINK	127
SHOW ALERT	138
SHOW CLOCK	139
SHOW COMMUNITY	140
SHOW DEVICE	141
SHOW E164	145
SHOW FUTURE_PNNI CRANKBACK	146
SHOW FUTURE_PNNI CONFIGURATION_STATE	147
SHOW FUTURE_PNNI NODE	148
SHOW FUTURE_PNNI PATH_SELECTION	149
SHOW FUTURE_PNNI SUMMARY_ADDRESS	150
SHOW HOST	151
SHOW HUB	152
SHOW ILMI	153
SHOW INVENTORY	154
SHOW LAN_EMUL CONFIGURATION_SERVER	157
SHOW LAN_EMUL SERVERS	158
SHOW MODULE	159
SHOW PNNI CONFIGURATION_STATE	163
SHOW PNNI CRANKBACK	164
SHOW PNNI DATA_BASE	165
SHOW PNNI HIERARCHY	166
SHOW PNNI NEIGHBOR	167
SHOW PNNI NODE:n	168
SHOW PNNI PATH_SELECTION	169
SHOW PNNI PEER_GROUP_LEADER_ELECTION	170
SHOW PNNI PEER_GROUP_MEMBERS	171
SHOW PNNI SUMMARY_ADDRESS	172
SHOW PORT	173
SHOW POWER	176
SHOW PROFILE	178
SHOW PVC	179
SHOW REACHABLE_ADDRESS	180
SHOW SECURITY	181
SHOW SIGNALLING ATM_INTERFACE	184
SHOW SIGNALLING CALL_PACING	185
SHOW SIGNALLING CONNECTION	186
SHOW SIGNALLING CONTROL	187
SHOW SIGNALLING CROSS_CONNECTIONS	188
SHOW SNOOP	189
SHOW TERMINAL	190
SHOW TFTP	191
SHOW THRESHOLDS	192
SHOW TRACE	193
SHOW VPC_LINK	194
SNOOP_DISABLE	196
SNOOP_ENABLE	197
SWAP FPGA_PICOCODE	198
SWAP MICROCODE	199
TELNET	200

UNCOMMIT PNNI	201
UPLOAD	202
WRAP	204
Appendix A. Port-Specific Commands	207
100 Mbps Port Parameters	208
155 Mbps Port Parameters	209
622 Mbps Port Parameters	210
E1/T1 and IMA Port Parameters	211
E3/DS3 Port Parameters	220
OC3/STM1 Port Parameters	226
Appendix B. Maintenance Mode Commands	231
Maintenance Mode Functions	231
BOOT	232
CLEAR	233
DOWNLOAD OUT_OF_BAND	234
SET	236
SHOW	237
SWAP ACTIVE	239
USE BAUD	240
Appendix C. Notices	241
Product Page/Warranties	241
Industry Standards Reflected in This Product	242
Trademarks and Service Marks	242
Bibliography	243
8265 Documentation	243
Related Documentation	243
ATM Forum	243

About this Book

This book describes the commands that are used to manage an IBM 8265 Nways ATM Switch.

Who Should Use this Book

This book is intended for the following people at your site:

- ATM network administrator
- ATM network operator
- Hardware installer.

How to Use this Book

This book contains the following chapters and appendixes:

- **Chapter 1, “Introduction” on page 1** describes how to enter ATM commands from the configuration console.
- **Chapter 2, “ATM Commands” on page 7** gives a description, full syntax, and examples for each command. The commands are listed in alphabetical order.
- **Appendix A, “Port-Specific Commands” on page 207** describes parameters for the commands that apply only to specific ATM media modules.
- **Appendix B, “Maintenance Mode Commands” on page 231** describes the commands available when the 8265 Switch is running in Maintenance mode.

Prerequisite Knowledge

To understand the information presented in this book, you should be familiar with:

- Features and characteristics of the IBM 8265 Control Point, as described in the *IBM 8265 Nways ATM Switch Control Point and Switch Module: Installation and User's Guide*, SA33-0456 and the *IBM 8265 Nways ATM Switch: User's Guide*, SA33-0441.
- Principles of asynchronous transfer mode (ATM) technology
- ATM Forum UNI Specification V3.0, V3.1 and V4.0.
- ATM Forum PNNI Specification V1.0.
- ATM Forum ILMI 4.0 Specification.

Where to Find More Information

Refer to the documentation listed in the “Bibliography” on page 243.

World Wide Web

You can access the latest news and information about IBM network products, customer service and support, and microcode upgrades via the Internet, at the URL:

<http://www.networking.ibm.com>

New and Changed Commands

New Commands

- ATM_PING
- CLEAR E164
- DUMP SIGNALLING DATABASE
- SET E164
- SET LAN_EMUL SERVER
- SET PNNI NODE:n CONFIGURED | NOT_CONFIGURED
- SET PNNI NODE:n LEADER_PRIORITY
- SET POWER OVERHEAT_AUTO_POWER_DOWN
- SET PROFILE THRESHOLD
- SET SIGNALLING CALL_PACING
- SET THRESHOLD MODULE
- SET THRESHOLD PORT
- SHOW E164
- SHOW FUTURE_PNNI CRANKBACK
- SHOW ILM
- SHOW LAN_EMUL SERVERS
- SHOW PNNI DATABASE
- SHOW PNNI HIERARCHY
- SHOW PNNI NEIGHBOR
- SHOW PNNI PEER_GROUP LEADER_ELECTION
- SHOW PROFILE
- SHOW SIGNALLING CALL_PACING
- SHOW SIGNALLING CONNECTION
- SHOW SNOOP
- SHOW THRESHOLDS

Changed Commands

- CLEAR PARTY—Added support for the internal port on the ATM Control Point.
- CLEAR PVC—Added support for the internal port on the ATM Control Point.
- DUMP SIGNALLING CROSS_CONNECTIONS—Added support for the internal port on the ATM Control Point.
- SET COMMUNITY—Added support for HTTP access.
- SET DEVICE CONFIG_FUNCTIONS—Added dynamic creation of memory configurations, with expanded configuration help.
- SET HOST—Added support for ATM addresses.
- SET PARTY_PVC—Added support for the internal port on the ATM Control Point. Clarified specification of *slot.port* on remote endpoints.
- SET PNNI CRANKBACK—Added support for Try Alternate Route and Try Alternate Link options.
- SET PNNI NODE:n commands—Added support for multi-level PNNI hierarchy.
- SET PNNI NODE:n SUMMARY ADDRESS—Added support for suppressed internal and exterior addresses.
- SET PORT—The following changes were made:
 - Replaced PUBLIC_UNI port type with UNI_TYPE:PUBLIC parameter on the UNI port type.
 - Added support for connection shaping
 - Added support for E164 address mapping
 - Added support for PNNI link aggregation.
- SET PVC—Added support for the internal port on the ATM Control Point. Clarified specification of *slot.port* on remote endpoints.
- SET REACHABLE ADDRESS—Added support for organizational and routing level scopes.
- SET TFTP FILE_TYPE—New file types and code updates supported.
- SET VPC_LINK—The following changes were made:
 - Removed VPC_SERVICE_CATEGORY parameter.
 - Added SHAPING parameter.
 - Added support for PNNI link aggregation.
 - Added support for defining a range of VPCs with one command.
- SHOW INVENTORY—Added support for hub and module displays.
- SHOW MODULE—Added support for IMA modules.
- SHOW PNNI PTSE_SELF_ORIGINATED—Replaced by SHOW PNNI DATABASE.
- SHOW PVC—Added support for the internal port on the ATM Control Point.
- SHOW SIGNALLING ATM_INTERFACE—Added support for the internal port on the ATM Control Point.
- SHOW SIGNALLING CROSS_CONNECTIONS—Added support for the internal port on the ATM Control Point.

Chapter 1. Introduction

This chapter explains how to enter ATM commands to manage the ATM subsystem in an IBM 8265.

Where to Enter ATM Commands

ATM commands can be entered either:

- From a local configuration console attached to the CPSW module's RS-232 console port
- From a session on a remote configuration console via the TELNET protocol.

Commands are entered on the current command line, after the console prompt.

When working in a remote session, you can use all ATM commands except for Maintenance mode commands (see Appendix B, "Maintenance Mode Commands" on page 231) and the TELNET command.

For guidelines on attaching a configuration console to the CPSW module, see the *IBM 8265 Nways ATM Switch: User's Guide*.

Keyboard Functions

BS (Backspace)	Moves the cursor one space backward and deletes the character.
Enter	Runs the command or prompts you for missing parameters.
Ctrl + C	Cancels the command that is currently entered and returns the prompt.
Space bar	Automatically completes a partially entered command or keyword.
Ctrl + R	Recalls the last command entered (but does not run it unless you press Enter). Repeat to scroll through the last 10 commands entered.
Ctrl + L	Creates a new command line and displays the command currently being edited.
?	Displays a list of possible completions (commands, keywords, or parameters). See "Command-Line Help (?)" on page 4 for further information.

When a console display requires more than one screen to view the complete contents, the first screen of data is displayed followed by the "MORE..." message, and the following keyboard options are available:

Any key	Displays the next screen of data.
L	Displays the next line of data.
Ctrl + C	Cancels the display.

Command Modes

ATM commands fall into two groups:

- Administrator commands
- User commands

Administrator Commands

Administrator commands are only accessible after logging on with the Administrator password (see “SET DEVICE PASSWORD” on page 55). The Administrator has access to all ATM commands (including Maintenance Mode commands — see Appendix B, “Maintenance Mode Commands” on page 231).

User Commands

The following commands are accessible with the User password:

- LOGOUT
- PING
- All SHOW commands
- TELNET

Command Syntax Diagrams

Each command in this book is described using a standard syntax diagram, showing the sequence and combination of keywords and parameters.




Figure 1. Sample Syntax Diagram

As shown in Figure 1, the main elements of a syntax diagram are:

- The command, shown in CAPITAL letters
- Variables, shown in *lowercase italic* letters. Where multiple keywords or variables may be entered, an arrow is shown, as above *variable_n*.
- Keywords, also in CAPITAL letters. Default keywords are shown above the command line. Optional keywords are shown below a blank section of the command line.

Notes:

1. When entering ATM commands, you can enter parameters in uppercase, lowercase, or mixed-case letters. For example, you can enter CLEAR ERROR_LOG, clear error_log, or even CLEAR Error_Log.
2. When in Maintenance mode, the prompt >> is displayed.
3. When configuring ATM media modules and their ports, you must specify the slot number in which the module has been installed. Valid slot numbers for ATM media modules are in the range 1 to 8 and 12 to 17. (If a redundant CPSW module is installed in slots 11 and 12, then slot 12 cannot be used for an ATM media module.)

Configuration Console Displays

The console displays shown with each command are correct at the time of publication of this guide. Actual displays may vary due to improvements in code or configuration options.

Command-Line Help (?)

Entering a question mark (?) from the command line displays a list of possible completions (commands, keywords, or parameters), depending on where you are in the command.

Commands

Entering ? directly after the command line prompt displays a list of valid commands. The following example shows the commands available to a user logged on with the User password:

```
8265ATM> ?  
  
Possible completions  
  logout  
  ping  
  show  
8265ATM>
```

Keywords and Parameters

Entering ? after all or part of an ATM command displays a list of valid keywords or parameters:

```
8265ATM> show security atm_address ?  
  
Possible completions  
  all  
  any  
OR  
  (slot)  
8265ATM>
```


ATM Addresses

Entering ? in place of one of the bytes in an ATM address displays the number of the next byte to be entered:

```
8265ATM> set reachable_address 5.1 96 39.99.99.99.99.99.?  
Possible completions  
    (byte 9)  
8265ATM>
```

Host Names

Entering ? in place of an IP or ATM address also lists the equivalent host names (see “SET HOST” on page 59) that have been defined.

```
8265ATM> set device default_gateway ?  
Possible completions  
    ventoux  
    grenoble  
    OR  
    (ip address)  
8265ATM>
```



Chapter 2. ATM Commands

ATM_PING

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to determine whether another 8265 ATM Switch is active and reachable. The command sends packets to the device to be "pinged" and requests the device to send back the same packets. ATM_PING loops continuously until the CTRL-C keys are pressed.

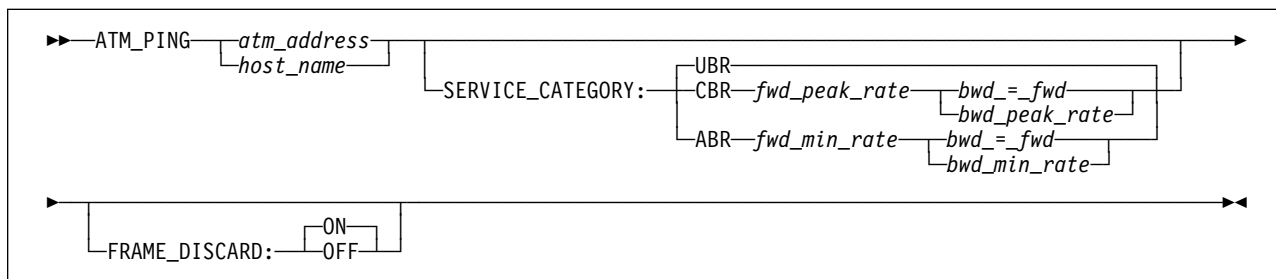

atm_address

Specifies the ATM address of the remote 8265 to ping.

Note: Pressing '?' (help) while entering the bytes of an ATM address displays a prompt indicating the number of the next byte to be entered.

host_name

Specifies the name of an ATM host as defined with the SET HOST command.

SERVICE_CATEGORY: UBR | CBR | ABR

Defines the quality of service category for the ATM PING.

fwd_peak_rate | bwd_peak_rate | bwd = fwd

Specifies the peak cellrate for each direction of a CBR ATM PING.

fwd_min_rate | bwd_min_rate | bwd = fwd

Specifies the minimum cellrate for each direction of an ABR ATM PING.

FRAME_DISCARD: ON | OFF

Enables and disables discarding of frames for the ATM PING.

Usage Notes

- ATM_PING can only be used to PING another 8265 ATM Switch. Other ATM devices will not respond.

Example

ATM_PING


```
8265ATM> atm_ping atMG13 service_category:ubr
Starting ATM ping (hit CTRL-C to stop) ...
--- ATM ping statistics ---
SVC established. Packets sent
ATM address: 47.41.82.65.13.13.00.00.00.00.00.13.13.65.00.00.00.94.13.00
ATM Ping (hostname: ATMG13): 1 packets sent, 1 received
ATM Ping (hostname: ATMG13): 2 packets sent, 2 received
ATM Ping (hostname: ATMG13): 3 packets sent, 3 received
8265ATM>
```

CLEAR COMMUNITY

Mode: Administrator

Code Card: IISP / PNNI

Use this command to delete a specific entry or all entries from the community table.



index Specifies the index number (Index on the SHOW COMMUNITY display) of the entry to be deleted from the table.

ALL Specifies that all entries will be deleted from the table.

Related Commands

SHOW COMMUNITY, SET COMMUNITY, SAVE COMMUNITY, REVERT COMMUNITY

Example

```

8265ATM> show community
Index Community_Name  IP_Address          Accesses
-----
  1 public            ***.***.***.***    Read - Write -No trap
  2 tarqin            9.100.109.204      Read -No write-No trap
  3 admin              24.137.24.25       Read - Write - Trap
  4 man                35.27.135.40       Read - Write - Trap
6 entries empty.

8265ATM> clear community 3
Entry 3 cleared.

8265ATM> show community
Index Community_Name  IP_Address          Accesses
-----
  1 public            ***.***.***.***    Read - Write -No trap
  2 tarqin            9.100.109.204      Read -No write-No trap
  3 man                35.27.135.40       Read - Write - Trap
7 entries empty.
8265ATM>
  
```

CLEAR DEVICE LAN_EMULATION_CLIENT

CLEAR DEVICE LAN_EMULATION_CLIENT

Mode: Administrator

Code Card: IISP / PNNI

Use this command to clear all LEC (LAN emulation client) settings.

Clearing a LEC will reset the ATM subsystem.

```
▶ CLEAR DEVICE LAN_EMULATION_CLIENT [TR  
                                     ] [ETH] ▶▶
```

TR Specifies that the Token Ring LEC should be cleared.

ETH Specifies that the Ethernet LEC should be cleared.

Example


```
8265ATM> clear device lan_emulation_client eth  
This call will reset the ATM subsystem.  
Are you sure ? (Y/N) Y
```

CLEAR E164

Mode: Administrator

Code Card: IISP / PNNI

Use this command to delete a specific entry or all entries from the community table.



index Specifies the index number (Index on the SHOW E164 display) of the entry to be deleted from the table.

ALL Specifies that all entries will be deleted from the table.

Related Commands

SHOW E164, SET E164

Example

```

8265ATM> show e164
Index Cat. Len Address
-----
  1 NSAP 72 39.99.82.65.02.02.00.00.00. . . . . . . . . . . .
    E164 67294381358257
  2 NSAP 72 39.99.82.65.02.02.00.00.01. . . . . . . . . . . .
    E164 67294381355849
8265ATM> clear e164 2
1 entries deleted.
8265ATM> show e164
Index Cat. Len Address
-----
  1 NSAP 72 39.99.82.65.02.02.00.00.00. . . . . . . . . . . .
    E164 67294381358257
8265ATM>
  
```

CLEAR ERROR_LOG

CLEAR ERROR_LOG

Mode: Administrator

Code Card: IISP / PNNI

Use this command to erase all entries stored in the ATM error log.

```
▶—CLEAR—ERROR_LOG—◀◀
```

Example

```
8265ATM> clear error_log
```

```
Error log cleared.
```


```
8265ATM>
```


CLEAR HOST

Mode: Administrator

Code Card: IISP / PNNI

Use this command to erase a specific entry or all entries from the table of host names.



index Specifies the index number (Index on the SHOW HOST display) of the entry to be deleted from the table.

ALL Specifies that all host names are to be deleted from the table.

Related Commands

SHOW HOST, SET HOST, SAVE HOST, REVERT HOST

Example

```

8265ATM> show host
Index Host_Name          IP_Address
-----
 1 ATMG13      47.41.82.65.13.13.00.00.00.00.00.13.13.65.00.00.00.94.13.00
 2 ATMG16      47.41.82.65.16.16.00.00.00.00.00.16.16.65.00.00.00.94.16.00
 3 gatwick_eth      9.100.51.188
 4 gatwick_atm      9.100.87.32
 5 oedipe_eth       9.100.51.203
 6 temp             9.100.109.203
14 entries empty.

8265ATM> clear host 6
Entry 6 cleared.

8265ATM> show host
Index Host_Name          IP_Address
-----
 1 ATMG13      47.41.82.65.13.13.00.00.00.00.00.13.13.65.00.00.00.94.13.00
 2 ATMG16      47.41.82.65.16.16.00.00.00.00.00.16.16.65.00.00.00.94.16.00
 3 gatwick_eth      9.100.51.188
 4 gatwick_atm      9.100.87.32
 5 oedipe_eth       9.100.51.203
15 entries empty.
8265ATM>
  
```

CLEAR LAN_EMUL CONFIGURATION_SERVER

CLEAR LAN_EMUL CONFIGURATION_SERVER

Mode: Administrator

Code Card: IISP / PNNI

Use this command to delete a specific entry or all entries in the table of LECS (LAN emulation configuration server) addresses.

```
▶▶ CLEAR LAN_EMUL CONFIGURATION_SERVER [index] ▶▶  
                                          ALL
```

index Specifies the index number (Index on the SHOW LAN_EMUL CONFIGURATION_SERVER display) of the entry to be deleted from the table.

ALL Specifies that all host names are to be deleted from the table.

Related Commands

SHOW LAN_EMUL CONFIGURATION_SERVER, SET LAN_EMUL CONFIGURATION_SERVER, SAVE LAN_EMUL, REVERT LAN_EMUL

Example


```
8265ATM> show lan_emul configuration_server  
Index      ATM address  
-----  
 1         39.99.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.65.00.00  
 2         39.99.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.62.02.02  
 3         39.99.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.63.03.02  
 4         39.99.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.63.02.02  
 5         39.99.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.63.01.02  
  
8265ATM> clear lan_emul configuration_server 5  
Entry cleared  
  
8265ATM> show lan_emul configuration_server  
Index      ATM address  
-----  
 1         39.99.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.65.00.00  
 2         39.99.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.62.02.02  
 3         39.99.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.63.03.02  
 4         39.99.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.63.02.02  
8265ATM>
```

CLEAR PARTY

Mode: Administrator

Code Card: IISP / PNNI

This command deletes one leaf (party) of a point-to-multipoint PVC.



slot.port Specifies the local end of the PVC to be cleared.

CONTROL_POINT.INTERNAL_PORT

Specifies the internal port on the local Control Point.

pvc_id Specifies the identifier (id= on the SHOW PVC display) of the Base PVC to which the Party PVC belongs.

party_id Specifies the identifier (id= on the SHOW PVC display) of the Party PVC to be cleared.

Usage Notes

- Changes to PVC settings are saved to NVRAM automatically.

Related Commands

CLEAR PVC, SHOW PVC, SET PARTY_PVC, SET PVC

Example

```

8265ATM> show pvc all

-----
PVC:Port 16.02 (id=3,Primary,RB) PTM-PVC VP/VC=1/2
-> Party:(id=0) VP/VC=2/3 STATUS:Failed
   39.99.99.99.99.99.99.99.99.99.99.99.99.99.99.99.99.99
-> Party:(id=5) VP/VC=3/6 STATUS:Not Ready
   45.AA.BB.CC.DD.EE.FF.00.00.88.88.DC.02.42.00.00.00.01.02.DC(port 1.02)

8265ATM>clear party 16.02 3 5
1 Party PVC(s) cleared.

8265ATM> show pvc all

-----
PVC:Port 16.02 (id=3,Primary,RB) PTM-PVC VP/VC=1/2
-> Party:(id=0) VP/VC=2/3 STATUS:Failed
   39.99.99.99.99.99.99.99.99.99.99.99.99.99.99.99.99
8265ATM>
  
```

CLEAR PNNI SUMMARY_ADDRESS

CLEAR PNNI SUMMARY_ADDRESS

Mode: Administrator

Code Card: PNNI only

This command deletes one of the summary addresses that have been defined for the local switch.

```
▶—CLEAR—PNNI—SUMMARY_ADDRESS—index—◀
```

index Specifies the index number (Entry on the SHOW PNNI SUMMARY_ADDRESS display) of the summary address to be deleted.

Related Commands

SHOW PNNI SUMMARY_ADDRESS, SET PNNI NODE SUMMARY_ADDRESS, SAVE PNNI, REVERT PNNI

Example

```
8265ATM> show pnni summary_address
----- Internal Summary Addresses of Node 0-----
  Entry 1-Prefix Length=104, non default, advertised :
    39.99.99.99.99.99.00.00.99.99.01.50. . . . .
  Entry 2-Prefix Length=104, non default, advertised :
    39.99.99.99.99.99.00.00.99.99.01.52. . . . .
17 empty entries

8265ATM> clear pnni summary_address 1
Rejected:
Entry refused, removes switch's reach to locally (ILMI configured) addresses.


8265ATM> clear pnni summary_address 2
To confirm: issue COMMIT after your last 'set pnni...' entry.
To cancel: issue UNCOMMIT.
8265ATM>
```

CLEAR PVC

Mode: Administrator

Code Card: IISP / PNNI

Use this command to delete a specific definition or all definitions of permanent virtual connections (PVCs). This command can only delete PVCs created on the local CPSW (that is, end points with **primary** role).



slot.port | CONTROL_POINT.INTERNAL_PORT | ALL

Specifies the ports on which PVCs should be cleared.

slot.port Specifies the local end point of the PVC to be cleared.

CONTROL_POINT.INTERNAL_PORT

Specifies the internal port on the local Control Point.

ALL Specifies that PVCs on all ports are to be cleared.

pvc_id | ALL

Specifies, by identifier number, which PVCs should be cleared.

pvc_id Specifies the identifier (id= on the SHOW PVC display) of the PVC to be cleared.

ALL Specifies that all PVCs on the selected ports are to be cleared.

Usage Notes

- Changes to PVC settings are saved to NVRAM automatically.

Related Commands

CLEAR PARTY, SHOW PVC, SET PVC, SET PARTY_PVC

Example

```
8265ATM> show pvc all
```

```
-----
PVC:Port 16.02 (id=3,Primary,RB) PTM-PVC VP/VC=1/2
-> Party:(id=0) VP/VC=2/3 STATUS:Failed
   39.99.99.99.99.99.99.99.99.99.99.99.99.99.99.99.99.99
```

```
8265ATM> clear pvc 16.2 3
PVC cleared.
8265ATM>
```


CLEAR REACHABLE_ADDRESS

CLEAR REACHABLE_ADDRESS

Mode: Administrator

Code Card: IISP / PNNI

This command removes all ATM addresses or a selected ATM address from the list of reachable addresses for the local switch.



ALL Specifies that all ATM addresses be deleted from the list of reachable addresses.

index Specifies the index number (Idx on the SHOW REACHABLE_ADDRESS display) of the reachable address to be deleted.

Usage Notes

- Addresses listed as "Dyn" on the SHOW REACHABLE_ADDRESS display have been created dynamically and cannot be deleted.

Related Commands

SHOW REACHABLE_ADDRESS, SET REACHABLE_ADDRESS

Example

```
8265ATM> show reachable_address all
Port  Len  Address                                          Active Idx VPI
-----
 4.02  24  39.99.78. . . . . . . . . . . . . . . . . . . .  N  1  -
 4.03  152  39.99.99.99.99.99.99.00.00.99.99.01.50.08.00.5A.99.02.BE  Y  Dyn  0
15.03  152  39.99.99.99.99.99.99.00.00.99.99.01.50.08.00.5A.99.02.A1  Y  Dyn  0


8265ATM> clear reachable_address 1
Entry cleared
8265ATM>
```

CLEAR SECURITY ATM_ADDRESS

Mode: Administrator

Code Card: IISP / PNNI

This command removes all or a selected ATM address entries from the access control address table.



ALL Specifies that all entries be deleted from the access control address table.

index Specifies the index number ("index" on the SHOW SECURITY ATM_ADDRESS display) of the entry to be deleted.

Related Commands

SHOW SECURITY ATM_ADDRESS, SET SECURITY ATM_ADDRESS, SAVE SECURITY, REVERT SECURITY

Example

```
8265ATM> show security atm_address all
index port    ATM_ADDRESS
-----
1  05.02  00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.08.00.5A.EE.EE.EE
2  00.00  00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.08.00.5A.EE.EE.EF
3  05.01  39.99.99.99.99.99.99.00.00.01.57.08.00.5A.AA.AA.AA.AA.AA
4  00.00  39.99.99.99.99.99.99.00.00.01.57.08.00.5A.AA.AA.AA.AA.AB
5  05.03  39.99.99.99.99.99.99.00.00.99.99.58.58.00.80.05.A9.92.8D

8265ATM> clear security atm_address 1

Clear completed.
8265ATM>
```

CLEAR SECURITY VIOLATION_LOG

CLEAR SECURITY VIOLATION_LOG

Mode: Administrator

Code Card: IISP / PNNI

Use this command to erase all entries stored in the security violation log.

```
▶—CLEAR—SECURITY VIOLATION_LOG—◀◀
```

Related Commands

SHOW SECURITY VIOLATION_LOG, SET SECURITY LOG, SAVE SECURITY, REVERT SECURITY

Example

```
8265ATM> clear security violation_log
```

```
Clear completed.
```

```
8265ATM>
```

CLEAR TRACE_LOG

Mode: Administrator

Code Card: IISP / PNNI

Use this command to clear the main trace log before restarting a new trace.

```
▶—CLEAR TRACE_LOG—▶▶
```

Related Commands

SHOW TRACE, SET TRACE, SAVE ALL, REVERT ALL

Example

```
8265ATM> clear trace_log  
Trace log cleared.  
8265ATM>
```


CLEAR VPC_LINK

CLEAR VPC_LINK

Mode: Administrator

Code Card: IISP / PNNI

This command removes all or selected VPC links that have been defined for the local switch.

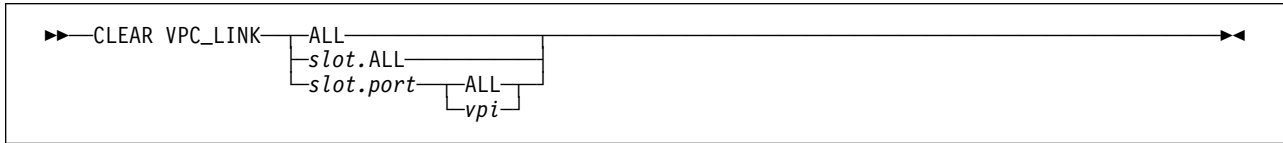

ALL Clears all VPC links defined on the ATM subsystem.

slot.ALL Clears VPC links from all ports on the selected slot.

slot.port Clears VPC links on the selected port.

ALL Clears all VPIs on the port.

vpi Clears the selected VPI on the port.

Related Commands

SHOW VPC_LINK, SET VPC_LINK, SAVE MODULE_PORT, REVERT MODULE_PORT

Example

```
8265ATM> show vpc_link all
-----
VPI :Type Mode Status
-----
1.01 0: UNI enable (Pri) UP
1.02 0:PNNI enable (Pri) UP
1.02 3:IISP enable DOWN:Port is NNI
1.03 0:PNNI enable (Pri) DOWN:Establishing
1.04 0: UNI enable (Pri) UP
4.01 0: UNI enable (Pri) DOWN:Not in service
8265ATM> clear vpc_link 1.2 3

1 entries cleared
8265ATM>
```

COMMIT PNNI

Mode: Administrator

Code Card: IISP / PNNI

The COMMIT PNNI command transfers changed parameters from the Future PNNI Configuration to the Active PNNI Configuration:

- **Non-critical** changes are transferred directly to the Active Configuration.
If non-critical changes are not saved to Non-Volatile Storage (NVS) using the SAVE PNNI command, they will be lost at the next system reset.
- **Critical** changes, which require a system reset to be activated, are first placed into Non-Volatile Storage (NVS) and then the system is reset.

▶—COMMIT—PNNI—◀

Related Commands

SHOW FUTURE_PNNI CONFIGURATION_STATE, SET PNNI commands, SAVE PNNI, REVERT PNNI, UNCOMMIT PNNI

Example

```
8265ATM> commit pnni
Non-pnni configuration updates will be lost when COMMIT issued.
Suggestion: issue SAVE ALL before issuing COMMIT..
Are you sure ? (Y/N) N
8265ATM>
```

DOWNLOAD

DOWNLOAD

Mode: Administrator

Code Card: IISP / PNNI

Use this command to download any of the following file types from a server:

BOOT IBM microcode updates to the Boot Flash EEPROM on the CPSW.

CONFIGURATION

A saved switch configuration file from a server. (**Resets the ATM system.**)

CONTROLLER_BOOT

IBM microcode updates to the Boot Flash EEPROM on a power controller module.

CONTROLLER_OPERATIONAL

IBM microcode updates to the Operational Flash EEPROM on a power controller module.

DAUGHTER_CODE

IBM microcode updates to a WAN2 or Carrier Module 2.5 Daughter Card.

DAUGHTER_CONFIGURATION

IBM microcode updates to a Carrier Module 2.5 Daughter Card.

DAUGHTER_OTHER

IBM microcode updates to a a Carrier Module 2.5 Daughter Card.


FPGA IBM picocode updates to the FPGA Flash EEPROMs on the CPSW and ATM media modules.

OPERATIONAL

IBM microcode updates to the Operational Flash EEPROM on the PCMCIA card.

SECURITY_CONFIGURATION

A saved security settings file from a server.



Usage Notes

- The server must be connected to the CPSW over an IP network (or over a SLIP configuration console connection).
- Before using **DOWNLOAD**, you must define:
 - The IP address of the server using the **SET TFTP SERVER_IP_ADDRESS** command.
 - The path and filename of the file to be downloaded using the **SET TFTP FILE_NAME** command.
 - The type of file to be downloaded using **SET TFTP FILE_TYPE** command.
 - Where applicable, the target port or module using **SET TFTP TARGET_MODULE** or **SET TFTP TARGET_PORT**.
- Except for **DOWNLOAD CONFIGURATION**, the **DOWNLOAD** command by itself does not disrupt normal operation of the ATM subsystem. However, ATM subsystem operation **is** interrupted when you use the **SWAP** command to activate the microcode downloaded with **DOWNLOAD OPERATIONAL**.
- After downloading a new **OPERATIONAL** or **FPGA** microcode update, you must use the **SWAP** command (see “**SWAP MICROCODE**” on page 199 or “**SWAP FPGA_PICOCODE**” on page 198) to activate the new code version. **DOWNLOAD** by itself does not automatically activate the new code version at the next reset.

- If you are downloading software from a server running AIX, you must first configure AIX for TFTP before you enter the DOWNLOAD command. For instructions on how to do this, see the *8265 User's Guide*.
- Before downloading a saved CONFIGURATION file, be sure that the code levels of the Control Point operational microcode are the same on both the original source Control Point and the target Control Point. Downloading a configuration that was created on a switch with a code level that is later than the currently operating level may fail, causing the Control Point to restart using the default configuration.

Related Commands

SET TFTP commands, UPLOAD

Example

The following example shows the steps required for downloading the access control address table (access control server running OS/2):

```
8265ATM>set tftp server_ip_address 122.38.82.109

8265ATM>set tftp file_name
Enter file name: c:\sec\address.tab

File name set.
8265ATM>set tftp file_type security

File type set.
8265ATM> download

Download successful.
8265ATM>
```


DUMP PNNI

DUMP PNNI

Mode: Administrator

Code Card: PNNI only

This command places a listing of PNNI settings into the dump buffer.

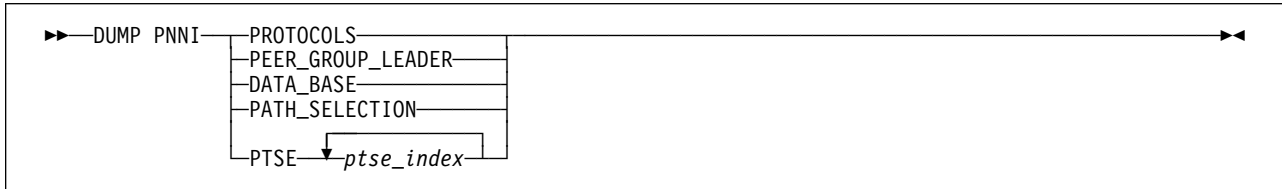

PROTOCOLS

Dumps all information related to PNNI protocol: architectural variables, control blocks, and so on. (*Requires a formatter to view the dump.*)

PEER_GROUP_LEADER

Dumps all information related to the peer group leader election process. (*Requires a formatter to view the dump.*)

DATA_BASE

Dumps all PTSE headers (including the index number used to reference each PTSE).

PATH_SELECTION

Dumps a view of the network from the point of view of the local switch.

PTSE

Dumps a complete listing of the PTSE selected by *ptse_index*.

ptse_index

Specifies the index numbers ("index" on the SHOW PNNI PTSE display or in the DATA_BASE dump) of the PTSEs to be dumped.

Usage Notes

- You can upload the contents of the dump buffer to a server using the UPLOAD command (with TFTP FILE_TYPE set to DUMP).

Related Commands

SHOW PNNI PTSE, SET PNNI commands, SAVE PNNI, REVERT PNNI

Example


```
8265ATM> dump pnni ptse 10 20
Dump started
8265ATM>
```

DUMP SIGNALLING

Mode: Administrator

Code Card: IISP / PNNI

This command places all or selected signalling settings into the dump buffer.

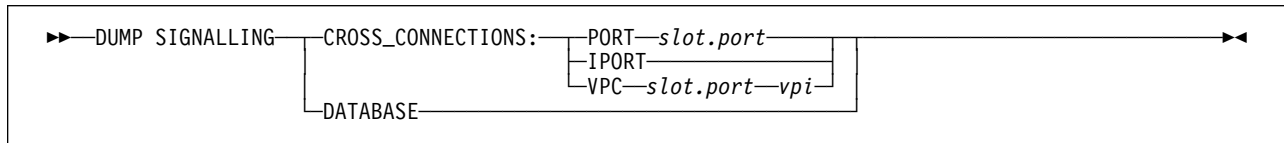

CROSS_CONNECTIONS: PORT | IPORT | VPC

Dumps cross-connection information for the selected port or VPC.

slot.port Dumps cross-connection settings for the the selected port.

IPORT Dumps cross-connection settings for the internal CPSW port.

vpi Dumps cross-connection settings for the the selected VPI (on the selected port).

DATABASE

Dumps a general view of signalling software resources.

Usage Notes

- You can upload the contents of the dump buffer to a server using the UPLOAD INBAND command (with TFTP FILE_TYPE set to DUMP).

Related Commands

SHOW SIGNALLING, SET PORT, SET VPC_LINK, SAVE MODULE_PORT, REVERT MODULE_PORT

Example

```

8265ATM> dump signalling cross_connections port 1.1
Dump started
8265ATM>
  
```

Sample Dump

```

Dump of cross connections on port 1.1
In: slot.port vpi.vci type Out: slot.port vpi.vci type Conn Cat
1.1 1. PVP 1.2 2. SVP P2P NRTVBR
1.1 3. SVP 1.2 4. PVP P2M NRTVBR
1.1 5. SVP 1.2 6. SVP P2P NRTVBR
1.1 7. SVP 1.2 8. SVP P2M NRTVBR
1.1 9. SVP 1.2 10. SVP P2P NRTVBR
1.1 10.32 PVC 1.2 10.33 PVC P2P NRTVBR
1.1 10.34 PVC 1.2 10.35 SVC P2M CBR
1.1 10.36 SVC 1.2 10.37 PVC P2P UBR
1.1 10.38 SVC 1.2 10.39 SVC
:
  
```

LOGOUT

LOGOUT

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to end your configuration session (local or remote).

```
▶—LOGOUT—┐
             └─FORCE─┘
```

FORCE Allows you to log off and keep the configuration changes you have made.

Usage Notes

- If you are logged on to a remote CPSW and enter the LOGOUT command, the console connection to the remote device is ended and you are reconnected to the local CPSW.
If a modem is connected to the console and if you have enabled the Hangup function using the SET TERMINAL command, the modem is disconnected.
- If you make configuration changes and log off without specifying the FORCE parameter, the LOGOUT command will be rejected. In order to log off, you must then either permanently save your changes (with the SAVE command) or restore them (with the REVERT command). The FORCE parameter allows you to log off and keep your changes until you reboot or reset the CPSW module.

Examples

The following is an example of how to log off from a **local** configuration session showing the returned reply:

```
8265ATM> logout
Bye
```

To log on again, redisplay the password prompt by pressing Enter.

```
Password:
```

The following is an example of how to log off from a **remote** session showing the returned reply:

```
ATM2> logout
Bye
Remote session completed.
```


MAINTAIN


Mode: Administrator

Code Card: IISP / PNNI

Use this command to change Control Point operation to Maintenance mode.

Normally, the Control Point enters Maintenance mode automatically when the diagnostics routines determine that normal operation is not possible. Maintenance mode provides a minimal number of commands that may be used to return the switch to normal operation. (See Appendix B, "Maintenance Mode Commands" on page 231 for further information.)

Maintenance mode commands should only be used by very experienced users, and only in exceptional circumstances.



FORCE Allows you to change to Maintenance mode and discard any configuration changes made during your current session. To save the changes, you must enter the SAVE command before entering MAINTAIN.

Usage Notes

- You can run this command only if you logged on using a local configuration console attached to the RS-232 Console port. You cannot enter the MAINTAIN command from a remote session over TELNET.
- Changing to Maintenance mode interrupts ATM traffic and statistics, and resets the CPSW. Therefore, before entering the MAINTAIN command, you should stop all ATM traffic in the switch.
- After entering the MAINTAIN command, you are prompted to confirm.
- When the Control Point is in Maintenance mode, the console prompt changes to >> and the System Status LCD displays the message: "MAINTENANCE MODE ENTERED UPON USER REQUEST".
- You quit Maintenance mode by:
 - Entering the BOOT command. This resets the ATM subsystem.
 - Entering the DOWNLOAD OUT_OF_BAND BOOT command. This operation loads the new boot program and executes it immediately.

Example

```
8265ATM> maintain
You are about to reset the ATM subsystem for maintenance.
Are you sure ? (Y/N) Y
>>
```


PING

PING

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to determine whether an IP device is active and reachable. The target device may be reachable over a LAN Emulation Over ATM or Classical IP Over ATM network. The command sends packets to the device to be "pinged" and requests the device to send back the same packets. PING loops continuously until the CTRL-C keys are pressed.



ip_address

Specifies the IP address in the format *n.n.n.n*, where *n* is 0-255.

host_name

Specifies the name of a host as defined with the SET HOST command.

Usage Notes

- If the target device is reachable via a Classical IP over ATM subnetwork as defined in RFC1577 (either directly attached or attached behind a router), the 8265 switch must be configured with the ATM address of the ARP server (using the SET DEVICE ARP_SERVER command).
- In addition, if the target device is reachable via a router, the 8265 switch must be configured with the IP address of the default gateway (using the SET DEVICE DEFAULT_GATEWAY command)

Example

```
8265ATM> ping newyork
Starting ping (hit CTRL-C to stop) ...
Ping 9.100.86.131: 1 packets sent, 1 received
Ping 9.100.86.131: 2 packets sent, 2 received
Ping 9.100.86.131: 3 packets sent, 3 received      [CTRL-C]

8265ATM>
```


RESET ATM_SUBSYSTEM

Mode: Administrator

Code Card: IISP / PNNI

This command resets the CPSW module and all ATM media modules in the switch, with the following results:

- All ATM traffic on the switch is stopped and all ATM hardware is reset.
- Control Point software is rebooted with the operational code in the flash EEPROM.
- The contents of the dumps and trace files are cleared. The error log is not erased.



FORCE Resets all ATM hardware and discards any configuration changes made during the current session.

Usage Notes

- If you use the FORCE parameter, any configuration changes made in your current session that have not been saved will be lost. To permanently save these changes, use the SAVE command before you enter RESET ATM_SUBSYSTEM.
- After all ATM modules are reset, press Enter to redisplay the password prompt. Then enter your password to continue.

Example

```
8265ATM> reset atm_subsystem
You are about to reset the ATM subsystem.
Are you sure ? (Y/N) Y
```

RESET HUB

RESET HUB

Mode: Administrator

Code Card: IISP / PNNI

This command resets the CPSW module, all controller (RCTL) modules, and all ATM media modules in the switch, with the following results:

- All ATM traffic on the switch is stopped and all ATM hardware is reset.
- Control Point software is rebooted with the operational code in the flash EEPROM.
- The contents of the dumps and trace files are cleared. The error log is not erased.

```
▶—RESET—HUB—┐
                 └─FORCE─┘
```

FORCE Resets all hardware and discards any configuration changes made during the current session.

Usage Notes

- If you use the **FORCE** parameter, any configuration changes made in your current session that have not been saved will be lost. To permanently save these changes, use the **SAVE** command before you enter **RESET HUB**.
- After all ATM modules are reset, press Enter to redisplay the password prompt. Then enter your password to continue.

Example

```
8265ATM> reset hub
You are about to reset the ATM subsystem.
Are you sure ? (Y/N) Y
8265ATM>
```

RESET MODULE

Mode: Administrator

Code Card: IISP / PNNI

Use this command to perform a hardware reset of an ATM media module, or if present, the standby controller (RCTL) module.

```
▶▶—RESET—MODULE—slot—————▶▶
```

slot Slot number where the module is installed.

Usage Notes

- Entering RESET MODULE gives the same result as pressing the ATM Reset button on an ATM media module. The module is reset to its currently configured settings.
- To reset the CPSW module in slots 9 and 10, or 11 and 12, use the RESET ATM_SUBSYSTEM or RESET HUB commands.
- To reset the active controller (RCTL) module in slot 18 or 19, use the RESET HUB command.

Example

```
8265ATM> reset module 2  
Reset started.  
8265ATM>
```


REVERT

REVERT

Mode: Administrator

Code Card: IISP / PNNI

Use this command to cancel any unsaved configuration changes made to your current session with the SET commands. The settings in NVRAM (non-volatile RAM) become the current settings.

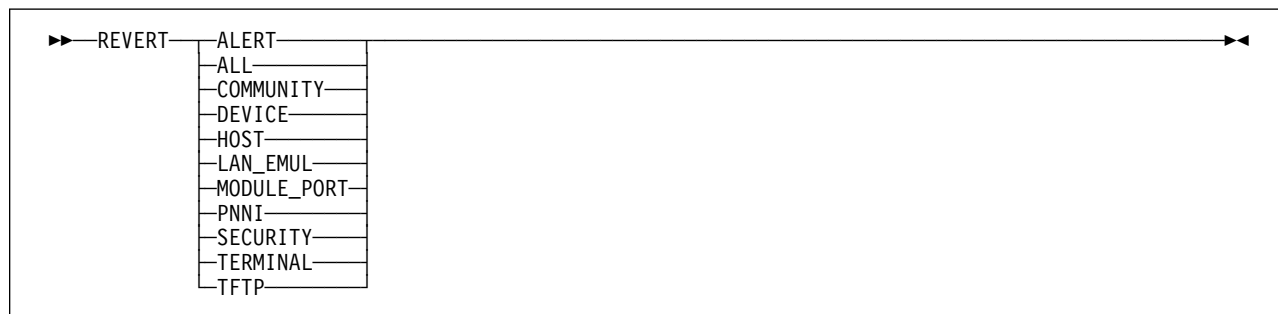

ALERT Restores the last saved values for SET ALERT settings.

ALL Restores the last saved values for all SET command settings **and resets the ATM subsystem.**

COMMUNITY

Restores the last saved values for SET COMMUNITY settings.

DEVICE Restores the last saved values for all SET DEVICE settings.

HOST Restores the last saved values for all SET HOST names.

LAN_EMUL

Restores the last saved values for all SET LAN_EMUL settings.

MODULE_PORT

Restores the last saved values for all SET MODULE and SET PORT settings **and resets the ATM subsystem.**

PNNI Restores the last saved values for all SET PNNI settings.

SECURITY

Restores the last saved values for all SET SECURITY settings.

TERMINAL

Restores the last saved values for all SET TERMINAL settings.

TFTP Restores the last saved values for all SET TFTP settings.

Usage Notes

- The REVERT DEVICE command does not reset the ATM subsystem.
- The REVERT LAN_EMUL command cancels the LES configuration if the corresponding server has been stopped before entering the command.

Example

```
8265ATM> revert module_port  
This revert will reset the ATM subsystem.  
Are you sure ? (Y/N) Y
```

SAVE

SAVE

Mode: Administrator

Code Card: IISP / PNNI

Use this command to permanently store any unsaved configuration changes made to your current session with SET commands. These changes are saved in NVRAM (nonvolatile RAM) and are reloaded at the next RESET or REVERT.



ALERT Saves the currently active values for SET ALERT settings.

ALL Saves the currently active values for all 8265 switch settings.

COMMUNITY

Saves the currently active values for SET COMMUNITY settings.

DEVICE Saves the currently active values for all SET DEVICE settings.

HOST Saves the currently active values for all SET HOST names.

LAN_EMUL

Saves the currently active values for all SET LAN_EMUL settings.

MODULE_PORT

Saves the currently active values for all SET MODULE, SET PORT, and SET VPC_LINK settings.

PNNI Saves the currently active values for all SET PNNI settings.

SECURITY

Saves the currently active values for all SET SECURITY settings.

TERMINAL

Saves the currently active values for all SET TERMINAL settings.

TFTP Saves the currently active values for all SET TFTP settings.

Usage Notes

- The configuration changes you make using SET commands are put into effect immediately, but are not permanently saved.
- If you do not enter the SAVE command after changing configuration settings, the changes are lost the next time the ATM media module or CPSW is rebooted or reset.

Example

```
8265ATM> save pnni  
8265ATM>
```


SET ALERT

SET ALERT

Mode: Administrator

Code Card: IISP / PNNI

Use this command to enable and disable the sending of alert messages from the CPSW to the configured trap receiver (for example, an SNMP workstation).

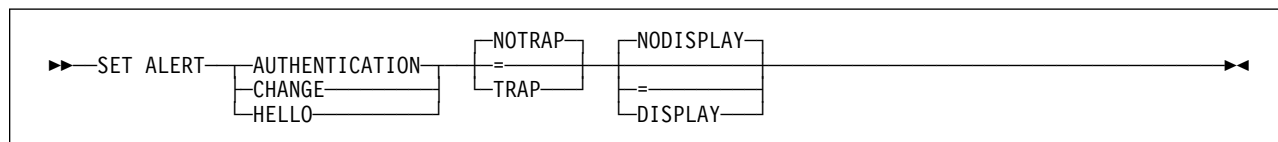

AUTHENTICATION | CHANGE | HELLO

Specifies the type of alert settings to set.

NOTRAP | TRAP | =

Specifies whether or not an SNMP trap is sent for the specified type of alert ("=" keeps the current setting). Default is NOTRAP.

NODISPLAY | DISPLAY | =

Specifies whether or not the alert is displayed on the configuration console("=" keeps the current setting). Default is NODISPLAY.

Related Commands

SHOW ALERT, SAVE ALERT, REVERT ALERT

Example

The following directs a previously enabled Change trap to be displayed on the configuration console.

```
8265ATM> show alert
Alert AUTHENTICATION set to NOTRAP NODISPLAY
Alert  CHANGE       set to NOTRAP NODISPLAY
Alert  HELLO        set to NOTRAP NODISPLAY

8265ATM> set alert hello = display
Alert set

8265ATM> show alert
Alert AUTHENTICATION set to NOTRAP NODISPLAY
Alert  CHANGE       set to NOTRAP NODISPLAY
Alert  HELLO        set to NOTRAP DISPLAY
8265ATM>
```

SET CLOCK

Mode: Administrator

Code Card: IISP / PNNI

```
▶—SET CLOCK—hh:mm—yyy/mm/dd—◀
```

hh:mm Hour and minute.

yyy/mm/dd

Year, month, and day.

Usage Notes

- Use this command to set the time for the internal clock of the Control Point. You need to set the time only once, when you install the module in the switch. The clock has its own battery and will continue to operate even in case of a power failure in the switch.
- The time you enter with SET CLOCK is automatically saved and used as the starting time for the Control Point. It is not necessary to save the setting with SAVE.

Related Commands

SHOW CLOCK

Example

```
8265ATM> set clock 08:30 1998/09/24  
Clock set.  
8265ATM>
```


SET COMMUNITY

Mode: Administrator

Code Card: IISP / PNNI

The SET COMMUNITY command enables you to grant access to:

- ATM MIB variables and Control Point traps by SNMP management stations
- The 8265 Integrated Web Server by browsers on remote workstations.

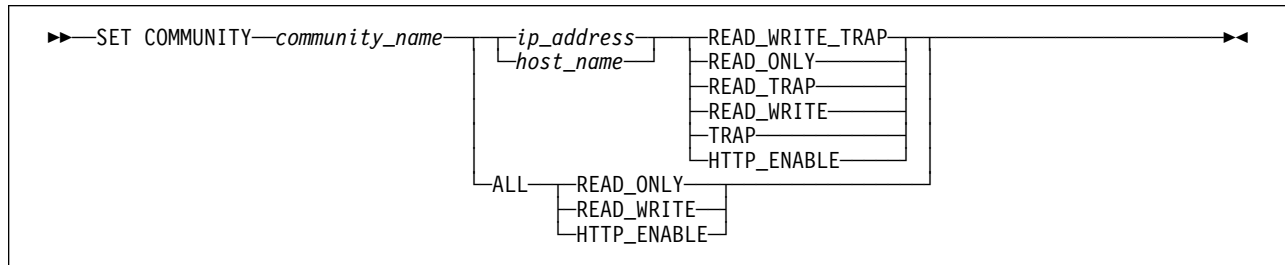

community_name

Name of a community (up to 15 alphanumeric characters, case-sensitive)

ip_address | host_name | ALL

Specifies whether the community name should be defined for one IP address or for all IP addresses.

ip_address

Specifies the IP address of one management station in the format *n.n.n.n*, where *n* is a number between 0 and 255.

host_name

The host name (defined with the SET HOST command) of the management station.

Note: Pressing '?' (help) for this parameter displays a list of available host names.

ALL

Specifies that all SNMP management stations will be assigned the same access rights (READ_ONLY or READ_WRITE only).

READ | TRAP | WRITE | HTTP_ENABLE

Specifies one or a combination of the following SNMP access modes:

READ Control Point configuration parameters can be displayed by the station you specify.

TRAP Control Point alerts will be sent to the station you specify.

WRITE Control Point configuration parameters can be modified by the station you specify.

HTTP_ENABLE

Grants access to the Integrated Web Server on the 8265 by a browser at the IP address specified.

Usage Notes

- Management stations communicate with the Control Point via the SNMP protocol. Stations may be reached via a Classical IP Over ATM subnetwork.
- When a management station is reachable via a Classical IP Over ATM subnetwork, the ATM address of the ARP server must be configured using SET DEVICE ARP_SERVER.

In addition, if the management device is reachable via a router, the Control Point must be configured with the IP address of the default gateway (using SET DEVICE DEFAULT_GATEWAY).

Related Commands

SHOW COMMUNITY, CLEAR COMMUNITY, SAVE COMMUNITY, REVERT COMMUNITY

Example

The following example creates a community called Admin for the specified CPSW management station and assigns read-write access and trap receiver status to the station.

```
8265ATM> set community Admin 2.13.34.24 all
Entry set.

8265ATM> show community
Index Community_Name IP_Address          Accesses
-----
   1 Admin           2.13.34.24      Read - Write - Trap
9 entries empty.
8265ATM>
```

SET DEVICE ACCOUNTING

SET DEVICE ACCOUNTING

Mode: Administrator

Code Card: IISP / PNNI

Use this command to enable and disable counters per connection.

This command resets the ATM subsystem.

```
▶ SET DEVICE ACCOUNTING: [ENABLE]
                        [DISABLE] ▶▶
```

ENABLE | DISABLE

Enables and disables counters per connection.

Related Commands

SHOW DEVICE, SAVE DEVICE, REVERT DEVICE

Example

```
8265ATM> set device accounting:disable
This call will reset the ATM subsystem.
Are you sure ? (Y/N) Y
```

SET DEVICE ARP_SERVER

Mode: Administrator

Code Card: IISP / PNNI

The SET DEVICE ARP_SERVER command specifies the ATM address of an ARP (Address Resolution Protocol) server. The ARP server is used in a Classical IP over ATM network to map IP addresses to ATM addresses.

```
▶—SET DEVICE—ARP_SERVER—atm_address—▶
                        └─atm_host_name—┘
```

atm_address

Specifies the ATM address of the ARP server.

atm_host_name

The host name (defined with the command SET HOST ATM) of the ARP server.

Usage Notes

- Pressing '?' (help) while entering the bytes of an ATM address displays a prompt indicating the number of the next byte to be entered.
- Pressing '?' (help) in place of the ATM host name parameter displays a list of available host names.

Related Commands

SHOW DEVICE, SAVE DEVICE, REVERT DEVICE

Example

```
8265ATM> set device arp_server 39.11.FF.22.99.99.99.00.00.00.00.01.49.11.11.11.
11.11.11.49
Device arp_server changed.
8265ATM>
```

SET DEVICE CONFIG_FUNCTIONS


Mode: Administrator

Code Card: IISP / PNNI

This command adjusts memory allocation on the local CPSW in order to optimize performance. The predefined memory configurations are enabled dynamically, according to the memory, hardware, and software configuration of your 8265.

Settings that may be affected by this command are VPCs, PVCs (point-to-point and point-to-multipoint), reachable addresses, dynamic addresses, E.164 addresses, and the LES/BUS.

This command resets the ATM system.



CONFIG_n

Selects one of the predefined memory configuration.

HELP

Displays the predefined memory configurations that are available for the current hardware/software combination.

- When entered without selecting a configuration, the available configurations are listed, with each configuration briefly described in the "Comments" column.
- When entered after a selected configuration, the maximum values for each affected setting is displayed.

Related Commands

SHOW DEVICE

Example

```
8265ATM> set device config_functions help
Here are possible values :
number ! Name ! Comments
-----
Config 1 ! 32_P_P ! P2P
Config 2 ! 32_P_M ! Mixed

Current Memory Profile is 32_P_M.
8265ATM> set device config_functions config_1 help
Configuration 1 is: 32_P_P
P2P
Number of VPCs : 512
Number of trees : 10
Number of branches : 32000
Number of parties : 100
Number of PVCs : 512
Number of reachable addresses : 64
Number of dynamic addresses : 512
Number of E164 addresses : 60
LES : Disabled
8265ATM>
```

SET DEVICE CONTACT

Mode: Administrator

Code Card: IISP / PNNI

Use this command to enter information (up to 78 alphanumeric characters) on qualified service personnel, such as name, location, company, and telephone number. After entering the command, you are prompted to enter the location information.

▶▶—SET DEVICE—CONTACT—◀◀

Related Commands

SHOW DEVICE, SAVE DEVICE, REVERT DEVICE

Example

```
8265ATM> set device contact
Enter text:
Network Manager, IBM Engineering Support, tel: 692-4444
8265ATM>
```

SET DEVICE DEFAULT_GATEWAY

SET DEVICE DEFAULT_GATEWAY

Mode: Administrator

Code Card: IISP / PNNI

This command sets the IP address of a router that will be used to receive IP packets from, and forward IP packets to, stations that are not connected to the same network as the local 8265 switch.

```
▶ SET DEVICE DEFAULT_GATEWAY { ip_address | ip_host_name } ▶▶
```

ip_address

IP address of the router in the format *n.n.n.n*, where *n* is a number between 0 and 255.

ip_host_name

The host name (defined with the command SET HOST IP) of the router.

Note: Pressing '?' (help) in place of the IP host name parameter displays a list of available host names.

Related Commands

SHOW DEVICE, SAVE DEVICE, REVERT DEVICE

Example

```
8265ATM> set device default_gateway 195.44.45.26
Default gateway set.
8265ATM>
```

SET DEVICE DIAGNOSTICS

Mode: Administrator

Code Card: IISP / PNNI

Use this command to enable and disable diagnostics each time the CPSW starts up or is reset. ATM diagnostics are enabled by default so that they will run the first time you power ON the 8265 switch.

```
▶—SET DEVICE—DIAGNOSTICS—┐
                             └─ENABLE─┐
                             └─DISABLE─┘▶
```

ENABLE Enables diagnostics.

DISABLE Disables diagnostics.

Usage Notes

- Disabling diagnostics reduces the time it takes to reboot, but the 8265 switch is not tested to verify that it is operational.

Related Commands

SHOW DEVICE, SAVE DEVICE, REVERT DEVICE

Example

```
8265ATM> set device diagnostics enable
8265ATM>
```

SET DEVICE DUPLICATE_ATM_ADDRESSES

SET DEVICE DUPLICATE_ATM_ADDRESSES

Mode: Administrator

Code Card: IISP / PNNI

Use this command to enable or disable the acceptance of duplicate ATM addresses registered from ILMI.

This command resets the ATM subsystem.

Use of this command depends on the network configuration and requirements. For example, disabling duplicate ATM addresses may be useful for backup servers, and enabling duplicate ATM addresses may be useful for load balancing between switches.

```
▶▶—SET DEVICE—DUPLICATE_ATM_ADDRESSES:—[ALLOWED]————▶▶  
[NOT_ALLOWED]
```

ALLOWED

Allows duplicate ATM address from ILMI to be accepted by the local switch.

NOT_ALLOWED

Rejects duplicate ATM addresses from ILMI.

Related Commands

SHOW DEVICE, SAVE DEVICE, REVERT DEVICE

Example

```
8265ATM> set device duplicate_atm_addresses:allowed  
This call will reset the ATM subsystem.  
Are you sure? (Y/N) Y
```

SET DEVICE ETHERNET_MAC_ADDRESS

Mode: Administrator

Code Card: IISP / PNNI

This command defines an LAA (locally administered address) to be used in place of the Ethernet port BIA (burned-in address). To restore the BIA, set the LAA address to '000000000000'.

```
▶—SET DEVICE—ETHERNET_MAC_ADDRESS—mac_address—▶
```

mac_address

Specifies the 6-byte hexadecimal mac_address (no spaces between bytes).

Usage Notes

- This command resets the ATM subsystem.

Related Commands

SHOW DEVICE, SAVE DEVICE, REVERT DEVICE

Example

```
8265ATM> set device ethernet_mac_address 0e0000000003
This call will reset the ATM subsystem and you have unsaved changes.
Are you sure ? (Y/N)
```

SET DEVICE IP_ADDRESS

SET DEVICE IP_ADDRESS

Mode: Administrator

Code Card: IISP / PNNI

Use this command to assign an Internet Protocol (IP) address to the ATM Control Point and define the subnetwork mask used for your class of Internet devices. An IP address, unique within the IP network must be defined for each ATM Control Point.

```
▶ SET DEVICE IP_ADDRESS [ATM | ETH] ip_address mask ▶
```

ATM Assigns the IP address to the ATM Control Point.

ETH Assigns the IP address to the Ethernet port on the CPSW.

ip_address

Specifies a class A, B, or C IP address in format *n.n.n.n*, where *n* is a number between 0 and 255.

mask Specifies the subnetwork mask (format: 4 bytes in hexadecimal).

Usage Notes

- The subnetwork mask is the group of common characters used by all network nodes on the left side of the IP address (Network ID); for example, 123.32.044 in the IP address 123.32.044.165.
- You cannot change the IP address of the ATM Control Point using SNMP.
- If the ATM Control Point is accessed via a router by a Classical IP over ATM subnetwork, the ATM address of the ARP server must also be configured (using SET DEVICE ARP_SERVER).
- If the ATM Control Point is accessed via a bridge or router by a LAN emulation subnetwork, the switch IP address and subnetwork mask must be configured via the SET DEVICE LAN_EMULATION CLIENT command.

Related Commands

SHOW DEVICE, SAVE DEVICE, REVERT DEVICE

Examples

```
8265ATM> set device ip_address atm 195.44.45.48 FF.FF.FF.00
IP address and subnet mask set.
8265ATM>
```


```
8265ATM> set device ip_address eth 9.100.109.203 ff.ff.ff.0
IP address and mask set
8265ATM>
```

SET DEVICE LAN_EMULATION_CLIENT

Mode: Administrator

Code Card: IISP / PNNI

Use this command to configure the required parameters for the LAN Emulation Client (LEC), assign an Internet Protocol (IP) address to the ATM Control Point, and define the subnetwork mask used for your class of Internet devices. This allows the ATM Control Point to register itself as part of the LAN emulation subnetwork and to set up ATM connections using its MAC address and ATM address.

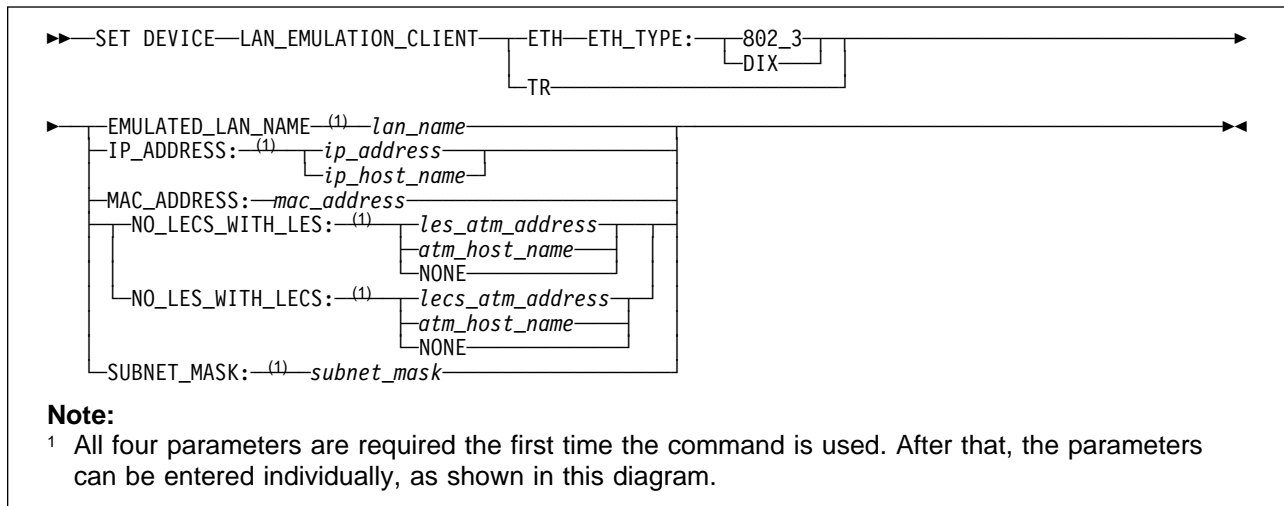

ETH | TR Specifies whether the emulated LAN is Ethernet or Token Ring.

DIX | 802_3

For an Ethernet LAN, specifies the type of Ethernet: either DIX (v.2.0) or 802.3.

lan_name

Specifies the name of the emulated LAN.

ip_address | ip_host_name

Specifies the IP address (or host name defined with the command SET HOST IP) of the LEC in the format *n.n.n.n*, where *n* is 0-255.

mac_address

Specifies the individual MAC address. The address must be in 802.3 format (locally and universally administered addresses are supported). If the MAC address is not specified, or if it is set to '000000000000', the burned-in address is used.

NO_LECS_WITH_LES | NO_LES_WITH_LECS

Specifies whether a LECS or a LES will be used to monitor the LEC.

les_atm_address | atm_host_name | NONE

Specifies the ATM address (or host name defined with the command SET HOST ATM) of the LES that will monitor the emulated LAN (NO_LECS_WITH_LES only). The LES must be a LAN Emulation Forum-compliant LAN connected to the 8265 switch.

lecs_atm_address | atm_host_name | NONE

Specifies the ATM address (or host name defined with the command SET HOST ATM) of the LECS that will be used by the LEC (NO_LES_WITH_LECS only).

subnet_mask

Specifies the actual subnet mask used by the ATM Control Point in the LE subnetwork.

SET DEVICE LAN_EMULATION_CLIENT

Usage Notes

- Changing the *mac_address* **will reset the 8265 switch**.
- If no LES or LECS ATM address has been set, then the CPSW will search for the LECS ATM address, first using ILMI, then (if that does not work) using the Well Known Address (WKA). If a LES ATM address has been defined, then the LECS ATM address will never be used.
- The first time the SET DEVICE LAN_EMULATION_CLIENT command is used, you must enter all parameters before saving the configuration settings (no default values are provided). Once the settings have been saved, it is possible to change individual parameters, by specifying the keyword of the value to be changed, and the new value.
- When entering the command, you do not have to enter all the parameters at once. Providing a keyword is entered, you will be prompted for the value.

Related Commands

SHOW DEVICE, CLEAR DEVICE LAN_EMULATION_CLIENT, SAVE DEVICE, REVERT DEVICE

Example

The following example changes the LES ATM address of the LEC:

```
8265ATM> set device lan_emulation_client eth eth_type:DIX ip_address:9.100.109.1
99 no_lecs_with_les:39.99.99.99.99.00.00.00.00.00.50.50.50.50.89.02.23.21
subnet_mask:39.99.99.99 emulated_lan_name
Enter Emulated LAN Name:
ventoux
Client starting.
8265ATM>
```

SET DEVICE LOCATION

Mode: Administrator

Code Card: IISP / PNNI

Use this command to record information on the physical location (up to 78 alphanumeric characters) of the 8265 switch in which the CPSW module is installed.

▶▶—SET DEVICE—LOCATION—◀◀

Related Commands

SHOW DEVICE, SAVE DEVICE, REVERT DEVICE

Example

```
8265ATM> set device location
Enter text:
Building M4, ground floor, patch panel 1, hub number 4
8265ATM>
```

SET DEVICE NAME

SET DEVICE NAME

Mode: Administrator

Code Card: IISP / PNNI

Use this command to assign a name to the Control Point that can be used in addition to its IP address to uniquely identify the module to IP devices. After entering the command, you are prompted to enter the location information on a separate line.

```
▶▶—SET DEVICE—NAME—name—————▶▶
```

name Up to 15 alphanumeric characters (case sensitive). Initial value: 8265ATM.

Usage Notes

- It is recommended that you assign the same name to the console prompt that you use for the ATM Control Point. To modify the console prompt, use the SET TERMINAL PROMPT command.

Related Commands

SHOW DEVICE, SAVE DEVICE, REVERT DEVICE

Example


```
8265ATM> set device name 8265ATM
Device name set
8265ATM>
```

SET DEVICE PASSWORD

Mode: Administrator

Code Card: IISP / PNNI

Use this command to create or change the Administrator and User passwords. After entering the command, you are prompted to enter the current password, then the new password. Each password may contain up to 15 alphanumeric characters.



ADMINISTRATOR | USER

Specifies which password is to be created or changed.

Usage Notes

- The Administrator password gives read and write access to all ATM commands. The factory default is **8265**.
The User password gives access to a subset of ATM commands, which allows you to view ATM Control Point status, clear counters, and log off. The factory default is a **null string**.
- For security reasons, passwords are not shown on the screen when you type them.
- After you confirm your new password, the password is immediately active. You will not need to enter it until the next time you log on.
- If you assign the same password for both Administrator and User, the User will have the same access rights as the Administrator; namely, access to all ATM commands.

Related Commands

SAVE DEVICE, REVERT DEVICE

SET DEVICE PASSWORD

Examples

ADMINISTRATOR: The following is an example of how to create an Administrator password the first time on an 8265:

```
8265ATM> set device password administrator
Enter current administrator password: 8265
New password:           {new admin password}
Re-enter new password: {new admin password}
Password changed.
8265ATM>
```

USER: The following is an example of how to create a User password:


```
8265ATM> set device password user
Enter current administrator password: {admin password}
New password:                       {new user password}
Re-enter new password:               {new user password}
Password changed.
8265ATM>
```

SET DEVICE ROLE

Mode: Administrator

Code Card: IISP / PNNI

Use this command to control the selection of the active Control Point in a redundant ATM subsystem.



PRIMARY

Specifies that the local CPSW module is to be the "active" Control Point.

SECONDARY

Specifies that the local CPSW module is to be the "standby" Control Point.

Usage Notes

- When the ATM subsystem elects which CPSW is to be active, (at power-on for example), whichever CPSW has been set as PRIMARY will be chosen. If both CPSWs have been defined as PRIMARY (or both as SECONDARY, the module in slots 9 & 10 is selected as PRIMARY.

Related Commands

SHOW DEVICE, SAVE DEVICE, REVERT DEVICE

Example

```
8265ATM>set device role secondary
```

```
8265ATM>
```

SET E164

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to define E.164 table entries for mapping public-network E.164 addresses to private-network NSAP addresses.

```
▶—SET E164—nsap_addr_len—nsap_address—e164_digits—◀◀
```

nsap_addr_len

Specifies the length in bits of the NSAP address to be mapped to the E.164 address.

nsap_address

Specifies the NSAP address to be mapped to the E.164 address.

e164_digits

Specifies the E.164 address to be mapped to the NSAP address.

Usage Notes

- E.164 address table settings are saved automatically to NVRAM when they are created.
- The maximum number of E.164 addresses that can be defined for an ATM Control Point depends on the memory configuration defined with the SET DEVICE CONFIG_FUNCTIONS command.

Related Commands

SHOW E164, CLEAR E164

Example

```
8265ATM> set e164_entry 72 39.99.82.65.02.02.00.00.01 67294381355849
Entry 2 set.
8265ATM> show e164
Index Cat. Len Address
-----
  1 NSAP 72 39.99.82.65.02.02.00.00.00. . . . . . . . . . . .
    E164 67294381358257
  2 NSAP 72 39.99.82.65.02.02.00.00.01. . . . . . . . . . . .
    E164 67294381355849
8265ATM>
```

SET HOST

Mode: Administrator

Code Card: IISP / PNNI

Use this command to assign host names to up to 20 IP or ATM addresses. This allows you to use either the host name or the address to identify a device.

```
▶ SET HOST host_name [ IP ip_address ]
                  [ ATM atm_address ] ▶▶
```

host_name

The host name being assigned to the IP or ATM address (maximum length: 24 characters for IP addresses, 11 characters for ATM addresses; not case sensitive).

ip_address

The IP address being associated with the host name.

atm_address

The ATM address being associated with the host name.

Related Commands

SHOW HOST, CLEAR HOST, SAVE HOST, REVERT HOST

Example

```
8265ATM> set host lab3 ip 9.100.109.203
Entry set.
8265ATM> set host lab4 ip 9.100.109.204
Entry set.
8265ATM> show host
Index Host_Name                Address
-----
 1 ATMG13      47.41.82.65.13.13.00.00.00.00.13.13.65.00.00.00.94.13.00
 2 lab3        9.100.109.203
 3 lab4        9.100.109.204
17 entries empty.
```

SET LAN_EMUL CONFIGURATION_SERVER

SET LAN_EMUL CONFIGURATION_SERVER

Mode: Administrator

Code Card: IISP / PNNI

Use this command to add an entry to the 5-entry LECS (LAN emulation configuration server) address table.

```
▶▶ SET LAN_EMUL CONFIGURATION_SERVER [ atm_address ] [ atm_host_name ] ▶▶
```

atm_address

ATM address of an ATM Forum compliant LECS.

atm_host_name

The host name (defined with the command SET HOST ATM) of the ARP server.

Usage Notes

- Pressing '?' (help) while entering the bytes of an ATM address displays a prompt indicating the number of the next byte to be entered.
- Pressing '?' (help) in place of the ATM host name parameter displays a list of available host names.

Related Commands

SHOW LAN_EMUL CONFIGURATION_SERVER, CLEAR LAN_EMUL CONFIGURATION_SERVER

Example


```
8265ATM> set lan_emul configuration_server
Enter ATM address : 39.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.63.01.02
Entry set.
8265ATM> show lan_emul configuration_server
Index          ATM address
-----
1              39.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.65.00.00
2              39.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.62.02.02
3              39.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.63.03.02
4              39.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.63.02.02
5              39.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.63.01.02
8265ATM>
```


SET LAN_EMUL SERVER

Mode: Administrator

Code Card: IISP / PNNI

Use this command to configure and start (or stop) the 8265 integrated LAN emulation servers (LES and BUS). Each LES/BUS defines an emulated LAN, and up to two emulated LANs may be configured in the 8265. After entering the command, you are prompted to enter the name of the LES.

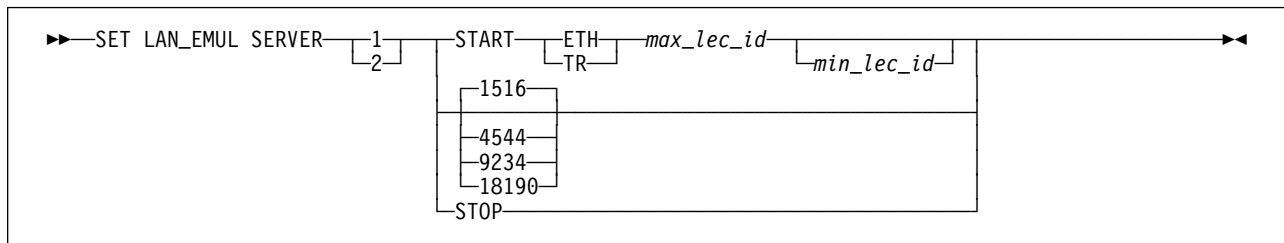

1 | 2 Specifies the identifier number of the LES entity.

START | STOP

Starts or stops the designated server.

ETH Starts an Ethernet LAN.

TR Starts a Token-Ring LAN.

max_lec_id

Specifies the maximum LEC id.

min_lec_id

Specifies the minimum LEC id (default=1).

1516 | 4544 | 9234 | 18190

Specifies the maximum SDU size supported on the emulated LAN (default: 1516).

Usage Notes

- All workstations attached to the LAN Emulation subnetwork must be registered with the LES before they can exchange packets.
- Activating a LES/BUS may change the settings that depend on the memory configuration defined with the SET DEVICE CONFIG_FUNCTIONS command.

Related Commands

SHOW LAN_EMUL CONFIGURATION_SERVER, CLEAR LAN_EMUL CONFIGURATION_SERVER, SAVE LAN_EMUL, REVERT LAN_EMUL

Example

SET LAN_EMUL SERVER

```
8265ATM>set lan_emul server 1 start eth 4 2 18190
Enter emulated LAN name:
ethernet_lan1
```

```
Starting server.
```

```
8265ATM>Set lan_emul server 1 stop
```

```
Halting server.
```

```
8265ATM>
```


SET MODULE

Mode: Administrator

Code Card: IISP / PNNI

The SET MODULE command enables you to:

- Connect one or more isolated ATM media modules to the ATM network and optionally enable or disable all its ports.
- Isolate one or more ATM media modules (but not the CPSW module) from the ATM backplane network.

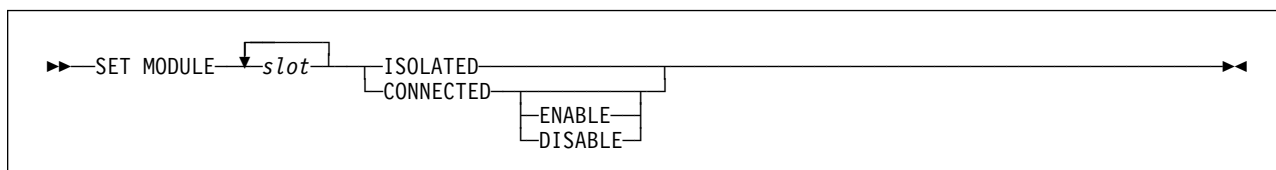

slot Slot number of the ATM media module.

ISOLATED | CONNECTED

Isolates or connects the selected module to the network.

ENABLE | DISABLE

Optionally enables or disables all ports on the selected module. Omit this parameter to leave the current port settings unchanged.

Port-Specific Settings

Some ATM **port types** have further requirements and options that may be configured using the SET MODULE command. These port-specific parameters are described in the following appendix sections:

IMA "SET MODULE slot IMA_GROUP" on page 216.

Usage Notes

- Before removing a module from the 8265, always isolate it from the network using the SET MODULE slot ISOLATED command.
- When an ATM media module is isolated, no network activity takes place on it. This allows you to protect your ATM network from unauthorized access and module malfunction.
- The current configuration settings of an isolated ATM media module cannot be accessed by the network. The status of its ports appears as Unknown in the SHOW MODULE VERBOSE screen display.
- The factory default setting for ATM media modules is Isolated with all ports Disabled. This means that ATM media modules do not start up as part of the ATM subsystem when you power ON the 8265 switch.
- When you install an ATM media module in a slot previously used by another ATM media module of the same type, it is initialized with the SET MODULE parameters that were last saved for that slot.

Related Commands

SHOW MODULE, SAVE MODULE_PORT, REVERT MODULE_PORT

SET MODULE

Examples

The following is an example of how to isolate an ATM media module from the ATM network:

```
8265ATM> set module 2 isolated
Slot 2:Module set.
8265ATM>
```

The following example shows how to reconnect the module to the ATM network and enable all of its ports:


```
8265ATM> set module 2 connected enable
Slot 2:Module set
8265ATM>
```

SET PARTY_PVC

Mode: Administrator

Code Card: IISP / PNNI

Use this command to add an additional Parth to an existing Point-to-Multipoint (PtM) PVC.

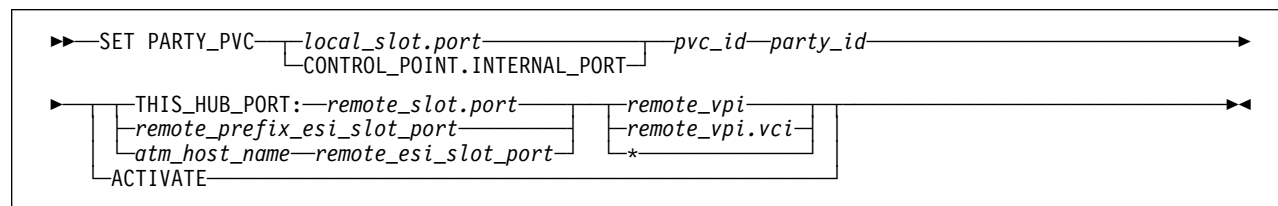

local_slot.port

Specifies the local endpoint (slot and port number) of the Base PVC.

CONTROL_POINT.INTERNAL_PORT

Specifies the internal port on the local Control Point.

pvc_id Specifies the identifier of the Base PVC (range 1 - 999)

party_id Specifies the identifier of the Party PVC (range 1 - 16200)

ACTIVATE

Activates a Party PVC that has failed (after correcting the cause of failure).

THIS_HUB_PORT:remote_slot.port

Specifies the remote endpoint (slot and port number) of the Party PVC if the remote endpoint is a port on the local switch.

remote_prefix_esi_slot_port

Specifies the remote ATM address, plus the slot and port numbers, when the remote endpoint of the Party PVC is on another switch. This parameter combines the remote switch's 13-byte ATM prefix with the slot and port numbers, in the form *atm_prefix*+"42.00.00.00."+*slot.port*+".00".

atm_host_name

Specifies the host name (defined with the command SET HOST ATM) when remote endpoint of the Party PVC is on another switch.

remote_esi_slot_port

Specifies the remote slot and port numbers of the Party PVC on the selected host. This parameter must take the form "42.00.00.00."+*slot.port*.

remote_vpi | *

(With Virtual Path VPC) Specifies the virtual path identifier of the Party VPC on the remote switch. Entering * allows the switch to select the *vpi*.

remote_vpi.vci | *

(With Virtual Channel VPC) Specifies the virtual path and channel identifiers of the Party VPC on the remote switch. Entering * allows the switch to select the *vpi.vci*.

SET PARTY_PVC

Usage Notes

- PVC settings are saved automatically to NVRAM.
- The maximum number of Party PVCs that can be defined for an ATM Control Point depends on the memory configuration defined with the SET DEVICE CONFIG_FUNCTIONS command.
- To define a PVC across a (VOID port) VPC link, first define the VPC, then define the PVC using the same *vpi* used in the VPC.
- Pressing '?' (help) while entering the bytes of an ATM address displays a prompt indicating the number of the next byte to be entered.
- Pressing '?' (help) in place of the ATM host name parameter displays a list of available host names.

Related Commands

SHOW PVC, CLEAR PVC, CLEAR PARTY

Examples

The first example defines a Party PVC to another port on the same switch:

```
8265ATM> set party_pvc 16.2 3 5 this_hub_port:1.2 3.6
PVC set and started.
8265ATM>
```

The following example defines a Party PVC to port 2 of slot 3 on a remote switch, which is specified using the switch's ATM address prefix:

```
8265ATM> set party_pvc 16.3 3 4 39.00.07.99.99.99.99.99.00.00.00.00.42.00.00.
00.03.02.00 3.6
PVC set and started.
8265ATM>
```

The next example defines the same PVC using the switch's host name (atm16) in place of the ATM address prefix:


```
8265ATM> set party_pvc 16.3 3 4 atm16 42.00.00.00.03.02 3.6
PVC set and started.
8265ATM>
```

SET PNNI CRANKBACK

Mode: Administrator

Code Card: PNNI only

This command enables and disables the signalling crankback function and enables the PNNI Control Point to automatically establish an alternate link to a target device when a failure occurs on the current route.



ON | OFF Enables and disables the signalling crankback function.

TAR_OFF

Disables the Try Alternate Route (TAR) option.

TAR_TRIES:tries

Specifies the number of alternate routes to try (maximum 1).

TAL_OFF Disables the Try Alternate Link (TAL) option.

TAL_TRIES:tries

Specifies the number of alternate links to try (maximum 3).

Related Commands

SHOW PNNI CRANKBACK, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example

```
8265ATM> set pnni crankback:on tar_tries:1 tal_tries:1
Set request executed.
Issue COMMIT PNNI to activate if its your last 'set pnni' entry.
Issue UNCOMMIT PNNI to cancel, removes all 'set pnni' since last COMMIT PNNI.
8265ATM> show pnni crankback
Crankback:                ON
Try alternate route:      ON
Try alternate route, max tries: 1
Try alternate link:       ON
Try alternate link, max tries: 1
8265ATM>
```

SET PNNI NODE:n ATM_ADDRESS

SET PNNI NODE:n ATM_ADDRESS

Mode: Administrator

Code Card: IISP / PNNI

This command defines a new ATM address for the selected node (and for the 8265 switch itself, as Node:0).

```
▶▶ SET PNNI NODE:—n—ATM_ADDRESS:—atm_address—▶▶
```

n Specifies the number of the PNNI node whose ATM address is being defined (range 0 - 9).

atm_address

Specifies the new ATM address of the local switch.

Usage Notes

- Pressing '?' (help) while entering the bytes of an ATM address displays a prompt indicating the number of the next byte to be entered.

Related Commands

SHOW PNNI NODE, SHOW FUTURE_PNNI NODE, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example


```
8265ATM> set pnni NODE:0 atm_address:  
39.99.99.99.99.99.99.0.0.99.99.1.50.50.50.50.50.51.0  
To activate issue COMMIT after your last 'set pnni...' entry.  
To cancel all changes since previous COMMIT, issue UNCOMMIT.  
8265ATM>
```

SET PNNI NODE:n CONFIGURED | NOT_CONFIGURED

Mode: Administrator

Code Card: IISP / PNNI

This command configures the selected PNNI node level to default settings.



n Specifies the number of the PNNI node (range 0 - 9).

CONFIGURED

Configures the selected PNNI node level to default values.

NOT_CONFIGURED

De-activates the selected PNNI node level.

Related Commands

SHOW PNNI NODE, SHOW FUTURE_PNNI NODE, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example

```

8265ATM> set pnni node:1 not_configured
Nodes 2 down to 1 deconfigured.
Issue COMMIT PNNI to activate if its your last 'set pnni' entry.
Issue UNCOMMIT PNNI to cancel, removes all 'set pnni' since last COMMIT PNNI.
8265ATM>

```

SET PNNI NODE:n LEADER_PRIORITY

SET PNNI NODE:n LEADER_PRIORITY

Mode: Administrator

Code Card: PNNI only

This command specifies the level of priority that will be used by the node during the leadership election process within a peer group.

```
▶—SET PNNI—NODE:—n—LEADER_PRIORITY—priority—▶
```

n Specifies the number of the PNNI node (range 0 - 9).

priority Specifies the priority level (from 0 to 205) of the local PNNI Control Point in the selected node.

Related Commands

SHOW PNNI NODE, SHOW FUTURE_PNNI NODE, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example

```
8265ATM> set pnni node 3 leader_priority 2
To activate issue COMMIT after your last 'set pnni...' entry.
To cancel all changes since previous COMMIT, issue UNCOMMIT.
8265ATM>
```

SET PNNI NODE:n LEVEL_IDENTIFIER

Mode: Administrator

Code Card: PNNI only

This command defines the Node *n* Peer Group Identifier using a portion of the local switch's ATM address. The number of bits to be used depends on the *length* specified.

To define a Peer Group Identifier that does not depend on the ATM address of the local switch, use the SET PNNI NODE *n* PEER_GROUP_ID command.

```
▶▶—SET PNNI—NODE:—n—LEVEL_IDENTIFIER:—length—▶▶
```

n Specifies the number of the PNNI node (range 0 - 9).

length Specifies the number of bits from the ATM address that are used to create the Node *n* Peer Group Identifier. (Range=3-100, Default=96)

Usage Notes

- If the ATM address of the local switch is changed, the Peer Group Identifier is automatically changed, based on the new ATM address.
- Do not use this command to change the length of a Peer Group Identifier that you have created with the PEER_GROUP_ID keyword. The Peer Group Identifier will be redefined based on the ATM address.

Related Commands

SHOW PNNI NODE, SHOW FUTURE_PNNI NODE, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example

The following example defines the Peer Group Identifier as being the first 44 bits of the local switch's ATM address.

```
8265ATM> set pnni node 2 level_identifier:44
To activate issue COMMIT after your last 'set pnni...' entry.
To cancel all changes since previous COMMIT, issue UNCOMMIT.
8265ATM>
```

SET PNNI NODE:n PEER_GROUP_ID

SET PNNI NODE:n PEER_GROUP_ID

Mode: Administrator

Code Card: PNNI only

This command defines an explicit Node *n* Peer Group Identifier that is independent of the actual ATM address of the local switch.

To define a Peer Group Identifier based on a portion of the local switch's current ATM address, use the SET PNNI NODE:n LEVEL_IDENTIFIER command.

```
▶▶—SET PNNI—NODE:—n—PEER_GROUP_ID:—length—peer_group_id—◀◀
```

n Specifies the number of the PNNI node (range 0 - 9).

length Specifies the number of bits from the *peer_group_id* to be used when creating the Node *n* Peer Group Identifier. (Range=0-104, Default=96)

peer_group_id

Specifies the string, in the form of a partial ATM address, to be used when creating the Peer Group Identifier.

Related Commands

SHOW PNNI NODE, SHOW FUTURE_PNNI NODE, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example

The following example defines the Peer Group Identifier as being the first 51 bits of the string 47.A5.32.4E.B7.48.19 .


```
8265ATM> set pnni NODE:n peer_group_id:51 47.a5.32.4e.b7.48.19
To activate issue COMMIT after your last 'set pnni...' entry.
To cancel all changes since previous COMMIT, issue UNCOMMIT.
8265ATM>
```

SET PNNI NODE:n SUMMARY_ADDR

Mode: Administrator

Code Card: PNNI only

This command defines a PNNI summary address for devices that are not reachable using the default PNNI summary address.

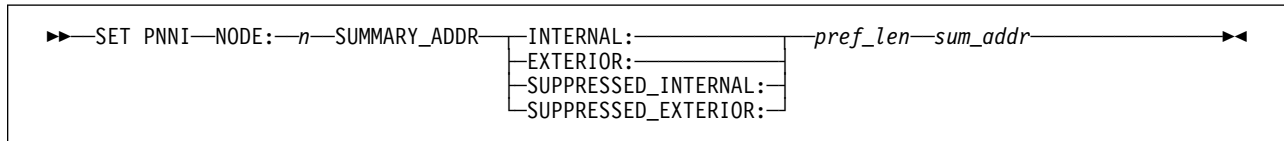

n Specifies the number of the PNNI node (range 0 - 9).

INTERNAL:

Specifies a summary address for local devices to be included in the NODE:n Peer Group.

EXTERIOR:

Specifies a summary address for remote devices to be included in the NODE:n Peer Group.

SUPPRESSED_INTERNAL:

Specifies a summary address for local devices to be excluded from the NODE:n Peer Group.

SUPPRESSED_EXTERIOR:

Specifies a summary address for remote devices to be excluded from the NODE:n Peer Group.

pref_len Specifies the number of bits from the *summary_address* to be used when specifying the summary address. (Range=0-104)

sum_addr

Defines the string that the summary address is to be based on.

Related Commands

SHOW PNNI NODE, SHOW FUTURE_PNNI NODE, CLEAR PNNI SUMMARY_ADDRESS, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example

```

8265ATM> set pnni NODE:n summary_addr exterior:30 39.22.ee.99
To activate issue COMMIT after your last 'set pnni...' entry.
To cancel all changes since previous COMMIT, issue UNCOMMIT.
8265ATM>
  
```

SET PNNI PATH_SELECTION


SET PNNI PATH_SELECTION

Mode: Administrator

Code Card: PNNI only

This command specifies the method of path selection to be used for Available Bit Rate (ABR) and Unspecified Bit Rate (UBR) connections.

Note: Reserved Bandwidth (VBR or CBR) calls are processed as ON_DEMAND_PATH and SHORTEST_PATH.

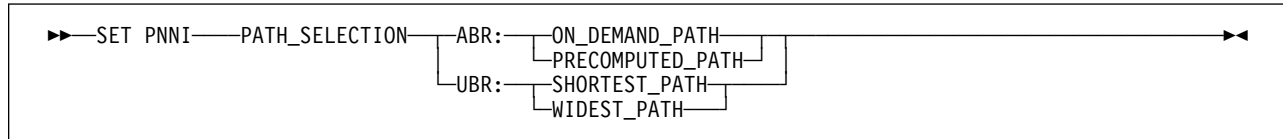

ABR: Selects Available Bit Rate. Available path selection methods are:

ON_DEMAND_PATH

Results in slower connection setup time but with better route optimization.

PRECOMPUTED_PATH

Results in faster connection setup time, using precomputed paths and taking routing information from predefined lookup tables.

UBR: Selects Unspecified Bit Rate. Available path selection methods are:

SHORTEST_PATH

Selects among the paths with the fewest number of hops.

WIDEST_PATH

Selects the least loaded path, regardless of number of hops.

Related Commands

SHOW PNNI PATH_SELECTION, SHOW FUTURE_PNNI PATH_SELECTION, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example


```
8265ATM> set pnni path_selection abr:on_demand_path
To activate issue COMMIT after your last 'set pnni...' entry.
To cancel all changes since previous COMMIT, issue UNCOMMIT.
8265ATM>
```

SET PORT

Mode: Administrator

Code Card: IISP / PNNI

The following parameters for the SET PORT command are used to configure all ATM ports, regardless of the physical port type.

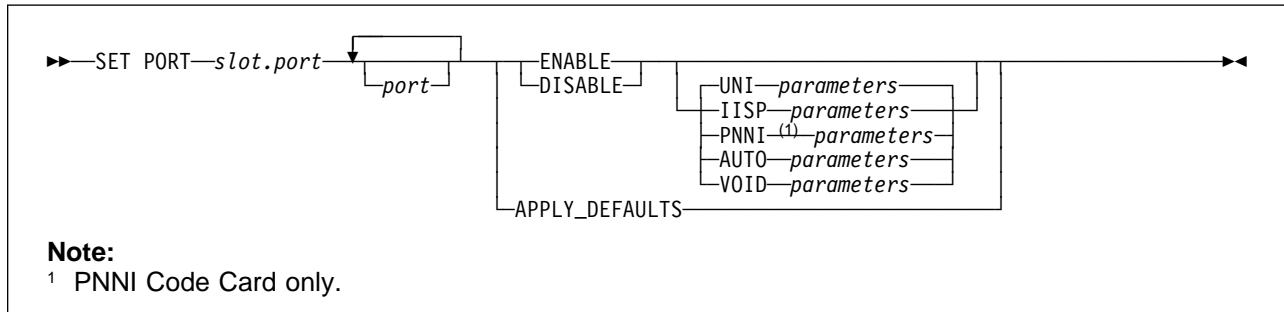

slot Slot number of the ATM media module.

port ATM port number. Multiple port numbers for the same slot may be entered in sequence.

APPLY_DEFAULTS

Resets all port parameters to the defaults for the port's interface type (UNI, IISP, and so on) and disables the port.

ENABLE | DISABLE

Enables and disables the selected port.

UNI | IISP | PNNI | AUTO | VOID

Sets the interface type for the selected port (default = UNI).

parameters

The remaining parameters depend on the interface type:

UNI See "UNI Port Parameters" on page 77.

IISP See "IISP Port Parameters" on page 79.

PNNI See "PNNI Port Parameters" on page 82. (**PNNI Code Card only.**)

AUTO Enables automatic configuration of the interface type (UNI, IISP, or PNNI). See "AUTO Port Parameters" on page 84.

VOID See "VOID Port Parameters" on page 86.

SET PORT

Port-Specific Settings

Some ATM **port types** have further requirements and options that may be configured using the SET PORT command. These port-specific parameters are described in the following appendix sections:

- 100 Mbps** “100 Mbps Port Parameters” on page 208.
- 155 Mbps** “155 Mbps Port Parameters” on page 209.
- 622 Mbps** “622 Mbps Port Parameters” on page 210.
- E1/T1 and IMA** “E1/T1 and IMA Port Parameters” on page 211.
- E3/DS3** “E3/DS3 Port Parameters” on page 220.
- OC3/STM1** “OC3/STM1 Port Parameters” on page 226.

Related Commands

SHOW PORT, SAVE MODULE_PORT, REVERT MODULE_PORT

Example


The following configures port 9 on slot 8 with PNNI interface with ILMI disabled.

```
8265ATM> set port 8.9 enable pnni ilmi_vpi_vci:none
8.09:Port set
8265ATM>
```


UNI Port Parameters

Code Card: IISP / PNNI

The following SET PORT parameters are used to configure ATM ports with UNI interface.

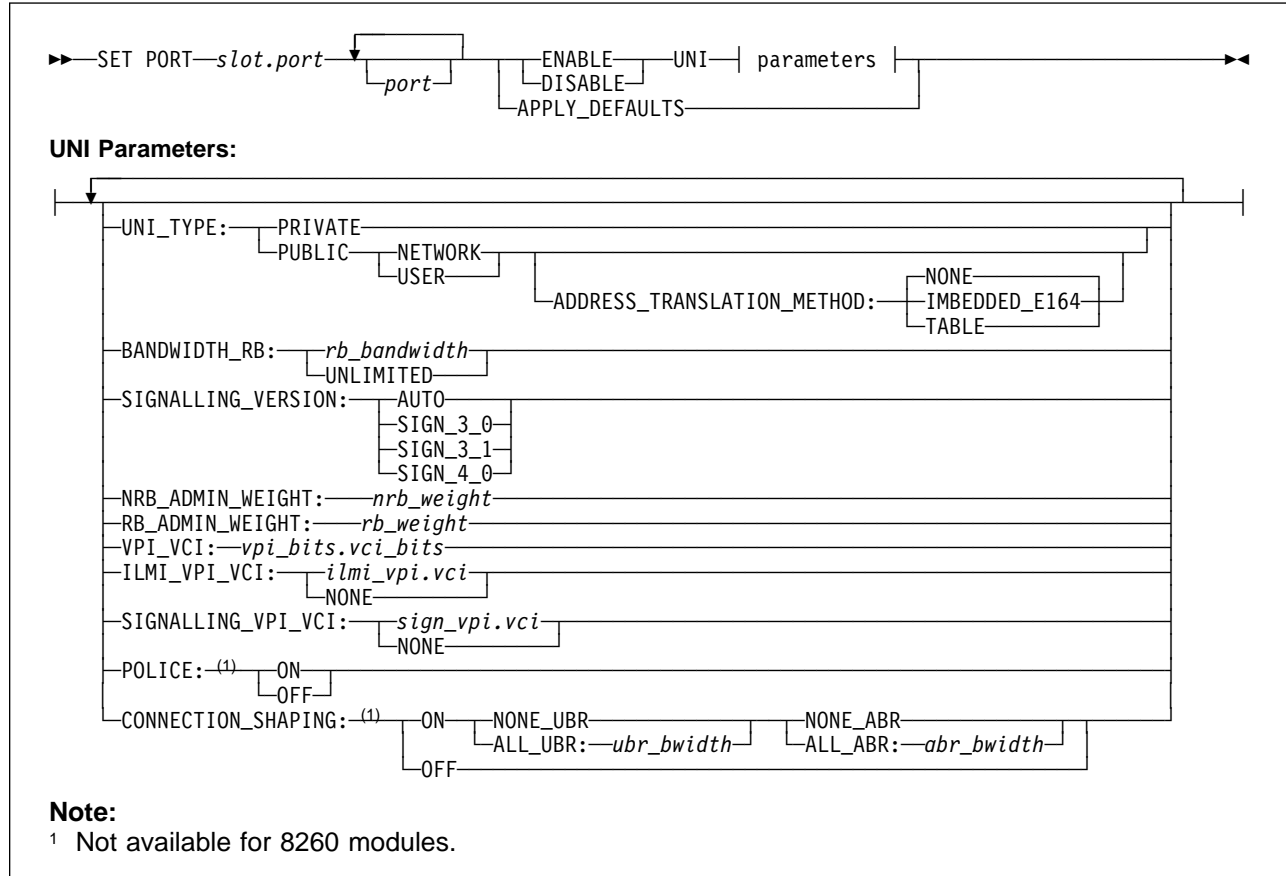

BANDWIDTH_RB:

Defines the maximum bandwidth that can be allocated for Reserved Bandwidth (RB) connections (CBR, rtVBR, nrtVBR, ABR MCR≠0) over the selected port.

UNLIMITED Allocates the maximum setting for Reserved Bandwidth: 85% of port bandwidth.

rb_bandwidth Specifies the maximum bandwidth (in Kbps).

Notes:

1. The value of *rb_bandwidth* must be less than or equal to the port bandwidth.
2. Setting *rb_bandwidth* equal to the port bandwidth means that no Unspecified Bit Rate (UBR) or Available Bit Rate (ABR) connections can be established on the selected port.
3. Setting *rb_bandwidth* equal to zero means that no RB connections (CBR, rtVBR, nrtVBR, ABR MCR≠0) can be established on the selected port.

SIGNALLING_VERSION:

Specifies the signalling protocol version to use on this port.

AUTO (*ILMI only*) Use automatic detection to determine the signalling protocol version (UNI 3.0, 3.1, or 4.0) on this port. (Default)

SIGN_3_0 Use UNI 3.0 signalling only on this UNI port.

SET PORT (UNI)

SIGN_3_1 Use UNI 3.1 signalling only on this UNI port.

SIGN_4_0 Use UNI 4.0 signalling only on this UNI port.

NRB_ADMIN_WEIGHT: nrb_weight

A 4-byte value that specifies the relative ranking of the selected port. (Default = 5040)

RB_ADMIN_WEIGHT: rb_weight

A 4-byte value that specifies the relative ranking of the selected port. (Default = 5040)

POLICE: ON | OFF

(**CBR and VBR traffic types only. / Not available for 8260 modules.**) Enables and disables Policing on the selected port.

VPI_VCI: vpi_bits.vci_bits

Defines the maximum range of values for VPI and VCI values by specifying the number of bits available for each.

VPI Bits	VCI Bits (25 Mbps and E1/T1)	VCI Bits (All Other Ports)
0	1 - 12	1 - 14
1 - 4	1 - 10	1 - 10
5 - 6	1 - 8	1 - 8

For example, on a 25 Mbps port this setting could be 2.10, and on another type of port it could be 4.10 .

ILMI_VPI_VCI:

Specifies:

ilmi_vpi.vci The *vpi* and *vci* of the ILMI channel. (Default = 0.16)

NONE ILMI disabled on this port.

If you disable ILMI, then you cannot use signalling version AUTO

SIGNALLING_VPI_VCI:

Specifies:

sign_vpi.vci The *vpi* and *vci* of the Signalling channel. (Default = 0.5)

NONE Signalling disabled on this port.

CONNECTION_SHAPING: ON | OFF

(**Not available for 8260 modules.**) Enables or disables connection shaping on the port. If shaping is enabled, the following parameters must be specified:

ALL_UBR:ubr_bwidth | NONE_UBR

Specifies the shaping bandwidth for UBR connections, or disables UBR shaping (NONE_UBR).

ALL_ABR:abr_bwidth | NONE_ABR

Specifies the shaping bandwidth for ABR connections, or disables ABR shaping (NONE_ABR).

Usage Notes

- The default values for the above parameters are applied when:
 - The interface type (UNI, PNNI, and so forth) is changed without specifying a value for the parameter
 - The APPLY_DEFAULTS keyword is specified.


IISP Port Parameters

Code Card: IISP / PNNI

The following parameters for the SET PORT command are used to configure ATM ports with IISP interface.

Note: The default values for the following parameters are applied when:

- The interface type (UNI, PNNI, and so forth) is changed without specifying a value for the parameter
- The APPLY_DEFAULTS keyword is specified.

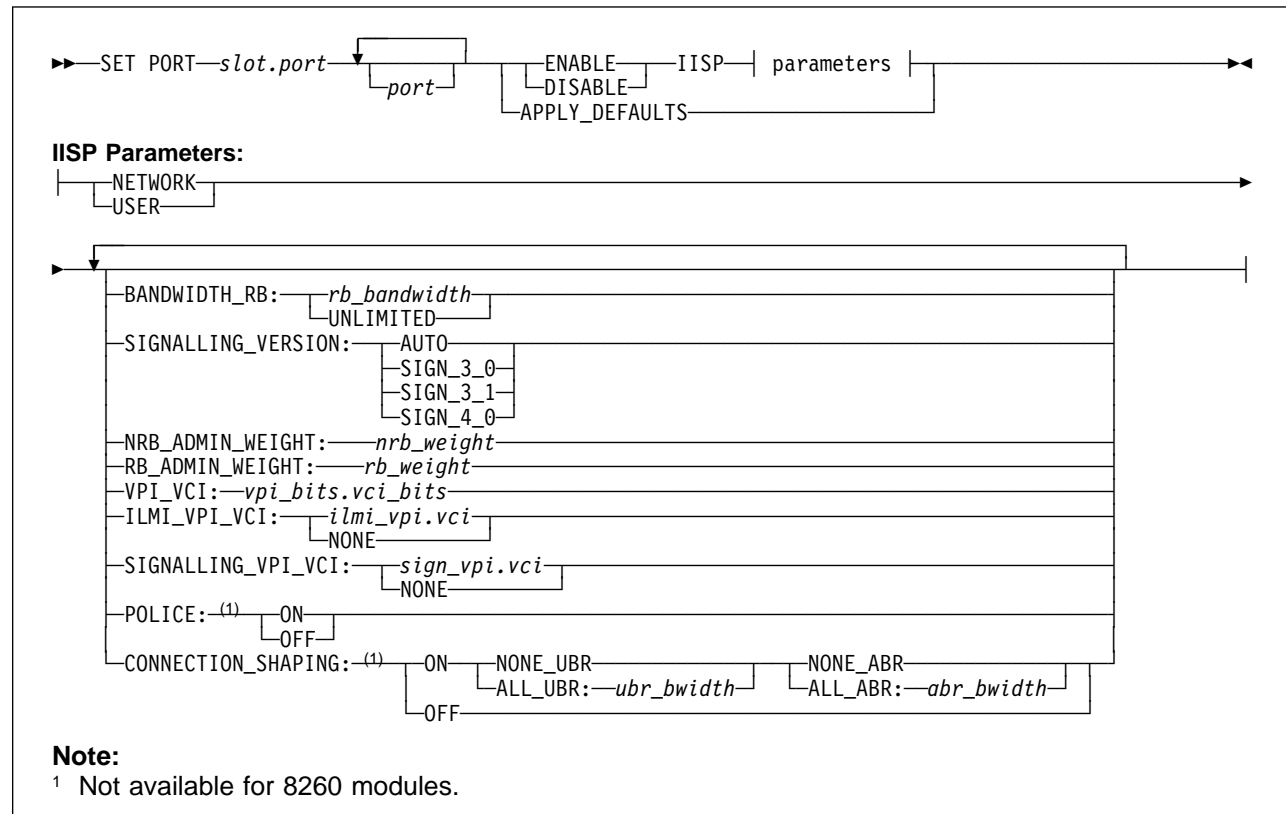

BANDWIDTH_RB:

Defines the maximum bandwidth that can be allocated for Reserved Bandwidth (RB) connections (CBR, rtVBR, nrtVBR, ABR MCR≠0) over the selected port.

UNLIMITED Allocates the maximum setting for Reserved Bandwidth: 85% of port bandwidth.

rb_bandwidth Specifies the maximum bandwidth (in Kbps).

Notes:

1. The value of *rb_bandwidth* must be less than or equal to the port bandwidth.
2. Setting *rb_bandwidth* equal to the port bandwidth means that no Unspecified Bit Rate (UBR) or Available Bit Rate (ABR) connections can be established on the selected port.
3. Setting *rb_bandwidth* equal to zero means that no RB connections (CBR, rtVBR, nrtVBR, ABR MCR≠0) can be established on the selected port.

SIGNALLING_VERSION:

Specifies the signalling protocol version to use on this port.

SET PORT (IISP)

- AUTO** (*ILMI only*) Use automatic detection to determine the signalling protocol version (UNI 3.0 , 3.1, or 4.0) on this port. (Default)
- SIGN_3_0** Use UNI 3.0 signalling only on this UNI port.
- SIGN_3_1** Use UNI 3.1 signalling only on this UNI port.
- SIGN_4_0** Use UNI 4.0 signalling only on this UNI port.

NRB_ADMIN_WEIGHT: nrb_weight

A 4-byte value that specifies the relative ranking of the selected port. (Default = 5040)

RB_ADMIN_WEIGHT: rb_weight

A 4-byte value that specifies the relative ranking of the selected port. (Default = 5040)

VPI_VCI: vpi_bits.vci_bits

Defines the maximum range of values for VPI and VCI values by specifying the number of bits available for each.

VPI Bits	VCI Bits (25 Mbps and E1/T1)	VCI Bits (All Other Ports)
0	1 - 12	1 - 14
1 - 4	1 - 10	1 - 10
5 - 6	1 - 8	1 - 8

For example, on a 25 Mbps port this setting could be 2.10, and on another type of port it could be 4.10 .

ILMI_VPI_VCI:

Specifies:

ilmi_vpi.vci The *vpi* and *vci* of the ILMI channel. (Default = 0.16)

NONE ILMI disabled on this port.

If you disable ILMI, then you cannot use signalling version AUTO.

SIGNALLING_VPI_VCI:

Specifies:

sign_vpi.vci The *vpi* and *vci* of the Signalling channel. (Default = 0.5)

NONE Signalling disabled on this port.

POLICE: ON | OFF

(**CBR and VBR traffic types only. / Not available for 8260 modules.**) Enables and disables Policing on the selected port.

CONNECTION_SHAPING: ON | OFF

(**Not available for 8260 modules.**) Enables or disables connection shaping on the port. If shaping is enabled, the following parameters must be specified:

ALL_UBR:ubr_bwidth | NONE_UBR

Specifies the shaping bandwidth for UBR connections, or disables UBR shaping (NONE_UBR).

ALL_ABR:abr_bwidth | NONE_ABR

Specifies the shaping bandwidth for ABR connections, or disables ABR shaping (NONE_ABR).

Usage Notes


- The default values for the above parameters are applied when:
 - The interface type (UNI, PNNI, and so forth) is changed without specifying a value for the parameter
 - The APPLY_DEFAULTS keyword is specified.

SET PORT (PNNI)

PNNI Port Parameters

Code Card: PNNI only

The following parameters for the SET PORT command are used to configure ATM ports with PNNI interface.

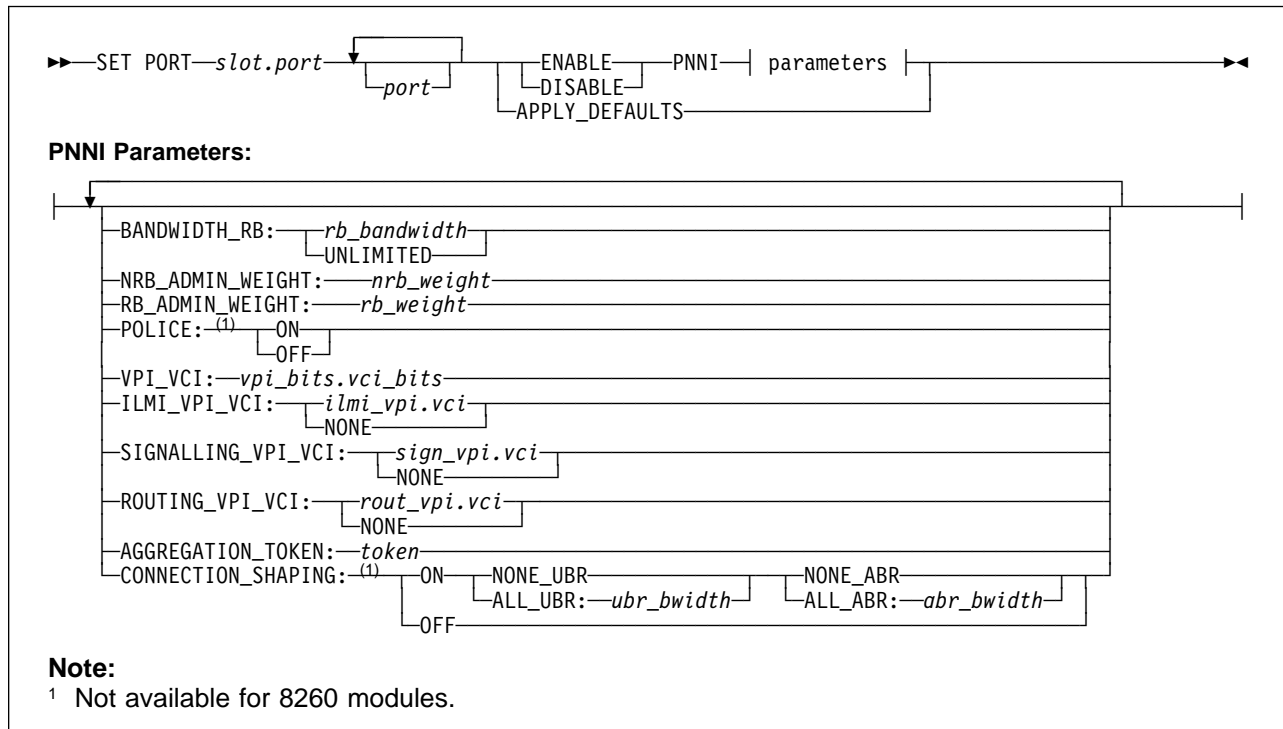

BANDWIDTH_RB:

Defines the maximum bandwidth that can be allocated for Reserved Bandwidth (RB) connections (CBR, rtVBR, nrtVBR, ABR MCR≠0) over the selected port.

UNLIMITED Allocates the maximum setting for Reserved Bandwidth: 85% of port bandwidth.

rb_bandwidth Specifies the maximum bandwidth (in Kbps).

Notes:

1. The value of `rb_bandwidth` must be less than or equal to the port bandwidth.
2. Setting `rb_bandwidth` equal to the port bandwidth means that no Unspecified Bit Rate (UBR) or Available Bit Rate (ABR) connections can be established on the selected port.
3. Setting `rb_bandwidth` equal to zero means that no RB connections (CBR, rtVBR, nrtVBR, ABR MCR≠0) can be established on the selected port.

NRB_ADMIN_WEIGHT: nrb_weight

A 4-byte value that specifies the relative ranking of the selected port. (Default = 5040)

RB_ADMIN_WEIGHT: rb_weight

A 4-byte value that specifies the relative ranking of the selected port. (Default = 5040)

VPI_VCI: vpi_bits.vci_bits

Defines the maximum range of values for VPI and VCI values by specifying the number of bits available for each.

VPI Bits	VCI Bits (25 Mbps and E1/T1)	VCI Bits (All Other Ports)
0	1 - 12	1 - 14
1 - 4	1 - 10	1 - 10
5 - 6	1 - 8	1 - 8

For example, on a 25 Mbps port this setting could be 2.10, and on another type of port it could be 4.10 .

ILMI_VPI_VCI:

Specifies:

ilmi_vpi.vci The *vpi* and *vci* of the ILMI channel. (Default = 0.16)

NONE ILMI disabled on this port.

If you disable ILMI, then you cannot use signalling version AUTO.

SIGNALLING_VPI_VCI:

Specifies:

sign_vpi.vci The *vpi* and *vci* of the Signalling channel. (Default = 0.5)

NONE Signalling disabled on this port.

ROUTING_VPI_VCI:

Specifies:

rout_vpi.vci The *vpi* and *vci* of the Routing channel. (Default = 0.18)

NONE Routing disabled on this port.

AGGREGATION_TOKEN:token

Specifies the aggregation token to be assigned to this link.

POLICE: ON | OFF

(**CBR and VBR traffic types only. / Not available for 8260 modules.**) Enables and disables Policing on the selected port.

CONNECTION_SHAPING: ON | OFF

(**Not available for 8260 modules.**) Enables or disables connection shaping on the port. If shaping is enabled, the following parameters must be specified:

ALL_UBR:ubr_bwidth | NONE_UBR

Specifies the shaping bandwidth for UBR connections, or disables UBR shaping (NONE_UBR).

ALL_ABR:abr_bwidth | NONE_ABR

Specifies the shaping bandwidth for ABR connections, or disables ABR shaping (NONE_ABR).

Usage Notes


- The default values for the above parameters are applied when:
 - The interface type (UNI, PNNI, and so forth) is changed without specifying a value for the parameter
 - The APPLY_DEFAULTS keyword is specified.

SET PORT (AUTO)

AUTO Port Parameters

Code Card: IISP / PNNI

The following parameters for the SET PORT command are used to configure ATM ports with AUTO interface.

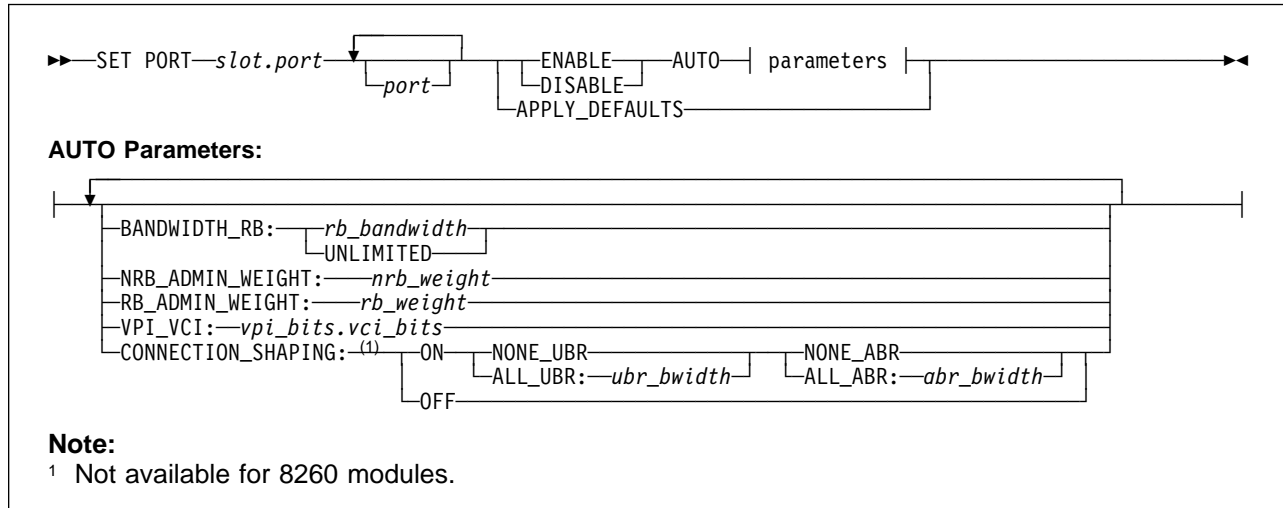

BANDWIDTH_RB:

Defines the maximum bandwidth that can be allocated for Reserved Bandwidth (RB) connections (CBR, rtVBR, nrtVBR, ABR MCR≠0) over the selected port.

UNLIMITED Allocates the maximum setting for Reserved Bandwidth: 85% of port bandwidth.

rb_bandwidth Specifies the maximum bandwidth (in Kbps).

Notes:

1. The value of *rb_bandwidth* must be less than or equal to the port bandwidth.
2. Setting *rb_bandwidth* equal to the port bandwidth means that no Unspecified Bit Rate (UBR) or Available Bit Rate (ABR) connections can be established on the selected port.
3. Setting *rb_bandwidth* equal to zero means that no RB connections (CBR, rtVBR, nrtVBR, ABR MCR≠0) can be established on the selected port.

NRB_ADMIN_WEIGHT: nrb_weight

A 4-byte value that specifies the relative ranking of the selected port. (Default = 5040)

RB_ADMIN_WEIGHT: rb_weight

A 4-byte value that specifies the relative ranking of the selected port. (Default = 5040)

VPI_VCI: vpi_bits.vci_bits

Defines the maximum range of values for VPI and VCI values by specifying the number of bits available for each.

VPI Bits	VCI Bits (25 Mbps and E1/T1)	VCI Bits (All Other Ports)
0	1 - 12	1 - 14
1 - 4	1 - 10	1 - 10
5 - 6	1 - 8	1 - 8

For example, on a 25 Mbps port this setting could be 2.10, and on another type of port it could be 4.10 .

CONNECTION_SHAPING: ON | OFF

(Not available for 8260 modules.) Enables or disables connection shaping on the port. If shaping is enabled, the following parameters must be specified:

ALL_UBR:ubr_bwidth | NONE_UBR

Specifies the shaping bandwidth for UBR connections, or disables UBR shaping (NONE_UBR).

ALL_ABR:abr_bwidth | NONE_ABR

Specifies the shaping bandwidth for ABR connections, or disables ABR shaping (NONE_ABR).

Usage Notes


- The default values for the above parameters are applied when:
 - The interface type (UNI, PNNI, and so forth) is changed without specifying a value for the parameter
 - The APPLY_DEFAULTS keyword is specified.

SET PORT (VOID)

VOID Port Parameters

Code Card: IISP / PNNI

The following parameters for the SET PORT command are used to configure ATM ports with VOID interface.

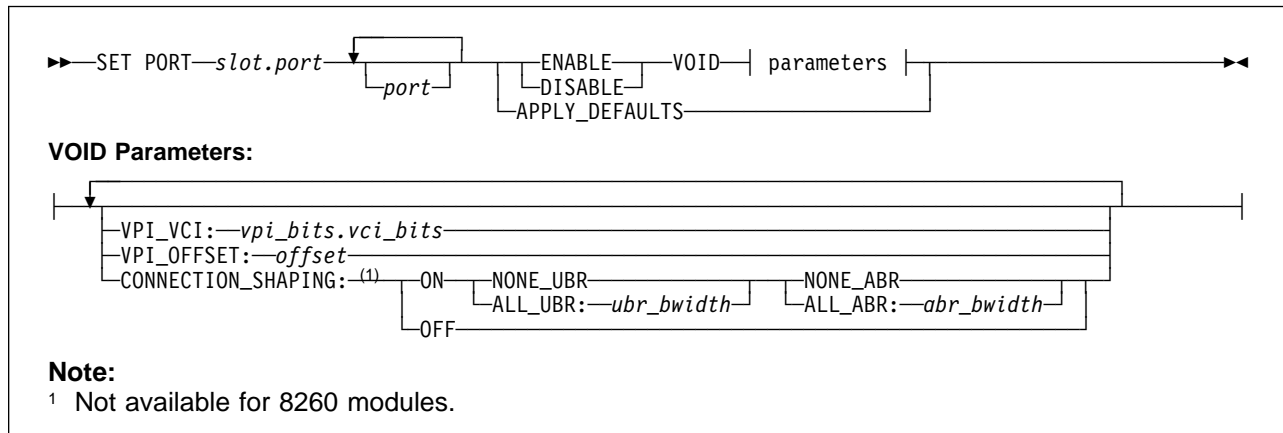

VPI_VCI: vpi_bits.vci_bits

Defines the maximum range of values for VPI and VCI values by specifying the number of bits available for each.

VPI Bits	VCI Bits (25 Mbps and E1/T1)	VCI Bits (All Other Ports)
0	1 - 12	1 - 14
1 - 4	1 - 10	1 - 10
5 - 6	1 - 8	1 - 8

For example, on a 25 Mbps port this setting could be 2.10, and on another type of port it could be 4.10 .

VPI_OFFSET:offset

Specifies a number to be added to the original VPI values to create a new range of values.

CONNECTION_SHAPING: ON | OFF

(Not available for 8260 modules.) Enables or disables connection shaping on the port. If shaping is enabled, the following parameters must be specified:

ALL_UBR:ubr_bwidth | NONE_UBR

Specifies the shaping bandwidth for UBR connections, or disables UBR shaping (NONE_UBR).

ALL_ABR:abr_bwidth | NONE_ABR

Specifies the shaping bandwidth for ABR connections, or disables ABR shaping (NONE_ABR).

Usage Notes

- The default values for the above parameters are applied when:
 - The interface type (UNI, PNNI, and so forth) is changed without specifying a value for the parameter
 - The APPLY_DEFAULTS keyword is specified.

- When specifying VPI_OFFSET:
 - All VPCs must be defined with VPI values that are within the new range.
 - SVCs will be allocated using the smallest value in the VPI range (for example, *vpi.vci* 64.32, 64.33, and so on).
 - The maximum VPI value (original value plus offset) is 255. For example, with *vpi_vci* set to 6.8 (VPI range 0–63) the maximum value for offset is 192, which gives a new range of 192–255.

SET POWER MODE

SET POWER MODE

Mode: Administrator

Code Card: IISP / PNNI

Use this command to choose between normal and fault-tolerant power supply operation.

```
▶▶—SET POWER MODE—┐FAULT_TOLERANT—┐
                    └NON_FAULT_TOLERANT┘▶▶
```

FAULT_TOLERANT

The power required to operate a power supply is kept in reserve, to be used in the event of a failure. To use fault-tolerant mode, you must have one more power supply than is required to power all modules in the switch.

NON_FAULT_TOLERANT

The entire power supply capacity of all installed power supplies is used.

Usage Notes

- For example, when 295 watt power supplies are used:
 - Each power supply provides approximately 200 watts at +5 volts.
 - You have three power supplies available (~600 watts).

In this scenario, non-fault tolerant mode allows you to use ~600 watts. Fault-tolerant mode allows you to use ~400 watts, reserving ~200 watts for use in the event of a failure.

- Regardless of the power mode setting, the power load being used is shared across all installed power supplies.
- The command is not immediately effected when the installed power is insufficient to support fault tolerant mode. Fault tolerant mode is automatically enabled when sufficient power becomes available (when another power supply is added).

Related Commands

SHOW POWER

Example

The following example attempts to set the power mode to fault tolerant:

```
8265ATM> set power mode fault_tolerant
Set power mode to FAULT_TOLERANT requested.
8265ATM>
```

SET POWER OVERHEAT_AUTO_POWER_DOWN

Mode: Administrator

Code Card: IISP / PNNI

(Integrated Power Controller only.) Use this command to enable the automatic power-down response when overheating is detected in the 8265 ATM Switch.

```
▶▶—SET POWER OVERHEAT_AUTO_POWER_DOWN—┌ENABLE┐—————▶▶  
                                └DISABLE┘
```

ENABLE | DISABLE

Enables or disables the ability of the Integrated Power Controller to initiate a module power-down when overheating is detected.

Related Commands

SHOW POWER ALL

Example

```
8265ATM> set power overheat_auto_power_down enable  
Overheat_auto_power_down mode now set to ENABLE.  
8265ATM>
```

SET POWER SLOT

SET POWER SLOT

Mode: Administrator

Code Card: IISP / PNNI

Use this command to assign each module to a power class from 1-10, which determines the order in which modules are powered-OFF when there is inadequate power for full operation of the ATM subsystem.

If the power drops to a level that is insufficient for all modules to operate, the modules are automatically powered-OFF according to the following rules:

- Modules with the lowest *class_number* are powered-OFF first, followed by modules of the next-lowest *class_number*, and so forth until the power requirements of the remaining modules falls within the available supply of power.
- Modules with *class_number* 10 are never powered-OFF under any circumstances.

The factory default class setting for ATM modules is 6.

```
▶▶—SET POWER SLOT—slot—CLASS—class_number—————▶▶
```

slot Slot number of the ATM Media module. Valid slot numbers are in the range 1 to 8 and 12 to 17.

class_number

A number from 1 to 10. Modules of class 1 are the first to be powered-OFF in case of reduced power, and modules of class 10 are never powered-OFF.

Related Commands

SHOW POWER

Example

The following example sets slot 3 to class 10.


```
8265ATM> set power slot 3 class 10
Slot 3 power Class now set to 10.
8265ATM>
```

SET PROFILE THRESHOLD

Mode: Administrator

Code Card: IISP / PNNI

This command can prevent your ATM Switch from properly handling ATM traffic. *Never use this command without support from your IBM representative.*

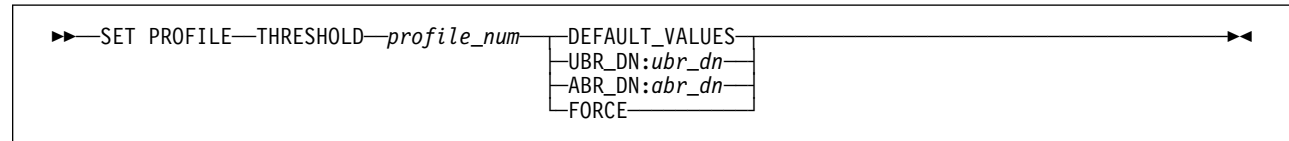

Usage Notes

- If you have changed any profile settings and then want to return to normal port operation, use the DEFAULT_VALUES parameter. Then issue the SAVE MODULE_PORT command.

Related Commands


SHOW PROFILE, SET THRESHOLD PORT, SAVE MODULE_PORT, REVERT MODULE_PORT

SET PVC

Mode: Administrator

Code Card: IISP / PNNI

Use this command to define Point-to-Point (PtP) and Point-to-Multipoint (PtM) Permanent Virtual Connections (PVCs) for both Virtual Channel Connections (VCCs) and Virtual Path Connections (VPCs).

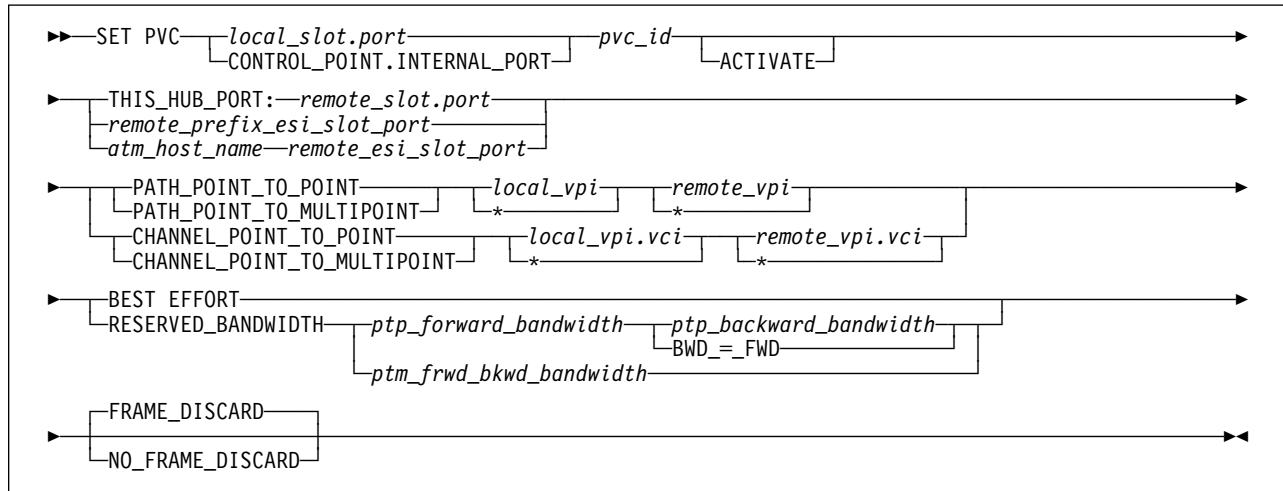

local_slot.port

Specifies the local endpoint (slot and port number) of the PVC.

CONTROL_POINT.INTERNAL_PORT

Specifies the internal port on the local Control Point.

pvc_id Specifies the unique identifier of the PVC (range 1 - 999)

ACTIVATE

Activates a previously defined PVC that has failed (after correcting the cause of the failure).

remote_slot.port

Specifies the remote endpoint (slot and port number) of the PVC when the remote endpoint is a port on the local switch.

remote_prefix_esi_slot_port

Specifies the remote ATM address, plus the slot and port numbers, when the remote endpoint of the PVC is on another switch. This parameter combines the remote switch's 13-byte ATM prefix with the slot and port numbers, in the form *atm_prefix*+"42.00.00.00."+*slot.port*+".00".

atm_host_name

Specifies the host name (defined with the command SET HOST ATM) when the remote endpoint of the PVC is on another switch.

remote_esi_slot_port

Specifies the remote slot and port numbers of the PVC on the selected host. This parameter must take the form "42.00.00.00."+*slot.port*.

PATH_POINT_TO_POINT | PATH_POINT_TO_MULTIPPOINT

Specifies a Virtual Path PVC, either point-to-point or point-to-multipoint.

local_vpi | *

Specifies the virtual path identifier of the PVC on the local switch. Entering * allows the switch to select the *vpi*.

remote_vpi | *

Specifies the virtual path identifier of the PVC on the remote switch. Entering * allows the switch to select the *vpi*.

CHANNEL_POINT_TO_POINT | CHANNEL_POINT_TO_MULTIPPOINT

Specifies a Virtual Channel PVC, either point-to-point or point-to-multipoint.

local_vpi.vci | *

Specifies the virtual path and channel identifiers of the PVC on the local switch. Entering * allows the switch to select the *vpi.vci*.

remote_vpi.vci | *

Specifies the virtual path and channel identifiers of the PVC on the remote switch. Entering * allows the switch to select the *vpi.vci*.

BEST_EFFORT | RESERVED_BANDWIDTH

Selects the bandwidth allocation algorithm for the PVC.

ptp_forward_bandwidth

Specifies the bandwidth (in Kbps) to be reserved from the local endpoint to the remote endpoint of a point-to-point PVC (Reserved Bandwidth only).

ptp_backward_bandwidth | BWD=_FWD

Specifies the bandwidth (in Kbps) to be reserved from the remote endpoint to the local endpoint of a point-to-point PVC (Reserved Bandwidth only).

ptp_backward_bandwidth

Specifies a bandwidth that is different from the forward bandwidth.

BWD=_FWD

Specifies that the backward bandwidth is equal to the forward bandwidth.

ptm_frwd_bkwd_bandwidth

Specifies the bandwidth (in Kbps) to be reserved in both directions on a point-to-multipoint PVC (Reserved Bandwidth only).

FRAME_DISCARD | NO_FRAME_DISCARD

Enables or disables 'smart' frame-discard (discard of ATM cells pertaining to the same discarded message).

Usage Notes

- *pvc_id* values greater than 999 may be entered for *pvc_id*, but are not recommended. Values above 1000 are assigned by the switch to secondary PVC endpoints.
- The maximum number of PVCs that can be defined for an ATM Control Point depends on the memory configuration defined with the SET DEVICE CONFIG_FUNCTIONS command.
- To define a PVC across a (VOID port) VPC link, first define the VPC, then define the PVC using the same *vpi* used in the VPC.
- PVC settings are saved automatically to NVRAM.

Related Commands

SHOW_PVC, CLEAR PVC, CLEAR PARTY

SET PVC

Examples

The first example defines a PVC to slot 4, port 3 of the same switch:

```
8265ATM> set pvc 16.2 3 this_hub_port:4.3 path_point_to_point 2 3 best_effort fr  
ame_discard  
PVC set and started.  
8265ATM>
```

The second example defines a PVC to slot 3, port 2 on another switch, using that switch's host name:

```
8265ATM> set pvc 16.4 5 host98 42.00.00.00.03.02 path_point_to_point 2 3 reserve  
d_bandwidth 120 bwd=_fwd frame_discard  
PVC set and started.  
8265ATM>
```

The next example defines the same PVC using that switch's ATM address prefix:


```
8265ATM> set pvc 16.4 5 39.00.07.99.99.99.99.99.99.00.00.00.42.00.00.00.03.02  
.00 path_point_to_point 2 3 reserved_bandwidth 120 bwd=_fwd frame_discard  
PVC set and started.  
8265ATM>
```

SET REACHABLE_ADDRESS

Mode: Administrator

Code Card: IISP / PNNI

This command specifies the prefix of addresses reachable through a specified port or VPC.



slot.port Specifies the port to which the reachable address applies.

pref_len Specifies the length, in bits, of the reachable address.

address Specifies the reachable address in hexadecimal format.

vpi (Optional) Specifies the vpi to which the reachable address applies, in the case where the address applies to a VPC rather than a port.

If *vpi* is not provided, the reachable address is applied to the specified port itself.

scope Specifies the organizational (administrative) level associated with this reachable address. Organizational **scopes** correspond to PNNI routing **levels** as follows:

Scope	Level	Scope	Level
1-3	96	11-12	48
4-5	80	13-14	32
6-7	72	15	0
8-10	64		

Usage Notes

- The maximum number of reachable addresses that can be defined for an ATM Control Point depends on the memory configuration defined with the SET DEVICE CONFIG_FUNCTIONS command.

Related Commands

SHOW REACHABLE_ADDRESS, SET REACHABLE_ADDRESS

SET REACHABLE_ADDRESS

Example

```
8265ATM> set reachable_address 4.2 24 39.99.88
Entry set.
8265ATM> show reachable_address all
Port Len Address Active Idx VPI Scope
-----
4.02 24 3999.78 . . . . . . . . . N 1 - Org:1
4.02 24 3999.79 . . . . . . . . . N 2 - Org:1
4.02 24 3999.88 . . . . . . . . . N 3 - Org:1
8265ATM>
```

SET SECURITY ATM_ADDRESS

Mode: Administrator

Code Card: IISP / PNNI

This command creates an entry in the access control address table that requires a connection to match the full ATM address to be validated. Access control for the specified ATM address can be applied globally on all ports or on a per-port basis.

```
▶—SET SECURITY ATM_ADDRESS—atm_address—ANY  
slot.port—▶
```

atm_address

Specifies the ATM address to be validated using the full ATM address.

ANY Specifies that connections to the address may be made globally on all ports.

slot.port Specifies that connections to the address may be made only on the selected port.

Usage Notes

- To perform address validation using only the ESI portion of the address, use the SET SECURITY ESI_ADDRESS command instead.
- The same address cannot be defined both globally for all ports (with ANY) and for a specific port (with *slot.port*).

Related Commands

SHOW SECURITY ATM_ADDRESS, SAVE SECURITY, REVERT SECURITY

Example

```
8265ATM> set security atm_address
Enter ATM address: 39.99.99.99.99.99.99.99.99.99.99.99.99.99.99.99.99.99.99.99 16.2
Entry set.

8265ATM>
```

SET SECURITY AUTOLEARN

SET SECURITY AUTOLEARN

Mode: Administrator

Code Card: IISP / PNNI

This command enables and disables the AUTOLEARN function on ports registered from ILMI.

```
▶—SET SECURITY AUTOLEARN—[ENABLE]—▶
                        [DISABLE]—▶
```

ENABLE | DISABLE

Specifies whether the AUTOLEARN function should be enabled or disabled on ports registered from ILMI.

Related Commands

SHOW SECURITY CONTROL, SAVE SECURITY, REVERT SECURITY

Examples

```
8265ATM> set security autolearn enable
8265ATM> show security control
```

	mode	autolearn	trap	log
Control Flags	NO_SECURITY	ENABLED	DISABLED	DISABLED


```
8265ATM>
```

SET SECURITY DEFAULT

Mode: Administrator

Code Card: IISP / PNNI

This command sets the default security settings for ports registered from ILMI.

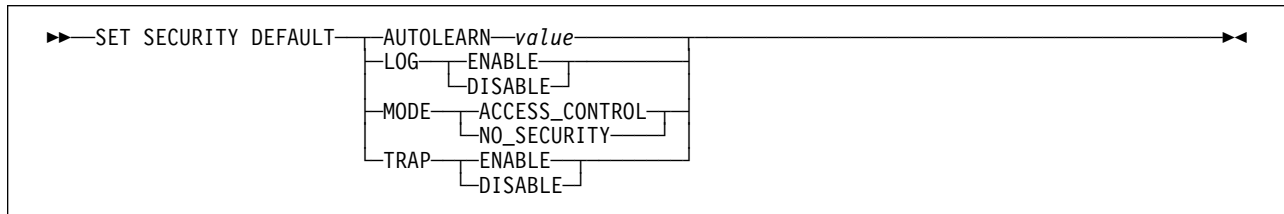

value Specifies the default number of ATM addresses that can be learned on each port registered from ILMI:

1-16 The default number of addresses that can be learned.

0 Disables autolearn on newly detected ports.

LOG Defines default security violation log settings.

ENABLE | DISABLE

Specifies whether the default is to generate a log of security violations or not.

MODE Defines default security Mode settings.

ACCESS_CONTROL

Specifies that the default is to apply access control to ports registered from ILMI.

NO_SECURITY

Specifies that the default is **not** to apply access control to ports registered from ILMI.

TRAP Defines default security trap settings.

ENABLE | DISABLE

Specifies whether the default is to enable SNMP traps for security violations on ports registered from ILMI or not.

Related Commands

SHOW SECURITY DEFAULT, SAVE SECURITY, REVERT SECURITY

SET SECURITY DEFAULT

Examples

```
8265ATM> set security default mode access_control  
Security default parameters SET.  
WARNING! will apply only on new inserted module.
```

```
8265ATM> set security default autolearn 0  
Security default parameters SET.  
WARNING! will apply only on new inserted module.
```

```
8265ATM> show security default
```

	mode	autolearn	trap	log
-----	-----	-----	-----	-----
Default Flags	ACCESS_CONTROL	00	DISABLED	ENABLED

```
8265ATM>
```


SET SECURITY ESI_ADDRESS

Mode: Administrator

Code Card: IISP / PNNI

This command creates an entry in the access control address table that requires a connection to match only the ESI portion of the ATM address to be validated. Access control for the specified ESI address can be applied globally on all ports or on a per-port basis.

```
▶▶ SET SECURITY ESI_ADDRESS esi_portion [ANY | slot.port] ▶▶
```

esi_portion

Specifies the 6-byte ESI portion of the ATM address to be used in validation.

ANY Specifies that connections to the addresses may be made globally on all ports.

slot.port Specifies that connections to the addresses may be made only on the selected port.

Usage Notes

- To perform address validation using the full ATM address, use the SET SECURITY ATM_ADDRESS command instead.
- The same address cannot be defined both globally for all ports (with ANY) and for a specific port (with *slot.port*).

Related Commands

SHOW SECURITY ATM_ADDRESS, SAVE SECURITY, REVERT SECURITY

Example

```
8265ATM> set security esi_address
99.99.99.99.99.99 14.2

Entry set.
8265ATM>
```

SET SECURITY LOG

SET SECURITY LOG

Mode: Administrator

Code Card: IISP / PNNI

This command enables and disables the generation of a log of security violations.

```
▶ SET SECURITY LOG [ACCESS_VIOLATION | NOTHING] ▶▶
```

ACCESS_VIOLATION

Enables creation of the security violation log.

NOTHING

Disables creation of the security violation log.

Related Commands

SHOW SECURITY VIOLATION_LOG, CLEAR SECURITY VIOLATION_LOG, SAVE SECURITY, REVERT SECURITY

Example

```
8265ATM> set security log access_violation
8265ATM> show security control
```

	mode	autolearn	trap	log
Control Flags	NO_SECURITY	ENABLED	ACCESS_VIOLATION	ACCESS_VIOLATION


```
8265ATM>
```

SET SECURITY MODE

Mode: Administrator

Code Card: IISP / PNNI

This command enables and disables access control on all ports of the local switch.



ACCESS_CONTROL

Specifies that access control is enabled on all ports on the local switch.

NO_SECURITY

Specifies that access control is disabled for all ports on the local switch.

Related Commands

SHOW SECURITY CONTROL, SAVE SECURITY, REVERT SECURITY

Example

```

8265ATM> show security control
-----
          mode          autolearn      trap          log
-----
Control Flags NO_SECURITY  ENABLED      DISABLED      DISABLED

8265ATM> set security mode access_control

8265ATM> show security control
-----
          mode          autolearn      trap          log
-----
Control Flags ACCESS_CONTROL ENABLED      DISABLED      DISABLED

8265ATM>

```


SET SECURITY PORT

SET SECURITY PORT

Mode: Administrator

Code Card: IISP / PNNI

This command sets the security settings for TRAP, MODE, and AUTOLEARN on a single port or on all ports.

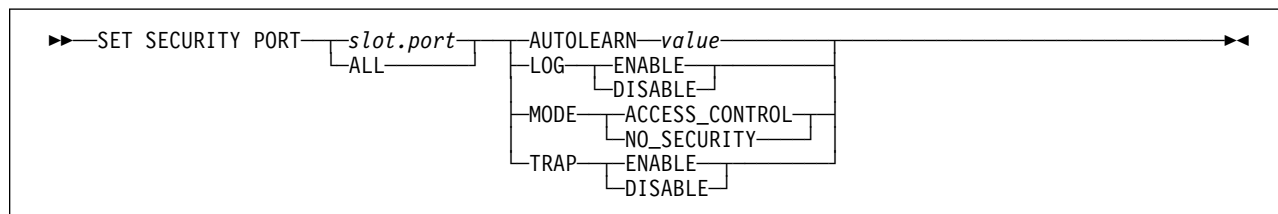

slot.port Specifies that the setting is to be applied only to the selected port.

ALL Specifies that the setting is to be applied to all ports.

value Specifies the number of ATM addresses that can be learned on the selected port.

1-16 The number of addresses that can be learned.

0 Disables autolearn on the selected port.

LOG Defines security violation log settings for the port(s).

ENABLE | DISABLE

Specifies whether to generate a log of security violations on the port(s) or not.

MODE Defines current security Mode settings for the port(s).

ACCESS_CONTROL

Applies access control to the port(s).

NO_SECURITY

Applies no access control to the port(s).

TRAP Defines current security trap settings for the port(s).

ENABLE | DISABLE

Specifies whether to enable SNMP traps for security violations on the port(s).

Related Commands

SHOW SECURITY PORT, SAVE SECURITY, REVERT SECURITY

Example

```
8265ATM> show security port all
slotport      mode          autolearn     trap          log
-----
17.01         NO_SECURITY   00            DISABLED      DISABLED
17.02         NO_SECURITY   00            DISABLED      DISABLED
17.03         NO_SECURITY   00            DISABLED      DISABLED
17.04         NO_SECURITY   00            DISABLED      DISABLED
```

```
8265ATM> set security port 17.2 mode access_control
Security set completed.
```

```
8265ATM> show security port all
slotport      mode          autolearn     trap          log
-----
17.01         NO_SECURITY   00            DISABLED      DISABLED
17.02         ACCESS_CONTROL 00            DISABLED      DISABLED
17.03         NO_SECURITY   00            DISABLED      DISABLED
17.04         NO_SECURITY   00            DISABLED      DISABLED
8265ATM>
```


SET SECURITY TRAP

SET SECURITY TRAP

Mode: Administrator

Code Card: IISP / PNNI

This command enables or disables creation of system traps for security violations.



ACCESS_VIOLATION

Enables trapping of security violations.

NOTHING

Disables trapping of security violations.

Related Commands

SHOW SECURITY CONTROL, SAVE SECURITY, REVERT SECURITY

Example

```
8265ATM> set security trap access_violation
8265ATM> show security control
```

	mode	autolearn	trap	log
Control Flags	NO_SECURITY	ENABLED	ACCESS_VIOLATION	ACCESS_VIOLATION

```
8265ATM>
```


SET SIGNALLING CALL_PACING

Mode: Administrator

Code Card: IISP / PNNI

This command enables or disables pacing of call set-up requests after a breakdown in service.

This command resets the ATM system.



ON | OFF Enables or disables call pacing.

threshold

Specifies the number of parallel calls admitted for each cycle (maximum 255).

window

Specifies the length of each cycle in increments of 100 msec (maximum 255).

remote_atm_address

Specifies the ATM address from which call pacing should be applied (default is all addresses).

Related Commands

SHOW SIGNALLING CALL_PACING

Example

```

8265ATM> set signalling call_pacing on 150 30
This call will reset the ATM subsystem.
Are you sure ? (Y/N)
  
```


SET TERMINAL BAUD

SET TERMINAL BAUD

Mode: Administrator

Code Card: IISP / PNNI

Use this command to configure the ATM Control Point to the same data transmission rate used by the attached configuration console or modem.

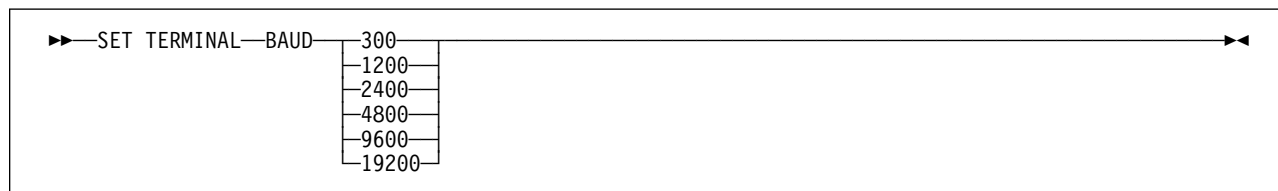

300 | 1200 | 2400 | 4800 | 9600 | 19200

Selects the baud rate of the configuration console.

Usage Notes

- You cannot change the terminal baud for the CPSW module using SNMP.
- To configure the ATM Control Point to communicate with a console or modem that has a baud rate **other than 9600**, follow these steps:
 1. Connect a console that uses a 9600 baud rate, then press Enter to access the ATM Control Point.
 2. Enter the SET TERMINAL BAUD command with the lower baud rate value. After you enter the command, the connection to the ATM Control Point is lost.
 3. Disconnect the console and connect the second console that uses the baud rate configured in Step 2.
 4. Press Enter. Your connection to the ATM Control Point is re-established.
 5. Enter the SAVE TERMINAL command to permanently save the new baud rate.

Related Commands

SHOW TERMINAL, SAVE TERMINAL, REVERT TERMINAL

Examples

```
8265ATM> set terminal baud 2400
8265ATM>
```

SET TERMINAL CONSOLE_PORT_PROTOCOL

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to specify the operating mode of the ATM Control Point console port.

```
▶▶—SET TERMINAL—CONSOLE_PORT_PROTOCOL—  
└─NORMAL─┐  
└─SLIP—┘
```

NORMAL Specifies ASCII-terminal mode. This is the default.

SLIP Specifies Serial Line IP (SLIP) protocol. This option can only be selected from a local console; it cannot be selected via TELNET. When this mode is selected, the configuration console must be a workstation with an active IP stack, and be connected from its serial port to the ATM Control Point console port.

If there is no activity for a period of 20 minutes, the console is automatically returned to normal mode.

Related Commands

SHOW TERMINAL, SAVE TERMINAL, REVERT TERMINAL

Example

```
8265ATM> set terminal console_port_protocol slip  
8265ATM>
```

SET TERMINAL DATA_BITS

SET TERMINAL DATA_BITS

Mode: Administrator

Code Card: IISP / PNNI

Use this command to configure the ATM Control Point to use the same number of data bits used by the attached configuration console or modem.

```
▶▶ SET TERMINAL DATA_BITS [7] ▶▶
```

7 | 8 Specifies the number of data bits used by the configuration console.

Usage Notes

- To configure the ATM Control Point to communicate with a console or modem that has a data bit level of 7, follow these steps:
 1. Connect a console that uses 8 data bits, then press Enter to access the ATM Control Point.
 2. Enter the SET TERMINAL DATA_BITS command with the data bit set to 7. After you reset the data bit, the connection to the ATM Control Point is lost.
 3. Disconnect the console and connect the second console that uses 7 data bits.
 4. Press Enter. Your connection to the ATM Control Point is re-established.
 5. Enter the SAVE TERMINAL command to permanently save the new data bit setting.

Related Commands

SHOW TERMINAL, SAVE TERMINAL, REVERT TERMINAL

Example

```
8265ATM> set terminal data_bits 7
8265ATM>
```

SET TERMINAL HANGUP

Mode: Administrator

Code Card: IISP / PNNI

This command hangs up the modem automatically when you log off, which prevents unauthorized users from using your ATM Control Point modem session.

```
▶ SET TERMINAL HANGUP { ENABLE | DISABLE } ▶
```

ENABLE Specifies that the modem automatically disconnects when you log off.

DISABLE Specifies that the modem is disconnected only when you manually hang up the modem.

Usage Notes

- The modem connection is also automatically disconnected if you enable this command and make no keyboard entries from the console for a time period greater than the value set with the SET TERMINAL TIMEOUT command.

Related Commands

SHOW TERMINAL, SAVE TERMINAL, REVERT TERMINAL

Example

```
8265ATM> set terminal hangup disable  
8265ATM>
```


SET TERMINAL PARITY

SET TERMINAL PARITY

Mode: Administrator

Code Card: IISP / PNNI

Use this command to configure the ATM Control Point to the same parity used by the attached configuration console or modem.



EVEN | ODD | NONE

Specifies the parity of the configuration console.

Usage Notes

- To configure the ATM Control Point to communicate with a console or modem that has a parity setting other than None, follow these steps:
 1. Connect a console that has its parity set to None. Then press Enter to access the ATM Control Point.
 2. Enter the SET TERMINAL PARITY command and set the parity to the new value (even or odd). After you reset this value, the connection to the ATM Control Point is lost.
 3. Disconnect the console and connect the second console that uses the parity setting configured in the preceding step.
 4. Press Enter. Your connection to the ATM Control Point is re-established.
 5. Enter the SAVE TERMINAL command to permanently save the parity setting.

Related Commands

SHOW TERMINAL, SAVE TERMINAL, REVERT TERMINAL

Examples

```
8265ATM> set terminal parity even
```

```
8265ATM>
```

SET TERMINAL PROMPT

Use this command to customize the ATM prompt that appears on the console screen.

Mode: Administrator

Code Card: IISP / PNNI

```
▶▶—SET TERMINAL—PROMPT—prompt————▶▶
```

prompt Specifies a string of up to 15 alphanumeric characters (case sensitive). Default: 8265ATM>

Usage Notes

- It is recommended that you set the prompt to the device name you specify with SET DEVICE NAME. This allows you to recognize the ATM Control Point to which you are connected when you work in remote sessions.
- The system automatically adds a blank space after the prompt so that commands entered on the console are easier to read.
- If you enter the command without specifying a prompt string, the default prompt is used.

Related Commands

SHOW TERMINAL, SAVE TERMINAL, REVERT TERMINAL

Example

```
8265ATM> set terminal prompt ATM1000:  
ATM1000:
```

SET TERMINAL SLIP_ADDRESSES

SET TERMINAL SLIP_ADDRESSES

Mode: Administrator

Code Card: IISP / PNNI

Use this command to specify the IP addresses to be used by the serial line (SLIP) in its point-to-point communications between the IP stack of the ATM Control Point, and the IP stack of the workstation connected to the ATM Control Point console port.

```
▶▶—SET TERMINAL—SLIP_ADDRESSES—local_ip_address—remote_ip_address————▶▶
```

local_ip_address

Specifies the IP address to be used on the ATM Control Point side for the SLIP point-to-point communications between the workstation and the ATM Control Point.

remote_ip_address

Specifies the IP address to be used on the workstation side for the SLIP point-to-point communications between the workstation and the ATM Control Point.

Usage Notes

- A network mask is not required for SLIP.
- This command can only be used on a local configuration console. It is not available over TELNET.

Related Commands

SHOW TERMINAL, SAVE TERMINAL, REVERT TERMINAL

Example

```
8265ATM> set terminal slip_addresses
Enter local ip address : 9.100.86.139
Enter remote ip address : 9.100.86.138

Configuring SLIP ...
8265ATM>
```

SET TERMINAL STOP_BITS

Mode: Administrator

Code Card: IISP / PNNI

Use this command to configure the ATM Control Point to the number of stop bits used by the attached configuration console or modem. This command resets the line to an idle state.

```
▶ SET TERMINAL STOP_BITS [1 | 2] ▶
```

1 | 2 Specifies the number of stop bits used for the configuration console.

Usage Notes

- The ATM Control Point registers the end of each character sent from the ATM Control Point console or attached modem as soon as one stop bit is received. The ATM Control Point must be set to the same stop bit count as the console or modem in order to communicate.
- To configure the ATM Control Point to communicate with a console or modem that has a stop bit count of 2, follow these steps:
 1. Connect a console that uses 1 stop bit. Then press Enter to access the ATM Control Point.
 2. Enter the SET TERMINAL STOP_BITS command and set the stop bit level to 2. After you reset this value, the connection to the ATM Control Point is lost.
 3. Disconnect the console and connect the second console that uses the 2 stop bits.
 4. Press Enter. Your connection to the ATM Control Point is re-established.
 5. Enter the SAVE TERMINAL command to permanently save the new stop bit setting.

Related Commands

SHOW TERMINAL, SAVE TERMINAL, REVERT TERMINAL

Examples

```
8265ATM> set terminal stop_bits 2
8265ATM>
```

SET TERMINAL TIMEOUT


SET TERMINAL TIMEOUT

Mode: Administrator

Code Card: IISP / PNNI

Use this command to set the number of minutes that you can remain logged on to an ATM Control Point session without making a keyboard entry. When this time period has elapsed, you are automatically logged off and your session is terminated.

This is a security measure that prevents unauthorized users from accessing and working in an open ATM Control Point session when the console is left unattended.



minutes Specifies the number of minutes before the configuration console is automatically logged-off. Values: 1 to 30 or 0 (for no automatic logoff).

Usage Notes

- If you enable the SET TERMINAL HANGUP command and have a modem attached to the console, the modem connection is also terminated.
- If the system automatically logs you off, any unsaved changes remain active. These changes are lost if you reset the ATM Control Point. To permanently save these changes, you must log back on to the ATM Control Point and enter the SAVE command.

Related Commands

SHOW TERMINAL, SAVE TERMINAL, REVERT TERMINAL

Example

The following command automatically logs you off the ATM Control Point console if no keystrokes are entered for more than two minutes:

```
8265ATM> set terminal timeout 2
```

The console beeps once. The following message is displayed if you do not save the configuration changes before the timeout expires:

```
Parser timed out
Warning: unsaved changes.

Bye
```

Unsaved changes remain configured but not permanently saved. They will be lost at the next reset. To save them, you must re-establish connection to the ATM Control Point and enter the SAVE command.

SET TFTP FILE_NAME

Mode: Administrator

Code Card: IISP / PNNI

Use this command to specify the path name of the file that is to be:

- Downloaded from a server using the DOWNLOAD command, or
- Created on a server using the UPLOAD command.

After entering the command, you are prompted to enter a full path name of up to 128 alphanumeric characters (the file name entered is case-sensitive and can include the space character).

```
▶—SET TFTP—FILE_NAME—◀
```

Related Commands

SHOW TFTP, SAVE TFTP, REVERT TFTP, DOWNLOAD, UPLOAD

Example — PS/2

The following example shows how to set a full path name for a PS/2 host:

```
8265ATM> set tftp file_name
Enter file name:
c:\atmsoft\v1.0-B

File name set.
8265ATM>
```

Example — AIX

The following example shows how to set a full path name for an AIX host:

```
8265ATM> set tftp file_name
Enter file name:
/tmp/module.up

File name set.
8265ATM>
```

On the upload to the AIX host, the datagram is transmitted via the UDP socket 69 to the user ID, nobody.


SET TFTP FILE_TYPE

SET TFTP FILE_TYPE

Mode: Administrator

Code Card: IISP / PNNI

Use this command to specify the type of file to be used with the DOWNLOAD and UPLOAD commands.

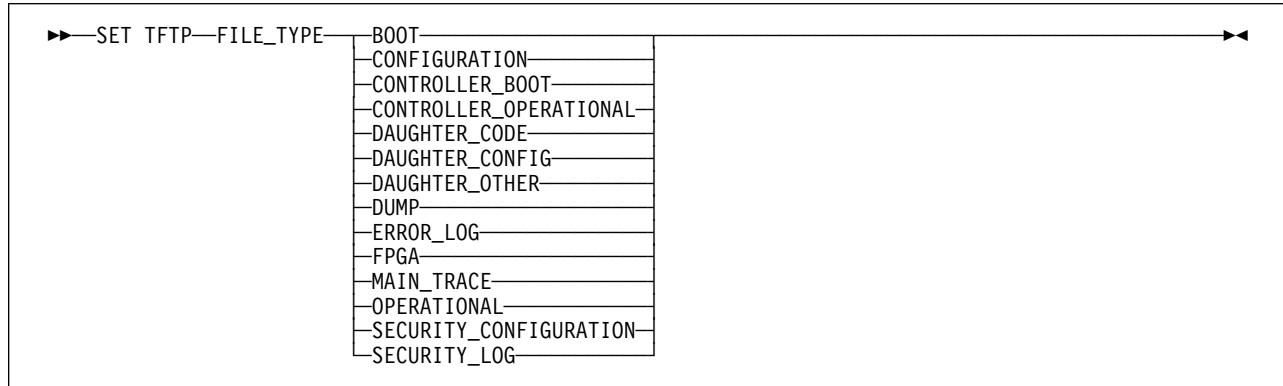

The file types that you can configure are as follows:

BOOT *Download:* Updates the inactive boot load module in the ATM Control Point flash EEPROM.

CONFIGURATION

Upload: Saves all current configuration settings to a file on the TFTP server.

Download: Replaces all current configuration settings with those saved on the TFTP server.

CONTROLLER_BOOT

Download: Updates the inactive boot load module in the controller (RCTL) module flash EEPROM, if a controller module is installed.

CONTROLLER_OPERATIONAL

Download: Updates the inactive operational load module in the controller module flash EEPROM, if a controller module is installed.

DAUGHTER_CODE

(WAN2 Module and Carrier Module 2.5 ports only) *Download:* Updates the microcode in the selected WAN2 I/O card.

DAUGHTER_CONFIG

(WAN2 Module and Carrier Module 2.5 ports only) *Download:* Updates the microcode in the selected WAN2 I/O card.

DAUGHTER_OTHER

(WAN2 Module and Carrier Module 2.5 ports only) *Download:* Updates the microcode in the selected WAN2 I/O card.

DUMP

Upload: Saves the contents of the dump buffer to a file on the TFTP server.

ERROR_LOG

Upload: Saves the error log to a file on the TFTP server.

FPGA

Download: Updates the hardware picocode for the CPSW module and ATM media modules. The procedure to load hardware picocode takes from 10 to 20 minutes.

MAIN_TRACE

Upload: Saves the main trace log to a file on the TFTP server. (To create a main trace log, enter the command SET TRACE MAIN_TRACE.)

OPERATIONAL

Download: Updates the inactive operational load module in the ATM Control Point flash EEPROM.

SECURITY_CONFIGURATION

Upload: Saves the access control address table to a file on the TFTP server.

Download: Replaces the current access control address table with that saved on the TFTP server.

SECURITY_LOG

Upload: Saves the contents of the security log to a file on the TFTP server.

Related Commands

SHOW TFTP, SAVE TFTP, REVERT TFTP, DOWNLOAD, UPLOAD

Example

```
8265ATM> set tftp file_type security
File type set.
8265ATM>
```

SET TFTP SERVER_IP_ADDRESS

SET TFTP SERVER_IP_ADDRESS

Mode: Administrator

Code Card: IISP / PNNI

Use this command to configure the IP address of the TFTP server used for the DOWNLOAD and UPLOAD commands.

```
▶ SET TFTP SERVER_IP_ADDRESS [ip_address | host_name] ▶
```

ip_address

IP address of the server in the format *n.n.n.n*, where *n* is a number between 0 and 255.

host_name

The name assigned to the server using the SET HOST command.

Note: Pressing '?' (help) for this parameter displays a list of available host names.

Usage Notes

- If the TFTP server is reachable via a Classical IP over ATM subnetwork as defined in RFC1577 (either directly attached or attached behind a router), or reachable via a LAN emulation network, the ATM address of the ARP server must be configured (using SET DEVICE ARP_SERVER).
- If the server is an IP workstation connected to the ATM Control Point console port operating in SLIP mode, use the remote IP address that has been set up using the SET TERMINAL SLIP_ADDRESSES command as the TFTP server IP address.

In addition, if the server is reachable via a router, the ATM Control Point must be configured with the IP address of the default gateway (using SET DEVICE DEFAULT_GATEWAY).

Related Commands

SHOW TFTP, SAVE TFTP, REVERT TFTP, DOWNLOAD, UPLOAD

Example

```
8265ATM> set tftp server_ip_address 125.36.58.117
TFTP server set.
8265ATM>
```

The following example shows the use of the host name in place of the IP address.

```
8265ATM> set tftp server_ip_address ATM02
TFTP server set.
8265ATM>
```

SET TFTP TARGET_MODULE

Mode: Administrator

Code Card: IISP / PNNI

Use this command to specify the CPSW module, ATM media module, or controller (RCTL) module to receive a hardware picocode update using the DOWNLOAD command.

```
▶—SET TFTP—TARGET_MODULE—slot—▶▶
```

slot Slot number where the target module is installed.

Usage Notes

- This command is only available after TFTP FILE_TYPE is set to FPGA.

Related Commands

SHOW TFTP, SAVE TFTP, REVERT TFTP, DOWNLOAD, UPLOAD

Example

```
8265ATM> set tftp target_module 1
Target module set.
8265ATM>
```

SET TFTP TARGET_PORT

SET TFTP TARGET_PORT

Mode: Administrator

Code Card: IISP / PNNI

Use this command to specify the port number of the WAN2 I/O card that will receive an I/O card microcode update using the DOWNLOAD command.

```
▶▶—SET TFTP—TARGET_PORT—slot.port————▶▶
```

slot.port Slot and port number where the WAN2 I/O card is installed.

Usage Notes

- This command is only available after TFTP FILE_TYPE is set to DAUGHTER_CODE, DAUGHTER_CONFIG, or DAUGHTER_OTHER.

Related Commands

SHOW TFTP, SAVE TFTP, REVERT TFTP, DOWNLOAD, UPLOAD

Example


```
8265ATM> set tftp target_port 3.2
Target port set.
8265ATM>
```

SET THRESHOLD MODULE

Mode: User / Administrator

Code Card: IISP / PNNI

This command can prevent your ATM Switch from properly handling ATM traffic. *Never use this command without support from your IBM representative.*

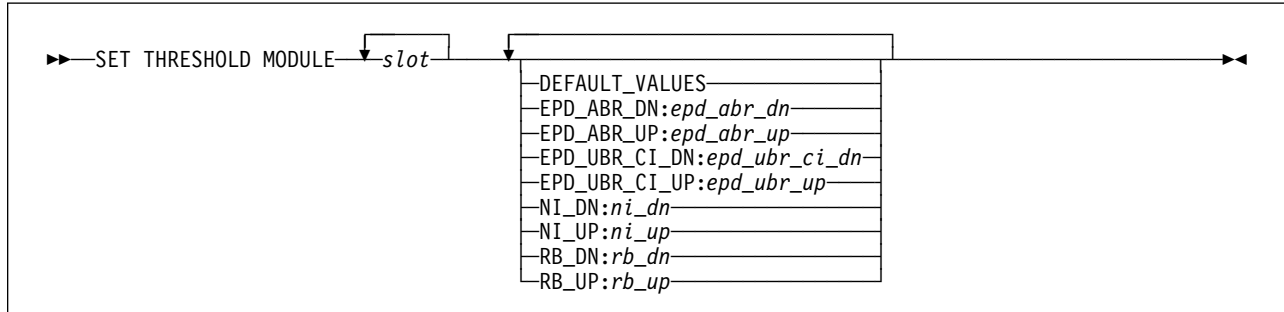

Usage Notes

- If you have changed any threshold settings and then want to return to normal operation, use the DEFAULT_VALUES parameter. Then issue the SAVE MODULE_PORT command.

Related Commands

SHOW THRESHOLDS, SAVE MODULE_PORT, REVERT MODULE_PORT

SET THRESHOLD PORT

SET THRESHOLD PORT

Mode: User / Administrator

Code Card: IISP / PNNI

This command can prevent your ATM Switch from properly handling ATM traffic. *Never use this command without support from your IBM representative.*

```
▶ SET THRESHOLD PORT slot.port PROFILE: index DEFAULT ◀
```

Usage Notes

- If you have changed any threshold settings and then want to return to normal operation, use the DEFAULT_VALUES parameter. Then issue the SAVE MODULE_PORT command.

Related Commands


SET PROFILE THRESHOLDS, SHOW THRESHOLDS, SAVE MODULE_PORT, REVERT MODULE_PORT

SET TRACE

Mode: Administrator

Code Card: IISP / PNNI

Use this command to enable and disable the recording of traces in the ATM Control Point trace log.

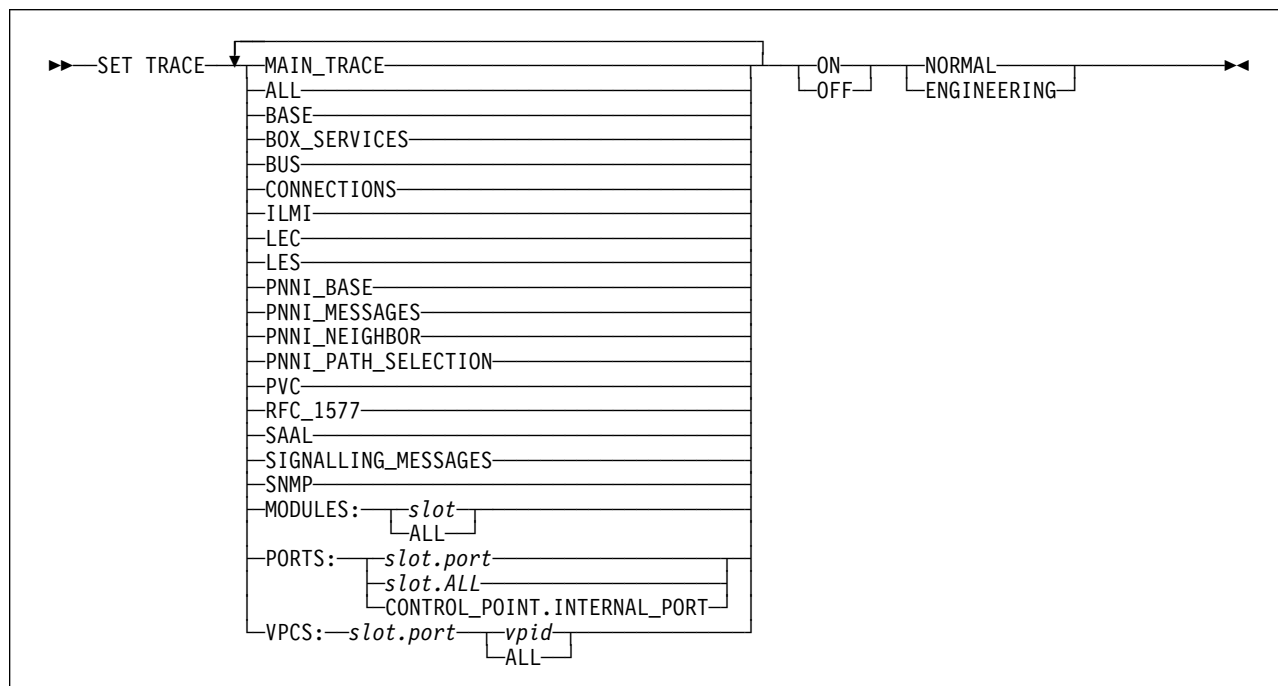

ON | OFF Starts and stops the trace recording.

MAIN_TRACE

Specifies that the recording of data from the selected trace categories is to start (ON) or stop (OFF).

ALL Specifies that all trace categories are to start (ON) or stop (OFF).

BASE Selects (ON) and deselects (OFF) all other traces not included in the other trace categories.

BOX_SERVICES

Selects (ON) and deselects (OFF) tracing of configuration services and box survey.

BUS Selects (ON) and deselects (OFF) tracing of BUS transactions.

CONNECTIONS

Selects (ON) and deselects (OFF) tracing of connections transactions.

ILMI Selects (ON) and deselects (OFF) tracing of ILMI transactions.

LEC Selects (ON) and deselects (OFF) tracing of LEC transactions.

LES Selects (ON) and deselects (OFF) tracing of LES transactions.

PNNI_BASE

Selects (ON) and deselects (OFF) tracing of PNNI base transactions.

PNNI_MESSAGES

Selects (ON) and deselects (OFF) tracing of PNNI messages.

SET TRACE

PNNI_NEIGHBOR

Selects (ON) and deselects (OFF) tracing of PNNI neighbor transactions.

PNNI_PATH_SELECTION

Selects (ON) and deselects (OFF) tracing of PNNI path selection transactions.

PVC

Selects (ON) and deselects (OFF) tracing of PVC transactions.

RFC_1577

Selects (ON) and deselects (OFF) tracing of RFC_1577 transactions.

SAAL

Selects (ON) and deselects (OFF) tracing of SAAL transactions.

SIGNALLING_MESSAGES

Selects (ON) and deselects (OFF) tracing of signalling messages.

SNMP

Selects (ON) and deselects (OFF) tracing of SNMP transactions.

MODULE: slot | ALL

Restrict the trace to traffic on the selected module or to all modules.

PORT: slot.port | slot.ALL | CONTROL_POINT.INTERNAL_PORT

Restrict the trace to traffic on the selected port(s).

VPCS: vpid | ALL

Restrict the trace to traffic on the selected VPC or to all VPCs.

NORMAL | ENGINEERING

(MAIN_TRACE only)

Usage Notes

- To save the trace log to a file on a server, use the UPLOAD command with TFTP FILE_TYPE set to MAIN_TRACE.

Related Commands

SHOW TRACE

Example


```
8265ATM> set trace modules:5 6 on
Main trace is OFF.
    base trace will be off when main trace is on.
    bus trace will be off when main trace is on.
signalling messages trace will be off when main trace is on.
    ilmi trace will be off when main trace is on.
    lec trace will be off when main trace is on.
    les trace will be off when main trace is on.
    pnni_base trace will be off when main trace is on.
    pnni_messages trace will be off when main trace is on.
    pnni_neighbor trace will be off when main trace is on.
pnni_path_selection trace will be on when main trace is on.
    pvc trace will be off when main trace is on.
    RFC 1577 trace will be on when main trace is on.
    saal trace will be off when main trace is on.
    connections trace will be on when main trace is on.
    snmp trace will be off when main trace is on.
    box_services trace will be off when main trace is on.
VPC 5.* * appears in traces
VPC 6.* * appears in traces
8265ATM>
```

SET VPC_LINK

Mode: Administrator

Code Card: IISP / PNNI

Use the SET VPC parameters to define, enable, and disable a VPC on any VOID or UNI:PUBLIC ATM port, and to configure its interface.

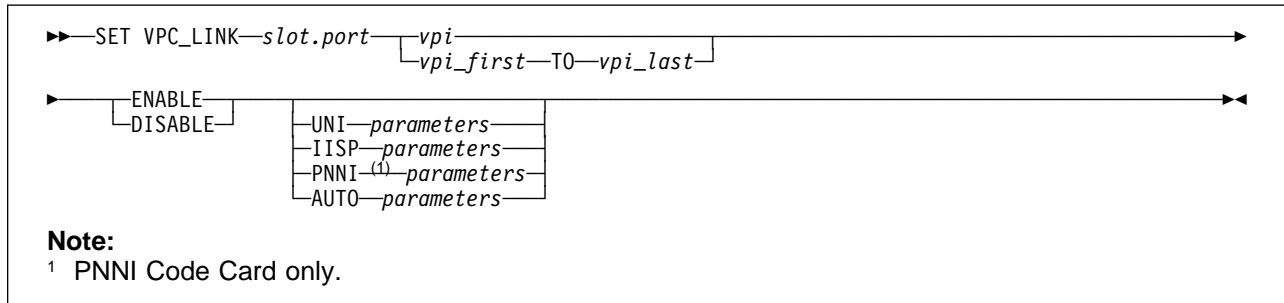

slot Slot number of the ATM media module.

port ATM port number.

vpi Specifies the VPI for this VPC link.

vpi_first | vpi_last

Generates a range of VPC links using the VPIs specified.

ENABLE | DISABLE

Enables and disables the selected VPC link.

UNI | IISP | PNNI | AUTO

Sets the interface type for the selected VPC link (default = UNI).

For optional *parameters* available for interface type:

UNI See "UNI VPC Parameters" on page 129.

IISP See "IISP VPC Parameters" on page 131.

PNNI See "PNNI VPC Parameters" on page 134. (**PNNI Code Card only.**)

AUTO Enables automatic configuration of the interface type. (UNI, IISP, or PNNI). See "AUTO VPC Parameters" on page 136.

For more information on ATM interfaces, see the *8265 User's Guide*.

Usage Notes

- The maximum number of VPC links that can be defined for an ATM Control Point depends on the memory configuration defined with the SET DEVICE CONFIG_FUNCTIONS command.

SET VPC_LINK

Related Commands

SHOW VPC_LINK, CLEAR VPC_LINK, SAVE MODULE_PORT, REVERT MODULE_PORT

Example

```
8265ATM> set vpc_link 4.2 5 enable uni bandwidth:526 rb_admin_weight:5040
Accepted
8265ATM> show vpc_link
Enter module: all
```


VPI	Type	Mode	Status
4.02	5:UNI	enable	DOWN:port not ready

```
8265ATM>
```

UNI VPC Parameters

Code Card: IISP / PNNI

The following parameters for the SET VPC command are used to configure VPCs with UNI interface.

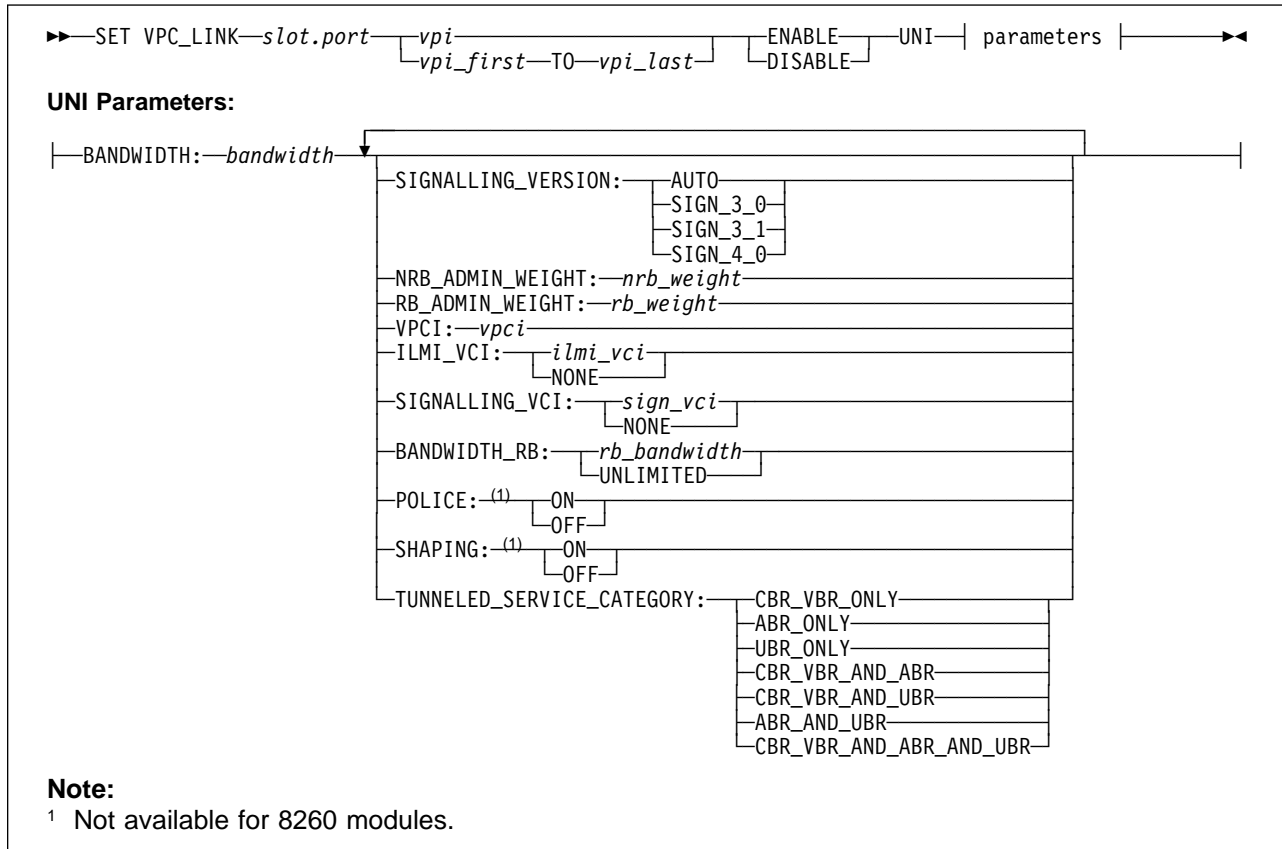

BANDWIDTH: bandwidth

The bandwidth (in Kbps) to be allocated for connections over the selected VPC. The sum of VPC bandwidths cannot exceed the port bandwidth. This setting is mandatory.

SIGNALLING_VERSION:

Specifies the signalling protocol version to use on this VPC.

AUTO (ILMI only) Use automatic detection to determine the signalling protocol version (UNI 3.0 , 3.1, or 4.0) on this VPC. (Default)

SIGN_3_0

Use UNI 3.0 signalling only on this VPC.

SIGN_3_1

Use UNI 3.1 signalling only on this VPC.

SIGN_4_0

Use UNI 4.0 signalling only on this UNI port.

NRB_ADMIN_WEIGHT: nrb_weight

A 4-byte value that specifies the relative ranking of the selected VPC's link. (Default = 5040)

RB_ADMIN_WEIGHT: rb_weight

A 4-byte value that specifies the relative ranking of the selected VPC's link. (Default = 5040)

SET VPC_LINK (UNI)

VPCI: *vpci*

Specifies the virtual path connection identifier. (Range 0 - 255)

ILMI_VCI:

Specifies:

ilmi_vci The *vci* of the ILMI channel. (Default = 16)

NONE ILMI disabled on this VPC.

If you disable ILMI, then you cannot use signalling version AUTO.

SIGNALLING_VCI:

Specifies:

sign_vci The *vci* of the Signalling channel. (Default = 5)

NONE Signalling disabled on this VPC.

BANDWIDTH_RB:

Defines the maximum bandwidth that can be allocated for Reserved Bandwidth (RB) connections (CBR, rtVBR, nrtVBR, ABR MCR≠0) over the selected VPC.

UNLIMITED Allocates the maximum setting for Reserved Bandwidth: 85% of VPC bandwidth.

rb_bandwidth Specifies the maximum bandwidth (in Kbps).

Notes:

1. The value of *rb_bandwidth* must be less than or equal to the VPC bandwidth.
2. Setting *rb_bandwidth* equal to the VPC bandwidth means that no Unspecified Bit Rate (UBR) or Available Bit Rate (ABR MCR=0) connections can be established on the selected VPC.
3. Setting *rb_bandwidth* equal to zero means that no RB connections (CBR, rtVBR, nrtVBR, ABR MCR≠0) can be established on the selected VPC.

POLICE: ON | OFF

(**CBR and VBR traffic types only. / Not available for 8260 modules.**) Enables and disables Policing on the selected VPC.

SHAPING: ON | OFF

Enables or disables shaping on the VPC. (**Not available for 8260 modules.**)

TUNNELED_SERVICE_CATEGORY:

(**With SHAPING:ON only**) Activates traffic shaping and defines which traffic types can be chosen by connections established on this VPC.

CBR_VBR_ONLY

ABR_ONLY

UBR_ONLY

CBR_VBR_AND_ABR

CBR_VBR_AND_UBR

ABR_AND_UBR


CBR_VBR_AND_ABR_AND_UBR

If more than one type of traffic is defined (the last four options) traffic is limited to 50% of the module speed.

IISP VPC Parameters

Code Card: IISP / PNNI

The following parameters for the SET VPC command are used to configure VPCs with IISP interface.

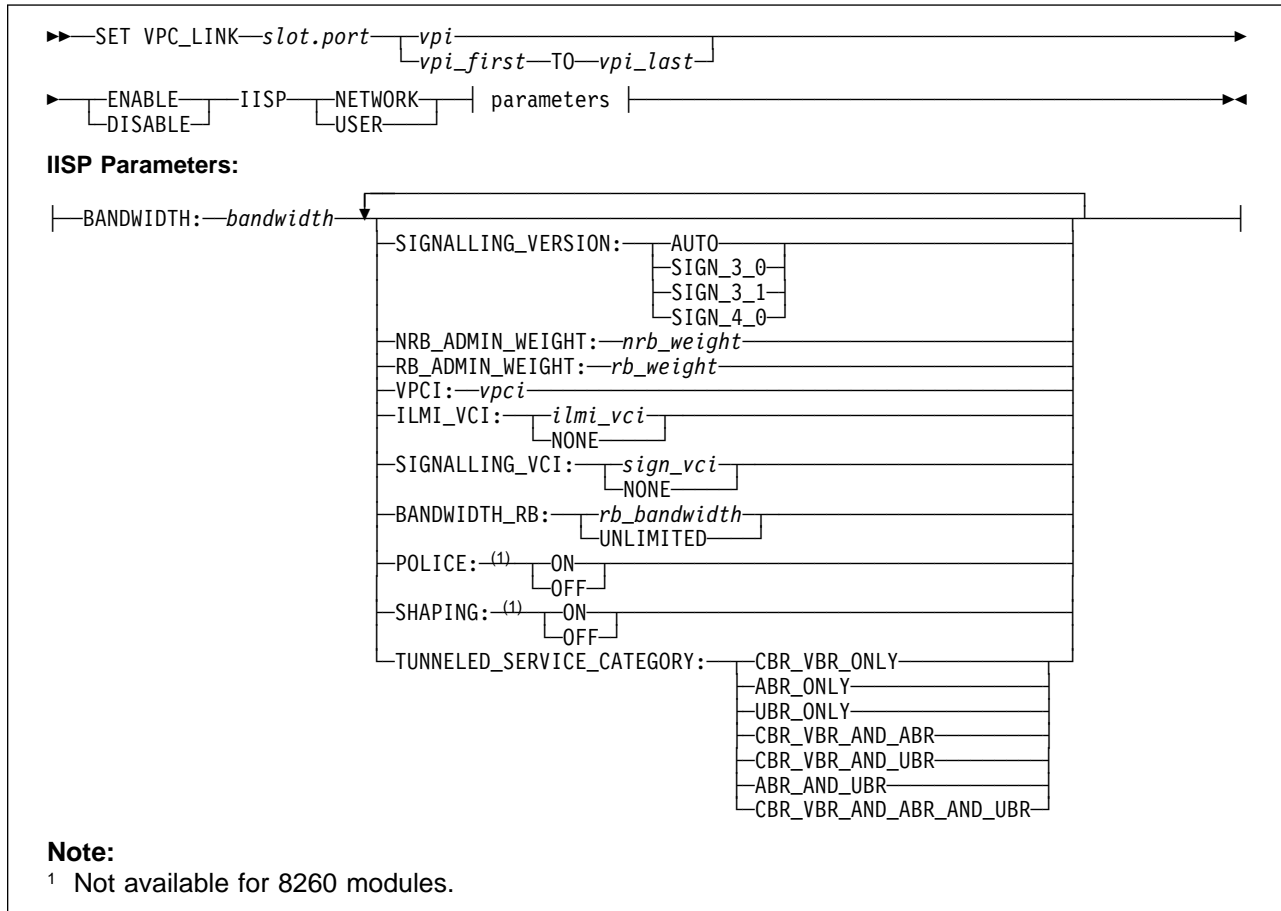

BANDWIDTH: *bandwidth*

The bandwidth (in Kbps) to be allocated for connections over the selected VPC. The sum of VPC bandwidths cannot exceed the port bandwidth. This setting is mandatory.

SIGNALLING_VERSION:

Specifies the signalling protocol version to use on this VPC.

AUTO (*ILMI only*) Use automatic detection to determine the signalling protocol version (UNI 3.0 , 3.1, or 4.0) on this VPC. (Default)

SIGN_3_0

Use UNI 3.0 signalling only on this VPC.

SIGN_3_1

Use UNI 3.1 signalling only on this VPC.

SIGN_4_0

Use UNI 4.0 signalling only on this UNI port.

SET VPC_LINK (IISP)

NRB_ADMIN_WEIGHT: *nrb_weight*

A 4-byte value that specifies the relative ranking of the selected VPC's link. (Default = 5040)

RB_ADMIN_WEIGHT: *rb_weight*

A 4-byte value that specifies the relative ranking of the selected VPC's link. (Default = 5040)

VPCI: *vpci*

Specifies the virtual path connection identifier. (Range 0 - 255)

ILMI_VCI:

Specifies:

ilmi_vci The *vci* of the ILMI channel. (Default = 16)

NONE ILMI disabled on this VPC.

If you disable ILMI, then you cannot use signalling version AUTO.

SIGNALLING_VCI:

Specifies:

sign_vci The *vci* of the Signalling channel. (Default = 5)

NONE Signalling disabled on this VPC.

BANDWIDTH_RB:

Defines the maximum bandwidth that can be allocated for Reserved Bandwidth (RB) connections (CBR, rtVBR, nrtVBR, ABR MCR≠0) over the selected VPC.

UNLIMITED Allocates the maximum setting for Reserved Bandwidth: 85% of VPC bandwidth.

rb_bandwidth Specifies the maximum bandwidth (in Kbps).

Notes:

1. The value of *rb_bandwidth* must be less than or equal to the VPC bandwidth.
2. Setting *rb_bandwidth* equal to the VPC bandwidth means that no Unspecified Bit Rate (UBR) or Available Bit Rate (ABR MCR=0) connections can be established on the selected VPC.
3. Setting *rb_bandwidth* equal to zero means that no RB connections (CBR, rtVBR, nrtVBR, ABR MCR≠0) can be established on the selected VPC.

POLICE: ON | OFF

(**CBR and VBR traffic types only. / Not available for 8260 modules.**) Enables and disables Policing on the selected VPC.

SHAPING: ON | OFF

Enables or disables shaping on the VPC. (**Not available for 8260 modules.**)

TUNNELED_SERVICE_CATEGORY:

(**With SHAPING:ON only**) Activates traffic shaping and defines which traffic types can be chosen by connections established on this VPC.

CBR_VBR_ONLY

ABR_ONLY

UBR_ONLY

CBR_VBR_AND_ABR

CBR_VBR_AND_UBR

ABR_AND_UBR

CBR_VBR_AND_ABR_AND_UBR


If more than one type of traffic is defined (the last four options) traffic is limited to 50% of the module speed

SET VPC_LINK (PNNI)

PNNI VPC Parameters

Code Card: PNNI only

The following parameters for the SET VPC command are used to configure VPCs with PNNI interface.

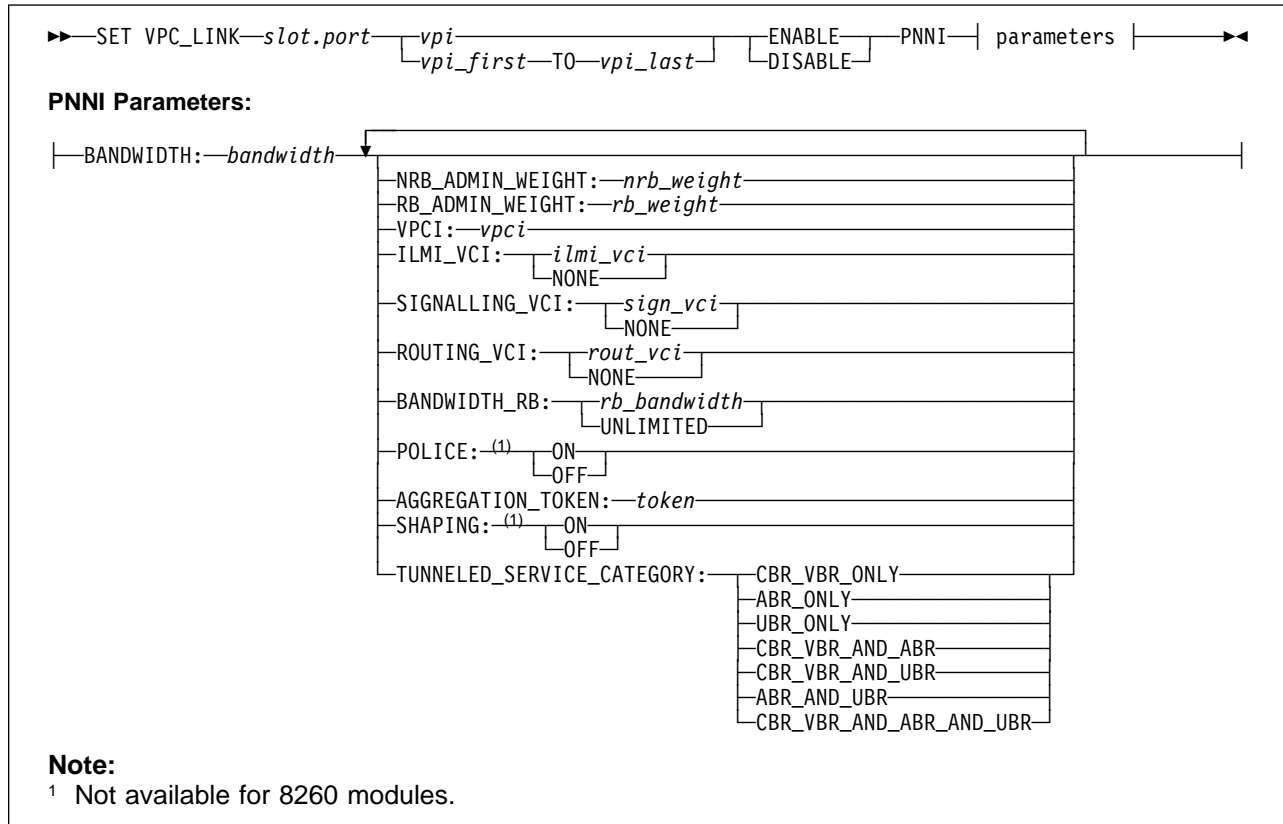

BANDWIDTH: *bandwidth*

The bandwidth (in Kbps) to be allocated for connections over the selected VPC. The sum of VPC bandwidths cannot exceed the port bandwidth. This setting is mandatory.

NRB_ADMIN_WEIGHT: *nrb_weight*

A 4-byte value that specifies the relative ranking of the selected VPC's link. (Default = 5040)

RB_ADMIN_WEIGHT: *rb_weight*

A 4-byte value that specifies the relative ranking of the selected VPC's link. (Default = 5040)

VPCI: *vpci*

Specifies the virtual path connection identifier. (Range 0 - 255)

ILMI_VCI:

Specifies:

ilmi_vci The *vci* of the ILMI channel. (Default = 16)

NONE ILMI disabled on this VPC.

If you disable ILMI, then you cannot use signalling version AUTO.

SIGNALLING_VCI:

Specifies:

sign_vci The *vci* of the Signalling channel. (Default = 5)

NONE Signalling disabled on this VPC.

ROUTING_VCI:

Specifies:

rout_vci The *vci* of the Routing channel. (Default = 18)

NONE Routing disabled on this VPC.

BANDWIDTH_RB:

Defines the maximum bandwidth that can be allocated for Reserved Bandwidth (RB) connections (CBR, rtVBR, nrtVBR, ABR MCR≠0) over the selected VPC.

UNLIMITED Allocates the maximum setting for Reserved Bandwidth: 85% of VPC bandwidth.

rb_bandwidth Specifies the maximum bandwidth (in Kbps).

Notes:

1. The value of *rb_bandwidth* must be less than or equal to the VPC bandwidth.
2. Setting *rb_bandwidth* equal to the VPC bandwidth means that no Unspecified Bit Rate (UBR) or Available Bit Rate (ABR MCR=0) connections can be established on the selected VPC.
3. Setting *rb_bandwidth* equal to zero means that no RB connections (CBR, rtVBR, nrtVBR, ABR MCR≠0) can be established on the selected VPC.

POLICE: ON | OFF

(**CBR and VBR traffic types only. / Not available for 8260 modules.**) Enables and disables Policing on the selected VPC.

AGGREGATION_TOKEN:token

Specifies the aggregation token to be assigned to this link.

SHAPING: ON | OFF

Enables or disables shaping on the VPC.. (**Not available for 8260 modules.**)

TUNNELED_SERVICE_CATEGORY:

(**With SHAPING:ON only**) Activates traffic shaping and defines which traffic types can be chosen by connections established on this VPC.

CBR_VBR_ONLY

ABR_ONLY

UBR_ONLY

CBR_VBR_AND_ABR

CBR_VBR_AND_UBR

ABR_AND_UBR

CBR_VBR_AND_ABR_AND_UBR


If more than one type of traffic is defined (the last four options) traffic is limited to 50% of the module speed

SET VPC_LINK (AUTO)

AUTO VPC Parameters

Code Card: IISP / PNNI

The following parameters for the SET VPC command are used to configure VPCs with AUTO interface.

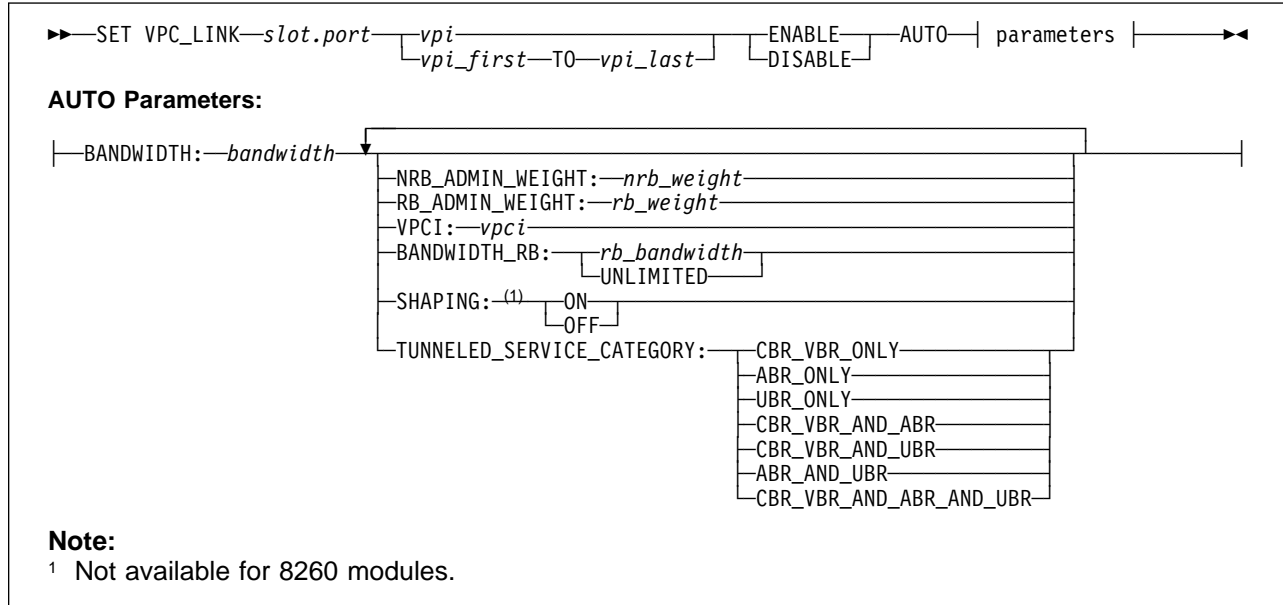

BANDWIDTH: bandwidth

The bandwidth (in Kbps) to be allocated for connections over the selected VPC. The sum of VPC bandwidths cannot exceed the port bandwidth. This setting is mandatory.

NRB_ADMIN_WEIGHT: nrb_weight

A 4-byte value that specifies the relative ranking of the selected VPC's link. (Default = 5040)

RB_ADMIN_WEIGHT: rb_weight

A 4-byte value that specifies the relative ranking of the selected VPC's link. (Default = 5040)

VPCI: vpci

Specifies the virtual path connection identifier. (Range 0 - 255)

BANDWIDTH_RB:

Defines the maximum bandwidth that can be allocated for Reserved Bandwidth (RB) connections (CBR, rtVBR, nrtVBR, ABR MCR≠0) over the selected VPC.

UNLIMITED Allocates the maximum setting for Reserved Bandwidth: 85% of VPC bandwidth.

rb_bandwidth Specifies the maximum bandwidth (in Kbps).

Notes:

1. The value of *rb_bandwidth* must be less than or equal to the VPC bandwidth.
2. Setting *rb_bandwidth* equal to the VPC bandwidth means that no Unspecified Bit Rate (UBR) or Available Bit Rate (ABR MCR=0) connections can be established on the selected VPC.
3. Setting *rb_bandwidth* equal to zero means that no RB connections (CBR, rtVBR, nrtVBR, ABR MCR≠0) can be established on the selected VPC.

SHAPING: ON | OFF

Enables or disables shaping on the VPC. (**Not available for 8260 modules.**)

TUNNELED_SERVICE_CATEGORY:

(**With SHAPING:ON only**) Activates traffic shaping and defines which traffic types can be chosen by connections established on this VPC.

CBR_VBR_ONLY

ABR_ONLY

UBR_ONLY

CBR_VBR_AND_ABR

CBR_VBR_AND_UBR

ABR_AND_UBR

CBR_VBR_AND_ABR_AND_UBR

If more than one type of traffic is defined (the last four options) traffic is limited to 50% of the module speed.

SHOW ALERT

SHOW ALERT

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to display the current alert settings configured for the ATM Control Point with the SET ALERT command.

▶—SHOW ALERT—◀

Related Commands

SHOW ALERT, SAVE ALERT, REVERT ALERT

Example

```
8265ATM> show alert
Alert AUTHENTICATION set to NOTRAP NODISPLAY
Alert CHANGE set to NOTRAP NODISPLAY
Alert HELLO set to NOTRAP NODISPLAY
8265ATM>
```

SHOW CLOCK

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to display the current date and time. The original starting time for the ATM Control Point was configured with the SET CLOCK command.

▶—SHOW CLOCK—◀

Related Commands

SET CLOCK

Example

```
8265ATM> show clock  
Clock is set to 09:01 Tue 16 Jun 1998.
```

```
8265ATM>
```

SHOW COMMUNITY

SHOW COMMUNITY

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to display the current community settings configured for the ATM Control Point.

▶—SHOW COMMUNITY—◀

Related Commands

SET COMMUNITY, CLEAR COMMUNITY, SAVE COMMUNITY, REVERT COMMUNITY

Example

```
8265ATM> show community
Index Community_Name IP_Address      Accesses
-----
 1 public            9.100.92.160  Read - Write - Trap
 2 public            ***.***.***.***  Read - Write -No trap
 3 eliane            ***.***.***.***  HTTP Enable
 4 longrun           ***.***.***.***  Read - Write -No trap
 5 public            ***.***.***.***  HTTP Enable
5 entries empty.
8265ATM>
```


SHOW DEVICE

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to display configuration information about the ATM Control Point.

▶—SHOW DEVICE—◀

Related Commands

SET DEVICE commands, SAVE DEVICE, REVERT DEVICE

Example

The information displayed in the reply is described below.

```
8265ATM> show device
8265 ATM Control Point and Switch Module
Name : 8265ATM
Location :
ICI

For assistance contact :
 20 Jul 1998

Manufacture id: 930
Part Number: 25L4434 EC Level: F12356
Boot EEPROM version: H.4.0.d
Flash EEPROM version: d.4.0.d
Flash EEPROM backup version: d.4.0.b
Last Restart : 15:01:43 Mon 20 Jul 1998 (Restart Count: 162)

A-CPSW
-----
> Subnet ethernet: Up
  IP address: 9.100.109.217. Subnet mask: FF.FF.FF.00
  MAC Address: 0056291F83D6 (BIA)
> Subnet atm: Up
  IP address: 9.100.94.14. Subnet mask: FF.FF.FF.80

> Subnet lan emulation ethernet/DIX
  Up
  Config ELAN Name : "8265V4_LES_ETH"
  Actual ELAN Name : "8265V4_LES_ETH"
  MAC Address: 0056291F03D6
  IP address : 5.6.7.8. Subnet mask: FF.FF.FF.C0
  ATM address : 47.41.82.65.14.14.00.00.00.00.00.14.14.65.00.00.00.94.14.00
  Config LES addr:none
  Actual LES addr:45.40.82.65.00.00.00.00.00.00.00.01.19.50.19.19.19.19.02
  BUS ATM address:45.40.82.65.00.00.00.00.00.00.00.01.19.50.19.19.19.19.02
  Config LECS add:none
  Actual LECS add:47.00.79.00.00.00.00.00.00.00.00.00.00.A0.3E.00.00.01.00
  LEC Identifier: 16. Maximum Transmission Unit: 1492
```

SHOW DEVICE

```
> Subnet lan emulation token ring
Not Started
Config ELAN Name : "8265V4_LES_TR"
Actual ELAN Name : ""
MAC Address: 0056297703D6
IP address : 0.0.0.0. Subnet mask: 00.00.00.00
ATM address : 47.41.82.65.14.14.00.00.00.00.00.14.14.65.00.00.00.94.14.01
Config LES addr:none
Actual LES addr:00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00
BUS ATM address:00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00
Config LECS add:none
Actual LECS add:00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00
LEC Identifier: 0. Maximum Transmission Unit: 0

Default Gateway : OK
-----
IP address: 9.100.94.65

ARP Server:
-----
ATM address: 39.BB.82.60.02.02.00.00.00.00.00.02.02.82.10.00.94.40.00.00

Device configured for PNNI port capability.
Dynamic RAM size is 64 MB. Migration: off. Diagnostics: enabled.
Device defined as secondary.
Memory profile: P2P (E_64_P_P)
Duplicate ATM addresses are allowed.
Accounting is disabled.
ILMI key = 0000-0000 0000-0000 1111-1111 1111-1111
8265ATM>
```

Name Name assigned to ATM Control Point via the SET DEVICE NAME command.

Location Physical location of ATM Control Point entered with the SET DEVICE LOCATION command.

For assistance contact

Service contact information entered with the SET DEVICE CONTACT command.

Boot EEPROM version

Software version number of the Boot load module.

Flash EEPROM version

Software version number of the active Operational load module.

Flash EEPROM backup version

Software version number of the backup Operational load module.

Last restart

Time of the last restart of an ATM Control Point. The number of restarts is shown by the Restart Count.

Subnet ethernet

Status of the Ethernet network connected by the CPSW Ethernet port.

IP address

IP address of the ATM Control Point in the Ethernet network (configured with the SET DEVICE IP_ADDRESS ETH command).

Subnet mask

Subnet mask used by the ATM Control Point in the Ethernet network (configured with the SET DEVICE IP_ADDRESS ETH command).

MAC address

MAC address of the ATM Control Point in the Ethernet network (configured with the SET DEVICE ETHERNET_MAC_ADDRESS command).

Subnet ATM

Status of the Classical IP Over ATM subnetwork.

IP address

IP address of the ATM Control Point on the Classical IP over ATM subnetwork (configured with the SET DEVICE IP_ADDRESS ATM command).

Subnet mask

Subnet mask used by the ATM Control Point on the Classical IP over ATM subnetwork (configured with the SET DEVICE IP_ADDRESS ATM command).

Subnet lan emulation ethernet/802.3

Status of the Ethernet emulated LAN subnetwork

Subnet lan emulation token ring

Status of the token ring emulated LAN subnetwork

Config ELAN name

The name of the emulated LAN (configured with the SET DEVICE LAN_EMULATION_CLIENT command).

Actual ELAN name

The actual name of the emulated LAN that the LEC is connected to.

MAC address

MAC address of the ATM Control Point LEC in the LE subnetwork (configured with the SET DEVICE LAN_EMULATION_CLIENT command).

IP address

IP address of the ATM Control Point in the LE subnetwork (configured with the SET DEVICE LAN_EMULATION_CLIENT command).

Subnet mask

Subnet mask used by the ATM Control Point in the LE subnetwork (configured with the SET DEVICE LAN_EMULATION_CLIENT command).

ATM address

ATM address of the ATM Control Point LEC in the LE subnetwork.

Config LES address

LES ATM address defined with the SET DEVICE LAN_EMULATION_CLIENT command.

Actual LES address

Actual LES ATM address to which the ATM Control Point LEC is connected.

BUS ATM address

ATM address of the BUS to which the ATM Control Point LEC is connected (assigned by the LES).

Config LECS address

LECS ATM address defined with the SET DEVICE LAN_EMUL CONFIGURATION_SERVER command.

Actual LECS address

Actual LECS ATM address which will be used to find the LES ATM address.

LEC Identifier

Identifier of the ATM Control Point LEC in its emulated LAN (assigned by the LES).

Maximum Transmission Unit

The MTU size for the emulated LAN.

SHOW DEVICE

Default Gateway

Status of the router that is used when the ATM Control Point cannot find an IP address on a local IP network (configured with the SET DEVICE DEFAULT_GATEWAY command).

Default gateway IP address

IP address of the default gateway router (configured with the SET DEVICE DEFAULT_GATEWAY command).

ARP server ATM address

ATM address of the ARP server, (for Classical IP only, configured with the SET DEVICE ARP_SERVER command).

Device configured...

Indicates whether PNNI functions are supported.

Dynamic RAM size

The amount of Random Access Memory (RAM) currently plugged and identified on the CPSW.

Diagnostics

Indicates whether full memory diagnostics are run when the switch is powered ON or when the CPSW module reboots (configured the with SET DEVICE DIAGNOSTICS command).

All other diagnostics take a limited time and are run independently of this parameter.

Device defined as...

The role of the CPSW in an ATM subsystem with 2 CPSW modules, as set by the SET DEVICE ROLE or SET ROLE command.

Memory profile:

Indicates the current memory configuration (defined with the SET DEVICE CONFIG_FUNCTIONS command).

Duplicate ATM addresses

Indicates whether duplicate ATM addresses are allowed (configured with the SET DEVICE DUPLICATE_ATM_ADDRESSES command).

Accounting

Indicates whether accounting has been enabled or disabled (configured with the SET DEVICE ACCOUNTING command).

ILMI Key Displays the current ILMI key.

SHOW E164

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to display the contents of the E.164 mapping table.

```
▶—SHOW E164—◀
```

Related Commands

SET E164

Example

```
8265ATM> show e164
Index Cat. Len Address
-----
  1 NSAP  72 39.99.82.65.02.02.00.00.00. . . . .
    E164   67294381358257
  2 NSAP  72 39.99.82.65.02.02.00.00.01. . . . .
    E164   67294381355849
8265ATM>
```

SHOW FUTURE_PNNI CRANKBACK

SHOW FUTURE_PNNI CRANKBACK

Mode: User / Administrator

Code Card: PNNI only

This command shows the status of the (future) signalling crankback function.

▶—SHOW FUTURE_PNNI—CRANKBACK—◀

Related Commands

SET PNNI CRANKBACK, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example

```
8265ATM> show future_pnni crankback
Crankback:                ON
Try alternate route:      ON
Try alternate route, max tries: 1
Try alternate link:       ON
Try alternate link, max tries: 2
```

```
8265ATM>
```

SHOW FUTURE_PNNI CONFIGURATION_STATE

Mode: User / Administrator

Code Card: PNNI only

This command shows whether:

- Any uncommitted changes are pending in the future PNNI configuration
- The active PNNI configuration has been saved to Non-Volatile Storage (NVS).

This command is identical to the SHOW PNNI CONFIGURATION_STATE command. See the *8265 User's Guide* for further information on PNNI settings.

▶—SHOW FUTURE_PNNI—CONFIGURATION_STATE—▶

Related Commands

SET PNNI commands, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example

```
8265ATM> show future_pnni configuration_state
There are uncommitted changes pending, commit will cause a reset.
Active configuration is saved.
8265ATM>
```

SHOW FUTURE_PNNI NODE

SHOW FUTURE_PNNI NODE

Mode: User / Administrator

Code Card: IISP / PNNI

This command shows the current settings for Node *n* in the future PNNI configuration.

```
▶—SHOW FUTURE_PNNI—NODE:n—◀
```

n Specifies the number of the node.

Related Commands

SET PNNI NODE commands, SHOW PNNI NODE, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example

```
8265ATM> show future_pnni NODE:n
----- Node 0 -----
ATM addr : 39.99.99.99.99.99.99.00.00.99.99.01.50.50.50.50.51.00
Level Identifier : 96 (24 half-bytes and 0 bits)
PGroup Id: 60.39.99.99.99.99.99.00.00.88.88.11
Node Id : 60.A0.39.99.99.99.99.99.00.00.99.99.01.50.50.50.50.51.00
Unrestricted Transit.
8265ATM>
```

SHOW FUTURE_PNNI PATH_SELECTION

Mode: User / Administrator

Code Card: PNNI only

This command shows the current ABR and UBR path selection settings in the future PNNI configuration.

```
▶—SHOW FUTURE_PNNI—PATH_SELECTION—◀
```

Related Commands

SET PNNI PATH_SELECTION, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example

```
8265ATM> show future_pnni path_selection
Unspecified bit rate : widest path.
Available bit rate : on demand path.
8265ATM>
```

SHOW FUTURE_PNNI SUMMARY_ADDRESS

SHOW FUTURE_PNNI SUMMARY_ADDRESS

Mode: User / Administrator

Code Card: PNNI only

This command shows the current list of summary addresses in the future PNNI configuration.

```
▶—SHOW FUTURE_PNNI—SUMMARY_ADDRESS—◀
```

Related Commands

SET PNNI NODE:n SUMMARY_ADDR, CLEAR PNNI SUMMARY_ADDRESS, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example

```
8265ATM> show future_pnni summary_address
----- Internal Summary Addresses of Node 0-----
  Entry 1-Prefix Length=104, non default, used :
    39.99.99.99.99.99.00.00.99.99.01.50. . . . .
49 summary addresses still available for configuration
8265ATM>
```

SHOW HOST

Mode: User / Administrator

Code Card: IISP / PNNI

This command shows the current list of host names assigned to IP and ATM addresses, as defined with the SET HOST command.

▶—SHOW HOST—◀

Related Commands

SET HOST, CLEAR HOST, SAVE HOST, REVERT HOST

Example

```
8265ATM> show host
Index Host_Name                Address
-----
 1 ATMG13      47.41.82.65.13.13.00.00.00.00.00.13.13.65.00.00.00.94.13.00
 2 ATMG16      47.41.82.65.16.16.00.00.00.00.00.16.16.65.00.00.00.94.16.00
 3 ATMG15      47.41.82.65.15.15.00.00.00.00.00.15.15.65.00.00.00.94.15.00
 4 GG04        45.40.82.65.04.04.00.00.00.00.00.04.04.50.04.04.04.04.04.00
 5 ipgg04      9.100.94.107
15 entries empty.
8265ATM>
```

SHOW HUB

SHOW HUB

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to display information about the switch.

▶—SHOW HUB—◀

Example

```
8265ATM> show hub
```

```
Hub Information:
  Hub Type: 8265-S17
```

```
Backplane Information:
```

Backplane Type	Revision
Load-Sharing Power Distribution Board	0
SwitchChannel Backplane	0

```
Power Supply Information:
```

Power Supply	Status	Model Number
1	OKAY	8265PS-H0
2	OKAY	8265PS-H0
3	OKAY	8265PS-H0
4	OKAY	8265PS-H0

```
Temperature Information:
```

```
A/D Converter Status      : OKAY
Overall Temperature Status: OKAY
```

Probe	Location	Temperature
1	FAN_1	28 Degrees Celsius
2	FAN_2	30 Degrees Celsius
3	FAN_3	31 Degrees Celsius

```
Fan Information:
```

Fan	Status
1	OKAY
2	OKAY
3	OKAY


```
8265ATM>
```

SHOW ILMI

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to display ILMI statistics or instances.



STATS Displays ILMI statistics.

ILMI_INSTANCES

Displays ILMI instances.

slot.port Specifies the port to show.

vpi Specifies the VPC to show

Related Commands

SET PORT, SET VPC_LINK

Examples

```

8265ATM> show ilmi stats port 6.2
ilmi state           : UP
ilmi in progress     : No
remote interface type : NNI
remote routing protocol : pNNI
remote sysup time    : 78100
remote system id     : 99.99.99.99.99
remote ifindex       : 602
config uni_type      : Private
remote uni_type      : Private
remote device type    : Node
remote signaling version: pNNI_1.0
remote nni signaling ver: pNNI
remote ilmi version   : ilmi 4.0
remote addr registration: Unsupported
config vpi/vci range  : 4:10
remote vpi/vci range  : 4:10
remote system name    : 8265ATM
remote system location :
remote ip_addr        : 9.100.109.214
remote if_name        : at602

8265ATM> show ilmi instances
-----
ILMI VPC table      : created  primary_port  enabled  ( up / down)  ready
-----
                   :   21    19                40    ( 99/ -59)    32
8265ATM>
  
```


SHOW INVENTORY

SHOW INVENTORY

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to list inventory information about the switch. This list includes the switch, all modules and submodules, the controller module, and includes software versions.

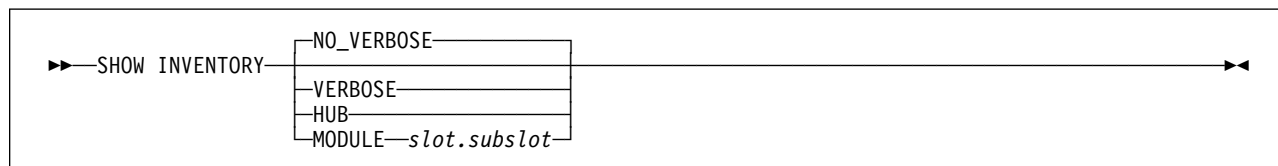

VERBOSE

Displays detailed inventory information for the hub and all modules.

NO_VERBOSE

Displays summarized inventory information (default) for the hub and all modules.

HUB

Displays inventory information for the hub only.

MODULE slot.subslot

Displays inventory information for the selected module subslot.

Example – No Verbose

```
8265ATM> show inventory
```

HUB/ Slot	Module	Hardware Version	Serial #	Vendor	Date
HUB	8265-S17	A	L9915	IBM	980708
01.01	53-58G9611FC5004	C38844	VIM R034	IBM	970531
03.01	53-51H4297FC5003	E28143		IBM	970425
03.02	53-58G9578FC8800	D55936		IBM	970628
03.03	53-58G9578FC8800	D55936	3528	IBM	970105
03.04	53-58G9578FC8800	D55936	3427	IBM	970105
09.01	93076H8108FC6501	E95775	16	IBM	970620
09.02	93002L2428FC6501	E95775	24	IBM	970620

```
8265ATM>
```

Example – Verbose

```
8265ATM> show inventory verbose
```

HUB/ Slot	Module	Hardware Version	Serial #	Vendor	Date
HUB	8265-S17	A	0	IBM	19971017

```
Type:      8265-S17      Number of slots:  17
Note Pad:
```

```
ATM Backplane EC Level:F12594
Burned In MAC Addresses (BIA):
. Ethernet Port      : 0056291F83D6
. LAN Emulation Ethernet : 0056291F03D6
. LAN Emulation Token-Ring: 0056297703D6
```

02.01	93002L40776561	f12446	19119	IBM	19980407
-------	----------------	--------	-------	-----	----------

```
Note Pad: 02L3561 CARRIER 25 WAN
Hardware features: 0x00000001
Operational Version: n/a      Boot Version: n/a
```

02.02	53-10J2219FC8501	E28263	1607	IBM	19971009
-------	------------------	--------	------	-----	----------

```
Note Pad: WAN E3 G832 34Mbps Daughter Coax
Hardware features: 0x20202020
Operational Version: v0.05.2      Boot Version: v0.05.2
```

02.03	53-10J2161FC8507	E95633	1207	IBM	19970310
-------	------------------	--------	------	-----	----------

```
Note Pad: WAN T1E1 1_5Mbps 2Mbps Daughter Copper and Coax
Hardware features: 0x20202020
Operational Version: v0.02.6      Boot Version: v0.02.6
```

03.01	93076H8330	E46642	1116	IBM	19971002
-------	------------	--------	------	-----	----------

```
Note Pad: _ CARRIER 2
Hardware features: 0x00000001
Operational Version: n/a      Boot Version: n/a
```

03.02	9300213436fc6512	f12516		ibm	19971017
-------	------------------	--------	--	-----	----------

```
Note Pad: 0212413 622 smf pic
Hardware features: 0x00000000
Operational Version: n/a      Boot Version: n/a
```

04.01	93002L3242FC6543	F12447	10873	IBM	19971223
-------	------------------	--------	-------	-----	----------

```
Note Pad: 13J8738 155 FLEX
Hardware features: 0x00000001
Operational Version: n/a      Boot Version: n/a
```

04.02	53-76H8241FC6580	E46632	251	IBM	19970808
-------	------------------	--------	-----	-----	----------

```
Note Pad: High Speed 155 Mbps Daughter Multimode
Hardware features: 0x20202020
Operational Version: n/a      Boot Version: n/a
```

SHOW INVENTORY

Example – Hub

```
8265ATM> show inventory hub

inventory for hub:

  Version number: (0)
  Number of slots: (17)
  Power Supply capacity: (4)
  Fan capacity: (3)
  2V power requirements (in units of 0.10 watt): (40)
  5V power requirements (in units of 1.00 watt): (1)
  -5V power requirements (in units of 0.25 watt): (0)
  12V power requirements (in units of 0.50 watt): (36)
  -12V power requirements (in units of 0.25 watt): (0)
  Temp. probe capacity: (3)
  Hub type: (8265-S17      )
  Port count: (0)
  Management Interfaces: (0)
  Serial Number: (0      )
  Date of manufacture: (971017)
  OEM Id: (IBM          )
  Hardware revision: (A      )
  Scratch area: (          )
  Checksum: (171)
  Diag test: (0)
```

```
8265ATM>
```

Example – Module

```
8265ATM> show inventory module 2.1

inventory for slot 2.1:

  Version number: (0)
  Daughter card capacity: (2)
  Module type id: (167)
  2V power requirements (in units of 0.10 watt): (0)
  5V power requirements (in units of 1.00 watt): (30)
  -5V power requirements (in units of 0.25 watt): (0)
  12V power requirements (in units of 0.50 watt): (2)
  -12V power requirements (in units of 0.25 watt): (0)
  Power-up priority: (6)
  Module type: (93002L40776561 )
  Port count: (12)
  Management Interfaces: (64)
  Serial Number: (19119      )
  Date of manufacture: (980407)
  OEM Id: (IBM          )
  Hardware revision: (f12446)
  Scratch area: (02L3561 CARRIER 25 WAN      )
  Hardware features: 0x00000001
  Checksum: (159)
  Diag test: (0)
```

```
8265ATM>
```

SHOW LAN_EMUL CONFIGURATION_SERVER

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to display the entries in the LAN emulation configuration servers (LECS) address table. The entry containing the ATM address that will be substituted for the LECS well known address is identified as being WKA active.

▶—SHOW LAN_EMUL—CONFIGURATION_SERVER—◀

Related Commands

SET LAN_EMUL CONFIGURATION_SERVER, CLEAR LAN_EMUL CONFIGURATION_SERVER, SAVE LAN_EMUL, REVERT LAN_EMUL

Example

```
8265ATM> show lan_emul configuration_server
Index          ATM address
-----
 1             39.99.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.65.00.00
 2             39.99.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.62.02.02
 3             39.99.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.63.03.02
 4             39.99.99.99.99.99.99.00.00.00.00.01.94.00.82.65.82.63.02.02
8265ATM>
```

SHOW LAN_EMUL SERVERS

SHOW LAN_EMUL SERVERS

Mode: Administrator

(8285 only) Use this command to display the configuration parameters entered with the SET LAN_EMUL SERVER command, the LES ATM address to help LEC configuration), and LES/BUS status.

```
▶ SHOW LAN_EMUL SERVERS [ ALL | 1 | 2 ] ▶▶
```

ALL Displays parameters for both LESs.

1 | 2 Displays parameters for the selected LES.

Related Commands

SET LAN_EMUL SERVER, SAVE LAN_EMUL, REVERT LAN_EMUL

Example

```
8265ATM> show lan_emul servers
-----
----- LAN Emulation Server 1 -----
Status           : Running.
LAN type         : Ethernet.
Actual ELAN name : "IBM_ETHERNET_LAN1".
Desired ELAN name : ".
Actual max frame size : 1516.
Desired max frame size: 1516.
ATM address      : 39.99.99.99.99.99.00.00.99.99.01.50.50.50.50.50.02
LEC Id Range     : 1 to 3.
Current number of operational clients : 10.
-----
----- LAN Emulation Server 2 -----
Status           : Running.
LAN type         : Token Ring.
Actual ELAN name : "IBM_TOKEN_RING_LAN2".
Desired ELAN name : ".
Actual max frame size : 4544.
Desired max frame size: 4544.
ATM address      : 39.99.99.99.99.99.00.00.99.99.01.50.50.50.50.50.03
LEC Id Range     : 4 to 6.
Current number of operational clients : 4.
8265ATM>
```

SHOW MODULE

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to display configuration information on the hardware and software settings of CPSW and ATM media modules.



slot Slot number where the module is installed. Valid slot numbers are in the range 1 to 19 (slots 18 and 19 may contain power controller modules).

ALL All ATM modules and controller modules in the switch.

VERBOSE

Displays detailed module configuration information.

NO_VERBOSE

Does summarized module configuration information (default).

Port-Specific Settings

Some ATM **port types** have further requirements and options that may be displayed using the SHOW MODULE command. These port-specific parameters are described in the following appendix section:

IMA "SHOW MODULE slot IMA_GROUP" on page 217.

Usage Notes

- Configuration information is displayed only for ATM media modules that are **connected**. Information about **isolated** modules is not available.

SHOW MODULE

Examples

NO_VERBOSE:

```
8265ATM> show module all
```

```
Slot Install Connect Operation General Information
```

```
-----  
 1      Y      Y      Y      8265 ATM 3 Ports LAN 155 Mbps Module  
 2      n      n      n      -  
 3      Y      Y      Y      8265 ATM 4 ports 100 Mbps Module  
 4      n      n      n      -  
 5      Y      Y      Y      8265 ATM 12 ports 25 + 1 port 155Mbps Module  
 6      n      n      n      -  
 7      n      p      n      -  
 8      n      n      n      -  
 9      Y      Y      Y      8265 ATM Control Point and Switch Module:Active  
10      Y      n      n      IBM's Extension >  
11      n      p      n      -  
12      n      n      n      -  
13      n      n      n      -  
14      n      n      n      -  
15      n      n      n      -  
16      n      n      n      -  
17      Y      Y      Y      8265 ATM 622 Mbps Module  
8265ATM>
```

In the preceding example, the following information is displayed about each module:

Slot Slot number

Install Indicates whether a module is plugged into the slot.

Y Module is plugged in.

n No module is plugged in.

Connect Indicates whether the module is connected to the network.

Y Module is connected to the network (SET MODULE x CONNECTED).

n Module is isolated from the network (SET MODULE x ISOLATED).

p Connection pending. Any module that is inserted in the slot will be automatically connected.

Operation

Indicates whether the module is operational.

Y Module is installed, connected, and functioning properly.

n Module is not functioning properly. An error condition is detected.

VERBOSE:

```

8265ATM> show module 17 verbose

Slot Install Connect Operation General Information
-----
 17      Y      Y      Y      8265 ATM 622 Mbps Module

status: connected / hardware okay
       disable / Normal

ATM Carrier Module Information:
-----
P/N:76H8330  EC level:E46642  Manufacture: 930
Operational FPGA version : 1D23
Backup FPGA version : DD03

      Type  Mode      Status                               Daughter Card Description
-----
17.01:UNI  disabled

8265ATM>

```

In addition to the basic "NO_VERBOSE" display for the selected module, the following information is displayed:

status Four aspects of the module status are displayed, as shown below:

```

status: connection_status / hardware_status
       port_status / operation_status

```

Possible *connection_status* values are:

connected

Module is connected to the network.

not connected

Module is not connected to the network.

Possible *hardware_status* values are:

hardware OK

Functioning properly.

hardware KO

A hardware problem has been detected.

In case of a hardware problem with an ATM media module, refer to the "Problem Determination" section in the *8265 Media Module Reference Guide*.

In case of a hardware problem with the CPSW module, refer to the "Problem Determination" section in the *8265 User's Guide*.

Possible *port_status* values are:

enable At least one port is enabled.

disable All ports are disabled.

Possible *operation_status* values are:

normal No problem detected.

under recovery

A problem has been detected, and recovery is being attempted.

SHOW MODULE

permanent failure

A problem has been detected, but no recovery is possible. The module is not operational.

In case of a hardware problem with an ATM media module, refer to the "Problem Determination" section in the *8265 Media Module Reference Guide*.

In case of a hardware problem with the CPSW module, refer to the "Problem Determination" section in the *8265 User's Guide*.

power failure

Indicates that insufficient power is available for operation of this module.

Operational FPGA version

Indicates the code level of the Operational FPGA code.

Backup FPGA version

Indicates the code level of the Backup FPGA code.

Port Status

For a description of the port status messages displayed with SHOW MODULE VERBOSE, see "SHOW PORT" on page 173.

Controller Module: This example shows how to display configuration information about a controller module in slot 19 of an 8265 switch:

```
8265ATM> show module 19 verbose

Slot Install Connect Operation General Information
-----
 19   Y       n       Y       Active Controller Module

8000-RCTL: Redundant Controller Module

Operational Version:           b1.14.0
Boot Version:                   v1.01
On-Board Clock Status:         OKAY
A/D Converter Status:          OKAY

8265ATM>
```

A12-TP25 Module Swap Limit: When the swap limit has been reached on an A12-TP25 module, the Backup FPGA version is displayed as "none".

```
8265ATM> show module 3 verbose

Slot Install Connect Operation General Information
-----
  3   Y       Y       Y       8260 ATM 12-Port 25 Mbps Module

status: connected / hardware OK
       enable / normal

P/N: 58G9878  EC level: D55931 Manufacture: VIME
Operational FPGA version : B50
Backup FPGA version : none
:
```

SHOW PNNI CONFIGURATION_STATE

Mode: User / Administrator

Code Card: PNNI only

This command shows:

- Whether any uncommitted changes are pending in the future PNNI configuration
- Whether the active PNNI configuration has been saved to Non-Volatile Storage (NVS).
- Explanatory comments about the current configuration state.

▶▶—SHOW PNNI—CONFIGURATION_STATE————▶▶

Usage Notes

- This command is identical to the SHOW FUTURE_PNNI CONFIGURATION_STATE command.

Related Commands

SET PNNI commands, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example

```
8265ATM> show pnni configuration_state
There are uncommitted changes pending, commit will cause a reset.
Active configuration is saved.
8265ATM>
```

SHOW PNNI CRANKBACK

SHOW PNNI CRANKBACK

Mode: User / Administrator

Code Card: PNNI only

This command shows the status of the signalling crankback function.

▶—SHOW PNNI—CRANKBACK—▶▶

Related Commands

SET PNNI CRANKBACK, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example


```
8265ATM> show pnni crankback
Crankback:                ON
Try alternate route:      ON
Try alternate route, max tries: 1
Try alternate link:       ON
Try alternate link, max tries: 2
8265ATM>
```


SHOW PNNI DATA_BASE

Mode: User / Administrator

Code Card: PNNI only

This command displays all or selected parts of the PNNI database.

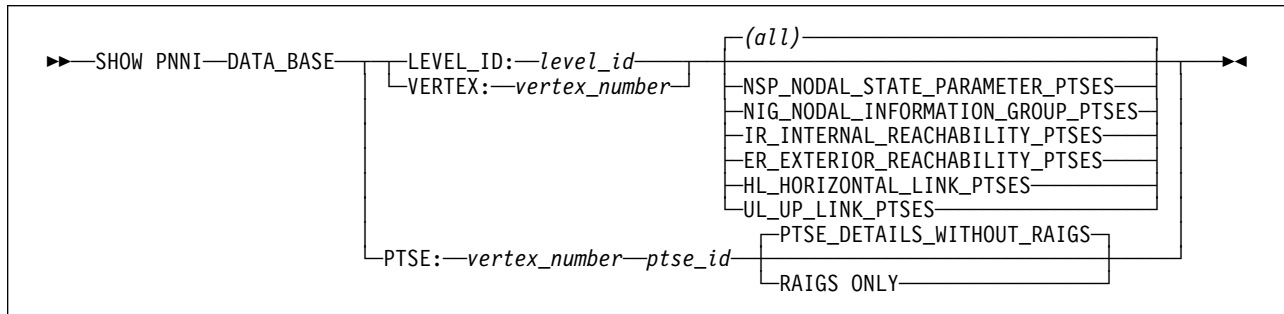

VERTEX: vertex

Limits the display to database information for the selected vertex.

LEVEL_ID: level_id

Limits the display to database information for the selected PNNI level ID.

NSP | NIG | IR | ER | HL | UL

Limits the display to database information for the selected PTSE type only (Default = all PTSEs).

PTSE: ptse_id

Limits the display to database information for the selected PTSE only.

PTSE_DETAILS_WITHOUT_RAIGS

Displays PTSE details without the RAIGS for the selected database entries (Default).

RAIGS_ONLY

Displays only the RAIGS for the selected database entries.

Related Commands

SET PNNI commands, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example

```

8265ATM> show pnni data_base
PTSEid  PTSE REMN INF ORIGN  ORIGIN NODEId
 (HEX)  TYPE LIFE GRP VERTX  (1ST BYTE -> LEVEL ID OF NODE'S PEER GROUP)
167    ir   2556 1  17   28.30.39bb826002020000000000000000.826511111111.00
2b0    ir   2556 1  17   28.30.39bb826002020000000000000000.826511111111.00
33     ir   2864 1  17   28.30.39bb826002020000000000000000.826511111111.00
37     ir   1582 1  17   28.30.39bb826002020000000000000000.826511111111.00
39     ir   2812 1  17   28.30.39bb826002020000000000000000.826511111111.00
3a     ir   1838 1  17   28.30.39bb826002020000000000000000.826511111111.00
40     ir   2197 1  17   28.30.39bb826002020000000000000000.826511111111.00
:
  
```

SHOW PNNI HIERARCHY

SHOW PNNI HIERARCHY

Mode: User / Administrator

Code Card: PNNI only

This command displays the PNNI hierarchy on the local 8265 switch.

```
▶—SHOW PNNI—HIERARCHY—◀◀
```

Related Commands

SET PNNI NODE:n LEVEL_IDENTIFIER, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example


```
8265ATM> show pnni hierarchy  
8265ATM>
```

SHOW PNNI NEIGHBOR

Mode: User / Administrator

Code Card: PNNI only

This command shows a list of all neighbor node IDs or only those belonging to a selected Level Identifier. Neighbor nodes are nodes directly connected via one or more links to the node being referenced.



level_id | ALL

Specifies the Level Identifier whose neighbor nodes are to be displayed.

VERBOSE

Displays full details of each neighbor.

Example

```

8265ATM> show pnni neighbor all
----- Neighbors of Node 0-----
60.A0.39.99.99.99.99.99.00.00.99.99.01.52.52.52.52.52.00:Full
  Port 4.04 vpi=0
8265ATM>
  
```

SHOW PNNI NODE:n

SHOW PNNI NODE:n

Mode: User / Administrator

Code Card: IISP / PNNI

This command shows the currently active PNNI settings for Node *n*.

```
▶—SHOW PNNI—NODE:n—◀
```

n Specifies the number of the node.

Related Commands

SET PNNI NODE commands, SHOW FUTURE_PNNI NODE, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example

```
8265ATM> show pnni NODE:n
----- Node 0 -----
ATM addr : 39.99.99.99.99.99.99.00.00.99.99.01.50.50.50.50.50.00
Level Identifier : 96 (24 half-bytes and 0 bits)
PGroup Id: 60.39.99.99.99.99.99.00.00.88.88.11
Node Id : 60.A0.39.99.99.99.99.99.00.00.99.99.01.50.50.50.50.50.00
Unrestricted Transit.
8265ATM>
```

SHOW PNNI_PATH_SELECTION

Mode: User / Administrator

Code Card: PNNI only

This command shows the currently active path selection settings for ABR and UBR calls:

ABR Can be either:

- On demand path
- Precomputed path

UBR Can be either:

- Widest path
- Shortest path

▶—SHOW PNNI—PATH_SELECTION—◀

Related Commands

SET PNNI_PATH_SELECTION, SHOW FUTURE_PNNI_PATH_SELECTION, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example

```
8265ATM> show pnni path_selection
Unspecified bit rate : widest path.
Available bit rate : precomputed path.
8265ATM>
```

SHOW PNNI PEER_GROUP_LEADER_ELECTION

SHOW PNNI PEER_GROUP_LEADER_ELECTION

Mode: User / Administrator

Code Card: PNNI only

This command displays the peer group leader election elements for the selected peer groups.

```
▶—SHOW PNNI—PEER_GROUP_LEADER_ELECTION—level_id—▶
```

level_id Displays Peer Group Members for the selected PNNI node. If no level ID is entered, all peer groups are displayed.

Related Commands

SET PNNI NODE:n LEADER_PRIORITY, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example

```
8265ATM> show pnni peer_group_leader election all  
8265ATM>
```

SHOW PNNI PEER_GROUP_MEMBERS

Mode: User / Administrator

Code Card: PNNI only

This command lists all Node IDs included in the selected peer group.

```
▶—SHOW PNNI—PEER_GROUP_MEMBERS—level_id—▶
```

level_id Displays Peer Group Members for the selected PNNI node. If no level ID is entered, all peer groups are displayed.

Related Commands

SET PNNI NODE:n PEER_GROUP_ID, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example

```
8265ATM> show pnni peer_group_members
----- Peer Group of Node 0-----
60.A0.39.99.99.99.99.99.00.00.99.99.01.50.50.50.50.50.50.00 connected
60.A0.39.99.99.99.99.99.00.00.99.99.01.51.51.51.51.51.51.00 not cnct.
60.A0.39.99.99.99.99.99.00.00.88.88.11.31.50.00.00.00.94.31.00 connected
60.A0.39.99.99.99.99.99.00.00.88.88.BB.BB.50.00.00.94.01.06.00 connected
60.A0.39.99.99.99.99.99.00.00.88.88.11.00.50.00.00.94.01.15.00 connected
60.A0.39.99.99.99.99.99.00.00.88.88.11.33.60.00.00.00.94.61.00 connected
60.A0.39.99.99.99.99.99.00.00.88.88.11.11.50.00.00.00.94.50.00 connected
60.A0.39.99.99.99.99.99.00.00.99.99.01.52.52.52.52.52.52.00 connected
60.A0.39.99.99.99.99.99.00.00.99.99.01.61.61.61.61.61.61.00 not cnct.
60.A0.39.99.99.99.99.99.00.00.99.99.01.83.83.83.83.83.83.00 connected
60.A0.39.99.99.99.99.99.00.00.99.99.01.59.59.59.59.59.59.00 not cnct.
11 Members.
8265ATM>
```

SHOW PNNI SUMMARY_ADDRESS

SHOW PNNI SUMMARY_ADDRESS

Mode: User / Administrator

Code Card: PNNI only

This command lists the entry number, description and value for each summary address defined on the local switch

▶—SHOW PNNI—SUMMARY_ADDRESS—◀

Related Commands

SET PNNI NODE:n SUMMARY_ADDR, SHOW FUTURE_PNNI SUMMARY_ADDRESS, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example


```
8265ATM> show pnni summary_address
----- Internal Summary Addresses of Node 0-----
  Entry 1-Prefix Length=104, non default, used :
    39.99.99.99.99.99.00.00.99.99.01.50. . . . .
49 summary addresses still available for configuration
8265ATM>
```


SHOW PORT

Mode: User / Administrator

Code Card: IISP / PNNI

The SHOW PORT command enables you to display configuration information for an ATM media module port or for all ATM ports in an 8265 switch.

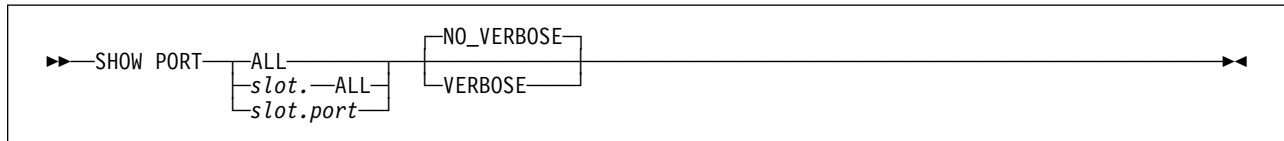

ALL Displays settings for all ports on all modules.

slot.ALL Displays settings for all ports on the selected module.

slot.port Displays settings for the selected port.

NO_VERBOSE

Displays summarized port configuration information (default).

VERBOSE

Displays detailed port configuration information.

Port-Specific Settings

Some ATM **port types** have further requirements and options that may be displayed using the SHOW PORT command. These port-specific parameters are described in the following appendix section:

E1/T1, E3/DS3, OC3/STM1 "SHOW PORT Parameters" on page 215.

Usage Notes

- Port information is displayed only for **connected** modules. Information about ports on **isolated** modules is not available.

Related Commands

SET PORT, SAVE MODULE_PORT, REVERT MODULE_PORT

SHOW PORT

Examples

NO_VERBOSE

```
8265ATM> show port all
```

Type	Mode	Status

1.01:	UNI enabled	no activity
1.02:	PNNI enabled	no activity
1.03:	UNI enabled	UP
1.04:	UNI enabled	UP
Type	Mode	Status

3.01:	UNI disabled	
3.02:	UNI disabled	
3.03:	PNNI enabled	no activity

```
8265ATM>
```

The following information is displayed about each port:

- Port** Number of the port on the ATM media module.
- Type** Type of ATM interface used (UNI, IISP, PNNI).
- Mode** Whether the port has been enabled or disabled using the SET PORT command.
- Status** Operational status of the port.

The following statuses are displayed during normal port operation:

- DOWN: Establishing *
- DOWN: Configuring *
- DOWN: Retrieving *
- UP: Registering *
- UP

If any other port status is displayed, or if any of the transient statuses (marked with * in the list) are displayed continuously, see the “Problem Determination” section in the *8265 Media Module Reference Guide*.

VERBOSE

```

8265ATM> show port 8.1 verbose
      Type Mode      Status
-----
8.01: UNI disabled

UNI Type           : Private
Signalling Version : Auto
ILMI status        : DOWN:Not in service
ILMI vci           : 0.16
RB Bandwidth       : unlimited
Police admin.     : on
Signalling vci     : 0.5
RB Admin weight    : 5040
NRB Admin weight   : 5040
VPI range admin.   : 0-15 (4 bits)
VCI range admin.   : 0-1023 (10 bits)
VPI range oper.    : 0-15 (4 bits)
VCI range oper.    : 0-1023 (10 bits)
Connector          : SC DUPLEX
Media              : multimode fiber
Port speed         : 155000 kbps
Connection shaping : Off.
Remote device is active

Frame format       : SONET STS-3c
Scrambling mode    : frame and cell
Clock mode         : internal

Signal Detect      : active
RD00L Status      : inactive
Loss Of Signal    : inactive
Loss Of Frame     : inactive
Line FERF         : inactive
Line AIS          : inactive
Path FERF         : inactive
Path AIS          : inactive
Loss Of Pointer   : inactive
Loss Cell Delineation : inactive
Out Of Frame      : inactive

B1 Errors Counter : 0
HCS Errors Counter : 0

8265ATM>

```

The Information displayed depends on the settings available for the port type.


SHOW POWER

SHOW POWER

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to display power budgets, power modes, and power information on a per-slot basis. It also enables you to display the power settings for the switch, including the amount of power available, the amount of power consumed, and whether power is controlled by the Integrated Power Controller or a power controller module.

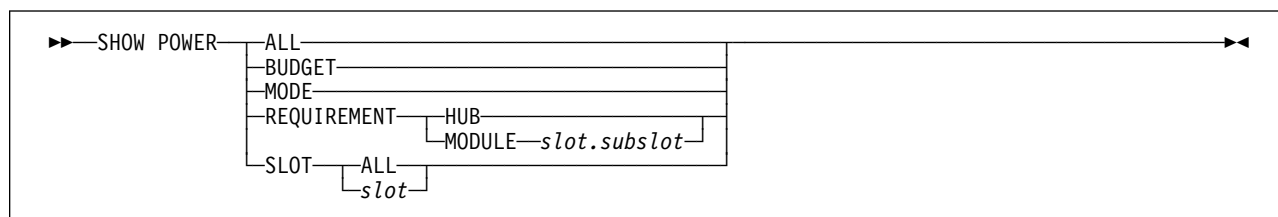

ALL Displays the combined results of BUDGET, MODE and SLOT ALL.

BUDGET Displays the power budget for each voltage type.

MODE Displays power modes for the switch.

REQUIREMENT

Displays power requirements for each voltage type.

HUB Displays requirements for the entire switch.

MODULE *slot.subslot*

Displays requirements for the specified slot and I/O card subslot.

SLOT Displays power settings for each slot.

ALL Displays settings for all slots.

slot Displays settings for the selected slot.

Examples

ALL

```
8265ATM> show power all
```

```
Power Management Information
(Power Control by CPSW 11, power switch = CPSW)
-----
```

```
Hub Power Modes:
```

```
Fault_Tolerant Mode:    FAULT_TOLERANT
Fault_Tolerant Status:  FAULT_TOLERANT
Overheat Power Down Mode:  ENABLE
```

```
Slot Power Information:
```

Slot	Class	Admin Status	Operating State
2	6	ENABLE	ENABLED
3	6	ENABLE	ENABLED
4	6	ENABLE	ENABLED
6	3	ENABLE	ENABLED
7	6	ENABLE	ENABLED
8	6	ENABLE	ENABLED
9	8	ENABLE	ALWAYS_ENABLED
11	8	ENABLE	ALWAYS_ENABLED
13	6	ENABLE	ENABLED
14	6	ENABLE	ENABLED
15	6	ENABLE	ENABLED
17	3	ENABLE	ENABLED

```
Hub Power Budget (A/D Converter is OKAY):
```

Voltage Type	Voltage Level	Watts Capacity	Watts Available	Watts Required
+5V	5.20	1084.00	343.00	741.00
-5V	OKAY	51.00	38.25	12.75
+12V	OKAY	244.00	145.00	99.00
-12V	OKAY	61.00	45.75	15.25
+2V	OKAY	28.40	17.30	11.10

```
8265ATM>
```

REQUIREMENT MODULE

```
8265ATM> show power requirement module 17.1
```

```
power requirements for card 17.1:
```

```
+2V power requirements (in units of 0.10 watt):  0
+5V power requirements (in units of 1.00 watt):  30
-5V power requirements (in units of 0.25 watt):  0
+12V power requirements (in units of 0.50 watt):  2
-12V power requirements (in units of 0.25 watt):  0
```

```
8265ATM>
```

SHOW PROFILE

SHOW PROFILE

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to display current port threshold profiles.

```
▶—SHOW PROFILE THRESHOLD—index—▶▶  
                          ALL—
```

ALL Displays all entries in the table of profiles.

index Specifies the index number of the entry to be displayed.

Related Commands


SET PROFILE, CLEAR PROFILE, SAVE MODULE_PORT, REVERT MODULE_PORT

SHOW PVC

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command you to display the definitions of selected or all PVCs.

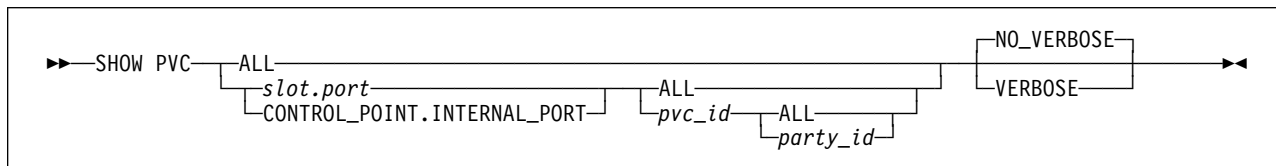

ALL Displays PVC information for all ports on all modules.

slot.port Displays PVC information for the selected port.

ALL Displays PVC information for all PVCs on *slot.port*.

pvc_id Displays PVC information for a selected PVC on *slot.port*.

ALL Displays PVC information for all parties on the selected PVC.

party_id Displays PVC information for the selected party on the selected PVC.

CONTROL_POINT.INTERNAL_PORT

Displays PVC information for the local Control Point.

NO_VERBOSE

Display summary PVC information. This is the default option.

VERBOSE

Display detailed PVC information.

Related Commands

SET PVC, SET PARTY_PVC, CLEAR PVC, CLEAR PARTY

Example

```
8265ATM> show pvc all
```

```
-----
PVC:Port 8.01 (id=1,Primary,BE) PTP-PVC VP/VC=0/33
-> Party:(id=0) VP/VC=0/33 STATUS:Active
   45.AA.BB.CC.DD.EE.FF.00.00.88.88.DC.02.42.00.00.00.08.02.DC(port 8.02)
-----
PVC:Port 8.01 (id=3000,Primary,BE) PTP-PVC VP/VC=0/35
-> Party:(id=0) VP/VC=0/35 STATUS:Active
   45.AA.BB.CC.DD.EE.FF.00.00.88.88.DC.02.42.00.00.00.08.02.DC(port 8.02)
   :
8265ATM>
```


SHOW REACHABLE_ADDRESS

SHOW REACHABLE_ADDRESS

Mode: User / Administrator

Code Card: IISP / PNNI

This command displays all reachable addresses defined for the local switch, both those explicitly defined by the administrator in the reachable address table and those dynamically created by ILMI.



ALL Displays reachable addresses for all ATM media modules.

slot.ALL Displays reachable addresses for all PVCs on the selected *slot*.

slot.port ALL

Displays reachable addresses for the selected *slot.port*.

DYNAMIC | STATIC

Limits the display to:

DYNAMIC

Reachable addresses created dynamically by ILMI.

STATIC

Reachable addresses explicitly defined in the reachable address table.

Usage Notes

- Those reachable addresses in the table that are known to the system and able to be routed (SSCOP is up) are marked as Active ("Y" in the Active column).
- Addresses in the table whose routing is not known are marked as Inactive ("N" in the Active column).
- Addresses listed as "Dyn" have been created automatically and cannot be deleted.

Related Commands

SET REACHABLE_ADDRESS, CLEAR REACHABLE_ADDRESS

Example


```
8265ATM> show reachable_address all
Port Len Address Active Idx VPI Scope
-----
4.02 24 3999.78 . . . . . N 1 - Org:1
4.02 24 3999.79 . . . . . N 2 - Org:1
4.02 24 3999.88 . . . . . N 3 - Org:1
8265ATM>
```


SHOW SECURITY

Mode: User / Administrator

Code Card: IISP / PNNI

This command displays access control settings and violations for selected ports and security settings for the local switch.

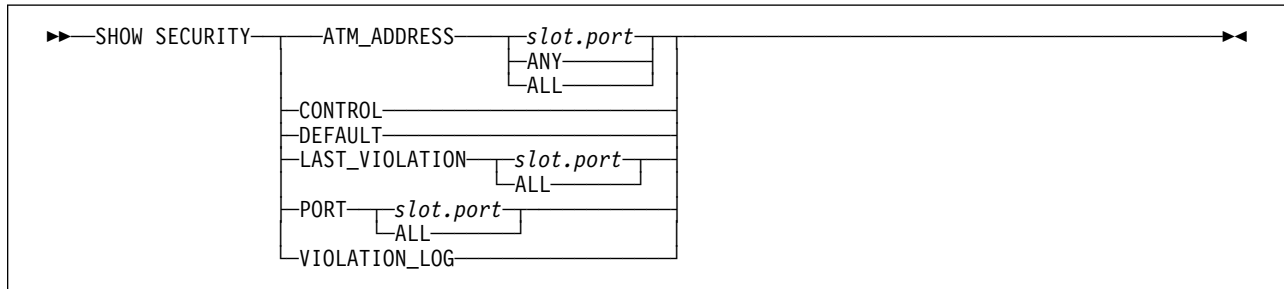

ATM_ADDRESS

Displays the access control address table entries for all ports or for a selected port.

slot.port Displays entries with per-port access on the specified port.

ANY Displays entries with global access on all ports.

ALL Displays all entries (global and per-port access).

CONTROL

Displays the current Mode, Autolearn, Log and Trap settings.

DEFAULT

Displays the default Mode, Autolearn, Log and Trap settings.

LAST_VIOLATION

Displays information regarding the last security violation:

- The slot and port where the violation occurred
- The ATM address that was rejected
- The date and time of the violation.

slot.port Displays settings for the specified port.

ALL Displays settings for all ports.

PORT

Displays, for all ports or for a selected port, the current settings for Mode, Autolearn, Trap, and Log.

slot.port Displays settings for the specified port.

ALL Displays settings for all ports.

VIOLATION_LOG

Displays the contents of the violation log.

Related Commands

SET SECURITY commands, CLEAR SECURITY commands, SAVE SECURITY, REVERT SECURITY

SHOW SECURITY

Examples

ATM_ADDRESS

```
8265ATM> show security atm_address all
index port   ATM_ADDRESS
-----
1  05.02  00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.08.00.5A.EE.EE.EE
2  00.00  00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.08.00.5A.EE.EE.EF
3  05.01  39.99.99.99.99.99.99.99.00.00.01.57.08.00.5A.AA.AA.AA.AA.AA
4  00.00  39.99.99.99.99.99.99.99.00.00.01.57.08.00.5A.AA.AA.AA.AA.AB
5  05.03  39.99.99.99.99.99.99.99.00.00.99.99.58.58.00.80.05.A9.92.8D
8265ATM>
```

The port number 0.0 (index 2) indicates that the address is granted access on ANY port.

CONTROL

```
8265ATM> show security control
mode          autolearn      trap          log
-----
Control Flags NO_SECURITY    ENABLED       ACCESS_VIOLATION ACCESS_VIOLATION
8265ATM>
```

DEFAULT

```
8265ATM> show security default
mode          autolearn      trap          log
-----
Default Flags NO_SECURITY    00           DISABLED      DISABLED
8265ATM>
```

PORT

```
8265ATM> show security port all
slotport      mode          autolearn      trap          log
-----
01.01         ACCESS_CONTROL 00           DISABLED      ENABLED
01.02         ACCESS_CONTROL 01           DISABLED      ACCESS_VIOLATION
01.03         NO_SECURITY    00           DISABLED      ENABLED
01.04         NO_SECURITY    00           ACCESS_VIOLATION ENABLED8265ATM>
```

LAST_VIOLATION

```
8265ATM> show security last_violation all
slotport      last_atm_violation      datetime
-----
0501  _____
0502  _____
0503  39.99.99.99.99.99.99.99.00.00.99.99.58.58.00.80.05.A9.92.8D 21 Dec 97 17:29:37
0504  _____
8265ATM>
```

VIOLATION_LOG

```

8265ATM> show security violation_log
VIOLATION LOG
  Type      Intf Date Time      Data
-----
01 ACCESS_CTRL 0101 7-31 14:50:25 add:3999999999999900009999230308005A9902BE
02 ACCESS_CTRL 0101 7-31 14:50:31 add:3999999999999900009999230308005A9902BE
03 ACCESS_CTRL 0101 7-31 14:50:31 add:3999999999999900009999230308005A9902BE
04 ACCESS_CTRL 0101 7-31 14:50:38 add:3999999999999900009999230308005A9902BE
05 ACCESS_CTRL 0101 7-31 14:50:38 add:3999999999999900009999230308005A9902BE
06 ACCESS_CTRL 0101 7-31 14:50:38 add:3999999999999900009999230308005A9902BE
07 ACCESS_CTRL 0101 7-31 14:51:05 add:3999999999999900009999230308005A9902BE
08 ACCESS_CTRL 0101 7-31 14:51:05 add:3999999999999900009999230308005A9902BE
09 ACCESS_CTRL 0101 7-31 14:51:17 add:3999999999999900009999230308005A9902BE
10 ACCESS_CTRL 0101 7-31 14:51:17 add:3999999999999900009999230308005A9902BE
:
63 ACCESS_CTRL 0101 7-31 16:47:40 add:3999999999999900009999230308005A9902BE
64 ACCESS_CTRL 0101 7-31 16:47:40 add:3999999999999900009999230308005A9902BE
8265ATM>

```


SHOW SIGNALLING ATM_INTERFACE

SHOW SIGNALLING ATM_INTERFACE

Mode: User / Administrator

Code Card: IISP / PNNI

This command displays, for a selected port or VPC, current signalling interface settings.



slot.port Specifies the port whose interface settings are to be displayed.

vpi Specifies the VPI (on the selected port) whose interface settings are to be displayed.

IPOINT Specifies the internal port on the Control Point.

Related Commands

SET PORT, SET VPC_LINK, SAVE MODULE_PORT, REVERT MODULE_PORT

Example

```
8265ATM> show signalling atm_interface port 6.1
Interface Type: private uni
Sig Version   : uni 31
Sig Side      : network
Xlat address  : none
Sscop State   : active
Signaling vci : 5
Sig lcbasw    : 0x0021/0x0049
Ilmi vci      : 16
Ilmi lcbasw   : 0x0020/0x0047
ESI pvpc/pvcc : 4200000000601
Max Vpi Bits  : 4
Max Vci Bits  : 10
Active Vps    : 0
Active Vcs    : 0
Nb Connections: 0
Saal reset    : 0
Saal re-trx   : 0
LackCreditCount : 0
TBT queue (cur/max) : 0 / 0 (cur msg: 0)
TRX queue (cur/max) : 0 / 0
RCV queue (cur/max) : 0 / 0
Window (cur/max) : 10 / 10
PeerWindow (cur/max) : 10 / 10
8265ATM>
```

SHOW SIGNALLING CALL_PACING

Mode: User / Administrator

Code Card: IISP / PNNI

This command displays current call-pacing settings for the Control Point.

```
▶—SHOW SIGNALLING—CALL_PACING—◀
```

Related Commands

SET SIGNALLING CALL_PACING

Example

```
8265ATM> show signalling call_pacing
Call Pacing:
-----
Call pacing                : on
Call pacing max call       : 14
Call pacing window (*100 msec) : 3
Call pacing filter         : off

8265ATM>
```


SHOW SIGNALLING CONNECTION

SHOW SIGNALLING CONNECTION

Mode: User / Administrator

Code Card: IISP / PNNI

This command displays, for a selected port or VPC, the current connection.

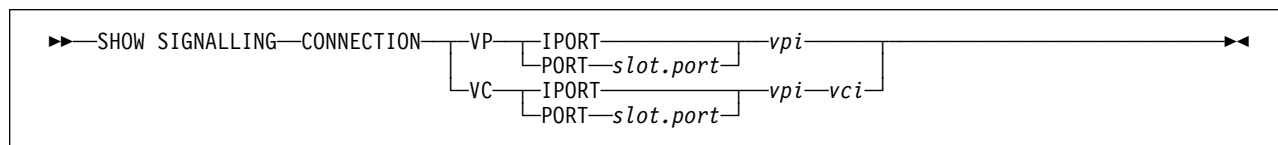

slot.port Specifies the port whose connection is to be displayed.

IPOINT Specifies the internal port on the Control Point.

vpi Specifies the VPI on the selected port.

vci Specifies the VCI on the selected VPI.

Related Commands

SET PORT, SET VPC_LINK, CLEAR VPC_LINK, SAVE MODULE_PORT, REVERT MODULE_PORT

Example

```
8265ATM> show signalling connection vc iport 0 36
Connection          : iPort-0.36 (outgoing)
Call Type           : svc
Connection Type     : p2p
Nb parties          : 0
Nb branches         : 2
Calling party number: 39BB82600202000000000020250000000946501
Called party number: 39998265020200000000002020094A400000000
Call state          : act
Service Category    : ubr
Frame discard       : no
Bandwidth (I/O):    : 0/ 0
Creation Time       : 0:00:08 after system startup
8265ATM>
```

SHOW SIGNALLING CONTROL

Mode: User / Administrator

Code Card: IISP / PNNI

This command displays settings related to the global state of the signalling entity in the local switch.

For Monitoring Values:

- Current values show the current percentage of signalling resources in use by category.
- Maximum values show the maximum percentages reached since system startup.

▶—SHOW SIGNALLING—CONTROL—▶▶

Related Commands

SET PORT, SET VPC_LINK, SAVE MODULE_PORT, REVERT MODULE_PORT

Example

```
8265ATM> show signalling control
Control:
-----
Crankback                : on
Try alternate path       : on
Try alternate route      : on
Try alternate link       : on
Number of allocated cbk data : 0
Max number of route retries : 1
Number of allocated tar data : 0
Max number of link retries : 2
Number of allocated tal data : 0
Maintain connections on layer 2 reset : on
Maintain connections on layer 2 failure: on
Restart procedures       : off
Restart message on interface up : off
Statistics               : off
Capture data before failure : off
Send call proceeding message : on
Modify connection support : on
Number of allocated modify conn data : 0
Security                 : off
Call screening           : off
Call pacing              : off

Monitoring:
-----

Limited resources: no

Multicast tree           Current      Maximum
Cross connection         0.00 %      20.00 %
Branch                   0.15 %      0.15 %
Party                    0.15 %      0.15 %
Party                    0.00 %      2.00 %
8265ATM>
```


SHOW SIGNALLING CROSS_CONNECTIONS

SHOW SIGNALLING CROSS_CONNECTIONS

Mode: User / Administrator

Code Card: IISP / PNNI

This command displays, for a selected port or VPC, a list of all currently defined cross-connections.



slot.port Specifies the port whose cross-connections are to be displayed.

vpi Specifies the VPI (on the selected port) whose cross-connections are to be displayed.

IPOINT Specifies the internal port on the Control Point.

Related Commands

DUMP SIGNALLING CROSS_CONNECTIONS, SET PORT, SET VPC_LINK, CLEAR VPC_LINK, SAVE MODULE_PORT, REVERT MODULE_PORT

Example

```
8265ATM> show signalling cross_connections port 8.1
In: slot.port vpi.vci type Out: slot.port vpi.vci type Conn Cat
-----
 8.1 0.33 PVC 8.2 0.33 PVC P2P UBR
 8.1 0.35 PVC 8.2 0.35 PVC P2P UBR
 8.1 0.38 PVC 8.2 0.38 PVC P2P UBR
 8.1 0.39 PVC 8.2 0.39 PVC P2P UBR

Total number of cross_connections = 4
8265ATM>
```

SHOW SNOOP

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to display ports with port mirroring currently active.

```
▶—SHOW SNOOP—◀◀
```

Related Commands

SNOOP_ENABLE, SNOOP_DISABLE

Example

```
8265ATM> show snoop
Source  Target
-----
14.01  -> 15.01
8265ATM>
```

SHOW TERMINAL

SHOW TERMINAL

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to display configuration settings for the console or modem attached to the ATM Control Point. This includes the terminal parameters and the serial line IP (SLIP) settings.

▶—SHOW TERMINAL—◀

Related Commands

SET TERMINAL, SAVE TERMINAL, REVERT TERMINAL

Example

```
8265ATM> show terminal
Terminal Parameters:
  Baud      9600
  Data bits 8
  Hangup    DISABLE
  Parity    NONE
  Stop bits 1
  Timeout time 0
  Protocol  Normal
SLIP resource not configured
TELNET server connected
  local address: 9.100.109.203,
  remote address: 9.100.57.90.
8265ATM>
```

SHOW TFTP

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to display TFTP parameters that control the function of the DOWNLOAD and UPLOAD commands.

▶—SHOW TFTP—◀

Usage Notes

- If you enter the SHOW TFTP command and receive the message Target blade mismatch, it indicates a mismatch between the file to be downloaded and the type of the destination module.

Related Commands

SET TFTP, SAVE TFTP, REVERT TFTP, DOWNLOAD, UPLOAD

Example

```
8265ATM> show tftp
TFTP Parameters:
Server IP address : 9.100.51.171 (samson_eth).
File Name        : /tmp/gg030.security.Log.
File type        : Security Log.
Last Transfer Date : 1 Aug 1998.
Last Transfer Result : This file has not been transferred yet.
8265ATM>
```

Server IP address

IP address of the server where the downloaded or uploaded file is stored.

File Name

Name of the file to be downloaded or uploaded.

File Type Type of file to be downloaded or uploaded

Target Module

Slot number of the ATM module for which the next upload or download operation of FPGA will be done. (Only if TFTP file type is CONTROLLER_BOOT, CONTROLLER_OPERATIONAL, or FPGA.)

Target Port

Slot and port number of the WAN2 I/O card for which the next microcode download will be done. (Only if the TFTP file type is PORT.)

Last Transfer Date

Date when last upload or download took place.

Last Transfer Result

Status of the last TFTP transfer.


SHOW THRESHOLDS

SHOW THRESHOLDS

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to display port threshold settings.



slot.port | ALL

Displays all thresholds or only those on a specified port.

vpi | ALL Displays all thresholds on the port or only those on a specified VPI.

Related Commands

SET THRESHOLD MODULE, SET THRESHOLD PORT, SAVE MODULE_PORT, REVERT MODULE_PORT

SHOW TRACE

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to display all settings currently configured by the SET TRACE command.

▶—SHOW TRACE—◀

Related Commands

SET TRACE

Example

```
8265ATM> show trace
Main trace is OFF.
      base trace will be off when main trace is on.
      bus trace will be off when main trace is on.
signalling messages trace will be off when main trace is on.
      ilmi trace will be off when main trace is on.
      lec trace will be off when main trace is on.
      les trace will be off when main trace is on.
      pnni_base trace will be off when main trace is on.
      pnni_messages trace will be off when main trace is on.
      pnni_neighbor trace will be off when main trace is on.
pnni_path_selection trace will be on when main trace is on.
      pvc trace will be off when main trace is on.
      RFC 1577 trace will be on when main trace is on.
      saal trace will be off when main trace is on.
      connections trace will be on when main trace is on.
      snmp trace will be off when main trace is on.
      box_services trace will be off when main trace is on.
VPC 3.2 * appears in traces
VPC 4.2 3 appears in traces
VPC 5.* * appears in traces
VPC 6.* * appears in traces
8265ATM>
```


SHOW VPC_LINK

SHOW VPC_LINK

Mode: User / Administrator

Code Card: IISP / PNNI

This command displays all or selected VPC links defined on the local switch.

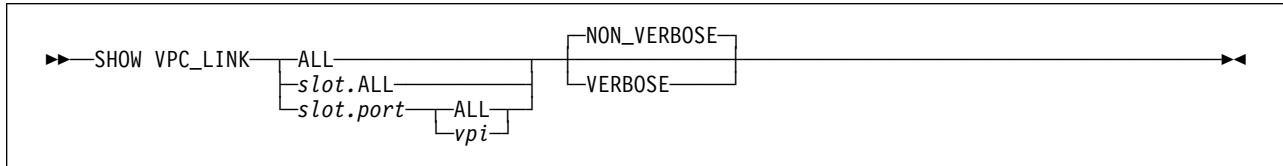

ALL Displays VPC link information for all ATM media modules.

slot.ALL Displays VPC link information for all ports on the selected slot.

slot.port Displays VPC link information for the selected port.

ALL Displays all VPI link information for the port.

vpi Displays VPC link information for the selected *vpi* for the port.

Related Commands

SET VPC_LINK, CLEAR VPC_LINK, SAVE MODULE_PORT, REVERT MODULE_PORT

Example – Non-Verbose

```
8265ATM> show vpc_link 17.all
```

VPI	Type	Mode	Status
17.01	1:	UNI enable	UP
17.01	2:	UNI enable	UP
17.01	3:	UNI enable	UP
17.01	4:	UNI enable	UP
17.01	5:	UNI enable	UP
17.01	6:	UNI enable	UP
17.01	7:	UNI enable	UP
17.01	8:	UNI enable	UP
17.01	9:	UNI enable	UP
17.01	10:	UNI enable	UP
17.01	11:	UNI enable	UP
17.01	12:	UNI enable	UP
17.01	13:	UNI enable	UP
17.01	14:	UNI enable	UP
17.01	15:	UNI enable	UP
17.03	0:	UNI enable (Pri)	UP
17.04	0:	UNI enable (Pri)	UP

```
8265ATM>
```

Example – Verbose

```
8265ATM> show vpc_link 6.1 all verbose
```

VPI	Type	Mode	Status
6.01	0:	UNI enable (Pri)	UP

```

Signalling Version : Auto
> Oper Sig. Version : 3.1
ILMI status       : UP
ILMI vci         : 0.16
VPC Bandwidth    : 622000 kbps
RB Bandwidth     : unlimited
Police admin.    : on
Police oper.     : Po
Signalling vci   : 0.5
RB Admin weight  : 5040
NRB Admin weight : 5040
VPCI             : 0
Shaping         : On
Tunnelled Service Cat:
VCI range admin. : 0-1023 (10 bits)

```

```
8265ATM>
```

SNOOP_DISABLE

SNOOP_DISABLE

Mode: Administrator

Code Card: IISP / PNNI

This command disables port mirroring for a selected port.

```
▶—SNOOP_DISABLE—source_slot.port—▶▶
```

source_slot.port

Specifies the slot and port numbers for the port whose mirroring is being disabled.

Related Commands

SNOOP_ENABLE, SHOW_PORT SAVE MODULE_PORT, REVERT MODULE_PORT

Example

The following example stops mirroring of port 3.5's traffic.

```
8265ATM> snoop_disable 14.1  
Stopped. Wait for target to complete reset.  
8265ATM>
```

SNOOP_ENABLE

Mode: Administrator

Code Card: IISP / PNNI

This command disables port mirroring for a selected port.

```
▶—SNOOP_DISABLE—source_slot.port—/—target_slot.port—◀◀
```

source_slot.port

Specifies the slot and port numbers for the port whose mirroring is being disabled.

Only one port per module may be mirrored at the same time.

target_slot.port

Specifies the slot and port numbers for the port that will receive the mirrored traffic.

All other ports on the target port's module must be disabled before port mirroring is enabled.

Related Commands

SNOOP_DISABLE, SHOW_PORT SAVE MODULE_PORT, REVERT MODULE_PORT

Example

The following example starts mirroring of port 14.1's traffic onto port 15.1 .

```
8265ATM> snoop_enable 14.1/15.1
Accepted. Wait for target to complete reset.
8265ATM> show snoop
Source  Target
-----
14.01  -> 15.01
8265ATM>
```

SWAP FPGA_PICOCODE

Mode: Administrator

Code Card: IISP / PNNI

Use this command to change the version of hardware picocode in the FPGA of one or more modules. For every module in the list, the standby and operational FPGA versions are swapped and the module is reset.

```
▶ SWAP FPGA_PICOCODE slot ▶
```

slot Slot number of the module.

If the ATM Control Point FPGA version is to be swapped, it is recommended to specify its slot number last in the list.

Example

```
8265ATM> swap_fpga_picocode 3 4
You are about to change operational FPGA version...
Are you sure ? (Y/N) Y
Processing slot 3 ... Swap completed
Processing slot 4 ... Swap completed

8265ATM>
```

When the swap limit is reached for the FPGA code on an A12-TP25 module, the following message is displayed.

```
8265ATM>swap fpga_picocode 14
You are about to change operational FPGA version..
Are you sure ? (Y/N) Y
Processing slot 14 ... Swap rejected : swap count limit reached.
8265ATM>
```

SWAP MICROCODE

Mode: Administrator

Code Card: IISP / PNNI

Use this command to change the inactive version to the active version of the ATM Control Point operational microcode (flash EEPROM). This command causes the checksum of the inactive version of the microcode (flash EEPROM) to be computed. If the checksum is valid, the microcode version is activated and the ATM subsystem reset.

```
▶—SWAP—MICROCODE—┐
                    └─FORCE─┘▶
```

FORCE Specifies that any unsaved configuration settings are discarded when resetting the ATM subsystem.

Example

```
8265ATM> swap microcode
You are about to change operational microcode version and reset the hub
The saved hub configuration may be lost...
Are you sure ? (Y/N) Y
```


TELNET

Mode: User / Administrator

Code Card: IISP / PNNI

Use this command to log on to, and manage, any ATM Control Point in the network from a remote ATM Control Point console. To log on to a remote ATM Control Point, you must enter its IP address (configured with the SET DEVICE IP_ADDRESS or SET DEVICE LAN_EMULATION_CLIENT command).

Once you log on to the remote ATM Control Point, you are prompted to enter the correct password. Afterwards, all the ATM Control Point commands that you enter locally affect the remote module.



ip_address

IP address of an ATM Control Point in the format *n.n.n.n*, where *n* is a number between 0 and 255.

host_name

The name assigned to an ATM Control Point using the SET HOST command.

Usage Notes

- You can remotely log on to **only** one ATM Control Point at a time. If you have already started a remote session and want to connect to another remote ATM Control Point, you must first log off the active remote session.
- Before connecting to a remote ATM Control Point, make sure that the module is on the same IP subnetwork as the ATM Control Point to which you are locally logged on, or that it is bridged or routed to the same IP subnetwork.
- To interrupt a remote connection to an ATM Control Point and return to your local ATM Control Point session, enter the LOGOUT command or press the CTRL-D keys.
- You may only remotely log on to other CPSW modules. Remote login to non-switch ATM devices from the configuration console is not supported, even if the remote device supports the TELNET protocol.

UNCOMMIT PNNI

Mode: Administrator

Code Card: IISP / PNNI only

This command restores the Future PNNI Configuration by replacing Future PNNI settings with the current Active PNNI settings.

▶—UNCOMMIT—PNNI—◀

Related Commands

SET PNNI commands, SHOW FUTURE_PNNI CONFIGURATION STATE, COMMIT PNNI, UNCOMMIT PNNI, SAVE PNNI, REVERT PNNI

Example

```
8265ATM> uncommit pnni
UNCOMMIT successfully executed.
8265ATM>
```

UPLOAD

UPLOAD

Mode: Administrator

Code Card: IISP / PNNI

Use this command to upload any of the following data to a file on a server:

CONFIGURATION

All configuration settings for the IBM 8265.

DUMP The current contents of the dump buffer.

ERROR_LOG

The current contents of the error log.

MAIN_TRACE


The current contents of the main trace buffer.

SECURITY_CONFIGURATION

A file containing all security configuration settings.

SECURITY_LOG

The current contents of the security violations log.



Usage Notes

- Before using UPLOAD, you must define:
 - The address of the server using the SET TFTP_SERVER_IP_ADDRESS command
 - The name of the file to be uploaded. using the SET TFTP_FILE_NAME command
 - The type of the file to be uploaded. using the SET TFTP FILE_TYPE command.
- The host must run the Trivial File Transfer Program (TFTP) daemon and must be correctly configured to support TFTP communication. For more information on the TFTP daemon, refer to the documentation supplied with your host.
- Uploaded error logs contain all errors logged at the time you run UPLOAD. Uploaded trace logs contain all currently active traces. Note that the trace log file is continuously updated in the ATM Control Point even when UPLOAD is being run.
- If you are uploading the TFTP file to a host server that runs AIX, you must first configure AIX for the TFTP file transfer. This procedure is described in the *8265 User's Guide*.
- Only one UPLOAD command can be run at a time from the configuration console. Another can be run via ATM network management facilities.

- If you run UPLOAD in any of the following situations:
 - From a remote TELNET session,
 - From another ATM Control Point local console,
 - While another upload or download operation is in progress on the network management station,
 a message is displayed on your configuration console, such as:

```
Upload Resource Already In Use
```

Related Commands

SET TFTP commands, DOWNLOAD

Example

The following example shows the steps required for uploading the access control address table (server running OS/2):

```
8265ATM>set security tftp_server_ip_address alice
8265ATM>set security tftp_file_name
Enter file name: c:\sec\address.tab

File name set.
8265ATM> upload inband

Upload Successful.
8265ATM>
```

WRAP


WRAP

Mode: Administrator

Code Card: IISP / PNNI

Use this command to diagnose problems that arise on ATM ports. Before running the WRAP command to test the port, you must first disable the port and then connect a wrap device to it.

The WRAP command sets up an internal connection between the ATM Control Point and the ATM port being tested. ATM cells are sent from the ATM Control Point or ATM media module to the ATM port over the connection. If the same number of cells are sent back, the test is successful.

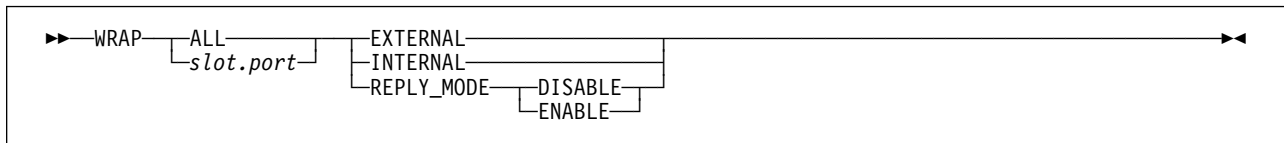

slot Slot number of the ATM media module.

port Port number of the ATM port.

ALL All slots in the hub.

EXTERNAL

Required for 25 Mbps and 155 Mbps ports.

INTERNAL

Required for 155 Mbps ports only.

REPLY_MODE

Required for 155 Mbps ports only.

Port-Specific Settings

Some ATM **port types** have further wrap tests that may be performed using the WRAP command. These port-specific wrap tests are described in the following appendix sections:

E1/T1 and IMA "E1/T1 and IMA Port Parameters" on page 211.

E3/DS3 "E3/DS3 Port Parameters" on page 220.

OC3/STM1 "OC3/STM1 Port Parameters" on page 226.

Example

```
8265ATM> wrap external 4.2
```

```
Test successful.  
8265ATM>
```

Appendix A. Port-Specific Commands

This appendix contains the following sections for port-specific commands:

“100 Mbps Port Parameters” on page 208

- SET PORT

“155 Mbps Port Parameters” on page 209

- SET PORT

“622 Mbps Port Parameters” on page 210

- SET PORT

“E1/T1 and IMA Port Parameters” on page 211

- SET PORT
- SHOW PORT
- SET MODULE slot IMA_GROUP
- SHOW MODULE slot IMA_GROUP
- WRAP

“E3/DS3 Port Parameters” on page 220

- SET PORT
- WRAP

“OC3/STM1 Port Parameters” on page 226


- SET PORT
- WRAP

100 Mbps Port Parameters

This section describes parameters specific to 100 Mbps ports in the following commands:

- SET PORT

SET PORT Parameters

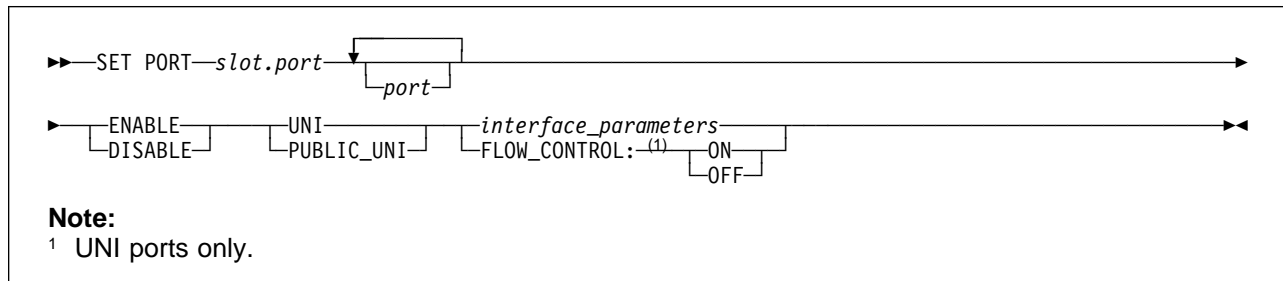

slot, port, APPLY_DEFAULTS, ENABLE, DISABLE, UNI, IISP, PNNI, AUTO, VOID, interface_parameters

See "SET PORT" on page 75 for a description of the standard SET PORT parameters.

FLOW_CONTROL: ON | OFF


Enables and disables XON/XOFF on the selected port.

155 Mbps Port Parameters

This section describes parameters specific to 155 Mbps ports in the following commands:

- SET PORT

SET PORT Parameters

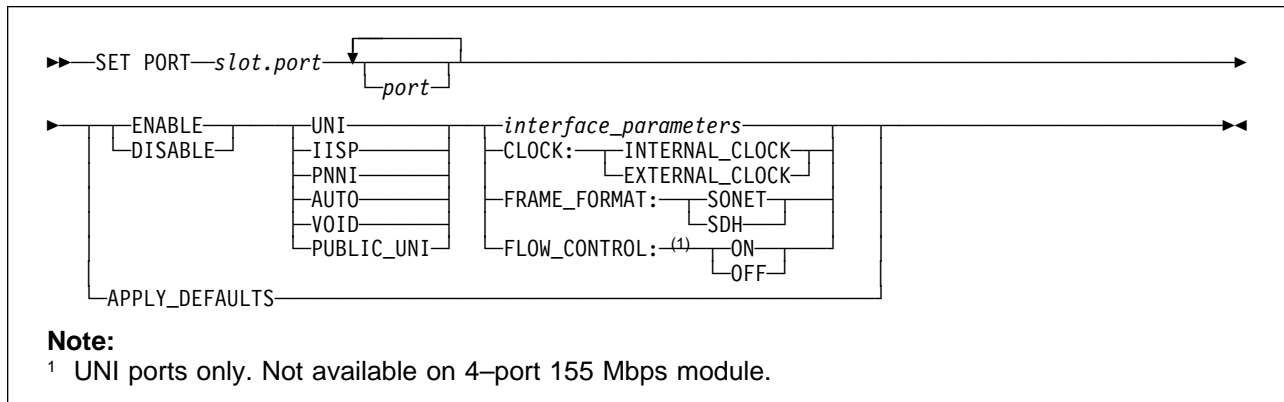

slot, port, APPLY_DEFAULTS, ENABLE, DISABLE, UNI, IISP, PNNI, AUTO, VOID, interface_parameters

See "SET PORT" on page 75 for a description of the standard SET PORT parameters.

FLOW_CONTROL: ON | OFF

Enables and disables Flow Control on the selected port.

CLOCK: INTERNAL_CLOCK | EXTERNAL_CLOCK

Selects between internal and external clocking.

FRAME_FORMAT: SONET | SDH


Selects the frame format.

622 Mbps Port Parameters

This section describes parameters specific to 622 Mbps ports in the following commands:

- SET PORT

SET PORT Parameters

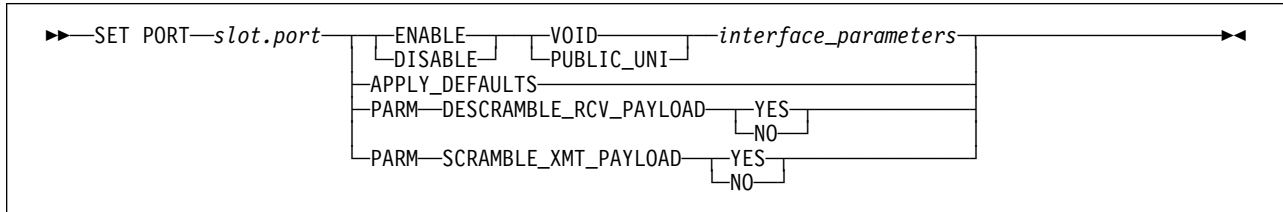

slot, port, APPLY_DEFAULTS, ENABLE, DISABLE, VOID, PUBLIC_UNI, interface_parameters

See "SET PORT" on page 75 for a description of the standard SET PORT parameters.

PARAM_DESCRAMBLE_RCV_PAYLOAD

The cell payload received by the 622 Mbps port is unscrambled by default.

PARAM_SCRAMBLE_XMT_PAYLOAD


The cell payload transmitted by the 622 Mbps port is scrambled by default.

E1/T1 and IMA Port Parameters

This section describes parameters specific to E1/T1 and IMA ports in the following commands:

- SET PORT
- SHOW PORT
- SET MODULE slot IMA_GROUP
- SHOW MODULE slot IMA_GROUP
- WRAP

SET PORT Parameters

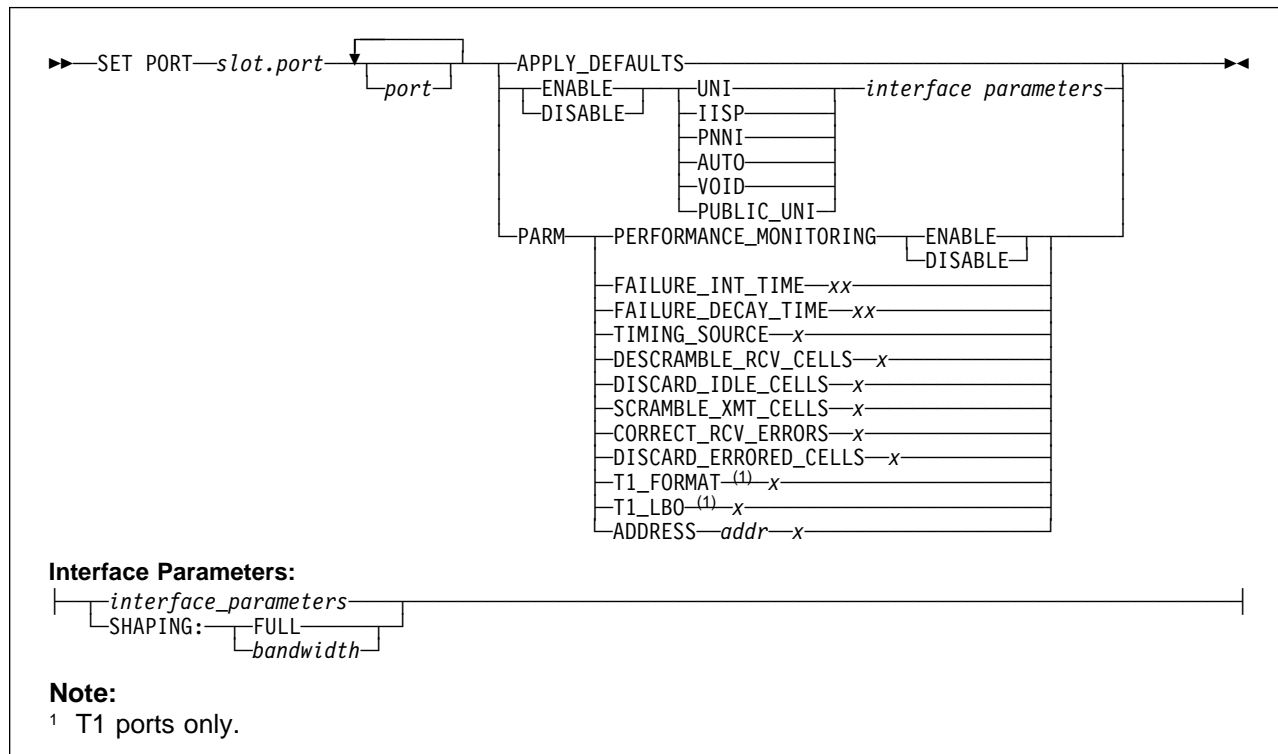

slot, port, APPLY_DEFAULTS, ENABLE, DISABLE, UNI, IISP, PNNI, AUTO, VOID, PUBLIC_UNI, interface_parameters

See “SET PORT” on page 75 for a description of the standard SET PORT parameters.

SHAPING

Specifies maximum throughput for the port:

FULL Utilizes the full bandwidth available on the port.

bandwidth

Restricts throughput to the amount specified (in increments of 8 Kbps):

- E1 range: 8 Kbps to 1920 Kbps
- T1 range: 8 Kbps to 1536 Kbps

PARM PERFORMANCE_MONITORING

Specifies whether WAN performance statistics are to be monitored.

E1/T1 and IMA Port Parameters

ENABLE Enables accumulation of port performance statistics.

DISABLE Disables accumulation of port performance statistics.

PARAM FAILURE_INT_TIME xx

The amount of time, in half-second increments, that a defect must be continually present before being deemed a failure is set by default to 2.5 seconds. See the table below for possible values of xx.

Table 1. Failure Integration Time Parameter Values

Value	Sec	Value	Sec	Value	Sec	Value	Sec	Value	Sec
00	0.0	05	2.5	10	5.0	15	7.5	20	10.0
01	0.5	06	3.0	11	5.5	16	8.0		
02	1.0	07	3.5	12	6.0	17	8.5		
03	1.5	08	4.0	13	6.5	18	9.0		
04	2.0	09	4.5	14	7.0	19	9.5		

PARAM FAILURE_DECAY_TIME xx

The amount of time, in five-second increments, that a defect must be continually absent before the failure is cleared is set by default to 10.0 seconds. See the table below for possible values of xx.

Table 2. Failure Decay Time Parameter Values

Value	Sec	Value	Sec	Value	Sec	Value	Sec	Value	Sec
00	0.0	05	5.0	10	10.0	15	15.0	20	20.0

PARAM TIMING_SOURCE x

The timing source used for transmission signal timing can be set to be derived from the receive signal (Facility timing), the external interface (External timing), or the I/O card (Internal timing). Possible values of x are:

- 0 Facility timing (default)
- 1 External timing
- 2 Internal timing
- 3 Receive line clock timing

PARAM DESCRAMBLE_RCV_CELLS x

The ATM cells received by the port are unscrambled by default. Possible values of x are:

- 0 Unscrambling disabled
- 1 Unscrambling enabled (default)

PARAM DISCARD_IDLE_CELLS x

Idle ATM cells (cells with VPI and VCI fields of zeroes) received by the port are discarded by default. Possible values of x are:

- 0 Discard disabled
- 1 Discard enabled (default)

PARAM SCRAMBLE_XMT_CELLS x

The scrambling of ATM cells transmitted by the port is performed by default. Possible values of x are:

- 0 Scrambling disabled
- 1 Scrambling enabled (default)

PARAM CORRECT_RCV_ERRORS x

The correction of single bit errors in the header of ATM cells received is performed by default. Possible values of *x* are:

- 0** Correction disabled
- 1** Correction enabled (default)

PARAM DISCARD_ERRORED_CELLS x

The discarding of idle ATM cells received is performed by default. Possible values of *x* are:

- 0** Discard disabled
- 1** Discard enabled (default)

PARAM ADDRESS 100 x [Power On Diagnostics]

Power On diagnostics test memory access, register access, data path continuity and basic device functionality on the port, after each reset of the port. These diagnostics are enabled by default. Disabling the diagnostics will minimize the time required for the port to be initialized. Possible values of *x* are:

- 0** Diagnostics disabled
- 1** Diagnostics enabled (default)

PARAM ADDRESS *addr* x [Generate Header Error Control (HEC) Field]

The generation of the HEC field in ATM cells that are to be transmitted over the ATM port is performed by default. The port generates the HEC field and inserts it into the transmitted cells. Applications that require the ATM Control Point to generate the field should disable this function.

Values for *addr* may be:

- 116** Port 1 or Port 5
- 126** Port 2 or Port 6
- 136** Port 3 or Port 7
- 146** Port 4 or Port 8

Possible values of *x* are:

- 0** Generation disabled
- 1** Generation enabled (default)

PARAM ADDRESS *addr* x [Addition of Coset Polynomial in ATM Cell Headers]

The addition of the coset polynomial to the HEC byte in ATM cell headers is performed by default.

Values for *addr* may be:

- 117** Port 1 or Port 5
- 127** Port 2 or Port 6
- 137** Port 3 or Port 7
- 147** Port 4 or Port 8

Possible values of *x* are:

- 0** Coset polynomial not added
- 1** Coset polynomial added (default)

PARAM ADDRESS *addr* x [Set SA4 - SA8 Bits in Transmit E1]

(E1 only) Sets the value of the SA4 to SA8 Bits in the transmit E1.

Possible values of *x* are **0** and **1**.

Values for *addr* may be:

E1/T1 and IMA Port Parameters

Table 3. Values for SA4 to SA8 bits in Transmit E1

Bit	Port 1	Port 2	Port 3	Port 4
SA4	118	128	138	148
SA5	119	129	139	149
SA6	11A	12A	13A	14A
SA7	11B	12B	13B	14B
SA8	11C	12C	13C	14C

PARAM ADDRESS *addr* *x*

(T1 only) The T1 termination location is set to a customer-side location by default.

Values for *addr* may be:

11B Port 1 or Port 5

12B Port 2 or Port 6

13B Port 3 or Port 7

14B Port 4 or Port 8

Possible values of *x* are:

0 T1 termination on Network side

1 T1 termination on Customer side (default)

PARAM T1_FORMAT *x*

(T1 only) The framing format of the transmit T1 is set to ESF by default. Possible values of *x* are:

0 SF format

1 ESF format (default)

PARAM T1_LBO *x*

(T1 only) The transmit output amplitude and shape are set to 0 dB by default. Possible values of *x* are:

0 0-133 Ft.

1 133-266 Ft.

2 266-399 Ft.

3 399-533 Ft.

4 533-655 Ft.


5 0 dB (default)

6 -7.5 dB

7 -15 dB

8 -22.5 dB

SHOW PORT Parameters

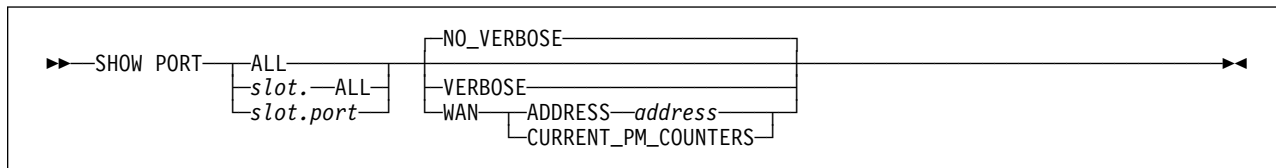

ALL, slot.ALL, slot.port, NO_VERBOSE, VERBOSE

See "SHOW PORT" on page 173 for a description of the standard SHOW PORT parameters.

WAN Displays the information about the selected WAN2 port:

address Displays the current values stored at the specified address.

CURRENT_PM_COUNTERS

Displays the current performance monitoring statistics for the selected port.

Examples:

```
8265ATM> show port 5.1 wan address 117
```

```
Actual Value: 01 00 00 00 00 00 01 00 00 02 00 01 00 00 00 01
8265ATM>
```

```
8265ATM> show port 5.2 verbose
```


Type Mode	Status	Daughter Card Description
5.02:PNNI enabled	UP	IMA_E1 Port

```

Leader of group 2
ILMI status      : UP
ILMI vci         : 0.16
RB Bandwidth     : unlimited
Police admin.    : off
Police oper.     : off
Signalling vci   : 0.5
Routing vci      : 0.18
Aggregation token : 0
RB Admin weight  : 5040
NRB Admin weight : 5040
VPI range admin. : 0-3 (2 bits)
VCI range admin. : 0-1023 (10 bits)
VPI range oper.  : 0-3 (2 bits)
VCI range oper.  : 0-1024 (10 bits)
Connector        : DB9
Media            : copper utp
Port speed       : 4097 kbps
Connection shaping : Off.
MORE... (<L> to display one more line)

```

SET MODULE slot IMA_GROUP

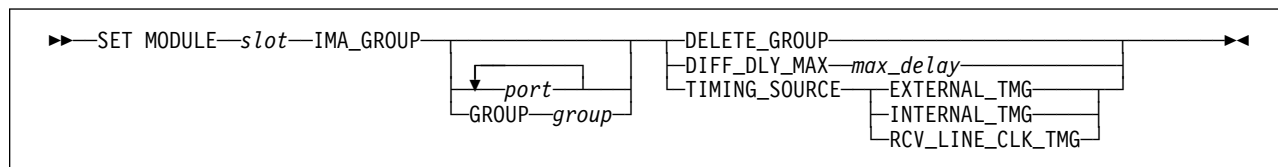

slot Specifies the slot number of the IMA ports.

group Specifies the number of the IMA group (that is, the number of the first port in the group).

DELETE_GROUP

Deletes the specified group.

DIFF_DLY_MAX:max_delay


Specifies the maximum number of milliseconds of differential delay that will be tolerated among the group's links (maximum 25 ms).

EXTERNAL_TMGM | INTERNAL_TMGM | RCV_LINE_CLK_TMGM

Specifies the source of timing for E1/T1 transmission signals, or in CTC mode, for generation of the IMA Data Clock Rate.

Usage Notes

- Before creating a new IMA group, you must first disable all ports.
- Before removing an IMA group (using DELETE_GROUP), you must first disable the reference bandwidth port.
- To add a new port to an existing IMA group:
 1. Disable the reference bandwidth port, then
 2. Remove the existing group,
 3. Create a new group to include the new port.

SHOW MODULE slot IMA_GROUP**slot, VERBOSE, NO_VERBOSE, CURRENT_PM**

See “SHOW MODULE” on page 159 for a description of the standard SHOW MODULE parameters.

group Specifies the number of the IMA group.

Example:

E1/T1 and IMA Port Parameters

```
8265ATM> show module 5 ima_group 1 verbose
```

```
Group      Ports      Daughter Card Description
-----
1          1          IMA_E1
          3
DAUGHTER CARD INFORMATION:
-----
CONFIGURATION CONTROL:
-----
    Timing Source          : PARM_INTERNAL_TMG
    Differential delay      : 100 ms

DIAGNOSTICS CONTROL:
-----
    Performance Monitoring  : DISABLED

FAILURE STATUS:
-----

Group failure status:
=====
    Near-End Group State Machine : IMA_GSM_OPERATIONAL
    Far-End Group State Machine   : IMA_GSM_OPERATIONAL
    Near-End Group Failure Status : IMA_GRP_NO_FAILURE
    Far-End Group Failure Status  : IMA_GRP_NO_FAILURE

Links failure status:
=====


Port 1 :
    Near-End Transmit Link State Machine : IMA_LSM_ACTIVE
    Near-End Receive Link State Machine  : IMA_LSM_ACTIVE
    Far-End Transmit Link State Machine   : IMA_LSM_ACTIVE
    Far-End Receive Link State Machine    : IMA_LSM_ACTIVE
    Near-End Receive failure status       : IMA_LNK_NO_FAILURE
    Far-End Receive failure status        : IMA_LNK_NO_FAILURE
    rx link id                            : 1
    tx link id                            : 0

Port 3 :
    Near-End Transmit Link State Machine : IMA_LSM_ACTIVE
    Near-End Receive Link State Machine  : IMA_LSM_ACTIVE
    Far-End Transmit Link State Machine   : IMA_LSM_ACTIVE
    Far-End Receive Link State Machine    : IMA_LSM_ACTIVE
    Near-End Receive failure status       : IMA_LNK_NO_FAILURE
    Far-End Receive failure status        : IMA_LNK_NO_FAILURE
    rx link id                            : 0
    tx link id                            : 1

FAILURE SUMMARY STATUS:
-----
                                No failure in group 1

8265ATM>
```

WRAP

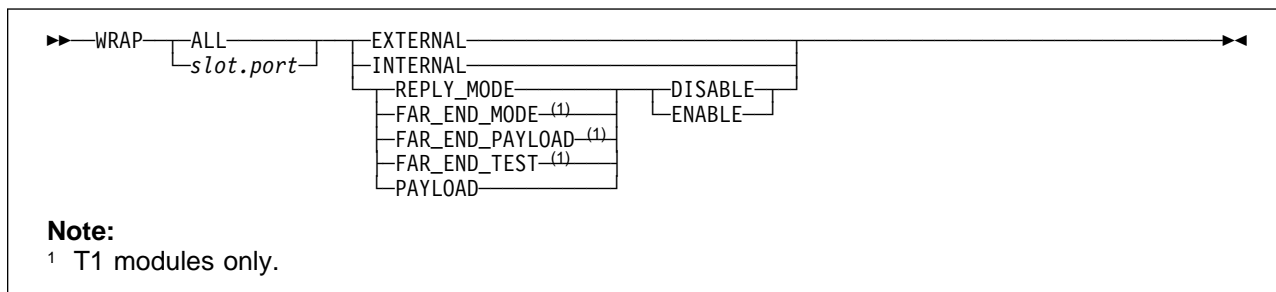

slot.port, ALL, EXTERNAL, INTERNAL, REPLY_MODE, DISABLE, ENABLE

See “WRAP” on page 204 for information on these standard WRAP parameters.

FAR_END_MODE

For T1 modules only.

FAR_END_PAYLOAD

For T1 modules only.

FAR_END_TEST

For T1 modules only.

PAYLOAD


For all WAN 2 modules.

E3/DS3 Port Parameters

This section describes parameters specific to E3/DS3 ports in the following commands:

- SET PORT
- SHOW PORT
- WRAP

SET PORT Parameters

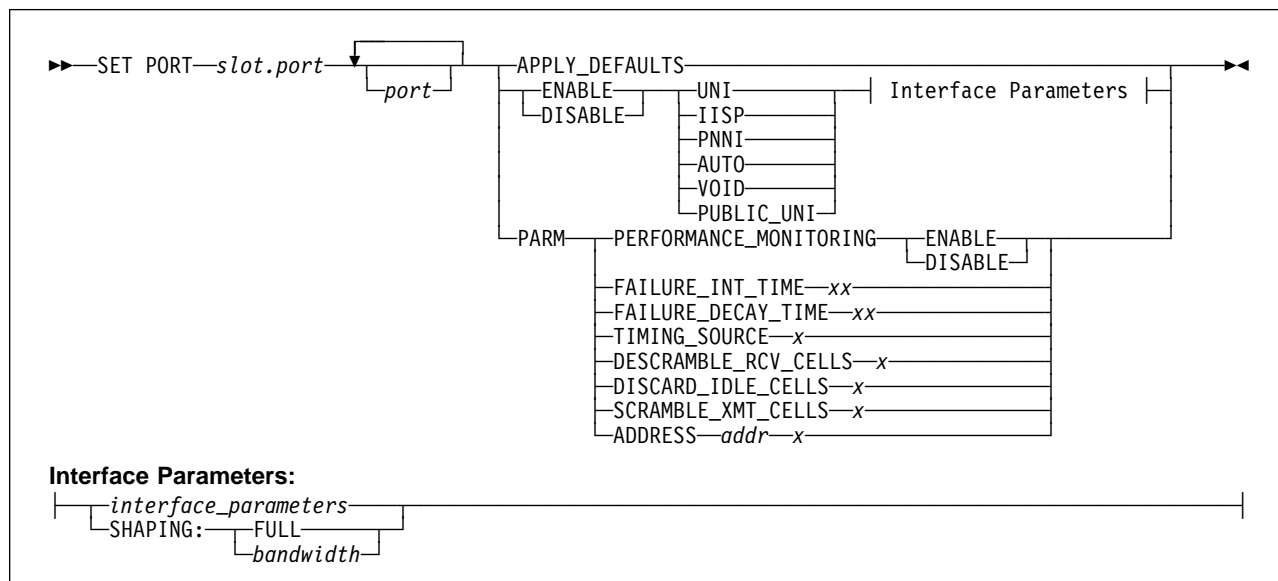

slot, port, APPLY_DEFAULTS, ENABLE, DISABLE, UNI, IISP, PNNI, AUTO, VOID, PUBLIC_UNI, interface_parameters

See "SET PORT" on page 75 for a description of the standard SET PORT parameters.

SHAPING

Specifies maximum throughput for the port:

FULL Utilizes the full bandwidth available on the port.

bandwidth

Restricts throughput to the amount specified (in increments of 8 Kbps).

PARAM PERFORMANCE_MONITORING

Specifies whether WAN performance statistics are to be monitored.

ENABLE Enables accumulation of port performance statistics.

DISABLE Disables accumulation of port performance statistics.

PARAM FAILURE_INT_TIME xx

The amount of time, in half-second increments, that a defect must be continually present before being deemed a failure is set by default to 2.5 seconds. See the table below for possible values of xx.

Table 4. Failure Integration Time Parameter Values

Value	Sec	Value	Sec	Value	Sec	Value	Sec	Value	Sec
00	0.0	05	2.5	10	5.0	15	7.5	20	10.0
01	0.5	06	3.0	11	5.5	16	8.0		
02	1.0	07	3.5	12	6.0	17	8.5		
03	1.5	08	4.0	13	6.5	18	9.0		
04	2.0	09	4.5	14	7.0	19	9.5		

PARAM FAILURE_DECAY_TIME xx

The amount of time, in five-second increments, that a defect must be continually absent before being the failure is cleared is set by default to 10.0 seconds. See the table below for possible values of xx.

Table 5. Failure Decay Time Parameter Values

Value	Sec	Value	Sec	Value	Sec	Value	Sec	Value	Sec
00	0.0	05	5.0	10	10.0	15	15.0	20	20.0

PARAM TIMING_SOURCE x

The timing source used for transmission signal timing can be set to be derived from the receive signal (Facility timing), the external interface (External timing), or the I/O card (Internal timing). Possible values of x are:

- 0 Facility timing (default)
- 1 External timing
- 2 Internal timing

PARAM DESCRAMBLE_RCV_CELLS x

The ATM cells received by the port are unscrambled by default. Possible values of x are:

- 0 Unscrambling disabled
- 1 Unscrambling enabled (default)

PARAM DISCARD_IDLE_CELLS x

Idle ATM cells (cells with VPI and VCI fields of zeroes) received by the port are discarded by default. Possible values of x are:

- 0 Discard disabled
- 1 Discard enabled (default)

PARAM SCRAMBLE_XMT_CELLS x

The scrambling of ATM cells transmitted by the port is performed by default. Possible values of x are:

- 0 Scrambling disabled
- 1 Scrambling enabled (default)

PARAM ADDRESS_100 x [Power On Diagnostics]

Power On diagnostics test memory access, register access, data path continuity and basic device functionality on the port, after each reset of the port. These diagnostics are enabled by default. Disabling the diagnostics will minimize the time required for the port to be initialized. Possible values of x are:

- 0 Disabled
- 1 Enabled (default)

E3/DS3 Port Parameters

PARAM ADDRESS 105 x [Correct Header Errors]

The correction of single bit errors in the header of ATM cells received by the port is enabled by default. Possible values of x are:

- 0 Error correction disabled
- 1 Error correction enabled (default)

PARAM ADDRESS 106 x [Discard ATM Cells with Uncorrectable Headers]

ATM cells with uncorrectable header errors received by the port are discarded by default. They are not passed to the ATM Control Point. Possible values of x are:

- 0 Discard disabled
- 1 Discard enabled (default)

PARAM ADDRESS 109 x [Generate Header Error Control (HEC) Field]

The generation of the HEC field in ATM cells that are to be transmitted over the ATM port is performed by default. The port generates the HEC field and inserts it into the transmitted cells. Applications that require the ATM Control Point to generate the field should disable this function. Possible values of x are:

- 0 Generation disabled
- 1 Generation enabled (default)

PARAM ADDRESS 10A x [Addition of Coset Polynomial in ATM Cell Headers]

The addition of the coset polynomial to the HEC byte in ATM cell headers is performed by default. Possible values of x are:

- 0 Coset polynomial not added
- 1 Coset polynomial added (default)

PARAM ADDRESS 10B x [E3 Framing Format]

The E3 transmit framing format is by default set to G.832. When other framing formats are supported in future releases, the format may be changed. Possible values of x are:

- 0 G.832 format used for transmit

PARAM ADDRESS 10C x [E3 Transmit Timing Marker]

When external timing is used (see PARM TIMING_SOURCE on page 221), transmit timing can be deemed traceable to a primary reference clock. Possible values of x are:

- 0 External clock is a primary reference clock
- 1 External clock is not a primary reference clock (default)

PARAM ADDRESS 10D x [Monitoring of Payload Type]

The monitoring of payload type mismatch failures can be enabled or disabled. When enabled, failures are declared when the payload field of the E3 overhead does not contain the proper value. Possible values of x are:

- 0 Monitoring disabled
- 1 Monitoring enabled (default)

PARAM ADDRESS 10E x [Monitoring of Trail Mismatch Failures]

The monitoring of trail mismatch failures can be enabled or disabled. When enabled, failures are declared when the 16-byte trail trace received does not match the expected receive trail trace (see Expected Trail Trace on page 223). Possible values of x are:

- 0 Monitoring disabled (default)
- 1 Monitoring enabled

PARAM ADDRESS 10F x [Trail Trace Format]

The trail trace format applies to both the transmit and receive trail traces. The 16-byte trail trace format can be specified to include a CRC7 in the first byte. Possible values of x are:

- 0 16-byte format
- 1 16-byte format with CRC7 in first byte (default)

PARAM ADDRESS 110 - 11F x [Transmit Trail Trace]

A trail access point identifier (16 bytes in length) is usually transmitted so that the trail receiving terminator can verify that it is connected to the correct transmitter. If the trail trace format is set to include a CRC7 in the first byte, only bytes 1-15 of the 16 byte field are significant. Possible values of x are:

00 to FF for each byte. Default is 89 for the first byte, all remaining bytes 00.

PARAM ADDRESS 120 - 12F x [Expected Trail Trace]

The trail trace that is expected to be received can be specified so that when the monitoring of trace mismatch failures is active (see Monitoring of Trail Mismatch Failures on page 222), a failure can be signalled if the received trail trace differs. If the trail trace format is set to include a CRC7 in the first byte, only bytes 1-15 of the 16 byte field are significant. Possible values of x are:

00 to FF for each byte. Default is 89 for the first byte, all remaining bytes 00.

PARAM ADDRESS 130 x [Generation of RDI Signal]

An E3 RDI signal can be generated when of loss of cell delineation occurs. Possible values of x are:

- 0 Transmission of RDI signal disabled
- 1 Transmission of RDI signal enabled (default)

PARAM ADDRESS 10A x [Addition of Coset Polynomial in ATM Cell Headers]

The addition of the coset polynomial to the HEC byte in the ATM cell headers is performed by default. Possible values of x are:

- 0 Coset polynomial not added
- 1 Coset polynomial added (default)

PARAM ADDRESS 10B x [DS3 Framing Format]

The DS3 transmit framing format can be set to either C-bit parity or M23 format. Enforced C-bit parity is set by default. The format can also be set so that C-bit parity automatically reverts to M23 format if the received DS3 signal is in M23 format. Possible values of x are:

- 0 M23 format forced
- 1 C-bit parity format preferred
- 2 C-bit parity format forced (default)

PARAM ADDRESS 10C x [DS3 Line Buildout]

The transmit DS3 line buildout is determined by the length of the cable connected to the ATM port. If the cable is between 0 and 225 feet (0 and 68.5 m), the default setting should be used. If the length of cable is between 225 and 450 feet (68.5 and 137.1 m), the setting should be changed to 1. Possible values of x are:

- 0 0 to 225 feet (default)
- 1 225 to 450 feet

PARAM ADDRESS 10D x [PLCP Framing]

A PLCP (Physical Layer Convergence Protocol) can be used in the transmit and receive DS3 signals. When used (default), 41.1 Mbps of bandwidth is allocated to ATM cell traffic, while direct mapping of ATM cells provides up to 44.21 Mbps of bandwidth for ATM traffic. If not used, ATM cells are mapped directly into the DS3 payload and cell delineation is based on the HEC field. Possible values of x are:

- 0 PLCP disabled
- 1 PLCP enabled (default)

E3/DS3 Port Parameters

PARAM ADDRESS 10E x [PLCP Timing Source]

The timing source for the transmit PLCP can be independent of transmit DS3 timing. By default, the timing is derived from the receive PLCP signal, and may be changed to derive timing from the transmit DS3 signal or from the external interface. Possible values of x are:

- 1 External 8kHz timing
- 3 Receive PLCP (default)
- 4 Transmit DS3

PARAM ADDRESS 10F x [Transmitting Z Bytes]


Transmit Z bytes can either be derived from an external source or be filled with zeroes (default). When an external source is used, the bytes are derived from the XPOHDATA (Transmit PLCP Overhead Data) signal. Possible values of x are:

- 0 All zeroes (default)
- 1 External source

SHOW PORT Parameters

See “SHOW PORT Parameters” on page 215.

WRAP

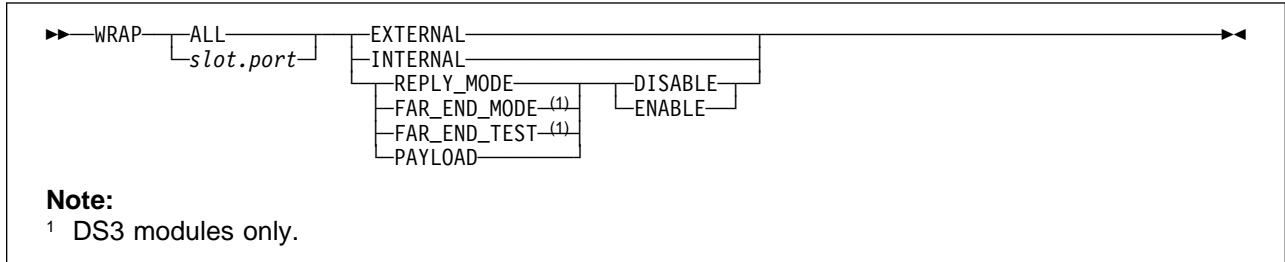

slot.port, ALL, EXTERNAL, INTERNAL, REPLY_MODE, DISABLE, ENABLE

See “WRAP” on page 204 for information on these standard WRAP parameters.

FAR_END_MODE

For DS3 modules only.

FAR_END_TEST

For DS3 modules only.

PAYLOAD


For all WAN 2 modules.

OC3/STM1 Port Parameters

This section describes parameters specific to OC3/STM1 ports in the following commands:

- SET PORT
- SHOW PORT
- WRAP

SET PORT Parameters

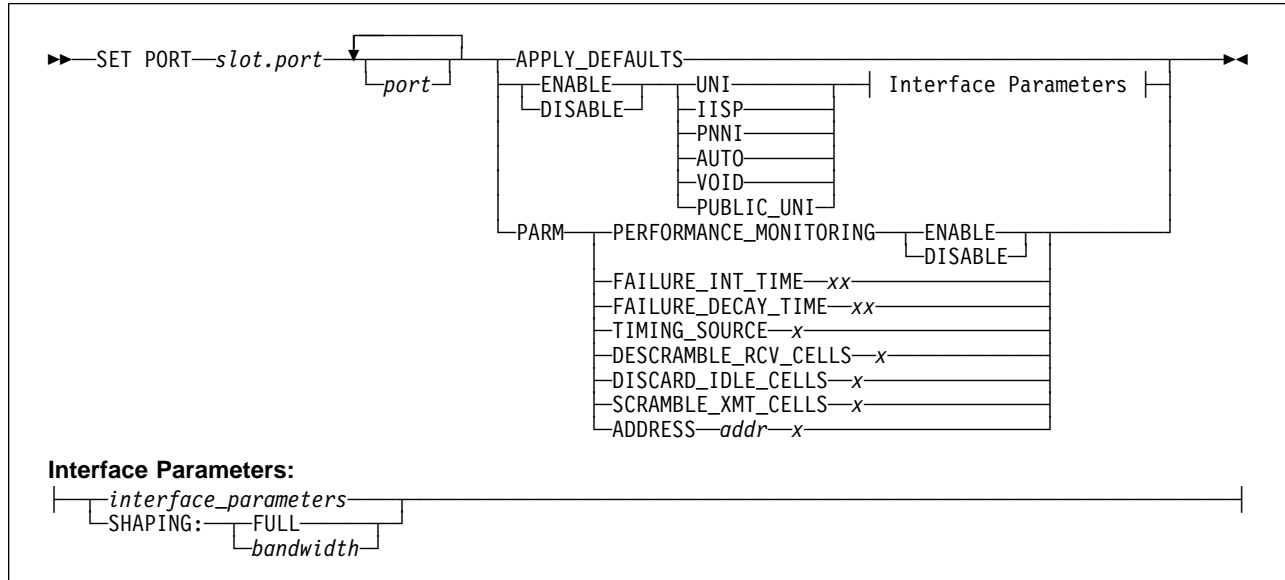

slot, port, APPLY_DEFAULTS, ENABLE, DISABLE, UNI, IISP, PNNI, AUTO, VOID, PUBLIC_UNI, interface_parameters

See "SET PORT" on page 75 for a description of the standard SET PORT parameters.

SHAPING

Specifies maximum throughput for the port:

FULL Utilizes the full bandwidth available on the port.

bandwidth

Restricts throughput to the amount specified (in increments of 8 Kbps).

PARM PERFORMANCE_MONITORING

Specifies whether WAN performance statistics are to be monitored.

ENABLE Enables accumulation of port performance statistics.

DISABLE Disables accumulation of port performance statistics.

PARM FAILURE_INT_TIME xx

The amount of time, in half-second increments, that a defect must be continually present before being deemed a failure is set by default to 2.5 seconds. See the table below for possible values of xx.

Table 6. Failure Integration Time Parameter Values

Value	Sec	Value	Sec	Value	Sec	Value	Sec	Value	Sec
00	0.0	05	2.5	10	5.0	15	7.5	20	10.0
01	0.5	06	3.0	11	5.5	16	8.0		
02	1.0	07	3.5	12	6.0	17	8.5		
03	1.5	08	4.0	13	6.5	18	9.0		
04	2.0	09	4.5	14	7.0	19	9.5		

PARM FAILURE_DECAY_TIME xx

The amount of time, in five-second increments, that a defect must be continually absent before being the failure is cleared is set by default to 10.0 seconds. See the table below for possible values of xx.

Table 7. Failure Decay Time Parameter Values

Value	Sec	Value	Sec	Value	Sec	Value	Sec	Value	Sec
00	0.0	05	5.0	10	10.0	15	15.0	20	20.0

PARM TIMING_SOURCE x

The timing source used for transmission signal timing can be set to be derived from the receive signal (Facility timing), the external interface (External timing), or the I/O card (Internal timing). Possible values of x are:

- 0 Facility timing (default)
- 1 External timing
- 2 Internal timing

PARM DESCRAMBLE_RCV_CELLS x

The ATM cells received by the port are unscrambled by default. Possible values of x are:

- 0 unscrambling disabled
- 1 unscrambling enabled (default)

PARM DISCARD_IDLE_CELLS x

Idle ATM cells (cells with VPI and VCI fields of zeroes) received by the port are discarded by default. Possible values of x are:

- 0 discard disabled
- 1 discard enabled (default)

PARM SCRAMBLE_XMT_CELLS x

The scrambling of ATM cells transmitted by the port is performed by default. Possible values of x are:

- 0 scrambling disabled
- 1 scrambling enabled (default)

PARM ADDRESS_100 x [Power On Diagnostics]

Power On diagnostics test memory access, register access, data path continuity and basic device functionality on the port, after each reset of the port. These diagnostics are enabled by default. Disabling the diagnostics will minimize the time required for the port to be initialized. Possible values of x are:

- 0 disabled
- 1 enabled (default)

OC3/STM1 Port Parameters

PARAM ADDRESS 105 x [Correct Header Errors]

The correction of single bit errors in the header of ATM cells received by the port is enabled by default. Possible values of x are:

- 0 error correction disabled
- 1 error correction enabled (default)

PARAM ADDRESS 106 x [Discard ATM Cells with Uncorrectable Headers]

ATM cells with uncorrectable header errors received by the port are discarded by default. They are not passed to the ATM Control Point. Possible values of x are:

- 0 discard disabled
- 1 discard enabled (default)

PARAM ADDRESS 109 x [Generate Header Error Control (HEC) Field]

The generation of the HEC field in ATM cells that are to be transmitted over the ATM port is performed by default. The port generates the HEC field and inserts it into the transmitted cells. Applications that require the ATM Control Point to generate the field should disable this function. Possible values of x are:

- 0 generation disabled
- 1 generation enabled (default)

PARAM ADDRESS 10A x [Monitoring of Signal Label Mismatch Failures]

Signal label mismatch failures are monitored by the port by default. The port indicates label mismatch failures when the C2 byte in the SDH path overhead received does not contain the proper value. The use of this monitoring is optional. Possible values of x are:

- 0 monitoring disabled
- 1 monitoring enabled (default)

PARAM ADDRESS 18D x [Path Trace Format]

(STM1 only) The path trace format applies to both receive and transmit path traces. By default, it is set to a repeating 64-byte message. The trace can also be set to a repeating 16-byte message, with the first byte optionally containing a CRC7 calculated over the message. Possible values of x are:

- 00 to FF for each byte (max. 64 bytes) ;00 for each byte (default)

PARAM ADDRESS 10B x [Monitoring of Path Trace Mismatch Failures]

Path trace mismatch failures are not monitored by default. When enabled, the ATM port indicates path trace mismatch failures when the 64-byte path trace received in the J1 byte in the SDH path overhead received does not match the expected received path trace. The expected path trace should be configured before monitoring is activated. Possible values of x are:

- 0 monitoring disabled (default)
- 1 monitoring enabled

PARAM ADDRESS 10C x [Transmitted Path Trace]

The path trace transmitted by the ATM port in the J1 byte of the SDH overhead, typically a string describing the location of the transmitter, is sent in the path trace field so that the far end VC4 path terminator can verify that is connected to the correct transmitter. If the path trace format has been set at 16 bytes, (see Path Trace Format on page 228), only the first 16 bytes (all set to 0 by default) of this field are significant. If the path trace format contains a CRC7, only bytes 1-15 are significant (a CRC7 is generated for byte 0). Possible values of x are:

- 00 to FF for each byte (max. 64 bytes) ;00 for each byte (default)

PARAM ADDRESS 14C - 18B x [Expected Received Path Trace]

If the monitoring of path trace mismatches is enabled, the value assigned to the expected path trace is compared with the received path trace to determine if a mismatch is present. If the path trace format contains a CRC7, only bytes 1-15 are significant (a CRC7 is generated for byte 0). By default, the expected received path trace has all bytes set to zeroes. Possible values of *x* are:

00 to **FF** for each byte (max. 64 bytes) ;**00** for each byte (default)

PARAM ADDRESS 18C x [Addition of Coset Polynomial in ATM Cell Headers]


(STM1 only) The addition of the coset polynomial to the HEC byte in the ATM cell headers is performed by default. Possible values of *x* are:

- 0** coset polynomial not added
- 1** coset polynomial added (default)

SHOW PORT Parameters

See "SHOW PORT Parameters" on page 215.

WRAP

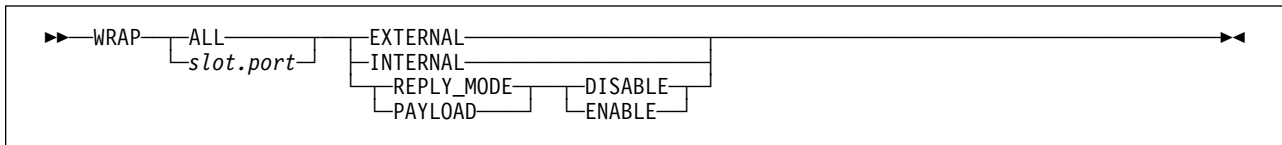

slot.port, ALL, EXTERNAL, INTERNAL, REPLY_MODE, DISABLE, ENABLE

See "WRAP" on page 204 for information on these standard WRAP parameters.

PAYLOAD

For all WAN 2 modules.

Appendix B. Maintenance Mode Commands

Maintenance mode is an operating mode that provides a minimal number of commands for exceptional situations where the 8265 is unable to function normally.

Maintenance mode is available with both the IISP and PNNI code cards.

The Control Point enters Maintenance mode:

- When diagnostics procedures determine that the switch is not able to operate normally.
- When the Administrator enters the MAINTAIN command during normal operation.

Maintenance mode commands should only be used by experienced users.

Maintenance Mode Functions

Available functions in Maintenance mode are:


- Viewing and changing the IP address of the Control Point:
 - SHOW IP_ADDRESS
 - SET IP_ADDRESS
 - CLEAR IP_ADDRESS
- Viewing and changing the Ethernet MAC address of the Control Point:
 - SHOW MAC_ADDRESS
 - SET MAC_ADDRESS
 - CLEAR MAC_ADDRESS
- Viewing and changing the default gateway:
 - SHOW DEFAULT_GATEWAY
 - SET DEFAULT_GATEWAY
 - CLEAR DEFAULT_GATEWAY
- Clearing the current settings in the Control Point and restoring their default values:
 - CLEAR ALL
 - CLEAR CONFIGURATION
- Downloading new boot or operational code to the Control Point and specifying which operational code will be loaded:
 - USE BAUD
 - DOWNLOAD OUT_OF_BAND
 - SHOW ERRORS
 - SHOW FLASH
 - SWAP ACTIVE
- Rebooting the ATM Subsystem:
 - BOOT
 - DOWNLOAD OUT_OF_BAND BOOT

BOOT

The BOOT command ends Maintenance mode and boots the ATM subsystem using the ATM operational code in the "Active" area of the Flash EEPROM. BOOT does the following:

- Resets the hardware of all ATM modules in the 8265 switch.
- Runs ATM diagnostics if they are enabled.
- Activates the new operational software downloaded to the flash EEPROM.

Once the ATM subsystem boots up with the new operational software, press Enter to redisplay the password prompt and log on to the system.




▶▶—BOOT—▶▶

Usage Notes

- Use the SHOW FLASH command to view the levels of the "Active" and "Backup" Operational code and of Boot code.
- After the ATM modules reboot, you must press Enter again to display the Password prompt.

CLEAR

This command erases all or selected settings in the Control Point.

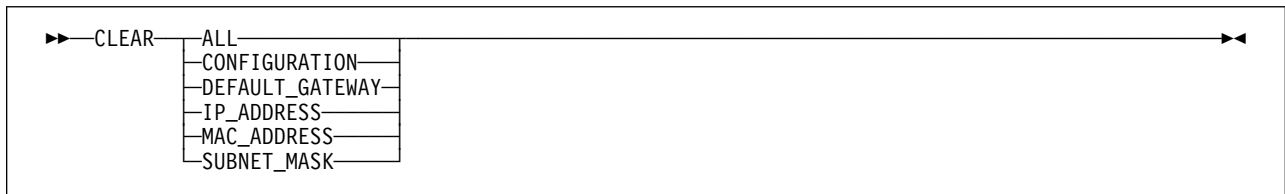

ALL Erases all Control Point settings and resets them to their default values. This is the most destructive of the CLEAR options. Use it with caution.

CONFIGURATION

Erases the contents of all configuration tables (such as module and port settings, VPCs, PVCs, and so on). This parameter does not affect flags (such as diagnostics and operational code areas) or basic device addresses (such as default gateway and IP address).

DEFAULT_GATEWAY

Erases the address of the default gateway router.

IP_ADDRESS

Erases the IP address of the Control Point.

MAC_ADDRESS

Reverts the Ethernet MAC address of the Control Point to the burned-in address (BIA).

SUBNET_MASK

Erases the subnet mask of the Control Point.


Usage Notes

- CLEAR ALL sets area 1 of the Operational Flash EEPROM to "Active".
- After entering CLEAR CONFIGURATION or CLEAR ALL, the current settings remain active until you restart normal operation with the BOOT or DOWNLOAD OUT_OF_BAND BOOT command.
- If the configuration console uses different SET TERMINAL values than the defaults, and you clear the configuration before entering the BOOT command, you may lose the console connection. In this case, you must either reconfigure the console to the factory-default settings or attach another console that uses these settings.
- If you insert a CPSW module in another switch before clearing its current configuration, the module will start up with the current configuration instead of with its default settings. As a result, the ATM subsystem may not operate properly and some ATM connections may not be established.

DOWNLOAD OUT_OF_BAND

Use this command to load IBM code updates from a workstation attached to the RS-232 console port operating in normal mode (not in SLIP mode).

The code you download is stored in the flash EEPROM of the CPSW module and replaces any previous code versions stored there.

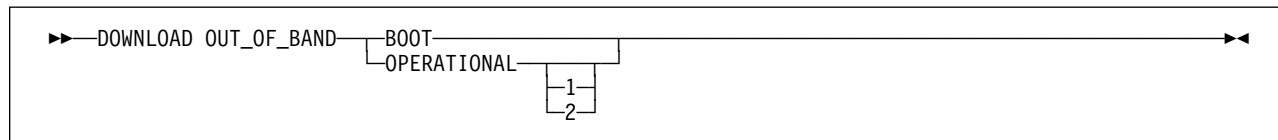

BOOT Downloads boot code to flash EEPROM and resets the ATM subsystem.

OPERATIONAL

Downloads operational code to flash EEPROM. Optionally, you can specify into which area of the EEPROM the code is placed:

1 | 2 (**For IBM service engineers only.**) Specifies the area in the Operational Flash EEPROM into which the new code should be downloaded.

If you do not specify an area, the new code is downloaded into the "Inactive" area. This is the normal use of the command. In this case, you must use SWAP ACTIVE to make the new code the "Active" code.

If you specify area 1 or 2, that area becomes the "Active" area when you leave Maintenance mode.

Usage Notes

- To activate the new Operational microcode, enter the BOOT command.

Example

Unsuccessful Download: The following example shows how an error message is displayed when the command is not successfully run:

```
>> download out_of_band operational
Download failed: 00 00 00 05
>>
```

When a download out-of-band operation fails, one of the following codes (eight hexadecimal digits) is displayed:

00 00 00 03	Link broken during download
00 00 00 05	Ten consecutive errors or timeouts before receiving a good packet
00 00 00 0D	Transfer canceled by the sender
00 00 10 00	Error in the download program
00 00 1r rr	The flash area for the new operational program could not be cleared; rrr is returned by flash support

00 02 00 00 to 00 02 00 07

Bad file header

00 03 00 01 to 00 03 00 07

Bad file contents

00 03 2r rr Writing a part of the new operational program in flash memory failed; rrr is returned by flash support

00 04 00 04 Unexpected end of file

00 04 00 08 Checksum of the received data is not the module checksum

00 04 20 01 to 00 04 20 07

Bad file contents

00 04 3r rr Writing the end of the new operational program in flash memory failed; rrr is returned by flash support


00 04 4r rr Checking the new operational program in flash memory failed; rrr is returned by flash support

00 04 5r rr Writing the new boot program in flash memory failed; rrr is returned by flash support

Maintenance Mode SET

SET

The SET commands in Maintenance mode set the basic flags and device settings for the Control Point. All settings entered with the SET command are saved immediately to NVRAM.

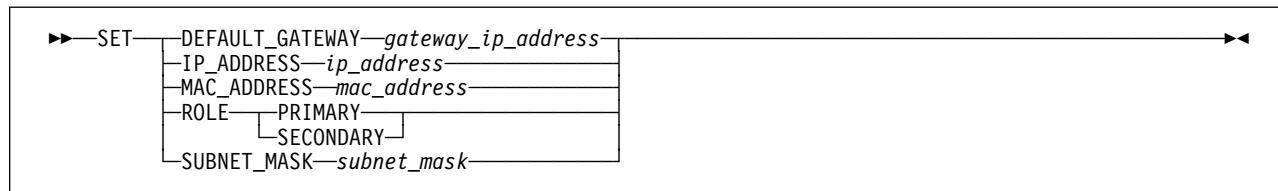

gateway_ip_address

Specifies the IP address of the router in the format *n.n.n.n*, where *n* is a number between 0 and 255.

ip_address

Specifies the IP address of the CPSW in the format *n.n.n.n*, where *n* is 0-255.

mac_address

Specifies the individual MAC address as 6 bytes in hexadecimal, with the bytes separated by a dash (-). The address must be in 802.3 format (locally and universally administered addresses are supported). If the MAC address is not specified, or if it is set to '00-00-00-00-00-00', the corresponding burned-in address is used.

PRIMARY | SECONDARY

Specifies whether the local CPSW module is to be the "Active" CPSW (PRIMARY) or the "Standby" CPSW (SECONDARY).

Note: When the ATM subsystem elects which CPSW is to be active (at power-on for example), the CPSW that is defined as PRIMARY will be chosen. If both CPSWs have been defined as PRIMARY (or both as SECONDARY, the module in slots 9 & 10 is selected as PRIMARY.

subnet_mask

Specifies the subnet mask used by the CPSW.

SHOW

Use this command to display basic device settings for the Control Point.

```

▶—SHOW—
|
|—DEFAULT_GATEWAY—
|—ERRORS—
|—FLASH—
|—IP_ADDRESS—
|—MAC_ADDRESS—
|—RAM—
|—ROLE—
|—SUBNET_MASK—
  
```

DEFAULT_GATEWAY

Displays the current IP address for the default gateway.

ERRORS Displays the results of an unsuccessful DOWNLOAD OUT_OF_BAND.

FLASH Displays the code levels in the Operational and Boot Flash EEPROMs.

IP_ADDRESS

Displays the current IP address for the Control Point.

MAC_ADDRESS

Displays the current MAC address for the Control Point.

RAM Displays the amount of Random Access Memory (RAM) installed.

ROLE Displays the current role of the CPSW module.

SUBNET_MASK

Displays the current subnet mask for the Control Point.

Examples

ERRORS: This example shows the result of the SHOW ERRORS command after an unsuccessful DOWNLOAD OUT_OF_BAND command:

```

>> show errors
FF FF 0002 0007
>>
  
```

Maintenance Mode SHOW

FLASH: This example shows the result of the SHOW FLASH command after a successful DOWNLOAD OUT_OF_BAND command:

```
>> show flash

Boot:
Good checksum.
Map of Jan 10 08:12:34 1996
v.2.1.0
Oper 1 of 2: ACTIVE
Good checksum
Map of Jan 11 09:23:45 1996
v.1.2.3
Oper 2 of 2:
Good checksum
Map of Dec 12 10:34:56 1995
v.1.2.0.
>>
```

SWAP ACTIVE

Use this command to change the "Backup" (inactive) Operational Flash EEPROM to "Active".


```
▶▶—SWAP ACTIVE—◀◀
```

Usage Notes

- Use the SHOW FLASH command to verify which of the two flash EEPROMs is the active one ("oper 1 of 2", or "oper 2 of 2"), and which versions of the ATM Control Point operational microcode are present.

USE BAUD

Use this command to increase the baud rate of the configuration console connection while performing a DOWNLOAD OUT_OF_BAND, and to reset the baud rate after the download is finished.



Usage Notes

- Changes to the baud rate made while in Maintenance mode are not saved and the setting reverts to its saved value at the next BOOT or system reset.

Appendix C. Notices

References in this publication to IBM products, programs, or services do not imply that IBM intends to make these available in all countries in which IBM operates.

Any reference to an IBM product, program, or service is not intended to state or imply that only IBM's product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any of IBM's intellectual property rights may be used instead of the IBM product, program, or service. Evaluation and verification of operation in conjunction with other products, except those expressly designated by IBM, is the user's responsibility.

IBM may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to the IBM Corporation, IBM Director of Licensing, 500 Columbus Avenue, Thornwood, New York 10594, U.S.A.

Product Page/Warranties

The following paragraph does not apply to the United Kingdom or to any country where such provisions are inconsistent with local law.

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore this statement may not apply to you.

Industry Standards Reflected in This Product

The IBM 8265 Nways ATM Switch complies with the following ATM standards:

- ATM User-Network Interface (UNI) Specification V3.0, V3.1, and V4.0 ATM Forum
- ATM Private Network-Network Interface (PNNI) Phase 1 Specification V1.0, ATM Forum
- LAN Emulation Over ATM Specifications V1.0, ATM Forum
- Q.2110 Service Specific Connection-Oriented Protocol (SSCOP), ITU, March 17, 1994
- Q.2130 Service Specific Coordination Function (SSCF) for support of signaling at the user-network interface, March 17, 1994.

The IBM 8265 Nways ATM Switch is designed according to the specifications of the following industry standards as understood and interpreted by IBM as of September 1994:

- RFC854 - TELNET protocol
- RFC1350 - Trivial File Transfer Protocol (TFTP)
- RFC1577 - Classical IP and ARP (Address Resolution Protocol) over ATM
- SNMP:
 - RFC1155 - Structure and Identification of Management Information (SMI) for TCP/IP based Internet.
 - RFC1156 - Management Information Base (MIB) for network management of TCP/IP based Internets (MIB-I)
 - RFC1157 - Simple Network Management Protocol (SNMP)
 - RFC1212 - Concise MIB definitions
 - RFC1213 - Management Information Base (MIB) for network management of TCP/IP based Internets (MIB-II)
 - RFC1215 - Convention for defining traps for use with SNMP.

Trademarks and Service Marks

The following terms, denoted by an asterisk (*) in this publication, are trademarks or service marks of the IBM Corporation in the United States or other countries:

AIX

IBM

Nways

Bibliography

8265 Documentation

For additional information on the IBM 8265 Nways ATM Switch, please refer to the following documents. The documents are included on the *IBM 8265 Nways ATM Switch Documentation Library* CD, SA33-0454.

IBM 8265 Nways ATM Switch Product Description, GA33-0449.

IBM 8265 Nways ATM Switch User's Guide, SA33-0456.

IBM 8265 Nways ATM Switch Command Reference Guide, SA33-0458.

IBM 8265 Nways ATM Switch Installation Guide, SA33-0441.

IBM 8265 Nways ATM Switch Planning and Site Preparation Guide, GA33-0460.

IBM 8265 Nways ATM Switch Media Module Reference Guide, SA33-0459.

IBM 8265 Nways ATM Switch Problem Determination and Service Guide, SY33-2128.

These documents are also available via the Internet:
<http://www.networking.ibm.com/did/8265bks.html>

Related Documentation

The following related publications are included on the *IBM 8265 Nways ATM Switch Documentation Library* CD, SA33-0454.

Multiprotocol Switched Services (MSS) Server Introduction and Planning Guide, GC30-3820.

A-MSS 2.5 Server Module / A-MSS Server Module Quick Reference Card, GX27-4018.

Nways Multiprotocol Switched Services Server Interface Configuration and Software User's Guide, SC30-3818.

Nways Multiprotocol Switched Services Configuring Protocols and Features, SC30-3819.

Multiprotocol Switched Services (MSS) Server Service and Maintenance Manual, GY27-0354.

Nways Multiprotocol Switched Services (MSS) Server Module Installation and Initial Configuration Guide, GA27-4141.

Nways MAS/MRS/MSS/MSSC Library, Configuration Program User's Guide for Nways Multiprotocol Access, Routing and Switched Services, GC30-3830.

Nways Event Logging System Messages Guide, SC30-3682.

8271 LAN Switch Module Planning and Installation Guide, GA27-4162.

8272 LAN Switch Module Planning and Installation Guide, GA27-4163.

4-Port 10BASE-T & 3-Port 10BASE-FL UFCs Planning and Installation Guide, GA27-4120.

100BASE-TX and 100BASE-FX Universal Feature Cards Planning and Installation Guide, GA27-4096.

ATM 155 Mbps Multimode Fiber Universal Feature Card Planning and Installation Guide, GA27-4156.

2-Port Fiber and 4-Port UTP/STP Token-Ring Enhanced Universal Feature Card Planning and Installation Guide, GA27-4168.

IBM Video Distribution Module User's Guide, GA27-4173.

The 8260 Nways ATM Kit Development Program, We Carry Your Creativity to ATM, GA33-0371.

ATM Forum

For more information on ATM Forum specifications, refer to the following:

- *UNI Specification – Versions 3.0, 3.1, and 4.0*
- *P-NNI Specification Version 1.0*
- *ILMI Specification Version 4.0*
- *UNI Traffic Management Version 4.0*

Readers' Comments — We'd Like to Hear from You

**8265 Nways ATM Switch
Command Reference Guide
Publication No. SA33-0458-02**

Please send us your comments concerning this book. We will greatly appreciate them and will consider them for later releases of the present book.

If you prefer sending comments by FAX or electronically, use:

- FAX: 33 4 93 24 77 97
- IBM Internal Use: LGERCF at IBMFR
- Internet: lgercf@fr.ibm.com

In advance, thank you.

Your comments:

Name

Address

Company or Organization

Phone No.



Fold and Tape

Please do not staple

Fold and Tape

PLACE
POSTAGE
STAMP
HERE

IBM France
Centre d'Etudes et Recherches
Service 0798 - BP 79
06610 La Gaude
France

Fold and Tape

Please do not staple

Fold and Tape



SA33-0458-02

