


**Memorex®**

**MVT2136A**

# **SERVICE MANUAL**

---

**COLOR TELEVISION/VIDEO CASSETTE RECORDER**

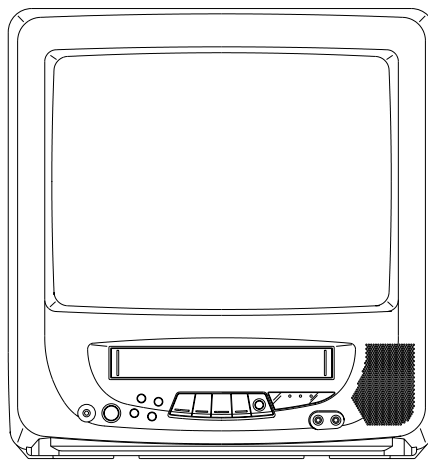

**VHS**

**ORIGINAL  
MFR'S VERSION A**

## SERVICING NOTICES ON CHECKING

### 1. KEEP THE NOTICES


As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

### 2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

### 3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a  mark, the designated parts must be used.

### 4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

### 5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

### 6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.

Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.

Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

### 7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

#### (INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the external exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

#### **[Note 1]**

If you have not the 500V insulation resistance meter, use a Tester.

#### **[Note 2]**

External exposure metal: Antenna terminal  
Earphone jack

## HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

#### 1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

#### 2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

# CONTENTS

<b>SERVICING NOTICES ON CHECKING</b> .....	A1-1
<b>HOW TO ORDER PARTS</b> .....	A1-1
<b>CONTENTS</b> .....	A2-1
<b>GENERAL SPECIFICATIONS</b> .....	A3-1~A3-6
<b>DISASSEMBLY INSTRUCTIONS</b>	
1. REMOVAL OF MECHANICAL PARTS AND P. C. BOARDS .....	B1-1, B1-2
2. REMOVAL OF DECK PARTS .....	B2-1~B2-5
3. REMOVAL OF ANODE CAP .....	B3-1
<b>KEY TO ABBREVIATIONS</b> .....	C1-1, C1-2
<b>SERVICE MODE LIST</b> .....	C2-1
<b>PREVENTIVE CHECKS AND SERVICE INTERVALS</b> .....	C3-1, C3-2
<b>NOTE FOR THE REPLACING OF MEMORY IC</b> .....	C4-1
<b>SERVICING FIXTURES AND TOOLS</b> .....	C5-1
<b>PREPARATION FOR SERVICING</b> .....	C5-1
<b>MECHANICAL ADJUSTMENTS</b> .....	D1-1~D1-4
<b>ELECTRICAL ADJUSTMENTS</b> .....	D2-1~D2-5
<b>BLOCK DIAGRAMS</b>	
TV .....	E-1, E-2
Y/C/AUDIO/HEAD AMP/IN/OUT .....	E-3, E-4
MICON/POWER/OPERATION/DECK .....	E-5, E-6
<b>PRINTED CIRCUIT BOARDS</b>	
OPERATION/DECK .....	F-1, F-2
SYSCON/CRT .....	F-3~F-6
<b>SCHEMATIC DIAGRAMS</b>	
Y/C/AUDIO/HEAD AMP .....	G-1, G-2
MICON .....	G-3, G-4
IN/OUT .....	G-5, G-6
CHROMA/IF .....	G-7, G-8
SOUND AMP .....	G-9, G-10
POWER .....	G-11, G-12
DEFLECTION .....	G-13, G-14
CRT .....	G-15, G-16
OPERATION .....	G-17, G-18
DECK .....	G-19, G-20
INTERCONNECTION DIAGRAM .....	G-21, G-22
<b>WAVEFORMS</b> .....	H-1, H-2
<b>MECHANICAL EXPLODED VIEWS</b> .....	I-1, I-2
<b>CHASSIS EXPLODED VIEWS</b> .....	I-3, I-4
<b>MECHANICAL REPLACEMENT PARTS LIST</b> .....	J1-1
<b>CHASSIS REPLACEMENT PARTS LIST</b> .....	J2-1
<b>ELECTRICAL REPLACEMENT PARTS LIST</b> .....	J3-1~J3-3

## GENERAL SPECIFICATIONS

G-1.Outline of the Product

13 inch(335.4mmV):Measured diagonally  
 Color CRT 90 degree deflection  
3 -Speed 1/2" Video Cassette Recorder

VHS                      Recorder/Player  
VHS-C                      Player

G-2.VCR Format

VHS Standard    NTSC    PAL    SECAM    PAL-M    PAL-N  
VHS Hi-Fi Audio System

G-3.Video Recording System

:Rotary, slant azimuth two head helical scan system

Luminance Component

:FM recording

Chrominance Component

:Low frequency converted direct recording

G-4.Broadcasting System

US System M

G-5.Color System

NTSC    PAL    SECAM or Monochrome signal

G-6.NTSC Playback(PAL 60Hz)

Yes    No

G-7.MESECAM

Yes    No

G-8.Cassette Tape

VHS type video cassette tape    Width 12.65mm (1/2 Inch)  
VHS-C type video cassette tape    Width 12.65mm (1/2 Inch)

G-9.Tape Speed

NTSC or PAL-M

PAL or SECAM

SP    33.35 mm/sec                      SP    23.39 mm/sec  
LP    16.67 mm/sec                      LP    11.69 mm/sec  
SLP    11.12 mm/sec

G-10.Recording/Playback Time

NTSC or PAL-M

at SP    Mode Max. 210 min. (with T-210 cassette)  
at LP    Mode Max. 420 min. (with T-210 cassette)  
at SLP    Mode Max. 630 min. (with T-210 cassette)

PAL or SECAM

at SP    Mode Max. 300 min. (with E-300 cassette)  
at LP    Mode Max. 600 min. (with E-300 cassette)

G-11.Use Deck

OVD-5                      OVD-6                      OVD-6S                      OVD-6S(Vertical)

G-12.Rewind/Fast Forward Time(Approx.)

FF:1'48" / Rew:1'48"                      (with E-180 cassette)

G-13.Search Speed

SP                      3 and 5 Times  
LP                      7 and 9 Times  
SLP                      9 and 15 Times

G-14.Slow Speed

SP                      \_\_\_\_\_ Times  
LP                      \_\_\_\_\_ Times  
SLP                      \_\_\_\_\_ Times

G-15.Frame Advance

SP                      \_\_\_\_\_ Times  
LP                      \_\_\_\_\_ Times  
SLP                      \_\_\_\_\_ Times

G-16.Antenna Input Impedance

VHF/UHF    75 ohm unbalanced

## GENERAL SPECIFICATIONS

- G-17. Tuner and Receiving channel  1 Tuner System  2 Tuner System  
 Tuner : Contactless Electric tuner  
 Oscar(W/O HYPER)  Oscar(W/ HYPER)  France CATV)  Others  
 Channel Coverage 2 ~ 69 , 4A , A-5 ~ A-1 , A ~ I , J ~ W , W+1 ~ W+84  
 Tuning System  Frequency syn.  Voltage syn.  Others
- G-18. Preset Channel: -- channels
- G-19. Intermediate Frequency  
 Picture(FP) 45.75 MHz        MHz        MHz  
 Sound (FS) 41.25 MHz        MHz        MHz  
 FP-FS 4.50 MHz        MHz        MHz
- G-20. Stereo/Dual TV Sound  
 Yes( NICAM  GERMAN  USA  JAPAN)  No
- G-21. Video Signal  
 Input Level 1 Vp-p / 75 ohm  
 Output Level -- Vp-p / -- ohm  
 S/N Ratio 50 dB (Weighted)  
 Horizontal Resolution at SP Mode 220 Lines
- G-22. Audio Signal  
 Input Level  
 Line -- dB / -- Kohm  
 RCA - 8 dB / 50 Kohm  
 Output Level  
 Line -- dB / -- Kohm  
 RCA -- dB / -- Kohm  
 (0dB=0.775 V rms)  
 S/N Ratio at SP Mode 38 dB  
 Harmonic Distortion : 1.5 % (1KHz)  
 Frequency Response : at SP Mode 100 Hz ~ 10 KHz  
 at LP Mode 100 Hz ~ 6 KHz  
 at SLP Mode 100 Hz ~ 4 KHz
- Hi-Fi Audio Signal  NONE  
 Depth Multiplex Recording Rotary, Slant Azimuth Two Head  
 System Helical Scan System  
 Dynamic Range : More than -- dB  
 Wow And Flutter : Less than -- % Wrms  
 Channel Separation : More than -- dB  
 Harmonic Distortion : Less than -- %
- G-23. Heads  
 Video  2 Rotary Heads  
 FM Audio         Rotary Heads  
 Audio / Control  1 Stationary Head (  Mono  Stereo(L,R) )  
 Erase  1 Full Track Erase
- G-24. Motor: 3 Motors  
 Tape/Cassette Loading  
 Cylinder (Direct Drive)  
 Capstan (Direct Drive)

## GENERAL SPECIFICATIONS

G-25. Power Source

120 V     AC 50Hz     AC 60Hz  
 EXT DC Jack    --    V

G-26. Power Consumption:

70 W at AC    120 V    60 Hz  
 -- W at DC    --- V  
 (at TV and VCR ON)  
 Stand by:    5 W at AC    120 V    60 Hz  
 Per Year:    -- kWh / Year

G-27. Dimensions (Approx.)

362 mm(W)    370.5 mm(D)    382 mm(H)

G-28. Weight (Approx.)

Net : 12.5 Kg ( 27.6 lbs)  
 Gross: 14.5 Kg ( 32.2 lbs)

G-29. Cabinet Material

Cabinet Front:	<input checked="" type="checkbox"/> PS	<input type="checkbox"/> 94HB	<input checked="" type="checkbox"/> DECABROM
	<input type="checkbox"/> ABS	<input type="checkbox"/> 94V2	<input type="checkbox"/> NON-DECA
		<input checked="" type="checkbox"/> 94V0	
 Cabinet Rear:	<input checked="" type="checkbox"/> PS	<input type="checkbox"/> 94HB	<input checked="" type="checkbox"/> DECABROM
	<input type="checkbox"/> ABS	<input type="checkbox"/> 94V2	<input type="checkbox"/> NON-DECA
		<input checked="" type="checkbox"/> 94V0	

G-30. Cassette Loading System:

Front Cassette Loading System  
 Top Loading System

G-31. Tape Counter:

Linear Time Tape Counter

G-32. Protector:

Power Fuse     Dew Sensor

G-33. Regulation

Safety

<input checked="" type="checkbox"/> UL	<input checked="" type="checkbox"/> CSA	<input type="checkbox"/> SAA	<input type="checkbox"/> SI	<input type="checkbox"/> CE	<input type="checkbox"/> SEV
<input type="checkbox"/> BS	<input type="checkbox"/> NF	<input type="checkbox"/> NEMKO	<input type="checkbox"/> FEMKO	<input type="checkbox"/> DEMKO	<input type="checkbox"/> IEC65
<input type="checkbox"/> SEMKO	<input type="checkbox"/> NZ	<input type="checkbox"/> HOMOLO	<input type="checkbox"/> SABS	<input type="checkbox"/> CNS	<input type="checkbox"/> SISIR
<input type="checkbox"/> NOM	<input type="checkbox"/> AS3159	<input type="checkbox"/> DENTORI	<input type="checkbox"/> UNE	<input type="checkbox"/> GOST	<input type="checkbox"/> NONE

Radiation

<input checked="" type="checkbox"/> FCC	<input checked="" type="checkbox"/> DOC	<input type="checkbox"/> FTZ	<input type="checkbox"/> PTT	<input type="checkbox"/> CE	<input type="checkbox"/> SEV
<input type="checkbox"/> SABA	<input type="checkbox"/> SI	<input type="checkbox"/> NF	<input type="checkbox"/> NZ	<input type="checkbox"/> HOMOLO	<input type="checkbox"/> UNE
<input type="checkbox"/> CNS	<input type="checkbox"/> CISPR 13	<input type="checkbox"/> DENTORI	<input type="checkbox"/> AS/NZS	<input type="checkbox"/> NONE	

X- Radiation

<input checked="" type="checkbox"/> DHHS	<input checked="" type="checkbox"/> HWC	<input type="checkbox"/> PTB	<input type="checkbox"/> DENTORI	<input type="checkbox"/> NONE
--	---	------------------------------	----------------------------------	-------------------------------

G-34. Temperature

Operation    5 °C ~ 40 °C  
 Storage    -20 °C ~ 60 °C

G-35. Operating Humidity

Less than 80 %RH

G-36. Clock and Timer

Calendar: 1990/1/1 ~ 2081/12/31

Built-in 1 Month 8 Events Programmable Timer

One Touch Recording : Max Time 5 Hours

Sleep Timer     Yes Max 120 Min. ( 10 Min. Step)     No

On/Off Timer     Yes 1 Programs     No

Wake Up Timer     Yes \_\_\_\_\_ Programs     No

G-37. Timer back up Time

More than 1/12 Minutes (at Power Off Mode)







## GENERAL SPECIFICATIONS

### G-48.Magnetic Field

<input checked="" type="checkbox"/> BV : +0.45G	<input type="checkbox"/> BV : +0.35G	<input type="checkbox"/> BV : +0.25G
BH : 0.18G	BH : 0.30G	BH : 0.30G
<input type="checkbox"/> BV : -0.15G	<input type="checkbox"/> BV : -0.25G	<input type="checkbox"/> BV : -0.50G
BH : 0.15G	BH : 0.15G	BH : 0.30G

### G-49.Remote Control Unit: RC-CG

Glow in Dark Remocon Yes No  
 Power Source: D.C 3 V Battery UM - 4 x 2  
 Control Key: Total 41 Key


<input checked="" type="checkbox"/> 0	<input checked="" type="checkbox"/> Ch Up	<input checked="" type="checkbox"/> Power
<input checked="" type="checkbox"/> 1	<input checked="" type="checkbox"/> Ch Down	<input checked="" type="checkbox"/> Eject
<input checked="" type="checkbox"/> 2	<input checked="" type="checkbox"/> Volume Up	<input checked="" type="checkbox"/> Play
<input checked="" type="checkbox"/> 3	<input checked="" type="checkbox"/> Volume Down	<input checked="" type="checkbox"/> Stop
<input checked="" type="checkbox"/> 4	<input checked="" type="checkbox"/> Input Select	<input checked="" type="checkbox"/> F.FWD
<input checked="" type="checkbox"/> 5	<input type="checkbox"/> Audio Select	<input checked="" type="checkbox"/> Rew
<input checked="" type="checkbox"/> 6	<input type="checkbox"/> TV/VCR	<input checked="" type="checkbox"/> Timer Rec
<input checked="" type="checkbox"/> 7	<input checked="" type="checkbox"/> Pause/Still	<input checked="" type="checkbox"/> REC/OTR
<input checked="" type="checkbox"/> 8	<input type="checkbox"/> Slow	<input checked="" type="checkbox"/> Auto Tracking
<input checked="" type="checkbox"/> 9	<input type="checkbox"/> Slow Speed Up	<input checked="" type="checkbox"/> Tracking Up/Set +
<input checked="" type="checkbox"/> Menu	<input type="checkbox"/> Slow Speed Down	<input checked="" type="checkbox"/> Tracking Down/Set -
<input type="checkbox"/> Set Up	<input checked="" type="checkbox"/> Skip Search	<input checked="" type="checkbox"/> Counter Reset
<input type="checkbox"/> Set Down	<input checked="" type="checkbox"/> Speed	<input type="checkbox"/> Clock/Counter
<input checked="" type="checkbox"/> Enter	<input checked="" type="checkbox"/> TV Monitor	<input checked="" type="checkbox"/> Zero Return
<input checked="" type="checkbox"/> Cancel	<input type="checkbox"/> Index	<input type="checkbox"/> One Touch Playback
<input checked="" type="checkbox"/> Call	<input checked="" type="checkbox"/> Program	<input checked="" type="checkbox"/> TV/Caption/Text
<input checked="" type="checkbox"/> Muting	<input type="checkbox"/> Video Plus	<input type="checkbox"/> Caption On/Off
<input checked="" type="checkbox"/> Sleep Timer	<input type="checkbox"/> Program/Video Plus	<input type="checkbox"/> Caption 1/2
<input checked="" type="checkbox"/> Quick View		

# DISASSEMBLY INSTRUCTIONS

## 1. REMOVAL OF MECHANICAL PARTS AND P.C. BOARDS

### 1-1: BACK CABINET (Refer to Fig. 1-1)


1. Remove the 4 screws ①.
2. Remove the screw ② which are used for holding the Back Cabinet.
3. Remove the AC cord from the AC cord hook ③.
4. Remove the Back Cabinet in the direction of arrow.

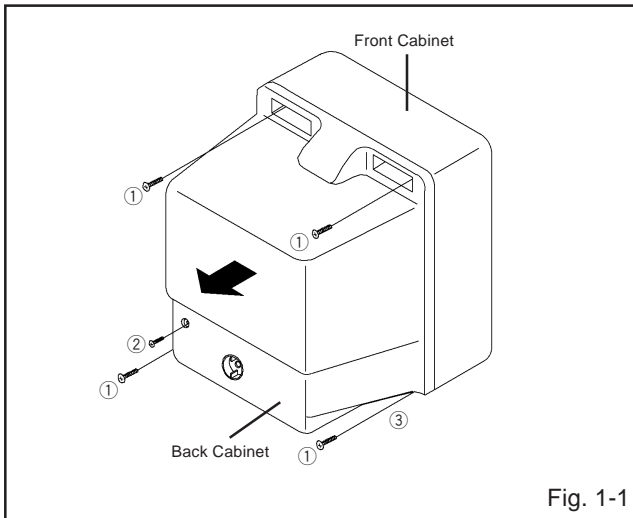

### 1-2: CRT PCB (Refer to Fig. 1-2)


**CAUTION: BEFORE REMOVING THE ANODE CAP, DISCHARGE ELECTRICITY BECAUSE IT CONTAINS HIGH VOLTAGE. BEFORE ATTEMPTING TO REMOVE OR REPAIR ANY PCB, UNPLUG THE POWER CORD FROM THE AC SOURCE.**

1. Remove the Anode Cap.  
(Refer to REMOVAL OF ANODE CAP)
2. Disconnect the following connector: (CP801).
3. Remove the CRT PCB in the direction of arrow.

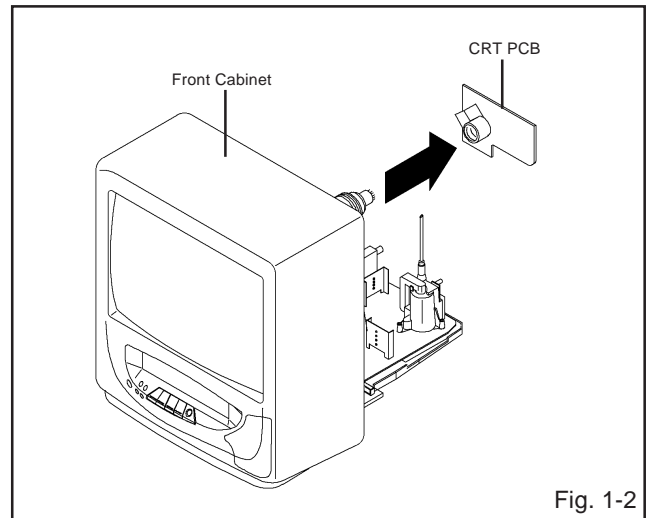

### 1-3: VCR BLOCK (Refer to Fig. 1-3)


1. Remove the 2 screws ①.
2. Disconnect the following connectors: (CP757, CP353, CP401 and CP502).
3. Unlock the support ②.
4. Remove the VCR Block in the direction of arrow.

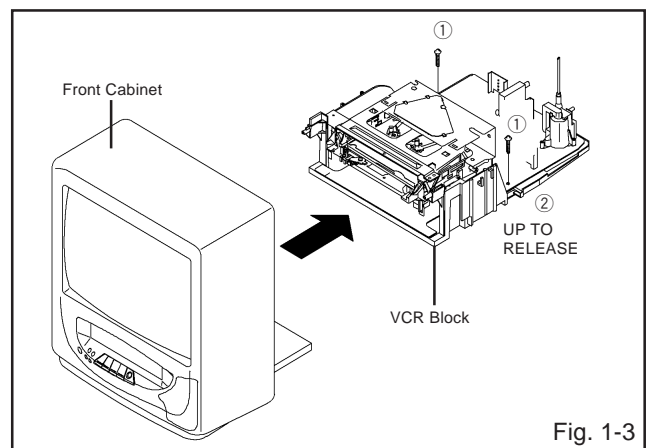

## DISASSEMBLY INSTRUCTIONS


### 1-4: DECK SHIELD PLATE, DECK CHASSIS AND BOTTOM SHIELD (Refer to Fig. 1-4)

1. Remove the 3 screws ①.
2. Remove the 3 screws ②.
3. Remove the Deck Shield Plate in the direction of arrow (A).
4. Disconnect the following connectors: (CP1004, CP1005, CP1006, CP4001, CP4002 and CP4003).
5. Remove the Deck Chassis in the direction of arrow (B).
6. Remove the screw ③.
7. Remove the Bottom Shield in the direction of arrow (C).

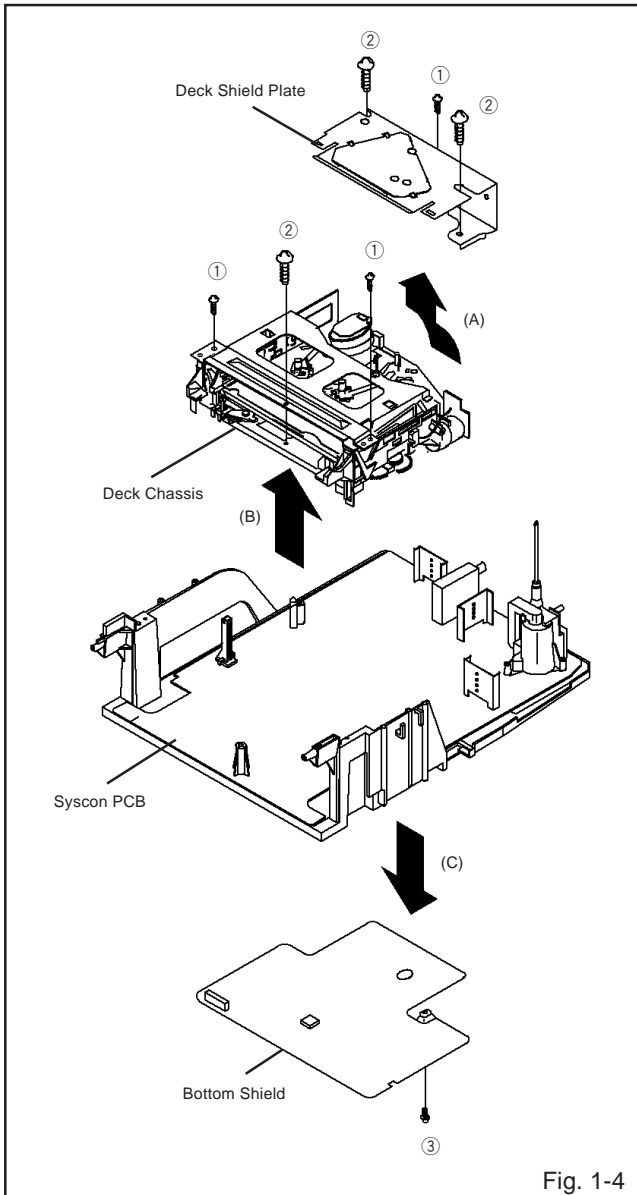

### 1-5: SYSCON PCB (Refer to Fig. 1-5)

1. Remove the screw ①.
2. Remove the Syscon PCB in the direction of arrow.

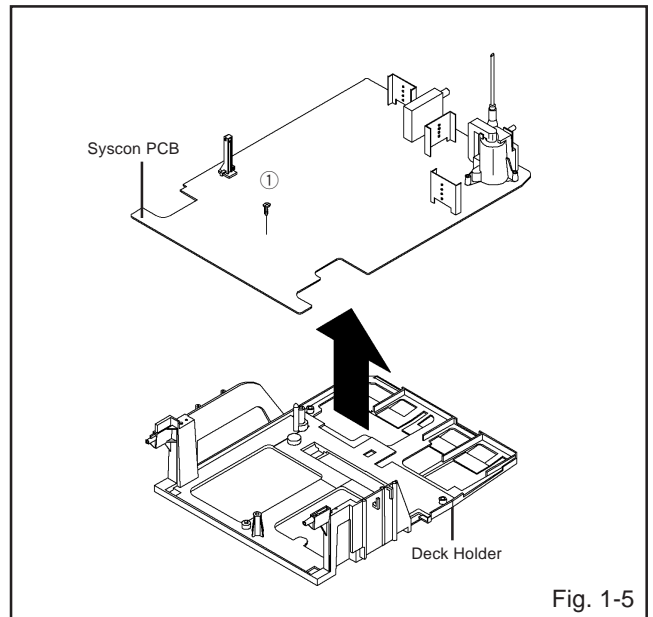

# DISASSEMBLY INSTRUCTIONS

## 2. REMOVAL OF DECK PARTS

### 2-1: TOP BRACKET (Refer to Fig. 2-1)

1. Remove the 2 screws ①.
2. Slide the 2 supports ② and remove the Top Bracket.

#### NOTE

When you install the Top Bracket, install the screw (1) first, then install the screw (2).

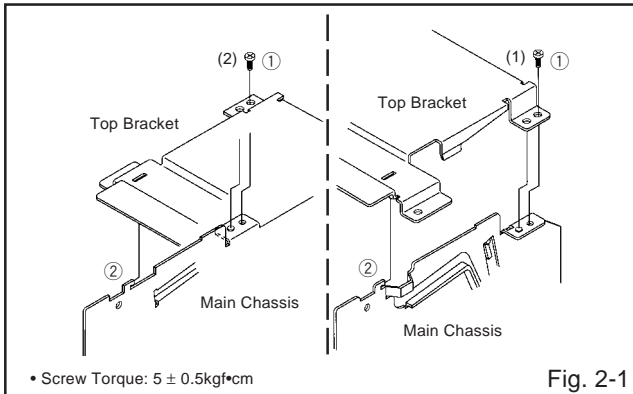


Fig. 2-1

### 2-2: FLAP LEVER/TAPE GUIDE R (Refer to Fig. 2-2)

1. Move the Cassette Holder Ass'y to the back side.
2. Remove the Polyslider Washer ①.
3. Remove the Flap Lever.
4. Unlock the 3 supports ② and remove the Tape Guide R.

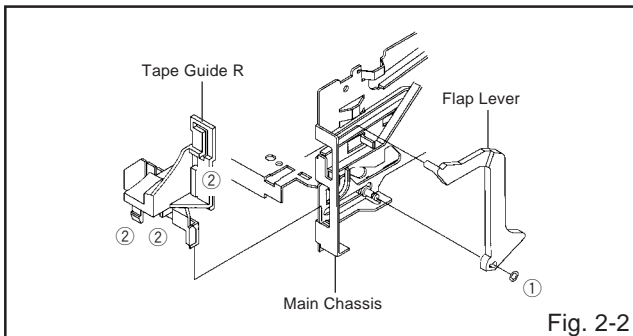


Fig. 2-2

### 2-3: TAPE GUIDE L (Refer to Fig. 2-3-A)

1. Move the Cassette Holder Ass'y to the back side.
2. Unlock the 2 supports ① and remove the Tape Guide L.
3. Remove the REC Lever. (Recorder only)

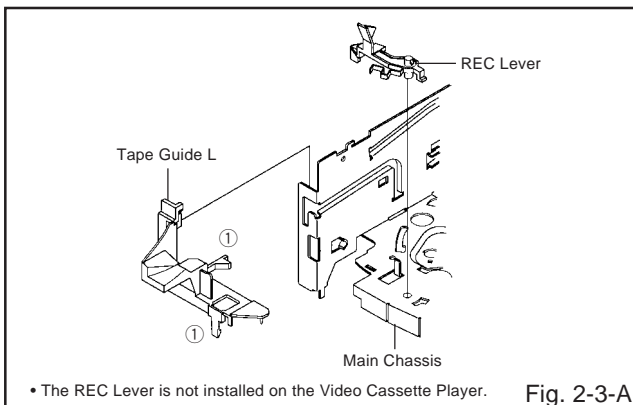


Fig. 2-3-A

#### NOTE

When you install the Tape Guide L, install as shown in the circle of Fig. 2-3-B. (Refer to Fig. 2-3-B)

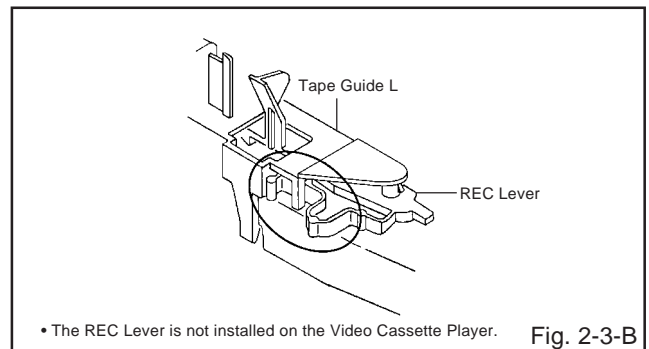


Fig. 2-3-B

### 2-4: CASSETTE HOLDER ASS'Y (Refer to Fig. 2-4)

1. Move the Cassette Holder Ass'y to the front side.
2. Push the Locker R to remove the Cassette Side R.
3. Remove the Cassette Side L.

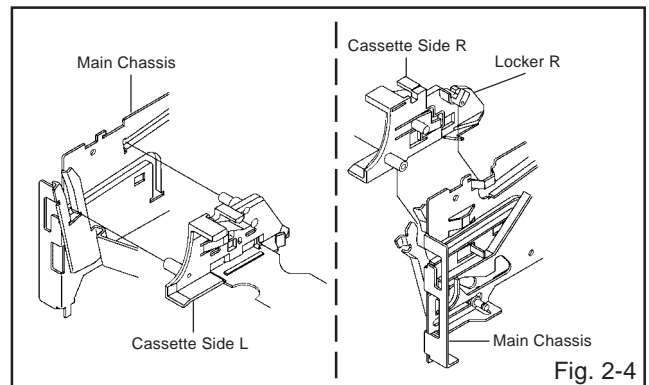


Fig. 2-4

### 2-5: CASSETTE SIDE L/R (Refer to Fig. 2-5)

1. Unlock the 4 supports ① and then remove the Cassette Side L/R.

#### NOTE

When you install the Cassette Side R, be sure to move the Locker R after installing.


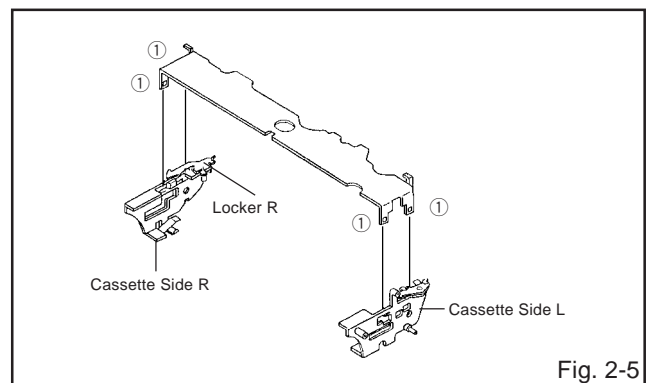


Fig. 2-5

# DISASSEMBLY INSTRUCTIONS


## 2-6: LINK ASS'Y (Refer to Fig. 2-6)

1. Set the Link Ass'y to the Eject position.
2. Remove the (A) side of the Link Ass'y first, then remove the (B) side.

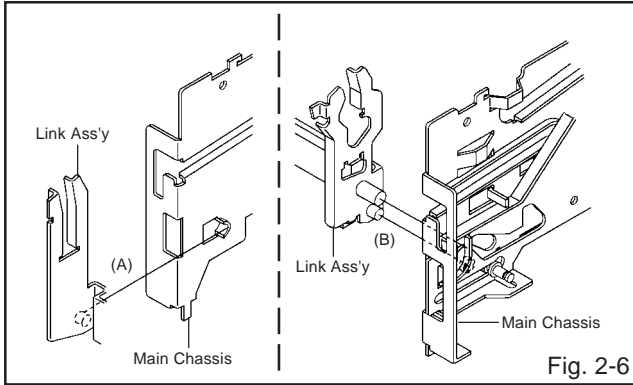


## 2-7: LOADING MOTOR ASS'Y (Refer to Fig. 2-7)

1. Remove the Link Lever.
2. Remove the Dumper Spring.
3. Remove the 2 screws ①.
4. Unlock the support ② and remove the Loading Motor Ass'y.
5. Unlock the 2 supports ③ and remove the Deck PCB (BOT).

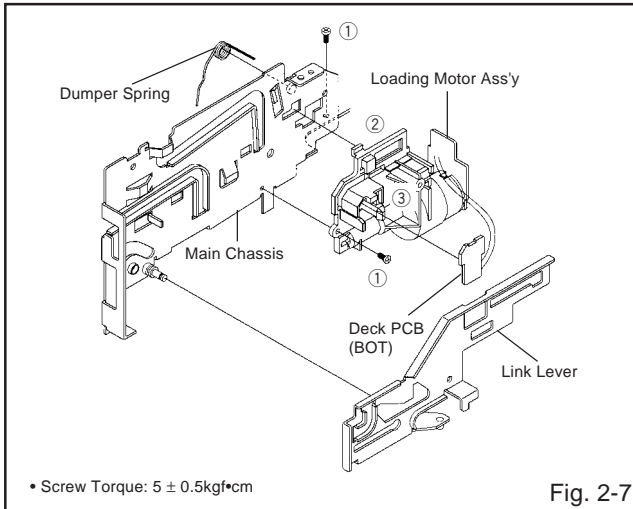


## 2-8: SENSOR COVER L3 (Refer to Fig. 2-8)

1. Unlock the support ① and remove the Sensor Cover L3.

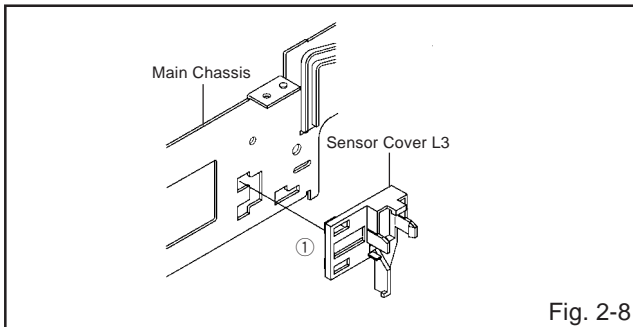


## 2-9: TENSION ASS'Y (Refer to Fig. 2-9-A)

1. Move the Inclined S Ass'y to the back side.
2. Remove the Tension Spring.
3. Unlock the support ① and remove the Tension Arm Ass'y.
4. Remove the Tension Adjust.
5. Unlock the 2 supports ② and remove the Tension Band Ass'y.
6. Unlock the support ③ and remove the Tension Holder.
7. Remove the SS Brake Spring.
8. Remove the SS Arm Brake.

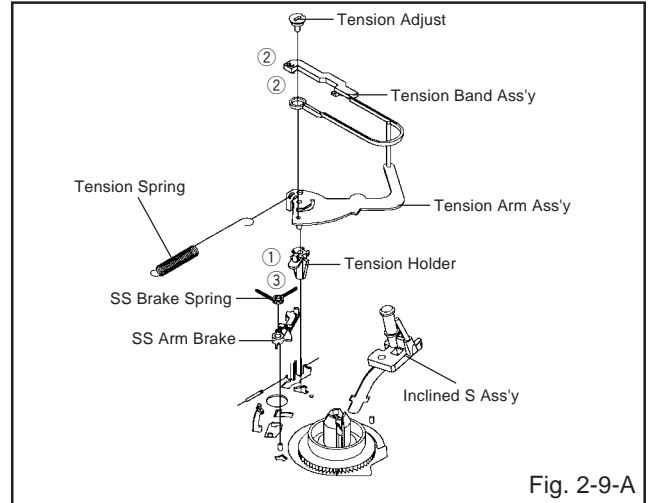


### NOTE

When you install the Tension Adjust, install as shown in Fig. 2-9-B. (Refer to Fig. 2-9-B)

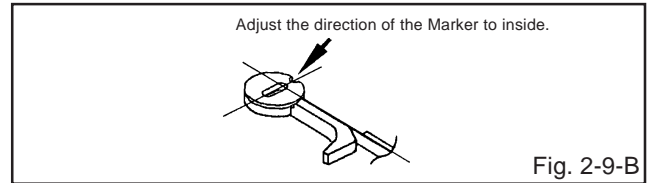

## 2-10: T BRAKE ASS'Y (Refer to Fig. 2-10)

1. Remove the T Brake Spring.
2. Remove the T Brake Ass'y.

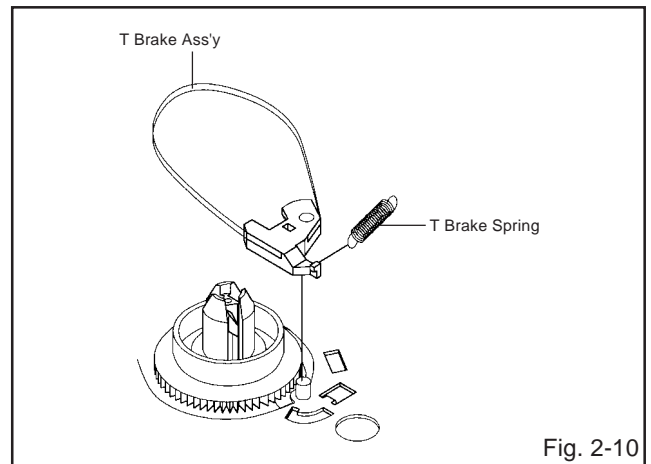

# DISASSEMBLY INSTRUCTIONS

## 2-11: S REEL/T REEL (Refer to Fig. 2-11)

1. Remove the S Reel and T Reel.
2. Remove the 2 Polyslider Washers ①.

### NOTE

1. Take care not to damage the gears of the S Reel and T Reel.
2. The Polyslider Washer may be remained on the back of the reel.
3. Take care not to damage the shaft.
4. Do not touch the section "A" of S Reel and T Reel. (Use gloves.) (Refer to Fig. 2-11) Do not adhere the stains on it.
5. When you install the reel, clean the shaft and oil it (FL OIL #6115). (If you do not oil, noise may be heard in FF/REW mode.)
6. After installing the reel, adjust the height of the reel. (Refer to MECHANICAL ADJUSTMENT)

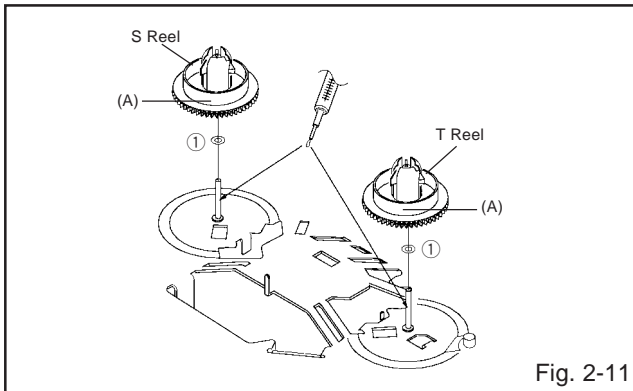


Fig. 2-11

## 2-12: PINCH ROLLER BLOCK/P5-3 ARM ASS'Y (Refer to Fig. 2-12-A)

1. Remove the P5 Spring.
2. Remove the screw ①.
3. Unlock the 2 supports ② and remove the Cassette Opener.
4. Remove the Pinch Roller Block, Pinch Roller Arm Spring, Pinch Roller Lever Ass'y and P5-3 Arm Ass'y.

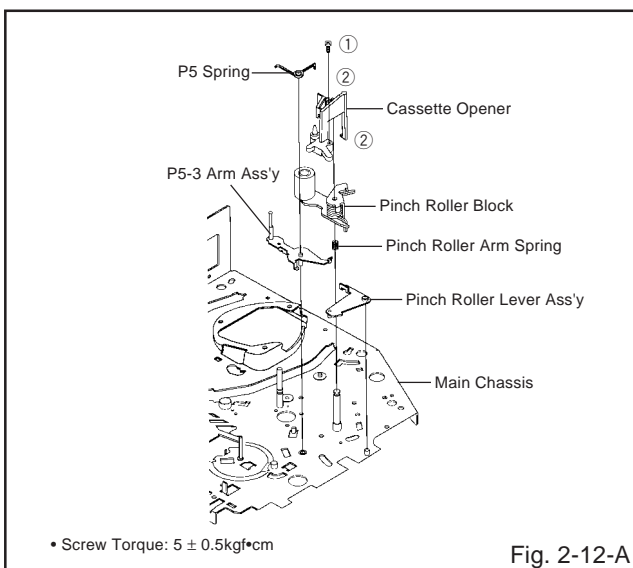


Fig. 2-12-A

### NOTE

1. Do not touch the Pinch Roller. (Use gloves.)
2. When you install the Pinch Roller Block, install as shown in the circle of Fig. 2-12-B. (Refer to Fig. 2-12-B)

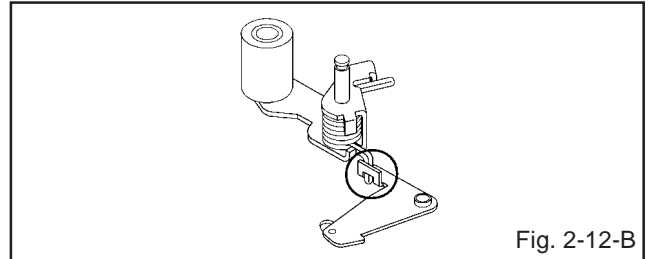


Fig. 2-12-B

## 2-13: A/C HEAD (Refer to Fig. 2-13-A)

1. Remove the screw ①.
2. Remove the A/C Head Base.
3. Remove the 3 screws ②.
4. Remove the A/C Head and A/C Head Spring.

### NOTE

1. Do not touch the A/C Head. (Use gloves.)
2. When you install the A/C Head Spring, install as shown in Fig. 2-13-B. (Refer to Fig. 2-13-B)
3. When you install the A/C Head, tighten the screw (1) first, then tighten the screw (2), finally tighten the screw (3).

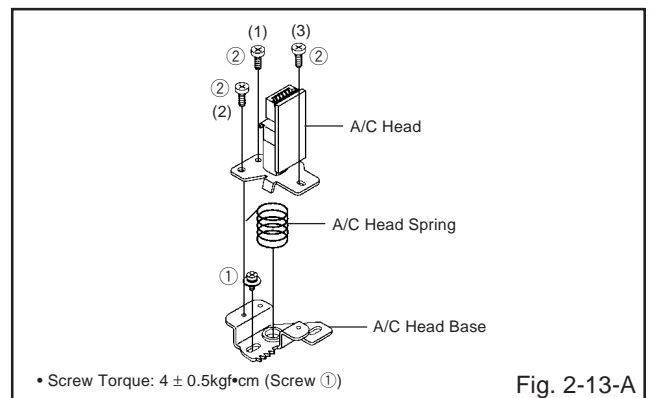


Fig. 2-13-A

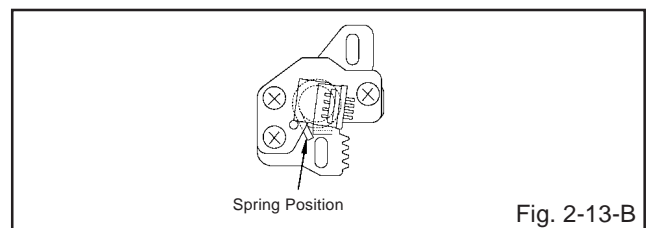


Fig. 2-13-B

## 2-14: FE HEAD (RECORDER ONLY) (Refer to Fig. 2-14)

1. Remove the screw ①.
2. Remove the FE Head.

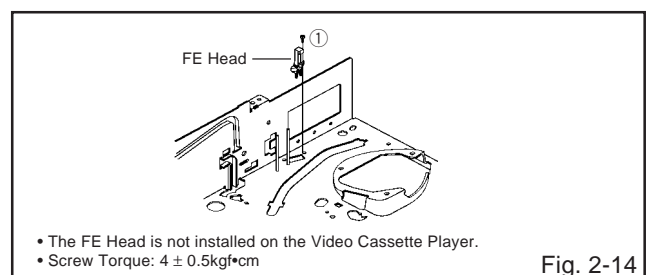


Fig. 2-14

# DISASSEMBLY INSTRUCTIONS

## 2-15: AHC ASS'Y/CYLINDER UNIT ASS'Y (Refer to Fig. 2-15)

1. Unlock the support ① and remove the AHC Ass'y.
2. Remove the 3 screws ②.
3. Remove the Cylinder Unit Ass'y.

### NOTE

When you install the Cylinder Unit Ass'y, tighten the screws from (1) to (3) in order while pulling the Ass'y toward the left front direction.

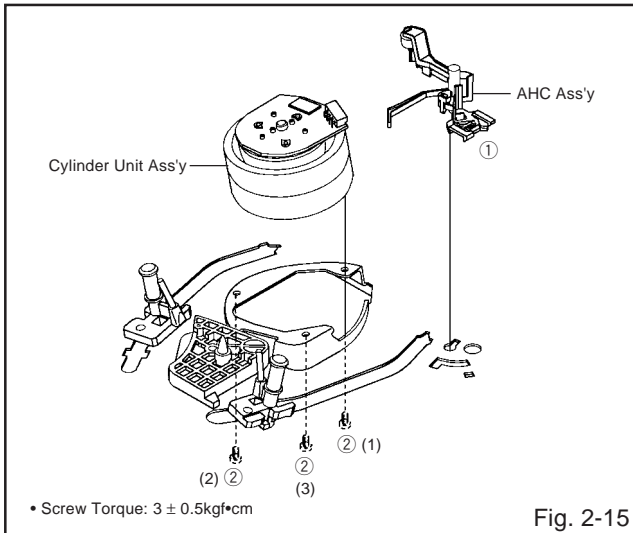


Fig. 2-15

## 2-16: CAPSTAN DD UNIT (Refer to Fig. 2-16)

1. Remove the Capstan Belt.
2. Remove the 3 screws ①.
3. Remove the Capstan DD Unit.

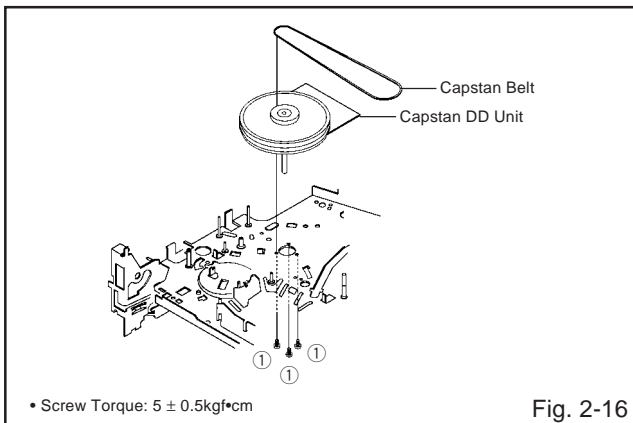


Fig. 2-16

## 2-17: MIDDLE GEAR/MAIN CAM (Refer to Fig. 2-17-A)

1. Remove the Polyslider Washer ①, then remove the Middle Gear.
2. Remove the E-Ring, then remove the Main Cam, P5 Cam and Pinch Roller Cam.
3. Remove the Polyslider Washer ②, then remove the Joint Gear.

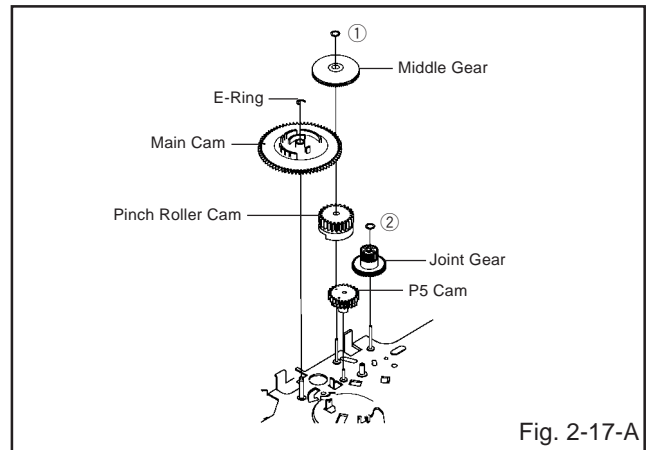


Fig. 2-17-A

### NOTE

When you install the Pinch Roller Cam, P5 Cam and Main Cam, align each marker. (Refer to Fig. 2-17-B)

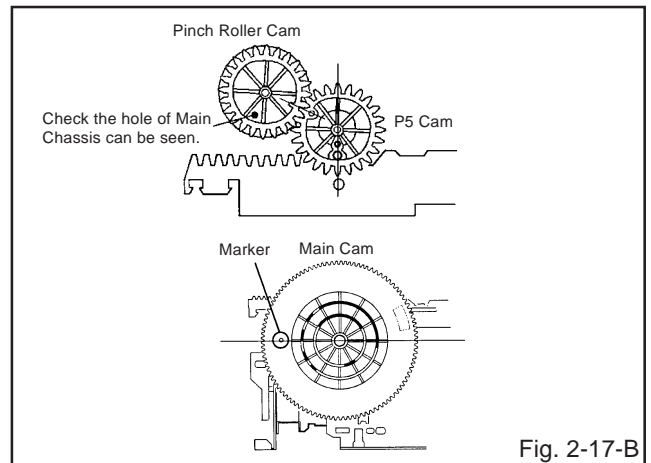


Fig. 2-17-B

## 2-18: CLUTCH ASS'Y (Refer to Fig. 2-18)

1. Remove the Polyslider Washer ①.
2. Remove the Clutch Ass'y, Ring Spring and Coupling Gear.
3. Unlock the 2 supports ② and remove the Clutch Lever.


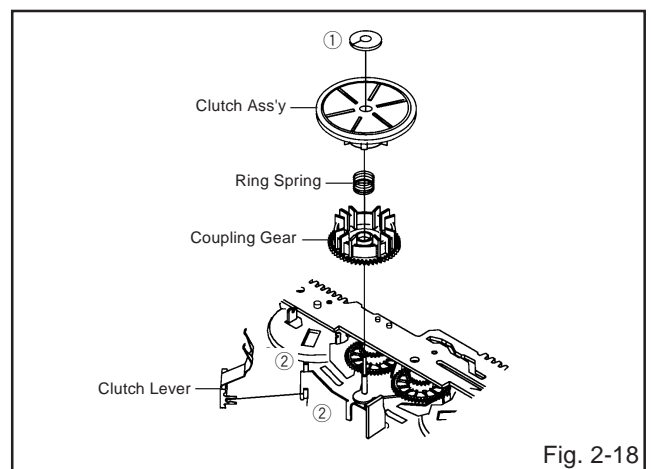


Fig. 2-18

# DISASSEMBLY INSTRUCTIONS


## 2-19: LOADING GEAR S/T ASS'Y (Refer to Fig. 2-19-A)

1. Remove the E-Ring ① and remove the Main Loading Gear.
2. Remove the Capstan Brake Spring.
3. Slide the Main Rod and remove the Capstan Brake Ass'y.
4. Remove the Main Rod, Tension Lever, Clutch Actuator, Idler Arm Ass'y.
5. Remove the screw ②.
6. Remove the LED Reflector.
7. Remove the Loading Arm S Ass'y and Loading Arm T Ass'y.
8. Remove the Loading Gear S and Loading Gear T.
9. Remove the Loading Gear Spring.

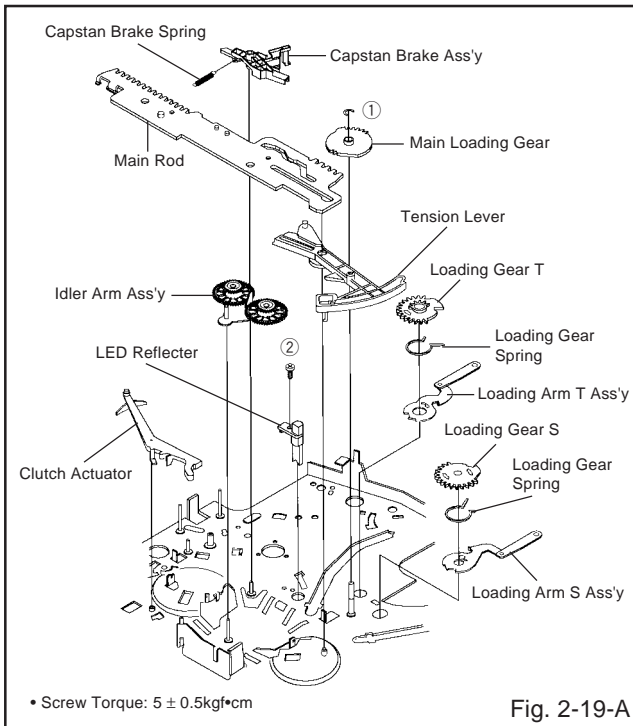


### NOTES

1. When you install the Loading Arm S Ass'y, Loading Arm T Ass'y and Main Loading Gear, align each marker. (Refer to Fig. 2-19-B)

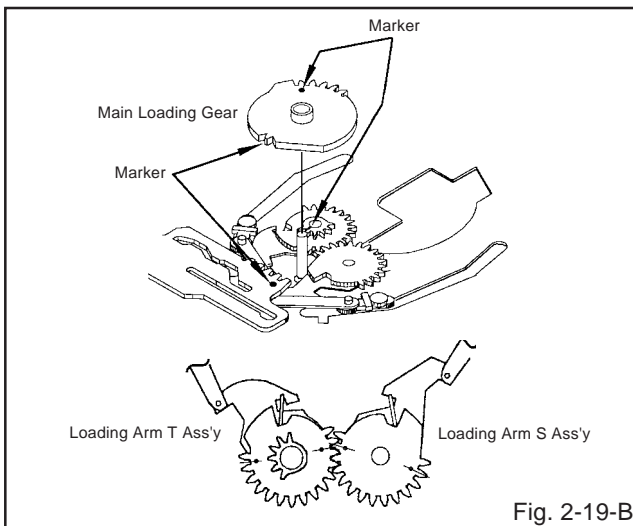

2. When you install the Clutch Actuator, install as shown in the circle of Fig. 2-19-C. (Refer to Fig. 2-19-C)

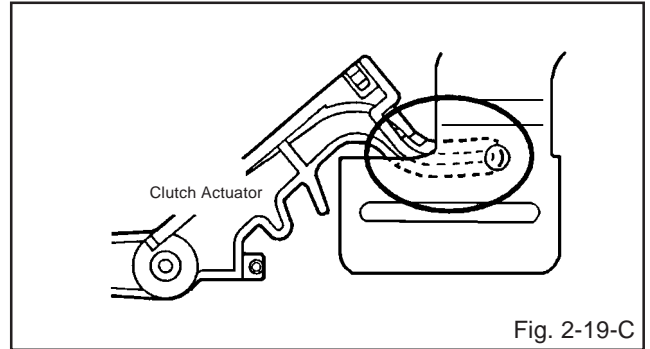


## 2-20: INCLINED S/T ASS'Y (Refer to Fig. 2-20)

1. Unlock the support ① and remove the P4 Cover.
2. Remove the screw ②.
3. Unlock the support ③ and remove the Loading Gear Holder.
4. Remove the Inclined S.
5. Remove the Inclined T.
6. Remove the 2 screws ④, then remove the Guide Roller.

### NOTE

Do not touch the roller of Guide Roller.

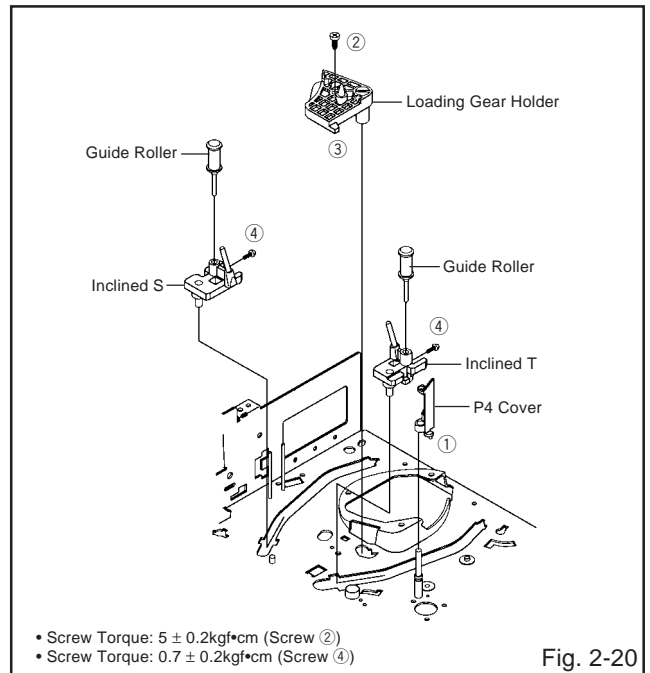



# DISASSEMBLY INSTRUCTIONS

## 3. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

- \* After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
- \* Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

### REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. (Refer to Fig. 3-1.)

Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground. While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver.

A cracking noise will be heard as the voltage is discharged.

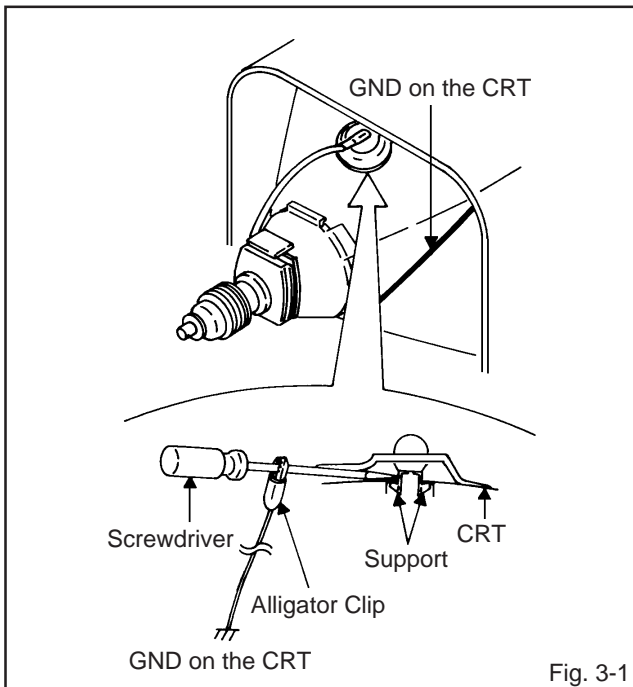


Fig. 3-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. (Refer to Fig. 3-2.)

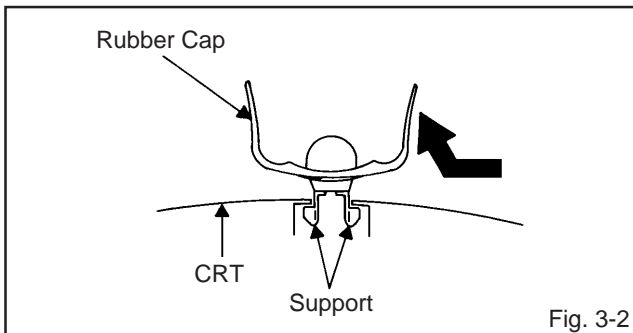


Fig. 3-2

3. After one side is removed, pull in the opposite direction to remove the other.

### NOTE

Take care not to damage the Rubber Cap.

### INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. (Refer to Fig. 3-3.)

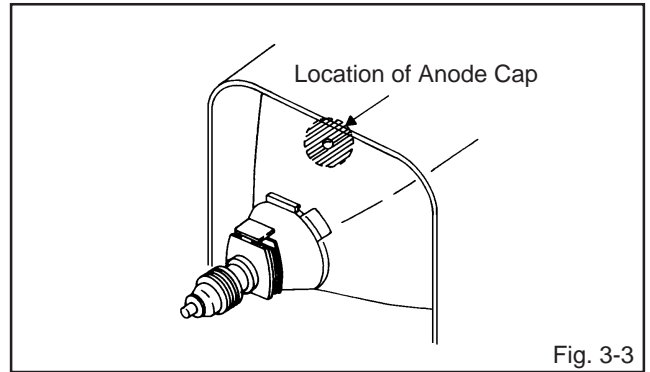


Fig. 3-3

### NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. (Refer to Fig. 3-4.)

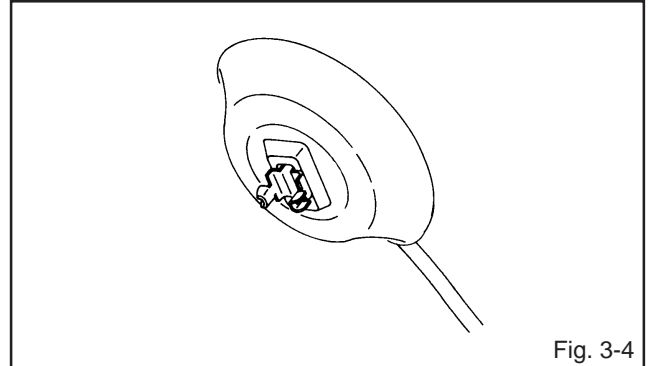


Fig. 3-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in Fig. 3-5.

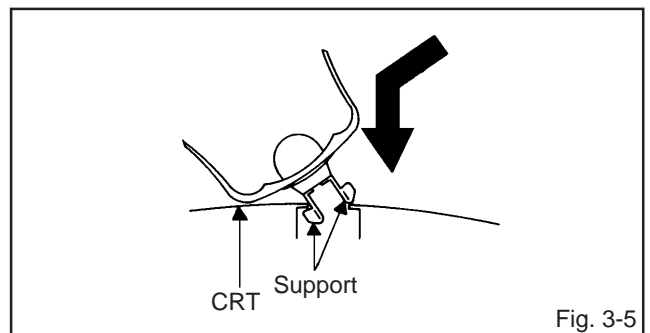


Fig. 3-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

## KEY TO ABBREVIATIONS

<b>A</b>	<b>A/C</b>	: Audio/Control	<b>H.SW</b>	: Head Switch	
	<b>ACC</b>	: Automatic Color Control	<b>Hz</b>	: Hertz	
	<b>AE</b>	: Audio Erase	<b>I</b>	<b>IC</b>	: Integrated Circuit
	<b>AFC</b>	: Automatic Frequency Control		<b>IF</b>	: Intermediate Frequency
	<b>AFT</b>	: Automatic Fine Tuning		<b>IND</b>	: Indicator
	<b>AFT DET</b>	: Automatic Fine Tuning Detect		<b>INV</b>	: Inverter
	<b>AGC</b>	: Automatic Gain Control	<b>K</b>	<b>KIL</b>	: Killer
	<b>AMP</b>	: Amplifier	<b>L</b>	<b>L</b>	: Left
	<b>ANT</b>	: Antenna		<b>LED</b>	: Light Emitting Diode
	<b>A.PB</b>	: Audio Playback		<b>LIMIT AMP</b>	: Limiter Amplifier
	<b>APC</b>	: Automatic Phase Control		<b>LM, LDM</b>	: Loading Motor
	<b>ASS'Y</b>	: Assembly		<b>LP</b>	: Long Play
	<b>AT</b>	: All Time		<b>L.P.F</b>	: Low Pass Filter
	<b>AUTO</b>	: Automatic		<b>LUMI.</b>	: Luminance
	<b>A/V</b>	: Audio/Video	<b>M</b>	<b>M</b>	: Motor
<b>B</b>	<b>BGP</b>	: Burst Gate Pulse		<b>MAX</b>	: Maximum
	<b>BOT</b>	: Beginning of Tape		<b>MINI</b>	: Minimum
	<b>BPF</b>	: Bandpass Filter		<b>MIX</b>	: Mixer, mixing
	<b>BRAKE SOL</b>	: Brake Solenoid		<b>MM</b>	: Monostable Multivibrator
	<b>BUFF</b>	: Buffer		<b>MOD</b>	: Modulator, Modulation
	<b>B/W</b>	: Black and White		<b>MPX</b>	: Multiplexer, Multiplex
<b>C</b>	<b>C</b>	: Capacitance, Collector		<b>MS SW</b>	: Mecha State Switch
	<b>CASE</b>	: Cassette	<b>N</b>	<b>NC</b>	: Non Connection
	<b>CAP</b>	: Capstan		<b>NR</b>	: Noise Reduction
	<b>CARR</b>	: Carrier	<b>O</b>	<b>OSC</b>	: Oscillator
	<b>CH</b>	: Channel		<b>OPE</b>	: Operation
	<b>CLK</b>	: Clock	<b>P</b>	<b>PB</b>	: Playback
	<b>CLOCK (SY-SE)</b>	: Clock (Syscon to Servo)		<b>PB CTL</b>	: Playback Control
	<b>COMB</b>	: Combination, Comb Filter		<b>PB-C</b>	: Playback-Chrominance
	<b>CONV</b>	: Converter		<b>PB-Y</b>	: Playback-Luminance
	<b>CPM</b>	: Capstan Motor		<b>PCB</b>	: Printed Circuit Board
	<b>CTL</b>	: Control		<b>P. CON</b>	: Power Control
	<b>CYL</b>	: Cylinder		<b>PD</b>	: Phase Detector
	<b>CYL-M</b>	: Cylinder-Motor		<b>PG</b>	: Pulse Generator
	<b>CYL SENS</b>	: Cylinder-Sensor		<b>P-P</b>	: Peak-to Peak
<b>D</b>	<b>DATA (SY-CE)</b>	: Data (Syscon to Servo)	<b>R</b>	<b>R</b>	: Right
	<b>dB</b>	: Decibel		<b>REC</b>	: Recording
	<b>DC</b>	: Direct Current		<b>REC-C</b>	: Recording-Chrominance
	<b>DD Unit</b>	: Direct Drive Motor Unit		<b>REC-Y</b>	: Recording-Luminance
	<b>DEMODO</b>	: Demodulator		<b>REEL BRK</b>	: Reel Brake
	<b>DET</b>	: Detector		<b>REEL S</b>	: Reel Sensor
	<b>DEV</b>	: Deviation		<b>REF</b>	: Reference
<b>E</b>	<b>E</b>	: Emitter		<b>REG</b>	: Regulated, Regulator
	<b>EF</b>	: Emitter Follower		<b>REW</b>	: Rewind
	<b>EMPH</b>	: Emphasis		<b>REV, RVS</b>	: Reverse
	<b>ENC</b>	: Encoder		<b>RF</b>	: Radio Frequency
	<b>ENV</b>	: Envelope		<b>RMC</b>	: Remote Control
	<b>EOT</b>	: End of Tape		<b>RY</b>	: Relay
	<b>EQ</b>	: Equalizer	<b>S</b>	<b>S. CLK</b>	: Serial Clock
	<b>EXT</b>	: External		<b>S. COM</b>	: Sensor Common
<b>F</b>	<b>F</b>	: Fuse		<b>S. DATA</b>	: Serial Data
	<b>FBC</b>	: Feed Back Clamp		<b>SEG</b>	: Segment
	<b>FE</b>	: Full Erase		<b>SEL</b>	: Select, Selector
	<b>FF</b>	: Fast Forward, Flipflop		<b>SENS</b>	: Sensor
	<b>FG</b>	: Frequency Generator		<b>SER</b>	: Search Mode
	<b>FL SW</b>	: Front Loading Switch		<b>SI</b>	: Serial Input
	<b>FM</b>	: Frequency Modulation		<b>SIF</b>	: Sound Intermediate Frequency
	<b>FSC</b>	: Frequency Sub Carrier		<b>SO</b>	: Serial Output
	<b>FWD</b>	: Forward		<b>SOL</b>	: Solenoid
<b>G</b>	<b>GEN</b>	: Generator		<b>SP</b>	: Standard Play
	<b>GND</b>	: Ground		<b>STB</b>	: Serial Strobe
<b>H</b>	<b>H.P.F</b>	: High Pass Filter		<b>SW</b>	: Switch

## KEY TO ABBREVIATIONS

<b>S</b>	<b>SYNC</b>	:	Synchronization
	<b>SYNC SEP</b>	:	Sync Separator, Separation
<b>T</b>	<b>TR</b>	:	Transistor
	<b>TRAC</b>	:	Tracking
	<b>TRICK PB</b>	:	Trick Playback
	<b>TP</b>	:	Test Point
<b>U</b>	<b>UNREG</b>	:	Unregulated
<b>V</b>	<b>V</b>	:	Volt
	<b>VCO</b>	:	Voltage Controlled Oscillator
	<b>VIF</b>	:	Video Intermediate Frequency
	<b>VP</b>	:	Vertical Pulse, Voltage Display
	<b>V.PB</b>	:	Video Playback
	<b>VR</b>	:	Variable Resistor
	<b>V.REC</b>	:	Video Recording
	<b>VSF</b>	:	Visual Search Fast Forward
	<b>VSR</b>	:	Visual Search Rewind
	<b>VSS</b>	:	Voltage Super Source
	<b>V-SYNC</b>	:	Vertical-Synchronization
	<b>VT</b>	:	Voltage Tuning
<b>X</b>	<b>X'TAL</b>	:	Crystal
<b>Y</b>	<b>Y/C</b>	:	Luminance/Chrominance

## SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.

To enter SERVICE MODE, unplug AC cord till lost actual clock time. Then press and hold Vol (-) button of main unit and remocon key simultaneously.

The both pressing of set key and remote control key will not be possible if clock has been set. To reset clock, either unplug AC cord and allow at least 5 seconds before Power On.

Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	Initialization of the factory. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	2	Horizontal position adjustment of OSD. NOTE: Also can be adjusted by using the Adjustment MENU. Refer to the "ELECTRICAL ADJUSTMENT" (OSD HORIZONTAL).
VOL. (-) MIN	3	Adjust the PG SHIFTER automatically. Refer to the "ELECTRICAL ADJUSTMENT" (PG SHIFTER).
VOL. (-) MIN	4	Adjust the PG SHIFTER manually. Refer to the "ELECTRICAL ADJUSTMENT" (PG SHIFTER).
VOL. (-) MIN	5	Adjusting of the Tracking to the center position. NOTE: Also can be adjusted by pressing the ATR button for more than 2 seconds during PLAY.
VOL. (-) MIN	6	POWER ON total hours and PLAY/REC total hours are displayed on the screen. Refer to the "PREVENTIVE CHECKS AND SERVICE INTERVALS" (CONFIRMATION OF USING HOURS).  Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "NOTE FOR THE REPLACING OF MEMORY IC".
VOL. (-) MIN	8	Writing of EEPROM initial data. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

Method	Operations
Press the ATR button on the remote control for more than 2 seconds during PLAY.	Adjusting of the Tracking to the center position. Refer to the "MECHANICAL ADJUSTMENT" (GUIDE ROLLER) and "ELECTRICAL ADJUSTMENT" (PG SHIFTER).
Make the short circuit between the test point of SERVICE and the GND.	The EOT/BOT/Reel sensor do not work at this moment. Refer to the "PREPARATION FOR SERVICING"

## PREVENTIVE CHECKS AND SERVICE INTERVALS

The following standard table depends on environmental conditions and usage. Unless maintenance is properly carried out, the following service intervals may be quite shortened as harmful effects may be had on other parts. Also, long term storage or misuse may cause transformation and aging of rubber parts.

Time Parts Name	500 hours	1,000 hours	1,500 hours	2,000 hours	3,000 hours	Notes
Audio Control Head	■	■	■	■	■	Clean those parts in contact with the tape.
Full Erase Head (Recorder only)	■	■	■	■	■	
Capstan Belt			■	■	●	Clean the rubber, and parts which the rubber touches.
Pinch Roller	■	■	■	■	■ ●	
Capstan DD Unit					●	
Loading Motor					●	
Tension Band					●	
Capstan Shaft	■	■	■	■	■	
Tape Running Guide Post	■	■	■	■	■	Replace when rolling becomes abnormal.
Cylinder Unit	■	■	■	■	●	Clean the Head


- : Clean
- : Replace

### CONFIRMATION OF USING HOURS

POWER ON total hours and PLAY/REC total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

**NOTE: The confirmation of using hours will not be possible if clock has been set. To reset clock, either unplug AC cord and allow at least 5 seconds before Power On.**

1. Set the VOLUME to minimum.
2. While holding down VOLUME button on front cabinet, press key 6 on remote control simultaneously.
3. After the confirmation of using hours, turn off the power.

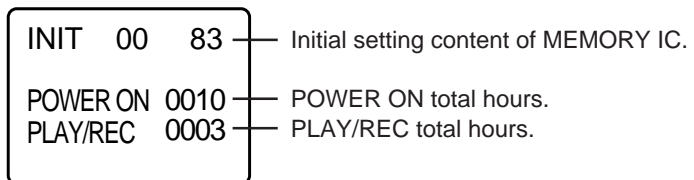

(16 x 16 x 16 x thousands digit value) + (16 x 16 x hundreds digit value) + (16 x tens digit value) + (ones digit value)

# PREVENTIVE CHECKS AND SERVICE INTERVALS


## CLEANING

### NOTE

After cleaning the heads with isopropyl alcohol, do not run a tape until the heads dry completely. If the heads are not completely dry and alcohol gets on the tape, damage may occur.

### 1. AUDIO CONTROL HEAD

Wrap a piece of chamois around your finger. Dip it in isopropyl alcohol and clean the audio control head by wiping it horizontally. Clean the full erase head in the same manner. **(Refer to the figure below.)**

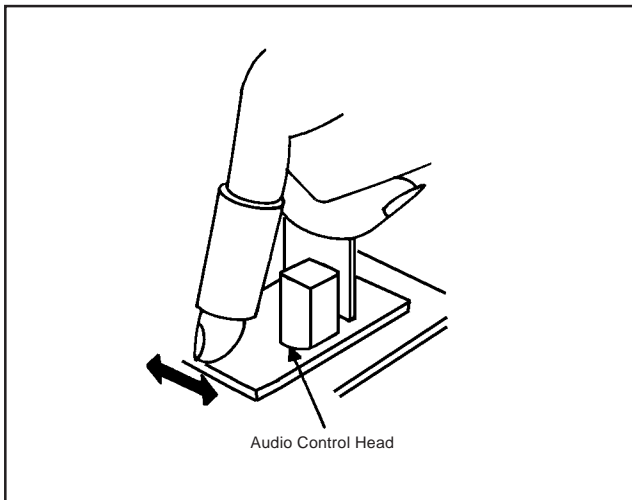

### 2. TAPE RUNNING SYSTEM


When cleaning the tape transport system, use the gauze moistened with isopropyl alcohol.

### 3. CYLINDER

Wrap a piece of chamois around your finger. Dip it in isopropyl alcohol. Hold it to the cylinder head softly. Turn the cylinder head counterclockwise to clean it (in the direction of the arrow). **(Refer to the figure below.)**

### NOTE

Do not exert force against the cylinder head. Do not move the chamois upward or downward on the head. Use the chamois one by one.

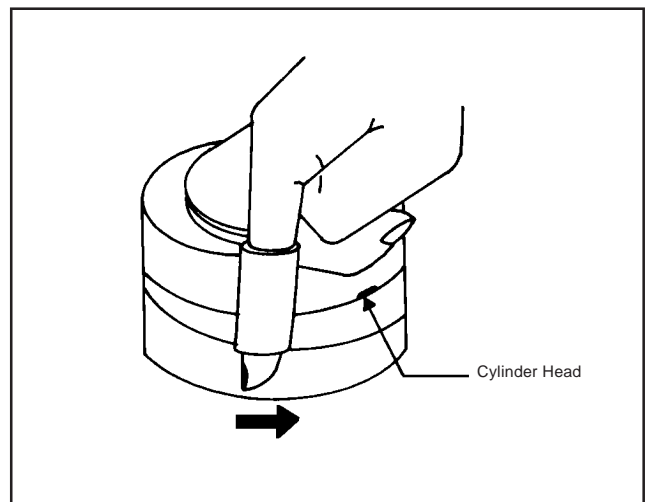

## NOTE FOR THE REPLACING OF MEMORY IC


If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

**NOTE: Initial Data setting will not be possible if clock has been set. To reset clock, either unplug AC cord and allow at least 5 seconds before Power On.**

ADDRESS	DATA	ADDRESS	DATA	ADDRESS	DATA	ADDRESS	DATA	ADDRESS	DATA
00	08	0A	10	14	00	1E	8D	28	01
01	13	0B	97	15	00	1F	00	29	00
02	82	0C	19	16	00	20	00		
03	63	0D	00	17	05	21	00		
04	83	0E	00	18	05	22	00		
05	14	0F	00	19	00	23	00		
06	34	10	8C	1A	A9	24	00		
07	89	11	68	1B	0F	25	00		
08	75	12	5C	1C	04	26	00		
09	30	13	53	1D	39	27	00		

**Table 1**



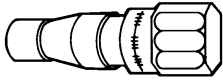
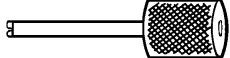
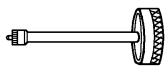
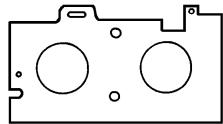
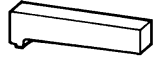
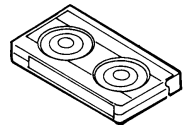
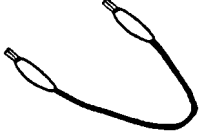
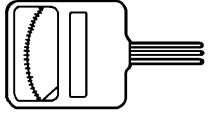
1. Enter DATA SET mode by setting VOLUME to minimum.
2. While holding down VOLUME button on front cabinet, press key 6 on remote control simultaneously. ADDRESS and DATA should appear as FIG 1.

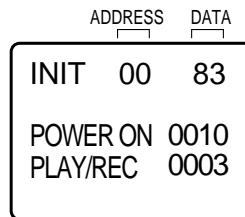

**Fig. 1**

3. ADDRESS is now selected and should "blink". Using the SET + or - keys on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using SET + or - until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input. The unit will now have the correct DATA for the new MEMORY IC.

## SERVICING FIXTURES AND TOOLS
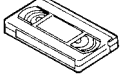
<p><b>(For 2 heads model)</b> VHS Alignment Tape JG001 (VN<sub>2</sub>S-LI6<sup>3</sup>) JG001A (VN<sub>2</sub>S-CO1<sup>3</sup>) JG001Q (VN<sub>2</sub>S-LI6<sup>3</sup>H) JG001T (VN<sub>2</sub>S-X6<sup>3</sup>)</p> 	<p><b>(For 4 heads model)</b> VHS Alignment Tape JG001B (VN<sub>1</sub>S-LI6<sup>3</sup>) JG001I (VN<sub>1</sub>S-CO1<sup>3</sup>) JG001P (VN<sub>1</sub>S-LI6<sup>3</sup>H) JG001S (VN<sub>1</sub>S-X6<sup>3</sup>)</p> 	<p>JG002B Adapter JG002E Dial Torque Gauge (10~90gf•cm) JG002F (60~600gf•cm)</p> 	<p>JG005 Post Adjustment Screwdriver Part No. SV-TG0-030-000 (small)</p> 
<p>JG153 X Value Adjustment Screwdriver</p> 	<p>JG022 Master Plane</p> 	<p>JG024A Reel Disk Height Adjustment Jig</p> 	<p>JG100A Torque Tape (VHT-063)</p> 
<p>JG154 Cable</p> 	<p>Tentelometer</p> 		

Part No.	Remarks
JG001	Monoscope, 6KHz <b>(For 2 heads model)</b>
JG001A	Color Bar, 1KHz <b>(For 2 heads model)</b>
JG001Q	Hi-Fi Audio <b>(For 2 heads Hi-Fi model)</b>
JG001T	X Value Adjustment <b>(For 2 heads model)</b>
JG001B	Monoscope, 6KHz <b>(For 4 heads model)</b>
JG001I	Color Bar, 1KHz <b>(For 4 heads model)</b>
JG001P	Hi-Fi Audio <b>(For 4 heads Hi-Fi model)</b>
JG001S	X Value Adjustment <b>(For 4 heads model)</b>
JG002B	VSR Torque, Brake Torque (S Reel/T Reel Ass'y)
JG002E	Brake Torque (T Reel Ass'y)
JG002F	VSR Torque, Brake Torque (S Reel)
JG005	Guide Roller Adjustment
JG153	X Value Adjustment
JG022/JG024A	Reel Disk Height Adjustment
JG100A	Playback Torque, Back Tension Torque During Playback
JG154	Used to connect the test point of SERVICE and GROUND

## PREPARATION FOR SERVICING

### How to use the Servicing Fixture

1. Unplug the connector CP757 and CP353, then remove the TV/VCR Block from the set.
2. Remove the Operation PCB from the set, then connect it with the Syscon PCB.  
If necessary, connect CP353. (Front A/V Jack Input Terminal)
3. Short circuit between **TP1001** and **Ground** with the cable JG154.  
**(Refer to MAJOR COMPONENTS LOCATION GUIDE)**
4. The EOT, BOT and Reel Sensor do not work at this moment.  
At that time, the STOP/EJECT button is available to insert and eject the Cassette Tape.



# MECHANICAL ADJUSTMENTS



## 1. CONFIRMATION AND ADJUSTMENT

Read the following NOTES before starting work.

- Place an object which weighs between 450g~500g on the Cassette Tape to keep it steady when you want to make the tape run without the Cassette Holder. (Do not place an object which weighs over 500g.)
- When you activate the deck without the Cassette Holder, short circuit between **TP1001** and **GND**. (Refer to **ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE**) In this condition the BOT/EOT/Reel Sensor will not function.



### 1-1: CONFIRMATION AND ADJUSTMENT OF REEL DISK HEIGHT

1. Turn on the power and set to the STOP mode.
2. Set the master plane (**JG022**) and reel disk height adjustment jig (**JG024A**) on the mechanism framework, taking care not to scratch the drum, as shown in **Fig. 1-1-A**.
3. Confirm that "A" of the reel disk is lower than "B" of the reel disk height adjustment jig (**JG024A**), and is higher than "C". If it is not enough height, adjust to  $10(+0.2, -0)$  mm with the height adjustment washer.
4. Adjust the other reel in the same way.

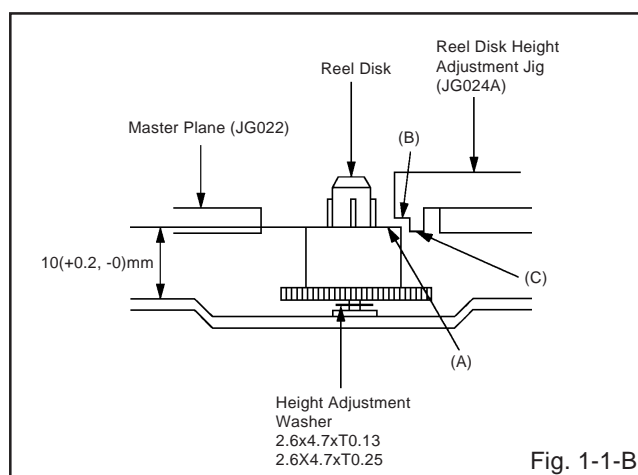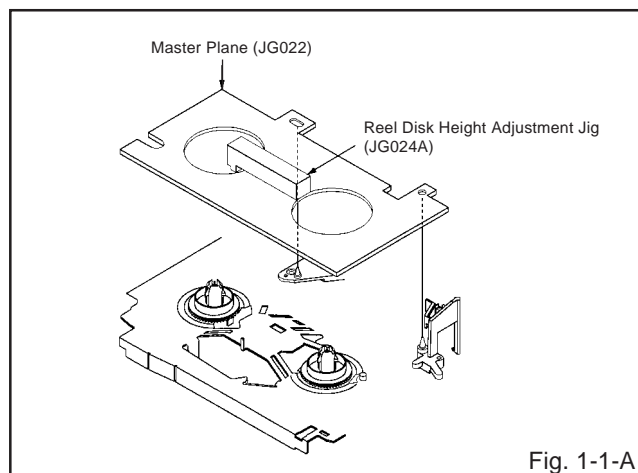

### 1-2: CONFIRMATION AND ADJUSTMENT OF TENSION POST POSITION

1. Set to the PLAY mode.
2. Adjust the Tension Adjust until the edge of the Tension Arm is positioning within 0.5mm range from the standard line center of Main Chassis. After this adjustment, confirm that the cut position is located in "A" area as shown in **Fig. 1-2-B**. If it is located in "B" area, adjust again.
3. While turning the S Reel clockwise, confirm that the edge of the Tension Arm is located in the position described above.

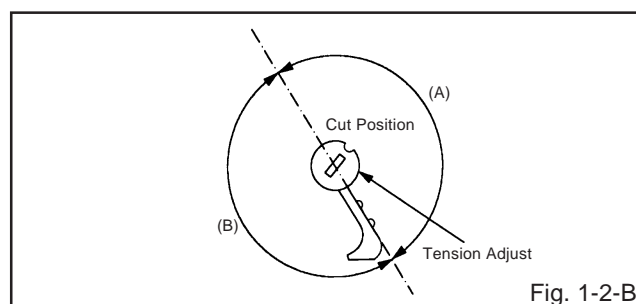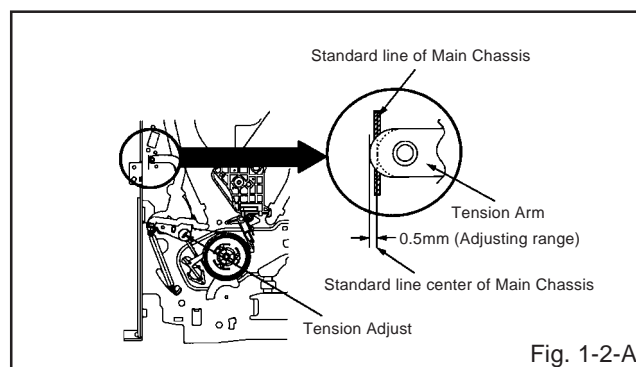


### 1-3: CONFIRMATION OF PLAYBACK TORQUE AND BACK TENSION TORQUE DURING PLAYBACK

1. Load a video tape (T-120) recorded in standard speed mode. Set the unit to the PLAY mode.
2. Install the tentelometer as shown in **Fig. 1-3**. Confirm that the meter indicates  $20 \pm 2$ gf in the beginning of playback.

#### • USING A CASSETTE TYPE TORQUE TAPE (**JG100A**)

1. After confirmation and adjustment of Tension Post position (Refer to item 1-2), load the cassette type torque tape (**JG100A**) and set to the PLAY mode.
2. Confirm that the right meter of the torque tape indicates  $60 \sim 110$ gf•cm during playback in SP mode.
3. Confirm that the left meter of the torque tape indicates  $25 \sim 40$ gf•cm during playback in SP mode.

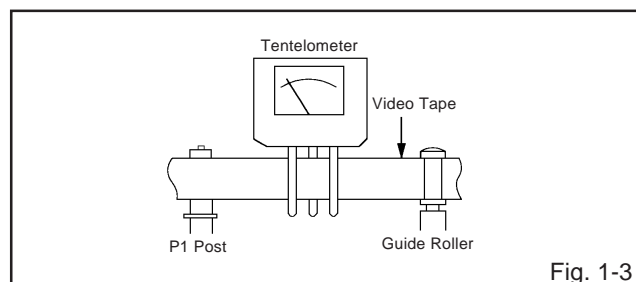

## MECHANICAL ADJUSTMENTS

### 1-4: CONFIRMATION OF VSR TORQUE

1. Operate within 4~5 seconds after the reel disk begins to turn.
2. Install the Torque Gauge (JG002F) and Adapter (JG002B) on the S Reel. Set to the Rewind mode. (Refer to Fig.1-4)
3. Then, confirm that it indicates 120~180gf•cm.

#### NOTE

Install the Torque Gauge on the reel disk firmly. Press the REW button to turn the reel disk.


### 1-5: CONFIRMATION OF REEL BRAKE TORQUE

(S Reel Brake) (Refer to Fig. 1-4)

1. Set to the STOP mode.
2. Move the Idler Ass'y from the S Reel.
3. Install the Torque Gauge (JG002F) and Adapter (JG002B) on the S Reel. Turn the Torque Gauge (JG002F) clockwise.
4. Then, confirm that it indicates 60~100gf•cm.

(T Reel Brake) (Refer to Fig. 1-4)

1. Set to the STOP mode.
2. Move the Idler Ass'y from the T Reel.
3. Install the Torque Gauge (JG002E) and Adapter (JG002B) on the T reel. Turn the Torque Gauge (JG002E) counterclockwise.
4. Then, confirm that it indicates 45~70gf•cm.

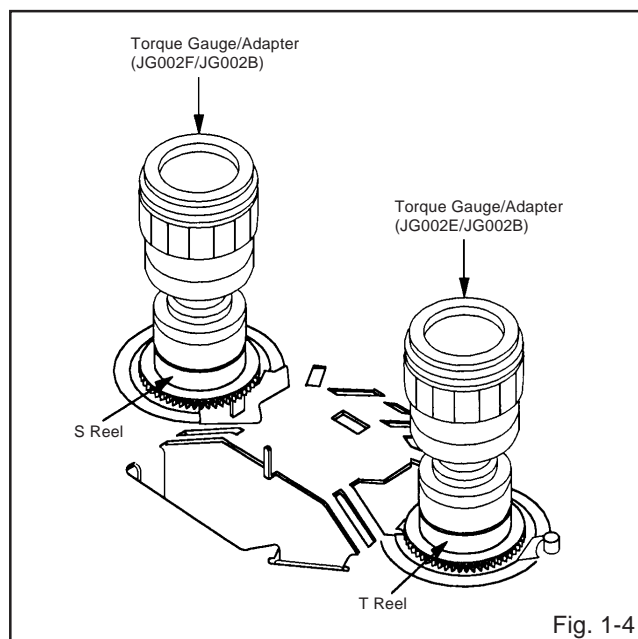

#### NOTE

If the torque is out of the range, replace the following parts.

Check item	Replacement Part
1-4	Idler Ass'y/Clutch Ass'y
1-5	T Brake Spring/Tension Spring

## 2. CONFIRMATION AND ADJUSTMENT OF TAPE RUNNING MECHANISM



Tape Running Mechanism is adjusted precisely at the factory. Adjustment is not necessary as usual. When you replace the parts of the tape running mechanism because of long term usage or failure, the confirmation and adjustment are necessary.

### 2-1: GUIDE ROLLER

1. Playback the VHS Alignment Tape (JG001 or JG001B). (Refer to SERVICING FIXTURE AND TOOLS)
2. Connect CH-1 of the oscilloscope to TP4001 (Envelope) and CH-2 to TP1002 (SW Pulse).
3. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
4. Trigger with SW Pulse and observe the envelope. (Refer to Fig. 2-1-A)
5. When observing the envelope, adjust the Adjusting Driver (JG005) slightly until the envelope will be flat. Even if you press the Tracking Button, adjust so that flatness is not moved so much.
6. Adjust so that the A : B ratio is better than 3 : 2 as shown in Fig. 2-1-B, even if you press the Tracking Button to move the envelope (The envelope waveform will begin to decrease when you press the Tracking Button).
7. Adjust the PG shifter during playback. (Refer to the ELECTRICAL ADJUSTMENTS)

#### NOTE

After adjustment, confirm and adjust A/C head. (Refer to item 2-2)

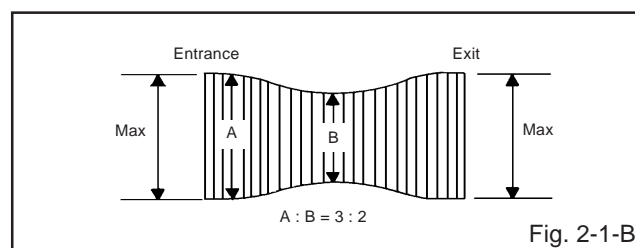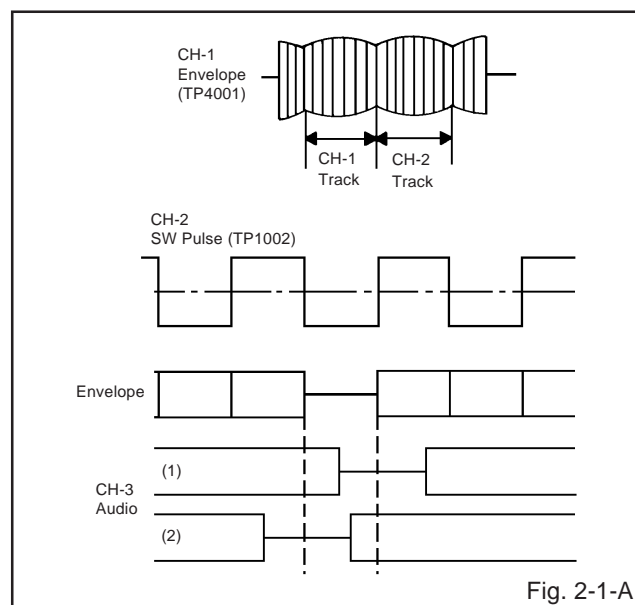

## MECHANICAL ADJUSTMENTS

### 2-2: CONFIRMATION AND ADJUSTMENT OF AUDIO/ CONTROL HEAD

When the Tape Running Mechanism does not work well, adjust the following items.

1. Playback the VHS Alignment Tape (**JG001** or **JG001B**).  
(Refer to **SERVICING FIXTURE AND TOOLS**)
2. Confirm that the reflected picture of stamp mark is appeared on the tape prior to P4 Post as shown in **Fig. 2-2-A**.
  - a) When the reflected picture is distorted, turn the screw ① clockwise until the distortion is disappeared.
  - b) When the reflected picture is not distorted, turn the screw ① counterclockwise until little distortion is appeared, then adjust the a).
3. Turn the screw ② to set the audio level to maximum.
4. Confirm that the bottom of the Audio/ Control Head and the bottom of the tape is shown in **Fig. 2-2-C**.
  - c) When the height is not correct, turn the screw ③ to adjust the height. Then, adjust the 1~3 again.

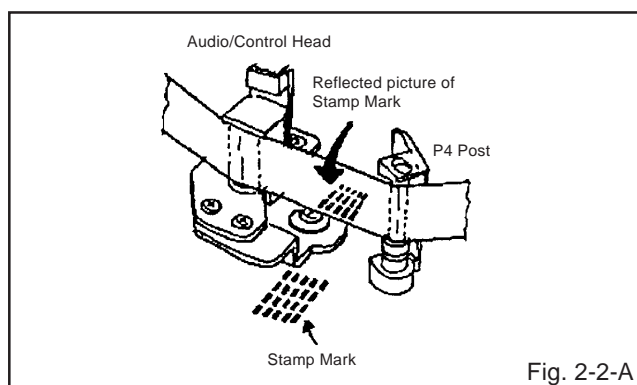


Fig. 2-2-A

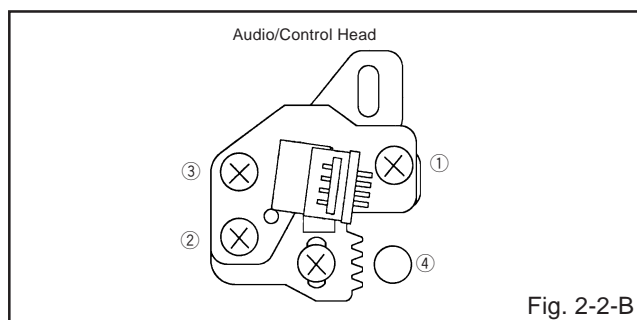


Fig. 2-2-B

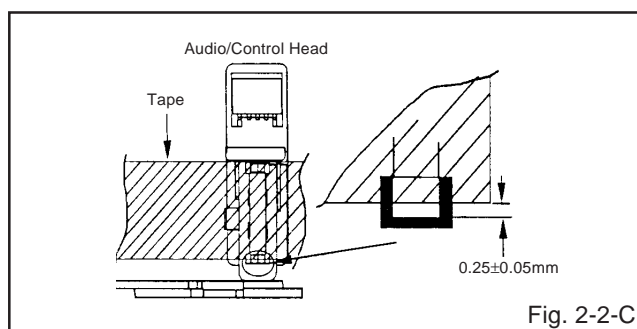


Fig. 2-2-C

### 2-3: TAPE RUNNING ADJUSTMENT (X VALUE ADJUSTMENT)


1. Confirm and adjust the height of the Reel Disk.  
(Refer to item 1-1)
2. Confirm and adjust the position of the Tension Post.  
(Refer to item 1-2)
3. Adjust the Guide Roller. (Refer to item 2-1)
4. Confirm and adjust the Audio/Control Head.  
(Refer to item 2-2)
5. Connect CH-1 of the oscilloscope to **TP4001**, CH-2 to **TP1002** and CH-3 to **HOT side of Audio Out Jack**.
6. Playback the VHS Alignment Tape (**JG001S** or **JG001T**).  
(Refer to **SERVICING FIXTURE AND TOOLS**)
7. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
8. Set the X Value adjustment driver (**JG153**) to the ④ of **Fig. 2-2-B**. Adjust X value so that the envelope waveform output becomes maximum. Check if the relation between Audio and Envelope waveform becomes (1) or (2) of **Fig. 2-1-A**.

### 2-4: CONFIRM HI-FI AUDIO (Hi-Fi model only)

1. Connect CH-1 of the oscilloscope to **TP4001**, CH-2 to **TP1002** and CH-3 to the **Hi-Fi Audio Out Jack**.
2. Playback the VHS Alignment Tape (**JG001P** or **JG001Q**).  
(Refer to **SERVICING FIXTURE AND TOOLS**)
3. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
4. Press the Tracking Up button and count number of steps which the audio output is changed from Hi-Fi (10KHz) to MONO (6KHz).
5. Press the Tracking Down button and count number of steps which the audio output is changed from Hi-Fi (10KHz) to MONO (6KHz).
6. Confirm that the difference between these counted steps number in the above items are within 2 steps. If the difference are more than 3 steps, do Tape Running Adjustment again. (Refer to item 2-3)

# MECHANICAL ADJUSTMENTS

## 3. MECHANISM ADJUSTMENT PARTS LOCATION GUIDE

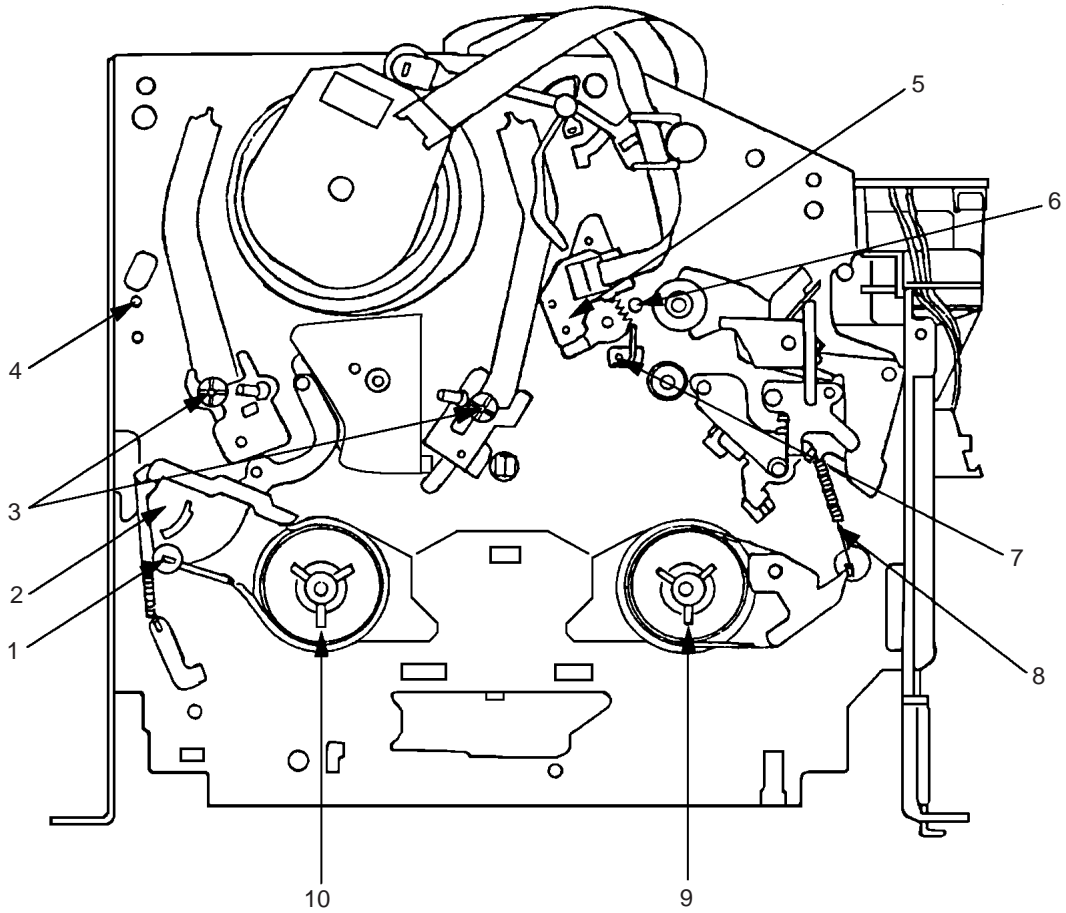

- |                       |                                   |
|-----------------------|-----------------------------------|
| 1. Tension Adjust     | 6. X value adjustment driver hole |
| 2. Tension Arm        | 7. P4 Post                        |
| 3. Guide Roller       | 8. T Brake Spring                 |
| 4. P1 Post            | 9. T Reel                         |
| 5. Audio/Control Head | 10. S Reel                        |

# ELECTRICAL ADJUSTMENTS

## 1. BEFORE MAKING ELECTRICAL ADJUSTMENTS

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

### CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.  
Inferior silicon grease can damage IC's and transistors.
- When replacing IC's and transistors, use only specified silicon grease (YG6260M).  
Remove all old silicon before applying new silicon.

### On-Screen Display Adjustment

1. Unplug the AC plug for more than 5 seconds to set the clock to the non-setting state. Then, set the volume level to minimum.
2. Press the VOL. DOWN button on the set and the Channel button (9) on the remote control simultaneously to appear the adjustment mode on the screen as shown in Fig. 1-1.

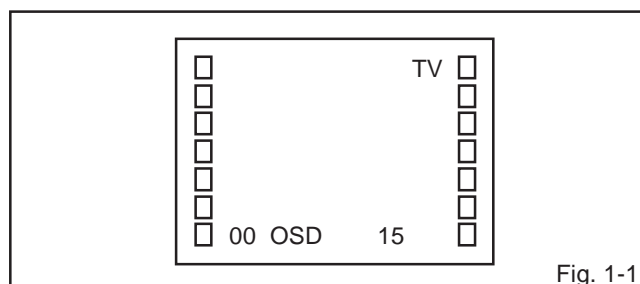


Fig. 1-1

3. Use the Channel UP/DOWN button or Channel button (0-9) on the remote control to select the options shown in Fig. 1-2.
4. Press the MENU button on the remote control to end the adjustments.

NO.	FUNCTION	NO.	FUNCTION
00	OSD H	13	BRIGHTNESS
01	CUT OFF	14	CONTRAST
02	RF AGC	15	COLOR
03	VIF VCO	16	TINT
04	H VCO	17	SHARPNESS
05	H PHASE	18	FM LEVEL
06	V SIZE	19	LEVEL
07	V SHIFT	20	SEPARATION 1
08	R DRIVE	21	SEPARATION 2
09	B DRIVE	22	TEST MONO
10	R BIAS	23	TEST STEREO
11	G BIAS	24	X-RAY TEST
12	B BIAS		

Fig. 1-2

## 2. BASIC ADJUSTMENTS (VCR SECTION)

### 2-1: PG SHIFTER

1. Connect CH-1 on the oscilloscope to TP1002 and CH-2 to pin 4 of CP1003.
2. Playback the alignment tape. (JG001A)
3. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
4. Press the VOL. DOWN button on the set and the channel button (3) on the remote control simultaneously until the indicator REC disappears. If the indicator REC disappears, adjustment is completed.

(If the above adjustments doesn't work well:)

5. Press the VOL. DOWN button on the set and the channel button (3) on the remote control simultaneously until the indicator REC disappears.
6. When the REC indicator is blinking, press both VOL. DOWN button on the set and the channel button (4) on the remote control simultaneously and adjust the Tracking +/- button until the arising to the down of Head Switching Pulse becomes  $6.5 \pm 0.5H$ . (Refer to Fig. 2-1-A, B)
7. Press the Tracking Auto button.

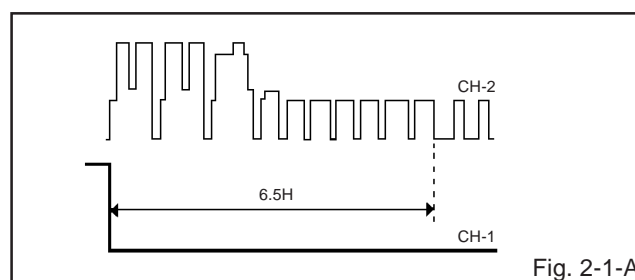


Fig. 2-1-A

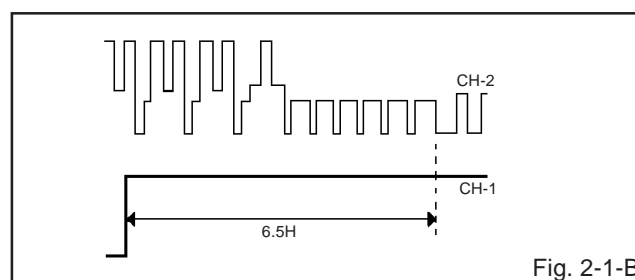


Fig. 2-1-B

### 2-2: VCO FREERUN

1. Place the set with Aging Test for more than 10 minutes.
2. Receive the VHF HIGH.
3. Disconnect the Antenna while receiving the VHF HIGH and set to the Noise screen.
4. Once turn off the Power and turn on the Power again.
5. Approx. 3 seconds later, input the Antenna again.
6. Connect the digital voltmeter between the pin 5 of CP351 and the pin 1 (GND) of CP351.
7. Activate the adjustment mode display of Fig. 1-1 and press the channel button (03) on the remote control to select "VIF VCO".
8. Press the VOL. UP/DOWN button on the remote control until the digital voltmeter is  $2.5 \pm 0.5V$ .

# ELECTRICAL ADJUSTMENTS

## 2-3: RF AGC

1. Receive an 70dB monoscope pattern.
2. Connect the digital voltmeter between the **pin 5 of CP351** and the **pin 1 (GND) of CP351**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(02)** on the remote control to select "RF AGC".
4. Press the VOL. UP/DOWN button on the remote control until the digital voltmeter is  $2.4 \pm 0.05V$ .

## (TV SECTION)

### 2-4: CONSTANT VOLTAGE

1. Connect the digital voltmeter to the **FUSE HOLDER of FH503**.
2. Set condition is AV MODE without signal.
3. Adjust the **VR502** until the digital voltmeter is  $135 \pm 0.5V$ .

### 2-5: CUT OFF

1. Adjust the unit to the following settings.  
R BIAS=64, G BIAS=64, B BIAS=64,  
BRIGHTNESS=128, CONTRAST=64
2. Place the set with Aging Test for more than 15 minutes.
3. Set condition is AV MODE without signal.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(01)** on the remote control to select "CUT OFF".
5. Adjust the **Screen Volume** until a dim raster is obtained.

### 2-6: WHITE BALANCE

**NOTE:** Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 15 minutes.
2. Receive the color bar pattern.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(10)** on the remote control to select "R.BIAS".
5. Using the VOL. UP/DOWN button on the remote control, adjust the R.BIAS.
6. Press the CH. UP/DOWN button on the remote control to select the "R.DRIVE", "B.DRIVE", "G.BIAS" or "B.BIAS".
7. Using the VOL. UP/DOWN button on the remote control, adjust the R.DRIVE, B.DRIVE, G.BIAS or B.BIAS.
8. Perform the above adjustments 6 and 7 until the white color is looked like a white.

### 2-7: FOCUS

1. Receive the monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the **Focus Volume** until picture is distinct.

### 2-8: HORIZONTAL PHASE

1. Receive the center cross signal from the Pattern Generator.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(05)** on the remote control to select "H PHASE".
3. Press the VOL. UP/DOWN button on the remote control until the vertical line becomes fit to the notch of the shadow mask.

### 2-9: VERTICAL SHIFT

1. Receive the center cross signal from the Pattern Generator.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(07)** on the remote control to select "V SHIFT".
3. Press the VOL. UP/DOWN button on the remote control until the horizontal line becomes fit to the notch of the shadow mask.

### 2-10: VERTICAL SIZE

1. Receive the cross hatch signal from the Pattern Generator.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(06)** on the remote control to select "V SIZE".
3. Press the VOL. UP/DOWN button on the remote control until the rectangle on the center of the screen becomes square.
4. Receive a broadcast and check if the picture is normal.

### 2-11: SUB BRIGHTNESS

1. Receive the black pattern\*. (RF Input)
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(13)** on the remote control to select "BRIGHTNESS".
3. Press the VOL. UP/DOWN button on the remote control until the screen begin to shine.
4. Receive the black pattern\*. (Audio Video Input)
5. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 2~3.

\*The Black Pattern means the whole black raster signal. Select the "RASTER" of the pattern generator, set to the OFF position for each R, G and B.

### 2-12: SUB CONTRAST


1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(14)** on the remote control to select "CONTRAST".
2. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "80"
3. Press the INPUT SELECT button on the remote control to set to the AV mode.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(14)** on the remote control.
5. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "85"



## ELECTRICAL ADJUSTMENTS


### 2-13: SUB TINT

1. Receive the color bar pattern. (RF Input)
2. Connect the synchro scope to **TP803**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(16)** on the remote control to select "TINT".
4. Press the VOL. UP/DOWN button on the remote control until the waveform becomes as shown in **Fig. 2-2**.
5. Receive the color bar pattern. (Audio Video Input)
6. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 2~4.

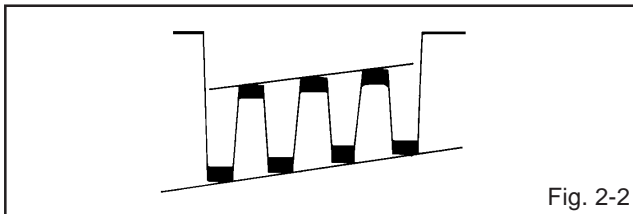


### 2-14: SUB COLOR

1. Receive the color bar pattern. (RF Input)
2. Connect the synchro scope to **TP801**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(15)** on the remote control to select "COLOR".
4. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to 110% of the white level. **(Refer to Fig. 2-3)**
5. Receive the color bar pattern. (Audio Video Input)
6. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 2~4.

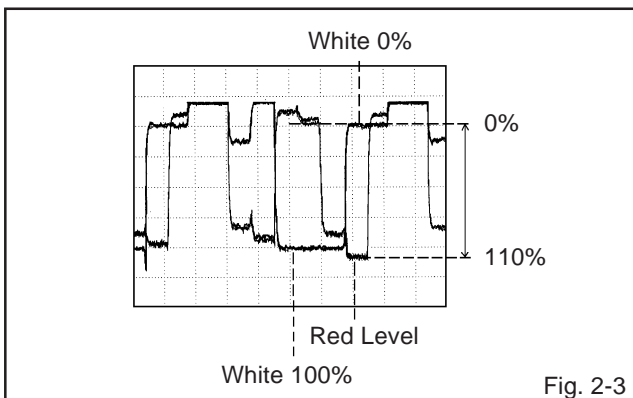



### 2-15: OSD HORIZONTAL

1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum. **(Refer to Fig. 2-4)**

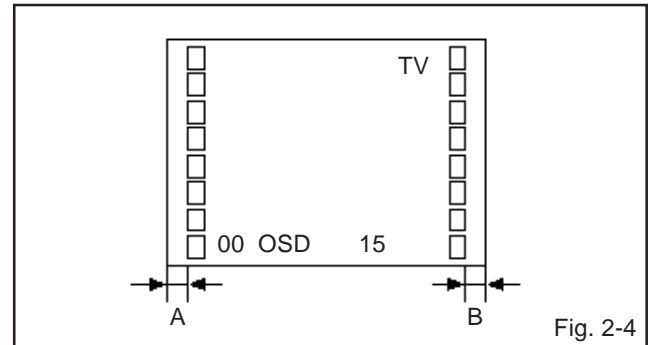

# ELECTRICAL ADJUSTMENTS

## 3. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE

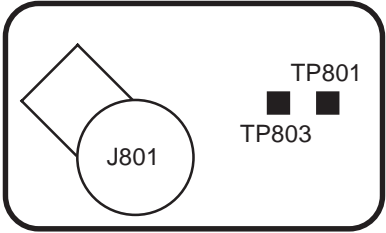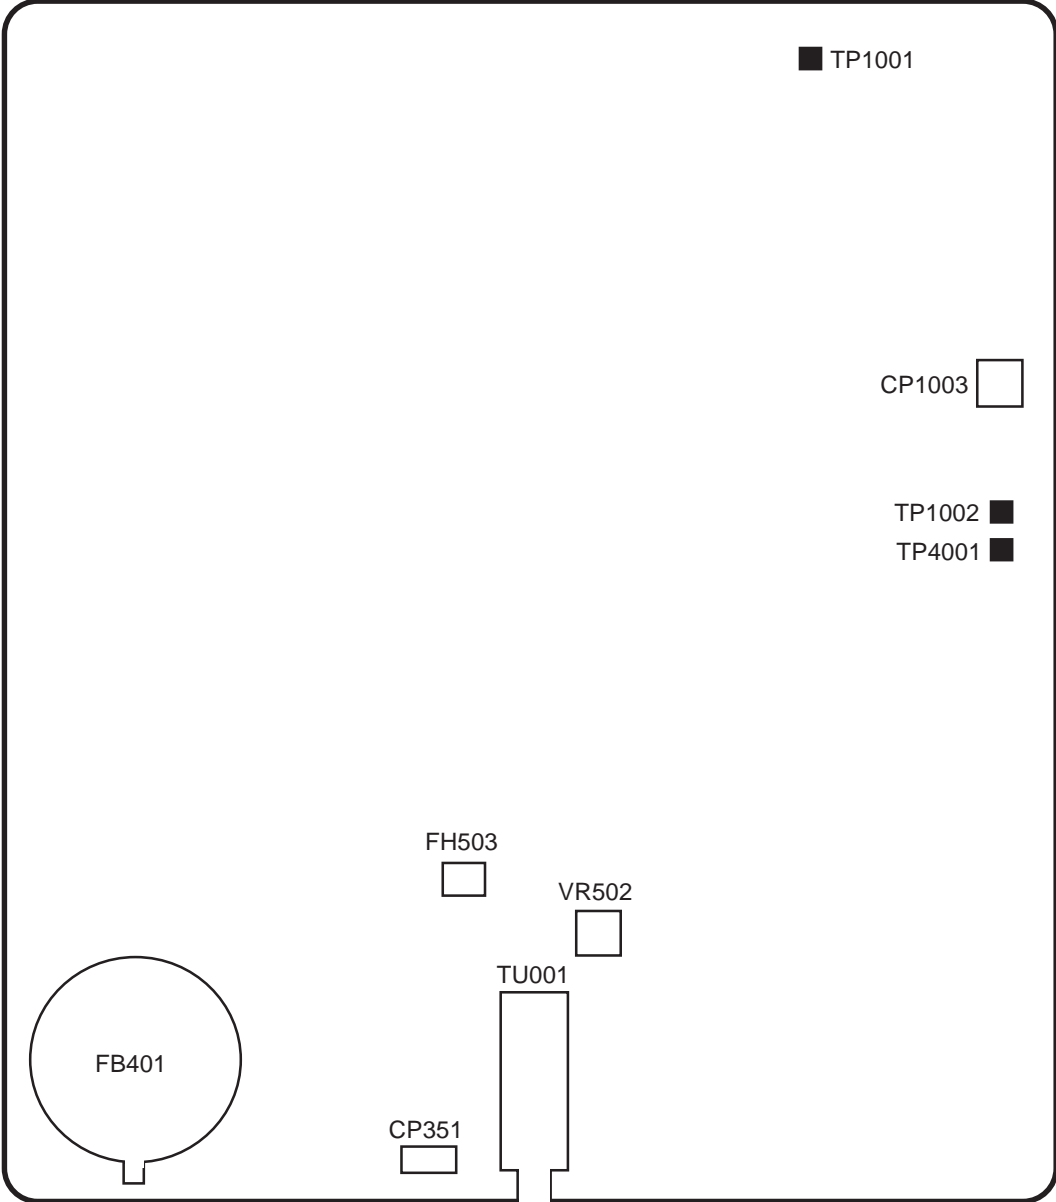

CRT



# ELECTRICAL ADJUSTMENTS

## 4. PURITY AND CONVERGENCE ADJUSTMENTS

### NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

### 4-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 4-1)**  
If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

### 4-2: PURITY

### NOTE

Adjust after performing adjustments in section 4-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.  
Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue colors.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

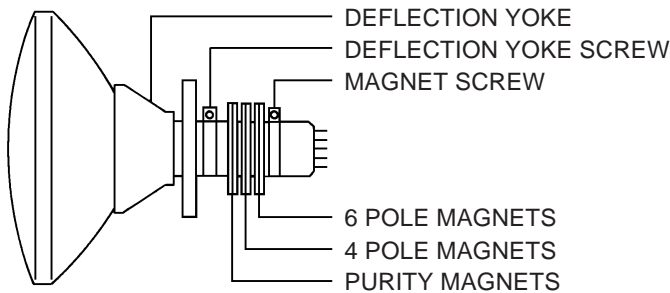


Fig. 4-1

### 4-3: STATIC CONVERGENCE

### NOTE

Adjust after performing adjustments in section 4-2.


1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

### 4-4: DYNAMIC CONVERGENCE

### NOTE


Adjust after performing adjustments in section 4-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 4-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 4-2-b)**

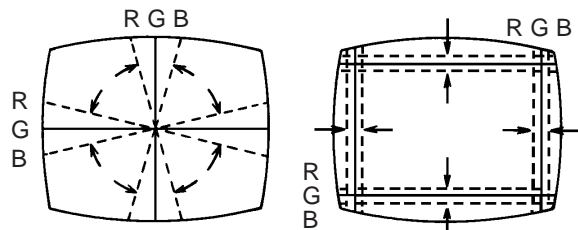

UPWARD/DOWNWARD SLANT RIGHT/LEFT SLANT


Fig. 4-2-a

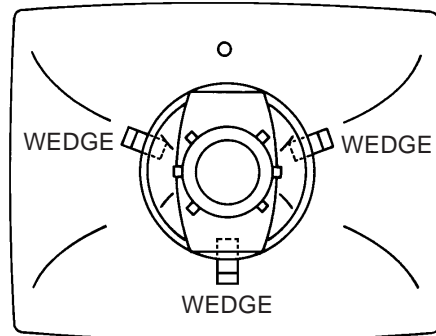

WEDGE POSITION


Fig. 4-2-b

# TV BLOCK DIAGRAM

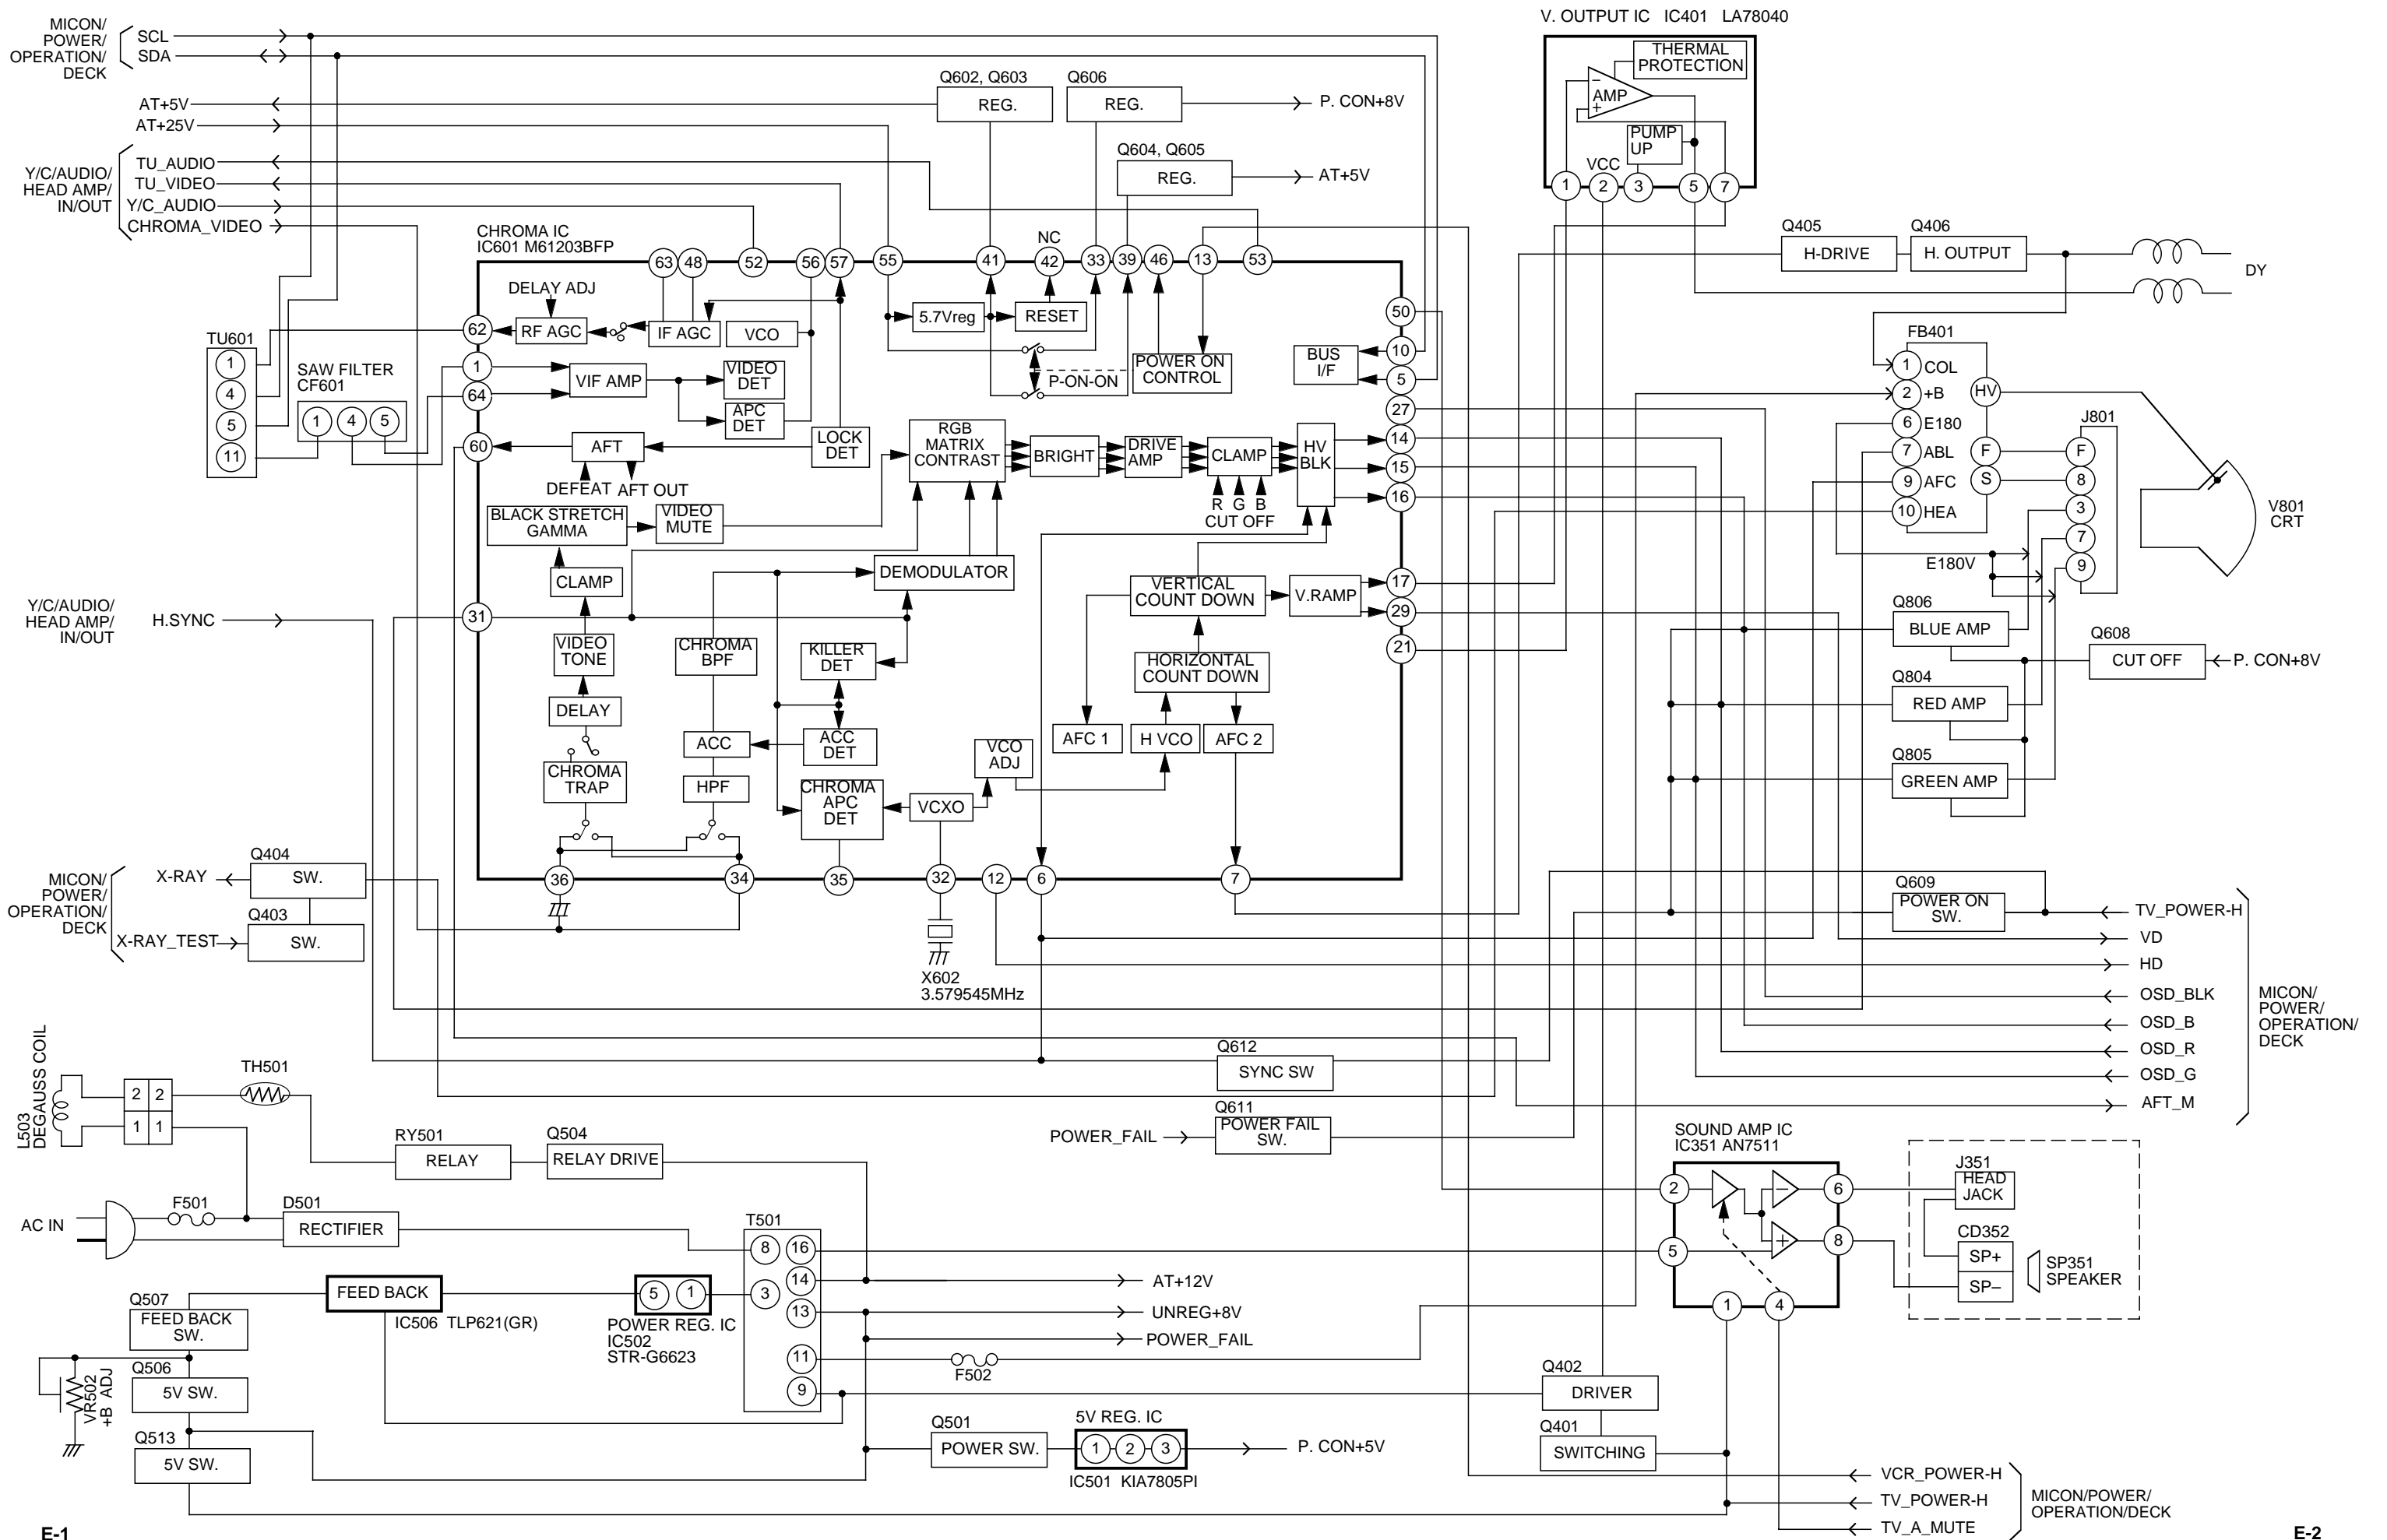




# MICON/POWER/OPERATION/DECK BLOCK DIAGRAM

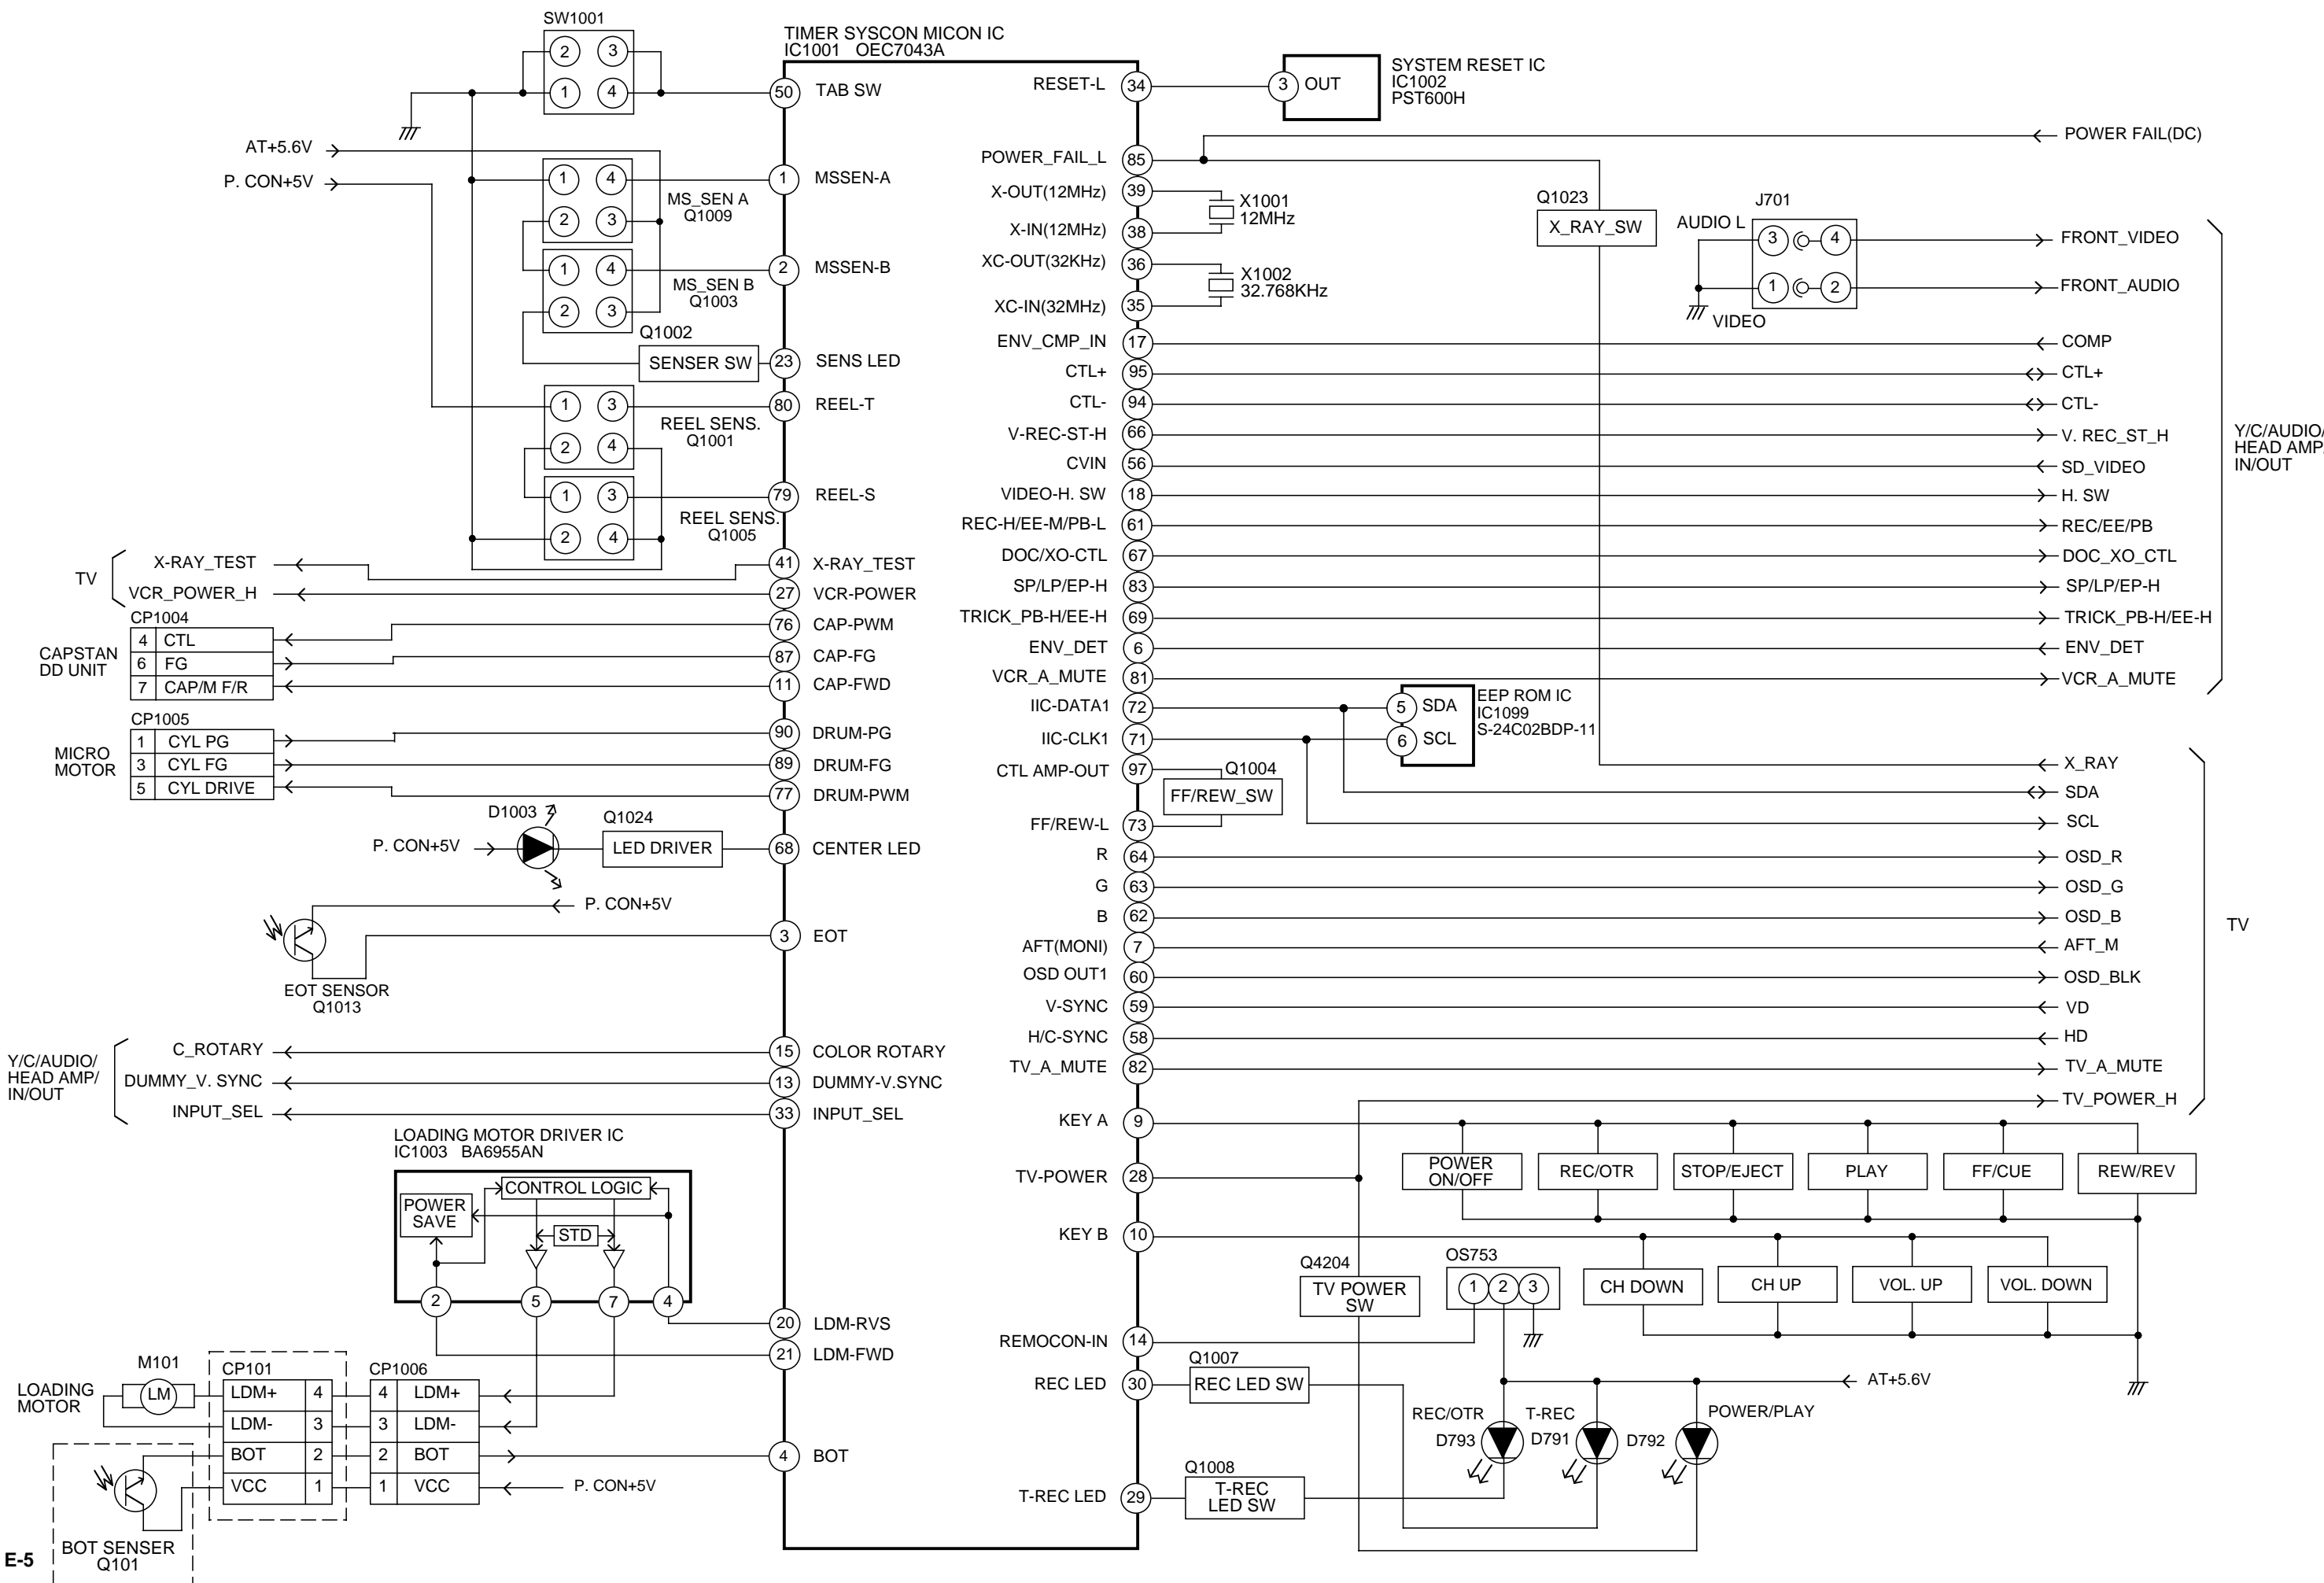


# PRINTED CIRCUIT BOARDS

## OPERATION SOLDER SIDE

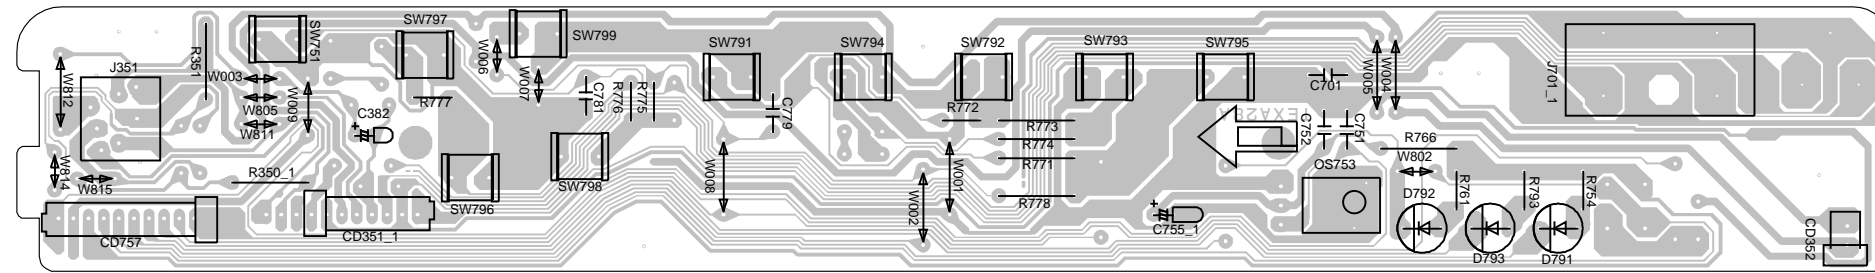

## DECK SOLDER SIDE

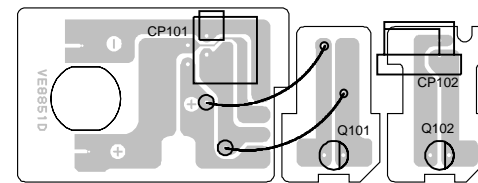








# Y/C/AUDIO/HEAD AMP SCHEMATIC DIAGRAM (SYSCON PCB)

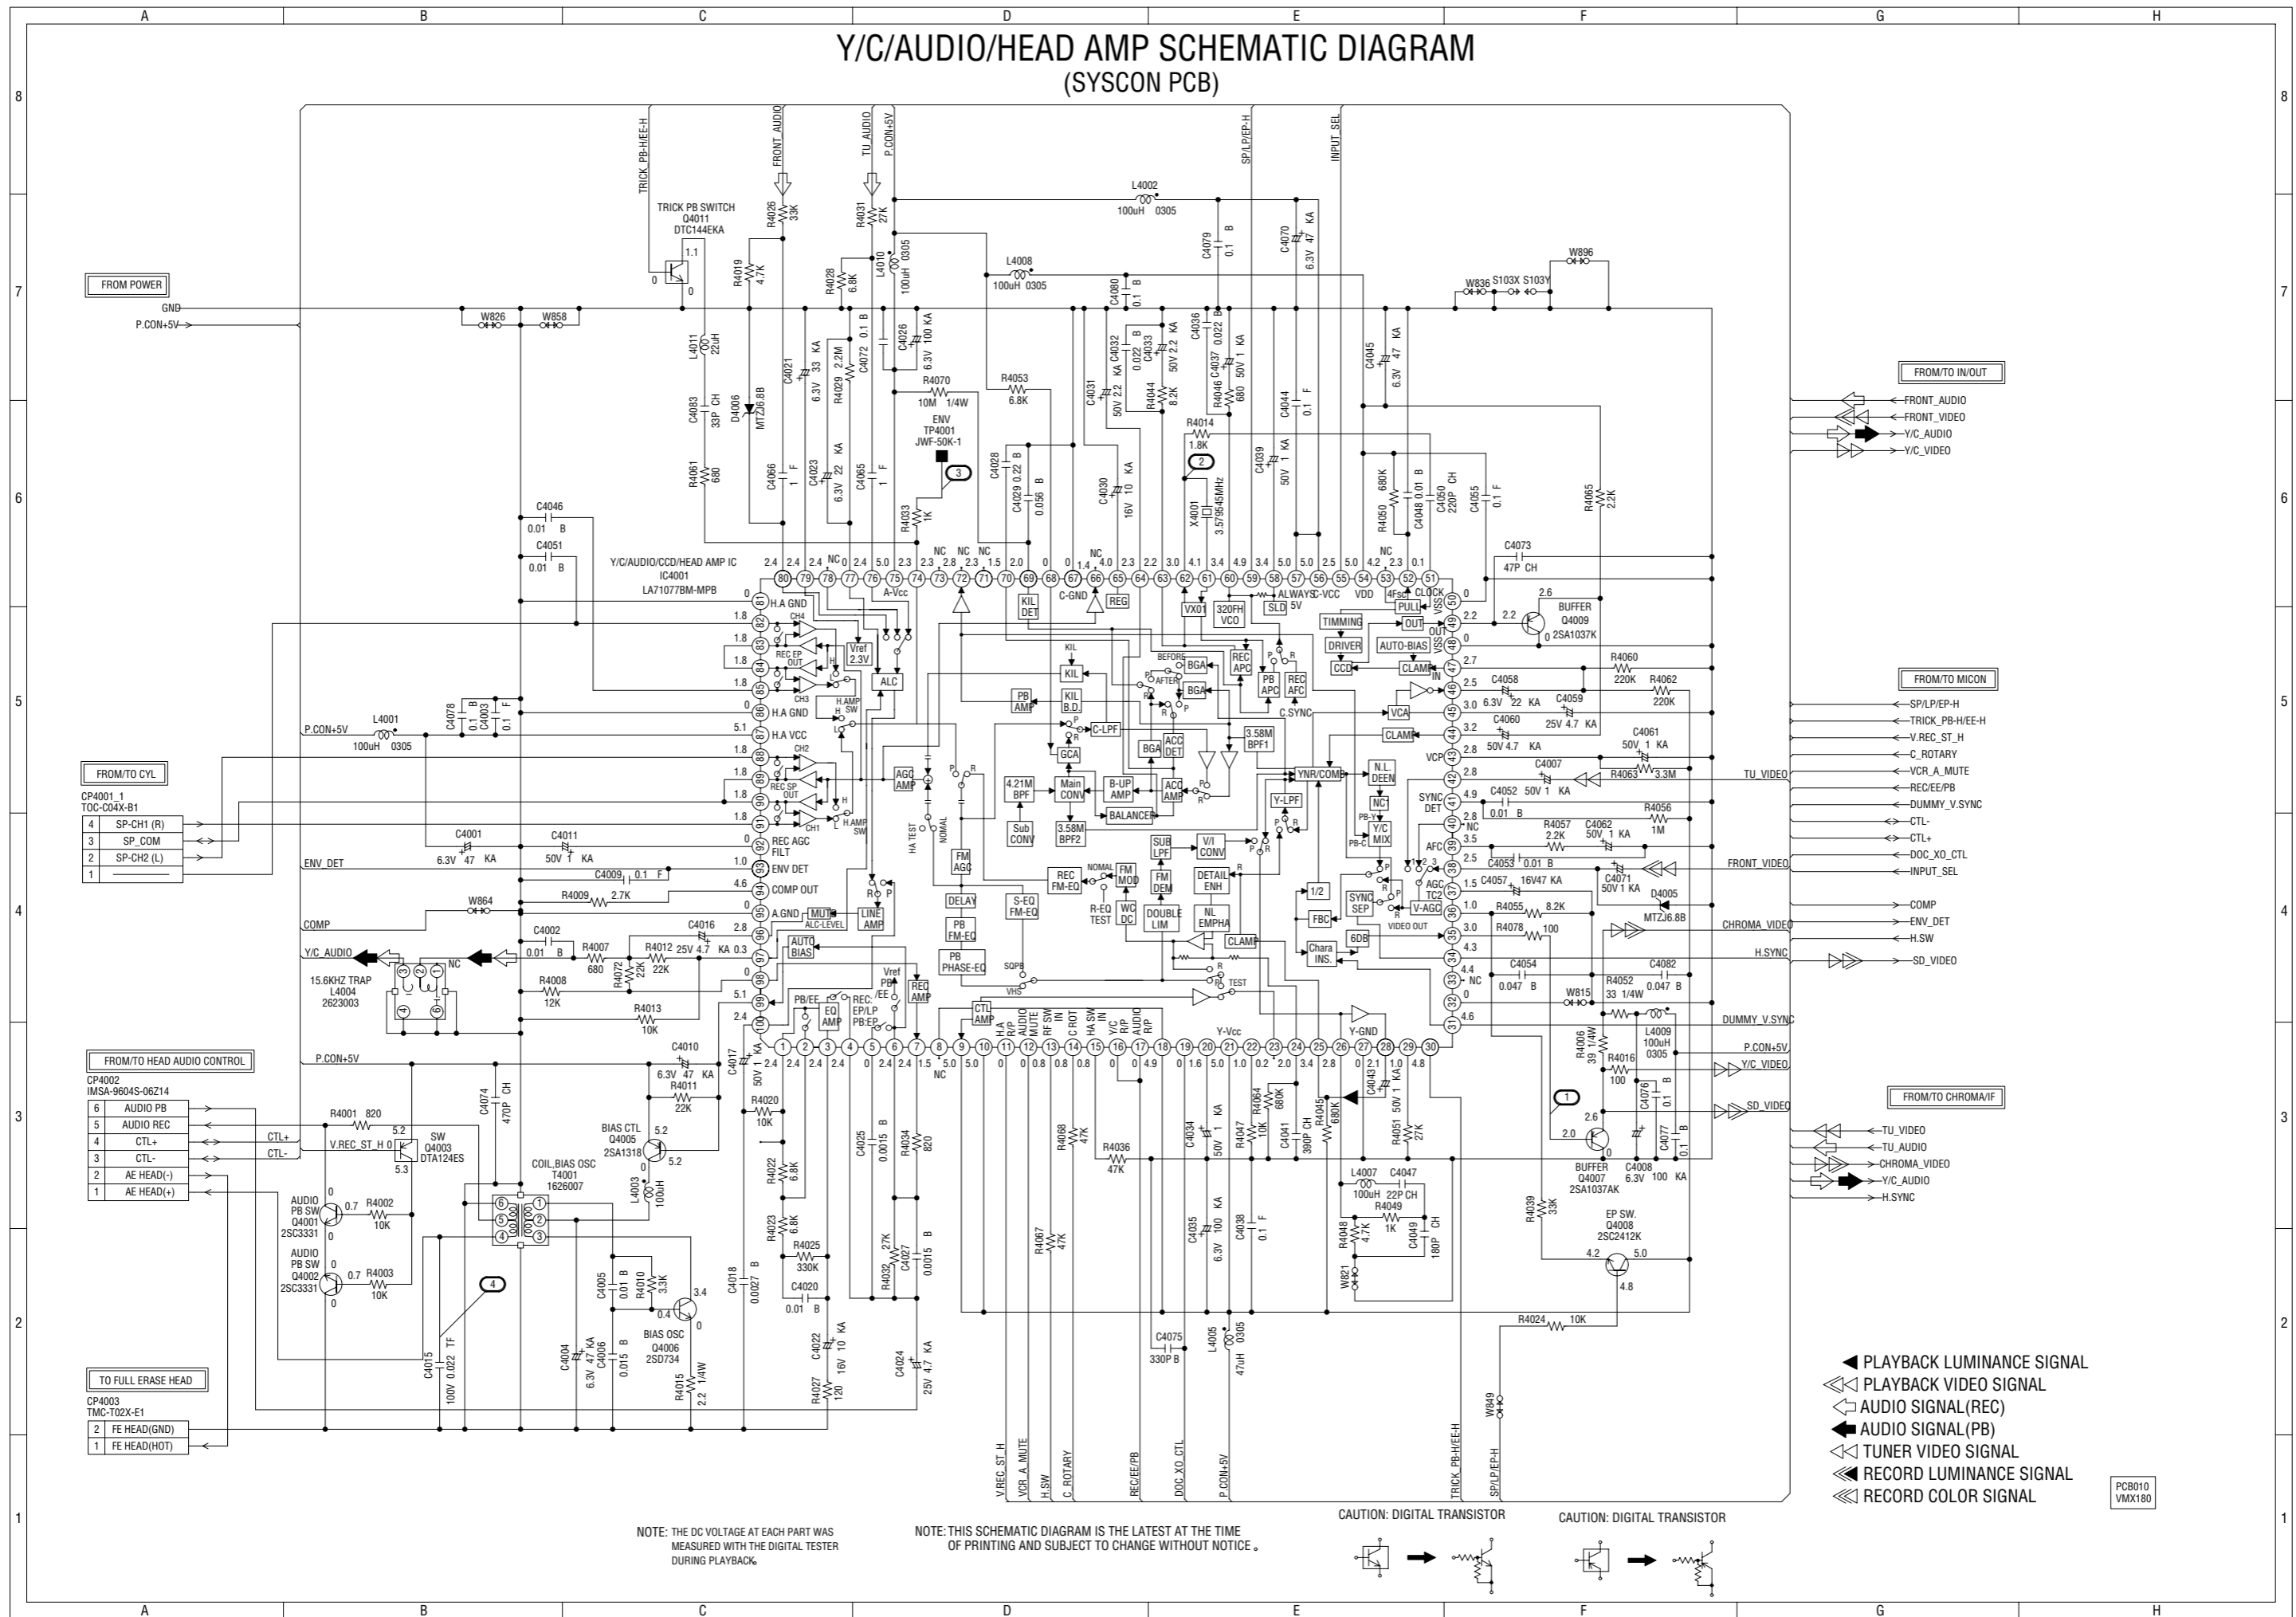

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTION: DIGITAL TRANSISTOR












CAUTION: DIGITAL TRANSISTOR

- ▶ PLAYBACK LUMINANCE SIGNAL
- ◀▶ PLAYBACK VIDEO SIGNAL
- ◀▶ AUDIO SIGNAL(REC)
- ▶▶▶ AUDIO SIGNAL(PB)
- ▶▶▶ TUNER VIDEO SIGNAL
- ▶▶▶ RECORD LUMINANCE SIGNAL
- ▶▶▶ RECORD COLOR SIGNAL

PCB010  
VMX180



# MICON SCHEMATIC DIAGRAM (SYSCON PCB)

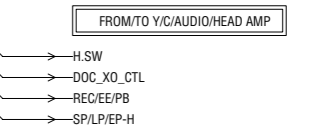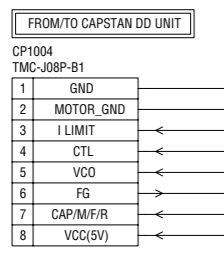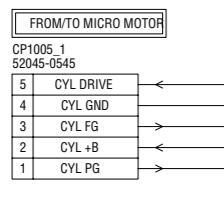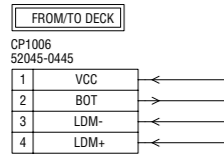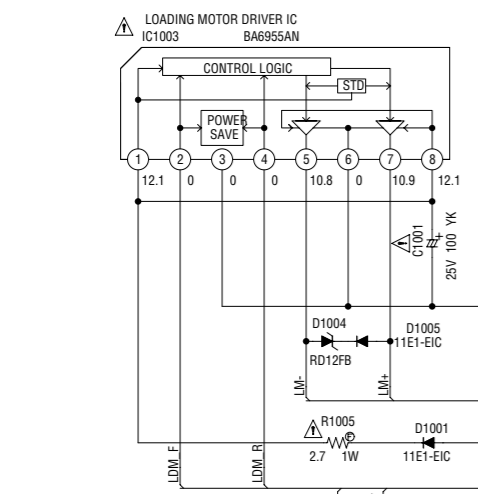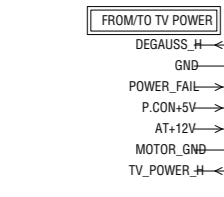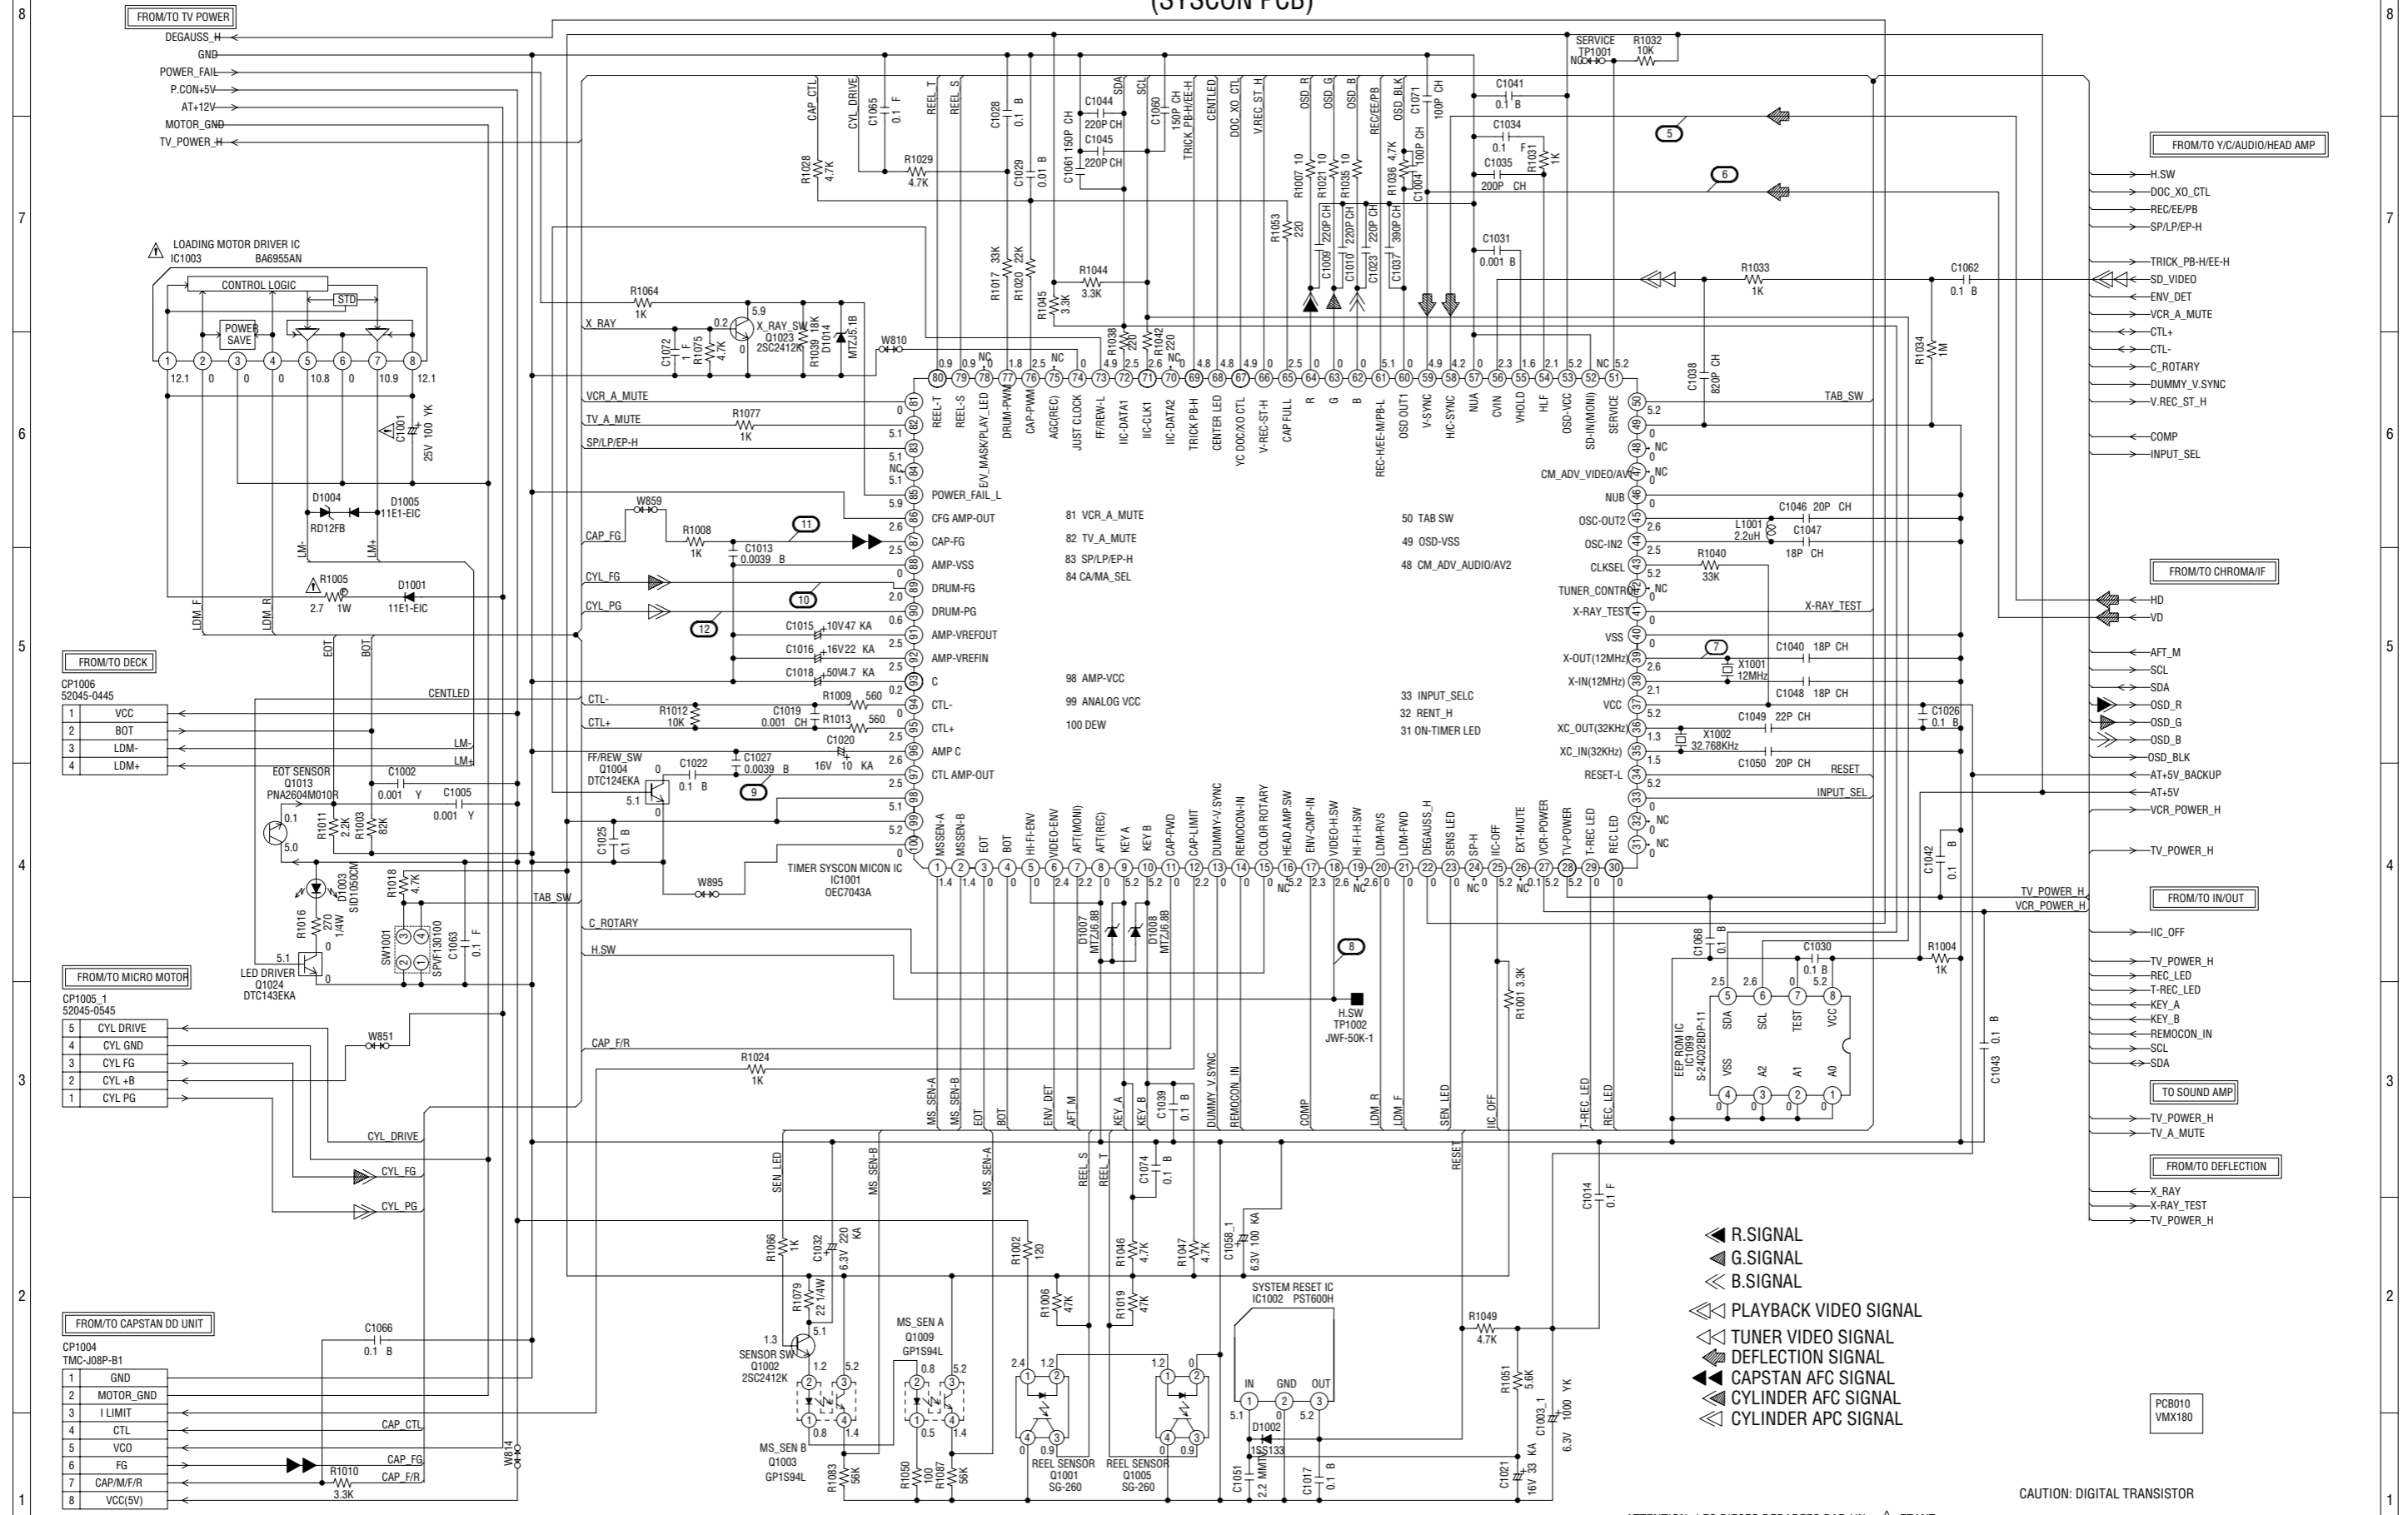

- ◀ R.SIGNAL
- ▶ G.SIGNAL
- ◀ B.SIGNAL
- ▶ PLAYBACK VIDEO SIGNAL
- ▶ TUNER VIDEO SIGNAL
- ▶ DEFLECTION SIGNAL
- ▶ CAPSTAN AFC SIGNAL
- ▶ CYLINDER AFC SIGNAL
- ▶ CYLINDER APC SIGNAL



CAUTION: DIGITAL TRANSISTOR

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR.  
THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIECES REPARÉES PAR UN ÉTANT DANGEREUSES AU POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.


# IN/OUT SCHEMATIC DIAGRAM (SYSCON PCB)

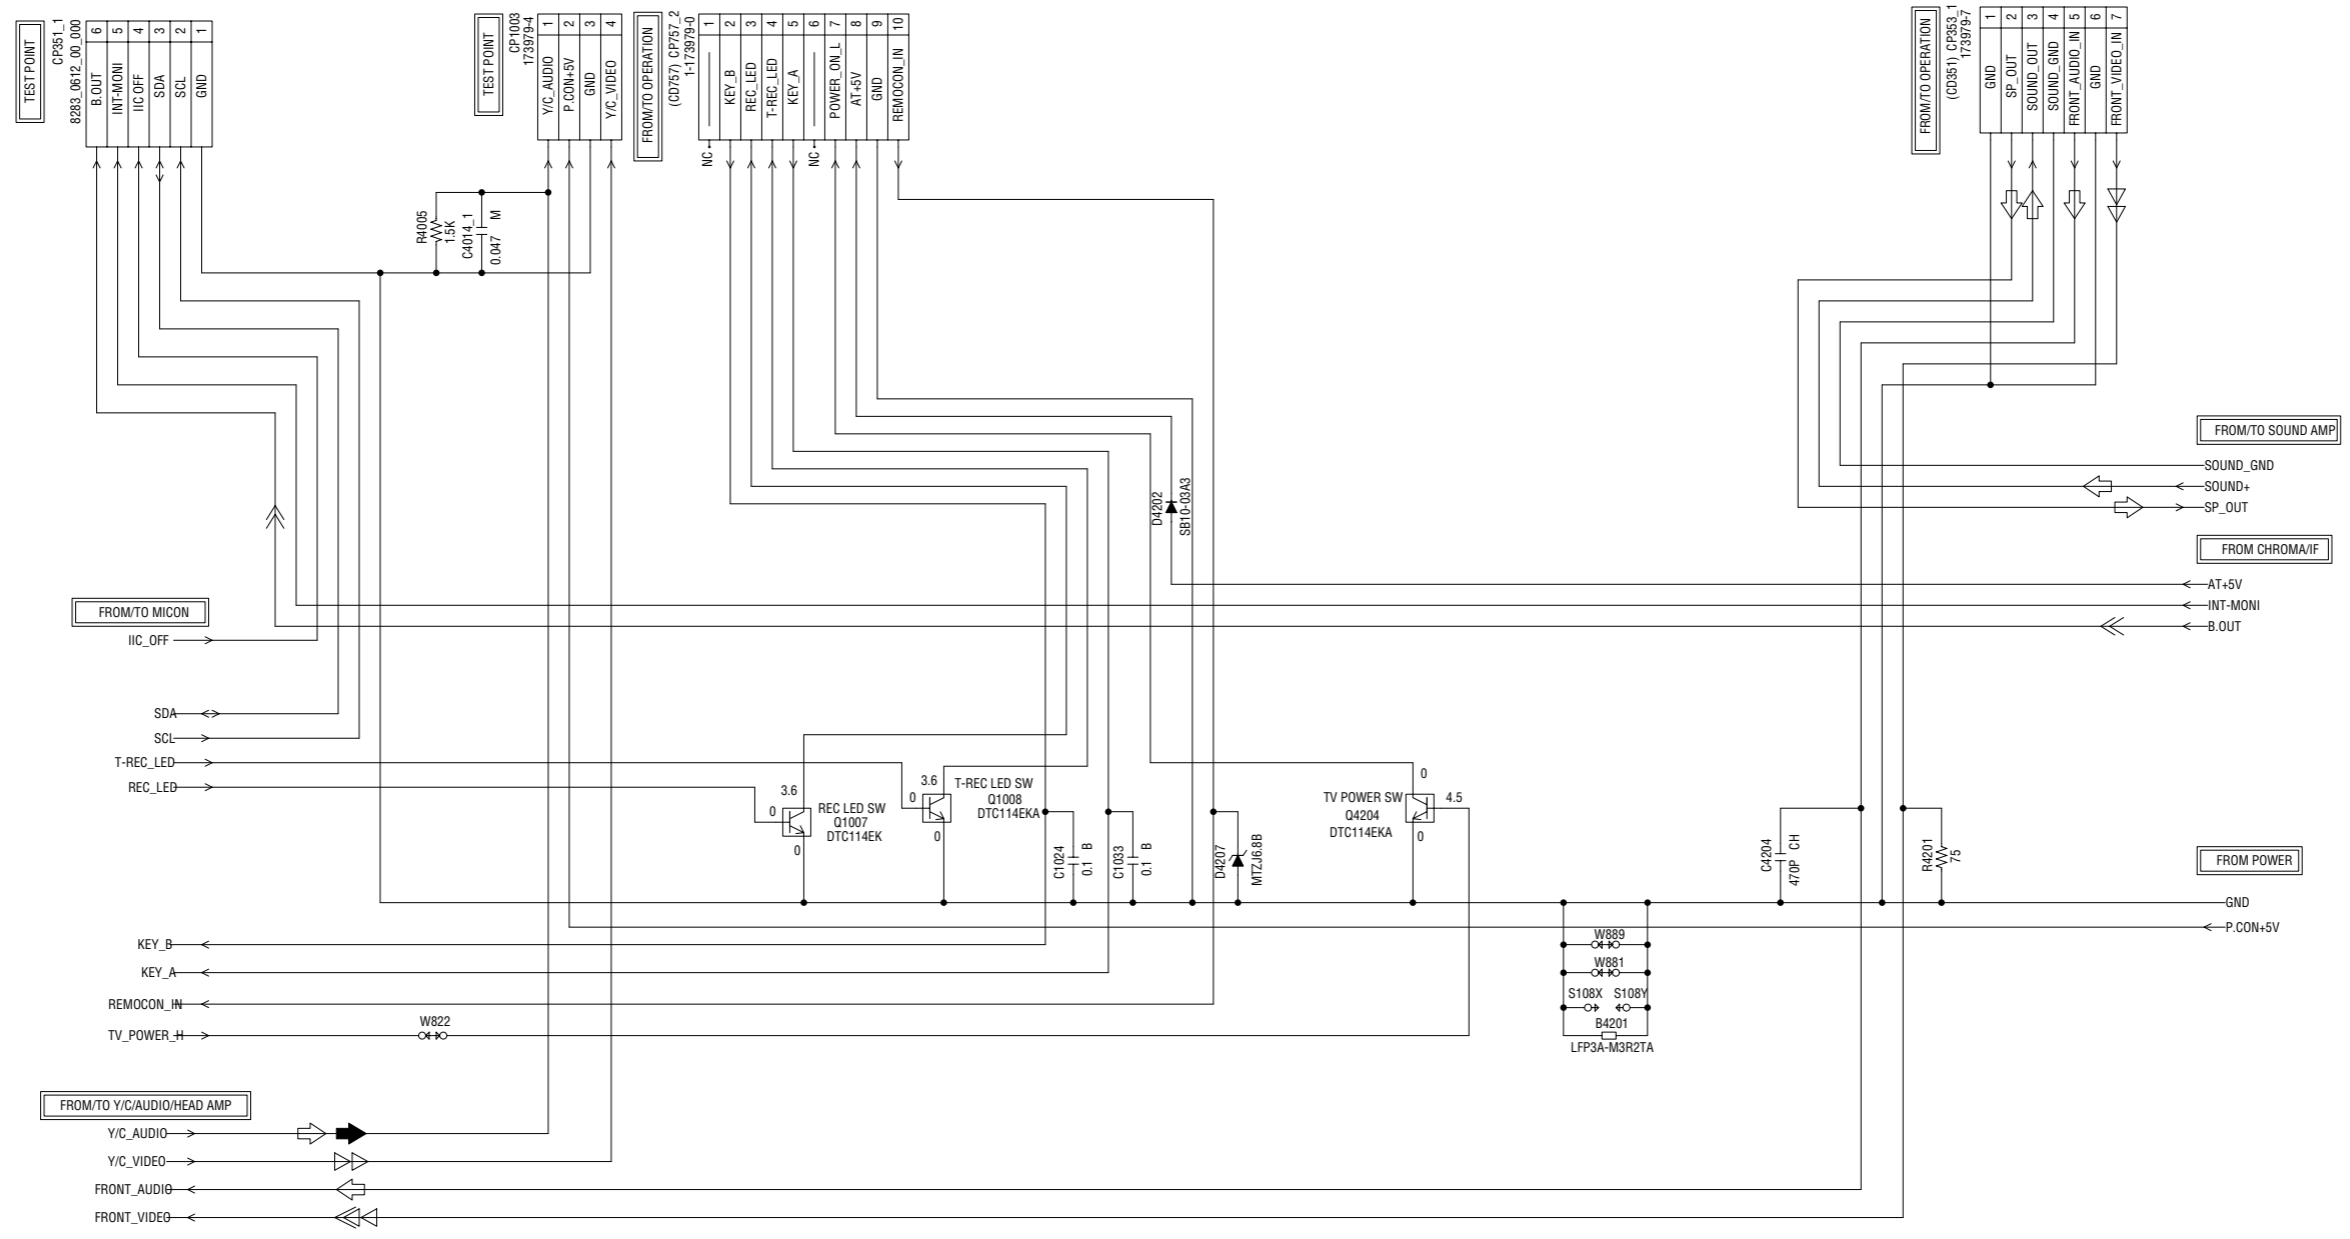

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


CAUTION: DIGITAL TRANSISTOR



- ◀ B.SIGNAL
- ◀◀ PLAYBACK VIDEO SIGNAL
- ◀◀◀ TUNER VIDEO SIGNAL
- ◀◀◀◀ AUDIO SIGNAL(REC)
- ◀◀◀◀◀ AUDIO SIGNAL(PB)


PC8010  
VMX180

# CHROMA/IF SCHEMATIC DIAGRAM (SYSCON PCB)

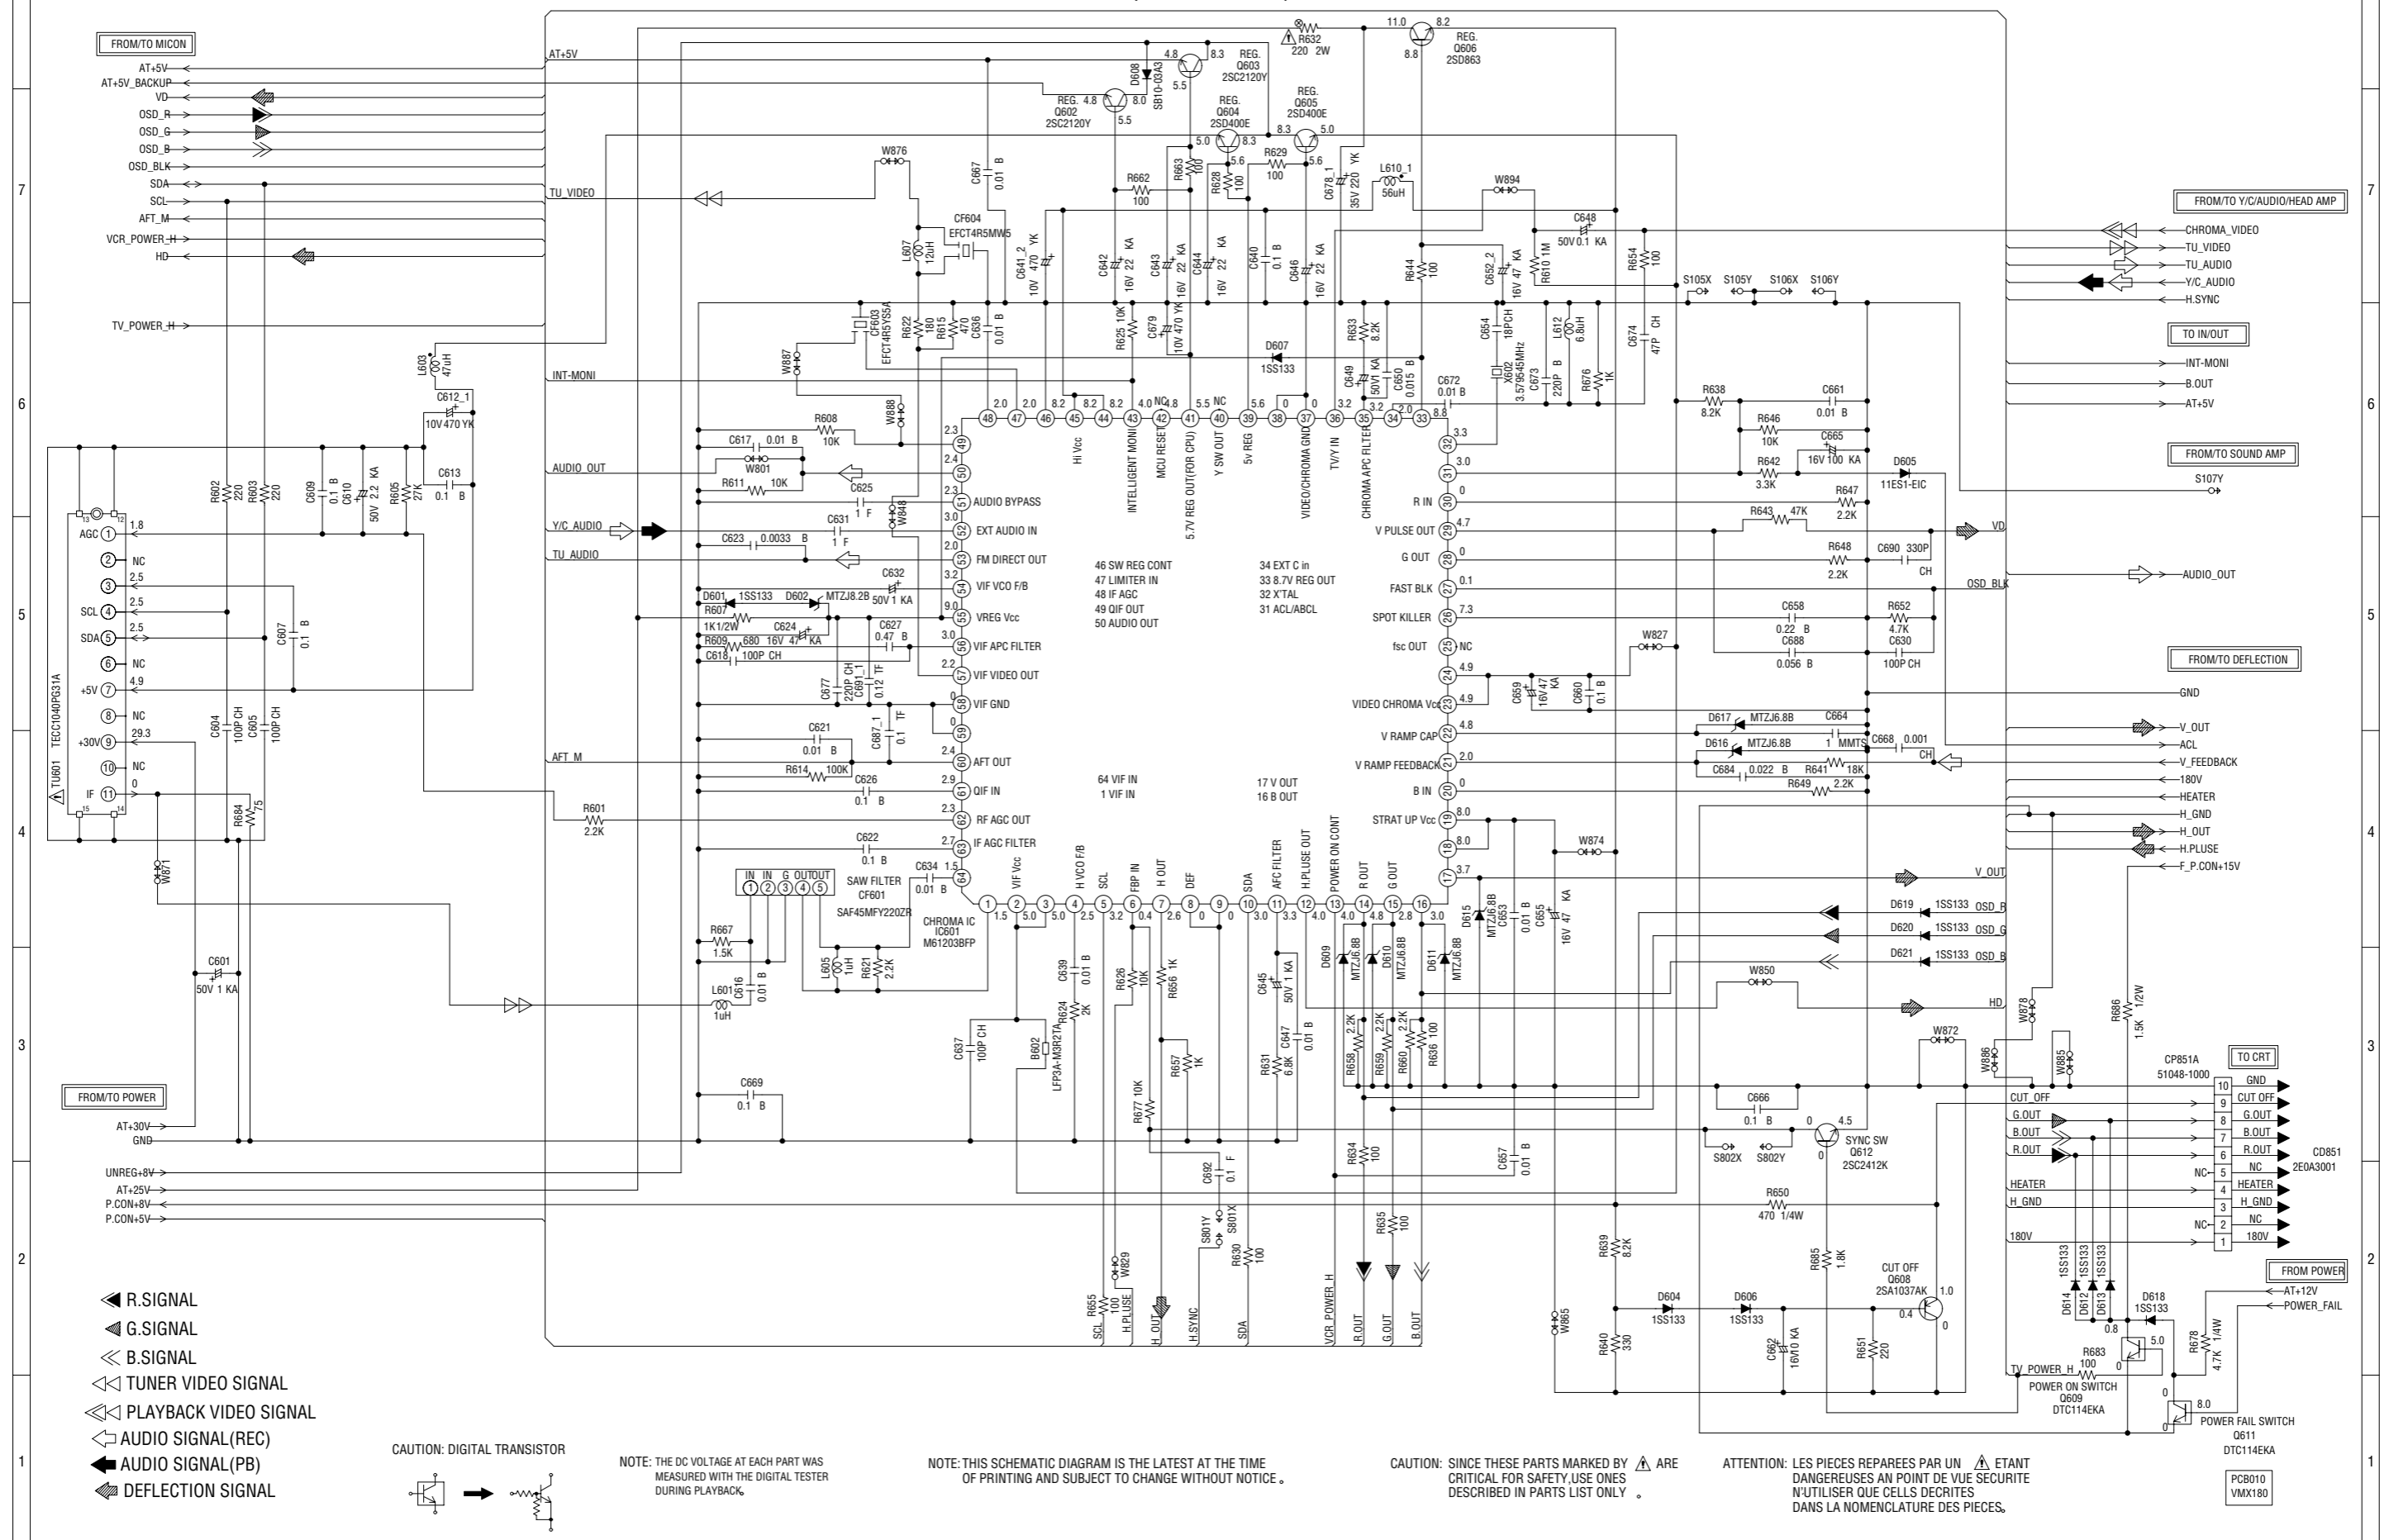

- ◀ R.SIGNAL
- ◀ G.SIGNAL
- ◀ B.SIGNAL
- ◀ TUNER VIDEO SIGNAL
- ◀ PLAYBACK VIDEO SIGNAL
- ◀ AUDIO SIGNAL(REC)
- ◀ AUDIO SIGNAL(PB)
- ◀ DEFLECTION SIGNAL

CAUTION: DIGITAL TRANSISTOR



NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIECES REPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.

PCB010 VMX180

# SOUND AMP SCHEMATIC DIAGRAM (SYSCON PCB)

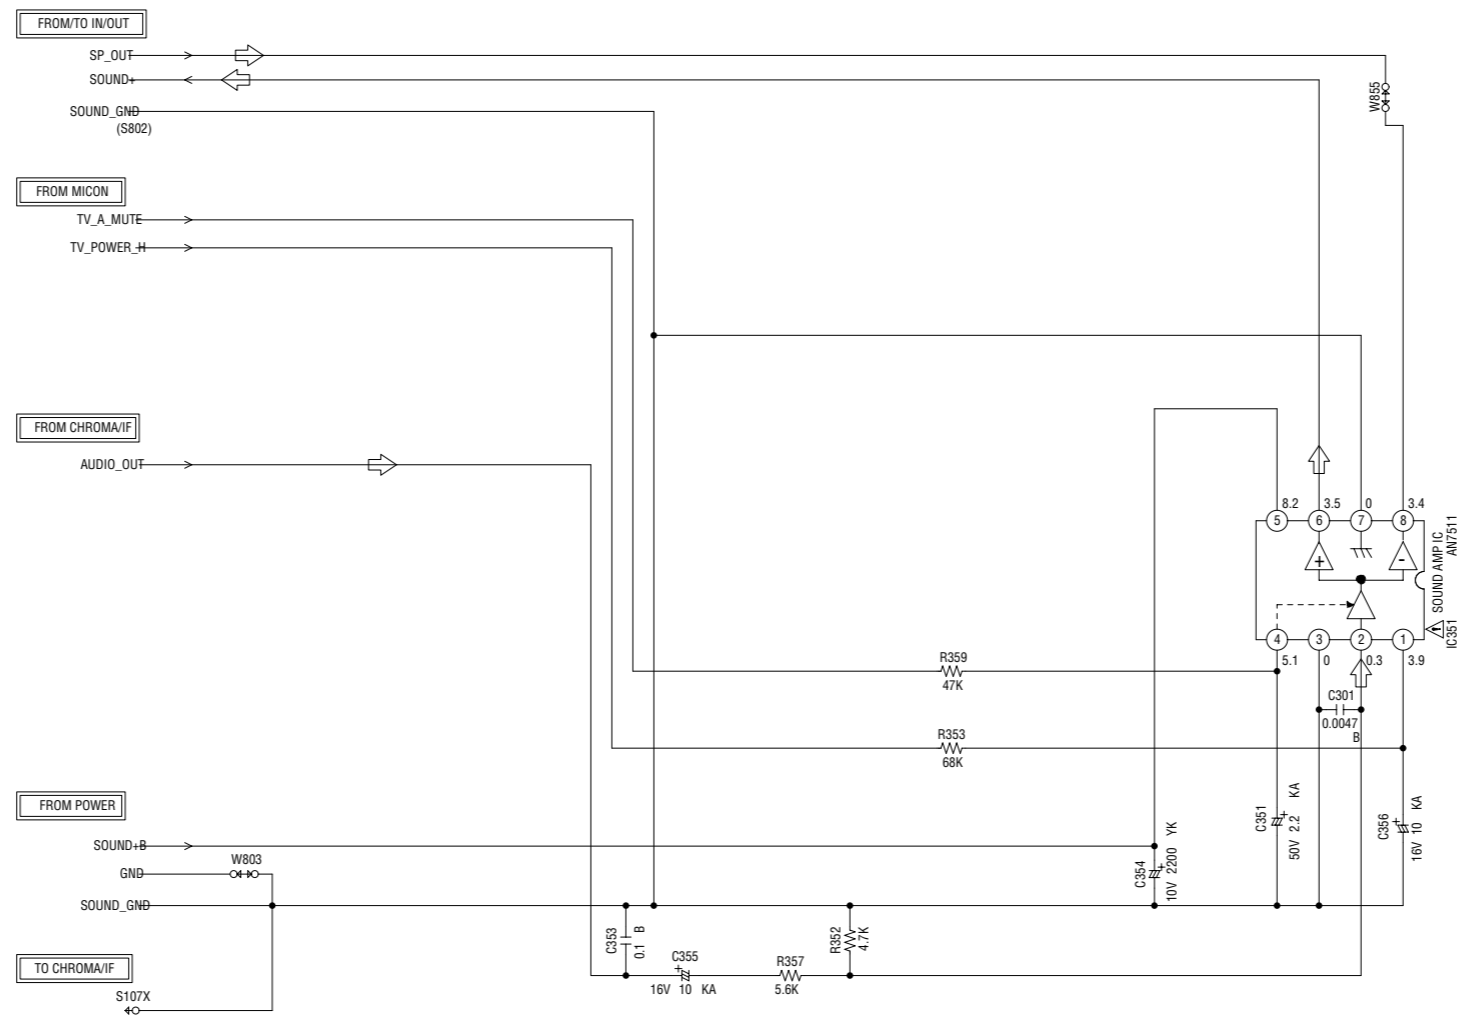

← AUDIO SIGNAL(REC)

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIECES REPARÉES PAR UN ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.

PC8010  
VMX180


# POWER SCHEMATIC DIAGRAM (SYSCON PCB)



CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE FUSE 5A 125V (F501, ICP501, ICP502, ICP503), 2.5A 250V (F502), AND 4A 125V (ICP505).


ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES D'INCEIE N'UTILISER QUE DES FUSIBLE DE MEME TYPE 5A 125V (F501, ICP501, ICP502, ICP503), 2.5A 250V (F502), ET 4A 125V (ICP505).

CAUTION: ICP501, ICP502, ICP503 AND ICP505 ARE MANUFACTURED BY LITTELFUSE INC., TYPE 251.

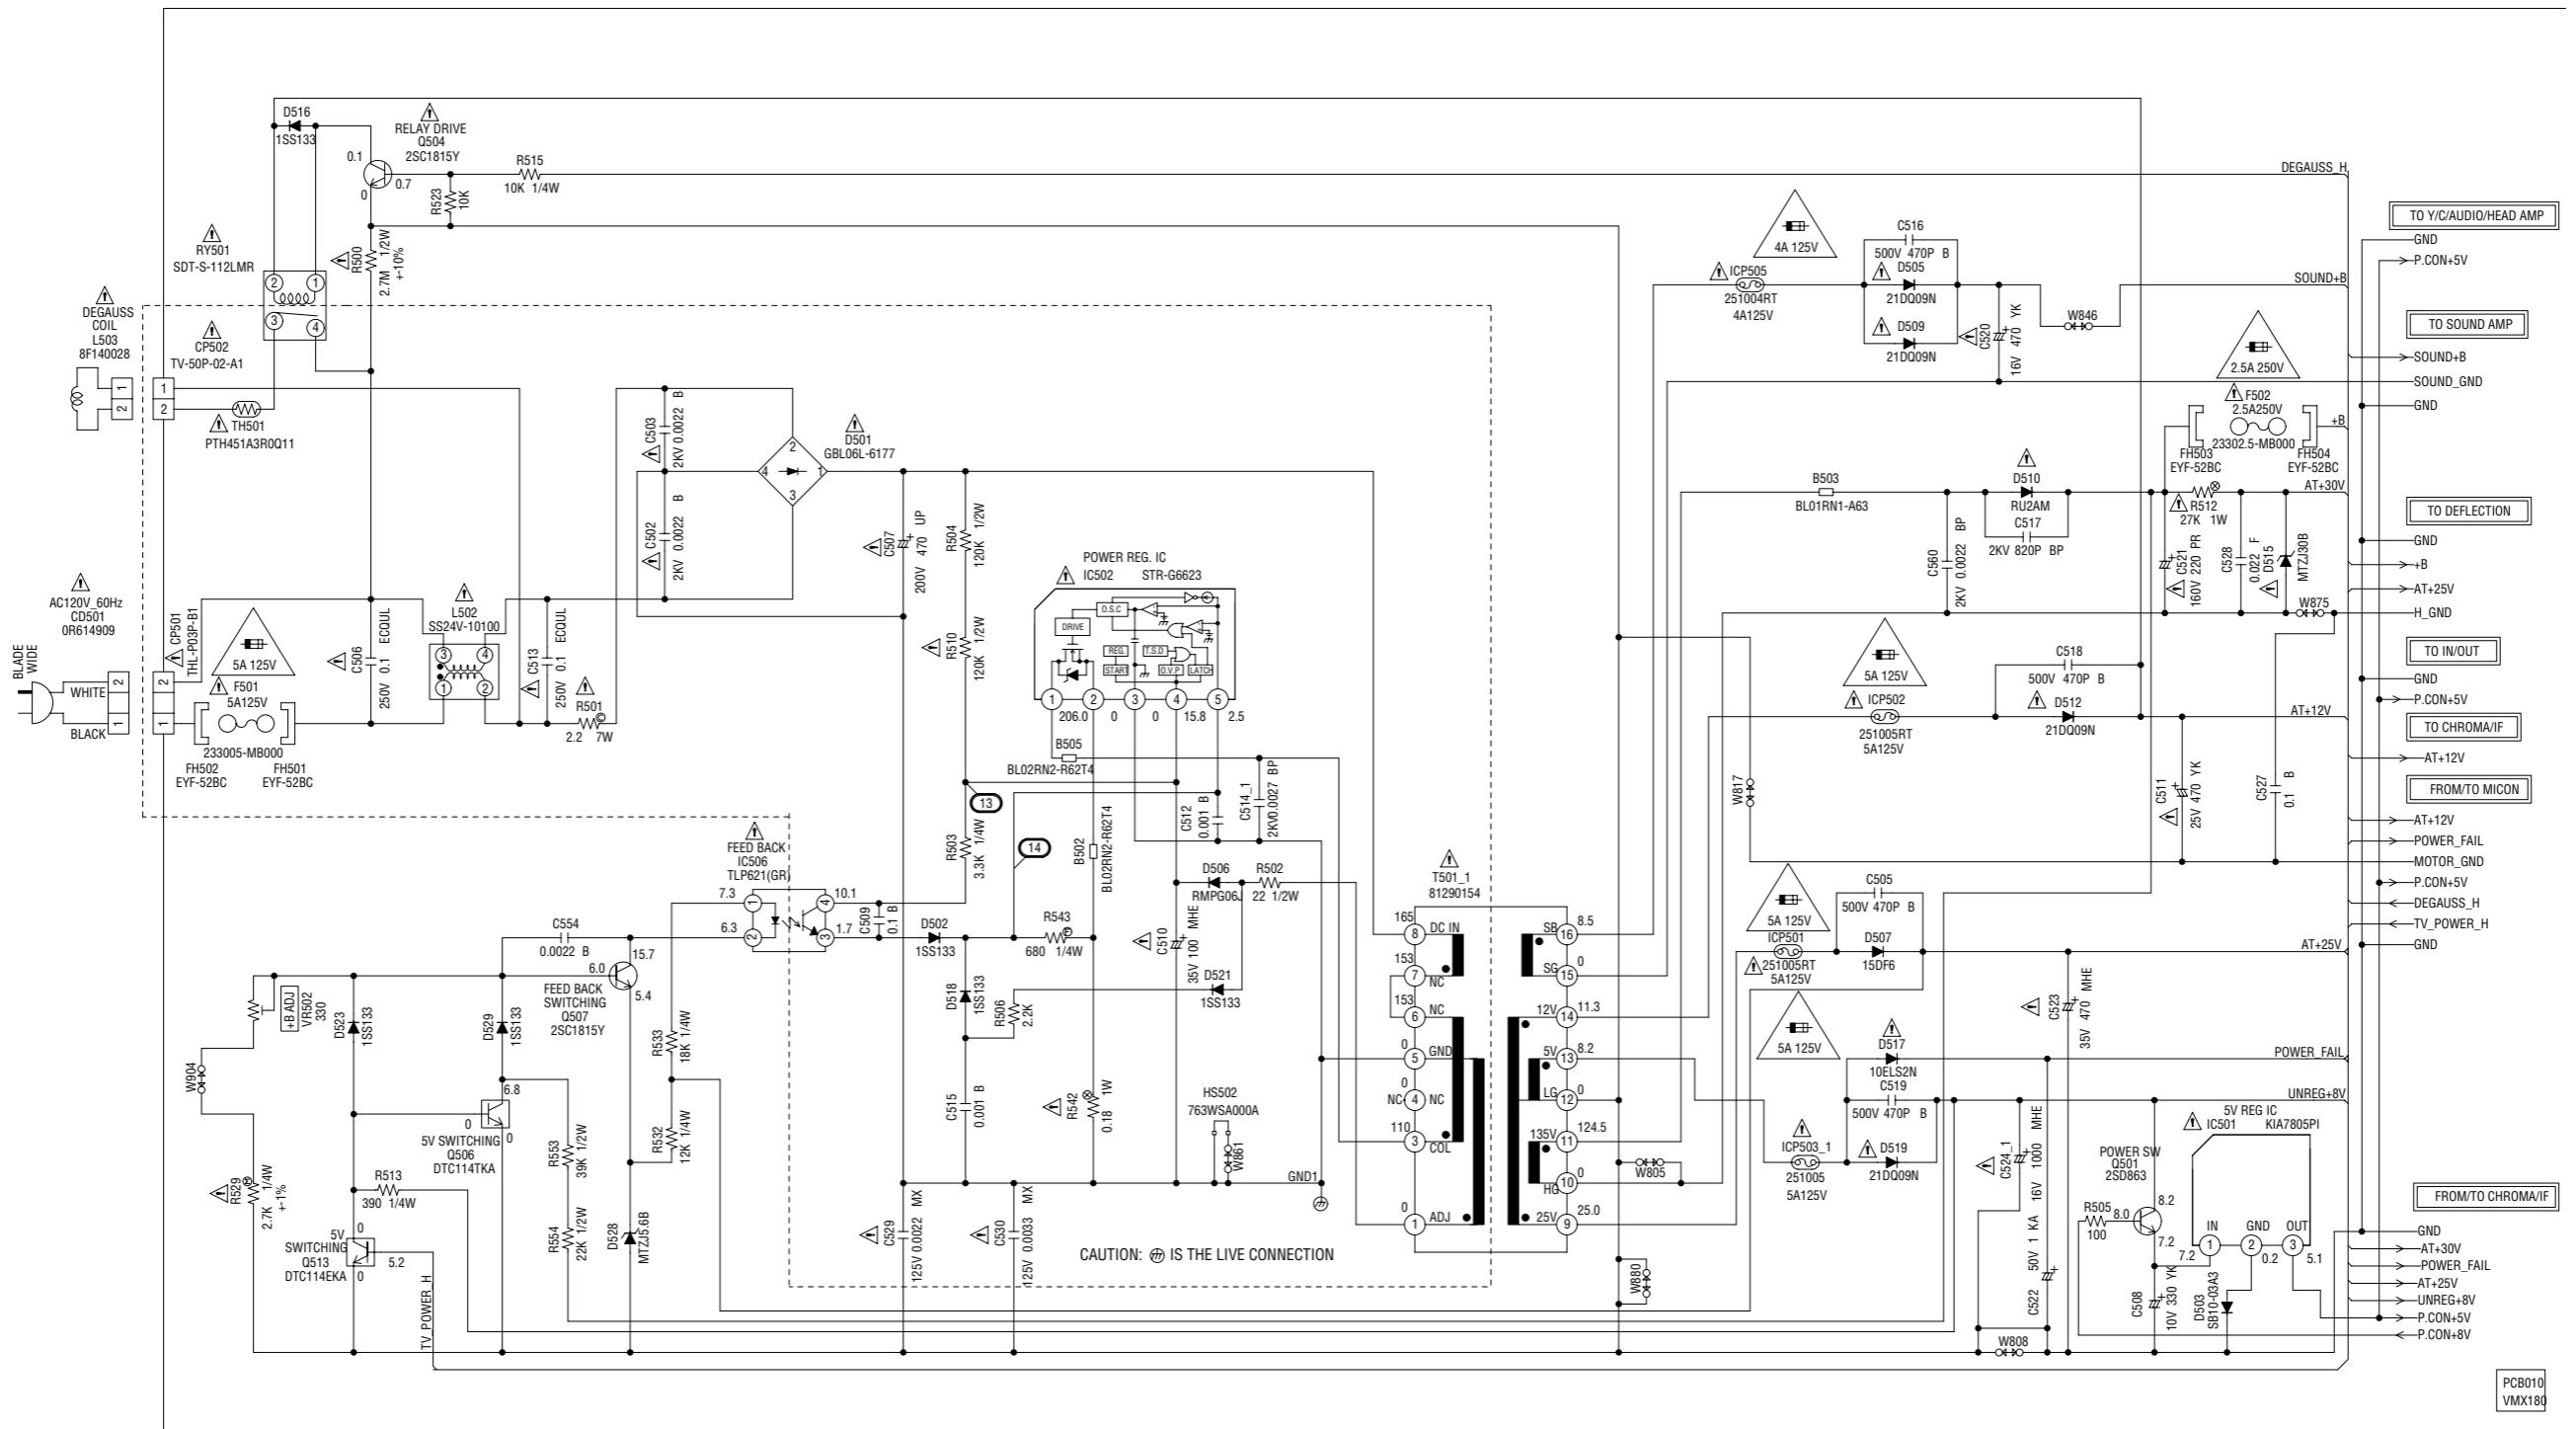

CAUTION: ⊕ IS THE LIVE CONNECTION

CAUTION: DIGITAL TRANSISTOR



NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTION: SINCE THESE PARTS MARKED BY ⊕ ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIECES REPARÉES PAR UN ⊕ ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DÉCRITES DANS LA NOMENCLATURE DES PIECES.

PCB010  
VMX180

# DEFLECTION SCHEMATIC DIAGRAM (SYSCON PCB)

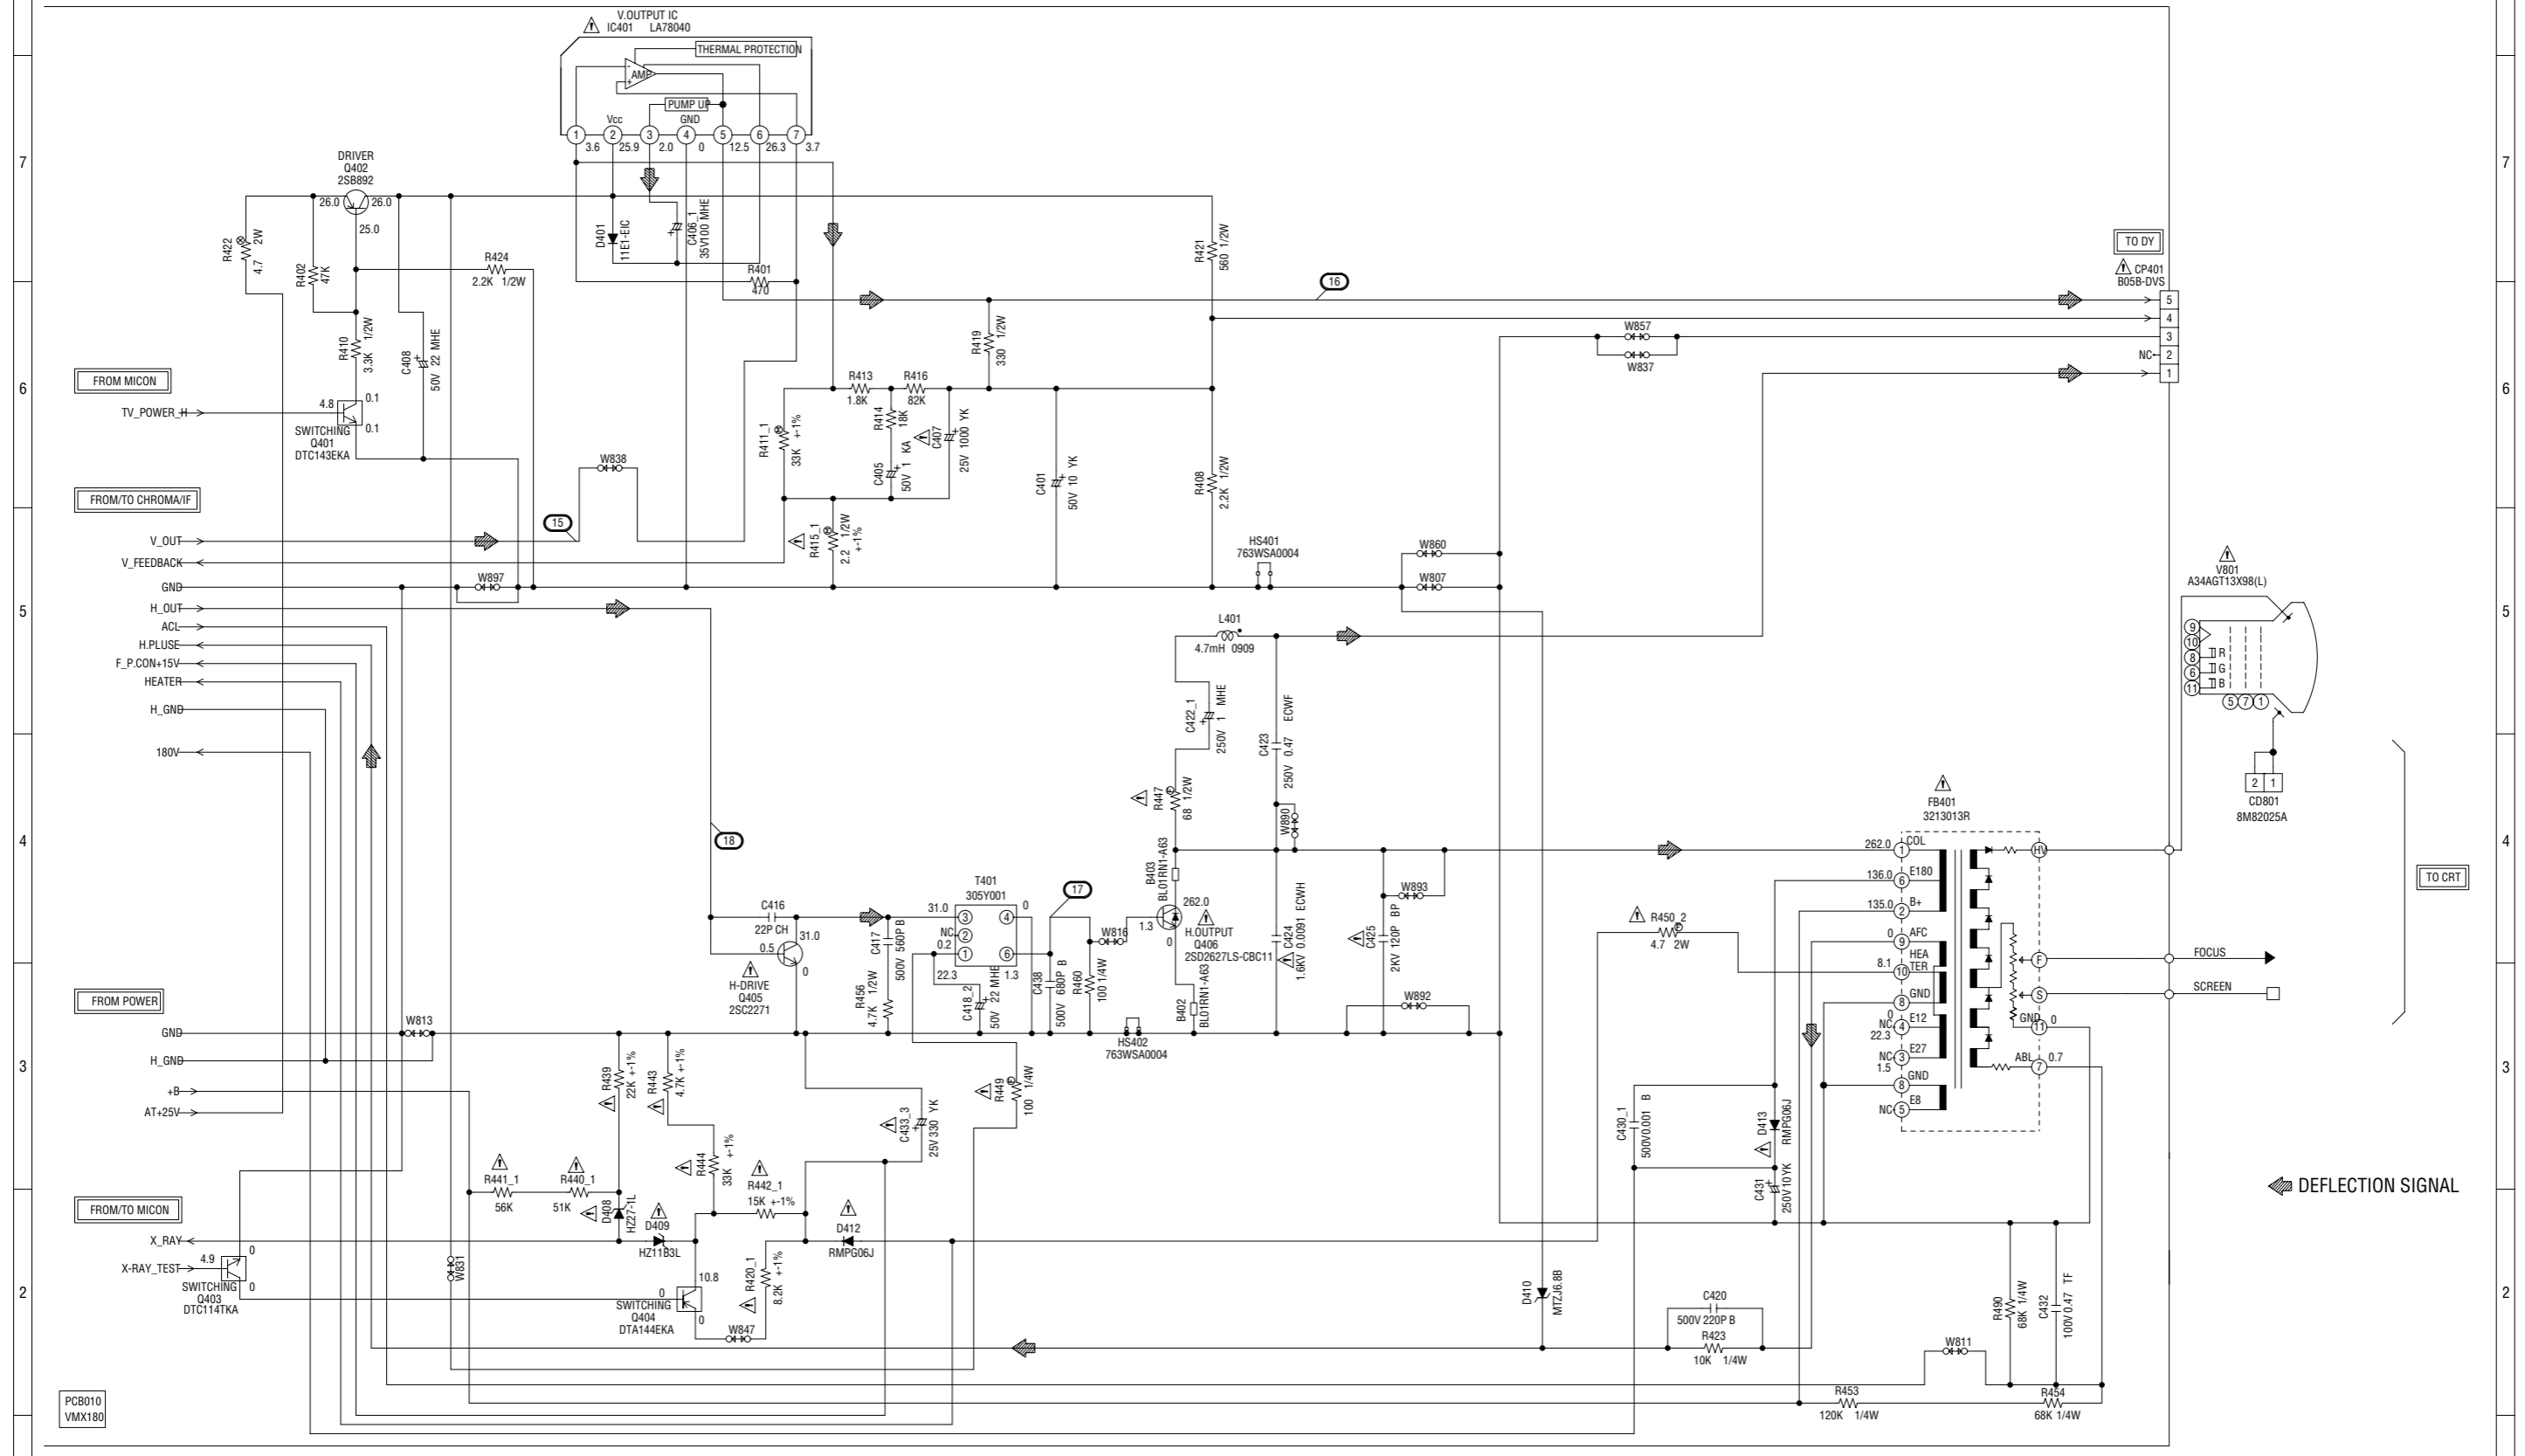


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


CAUTION: SINCE THESE PARTS MARKED WITH A TRIANGLE ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIÈCES RÉPARÉES PAR UN TRIANGLE ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

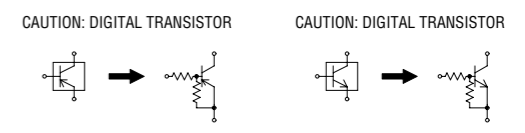

# CRT SCHEMATIC DIAGRAM (SYSCON PCB)

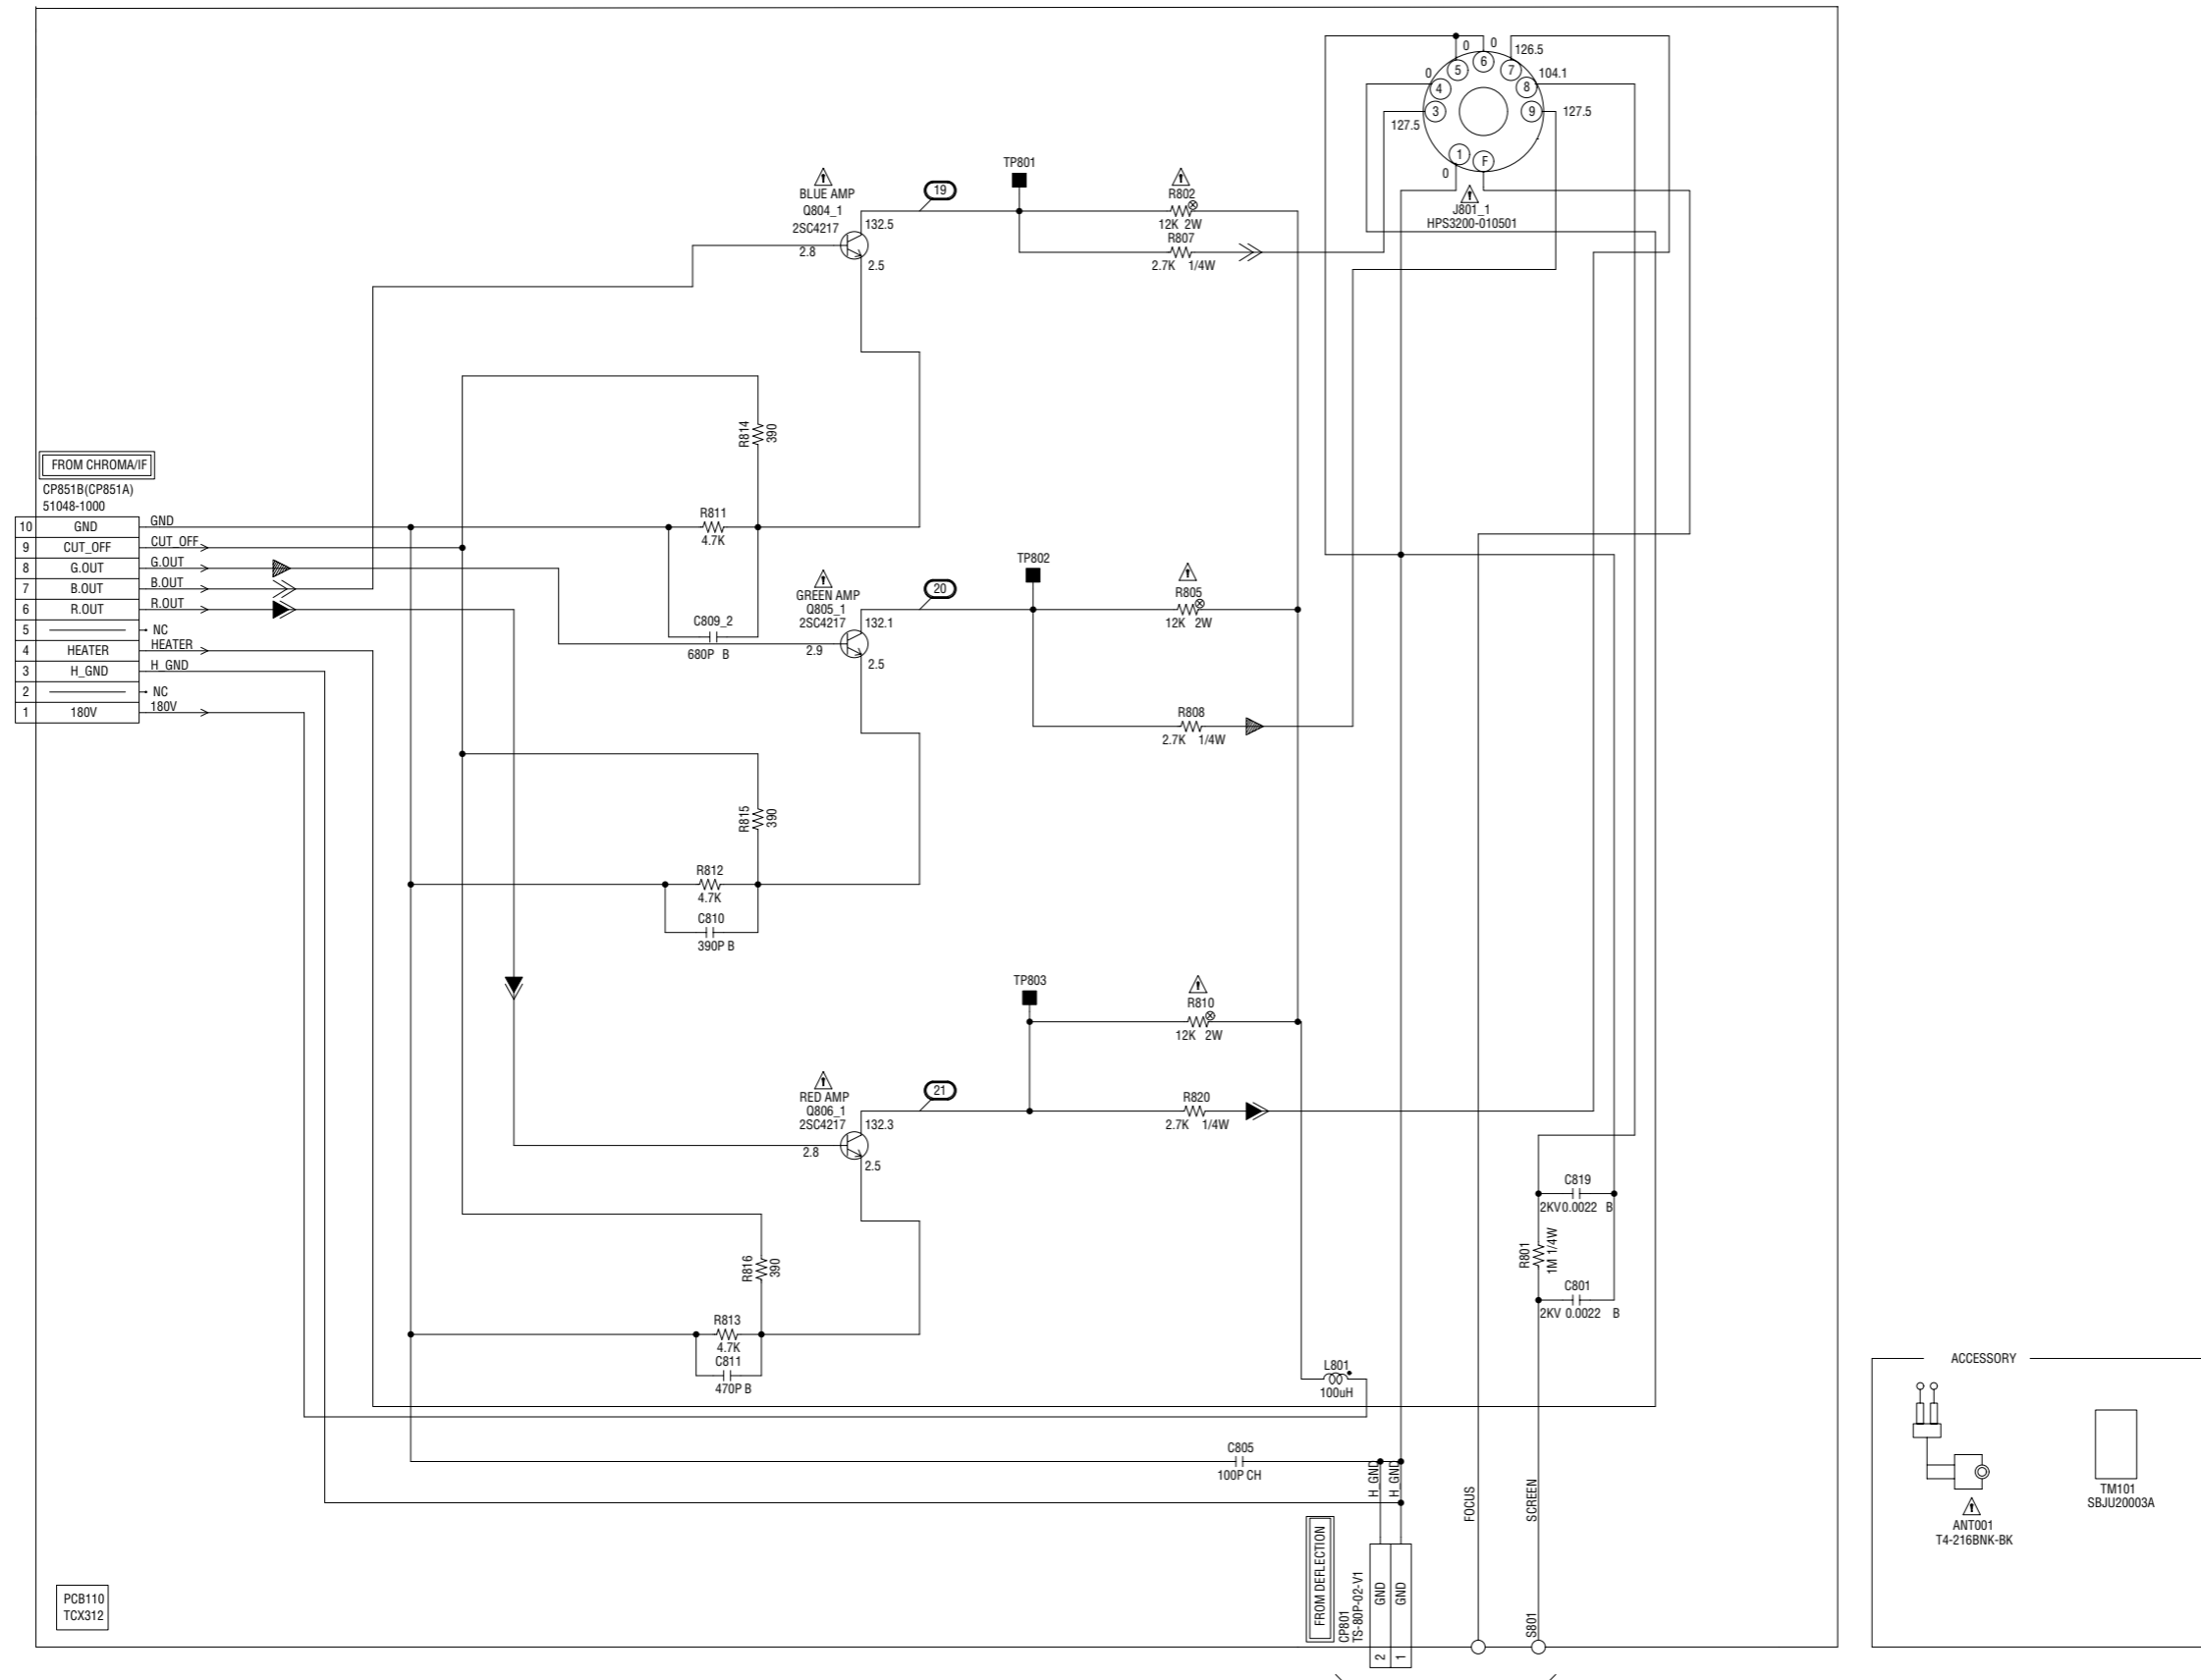

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIECES REPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.

◀ R.SIGNAL  
◀ G.SIGNAL  
◀ B.SIGNAL

# OPERATION SCHEMATIC DIAGRAM (OPERATION PCB)

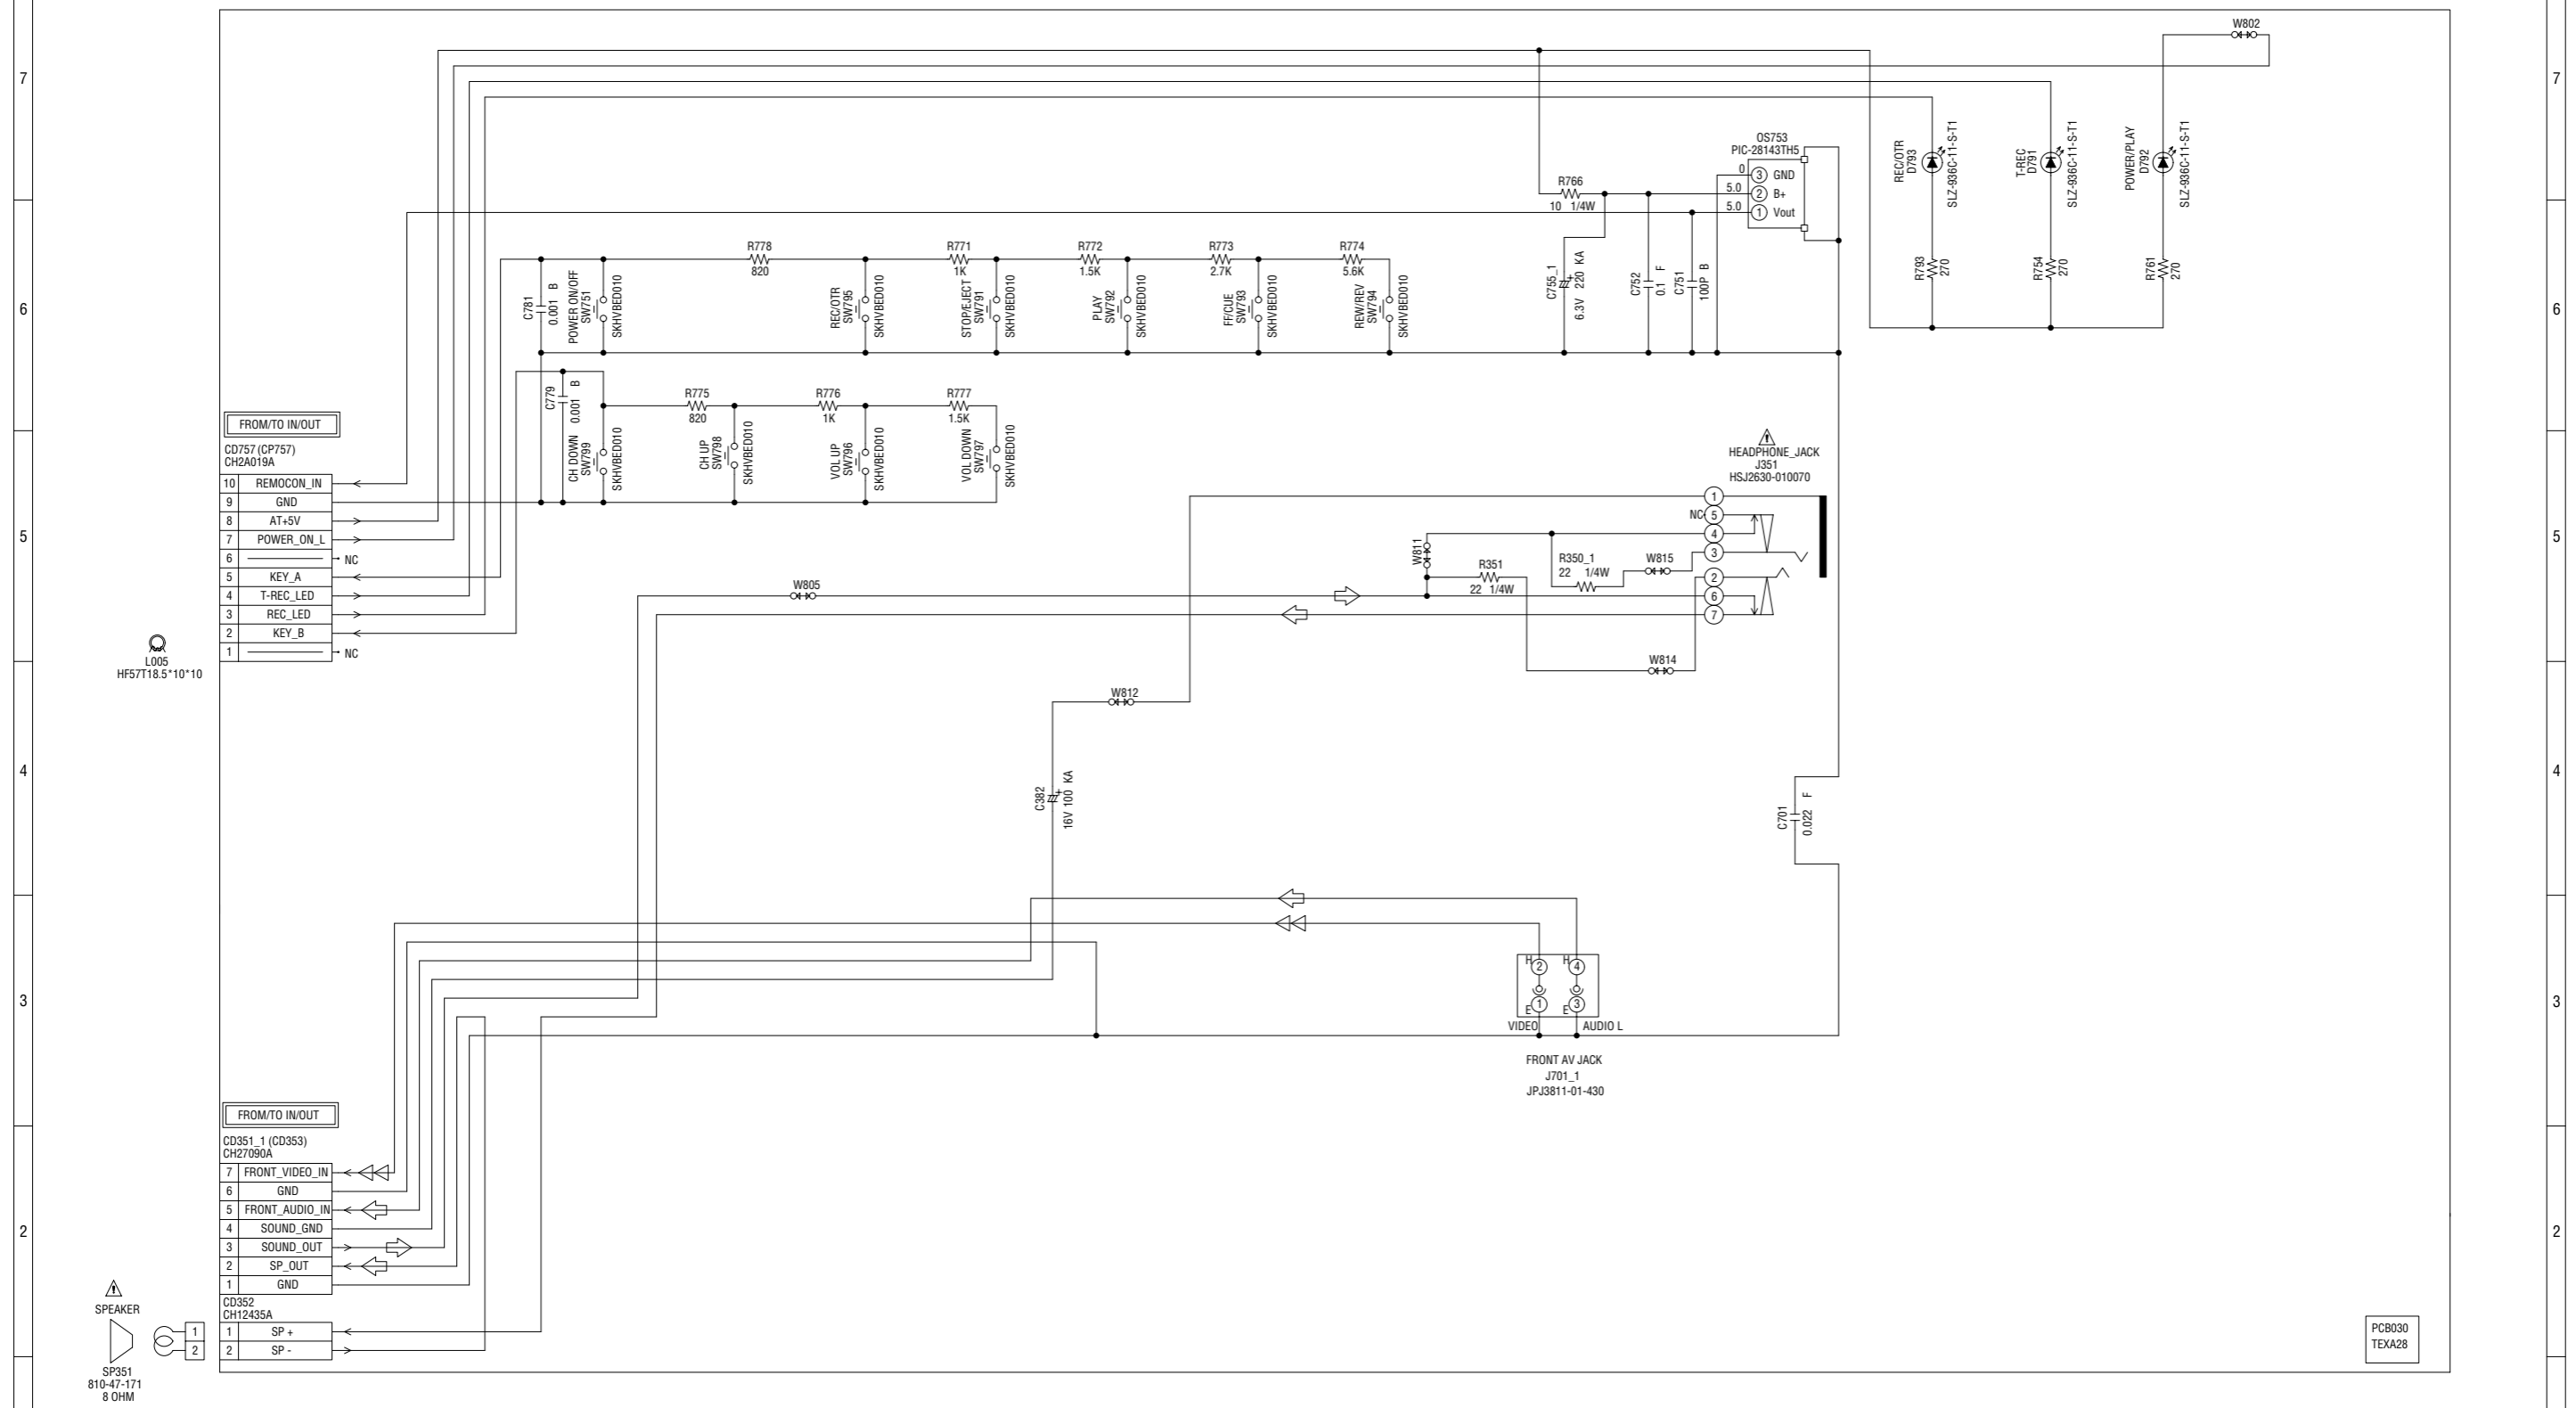

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIÈCES REPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

TUNER VIDEO SIGNAL  
 AUDIO SIGNAL (REC)



# DECK SCHEMATIC DIAGRAM (DECK PCB)

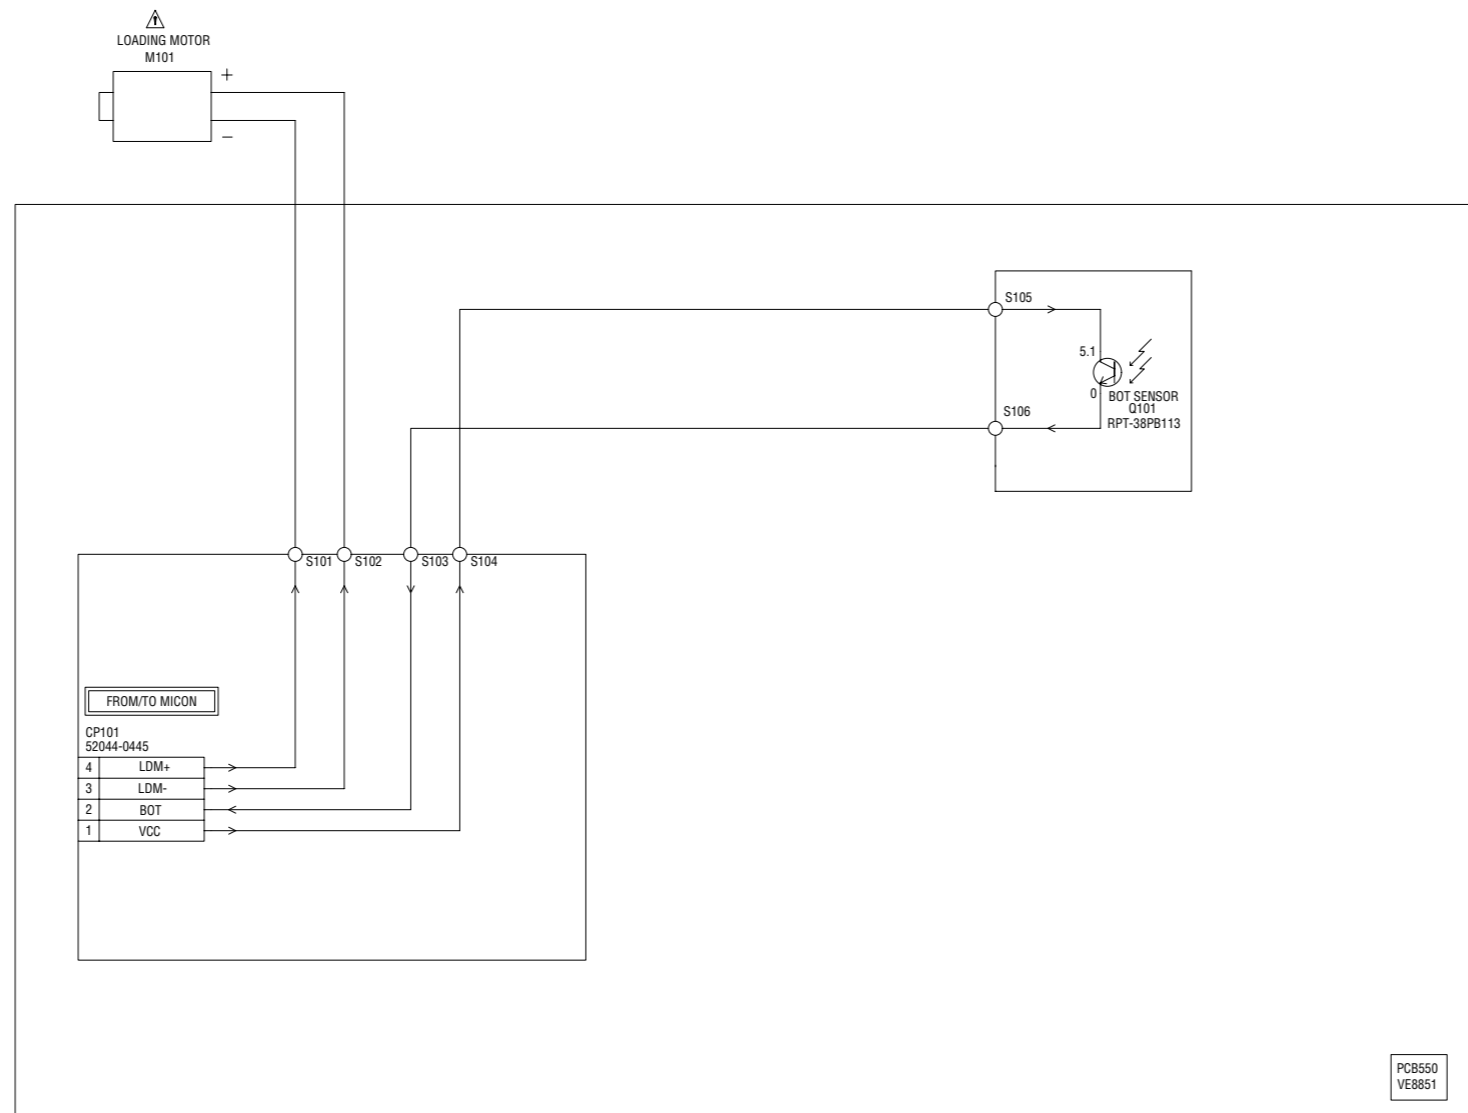


CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY .

ATTENTION: LES PIECES REPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE .

# INTERCONNECTION DIAGRAM

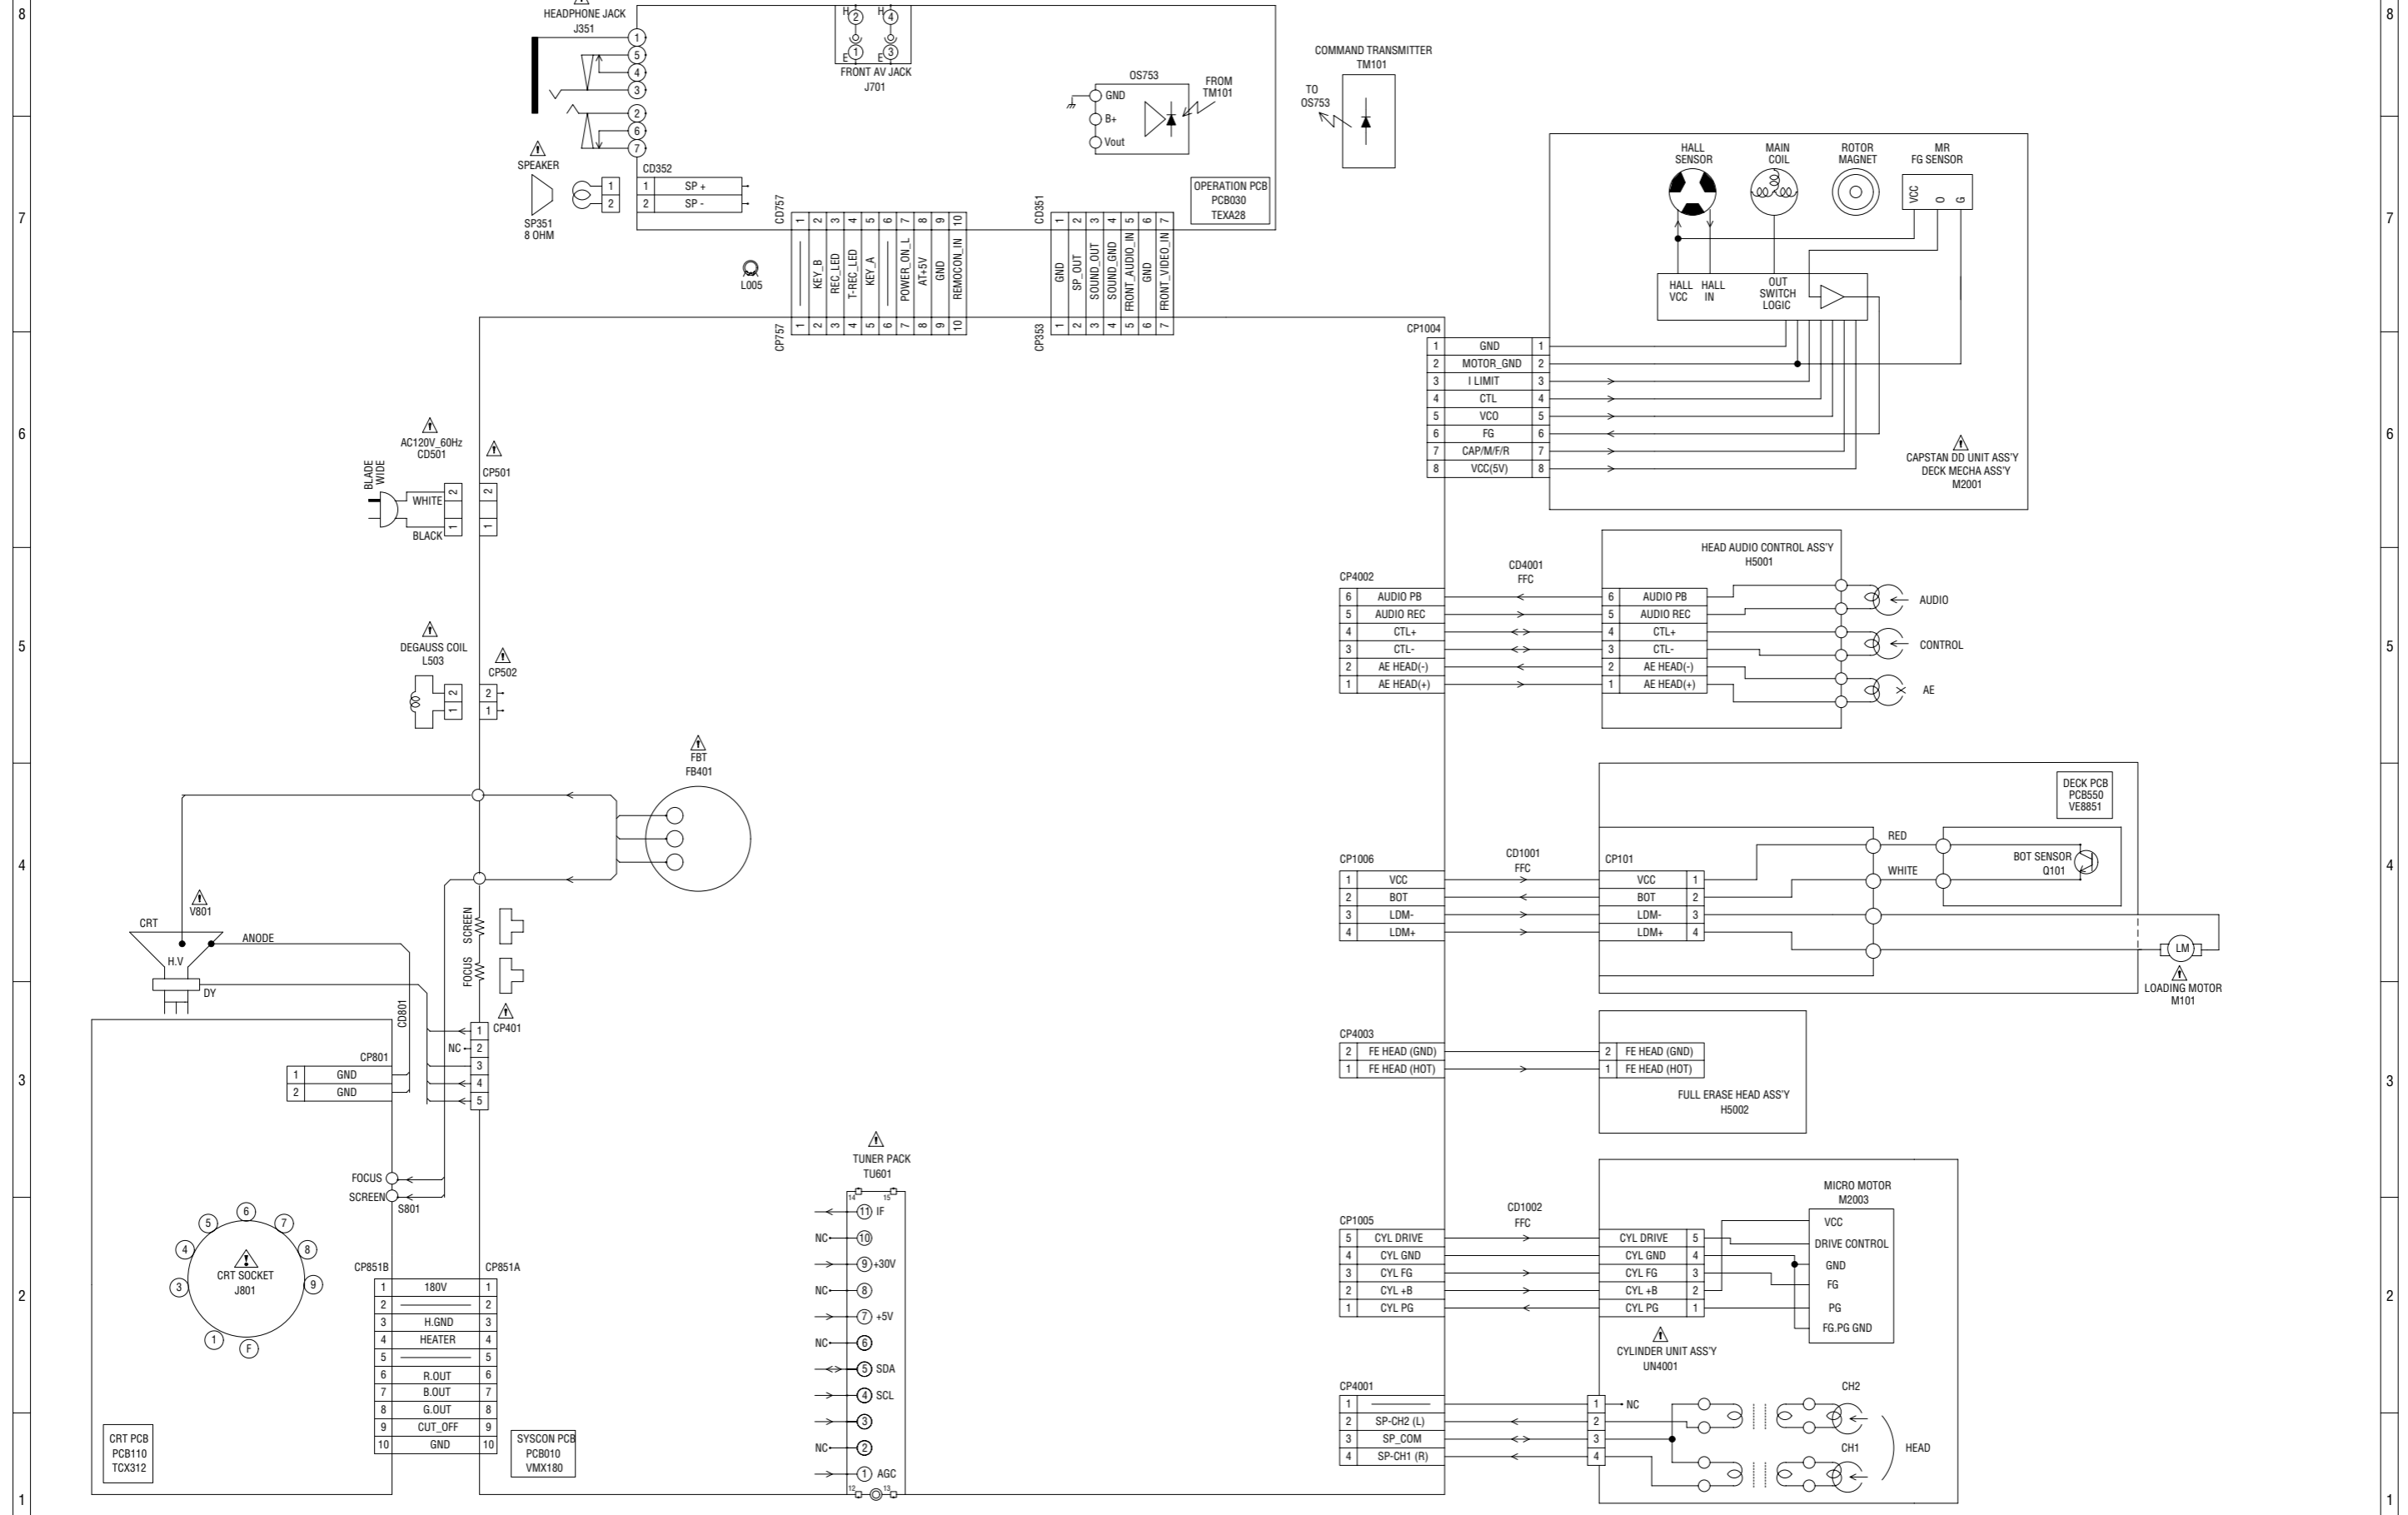


NOTE: THIS INTERCONNECTION DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE .

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY .


ATTENTION: LES PIECES REPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DÉCRITES DANS LA NOMENCLATURE DES PIECES.

# WAVEFORMS


## Y/C/AUDIO/HEAD AMP

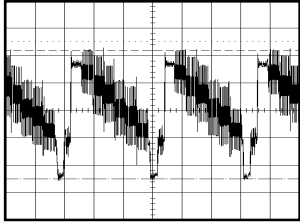


① PB  
0.5V 20 $\mu$ s/div

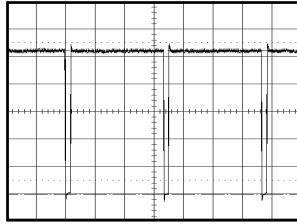


⑥ POWER ON  
0.5V 10ms/div

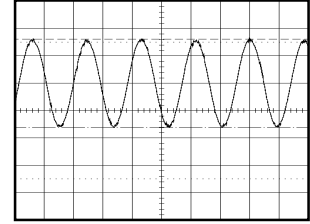


⑪ PB  
0.5V 0.5ms/div

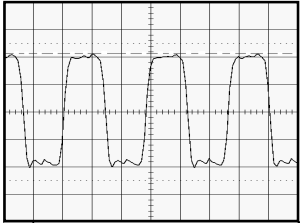


② POWER ON  
100mV 0.1 $\mu$ s/div

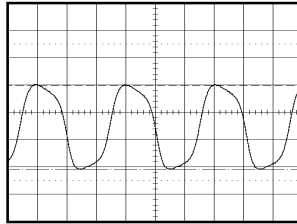


⑦ POWER ON  
1.0V 10 $\mu$ s/div

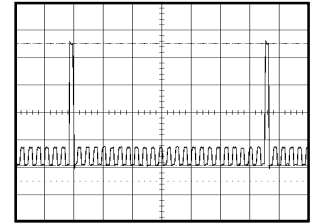

⑫ PB  
1.0V 5ms/div

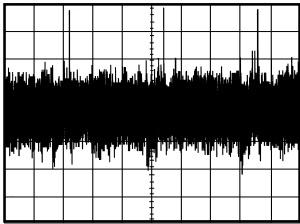


③ PB  
10mV 20 $\mu$ s/div

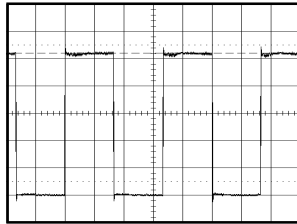


⑧ PB  
1.0V 10ms/div


## POWER

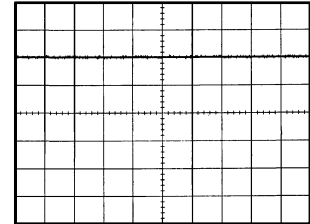


⑬ 5.0V 20ms/div

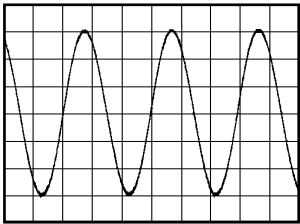

④ REC  
10.0V 5 $\mu$ s/div

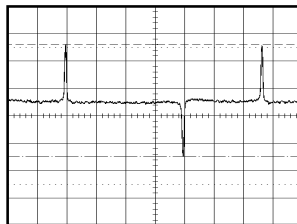


⑨ PB  
1.0V 5ms/div

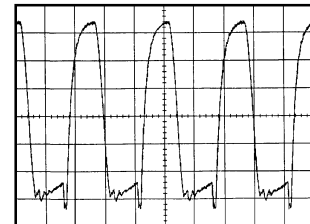


⑭ 500mV 5 $\mu$ s/div

## MICON

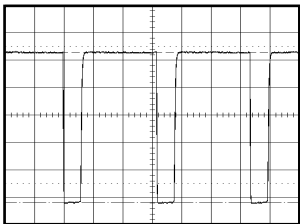


⑤ POWER ON  
1.0V 20 $\mu$ s/div

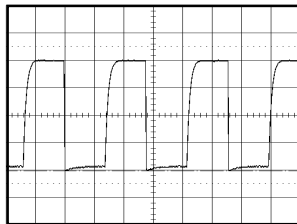

⑩ PB  
1.0V 0.5ms/div


## DEFLECTION

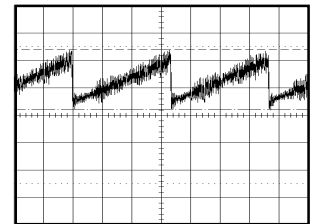


⑮ 0.5V 5ms/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.


## WAVEFORMS

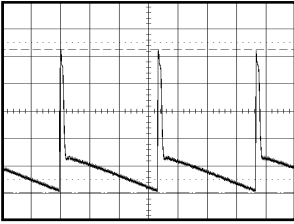


①⑥ 10.0V 5ms/div

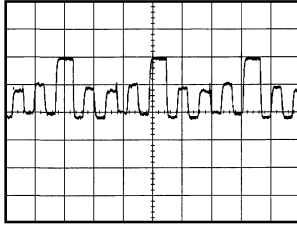

②① 50.0V 20μs/div

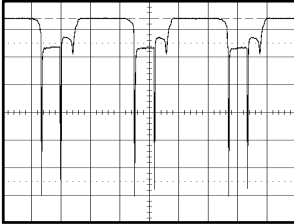


①⑦ 2.0V 20μs/div

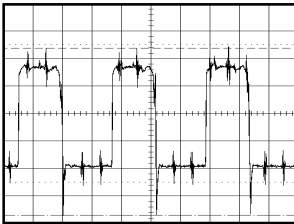


①⑧ 200mV 20μs/div

### CRT

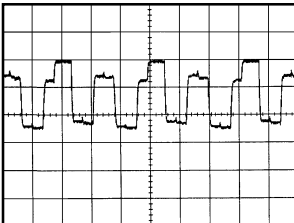


①⑨ 50.0V 20μs/div

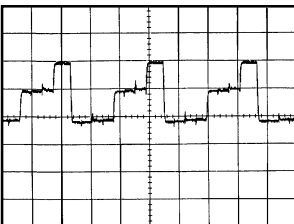


②⑦ 50.0V 20μs/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.


# MECHANICAL EXPLODED VIEW

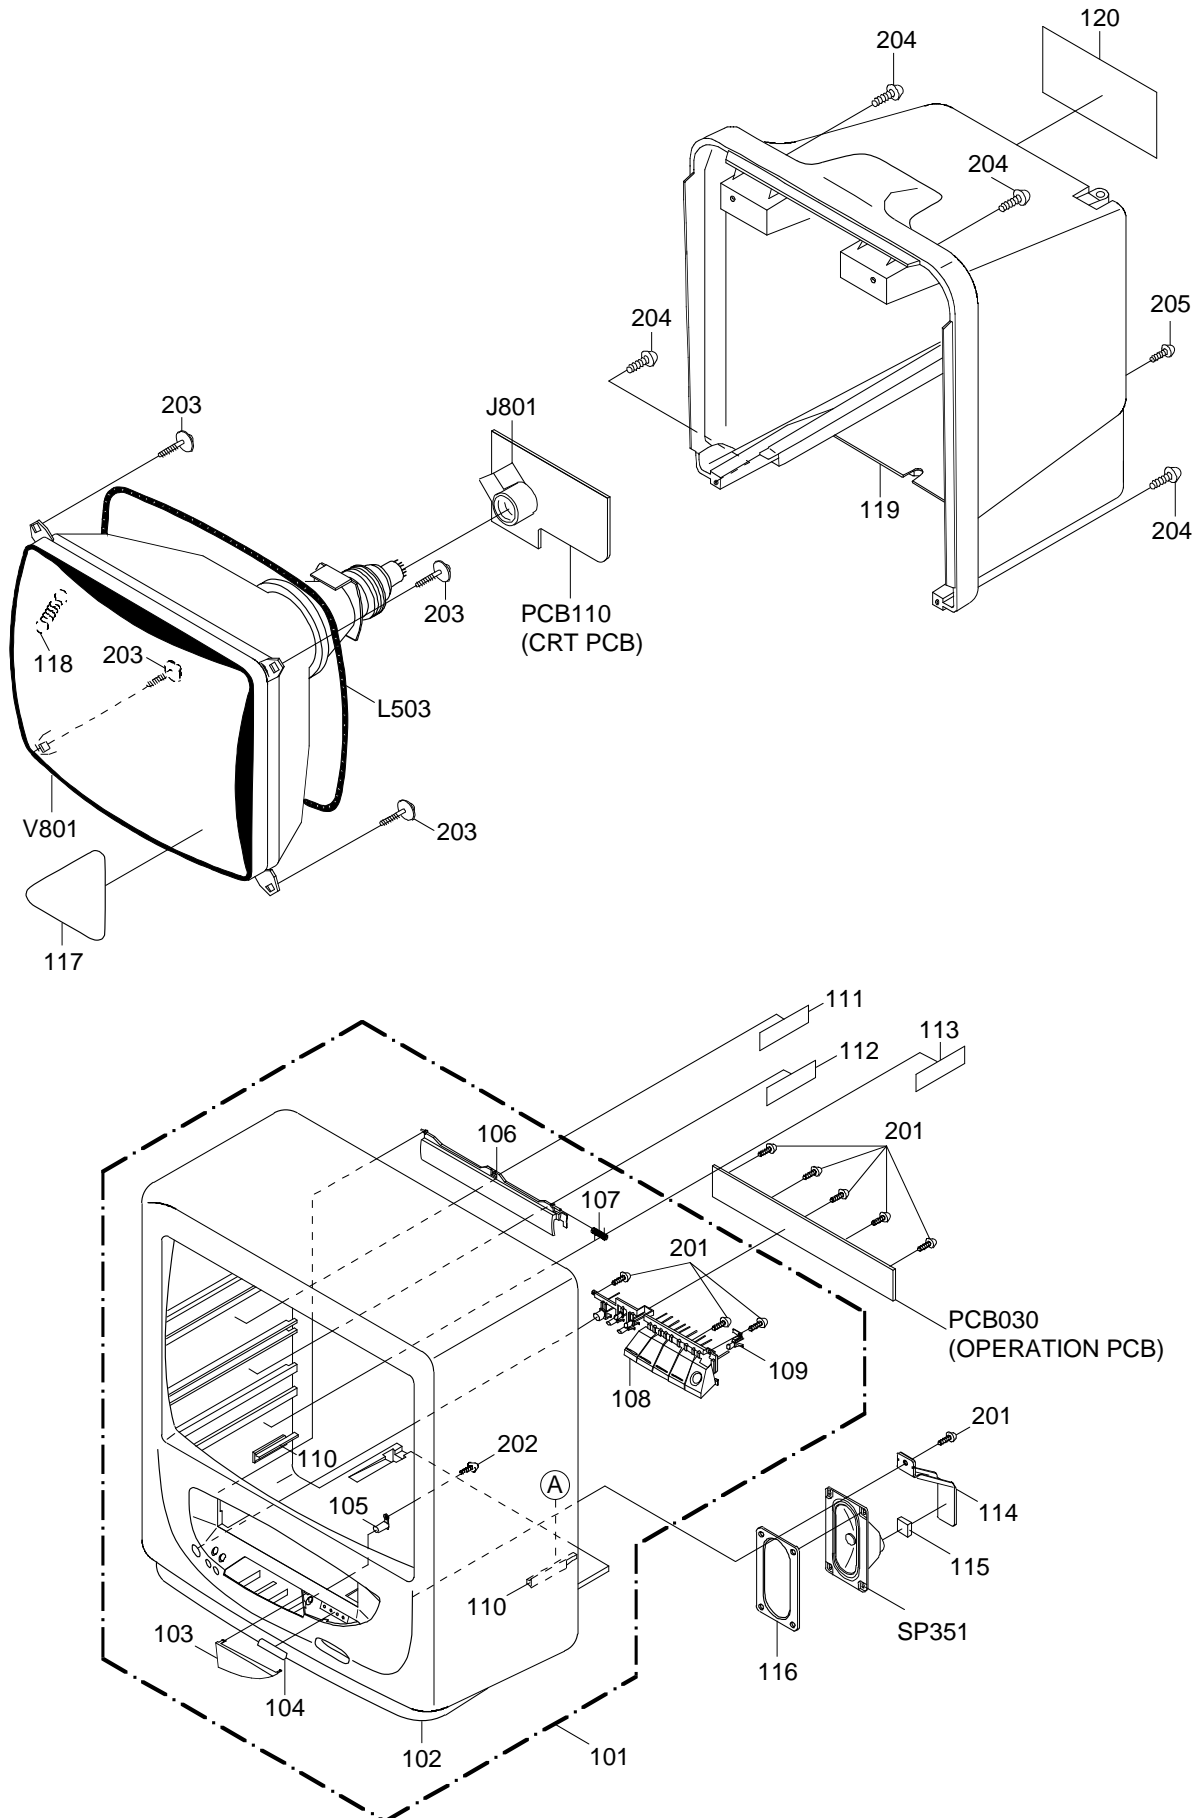

# MECHANICAL EXPLODED VIEW

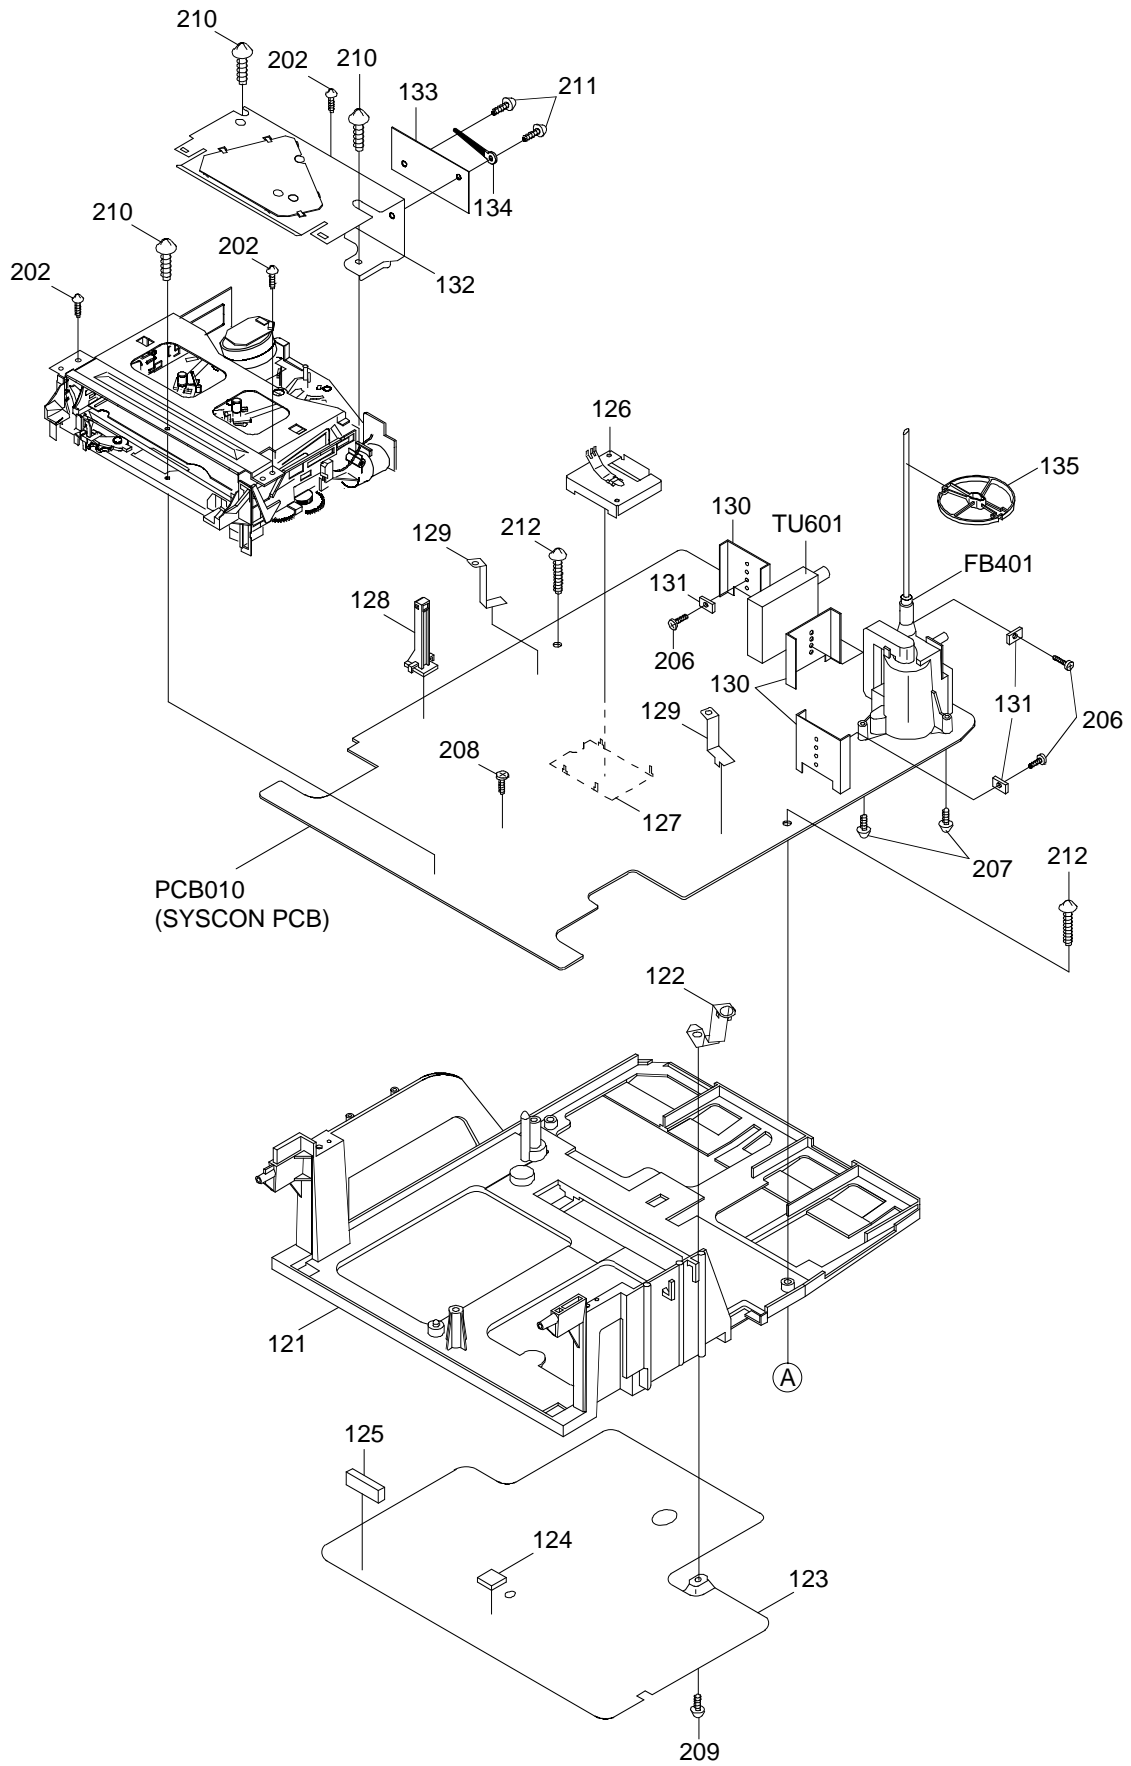


# CHASSIS EXPLODED VIEW (TOP VIEW)

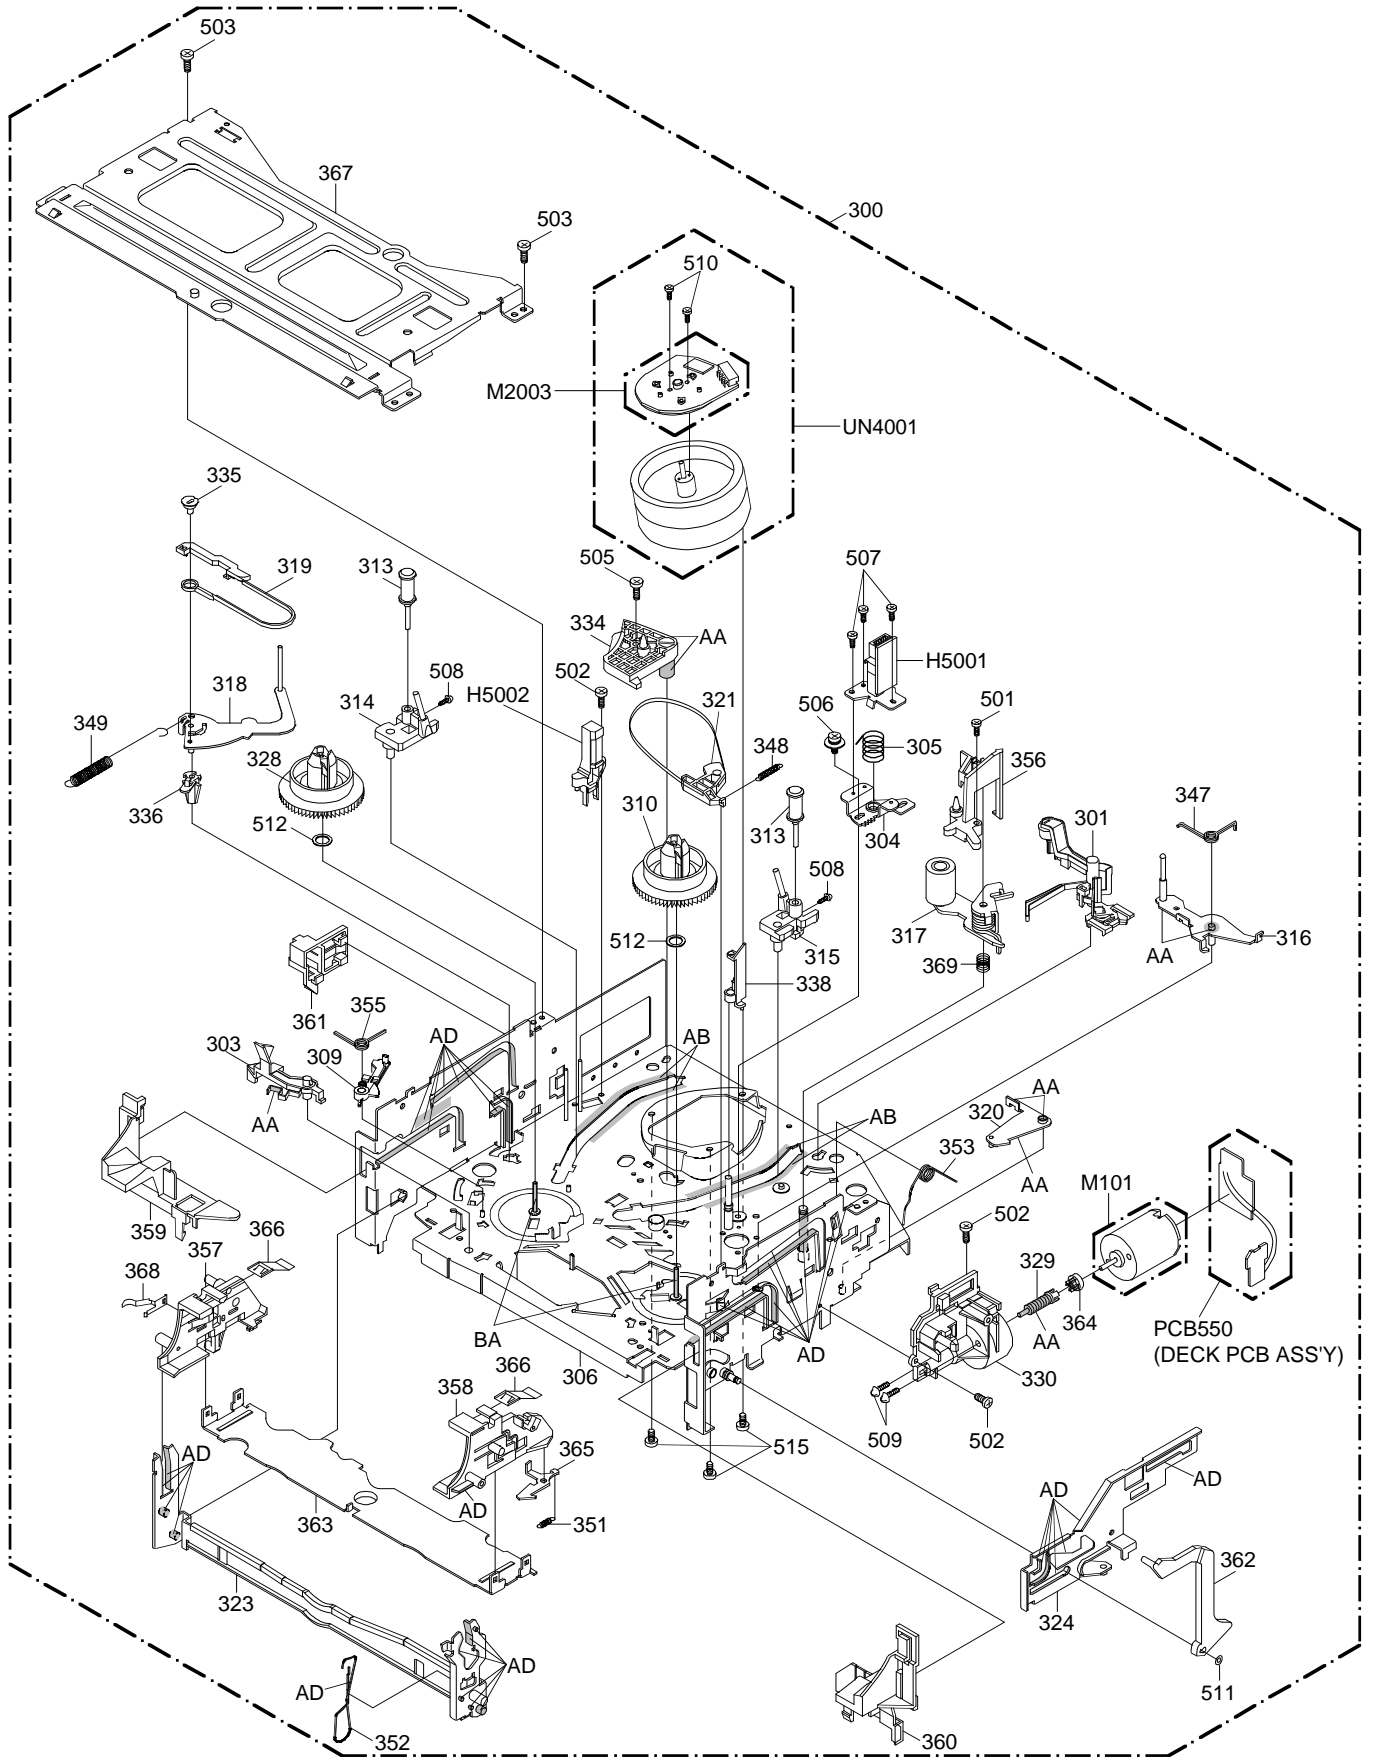

CLASS	PART NO.	MARK
GREASE	G-555G	AA
	G-488M	AB
	FL-721	AC
	MG-33	AD
OIL	FL OIL No. 6115	BA

**NOTE:** Applying positions AA, AB, AC, AD and BA for the grease or oil are displayed for this section. Check if the correct grease or oil is applied for each position.

# CHASSIS EXPLODED VIEW (BOTTOM VIEW)

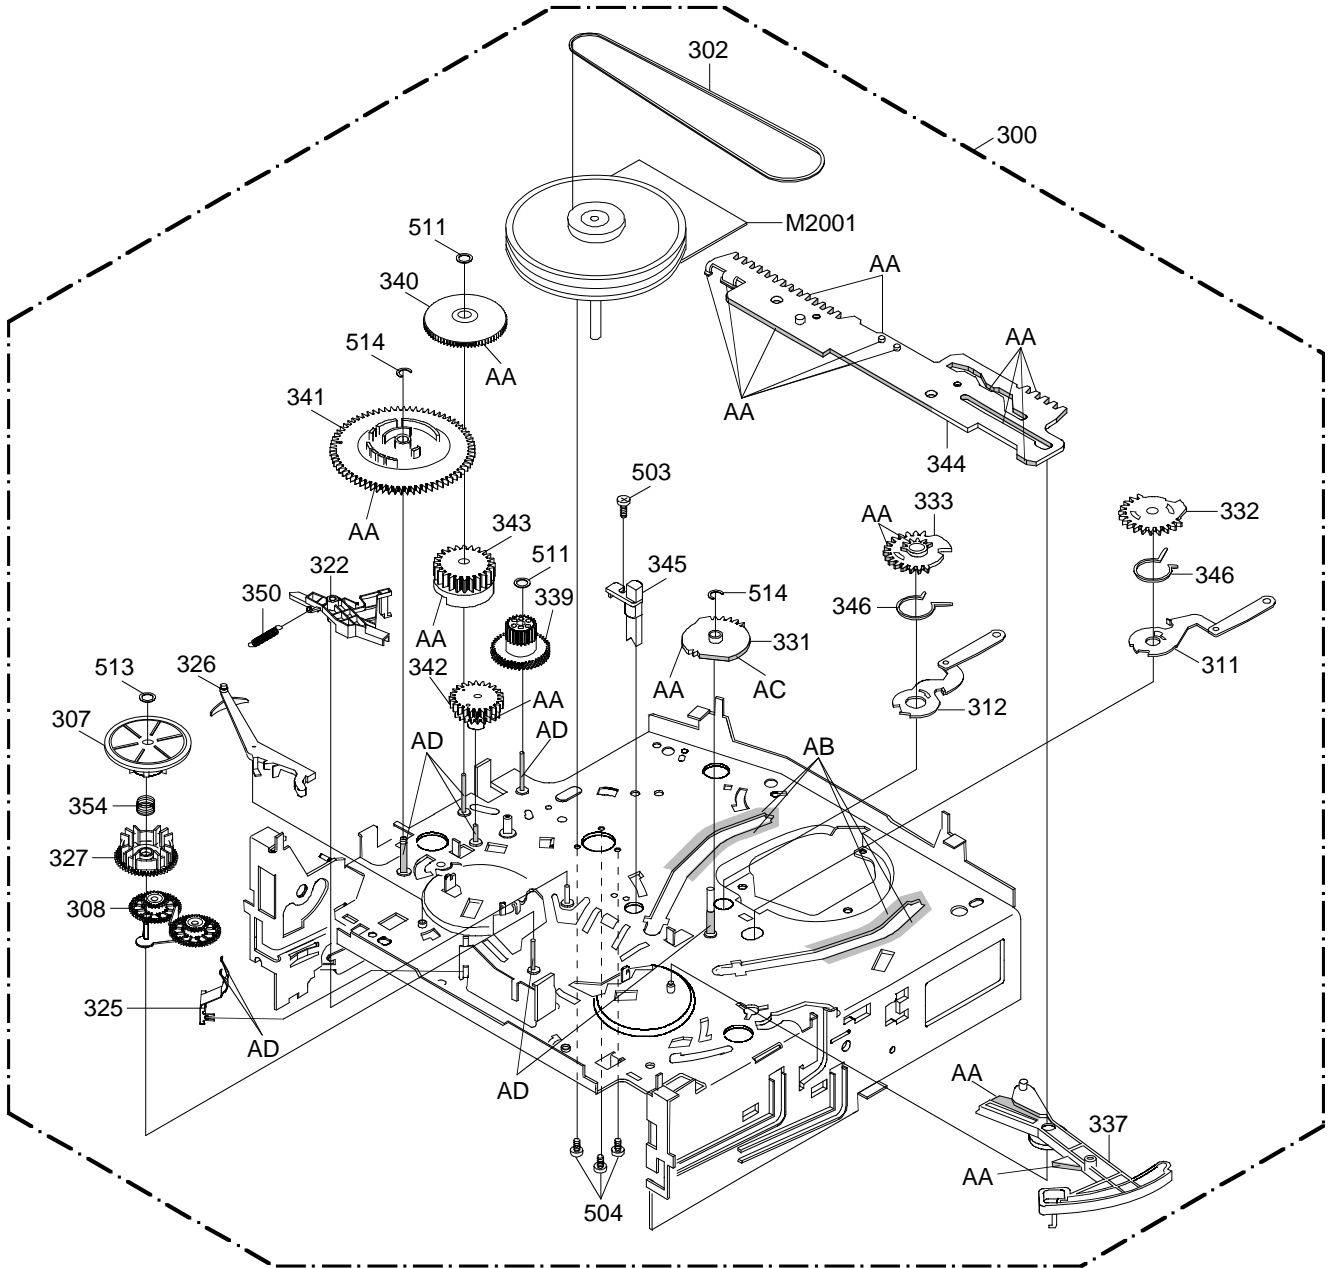

CLASS	PART NO.	MARK
GREASE	G-555G	AA
	G-488M	AB
	FL-721	AC
	MG-33	AD
OIL	FL OIL No. 6115	BA

**NOTE:** Applying positions AA, AB, AC, AD and BA for the grease or oil are displayed for this section. Check if the correct grease or oil is applied for each position.



# MECHANICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION		
101	A545A1A720	CABINET,FRONT ASS'Y		
102	701WPJA844	CABINET,FRONT		
103	711WPA0114	PLATE,FRONT		
104	7230006830	SHEET,LED		
105	713WPA0075	GUIDE,REMOCON		
106	712WPJA597	FLAP		
107	743WKA0032	SPRING,FLAP		
108	735WPJA174	BUTTON,FRAME		
109	735WPA0402	BUTTON,REC		
110	709WPA0019	HOLDER,CABI SEIZE		
111	7220001119	SHEET,CSA WARNING		
112	7260000324	SHEET,CRT SERVICEMAN		
113	722000A023	SHEET,HWC		
114	753WSA0119	PLATE,SPEAKER		
115	800WFA0042	CUSHION	10x15xT2	
116	800WF00049	CUSHION,SPEAKER		
117	723000A823	FILM,DECORATION		
118	741WJA0019	SPRING,EARTH		
119	702WPAA112	CABINET,BACK		
120	722A08A052	SHEET,RATING		
121	761WPA0196	HOLDER,DECK		
122	753WSA0120	PLATE,BOTTOM-EARTH		
123	752WSAA028	SHIELD BOTTOM		
124	800WFA0038	CUSHION	10x10xT2	
125	800WFA0037	CUSHION	15x5xT6	
126	752WSA0192	SHIELD,CASE HEAD AMP ASS'Y		
127	753WSA0130	SHIELD,COVER HEAD AMP		
128	85OP700036	HOLDER,EOT SENSOR		
129	753WSA0118	PLATE,EARTH-SYSCON		
130	---	HEAT SINK		
131	---	METAL SPACER		
132	752WSA0198	PLATE,DECK SHIELD		
133	752WSA0206	PLATE,SI-STEEL-2		
134	8995034000	CORD CLIP UL CO.		
135	899HV3T000	HOLDER,ANODE WIRE		
201	8110630A04	SCREW,TAP TITE (P)	BRAZIER	3x10
202	8110630804	SCREW,TAP TITE (P)	BRAZIER	3x8
203	8121J50B54	SCREW,TAPPING (B0)	GW20	5x28
204	8117540A64	SCREW,TAPPING (B0)	TRUSS	4x16
205	8117540A04	SCREW,TAPPING (B0)	TRUSS	4x10
206	810A130804	SCREW/WASHER (A)		M3x8
207	8109630802	SCREW,TAP TITE (B)	BRAZIER	3x8
208	8110330804	SCREW,TAP TITE (P)	FLAT	3x8
209	8110630604	SCREW,TAP TITE (P)	BRAZIER	3x6
210	8117140A24	SCREW,TAPPING (B0)	PAN	4x12
211	8107630604	SCREW,TAP TITE (S)	BRAZIER	3x6
212	8117540B04	SCREW,TAPPING (B0)	TRUSS	4x20
---	JA5K0100	POLYBAG		
---	J545A101	INSTRUCTION BOOK		
---	791WHAA016	LAMIFILM BAG		
---	792WHA0271	PACKAGE, TOP		
---	792WHA0272	PACKAGE, BOTTOM		
---	793WCDA648	GIFT BOX		

## CHASSIS REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300	A545A0A420A	DECK ASSY A545A0A420A	501	8107126A04	SCREW,TAP TITE(S) PAN 2.6x10
301	85OA500022	AHC ASS'Y	502	8107226804	SCREW,TAP TITE(S) BIND 2.6x8
302	85OP200290	BELT,CAPSTAN (S)	503	8107226604	SCREW,TAP TITE(S) BIND 2.6x6
303	85OP900710	LEVER,REC	504	8109126604	SCREW,TAP TITE(B) PAN 2.6x6
304	85OP500083	BASE,AC HEAD	505	810A126804	SCREW/WASHER(A) M2.6x8
305	85OP800324	SPRING,AC HEAD	506	810B126404	SCREW/WASHER(B) M2.6x4
306	85OA000367	MAIN CHASSIS ASS'Y (S-Z)	507	8102120604	SCREW,PAN M2x6
307	85OA200082	CLUTCH ASS'Y(S2)	508	8102120304	SCREW,PAN M2x3
308	85OA200080	ARM,IDLER ASS'Y (S)	509	8102130304	SCREW,PAN M3.0x3.0
309	85OP600556	ARM,SS BRAKE (S)	510	810A123504	SEMS A M2.3x5.0
310	85OP200292	REEL,T (S)	511	82P266005N	POLYSLIDER WASHER(CUT) 2.6x6.0xT0.5
311	85OA300061	LOADING ARM S ASS'Y	512	82Q2647C5N	POLYSLIDER WASHER 2.6x4.7xT0.25
312	85OA300062	LOADING ARM T ASS'Y	513	82P184505N	POLYSLIDER WASHER(CUT) 1.8x4.5xT0.5
313	85OA400209	GUIDE ROLLER ASS'Y	514	83ETW30000	E-RING 3.0
314	85OA400188	BASE,INCL S ASS'Y	515	810A126504	SCREW/WASHER(A) M2.6x5
315	85OA400196	BASE,INCL T(S) ASS'Y	CP101	069R740018	CONNECTOR PCB SIDE 52044-0445
316	85OA400199	P5-3 ARM ASS'Y(S)	H5001	1523D91034	HEAD (AUDIO CONTROL) HVMXA1072A
317	85OA400205	PINCH ROLLER BLOCK	H5002	1543D02013	HEAD (FULL ERASE) HVFHP0032A
318	85OA400175	TENSION ARM ASS'Y	△ M101	1596P78001	MOTOR (LOADING) MXN13FB11H
319	85OA400184	TENSION BAND ASS'Y (S)	△ M2001	1510398030	CAPSTAN DD UNIT F2QSB02
320	85OA400178	PINCH ROLLER LEVER ASS'Y	M2003	1589V11007	MICRO MOTOR EP14BD
321	85OA600188	BRAKE T ASS'Y (S)	PCB550	A4C831B550	DECK PCB ASS'Y VE8851
322	85OA600191	CAP BRAKE ASS'Y(S)	Q101	0000700320	TRANSISTOR,PHOTO RPT-38PB113
323	85OA900213	LINK ASS'Y	△ UN4001	A545A0A500	CYLINDER UNIT ASSY A545A0A500
324	85OA900216	LINK LEVER ASS'Y			
325	85OP200284	LEVER,CLUTCH (S)			
326	85OP200285	ACTUATOR,CLUTCH			
327	85OP200298	GEAR,COUPLING(S2)			
328	85OP200291	REEL,S (S)			
329	85OP600541	WORM			
330	85OP600563	BRACKET,MOTOR			
331	85OP300178	GEAR,MAIN LOADING			
332	85OP300179	GEAR,LOADING S			
333	85OP300180	GEAR,LOADING T			
334	85OP300186	HOLDER,LOADING GEAR			
335	85OP400472	ADJUST,TENSION			
336	85OP400492	HOLDER,TENSION			
337	85OP400490	LEVER,TENSION			
338	85OP400475	COVER,P4			
339	85OP600543	GEAR,JOINT			
340	85OP600544	GEAR,MIDDLE			
341	85OP600554	CAM,MAIN (S)			
342	85OP600546	CAM,P5			
343	85OP600565	CAM,PINCH ROLLER			
344	85OP600561	ROD,MAIN(S)			
345	85OP700035	REFLECTOR,LED			
346	85OP800318	SPRING,LOADING GEAR			
347	85OP800334	SPRING,P5 (S)			
348	85OP800335	SPRING,BRAKE T (S)			
349	85OP800322	SPRING,TENSION			
350	85OP800336	SPRING,CAP BRAKE (S)			
351	85OP800342	SPRING,LOCKER (S)			
352	85OP800326	SPRING,LINK			
353	85OP800328	SPRING,DAMPER			
354	85OP800330	SPRING,RING			
355	85OP800337	SPRING,SS BRAKE (S)			
356	85OP900680	OPENER,CASS			
357	85OP900704	CASS,SIDE L			
358	85OP900684	CASS,SIDE R			
359	85OP900709	TAPE GUIDE L (P,R)			
360	85OP900686	TAPE GUIDE R			
361	85OP900714	COVER,SENSOR L3			
362	85OP900688	LEVER,FLAP			
363	85OP900690	CASS HOLDER			
364	85OP600540	DRIVER,WORM			
365	85OP900713	LOCKER,R2			
366	85OP900694	SPRING,PACK			
367	85OP900695	BRACKET,TOP			
368	85OP900696	SPRING,CASS EARTH			
369	85OP800341	SPRING,P/R ARM			

# ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
<b>RESISTORS</b>			<b>DIODES</b>		
△ R415	R426T2R2F	R, METAL 2.2 OHM 1/2W	△ D517	D28TELS2N2	DIODE, RECTIFIER 10ELS2N-TA1B2
△ R420	R801R7822F	RC 8.2K OHM 1/10W	D518	D1VT001330	DIODE, SILICON 1SS133T-77
R422	R3X10A4R7J	R, METAL 4.7 OHM 2W	△ D519	D28T21DQ9N	DIODE, SCHOTTKY 21DQ09N-TA2B1
R424	R0L2U2222J	RC 2.2K OHM 1/2W	D521	D1VT001330	DIODE, SILICON 1SS133T-77
△ R439	R801R7223F	RC 22K OHM 1/10W	D523	D1VT001330	DIODE, SILICON 1SS133T-77
△ R440	R801R7513J	RC 51K OHM 1/10W	D528	D97U05R61B	DIODE, ZENER MTZJ5.6B T-77
△ R441	R801R7563J	RC 56K OHM 1/10W	D529	D1VT001330	DIODE, SILICON 1SS133T-77
△ R442	R801R7153F	RC 15K OHM 1/10W	D601	D1VT001330	DIODE, SILICON 1SS133T-77
△ R443	R801R7472F	RC 4.7K OHM 1/10W	D602	D97U08R21B	DIODE, ZENER MTZJ8.2B T-77
△ R444	R801R7333F	RC 33K OHM 1/10W	D604	D1VT001330	DIODE, SILICON 1SS133T-77
△ R447	R65582680J	R, FUSE 68 OHM 1/2W	D605	D2WT11ES10	DIODE, SILICON 11ES1-EIC
△ R449	R655U4101J	R, FUSE 100 OHM 1/4W	D606	D1VT001330	DIODE, SILICON 1SS133T-77
△ R450	R6558A4R7J	R, FUSE 4.7 OHM 2W	D607	D1VT001330	DIODE, SILICON 1SS133T-77
△ R500	R0G3K2275K	RC 2.7M OHM 1/2W	D608	D23U1003A3	DIODE, SCHOTTKY SB10-03A3
△ R501	R5Y2CE2R2J	R, CEMENT 2.2 OHM 7W	D609	D97U06R81B	DIODE, ZENER MTZJ6.8B T-77 or
△ R510	R002T2124J	RC 120K OHM 1/2W		D94TA7RB12	DIODE, ZENER HZ7B2L TD or
△ R512	R3X101273J	R, METAL 27K OHM 1W		D94TA7RC11	DIODE, ZENER HZ7C1L TD
△ R529	R4X5T4272F	R, METAL 2.7K OHM 1/4W	D610	D97U06R81B	DIODE, ZENER MTZJ6.8B T-77 or
△ R542	R33681R18J	R, METAL 0.18 OHM 1W		D94TA7RB12	DIODE, ZENER HZ7B2L TD or
R543	R635U4681J	R, FUSE 680 OHM 1/4W		D94TA7RC11	DIODE, ZENER HZ7C1L TD
△ R632	R3X18A221J	R, METAL OXIDE 220 OHM 2W	D611	D97U06R81B	DIODE, ZENER MTZJ6.8B T-77 or
R685	R002T4182J	RC 1.8K OHM 1/4W		D94TA7RB12	DIODE, ZENER HZ7B2L TD or
R686	R00202152J	RC 1.5K OHM 1/2W		D94TA7RC11	DIODE, ZENER HZ7C1L TD
△ R802	R3K18A123J	R, METAL 12K OHM 2W	D612	D1VT001330	DIODE, SILICON 1SS133T-77
△ R805	R3K18A123J	R, METAL 12K OHM 2W	D613	D1VT001330	DIODE, SILICON 1SS133T-77
△ R810	R3K18A123J	R, METAL 12K OHM 2W	D614	D1VT001330	DIODE, SILICON 1SS133T-77
△ R1005	R615J12R7J	R, FUSE 2.7 OHM 1W	D615	D97U06R81B	DIODE, ZENER MTZJ6.8B T-77 or
R4070	R00104106J	RC 10M OHM 1/4W		D94TA7RB12	DIODE, ZENER HZ7B2L TD or
		<b>CAPACITORS</b>			
C354	E02LF1222M	CE 2200 UF 10V	D616	D97U06R81B	DIODE, ZENER MTZJ6.8B T-77 or
△ C407	E02L03102M	CE 1000 UF 25V		D94TA7RB12	DIODE, ZENER HZ7B2L TD or
C423	P411F3474J	CMPP 0.47 UF 250V ECWF		D94TA7RC11	DIODE, ZENER HZ7C1L TD
△ C424	P414F9912H	CMPP 0.0091UF 1.6KV ECWH	D617	D97U06R81B	DIODE, ZENER MTZJ6.8B T-77 or
△ C425	C01BBP7B2K	CC 120 PF 2KV BP		D94TA7RB12	DIODE, ZENER HZ7B2L TD or
△ C433	E02LT3331M	CE 330 UF 25V		D94TA7RC11	DIODE, ZENER HZ7C1L TD
△ C502	C13HB07H3K	CC 0.0022UF 2KV B	D618	D1VT001330	DIODE, SILICON 1SS133T-77
△ C503	C13HB07H3K	CC 0.0022UF 2KV B	D619	D1VT001330	DIODE, SILICON 1SS133T-77
△ C506	P2122B104M	CMP 0.1 UF 250V ECQUL	D620	D1VT001330	DIODE, SILICON 1SS133T-77
△ C507	E51CGC471M	CE 470 UF 200V	D621	D1VT001330	DIODE, SILICON 1SS133T-77
△ C510	E5EZT4101M	CE 100 UF 35V	D791	002132Q040	LED SLZ-936C-11-S-T1
△ C511	E02LT3471M	CE 470 UF 25V	D792	002132Q040	LED SLZ-936C-11-S-T1
△ C513	P2122B104M	CMP 0.1 UF 250V ECQUL	D793	002132Q040	LED SLZ-936C-11-S-T1
C514	C01BBP7K3K	CC 0.0027UF 2KV BP	D1001	D2WT011E10	DIODE, SILICON 11E1-EIC
C517	C01BBP7W2K	CC 820 PF 2KV BP	D1002	D1VT001330	DIODE, SILICON 1SS133T-77
△ C520	E02LT2471M	CE 470 UF 16V	D1003	0010600060	LED SID1050CM
△ C521	E53VFB221M	CE 220 UF 160V	D1004	D92T1120B0	DIODE, ZENER RD12FB-T7
△ C523	E5EZT4471M	CE 470 UF 35V	D1005	D2WT011E10	DIODE, SILICON 11E1-EIC
△ C524	E5EZT2102M	CE 1000 UF 16V	D1007	D97U06R81B	DIODE, ZENER MTZJ6.8B T-77 or
△ C529	C034E0JH3M	CC 0.0022UF 125V MX		D94TA7RB12	DIODE, ZENER HZ7B2L TD or
△ C530	C034F0JL3M	CC 0.0033UF 125V MX		D94TA7RC11	DIODE, ZENER HZ7C1L TD
C560	C01BBP7H3K	CC 0.0022UF 2KV BP	D1008	D97U06R81B	DIODE, ZENER MTZJ6.8B T-77 or
C687	P6M9T0104J	CMPL 0.1 UF 50V TF		D94TA7RB12	DIODE, ZENER HZ7B2L TD or
C691	P6M9T0124J	CMPL 0.12 UF 50V TF		D94TA7RC11	DIODE, ZENER HZ7C1L TD
C692	CQGTFO415Z	CC 0.1 UF 50V F	D1014	D97U05R11B	DIODE, ZENER MTZJ5.1B T-77
C801	C13HB07H3K	CC 0.0022UF 2KV B	D4005	D97U06R81B	DIODE, ZENER MTZJ6.8B T-77 or
C819	C13HB07H3K	CC 0.0022UF 2KV B		D94TA7RB12	DIODE, ZENER HZ7B2L TD or
△ C1001	E02LU3101M	CE 100 UF 25V		D94TA7RC11	DIODE, ZENER HZ7C1L TD
C4014	P1S300473J	CP 0.047 UF 50V	D4006	D97U06R81B	DIODE, ZENER MTZJ6.8B T-77 or
C4075	CHGTB04L2K	CC 330 PF 50V B		D94TA7RB12	DIODE, ZENER HZ7B2L TD or
		<b>DIODES</b>			
D401	D2WT011E10	DIODE, SILICON 11E1-EIC	D4202	D23U1003A3	DIODE, SCHOTTKY SB10-03A3
△ D408	D94TA27011	DIODE, ZENER HZ27-1L TD	D4207	D97U06R81B	DIODE, ZENER MTZJ6.8B T-77 or
△ D409	D94TA11B13	DIODE, ZENER HZ11B3L TD		D94TA7RB12	DIODE, ZENER HZ7B2L TD or
D410	D97U06R81B	DIODE, ZENER MTZJ6.8B T-77		D94TA7RC11	DIODE, ZENER HZ7C1L TD
△ D412	D2LTPG06J0	DIODE, SILICON RMPG06J			
△ D413	D2LTPG06J0	DIODE, SILICON RMPG06J	△ IC351	I01DP75110	IC AN7511
△ D501	D4LZBL06L0	DIODE GBL06L-6177	△ IC401	I03TD80400	IC LA78040
D502	D1VT001330	DIODE, SILICON 1SS133T-77	△ IC501	I1KA978050	IC KIA7805PI
D503	D23U1003A3	DIODE, SCHOTTKY SB10-03A3	△ IC502	I2BT066230	IC STR-G6623
△ D505	D28T21DQ9N	DIODE, SCHOTTKY 21DQ09N-TA2B1	△ IC506	0002500450	PHOTO COUPLER TLP621(GR)
D506	D2LTPG06J0	DIODE, SILICON RMPG06J	IC601	I06FC12030	IC M61203BFP
D507	D28015DF60	DIODE, SILICON 15DF6	IC1001	I56F57043A	IC OEC7043A
△ D509	D28T21DQ9N	DIODE, SCHOTTKY 21DQ09N-TA2B1	IC1002	I9UJ0T600H	IC PST600H
△ D510	D2BTRU2AM0	DIODE, SILICON RU2AM V1	△ IC1003	I07SQ955AN	IC BA6955AN or
△ D512	D28T21DQ9N	DIODE, SCHOTTKY 21DQ09N-TA2B1		I07SQ69550	IC BA6955N
△ D515	D97U03001B	DIODE, ZENER MTZJ30B T-77	IC1099	A545A5A015	IC S-24C02BDP-11
D516	D1VT001330	DIODE, SILICON 1SS133T-77	IC4001	I03F31077B	IC LA71077BM-MPB or
		<b>ICS</b>			

# ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
<b>ICS</b>			<b>JACKS</b>		
IC4001	I03F31067M	IC LA71067M-MPB	△ J351	0602131012	JACK, RCA3.5
<b>TRANSISTORS</b>				060G131014	RCA, JACK
Q401	TNYJA05001	COMPOUND TRANSISTOR DTC143EKAT146	J701	0602101020	JACK, RCA
Q402	TB3T008920	TRANSISTOR, SILICON 2SB892(S,T)-AE	△ J801	066X120014	SOCKET, CRT
Q403	TNYJJ05001	COMPOUND TRANSISTOR DTC114TKAT146	<b>SWITCHES</b>		
Q404	TPYJD05001	COMPOUND TRANSISTOR DTA144EKAT146	SW751	0504201T31	SWITCH, TACT
△ Q405	TC3T022710	TRANSISTOR, SILICON 2SC2271(D,E)-AE	SW791	0504201T31	SWITCH, TACT
△ Q406	TD30026270	TRANSISTOR, SILICON 2SD2627LS-CBC11	SW792	0504201T31	SWITCH, TACT
Q501	TD3T008630	TRANSISTOR, SILICON 2SD863(E,F)-AE	SW793	0504201T31	SWITCH, TACT
	TD3T012070	TRANSISTOR, SILICON 2SD1207(S,T)-AE	SW794	0504201T31	SWITCH, TACT
△ Q504	TC5T018154	TRANSISTOR, SILICON 2SC1815Y(TPE2)	SW795	0504201T31	SWITCH, TACT
Q506	TNYJJ05001	COMPOUND TRANSISTOR DTC114TKAT146	SW796	0504201T31	SWITCH, TACT
Q507	TC5T018154	TRANSISTOR, SILICON 2SC1815Y(TPE2)	SW797	0504201T31	SWITCH, TACT
Q513	TNYJB05001	COMPOUND TRANSISTOR DTC114EKAT146	SW798	0504201T31	SWITCH, TACT
Q602	TC5T021204	TRANSISTOR, SILICON 2SC2120Y(TPE2)	SW799	0504201T31	SWITCH, TACT
Q603	TC5T021204	TRANSISTOR, SILICON 2SC2120Y(TPE2)	SW1001	0508221001	SWITCH (LEAF)
Q604	TDWT00400E	TRANSISTOR, SILICON 2SD400E	<b>VARIABLE RESISTORS</b>		
	TD3T012070	TRANSISTOR, SILICON 2SD1207(S,T)-AE	VR502	V1263L2BTC	VOLUME, SEMI FIXED
Q605	TDWT00400E	TRANSISTOR, SILICON 2SD400E		V1163L2BTC	VOLUME, SEMI FIXED
	TD3T012070	TRANSISTOR, SILICON 2SD1207(S,T)-AE	<b>P.C.BOARD ASSEMBLIES</b>		
Q606	TD3T008630	TRANSISTOR, SILICON 2SD863(E,F)-AE	PCB010	A545B4A01A	PCB ASSY
	TD3T012070	TRANSISTOR, SILICON 2SD1207(S,T)-AE	PCB030	A545B0A03A	PCB ASSY
Q608	T6YJ1037K0	TRANSISTOR, SILICON 2SA1037AKT146(R,S)	PCB110	A545B0A11A	PCB ASSY
Q609	TNYJB05001	COMPOUND TRANSISTOR DTC114EKAT146	PCB550	A4C831B550	SEE CHASSIS REPLACEMENT PARTS LIST
Q611	TNYJB05001	COMPOUND TRANSISTOR DTC114EKAT146	<b>MISCELLANEOUS</b>		
Q612	T8YJ2412K0	TRANSISTOR, SILICON 2SC2412KT146(R,S)	△ ANT001	125C108027	ANTENNA, ROD
△ Q804	TC3F042170	TRANSISTOR, SILICON 2SC4217(D,E)-RAC	B402	024AT03655	CORE, BEADS
△ Q805	TC3F042170	TRANSISTOR, SILICON 2SC4217(D,E)-RAC	B403	024AT03655	CORE, BEADS
△ Q806	TC3F042170	TRANSISTOR, SILICON 2SC4217(D,E)-RAC	B502	024AT03482	CORE, BEADS
Q1001	0002M00570	PHOTO COUPLER SG-260	B503	024AT03655	CORE, BEADS
Q1002	T8YJ2412K0	TRANSISTOR, SILICON 2SC2412KT146(R,S)	B505	024AT03482	CORE, BEADS
Q1003	0002G00550	PHOTO COUPLER GP1S94L	B602	024DT03581	CORE, BEADS
Q1004	TNYJC05001	COMPOUND TRANSISTOR DTC124EKAT146	B4201	024DT03581	CORE, BEADS
Q1005	0002M00570	PHOTO COUPLER SG-260	CD351	06CH27090A	CORD, CONNECTOR
Q1007	TNYTB05001	COMPOUND TRANSISTOR DTC114EKT147	CD352	06CH12435A	CORD, CONNECTOR
Q1008	TNYJB05001	COMPOUND TRANSISTOR DTC114EKAT146	△ CD501	120R614909	CORD, AC
Q1009	0002G00550	PHOTO COUPLER GP1S94L		1207614909	CORD, AC
Q1013	0000100380	PHOTO TRANSISTOR PNA2604M010R	CD757	06CH2A019A	CORD, CONNECTOR
Q1023	T8YJ2412K0	TRANSISTOR, SILICON 2SC2412KT146(R,S)	CD801	068M82025A	CORD, CONNECTOR
Q1024	TNYJA05001	COMPOUND TRANSISTOR DTC143EKAT146	CF601	1022T45R72	FILTER, SAW
Q4001	TC3T033310	TRANSISTOR, SILICON 2SC3331(S,T,U)-A	CF603	1011T4R504	FILTER, CERAMIC
Q4002	TC3T033310	TRANSISTOR, SILICON 2SC3331(S,T,U)-A	CF604	1011T4R517	FILTER, CERAMIC
Q4003	TPYTC03001	COMPOUND TRANSISTOR DTA124ESTP	CP351	069E260129	CONNECTOR PCB SIDE
Q4005	TA3T013180	TRANSISTOR, SILICON 2SA1318(S,T)-AA	CP353	0694270139	CONNECTOR PCB SIDE
Q4006	TD3T007340	TRANSISTOR, SILICON 2SD734(E,F)-AA	△ CP401	069X450029	CONNECTOR PCB SIDE
Q4007	T6YJ1037K0	TRANSISTOR, SILICON 2SA1037AKT146(R,S)	△ CP501	0697320039	CORD, UX CONNECTOR
Q4008	T8YJ2412K0	TRANSISTOR, SILICON 2SC2412KT146(R,S)	△ CP502	069W420029	CONNECTOR PCB SIDE
Q4009	T6YA1037K0	TRANSISTOR, SILICON 2SA1037KT147(R,S)	CP757	06942A0139	CONNECTOR PCB SIDE
Q4011	TNYJD05001	COMPOUND TRANSISTOR DTC144EKAT146	CP801	069W320018	CONNECTOR PCB SIDE
Q4204	TNYJB05001	COMPOUND TRANSISTOR DTC114EKAT146	CD1001	122L040904	CORD, JUMPER
<b>COILS &amp; TRANSFORMERS</b>			CD1002	122F051702	CORD, JUMPER
L005	02A6A8A0A1	CORE, FERRITE HF57T18.5*10*10	CD4001	122L061501	CORD, JUMPER
L401	021679472K	COIL 4.7 MH	CP1003	0694240139	CONNECTOR PCB SIDE
△ L502	029X000087	COIL, LINE FILTER SS24V-10100	CP1004	0697280590	CONNECTOR PCB SIDE
△ L503	028F140028	COIL, DEGAUSS 8F140028	CP1005	069R750028	CONNECTOR PCB SIDE
L601	021LA61R0M	COIL 1 UH	CP1006	069R740028	CONNECTOR PCB SIDE
L603	021673470K	COIL 47 UH		069J740029	CONNECTOR PCB SIDE
L605	021LA61R0M	COIL 1 UH	CP4001	0697240600	CONNECTOR PCB SIDE
L607	021LA6120K	COIL 12 UH	CP4002	069J760029	CONNECTOR PCB SIDE
L610	021673560K	COIL 56 UH	CP4003	0697120320	CONNECTOR PCB SIDE
L612	021LA66R8K	COIL 6.8 UH	CP851A	067R010019	WIRE HOLDER
L801	021673101J	COIL 100 UH	CP851B	067R010019	WIRE HOLDER
L1001	021LA62R2K	COIL 2.2 UH	CUS011	800WF00004	CUSHION-A
L4001	02167F101J	COIL 100 UH	CUS012	800WF00019	CUSHION-C
L4002	02167F101J	COIL 100 UH	CUS013	800WF00004	CUSHION-A
L4003	021673101J	COIL 100 UH	CUS014	800WF00004	CUSHION-A
L4004	0326230038	COIL, TRAP 2623003	CUS015	800WF00004	CUSHION-A
L4005	02167F470J	COIL 47 UH	CUS016	800WF00004	CUSHION-A
L4007	021LA6101J	COIL 100 UH	CUS017	800WF00004	CUSHION-A
L4008	02167F101J	COIL 100 UH	EL001	124116281A	EYE LET
L4009	02167F101J	COIL 100 UH	EL002	124120301A	EYE LET
L4010	02167F101J	COIL 100 UH	△ F501	081PA05003	FUSE
L4011	021LA6220J	COIL 22 UH	△ F502	080PA2R501	FUSE
T401	03305Y0018	TRANS, HORIZONTAL DRIVE 305Y001	△ FB401	043213013R	TRANSFORMER, FLYBACK
△ T501	0481290154	TRANSFORMER, SWITCHING 81290154	FH501	06710T0006	HOLDER, FUSE
T4001	031626007S	COIL, BIAS OSC 1626007	FH502	06710T0006	HOLDER, FUSE

## ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	
<b>MISCELLANEOUS</b>			
FH503	06710T0006	HOLDER, FUSE	EYF-52BC
FH504	06710T0006	HOLDER, FUSE	EYF-52BC
△ ICP501	083PC05003	MICRO FUSE	251005RT
△ ICP502	083PC05003	MICRO FUSE	251005RT
△ ICP503	083PC05002	MICRO FUSE	251005
△ ICP505	083PC04003	MICRO FUSE	251004RT
OS753	077Q000017	REMOTE RECEIVER	PIC-28143TH5
△ RY501	0560Q20114	RELAY	SDT-S-112LMR
△ SP351	070C533008	SPEAKER	810-47-171
△ TH501	DF20A3R0Q0	DEGAUSS ELEMENT	PTH451A3R0Q11
TM101	07660CG010	TRANSMITTER	SBJU20003A
△ TU601	0145K00050	TUNER, UHF-VHF	TECC1040PG31A
△ V801	098Q1404B2	CRT W/DY	A34AGT13X98(L)
X602	100CT3R505	CRYSTAL HC-49/C	3.579545MHz
X1001	100CT01207	CRYSTAL HC-49/U-S	12MHz
X1002	100DA32R01	CRYSTAL DT-26	32.768KHz
X4001	100CF3R512	CRYSTAL HC-49/U	3.579545MHz

### RESISTOR

RC..... CARBON RESISTOR

### CAPACITORS

CC..... CERAMIC CAPACITOR  
 CE..... ALUMI ELECTROLYTIC CAPACITOR  
 CP..... POLYESTER CAPACITOR  
 CPP..... POLYPROPYLENE CAPACITOR  
 CPL..... PLASTIC CAPACITOR  
 CMP..... METAL POLYESTER CAPACITOR  
 CMPL..... METAL PLASTIC CAPACITOR  
 CMPP..... METAL POLYPROPYLENE CAPACITOR

SPEC.NO.	M545-A1A
O/R NO.	K035021