

R&S® FSV-K76/-K77

3GPP TD-SCDMA BTS and UE

Measurement Application

Operating Manual



1176.7603.02 – 04.1

This manual describes the following options:

- R&S FSV-K76 (1310.8603.02)
- R&S FSV-K77 (1310.8655.02)

The contents of this manual correspond to the following R&S®FSVR models with firmware version 2.23 or higher:

- R&S®FSVR7 (1311.0006K7)
- R&S®FSVR13 (1311.0006K13)
- R&S®FSVR30 (1311.0006K30)
- R&S®FSVR40 (1311.0006K40)

The software contained in this product makes use of several valuable open source software packages. For information, see the "Open Source Acknowledgement" on the user documentation CD-ROM (included in delivery).

Rohde & Schwarz would like to thank the open source community for their valuable contribution to embedded computing.

© 2015 Rohde & Schwarz GmbH & Co. KG

Mühlhofstr. 15, 81671 München, Germany

Phone: +49 89 41 29 - 0

Fax: +49 89 41 29 12 164

Email: info@rohde-schwarz.com

Internet: www.rohde-schwarz.com

Subject to change – Data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

The following abbreviations are used throughout this manual: R&S®FSV is abbreviated as R&S FSV. R&S®FSVR is abbreviated as R&S FSVR.

Contents

| | | |
|------------|---|-----------|
| 1 | Preface | 7 |
| 1.1 | Documentation Overview | 7 |
| 1.2 | Conventions Used in the Documentation | 9 |
| 1.2.1 | Typographical Conventions..... | 9 |
| 1.2.2 | Conventions for Procedure Descriptions..... | 9 |
| 1.2.3 | Notes on Screenshots..... | 10 |
| 1.3 | How to Use the Help System | 10 |
| 2 | Introduction | 12 |
| 3 | Instrument Functions | 13 |
| 3.1 | Code Domain Analysis | 15 |
| 3.1.1 | Menu and Softkey Description..... | 15 |
| 3.1.1.1 | Softkeys of the Code Domain Analyzer..... | 16 |
| 3.1.1.2 | Softkeys of the Frequency Menu..... | 40 |
| 3.1.1.3 | Softkeys of the Amplitude Menu..... | 41 |
| 3.1.1.4 | Softkeys of the Auto Set Menu..... | 44 |
| 3.1.1.5 | Softkeys of the Sweep Menu..... | 45 |
| 3.1.1.6 | Softkeys of the Trace Menu for CDA Measurements..... | 46 |
| 3.1.1.7 | Softkeys of the Trigger Menu for CDA Measurements..... | 47 |
| 3.1.1.8 | Softkeys of the Input/Output Menu for CDA Measurements..... | 49 |
| 3.2 | RF Measurements | 53 |
| 3.2.1 | Signal Channel Power..... | 53 |
| 3.2.2 | Adjacent Channel Power (CH Power ACLR)..... | 53 |
| 3.2.3 | Spectrum Emission Mask..... | 54 |
| 3.2.4 | Occupied Bandwidth..... | 54 |
| 3.2.5 | Complementary Cumulative Distribution Function (CCDF)..... | 55 |
| 3.2.6 | Power vs Time..... | 55 |
| 3.2.7 | Softkeys and Menus for RF Measurements (K76/K77)..... | 56 |
| 3.2.7.1 | Softkeys of the Measurement Menu..... | 56 |
| 3.2.7.2 | Softkeys of the Frequency Menu..... | 86 |
| 3.2.7.3 | Softkeys of the Span Menu for RF Measurements..... | 89 |
| 3.2.7.4 | Softkeys of the Amplitude Menu for RF Measurements..... | 90 |

| | | |
|------------|--|------------|
| 3.2.7.5 | Softkeys of the Bandwidth Menu..... | 95 |
| 3.2.7.6 | Softkeys of the Sweep Menu..... | 102 |
| 3.2.7.7 | Softkeys of the Input/Output Menu for RF Measurements..... | 105 |
| 3.3 | Working with the Frequency Mask Trigger..... | 107 |
| 3.3.1 | Creating a Frequency Mask..... | 108 |
| 3.3.2 | Editing Mask Points..... | 109 |
| 3.3.3 | Managing Frequency Masks..... | 110 |
| 3.4 | Further Information..... | 111 |
| 3.4.1 | Detector Overview..... | 111 |
| 3.4.2 | Trace Mode Overview..... | 112 |
| 3.4.3 | Selecting the Appropriate Filter Type..... | 114 |
| 3.4.4 | List of Available RRC and Channel Filters..... | 115 |
| 3.4.5 | Ranges and Range Settings..... | 116 |
| 3.4.6 | ASCII File Export Format..... | 117 |
| 3.4.7 | Format Description of Spectrum Emission Mask XML Files..... | 118 |
| 3.4.8 | Provided XML Files for the Spectrum Emission Mask Measurement..... | 124 |
| 3.4.9 | Fast Spectrum Emission Mask Measurements..... | 126 |
| 3.4.10 | Predefined CP/ACLR Standards..... | 128 |
| 3.4.11 | Optimized Settings for CP/ACLR Test Parameters..... | 129 |
| 4 | Remote Control Commands..... | 132 |
| 4.1 | Notation..... | 133 |
| 4.2 | CALCulate Subsystem..... | 135 |
| 4.2.1 | CALCulate:FEED Commands..... | 136 |
| 4.2.2 | CALCulate:MARKer:FUNCTION Commands..... | 138 |
| 4.2.3 | Other CALCulate Commands Referenced in this Manual..... | 145 |
| 4.2.3.1 | CALCulate:DELTamarker subsystem..... | 145 |
| 4.2.3.2 | CALCulate:LIMit subsystem..... | 153 |
| 4.2.3.3 | CALCulate:LIMit:ESpectrum subsystem..... | 160 |
| 4.2.3.4 | CALCulate:MARKer subsystem..... | 165 |
| 4.2.3.5 | CALCulate:MASK Subsystem..... | 171 |
| 4.2.3.6 | CALCulate:PSE subsystem..... | 177 |
| 4.2.3.7 | CALCulate:STATistics subsystem..... | 179 |
| 4.2.3.8 | Other Referenced CALCulate Commands..... | 182 |

| | | |
|------------|--|------------|
| 4.3 | CONFigure Subsystem..... | 183 |
| 4.4 | DISPlay Subsystem..... | 189 |
| 4.5 | INSTRument subsystem..... | 195 |
| 4.6 | SENSe Subsystem..... | 196 |
| 4.6.1 | SENSe:CDPower Commands..... | 196 |
| 4.6.2 | SENSe:POWer Commands..... | 202 |
| 4.6.3 | Other SENSe Commands Referenced in this Manual..... | 203 |
| 4.6.3.1 | SENSe:ADJust Subsystem..... | 203 |
| 4.6.3.2 | SENSe:ESpectrum Subsystem..... | 205 |
| 4.6.3.3 | SENSe:BANDwidth subsystem..... | 217 |
| 4.6.3.4 | SENSe:FREQuency subsystem..... | 220 |
| 4.6.3.5 | SENSe:POWer subsystem..... | 224 |
| 4.6.3.6 | SENSe:SWEEp subsystem..... | 234 |
| 4.6.3.7 | Other Commands in the SENSe Subsystem..... | 240 |
| 4.7 | Status Reporting System of the TD-SCDMA Measurement Applications (K76/K77) | 241 |
| 4.8 | TRACe Subsystem..... | 242 |
| 4.9 | Other Commands Referenced in this Manual..... | 248 |
| 4.9.1 | INPut commands..... | 248 |
| 4.9.2 | TRIGger Commands..... | 255 |
| 4.9.3 | Other Referenced Commands..... | 258 |
| | List of Commands..... | 263 |
| | Index..... | 269 |

1 Preface

1.1 Documentation Overview

The user documentation for the R&S FSVR is divided as follows:

- Quick Start Guide
- Operating Manuals for base unit and options
- Service Manual
- Online Help
- Release Notes

Quick Start Guide

This manual is delivered with the instrument in printed form and in PDF format on the CD. It provides the information needed to set up and start working with the instrument. Basic operations and basic measurements are described. Also a brief introduction to remote control is given. The manual includes general information (e.g. Safety Instructions) and the following chapters:

| | |
|-----------|--|
| Chapter 1 | Introduction, General information |
| Chapter 2 | Front and Rear Panel |
| Chapter 3 | Preparing for Use |
| Chapter 4 | Firmware Update and Installation of Firmware Options |
| Chapter 5 | Basic Operations |
| Chapter 6 | Basic Measurement Examples |
| Chapter 7 | Brief Introduction to Remote Control |
| Appendix | Printer Interface |
| Appendix | LAN Interface |

Operating Manuals

The Operating Manuals are a supplement to the Quick Start Guide. Operating Manuals are provided for the base unit and each additional (software) option.

The Operating Manual for the base unit provides basic information on operating the R&S FSVR in general, and the "Spectrum" mode in particular. Furthermore, the software options that enhance the basic functionality for various measurement modes are described here. The set of measurement examples in the Quick Start Guide is expanded by more advanced measurement examples. In addition to the brief introduction to remote control in the Quick Start Guide, a description of the basic analyzer commands and programming examples is given. Information on maintenance, instrument interfaces and error messages is also provided.

In the individual option manuals, the specific instrument functions of the option are described in detail. For additional information on default settings and parameters, refer to the data sheets. Basic information on operating the R&S FSVR is not included in the option manuals.

The following Operating Manuals are available for the R&S FSVR:

- R&S FSVR base unit; in addition:
 - R&S FSV-K7S Stereo FM Measurements
 - R&S FSV-K9 Power Sensor Support
 - R&S FSV-K14 Spectrogram Measurement
- R&S FSV-K10 GSM/EDGE Measurement
- R&S FSV-K30 Noise Figure Measurement
- R&S FSV-K40 Phase Noise Measurement
- R&S FSV-K70 Vector Signal Analysis Operating Manual
R&S FSV-K70 Vector Signal Analysis Getting Started (First measurements)
- R&S FSV-K72 3GPP FDD BTS Analysis
- R&S FSV-K73 3GPP FDD UE Analysis
- R&S FSV-K76/77 3GPP TD-SCDMA BTS/UE Measurement
- R&S FSV-K82/83 CDMA2000 BTS/MS Analysis
- R&S FSV-K84/85 1xEV-DO BTS/MS Analysis
- R&S FSV-K91 WLAN IEEE 802.11
- R&S FSV-K93 WiMAX IEEE 802.16 OFDM/OFDMA Analysis
- R&S FSV-K100/K104 EUTRA / LTE Downlink Measurement Application
- R&S FSV-K101/K105 EUTRA / LTE Uplink Measurement Application

These manuals are available in PDF format on the CD delivered with the instrument.

Service Manual

This manual is available in PDF format on the CD delivered with the instrument. It describes how to check compliance with rated specifications, instrument function, repair, troubleshooting and fault elimination. It contains all information required for repairing the R&S FSVR by replacing modules. The manual includes the following chapters:

| | |
|-----------|--------------------------------------|
| Chapter 1 | Performance Test |
| Chapter 2 | Adjustment |
| Chapter 3 | Repair |
| Chapter 4 | Software Update / Installing Options |
| Chapter 5 | Documents |

Online Help

The online help contains context-specific help on operating the R&S FSVR and all available options. It describes both manual and remote operation. The online help is

installed on the R&S FSVR by default, and is also available as an executable .chm file on the CD delivered with the instrument.

Release Notes

The release notes describe the installation of the firmware, new and modified functions, eliminated problems, and last minute changes to the documentation. The corresponding firmware version is indicated on the title page of the release notes. The current release notes are provided in the Internet.

1.2 Conventions Used in the Documentation

1.2.1 Typographical Conventions

The following text markers are used throughout this documentation:

| Convention | Description |
|-------------------------------------|--|
| "Graphical user interface elements" | All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks. |
| KEYS | Key names are written in capital letters. |
| File names, commands, program code | File names, commands, coding samples and screen output are distinguished by their font. |
| <i>Input</i> | Input to be entered by the user is displayed in italics. |
| Links | Links that you can click are displayed in blue font. |
| "References" | References to other parts of the documentation are enclosed by quotation marks. |

1.2.2 Conventions for Procedure Descriptions

When describing how to operate the instrument, several alternative methods may be available to perform the same task. In this case, the procedure using the touchscreen is described. Any elements that can be activated by touching can also be clicked using an additionally connected mouse. The alternative procedure using the keys on the instrument or the on-screen keyboard is only described if it deviates from the standard operating procedures.

The term "select" may refer to any of the described methods, i.e. using a finger on the touchscreen, a mouse pointer in the display, or a key on the instrument or on a keyboard.

1.2.3 Notes on Screenshots

When describing the functions of the product, we use sample screenshots. These screenshots are meant to illustrate as much as possible of the provided functions and possible interdependencies between parameters.

The screenshots usually show a fully equipped product, that is: with all options installed. Thus, some functions shown in the screenshots may not be available in your particular product configuration.

1.3 How to Use the Help System

Calling context-sensitive and general help

- ▶ To display the general help dialog box, press the HELP key on the front panel. The help dialog box "View" tab is displayed. A topic containing information about the current menu or the currently opened dialog box and its function is displayed.



For standard Windows dialog boxes (e.g. File Properties, Print dialog etc.), no context-sensitive help is available.

- ▶ If the help is already displayed, press the softkey for which you want to display help. A topic containing information about the softkey and its function is displayed.



If a softkey opens a submenu and you press the softkey a second time, the submenu of the softkey is displayed.

Contents of the help dialog box

The help dialog box contains four tabs:

- "Contents" - contains a table of help contents
- "View" - contains a specific help topic
- "Index" - contains index entries to search for help topics
- "Zoom" - contains zoom functions for the help display

To change between these tabs, press the tab on the touchscreen.

Navigating in the table of contents

- To move through the displayed contents entries, use the UP ARROW and DOWN ARROW keys. Entries that contain further entries are marked with a plus sign.
- To display a help topic, press the ENTER key. The "View" tab with the corresponding help topic is displayed.

- To change to the next tab, press the tab on the touchscreen.

Navigating in the help topics

- To scroll through a page, use the rotary knob or the UP ARROW and DOWN ARROW keys.
- To jump to the linked topic, press the link text on the touchscreen.

Searching for a topic

1. Change to the "Index" tab.
2. Enter the first characters of the topic you are interested in. The entries starting with these characters are displayed.
3. Change the focus by pressing the ENTER key.
4. Select the suitable keyword by using the UP ARROW or DOWN ARROW keys or the rotary knob.
5. Press the ENTER key to display the help topic.
The "View" tab with the corresponding help topic is displayed.

Changing the zoom

1. Change to the "Zoom" tab.
2. Set the zoom using the rotary knob. Four settings are available: 1-4. The smallest size is selected by number 1, the largest size is selected by number 4.

Closing the help window

- ▶ Press the ESC key or a function key on the front panel.

2 Introduction

Equipped with the firmware application R&S FSV-K76, the R&S FSVR performs code domain measurements on forward link signals according to the 3GPP standard (Third Generation Partnership Project).

Equipped with the firmware application R&S FSV-K77, the R&S FSVR performs code domain measurements on downlink signals according to the 3GPP standard (Third Generation Partnership Project).

The basic standards are 3GPP TS 25.142 "Base Station Conformance Testing (TDD)", version V8.1.0, 3GPP TS 25.221 "Physical channels and mapping of transport channels onto physical channels (TDD)". When TD-SCDMA specifications are mentioned in the document, this standard is meant.

In addition to the code domain measurements specified in the TD-SCDMA standard, the firmware application features measurements in the spectral range such as channel power, adjacent channel power, occupied bandwidth and spectrum emission mask with predefined settings.

Overview of the Firmware Options R&S FSV-K76 and R&S FSV-K77

This section contains all information required for operation of an R&S FSVR equipped with Application Firmware R&S FSV-K76 and R&S FSV-K77. It covers operation via menus and the remote control commands for the 3GPP TD-SCDMA BTS and UE Measurement Application.

To open the TD-SCDMA BTS and UE measurement application

- Press the MODE key and select "TDS BTS" (R&S FSV-K76) or TDS UE (R&S FSV-K77) from the softkey menu.

The TD-SCDMA main menu opens. This is identical to the "Measurement" menu (MEAS key).

Note that you can return to the main menu anytime by pressing either the MEAS key or the HOME key.

This part of the documentation contains of the following topics:

3 Instrument Functions

The following chapters describe all functions available with the firmware application in detail, beginning with some background information on the various measurements.

Channel Characteristics

Depending on the symbol rate of a code channel, it has a different spreading factor and a different number of symbols per slot. The following table shows the relationships:

| Spreading Factor | Sym-bols / Slot | QPSK | | 8PSK | | 16QAM | | 64QAM | |
|------------------|-----------------|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | | Bits per Slot | ksps | Bits per slot | ksps | Bits per slot | ksps | Bits per slot | ksps |
| 1 | 704 | 1408 | 281.6 | 2112 | 422.4 | 2816 | 563.2 | 4224 | 844.8 |
| 2 | 352 | 704 | 140.8 | 1056 | 211.2 | 1408 | 281.6 | 2112 | 422.4 |
| 4 | 176 | 352 | 70.4 | 528 | 105.6 | 704 | 140.8 | 1056 | 211.2 |
| 8 | 88 | 176 | 35.2 | 264 | 52.8 | 352 | 70.4 | 528 | 105.6 |
| 16 | 44 | 88 | 17.6 | 132 | 26.4 | 176 | 35.2 | 264 | 52.8 |

The data rates in the table result from the bits per slot referred to a subframe length of 5 ms.

You can select the code channel and the slot to be analyzed with the "Select Channel" and the "Select Slot" softkeys. For example, select code channel 1.16 (code number 1 for spreading factor 16) and slot 2. Activate the Code Domain Power result display in one screen and EVM vs Symbol in a second screen. Screen A shows the Code Domain Power of slot number 2 and selects code channel 1.16, which turns red. Screen B shows the results of the EVM vs Symbol measurement of code channel 1.16 in slot 2 with 44 corresponding values (derived from the table above).

| | | |
|------------|---|-----------|
| 3.1 | Code Domain Analysis..... | 15 |
| 3.1.1 | Menu and Softkey Description..... | 15 |
| 3.1.1.1 | Softkeys of the Code Domain Analyzer..... | 16 |
| 3.1.1.2 | Softkeys of the Frequency Menu..... | 40 |
| 3.1.1.3 | Softkeys of the Amplitude Menu..... | 41 |
| 3.1.1.4 | Softkeys of the Auto Set Menu..... | 44 |
| 3.1.1.5 | Softkeys of the Sweep Menu..... | 45 |
| 3.1.1.6 | Softkeys of the Trace Menu for CDA Measurements..... | 46 |
| 3.1.1.7 | Softkeys of the Trigger Menu for CDA Measurements..... | 47 |
| 3.1.1.8 | Softkeys of the Input/Output Menu for CDA Measurements..... | 49 |
| 3.2 | RF Measurements..... | 53 |

| | | |
|------------|--|------------|
| 3.2.1 | Signal Channel Power..... | 53 |
| 3.2.2 | Adjacent Channel Power (CH Power ACLR)..... | 53 |
| 3.2.3 | Spectrum Emission Mask..... | 54 |
| 3.2.4 | Occupied Bandwidth..... | 54 |
| 3.2.5 | Complementary Cumulative Distribution Function (CCDF)..... | 55 |
| 3.2.6 | Power vs Time..... | 55 |
| 3.2.7 | Softkeys and Menus for RF Measurements (K76/K77)..... | 56 |
| 3.2.7.1 | Softkeys of the Measurement Menu..... | 56 |
| 3.2.7.2 | Softkeys of the Frequency Menu..... | 86 |
| 3.2.7.3 | Softkeys of the Span Menu for RF Measurements..... | 89 |
| 3.2.7.4 | Softkeys of the Amplitude Menu for RF Measurements..... | 90 |
| 3.2.7.5 | Softkeys of the Bandwidth Menu..... | 95 |
| 3.2.7.6 | Softkeys of the Sweep Menu..... | 102 |
| 3.2.7.7 | Softkeys of the Input/Output Menu for RF Measurements..... | 105 |
| 3.3 | Working with the Frequency Mask Trigger..... | 107 |
| 3.3.1 | Creating a Frequency Mask..... | 108 |
| 3.3.2 | Editing Mask Points..... | 109 |
| 3.3.3 | Managing Frequency Masks..... | 110 |
| 3.4 | Further Information..... | 111 |
| 3.4.1 | Detector Overview..... | 111 |
| 3.4.2 | Trace Mode Overview..... | 112 |
| 3.4.3 | Selecting the Appropriate Filter Type..... | 114 |
| 3.4.4 | List of Available RRC and Channel Filters..... | 115 |
| 3.4.5 | Ranges and Range Settings..... | 116 |
| 3.4.6 | ASCII File Export Format..... | 117 |
| 3.4.7 | Format Description of Spectrum Emission Mask XML Files..... | 118 |
| 3.4.8 | Provided XML Files for the Spectrum Emission Mask Measurement..... | 124 |
| 3.4.9 | Fast Spectrum Emission Mask Measurements..... | 126 |
| 3.4.10 | Predefined CP/ACLR Standards..... | 128 |
| 3.4.11 | Optimized Settings for CP/ACLR Test Parameters..... | 129 |

3.1 Code Domain Analysis

The Code Domain Analyzer provides the following result displays for measurements in the code domain:

| Result Display | Description |
|-------------------------|--|
| Code Domain Power | Result display for the Code Domain Power |
| Composite EVM | Error Vector Magnitude on slot level. |
| Peak Code Domain Error | Maximum error between test signal and reference signal of the selected slot. |
| Code Domain Error Power | Error between test signal and reference signal. |
| Power vs Symbol | Channel power on symbol level. |
| Channel Power vs Slot | Average power of a specific channel over all slots. |
| Result Summary | Summary of results in tabular form. |
| Channel Table | Summary of channel configuration in tabular form. |
| Channel Constellation | Channel constellation diagram. |
| EVM vs Symbol | Error Vector Magnitude on symbol level. |
| Channel Bitstream | Summary of bits in a specific channel. |
| Composite Constellation | Constellation diagram on chip level. |

You can display up to four result displays at the same time. Any result can be displayed in either screen. For further details on the display configuration refer to the [Display Configuration](#) softkey. Just above the measurement screen(s), the most common settings and parameters are summarized:

| | | | | | | | |
|-----------|------------|------|----------|---------|--------|------------|-----------|
| Ref Level | -10.00 dBm | Freq | 15.0 GHz | Channel | 1.16 | Code Power | Relative |
| | | Att | 10 dB | Slot | 0 of 7 | Data Rate | 17.6 ksps |

The default settings of the Code Domain Analyzer are summarized in the [Settings Overview](#) dialog box. There you can also reset the instrument to its default values by pressing the "Set to Default" button.

3.1.1 Menu and Softkey Description

The following chapters describe the menus and softkeys specific to the R&S FSV-76 and 77 options for CDA measurements.

The "Bandwidth", "Span" and "Marker" menus are not available for CDA measurements.

All menus not described here are the same as for the base unit, see the description there.



Importing and Exporting I/Q Data

As of firmware version 1.63, I/Q data can be imported from a file for processing in R&S FSV-K76/-K77, and captured I/Q data can be stored to a file ("IQ Import"/"IQ Export" softkeys in the "Save/Rcl" menu). For details see the base unit description.

| | | |
|---------|---|----|
| 3.1.1.1 | Softkeys of the Code Domain Analyzer..... | 16 |
| 3.1.1.2 | Softkeys of the Frequency Menu..... | 40 |
| 3.1.1.3 | Softkeys of the Amplitude Menu..... | 41 |
| 3.1.1.4 | Softkeys of the Auto Set Menu..... | 44 |
| 3.1.1.5 | Softkeys of the Sweep Menu..... | 45 |
| 3.1.1.6 | Softkeys of the Trace Menu for CDA Measurements..... | 46 |
| 3.1.1.7 | Softkeys of the Trigger Menu for CDA Measurements..... | 47 |
| 3.1.1.8 | Softkeys of the Input/Output Menu for CDA Measurements..... | 49 |

3.1.1.1 Softkeys of the Code Domain Analyzer

The following chapter describes all softkeys available in the "Code Domain Analyzer" menu of the TD-SCDMA BTS and UE measurement applications.




You can also access the main menu using the MEAS CONFIG hardkey.

| | |
|------------------------------------|----|
| Settings Overview..... | 17 |
| Frontend Settings..... | 18 |
| L Center..... | 18 |
| L Frequency Offset..... | 19 |
| L Ref Level..... | 19 |
| L Ref Level Offset..... | 19 |
| L Preamp On/Off..... | 19 |
| L Adjust Ref Lvl..... | 19 |
| IQ-Capture Settings..... | 19 |
| L Invert Q..... | 20 |
| L Capture Length..... | 20 |
| L Set Count..... | 20 |
| L Set to Analyze..... | 20 |
| L Trigger Source Free Run..... | 21 |
| L Trigger Source External..... | 21 |
| L Trigger Polarity..... | 21 |
| L Trigger Offset..... | 21 |
| Sync Settings..... | 22 |
| L Scrambling Code..... | 22 |
| L MA Shift Cells/No. of Users..... | 22 |
| L Sync To (downlink, K76)..... | 22 |
| L Sync To (uplink, K77)..... | 23 |

| | |
|---|----|
| L Rotate code channel to associated midamble..... | 23 |
| Channel Table Settings..... | 23 |
| L Max Modulation..... | 23 |
| L Channel Search Mode..... | 24 |
| L Inactive Channel Threshold..... | 24 |
| L Channel Tables..... | 24 |
| L New / Copy / Edit..... | 24 |
| L Add Channel..... | 25 |
| L Delete Channel..... | 26 |
| L Meas..... | 26 |
| L Select Slot..... | 26 |
| L Sort Midamble..... | 26 |
| L Sort Code..... | 26 |
| L Reload..... | 26 |
| L Save..... | 26 |
| L Delete..... | 27 |
| Result Settings..... | 27 |
| L Slot Number..... | 27 |
| L Channel (Code) Number..... | 27 |
| L Code Power..... | 27 |
| L Normalize..... | 28 |
| L Channel Table Sort Order..... | 28 |
| Display Configuration..... | 28 |
| L Code Domain Power..... | 29 |
| L Composite EVM..... | 30 |
| L Peak Code Domain Error..... | 30 |
| L Code Domain Error..... | 31 |
| L Power vs Symbol..... | 32 |
| L Channel Power vs Slot..... | 32 |
| L Result Summary..... | 33 |
| L Result Summary (Set: #)..... | 33 |
| L Slot Result (Slot: #)..... | 33 |
| L Channel Result (Channel: #)..... | 34 |
| L Channel Table..... | 34 |
| L Channel Constellation..... | 36 |
| L EVM vs Symbol..... | 36 |
| L Channel Bitstream..... | 37 |
| L Composite Constellation..... | 37 |
| L Mag Error vs Chip..... | 38 |
| L Phase Error vs Chip..... | 38 |
| L Symbol Magnitude Error..... | 38 |
| L Symbol Phase Error..... | 39 |
| Select Ch Slot..... | 39 |
| Adjust Ref Lvl..... | 39 |

Settings Overview


This softkey opens the "Settings Overview" dialog box that visualizes the data flow of the Code Domain Analyzer and summarizes all of the current settings. In addition, you can change the current settings via this dialog box.

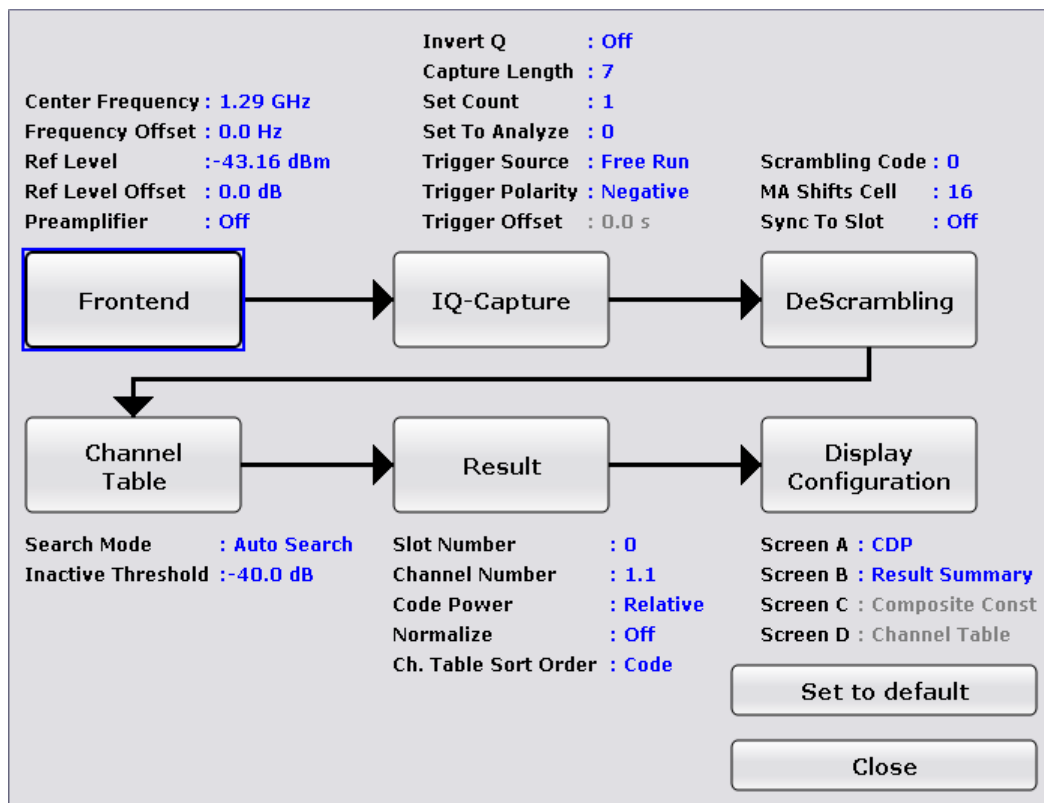

To change the settings press one of the buttons on the touchscreen.

Frontend Settings

This softkey opens the "Frontend Settings" dialog box to modify the following parameters:

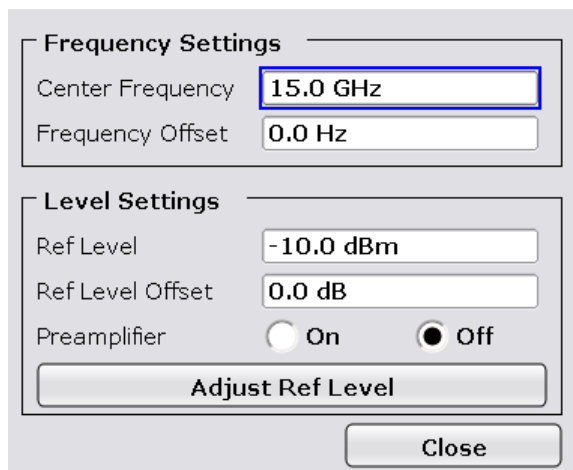

Center ← Frontend Settings

Opens an edit dialog box to enter the center frequency. The allowed range of values for the center frequency depends on the frequency span.

$$\text{span} > 0: \text{span}_{\min}/2 \leq f_{\text{center}} \leq f_{\text{max}} - \text{span}_{\min}/2$$

span = 0: $0 \text{ Hz} \leq f_{\text{center}} \leq f_{\text{max}}$

f_{max} and span_{min} are specified in the data sheet.

Remote command:

[SENSe:] FREQuency:CENTer on page 221

Frequency Offset ← Frontend Settings

Opens an edit dialog box to enter a frequency offset that shifts the displayed frequency range by the specified offset.

The softkey indicates the current frequency offset. The allowed values range from -100 GHz to 100 GHz. The default setting is 0 Hz.

Remote command:

[SENSe:] FREQuency:OFFSet on page 222

Ref Level ← Frontend Settings

Opens an edit dialog box to enter the reference level in the current unit (dBm, dBμV, etc).

The reference level is the maximum value the AD converter can handle without distortion of the measured value. Signal levels above this value will not be measured correctly, which is indicated by the "IFOVL" status display.

Remote command:

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel on page 193

Ref Level Offset ← Frontend Settings

Opens an edit dialog box to enter the arithmetic level offset. This offset is added to the measured level irrespective of the selected unit. The scaling of the y-axis is changed accordingly. The setting range is ±200 dB in 0.1 dB steps.

Remote command:

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet on page 194

Preamp On/Off ← Frontend Settings

Switches the preamplifier on and off.

If option R&S FSV-B22 is installed, the preamplifier is only active below 7 GHz.

If option R&S FSV-B24 is installed, the preamplifier is active for all frequencies.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:

INPut:GAIN:STATe on page 254

Adjust Ref Lvl ← Frontend Settings

Defines the optimal reference level for the current measurement automatically.

Remote command:

[SENSe:] ADJust:LEVel on page 205

IQ-Capture Settings

This softkey opens the "IQ-Capture Settings" dialog box.

Common Settings

Invert Q On Off

Data Capture Settings

Capture Length

Set Count

Set To Analyze

Trigger Settings

Trigger Source External Free Run

Trigger Polarity Positive Negative

Trigger Offset

Close

Invert Q ← IQ-Capture Settings

Inverts the sign of the signal's Q-component. The default setting is OFF.

Remote command:

[\[SENSe:\]CDPower:QINVert](#) on page 199

Capture Length ← IQ-Capture Settings

Sets the number of slots you want to analyze. The input value is always in multiples of the slots. The default value is 7. The maximum capture length is 63.

The "Capture Length" field is available if [Set Count](#) equals 1.

Remote command:

[\[SENSe:\]CDPower:IQLength](#) on page 197

Set Count ← IQ-Capture Settings

Defines the number of consecutive sets to be stored in the instrument's IQ memory. One set consists of 63 slots. The R&S FSVR can capture up to 6300 slots in a single sweep, i.e. the possible value range is from 1 to 100 sets.

The default setting is 1. In that case you can still define the number of slots. In case you want to capture more than one set, the capture length is always 63. The R&S FSVR automatically sets the capture length to 63 and the [Capture Length](#) field is not available for modification.

Remote command:

[\[SENSe:\]CDPower:SET:COUNT](#) on page 200

Set to Analyze ← IQ-Capture Settings

Selects a specific set for further analysis. The value range depends on the "[IQ-Capture Settings](#)" on page 19 and is between 0 and [Set Count-1].

Remote command:

[\[SENSe:\]CDPower:SET](#) on page 199

Trigger Source Free Run ← IQ-Capture Settings

The start of a sweep is not triggered. Once a measurement is completed, another is started immediately.

This softkey is available for code domain measurements.

Remote command:

TRIG:SOUR IMM, see TRIGger<n>[:SEQuence]:SOURce on page 257

Trigger Source External ← IQ-Capture Settings

Defines triggering via a TTL signal at the "EXT TRIG/GATE IN" input connector on the rear panel.

An edit dialog box is displayed to define the external trigger level.

This softkey is available for code domain measurements.

Remote command:

TRIG:SOUR EXT, see TRIGger<n>[:SEQuence]:SOURce on page 257

Trigger Polarity ← IQ-Capture Settings

Sets the polarity of the trigger source.

The sweep starts after a positive or negative edge of the trigger signal. The default setting is "Pos". The setting applies to all modes with the exception of the "Free Run" and "Time" mode.

This softkey is available for code domain measurements.

"Pos" Level triggering: the sweep is stopped by the logic "0" signal and restarted by the logical "1" signal after the gate delay time has elapsed.

"Neg" Edge triggering: the sweep is continued on a "0" to "1" transition for the gate length duration after the gate delay time has elapsed.

Remote command:

TRIGger<n>[:SEQuence]:SLOPe on page 257

[SENSe:]SWEep:EGATE:POLarity on page 236

Trigger Offset ← IQ-Capture Settings

Opens an edit dialog box to enter the time offset between the trigger signal and the start of the sweep.

| | |
|-------------|--|
| offset > 0: | Start of the sweep is delayed |
| offset < 0: | <p>Sweep starts earlier (pre-trigger)</p> <p>Only possible for span = 0 (e.g. I/Q Analyzer mode) and gated trigger switched off</p> <p>Maximum allowed range limited by the sweep time: $\text{pretrigger}_{\text{max}} = \text{sweep time}$</p> <p>When using the R&S Digital I/Q Interface (R&S FSV-B17) with I/Q Analyzer mode, the maximum range is limited by the number of pretrigger samples.</p> <p>See the R&S Digital I/Q Interface(R&S FSV-B17) description in the base unit.</p> |

In the "External" or "IF Power" trigger mode, a common input signal is used for both trigger and gate. Therefore, changes to the gate delay will affect the trigger delay (trigger offset) as well.

Remote command:

[TRIGger<n>\[:SEquence\]:HOLDoff\[:TIME\]](#) on page 256

Sync Settings

This softkey opens the "Synchronization Settings" dialog box.

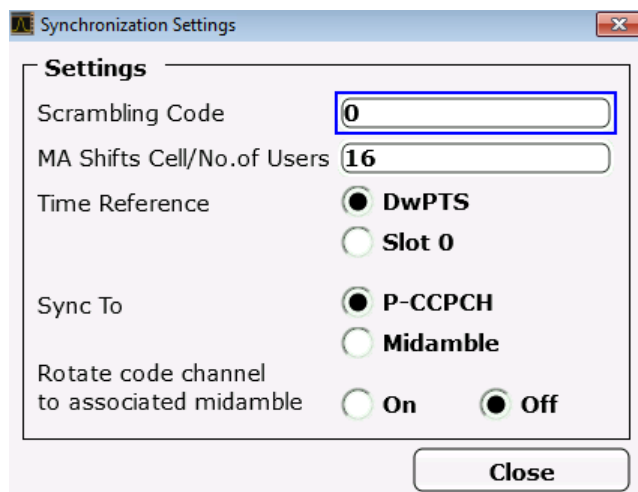


Fig. 3-1: Synchronization Settings for downlink measurements (K76)

Scrambling Code ← Sync Settings

Sets the Scrambling Code of the base station. Possible values are between 0 and 127 and have to be entered as decimals.

Remote command:

[\[SENSe:\]CDPower:SCODE](#) on page 199

MA Shift Cells/No. of Users ← Sync Settings

Sets the maximum number of usable midamble shifts of the base station. Possible values are in the range from 2 to 16 in steps of 2 midamble shifts.

If you use a predefined channel table, this value is replaced by that of the channel table.

Remote command:

[\[SENSe:\]CDPower:MSHift](#) on page 198

Sync To (downlink, K76) ← Sync Settings

Toggles the phase reference.

"P-CCPCH" By default, the R&S FSV-K76 determines the phase reference for all downlink data slots from the downlink pilot channel (P-CCPCH) in slot 0. For some measurements like beamforming or repeater measurements, it might be necessary to apply different phase offsets to each time slot. In these timeslots, using the P-CCPCH as phase reference leads to rotated constellation diagrams and bad EVM results.

"Midamble" The R&S FSV-K76 determines the phase reference from the midamble of the selected slot. With this method, the data slots can be phase rotated to each other and a degradation of the EVM results can be avoided. For a successful synchronization, the selected slot must contain at least one data channel with sufficient power.

Remote command:

[SENSe:]CDPower:STSLot on page 200

Sync To (uplink, K77) ← Sync Settings

Toggles the phase reference. For a successful synchronization, the selected slot must contain at least one data channel with sufficient power.

"Code Channel" The R&S FSV-K77 determines the phase reference from the code channel of the selected slot. This is useful when synchronization fails in bad SNR environments. For code channel synchronization, at least one of the code channels must be QPSK or 8PSK modulated.

"Midamble" By default, the R&S FSV-K77 determines the phase reference from the midamble of the selected slot. With this method, the data slots can be phase rotated to each other and a degradation of the EVM results can be avoided.

Remote command:

[SENSe:]CDPower:STSLot:MODE on page 201

Rotate code channel to associated midamble ← Sync Settings

By default, the R&S FSV-K76/77 determines one phase reference for all midambles and code channels of a data slot. If this option is selected, phase rotations between the code channels are allowed. Each code channel gets its own phase reference from the associated midamble according to section AA.2 of the standard document 3GPP TS 25.221. If the associated midamble is missing, the common phase reference is used for this code channel.

Remote command:

[SENSe:]CDPower:STSLot:ROTate on page 201

Channel Table Settings

Opens the "Channel Table Settings" dialog box and the corresponding submenu.

Max Modulation ← Channel Table Settings

Defines the highest modulation to be considered in the automatic channel search. In low SNR environments it may be necessary to limit the channel search to lower modulations than 64QAM. The following types are available:

- QPSK
- 8PSK
- 16QAM
- 64QAM

Remote command:

[SENSe:]CDPower:MMAx on page 198

Channel Search Mode ← Channel Table Settings

Defines the kind of channel table used for the measurement.

Predefined channel tables are a way to customize measurements. The RECENT channel table contains the last configuration used before switching from Auto Search to Predefined. In addition, new channel tables can be created and saved to be used in measurements.

- "Auto Search" The Auto Search mode scans the whole code domain, including all permissible symbol rates and channel numbers, for active channels. The automatic search provides an overview of the channels contained in the signal. If channels are not detected as being active, change the [Inactive Channel Threshold](#) or select the Predefined channel search type.
- "Predefined" Performs the code domain measurement on the basis of the active predefined channel table. All channels of a channel table are assumed to be active. For further details also refer to the [Inactive Channel Threshold](#) field and the "Predefined Channel Tables"

Remote command:

[CONFigure:CDPower\[:BTS\]:CTABLE\[:STATe\]](#) on page 183

[CONFigure:CDPower\[:BTS\]:CTABLE:SElect](#) on page 187

Inactive Channel Threshold ← Channel Table Settings

Defines the minimum power which a single channel must have compared to the total signal in order to be recognized as an active channel. Channels below the specified threshold are regarded as "inactive". The parameter is available in the Auto Search mode of the "Channel Table Settings" dialog box. The default value is -40 dB. With this value all channels with signals such as the TD-SCDMA test models are located by the Code Domain Power analysis. Decrease the Inactive Channel Threshold value, if not all channels contained in the signal are detected.

Remote command:

[\[SENSe:\]CDPower:ICThreshold](#) on page 197

Channel Tables ← Channel Table Settings

In this field a list of the available channel tables is shown. To activate a predefined channel table, select the table name by using either the touchscreen or the the cursor keys and pressing the ENTER key. The selected channel table is the basis for future measurements (until you choose another or select Auto Search).

An active channel table must completely describe the supplied signal. Using the softkeys, customized channel tables can be defined or existing channel tables can be modified.

Remote command:

[CONFigure:CDPower\[:BTS\]:CTABLE:CATalog?](#) on page 184

New / Copy / Edit ← Channel Table Settings

All three softkeys open a dialog box with the same layout and the same corresponding submenu.

The "New" softkey opens the "New Channel Table" dialog box. In this dialog you can build a new channel table. All fields are empty.

The "Copy" softkey copies all elements of the selected channel table and opens the "Copy Channel Table" dialog box. The name of the new channel table is set to 'Copy of <SourceChannelTableName>'.

The "Edit" softkey opens the "Edit Channel Table" dialog box and the corresponding menu. In this dialog box you can edit an existing channel table.

Note that changes are never saved automatically. Remember to save your channel tables before ending the application.

Note: Prerequisite. The code domain analyzer requires an active channel 1.16 (e.g. P-CCPCH1) and a valid midamble in slot 0 for synchronization. The parameters "Scrambling Code" and "MA Shifts Cell" must comply with the base station.

The dialog box contains the following items. You can modify the white fields as you like. The grey fields can not be modified; these are automatically calculated by the R&S FSVR:

| Item | Description |
|------------------|--|
| Name | Enter the name of the selected channel table, which will be saved under <name>.xml. The name is case sensitive and may not contain spaces. It must be a valid MS Windows file name. Note that the old channel table file is not deleted. |
| Description | Enter further information about the channel table. |
| MA Shift Cells | Sets the maximum number of usable midamble shifts of the base station. |
| Channel Type | Select one of the channel types from the dropdown menu. |
| Walsh Ch.SF | Enter the Channel Number (Ch) and Spreading Factor (SF). For some channel types the possible values are limited or preset (e.g. F-PICH, F-TDPICH and F-PDCH). |
| Data Rate / kbps | Display of the data rate. |
| Modulation | Enter the modulation type for the channel. |
| Midamble Shift | Shift of the associated midamble if a common or default midamble allocation is detected. |
| State | Indicates whether a channel is active or inactive. |
| Domain Conflict | A red bullet indicates if there's a conflict of any sorts between two or more channels (e.g. two conflicting channel codes). |

Remote command:

`CONFigure:CDPower[:BTS]:CTABLE:NAME`

`CONFigure:CDPower[:BTS]:CTABLE:COPY`

Add Channel ← New / Copy / Edit ← Channel Table Settings

Inserts a new channel below the one selected. For a description of the parameters of the channel refer to the [Channel Table Settings](#) softkey. The default values for a new channel are:

| | |
|------------------|---------------------------------|
| Channel Type | Midamble |
| Walsh Ch.SF | 2.64 |
| Data Rate / kbps | 19.2 (automatically calculated) |

| | |
|-----------------|-------------------------------|
| Modulation | QPSK |
| Midamble Shift | --- |
| State | Off |
| Domain Conflict | No (automatically determined) |

To change the channel type use the dropdown menu that opens when selecting / highlighting the "Channel Type" field that you want to change. Modulation settings are changed in the same way.

To change the channel number, type another channel number in the form 'Channel-Number.SpreadingFactor' or just the code number in the respective field. Confirm the change with the ENTER key.

To activate or deactivate a channel, select the "State" field and confirm with the ENTER key.

The R&S FSVR automatically checks for conflicts between two active channels.

Remote command:

[CONFigure:CDPower\[:BTS\]:CTABLE:DATA](#) on page 185

Delete Channel ← New / Copy / Edit ← Channel Table Settings

Deletes the selected channel without further notice.

Meas ← New / Copy / Edit ← Channel Table Settings

Initiates a measurement in "[Channel Search Mode](#)" on page 24 mode. The measurement results are applied to the active channel table. The active channel table is overwritten without further notice.

The softkey is only available if you have selected the Auto Search mode in the "Channel Table Settings" dialog box.

Select Slot ← New / Copy / Edit ← Channel Table Settings

Selects the slot for which the channel table is valid.

Sort Midamble ← New / Copy / Edit ← Channel Table Settings

Sets the [Result Settings](#) to midamble order.

This softkey is available for the 3GPP TD-SCDMA BTS Measurement Application.

Sort Code ← New / Copy / Edit ← Channel Table Settings

Sets the [Result Settings](#) to Code order.

Reload ← New / Copy / Edit ← Channel Table Settings

Reloads the original content of the copied channel table. This softkey is available for the "New Channel Table" dialog box and the "Edit Channel Table" dialog box.

Save ← New / Copy / Edit ← Channel Table Settings

Saves the table under its specified name in the xml-format. If you edit a channel table and want to keep the original channel table, change the name of the edited channel table before saving it.

Delete ← Channel Table Settings

Deletes the selected channel table. The currently active channel table cannot be deleted.

Result Settings

This softkey opens the "Result Settings" dialog box

The screenshot shows the "Result Settings" dialog box with the following configuration:

- Common Settings:**
 - Slot Number: 0
 - Channel(Code) Number: 1.16
 - Code Power: Absolute Relative
 - Normalize: On Off
- Channel Table Settings:**
 - Ch. Table Sort Order: Code Midamble
- DwPTS Analysis:**
 - Show DwPTS Results: On Off

A "Close" button is located at the bottom right of the dialog.

Slot Number ← Result Settings

Selects the slot number for further evaluation. In result displays that evaluate specific slot, the currently selected slot is highlighted red.

The number of measured slots depends on the [IQ-Capture Settings](#) defined in the IQ Capture Settings dialog box. Therefore the range is (0 to Capture Length-1).

Remote command:

CDP:SLOT 6

Channel (Code) Number ← Result Settings

Selects the channel or code number for further evaluation. In result displays that evaluate specific channels, the currently selected channel is highlighted red.

The number of codes depends on the spreading factor. Therefore it is between 1 and 16.

Remote command:

[\[SENSe:\]CDPower:SLOT](#) on page 200

Code Power ← Result Settings

Selects the y-axis scaling for the Code Domain Power result display.

- Absolute scaling shows the code power in dBm.
- Relative scaling shows the code power in dB.

Remote command:

[CALCulate<n>:FEED](#) on page 136

Normalize ← Result Settings

Activate this parameter to eliminate the DC offset from the signal. By default, the parameter is deactivated.

Remote command:

[\[SENSe:\]CDPower:NORMalize](#) on page 198

Channel Table Sort Order ← Result Settings

You can sort channels in the Channel Table result display in two ways:


- Code Order: first, all midambles are listed, then all control channels and last all data channels.
- Midamble Order: allocates all control and data channels to the midambles they belong to and then sorts the midambles in ascending order.

Remote command:

[CONFigure:CDPower\[:BTS\]:CTABLE:ORDer](#) on page 186

Display Configuration

This softkey opens the "Display Config" dialog box to select the result display. In the Code Domain Analyzer, the results are displayed in up to four screens. Any result can be displayed in either screen.

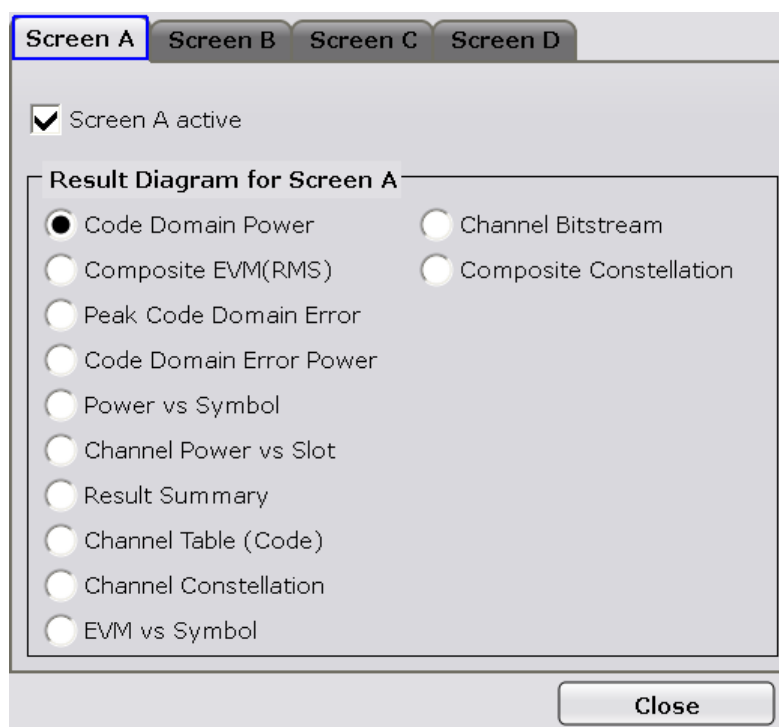

The dialog box contains the following elements:


| Item | Description |
|-----------------------------------|--|
| Screen A/B/C/D tab | Choose the screen to be configured. |
| Screen A/B/C/D active | Activate or deactivate one of the four available measurement screens via this check box. The size of the screens depends on the number of active screens. For example, if four screens are active, each screen takes up a quarter of the display size. |
| Result diagram for Screen A/B/C/D | Choose the result diagram for each screen. Find a short description of each result display below. |
| Screen Focus | The currently active screen is indicated by a blue frame. Trace and marker settings can only be changed for the active screen. Changing the focus and screen size is just like in the base unit |

Code Domain Power ← Display Configuration

Starts the Code Domain Power (CDP) result display. By default the scaling is relative. This result display determines the power of all codes of a specific channel and plots it in a diagram. The x-axis represents the code number. The number of codes depends on the channel type. Each bar in the diagram represents one code, up to a maximum of 16 (the maximum spreading factor). Codes are always sorted in ascending order and projected to a spreading factor of 16.

The y-axis is a logarithmic level axis that shows the power of each code.

The measurement evaluates the total signal of a specific channel over a single slot. Configure this result display via the [Result Settings](#) dialog box.

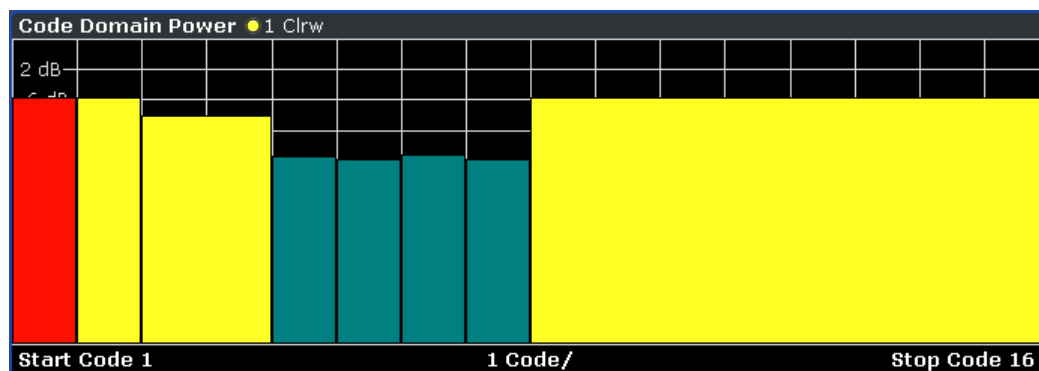

The power values of the active and inactive channels are displayed in different colors:

- Yellow: active channel
- Cyan: inactive channel
- Red: selected channel; if a channel is made up of more than one code, all codes that belong to the channel turn red.

When working with predefined channel tables, every code is regarded as active.

It is possible to select more detailed result displays for inactive codes, but the results for these are not valid.

Remote command:

[CALCulate<n>:FEED](#) on page 136

[CALCulate<n>:FEED](#) on page 136


Composite EVM ← Display Configuration

Starts the Composite EVM (Error Vector Magnitude) result display.

This result display is for measuring the modulation accuracy. It determines the error vector magnitude (EVM) over the total signal. The EVM is the root of the ratio of the mean error power to the power of an ideally generated reference signal. To calculate the mean error power, the root mean square average (of the real and imaginary parts of the signal) is used. The EVM is shown in %.

The diagram consists of a composite EVM for each captured slot.

The measurement evaluates the total signal over the entire period of observation. The selected slot turns red.

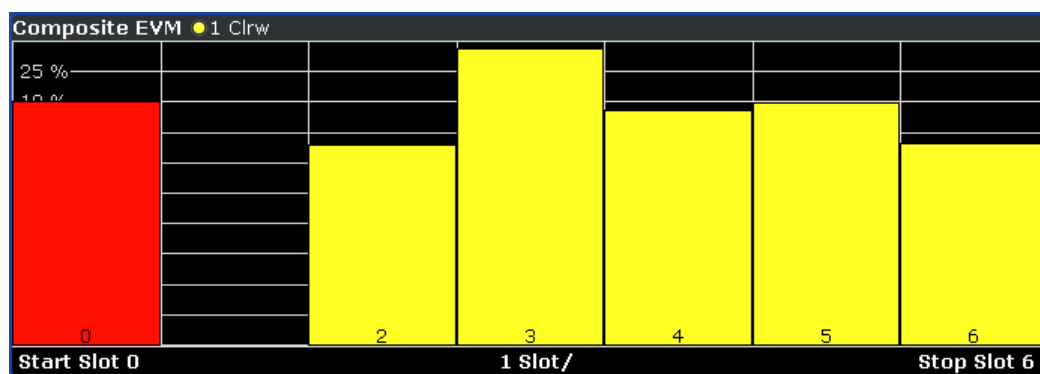

Only the channels detected as being active are used to generate the ideal reference signal. If a channel is not detected as being active, e.g. on account of low power, the difference between the test signal and the reference signal and therefore the composite EVM is very large.

Distortions also occur if unassigned codes are wrongly given the status of "active channel". To obtain reliable measurement results, select an adequate channel threshold.


Remote command:

`CALCulate<n>:FEED` on page 136

Peak Code Domain Error ← Display Configuration

Starts the Peak Code Domain Error result display. The Peak Code Domain Error is defined as the maximum value for the Code Domain Error for all codes. That means that in this result display the "Code Domain Error" on page 31 is projected onto the code domain at a specific base spreading factor. In the diagram, each bar of the x-axis represents one captured slot. The selected slot turns red. The y-axis represents the error power.

The measurement evaluates the total signal over the entire period of observation. The currently selected slot turns red.

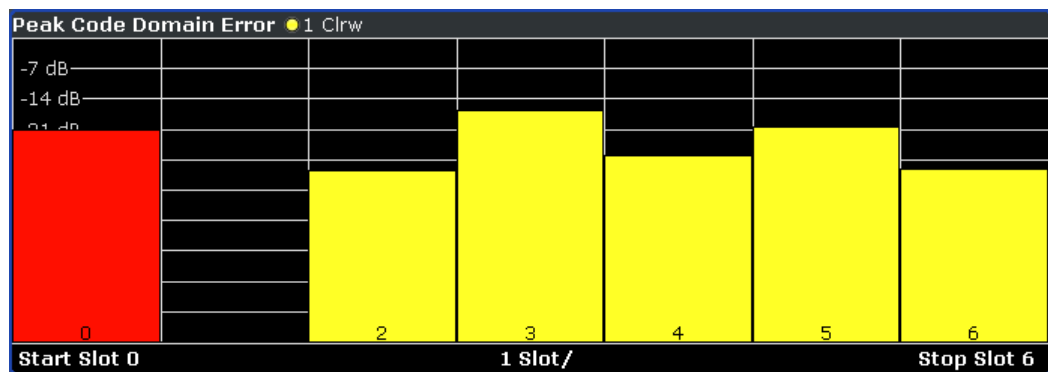

Only the channels detected as being active are used to generate the ideal reference signal. If a channel is not detected as being active, e.g. on account of low power, the difference between the test signal and the reference signal is very large. The result display therefore shows a peak code domain error that is too high for all slots. Distortions also occur if unassigned codes are wrongly given the status of "active channel". To obtain reliable measurement results, select an adequate channel threshold.

Remote command:


`CALCulate<n>:FEED` on page 136

Code Domain Error ← Display Configuration

Starts the Code Domain Error Power result display.

This result display shows the difference in power of the test signal and an ideally generated reference signal. In the diagram, the codes are plotted on the x-axis. The number of codes corresponds to the base spreading factor. The y-axis is a logarithmic level axis that shows the error power for each code. Since it is an error power, active and inactive channels can be rated jointly at a glance.

The measurement evaluates the total signal over a single slot.

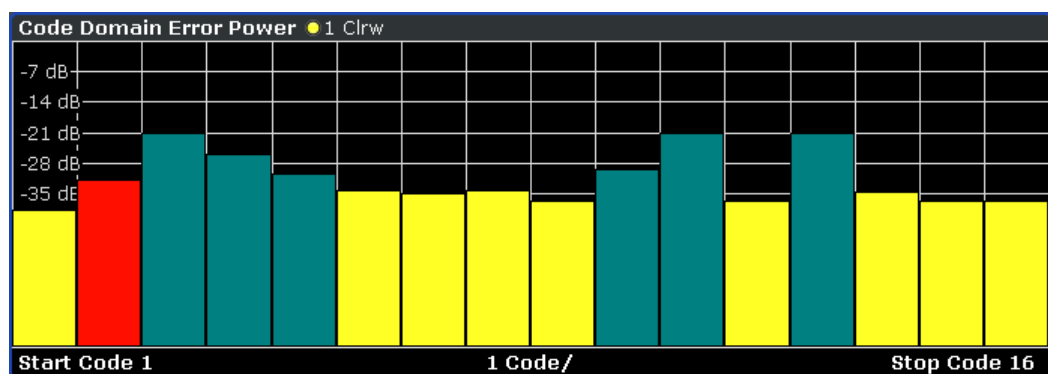

The power values of the active and inactive channels are displayed in different colors:

- Yellow: active channel
- Cyan: inactive channel
- Red: selected channel; if a channel is made up of more than one code, all codes that belong to the channel turn red.

When working with predefined channel tables, every code is regarded as active.

Remote command:


`CALCulate<n>:FEED` on page 136

Power vs Symbol ← Display Configuration

Starts the Power vs Symbol result display.

This result display shows the power of a specific channel on symbol level. The number of symbols on the x-axis depends on the spreading factor.

The measurement evaluates a single channel over a single slot.

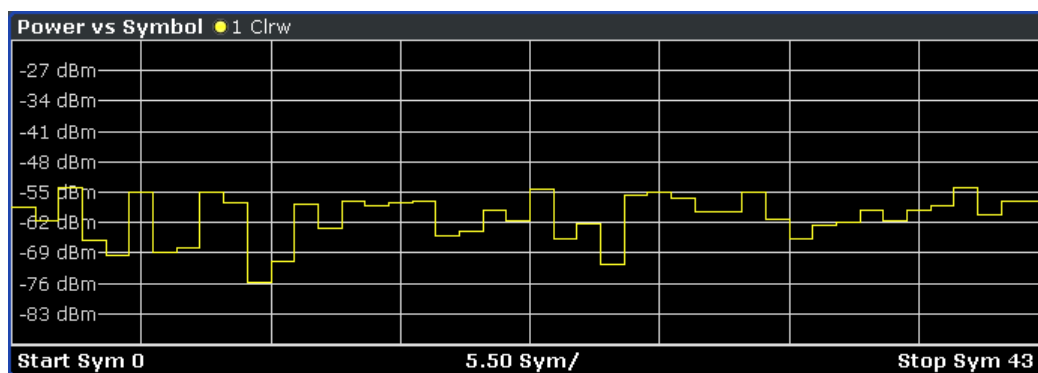

Remote command:


`CALCulate<n>:FEED` on page 136

Channel Power vs Slot ← Display Configuration

Starts the Channel Power vs Slot result display.

This result display shows the average power of a specific channel over all captured slots. The scaling is either relative or absolute. Therefore, the unit of the y-axis is either dBm or dB. By default, the display is relative to the mean total power of the data parts of the slot. Each bar on the x-axis represents one of the captured slots.

The measurement evaluates a single channel over all slots. The currently selected slot turns red.

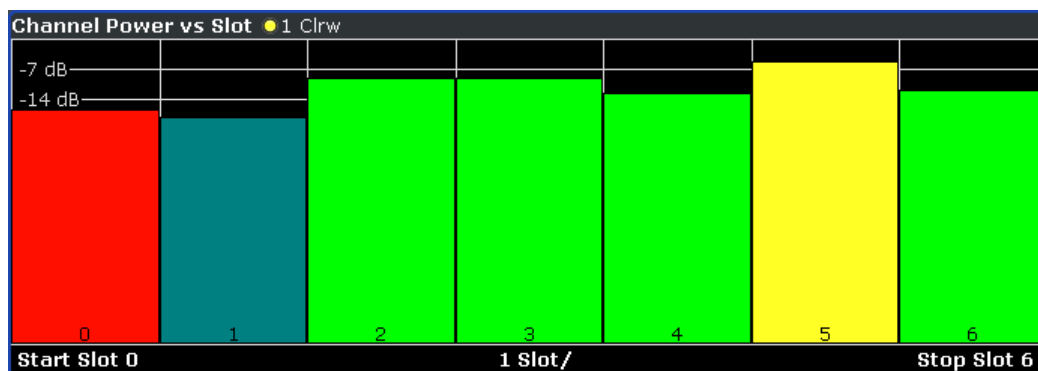

The power values of the active and inactive channels are displayed in different colors:

- Yellow: active channel
- Cyan: inactive channel
- Green: channel with alias power

- Red: selected channel; if a channel is made up of more than one code, all codes that belong to the channel turn red.

Alias power results from channels with a different code class.

When working with predefined channel tables, every code is regarded as active.

Remote command:

[CALCulate<n>:FEED](#) on page 136

Result Summary ← Display Configuration

The Result Summary shows the data of various measurements in numerical form.

| Result Summary (Set : 1) ● 1 Clrw | | | |
|-----------------------------------|--------------------|-------------------------|-------------|
| Chip Rate Error | -0.13 ppm | Trigger To Frame | --,-- |
| Slot Result (Slot : 0) | | | |
| P Data | -28.89 dBm | Carrier Frequency Error | 3.39 Hz |
| P D1/D2 | -28.89dBm/-28.88dB | IQ Imbalance/Offset | 0.46%/2.23% |
| P Midamble | -30.15 dBm | Rho | 0.96761 |
| Average RCDE | -19.47 dB | Composite EVM | 18.30 % |
| Active Channels | 10 | Pk CDE (SF 16) | -21.03 dB |
| Channel Result (Channel 2.16) | | | |
| Channel.SF | 2.16 | Data Rate | 17.6 ksps |
| Channel Pwr Abs/Rel | -45.28dBm/-16.40dB | Modulation Type | QPSK |
| Symbol EVM | 16.72 % rms | Symbol EVM | 27.40 % Pk |

Remote command:

[CALCulate<n>:FEED](#) on page 136

[CALCulate<n>:FEED](#) on page 136

Result Summary (Set: #) ← Result Summary ← Display Configuration

The Result Summary shows results measured over the total signal or a selected set.

- **Chip Rate Error**

Shows the chip rate error (1.28 Mcps) in ppm. A large chip rate error results in symbol errors and, therefore, in possible synchronization errors for code domain measurements. This measurement result is also valid if the R&S FSVR could not synchronize to the TD-SCDMA signal.

- **Trigger to Frame**

Reflects the time offset from the beginning of the recorded signal section to the start of the first slot. In case of triggered data recording, this corresponds to the timing offset:

frame trigger (+ trigger offset) - start of first PCG

If it was not possible to synchronize the R&S FSVR to the TD-SCDMA signal, this measurement result is meaningless. For the "Free Run" trigger mode, dashes are displayed.

Slot Result (Slot: #) ← Result Summary ← Display Configuration

The Slot Results show results measured over all channels and one specific slot.

- **P Data**

Shows the average power of the slot's data parts.

- **P D1/D2**

Shows the power for each of the slot's data parts.

- **P Midamble**

Shows the power for the slot's midamble.

- **Average RCDE**
Shows the average RCDE (Relative Code Domain Error). The Average RCDE is calculated according to release 8 of the standard.
- **Active Channels**
Shows the number of active channels in the slot.
- **Carrier Frequency Error**
Shows the frequency error referred to the center frequency of the R&S FSVR. The absolute frequency error is the sum of the frequency error of the R&S FSV and that of the device under test.
Frequency differences between the transmitter and receiver of more than 1.0 kHz impair synchronization of the Code Domain Power measurement. If at all possible, the transmitter and the receiver should be synchronized.
- **IQ Imbalance / Offset**
Shows the IQ imbalance and the DC offset of the signal in %.
- **Rho**
Shows the quality parameter Rho. According to the TD-SCDMA standard, Rho is the normalized, correlated power between the measured and the ideally generated reference signal. When Rho is measured, the TD-SCDMA standard requires that only the pilot channel be supplied.
- **Composite EVM**
Shows the [Composite EVM](#) of the signal. The Composite EVM is the difference between the test signal and an ideal reference signal.
- **Pk CDE (SF16)**
Shows the "[Peak Code Domain Error](#)" on page 30 of the signal for a spreading factor of 16.

Channel Result (Channel: #) ← Result Summary ← Display Configuration

The Channel Results show results measured over a specific channel in a specific slot.

- **Channel.SF**
Shows the number of the channel and its spreading factor.
- **Channel Pwr. Abs/Rel**
Shows the absolute and the relative powers of the channel.
The relative channel power is in relation to the total power of the data parts of the signal.
- **Symbol EVM**
Shows the channel's peak and average Error Vector Magnitude.
- **Data Rate**
Shows the data rate of the channel.
- **Modulation Type**
Shows the modulation type of the channel.

Channel Table ← Display Configuration

Starts the Channel Table result display.

This result display shows all channels of the signal. The sorting of the channels depends on the [Result Settings](#).

- Sorting by code means that the midambles are listed first, followed by the active data channels. Inactive channels are listed at the end of the table.

The R&S FSVR sorts midambles according to their midamble shifts. Active and inactive channels are projected to a SF of 16 and sorted according to their code numbers.

- Sorting by midamble means that after each midamble, the corresponding code is listed. The R&S FSVR automatically distinguishes between common and default midamble allocation. The allocation of code to midamble is specified in the TD-SCDMA standard.

If neither a common nor a default midamble allocation is found, sorting is in code order.

The measurement evaluates the total signal over a single slot.

| Channel Type | Walsh Ch.SF | DataRate /ksp | Mod | Power /dBm | Power /dB | MA. shift | Δ MiD1 /dB | Δ MiD2 /dB |
|--------------|-------------|---------------|------|------------|-----------|-----------|-------------------|-------------------|
| Midamble | -, | --- | ---- | -55.85 | -25.94 | 1 | -106.5 | -106.5 |
| Midamble | -, | --- | ---- | -60.90 | -30.99 | 2 | -106.5 | -106.5 |
| Midamble | -, | --- | ---- | -59.15 | -29.24 | 3 | -106.5 | -106.5 |
| DPCH | 1.16 | 17.6 | QPSK | -35.27 | -5.36 | --- | --- | --- |
| DPCH | 2.16 | 17.6 | QPSK | -35.25 | -5.35 | --- | --- | --- |
| DPCH | 2.8 | 35.2 | QPSK | -40.30 | -10.39 | --- | --- | --- |
| DPCH | 2.2 | 140.8 | QPSK | -35.20 | -5.29 | --- | --- | --- |
| --- | 5.16 | --- | ---- | -50.95 | -21.04 | --- | --- | --- |
| --- | 6.16 | --- | ---- | -51.60 | -21.69 | --- | --- | --- |

For the Code Domain Power measurement, the following parameters are determined for the channels:

- **Channel Type**
Shows the channel type.
- **Walsh.SF**
Channel number including the spreading factor (in the form <Channel>.<SF>).
- **Data Rate/kbps**
Data rate with which the channel is transmitted. The data rate is between 17.6 kbps and 281.6 kbps for QPSK modulation and between 26.4 and 422.4 kbps for 8PSK modulation.
- **Mod**
Shows the modulation type (QPSK, 8PSK, 16QAM or 64QAM).
- **Power/dBm**
Shows the absolute channel power.
- **Power/dB**
Shows the relative channel power. The relative channel power is in relation to the total power of the data parts of the signal.
- **MA.Shift**
Shows the midamble shift. For code channels, this is the shift of the associated midamble if a common or default midamble allocation is detected.

The TD-SCDMA specifications require that the midamble and its code channels must have the same power. The following two parameters show if a common or default midamble allocation is detected.

- **Δ MiD1/dB**
Shows the power offset of the midamble and the sum power of its channels in data part 1.
- **Δ MiD2/dB**

Shows the power offset of the midamble and the sum power of its channels in data part 2.

Inactive channels are marked with dashes in the "Channel Type", "DataRate" and "Modulation" columns. When working with predefined channel tables, every code is regarded as active.

Remote command:


`CALCulate<n>:FEED` on page 136

Channel Constellation ← Display Configuration

Starts the Channel Constellation result display.

This result display shows the channel constellation of the modulated signal at symbol level.

The measurement evaluates a single channel over a single slot.

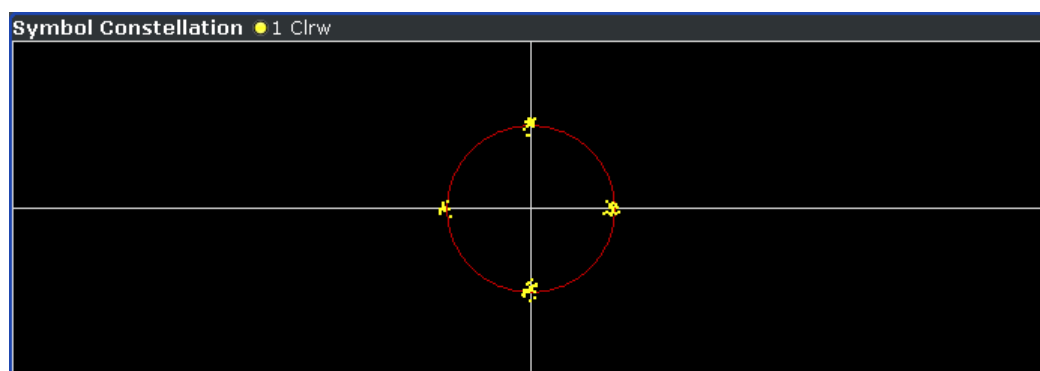

The R&S FSV-K76 supports QPSK, 8PSK, 16QAM and 64QAM modulation types.


Remote command:

`CALCulate<n>:FEED` on page 136

EVM vs Symbol ← Display Configuration

Starts the Symbol Error Vector Magnitude result display. This result display shows the EVM on symbol level. The x-axis represents the symbols and the y-axis shows the EVM in %.

The measurement evaluates a single channel over a single slot.

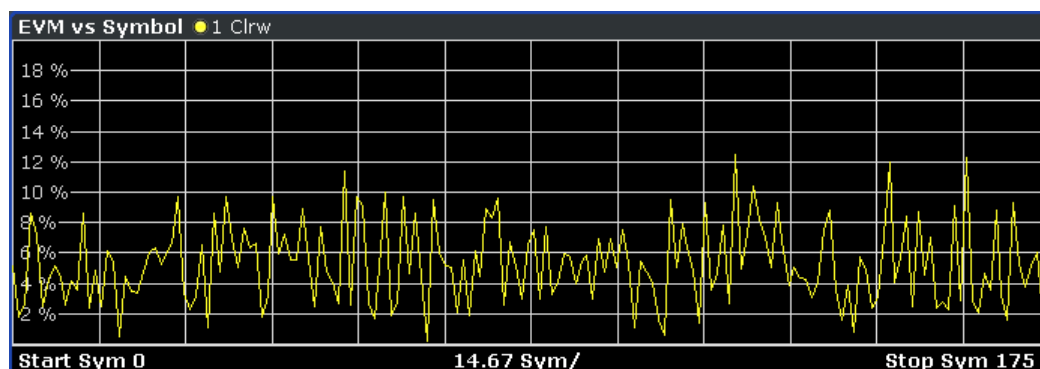

The number of symbols is in the range from 44 to 704 and depends on the spreading factor.

Inactive channels can be measured, but the result is meaningless since these channels do not contain data.

Remote command:

`CALCulate<n>:FEED` on page 136

Channel Bitstream ← Display Configuration

Starts the Channel Bitstream result display.

The result display provides information on the demodulated bits. All bits that are part of inactive channels are marked as being invalid by means of dashes. For 64QAM modulation '----' is displayed, for 16QAM modulation '---', for 8PSK '--' and for QPSK '-'.

The measurement evaluates a single channel over a single slot.

| Bitstream Table ● 1 Clrw | | | | | | | | | | | | | | | | |
|--------------------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| | 0 | 2 | 4 | 6 | 8 | 10 | 12 | 14 | 16 | 18 | 20 | 22 | 24 | 26 | 28 | 30 |
| 0 | 00 | 11 | 01 | 01 | 11 | 11 | 11 | 01 | 01 | 10 | 11 | 11 | 00 | 00 | 01 | 10 |
| 32 | 01 | 11 | 10 | 11 | 10 | 11 | 00 | 01 | 10 | 10 | 11 | 11 | 01 | 01 | 01 | 01 |
| 64 | 01 | 10 | 00 | 11 | 01 | 01 | 00 | 00 | 01 | 01 | 00 | 10 | 11 | 01 | 11 | 10 |
| 96 | 01 | 00 | 11 | 01 | 00 | 00 | 01 | 10 | 11 | 11 | 11 | 11 | 11 | 10 | 00 | 11 |
| 128 | 10 | 01 | 01 | 01 | 00 | 11 | 00 | 00 | 01 | 00 | 10 | 00 | 10 | 11 | 00 | 11 |
| 160 | 00 | 10 | 00 | 11 | 11 | 00 | 01 | 10 | 00 | 10 | 10 | 00 | 10 | 10 | 10 | 01 |
| 192 | 01 | 00 | 11 | 10 | 10 | 10 | 10 | 00 | 11 | 10 | 10 | 00 | 01 | 11 | 11 | 10 |
| 224 | 00 | 00 | 01 | 00 | 01 | 11 | 00 | 11 | 01 | 11 | 00 | 00 | 11 | 01 | 11 | 10 |
| 256 | 11 | 00 | 10 | 01 | 01 | 01 | 01 | 00 | 11 | 00 | 01 | 01 | 10 | 00 | 01 | 10 |
| 288 | 10 | 11 | 11 | 10 | 11 | 01 | 00 | 11 | 00 | 11 | 10 | 01 | 10 | 10 | 10 | 11 |

Select a specific symbol using the MKR key. If you enter a number, the marker jumps to the selected symbol. If there are more symbols than the screen is capable of displaying, use the marker to scroll inside the list.

Depending on the spreading factor (symbol rate) of the channel, a slot may contain a minimum of 44 and a maximum of 704 symbols. In case of an active transmit diversity (Antenna Diversity) the values reduce to the half. Depending on the modulation type, a symbol consists of the following bits:

- QPSK: 2bits
- 8PSK: 3 bits
- 16QAM: 4 bits
- 64QAM: 6 bits

Remote command:

`CALCulate<n>:FEED` on page 136

Composite Constellation ← Display Configuration

Starts the Composite Constellation result display.

This result display shows the constellation of the modulated signal at chip level. For each of the **1536 chips**, a constellation point is displayed in the diagram.


The measurement evaluates the total signal over a single slot.

Remote command:

`CALCulate<n>:FEED` on page 136

Mag Error vs Chip ← Display Configuration

Activates the Magnitude Error versus chip display. The magnitude error is displayed for all chips of the selected PCG. The magnitude error is calculated by the difference of the magnitude of received signal and magnitude of reference signal. The reference signal is estimated from the channel configuration of all active channels. The magnitude error is related to the square root of the mean power of reference signal and given in percent.

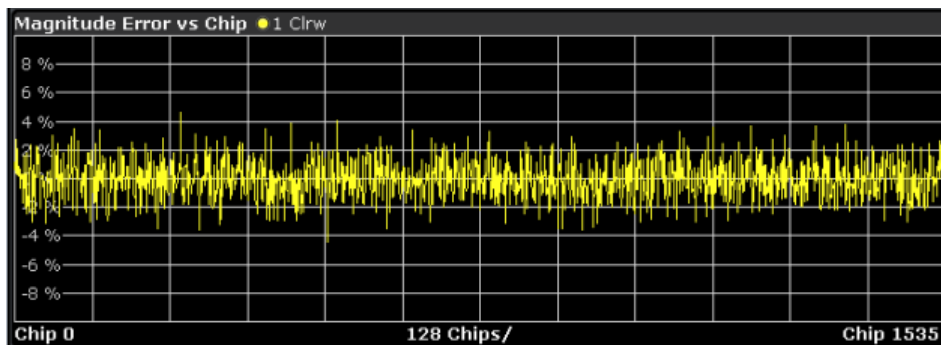


Remote command:

[CALCulate<n>:FEED](#) on page 136

Phase Error vs Chip ← Display Configuration

Activates the phase error versus chip display. The phase error is displayed for all chips of the selected PCG. The phase error is calculated by the difference of the phase of received signal and phase of reference signal. The reference signal is estimated from the channel configuration of all active channels. The phase error is given in degrees in a range of $+180^\circ$ to -180° .

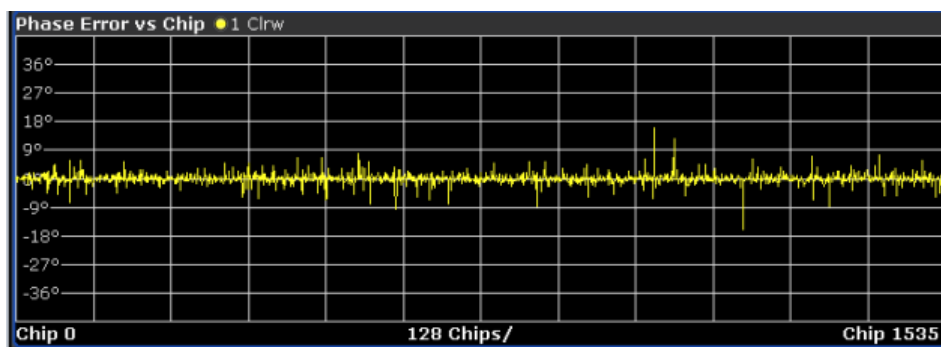


Remote command:

[CALCulate<n>:FEED](#) on page 136

Symbol Magnitude Error ← Display Configuration

The "Symbol Magnitude Error" is calculated analogous to symbol EVM. The result of calculation is one symbol magnitude error value for each symbol of the PCG of a special channel. Positive values of symbol magnitude error indicate a symbol magnitude that is larger than the expected ideal value; negative symbol magnitude errors indicate a symbol magnitude that is less than the ideal one. The symbol magnitude error is the difference of the magnitude of the received symbol and that of the reference symbol, related to the magnitude of the reference symbol.

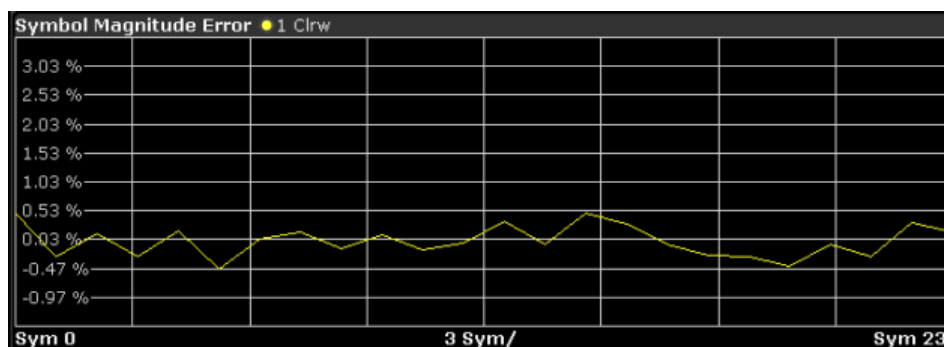


Remote command:

`CALCulate<n>:FEED` on page 136

Symbol Phase Error ← Display Configuration

The "Symbol Phase Error" is calculated analogously to symbol EVM. The result of calculation is one symbol phase error value for each symbol of the PCG of a special channel. Positive values of symbol phase error indicate a symbol phase that is larger than the expected ideal value; negative symbol phase errors indicate a symbol phase that is less than the ideal one.

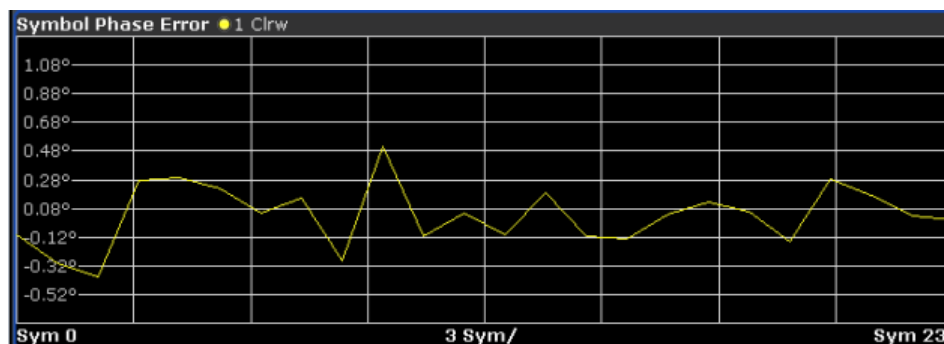

Remote command:

`CALCulate<n>:FEED` on page 136

Select Ch Slot

Opens a dialog box to select a specific channel and / or slot. The results of that channel / slot are then shown in the result display.

Adjust Ref Lvl

Adjusts the reference level to the measured channel power. This ensures that the settings of the RF attenuation and the reference level are optimally adjusted to the signal level without overloading the R&S FSVR or limiting the dynamic range by a too small S/N ratio.

For details on manual settings see "Settings of CP/ACLR test parameters" in the description of the base unit.

The reference level is not influenced by the selection of a standard. To achieve an optimum dynamic range, the reference level has to be set in a way that places the signal maximum close to the reference level without forcing an overload message. Since the measurement bandwidth for channel power measurements is significantly lower than the signal bandwidth, the signal path may be overloaded although the trace is still significantly below the reference level.

Remote command:

[SENSe:] POWer:ACHannel:PRESet:RLEVel on page 230

3.1.1.2 Softkeys of the Frequency Menu

The following chapter describes all softkeys available in the "Frequency" menu of the TD-SCDMA BTS and UE Measurement Application. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

This menu contains the following softkeys:

| | |
|-----------------------|----|
| Center..... | 40 |
| Center Stepsize..... | 40 |
| Frequency Offset..... | 40 |

Center

Opens an edit dialog box to enter the center frequency. The allowed range of values for the center frequency depends on the frequency span.

span > 0: $\text{span}_{\min}/2 \leq f_{\text{center}} \leq f_{\max} - \text{span}_{\min}/2$

span = 0: $0 \text{ Hz} \leq f_{\text{center}} \leq f_{\max}$

f_{\max} and span_{\min} are specified in the data sheet.

Remote command:

[SENSe:] FREQuency:CENTer on page 221

Center Stepsize

This softkey is identical to the "Manual" on page 88 softkey for RF measurements.

This softkey is available for code domain and power vs time measurements.

Frequency Offset

Opens an edit dialog box to enter a frequency offset that shifts the displayed frequency range by the specified offset.

The softkey indicates the current frequency offset. The allowed values range from -100 GHz to 100 GHz. The default setting is 0 Hz.

Remote command:

[SENSe:] FREQuency:OFFSet on page 222

3.1.1.3 Softkeys of the Amplitude Menu

The following table shows all softkeys available in the "Amplitude" menu of the TD-SCDMA BTS and UE measurement applications for CDA and Power vs Time measurements. (Note: The softkeys in the "Amplitude" menu for other RF measurements are described in [chapter 3.2.7.4, "Softkeys of the Amplitude Menu for RF Measurements"](#), on page 90.)

This menu contains the following softkeys:

Ref Level

Opens an edit dialog box to enter the reference level in the current unit (dBm, dBμV, etc).

The reference level is the maximum value the AD converter can handle without distortion of the measured value. Signal levels above this value will not be measured correctly, which is indicated by the "IFOVL" status display.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel` on page 193

Scale

Opens a submenu with the following softkeys:

This softkey and its submenu is available for code domain and Power vs Time measurements.

Auto Scale Once ← Scale

Automatically scales the y-axis of the grid of the selected screen with respect to the measured data.

The softkey is available for code domain measurements.

Remote command:

`DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:AUTO` on page 191

Y-Axis Maximum ← Scale

Opens a dialog box to set the maximum value for the y-axis of the grid of the selected screen.

The softkey is available for code domain measurements.

Remote command:

`DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:MAXimum` on page 192

Y-Axis Minimum ← Scale

Opens a dialog box to set the minimum value for the y-axis of the grid of the selected screen.

The softkey is available for code domain measurements.

Remote command:

`DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:MINimum` on page 192

Ref Level Offset

Opens an edit dialog box to enter the arithmetic level offset. This offset is added to the measured level irrespective of the selected unit. The scaling of the y-axis is changed accordingly. The setting range is ± 200 dB in 0.1 dB steps.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet` on page 194

Preamp On/Off

Switches the preamplifier on and off.

If option R&S FSV-B22 is installed, the preamplifier is only active below 7 GHz.

If option R&S FSV-B24 is installed, the preamplifier is active for all frequencies.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:

`INPut:GAIN:STATe` on page 254

RF Atten Manual/Mech Att Manual

Opens an edit dialog box to enter the attenuation, irrespective of the reference level. If electronic attenuation is activated (option R&S FSV-B25 only; "EI Atten Mode Auto" softkey), this setting defines the mechanical attenuation.

The mechanical attenuation can be set in 10 dB steps.

The RF attenuation can be set in 5 dB steps (with option R&S FSV-B25: 1 dB steps).

The range is specified in the data sheet. If the current reference level cannot be set for the set RF attenuation, the reference level is adjusted accordingly.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

The RF attenuation defines the level at the input mixer according to the formula:

$$\text{level}_{\text{mixer}} = \text{level}_{\text{input}} - \text{RF attenuation}$$

Note: As of firmware version 1.63, the maximum mixer level allowed is **0 dBm**. Mixer levels above this value may lead to incorrect measurement results, which are indicated by the "OVL" status display. The increased mixer level allows for an improved signal, but also increases the risk of overloading the instrument!

Remote command:

`INPut:ATTenuation` on page 248

RF Atten Auto/Mech Att Auto

Sets the RF attenuation automatically as a function of the selected reference level.

This ensures that the optimum RF attenuation is always used. It is the default setting.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:

`INPut:ATTenuation:AUTO` on page 248

EI Atten On/Off

This softkey switches the electronic attenuator on or off. This softkey is only available with option R&S FSV-B25.

When the electronic attenuator is activated, the mechanical and electronic attenuation can be defined separately. Note however, that both parts must be defined in the same mode, i.e. either both manually, or both automatically.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

- To define the mechanical attenuation, use the [RF Atten Manual/Mech Att Manual](#) or [RF Atten Auto/Mech Att Auto](#) softkeys.
- To define the electronic attenuation, use the [EI Atten Mode \(Auto/Man\)](#) softkey.

Note: This function is not available for stop frequencies (or center frequencies in zero span) >7 GHz. In this case, the electronic and mechanical attenuation are summarized and the electronic attenuation can no longer be defined individually. As soon as the stop or center frequency is reduced below 7 GHz, this function is available again. When the electronic attenuator is switched off, the corresponding RF attenuation mode (auto/manual) is automatically activated.

Remote command:

[INPut:EATT:AUTO](#) on page 253

EI Atten Mode (Auto/Man)

This softkey defines whether the electronic attenuator value is to be set automatically or manually. If manual mode is selected, an edit dialog box is opened to enter the value. This softkey is only available with option R&S FSV-B25, and only if the electronic attenuator has been activated via the [EI Atten On/Off](#) softkey.

Note: This function is not available for stop frequencies (or center frequencies in zero span) >7 GHz. In this case, the electronic and mechanical attenuation are summarized and the electronic attenuation can no longer be defined individually. As soon as the stop or center frequency is reduced below 7 GHz, electronic attenuation is available again. If the electronic attenuation was defined manually, it must be re-defined.

The attenuation can be varied in 1 dB steps from 0 to 30 dB. Other entries are rounded to the next lower integer value.

To re-open the edit dialog box for manual value definition, select the "Man" mode again.

If the defined reference level cannot be set for the given RF attenuation, the reference level is adjusted accordingly and the warning "Limit reached" is output.

Remote command:

[INPut:EATT:AUTO](#) on page 253

[INPut:EATT](#) on page 253

Input (AC/DC)

Toggles the RF input of the R&S FSVR between AC and DC coupling.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:

[INPut:COUPling](#) on page 249

3.1.1.4 Softkeys of the Auto Set Menu

The following chapter describes all softkeys available in the "Auto Set" menu of the TD-SCDMA BTS and UE Measurement Applications for CDA measurements.

For RF measurements, see the description for the base unit.

Auto All

Performs all automatic settings.

- "Auto Freq" on page 44
- "Auto Level" on page 44

Remote command:

[SENSe:]ADJust:ALL on page 203

Auto Freq

Defines the center frequency and the reference level automatically by determining the highest frequency level in the frequency span. This function uses the signal counter; thus it is intended for use with sinusoidal signals.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:

[SENSe:]ADJust:FREQuency on page 205

Auto Level

Defines the optimal reference level for the current measurement automatically.

The measurement time for automatic leveling can be defined using the [Settings](#) softkey.

Remote command:

[SENSe:]ADJust:LEVel on page 205

Settings

Opens a submenu to define settings for automatic leveling.

Possible settings are:

- "Meas Time Manual" on page 44
- "Meas Time Auto" on page 44

Meas Time Manual ← Settings

Opens an edit dialog box to enter the duration of the level measurement in seconds.

The level measurement is used to determine the optimal reference level automatically (see the "Auto Level" softkey, "Auto Level" on page 44). The default value is 1 ms.

Remote command:

[SENSe:]ADJust:CONFigure:LEVel:DURation on page 204

Meas Time Auto ← Settings

The level measurement is used to determine the optimal reference level automatically (see the [Auto Level](#) softkey).

This softkey resets the level measurement duration for automatic leveling to the default value of 100 ms.

Upper Level Hysteresis ← Settings

Defines an upper threshold the signal must exceed before the reference level is automatically adjusted when the "Auto Level" function is performed.

Remote command:

[SENSe:]ADJust:CONFIguration:HYSTeresis:UPPer on page 204

Lower Level Hysteresis ← Settings

Defines a lower threshold the signal must exceed before the reference level is automatically adjusted when the "Auto Level" function is performed.

Remote command:

[SENSe:]ADJust:CONFIguration:HYSTeresis:LOWer on page 203

3.1.1.5 Softkeys of the Sweep Menu

The following table shows all softkeys available in the "Sweep" menu of the TD-SCDMA BTS and UE Measurement Application for CDA measurements. For all other measurements, the softkeys are described in [chapter 3.2.7.6, "Softkeys of the Sweep Menu"](#), on page 102.

| | |
|----------------------------|----|
| Continuous Sweep..... | 45 |
| Single Sweep..... | 45 |
| Continue Single Sweep..... | 45 |
| Sweep Count..... | 46 |

Continuous Sweep

Sets the continuous sweep mode: the sweep takes place continuously according to the trigger settings. This is the default setting.

The trace averaging is determined by the sweep count value (see the "Sweep Count" softkey, "[Sweep Count](#)" on page 46).

Remote command:

INIT:CONT ON, see [INITiate<n>:CONTinuous](#) on page 260

Single Sweep

Sets the single sweep mode: after triggering, starts the number of sweeps that are defined by using the [Sweep Count](#) softkey. The measurement stops after the defined number of sweeps has been performed.

Remote command:

INIT:CONT OFF, see [INITiate<n>:CONTinuous](#) on page 260

Continue Single Sweep

Repeats the number of sweeps set by using the [Sweep Count](#) softkey, without deleting the trace of the last measurement.

This is particularly of interest when using the trace configurations "Average" or "Max Hold" to take previously recorded measurements into account for averaging/maximum search.

Remote command:

`INITiate<n>:CONMeas` on page 259

Sweep Count

Opens an edit dialog box to enter the number of sweeps to be performed in the single sweep mode. Values from 0 to 32767 are allowed. If the values 0 or 1 are set, one sweep is performed. The sweep count is applied to all the traces in a diagram.

If the trace configurations "Average", "Max Hold" or "Min Hold" are set, the sweep count value also determines the number of averaging or maximum search procedures.

In continuous sweep mode, if sweep count = 0 (default), averaging is performed over 10 sweeps. For sweep count = 1, no averaging, maxhold or minhold operations are performed.

Remote command:

`[SENSe:] SWEEp: COUNT` on page 234

3.1.1.6 Softkeys of the Trace Menu for CDA Measurements

The following list shows all softkeys available in the "Trace" menu of the "TD-SCDMA BTS" and UE measurement applications for Code Domain Analysis measurements.

For RF measurements, see the description for the base unit.

| | |
|------------------|----|
| Clear Write..... | 46 |
| Max Hold..... | 46 |
| Min Hold..... | 47 |
| Average..... | 47 |
| View..... | 47 |

Clear Write

Overwrite mode: the trace is overwritten by each sweep. This is the default setting.

All available detectors can be selected.

Remote command:

`DISP:TRAC:MODE WRIT`, see `DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 190

Max Hold

The maximum value is determined over several sweeps and displayed. The R&S FSVR saves the sweep result in the trace memory only if the new value is greater than the previous one.

The detector is automatically set to "Positive Peak".

This mode is especially useful with modulated or pulsed signals. The signal spectrum is filled up upon each sweep until all signal components are detected in a kind of envelope.

This mode is not available for statistics measurements.

Remote command:

DISP:TRAC:MODE MAXH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 190

Min Hold

The minimum value is determined from several measurements and displayed. The R&S FSVR saves the smallest of the previously stored/currently measured values in the trace memory.

The detector is automatically set to "Negative Peak".

This mode is useful e.g. for making an unmodulated carrier in a composite signal visible. Noise, interference signals or modulated signals are suppressed whereas a CW signal is recognized by its constant level.

This mode is not available for statistics measurements.

Remote command:

DISP:TRAC:MODE MINH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 190

Average

The average is formed over several sweeps. The [Sweep Count](#) determines the number of averaging procedures.

All available detectors can be selected. If the detector is automatically selected, the sample detector is used (see [chapter 3.4.1, "Detector Overview"](#), on page 111).


This mode is not available for statistics measurements.

Remote command:

DISP:TRAC:MODE AVER, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 190

View

The current contents of the trace memory are frozen and displayed.

Note: If a trace is frozen, the instrument settings, apart from level range and reference level (see below), can be changed without impact on the displayed trace. The fact that the displayed trace no longer matches the current instrument setting is indicated by the  icon on the tab label.

If the level range or reference level is changed, the R&S FSVR automatically adapts the measured data to the changed display range. This allows an amplitude zoom to be made after the measurement in order to show details of the trace.

Remote command:

DISP:TRAC:MODE VIEW, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 190

3.1.1.7 Softkeys of the Trigger Menu for CDA Measurements

The following list shows all softkeys available in the "Trigger" menu of the "TD-SCDMA BTS" and "UE" measurement applications for Code Domain Analysis measurements.

For RF measurements, see the description for the base unit.

Trigger Source Free Run

The start of a sweep is not triggered. Once a measurement is completed, another is started immediately.

This softkey is available for code domain measurements.

Remote command:

TRIG:SOUR IMM, see TRIGger<n>[:SEQuence]:SOURce on page 257

Trigger Source External

Defines triggering via a TTL signal at the "EXT TRIG/GATE IN" input connector on the rear panel.

An edit dialog box is displayed to define the external trigger level.

This softkey is available for code domain measurements.

Remote command:

TRIG:SOUR EXT, see TRIGger<n>[:SEQuence]:SOURce on page 257

Frequency Mask

Activates the frequency mask trigger and opens the dialog box to set up a frequency mask for the frequency mask trigger.

For more information see [chapter 3.3, "Working with the Frequency Mask Trigger"](#), on page 107.

Remote command:

see [chapter 4.2.3.5, "CALCulate:MASK Subsystem"](#), on page 171

Trg/Gate Polarity

Sets the polarity of the trigger/gate source.

The sweep starts after a positive or negative edge of the trigger signal. The default setting is "Pos". The setting applies to all trigger modes with the exception of the "Free Run", "Power Sensor" and "Time" mode.

This softkey is available for RF measurements.

For details also see "Using Gated Sweep Operation" in the base unit description.

"Pos" Level triggering: the sweep is stopped by the logic "0" signal and restarted by the logical "1" signal after the gate delay time has elapsed.

"Neg" Edge triggering: the sweep is continued on a "0" to "1" transition for the gate length duration after the gate delay time has elapsed.

Remote command:

TRIGger<n>[:SEQuence]:SLOPe on page 257

Trigger Offset

Opens an edit dialog box to enter the time offset between the trigger signal and the start of the sweep.

| | |
|-------------|--|
| offset > 0: | Start of the sweep is delayed |
| offset < 0: | <p>Sweep starts earlier (pre-trigger)</p> <p>Only possible for span = 0 (e.g. I/Q Analyzer mode) and gated trigger switched off</p> <p>Maximum allowed range limited by the sweep time: $\text{pretrigger}_{\text{max}} = \text{sweep time}$</p> <p>When using the R&S Digital I/Q Interface (R&S FSV-B17) with I/Q Analyzer mode, the maximum range is limited by the number of pretrigger samples.</p> <p>See the R&S Digital I/Q Interface(R&S FSV-B17) description in the base unit.</p> |

In the "External" or "IF Power" trigger mode, a common input signal is used for both trigger and gate. Therefore, changes to the gate delay will affect the trigger delay (trigger offset) as well.

Remote command:

`TRIGger<n>[:SEQuence]:HOLDoff[:TIME]` on page 256

3.1.1.8 Softkeys of the Input/Output Menu for CDA Measurements

The following chapter describes all softkeys available in the "Input/Output" menu for CDA measurements. For RF measurements, see [chapter 3.2.7.7, "Softkeys of the Input/Output Menu for RF Measurements"](#), on page 105.

| | |
|---|----|
| Input (AC/DC)..... | 49 |
| Noise Source..... | 50 |
| Signal Source..... | 50 |
| L Input Path..... | 50 |
| L Connected Device..... | 50 |
| L Input Sample Rate..... | 50 |
| L Full Scale Level..... | 50 |
| L Level Unit..... | 50 |
| L Adjust Reference Level to Full Scale Level..... | 51 |
| Digital IQ Info..... | 51 |
| EXIQ..... | 51 |
| L TX Settings..... | 51 |
| L RX Settings..... | 51 |
| L Send To..... | 52 |
| L Firmware Update..... | 52 |
| L R&S Support..... | 52 |
| L DigIConf..... | 52 |

Input (AC/DC)

Toggles the RF input of the R&S FSVR between AC and DC coupling.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:

`INPut:COUPling` on page 249

Noise Source

Switches the supply voltage for an external noise source on or off. For details on connectors refer to the R&S FSVR Quick Start Guide, "Front and Rear Panel" chapter.

Remote command:

[DIAGnostic<n>:SERvice:NSource](#) on page 258

Signal Source

Opens a dialog box to select the signal source.

For "Digital Baseband (I/Q)", the source can also be configured here.

Input Path ← Signal Source

Defines whether the "RF Radio Frequency" or the "Digital IQ" input path is used for measurements. "Digital IQ" is only available if option R&S FSV-B17 (R&S Digital I/Q Interface) is installed.

Note: Note that the input path defines the characteristics of the signal, which differ significantly between the RF input and digital input.

Remote command:

[INPut:SElect](#) on page 254

Connected Device ← Signal Source

Displays the name of the device connected to the optional R&S Digital I/Q Interface (R&S FSV-B17) to provide Digital IQ input. The device name cannot be changed here.

The device name is unknown.

Remote command:

[INPut:DIQ:CDEvice](#) on page 249

Input Sample Rate ← Signal Source

Defines the sample rate of the digital I/Q signal source. This sample rate must correspond with the sample rate provided by the connected device, e.g. a generator.

Remote command:

[INPut:DIQ:SRATe](#) on page 252

Full Scale Level ← Signal Source

The "Full Scale Level" defines the level that should correspond to an I/Q sample with the magnitude "1".

The level can be defined either in dBm or Volt.

Remote command:

[INPut:DIQ:RANGe\[:UPPer\]](#) on page 251

Level Unit ← Signal Source

Defines the unit used for the full scale level.

Remote command:

[INPut:DIQ:RANGe\[:UPPer\]:UNIT](#) on page 251

Adjust Reference Level to Full Scale Level ← Signal Source

If enabled, the reference level is adjusted to the full scale level automatically if any change occurs.

Remote command:

`INPut:DIQ:RANGe:COUPling` on page 251

Digital IQ Info

Displays a dialog box with information on the digital I/Q input and output connection via the optional R&S Digital I/Q Interface (R&S FSV-B17), if available. The information includes:

- Device identification
- Used port
- (Maximum) digital input/output sample rates and maximum digital input/output transfer rates
- Status of the connection protocol
- Status of the PRBS descewing test

For details see "Interface Status Information" in "Instrument Functions - R&S Digital I/Q Interface (Option R&S FSV-B17)" in the description of the base unit.

Remote command:

`INPut:DIQ:CDEvice` on page 249

EXIQ

Opens a configuration dialog box for an optionally connected R&S EX-IQ-BOX and a submenu to access the main settings quickly.

Note: The EX-IQ-Box functionality is not supported for R&S FSVR models 1321.3008Kxx.

If the optional R&S DigIConf software is installed, the submenu consists only of one key to access the software. **Note that R&S DigIConf requires a USB connection (not LAN!) from the R&S FSVR to the R&S EX-IQ-BOX in addition to the R&S Digital I/Q Interface connection. R&S DigIConf version 2.10 or higher is required.**

For typical applications of the R&S EX-IQ-BOX see also the description of the R&S Digital I/Q Interface (R&S FSV-B17) in the base unit manual.

For details on configuration see the "R&S®Ex I/Q Box - External Signal Interface Module Manual".

For details on installation and operation of the R&S DigIConf software, see the "R&S®EX-IQ-BOX Digital Interface Module R&S®DigIConf Software Operating Manual".

TX Settings ← EXIQ

Opens the "EX-IQ-BOX Settings" dialog box to configure the R&S FSVR for digital output to a connected device ("Transmitter" Type).

RX Settings ← EXIQ

Opens the "EX-IQ-BOX Settings" dialog box to configure the R&S FSVR for digital input from a connected device ("Receiver" Type).

Send To ← EXIQ

The configuration settings defined in the dialog box are transferred to the R&S EX-IQ-BOX.

Firmware Update ← EXIQ

If a firmware update for the R&S EX-IQ-BOX is delivered with the R&S FSVR firmware, this function is available. In this case, when you select the softkey, the firmware update is performed.

R&S Support ← EXIQ

Stores useful information for troubleshooting in case of errors.

This data is stored in the `C:\R_S\Instr\user\Support` directory on the instrument.

If you contact the Rohde&Schwarz support to get help for a certain problem, send these files to the support in order to identify and solve the problem faster.

DigIConf ← EXIQ

Starts the optional R&S DigIConf application. This softkey is only available if the optional software is installed.

To return to the R&S FSVR application, press any key on the front panel. The application is displayed with the "EXIQ" menu, regardless of which key was pressed.

For details on the R&S DigIConf application, see the "R&S®EX-IQ-BOX Digital Interface Module R&S®DigIConf Software Operating Manual".

Note: If you close the R&S DigIConf window using the "Close" icon, the window is minimized, not closed.

If you select the "File > Exit" menu item in the R&S DigIConf window, the application is closed. Note that in this case the settings are lost and the EX-IQ-BOX functionality is no longer available until you restart the application using the "DigIConf" softkey in the R&S FSVR once again.

Remote command:

Remote commands for the R&S DigIConf software always begin with `SOURce:EBOX`. Such commands are passed on from the R&S FSVR to the R&S DigIConf automatically which then configures the R&S EX-IQ-BOX via the USB connection.

All remote commands available for configuration via the R&S DigIConf software are described in the "R&S®EX-IQ-BOX Digital Interface Module R&S®DigIConf Software Operating Manual".

Example 1:

```
SOURce:EBOX:*RST
SOURce:EBOX:*IDN?
```

Result:

```
"Rohde&Schwarz,DigIConf,02.05.436 Build 47"
```

Example 2:

```
SOURce:EBOX:USER:CLOCK:REFERENCE:FREQUENCY 5MHZ
```

Defines the frequency value of the reference clock.

3.2 RF Measurements

3.2.1 Signal Channel Power

The Signal Channel Power measurement analyses the power of the RF signal. One trace shows the evaluation of a single channel with a bandwidth of 1.2288 MHz. The results are based on the root mean square.

Below the measurement screen the bandwidth and associated channel power are displayed. The other screen elements match those of the spectrum analyzer in the base unit.

The configuration of the measurement and the default settings comply to the TD-SCDMA requirements.

| Parameter | Default Value |
|-----------------------------|---------------|
| Frequency Span | 3 MHz |
| Measurement BW | 1.6 MHz |
| Number of adjacent channels | 0 |
| Adjacent Channel Power | On |

For details on the softkeys of the Signal Channel Power measurement refer to the [Power](#) softkey in the "Measurement" menu.

3.2.2 Adjacent Channel Power (CH Power ACLR)

The Adjacent Channel Power measurement analyses the power of the TX channel and the power of adjacent and alternate channels on the left and right side of the TX channel. The number of TX channels and adjacent channels can be modified as well as the band class.

Below the measurement screens the bandwidth and power of the TX channel and the bandwidth, spacing and power of the adjacent and alternate channels are displayed. The other screen elements match those of the spectrum analyzer in the base unit.

The configuration of the measurement and the default settings comply to the TD-SCDMA requirements.

| Parameter | Default Value |
|-----------------------------|---------------|
| Adjacent Channel Power | On |
| ACP Standard | TD-SCDMA |
| Number of Adjacent Channels | 2 |

For details on the softkeys of the Adjacent Channel Power measurement refer to the [Ch Power ACLR](#) softkey in the "Measurement" menu.

3.2.3 Spectrum Emission Mask

The Spectrum Emission Mask measurement shows the quality of the measured signal by comparing the power values in the frequency range near the carrier against a spectral mask that is defined by the 3GPP2 specifications. The limits depend on the selected bandclass. In this way, the performance of the DUT can be tested and the emissions and their distance to the limit be identified.

Note that the standard does not distinguish between spurious and spectral emissions.

Below the measurement screen a table showing the peak list. In the peak list the values for the worst spectral emissions are displayed including their frequency and power.

The default settings of the Spectrum Emission Mask measurement are listed in the table below.

| Parameter | Default Value |
|----------------|---------------|
| Frequency Span | 8 MHz |
| Sweep Time | 20 ms |
| Detector | RMS |

For details on the softkeys of the Spectrum Emission Mask measurement refer to the [Spectrum Emission Mask](#) softkey in the "Measurement" menu.

3.2.4 Occupied Bandwidth

The Occupied Bandwidth measurement determines the bandwidth in which the signal power can be found. By default the bandwidth is displayed in which 99% of the signal is found. The percentage of the signal power included in the measurement can be modified. In the top right corner of the screen, the bandwidth and frequency markers are displayed.

The default settings of the Occupied Bandwidth measurement are listed in the table below.

| Parameter | Default Value |
|--------------------|---------------|
| Occupied Bandwidth | ON |
| Frequency Span | 4.8 MHz |
| Sweep Time | 1.3 s |
| RBW | 30 kHz |
| VBW | 300 kHz |
| Detector | RMS |

For details on the softkeys of the Occupied Bandwidth measurement refer to the [Occupied Bandwidth](#) softkey in the "Measurement" menu.

3.2.5 Complementary Cumulative Distribution Function (CCDF)

The CCDF measurement displays the CCDF and the Crest Factor. The CCDF shows distribution of the signal amplitudes. For the measurement, a signal section of settable length is recorded continuously in a zero span. The measurement is useful to determine errors of linear amplifiers. The Crest factor is defined as the ratio of the peak power and the mean power. Beneath the measurement screen a table containing the number of included samples, mean and peak power and the Crest factor is displayed.

The default settings of the CCDF measurement are listed in the table below.

| Parameter | Default Value |
|-----------|---------------|
| CCDF | On |
| RBW | 10 MHz |
| Detector | Sample |

For details on the softkeys of the CCDF measurement refer to the [CCDF](#) softkey in the "Measurement" menu.

3.2.6 Power vs Time

The Power vs Time measurement determines the start of the subframe and compares the averaged power in time domain against a transmit On/Off mask according to the specification.

The scaling of the x-axis and therefore also the scaling of the limit line are defined by the [Switching Point](#). Below the measurement screen you can view a list of the measured data.

| Parameter | Default Value |
|------------|---------------|
| Span | Zero Span |
| Sweep Time | 2.4 ms |
| RBW | 1.28 MHz |
| VBW | 10 MHz |
| Trace Mode | Average |

For details on the softkeys of the Power vs Time measurement refer to the [Power vs Time](#) softkey in the "Measurement" menu.

3.2.7 Softkeys and Menus for RF Measurements (K76/K77)

The following chapter describes the softkeys and menus available for RF measurements in 3GPP TD-SCDMA BTS and UE Measurement Applications.

All menus not described here are the same as for the base unit, see the description there.

| | | |
|---------|--|-----|
| 3.2.7.1 | Softkeys of the Measurement Menu..... | 56 |
| 3.2.7.2 | Softkeys of the Frequency Menu..... | 86 |
| 3.2.7.3 | Softkeys of the Span Menu for RF Measurements..... | 89 |
| 3.2.7.4 | Softkeys of the Amplitude Menu for RF Measurements..... | 90 |
| 3.2.7.5 | Softkeys of the Bandwidth Menu..... | 95 |
| 3.2.7.6 | Softkeys of the Sweep Menu..... | 102 |
| 3.2.7.7 | Softkeys of the Input/Output Menu for RF Measurements..... | 105 |

3.2.7.1 Softkeys of the Measurement Menu

The TD-SCDMA BTS and UE Measurement Applications provide the various test measurements and result displays. All measurements are accessed via the MEAS key.

The following list shows all softkeys available in the "Measurement" menu of the TD-SCDMA BTS and UE Measurement Application. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.



Behaviour of the MEAS CONFIG key

The MEAS CONFIG key always returns to the root menu of the currently active measurement.

| | |
|---------------------------|----|
| Code Domain Analyzer..... | 59 |
| Power..... | 59 |
| L Adapt to Signal..... | 59 |
| L Auto Level & Time..... | 59 |
| L Start Slot..... | 59 |
| L Stop Slot..... | 59 |
| Ch Power ACLR..... | 59 |
| L CP/ACLR Settings..... | 60 |
| L # of TX Chan..... | 60 |
| L # of Adj Chan..... | 60 |
| L Channel Setup..... | 60 |
| L Bandwidth..... | 61 |
| L ACLR Reference..... | 62 |
| L Spacing..... | 62 |
| L Names..... | 63 |
| L Weighting Filter..... | 63 |

| | |
|---------------------------------|----|
| L Limits..... | 64 |
| L Limit Checking..... | 64 |
| L Relative Limit..... | 65 |
| L Absolute Limit..... | 65 |
| L Check..... | 65 |
| L Chan Pwr/Hz..... | 65 |
| L Power Mode..... | 65 |
| L Clear/Write..... | 66 |
| L Max Hold..... | 66 |
| L Select Trace..... | 66 |
| L ACLR (Abs/Rel)..... | 66 |
| L Adjust Settings..... | 66 |
| L Sweep Time..... | 66 |
| L Fast ACLR (On/Off)..... | 67 |
| L Set CP Reference..... | 67 |
| L Noise Correction..... | 68 |
| L Adapt to Signal..... | 68 |
| L Auto Level & Time..... | 68 |
| L Start Slot..... | 68 |
| L Stop Slot..... | 68 |
| Spectrum Emission Mask..... | 68 |
| L Sweep List..... | 69 |
| L Sweep List dialog box..... | 69 |
| L Range Start / Range Stop..... | 69 |
| L Fast SEM..... | 69 |
| L Filter Type..... | 70 |
| L RBW..... | 70 |
| L VBW..... | 70 |
| L Sweep Time Mode..... | 70 |
| L Sweep Time..... | 70 |
| L Ref. Level..... | 70 |
| L RF Att. Mode..... | 70 |
| L RF Attenuator..... | 71 |
| L Preamp..... | 71 |
| L Transd. Factor..... | 71 |
| L Limit Check 1-4..... | 71 |
| L Abs Limit Start..... | 71 |
| L Abs Limit Stop..... | 72 |
| L Rel Limit Start..... | 72 |
| L Rel Limit Stop..... | 72 |
| L Close Sweep List..... | 72 |
| L Insert before Range..... | 72 |
| L Insert after Range..... | 72 |
| L Delete Range..... | 73 |
| L Symmetric Setup..... | 73 |
| L Edit Reference Range..... | 73 |
| L Edit Reference Range..... | 74 |
| L Edit Power Classes..... | 75 |
| L Used Power Classes..... | 75 |
| L PMin/PMax..... | 76 |

| | |
|-------------------------------------|----|
| L Sweep List..... | 76 |
| L Add/Remove..... | 76 |
| L Load Standard..... | 76 |
| L Save As Standard..... | 77 |
| L Meas Start/Stop..... | 77 |
| L Restore Standard Files..... | 77 |
| L Adapt to Signal..... | 77 |
| L Auto Level & Time..... | 77 |
| L Start Slot..... | 77 |
| L Stop Slot..... | 77 |
| Occupied Bandwidth..... | 77 |
| L % Power Bandwidth (span > 0)..... | 78 |
| L Channel Bandwidth (span > 0)..... | 78 |
| L Adapt to Signal..... | 78 |
| L Auto Level & Time..... | 78 |
| L Start Slot..... | 78 |
| L Stop Slot..... | 78 |
| L Adjust Settings..... | 79 |
| CCDF..... | 79 |
| L Percent Marker..... | 79 |
| L Res BW..... | 79 |
| L # of Samples..... | 79 |
| L Scaling..... | 80 |
| L x-Axis Ref Level..... | 80 |
| L x-Axis Range..... | 80 |
| L Range Log 100 dB..... | 80 |
| L Range Log 50 dB..... | 80 |
| L Range Log 10 dB..... | 81 |
| L Range Log 5 dB..... | 81 |
| L Range Log 1 dB..... | 81 |
| L Range Log Manual..... | 81 |
| L Range Linear %..... | 81 |
| L Range Lin. Unit..... | 82 |
| L y-Axis Max Value..... | 82 |
| L y-Axis Min Value..... | 82 |
| L y-Unit % / Abs..... | 82 |
| L Default Settings..... | 82 |
| L Adjust Settings..... | 83 |
| L Gated Trigger (On/Off)..... | 83 |
| L Gate Ranges..... | 83 |
| L Adapt to Signal..... | 84 |
| L Auto Level & Time..... | 84 |
| L Start Slot..... | 84 |
| L Stop Slot..... | 85 |
| L Adjust Settings..... | 85 |
| Power vs Time..... | 85 |
| L Switching Point..... | 85 |
| L Start Meas..... | 85 |

| | |
|--------------------------|----|
| L No of Subframes..... | 85 |
| L List Evaluation..... | 86 |
| L Auto Level & Time..... | 86 |

Code Domain Analyzer

Opens the submenu to configure a code domain analysis. The menu is described in [chapter 3.1.1.1, "Softkeys of the Code Domain Analyzer"](#), on page 16.

For details on Code Domain Analysis, see [chapter 3.1, "Code Domain Analysis"](#), on page 15.

Power

Starts the Signal Channel Power measurement, in which the power of a single channel is determined.

For details on screen layout and default values, refer to the description of the [Signal Channel Power](#).

Remote command:

[CONFigure:CDPower\[:BTS\]:MEASurement](#) on page 187

[CALCulate<n>:MARKer:FUNction:CDPower\[:BTS\]:RESult?](#) on page 138

Adapt to Signal ← Power

Opens a submenu to configure the measurEment with the following softkeys:

Auto Level & Time ← Adapt to Signal ← Power

The Auto Level and Time softkey automatically adjusts the reference level and the trigger to frame time to their optimum levels. This prevents overloading of the R&S FSVR.

Current measurements are aborted when pressing the softkey and resumed after the automatic level detection is finished.

Remote command:

[\[SENSe:\]POWER:ACHannel:AUTO:LTIME](#) on page 202

Start Slot ← Adapt to Signal ← Power

Sets the first slot of the measurement.

Remote command:

[\[SENSe:\]POWER:ACHannel:SLOT:STarT](#) on page 202

Stop Slot ← Adapt to Signal ← Power

Sets the last slot of the measurement.

Remote command:

[\[SENSe:\]POWER:ACHannel:SLOT:STOP](#) on page 202

Ch Power ACLR

Starts the Adjacent Channel Power measurement.

In this measurement the power of the carrier and its adjacent and alternate channels is determined. For details on screen layout and default values see the description of the [Adjacent Channel Power \(CH Power ACLR\)](#).

Also opens the Adjacent Channel Power submenu.

Remote command:

`CONFigure:CDPower[:BTS]:MEASurement` on page 187

`CALCulate<n>:MARKer:FUNCTion:CDPower[:BTS]:RESult?` on page 138

CP/ACLR Settings ← Ch Power ACLR

Opens a submenu to configure the channel power and adjacent channel power measurement independently of the predefined standards (for details see also [chapter 3.4.10, "Predefined CP/ACLR Standards"](#), on page 128 and [chapter 3.4.11, "Optimized Settings for CP/ACLR Test Parameters"](#), on page 129).

of TX Chan ← CP/ACLR Settings ← Ch Power ACLR

Opens an edit dialog box to enter the number of carrier signals to be taken into account in channel and adjacent-channel power measurements. Values from 1 to 18 are allowed.

Remote command:

`[SENSe:]POWER:ACHannel:TXChannel:COUNT` on page 232

of Adj Chan ← CP/ACLR Settings ← Ch Power ACLR

Opens an edit dialog box to enter the number of adjacent channels to be considered in the adjacent-channel power measurement. Values from 0 to 12 are allowed.

The following measurements are performed depending on the number of the channels:


| | |
|-----|---|
| 0 | Only the channel powers are measured. |
| 1 | The channel powers and the power of the upper and lower adjacent channel are measured. |
| 2 | The channel powers, the power of the upper and lower adjacent channel, and of the next higher and lower channel (alternate channel 1) are measured. |
| 3 | The channel power, the power of the upper and lower adjacent channel, the power of the next higher and lower channel (alternate channel 1), and of the next but one higher and lower adjacent channel (alternate channel 2) are measured. |
| ... | ... |
| 12 | The channel power, the power of the upper and lower adjacent channel, and the power of the all higher and lower channels (alternate channel 1 to 11) are measured. |

Remote command:

`[SENSe:]POWER:ACHannel:ACPairs` on page 224

Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Opens a dialog to define the channel settings for all channels, independent of the defined number of *used* TX or adjacent channels.

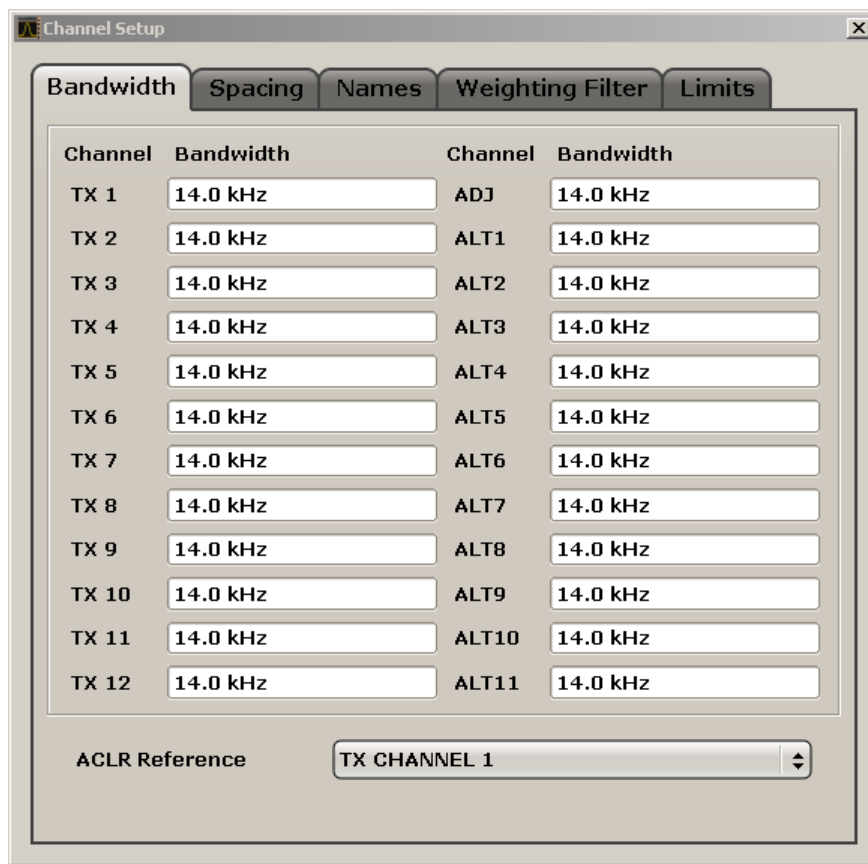

The dialog contains the following tabs:

- "Bandwidth" on page 61
- "Spacing" on page 62
- "Names" on page 63
- "Weighting Filter" on page 63
- "Limits" on page 64

Bandwidth ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Define the channel bandwidths for the transmission channels and the adjacent channels. "TX" is only available for the multi-carrier ACLR measurement. When you change the bandwidth for one channel, the value is automatically also defined for all subsequent channels of the same type.

The transmission-channel bandwidth is normally defined by the transmission standard. The correct bandwidth is set automatically for the selected standard (see [chapter 3.4.11, "Optimized Settings for CP/ACLR Test Parameters"](#), on page 129).

- Measurements in zero span (see [Fast ACLR \(On/Off\)](#) softkey) are performed in the zero span mode. The channel limits are indicated by vertical lines. For measurements requiring channel bandwidths deviating from those defined in the selected standard the IBW method is to be used.
- With the IBW method (see [Fast ACLR \(On/Off\)](#) softkey), the channel bandwidth limits are marked by two vertical lines right and left of the channel center frequency. Thus you can visually check whether the entire power of the signal under test is within the selected channel bandwidth.

If measuring according to the IBW method ("Fast ACLR Off"), the bandwidths of the different adjacent channels are to be entered numerically. Since all adjacent channels often have the same bandwidth, the other alternate channels are set to the bandwidth of the adjacent channel when it is changed. Thus, only one value needs to be entered in case of equal adjacent channel bandwidths.

For details on available channel filters see [chapter 3.4.3, "Selecting the Appropriate Filter Type"](#), on page 114.

Remote command:

`[SENSe:]POWer:ACHannel:BANDwidth|BWIDth[:CHANnel<channel>]`

on page 225

`[SENSe:]POWer:ACHannel:BANDwidth|BWIDth:ACHannel` on page 225

`[SENSe:]POWer:ACHannel:BANDwidth|BWIDth:ALternate<channel>`

on page 225

ACLR Reference ← Bandwidth ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Select the transmission channel to which the relative adjacent-channel power values should be referenced.

| | |
|--------------------------|--|
| TX Channel 1 | Transmission channel 1 is used. |
| Min Power TX Channel | The transmission channel with the lowest power is used as a reference channel. |
| Max Power TX Channel | The transmission channel with the highest power is used as a reference channel. |
| Lowest & Highest Channel | The outer left-hand transmission channel is the reference channel for the lower adjacent channels, the outer right-hand transmission channel that for the upper adjacent channels. |

Remote command:

`[SENSe:]POWer:ACHannel:REference:TXChannel:MANual` on page 231

`[SENSe:]POWer:ACHannel:REference:TXChannel:AUTO` on page 230

Spacing ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Define the channel spacings for the TX channels and for the adjacent channels.

- TX channels (left column)

| | |
|-------|--|
| TX1-2 | spacing between the first and the second carrier |
| TX2-3 | spacing between the second and the third carrier |
| ... | ... |

The spacings between all adjacent TX channels can be defined separately. When you change the spacing for one channel, the value is automatically also defined for all subsequent TX channels in order to set up a system with equal TX channel spacing quickly. For different spacings, a setup from top to bottom is necessary.

If the spacings are not equal, the channel distribution according to the center frequency is as follows:

| | |
|----------------------------|--|
| Odd number of TX channels | The middle TX channel is centered to center frequency. |
| Even number of TX channels | The two TX channels in the middle are used to calculate the frequency between those two channels. This frequency is aligned to the center frequency. |

- **Adjacent channels (right column)**
 Since all the adjacent channels often have the same distance to each other, the modification of the adjacent-channel spacing (ADJ) causes a change in all higher adjacent-channel spacings (ALT1, ALT2, ...): they are all multiplied by the same factor (new spacing value/old spacing value). Thus only one value needs to be entered in case of equal channel spacing. A modification of a higher adjacent-channel spacing (ALT1, ALT2, ...) causes a change by the same factor in all higher adjacent-channel spacings, while the lower adjacent-channel spacings remain unchanged.

Example:

In the default setting, the adjacent channels have the following spacing: 20 kHz ("ADJ"), 40 kHz ("ALT1"), 60 kHz ("ALT2"), 80 kHz ("ALT3"), 100 kHz ("ALT4"), ...
 If the spacing of the first adjacent channel ("ADJ") is set to 40 kHz, the spacing of all other adjacent channels is multiplied by factor 2 to result in 80 kHz ("ALT1"), 120 kHz ("ALT2"), 160 kHz ("ALT3"), ...

If, starting from the default setting, the spacing of the 5th adjacent channel ("ALT4") is set to 150 kHz, the spacing of all higher adjacent channels is multiplied by factor 1.5 to result in 180 kHz ("ALT5"), 210 kHz ("ALT6"), 240 kHz ("ALT7"), ...

If a ACLR or MC-ACLR measurement is started, all settings according to the standard including the channel bandwidths and channel spacings are set and can be adjusted afterwards.

Remote command:

[SENSe:] POWer:ACHannel:SPACing:CHANnel<channel> on page 232

[SENSe:] POWer:ACHannel:SPACing[:ACHannel] on page 231

[SENSe:] POWer:ACHannel:SPACing:ALternate<channel> on page 231

Names ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Define user-specific channel names for each channel. The names defined here are displayed in the result diagram and result table.

Remote command:

[SENSe:] POWer:ACHannel:NAME:ACHannel on page 228

[SENSe:] POWer:ACHannel:NAME:ALternate<channel> on page 228

[SENSe:] POWer:ACHannel:NAME:CHANnel<channel> on page 229

Weighting Filter ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Define weighting filters for all channels. Weighting filters are not available for all supported standards and cannot always be defined manually where they are available.

The dialog contains the following fields:

| Field | Description |
|---------|--|
| Channel | <ul style="list-style-type: none"> • TX 1-18: TX channels • ADJ: Adjacent channel • ALT1-11: Alternate channels |
| Active | Activates/Deactivates the weighting filter for the selected and any subsequent channels of the same type |
| Alpha | Defines the alpha value for the weighting filter for the selected and any subsequent channels of the same type |

Remote command:

POW:ACH:FILT:CHAN1 ON, see [SENSe:]POW:ACHannel:FILTer[:STATe]:CHANnel<channel> on page 227

Activates the weighting filter for TX channel 1.

POW:ACH:FILT:ALPH:CHAN1 0,35 see [SENSe:]POW:ACHannel:FILTer:ALPHa:CHANnel<channel> on page 226

Sets the alpha value for the weighting filter for TX channel 1 to 0,35.

POW:ACH:FILT:ACH ON see [SENSe:]POW:ACHannel:FILTer[:STATe]:ACHannel on page 227

Activates the weighting filter for the adjacent channel.

POW:ACH:FILT:ALPH:ACH 0,35 see [SENSe:]POW:ACHannel:FILTer:ALPHa:ACHannel on page 226

Sets the alpha value for the weighting filter for the adjacent channel to 0,35.

POW:ACH:FILT:ALT1 ON see [SENSe:]POW:ACHannel:FILTer[:STATe]:ALTernate<channel> on page 227

Activates the alpha value for the weighting filter for the alternate channel 1.

POW:ACH:FILT:ALPH:ALT1 0,35 see [SENSe:]POW:ACHannel:FILTer:ALPHa:ALTernate<channel> on page 226

Sets the alpha value for the weighting filter for the alternate channel 1 to 0,35.

Limits ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Activate and define the limits for the ACLR measurement.

Limit Checking ← Limits ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Activate or deactivate limit checking for the ACLR measurement.

The following rules apply for the limits:

- A separate limit can be defined for each adjacent channel. The limit applies to both the upper and the lower adjacent channel.
- A relative and/or absolute limit can be defined. The check of both limit values can be activated independently.
- The R&S FSVR checks adherence to the limits irrespective of whether the limits are absolute or relative or whether the measurement is carried out with absolute or

relative levels. If both limits are active and if the higher of both limit values is exceeded, the measured value is marked by a preceding asterisk.

Remote command:

[CALCulate<n>:LIMit<k>:ACPoweR\[:STATe\]](#) on page 159

[CALCulate<n>:LIMit<k>:ACPoweR:ACHannel:RESult](#) on page 156

[CALCulate<n>:LIMit<k>:ACPoweR:ALternate<channel>\[:RELative\]](#)
on page 158

Relative Limit ← Limits ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Defines a limit relative to the carrier signal.

Remote command:

`CALC:LIM:ACP ON`, see [CALCulate<n>:LIMit<k>:ACPoweR\[:STATe\]](#)
on page 159

`CALC:LIM:ACP:<adjacent-channel> 0dBc,0dBc`

`CALC:LIM:ACP:<adjacent-channel>:STAT ON`

Absolute Limit ← Limits ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Defines an absolute limit.

Remote command:

`CALC:LIM:ACP ON`, see [CALCulate<n>:LIMit<k>:ACPoweR\[:STATe\]](#)
on page 159

`CALC:LIM:ACP:<adjacent-channel>:ABS -10dBm,-10dBm`

`CALC:LIM:ACP:<adjacent-channel>:ABS:STAT ON`, see [CALCulate<n>:LIMit<k>:ACPoweR:ACHannel:ABSolute:STATe](#) on page 154

Check ← Limits ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Activate or deactivate the limit to be considered during a limit check. The check of both limit values can be activated independently.

Chan Pwr/Hz ← CP/ACLR Settings ← Ch Power ACLR

If deactivated, the channel power is displayed in dBm. If activated, the channel power density is displayed instead. Thus, the absolute unit of the channel power is switched from dBm to dBm/Hz. The channel power density in dBm/Hz corresponds to the power inside a bandwidth of 1 Hz and is calculated as follows:

"channel power density = channel power – log₁₀(channel bandwidth)"

By means of this function it is possible e.g. to measure the signal/noise power density or use the additional functions "[ACLR \(Abs/Rel\)](#)" on page 66 and "[ACLR Reference](#)" on page 62 to obtain the signal to noise ratio.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult:PHZ](#) on page 144

Power Mode ← CP/ACLR Settings ← Ch Power ACLR

Opens a submenu to select the power mode.

Clear/Write ← Power Mode ← CP/ACLR Settings ← Ch Power ACLR

If this mode is activated, the channel power and the adjacent channel powers are calculated directly from the current trace (default mode).

Remote command:

CALC:MARK:FUNC:POW:MODE WRIT, see [CALCulate<n>:MARKer<m>:FUNCTION:POWer:MODE](#) on page 142

Max Hold ← Power Mode ← CP/ACLR Settings ← Ch Power ACLR

If this mode is activated, the power values are calculated from the current trace and compared with the previous power value using a maximum algorithm. The higher value is retained. If activated, the enhancement label "Pwr Max" is displayed.

Remote command:

CALC:MARK:FUNC:POW:MODE MAXH, see [CALCulate<n>:MARKer<m>:FUNCTION:POWer:MODE](#) on page 142

Select Trace ← CP/ACLR Settings ← Ch Power ACLR

Opens an edit dialog box to enter the trace number on which the CP/ACLR measurement is to be performed. Only activated traces can be selected.

For details on trace modes see [chapter 3.4.2, "Trace Mode Overview"](#), on page 112.

Remote command:

[\[SENSe:\]POWer:TRACe](#) on page 234

ACLR (Abs/Rel) ← CP/ACLR Settings ← Ch Power ACLR

Switches between absolute and relative power measurement in the adjacent channels.

| | |
|-----|---|
| Abs | The absolute power in the adjacent channels is displayed in the unit of the y-axis, e.g. in dBm, dBμV. |
| Rel | The level of the adjacent channels is displayed relative to the level of the transmission channel in dBc. |

Remote command:

[\[SENSe:\]POWer:ACHannel:MODE](#) on page 228

Adjust Settings ← CP/ACLR Settings ← Ch Power ACLR

Automatically optimizes all instrument settings for the selected channel configuration (channel bandwidth, channel spacing) within a specific frequency range (channel bandwidth). The adjustment is carried out only once. If necessary, the instrument settings can be changed later.

For details on the settings of span, resolution bandwidth, video bandwidth, detector and trace averaging see [chapter 3.4.11, "Optimized Settings for CP/ACLR Test Parameters"](#), on page 129.

Remote command:

[\[SENSe:\]POWer:ACHannel:PRESet](#) on page 229

Sweep Time ← Ch Power ACLR

Opens an edit dialog box to enter the sweep time. With the RMS detector, a longer sweep time increases the stability of the measurement results.

The function of this softkey is identical to the [Sweeptime Manual](#) softkey in the "Bandwidth" menu.

Remote command:

[\[SENSe:\] SWEep:TIME](#) on page 239

Fast ACLR (On/Off) ← Ch Power ACLR

Switches between the IBW method ("Fast ACLR Off") and the zero span method ("Fast ACLR On").

When switched on, the R&S FSVR sets the center frequency consecutively to the different channel center frequencies and measures the power with the selected measurement time (= sweep time/number of channels). The RBW filters suitable for the selected standard and frequency offset are automatically used (e.g. root raised cos with IS 136). For details on available channel filters see [chapter 3.4.3, "Selecting the Appropriate Filter Type"](#), on page 114.

The RMS detector is used for obtaining correct power measurement results. Therefore this requires no software correction factors.

Measured values are output as a list. The powers of the transmission channels are output in dBm, the powers of the adjacent channels in dBm.

The sweep time is selected depending on the desired reproducibility of results. Reproducibility increases with sweep time since power measurement is then performed over a longer time period. As a general approach, it can be assumed that approx. 500 non-correlated measured values are required for a reproducibility of 0.5 dB (99 % of the measurements are within 0.5 dB of the true measured value). This holds true for white noise. The measured values are considered as non-correlated if their time interval corresponds to the reciprocal of the measured bandwidth.

With IS 136 the measurement bandwidth is approx. 25 kHz, i.e. measured values at an interval of 40 µs are considered as non-correlated. A measurement time of 40 ms is thus required per channel for 1000 measured values. This is the default sweep time which the R&S FSVR sets in coupled mode. Approx. 5000 measured values are required for a reproducibility of 0.1 dB (99 %), i.e. the measurement time is to be increased to 200 ms.

Remote command:

[\[SENSe:\] POWer:HSPEED](#) on page 233

Set CP Reference ← Ch Power ACLR

Defines the currently measured channel power as the reference value if channel power measurement is activated. The reference value is displayed in the "Tx1 (Ref) Power" field; the default value is 0 dBm.

The softkey is available only for multi carrier ACLR measurements.

In adjacent-channel power measurement with one or several carrier signals, the power is always referenced to a transmission channel, i.e. no value is displayed for "Tx1 (Ref) Power".

Remote command:

[\[SENSe:\] POWer:ACHannel:REFERENCE:AUTO ONCE](#) on page 230

Noise Correction ← Ch Power ACLR

If activated, the results are corrected by the instrument's inherent noise, which increases the dynamic range.

| | |
|--------|---|
| "ON" | <p>A reference measurement of the instrument's inherent noise is carried out. The noise power measured is then subtracted from the power in the channel that is being examined.</p> <p>The inherent noise of the instrument depends on the selected center frequency, resolution bandwidth and level setting. Therefore, the correction function is disabled whenever one of these parameters is changed. A disable message is displayed on the screen. Noise correction must be switched on again manually after the change.</p> |
| "OFF" | No noise correction is performed. |
| "AUTO" | Noise correction is performed. After a parameter change, noise correction is restarted automatically and a new correction measurement is performed. |

Remote command:

[\[SENSe:\]POWer:NCORrection](#) on page 233

Adapt to Signal ← Ch Power ACLR

Opens a submenu to configure the measurEment with the following softkeys:

Auto Level & Time ← Adapt to Signal ← Ch Power ACLR

The Auto Level and Time softkey automatically adjusts the reference level and the trigger to frame time to their optimum levels. This prevents overloading of the R&S FSVR.

Current measurements are aborted when pressing the softkey and resumed after the automatic level detection is finished.

Remote command:

[\[SENSe:\]POWer:ACHannel:AUTO:LTIME](#) on page 202

Start Slot ← Adapt to Signal ← Ch Power ACLR

Sets the first slot of the measurement.

Remote command:

[\[SENSe:\]POWer:ACHannel:SLOT:STarT](#) on page 202

Stop Slot ← Adapt to Signal ← Ch Power ACLR

Sets the last slot of the measurement.

Remote command:

[\[SENSe:\]POWer:ACHannel:SLOT:STOP](#) on page 202

Spectrum Emission Mask

Performs a comparison of the signal power in different carrier offset ranges with the maximum values specified in the standard.

For details on screen layout and default values see the description of the [Spectrum Emission Mask](#).

Also opens the Spectrum Emission Mask submenu containing the following softkeys:

Remote command:

[CONFigure:CDPower\[:BTS\]:MEASurement](#) on page 187

[CALCulate<n>:MARKer:FUNction:CDPower\[:BTS\]:RESult?](#) on page 138

Sweep List ← Spectrum Emission Mask

Opens a submenu to edit the sweep list and displays the "Sweep List" dialog box.

Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

After a preset, the sweep list contains a set of default ranges and parameters. For each range, you can change the parameters listed below. To insert or delete ranges, use the "Insert Before Range", "Insert After Range", "Delete Range" softkeys. The measurement results are not updated during editing but on closing the dialog box ("Edit Sweep List/ Close Sweep List" softkey, see ["Close Sweep List"](#) on page 72).

The changes of the sweep list are only kept until you load another parameter set (by pressing PRESET or by loading an XML file). If you want a parameter set to be available permanently, create an XML file for this configuration (for details refer to [chapter 3.4.7, "Format Description of Spectrum Emission Mask XML Files"](#), on page 118).

If you load one of the provided XML files ("Load Standard" softkey, see ["Load Standard"](#) on page 76), the sweep list contains ranges and parameters according to the selected standard. For further details refer also to [chapter 3.4.8, "Provided XML Files for the Spectrum Emission Mask Measurement"](#), on page 124.

Note: If you edit the sweep list, always follow the rules and consider the limitations described in [chapter 3.4.5, "Ranges and Range Settings"](#), on page 116.

Range Start / Range Stop ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the start frequency/stop frequency of the selected range. Follow the rules described in [chapter 3.4.5, "Ranges and Range Settings"](#), on page 116.

In order to change the start/stop frequency of the first/last range, select the appropriate span with the SPAN key. If you set a span that is smaller than the overall span of the ranges, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz. The first and last ranges are adapted to the given span as long as the minimum span of 20 Hz is not violated.

Frequency values for each range have to be defined relative to the center frequency. The reference range has to be centered on the center frequency. The minimum span of the reference range is given by the current TX Bandwidth.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>\[:FREQUENCY\]:START](#) on page 210

[\[SENSe:\]ESpectrum:RANGe<range>\[:FREQUENCY\]:STOP](#) on page 211

Fast SEM ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Activates "Fast SEM" mode for all ranges in the sweep list. For details see [chapter 3.4.9, "Fast Spectrum Emission Mask Measurements"](#), on page 126.

Note: If "Fast SEM" mode is deactivated while [Symmetric Setup](#) mode is on, "Symmetrical Setup" mode is automatically also deactivated.

If "Fast SEM" mode is activated while "Symmetrical Setup" mode is on, not all range settings can be set automatically.

Remote command:

`[SENSe:]ESpectrum:HighSPeed` on page 207

Filter Type ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the filter type for this range. For details on filters see also [chapter 3.4.3, "Selecting the Appropriate Filter Type"](#), on page 114.

Remote command:

`[SENSe:]ESpectrum:RANGe<range>:FILTer:TYPE` on page 210

RBW ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the RBW value for this range.

Remote command:

`[SENSe:]ESpectrum:RANGe<range>:BANDwidth[:RESolution]` on page 208

VBW ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the VBW value for this range.

Remote command:

`[SENSe:]ESpectrum:RANGe<range>:BANDwidth:VIDeo` on page 209

Sweep Time Mode ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Activates or deactivates the auto mode for the sweep time.

Remote command:

`[SENSe:]ESpectrum:RANGe<range>:SWEep:TIME:AUTO` on page 215

Sweep Time ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the sweep time value for the range.

Remote command:

`[SENSe:]ESpectrum:RANGe<range>:SWEep:TIME` on page 215

Ref. Level ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the reference level for the range.

Remote command:

`[SENSe:]ESpectrum:RANGe<range>:RLEVel` on page 215

RF Att. Mode ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Activates or deactivates the auto mode for RF attenuation.

Remote command:

`[SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation:AUTO` on page 211

RF Attenuator ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the attenuation value for that range.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:INPut:ATTenuation](#) on page 211

Preamp ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Switches the preamplifier on or off.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:INPut:GAIN:STATe](#) on page 212

Transd. Factor ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets a transducer for the specified range. You can only choose a transducer that fulfills the following conditions:

- The transducer overlaps or equals the span of the range.
- The x-axis is linear.
- The unit is dB.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:TRANsducer](#) on page 216

Limit Check 1-4 ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the type of limit check for all ranges.

For details on limit checks see the base unit description "Working with Lines in SEM".

The limit state affects the availability of all limit settings ("[Abs Limit Start](#)" on page 71, "[Abs Limit Stop](#)" on page 72, "[Rel Limit Start](#)" on page 72, "[Rel Limit Stop](#)" on page 72).

Depending on the number of active power classes (see "Power Class" dialog box), the number of limits that can be set varies. Up to four limits are possible. The sweep list is extended accordingly.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:LIMit<source>:STATe](#) on page 214

[CALCulate<n>:LIMit<k>:FAIL?](#) on page 160

Abs Limit Start ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets an absolute limit value at the start frequency of the range [dBm].

This parameter is only available if the limit check is set accordingly (see "[Limit Check 1-4](#)" on page 71).

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:START](#)

on page 213

Abs Limit Stop ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets an absolute limit value at the stop frequency of the range [dBm].

This parameter is only available if the limit check is set accordingly (see "[Limit Check 1-4](#)" on page 71).

Remote command:

`[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:STOP`
on page 213

Rel Limit Start ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets a relative limit value at the start frequency of the range [dBc].

This parameter is only available if the limit check is set accordingly (see "[Limit Check 1-4](#)" on page 71).

Remote command:

`[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:START`
on page 213

Rel Limit Stop ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets a relative limit value at the stop frequency of the range [dBc].

This parameter is only available if the limit check is set accordingly (see "[Sweep List dialog box](#)" on page 69).

Remote command:

`[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:STOP`
on page 214

Close Sweep List ← Sweep List ← Spectrum Emission Mask

Closes the "Sweep List" dialog box and updates the measurement results.

Insert before Range ← Sweep List ← Spectrum Emission Mask

Inserts a new range to the left of the currently focused range. The range numbers of the currently focused range and all higher ranges are increased accordingly. The maximum number of ranges is 20.

For further details refer to [chapter 3.4.5, "Ranges and Range Settings"](#), on page 116.

Remote command:

`ESP:RANG3:INS BEF`, see `[SENSe:]ESpectrum:RANGe<range>:INSert`
on page 212

Insert after Range ← Sweep List ← Spectrum Emission Mask

Inserts a new range to the right of the currently focused range. The range numbers of all higher ranges are increased accordingly. The maximum number of ranges is 20.

For further details refer to [chapter 3.4.5, "Ranges and Range Settings"](#), on page 116.

Remote command:

`ESP:RANG1:INS AFT`, see `[SENSe:]ESpectrum:RANGe<range>:INSert`
on page 212

Delete Range ← Sweep List ← Spectrum Emission Mask

Deletes the currently focused range, if possible. The range numbers are updated accordingly. For further details refer to [chapter 3.4.5, "Ranges and Range Settings"](#), on page 116.

Remote command:

[SENSe:]ESpectrum:RANGe<range>:DELete on page 209

Symmetric Setup ← Sweep List ← Spectrum Emission Mask

If activated, the current sweep list configuration is changed to define a symmetrical setup regarding the reference range. The number of ranges to the left of the reference range is reflected to the right, i.e. any missing ranges on the right are inserted, while superfluous ranges are removed. The values in the ranges to the right of the reference range are adapted symmetrically to those in the left ranges.

Any changes to the range settings in active "Symmetric Setup" mode lead to symmetrical changes in the other ranges (where possible). In particular, this means:


- Inserting ranges: a symmetrical range is inserted on the other side of the reference range
- Deleting ranges: the symmetrical range on the other side of the reference range is also deleted
- Editing range settings: the settings in the symmetrical range are adapted accordingly

Note: If "Fast SEM" mode is deactivated while "Symmetric Setup" mode is on, "Sym Setup" mode is automatically also deactivated.

If "Fast SEM" mode is activated while "Symmetric Setup" mode is on, not all range settings can be set automatically.

Edit Reference Range ← Sweep List ← Spectrum Emission Mask

Opens the "Reference Range" dialog box to edit the additional settings used for SEM measurements.

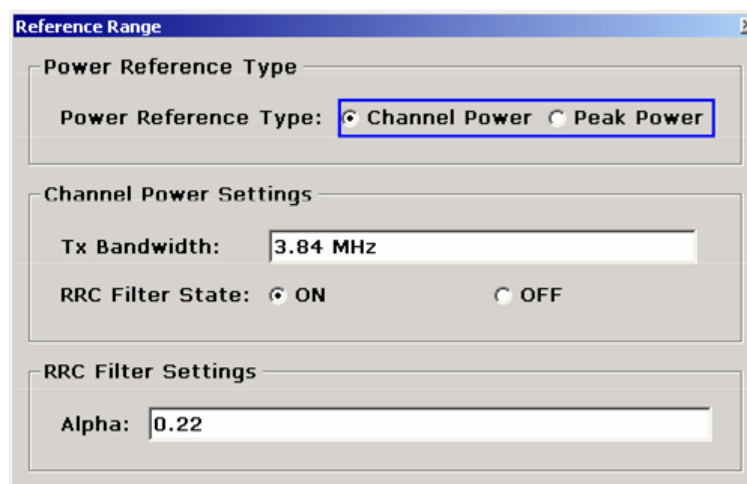

Two different power reference types are supported:

- "Peak Power"
Measures the highest peak within the reference range.
- "Channel Power"

Measures the channel power within the reference range (integral bandwidth method).

If the "Channel Power" reference power type is activated, the dialog box is extended to define additional settings:

- "Tx Bandwidth"
Defines the bandwidth used for measuring the channel power:
minimum span ≤ value ≤ span of reference range
- "RRC Filter State"
Activates or deactivates the use of an RRC filter.
- "RRC Filter Settings"
Sets the alpha value of the RRC filter. This window is only available if the RRC filter is activated.

For further details refer to [chapter 3.4.5, "Ranges and Range Settings"](#), on page 116.

Remote command:

[SENSe:]ESpectrum:RTYPE on page 216


[SENSe:]ESpectrum:BWID on page 206

[SENSe:]ESpectrum:FILTer[:RRC][:STATE] on page 206

[SENSe:]ESpectrum:FILTer[:RRC]:ALPHA on page 206

Edit Reference Range ← Spectrum Emission Mask

Opens the "Reference Range" dialog box to edit the additional settings used for SEM measurements.

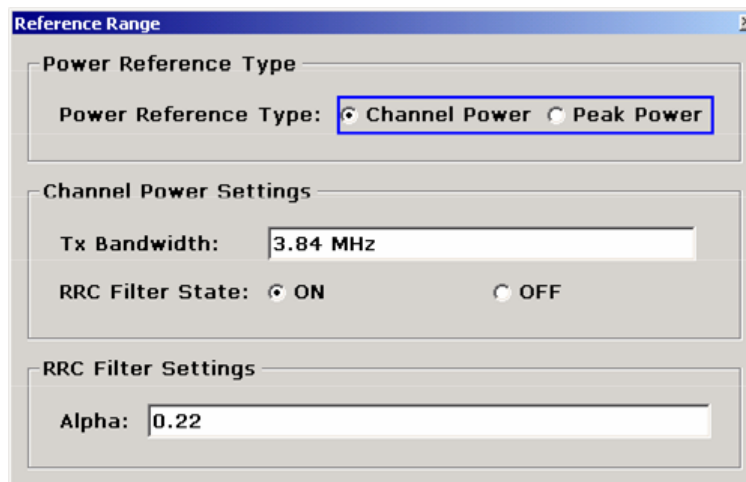

Two different power reference types are supported:

- "Peak Power"
Measures the highest peak within the reference range.
- "Channel Power"
Measures the channel power within the reference range (integral bandwidth method).
If the "Channel Power" reference power type is activated, the dialog box is extended to define additional settings:
- "Tx Bandwidth"
Defines the bandwidth used for measuring the channel power:
minimum span ≤ value ≤ span of reference range

- "RRC Filter State"
Activates or deactivates the use of an RRC filter.
- "RRC Filter Settings"
Sets the alpha value of the RRC filter. This window is only available if the RRC filter is activated.

For further details refer to [chapter 3.4.5, "Ranges and Range Settings"](#), on page 116.

Remote command:

[SENSe:]ESpectrum:RTYPE on page 216


[SENSe:]ESpectrum:BWID on page 206

[SENSe:]ESpectrum:FILTer[:RRC][:STATe] on page 206

[SENSe:]ESpectrum:FILTer[:RRC]:ALPHA on page 206

Edit Power Classes ← Spectrum Emission Mask

Opens a dialog box to modify the power class settings.

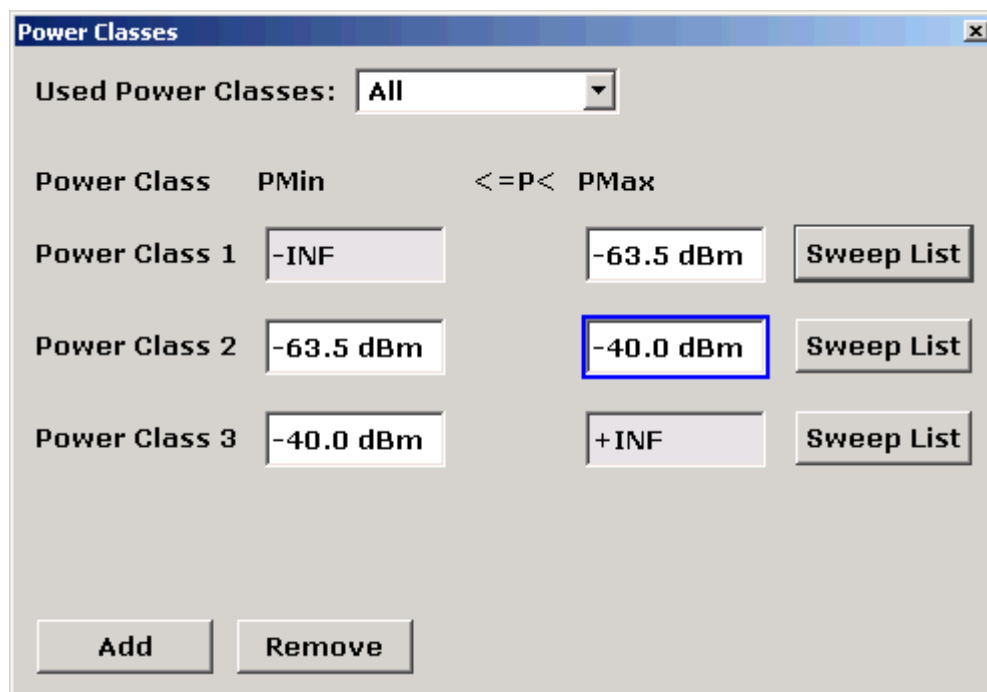

Used Power Classes ← Edit Power Classes ← Spectrum Emission Mask

Choose the power classes to be used from this dropdown menu. It is only possible to select either one of the defined power classes or all of the defined power classes together.

Only power classes for which limits are defined are available for selection.

If "All" is selected, the power class that corresponds to the currently measured power in the reference range is used. The limits assigned to that power class are applied (see "PMin/PMax" on page 76).

Remote command:

`CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>[:EXCLusive]`

on page 161

To define all limits in one step:

`CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:LIMit[:STATe]`

on page 162

PMin/PMAX ← Edit Power Classes ← Spectrum Emission Mask

Defines the level limits for each power class. The range always starts at -200 dBm (-INF) and always stops at 200 dBm (+INF). These fields cannot be modified. If more than one Power Class is defined, the value of "PMin" must be equal to the value of "PMAX" of the last Power Class and vice versa.

Note that the power level may be equal to the lower limit, but must be lower than the upper limit:

$$P_{\min} \leq P < P_{\max}$$

Remote command:

`CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:MINimum` on page 163

`CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:MAXimum` on page 163

Sweep List ← Edit Power Classes ← Spectrum Emission Mask

See "Sweep List" on page 69

Add/Remove ← Edit Power Classes ← Spectrum Emission Mask

Activates or deactivates power classes to be defined. Up to four power classes can be defined. The number of active power classes affects the availability of the items of the Used Power Classes dropdown menu.

Remote command:

`CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>[:EXCLusive]`

on page 161

Load Standard ← Spectrum Emission Mask

Opens a dialog box to select an XML file which includes the desired standard specification. For details on the provided XML files refer to [chapter 3.4.8, "Provided XML Files for the Spectrum Emission Mask Measurement"](#), on page 124.

Remote command:

`[SENSe:]ESpectrum:PRESet[:STANdard]` on page 208

Save As Standard ← Spectrum Emission Mask

Opens the "Save As Standard" dialog box, in which the currently used SEM settings and parameters can be saved and exported into an *.xml file. Enter the name of the file in the "File name" field. For details on the structure and contents of the XML file refer to [chapter 3.4.7, "Format Description of Spectrum Emission Mask XML Files"](#), on page 118.

Remote command:

`[SENSe:]ESpectrum:PRESet:STORe` on page 208

Meas Start/Stop ← Spectrum Emission Mask

Aborts/restarts the current measurement and displays the status:

| | |
|---------|--|
| "Start" | The measurement is currently running. |
| "Stop" | The measurement has been stopped, or, in single sweep mode, the end of the sweep has been reached. |

Remote command:

`ABORt` on page 258

`INITiate<n>:ESpectrum` on page 260

Restore Standard Files ← Spectrum Emission Mask

Copies the XML files from the C:\R_S\instr\sem_backup folder to the C:\R_S\instr\sem_std folder. Files of the same name are overwritten.

Remote command:

`[SENSe:]ESpectrum:PRESet:REStore` on page 208

Adapt to Signal ← Spectrum Emission Mask

Opens a submenu to configure the measurEment with the following softkeys:

Auto Level & Time ← Adapt to Signal ← Spectrum Emission Mask

The Auto Level and Time softkey automatically adjusts the reference level and the trigger to frame time to their optimum levels. This prevents overloading of the R&S FSVR.

Current measurements are aborted when pressing the softkey and resumed after the automatic level detection is finished.

Remote command:

`[SENSe:]POWer:ACHannel:AUTO:LTIME` on page 202

Start Slot ← Adapt to Signal ← Spectrum Emission Mask

Sets the first slot of the measurement.

Remote command:

`[SENSe:]POWer:ACHannel:SLOT:STarT` on page 202

Stop Slot ← Adapt to Signal ← Spectrum Emission Mask

Sets the last slot of the measurement.

Remote command:

`[SENSe:]POWer:ACHannel:SLOT:STOP` on page 202

Occupied Bandwidth

Starts measurement of the bandwidth assigned to the signal.

For details on screen layout and default values see the description of the [Occupied Bandwidth](#).

Also opens the Occupied Bandwidth submenu containing the following softkeys:

Remote command:

[CONFigure:CDPower\[:BTS\]:MEASurement](#) on page 187

[CALCulate<n>:MARKer:FUNction:CDPower\[:BTS\]:RESult?](#) on page 138

% Power Bandwidth (span > 0) ← Occupied Bandwidth

Opens an edit dialog box to enter the percentage of total power in the displayed frequency range which defines the occupied bandwidth. Values from 10% to 99.9% are allowed.

Remote command:

[\[SENSe:\]POWER:BANDwidth|BWIDth](#) on page 232

Channel Bandwidth (span > 0) ← Occupied Bandwidth

Opens an edit dialog box to enter the channel bandwidth for the transmission channel. The specified channel bandwidth is used for optimization of the test parameters (for details see [chapter 3.4.11, "Optimized Settings for CP/ACLR Test Parameters"](#), on page 129). The default setting is 14 kHz.

For measurements in line with a specific transmission standard, the bandwidth specified by the standard for the transmission channel must be entered.

Remote command:

[\[SENSe:\]POWER:ACHannel:BANDwidth|BWIDth\[:CHANnel<channel>\]](#)
on page 225

Adapt to Signal ← Occupied Bandwidth

Opens a submenu to configure the measurEment with the following softkeys:

Auto Level & Time ← Adapt to Signal ← Occupied Bandwidth

The Auto Level and Time softkey automatically adjusts the reference level and the trigger to frame time to their optimum levels. This prevents overloading of the R&S FSVR.

Current measurements are aborted when pressing the softkey and resumed after the automatic level detection is finished.

Remote command:

[\[SENSe:\]POWER:ACHannel:AUTO:LTIME](#) on page 202

Start Slot ← Adapt to Signal ← Occupied Bandwidth

Sets the first slot of the measurement.

Remote command:

[\[SENSe:\]POWER:ACHannel:SLOT:STarT](#) on page 202

Stop Slot ← Adapt to Signal ← Occupied Bandwidth

Sets the last slot of the measurement.

Remote command:

[\[SENSe:\]POWER:ACHannel:SLOT:STOP](#) on page 202

Adjust Settings ← Occupied Bandwidth

Automatically optimizes all instrument settings for the selected channel configuration (channel bandwidth, channel spacing) within a specific frequency range (channel bandwidth). The adjustment is carried out only once. If necessary, the instrument settings can be changed later.

For details on the settings of span, resolution bandwidth, video bandwidth, detector and trace averaging see [chapter 3.4.11, "Optimized Settings for CP/ACLR Test Parameters"](#), on page 129.

Remote command:

[\[SENSe:\]POWER:ACHannel:PRESet](#) on page 229

CCDF

Starts the measurement of the Complementary Cumulative Distribution Function and the Crest factor.

For details on screen layout and default values see the description of the [Complementary Cumulative Distribution Function \(CCDF\)](#).

Remote command:

[CONFigure:CDPower\[:BTS\]:MEASurement](#) on page 187

Percent Marker ← CCDF

Opens an edit dialog box to enter a probability value and to position marker 1. Thus, the power which is exceeded with a given probability can be determined very easily. If marker 1 is deactivated, it will be switched on automatically.

As all markers, the percent marker can be moved simply by touching it with a finger or mouse cursor and dragging it to the desired position.

Remote command:

[CALCulate<n>:MARKer<m>:Y:PERCent](#) on page 171

Res BW ← CCDF

Opens an edit dialog box to set the resolution bandwidth directly.

For correct measurement of the signal statistics the resolution bandwidth has to be wider than the signal bandwidth in order to measure the actual peaks of the signal amplitude correctly. In order not to influence the peak amplitudes the video bandwidth is automatically set to 10 MHz. The sample detector is used for detecting the video voltage.

Remote command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]](#) on page 217

of Samples ← CCDF

Opens an edit dialog box to set the number of power measurements that are taken into account for the statistics.

Apart from the number of measurements the overall measurement time depends also on the set resolution bandwidth as the resolution bandwidth directly influences the sampling rate.

Remote command:

[CALCulate<n>:STATistics:NSAMples](#) on page 179

Scaling ← CCDF

Opens a submenu to change the scaling parameters of x- and y-axis.

x-Axis Ref Level ← Scaling ← CCDF

Opens an edit dialog box to enter the reference level in the currently active unit (dBm, dBμV, etc). The function of this softkey is identical to the "Ref Level" softkey in the "Amplitude" menu (see "Ref Level" on page 19).

For the APD function this value is mapped to the right diagram border. For the CCDF function there is no direct representation of this value on the diagram as the x-axis is scaled relatively to the measured mean power.

Remote command:

`CALCulate<n>:STATistics:SCALE:X:RLEVel` on page 181

x-Axis Range ← Scaling ← CCDF

Opens the "Range" submenu to select a value for the level range to be covered by the statistics measurement selected.

Remote command:

`CALCulate<n>:STATistics:SCALE:X:RANGE` on page 181

Range Log 100 dB ← x-Axis Range ← Scaling ← CCDF

Sets the level display range to 100 dB.

Remote command:

Logarithmic scaling:

`DISP:WIND:TRAC:Y:SPAC LOG`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 195

Display range:

`DISP:WIND:TRAC:Y 100DB`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]` on page 191

Range Log 50 dB ← x-Axis Range ← Scaling ← CCDF

Sets the level display range to 50 dB.

Remote command:

Logarithmic scaling:

`DISP:WIND:TRAC:Y:SPAC LOG`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 195

Display range:

`DISP:WIND:TRAC:Y 50DB`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]` on page 191

Range Log 10 dB ← x-Axis Range ← Scaling ← CCDF

Sets the level display range to 10 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 195

Display range:

DISP:WIND:TRAC:Y 10DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 191

Range Log 5 dB ← x-Axis Range ← Scaling ← CCDF

Sets the level display range to 5 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 195

Display range:

DISP:WIND:TRAC:Y 5DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 191

Range Log 1 dB ← x-Axis Range ← Scaling ← CCDF

Sets the level display range to 1 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 195

Display range:

DISP:WIND:TRAC:Y 1DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 191

Range Log Manual ← x-Axis Range ← Scaling ← CCDF

Opens an edit dialog box to define the display range of a logarithmic level axis manually.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 195

Display range:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 191

Range Linear % ← x-Axis Range ← Scaling ← CCDF

Selects linear scaling for the level axis in %.

The grid is divided into decadal sections.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in % referenced to the voltage value at the position of marker 1. This is the default setting for linear scaling.

Remote command:

DISP:TRAC:Y:SPAC LIN, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 195

Range Lin. Unit ← x-Axis Range ← Scaling ← CCDF

Selects linear scaling in dB for the level display range, i.e. the horizontal lines are labeled in dB.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in dB referenced to the power value at the position of marker 1.

Remote command:

DISP:TRAC:Y:SPAC LDB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 195

y-Axis Max Value ← Scaling ← CCDF

Opens an edit dialog box to define the upper limit of the displayed probability range.

Values on the y-axis are normalized which means that the maximum value is 1.0. The y-axis scaling is defined via the [y-Unit % / Abs](#) softkey. The distance between max and min value must be at least one decade.

Remote command:

[CALCulate<n>:STATistics:SCALE:Y:UPPer](#) on page 182

y-Axis Min Value ← Scaling ← CCDF

Opens an edit dialog box to define the lower limit of the displayed probability range.

Values in the range $1e^{-9} < value < 0.1$ are allowed. The y-axis scaling is defined via the [y-Unit % / Abs](#) softkey. The distance between max and min value must be at least one decade.

Remote command:

[CALCulate<n>:STATistics:SCALE:Y:LOWer](#) on page 182

y-Unit % / Abs ← Scaling ← CCDF

Defines the scaling type of the y-axis. The default value is absolute scaling.

Remote command:

[CALCulate<n>:STATistics:SCALE:Y:UNIT](#) on page 182

Default Settings ← Scaling ← CCDF

Resets the x- and y-axis scalings to their preset values.

| | |
|--------------------|---------|
| x-axis ref level: | -10 dBm |
| x-axis range APD: | 100 dB |
| x-axis range CCDF: | 20 dB |

| | |
|---------------------|------|
| y-axis upper limit: | 1.0 |
| y-axis lower limit: | 1E-6 |

Remote command:

[CALCulate<n>:STATistics:PRESet](#) on page 179

Adjust Settings ← Scaling ← CCDF

Adjusts the level settings according to the measured difference between peak and minimum power for APD measurement or peak and mean power for CCDF measurement in order to obtain maximum power resolution. Adjusts the reference level to the current input signal. For details see also the [Adjust Ref Lvl](#) softkey.

Remote command:

[CALCulate<n>:STATistics:SCALE:AUTO ONCE](#) on page 180

Gated Trigger (On/Off) ← CCDF

Activates and deactivates the gating for statistics functions for the ACP and the CCDF channel. The trigger source is changed to "EXTERN" if this function is switched on. The gate ranges are defined using the ["Gate Ranges"](#) on page 83 softkey.

Remote command:

[\[SENSe:\] SWEep:EGATe](#) on page 235

[\[SENSe:\] SWEep:EGATe:SOURce](#) on page 236

Gate Ranges ← CCDF

Opens a dialog to configure up to 3 gate ranges for each trace.

For details on configuration, see "Defining gated triggering for APD and CCDF measurements" in the base unit description.

| Gate Ranges | | | | | | |
|---------------|-----------|-----------|-----------|-----------|-----------|-----------|
| | Trace 1 | Trace 2 | Trace 3 | Trace 4 | Trace 5 | Trace 6 |
| Comment | SlotA | | | | | |
| Period | 8 ms | 8 ms | 8 ms | 8 ms | 8 ms | 8 ms |
| Range 1 Start | 1 ms | 1 μ s | 1 μ s | 1 μ s | 1 μ s | 1 μ s |
| Range 1 Stop | 3 ms | 1 μ s | 1 μ s | 1 μ s | 1 μ s | 1 μ s |
| Range 1 Use | On | Off | Off | Off | Off | Off |
| Range 2 Start | 1 μ s | 1 μ s | 1 μ s | 1 μ s | 1 μ s | 1 μ s |
| Range 2 Stop | 1 μ s | 1 μ s | 1 μ s | 1 μ s | 1 μ s | 1 μ s |
| Range 2 Use | Off | Off | Off | Off | Off | Off |
| Range 3 Start | 1 μ s | 1 μ s | 1 μ s | 1 μ s | 1 μ s | 1 μ s |
| Range 3 Stop | 1 μ s | 1 μ s | 1 μ s | 1 μ s | 1 μ s | 1 μ s |
| Range 3 Use | Off | Off | Off | Off | Off | Off |

Remote command:

SWE:EGAT ON (see [\[SENSe:\]SWEep:EGATe](#) on page 235)

Switches on the external gate mode.

SWE:EGAT:TRAC1:COMM "SlotA" (see [\[SENSe:\]SWEep:EGATe:TRACe<k>:COMMENT](#) on page 236)

Adds a comment to trace 1.

SWE:EGAT:TRAC1:STAT1 ON (see [\[SENSe:\]SWEep:EGATe:TRACe<k>\[:STATe<range>\]](#) on page 237)

Activates tracing for range 1 of trace 1.

SWE:EGAT:TRAC1:STAR1 3ms (see [\[SENSe:\]SWEep:EGATe:TRACe<k>:STARt<range>](#) on page 237)

Sets the starting point for range 1 on trace 1 at 3 ms.

SWE:EGAT:TRAC1:STOp1 5ms (see [\[SENSe:\]SWEep:EGATe:TRACe<k>:STOp<range>](#) on page 238)

Sets the stopping point for range 1 on trace 1 at 5 ms.

SWE:EGAT:TRAC1:PER 5ms (see [\[SENSe:\]SWEep:EGATe:TRACe<k>:PERIOD](#) on page 237)

Defines the period for gated triggering to 5 ms.

Adapt to Signal ← CCDF

Opens a submenu to configure the measurEment with the following softkeys:

Auto Level & Time ← Adapt to Signal ← CCDF

The Auto Level and Time softkey automatically adjusts the reference level and the trigger to frame time to their optimum levels. This prevents overloading of the R&S FSVR.

Current measurements are aborted when pressing the softkey and resumed after the automatic level detection is finished.

Remote command:

[\[SENSe:\]POWer:ACHannel:AUTO:LTIME](#) on page 202

Start Slot ← Adapt to Signal ← CCDF

Sets the first slot of the measurement.

Remote command:

[\[SENSe:\]POWer:ACHannel:SLOT:STarT](#) on page 202

Stop Slot ← Adapt to Signal ← CCDF

Sets the last slot of the measurement.

Remote command:

[\[SENSe:\] POWER:ACHannel:SLOT:STOP](#) on page 202

Adjust Settings ← CCDF

Automatically optimizes all instrument settings for the selected channel configuration (channel bandwidth, channel spacing) within a specific frequency range (channel bandwidth). The adjustment is carried out only once. If necessary, the instrument settings can be changed later.

For details on the settings of span, resolution bandwidth, video bandwidth, detector and trace averaging see [chapter 3.4.11, "Optimized Settings for CP/ACLR Test Parameters"](#), on page 129.

Remote command:

[\[SENSe:\] POWER:ACHannel:PRESet](#) on page 229

Power vs Time

Starts the Power vs Time measurement. This measurement is required by the standard for the Emission Envelope Mask.

For details on screen layout and default values see the description of the [Power vs Time](#).

Also opens the Power vs Time submenu containing the following softkeys:

Remote command:

[CONFigure:CDPower\[:BTS\]:MEASurement](#) on page 187

Switching Point ← Power vs Time

Opens a dialog box to enter the switching point.

The switching point is between 1 and 6 and defines the border of uplink slots and downlink slots.

Remote command:

[CONFigure:CDPower\[:BTS\]:PVTime:SPOint](#) on page 188

Start Meas ← Power vs Time

Starts the measurement and does a single sweep.

Remote command:

[INITiate:CONT OFF](#), see [INITiate<n>:CONTinuous](#) on page 260

[INITiate<n>\[:IMMediate\]](#) on page 260

No of Subframes ← Power vs Time

Defines the number of subframes that the R&S FSVR includes in the measurement.

The results of the Power vs Time measurement are based on the average of the number of the subframes.

Remote command:

[CONFigure:CDPower\[:BTS\]:PVTime:SFRames](#) on page 188

List Evaluation ← Power vs Time

Toggles the list evaluation on and off. The table shows the following data:

- **Start and Stop**
Defines the start time and the stop time of one of the sections of the limit line in μ s. Each row in the table represents one section of the limit line.
- **Avg**
Shows the average power of the signal in the corresponding section of the limit line in relative and absolute values.
- **Max**
Shows the maximum power of the signal in the corresponding section of the limit line in relative and absolute values.
- **Time @ MaxPower**
Shows the exact moment in time at which the maximum power level occurs.

Auto Level & Time ← Power vs Time

Starts the autorange routine for the reference level. This also creates the relationship between trigger and subframe start.

Remote command:

[SENSe:]POWER:ACHannel:AUTO:LTIME on page 202

3.2.7.2 Softkeys of the Frequency Menu

The following chapter describes all softkeys available in the "Frequency" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

| | |
|----------------------------|----|
| Center..... | 86 |
| CF Stepsize..... | 87 |
| L 0.1*Span (span > 0)..... | 87 |
| L 0.1*RBW (span > 0)..... | 87 |
| L 0.5*Span (span > 0)..... | 87 |
| L 0.5*RBW (span > 0)..... | 88 |
| L x*Span (span > 0)..... | 88 |
| L x*RBW (span > 0)..... | 88 |
| L =Center..... | 88 |
| L =Marker..... | 88 |
| L Manual..... | 88 |
| Start..... | 88 |
| Stop..... | 89 |
| Frequency Offset..... | 89 |

Center

Opens an edit dialog box to enter the center frequency. The allowed range of values for the center frequency depends on the frequency span.

span > 0: $\text{span}_{\min}/2 \leq f_{\text{center}} \leq f_{\text{max}} - \text{span}_{\min}/2$

span = 0: $0 \text{ Hz} \leq f_{\text{center}} \leq f_{\text{max}}$

f_{\max} and span_{\min} are specified in the data sheet.

Remote command:

[\[SENSe:\] FREQuency:CENTer](#) on page 221

CF Stepsize

Opens a submenu to set the step size of the center frequency.

The step size defines the value by which the center frequency is increased or decreased when the arrow keys are pressed. When you use the rotary knob the center frequency changes in steps of 10% of the "Center Frequency Stepsize".

The step size can be set to a fraction of the span ($\text{span} > 0$) or a fraction of the resolution bandwidth ($\text{span} = 0$) or it can be set to a fixed value manually.

Apart from the [=Center](#), [=Marker](#) and [Manual](#) softkeys, the other softkeys are displayed depending on the selected frequency span.

This softkey is available for RF measurements.

0.1*Span (span > 0) ← CF Stepsize

Sets the step size for the center frequency to 10 % of the span.

Remote command:

[FREQ:CENT:STEP:LINK SPAN](#), see [\[SENSe:\] FREQuency:CENTer:STEP:LINK](#) on page 221

[FREQ:CENT:STEP:LINK:FACT 10PCT](#), see [\[SENSe:\] FREQuency:CENTer:STEP:LINK:FACTor](#) on page 222

0.1*RBW (span > 0) ← CF Stepsize

Sets the step size for the center frequency to 10 % of the resolution bandwidth.

This is the default setting.

Remote command:

[FREQ:CENT:STEP:LINK RBW](#), see [\[SENSe:\] FREQuency:CENTer:STEP:LINK](#) on page 221

[FREQ:CENT:STEP:LINK:FACT 10PCT](#), see [\[SENSe:\] FREQuency:CENTer:STEP:LINK:FACTor](#) on page 222

0.5*Span (span > 0) ← CF Stepsize

Sets the step size for the center frequency to 50 % of the span.

Remote command:

[FREQ:CENT:STEP:LINK SPAN](#), see [\[SENSe:\] FREQuency:CENTer:STEP:LINK](#) on page 221

[FREQ:CENT:STEP:LINK:FACT 50PCT](#), see [\[SENSe:\] FREQuency:CENTer:STEP:LINK:FACTor](#) on page 222

0.5*RBW (span > 0) ← CF Stepsize

Sets the step size for the center frequency to 50 % of the resolution bandwidth.

Remote command:

FREQ:CENT:STEP:LINK RBW, see [\[SENSe:\]FREQuency:CENTer:STEP:LINK](#) on page 221

FREQ:CENT:STEP:LINK:FACT 50PCT, see [\[SENSe:\]FREQuency:CENTer:STEP:LINK:FACTor](#) on page 222

x*Span (span > 0) ← CF Stepsize

Opens an edit dialog box to set the step size for the center frequency as a percentage (%) of the span.

Remote command:

FREQ:CENT:STEP:LINK SPAN, see [\[SENSe:\]FREQuency:CENTer:STEP:LINK](#) on page 221

FREQ:CENT:STEP:LINK:FACT 20PCT, see [\[SENSe:\]FREQuency:CENTer:STEP:LINK](#) on page 221

x*RBW (span > 0) ← CF Stepsize

Opens an edit dialog box to set the step size for the center frequency as a percentage (%) of the resolution bandwidth. Values between 1 % and 100 % in steps of 1 % are allowed. The default setting is 10 %.

Remote command:

FREQ:CENT:STEP:LINK RBW, see [\[SENSe:\]FREQuency:CENTer:STEP:LINK](#) on page 221

FREQ:CENT:STEP:LINK:FACT 20PCT, see [\[SENSe:\]FREQuency:CENTer:STEP:LINK](#) on page 221

=Center ← CF Stepsize

Sets the step size to the value of the center frequency and removes the coupling of the step size to span or resolution bandwidth.

This function is especially useful for measurements of the signal harmonics. In this case, each stroke of the arrow key selects the center frequency of another harmonic.

=Marker ← CF Stepsize

Sets the step size to the value of the current marker and removes the coupling of the step size to span or resolution bandwidth.

This function is especially useful for measurements of the signal harmonics. In this case, each stroke of the arrow key selects the center frequency of another harmonic.

Manual ← CF Stepsize

Opens an edit dialog box to enter a fixed step size for the center frequency.

Remote command:

[\[SENSe:\]FREQuency:CENTer:STEP](#) on page 221

Start

Opens an edit dialog box to define the start frequency. The following range of values is allowed:

$$f_{\min} \leq f_{\text{start}} \leq f_{\max} - \text{span}_{\min}$$

f_{\min} , f_{\max} and span_{\min} are specified in the data sheet.

This softkey is available for RF measurements.

Remote command:

[SENSe:] FREQuency: START on page 223

Stop

Opens an edit dialog box to define the stop frequency. The following range of values for the stop frequency is allowed:

$$f_{\min} + \text{span}_{\min} \leq f_{\text{stop}} \leq f_{\max}$$

f_{\min} , f_{\max} and span_{\min} are specified in the data sheet.

This softkey is available for RF measurements.

Remote command:

[SENSe:] FREQuency: STOP on page 223

Frequency Offset

Opens an edit dialog box to enter a frequency offset that shifts the displayed frequency range by the specified offset.

The softkey indicates the current frequency offset. The allowed values range from -100 GHz to 100 GHz. The default setting is 0 Hz.

Remote command:

[SENSe:] FREQuency: OFFSet on page 222

3.2.7.3 Softkeys of the Span Menu for RF Measurements

The following chapter describes all softkeys available in the "Span" menu for RF measurements, except for "Power" and "Power vs Time" measurements.

| | |
|----------------------|----|
| Span Manual..... | 89 |
| Sweptime Manual..... | 89 |
| Full Span..... | 90 |
| Last Span..... | 90 |

Span Manual

Opens an edit dialog box to enter the frequency span. The center frequency remains the same when you change the span.

The following range is allowed:

$$\text{span} = 0: 0 \text{ Hz}$$

$$\text{span} > 0: \text{span}_{\min} \leq f_{\text{span}} \leq f_{\max}$$

f_{\max} and span_{\min} are specified in the data sheet.

Remote command:

[SENSe:] FREQuency: SPAN on page 223

Sweptime Manual

Opens an edit dialog box to enter the sweep time.

| | |
|---------------------------------|---|
| Sweep time | |
| absolute max. sweep time value: | 16000 s |
| absolute min. sweep time value: | zero span: 1 µs |
| | span > 0: depends on device model (refer to data sheet) |

Allowed values depend on the ratio of span to RBW and RBW to VBW. For details refer to the data sheet.

Numeric input is always rounded to the nearest possible sweep time. For rotary knob or UPARROW/DNARROW key inputs, the sweep time is adjusted in steps either downwards or upwards.

The manual input mode of the sweep time is indicated by a green bullet next to the "SWT" display in the channel bar. If the selected sweep time is too short for the selected bandwidth and span, level measurement errors will occur due to a too short settling time for the resolution or video filters. In this case, the R&S FSVR displays the error message "UNCAL" and marks the indicated sweep time with a red bullet.

This softkey is available for RF measurements, but not for CCDF or Power vs Time measurements.

Remote command:

SWE:TIME:AUTO OFF, see [SENSe:]SWEep:TIME:AUTO on page 239
 [SENSe:]SWEep:TIME on page 239

Full Span

Sets the span to the full frequency range of the R&S FSVR specified in the data sheet. This setting is useful for overview measurements.

Remote command:

[SENSe:]FREQuency:SPAN:FULL on page 223

Last Span

Sets the span to the previous value. With this function e.g. a fast change between overview measurement and detailed measurement is possible.

Remote command:

-

3.2.7.4 Softkeys of the Amplitude Menu for RF Measurements

The following table shows all softkeys available in the "Amplitude" menu of the TD-SCDMA BTS and UE measurement application for RF measurements except for Power vs Time measurements. The softkeys in the "Amplitude" menu for CDA and Power vs Time measurements are described in chapter 3.1.1.3, "Softkeys of the Amplitude Menu", on page 41.

Ref Level..... 91
 Range..... 91
 L Range Log 100 dB..... 91
 L Range Log 50 dB..... 91
 L Range Log 10 dB..... 92

| | |
|--------------------------------------|----|
| L Range Log 5 dB..... | 92 |
| L Range Log 1 dB..... | 92 |
| L Range Log Manual..... | 92 |
| L Range Linear %..... | 92 |
| L Range Lin. Unit..... | 93 |
| Preamp On/Off..... | 93 |
| RF Atten Manual/Mech Att Manual..... | 93 |
| RF Atten Auto/Mech Att Auto..... | 94 |
| EI Atten On/Off..... | 94 |
| EI Atten Mode (Auto/Man)..... | 94 |
| Ref Level Offset..... | 95 |
| Ref Level Position..... | 95 |
| Grid Abs/Rel | 95 |
| Input (AC/DC)..... | 95 |

Ref Level

Opens an edit dialog box to enter the reference level in the current unit (dBm, dBμV, etc).

The reference level is the maximum value the AD converter can handle without distortion of the measured value. Signal levels above this value will not be measured correctly, which is indicated by the "IFOVL" status display.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel` on page 193

Range

Opens a submenu to define the display range of the level axis.

This softkey and its submenu are available for RF measurements except for Power vs Time measurements.

Range Log 100 dB ← Range

Sets the level display range to 100 dB.

Remote command:

Logarithmic scaling:

`DISP:WIND:TRAC:Y:SPAC LOG`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 195

Display range:

`DISP:WIND:TRAC:Y 100DB`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 191

Range Log 50 dB ← Range

Sets the level display range to 50 dB.

Remote command:

Logarithmic scaling:

`DISP:WIND:TRAC:Y:SPAC LOG`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 195

Display range:

`DISP:WIND:TRAC:Y 50DB`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 191

Range Log 10 dB ← Range

Sets the level display range to 10 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 195

Display range:

DISP:WIND:TRAC:Y 10DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 191

Range Log 5 dB ← Range

Sets the level display range to 5 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 195

Display range:

DISP:WIND:TRAC:Y 5DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 191

Range Log 1 dB ← Range

Sets the level display range to 1 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 195

Display range:

DISP:WIND:TRAC:Y 1DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 191

Range Log Manual ← Range

Opens an edit dialog box to define the display range of a logarithmic level axis manually.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 195

Display range:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 191

Range Linear % ← Range

Selects linear scaling for the level axis in %.

The grid is divided into decadal sections.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in % referenced to the voltage value at the position of marker 1. This is the default setting for linear scaling.

Remote command:

DISP:TRAC:Y:SPAC LIN, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 195

Range Lin. Unit ← Range

Selects linear scaling in dB for the level display range, i.e. the horizontal lines are labeled in dB.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in dB referenced to the power value at the position of marker 1.

Remote command:

DISP:TRAC:Y:SPAC LDB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 195

Preamp On/Off

Switches the preamplifier on and off.

If option R&S FSV-B22 is installed, the preamplifier is only active below 7 GHz.

If option R&S FSV-B24 is installed, the preamplifier is active for all frequencies.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:

[INPut:GAIN:STATe](#) on page 254

RF Atten Manual/Mech Att Manual

Opens an edit dialog box to enter the attenuation, irrespective of the reference level. If electronic attenuation is activated (option R&S FSV-B25 only; "EI Atten Mode Auto" softkey), this setting defines the mechanical attenuation.

The mechanical attenuation can be set in 10 dB steps.

The RF attenuation can be set in 5 dB steps (with option R&S FSV-B25: 1 dB steps).

The range is specified in the data sheet. If the current reference level cannot be set for the set RF attenuation, the reference level is adjusted accordingly.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

The RF attenuation defines the level at the input mixer according to the formula:

$$\text{level}_{\text{mixer}} = \text{level}_{\text{input}} - \text{RF attenuation}$$

Note: As of firmware version 1.63, the maximum mixer level allowed is **0 dBm**. Mixer levels above this value may lead to incorrect measurement results, which are indicated by the "OVLD" status display. The increased mixer level allows for an improved signal, but also increases the risk of overloading the instrument!

Remote command:

[INPut:ATTenuation](#) on page 248

RF Atten Auto/Mech Att Auto

Sets the RF attenuation automatically as a function of the selected reference level. This ensures that the optimum RF attenuation is always used. It is the default setting.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:

[INPut:ATTenuation:AUTO](#) on page 248

EI Atten On/Off

This softkey switches the electronic attenuator on or off. This softkey is only available with option R&S FSV-B25.

When the electronic attenuator is activated, the mechanical and electronic attenuation can be defined separately. Note however, that both parts must be defined in the same mode, i.e. either both manually, or both automatically.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

- To define the mechanical attenuation, use the [RF Atten Manual/Mech Att Manual](#) or [RF Atten Auto/Mech Att Auto](#) softkeys.
- To define the electronic attenuation, use the [EI Atten Mode \(Auto/Man\)](#) softkey.

Note: This function is not available for stop frequencies (or center frequencies in zero span) >7 GHz. In this case, the electronic and mechanical attenuation are summarized and the electronic attenuation can no longer be defined individually. As soon as the stop or center frequency is reduced below 7 GHz, this function is available again. When the electronic attenuator is switched off, the corresponding RF attenuation mode (auto/manual) is automatically activated.

Remote command:

[INPut:EATT:AUTO](#) on page 253

EI Atten Mode (Auto/Man)

This softkey defines whether the electronic attenuator value is to be set automatically or manually. If manual mode is selected, an edit dialog box is opened to enter the value. This softkey is only available with option R&S FSV-B25, and only if the electronic attenuator has been activated via the [EI Atten On/Off](#) softkey.

Note: This function is not available for stop frequencies (or center frequencies in zero span) >7 GHz. In this case, the electronic and mechanical attenuation are summarized and the electronic attenuation can no longer be defined individually. As soon as the stop or center frequency is reduced below 7 GHz, electronic attenuation is available again. If the electronic attenuation was defined manually, it must be re-defined.

The attenuation can be varied in 1 dB steps from 0 to 30 dB. Other entries are rounded to the next lower integer value.

To re-open the edit dialog box for manual value definition, select the "Man" mode again.

If the defined reference level cannot be set for the given RF attenuation, the reference level is adjusted accordingly and the warning "Limit reached" is output.

Remote command:

`INPut:EATT:AUTO` on page 253

`INPut:EATT` on page 253

Ref Level Offset

Opens an edit dialog box to enter the arithmetic level offset. This offset is added to the measured level irrespective of the selected unit. The scaling of the y-axis is changed accordingly. The setting range is ± 200 dB in 0.1 dB steps.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVEL:OFFSet` on page 194

Ref Level Position

Opens an edit dialog box to enter the reference level position, i.e. the position of the maximum AD converter value on the level axis. The setting range is from -200 to +200 %, 0 % corresponding to the lower and 100 % to the upper limit of the diagram.

Only available for RF measurements except for Power vs Time measurements.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSITION` on page 194

Grid Abs/Rel

Switches between absolute and relative scaling of the level axis (not available with "Linear" range).

Only available for RF measurements except for Power vs Time measurements.

"Abs" Absolute scaling: The labeling of the level lines refers to the absolute value of the reference level. Absolute scaling is the default setting.

"Rel" Relative scaling: The upper line of the grid is always at 0 dB. The scaling is in dB whereas the reference level is always in the set unit (for details on unit settings see the "Unit" softkey).

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE` on page 193

Input (AC/DC)

Toggles the RF input of the R&S FSVR between AC and DC coupling.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:

`INPut:COUPling` on page 249

3.2.7.5 Softkeys of the Bandwidth Menu

The following table shows all softkeys available in the "Bandwidth" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.



For Spurious Emission Measurements, the settings are defined in the "Sweep List" dialog, see the description in the base unit.

Bandwidth settings are only available for RF measurements.

| | |
|----------------------------|-----|
| Res BW Manual..... | 96 |
| Res BW Auto..... | 96 |
| Video BW Manual..... | 97 |
| Video BW Auto..... | 97 |
| Sweeptime Manual..... | 97 |
| Sweeptime Auto..... | 98 |
| Sweep Type..... | 98 |
| L Sweep..... | 99 |
| L FFT..... | 99 |
| L Auto..... | 99 |
| L FFT Filter Mode..... | 99 |
| L Auto..... | 99 |
| L Narrow..... | 99 |
| Coupling Ratio..... | 99 |
| L RBW/VBW Sine [1/1]..... | 100 |
| L RBW/VBW Pulse [.1]..... | 100 |
| L RBW/VBW Noise [10]..... | 100 |
| L RBW/VBW Manual..... | 100 |
| L Span/RBW Auto [100]..... | 101 |
| L Span/RBW Manual..... | 101 |
| L Default Coupling..... | 101 |
| Filter Type..... | 101 |

Res BW Manual

Opens an edit dialog box to enter a value for the resolution bandwidth. The available resolution bandwidths are specified in the data sheet.

For details on the correlation between resolution bandwidth and filter type refer to [chapter 3.4.3, "Selecting the Appropriate Filter Type"](#), on page 114.

Numeric input is always rounded to the nearest possible bandwidth. For rotary knob or UP/DNARROW key inputs, the bandwidth is adjusted in steps either upwards or downwards.

The manual input mode of the resolution bandwidth is indicated by a green bullet next to the "RBW" display in the channel bar.

This softkey is available for measuring the Adjacent Channel Power, the Spectrum Emission Mask, the Occupied Bandwidth and the CCDF. It is also available for Power vs Time measurements.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:AUTO` on page 217

`[SENSe:]BANDwidth|BWIDth[:RESolution]` on page 217

Res BW Auto

Couples the resolution bandwidth to the selected span (for span > 0). If you change the span, the resolution bandwidth is automatically adjusted.

This setting is recommended if you need the ideal resolution bandwidth in relation to a particular span.

This softkey is available for measuring the Adjacent Channel Power, the Occupied Bandwidth and the CCDF. It is also available for Power vs Time measurements.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:AUTO` on page 217

Video BW Manual

Opens an edit dialog box to enter the video bandwidth. The available video bandwidths are specified in the data sheet.

Numeric input is always rounded to the nearest possible bandwidth. For rotary knob or UP/DOWN key inputs, the bandwidth is adjusted in steps either upwards or downwards.

The manual input mode of the video bandwidth is indicated by a green bullet next to the "VBW" display in the channel bar.

Note: RMS detector and VBW.

If an RMS detector is used, the video bandwidth in the hardware is bypassed. Thus, duplicate trace averaging with small VBWs and RMS detector no longer occurs. However, the VBW is still considered when calculating the sweep time. This leads to a longer sweep time for small VBW values. Thus, you can reduce the VBW value to achieve more stable trace curves even when using an RMS detector. Normally, if the RMS detector is used the sweep time should be increased to get more stable trace curves. For details on detectors see [chapter 3.4.1, "Detector Overview"](#), on page 111.

This softkey is available for measuring the Adjacent Channel Power, the Spectrum Emission Mask and the Occupied Bandwidth. It is also available for Power vs Time measurements.

Remote command:

`[SENSe:]BANDwidth|BWIDth:VIDeo:AUTO` on page 219

`[SENSe:]BANDwidth|BWIDth:VIDeo` on page 219

Video BW Auto

Couples the video bandwidth to the resolution bandwidth. If you change the resolution bandwidth, the video bandwidth is automatically adjusted.

This setting is recommended if a minimum sweep time is required for a selected resolution bandwidth. Narrow video bandwidths result in longer sweep times due to the longer settling time. Wide bandwidths reduce the signal/noise ratio.

This softkey is available for measuring the Adjacent Channel Power, the Spectrum Emission Mask and the Occupied Bandwidth. It is also available for Power vs Time measurements.

Remote command:

`[SENSe:]BANDwidth|BWIDth:VIDeo:AUTO` on page 219

Sweeptime Manual

Opens an edit dialog box to enter the sweep time.

| | |
|---------------------------------|---|
| Sweep time | |
| absolute max. sweep time value: | 16000 s |
| absolute min. sweep time value: | zero span: 1 μ s |
| | span > 0: depends on device model (refer to data sheet) |

Allowed values depend on the ratio of span to RBW and RBW to VBW. For details refer to the data sheet.

Numeric input is always rounded to the nearest possible sweep time. For rotary knob or UPARROW/DNARROW key inputs, the sweep time is adjusted in steps either downwards or upwards.

The manual input mode of the sweep time is indicated by a green bullet next to the "SWT" display in the channel bar. If the selected sweep time is too short for the selected bandwidth and span, level measurement errors will occur due to a too short settling time for the resolution or video filters. In this case, the R&S FSVR displays the error message "UNCAL" and marks the indicated sweep time with a red bullet.

This softkey is available for RF measurements, but not for CCDF or Power vs Time measurements.

Remote command:

`SWE:TIME:AUTO OFF`, see [\[SENSe:\]SWEep:TIME:AUTO](#) on page 239

[\[SENSe:\]SWEep:TIME](#) on page 239

Sweeptime Auto

Couples the sweep time to the span, video bandwidth (VBW) and resolution bandwidth (RBW) (not available for zero span). If you change the span, resolution bandwidth or video bandwidth, the sweep time is automatically adjusted.

The R&S FSVR always selects the shortest sweep time that is possible without falsifying the signal. The maximum level error is < 0.1 dB, compared to using a longer sweep time.

This softkey is available for measuring the Adjacent Channel Power, the Spectrum Emission Mask and the Occupied Bandwidth.

Remote command:

[\[SENSe:\]SWEep:TIME:AUTO](#) on page 239

Sweep Type

Opens a submenu to define the sweep type.

This softkey is available for measuring the Signal Power, the Adjacent Channel Power and the Occupied Bandwidth.

This function is not available in IQ Analyzer mode or for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

In frequency sweep mode, the analyzer provides several possible methods of sweeping:

- "Sweep" on page 99
- "FFT" on page 99 (not available with 5-Pole filters, channel filters or RRC filters, see [chapter 3.4.3, "Selecting the Appropriate Filter Type"](#), on page 114)

- "Auto" on page 99

Sweep ← Sweep Type

Sets the [Sweep Type](#) to standard analog frequency sweep.

In the standard sweep mode, the local oscillator is set to provide the spectrum quasi analog from the start to the stop frequency.

Remote command:

SWE:TYPE SWE, see [\[SENSe:\]SWEep:TYPE](#) on page 240

FFT ← Sweep Type

Sets the [Sweep Type](#) to FFT mode.

The FFT sweep mode samples on a defined frequency value and transforms it to the spectrum by fast Fourier transformation (FFT).

FFT is not available when using 5-Pole filters, Channel filters or RRC filters. In this case, sweep mode is used.

Remote command:

SWE:TYPE FFT, see [\[SENSe:\]SWEep:TYPE](#) on page 240

Auto ← Sweep Type

Automatically sets the fastest available [Sweep Type](#) for the current measurement. Auto mode is set by default.

Remote command:

SWE:TYPE AUTO, see [\[SENSe:\]SWEep:TYPE](#) on page 240

FFT Filter Mode ← Sweep Type

Defines the filter mode to be used for FFT filters by defining the partial span size. The partial span is the span which is covered by one FFT analysis.

Auto ← FFT Filter Mode ← Sweep Type

The firmware determines whether to use wide or narrow filters to obtain the best measurement results.

Remote command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:FFT](#) on page 218

Narrow ← FFT Filter Mode ← Sweep Type

For an RBW \leq 10kHz, the FFT filters with the smaller partial span are used. This allows you to perform measurements near a carrier with a reduced reference level due to a narrower analog prefilter.

Remote command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:FFT](#) on page 218

Coupling Ratio

Opens a submenu to select the coupling ratios for functions coupled to the bandwidth.

This softkey and its submenu is available for measuring the Adjacent Channel Power, the Spectrum Emission Mask, the Occupied Bandwidth and the CCDF.

RBW/VBW Sine [1/1] ← Coupling Ratio

Sets the following coupling ratio:

"video bandwidth = resolution bandwidth"

This is the default setting for the coupling ratio resolution bandwidth/video bandwidth.

This is the coupling ratio recommended if sinusoidal signals are to be measured.

This setting takes effect if you define the video bandwidth automatically ([Video BW Auto](#)).

Remote command:

BAND:VID:RAT 1, see [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#)
on page 220

RBW/VBW Pulse [.1] ← Coupling Ratio

Sets the following coupling ratio:

"video bandwidth = 10 × resolution bandwidth or"

"video bandwidth = 10 MHz (= max. VBW)."

This coupling ratio is recommended whenever the amplitudes of pulsed signals are to be measured correctly. The IF filter is exclusively responsible for pulse shaping. No additional evaluation is performed by the video filter.

This setting takes effect if you define the video bandwidth automatically ([Video BW Auto](#)).

Remote command:

BAND:VID:RAT 10, see [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#)
on page 220

RBW/VBW Noise [10] ← Coupling Ratio

Sets the following coupling ratio:

"video bandwidth = resolution bandwidth/10"

At this coupling ratio, noise and pulsed signals are suppressed in the video domain. For noise signals, the average value is displayed.

This setting takes effect if you define the video bandwidth automatically ([Video BW Auto](#)).

Remote command:

BAND:VID:RAT 0.1, see [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#)
on page 220

RBW/VBW Manual ← Coupling Ratio

Activates the manual input of the coupling ratio.

The resolution bandwidth/video bandwidth ratio can be set in the range 0.001 to 1000.

This setting takes effect if you define the video bandwidth automatically ([Video BW Auto](#)).

Remote command:

BAND:VID:RAT 10, see [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#)
on page 220

Span/RBW Auto [100] ← Coupling Ratio

Sets the following coupling ratio:

"resolution bandwidth = span/100"

This coupling ratio is the default setting of the R&S FSVR.

This setting takes effect if you define the resolution bandwidth automatically ([Res BW Auto](#)).

Remote command:

BAND:VID:RAT 0.001, see [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#) on page 220

Span/RBW Manual ← Coupling Ratio

Activates the manual input of the coupling ratio.

This setting takes effect if you define the resolution bandwidth automatically ([Res BW Auto](#)).

The span/resolution bandwidth ratio can be set in the range 1 to 10000.

Remote command:

BAND:RAT 0.1, see [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:RATio](#) on page 218

Default Coupling ← Coupling Ratio

Sets all coupled functions to the default state ("AUTO").

In addition, the ratio "RBW/VBW" is set to "SINE [1/1]" and the ratio "SPAN/RBW" to 100.

This softkey is available for Power vs Time measurements.

Remote command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:AUTO](#) on page 217

[\[SENSe:\]BANDwidth|BWIDth:VIDeo:AUTO](#) on page 219

[\[SENSe:\]SWEep:TIME:AUTO](#) on page 239

Filter Type

Opens a submenu to select the filter type.

This softkey and its submenu are available for measuring the Adjacent Channel Power, the Spectrum Emission Mask, the Occupied Bandwidth and the CCDF. Instead of opening a submenu, this softkey opens the "Sweep List" dialog box to select the filter type when measuring the Spectrum Emission Mask.

The submenu contains the following softkeys:

- Normal (3 dB)
 - CISPR (6 dB)
 - MIL Std (6 dB)
 - Channel
 - RRC
 - 5-Pole (not available for sweep type "FFT")
- Note that the 6 dB bandwidths are available only with option R&S FSV-K54.

For detailed information on filters see [chapter 3.4.3, "Selecting the Appropriate Filter Type"](#), on page 114 and [chapter 3.4.4, "List of Available RRC and Channel Filters"](#), on page 115.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:TYPE` on page 218

3.2.7.6 Softkeys of the Sweep Menu

The following table shows all softkeys available in the "Sweep" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

| | |
|----------------------------|-----|
| Continuous Sweep..... | 102 |
| Single Sweep..... | 102 |
| Continue Single Sweep..... | 102 |
| Sweeptime Manual..... | 103 |
| Sweeptime Auto..... | 103 |
| Sweep Type..... | 103 |
| L Sweep..... | 104 |
| L FFT..... | 104 |
| L Auto..... | 104 |
| L FFT Filter Mode..... | 104 |
| L Auto..... | 104 |
| L Narrow..... | 105 |
| Sweep Count..... | 105 |
| Sweep Points..... | 105 |

Continuous Sweep

Sets the continuous sweep mode: the sweep takes place continuously according to the trigger settings. This is the default setting.

The trace averaging is determined by the sweep count value (see the "Sweep Count" softkey, "[Sweep Count](#)" on page 46).

Remote command:

`INIT:CONT ON`, see `INITiate<n>:CONTinuous` on page 260

Single Sweep

Sets the single sweep mode: after triggering, starts the number of sweeps that are defined by using the [Sweep Count](#) softkey. The measurement stops after the defined number of sweeps has been performed.

Remote command:

`INIT:CONT OFF`, see `INITiate<n>:CONTinuous` on page 260

Continue Single Sweep

Repeats the number of sweeps set by using the [Sweep Count](#) softkey, without deleting the trace of the last measurement.

This is particularly of interest when using the trace configurations "Average" or "Max Hold" to take previously recorded measurements into account for averaging/maximum search.

Remote command:

[INITiate<n>:CONMeas](#) on page 259

Sweeptime Manual

Opens an edit dialog box to enter the sweep time.

| Sweep time | |
|---------------------------------|---|
| absolute max. sweep time value: | 16000 s |
| absolute min. sweep time value: | zero span: 1 μ s |
| | span > 0: depends on device model (refer to data sheet) |

Allowed values depend on the ratio of span to RBW and RBW to VBW. For details refer to the data sheet.

Numeric input is always rounded to the nearest possible sweep time. For rotary knob or UPARROW/DNARROW key inputs, the sweep time is adjusted in steps either downwards or upwards.

The manual input mode of the sweep time is indicated by a green bullet next to the "SWT" display in the channel bar. If the selected sweep time is too short for the selected bandwidth and span, level measurement errors will occur due to a too short settling time for the resolution or video filters. In this case, the R&S FSVR displays the error message "UNCAL" and marks the indicated sweep time with a red bullet.

This softkey is available for RF measurements, but not for CCDF or Power vs Time measurements.

Remote command:

[SWE:TIME:AUTO OFF](#), see [\[SENSe:\]SWEep:TIME:AUTO](#) on page 239

[\[SENSe:\]SWEep:TIME](#) on page 239

Sweeptime Auto

Couples the sweep time to the span, video bandwidth (VBW) and resolution bandwidth (RBW) (not available for zero span). If you change the span, resolution bandwidth or video bandwidth, the sweep time is automatically adjusted.

The R&S FSVR always selects the shortest sweep time that is possible without falsifying the signal. The maximum level error is < 0.1 dB, compared to using a longer sweep time.

This softkey is available for measuring the Adjacent Channel Power, the Spectrum Emission Mask and the Occupied Bandwidth.

Remote command:

[\[SENSe:\]SWEep:TIME:AUTO](#) on page 239

Sweep Type

Opens a submenu to define the sweep type.

This softkey is available for measuring the Signal Power, the Adjacent Channel Power and the Occupied Bandwidth.

This function is not available in IQ Analyzer mode or for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

In frequency sweep mode, the analyzer provides several possible methods of sweeping:

- "Sweep" on page 99
- "FFT" on page 99 (not available with 5-Pole filters, channel filters or RRC filters, see [chapter 3.4.3, "Selecting the Appropriate Filter Type"](#), on page 114)
- "Auto" on page 99

Sweep ← Sweep Type

Sets the [Sweep Type](#) to standard analog frequency sweep.

In the standard sweep mode, the local oscillator is set to provide the spectrum quasi analog from the start to the stop frequency.

Remote command:

`SWE:TYPE SWE`, see [\[SENSe:\]SWEep:TYPE](#) on page 240

FFT ← Sweep Type

Sets the [Sweep Type](#) to FFT mode.

The FFT sweep mode samples on a defined frequency value and transforms it to the spectrum by fast Fourier transformation (FFT).

FFT is not available when using 5-Pole filters, Channel filters or RRC filters. In this case, sweep mode is used.

Remote command:

`SWE:TYPE FFT`, see [\[SENSe:\]SWEep:TYPE](#) on page 240

Auto ← Sweep Type

Automatically sets the fastest available [Sweep Type](#) for the current measurement. Auto mode is set by default.

Remote command:

`SWE:TYPE AUTO`, see [\[SENSe:\]SWEep:TYPE](#) on page 240

FFT Filter Mode ← Sweep Type

Defines the filter mode to be used for FFT filters by defining the partial span size. The partial span is the span which is covered by one FFT analysis.

Auto ← FFT Filter Mode ← Sweep Type

The firmware determines whether to use wide or narrow filters to obtain the best measurement results.

Remote command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:FFT](#) on page 218

Narrow ← FFT Filter Mode ← Sweep Type

For an RBW \leq 10kHz, the FFT filters with the smaller partial span are used. This allows you to perform measurements near a carrier with a reduced reference level due to a narrower analog prefilter.

Remote command:

[SENSe:]BANDwidth|BWIDth[:RESolution]:FFT on page 218

Sweep Count

Opens an edit dialog box to enter the number of sweeps to be performed in the single sweep mode. Values from 0 to 32767 are allowed. If the values 0 or 1 are set, one sweep is performed. The sweep count is applied to all the traces in a diagram.

If the trace configurations "Average", "Max Hold" or "Min Hold" are set, the sweep count value also determines the number of averaging or maximum search procedures.

In continuous sweep mode, if sweep count = 0 (default), averaging is performed over 10 sweeps. For sweep count = 1, no averaging, maxhold or minhold operations are performed.

Remote command:

[SENSe:]SWEep:COUNT on page 234

Sweep Points

Opens an edit dialog box to enter the number of measured values to be collected during one sweep.

- Entry via rotary knob:
 - In the range from 101 to 1001, the sweep points are increased or decreased in steps of 100 points.
 - In the range from 1001 to 32001, the sweep points are increased or decreased in steps of 1000 points.
- Entry via keypad:
 - All values in the defined range can be set.

The default value is 691 sweep points.

This softkey is available for RF measurements.

Remote command:

[SENSe:]SWEep:POINTs on page 239

3.2.7.7 Softkeys of the Input/Output Menu for RF Measurements

The following chapter describes all softkeys available in the "Input/Output" menu for RF measurements. For CDA measurements, see [chapter 3.1.1.8, "Softkeys of the Input/Output Menu for CDA Measurements"](#), on page 49.

| | |
|--------------------|-----|
| Input (AC/DC)..... | 106 |
| Noise Source..... | 106 |
| Video Output..... | 106 |
| Power Sensor..... | 106 |
| Trigger Out..... | 106 |

Input (AC/DC)

Toggles the RF input of the R&S FSVR between AC and DC coupling.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:

[INPut:COUPling](#) on page 249

Noise Source

Switches the supply voltage for an external noise source on or off. For details on connectors refer to the R&S FSVR Quick Start Guide, "Front and Rear Panel" chapter.

Remote command:

[DIAGnostic<n>:SERVice:NSource](#) on page 258

Video Output

Turns output on the IF / Video output available with option R&S FSV-B5 on and off.

When you turn on the output, you can select to output either the intermediate frequency or the video signal.

Note: Video output does not return valid values in IQ or FFT mode.

Remote command:

[OUTPut:IF VID](#) , see [OUTPut:IF\[:SOURce\]](#) on page 262

Power Sensor

For precise power measurement a power sensor can be connected to the instrument via the front panel (USB connector) or the rear panel (power sensor, option R&S FSV-B5). The Power Sensor Support firmware option (R&S FSV-K9) provides the power measurement functions for this test setup.

This softkey is only available if the R&S FSVR option Power Sensor (R&S FSV-K9) is installed.

For details see the chapter "Instrument Functions Power Sensor (K9)" in the base unit description.

This softkey is available for RF measurements.

Trigger Out

Sets the Trigger Out port in the Additional Interfaces (option R&S FSV-B5 only) to low or high. Thus, you can trigger an additional device via the external trigger port, for example.

This softkey is available for RF measurements.

Remote command:

[OUTPut:TRIGger](#) on page 262

3.3 Working with the Frequency Mask Trigger

The Frequency Mask Trigger (FMT) is a trigger designed to trigger measurements if the signal violates certain conditions with respect to a frequency mask that you can define prior to the measurement.



Availability of the frequency mask trigger

Note that the frequency mask trigger is available for code domain analysis only.

To create and edit a frequency mask, you can access the corresponding dialog box via the "Frequency Mask" softkey in the trigger menu.

Opening the dialog box also opens a softkey submenu that contains various functionality to work with frequency masks.

| Position | Value |
|--------------|-----------|
| -12.0000 MHz | 0.00 dB |
| -4.0000 MHz | -40.00 dB |
| 4.0000 MHz | -40.00 dB |
| 12.0000 MHz | 0.00 dB |

- 1 = Name and description of the frequency mask
- 2 = Mask point table: table containing all mask points
- 3 = Preview pane
- 4 = Frequency mask preview: the area the frequency mask currently covers is red
- 5 = Frequency mask data points: define the shape of the frequency mask
- 6 = Preview of the current measurement trace; type and shape depend on currently selected measurement
- 7 = Insert button: insert a new data points
- 8 = Shift X button: shifts the complete frequency mask horizontally
- 9 = Delete button: deletes an existing data points
- 10 = Shift Y button: shifts the complete frequency mask vertically
- 11 = Y-Axis Rel/Abs button: switches between relative (dB) and absolute (dBm) amplitude values

- 12 = Adapt Mask button: creates a frequency mask automatically
- 13 = Trigger Condition menu: sets the trigger condition
- 14 = Activate Line buttons: select the upper and lower frequency mask; check marks next to the buttons activate and deactivate a line

3.3.1 Creating a Frequency Mask

Upon opening the "Edit Frequency Mask" dialog box, the R&S FSVR already provides a basic structure of an upper frequency mask in the live preview window.

It is also possible to create a new mask by pressing the "New Mask" softkey. The "New Mask" softkey resets the current shape of the mask to its default state.

Labelling a frequency mask

Assign a name to the frequency mask in the "Name" field. Activate the input in the "Name" field either by touching it or via the "Edit Name" softkey. This is also the save name of the frequency mask.

In addition to naming the mask, you can also comment on the frequency mask you are working on in the "Comment" field. Again, activate the input either by touching it or with the "Edit Comment" softkey.

Remote command:

[CALCulate<n>:MASK:COMMENT](#) on page 173

[CALCulate<n>:MASK:NAME](#) on page 175

Defining the frequency mask span

Define the span of the frequency mask.

The span defines the range that the frequency mask covers on the frequency axis.

Remote command:

[CALCulate<n>:MASK:SPAN](#) on page 175

Working with upper and lower lines

A frequency mask may have an upper and a lower threshold, with the signal in between. The checkboxes next to the "Upper Line" and "Lower Line" buttons activate or deactivate the corresponding line. Note that it is not possible to deactivate both lines.

You can select the line you want to edit with the "Upper Line" / "Lower Line" buttons or by touching the corresponding area in the preview to apply any changes. The buttons turn blue if a line is selected and the R&S FSVR shows the data points in the area covered by the mask in the preview pane.

Remote command:

[CALCulate<n>:MASK:LOWer\[:STATe\]](#) on page 174

[CALCulate<n>:MASK:UPPer\[:STATe\]](#) on page 176

Setting the trigger condition

To make the trigger work, you need to set a trigger condition with the "Trigger Condition" button. The R&S FSVR supports four conditions.

| | |
|------------|---|
| "Entering" | Activates the trigger as soon as the signal enters the frequency mask. To arm the trigger, the signal initially has to be outside the frequency mask. |
| "Leaving" | Activates the trigger as soon as the signal leaves the frequency mask. To arm the trigger, the signal initially has to be inside the frequency mask. |

Remote command:

`TRIGger<n>[:SEquence]:MASK:CONDition` on page 257

3.3.2 Editing Mask Points

You can adjust the frequency mask any way you want by adding, removing and repositioning frequency mask data points.

Data points define the shape of the frequency mask. In the preview pane, the R&S FSVR visualizes data points as blue circles. In addition, all data point positions are listed in the data point table. The number of data points is limited to 801.

Data points are defined by two values. The first value defines the position of the data point on the horizontal (frequency) axis. Frequency information is relative to the center frequency.

Note that in realtime mode, the span depends on the realtime bandwidth. That also means that the distance of a data point to the center frequency can never exceed 20 MHz as the maximum realtime bandwidth is 40 MHz.

The second value defines the position of the data point on the vertical (level) axis. By default, level information is relative to the reference level. You can, however, turn the level axis to absolute scaling with the "Y-Axis Abs/Rel" button. This also changes the unit of the vertical axis (dB for relative data points, dBm for absolute data points).

Adding data points

To add a new data point, press the "Insert" button or the "Insert Value Above" softkey. The R&S FSVR always adds the data point to the left (or in case of the table, above) of the currently selected data point. The currently selected data point is highlighted gray in the table. If no data point was selected previously, the buttons add a new point next to the very first one.

Deleting data points

The "Delete" button or the "Delete Value" softkey remove a data point from the mask. The R&S FSVR deletes the currently selected data point. If no data point is selected, it deletes the first one. The "Delete" button is inactive in that case.

Positioning data points

There are two ways to move a single data point.

In the preview pane, you can drag around the data points on the touchscreen or with a mouse and position it roughly in the place you want it to be. A more exact method is to edit the data point table itself and enter the frequencies and levels as you need.

Remote command:

`CALCulate<n>:MASK:LOWer[:DATA]` on page 174

`CALCulate<n>:MASK:UPPer[:DATA]` on page 176

Shifting mask points as a whole

With the "Shift X" and "Shift Y" buttons you are able to move all mask points of a frequency mask as one. The "Shift X" button moves the mask point set horizontally, while the "Shift Y" button moves them vertically. This is an easy method to move mask points if the relative position of mask points to each other is alright already without adjusting each one by itself.

Remote command:

`CALCulate<n>:MASK:LOWer:SHIFt:X` on page 173

`CALCulate<n>:MASK:LOWer:SHIFt:Y` on page 174

`CALCulate<n>:MASK:UPPer:SHIFt:X` on page 176

`CALCulate<n>:MASK:UPPer:SHIFt:Y` on page 176

Automatic alignment of the frequency mask

Instead of defining the position of every data point by hand, the R&S FSVR is able to shape the frequency mask according to the shape of the current signal. On pressing the "Auto Set Mask" button, the R&S FSVR forms the frequency mask around the current spectrum.

Note that the automatic alignment of the frequency mask works only for the upper frequency mask.

Remote command:

`CALCulate<n>:MASK:UPPer[:DATA]` on page 176

3.3.3 Managing Frequency Masks

To be able to reuse or edit a frequency mask that you have defined later, you can save and restore particular frequency mask configurations.

The R&S FSVR stores files that contain such configurations on its internal hard disk.

Save Mask

The "Save" softkey opens a dialog box to save the current frequency mask configuration in a file.

If you do not name the file in the dialog box, the R&S FSVR names the file like the name of the frequency mask itself.

Load Mask

The "Load" softkey opens a dialog box to restore a frequency mask.

The dialog box contains all frequency masks already on the hard disk of the R&S FSVR. Select the mask you need and confirm the selection with the "Load" button.

Remote command:

Path selection:

`CALCulate<n>:MASK:CDIRectory` on page 172

Load mask:

`CALCulate<n>:MASK:NAME` on page 175

Delete Mask

The Delete softkey opens a dialog box to delete a previously saved frequency mask.

The "Delete" button deletes the file. Note that you have to confirm the deletion process.

Remote command:

`CALCulate<n>:MASK:DELeTe` on page 173

3.4 Further Information

| | | |
|--------|--|-----|
| 3.4.1 | Detector Overview..... | 111 |
| 3.4.2 | Trace Mode Overview..... | 112 |
| 3.4.3 | Selecting the Appropriate Filter Type..... | 114 |
| 3.4.4 | List of Available RRC and Channel Filters..... | 115 |
| 3.4.5 | Ranges and Range Settings..... | 116 |
| 3.4.6 | ASCII File Export Format..... | 117 |
| 3.4.7 | Format Description of Spectrum Emission Mask XML Files..... | 118 |
| 3.4.8 | Provided XML Files for the Spectrum Emission Mask Measurement..... | 124 |
| 3.4.9 | Fast Spectrum Emission Mask Measurements..... | 126 |
| 3.4.10 | Predefined CP/ACLR Standards..... | 128 |
| 3.4.11 | Optimized Settings for CP/ACLR Test Parameters..... | 129 |

3.4.1 Detector Overview

The measurement detector for the individual display modes can be selected directly by the user or set automatically by the R&S FSVR. The detector activated for the specific trace is indicated in the corresponding trace display field by an abbreviation.

The detectors of the R&S FSVR are implemented as pure digital devices. They collect signal power data within each measured point during a sweep. The default number of sweep points is 691. The following detectors are available:

Table 3-1: Detector types

| Detector | Indicator | Function |
|--------------------------|-----------|---|
| Auto Peak | Ap | Determines the maximum and the minimum value within a measurement point (not available for SEM) |
| Positive Peak | Pk | Determines the maximum value within a measurement point |
| Negative Peak (min peak) | Mi | Determines the minimum value within a measurement point |
| RMS | Rm | Determines the root mean square power within a measurement point |
| Average | Av | Determines the linear average power within a measurement point |
| Sample | Sa | Selects the last value within a measurement point |

The result obtained from the selected detector within a measurement point is displayed as the power value at this measurement point.

All detectors work in parallel in the background, which means that the measurement speed is independent of the detector combination used for different traces.



Number of measured values

During a frequency sweep, the R&S FSVR increments the first local oscillator in steps that are smaller than approximately 1/10 of the bandwidth. This ensures that the oscillator step speed is conform to the hardware settling times and does not affect the precision of the measured power.

The number of measured values taken during a sweep is independent of the number of oscillator steps. It is always selected as a multiple or a fraction of 691 (= default number of trace points displayed on the screen). Choosing less than 691 measured values (e.g. 125 or 251) will lead to an interpolated measurement curve, choosing more than 691 points (e.g. 1001, 2001 ...) will result in several measured values being overlaid at the same frequency position.



RMS detector and VBW

If the RMS detector is selected, the video bandwidth in the hardware is bypassed. Thus, duplicate trace averaging with small VBWs and RMS detector no longer occurs. However, the VBW is still considered when calculating the sweep time. This leads to a longer sweep time for small VBW values. Thus, you can reduce the VBW value to achieve more stable trace curves even when using an RMS detector. Normally, if the RMS detector is used the sweep time should be increased to get more stable trace curves.

3.4.2 Trace Mode Overview

The traces can be activated individually for a measurement or frozen after completion of a measurement. Traces that are not activate are hidden. Each time the trace mode is changed, the selected trace memory is cleared.

The R&S FSVR offers 6 different trace modes:

Clear Write

Overwrite mode: the trace is overwritten by each sweep. This is the default setting.

All available detectors can be selected.

Remote command:

DISP:TRAC:MODE WRIT, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 190

Max Hold

The maximum value is determined over several sweeps and displayed. The R&S FSVR saves the sweep result in the trace memory only if the new value is greater than the previous one.

The detector is automatically set to "Positive Peak".

This mode is especially useful with modulated or pulsed signals. The signal spectrum is filled up upon each sweep until all signal components are detected in a kind of envelope.

This mode is not available for statistics measurements.

Remote command:

DISP:TRAC:MODE MAXH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 190

Min Hold

The minimum value is determined from several measurements and displayed. The R&S FSVR saves the smallest of the previously stored/currently measured values in the trace memory.

The detector is automatically set to "Negative Peak".

This mode is useful e.g. for making an unmodulated carrier in a composite signal visible. Noise, interference signals or modulated signals are suppressed whereas a CW signal is recognized by its constant level.

This mode is not available for statistics measurements.

Remote command:

DISP:TRAC:MODE MINH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 190

Average

The average is formed over several sweeps. The [Sweep Count](#) determines the number of averaging procedures.

All available detectors can be selected. If the detector is automatically selected, the sample detector is used (see [chapter 3.4.1, "Detector Overview"](#), on page 111).


This mode is not available for statistics measurements.

Remote command:

DISP:TRAC:MODE AVER, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 190

View

The current contents of the trace memory are frozen and displayed.

Note: If a trace is frozen, the instrument settings, apart from level range and reference level (see below), can be changed without impact on the displayed trace. The fact that the displayed trace no longer matches the current instrument setting is indicated by the  icon on the tab label.

If the level range or reference level is changed, the R&S FSVR automatically adapts the measured data to the changed display range. This allows an amplitude zoom to be made after the measurement in order to show details of the trace.

Remote command:

DISP:TRAC:MODE VIEW, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 190

Blank

Hides the selected trace.

Remote command:

DISP:TRAC OFF, see [DISPlay\[:WINDow<n>\]:TRACe<t>\[:STATe\]](#) on page 191

3.4.3 Selecting the Appropriate Filter Type

All resolution bandwidths are realized with digital filters.

The video filters are responsible for smoothing the displayed trace. Using video bandwidths that are small compared to the resolution bandwidth, only the signal average is displayed and noise peaks and pulsed signals are repressed. If pulsed signals are to be measured, it is advisable to use a video bandwidth that is large compared to the resolution bandwidth ($VBW * 10 \times RBW$) for the amplitudes of pulses to be measured correctly.

The following filter types are available:

- Normal (3dB) (Gaussian) filters
The Gaussian filters are set by default. The available bandwidths are specified in the data sheet.
- CISPR (6 dB) filters
- MIL Std (6 dB) filters
Note that the 6 dB bandwidths are available only with option R&S FSV-K54.
- Channel filters
For details see [chapter 3.4.4, "List of Available RRC and Channel Filters"](#), on page 115 .
Channel filters do not support FFT mode.
- RRC filters
For details see [chapter 3.4.4, "List of Available RRC and Channel Filters"](#), on page 115 .
RRC filters do not support FFT mode.
- 5-Pole filters
The available bandwidths are specified in the data sheet.

5-Pole filters do not support FFT mode.

3.4.4 List of Available RRC and Channel Filters

For power measurement a number of especially steep-edged channel filters are available (see the following table). The indicated filter bandwidth is the 3 dB bandwidth. For RRC filters, the fixed roll-off factor (α) is also indicated.

Table 3-2: Filter types

| Filter Bandwidth | Filter Type | Application |
|-----------------------|-------------|--------------------------------|
| 100 Hz | CFILter | |
| 200 Hz | CFILter | A0 |
| 300 Hz | CFILter | |
| 500 Hz | CFILter | |
| | | |
| 1 kHz | CFILter | |
| 1.5 kHz | CFILter | |
| 2 kHz | CFILter | |
| 2.4 kHz | CFILter | SSB |
| 2.7 kHz | CFILter | |
| 3 kHz | CFILter | |
| 3.4 kHz | CFILter | |
| 4 kHz | CFILter | DAB, Satellite |
| 4.5 kHz | CFILter | |
| 5 kHz | CFILter | |
| 6 kHz | CFILter | |
| 6 kHz, $\alpha=0.2$ | RRC | APCO |
| 8.5 kHz | CFILter | ETS300 113 (12.5 kHz channels) |
| 9 kHz | CFILter | AM Radio |
| | | |
| 10 kHz | CFILter | |
| 12.5 kHz | CFILter | CDMAone |
| 14 kHz | CFILter | ETS300 113 (20 kHz channels) |
| 15 kHz | CFILter | |
| 16 kHz | CFILter | ETS300 113 (25 kHz channels) |
| 18 kHz, $\alpha=0.35$ | RRC | TETRA |
| 20 kHz | CFILter | |

| Filter Bandwidth | Filter Type | Application |
|-------------------|-------------|-----------------------|
| 21 kHz | CFILter | PDC |
| 24.3 kHz, a=0.35 | RRC | IS 136 |
| 25 kHz | CFILter | |
| 30 kHz | CFILter | CDPD, CDMAone |
| 50 kHz | CFILter | |
| | | |
| 100 kHz | CFILter | |
| 150 kHz | CFILter | FM Radio |
| 192 kHz | CFILter | PHS |
| 200 kHz | CFILter | |
| 300 kHz | CFILter | |
| 500 kHz | CFILter | J.83 (8-VSB DVB, USA) |
| | | |
| 1 MHz | CFILter | CDMAone |
| 1.228 MHz | CFILter | CDMAone |
| 1.28 MHz, a=0.22 | RRC | |
| 1.5 MHz | CFILter | DAB |
| 2 MHz | CFILter | |
| 3 MHz | CFILter | |
| 3.75 MHz | CFILter | |
| 3.84 MHz, a=0.22 | RRC | W-CDMA 3GPP |
| 4.096 MHz, a=0.22 | RRC | W-CDMA NTT DOCoMo |
| 5 MHz | CFILter | |
| 20 MHz | CFILter | |
| 28 MHz | CFILter | |
| 40 MHz | CFILter | |

3.4.5 Ranges and Range Settings

In the Spectrum Emission Mask measurements, a range defines a segment for which you can define the following parameters separately:

- Start and stop frequency
- RBW
- VBW
- Sweep time

- Sweep points
- Reference level
- Attenuator settings
- Limit values

Via the sweep list, you define the ranges and their settings. For details on settings refer to "[Sweep List dialog box](#)" on page 69.

For details on defining the limits (masks) see the base unit description "Working with Lines in SEM".

The following rules apply to ranges:

- The minimum span of a range is 20 Hz.
- The individual ranges must not overlap (but need not directly follow one another).
- The maximum number of ranges is 20.
- A minimum of three ranges is mandatory.
- The reference range cannot be deleted (it is marked in blue color).
- The reference range has to be centered on the center frequency.
- The minimum span of the reference range is given by the current TX Bandwidth.
- Frequency values for each range have to be defined relative to the center frequency.

In order to change the start frequency of the first range or the stop frequency of the last range, select the appropriate span with the SPAN key. If you set a span that is smaller than the overall span of the ranges, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz. The first and last ranges are adapted to the given span as long as the minimum span of 20 Hz is not violated.



Symmetrical ranges

You can easily define a sweep list with symmetrical range settings, i.e. the ranges to the left and right of the center range are defined symmetrically. In the "Sweep List" menu, select the "Symmetrical Setup" softkey to activate symmetrical setup mode. The current sweep list configuration is changed to define a symmetrical setup regarding the reference range. The number of ranges to the left of the reference range is reflected to the right, i.e. any missing ranges on the right are inserted, while superfluous ranges are removed. The values in the ranges to the right of the reference range are adapted symmetrically to those in the left ranges.

For details see "[Symmetric Setup](#)" on page 73.

Symmetrical ranges fulfill the conditions required for "Fast SEM" mode (see [chapter 3.4.9, "Fast Spectrum Emission Mask Measurements"](#), on page 126).

3.4.6 ASCII File Export Format

The data of the file header consist of three columns, each separated by a semicolon: parameter name; numeric value; basic unit. The data section starts with the keyword "Trace <n>" (<n> = number of stored trace), followed by the measured data in one or

several columns (depending on measurement) which are also separated by a semicolon.

| File contents: header and data section | Description |
|--|---------------------------|
| Type;FSVR; | |
| Version;1.45; | |
| Date;01.Apr 2010; | Date of data set storage |
| Screen;A; | Instrument mode |
| Points per Symbol;4; | Points per symbol |
| x Axis Start;-13;sym; | Start value of the x axis |
| x Axis Stop;135;sym; | Stop value of the x axis |
| Ref value y axis;-10.00;dBm; | Y axis reference value |
| Ref value position;100;%; | Y axis reference position |
| Trace;1; | Trace number |
| Meas;Result; | Result type |
| Meas Signal;Magnitude; | Result display |
| Demodulator;Offset QPSK; | Demodulation type |
| ResultMode;Trace; | Result mode |
| x unit;sym; | Unit of the x axis |
| y unit;dBm; | Unit of the y axis |
| Trace Mode;Clear Write; | Trace mode |
| Values;592; | Number of results |
| <values> | List of results |

3.4.7 Format Description of Spectrum Emission Mask XML Files

The files for importing range settings are in XML format and therefore obey the rules of the XML standard. Below, the child nodes, attributes, and structure defined for the data import is described. Build your own XML files according to these conventions because the R&S FSVR can only interpret XML files of a known structure. For example files look in the C:\r_s\instr\sem_std directory.

| Spectrum Emission Mask | | Standard: W-CDMA 3GPP (39,43)dBm DL | | | | |
|------------------------|------------|-------------------------------------|---------------|-------------|----------------|-----------|
| Tx Power -47.93 dBm | | Tx Bandwidth 3.840 MHz | | | RBW 30.000 kHz | |
| Range Low | Range Up | RBW | Frequency | Power Abs | Power Rel | ΔLimit |
| -12.750 MHz | -8.000 MHz | 1.000 MHz | 14.99094 GHz* | -74.76 dBm* | -26.83 dB* | 27.67 dB* |
| -8.000 MHz | -4.000 MHz | 1.000 MHz | 14.99598 GHz | -36.79 dBm | 11.14 dB | -25.29 dB |
| -4.000 MHz | -3.515 MHz | 30.000 kHz | 14.99628 GHz | -100.18 dBm | -52.25 dB | -75.68 dB |
| -3.515 MHz | -2.715 MHz | 30.000 kHz | 14.99648 GHz | -103.55 dBm | -55.63 dB | -79.05 dB |
| -2.715 MHz | -2.515 MHz | 30.000 kHz | 14.99747 GHz | -108.91 dBm | -60.98 dB | -96.41 dB |
| 2.515 MHz | 2.715 MHz | 30.000 kHz | 15.00251 GHz | -48.25 dBm | -0.32 dB | -35.75 dB |
| 2.715 MHz | 3.515 MHz | 30.000 kHz | 15.00272 GHz | -52.48 dBm | -4.56 dB | -39.98 dB |
| 3.515 MHz | 4.000 MHz | 30.000 kHz | 15.00398 GHz | -74.53 dBm | -26.60 dB | -50.03 dB |
| 4.000 MHz | 8.000 MHz | 1.000 MHz | 15.00769 GHz | -74.76 dBm | -26.83 dB | -63.26 dB |
| 8.000 MHz | 12.750 MHz | 1.000 MHz | 15.01273 GHz* | -36.79 dBm* | 11.14 dB* | 65.64 dB* |

Fig. 3-2: Example Spectrum emission mask standard file (PowerClass_39_43.xml)



Be sure to follow the structure exactly as shown below or else the R&S FSVR is not able to interpret the XML file and error messages are shown on the screen. Therefore, we recommend you make a copy of an existing file (see [Save As Standard](#) softkey) and edit the copy of the file.

Alternatively, edit the settings using the "Spectrum Emission Mask" softkey and the [Sweep List dialog box](#) and save the XML file with the [Save As Standard](#) softkey afterwards. This way, no modifications have to be done in the XML file itself.

Basically, the file consists of three elements that can be defined:

- The "BaseFormat" element
- The "PowerClass" element
- The "Range" element

The "BaseFormat" element

It carries information about basic settings. In this element only the "ReferencePower" child node has any effects on the measurement itself. The other attributes and child nodes are used to display information about the Spectrum Emission Mask Standard on the measurement screen. The child nodes and attributes of this element are shown in [table 3-3](#).

In the example above (PowerClass_39_43.xml under C:\r_s\instr\sem_std\WCDMA\3GPP, see [figure 3-2](#)), these attributes are defined as follows:

- Standard="W-CDMA 3GPP"
- LinkDirection="DL"
- PowerClass="(39,43)dBm"

The "PowerClass" element

It is embedded in the "BaseFormat" element and contains settings information about the power classes. Up to four different power classes can be defined. For details refer to the "Sweep List" softkey ("[Sweep List](#)" on page 69) and the corresponding parameter description. The child nodes and attributes of this element are shown in [table 3-4](#).

The "Range" element

This element is embedded in the "PowerClass" element. It contains the settings information of the range. There have to be at least three defined ranges: one reference range and at least one range to either side of the reference range. The maximum number of ranges is 20. Note that the R&S FSVR uses the same ranges in each power class. Therefore, the contents of the ranges of each defined power class have to be identical to the first power class. An exception are the Start and Stop values of the two Limit nodes that are used to determine the power class. Note also, that there are two Limit nodes to be defined: one that gives the limit in absolute values and one in relative values. Make sure units for the Start and Stop nodes are identical for each Limit node.

For details refer to the "Sweep List" softkey ("[Sweep List](#)" on page 69) and the corresponding parameter description. The child nodes and attributes of this element are shown in [table 3-5](#).

The following tables show the child nodes and attributes of each element and show if a child node or attribute is mandatory for the R&S FSVR to interpret the file or not. Since the hierarchy of the XML can not be seen in the tables, either view one of the default files already stored on the R&S FSVR in the "C:\r_s\instr\sem_std" directory or check the structure as shown below.

Below, a basic example of the structure of the file is shown, containing all mandatory attributes and child nodes. Note that the "PowerClass" element and the range element are themselves elements of the "BaseFormat" element and are to be inserted where noted. The separation is done here simply for reasons of a better overview. Also, no example values are given here to allow a quick reference to the tables above. Italic font shows the placeholders for the values.

- The "BaseFormat" element is structured as follows:
 - `<RS_SEM_ACP_FileFormat Version=""1.0.0.0"">`
`<Name>"Standard"</Name>`
`<Instrument>`
`<Type>"Instrument Type"</Type>`
`<Application>"Application"</Application>`
`</Instrument>`
`<LinkDirection Name=""Name"">`
`<ReferencePower>`
`<Method>"Method"</Method>`
`</ReferencePower>`
`<PowerClass Index=""n"">`
`<!-- For contents of the PowerClass node see`
`table 3-4 -->`
`<!-- Define up to four PowerClass nodes -->`
`</PowerClass>`
`</LinkDirection>`
`</RS_SEM_ACP_File>`
- The "PowerClass" element is structured as follows:
 - `<PowerClass Index=""n"">`
`<StartPower Unit=""dBm"" InclusiveFlag=""true"" Value=""StartPowerValue""/>`
`<StopPower Unit=""dBm"" InclusiveFlag=""false"" Value=""StopPowerValue""/>`
`<DefaultLimitFailMode>"Limit Fail Mode"</DefaultLimitFailMode>`


```

<Range Index=""n">
<!-- For contents of the Range node see table 3-5 -->
<!-- Define up to twenty Range nodes -->
</Range>
...
</PowerClass>

```

- The "Range" element is structured as follows:
 - <Range Index=""n">
 - <Name=""Name">
 - <ChannelType>"Channel Type"</Channel Type>
 - <WeightingFilter>
 - <Type>"FilterType"</Type>
 - <RollOffFactor>"Factor"</RollOffFactor>
 - <Bandwith>"Bandwidth"</Bandwidth>
 - </WeightingFilter>
 - <FrequencyRange>
 - <Start>"RangeStart"</Start>
 - <Stop>"RangeStop"</Stop>
 - </FrequencyRange>
 - <Limit>
 - <Start Unit=""Unit"" Value=""Value"/>
 - <Stop Unit=""Unit"" Value=""Value"/>
 - </Limit>
 - <Limit>
 - <Start Unit=""Unit"" Value=""Value"/>
 - <Stop Unit=""Unit"" Value=""Value"/>
 - </Limit>
 - <RBW Bandwidth=""Bandwidth"" Type=""FilterType"/>
 - <VBW Bandwidth=""Bandwidth"/>
 - <Detector>"Detector"</Detector>
 - <Sweep Mode=""SweepMode"" Time=""SweepTime"/>
 - <Amplitude>
 - <ReferenceLevel Unit=""dBm"" Value=""Value"/>
 - <RFAttenuation Mode=""Auto"" Unit=""dB"" Value=""Value"/>
 - <Preamplifier State=""State"/>
 - </Amplitude>

Table 3-3: Attributes and child nodes of the BaseFormat element

| Child Node | Attribute | Value | Parameter Description | Mand. |
|------------|-------------------|------------------------|-------------------------|-------|
| | FileFormatVersion | 1.0.0.0 | | Yes |
| | Date | YYYY-MM-DD HH:MM:SS | Date in ISO 8601 format | No |
| Name | | <string> | Name of the standard | Yes |
| Instrument | Type | FSL | Name of the instrument | No |
| | Application | SA K72 K82 | Name of the application | No |

| Child Node | Attribute | Value | Parameter Description | Mand. |
|-------------------|--|--------------------------|-----------------------|-------|
| LinkDirection | Name | Downlink Uplink None | | Yes |
| | ShortName | DL UL | | No |
| Reference-Power | | | | Yes |
| Method | TX Channel Power TX Channel Peak Power | | | Yes |
| Reference-Channel | <string> | | | No |

Table 3-4: Attributes and child nodes of the PowerClass element

| Child Node | Attribute | Value | Parameter Description | Mand. |
|----------------------|---------------|--|--|-------|
| StartPower | Value | <power in dBm> | The start power must be equal to the stop power of the previous power class. The StartPower value of the first range is -200 | Yes |
| | Unit | dBm | | Yes |
| | InclusiveFlag | true | | Yes |
| StopPower | Value | <power in dBm> | The stop power must be equal to the start power of the next power class. The StopPower value of the last range is 200 | Yes |
| | Unit | dBm | | |
| | InclusiveFlag | false | | Yes |
| DefaultLimitFailMode | | Absolute Relative Absolute and Relative Absolute or Relative | | Yes |

Table 3-5: Attributes and child nodes of the Range element (normal ranges)

| Child Node | Attribute | Value | Parameter Description | Mand. |
|-------------|------------|---------------|---|---|
| | Index | 0...19 | Indices are continuous and have to start with 0 | Yes |
| | Name | <string> | Name of the range | Only if ReferenceChannel contains a name and the range is the reference range |
| | Short-Name | <string> | Short name of the range | No |
| ChannelType | | TX Adjacent | | Yes |

| Child Node | Attribute | Value | Parameter Description | Mand. |
|-----------------|-----------|--|--|--|
| WeightingFilter | | | | Only if ReferencePower method is TX Channel Power and the range is the reference range |
| Type | | RRC CFilter | Type of the weighting filter | Yes |
| Roll Off Factor | | 0...1 | Excess bandwidth of the filter | Only if the filter type is RRC |
| Bandwidth | | <bandwidth in Hz> | Filter bandwidth | Only if the filter type is RRC |
| FrequencyRange | | | | Yes |
| Start | | <frequency in Hz> | Start value of the range | Yes |
| Stop | | <frequency in Hz> | Stop value of the range | Yes |
| Limit | | dBm/Hz dBm dBc dBr dB | A Range must contain exactly two limit nodes; one of the limit nodes has to have a relative unit (e.g. dBc), the other one must have an absolute unit (e.g. dBm) | Yes |
| Start | Value | <numeric_value> | Power limit at start frequency | Yes |
| | Unit | dBm/Hz dBm dBc dBr dB | Sets the unit of the start value | |
| Stop | Value | <numeric_value> | Power limit at stop frequency | |
| | Unit | dBm/Hz dBm dBc dBr dB | Sets the unit of the stop value | |
| LimitFailMode | | Absolute Relative Absolute and Relative Absolute or Relative | If used, it has to be identical to DefaultLimitFailMode | No |
| RBW | Bandwidth | <bandwidth in Hz> | "RBW" on page 70 | Yes |
| | Type | NORM PULS CFIL RRC | | No |
| VBW | Bandwidth | <bandwidth in Hz> | "VBW" on page 70 | Yes |
| Detector | | NEG POS SAMP RMS AVER QUAS | If used, it has to be identical in all ranges. | No |
| Sweep | Mode | Manual Auto | "Sweep Time Mode" on page 70 | Yes |
| | Time | <time in sec> | "Sweep Time" on page 70 | No |
| Amplitude | | | | No |

| Child Node | Attribute | Value | Parameter Description | Mand. |
|----------------|-----------|----------------|---------------------------|---|
| ReferenceLevel | Value | <power in dBm> | "Ref. Level" on page 70 | Yes, if the ReferenceLevel child node is used |
| | Unit | dBm | Defines dBm as unit | Yes, if the ReferenceLevel node is used |
| RFAttenuation | Mode | Manual Auto | "RF Att. Mode" on page 70 | Yes, if the ReferenceLevel child node is used |
| Preamplifier | | ON OFF | "Preamp" on page 71 | Yes |

3.4.8 Provided XML Files for the Spectrum Emission Mask Measurement

You can change the settings manually or via XML files. The XML files offer a quick way to change the configuration. A set of ready-made XML files for different standards is already provided. For details see [table 3-6](#). You can also create and use your own XML files (for details see [chapter 3.4.7, "Format Description of Spectrum Emission Mask XML Files"](#), on page 118). All XML files are stored under "C :

\r_s\instr\sem_std". Use the "Load Standard" softkey for quick access to the available XML files (see ["Load Standard"](#) on page 76).

Table 3-6: Provided XML files

| Path | XML file name | Displayed standard characteristics* |
|---|--------------------------|-------------------------------------|
| cdma2000\DL | default0.xml | CDMA2000 BC0 DL |
| | default1.xml | CDMA2000 BC1 DL |
| cdma2000\UL | default0.xml | CDMA2000 BC0 UL |
| | default1.xml | CDMA2000 BC1 UL |
| WCDMA\3GPP\DL | PowerClass_31_39.xml | W-CDMA 3GPP (31,39)dBm DL |
| | PowerClass_39_43.xml | W-CDMA 3GPP (39,43)dBm DL |
| | PowerClass_43_INF.xml | W-CDMA 3GPP (43,INF)dBm DL |
| | PowerClass_negINF_31.xml | W-CDMA 3GPP (-INF,31)dBm DL |
| WiBRO\DL | PowerClass_29_40.xml | WiBro TTA (29,40)dBm DL |
| | PowerClass_40_INF.xml | WiBro TTA (40,INF)dBm DL |
| | PowerClass_negINF_29.xml | WiBro TTA (-INF,29)dBm DL |
| WiBRO\UL | PowerClass_23_INF.xml | WiBro TTA (23,INF)dBm UL |
| | PowerClass_negINF_23.xml | WiBro TTA (23,INF)dBm UL |
| WIMAX\DL\ETSI\...MHz (1.75 MHz, 2.00 MHz, 3.5 MHz, 7.00 MHz, 14.00 MHz, 28 MHz) | System_Type_E.xml | WIMAX System Type E DL |

| Path | XML file name | Displayed standard characteristics* |
|--|-------------------------------|-------------------------------------|
| | System_Type_F.xml | WIMAX System Type F DL |
| | System_Type_G.xml | WIMAX System Type G DL |
| WIMAX\DL\IEEE | 10MHz.xml | WIMAX 10MHz DL |
| | 20MHz.xml | WIMAX 20MHz DL |
| WIMAX\UL\ETSI...MHz (1.75 MHz, 2.00 MHz, 3.5 MHz, 7.00 MHz, 14.00 MHz, 28 MHz) | System_Type_E.xml | WIMAX System Type E UL |
| | System_Type_F.xml | WIMAX System Type F UL |
| | System_Type_G.xml | WIMAX System Type G UL |
| WIMAX\UL\IEEE | 10MHz.xml | WIMAX 10MHz UL |
| | 20MHz.xml | WIMAX 20MHz UL |
| WLAN\802_11_TURBO | ETSI.xml | IEEE 802.11 |
| | IEEE.xml | IEEE 802.11 |
| WLAN\802_11a | ETSI.xml | IEEE 802.11a |
| | IEEE.xml | IEEE 802.11a |
| WLAN\802_11b | IEEE.xml | IEEE 802.11b |
| WLAN\802_11j_10MHz | ETSI.xml | IEEE.802.11j |
| | IEEE.xml | IEEE.802.11j |
| WLAN\802_11j_20MHz | ETSI.xml | IEEE 802.11j |
| | IEEE.xml | IEEE 802.11j |
| EUTRA-LTE\DL\CategoryA\ | BW_01_4_MHz__CFhigher1GHz.xml | LTE Cat. A >1GHz DL |
| | BW_01_4_MHz__CFlower1GHz.xml | LTE Cat. A <1GHz DL |
| EUTRA-LTE\DL\CategoryA\ | BW_03_0_MHz__CFhigher1GHz.xml | LTE Cat. A >1GHz DL |
| | BW_03_0_MHz__CFlower1GHz.xml | LTE Cat. A <1GHz DL |
| EUTRA-LTE\DL\CategoryA\ | BW_05_0_MHz__CFhigher1GHz.xml | LTE Cat. A >1GHz DL |
| | BW_05_0_MHz__CFlower1GHz.xml | LTE Cat. A <1GHz DL |
| EUTRA-LTE\DL\CategoryA\ | BW_10_0_MHz__CFhigher1GHz.xml | LTE Cat. A >1GHz DL |
| | BW_10_0_MHz__CFlower1GHz.xml | LTE Cat. A >1GHz DL |
| EUTRA-LTE\DL\CategoryA\ | BW_15_0_MHz__CFhigher1GHz.xml | LTE Cat. A >1GHz DL |
| | BW_15_0_MHz__CFlower1GHz.xml | LTE Cat. A <1GHz DL |
| EUTRA-LTE\DL\CategoryA\ | BW_20_0_MHz__CFhigher1GHz.xml | LTE Cat. A >1GHz DL |

| Path | XML file name | Displayed standard characteristics* |
|-------------------------|------------------------------|-------------------------------------|
| EUTRA-LTE\DL\CategoryA\ | BW_20_0_MHz_CFlower1GHz.xml | LTE Cat. A <1GHz DL |
| EUTRA-LTE\DL\CategoryB\ | BW_01_4_MHz_CFhigher1GHz.xml | LTE Cat. B >1GHz DL |
| EUTRA-LTE\DL\CategoryB\ | BW_01_4_MHz_CFlower1GHz.xml | LTE Cat. B <1GHz DL |
| EUTRA-LTE\DL\CategoryB\ | BW_03_0_MHz_CFhigher1GHz.xml | LTE Cat. B >1GHz DL |
| EUTRA-LTE\DL\CategoryB\ | BW_03_0_MHz_CFlower1GHz.xml | LTE Cat. B <1GHz DL |
| EUTRA-LTE\DL\CategoryB\ | BW_05_0_MHz_CFhigher1GHz.xml | LTE Cat. B >1GHz DL |
| EUTRA-LTE\DL\CategoryB\ | BW_05_0_MHz_CFlower1GHz.xml | LTE Cat. B <1GHz DL |
| EUTRA-LTE\DL\CategoryB\ | BW_10_0_MHz_CFhigher1GHz.xml | LTE Cat. B >1GHz DL |
| EUTRA-LTE\DL\CategoryB\ | BW_10_0_MHz_Cflower1GHz.xml | LTE Cat. B >1GHz DL |
| EUTRA-LTE\DL\CategoryB\ | BW_15_0_MHz_CFhigher1GHz.xml | LTE Cat. B >1GHz DL |
| EUTRA-LTE\DL\CategoryB\ | BW_15_0_MHz_CFlower1GHz.xml | LTE Cat. B <1GHz DL |
| EUTRA-LTE\DL\CategoryB\ | BW_20_0_MHz_CFhigher1GHz.xml | LTE Cat. B >1GHz DL |
| EUTRA-LTE\DL\CategoryB\ | BW_20_0_MHz_CFlower1GHz.xml | LTE Cat. B <1GHz DL |
| EUTRA-LTE\UL\Standard\ | BW_05_0_MHz.xml | LTE UL |
| EUTRA-LTE\UL\Standard\ | BW_10_0_MHz.xml | LTE UL |
| EUTRA-LTE\UL\Standard\ | BW_15_0_MHz.xml | LTE UL |
| EUTRA-LTE\UL\Standard\ | BW_20_0_MHz.xml | LTE UL |

*Used abbreviations:

BC: band class

UL: uplink

DL: downlink

TTA: Telecommunications Technology Association

3.4.9 Fast Spectrum Emission Mask Measurements

In order to improve the performance of the R&S FSVR for spectrum emission mask measurements, a "Fast SEM" mode is available. If this mode is activated, several consecutive ranges with identical sweep settings are combined to one sweep internally, which makes the measurement considerably more efficient. The displayed results remain unchanged and still consist of several ranges. Thus, measurement settings that apply only to the results, such as limits or transducer factors, can nevertheless be defined individually for each range.

Prerequisites

"Fast SEM" mode is available if the following criteria apply:

- The frequency ranges are consecutive, without frequency gaps
- The following sweep settings are identical:
 - "Filter Type", see ["Filter Type"](#) on page 70
 - "RBW", see ["RBW"](#) on page 70
 - "VBW", see ["VBW"](#) on page 70
 - "Sweep Time Mode", see ["Sweep Time Mode"](#) on page 70
 - "Ref Level", see ["Ref. Level"](#) on page 70
 - "Rf Att. Mode", see ["RF Att. Mode"](#) on page 70
 - "RF Attenuator", see ["RF Att. Mode"](#) on page 70
 - "Preamp", see ["Preamp"](#) on page 71

Activating Fast SEM mode

"Fast SEM" mode is activated in the sweep list (see ["Fast SEM"](#) on page 69) or using a remote command. Activating the mode for one range automatically activates it for all ranges in the sweep list.

In the provided XML files for the Spectrum Emission Mask measurement, "Fast SEM" mode is activated by default.

SCPI command:

`[SENSe:]ESpectrum:HighSPeed` on page 207

Consequences


When the "Fast SEM" mode is activated, the ranges for which these criteria apply are displayed as one single range. The sweep time is defined as the sum of the individual sweep times, initially, but can be changed. When the "Fast SEM" mode is deactivated, the originally defined individual sweep times are reset.



If "Symmetrical Setup" mode is active when "Fast SEM" mode is activated, not all sweep list settings can be configured symmetrically automatically (see also ["Symmetric Setup"](#) on page 73).

Any other changes to the sweep settings of the combined range are applied to each included range and remain changed even after deactivating "Fast SEM" mode.

Example

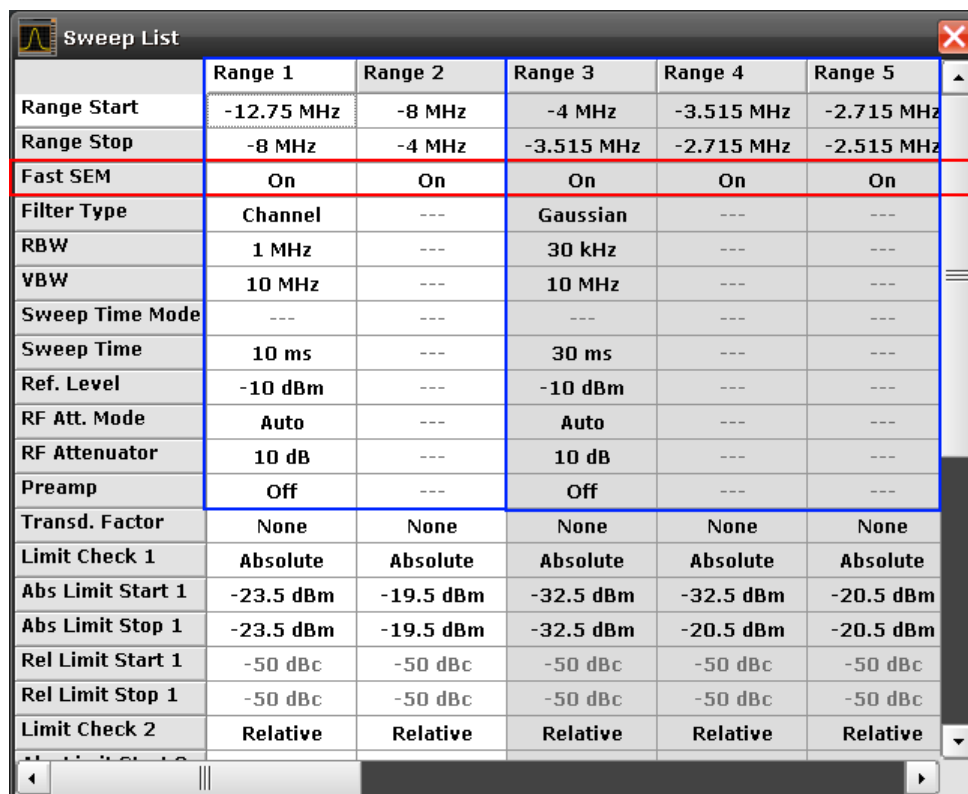

| | Range 1 | Range 2 | Range 3 | Range 4 | Range 5 |
|-------------------|------------|-----------|------------|------------|------------|
| Range Start | -12.75 MHz | -8 MHz | -4 MHz | -3.515 MHz | -2.715 MHz |
| Range Stop | -8 MHz | -4 MHz | -3.515 MHz | -2.715 MHz | -2.515 MHz |
| Fast SEM | On | On | On | On | On |
| Filter Type | Channel | --- | Gaussian | --- | --- |
| RBW | 1 MHz | --- | 30 kHz | --- | --- |
| VBW | 10 MHz | --- | 10 MHz | --- | --- |
| Sweep Time Mode | --- | --- | --- | --- | --- |
| Sweep Time | 10 ms | --- | 30 ms | --- | --- |
| Ref. Level | -10 dBm | --- | -10 dBm | --- | --- |
| RF Att. Mode | Auto | --- | Auto | --- | --- |
| RF Attenuator | 10 dB | --- | 10 dB | --- | --- |
| Preamp | Off | --- | Off | --- | --- |
| Transd. Factor | None | None | None | None | None |
| Limit Check 1 | Absolute | Absolute | Absolute | Absolute | Absolute |
| Abs Limit Start 1 | -23.5 dBm | -19.5 dBm | -32.5 dBm | -32.5 dBm | -20.5 dBm |
| Abs Limit Stop 1 | -23.5 dBm | -19.5 dBm | -32.5 dBm | -20.5 dBm | -20.5 dBm |
| Rel Limit Start 1 | -50 dBc | -50 dBc | -50 dBc | -50 dBc | -50 dBc |
| Rel Limit Stop 1 | -50 dBc | -50 dBc | -50 dBc | -50 dBc | -50 dBc |
| Limit Check 2 | Relative | Relative | Relative | Relative | Relative |

Fig. 3-3: Sweep list using Fast SEM mode

In [figure 3-3](#), a sweep list is shown for which Fast SEM is activated. The formerly 5 separately defined ranges are combined to 2 sweep ranges internally.

3.4.10 Predefined CP/ACLR Standards

When using predefined standards for ACLR measurement, the test parameters for the channel and adjacent-channel measurements are configured automatically. The available standards are listed below.



Predefined standards are selected using the "CP/ACLR Standard" softkey or the `CALC:MARK:FUNC:POW:PRES` command.

| Standard | GUI-Parameter | SCPI-Parameter |
|-------------------------|----------------------|----------------|
| EUTRA/LTE Square | EUTRA/LTE Square | EUTRa |
| EUTRA/LTE Square/RRC | EUTRA/LTE Square/RRC | REUTRa |
| W-CDMA 3.84 MHz forward | W-CDMA 3GPP FWD | FW3G |
| W-CDMA 3.84 MHz reverse | W-CDMA 3GPP REV | RW3G |

| Standard | GUI-Parameter | SCPI-Parameter |
|------------------------------|------------------------|----------------|
| CDMA IS95A forward | CDMA IS95A FWD | F8CD FIS95a |
| CDMA IS95A reverse | CDMA IS95A REV | R8CD RIS95a |
| CDMA IS95C Class 0 forward*) | CDMA IS95C Class 0 FWD | FIS95c0 |
| CDMA IS95C Class 0 reverse*) | CDMA IS95C Class 0 REV | RIS95c0 |
| CDMA J-STD008 forward | CDMA J-STD008 FWD | F19C FJ008 |
| CDMA J-STD008 reverse | CDMA J-STD008 REV | R19C RJ008 |
| CDMA IS95C Class 1 forward*) | CDMA IS95C Class 1 FWD | FIS95c1 |
| CDMA IS95C Class 1 reverse*) | CDMA IS95C Class 1 REV | RIS95c1 |
| CDMA 2000 | CDMA 2000 | S2CD |
| TD-SCDMA forward | TD SCDMA FWD | FTCD TCDMa |
| TD-SCDMA reverse | TD SCDMA REV | RTCD |
| WLAN 802.11A | WLAN 802.11A | AWLan |
| WLAN 802.11B | WLAN 802.11B | BWLan |
| WiMAX | WiMAX | WiMAX |
| WIBRO | WIBRO | WIBRO |
| GSM | GSM | GSM |
| RFID 14443 | RFID 14443 | RFID14443 |
| TETRA | TETRA | TETRA |
| PDC | PDC | PDC |
| PHS | PHS | PHS |
| CDPD | CDPD | CDPD |
| APCO-25 Phase 2 | APCO-25 P2 | PAPCo25 |



For the R&S FSVR, the channel spacing is defined as the distance between the center frequency of the adjacent channel and the center frequency of the transmission channel. The definition of the adjacent-channel spacing in standards IS95C and CDMA 2000 is different. These standards define the adjacent-channel spacing from the center of the transmission channel to the closest border of the adjacent channel. This definition is also used for the R&S FSVR if the standards marked with an asterisk *) are selected.

3.4.11 Optimized Settings for CP/ACLR Test Parameters

The "Adjust Settings" softkey (see "Adjust Settings" on page 66) automatically optimizes all instrument settings for the selected channel configuration, as described in the following:

- **Frequency span**

The frequency span must at least cover the channels to be measured plus a measurement margin of approx. 10 %.

If the frequency span is large in comparison to the channel bandwidth (or the adjacent-channel bandwidths) being examined, only a few points on the trace are available per channel. This reduces the accuracy of the waveform calculation for the channel filter used, which has a negative effect on the measurement accuracy. It is therefore strongly recommended that the formulas mentioned be taken into consideration when selecting the frequency span.

For channel power measurements the [Adjust Settings](#) softkey sets the frequency span as follows:

"(No. of transmission channels – 1) x transmission channel spacing + 2 x transmission channel bandwidth + measurement margin"

For adjacent-channel power measurements, the [Adjust Settings](#) softkey sets the frequency span as a function of the number of transmission channels, the transmission channel spacing, the adjacent-channel spacing, and the bandwidth of one of adjacent-channels ADJ, ALT1 or ALT2, whichever is furthest away from the transmission channels:

"(No. of transmission channels – 1) x transmission channel spacing + 2 x (adjacent-channel spacing + adjacent-channel bandwidth) + measurement margin"

The measurement margin is approx. 10 % of the value obtained by adding the channel spacing and the channel bandwidth.

- **Resolution bandwidth (RBW)**

To ensure both, acceptable measurement speed and required selection (to suppress spectral components outside the channel to be measured, especially of the adjacent channels), the resolution bandwidth must not be selected too small or too large. As a general approach, the resolution bandwidth is to be set to values between 1% and 4% of the channel bandwidth.

A larger resolution bandwidth can be selected if the spectrum within the channel to be measured and around it has a flat characteristic. In the standard setting, e.g. for standard IS95A REV at an adjacent channel bandwidth of 30 kHz, a resolution bandwidth of 30 kHz is used. This yields correct results since the spectrum in the neighborhood of the adjacent channels normally has a constant level.

With the exception of the IS95 CDMA standards, the [Adjust Settings](#) softkey sets the resolution bandwidth (RBW) as a function of the channel bandwidth:

" $RBW \leq 1/40$ of channel bandwidth"

The maximum possible resolution bandwidth (with respect to the requirement $RBW \leq 1/40$) resulting from the available RBW steps (1, 3) is selected.

- **Video bandwidth (VBW)**

For a correct power measurement, the video signal must not be limited in bandwidth. A restricted bandwidth of the logarithmic video signal would cause signal averaging and thus result in a too low indication of the power (-2.51 dB at very low video bandwidths). The video bandwidth should therefore be selected at least three times the resolution bandwidth:

" $VBW \geq 3 \times RBW$ "

The [Adjust Settings](#) softkey sets the video bandwidth (VBW) as a function of the channel bandwidth (see formula above) and the smallest possible VBW with regard to the available step size will be selected.

- **Detector**

The [Adjust Settings](#) softkey selects the RMS detector. This detector is selected since it correctly indicates the power irrespective of the characteristics of the signal to be measured. The whole IF envelope is used to calculate the power for each measurement point. The IF envelope is digitized using a sampling frequency which is at least five times the resolution bandwidth which has been selected. Based on the sample values, the power is calculated for each measurement point using the following formula:

$$P_{\text{RMS}} = \sqrt{\frac{1}{N} \cdot \sum_{i=1}^N s_i^2}$$

where:

" s_i = linear digitized video voltage at the output of the A/D converter"

"N = number of A/D converter values per measurement point"

" P_{RMS} = power represented by a measurement point"

When the power has been calculated, the power units are converted into decibels and the value is displayed as a measurement point.

In principle, the sample detector would be possible as well. Due to the limited number of measurement points used to calculate the power in the channel, the sample detector would yield less stable results.

- **Trace averaging**

The [Adjust Settings](#) softkey switches off this function. Averaging, which is often performed to stabilize the measurement results, leads to a too low level indication and should therefore be avoided. The reduction in the displayed power depends on the number of averages and the signal characteristics in the channel to be measured.

- **Reference level**

The [Adjust Settings](#) softkey does not influence the reference level. It can be adjusted separately using the "Adjust Ref Lvl" softkey (see "[Adjust Ref Lvl](#)" on page 39).

4 Remote Control Commands

This chapter describes the remote commands specific to the TD-SCDMA Analysis option (R&S FSV-K76/K77). The abbreviation TDS stands for the operating mode of this option. For details on conventions used in this chapter refer to [chapter 4.1, "Notation"](#), on page 133.

For further information on analyzer or basic settings commands, refer to the corresponding subsystem in the base unit description.

In particular, the following subsystems are identical to the base unit; refer to the base unit description:

- CALCulate:DELTamarker
- CALCulate:MARKer (except for the specific commands described in [chapter 4.2, "CALCulate Subsystem"](#), on page 135)
- FORMat subsystem
- INITiate subsystem
- INPut subsystem
- MMEM subsystem
- OUTput subsystem
- SENSE subsystem (except for the specific commands described in [chapter 4.6, "SENSe Subsystem"](#), on page 196)
- TRIGger subsystem

| | | |
|------------|--|------------|
| 4.1 | Notation | 133 |
| 4.2 | CALCulate Subsystem | 135 |
| 4.2.1 | CALCulate:FEED Commands..... | 136 |
| 4.2.2 | CALCulate:MARKer:FUNCTION Commands..... | 138 |
| 4.2.3 | Other CALCulate Commands Referenced in this Manual..... | 145 |
| 4.3 | CONFigure Subsystem | 183 |
| 4.4 | DISPlay Subsystem | 189 |
| 4.5 | INSTrument subsystem | 195 |
| 4.6 | SENSe Subsystem | 196 |
| 4.6.1 | SENSe:CDPower Commands..... | 196 |
| 4.6.2 | SENSe:POWer Commands..... | 202 |
| 4.6.3 | Other SENSE Commands Referenced in this Manual..... | 203 |
| 4.7 | Status Reporting System of the TD-SCDMA Measurement Applications (K76/K77) | 241 |
| 4.8 | TRACe Subsystem | 242 |
| 4.9 | Other Commands Referenced in this Manual | 248 |

| | | |
|-------|--------------------------------|-----|
| 4.9.1 | INPut commands..... | 248 |
| 4.9.2 | TRIGger Commands..... | 255 |
| 4.9.3 | Other Referenced Commands..... | 258 |

4.1 Notation

In the following sections, all commands implemented in the instrument are first listed and then described in detail, arranged according to the command subsystems. The notation is adapted to the SCPI standard. The SCPI conformity information is included in the individual description of the commands.

Individual Description

The individual description contains the complete notation of the command. An example for each command, the *RST value and the SCPI information are included as well.

The options and operating modes for which a command can be used are indicated by the following abbreviations:

| Abbreviation | Description |
|--------------|--|
| A | spectrum analysis |
| A-F | spectrum analysis – span > 0 only (frequency mode) |
| A-T | spectrum analysis – zero span only (time mode) |
| ADEMODO | analog demodulation (option R&S FSV-K7) |
| BT | Bluetooth (option R&S FSV-K8) |
| CDMA | CDMA 2000 base station measurements (option R&S FSV-K82) |
| EVDO | 1xEV-DO base station analysis (option R&S FSV-K84) |
| GSM | GSM/Edge measurements (option R&S FSV-K10) |
| IQ | IQ Analyzer mode |
| OFDM | WiMAX IEEE 802.16 OFDM measurements (option R&S FSV-K93) |
| OFDMA/WiBro | WiMAX IEEE 802.16e OFDMA/WiBro measurements (option R&S FSV-K93) |
| NF | Noise Figure measurements (R&S FSV-K30) |
| PHN | Phase Noise measurements (R&S FSV-K40) |
| PSM | Power Sensor measurements (option R&S FSV-K9) |
| RT | Realtime mode |
| SFM | Stereo FM measurements (option R&S FSV-K7S) |
| SPECM | Spectrogram mode (option R&S FSV-K14) |
| TDS | TD-SCDMA base station / UE measurements (option R&S FSV-K76/K77) |
| VSA | Vector Signal Analysis (option R&S FSV-K70) |

| | |
|-------|--|
| WCDMA | 3GPP Base Station measurements (option R&S FSV-K72), 3GPP UE measurements (option R&S FSV-K73) |
| WLAN | WLAN TX measurements (option R&S FSV-K91) |



The spectrum analysis mode is implemented in the basic unit. For the other modes, the corresponding options are required.

Upper/Lower Case Notation

Upper/lower case letters are used to mark the long or short form of the key words of a command in the description. The instrument itself does not distinguish between upper and lower case letters.

Special Characters

| | |
|--|---|
| | A selection of key words with an identical effect exists for several commands. These keywords are indicated in the same line; they are separated by a vertical stroke. Only one of these keywords needs to be included in the header of the command. The effect of the command is independent of which of the keywords is used. |
|--|---|

Example:

```
SENSe:FREQuency:CW|:FIXed
```

The two following commands with identical meaning can be created. They set the frequency of the fixed frequency signal to 1 kHz:

```
SENSe:FREQuency:CW 1E3
```

```
SENSe:FREQuency:FIXed 1E3
```

A vertical stroke in parameter indications marks alternative possibilities in the sense of "or". The effect of the command differs, depending on which parameter is used.

Example: Selection of the parameters for the command

```
[SENSe<1...4>:]AVERage<1...4>:TYPE VIDEo | LINear
```

| | |
|----|---|
| [] | Key words in square brackets can be omitted when composing the header. The full command length must be accepted by the instrument for reasons of compatibility with the SCPI standards. Parameters in square brackets can be incorporated optionally in the command or omitted as well. |
|----|---|

| | |
|----|---|
| {} | Parameters in braces can be incorporated optionally in the command, either not at all, once or several times. |
|----|---|

Description of Parameters

Due to the standardization, the parameter section of SCPI commands consists always of the same syntactical elements. SCPI has therefore specified a series of definitions, which are used in the tables of commands. In the tables, these established definitions are indicated in angled brackets (<...>) and is briefly explained in the following.

For details see the chapter "SCPI Command Structure" in the base unit description.

<Boolean>

This keyword refers to parameters which can adopt two states, "on" and "off". The "off" state may either be indicated by the keyword OFF or by the numeric value 0, the "on" state is indicated by ON or any numeric value other than zero. Parameter queries are always returned the numeric value 0 or 1.

<numeric_value> <num>

These keywords mark parameters which may be entered as numeric values or be set using specific keywords (character data). The following keywords given below are permitted:

- MAXimum: This keyword sets the parameter to the largest possible value.
- MINimum: This keyword sets the parameter to the smallest possible value.
- DEFault: This keyword is used to reset the parameter to its default value.
- UP: This keyword increments the parameter value.
- DOWN: This keyword decrements the parameter value.

The numeric values associated to MAXimum/MINimum/DEFault can be queried by adding the corresponding keywords to the command. They must be entered following the quotation mark.

Example:

```
SENSe:FREQuency:CENTer? MAXimum
```

Returns the maximum possible numeric value of the center frequency as result.

<arbitrary block program data>

This keyword is provided for commands the parameters of which consist of a binary data block.

4.2 CALCulate Subsystem

The CALCulate subsystem contains commands for converting instrument data, transforming and carrying out corrections. These functions are carried out subsequent to data acquisition, i.e. following the SENSe subsystem.

Note that most commands in the CALCulate subsystem are identical to the base unit; only the commands specific to this option are described here.

| | | |
|---------|---|-----|
| 4.2.1 | CALCulate:FEED Commands..... | 136 |
| 4.2.2 | CALCulate:MARKer:FUNCTion Commands..... | 138 |
| 4.2.3 | Other CALCulate Commands Referenced in this Manual..... | 145 |
| 4.2.3.1 | CALCulate:DELTamarker subsystem..... | 145 |

| | | |
|---------|--|-----|
| 4.2.3.2 | CALCulate:LIMit subsystem..... | 153 |
| 4.2.3.3 | CALCulate:LIMit:ESpectrum subsystem..... | 160 |
| 4.2.3.4 | CALCulate:MARKer subsystem..... | 165 |
| 4.2.3.5 | CALCulate:MASK Subsystem..... | 171 |
| 4.2.3.6 | CALCulate:PSE subsystem..... | 177 |
| 4.2.3.7 | CALCulate:STATistics subsystem..... | 179 |
| 4.2.3.8 | Other Referenced CALCulate Commands..... | 182 |

4.2.1 CALCulate:FEED Commands

CALCulate<n>:FEED <result display>

This command selects the result display for the code domain analyzer.

Suffix:

| | |
|-----|--------|
| <n> | 1...4 |
| | window |

Parameters:

<result display>

'XPOW:CDP'

Code Domain Power result display (absolute)

'XPOW:CDP:RAT'

Code Domain Power result display (relative)

'XPOW:CDEP'

Code Domain Error Power result display

'XTIME:CDPower:BSTream'

Channel Bitstream result display

'XTIME:CDPower:COMPOSITE:CONST'

Composite Constellation result display

'XTIME:CDPower:COMPOSITE:EVM'

Composite EVM result display

'XTIME:CDPower:ERROR:CTABLE'

Channel Table result display

'XTIME:CDPower:ERROR:PCDomain'

Peak Code Domain Error result display

'XTIME:CDPower:ERROR:SUMMARY'

Result Summary result display

'XTIME:CDPower:MACCuracy'

Composite EVM result display

'XTIME:CDPower:PVSLOT'

Channel Power vs Slot result display (absolute)

'XTIME:CDPower:PVSLOT:RATIO'

Channel Power vs Slot result display (relative)

'XTIME:CDPower:PVSymbol'

Power vs Symbol result display

'XTIME:CDPower:SYMBOL:CONST'

Channel Constellation result display

'XTIME:CDPower:SYMBOL:EVM'

EVM vs Symbol result display

'XTIME:CDPower:SYMBOL:EVM:MAGNITUDE'

Result display of the symbol magnitude error

'XTIME:CDPower:SYMBOL:EVM:PHASE'

Result display of the symbol phase error

'XTIME:CDP:CHIP:MAGNITUDE'

Result display magnitude error versus chip

'XTIME:CDP:CHIP:PHASE'

Result display phase error versus chip

*RST: 'XPOW:CDP:RAT'

Example:

CALC2:FEED 'XTIME:CDP:MACC

Starts the Composite EVM result display in window 2.

Mode:

TDS

Manual operation: See "Code Power" on page 27
 See "Code Domain Power" on page 29
 See "Composite EVM" on page 30
 See "Peak Code Domain Error" on page 30
 See "Code Domain Error" on page 31
 See "Power vs Symbol" on page 32
 See "Channel Power vs Slot" on page 32
 See "Result Summary" on page 33
 See "Channel Table" on page 34
 See "Channel Constellation" on page 36
 See "EVM vs Symbol" on page 36
 See "Channel Bitstream" on page 37
 See "Composite Constellation" on page 37
 See "Mag Error vs Chip" on page 38
 See "Phase Error vs Chip" on page 38
 See "Symbol Magnitude Error" on page 38
 See "Symbol Phase Error" on page 39

4.2.2 CALCulate:MARKer:FUNcTION Commands

This chapter describes commands of the CALCulate:MARKer subsystem that are specific to the measurement application.

| | |
|--|-----|
| CALCulate<n>:MARKer:FUNcTION:CDPower[:BTS]:RESult? | 138 |
| CALCulate<n>:MARKer<m>:FUNcTION:POWer:MODE | 142 |
| CALCulate<n>:MARKer<m>:FUNcTION:POWer:RESult? | 143 |
| CALCulate<n>:MARKer<m>:FUNcTION:POWer:RESult:PHZ | 144 |
| CALCulate<n>:MARKer<m>:FUNcTION:POWer:SElect | 144 |

CALCulate<n>:MARKer:FUNcTION:CDPower[:BTS]:RESult? <ResultType>

This command queries the results of the code domain measurement. Refer to the [Code Domain Analysis](#) result display for a detailed description of all results.

Suffix:

<n> 1...4
 window

Query parameters:

<ResultType>

ACTive |

ARCD CDPabsolute CDPRelative CHANnel CERror EVMPeak
 EVMRMS IQImbalance IQOffset MACCuracy PCDerror PCDer-
 ror PD1 PD2 PDATa PMIDamble RHO SFACtor SLOT SRATe
 TFRame

ACTive

Returns the number of active channels.

ARCD

Returns the Average Relative Code Domain Error.

CDPabsolute

Returns the absolute channel power in dBm.

CDPRelative

Returns the relative channel power in dB.

CHANnel

Returns the current channel number.

CERror

Returns the Chip Rate Error in ppm.

EVMPeak

Returns the maximum Error Vector Magnitude of the selected channel.

EVMRMS

Returns the average Error Vector Magnitude of the selected channel.

IQImbalance

Returns the IQ Imbalance in %.

IQOffset

Returns the IQ Offset in %.

MACCuracy

Returns the Composite EVM in %.

PCDerror

Returns the Peak Code Domain Error dB.

PD1

Returns the power of the slot's data part 1 in dBm.

PD2

Returns the power of the slot's data part 2 in dBm.

PDATa

Returns the average power of the data parts in dBm.

PMIDamble

Returns the power of the midamble in dBm.

RHO

Returns the parameter Rho.

SFACtor

Returns the spreading factor of the channel.

SLOT

Returns the currently analyzed slot number.

SRATe

Returns the symbol rate in kbps.

Note that TFRame returns a '9' if the trigger is at Free Run.

TFRame

Returns the Trigger to Frame time in seconds.

| | |
|---------------------------|--|
| <ResultType> | <p>ACTive Returns the number of active channels.</p> <p>ARCD Returns the Average Relative Code Domain Error.</p> <p>CDPabsolute Returns the absolute channel power in dBm.</p> <p>CDPRelative Returns the relative channel power in dB.</p> <p>CHANnel Returns the current channel number.</p> <p>CERror Returns the Chip Rate Error in ppm.</p> <p>DACTive Indicates whether DwPTS slot is active (BTS mode only)</p> <p>DPOWER Power in the DwPTS slot (BTS mode only)</p> <p>DRHO RHO for the DwPTS slot (BTS mode only)</p> <p>DERM EVM (RMS) for the DwPTS slot (BTS mode only)</p> <p>DEPK EVM (Peak) for the DwPTS slot (BTS mode only)</p> <p>EVMPeak Returns the maximum Error Vector Magnitude of the selected channel.</p> <p>EVMRMS Returns the average Error Vector Magnitude of the selected channel.</p> <p>IQIMbalance Returns the IQ Imbalance in %.</p> <p>IQOffset Returns the IQ Offset in %.</p> <p>MACCuracy Returns the Composite EVM in %.</p> <p>PCDerror Returns the Peak Code Domain Error dB.</p> <p>PD1 Returns the power of the slot's data part 1 in dBm.</p> <p>PD2 Returns the power of the slot's data part 2 in dBm.</p> <p>PDATa Returns the average power of the data parts in dBm.</p> <p>PMIDamble Returns the power of the midamble in dBm.</p> <p>RHO</p> |
|---------------------------|--|

Returns the parameter Rho.

SFACTOR

Returns the spreading factor of the channel.

SLOT

Returns the currently analyzed slot number.

SRATe

Returns the symbol rate in ksps.

Note that TFRame returns a '9' if the trigger is at Free Run.

TFRame

Returns the Trigger to Frame time in seconds.

Example:

`CALC:MARK:FUNC:CDP:RES? CERR`

Returns the Chip Rate Error

Usage:

Query only

Mode:

TDS

Manual operation:

See ["Power"](#) on page 59

See ["Ch Power ACLR"](#) on page 59

See ["Spectrum Emission Mask"](#) on page 68

See ["Occupied Bandwidth"](#) on page 77

CALCulate<n>:MARKer<m>:FUNCTION:POWer:MODE <Mode>

This commands defines the method by which the channel power values are calculated from the current trace in the window specified by the suffix <n>.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<Mode> WRITe | MAXHold

WRITe

The channel power and the adjacent channel powers are calculated directly from the current trace

MAXHold

The power values are calculated from the current trace and compared with the previous power value using a maximum algorithm.

Example:

`CALC:MARK:FUNC:POW:MODE MAXH`

Sets the Maxhold channel power mode.

Manual operation:

See ["Clear/Write"](#) on page 66

See ["Max Hold"](#) on page 66

CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult? <ResultType>

This command queries the result of the performed power measurement in the window specified by the suffix <n>. If necessary, the measurement is switched on prior to the query.

The channel spacings and channel bandwidths are configured in the `SENSe:POWer` subsystem.

To obtain a correct result, a complete sweep with synchronization to the end of the sweep must be performed before a query is output. Synchronization is possible only in the single sweep mode.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<ResultType> ACPower | CPOWer

ACPower

Adjacent-channel power measurement

Results are output in the following sequence, separated by commas:

Power of transmission channel
 Power of lower adjacent channel
 Power of upper adjacent channel
 Power of lower alternate channel 1
 Power of upper alternate channel 1
 Power of lower alternate channel 2
 Power of upper alternate channel 2

The number of measured values returned depends on the number of adjacent/alternate channels selected with `[SENSe:]POWer:ACHannel:ACPairs`.

With logarithmic scaling (RANGE "LOG"), the power is output in the currently selected level unit; with linear scaling (RANGE "LIN dB" or "LIN %"), the power is output in W. If `[SENSe:]POWer:ACHannel:MODE` is set to "REL", the adjacent/alternate-channel power is output in dB.

CPOWer

Channel power measurement

In a Spectrum Emission Mask measurement, the query returns the power result for the reference range, if this power reference type is selected.

With logarithmic scaling (RANGE LOG), the channel power is output in the currently selected level unit; with linear scaling (RANGE LIN dB or LIN %), the channel power is output in W.

CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult:PHZ <State>

This command switches the query response of the power measurement results between output of absolute values and output referred to the measurement bandwidth.

The measurement results are output with the [CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult?](#) command.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<State> ON | OFF
ON
 Results output: channel power density in dBm/Hz
OFF
 Results output: channel power is displayed in dBm
 *RST: OFF

Example:

`CALC:MARK:FUNC:POW:RES:PHZ ON`
 Output of results referred to the channel bandwidth.
 For details on a complete measurement example refer to [CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult?](#) on page 143.

Manual operation: See "[Chan Pwr/Hz](#)" on page 65

CALCulate<n>:MARKer<m>:FUNCTION:POWer:SElect <MeasType>

This command selects – and switches on – the specified power measurement type in the window specified by the suffix <n>.

The channel spacings and channel bandwidths are configured in the `SENSe:POWer` subsystem.

Note: If `CPOWer` is selected, the number of adjacent channels ([\[SENSe:\]POWer:ACHannel:ACPairs](#)) is set to 0. If `ACPOWer` is selected, the number of adjacent channels is set to 1, unless adjacent-channel power measurement is switched on already.

The channel/adjacent-channel power measurement is performed for the trace selected with [\[SENSe:\]POWer:TRACe](#).

The occupied bandwidth measurement is performed for the trace on which marker 1 is positioned. To select another trace for the measurement, marker 1 is to be positioned on the desired trace by means of [CALCulate<n>:MARKer<m>:TRACe](#).

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

| | |
|------------|---|
| <MeasType> | ACPower CPOWer MCACpower OBANdwidth OBWidth CN CNO |
| | ACPower Adjacent-channel power measurement with a single carrier signal |
| | CPOWer Channel power measurement with a single carrier signal (equivalent to adjacent-channel power measurement with "NO. OF ADJ CHAN" = 0) |
| | MCACpower Channel/adjacent-channel power measurement with several carrier signals |
| | OBANdwidth OBWidth Measurement of occupied bandwidth |
| | CN Measurement of carrier-to-noise ratio |
| | CNO Measurement of carrier-to-noise ratio referenced to 1 Hz bandwidth |

Example:

```
CALC:MARK:FUNC:POW:SEL ACP
Switches on adjacent-channel power measurement.
```

4.2.3 Other CALCulate Commands Referenced in this Manual

| | | |
|---------|--|-----|
| 4.2.3.1 | CALCulate:DELTamarker subsystem..... | 145 |
| 4.2.3.2 | CALCulate:LIMit subsystem..... | 153 |
| 4.2.3.3 | CALCulate:LIMit:ESPeCtRum subsystem..... | 160 |
| 4.2.3.4 | CALCulate:MARKer subsystem..... | 165 |
| 4.2.3.5 | CALCulate:MASK Subsystem..... | 171 |
| 4.2.3.6 | CALCulate:PSE subsystem..... | 177 |
| 4.2.3.7 | CALCulate:STATistics subsystem..... | 179 |
| 4.2.3.8 | Other Referenced CALCulate Commands..... | 182 |

4.2.3.1 CALCulate:DELTamarker subsystem

| | |
|--|-----|
| CALCulate<n>:DELTamarker<m>:FUNctioN:FIXed:RPOint:X..... | 146 |
| CALCulate<n>:DELTamarker<m>:FUNctioN:FIXed:RPOint:Y..... | 146 |
| CALCulate<n>:DELTamarker<m>:FUNctioN:FIXed[:STATe]..... | 147 |
| CALCulate<n>:DELTamarker<m>:FUNctioN:PNOise:AUTO..... | 147 |
| CALCulate<n>:DELTamarker<m>:FUNctioN:PNOise[:STATe]..... | 147 |
| CALCulate<n>:DELTamarker<m>:LINK..... | 148 |
| CALCulate<n>:DELTamarker<m>:MAXimum:LEFT..... | 148 |

| | |
|---|-----|
| CALCulate<n>:DELTamarker<m>:MAXimum:NEXT..... | 149 |
| CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]..... | 149 |
| CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT..... | 149 |
| CALCulate<n>:DELTamarker<m>:MINimum:LEFT..... | 150 |
| CALCulate<n>:DELTamarker<m>:MINimum:NEXT..... | 150 |
| CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]..... | 150 |
| CALCulate<n>:DELTamarker<m>:MINimum:RIGHT..... | 151 |
| CALCulate<n>:DELTamarker<m>[:STATe]..... | 151 |
| CALCulate<n>:DELTamarker<m>:TRACe..... | 151 |
| CALCulate<n>:DELTamarker<m>:X..... | 152 |
| CALCulate<n>:DELTamarker<m>:X:RELative?..... | 152 |
| CALCulate<n>:DELTamarker<m>:Y?..... | 153 |

CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:X <Reference>

This command defines the horizontal position of the fixed delta marker reference point. The coordinates of the reference may be anywhere in the diagram.

When measuring the phase noise, the command defines the frequency reference for delta marker 2.

Suffix:

| | |
|-----|---------------------------------|
| <n> | Selects the measurement window. |
| <m> | Selects the marker. |

Parameters:

| | |
|-------------|--|
| <Reference> | Numeric value that defines the horizontal position of the reference. For frequency domain measurements, it is a frequency in Hz. For time domain measurements, it is a point in time in s. *RST: Fixed reference: OFF |
|-------------|--|

Example:

```
CALC:DELT:FUNC:FIX:RPO:X 128 MHz
Sets the frequency reference to 128 MHz.
```

CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:Y <RefPointLevel>

This command defines the vertical position of the fixed delta marker reference point. The coordinates of the reference may be anywhere in the diagram.

When measuring the phase noise, the command defines the level reference for delta marker 2.

Suffix:

| | |
|-----|---------------------------------|
| <n> | Selects the measurement window. |
| <m> | Selects the marker. |

Parameters:

| | |
|-----------------|---|
| <RefPointLevel> | Numeric value that defines the vertical position of the reference. The unit and value range is variable. *RST: Fixed reference: OFF |
|-----------------|---|

Example: `CALC:DELT:FUNC:FIX:RPO:Y -10dBm`
Sets the reference point level for delta markers to -10 dBm.

CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed[:STATe] <State>

This command switches the relative measurement to a fixed reference value on or off. Marker 1 is activated previously and a peak search is performed, if necessary. If marker 1 is activated, its position becomes the reference point for the measurement. The reference point can then be modified with the `CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:X` commands and `CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:Y` independently of the position of marker 1 and of a trace. It applies to all delta markers as long as the function is active.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

*RST: OFF

Example: `CALC:DELT:FUNC:FIX ON`
Switches on the measurement with fixed reference value for all delta markers.

`CALC:DELT:FUNC:FIX:RPO:X 128 MHZ`

Sets the frequency reference to 128 MHz.

`CALC:DELT:FUNC:FIX:RPO:Y 30 DBM`

Sets the reference level to +30 dBm.

CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise:AUTO <State>

This command turns an automatic peak search for the fixed reference marker at the end of a sweep on and off.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example: `CALC:DELT:FUNC:PNO:AUTO ON`
Activates an automatic peak search for the reference marker in a phase-noise measurement.

CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise[:STATe] <State>

This command turns the phase noise measurement at the delta marker position on and off.

The correction values for the bandwidth and the log amplifier are taken into account in the measurement.

The reference marker for phase noise measurements is either a normal marker or a fixed reference. If necessary, the command turns on the reference marker

A fixed reference point can be modified with the `CALCulate<n>:DELTAmarker<m>:FUNction:FIXed:RPOint:X` and `CALCulate<n>:DELTAmarker<m>:FUNction:FIXed:RPOint:Y` commands independent of the position of marker 1 and of a trace.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Note: marker 2 is always the deltamarker for phase noise measurement results.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

```
CALC:DELT:FUNC:PNO ON
```

Switches on the phase-noise measurement with all delta markers.

```
CALC:DELT:FUNC:FIX:RPO:X 128 MHZ
```

Sets the frequency reference to 128 MHz.

```
CALC:DELT:FUNC:FIX:RPO:Y 30 DBM
```

Sets the reference level to +30 dBm

CALCulate<n>:DELTAmarker<m>:LINK <State>

This command links delta marker 1 to marker 1.

If you change the horizontal position of the marker, so does the delta marker.

Suffix:

<n> Selects the measurement window.

<m> 1
irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:

```
CALC:DELT:LINK ON
```

CALCulate<n>:DELTAmarker<m>:MAXimum:LEFT

This command positions the delta marker to the next smaller trace maximum on the left of the current value (i.e. descending X values). The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

```
CALC:DELT:MAX:LEFT
```

Sets delta marker 1 to the next smaller maximum value to the left of the current value.

CALCulate<n>:DELTamarker<m>:MAXimum:NEXT

This command positions the delta marker to the next smaller trace maximum. The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

```
CALC:DELT2:MAX:NEXT
```

Sets delta marker 2 to the next smaller maximum value.

CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]

This command positions the delta marker to the current trace maximum. If necessary, the corresponding delta marker is activated first.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

```
CALC:DELT3:MAX
```

Sets delta marker 3 to the maximum value of the associated trace.

CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT

This command positions the delta marker to the next smaller trace maximum on the right of the current value (i.e. ascending X values). The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example: `CALC:DELT:MAX:RIGH`
Sets delta marker 1 to the next smaller maximum value to the right of the current value.

CALCulate<n>:DELTamarker<m>:MINimum:LEFT

This command positions the delta marker to the next higher trace minimum on the left of the current value (i.e. descending X values). The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example: `CALC:DELT:MIN:LEFT`
Sets delta marker 1 to the next higher minimum to the left of the current value.

CALCulate<n>:DELTamarker<m>:MINimum:NEXT

This command positions the delta marker to the next higher trace minimum. The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example: `CALC:DELT2:MIN:NEXT`
Sets delta marker 2 to the next higher minimum value.

CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]

This command positions the delta marker to the current trace minimum. The corresponding delta marker is activated first, if necessary.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example: `CALC:DELT3:MIN`
Sets delta marker 3 to the minimum value of the associated trace.

CALCulate<n>:DELTamarker<m>:MINimum:RIGHT

This command positions the delta marker to the next higher trace minimum on the right of the current value (i.e. ascending X values). The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

```
CALC:DELT:MIN:RIGH
```

Sets delta marker 1 to the next higher minimum value to the right of the current value.

CALCulate<n>:DELTamarker<m>[:STATe] <State>

This command turns delta markers on and off.

If the corresponding marker was a normal marker, it is turned into a delta marker.

No suffix at DELTmarker turns on delta marker 1.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

```
CALC:DELT1 ON
```

Switches marker 1 to delta marker mode.

CALCulate<n>:DELTamarker<m>:TRACe <TraceNumber>

This command selects the trace a delta marker is positioned on.

The corresponding trace must have a trace mode other than "Blank".

In the persistence spectrum result display, the command also defines if the delta marker is positioned on the persistence trace or the maxhold trace.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<TraceNumber>

1 ... 6

Trace number the marker is positioned on.

MAXHold

Defines the maxhold trace as the trace to put the delta marker on.

This parameter is available only for the persistence spectrum result display.

WRITE

Defines the persistence trace as the trace to put the delta marker on.

This parameter is available only for the persistence spectrum result display.

Example:`CALC:DELT3:TRAC 2`

Assigns delta marker 3 to trace 2.

CALCulate<n>:DELTaMarker<m>:X <Position>

This command positions a delta marker on a particular coordinate on the x-axis.

The position is an absolute value.

Suffix:

<n>

Selects the measurement window.

<m>

Selects the marker.

Parameters:

<Position>

0 to maximum frequency or sweep time

Example:`CALC:DELT:X?`

Outputs the absolute frequency/time of delta marker 1.

CALCulate<n>:DELTaMarker<m>:X:RELative?This command queries the x-value of the selected delta marker relative to marker 1 or to the reference position (for `CALC:DELT:FUNC:FIX:STAT ON`). The command activates the corresponding delta marker, if necessary.**Suffix:**

<n>

Selects the measurement window.

<m>

Selects the marker.

Example:`CALC:DELT3:X:REL?`

Outputs the frequency of delta marker 3 relative to marker 1 or relative to the reference position.

Usage:

Query only

CALCulate<n>:DELTaMarker<m>:Y?

This command queries the measured value of a delta marker. The corresponding delta marker is activated, if necessary. The output is always a relative value referred to marker 1 or to the reference position (reference fixed active).

To obtain a correct query result, a complete sweep with synchronization to the sweep end must be performed between the activation of the delta marker and the query of the y value. This is only possible in single sweep mode.

Depending on the unit defined with `CALC:UNIT:POW` or on the activated measuring functions, the query result is output in the units below:

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
INIT;*WAI
Starts a sweep and waits for its end.
CALC:DELT2 ON
Switches on delta marker 2.
CALC:DELT2:Y?
Outputs measurement value of delta marker 2.
```

Usage: Query only

4.2.3.2 CALCulate:LIMit subsystem

| | |
|--|-----|
| CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute..... | 153 |
| CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute:STATe..... | 154 |
| CALCulate<n>:LIMit<k>:ACPower:ACHannel[:RELative]..... | 155 |
| CALCulate<n>:LIMit<k>:ACPower:ACHannel:RESult..... | 156 |
| CALCulate<n>:LIMit<k>:ACPower:ACHannel[:RELative]:STATe..... | 156 |
| CALCulate<n>:LIMit<k>:ACPower:ALternate<Channel>:ABSolute..... | 157 |
| CALCulate<n>:LIMit<k>:ACPower:ALternate<channel>[:RELative]..... | 158 |
| CALCulate<n>:LIMit<k>:ACPower:ALternate<Channel>[:RELative]:STATe..... | 158 |
| CALCulate<n>:LIMit<k>:ACPower[:STATe]..... | 159 |
| CALCulate<n>:LIMit<k>:FAIL?..... | 160 |

CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute <LowerLimit>, <UpperLimit>

This command defines the absolute limit value for the lower/upper adjacent channel during adjacent-channel power measurement (Adjacent Channel Power).

Note that the absolute limit value has no effect on the limit check as soon as it is below the relative limit value defined with `CALCulate<n>:LIMit<k>:ACPower:ACHannel[:RELative]`. This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

Suffix:

<n> Selects the measurement window.

<k> irrelevant

Parameters:

<LowerLimit>, first value: -200DBM to 200DBM; limit for the lower and the
<UpperLimit> upper adjacent channel

*RST: -200DBM

Example:

```
CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM
```

Sets the absolute limit value for the power in the lower and upper adjacent channel to -35 dBm.

CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute:STATe <State>

This command activates the limit check for the adjacent channel when adjacent-channel power measurement (Adjacent Channel Power) is performed. Before the command, the limit check for the channel/adjacent-channel measurement must be globally switched on using [CALCulate<n>:LIMit<k>:ACPower\[:STATe\]](#).

The result can be queried with [CALCulate<n>:LIMit<k>:ACPower:ACHannel:RESult](#). It should be noted that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no correct results are available.

Suffix:

<n> Selects the measurement window.

<k> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:

```
CALC:LIM:ACP:ACH 30DB, 30DB
```

Sets the relative limit value for the power in the lower and upper adjacent channel to 30 dB below the channel power.

```
CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM
```

Sets the absolute limit value for the power in the lower and upper adjacent channel to -35 dBm.

```
CALC:LIM:ACP ON
```

Switches on globally the limit check for the channel/adjacent-channel measurement.

```
CALC:LIM:ACP:ACH:REL:STAT ON
```

Switches on the check of the relative limit values for adjacent channels.

```
CALC:LIM:ACP:ACH:ABS:STAT ON
```

Switches on the check of absolute limit values for the adjacent channels.

```
INIT;*WAI
```

Starts a new measurement and waits for the sweep end.

```
CALC:LIM:ACP:ACH:RES?
```

Queries the limit check result in the adjacent channels.

Manual operation: See "[Absolute Limit](#)" on page 65

CALCulate<n>:LIMit<k>:ACPpower:ACHannel[:RELative] <LowerLimit>, <UpperLimit>

This command defines the relative limit of the upper/lower adjacent channel for adjacent-channel power measurements. The reference value for the relative limit value is the measured channel power.

It should be noted that the relative limit value has no effect on the limit check as soon as it is below the absolute limit value defined with the [CALCulate<n>:LIMit<k>:ACPpower:ACHannel:ABSolute](#) command. This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

Suffix:

<n> Selects the measurement window.
 <k> irrelevant

Parameters:

<LowerLimit>, 0 to 100dB; the value for the lower limit must be lower than the
 <UpperLimit> value for the upper limit
 *RST: 0 dB

Example:

```
CALC:LIM:ACP:ACH 30DB, 30DB
```

Sets the relative limit value for the power in the lower and upper adjacent channel to 30 dB below the channel power.

CALCulate<n>:LIMit<k>:ACPpower:ACHannel:RESult

This command queries the result of the limit check for the upper/lower adjacent channel when adjacent channel power measurement is performed.

If the power measurement of the adjacent channel is switched off, the command produces a query error.

Suffix:

<n> Selects the measurement window.
 <k> irrelevant

Return values:

Result The result is returned in the form <result>, <result> where <result> = PASSED | FAILED, and where the first returned value denotes the lower, the second denotes the upper adjacent channel.

Example:

```
CALC:LIM:ACP:ACH 30DB, 30DB
```

Sets the relative limit value for the power in the lower and upper adjacent channel to 30 dB below the channel power.

```
CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM
```

Sets the absolute limit value for the power in the lower and upper adjacent channel to -35 dB.

```
CALC:LIM:ACP ON
```

Switches on globally the limit check for the channel/adjacent channel measurement.

```
CALC:LIM:ACP:ACH:STAT ON
```

Switches on the limit check for the adjacent channels.

```
INIT;*WAI
```

Starts a new measurement and waits for the sweep end.

```
CALC:LIM:ACP:ACH:RES?
```

Queries the limit check result in the adjacent channels.

Manual operation: See "[Limit Checking](#)" on page 64

CALCulate<n>:LIMit<k>:ACPpower:ACHannel[:RELative]:STATe <State>

This command activates the limit check for the relative limit value of the adjacent channel when adjacent-channel power measurement is performed. Before this command, the limit check must be activated using [CALCulate<n>:LIMit<k>:ACPpower\[:STATe\]](#).

The result can be queried with [CALCulate<n>:LIMit<k>:ACPpower:ACHannel:RESult](#). Note that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no correct results are available.

Suffix:

<n> Selects the measurement window.
 <k> irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:LIM:ACP:ACH 30DB, 30DB

Sets the relative limit value for the power in the lower and upper adjacent channel to 30 dB below the channel power.

CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM

Sets the absolute limit value for the power in the lower and upper adjacent channel to -35 dBm.

CALC:LIM:ACP ON

Switches on globally the limit check for the channel/adjacent channel measurement.

CALC:LIM:ACP:ACH:STAT ON

Switches on the check of the relative limit values for adjacent channels.

CALC:LIM:ACP:ACH:ABS:STAT ON

Switches on the check of absolute limit values for the adjacent channels.

INIT;*WAI

Starts a new measurement and waits for the sweep end.

CALC:LIM:ACP:ACH:RES?

Queries the limit check result in the adjacent channels.

CALCulate<n>:LIMit<k>:ACPower:ALTErnate<Channel>:ABSolute <LowerLimit>, <UpperLimit>

This command defines the absolute limit value for the lower/upper alternate adjacent-channel power measurement (Adjacent Channel Power).

Note that the absolute limit value for the limit check has no effect as soon as it is below the relative limit value defined with [CALCulate<n>:LIMit<k>:ACPower:ACHannel\[:RELative\]](#). This mechanism allows automatic checking of the absolute basic values defined in mobile radio standards for the power in adjacent channels.

Suffix:

<n> Selects the measurement window.

<k> irrelevant

<Channel> 1...11
 the alternate channel

Parameters:

<LowerLimit>, <UpperLimit> first value: -200DBM to 200DBM; limit for the lower and the upper alternate adjacent channel

*RST: -200DBM

Example:

CALC:LIM:ACP:ALT2:ABS -35DBM, -35DBM

Sets the absolute limit value for the power in the lower and upper second alternate adjacent channel to -35 dBm.

CALCulate<n>:LIMit<k>:ACPowEr:ALTernate<channel>[:RELative] <LowerLimit>, <UpperLimit>

This command defines the limit for the alternate adjacent channels for adjacent channel power measurements. The reference value for the relative limit value is the measured channel power.

Note that the relative limit value has no effect on the limit check as soon as it is below the absolute limit defined with `CALCulate<n>:LIMit<k>:ACPowEr:ALTernate<Channel>:ABSolute`. This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

Suffix:

<n> Selects the measurement window.
 <k> irrelevant
 <Channel> 1...11
 the alternate channel

Parameters:

<LowerLimit>, first value: 0 to 100dB; limit for the lower and the upper alternate adjacent channel
 <UpperLimit>
 *RST: 0 DB

Example:

`CALC:LIM:ACP:ALT2 30DB, 30DB`

Sets the relative limit value for the power in the lower and upper second alternate adjacent channel to 30 dB below the channel power.

Manual operation: See "[Limit Checking](#)" on page 64

CALCulate<n>:LIMit<k>:ACPowEr:ALTernate<Channel>[:RELative]:STATe <State>

This command activates the limit check for the alternate adjacent channels for adjacent channel power measurements. Before the command, the limit check must be activated using `CALCulate<n>:LIMit<k>:ACPowEr[:STATe]`.

The result can be queried with `CALCulate<n>:LIMit<k>:ACPowEr:ALTernate<channel>[:RELative]`. Note that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no correct results are obtained.

Suffix:

<n> Selects the measurement window.
 <k> irrelevant
 <Channel> 1...11
 the alternate channel

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:LIM:ACP:ALT2 30DB, 30DB

Sets the relative limit value for the power in the lower and upper second alternate adjacent channel to 30 dB below the channel power.

CALC:LIM:ACP:ALT2:ABS -35DBM, -35DBM

Sets the absolute limit value for the power in the lower and upper second alternate adjacent channel to -35 dBm.

CALC:LIM:ACP ON

Switches on globally the limit check for the channel/adjacent channel measurement.

CALC:LIM:ACP:ALT2:STAT ON

Switches on the check of the relative limit values for the lower and upper second alternate adjacent channel.

CALC:LIM:ACP:ALT2:ABS:STAT ON

Switches on the check of absolute limit values for the lower and upper second alternate adjacent channel.

INIT;*WAI

Starts a new measurement and waits for the sweep end.

CALC:LIM:ACP:ALT2:RES?

Queries the limit check result in the second alternate adjacent channels.

CALCulate<n>:LIMit<k>:ACPpower[:STATe] <State>

This command switches on and off the limit check for adjacent-channel power measurements. The commands `CALCulate<n>:LIMit<k>:ACPpower:ACHannel[:RELative]:STATe` or `CALCulate<n>:LIMit<k>:ACPpower:ALternate<Channel>[:RELative]:STATe` must be used in addition to specify whether the limit check is to be performed for the upper/lower adjacent channel or for the alternate adjacent channels.

Suffix:

<n> Selects the measurement window.

<k> irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:LIM:ACP ON

Switches on the ACLR limit check.

Manual operation:

See "Limit Checking" on page 64

See "Relative Limit" on page 65

See "Absolute Limit" on page 65

CALCulate<n>:LIMit<k>:FAIL?

This command queries the result of a limit check.

Note that for SEM measurements, the limit line suffix <k> is irrelevant, as only one specific SEM limit line is checked for the currently relevant power class.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> irrelevant
<k> limit line

Return values:

<Result> **0**
 PASS
 1
 FAIL

Example:

```
INIT; *WAI
Starts a new sweep and waits for its end.
CALC:LIM3:FAIL?
Queries the result of the check for limit line 3.
```

Usage: Query only

Manual operation: See "Limit Check 1-4" on page 71

4.2.3.3 CALCulate:LIMit:ESPectrum subsystem

The CALCulate:LIMit:ESPectrum subsystem defines the limit check for the Spectrum Emission Mask.

| | |
|--|-----|
| CALCulate<n>:LIMit<k>:ESPectrum:LIMits..... | 160 |
| CALCulate<n>:LIMit<k>:ESPectrum:MODE..... | 161 |
| CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>[:EXCLusive]..... | 161 |
| CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>:COUNT..... | 162 |
| CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>:LIMit[:STATe]..... | 162 |
| CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>:MAXimum..... | 163 |
| CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>:MINimum..... | 163 |
| CALCulate<n>:LIMit<k>:ESPectrum:RESTore..... | 164 |
| CALCulate<n>:LIMit<k>:ESPectrum:VALue..... | 164 |

CALCulate<n>:LIMit<k>:ESPectrum:LIMits <Limits>

This command sets or queries up to 4 power classes in one step.

Suffix:

<n> irrelevant
<k> irrelevant

Parameters:

<Limits> 1–3 numeric values between -200 and 200, separated by commas
 -200, <0-3 numeric values between -200 and 200, in ascending order, separated by commas>, 200

Example:

```
CALC:LIM:ESP:LIM -50,50,70
Defines the following power classes:
<-200, -50>
<-50, 50>
<50, 70>
<70, 200>
Query:
CALC:LIM:ESP:LIM?
Response:
-200,-50,50,70,200
```

CALCulate<n>:LIMit<k>:ESPectrum:MODE <Mode>

This command activates or deactivates the automatic selection of the limit line in the Spectrum Emission Mask measurement.

Suffix:

<n> 1...4
window
 <k> irrelevant

Parameters:

<Mode> AUTO | MANUAL

AUTO

The limit line depends on the measured channel power.

MANUAL

One of the three specified limit lines is set. The selection is made with the [chapter 4.2.3.3, "CALCulate:LIMit:ESPectrum subsystem"](#), on page 160 command.

*RST: AUTO

Example:

```
CALC:LIM:ESP:MODE AUTO
Activates automatic selection of the limit line.
```

CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>[:EXCLusive] <State>

This command sets the power classes used in the spectrum emission mask measurement. It is only possible to use power classes for which limits are defined. Also, either only one power class at a time or all power classes together can be selected.

Suffix:

<n> irrelevant
 <k> irrelevant

<Class> 1...4
the power class to be evaluated

Parameters:

<State> ON | OFF
*RST: OFF

Example:

CALC:LIM:ESP:PCL1 ON
Activates the first defined power class.

Manual operation: See "[Used Power Classes](#)" on page 75
See "[Add/Remove](#)" on page 76

CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>:COUNT <NoPowerClasses>

This command sets the number of power classes to be defined.

Suffix:

<n> irrelevant
<k> irrelevant
<Class> irrelevant

Parameters:

<NoPowerClasses> 1 to 4
*RST: 1

Example:

CALC:LIM:ESP:PCL:COUN 2
Two power classes can be defined.

CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>:LIMit[:STATe] <State>

This command defines which limits are evaluated in the measurement.

Suffix:

<n> irrelevant
<k> irrelevant
<Class> 1...4
the power class to be evaluated

Parameters:

<State> ABSolute | RELative | AND | OR

ABSolute

Evaluates only limit lines with absolute power values

RELative

Evaluates only limit lines with relative power values

AND

Evaluates limit lines with relative and absolute power values. A negative result is returned if both limits fail.

OR

Evaluates limit lines with relative and absolute power values. A negative result is returned if at least one limit failed.

*RST: REL

Example:

CALC:LIM:ESP:PCL:LIM ABS

Manual operation: See "[Used Power Classes](#)" on page 75

CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>:MAXimum <Level>

This command sets the upper limit level for one power class. The unit is dBm. The limit always ends at + 200 dBm, i.e. the upper limit of the last power class can not be set. If more than one power class is in use, the upper limit must equal the lower limit of the next power class.

Suffix:

<n> irrelevant

<k> irrelevant

<Class> 1...4
the power class to be evaluated

Parameters:

<Level> <numeric value>

*RST: +200

Example:

CALC:LIM:ESP:PCL1:MAX -40 dBm

Sets the maximum power value of the first power class to -40 dBm.

Manual operation: See "[PMin/PMax](#)" on page 76

CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>:MINimum <Level>

This command sets the minimum lower level limit for one power class. The unit is dBm. The limit always start at – 200 dBm, i.e. the first lower limit can not be set. If more than one power class is in use, the lower limit must equal the upper limit of the previous power class.

Suffix:

<n> irrelevant

<k> irrelevant
 <Class> 1...4
 the power class to be evaluated

Parameters:

<Level> <numeric_value>
 *RST: -200 for class1, otherwise +200

Example:

CALC:LIM:ESP:PCL2:MIN -40 dBm
 Sets the minimum power value of the second power class to -40 dBm.

Manual operation: See "PMin/PMax" on page 76

CALCulate<n>:LIMit<k>:ESPectrum:RESTore

This command restores the predefined limit lines for the Spectrum Emission Mask measurement. All modifications made to the predefined limit lines are lost and the factory-set values are restored.

Suffix:

<n> 1...4
 window
 <k> irrelevant

Example:

CALC:LIM:ESP:REST
 Resets the limit lines for the Spectrum Emission Mask to the default setting.

CALCulate<n>:LIMit<k>:ESPectrum:VALue <Power>

This command activates the manual limit line selection and specifies the expected power as a value. Depending on the entered value, one of the predefined limit lines is selected.

Suffix:

<n> 1...4
 window
 <k> irrelevant

Parameters:

<Power> 33 | 28 | 0
33
 $P \geq 33$
28
 $28 < P < 33$
0
 $P < 28$
 *RST: 0

Example: `CALC:LIM:ESP:VAL 33`
 Activates manual selection of the limit line and selects the limit line for P = 33.

4.2.3.4 CALCulate:MARKer subsystem

CALCulate<n>:MARKer<m>:AOFF

This command all markers off, including delta markers and marker measurement functions.

Suffix:

<n> Selects the measurement window.

<m> depends on mode
 irrelevant

Example: `CALC:MARK:AOFF`
 Switches off all markers.

Usage: Event

CALCulate<n>:MARKer<m>:MAXimum:LEFT

This command positions a marker to the next smaller trace maximum on the left of the current position (i.e. in descending X values).

If no next smaller maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example: `CALC:MARK2:MAX:LEFT`
 Positions marker 2 to the next lower maximum value to the left of the current value.

Usage: Event

CALCulate<n>:MARKer<m>:MAXimum:NEXT

This command positions the marker to the next smaller trace maximum.

If no next smaller maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example: `CALC:MARK2:MAX:NEXT`
 Positions marker 2 to the next lower maximum value.

Usage: Event

CALCulate<n>:MARKer<m>:MAXimum[:PEAK]

This command positions the marker on the current trace maximum.

The corresponding marker is activated first or switched to the marker mode.

If no maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> depends on mode
Selects the marker.

Example: `CALC:MARK2:MAX`
Positions marker 2 to the maximum value of the trace.

Usage: Event

CALCulate<n>:MARKer<m>:MAXimum:RIGHT

This command positions a marker to the next smaller trace maximum on the right of the current value (i.e. in ascending X values).

If no next smaller maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example: `CALC:MARK2:MAX:RIGHT`
Positions marker 2 to the next lower maximum value to the right of the current value.

Usage: Event

CALCulate<n>:MARKer<m>:MINimum:LEFT

This command positions a marker to the next higher trace minimum on the left of the current value (i.e. in descending X direction).

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example: `CALC:MARK2:MIN`
 Positions marker 2 to the minimum value of the trace.
`CALC:MARK2:MIN:LEFT`
 Positions marker 2 to the next higher minimum value to the left of the current value.

Usage: Event

CALCulate<n>:MARKer<m>:MINimum:NEXT

This command positions the marker to the next higher trace minimum.
 If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example: `CALC:MARK2:MIN`
 Positions marker 2 to the minimum value of the trace.
`CALC:MARK2:MIN:NEXT`
 Positions marker 2 to the next higher maximum value.

Usage: Event

CALCulate<n>:MARKer<m>:MINimum[:PEAK]

This command positions the marker on the current trace minimum.
 The corresponding marker is activated first or switched to marker mode, if necessary.
 If no minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> depends on mode
 Selects the marker.

Example: `CALC:MARK2:MIN`
 Positions marker 2 to the minimum value of the trace.

Usage: Event

CALCulate<n>:MARKer<m>:MINimum:RIGHT

This command positions a marker to the next higher trace minimum on the right of the current value (i.e. in ascending X direction).
 If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

`CALC:MARK2:MIN`

Positions marker 2 to the minimum value of the trace.

`CALC:MARK2:MIN:RIGH`

Positions marker 2 to the next higher minimum value to the right of the current value.

Usage:

Event

CALCulate<n>:MARKer<m>[:STATe] <State>

This command turns markers on and off.

If the corresponding marker number is currently active as a deltamarker, it is turned into a normal marker.

Suffix:

<n> Selects the measurement window.

<m> depends on mode
Selects the marker.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

`CALC:MARK3 ON`

Switches on marker 3 or switches to marker mode.

CALCulate<n>:MARKer<m>:TRACe <Trace>

This command selects the trace a marker is positioned on.

The corresponding trace must have a trace mode other than "Blank".

If necessary, the corresponding marker is switched on prior to the assignment.

In the persistence spectrum result display, the command also defines if the marker is positioned on the persistence trace or the maxhold trace.

Suffix:

<n> Selects the measurement window.

<m> depends on mode
Selects the marker.

Parameters:

<Trace>

1 ... 6

Trace number the marker is positioned on.

MAXHold

Defines the maxhold trace as the trace to put the delta marker on.

This parameter is available only for the persistence spectrum result display.

WRITE

Defines the persistence trace as the trace to put the delta marker on.

This parameter is available only for the persistence spectrum result display.

Example:`CALC:MARK3:TRAC 2`

Assigns marker 3 to trace 2.

CALCulate<n>:MARKer<m>:X <Position>

This command positions a marker on a particular coordinate on the x-axis.

If marker 2, 3 or 4 is selected and used as delta marker, it is switched to marker mode.

Suffix:

<n>

Selects the measurement window.

<m>

Selects the marker.

Parameters:

<Position>

Numeric value that defines the marker position on the x-axis. The unit is either Hz (frequency domain) or s (time domain) or dB (statistics).

Range: The range depends on the current x-axis range.

Example:`CALC:MARK2:X 1.7MHz`

Positions marker 2 to frequency 1.7 MHz.

CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] <State>

This command turns marker search limits on and off.

If the power measurement in zero span is active, this command limits the evaluation range on the trace.

Suffix:

<n>

Selects the measurement window.

<m>

marker

Parameters:

<State>

ON | OFF

*RST: OFF

Example: `CALC:MARK:X:SLIM ON`
Switches on search limitation.

CALCulate<n>:MARKer<m>:X:SLIMits:ZOOM <State>

This command sets the limits of the marker search range to the zoom area.

Note: The function is only available if the search limit for marker and delta marker is switched on (see `CALCulate<n>:MARKer<m>:X:SLIMits[:STATE]`).

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example: `CALC:MARK:X:SLIM:ZOOM ON`
Switches the search limit function on.
`CALC:MARK:X:SLIM:RIGH 20MHz`
Sets the right limit of the search range to 20 MHz.

CALCulate<n>:MARKer<m>:Y?

This command queries the measured value of a marker.

The corresponding marker is activated before or switched to marker mode, if necessary.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Return values:

<Result> The measured value of the selected marker is returned.

Example: `INIT:CONT OFF`
Switches to single sweep mode.
`CALC:MARK2 ON`
Switches marker 2.
`INIT;*WAI`
Starts a sweep and waits for the end.
`CALC:MARK2:Y?`
Outputs the measured value of marker 2.

Usage: Query only

CALCulate<n>:MARKer<m>:Y:PERCent <Probability>

This command positions the selected marker to the given probability.

If you use the command in combination with a delta marker, that delta marker is turned into a normal marker.

Note: The command is only available for CCDF measurements. You can query the associated level value with `CALCulate<n>:MARKer<m>:X`.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<Probability> Range: 0 to 100
 Default unit: PCT

Example: `CALC1:MARK:Y:PERC 95PCT`
 Positions marker 1 to a probability of 95 %.

Manual operation: See "[Percent Marker](#)" on page 79

4.2.3.5 CALCulate:MASK Subsystem

The commands of the CALCulate:MASK subsystem configure the frequency mask trigger.

Programming example

```
TRIG:SOUR MASK
//Selects the frequency mask as a trigger source.
MMEM:MDIR 'C:\R_S\instr\freqmask\MyMasks'
CALC:MASK:CDIR 'MyMasks'
//Creates a directory on C:\ called 'FreqMasks' and selects it as the frequency
//mask directory.
//Defining the shape of a lower frequency mask
CALC:MASK:NAME 'MyMask'
//Creates or loads a frequency mask called 'MyMask'.
CALC:MASK:COMM 'Customized Frequency Mask'
//Adds a comment to the frequency mask.
TRIG:MASK:COND ENT
//Triggers the measurement when the signal enters the frequency mask.
CALC:MASK:MODE ABS
//Selects absolute power level values.
CALC:MASK:LOW -10MHZ,-10,-4MHZ,-10,-4MHZ,-20,4MHZ,-20,4MHZ,-10,10MHZ,-10
//Defines a lower frequency mask with 6 data points.
//The first data point position is at -10 MHz from the center frequency
//and at -10 dBm, the second at -4 MHz from the center frequency etc.
CALC:MASK:LOW:SHIF:X 1MHZ
CALC:MASK:LOW:SHIF:Y 10
//Shifts the lower frequency mask by 1 MHz to the right and 10 dB up.
```

```

CALC:MASK:LOW:STAT ON
//Turns the lower frequency mask on.

//Defining the shape of an upper frequency mask
CALC:MASK:NAME 'AnotherMask'
//Creates or loads a frequency mask called 'AnotherMask'
CALC:MASK:MODE ABS
//Selects absolute power level values.
CALC:MASK:UPP -10MHZ,-10,-4MHZ,-10,-4MHZ,-20,4MHZ,-20,4MHZ,-10,10MHZ,-10
//Defines an upper frequency mask with 6 data points.
CALC:MASK:UPP:SHIF:X -1MHZ
CALC:MASK:UPP:SHIF 10
//Shift the upper frequency mask 1 MHz to the left and 10 dB up.
CALC:MASK:UPP:STAT ON
//Turns the upper frequency mask on.
//Alternatively, you can create an upper frequency mask automatically.
CALC:MASK:UPP:AUTO
//Automatically defines the shape of an upper frequency mask.

CALC:MASK:DEL
//Deletes the frequency mask called 'MyMask' in C:\FreqMasks.

```



Before making any changes to a frequency mask, you have to select one by name with `CALCulate<n>:MASK:NAME` on page 175.

Compared to manual configuration of frequency masks, any changes made to a frequency mask via remote control are saved after the corresponding command has been sent.

| | |
|--|-----|
| <code>CALCulate<n>:MASK:CDIRectory</code> | 172 |
| <code>CALCulate<n>:MASK:COMMeNt</code> | 173 |
| <code>CALCulate<n>:MASK:DELeTe</code> | 173 |
| <code>CALCulate<n>:MASK:LOWer:SHIFt:X</code> | 173 |
| <code>CALCulate<n>:MASK:LOWer:SHIFt:Y</code> | 174 |
| <code>CALCulate<n>:MASK:LOWer[:STATe]</code> | 174 |
| <code>CALCulate<n>:MASK:LOWer[:DATA]</code> | 174 |
| <code>CALCulate<n>:MASK:MODE</code> | 175 |
| <code>CALCulate<n>:MASK:NAME</code> | 175 |
| <code>CALCulate<n>:MASK:SPAN</code> | 175 |
| <code>CALCulate<n>:MASK:UPPer:AUTO</code> | 175 |
| <code>CALCulate<n>:MASK:UPPer:SHIFt:X</code> | 176 |
| <code>CALCulate<n>:MASK:UPPer:SHIFt:Y</code> | 176 |
| <code>CALCulate<n>:MASK:UPPer[:STATe]</code> | 176 |
| <code>CALCulate<n>:MASK:UPPer[:DATA]</code> | 176 |

`CALCulate<n>:MASK:CDIRectory <Subdirectory>`

This command selects the directory the R&S FSVR stores frequency masks in.

Parameters:

<Subdirectory> String containing the path to the directory. The directory has to be a subdirectory of the default directory. Thus the path is always relative to the default directory (C:\R_S\INSTR\FREQ-MASK).
An empty string selects the default directory.

Example: See [chapter 4.2.3.5, "CALCulate:MASK Subsystem"](#), on page 171.

Manual operation: See ["Load Mask"](#) on page 110

CALCulate<n>:MASK:COMment <Comment>

This command defines a comment for the frequency mask that you have selected with [CALCulate<n>:MASK:NAME](#) on page 175.

Parameters:

<Comment> String containing the comment for the frequency mask.

Example: See [chapter 4.2.3.5, "CALCulate:MASK Subsystem"](#), on page 171.

Manual operation: See ["Labelling a frequency mask"](#) on page 108

CALCulate<n>:MASK:DElete

This command deletes the currently selected frequency mask.

Before making any changes to a frequency mask, you have to select one by name with [CALCulate<n>:MASK:NAME](#) on page 175.

Example: See [chapter 4.2.3.5, "CALCulate:MASK Subsystem"](#), on page 171.

Usage: Event

Manual operation: See ["Delete Mask"](#) on page 111

CALCulate<n>:MASK:LOWer:SHIFt:X <Frequency>

This command shifts the lower frequency mask horizontally by a specified distance. Positive values move the mask to the right, negative values shift the mask to the left.

Before making any changes to a frequency mask, you have to select one by name with [CALCulate<n>:MASK:NAME](#) on page 175.

Parameters:

<Frequency> Defines the distance of the shift.
Default unit: Hz

Example: See [chapter 4.2.3.5, "CALCulate:MASK Subsystem"](#), on page 171.

Manual operation: See ["Shifting mask points as a whole"](#) on page 110

CALCulate<n>:MASK:LOWer:SHIFt:Y <Level>

This command shifts the lower frequency mask vertically by a specified distance. Positive values move the mask upwards, negative values shift the mask downwards.

Before making any changes to a frequency mask, you have to select one by name with [CALCulate<n>:MASK:NAME](#) on page 175.

Parameters:

<Level> Defines the distance of the shift. The shift is relative to the current position.
Default unit: dB

Example: See [chapter 4.2.3.5, "CALCulate:MASK Subsystem"](#), on page 171.

Manual operation: See ["Shifting mask points as a whole"](#) on page 110

CALCulate<n>:MASK:LOWer[:STATe] <State>

This command turns the lower frequency mask on and off.

Before making any changes to a frequency mask, you have to select one by name with [CALCulate<n>:MASK:NAME](#) on page 175.

Parameters:

<State> **ON | OFF**

Example: See [chapter 4.2.3.5, "CALCulate:MASK Subsystem"](#), on page 171.

Manual operation: See ["Working with upper and lower lines"](#) on page 108

CALCulate<n>:MASK:LOWer[:DATA] <Frequency>,<Level>,...

This command defines the shape of the lower frequency mask.

Before making any changes to a frequency mask, you have to select one by name with [CALCulate<n>:MASK:NAME](#) on page 175.

The unit of the power levels depends on [CALCulate<n>:MASK:MODE](#) on page 175.

If you are using the command with the vector network analysis option (R&S FSV-K70), you can only use this command as a query.

Parameters:

<Frequency>,<Level> [N] pairs of numerical values. [N] is the number of data points the mask consists of.
Each data point is defined by the frequency (in Hz) and the level (in dB or dBm). All values are separated by commas.
Note that the data points have to be inside the current span.

Example: See [chapter 4.2.3.5, "CALCulate:MASK Subsystem"](#), on page 171.

Manual operation: See ["Positioning data points"](#) on page 109

CALCulate<n>:MASK:MODE <Mode>

This command defines the scaling of the level axis for frequency masks.

Parameters:

| | |
|--------|--|
| <Mode> | ABSolute absolute scaling of the level axis. |
| | RELative relative scaling of the level axis. |
| | *RST: RELative |

CALCulate<n>:MASK:NAME <Name>

This command creates or selects a frequency mask with the name that you specify by the parameter. When you use it as a query, the command returns the name of the mask currently in use.

Parameters:

| | |
|--------|--|
| <Name> | String containing the name of the mask. Note that an empty string does not select a frequency mask. |
|--------|--|

Manual operation: See ["Labelling a frequency mask"](#) on page 108
See ["Load Mask"](#) on page 110

CALCulate<n>:MASK:SPAN

This command defines the frequency span of the frequency mask.

Parameters:

| | |
|--------|---|
| | Range: 100 Hz to 40 MHz *RST: 40 MHz |
|--------|---|

Example: CALC:MASK:SPAN 10 MHz
Defines a span of 10 MHz.

Manual operation: See ["Defining the frequency mask span"](#) on page 108

CALCulate<n>:MASK:UPPer:AUTO

This command automatically defines the shape of an upper frequency mask according to the spectrum that is currently measured.

Example: See [chapter 4.2.3.5, "CALCulate:MASK Subsystem"](#), on page 171.

Usage: Event

CALCulate<n>:MASK:UPPer:SHIFt:X <Frequency>

This command shifts the lower frequency mask horizontally by a specified distance. Positive values move the mask to the right, negative values shift the mask to the left.

You have to select a mask before you can use this command with [CALCulate<n>:MASK:NAME](#) on page 175.

Parameters:

<Frequency> Defines the distance of the shift.

Example: See [chapter 4.2.3.5, "CALCulate:MASK Subsystem"](#), on page 171.

Manual operation: See ["Shifting mask points as a whole"](#) on page 110

CALCulate<n>:MASK:UPPer:SHIFt:Y <Level>

This command shifts the upper frequency mask vertically by a specified distance. Positive values move the mask upwards, negative values shift the mask downwards.

You have to select a mask before you can use this command with [CALCulate<n>:MASK:NAME](#) on page 175.

Parameters:

<Level> Defines the distance of the shift. The shift is relative to the current position.
Default unit: dB

Example: See [chapter 4.2.3.5, "CALCulate:MASK Subsystem"](#), on page 171.

Manual operation: See ["Shifting mask points as a whole"](#) on page 110

CALCulate<n>:MASK:UPPer[:STATe] <State>

This command turns the upper frequency mask on and off.

Before making any changes to a frequency mask, you have to select one by name with [CALCulate<n>:MASK:NAME](#) on page 175.

Parameters:

<State> **ON | OFF**

Example: See [chapter 4.2.3.5, "CALCulate:MASK Subsystem"](#), on page 171.

Manual operation: See ["Working with upper and lower lines"](#) on page 108

CALCulate<n>:MASK:UPPer[:DATA] <Frequency>,<Level>,...

This command activates and defines the shape of the upper frequency mask trigger mask.

You have to select a mask before you can use this command with `CALCulate<n>:MASK:NAME` on page 175.

The unit of the power levels depends on `CALCulate<n>:MASK:MODE` on page 175.

If you are using the command with the vector network analysis option (R&S FSV-K70), you can only use this command as a query.

Parameters:

<Frequency>, [N] pairs of numerical values. [N] is the number of data points
<Level> the mask consists of.
Each data point is defined by the frequency (in Hz) and the amplitude (in dB or dBm). All values are separated by commas. Note that the data points have to be inside the current span.

Example: See [chapter 4.2.3.5, "CALCulate:MASK Subsystem"](#), on page 171.

Manual operation: See ["Positioning data points"](#) on page 109
See ["Automatic alignment of the frequency mask"](#) on page 110

4.2.3.6 CALCulate:PSE subsystem

| | |
|--|-----|
| <code>CALCulate<n>:PEAKsearch PSEarch[:IMMEDIATE]</code> | 177 |
| <code>CALCulate<n>:PEAKsearch PSEarch:AUTO</code> | 177 |
| <code>CALCulate<n>:PEAKsearch PSEarch:MARGIN</code> | 178 |
| <code>CALCulate<n>:PEAKsearch PSEarch:PSHOW</code> | 178 |
| <code>CALCulate<n>:PEAKsearch PSEarch:SUBRANGES</code> | 178 |

`CALCulate<n>:PEAKsearch|PSEarch[:IMMEDIATE]`

This command switches the spurious limit check off.

If you want to read out the values peak values including the delta to a limit, you have to switch on the limit again.

This command is only for FSP compatibility, and not necessary to use on the R&S FSVR.

Suffix:

<n> irrelevant

Example:

`CALC:PSE`
Starts to determine the list.

`CALCulate<n>:PEAKsearch|PSEarch:AUTO <State>`

This command activates or deactivates the list evaluation.

Suffix:

<n> Selects the measurement window.

Parameters:

<State> ON | OFF
 *RST: ON

Example:

CALC:ESP:PSE:AUTO OFF
 Deactivates the list evaluation.

CALCulate<n>:PEAKsearch|PSEarch:MARGin <Margin>

This command sets the margin used for the limit check/peak search.

Suffix:

<n> Selects the measurement window.

Parameters:

<Margin> -200 to 200 dB
 *RST: 200 dB

Example:

CALC:ESP:PSE:MARG 100
 Sets the margin to 100 dB.

CALCulate<n>:PEAKsearch|PSEarch:PSHow

This command marks all peaks with blue squares in the diagram.

Suffix:

<n> Selects the measurement window.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:ESP:PSE:PSH ON
 Marks all peaks with blue squares.

CALCulate<n>:PEAKsearch|PSEarch:SUBRanges <NumberPeaks>

This command sets the number of peaks per range that are stored in the list. Once the selected number of peaks has been reached, the peak search is stopped in the current range and continued in the next range.

Suffix:

<n> irrelevant

Parameters:

<NumberPeaks> 1 to 50
 *RST: 25

Example:

CALC:PSE:SUBR 10
 Sets 10 peaks per range to be stored in the list.

4.2.3.7 CALCulate:STATistics subsystem

| | |
|---|-----|
| CALCulate<n>:STATistics:CCDF[:STATe] | 179 |
| CALCulate<n>:STATistics:NSAMples | 179 |
| CALCulate<n>:STATistics:PRESet | 179 |
| CALCulate<n>:STATistics:RESult<Trace> | 180 |
| CALCulate<n>:STATistics:SCALe:AUTO ONCE | 180 |
| CALCulate<n>:STATistics:SCALe:X:RANGe | 181 |
| CALCulate<n>:STATistics:SCALe:X:RLEVel | 181 |
| CALCulate<n>:STATistics:SCALe:Y:LOWer | 182 |
| CALCulate<n>:STATistics:SCALe:Y:UNIT | 182 |
| CALCulate<n>:STATistics:SCALe:Y:UPPer | 182 |

CALCulate<n>:STATistics:CCDF[:STATe] <State>

This command switches on or off the measurement of the complementary cumulative distribution function (CCDF). On activating this function, the APD measurement is switched off.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:STAT:CCDF ON
 Switches on the CCDF measurement.

CALCulate<n>:STATistics:NSAMples <NoMeasPoints>

This command sets the number of measurement points to be acquired for the statistical measurement functions.

Suffix:

<n> irrelevant

Parameters:

<NoMeasPoints> 100 to 1E9
 *RST: 100000

Example:

CALC:STAT:NSAM 500
 Sets the number of measurement points to be acquired to 500.

Manual operation: See "[# of Samples](#)" on page 79

CALCulate<n>:STATistics:PRESet

This command resets the scaling of the X and Y axes in a statistical measurement. The following values are set:

| | |
|---------------------|---------|
| x-axis ref level: | -20 dBm |
| x-axis range APD: | 100 dB |
| x-axis range CCDF: | 20 dB |
| y-axis upper limit: | 1.0 |
| y-axis lower limit: | 1E-6 |

Suffix:

<n> irrelevant

Example:

CALC:STAT:PRES

Resets the scaling for statistical functions

Manual operation: See "Default Settings" on page 82

CALCulate<n>:STATistics:RESult<Trace> <ResultType>

This command reads out the results of statistical measurements of a recorded trace.

Suffix:

<n> irrelevant

<Trace> 1...6
trace

Parameters:

<ResultType> MEAN | PEAK | CFACtor | ALL

MEAN

Average (=RMS) power in dBm measured during the measurement time.

PEAK

Peak power in dBm measured during the measurement time.

CFACtor

Determined CREST factor (= ratio of peak power to average power) in dB.

ALL

Results of all three measurements mentioned before, separated by commas: <mean power>,<peak power>,<crest factor>

The required result is selected via the following parameters:

Example:

CALC:STAT:RES2? ALL

Reads out the three measurement results of trace 2. Example of answer string: 5.56,19.25,13.69 i.e. mean power: 5.56 dBm, peak power 19.25 dBm, CREST factor 13.69 dB

CALCulate<n>:STATistics:SCALE:AUTO ONCE

This command optimizes the level setting of the instrument depending on the measured peak power, in order to obtain maximum instrument sensitivity.

To obtain maximum resolution, the level range is set as a function of the measured spacing between peak power and the minimum power for the APD measurement and of the spacing between peak power and mean power for the CCDF measurement. In addition, the probability scale for the number of test points is adapted.

Subsequent commands have to be synchronized with *WAI, *OPC or *OPC? to the end of the auto range process which would otherwise be aborted.

Suffix:

<n> irrelevant

Example:

```
CALC:STAT:SCAL:AUTO ONCE;*WAI
```

Adapts the level setting for statistical measurements.

Manual operation: See ["Adjust Settings"](#) on page 83

CALCulate<n>:STATistics:SCALE:X:RANGe <Value>

This command defines the level range for the x-axis of the measurement diagram. The setting is identical to the level range setting defined with the [DISPlay\[: WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) command.

Suffix:

<n> irrelevant

Parameters:

<Value> 10dB to 200dB

*RST: 100dB

Example:

```
CALC:STAT:SCAL:X:RANG 20dB
```

Manual operation: See ["x-Axis Range"](#) on page 80

CALCulate<n>:STATistics:SCALE:X:RLEVeI <Value>

This command defines the reference level for the x-axis of the measurement diagram. The setting is identical to the reference level setting using the [DISPlay\[: WINDow<n>\]:TRACe<t>:Y\[:SCALE\]:RLEVeI](#) command.

With the reference level offset <> 0 the indicated value range of the reference level is modified by the offset.

The unit depends on the setting performed with [CALCulate<n>:UNIT:POWer](#).

Suffix:

<n> irrelevant

Parameters:

<Value> -120dBm to 20dBm

*RST: -20dBm

Example:

```
CALC:STAT:SCAL:X:RLEV -60dBm
```

Manual operation: See ["x-Axis Ref Level"](#) on page 80

CALCulate<n>:STATistics:SCALE:Y:LOWer <Value>

This command defines the lower limit for the y-axis of the diagram in statistical measurements. Since probabilities are specified on the y-axis, the entered numeric values are dimensionless.

Suffix:

<n> selects the screen

Parameters:

<Value> 1E-9 to 0.1

*RST: 1E-6

Example: CALC:STAT:SCAL:Y:LOW 0.001

Manual operation: See "y-Axis Min Value" on page 82

CALCulate<n>:STATistics:SCALE:Y:UNIT <Unit>

This command defines the scaling type of the y-axis.

Suffix:

<n> selects the screen

Parameters:

<Unit> PCT | ABS

*RST: ABS

Example: CALC:STAT:SCAL:Y:UNIT PCT
Sets the percentage scale.

Manual operation: See "y-Unit % / Abs" on page 82

CALCulate<n>:STATistics:SCALE:Y:UPPer <Value>

This command defines the upper limit for the y-axis of the diagram in statistical measurements. Since probabilities are specified on the y-axis, the entered numeric values are dimensionless.

Suffix:

<n> irrelevant

Parameters:

<Value> 1E-8 to 1.0

*RST: 1.0

Example: CALC:STAT:SCAL:Y:UPP 0.01

Manual operation: See "y-Axis Max Value" on page 82

4.2.3.8 Other Referenced CALCulate Commands

| | |
|------------------------------|-----|
| CALCulate<n>:THReshold..... | 183 |
| CALCulate<n>:UNIT:POWer..... | 183 |

CALCulate<n>:THReshold <Threshold>

This command defines a threshold value for the marker peak search.

A threshold line is automatically turned on.

Suffix:

<n> irrelevant

Parameters:

<Threshold> The unit depends on `CALCulate<n>:UNIT:POWER`.

*RST: (STATe to OFF)

Example:

`CALC:THR -82DBM`

Sets the threshold value to -82 dBm.

CALCulate<n>:UNIT:POWER <Unit>

This command selects the unit of the y-axis.

The unit applies to all measurement windows.

Suffix:

<n> irrelevant

Parameters:

<Unit> DBM | V | A | W | DBPW | WATT | DBUV | DBMV | VOLT |
DBUA | AMPere

*RST: dBm

Example:

`CALC:UNIT:POW DBM`

Sets the power unit to dBm.

4.3 CONFigure Subsystem

The following commands configure code domain measurements.

CONFigure:CDPower[:BTS]:CTABLE[:STATe] <State>

This command activates or deactivates the 'RECENT' channel table. To select another channel table, use the `CONFigure:CDPower[:BTS]:CTABLE:SElect` command.

Parameters:

<State> **ON | OFF**

*RST: OFF

Example:

`CONF:CDP:CTAB ON`

Activates the 'RECENT' channel table.

Mode:

CDMA, EVDO, TDS, WCDMA

Manual operation:

See "[Channel Search Mode](#)" on page 24

CONFigure:CDPower[:BTS]:CTABLE:CATalog?

This command queries the names of all the channel tables stored on the flash disk for the current operating mode.

The syntax for the return values is: <sum of file lengths of all files>, <free disk space>, <1st file name>, <1st file length>, <2nd file name>, <2nd file length>, ..., <nth file name>, <nth file length>

Example: `CONF:CDP:CTAB:CAT?`
Returns all existing channel tables.

Usage: Query only

Mode: CDMA, EVDO, TDS, WCDMA

Manual operation: See "[Channel Tables](#)" on page 24

CONFigure:CDPower[:BTS]:CTABLE:COMMent <Comment>

This command defines a comment for the channel table selected with `CONFigure:CDPower[:BTS]:CTABLE:NAME`.

Parameters:
<Comment> comment for the channel table

Example: `CONF:CDP:CTAB:NAME 'CTAB_1'`
Selects channel table 'CTAB_1'.
`CONF:CDP:CTAB:COMM 'Comment for CTAB_1'`
Writes a comment for 'CTAB_1'.

Mode: CDMA, EVDO, TDS, WCDMA

CONFigure:CDPower[:BTS]:CTABLE:COpy <TargetFileName>

This command copies one channel table to another. Select the channel table you want to copy using the `CONFigure:CDPower[:BTS]:CTABLE:NAME` command. The name of the channel table may contain up to eight characters.

Parameters:
<TargetFileName> <string> = name of the new channel table

Example: `CONF:CDP:CTAB:NAME 'CTAB_1'`
Selects channel table 'CTAB_1'.
`CONF:CDP:CTAB:COpy 'CTAB_2'`
Makes a copy of 'CTAB_1' with the name 'CTAB_2'.

Mode: CDMA, EVDO, TDS, WCDMA

Manual operation: See "[New / Copy / Edit](#)" on page 24

CONFigure:CDPower[:BTS]:CTABLE:DATA <numeric values>

This command sets the parameters of the channel table selected or created with the CONFigure:CDPower[:BTS]:CTABLE:NAME command.

Parameters:

<numeric values> To define a channel (one row in the channel table), you have to enter eight values in the following order:
<channel type>, <code class>, <code number>, <modulation type>, <midamble shift>, <status>, <reserved 1>, <reserved 2>, ...

<channel type>

The channel type is coded with numbers:

1 = Midamble

2 = DPCH

3 = P-CCPCH

4 = S-CCPCH

5 = FPACH

6 = PRACH

7 = PICH

<code class>

0...4

<code number>

0...[spreading factor-1]

<modulation type>

0 = invalid (for midamble)

1 = QPSK

2 = 8PSK

3 = 16QAM

4 = 64QAM

<midamble shift>

1...16

<status>

0 = inactive

1 = active

<reserved 1>

always 0 (reserved)

<reserved 2>

always 0 (reserved)

*RST: RST value

Example:

```
CONF:CDP:CTAB:NAME 'CTAB_1'
```

Selects or creates channel table 'CTAB_1'

```
CONF:CDP:CTAB:DATA
```

```
'2,4,1,1,1,1,0,0,2,4,2,1,1,1,0,0'
```

Defines two data channels with QPSK modulation.

Mode:

TDS

Manual operation:

See "Add Channel" on page 25

CONFigure:CDPower[:BTS]:CTABLE:DELeTe

This command deletes the selected channel table. Select the channel table you want to delete using the `CONFigure:CDPower[:BTS]:CTABLE:NAME` command.

Example:

```
CONF:CDP:CTAB:NAME 'CTAB_1'
Selects channel table 'CTAB_1'
CONF:CDP:CTAB:DEL
'2,4,1,1,1,1,0,0,2,4,2,1,1,1,0,0'
Deletes channel table 'CTAB_1'.
```

Mode: CDMA, EVDO, TDS, WCDMA

CONFigure:CDPower[:BTS]:CTABLE:MSHift <numeric value>

This command sets the maximum number of midamble shifts in the channel table.

Parameters:

<numeric value> **2 | 4 | 6 | 8 | 10 | 12 | 14 | 16**
*RST: 16

Example:

```
CONF:CDP:CTAB:NAME 'CTAB_1'
Selects channel table 'CTAB_1'
CONF:CDP:CTAB:MSH 4
Sets the maximum number of midamble shifts to 4.
```

Mode: TDS

CONFigure:CDPower[:BTS]:CTABLE:NAME <ChannelTable>

This command selects an existing channel table or creates a new one. Use this command to edit the channel table. To use a channel table for a measurement, use the `CONFigure:CDPower[:BTS]:CTABLE:SElect` command.

Parameters:

<ChannelTable> <string> = name of the channel table

Example:

```
CONF:CDP:CTAB:NAME 'NEW_TAB'
Selects channel table for editing. If a channel table with this
name does not exist, a new channel table by that name is cre-
ated.
```

Mode: CDMA, EVDO, TDS, WCDMA

Manual operation: See "[New / Copy / Edit](#)" on page 24

CONFigure:CDPower[:BTS]:CTABLE:ORDer <CODE | MIDamble>

This command selects sorting of the channel table in code order or midamble order.

Parameters:**<CODE | MIDamble> CODE**

Channels are sorted in code order.

MIDamble

Channels are sorted in midamble order.

***RST:** CODE**Example:**`CONF:CDP:CTAB:ORD`

Sorts the channels in code order.

Mode:

TDS

Manual operation: See "[Channel Table Sort Order](#)" on page 28**CONFigure:CDPower[:BTS]:CTABLE:REStore**

This command restores the predefined channel tables to their factory-set values. In this way, you can undo unintentional overwriting.

Example:`CONF:CDP:CTAB:REST`

Restores the predefined channel tables.

Usage:

Event

Mode:

CDMA, EVDO, TDS

CONFigure:CDPower[:BTS]:CTABLE:SElect <ChannelTable>

This command selects the channel table for a measurement. In order to activate a pre-defined channel table with this command, you have to activate the RECENT channel table with the `CONFigure:CDPower[:BTS]:CTABLE[:STATe]` command first.

Parameters:**<ChannelTable>** <string> = name of the channel table.***RST:** RECENT**Example:**`CONF:CDP:CTAB:SEL 'CTAB_1'`

Selects the channel table 'CTAB_1'

Mode:

CDMA, EVDO, TDS, WCDMA

Manual operation: See "[Channel Search Mode](#)" on page 24**CONFigure:CDPower[:BTS]:MEASurement <measurement>**

This command selects the measurements of the TD-SCDMA BTS and UE Measurement Application.

Parameters:

| | |
|---------------|---|
| <measurement> | ACLR Adjacent Channel Power |
| | CCDF Complementary Cumulative Distribution Function |
| | CDPower Code Domain Power |
| | ESpectrum Spectrum Emission Mask |
| | OBWidth Occupied Bandwidth |
| | POWer Channel Power |
| | PVTime Power vs Time |
| | *RST: CDPower |

Example:

```
CONF:CDP:MEAS POW
Selects Signal Channel Power measurement.
```

Mode:

TDS

Manual operation:

See ["Power"](#) on page 59
 See ["Ch Power ACLR"](#) on page 59
 See ["Spectrum Emission Mask"](#) on page 68
 See ["Occupied Bandwidth"](#) on page 77
 See ["CCDF"](#) on page 79
 See ["Power vs Time"](#) on page 85

CONFigure:CDPower[:BTS]:PVTime:SFRames <numeric value>

This command defines the number of subframes to be used for averaging.

Parameters:

| | |
|-----------------|-----------------|
| <numeric value> | Subframe value. |
| | *RST: 100 |

Example:

```
CONF:CDP:PVT:SFR 50
Sets the number of subframes to 50.
```

Mode:

TDS

Manual operation:

See ["No of Subframes"](#) on page 85

CONFigure:CDPower[:BTS]:PVTime:SPOint <numeric value>

This command sets the switching point between uplink and downlink slots.

Parameters:

| | |
|-----------------|---------|
| <numeric value> | 1 to 7 |
| | *RST: 3 |

Example: `CONF:CDP:PVT:SPO 7`
Sets the switching point to 7.

Mode: TDS

Manual operation: See "[Switching Point](#)" on page 85

4.4 DISPlay Subsystem

This chapter describes the remote control commands of the DISPlay subsystem that are specific to the measurement application.

DISPlay[:WINDow<n>]:SIZE <Size>

This command controls the size of the specified measurement window. The result display of the screen is, by default, the same as that of the first measurement screen.

Suffix:
<n> 1...4
window

Parameters:
<Size> **LARGE**
Enlargens the measurement window to full size.
SMALL
Turns the measurement window back to its default size.
***RST: SMALL**

Example: `DISP:WIND2:SIZE LARG`
Maximizes measurement window 2.

Mode: CDMA, EVDO, TDS

DISPlay[:WINDow<n>]:SSElect

This command controls which of the measurement windows is active. Select the measurement window via the numeric suffix.

Suffix:
<n> 1...4
window

Example: `DISP:WIND2:SSEL`
Maximizes measurement window 2.

Mode: CDMA, EVDO, TDS, WCDMA

DISPlay[:WINDow<n>]:STATE <State>

Activates/deactivates the window specified by the suffix <n>. The other measurements are not aborted but continue running in the background:

| | |
|--------------------|--|
| Suffix: | |
| <n> | window |
| Parameters: | |
| <State> | ON OFF |
| | *RST: OFF |
| Example: | DISP:WIND3:STAT ON Turns on a third measurement screen. |
| Mode: | CDMA, EVDO, TDS, WCDMA |

DISPlay[:WINDow<n>]:TRACe<t>:MODE <Mode>

This command defines the type of display and the evaluation of the traces. WRITE corresponds to the Clr/Write mode of manual operation. The trace is switched off (= BLANK in manual operation) with `DISPlay[:WINDow<n>]:TRACe<t>[:STATe]`.

The number of measurements for AVERage, MAXHold and MINHold is defined with the `[SENSe:]AVERage<n>:COUNT` or `[SENSe:]SWEep:COUNT` commands. It should be noted that synchronization to the end of the indicated number of measurements is only possible in single sweep mode.

| | |
|--------------------------|--|
| Suffix: | |
| <n> | window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant. |
| <t> | trace |
| Parameters: | |
| <Mode> | WRITE VIEW AVERage MAXHold MINHold BLANK |
| | *RST: WRITE for TRACe1, STATe OFF for TRACe2/3/4/5/6 |
| | For details on trace modes refer to chapter 3.4.2, "Trace Mode Overview" , on page 112. |
| Example: | INIT:CONT OFF Switching to single sweep mode. SWE:COUN 16 Sets the number of measurements to 16. DISP:TRAC3:MODE MAXH Switches on the calculation of the maximum peak for trace 3. INIT;*WAI Starts the measurement and waits for the end of the 16 sweeps. |
| Manual operation: | See "Clear Write" on page 46 See "Max Hold" on page 46 See "Min Hold" on page 47 See "Average" on page 47 See "View" on page 47 |

DISPlay[:WINDow<n>]:TRACe<t>[:STATE] <State>

This command switches on or off the display of the corresponding trace. The other measurements are not aborted but continue running in the background.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> trace

Parameters:

<State> ON | OFF

*RST: ON for TRACe1, OFF for TRACe2 to 6

Example: DISP:TRAC3 ON

Manual operation: See ["Blank"](#) on page 114

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE] <Range>

This command defines the display range of the y-axis with logarithmic scaling.

The command works only for a logarithmic scaling. You can select the scaling with [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 195.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> irrelevant

Parameters:

<Range> Range: 10 to 200

*RST: 100

Default unit: dB

Example: DISP:TRAC:Y 110dB

Manual operation: See ["Range Log 100 dB"](#) on page 80
 See ["Range Log 50 dB"](#) on page 80
 See ["Range Log 10 dB"](#) on page 81
 See ["Range Log 5 dB"](#) on page 81
 See ["Range Log 1 dB"](#) on page 81
 See ["Range Log Manual"](#) on page 81

DISPlay[:WINDow<n>]:TRACe:Y[:SCALE]:AUTO <ONCE>

This command automatically scales the y-axis in order to get the best display result for the active trace.

Suffix:

<n> 1...4
 window

Parameters:

<ONCE> *RST: OFF

Example:

DISP:WIND2:TRAC:Y:AUTO

Adjusts the y-axis of measurement window 2.

Mode:

CDMA, EVDO, TDS

Manual operation: See ["Auto Scale Once"](#) on page 41

DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:MAXimum <numeric value>

This command defines the upper limit of the y-axis in the indicated measurement window.

Suffix:

<n> 1...4
window

Parameters:

<numeric value> The unit and range depend on the result display.

*RST: depends on the result display

Example:

DISP:TRAC:Y:MIN -60 DBM

DISP:TRAC:Y:MAX 0 DBM

Defines a y-axis with a minimum value of -60 dBm and a maximum value of 0 dBm.

Mode:

CDMA, EVDO, TDS

Manual operation: See ["Y-Axis Maximum"](#) on page 41

DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:MINimum <numeric value>

This command defines the lower limit of the y-axis in the indicated measurement window.

Suffix:

<n> 1...4
window

Parameters:

<numeric value> The unit and range depend on the result display.

*RST: depends on the result display

Example:

DISP:TRAC:Y:MIN -60 DBM

DISP:TRAC:Y:MAX 0 DBM

Defines a y-axis with a minimum value of -60 dBm and a maximum value of 0 dBm.

Mode:

CDMA, EVDO, TDS

Manual operation: See ["Y-Axis Minimum"](#) on page 41

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE <Mode>

This command selects the type of scaling of the y-axis.

When `SYSTem:DISPlay:UPDate` is turned off, this command has no immediate effect on the screen.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> irrelevant

Parameters:

<Mode> **ABSolute**
absolute scaling of the y-axis

RELative
relative scaling of the y-axis

*RST: ABS

Example: `DISP:TRAC:Y:MODE REL`

Manual operation: See "Grid Abs/Rel " on page 95

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:PDIVision <Value>

This remote command determines the grid spacing on the Y axis for all diagrams, where possible.

Suffix:

<n> irrelevant

<t> irrelevant

Parameters:

<Value> numeric value; the unit depends on the result display

*RST: depends on the result display

Example: `DISP:TRAC:Y:PDIV 10`
Sets the grid spacing to 10 units (for example 10 dB in the Code Domain Power result display).

Mode: CDMA, BT, EVDO, TDS, WCDMA

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel <ReferenceLevel>

This command defines the reference level.

With the reference level offset $\neq 0$, the value range of the reference level is modified by the offset.

Suffix:

<n> irrelevant.

<t> irrelevant

Parameters:

<ReferenceLevel> The unit is variable.
 Range: see datasheet
 *RST: -10dBm

Example: DISP:TRAC:Y:RLEV -60dBm

Manual operation: See "[Ref Level](#)" on page 19

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet <Value>

This command defines a reference level offset.

Suffix:

<n> irrelevant.
 <t> irrelevant

Parameters:

<Value> Range: -200 to 200
 *RST: 0
 Default unit: dB

Example: DISP:TRAC:Y:RLEV:OFFS -10dB

Manual operation: See "[Ref Level Offset](#)" on page 19

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition <Position>

This command defines the position of the reference level on the display grid..

Suffix:

<n> Selects the measurement window.
 <t> irrelevant

Parameters:

<Position> 0 PCT corresponds to the lower display border, 100% corresponds to the upper display border.
 Range: 0 to 100
 *RST: Spectrum mode: 100 PCT
 Default unit: PCT

Example: DISP:TRAC:Y:RPOS 50PCT

Manual operation: See "[Ref Level Position](#)" on page 95

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RVALue <Value>

The command defines the power value assigned to the reference position in the grid.

Suffix:

<n> irrelevant
 <t> irrelevant

Parameters:

<Value> *RST: 0 dB, coupled to reference level

Example:

DISP:TRAC:Y:RVAL -20dBm

Defines a reference position of -20 dBm.

DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing <ScalingType>

This command selects the scaling of the y-axis.

Suffix:

<n> Selects the measurement window.

<t> irrelevant

Parameters:

<ScalingType>

LOGarithmic

Logarithmic scaling.

LINear

Linear scaling in %.

LDB

Linear scaling in dB.

*RST: LOGarithmic

Example:

DISP:TRAC:Y:SPAC LIN

Select a linear scale.

Manual operation: See "Range Log 100 dB" on page 80
 See "Range Log 50 dB" on page 80
 See "Range Log 10 dB" on page 81
 See "Range Log 5 dB" on page 81
 See "Range Log 1 dB" on page 81
 See "Range Log Manual" on page 81
 See "Range Linear %" on page 81
 See "Range Lin. Unit" on page 82

4.5 INSTrument subsystem

The INSTrument subsystem selects the operating mode of the unit either via text parameters or fixed numbers.

| | |
|--------------------------|-----|
| INSTrument[:SElect]..... | 195 |
| INSTrument:NSElect..... | 196 |

INSTrument[:SElect] <Mode>

This command switches between the measurement modes by means of text parameters.

Parameters:

| | |
|--------|--|
| <Mode> | BTDS TDS BTS mode (R&S FSV-K76 option) |
| | MTDS TD-SCDMA UE mode (R&S FSV-K77 option) |

INSTRument:NSElect <Mode>

This command switches between the measurement modes by means of numbers.

Parameters:

| | |
|--------|--|
| <Mode> | 17 TDS BTS mode (R&S FSV-K76 option) |
| | 18 TD-SCDMA UE mode (R&S FSV-K77 option) |

4.6 SENSE Subsystem

This chapter describes the remote control commands of the SENSE subsystem that are specific to the measurement application.

| | | |
|---------|---|-----|
| 4.6.1 | SENSe:CDPower Commands..... | 196 |
| 4.6.2 | SENSe:POWer Commands..... | 202 |
| 4.6.3 | Other SENSE Commands Referenced in this Manual..... | 203 |
| 4.6.3.1 | SENSe:ADJust Subsystem..... | 203 |
| 4.6.3.2 | SENSe:ESpectrum Subsystem..... | 205 |
| 4.6.3.3 | SENSe:BANDwidth subsystem..... | 217 |
| 4.6.3.4 | SENSe:FREQuency subsystem..... | 220 |
| 4.6.3.5 | SENSe:POWer subsystem..... | 224 |
| 4.6.3.6 | SENSe:SWEEp subsystem..... | 234 |
| 4.6.3.7 | Other Commands in the SENSE Subsystem..... | 240 |

4.6.1 SENSE:CDPower Commands

The SENSE:CDPower subsystem configures the code domain measurements.

[SENSe:]CDPower:CODE <CodeNo>

This command selects the code number.

Parameters:

<CodeNo> <numeric value>
 Range: 1 to 16 (depends on the base spreading factor)
 Increment: 1
 *RST: 1

Example:

CDP:CODE 8
 Selects the eighth channel.

Mode:

TDS

[SENSe:]CDPower:ICThreshold <ThresholdLevel>

This command defines the minimum power that a single channel must have compared to the total signal in order to be regarded as an active channel. Channels below the specified threshold are regarded as "inactive".

Parameters:

<ThresholdLevel> Range: -100 dB to 0 dB
 *RST: -60 dB

Example:

CDP:ICT -50
 Sets the Inactive Channel Threshold to -50 dB.

Mode:

CDMA, EVDO, TDS, WCDMA

Manual operation: See "[Inactive Channel Threshold](#)" on page 24

[SENSe:]CDPower:IQLength <CaptureLength>

This command specifies the number of frames/slots that are captured by one sweep.

In CDMA mode, this command sets the capture length in multiples of the power control group.

Parameters:

<CaptureLength> Range: 2 to 63
 *RST: 7

Example:

SENS:CDP:IQLength 3

Mode:

TDS

Manual operation: See "[Capture Length](#)" on page 20

[SENSe:]CDPower:LEVel:ADJust

This command adjusts the reference level to the measured channel power. This ensures that the settings of the RF attenuation and the reference level are optimally adjusted to the signal level without overloading the R&S FSVR or limiting the dynamic range by an S/N ratio that is too small.

Example:

CDP:LEV:ADJ
 Adjusts the reference level.

Mode: CDMA, EVDO, TDS, WCDMA

[SENSe:]CDPower:MMAx <ModType>

This command defines the highest modulation to be considered in the automatic channel search. In low SNR environments it may be necessary to limit the channel search to lower modulations than 64QAM.

Parameters:

<ModType>

QPSK

Consider QPSK modulation only

PSK8

Consider QPSK and 8PSK modulation.

QAM16

Consider QPSK, 8PSK and 16QAM modulation

QAM64

Consider QPSK, 8PSK, 16QAM and 64QAM modulation

*RST: QAM64

Example:

SENS:CDP:MMAx PSK8

assume QPSK and 8PSK modulations only for the automatic channel search

Mode: TDS

Manual operation: See "[Max Modulation](#)" on page 23

[SENSe:]CDPower:MSHift <numeric value>

This command sets the maximum number of midamble shifts.

Parameters:

<numeric value>

Range: 2 to 16

Increment: 2

*RST: 16

Example:

CDP:MSH 10

Sets the maximum number of midamble shifts to 10.

Mode: TDS

Manual operation: See "[MA Shift Cells/No. of Users](#)" on page 22

[SENSe:]CDPower:NORMalize <boolean>

This command activates or deactivates the elimination of the IQ offset from the signal.

Parameters:

<ON | OFF>

*RST: OFF

Example:

CDP:NORM ON

Activates normalization.

Mode: CDMA, EVDO, TDS, WCDMA

Manual operation: See ["Normalize"](#) on page 28

[SENSe:]CDPower:QINVert <State>

This command inverts the Q component of the signal.

Parameters:

ON | OFF *RST: OFF

Example: CDP:QINV ON
Activates inversion of Q component.

Mode: CDMA, EVDO, TDS, WCDMA

Manual operation: See ["Invert Q"](#) on page 20

[SENSe:]CDPower:SBANd <NORMal | INVers>

This command is used to swap the left and right sideband.

Parameters:

<NORMal | INVers> *RST: NORM

Example: CDP:SBAN INV
Switches the right and left sideband.

Mode: CDMA, EVDO, TDS

[SENSe:]CDPower:SCODe <numeric value>

This command sets the scrambling code of the base station.

Parameters:

<numeric value> Range: 0 to 127
Increment: 1
*RST: 0

Example: CDP:SCOD 28
Sets scrambling code 28.

Mode: TDS

Manual operation: See ["Scrambling Code"](#) on page 22

[SENSe:]CDPower:SET <SetNo>

This command selects a specific set for further analysis. The number of sets has to be defined with the [\[SENSe:\]CDPower:SET](#) command before using this command.

Parameters:

<SetNo> Range: 0 to SET COUNT -1
 Increment: 1
 *RST: 0

Example:

CDP:SET:COUN 10
 Selects the 10th set for further analysis.

Mode:

CDMA, EVDO, TDS

Manual operation: See "[Set to Analyze](#)" on page 20

[SENSe:]CDPower:SET:COUNT <NoOfSets>

This command sets the number of sets to be captured and stored in the instrument's memory.

Refer to "[Set Count](#)" on page 20 for more information.

Parameters:

<NoOfSets> Range: 1 to TDS: 99; CDMA: 490
 Increment: 1
 *RST: 1

Example:

CDP:SET:COUN 12
 Sets the number of sets to 12.

Mode:

TDS

Manual operation: See "[Set Count](#)" on page 20

[SENSe:]CDPower:SLOT <numeric value>

This command selects the slot/Power Control Group (PCG) to be analyzed.

Parameters:

<numeric value> Range: 0 to TDS: 62; CDMA: (capture length-1); WCDMA.
 14
 Increment: 1
 *RST: 0

The capture length is defined via the [\[SENSe:\]CDPower:IQLength](#) command.

Example:

CDP:SLOT 7
 Selects slot number 7 for analysis.

Mode:

CDMA, EVDO, TDS, WCDMA

Manual operation: See "[Channel \(Code\) Number](#)" on page 27

[SENSe:]CDPower:STSLOT <State>

This command selects the phase reference for downlink measurements (see "[Sync To \(downlink, K76\)](#)" on page 22).

Parameters:

<State> ON | OFF

ON
The instrument synchronizes to the midamble of the selected slot.

OFF
The instrument synchronizes to the P-CCPCH in slot 0.

*RST: OFF

Example:

CDP:SLOT 7
Selects slot number 7.

CDP:STSL ON
Activates synchronizing to the midamble of slot 7.

Mode: TDS

Manual operation: See "[Sync To \(downlink, K76\)](#)" on page 22

[SENSe:]CDPower:STSLot:MODE <Mode>

This command selects the phase reference for uplink measurements (see "[Sync To \(uplink, K77\)](#)" on page 23).

Parameters:

<Mode> CODE | MA

CODE
The instrument synchronizes to the code channel of the selected slot.

MA
The instrument synchronizes to the midamble of the selected slot.

*RST: MA

Example:

CDP:STSL:MODE CODE
Activates code channel synchronizing

Mode: TDS

Manual operation: See "[Sync To \(uplink, K77\)](#)" on page 23

[SENSe:]CDPower:STSLot:ROTate <Mode>

By default, the R&S FSV-K76/77 determines one phase reference for all midambles and code channels of a data slot. If this command is activated, phase rotations between the code channels are allowed. Each code channel gets its own phase reference from the associated midamble according to section AA.2 of the standard document 3GPP TS 25.221. If the associated midamble is missing, the common phase reference is used for this code channel.

Parameters:

<Mode> ON | OFF
 *RST: OFF

Example:

CDP:STSL:ROT ON
 Allows phase rotations between code channels.

Mode: TDS

Manual operation: See ["Rotate code channel to associated midamble"](#) on page 23

4.6.2 SENSe:POWer Commands

The SENSe:POWer subsystem configures the RF Power measurement.

| | |
|---|-----|
| [SENSe:]POWer:ACHannel:AUTO:LTIME | 202 |
| [SENSe:]POWer:ACHannel:SLOT:STarT | 202 |
| [SENSe:]POWer:ACHannel:SLOT:STOP | 202 |

[SENSe:]POWer:ACHannel:AUTO:LTIME

This command automatically adjusts the reference level and the trigger to frame time to their optimum levels. This prevents overloading of the R&S FSVR.

Current measurements are aborted when this command is executed and resumed after the automatic level detection is finished.

Usage: Event

Mode: TDS

Manual operation: See ["Auto Level & Time"](#) on page 59
 See ["Auto Level & Time"](#) on page 86

[SENSe:]POWer:ACHannel:SLOT:STarT <StopSlot>

Sets the first slot of the measurement.

Parameters:

<StartSlot> The start slot may not be larger than the stop slot.
 Range: 1 to 7
 *RST: 4 (BTS); 1 (MS)

Example: POW:ACH:SLOT:STAR 2

Mode: TDS

Manual operation: See ["Start Slot"](#) on page 59

[SENSe:]POWer:ACHannel:SLOT:STOP <StopSlot>

Sets the last slot of the measurement.

Parameters:

<StopSlot> The stop slot may not be lower than the start slot.
In MS mode, stop slots other than 1 require an external trigger.

Range: 1 to 7
*RST: 6 (BTS); 1 (MS)

Example: POW:ACH:SLOT:STOP 5

Mode: TDS

Manual operation: See "Stop Slot" on page 59

4.6.3 Other SENSe Commands Referenced in this Manual

4.6.3.1 SENSe:ADJust Subsystem

| | |
|--|-----|
| [SENSe:]ADJust:ALL..... | 203 |
| [SENSe:]ADJust:CONFiguration:HYSTerisis:LOWer..... | 203 |
| [SENSe:]ADJust:CONFiguration:HYSTerisis:UPPer..... | 204 |
| [SENSe:]ADJust:CONFigure:LEVel:DURation..... | 204 |
| [SENSe:]ADJust:CONFigure:LEVel:DURation:MODE..... | 204 |
| [SENSe:]ADJust:FREQuency..... | 205 |
| [SENSe:]ADJust:LEVel..... | 205 |

[SENSe:]ADJust:ALL

This command determines the ideal frequency and level configuration for the current measurement.

Example: ADJ:ALL

Manual operation: See "Auto All" on page 44

[SENSe:]ADJust:CONFiguration:HYSTerisis:LOWer <Threshold>

This command defines a lower threshold the signal must drop below before the reference level is automatically adjusted when the "Auto Level" function is performed.

For more information see [SENSe:]ADJust:LEVel).

Parameters:

<Threshold> Range: 0 to 200
*RST: +1 dB
Default unit: dB

Example: SENS:ADJ:CONF:HYST:LOW 2

Example: For an input signal level of currently 20 dBm, the reference level will only be adjusted when the signal level falls below 18 dBm.

Manual operation: See "Lower Level Hysteresis" on page 45

[SENSe:]ADJJust:CONFIguration:HYSTeresis:UPPer <Threshold>

This command defines an upper threshold the signal must exceed before the reference level is automatically adjusted when the "Auto Level" function is performed.

For more information see [[SENSe:\]ADJJust:LEVel](#)).

Parameters:

<Threshold> Range: 0 to 200
 *RST: +1 dB
 Default unit: dB

Example:

SENS:ADJ:CONF:HYST:UPP 2

For an input signal level of currently 20 dBm, the reference level will only be adjusted when the signal level rises above 22 dBm.

Manual operation: See "[Upper Level Hysteresis](#)" on page 45

[SENSe:]ADJJust:CONFIgure:LEVel:DURation <Duration>

This command defines the duration of the level measurement used to determine the optimal reference level automatically (for `SENS:ADJ:LEV ON`).

Parameters:

<Duration> <numeric value> in seconds
 Range: 0.001 to 16000.0
 *RST: 0.001
 Default unit: s

Example:

ADJ:CONF:LEV:DUR:5

Manual operation: See "[Meas Time Manual](#)" on page 44

[SENSe:]ADJJust:CONFIgure:LEVel:DURation:MODE <Mode>

This command selects the way the R&S FSVR determines the length of the measurement that is performed while determining the ideal reference level.

Parameters:

<Mode> **AUTO**
 Automatically determines the measurement length.
 MANual
 Manual definition of the measurement length.
 *RST: AUTO

Example:

ADJ:CONF:LEV:DUR:MODE MAN

Specifies manual definition of the measurement duration.

ADJ:CONF:LEV:DUR:5

Specifies the duration manually.

[SENSe:]ADJust:FREQuency

This command defines the center frequency and the reference level automatically by determining the highest level in the frequency span.

Example: ADJ:FREQ

Manual operation: See "Auto Freq" on page 44

[SENSe:]ADJust:LEVel

This command automatically sets the optimal reference level for the current measurement.

You can define a threshold that the signal must exceed before the reference level is adjusted, see [SENSe:]ADJust:CONFIguration:HYSTeresis:UPPer and [SENSe:]ADJust:CONFIguration:HYSTeresis:LOWer.

Example: ADJ:LEV

Manual operation: See "Adjust Ref Lvl" on page 19
See "Auto Level" on page 44

4.6.3.2 SENSe:ESpectrum Subsystem

The SENSe:ESpectrum subsystem contains the remote commands to configure Spectrum Emission Mask (SEM) measurements.



The sweep list cannot be configured using remote commands during an on-going sweep operation.

| | |
|--|-----|
| [SENSe:]ESpectrum:BWID..... | 206 |
| [SENSe:]ESpectrum:FILTer[:RRC][:STATe]..... | 206 |
| [SENSe:]ESpectrum:FILTer[:RRC]:ALPHA..... | 206 |
| [SENSe:]ESpectrum:HighSPeed..... | 207 |
| [SENSe:]ESpectrum:PRESet[:STANdard]..... | 208 |
| [SENSe:]ESpectrum:PRESet:REStore..... | 208 |
| [SENSe:]ESpectrum:PRESet:StORe..... | 208 |
| [SENSe:]ESpectrum:RANGe<range>:BANDwidth[:RESolution]..... | 208 |
| [SENSe:]ESpectrum:RANGe<range>:BANDwidth:VIDeo..... | 209 |
| [SENSe:]ESpectrum:RANGe<range>:COUNt..... | 209 |
| [SENSe:]ESpectrum:RANGe<range>:DELeTe..... | 209 |
| [SENSe:]ESpectrum:RANGe<range>:FILTer:TYPE..... | 210 |
| [SENSe:]ESpectrum:RANGe<range>[:FREQuency]:StARt..... | 210 |
| [SENSe:]ESpectrum:RANGe<range>[:FREQuency]:StOP..... | 211 |
| [SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation..... | 211 |
| [SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation:AUTO..... | 211 |
| [SENSe:]ESpectrum:RANGe<range>:INPut:GAIN:STATe..... | 212 |
| [SENSe:]ESpectrum:RANGe<range>:INSErt..... | 212 |
| [SENSe:]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:StARt..... | 213 |

| | |
|--|-----|
| [SENSe:]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:STOP..... | 213 |
| [SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:START..... | 213 |
| [SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:STOP..... | 214 |
| [SENSe:]ESpectrum:RANGe<range>:LIMit<source>:STATe..... | 214 |
| [SENSe:]ESpectrum:RANGe<range>:RLEVel..... | 215 |
| [SENSe:]ESpectrum:RANGe<range>:SWEep:TIME..... | 215 |
| [SENSe:]ESpectrum:RANGe<range>:SWEep:TIME:AUTO..... | 215 |
| [SENSe:]ESpectrum:RANGe<range>:TRANsducer..... | 216 |
| [SENSe:]ESpectrum:RRANGe..... | 216 |
| [SENSe:]ESpectrum:RTYPE..... | 216 |

[SENSe:]ESpectrum:BWID <Bandwidth>

This command defines the bandwidth used for measuring the channel power (reference range). This setting takes only effect if channel power is selected as power reference type (see [SENSe:]ESpectrum:RTYPE on page 216).

Parameters:

<Bandwidth> minimum span ≤ value ≤ span of reference range
 *RST: 3.84 MHz

Example:

```
ESP:RTYP CPOW
Sets the power reference type to channel power.
ESP:BWID 1 MHZ
Sets the Tx bandwidth to 1 MHz.
```

Manual operation: See "Edit Reference Range" on page 73

[SENSe:]ESpectrum:FILTer[:RRC][:STATe] <State>

This command activates or deactivates the use of an RRC filter. This setting only takes effect if channel power is selected as power reference type (see [SENSe:]ESpectrum:RTYPE on page 216).

Parameters:

<State> ON | OFF
 *RST: ON

Example:

```
ESP:RTYP CPOW
Sets the power reference type to channel power.
ESP:FILT OFF
Deactivates the use of an RRC filter.
```

Manual operation: See "Edit Reference Range" on page 73

[SENSe:]ESpectrum:FILTer[:RRC]:ALPHA <Value>

This command sets the alpha value of the RRC filter. This setting takes only effect if channel power is selected as power reference type ([SENSe:]ESpectrum:RTYPE command) and if the RRC filter is activated ([SENSe:]ESpectrum:FILTer[:RRC][:STATe] command).

Parameters:

<Value> 0 to 1
 *RST: 0.22

Example:

```
ESP:RTYP CPOW
Sets the power reference type to channel power.
ESP:FILT ON
Activates the use of an RRC filter.
ESP:FILT:ALPH 0.5
Sets the alpha value of the RRC filter to 0.5.
```

Manual operation: See ["Edit Reference Range"](#) on page 73

[SENSe:]ESpectrum:HighSPeed <State>

This command activates Fast SEM mode to accelerate spurious emission mask measurements. For details see [chapter 3.4.9, "Fast Spectrum Emission Mask Measurements"](#), on page 126.

Note that in Fast SEM mode, the following parameters cannot be changed in all ranges:

- Filter type, see [\[SENSe:\]ESpectrum:RANGe<range>:FILTer:TYPE](#) on page 210
- RBW, see [\[SENSe:\]ESpectrum:RANGe<range>:BANDwidth\[:RESolution\]](#) on page 208
- VBW, see [\[SENSe:\]ESpectrum:RANGe<range>:BANDwidth:VIDeo](#) on page 209
- Sweep Time Mode, see [\[SENSe:\]ESpectrum:RANGe<range>:SWEep:TIME:AUTO](#) on page 215
- Sweep Time, see [\[SENSe:\]ESpectrum:RANGe<range>:SWEep:TIME](#) on page 215
- Reference level, see [\[SENSe:\]ESpectrum:RANGe<range>:RLEVel](#) on page 215
- RF Att Mode, see [\[SENSe:\]ESpectrum:RANGe<range>:INPut:ATTenuation:AUTO](#) on page 211
- Rf Attenuation, see [\[SENSe:\]ESpectrum:RANGe<range>:INPut:ATTenuation](#) on page 211
- Preamp, see [\[SENSe:\]ESpectrum:RANGe<range>:INPut:GAIN:STate](#) on page 212

Parameters:

<State> ON | OFF
 *RST: OFF

Example: ESP:HSP ON

Manual operation: See ["Fast SEM"](#) on page 69

[SENSe:]ESpectrum:PRESet:STANdard]

This command selects the specified XML file under C:\r_s\instr\sem_std. If the file is stored in a subdirectory, include the relative path.

Example: ESP:PRES 'WCDMA\3GPP\DL\PowerClass_31_39.xml'
 Selects the PowerClass_31_39.xml XML file in the C:\R_S\instr\sem_std\WCDMA\3GPP\DL directory.
 ESP:PRES?
 W-CDMA 3GPP DL (31,39)dBm
 The query returns information about the selected standard, the link direction and the power class. If no standard has been selected, the query returns None.

Manual operation: See "[Load Standard](#)" on page 76

[SENSe:]ESpectrum:PRESet:RESTore

This command copies the XML files from the C:\R_S\instr\sem_backup folder to the C:\R_S\instr\sem_std folder. Files of the same name are overwritten.

Example: ESP:PRES:REST
 Restores the originally provided XML files.

Manual operation: See "[Restore Standard Files](#)" on page 77

[SENSe:]ESpectrum:PRESet:STORe <FileName>

This command stores the current settings as presettings in the specified XML file under C:\r_s\instr\sem_backup.

Parameters:
 <FileName>

Example: ESP:PRES:STOR
 'WCDMA\3GPP\DL\PowerClass_31_39.xml'
 Stores the settings in the PowerClass_31_39.xml file in the C:\R_S\instr\sem_std\WCDMA\3GPP\DL directory.

Manual operation: See "[Save As Standard](#)" on page 77

[SENSe:]ESpectrum:RANGe<range>:BANDwidth[:RESolution] <Value>

This command sets the RBW value for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSPeed](#) on page 207).

Suffix:
 <range> 1...20
 range

Parameters:

<Value> Refer to the data sheet.
*RST: 30.0 kHz

Example:

ESP:RANG2:BAND:RES 5000
Sets the RBW for range 2 to 5 kHz.

Manual operation: See "RBW" on page 70

[SENSe:]ESpectrum:RANGe<range>:BANDwidth:VIDeo <Value>

This command sets the VBW value for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [SENSe:]ESpectrum:HighSPeed on page 207).

Suffix:

<range> 1...20
range

Parameters:

<Value> Refer to the data sheet.
*RST: 10.0 MHz

Example:

ESP:RANG1:BAND:VID 5000000
Sets the VBW for range 1 to 5 MHz.

Manual operation: See "VBW" on page 70

[SENSe:]ESpectrum:RANGe<range>:COUNT

This command returns the number of defined ranges.

Suffix:

<range> 1...20
range

Example:

ESP:RANG:COUNT?
Returns the number of defined ranges.

[SENSe:]ESpectrum:RANGe<range>:DELeTe

This command deletes the specified range. The range numbers are updated accordingly. The reference range cannot be deleted. A minimum of three ranges is mandatory.

Suffix:

<range> 1...20
range

Example:

ESP:RANG4:DEL
Deletes range 4.

Manual operation: See "Delete Range" on page 73

[SENSe:]ESPectrum:RANGe<range>:FILTer:TYPE <Type>

This command sets the filter type for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESPectrum:HighSPeed](#) on page 207).

Suffix:

<range> 1...20
range

Parameters:

<Type> **NORMAL**
Gaussian filters

CFILter
channel filters

RRC
RRC filters

P5
5 Pole filters

*RST: NORM
The available bandwidths of the filters are specified in the data sheet.

Example:

```
ESP:RANG1:FILT:TYPE RRC
```

Sets the RRC filter type for range 1.

Manual operation: See ["Filter Type"](#) on page 70

[SENSe:]ESPectrum:RANGe<range>[:FREQUency]:STARt <Frequency>

This command sets the start frequency for the specified range.

In order to change the start/stop frequency of the first/last range, select the appropriate span. If you set a span that is smaller than the overall span of the ranges, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz. The first and last range are adapted to the given span as long as the minimum span of 20 Hz is not violated.

Note the rules for the <Frequency> parameter specified in [chapter 3.4.5, "Ranges and Range Settings"](#), on page 116.

Suffix:

<range> 1...20
range

Parameters:

<Frequency> numeric value

*RST: -250.0 MHz (range 1), -2.52 MHz (range 2), 2.52 MHz (range 3)

Example:

```
ESP:RANG1:STAR 100000000
```

Sets the start frequency for range 1 to 100 MHz.

Manual operation: See "Range Start / Range Stop" on page 69

[SENSe:]ESpectrum:RANGe<range>[:FREQUENCY]:STOP <Frequency>

This command sets the stop frequency for the specified range. For further details refer to the `[SENSe:]ESpectrum:RANGe<range>[:FREQUENCY]:START` command.

Note the rules for the <Frequency> parameter specified in [chapter 3.4.5, "Ranges and Range Settings"](#), on page 116.

Suffix:

<range> 1...20
range

Parameters:

<Frequency> numeric value
*RST: -2.52 MHz (range 1), 2.52 MHz (range 2), 250.0 MHz (range 3)

Example: ESP:RANG3:STOP 10000000
Sets the stop frequency for range 2 to 10 MHz.

Manual operation: See "Range Start / Range Stop" on page 69

[SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation <Value>

This command sets the attenuation for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSPeed](#) on page 207).

Suffix:

<range> 1...20
range

Parameters:

<Value> Refer to the data sheet.
*RST: 0 dB

Example: ESP:RANG3:INP:ATT 10
Sets the attenuation of range 3 to 10 dB.

Manual operation: See "RF Attenuator" on page 71

[SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation:AUTO <State>

This command activates or deactivates the automatic RF attenuation setting for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSPeed](#) on page 207).

Suffix:
 <range> 1...20
 range

Parameters:
 <State> ON | OFF
 *RST: ON

Example: ESP:RANG2:INP:ATT:AUTO OFF
 Deactivates the RF attenuation auto mode for range 2.

Manual operation: See "[RF Att. Mode](#)" on page 70

[SENSe:]ESpectrum:RANGe<range>:INPut:GAIN:STATe <State>

This command switches the preamplifier on or off for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [[SENSe:\]ESpectrum:HighSPeed](#) on page 207).

Suffix:
 <range> 1...20
 range

Parameters:
 <State> ON | OFF
 *RST: OFF

Example: ESP:RANG3:INP:GAIN:STATe ON
 Switches the preamplifier for range 3 on or off.

Manual operation: See "[Preamp](#)" on page 71

[SENSe:]ESpectrum:RANGe<range>:INSert <Mode>

This command inserts a new range before or after the specified range. The range numbers are updated accordingly.

Suffix:
 <range> 1...20
 range

Parameters:
 <Mode> AFTer | BEFore

Example: ESP:RANG3:INS BEF
 Inserts a new range before range 3.
 ESP:RANG1:INS AFT
 Inserts a new range after range 1.

Manual operation: See "[Insert before Range](#)" on page 72
 See "[Insert after Range](#)" on page 72

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:STARt <Level>

This command sets an absolute limit value at the start frequency of the specified range. Different from manual operation, this setting is independently of the defined limit check type.

Suffix:

<range> 1...20
range

Parameters:

<Level> -400 to in 400 dBm
*RST: 13 dBm

Example:

ESP:RANG1:LIM:ABS:STAR 10

Sets an absolute limit of 10 dBm at the start frequency of the range.

Manual operation: See "[Abs Limit Start](#)" on page 71

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:STOP <Level>

This command sets an absolute limit value at the stop frequency of the specified range. Different from manual operation, this setting is independent of the defined limit check type.

Suffix:

<range> 1...20
range

Parameters:

<Level> -400 to in 400 dBm
*RST: 13 dBm

Example:

ESP:RANG1:LIM:ABS:STOP 20

Sets an absolute limit of 20 dBm at the stop frequency of the range.

Manual operation: See "[Abs Limit Stop](#)" on page 72

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:STARt <Limit>

This command sets a relative limit value at the start frequency of the specified range. Different from manual operation, this setting is independent of the defined limit check type.

Suffix:

<range> 1...20
range

Parameters:

<Limit> -400 to in 400 dBc
*RST: -50 dBc

Example: `ESP:RANG3:LIM:REL:STAR -20`
Sets a relative limit of -20 dBc at the start frequency of the range.

Manual operation: See "[Rel Limit Start](#)" on page 72

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:STOP <Limit>

This command sets a relative limit value at the stop frequency of the specified range. Different from manual operation, this setting is independently of the defined limit check type.

Suffix:
<range> 1...20
range

Parameters:
<Limit> -400 to in 400 dBc
*RST: -50 dBc

Example: `ESP:RANG3:LIM:REL:STOP 20`
Sets a relative limit of 20 dBc at the stop frequency of the range.

Manual operation: See "[Rel Limit Stop](#)" on page 72

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:STATe <State>

This command sets the type of limit check for all ranges.

Suffix:
<range> irrelevant

Parameters:
<State> ABSolute | RELative | AND | OR

ABSolute

Checks only the absolute limits defined.

RELative

Checks only the relative limits. Relative limits are defined as relative to the measured power in the reference range.

AND

Combines the absolute and relative limit. The limit check fails when both limits are violated.

OR

Combines the absolute and relative limit. The limit check fails when one of the limits is violated.

*RST: REL

Example: `ESP:RANG3:LIM:STAT AND`
Sets for all ranges the combined absolute/relative limit check.

Manual operation: See "[Limit Check 1-4](#)" on page 71

[SENSe:]ESpectrum:RANGe<range>:RLEVel <Value>

This command sets the reference level for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [SENSe:]ESpectrum:HighSpeed on page 207).

Suffix:

<range> 1...20
range

Parameters:

<Value> Refer to the data sheet.
*RST: -20 dBm

Example:

ESP:RANG2:RLEV 0
Sets the reference level of range 2 to 0 dBm.

Manual operation: See "Ref. Level" on page 70

[SENSe:]ESpectrum:RANGe<range>:SWEep:TIME <SweepTime>

This command sets the sweep time for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [SENSe:]ESpectrum:HighSpeed on page 207).

Suffix:

<range> 1...20
range

Parameters:

<SweepTime> Allowed values depend on the ratio of span to RBW and RBW to VBW. For details refer to the data sheet.
*RST: 0.27 s

Example:

ESP:RANG1:SWE:TIME 1
Sets the sweep time for range 1 to 1 s.

Manual operation: See "Sweep Time" on page 70

[SENSe:]ESpectrum:RANGe<range>:SWEep:TIME:AUTO <State>

This command activates or deactivates the automatic sweep time setting for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [SENSe:]ESpectrum:HighSpeed on page 207).

Suffix:

<range> 1...20
range

Parameters:

<State> ON | OFF
 *RST: ON

Example:

ESP:RANG3:SWE:TIME:AUTO OFF
 Deactivates the sweep time auto mode for range 3.

Manual operation: See "[Sweep Time Mode](#)" on page 70

[SENSe:]ESpectrum:RANGe<range>:TRANsducer <TransducerName>

This command sets a transducer for the specified range. You can only choose a transducer that fulfills the following conditions:

- The transducer overlaps or equals the span of the range.
- The x-axis is linear.
- The unit is dB.

Suffix:

<range> 1...20
 range

Parameters:

<TransducerName> 'string' = name of the transducer

Example:

ESP:RANG1:TRAN 'test'
 Sets the transducer called test for range 1.

Manual operation: See "[Transd. Factor](#)" on page 71

[SENSe:]ESpectrum:RRANGe

This command returns the current position (number) of the reference range.

Example:

ESP:RRAN?
 Returns the current position (number) of the reference range.

[SENSe:]ESpectrum:RTYPE <Type>

This command sets the power reference type.

Parameters:

<Type> PEAK | CPOWer

PEAK

Measures the highest peak within the reference range.

CPOWer

Measures the channel power within the reference range (integral bandwidth method).

*RST: CPOWer

Example:

ESP:RTYP PEAK
 Sets the peak power reference type.

Manual operation: See "Edit Reference Range" on page 73

4.6.3.3 SENSe:BANDwidth subsystem

| | |
|--|-----|
| [SENSe:]BANDwidth BWIDth[:RESolution]..... | 217 |
| [SENSe:]BANDwidth BWIDth[:RESolution]:AUTO..... | 217 |
| [SENSe:]BANDwidth BWIDth[:RESolution]:FFT..... | 218 |
| [SENSe:]BANDwidth BWIDth[:RESolution]:RATio..... | 218 |
| [SENSe:]BANDwidth BWIDth[:RESolution]:TYPE..... | 218 |
| [SENSe:]BANDwidth BWIDth:VIDeo..... | 219 |
| [SENSe:]BANDwidth BWIDth:VIDeo:AUTO..... | 219 |
| [SENSe:]BANDwidth BWIDth:VIDeo:RATio..... | 220 |
| [SENSe:]BANDwidth BWIDth:VIDeo:TYPE..... | 220 |

[SENSe:]BANDwidth|BWIDth[:RESolution] <Bandwidth>

This command defines the resolution bandwidth.

The available resolution bandwidths are specified in the data sheet. For details on the correlation between resolution bandwidth and filter type refer to [chapter 3.4.3, "Selecting the Appropriate Filter Type"](#), on page 114.

In realtime mode, the resolution bandwidth is always coupled to the span. In all other modes, a change of the resolution bandwidth automatically turns the coupling to the span off.

Parameters:

<Bandwidth> refer to data sheet
 *RST: (AUTO is set to ON)

Example:

BAND 1 MHz
 Sets the resolution bandwidth to 1 MHz

Manual operation: See "Res BW" on page 79
 See "Res BW Manual" on page 96

[SENSe:]BANDwidth|BWIDth[:RESolution]:AUTO <State>

This command couples and decouples the resolution bandwidth to the span.

The automatic coupling adapts the resolution bandwidth to the current frequency span according to the relationship between frequency span and resolution bandwidth.

Use [SENSe:]BANDwidth|BWIDth[:RESolution]:RATio to define the ratio RBW/span.

Parameters:

<State> ON | OFF
 *RST: ON

Example:

BAND:AUTO OFF
 Switches off the coupling of the resolution bandwidth to the span.

Manual operation: See ["Res BW Manual"](#) on page 96
 See ["Res BW Auto"](#) on page 96
 See ["Default Coupling"](#) on page 101

[SENSe:]BANDwidth|BWIDth[:RESolution]:FFT <FilterMode>

This command defines the filter mode of FFT filters by defining the partial span size. The partial span is the span which is covered by one FFT analysis.

This command is only available for sweep type "FFT".

Parameters:

<FilterMode>

AUTO

The firmware determines whether to use wide or narrow filters to obtain the best measurement results.

NARRow

The FFT filters with the smaller partial span are used. This allows you to perform measurements near a carrier with a reduced reference level due to a narrower analog prefilter.

*RST: AUTO

Example:

BAND:TYPE FFT
 Select FFT filter.

Example:

BAND:FFT NARR
 Select narrow partial span for FFT filter.

Manual operation: See ["Auto"](#) on page 99
 See ["Narrow"](#) on page 99

[SENSe:]BANDwidth|BWIDth[:RESolution]:RATio <Ratio>

This command defines the ratio between the resolution bandwidth (Hz) and the span (Hz).

Note that the ratio defined with the remote command (RBW/span) is reciprocal to that of the manual operation (span/RBW).

Parameters:

<Ratio>

Range: 0.0001 to 1

*RST: 0.01

Example:

BAND:RAT 0.01

Manual operation: See ["Span/RBW Manual"](#) on page 101

[SENSe:]BANDwidth|BWIDth[:RESolution]:TYPE <FilterType>

This command selects the type of resolution filter.

For detailed information on filters see [chapter 3.4.3, "Selecting the Appropriate Filter Type"](#), on page 114 and [chapter 3.4.4, "List of Available RRC and Channel Filters"](#), on page 115.

When changing the filter type, the next larger filter bandwidth is selected if the same filter bandwidth is not available for the new filter type.

5 Pole filters are not available when using the sweep type "FFT".

Parameters:

<FilterType> **NORMal**
 Gaussian filters
 CFILter
 channel filters
 RRC
 RRC filters
 P5
 5 Pole filters
 *RST: NORMal

Example: BAND:TYPE NORM

Manual operation: See "[Filter Type](#)" on page 101

[SENSe:]BANDwidth|BWIDth:VIDeo <Bandwidth>

This command defines the video bandwidth. The available video bandwidths are specified in the data sheet.

Parameters:

<Bandwidth> refer to data sheet
 *RST: (AUTO is set to ON)

Example: BAND:VID 10 kHz

Manual operation: See "[Video BW Manual](#)" on page 97

[SENSe:]BANDwidth|BWIDth:VIDeo:AUTO <State>

This command couples and decouples the VBW to the RBW.

Use [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#) to define the ratio VBW/RBW.

Parameters:

<State> ON | OFF
 *RST: ON

Example: BAND:VID:AUTO OFF

Manual operation: See "[Video BW Manual](#)" on page 97
 See "[Video BW Auto](#)" on page 97
 See "[Default Coupling](#)" on page 101

[SENSe:]BANDwidth|BWIDth:VIDeo:RATio <Ratio>

This command defines the ratio between video bandwidth (Hz) and resolution bandwidth (Hz).

Note that the ratio defined with the remote command (VBW/RBW) is reciprocal to that of the manual operation (RBW/VBW).

Parameters:

<Ratio> Range: 0.01 to 1000
 *RST: 3

Example:

BAND:VID:RAT 3
 Sets the coupling of video bandwidth to video bandwidth =
 3*resolution bandwidth

Manual operation:

See "RBW/VBW Sine [1/1]" on page 100
 See "RBW/VBW Pulse [.1]" on page 100
 See "RBW/VBW Noise [10]" on page 100
 See "RBW/VBW Manual" on page 100
 See "Span/RBW Auto [100]" on page 101

[SENSe:]BANDwidth|BWIDth:VIDeo:TYPE <Mode>

This command selects the position of the video filter in the signal path.

Changing the video filter position is possible only if the resolution bandwidth is ≤ 100 kHz.

Parameters:

<Mode>

LINear

The video filter is applied in front of the logarithmic amplifier. In linear mode, measurements with a logarithmic level scale result in flatter falling edges compared to logarithmic mode. The reason is the conversion of linear power values into logarithmic level values: if you halve the linear power, the logarithmic level decreases by 3 dB.

LOGarithmic

The video filter is applied after the logarithmic amplifier.

*RST: LINear

Example:

BAND:VID:TYPE LIN
 Video filter ahead of the logarithmic amplifier

4.6.3.4 SENSe:FREQuency subsystem

| | |
|--|-----|
| [SENSe:]FREQuency:CENTer..... | 221 |
| [SENSe:]FREQuency:CENTer:STEP..... | 221 |
| [SENSe:]FREQuency:CENTer:STEP:AUTO..... | 221 |
| [SENSe:]FREQuency:CENTer:STEP:LINK..... | 221 |
| [SENSe:]FREQuency:CENTer:STEP:LINK:FACTor..... | 222 |
| [SENSe:]FREQuency:OFFSet..... | 222 |

| | |
|----------------------------------|-----|
| [SENSe:]FREQUENCY:SPAN..... | 223 |
| [SENSe:]FREQUENCY:SPAN:FULL..... | 223 |
| [SENSe:]FREQUENCY:START..... | 223 |
| [SENSe:]FREQUENCY:STOP..... | 223 |

[SENSe:]FREQUENCY:CENTer <Frequency>

This command defines the center frequency (frequency domain) or measuring frequency (time domain).

Parameters:

<Frequency> Range: 0 to fmax
 *RST: fmax/2
 Default unit: Hz
 f_{max} is specified in the data sheet. min span is 10 Hz

Example: `FREQ:CENT 100 MHz`

Manual operation: See "[Center](#)" on page 18

[SENSe:]FREQUENCY:CENTer:STEP <StepSize>

This command defines the center frequency step size.

Parameters:

<StepSize> Range: 1 to fmax
 *RST: 0.1 x
 Default unit: Hz

Example: `FREQ:CENT:STEP 120 MHz`

Manual operation: See "[Manual](#)" on page 88

[SENSe:]FREQUENCY:CENTer:STEP:AUTO <State>

This command couples the step size of the center frequency to the span (ON) or sets the value of the center frequency entered via [SENSe:]FREQUENCY:CENTer (OFF).

Parameters:

<State> ON | OFF
 *RST: ON

Example: `FREQ:CENT:STEP:AUTO ON`
 Activates the coupling of the step size to the span.

[SENSe:]FREQUENCY:CENTer:STEP:LINK <CouplingType>

This command couples and decouples the center frequency step size to the span or the resolution bandwidth.

Parameters:

<CouplingType>

SPAN

Couples the step size to the span. Available for measurements in the frequency domain.

RBW

Couples the step size to the resolution bandwidth. Available for measurements in the time domain.

OFF

Decouples the step size (manual input).

*RST: SPAN

Example:

```
FREQ:CENT:STEP:LINK SPAN
```

Manual operation:

See "[0.1*Span \(span > 0\)](#)" on page 87

See "[0.1*RBW \(span > 0\)](#)" on page 87

See "[0.5*Span \(span > 0\)](#)" on page 87

See "[0.5*RBW \(span > 0\)](#)" on page 88

See "[x*Span \(span > 0\)](#)" on page 88

See "[x*RBW \(span > 0\)](#)" on page 88

[SENSe:]FREQUENCY:CENTer:STEP:LINK:FACTOR <Factor>

This command defines a step size factor if the center frequency step size is coupled to the span or the resolution bandwidth.

Parameters:

<Factor>

Range: 1 to 100

*RST: 10

Default unit: PCT

Example:

```
FREQ:CENT:STEP:LINK:FACT 20PCT
```

Manual operation:

See "[0.1*Span \(span > 0\)](#)" on page 87

See "[0.1*RBW \(span > 0\)](#)" on page 87

See "[0.5*Span \(span > 0\)](#)" on page 87

See "[0.5*RBW \(span > 0\)](#)" on page 88

[SENSe:]FREQUENCY:OFFSet <Offset>

This command defines the frequency offset.

Parameters:

<Offset>

Range: -100 GHz to 100 GHz

*RST: 0 Hz

Default unit: Hz

Example:

```
FREQ:OFFS 1GHZ
```

Manual operation:

See "[Frequency Offset](#)" on page 19

**[SENSe:]FREQUENCY:SPAN **

This command defines the frequency span.

Parameters:

 In analyzer mode, the span range is 10 Hz to f_{max} . For SEM and Spurious Emission measurements, the minimum span 20 Hz.

*RST: fmax

Example: FREQ:SPAN 10MHz

Manual operation: See "[Span Manual](#)" on page 89

[SENSe:]FREQUENCY:SPAN:FULL

This command sets the frequency span to its maximum.

Example: FREQ:SPAN:FULL

Manual operation: See "[Full Span](#)" on page 90

[SENSe:]FREQUENCY:START <Frequency>

This command defines the start frequency for measurements in the frequency domain.

Parameters:

<Frequency> 0 to (fmax - min span)

In analyzer mode, the span range is 10 Hz to f_{max} . For SEM and Spurious Emission measurements, the minimum span 20 Hz.

*RST: 0

Example: FREQ:STAR 20MHz

Manual operation: See "[Start](#)" on page 88

[SENSe:]FREQUENCY:STOP <Frequency>

This command defines the stop frequency for measurements in the frequency domain.

Parameters:

<Frequency> min span to fmax

In analyzer mode, the span range is 10 Hz to f_{max} . For SEM and Spurious Emission measurements, the minimum span 20 Hz.

*RST: fmax

Example: FREQ:STOP 2000 MHz

Manual operation: See "[Stop](#)" on page 89

4.6.3.5 SENSe:POWer subsystem

| | |
|---|-----|
| [SENSe:]POWer:ACHannel:ACPairs..... | 224 |
| [SENSe:]POWer:ACHannel:BANDwidth BWIDth[:CHANnel<channel>]..... | 225 |
| [SENSe:]POWer:ACHannel:BANDwidth BWIDth:ACHannel..... | 225 |
| [SENSe:]POWer:ACHannel:BANDwidth BWIDth:ALTErnatE<channel>..... | 225 |
| [SENSe:]POWer:ACHannel:FILTer:ALPHa:ACHannel..... | 226 |
| [SENSe:]POWer:ACHannel:FILTer:ALPHa:ALTErnatE<channel>..... | 226 |
| [SENSe:]POWer:ACHannel:FILTer:ALPHa:CHANnel<channel>..... | 226 |
| [SENSe:]POWer:ACHannel:FILTer[:STATe]:ACHannel..... | 227 |
| [SENSe:]POWer:ACHannel:FILTer[:STATe]:ALTErnatE<channel>..... | 227 |
| [SENSe:]POWer:ACHannel:FILTer[:STATe]:CHANnel<channel>..... | 227 |
| [SENSe:]POWer:ACHannel:MODE..... | 228 |
| [SENSe:]POWer:ACHannel:NAME:ACHannel..... | 228 |
| [SENSe:]POWer:ACHannel:NAME:ALTErnatE<channel>..... | 228 |
| [SENSe:]POWer:ACHannel:NAME:CHANnel<channel>..... | 229 |
| [SENSe:]POWer:ACHannel:PRESet..... | 229 |
| [SENSe:]POWer:ACHannel:PRESet:RLEVel..... | 230 |
| [SENSe:]POWer:ACHannel:REFerence:AUTO ONCE..... | 230 |
| [SENSe:]POWer:ACHannel:REFerence:TXCHannel:AUTO..... | 230 |
| [SENSe:]POWer:ACHannel:REFerence:TXCHannel:MANual..... | 231 |
| [SENSe:]POWer:ACHannel:SPACing[:ACHannel]..... | 231 |
| [SENSe:]POWer:ACHannel:SPACing:ALTErnatE<channel>..... | 231 |
| [SENSe:]POWer:ACHannel:SPACing:CHANnel<channel>..... | 232 |
| [SENSe:]POWer:ACHannel:TXCHannel:COUNt..... | 232 |
| [SENSe:]POWer:BANDwidth BWIDth..... | 232 |
| [SENSe:]POWer:HSPeed..... | 233 |
| [SENSe:]POWer:NCORrection..... | 233 |
| [SENSe:]POWer:TRACe..... | 234 |

[SENSe:]POWer:ACHannel:ACPairs <ChannelPairs>

This command sets the number of adjacent channels (upper and lower channel in pairs). The figure 0 stands for pure channel power measurement.

Parameters:

<ChannelPairs> 0 to 12
 *RST: 1

Example:

POW:ACH:ACP 3
 Sets the number of adjacent channels to 3, i.e. the adjacent channel and alternate adjacent channels 1 and 2 are switched on.

Manual operation: See "# of Adj Chan" on page 60

**[SENSe:]POWER:ACHannel:BANDwidth|BWIDth[:CHANnel<channel>]
<Bandwidth>**

This command sets the channel bandwidth of the specified TX channel in the radio communication system. The bandwidths of adjacent channels are not influenced by this modification.

With [SENSe<source>:] POWER:HSPEED set to ON, steep-edged channel filters are available. For further information on filters refer to [chapter 3.4.4, "List of Available RRC and Channel Filters"](#), on page 115.

Parameters:

<Bandwidth> 100 Hz to 40 GHz
*RST: 14 kHz

Example: POW:ACH:BWID:CHAN2 30 kHz
Sets the bandwidth of the TX channel 2 to 30 kHz.

Manual operation: See "[Bandwidth](#)" on page 61
See "[Channel Bandwidth \(span > 0\)](#)" on page 78

[SENSe:]POWER:ACHannel:BANDwidth|BWIDth:ACHannel <Bandwidth>

This command defines the channel bandwidth of the adjacent channel of the radio transmission system. If the bandwidth of the adjacent channel is changed, the bandwidths of all alternate adjacent channels are automatically set to the same value.

With [SENSe<source>:] POWER:HSPEED set to ON, steep-edged channel filters are available. For further information on filters refer to [chapter 3.4.4, "List of Available RRC and Channel Filters"](#), on page 115 .

Parameters:

<Bandwidth> 100 Hz to 40 GHz
*RST: 14 kHz

Example: POW:ACH:BWID:ACH 30 kHz
Sets the bandwidth of all adjacent channels to 30 kHz.

Manual operation: See "[Bandwidth](#)" on page 61

**[SENSe:]POWER:ACHannel:BANDwidth|BWIDth:ALTErnate<channel>
<Bandwidth>**

This command defines the channel bandwidth of the specified alternate adjacent channels of the radio transmission system. If the channel bandwidth of one alternate adjacent channel is changed (e.g. channel 3), the bandwidth of all subsequent alternate adjacent channels (e.g. 4–11) is automatically set to the same value.

With [SENSe<source>:] POWER:HSPEED set to ON, steep-edged channel filters are available. For further information on filters refer to [chapter 3.4.4, "List of Available RRC and Channel Filters"](#), on page 115 .

Suffix:
 <channel> 1...11
 the alternate adjacent channel

Parameters:
 <Bandwidth> 100 Hz to 40 GHz
 *RST: 14 kHz

Example: POW:ACH:BWID:ALT2 30 kHz

Manual operation: See "[Bandwidth](#)" on page 61

[SENSe:]POWer:ACHannel:FILTer:ALPHa:ACHannel <Alpha>

This command defines the roll-off factor for the weighting filter of the adjacent channel.

Parameters:
 <Alpha> <numeric value>
 *RST: 0,22

Example: POW:ACH:FILT:ALPH:ACH 0,35

Manual operation: See "[Weighting Filter](#)" on page 63

[SENSe:]POWer:ACHannel:FILTer:ALPHa:ALternate<channel> <Alpha>

This command defines the roll-off factor for the weighting filter of the specified alternate channel.

Suffix:
 <channel> 1...11
 the alternate channel

Parameters:
 <Alpha> <numeric value>
 *RST: 0,22

Example: POW:ACH:FILT:ALPH:ALT3 0,35
 Sets the alpha value for the weighting filter for the alternate channel 3 to 0,35.

Manual operation: See "[Weighting Filter](#)" on page 63

[SENSe:]POWer:ACHannel:FILTer:ALPHa:CHANnel<channel> <Alpha>

This command defines the roll-off factor for the weighting filter of the specified TX channel.

Suffix:
 <channel> 1...11
 the TX channel

Parameters:

<Alpha> <numeric value>
 *RST: 0,22

Example:

POW:ACH:FILT:ALPH:CHAN3 0,35
 Sets the alpha value for the weighting filter for the TX channel 3 to 0,35.

Manual operation: See "[Weighting Filter](#)" on page 63

[SENSe:]POWer:ACHannel:FILTer[:STATe]:ACHannel <State>

This command activates the weighting filter for the adjacent channel.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

POW:ACH:FILT:ACH ON

Manual operation: See "[Weighting Filter](#)" on page 63

[SENSe:]POWer:ACHannel:FILTer[:STATe]:ALTErnate<channel> <State>

This command activates the weighting filter for the specified alternate channel.

Suffix:

<channel> 1...11
 the alternate adjacent channel

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

POW:ACH:FILT:ALT3 ON
 Activates the weighting filter for alternate channel 3.

Manual operation: See "[Weighting Filter](#)" on page 63

[SENSe:]POWer:ACHannel:FILTer[:STATe]:CHANnel<channel> <State>

This command activates the weighting filter for the specified TX channel.

Suffix:

<channel> 1...18
 the TX channel

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

POW:ACH:FILT:CHA3 ON
 Activates the weighting filter for TX channel 3.

Manual operation: See "[Weighting Filter](#)" on page 63

[SENSe:]POWer:ACHannel:MODE <Mode>

This command switches between absolute and relative adjacent channel measurement. The command is only available with span > 0 and if the number of adjacent channels is greater than 0.

For the relative measurement the reference value is set to the currently measured channel power using the command `[SENSe:]POWer:ACHannel:REfERENCE:AUTO ONCE`.

Parameters:

<Mode> ABSolute | RELative

ABSolute
absolute adjacent channel measurement

RELative
relative adjacent channel measurement

*RST: RELative

Example: `POW:ACH:MODE REL`
Sets the adjacent channel measurement mode to relative.

Manual operation: See "[ACLR \(Abs/Rel\)](#)" on page 66

[SENSe:]POWer:ACHannel:NAME:ACHannel <Name>

This command defines a name for the adjacent channel. The name is displayed in the result diagram and the result table.

Parameters:

<Name> *RST: Adj

Example: `POW:ACH:NAME:ACH 'XYZ'`
Defines the name of the adjacent channel as 'XYZ'.

Manual operation: See "[Names](#)" on page 63

[SENSe:]POWer:ACHannel:NAME:ALternate<channel> <Name>

This command defines a name for the specified alternate channel. The name is displayed in the result diagram and the result table.

Suffix:

<channel> 1...11
the alternate channel

Parameters:

<Name> *RST: ALT<1...11>

Example: `POW:ACH:NAME:ALT3 'XYZ'`
Defines the name of the third alternate channel as 'XYZ'.

Manual operation: See "Names" on page 63

[SENSe:]POWer:ACHannel:NAME:CHANnel<channel> <Name>

This command defines a name for the specified TX channel. The name is displayed in the result diagram and the result table.

Suffix:

<channel> 1...12
 the TX channel

Parameters:

<Name> *RST: TX<1...12>

Example:

POW:ACH:NAME:CHAN3 'XYZ'
Defines the name of the third transmission channel as 'XYZ'.

Manual operation: See "Names" on page 63

[SENSe:]POWer:ACHannel:PRESet <Setting>

This command adjusts the frequency span, the measurement bandwidths and the detector as required for the number of channels, the channel bandwidths and the channel spacings selected in the active power measurement. If necessary, adjacent-channel power measurement is switched on prior to the adjustment.

To obtain correct results, a complete sweep with synchronization to the end of the sweep must be performed after the adjustment. Synchronization is possible only in the single sweep mode.

The result is queried with the `CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult?` command.

Parameters:

<Setting> ACPower | CPOWer | MCACpower | OBANdwidth | OBWidth |
 CN | CNO

Example:

POW:ACH:PRESet ACP
Sets the frequency span, the measurement bandwidths and the detector as required for the ACLR measurement.
INIT:CONT OFF
Switches over to single sweep mode.
INIT;*WAI
Starts a sweep and waits for the end of the sweep.
CALC:MARK:FUNC:POW:RES? ACP
Queries the result of the adjacent-channel power measurement.

Manual operation: See "Adjust Settings" on page 66

[SENSe:]POWer:ACHannel:PRESet:RLEVel

This command adapts the reference level to the measured channel power and – if required – switches on previously the adjacent channel power measurement. This ensures that the signal path of the instrument is not overloaded. Since the measurement bandwidth is significantly smaller than the signal bandwidth in channel power measurements, the signal path can be overloaded although the trace is still significantly below the reference level. If the measured channel power equals the reference level, the signal path is not overloaded.

Subsequent commands have to be synchronized with *WAI, *OPC or *OPC? to the end of the auto range process which would otherwise be aborted.

Example: POW:ACH:PRESet:RLEV; *WAI
Adapts the reference level to the measured channel power.

Manual operation: See "[Adjust Ref Lvl](#)" on page 39

[SENSe:]POWer:ACHannel:REFerence:AUTO ONCE

This command sets the reference value to the currently measured channel power for the relative measurement.

Example: POW:ACH:REF:AUTO ONCE

Manual operation: See "[Set CP Reference](#)" on page 67

[SENSe:]POWer:ACHannel:REFerence:TXCHannel:AUTO <Channel>

This command activates the automatic selection of a transmission channel to be used as a reference channel in relative adjacent-channel power measurements.

The transmission channel with the highest power, the transmission channel with the lowest power, or the transmission channel nearest to the adjacent channels can be defined as a reference channel.

The command is available only for multicarrier channel and adjacent-channel power measurements with span > 0 ([CALCulate<n>:MARKer<m>:FUNction:POWer:SElect](#) on page 144).

Parameters:

| | |
|-----------|--|
| <Channel> | MINimum MAXimum LHIGHest |
| | MINimum |
| | Transmission channel with the lowest power |
| | MAXimum |
| | Transmission channel with the highest power |
| | LHIGHest |
| | Lowermost transmission channel for the lower adjacent channels, uppermost transmission channel for the upper adjacent channels |

Example: `POW:ACH:REF:TXCH:AUTO MAX`
 The transmission channel with the highest power is used as a reference channel.

Manual operation: See "[ACLR Reference](#)" on page 62

[SENSe:]POWer:ACHannel:REFerence:TXCHannel:MANual <ChannelNumber>

This command selects a transmission channel to be used as a reference channel in relative adjacent-channel power measurements.

The command is available only for multicarrier channel and adjacent-channel power measurements with span > 0 (`CALCulate<n>:MARKer<m>:FUNction:POWer:SELect` on page 144).

Parameters:

<ChannelNumber> 1 to 18

*RST: 1

Example: `POW:ACH:REF:TXCH:MAN 3`
 Transmission channel 3 is used as a reference channel.

Manual operation: See "[ACLR Reference](#)" on page 62

[SENSe:]POWer:ACHannel:SPACing[:ACHannel] <Spacing>

This command defines the spacing between the carrier signal and the adjacent channel (ADJ). The modification of the adjacent-channel spacing (ADJ) causes a change in all higher adjacent-channel spacings (ALT1, ALT2, ...): they are all multiplied by the same factor (new spacing value/old spacing value).

Parameters:

<Spacing> 100 Hz to 20 GHz

*RST: 14 kHz

Example: `POW:ACH:SPAC 33kHz`
 Sets the spacing between the carrier signal and the adjacent channel to 33 kHz, the alternate adjacent channel 1 to 66 kHz, the alternate adjacent channel 2 to 99 kHz, and so on.

Manual operation: See "[Spacing](#)" on page 62

[SENSe:]POWer:ACHannel:SPACing:ALTErnate<channel> <Spacing>

This command defines the spacing between the alternate adjacent channels and the TX channel (ALT1, ALT2, ...). A modification of a higher adjacent-channel spacing causes a change by the same factor (new spacing value/old spacing value) in all higher adjacent-channel spacings, while the lower adjacent-channel spacings remain unchanged.

| | |
|--------------------------|--|
| Suffix: | |
| <channel> | 1...11 the alternate adjacent channel |
| Parameters: | |
| <Spacing> | 100 Hz to 20 GHz *RST: 40 kHz (ALT1), 60 kHz (ALT2), 80 kHz (ALT3), ... |
| Example: | POW:ACH:SPAC:ALT1 100 kHz Sets the spacing between TX channel and alternate adjacent channel 1 (ALT1) from 40 kHz to 100 kHz. In consequence, the spacing between the TX channel and all higher alternate adjacent channels is increased by the factor $100/40 = 2.5$: ALT2 = 150 kHz, ALT3 = 200 kHz, ALT4 = 250 kHz. |
| Manual operation: | See " Spacing " on page 62 |

[SENSe:]POWer:ACHannel:SPACing:CHANnel<channel> <Spacing>

This command defines the channel spacing for the carrier signals.

| | |
|--------------------------|--|
| Suffix: | |
| <channel> | 1...11 the TX channel |
| Parameters: | |
| <Spacing> | 14 kHz to 20 GHz *RST: 20 kHz |
| Example: | POW:ACH:SPAC:CHAN 25kHz |
| Manual operation: | See " Spacing " on page 62 |

[SENSe:]POWer:ACHannel:TXChannel:COUNT <Number>

This command selects the number of carrier signals.

The command is available only for multicarrier channel and adjacent-channel power measurements with span > 0 (see [CALCulate<n>:MARKer<m>:FUNCTION:POWer:SELEct](#) on page 144).

| | |
|--------------------------|---|
| Parameters: | |
| <Number> | 1 to 18 *RST: 1 |
| Example: | POW:ACH:TXCH:COUN 3 |
| Manual operation: | See " # of TX Chan " on page 60 |

[SENSe:]POWer:BANDwidth|BWIDth <Percentage>

This command defines the percentage of the power with respect to the total power.

This value is the basis for the occupied bandwidth measurement (see [SENSe:]POWER:ACHannel:PRESet on page 229).

Parameters:

<Percentage> 10 to 99.9PCT
*RST: 99PCT

Example: POW:BWID 95PCT

Manual operation: See "% Power Bandwidth (span > 0)" on page 78

[SENSe:]POWER:HSPeed <State>

This command switches on or off the high-speed channel/adjacent channel power measurement. The measurement itself is performed in zero span on the center frequencies of the individual channels. The command automatically switches to zero span and back.

Depending on the selected mobile radio standard, weighting filters with characteristic or very steep-sided channel filters are used for band limitation.

Parameters:

<State> ON | OFF
*RST: OFF

Example: POW:HSP ON

Manual operation: See "Fast ACLR (On/Off)" on page 67

[SENSe:]POWER:NCORrection <Mode>

This command turns noise cancellation on and off.

If noise cancellation is on, the R&S FSVR performs a reference measurement to determine its inherent noise and subtracts the result from the channel power measurement result (first active trace only).

The inherent noise of the instrument depends on the selected center frequency, resolution bandwidth and level setting. Therefore, the correction function is disabled whenever one of these parameters is changed. A corresponding message is displayed on the screen. Noise correction must be turned on again manually after the change.

Parameters:

<Mode> **ON**
Performs noise correction.

OFF
Performs no noise correction.

AUTO
Performs noise correction.
After a parameter change, noise correction is restarted automatically and a new correction measurement is performed.

*RST: OFF

Example: POW:NCOR ON

Manual operation: See "Noise Correction" on page 68

[SENSe:]POWER:TRACe <TraceNumber>

This command assigns the channel/adjacent channel power measurement to the indicated trace. The corresponding trace must be active, i.e. its state must be different from blank.

Note:The measurement of the occupied bandwidth (OBW) is performed on the trace on which marker 1 is positioned. To evaluate another trace, marker 1 must be positioned to another trace with `CALCulate<n>:MARKer<m>:TRACe`.

Parameters:

<TraceNumber> 1 to 6

Example: POW:TRAC 2
Assigns the measurement to trace 2.

Manual operation: See "Select Trace" on page 66

4.6.3.6 SENSe:SWEep subsystem

| | |
|--|-----|
| [SENSe:]SWEep:COUNT..... | 234 |
| [SENSe:]SWEep:EGATe..... | 235 |
| [SENSe:]SWEep:EGATe:HOLDoff..... | 235 |
| [SENSe:]SWEep:EGATe:LENGth..... | 236 |
| [SENSe:]SWEep:EGATe:POLarity..... | 236 |
| [SENSe:]SWEep:EGATe:SOURce..... | 236 |
| [SENSe:]SWEep:EGATe:TRACe<k>:COMMeNt..... | 236 |
| [SENSe:]SWEep:EGATe:TRACe<k>:PERiod..... | 237 |
| [SENSe:]SWEep:EGATe:TRACe<k>:STARt<range>..... | 237 |
| [SENSe:]SWEep:EGATe:TRACe<k>[:STATe<range>]..... | 237 |
| [SENSe:]SWEep:EGATe:TYPE..... | 238 |
| [SENSe:]SWEep:EGATe:TRACe<k>:STOP<range>..... | 238 |
| [SENSe:]SWEep:POINts..... | 239 |
| [SENSe:]SWEep:TIME..... | 239 |
| [SENSe:]SWEep:TIME:AUTO..... | 239 |
| [SENSe:]SWEep:TYPE..... | 240 |

[SENSe:]SWEep:COUNT <NumberSweeps>

This command defines the number of sweeps started with single sweep, which are used for calculating the average or maximum value. If the values 0 or 1 are set, one sweep is performed.

Parameters:

<NumberSweeps> 0 to 32767

*RST: 0 (GSM: 200, PHN:1)

Example: SWE:COUN 64
 Sets the number of sweeps to 64.
 INIT:CONT OFF
 Switches to single sweep mode.
 INIT;*WAI
 Starts a sweep and waits for its end.

Manual operation: See "[Sweep Count](#)" on page 46

[SENSe:]SWEep:EGATe <State>

This command switches on/off the sweep control by an external gate signal. If the external gate is selected the trigger source is automatically switched to EXTERNAL as well.

In case of measurement with external gate, the measured values are recorded as long as the gate is opened. During a sweep the gate can be opened and closed several times. The synchronization mechanisms with *OPC, *OPC? and *WAI remain completely unaffected.

The sweep end is detected when the required number of measurement points (691 in "Spectrum" mode) has been recorded.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: SWE:EGAT ON
 Switches on the external gate mode.
 SWE:EGAT:TYPE EDGE
 Switches on the edge-triggered mode.
 SWE:EGAT:HOLD 100US
 Sets the gate delay to 100 µs.
 SWE:EGAT:LEN 500US
 Sets the gate opening time to 500 µs.
 INIT;*WAI
 Starts a sweep and waits for its end.

Manual operation: See "[Gated Trigger \(On/Off\)](#)" on page 83
 See "[Gate Ranges](#)" on page 83

[SENSe:]SWEep:EGATe:HOLDoff <DelayTime>

This command defines the delay time between the external gate signal and the continuation of the sweep.

Note: Using gate mode "level" (see [SENSe:]SWEep:EGATe:TYPE on page 238) and an IFP trigger (see TRIGger<n>[:SEQUENCE]:SOURCE on page 257), the hold-off time for the IFP trigger is ignored for frequency sweep, FFT sweep, zero span and IQ mode measurements.

Parameters:

<DelayTime> 0 s to 30 s
 *RST: 0s

Example: SWE:EGAT:HOLD 100us

[SENSe:]SWEep:EGATe:LENGth <TimeInterval>

This command defines a gate length.

Parameters:

<TimeInterval> 125 ns to 30 s
 *RST: 400µs

Example: SWE:EGAT:LENG 10ms

[SENSe:]SWEep:EGATe:POLarity <Polarity>

This command determines the polarity of the external gate signal. The setting applies both to the edge of an edge-triggered signal and the level of a level-triggered signal.

Parameters:

<Polarity> POSitive | NEGative
 *RST: POSitive

Example: SWE:EGAT:POL POS

Manual operation: See "[Trigger Polarity](#)" on page 21

[SENSe:]SWEep:EGATe:SOURce <Source>

This command selects the signal source for gated measurements.

If an IF power signal is used, the gate is opened as soon as a signal at > -20 dBm is detected within the IF path bandwidth (10 MHz).

Parameters:

<Source> EXTernal | IFPower | VIDeo | RFPower | PSEN
 *RST: IFPower

Example: SWE:EGAT:SOUR IFP
 Switches the gate source to IF power.

Manual operation: See "[Gated Trigger \(On/Off\)](#)" on page 83

[SENSe:]SWEep:EGATe:TRACe<k>:COMMeNt <Comment>

Defines a comment for one of the traces for gated triggering.

Suffix:

<k> 1...6
 trace

Parameters:

<Comment>

Example: SWE:EGAT:TRAC1:COMM "SlotA"**Manual operation:** See "[Gate Ranges](#)" on page 83**[SENSe:]SWEep:EGATe:TRACe<k>: PERiod <Value>**

This command defines the length of the period to be traced using gated triggering.

Suffix:<k> 1...6
trace**Parameters:**<Value> <numeric value>
*RST: 0 s**Example:** SWE:EGAT:TRAC1:PER 5ms
Defines the period for gated triggering to 5 ms.**Manual operation:** See "[Gate Ranges](#)" on page 83**[SENSe:]SWEep:EGATe:TRACe<k>:STARt<range> <Value>**

This command defines the starting point for the range to be traced using gated triggering.

Suffix:<k> 1...6
trace

<range> 1...3
range**Parameters:**<Value> <numeric value>
*RST: OFF**Example:** SWE:EGAT:TRAC1:STAR1 3ms
Sets the Starting point for range 1 on trace 1 at 3 ms.**Manual operation:** See "[Gate Ranges](#)" on page 83**[SENSe:]SWEep:EGATe:TRACe<k>[:STATe<range>] <State>**

This command activates or deactivates tracing for a specific range using gated triggering.

Suffix:<k> 1...6
trace

<range> 1...3
range

Parameters:

<State> ON | OFF
*RST: OFF

Example:

SWE:EGAT:TRAC1:STAT1 ON
Activates tracing for range 1 of trace 1.

Manual operation: See "Gate Ranges" on page 83

[SENSe:]SWEep:EGATe:TYPE <Type>

This command sets the type of triggering by the external gate signal.

A delay between applying the gate signal and the start of recording measured values can be defined, see [SENSe:]SWEep:EGATe:HOLDoff on page 235.

Parameters:

<Type> LEVEL | EDGE

LEVEL

The gate is level-triggered:

After detection of the gate signal, the gate remains open until the gate signal disappears. The gate opening time cannot be defined with the command [SENSe:]SWEep:EGATe:HOLDoff.

Note: Using gating with gate mode "level" and an IFP trigger (see TRIGger<n>[:SEQuence]:SOURce on page 257), the holdoff time for the IFP trigger is ignored for frequency sweep, FFT sweep, zero span and IQ mode measurements.

EDGE

The gate is edge-triggered:

After detection of the set gate signal edge, the gate remains open until the gate delay ([SENSe:]SWEep:EGATe:HOLDoff) has expired.

*RST: EDGE

Example:

SWE:EGAT:TYPE EDGE

[SENSe:]SWEep:EGATe:TRACe<k>: STOP<range> <Value>

This command defines the stopping point for the range to be traced using gated triggering

Suffix:

<k> 1...6
trace

<range> 1...3
range

Parameters:

<Value> <numeric value>
 *RST: 1 μ s

Example:

SWE:EGAT:TRAC1:STOP1 5ms
 Sets the stopping point for range 1 on trace 1 at 5 ms.

Manual operation: See "[Gate Ranges](#)" on page 83

[SENSe:]SWEep:POINTs <NumberPoints>

This command defines the number of measurement points to be collected during one sweep.

Note: For Spurious Emissions measurements the maximum number of sweep points in all ranges is limited to 100001.

Parameters:

<NumberPoints> Range: 101 to 32001
 *RST: 691

Example:

SWE:POIN 251

Manual operation: See "[Sweep Points](#)" on page 105

[SENSe:]SWEep:TIME <Time>

This command defines the sweep time.

The range depends on the frequency span.

Parameters:

<Time> refer to data sheet
 *RST: (automatic)

Example:

SWE:TIME 10s

Manual operation: See "[Sweep Time](#)" on page 66
 See "[Sweeptime Manual](#)" on page 89

[SENSe:]SWEep:TIME:AUTO <State>

In realtime mode, this command automatically sets the sweep time to 32 ms.

In analyzer mode, this command controls the automatic coupling of the sweep time to the frequency span and bandwidth settings. If `[SENSe:]SWEep:TIME` is used, automatic coupling is switched off.

Parameters:

<State> ON | OFF
 *RST: ON

Example:

SWE:TIME:AUTO ON
 Activates automatic sweep time.

Manual operation: See "Sweptime Manual" on page 89
 See "Sweptime Auto" on page 98
 See "Default Coupling" on page 101

[SENSe:]SWEep:TYPE <Type>

This command selects the sweep type.

Parameters:

<Type>

SWE

Selects analog frequency sweeps.

AUTO

Automatically selects the sweep type (FFT or analog frequency sweep).

FFT

Selects FFT sweeps.

*RST: AUTO

Example:

SWE:TYPE FFT

Selects FFT sweeps.

Manual operation: See "Sweep" on page 99
 See "FFT" on page 99
 See "Auto" on page 99

4.6.3.7 Other Commands in the SENSe Subsystem

[SENSe:]AVERage<n>:COUNT <NoMeasurements>

This command defines the number of measurements which contribute to the average value.

Note that continuous averaging is performed after the indicated number has been reached in continuous sweep mode.

In single sweep mode, the sweep is stopped as soon as the indicated number of measurements (sweeps) is reached. Synchronization to the end of the indicated number of measurements is only possible in single sweep mode.

This command has the same effect as the [SENSe<source>:]SWEep:COUNT command. In both cases, the number of measurements is defined whether the average calculation is active or not.

The number of measurements applies to all traces in the window.

Suffix:

<n>

Selects the measurement window.

Parameters:

<NoMeasurements> 0 to 32767

*RST: 0

Status Reporting System of the TD-SCDMA Measurement Applications (K76/K77)

Example:

```
SWE:CONT OFF
Switching to single sweep mode.
AVER:COUN 16
Sets the number of measurements to 16.
AVER:STAT ON
Switches on the calculation of average.
INIT;*WAI
Starts the measurement and waits for the end of the 16 sweeps.
```

[SENSe:]AVERAge<n>[:STATe<Trace>] <State>

This command turns averaging for a particular trace in a particular window on and off.

Suffix:

<n> Selects the measurement window.

<Trace> 1...6
Selects the trace.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

```
AVER OFF
Switches off the average calculation for trace 1.
AVER:STAT3 ON
Switches on the average calculation for trace 3.
```

4.7 Status Reporting System of the TD-SCDMA Measurement Applications (K76/K77)

Detailed information on the status registers of the base system is given in section Status Reporting System. In this section, only the new and altered status registers for the "TD-SCDMA" options (K76/K77) are described.

The `STATUS:QUESTIONABLE:SYNC` register contains information on the error situation in the code domain analysis of the "TD-SCDMA" option. The bits can be queried with commands `STATUS:QUESTIONABLE:SYNC:CONDITION?` and `STATUS:QUESTIONABLE:SYNC[:EVENT]?`.

STATUS:QUESTIONABLE:SYNC:CONDITION?

This command reads the information on the error situation in the code domain power analysis.

Return values:

<Result> If the result is ON, an error occurred. Details can be obtained using `STATUS:QUESTIONABLE:SYNC[:EVENT]?`.
*RST: OFF

Example: STAT:QUES:SYNC:COND?
Usage: Query only
Mode: TDS

STATus:QUESTIONable:SYNC[:EVENT]?

This command reads the information on the error situation in the code domain power analysis. The value can only be read once.

Example: STAT:QUES:SYNC[:EVEN]?
Usage: Query only
Mode: TDS

| Bit no. | Meaning |
|---------|--|
| 0 | Not used in R&S FSV-K76/-K77 applications |
| 1 | K76 Frame sync failed This bit is set when synchronization is not possible within the application. The reasons for this can be: <ul style="list-style-type: none"> • Invalid frequency • Invalid level • Invalid scrambling code • Invalid max. number of MA Shifts Cell • Invalid values for INVERT Q or SIDEBAND INV • Invalid signal on input |
| 2 to 14 | Not used in the R&S FSV-K76/-K77 applications |
| 15 | This bit is always 0. |

4.8 TRACe Subsystem

This chapter describes the TRACe<n>[:DATA] command and its characteristics for the measurement application.

TRACe<n>[:DATA]? LIST | TRACE1 | TRACE2 | TRACE3 | TRACE4, <block> | <numeric value>

This command reads trace data from the R&S FSVR.

The behaviour of the command is the same as in the base unit for RF measurements. For code domain measurements and the Power vs Time measurement, find a description of the behaviour of the command below.

- **Code Domain Power (absolute and relative)**
For the Code Domain Power result display, the command returns four values for each channel in the following order:
<code class>, <code number>, <level>, <power detection>
Refer to the description below for more details on the return values.

The query returns a maximum of 16 channels. Channels that consist of more than one code are returned as one channel.

So, for example, consider the following configuration (three active channels out of a total of 12):

- DPCH, 1.16, (CC4), -7.0 dB
- DPCH, 2.8, (CC3), -7.3 dB
- DPCH, 3.4, (CC2), -8.0 dB

In this example, the command would return the following string (active channels in **bold**):

```
4, 1, -7.0, 1, 4, 2, -55.1, 0, 3, 2, -7.3, 1, 4, 5, -56.3, 0,
4, 6, -55.8, 0, 4, 7, -57.0, 0, 2, 3, -8.0, 1, 4, 13, -55.8,
0, 4, 14, -56.3, 0, 4, 15, -55.9, 0, 4, 16, -57.3, 0
```

- **Code Domain Error Power**

For the Code Domain Error Power result display, the command returns four values for each channel in the following order:

<code class>, <code number>, <level>, <power detection>

Refer to the description below for more details on the return values.

The query returns a maximum of 16 codes. One value is returned for every code.

So, for example, consider the following configuration (three active channels out of a total of 12):

- DPCH, 1.16, (CC4), -7.0 dB
- DPCH, 2.8, (CC3), -7.3 dB
- DPCH, 3.4, (CC2), -8.0 dB

In this example, the command would return the following string (active channels in **bold**):

```
4, 1, -54.5, 1, 4, 2, -55.1, 0, 3, 2, -56.3, 1, 4, 3, -56.2,
1, 4, 5, -56.3, 0, 4, 6, -55.8, 0, 4, 7, -57.0, 0, 4, 8,
-56.7, 0, 2, 3, -56.2, 1, 4, 10, -56.5, 1, 4, 11, -55.8,
1, 4, 12, -55.9, 1, 4, 13, -55.8, 0, 4, 14, -56.3, 0, 4, 15,
-55.9, 0, 4, 16, -57.3, 0
```

- **Channel Table**

For the Channel Table result display, the command returns 11 values in the following order:

<channel type>, <code class>, <code number>, <modulation type>, <absolute level in dBm>, <relative level in dB>, <midamble shift>, <mid1>, <mid1>, <reserved1>, <reserved2>

The output depends on the channel sorting order. When using code sorting order, all midambles are output first, then control channels and last the data channels.

When using midamble sorting order, each midamble is output with its corresponding control and data channel.

So, for example, consider the following configuration (three active channels in common midamble allocation):

- Midamble m(3), -3.0 dBm
- DPCH, 1.16, QPSK, -7.78 dB
- DPCH, 2.8, QPSK, -7.78 dB
- DPCH, 3.4, 8PSK, -7.78 dB

In this example, the command would return the following string:

```

1, 0, 0, 0, -3.0, 0, 3, 0.005, 0.005, 0, 0 2 , 4, 1, 1,
-7.78, -4.78, 3, 0, 0, 0, 0 2 , 3, 2, 1, -7.78, -4.78, 3, 0,
0, 0, 0 2 , 2, 3, 2, -7.78, -4.78, 3, 0, 0, 0, 0 0 , 4, 2, 1,
-46.9, -43.9, 3, 0, 0, 0, 0 0 , 4, 5, 1, -46.9, -43.9, 3, 0,
0, 0, 0 0 , 4, 6, 1, -46.9, -43.9, 3, 0, 0, 0, 0 0 , 4, 7, 1,
-46.9, -43.9, 3, 0, 0, 0, 0 0 , 4, 8, 1, -46.9, -43.9, 3, 0,
0, 0, 0 0 , 4, 13, 1, -46.9, -43.9, 3, 0, 0, 0, 0 0 , 4, 14,
1, -46.9, -43.9, 3, 0, 0, 0, 0 0 , 4, 15, 1, -46.9, -43.9, 3,
0, 0, 0, 0 0 , 4, 16, 1, -46.9, -43.9, 3, 0, 0, 0, 0

```

- **Result Summary**

For the Result Summary, the command returns 25 values in the following order:

<slot>, <pdata>, <pd1>, <pd2>, <pmidamble>, <rho>, <maccuracy>, <pcdererror>, <ferror>, <cerror>, <tframe>, <iqimbalance>, <iqoffset>, <active>, <srates>, <channel>, <sfactor>, <cdprelative>, <cdpabsolute>, <evmrms>, <evmpeak>, <reserved1>, <reserved2>, <reserved3>, <reserved4>

- **Power vs Slot**

For the Power vs Slot result display, the command returns three values in the following order:

Power vs Slot Absolute: <slot number>, <level in dbm>, <validity>

Power vs Slot Relative: <slot number>, <level in db>, <validity>

The number of triplets the command returns depends on the capture length.

- **Peak Code Domain Error**

For the Peak Code Domain Error result display, the command returns two values in the following order:

Power vs Slot Absolute: <slot>, <level in dbm>, <validity>

The number of pairs the command return depends on the capture length.

- **Composite EVM**

For the Composite EVM result display, the command returns two values for every slot in the following order:

<slot 0>, <maccuracy 0>, ..., <slot n>, <maccuracy n>

The number of pairs the command return depends on the capture length.

- **Symbol EVM**

For the Symbol EVM result display, the command returns one value for each symbol:

<value in % symbol 0>, <value in % symbol 1>, ..., <value in % symbol n>

The number of symbols depends on the spreading factor:

- Spreading Factor 16: 44 symbols
- Spreading Factor 8: 88 symbols
- Spreading Factor 4: 176 symbols
- Spreading Factor 2: 352 symbols
- Spreading Factor 1: 704 symbols

- **Power vs Symbol**

For the Power vs Symbol result display, the command returns one value for each symbol:

<value in dbm symbol 0>, <value in dbm symbol 1>, ..., <value in % symbol n>

The number of symbols depends on the spreading factor:

- Spreading Factor 16: 44 symbols

- Spreading Factor 8: 88 symbols
- Spreading Factor 4: 176 symbols
- Spreading Factor 2: 352 symbols
- Spreading Factor 1: 704 symbols
- **Symbol Constellation**
For the Symbol Constellation result display, the command returns one value each for the real and imaginary parts of every symbol:
<re 0>, <im 0>, <re 1>, <im 1>, ..., <re n>, <im n>
The number of symbols depends on the spreading factor:
 - Spreading Factor 16: 44 symbols
 - Spreading Factor 8: 88 symbols
 - Spreading Factor 4: 176 symbols
 - Spreading Factor 2: 352 symbols
 - Spreading Factor 1: 704 symbols
- **Composite Constellation**
For the Composite Constellation result display, the command returns one value each for the real and imaginary parts of every data chip:
<re 0>, <im 0>, <re 1>, <im 1>, ..., <re 703>, <im 703 >
- **Bit Stream**
For the Bitsream result display, the command returns the bitstream of one slot, i.e. it returns one value for every bit (either 0 or 1) in a symbol in the following order:
<bit 1>, <bit 2>, ..., <bit n >
The number of bits depends on the modulation and the spreading factor:
 - **Spreading Factor 16**
QPSK: 88 bits, 8PSK: 132 bits, 16QAM: 176 bits, 64QAM: 264 bits
 - **Spreading Factor 8**
QPSK: 176 bits, 8PSK: 264 bits, 16QAM: 352 bits, 64QAM: 528 bits
 - **Spreading Factor 4**
QPSK: 352 bits, 8PSK: 528 bits, 16QAM: 704 bits, 64QAM: 1056 bits
 - **Spreading Factor 2**
QPSK: 704 bits, 8PSK: 1056 bits, 16QAM: 1408 bits, 64QAM: 2112 bits
 - **Spreading Factor 1**
QPSK: 1408 bits, 8PSK: 2112 bits, 16QAM: 2816 bits, 64QAM: 4224 bits
- **Magnitude Error vs Chip**
The comand returns a list of magnitude error values of all chips at the selected PCG. The values are calculated as the magnitude difference between the received signal and the reference signal for each chip in %, and are normalized to the square root of the average power at the selected PCG.
- **Phase Error vs Chip**
The comand returns a list of phase error values of all chips at the selected PCG. The values are calculated as the phase difference between the received signal and the reference signal for each chip in degrees, and are normalized to the square root of the average power at the selected PCG.
- **Symbol Magnitude Error**

The command returns the magnitude error in % of each symbol at the selected PCG. The number of the symbols depends on the spreading factor of the selected channel:

$$\text{NOFSymbols} = 10 * 2^{(8 - \text{CodeClass})}$$

- **Symbol Phase Error**

The command returns the phase error in degrees of each symbol at the selected PCG. The number of the symbols depends on the spreading factor of the selected channel:

$$\text{NOFSymbols} = 10 * 2^{(8 - \text{CodeClass})}$$

Suffix:

<n> 1...4
irrelevant

Query parameters:

LIST Queries the results of the Spectrum Emission Mask. Refer to the `TRAC:DATA` command of the base unit for a more detailed description.

TRACE1 | TRACE2 | TRACE3 | TRACE4 Selects the trace to be queried.

Return values:

<active> Shows the number of active channels.

<code class> Shows the number of active channels. Code class of the channel. The code class specifies the spreading factor of the channel. The range is **{0...4}**.
0 = spreading factor 1
1 = spreading factor 2
2 = spreading factor 4
3 = spreading factor 8
4 = spreading factor 16
 For the data rates refer to the [channel characteristics](#).

<cdpabsolute> Absolute channel power in dBm. The range is **{-∞...∞}**

<cdprelative> Relative channel power in dB. The range is **{-∞...∞}**

<cerror> Chip Rate Error in ppm.

<channel> Channel number. The range is **{1...16}**. The number of channels depends on the spreading factor

<channel type> **0** = inactive
1 = midamble
2 = DPCH
3 = P-CCPCH
4 = S-CCPCH
5 = FPACH
6 = PDSCH
7 = PICH

<code number> Code number of the channel, range is **{1...16}**. The number of channels depends on the spreading factor.

| | |
|----------------------------------|---|
| <evmpeak> | Maximum value of the EVM. |
| <evmrms> | Average value of the EVM. |
| <ferror> | Frequency Error in Hz. |
| <ciqimbalance> and <iqoffset> | IQ Imbalance and IQ Offset in %. |
| <level> | Power level of the channel in dB or dBm. The range is $\{-\infty\ldots\infty\}$ |
| <maccuracy> | Composite EVM in %. |
| <mid1> and <mid2> | Power offset between sum power of channels belonging to midamble(k), only data field 1/2 and power of midamble(k) |
| <midamble shift> | Midamble Shift of the channel. |
| <modulation type> | Modulation type of the channel 0 = invalid (for midamble) 1 = QPSK 2 = 8PSK 3 = 16QAM 4 = 64QAM |
| <pcderror> | Peak Code Domain Error in dB. |
| <pd1> and <pd2> | Power of the data parts over all channels in dB. The range is $\{-\infty\ldots\infty\}$ |
| <pdata> | Mean power of both data parts (P1 and P2) over all channels in dBm. The range is $\{-\infty\ldots\infty\}$ |
| <pmidamble> | Power of the midamble in dB. The range is $\{-\infty\ldots\infty\}$ |
| <power detection> | 0 - inactive channel 1 - active channel |
| <rho> | Rho. The range is $\{0\ldots1\}$. |
| <sfactor> | Spreading Factor of the channel. The range is $\{1\ldots16\}$. |
| <slot> | Slot number. The range depends on the capture length. |
| <srate> | Data rate is kbps. |
| <tframe> | Trigger to Frame in ms. This value is valid only after successful synchronization to the TD-SCDMA signal. When using the Free Run trigger mode, the command returns a '9'. |
| <validity> | 0 = inactive channel 1 = active channel 2 = alias channel. The code class of these channels is <4, i.e. a channel consists of more than one code. |
| Usage: | Query only |

4.9 Other Commands Referenced in this Manual

The following commands are identical to those in the base unit and are included in this manual only because they are specifically referenced here.

See also [chapter 4.6.3, "Other SENSE Commands Referenced in this Manual"](#), on page 203 and [chapter 4.2.3, "Other CALCulate Commands Referenced in this Manual"](#), on page 145 .

| | | |
|-------|--------------------------------|-----|
| 4.9.1 | INPut commands..... | 248 |
| 4.9.2 | TRIGger Commands..... | 255 |
| 4.9.3 | Other Referenced Commands..... | 258 |

4.9.1 INPut commands

INPut:ATTenuation <Value>

This command programs the input attenuator. To protect the input mixer against damage from overloads, the setting 0 dB can be obtained by entering numerals, not by using the DOWN command.

The attenuation can be set in 5 dB steps (with option R&S FSV-B25: 1 dB steps). If the defined reference level cannot be set for the set RF attenuation, the reference level is adjusted accordingly.

In the default state with "Spectrum" mode, the attenuation set on the step attenuator is coupled to the reference level of the instrument. If the attenuation is programmed directly, the coupling to the reference level is switched off.

This function is not available if the R&S Digital I/Q Interface (R&S FSV-B17) is active.

Parameters:

<Value> *RST: 10 dB (AUTO is set to ON)

Example:

INP:ATT 30dB

Sets the attenuation on the attenuator to 30 dB and switches off the coupling to the reference level.

Mode: all

Manual operation: See "[RF Atten Manual/Mech Att Manual](#)" on page 42

INPut:ATTenuation:AUTO <State>

This command automatically couples the input attenuation to the reference level (state ON) or switches the input attenuation to manual entry (state OFF).

This function is not available if the R&S Digital I/Q Interface (R&S FSV-B17) is active.

Parameters:

<State> ON | OFF

*RST: ON

Example: `INP:ATT:AUTO ON`
 Couples the attenuation set on the attenuator to the reference level.

Manual operation: See "[RF Atten Auto/Mech Att Auto](#)" on page 42

INPut:COUPling <CouplingType>

Toggles the RF input of the R&S FSVR between AC and DC coupling.

This function is not available if the R&S Digital I/Q Interface (R&S FSV-B17) is active.

Parameters:

<CouplingType> AC | DC
 *RST: AC

Example: `INP:COUP DC`

Manual operation: See "[Input \(AC/DC\)](#)" on page 43

INPut:DIQ:CDEvice

This command queries the current configuration and the status of the digital baseband input from the optional R&S Digital I/Q Interface (option R&S FSV-B17).

For details see the section "Interface Status Information" for the R&S Digital I/Q Interface (R&S FSV-B17) in the description of the base unit.

Return values:

<ConnState> Defines whether a device is connected or not.
0
 No device is connected.
1
 A device is connected.

<DeviceName> Device ID of the connected device

<SerialNumber> Serial number of the connected device

<PortName> Port name used by the connected device

<SampleRate> Maximum or currently used sampling rate of the connected device in Hz (depends on the used connection protocol version; indicated by <SampleRateType> parameter)

<MaxTransferRate> Maximum data transfer rate of the connected device in Hz

| | |
|--------------------------|---|
| <ConnProtState> | State of the connection protocol which is used to identify the connected device. Not Started Has to be Started Started Passed Failed Done |
| <PRBSTestState> | State of the PRBS test. Not Started Has to be Started Started Passed Failed Done |
| <SampleRateType> | 0 Maximum sampling rate is displayed 1 Current sampling rate is displayed |
| <Placeholder> | for future use; currently "0" |
| Example: | INP:DIQ:CDEV? Result: 1, SMU200A, 103634, Out A, 700000000, 1000000000, Passed, Not Started, 0, 0 |
| Mode: | IQ, VSA, EVDO, CDMA, WCDMA, GSM, ADEMOD, TDS |
| Manual operation: | See " Connected Device " on page 50 See " Digital IQ Info " on page 51 |

INPut:DIQ:RANGe:AUTO <State>

If enabled, the digital input fullscale level is automatically set to the value provided by the connected device (if available).

This command is only available if the optional Digital Baseband interface (option R&S FSV-B17) is installed.

For details see the Digital Baseband Interface (R&S FSV-B17) description of the base unit.

Parameters:

<State> ON | OFF
*RST: OFF

Example: INP:DIQ:RANG:AUTO ON

Mode: IQ, VSA, EVDO, CDMA, WCDMA, GSM, ADEMOD, TDS

INPut:DIQ:RANGe:COUPling <State>

If enabled, the reference level for digital input is adjusted to the full scale level automatically if the fullscale level changes.

This command is only available if the optional R&S Digital I/Q Interface (option R&S FSV-B17) is installed.

For details see the R&S Digital I/Q Interface (R&S FSV-B17) description of the base unit.

Parameters:

<State> ON | OFF
*RST: OFF

Example: INP:DIQ:RANG:COUP OFF

Mode: IQ, VSA, EVDO, CDMA, WCDMA, GSM, ADEMOD, TDS

Manual operation: See "[Adjust Reference Level to Full Scale Level](#)" on page 51

INPut:DIQ:RANGe[:UPPer] <Level>

Defines or queries the "Full Scale Level", i.e. the level that should correspond to an I/Q sample with the magnitude "1".

It can be defined either in dBm or Volt (see "[Full Scale Level](#)" on page 50).

This command is only available if the optional R&S Digital I/Q Interface (option R&S FSV-B17) is installed.

For details see the R&S Digital I/Q Interface (R&S FSV-B17) description of the base unit.

Parameters:

<Level> <numeric value>
Range: 70.711 nV to 7.071 V
*RST: 1 V

Example: INP:DIQ:RANG 1V

Mode: A, IQ, NF, TDS, VSA, CDMA, EVDO, WCDMA, ADEMOD, GSM, OFDM, OFDMA/WiBro, WLAN

Manual operation: See "[Full Scale Level](#)" on page 50

INPut:DIQ:RANGe[:UPPer]:UNIT <Unit>

Defines the unit of the full scale level (see "[Level Unit](#)" on page 50). The availability of units depends on the measurement application you are using.

This command is only available if the optional R&S Digital I/Q Interface (option R&S FSV-B17) is installed.

For details see the R&S Digital I/Q Interface (R&S FSV-B17) description of the base unit.

Parameters:

<Level> V | dBm | dBpW | W | dBmV | dBuV | dBuA | A
 *RST: Volt

Example:

INP:DIQ:RANG:UNIT A

Mode:

IQ, VSA, EVDO, CDMA, WCDMA, GSM, ADEMODO, TDS

Manual operation: See "[Level Unit](#)" on page 50

INPut:DIQ:SRATe <SampleRate>

This command specifies or queries the sample rate of the input signal from the R&S Digital I/Q Interface (see "[Input Sample Rate](#)" on page 50).

This command is only available if the optional R&S Digital I/Q Interface (option R&S FSV-B17) is installed.

For details see the R&S Digital I/Q Interface (R&S FSV-B17) description of the base unit.

Parameters:

<SampleRate> Range: 1 Hz to 10 GHz
 *RST: 32 MHz

Example:

INP:DIQ:SRAT 200 MHz

Mode:

A, IQ, NF, TDS, VSA, CDMA, EVDO, WCDMA, ADEMODO, GSM, OFDM, OFDMA/WiBro, WLAN

Manual operation: See "[Input Sample Rate](#)" on page 50

INPut:DIQ:SRATe:AUTO <State>

If enabled, the sample rate of the digital baseband IQ input signal is set automatically by the connected device, if the currently used sample rate is provided (indicated by the <SampleRateType> parameter in the result of the `INPut:DIQ:CDEvice` command).

This command is only available if the optional R&S Digital I/Q Interface (option R&S FSV-B17) is installed.

For details see the R&S Digital I/Q Interface (B17) description of the base unit.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

INP:DIQ:SRAT:AUTO ON

Mode:

IQ, VSA, EVDO, CDMA, WCDMA, GSM, ADEMODO, TDS

INPut:EATT <Attenuation>

This command defines the electronic attenuation.

If necessary, the command also turns the electronic attenuator on.

This command is only available with option R&S FSV-B25, but not if R&S FSV-B17 is active.

The attenuation can be varied in 1 dB steps from 0 to 25 dB. Other entries are rounded to the next lower integer value.

If the defined reference level cannot be set for the given RF attenuation, the reference level is adjusted accordingly and the warning "Limit reached" is output.

Parameters:

<Attenuation> 0...25
*RST: 0 dB (OFF)

Example: INP1:EATT 10 dB

Mode: all

Manual operation: See "[EI Atten Mode \(Auto/Man\)](#)" on page 43

INPut:EATT:AUTO <State>

This command switches the automatic behaviour of the electronic attenuator on or off. If activated, electronic attenuation is used to reduce the operation of the mechanical attenuation whenever possible.

This command is only available with option R&S FSV-B25, but not if R&S FSV-B17 is active.

Parameters:

<State> ON | OFF
*RST: ON

Example: INP1:EATT:AUTO OFF

Mode: all

Manual operation: See "[EI Atten On/Off](#)" on page 43
See "[EI Atten Mode \(Auto/Man\)](#)" on page 43

INPut:EATT:STATe <State>

This command turns the electronic attenuator on or off.

This command is only available with option R&S FSV-B25, but not if R&S FSV-B17 is active.

Parameters:

<State> ON | OFF
*RST: OFF

Example: `INP:EATT:STAT ON`
Switches the electronic attenuator into the signal path.

INPut:GAIN:STATe <State>

This command turns the 20 dB preamplifier on and off.

With option R&S FSV-B22, the preamplifier only has an effect below 7 GHz.

With option R&S FSV-B24, the amplifier applies to the entire frequency range.

This command is not available when using R&S Digital I/Q Interface (R&S FSV-B17).

Parameters:

<State> `ON | OFF`
*RST: `OFF`

Example: `INP:GAIN:STAT ON`
Turns the preamplifier on.

Manual operation: See "[Preamp On/Off](#)" on page 19

INPut:IMPedance <Impedance>

This command selects the nominal input impedance.

75 Ω should be selected if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = 10 log (75 Ω /50 Ω).

This function is not available if the R&S Digital I/Q Interface (R&S FSV-B17) is active.

Parameters:

<Impedance> `50 | 75`
*RST: `50 Ω`

Example: `INP:IMP 75`

INPut:SELEct <Source>

This command selects the signal source for measurements.

Parameters:

<Source> `RF | DIQ`
RF
Radio Frequency ("RF INPUT" connector)
DIQ
Digital IQ (only available with R&S Digital I/Q Interface, option R&S FSV-B17)
*RST: `RF`

Example: `INP:SEL RF`

Mode: A, IQ, NF, TDS, VSA, CDMA, EVDO, WCDMA, ADEMOD, GSM, OFDM, OFDMA/WiBro, WLAN

Manual operation: See "Input Path" on page 50

4.9.2 TRIGger Commands

TRIGger<n>[:SEQuence]:LEVel:BBPower <Level>

This command sets the level of the baseband power trigger source (for digital input via the R&S Digital I/Q Interface, R&S FSV-B17).

Suffix:
<n> irrelevant

Parameters:
<Level> Range: -50 dBm to +20 dBm
*RST: -20 DBM

Example: TRIG:LEV:BB -30DBM

Mode: All

TRIGger<n>[:SEQuence]:BBPower:HOLDoff <Value>

This command sets the holding time before the next BB power trigger event (for digital input via the R&S Digital I/Q Interface, R&S FSV-B17).

Suffix:
<n> irrelevant

Parameters:
<Value> *RST: 150 ns

Example: TRIG:SOUR BBP
Sets the baseband power trigger source.
TRIG:BBP:HOLD 200 ns
Sets the holding time to 200 ns.

Mode: all

TRIGger<n>[:SEQuence]:IFPower:HOLDoff <Value>

This command sets the holding time before the next IF power trigger event.

Suffix:
<n> irrelevant

Parameters:
<Value> *RST: 150 ns

Example:

```
TRIG:SOUR IFP
Sets the IF power trigger source.
TRIG:IFP:HOLD 200 ns
Sets the holding time to 200 ns.
```

TRIGger<n>[:SEQUENCE]:IFPower:HYSteresis <Value>

This command sets the limit that the hysteresis value for the IF power trigger has to fall below in order to trigger the next measurement.

Suffix:
<n> irrelevant

Parameters:
<Value> *RST: 3 dB

Example:

```
TRIG:SOUR IFP
Sets the IF power trigger source.
TRIG:IFP:HYST 10DB
Sets the hysteresis limit value.
```

TRIGger<n>[:SEQUENCE]:HOLDoff[:TIME] <Delay>

This command defines the length of the trigger delay.

A negative delay time (pretrigger) can be set in zero span only.

Suffix:
<n> irrelevant

Parameters:
<Delay> Range: zero span: -sweeptime (see data sheet) to 30 s;
span: 0 to 30 s
*RST: 0 s

Example: TRIG:HOLD 500us

Manual operation: See "[Trigger Offset](#)" on page 21

TRIGger<n>[:SEQUENCE]:LEVel[:EXtErnal] <TriggerLevel>

This command sets the level of the external trigger source in Volt.

Suffix:
<n> irrelevant

Parameters:
<TriggerLevel> Range: 0.5 V to 3.5 V
*RST: 1.4 V

Example: TRIG:LEV 2V

TRIGger<n>[:SEQuence]:MASK:CONDition <Condition>

This command sets the condition that activates the frequency mask trigger.

Parameters:

<Condition>

ENTer

Triggers on entering the frequency mask.

LEAVing

Triggers on leaving the frequency mask.

INSide

The trigger is active as long as the signal is inside the frequency mask.

OUTSide

The trigger is active as long as the signal is outside the frequency mask.

*RST: INSide

Example:

See [chapter 4.2.3.5, "CALCulate:MASK Subsystem"](#), on page 171.

Manual operation: See ["Setting the trigger condition"](#) on page 108

TRIGger<n>[:SEQuence]:SLOPe <Type>

This command selects the slope of the trigger signal. The selected trigger slope applies to all trigger signal sources.

Suffix:

<n>

irrelevant

Parameters:

<Type>

POSitive | NEGative

*RST: POSitive

Example:

TRIG:SLOP NEG

Manual operation: See ["Trigger Polarity"](#) on page 21
See ["Trg/Gate Polarity"](#) on page 48

TRIGger<n>[:SEQuence]:SOURce <Source>

This command selects the trigger source.

For details on trigger modes refer to the "Trg/Gate Source" softkey in the base unit description.

Suffix:

<n>

irrelevant

Parameters:

<Source>

EXTernal | IFPower | IMMEDIATE | MASK | TIME | VIDEO

Note that the availability of the trigger source depends on the measurement you are in.

EXTernal

Selects an external trigger.

IFPower

Selects the power trigger on the second intermediate frequency.

IMMEDIATE

Selects the free run mode (= no trigger).

MASK

Selects the frequency mask trigger.

TDTRigger

Selects the time domain trigger.

TIME

Selects the time trigger.

VIDEO

Selects the video trigger. The video trigger is available for time domain measurements.

*RST: IMMEDIATE

Example:

```
TRIG:SOUR EXT
```

Selects the external trigger input as source of the trigger signal

Manual operation:

See ["Trigger Source Free Run"](#) on page 21

See ["Trigger Source External"](#) on page 21

4.9.3 Other Referenced Commands

ABORt

This command aborts a current measurement and resets the trigger system.

Example:

```
ABOR; INIT: IMM
```

Mode:

all

Manual operation:

See ["Meas Start/Stop"](#) on page 77

DIAGnostic<n>:SERVice:NSOource <State>

This command switches the 28 V supply of the noise source on the front panel on or off.

Suffix:

<n>

irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example: DIAG:SERV:NSO ON

Manual operation: See "Noise Source" on page 50

FORMat:DEXPort:DSEParator <Separator>

This command defines which decimal separator (decimal point or comma) is to be used for outputting measurement data to the file in ASCII format. Different languages of evaluation programs (e.g. MS-Excel) can thus be supported.

Parameters:

<Separator> POINT | COMMA
 *RST: (factory setting is POINT; *RST does not affect setting)

Example: FORM:DEXP:DSEP POIN
 Sets the decimal point as separator.

INITiate<n>:CONMeas

This command restarts a measurement that has been stopped in single sweep mode.

The measurement is restarted at the first sweep point.

As opposed to `INITiate<n>[:IMMEDIATE]`, this command does not reset traces in maxhold, minhold or average mode. Therefore it can be used to continue measurements using max hold or averaging functions.

In single sweep mode, you can synchronize to the end of the measurement with *OPC, *OPC? or *WAI. In continuous sweep mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous sweep mode in remote control, as results like trace data or markers are only valid after a single sweep end synchronization.

Suffix:

<n> irrelevant

Example: INIT:CONT OFF
 Switches to single sweep mode.
 DISP:WIND:TRAC:MODE AVER
 Switches on trace averaging.
 SWE:COUN 20
 Setting the sweep counter to 20 sweeps.
 INIT;*WAI
 Starts the measurement and waits for the end of the 20 sweeps.
 INIT:CONM;*WAI
 Continues the measurement (next 20 sequences) and waits for the end.

Manual operation: See ["Continue Single Sweep"](#) on page 45

INITiate<n>:CONTInuous <State>

This command determines whether the trigger system is continuously initiated (continuous) or performs single measurements (single).

The sweep is started immediately.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF
*RST: ON

Example:

```
INIT:CONT OFF
Switches the sequence to single sweep.
INIT:CONT ON
Switches the sequence to continuous sweep.
```

Mode: all

Manual operation: See ["Continuous Sweep"](#) on page 45
See ["Single Sweep"](#) on page 45
See ["Start Meas"](#) on page 85

INITiate<n>:ESpectrum

This command starts a Spectrum Emission Mask measurement.

Suffix:

<n> irrelevant

Example:

```
INIT:ESP
Starts a Spectrum Emission Mask measurement.
```

Manual operation: See ["Meas Start/Stop"](#) on page 77

INITiate<n>:[IMMEDIATE]

The command initiates a new measurement sequence.

With sweep count > 0 or average count > 0, this means a restart of the indicated number of measurements. With trace functions MAXHold, MINHold and AVERage, the previous results are reset on restarting the measurement.

In single sweep mode, you can synchronize to the end of the measurement with *OPC, *OPC? or *WAI. In continuous sweep mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous sweep mode in remote control, as results like trace data or markers are only valid after a single sweep end synchronization.

| | |
|--------------------------|--|
| Suffix: | |
| <n> | irrelevant |
| Example: | <pre>INIT:CONT OFF Switches to single sweep mode. DISP:WIND:TRAC:MODE AVER Switches on trace averaging. SWE:COUN 20 Setting the sweep counter to 20 sweeps. INIT;*WAI Starts the measurement and waits for the end of the 20 sweeps.</pre> |
| Mode: | all |
| Manual operation: | See "Start Meas" on page 85 |

MMEMory:STORe<n>:LIST <FileName>

This command stores the current list evaluation results in a <file name>.dat file. The file consists of a data section containing the list evaluation results.

Suffix:
<n> irrelevant

Parameters:
<FileName> <file name>

Example: `MMEM:STOR:LIST 'test'`
Stores the current list evaluation results in the test.dat file.

MMEMory:STORe<n>:TRACe <Trace>, <FileName>

This command stores the selected trace in the specified window in a file with ASCII format. The file format is described in [chapter 3.4.6, "ASCII File Export Format"](#), on page 117

The decimal separator (decimal point or comma) for floating-point numerals contained in the file is defined with the `FORMat:DEXPort:DSEParator` command (see [FORMat:DEXPort:DSEParator](#) on page 259).

Suffix:
<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

Parameters:
<Trace> 1 to 6
selected measurement trace

<FileName> DOS file name
The file name includes indication of the path and the drive name. Indication of the path complies with DOS conventions.

Example: `MMEM:STOR:TRAC 3, 'TEST.ASC'`
Stores trace 3 in the file TEST.ASC.

OUTPut:IF[:SOURce] <Source>

This command selects the source of the IF output.

Parameters:

<Source> **IF**
 Outputs the intermediate frequency.

OFF
 Turns off the output of a signal.

VIDeo
 Outputs the video signal (200 mV).

*RST: IF

Example:

OUTP:IF VID
Selects the video signal for the IF output connector.

Manual operation: See "[Video Output](#)" on page 106

OUTPut:TRIGger <PortLevel>

This command selects level of the Trigger Out port. Thus, you can trigger an additional device via the external trigger port, for example.

Parameters:

<PortLevel> LOW | HIGH

*RST: LOW

Example:

OUTP:TRIG HIGH

Manual operation: See "[Trigger Out](#)" on page 106

SYSTem:DISPly:UPDate <State>

In remote control mode, this command switches on or off the instrument display. If switched on, only the diagrams, traces and display fields are displayed and updated.

The best performance is obtained if the display output is switched off during remote control.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

SYST:DISP:UPD ON

List of Commands

| | |
|--|-----|
| [SENSe:]ADJust:ALL..... | 203 |
| [SENSe:]ADJust:CONFIguration:HYSTeresis:LOWer..... | 203 |
| [SENSe:]ADJust:CONFIguration:HYSTeresis:UPPer..... | 204 |
| [SENSe:]ADJust:CONFIgure:LEVel:DURation..... | 204 |
| [SENSe:]ADJust:CONFIgure:LEVel:DURation:MODE..... | 204 |
| [SENSe:]ADJust:FREQuency..... | 205 |
| [SENSe:]ADJust:LEVel..... | 205 |
| [SENSe:]AVERAge<n>:COUNT..... | 240 |
| [SENSe:]AVERAge<n>[:STATe<Trace>]..... | 241 |
| [SENSe:]BANDwidth BWIDth:VIDeo..... | 219 |
| [SENSe:]BANDwidth BWIDth:VIDeo:AUTO..... | 219 |
| [SENSe:]BANDwidth BWIDth:VIDeo:RATio..... | 220 |
| [SENSe:]BANDwidth BWIDth:VIDeo:TYPE..... | 220 |
| [SENSe:]BANDwidth BWIDth[:RESolution]..... | 217 |
| [SENSe:]BANDwidth BWIDth[:RESolution]:AUTO..... | 217 |
| [SENSe:]BANDwidth BWIDth[:RESolution]:FFT..... | 218 |
| [SENSe:]BANDwidth BWIDth[:RESolution]:RATio..... | 218 |
| [SENSe:]BANDwidth BWIDth[:RESolution]:TYPE..... | 218 |
| [SENSe:]CDPower:CODE..... | 196 |
| [SENSe:]CDPower:ICThreshold..... | 197 |
| [SENSe:]CDPower:IQLength..... | 197 |
| [SENSe:]CDPower:LEVel:ADJust..... | 197 |
| [SENSe:]CDPower:MMAx..... | 198 |
| [SENSe:]CDPower:MSHift..... | 198 |
| [SENSe:]CDPower:NORMAlize..... | 198 |
| [SENSe:]CDPower:QINVert..... | 199 |
| [SENSe:]CDPower:SBANd..... | 199 |
| [SENSe:]CDPower:SCODE..... | 199 |
| [SENSe:]CDPower:SET..... | 199 |
| [SENSe:]CDPower:SET:COUNT..... | 200 |
| [SENSe:]CDPower:SLOT..... | 200 |
| [SENSe:]CDPower:STSLot..... | 200 |
| [SENSe:]CDPower:STSLot:MODE..... | 201 |
| [SENSe:]CDPower:STSLot:ROTate..... | 201 |
| [SENSe:]ESpectrum:BWID..... | 206 |
| [SENSe:]ESpectrum:FILTer[:RRC]:ALPHa..... | 206 |
| [SENSe:]ESpectrum:FILTer[:RRC][:STATe]..... | 206 |
| [SENSe:]ESpectrum:HighSPeed..... | 207 |
| [SENSe:]ESpectrum:PRESet:REStore..... | 208 |
| [SENSe:]ESpectrum:PRESet:StORe..... | 208 |
| [SENSe:]ESpectrum:PRESet[:STANdard]..... | 208 |
| [SENSe:]ESpectrum:RANGe<range>:BANDwidth:VIDeo..... | 209 |
| [SENSe:]ESpectrum:RANGe<range>:BANDwidth[:RESolution]..... | 208 |
| [SENSe:]ESpectrum:RANGe<range>:COUNT..... | 209 |
| [SENSe:]ESpectrum:RANGe<range>:DELeTe..... | 209 |
| [SENSe:]ESpectrum:RANGe<range>:FILTer:TYPE..... | 210 |
| [SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation..... | 211 |

| | |
|--|-----|
| [SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation:AUTO..... | 211 |
| [SENSe:]ESpectrum:RANGe<range>:INPut:GAIN:STATe..... | 212 |
| [SENSe:]ESpectrum:RANGe<range>:INSet..... | 212 |
| [SENSe:]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:START..... | 213 |
| [SENSe:]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:STOP..... | 213 |
| [SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:START..... | 213 |
| [SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:STOP..... | 214 |
| [SENSe:]ESpectrum:RANGe<range>:LIMit<source>:STATe..... | 214 |
| [SENSe:]ESpectrum:RANGe<range>:RLEVel..... | 215 |
| [SENSe:]ESpectrum:RANGe<range>:SWEep:TIME..... | 215 |
| [SENSe:]ESpectrum:RANGe<range>:SWEep:TIME:AUTO..... | 215 |
| [SENSe:]ESpectrum:RANGe<range>:TRANsducer..... | 216 |
| [SENSe:]ESpectrum:RANGe<range>[:FREQuency]:START..... | 210 |
| [SENSe:]ESpectrum:RANGe<range>[:FREQuency]:STOP..... | 211 |
| [SENSe:]ESpectrum:RRANGe..... | 216 |
| [SENSe:]ESpectrum:RTYPE..... | 216 |
| [SENSe:]FREQuency:CENTer..... | 221 |
| [SENSe:]FREQuency:CENTer:STEP..... | 221 |
| [SENSe:]FREQuency:CENTer:STEP:AUTO..... | 221 |
| [SENSe:]FREQuency:CENTer:STEP:LINK..... | 221 |
| [SENSe:]FREQuency:CENTer:STEP:LINK:FACTor..... | 222 |
| [SENSe:]FREQuency:OFFSet..... | 222 |
| [SENSe:]FREQuency:SPAN..... | 223 |
| [SENSe:]FREQuency:SPAN:FULL..... | 223 |
| [SENSe:]FREQuency:START..... | 223 |
| [SENSe:]FREQuency:STOP..... | 223 |
| [SENSe:]POWer:ACHannel:ACPairs..... | 224 |
| [SENSe:]POWer:ACHannel:AUTO:LTIME..... | 202 |
| [SENSe:]POWer:ACHannel:BANDwidth BWIDth:ACHannel..... | 225 |
| [SENSe:]POWer:ACHannel:BANDwidth BWIDth:ALTErnate<channel>..... | 225 |
| [SENSe:]POWer:ACHannel:BANDwidth BWIDth[:CHANnel<channel>]..... | 225 |
| [SENSe:]POWer:ACHannel:FILTer:ALPHa:ACHannel..... | 226 |
| [SENSe:]POWer:ACHannel:FILTer:ALPHa:ALTErnate<channel>..... | 226 |
| [SENSe:]POWer:ACHannel:FILTer:ALPHa:CHANnel<channel>..... | 226 |
| [SENSe:]POWer:ACHannel:FILTer[:STATe]:ACHannel..... | 227 |
| [SENSe:]POWer:ACHannel:FILTer[:STATe]:ALTErnate<channel>..... | 227 |
| [SENSe:]POWer:ACHannel:FILTer[:STATe]:CHANnel<channel>..... | 227 |
| [SENSe:]POWer:ACHannel:MODE..... | 228 |
| [SENSe:]POWer:ACHannel:NAME:ACHannel..... | 228 |
| [SENSe:]POWer:ACHannel:NAME:ALTErnate<channel>..... | 228 |
| [SENSe:]POWer:ACHannel:NAME:CHANnel<channel>..... | 229 |
| [SENSe:]POWer:ACHannel:PRESet..... | 229 |
| [SENSe:]POWer:ACHannel:PRESet:RLEVel..... | 230 |
| [SENSe:]POWer:ACHannel:REFerence:AUTO ONCE..... | 230 |
| [SENSe:]POWer:ACHannel:REFerence:TXCHannel:AUTO..... | 230 |
| [SENSe:]POWer:ACHannel:REFerence:TXCHannel:MANual..... | 231 |
| [SENSe:]POWer:ACHannel:SLOT:StarT..... | 202 |
| [SENSe:]POWer:ACHannel:SLOT:STOP..... | 202 |
| [SENSe:]POWer:ACHannel:SPACing:ALTErnate<channel>..... | 231 |
| [SENSe:]POWer:ACHannel:SPACing:CHANnel<channel>..... | 232 |

| | |
|--|-----|
| [SENSe:]POWer:ACHannel:SPACing[:ACHannel]..... | 231 |
| [SENSe:]POWer:ACHannel:TXCHannel:COUNT..... | 232 |
| [SENSe:]POWer:BANDwidth BWIDth..... | 232 |
| [SENSe:]POWer:HSPeed..... | 233 |
| [SENSe:]POWer:NCORrection..... | 233 |
| [SENSe:]POWer:TRACe..... | 234 |
| [SENSe:]SWEep:COUNT..... | 234 |
| [SENSe:]SWEep:EGATe..... | 235 |
| [SENSe:]SWEep:EGATe:HOLDoff..... | 235 |
| [SENSe:]SWEep:EGATe:LENGth..... | 236 |
| [SENSe:]SWEep:EGATe:POLarity..... | 236 |
| [SENSe:]SWEep:EGATe:SOURce..... | 236 |
| [SENSe:]SWEep:EGATe:TRACe<k>: PERiod..... | 237 |
| [SENSe:]SWEep:EGATe:TRACe<k>: STOP<range>..... | 238 |
| [SENSe:]SWEep:EGATe:TRACe<k>:COMMeNt..... | 236 |
| [SENSe:]SWEep:EGATe:TRACe<k>:STARt<range>..... | 237 |
| [SENSe:]SWEep:EGATe:TRACe<k>[:STATe<range>]..... | 237 |
| [SENSe:]SWEep:EGATe:TYPE..... | 238 |
| [SENSe:]SWEep:POINts..... | 239 |
| [SENSe:]SWEep:TIME..... | 239 |
| [SENSe:]SWEep:TIME:AUTO..... | 239 |
| [SENSe:]SWEep:TYPE..... | 240 |
| ABORt..... | 258 |
| CALCulate<n>:DELTAmarker<m>:FUNctioN:FIXed:RPOint:X..... | 146 |
| CALCulate<n>:DELTAmarker<m>:FUNctioN:FIXed:RPOint:Y..... | 146 |
| CALCulate<n>:DELTAmarker<m>:FUNctioN:FIXed[:STATe]..... | 147 |
| CALCulate<n>:DELTAmarker<m>:FUNctioN:PNOise:AUTO..... | 147 |
| CALCulate<n>:DELTAmarker<m>:FUNctioN:PNOise[:STATe]..... | 147 |
| CALCulate<n>:DELTAmarker<m>:LINK..... | 148 |
| CALCulate<n>:DELTAmarker<m>:MAXimum:LEFT..... | 148 |
| CALCulate<n>:DELTAmarker<m>:MAXimum:NEXT..... | 149 |
| CALCulate<n>:DELTAmarker<m>:MAXimum:RIGHT..... | 149 |
| CALCulate<n>:DELTAmarker<m>:MAXimum[:PEAK]..... | 149 |
| CALCulate<n>:DELTAmarker<m>:MINimum:LEFT..... | 150 |
| CALCulate<n>:DELTAmarker<m>:MINimum:NEXT..... | 150 |
| CALCulate<n>:DELTAmarker<m>:MINimum:RIGHT..... | 151 |
| CALCulate<n>:DELTAmarker<m>:MINimum[:PEAK]..... | 150 |
| CALCulate<n>:DELTAmarker<m>:TRACe..... | 151 |
| CALCulate<n>:DELTAmarker<m>:X..... | 152 |
| CALCulate<n>:DELTAmarker<m>:X:RELative?..... | 152 |
| CALCulate<n>:DELTAmarker<m>:Y?..... | 153 |
| CALCulate<n>:DELTAmarker<m>[:STATe]..... | 151 |
| CALCulate<n>:FEED..... | 136 |
| CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute..... | 153 |
| CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute:STATe..... | 154 |
| CALCulate<n>:LIMit<k>:ACPower:ACHannel:RESult..... | 156 |
| CALCulate<n>:LIMit<k>:ACPower:ACHannel[:RELative]..... | 155 |
| CALCulate<n>:LIMit<k>:ACPower:ACHannel[:RELative]:STATe..... | 156 |
| CALCulate<n>:LIMit<k>:ACPower:ALternate<Channel>:ABSolute..... | 157 |
| CALCulate<n>:LIMit<k>:ACPower:ALternate<channel>[:RELative]..... | 158 |

| | |
|--|-----|
| CALCulate<n>:LIMit<k>:ACPoweR:ALTeRnate<Channel>[:RELative]:STATe..... | 158 |
| CALCulate<n>:LIMit<k>:ACPoweR[:STATe]..... | 159 |
| CALCulate<n>:LIMit<k>:ESPeCtrum:LIMits..... | 160 |
| CALCulate<n>:LIMit<k>:ESPeCtrum:MODE..... | 161 |
| CALCulate<n>:LIMit<k>:ESPeCtrum:PCLass<Class>:COUNt..... | 162 |
| CALCulate<n>:LIMit<k>:ESPeCtrum:PCLass<Class>:LIMit[:STATe]..... | 162 |
| CALCulate<n>:LIMit<k>:ESPeCtrum:PCLass<Class>:MAXimum..... | 163 |
| CALCulate<n>:LIMit<k>:ESPeCtrum:PCLass<Class>:MINimum..... | 163 |
| CALCulate<n>:LIMit<k>:ESPeCtrum:PCLass<Class>[:EXCLusive]..... | 161 |
| CALCulate<n>:LIMit<k>:ESPeCtrum:RESTore..... | 164 |
| CALCulate<n>:LIMit<k>:ESPeCtrum:VALue..... | 164 |
| CALCulate<n>:LIMit<k>:FAIL?..... | 160 |
| CALCulate<n>:MARKer:FUNCTion:CDPoweR[:BTS]:RESult?..... | 138 |
| CALCulate<n>:MARKer<m>:AOFF..... | 165 |
| CALCulate<n>:MARKer<m>:FUNCTion:POWeR:MODE..... | 142 |
| CALCulate<n>:MARKer<m>:FUNCTion:POWeR:RESult:PHZ..... | 144 |
| CALCulate<n>:MARKer<m>:FUNCTion:POWeR:RESult?..... | 143 |
| CALCulate<n>:MARKer<m>:FUNCTion:POWeR:SELect..... | 144 |
| CALCulate<n>:MARKer<m>:MAXimum:LEFT..... | 165 |
| CALCulate<n>:MARKer<m>:MAXimum:NEXT..... | 165 |
| CALCulate<n>:MARKer<m>:MAXimum:RIGHT..... | 166 |
| CALCulate<n>:MARKer<m>:MAXimum[:PEAK]..... | 166 |
| CALCulate<n>:MARKer<m>:MINimum:LEFT..... | 166 |
| CALCulate<n>:MARKer<m>:MINimum:NEXT..... | 167 |
| CALCulate<n>:MARKer<m>:MINimum:RIGHT..... | 167 |
| CALCulate<n>:MARKer<m>:MINimum[:PEAK]..... | 167 |
| CALCulate<n>:MARKer<m>:TRACe..... | 168 |
| CALCulate<n>:MARKer<m>:X..... | 169 |
| CALCulate<n>:MARKer<m>:X:SLIMits:ZOOM..... | 170 |
| CALCulate<n>:MARKer<m>:X:SLIMits[:STATe]..... | 169 |
| CALCulate<n>:MARKer<m>:Y:PERCent..... | 171 |
| CALCulate<n>:MARKer<m>:Y?..... | 170 |
| CALCulate<n>:MARKer<m>[:STATe]..... | 168 |
| CALCulate<n>:MASK:CDIRectory..... | 172 |
| CALCulate<n>:MASK:COMMeNt..... | 173 |
| CALCulate<n>:MASK:DELete..... | 173 |
| CALCulate<n>:MASK:LOWer:SHIFt:X..... | 173 |
| CALCulate<n>:MASK:LOWer:SHIFt:Y..... | 174 |
| CALCulate<n>:MASK:LOWer[:DATA]..... | 174 |
| CALCulate<n>:MASK:LOWer[:STATe]..... | 174 |
| CALCulate<n>:MASK:MODE..... | 175 |
| CALCulate<n>:MASK:NAME..... | 175 |
| CALCulate<n>:MASK:SPAN..... | 175 |
| CALCulate<n>:MASK:UPPer:AUTO..... | 175 |
| CALCulate<n>:MASK:UPPer:SHIFt:X..... | 176 |
| CALCulate<n>:MASK:UPPer:SHIFt:Y..... | 176 |
| CALCulate<n>:MASK:UPPer[:DATA]..... | 176 |
| CALCulate<n>:MASK:UPPer[:STATe]..... | 176 |
| CALCulate<n>:PEAKsearch PSEarch:AUTO..... | 177 |
| CALCulate<n>:PEAKsearch PSEarch:MARGin..... | 178 |

| | |
|---|-----|
| CALCulate<n>:PEAKsearch PSEarch:PSHOW..... | 178 |
| CALCulate<n>:PEAKsearch PSEarch:SUBRANGES..... | 178 |
| CALCulate<n>:PEAKsearch PSEarch[:IMMEDIATE]..... | 177 |
| CALCulate<n>:STATistics:CCDF[:STATE]..... | 179 |
| CALCulate<n>:STATistics:NSAMPLES..... | 179 |
| CALCulate<n>:STATistics:PRESET..... | 179 |
| CALCulate<n>:STATistics:RESULT<TRACE>..... | 180 |
| CALCulate<n>:STATistics:SCALE:AUTO ONCE..... | 180 |
| CALCulate<n>:STATistics:SCALE:X:RANGE..... | 181 |
| CALCulate<n>:STATistics:SCALE:X:RLEVEL..... | 181 |
| CALCulate<n>:STATistics:SCALE:Y:LOWER..... | 182 |
| CALCulate<n>:STATistics:SCALE:Y:UNIT..... | 182 |
| CALCulate<n>:STATistics:SCALE:Y:UPPER..... | 182 |
| CALCulate<n>:THRESHOLD..... | 183 |
| CALCulate<n>:UNIT:POWER..... | 183 |
| CONFigure:CDPower[:BTS]:CTABLE:CATALOG?..... | 184 |
| CONFigure:CDPower[:BTS]:CTABLE:COMMENT..... | 184 |
| CONFigure:CDPower[:BTS]:CTABLE:COPY..... | 184 |
| CONFigure:CDPower[:BTS]:CTABLE:DATA..... | 185 |
| CONFigure:CDPower[:BTS]:CTABLE:DELETE..... | 186 |
| CONFigure:CDPower[:BTS]:CTABLE:MSHIFT..... | 186 |
| CONFigure:CDPower[:BTS]:CTABLE:NAME..... | 186 |
| CONFigure:CDPower[:BTS]:CTABLE:ORDER..... | 186 |
| CONFigure:CDPower[:BTS]:CTABLE:RESTORE..... | 187 |
| CONFigure:CDPower[:BTS]:CTABLE:SELECT..... | 187 |
| CONFigure:CDPower[:BTS]:CTABLE[:STATE]..... | 183 |
| CONFigure:CDPower[:BTS]:MEASUREMENT..... | 187 |
| CONFigure:CDPower[:BTS]:PVTime:SFRAMES..... | 188 |
| CONFigure:CDPower[:BTS]:PVTime:SPOINT..... | 188 |
| DIAGnostic<n>:SERVICE:NSOURCE..... | 258 |
| DISPlay[:WINDow<n>]:SIZE..... | 189 |
| DISPlay[:WINDow<n>]:SSELECT..... | 189 |
| DISPlay[:WINDow<n>]:STATE..... | 189 |
| DISPlay[:WINDow<n>]:TRACE:Y[:SCALE]:AUTO..... | 191 |
| DISPlay[:WINDow<n>]:TRACE:Y[:SCALE]:MAXIMUM..... | 192 |
| DISPlay[:WINDow<n>]:TRACE:Y[:SCALE]:MINIMUM..... | 192 |
| DISPlay[:WINDow<n>]:TRACE<t>:MODE..... | 190 |
| DISPlay[:WINDow<n>]:TRACE<t>:Y:SPACING..... | 195 |
| DISPlay[:WINDow<n>]:TRACE<t>:Y[:SCALE]..... | 191 |
| DISPlay[:WINDow<n>]:TRACE<t>:Y[:SCALE]:MODE..... | 193 |
| DISPlay[:WINDow<n>]:TRACE<t>:Y[:SCALE]:PDIVISION..... | 193 |
| DISPlay[:WINDow<n>]:TRACE<t>:Y[:SCALE]:RLEVEL..... | 193 |
| DISPlay[:WINDow<n>]:TRACE<t>:Y[:SCALE]:RLEVEL:OFFSET..... | 194 |
| DISPlay[:WINDow<n>]:TRACE<t>:Y[:SCALE]:RPOSITION..... | 194 |
| DISPlay[:WINDow<n>]:TRACE<t>:Y[:SCALE]:RVALUE..... | 194 |
| DISPlay[:WINDow<n>]:TRACE<t>[:STATE]..... | 191 |
| FORMat:DEXPort:DSEPARATOR..... | 259 |
| INITiate<n>:CONMeas..... | 259 |
| INITiate<n>:CONTinuous..... | 260 |
| INITiate<n>:ESpectrum..... | 260 |

| | |
|---|-----|
| INITiate<n>[:IMMediate]..... | 260 |
| INPut:ATTenuation..... | 248 |
| INPut:ATTenuation:AUTO..... | 248 |
| INPut:COUPling..... | 249 |
| INPut:DIQ:CDEvice..... | 249 |
| INPut:DIQ:RANGe:AUTO..... | 250 |
| INPut:DIQ:RANGe:COUPling..... | 251 |
| INPut:DIQ:RANGe[:UPPer]..... | 251 |
| INPut:DIQ:RANGe[:UPPer]:UNIT..... | 251 |
| INPut:DIQ:SRATe..... | 252 |
| INPut:DIQ:SRATe:AUTO..... | 252 |
| INPut:EATT..... | 253 |
| INPut:EATT:AUTO..... | 253 |
| INPut:EATT:STATe..... | 253 |
| INPut:GAIN:STATe..... | 254 |
| INPut:IMPedance..... | 254 |
| INPut:SElect..... | 254 |
| INSTRument:NSElect..... | 196 |
| INSTRument[:SElect]..... | 195 |
| MMEMory:STORe<n>:LIST..... | 261 |
| MMEMory:STORe<n>:TRACe..... | 261 |
| OUTPut:IF[:SOURce]..... | 262 |
| OUTPut:TRIGger..... | 262 |
| STATus:QUEStionable:SYNC:CONDition?..... | 241 |
| STATus:QUEStionable:SYNC[:EVENT]?..... | 242 |
| SYSTem:DISPlay:UPDate..... | 262 |
| TRACe<n>[:DATA]?..... | 242 |
| TRIGger<n>[:SEquence]:BBPower:HOLDoff..... | 255 |
| TRIGger<n>[:SEquence]:HOLDoff[:TIME]..... | 256 |
| TRIGger<n>[:SEquence]:IFPower:HOLDoff..... | 255 |
| TRIGger<n>[:SEquence]:IFPower:HYSTerisis..... | 256 |
| TRIGger<n>[:SEquence]:LEVel:BBPower..... | 255 |
| TRIGger<n>[:SEquence]:LEVel[:EXTErnal]..... | 256 |
| TRIGger<n>[:SEquence]:MASK:CONDition..... | 257 |
| TRIGger<n>[:SEquence]:SLOPe..... | 257 |
| TRIGger<n>[:SEquence]:SOURce..... | 257 |

Index

A

| | |
|---|-------------|
| ACLR | |
| absolute limit | 65 |
| adjacent channel name (remote control) | 228 |
| alternate channel name (remote control) | 228 |
| Channel Bandwidth | 61 |
| channel name (remote control) | 229 |
| channel names | 63 |
| Channel Spacing | 62 |
| limit check | 64 |
| Limit Checking | 64 |
| number of channels | 60 |
| reference | 62 |
| relative limit | 65 |
| Weighting Filter | 63 |
| ASCII Trace export | 117 |
| attenuation | |
| (option B25) | 43, 94 |
| Attenuation | |
| (option B25) | 43, 94 |
| Automatic | 42, 94 |
| Manual | 42, 93, 248 |
| Option B25 | 42, 93 |
| Auto level | |
| Hysteresis | 45 |
| Auto Peak detector | 111 |
| Average detector | 111 |
| Average trace mode | 47, 113 |

B

| | |
|------------------|-----|
| Bandwidth | |
| Menu | 95 |
| Resolution | 96 |
| Video | 97 |
| Blank trace mode | 114 |

C

| | |
|--|------------|
| Center frequency | 18, 40, 86 |
| Step size | 87 |
| channel | |
| bandwidth | 61, 78 |
| number | 60 |
| spacing | 62 |
| Channel Table Settings | |
| softkey | 23 |
| Characters | |
| Special | 134 |
| Clear Write trace mode | 46, 113 |
| Commands | |
| Description | 133 |
| CONFigure:CDPower[:BTS]:CTABLE:DATA | 185 |
| CONFigure:CDPower[:BTS]:CTABLE:MSHift | 186 |
| CONFigure:CDPower[:BTS]:CTABLE:ORDer | 186 |
| CONFigure:CDPower[:BTS]:MEASurement | 187 |
| CONFigure:CDPower[:BTS]:PVTime:SFRames | 188 |
| CONFigure:CDPower[:BTS]:PVTime:SPOint | 188 |
| Continuous sweep | 45, 102 |
| Correction | |
| inherent noise | 68 |

| | |
|----------------------|---------|
| coupling | |
| default settings | 101 |
| Coupling | |
| Resolution bandwidth | 96 |
| Sweep time | 98, 103 |
| Video bandwidth | 97 |

D

| | |
|-----------------------------------|----------------|
| default scalings of x- and y-axis | 82 |
| Delete | |
| softkey | 27 |
| detector | |
| overview | 111 |
| DigiConf | |
| Softkey | 52 |
| Digital IQ data | |
| device | 50 |
| Digital IQ Info | |
| Remote control | 249 |
| Softkey | 51 |
| Display Configuration | |
| softkey | 28 |
| display mode | |
| Symbol Magnitude Error | 38 |
| display range | |
| level | 80, 81, 91, 92 |
| Display range | |
| Frequency | 18, 40, 86 |

E

| | |
|------------------------------|---------|
| Electronic input attenuation | |
| FSV-B25 | 253 |
| EX-IQ-BOX | 51 |
| DigiConf | 52 |
| export format | 117 |
| external noise source | 50, 106 |

F

| | |
|------------------------|------------|
| FFT Filter Mode | |
| Auto | 99, 104 |
| Narrow | 99, 105 |
| softkey | 99, 104 |
| Filter types | |
| 5-Pole | 114 |
| Normal (3dB) | 114 |
| RRC | 114 |
| Filters | |
| Overview | 115 |
| Selecting | 114 |
| Types | 114 |
| frequency | |
| offset | 19, 40, 89 |
| start | 88 |
| stop | 89 |
| Frequency | |
| Center | 18, 40, 86 |
| Frequency mask trigger | 107 |
| Frequency menu | 86 |
| Frontend settings | 18 |

- Full Scale Level
 Digital Baseband IQ (remote control) 250
 Digital I/Q Interface (remote control) 251
 Digital IQ 50
- H**
- Hysteresis
 Lower (Auto level) 45
 Upper (Auto level) 45
- I**
- IEC/IEEE bus
 Command description 133
- Inherent noise
 correction 68
- Input sample rate
 Digital IQ 50
- Input/Output menu 49, 105
- Invert Q 20
- IQ Capture Settings
 softkey 19
- K**
- key
 INPUT/OUTPUT 105
- Key
 INPUT/OUTPUT 49
- L**
- level
 display range 80, 81, 91, 92
 range 80, 81, 91, 92
- Level
 Reference 19, 41, 91
- Level Unit
 Digital I/Q Interface (remote control) 251
 Digital IQ 50
- limit
 ACLR measurement 65
- limit check
 ACLR measurement 64
- Lower Level Hysteresis
 Softkey 45
- Lower-case (commands) 134
- M**
- Magnitude Error vs Chip 38
- Max Hold trace mode 46, 113
- menu
 Frequency 86
 Span 89
 Sweep 102
- Menu
 Bandwidth 95
- Min Hold trace mode 47, 113
- N**
- Negative Peak detector 111
- New / Copy / Edit
 softkey 24
- noise
 correction 68
 source, external 50, 106
- O**
- offset
 frequency 19, 40, 89
 reference level 19, 42, 95
- Offset
 Trigger 21, 48
- Online help
 Working with 10
- Options
 FSV-B25 42, 93, 253
 RF Preamplifier (B22) 19, 42, 93
- Overwrite mode 46, 113
- P**
- Ph. Noise Auto Peak Search
 remote control 147
- Phase Error vs Chip 38
- polarity
 external trigger 21
 external trigger/gate 48
 trigger edge 21, 48
- Positive Peak detector 111
- power
 bandwidth percentage 78
- Power Classes
 SEM 75
- power measurement
 trace 66
- pre-trigger 21, 49
- Preamplifier (B22) 19, 42, 93
- R**
- R&S Digital I/Q Interface (B17) 51, 249
- R&S Support
 softkey 52
- reference
 value (channel power) 67
- reference level
 channel power 39
 offset 19, 42, 95
- Reference level 19, 41, 91
- Reference Level
 Digital IQ 51
- Resolution bandwidth 96
- Result Settings
 softkey 27
- RF Preamplifier (B22) 19, 42, 93
- RMS
 VBW 97, 112
- RMS detector 111
- RX Settings
 softkey 51
- S**
- Sample detector 111
- sample number 79
- Sample rate
 Digital I/Q Interface (remote control) 252
 Digital IQ 50

- scaling
 - level axis 95
 - x- and y-axis (signal statistic) 80
- SCPI
 - Conformity information 133
- scrambling code
 - K76/77 22
- Select Ch Slot
 - softkey 39
- sensitivity
 - APD measurement 83
 - CCDF measurement 83
- Settings Overview
 - softkey 17
- Signal Source
 - I/Q Analyzer 50
 - Remote control 254
 - Softkey 50
- softkey 66, 79, 85
 - 83
 - # of Adj Chan 60
 - # of Adj Chan (remote control) 202, 224
 - # of Samples 79
 - # of Samples (remote control) 179
 - # of TX Chan 60
 - # of TX Chan (remote control) 232
 - % Power Bandwidth 78
 - % Power Bandwidth (remote control) 232
 - = Center 88
 - = Marker 88
 - 0.1 * RBW 87
 - 0.1 * RBW (remote control) 221, 222
 - 0.1 * Span 87
 - 0.1 * Span (remote control) 221, 222
 - 0.1*Demod BW (K7) 87
 - 0.5 * RBW 88
 - 0.5 * RBW (remote control) 221, 222
 - 0.5 * Span 87
 - 0.5 * Span (remote control) 221, 222
 - 0.5*Demod BW (K7) 88
 - ACLR Abs/Rel 66
 - ACLR Abs/Rel (remote control) 228
 - ACLR Ref Setting (remote control) 230
 - ACLR Ref Spacing (remote control) 231
 - Adjust Ref Level 39
 - Adjust Ref Level (remote control) 230
 - Adjust Settings (remote control) 180, 229
 - APD (remote control) 180
 - ASCII File Export (remote control) 261
 - Auto (remote control) 240
 - Auto All 44
 - C/N (remote control) 143, 144
 - C/No (remote control) 143, 144
 - CCDF (remote control) 179, 180
 - CF Stepsize (remote control) 221
 - Chan Pwr/Hz 65
 - Chan Pwr/Hz (remote control) 144
 - Channel Bandwidth 78
 - Channel Bandwidth (remote control) 225
 - Channel Settings 60
 - Channel Spacing (remote control) 231, 232
 - Clear/Write 66
 - Cont Meas (remote control) 260
 - Continue Single Sweep (remote control) 259, 260
 - Continuous Sweep (remote control) 260
 - Coupling Ratio 99
 - CP, ACP, MC-ACLR (remote control) 143, 144
 - CP/ACLR Config 60
 - Default Coupling 101
 - Default Settings 82
 - Default Settings (remote control) 179, 182
 - Delete Range 73
 - Delete Range (remote control) 209
 - Deviation Lin/Log (remote control) 195
 - Edit ACLR Limit (remote control) 153, 154, 155, 156, 157, 158
 - Edit Power Classes 75
 - Edit Reference Range 73, 74
 - Edit Reference Range (remote control) 206, 216
 - EI Atten Mode (Auto/Man) 43, 94
 - Fast ACLR On/Off 67
 - Fast ACLR On/Off (remote control) 233
 - Filter Type 101
 - Filter Type (remote control) 218
 - Frequency Offset 19, 40, 89
 - Full Span (remote control) 223
 - Gate Delay (remote control) 235
 - Gate Length (remote control) 236
 - Gate Mode Lvl/Edge (remote control) 238
 - Gate Ranges 83
 - Gate Ranges (remote control) 236, 237, 238
 - Gated Trigger (On/Off) 83
 - Gated Trigger (remote control) 235, 236
 - Grid Abs/Rel 95
 - Grid Abs/Rel (remote control) 193
 - IF Output IF/Video (remote control) 262
 - Input 50 Ω/75 Ω (remote control) 254
 - Insert after Range 72
 - Insert after Range (remote control) 212
 - Insert before Range 72
 - Insert before Range (remote control) 212
 - Last Span 90
 - Limit Chk On/Off (remote control) 156, 159
 - Limits On/Off (remote control) 169
 - Link Mrk1 and Delta1 (remote control) 148
 - Load Standard 76
 - Manual 88
 - Manual (remote control) 221
 - Marker 1 (remote control) 151
 - Marker 1 to 4 (remote control) 152, 168, 169
 - Marker 2 (remote control) 151
 - Marker 3 (remote control) 151
 - Marker 4 (remote control) 151
 - Marker Norm/Delta (remote control) 151
 - Marker to Trace (remote control) 151
 - Max Hold 66
 - Meas Start/Stop 77
 - Meas Start/Stop (remote control) 260
 - Meas Time Auto 44, 204
 - Meas Time Manual 44, 204
 - Min (remote control) 150, 167
 - Next Min (remote control) 150, 166, 167
 - Next Peak (remote control) 148, 149, 150, 151, 165, 166, 167
 - Noise Correction 68
 - Noise Source 50, 106
 - Noise Src On/Off (remote control) 258
 - OBW (remote control) 144
 - Peak (remote control) 149, 166
 - Percent Marker 79
 - Percent Marker (remote control) 171
 - Ph Noise On/Off (remote control) 147
 - Ph Noise/Ref Fixed (remote control) 147
 - Power Mode 65

| | |
|--|--|
| Power Mode (remote control) | 142 |
| R&S Support | 52 |
| Range | 91 |
| Range Lin. Unit | 82, 93 |
| Range Lin. Unit (remote control) | 195 |
| Range Linear % | 81, 92 |
| Range Linear % (remote control) | 195 |
| Range Log (remote control) | 191, 195 |
| Range Log 1 dB | 81, 92 |
| Range Log 5 dB | 81, 92 |
| Range Log 10 dB | 81, 92 |
| Range Log 50 dB | 80, 91 |
| Range Log 100 dB | 80, 91 |
| Range Log Manual | 81, 92 |
| RBW/VBW Manual | 100 |
| RBW/VBW Noise [10] | 100 |
| RBW/VBW Pulse [1] | 100 |
| RBW/VBW Sine [1/3] | 100 |
| Recall (remote control) | 208 |
| Ref Level (remote control) | 181 |
| Ref Level Offset | 19, 42, 95 |
| Ref Level Offset (remote control) | 194 |
| Ref Level Position | 95 |
| Ref Level Position (remote control) | 194 |
| Ref Point Frequency (remote control) | 146 |
| Ref Point Level (remote control) | 146 |
| Ref Point Time (remote control) | 146 |
| Ref Value (remote control) | 194 |
| Ref Value Position (remote control) | 194 |
| Reference Position (remote control) | 194 |
| Res BW | 79 |
| Res BW (remote control) | 217 |
| Res BW Auto (remote control) | 217, 218 |
| Res BW Manual (remote control) | 217 |
| Restore Standard Files | 77 |
| Save As Standard | 77 |
| Save As Standard (remote control) | 208 |
| Save Evaluation List (remote control) | 261 |
| Scaling | 80 |
| Search Lim Off (remote control) | 169 |
| Search Limits (remote control) | 169 |
| Select 1 2 3 4 (remote control) | 168 |
| Select Trace | 66 |
| Select Trace (remote control) | 234 |
| Set CP Reference | 67 |
| Set Standard (remote control) | 208 |
| Settings | 44 |
| Single Meas (remote control) | 260 |
| Single Sweep (remote control) | 260 |
| Span Manual | 89 |
| Span Manual (remote control) | 223 |
| Span/RBW Auto [50] | 101 |
| Span/RBW Manual | 101 |
| Start | 88 |
| Start (remote control) | 223 |
| Start Frequency (remote control) | 223 |
| Stop | 89 |
| Stop (remote control) | 223 |
| Stop Frequency (remote control) | 223 |
| Sweep Count | 46, 105 |
| Sweep List (remote control) | 208, 209, 210, 211, 212, 213, 214, 215, 216 |
| Sweep Points | 105 |
| Sweep Points (remote control) | 239 |
| Sweep Time | 66 |
| Sweptime Auto (remote control) | 239 |
| Threshold (remote control) | 183 |
| Trace 1 2 3 4 5 6 (remote control) | 191 |
| Trace Mode (remote control) | 193 |
| Trg/Gate Polarity Pos/Neg | 48 |
| Trg/Gate Polarity Pos/Neg (remote control) | 236, 257 |
| Trg/Gate Source (remote control) | 236, 256 |
| Trigger Holdoff (remote control) | 256 |
| Trigger Out (Low/High)(remote control) | 262 |
| Trigger Polarity | 21 |
| Unit (remote control) | 183 |
| Use Zoom Limits (remote control) | 170 |
| Video BW Auto (remote control) | 219, 220 |
| Video BW Manual (remote control) | 219 |
| Video Output | 106 |
| Weight ADJ (On/Off) (remote control) | 227 |
| Weight TX (On/Off) (remote control) | 227 |
| Weighting Filter (remote control) | 226 |
| X * RBW | 88 |
| X * RBW (remote control) | 221, 222 |
| X * Span | 88 |
| X * Span (remote control) | 221, 222 |
| x-Axis Range | 80 |
| x-Axis Range (remote control) | 181 |
| x-Axis Ref Level | 80 |
| x-Axis Ref Level (remote control) | 181 |
| x*Demod BW (K7) | 88 |
| y-Axis Max Value | 82 |
| y-Axis Max Value (remote control) | 182 |
| y-Axis Min Value | 82 |
| y-Unit %/Abs | 82 |
| y-Unit %/Abs (remote control) | 182 |
| Zero Span (remote control) | 223 |
| Softkey | |
| AUTO | 99, 104 |
| Auto Freq | 44 |
| Auto Level | 44 |
| Average | 47, 113 |
| BB Power Retrigger Holdoff (remote control) | 255 |
| Blank | 114 |
| Center | 18, 40, 86 |
| Center (remote control) | 221 |
| CF Stepsize | 87 |
| Clear Write | 46, 113 |
| Close Sweep List | 72 |
| Cont Meas (remote control) | 260 |
| Continue Single Sweep | 45, 102 |
| Continuous Sweep | 45, 102 |
| Continuous Sweep (remote control) | 260 |
| Decim Sep (remote control) | 259 |
| Delete mask | 111 |
| DigiConf | 52 |
| EL Atten (remote control) | 253 |
| EL Atten Mode (Auto/Man) (remote control) | 253 |
| EI Atten On/Off | 43, 94 |
| EX-IQ-BOX | 51 |
| FFT | 99, 104 |
| FFT Filter Mode | 99, 104 |
| Frequency mask | 107 |
| Frequency Offset (remote control) | 222 |
| Frontend Settings | 18 |
| Full Span | 90 |
| IF Power Retrigger Holdoff (remote control) | 255 |
| IF Power Retrigger Hysteresis (remote control) | 256 |
| Input (AC/DC) | 43, 49, 95, 106 |
| Input (AC/DC)(remote control) | 249 |
| Load mask | 110 |
| Marker 1 to 4 (remote control) | 153, 170 |
| Marker to Trace (remote control) | 168 |

| | |
|---------------------------------------|-------------|
| Max Hold | 46, 113 |
| Mech Atten Auto | 42, 94 |
| Mech Atten Auto (remote control) | 248 |
| Mech Atten Manual | 42, 93 |
| Mech Atten Manual (remote control) | 248 |
| Min Hold | 47, 113 |
| New mask | 108 |
| Preamp On/Off | 19, 42, 93 |
| Preamp On/Off (remote control) | 254 |
| Ref Level | 19, 41, 91 |
| Ref Level (remote control) | 193 |
| Res BW Auto | 96 |
| Res BW Manual | 96 |
| RF Atten Auto | 42, 94 |
| RF Atten Auto (remote control) | 248 |
| RF Atten Manual | 42, 93 |
| RF Atten Manual (remote control) | 248 |
| Save (remote control) | 261 |
| Save mask | 110 |
| Select 1 2 3 4 (remote control) | 170 |
| Single Meas (remote control) | 260 |
| Single Sweep | 45, 102 |
| Single Sweep (remote control) | 260 |
| Sweep | 99, 104 |
| Sweep Count (remote control) | 234 |
| Sweep List | 69 |
| Sweep Time (remote control) | 239 |
| Sweep Type | 98, 103 |
| Sweeptime Auto | 98, 103 |
| Sweeptime Manual | 89, 97, 103 |
| Sweeptime Manual (remote control) | 239 |
| Trace Mode (remote control) | 190 |
| Trg/Gate Source (remote control) | 255, 257 |
| Trigger Offset | 21, 48 |
| Trigger Out | 106 |
| Video BW Auto | 97 |
| Video BW Manual | 97 |
| View | 47, 114 |
| Softkeys | |
| Lower Level Hysteresis | 45 |
| Upper Level Hysteresis | 45 |
| Span menu | 89 |
| Special characters | 134 |
| Spectrum Emission Mask | |
| Power Classes | 75 |
| start frequency | 88 |
| Step size | |
| Center frequency | 87 |
| stop frequency | 89 |
| supply voltage, external noise source | 50, 106 |
| sweep | |
| count | 46, 105 |
| Sweep | |
| Continue single sweep | 45, 102 |
| Continuous | 45, 102 |
| Single | 45, 102 |
| Time | 89, 97, 103 |
| sweep list | |
| Fast SEM (remote control) | 207 |
| Sweep List | |
| Symmetrical | 73 |
| Sweep menu | 102 |
| Sweep time | |
| Coupling | 98, 103 |
| Symbol Phase Error | 39 |
| Sync settings | |
| phase reference | 22, 23 |
| phase rotations | 23 |
| scrambling code | 22 |
| Sync Settings | |
| softkey | 22 |
| Sync To | |
| Sync Settings (K76) | 200 |
| Sync Settings (K77) | 201 |
| T | |
| trace | |
| power measurement | 66 |
| Trace | |
| Clear Write | 46, 113 |
| Trace mode | |
| Average | 47, 113 |
| Blank | 114 |
| Clear Write | 46, 113 |
| Max Hold | 46, 113 |
| Min Hold | 47, 113 |
| View | 47, 114 |
| TRACe<1..4>[:DATA] | 242 |
| trigger | |
| slope | 21, 48 |
| Trigger | |
| Offset | 21, 48 |
| Trigger Source External | |
| softkey | 21, 48 |
| Trigger Source Free Run | |
| softkey | 21, 48 |
| TX Settings | |
| EX-IQ-BOX | 51 |
| U | |
| Upper Level Hysteresis | |
| Softkey | 45 |
| Upper-case (commands) | 134 |
| V | |
| VBW | |
| RMS detector | 97, 112 |
| Video bandwidth | 97 |
| View trace mode | 47, 114 |
| W | |
| weighting filter | 63 |
| Z | |
| Zoom | |
| Amplitude | 47, 114 |