



ROHDE & SCHWARZ

Test and Measurement
Division

Release Notes

3G FDD UE

Application Firmware R&S FS-K73

Release 4.10

for R&S FSP, FSU, FSQ, FMU Analyzer Firmware 4.1x

New Features:

- Automatic determination of measurement interval for EVM (RMS) versus slot measurement according to 3GPP specification 34.121

Release Note Revision: 2

Printed in the Federal Republic of Germany

Contents

History	3
General Topics	4
Hardware Requirements	4
Compatibility of the R&S FS-K73 3G FDD UE Application Firmware.....	4
Firmware Update of the R&S FS-K73 3G FDD UE Application Firmware	5
Generation of the update disk set for R&S FS-K73 Application Firmware	5
Preparing installation via LAN or USB stick:.....	6
Performing the Application Firmware Update on the Instrument.....	6
Enabling the Application Firmware via License Key Code Entry.....	6
New Functions	8
Modified Functions	8
Problems Eliminated with 4.10	10
Modifications to the Operating Manual.....	10
Modified Chapters for manual operation	10
Code Domain Power Menu – Overview	11
Measurement Menu – Overview.....	12
Signal Power Check – SPECTRUM EM MASK	13
Configuration of CDP Measurement – SETTINGS hotkey.....	14
Settings for automatic determination of measurement interval for EVM_{RMS}	15
Root Mean Square Error Vector Magnitude (EVM_{RMS}) versus slot display	16
Error Vector Magnitude (EVM_{chip}) versus chip	18
Peak Code Domain Error Power versus slot.....	18
Vector error versus chip of chip error vector magnitude	19
Magnitude error versus chip of chip error vector magnitude	20
Phase error versus chip of chip error vector magnitude.....	21
Constellation diagram of composite signal at chip level.....	23
Result Summary display	23
Explanation of displayed IQ impairments	24
Menu MEAS – SPECTRUM EM MASK.....	27
Modified Chapters for remote operation.....	28
Control of root mean square average range of EVM_{rms} value.....	28
Query result of root mean square value of error vector magnitude with included measurement interval information.	29
Query result of root mean square average interval	30
Activating Error Vector Magnitude versus chip measurements.....	30
Query result of Error Vector Magnitude versus chip	31
Query result of scrambled chip data for composite constellation display.....	31
Enabling of automatic peak search in spectrum emission mask measurement.....	32
Query result of peak search list in spectrum emission mask measurement	32
Query result of result summary parameters	33
Query results of channel table	34

History

Date	Rel Note Rev	Changes
4. April 2007	1	First revision for R&S FS-K73 version 4.10
22 August 2007	2	Chapter <i>Modifications to the Operating Manual</i> corrected. The extensions of version 4.00 SP1 were erroneously removed.

General Topics

Hardware Requirements

Please note that R&S FS-K73 requires option R&S FSP-B15 in order to run on an R&S FSP.

If the required hardware option is not installed the unit will not accept the license key for the corresponding application firmware.

Additionally please note that FRAME based analysis with R&S FS-K73 on an R&S FSP is only possible if R&S FSP-B70 is installed; otherwise only SLOT based analysis will be available on the R&S FSP.

Compatibility of the R&S FS-K73 3G FDD UE Application Firmware

The following table shows the compatible versions of the basic analyzer firmware and the 3G FDD UE Application Firmware:

Table of compatible versions:

R&S FS-K73 Application Firmware	R&S FSP Basic Firmware	R&S FSU Basic Firmware	R&S FSQ Basic Firmware	R&S FSMR Basic Firmware	R&S FMU Basic Firmware
4.10	4.10	4.11	4.15	-	4.18
4.01	-	-	-	-	4.08
4.00	4.00	4.01	4.05	-	-
3.90	3.90	3.91	3.95	3.96	-
3.80	3.80	3.81	3.85	3.86	-
3.70	3.70	3.71	3.75	-	-
3.60 SP1	3.60	3.61	3.65	3.66 SP1	-
3.60	3.60	3.61	3.65	-	-
3.50	3.50	3.51	3.55	-	-
3.40	3.40	3.41	3.45	-	-
3.35	-	-	3.35	-	-
3.30	3.30	3.31	-	-	-
3.28	3.20	3.21	3.25	-	-
3.24	3.10	3.11	3.15	-	-
3.20	3.00	-	3.05	-	-
2.80	2.80	2.81	-	-	-
2.60	2.60	2.61	-	-	-
2.40	2.40	2.41	2.45	-	-
2.35	-	-	2.35	-	-
2.30	2.30	2.31	-	-	-
2.28	2.20	2.21	2.25	-	-
2.24	2.10	2.11	2.15	-	-
1.21	-	-	2.05	-	-
1.20	1.80	1.81	1.85	-	-

Application firmware versions 3.xx/4.xx running on FSPs with order # 1164.4391.xx or FSU with order # 1166.1660.xx are adequate to version 2.xx for FSPs with order # 1093.4495.xx or FSU with order # 1129.9003.xx. (Version 3.20 is adequate to 1.20)

On the FSQ application firmware versions 3.xx requires the Windows-XP upgrade kit FSQ-U2, order # 1162.9696.02.

Note:

Applications with version number 3.xx are only compatible with basic firmware 3.yy (see table above). Do not install them on basic firmware versions below 3.00!

Firmware Update of the R&S FS-K73 3G FDD UE Application Firmware

The R&S FS-K73 3G FDD UE Application Firmware package is available with its own version number. This application firmware package requires an appropriate basic instrument firmware version. Compatible revisions are shown in the table above.

Please make sure to have the correct basic firmware version installed prior to installing the R&S FS-K73 3G FDD UE Application Firmware. Please refer to the basic firmware version release notes for firmware update information of the basic firmware.

Note: *R&S FS-K72/74 and R&S FS-K73 are using the same update set. It is therefore required to only update one of these applications.*

Generation of the update disk set for R&S FS-K73 Application Firmware

If you already have the update disk set you can skip this paragraph.

The files needed for the R&S FS-K73 3G FDD UE Application Firmware update are grouped according to the disk contents:

Disk 1: disk1.bin (self-extracting ZIP file)

Disk 2: data3.cab (packed contents of disk 2, will be automatically unpacked by FW update)

The contents of disk 1 are packed in a self-extracting ZIP file and need to be unzipped. For this purpose the following steps are necessary:

1. Create a temporary directory on your local PC (e.g. MyTemp\Extensions\K73 on drive C:)
2. Copy disk1.bin into that directory and rename it to disk1.exe
3. Execute disk1.exe. Under Windows 95/98/NT this is done best using the following sequence:
 <CTRL><ESC> - RUN – C:\MyTemp\Extensions\K73\DISK1 - <ENTER> or
 <CTRL><ESC> - AUSFÜHREN – C:\MyTemp\Extensions\K73\DISK1 - <ENTER> for a German Windows version.

The files will be unzipped.

4. Delete disk1.exe from the temporary directory.

The temporary directory will now contain the following files:

data1.cab	data1.hdr	data2.cab	ExecCtrl.exe	id.txt	ikernel.ex_
ISSetup.exe	layout.bin	RestInst.exe	Setup.exe	Setup.ini	setup.inx

Please make sure that all filenames exactly match with these printed above before you try to use them for the firmware update. Especially the trailing underscore ('_') as used in ikernel.ex_ or _inst32i.ex_ is essential for correct operation of the update program.


5. Copy the contents of the temporary directory onto update disk #1.

The content of the other disk is already packed in the format required by the firmware update program and need no further processing. The files only need to be copied onto disks #2, the number in the filename (minus 1) indicating the corresponding disk number (data3.cab => disk #2).

Preparing installation via LAN or USB stick:

If the installation shall be done via LAN or USB stick (XP only) please set up the following directory structure:

Copy all files as mentioned in the previous section in the directory ..\MyTemp\Extensions\K73\Disk1.

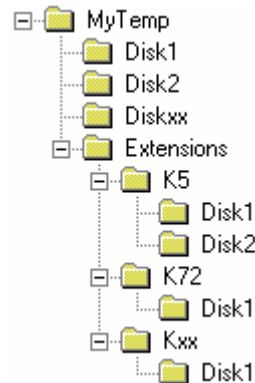

Performing the Application Firmware Update on the Instrument

The Application Firmware update process is performed in the following steps:

- Switch the instrument on and wait until the Analyzer has resumed operation.
- For updates from LAN or USB (XP only) use the SETUP | NEXT | FIRMWARE UPDATE | UPDATE PATH soft key to specify any path for the location of the Disk1 directory (e.g. F:\MyTemp\Extensions\K73). For floppy usage the default A:\ must not be changed
- Press SETUP → NEXT → FIRMWARE UPDATE
- Confirm the query "Do you really want to update the firmware?" with OK
- Insert update disk #1 (and #2 for version 3.xx) as requested (for LAN or USB just confirm the copy process)
- The instrument will perform several automatic shutdowns, until the new firmware is installed properly.
Do not switch the instrument off until the update process has been finished completely.

After switching on the instrument for the first time after a successful firmware update it is necessary to execute the instrument's self alignment process by pressing CAL and softkey CAL TOTAL.

Note: R&S FS-K72/74 and R&S FS-K73 are using the same update set. It is therefore required to only update one of these applications.

A simplified update process is available if base system firmware 4.1x or newer is installed. More details are described in the release note of the base system firmware.

Enabling the Application Firmware via License Key Code Entry

This section can be skipped if the option key was entered once.

After installing the application firmware package a license key for validation must be entered. The license key is printed either on a label on the rear panel of the instrument or delivered as a part of the R&S FS-K73 3G FDD UE application firmware package.

The key sequence for entering the license key is:

SETUP - GENERAL SETUP – OPTIONS - INSTALL OPTION

Use the numeric keypad to input the license key number and press ENTER.

- On a successful validation the message 'option key valid' will appear.
- If the validation failed, the application firmware is not installed.
The most probable reason will be that the instrument is not equipped with the correct basic firmware version. Therefore a message box will appear asking for installation of the correct basic firmware version.
If the application firmware package was not installed prior to entering the license key code, a message will appear asking for installation of the application firmware package.
In any case please make sure that the correct basic firmware version and the application firmware package is installed prior to entering the license key code.

New Functions

- **Automatic determination of measurement interval for EVM (RMS) versus slot measurement according to 3GPP specification 34.121**

According to new specification of 3GPP TS 25.101 version V7.4.0 from June 2006 chapter 6.8.2 "Error Vector Magnitude" and 3GPP TS 34.121 version V7.1.0 chapter 5.13.1A "Error Vector Magnitude (EVM) with HS-DPCCH", the average interval for root mean square calculation of the error vector magnitude (EVM_{rms}) is not fixed to a full slot length.

The 3GPP specification defines the EVM average interval as follows:

For signals containing more than one spreading code where the slot alignment of the codes is not the same and the code power is varying, the period over which the nominal mean power remains constant can be less than one timeslot. For such time-varying signals it is not possible to define EVM across one timeslot since this interval contains an expected change in mean power, and the exact timing and trajectory of the power change is not defined. For these signals, the EVM minimum requirements apply only for intervals of at least one half timeslot (less any 25 μ s transient periods) during which the nominal code power of each individual code is constant.

Within this version this requirement is supported. The average length inside the slot depends on active channels with a varying code power coming up from zero power (code channel switched ON), or falling down to zero power (code channel switched OFF). The timing offset of these channels determines the begin and end of the average interval for root mean square calculation. According to 3GPP specification, the HS-DPCCH (**H**igh **S**peed **D**edicated **P**hysical **C**ontrol **C**hannel) and the E-DPCCH (**E**nhanced **D**edicated **P**hysical **C**ontrol **C**hannel) can be switched at times unaligned to DPDCH (**D**edicated **P**hysical **C**ontrol **C**hannel) slot timing. Furthermore, an additional interval of 25 μ s can be subtracted from the beginning and the end of the average interval to provide an unevaluated transition period of 25 μ s. For a new Softkey and IEC-bus configuration refer to the following chapters.

Modified Functions

The version numbers in brackets indicate the version in which the function was modified.

1. [V1.12] **New result display type Power vs. Symbol**
2. [V3.24/V2.24] **Code Domain Error Power measurement is now available**
3. [V3.24/V2.24] **Improved Resolution of Trigger to Frame measurement**
4. [V3.24/V2.24] **Improved absolute accuracy of Trigger to Frame measurement**
5. [V3.24/V2.24] **Trace statistic available on result summary parameters (MIN Hold, MAX Hold, Averaging)**
6. [V3.28/V2.28] **Unit circle display in constellation diagrams**
7. [V3.28] **Option FS-K9 power sensor support for RF measurements**
8. [V3.30/V2.30] **Multi-Frame Measurement supported**
9. [V3.30/V2.30] **Read out of spectrum emission mask worst fail position**
10. [V3.35/V2.35] **Detecting of incorrect pilot symbols of the DPCCH**
11. [V3.40/V2.40] **Detection of HS-DPCCH in HSDPA signal (TM5)**
12. [V3.40/V2.40] **Remote readout of frame bit-stream available**
13. [V3.50/V2.60] **Full Support of Uplink HSDPA signals (TM5)**
14. [V3.50/V2.60] **Eliminate 25us of each slot for EVM calculation:**

According to 3GPP specification Release 5 the measurement interval for error vector magnitude (EVM) is one slot (4096 chips) less 25 μ s at each end of the burst (3904 chips). This requirement depends on the expected power changes of the channel. The consideration of eliminating the tail of a slot can be switched ON or OFF.

15. [V3.50/V2.60] Absolute and relative slot power display for Power vs Slot

16. [V3.50/V2.60] Disable/Enable root raised cosine (RRC) receiver filter

17. [V3.50/V2.60] Extended trigger range:

In external trigger mode, the trigger event is expected in a time range of a half slot (333us) before and a half slot (-333us) after the start of the frame

18. [V3.60/V2.60] Display of frequency error versus slot, phase discontinuity versus slot, symbol magnitude error, symbol phase error

22. [V3.60/V2.60] Result Summary: added value RHO and timing offset

23. [V3.60/V2.60] Scrambling code input in hexadecimal and in decimal format

24. [V3.60/V2.60] HSDPA mode channel detection can be switched ON or OFF

25. [V3.60/V2.60] SEM: Adjustable transition frequency (30 kHz/1 MHz RBW)

26. [V3.60/V2.60] External trigger level adjustable from 0.5 to 3.5

27. [V3.60/V2.60] Carrier frequency step size softkey available

28. [V3.70] Remote command to read out total power versus slot

29. [V3.70] ACP/MCACP: number of adjacent channels increased to 12

30. [V3.70] ACP/MCACP: power mode to max hold the power results

31. [V3.80/V2.80] Support of enhanced channels (HSUPA)

32. [V3.80/V2.80] Trace view available within code domain analyzer

33. [V4.00] Vector error of Error Vector Magnitude (EVM) versus chip, Magnitude error of Error Vector Magnitude (EVM) versus chip, Phase error of Error Vector Magnitude (EVM) versus chip, Composite constellation diagram of scrambled chip buffer available

33. [V4.00] Spectrum emission mask: List evaluation in lower screen now supported

34. [V4.00SP1] Error Vector Magnitude (EVM) versus chip for composite signal

In the vector error, magnitude error and phase error display the averaging interval for RMS values is shown.

34. [V4.10] New remote command CALC:MARK:FUNC:WCDP:RES? MTYPE | AChannels.

Problems Eliminated with 4.10

The version numbers in brackets indicate the version in which the problem was observed for the first time.

1. [V3.80/ V2.80] Code domain error power display corrected.

According to 3GPP specification the code domain error (CDE) measurement displays the chip error of the signal spread to the channels spreading factor 256. In previous versions the spreading factor of the CDE measurement has been varied by adjusting the spreading factor of the Peak Code Domain Error Power (PCDEP) measurement. According to 3GPP the spreading factor of CDE is fixed to 256 and only the spreading factor of PCDEP may be varied. The unwanted dependency of CDE spreading factor on PCDEP spreading factor has been eliminated within this version.

2. [V4.00] Frame synchronisation adapted to new specifications.

Due to extended specification changes within 3GPP the frame synchronisation of K73 had to be adapted. Some of the new signals are now specified, e.g. signals with channels of high data rates, caused a loss of synchronisation when influenced by an IQ offset or IQ imbalance. The new synchronisation algorithm takes care of the conditions rising by analyzing those signals.

3. [V4.00] Wrong modulation type returned by command TRACE:DATA? CWCDP.

4. [V4.00] Wrong modulation type indicated in the result summary table for channels DPCCH and DPDCH.

Modifications to the Operating Manual

The R&S FS-K73 3G FDD UE analyzer functions are included in a separate manual set. Please refer to the following order numbers:

- 1154.7275.44-03 (German and English)

Modified Chapters for manual operation

Measurement Menu – Overview

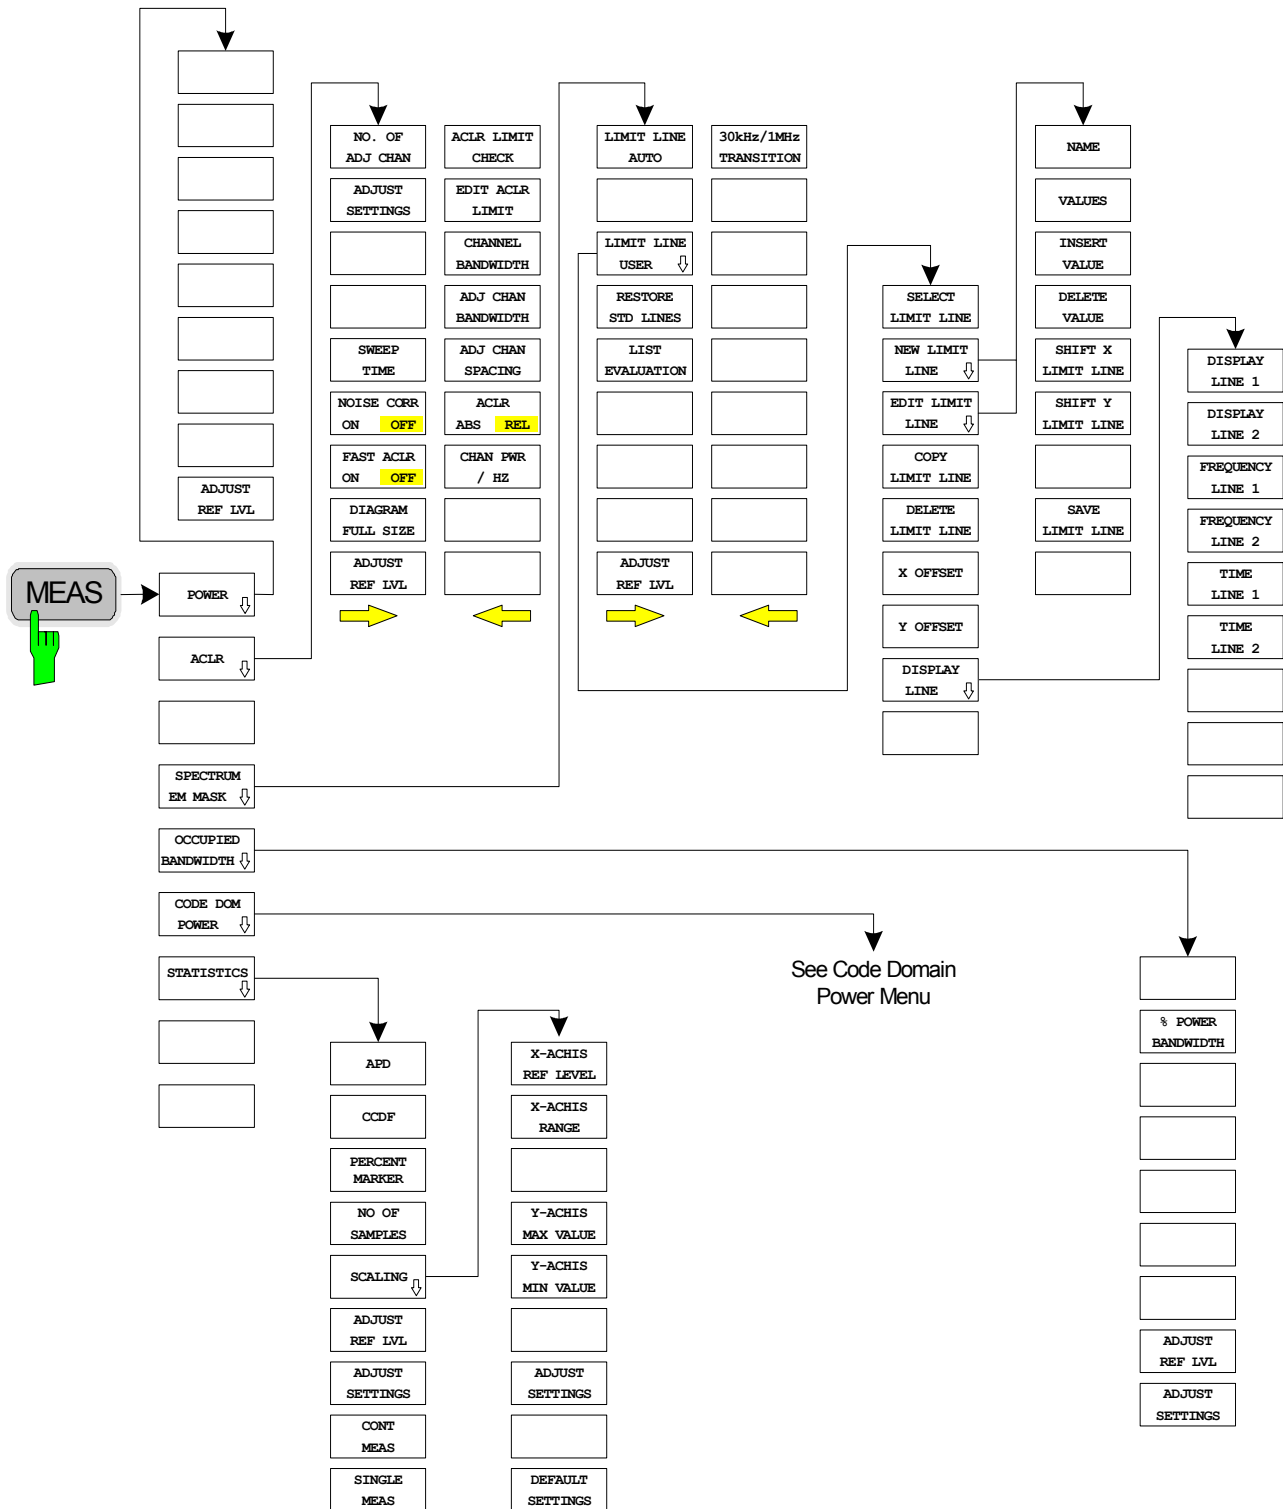


Figure 2: Overview of menus - measurements

Signal Power Check – SPECTRUM EM MASK

MEAS key

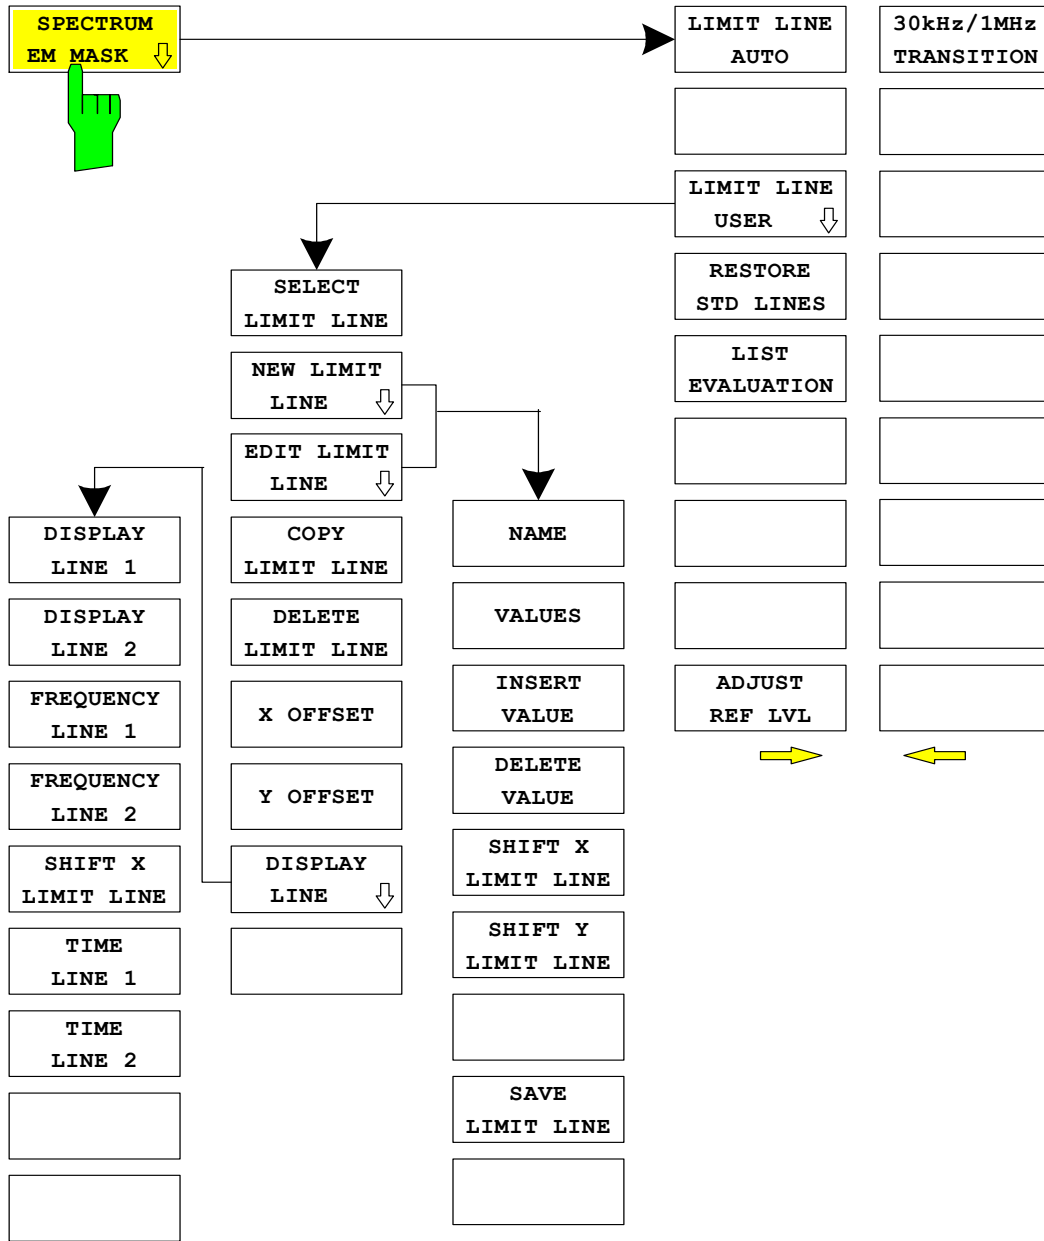


Figure 3: Spectrum emission mask measurement menu

The *SPECTRUM EM MASK* softkey starts the determination of the power of the 3GPP FDD signal in defined offsets from the carrier and compares the power values with a spectral mask specified by 3GPP.

IEC/IEEE bus command: :CONF:WCDP:MEAS ESP

Query of results: :CALC:LIMit:FAIL? and visual evaluation

Configuration of CDP Measurement – SETTINGS hotkey

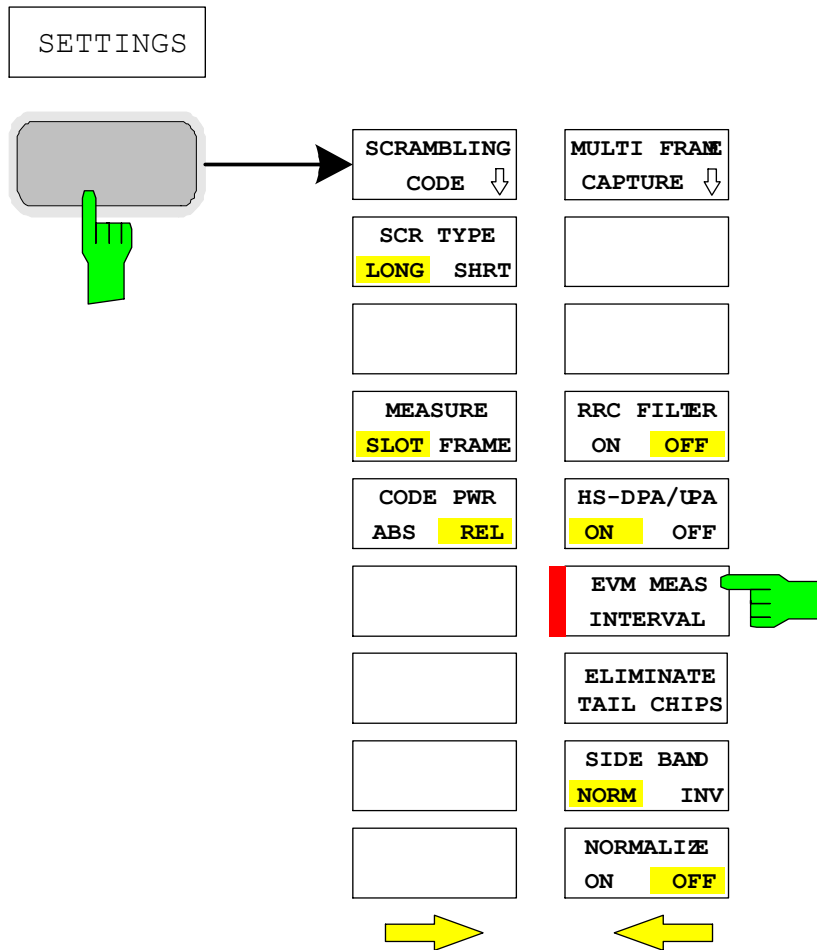


Figure 4: Settings menu of code domain analyzer

Settings for automatic determination of measurement interval for EVM_{RMS}

EVM MEAS
INTERVAL



The softkey *EVM MEAS INTERVAL* sets the mode of determining the average interval of the root mean square (RMS) calculation for error vector magnitude (EVM_{rms}) versus slot. The softkey influences the display of *COMPOSITE EVM (RMS)*

According to 3GPP TS 34.121 version V7.1.0 chapter 5.13.1A “Error Vector Magnitude (EVM) with HS-DPCCH”, the average interval for root mean square calculation of EVM_{rms} is not fixed to a full slot length. For signals containing power controlled channels that are not aligned to DPCCH slot timing, the interval is reduced to the period of constant power of each individual channel

By the means of the softkey the user is able to decide the way unaligned power controlled channels should influence the average interval:

CHIP 0 TO 2559:

The measurement interval of EVM_{rms} is set to a complete slot.

INT OF CONST POW:

The measurement interval of EVM_{rms} is determined by the measurement software. If the signal contains channels with a slot timing not aligned to DPCCH slot timing the measurement interval is reduced to the period during which the power of each individual code remains constant. No channel should change its power within this interval. The length of the measurement interval should be at least one half slot. The determination of measurement interval is done for each slot individually for the period of constant power can change according to channels being switched off for some slots.

CHIP 0 TO 1279:

If the channel configuration is that way that the interval of constant power is exactly one half slot the user should be able to determine which half of the slot he likes to be used. *CHIP 0 To 1279* sets the measurement interval of EVM_{rms} to the first half of the slot.

CHIP 1280 TO 2559:

The measurement interval of EVM_{rms} is set to the second half of the slot.

The measurement interval is also influenced by the softkey *ELIMINATE TAIL CHIPS* for details please refer to the related description.

IEC/IEEE bus command: `SENS1:CDP:EINT SLOT | MEAS | FHAL | SHAL`

Default Setting: `SLOT`

ELIMINATE
TAIL CHIPS




By the means of the *ELIMINATE TAIL CHIPS* the user is able to influence the measurement interval for calculation of error vector magnitude (EVM). In accordance with 3GPP specification, the EVM measurement interval is reduced by 25 μ s at each end of the period of constant power of each individual code if power changes are expected. If no power changes are expected, the evaluation length is one slot. *ELIMINATE TAIL CHIPS* always reduces the measurement interval – whatever it is like – by 25 μ s at both ends. However, the resulting measurement interval after reduction should be at least one half slot according to 3GPP. The measurement interval of error vector magnitude is determined by means of the softkey *EVM MEAS INTERVAL*. Please refer to that softkey for detailed description.

ON: Changes of power are expected. Therefore the EVM measurement interval is reduced by 25 μ s at each end.

OFF: Changes of power are not expected. No reduction is done. (Default setting)

IEC/IEEE bus command: `:SENS:CDP:ETCH ON|OFF`

Root Mean Square Error Vector Magnitude (EVM_{RMS}) versus slot display

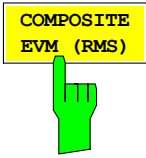

The COMPOSITE EVM (RMS) softkey selects the root mean square composite EVM (modulation accuracy) display model according to the 3GPP specification. During the composite EVM measurement, the square root of the mean squared errors between the real and imaginary components of the received signal and an ideal reference signal (EVM referenced to the total signal) is determined. Thus, composite EVM is a measurement of the composite signal.

$$EVM_{RMS} = \sqrt{\frac{\sum_{n=N_{begin}}^{N_{end}} |s_n - x_n|^2}{\sum_{n=N_{begin}}^{N_{end}} |x_n|^2}} \cdot 100\% \quad \left| \begin{array}{l} N_{begin} \rightarrow \text{depends on SETTINGS} \\ N_{end} \rightarrow \text{depends on SETTINGS} \end{array} \right.$$

- where:
- EVM_{RMS} - root mean square of the vector error of the composite signal
 - s_n - complex chip value of received signal
 - x_n - complex chip value of reference signal
 - n - index number for mean power calculation of received and reference signal.
 - N_{begin} - Chip index of the beginning of the measurement interval related to slot start.
Possible range: [0 ... 1280]
 - N_{end} - Chip index of the end of the measurement interval related to slot start.
Possible range: [0 ... 2559]

The size of the measurement interval (N_{interval}) depends on the measurement settings and the channel configuration of the applied signal.

$$N_{interval} = N_{end} - N_{begin} + 1 \quad \left| \begin{array}{l} N_{begin} \rightarrow \text{depends on SETTINGS} \\ N_{end} \rightarrow \text{depends on SETTINGS} \end{array} \right.$$

Possible interval ranges:

$$\begin{array}{l} 0 \quad \text{chips} \leq N_{begin} \leq 1280 \text{ chips} \quad | \quad \text{if } N_{end} = 2559 \\ 1280 \text{ chips} \leq N_{end} \leq 2559 \text{ chips} \quad | \quad \text{if } N_{begin} = 0 \end{array}$$

$$1280 \text{ chips} \leq N_{interval} \leq 2560 \text{ chips}$$

The default value of measurement interval is 2560 chips, which corresponds to a full slot. The Interval can be reduced by 25µs to consider power transients of the DUT (refer to *ELIMINATE TAIL CHIPS*). In case of switched or large power controlled code channels with timing offset related to DPCCH, the measurement interval is determined by using that slot part of stable channel power (refer to *EVM MEAS INTERVAL*). The smallest possible size of measurement interval is a half slot, which corresponds to 1280 chips. If the 25µs transient elimination is activated, the measurement interval is further decreased by 96 chips (25µs → 96 chips). The determined measurement interval [N_{begin}:N_{end}] of each slot are displayed right of the second line of marker display. (Figure 5)


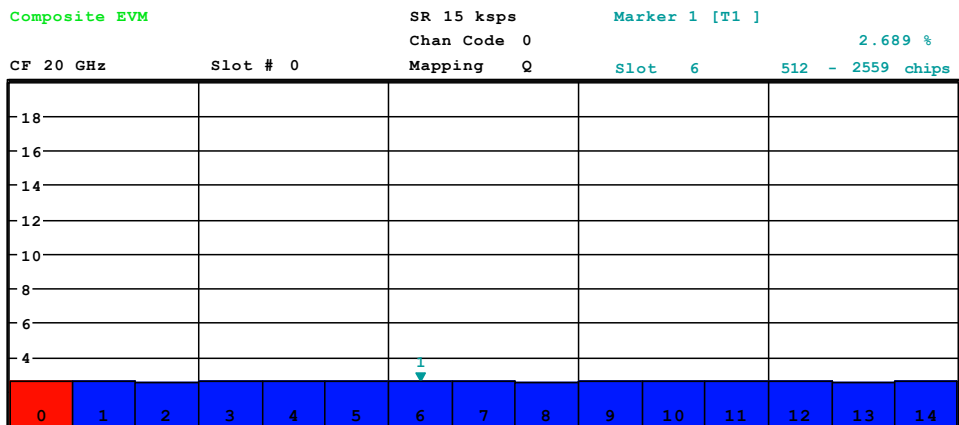


Figure 5: Display of composite EVM

The measurement result consists of one composite EVM measurement value per slot. The time reference for the start of slot 0 is the start of the 3GPP FDD frame. Within the slot not all chips are considered for root mean square calculation. The measurement interval depends on the channel configuration of the applied signal and the measurement Settings. The determined measurement interval $[N_{begin}; N_{end}]$ of each slot are displayed right of the second line of marker display. (Figure 5)

Only the channels recognized as active are used to generate the ideal reference signal. If an assigned channel is not recognized, the difference between the measurement and reference signal and the composite EVM is very high.

Error Vector Magnitude (EVM_{chip}) versus chip

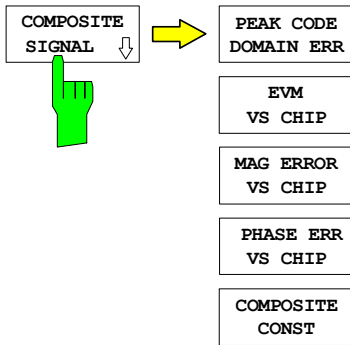

The *COMPOSITE SIGNAL* softkey opens a submenu for evaluation displays of the composite WCDMA signal versus time. Different measurements are supported:

PEAK CODE DOMAIN ERR:

Peak Code Domain Error

Projection of the error between the received signal and the ideal reference signal onto the spreading factor of code class 8 and subsequent averaging using the symbols of each slot of the difference signal. The maximum value of all codes is displayed versus the CPICH slot number [screen B].

EVM VS CHIP:

Error Vector Magnitude versus chip

Square root of square difference between received signal and reference signal at chip level, displayed for each chip.

MAG ERROR VS CHIP:

Magnitude Error versus chip

Difference between the amplitude of the received signal and the reference signal at chip level, displayed for each chip.

PHASE ERROR VS CHIP:

Phase Error versus chip


Phase difference between the received signal vector and the reference signal vector at chip level, displayed for each chip.

COMPOSITE CONST

Composite Constellation diagram

Constellation diagram of received signal (scrambled chips) [screen B].

Peak Code Domain Error Power versus slot

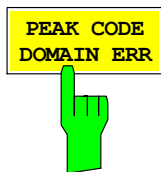


The *PEAK CODE DOMAIN ERR* softkey selects the peak code domain error display mode. In line with the 3GPP specifications, the error between the measurement signal and the ideal reference signal is projected onto the various spreading factors. The result consists of one numerical value per slot for the peak code domain error value. The measurement interval is the slot spacing of the CPICH (timing offset of 0 chips referenced to the beginning of the frame).

IEC/IEEE bus command: :CALC2:FEED "XTIM:CDP:ERR:PCD

Query of result: :TRAC2:DATA? TRAC2

Vector error versus chip of chip error vector magnitude

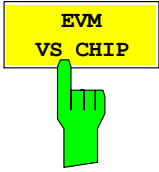

The EVM VS CHIP softkey activates the Error Vector Magnitude (EVM) versus chip display. The EVM is displayed for all chips of the selected slot. The selected slot can be varied by the SELECT CPICH SLOT softkey. The EVM is calculated by the root of the square difference of received signal and reference signal. The reference signal is estimated from the channel configuration of all active channels. The EVM is related to the square root of the mean power of reference signal and given in percent.

$$EVM_k = \sqrt{\frac{|s_k - x_k|^2}{\frac{1}{N} \sum_{n=0}^{N-1} |x_n|^2}} \cdot 100\% \quad | \quad N = 2560 \quad | \quad k \in [0 \dots (N-1)]$$

- where: EVM_k - vector error of the chip EVM of chip number k
- s_k - complex chip value of received signal
- x_k - complex chip value of reference signal
- k - index number of the evaluated chip
- n - index number for mean power calculation of reference signal.
- N - number of chips at each CPICH slot

The value are displayed as trace in screen B (Figure 6) and can be read by IEC bus command.

IEC/IEEE bus command: :CALCulate1:FEED
'XTIME:CDPower:CHIP:EVM'

Query of result: :TRACe1:DATA? TRACe2

UNIT: [%]

Range: [0% ... 100%]


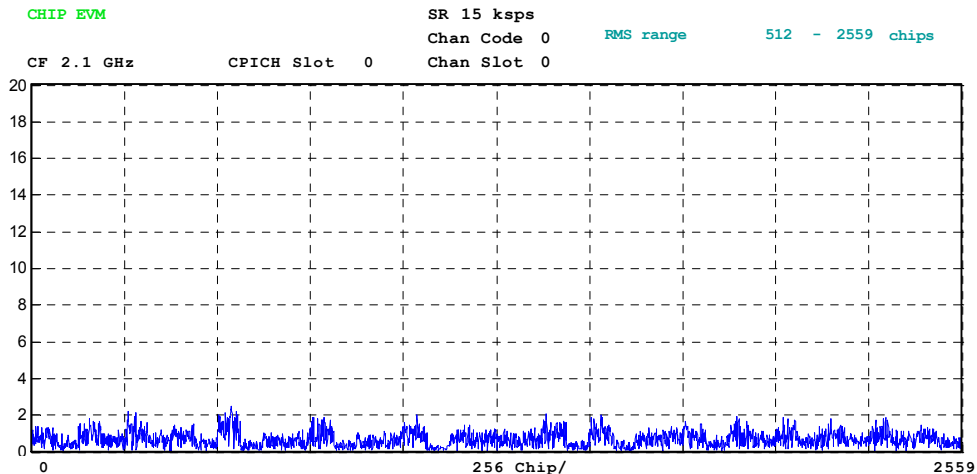


Figure 6: Display of vector error of the EVM versus chip measurement

Magnitude error versus chip of chip error vector magnitude

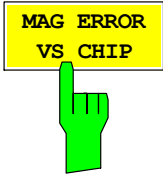

The MAG ERROR VS CHIP softkey activates the Magnitude Error versus chip display. The magnitude error is displayed for all chips of the selected slot. The selected slot can be varied by the SELECT CPICH SLOT softkey. The magnitude error is calculated by the difference of the magnitude of received signal and magnitude of reference signal (Figure). The reference signal is estimated from the channel configuration of .all active channels. The magnitude error is related to the square root of the mean power of reference signal and given in percent.

$$MAG_k = \frac{|s_k| - |x_k|}{\sqrt{\frac{1}{N} \sum_{n=0}^{N-1} |x_n|^2}} \cdot 100\% \quad | \quad N = 2560 \quad | \quad k \in [0 \dots (N-1)]$$

- where: MAG_k - magnitude error of chip number k
- s_k - complex chip value of received signal
- x_k - complex chip value of reference signal
- k - index number of the evaluated chip
- n - index number for mean power calculation of reference signal
- N - number of chips at each CPICH slot

The value are displayed as trace in screen B (Figure 7) and can be read by IEC bus command.

```
IEC/IEEE bus command: :CALCulate1:FEED
                        'XTIME:CDPower:CHIP:MAGNitude'

Query of result:       :TRACe1:DATA? TRACe2

UNIT:                  [%]

Range:                 [-100% ... 100%]
```


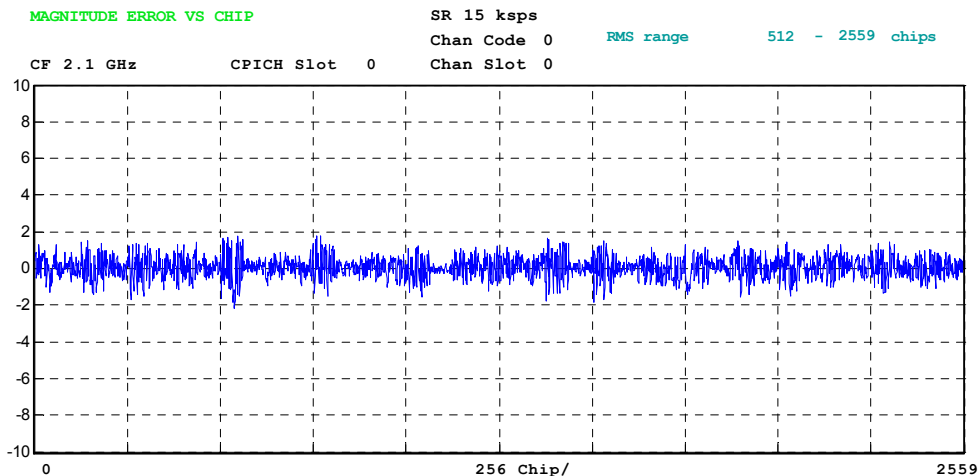


Figure 7: Display of magnitude error versus chip measurement

Phase error versus chip of chip error vector magnitude

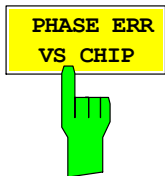

The PHASE ERROR VS CHIP softkey activates the Phase Error versus chip display. The phase error is displayed for all chips of the selected slot. The selected slot can be varied by the SELECT CPICH SLOT softkey. The phase error is calculated by the difference of the phase of received signal and phase of reference signal (Figure 8). The reference signal is estimated from the channel configuration of .all active channels. The phase error is given in grad in a range of +/- 180°.

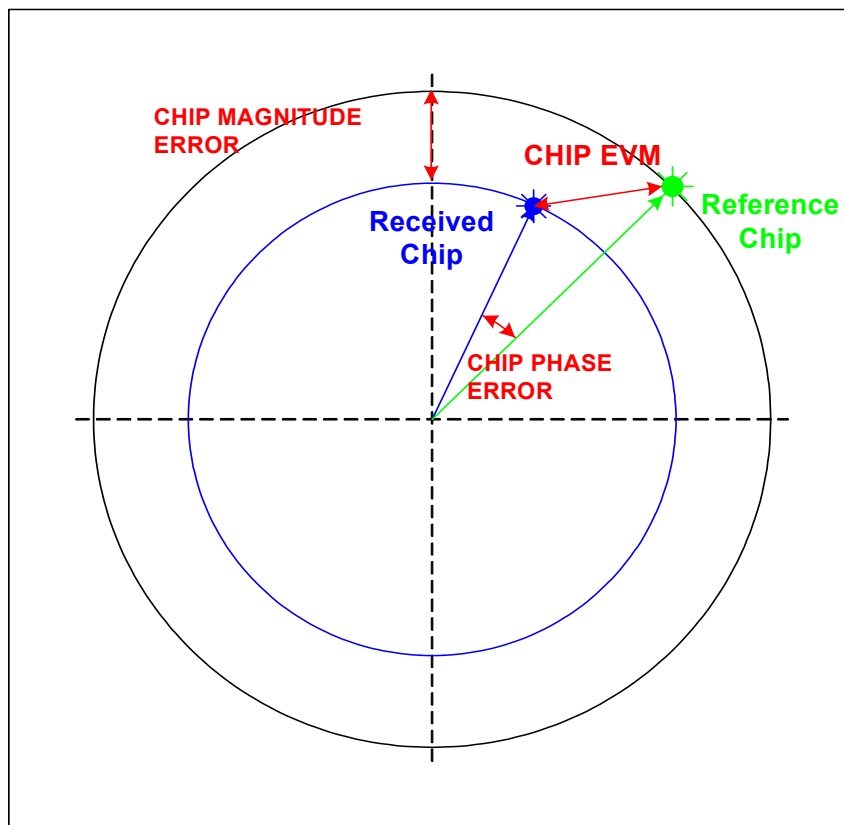


Figure 8: Schematic of reference signal chip and received signal chip to calculate the magnitude, phase and vector error.

$$PHI_k = \varphi(s_k) - \varphi(x_k) \quad | \quad N = 2560 \quad | \quad k \in [0 \dots (N-1)]$$

- where: PHI_k - phase error of chip number k
- s_k - complex chip value of received signal
- x_k - complex chip value of reference signal
- k - index number of the evaluated chip
- N - number of chips at each CPICH slot
- $\varphi(x)$ - phase calculation of a complex value

The value are displayed in screen B (Figure 9) and can be read by IEC bus command.

IEC/IEEE bus command: :CALCulate1:FEED :CALCulate1:FEED
'XTIME:CDPower:CHIP:PHASE'

Query of result: :TRACe1:DATA? TRACe2

UNIT: [°]

Range: [-180° ... 180°]


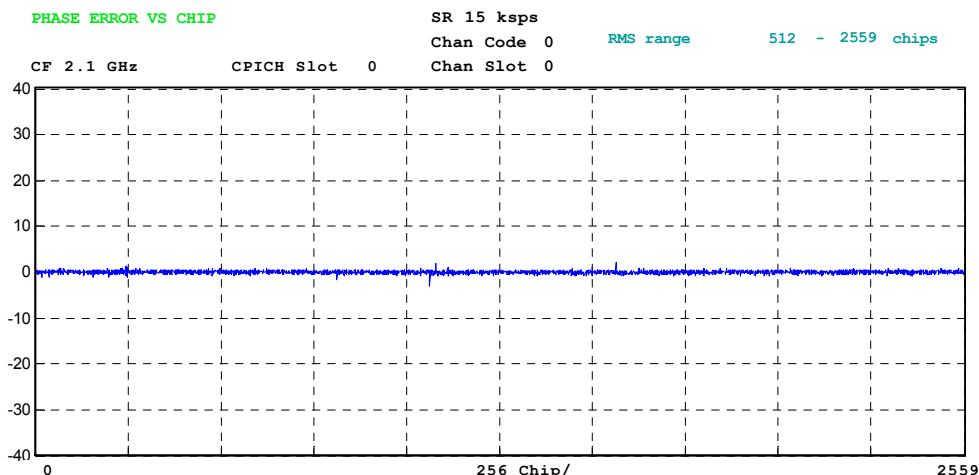


Figure 9: Display of phase error versus chip

Constellation diagram of composite signal at chip level

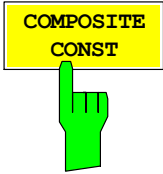

Display of constellation diagram for the chips of all channels. The displayed constellation points are normalized with the square root of the total power (Figure 10).

EC/IEEE bus command: :CALC1:FEED "XTIM:CDP:COMP:CONS"

Query of result: :TRAC<1>:DATA? TRAC2

Output: List of I/Q values of all chips per slot

Format: $Re_1, Im_1, Re_2, Im_2, \dots, Re_{2560}, Im_{2560}$

Unit: [1]

Quantity: 2560

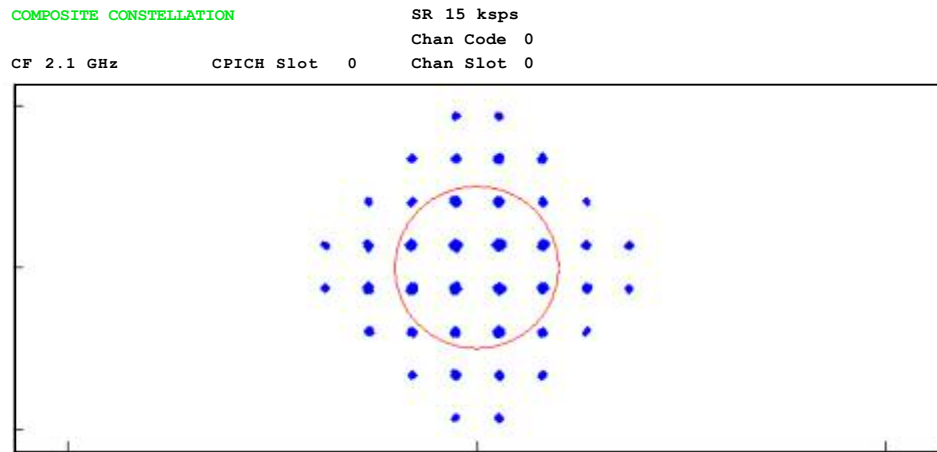


Figure 10: Composite Constellation diagram of received signal (scrambled chips)

Result Summary display



The *RESULT SUMMARY* softkey selects the numerical display of all results. The display is subdivided as follows:

Result Summary		SR 15 ksps
CF 20 GHz Slot # 0		Chan Code 0
		Mapping Q
GLOBAL RESULTS FOR FRAME 0:		
Total Power	-0.06 dBm	Slot No 0
Chip Rate Error	0.24 ppm	Carrier Freq Error -58.06 Hz
IQ Offset	1.03 %	Trigger to Frame 640.017549 μs
Composite EVM	2.68 %	IQ Imbalance 0.13 %
RMS range	512 - 2559 chips	Pk CDE (480 ksps) -42.71 dB
		No of Active Chan 7
CHANNEL RESULTS		
Symbol Rate	15.00 ksps	RHO 0.99928
Channel Code	0	Timing Offset 0 Chips
No of Pilot Bits	8	Channel Mapping Q
Channel Power Rel	-8.46 dB	Modulation Type BPSK-Q
Symbol EVM	0.38 % rms	Channel Power Abs -8.52 dBm
		Symbol EVM 0.61 % Pk

Figure 5: Display of Result Summary

The upper part contains the results relating to the total signal:

Composite EVM: The composite EVM is the difference between the test signal and the ideal reference signal (see *COMPOSITE EVM* softkey). The composite EVM value for the selected slot is given in the *RESULT SUMMARY*. The measurement interval inside the selected slot is within the chips of the displayed "RMS range". It is determined by the value of the SETTING softkeys "*EVM INTERV SLOT / MEAS*" and "*ELIMINATE TAIL CHIPS*". (Please refer to the description of the mentioned softkeys)

RMS range: The RMS range gives the measurement interval of root mean square averaged error vector magnitude inside the selected slot. It is determined by the value of the SETTING softkeys "*EVM INTERV SLOT / MEAS*" and "*ELIMINATE TAIL CHIPS*". (Please refer to the description of the mentioned softkeys)

Modulation type: This parameter shows the modulation type of the selected channel. Possible values are:

- BPSK -I: The selected channel has BPSK modulation and is mapped to branch I
- BPSK -Q: The selected channel has BPSK modulation and is mapped to branch Q
- NONE: This value occurs if the selected channel is switched off and therefore no modulation type could be detected.

Explanation of displayed IQ impairments

Explanation of IQ impairment model

In RF devices including analog mixers such as up-converters, the analog complex baseband signal ($r(t)=r_I(t)+j*r_Q(t)$) is shifted to a real high frequency signal ($s_{HF}(t)$). Each non-ideal complex mixer adds IQ impairments to the baseband signal. Two of them, the IQ offset and the IQ imbalance are estimated by the R&S FS-K72. Both values are given in the Result Summary display. The equations to explain these impairment parameters are described in the following paragraph. The estimation and display of IQ offset and IQ imbalance do NOT depend on the status of the NORMALIZE ON/OFF key. The key only controls an algorithm which compensates the IQ offset to normalize the constellation diagram to the origin.

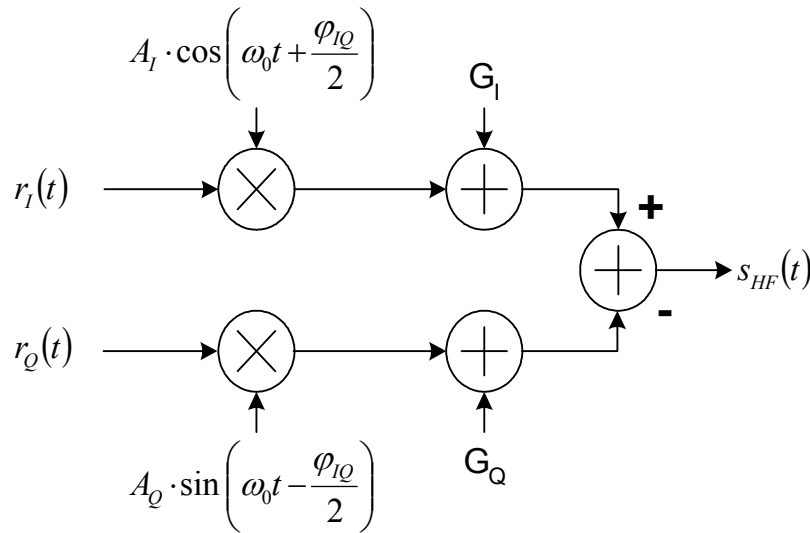


Fig. 0-1 Basic model of possible IQ impairment parameters in complex up-converters.

IQ-Offset

The IQ offset is given in the Result Summary display. It represents a complex offset which leads to a shifted composite constellation diagram. The value is given relative to the mean power of the signal. It is calculated as follows:

$$offset_{IQ} = |g| \cdot 100\% = \sqrt{|g_I + j \cdot g_Q|^2} \cdot 100\% = \sqrt{\frac{G_I^2 + G_Q^2}{\frac{1}{T} \int_0^T |r(t)|^2 dt}} \cdot 100\%$$

- where: |g| - magnitude of the relative IQ offset
- g_I - relative IQ offset of the real part
- g_Q - relative IQ offset of the imaginary part
- G_I - absolute IQ offset of the real part
- G_Q - absolute IQ offset of the imaginary part
- r(t) - complex baseband signal
(reference signal matching with optimum EVM assuming that AWGN is given)
- T - evaluation time (T=666 μs → 1 slot)
- offset_{IQ} - IQ offset parameter

IQ-Imbalance

The IQ imbalance is given in the Result Summary display. It represents a complex gain error between the mixer gain in the I path and the mixer gain in the Q path. We assume that a baseband signal r(t) is multiplied by a complex analog oscillator with radian frequency ω₀=2π * f₀. The complex signal r(t) can be split into a real part {r_I(t)} and an imaginary part {r_Q(t)}. Using this assumption, an ideal complex local oscillator (LO_{ideal}) can also be described by two real sinusoidal signals with a phase offset of 90°. These signals are described as cos(ω₀ t) and sin(ω₀ t).

$$LO_{ideal} = A \cdot \exp(j\omega_0 t) = A \cdot \cos(\omega_0 t) + j \cdot A \cdot \sin(\omega_0 t)$$

The local oscillator is not ideal in an analog mixer. Normally, there are two different amplitude values (A_I and A_Q) in each path. Moreover, an unwanted phase shift (φ_{IQ}) between the real part and the imaginary part of the local oscillator ($LO_{impairment}$) may occur. Considering these impairments, a non-ideal LO can be described as follows:

$$LO_{impairment} = A_I \cdot \cos\left(\omega_0 t + \frac{\varphi_{IQ}}{2}\right) + j \cdot A_Q \cdot \sin\left(\omega_0 t - \frac{\varphi_{IQ}}{2}\right)$$

The IQ imbalance expresses the relative gain error of the mixer. It is calculated as follows:

$$imbalance_{IQ} = \sqrt{\frac{\left|A_I \cdot \exp\left(j \frac{\varphi_{IQ}}{2}\right) - A_Q \cdot \exp\left(-j \frac{\varphi_{IQ}}{2}\right)\right|^2}{\left|A_I \cdot \exp\left(j \frac{\varphi_{IQ}}{2}\right) + A_Q \cdot \exp\left(-j \frac{\varphi_{IQ}}{2}\right)\right|^2}} \cdot 100\%$$

where: A_I - amplitude mixer gain of the real part
 A_Q - amplitude mixer gain of the imaginary part
 φ_{IQ} - additional phase shift between real part and imaginary part
 $imbalance_{IQ}$ - IQ imbalance parameter

Hint:

In 3GPP UPLINK signals, each code channel is BPSK-modulated. The BPSK symbols are sent to the I path or Q path. This is controlled by higher layer functionalities. In signals of lower data rates with only one data channel, IQ impairments may affect the detected code channel configuration. IQ impairments result in a power leakage from the I path to the Q branch and vice versa. This power leakage increases the channel power in the non-active channels and slightly decreases the power in the active channels. If the IQ impairments are enlarged, the leakage power is also enlarged and may cause a false detection of non-active channels in the code channel. If these leakage power code channels are detected as active channels, the displayed values of the IQ impairments and composite error vector magnitude (EVM) are decreased.

The displayed IQ impairments and the EVM value are calculated based on a comparison between an estimated ideal baseband signal and the received signal. The fact that it depends on the detected channel configuration can be explained as follows: the estimated ideal signal based on a channel configuration including these additionally detected leakage power channels matches far better with the received signal than the estimated ideal signal. This estimated ideal signal is based on a channel configuration of actually sent active channels.

A false detection of leakage power channels is indicated in the code domain power display (CDP) where all active channels are highlighted in yellow. All active channels are yellow. Yellow channels of low power and high data rate are most likely code channels. To suppress these channels, a PREDEFINED channel table can be used. A predefined channel table can be set via the CHAN CONF menu. This menu is selected by a softkey at the bottom of the screen.

Menu MEAS – SPECTRUM EM MASK



The softkey *LIST EVALUATION* reconfigures the SEM output to a split screen. In the upper half the trace with the limit line is shown. In the lower half the peak value list is shown. For every range of the spectrum emission defined by the standard the peak value is listed. For every peak value the frequency, the absolute power, the relative power to the channel power and the delta limit to the limit line is shown. As long as the delta limit is negative, the peak value is below the limit line. A positive delta indicates a failed value. The results are then colored in red, and a star is indicated at the end of the row, for indicating the fail on a black and white printout. If the list evaluation is active, the peak list function is not available.

IEC/IEEE-bus command:

```
:CALCulate1:PEAKsearch:AUTO ON | OFF
```

With this command the list evaluation which is by default for backwards compatibility reasons off can be turned on.

```
TRACe1:DATA? LIST
```

With this command the list evaluation results are queried in the following order:

```
<no>, <start>, <stop>, <rbw>, <freq>, <power abs>, <power rel>, <delta>, <limit check>, <unused1>, <unused2>
```

All results are float values.

no	: range number
start	: start frequency
stop	: stop frequency
rbw	: resolution bandwidth of range
freq	: frequency of peak
power abs	: absolute power in dBm of peak
power rel	: relative power in dBc (related to the channel power) of peak
delta	: distance to the limit line in dB (positive indicates value above the limit, fail)
limit check	: limit fail (pass = 0, fail =1)
unused1	: reserved (0.0)
unused2	: reserved (0.0)

Modified Chapters for remote operation

Control of root mean square average range of EVM_{rms} value

:[SENSe:]CDPower:EINTerval SLOT | MEAS

This command switches sets the mode of determining the average interval of the root mean square (RMS) calculation for error vector magnitude (EVM_{rms}) versus slot. The command influences the calculation of the composite EVM (rms) values. [COMPOSITE EVM (RMS)]. According to 3GPP TS 34.121 version V7.1.0 chapter 5.13.1A "Error Vector Magnitude (EVM) with HS-DPCCH", the average interval for root mean square calculation of EVM_{rms} is not fixed to a full slot length. In signals containing power controlled channel unaligned to DPCCH slot timing, only an interval of constant channel power should be considered to calculate EVM_{rms} . The command decides whether unaligned power controlled channels should influence the average interval or not. The measurement interval is also influenced by the setting *ELIMINATE TAIL CHIPS* for details please refer to the command description of

MEAS: The measurement interval of EVM_{rms} is determined automatically considering the timing offset of HS-DPCCH and E-DPCCH channel of the received signal.

SLOT: The measurement interval of EVM_{rms} is set to a complete slot.

Example: " SENS:CDP:EINT MEAS "

Characteristics: *RST value: SLOT
SCPI: device-specific

Query of results: :SENS:CDP:EINT?

Result: <SLOT | MEAS>

:[SENSe:]CDPower:ETCHips ON|OFF

This command selects length of the measurement interval for calculation of error vector magnitude (EVM). In accordance with 3GPP specification Release 5, the EVM measurement interval is one slot (4096 chips) minus 25 μ s at each end of the burst (3904 chips) if power changes are expected. If no power changes are expected, the evaluation length is one slot (4096 chips). In case of a reduced measurement length due to activated EVM interval reduction (refer to EVM INTERV SLOT/MEAS), the EVM measurement interval is also reduced by 25 μ s. That results in an interval of less than one slot minus 25 μ s (less than 3904 chips).

ON: Changes of power are expected. Therefore an EVM measurement interval of one slot minus 25 μ s (3904 chips) is considered.

OFF: Changes of power are not expected. Therefore an EVM measurement interval of one slot (4096 chips) is considered

Example: :SENS:CDP:ETCH ON

Features: *RST value: OFF
SCPI: device-specific

Query of results: :SENS:CDP:ETCH?

Result: <1 | 0>

Query result of root mean square value of error vector magnitude with included measurement interval information.

:TRACe:DATA? CEVM

This command reads the root mean square (RMS) value of the error vector magnitude (EVM_{rms}). The measurement interval of the RMS value depends on analyzer settings and the channel configuration of the applied signal (refer to ":[SENSe:]CDPower:EINterval" and ":[SENSe:]CDPower:ETCHips"). The information of the chip limits of the used measurement interval are given for each slot. Fifteen (15) groups of 6 values are always transferred.

Example: :TRAC:DATA? CEVM

Result: 15 groups with 6 values per group are returned:

```
<slot0>,<EVM0>,<BeginMeas0>,<EndMeas0>,<Reserved_A0>,<Reserved_B0>
<slot1>,<EVM1>,<BeginMeas1>,<EndMeas1>,<Reserved_A1>,<Reserved_B1>
|           |           |           |           |
<slot14>,<EVM14>,<BeginMeas14>,<EndMeas14>,<Reserved_A14>,<Reserved_B14>
```

Where: <field>	[unitf]	{range}	- explanation
<slot _n >	[1]	{0 ... 14}	- slot number
<EVM _n >	[%]	{0 ... 100}	- RMS value of error vector magnitude
<BeginMeas _n >	[chip]	{0 ... 1278}	- Begin of the measurement interval for EVM_{rms} value
<EndMeas _n >	[chip]	{0 ... 2559}	- End of the measurement interval for EVM_{rms} value
<Reserved_A _n >	[]	{0}	- Reserved for possible additional information in future FW versions
<Reserved_B _n >	[]	{0}	- Reserved for possible additional information in future FW versions

Query result of root mean square average interval

:CALCulate<1|2>:MARKer<1>:FUNCTION:WCDPower:MS:RESult?

PTOTal | FERRor | TFRame | MACCuracy | PCDerror | EVMRms | EVMPeak | CERRor | CSLot | SRATe | CHANnel | CDPabsolute | CDPRelative | IQOffset | IQImbalance | CMAPping | PSYMBOL | RHO | TOFFset | **EVMBegin** | **EVMend**

This command queries the measured and calculated results of the 3GPP FDD code domain power measurement.

PTOTal	total power	[dBm]
FERRor	frequency error	[Hz]
TFRame	trigger to frame	[s]
MACCuracy	composite EVM (RMS)	[%]
PCDerror	peak code domain error	[dB]
EVMRms	symbol error vector magnitude RMS	[%]
EVMPeak	symbol error vector magnitude peak	[%]
CERRor	chip rate error	[ppm]
CSLot	channel slot number	[]
SRATe	symbol rate	[ksps]
CHANnel	channel number	[]
CDPabsolute	channel power absolute	[dBm]
CDPRelative	channel power relative	[dB]
IQOffset	IQ offset	[%]
IQImbalance	IQ imbalance	[%]
CMAPping	Channel component	[I Q]
PSYMBOL	Number of pilot bits	[]
RHO	Quality paramter rho for every slot	[]
TOFFset	Offset between the start of the first slot in the channel and the start of the analyzed 3GPP FDD frame.	[chip]
EVMBegin	Begin of the measurement interval to calculate EVM (RMS) value	[chip]
EVMend	End of the measurement interval to calculate EVM (RMS) value	[chip]

Example: " :CALC:MARK:FUNC:WCDP:RES? EVMBegin"

Features: *RST value: -
SCPI: device-specific

Activating Error Vector Magnitude versus chip measurements

:CALCulate<1|2>:FEED 'XTIME:CDPower:CHIP:EVM'

This command selects the vector error data to be displayed

:CALCulate<1|2>:FEED 'XTIME:CDPower:CHIP:MAGNitude'

This command selects the magnitude error data to be displayed

:CALCulate<1|2>:FEED 'XTIME:CDPower:CHIP:PHASE'

This command selects the phase error data to be displayed

:CALCulate<1|2>:FEED 'XTIME:CDPower:COMPOSITE:CONST'

This command selects the composite constellation data to be displayed

Query result of Error Vector Magnitude versus chip

:TRACe[:DATA]? TRACE2

EVM VS CHIP (TRACe2)

The square root of square difference between received signal and reference signal for each chip are transferred. The values are normalized to the square root of the average power at the selected slot:

Output: List of vector error values of all chips at the selected slot
 Format: VectError₀, VectError₁, ..., VectError₂₅₅₉
 Unit: [%]
 Quantity: 2560

:TRACe[:DATA]? TRACE2

MAGNITUDE ERROR VS CHIP (TRACe2)

The magnitude difference between received signal and reference signal for each chip are transferred. The values are normalized to the square root of the average power at the selected slot:

Output: List of magnitude error values of all chips at the selected slot
 Format: MagError₀, MagError₁, ..., MagError₂₅₅₉
 Unit: [%]
 Quantity: 2560

:TRACe[:DATA]? TRACE2

PHASE ERROR VS CHIP (TRACe2)

The phase differences between received signal and reference signal for each chip are transferred. The values are normalized to the square root of the average power at the selected slot:

Output: List of magnitude error values of all chips at the selected slot
 Format: PhaseError₀, PhaseError₁, ..., PhaseError₂₅₅₉
 Unit: [°]
 Quantity: 2560

Query result of scrambled chip data for composite constellation display

:TRACe[:DATA]? TRACE2

COMPOSITE CONSTELLATION (TRACe2)

The real and the imaginary components of the received chip constellation at the selected slot are transferred. The values are normalized to the square root of the average power at the selected slot:

Output: List of I/Q values of all chips per slot
 Format: Re₁, Im₁, Re₂, Im₂, ..., Re₂₅₆₀, Im₂₅₆₀
 Unit: [1]
 Quantity: 2560

Enabling of automatic peak search in spectrum emission mask measurement

CALCulate<1|2>:PEAKsearch:AUTO ON | OFF

PEAK LIST OF SPECTRUM EMISSION MASK MEASUREMENT (SEM)

This command calculates a peak list of the spectrum emission mask measurement at each sweep. One peak value is determined for each range of the limit line. The command corresponds to the softkey 'LIST EVALUATION'

ON: Enables automatic peak search

OFF: Disables automatic peak search

Range: [ON | OFF]

Example: "CALC:PEAK:AUTO ON"

Default: OFF

Query result of peak search list in spectrum emission mask measurement

TRACe<1|2>:DATA? LIST

READ OUT RESULTS OF PEAK LIST EVALUATION

This command reads the peak list of the spectrum emission mask measurement list evaluation (refer to CALC:PEAK:AUTO ON | OFF). An array of values is returned for each range of the limit line. The arrays for each limit line range are following sequentially.

<value array of range 1>, <value array of range 2>,, <value array of range n>

The array of each range contains the following value list:

<No>, <Start>, <Stop>, <Rbw>, <Freq>, <Levelabs>, <Levelrel>, <Delta>, <Limitcheck>, <unused1>, <unused2>

where:

No	[]	: number of the limit line range
Start	[Hz]	: start frequency of the limit line range
Stop	[Hz]	: stop frequency of the limit line range
Rbw	[Hz]	: resolution band width of the limit line range
Freq	[Hz]	: frequency of the power peak with in the range
Levelabs	[dBm]	: absolute power of the peak with in the range
Levelrel	[dB]	: relative power of the peak with in the range related to channel power.
Delta	[dB]	: power difference to margin power
Limitcheck	[0 1]	: decision whether the power is below [0] or above [1] the limit line
Unused1	[]	: reserved (0.0)
Unused2	[]	: reserved (0.0)

Example: " TRAC:DATA? LIST" Reads the value list of automatic peaks search

Query result of result summary parameters

:CALCulate<1|2>:MARKer<1>:FUNCTion:WCDPower:MS:RESult?

PTOTal | FERRor | TFRame | MACCuracy | PCDerror | EVMRms | EVMPeak | CERRor | CSLot | SRATe | CHANnel | CDPabsolute | CDPRelative | IQOffset | IQIMbalance | CMAPping | PSYMBOL | RHO | TOFFset | **MTYPE** | **ACHannels**

This command queries the measured and calculated results of the 3GPP FDD code domain power measurement.

PTOTal	total power
FERRor	frequency error in Hz
TFRame	trigger to frame
MACCuracy	composite EVM
PCDerror	peak code domain error
EVMRms	error vector magnitude RMS
EVMPeak	error vector magnitude peak
CERRor	chip rate error
CSLot	channel slot number
SRATe	symbol rate
CHANnel	channel number
CDPabsolute	channel power absolute
CDPRelative	channel power relative
IQOffset	IQ offset
IQIMbalance	IQ imbalance
CMAPping	Channel component
PSYMBOL	Number of pilot bits
RHO	Quality parameter rho for every slot
TOFFset	Offset between the start of the first slot in the channel and the start of the analyzed 3GPP FDD frame.
MTYPE	modulation type
ACHannels	Number of active channels

Example: " :CALC:MARK:FUNC:WCDP:RES? PTOT"

Features: *RST value: -
SCPI: device-specific

Query results of channel table

:TRACe[:DATA]? TRACE1 | TRACE2 | ABITstream | CTABLE | CWCDp | TPVSlot

This command transfers trace data from the controller to the instrument, the query reads trace data out of the instrument.

ABITstream can be set only if `CALC2:FEED "XTIM:CDP:BSTReam"` is selected (in the lower bitstream window). This command returns the bitstreams of all 15 slots one after the other, the output format may be REAL, UINT or ASCII.

The output format is equal to that of the `:TRACe1:DATA? TRACE2` command in case of an activated bitstream display. The only difference is the number of symbols which are evaluated. The ABITSTREAM command evaluates all symbols of one frame. One value is transferred per bit (range 0,1,). Each symbol contains of two (QPSK) consecutive bits. The number of symbols is not constant and may vary depending on the spreading factor of the selected channel. The bit stream may contain invalid (symbols without power). In this case the character '9' is read.

Unit: \square
 Range: {0, 1, 7, 9}
 Bits per symbol: $N_{\text{BitPerSymb}} = 2$
 Number of symbols: $N_{\text{Symb}} = 150 \cdot 2^{(8\text{-Code Class})}$
 Number of bits: $N_{\text{Bit}} = N_{\text{Symb}} \cdot N_{\text{BitPerSymb}}$
 Format: $\text{Bit}_{00}, \text{Bit}_{01}, \text{Bit}_{10}, \text{Bit}_{11}, \text{Bit}_{20}, \text{Bit}_{21}, \dots, \text{Bit}_{N_{\text{Symb}}0}, \text{Bit}_{N_{\text{Symb}}1}$
 Explanation: 0 – Low state of a transmitted bit
 1 – High state of a transmitted bit
 7 – Suppressed symbol of a HS-DPCCH slot
 9 – Bit of an inactive channel

CTABLE reads out the channel table: Seven values are transmitted for each channel, the sixth value (reserved for pilot length) being constantly 0:

< class>, <channel number>, <absolute level>, <relative level>, <l/Q component>, 0, <state>...

CWCDp can be set if `CODE PWR ABSOLUTE / RELATIVE, CHANNEL TABLE` is selected for trace 1. The pilot length, channel state, channel type, modulation type and a reserved value are transmitted in addition to the values transmitted for trace 1. For each channel, 11 values are transmitted

<code class>, <channel number>, <l/Q component>, <absolute level>, <relative level>, <timing offset>, <pilot length>, <active flag>, <channel type>, <modulation type>, <reserved>...

No.	Parameter	Range	Unit	Explanation
1)	<code class>	{2 to 8}	[1]	Code class of the channel.
2)	<channel number>	{0 to 255}	[1]	Code number of the channel.
3)	<IQ component>	{0, 1}	[1]	IQ component of the channel.
		0 - Q component		Channel symbols (S_n) sent from quadrature component; only imaginary part of S_n is used. [Re $\{S_n\} = 0$ Im $\{S_n\} \neq 0$]
		1 - I component		Channel symbols (S_n) sent from In phase component; only real part of S_n is used. [Re $\{S_n\} \neq 0$ Im $\{S_n\} = 0$]
4)	<absolute level>	{ $-\infty$ to ∞ }	[dBm]	Absolute level of the code channel at the selected channel slot. (The channel slot can be marked by the SELECTED CPICH slot.)
5)	< relative level >	{ $-\infty$ to ∞ }	[dB]	Relative level of the code channel at the selected channel slot referenced to CPICH or total power. (The channel slot can be marked by the SELECTED CPICH slot.)
6)	<timing offset>	{0 to 2560}	[chips]	Timing offset of the HS-DPCCH to the frame start. The value is measured in chips. The step width is 256 chips. For all other data channels, the timing offset is zero.
7)	<pilot length>	{0 to 8}	[symbols]	Pilot length of the DPCCH.
8)	<active flag>	{0,1}	[1]	Flag to indicate whether a channel is active 0 - channel not active 1 - channel active
9)	<channel type>	{0 ... 2}	[1]	Channel type indication
		0 - DPDCH		Dedicated Physical Data Channel
		1 - DPCCH		Dedicated Physical Control Channel
		2 - HS-DPCCH		High-Speed Dedicated Physical Control Channel
		3 - E-DPCCH		Enhanced Dedicated Physical Control Channel
		4 - E-DPDCH		Enhanced Dedicated Physical Data Channel
10)	<modulation type>	{0,1,15}	[1]	Modulation type of the code channel
		0 - BPSK-I		Modulation type BPSK I - Branch
		1 - BPSK-Q		Modulation type BPSK Q - Branch
		15 - None		no power within the channel slot
11)	<reserved>	{0}	[1]	Reserved for future functionality.

For TRACE1 or TRACE2 the following measured values are transferred depending on the display mode:

Appendix: Contact to our hotline

Any questions or ideas concerning the instrument are welcome by our hotline:

USA & Canada

Monday to Friday (except US public holidays)

8:00 AM – 8:00 PM Eastern Standard Time (EST)

Tel. from USA 888-test-rsa (888-837-8772) (opt 2)

From outside USA +1 410 910 7800 (opt 2)

Fax +1 410 910 7801

E-mail Customer.Support@rsa.rohde-schwarz.com

East Asia

Monday to Friday (except Singaporean public holidays)

8:30 AM – 6:00 PM Singapore Time (SGT)

Tel. +65 6 513 0488

Fax +65 6 846 1090

E-mail Customersupport.asia@rohde-schwarz.com

Rest of the World

Monday to Friday (except German public holidays)

08:00 – 17:00 Central European Time (CET)

Tel. from Europe +49 (0) 180 512 42 42

From outside Europe +49 89 4129 13776

Fax +49 (0) 89 41 29 637 78

E-mail CustomerSupport@rohde-schwarz.com