



ROHDE & SCHWARZ

Test and Measurement
Division

Operating Manual

3GPP FDD User Equipment Test

Application Firmware Module R&S FS-K73

1154.7252.02

Printed in the Federal
Republic of Germany

Contents

Safety Instructions
 Certificate of Quality
 Support Center Address
 List of R&S Representatives

Contents of Application Firmware R&S -K73 Manual

3GPP FDD User Equipment Test - Application Firmware R&S FS-K73	7
1 Enabling the Firmware Option.....	7
2 Getting Started	8
Basic Settings in Code Domain Measurement Mode	9
Measurement 1: Measuring the Signal Power	9
Measurement 2: Measurement of Spectrum Emission Mask	10
Measurement 3: Measurement of Relative Code Domain Power.....	11
Setting: Synchronizing the reference frequencies	11
Setting: Behaviour with Deviating Center Frequency Setting	12
Setting: Behaviour with Incorrect Scrambling Code	12
Measurement 4: Triggered Measurement of Relative Code Domain Power	13
Setting: Trigger offset.....	13
Measurement 5: Measurement of Composite EVM	14
Measurement 6: Measurement of Peak Code Domain Errors.....	15
3 Setup for User Equipment Tests	16
Standard Test Setup	16
Presetting	17
4 3GPP FDD Channel Configurations	18
5 Menu Overview.....	19
6 Configuration of 3GPP FDD Measurements.....	21
Measurement of Channel Power	22
Measurement of Adjacent-Channel Power - ACLR	23
Signal Power Check – SPECTRUM EM MASK.....	32
Measurement of Occupied Bandwidth - OCCUPIED BANDWIDTH.....	35
Measurement of Signal Statistics.....	37
Code Domain Measurements on 3GPP FDD Signals	41
Display modes – <i>RESULTS</i> hotkey	43
Measurement Configuration – <i>CHAN CONF</i> hotkey	67
Configuration of CDP Measurement – <i>SETTINGS</i> hotkey	71
Frequency Settings – Key <i>FREQ</i>	76
Span Settings – Key <i>SPAN</i>	76
Level Settings – Key <i>AMPT</i>	77
Marker Settings – Key <i>MKR</i>	78
Changing Instrument Settings – Key <i>MKR</i> →.....	79
Marker Functions – Key <i>MKR FCTN</i>	80
Bandwidth Setting – Key <i>BW</i>	80
Measurement Control – Key <i>SWEEP</i>	80
Measurement Selection – Key <i>MEAS</i>	80
Trigger Settings – Key <i>TRIG</i>	80

	Trace Settings – Key <i>TRACE</i>	81
	Display Lines – Key <i>LINES</i>	83
	Settings of Measurement Screen – Key <i>DISP</i>	83
	Storing and Loading of Unit Data – Key <i>FILE</i>	83
7	Remote-Control Commands	84
	CALCulate:FEED - Subsystem	84
	CALCulate:LIMit – Subsystem	86
	CALCulate:LIMit:ACPower Subsystem	86
	CALCulate:LIMit:ESPECTrum Subsystem	90
	CALCulate:MARKer – Subsystem	91
	CALCulate:STATistics - Subsystem	93
	CONFigure:WCDPower Subsystem	95
	DISPlay – Subsystem	99
	INSTRument Subsystem	100
	SENSE:CDPower Subsystem	101
	SENSE:Power – Subsystem	105
	STATus-QUEStionable:SYNC Register	111
	TRACe Subsystem	113
	Table of Softkeys with Assignment of IEC/IEEE Commands	116
8	Performance Test	123
	Required Measuring Equipment and Accessories	123
	Test Procedure	123
9	Glossary	126
10	Index	127

Figures

Fig. 1	UE test setup	16
Fig. 2	Overview of menus of code domain power	20
Fig. 3	Overview of menus	20
Fig. 4	Power measurement in the 3.84 MHz transmission channel using a 5 MHz channel filter. .	22
Fig. 5	Adjacent-channel power measurement of a 3GPP FDD user equipment	23
Fig. 6	Measurement of Spectrum Emission Mask	32
Fig. 7	Measurement of occupied bandwidth	35
Fig. 8	CCDF of 3GPP FDD signal.	37
Fig. 9	Indication of measurement parameters	45
Fig. 10	Code domain power, branch Q	46
Fig. 11	Display of composite EVM	47
Fig. 12	Display of Peak code domain error	47
Fig. 13	Power versus Slot measurement for an active channel	48
Fig. 14	Display of Result Summary	49
Fig. 15	Basic model of possible IQ impairment parameters in complex up converter devices.	51
Fig. 16	Code domain error display: Signal with no code domain error in the I and Q branch	53
Fig. 17	Code domain error power with an unrecognized code channel in the I and Q branch.	54
Fig. 18	Overview display of code domain power	55

Fig. 19	Channel Table of an UPLINK signal according to Release 99 specification.....	57
Fig. 20	Power versus slot of an HS-DPCCH channel.	57
Fig. 21	Power versus slot of an E-DPCCH channel.	59
Fig. 22	Channel Table of an UPLINK signal according to Release 99 specification.....	59
Fig. 23	Relative frequency error versus slot.....	60
Fig. 24	Phase discontinuity versus slot	61
Fig. 25	Measurement of phase discontinuity	61
Fig. 26	Symbol Constellation Diagram of a channel mapped onto I component	62
Fig. 27	Symbol Constellation Diagram of a channel mapped onto Q component.....	62
Fig. 28	Error Vector Magnitude for the selected slot of the selected channel.....	63
Fig. 29	Demodulated bits for the selected slot of the selected channel	64
Fig. 30	Power versus symbol for one slot of a channel with 640 symbols	65
Fig. 31	Table for editing a channel configuration	68
Fig. 32	Creating a new channel configuration	70
Fig. 33	Data scheme of the captured and analyzed frames.....	73
Fig. 34	Parameters of the marker info field	78
Fig. 35	Result summary with applied average mode	82

Tables

Table 1	Default settings of the code domain measurement.....	9
Table 2	Channel configuration 1: DPCCH and 1 DPDCH.....	18
Table 3	Channel configuration 2: DPCCH and up to 6 DPDCH.....	18
Table 4	Channel configuration 3: DPCCH, up to 6 DPDCH and 1 HS-DPCCH.....	18
Table 5	Channelization code of HS-DPCCH	18
Table 6	Channel configuration according to 3GPP specification release 99	56
Table 7	HSDPCCH Channel configuration according to 3GPP specification release 7	57
Table 8	EDPCCH Channel configuration according to 3GPP specification release 7	58
Table 9	EDPDCH Channel configuration according to 3GPP specification release 7	58
Table 10	Definition of the error bits of the SYNC register	112
Table 11	Required Measuring Equipment and Accessories	123

Contents of Manual for Application Firmware R&S FS-K73

This manual contains all information on the operation of an R&S FSP, R&S FSU, R&S FSQ or R&S FSMR equipped with Application Firmware R&S FS-K73. It includes operation via menus and the remote-control commands for the 3GPP FDD user equipment test.

The manual comprises the data sheet and 10 chapters:

- The data sheet** informs on the guaranteed specifications and the firmware characteristics.
- Chapter 1** describes how to enable the application firmware module.
- Chapter 2** describes typical examples of measurements by means of tests.
- Chapter 3** describes the measurement setup for user equipment tests.
- Chapter 4** describes the channel configurations for user equipments.
- Chapter 5** gives a schematic overview of the R&S FS-K73 control menus.
- Chapter 6** contains a detailed description of the possible user equipment test measurements as a reference for manual operation. The chapter also presents a list of remote-control commands associated with each function.
- Chapter 7** describes all remote-control commands defined for the code domain measurement. An alphabetic list of all remote-control commands and a table of softkeys with the assignment of commands are given at the end of this chapter.
- Chapter 8** contains the performance test.
- Chapter 9** contains an explanation of terms related to measured quantities of the code domain measurement.
- Chapter 10** contains the index of this operating manual.

This manual is a supplement to the R&S FSP/R&S FSU/R&S FSQ/R&S FSMR operating manual. It includes exclusively functions of Application Firmware R&S FS-K73. For all other descriptions, please refer to the spectrum analyzers operating manual.


3GPP FDD User Equipment Test - Application Firmware R&S FS-K73

The Spectrum Analyzer R&S FSP, R&S FSU, Signal Analyzer R&S FSQ or Measuring Receiver R&S FSMR equipped with Application Firmware R&S FS-K73 perform code domain power measurements on uplink signals according to standard 3GPP (FDD mode). The application firmware is in line with standard 3GPP (Third Generation Partnership Project) with version Release 5. In addition to the code domain measurements prescribed by the standard 3GPP, the application offers measurements with predefined settings in the frequency domain, e.g. power and ACLR measurement.


1 Enabling the Firmware Option

Firmware Option R&S FS-K73 is enabled in the *GENERAL SETUP* menu by entering a keyword. The keyword is delivered with the option. If the option is factory-installed, it is already enabled.

GENERAL SETUP menu:

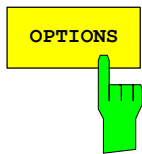

The *OPTIONS* softkey opens a submenu where keywords for new firmware options (application firmware modules) can be entered. Available options are displayed in a table, which is opened when entering the submenu.

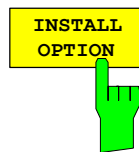

The *INSTALL OPTION* softkey activates the entry of the keyword for a firmware option.

One or several keywords can be entered in the entry field. On entering a valid keyword, *OPTION KEY OK* is displayed on the message line and the option is entered in the *FIRMWARE OPTIONS* table.

In case of invalid keywords, *OPTION KEY INVALID* is displayed on the message line.

2 Getting Started

The following chapter explains basic 3GPP FDD user equipment tests by means of a setup with signal generator R&S SMIQ. It describes how operating and measurement errors can be avoided using correct presetting.

The measurement screen is presented in chapter 6 for each measurement.

Key settings are shown as examples to avoid measurement errors. Following the correct setting, the effect of an incorrect setting is shown. The following measurements are performed:

- Measurement 1: Measuring the spectrum
- Measurement 2: Measurement of spectrum emission mask
- Measurement 3: Measurement of relative code domain power
 - Setting: Setting the analyzer center frequency to the DUT frequency
 - Setting: Scrambling code of signal
- Measurement 4: Triggered measurement of relative code domain power
 - Setting: Trigger offset
- Measurement 5: Measurement of composite EVM
- Measurement 6: Measurement of peak code domain error

The measurements are performed using the following units and accessories:

- R&S Analyzer with Application Firmware R&S FS-K73: 3GPP FDD user equipment test.
- Vector Signal Generator R&S SMIQ with option R&S SMIQB45: digital standard 3GPP (options R&S SMIQB20 and R&S SMIQB11 required)
- 1 coaxial cable, 50 Ω , approx. 1 m, N connector
- 1 coaxial cable, 50 Ω , approx. 1 m, BNC connector

Conventions for displaying settings on R&S Analyzer:

- [<KEY>] Press a key on the front panel, e.g. [**SPAN**]
- [<SOFTKEY>] Press a softkey, e.g. [**MARKER -> PEAK**]
- [<nn unit>] Enter a value and terminate by entering the unit, e.g. [**12 kHz**]

Conventions for displaying settings on R&S SMIQ:

- [<KEY>] Press a key on the front panel, e.g. [**FREQ**]
- <MENU> Select a menu, parameter or a setting, e.g. **DIGITAL STD**.
The menu level is marked by an indentation.
- <nn unit> Enter a value and terminate by entering the unit, e.g. **12 kHz**

Basic Settings in Code Domain Measurement Mode

In the default setting after PRESET, R&S Analyzer is in the analyzer mode. The following default settings of the code domain measurement are activated, provided the code domain measurement mode is selected.

Table 1 Default settings of the code domain measurement

Parameter	Setting
Digital standard	W-CDMA 3GPP REV
Sweep	CONTINUOUS
CDP mode	CODE CHAN AUTOSEARCH
Trigger settings	FREE RUN
Trigger offset	0
Scrambling code	0
Threshold value	-60 dB
Symbol rate	15 ksps
Code number	0
Slot number	0
I/Q branch	Q
Display	Screen A: CODE PWR RELATIVE Screen B: RESULT SUMMARY

Measurement 1: Measuring the Signal Power

The measurement of the spectrum gives an overview of the 3GPP FDD signal and the spurious emissions close to the carrier.

Test setup ➤ Connect the RF output of R&S SMIQ to the RF input of R&S Analyzer (coaxial cable with N connectors).

Settings on R&S SMIQ: **[PRESET]**
[LEVEL: 0 dBm]
[FREQ: 2.1175 GHz]
 DIGITAL STD
 WCDMA/3GPP
 SET DEFAULT
 LINK DIRECTION UP/REVERSE
 TEST MODELS (NOT STANDARDIZED)...
 C+D960K
 STATE: ON

Settings on R&S Analyzer: **[PRESET]**
[CENTER: 2.1175 GHz]
[AMPT: 0 dBm]
[3G FDD UE]
[MEAS: POWER]

Measurement 2: Measurement of Spectrum Emission Mask

The 3GPP specification defines a measurement, which monitors the compliance with a spectral mask in a range of at least ± 12.5 MHz about the 3GPP FDD carrier. To assess the power emissions in the specified range, the signal power is measured in the range near the carrier by means of a 30kHz filter, in the ranges far off the carrier by means of a 1MHz filter. The resulting trace is compared to a limit line defined in the 3GPP specification.

Test setup ➤ Connect the RF output of R&S SMIQ to the RF input of R&S Analyzer (coaxial cable with N connectors).

Settings on R&S SMIQ: **[PRESET]**
[LEVEL: 0 dBm]
[FREQ: 2.1175 GHz]
DIGITAL STD
WCDMA/3GPP
SET DEFAULT
LINK DIRECTION UP/REVERSE
TEST MODELS (NOT STANDARDIZED)...
C+D960K
STATE: ON

Settings on R&S Analyzer: **[PRESET]**
[CENTER: 2.1175 GHz]
[AMPT: 0 dBm]
[3G FDD UE]
[MEAS: SPECTRUM EM MASK]

Measurement on R&S Analyzer: The following is displayed:

- Spectrum of the 3GPP FDD signal
- Limit line defined in the standard
- Information on limit line violations (passed/failed)

Measurement 3: Measurement of Relative Code Domain Power

A code domain power measurement on one of the channel configurations is shown in the following. Basic parameters of CDP analysis are changed to demonstrate the effects of non-signal-adapted values.

- Test setup
- Connect the RF output of R&S SMIQ to the input of R&S Analyzer
 - Connect the reference input (EXT REF IN/OUT) on the rear panel of the analyzer to the reference input (REF) on the rear panel of R&S SMIQ (coaxial cable with BNC connectors).

Settings on R&S SMIQ: **[PRESET]**
[LEVEL: 0 dBm]
[FREQ: 2.1175 GHz]
 DIGITAL STD
 WCDMA 3GPP
 LINK DIRECTION UP/REVERSE
 TEST MODELS (NOT STANDARDIZED)...
 C+D960K
 SELECT BS/MS
 MS 1 ON
 OVERALL SYMBOL RATE... 6*960
 STATE: ON

Settings on R&S Analyzer: **[PRESET]**
[CENTER: 2.1175 GHz]
[AMPT: 10 dBm]
[3G FDD UE]
[SETTINGS: SCRAMBLING CODE 0]

Measurement on R&S Analyzer: The following is displayed:
 Screen A: Code domain power of signal, branch Q
 (channel configuration with 3 data channels on Q branch)
 Screen B: Numeric results of CDP measurement

Setting: Synchronizing the reference frequencies

The synchronization of the reference oscillators both of the DUT and analyzer strongly reduces the measured frequency error.

- Test setup
- Connect the reference input (EXT REF IN/OUT) on the rear panel of the analyzer to the reference output (REF) on the rear panel of R&S SMIQ (coaxial cable with BNC connectors).

Settings on R&S SMIQ: *As for measurement 2*

Settings on R&S Analyzer: *As for measurement 2, plus*
[SETUP: REFERENCE EXT]

Measurement on R&S Analyzer: Frequency error The displayed frequency error should be < 10 Hz.

The reference frequencies of the analyzer and of the DUT should be synchronized

Setting: Behaviour with Deviating Center Frequency Setting

In the following, the behaviour of the DUT and the analyzer with wrong center frequency setting is shown.

Settings on R&S SMIQ: ➤ Tune the center frequency of the signal generator in 0.5 kHz steps and watch the analyzer screen:

Measurement on R&S Analyzer:

- A CDP measurement on the analyzer is still possible with a frequency error of up to approx. 1 kHz. Up to 1 kHz, a frequency error causes no apparent difference in measurement accuracy of the code domain power measurement.
- Above a frequency error of 1 kHz, the probability of an impaired synchronization increases. With continuous measurements, at times all channels are displayed in blue with almost the same level.
- Above a frequency error of approx. 2 kHz, a CDP measurement cannot be performed. R&S Analyzer displays all possible codes in blue with a similar level.

Settings on R&S SMIQ: ➤ Set the signal generator center frequency again to 2.1175 GHz:
[FREQ: 2.1175 GHz]

The analyzer center frequency should not differ from the DUT frequency by more than 2 kHz.

Setting: Behaviour with Incorrect Scrambling Code

A valid CDP measurement can only be carried out if the scrambling code set on the analyzer is identical to the one of the transmitted signal.

Test setup

```

SELECT BS/MS
BS 1: ON
SCRAMBLING CODE: 0001
(the scrambling code is set to 0000 on the analyzer)

```

Settings on R&S SMIQ: The CDP display shows all possible codes with approximately the same level.

Settings on R&S Analyzer: Set scrambling code to new value:
[SETTINGS: SCRAMBLING CODE 1]

Measurement on R&S Analyzer: The CDP display again shows the channel configuration.

The scrambling code setting of the analyzer must be identical to that of the measured signal.

Measurement 5: Measurement of Composite EVM

The 3GPP specification prescribes the composite EVM measurement as the average square deviation of the total signal:

An ideal reference signal is generated from the demodulated data. The test signal and the reference signal are compared with each other. The square deviation yields the composite EVM.

- Test setup
- Connect the RF output of R&S SMIQ to the input of R&S Analyzer
 - Connect the reference input (EXT REF IN/OUT) on the rear panel of R&S Analyzer to the reference input (REF) on the rear panel of R&S SMIQ (coaxial cable with BNC connectors).
 - Connect the external trigger input on the rear panel of R&S Analyzer (EXT TRIG GATE) to the external trigger output on the rear panel of R&S SMIQ (TRIGOUT1 of PAR DATA).

Settings on R&S SMIQ:

```

[PRESET]
[LEVEL:                0 dBm]
[FREQ:                2.1175 GHz]
DIGITAL STD
LINK DIRECTION  UP / REVERSE
TEST MODELS (NOT STANDARDIZED)...
C+D960K
SELECT BS/MS
MS 1 ON
OVERALL SYMBOL RATE... 6*960
STATE: ON

```

Settings on R&S Analyzer:

```

[PRESET]
[CENTER:            2.1175 GHz]
[REF:                10 dBm]
[3G FDD UE]
[TRIG                EXTERN]
[RESULTS            COMPOSITE EVM]

```

Measurement on R&S Analyzer:

The following is displayed:

Screen A: Code domain power of signal, branch Q
(channel configuration with 3 data channels on branch Q)

Screen B: Composite EVM (EVM for total signal)

Measurement 6: Measurement of Peak Code Domain Errors

The peak code domain error measurement is defined in the 3GPP specification for FDD signals. An ideal reference signal is generated from the demodulated data. The test signal and the reference signal are compared with each other. The difference of the two signals is projected onto the classes of the different spreading factors. The peak code domain error measurement is obtained by summing up the symbols of each difference signal slot and searching for the maximum error code.

- Test setup
- Connect the RF output of R&S SMIQ to the input of R&S Analyzer
 - Connect the reference input (EXT REF IN/OUT) on the rear panel of R&S Analyzer to the reference input (REF) on the rear panel of R&S SMIQ (coaxial cable with BNC connectors).
 - Connect the external trigger input on the rear panel of R&S Analyzer (EXT TRIG GATE) to the external trigger output on the rear panel of R&S SMIQ (TRIGOUT1 of PAR DATA).

Settings on R&S SMIQ:

```

[PRESET]
[LEVEL:                0 dBm]
[FREQ:                2.1175 GHz]
DIGITAL STD
  WCDMA 3GPP
    LINK DIRECTION  UP / REVERSE
    TEST MODELS (NOT STANDARDIZED)...
      C+D960K
    SELECT BS/MS
      MS 1 ON
    OVERALL SYMBOL RATE... 6*960
  STATE: ON
  
```

Settings on R&S Analyzer:

```

[PRESET]
[CENTER:            2.1175 GHz]
[REF:              0 dBm]
[3G FDD UE]
[TRIG              EXTERN]
[RESULTS          PEAK CODE DOMAIN ERR]
                   SPREAD FACTOR 256
  
```

Measurement on R&S Analyzer:

The following is displayed:

Screen A: Code domain power of signal, branch Q
(channel configuration with 3 data channels on branch Q)

Screen B: Peak code domain error (projection of the error onto the class with spreading factor 256)

3 Setup for User Equipment Tests

**Caution:**

Before turning the instrument on, the following conditions must be fulfilled:

- Instrument covers are in place and all fasteners are tightened.
- Fan openings are free from obstructions.
- Signal levels at the input connectors are all below specified maximum values.
- Signal outputs are correctly connected and not overloaded.

Non-compliance with these instructions may cause damage to the instrument.

This section describes how to set up the analyzer for 3GPP FDD user equipment tests. As a prerequisite for starting the test, the instrument must be correctly set up and connected to the AC power supply as described in chapter 1 of the operating manual for the analyzer. Furthermore, the application firmware module must be properly installed following the instructions given in chapter 1 of the present manual.

Standard Test Setup

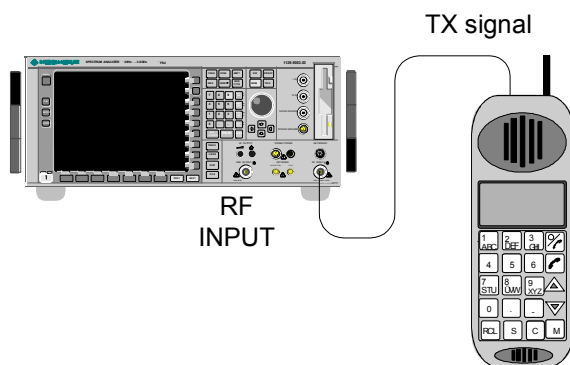


Fig. 1 UE test setup

- Connect antenna output (or TX output) of UE to RF input of the analyzer via a power attenuator of suitable attenuation.

The following values are recommended for the external attenuator to ensure that the RF input of the analyzer is protected and the sensitivity of the analyzer is not reduced too much.

Max. power	Recommended ext. attenuation
≥ 55 to 60 dBm	35 to 40 dB
≥ 50 to 55 dBm	30 to 35 dB
≥ 45 to 50 dBm	25 to 30 dB
≥ 40 to 45 dBm	20 to 25 dB
≥ 35 to 40 dBm	15 to 20 dB
≥ 30 to 35 dBm	10 to 15 dB
≥ 25 to 30 dBm	5 to 10 dB
≥ 20 to 25 dBm	0 to 5 dB
< 20 dBm	0 dB

- For signal measurements at the output of two-port networks, connect the reference frequency of the signal source to the rear reference input of the analyzer (*EXT REF IN/OUT*).

To ensure that the error limits specified by the 3GPP standard are met, the analyzer should use an external reference frequency for frequency measurements on user equipments. A rubidium frequency standard may be used for instance as a reference source.

- If the user equipment is provided with a trigger output, connect this output to the rear trigger input of the analyzer (*EXT TRIG GATE*).

Presetting

- Enter external attenuation (REF LVL OFFSET)
- Enter reference level
- Enter center frequency
- Set the trigger
- Select standard and measurement

4 3GPP FDD Channel Configurations

The possible channel configurations for the mobile station signal are limited by 3GPP. Only two different configurations for data channels DPDCH are permissible according to the specification. In addition to these two channel configurations the transmission of channel HS-DPCCH is permissible for operating the mobile station in mode HSDPA. For this reason, the R&S FS-K73 checks for these channel configurations only during the automatic channel search. Therefore, channels whose parameters do not correspond to one of these configurations are not automatically detected as active channels.

The two possible channel configurations are summarized below:

Table 2 Channel configuration 1: DPCCH and 1 DPDCH

Channel type	Number of channels	Symbol rate	Spreading code(s)	Mapping to component
DPCCH	1	15 ksps	0	Q
DPDCH	1	15 ksps – 960 ksps	[spreading-factor / 4]	I

Table 3 Channel configuration 2: DPCCH and up to 6 DPDCH

Channel type	Number of channels	Symbol rate	Spreading code(s)	Mapping to component
DPCCH	1	15 ksps	0	Q
DPDCH	1	960 ksps	1	I
DPDCH	1	960 ksps	1	Q
DPDCH	1	960 ksps	3	I
DPDCH	1	960 ksps	3	Q
DPDCH	1	960 ksps	2	I
DPDCH	1	960 ksps	2	Q

Table 4 Channel configuration 3: DPCCH, up to 6 DPDCH and 1 HS-DPCCH

The channel configuration is as above in table 4-2. On HS-DPCCH is added to each channel table..

Number of DPDCH	Symbol rate all DPDCH	Symbol rate HS-DPCCH	Spreading code HS-DPCCH	Mapping to component (HS-DPCCH)
1	15 – 960 ksps	15 ksps	64	Q
2	1920 ksps	15 ksps	1	I
3	2880 ksps	15 ksps	32	Q
4	3840 ksps	15 ksps	1	I
5	4800 ksps	15 ksps	32	Q
6	5760 ksps	15 ksps	1	I


Table 5 Channelization code of HS-DPCCH

N _{max-dpdch} (as defined in subclause 4.2.1)	Channelization code C _{ch}
1	C _{ch,256,64}
2,4,6	C _{ch,256,1}
3,5	C _{ch,256,32}

5 Menu Overview

Application Firmware Module R&S FS-K73 (3GPP FDD user equipment test) extends the analyzer by the code domain measurement mode for 3GPP FDD standard. Additional softkeys are available which allow overview measurements in the analyzer mode.


The R&S FS-K73 application is started by a click on the 3G FDD UE hotkey:

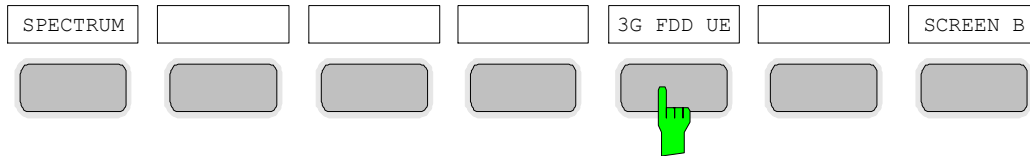

The main settings of the code domain power measurements can be directly selected via the hotkey bar that changes after the application has been started.

When one of the *CHAN CONF*, *SETTINGS*, *RESULTS* hotkeys is selected, the measurement is automatically switched to the Code Domain Power measurement mode.

If the *EXIT 3GPP* hotkey is selected, R&S FS-K73 is exited. The hotkey bar of the basic unit is displayed again.

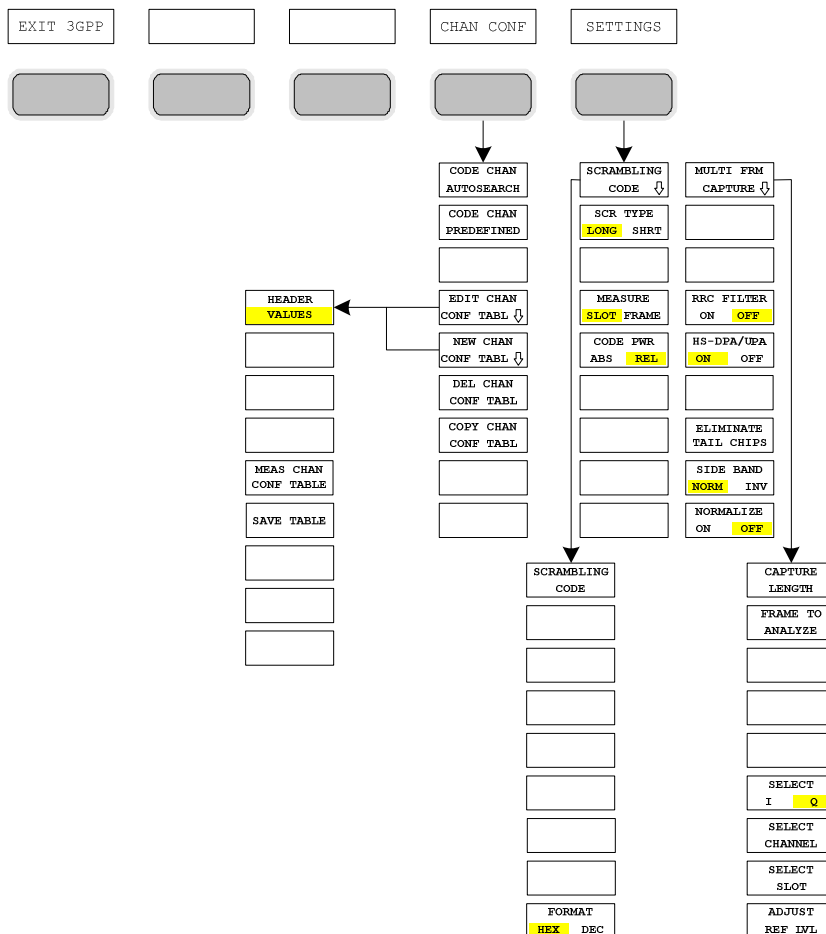

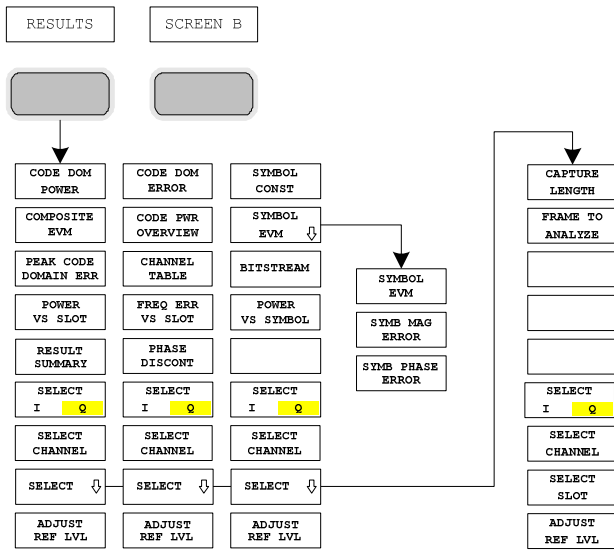


Fig. 2 Overview of menus of code domain power

The measurements available in R&S FS-K73 can be selected by means of the MEAS key:

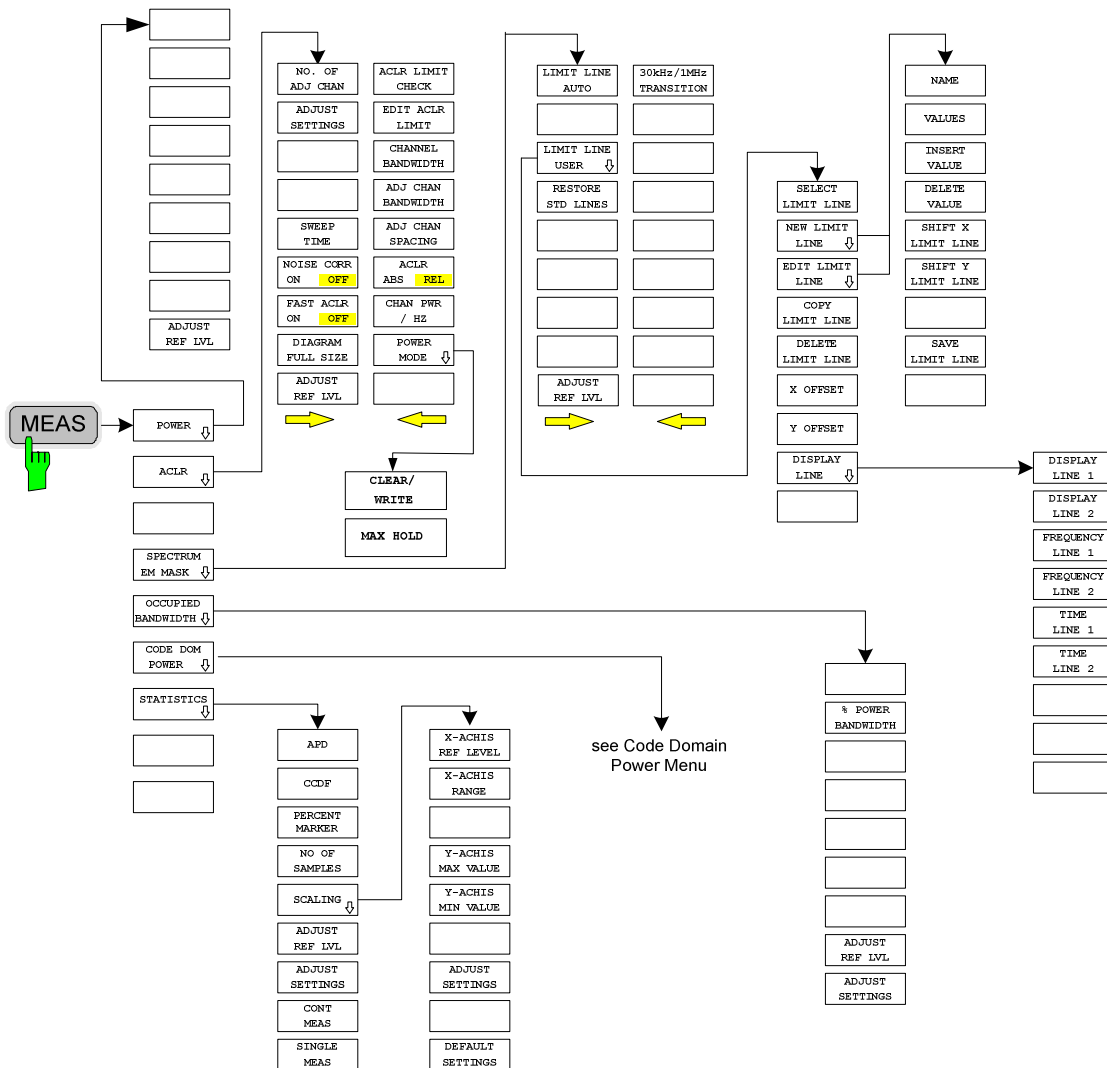


Fig. 3 Overview of menus

6 Configuration of 3GPP FDD Measurements


The most important parameters for the 3GPP FDD user equipment tests are summarized in the menu of key *MEAS* and are explained below using the softkey functions.

The *CODE DOM POWER* softkey activates the code domain measurement mode and opens the submenus for setting the measurement. A change of the hotkey labels after the application has been started ensures that the most important parameters of the CDP (code domain power) measurements are directly accessible via the hotkey bar.

The softkeys *POWER*, *ACLR*, *SPECTRUM EM MASK*, *OCCUPIED BANDWIDTH* and *STATISTICS* activate user equipment tests in the analyzer or vector analyzer mode. Pressing the associated softkey performs the settings required by 3GPP specifications. A subsequent modification of settings is possible.

The other menus of the spectrum analyzer correspond to the menus of these modes and are described in the operating manual of the main unit.

CONFIGURATION MODE menu

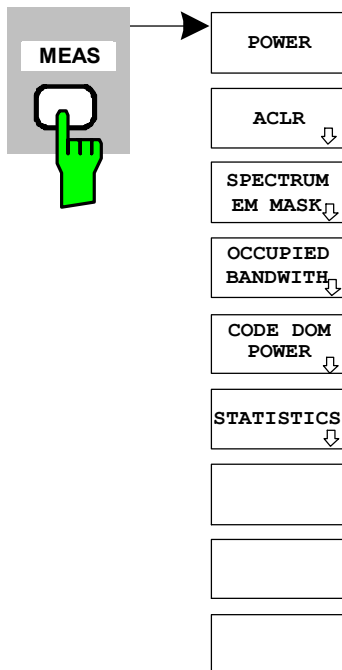


The *MEAS* key opens a submenu for setting the various measurement modes of option R&S FS-K73:

- *POWER* activates the channel power measurement with defined settings in the analyzer mode.
- *ACLR* activates the adjacent channel power measurement with defined settings in the analyzer mode.
- *SPECTRUM EM MASK* compares the signal power in different carrier offset ranges with the maximum values specified by 3GPP.
- *OCCUPIED BANDWIDTH* activates the measurement of the occupied bandwidth (analyzer mode).
- *CODE DOM POWER* activates the code domain measurement mode and opens another submenu for selecting and configuring the parameters. All other menus of the spectrum analyzer are adapted to the functions of the code domain measurement mode.
- *STATISTICS* evaluates the signal with regard to its statistical characteristics (distribution function of the signal amplitudes).

Measurement of Channel Power

Key MEAS

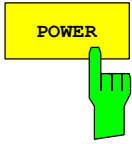

The *POWER* softkey activates measurement of the 3GPP FDD signal channel power.

The R&S Analyzer measures the unweighted RF signal power in a bandwidth of:

$$f_{BW} = 5 \text{ MHz} \geq (1 + \alpha) \cdot 3.84 \text{ MHz} \approx 4.7 \text{ MHz} \quad | \quad \alpha = 0.22$$

The power is measured in zero span mode using a digital channel filter of 5 MHz in bandwidth. According to the 3GPP standard, the measurement bandwidth (5 MHz) is slightly larger than the minimum required bandwidth of 4.7 MHz. The bandwidth is displayed numerically below the screen.

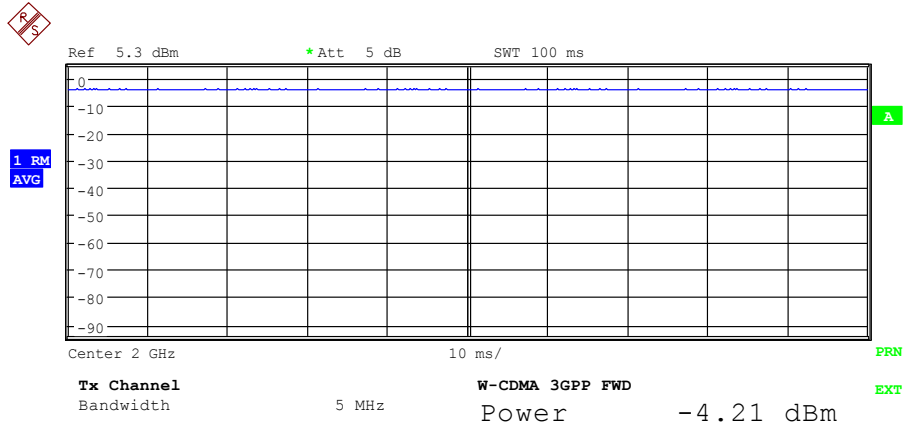


Fig. 4 Power measurement in the 3.84 MHz transmission channel using a 5 MHz channel filter.

Pressing the softkey activates the analyzer mode with defined settings:

SYSTEM PRESET		
After PRESET the following user-specific settings are restored and so the adaptation to the DUT is maintained:	Reference Level , Reference Level Offset Center Frequency, Frequency Offset Input Attenuation, Mixer Level All trigger settings	
CHAN PWR / ACP	CP / ACP ON	
CP / ACP STANDARD	W-CDMA 3GPP REV	
CP / ACP CONFIG	NO. OF ADJ CHAN	0


Starting from these settings, the instrument can be operated in all functions available in the analyzer mode, i.e. all test parameters can be adapted to the requirements of the specific measurement.

IEC/IEEE bus command: :CONF:WCDP:MEAS POW

Query of results: :CALC:MARK:FUNC:POW:RES? CPOW

Measurement of Adjacent-Channel Power - ACLR

Key MEAS

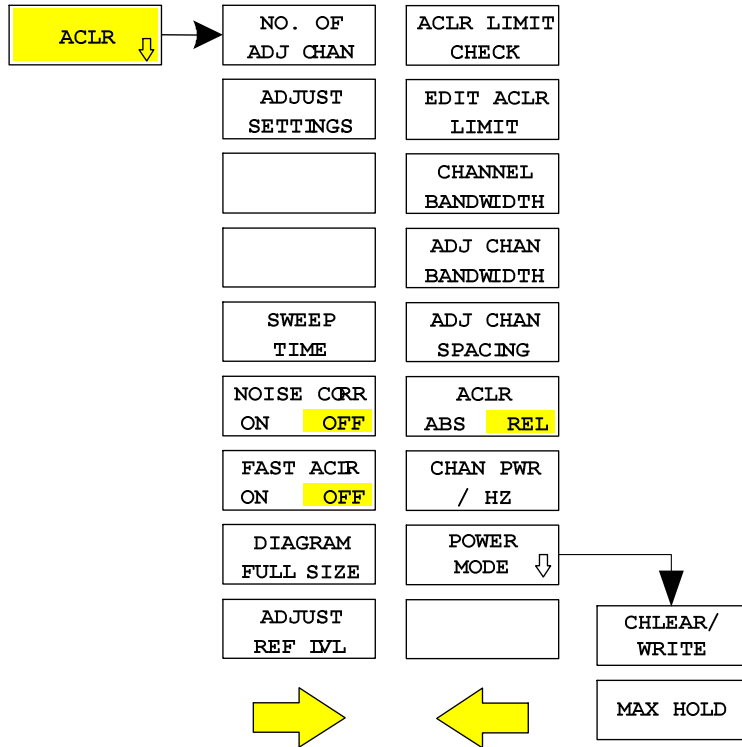

The ACLR softkey activates the adjacent-channel power measurement in the default setting according to 3GPP specifications (Adjacent Channel Leakage Power Ratio).

The instrument measures the channel power and the relative power of adjacent channels and of the next channels. The results are displayed below the screen.

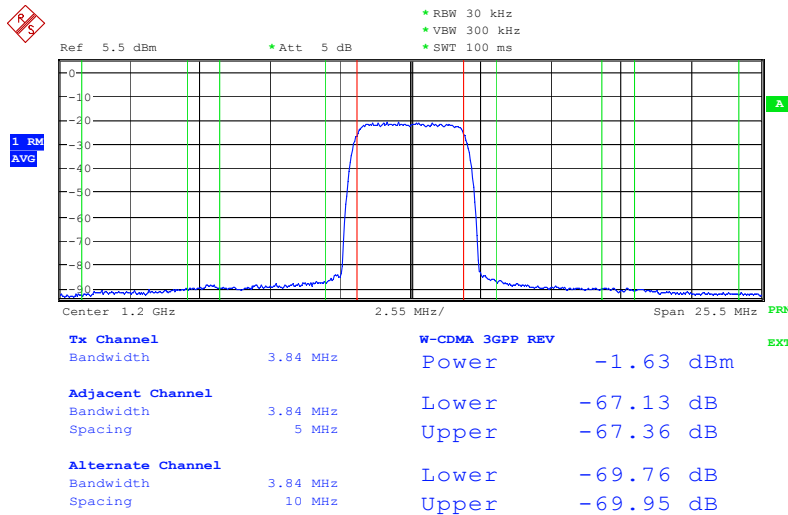


Fig. 5 Adjacent-channel power measurement of a 3GPP FDD user equipment.

Pressing the softkey activates the analyzer mode with defined settings:

SYSTEM PRESET		
After PRESET the following user-specific settings are restored and so the adaptation to the DUT is maintained: Reference Level , Reference Level Offset Center Frequency, Frequency Offset Input Attenuation, Mixer Level All trigger settings		
CHAN PWR / ACP	CP / ACP ON	
CP / ACP STANDARD	W-CDMA 3GPP REV	
CP / ACP CONFIG	NO. OF ADJ CHAN	2

Starting from these settings, the instrument can be operated in all functions available in the analyzer mode, i.e. all test parameters can be adapted to the requirements of the specific measurement.

IEC/IEEE bus command: :CONF:WCDP:MEAS ALCR

Query of results: :CALC:MARK:FUNC:POW:RES? ACP



The *NO. OF ADJ CHAN* softkey activates the entry of the number $\pm n$ of adjacent channels to be considered in the adjacent-channel power measurement.

Numbers from 0 to 12 can be entered.

The following measurements are performed depending on the number of the channels.

- 0 Only the channel power is measured.
- 1 The channel power and the power of the upper and lower adjacent channel are measured.
- 2 The channels power, the power of the upper and lower adjacent channel and of the next higher and lower channel (alternate channel 1) are measured.
- 3 The channel power, the power of the upper and lower adjacent channel, the power of the next higher and lower channel (alternate channel 1) and of the next but one higher and lower adjacent channel (alternate channel 2) are measured.

With higher numbers the procedure is expanded accordingly.

IEC/IEEE bus command: `:SENS:POW:ACH:ACP 2`

Result: `:SENS:POW:ACH:ACP?`

This increased number of adjacent channels is implemented through all the relevant settings such as:

ACLR LIMIT CHECK

```
:CALC:LIM:ACP:ACH:RES?
:CALC:LIM:ACP:ALT1..11:RES?
```

EDIT ACLR LIMITS


```
:CALC:LIM:ACP:ACH:STAT ON
:CALC:LIM:ACP:ACH:ABS -10dBm,-10dBm
:CALC:LIM:ACP:ACH:ABS:STAT ON
:CALC:LIM:ACP:ALT1..11 0dB,0dB
:CALC:LIM:ACP:ALT1..11:STAT ON
:CALC:LIM:ACP:ALT1..11:ABS -10dBm,-10dBm
:CALC:LIM:ACP:ALT1..11:ABS:STAT ON
```

ADJ CHAN BANDWIDTH

```
:SENS:POW:ACH:BWID:ALT1..11 30kHz
```

ADJ CHAN SPACING

```
:SENS:POW:ACH:SPAC:ALT1..11 4MHz
```

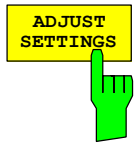

The *ADJUST SETTINGS* softkey automatically optimizes analyzer settings for the selected power measurement (see below). All analyzer settings relevant for power measurements within a specific frequency range (channel bandwidth) are optimally set depending on the channel configuration (channel bandwidth, channel spacing).

- Frequency span:
 The frequency span must cover at least all the channels that are to be considered.
 When the channel power is measured, the span is set to twice the channel bandwidth.
 The setting of the span for adjacent-channel power measurements depends on the channel spacing and the channel bandwidth of the adjacent channel with the largest distance from the transmission channel, ADJ, ALT1 or ALT2 .
- Resolution bandwidth $RBW \leq 1/40$ of channel bandwidth
- Video bandwidth $VBW \geq 3 \times RBW$
- Detector RMS detector

The trace math and trace averaging functions are switched off. The reference level is not influenced by *ADJUST SETTINGS*. It can be separately adjusted with *ADJUST REF LVL*.

The adjustment is only carried out once; if necessary, the instrument settings can be changed later.


IEC/IEEE bus command: `SENS:POW:ACH:PRES ACP|CPOW|OBW`



The *SWEEP TIME* softkey activates entry of the sweep time. When the RMS detector is used, a longer sweep time yields more stable results.

This setting is identical with the *SWEEP TIME MANUAL* setting in the *BW* menu.


IEC/IEEE bus command: `:SWE:TIM <value>`

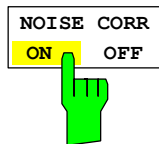

The *NOISE CORR ON/OFF* softkey switches on correction of measurement results due to the residual instrument noise. When the softkey is switched on, the first step is to measure the residual instrument noise. The measured noise is then deducted from the power in the observed channel.

Each time the measurement frequency, the resolution bandwidth, the measurement time or the level settings are changed, noise correction is switched off. To repeat the residual noise measurement with the new settings, the softkey must be pressed again.

IEC/IEEE bus command: `SENS:POW:NCOR ON`

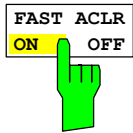

The *FAST ACLR* softkey toggles between measurement in line with the IBW method (*FAST ACLR OFF*) and measurement in the time domain (*FAST ACLR ON*).


With *FAST ACLR ON* selected, the power is measured in the various channels in the time domain. The R&S Analyzer sets its center frequency to the different channel center frequencies one after the other, and then measures the power at these frequencies with the set measurement time (= sweep time/number of measured channels). Suitable RBW filters are automatically used for the selected standard and frequency offset (root raised cosine at WCDMA).

The RMS detector is used for correct power measurement. Software correction factors are not required in this case.

Measured values are output in the form of a table; the power of the useful channel is specified in dBm and the power of the adjacent channels in dBm (*ACLR ABS*) or dB (*ACLR REL*).

The selected sweep time (= measurement time) depends on the desired reproducibility of measurement results. The longer the selected sweep time, the better the reproducibility of results, because, in this case, the power is measured over a longer period of time.


As a rule of thumb, it can be assumed that approx. 500 uncorrelated values are required for a reproducibility value of 0.5 dB (99% of the measurement is within 0.5 dB of the true measured value). Measured values are considered uncorrelated if their time spacing corresponds to the reciprocal of the measurement bandwidth.

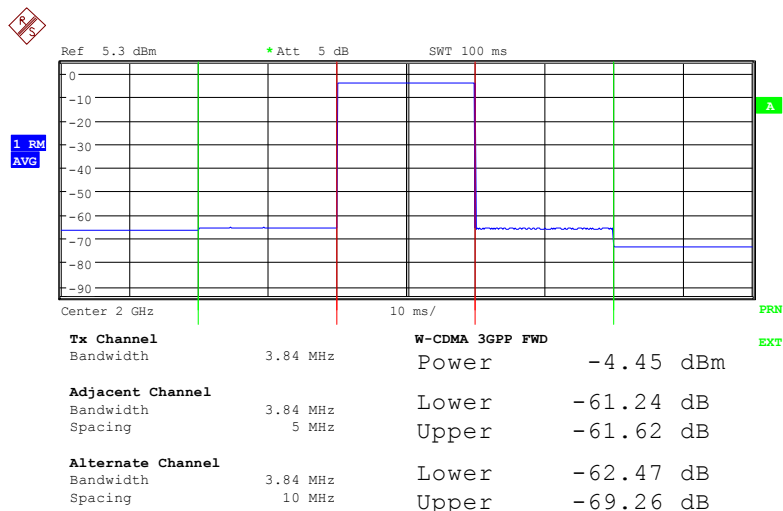


IEC/IEEE bus command: SENS:POW:HSP ON

The *DIAGRAM FULL SIZE* softkey switches the diagram to full screen size.

IEC/IEEE bus command: -

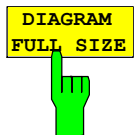

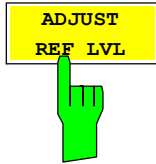

The *ADJUST REF LVL* softkey adapts the reference level of the R&S Analyzer to the measured channel power. This ensures that the settings for RF attenuation and reference level are optimally adapted to the signal level so that the R&S Analyzer is not overdriven or that the dynamic range is not reduced by an S/N ratio that is too low. Since the measurement bandwidth for adjacent-channel power measurements is clearly narrower than the signal bandwidth, the signal path can be overdriven although the measured trace is definitely below the reference level.

IEC/IEEE bus command: SENS:POW:ACH:PRES:RLEV



The *ACLR LIMIT CHECK* softkey switches limit check for the ACLR measurement on or off.

IEC/IEEE bus command: :CALC:LIM:ACP ON

Query of LIMIT CHECK results for

Adjacent channel: :CALC:LIM:ACP:ACH:RES?

Alternate channel <1 to 2>: :CALC:LIM:ACP:ALT<1..2>:RES?

Result format:

Left sideband [PASSED, FAILED]

Right sideband [PASSED, FAILED]



EDIT ACLR LIMIT opens a table with limits for the ACLR measurement. The standard-specific default values are entered with the *ADJUST SETTINGS* softkey.

ACP LIMITS				
CHAN	RELATIVE LIMIT CHECK		ABSOLUTE LIMIT CHECK	
	VALUE	ON	VALUE	ON
ADJ	-55 dBc	√	0 dBm	
ALT1	-70 dBc	√	0 dBm	
ALT2	0 dBc		0 dBm	

The following rules apply for limit values:

- A limit value can be defined for each of the adjacent channels. The limit value applies to the upper and the lower adjacent channel.
- A relative limit value and/or an absolute limit can be defined. The check can be activated separately for the two limit values.
- Compliance with active limit values is checked irrespective of whether absolute or relative limits are specified or whether the measurement itself is performed with absolute levels or a relative level ratio. If the two checks are active and the higher one of the two levels is exceeded, the respective value will be marked.

Note: *Measured values violating the limit are printed in red and preceded by a red asterisk.*

IEC/IEEE bus command:

```
:CALC:LIM:ACP ON
:CALC:LIM:ACP:ACH 0dB,0dB
:CALC:LIM:ACP:ACH:STAT ON
:CALC:LIM:ACP:ACH:ABS -10dBm,-10dBm
:CALC:LIM:ACP:ACH:ABS:STAT ON
:CALC:LIM:ACP:ALT1 0dB,0dB
:CALC:LIM:ACP:ALT1:STAT ON
:CALC:LIM:ACP:ALT1:ABS -10dBm,-10dBm
:CALC:LIM:ACP:ALT1:ABS:STAT ON
:CALC:LIM:ACP:ALT2 0dB,0dB
:CALC:LIM:ACP:ALT2:STAT ON
:CALC:LIM:ACP:ALT2:ABS -10dBm,-10dBm
:CALC:LIM:ACP:ALT2:ABS:STAT ON
```

CHANNEL
BANDWIDTH



The *CHANNEL BANDWIDTH* softkey activates the entry of the channel bandwidth for the transmission channel.

The useful channel bandwidth is generally defined by the transmission method. In the WCDMA default setting, measurements are performed with a channel bandwidth of 3.84 MHz.

When measuring according to the IBW method (*FAST ACP OFF*), the channel bandwidth is marked by two vertical lines to the left and right of the screen center. It can thus be visually checked whether the entire power of the signal to be measured is within the selected channel bandwidth.

With the time domain method (*FAST ACP ON*), the measurement is performed in zero span. The channel limits are not marked in this case. The R&S Analyzer offers all available channel filters for selecting the channel bandwidth. Deviating channel bandwidths cannot be set. If deviating channel bandwidths are required, the IBW method should be used.

IEC/IEEE bus command: SENS:POW:ACH:BWID 3.84MHz

ADJ CHAN
BANDWIDTH



The *ADJ CHAN BANDWIDTH* softkey opens a table where the channel bandwidths for the adjacent channels can be defined.


ACP CHANNEL BW	
CHAN	BANDWIDTH
ADJ	3.84 MHz
ALT1	3.84 MHz
ALT2	3.84 MHz

When measuring according to the IBW method (*FAST ACP OFF*), the bandwidths of the different adjacent channels are to be entered numerically. Since all adjacent channels often have the same bandwidth, the other channels ALT1 and ALT2 are set to the bandwidth of the adjacent channel on entering the adjacent-channel bandwidth (ADJ). Thus only one value needs to be entered in case of equal adjacent channel bandwidths. The same holds true for the ALT2 channels (alternate channels 2) when the bandwidth of the ALT1 channel (alternate channel 1) is entered.

Note: *The bandwidths can be selected independently from each other by overwriting the table from top to bottom.*

With the time domain method (*FAST ACP ON*), the adjacent-channel bandwidths are selected from the list of available channel filters. For deviating adjacent-channel bandwidths, the IBW method should be used.

IEC/IEEE bus command: SENS:POW:ACH:BWID:ACH 3.84MHz
SENS:POW:ACH:BWID:ALT1 3.84MHz
SENS:POW:ACH:BWID:ALT2 3.84MHz

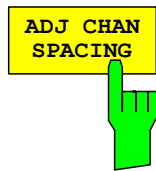


The ADJ CHAN SPACING softkey opens a table for defining the channel spacings.

ACP CHANNEL SPACING	
CHAN	SPACING
ADJ	5 MHz
ALT1	10 MHz
ALT2	15 MHz

Since all adjacent channels often have the same distance to each other, the entry of the adjacent-channel spacing (ADJ) causes channel spacing ALT1 to be set to twice and channel spacing ALT2 to three times the adjacent-channel spacing. Thus only one value needs to be entered in case of equal channel spacing. The same holds true for the ALT2 channels when the bandwidth of the ALT1 channel is entered.

Note: The channel spacings can be set separately by overwriting the table from top to bottom.

IEC/IEEE bus command: SENS:POW:ACH:SPAC:ACH 5MHz
 SENS:POW:ACH:SPAC:ALT1 10MHz
 SENS:POW:ACH:SPAC:ALT2 15MHz

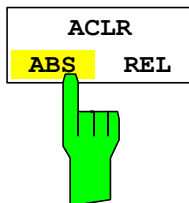

The CP/ACP ABS/REL softkey (channel power absolute/relative) switches between absolute and relative power measurement in the channel.


ACLR ABS The absolute power in the transmission channel and in the adjacent channels is displayed in the unit of the y-axis, e.g. in dBm.

ACLR REL In case of adjacent-channel power measurements (NO. OF ADJ CHAN > 0), the level of the adjacent channels is displayed relative to the level of the transmission channel in dBc.

With linear scaling of the y-axis, the power of the new channel is displayed relative to the reference channel (CP/CP_{ref}). With dB scaling, the logarithmic ratio 10lg (CP/CP_{ref}) is displayed.

Relative channel power measurement can thus also be used for universal adjacent-channel power measurements. Each channel can be measured individually.

IEC/IEEE bus command: SENS:POW:ACH:MODE ABS

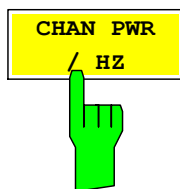

The CHAN PWR / HZ softkey switches between the measurement of the total power in the channel and the power measurement with reference to 1 Hz bandwidth.

The conversion factor is $10 \cdot \lg \frac{1}{\text{Channel} \cdot \text{Bandwidth}}$.

IEC/IEEE bus command: :CALC:MARK:FUNC:POW:RES:PHZ
 ON|OFF

For manual setting of the test parameters different from the settings made with *ADJUST SETTINGS* the following should be observed:

Frequency span The frequency span has to cover at least all channels to be measured. For channel power measurement this is the channel bandwidth. If the frequency span is large compared to the frequency section (or frequency sections) under test, only a few pixels are available to be measured.


Resolution bandwidth (RBW) To ensure both an acceptable measurement speed and the required selection (to suppress spectral components outside the channel to be measured, especially of the adjacent channels), the resolution bandwidth must not be selected too small or too large. As a general approach, the resolution bandwidth is to be set to values between 1% and 4% of the channel bandwidth. A larger resolution bandwidth can be selected if the spectrum within the channel to be measured and around it has a flat characteristic.

Video bandwidth (VBW) For a correct power measurement, the video signal must not be limited in bandwidth. A restricted bandwidth of the logarithmic video signal would cause signal averaging and thus result in a too low indication of the power (-2.51 dB at very low video bandwidths). The video bandwidth should therefore be selected at least three times the resolution bandwidth.

The *ADJUST SETTINGS* softkey sets the video bandwidth (VBW) as a function of the channel bandwidth as follows:

$$VBW \geq 3 \times RBW.$$

Detector The *ADJUST SETTINGS* softkey selects the RMS detector. The RMS detector is selected since it correctly indicates the power irrespective of the characteristics of the signal to be measured. In principle, the sample detector would be possible as well. Due to the limited number of trace pixels used to calculate the power in the channel, the sample detector would yield less stable results. Averaging, which is often performed to stabilize the measurement results, leads to a too low-level indication and should therefore be avoided. The reduction in the displayed power depends on the number of averages and the signal characteristics in the channel to be measured.

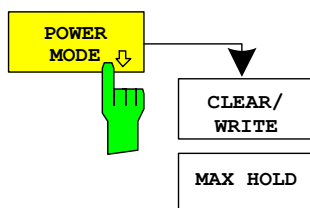


The *POWER MODE* submenu allows you to change between the normal (*CLEAR/WRITE*) and the *MAX HOLD* power mode. In the *CLEAR/WRITE* mode the channel power and the adjacent channel powers are calculated directly from the current trace. In *MAX HOLD* mode, the power values are still derived from the current trace, but they are compared with a maximum algorithm to the previous power value. The greater value is retained.

IEC/IEEE bus command:

```
:CALC:MARK:FUNC:POW:MODE WRIT|MAXH
```

Signal Power Check – SPECTRUM EM MASK

Key MEAS

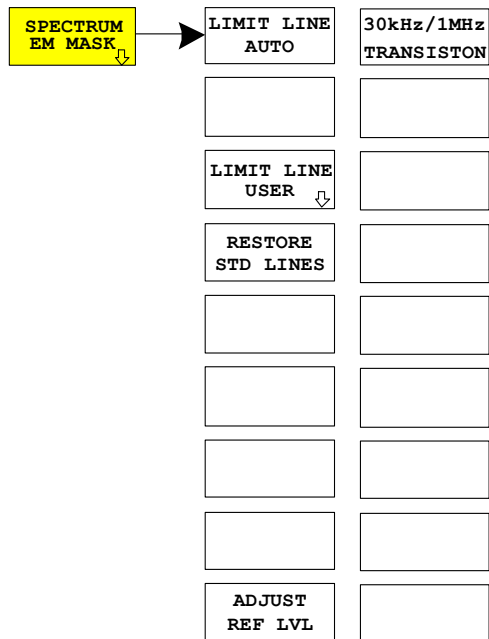

The *SPECTRUM EM MASK* softkey starts the determination of the power of the 3GPP FDD signal in defined offsets from the carrier and compares the power values with a spectral mask specified by 3GPP.

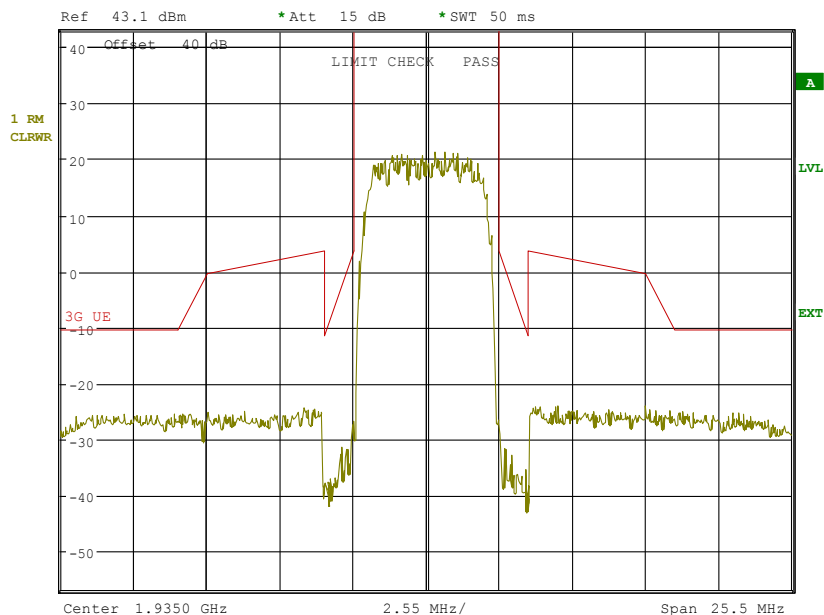



Fig. 6 Measurement of Spectrum Emission Mask.

Pressing the softkey activates the analyzer mode with defined settings:

SYSTEM PRESET		
After PRESET the following user-specific settings are restored and so the adaptation to the DUT is maintained: Reference Level , Reference Level Offset Center Frequency, Frequency Offset Input Attenuation, Mixer Level All trigger settings		
CHAN PWR / ACP	CP / ACP ON	
CP / ACP STANDARD	W-CDMA 3GPP REV	
CP / ACP CONFIG	NO. OF ADJ CHAN	0
SPAN		25.5 MHz
BW	SWEEP TIME MANUAL	50 ms

IEC/IEEE bus command: :CONF:WCDPower:MEAS ESP


Query of results: :CALC:LIM:FAIL? and visual evaluation

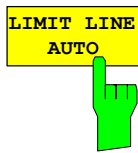

The *LIMIT LINE AUTO* softkey automatically calculates the limit line according to power determined in the useful channel. If the measurement is carried out in *CONTINUOUS SWEEP* and the channel power changes from sweep to sweep, this can result in the limit line being continuously redrawn.

The softkey is activated when the spectrum emission mask measurement is entered.

IEC/IEEE bus command: :CALC:LIM:ESP:MODE AUTO

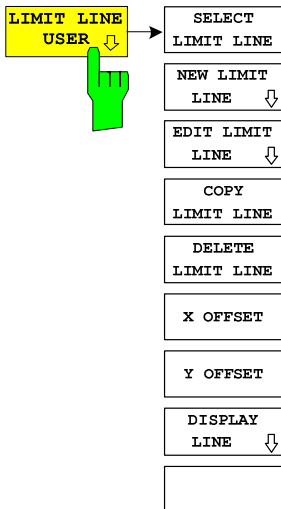

The *LIMIT LINE USER* softkey activates the input of user-defined limit lines. The softkey opens the menus of the limit line editor that are known from the basic unit.

The following limit line settings are useful for user equipment tests:
Trace 1, Domain Frequency, X-Scaling relative, Y-Scaling absolute, Spacing linear, Unit dBm

In contrast to the predefined limit lines supplied with the analyzer which correspond to the standard specifications, the user-defined limit line can be specified for the entire frequency range (± 12.5 MHz from carrier) either relatively (referred to the channel power) or absolutely.


IEC/IEEE bus command: see

Table of Softkeys with Assignment of IEC/IEEE Commands



The *RESTORE STD LINES* softkey restores the limit lines defined in the standard to the state they were in when the unit was delivered. This prevents inadvertent overwriting of the standard lines.

IEC-Bus-Befehl: :CALC:LIM:ESP:REST

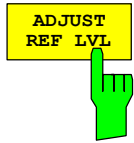


The *ADJUST REF LVL* softkey adjusts the analyzer reference level to the total signal power measured.

The softkey becomes active after the first sweep has been terminated with the measurement of the occupied bandwidth and the total signal power is known.

The adjustment of the reference level ensures that the instrument signal path is not overdriven and that the dynamic range is not limited by a reference level that is too low.

IEC-Bus-Befehl: SENS:POW:ACH:PRES:RLEV

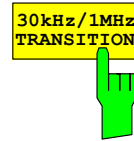


The *30kHz/1MHz TRANSITION* softkey specifies the offset frequency at which the resolution bandwidth is changed between 30 kHz and 1 MHz.

The default value is 3.5 MHz.

IEC/IEEE bus command:: :CALC2:LIM:ESP:TRAN 3 MHz

Measurement of Occupied Bandwidth - OCCUPIED BANDWIDTH

Key MEAS

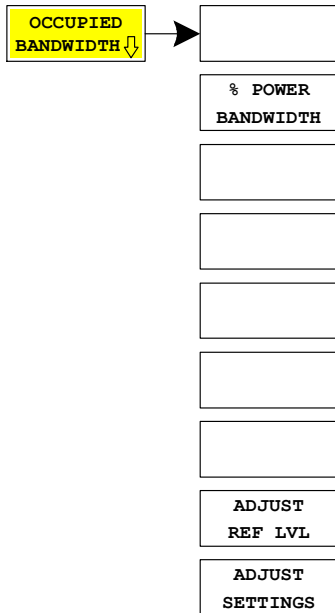

The *OCCUPIED BANDWIDTH* activates the measurement of the bandwidth of the signal.

The occupied bandwidth is defined as the bandwidth in which 99% of the total transmitter power is contained. The percentage of the signal power to be included in the bandwidth measurement can be changed. The occupied bandwidth and the frequency markers are output in the marker info field at the top right edge of the screen.

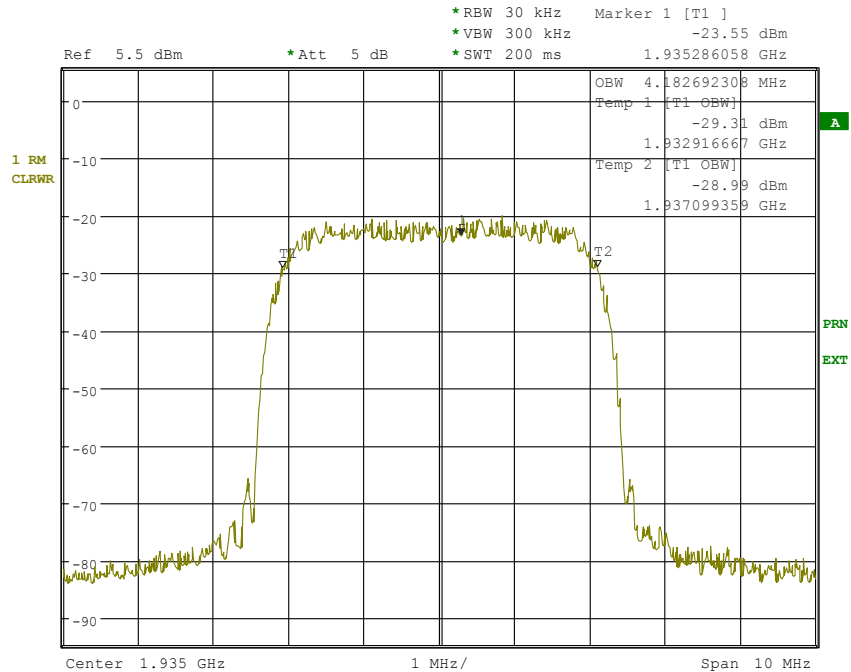



Fig. 7 Measurement of occupied bandwidth.

Pressing the softkey activates the analyzer mode with defined settings:

SYSTEM PRESET		
After PRESET the following user-specific settings are restored and so the adaptation to the DUT is maintained:		
Reference Level, Reference Level Offset		
Center Frequency, Frequency Offset		
Input Attenuation, Mixer Level		
All trigger settings		
OCCUPIED BANDWIDTH		
TRACE 1	DETECTOR	RMS


IEC/IEEE bus command: :CONF:WCDP:MEAS OBAN

Query of results: :CALC:MARK:FUNC:POW:RES? OBAN

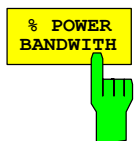

The *% POWER BANDWIDTH* softkey opens the entry of the percentage of power related to the total power in the displayed frequency range which defines the occupied bandwidth (percentage of total power). The valid range of values is 10% to 99.9%.


IEC/IEEE bus command: SENS:POW:BWID 99PCT

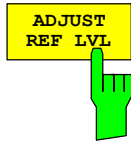

The *ADJUST REF LVL* softkey adjusts the reference level of the analyzer to the measured channel power. This ensures that the settings of the RF attenuation and the reference level are optimally adjusted to the signal level without overloading the instrument or limiting the dynamic range by a too small S/N ratio.

Since the measurement bandwidth for channel power measurements is significantly lower than the signal bandwidth, the signal path may be overloaded although the trace is still significantly below the reference level.

IEC/IEEE bus command: `SENS:POW:ACH:PRES:RLEV`

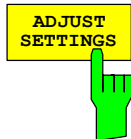

The *ADJUST SETTINGS* softkey automatically optimizes the instrument settings for the selected power measurement (see below).

All instrument settings relevant for a power measurement within a specific frequency range (channel bandwidth) are optimized for the selected channel configuration (channel bandwidth, channel spacing):

- Frequency span:

The frequency span has to cover at least all channels to be considered.

When measuring the channel power, 2 x channel bandwidth is set as span.

The setting of the span during adjacent-channel power measurement is dependent on the channel spacing and channel bandwidth of the adjacent channel ADJ, ALT1 or ALT2 with the largest distance from the transmission channel.

- Resolution bandwidth $RBW \leq 1/40$ of channel bandwidth
- Video bandwidth $VBW \geq 3 \times RBW$
- Detector RMS detector

Trace math and trace averaging functions are switched off.


The reference level is not influenced by *ADJUST SETTINGS*. It can be separately adjusted with *ADJUST REF LVL*.

The adjustment is carried out only once; if necessary, the instrument settings can be changed later.

IEC/IEEE bus command: `SENS:POW:ACH:PRES:OBW`

Measurement of Signal Statistics

Key MEAS

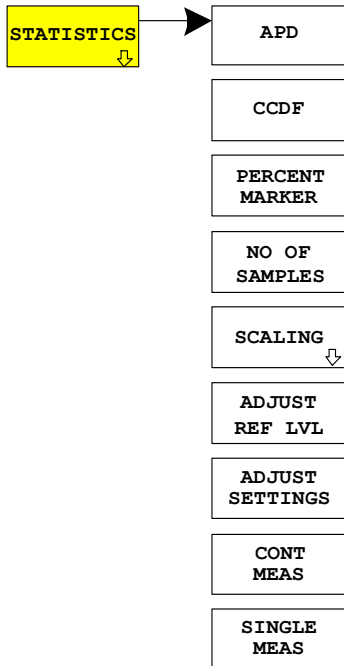

The *STATISTICS* softkey starts a measurement of the distribution function of the signal amplitudes (complementary cumulative distribution function). The measurement can be switched to amplitude power distribution (APD) by means of the menu softkeys.

For the purposes of this measurement, a signal section of settable length is recorded continuously in the zero span, and the distribution of the signal amplitudes is evaluated. The record length and display range of the CCDF can be set using the softkeys of the menu. The amplitude distribution is displayed logarithmically as a percentage of the amount by which a particular level is exceeded, beginning with the average value of the signal amplitudes.

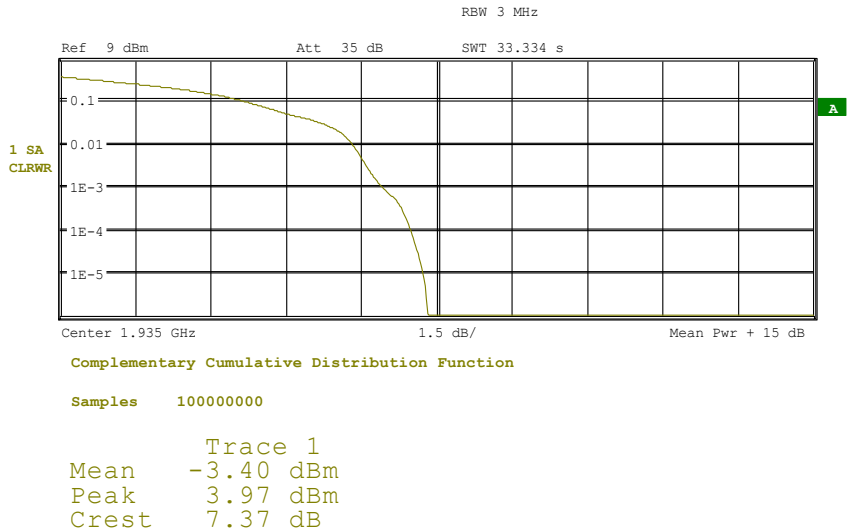


Fig. 8 CCDF of 3GPP FDD signal.


Pressing the softkey activates the analyzer mode with defined settings:

SYSTEM PRESET		
After PRESET the following user-specific settings are restored and so the adaptation to the DUT is maintained:		
	Reference Level , Reference Level Offset	
	Center Frequency, Frequency Offset	
	Input Attenuation, Mixer Level	
	All trigger settings	
SIGNAL STATISTIC		
TRACE1	DETECTOR	SAMPLE
BW	RES BW MANUAL	10 MHz
	VIDEO BW MANUAL	5 MHz

Starting from these settings, the instrument can be operated in all functions available in the analyzer mode, i.e. all test parameters can be adapted to the requirements of the specific measurement.


IEC/IEEE bus command: :CONF:WCDP:MEAS CCDF
 or
 :CALCu:STAT:CCDF ON

Query of results: :CALC:MARK:X?

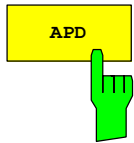

The *APD ON/OFF* softkey switches on the amplitude probability distribution function. When the APD function is switched on, the CCDF function is switched off automatically.

IEC/IEEE bus command: `:CALC:STAT:APD ON`

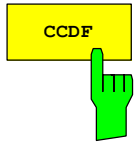

The *CCDF ON/OFF* softkey switches on the complementary cumulative distribution function. When the CCDF function is switched on, the APD function is switched off automatically.

IEC/IEEE bus command: `:CALC:STAT:CCDF ON`




If the CCDF function is active, the *PERCENT MARKER* softkey allows to position marker 1 by entering a probability value. Thus, the power that is exceeded with a given probability can be determined very easily. If marker 1 is in the switched-off state, it will be switched on automatically.

IEC/IEEE bus command: `:CALC:MARK:Y:PERC 0...100%`




NO OF SAMPLES softkey sets the number of power measurements taken into account for the statistics. Please note that the overall measurement time is influenced by the number of samples selected as well as by the resolution bandwidth set up for the measurement as the resolution bandwidth directly influences the sampling rate.

IEC/IEEE bus command: `:CALC:STAT:NSAM <value>`



- X-AXIS REF LEVEL
- X-AXIS RANGE
-
- Y-AXIS MAX VALUE
- Y-AXIS MIN VALUE
-
- ADJUST SETTINGS
-
- DEFAULT SETTINGS

The *SCALING* softkey opens a sub menu that allows changing the scaling parameters for both the x- and the y-axis.

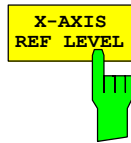


The *X-AXIS REF LEVEL* softkey changes the level settings of the instrument and sets the maximum power to be measured.

The function is identical to softkey *REF LEVEL* in menu *AMPT*.

For the *APD* function this value is mapped to the right diagram border. For the *CCDF* function there is no direct representation of this value on the diagram as the x-axis is scaled relatively to the *MEAN POWER* measured.


IEC/IEEE command: `CALC:STAT:SCAL:X:RLEV <value>`

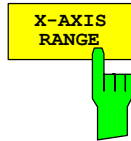

The *X-AXIS RANGE* softkey changes the level range to be covered by the statistics measurement selected.

The function is identical to softkey *RANGE LOG MANUAL* in menu *AMPT*.


IEC/IEEE bus command: `CALC:STAT:SCAL:X:RANG <value>`

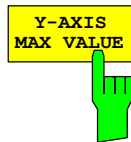

The *Y-AXIS MAX VALUE* softkey defines the upper limit of the displayed probability range.

Values on the y-axis are normalized which means that the maximum value is 1.0. As the y-axis scaling has a logarithmic axis the distance between max and min value must be at least one decade.


IEC/IEEE command: `CALC:STAT:SCAL:Y:UPP <value>`

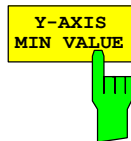

The *Y-AXIS MIN VALUE* softkey defines the lower limit of the displayed probability range.

As the y-axis scaling has a logarithmic axis the distance between max and min value must be at least one decade. Valid values are in the range $0 < \text{value} < 1$.

IEC/IEEE bus command: `CALC:STAT:SCAL:Y:LOW <value>`

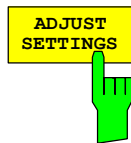


The *ADJUST SETTINGS* softkey optimizes the level settings of the analyzer according to the measured peak power in order to gain maximum sensitivity of the instrument.

The level range is adjusted according to the measured difference between peak and minimum power for *APD* measurement and peak and mean power for *CCDF* measurement in order to obtain maximum power resolution.

Additionally the probability scale is adapted to the selected number of samples.

IEC/IEEE bus command: `CALC:STAT:SCAL:AUTO ONCE`

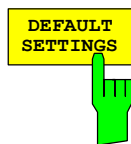

The *DEFAULT SETTINGS* softkey resets the x- and y-axis scalings to their PRESET values.

x-axis reference level: -20 dBm


x-axis range APD: 100 dB

x-axis range CCDF: 20 dB

y-axis upper limit: 1.0

y-axis lower limit: 1E-6

IEC/IEEE bus command: `CALC:STAT:PRES`

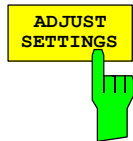


The *ADJUST SETTINGS* softkey optimizes the level settings of the analyzer according to the measured peak power in order to gain maximum sensitivity of the instrument.

The level range is adjusted according to the measured difference between peak and minimum power for APD measurement and peak and mean power for CCDF measurement in order to obtain maximum power resolution.


Additionally the probability scale is adapted to the selected number of samples.

IEC/IEEE bus command: `CALC:STAT:SCAL:AUTO ONCE`

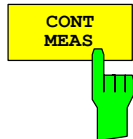

The *CONT MEAS* softkey starts collecting a new sequence of sample data and calculating the APD or CCDF curve depending on the selected measurement. The next measurement is started automatically as soon as the indicated number of samples has been reached ("CONTInuous MEASUrement").

IEC/IEEE bus command: `INIT:CONT ON;`
`INIT:IMM`

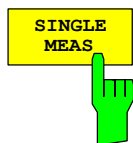

The *SINGLE MEAS* softkey starts collecting a new sequence of sample data and calculating the APD or CCDF curve depending on the selected measurement. At the beginning of the measurement previously obtained measurement results are discarded.

IEC/IEEE bus command: `INIT:CONT OFF;`
`INIT:IMM`

Code Domain Measurements on 3GPP FDD Signals

Application Firmware R&S FS-K73 provides the peak code domain error measurement, an EVM measurement of the total signal (composite EVM), prescribed by the 3GPP standard, as well as the code domain power measurement of assigned and unassigned codes. In addition, the symbols demodulated in a slot, the decided bits or the EVM symbol can be displayed for an active channel.

Two signal recording modes are available with Application Firmware R&S FS-K73, depending on the spectrum analyzer on which the firmware is run:

- With Spectrum Analyzer R&S FSP, a section of approx. 2 ms is recorded. This section is searched for the beginning of an arbitrarily selected slot of the 3GPP FDD signal. All analyses are carried out for this slot only. This cuts processing time by a factor of ten compared with the analysis of a complete frame, i.e. it saves approx. 90% processing time.
- With Spectrum Analyzers R&S FSU or R&S FSQ, the user can choose between slot analysis (recording length approx. 2 ms) and frame analysis (recording length approx. 20 ms without multi frame capture), see *MEASURE SLOT/FRAME* softkey. In the latter case, the recorded signal section is searched for the beginning of a 3GPP FDD frame. Starting at the beginning of such a frame, 15 consecutive slots are analyzed. Frame analysis offers additional display modes compared with slot analysis:

POWER VERSUS SLOT: display of channel power over complete frame

COMPOSITE EVM: display of composite EVM over all slots of a frame

PEAK CODE DOMAIN ERR: display of peak code domain error over all slots of a frame

The two signal recording modes are described jointly in the following. For each softkey/each display mode it is stated to what recording mode it applies (slot or frame analysis). In figures, frame analysis is shown always. The two recording modes can be selected on the spectrum analyzers as follows:

Slot analysis (result length one slot): Spectrum Analyzer R&S FSP or
Spectrum Analyzer R&S FSU or R&S FSQ with *MEASURE*

SLOT

Frame analysis (result length one frame): Spectrum Analyzer R&S FSU or R&S FSQ with *MEASURE*
FRAME

Application firmware R&S FS-K73 offers two different ways of representing the code domain power measurement:

- Representation of all code channels
 - Option R&S FS-K73 displays the power of all occupied code channels in a bargraph. The X-axis is scaled for the highest code class or the highest spreading factor (256). Code channels with a lower spreading factor occupy correspondingly more channels of the highest code class. The power of the code channel is always correctly measured in accordance with the actual power of the code channel. Unused code channels are assumed to belong to the highest code class and displayed accordingly. The displayed power of an unused code channel therefore corresponds to the power of a channel with the spreading factor 256 at the respective code position.
 - To simplify identification, used and unused channels are displayed in different colours. Used channels are yellow, unused channels are blue.
- The measured power always refers to one slot. The time reference for the start of slot 0 is the start of the 3GPP FDD frame.
- Representation of channel power versus slots of a 3GPP FDD signal frame (result length one frame only)
 - In this case the power of a selectable code channel is indicated versus a frame. The power is always measured within one slot of the selected channel. The time reference for the start of slot 0 is the start of the 3GPP FDD frame.

The measurements symbol EVM, symbol constellation diagram and bitstream are always referred to one slot of the selected channel.


The composite EVM and peak code domain error measurements are always referred to the total signal. For code domain power (CDP) measurements, the display is operated in the SPLIT SCREEN mode. Only those display modes having the codes of the class with the highest spreading factor as basis for the x-axis are permitted in the upper part of the screen, all other display modes are assigned to the lower part of the screen.

For code domain power measurement, R&S FS-K73 expects the Dedicated Physical Control Channel (DPCCH) to be part of the signal.

There are two modes for the CDP analysis. In the *CODE CHAN AUTOSEARCH* mode, R&S FS-K73 performs an automatic search for active channels in the whole code domain. The channel search is based on the power of the channels and on a signal/noise ratio that should not be exceeded within the channel. In the *CODE CHAN PREDEFINED* mode, the user can define the active channels contained in the signal via tables that can be selected and edited.

Display modes – RESULTS hotkey

Hotkey RESULTS

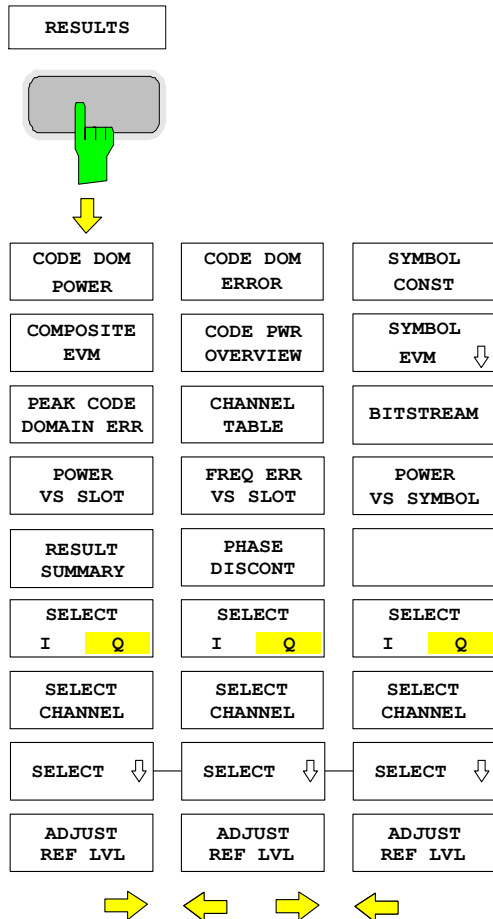

The *RESULTS* hotkey opens a submenu for setting the display mode. The main menu contains the most important display modes as well as the measurements specified by the 3GPP standard for fast access, whereas the side menus contain more detailed display modes.

The following display modes are available:

CODE DOM POWER

Code domain power with relative or absolute scaling (*scaling depends on Toggle Key SETTINGS → CODE PWR ABS / REL*)

COMPOSITE EVM

(Square difference between test signal and ideal reference signal (*Frame mode only reference to SETTINGS → MEASURE SLOT / FRAME*))

PEAK CODE DOMAIN ERR

Projection of the error between the test signal and the ideal reference signal onto Code Class 8 and subsequent summation using the symbols of each slot of the difference signal. (*Frame mode only reference to SETTINGS → MEASURE SLOT / FRAME*)

POWER VS SLOT

Power of the selected channel versus all slots of a 3GPP FDD signal frame. (*Frame mode only reference to SETTINGS → MEASURE SLOT / FRAME*)

RESULT SUMMARY

Tabular result display

CODE DOM ERROR

Projection of the error between the test signal and the ideal reference signal onto Code Class 8 (CC8) and subsequent averaging using the CC8 symbols of the selected channel slot of the difference signal. The error power is related to the total power of the selected slot and displayed for each code number of CC8.

CODE PWR OVERVIEW

Code domain power (I and Q component simultaneously)

CHANNEL TABLE

Display of channel occupation table

POWER VS SYMBOL

Display of symbol power at the selected slot

SYMBOL CONST

Display of constellation diagram

SYMBOL EVM

Display of error vector magnitude diagram

BITSTREAM

Display of decided bits

SELECT I/Q

The displayed component of the signal can be selected.

SELECT CHANNEL

By entering a channel number (*SELECT CHANNEL* softkey) in the modes *CODE DOMAIN POWER* or *CHANNEL TABLE*, it is possible to mark a channel for more detailed display modes

POWER VS SLOT
RESULT SUMMARY
POWER VS SYMBOL
SYMBOL CONST
SYMBOL EVM
BITSTREAM

SELECT SLOT

(*Frame mode only reference to SETTINGS → MEASURE SLOT / FRAME*). In the following display modes, a slot can be marked by entering a slot number using the *SELECT SLOT* softkey:

POWER VS SLOT
PEAK CODE DOMAIN ERROR
COMPOSITE EVM

The following measurement results are displayed for the selected slot:

CODE DOMAIN POWER
RESULT SUMMARY
CODE DOMAIN ERROR POWER
CHANNEL TABLE
POWER VS SYMBOL
SYMBOL CONST
SYMBOL EVM
BITSTREAM

ADJUST REF LVL

Optimal matching of the reference level to the signal level can be achieved.

Above the diagram, the most important measurement settings, which form the basis of the display modes, are summarized:

```
Code Power Relative          SR 960 ksp/s
                             Chan Code 2
CF 1.935 GHz      Slot # 0   Mapping Q
```

Fig. 9 Indication of measurement parameters

The different elements are:

1st column:

Code Power Relative: Name of selected display mode
 {empty}
 CF 1.935 GHz: Center frequency of signal


2nd column:

{empty}
 {empty}
 Slot # 0: Slot number (value of *SELECT SLOT* softkey)
 This value is only displayed at a result length of one frame.

3rd column:

SR 30 ksp/s: Symbol rate of selected channel
 Chan Code 69: Spreading code of selected channel
 Mapping Q: Selected component of the channel

Note: For the peak code domain error display mode, the indication of the symbol rate is replaced by the indication of the spreading factor onto which the error is projected (see *PEAK CODE DOMAIN ERR* softkey)

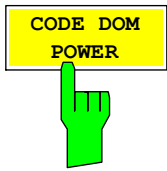

The *CODE DOM POWER* softkey selects the code domain power display mode.

The scaling of the displayed result depends on the softkey SETTINGS → CODE PWR ABS / REL. In case of a relative display (REL), the power of the channels is referenced to the total power of the selected slot. The values are specified in dB. In case of an absolute display (ABS), the absolute power values are specified in dBm.

The measurement interval for determining the power of the channels is one slot. The time reference for the start of slot 0 is the start of the 3GPP FDD frame.

The powers of the active channels and of the unassigned codes are shown in different colours:

- yellow: active channels
- blue: unassigned codes

In the *CODE CHAN AUTOSEARCH* mode, a data channel is designated as active if its power has a minimum value compared to the total power of the signal and if a minimum signal/noise ratio is maintained within the channel.

In *CODE CHAN PREDEFINED* mode, each data channel that is included in the user defined channel table is considered to be active.

The received pilot symbols of the DPCCH are compared to the prescribed pilot symbols of the 3GPP standard. If some of these pilot symbols are not equal to the symbols of the 3GPP standard a message "INCORRECT PILOT" is displayed.

By entering a channel number (see *SELECT CHANNEL* softkey) it is possible to mark a channel for more detailed display modes. The marked channel is shown in red. The whole channel is marked if it is an assigned channel, and only the entered code is marked in the case of an unassigned code.

The display mode for the path of representation and the slot can be varied using the *SELECT I/Q* and *SELECT SLOT* (frame analysis only) softkeys.

Selecting other display modes (e.g. *SYMBOL CONSTELLATION*) for unassigned codes is possible but not useful since the results are not valid.

The figure shows the relative CDP representation of the Q path for 3 data channels that are active in this path.

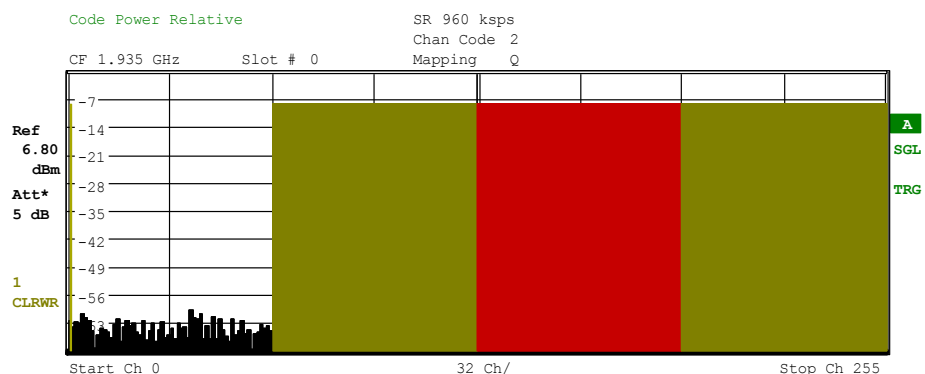


Fig. 10 Code domain power, branch Q

```

IEC/IEEE bus command: :CALC1:FEED "XPOW:CDP"
                      :CALC1:FEED "XPOW:CDP:ABS"
                      :CALC1:FEED "XPOW:CDP:RAT"
    
```



The *COMPOSITE EVM* softkey selects the composite EVM display mode according to 3GPP specification. The softkey is only valid if one frame of the 3GPP signal is analyzed.

During the composite EVM measurement, the square root of the squared errors between the real and imaginary parts of the test signal and an ideal reference signal (EVM referred to the total signal) is determined. Composite EVM thus is a measurement of the composite signal.

The measurement result consists of one composite EVM measurement value per slot. The time reference for the start of slot 0 ist the start of the 3GPP FDD frame.

Only the channels recognized as active are used to generate the ideal reference signal. If an assigned channel is not recognized, the difference between the measurement and reference signal and the composite EVM is very high.


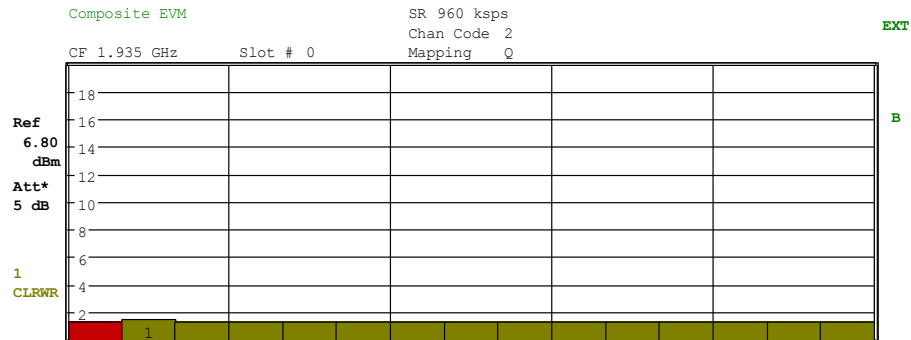


Fig. 11 Display of composite EVM

IEC/IEEE bus command: :CALC2:FEED "XTIM:CDP:MACCuracy"

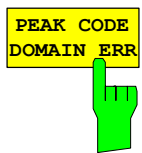

The *PEAK CODE DOMAIN ERR* softkey selects the peak code domain error display mode. The softkey is only valid if one frame of the 3GPP signal is analyzed.

In line with the 3GPP specifications, the error between the measurement signal and the ideal reference signal is projected onto the various spreading factors. The desired spreading factor is selected via a table that is shown after the softkey has been pressed.

The result consists of a numerical value per slot for the peak code domain error value. The time reference for the start of slot 0 ist the start of the 3GPP FDD frame.

Only the channels recognized as active are used to generate the ideal reference signal for the peak code domain error. If an assigned channel is not recognized, the difference between the measurement and reference signal is very high. R&S FS-K73 consequently indicates a peak code domain error that is too high.


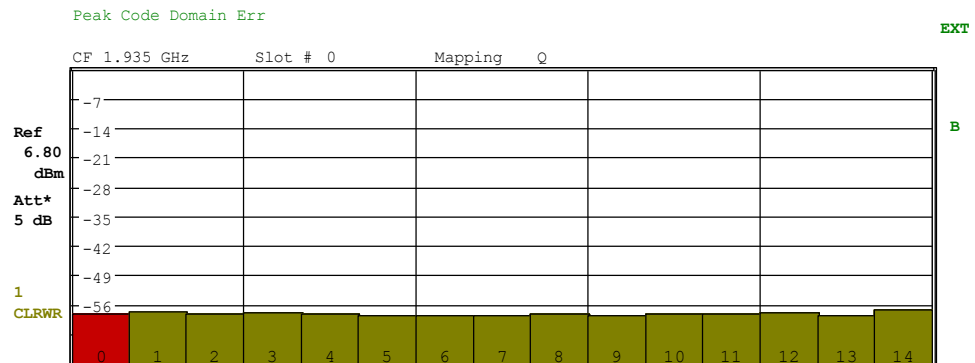


Fig. 12 Display of Peak code domain error

IEC/IEEE bus command: :CALCulate2:FEED "XTIM:CDP:ERR:PCDomain"

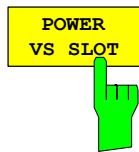

The *POWER VS SLOT* softkey selects the indication of the power of the selected code channel depending on the slot number. The power of the selected channel (marked red in the CDP diagram) is displayed versus all slots of a frame of the 3GPP FDD signal. The softkey is only valid if one frame of the 3GPP signal is analyzed.

Beginning at the start of the 3GPP FDD frame, 15 successive slots are displayed. The power is shown in absolute scaling.

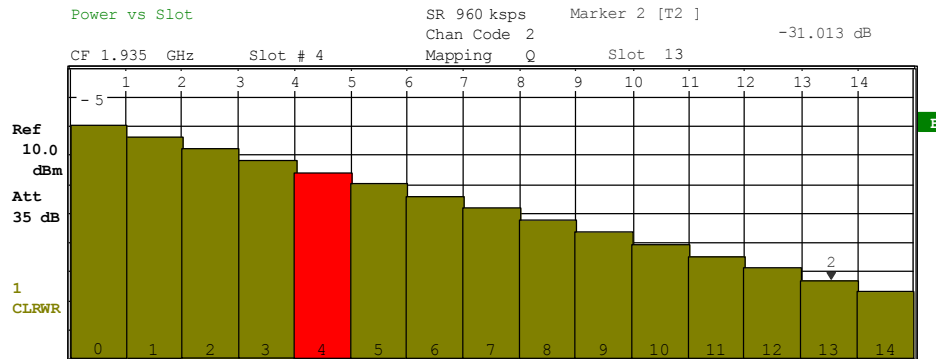


Fig. 13 Power versus Slot measurement for an active channel

It is not only possible to select a code channel in the CDP diagram, but also to mark a slot in the power-versus-slot diagram. Marking is done by entering the slot number (see *SELECT SLOT* softkey) and the selected slot is marked in red. For more detailed displays, the marked slot of the channel is selected (see *SLOT #* entry in the function panels above the diagrams in the Figures).

Modifying a slot number has the following effects:

- The CDP diagram in the upper half of the display is updated referred to the entered slot number.
- All results that depend on the selected slot are recalculated for selected channel. The relevant graphics are updated.

IEC/IEEE bus command: :CALC2:FEED "XTIM:CDP:PVSL"



The *RESULT SUMMARY* softkey selects the numerical display of all results. The display is subdivided as follows:

GLOBAL RESULTS FOR FRAME 0:			
Total Power	-25.92 dBm	Carrier Freq Error	-730.51 Hz
Chip Rate Error	3.05 ppm	Trigger to Frame	3.216807 ms
IQ Offset	0.11 %	IQ Imbalance	0.02 %
Composite EVM	1.76 %	Pk CDE (15 kps)	-56.45 dB
Slot No	0	No of Active Chan	4
CHANNEL RESULTS			
Symbol Rate	15.00 kps	RHO	0.99970
Channel Code	0	Timing Offset	0 Chips
No of Pilot Bits	6	Channel Mapping	Q
Channel Power Rel	-3.42 dB	Modulation Type	QPSK
Symbol EVM	0.14 % rms	Channel Power Abs	-29.35 dBm
		Symbol EVM	0.28 % Pk

Fig. 14 Display of Result Summary

The upper part contains the results relating to the total signal:

Total Power: Outputs the total signal power (average power of total evaluated 3GPP FDD frame).

Carrier Freq Error: Outputs the frequency error referred to the center frequency of the analyzer. The absolute frequency error is the sum of the analyzer and DUT frequency error. Differences of more than 1 kHz between transmitter and receiver frequency impair the synchronization of the CDP measurement. For this reason, the transmitter and receiver should be synchronized (see chapter Getting Started).

Chip Rate Error: Outputs the chip rate error in ppm. As a result of a high chip rate error symbol errors arise and the CDP measurement is possibly not synchronized to the 3GPP FDD signal. The result is valid even if the synchronization of analyzer and signal failed.

Trigger to Frame: This result outputs the timing offset from the beginning of the recorded signal section to the start of the analyzed 3GPP FDD frame. In the case of triggered data collection, this timing offset is identical with the timing offset of frame trigger (+ trigger offset) – frame start. In the case of failure of the synchronization of analyzer and 3GPP FDD signal, the value of Trigger to Frame is not significant.

IQ Offset: DC offset of the signal in % (see Explanation of IQ impairment modelExplanation of IQ impairment model)

IQ Imbalance: IQ imbalance of the signal in % (see Explanation of IQ impairment modelExplanation of IQ impairment model)

Composite EVM: The composite EVM is the difference between the test signal and the ideal reference signal (see *COMPOSITE EVM* softkey). The composite EVM value for the selected slot is given in the *RESULT SUMMARY*.

- Pk CDE: The *Pk CDE* measurement specifies a projection of the difference between the test signal and the ideal reference signal onto the selected spreading factor (see *PEAK CODE DOMAIN ERR* softkey). The Pk CDE value for the selected slot is indicated in the *RESULT SUMMARY*. The spreading factor onto which projection is made is shown beneath the measurement result.
 - No of Pilot Bits: Indicates the number of pilot bits detected in the control channel.
 - No of Active Chan: Indicates the number of active channels detected in the signal. Both the detected data channels and the control channels are considered active channels.
- The results of measurements on the selected channel (red in the CDP diagram) are displayed in the lower part of the *RESULT SUMMARY*.
- Symbol Rate: Symbol rate at which the channel is transmitted.
 - Slot Number: Number of slot for which the measurement is done (see *SELECT SLOT* softkey). The entry is only valid if one frame of the 3GPP signal is analyzed.
 - Channel Code: Number of the spreading code of the selected channel.
 - Chan Mapping: Component onto which the channel is mapped (I or Q)
 - Chan Pow rel. / abs.: Channel relative (referred to the total power of the signal) and absolute.
 - Symbol EVM Pk / rms: Peak or average of the results of the error vector magnitude measurement (see *SYMBOL EVM* softkey). The measurement provides information on the EVM of the channel (marked red) in the CDP diagram in the slot (marked red) of the power-versus-slot diagram at symbol level.
 - RHO: Quality parameter rho for every slot.
 - Timing Offset: Offset between the start of the first slot in the channel and the start of the analyzed 3GPP FDD frame.

IEC/IEEE bus command:

```

:CALC2:FEED "XTIM:CDP:ERR:SUMM"
:CALC1:MARK1:FUNC:WCDP:RES?
                PTOT | FERR | TFR | TOFF | MACC |
                PCD | EVMR | EVMP | CERR | CSL |
                SRAT | CHANn | CDP | CDPR |
                IQOF | IQIM | RHO
    
```

Explanation of IQ impairment model

In RF devices including analog mixers such as up-converter, the analog complex base band signal ($r(t)=r_I(t)+j*r_Q(t)$) is shifted to a real high frequency signal ($sHF(t)$) (Fig. 15). Each non-ideal complex mixer adds IQ impairments to the base band signal. Two of them, the IQ offset and the IQ imbalance are estimated by the R&S FS-K73. Both values are given in the Result Summary display. The estimation and display of IQ offset and IQ imbalance do NOT depend on the status of the NORMALIZE ON/OFF key. The key only controls an algorithm which compensates the IQ offset to normalize the constellation diagram to the origin.

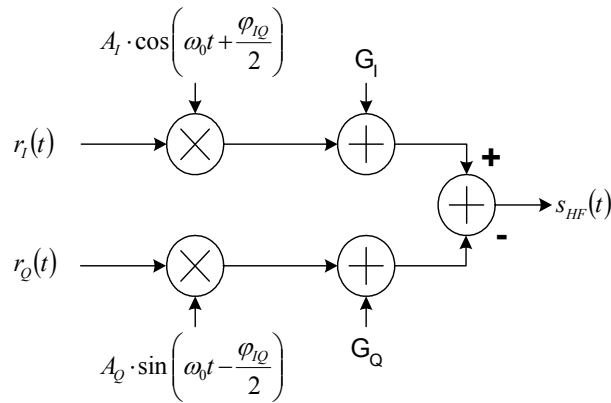


Fig. 15 Basic model of possible IQ impairment parameters in complex up converter devices.

IQ Offset The IQ offset is given in the Result Summary display. It represents a complex offset which leads to a shifted composite constellation diagram. The value is given relative to the mean power of the signal. It is calculated as follows:

$$offset_{IQ} = |g| \cdot 100\% = \sqrt{|g_I + j \cdot g_Q|^2} \cdot 100\% = \sqrt{\frac{G_I^2 + G_Q^2}{\frac{1}{T} \int_0^T |r(t)|^2 dt}} \cdot 100\%$$

where: $|g|$ - magnitude of the relative IQ offset
 g_I - relative IQ offset of the real part
 g_Q - relative IQ offset of the imaginary part
 G_I - absolute IQ offset of the real part
 G_Q - absolute IQ offset of the imaginary part
 $r(t)$ - complex base band signal (reference signal matching with optimum EVM assuming that AWGN is given)
 T - evaluation time ($T=666\mu\text{s} \rightarrow 1 \text{ slot}$)
 $offset_{IQ}$ - IQ offset parameter

IQ Imbalance The IQ imbalance is given in the Result Summary display. It represents a complex gain error between the mixer gain in the I path and the mixer gain in the Q path. We assume that a baseband signal $r(t)$ is multiplied by a complex analog oscillator with radian frequency $\omega_0=2\pi * f_0$ Fig. 15). The complex signal $r(t)$ can be split into a real part $\{r_I(t)\}$ and an imaginary part $\{r_Q(t)\}$. Using this assumption, an ideal complex local oscillator (LO_{ideal}) can also be described by two real sinusoidal signals with a phase offset of 90° . These signals are described as $\cos(\omega_0 t)$ and $\sin(\omega_0 t)$.

$$LO_{ideal} = A \cdot \exp(j\omega_0 t) = A \cdot \cos(\omega_0 t) + j \cdot A \cdot \sin(\omega_0 t)$$

The local oscillator is not ideal in an analog mixer. Normally there are two different amplitude values (A_I and A_Q) in each (Fig. 15) path. Moreover, an unwanted phase shift (ϕ_{IQ}) between the real part and the imaginary part of the local oscillator ($LO_{impairment}$) may occur. Considering these impairments a non ideal LO can be described as follows:

$$LO_{impairment} = A_I \cdot \cos\left(\omega_0 t + \frac{\varphi_{IQ}}{2}\right) + j \cdot A_Q \cdot \sin\left(\omega_0 t - \frac{\varphi_{IQ}}{2}\right)$$

The IQ imbalance expresses the relative gain error of the mixer. It is calculated as follows:


$$imbalance_{IQ} = \sqrt{\frac{\left|A_I \cdot \exp\left(j \frac{\varphi_{IQ}}{2}\right) - A_Q \cdot \exp\left(-j \frac{\varphi_{IQ}}{2}\right)\right|^2}{\left|A_I \cdot \exp\left(j \frac{\varphi_{IQ}}{2}\right) + A_Q \cdot \exp\left(-j \frac{\varphi_{IQ}}{2}\right)\right|^2}} \cdot 100\%$$

where: A_I - amplitude mixer gain of the real part
 A_Q - amplitude mixer gain of the imaginary part
 φ_{IQ} - additional phase shift between real part and imaginary part
 $imbalance_{IQ}$ - IQ imbalance parameter

Note: *In 3GPP UPLINK signals, each code channel is BPSK-modulated. The BPSK symbols are sent to the I path or Q path. This is controlled by higher layer functionalities. In signals of lower data rates with only one data channel, IQ impairments may affect the detected code channel configuration. IQ impairments result in a power leakage from the I path to the Q branch and vice versa. This power leakage increases the channel power in the non-active channels and slightly decreases the power in the active channels. If the IQ impairments are enlarged, the leakage power is also enlarged and may cause a false detection of non-active channels in the code channel. If these leakage power code channels are detected as active channels, the displayed values of the IQ impairments and composite error vector magnitude (EVM) are decreased.*

The displayed IQ impairments and the EVM value are calculated based on a comparison between an estimated ideal baseband signal and the received signal. The fact that it depends on the detected channel configuration can be explained as follows: the estimated ideal signal based on a channel configuration including these additionally detected leakage power channels matches far better with the received signal than the estimated ideal signal. This estimated ideal signal is based on a channel configuration of actually sent active channels.

A false detection of leakage power channels is indicated in the code domain power display (CDP) where all active channels are highlighted in yellow. All active channels are yellow. Yellow channels of low power and high data rate are most likely code channels. To suppress these channels, a PREDEFINED channel table can be used. A predefined channel table can be set via the CHAN CONF menu. This menu is selected by a softkey at the bottom of the screen.

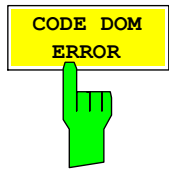

The *CODE DOM ERROR* softkey selects the code domain error power (CDEP) display mode. The displayed error power is always referred to the total power. The code domain error power (CDEP) is calculated by subtracting a chip-stream of a generated reference signal ($chip_{ref}$) from the received chips ($chip_{rec}$). This difference signal is de-spread to all 256 code channels of code class 8 ($Dspr_n$). The average power of the error symbols of the selected slot is related to the total power of the selected slot. The measurement interval for determining the CDEP of the channels is one slot.

$$CDEP = \frac{\frac{1}{N} \sum_{n=1}^N \left[\text{Re} \left\{ Dspr_n \left(chip_{rec} - chip_{ref} \right) \right\}^2 + \text{Im} \left\{ Dspr_n \left(chip_{rec} - chip_{ref} \right) \right\}^2 \right]}{\frac{1}{N} \sum_{n=1}^N \left[\text{Re} \left\{ Dspr_n \left(chip_{ref} \right) \right\}^2 + \text{Im} \left\{ Dspr_n \left(chip_{ref} \right) \right\}^2 \right]}$$

The powers of the active channels and of the unassigned codes are shown in different colours:

- yellow: active channels
- blue: unassigned codes

The CDEP is calculated for each channel of code class 8 (CC8). In case of an active code channel of a lower code class, all included CC8 channels are marked yellow. The power is displayed for each CC8 channel and not subsumed for all CC8 channels of the active channel.

By entering a channel number (see *SELECT CHANNEL* softkey), it is possible to mark a channel for more detailed display modes. The first CC8 code channel of a marked channel of a lower code class is shown in red.

The figure below shows the I and Q branch with no code domain error.

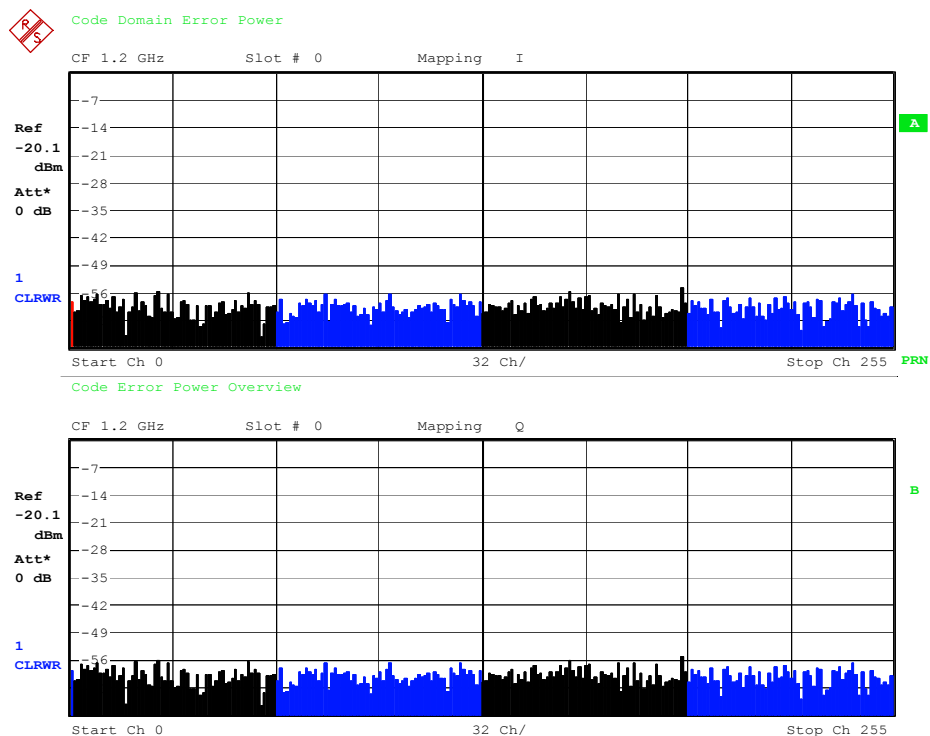


Fig. 16 Code domain error display: Signal with no code domain error in the I and Q branch

If a channel is not detected, a code domain error will occur. The power level of the error is similar to the power of the CC8 channels in the code range of the undetected code. This case is shown in the figure below.

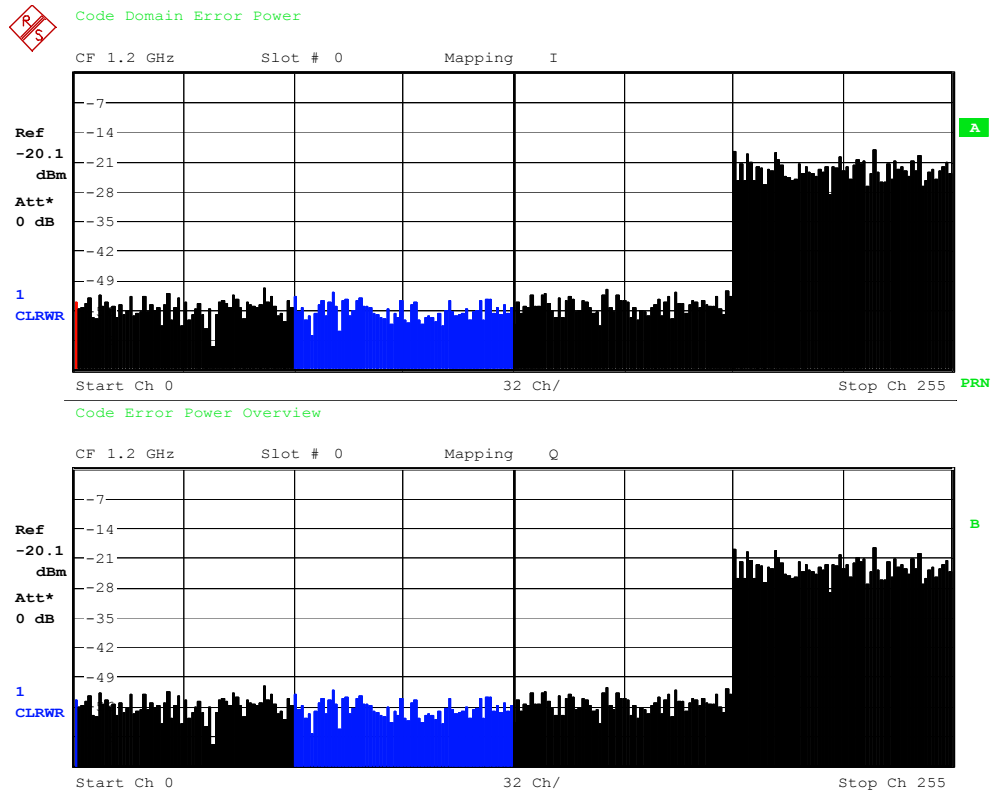


Fig. 17 Code domain error power with an unrecognized code channel in the I and Q branch.


IEC/IEEE bus command: :CALCulate<1>:FEED "XPower:CDEP"

Query of result: :TRAC1:DATA? TRAC1

Output: CDEP list of each CC8 channel
 Format: <code class>₁, <code number>₁, <CDEP>₁, <channel flag>₁,
 <code class>₂, <code number>₂, <CDEP>₂, <channel flag>₂,
 ,.....,
 <code class>₂₅₆, <code number>₂₅₆, <CDEP>₂₅₆, <channel flag>₂₅₆

Unit: < [1] >, < [1] >, < [dB] >, < [1] >
 Range: < 8 >, < 0...256 >, < -∞ ... ∞ >, < 0 ; 1 >
 Quantity: 256

Code class: Highest code class of a WCDMA signal is always set to 8 (CC8)
 Code number: Code number of the evaluated CC8 channel
 CDEP: Code domain error power value of the CC8 channel
 Channel flag: Indicates whether the CC8 channel belongs to an assigned code channel or not:
 Range: 0b00 0d0 - CC8 is inactive
 0b01 0d1 - CC8 channel belongs to an active code channel

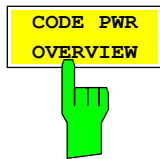

The *CODE PWR OVERVIEW* softkey enables screen B to show a code power display. By enabling the overview mode, both mappings (I mapping and Q mapping) are displayed. In this case the I mapping is displayed in screen A, which corresponds to trace 1, and the Q mapping is displayed in screen B, which corresponds to trace 2. The softkey can be used in code domain power (CDP) measurements for absolute or relative scaling as well as in code domain error power (CDEP) measurements.

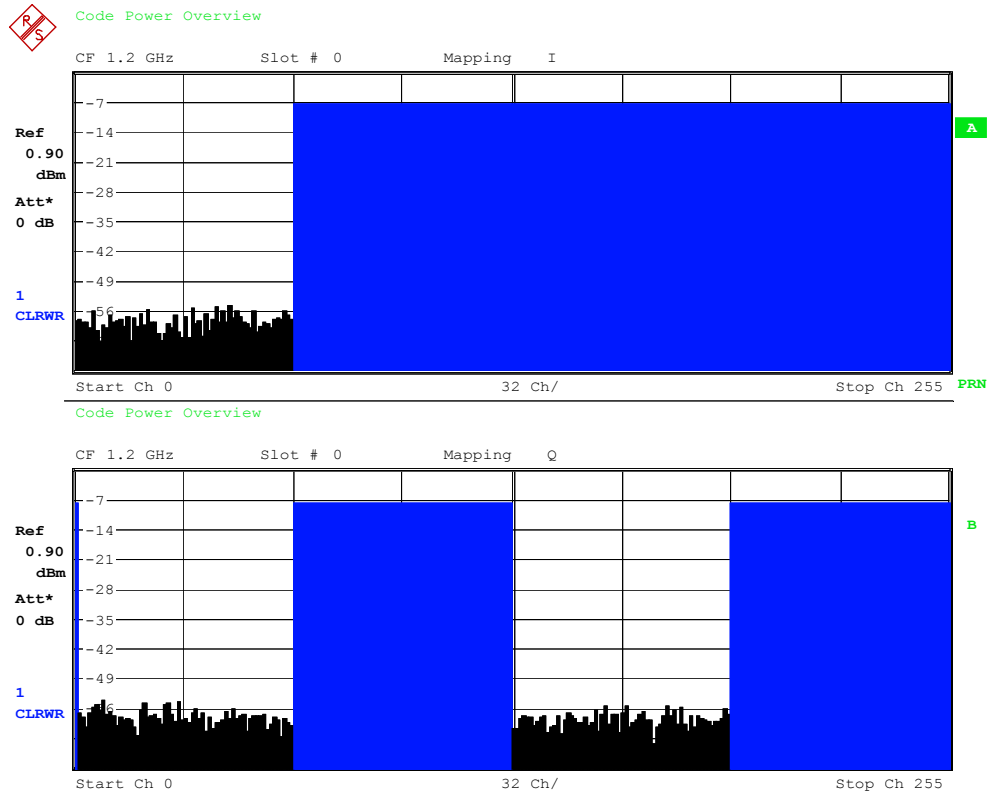


Fig. 18 Overview display of code domain power

IEC/IEEE bus command:

```
: [SENSe:]CDPower:OVERview ON | OFF
```

ON: Code Power Overview On mode.


Screen A: I mapping (TRACE1) (CDP_{abs.} or CDP_{rel.} or CDEP)
 Screen B: Q mapping (TRACE2) (CDP_{abs.} or CDP_{rel.} or CDEP)

OFF: Code Power Overview Off mode.

Screen A: I mapping (TRACE1) (CDP_{abs.} or CDP_{rel.} or CDEP)
 Screen B: Result summary (TRACE2)

```
:CALCulate<1>:FEED `XPOW:CDP:OVERview`
```

Screen A: I mapping (TRACE1) (CDP_{rel.})
 Screen B: Q mapping (TRACE2) (CDP_{rel.})

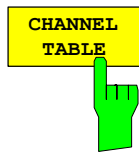

The *CHANNEL TABLE* softkey selects the display of the channel assignment table. The channel assignment table can contain a maximum of 512 entries, corresponding to the 256 codes that can be assigned within the class of spreading factor 256, both I and Q components.

The upper part of the table indicates the DPCCH channel that has to be present in every signal to be analyzed. Furthermore there are additional control channels used in HSDPA and HSUPA signals. These channels (HSDPCCH and EDPCCCH) are also displayed in the upper part of the table.

The lower part of the table indicates the data channels (DPDCH and E-DPDCH) that are contained in the signal. As specified in 3GPP, the channel table can contain up to 6 DPDCH's or up to 4 E-DPDCH's. The channels are in descending order according to symbol rates and within a symbol rate in ascending order according to the channel numbers. Therefore, the unassigned codes are always to be found at the end of the table.

Physical channels used in 3GPP UPLINK signals according to Release 99 specification:

DPCCH: The **D**edicated **P**hysical **C**ontrol **C**hannel is used to synchronize the signal. It carries pilot symbols and is expected in the Q branch at code class 8 with code number 0. The channel is displayed in the upper part of the table.

DPDCH: The **D**edicated **P**hysical **D**ata **C**hannel is used to carry UPLINK data from the UE to the BS. The code allocation depends on the total required symbol rate. The following table represents the possible configurations of DPCH spreading factors and code allocation.

Table 6 Channel configuration according to 3GPP specification release 99

Symbol rate [kps]	Number of DPDCHs	spreading Factor	Code Class	Channal Code	Branch	Bits per Frame
15	1	256	8	64	I	150
30	1	128	7	32	I	300
60	1	64	6	16	I	600
120	1	32	5	8	I	1200
240	1	16	4	4	I	2400
480	1	8	3	2	I	4800
960	1	4	2	1	I	9600
1920	2	4	2	1	I	9600
		4	2	1	Q	9600
2880	3	4	2	1	I	9600
		4	2	1	Q	9600
		4	2	3	I	9600
3840	4	4	2	1	I	9600
		4	2	1	Q	9600
		4	2	3	I	9600
		4	2	3	Q	9600
4800	5	4	2	1	I	9600
		4	2	1	Q	9600
		4	2	3	I	9600
		4	2	3	Q	9600
		4	2	2	I	9600
5760	6	4	2	1	I	9600
		4	2	1	Q	9600
		4	2	3	I	9600
		4	2	3	Q	9600
		4	2	2	I	9600
		4	2	2	Q	9600

Chan Type	Symb Rate [ksps]	Chan#	Status	Mapping	PilotL [Bits]	Pwr Abs [dBm]	Pwr Rel [dB]
DPCCH	15.0	0	active	Q	8	-8.51	-8.45
HSDPCCH	--	---	inactv	I	---	---	---
EDPCCH	--	---	inactv	I	---	---	---
DPDCH	960.0	1	active	I	---	-8.52	-8.45
DPDCH	960.0	1	active	Q	---	-8.52	-8.46
DPDCH	960.0	2	active	I	---	-8.51	-8.45
DPDCH	960.0	2	active	Q	---	-8.52	-8.46
DPDCH	960.0	3	active	I	---	-8.51	-8.45
DPDCH	960.0	3	active	Q	---	-8.51	-8.44

Fig. 19 Channel Table of an UPLINK signal according to Release 99 specification

HSDPCCH: The **H**igh **S**peed **D**edicated **P**hysical **C**ontrol **C**hannel (for HS-DCH) is used to carry control information (CQI / ACK/NACK) for downlink high speed data channels (HS-DCH). It is used in HSDPA signal setup. The data rate is fixed to 15ksps. The code allocation depends on the number of active DPCH and is described in the table below. This control channel is displayed in the upper part of the channel table.

Table 7 HSDPCCH Channel configuration according to 3GPP specification release 7

Number of DPDCH	Symbol rate (HSDPCCH) [ksps]	Spreading factor	Channel code	Branch	Bits per frame
0	15	256	33	Q	150
1	15	256	64	Q	150
2,4,6	15	256	1	I	150
3,5	15	256	32	Q	150

The HS-DPCCH can be switched on or of at for a duration of 1/5 frame → 3 slots → 2ms. Power control is applicable too.

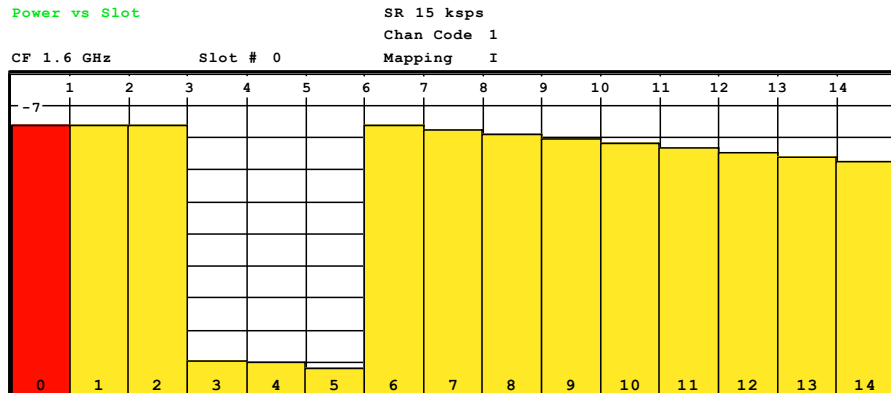


Fig. 20 Power versus slot of an HS-DPCCH channel.

EDPCCH: The **E**nhanced **D**edicated **P**hysical **C**ontrol **C**hannel is used to carry control information for uplink high speed data channels (EDPDCH). It is used in HSUPA signal setup. The data rate is fixed to 15ksps. This control channel is displayed in the upper part of the channel table.

Table 8 EDPDCH Channel configuration according to 3GPP specification release 7

Number of DPDCH	Symbol rate (EDPCCH) [ksps]	Spreading factor	Channel code	Branch	Bits per frame
0,1	15	256	1	I	150

EDPDCH: The **E**nhanced **D**edicated **P**hysical **D**ata **C**hannel is used to carry UPLINK data for high speed channels (EDPDCH). It is used in HSUPA signal setup. The data rate and code allocation depends on the number of DPDCH and HS-DPCCH (refer to table below). This data channel is displayed in the lower part of the channel table.

Table 9 EDPDCH Channel configuration according to 3GPP specification release 7

Number of DPDCH	HS-DPCCH configured	Symbol rate [ksps]	Nmb. of EDPDCH	Spreading factor	Channel code	Branch	Bits per frame
0	Y/N	60	1	64	16	I	600
0	Y/N	120	1	32	8	I	1200
0	Y/N	240	1	16	4	I	2400
0	Y/N	480	1	8	2	I	4800
0	Y/N	960	1	4	1	I	9600
0	Y/N	1920	1	2	1	I	19200
0	Y/N	3840	2	2	1	I	19200
				2	1	Q	19200
0	Y/N	5760	4	2	1	I	19200
				2	1	Q	19200
				4	1	I	9600
				4	1	Q	9600
1	Y	60	1	64	32	I	600
1	Y	120	1	32	16	I	1200
1	Y	240	1	16	8	I	2400
1	Y	480	1	8	4	I	4800
1	Y	960	1	4	2	I	9600
1	Y	1920	1	2	2	I	19200
1	Y	3840	2	2	2	I	19200
				2	2	Q	19200
1	N	60	1	64	32	Q	600
1	N	120	1	32	16	Q	1200
1	N	240	1	16	8	Q	2400
1	N	480	1	8	4	Q	4800
1	N	960	1	4	2	Q	9600
1	N	1920	1	2	2	Q	19200
1	N	3840	2	2	2	Q	19200
				2	2	I	19200

The E-DPCCH can be switched on or of at for a duration of 1/5 frame→3 slots→2ms.

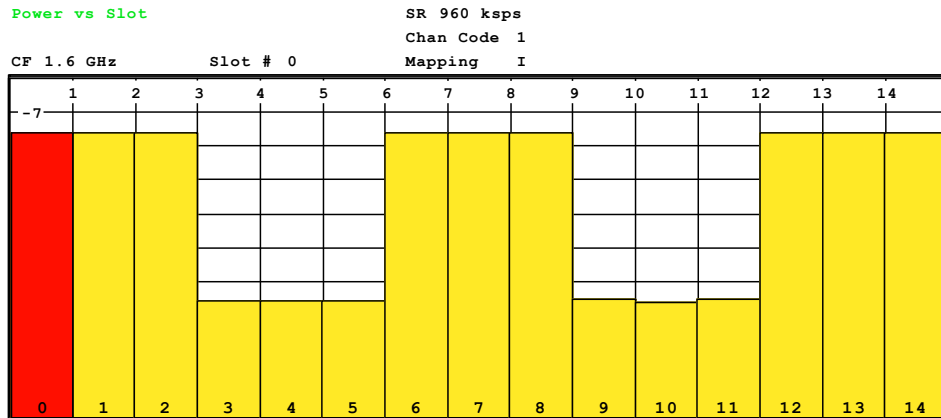


Fig. 21 Power versus slot of an E-DPCCH channel.

IEC/IEEE bus command: :TRAC:DATA? CWCD

Chan Type	Symb Rate [ksps]	Chan#	Status	Mapping	PilotL [Bits]	Pwr Abs [dBm]	Pwr Rel [dB]
DPCCH	15.0	0	active	Q	8	-8.51	-8.45
HSDPCCH	--	---	inactv	I	---	--	--
EDPCCH	--	---	inactv	I	---	--	--
DPDCH	960.0	1	active	I	---	-8.52	-8.45
DPDCH	960.0	1	active	Q	---	-8.52	-8.46
DPDCH	960.0	2	active	I	---	-8.51	-8.45
DPDCH	960.0	2	active	Q	---	-8.52	-8.46
DPDCH	960.0	3	active	I	---	-8.51	-8.45
DPDCH	960.0	3	active	Q	---	-8.51	-8.44

Fig. 22 Channel Table of an UPLINK signal according to Release 99 specification


The following parameters of these channels are determined by the CDP measurement:

- Type: Type of channel (active channels only)
- Symbol Rate: Symbol rate at which the channel is transmitted (15 ksps to 960 ksps).
- Chan #: Number of channel spreading code (0 to [spreading factor-1])
- Status: Status display. Codes that are not assigned are marked as inactive channels.
- Mapping: Component onto which the channel is mapped (I or Q). The entry is not editable, since the standard specifies the channel assignment for each channel.
- PilotL: Number of pilot bits of the channel (only valid for the control channel DPCCH).
- Pwr Abs / Pwr Rel: Indication of the absolute and relative channel power (referred to the CPICH or the total power of the signal).

In *CODE CHAN AUTOSEARCH* mode, a data channel is designated as active if its power has a minimum value compared to the total power of the signal and if a minimum signal/noise ratio is maintained within the channel.

In *CODE CHAN PREDEFINED* mode, each data channel that is included in the user defined channel table is considered to be active.

IEC/IEEE bus command: :CALC1:FEED "XTIM:CDP:ERR:CTAB"

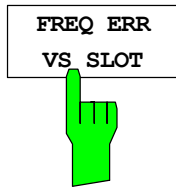

The *FREQ ERR VS SLOT* softkey selects the new display mode of frequency error versus slot. The softkey is available in frame mode of R&S FS-K73. In slot mode of R&S FS-K73, the softkey will not appear.

To reduce the overall span of frequency error versus slot, for each value to be displayed the difference between the frequency error of the corresponding slot and the mean frequency error of the the frame is calculated. This will help to eliminate a static frequency offset of the whole signal to better display a realtime-based frequency curve.

The frequency error versus slot is calculated in accordance with 3GPP specifications. For R&S FS-K73, this means that the measurement is inflected by the elimination of 25 μs of tail chips at each end of the one slot (see *ELIMINATE TAIL CHIPS* softkey).

The values of *FREQ ERR VS SLOT* are displayed in Hz.

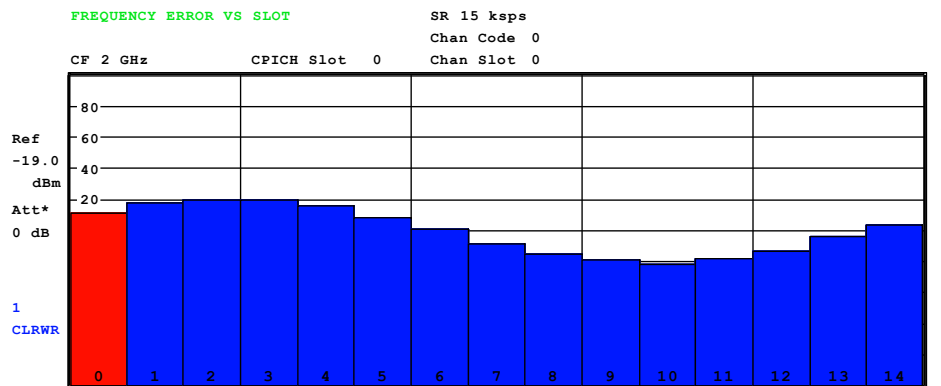


Fig. 23 Relative frequency error versus slot

The relative frequency error $df_{rel}(i)$ is displayed versus slot. The values are given in Hz. They are referenced to the mean frequency error of the frame. In the figure above a relative frequency $df_{rel}(i)$ error with a sine shape is given. The displayed frequency error is given as

$$df_{rel}(i) = df_{abs}(i) - \frac{1}{N} \sum_{n=0}^{N-1} df_{abs}(n) \quad | \quad i \in [0..14] \quad N = 15$$

where: $df_{rel}(i)$ [Hz] - relative frequency error for each slot
 $df_{abs}(i)$ [Hz] - absolute frequency error for each slot
 N [] - number of slots per frame

The absolute frequency error $df_{abs}(i)$ is displayed in the result summary

IEC/IEEE bus command:

:CALC2:FEED "XTIM:CDP:FVSL"

Trace readout via: :TRAC? TRACE2.



The *PHASE DISCONT* softkey selects the new display mode of phase discontinuity versus slot. The softkey is available in frame mode of R&S FS-K73. In slot mode of R&S FS-K73, the softkey will not appear.

The phase discontinuity is calculated in accordance with 3GPP specifications. The phase calculated for each slot will be interpolated to both ends of the slot using the frequency shift of that slot. The difference between the phase interpolated for the beginning of one slot and the end of the preceding slot is displayed as the phase discontinuity of that slot. For R&S FS-K73, the setting of the *ELIMINATE TAIL CHIPS* softkey (see *ELIMINATE TAIL CHIPS* softkey) is taken into account.

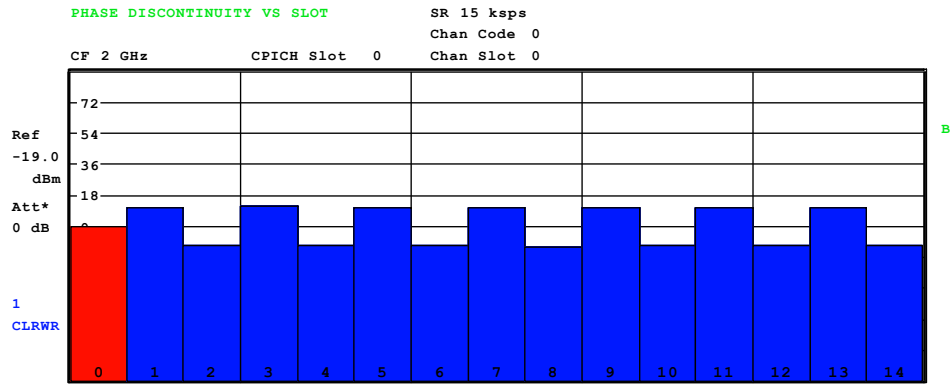


Fig. 24 Phase discontinuity versus slot

The phase discontinuity $d\phi_{disc}(i)$ is displayed versus slot. The values of *PHASE DISCONT* are displayed in ° (deg). They are calculated by the difference of the absolute phase at the end of the previous slot [$\phi_{slot_end}(i-1)$] and the absolute phase at the beginning of the current slot [$\phi_{slot_start}(i)$] Fig. 24). In case of slot zero ($i=0$), the phase at the end of slot 14 of the previous frame is taken as reference.

$$[\phi_{slot_end}(-1) = \phi_{slot_end_prev_frame}(14)].$$

In Fig. 25 a signal with a alternating phase discontinuity of +/- 10 degree is measured.

$$d\phi_{disc}(i) = \phi_{slot_end}(i-1) - \phi_{slot_start}(i) \quad | \quad i \in [0...14]$$

where: $d\phi_{disc}(i)$ [deg] - phase discontinuity result at the slot boarder
 $\phi_{slot_start}(i)$ [deg] - absolute phase at the start of the current slot
 $\phi_{slot_end}(i-1)$ [deg] - absolute phase at the end of the previous slot

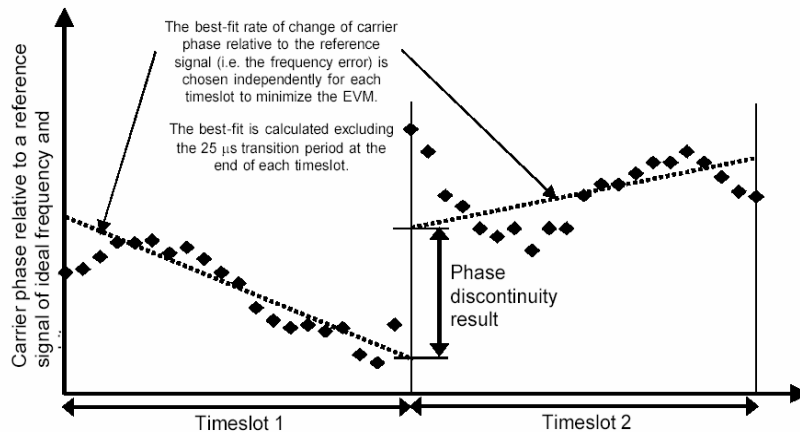



Figure 5.13.3.1 Graphical description of phase discontinuity

Fig. 25 Measurement of phase discontinuity

IEC/IEEE bus command:

```
:CALC2:FEED "XTIM:CDP:PVS"
```

Trace readout via: :TRAC? TRACE2.

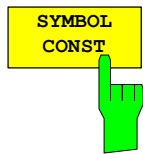

The *SYMBOL CONST* softkey selects the display of symbol constellation diagram. The symbols are displayed for the selected channel (red marking in the CDP diagram) and the selected slot (red marking in the power-versus-slot diagram).

In order to provide a better illustration of the constellation, the channel is entered in the diagram as if its constellation points would lie in the I/Q plane, i.e. channels that are mapped onto the I component have points on the real axis and channels mapped onto the Q component have points on the imaginary axis.

It is possible to display the symbol constellation for unassigned codes (red marking in the CDP diagram on a code represented in blue), but the results are not meaningful, as the unassigned code channel does not contain data.

For orientation the unit circle is shown within the diagram.

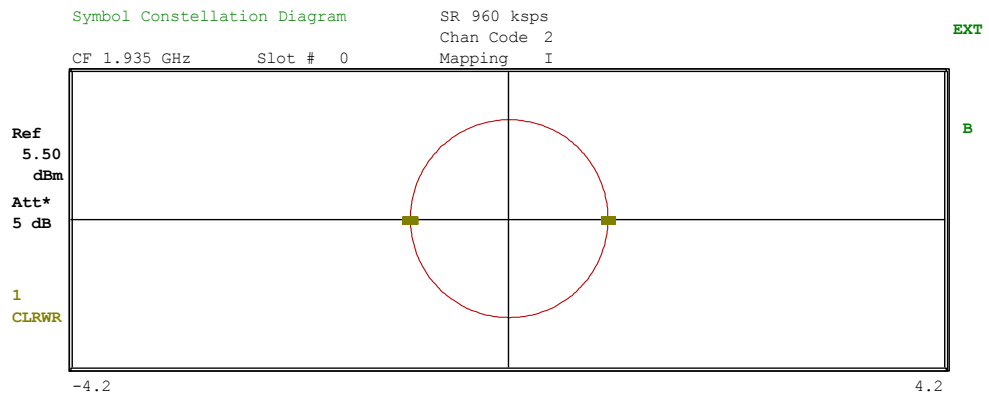


Fig. 26 Symbol Constellation Diagram of a channel mapped onto I component



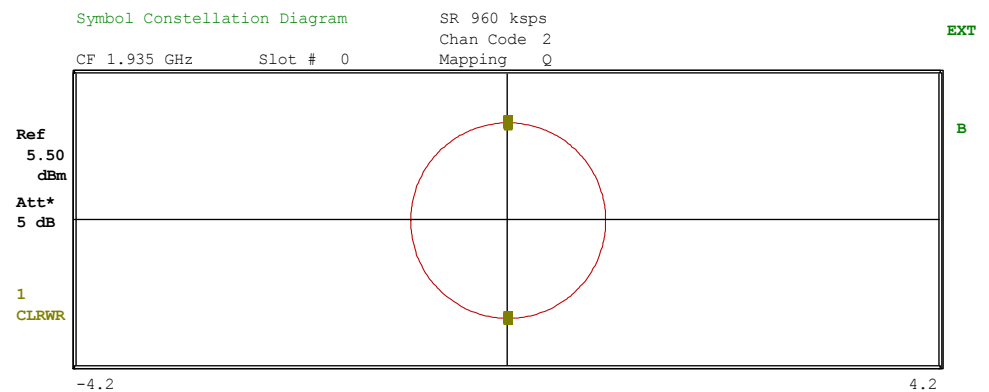


Fig. 27 Symbol Constellation Diagram of a channel mapped onto Q component

IEC/IEEE bus command: :CALC2:FEED "XTIM:CDP:SYMB:CONS"

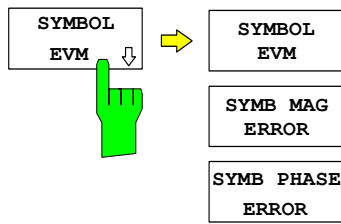

The Softkey *SYMBOL EVM* softkey opens a submenu for symbol error vector magnitude display.

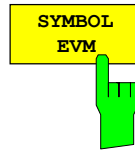

The *SYMBOL EVM* softkey activates the symbol error vector magnitude display. The EVM is displayed for the selected channel (red marking in the CDP diagram) and the selected slot (red marking in the power-versus-slot diagram).

It is possible to display the symbol error vector magnitude for unassigned codes (red marking in the CDP diagram on a code represented in blue), but the results are not valid.


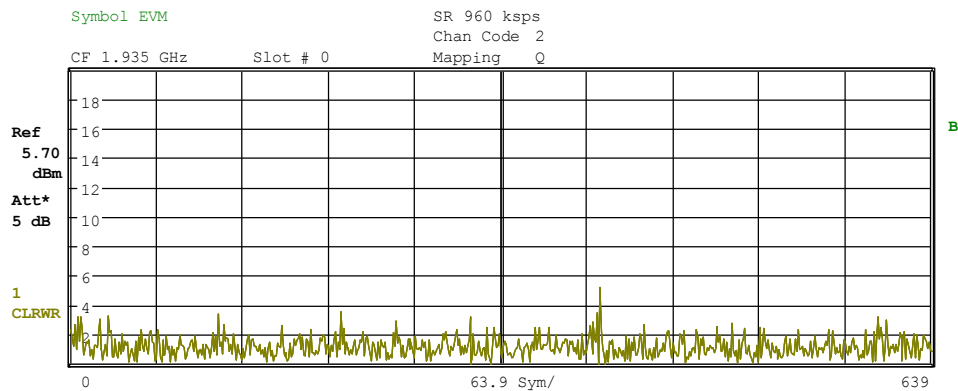


Fig. 28 Error Vector Magnitude for the selected slot of the selected channel

IEC/IEEE bus command: `:CALC2:FEED "XTIM:CDP:SYMB:EVM"`

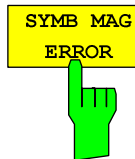

The *SYMB MAG ERROR* softkey selects the new display mode of symbol magnitude error. The softkey is available in both frame and slot modes of R&S FS-K73.

The symbol magnitude error is calculated analogously to symbol EVM. The result of calculation is one symbol magnitude error value for each symbol of the slot of a special channel. Positive values of symbol magnitude error indicate a symbol magnitude that is larger than the expected ideal value; negative symbol magnitude errors indicate a symbol magnitude that is less than the ideal one.

Symbol magnitude error like symbol EVM can be calculated for both active and inactive slots of a channel. For inactive slots of a channel, however, the results are meaningless.

The values of *SYMB MAG ERROR* are displayed in %.

IEC/IEEE bus command:

`:CALC2:FEED "XTIM:CDP:SYMB:EVM:MAGN"`

Query of results: `:TRAC? TRACE2.`

SYMB PHASE
ERROR



The *SYMB PHASE ERROR* softkey selects the new display mode of symbol phase error. The softkey is available both frame and slot modes of R&S FS-K73.

The symbol phase error is calculated analogously to symbol EVM. The result of calculation is one symbol phase error value for each symbol of the slot of a special channel. Positive values of symbol phase error indicate a symbol phase that is larger than the expected ideal value; negative symbol phase errors indicate a symbol phase that is less than the ideal one.

Symbol phase error like symbol EVM can be calculated for both active and inactive slots of a channel. For inactive slots of a channel, however, the results are meaningless.

For R&S FS-K73, the displayed symbol phase error will always be calculated to zero. This effect is caused by the following: For R&S FS-K73, each channel is projected to one of the branches I or Q exclusively. For symbol error calculation, only the symbols spread onto this branch are taken into account. Therefore no phase difference between the measured and ideal symbols can occur. The phase error is always calculated to zero.

The values of *SYMB PHASE ERROR* are displayed in ° (deg).

IEC/IEEE bus command:

:CALC2:FEED "XTIM:CDP:SYMB:EVM:PHAS"

Query of results: :TRAC? TRACE2.

BITSTREAM



The *BITSTREAM* softkey activates the bitstream display.


The decided bits are displayed for the selected channel (red marking in the CDP diagram) and the selected slot (red marking in the power-versus-slot diagram).

While it is possible to display the bitstream for unused codes (red marking in the CDP diagram at a code displayed in blue), the missing data means that the results are not very informative. In this case, "-" is used to indicate that all the bits are invalid.

Bitstream		SR 960 ksp/s	EXT
		Chan Code 2	
CF 1.935 GHz	Slot # 0	Mapping Q	
		Bitstream	
Ref	0	0	1
	16	0	1
	32	0	1
6.80 dBm	48	0	0
	64	0	1
Att* 5 dB	80	1	1
	96	1	1
	112	1	1
	128	0	1
	144	0	1
1 CLRWR	160	0	0
	176	0	1
	192	0	1

Fig. 29 Demodulated bits for the selected slot of the selected channel

IEC/IEEE bus command: :CALC2:FEED "XTIM:CDP:BSTR"

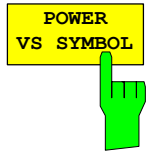

The *POWER VS SYMBOL* softkey displays the symbol power in a selected channel within a selected slot. The number of symbols depends on the code class of the selected channel.

$$NOF_{Symbols} = 10 \cdot 2^{(8-Code\ Class)}$$

The power curve below represents the ratio of the symbol power to the total power of the selected slot.

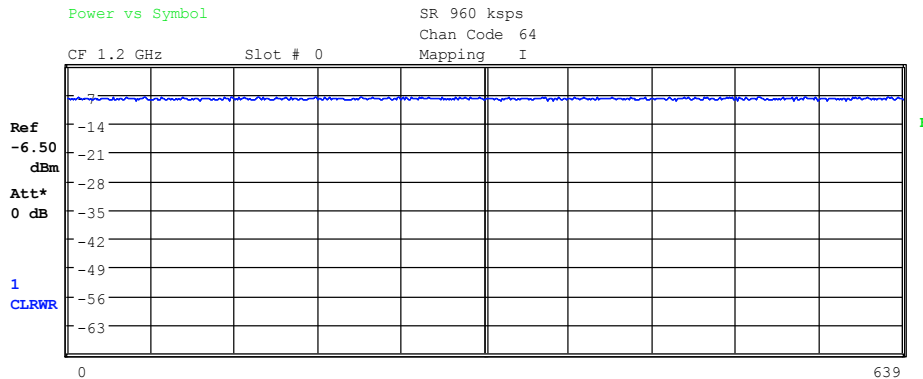


Fig. 30 Power versus symbol for one slot of a channel with 640 symbols

IEC/IEEE bus command: :CALC1:FEED "XTIM:CDP:PVSY"


Query of result: :TRAC1:DATA2 TRACE2

Output: List of symbol power values deviating from the reference power

Format: Val₁, Val₂,..., Val_{NOF}


Unit: [dB]

Quantity: $NOF_{Symbols} = 10 \cdot 2^{(8-Code\ Class)}$

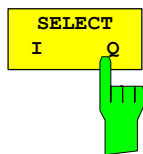

The *SELECT I/Q* softkey switches the display modes *CDP PWR RELATIVE /ABSOLUTE*, *CODE PWR ZOOM*, *POWER VS SLOT*, *SYMBOL CONST*, *SYMBOL EVM* between indication of I and Q component. Only channels that are mapped onto the corresponding component are taken into account by the respective display modes.

IEC/IEEE bus command: :SENS:CDP:MAPP Q

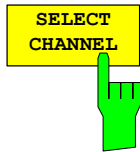

The *SELECT CHANNEL* softkey activates the selection of a channel for the display modes *CDP PWR RELATIVE/ABSOLUTE*, *POWER VS SLOT*, *SYMBOL CONST*, *SYMBOL EVM*.

There are two ways of entering the channel numbers:

- Entry of channel number and spreading factor, separated by a decimal point
If the channel number and the spreading factor are entered simultaneously, the entered channel is selected and marked in red if an active channel is concerned. For the display, the channel number entered is converted on the basis of spreading factor 256. For unused channels, the code resulting from the conversion is marked.

Example: Entry 2.4

Channel 2 is marked at spreading factor 4 (960 kbps) if the channel is active, otherwise code 128 at spreading factor 256.

- Entry of a channel number without a decimal point
In this case, R&S FS-K73 interprets the entered code as based on spreading factor 256. If the code entered corresponds to a used channel, the whole associated channel is marked. If the code corresponds to an unused channel, only the code entered is marked.


Example: Entry 128

Code 128 is marked at spreading factor 256 if there is no active channel on this code. If for instance channel 2 is active at spreading factor 4, the entire channel 2 is marked.

If the entered code corresponds to an active channel, the whole associated channel is marked. If it corresponds to a gap between the channels, only the entered code is marked.

If the code number is modified using the rollkey, the red marking changes its position in the diagram only if the code number no longer belongs to the marked channel. The step width of the changed rollkey position refers to spreading factor 256.


IEC/IEEE bus command: `:SENS:CDP:CODE 0 to 255`

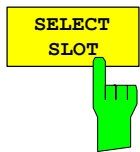

The *SELECT SLOT* softkey activates the selection of the slot number for the display modes *POWER VS SLOT*, *SYMBOL CONST*, *SYMBOL EVM*. The softkey is only valid if one frame of the 3GPP signal is analyzed.

When the slot number is entered, the red marking in the power-versus-slot diagram changes its position in steps of a slot.

IEC/IEEE bus command: `:SENS:CDP:SLOT 0 to 14`

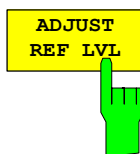


The *ADJUST REF LVL* softkey adjusts the reference level of the analyzer to the measured channel power. This ensures that the settings of the RF attenuation and the reference level are optimally adjusted to the signal level without overloading the instrument or limiting the dynamic range by a too small S/N ratio.

IEC/IEEE bus command: `:SENS:POW:ACH:PRES:RLEV`

Measurement Configuration –CHAN CONF hotkey

Hotkey *CHAN CONF*

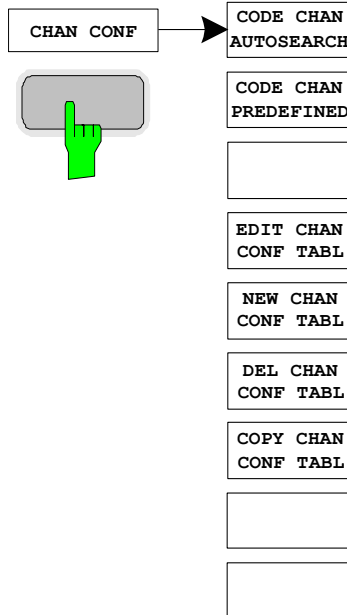

The *CHAN CONF* hotkey opens a submenu with different configurations for measurements. In this submenu, predefined channel tables can be selected as a basis for code domain measurements.

When the hotkey is selected, a table including the channel tables stored on the measuring instrument's hard disk is opened. The table provides just an overview and a table for the measurement can only be selected after actuating the *CODE CHAN PREDEFINED* softkey.

IEC/IEEE bus command:

```
:CONF:WCDP:MS:CTAB:CAT?
```




The *CODE CHAN AUTOSEARCH* softkey allows code domain power measurements in the automatic search mode. In this mode, the whole code domain (all permissible symbol rates and channel numbers) is searched for active channels. The channel search is based on a comparison of the powers of active channels and unused codes. Furthermore, the restrictions in channel configuration given by the 3GPP specifications are taken into account.

The synchronization channel DPCCH is assumed to be present in the signal by the CDP analysis and added to the channel table for each measurement.

The *CODE CHAN AUTOSEARCH* mode is the preset search mode when starting the CDP analysis. It is mainly intended for giving the user an overview of the channels contained in the signal. If the signal contains channels that are not detected as being active in the automatic search mode, the CDP analysis can be performed with the channel configurations predefined by the user by switching to the *CODE CHAN PREDEFINED* mode.

IEC/IEEE bus command:

```
:CONF:WCDP:MS:CTAB:STAT OFF
```

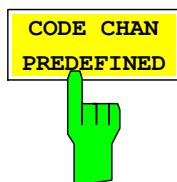

The *CODE CHAN PREDEFINED* softkey activates the predefined channel table mode. No search for active channels in the code domain is performed in this mode, but the channels contained in a channel table defined prior to the measurement are assumed to be active. The code domain power measurement and all further evaluations are carried out for these channels.


On selecting the softkey, a table containing all channel tables stored in the measuring instrument is opened. The CDP analysis is switched to

the mode “predefined channel table”. When the next measurement is started, the power is measured according to this mode. The last table of the automatic search mode is first taken as a basis for the measurement. This table is available under the *RECENT* entry.

Switching to one of the predefined channel tables is done by selecting the corresponding table entry and pressing one of the unit keys. From the next measurement onwards, the selected channel table is taken as a basis for the sweep. A tick marks the selected channel table.

IEC/IEEE bus command:

```
CONF:WCDP:MS:CTAB:STAT ON
CONF:WCDP:MS:CTAB:SEL "CTAB 1"
```

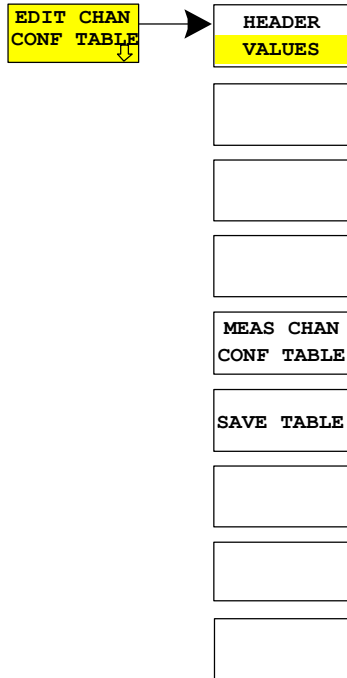

The *EDIT CHAN CONF TABLE* softkey opens a channel table in which the user can edit the channel configuration. In addition, a submenu is opened giving access to the softkeys required for editing the table.

EDIT CHANNEL TABLE						
NAME:	UP6DPDCH					
COMMENT:	Channel configuration with 6 data channels					
SYMBOL RATE [kpsps]	CHAN #			PILOT BITS	CDP REL. [dB]	STATUS
DPCCH	0	Q		8	0.0000	ACTIVE
960	1	I		---	0.0000	ACTIVE
960	1	Q		---	0.0000	ACTIVE
960	3	I		---	0.0000	INACTIVE
960	3	Q		---	0.0000	INACTIVE
960	2	I		---	0.0000	INACTIVE
960	2	Q		---	0.0000	INACTIVE

Fig. 31 Table for editing a channel configuration


Basically, any channel table stored on the instrument's hard disk can be edited as required. An edited table is not stored automatically but only after pressing the *SAVE TABLE* softkey. This prevents inadvertent overwriting of a table.

If the user edits the table currently used in CDP analysis, the edited table is taken as a basis for the next measurement immediately after it is stored. The effects of modifications made to the table show, therefore, at once. Here, too, the *SAVE TABLE* softkey must be pressed to store the edited table on the instrument's hard disk.

If the user edits a table stored on the hard disk but currently not active, the modifications become visible only after storage (*SAVE TABLE* softkey) and subsequent activation.

IEC/IEEE bus command:

```
:CONF:WCDP:MS:CTAB:EDAT
```

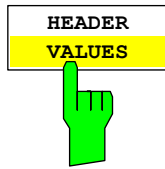

The *HEADER/VALUES* softkey switches between editing the channel table header or its values.

HEADER allows editing the table header, i.e. the name and the comment. By changing the table name, overwriting of a table already stored is prevented. The table name may contain max. 8 characters.

IEC/IEEE bus command:

```
:CONF:WCDP:MS:CTAB:NAME "NEW_TAB"
```

VALUES allows editing the entries in a channel table. The following parameters are available for each channel of a table (confirm each entry with one of the unit keys):

SYMBOL RATE: Symbol rate at which a channel is transmitted. This entry can only be edited if one data channel is used within the channel configuration.

CHAN #: Number of channel in the associated transmission class. For the channel numbers are fixed for all channel configurations of 3GPP uplink, the entry is not editable. The channel numbers will be set automatically according to the specifications.

MAPPING: I or Q component the channel is projected onto. The entry is not editable since the component the channel should be projected onto is fixed in 3GPP specifications for each channel.

PILOT BITS: Number of pilot bits of a channel. The entry is editable for the DPCCH only.


CDP REL.: Information about relative channel power. This entry cannot be edited and exists only for the *RECENT* table; it is used for indicating low-power channels.

STATUS: Channel status (active/inactive). Setting the channel status to inactive excludes a channel entered in the table from CDP analysis without the complete channel line having to be cleared from the table. Only channels with an active status are taken into account in CDP analysis. By activating/deactivating a channel the analysis is switched between the one-data-channel-model and the multiple-data-channel-model. At the model with more than one data channel, the channel configurations will be set according to the 3GPP specifications.

IEC/IEEE bus commands:


```
:CONF:WCDP:MS:CTAB:DATA 8,4,1
```

```
:CONF:WCDP:MS:CTAB:COMM "Comment for  
new table"
```

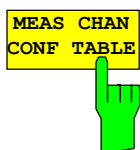





The *MEAS CHAN CONF TABLE* softkey starts a measurement in the *CODE CHAN AUTOSEARCH* mode. The measurement results are entered in the channel table currently open. This softkey is available only in the *CODE CHAN AUTOSEARCH* mode.

IEC/IEEE bus command: --

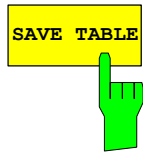

The *SAVE TABLE* softkey saves the table under the specified name.
Caution: Editing a channel model and storing it under its original name will overwrite the model.

IEC/IEEE bus command:
 -- (automatic storage with remote control)



The *NEW CHAN CONF TABLE* softkey opens a submenu identical to that opened by the *EDIT CHAN CONF TABLE* softkey. In contrast to *EDIT CHAN CONF TABLE*, *NEW CHAN CONF TABLE* opens a table in which only the control channel is entered; the table name is not yet defined.


EDIT CHANNEL TABLE						
NAME:	default					
COMMENT:	default					
SYMBOL RATE [ksps]	CHAN #			PILOT BITS	CDP REL. [dB]	STATUS
DPCCH	0	Q		8	0.0000	ACTIVE
15	64	I		---	0.0000	ACTIVE
960	1	Q		---	0.0000	INACTIVE
960	3	I		---	0.0000	INACTIVE
960	3	Q		---	0.0000	INACTIVE
960	2	I		---	0.0000	INACTIVE
960	2	Q		---	0.0000	INACTIVE

Fig. 32 Creating a new channel configuration



The *DEL CHAN CONF TABLE* softkey deletes a selected table from the list. The currently active table in the *CODE CHAN PREDEFINED* mode cannot be deleted.

IEC/IEEE bus command: :CONF:WCDP:MS:CTAB:DEL

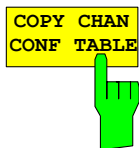



The *COPY CHAN CONF TABLE* softkey copies a selected table. The user is queried to enter the name under which the copy is to be saved.

IEC/IEEE bus command: :CONF:WCDP:MS:CTAB:COPY "CTAB2"

Configuration of CDP Measurement – SETTINGS hotkey

Hotkey SETTINGS

The SETTINGS hotkey opens a submenu with softkeys for setting parameters for the CDP measurement.

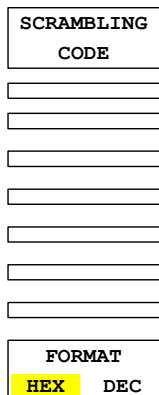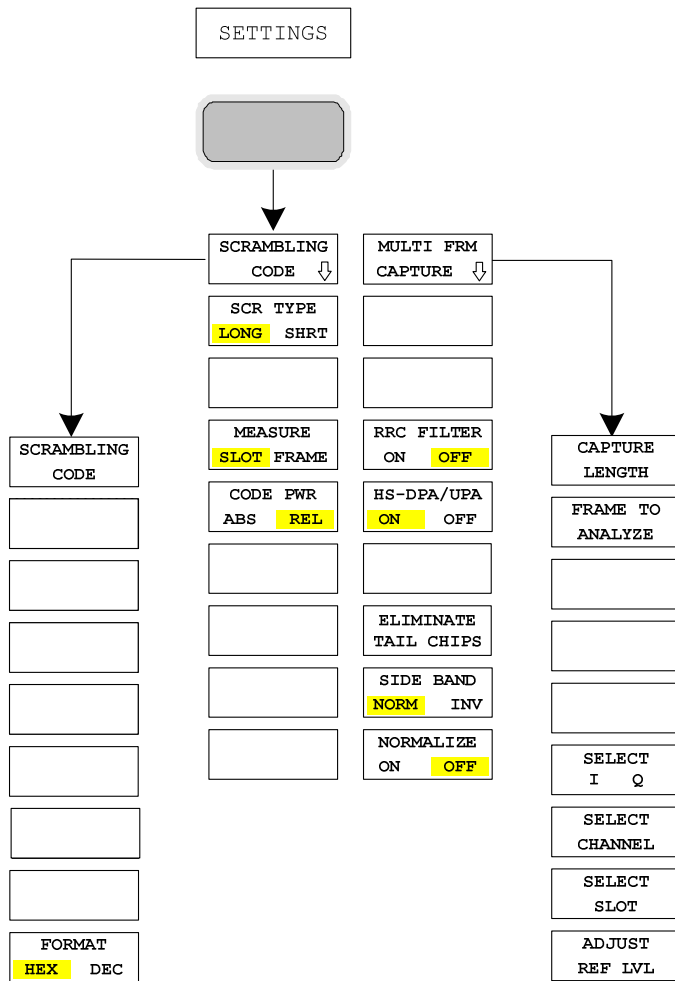

The SCRAMBLING CODE softkey opens a window for entering the scrambling code. The scrambling code is input in hex format.


The entered scrambling code has to coincide with that of the signal. Otherwise a CDP measurement of the signal is not possible.

IEC/IEEE bus command: : [SENSe:]CDPower:LCODE[:VALue] #H2




The format for the entry of the *SCRAMBLING CODE* can be specified. With the *FORMAT HEX/DEC* softkey, either hexadecimal or decimal can be selected. Default is hexadecimal.

IEC/IEEE bus command: Scrambling code hex (legacy command)
 SENS:CDPower:LCOD:VAL <hex>
 Scrambling code dec
 SENS:CDP:LCOD:DVAL <numeric_value>

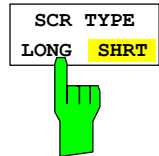


The *SCR TYPE LONG/SHRT* softkey determines whether the scrambling code entered (see softkey *SCRAMBLING CODE*) is to be handled as long or short scrambling code.

IEC/IEEE bus command: :SENSe:CDP:LCOD:TYPE SHOR

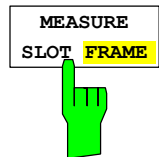

The *MEASURE SLOT / FRAME* softkey switches between a result length of one slot and one complete frame. The softkey is only valid, if the spectrum analyzer R&S FSU or R&S FSQ is used. For spectrum analyzer R&S FSP, a fixed result length of one slot is used.

IEC/IEEE bus command:
 :SENS:CDP:BASE SLOT | FRAME

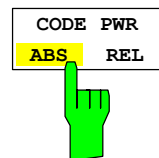


The *CODE PWR ABS / REL* softkey toggles the display mode of the code domain power display (see *CODE DOM POWER*). If the power versus slot measurement is active, the slot power is indicated in absolute or relative values.

REL: Selects relative scaling of the CDP measurement. The power is referenced to the total power of the selected slot. The values are displayed in dB (default settings).

ABS: Selects an absolute scaling of the CDP measurement. The values are displayed in dBm.

IEC/IEEE bus command:
 Rel. Scaling: :CALC1:FEED "XPOW:CDP:RAT"
 Abs. Scaling: :CALC1:FEED "XPOW:CDP"
 :CALC1:FEED "XPOW:CDP:ABS"
 :CALC1:FEED "XTIM:CDP:PVSL:ABS"
 :CALC1:FEED "XTIM:CDP:PVSL:RAT"

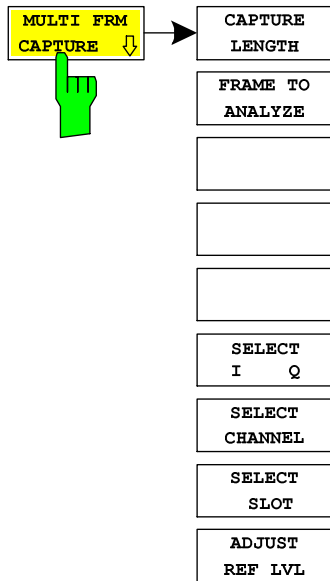

The Softkey MULTI FRM CAPTURE opens a submenu for specifying the parameters for multi-frame measurement. This measurement supports the data acquisition and evaluation of more than one 3GPP WCDMA frame. Depending on the analyser type that is used, several frames can be captured and evaluated.

The following figure shows the memory structure of the captured data. The size of the stored data depends on the parameter *CAPTURE LENGTH*, which defines the number of frames that are captured after a sweep is forced. If the parameter *CAPTURE LENGTH* has been changed, a new sweep must be started (*SINGLE SWEEP*) or must have been finished (*CONTINUOUS SWEEP*) in order to obtain valid measurement results for the specified range. The maximum number of storable frames depends on the trigger mode (*FREE RUN* or *EXT TRIG*). By changing the parameter *FRAME TO ANALYZE*, the frame number to be analyzed can be selected. The displayed results are refreshed if *FRAME TO ANALYZE* has been changed or a new sweep is started.

The *TRIGGER TO FRAME* time (TTF) is measured from the external trigger event to the start of the selected frame (*FRAME TO ANALYZE*). Therefore, the TTF of frame 0 is usually smaller than one slot (<667 us). If frame 1 is selected, the displayed TTF is between 10 ms and 10.667 ms. The TTF time is displayed in the result summary. For the TTF time of frame n, the following equation is used:

$$TTF_n = TTF_0 + n \cdot 10 \text{ ms}$$

The maximum number of captured frames depends on the memory size and the trigger mode.


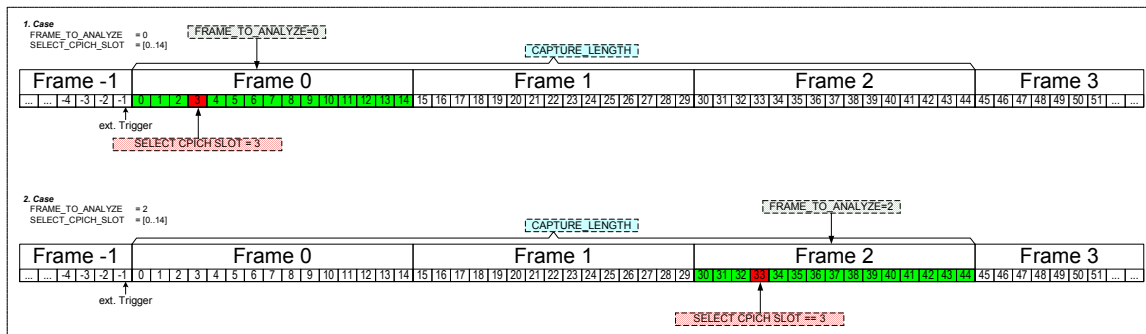


Fig. 33 Data scheme of the captured and analyzed frames

Maximum number of captured frames

Analysator	Downlink (K72/K74) EXT TRIGGER	Downlink (K72/K74) FREE RUN	Uplink (K73) EXT TRIGGER	Downlink (K73) FREE RUN
R&S FSP	---	---	1 slot	1 slot
R&S FSP (B70)	3 frames	2 frames	3 frames	2 frames
R&S FSU	3 frames	2 frames	3frames	2 frames
R&S FSQ	100 frames	100 frames	100 frames	100 frames


Note: The *SELECT I/Q*, *SELECT CHANNEL* and *ADJUST REF LVL* softkeys are described on page 65.

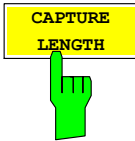

The softkey *CAPTURE LENGTH* enables an entry window for determining the number of frames that are to be captured at each sweep.

IEC/IEEE bus command: `SENS:CDPr:IQL <numeric value>`

Range: R&S FSU / R&S FSP-B70 (*free run*): <numeric value> [1 ... 2]
 R&S FSU / R&S FSP-B70 (*ext. Trig*): <numeric value> [1 ... 3]
 R&S FSQ: <numeric value> [1 ... 100]
 Unit: [Frames]
 Default: 1

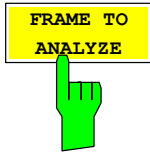


The softkey *FRAME TO ANALYZE* enables an entry window for selecting the frame number to be analyzed.

IEC/IEEE bus command:
`:SENS:CDP:FRAM:VAL <numeric value>`

This command selects one frame of the captured data, which is evaluated.


Range: <numeric value> [0 ... CAPTURE_LENGTH - 1]
 Unit: [Frames]
 Default: 0

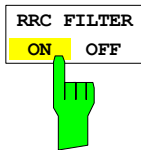

The *RRC FILTER ON/OFF* softkey selects if a root raised cosine (RRC) receiver filter is used or not. This feature is useful if the RRC filter is implemented in the device under test (DUT).

ON: If an unfiltered WCDMA signal is received (normal case), the RRC filter should be used to get a correct signal demodulation. (Default settings)
 OFF: If a filtered WCDMA signal is received, the RRC filter should not be used to get a correct signal demodulation. This is the case if the DUT filters the signal.

IEC/IEEE bus command: `:SENS:CDP:FILT ON|OFF`

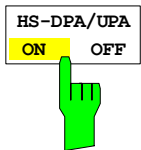

The *HS-DPA/UPA ON/OFF* softkey selects if the HS-DPCCH, E-DPCCH and E-DPDCH channels are displayed or not.

ON: The HSUPA/HSDPA channel can be detected.(Default settings)
 OFF: The HSUPA/HSDPA channel cannot be detected.


IEC/IEEE bus command: `:SENS:CDP:HSDP ON|OFF`
`:CONF:WCDP:MS:CTAB:DATA:HSDP ON|OFF`



The *ELIMINATE TAIL CHIPS* selects length of the measurement interval for calculation of error vector magnitude (EVM). In accordance with 3GPP specification Release 5, the EVM measurement interval is one slot (4096 chips) minus 25 µs at each end of the burst (3904 chips) if power changes are expected. If no power changes are expected, the evaluation length is one slot (4096 chips).

ON: Changes of power are expected. Therefore an EVM measurement interval of one slot minus 25 µs (3904 chips) is considered.
 OFF: Changes of power are not expected. Therefore an EVM measurement interval of one slot (4096 chips) is considered. (Default settings)

IEC/IEEE bus command: `:SENS:CDP:ETCH ON|OFF`

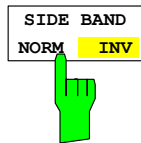

The *SIDE BAND NORM / INV* softkey is used to perform the measurement both in the normal (NORM) and inverted position (INV).

NORM The normal position allows the measurement of RF signals from the user equipment.

INV The inverted position is useful for measurements on IF modules or components in case of spectral inversion.

The default setting is *NORM*.


IEC/IEEE bus command: `:SENS:CDP:SBAN NORM|INV`



The *NORMALIZE ON / OFF* softkey eliminates the DC offset of the signal. The default setting is OFF.

IEC/IEEE bus command `:SENS:CDP:NORM OFF`

Frequency Settings – Key **FREQ**

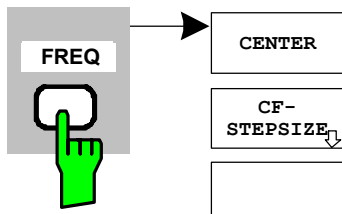

The **FREQ** key opens a submenu for changing the measurement frequency.

The **CENTER** softkey opens the window for manually entering the center frequency.

The allowed range of values for the center frequency is:

$$\text{minspan} / 2 \leq f_{\text{center}} \leq f_{\text{max}} - \text{minspan} / 2$$

- f_{center} center frequency
- minspan smallest selectable span > 0 Hz (10 Hz)
- f_{max} max. frequency

IEC/IEEE bus command: `FREQ:CENT 100MHz`


The **CF STEPSIZE** softkey opens a submenu for setting the step size of the center frequency. The step size can be coupled to the span (frequency domain) or the resolution bandwidth (time domain) or it can be manually set to a fixed value. The softkeys are mutually exclusive selection keys.

The **FREQUENCY OFFSET** softkey activates the window for entering an arithmetical frequency offset which is added to the frequency axis labelling. The allowed range of values for the offset is -100 GHz to 100 GHz. The default setting is 0 Hz.

IEC/IEEE bus command: `FREQ:OFFS 10 MHz`




The center frequency can be adjusted either by typing in the carrier frequency or by using the up and down keys or the rotary knob. The stepsize can be set, e.g. to a carrier spacing in multicarrier measurements. With the **CF STEPSIZE** softkey, a submenu with the **MANUAL** softkey is available. The default value of 10 Hz can be adjusted.



IEC/IEEE bus command: `:SENS:FREQ:CENT:STEP 15 Hz`

Span Settings – Key **SPAN**

The **SPAN** key is disabled for measurements in the CDP mode. For all other measurements (see **MEAS** key), the permissible span settings are described with the relevant measurement. The associated menu corresponds to that of the measurement in the basic unit and is described in the manual of the basic unit.

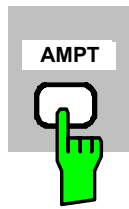Level Settings – Key *AMPT*

REF LEVEL

The *AMPT* key opens a submenu for level setting.

ADJUST
REF LVL

The *REF LEVEL* softkey allows the reference level to be input in the currently active unit (dBm, dB μ V, etc).

REF LEVEL
POSITION

IEC/IEEE bus command: `DISP:WIND:TRAC:Y:RLEV -60dBm`

ADJUST REF LVL executes a routine for optimum adjustment of the reference level to the signal.

Y PER DIV

IEC/IEEE bus command: `:SENS1|2:CDP:LEV:ADJ`

The *REF LEVEL OFFSET* softkey allows the arithmetic level offset to be entered. This offset is added to the measured level irrespective of the selected unit. The scaling of the Y-axis is changed accordingly. The setting range is ± 200 dB in 0.1 dB steps.

REF VALUE
POSITION

IEC/IEEE bus command:

`:DISP:WIND:TRAC:Y:RLEV:OFFS -10dB`

Y PER DIV determines the grid spacing on the Y axis for all diagrams, where possible.

RF ATTEN
MANUAL

IEC/IEEE bus command:

`:DISP:WIND1|2:TRAC1:Y:SCAL:PDIV`

REF VALUE POSITION allows entry of the position of the reference value on the Y axis (0 – 100%).

IEC/IEEE bus command:

`:DISP:WIND1|2:TRAC1:Y:SCAL::RPOS`

The *RF ATTEN MANUAL* softkey allows the attenuation to be entered irrespective of the reference level.

If the defined reference level cannot be set for the given RF attenuation, the reference level will be adjusted accordingly and the warning "Limit reached" will be output.

IEC/IEEE bus command:

`INP:ATT 40 DB`

The *RF ATTEN AUTO* softkey sets the RF attenuation automatically as a function of the selected reference level.


This ensures that the optimum RF attenuation desired by the user is always used.

RF ATTEN AUTO is the default setting.

IEC/IEEE bus command:

`INP:ATT:AUTO ON`

Marker Settings – Key MKR

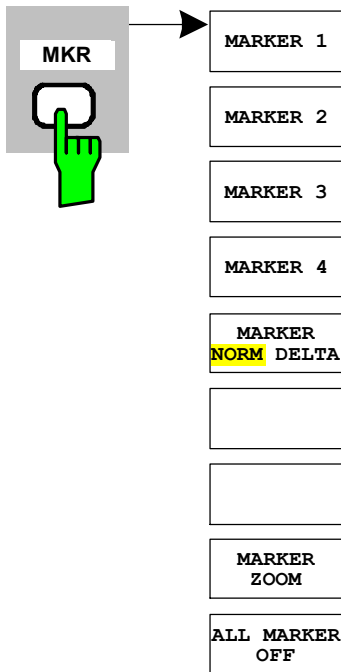

The *MARKER* key opens a submenu for the marker settings.

Markers are not available for the *RESULT SUMMARY* and *CHANNEL TABLE* displays. In all other displays, up to four markers can be activated, which can be defined as marker or delta marker by means of the *MARKER NORM/DELTA* softkey.

The *MARKER 1/2/3/4* .softkey selects the corresponding marker and activates it.

MARKER 1 is always the normal marker. After they have been switched on, *MARKERS 2 to 4* are delta markers that refer to *MARKER 1*. These markers can be converted into markers with absolute value display by means of the *MARKER NORM DELTA* softkey. When *MARKER 1* is the active marker, pressing the *MARKER NORM DELTA* softkey switches on an additional delta marker.

Pressing the *MARKER 1 to 4* softkey again switches off the selected marker.

IEC/IEEE bus command:

```

CALC:MARK ON;
CALC:MARK:X <value>;
CALC:MARK:Y?
CALC:DELT ON;
CALC:DELT:MODE ABS|REL
CALC:DELT:X <value>;
CALC:DELT:X:REL?
CALC:DELT:Y?
    
```

The *MARKER ZOOM* softkey expands the area around *MARKER 1*. With the zoom function, more details of the display can be seen.

If *MARKER 1* is not active when the softkey is pressed, it is automatically activated and set to the highest peak in the window.

If an instrument setting is changed after selection of *MARKER ZOOM*, the function is aborted.

IEC/IEEE bus command:

```

CALC:MARK1:FUNC:ZOOM
    
```

The *ALL MARKER OFF* softkey switches off all markers (reference and delta markers). It also switches off all functions and displays associated with the markers/delta markers.

IEC/IEEE bus command:

```

CALC:MARK:AOFF
    
```

The parameters concerning an activated marker are output at the top of the diagram:





Fig. 34 Parameters of the marker info field

Besides the channel power, the parameters are:

- Slot 4: Slot number of the channel
- SR 960 ksp/s: Symbol rate of the channel unassigned codes 15 ksp/s)
- Ch 2: Number of the spreading code of the channel

For all other measurements, the marker functions of the basic unit apply.

Changing Instrument Settings – Key MKR→

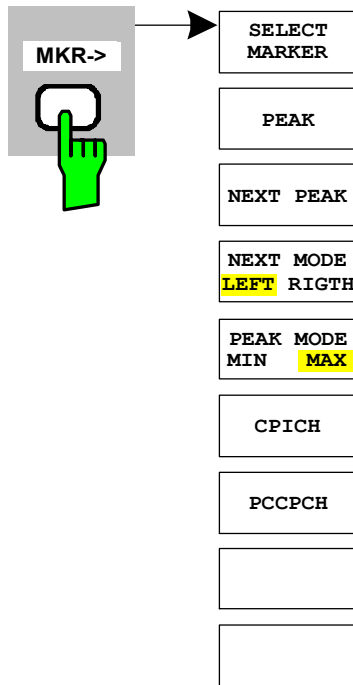

The *MKR→* key opens a submenu for marker functions:

The *SELECT MARKER* softkey activates the numerical selection of the marker in the data entry field. Delta marker 1 is selected by input of '0'.

IEC/IEEE bus command: `CALC:MARK1 ON;`
 `CALC:MARK1:X <value>;`
 `CALC:MARK1:Y?`

The *PEAK* softkey sets the active marker or delta marker to the peak of the trace.

If no marker is active when *MKR->* menu is called, *MARKER 1* is automatically switched on and the peak search is performed.

IEC/IEEE bus command: `CALC:MARK:MAX`
 `CALC:DELT:MAX`
 `CALC:MARK:MIN`
 `CALC:DELT:MIN`

The *NEXT PEAK* softkey sets the active marker/delta marker to the next lower peak value on the trace. The search direction is defined in the *NEXT MODE* submenu (see below).

IEC/IEEE bus command: `CALC:MARK:MAX:NEXT`
 `CALC:DELT:MAX:NEXT`
 `CALC:MARK:MIN:NEXT`
 `CALC:DELT:MIN:NEXT`

The *NEXT MODE LEFT/RIGHT* softkey defines the searching direction for the search of the next maximum/minimum. For *NEXT MODE LEFT/RIGHT* the next extremum is searched to the left/right of the active marker.

IEC/IEEE bus command: `CALC:MARK:MAX:LEFT`
 `CALC:DELT:MAX:LEFT`
 `CALC:MARK:MIN:LEFT`
 `CALC:DELT:MIN:LEFT`
 `CALC:MARK:MAX:RIGH`
 `CALC:DELT:MAX:RIGH`
 `CALC:MARK:MIN:RIGH`
 `CALC:DELT:MIN:RIGH`

The *PEAK MODE MIN/MAX* softkey defines whether the peak should be searched in minima or maxima. This parameter influences the behaviour of the softkeys *PEAK* and *NEXT PEAK*.

IEC/IEEE bus command: `--`

Marker Functions – Key MKR FCTN

The *MKR FCTN* key is disabled for all measurements in the code domain power. For all other R&S FS-K73 measurements, the menu softkeys are described in the manual of the basic unit.

Bandwidth Setting – Key BW

The *BW* key is disabled for all measurements in the code domain power. For all other R&S FS-K73 measurements, the menu-specific softkeys are described in the manual of the basic unit.

Measurement Control – Key SWEEP


The menu of the *SWEEP* key contains options for switchover between single measurement and continuous measurement and for the control of individual measurements. For measurements within the spectrum, the measurement time for a sweep can also be set. All menu-specific softkeys are described in the manual of the basic unit.

Measurement Selection – Key MEAS

The menu of the *MEAS* key contains all the R&S FS-K73 measurements, which can be selected at a keystroke. The menu and its submenus are described in chapter 6.

Trigger Settings – Key TRIG

The selectable trigger functions depend on the measurement selected. Code domain power measurements allow the free run mode as well as the frame trigger mode specified by the 3GPP standard. For all other measurements, the trigger modes are identical to those of the corresponding measurement in the basic unit. The associated softkeys are described in the manual of the basic unit.

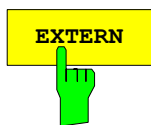

With the *TRIGGER EXTERN* softkey the external trigger source can be selected. The external trigger level can be adjusted in the range from 0.5V to 3.5V. The default value is 1.4 V.

IEC/IEEE bus commands:

```
:TRIG:SEQ:LEV:EXT <numeric_value>
```

Read trigger level

```
:TRIG1:SEQ:LEV:EXT?
```


Activate external Trigger Mode

```
:TRIG1:SEQ:SOUR EXT
```

Inactivate external Trigger Mode

```
:TRIG1:SEQ:SOUR IMM
```


Trace Settings – Key TRACE

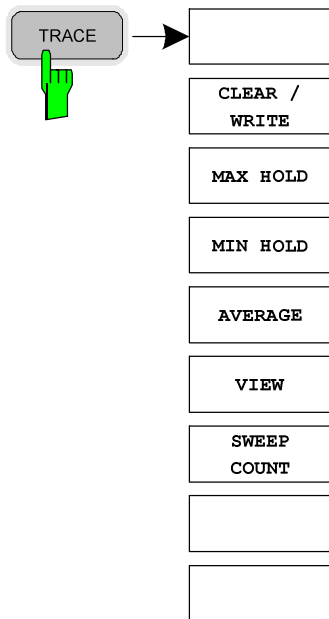

The Key *TRACE* opens the following submenu:

The *CLEAR/WRITE* softkey activates the overwrite mode for the collected measured values, i.e. the trace is overwritten by each sweep.

In the *CLEAR/WRITE* display mode, all available detectors can be selected. In the default mode, the autopeak detector (setting *AUTO*) is selected.

Each time the *CLEAR/WRITE* softkey is actuated, the analyzer clears the selected trace memory and restarts the measurement.

IEC/IEEE bus command `DISP:WIND:TRAC:MODE WRIT`

The *MAX HOLD* softkey activates the max peak detector.

The analyzer saves the sweep result in the trace memory only if the new value is greater than the previous one.

The signal spectrum is filled upon each sweep until all signal components are detected in a kind of envelope.

Pressing the *MAX HOLD* softkey again clears the trace memory and restarts the max hold mode.

IEC/IEEE bus command `DISP:WIND:TRAC:MODE MAXH`

The *MIN HOLD* softkey activates the min peak detector.

The analyzer saves the sweep result in the trace memory only if the new value is greater than the previous one.

The signal spectrum is filled up upon each sweep until all signal components are detected in a kind of envelope.

Pressing the *MIN HOLD* softkey again clears the trace memory and restarts the max hold mode.

IEC/IEEE bus command `DISP:WIND:TRAC:MODE MINH`

The *AVERAGE* softkey activates the trace averaging function. The average is formed over several sweeps. Averaging can be performed with any of the detectors available. If the detector is automatically selected by the analyzer, the sample detector is used.

Averaging is restarted every time the *AVERAGE* softkey is pressed. The trace memory is always cleared.

IEC/IEEE bus command `DISP:WIND:TRAC:MODE AVER`

The *VIEW* softkey freezes the current contents of the trace memory and displays them.

If a trace is frozen by *VIEW*, the instrument settings can be changed without the displayed trace being modified (exception: level display range and reference level, see below). The fact that the trace and the current instrument setting no longer agree is indicated by an enhancement label "*" at the right edge of the grid.

If in the *VIEW* display mode the level display range (*RANGE*) or the reference level (*REF LEVEL*) is changed, the R&S Analyzer automatically adapts the measured data to the changed display range. This allows an amplitude zoom to be carried out after the measurement in order to show details of the trace.

IEC/IEEE bus command `DISP:WIND:TRAC:MODE VIEW`

The *SWEEP COUNT* softkey activates the entry of the number of


sweeps used for averaging. The allowed range of values is 0 to 30000 and the following should be observed:

Sweep Count = 0 means running averaging

Sweep Count = 1 means no averaging being carried out

Sweep Count > 1 means averaging over the selected number of sweeps; in the continuous sweep mode averaging is performed until the set number of sweeps is attained and is then continued as running averaging.

The default setting is running averaging (Sweep Count = 0). The number of sweeps used for averaging is the same for all active traces in the selected diagram.

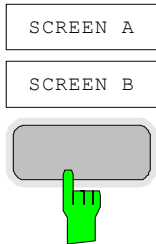

IEC/IEEE bus command SWE:COUN 64

By using the softkeys *SCREEN A* or *SCREEN B*, the upper (A) or lower (B) part of the display screen can be selected. The trace statistic functions described above are applied only to the measurement results, which are displayed in the selected screen. The display of special interest is the **RESULT SUMMARY**. It is shown in the lower part (*SCREEN B*). If the trace statistic functions are applied to the result summary, the affected results are marked if it is an average result, a max hold or a min hold result.

- CLEAR/WRITE** Displays the result value of the last sweep (<none>)
- MAX HOLD:** Displays the maximum result values of a number of sweeps (<MAX>)
- MIN HOLD:** Displays the minimum result value of a number of sweeps (<MIN>)
- AVERAGE:** displays the average result value of a number of sweeps (<AVG>)

The number of evaluated sweeps depends on the sweep count value. The figure below shows an example of the result summary display with applied sweep averaging. All averaged values are marked with "AVG". In particular, the resolution and accuracy of the trigger-to-frame value can be increased by using the trace average mode.

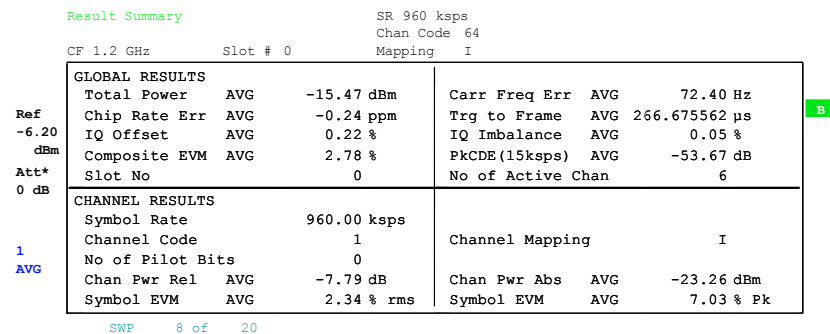


Fig. 35 Result summary with applied average mode

Display Lines – Key *LINES*

The *LINES* key is disabled for all measurements in the code domain power. For all other measurements, the menu settings are equivalent to those of the corresponding measurement in the basic unit; the associated softkeys are described in the manual of the basic unit.

Settings of Measurement Screen – Key *DISP*

The menu of the *DISP* key contains softkeys for the configuration of the measurement screen. The menus and the softkey functions are described in the manual of the basic unit.

Storing and Loading of Unit Data – Key *FILE*

The *FILE* menu is identical to that of the basic unit. All softkeys are described in the manual of the basic unit.

All keys of the analyzer front panel that are not specifically mentioned are identical to those of the basic unit. The key functions and the softkeys are described in the manual of the basic unit.

7 Remote-Control Commands

The following chapter describes the remote-control commands for the application firmware. An alphabetical list at the end of this chapter provides an overview of the commands. The commands, which are also valid for the basic unit in the signal analyzer mode as well as the system settings, are described in the operating manual of the analyzer.

CALCulate:FEED - Subsystem

The CALCulate:FEED subsystem selects the evaluation method for the measured data. This corresponds to the result display selection in manual operation.

COMMAND	PARAMETER	UNIT	COMMENT
:CALCulate<1 2> :FEED	<string>		

:CALCulate<1|2>:FEED <string>

This command selects the measured data that are to be displayed. .

Parameter: <string> ::= 'XPOWer:CDPower' |
'XPOWer:CDPower:ABSsolute' |
'XPOWer:CDPower:RATio' |
'XPOWer:CDPower:OVERview' |
'XPOW:erCDEP' |
'XTIMe:CDPower:FVSLot' |
'XTIMe:CDPower:MACCuracy' |
'XTIMe:CDPower:PVSLOT' |
'XTIMe:CDPower:PVSymbol' |
'XTIMe:CDPower:BSTReam' |
'XTIMe:CDPower:ERRor:SUMM' |
'XTIMe:CDPower:ERRor:CTABLE' |
'XTIMe:CDPower:ERRor:PCDomain' |
'XTIMe:CDPower:SYMBol:CONStellation' |
'XTIM:CDPower:SYMBol:EVM'
'XTIMe:CDPower:SYMBol:EVM:MAGNitude' |
'XTIMe:CDPower:SYMBol:EVM:PHASe'

Example: " :CALC2:FEED `XTIM:CDP:MACC` "

Features: *RST value: 'XTIM:OFF'
SCPI: conforming

Note: For code domain power (CDP) measurements, the display is always operated in the SPLIT SCREEN mode and the assignment of display mode to measurement window is fixed. Therefore, the numeric suffix that is required or permitted is given in brackets for each display mode.

The string parameters have the following meaning:

'XPOW:CDP'	Result display of code domain power as bargraph absolute scaling (CALCulate<1>)
'XPOW:CDP:ABS'	Result display of code domain power as bargraph absolute scaling (CALCulate<1>)
'XPOW:CDP:RAT'	Result display of code domain power ratio as bargraph relative scaling (CALCulate<1>)
'XPOW:CDP:OVER'	Result display of code domain power (both I and Q component) as bargraph (CALCulate<1>)

'XPOW:CDEP'	Result display of code domain error power as bargraph (CALCulate<1>)
'XTIM:CDP:ERR:SUMM'	Result display in tabular form (CALCulate2)
'XTIM:CDP:ERR:CTABLE'	Result display of channel assignment table (CALCulate<1>)
'XTIM:CDP:ERR:PCD'	Result display of peak code domain error (CALCulate2)
'XTIM:CDP:MACC'	Result display of composite EVM (error vector magnitude referenced to the overall signal) (CALCulate2)
'XTIM:CDP:PVS'	Result display of power versus slot (CALCulate2)
'XTIM:CDP:PVSY'	Result display of power versus symbol (CALCulate2)
'XTIM:CDP:BSTR'	Result display of bit stream (CALCulate2)
'XTIM:CDP:SYMB:CONS'	Result display of symbol constellation (CALCulate2)
'XTIM:CDP:SYMB:EVM'	Result display of symbol error vector magnitude (CALCulate2)
'XTIM:CDP:SYMBEVM:PHAS'	Result display of the phase of EVM versus symbols (CALCulate2)
'XTIM:CDP:SYMB:EVM:MAGN'	Result display of the magnitude of EVM versus symbols (CALCulate2)

CALCulate:LIMit – Subsystem

CALCulate:LIMit:ACPower Subsystem

The CALCulate:LIMit:ACPower subsystem defines limit checking for adjacent channel power measurements.

COMMAND	PARAMETER	UNIT	COMMENT
CALCulate<1 2> :LIMit1 :ACPower [:STATe] ACHannel [:RELative] :STATe :ABSolute :STATe :RESult? :ALternate<1...11> [:RELative] :STATe :ABSolute :STATe :RESult?	< ON OFF> <value> < ON OFF> <value> < ON OFF> <value>,<value> <value> < ON OFF> <value> < ON OFF> <value>,<value>	DB, DB DBM, DBM DB, DB	

CALCulate<1|2>:LIMit1:ACPower[:STATe] ON | OFF

This command switches on and off the limit check for adjacent channel power measurements in the selected measurement window. The commands CALCulate:LIMit:ACPower:ACHannel:STATe or CALCulate:LIMit:ACPower:ALternate:STATe must be used in addition to specify whether the limit check is to be performed for the upper/lower adjacent channel or for the alternate adjacent channels.

Example: "CALC:LIM:ACP ON"

Characteristics: *RST value: OFF
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPower:ACHannel[:RELative] 0 to 100dB, 0 to 100dB

This command defines the relative limit of the upper/lower adjacent channel for adjacent channel power measurements in the selected measurement window. The reference value for the relative limit value is the measured channel power.

It should be noted that the relative limit value has no effect on the limit check as soon as it is below the absolute limit value defined with CALCulate:LIMit:ACPower:ACHannel:ABSolute. This mechanism allows automatic checking of the absolute basic values of adjacent channel power as defined in mobile radio standards.

Parameter: The first numeric value is the limit for the upper (lower) adjacent channel. The second value is ignored but must be indicated for reasons of compatibility with the FSE family.

Example: "CALC:LIM:ACP:ACH 30DB, 30DB"
'Sets the relative limit value in for the power in the lower and upper adjacent channel to 30 dB below the channel power.

Characteristics: *RST value: 0 dB
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPoweR:ACHannel[:RELative]:STATe ON | OFF

This command activates the limit check for the relative limit value of the adjacent channel when adjacent channel power measurement is performed. Before the command, the limit check must be activated using `CALCulate:LIMit:ACPoweR:STATe ON`.

The result can be queried with `CALCulate:LIMit:ACPoweR:ACHannel:RESult?`. It should be noted that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no valid results are available.

Example: `"CALC:LIM:ACP:ACH:REL:STAT ON"`
'Switches on the check of the relative limit values for adjacent channels.

Characteristics: *RST value: OFF
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPoweR:ACHannel:ABSolute -200DBM to 200DBM,
-200 to 200DBM

This command defines the absolute limit value for the lower/upper adjacent channel during adjacent-channel power measurement (Adjacent Channel Power) in the selected measurement window.

It should be noted that the absolute limit value has no effect on the limit check as soon as it is below the relative limit value defined with `CALCulate:LIMit:ACPoweR:ACHannel:RELative`. This mechanism allows automatic checking of the absolute basic values of adjacent channel power as defined in mobile radio standards.

Parameter: The first value is the limit for the lower and the upper adjacent channel. The second limit value is ignored but must be indicated for reasons of compatibility with the FSE family.

Example: `"CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM"`
'Sets the absolute limit value in for the power in the lower and upper adjacent channel to -35 dBm.

Characteristics: *RST value: -200DBM
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPoweR:ACHannel:ABSolute:STATe ON | OFF

This command activates the limit check for the adjacent channel when adjacent-channel power measurement (Adjacent Channel Power) is performed. Before the command, the limit check for the channel/adjacent-channel measurement must be globally switched on using `CALC:LIM:ACP ON`.

The result can be queried with `CALCulate:LIMit:ACPoweR:ACHannel:RESult?`. It should be noted that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no valid results are available.

Example: `"CALC:LIM:ACP:ACH:ABS:STAT ON"`
'Switches on the check of absolute limit values for the adjacent channels.

Characteristics: *RST value: OFF
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPoweR:ACHannel:RESult?

This command queries the result of the limit check for the upper/lower adjacent channel in the selected measurement window when adjacent channel power measurement is performed.

If the power measurement of the adjacent channel is switched off, the command produces a query error.

Parameter: The result is returned in the form <result>, <result> where
<result> = PASSED | FAILED, and where the first returned value denotes the
lower, the second denotes the upper adjacent channel.

Example: "CALC:LIM:ACP:ACH:RES?"
'Queries the limit check result in the adjacent channels Sets the relative limit
value for the power in the lower and upper adjacent channel to 30 dB below the
channel power.

Characteristics: *RST value: --
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPower:ALternate<1...11>[:RELative] 0 to 100dB,
0 to 100dB

This command defines the limit for the selected alternate adjacent channel in the selected
measurement window for adjacent channel power measurements. The reference value for the
relative limit value is the measured channel power.

The numeric suffix after ALternate<1...11> denotes the first or the second alternate channels.
It should be noted that the relative limit value has no effect on the limit check as soon as it is below
th absolute limit defined with CALCulate:LIMit:ACPower:ALternate:ABSolute. This
mechanism allows automatic checking of the absolute basic values of adjacent channel power as
defined in mobile radio standards.

Parameter: The first value is the limit for the lower and the upper alternate adjacent channel.
The second limit value is ignored but must be indicated for reasons of
compatibility with the FSE family.

Example: "CALC:LIM:ACP:ALT2 30DB, 30DB"
'Sets the relative limit value for the power in the lower 'and upper second
alternate adjacent channel to 30 dB below the channel power.

Characteristics: *RST value: 0dB
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPower:ALternate<1...11>[:RELative]:STATe ON | OFF

This command activates the limit check for the selected alternate adjacent channel in the selected
measurement window for adjacent channel power measurements. Before the command, the limit
check must be activated using CALCulate:LIMit:ACPower:STATe ON.

The numeric suffix after ALternate denotes alternate channel.

The result can be queried with CALCulate:LIMit:ACPower:ALternate<1...11>:RESult?. It
should be noted that a complete measurement must be performed between switching on the limit
check and the result query, since otherwise no valid results are obtained.

Example: "CALC:LIM:ACP:ACH:REL:STAT ON"
'Switches on the check of the relative limit values for the first alternate adjacent
channels

Characteristics: *RST value: OFF
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPpower:ALTErnate<1...11>ABSolute -200DBM to 200DBM,
-200DBM to .200DBM

This command defines the absolute limit value for the selected alternate adjacent channel power measurement (Adjacent Channel Power) in the selected measurement window.

The numeric suffix after `ALTErnate` denotes the first or the second alternate channel.

It should be noted that the absolute limit value for the limit check has no effect as soon as it is below the relative limit value defined with `CALCulate:LIMit:ACPpower:ALTErnate:RELative`. This mechanism allows automatic checking of the absolute basic values defined in mobile radio standards for the power in adjacent channels.

Parameter: The first value is the limit for the lower and the upper alternate adjacent channel. The second limit value is ignored but must be indicated for reasons of compatibility with the FSE family.

Example: "CALC:LIM:ACP:ALT2:ABS -35DBM, -35DBM"
'Sets the absolute limit value for the power in the lower and upper second alternate adjacent channel to -35 dBm.

Characteristics: *RST value: -200DBM
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPpower:ALTErnate<1...11>ABSolute:STATe ON | OFF

This command activates the limit check for the selected alternate adjacent channel in the selected measurement window for adjacent channel power measurement (Adjacent Channel Power).

Before the command, the limit check must be globally switched on for the channel/adjacent channel power with the command `CALCulate:LIMit:ACPpower:STATe ON`.

The numeric suffix after `ALTErnate` denotes the alternate channel.

The result can be queried with `CALCulate:LIMit:ACPpower:ALTErnate:RESult?`. It should be noted that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no valid results are available.

Example: "CALC:LIM:ACP:ACH:ABS:STAT ON"
'Switches on the check of absolute limit values for the first alternate adjacent channels.

Characteristics: *RST value: OFF
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPpower:ALTErnate<1...11>RESult?

This command queries the result of the limit check for the selected alternate adjacent channel in the selected measurement window for adjacent channel power measurements.

The numeric suffix after `ALTErnate` denotes the alternate channel.

If the power measurement of the adjacent channel is switched off, the command produces a query error.

Parameter: The result is returned in the form <result>, <result> where <result> = PASSED | FAILED and where the first (second) returned value denotes the lower (upper) alternate adjacent channel.

Example: "CALC:LIM:ACP:ALT2:RES?"
'Queries the limit check result in the second alternate adjacent channels.

Characteristics: *RST value: --
SCPI: device-specific

CALCulate:LIMit:ESPECtrum Subsystem

COMMAND	PARAMETER	UNIT	COMMENT
CALCulate:LIMit:ESpectrum :MODE :CHECK :X :Y :TRANSition	AUTO USER <numeric value> <numeric value>		Query only Query only

:CALCulate:LIMit:ESpectrum:MODE AUTO | USER

This command activates or deactivates automatic selection of the limit line in the spectrum emission mask measurement.

Parameters: AUTO The limit line is set as a function of the measured channel power.
 USER Query only; user-defined limit lines are active
 (refer to description of limit lines in manual for basic unit).

Example: ":CALC:LIM:ESP:MODE AUTO"

Features: *RST value: AUTO
 SCPI: device-specific

:CALCulate:LIMit:ESpectrum:CHECK:X?

With this commands the frequency value of the worst fail of a SEM measurement can be queried.

Unit: [Hz]

Example: ":CALC:LIM:ESP:CHECK:X?"

Features: *RST value: -
 SCPI: device-specific

:CALCulate:LIMit:ESpectrum:CHECK:Y?

With this command the power value of the worst fail of a SEM measurement can be queried.

Unit: [dBm]

Example: ":CALC:LIM:ESP:CHECK:Y?"

Features: *RST value: -
 SCPI: device-specific

:CALCulate<1|2>:LIMit<1...8>:ESpectrum:TRANSition <numeric value>

This command specifies the offset frequency at which the resolution bandwidth is changed between 30 kHz and 1 MHz. The default value is 3.5 MHz.

Example: ":CALC2:LIM:ESP:TRAN 3 MHz"

Features: *RST value:: 3.5 MHz
 SCPI: device-specific

CALCulate:MARKer – Subsystem

COMMAND	PARAMETER	UNIT	COMMENT
CALCulate<1 2> :MARKer<1...4> :FUNctioN :WCDPower :MS :RESult?	PTOTal FERRor TFRame MACCuracy PCDError EVMRms EVMPeak CERRor CSLot SRATe CHANnel CDPabsolute CDPRelative IQOffset IQIMbalance CMAPping PSYMBOL RHO TOFFset		
:POWER :RESult?	ACPower CPOWer MCACpower OBANdwidth OBWidth CN CNO		
:PHZ	ON OFF		

:CALCulate<1|2>:MARKer<1>:FUNctioN:WCDPower:MS:RESult?

PTOTal | FERRor | TFRame | MACCuracy | PCDError | EVMRms | EVMPeak | CERRor |
CSLot | SRATe | CHANnel | CDPabsolute | CDPRelative | IQOffset | IQIMbalance |
CMAPping | PSYMBOL | RHO | TOFFset

This command queries the measured and calculated results of the 3GPP FDD code domain power measurement.

- PTOTal total power
- FERRor frequency error in Hz
- TFRame trigger to frame
- MACCuracy composite EVM
- PCDError peak code domain error
- EVMRms error vector magnitude RMS
- EVMPeak error vector magnitude peak
- CERRor chip rate error
- CSLot channel slot number
- SRATe symbol rate
- CHANnel channel number
- CDPabsolute channel power absolute
- CDPRelative channel power relative
- IQOffset IQ offset
- IQIMbalance IQ imbalance
- CMAPping Channel component
- PSYMBOL Number of pilot bits
- RHO Quality paramter rho for every slot
- TOFFset Offset between the start of the first slot in the channel and the start of the analyzed 3GPP FDD frame.

Example: ":CALC:MARK:FUNC:WCDP:RES? PTOT"

Features: *RST value: -
SCPI: device-specific

:CALCulate<1|2>:MARKer1:FUNCtion:POWer:RESult:PHZ ON|OFF

This command switches the query response of the power measurement results in the indicated measurement window between output of absolute values (OFF) and output referred to the measurement bandwidth (ON). The measurement results are output with `CALCulate:MARKer:FUNCtion:POWer:RESult?`

Parameters:

ON	Results output referred to measurement bandwidth.
OFF	Results output in absolute values.

Example: `"CALC:MARK:FUNC:POW:RES:PHZ ON"`

Characteristics: *RST value: OFF
SCPI: device-specific

CALCulate:STATistics - Subsystem

The CALCulate:STATistics subsystem controls the statistical measurement functions in the instrument. The measurement window cannot be selected with these functions. The numeric suffix in CALCulate is therefore ignored.

COMMAND	PARAMETER	UNIT	COMMENT
:CALCulate			
:STATistics			
:MS			
:CCDF			
[:STATe]	<Boolean>		
:NSAMples	<numeric_value>	--	
:SCALE			
:Y			
:UPPer	<numeric_value>	--	
:LOWe	<numeric_value>	--	
:PRESet			

:CALCulate:STATistics:MS:CCDF[:STATe] ON | OFF

This command switches on or off the measurement of the complementary cumulative distribution function (CCDF).

Example: "CALC:STAT:MS:CCDF ON"

Features: *RST value: OFF
 SCPI: device-specific

:CALCulate:STATistics:NSAMples 100 to 32768

This command sets the number of measurement points to be acquired for the statistical measurement functions

Example: "CALC:STAT:NSAM 5000"

Features: *RST value: 10000
 SCPI: device-specific

:CALCulate:STATistics:SCALE:Y:UPPer 1E-5 to 1.0

This command defines the upper limit for the Y-axis of the diagram in statistical measurements. Since probabilities are specified on the Y-axis, the entered numerical values are dimensionless.

Example: "CALC:STAT:SCAL:Y:UPP 0.01"

Features: *RST value: 1.0
 SCPI: device-specific

:CALCulate:STATistics:SCALE:Y:LOWer 1E-6 to 0.1

This command defines the lower limit for the Y-axis of the diagram in statistical measurements. Since probabilities are specified on the Y-axis, the entered numerical values are dimensionless.

Example: "CALC:STAT:SCAL:Y:LOW 0.001"

Features: *RST value: 1E-6
 SCPI: device-specific

:CALCulate:STATistics:PRESet[

This command resets the scaling of the X and Y axes in a statistical measurement. The following values are set:

X axis ref level: -20 dBm
X axis range APD: 100 dB
X axis range CCDF: 20 dB

Y axis upper limit: 1.0
Y axis lower limit: 1E-6

Example: "CALC:STAT:PRES" Resets the scaling for statistical functions

Characteristics: *RST value: --
 SCPI: device-specific

This command is an "event" which is why it is not assigned an *RST value and has no query.

CONFigure:WCDPower Subsystem

This subsystem comprises the commands for configuring the code domain power measurements. Only the numeric suffix 1 is permissible in CONFigure.

COMMAND	PARAMETER	UNIT	COMMENT
CONFigure :WCDPower :MS :MEASurement :CTABLE [:STATe] :SElect :NAME :DATA :HSDPcch :COMMent :COPY :DElete :CATalog? :EDATa :EDPCch	POWer ACLR ESPectrum OBANdwidth OBWidth WCDPower CCDF <Boolean> <file_name> <file_name> <numeric_value>, <numeric_value> <Boolean> <string> <file_name> <numeric_value>, <numeric_value>.. <Boolean>		Option R&S FS-K73

CONFigure<1>:WCDPower:MS:MEASurement POWer | ACLR | ESPectrum | OBANdwith | OBWidth | WCDPower | CCDF

This command selects the 3GPP FDD user equipment tests. The settings of the predefined measurements are described for the associated softkey in chapter 6.

Parameter:

- POWER Channel power measurement (standard 3GPP 3GPP FDD Forward) with predefined settings
- FDD
- ACLR Adjacent channel power measurement (standard 3GPP 3GPP FDD Forward) with predefined settings
- ESPectrum Measurement of spectrum emission mask
- OBANdwith | OBWidth Measurement of occupied power bandwidth
- WCDPower Code domain power measurement. This selection has the same effect as command INSTRument:SElect WCDPower.
- CCDF Measurement of Complementary Cumulative Distribution Function

Example: "CONF:WCDP:MS:MEAS POW"

Features:

- *RST value: POWER
- SCPI: device-specific

:CONFigure<1>:WCDPower:MS:CTABle[:STATe] ON | OFF

This command switches the channel table on or off. On switching on, the measured channel table is stored under the name RECENT and switched on. After the RECENT channel table is switched on, another channel table can be selected with the command `CONF:WCDP:MS:CTABle:SElect`.

Note: *The RECENT channel table must always be switched on first with the command `CONF:WCDP:MS:CTAB:STAT` and then the required channel table can be selected with the command `CONF:WCDP:CTAB:SEL`*

Example: `" :CONF:WCDP:MS:CTAB ON"`

Features: *RST value: OFF
SCPI: device-specific

:CONFigure<1>:WCDPower:MS:CTABle:SElect <string>

This command selects a predefined channel table file. Before using this command, the RECENT channel table must be switched on first with the command `CONF:WCDP:CTAB:STATe ON`.

Example: `" :CONF:WCDP:MS:CTAB ON"`
`" :CONF:WCDP:MS:CTAB:SEL 'CTAB_1' "`

Features: *RST value: "RECENT"
SCPI: device-specific

:CONFigure:WCDPower:MS:CTABle:NAME <file_name>

This command selects an existing channel table or creates the name of a new channel table.

Example: `" :CONF:WCDP:CTAB:NAME 'NEW_TAB' "`

Features: *RST value: "RECENT"
SCPI: device-specific

:CONFigure:WCDPower:MS:CTABLE:DATA <numeric_value>,<numeric_value>..

This command defines the values of the selected channel table. Each line of the table consists of 6 values:

<pilot length>,<code class>,<number of active channels>,<CDP rel. 1 [dB]>,
<CDP rel. 2 [dB]>,<CDP rel. 3 [dB]>,<CDP rel. 4 [dB]>,<CDP rel. 5 [dB]>,<CDP rel. 6 [dB]>

Pilot length: pilot length of channel DPCCH

Code class: code class of channel 1. I-mapped

Number of active channels: 1 to 7

CDP rel. 1: measured value of channel 1, only when queried

CDP rel. 2: measured value of channel 2, only when queried

CDP rel. 3: measured value of channel 3, only when queried

CDP rel. 4: measured value of channel 4, only when queried

CDP rel. 5: measured value of channel 5, only when queried

CDP rel. 6: measured value of channel 6, only when queried

The Channel DPCCH may only be defined once. If channel DPCCH is missing in the command, it is automatically added at the end of the table.

Prior to this command, the name of the channel table has to be defined with command
CONF:WCDP:MS:CTAB:NAME.

Example: " :CONF:WCDP:MS:CTAB:DATA 8,0,0,5,1,0.00,
4,1,1,0,1,0.00,4,1,0,0,1,0.00"

The following channels are defined: DPCCH and two data channels with 960 kbps.

Features: *RST value: -
SCPI: device-specific

:CONFigure:WCDPower:MS:CTABLE:DATA:HSDPcch ON|OFF

This command activates [ON] or deactivates [OFF] the HS-DPCCH entry in a predefined channel table.

Example: :CONF:WCDP:MS:CTAB:DATA:HSDP ON

Characteristics: *RST- value: ON
SCPI: device-specific

:CONFigure:WCDPower:MS:CTABLE:COMMENT <string>

This command defines a comment for the selected channel table

Prior to this command, the name of the channel table has to be defined with command
CONF:WCDP:MS:CTAB:NAME and the values of the table have to be defined with command
CONF:WCDP:MS:CTAB:DATA.

Example: " :CONF:WCDP:MS:CTAB:COMM 'Comment for table 1'"

Features: *RST value: ""
SCPI: device-specific

:CONFigure:WCDPower:MS:CTABLE:COpy <file_name>

This command copies one channel table onto another one. The channel table to be copied is selected with command `CONF:WCDP:MS:CTAB:NAME`.

Parameter: <file_name> ::= name of the new channel table

Example: `" :CONF:WCDP:MS:CTAB:COpy 'CTAB_2' "`

Features: *RST value: --
SCPI: device-specific

The name of the channel table may contain a maximum of 8 characters. This command is an "event" which is why it is not assigned an *RST value and has no query.

:CONFigure:WCDPower:MS:CTABLE:DELeTe

This command deletes the selected channel table. The channel table to be deleted is selected with command `CONF:WCDP:MS:CTAB:NAME`.

Example: `" :CONF:WCDP:MS:CTAB:DEL "`

Features: *RST value: --
SCPI: device-specific

This command is an "event" which is why it is not assigned an *RST value and has no query.

:CONFigure:WCDPower:MS:CTABLE:CATalog?

This command reads out the names of all channel tables stored on the harddisk.

Syntax of output format:

<Sum of file lengths of all subsequent files>,<free memory on hard disk>,
<1st file name>,,<1st file length>,<2nd file name>,,<2nd file length>,,...,<nth file name>,
<nth file length>

Example: `" :CONF:WCDP:MS:CTAB:CAT? "`

Features: *RST value: --
SCPI: device-specific

:CONFigure:WCDPower:MS:CTABLE:EDATa <code class>,<number of active channels>,
<CDP rel. 1 [dB]>,<CDP rel. 2 [dB]>,<CDP rel. 3 [dB]>,
<CDP rel. 4 [dB]>

This command defines the values of the selected channel table.

Code class: code class of channel 1.

Number of active channels: 0 to 4

ECDP rel. 1: measured value of channel 1, only when queried

ECDP rel. 2: measured value of channel 2, only when queried

ECDP rel. 3: measured value of channel 3, only when queried

ECDP rel. 4: measured value of channel 4, only when queried

Example: `" :CONF:WCDP:MS:CTAB:EDAT "`

Features: *RST value -
SCPI: device-specific

:CONFigure:WCDPower:MS:CTABLE:EDATa:EDPCch ON|OFF

This command activates [ON] or deactivates [OFF] the E-DPCCH entry in a predefined channel table..

Example: `:CONF:WCDP:MS:CTAB:EDAT:EDPC ON`

Features: *RST value OFF
SCPI: device-specific

DISPlay – Subsystem

The DISPLay subsystem controls the selection and presentation of textual and graphic information as well as of measurement data on the display. The measurement windows are selected by WINDow1 (screen A) or WINDow2 (screen B) .

COMMAND	PARAMETER	UNIT	COMMENT
:DISPlay [:WINDow<1 2>] :SIZE :TRACe :MODE	LARGE SMALL VIEW	--	

:DISPlay[:WINDow<1|2>]:SIZE LARGE | SMALL

This command switches the diagram to full screen size.

LARGE full screen size.

SMALL small screen size of the ACLR diagramm.

Example: "DISP:WIND1:SIZE LARG"

Characteristics: *RST value: SMALL
SCPI: device-specific

Query of results: :DISP:WINDow1:SIZE?

Result: <LARG | SMALL>

:DISPlay[:WINDow<1|2>]:TRACe<1...3>:MODE VIEW

This command freezes the current contents of the trace memory and displays them.

If a trace is frozen by *VIEW*, the instrument settings can be changed without the displayed trace being modified (exception: level display range and reference level, see below). The fact that the trace and the current instrument setting no longer agree is indicated by an enhancement label "*" at the right edge of the grid.

If in the *VIEW* display mode the level display range (*RANGE*) or the reference level (*REF LEVEL*) is changed, the R&S Analyzer automatically adapts the measured data to the changed display range. This allows an amplitude zoom to be carried out after the measurement in order to show details of the trace.

Example: :DISP:WIND:TRAC:MODE VIEW

Features: *RST value: WRITe for TRACe1, STATe OFF for TRACe2/3
SCPI: device-specific

SENSe:CDPower Subsystem

This subsystem controls the parameters for the code domain mode. The numeric suffix in `SENSe<1|2>` is not significant in this subsystem.

COMMAND	PARAMETER	UNIT	COMMENT
[SENSe<1 2>] :CDPower			Option R&S FS-K73
:SBANd	NORMal INVerse		
:LCODE			
[:VALue]	<hex>	--	
:DVALue	<numeric_value>	--	
:TYPE	LONG SHORT	--	
:HSDPamode	ON OFF	--	
:CODE	<numeric_value>	--	
:SLOT	<numeric_value>		
:SFACTor	4 8 16 32 64 128 256	--	
:MAPPING	I Q	--	
:NORMalize	<Boolean>	--	
:QINVert	<Boolean>		
:BASE	SLOT FRAME		
:IQLength	<numeric value>		
:OVERview	<Boolean>		
:ETCHips	<Boolean>		
:FILTer			
[:STATe]	<Boolean>		
:FRAME			
[:VALue]	<numeric value>		
:POWER			
:ACHannel			
:PRESet			
:RLEVel	--		

: [SENSe:]CDPower:SBANd NORMal | INVers

This command is for interchanging the left and the right sideband.

Example: ":CDP:CDP:SBAN INV"

Features: *RST value: NORM
 SCPI: device-specific

: [SENSe:]CDPower:LCODE[:VALue] #H0 to #H1fff

This command defines the scrambling code in hexadecimal format.

Example: ":CDP:LCOD #H2"

Features: *RST value: 0
 SCPI: device-specific

: [SENSe:]CDPower:LCODE:TYPE LONG | SHORT

This command switches between long and short scrambling code.

Example: ":CDP:LCOD:TYPE SHOR"

Features: *RST value: LONG
 SCPI: device-specific

:[SENSe<1|2>:]CDPower:HSDPamode ON|OFF

This command selects if the HS-DPCCH channel is searched or not.

ON: The HSUPA/HSDPA channel can be detected.

OFF: The HSUPA/HSDPA channel cannot be detected.

Example: :CDP:HSDP OFF

Characteristics: *RST value: ON
SCPI: device-specific

:[SENSe:]CDPower:CODE 0 to 255

This command sets the code number. The code number refers to code class 8 (spreading factor 256).

Example: ":SENS:CDP:CODE 128"

Features: *RST value: 0
SCPI: device-specific

:[SENSe:]CDPower:SLOT 0 to 14

This command sets the slot number.

Example: ":SENS:CDP:SLOT 3"

Features: *RST value: 0
SCPI: device-specific

:[SENSe:]CDPower:SFACtor 4 | 8 | 16 | 32 | 64 | 128 | 256

This command defines the spreading factor. The spreading factor is only significant for display mode PEAK CODE DOMAIN ERROR.

Example: ":SENS:CDP:SFAC 256"

Features: *RST value: 256
SCPI: device-specific

:[SENSe:]CDPower:MAPPING I | Q

This command switches between I and Q component of the signal.

Example: "CDP:MAPP I"

Features: *RST value: Q
SCPI: device-specific

:[SENSe:]CDPower:NORMAlize ON | OFF

This command switches elimination of IQ offset on or off.

Example: " :SENS:CDP:NORM OFF"

Features: *RST value: OFF
SCPI: device-specific

:[SENSe:]CDPower:QINVert ON | OFF

This command inverts the Q component of the signal.

Example: " :SENS:CDP:QINV ON"

Features: *RST value: OFF
SCPI: device-specific

:[SENSe<1|2>:]CDPower:BASE SLOT | FRAME

This command chooses the base of the CDP analysis: At SLOT one slot of the signal is analyzed only; at FRAME the complete 3GPP frame will be analyzed.

Example: " :CDP:BASE SLOT"

Features: *RST value: SLOT
SCPI: device-specific

:[SENSe<1|2>:]CDPower:OVERview ON | OFF

This command switches to an overview display of a code domain measurement ($CDP_{rel.}$ / $CDP_{abs.}$ / CDEP). If it is enabled ("ON"), the I branch of the code power is displayed in screen A and the Q branch in screen B. Both results can be read via IEC by using

Example: " :CDP:OVER OFF"

Features: *RST value: OFF
SCPI: device-specific

:[SENSe:]CDPower:ETCHips ON|OFF

This command selects length of the measurement interval for calculation of error vector magnitude (EVM). In accordance with 3GPP specification Release 5, the EVM measurement interval is one slot (4096 chips) minus 25 μ s at each end of the burst (3904 chips) if power changes are expected. If no power changes are expected, the evaluation length is one slot (4096 chips).

ON: Changes of power are expected. Therefore an EVM measurement interval of one slot minus 25 μ s (3904 chips) is considered.

OFF: Changes of power are not expected. Therefore an EVM measurement interval of one slot (4096 chips) is considered

Example: :SENS:CDP:ETCH ON

Features: *RST value: OFF
SCPI:

:[SENSe:]CDPower:FILTer[:STATe] ON|OFF

This command selects if a root raised cosine (RRC) receiver filter is used or not. This feature is useful if the RRC filter is implemented in the device under test (DUT)

ON: If an unfiltered WCDMA signal is received (normal case), the RRC filter should be used to get a correct signal demodulation.

OFF: If a filtered WCDMA signal is received, the RRC filter should not be used to get a correct signal demodulation. This is the case if the DUT filters the signal..

Example: :SENS:CDP:FILT:STAT OFF

Features: *RST value: ON
 SCPI: device-specific

:[SENSe:]CDPower:IQLength <numeric value>

This command defines the number of frames which are captured for every sweep.

Range: R&S FSU (*free run*): <numeric value> [1 ... 2]
 R&S FSU (*ext. Trig*): <numeric value> [1 ... 3]
 R&S FSQ: <numeric value> [1 ... 100]

Example: ":CDP:IQL 1"

Features: *RST value: 1
 SCPI: device-specific

:[SENSe:]CDPower:FRAMe[:VALue] <numeric value>

This command defines the frame to be analyzed within the captured data.

Range: <numeric value> [0 ... CAPTURE_LENGTH - 1]

Example: ":CDP:FRAM:VAL 1"

Features: *RST value: 1
 SCPI: device-specific

:[SENSe<1|2>:]POWer:ACHannel:PRESet:RLEVel

This command adapts the reference level of the R&S FSU to the measured channel power. This ensures that the settings of RF attenuation and reference level are optimally adapted to the signal level so that the R&S FSU is not overdriven or that the dynamic range is not reduced by an S/N ratio that is too low.

Since the measurement bandwidth for adjacent-channel power measurements is c

Example: ":POW:ACH:PRES:RLEV "

Features: *RST value: -
 SCPI: device-specific

SENSe:Power – Subsystem

This subsystem controls the parameters for the spectral power measurements. The numeric suffix in `SENSe<1|2>` is not significant in this subsystem.

COMMAND	PARAMETER	UNIT	COMMENT
[SENSe1 2>] :POWer :ACHannel :ACPairs :BANDwidth [:CHANnel] :ACHannel :ALTErnate<1...11> :MODE :PRESet :RLEVel :REFerence :TXCHannel :AUTO :MANual :SPACing :CHANnel [:ACHannel] :ALTErnate<1...11> :TXCHannel :COUNT :HSPeed :NCORrection	<value> <value> <value> <ABSolute RELative> < MCACpower > < -- > < MINimum MAXimum LHIGhest > <value>	-- [Hz] [Hz] [Hz] -- -- -- -- -- [Hz] [Hz] [Hz] -- -- --	Option R&S FS-K72/K74

:[SENSe<1|2>]:POWer:ACHannel:ACPairs <value>

This command sets the number of adjacent channels (upper and lower channel in pairs). The number 0 stands for pure channel power measurement.

Example: "POW:ACH:ACP 2"

Characteristics: Range: 0|1|2|3
 Unit: []
 *RST value: 2
 SCPI: device-specific

Query of results: :SENS:POWer:ACH:ACP?

Result: <0|1|2|3>

:[SENSe<1|2>:]POWer:ACHannel:BANDwidth[:CHANnel] <value>

This command sets the channel bandwidth of the radio communication system. The bandwidths of adjacent channels are not influenced by this modification.

Example: "POW:ACH:BWID:CHAN 3.84MHz"

Characteristics: Range: 100Hz ... 1GHz
 Unit: [Hz]
 *RST value: 3.84 MHz
 SCPI: device-specific

Query of results: :SENS:POW:ACH:BAND:CHAN?

Result: <100Hz ... 1GHz>

:[SENSe<1|2>:]POWer:ACHannel:BANDwidth:ACHannel <value>

This command defines the channel bandwidth of the adjacent channel of the radio transmission system. If the bandwidth of the adjacent channel is changed, the bandwidths of all alternate adjacent channels are automatically set to the same value.

Example: "POW:ACH:BWID:ACH 3.84MHz"

Characteristics: Range: 100Hz ... 1GHz
 Unit: [Hz]
 *RST value: 3.84 MHz
 SCPI: device-specific

Query of results: :SENSe:POW:ACH:BAND:ACH?

Result: <100Hz ... 1GHz>

:[SENSe<1|2>:]POWer:ACHannel:BANDwidth:ALternate<1...11> <value>

This command defines the channel bandwidth of the first/second alternate adjacent channel of the radio transmission system. If the channel bandwidth of alternate adjacent channel 1 is changed, the bandwidth of alternate adjacent channel 2 is automatically set to the same value.

Example: "POW:ACH:BWID:ALT1 3.84MHz"
 "POW:ACH:BWID:ALT2 3.84MHz"

Characteristics: Range: 100Hz ... 1GHz
 Unit: [Hz]
 *RST value: 3.84 MHz
 SCPI: device-specific

Query of results: :SENS:POW:ACH:BAND:ALT<1...11>?

Result: <100Hz ... 1GHz>

:[SENSe<1|2>:] POWER:ACHannel:MODE ABSolute|RELative

This command toggles between absolute and relative adjacent channel measurement. For the relative measurement the reference value is set to the currently measured channel power by command `SENSe:POWer:ACHannel:REFeRence:AUTO ONCE`.

ABSolute absolute adjacent channel measurement.

RELative relative adjacent channel measurement.

Example: `"POW:ACH:MODE ABS"`

Characteristics: *RST value: `ABSolute`
SCPI: `device-specific`

Query of results: `:SENS:POW:ACH:MODE?`

Result: `< ABS | REL >`

:[SENSe<1|2>:]POWER:ACHannel:PRESet MCACpower

This command adjusts the frequency span, the measurement bandwidths and the detector as required for the number of channels, the channel bandwidths and the channel spacings selected in the active power measurement. If necessary, adjacent-channel power measurement is switched on prior to the adjustment. To obtain valid results, a complete sweep with synchronization to the end of the sweep must be performed after the adjustment. Synchronization is possible only in the single-sweep mode.

Example: `"POW:ACH:PRES MCAC"`

Characteristics: *RST value: `--`
SCPI: `device-specific`

:[SENSe<1|2>:]POWER:ACHannel:PRESet:RLEVEL

This command adapts the reference level to the measured channel power. This ensures, that the signal path of the instrument is not overloaded. Since the measurement bandwidth is significantly smaller than the signal bandwidth in channel power measurements, the signal path can be overloaded although the trace is still significantly below the reference level. If the measured channel power equals the reference level, the signal path is not overloaded.

Example: `"POW:ACH:PRES:RLEV"`

Characteristics: *RST value: `--`
SCPI: `device-specific`

:[SENSe<1|2>:]POWER:ACHannel:REFeRence:TXChannel:AUTO MINimum|MAXimum|LHIGhest

This command activates the automatic selection of a transmission channel to be used as a reference channel in relative adjacent-channel power measurements. The transmission channel with the highest power, the transmission channel with the lowest power, or the transmission channel nearest to the adjacent channels can be defined as a reference channel. The command is available only for multicarrier channel and adjacent-channel power measurements.

Example: `"POW:ACH:REF:TXCH:AUTO MAX"`
`"POW:ACH:REF:TXCH:AUTO LHIG"`

Characteristics:: Range: `MINimum` Transmission channel with the lowest power
`MAXimum` Transmission channel with the highest power
`LHIGhest` Lowermost transmission channel for the lower adjacent channels, uppermost transmission channel for the upper adjacent channels

Unit: `[]`

*RST value: `---`

SCPI: `device-specific`

:[SENSe<1|2>:]POWer:ACHannel:REFerence:TXCHannel:MANual <value>

This command selects a transmission channel to be used as a reference channel in relative adjacent-channel power measurements. The command is available only for multicarrier channel and adjacent-channel power measurements

Example: "POW:ACH:REF:TXCH:MAN 1"

Characteristics: Range: <1 ... number of TX channels>
 Unit: []
 *RST value: 1
 SCPI: device-specific

:[SENSe<1|2>:]POWer:ACHannel:SPACing:CHANnel <value>

This command defines the channel spacing for the carrier signals. At the same time the spacing of carriers with higher channel number are set to the same value. If the spacing is equal between all carriers it is sufficient to set the spacing between carrier 1 and 2 with the command:

SENS:POW:ACP:SPAC:CHAN1

or

SENS:POW:ACP:SPAC:CHAN.

If the spacing are set in ascending order individual spacing of the carriers can be set.

Example: "POW:ACH:SPAC:CHAN 4.8MHz" 'sets the spacing between TX carrier 2 and 3 to 4.8 MHz.

Characteristics: Range: 100Hz ... 1GHz
 Unit: [Hz]
 *RST value: 5MHz
 SCPI: device-specific

Query of results: :SENSe:POW:ACH:SPAC:CHAN?

Result: <100Hz ... 1GHz>

Note: *If the ACP or MCACP measurement is started all settings according to the standard including the channel bandwidths and channel spacings are set and can be adjusted afterwards.*

:[SENSe<1|2>:]POWer:ACHannel:SPACing[:ACHannel] <value>

This command defines the channel spacing of the adjacent channel to the TX channel. At the same time, the spacing of alternate adjacent channels 1 and 2 is set to the double or triple of the entered value.

Example: "POW:ACH:SPAC:ACH 5MHz"

Characteristics: Range: 100Hz ... 1GHz
 Unit: [Hz]
 *RST value: 5MHz
 SCPI: device-specific

Query of results: : [SENS:POW:ACHann:SPAC:ACH?

Result: <100Hz ... 1GHz>

:[SENSe<1|2>:]POWer:ACHannel:SPACing:ALTErnate<1...11> <value>

This command defines the spacing between the first (ALTErnate1) or the second alternate adjacent channel (ALTErnate2) and the TX channel. If the spacing to the alternate adjacent channel ALTErnate1 is modified, the spacing to alternate adjacent channel 2 is set to 1.5 times the entered value.

Example: "POW:ACH:SPAC:ALT1 10MHz"
"POW:ACH:SPAC:ALT2 15MHz"

Characteristics: Range: 100Hz ... 1GHz
Unit: [Hz]
*RST value: 10MHz (for ALTErnate 1)
15MHz (for ALTErnate 2)
SCPI: device-specific

Query of results: :SENS:POW:ACH:SPAC:ALT<1...11>?

Result: <100Hz ... 1GHz>

:[SENSe<1|2>:] POWer:HSPeed ON|OFF

This command switches on or off the high-speed adjacent channel leakage power measurement. The measurement itself is performed in the time domain on the center frequencies of the individual channels. The command automatically switches to the time domain and back. A weighting filters with root raised cosine characteristic and 0.22 roll off is used for band limitation.

ON high-speed measurement with RRC filter in time domain.

OFF measurement with gaussian filters in frequency domain.

Example: "POW:HSP ON"

Characteristics: *RST value: OFF
SCPI: device-specific

Query of results: :SENS:POW:HSP?

Result: <1|0>

:[SENSe<1|2>:]POWer:NCORrection ON|OFF

This command switches on or off the correction of the instrument inherent noise for ACLR measurement. On activating this function, a reference measurement of the instrument inherent noise is performed. The measured noise power is then subtracted from the power in the examined channel. The instrument inherent noise is then re-determined after any change of the center frequency, resolution bandwidth, sweep time and level setting by repeating the reference measurement in the new instrument setting.

ON inherent noise correction is switched on.

OFF inherent noise correction is switched off.

Example: "POW:NCOR ON"

Characteristics: *RST value: OFF
SCPI: device-specific

Query of results: :SENS:POWer:NCOR?

Result: <1|0>

STATus-QUESTIONable:SYNC Register

This register contains information on the error situation in the code domain power analysis of the R&S FS-K73 option. It can be queried with the following commands:

COMMAND	PARAMETER	UNIT	COMMENT
STATus :QUESTIONable :SYNC :CONDITION ? [:EVENT] ?	<numeric_value> <numeric_value>	□ □	Option R&S FS-K73

:STATus:QUESTIONable:SYNC:CONDition ?

This command reads the information on the error situation in the code domain power analysis of the R&S FS-K73 option.

Example: ":STAT:QUES:SYNC:COND ?"

Characteristics: *RST value: OFF
 SCPI: device-specific

Return value: (see Table 7-1)

:STATus:QUESTIONable:SYNC[:EVENT] ?

This command reads the information on the error situation in the code domain power analysis of the FS-K73 option. The value can only be read once.

Example: ":STAT:QUES:SYNC:EVENT?"

Characteristics: *RST value: OFF
 SCPI: device-specific

Return value: (see Table 10)

Table 10 Definition of the error bits of the SYNC register

Bit No.	Definition
0	Not used in R&S FS-K73.
1	<p>R&S FS-K73 Frame Sync failed</p> <p>This bit is set when synchronization is not possible within the application.</p> <p>Possible reasons:</p> <ul style="list-style-type: none"> Incorrectly set frequency Incorrectly set level Incorrectly set scrambling code Incorrectly set values for Q-INVERT or SIDE BAND INVERT Invalid signal at input
2 to 4	Not used in the R&S FS-K73 application.
5	<p>R&S FS-K73 Incorrect Pilot Symbol</p> <p>This bit is set when one or more of the received pilot symbols are not equal to the specified pilot symbols of the 3GPP standard.</p> <p>Possible reasons:</p> <ul style="list-style-type: none"> Incorrectly sent pilot symbols in the received frame. Low signal to noise ratio (SNR) of the WCDMA signal. One or more code channels have a significantly lower power level compared with the total power. The incorrect pilots are detected in these channels because of low channel SNR. One or more channels are sent with high power ramping. In slots with low relative power to total power, the pilot symbols might be detected incorrectly (check the signal quality by using the symbol constellation display).
6 to 14	Not used in the R&S FS-K73 application.
15	This bit is always 0.

TRACe Subsystem

:TRACe[:DATA] TRACE1 | TRACE2 | ABITstream | CTABLE | CWCDp | TPVSlot

This command transfers trace data from the controller to the instrument, the query reads trace data out of the instrument.

ABITstream can be set only if CALC2:FEED "XTIM:CDP:BSTReam" is selected (in the lower bitstream window). This command returns the bitstreams of all 15 slots one after the other, the output format may be REAL, UINT or ASCII.

The output format is equal to that of the ":TRACe1:DATA? TRACE2" command in case of an activated bitstream display. The only difference is the number of symbols which are evaluated. The ABITSTREAM command evaluates all symbols of one frame. One value is transferred per bit (range 0,1,). Each symbol contains of two (QPSK) consecutive bits. The number of symbols is not constant and may vary depending on the spreading factor of the selected channel. The bit stream may contain invalid (symbols without power). In this case the character '9' is read.

Unit: []
 Range: {0, 1, 7, 9}
 Bits per symbol: $N_{\text{BitPerSymb}} = 2$
 Number of symbols: $N_{\text{Symb}} = 150 * 2^{(8-\text{Code Class})}$
 Number of bits: $N_{\text{Bit}} = N_{\text{Symb}} * N_{\text{BitPerSymb}}$
 Format: Bit₀₀, Bit₀₁, Bit₁₀, Bit₁₁, Bit₂₀, Bit₂₁, ..., Bit_{NSymb 0}, Bit_{NSymb 1}
 Explanation:
 0 – Low state of a transmitted bit
 1 – High state of a transmitted bit
 7 – Suppressed symbol of a HS-DPCCH slot
 9 – Bit of an inactive channel

CTABLE reads out the channel table: Seven values are transmitted for each channel, the sixth value (reserved for pilot length) being constantly 0:

< class>, <channel number>, <absolute level>, <relative level>, <I/Q component>, 0, <state>...

CWCDp can be set if CODE PWR ABSOLUTE / RELATIVE, CHANNEL TABLE is selected for trace 1. The pilot length, channel state, channel type, modulation type and a reserved value are transmitted in addition to the values transmitted for trace 1. For each channel, 11 values are transmitted

<code class>, <channel number>, <IQ component>, <absolute level>, <relative level>, <timing offset>, <pilot length>, <active flag>, <channel type>, <modulation type>, <reserved>...

No.	Parameter	Range	Unit	Explanation
1)	<code class>	{2 to 8}	[1]	Code class of the channel.
2)	<channel number>	{0 to 255}	[1]	Code number of the channel.
3)	<IQ component>	{0, 1}	[1]	IQ component of the channel.
		0 - Q component		Channel symbols (S_n) sent from quadrature component; only imaginary part of S_n is used. [Re { S_n } = 0 Im { S_n } ≠ 0]
		1 - I component		Channel symbols (S_n) sent from In phase component; only real part of S_n is used. [Re { S_n } ≠ 0 Im { S_n } = 0]
4)	<absolute level>	{-∞ to ∞}	[dBm]	Absolute level of the code channel at the selected channel slot. (The channel slot can be marked by the SELECTED CPICH slot.)
5)	< relative level >	{-∞to ∞}	[dB]	Relative level of the code channel at the selected channel slot referenced to CPICH or total power. (The channel slot can be marked by the SELECTED CPICH slot.)
6)	<timing offset>	{0 to 2560}	[chips]	Timing offset of the HS-DPCCH to the frame start. The value is measured in chips. The step width is 256 chips. For all other data channels, the timing offset is zero.

7)	<pilot length>	{0 to 8}	[symbols]	Pilot length of the DPCCH.
8)	<active flag>	{0,1}	[1]	Flag to indicate whether a channel is active 0 - channel not active 1 - channel active
9)	<channel type>	{0 ... 2}	[1]	Channel type indication
		0 - DPDCH		Dedicated Physical Data Channel
		1 - DPCCH		Dedicated Physical Control Channel
		2 - HS-DPCCH		High-Speed Dedicated Physical Control Channel
		3 - E-DPCCH		Enhanced Dedicated Physical Control Channel
		4 - E-DPDCH		Enhanced Dedicated Physical Data Channel
10)	<modulation type>	{2}	[1]	Modulation type of the code channel
11)	<reserved>	{0}	[1]	Reserved for future functionality.

For TRACE1 or TRACE2 the following measured values are transferred depending on the display mode:

CODE PWR ABSOLUTE / RELATIVE , CHANNEL TABLE (TRACE1)

Each channel is defined by the class, the channel number, the absolute level, the relative level and the timing offset. The class denotes the spreading factor of the channel.

Class 8 corresponds to the highest spreading factor (256, symbol rate 15 ksps), class 2 to the lowest admissible spreading factor (4, symbol rate 960 ksps).

Five values are transmitted for each channel.

<class>,<channel number>,<absolute level>,<relative level>,<I/Q component>,

For CODE PWR ABSOLUTE / RELATIVE, the channels are output in ascending order sorted according to the code numbers, i.e. in the same sequence as they are displayed on the screen. For CHANNEL TABLE, the channels are sorted according to the code classes, i.e. the unassigned channels are transmitted last.

The units are:

Absolute level dBm,

Relative level dB referred to the total power of the signal.

The example shows the results of a query for three channels with the following configuration:

1st channel: spreading factor 256, channel number 0, component Q

2nd channel: spreading factor 4, channel number 1, component I

3rd channel: spreading factor 4, channel number 1, component Q

This yields the following result: 8,0,-20.0,0.0,0,2,-20.0,0.0,1,2,1,-20.0,0,0,0

The channels come in the same order as in the CDP diagram, i.e. depending on their position in the code domain of spreading factor 256.

CODE DOMAIN ERROR POWER (TRACE1 [Overview OFF] TRACE1 / TRACE2 [Overview ON])

Output: Five values are transmitted for each code class 8 channel. The channels are sorted according to the code numbers

Format: <code class>₁, <code number>₁, <CDEP>₁, <channel flag>₁, <code class>₂,
<code number>₂, <CDEP>₂, <channel flag>₂, ...
<code class>₂₅₆, <code number>₂₅₆, <CDEP>₂₅₆, <channel flag>₂₅₆

Unit: < [1] >, < [1] >, < [dB] >, < [1] >

Range: < 8 >, < 0...256 >, < -∞ ... ∞ >, < 0 ; 1 >

Quantity: 256

Explanation:

code class: [1] Highest code class of an uplink signal. It is always set to 8 (CC8).

code number: [1] Code number of the evaluated CC8 channel.

CDEP: [dB] Code domain error power value of the CC8 channel.

channel flag: [1] Indicates if the CC8 channel belongs to an assigned code channel:

Range: 0b00 0d0 - CC8 is inactive

 0b01 0d1 - CC8 channel belongs to an active code channel

RESULT SUMMARY (TRACE2)

The results of the RESULT SUMMARY are output in the following order:

<composite EVM>,<peak CDE>,<carr freq Error>,<chip rate error>,
<total power>,<trg to frame>,<EVM peak channel>,<EVM mean channel>,<class>,
<channel number>,<power abs. channel>,<power rel. channel>,<I/Q component>,
<pilotm length>,<IQ offset>,<IQ imbalance>

The units are:

EVM peak channel/mean channel, composite EVM, IQ offset/imbalance : %,
Peak CDE, total power and power abs. channel: dB.
Power rel. Channel: dB referred to the total power of the signal.
Carr freq error: Hz
Chip Rate Error: ppm.
Trg to Frame: μ s.
Pilot length: bits
I/Q component: absolute

POWER VS SLOT (TPVSlot)

15 pairs of CPICH slot numbers and level values are always transferred. The query is only possible in frame mode and not in slot mode. But it is possible no matter which evaluation screen is selected in the code domain analyzer.

<slot number>,<level value in dBm>,<slot number>,<level value in dBm>.....

POWER VS SLOT (TRACE2)

15 pairs of slot (slotnumber of CPICH) and level values (for 15 slots) are always transferred.

<slot number>,<level value in dB>,<slot number>,<level value in dB>.....

SYMBOL EVM (TRACE2)

The number of level values depends on the spreading factor:

Spreading factor 256	10 values	Spreading factor 128	20 values
Spreading factor 64	40 values	Spreading factor 32	80 values
Spreading factor 16	160 values	Spreading factor 8	320 values
Spreading factor 4	640 values		

PEAK CODE DOMAIN ERR and COMPOSITE EVM (TRACE2)

15 pairs of slot (slotnumber of CPICH) and values are always transferred.

PEAK CODE DOMAIN ERR: <slot number>,<level value in dB>.....

COMPOSITE EVM: <slot number>,<lvalue in %> ,

SYMBOL CONST(TRACE2)

The real and the imaginary part are transferred as a pair:

<re 0>,<im 0>,<re 1>,<im 1>.....<re n>,<im n>

For the channels have exclusively I or Q components in R&S FS-K73, the <re> or <im> values are 0, depending on the selected component.

The number of level values depends on the spreading factor:

Spreading factor 256	10 values	Spreading factor 128	20 values
Spreading factor 64	40 values	Spreading factor 32	80 values
Spreading factor 16	160 values	Spreading factor 8	320 values
Spreading factor 4	640 values		

BITSTREAM (TRACE2)

The bitstream of one slot is transferred. One value is transferred per bit (range 0,1,). The number of symbols is not constant and may vary for each sweep. Specific symbols in the bitstream may be invalid depending on the channel type and the bit rate (symbols without power). The assigned invalid bits are marked by "9".

Example: ":TRAC TRACE1,"+A\$ (A\$: data list in current format)
 ":TRAC? TRACE1"

Features: *RST value: -
 SCPI: conforming

Table of Softkeys with Assignment of IEC/IEEE Commands

3G FDD UE	INSTRument:SElect BWCDpower WCDPower
POWER	:CONFigure<1>:WCDPower:MEASurement POWER Query of results: :CALCulate<1>:MARKer<1>:FUNction:POWER:RESult? CPower
ACLR	:CONFigure<1>:WCDPower:MEASurement ACLR Query of results: :CALCulate<1>:MARKer<1>:FUNction:POWER:RESult? ACPower
NO. OF ADJ CHAN	:SENSe<1>:POWER:ACHannel:ACPairs 1 Query of results: :SENSe<1>:POWER:ACHannel:ACPairs?
ADJUST SETTINGS	:SENSe<1>:POWER:ACHannel:PRESet ACPower
SWEEP TIME	:SENSe<1>:SWEep:TIME <value> Query of results: :SENSe<1>:SWEep:TIME ? Result: <value> [sec]
NOISE CORR ON OFF	:SENSe<1>:POWER:NCORrection ON OFF Query of results: :SENSe<1>:POWER:NCORrection ? Result: <0 1>
FAST ACLR ON OFF	:SENSe<1>:POWER:HSPeed ON OFF Query of results: :SENSe<1>:POWER:HSPeed ? Result: <0 1>
DIAGRAM FULL SIZE	----
ADJUST REF LVL	:SENSe<1>:POWER:ACHannel:PRESet:RLEVel
ACLR LIMIT CHECK	:CALCulate<1>:LIMit1:ACPpower ON OFF Query of results: :CALCulate<1>:LIMit1:ACPpower ? Result: <0 1> Query of results: :CALCulate<1>:LIMit1:ACPpower:ACHannel:RESult? Result: <PASSED _{Left SB} FAILED _{Left SB} , PASSED _{Right SB} FAILED _{Right SB} > Query of results: :CALCulate<1>:LIMit1:ACPpower:ALternate<1..2>:RESult? Result: <PASSED _{Left SB} FAILED _{Left SB} , PASSED _{Right SB} FAILED _{Right SB} >
EDIT ACLR LIMIT	:CALCulate<1>:LIMit1:ACPpower:ACHannel:[RELative] <Val _{left} ,Val _{right} > Query of results: :CALCulate<1>:LIMit1:ACPpower:ACHannel:[RELative] ? Result: <Val _{left} ,Val _{right} > [dBc] :CALCulate<1>:LIMit1:ACPpower:ACHannel:[RELative]:STATE ON Query of results: :CALCulate<1>:LIMit1:ACPpower:ACHannel:[RELative]:STATE ? Result: <0 1> :CALCulate<1>:LIMit1:ACPpower:ALternate<1..2>:[RELative] <Val _{left} ,Val _{right} > Query of results: :CALCulate<1>:LIMit1:ACPpower:ACHannel:[RELative] ? Result: <Val _{left} ,Val _{right} > [dBc] :CALCulate<1>:LIMit1:ACPpower:ALternate<1..2>:[RELative]:STATE ON Query of results: :CALCulate<1>:LIMit1:ACPpower:ACHannel:[RELative]:STATE ? Result: <0 1> :CALCulate<1>:LIMit1:ACPpower:ACHannel:ABSolute <Val _{left} ,Val _{right} > Query of results: :CALCulate<1>:LIMit1:ACPpower:ACHannel:ABSolute ? Result: <Val _{left} ,Val _{right} > [dBm]

	:CALCulate<1>:LIMIT1:ACPower:ACHannel:ABSolute:STATE ON Query of results: :CALCulate<1>:LIMIT1:ACPower:ACHannel:ABSolute:STATE ? Result: <0 1>
	:CALCulate<1>:LIMIT1:ACPower:ALternate<1..2>:ABSolute <Val _{left} ,Val _{right} > Query of results: :CALCulate<1>:LIMIT1:ACPower:ACHannel:ABSolute ? Result: <Val _{left} ,Val _{right} > [dBm]
	:CALCulate<1>:LIMIT1:ACPower:ALternate<1..2>:ABSolute:STATE ON Query of results: :CALCulate<1>:LIMIT1:ACPower:ACHannel:ABSolute:STATE ? Result: <0 1>
CHANNEL BANDWIDTH	:SENSe<1>:POWER:ACHannel:BWIDth <Value> Hz kHz MHz GHz Query of results: :SENSe<1>:POWER:ACHannel:BWIDth ? Result: <Value> [Hz]
ADJ CHAN BANDWIDTH	:SENSe<1>:POWER:ACHannel:BWIDth:ACHannel <Value> Hz kHz MHz GHz Query of results: :SENSe<1>:POWER:ACHannel:BWIDth:ACHannel ? Result: <Value> [Hz]
	:SENSe<1>:POWER:ACHannel:BWIDth:ALternate<1..2> <Value> Hz kHz MHz GHz Query of results: :SENSe<1>:POWER:ACHannel:BWIDth:ALternate<1..2> ? Result: <Value> [Hz]
ADJ CHAN SPACING	:SENSe<1>:POWER:ACHannel:SPACing[:ACHannel] <Value> Hz kHz MHz GHz Query of results: :SENSe<1>:POWER:ACHannel:SPACing[:ACHannel] ? Result: <Value> [Hz]
	:SENSe<1>:POWER:ACHannel:SPACing:ALternate<1..2> <Value> Hz kHz MHz GHz Query of results: :SENSe<1>:POWER:ACHannel:SPACing:ALternate<1..2> ? Result: <Value> [Hz]
ACLR ABS REL	:SENSe<1>:POWER:ACHannel:MODE ABSolute RELative Query of results: :SENSe<1>:POWER:ACHannel:MODE ? Result: <ABS REL>
CHAN PWR / Hz	:CALCulate1:MARKer1:FUNCTION:Power:RESult:PHZ ON OFF Query of results: :CALCulate1:MARKer1:FUNCTION:Power:RESult:PHZ ? Result: <0 1>
POWER MODE	:CALCulate:MARKer:FUNCTION:Power:MODE WRITe MAXHold
SPECTRUM EM MASK	:CONFigure:WCDPower:MEASurement ESpectrum Query of results: :CALCulate<1>:LIMIT<1>:FAIL?
LIMIT LINE AUTO	:CALCulate<1>:LIMIT<1>:ESpectrum:MODE AUTO
LIMIT LINE USER	:CALCulate:LIMIT<1>:NAME <string> :CALCulate:LIMIT<1>:UNIT DBM :CALCulate:LIMIT<1>:CONTRol[:DATA] <num_value>, <num_value>, ... :CALCulate:LIMIT<1>:CONTRol:DOMain FREQuency :CALCulate:LIMIT<1>:CONTRol:TRACe 1 :CALCulate:LIMIT<1>:CONTRol:OFFset <num_value> :CALCulate:LIMIT<1>:CONTRol:MODE RELative :CALCulate:LIMIT<1>:UPPer[:DATA] <num_value>, <num_value>.. :CALCulate:LIMIT<1>:UPPer:STATE ON OFF :CALCulate:LIMIT<1>:UPPer:OFFset <num_value> :CALCulate:LIMIT<1>:UPPer:MARGin <num_value> :CALCulate:LIMIT<1>:UPPer:MODE ABSolute :CALCulate:LIMIT<1>:UPPer:SPACing LINear

Notes:

- If the y values are entered using the command:CALCulate:LIMIT<1>:LOWer[:DATA] the limit check yields "failed" if the values are below the limit line.
- If a user-defined limit line is activated, it has priority over limit lines selected via AUTO.

RESTORE STD LINES	:CALCulate<1>:LIMit<1>:ESpectrum:REStore
ACJUST REF LVL	:[SENSe:]POWer:ACHannel:PRESet:RLEVel
30kHz/1MHz TRANSISTON	:CALCulate<1 2>:LIMit<1...8>:ESpectrum:TRANsition <numeric value>
OCCUPIED BANDWIDTH	:CONFigure<1>:WCDPower:MEASurement OBANdwidth Query of results: :CALCulate<1>:MARKer<1>:FUNctIon:POWer:RESult? OBANdwidth
% POWER BANDWIDTH	:SENSe<1>:POWer:BANDwidth <value> PCT Query of results: :SENSe<1>:POWer:BANDwidth ? Result: <value> [%] :SENSe1:POWer:ACHannel:PRESet OBWidth
ADJUST SETTINGS	:SENSe1:POWer:ACHannel:PRESet:RLEVel
ADJUST REF LVL	:SENSe1:POWer:ACHannel:PRESet:RLEVel
STATISTICS	:CONFigure:WCDPower:MEASurement CCDF or :CALCulate:STATistics[:BTS]:CCDF[:STATe] ON Query of results: CALCulate:MARKer:X?
APD	:CALCulate1:STATistics:APD:STATe ON Query of results: :CALCulate1:STATistics:APD:STATe? Result: <0 1>
CCDF	:CALCulate1:STATistics:CCDF:STATe ON Query of results: :CALCulate1:STATistics:CCDF:STATe? Result: <0 1>
PERCENT MARKER	:CALCulate<1>:MARKer1:Y:PERCent <value> PCT Query of results: :CALCulate<1>:MARKer1:Y:PERCent ? Result: <0..100> [%]
NO OF SAMPLES	:CALCulate<1>:STATistics:NSAMples <value> Query of results: :CALCulate<1>:STATistics:NSAMples ? Result: <value>
SCALING	:CALCulate<1>:STATistics:NSAMples <value> Query of results: :CALCulate<1>:STATistics:NSAMples ? Result: <value>
X-AXIS REF LEVEL	:CALCulate<1>:STATistics:SCALE:X:RLEVel <value> dBm Query of results: :CALCulate<1>:STATistics:SCALE:X:RLEVel ? Result: <value> [dBm]
X-AXIS RANGE	:CALCulate<1>:STATistics:SCALE:X:RANGe <value> dBm Query of results: :CALCulate<1>:STATistics:SCALE:X:RANGe ? Result: <value> [dBm]
Y-AXIS MAX VALUE	:CALCulate<1>:STATistics:SCALE:Y:UPPer <value> Query of results: :CALCulate<1>:STATistics:SCALE:Y:UPPer? Result: <value> Range: [1E-8...1]
Y-AXIS MIN VALUE	:CALCulate<1>:STATistics:SCALE:Y:LOWer <value> Query of results: :CALCulate<1>:STATistics:SCALE:Y:LOWer ? Result: <value> Range: [1E-9...0.1]
ADJUST SETTINGS	:CALCulate<1>:STATistics:SCALE:AUTO ONCE
DEFAULT SETTINGS	:CALCulate<1>:STATistics:PRESet

ADJUST REF LVL	:CALCulate<1>:STATistics:PRESet:RLEVel
CONT MEAS	:INITiate<1>:CONTinuous ON Query of results: :INITiate<1>:CONTinuous ? Result: <1 0>
SINGLE MEAS	:INITiate<1>:IMMediate :INITiate<1>:CONTinuous OFF Query of results: :INITiate<1>:CONTinuous ? Result: <0 1>
CODE DOM POWER	:INITiate<1>:IMMediate :INSTRument<1>[:SElect] WCDPower or :CONFigure:WCDPower:MEASurement WCDPower Query of results: :TRACe:DATA? TRACE1 TRACE2 ABITstream CTABle or :CALCulate<1 2>:MARKer<1>:FUNCTion:WCDPower:RESult? PTOTal FERRor TFRame TOFFset MACCuracy PCDerror EVMRms EVMPeak CERRor CSLot SRATe CHANnel CDPabsolute CDPRelative IQOFFset IQIMbalance or marker functions (see submenu MARKER)
RESULT SUMMARY	:CALCulate2:FEED "XTIM:CDP:ERR:SUMMary" Ergebnisabfrage: :CALCulate:MARKer:FUNCTion:WCDPower:MS:RESult? PTOTal FERRor TFRame MACCuracy PCDerror EVMRms EVMPeak CERRor CSLot SRATe CHANnel CDPabsolute CDPRelative IQOFFset IQIMbalance TOFFset RHO
SELECT I Q	:[SENSe:]CDPower:CMAPping I Q
SELECT CHANNEL	:[SENSe:]CDPower:CODE 0...511
ADJUST REF LVL	:SENSe1:POWER:ACHannel:PRESet:RLEVel
CODE DOM ERROR	:CALCulate1:FEED 'XPOWER:CDEP' Query of result: :TRACe<1>:DATA? TRACe<1 2> Format: <code class> ₁ , <code number> ₁ , <CDEP> ₁ , <channel flag> ₁ , <code class> ₂ , <code number> ₂ , <CDEP> ₂ , <channel flag> ₂ , '.....' <code class> ₂₅₆ , <code number> ₂₅₆ , <CDEP> ₂₅₆ , <channel flag> ₂₅₆ Unit: < [1] >, < [1] >, < [dB] >, < [1] > Range: < 8 >, < 0...256 >, < -∞ ... ∞ >, < 0 ; 1 > Quantity: 256
CODE PWR OVERVIEW	:[SENSe:]CDPower:OVERview ON OFF :CALCulate<1>:FEED `XPOW:CDP:OVERview`
CHANNEL TABLE	:CALCulate<1>:FEED "XTIM:CDP:ERR:CTABle"

CHAN CONF	--
CODE CHAN AUTOSEARCH	:CONFigure:WCDPower:MS:CTable[:STate] OFF
CODE CHAN PREDEFINED	:CONFigure:WCDPower:MS:CTable[:STate] ON :CONFigure:WCDPower:MS:CTable:SElect <channel table name>
EDIT CHAN CONF TABLE	
HEADER VALUES	HEADER :CONFigure:WCDPower:MS:CTable:NAME "channel table name" :CONFigure:WCDPower:MS:CTable:COMment "Comment for new table" VALUES :CONFigure:WCDPower:MS:CTable:NAME "channel table name" :CONFigure:WCDPower:MS:CTable:DATA <numeric_value>
MEAS CHAN CONF TABLE	--
SAVE TABLE	-- (automatically if using remote control)
NEW CHAN CONF TABLE	please refer to EDIT CHAN CONF TABLE
DEL CHAN CONF TABLE	:CONFigure:WCDPower:MS:CTable:NAME "channel table name" :CONFigure:WCDPower:MS:CTable:DElete
COPY CHAN CONF TABLE	:CONFigure:WCDPower:MS:CTable:NAME "channel table name" :CONFigure:WCDPower:MS:CTable:COpy "new channel table name"
SETTINGS	--
SCRAMBLING CODE	: [SENSe:]CDPower:LCODE[:VALue] #H0 ... #H1fff<hex>
FORMAT HEX DEC	[SENSe<1 2>:]CDPower:LCODE[:VALue] <hex> (scrambling code hex) [SENSe<1 2>:]CDPower:LCODE:DVALue <numeric_value> (scrambling code dec)
SCR TYPE LONG SHRT	: [SENSe:]CDPower:LCODE:TYPE LONG SHORT
INACT CHAN THRESH	
MEASURE SLOT FRAME	: [SENSe:]CDPower:BASE SLOT FRAME
CODE PWR ABS REL	Absolute :CALCulate<1>:FEED `XPOW:CDP` :CALCulate<1>:FEED `XPOW:CDP:ABS` Relative :CALCulate<1>:FEED `XPOW:CDP:RAT`
MULTI FRM CAPTURE	---
FRAME TO ANALYZE	: [SENSe:]CDPower:FRAME[:VALue] <numeric value>
CAPTURE LENGTH	: [SENSe:]CDPower:IQLength <numeric value>
SELECT I Q	: [SENSe:]CDPower:CMAPping I Q
SELECT CHANNEL	: [SENSe:]CDPower:CODE 0...511

PHASE DISCOUNT	:CALCulate<2>:FEED XTIM:CDP:PSVSLot Messkurve auslesen über :TRAC? TRACe2
SYMBOL CONST	:CALCulate2:FEED "XTIM:CDP:SYMB:CONStellation"
SYMBOL EVM	---
SYMBOL EVM	:CALCulate<2>:FEED "XTIM:CDP:SYMBol:EVM"
SYMB MAG ERROR	:CALCulate<2>:FEED XTIM:CDP:SYMBol:EVM:MAGNitude
SYMB PHASE ERROR	:CALCulate<2>:FEED XTIM:CDP:SYMBol:EVM:PHASe
BITSTREAM	:CALCulate2:FEED "XTIM:CDP:SYMB:BITStream"
POWER VS SYMBOL	:CALCulate<1>:FEED "XTIM:CDP:PVSyMbol"
SELECT I Q	:[SENSe:]CDPower:CMAPping I Q
SELECT CHANNEL	:[SENSe:]CDPower:CODE 0...511
SELECT SLOT	:[SENSe:]CDPower:SLOT 0 ... 14
ADJUST REF LVL	:[SENSe:]POW:ACH:PRES:RLEV

8 Performance Test

- Switch off the R&S analyzers before removing or inserting modules.
- Check the setting of the AC supply voltage selector (230 V) prior to switching on the unit.
- Measure the parameters after a warm-up time of at least 30 min. and the completion of system error correction of the analyzer and R&S SMIQ. Only then is it ensured that the specifications are complied with.
- Unless specified otherwise all settings are made after a PRESET.
- Conventions for settings on the analyzer during the measurement:

[<Key>] Press a key on the front panel, eg [SPAN]
 [<SOFTKEY>] Press a softkey, eg [MARKER -> PEAK]
 [<nn unit>] Enter a value and terminate by entering the unit, eg [12 kHz]
 {<nn>} Enter values indicated in one of the following tables.

Successive entries are separated by [:], eg [**SPAN**: 15 kHz].

- The values stated hereinafter are not guaranteed values. Only the data sheet specifications are binding.

Required Measuring Equipment and Accessories

Table 11 Required Measuring Equipment and Accessories

Item	Instrument type	Recommended characteristics	Recommended equipment	R&S Order No.
1	Signal generator	Vector signal generator for generating WCDMA signals	R&S SMIQ with options: R&S SMIQB42 R&S SMIQB20 R&S SMIQB11	1125.5555.xx 1104.7936.02 1125.5190.02 1085.4502.04

Test Procedure

The performance test refers exclusively to results of the code-domain power. It is not required to check the POWER-, ACLR- and SPECTRUM results since they are covered by the performance test of the basic unit.

Default settings on R&S SMIQ:

```

[PRESET]
[LEVEL :          0 dBm]
[FREQ:           2.1175 GHz]
DIGITAL STD
  WCDMA 3GPP
    LINK DIRECTION  UP/REVERSE
    TEST MODELS (NOT STANDARDIZED)...
      C+D960K
    SELECT BS/MS
      MS 1 ON
    OVERALL SYMBOL RATE... 6*960
  STATE: ON
  
```

Trigger output: *RADIO FRAME*

The channel list should show the following:

CHANNEL NUMBER	1	2	3	4	5	6
TYPE	DPDCH	DPDCH	DPDCH	DPDCH	DPDCH	DPDCH
SYMBOL RATE	960	960	960	960	960	960
CHAN CODE	1	1	3	3	2	2
DATA	PN15	PN15	PN15	PN15	PN15	PN15

Default settings on the analyzer:

[PRESET]
[CENTER: 2.1175 GHz]
[REF: 10 dBm]
[3G FDD BS]
[TRIG EXTERN]
[SETTINGS SCRAMBLING CODE 0]
[RESULTS CHANNEL TABLE]

Test setup and other settings

- Connect external trigger input of the analyzer to R&S SMIQ
- Connect external reference output of R&S FSU to R&S SMIQ

UTILITIES

R&S SMIQ REF OSC SOURCE: EXT

[SETUP: REFERENCE INT]

analyzer

The display of the the analyzer should show the following:



SR 960 ksp/s
 Chan Code 2
 CF 1.935 GHz Slot # 0 Mapping Q

Channel Table									
Type	Symb Rate	Chan#	Status	Mapping	PilotL	Pwr Abs	Pwr Rel		
Ref	DPCCH	15.0 ksp/s	0	active	Q	8	-10.20	-8.45	A
6.80	DPDCH	960.0 ksp/s	1	active	I	---	-10.21	-8.45	SGL
dBm	DPDCH	960.0 ksp/s	1	active	Q	---	-10.21	-8.46	
Att*	DPDCH	960.0 ksp/s	2	active	I	---	-10.21	-8.45	TRG
5 dB	DPDCH	960.0 ksp/s	2	active	Q	---	-10.21	-8.45	
	DPDCH	960.0 ksp/s	3	active	I	---	-10.20	-8.45	
	DPDCH	960.0 ksp/s	3	active	Q	---	-10.20	-8.45	
1	-----	15.0 ksp/s	0	inactv	I	---	-64.34	-62.59	
CLRWR	-----	15.0 ksp/s	1	inactv	I	---	-65.94	-64.18	
	-----	15.0 ksp/s	1	inactv	Q	---	-65.36	-63.60	

Result Summary SR 960 ksp/s
 Chan Code 2
 CF 1.935 GHz Slot # 0 Mapping Q

Result Summary			
GLOBAL RESULTS			
Ref	Total Power	-1.75 dBm	Carrier Freq Error -67.68 mHz
6.80	Chip Rate Error	-0.55 ppm	Trigger to Frame -72.17 ns
dBm	IQ Offset	0.02 %	IQ Imbalance 0.06 %
Att*	Composite EVM	1.39 %	Pk CDE (15.0 ksp/s) -59.06 dB
5 dB	Slot No	0	No of Active Chan 7
CHANNEL RESULTS			
1	Symbol Rate	960.00 ksp/s	Timing Offset 0 Chips
CLRWR	Channel Code	2	Mapping Q
	No of Pilot Bits	0	
	Channel Power Rel	-8.45 dB	Channel Power Abs -10.21 dBm
	Symbol EVM	1.23 % rms	Symbol EVM 4.86 % Pk

Date: 25.MAR.2002 11:22:31

9 Glossary

Composite EVM	In accordance with the 3GPP specifications, the squared error between the real and imaginary parts of the test signal and an ideal reference signal is determined (EVM referred to the total signal) in a composite EVM measurement.
DPCCH	Dedicated physical control channel, control channel. The DPCCH contains pilot, TFCI, TPC and FBI bits. The control channel is assumed to be present in every signal in R&S FS-K73.
DPDCH	Dedicated physical data channel, data channel. The data channels only contain data bits. Data channels for user equipment signals are assigned a certain scheme defined in 3GPP specifications.
Inactive Channel Threshold	Minimum power that a single channel must have as compared to the total signal to be recognized as an active channel
Peak Code Domain Error	In accordance with the 3GPP specifications, the error between the test signal and the ideal reference signal is projected onto the classes of the different spreading factors in the case of a peak code domain measurement.

10 Index

- *
* (enhancement label) 81, 99
- A**
- ACLR..... 23
 - ACP measurement..... 23
 - Adjacent-channel power..... 23
 - Amplitude Power Distribution..... 37
 - Amplitude probability distribution function..... 38
 - APD function..... 38
 - Attenuation..... 77
 - Averaging..... 81
- B**
- Bandwidth
 - occupied..... 35
 - Bitstream..... 64
- C**
- Carrier Freq Error..... 49
 - CCDF
 - Complementary Cumulative Distribution Function..... 37
 - CCDF function..... 38
 - Center frequency..... 76
 - Step size..... 76
 - Chan #..... 59
 - Chan Mapping..... 50
 - Chan pow rel. / abs..... 50
 - Channel
 - Bandwidth..... 29
 - number..... 25
 - Power
 - Absolute/relative..... 30
 - Spacing..... 30
 - status..... 69
 - Channel assignment table..... 56
 - Channel code..... 50
 - Channel number..... 69
 - Channel power
 - relative..... 69
 - Channel, active..... 126
 - Chip Rate Error..... 49
 - Clear/Write mode..... 81
 - Code domain error power..... 53
 - Code domain power..... 46
 - Commands
 - assignment to softkeys..... 116
 - description..... 84
 - Complementary cumulative distribution function..... 38
 - Composite EVM..... 47, 49, 126
- D**
- Default
 - scalings of x- and y-axis..... 39
 - Default setting
 - preset..... 9
 - Display range
 - frequency..... 76
 - Distribution function..... 38
- Distribution function of signal amplitudes** 37
- DPCCH..... 126
- DPDCH..... 126
- F**
- Fast power measurement..... 27
 - Frequency
 - center..... 76
 - offset..... 76
- H**
- Hotkey
 - 3GPP FDD UE..... 19
 - CHAN CONF..... 19, 67
 - EXIT FDD..... 19
 - RESULTS..... 19, 43
 - SETTINGS..... 19, 71
- I**
- Inactive channel threshold..... 126
 - IQ Imbalance..... 49
 - IQ Offset..... 49
- K**
- Key
 - AMPT..... 77
 - BW..... 80
 - DISP..... 83
 - FILE..... 83
 - FREQ..... 76
 - LINES..... 83
 - MARKER..... 78
 - MEAS..... 21, 80
 - MKR FCTN..... 80
 - MKR→..... 79
 - SPAN..... 76
 - SWEEP..... 80
 - TRACE..... 81
 - TRIG..... 80
- L**
- Level
 - reference..... 77
 - Limit
 - probability range..... 39
 - Limit check
 - ACLR measurement..... 28
- M**
- Mapping..... 59, 69
 - Marker
 - peak..... 79
 - zoom..... 78
 - Max hold..... 81
 - Maximum search..... 79

OCCUPIED BANDWIDTH.....	21, 35
OPTIONS.....	7
PEAK.....	79
PEAK CODE DOMAIN ERR.....	47, 84, 113
PEAK MODE MIN/MAX.....	79
PERCENT MARKER.....	38
PHASE DISCONT.....	60
POWER.....	21, 22
POWER MODE.....	31, 91
POWER VS SLOT.....	48, 84, 113
POWER VS SYMBOL.....	65
REF LEVEL.....	77
REF LEVEL OFFSET.....	77
REF VALUE POSITION.....	77
RESTORE STD LINES.....	33
RESULT SUMMARY.....	49, 84, 113
RF ATTEN AUTO.....	77
RF ATTEN MANUAL.....	77
RRC FILTER ON/OFF.....	74
RRC FILTER ON/OFF.....	104
SAVE TABLE.....	70
SCALING.....	38
SCR TYPE LONG/SHRT.....	72, 101
SCRAMBLING CODE.....	71, 101
SCREEN.....	82
SELECT CHANNEL.....	66, 102
SELECT I/Q.....	65, 102
SELECT MARKER.....	79
SELECT SLOT.....	66, 102
SIDE BAND NORM / INV.....	75, 101
SINGLE MEAS.....	40
SPECTRUM EM MASK.....	21, 32
STATISTICS.....	21, 37
SWEEP COUNT.....	81
SWEEP TIME.....	26
SYMB MAG ERROR.....	63
SYMB PHASE ERROR.....	64
SYMBOL CONST.....	62, 84, 113
SYMBOL EVM.....	63, 84, 113
TRIGGER EXTERN.....	80
VIEW.....	81, 99
X-AXIS RANGE.....	39
X-AXIS REF LEVEL.....	39
Y MAX.....	93
Y MIN.....	93
Y PER DIV.....	77
Y-AXIS MAX VALUE.....	39
Y-AXIS MIN VALUE.....	39

Specifications.....	123
Spectrum Emission Mask.....	32
Spreading code.....	50
Spreading factor.....	102
Status.....	59
Stepsize	
center frequency.....	76
Symbol constellation.....	62
Symbol Error Vector Magnitude.....	63
Symbol EVM Pk / rms.....	50
Symbol rate.....	50, 69
Symbol Rate.....	59

T

Test setup.....	16
Timing offset.....	50
Total power.....	30
Total PWR.....	49
Trace	
average.....	81
Clear/Write.....	81
Freeze.....	81, 99
max hold.....	81
min hold.....	81
Trigger to Frame.....	49
Type.....	59

V

View trace.....	81, 99
-----------------	--------

Z

Zoom.....	78
Amplitude.....	81, 99