


R&S® FSV-K73

Firmware Option 3GPP FDD UE

Measurement

Operating Manual

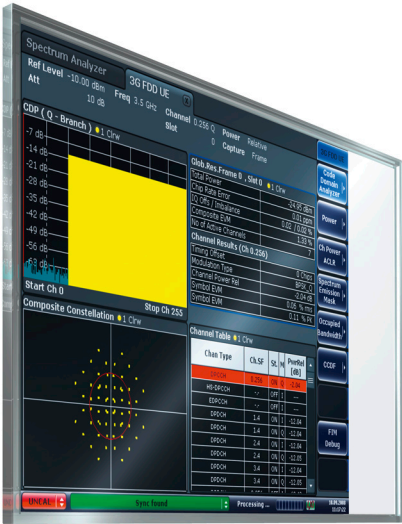

1173.0737.02 – 04.1

This manual describes the following options:

- R&S FSV-K73 (1310.8555.02)

The contents of this manual correspond to the following R&S®FSVR models with firmware version 1.56 or higher:

- R&S®FSVR7 (1311.0006K7)
- R&S®FSVR13 (1311.0006K13)
- R&S®FSVR30 (1311.0006K30)
- R&S®FSVR40 (1311.0006K40)

The firmware of the instrument makes use of several valuable open source software packages. The most important of them are listed below together with their corresponding open source license. The verbatim license texts are provided on the user documentation CD-ROM (included in delivery).

Package	Link	License
OpenSSL	http://www.openssl.org	OpenSSL/SSLLeavy
Xitami	http://www.xitami.com	2.5b6
PHP	http://www.php.net	PHP v.3
DOJO-AJAX	http://www.dojotoolkit.org	Academic Free License (BSD)
ResizableLib	http://www.geocities.com/ppescher	Artistic License
BOOST Library	http://www.boost.org	Boost Software v.1
ONC/RPC	http://www.plt.rwth-aachen.de/index.php?id=258	SUN

The product Open SSL includes cryptographic software written by Eric Young (eay@cryptsoft.com) and software written by Tim Hudson (tjh@cryptsoft.com).

Rohde & Schwarz would like to thank the open source community for their valuable contribution to embedded computing.

© 2010 Rohde & Schwarz GmbH & Co. KG

Muehldorfstr. 15, 81671 Munich, Germany

Phone: +49 89 41 29 - 0

Fax: +49 89 41 29 12 164

E-mail: info@rohde-schwarz.com

Internet: <http://www.rohde-schwarz.com>

Printed in Germany – Subject to change – Data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

The following abbreviations are used throughout this manual: R&S®FSV is abbreviated as R&S FSV. R&S®FSVR is abbreviated as R&S FSVR.

Basic Safety Instructions

Always read through and comply with the following safety instructions!

All plants and locations of the Rohde & Schwarz group of companies make every effort to keep the safety standards of our products up to date and to offer our customers the highest possible degree of safety. Our products and the auxiliary equipment they require are designed, built and tested in accordance with the safety standards that apply in each case. Compliance with these standards is continuously monitored by our quality assurance system. The product described here has been designed, built and tested in accordance with the attached EC Certificate of Conformity and has left the manufacturer's plant in a condition fully complying with safety standards. To maintain this condition and to ensure safe operation, you must observe all instructions and warnings provided in this manual. If you have any questions regarding these safety instructions, the Rohde & Schwarz group of companies will be happy to answer them.

Furthermore, it is your responsibility to use the product in an appropriate manner. This product is designed for use solely in industrial and laboratory environments or, if expressly permitted, also in the field and must not be used in any way that may cause personal injury or property damage. You are responsible if the product is used for any intention other than its designated purpose or in disregard of the manufacturer's instructions. The manufacturer shall assume no responsibility for such use of the product.

The product is used for its designated purpose if it is used in accordance with its product documentation and within its performance limits (see data sheet, documentation, the following safety instructions). Using the product requires technical skills and a basic knowledge of English. It is therefore essential that only skilled and specialized staff or thoroughly trained personnel with the required skills be allowed to use the product. If personal safety gear is required for using Rohde & Schwarz products, this will be indicated at the appropriate place in the product documentation. Keep the basic safety instructions and the product documentation in a safe place and pass them on to the subsequent users.

Observing the safety instructions will help prevent personal injury or damage of any kind caused by dangerous situations. Therefore, carefully read through and adhere to the following safety instructions before and when using the product. It is also absolutely essential to observe the additional safety instructions on personal safety, for example, that appear in relevant parts of the product documentation. In these safety instructions, the word "product" refers to all merchandise sold and distributed by the Rohde & Schwarz group of companies, including instruments, systems and all accessories.

Symbols and safety labels

							
Notice, general danger location Observe product documentation	Caution when handling heavy equipment	Danger of electric shock	Warning! Hot surface	PE terminal	Ground	Ground terminal	Be careful when handling electrostatic sensitive devices

					
ON/OFF supply voltage	Standby indication	Direct current (DC)	Alternating current (AC)	Direct/alternating current (DC/AC)	Device fully protected by double (reinforced) insulation

Tags and their meaning

The following signal words are used in the product documentation in order to warn the reader about risks and dangers.

	indicates a hazardous situation which, if not avoided, will result in death or serious injury.
	indicates a hazardous situation which, if not avoided, could result in death or serious injury.
	indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
	indicates the possibility of incorrect operation which can result in damage to the product. In the product documentation, the word ATTENTION is used synonymously.

These tags are in accordance with the standard definition for civil applications in the European Economic Area. Definitions that deviate from the standard definition may also exist in other economic areas or military applications. It is therefore essential to make sure that the tags described here are always used only in connection with the related product documentation and the related product. The use of tags in connection with unrelated products or documentation can result in misinterpretation and in personal injury or material damage.

Operating states and operating positions

The product may be operated only under the operating conditions and in the positions specified by the manufacturer, without the product's ventilation being obstructed. If the manufacturer's specifications are not observed, this can result in electric shock, fire and/or serious personal injury or death. Applicable local or national safety regulations and rules for the prevention of accidents must be observed in all work performed.

1. Unless otherwise specified, the following requirements apply to Rohde & Schwarz products: predefined operating position is always with the housing floor facing down, IP protection 2X, pollution severity 2, overvoltage category 2, use only indoors, max. operating altitude 2000 m above sea level, max. transport altitude 4500 m above sea level. A tolerance of $\pm 10\%$ shall apply to the nominal voltage and $\pm 5\%$ to the nominal frequency.
2. Do not place the product on surfaces, vehicles, cabinets or tables that for reasons of weight or stability are unsuitable for this purpose. Always follow the manufacturer's installation instructions when installing the product and fastening it to objects or structures (e.g. walls and shelves). An installation that is not carried out as described in the product documentation could result in personal injury or death.
3. Do not place the product on heat-generating devices such as radiators or fan heaters. The ambient temperature must not exceed the maximum temperature specified in the product documentation or in the data sheet. Product overheating can cause electric shock, fire and/or serious personal injury or death.

Electrical safety

If the information on electrical safety is not observed either at all to the extent necessary, electric shock, fire and/or serious personal injury or death may occur.

1. Prior to switching on the product, always ensure that the nominal voltage setting on the product matches the nominal voltage of the AC supply network. If a different voltage is to be set, the power fuse of the product may have to be changed accordingly.
2. In the case of products of safety class I with movable power cord and connector, operation is permitted only on sockets with an earthing contact and protective earth connection.
3. Intentionally breaking the protective earth connection either in the feed line or in the product itself is not permitted. Doing so can result in the danger of an electric shock from the product. If extension cords or connector strips are implemented, they must be checked on a regular basis to ensure that they are safe to use.
4. If the product does not have a power switch for disconnection from the AC supply network, the plug of the connecting cable is regarded as the disconnecting device. In such cases, always ensure that the power plug is easily reachable and accessible at all times (corresponding to the length of connecting cable, approx. 2 m). Functional or electronic switches are not suitable for providing disconnection from the AC supply network. If products without power switches are integrated into racks or systems, a disconnecting device must be provided at the system level.
5. Never use the product if the power cable is damaged. Check the power cable on a regular basis to ensure that it is in proper operating condition. By taking appropriate safety measures and carefully laying the power cable, you can ensure that the cable will not be damaged and that no one can be hurt by, for example, tripping over the cable or suffering an electric shock.
6. The product may be operated only from TN/TT supply networks fused with max. 16 A (higher fuse only after consulting with the Rohde & Schwarz group of companies).
7. Do not insert the plug into sockets that are dusty or dirty. Insert the plug firmly and all the way into the socket. Otherwise, sparks that result in fire and/or injuries may occur.
8. Do not overload any sockets, extension cords or connector strips; doing so can cause fire or electric shocks.
9. For measurements in circuits with voltages $V_{\text{rms}} > 30 \text{ V}$, suitable measures (e.g. appropriate measuring equipment, fusing, current limiting, electrical separation, insulation) should be taken to avoid any hazards.
10. Ensure that the connections with information technology equipment, e.g. PCs or other industrial computers, comply with the IEC60950-1/EN60950-1 or IEC61010-1/EN 61010-1 standards that apply in each case.
11. Unless expressly permitted, never remove the cover or any part of the housing while the product is in operation. Doing so will expose circuits and components and can lead to injuries, fire or damage to the product.
12. If a product is to be permanently installed, the connection between the PE terminal on site and the product's PE conductor must be made first before any other connection is made. The product may be installed and connected only by a licensed electrician.
13. For permanently installed equipment without built-in fuses, circuit breakers or similar protective devices, the supply circuit must be fused in such a way that anyone who has access to the product, as well as the product itself, is adequately protected from injury or damage.

Basic Safety Instructions

14. Use suitable overvoltage protection to ensure that no overvoltage (such as that caused by a bolt of lightning) can reach the product. Otherwise, the person operating the product will be exposed to the danger of an electric shock.
15. Any object that is not designed to be placed in the openings of the housing must not be used for this purpose. Doing so can cause short circuits inside the product and/or electric shocks, fire or injuries.
16. Unless specified otherwise, products are not liquid-proof (see also section "Operating states and operating positions", item 1. Therefore, the equipment must be protected against penetration by liquids. If the necessary precautions are not taken, the user may suffer electric shock or the product itself may be damaged, which can also lead to personal injury.
17. Never use the product under conditions in which condensation has formed or can form in or on the product, e.g. if the product has been moved from a cold to a warm environment. Penetration by water increases the risk of electric shock.
18. Prior to cleaning the product, disconnect it completely from the power supply (e.g. AC supply network or battery). Use a soft, non-linting cloth to clean the product. Never use chemical cleaning agents such as alcohol, acetone or diluents for cellulose lacquers.

Operation

1. Operating the products requires special training and intense concentration. Make sure that persons who use the products are physically, mentally and emotionally fit enough to do so; otherwise, injuries or material damage may occur. It is the responsibility of the employer/operator to select suitable personnel for operating the products.
2. Before you move or transport the product, read and observe the section titled "Transport".
3. As with all industrially manufactured goods, the use of substances that induce an allergic reaction (allergens) such as nickel cannot be generally excluded. If you develop an allergic reaction (such as a skin rash, frequent sneezing, red eyes or respiratory difficulties) when using a Rohde & Schwarz product, consult a physician immediately to determine the cause and to prevent health problems or stress.
4. Before you start processing the product mechanically and/or thermally, or before you take it apart, be sure to read and pay special attention to the section titled "Waste disposal", item 1.
5. Depending on the function, certain products such as RF radio equipment can produce an elevated level of electromagnetic radiation. Considering that unborn babies require increased protection, pregnant women must be protected by appropriate measures. Persons with pacemakers may also be exposed to risks from electromagnetic radiation. The employer/operator must evaluate workplaces where there is a special risk of exposure to radiation and, if necessary, take measures to avert the potential danger.
6. Should a fire occur, the product may release hazardous substances (gases, fluids, etc.) that can cause health problems. Therefore, suitable measures must be taken, e.g. protective masks and protective clothing must be worn.
7. If a laser product (e.g. a CD/DVD drive) is integrated into a Rohde & Schwarz product, absolutely no other settings or functions may be used as described in the product documentation. The objective is to prevent personal injury (e.g. due to laser beams).

Repair and service

1. The product may be opened only by authorized, specially trained personnel. Before any work is performed on the product or before the product is opened, it must be disconnected from the AC supply network. Otherwise, personnel will be exposed to the risk of an electric shock.
2. Adjustments, replacement of parts, maintenance and repair may be performed only by electrical experts authorized by Rohde & Schwarz. Only original parts may be used for replacing parts relevant to safety (e.g. power switches, power transformers, fuses). A safety test must always be performed after parts relevant to safety have been replaced (visual inspection, PE conductor test, insulation resistance measurement, leakage current measurement, functional test). This helps ensure the continued safety of the product.

Batteries and rechargeable batteries/cells

If the information regarding batteries and rechargeable batteries/cells is not observed either at all or to the extent necessary, product users may be exposed to the risk of explosions, fire and/or serious personal injury, and, in some cases, death. Batteries and rechargeable batteries with alkaline electrolytes (e.g. lithium cells) must be handled in accordance with the EN 62133 standard.

1. Cells must not be taken apart or crushed.
2. Cells or batteries must not be exposed to heat or fire. Storage in direct sunlight must be avoided. Keep cells and batteries clean and dry. Clean soiled connectors using a dry, clean cloth.
3. Cells or batteries must not be short-circuited. Cells or batteries must not be stored in a box or in a drawer where they can short-circuit each other, or where they can be short-circuited by other conductive materials. Cells and batteries must not be removed from their original packaging until they are ready to be used.
4. Keep cells and batteries out of the hands of children. If a cell or a battery has been swallowed, seek medical aid immediately.
5. Cells and batteries must not be exposed to any mechanical shocks that are stronger than permitted.
6. If a cell develops a leak, the fluid must not be allowed to come into contact with the skin or eyes. If contact occurs, wash the affected area with plenty of water and seek medical aid.
7. Improperly replacing or charging cells or batteries that contain alkaline electrolytes (e.g. lithium cells) can cause explosions. Replace cells or batteries only with the matching Rohde & Schwarz type (see parts list) in order to ensure the safety of the product.
8. Cells and batteries must be recycled and kept separate from residual waste. Rechargeable batteries and normal batteries that contain lead, mercury or cadmium are hazardous waste. Observe the national regulations regarding waste disposal and recycling.

Transport

1. The product may be very heavy. Therefore, the product must be handled with care. In some cases, the user may require a suitable means of lifting or moving the product (e.g. with a lift-truck) to avoid back or other physical injuries.

2. Handles on the products are designed exclusively to enable personnel to transport the product. It is therefore not permissible to use handles to fasten the product to or on transport equipment such as cranes, fork lifts, wagons, etc. The user is responsible for securely fastening the products to or on the means of transport or lifting. Observe the safety regulations of the manufacturer of the means of transport or lifting. Noncompliance can result in personal injury or material damage.
3. If you use the product in a vehicle, it is the sole responsibility of the driver to drive the vehicle safely and properly. The manufacturer assumes no responsibility for accidents or collisions. Never use the product in a moving vehicle if doing so could distract the driver of the vehicle. Adequately secure the product in the vehicle to prevent injuries or other damage in the event of an accident.

Waste disposal

1. If products or their components are mechanically and/or thermally processed in a manner that goes beyond their intended use, hazardous substances (heavy-metal dust such as lead, beryllium, nickel) may be released. For this reason, the product may only be disassembled by specially trained personnel. Improper disassembly may be hazardous to your health. National waste disposal regulations must be observed.
2. If handling the product releases hazardous substances or fuels that must be disposed of in a special way, e.g. coolants or engine oils that must be replenished regularly, the safety instructions of the manufacturer of the hazardous substances or fuels and the applicable regional waste disposal regulations must be observed. Also observe the relevant safety instructions in the product documentation. The improper disposal of hazardous substances or fuels can cause health problems and lead to environmental damage.

Informaciones elementales de seguridad

Es imprescindible leer y observar las siguientes instrucciones e informaciones de seguridad!

El principio del grupo de empresas Rohde & Schwarz consiste en tener nuestros productos siempre al día con los estándares de seguridad y de ofrecer a nuestros clientes el máximo grado de seguridad. Nuestros productos y todos los equipos adicionales son siempre fabricados y examinados según las normas de seguridad vigentes. Nuestro sistema de garantía de calidad controla constantemente que sean cumplidas estas normas. El presente producto ha sido fabricado y examinado según el certificado de conformidad adjunto de la UE y ha salido de nuestra planta en estado impecable según los estándares técnicos de seguridad. Para poder preservar este estado y garantizar un funcionamiento libre de peligros, el usuario deberá atenerse a todas las indicaciones, informaciones de seguridad y notas de alerta. El grupo de empresas Rohde & Schwarz está siempre a su disposición en caso de que tengan preguntas referentes a estas informaciones de seguridad.

Además queda en la responsabilidad del usuario utilizar el producto en la forma debida. Este producto está destinado exclusivamente al uso en la industria y el laboratorio o, si ha sido expresamente autorizado, para aplicaciones de campo y de ninguna manera deberá ser utilizado de modo que alguna persona/cosa pueda sufrir daño. El uso del producto fuera de sus fines definidos o sin tener en cuenta las instrucciones del fabricante queda en la responsabilidad del usuario. El fabricante no se hace en ninguna forma responsable de consecuencias a causa del mal uso del producto.

Informaciones elementales de seguridad

Se parte del uso correcto del producto para los fines definidos si el producto es utilizado conforme a las indicaciones de la correspondiente documentación del producto y dentro del margen de rendimiento definido (ver hoja de datos, documentación, informaciones de seguridad que siguen). El uso del producto hace necesarios conocimientos técnicos y ciertos conocimientos del idioma inglés. Por eso se debe tener en cuenta que el producto solo pueda ser operado por personal especializado o personas instruidas en profundidad con las capacidades correspondientes. Si fuera necesaria indumentaria de seguridad para el uso de productos de Rohde & Schwarz, encontraría la información debida en la documentación del producto en el capítulo correspondiente. Guarde bien las informaciones de seguridad elementales, así como la documentación del producto, y entréguelas a usuarios posteriores.

Tener en cuenta las informaciones de seguridad sirve para evitar en lo posible lesiones o daños por peligros de toda clase. Por eso es imprescindible leer detalladamente y comprender por completo las siguientes informaciones de seguridad antes de usar el producto, y respetarlas durante el uso del producto. Deberán tenerse en cuenta todas las demás informaciones de seguridad, como p. ej. las referentes a la protección de personas, que encontrarán en el capítulo correspondiente de la documentación del producto y que también son de obligado cumplimiento. En las presentes informaciones de seguridad se recogen todos los objetos que distribuye el grupo de empresas Rohde & Schwarz bajo la denominación de "producto", entre ellos también aparatos, instalaciones así como toda clase de accesorios.

Símbolos y definiciones de seguridad

							
Aviso: punto de peligro general Observar la documentación del producto	Atención en el manejo de dispositivos de peso elevado	Peligro de choque eléctrico	Advertencia: superficie caliente	Conexión a conductor de protección	Conexión a tierra	Conexión a masa	Aviso: Cuidado en el manejo de dispositivos sensibles a la electrostática (ESD)

					
Tensión de alimentación de PUESTA EN MARCHA / PARADA	Indicación de estado de espera (Standby)	Corriente continua (DC)	Corriente alterna (AC)	Corriente continua / Corriente alterna (DC/AC)	El aparato está protegido en su totalidad por un aislamiento doble (reforzado)

Palabras de señal y su significado

En la documentación del producto se utilizan las siguientes palabras de señal con el fin de advertir contra riesgos y peligros.



PELIGRO identifica un peligro inminente con riesgo elevado que provocará muerte o lesiones graves si no se evita.



ADVERTENCIA identifica un posible peligro con riesgo medio de provocar muerte o lesiones (graves) si no se evita.



ATENCIÓN identifica un peligro con riesgo reducido de provocar lesiones leves o moderadas si no se evita.



AVISO indica la posibilidad de utilizar mal el producto y, como consecuencia, dañarlo.

En la documentación del producto se emplea de forma sinónima el término CUIDADO.

Las palabras de señal corresponden a la definición habitual para aplicaciones civiles en el área económica europea. Pueden existir definiciones diferentes a esta definición en otras áreas económicas o en aplicaciones militares. Por eso se deberá tener en cuenta que las palabras de señal aquí descritas sean utilizadas siempre solamente en combinación con la correspondiente documentación del producto y solamente en combinación con el producto correspondiente. La utilización de las palabras de señal en combinación con productos o documentaciones que no les correspondan puede llevar a interpretaciones equivocadas y tener por consecuencia daños en personas u objetos.

Estados operativos y posiciones de funcionamiento

El producto solamente debe ser utilizado según lo indicado por el fabricante respecto a los estados operativos y posiciones de funcionamiento sin que se obstruya la ventilación. Si no se siguen las indicaciones del fabricante, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte. En todos los trabajos deberán ser tenidas en cuenta las normas nacionales y locales de seguridad del trabajo y de prevención de accidentes.

1. Si no se convino de otra manera, es para los productos Rohde & Schwarz válido lo que sigue: como posición de funcionamiento se define por principio la posición con el suelo de la caja para abajo, modo de protección IP 2X, grado de suciedad 2, categoría de sobrecarga eléctrica 2, uso solamente en estancias interiores, utilización hasta 2000 m sobre el nivel del mar, transporte hasta 4500 m sobre el nivel del mar. Se aplicará una tolerancia de $\pm 10\%$ sobre el voltaje nominal y de $\pm 5\%$ sobre la frecuencia nominal.
2. No sitúe el producto encima de superficies, vehículos, estantes o mesas, que por sus características de peso o de estabilidad no sean aptos para él. Siga siempre las instrucciones de instalación del fabricante cuando instale y asegure el producto en objetos o estructuras (p. ej. paredes y estantes). Si se realiza la instalación de modo distinto al indicado en la documentación del producto, pueden causarse lesiones o incluso la muerte.
3. No ponga el producto sobre aparatos que generen calor (p. ej. radiadores o calefactores). La temperatura ambiente no debe superar la temperatura máxima especificada en la documentación del producto o en la hoja de datos. En caso de sobrecalentamiento del producto, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte.

Seguridad eléctrica

Si no se siguen (o se siguen de modo insuficiente) las indicaciones del fabricante en cuanto a seguridad eléctrica, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte.

1. Antes de la puesta en marcha del producto se deberá comprobar siempre que la tensión preseleccionada en el producto coincida con la de la red de alimentación eléctrica. Si es necesario modificar el ajuste de tensión, también se deberán cambiar en caso dado los fusibles correspondientes del producto.
2. Los productos de la clase de protección I con alimentación móvil y enchufe individual solamente podrán enchufarse a tomas de corriente con contacto de seguridad y con conductor de protección conectado.
3. Queda prohibida la interrupción intencionada del conductor de protección, tanto en la toma de corriente como en el mismo producto. La interrupción puede tener como consecuencia el riesgo de que el producto sea fuente de choques eléctricos. Si se utilizan cables alargadores o regletas de enchufe, deberá garantizarse la realización de un examen regular de los mismos en cuanto a su estado técnico de seguridad.
4. Si el producto no está equipado con un interruptor para desconectarlo de la red, se deberá considerar el enchufe del cable de conexión como interruptor. En estos casos se deberá asegurar que el enchufe siempre sea de fácil acceso (de acuerdo con la longitud del cable de conexión, aproximadamente 2 m). Los interruptores de función o electrónicos no son aptos para el corte de la red eléctrica. Si los productos sin interruptor están integrados en bastidores o instalaciones, se deberá colocar el interruptor en el nivel de la instalación.
5. No utilice nunca el producto si está dañado el cable de conexión a red. Compruebe regularmente el correcto estado de los cables de conexión a red. Asegúrese, mediante las medidas de protección y de instalación adecuadas, de que el cable de conexión a red no pueda ser dañado o de que nadie pueda ser dañado por él, p. ej. al tropezar o por un choque eléctrico.
6. Solamente está permitido el funcionamiento en redes de alimentación TN/TT aseguradas con fusibles de 16 A como máximo (utilización de fusibles de mayor amperaje solo previa consulta con el grupo de empresas Rohde & Schwarz).
7. Nunca conecte el enchufe en tomas de corriente sucias o llenas de polvo. Introduzca el enchufe por completo y fuertemente en la toma de corriente. La no observación de estas medidas puede provocar chispas, fuego y/o lesiones.
8. No sobrecargue las tomas de corriente, los cables alargadores o las regletas de enchufe ya que esto podría causar fuego o choques eléctricos.
9. En las mediciones en circuitos de corriente con una tensión $U_{\text{eff}} > 30 \text{ V}$ se deberán tomar las medidas apropiadas para impedir cualquier peligro (p. ej. medios de medición adecuados, seguros, limitación de tensión, corte protector, aislamiento etc.).
10. Para la conexión con dispositivos informáticos como un PC o un ordenador industrial, debe comprobarse que éstos cumplan los estándares IEC60950-1/EN60950-1 o IEC61010-1/EN 61010-1 válidos en cada caso.
11. A menos que esté permitido expresamente, no retire nunca la tapa ni componentes de la carcasa mientras el producto esté en servicio. Esto pone a descubierto los cables y componentes eléctricos y puede causar lesiones, fuego o daños en el producto.

12. Si un producto se instala en un lugar fijo, se deberá primero conectar el conductor de protección fijo con el conductor de protección del producto antes de hacer cualquier otra conexión. La instalación y la conexión deberán ser efectuadas por un electricista especializado.
13. En el caso de dispositivos fijos que no estén provistos de fusibles, interruptor automático ni otros mecanismos de seguridad similares, el circuito de alimentación debe estar protegido de modo que todas las personas que puedan acceder al producto, así como el producto mismo, estén a salvo de posibles daños.
14. Todo producto debe estar protegido contra sobretensión (debida p. ej. a una caída del rayo) mediante los correspondientes sistemas de protección. Si no, el personal que lo utilice quedará expuesto al peligro de choque eléctrico.
15. No debe introducirse en los orificios de la caja del aparato ningún objeto que no esté destinado a ello. Esto puede producir cortocircuitos en el producto y/o puede causar choques eléctricos, fuego o lesiones.
16. Salvo indicación contraria, los productos no están impermeabilizados (ver también el capítulo "Estados operativos y posiciones de funcionamiento", punto 1). Por eso es necesario tomar las medidas necesarias para evitar la entrada de líquidos. En caso contrario, existe peligro de choque eléctrico para el usuario o de daños en el producto, que también pueden redundar en peligro para las personas.
17. No utilice el producto en condiciones en las que pueda producirse o ya se hayan producido condensaciones sobre el producto o en el interior de éste, como p. ej. al desplazarlo de un lugar frío a otro caliente. La entrada de agua aumenta el riesgo de choque eléctrico.
18. Antes de la limpieza, desconecte por completo el producto de la alimentación de tensión (p. ej. red de alimentación o batería). Realice la limpieza de los aparatos con un paño suave, que no se deshilache. No utilice bajo ningún concepto productos de limpieza químicos como alcohol, acetona o diluyentes para lacas nitrocelulósicas.

Funcionamiento

1. El uso del producto requiere instrucciones especiales y una alta concentración durante el manejo. Debe asegurarse que las personas que manejen el producto estén a la altura de los requerimientos necesarios en cuanto a aptitudes físicas, psíquicas y emocionales, ya que de otra manera no se pueden excluir lesiones o daños de objetos. El empresario u operador es responsable de seleccionar el personal usuario apto para el manejo del producto.
2. Antes de desplazar o transportar el producto, lea y tenga en cuenta el capítulo "Transporte".
3. Como con todo producto de fabricación industrial no puede quedar excluida en general la posibilidad de que se produzcan alergias provocadas por algunos materiales empleados, los llamados alérgenos (p. ej. el níquel). Si durante el manejo de productos Rohde & Schwarz se producen reacciones alérgicas, como p. ej. irritaciones cutáneas, estornudos continuos, enrojecimiento de la conjuntiva o dificultades respiratorias, debe avisarse inmediatamente a un médico para investigar las causas y evitar cualquier molestia o daño a la salud.
4. Antes de la manipulación mecánica y/o térmica o el desmontaje del producto, debe tenerse en cuenta imprescindiblemente el capítulo "Eliminación", punto 1.

5. Ciertos productos, como p. ej. las instalaciones de radiocomunicación RF, pueden a causa de su función natural, emitir una radiación electromagnética aumentada. Deben tomarse todas las medidas necesarias para la protección de las mujeres embarazadas. También las personas con marcapasos pueden correr peligro a causa de la radiación electromagnética. El empresario/operador tiene la obligación de evaluar y señalar las áreas de trabajo en las que exista un riesgo elevado de exposición a radiaciones.
6. Tenga en cuenta que en caso de incendio pueden desprenderse del producto sustancias tóxicas (gases, líquidos etc.) que pueden generar daños a la salud. Por eso, en caso de incendio deben usarse medidas adecuadas, como p. ej. máscaras antigás e indumentaria de protección.
7. En caso de que un producto Rohde & Schwarz contenga un producto láser (p. ej. un lector de CD/DVD), no debe usarse ninguna otra configuración o función aparte de las descritas en la documentación del producto, a fin de evitar lesiones (p. ej. debidas a irradiación láser).

Reparación y mantenimiento

1. El producto solamente debe ser abierto por personal especializado con autorización para ello. Antes de manipular el producto o abrirlo, es obligatorio desconectarlo de la tensión de alimentación, para evitar toda posibilidad de choque eléctrico.
2. El ajuste, el cambio de partes, el mantenimiento y la reparación deberán ser efectuadas solamente por electricistas autorizados por Rohde & Schwarz. Si se reponen partes con importancia para los aspectos de seguridad (p. ej. el enchufe, los transformadores o los fusibles), solamente podrán ser sustituidos por partes originales. Después de cada cambio de partes relevantes para la seguridad deberá realizarse un control de seguridad (control a primera vista, control del conductor de protección, medición de resistencia de aislamiento, medición de la corriente de fuga, control de funcionamiento). Con esto queda garantizada la seguridad del producto.

Baterías y acumuladores o celdas

Si no se siguen (o se siguen de modo insuficiente) las indicaciones en cuanto a las baterías y acumuladores o celdas, pueden producirse explosiones, incendios y/o lesiones graves con posible consecuencia de muerte. El manejo de baterías y acumuladores con electrolitos alcalinos (p. ej. celdas de litio) debe seguir el estándar EN 62133.

1. No deben desmontarse, abrirse ni triturarse las celdas.
2. Las celdas o baterías no deben someterse a calor ni fuego. Debe evitarse el almacenamiento a la luz directa del sol. Las celdas y baterías deben mantenerse limpias y secas. Limpiar las conexiones sucias con un paño seco y limpio.
3. Las celdas o baterías no deben cortocircuitarse. Es peligroso almacenar las celdas o baterías en estuches o cajones en cuyo interior puedan cortocircuitarse por contacto recíproco o por contacto con otros materiales conductores. No deben extraerse las celdas o baterías de sus embalajes originales hasta el momento en que vayan a utilizarse.
4. Mantener baterías y celdas fuera del alcance de los niños. En caso de ingestión de una celda o batería, avisar inmediatamente a un médico.
5. Las celdas o baterías no deben someterse a impactos mecánicos fuertes indebidos.

Informaciones elementales de seguridad

6. En caso de falta de estanqueidad de una celda, el líquido vertido no debe entrar en contacto con la piel ni los ojos. Si se produce contacto, lavar con agua abundante la zona afectada y avisar a un médico.
7. En caso de cambio o recarga inadecuados, las celdas o baterías que contienen electrolitos alcalinos (p. ej. las celdas de litio) pueden explotar. Para garantizar la seguridad del producto, las celdas o baterías solo deben ser sustituidas por el tipo Rohde & Schwarz correspondiente (ver lista de recambios).
8. Las baterías y celdas deben reciclarse y no deben tirarse a la basura doméstica. Las baterías o acumuladores que contienen plomo, mercurio o cadmio deben tratarse como residuos especiales. Respete en esta relación las normas nacionales de eliminación y reciclaje.

Transporte

1. El producto puede tener un peso elevado. Por eso es necesario desplazarlo o transportarlo con precaución y, si es necesario, usando un sistema de elevación adecuado (p. ej. una carretilla elevadora), a fin de evitar lesiones en la espalda u otros daños personales.
2. Las asas instaladas en los productos sirven solamente de ayuda para el transporte del producto por personas. Por eso no está permitido utilizar las asas para la sujeción en o sobre medios de transporte como p. ej. grúas, carretillas elevadoras de horquilla, carros etc. Es responsabilidad suya fijar los productos de manera segura a los medios de transporte o elevación. Para evitar daños personales o daños en el producto, siga las instrucciones de seguridad del fabricante del medio de transporte o elevación utilizado.
3. Si se utiliza el producto dentro de un vehículo, recae de manera exclusiva en el conductor la responsabilidad de conducir el vehículo de manera segura y adecuada. El fabricante no asumirá ninguna responsabilidad por accidentes o colisiones. No utilice nunca el producto dentro de un vehículo en movimiento si esto pudiera distraer al conductor. Asegure el producto dentro del vehículo debidamente para evitar, en caso de un accidente, lesiones u otra clase de daños.


Eliminación

1. Si se trabaja de manera mecánica y/o térmica cualquier producto o componente más allá del funcionamiento previsto, pueden liberarse sustancias peligrosas (polveros con contenido de metales pesados como p. ej. plomo, berilio o níquel). Por eso el producto solo debe ser desmontado por personal especializado con formación adecuada. Un desmontaje inadecuado puede ocasionar daños para la salud. Se deben tener en cuenta las directivas nacionales referentes a la eliminación de residuos.
2. En caso de que durante el trato del producto se formen sustancias peligrosas o combustibles que deban tratarse como residuos especiales (p. ej. refrigerantes o aceites de motor con intervalos de cambio definidos), deben tenerse en cuenta las indicaciones de seguridad del fabricante de dichas sustancias y las normas regionales de eliminación de residuos. Tenga en cuenta también en caso necesario las indicaciones de seguridad especiales contenidas en la documentación del producto. La eliminación incorrecta de sustancias peligrosas o combustibles puede causar daños a la salud o daños al medio ambiente.

Customer Information Regarding Product Disposal

The German Electrical and Electronic Equipment (ElektroG) Act is an implementation of the following EC directives:

- 2002/96/EC on waste electrical and electronic equipment (WEEE) and
- 2002/95/EC on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS).

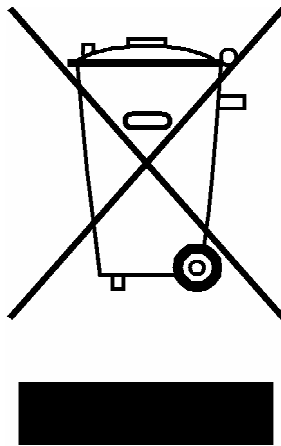

Product labeling in accordance with EN 50419

Once the lifetime of a product has ended, this product must not be disposed of in the standard domestic refuse. Even disposal via the municipal collection points for waste electrical and electronic equipment is not permitted.

Rohde & Schwarz GmbH & Co. KG has developed a disposal concept for the environmental-friendly disposal or recycling of waste material and fully assumes its obligation as a producer to take back and dispose of electrical and electronic waste in accordance with the ElektroG Act.

Please contact your local service representative to dispose of the product.



Kundeninformation zur Batterieverordnung (BattV)


Dieses Gerät enthält eine schadstoffhaltige Batterie. Diese darf nicht mit dem Hausmüll entsorgt werden.

Nach Ende der Lebensdauer darf die Entsorgung nur über eine Rohde&Schwarz-Kundendienststelle oder eine geeignete Sammelstelle erfolgen.

Safety Regulations for Batteries (according to BattV)

This equipment houses a battery containing harmful substances that must not be disposed of as normal household waste.

After its useful life, the battery may only be disposed of at a Rohde & Schwarz service center or at a suitable depot.

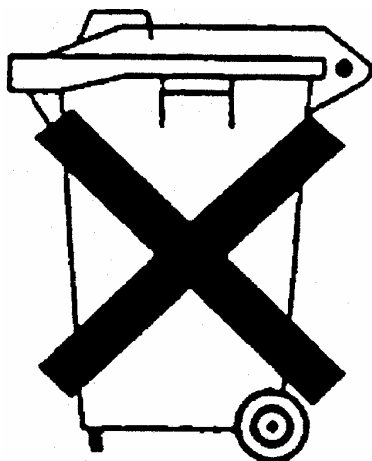

Normas de Seguridad para Baterías (Según BattV)

Este equipo lleva una batería que contiene sustancias perjudiciales, que no se debe desechar en los contenedores de basura domésticos.

Después de la vida útil, la batería sólo se podrá eliminar en un centro de servicio de Rohde & Schwarz o en un depósito apropiado.

Consignes de sécurité pour batteries (selon BattV)

Cet appareil est équipé d'une pile comprenant des substances nocives. Ne jamais la jeter dans une poubelle pour ordures ménagères.

Une pile usagée doit uniquement être éliminée par un centre de service client de Rohde & Schwarz ou peut être collectée pour être traitée spécialement comme déchets dangereux.

Customer Support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz equipment, contact one of our Customer Support Centers. A team of highly qualified engineers provides telephone support and will work with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz equipment.

Up-to-date information and upgrades

To keep your instrument up-to-date and to be informed about new application notes related to your instrument, please send an e-mail to the Customer Support Center stating your instrument and your wish. We will take care that you will get the right information.

Europe, Africa, Middle East

Phone +49 89 4129 12345
customersupport@rohde-schwarz.com

North America

Phone 1-888-TEST-RSA (1-888-837-8772)
customer.support@rsa.rohde-schwarz.com

Latin America

Phone +1-410-910-7988
customersupport.la@rohde-schwarz.com

Asia/Pacific

Phone +65 65 13 04 88
customersupport.asia@rohde-schwarz.com



Qualitätszertifikat

Certificate of quality

Certificat de qualité

Certified Quality System
ISO 9001

Certified Environmental System
ISO 14001

Sehr geehrter Kunde,

Sie haben sich für den Kauf eines Rohde&Schwarz-Produktes entschieden. Hiermit erhalten Sie ein nach modernsten Fertigungsmethoden hergestelltes Produkt. Es wurde nach den Regeln unseres Qualitätsmanagementsystems entwickelt, gefertigt und geprüft. Das Rohde&Schwarz-Qualitätsmanagementsystem ist u.a. nach ISO 9001 und ISO 14001 zertifiziert.

Der Umwelt verpflichtet

- ▮ Energie-effiziente, RoHS-konforme Produkte
- ▮ Kontinuierliche Weiterentwicklung nachhaltiger Umweltkonzepte
- ▮ ISO 14001-zertifiziertes Umweltmanagementsystem

Dear Customer,

You have decided to buy a Rohde&Schwarz product. You are thus assured of receiving a product that is manufactured using the most modern methods available. This product was developed, manufactured and tested in compliance with our quality management system standards. The Rohde&Schwarz quality management system is certified according to standards such as ISO 9001 and ISO 14001.

Environmental commitment

- ▮ Energy-efficient products
- ▮ Continuous improvement in environmental sustainability
- ▮ ISO 14001-certified environmental management system

Cher client,

Vous avez choisi d'acheter un produit Rohde&Schwarz. Vous disposez donc d'un produit fabriqué d'après les méthodes les plus avancées. Le développement, la fabrication et les tests respectent nos normes de gestion qualité. Le système de gestion qualité de Rohde&Schwarz a été homologué, entre autres, conformément aux normes ISO 9001 et ISO 14001.

Engagement écologique

- ▮ Produits à efficacité énergétique
- ▮ Amélioration continue de la durabilité environnementale
- ▮ Système de gestion de l'environnement certifié selon ISO 14001

75 Years of
Driving
Innovation


ROHDE & SCHWARZ



ROHDE & SCHWARZ

CE Declaration of Conformity



Certificate No.: 2010-50

This is to certify that:

Equipment type	Stock No.	Designation
FSVR	1311.0006.XX	REALTIME ANALYZER

complies with the provisions of the Directive of the Council of the European Union on the approximation of the laws of the Member States

- relating to electrical equipment for use within defined voltage limits (2006/95/EC)
- relating to electromagnetic compatibility (2004/108/EC)

Conformity is proven by compliance with the following standards:

EN 61010-1: 2001
EN 61326-1: 2006
EN 61326-2-1: 2006
EN 55011: 2007 + A2: 2007, Class A
EN 61000-3-2: 2006
EN 61000-3-3: 1995 + A1: 2001 + A2: 2005

For the assessment of electromagnetic compatibility, the limits of radio interference for Class A equipment as well as the immunity to interference for operation in industry have been used as a basis.

ROHDE & SCHWARZ GmbH & Co. KG
Mühldorfstr. 15, D-81671 München

Munich, 2010-05-26

Central Quality Management MF-QZ / Radde

1311.0006.XX

CE

E-1

Contents

1	Documentation Overview.....	5
2	Conventions Used in the Documentation.....	9
2.1	Typographical Conventions.....	9
2.2	Conventions for Procedure Descriptions.....	9
3	How to Use the Help System.....	11
4	3GPP FDD UE Measurement Option R&S FSV-K73.....	13
4.1	Measurement Examples (R&S FSV-K73).....	13
4.2	Setup for User Equipment Tests.....	22
4.3	3GPP FDD UE Test Models.....	23
4.4	Instrument Functions 3GPP User Equipment Measurements.....	24
4.5	Configuration of 3GPP FDD UE Measurements.....	34
4.6	Remote Control Commands (R&S FSV-K73).....	100
4.7	Error Messages.....	214
4.8	Glossary.....	215
	List of Commands.....	217
	Index.....	222

1 Documentation Overview

The user documentation for the analyzer is divided as follows:

- Quick Start Guide
- Operating Manuals for base unit and options
- Service Manual
- Online Help
- Release Notes

Quick Start Guide

This manual is delivered with the instrument in printed form and in PDF format on the CD. It provides the information needed to set up and start working with the instrument. Basic operations and basic measurements are described. Also a brief introduction to remote control is given. The manual includes general information (e.g. Safety Instructions) and the following chapters:

Chapter 1	Introduction, General information
Chapter 2	Front and Rear Panel
Chapter 3	Preparing for Use
Chapter 4	Firmware Update and Installation of Firmware Options
Chapter 5	Basic Operations
Chapter 6	Basic Measurement Examples
Chapter 7	Brief Introduction to Remote Control
Appendix 1	Printer Interface
Appendix 2	LAN Interface

Operating Manuals

The Operating Manuals are a supplement to the Quick Start Guide. Operating Manuals are provided for the base unit and each additional (software) option.

The Operating Manual for the base unit provides basic information on operating the analyzer in general, and the "Spectrum" mode in particular. Furthermore, the software options that enhance the basic functionality for various measurement modes are described here. The set of measurement examples in the Quick Start Guide is expanded by more advanced measurement examples. In addition to the brief introduction to remote control in the Quick Start Guide, a description of the basic analyzer commands and programming examples is given. Information on maintenance, instrument interfaces and error messages is also provided.

In the individual option manuals, the specific instrument functions of the option are described in detail. For additional information on default settings and parameters, refer to the data sheets. Basic information on operating the analyzer is not included in the option manuals.

The following Operating Manuals are available for the analyzer:

- analyzer base unit; in addition:
 - R&S FSV-K7S Stereo FM Measurements
 - R&S FSV-K9 Power Sensor Support
 - R&S FSV-K14 Spectrogram Measurement
- R&S FSV-K10 GSM/EDGE Measurement
- R&S FSV-K30 Noise Figure Measurement
- R&S FSV-K40 Phase Noise Measurement
- R&S FSV-K70 Vector Signal Analysis
- R&S FSV-K72 3GPP FDD BTS Analysis
- R&S FSV-K73 3GPP FDD UE Analysis
- R&S FSV-K76/77 3GPP TD-SCDMA BTS/UE Measurement
- R&S FSV-K82/83 CDMA2000 BTS/MS Analysis
- R&S FSV-K84/85 1xEV-DO BTS/MS Analysis
- R&S FSV-K91 WLAN IEEE 802.11a/b/g/j/n
- R&S FSV-K93 WiMAX IEEE 802.16 OFDM/OFDMA Analysis
- R&S FSV-K100/K104 EUTRA / LTE Downlink Measurement Application
- R&S FSV-K101/K105 EUTRA / LTE Uplink Measurement Application

These manuals are available in PDF format on the CD delivered with the instrument. The printed manual can be ordered from Rohde & Schwarz GmbH & Co. KG.

Service Manual

This manual is available in PDF format on the CD delivered with the instrument. It describes how to check compliance with rated specifications, instrument function, repair, troubleshooting and fault elimination. It contains all information required for repairing the analyzer by replacing modules. The manual includes the following chapters:

Chapter 1	Performance Test
Chapter 2	Adjustment
Chapter 3	Repair
Chapter 4	Software Update / Installing Options
Chapter 5	Documents

Online Help

The online help contains context-specific help on operating the analyzer and all available options. It describes both manual and remote operation. The online help is installed on the analyzer by default, and is also available as an executable .chm file on the CD delivered with the instrument.

Release Notes

The release notes describe the installation of the firmware, new and modified functions, eliminated problems, and last minute changes to the documentation. The corresponding firmware version is indicated on the title page of the release notes. The current release notes are provided in the Internet.

2 Conventions Used in the Documentation

2.1 Typographical Conventions

The following text markers are used throughout this documentation:

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks.
KEYS	Key names are written in capital letters.
File names, commands, program code	File names, commands, coding samples and screen output are distinguished by their font.
<i>Input</i>	Input to be entered by the user is displayed in italics.
Links	Links that you can click are displayed in blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

2.2 Conventions for Procedure Descriptions

When describing how to operate the instrument, several alternative methods may be available to perform the same task. In this case, the procedure using the touch screen is described. Any elements that can be activated by touching can also be clicked using an additionally connected mouse. The alternative procedure using the keys on the device or the on-screen keyboard is only described if it deviates from the standard operating procedures.

The term "select" may refer to any of the described methods, i.e. using a finger on the touchscreen, a mouse pointer in the display, or a key on the device or on a keyboard.

3 How to Use the Help System

Calling context-sensitive and general help

- ▶ To display the general help dialog box, press the HELP key on the front panel.
The help dialog box "View" tab is displayed. A topic containing information about the current menu or the currently opened dialog box and its function is displayed.



For standard Windows dialog boxes (e.g. File Properties, Print dialog etc.), no context-sensitive help is available.

- ▶ If the help is already displayed, press the softkey for which you want to display help.
A topic containing information about the softkey and its function is displayed.



If a softkey opens a submenu and you press the softkey a second time, the submenu of the softkey is displayed.

Contents of the help dialog box

The help dialog box contains four tabs:

- "Contents" - contains a table of help contents
- "View" - contains a specific help topic
- "Index" - contains index entries to search for help topics
- "Zoom" - contains zoom functions for the help display

To change between these tabs, press the tab on the touchscreen.

Navigating in the table of contents

- To move through the displayed contents entries, use the UP ARROW and DOWN ARROW keys. Entries that contain further entries are marked with a plus sign.
- To display a help topic, press the ENTER key. The "View" tab with the corresponding help topic is displayed.
- To change to the next tab, press the tab on the touchscreen.

Navigating in the help topics

- To scroll through a page, use the rotary knob or the UP ARROW and DOWN ARROW keys.
- To jump to the linked topic, press the link text on the touchscreen.

Searching for a topic

1. Change to the "Index" tab.

2. Enter the first characters of the topic you are interested in. The entries starting with these characters are displayed.
3. Change the focus by pressing the ENTER key.
4. Select the suitable keyword by using the UP ARROW or DOWN ARROW keys or the rotary knob.
5. Press the ENTER key to display the help topic.
The "View" tab with the corresponding help topic is displayed.

Changing the zoom

1. Change to the "Zoom" tab.
2. Set the zoom using the rotary knob. Four settings are available: 1-4. The smallest size is selected by number 1, the largest size is selected by number 4.

Closing the help window

- ▶ Press the ESC key or a function key on the front panel.

4 3GPP FDD UE Measurement Option R&S FSV-K73

Overview of Firmware Option R&S FSV-K73

This section contains all information required for operation of an analyzer equipped with Application Firmware R&S FSV-K73. It covers operation via menus and the remote control commands for the 3GPP FDD UE user equipment test.

This part of the documentation consists of the following chapters:

- [chapter 4.1, "Measurement Examples \(R&S FSV-K73\)"](#), on page 13
Explains some basic 3GPP[®]FDD user equipment tests.
- [chapter 4.2, "Setup for User Equipment Tests"](#), on page 22
Describes the measurement setup for user equipment tests.
- [chapter 4.3, "3GPP FDD UE Test Models"](#), on page 23
Gives an overview over the test models with different channel configurations.
- [chapter 4.4, "Instrument Functions 3GPP User Equipment Measurements"](#), on page 24
Describes the instrument functions of 3GPP user equipment measurements
- [chapter 4.5, "Configuration of 3GPP FDD UE Measurements"](#), on page 34
Contains a detailed description of the possible user equipment test measurements as a reference for manual operation. This chapter also presents a list of remote control commands associated with each function.
- [chapter 4.6, "Remote Control Commands \(R&S FSV-K73\)"](#), on page 100
Describes all remote control commands defined for the code domain measurement. An alphabetic list of all remote control commands are provided at the end of this document.
- [chapter 4.7, "Error Messages"](#), on page 214
Contains device-specific error messages for R&S FSV-K73.
- [chapter 4.8, "Glossary"](#), on page 215
Contains an explanation of terms related to measured quantities of the code domain measurement.

This part of the documentation includes only functions of the firmware application R&S FSV-K73. For all other descriptions, please refer to the description of the base unit at the beginning of the documentation.

4.1 Measurement Examples (R&S FSV-K73)

This chapter gives an overview of the "Basic Settings in Code Domain Measurement Mode" and explains some basic 3GPP[®]FDD user equipment tests. It describes how operating and measurement errors can be avoided using correct presetting. The measurements are performed with an analyzer equipped with option R&S FSV-K73.

Key settings are shown as examples to avoid measurement errors. Following the correct setting, the effect of an incorrect setting is shown.

The following measurements are performed:

- [chapter 4.1.1, "Measurement 1: Measurement of the Signal Channel Power"](#), on page 15
- [chapter 4.1.2, "Measurement 2: Measurement of the Spectrum Emission Mask"](#), on page 15
- [chapter 4.1.3, "Measurement 3: Measurement of the Relative Code Domain Power"](#), on page 16
- [chapter 4.1.4, "Measurement 4: Triggered Measurement of Relative Code Domain Power"](#), on page 18
- [chapter 4.1.5, "Measurement 5: Measurement of the Composite EVM"](#), on page 19
- [chapter 4.1.6, "Measurement 6: Measurement of Peak Code Domain Error"](#), on page 20

The measurements are performed using the following units and accessories:

- The analyzer with Application Firmware R&S FSV-K73: 3GPP FDD UE user equipment test
- The Vector Signal Generator R&S SMU with option R&S SMU-B45: digital standard 3GPP (options R&S SMU-B20 and R&S SMU-B11 required)
- 1 coaxial cable, 50Ω, approx. 1 m, N connector
- 1 coaxial cable, 50Ω, approx. 1 m, BNC connector

Basic Settings in Code Domain Measurement Mode

In the default mode after a PRESET, the analyzer is in the analyzer mode. The following default settings of the code domain measurement are activated provided that the code domain analyzer mode is selected.

Parameter	Setting
Digital standard	W-CDMA 3GPP REV
Sweep	CONTINUOUS
CDP mode	CODE CHAN AUTOSEARCH
Trigger settings	FREE RUN
Trigger offset	0
Scrambling code	0
Threshold value	-60 dB
Symbol rate	15 ksps
Code number	0

Parameter	Setting
Slot number	0
Display	Screen A: Code Power Relative Screen B: result Summary

4.1.1 Measurement 1: Measurement of the Signal Channel Power

The measurement of the spectrum gives an overview of the 3GPP FDD UE signal and the spurious emissions close to the carrier.

1. Test setup
Connect the RF output of the R&S SMU to the RF input of the analyzer (coaxial cable with N connectors).
2. Settings on the R&S SMU
[PRESET]
[LEVEL: 0 dBm]
[FREQ: 2.1175 GHz]
 DIGITAL STD
 - a) WCDMA/3GPP
 - b) SET DEFAULT
 - c) LINK DIRECTION: UP/REVERSE
 - d) TEST MODELS (NOT STANDARDIZED)...
 - e) C+D960K
 - f) STATE: ON
3. Settings on the analyzer
[PRESET]
[CENTER: 2.1175 GHz]
[AMPT: 0 dBm]
[MODE: 3GPP FDD UE]
[MEAS: POWER]

4.1.2 Measurement 2: Measurement of the Spectrum Emission Mask

The 3GPP specification defines a measurement, which monitors the compliance with a spectral mask in a range of at least ± 12.5 MHz about the 3GPP FDD UE carrier. To assess the power emissions in the specified range, the signal power is measured in the range near the carrier by means of a 30kHz filter, in the ranges far off the carrier by means of a 1MHz filter. The resulting trace is compared to a limit line defined in the 3GPP specification.

1. Test setup
Connect the RF output of the R&S SMU to the RF input of the analyzer (coaxial cable with N connectors).

2. Settings on the R&S SMU
 - [PRESET]
 - [LEVEL: 0 dBm]
 - [FREQ: 2.1175 GHz]
 - DIGITAL STD
 - a) WCDMA/3GPP
 - b) SET DEFAULT
 - c) LINK DIRECTION: UP/REVERSE
 - d) TEST MODELS (NOT STANDARDIZED)...
 - e) C+D960K
 - f) STATE: ON
3. Settings on the analyzer
 - [PRESET]
 - [CENTER: 2.1175 GHz]
 - [AMPT: 0 dBm]
 - [MODE: 3GPP FDD UE]
 - [MEAS: Spectrum Emission Mask]
4. Measurement on the analyzer

The following is displayed:

- Spectrum of the 3GPP FDD UE signal
- Limit line defined in the standard
- Information on limit line violations (passed/failed)

4.1.3 Measurement 3: Measurement of the Relative Code Domain Power

A code domain power measurement on one of the channel configurations is shown in the following. Basic parameters of CDP analysis are changed to demonstrate the effects of non-signal-adapted values.

1. Test setup

Connect the reference input (EXT REF IN/OUT) on the rear panel of the analyzer to the reference output (REF) on the rear panel of R&S SMU (coaxial cable with BNC connectors).
2. Settings on the R&S SMU

See [chapter 4.1.2, "Measurement 2: Measurement of the Spectrum Emission Mask"](#), on page 15
3. Settings on the analyzer

See [chapter 4.1.2, "Measurement 2: Measurement of the Spectrum Emission Mask"](#), on page 15; in addition:

SETUP: REFERENCE EXT
4. Measurement on the analyzer

Frequency error: The displayed frequency error should be < 10 Hz

Setting: Synchronization of the Reference Frequencies

Synchronization of the reference oscillators both of the DUT and the analyzer strongly reduces the measured frequency error.

1. Test setup
Connect the reference input (EXT REF IN/OUT) on the rear panel of the analyzer to the reference output (REF) on the rear panel of the R&S SMU (coaxial cable with BNC connectors).
2. Settings on the R&S SMU
See [chapter 4.1.2, "Measurement 2: Measurement of the Spectrum Emission Mask"](#), on page 15
3. Settings on the analyzer
See [chapter 4.1.2, "Measurement 2: Measurement of the Spectrum Emission Mask"](#), on page 15; in addition:
SETUP: REFERENCE EXT
4. Measurement on the analyzer
The displayed frequency error should be < 10 Hz

**Note**

The reference frequencies of the analyzer and of the DUT should be synchronized.

Setting: Behaviour with Deviating Center Frequency Setting

In the following, the behaviour of the DUT and the analyzer with an incorrect center frequency setting is shown.

1. Test setup
Tune the center frequency of the signal generator in 0.5 kHz steps and watch the analyzer screen:
2. Measurement on the analyzer
 - a) A CDP measurement on the analyzer is still possible with a frequency error of up to approx. 1 kHz. Up to 1 kHz, a frequency error causes no apparent difference in measurement accuracy of the code domain power measurement.
 - b) Above a frequency error of 1 kHz, the probability of an impaired synchronization increases. With continuous measurements, at times all channels are displayed in blue with almost the same level.
 - c) Above a frequency error of approx. 2 kHz, a CDP measurement cannot be performed. The analyzer displays all possible codes in blue with a similar level.
3. Settings on the R&S SMU
FREQ: 2.1175 GHz
 - a) Set the signal generator center frequency to 2.1175 GHz again:
FREQ: 2.1175 GHz

**Note**

The analyzer center frequency should not differ from the DUT frequency by more than 2 kHz.

Setting: Behaviour with Incorrect Scrambling Code

A valid CDP measurement can be carried out only if the scrambling code set on the analyzer is identical to that of the transmitted signal.

1. Test setup
SELECT BS/MS
BS 1: ON
SCRAMBLING CODE: 0001
(The scrambling code is set to 0000 on the analyzer.)
2. Settings on the R&S SMU
The CDP display shows all possible codes with approximately the same level.
3. Settings on the analyzer
Set scrambling code to new value.
[MEAS CONFIG]
[Sync/Scrambling Settings]
[Scrambling Code 01]
4. Measurement on the analyzer
The CDP display shows the test model again.

**Note**

The scrambling code setting of the analyzer must be identical to that of the measured signal.

4.1.4 Measurement 4: Triggered Measurement of Relative Code Domain Power

If the code domain power measurement is performed without external triggering, a section of approximately 20 ms of the test signal is recorded at an arbitrary moment to detect the start of a 3GPP FDD UE frame in this section. Depending on the position of the frame start, the required computing time can be quite long. Applying an external (frame) trigger can reduce the computing time.

1. Test setup
 - a) Connect the RF output of the R&S SMU to the input of the analyzer.
 - b) Connect the reference input (EXT REF IN/OUT) on the rear panel of the analyzer to the reference input (REF) on the rear panel of the R&S SMU (coaxial cable with BNC connectors).

- c) Connect the external trigger input on the rear panel of the analyzer (EXT TRIG GATE) to the external trigger output on the rear panel of the R&S SMU (TRIG-OUT1 of PAR DATA).
2. Settings on the R&S SMU
See [chapter 4.1.3, "Measurement 3: Measurement of the Relative Code Domain Power"](#), on page 16
3. Settings on the analyzer
See [chapter 4.1.3, "Measurement 3: Measurement of the Relative Code Domain Power"](#), on page 16
In addition:
[TRIG EXTERN]
4. Measurement on the analyzer

The following is displayed:

- Screen A: Code domain power of signal (channel configuration with 3 data channels on Q branch)
- Screen B: Numeric results of CDP measurement
- Trigger to Frame: Offset between trigger event and start of 3GPP FDD UE frame

The repetition rate of the measurement increases considerably compared to the repetition rate of a measurement without an external trigger.

Setting: Trigger Offset

A delay of the trigger event referenced to the start of the 3GPP FDD UE frame can be compensated by modifying the trigger offset.

1. Settings on the analyzer:
[TRIG] -> [TRIGGER OFFSET] -> 100 μ s
2. Measurement on the analyzer:
The Trigger to Frame parameter in the numeric results table (screen B) changes:
Trigger to Frame -> -100 μ s



Note

A trigger offset compensates analog delays of the trigger event.

4.1.5 Measurement 5: Measurement of the Composite EVM

The 3GPP specification defines the composite EVM measurement as the average square deviation of the total signal:

An ideal reference signal is generated from the demodulated data. The test signal and the reference signal are compared with each other. The square deviation yields the composite EVM.

1. Test setup
 - a) Connect the RF output of the R&S SMU to the input of the analyzer.
 - b) Connect the reference input (EXT REF IN/OUT) on the rear panel of the analyzer to the reference input (REF) on the rear panel of the R&S SMU (coaxial cable with BNC connectors).
 - c) Connect the external trigger input on the rear panel of the analyzer (EXT TRIG GATE) to the external trigger output on the rear panel of the R&S SMU (TRIG-OUT1 of PAR DATA).
2. Settings on the R&S SMU
 - [PRESET]
 - [LEVEL: 0 dBm]
 - [FREQ: 2.1175 GHz]
 - a) DIGITAL STD
 - b) LINK DIRECTION: UP/REVERSE
 - c) TEST MODELS (NOT STANDARDIZED)...
 - d) C+D960K
 - e) SELECT BS/MS
 - f) MS 1 ON
 - g) OVERALL SYMBOL RATE... 6*960
 - h) STATE: ON
3. Settings on the analyzer
 - [PRESET]
 - [CENTER: 2.1175 GHz]
 - [REF: 10 dBm]
 - [3GPP FDD UE]
 - [TRIG EXTERN]
 - [RESULTS COMPOSITE EVM]
4. Measurement on the analyzer

The following is displayed:

- Screen A: Code domain power of signal, branch Q
- Screen B: Composite EVM (EVM for total signal)

4.1.6 Measurement 6: Measurement of Peak Code Domain Error

The peak code domain error measurement is defined in the 3GPP specification for FDD signals.

An ideal reference signal is generated from the demodulated data. The test signal and the reference signal are compared with each other. The difference of the two signals is projected onto the classes of the different spreading factors. The peak code domain error measurement is obtained by summing up the symbols of each difference signal slot and searching for the maximum error code.

1. Test setup
 - a) Connect the RF output of the R&S SMU to the input of the analyzer.
 - b) Connect the reference input (EXT REF IN/OUT) on the rear panel of the analyzer to the reference input (REF) on the rear panel of the R&S SMU (coaxial cable with BNC connectors).
 - c) Connect the external trigger input on the rear panel of the analyzer (EXT TRIG GATE) to the external trigger output on the rear panel of the R&S SMU (TRIG-OUT1 of PAR DATA).
2. Settings on the R&S SMU
[PRESET]
[LEVEL: 0 dBm]
[FREQ: 2.1175 GHz]
DIGITAL STD
WCDMA 3GPP
LINK DIRECTION: UP/REVERSE
TEST MODELS (NOT STANDARDIZED)...
C+D960K
SELECT BS/MS
MS 1 ON
OVERALL SYMBOL RATE...: 6*960
STATE: ON
3. Settings on the analyzer
[PRESET]
[CENTER: 2.1175 GHz]
[REF: 0 dBm]
[3GPP FDD UE]
[TRIG: EXTERN]
[RESULTS: PEAK CODE DOMAIN ERR]
4. Measurement on the analyzer

The following is displayed:

- Screen A: Code domain power of signal, branch Q
- Screen B: Peak code domain error (projection of error onto the class with spreading factor 256)

4.2 Setup for User Equipment Tests

NOTICE

Risk of instrument damage

Before switching on the instrument, make sure that the following conditions are met:

- Instrument covers are in place and all fasteners are tightened.
- All fan openings are unobstructed and the airflow perforations are unimpeded. The minimum distance from the wall is 10 cm.
- The instrument is dry and shows no sign of condensation.
- The instrument is operated in the horizontal position on an even surface.
- The ambient temperature does not exceed the range specified in the data sheet.
- Signal levels at the input connectors are all within the specified ranges.
- Signal outputs are correctly connected and are not overloaded.

Failure to meet these conditions may cause damage to the instrument or other devices in the test setup.

This section describes how to set up the analyzer for 3GPP FDD UE user equipment tests. As a prerequisite for starting the test, the instrument must be correctly set up and connected to the AC power supply as described in chapter 1 of the operating manual for the analyzer. Furthermore, application firmware module R&S FSV-K73 must be properly installed following the instructions provided in the operating manual for the analyzer.

Standard Test Setup

- Connect antenna output (or TX output) of UE to RF input of the analyzer via a power attenuator of suitable attenuation.
The following values are recommended for the external attenuator to ensure that the RF input of the analyzer is protected and the sensitivity of the analyzer is not reduced too much.

Max. power	Recommended ext. attenuation
≥55 to 60 dBm	35 to 40 dB
≥50 to 55 dBm	30 to 35 dB
≥45 to 50 dBm	25 to 30 dB
≥40 to 45 dBm	20 to 25 dB
≥35 to 40 dBm	15 to 20 dB
≥30 to 35 dBm	10 to 15 dB
≥25 to 30 dBm	5 to 10 dB
≥20 to 25 dBm	0 to 5 dB
<20 dBm	0 dB

- For signal measurements at the output of two-port networks, connect the reference frequency of the signal source to the rear reference input of the analyzer (EXT REF IN/OUT).
- To ensure that the error limits specified by the 3GPP standard are met, the analyzer should use an external reference frequency for frequency measurements on user equipment. For instance, a rubidium frequency standard may be used as a reference source.
- If the user equipment is provided with a trigger output, connect this output to the rear trigger input of the analyzer (EXT TRIG GATE).

Presetting

- Enter external attenuation (REF LVL OFFSET)
- Enter reference level
- Enter center frequency
- Set the trigger
- Select standard and measurement

4.3 3GPP FDD UE Test Models

The possible channel configurations for the mobile station signal are limited by 3GPP. Only two different configurations for data channels DPDCH are permissible according to the specification. In addition to these two channel configurations, the HS-DPCCH channel can be transmitted to operate the mobile station in HSDPA mode. Thus, the R&S FSV-K73 checks for these channel configurations only during the automatic channel search. Therefore, channels whose parameters do not correspond to one of these configurations are not automatically detected as active channels.

The two possible channel configurations are summarized below:

Table 4-1: Channel configuration 1: DPCCH and 1 DPDCH

Channel type	Number of channels	Symbol rate	Spreading code(s)	Mapping to component
DPCCH	1	15 ksps	0	Q
DPDCH	1	15 ksps – 960 ksps	[spreading-factor/4]	I

Table 4-2: Channel configuration 2: DPCCH and up to 6 DPDCH

Channel type	Number of channels	Symbol rate	Spreading code(s)	Mapping to component
DPCCH	1	15 ksps	0	Q
DPDCH	1	960 ksps	1	I
DPDCH	1	960 ksps	1	Q
DPDCH	1	960 ksps	3	I
DPDCH	1	960 ksps	3	Q

Channel type	Number of channels	Symbol rate	Spreading code(s)	Mapping to component
DPDCH	1	960 ksps	2	I
DPDCH	1	960 ksps	2	Q

Table 4-3: Channel configuration 3: DPCCH, up to 6 DPDCH and 1 HS-DPCCH The channel configuration is as above in table 4-2. On HS-DPCCH is added to each channel table.

Number of DPDCH	Symbol rate all DPDCH	Symbol rate HS-DPCCH	Spreading code HS-DPCCH	Mapping to component (HS-DPCCH)
1	15 – 960 ksps	15 ksps	64	Q
2	1920 ksps	15 ksps	1	I
3	2880 ksps	15 ksps	32	Q
4	3840 ksps	15 ksps	1	I
5	4800 ksps	15 ksps	32	Q
6	5760 ksps	15 ksps	1	I

Table 4-4: Channelization code of HS-DPCCH

Nmax-dpdch (as defined in subclause 4.2.1)	Channelization code C_{ch}
1	$C_{ch,256,64}$
2,4,6	$C_{ch,256,1}$
3,5	$C_{ch,256,32}$

4.4 Instrument Functions 3GPP User Equipment Measurements

The analyzer equipped with the 3GPP User equipment measurement option R&S FSV-K73 performs code domain power measurements on downlink signals according to the 3GPP standard (Third Generation Partnership Project, FDD mode). Signals that meet the conditions for channel configuration of 3GPP standard test models 1 to 5 can be measured, including HSDPA and HSUPA signals (test model 5). In addition to the code domain power measurements specified by the 3GPP standard, the 3GPP user equipment measurements option offers measurements with predefined settings in the frequency domain, e.g. power measurements.

To open the 3GPP UE menu

- If the 3GPP FDD UE mode is not the active measurement mode, press the MODE key and select the "3GPP FDD UE" softkey
- If the 3GPP FDD UE mode is already active, press the MENU key.

The 3GPP UE menu is displayed.

4.4.1 Menu and Softkey Description for CDA Measurements

This chapter describes the menus and softkeys for CDA measurements. The "Span", "Bandwidth", and "Marker Function" menus are disabled for measurements in the CDA mode. For all other measurements, the settings are described together with the measurement. The softkeys are described in [chapter 4.5.2.6, "Softkeys and Menus for RF Measurements \(K73\)"](#), on page 80.

All other menus are provided as described for the base unit. For details refer to the corresponding menu descriptions.

To display help to a softkey, press the HELP key and then the softkey for which you want to display help. To close the help window, press the ESC key. For further information refer to [chapter 3, "How to Use the Help System"](#), on page 11.

4.4.2 Measurements and Result Diagrams

The 3GPP user equipment measurement option provides Code Domain Measurements and RF measurements listed below:

Code Domain Measurements

The "Code Domain Measurement" option provides the following test measurement types and result diagrams which are available via the "Display Config" softkey or the "Display Config" button in the "Settings Overview" (see ["Display Config"](#) on page 49).

- Code Domain Power (see ["Code Domain Power"](#) on page 51)
- Code Domain Channel Table (see ["Composite EVM \(RMS\)"](#) on page 52)
- Code Domain Result Summary (see ["Result Summary"](#) on page 55)
- Trace Statistics(Avg, Min, Max) in Code Domain Analyzer Mode (see ["Result Summary"](#) on page 55)
- Composite EVM (see ["Composite EVM \(RMS\)"](#) on page 52)
- Peak Code Domain Error (see ["Peak Code Domain Error"](#) on page 52)
- Power vs Slot (see ["Power vs Slot"](#) on page 54)
- Composite Const (see ["Composite Constellation"](#) on page 54)
- Code Domain Error (see ["Code Domain Error Power"](#) on page 57)
- Power vs Symbol (see ["Power vs Symbol"](#) on page 58)
- Symbol Const (see ["Symbol Constellation"](#) on page 59)
- Symbol EVM (see ["Symbol EVM"](#) on page 59)
- Symbol Magnitude Error (see ["Symbol Magnitude Error"](#) on page 55)
- Symbol Phase Error (see ["Symbol Phase Error"](#) on page 55)
- Bitstream (see ["Bitstream"](#) on page 59)
- Freq Err vs Slot (see ["Freq Err vs Slot"](#) on page 59)
- Phase Discontinuity (see ["Phase Discontinuity vs Slot"](#) on page 59)

The code domain power measurements are performed as specified by the 3GPP standards. A signal section of approx. 20 ms is recorded for analysis and then searched through

to find the start of a 3GPP FDD UE frame. If a frame start is found in the signal, the code domain power analysis is performed for a complete frame starting from slot 0. The different result diagrams are calculated from the recorded IQ data set. Therefore it is not necessary to start a new measurement in order to change the result diagram. Common settings for these measurements are performed via the settings menu (HOME key). For details refer to the "[Settings Overview](#)" on page 39 dialog box.

RF measurements

The RF Measurement option provides the following test measurement types and result displays:

- Output Power (see [chapter 4.5.2.1, "Output Power Measurements"](#), on page 76)
- Adjacent Channel Power (ACLR) (see [chapter 4.5.2.3, "Adjacent Channel Power \(ACLR\)"](#), on page 77)
- Spectrum Emission Mask (see [chapter 4.5.2.2, "Spectrum Emission Mask"](#), on page 77)
- Occupied Bandwidth (see [chapter 4.5.2.4, "Occupied Bandwidth"](#), on page 78)
- CCDF (see [chapter 4.5.2.5, "CCDF"](#), on page 79)

All these measurements are accessed via the MEAS key (measurement menu). Some parameters are set automatically according to the 3GPP standard. A list of these parameters is given with each measurement type. A set of parameters is passed on from the 3GPP user equipment measurements option to the base unit and vice versa in order to provide a quick swap (see the following table).

Transferred parameters
center frequency
reference level
attenuation
reference level offset
trigger source

4.4.3 Further Information

4.4.3.1	Short List of Abbreviations.....	27
4.4.3.2	Channels of the Code Domain Channel Table and Their Usage.....	27
4.4.3.3	Detector Overview.....	28
4.4.3.4	Trace Mode Overview.....	29
4.4.3.5	Selecting the Appropriate Filter Type.....	31
4.4.3.6	List of Available RRC and Channel Filters.....	31
4.4.3.7	ASCII File Export Format.....	33

4.4.3.1 Short List of Abbreviations

Term or abbreviation	Description
UE	user equipment
CPICH	common pilot channel
DPCH	dedicated physical channel, data channel
FDD	frequency division duplexing
PCCPCH	primary common control physical channel
PICH	paging indication channel
SCH	synchronization channel, divided into P-SCH (primary synchronization channel) and S-SCH (secondary synchronization channel)

4.4.3.2 Channels of the Code Domain Channel Table and Their Usage

The channel assignment table contains the following (data) channels:

Channel	Description
DPCCH	The Dedicated Physical Control Channel is used to synchronize the signal. It carries pilot symbols and is expected in the Q branch at code class 8 with code number 0. The channel is displayed in the upper part of the table.
DPDCH	The Dedicated Physical Data Channel is used to carry UPLINK data from the UE to the BS. The code allocation depends on the total required symbol rate. The following table represents the possible configurations of DPCH spreading factors and code allocation.
HSDPCCH	The High Speed Dedicated Physical Control Channel (for HS-DCH) is used to carry control information (CQI/ACK/NACK) for downlink high speed data channels (HS-DCH). It is used in HSDPA signal setup. The data rate is fixed to 15ksps. The code allocation depends on the number of active DPCH and is described in the table below. This control channel is displayed in the upper part of the channel table. The HS-DPCCH can be switched on or off after the duration of 1/5 frame or 3 slots or 2ms. Power control is applicable too.
EDPCCH	The Enhanced Dedicated Physical Control Channel is used to carry control information for uplink high speed data channels (EDPDCH). It is used in HSUPA signal setup. The data rate is fixed to 15ksps. This control channel is displayed in the upper part of the channel table.
EDPDCH	The Enhanced Dedicated Physical Data Channel is used to carry UPLINK data for high speed channels (EDPDCH). It is used in HSUPA signal setup. The data rate and code allocation depends on the number of DPDCH and HS-DPCCH (refer to table below). This data channel is displayed in the lower part of the channel table.

The following parameters of these channels are determined by the CDP measurement:

Channel Type	Type of channel (active channels only)
Symbol Rate	Symbol rate at which the channel is transmitted
Channel Number	Number of channel spreading code (0 to [spreading factor-1])

Use TFCI	
Timing Offset	
Pilot Bits	Number of pilot bits of the channel (only valid for the control channel DPCCH)
CDP Relative	
Status	
Conflict	

4.4.3.3 Detector Overview

The measurement detector for the individual display modes can be selected directly by the user or set automatically by the analyzer. The detector activated for the specific trace is indicated in the corresponding trace display field by an abbreviation.

The detectors of the analyzer are implemented as pure digital devices. They collect signal power data within each measured point during a sweep. The default number of sweep points is 691. The following detectors are available:

Table 4-5: Detector types

Detector	Indicator	Function
Auto Peak	Ap	Determines the maximum and the minimum value within a measurement point (not available for SEM)
Positive Peak	Pk	Determines the maximum value within a measurement point
Negative Peak (min peak)	Mi	Determines the minimum value within a measurement point
RMS	Rm	Determines the root mean square power within a measurement point
Average	Av	Determines the linear average power within a measurement point
Sample	Sa	Selects the last value within a measurement point

The result obtained from the selected detector within a measurement point is displayed as the power value at this measurement point.

All detectors work in parallel in the background, which means that the measurement speed is independent of the detector combination used for different traces.



Number of measured values

During a frequency sweep, the analyzer increments the first local oscillator in steps that are smaller than approximately 1/10 of the bandwidth. This ensures that the oscillator step speed is conform to the hardware settling times and does not affect the precision of the measured power.

The number of measured values taken during a sweep is independent of the number of oscillator steps. It is always selected as a multiple or a fraction of 691 (= default number of trace points displayed on the screen). Choosing less than 691 measured values (e.g. 125 or 251) will lead to an interpolated measurement curve, choosing more than 691 points (e.g. 1001, 2001 ...) will result in several measured values being overlaid at the same frequency position.



RMS detector and VBW

If the RMS detector is selected, the video bandwidth in the hardware is bypassed. Thus, duplicate trace averaging with small VBWs and RMS detector no longer occurs. However, the VBW is still considered when calculating the sweep time. This leads to a longer sweep time for small VBW values. Thus, you can reduce the VBW value to achieve more stable trace curves even when using an RMS detector. Normally, if the RMS detector is used the sweep time should be increased to get more stable trace curves.

4.4.3.4 Trace Mode Overview

The traces can be activated individually for a measurement or frozen after completion of a measurement. Traces that are not activated are hidden. Each time the trace mode is changed, the selected trace memory is cleared.

The analyzer offers 6 different trace modes:

Clear Write

Overwrite mode: the trace is overwritten by each sweep. This is the default setting.

All available detectors can be selected.

SCPI command:

`DISP:TRAC:MODE WRIT`, see `DISPlay[:WINDow<n>]:TRACe<t>:MODE`

on page 195

Max Hold

The maximum value is determined over several sweeps and displayed. The analyzer saves the sweep result in the trace memory only if the new value is greater than the previous one.

The detector is automatically set to "Positive Peak".

This mode is especially useful with modulated or pulsed signals. The signal spectrum is filled up upon each sweep until all signal components are detected in a kind of envelope.

This mode is not available for statistics measurements.

SCPI command:

DISP:TRAC:MODE MAXH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 195

Min Hold

The minimum value is determined from several measurements and displayed. The analyzer saves for each sweep the smallest of the previously stored/currently measured values in the trace memory.

The detector is automatically set to "Negative Peak".

This mode is useful e.g. for making an unmodulated carrier in a composite signal visible. Noise, interference signals or modulated signals are suppressed whereas a CW signal is recognized by its constant level.

This mode is not available for statistics measurements.

SCPI command:

DISP:TRAC:MODE MINH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 195

Average

The average is formed over several sweeps. The [Sweep Count](#) determines the number of averaging procedures.

All available detectors can be selected. If the detector is automatically selected, the sample detector is used (see [chapter 4.4.3.3, "Detector Overview"](#), on page 28).


This mode is not available for statistics measurements.

SCPI command:

DISP:TRAC:MODE AVER, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 195

View

The current contents of the trace memory are frozen and displayed.

Note: If a trace is frozen, the instrument settings, apart from level range and reference level (see below), can be changed without impact on the displayed trace. The fact that the displayed trace no longer matches the current instrument setting is indicated by the  icon on the tab label.

If the level range or reference level is changed, the analyzer automatically adapts the measured data to the changed display range. This allows an amplitude zoom to be made after the measurement in order to show details of the trace.

SCPI command:

DISP:TRAC:MODE VIEW, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 195

Blank

Hides the selected trace.

SCPI command:

DISP:TRAC OFF, see [DISPlay\[:WINDow<n>\]:TRACe<t>\[:STATe\]](#) on page 196

4.4.3.5 Selecting the Appropriate Filter Type

All resolution bandwidths are realized with digital filters.

The video filters are responsible for smoothing the displayed trace. Using video bandwidths that are small compared to the resolution bandwidth, only the signal average is displayed and noise peaks and pulsed signals are repressed. If pulsed signals are to be measured, it is advisable to use a video bandwidth that is large compared to the resolution bandwidth ($VBW * 10 \times RBW$) for the amplitudes of pulses to be measured correctly.

The following filter types are available:

- Normal (3dB) (Gaussian) filters
The Gaussian filters are set by default. The available bandwidths are specified in the data sheet.
- Channel filters
For details see [chapter 4.4.3.6, "List of Available RRC and Channel Filters"](#), on page 31 .
Channel filters do not support FFT mode.
- RRC filters
For details see [chapter 4.4.3.6, "List of Available RRC and Channel Filters"](#), on page 31 .
RRC filters do not support FFT mode.
- 5-Pole filters
The available bandwidths are specified in the data sheet.
5-Pole filters do not support FFT mode.

4.4.3.6 List of Available RRC and Channel Filters

For power measurement a number of especially steep-edged channel filters are available (see the following table). The indicated filter bandwidth is the 3 dB bandwidth. For RRC filters, the fixed roll-off factor (α) is also indicated.

Table 4-6: Filter types

Filter Bandwidth	Filter Type	Application
100 Hz	CFILter	
200 Hz	CFILter	A0
300 Hz	CFILter	
500 Hz	CFILter	
1 kHz	CFILter	
1.5 kHz	CFILter	
2 kHz	CFILter	
2.4 kHz	CFILter	SSB
2.7 kHz	CFILter	

Filter Bandwidth	Filter Type	Application
3 kHz	CFILter	
3.4 kHz	CFILter	
4 kHz	CFILter	DAB, Satellite
4.5 kHz	CFILter	
5 kHz	CFILter	
6 kHz	CFILter	
6 kHz, $\alpha=0.2$	RRC	APCO
8.5 kHz	CFILter	ETS300 113 (12.5 kHz channels)
9 kHz	CFILter	AM Radio
10 kHz	CFILter	
12.5 kHz	CFILter	CDMAone
14 kHz	CFILter	ETS300 113 (20 kHz channels)
15 kHz	CFILter	
16 kHz	CFILter	ETS300 113 (25 kHz channels)
18 kHz, $\alpha=0.35$	RRC	TETRA
20 kHz	CFILter	
21 kHz	CFILter	PDC
24.3 kHz, $\alpha=0.35$	RRC	IS 136
25 kHz	CFILter	
30 kHz	CFILter	CDPD, CDMAone
50 kHz	CFILter	
100 kHz	CFILter	
150 kHz	CFILter	FM Radio
192 kHz	CFILter	PHS
200 kHz	CFILter	
300 kHz	CFILter	
500 kHz	CFILter	J.83 (8-VSB DVB, USA)
1 MHz	CFILter	CDMAone
1.228 MHz	CFILter	CDMAone
1.28 MHz, $\alpha=0.22$	RRC	

Filter Bandwidth	Filter Type	Application
1.5 MHz	CFILter	DAB
2 MHz	CFILter	
3 MHz	CFILter	
3.75 MHz	CFILter	
3.84 MHz, $\alpha=0.22$	RRC	W-CDMA 3GPP
4.096 MHz, $\alpha=0.22$	RRC	W-CDMA NTT DOCoMo
5 MHz	CFILter	
20 MHz	CFILter	
28 MHz	CFILter	
40 MHz	CFILter	

4.4.3.7 ASCII File Export Format

The data of the file header consist of three columns, each separated by a semicolon: parameter name; numeric value; basic unit. The data section starts with the keyword "Trace <n>" (<n> = number of stored trace), followed by the measured data in one or several columns (depending on measurement) which are also separated by a semicolon.

File contents: header and data section	Description
Type;FSVR;	
Version;1.45;	
Date;01.Apr 2010;	Date of data set storage
Screen;A;	Instrument mode
Points per Symbol;4;	Points per symbol
x Axis Start;-13;sym;	Start value of the x axis
x Axis Stop;135;sym;	Stop value of the x axis
Ref value y axis;-10.00;dBm;	Y axis reference value
Ref value position;100;%;	Y axis reference position
Trace;1;	Trace number
Meas;Result;	Result type
Meas Signal;Magnitude;	Result display
Demodulator;Offset QPSK;	Demodulation type
ResultMode;Trace;	Result mode
x unit;sym;	Unit of the x axis
y unit;dBm;	Unit of the y axis
Trace Mode;Clear Write;	Trace mode

File contents: header and data section	Description
Values;592;	Number of results
<values>	List of results

4.5 Configuration of 3GPP FDD UE Measurements

The R&S FSV-K73 option appears in the "Select Mode" menu (MODE key) as "3GPP FDD UE". This softkey can be used to start the R&S FSV-K73 options.

The most important parameters for the 3GPP FDD UE user equipment tests are summarized in the root menu of the R&S FSV-K73 option and explained below using the softkey functions. The root menu is available by pressing the "3GPP FDD UE" softkey in the "Select Mode" menu, the MEAS key or the HOME key.

The Code Domain Analyzer softkey activates the code domain analyzer measurement mode and opens the submenus for setting the measurement.

The "Power", "Ch Power ACLR", "Spectrum Emission Mask", "Occupied Bandwidth", "CCDF" and "RF Combi" softkeys activate tests in the analyzer mode. Pressing the associated softkey performs the settings required by 3GPP specifications. A subsequent modification of settings is possible.

It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

chapter 4.5.1, "Code Domain Analyzer Measurements (K73)", on page 35	Activates the code domain measurement mode and opens another submenu for selecting and configuring the parameters. All other menus of the analyzer are adapted to the functions of the code domain measurement mode.
chapter 4.5.2.1, "Output Power Measurements", on page 76	Activates the channel power measurement with defined settings in the analyzer mode.
chapter 4.5.2.3, "Adjacent Channel Power (ACLR)", on page 77	Activates the adjacent-channel power measurement with defined settings in the analyzer mode.
chapter 4.5.2.2, "Spectrum Emission Mask", on page 77	Compares the signal power in different carrier offset ranges with the maximum values specified by 3GPP.
chapter 4.5.2.4, "Occupied Bandwidth", on page 78	Activates the measurement of the occupied bandwidth (analyzer mode).
chapter 4.5.2.5, "CCDF", on page 79	Evaluates the signal with regard to its statistical characteristics (distribution function of the signal amplitudes).

4.5.1	Code Domain Analyzer Measurements (K73).....	35
4.5.1.1	Display Concept.....	35
4.5.1.2	Softkeys of the Code Domain Analyzer Menu (R&S FSV-K73).....	38

4.5.1.3	Measurement Modes in Code Domain Analyzer.....	50
4.5.1.4	Softkeys of the Frequency Menu – FREQ key (R&S FSV-K73).....	60
4.5.1.5	Softkeys of the Amplitude Menu – AMPT key (R&S FSV-K73).....	60
4.5.1.6	Softkeys of the Sweep Menu – SWEEP key (R&S FSV-K73).....	63
4.5.1.7	Softkeys of the Trigger Menu – TRIG key (R&S FSV-K73).....	65
4.5.1.8	Softkeys of the Trace Menu – TRACE key (R&S FSV-K73).....	66
4.5.1.9	Softkeys of the Marker Menu – MKR key (R&S FSV-K73).....	67
4.5.1.10	Softkeys of the Marker To Menu – MKR-> key (R&S FSV-K73).....	69
4.5.1.11	Softkeys of the Auto Set Menu – AUTO SET Key (R&S FSV-K73).....	71
4.5.1.12	Softkeys of the Input/Output Menu for CDA Measurements.....	72
4.5.2	RF Measurements.....	76
4.5.2.1	Output Power Measurements.....	76
4.5.2.2	Spectrum Emission Mask.....	77
4.5.2.3	Adjacent Channel Power (ACLR).....	77
4.5.2.4	Occupied Bandwidth.....	78
4.5.2.5	CCDF.....	79
4.5.2.6	Softkeys and Menus for RF Measurements (K73).....	80

4.5.1 Code Domain Analyzer Measurements (K73)

The Code Domain Analyzer softkey activates the code domain analyzer measurement mode and opens the submenu to set the measurement.

Refer to [chapter 4.5.1, "Code Domain Analyzer Measurements \(K73\)"](#), on page 35 for an introduction to the code domain analyzer settings.

For a brief introduction to the display concept of the code domain analyzer measurements refer to [chapter 4.5.1.1, "Display Concept"](#), on page 35.

4.5.1.1 Display Concept

Measurement results

The code domain analyzer can show up to four result diagrams in four different screens (windows) at one time. For each screen, you can define which type of result diagram is to be displayed, or deactivate the screen temporarily. The current configuration of the display, i.e. which screens are displayed and which result diagram is displayed in which screen, can be stored and retrieved later. Thus, you can easily switch between predefined display configurations.

All results are calculated from the same dataset of the recorded signal. Thus, it is not necessary to restart the measurement in order to switch the display mode.

Spectrum Analyzer		3G FDD UE	
Ref Level	-10.00 dBm	Freq	413.223738645 MHz
Att	10 dB	Channel	0.256 I
		Slot	0
		Power	Relative
		Capture	Frame
SGL			
Global Result (Frame 0 , Slot 0) ● 1 AvgLin			
Total Power	0.00 dBm	Carrier Freq Error	0.00 Hz
Chip Rate Error	0.00 ppm	Trigger To Frame	0.000000 s
IQ Offs / Imbalance	0.00 / 0.00 %	Avg Power Inact Chan	0.00 dB
Composite EVM / Rho	0.00 % / 0.00000	Pk CDE (15 kSymb/s)	0.00 dB
Rho	0.00000	Avg. RCDE (4PAM)	---
Channel Results (Ch 0.256)			
Symbol Rate	0 Symb/s	Timing Offset	0 Chips
No of Pilot Bits	0	Channel Mapping	
Channel Power Rel	0.00 dB	Channel Power Abs	0.00 dBm
Symbol EVM	0.00 % rms	Symbol EVM	0.00 % PK
Modulation Type	none	RCDE	0.00 dB
Global Result (Frame 0 , Slot 0) ● 1 Clrw			
Total Power	0.00 dBm	Carrier Freq Error	0.00 Hz
Chip Rate Error	0.00 ppm	Trigger To Frame	0.000000 s
IQ Offs / Imbalance	0.00 / 0.00 %	Avg Power Inact Chan	0.00 dB
Composite EVM / Rho	0.00 % / 0.00000	Pk CDE (15 kSymb/s)	0.00 dB
Rho	0.00000	Avg. RCDE (4PAM)	---
Channel Results (Ch 0.256)			
Symbol Rate	0 Symb/s	Timing Offset	0 Chips
No of Pilot Bits	0	Channel Mapping	
Channel Power Rel	0.00 dB	Channel Power Abs	0.00 dBm
Symbol EVM	0.00 % rms	Symbol EVM	0.00 % PK
Modulation Type	none	RCDE	0.00 dB

The available measurement types and result diagrams are described in [chapter 4.5.1.3, "Measurement Modes in Code Domain Analyzer"](#), on page 50 .

For more information on the display configuration, see the description of the ["Display Config"](#) on page 49 softkey.

Measurement settings

The most important measurement settings are displayed in the diagram header. For Code Domain Analyzer measurements, the following settings are shown:

Label	Description
Ref level	Reference level defined in "Ref Level" on page 40
Att	Attenuation
Freq	Center frequency defined in "Center" on page 40
Channel	Channel with spreading factor and mapping
Slot	Slot
Power	"Code Power Display" defined in "Demod Settings" on page 47
Capture	Analysis Mode (Slot, Frame) defined in "IQ Capture Settings" on page 41



Overview of all measurement settings

You can easily display an overview of all measurement settings using the "Settings Overview" on page 39 softkey.

In addition to the information in the diagram header, each screen title contains diagram-specific trace information.

Screen focus

One of the screens has a blue frame indicating the focus. The screen focus can be changed just like in the base system. The settings for trace statistics and markers can only be changed for the focussed screen. Furthermore, the focussed screen can be set to full screen (for details see the analyzer Quick Start Guide).

Defining the display configuration

1. Select the "Display Config" softkey in the "Code Domain Analyzer" menu.
2. Select the tab for the screen you want to configure (A-D).
3. Select the "Screen X active" option to display the selected screen.
Tip: SCPI command: `DISPlay[:WINDow<n>]:STATe` on page 195
4. Select the required result diagram to be displayed in the selected screen.
Tip: SCPI command: `CALCulate<n>:FEED` on page 105
5. Press "Close".

To select a predefined display configuration

You can retrieve previously stored display configurations, and thus easily switch between different displays of measurement results.

1. Select the "Predefined" tab in the "Display Configuration" dialog box.
The previously stored and default configurations are listed. The current configuration is displayed at the top of the dialog box.
2. Select the required set of screen configurations.
3. Press "Apply".

To store the current display configuration

You can store the current display configuration in the list of predefined settings in order to switch back to it later.

1. Select the current display configuration at the top of the "Display Configuration" dialog box.
2. Click "Add".

The current display configuration is added to the list of predefined settings.

To remove a predefined display configuration

You can remove one of the stored display configurations.

1. Select the display configuration to be removed from the "Predefined" tab of the "Display Configuration" dialog box.
2. Click "Remove".

The selected display configuration is removed from the list of predefined settings.

To restore the default display configurations

You can restore the default set of predefined display configurations.

- ▶ In the "Predefined" tab of the "Display Configuration" dialog box, click "Restore".

4.5.1.2 Softkeys of the Code Domain Analyzer Menu (R&S FSV-K73)

The Code Domain Analyzer softkey opens the "Code Domain Analyzer" submenu.


Settings Overview.....	39
Frontend Settings.....	40
L Center.....	40
L Frequency Offset.....	40
L Ref Level.....	40
L Ref Level Offset.....	41
L Preamp On/Off (option RF Preamplifier, B22/B24).....	41
L Adjust Ref Lvl.....	41
IQ Capture Settings.....	41
L Invert Q.....	42
L RRC Filter.....	42
L Analysis Mode.....	42
L Frame To Analyze.....	42
L Capture Length.....	43
L Trigger Source External.....	43
L Trigger Source Free Run.....	43
L Trg/Gate Polarity.....	43
L Trigger Offset.....	43
Sync/Scrambling Settings.....	44
L Scrambling Code.....	44
L Format.....	44
L Type.....	44
Channel Detection Settings.....	44
L HS-DPA/UPA.....	45
L Channel Search Mode.....	45
L Predefined Tables.....	45
L New.....	45
L Meas.....	46
L Copy.....	47
L Edit.....	47
L Delete.....	47
Demod Settings.....	47

- L Code Power Displ.....48
- L Normalize.....48
- L Meas Interval.....48
- L Eliminate Tail Chips.....48
- Display Config.....49
- Select Channel.....49
 - L Select Channel.....49
 - L Select Slot.....50
- Select Branch.....50

Settings Overview

The "Settings Overview" softkey opens the "Settings Overview" dialog box that visualizes the data flow of the Code Domain Analyzer and summarizes the current settings. In addition, the current settings can be changed via the "Settings Overview" dialog box.

To change the settings, either use the rotary knob or the cursor keys to change the focus to another button, and press the ENTER key to open the corresponding dialog box. To open the dialog boxes displayed in the "Settings Overview" dialog box, you can also press the particular softkey in the "Code Domain Analyzer" submenu.

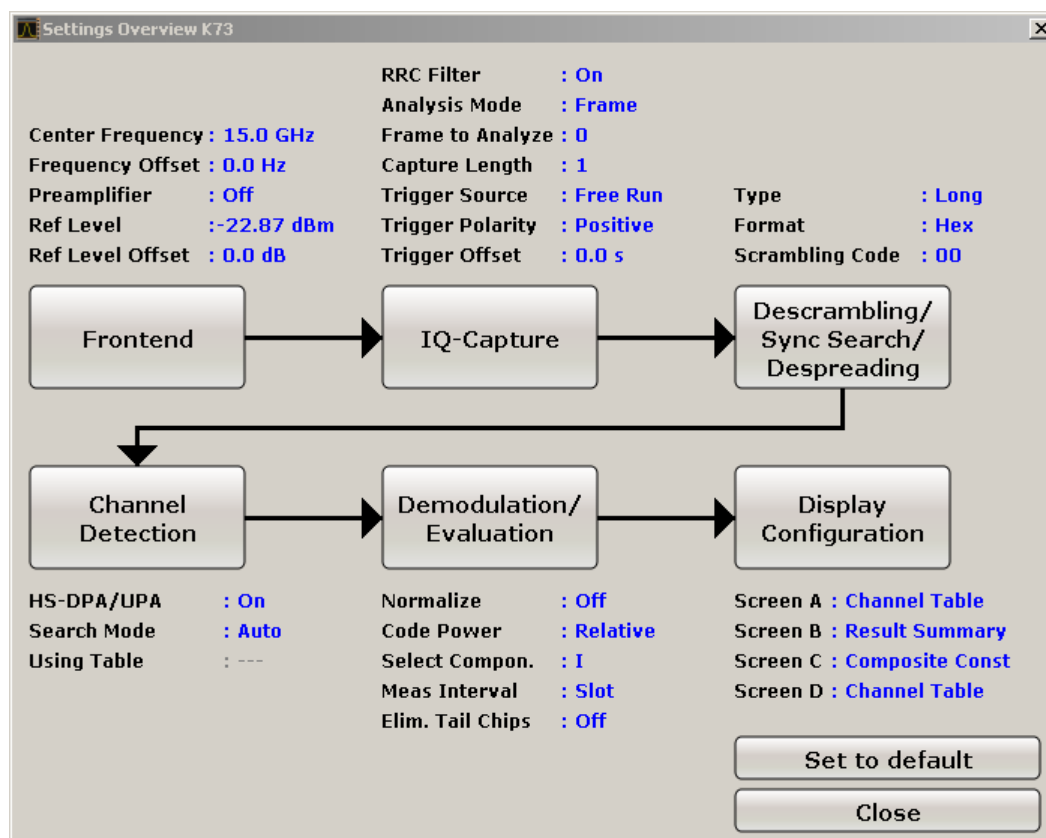

Setting	Refer to
Frontend	"Frontend Settings" on page 40
IQ-Capture	"IQ Capture Settings" on page 41
Descrambling/Sync Search/Despreading	"Sync/Scrambling Settings" on page 44

Setting	Refer to
Channel Detection	"Channel Detection Settings" on page 44
Demodulation/Evaluation	"Demod Settings" on page 47
Display Configuration	chapter 4.5.1.1, "Display Concept", on page 35

Frontend Settings

This softkey opens the "Frontend Settings" dialog box to modify the following parameters:

Center ← Frontend Settings

Opens an edit dialog box to enter the center frequency. The allowed range of values for the center frequency depends on the frequency span.

span > 0: $\text{span}_{\min}/2 \leq f_{\text{center}} \leq f_{\max} - \text{span}_{\min}/2$

span = 0: $0 \text{ Hz} \leq f_{\text{center}} \leq f_{\max}$

f_{\max} and span_{\min} are specified in the data sheet.

SCPI command:

[SENSe:] FREQuency: CENTer on page 177

Frequency Offset ← Frontend Settings

Opens an edit dialog box to enter a frequency offset that shifts the displayed frequency range by the specified offset. The softkey indicates the current setting. The allowed values range from -100 GHz to 100 GHz. The default setting is 0 Hz.

SCPI command:

[SENSe:] FREQuency: OFFSet on page 179

Ref Level ← Frontend Settings

Opens an edit dialog box to enter the reference level in the currently active unit (dBm, dBμV, etc).

The reference level value is the maximum value the AD converter can handle without distortion of the measured value. Signal levels above this value will not be measured correctly, which is indicated by the "IFOVL" status display.

SCPI command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel` on page 197

Ref Level Offset ← Frontend Settings

Opens an edit dialog box to enter the arithmetic level offset. This offset is added to the measured level irrespective of the selected unit. The scaling of the y-axis is changed accordingly. The setting range is ± 200 dB in 0.1 dB steps.

SCPI command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet` on page 197

Preamp On/Off (option RF Preamplifier, B22/B24) ← Frontend Settings

Switches the preamplifier on or off.

If option R&S FSV-B22 is installed, the preamplifier is only active below 7 GHz.

If option R&S FSV-B24 is installed, the preamplifier is active for all frequencies.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

`INPut:GAIN:STATe` on page 206

Adjust Ref Lvl ← Frontend Settings


Defines the optimal reference level for the current measurement automatically.

SCPI command:

`[SENSe:]ADJust:LEVel` on page 172

IQ Capture Settings

Opens the "IQ Capture Settings" dialog box.

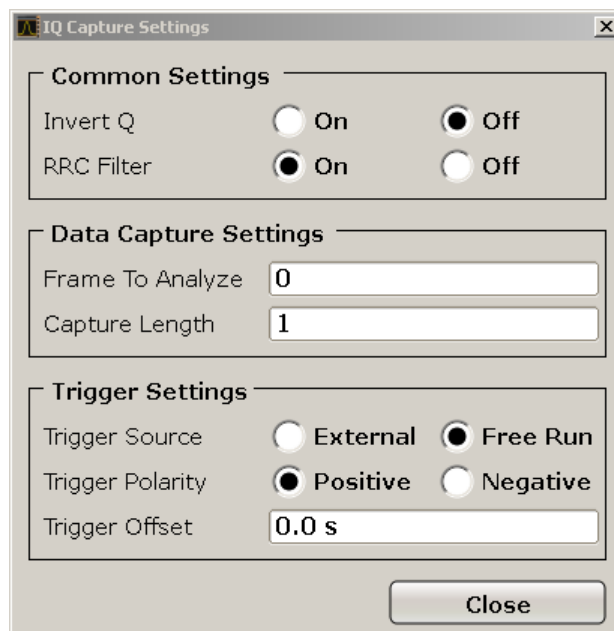

Invert Q ← IQ Capture Settings

Inverts the sign of the signal's Q-component. The default setting is OFF.

SCPI command:

[\[SENSe:\]CDPower:QINVert](#) on page 165

RRC Filter ← IQ Capture Settings

Selects if a root raised cosine (RRC) receiver filter is used or not. This feature is useful if the RRC filter is implemented in the device under test (DUT).

- | | |
|-------|---|
| "ON" | If an unfiltered WCDMA signal is received (normal case), the RRC filter should be used to get a correct signal demodulation. (Default settings) |
| "OFF" | If a filtered WCDMA signal is received, the RRC filter should not be used to get a correct signal demodulation. This is the case if the DUT filters the signal. |

SCPI command:

[\[SENSe:\]CDPower:FILTer\[:STATe\]](#) on page 160

Analysis Mode ← IQ Capture Settings

Select a result length of one slot or one complete frame.

SCPI command:

[\[SENSe:\]CDPower:FILTer\[:STATe\]](#) on page 160

Frame To Analyze ← IQ Capture Settings

Enter the Frame to analyze and to be displayed.

SCPI command:

[\[SENSe:\]CDPower:FRAMe\[:LVALue\]](#) on page 160

Capture Length ← IQ Capture Settings

Enter the capture length (amount of IQ data to record).

SCPI command:

[SENSe:]CDPower:IQLength on page 161

Trigger Source External ← IQ Capture Settings

Defines triggering via a TTL signal at the "EXT TRIG/GATE IN" input connector on the rear panel.

An edit dialog box is displayed to define the external trigger level.

SCPI command:

TRIG:SOUR EXT, see TRIGger<n>[:SEQuence]:SOURce on page 209

Trigger Source Free Run ← IQ Capture Settings

The start of a sweep is not triggered. Once a measurement is completed, another is started immediately.

SCPI command:

TRIG:SOUR IMM, see TRIGger<n>[:SEQuence]:SOURce on page 209

Trg/Gate Polarity ← IQ Capture Settings

Sets the polarity of the trigger/gate source.

The sweep starts after a positive or negative edge of the trigger signal. The default setting is "Pos". The setting applies to all trigger modes with the exception of the "Free Run", "Power Sensor" and "Time" mode.

For details also see "Using Gated Sweep Operation" in the base unit description.

"Pos" Level triggering: the sweep is stopped by the logic "0" signal and restarted by the logical "1" signal after the gate delay time has elapsed.

"Neg" Edge triggering: the sweep is continued on a "0" to "1" transition for the gate length duration after the gate delay time has elapsed.

SCPI command:

TRIGger<n>[:SEQuence]:SLOPe on page 209

Trigger Offset ← IQ Capture Settings

Opens an edit dialog box to enter the time offset between the trigger signal and the start of the sweep.

offset > 0:	Start of the sweep is delayed
offset < 0:	<p>Sweep starts earlier (pre-trigger)</p> <p>Only possible for span = 0 (e.g. I/Q Analyzer mode) and gated trigger switched off</p> <p>Maximum allowed range limited by the sweep time: pretrigger_{max} = sweep time</p> <p>When using the R&S Digital I/Q Interface (R&S FSV-B17) with I/Q Analyzer mode, the maximum range is limited by the number of pretrigger samples.</p> <p>See the R&S Digital I/Q Interface(R&S FSV-B17) description in the base unit.</p>


In the "External" or "IF Power" trigger mode, a common input signal is used for both trigger and gate. Therefore, changes to the gate delay will affect the trigger delay (trigger offset) as well.

SCPI command:

[TRIGger<n>\[:SEquence\]:HOLDoff\[:TIME\]](#) on page 208

Sync/Scrambling Settings

Opens the "Descrambling/Sync Search Settings" dialog box.

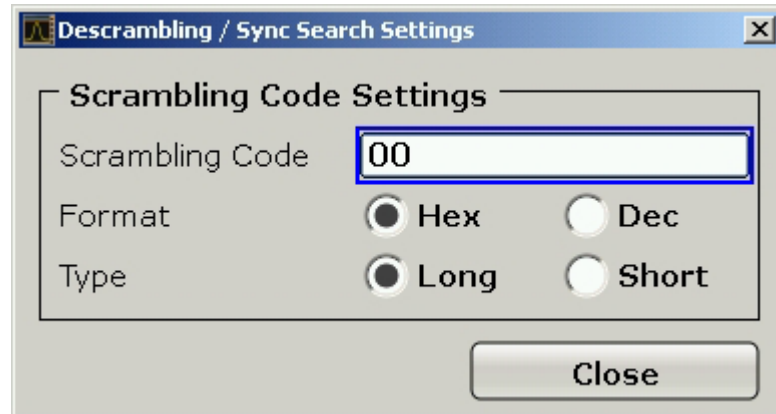

Scrambling Code ← Sync/Scrambling Settings

Define the scrambling code in the specified format.

The entered scrambling code has to be identical to that of the signal. Otherwise a CDP measurement of the signal is not possible.

SCPI command:

[\[SENSe:\]CDPower:LCODE\[:VALue\]](#) on page 163

Format ← Sync/Scrambling Settings

Switches the display format of the scrambling codes between hexadecimal and decimal.

SCPI command:

[SENS:CDP:LCOD:DVAL <numeric value>](#) (see [\[SENSe:\]CDPower:LCODE\[:VALue\]](#) on page 163)

Type ← Sync/Scrambling Settings


Select whether the entered scrambling code is to be handled as long or short scrambling code.

SCPI command:

[\[SENSe:\]CDPower:LCODE:TYPE](#) on page 162

Channel Detection Settings

Opens the "Channel Detection Settings" dialog box.

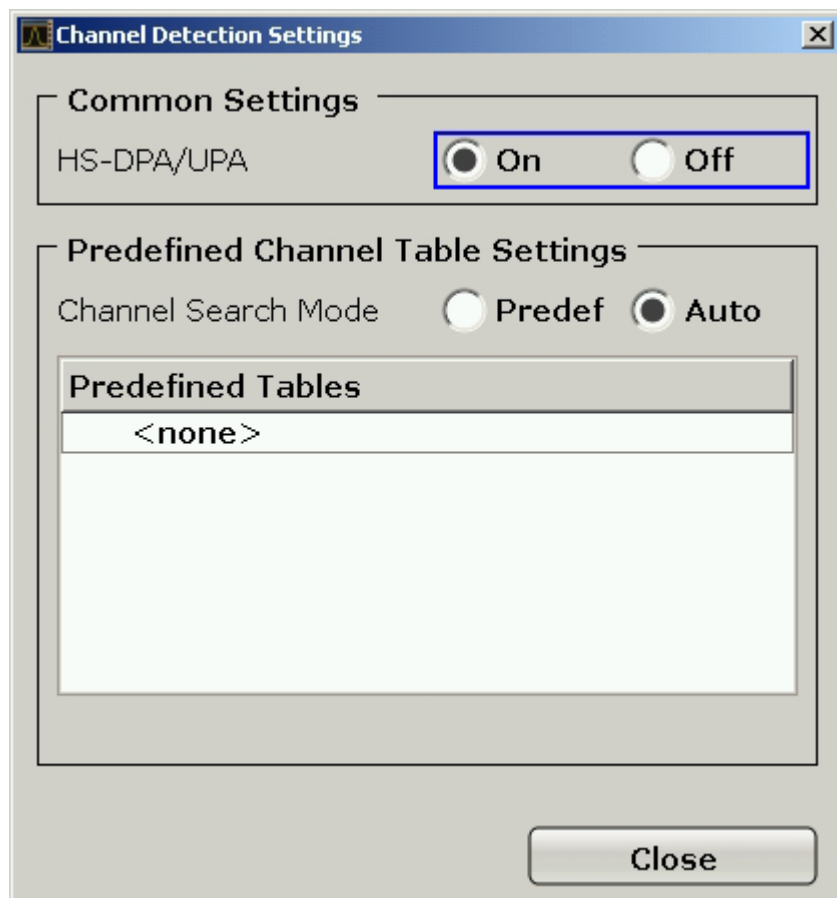

HS-DPA/UPA ← Channel Detection Settings

If this option is selected, it enables the application to detect HSUPA/DPA-channels and shows them in the channel table.

SCPI command:

[\[SENSe:\]CDPower:HSDPamode](#) on page 160

Channel Search Mode ← Channel Detection Settings

Select the channel search mode. Either select "Predef" to use predefined tables or "Auto" for automatic detection of the channels.

SCPI command:

[CONFigure:WCDPower:MS:CTABLE\[:STATe\]](#) on page 153

[CONFigure:WCDPower:MS:CTABLE:SElect](#) on page 154

Predefined Tables ← Channel Detection Settings

The list shows all available channel tables and marks the current active table or the table to edit.

SCPI command:

[CONFigure:WCDPower:MS:CTABLE:CATalog](#) on page 156

New ← Channel Detection Settings

Opens the "New Channel Table" dialog box to define new channel table settings.

Channel Table Settings

Name

Description

Channel Type	Symbol Rate	Channel Number	Use TFCI	Timing Offset	Pilot Bits	CDP Relative	State	Conflict
CPICH	---	0	---	---	---	0.000	On	
PCCPCH	15	1	---	---	---	0.000	On	

Save Cancel

Enter "Name" and "Description" for the new channel table and define the settings in the table below.

Channel Type	Type of channel (active channels only)
Symbol Rate	Symbol rate at which the channel is transmitted
Channel Number	Number of channel spreading code (0 to [spreading factor-1])
Mapping	Component onto which the channel is mapped (I or Q). The entry is not editable, since the standard specifies the channel assignment for each channel.
Pilot Bits	Number of pilot bits of the channel (only valid for the control channel DPCCH)
CDP Relative	Channel relative (referred to the total power of the signal)
Status	Status display. Codes that are not assigned are marked as inactive channels.

Meas ← New ← Channel Detection Settings

Creates a new channel table with the settings from the current measurement data.

New Channel Table

Channel Table Settings

Name: RECENT

Description: Measurement data

Channel Type	Symbol Rate	Channel Number	Mapping	Pilot Bits	CDP Relative	State
DPCCH	15	0	Q	8	0.000	Off
HS-DPCCH	15	64	Q	---	0.000	Off
EDPCCH	15	1	I	---	0.000	Off
DPDCH	15	64	I	---	0.000	Off
DPDCH	960	1	Q	---	0.000	Off
DPDCH	960	3	I	---	0.000	Off
DPDCH	960	3	Q	---	0.000	Off
DPDCH	960	2	I	---	0.000	Off
DPDCH	960	2	Q	---	0.000	Off
EDPDCH	1920	1	I	---	0.000	Off
EDPDCH	1920	1	Q	---	0.000	Off
EDPDCH	960	1	I	---	0.000	Off
EDPDCH	960	1	Q	---	0.000	Off

Save Cancel

Copy ← Channel Detection Settings

Opens the "Copy Channel Table" dialog box to copy the currently displayed channel table. Enter a name for the new table, edit the settings as described for a new table (see "New" on page 45) and select "Save".

Edit ← Channel Detection Settings


Opens the "Edit Channel Table" dialog box to edit the currently displayed channel table. Edit the settings as described for a new table (see "New" on page 45) and select "Save".

Delete ← Channel Detection Settings

Deletes the currently displayed channel table after a message is confirmed.

Demod Settings

Opens the "Demodulation Settings" dialog box.

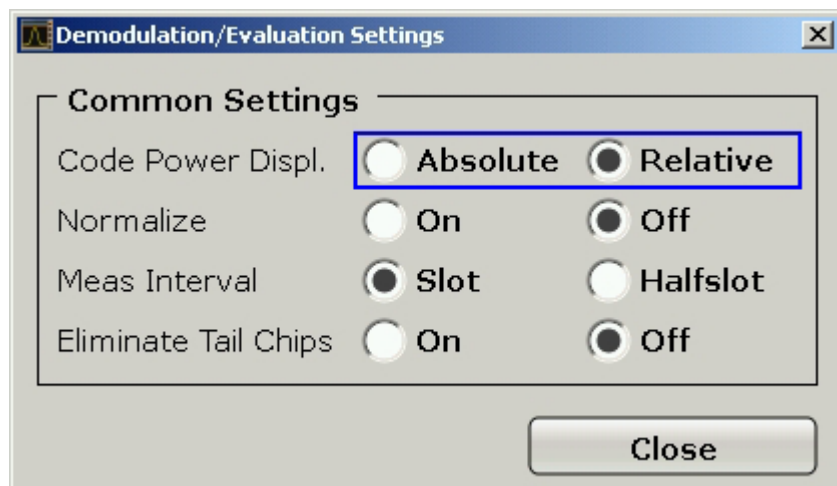

Code Power Displ ← Demod Settings

Switches between showing the absolute power or the power relative to the chosen reference.

This parameter only affects the display mode "Code Domain Power"

SCPI command:

[\[SENSe:\]CDPower:PDIsplay](#) on page 164

Normalize ← Demod Settings

Changes the elimination of the DC-offset. If the radio button On is selected, the DC-offset is eliminated. Otherwise the DC-Offset is not eliminated.

SCPI command:

[\[SENSe:\]CDPower:NORMalize](#) on page 164

Meas Interval ← Demod Settings

Switches between the analysis of an half slot or a full slot.

Both measurement intervals are influenced by the settings of [Eliminate Tail Chips](#): If "Eliminate Tail Chips" is set to On, 96 chips at both ends of the measurement interval are not taken into account for analysis.

"Slot" The length of each analysis interval is 2560 chips, corresponding to one time slot of the 3GPP signal. The time reference for the start of slot 0 is the start of a 3GPP radio frame.

"Halfslot" The length of each analysis interval is reduced to 1280 chips, corresponding to half of one time slot of the 3GPP signal.

SCPI command:

[\[SENSe:\]CDPower:HSLot](#) on page 161

Eliminate Tail Chips ← Demod Settings

Selects the length of the measurement interval for calculation of error vector magnitude (EVM). In accordance with 3GPP specification Release 5, the EVM measurement interval is one slot (4096 chips) minus 25_μs at each end of the burst (3904 chips) if power changes are expected. If no power changes are expected, the evaluation length is one slot (4096 chips).

- "On" Changes of power are expected. Therefore an EVM measurement interval of one slot minus 25 μ s (3904 chips) is considered.
- "Off" Changes of power are not expected. Therefore an EVM measurement interval of one slot (4096 chips) is considered. (Default settings)

SCPI command:

[SENSe:]CDPower:ETChips on page 159

Display Config

Opens the "Display Configuration" dialog box in which you can define how the measurement results are displayed.

The code domain analyzer can show up to four result diagrams in four different screens (windows) at one time. For each screen, you can define which type of result diagram is to be displayed, or deactivate the screen temporarily.


All results are calculated from the same dataset of the recorded signal. Thus, it is not necessary to restart the measurement in order to switch the display mode.

The display modes and measurements specified by the 3GPP standard and available in Code Domain Analyzer mode are described in [chapter 4.5.1.3, "Measurement Modes in Code Domain Analyzer"](#), on page 50 .

The current configuration of the display, i.e. which screens are displayed and which result diagram is displayed in which screen, can be stored and retrieved later. Thus, you can easily switch between predefined display configurations.

Select Channel

Opens a dialog box to select a channel and a slot.

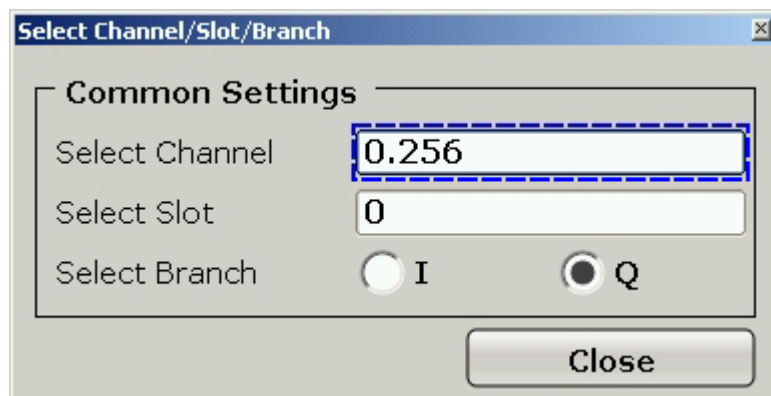

Select Channel ← Select Channel

Selects a channel for the calculation of the result diagrams "CDP PWR RELATIVE/ ABSOLUTE", "POWER VS SLOT", "SYMBOL CONST" and "SYMBOL EVM" (see also [chapter 4.4.2, "Measurements and Result Diagrams"](#), on page 25).

There are two ways to enter the channel numbers:

- Enter a channel number and spreading factor, separated by a decimal point. If the channel number and the spreading factor are entered simultaneously, the entered channel is selected and marked in red if an active channel is involved. For the display, the channel number entered is converted on the basis of spreading factor 512. For unused channels, the code resulting from the conversion is marked.

Example: Enter 5.128

Channel 5 is marked at spreading factor 128 (30 kbps) if the channel is active, otherwise code 20 at spreading factor 512.

- Enter a channel number without a decimal point.
In this case, the instrument interprets the entered code as based on spreading factor 512. If the code entered corresponds to a used channel, the entire associated channel is marked. If the code corresponds to an unused channel, only the code entered is marked.

Example: Enter 20

Code 20 is marked at spreading factor 512 if there is no active channel on this code. If for instance channel 5 is active at spreading factor 128, the entire channel 5 is marked.

If the entered code corresponds to an active channel, the entire associated channel is marked. If it corresponds to a gap between the channels, only the entered code is marked.

If the code number is modified using the rotary knob, the red marking changes its position in the diagram only if the code number no longer belongs to the marked channel. The step width of the changed rotary knob position refers to a spreading factor of 512.

SCPI command:

[SENSe:]CDPower:CODE on page 159

Select Slot ← Select Channel

Selects the slot for evaluation. This affects the following result diagrams (see also [chapter 4.4.2, "Measurements and Result Diagrams"](#), on page 25):

- Code Domain Power
- Peak Code Domain Error
- Result Summary
- Composite Constellation
- Code Domain Error Power
- Channel Table
- Power vs Symbol
- Symbol Const
- Symbol EVM
- Bitstream

SCPI command:

[SENSe:]CDPower:SLOT on page 165

Select Branch

Switches between the evaluation of the I and the Q branch.

SCPI command:

CALCulate<n>:CDPower:Mapping on page 104

4.5.1.3 Measurement Modes in Code Domain Analyzer

The display modes in this chapter are all based on the recording of the IQ-Data. With the same dataset of the recorded signal, we can calculate the following display modes. Therefore it is not necessary to restart the measurement to switch the display mode.

The following display modes and measurements specified by the 3GPP standard are available:

Code Domain Power.....	51
Composite EVM (RMS).....	52
Peak Code Domain Error.....	52
EVM vs Chip.....	52
Mag Error vs Chip.....	53
Phase Error vs Chip.....	53
Composite Constellation.....	54
Power vs Slot.....	54
Symbol Magnitude Error.....	55
Symbol Phase Error.....	55
Result Summary.....	55
Code Domain Error Power.....	57
Channel Table.....	57
Power vs Symbol.....	58
Symbol Constellation.....	59
Symbol EVM.....	59
Bitstream.....	59
Freq Err vs Slot.....	59
Phase Discontinuity vs Slot.....	59

Code Domain Power

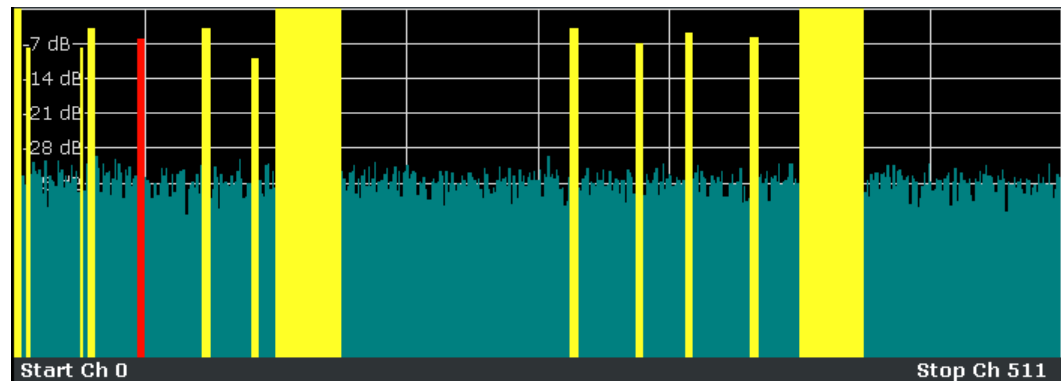


Fig. 4-1: Code Domain Power Display for R&S FSV-K73

The "Code Domain Power" display mode shows the power of the different code channels in the the adjusted slot. Due to the circumstance that the power is regulated from slot to slot, the result power may differ between different slots. Detected channels are painted yellow. The channel which is adjusted via Select Channel is marked red. The codes where no channel could be detected are painted cyan.

If some of the DPCH-channels contain incorrect pilot symbols, these channels are marked with the color green, and an "INCORRECT PILOT" message is displayed in the status bar.

If HS-DPA/UPA is set to "ON" in the "Channel Detection Settings"/"Common Settings" dialog box, channels without pilot symbols, e.g. channels of type "HS-PDSCH", are recognized as active.

SCPI command:

CALC:FEED "XPOW:CDP", see [chapter 4.6.2.2, "CALCulate:FEED subsystem"](#), on page 105

Composite EVM (RMS)

The "Composite EVM" measurement displays the error between the entire measurement signal and the ideal reference signal in present. The error is averaged over all channels for different slots. A bar diagram with EVM values versus slots is used. The Composite EVM measurement covers the entire signal during the entire observation time.

SCPI command:

CALC:FEED "XTIM:CDP:ERR:MACC", see [chapter 4.6.2.2, "CALCulate:FEED subsystem"](#), on page 105

Peak Code Domain Error

"Peak Code Domain Error" display mode determines the maximum of the code domain error values for a given slot and for all codes. This display is a bar diagram over slots. The unit is dB. The Peak Code Domain Error measurement covers the entire signal and the entire observation time.

SCPI command:

CALC:FEED "XTIM:CDP:ERR:PCD", see [chapter 4.6.2.2, "CALCulate:FEED subsystem"](#), on page 105

EVM vs Chip

For the Meas Interval "Slot" (see ["Demod Settings"](#) on page 47), the Error Vector Magnitude (EVM) is displayed for all chips of the selected slot.

For the Meas Interval "Halfslot" (see ["Demod Settings"](#) on page 47), the EVM is displayed for the chips of one half slot. The selected slot/halfslot can be varied. Possible entries are 0 to 14 for "Slot" and 0 to 29 for "Halfslot".

The EVM is calculated as the root of the squared difference between the received and reference signal. The reference signal is estimated out of the channel configurations of all active channels. The EVM is given in percent referred to the square root of the mean power of the reference signal.

$$EVM_k = \sqrt{\frac{|s_k - x_k|^2}{\frac{1}{N} \sum_{n=0}^{N-1} |x_n|^2}} \cdot 100\% \quad | \quad N = 2560 \quad | \quad k \in [0 \dots (N-1)]$$

where:

EVM_k	vector error of the chip EVM of chip number k
s_k	complex chip value of received signal
x_k	complex chip value of reference signal
k	index number of the evaluated chip

N	number of chips at each CPICH slot
n	index number for mean power calculation of reference signal

SCPI command:

CALC:FEED "XTIM:CDP:CHIP:EVM", see [chapter 4.6.2.2, "CALCulate:FEED subsystem"](#), on page 105

Mag Error vs Chip

For the Meas Interval "Slot" (see ["Demod Settings"](#) on page 47), the magnitude error is displayed for all chips of the selected slot. For the Meas Interval "Halfslot" (see ["Demod Settings"](#) on page 47), the magnitude error is displayed for the chips of one half slot. The selected slot/halfslot can be varied. Possible entries are 0 to 14 for "Slot" and 0 to 29 for "Halfslot".

The magnitude error is calculated as the difference between the magnitudes of the received and reference signal. The reference signal is estimated out of the channel configurations of all active channels. The magnitude error is given in percent referred to the square root of the mean power of the reference signal.

$$MAG_k = \frac{|s_k| - |x_k|}{\sqrt{\frac{1}{N} \sum_{n=0}^{N-1} |x_n|^2}} \cdot 100\% \quad | \quad N = 2560 \quad | \quad k \in [0 \dots (N-1)]$$

where:

MAG _k	magnitude error of chip number k
s _k	complex chip value of received signal
x _k	complex chip value of reference signal
k	index number of the evaluated chip
N	number of chips at each CPICH slot
n	index number for mean power calculation of reference signal

SCPI command:

CALC:FEED "XTIM:CDP:CHIP:MAGN", see [chapter 4.6.2.2, "CALCulate:FEED subsystem"](#), on page 105

Phase Error vs Chip

For the Meas Interval "Slot" (see ["Demod Settings"](#) on page 47), the phase error is displayed for all chips of the selected slot. For the Meas Interval "Halfslot" (see ["Demod Settings"](#) on page 47), the phase error is displayed for the chips of one half slot. The selected slot/halfslot can be varied. Possible entries are 0 to 14 for "Slot" and 0 to 29 for "Halfslot".

The phase error is calculated as the difference between the phases of the received and reference signal. The reference signal is estimated out of the channel configurations of all active channels. The magnitude error is given in grad ranging from -180° to 180°.

$$PHI_k = \varphi(s_k) - \varphi(x_k) \quad | \quad N = 2560 \quad | \quad k \in [0 \dots (N-1)]$$

where:

PHI _k	phase error of chip number k
s _k	complex chip value of received signal
x _k	complex chip value of reference signal
k	index number of the evaluated chip
N	number of chips at each CPICH slot
φ(x)	phase calculation of a complex value

SCPI command:

CALC:FEED "XTIM:CDP:CHIP:PHAS", see [chapter 4.6.2.2, "CALCulate:FEED sub-system"](#), on page 105

Composite Constellation

The "Composite Const" measurement analyzes the entire signal for one single slot. For large numbers of channels to analyze the results will superimpose. In that case the benefit of this measurement is limited (senseless).

In "Composite Const" measurement the constellation points of the 1536 Chips for the specified slot are displayed. This data is determined inside the DSP even before the channel search. I.e. it is not possible to assign constellation points to channels. The constellation points are displayed normalized with respect to the total power.

SCPI command:

CALC:FEED "XTIM:CDP:COMP:CONS", see [chapter 4.6.2.2, "CALCulate:FEED sub-system"](#), on page 105

Power vs Slot

The "Power vs Slot" display mode indicates the power of the selected code channel depending on the slot number. The power of the selected channel (marked red in the CDP diagram) is displayed versus all slots of a frame of the 3GPP FDD UE signal. The softkey is only valid if one frame of the 3GPP signal is analyzed.

Beginning at the start of the 3GPP FDD UE frame, 15 or 30 successive slots are displayed, depending on the value of the "SLOT RES" softkey. The power is shown in absolute scaling.

It is not only possible to select a code channel in the CDP diagram, but also to mark a slot in the power-versus-slot diagram. Marking is done by entering the slot number. The selected slot is marked in red. For more detailed displays, the marked slot of the channel is used (see "SLOT #" entry in the information area above the diagram).

Modifying a slot number has the following effects:

- The CDP diagram in the upper half of the display is updated referred to the entered slot number.

- All results that depend on the selected slot are recalculated for selected channel. The relevant graphics are updated.

SCPI command:

CALC:FEED "XTIM:CDP:PVSL", see [chapter 4.6.2.2, "CALCulate:FEED subsystem"](#), on page 105

Symbol Magnitude Error

The "Symbol Magnitude Error" is calculated analogous to symbol EVM. The result of calculation is one symbol magnitude error value for each symbol of the slot of a special channel. Positive values of symbol magnitude error indicate a symbol magnitude that is larger than the expected ideal value; negative symbol magnitude errors indicate a symbol magnitude that is less than the ideal one.

The symbol magnitude error is the difference of the magnitude of the received symbol and that of the reference symbol, related to the magnitude of the reference symbol.

SCPI command:

CALC:FEED "XTIM:CDP:SYMB:EVM:MAGN", see [chapter 4.6.2.2, "CALCulate:FEED subsystem"](#), on page 105

Symbol Phase Error

The "Symbol Phase Error" is calculated analogous to symbol EVM. The result of calculation is one symbol phase error value for each symbol of the slot of a special channel. Positive values of symbol phase error indicate a symbol phase that is larger than the expected ideal value; negative symbol phase errors indicate a symbol phase that is less than the ideal one.

SCPI command:

CALC:FEED "XTIM:CDP:SYMB:EVM:PHAS", see [chapter 4.6.2.2, "CALCulate:FEED subsystem"](#), on page 105

Result Summary

The "Result Summary" display mode selects the numerical display of all results.

Three different tables are available, depending if the corresponding window is a full screen, a split screen or a quarter screen window. The full screen display mode shows the same results as the split screen window, but with a bigger font. In the quarter screen window, only the most important results are displayed on the screen.

The frame number and the slot number are always displayed in the "Global Results" header. It indicates the slot for which the measurement is performed. The entry is only valid if one frame of the 3GPP signal is analyzed. The analysis is performed either on a complete slot or a half slot.

Table 4-7: Global Results

Total Power:	Displays the total signal power (average power of total evaluated 3GPP FDD UE slot).
Chip Rate Error:	Displays the chip rate error in the frame to analyze in ppm. As a result of a high chip rate error symbol errors arise and the CDP measurement is possibly not synchronized to the 3GPP FDD UE signal. The result is valid even if the synchronization of the analyzer and signal failed.
IQ Offs/Imbalance:	DC offset and IQ imbalance of the signal in the selected slot in %

Composite EVM/Rho:	Composite EVM: The difference between the test signal and the ideal reference signal in the selected slot (see "Composite EVM (RMS)" on page 52). Rho: Quality paramter RHO for each slot.
No of Active Chan:	Indicates the number of active channels detected in the signal in the selected slot. Both the detected data channels and the control channels are considered active channels.
Carrier Freq Error:	Displays the frequency error in the selected slot referred to the center frequency of the analyzer. The absolute frequency error is the sum of the analyzer and DUT frequency error. Differences of more than 1 kHz between transmitter and receiver frequency impair the synchronization of the CDP measurement. For this reason, the transmitter and receiver should be synchronized (see chapter Getting Started).
Trigger to Frame:	This result displays the timing offset from the beginning of the recorded signal section to the start of the analyzed 3GPP FDD UE frame. In the case of triggered data collection, this timing offset is identical with the timing offset of frame trigger (+ trigger offset) – frame start. In the case of failure of the synchronization of the analyzer and 3GPP FDD UE signal, the value of Trigger to Frame is not significant.
Avg Power Intact Chan	The power in the code domain of all inactive channels is averaged to give the user an overview on the difference between active and inactive channels.
Pk CDE (30 ksps)	The Pk CDE measurement specifies a projection of the difference between the test signal and the ideal reference signal onto the selected spreading factor in the selected slot. The spreading factor onto which projection is made is shown beneath the measurement result.
Avg. RCDE (4 PAM)	Average Relative Code Domain Error over all channels detected with 4 PAM in the selected frame.

Table 4-8: Channel Results

Symbol Rate:	Symbol rate at which the channel is transmitted.
No of Pilot Bits:	Indicates the number of pilot bits detected in the control channel.
Symbol EVM:	Peak or average of the results of the error vector magnitude measurement. The measurement provides information on the EVM of the channel (marked red) in the CDP diagram in the slot (marked red) of the power-versus slot diagram at the symbol level.
Chan Power Abs:	Channel power, absolute
Timing Offset:	Offset between the start of the first slot in the channel and the start of the analyzed 3GPP FDD UE frame.
Channel Slot No:	The channel slot number is obtained by combining the value of the selected CPICH and the channel's timing offset.
Modulation Type:	Indicates the modulation type of the selected channel. Valid entries are BPSK I for channels on branch I, BPSK Q for channels on branch Q and NONE for inactive channels.
Chan Power Rel:	Channel relative (referred to the total power of the signal)

Symbol EVM:	Peak or average of the results of the error vector magnitude measurement. The measurement provides information on the EVM of the channel (marked red) in the CDP diagram in the slot (marked red) of the power-versus slot diagram at the symbol level.
RCDE	Relative Code Domain Error for the complete frame of the selected channel.

SCPI command:

CALC:FEED "XTIM:CDP:ERR:SUMM", see [chapter 4.6.2.2, "CALCulate:FEED subsystem"](#), on page 105

Query of results:

CALCulate<n>:MARKer<m>:FUNCTION:WCDPower:MS:RESult on page 123

Code Domain Error Power

"Code Domain Error Power" is the difference in power between the measured and his ideal signal. The unit is dB. There are no other units for the y-axis.

SCPI command:

CALC:FEED "XTIM:CDP:ERR:PCD", see [chapter 4.6.2.2, "CALCulate:FEED subsystem"](#), on page 105

Channel Table

The "Code Domain Channel Table" display mode shows the channel assignment table. The channel assignment table can contain a maximum of 512 entries, corresponding to the 256 codes that can be assigned within the class of spreading factor 256, both I and Q components.

The upper part of the table indicates the DPCCH channel that has to be present in every signal to be analyzed. Furthermore there are additional control channels used in HSDPA and HSUPA signals. These channels (HSDPCCH and EDPCCCH) are also displayed in the upper part of the table.

The lower part of the table indicates the data channels (DPDCH and E-DPDCH) that are contained in the signal. As specified in 3GPP, the channel table can contain up to 6 DPDCHs or up to 4 E-DPDCHs. The channels are in descending order according to symbol rates and within a symbol rate in ascending order according to the channel numbers. Therefore, the unassigned codes are always to be found at the end of the table.

Physical channels used in 3GPP UPLINK signals according to Release 99 specification:

DPCCH	The Dedicated Physical Control Channel is used to synchronize the signal. It carries pilot symbols and is expected in the Q branch at code class 8 with code number 0. The channel is displayed in the upper part of the table.
DPDCH	The Dedicated Physical Data Channel is used to carry UPLINK data from the UE to the BS. The code allocation depends on the total required symbol rate. The following table represents the possible configurations of DPCH spreading factors and code allocation.
HSDPCCH	The High Speed Dedicated Physical Control Channel (for HS-DCH) is used to carry control information (CQI/ACK/NACK) for downlink high speed data channels (HS-DCH). It is used in HSDPA signal setup. The data rate is fixed to 15ksps. The code allocation depends on the number of active DPCH and is described in the table below. This control channel is displayed in the upper part of the channel table. The HS-DPCCH can be switched on or of at for a duration of 1/5 frame = 3 slots = 2ms. Power control is applicable too.

EDPCCH	The Enhanced Dedicated Physical Control Channel is used to carry control information for uplink high speed data channels (EDPDCH). It is used in HSUPA signal setup. The data rate is fixed to 15kps. This control channel is displayed in the upper part of the channel table.
EDPDCH	The Enhanced Dedicated Physical Data Channel is used to carry UPLINK data for high speed channels (EDPDCH). It is used in HSUPA signal setup. The data rate and code allocation depends on the number of DPDCH and HS-DPCCH (refer to table below). This data channel is displayed in the lower part of the channel table.

The following parameters of these channels are determined by the CDP measurement:

Chan Type	Type of channel (active channels only).
Ch. SF	Number of channel spreading code (0 to [spreading factor])
Sym Rate [kps]	Symbol rate at which the channel is transmitted (15 kps to 960 kps)
Stat	Status display. Codes that are not assigned are marked as inactive channels.
TFCI	Indication whether the data channel uses TFCI symbols.
PilotL [Bits]	Number of pilot bits of the channel (only valid for the control channel DPCCH).
Pwr Abs [dBm]/Pwr Rel [dBm]	Indication of the absolute and relative channel power (referred to the CPICH or the total power of the signal).
T Offs [Chips]	Timing offset. Offset between the start of the first slot of the channel and the start of the analyzed 3GPP FDD UE frame.

In CODE CHAN "AUTO SEARCH" mode, a data channel is designated as active if its power has a minimum value compared to the total power of the signal and if a minimum signal/noise ratio is maintained within the channel.

In CODE CHAN "PREDEFINED" mode, each data channel that is included in the user defined channel table is considered to be active.

In the R&S FSV-K73 the display configuration can be set to show quarter screens. In such a case the channel table is reduced to: Channel, Code SF, State and Power Abs

SCPI command:

`CALC:FEED "XTIM:CDP:ERR:CTAB"`, see [chapter 4.6.2.2, "CALCulate:FEED subsystem"](#), on page 105

Power vs Symbol

The "Power vs. Symbol" measurement shows the power over the symbol number for the selected channel and the selected slot. The power is not averaged here. The trace is drawn using a histogram line algorithm, i.e. only vertical and horizontal lines, no diagonal, linear Interpolation (polygon interpolation). Surfaces are NOT filled. This measurement displays Power versus Symbol for one single channel and for one single slot.

SCPI command:

`CALC:FEED "XTIM:CDP:PVSY"`, see [chapter 4.6.2.2, "CALCulate:FEED subsystem"](#), on page 105

Symbol Constellation

The "Symbol Const" measurement shows QPSK or BPSK modulated signals of the selected channel and the selected slot. QPSK constellation points are located on the diagonals (not x and y-axis) of the constellation diagram. BPSK constellation points are always on the x-axis. If possible the display should use more than just 1 pixel per value, as in the minimum case only 12 symbols are available. This improves the visibility.

SCPI command:

`CALC:FEED "XTIM:CDP:SYMB:CONS"`, see [chapter 4.6.2.2, "CALCulate:FEED subsystem"](#), on page 105

Symbol EVM

The "Symbol EVM" display mode shows the error between the measured signal and the ideal reference signal in percent for the selected channel and the selected slot. A trace over all symbols of a slot is drawn. The number of symbols is in the range from 12 (min) to 384 (max). It depends on the symbol rate of the channel.

SCPI command:

`CALC:FEED "XTIM:CDP:SYMB:EVM"`, see [chapter 4.6.2.2, "CALCulate:FEED subsystem"](#), on page 105

Bitstream

The "Bitstream" measurement displays the demodulated bits of a selected channel for a given slot. Depending on the symbol rate the number of symbols within a slot can vary from 12 (min) to 384 (max). For QPSK modulation a symbol consists of 2 Bits (I and Q). For BPSK modulation a symbol consists of 1 Bit (only I used).

SCPI command:

`CALC:FEED "XTIM:CDP:BSTR"`, see [chapter 4.6.2.2, "CALCulate:FEED subsystem"](#), on page 105

Freq Err vs Slot

To reduce the overall span of "Frequency Err vs Slot", the difference between the frequency error of the corresponding slot to the frequency error of the first (zero) slot is calculated for each value to be displayed. This helps eliminate a static frequency offset of the whole signal to achieve a better display of a real time-depending frequency curve.

SCPI command:

`CALC:FEED "XTIM:CDP:FVSL"`, see [chapter 4.6.2.2, "CALCulate:FEED subsystem"](#), on page 105

Phase Discontinuity vs Slot

The "Phase Discontinuity vs Slot" is calculated according to 3GPP specifications. The phase calculated for each slot is interpolated to both ends of the slot using the frequency shift of that slot. The difference between the phase interpolated for the beginning of one slot and the end of the preceding slot is displayed as the phase discontinuity of that slot.

SCPI command:

`CALC:FEED "XTIM:CDP:PSVSL"`, see [chapter 4.6.2.2, "CALCulate:FEED subsystem"](#), on page 105

4.5.1.4 Softkeys of the Frequency Menu – FREQ key (R&S FSV-K73)

The FREQ key opens a submenu to change the measurement frequency.



Some softkey functions are not available in CDP mode. Refer to the description of the FREQ key in the base unit for information on the other softkeys available for RF measurements.

Center.....	60
CF Stepsize.....	60
Frequency Offset.....	60

Center

Opens an edit dialog box to enter the center frequency. The allowed range of values for the center frequency depends on the frequency span.

span > 0: $\text{span}_{\min}/2 \leq f_{\text{center}} \leq f_{\text{max}} - \text{span}_{\min}/2$

span = 0: $0 \text{ Hz} \leq f_{\text{center}} \leq f_{\text{max}}$

f_{max} and span_{\min} are specified in the data sheet.

SCPI command:

[SENSe:] FREQuency: CENTer on page 177

CF Stepsize

Opens an edit dialog box to enter a fixed step size for the center frequency.

This softkey is available for code domain and power vs time measurements.

SCPI command:

[SENSe:] FREQuency: CENTer: STEP [:VALue] on page 177

Frequency Offset

Opens an edit dialog box to enter a frequency offset that shifts the displayed frequency range by the specified offset. The softkey indicates the current setting. The allowed values range from -100 GHz to 100 GHz. The default setting is 0 Hz.

SCPI command:

[SENSe:] FREQuency: OFFSet on page 179

4.5.1.5 Softkeys of the Amplitude Menu – AMPT key (R&S FSV-K73)

The AMPT key opens a submenu to set the level.



Some softkey functions are not available in CDP mode. Refer to the description of the AMPT key in the base unit for information on the other softkeys available for RF measurements.

Ref Level.....	61
Scaling.....	61
L Ref Value.....	61

L Y per Div.....	61
L Ref Value Position.....	61
Preamp On/Off (option RF Preamplifier, B22/B24).....	61
RF Atten Manual/Mech Att Manual.....	62
RF Atten Auto/Mech Att Auto.....	62
EI Atten On/Off.....	62
EI Atten Mode (Auto/Man).....	63
Ref Level Offset.....	63
Input (AC/DC).....	63

Ref Level

Opens an edit dialog box to enter the reference level in the currently active unit (dBm, dBμV, etc).

The reference level value is the maximum value the AD converter can handle without distortion of the measured value. Signal levels above this value will not be measured correctly, which is indicated by the "IFOVL" status display.

SCPI command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel` on page 197

Scaling

Opens a submenu to define the amplitude scaling type.

Ref Value ← Scaling

The "Ref Value" softkey opens an edit dialog box to adjust the reference value.

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RVALue` on page 198

Y per Div ← Scaling

The "Y PER DIV" softkey opens an edit dialog box to change the range per division in the result diagram. The range is the length for one section of the y axis.

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:PDIVision` on page 197

Ref Value Position ← Scaling

The "Ref Value Position" softkey opens an edit dialog box to adjust the position the reference value of the y-axis (0 – 100 %). 100 % is at the top of the screen, 0 % is at the bottom of the screen.

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition` on page 198

Preamp On/Off (option RF Preamplifier, B22/B24)

Switches the preamplifier on or off.

If option R&S FSV-B22 is installed, the preamplifier is only active below 7 GHz.

If option R&S FSV-B24 is installed, the preamplifier is active for all frequencies.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

`INPut:GAIN:STATe` on page 206

RF Atten Manual/Mech Att Manual

Opens an edit dialog box to enter the attenuation, irrespective of the reference level. If electronic attenuation is activate (option R&S FSV-B25 only; "EI Atten Mode Auto" soft-key), this setting defines the mechanical attenuation.

The mechanical attenuation can be set in 10 dB steps.

The RF attenuation can be set in 5 dB steps (with option R&S FSV-B25: 1 dB steps). The range is specified in the data sheet. If the defined reference level cannot be set for the set RF attenuation, the reference level is adjusted accordingly.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Note: Values under 10 dB can only be entered via the numeric keypad or via remote control command in order to protect the input mixer against overload.

The RF attenuation defines the level at the input mixer according to the formula:

$$\text{level}_{\text{mixer}} = \text{level}_{\text{input}} - \text{RF attenuation}$$

The maximum mixer level allowed is -10 dBm. mixer levels above this value may lead to incorrect measurement results, which are indicated by the "OVLD" status display.

SCPI command:

[INPut:ATTenuation](#) on page 200

RF Atten Auto/Mech Att Auto

Sets the RF attenuation automatically as a function of the selected reference level. This ensures that the optimum RF attenuation is always used. It is the default setting.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

[INPut:ATTenuation:AUTO](#) on page 200

EI Atten On/Off

This softkey switches the electronic attenuator on or off. This softkey is only available with option R&S FSV-B25.

When the electronic attenuator is activated, the mechanical and electronic attenuation can be defined separately. Note however, that both parts must be defined in the same mode, i.e. either both manually, or both automatically.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

- To define the mechanical attenuation, use the [RF Atten Manual/Mech Att Manual](#) or [RF Atten Auto/Mech Att Auto](#) softkeys.
- To define the electronic attenuation, use the [EI Atten Mode \(Auto/Man\)](#) softkey.

Note: This function is not available for stop frequencies (or center frequencies in zero span) >7 GHz. In this case, the electronic and mechanical attenuation are summarized and the electronic attenuation can no longer be defined individually. As soon as the stop or center frequency is reduced below 7 GHz, this function is available again.

When the electronic attenuator is switched off, the corresponding RF attenuation mode (auto/manual) is automatically activated.

SCPI command:

[INPut:EATT:AUTO](#) on page 205

EI Atten Mode (Auto/Man)

This softkey defines whether the electronic attenuator value is to be set automatically or manually. If manual mode is selected, an edit dialog box is opened to enter the value. This softkey is only available with option R&S FSV-B25, and only if the electronic attenuator has been activated via the [EI Atten On/Off](#) softkey.

Note: This function is not available for stop frequencies (or center frequencies in zero span) >7 GHz. In this case, the electronic and mechanical attenuation are summarized and the electronic attenuation can no longer be defined individually. As soon as the stop or center frequency is reduced below 7 GHz, electronic attenuation is available again. If the electronic attenuation was defined manually, it must be re-defined.

The attenuation can be varied in 1 dB steps from 0 to 30 dB. Other entries are rounded to the next lower integer value.

To re-open the edit dialog box for manual value definition, select the "Man" mode again. If the defined reference level cannot be set for the given RF attenuation, the reference level is adjusted accordingly and the warning "Limit reached" is output.

SCPI command:

[INPut:EATT:AUTO](#) on page 205

[INPut:EATT](#) on page 204

Ref Level Offset

Opens an edit dialog box to enter the arithmetic level offset. This offset is added to the measured level irrespective of the selected unit. The scaling of the y-axis is changed accordingly. The setting range is ± 200 dB in 0.1 dB steps.

SCPI command:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]:RLEVel:OFFSet](#) on page 197

Input (AC/DC)

Toggles the RF input of the analyzer between AC and DC coupling.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

[INPut:COUPling](#) on page 200

4.5.1.6 Softkeys of the Sweep Menu – SWEEP key (R&S FSV-K73)

The menu of the SWEEP key contains options to switch between single measurement and continuous measurement and to control individual measurements.



Some softkey functions are not available in CDP mode. Refer to the description of the SWEEP key in the base unit for information on the other softkeys available for RF measurements.

In Code Domain Analyzer mode, the following functions are available in the submenu:

Continuous Sweep.....	64
Single Sweep.....	64
Continue Single Sweep.....	64
Sweep Count.....	64

Continuous Sweep

Sets the continuous sweep mode: the sweep takes place continuously according to the trigger settings. This is the default setting.

The trace averaging is determined by the sweep count value (see the "Sweep Count" softkey, "Sweep Count" on page 64).

SCPI command:

INIT:CONT ON, see INITiate<n>:CONTinuous on page 211

Single Sweep

Sets the single sweep mode: after triggering, starts the number of sweeps that are defined by using the Sweep Count softkey. The measurement stops after the defined number of sweeps has been performed.

SCPI command:

INIT:CONT OFF, see INITiate<n>:CONTinuous on page 211

Continue Single Sweep

Repeats the number of sweeps set by using the Sweep Count softkey, without deleting the trace of the last measurement.

This is particularly of interest when using the trace configurations "Average" or "Max Hold" to take previously recorded measurements into account for averaging/maximum search.

SCPI command:

INITiate<n>:CONMeas on page 211

Sweep Count

Opens an edit dialog box to enter the number of sweeps to be performed in the single sweep mode. Values from 0 to 32767 are allowed. If the values 0 or 1 are set, one sweep is performed. The sweep count is applied to all the traces in a diagram.

If the trace configurations "Average", "Max Hold" or "Min Hold" are set, the sweep count value also determines the number of averaging or maximum search procedures.

In continuous sweep mode, if sweep count = 0 (default), averaging is performed over 10 sweeps. For sweep count = 1, no averaging, maxhold or minhold operations are performed.

SCPI command:

[SENSe:] SWEEp:COUNT on page 180

4.5.1.7 Softkeys of the Trigger Menu – TRIG key (R&S FSV-K73)

The TRIG key opens the following submenu.

The following softkey functions are available for CDA measurements.

For RF measurements, see the description for the base unit.

Trigger Source Free Run.....	65
Trigger Source External.....	65
Trigger Polarity.....	65
Trigger Offset.....	65

Trigger Source Free Run

The start of a sweep is not triggered. Once a measurement is completed, another is started immediately.

SCPI command:

TRIG:SOUR IMM, see TRIGger<n>[:SEquence]:SOURce on page 209

Trigger Source External

Defines triggering via a TTL signal at the "EXT TRIG/GATE IN" input connector on the rear panel.

An edit dialog box is displayed to define the external trigger level.

SCPI command:

TRIG:SOUR EXT, see TRIGger<n>[:SEquence]:SOURce on page 209

Trigger Polarity

Sets the polarity of the trigger source.

The sweep starts after a positive or negative edge of the trigger signal. The default setting is "Pos". The setting applies to all modes with the exception of the "Free Run" and "Time" mode.

"Pos"	Level triggering: the sweep is stopped by the logic "0" signal and restarted by the logical "1" signal after the gate delay time has elapsed.
"Neg"	Edge triggering: the sweep is continued on a "0" to "1" transition for the gate length duration after the gate delay time has elapsed.

SCPI command:

TRIGger<n>[:SEquence]:SLOPe on page 209

[SENSe:]SWEep:EGATe:POLarity on page 181

Trigger Offset

Opens an edit dialog box to enter the time offset between the trigger signal and the start of the sweep.

offset > 0:	Start of the sweep is delayed
offset < 0:	<p>Sweep starts earlier (pre-trigger)</p> <p>Only possible for span = 0 (e.g. I/Q Analyzer mode) and gated trigger switched off</p> <p>Maximum allowed range limited by the sweep time: $\text{pretrigger}_{\text{max}} = \text{sweep time}$</p> <p>When using the R&S Digital I/Q Interface (R&S FSV-B17) with I/Q Analyzer mode, the maximum range is limited by the number of pretrigger samples.</p> <p>See the R&S Digital I/Q Interface(R&S FSV-B17) description in the base unit.</p>

In the "External" or "IF Power" trigger mode, a common input signal is used for both trigger and gate. Therefore, changes to the gate delay will affect the trigger delay (trigger offset) as well.

SCPI command:

[TRIGger<n>\[:SEquence\]:HOLDoFF\[:TIME\]](#) on page 208

4.5.1.8 Softkeys of the Trace Menu – TRACE key (R&S FSV-K73)

The TRACE key is used to configure the data acquisition for measurement and the analysis of the measurement data.

The following chapter describes all softkeys available in the "Trace" menu in "3GPP FDD UE" Mode for Code Domain Analysis measurements.

For RF measurements, see the description for the base unit.

Clear Write	66
Max Hold	66
Min Hold	67
Average	67
View	67

Clear Write

Overwrite mode: the trace is overwritten by each sweep. This is the default setting.

All available detectors can be selected.

SCPI command:

[DISP:TRAC:MODE WRIT](#), see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 195

Max Hold

The maximum value is determined over several sweeps and displayed. The analyzer saves the sweep result in the trace memory only if the new value is greater than the previous one.

The detector is automatically set to "Positive Peak".

This mode is especially useful with modulated or pulsed signals. The signal spectrum is filled up upon each sweep until all signal components are detected in a kind of envelope.

This mode is not available for statistics measurements.

SCPI command:

DISP:TRAC:MODE MAXH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 195

Min Hold

The minimum value is determined from several measurements and displayed. The analyzer saves for each sweep the smallest of the previously stored/currently measured values in the trace memory.

The detector is automatically set to "Negative Peak".

This mode is useful e.g. for making an unmodulated carrier in a composite signal visible. Noise, interference signals or modulated signals are suppressed whereas a CW signal is recognized by its constant level.

This mode is not available for statistics measurements.

SCPI command:

DISP:TRAC:MODE MINH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 195

Average

The average is formed over several sweeps. The [Sweep Count](#) determines the number of averaging procedures.

All available detectors can be selected. If the detector is automatically selected, the sample detector is used (see [chapter 4.4.3.3, "Detector Overview"](#), on page 28).


This mode is not available for statistics measurements.

SCPI command:

DISP:TRAC:MODE AVER, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 195

View

The current contents of the trace memory are frozen and displayed.

Note: If a trace is frozen, the instrument settings, apart from level range and reference level (see below), can be changed without impact on the displayed trace. The fact that the displayed trace no longer matches the current instrument setting is indicated by the  icon on the tab label.

If the level range or reference level is changed, the analyzer automatically adapts the measured data to the changed display range. This allows an amplitude zoom to be made after the measurement in order to show details of the trace.

SCPI command:

DISP:TRAC:MODE VIEW, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 195

4.5.1.9 Softkeys of the Marker Menu – MKR key (R&S FSV-K73)

The MKR key opens a submenu for the marker settings.

Markers are not available for the following result diagrams:

- Result Summary
- Channel Table

In all other result diagrams up to four markers can be activated.

The following softkeys are available for CDA measurements.

For RF measurements, see the description for the base unit.

Marker 1/2/3/4.....	68
Marker Norm/Delta.....	68
Marker Zoom.....	68
All Marker Off.....	69

Marker 1/2/3/4

Selects the corresponding marker and activates it.

Marker 1 is always a normal marker. After Marker 2 to 4 have been switched on, they are delta markers that are referenced to Marker 1. These markers can be converted into markers with absolute value displays using the "Marker Norm/Delta" softkey. When Marker 1 is the active marker, pressing the "Marker Norm/Delta" softkey switches on an additional delta marker. Pressing the "Marker 1" to "Marker 4" softkey again switches the corresponding marker off.

SCPI command:

`CALCulate<n>:MARKer<m>[:STATe]` on page 117

`CALCulate<n>:MARKer<m>:X` on page 119

`CALCulate<n>:MARKer<m>:Y` on page 120

`CALCulate<n>:DELTamarker<m>[:STATe]` on page 132

`CALCulate<n>:DELTamarker<m>:X` on page 133

`CALCulate<n>:DELTamarker<m>:X:RELative` on page 133

`CALCulate<n>:DELTamarker<m>:Y` on page 134

Marker Norm/Delta

Changes the active marker to a normal (norm) or delta marker (with respect to marker 1).

SCPI command:

`CALCulate<n>:MARKer<m>[:STATe]` on page 117

`CALCulate<n>:DELTamarker<m>[:STATe]` on page 132

Marker Zoom

Activates or deactivates the zoom for the current active marker. With the zoom function, more details of the measurement signal can be seen. This softkey can only be selected if at least one of the markers is activated.

SCPI command:

`CALCulate<n>:MARKer<m>:FUNctioN:ZOOM` on page 125

All Marker Off

Switches all markers off. It also switches off all functions and displays that are associated with the markers/delta markers.

SCPI command:

`CALCulate<n>:MARKer<m>:AOFF` on page 114

4.5.1.10 Softkeys of the Marker To Menu – MKR-> key (R&S FSV-K73)

The MKR-> key opens a submenu for marker functions. The menu is not available for the all result displays.

The following softkeys are available for CDA measurements.

For RF measurements, see the description for the base unit.

Select 1/2/3/4/Δ.....	69
Peak.....	69
Next Peak.....	69
Next Peak Mode.....	69
CPICH.....	70
PCCPCH.....	70
Min.....	70
Next Min.....	70
Next Min Mode.....	70

Select 1/2/3/4/Δ

Selects the normal marker or the delta marker and activates the marker. "Δ" stands for delta marker 1.

`CALCulate<n>:MARKer<m>[:STATe]` on page 117

`CALCulate<n>:MARKer<m>:X` on page 119

`CALCulate<n>:MARKer<m>:Y` on page 120

Peak

Sets the active marker/delta marker to the highest maximum of the trace.

SCPI command:

`CALCulate<n>:MARKer<m>:MAXimum[:PEAK]` on page 115

Next Peak

Sets the active marker/delta marker to the next maximum of the selected trace.

SCPI command:

`CALCulate<n>:MARKer<m>:MAXimum:NEXT` on page 114

`CALCulate<n>:DELTAmarker<m>:MAXimum:NEXT` on page 130

Next Peak Mode

Selects the mode of the **Next Peak** softkey.

Three settings are available:

"<" Sets the active marker/delta marker to the next maximum left to the marker of the selected trace.

"abs" Sets the active marker/delta marker to the next lower maximum of the selected trace.

">" Sets the active marker/delta marker to the next maximum right to the marker of the selected trace.

SCPI command:

CALC:MARK:MAX:LEFT (<): CALCulate<n>:MARKer<m>:MAXimum:LEFT
on page 114

CALCulate<n>:DELTamarker<m>:MAXimum:LEFT on page 129

CALC:MARK:MAX:RIGH (>): CALCulate<n>:MARKer<m>:MAXimum:RIGHT
on page 115

CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT on page 130

CALC:DELT:MAX:NEXT (abs): CALCulate<n>:MARKer<m>:MAXimum:NEXT
on page 114

CALCulate<n>:DELTamarker<m>:MAXimum:NEXT on page 130

CPICH

The "CPICH" softkey sets the marker to the CPICH channel. The softkey is only available for R&S FSV-K72.

CALCulate<n>:MARKer<m>:FUNctio:n:CPICH on page 121

CALCulate<n>:MARKer<m>:Y on page 120

PCCPCH

Sets the marker to the PCCPCH channel.

SCPI command:

CALCulate<n>:MARKer<m>:FUNctio:n:PCCPch on page 121

CALCulate<n>:MARKer<m>:Y on page 120

Min

Sets the active marker/delta marker to the minimum of the selected trace.

SCPI command:

CALCulate<n>:MARKer<m>:MINimum[:PEAK] on page 116

Next Min

Sets the active marker/delta marker to the next minimum of the selected trace.

SCPI command:

CALCulate<n>:MARKer<m>:MINimum:NEXT on page 116

CALCulate<n>:DELTamarker<m>:MINimum:NEXT on page 131

Next Min Mode

Sets the mode for the [Next Min](#) softkey.

Three settings are available:

"<" Sets the active marker/delta marker to the next minimum left to the marker of the selected trace.

"abs" Sets the active marker/delta marker to the next higher minimum of the selected trace.

">" Sets the active marker/delta marker to the next minimum right to the marker of the selected trace.

SCPI command:

CALC:MARK:MIN:LEFT (>): CALCulate<n>:MARKer<m>:MINimum:LEFT

on page 115

CALCulate<n>:DELTaMarker<m>:MINimum:LEFT on page 131

CALC:MARK:MIN:RIGH (>): CALCulate<n>:MARKer<m>:MINimum:RIGHT

on page 117

CALCulate<n>:DELTaMarker<m>:MINimum:RIGHT on page 132

CALC:MARK:MIN:NEXT (abs): CALCulate<n>:MARKer<m>:MINimum:NEXT

on page 116

CALCulate<n>:DELTaMarker<m>:MINimum:NEXT on page 131

4.5.1.11 Softkeys of the Auto Set Menu – AUTO SET Key (R&S FSV-K73)

The AUTOSSET key opens a menu to configure automatic settings.

This chapter describes the softkeys available for CDA measurements.

For RF measurements, see the description for the base unit.

Auto All.....	71
Auto Level.....	71
Auto Scrambling Code.....	71
Settings.....	72
L Meas Time Manual.....	72
L Meas Time Auto.....	72

Auto All

Performs all automatic settings.

- "Auto Level" on page 71
- "Auto Scrambling Code" on page 71

SCPI command:

[SENSe:]ADJust:ALL on page 172

Auto Level

Defines the optimal reference level for the current measurement automatically.

The measurement time for automatic leveling can be defined using the [Settings](#) softkey.

SCPI command:

[SENSe:]ADJust:LEVel on page 172

Auto Scrambling Code

This softkey starts a calculation on the recorded signal with all scrambling codes. The scrambling code that leads to the highest signal power is chosen as the new scrambling code.

SCPI command:

[SENSe:]CDPower:LCODE:SEARch:[IMMediate] on page 162

Settings

Opens a submenu to define settings for automatic leveling.

Possible settings are:

- "Meas Time Manual" on page 72
- "Meas Time Auto" on page 72

Meas Time Manual ← Settings

Opens an edit dialog box to enter the duration of the level measurement in seconds. The level measurement is used to determine the optimal reference level automatically (see the "Auto Level" softkey, "Auto Level" on page 71). The default value is 1 ms.

SCPI command:

[SENSe:]ADJust:CONFigure:LEVel:DURation on page 172

Meas Time Auto ← Settings

The level measurement is used to determine the optimal reference level automatically (see the [Auto Level](#) softkey).

This softkey resets the level measurement duration for automatic leveling to the default value of 100 ms.

4.5.1.12 Softkeys of the Input/Output Menu for CDA Measurements

The following chapter describes all softkeys available in the "Input/Output" menu for CDA measurements. For RF measurements, see "[Softkeys of the Input/Output Menu for RF Measurements](#)", on page 99.

Input (AC/DC).....	72
Noise Source.....	73
Signal Source.....	73
L Input Path.....	73
L Connected Device.....	73
L Input Sample Rate.....	73
L Full Scale Level.....	73
L Level Unit.....	74
L Adjust Reference Level to Full Scale Level.....	74
Digital Baseband Info.....	74
EXIQ.....	75
L TX Settings.....	75
L RX Settings.....	75
L Send To.....	75
L Firmware Update.....	75
L R&S Support.....	75
L DiglConf.....	75

Input (AC/DC)

Toggles the RF input of the analyzer between AC and DC coupling.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

[INPut:COUPling](#) on page 200

Noise Source

Switches the supply voltage for an external noise source on or off. For details on connectors refer to the Quick Start Guide, "Front and Rear Panel" chapter.

SCPI command:

[DIAGnostic<n>:SERVice:NSOurce](#) on page 211

Signal Source

Opens a dialog box to select the signal source. For "Digital Baseband (I/Q)", the source can also be configured here.

Input Path ← Signal Source

Defines whether the "RF Radio Frequency" or the "Baseband Digital" input path is used for measurements. "Baseband Digital" is only available if option R&S FSV-B17 (R&S Digital I/Q Interface) is installed.

Note: Note that the input path defines the characteristics of the signal, which differ significantly between the RF input and digital input.

SCPI command:

[INPut:SElect](#) on page 206

Connected Device ← Signal Source

Displays the name of the device connected to the optional R&S Digital I/Q Interface (R&S FSV-B17) to provide Baseband Digital input. The device name cannot be changed here.

The device name is unknown.

SCPI command:

[INPut:DIQ:CDEvice](#) on page 201

Input Sample Rate ← Signal Source

Defines the sample rate of the digital I/Q signal source. This sample rate must correspond with the sample rate provided by the connected device, e.g. a generator.

SCPI command:

[INPut:DIQ:SRATe](#) on page 203

Full Scale Level ← Signal Source

The "Full Scale Level" defines the level that should correspond to an I/Q sample with the magnitude "1".

The level can be defined either in dBm or Volt.

SCPI command:

[INPut:DIQ:RANGe\[:UPPer\]](#) on page 203

Level Unit ← Signal Source

Defines the unit used for the full scale level.

SCPI command:

[INPut:DIQ:RANGe\[:UPPer\]:UNIT](#) on page 203

Adjust Reference Level to Full Scale Level ← Signal Source

If enabled, the reference level is adjusted to the full scale level automatically if any change occurs.


SCPI command:

[INPut:DIQ:RANGe:COUPling](#) on page 202

Digital Baseband Info

Displays a dialog box with information on the digital I/Q input and output connection via the optional R&S Digital I/Q Interface (R&S FSV-B17), if available. The information includes:

- Device identification
- Used port
- (Maximum) digital input/output sample rates and maximum digital input/output transfer rates
- Status of the connection protocol
- Status of the PRBS descewing test

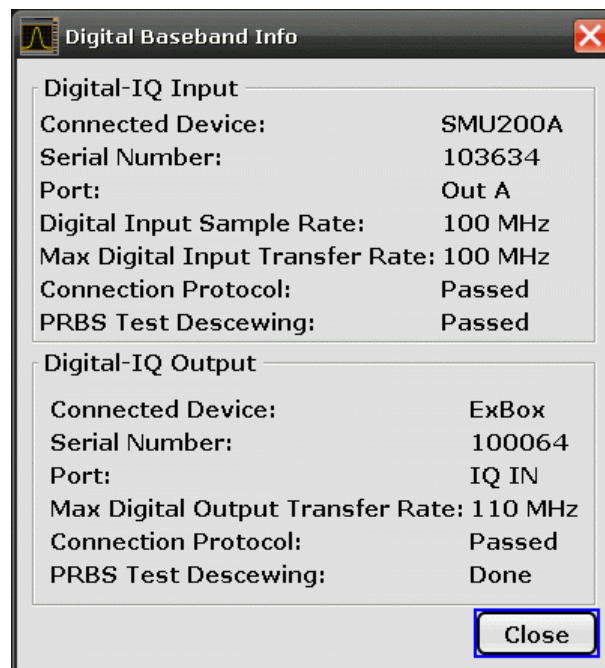

For details see "Interface Status Information" in "Instrument Functions - R&S Digital I/Q Interface (Option R&S FSV-B17)" in the description of the base unit.

SCPI command:

[INPut:DIQ:CDEvice](#) on page 201

EXIQ

Opens a configuration dialog box for an optionally connected R&S EX-IQ-BOX and a submenu to access the main settings quickly.

If the optional R&S DigIConf software is installed, the submenu consists only of one key to access the software. **Note that R&S DigIConf requires a USB connection (not LAN!) from the analyzer to the R&S EX-IQ-BOX in addition to the R&S Digital I/Q Interface connection. R&S DigIConf version 2.10 or higher is required.**

For typical applications of the R&S EX-IQ-BOX see also the description of the R&S Digital I/Q Interface (R&S FSV-B17) in the base unit manual.

For details on configuration see the "R&S®Ex I/Q Box - External Signal Interface Module Manual".

For details on installation and operation of the R&S DigIConf software, see the "R&S®EX-IQ-BOX Digital Interface Module R&S®DigIConf Software Operating Manual".

TX Settings ← EXIQ

Opens the "EX-IQ-BOX Settings" dialog box to configure the analyzer for digital output to a connected device ("Transmitter" Type).

RX Settings ← EXIQ

Opens the "EX-IQ-BOX Settings" dialog box to configure the analyzer for digital input from a connected device ("Receiver" Type).

Send To ← EXIQ

The configuration settings defined in the dialog box are transferred to the R&S EX-IQ-BOX.

Firmware Update ← EXIQ

If a firmware update for the R&S EX-IQ-BOX is delivered with the analyzer firmware, this function is available. In this case, when you select the softkey, the firmware update is performed.

R&S Support ← EXIQ

Stores useful information for troubleshooting in case of errors.

This data is stored in the `C:\R_S\Instr\user\Support` directory on the instrument.

If you contact the Rohde&Schwarz support to get help for a certain problem, send these files to the support in order to identify and solve the problem faster.

DigIConf ← EXIQ

Starts the optional R&S DigIConf application. This softkey is only available if the optional software is installed.

To return to the analyzer application, press any key on the front panel. The application is displayed with the "EXIQ" menu, regardless of which key was pressed.

For details on the R&S DigIConf application, see the "R&S®EX-IQ-BOX Digital Interface Module R&S®DigIConf Software Operating Manual".

Note: If you close the R&S DigIConf window using the "Close" icon, the window is minimized, not closed.

If you select the "File > Exit" menu item in the R&S DiglConf window, the application is closed. Note that in this case the settings are lost and the EX-IQ-BOX functionality is no longer available until you restart the application using the "DiglConf" softkey in the analyzer once again.

SCPI command:

Remote commands for the R&S DiglConf software always begin with `SOURCE:EBOX`. Such commands are passed on from the analyzer to the R&S DiglConf automatically which then configures the R&S EX-IQ-BOX via the USB connection.

All remote commands available for configuration via the R&S DiglConf software are described in the "R&S®EX-IQ-BOX Digital Interface Module R&S®DiglConf Software Operating Manual".

Example 1:

`SOURCE:EBOX:*RST`

`SOURCE:EBOX:*IDN?`

Result:

"Rohde&Schwarz,DiglConf,02.05.436 Build 47"

Example 2:

`SOURCE:EBOX:USER:CLOCK:REFERENCE:FREQUENCY 5MHZ`

Defines the frequency value of the reference clock.

4.5.2 RF Measurements

4.5.2.1	Output Power Measurements.....	76
4.5.2.2	Spectrum Emission Mask.....	77
4.5.2.3	Adjacent Channel Power (ACLR).....	77
4.5.2.4	Occupied Bandwidth.....	78
4.5.2.5	CCDF.....	79
4.5.2.6	Softkeys and Menus for RF Measurements (K73).....	80
4.5.2.6.1	Softkeys of the Frequency Menu.....	80
4.5.2.6.2	Softkeys of the Span Menu for RF Measurements.....	83
4.5.2.6.3	Softkeys of the Amplitude Menu.....	84
4.5.2.6.4	Softkeys of the Bandwidth Menu.....	90
4.5.2.6.5	Softkeys of the Sweep Menu.....	95
4.5.2.6.6	Softkeys of the Input/Output Menu for RF Measurements.....	99

4.5.2.1 Output Power Measurements

The analyzer measures the unweighted RF signal power in a bandwidth of:

$$f_{BW} = 5 \text{ MHz} \geq (1 + \alpha) \cdot 3.84 \text{ MHz} \quad | \quad \alpha = 0.22$$

The power is measured in zero span mode (time domain) using a digital channel filter of 5 MHz in bandwidth. According to the 3GPP standard, the measurement bandwidth (5

MHz) is slightly larger than the minimum required bandwidth of 4.7 MHz. The bandwidth is displayed numerically below the screen.

Remote: [CONFigure:WCDPower:MS:MEASurement](#) on page 153

4.5.2.2 Spectrum Emission Mask

The measurement Spectrum Emission Mask is the determination of the power of the 3GPP FDD UE signal in defined offsets from the carrier and compares the power values with a spectral mask specified by 3GPP.

This measurement is identical to the Spectrum Emission Mask measurement of the base unit.

By entering the measurement, the configuration to measure the 3GPP standard will be loaded.

The following user-specific settings are not modified on the first access following presetting:

- Reference Level, Reference Level Offset
- Center Frequency, Frequency Offset
- Input Attenuation, Mixer Level
- All trigger settings

SCPI command: [CONFigure:WCDPower:MS:MEASurement](#) on page 153

4.5.2.3 Adjacent Channel Power (ACLR)

Selecting of Adjacent Channel Power (ACLR) activates the adjacent channel power measurement in the default setting according to 3GPP specifications (adjacent channel leakage ratio). The analyzer measures the channel power and the relative power of the adjacent channels and of the alternate channels. The results are displayed below the screen.

The following user-specific settings are not modified on the first access following presetting:

- Reference Level, Reference Level Offset
- Center Frequency, Frequency Offset
- Input Attenuation, Mixer Level
- All trigger settings

Pressing the Adjacent Channel Power softkey activates the analyzer mode with defined settings:

CHAN PWR/ACP	CP/ACP ON	
CP/ACP STANDARD	W-CDMA 3GPP FWD	
CP/ACP CONFIG	NO. OF ADJ CHAN	2

To restore adapted measurement parameters, the following level parameters are saved on exiting and are set again on re-entering this measurement:

Level Parameters

- RBW, VBW
- Sweep time
- SPAN
- NO OF ADJ. CHANNELS
- FAST ACP MODUS

For further details about the ACP measurements refer to "Settings of CP/ACLR Test Parameters" of the base unit.

[CONFigure:WCDPower:MS:MEASurement](#) on page 153

Query of results:

[CALCulate<n>:MARKer<m>:FUNction:POWer:RESult](#) on page 121

4.5.2.4 Occupied Bandwidth

The Occupied Bandwidth softkey activates the measurement of the bandwidth that the signal occupies.

The occupied bandwidth is defined as the bandwidth in which – in default settings -99 % of the total signal power is to be found. The percentage of the signal power to be included in the bandwidth measurement can be changed.

The occupied bandwidth and the frequency markers are output in the marker info field at the top right edge of the screen as OBW.

The following user-specific settings are not modified on the first access following presetting:

- Reference Level, Reference Level Offset
- Center Frequency, Frequency Offset
- Input Attenuation, Mixer Level
- All trigger settings

Pressing the Occupied Bandwidth softkey activates the analyzer mode with defined settings:

OCCUPIED BANDWIDTH		
TRACE1	DETECTOR	SAMPLE

To restore adapted measurement parameters, the following level parameters are saved on exiting and are set again on re-entering this measurement:

Level Parameters

- RBW, VBW
- Sweep time

- SPAN

For further details about the Occupied Bandwidth measurements refer to the description in the base unit.

Remote: [CONFigure:WCDPower:MS:MEASurement](#) on page 153

Query of results:

Remote: [CALCulate<n>:MARKer<m>:FUNction:POWer:RESult](#) on page 121

4.5.2.5 CCDF

The CCDF softkey starts a measurement of the distribution function of the signal amplitudes (complementary cumulative distribution function). The CCDF and the Crest factor are displayed. For the purposes of this measurement, a signal section of user-definable length is recorded continuously in the zero span, and the distribution of the signal amplitudes is evaluated.

The following user-specific settings are not modified on the first access following presetting:

- Reference Level, Reference Level Offset
- Center Frequency, Frequency Offset
- Input Attenuation, Mixer Level
- All trigger settings

Pressing the CCDF softkey activates the analyzer mode with defined settings:

CCDF		
TRACE1	DETECTOR	SAMPLE
BW	RES BW MANUAL	10 MHz
	VIDEO BW MANUAL	5 MHz

To restore adapted measurement parameters, the following level parameters are saved on exiting and are set again on re-entering this measurement:

Level Parameters

- RBW
- NO OF SAMPLES

For further details about the CCDF measurements refer to the description in the base unit.

[CONFigure:WCDPower:MS:MEASurement](#) on page 153

or

[CALCulate<n>:STATistics:CCDF\[:STATe\]](#) on page 148

Query of results:

[CALCulate<n>:MARKer<m>:X](#) on page 119

[CALCulate<n>:STATistics:RESult<Trace>](#) on page 149

4.5.2.6 Softkeys and Menus for RF Measurements (K73)

The following chapter describes the softkeys and menus available for RF measurements in 3GPP FDD UE base station tests.

All menus not described here are the same as for the base unit, see the description there.

Softkeys of the Frequency Menu

The following chapter describes all softkeys available in the "Frequency" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Center.....	80
CF Stepsize.....	80
L 0.1*Span (span > 0).....	81
L 0.1*RBW (zero span).....	81
L 0.5*Span (span > 0).....	81
L 0.5*RBW (zero span).....	81
L x*Span (span > 0).....	81
L x*RBW (zero span).....	82
L =Center.....	82
L =Marker.....	82
L Manual.....	82
Start.....	82
Stop.....	82
Frequency Offset.....	83

Center

Opens an edit dialog box to enter the center frequency. The allowed range of values for the center frequency depends on the frequency span.

$$\text{span} > 0: \text{span}_{\min}/2 \leq f_{\text{center}} \leq f_{\max} - \text{span}_{\min}/2$$

$$\text{span} = 0: 0 \text{ Hz} \leq f_{\text{center}} \leq f_{\max}$$

f_{\max} and span_{\min} are specified in the data sheet.

SCPI command:

[\[SENSe:\] FREQuency:CENTer](#) on page 177

CF Stepsize

Opens a submenu to set the step size of the center frequency. Apart from the [=Center](#), [=Marker](#) and [Manual](#) softkeys, the other softkeys are displayed depending on the selected frequency span.

The step size can be coupled to the span (span > 0) or the resolution bandwidth (span = 0) or it can be manually set to a fixed value.

This softkey is available for RF measurements.

0.1*Span (span > 0) ← CF Stepsize

Sets the step size for the center frequency to 10 % of the span.

SCPI command:

FREQ:CENT:STEP:LINK SPAN, see [SENSe:]FREQuency:CENTer:STEP:LINK on page 178

FREQ:CENT:STEP:LINK:FACT 10PCT, see [SENSe:]FREQuency:CENTer:STEP:LINK:FACTor on page 178

0.1*RBW (zero span) ← CF Stepsize

Sets the step size for the center frequency to 10 % of the resolution bandwidth. This is the default setting.

SCPI command:

FREQ:CENT:STEP:LINK RBW, see [SENSe:]FREQuency:CENTer:STEP:LINK on page 178

FREQ:CENT:STEP:LINK:FACT 10PCT, see [SENSe:]FREQuency:CENTer:STEP:LINK:FACTor on page 178

0.5*Span (span > 0) ← CF Stepsize

Sets the step size for the center frequency to 50 % of the span.

SCPI command:

FREQ:CENT:STEP:LINK SPAN, see [SENSe:]FREQuency:CENTer:STEP:LINK on page 178

FREQ:CENT:STEP:LINK:FACT 50PCT, see [SENSe:]FREQuency:CENTer:STEP:LINK:FACTor on page 178

0.5*RBW (zero span) ← CF Stepsize

Sets the step size for the center frequency to 50 % of the resolution bandwidth.

SCPI command:

FREQ:CENT:STEP:LINK RBW, see [SENSe:]FREQuency:CENTer:STEP:LINK on page 178

FREQ:CENT:STEP:LINK:FACT 50PCT, see [SENSe:]FREQuency:CENTer:STEP:LINK:FACTor on page 178

x*Span (span > 0) ← CF Stepsize

Opens an edit dialog box to set the step size for the center frequency as % of the span.

SCPI command:

FREQ:CENT:STEP:LINK SPAN, see [SENSe:]FREQuency:CENTer:STEP:LINK on page 178

FREQ:CENT:STEP:LINK:FACT 20PCT, see [SENSe:]FREQuency:CENTer:STEP:LINK on page 178

x*RBW (zero span) ← CF Stepsize

Opens an edit dialog box to set the step size for the center frequency as % of the resolution bandwidth. Values between 1 and 100 % in steps of 1 % are allowed. The default setting is 10 %.

SCPI command:

FREQ:CENT:STEP:LINK RBW, see [SENSe:]FREQuency:CENTer:STEP:LINK on page 178

FREQ:CENT:STEP:LINK:FACT 20PCT, see [SENSe:]FREQuency:CENTer:STEP:LINK on page 178

=Center ← CF Stepsize

Sets the step size to the value of the center frequency and removes the coupling of the step size to span or resolution bandwidth. This function is especially useful during measurements of the signal harmonic content because by entering the center frequency each stroke of the arrow key selects the center frequency of another harmonic.

=Marker ← CF Stepsize

Sets the step size to the value of the current marker and removes the coupling of the step size to span or resolution bandwidth. This function is especially useful during measurements of the signal harmonic content at the marker position because by entering the center frequency each stroke of the arrow key selects the center frequency of another harmonic.

Manual ← CF Stepsize

Opens an edit dialog box to enter a fixed step size for the center frequency.

SCPI command:

[SENSe:]FREQuency:CENTer:STEP[:VALue] on page 177

Start

Opens an edit dialog box to define the start frequency. The following range of values is allowed:

$$f_{\min} \leq f_{\text{start}} \leq f_{\max} - \text{span}_{\min}$$

f_{\min} , f_{\max} and span_{\min} are specified in the data sheet.

SCPI command:

[SENSe:]FREQuency:START on page 180

Stop

Opens an edit dialog box to define the stop frequency. The following range of values for the stop frequency is allowed:

$$f_{\min} + \text{span}_{\min} \leq f_{\text{stop}} \leq f_{\max}$$

f_{\min} , f_{\max} and span_{\min} are specified in the data sheet.

SCPI command:

[SENSe:]FREQuency:STOP on page 180

Frequency Offset

Opens an edit dialog box to enter a frequency offset that shifts the displayed frequency range by the specified offset. The softkey indicates the current setting. The allowed values range from -100 GHz to 100 GHz. The default setting is 0 Hz.

SCPI command:

[SENSe:] FREQuency: OFFSet on page 179

Softkeys of the Span Menu for RF Measurements

The following chapter describes all softkeys available in the "Span" menu for RF measurements, except for "Power" measurements.

Span Manual.....	83
Sweeptime Manual.....	83
Full Span.....	84
Last Span.....	84

Span Manual

Opens an edit dialog box to enter the frequency span. The center frequency is kept constant. The following range is allowed:

span = 0: 0 Hz

span >0: $\text{span}_{\min} \leq f_{\text{span}} \leq f_{\max}$

f_{\max} and span_{\min} are specified in the data sheet.

SCPI command:

[SENSe:] FREQuency: SPAN on page 179

Sweeptime Manual

Opens an edit dialog box to enter the sweep time.

Sweep time	
absolute max. sweep time value:	16000 s
absolute min. sweep time value:	zero span: 1 μ s
	span > 0: depends on device model (refer to data sheet)

Allowed values depend on the ratio of span to RBW and RBW to VBW. For details refer to the data sheet.

Numeric input is always rounded to the nearest possible sweep time. For rotary knob or UPARROW/DNARROW key inputs, the sweep time is adjusted in steps either downwards or upwards.

The manual input mode of the sweep time is indicated by a green bullet next to the "SWT" display in the channel bar. If the selected sweep time is too short for the selected bandwidth and span, level measurement errors will occur due to a too short settling time for the resolution or video filters. In this case, the analyzer displays the error message "UNCAL" and marks the indicated sweep time with a red bullet.

This softkey is available for RF measurements, but not for CCDF measurements.

SCPI command:

SWE:TIME:AUTO OFF, see [SENSe:]SWEep:TIME:AUTO on page 182

[SENSe:]SWEep:TIME on page 181

Full Span

Sets the span to the full frequency range of the analyzer specified in the data sheet. This setting is useful for overview measurements.

SCPI command:

[SENSe:]FREQuency:SPAN:FULL on page 179

Last Span

Sets the span to the previous value. With this function e.g. a fast change between overview measurement and detailed measurement is possible.

Softkeys of the Amplitude Menu

The following table shows all softkeys available in the "Amplitude" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Ref Level.....	84
Range.....	85
L Range Log 100 dB.....	85
L Range Log 50 dB.....	85
L Range Log 10 dB.....	85
L Range Log 5 dB.....	85
L Range Log 1 dB.....	86
L Range Log Manual.....	86
L Range Linear %.....	86
L Range Lin. Unit.....	86
Unit.....	86
Preamp On/Off (option RF Preamplifier, B22/B24).....	87
RF Atten Manual/Mech Att Manual.....	87
RF Atten Auto/Mech Att Auto.....	87
EI Atten On/Off.....	88
EI Atten Mode (Auto/Man).....	88
Ref Level Offset.....	88
Ref Level Position.....	89
Grid Abs/Rel	89
Input (AC/DC).....	89
Input 50 Ω/75 Ω	89
YIG Filter (On Off).....	89

Ref Level

Opens an edit dialog box to enter the reference level in the currently active unit (dBm, dBμV, etc).

The reference level value is the maximum value the AD converter can handle without distortion of the measured value. Signal levels above this value will not be measured correctly, which is indicated by the "IFOVL" status display.

SCPI command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel` on page 197

Range

Opens a submenu to define the level display range.

This softkey and its submenu are available for RF measurements.

Range Log 100 dB ← Range

Sets the level display range to 100 dB.

SCPI command:

`DISP:WIND:TRAC:Y:SPAC LOG`

(To define logarithmic scaling, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 199.)

`DISP:WIND:TRAC:Y 100DB` (see `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 196).

Range Log 50 dB ← Range

Sets the level display range to 50 dB.

SCPI command:

`DISP:WIND:TRAC:Y:SPAC LOG`

(To define logarithmic scaling, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 199.)

`DISP:WIND:TRAC:Y 50DB`

Sets the level display range to 50 dB (see `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 196).

Range Log 10 dB ← Range

Sets the level display range to 10 dB.

SCPI command:

`DISP:WIND:TRAC:Y:SPAC LOG`

(To define logarithmic scaling, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 199.)

`DISP:WIND:TRAC:Y 10DB` (see `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 196).

Range Log 5 dB ← Range

Sets the level display range to 5 dB.

SCPI command:

`DISP:WIND:TRAC:Y:SPAC LOG`

(To define logarithmic scaling, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 199.)

`DISP:WIND:TRAC:Y 5DB` (see `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 196).

Range Log 1 dB ← Range

Sets the level display range to 1 dB.

SCPI command:

DISP:WIND:TRAC:Y:SPAC LOG

(To define logarithmic scaling, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 199.)

DISP:WIND:TRAC:Y 1DB (see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 196).

Range Log Manual ← Range

Opens an edit dialog box to enter a value for logarithmic scaling for the level display range.

SCPI command:

DISP:WIND:TRAC:Y:SPAC LOG

(To define logarithmic scaling, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 199.)

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 196

Range Linear % ← Range

Selects linear scaling in % for the level display range, i.e. the horizontal grid lines are labeled in %. The grid is divided in decadal steps.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in % referenced to the voltage value at the position of marker 1. This is the default setting for linear scaling.

SCPI command:

DISP:TRAC:Y:SPAC LIN, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 199

Range Lin. Unit ← Range

Selects linear scaling in dB for the level display range, i.e. the horizontal lines are labeled in dB.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in dB referenced to the power value at the position of marker 1.

SCPI command:

DISP:TRAC:Y:SPAC LDB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 199

Unit

Opens the "Unit" submenu to select the unit for the level axis. The default setting is dBm. If a transducer is switched on, the softkey is not available.

In general, the signal analyzer measures the signal voltage at the RF input. The level display is calibrated in RMS values of an unmodulated sine wave signal. In the default state, the level is displayed at a power of 1 mW (= dBm). Via the known input impedance (50 Ω or 75 Ω), conversion to other units is possible. The following units are available and directly convertible:

- dBm
- dBmV

- dB μ V
- dB μ A
- dBpW
- Volt
- Ampere
- Watt

SCPI command:

`CALCulate<n>:UNIT:POWer` on page 152

Preamp On/Off (option RF Preamplifier, B22/B24)

Switches the preamplifier on or off.

If option R&S FSV-B22 is installed, the preamplifier is only active below 7 GHz.

If option R&S FSV-B24 is installed, the preamplifier is active for all frequencies.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

`INPut:GAIN:STATe` on page 206

RF Atten Manual/Mech Att Manual

Opens an edit dialog box to enter the attenuation, irrespective of the reference level. If electronic attenuation is activate (option R&S FSV-B25 only; "EI Atten Mode Auto" soft-key), this setting defines the mechanical attenuation.

The mechanical attenuation can be set in 10 dB steps.

The RF attenuation can be set in 5 dB steps (with option R&S FSV-B25: 1 dB steps). The range is specified in the data sheet. If the defined reference level cannot be set for the set RF attenuation, the reference level is adjusted accordingly.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Note: Values under 10 dB can only be entered via the numeric keypad or via remote control command in order to protect the input mixer against overload.

The RF attenuation defines the level at the input mixer according to the formula:

$$\text{level}_{\text{mixer}} = \text{level}_{\text{input}} - \text{RF attenuation}$$

The maximum mixer level allowed is -10 dBm. mixer levels above this value may lead to incorrect measurement results, which are indicated by the "OVLD" status display.

SCPI command:

`INPut:ATTenuation` on page 200

RF Atten Auto/Mech Att Auto

Sets the RF attenuation automatically as a function of the selected reference level. This ensures that the optimum RF attenuation is always used. It is the default setting.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

`INPut:ATTenuation:AUTO` on page 200

EI Atten On/Off

This softkey switches the electronic attenuator on or off. This softkey is only available with option R&S FSV-B25.

When the electronic attenuator is activated, the mechanical and electronic attenuation can be defined separately. Note however, that both parts must be defined in the same mode, i.e. either both manually, or both automatically.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

- To define the mechanical attenuation, use the [RF Atten Manual/Mech Att Manual](#) or [RF Atten Auto/Mech Att Auto](#) softkeys.
- To define the electronic attenuation, use the [EI Atten Mode \(Auto/Man\)](#) softkey.

Note: This function is not available for stop frequencies (or center frequencies in zero span) >7 GHz. In this case, the electronic and mechanical attenuation are summarized and the electronic attenuation can no longer be defined individually. As soon as the stop or center frequency is reduced below 7 GHz, this function is available again.

When the electronic attenuator is switched off, the corresponding RF attenuation mode (auto/manual) is automatically activated.

SCPI command:

[INPut:EATT:AUTO](#) on page 205

EI Atten Mode (Auto/Man)

This softkey defines whether the electronic attenuator value is to be set automatically or manually. If manual mode is selected, an edit dialog box is opened to enter the value. This softkey is only available with option R&S FSV-B25, and only if the electronic attenuator has been activated via the [EI Atten On/Off](#) softkey.

Note: This function is not available for stop frequencies (or center frequencies in zero span) >7 GHz. In this case, the electronic and mechanical attenuation are summarized and the electronic attenuation can no longer be defined individually. As soon as the stop or center frequency is reduced below 7 GHz, electronic attenuation is available again. If the electronic attenuation was defined manually, it must be re-defined.

The attenuation can be varied in 1 dB steps from 0 to 30 dB. Other entries are rounded to the next lower integer value.

To re-open the edit dialog box for manual value definition, select the "Man" mode again.

If the defined reference level cannot be set for the given RF attenuation, the reference level is adjusted accordingly and the warning "Limit reached" is output.

SCPI command:

[INPut:EATT:AUTO](#) on page 205

[INPut:EATT](#) on page 204

Ref Level Offset

Opens an edit dialog box to enter the arithmetic level offset. This offset is added to the measured level irrespective of the selected unit. The scaling of the y-axis is changed accordingly. The setting range is ± 200 dB in 0.1 dB steps.

SCPI command:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]:RLEVel:OFFSet](#) on page 197

Ref Level Position

Opens an edit dialog box to enter the reference level position, i.e. the position of the maximum AD converter value on the level axis. The setting range is from -200 to +200 %, 0 % corresponding to the lower and 100 % to the upper limit of the diagram.

Only available for RF measurements.

Grid Abs/Rel

Switches between absolute and relative scaling of the level axis (not available with "Linear" range).

Only available for RF measurements.

"Abs" Absolute scaling: The labeling of the level lines refers to the absolute value of the reference level. Absolute scaling is the default setting.

"Rel" Relative scaling: The upper line of the grid is always at 0 dB. The scaling is in dB whereas the reference level is always in the set unit (for details on unit settings see the "Unit" softkey).

SCPI command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE` on page 196

Input (AC/DC)

Toggles the RF input of the analyzer between AC and DC coupling.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

`INPut:COUPling` on page 200

Input 50 Ω/75 Ω

Uses 50 Ω or 75 Ω as reference impedance for the measured levels. Default setting is 50 Ω.

The setting 75 Ω should be selected if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = 10 log (75 Ω/50 Ω).

All levels specified in this Operating Manual refer to the default setting of the instrument (50 Ω).

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

`INPut:IMPedance` on page 206

YIG Filter (On Off)

Activates or deactivates the YIG filter by means of relays or by bypassing the filter.

If the YIG filter at the input of the analyzer is removed from the signal path, you can use the maximum bandwidth for signal analysis. However, image-frequency rejection is no longer ensured.

Note that the YIG filter is active only on frequencies greater than 7 GHz. Therefore, switching the YIG filter on and off has no effect if the frequency is below that value.

INPut:FiLTeR:YIG[:STATe] on page 205

Softkeys of the Bandwidth Menu

The following table shows all softkeys available in the "Bandwidth" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.



For Spurious Emission Measurements, the settings are defined in the "Sweep List" dialog, see the description in the base unit.

Res BW Manual.....	90
Res BW Auto.....	91
Video BW Manual.....	91
Video BW Auto.....	91
Sweeptime Manual.....	92
Sweeptime Auto.....	92
Sweep Type.....	92
L Sweep.....	93
L FFT.....	93
L Auto.....	93
L FFT Filter Mode.....	93
L Auto.....	93
L Narrow.....	93
Coupling Ratio.....	93
L RBW/VBW Sine [1/1].....	93
L RBW/VBW Pulse [.1].....	94
L RBW/VBW Noise [10].....	94
L RBW/VBW Manual.....	94
L Span/RBW Auto [100].....	94
L Span/RBW Manual.....	95
L Default Coupling.....	95
Filter Type.....	95

Res BW Manual

Opens an edit dialog box to enter a value for the resolution bandwidth. The available resolution bandwidths are specified in the data sheet. For details on the correlation between resolution bandwidth and filter type refer to [chapter 4.4.3.5, "Selecting the Appropriate Filter Type"](#), on page 31.

Numeric input is always rounded to the nearest possible bandwidth. For rotary knob or UP/DNARROW key inputs, the bandwidth is adjusted in steps either upwards or downwards.

The manual input mode of the resolution bandwidth is indicated by a green bullet next to the "RBW" display in the channel bar.

This softkey is available for all RF measurements except for Power measurements.

SCPI command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:AUTO](#) on page 174

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]](#) on page 174

Res BW Auto

Couples the resolution bandwidth to the selected span (for span > 0). If the span is changed, the resolution bandwidth is automatically adjusted.

This setting is recommended, if a favorable setting of the resolution bandwidth in relation to the selected span is desired.

This softkey is available for measuring the Adjacent Channel Power, the Occupied Bandwidth and the CCDF.

SCPI command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:AUTO](#) on page 174

Video BW Manual

Opens an edit dialog box to enter the video bandwidth. The available video bandwidths are specified in the data sheet.

Numeric input is always rounded to the nearest possible bandwidth. For rotary knob or UP/DOWN key inputs, the bandwidth is adjusted in steps either upwards or downwards.

The manual input mode of the video bandwidth is indicated by a green bullet next to the "VBW" display in the channel bar.

Note: RMS detector and VBW.

If an RMS detector is used, the video bandwidth in the hardware is bypassed. Thus, duplicate trace averaging with small VBWs and RMS detector no longer occurs. However, the VBW is still considered when calculating the sweep time. This leads to a longer sweep time for small VBW values. Thus, you can reduce the VBW value to achieve more stable trace curves even when using an RMS detector. Normally, if the RMS detector is used the sweep time should be increased to get more stable trace curves. For details on detectors see [chapter 4.4.3.3, "Detector Overview"](#), on page 28.

This softkey is available for measuring the Adjacent Channel Power, the Spectrum Emission Mask and the Occupied Bandwidth.

SCPI command:

[\[SENSe:\]BANDwidth|BWIDth:VIDeo:AUTO](#) on page 177

[\[SENSe:\]BANDwidth|BWIDth:VIDeo](#) on page 176

Video BW Auto

Couples the video bandwidth to the resolution bandwidth. If the resolution bandwidth is changed, the video bandwidth is automatically adjusted.

This setting is recommended, if a minimum sweep time is required for a selected resolution bandwidth. Narrow video bandwidths require longer sweep times due to the longer settling time. Wide bandwidths reduce the signal/noise ratio.

This softkey is available for measuring the Adjacent Channel Power, the Spectrum Emission Mask and the Occupied Bandwidth.

SCPI command:

[\[SENSe:\]BANDwidth|BWIDth:VIDeo:AUTO](#) on page 177

Sweptime Manual

Opens an edit dialog box to enter the sweep time.

Sweep time	
absolute max. sweep time value:	16000 s
absolute min. sweep time value:	zero span: 1 μ s
	span > 0: depends on device model (refer to data sheet)

Allowed values depend on the ratio of span to RBW and RBW to VBW. For details refer to the data sheet.

Numeric input is always rounded to the nearest possible sweep time. For rotary knob or UPARROW/DNARROW key inputs, the sweep time is adjusted in steps either downwards or upwards.

The manual input mode of the sweep time is indicated by a green bullet next to the "SWT" display in the channel bar. If the selected sweep time is too short for the selected bandwidth and span, level measurement errors will occur due to a too short settling time for the resolution or video filters. In this case, the analyzer displays the error message "UNCAL" and marks the indicated sweep time with a red bullet.

This softkey is available for RF measurements, but not for CCDF measurements.

SCPI command:

SWE:TIME:AUTO OFF, see [SENSe:]SWEep:TIME:AUTO on page 182

[SENSe:]SWEep:TIME on page 181

Sweptime Auto

Couples the sweep time to the span, video bandwidth (VBW) and resolution bandwidth (RBW) (not available for zero span). If the span, resolution bandwidth or video bandwidth is changed, the sweep time is automatically adjusted.

The analyzer always selects the shortest sweep time that is possible without falsifying the signal. The maximum level error is < 0.1 dB, compared to using a longer sweep time.

This softkey is available for measuring the Adjacent Channel Power, the Spectrum Emission Mask and the Occupied Bandwidth.

SCPI command:

[SENSe:]SWEep:TIME:AUTO on page 182

Sweep Type

Opens a submenu to define the sweep type.

This softkey is available for measuring the Signal Power, the Adjacent Channel Power and the Occupied Bandwidth.

This function is not available in IQ Analyzer mode or for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

In frequency sweep mode, the analyzer provides several possible methods of sweeping:

- "Sweep" on page 93
- "FFT" on page 93 (not available with 5-Pole filters, channel filters or RRC filters, see chapter 4.4.3.5, "Selecting the Appropriate Filter Type", on page 31)
- "Auto" on page 93

Sweep ← Sweep Type

Sets the [Sweep Type](#) to standard analog frequency sweep.

In the standard sweep mode, the local oscillator is set to provide the spectrum quasi analog from the start to the stop frequency.

SCPI command:

`SWE:TYPE SWE`, see [\[SENSe:\]SWEep:TYPE](#) on page 182

FFT ← Sweep Type

Sets the [Sweep Type](#) to FFT mode.

The FFT sweep mode samples on a defined frequency value and transforms it to the spectrum by fast Fourier transformation (FFT).

FFT is not available when using 5-Pole filters, Channel filters or RRC filters.

SCPI command:

`SWE:TYPE FFT`, see [\[SENSe:\]SWEep:TYPE](#) on page 182

Auto ← Sweep Type

Automatically sets the fastest available [Sweep Type](#) for the current measurement. Auto mode is set by default.

SCPI command:

`SWE:TYPE AUTO`, see [\[SENSe:\]SWEep:TYPE](#) on page 182

FFT Filter Mode ← Sweep Type

Defines the filter mode to be used for FFT filters by defining the partial span size. The partial span is the span which is covered by one FFT analysis.

Auto ← FFT Filter Mode ← Sweep Type

The firmware determines whether to use wide or narrow filters to obtain the best measurement results.

SCPI command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:FFT](#) on page 175

Narrow ← FFT Filter Mode ← Sweep Type

For an RBW \leq 10kHz, the FFT filters with the smaller partial span are used. This allows you to perform measurements near a carrier with a reduced reference level due to a narrower analog prefilter.

SCPI command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:FFT](#) on page 175

Coupling Ratio

Opens a submenu to select the coupling ratios for functions coupled to the bandwidth.

This softkey and its submenu is available for measuring the Adjacent Channel Power, the Spectrum Emission Mask, the Occupied Bandwidth and the CCDF.

RBW/VBW Sine [1/1] ← Coupling Ratio

Sets the following coupling ratio:

"video bandwidth = resolution bandwidth"

This is the default setting for the coupling ratio resolution bandwidth/video bandwidth.

This is the coupling ratio recommended if sinusoidal signals are to be measured.

This setting is only effective for [Video BW Auto](#).

SCPI command:

BAND:VID:RAT 1, see [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#)
on page 177

RBW/VBW Pulse [.1] ← Coupling Ratio

Sets the following coupling ratio:

"video bandwidth = 10 × resolution bandwidth or"

"video bandwidth = 10 MHz (= max. VBW)."

This coupling ratio is recommended whenever the amplitudes of pulsed signals are to be measured correctly. The IF filter is exclusively responsible for pulse shaping. No additional evaluation is performed by the video filter.

This setting is only effective for [Video BW Auto](#).

SCPI command:

BAND:VID:RAT 10, see [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#)
on page 177

RBW/VBW Noise [10] ← Coupling Ratio

Sets the following coupling ratio:

"video bandwidth = resolution bandwidth/10"

At this coupling ratio, noise and pulsed signals are suppressed in the video domain. For noise signals, the average value is displayed.

This setting is only effective for the [Video BW Auto](#) selection in the main menu.

SCPI command:

BAND:VID:RAT 0.1, see [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#)
on page 177

RBW/VBW Manual ← Coupling Ratio

Activates the manual input of the coupling ratio.

The resolution bandwidth/video bandwidth ratio can be set in the range 0.001 to 1000.

This setting is only effective for the [Video BW Auto](#) selection in the main menu.

SCPI command:

BAND:VID:RAT 10, see [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#)
on page 177

Span/RBW Auto [100] ← Coupling Ratio

Sets the following coupling ratio:

"resolution bandwidth = span/100"

This coupling ratio is the default setting of the analyzer.

This setting is only effective for the [Res BW Auto](#) selection in the main menu.

SCPI command:

BAND:VID:RAT 0.001, see [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#) on page 177

Span/RBW Manual ← Coupling Ratio

Activates the manual input of the coupling ratio.

This setting is only effective for the [Res BW Auto](#) selection in the main menu.

The span/resolution bandwidth ratio can be set in the range 1 to 10000.

SCPI command:

BAND:VID:RAT 0.1, see [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#) on page 177

Default Coupling ← Coupling Ratio

Sets all coupled functions to the default state ("AUTO"). In addition, the ratio "RBW/VBW" is set to "SINE [1/1]" and the ratio "SPAN/RBW" to 100.

SCPI command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:AUTO](#) on page 174

[\[SENSe:\]BANDwidth|BWIDth:VIDeo:AUTO](#) on page 177

[\[SENSe:\]SWEep:TIME:AUTO](#) on page 182

Filter Type

Opens a submenu to select the filter type.

This softkey and its submenu are available for measuring the the Spectrum Emission Mask, the Occupied Bandwidth and the CCDF. Instead of opening a submenu, this softkey opens the "Sweep List" dialog box to select the filter type when measuring the Spectrum Emission Mask.

The submenu contains the following softkeys:

- Normal (3dB)
- Channel
- RRC
- 5-Pole (not available for sweep type "FFT")

For detailed information on filters see [chapter 4.4.3.5, "Selecting the Appropriate Filter Type"](#), on page 31 and [chapter 4.4.3.6, "List of Available RRC and Channel Filters"](#), on page 31.

SCPI command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:TYPE](#) on page 176

Softkeys of the Sweep Menu

The following table shows all softkeys available in the "Sweep" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Continuous Sweep	96
Single Sweep	96

Continue Single Sweep.....	96
Sweptime Manual.....	96
Sweptime Auto.....	97
Sweep Type.....	97
L Sweep.....	97
L FFT.....	97
L Auto.....	98
L FFT Filter Mode.....	98
L Auto.....	98
L Narrow.....	98
Sweep Count.....	98
Sweep Points.....	98

Continuous Sweep

Sets the continuous sweep mode: the sweep takes place continuously according to the trigger settings. This is the default setting.

The trace averaging is determined by the sweep count value (see the "Sweep Count" softkey, "Sweep Count" on page 64).

SCPI command:

INIT:CONT ON, see INITiate<n>:CONTinuous on page 211

Single Sweep

Sets the single sweep mode: after triggering, starts the number of sweeps that are defined by using the Sweep Count softkey. The measurement stops after the defined number of sweeps has been performed.

SCPI command:

INIT:CONT OFF, see INITiate<n>:CONTinuous on page 211

Continue Single Sweep

Repeats the number of sweeps set by using the Sweep Count softkey, without deleting the trace of the last measurement.

This is particularly of interest when using the trace configurations "Average" or "Max Hold" to take previously recorded measurements into account for averaging/maximum search.

SCPI command:

INITiate<n>:CONMeas on page 211

Sweptime Manual

Opens an edit dialog box to enter the sweep time.

Sweep time	
absolute max. sweep time value:	16000 s
absolute min. sweep time value:	zero span: 1 μ s
	span > 0: depends on device model (refer to data sheet)

Allowed values depend on the ratio of span to RBW and RBW to VBW. For details refer to the data sheet.

Numeric input is always rounded to the nearest possible sweep time. For rotary knob or UPARROW/DNARROW key inputs, the sweep time is adjusted in steps either downwards or upwards.

The manual input mode of the sweep time is indicated by a green bullet next to the "SWT" display in the channel bar. If the selected sweep time is too short for the selected bandwidth and span, level measurement errors will occur due to a too short settling time for the resolution or video filters. In this case, the analyzer displays the error message "UNCAL" and marks the indicated sweep time with a red bullet.

This softkey is available for RF measurements, but not for CCDF measurements.

SCPI command:

SWE:TIME:AUTO OFF, see [SENSe:]SWEep:TIME:AUTO on page 182

[SENSe:]SWEep:TIME on page 181

Sweeptime Auto

Couples the sweep time to the span, video bandwidth (VBW) and resolution bandwidth (RBW) (not available for zero span). If the span, resolution bandwidth or video bandwidth is changed, the sweep time is automatically adjusted.

The analyzer always selects the shortest sweep time that is possible without falsifying the signal. The maximum level error is < 0.1 dB, compared to using a longer sweep time.

This softkey is available for measuring the Adjacent Channel Power, the Spectrum Emission Mask and the Occupied Bandwidth.

SCPI command:

[SENSe:]SWEep:TIME:AUTO on page 182

Sweep Type

Opens a submenu to define the sweep type.

This softkey is available for measuring the Signal Power, the Adjacent Channel Power and the Occupied Bandwidth.

This function is not available in IQ Analyzer mode or for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

In frequency sweep mode, the analyzer provides several possible methods of sweeping:

- "Sweep" on page 93
- "FFT" on page 93 (not available with 5-Pole filters, channel filters or RRC filters, see [chapter 4.4.3.5, "Selecting the Appropriate Filter Type"](#), on page 31)
- "Auto" on page 93

Sweep ← Sweep Type

Sets the [Sweep Type](#) to standard analog frequency sweep.

In the standard sweep mode, the local oscillator is set to provide the spectrum quasi analog from the start to the stop frequency.

SCPI command:

SWE:TYPE SWE, see [SENSe:]SWEep:TYPE on page 182

FFT ← Sweep Type

Sets the [Sweep Type](#) to FFT mode.

The FFT sweep mode samples on a defined frequency value and transforms it to the spectrum by fast Fourier transformation (FFT).

FFT is not available when using 5-Pole filters, Channel filters or RRC filters.

SCPI command:

`SWE:TYPE FFT`, see `[SENSe:]SWEep:TYPE` on page 182

Auto ← Sweep Type

Automatically sets the fastest available [Sweep Type](#) for the current measurement. Auto mode is set by default.

SCPI command:

`SWE:TYPE AUTO`, see `[SENSe:]SWEep:TYPE` on page 182

FFT Filter Mode ← Sweep Type

Defines the filter mode to be used for FFT filters by defining the partial span size. The partial span is the span which is covered by one FFT analysis.

Auto ← FFT Filter Mode ← Sweep Type

The firmware determines whether to use wide or narrow filters to obtain the best measurement results.

SCPI command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:FFT` on page 175

Narrow ← FFT Filter Mode ← Sweep Type

For an RBW ≤ 10 kHz, the FFT filters with the smaller partial span are used. This allows you to perform measurements near a carrier with a reduced reference level due to a narrower analog prefilter.

SCPI command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:FFT` on page 175

Sweep Count

Opens an edit dialog box to enter the number of sweeps to be performed in the single sweep mode. Values from 0 to 32767 are allowed. If the values 0 or 1 are set, one sweep is performed. The sweep count is applied to all the traces in a diagram.

If the trace configurations "Average", "Max Hold" or "Min Hold" are set, the sweep count value also determines the number of averaging or maximum search procedures.

In continuous sweep mode, if sweep count = 0 (default), averaging is performed over 10 sweeps. For sweep count = 1, no averaging, maxhold or minhold operations are performed.

SCPI command:

`[SENSe:]SWEep:COUNT` on page 180

Sweep Points

Opens an edit dialog box to enter the number of measured values to be collected during one sweep.

- Entry via rotary knob:
 - In the range from 101 to 1001, the sweep points are increased or decreased in steps of 100 points.

- In the range from 1001 to 32001, the sweep points are increased or decreased in steps of 1000 points.
- Entry via keypad:
All values in the defined range can be set.

The default value is 691 sweep points.

SCPI command:

[SENSe:] SWEep: POINts on page 181

Softkeys of the Input/Output Menu for RF Measurements

The following chapter describes all softkeys available in the "Input/Output" menu for RF measurements. For CDA measurements, see [chapter 4.5.1.12, "Softkeys of the Input/Output Menu for CDA Measurements"](#), on page 72.

Input (AC/DC).....	99
Noise Source.....	99
Video Output.....	99
Power Sensor.....	99
Trigger Out.....	100

Input (AC/DC)

Toggles the RF input of the analyzer between AC and DC coupling.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

INPut:COUPling on page 200

Noise Source

Switches the supply voltage for an external noise source on or off. For details on connectors refer to the Quick Start Guide, "Front and Rear Panel" chapter.

SCPI command:

DIAGnostic<n>:SERVice:NSOource on page 211

Video Output

Sends a video output signal according to the measured level to the connector on the rear panel of the analyzer.

Note: Video output does not return valid values in IQ or FFT mode.

SCPI command:

OUTP:IF VID , see OUTPut:IF[:SOURce] on page 213

Power Sensor

For precise power measurement a power sensor can be connected to the instrument via the front panel (USB connector) or the rear panel (power sensor, option R&S FSV-B5). The Power Sensor Support firmware option (R&S FSV-K9) provides the power measurement functions for this test setup.

This softkey is only available if the analyzer option Power Sensor (R&S FSV-K9) is installed.

For details see the chapter "Instrument Functions Power Sensor (K9)" in the base unit description.

This softkey is available for RF measurements.

Trigger Out

Sets the Trigger Out port in the Additional Interfaces (option R&S FSV-B5 only) to low or high. Thus, you can trigger an additional device via the external trigger port, for example.

SCPI command:

[OUTPut:TRIGger](#) on page 213

4.6 Remote Control Commands (R&S FSV-K73)

In this section all remote control commands specific to the user equipment test option R&S FSV-K73 are described in detail. For details on conventions used in this chapter refer to [chapter 4.6.1, "Notation"](#), on page 101.

For further information on analyzer or basic settings commands, refer to the corresponding subsystem in the base unit description.

In particular, the following subsystems are identical to the base unit; refer to the base unit description:

- CALCulate:DELTamarker
- CALCulate:MARKer (except for the specific commands described in [chapter 4.6.2, "CALCulate subsystem \(R&S FSV-K73\)"](#), on page 104)
- DISPlay subsystem
- FORMat subsystem
- INITiate subsystem
- INPut subsystem
- MMEM subsystem
- OUTput subsystem
- SENSE subsystem (except for the specific commands described in [chapter 4.6.5, "SENSe subsystem \(R&S FSV-K73\)"](#), on page 158)
- TRIGger subsystem

4.6.1	Notation.....	101
4.6.2	CALCulate subsystem (R&S FSV-K73).....	104
4.6.2.1	CALCulate<n>CDPower subsystem	104
4.6.2.2	CALCulate:FEED subsystem.....	105
4.6.2.3	CALCulate<n>LIMit:ACPower Subsystem.....	107
4.6.2.4	CALCulate:MARKer subsystem.....	113
4.6.2.5	CALCulate<n>MARKer:FUNctIon subsystem.....	121
4.6.2.6	Other CALCulate Commands Referenced in this Manual.....	125

4.6.3	CONFigure:WCDPower subsystem (R&S FSV-K73).....	152
4.6.4	INSTRument subsystem.....	157
4.6.5	SENSE subsystem (R&S FSV-K73).....	158
4.6.5.1	SENSE:CDPower Subsystem.....	158
4.6.5.2	SENSE:POWer Subsystem.....	166
4.6.5.3	Other SENSE Commands Referenced in this Manual.....	172
4.6.6	STATus:QUESTionable subsystem (R&S FSV-K73).....	182
4.6.6.1	STATus:QUESTionable:SYNC subsystem (R&S FSV-K73).....	183
4.6.7	TRACe subsystem (R&S FSV-K73).....	184
4.6.8	Other Commands Referenced in this Manual.....	194
4.6.8.1	DISPlay Subsystem.....	195
4.6.8.2	INPut subsystem.....	199
4.6.8.3	TRIGGer Subsystem.....	207
4.6.8.4	Other Referenced Commands.....	210

4.6.1 Notation

In the following sections, all commands implemented in the instrument are first listed and then described in detail, arranged according to the command subsystems. The notation is adapted to the SCPI standard. The SCPI conformity information is included in the individual description of the commands.

Individual Description

The individual description contains the complete notation of the command. An example for each command, the *RST value and the SCPI information are included as well.

The options and operating modes for which a command can be used are indicated by the following abbreviations:

Abbreviation	Description
A	spectrum analysis
A-F	spectrum analysis – span > 0 only (frequency mode)
A-T	spectrum analysis – zero span only (time mode)
ADEMODO	analog demodulation (option R&S FSV-K7)
BT	Bluetooth (option R&S FSV-K8)
CDMA	CDMA 2000 base station measurements (option R&S FSV-K82)
EVDO	1xEV-DO base station analysis (option R&S FSV-K84)
GSM	GSM/Edge measurements (option R&S FSV-K10)

IQ	IQ Analyzer mode
OFDM	WiMAX IEEE 802.16 OFDM measurements (option R&S FSV-K93)
OFDMA/WiBro	WiMAX IEEE 802.16e OFDMA/WiBro measurements (option R&S FSV-K93)
NF	Noise Figure measurements (R&S FSV-K30)
PHN	Phase Noise measurements (R&S FSV-K40)
PSM	Power Sensor measurements (option R&S FSV-K9)
SFM	Stereo FM measurements (option R&S FSV-K7S)
SPECM	Spectrogram mode (option R&S FSV-K14)
TDS	TD-SCDMA base station / UE measurements (option R&S FSV-K76/K77)
VSA	Vector Signal Analysis (option R&S FSV-K70)
WCDMA	3GPP Base Station measurements (option R&S FSV-K72), 3GPP UE measurements (option R&S FSV-K73)
WLAN	WLAN TX measurements (option R&S FSV-K91)



The spectrum analysis mode is implemented in the basic unit. For the other modes, the corresponding options are required.

Upper/Lower Case Notation

Upper/lower case letters are used to mark the long or short form of the key words of a command in the description. The instrument itself does not distinguish between upper and lower case letters.

Special Characters

	A selection of key words with an identical effect exists for several commands. These keywords are indicated in the same line; they are separated by a vertical stroke. Only one of these keywords needs to be included in the header of the command. The effect of the command is independent of which of the keywords is used.
--	---

Example:

```
SENSe:FREQuency:CW|:FIXed
```

The two following commands with identical meaning can be created. They set the frequency of the fixed frequency signal to 1 kHz:

```
SENSe:FREQuency:CW 1E3
```

```
SENSe:FREQuency:FIXed 1E3
```

A vertical stroke in parameter indications marks alternative possibilities in the sense of "or". The effect of the command differs, depending on which parameter is used.

Example: Selection of the parameters for the command

```
[SENSe<1...4>:]AVERage<1...4>:TYPE VIDEo | LINear
```

[]	Key words in square brackets can be omitted when composing the header. The full command length must be accepted by the instrument for reasons of compatibility with the SCPI standards. Parameters in square brackets can be incorporated optionally in the command or omitted as well.
----	---

{}	Parameters in braces can be incorporated optionally in the command, either not at all, once or several times.
----	---

Description of Parameters

Due to the standardization, the parameter section of SCPI commands consists always of the same syntactical elements. SCPI has therefore specified a series of definitions, which are used in the tables of commands. In the tables, these established definitions are indicated in angled brackets (<...>) and is briefly explained in the following.

For details see the chapter "SCPI Command Structure" in the base unit description.

<Boolean>

This keyword refers to parameters which can adopt two states, "on" and "off". The "off" state may either be indicated by the keyword OFF or by the numeric value 0, the "on" state is indicated by ON or any numeric value other than zero. Parameter queries are always returned the numeric value 0 or 1.

<numeric_value> <num>

These keywords mark parameters which may be entered as numeric values or be set using specific keywords (character data). The following keywords given below are permitted:

- MAXimum: This keyword sets the parameter to the largest possible value.
- MINimum: This keyword sets the parameter to the smallest possible value.
- DEFault: This keyword is used to reset the parameter to its default value.
- UP: This keyword increments the parameter value.
- DOWN: This keyword decrements the parameter value.

The numeric values associated to MAXimum/MINimum/DEFault can be queried by adding the corresponding keywords to the command. They must be entered following the quotation mark.

Example:

```
SENSe:FREQuency:CENTer? MAXimum
```

Returns the maximum possible numeric value of the center frequency as result.

<arbitrary block program data>

This keyword is provided for commands the parameters of which consist of a binary data block.

4.6.2 CALCulate subsystem (R&S FSV-K73)

The CALCulate subsystem contains commands for converting instrument data, transforming and carrying out corrections. These functions are carried out subsequent to data acquisition, i.e. following the SENSE subsystem.

Note that most commands in the CALCulate subsystem are identical to the base unit; only the commands specific to this option are described here.

4.6.2.1	CALCulate<n>CDPower subsystem	104
4.6.2.2	CALCulate:FEED subsystem.....	105
4.6.2.3	CALCulate<n>LIMit:ACPower Subsystem.....	107
4.6.2.4	CALCulate:MARKer subsystem.....	113
4.6.2.5	CALCulate<n>MARKer:FUNction subsystem.....	121
4.6.2.6	Other CALCulate Commands Referenced in this Manual.....	125
4.6.2.6.1	CALCulate:DELTamarker subsystem.....	126
4.6.2.6.2	CALCulate:LIMit subsystem.....	134
4.6.2.6.3	CALCulate:LIMit:ESpectrum subsystem.....	141
4.6.2.6.4	CALCulate:PSE subsystem.....	146
4.6.2.6.5	CALCulate:STATistics subsystem.....	148
4.6.2.6.6	Other Referenced CALCulate Commands.....	152

4.6.2.1 CALCulate<n>CDPower subsystem

CALCulate<n>:CDPower:Mapping.....	104
-----------------------------------	-----

CALCulate<n>:CDPower:Mapping <SignalBranch>

This command adjusts the mapping for the result displays Code Domain Power and Code Domain Error Power.

Suffix:

<n> 1...4
 window

Parameters:

<SignalBranch> I | Q | AUTO

I

The I branch of the signal will be used for evaluation

Q

The Q branch of the signal will be used for evaluation

AUTO

The branch selected by the dialog "Selected Channel" will be used for evaluation.

*RST: AUTO

Example: CALC:CDP:MAPPING AUTO

Mode: CDMA, WCDMA

4.6.2.2 CALCulate:FEED subsystem

The CALCulate:FEED subsystem selects the result display for the different screens in the code domain analyzer. This corresponds to the result display selection in manual operation.

CALCulate<n>:FEED.....105

CALCulate<n>:FEED <Evaluation>

This command selects the evaluation mode for the different screens.

For a description of the evaluation modes see [chapter 4.4.2, "Measurements and Result Diagrams"](#), on page 25.

Suffix:

<n> window

Parameters:

<Evaluation>

'XPOW:CDP' | 'XPOW:CDP:ABSolute' | 'XPOW:CDP:RATio' |
 'XPOW:CDP:OVERview' | 'XPOWer:CDEP' |
 'XTIME:CDPower:CHIP:EVM' |
 'XTIME:CDPower:CHIP:MAGNitude' |
 'XTIME:CDPower:CHIP:PHASe' | 'XTIM:CDP:ERR:SUMM' |
 'XTIM:CDP:ERR:CTABLE' | 'XTIM:CDP:ERR:PCDomain' |
 'XTIM:CDP:MACCuracy' | 'XTIM:CDP:PVSYmbol' |
 'XTIM:CDP:COMP:CONStellation' | 'XTIM:CDP:FVSLot' |
 'XTIM:CDP:PVSLot' | 'XTIM:CDP:PVSLot:ABSolute' |
 'XTIM:CDP:PVSLot:RATio' | 'XTIM:CDP:BSTReam' |
 'XTIM:CDP:SYMB:CONStellation' | 'XTIM:CDP:SYMB:EVM' |
 'XTIME:CDPower:SYMBol:EVM:PHASe' |
 'XTIME:CDPower:SYMBol:EVM:MAGNitude'

'XPOW:CDEPower'

Result display of code domain error power as bar graph

'XPOW:CDP'

Result display of code domain power as bar graph [absolute scaling]

'XPOW:CDP:ABSolute'

Result display of code domain power as bar graph [absolute scaling]

'XTIM:CDP:BSTReam'

Result display of bit stream

'XTIME:CDP:CHIP:EVM'

Result display error vector magnitude (EVM) versus chip

'XTIME:CDP:CHIP:MAGNitude'

Result display magnitude error versus chip

'XTIME:CDPower:CHIP:PHASe'

Result display phase error versus chip

'XTIM:CDP:COMP:CONStellation'

Result display of composite constellation

'XTIM:CDP:ERR:CTABLE'

Result display of channel assignment table

'XTIM:CDP:ERR:PCDomain'

Result display of peak code domain error

'XTIM:CDP:ERR:SUMMary'

Result display in tabular form

'XTIM:CDP:FVSLot'

Result display of frequency error versus slot

'XTIM:CDP:MACCuracy'

Result display of composite EVM (error vector magnitude referenced to the overall signal)

'XPOW:CDP:OVERview'

Result display of code domain power ratio as bar graph [relative scaling]

'XTIM:CDP:PVSLot'

Result display of power versus slot

'XTIM:CDP:PVSLot:ABSolute'

Result display of power versus slot [absolute scaling]

'XTIM:CDP:PVSLot:RATio'

Result display of power versus slot [absolute scaling]

'XTIM:CDP:PVSYmbol'

Result display of power versus symbol

'XPOW:CDP:RATio'

Result display of code domain power as bar graph [relative scaling]

'XTIM:CDP:SYMB:CONStellation'

Result display of symbol constellation

'XTIM:CDP:SYMB:EVM'

Result display of symbol error vector magnitude

'XTIME:CDPower:SYMBol:EVM:MAGNitude'

Result display of the symbol magnitude error

'XTIME:CDPower:SYMBol:EVM:PHASe'

Result display of the symbol phase error

*RST: depends on the active screen

Example:

CALC3:FEED 'XTIM:CDP:ERR:SUMM'

Activates the result summary in screen C.

Mode:

WCDMA

4.6.2.3 CALCulate<n>LIMit:ACPower Subsystem

The CALCulate<n>LIMit:ACPower subsystem defines limit checking for adjacent channel power measurements.

CALCulate<n>:LIMit1:ACPower[:STATe].....	108
CALCulate<n>:LIMit1:ACPower:ACHannel[:RELative].....	108
CALCulate<n>:LIMit1:ACPower:ACHannel[:RELative]:STATe.....	109
CALCulate<n>:LIMit1:ACPower:ACHannel:ABSolute.....	109
CALCulate<n>:LIMit1:ACPower:ACHannel:ABSolute:STATe.....	110
CALCulate<n>:LIMit1:ACPower:ACHannel:RESult.....	110
CALCulate<n>:LIMit1:ACPower:ALternate<ch>[:RELative].....	111
CALCulate<n>:LIMit1:ACPower:ALternate<ch>[:RELative]:STATe.....	111
CALCulate<n>:LIMit1:ACPower:ALternate<1...11>ABSolute.....	112
CALCulate<n>:LIMit1:ACPower:ALternate<1...11>:ABSolute:STATe.....	112
CALCulate<n>:LIMit1:ACPower:ALternate<1...11>:RESult.....	113

CALCulate<n>:LIMit1:ACPpower[:STATe] <State>

This command switches on and off the limit check for adjacent channel power measurements in the selected measurement window. The commands

`CALCulate<n>LIMit:ACPpower:ACHannel:STATe` or

`CALCulate<n>LIMit:ACPpower:ALternate:STATe` must be used in addition to specify whether the limit check is to be performed for the upper/lower adjacent channel or for the alternate adjacent channels.

Suffix:

<n> n
irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example: `CALC:LIM:ACP ON`

Mode: WCDMA

CALCulate<n>:LIMit1:ACPpower:ACHannel[:RELative]

This command defines the relative limit of the upper/lower adjacent channel for adjacent channel power measurements in the selected measurement window. The reference value for the relative limit value is the measured channel power.

It should be noted that the relative limit value has no effect on the limit check as soon as it is below the absolute limit value defined with

`CALCulate<n>LIMit:ACPpower:ACHannel:ABSolute`. This mechanism allows automatic checking of the absolute basic values of adjacent channel power as defined in mobile radio standards.

Suffix:

<n> n
irrelevant

Parameters:

*RST: 0 dB

The first numeric value is the limit for the upper (lower) adjacent channel. The second value is ignored but must be indicated for reasons of compatibility with the FSE family.

Example: `CALC:LIM:ACP:ACH 30DB, 30DB`
'Sets the relative limit value in for the power in the lower and upper adjacent channel to 30 dB below the channel power.'

Mode: WCDMA

CALCulate<n>:LIMit1:ACPpower:ACHannel[:RELative]:STATe <State>

This command activates the limit check for the relative limit value of the adjacent channel when adjacent channel power measurement is performed. Before the command, the limit check must be activated using `CALC:LIM:ACP:STAT ON`.

The result can be queried with `CALC:LIM:ACP:ACH:RES?`. It should be noted that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no valid results are available.

Suffix:

<n> n
 irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:

`CALC:LIM:ACP:ACH:REL:STAT ON`
'Switches on the check of the relative limit values for adjacent channels.

Mode: WCDMA

CALCulate<n>:LIMit1:ACPpower:ACHannel:ABSolute

This command defines the absolute limit value for the lower/upper adjacent channel during adjacent-channel power measurement (Adjacent Channel Power) in the selected measurement window.

It should be noted that the absolute limit value has no effect on the limit check as soon as it is below the relative limit value defined with `CALC:LIM:ACP:ACH:REL`. This mechanism allows automatic checking of the absolute basic values of adjacent channel power as defined in mobile radio standards.

Suffix:

<n> n
 irrelevant

Parameters:

*RST: -200DBM
The first value is the limit for the lower and the upper adjacent channel. The second limit value is ignored but must be indicated for reasons of compatibility with the FSE family.

Example:

`CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM`
'Sets the absolute limit value in for the power in the lower and upper adjacent channel to 35 dBm.

Mode: WCDMA

CALCulate<n>:LIMit1:ACPpower:ACHannel:ABSolute:STATe <State>

This command activates the limit check for the adjacent channel when adjacent-channel power measurement (Adjacent Channel Power) is performed. Before the command, the limit check for the channel/adjacent-channel measurement must be globally switched on using `CALC:LIM:ACP ON`.

The result can be queried with `CALC:LIM:ACP:ACH:RES?`. It should be noted that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no valid results are available.

Suffix:

<n> 1...4
irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:

`CALC:LIM:ACP:ACH:ABS:STAT ON`
'Switches on the check of absolute limit values for the adjacent channels.

Mode: WCDMA

CALCulate<n>:LIMit1:ACPpower:ACHannel:RESult?

This command queries the result of the limit check for the upper/lower adjacent channel in the selected measurement window when adjacent channel power measurement is performed.

If the power measurement of the adjacent channel is switched off, the command produces a query error.

Suffix:

<n> 1...4
irrelevant

Parameters:

The result is returned in the form <result>, <result> where
<result> = PASSED | FAILED, and where the first returned value denotes the lower, the second denotes the upper adjacent channel.

Example:

`CALC:LIM:ACP:ACH:RES?`
Queries the limit check result in the adjacent channels Sets the relative limit value for the power in the lower and upper adjacent channel to 30 dB below the channel power.

Usage: Query only

Mode: WCDMA

CALCulate<n>:LIMit1:ACPpower:ALternate<ch>[:RELative]

This command defines the limit for the selected alternate adjacent channel in the selected measurement window for adjacent channel power measurements. The reference value for the relative limit value is the measured channel power.

The numeric suffix after ALternate<1...11> denotes the first or the second alternate channels. It should be noted that the relative limit value has no effect on the limit check as soon as it is below the absolute limit defined with `CALC:LIM:ACP:ALT:ABS`. This mechanism allows automatic checking of the absolute basic values of adjacent channel power as defined in mobile radio standards.

Suffix:

<n>	1...4
	irrelevant
<ch>	1...11
	alternate channel

Parameters:

*RST: 0dB
The first value is the limit for the lower and the upper alternate adjacent channel. The second limit value is ignored but must be indicated for reasons of compatibility with the FSE family.

Example:

`CALC:LIM:ACP:ALT2 30DB, 30DB`

'Sets the relative limit value for the power in the lower 'and upper second alternate adjacent channel to 30 dB below the channel power.

Mode: WCDMA

CALCulate<n>:LIMit1:ACPpower:ALternate<ch>[:RELative]:STATE <State>

This command activates the limit check for the selected alternate adjacent channel in the selected measurement window for adjacent channel power measurements. Before the command, the limit check must be activated using `CALC:LIM:ACP:STAT ON`.

The numeric suffix after ALternate denotes alternate channel.

The result can be queried with `CALC:LIM:ACP:ALT<1...11>:RES?`. It should be noted that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no valid results are obtained.

Suffix:

<n>	1...4
	irrelevant
<ch>	1...11
	alternate channel

Parameters:

<State>
*RST: OFF

Example: `CALC:LIM:ACP:ACH:REL:STAT ON`
 'Switches on the check of the relative limit values for the first alternate adjacent channels

Mode: WCDMA

CALCulate<n>:LIMit1:ACPpower:ALTErnate<1...11>ABSolute

This command defines the absolute limit value for the selected alternate adjacent channel power measurement (Adjacent Channel Power) in the selected measurement window.

The numeric suffix after ALTErnate denotes the first or the second alternate channel.

It should be noted that the absolute limit value for the limit check has no effect as soon as it is below the relative limit value defined with `CALC:LIM:ACP:ALT:REL`. This mechanism allows automatic checking of the absolute basic values defined in mobile radio standards for the power in adjacent channels.

The suffix <n> is irrelevant.

Parameters:

*RST: -200DBM

The first value is the limit for the lower and the upper alternate adjacent channel. The second limit value is ignored but must be indicated for reasons of compatibility with the FSE family.

Example: `CALC:LIM:ACP:ALT2:ABS -35DBM, -35DBM`
 'Sets the absolute limit value for the power in the lower and upper second alternate adjacent channel to -35 dBm.

Mode: WCDMA

CALCulate<n>:LIMit1:ACPpower:ALTErnate<1...11>ABSolute:STATe <State>

This command activates the limit check for the selected alternate adjacent channel in the selected measurement window for adjacent channel power measurement (Adjacent Channel Power).

Before the command, the limit check must be globally switched on for the channel/adjacent channel power with the command `CALC:LIM:ACP:STAT ON`.

The numeric suffix after ALTErnate denotes the alternate channel.

The result can be queried with `CALC:LIM:ACP:ALT:RES?`. It should be noted that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no valid results are available.

Suffix:

<n> 1...4
 irrelevant

Parameters:

ON | OFF

*RST: OFF

Example:

CALC:LIM:ACP:ACH:ABS:STAT ON

'Switches on the check of absolute limit values for the first alternate adjacent channels.

Mode:

WCDMA

CALCulate<n>:LIMit1:ACPpower:ALTErnate<1...11>:RESult?

This command queries the result of the limit check for the selected alternate adjacent channel in the selected measurement window for adjacent channel power measurements.

The numeric suffix after ALTErnate denotes the alternate channel.

If the power measurement of the adjacent channel is switched off, the command produces a query error.

Suffix:

<n> 1...4
irrelevant

Parameters:

The result is returned in the form <result>, <result> where <result> = PASSED | FAILED and where the first (second) returned value denotes the lower (upper) alternate adjacent channel.

Example:

CALC:LIM:ACP:ALT2:RES?

'Queries the limit check result in the second alternate adjacent channels.

Usage:

Query only

Mode:

WCDMA

4.6.2.4 CALCulate:MARKer subsystem

CALCulate<n>:MARKer<m>:AOFF.....	114
CALCulate<n>:MARKer<m>:MAXimum:LEFT.....	114
CALCulate<n>:MARKer<m>:MAXimum:NEXT.....	114
CALCulate<n>:MARKer<m>:MAXimum[:PEAK].....	115
CALCulate<n>:MARKer<m>:MAXimum:RIGHT.....	115
CALCulate<n>:MARKer<m>:MINimum:LEFT.....	115
CALCulate<n>:MARKer<m>:MINimum:NEXT.....	116
CALCulate<n>:MARKer<m>:MINimum[:PEAK].....	116
CALCulate<n>:MARKer<m>:MINimum:RIGHT.....	117
CALCulate<n>:MARKer<m>:POWER:RESult:PHZ.....	117
CALCulate<n>:MARKer<m>[:STATE].....	117
CALCulate<n>:MARKer<m>:TRACe.....	118

CALCulate<n>:MARKer<m>:X.....	119
CALCulate<n>:MARKer<m>:X:SLIMits[:STATe].....	119
CALCulate<n>:MARKer<m>:X:SLIMits:ZOOM.....	119
CALCulate<n>:MARKer<m>:Y.....	120

CALCulate<n>:MARKer<m>:AOFF

This command switches off all active markers, delta markers, and marker measurement functions in the specified window.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
 <m> depends on mode
 irrelevant

Example:

CALC:MARK:AOFF
 Switches off all markers.

Mode:

all

CALCulate<n>:MARKer<m>:MAXimum:LEFT

This command positions the marker to the next smaller maximum value to the left of the current value (i.e. in descending X values) on the trace in the window specified by the suffix <n>.

If no next smaller maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
 <m> marker number

Example:

CALC:MARK2:MAX:LEFT
 Positions marker 2 to the next lower maximum value to the left of the current value.

Mode:

A, ADEMOD, CDMA, EVDO, TDS, WCDMA, VSA, SPECM

CALCulate<n>:MARKer<m>:MAXimum:NEXT

This command positions the marker to the next smaller maximum value of the corresponding trace in the window specified by the suffix <n>.

If no next smaller maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
 <m> marker number

Example: `CALC:MARK2:MAX:NEXT`
 Positions marker 2 to the next lower maximum value.

Mode: A, ADEMOD, CDMA, EVDO, TDS, WCDMA, VSA, SPECM

CALCulate<n>:MARKer<m>:MAXimum[:PEAK]

This command positions the marker to the current maximum value of the corresponding trace in the specified window. The corresponding marker is activated first or switched to the marker mode.

If no maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> depends on mode
 marker number; For applications that do not have more than 1 marker, the suffix <m> is irrelevant.

Example: `CALC:MARK2:MAX`
 Positions marker 2 to the maximum value of the trace.

Mode: A, ADEMOD, CDMA, EVDO, TDS, WCDMA, VSA, SPECM, NF

CALCulate<n>:MARKer<m>:MAXimum:RIGHT

This command positions the marker to the next smaller maximum value to the right of the current value (i.e. in ascending X values) on the corresponding trace in the window specified by the suffix <n>.

If no next smaller maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> marker number

Example: `CALC:MARK2:MAX:RIGHT`
 Positions marker 2 to the next lower maximum value to the right of the current value.

Mode: A, ADEMOD, CDMA, EVDO, TDS, WCDMA, VSA, SPECM

CALCulate<n>:MARKer<m>:MINimum:LEFT

This command positions the marker to the next higher minimum value to the left of the current value (i.e. in descending X direction) on the corresponding trace in the window specified by the suffix <n>.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
 <m> marker number

Example:

`CALC:MARK2:MIN`
 Positions marker 2 to the minimum value of the trace.
`CALC:MARK2:MIN:LEFT`
 Positions marker 2 to the next higher minimum value to the left of the current value.

Mode:

A, ADEMOD, CDMA, EVDO, TDS, WCDMA, SPECM, VSA

CALCulate<n>:MARKer<m>:MINimum:NEXT

This command positions the marker to the next higher minimum value of the corresponding trace in the window specified by the suffix <n>.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
 <m> marker number

Example:

`CALC:MARK2:MIN`
 Positions marker 2 to the minimum value of the trace.
`CALC:MARK2:MIN:NEXT`
 Positions marker 2 to the next higher maximum value.

Mode:

A, ADEMOD, CDMA, EVDO, SPECM, TDS, VSA, WCDMA

CALCulate<n>:MARKer<m>:MINimum[:PEAK]

This command positions the marker to the current minimum value of the corresponding trace in the specified window. The corresponding marker is activated first or switched to marker mode, if necessary.

If no minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
 <m> depends on mode
 marker number; For applications that do not have more than 1 marker, the suffix <m> is irrelevant.

Example: `CALC:MARK2:MIN`
Positions marker 2 to the minimum value of the trace.

Mode: A, ADEMOD, CDMA, EVDO, TDS, WCDMA, VSA, SPECM, NF

CALCulate<n>:MARKer<m>:MINimum:RIGHT

This command positions the marker to the next higher minimum value to the right of the current value (i.e. in ascending X direction) on the corresponding trace in the window specified by the suffix <n>.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> marker number

Example: `CALC:MARK2:MIN`
Positions marker 2 to the minimum value of the trace.
`CALC:MARK2:MIN:RIGH`
Positions marker 2 to the next higher minimum value to the right of the current value.

Mode: A, ADEMOD, CDMA, EVDO, SPECM, TDS, VSA, WCDMA

CALCulate<n>:MARKer<m>:POWER:RESult:PHZ <State>

This command switches the query response of the power measurement results in the indicated measurement window between output of absolute values (OFF) and output referred to the measurement bandwidth (ON). The measurement results are output with `CALC:MARK:FUNC:POW:RES?`.

Parameters:

<State> ON: Results output referred to measurement bandwidth.

*RST: OFF

OFF: Results output in absolute values.

Example: `CALC:MARK:FUNC:POW:RES:PHZ ON`

Mode: WCDMA

CALCulate<n>:MARKer<m>[:STATe] <State>

This command activates a marker in the specified window. If no indication is made, marker 1 is selected automatically. If activate, the marker is switched to normal mode.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> depends on mode
marker number; For applications that do not have more than 1 marker, the suffix <m> is irrelevant.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CALC:MARK3 ON

Switches on marker 3 or switches to marker mode.

Mode: all

CALCulate<n>:MARKer<m>:TRACe <Trace>

This command assigns the selected marker to the indicated trace in the specified window. The corresponding trace must be active, i.e. its status must not be "BLANK".

If necessary, the corresponding marker is switched on prior to the assignment.

In the persistence spectrum result display, the command also defines if the delta marker is positioned on the persistence trace or the maxhold trace.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> depends on mode
marker number; For applications that do not have more than 1 marker, the suffix <m> is irrelevant.

Parameters:

<Trace> **1 to 6**

Trace number the marker is assigned to.

MAXHold

Defines the maxhold trace as the trace to put the delta marker on. This parameter is available only for the persistence spectrum result display.

WRITE

Defines the persistence trace as the trace to put the delta marker on. This parameter is available only for the persistence spectrum result display.

Example:

CALC:MARK3:TRAC 2

Assigns marker 3 to trace 2.

Mode: all

CALCulate<n>:MARKer<m>:X <Position>

This command positions the selected marker to the indicated x-value in the window specified by the suffix <n>.

If marker 2, 3 or 4 is selected and used as delta marker, it is switched to marker mode.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
 <m> marker number

Parameters:

<Position> 0 to MAX (frequency | sweep time | level)

Example:

CALC:MARK2:X 1.7MHz
 Positions marker 2 to frequency 1.7 MHz.

Mode:

ALL

CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] <State>

This command switches between a limited (ON) and unlimited (OFF) search range.

If the power measurement in zero span is active, this command limits the evaluation range on the trace.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
 <m> marker

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:MARK:X:SLIM ON
 Switches on search limitation.

Mode:

all

CALCulate<n>:MARKer<m>:X:SLIMits:ZOOM <State>

This command sets the limits of the search range for markers and delta markers to the zoom area in the window specified by the suffix <n>.

Note: The function is only available if the search limit for marker and delta marker is switched on (see [CALCulate<n>:MARKer<m>:X:SLIMits\[:STATe\]](#) on page 119).

Suffix:

<n> irrelevant
 <m> irrelevant

Parameters:**<State>** ON | OFF***RST:** OFF**Example:**

CALC:MARK:X:SLIM:ZOOM ON

Switches the search limit function on.

CALC:MARK:X:SLIM:RIGH 20MHz

Sets the right limit of the search range to 20 MHz.

Mode:

all

CALCulate<n>:MARKer<m>:Y <MarkerPosition>

This command queries the measured value of the selected marker in the window specified by the suffix <n>. The corresponding marker is activated before or switched to marker mode, if necessary.

To obtain a correct query result, a complete sweep with synchronization to the sweep end must be performed after the change of a parameter and before the query of the Y value. This is only possible in single sweep mode.

Suffix:**<n>** window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.**<m>** marker number**Parameters:****<MarkerPosition>** Defines the vertical marker position in the persistence spectrum result display.**Return values:****<Result>** The measured value of the selected marker is returned. In I/Q Analyzer mode, if the result display configuration "Real/Imag (I/Q)" is selected, this query returns the Real (Q) value of the marker first, then the Imag (I) value.**Example:**

INIT:CONT OFF

Switches to single sweep mode.

CALC:MARK2 ON

Switches marker 2.

INIT;*WAI

Starts a sweep and waits for the end.

CALC:MARK2:Y?

Outputs the measured value of marker 2.

In I/Q Analyzer mode, for "Real/Imag (I/Q)", for example:

1.852719887E-011,0

Mode:

A, ADEMOD, BT, CDMA, EVDO, I/Q, GSM, TDS, WCDMA, VSA

4.6.2.5 CALCulate<n>MARKer:FUNction subsystem

The CALCulate<n>MARKer:FUNction subsystem checks the marker functions in the instrument.

CALCulate<n>:MARKer<m>:FUNction:CPICh.....	121
CALCulate<n>:MARKer<m>:FUNction:PCCPch.....	121
CALCulate<n>:MARKer<m>:FUNction:POWer:RESult.....	121
CALCulate<n>:MARKer<m>:FUNction:POWer:SElect.....	122
CALCulate<n>:MARKer<m>:FUNction:WCDPower:MS:RESult.....	123
CALCulate<n>:MARKer<m>:FUNction:ZOOM.....	125

CALCulate<n>:MARKer<m>:FUNction:CPICh

This command sets the marker to channel 0.

This command is only available in code domain power and code domain error power result diagrams.

Suffix:

<n> window; depends on the selected display mode for which the marker is to be valid

<m> marker number; only 1 allowed

Example: CALC:MARK:FUNC:CPIC

Mode: WCDMA

CALCulate<n>:MARKer<m>:FUNction:PCCPch

This command sets the marker to the position of the PCCPCH.

This command is only available in code domain power and code domain error power result diagrams.

Suffix:

<n> window; depends on the selected display mode for which the marker is to be valid

<m> marker number; only 1 allowed

Example: CALC:MARK:FUNC:PCCP

Mode: WCDMA

CALCulate<n>:MARKer<m>:FUNction:POWer:RESult? <ResultType>

This command queries the result of the performed power measurement in the window specified by the suffix <n>. If necessary, the measurement is switched on prior to the query.

The channel spacings and channel bandwidths are configured in the SENSE:POWer subsystem.

To obtain a correct result, a complete sweep with synchronization to the end of the sweep must be performed before a query is output. Synchronization is possible only in the single sweep mode.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> marker number

Parameters:

<ResultType> ACPower | CPOWer

ACPower

Adjacent-channel power measurement

Results are output in the following sequence, separated by commas:

Power of transmission channel

Power of lower adjacent channel

Power of upper adjacent channel

Power of lower alternate channel 1

Power of upper alternate channel 1

Power of lower alternate channel 2

Power of upper alternate channel 2

The number of measured values returned depends on the number of adjacent/alternate channels selected with `[SENSe:]POWer:ACHannel:ACPairs`.

`[SENSe:]POWer:ACHannel:ACPairs`.

With logarithmic scaling (RANGE "LOG"), the power is output in the currently selected level unit; with linear scaling (RANGE "LIN dB" or "LIN %"), the power is output in W. If `[SENSe:]POWer:ACHannel:MODE` is set to "REL", the adjacent/alternate-channel power is output in dB.

CPOWer

Channel power measurement

In a Spectrum Emission Mask measurement, the query returns the power result for the reference range, if this power reference type is selected.

With logarithmic scaling (RANGE LOG), the channel power is output in the currently selected level unit; with linear scaling (RANGE LIN dB or LIN %), the channel power is output in W.

Mode: A-F, CDMA, EVDO, TDS, WCDMA

CALCulate<n>:MARKer<m>:FUNCTION:POWer:SElect <MeasType>

This command selects – and switches on – the specified power measurement type in the window specified by the suffix <n>.

The channel spacings and channel bandwidths are configured in the `SENSe:POWer` subsystem.

Note: If CPOWer is selected, the number of adjacent channels ([SENSe:]POWer:ACHannel:ACPairs) is set to 0. If ACPower is selected, the number of adjacent channels is set to 1, unless adjacent-channel power measurement is switched on already.

The channel/adjacent-channel power measurement is performed for the trace selected with [SENSe:]POWer:TRACe.

The occupied bandwidth measurement is performed for the trace on which marker 1 is positioned. To select another trace for the measurement, marker 1 is to be positioned on the desired trace by means of CALCulate<n>:MARKer<m>:TRACe.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
 <m> marker number

Parameters:

<MeasType> ACPower | CPOWer | MCACpower | OBANdwidth | OBWidth | CN | CNO

ACPower

Adjacent-channel power measurement with a single carrier signal

CPOWer

Channel power measurement with a single carrier signal (equivalent to adjacent-channel power measurement with "NO. OF ADJ CHAN" = 0)

MCACpower

Channel/adjacent-channel power measurement with several carrier signals

OBANdwidth | OBWidth

Measurement of occupied bandwidth

CN

Measurement of carrier-to-noise ratio

CNO

Measurement of carrier-to-noise ratio referenced to 1 Hz bandwidth

Example:

CALC:MARK:FUNC:POW:SEL ACP

Switches on adjacent-channel power measurement.

Mode:

A-F, CDMA, EVDO, TDS, WCDMA

CALCulate<n>:MARKer<m>:FUNctio:n:WCDPower:MS:RESult? <ResultType>

This command queries the measured and calculated results of the 3GPP FDD UE code domain power measurement.

Suffix:

<n> irrelevant
 <m> irrelevant

Query parameters:

<ResultType>

PTOTal | TFRame | MACCuracy | EVMRms | CERRor | SRATe |
 CDPabsolute | IQOffset | MTYPE | RHO | CMAPping | FERRor |
 TOFFset | PCDerror | EVMPeak | CSLot | CHANnel | CDPRelative
 | IQIMbalance | PSYMBOL | ACHannels | MPIC

PTOTal

total power

TFRame

trigger to frame

MACCuracy

composite EVM

EVMRms

error vector magnitude RMS

CERRor

chip rate error

SRATe

symbol rate

CDPabsolute

channel power absolute

IQOffset

I/Q offset

MTYPE

modulation type:

BPSK-I: 0

BPSK-Q: 1

4PAM-I: 6

4PAM-Q: 7

NONE: 15

RHO

rho value for every slot

CMAping

Channel component

FERRor

frequency error in Hz

TOFFset

timing offset

PCDerror

peak code domain error

EVMPeak

error vector magnitude peak

CSLot

channel slot number

CHANnel

channel number

CDPRelative

channel power relative

IQIMbalance

I/Q imbalance

PSYMBOL

Number of pilot bits

ACHannels

Number of active channels

MPIC

average power of the inactive codes for the selected slot

Example:	CALC:MARK:FUNC:WCDP:RES? PTOT
Usage:	Query only
Mode:	WCDMA MS

CALCulate<n>:MARKer<m>:FUNction:ZOOM <State>

If marker zoom is activated, the number of channels displayed on the screen in code domain power and code domain error power result diagram is reduced to 64.

The currently selected marker defines the center of the displayed range.

Suffix:

<n>	irrelevant
<m>	1...4 marker number

Parameters:

<State>	ON OFF
*RST:	OFF

Example:	CALC:MARK:FUNC:ZOOM ON
-----------------	------------------------

Mode:	CDMA, EVDO, PHN, TDS, WCDMA
--------------	-----------------------------

4.6.2.6 Other CALCulate Commands Referenced in this Manual

4.6.2.6.1	CALCulate:DELTamarker subsystem.....	126
4.6.2.6.2	CALCulate:LIMit subsystem.....	134
4.6.2.6.3	CALCulate:LIMit:ESPectrum subsystem.....	141
4.6.2.6.4	CALCulate:PSE subsystem.....	146
4.6.2.6.5	CALCulate:STATistics subsystem.....	148
4.6.2.6.6	Other Referenced CALCulate Commands.....	152

CALCulate:DELTamarker subsystem

CALCulate<n>:DELTamarker<m>:FUNction:FIXed:RPOint:X.....	126
CALCulate<n>:DELTamarker<m>:FUNction:FIXed:RPOint:Y.....	127
CALCulate<n>:DELTamarker<m>:FUNction:FIXed[:STATe].....	127
CALCulate<n>:DELTamarker<m>:FUNction:PNOise:AUTO.....	128
CALCulate<n>:DELTamarker<m>:FUNction:PNOise[:STATe].....	128
CALCulate<n>:DELTamarker<m>:LINK.....	129
CALCulate<n>:DELTamarker<m>:MAXimum:LEFT.....	129
CALCulate<n>:DELTamarker<m>:MAXimum:NEXT.....	130
CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK].....	130
CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT.....	130
CALCulate<n>:DELTamarker<m>:MINimum:LEFT.....	131
CALCulate<n>:DELTamarker<m>:MINimum:NEXT.....	131
CALCulate<n>:DELTamarker<m>:MINimum[:PEAK].....	131
CALCulate<n>:DELTamarker<m>:MINimum:RIGHT.....	132
CALCulate<n>:DELTamarker<m>[:STATe].....	132
CALCulate<n>:DELTamarker<m>:TRACe.....	132
CALCulate<n>:DELTamarker<m>:X.....	133
CALCulate<n>:DELTamarker<m>:X:RELative.....	133
CALCulate<n>:DELTamarker<m>:Y.....	134

CALCulate<n>:DELTamarker<m>:FUNction:FIXed:RPOint:X <Reference>

For a measurement with a fixed reference value (see [CALCulate<n>:DELTamarker<m>:FUNction:FIXed\[:STATe\]](#) on page 127), this command defines a new frequency reference (span > 0) or time (span = 0) for all delta markers in the window specified by the suffix <n>.

For phase-noise measurements (see [CALCulate<n>:DELTamarker<m>:FUNction:PNOise:AUTO](#) on page 128), the command defines a new frequency reference or time for delta marker 2.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
 <m> marker number

Parameters:

<Reference> **<numeric_value>**
 *RST: ("CALCulate<n>:DELTamarker<m>:FUNction:FIXed" is set to OFF)

Example:

CALC:DELT:FUNC:FIX:RPO:X 128 MHz
 Sets the frequency reference to 128 MHz.

Mode:

A, ADEMOD, EVDO, TDS, WCDMA

CALCulate<n>:DELTamarker<m>:FUNctioN:FIXed:RPOint:Y <RefPointLevel>

For a measurement with a fixed reference point (`CALCulate<n>:DELTamarker<m>:FUNctioN:FIXed[:STATe]`), this command defines a new reference point level for all delta markers in the window specified by the suffix <n>.

For phase-noise measurements (`CALCulate<n>:DELTamarker<m>:FUNctioN:PNoise[:STATe]` on page 128), the command defines a new reference point level for delta marker 2.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
 <m> marker number

Parameters:

<RefPointLevel> **<numeric_value>**
 *RST: ("CALCulate<n>:DELTamarker<m>:FUNctioN:FIXed" is set to OFF)

Example:

`CALC:DELT:FUNC:FIX:RPO:Y -10dBm`
 Sets the reference point level for delta markers to -10 dBm.

Mode:

A, ADEMOD, EVDO, TDS, WCDMA

CALCulate<n>:DELTamarker<m>:FUNctioN:FIXed[:STATe] <State>

This command switches the relative measurement to a fixed reference value on or off. Marker 1 is activated previously and a peak search is performed, if necessary. If marker 1 is activated, its position becomes the reference point for the measurement. The reference point can then be modified with the `CALCulate<n>:DELTamarker<m>:FUNctioN:FIXed:RPOint:X` commands and `CALCulate<n>:DELTamarker<m>:FUNctioN:FIXed:RPOint:Y` independently of the position of marker 1 and of a trace. It applies to all delta markers in the window specified by the suffix <n> as long as the function is active.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
 <m> marker number

Parameters:

<State> ON | OFF
 *RST: OFF

Example: `CALC:DELT:FUNC:FIX ON`
Switches on the measurement with fixed reference value for all delta markers.

`CALC:DELT:FUNC:FIX:RPO:X 128 MHZ`
Sets the frequency reference to 128 MHz.

`CALC:DELT:FUNC:FIX:RPO:Y 30 DBM`
Sets the reference level to +30 dBm.

Mode: A, ADEMOD, EVDO, TDS, WCDMA

CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise:AUTO <State>

This command activates an automatic peak search for the reference fixed marker 1 at the end of each particular sweep in the window specified by the suffix <n>.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example: `CALC:DELT:FUNC:PNO:AUTO ON`
Activates an automatic peak search for the reference marker in a phase-noise measurement.

Mode: A, ADEMOD, CDMA, EVDO, TDS, WCDMA, SPECM

CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise[:STATE] <State>

This command switches on or off the phase-noise measurement with all active delta markers in the window specified by the suffix <n>. The correction values for the bandwidth and the log amplifier are taken into account in the measurement.

Marker 1 is activated, if necessary, and a peak search is performed. If marker 1 is activated, its position becomes the reference point for the measurement.

The reference point can then be modified with the `CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:X` and `CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:Y` commands independently of the position of marker 1 and of a trace (the same commands used for the measurement with fixed reference point).

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> irrelevant

Note: marker 2 is always the deltamarker for phase noise measurement results.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CALC:DELT:FUNC:PNO ON

Switches on the phase-noise measurement with all delta markers.

CALC:DELT:FUNC:FIX:RPO:X 128 MHZ

Sets the frequency reference to 128 MHz.

CALC:DELT:FUNC:FIX:RPO:Y 30 DBM

Sets the reference level to +30 dBm

Mode:

A, ADEMOD, CDMA, EVDO, TDS, WCDMA, SPECM

CALCulate<n>:DELTamarker<m>:LINK <State>

This command links delta marker 1 to marker 1. If you change the horizontal position of the marker, so does the delta marker.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> 1
irrelevant**Parameters:**

<State> ON | OFF

*RST: OFF

Example:

CALC:DELT:LINK ON

Mode:

A, ADEMOD, CDMA, EVDO, TDS, WCDMA, SPECM VSA

CALCulate<n>:DELTamarker<m>:MAXimum:LEFT

This command positions the delta marker to the next smaller maximum value to the left of the current value (i.e. descending X values) in the window specified by the suffix <n>. The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> marker number

Example:

CALC:DELT:MAX:LEFT

Sets delta marker 1 to the next smaller maximum value to the left of the current value.

Mode:

A, ADEMOD, CDMA, EVDO, TDS, WCDMA, SPECM, VSA

CALCulate<n>:DELTamarker<m>:MAXimum:NEXT

This command positions the delta marker to the next smaller maximum value on the measured curve in the window specified by the suffix <n>. The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
 <m> marker number

Example:

`CALC:DELT2:MAX:NEXT`

Sets delta marker 2 to the next smaller maximum value.

Mode:

A, ADEMOD, CDMA, EVDO, TDS, WCDMA, SPECM, VSA

CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]

This command positions the delta marker to the current maximum value on the measured curve in the window specified by the suffix <n>. If necessary, the corresponding delta marker is activated first.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
 <m> marker number

Example:

`CALC:DELT3:MAX`

Sets delta marker 3 to the maximum value of the associated trace.

Mode:

A, ADEMOD, CDMA, EVDO, TDS, WCDMA, SPECM, VSA

CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT

This command positions the delta marker to the next smaller maximum value to the right of the current value (i.e. ascending X values) in the window specified by the suffix <n>. The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
 <m> marker number

Example:

`CALC:DELT:MAX:RIGHT`

Sets delta marker 1 to the next smaller maximum value to the right of the current value.

Mode:

A, ADEMOD, CDMA, EVDO, TDS, WCDMA, SPECM, VSA

CALCulate<n>:DELTamarker<m>:MINimum:LEFT

This command positions the delta marker to the next higher minimum value to the left of the current value (i.e. descending X values) in the window specified by the suffix <n>. The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m> marker number

Example:

```
CALC:DELT:MIN:LEFT
```

Sets delta marker 1 to the next higher minimum to the left of the current value.

Mode:

A, ADEMOD, CDMA, EVDO, TDS, WCDMA, SPECM, VSA

CALCulate<n>:DELTamarker<m>:MINimum:NEXT

This command positions the delta marker to the next higher minimum value of the measured curve in the window specified by the suffix <n>. The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m> marker number

Example:

```
CALC:DELT2:MIN:NEXT
```

Sets delta marker 2 to the next higher minimum value.

Mode:

A, ADEMOD, CDMA, EVDO, TDS, WCDMA, VSA, SPECM

CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]

This command positions the delta marker to the current minimum value on the measured curve in the window specified by the suffix <n>. The corresponding delta marker is activated first, if necessary.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m> marker number

Example:

```
CALC:DELT3:MIN
```

Sets delta marker 3 to the minimum value of the associated trace.

Mode:

A, ADEMOD, CDMA, EVDO, TDS, WCDMA, SPECM, VSA

CALCulate<n>:DELTamarker<m>:MINimum:RIGHT

This command positions the delta marker to the next higher minimum value to the right of the current value (i.e. ascending X values) in the window specified by the suffix <n>. The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m> marker number

Example:

```
CALC:DELT:MIN:RIGH
```

Sets delta marker 1 to the next higher minimum value to the right of the current value.

Mode:

A, ADEMOD, CDMA, EVDO, TDS, WCDMA, SPECM, VSA

CALCulate<n>:DELTamarker<m>[:STATE] <State>

This command defines the marker specified by the suffix <m> as a delta marker for the window specified by the suffix <n>. If the corresponding marker was not already active, it is activated and positioned on the maximum of the measurement curve.

If no suffix is given for DELTmarker, delta marker 1 is selected automatically.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m> marker number

Parameters:

<State> ON | OFF
*RST: OFF

Example:

```
CALC:DELT1 ON
```

Switches marker 1 to delta marker mode.

Mode:

All

CALCulate<n>:DELTamarker<m>:TRACe <TraceNumber>

This command assigns the selected delta marker to the indicated trace in the window specified by the suffix <n>. The selected trace must be active, i.e. its state must be different from "BLANK".

In the persistence spectrum result display, the command also defines if the delta marker is positioned on the persistence trace or the maxhold trace.

Suffix:	
<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m>	marker number
Parameters:	
<TraceNumber>	1 to 6 Selects trace 1 through 6.
	MAXHold Defines the maxhold trace as the trace to put the delta marker on. This parameter is available only for the persistence spectrum result display.
	WRITE Defines the persistence trace as the trace to put the delta marker on. This parameter is available only for the persistence spectrum result display.
Example:	<code>CALC:DELT3:TRAC 2</code> Assigns delta marker 3 to trace 2.
Mode:	A, ADEMOD, CDMA, EVDO, PHN, TDS, WCDMA, SPECM, RT, VSA

CALCulate<n>:DELTamarker<m>:X <Position>

This command positions the selected delta marker to the indicated value in the window specified by the suffix <n>. The input is in absolute values.

Suffix:	
<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m>	marker number
Parameters:	
<Position>	0 to maximum frequency or sweep time

Example:	<code>CALC:DELT:X?</code> Outputs the absolute frequency/time of delta marker 1.
Mode:	A, ADEMOD, CDMA, EVDO, PHN, TDS, WCDMA, VSA

CALCulate<n>:DELTamarker<m>:X:RELative

This command queries the x-value of the selected delta marker relative to marker 1 or to the reference position (for `CALC:DELT:FUNC:FIX:STAT ON`) in the window specified by the suffix <n>. The command activates the corresponding delta marker, if necessary.

Suffix:	
<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m>	marker number
Example:	<pre>CALC:DELT3:X:REL?</pre> <p>Outputs the frequency of delta marker 3 relative to marker 1 or relative to the reference position.</p>
Mode:	A, ADEMOD, CDMA, EVDO, TDS, WCDMA, VSA

CALCulate<n>:DELTamarker<m>:Y

This command queries the measured value of the selected delta marker in the specified window. The corresponding delta marker is activated, if necessary. The output is always a relative value referred to marker 1 or to the reference position (reference fixed active).

To obtain a correct query result, a complete sweep with synchronization to the sweep end must be performed between the activation of the delta marker and the query of the y value. This is only possible in single sweep mode.

Depending on the unit defined with `CALC:NIT:POW` or on the activated measuring functions, the query result is output in the units below:

Suffix:	
<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m>	marker number
Example:	<pre>INIT:CONT OFF</pre> <p>Switches to single sweep mode.</p> <pre>INIT;*WAI</pre> <p>Starts a sweep and waits for its end.</p> <pre>CALC:DELT2 ON</pre> <p>Switches on delta marker 2.</p> <pre>CALC:DELT2:Y?</pre> <p>Outputs measurement value of delta marker 2.</p>
Mode:	A, ADEMOD, BT, CDMA, EVDO, TDS, WCDMA, VSA

CALCulate:LIMit subsystem

CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute	135
CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute:STATe	135
CALCulate<n>:LIMit<k>:ACPower:ACHannel[:RELative]	136
CALCulate<n>:LIMit<k>:ACPower:ACHannel:RESult	137
CALCulate<n>:LIMit<k>:ACPower:ACHannel[:RELative]:STATe	137
CALCulate<n>:LIMit<k>:ACPower:ALternate<Channel>:ABSolute	138
CALCulate<n>:LIMit<k>:ACPower:ALternate<channel>[:RELative]	139
CALCulate<n>:LIMit<k>:ACPower:ALternate<Channel>[:RELative]:STATe	139
CALCulate<n>:LIMit<k>:ACPower[:STATe]	140
CALCulate<n>:LIMit<k>:FAIL	141

CALCulate<n>:LIMit<k>:ACPpower:ACHannel:ABSolute <LowerLimit>, <UpperLimit>

This command defines the absolute limit value for the lower/upper adjacent channel during adjacent-channel power measurement (Adjacent Channel Power).

Note that the absolute limit value has no effect on the limit check as soon as it is below the relative limit value defined with `CALCulate<n>:LIMit<k>:ACPpower:ACHannel[:RELative]`. This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<k> irrelevant

Parameters:

<LowerLimit>, first value: -200DBM to 200DBM; limit for the lower and the upper adjacent channel
<UpperLimit>

*RST: -200DBM

Example:

`CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM`

Sets the absolute limit value for the power in the lower and upper adjacent channel to -35 dBm.

Mode:

A, CDMA, EVDO, TDS, WCDMA

CALCulate<n>:LIMit<k>:ACPpower:ACHannel:ABSolute:STATe <State>

This command activates the limit check for the adjacent channel when adjacent-channel power measurement (Adjacent Channel Power) is performed. Before the command, the limit check for the channel/adjacent-channel measurement must be globally switched on using `CALCulate<n>:LIMit<k>:ACPpower[:STATe]`.

The result can be queried with `CALCulate<n>:LIMit<k>:ACPpower:ACHannel:RESult`. It should be noted that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no correct results are available.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<k> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:	<pre>CALC:LIM:ACP:ACH 30DB, 30DB</pre> <p>Sets the relative limit value for the power in the lower and upper adjacent channel to 30 dB below the channel power.</p> <pre>CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM</pre> <p>Sets the absolute limit value for the power in the lower and upper adjacent channel to -35 dBm.</p> <pre>CALC:LIM:ACP ON</pre> <p>Switches on globally the limit check for the channel/adjacent-channel measurement.</p> <pre>CALC:LIM:ACP:ACH:REL:STAT ON</pre> <p>Switches on the check of the relative limit values for adjacent channels.</p> <pre>CALC:LIM:ACP:ACH:ABS:STAT ON</pre> <p>Switches on the check of absolute limit values for the adjacent channels.</p> <pre>INIT;*WAI</pre> <p>Starts a new measurement and waits for the sweep end.</p> <pre>CALC:LIM:ACP:ACH:RES?</pre> <p>Queries the limit check result in the adjacent channels.</p>
Mode:	A, CDMA, EVDO, TDS, WCDMA

CALCulate<n>:LIMit<k>:ACPpower:ACHannel[:RELative] <LowerLimit>, <UpperLimit>

This command defines the relative limit of the upper/lower adjacent channel for adjacent-channel power measurements. The reference value for the relative limit value is the measured channel power.

It should be noted that the relative limit value has no effect on the limit check as soon as it is below the absolute limit value defined with the `CALCulate<n>:LIMit<k>:ACPpower:ACHannel:ABSolute` command. This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

Suffix:	
<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<k>	irrelevant
Parameters:	
<LowerLimit>, <UpperLimit>	0 to 100dB; the value for the lower limit must be lower than the value for the upper limit
	*RST: 0 dB

Example:	<pre>CALC:LIM:ACP:ACH 30DB, 30DB</pre> <p>Sets the relative limit value for the power in the lower and upper adjacent channel to 30 dB below the channel power.</p>
Mode:	A, CDMA, EVDO, TDS, WCDMA

CALCulate<n>:LIMit<k>:ACPpower:ACHannel:RESult

This command queries the result of the limit check for the upper/lower adjacent channel when adjacent channel power measurement is performed.

If the power measurement of the adjacent channel is switched off, the command produces a query error.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<k> irrelevant

Return values:

Result The result is returned in the form <result>, <result> where <result> = PASSED | FAILED, and where the first returned value denotes the lower, the second denotes the upper adjacent channel.

Example:

```
CALC:LIM:ACP:ACH 30DB, 30DB
```

Sets the relative limit value for the power in the lower and upper adjacent channel to 30 dB below the channel power.

```
CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM
```

Sets the absolute limit value for the power in the lower and upper adjacent channel to -35 dB.

```
CALC:LIM:ACP ON
```

Switches on globally the limit check for the channel/adjacent channel measurement.

```
CALC:LIM:ACP:ACH:STAT ON
```

Switches on the limit check for the adjacent channels.

```
INIT;*WAI
```

Starts a new measurement and waits for the sweep end.

```
CALC:LIM:ACP:ACH:RES?
```

Queries the limit check result in the adjacent channels.

Mode: A, CDMA, EVDO, TDS, WLAN, WCDMA

CALCulate<n>:LIMit<k>:ACPpower:ACHannel[:RELative]:STATe <State>

This command activates the limit check for the relative limit value of the adjacent channel when adjacent-channel power measurement is performed. Before this command, the limit check must be activated using `CALCulate<n>:LIMit<k>:ACPpower[:STATe]`.

The result can be queried with `CALCulate<n>:LIMit<k>:ACPpower:ACHannel:RESult`. Note that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no correct results are available.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<k> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CALC:LIM:ACP:ACH 30DB, 30DB

Sets the relative limit value for the power in the lower and upper adjacent channel to 30 dB below the channel power.

CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM

Sets the absolute limit value for the power in the lower and upper adjacent channel to -35 dBm.

CALC:LIM:ACP ON

Switches on globally the limit check for the channel/adjacent channel measurement.

CALC:LIM:ACP:ACH:STAT ON

Switches on the check of the relative limit values for adjacent channels.

CALC:LIM:ACP:ACH:ABS:STAT ON

Switches on the check of absolute limit values for the adjacent channels.

INIT;*WAI

Starts a new measurement and waits for the sweep end.

CALC:LIM:ACP:ACH:RES?

Queries the limit check result in the adjacent channels.

Mode:

A, CDMA, EVDO, TDS, WCDMA

CALCulate<n>:LIMit<k>:ACPpower:ALternate<Channel>:ABSolute <LowerLimit>, <UpperLimit>

This command defines the absolute limit value for the lower/upper alternate adjacent-channel power measurement (Adjacent Channel Power).

Note that the absolute limit value for the limit check has no effect as soon as it is below the relative limit value defined with [CALCulate<n>:LIMit<k>:ACPpower:ACHannel\[:RELative\]](#). This mechanism allows automatic checking of the absolute basic values defined in mobile radio standards for the power in adjacent channels.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<k> irrelevant

<Channel> 1...11
the alternate channel**Parameters:**

<LowerLimit>, <UpperLimit> first value: -200DBM to 200DBM; limit for the lower and the upper alternate adjacent channel

*RST: -200DBM

Example: `CALC:LIM:ACP:ALT2:ABS -35DBM, -35DBM`
Sets the absolute limit value for the power in the lower and upper second alternate adjacent channel to -35 dBm.

Mode: A, CDMA, EVDO, TDS, WCDMA

CALCulate<n>:LIMit<k>:ACPpower:ALTErnate<channel>[:RELative] <LowerLimit>, <UpperLimit>

This command defines the limit for the alternate adjacent channels for adjacent channel power measurements. The reference value for the relative limit value is the measured channel power.

Note that the relative limit value has no effect on the limit check as soon as it is below the absolute limit defined with `CALCulate<n>:LIMit<k>:ACPpower:ALTErnate<Channel>:ABSolute`. This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<k> irrelevant

<Channel> 1...11
the alternate channel

Parameters:

<LowerLimit>, <UpperLimit> first value: 0 to 100dB; limit for the lower and the upper alternate adjacent channel

*RST: 0 DB

Example: `CALC:LIM:ACP:ALT2 30DB, 30DB`
Sets the relative limit value for the power in the lower and upper second alternate adjacent channel to 30 dB below the channel power.

Mode: A, CDMA, EVDO, TDS, WLAN, WCDMA

CALCulate<n>:LIMit<k>:ACPpower:ALTErnate<Channel>[:RELative]:STATe <State>

This command activates the limit check for the alternate adjacent channels for adjacent channel power measurements. Before the command, the limit check must be activated using `CALCulate<n>:LIMit<k>:ACPpower[:STATe]`.

The result can be queried with `CALCulate<n>:LIMit<k>:ACPpower:ALTErnate<channel>[:RELative]`. Note that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no correct results are obtained.

Suffix:

<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<k>	irrelevant
<Channel>	1...11 the alternate channel

Parameters:

<State>	ON OFF
*RST:	OFF

Example:

```
CALC:LIM:ACP:ALT2 30DB, 30DB
```

Sets the relative limit value for the power in the lower and upper second alternate adjacent channel to 30 dB below the channel power.

```
CALC:LIM:ACP:ALT2:ABS -35DBM, -35DBM
```

Sets the absolute limit value for the power in the lower and upper second alternate adjacent channel to -35 dBm.

```
CALC:LIM:ACP ON
```

Switches on globally the limit check for the channel/adjacent channel measurement.

```
CALC:LIM:ACP:ALT2:STAT ON
```

Switches on the check of the relative limit values for the lower and upper second alternate adjacent channel.

```
CALC:LIM:ACP:ALT2:ABS:STAT ON
```

Switches on the check of absolute limit values for the lower and upper second alternate adjacent channel.

```
INIT;*WAI
```

Starts a new measurement and waits for the sweep end.

```
CALC:LIM:ACP:ALT2:RES?
```

Queries the limit check result in the second alternate adjacent channels.

Mode: A, CDMA, EVDO, TDS, WCDMA

CALCulate<n>:LIMit<k>:ACPpower[:STATe] <State>

This command switches on and off the limit check for adjacent-channel power measurements. The commands `CALCulate<n>:LIMit<k>:ACPpower:ACHannel[:RELative]:STATe` or `CALCulate<n>:LIMit<k>:ACPpower:ALTErnate<Channel>[:RELative]:STATe` must be used in addition to specify whether the limit check is to be performed for the upper/lower adjacent channel or for the alternate adjacent channels.

Suffix:

<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<k>	irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:LIM:ACP ON
 Switches on the ACLR limit check.

Mode:

A, CDMA, EVDO, TDS, WCDMA

CALCulate<n>:LIMit<k>:FAIL

This command queries the result of the limit check of the indicated limit line. It should be noted that a complete sweep must have been performed for obtaining a correct result. A synchronization with *OPC, *OPC? or *WAI should therefore be provided. The result of the limit check is given with 0 for PASS, 1 for FAIL, and 2 for MARGIN.

Suffix:

<n> irrelevant
 <k> limit line

Return values:

Return values 0 for pass, 1 for fail

Example:

INIT; *WAI
 Starts a new sweep and waits for its end.
 CALC:LIM3:FAIL?
 Queries the result of the check for limit line 3.

Mode:

A, ADEMOD, CDMA, EVDO, NF, PHN, TDS, WLAN, WCDMA

CALCulate:LIMit:ESpectrum subsystem

The CALCulate:LIMit:ESpectrum subsystem defines the limit check for the Spectrum Emission Mask.

CALCulate<n>:LIMit<k>:ESpectrum:LIMits.....	141
CALCulate<n>:LIMit<k>:ESpectrum:MODE.....	142
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>[:EXCLUSIVE].....	142
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:COUNT.....	143
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:LIMit[:STATE].....	143
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:MAXimum.....	144
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:MINimum.....	144
CALCulate<n>:LIMit<k>:ESpectrum:RESTore.....	145
CALCulate<n>:LIMit<k>:ESpectrum:VALue.....	145

CALCulate<n>:LIMit<k>:ESpectrum:LIMits <Limits>

This command sets or queries up to 4 power classes in one step.

Suffix:

<n> irrelevant
 <k> irrelevant

Parameters:	
<Limits>	1–3 numeric values between -200 and 200, separated by commas -200, <0-3 numeric values between -200 and 200, in ascending order, separated by commas>, 200
Example:	<pre>CALC:LIM:ESP:LIM -50,50,70</pre> <p>Defines the following power classes:</p> <pre><-200, -50> <-50, 50> <50, 70> <70, 200></pre> <p>Query:</p> <pre>CALC:LIM:ESP:LIM?</pre> <p>Response:</p> <pre>-200,-50,50,70,200</pre>
Mode:	A, CDMA, EVDO, TDS, WCDMA

CALCulate<n>:LIMit<k>:ESPectrum:MODE <Mode>

This command activates or deactivates the automatic selection of the limit line in the Spectrum Emission Mask measurement.

Suffix:

<n>	1...4 window
<k>	irrelevant

Parameters:

<Mode>	AUTO MANUAL
--------	---------------

AUTO

The limit line depends on the measured channel power.

MANUAL

One of the three specified limit lines is set. The selection is made with the "[CALCulate:LIMit:ESPectrum subsystem](#)", on page 141 command.

*RST: AUTO

Example:	<pre>CALC:LIM:ESP:MODE AUTO</pre> <p>Activates automatic selection of the limit line.</p>
-----------------	---

Mode:	A, CDMA, EVDO, TDS, WCDMA, VSA
--------------	--------------------------------

CALCulate<n>:LIMit<k>:ESPectrum:PClass<Class>[:EXCLusive] <State>

This command sets the power classes used in the spectrum emission mask measurement. It is only possible to use power classes for which limits are defined. Also, either only one power class at a time or all power classes together can be selected.

Suffix:
 <n> irrelevant
 <k> irrelevant
 <Class> 1...4
 the power class to be evaluated

Parameters:
 <State> ON | OFF
 *RST: OFF

Example: `CALC:LIM:ESP:PCL1 ON`
 Activates the first defined power class.

Mode: A, CDMA, EVDO, TDS, WCDMA

CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:COUNT <NoPowerClasses>

This command sets the number of power classes to be defined.

Suffix:
 <n> irrelevant
 <k> irrelevant
 <Class> irrelevant

Parameters:
 <NoPowerClasses> 1 to 4
 *RST: 1

Example: `CALC:LIM:ESP:PCL:COUN 2`
 Two power classes can be defined.

Mode: A, CDMA, EVDO, TDS, WCDMA

CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:LIMit[:STATe] <State>

This command defines which limits are evaluated in the measurement.

Suffix:
 <n> irrelevant
 <k> irrelevant
 <Class> 1...4
 the power class to be evaluated

Parameters:

<State>

ABSolute | RELative | AND | OR

ABSolute

Evaluates only limit lines with absolute power values

RELative

Evaluates only limit lines with relative power values

AND

Evaluates limit lines with relative and absolute power values. A negative result is returned if both limits fail.

OR

Evaluates limit lines with relative and absolute power values. A negative result is returned if at least one limit failed.

*RST: REL

Example:

CALC:LIM:ESP:PCL:LIM ABS

Mode:

A, CDMA, EVDO, TDS, WCDMA

CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>:MAXimum <Level>

This command sets the upper limit level for one power class. The unit is dBm. The limit always ends at + 200 dBm, i.e. the upper limit of the last power class can not be set. If more than one power class is in use, the upper limit must equal the lower limit of the next power class.

Suffix:

<n>

irrelevant

<k>

irrelevant

<Class>

1...4

the power class to be evaluated

Parameters:

<Level>

<numeric value>

*RST: +200

Example:

CALC:LIM:ESP:PCL1:MAX -40 dBm

Sets the maximum power value of the first power class to -40 dBm.

Mode:

A, CDMA, EVDO, TDS, WCDMA

CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>:MINimum <Level>

This command sets the minimum lower level limit for one power class. The unit is dBm. The limit always start at – 200 dBm, i.e. the first lower limit can not be set. If more than one power class is in use, the lower limit must equal the upper limit of the previous power class.

Suffix:

<n>	irrelevant
<k>	irrelevant
<Class>	1...4 the power class to be evaluated

Parameters:

<Level>	<numeric_value> *RST: -200 for class1, otherwise +200
---------	--

Example:

```
CALC:LIM:ESP:PCL2:MIN -40 dBm
```

Sets the minimum power value of the second power class to -40 dBm.

Mode:

A, CDMA, EVDO, TDS, WCDMA

CALCulate<n>:LIMit<k>:ESPectrum:RESTore

This command restores the predefined limit lines for the Spectrum Emission Mask measurement. All modifications made to the predefined limit lines are lost and the factory-set values are restored.

Suffix:

<n>	1...4 window
<k>	irrelevant

Example:

```
CALC:LIM:ESP:REST
```

Resets the limit lines for the Spectrum Emission Mask to the default setting.

Mode:

A, CDMA, EVDO, TDS, WCDMA

CALCulate<n>:LIMit<k>:ESPectrum:VALue <Power>

This command activates the manual limit line selection and specifies the expected power as a value. Depending on the entered value, one of the predefined limit lines is selected.

Suffix:

<n>	1...4 window
<k>	irrelevant

Parameters:

<Power> 33 | 28 | 0

33
P ≥ 33

28
28 < P < 33

0
P < 28

*RST: 0

Example:

CALC:LIM:ESP:VAL 33

Activates manual selection of the limit line and selects the limit line for P = 33.

Mode:

A, CDMA, EVDO, TDS, WCDMA

CALCulate:PSE subsystem

CALCulate<n>:PSEarch PEAKsearch[:IMMEDIATE].....	146
CALCulate<n>:PSEarch PEAKsearch:AUTO.....	146
CALCulate<n>:PSEarch PEAKsearch:MARGIN.....	147
CALCulate<n>:PSEarch PEAKsearch:PSHOW.....	147
CALCulate<n>:PSEarch PEAKsearch:SUBRANGES.....	147

CALCulate<n>:PSEarch|PEAKsearch[:IMMEDIATE]

This command determines the list of the subrange maximums from the existing sweep results.

Suffix:

<n> irrelevant

Example:

CALC:PSE

Starts to determine the list.

Mode:

A, CDMA, EVDO, TDS, WCDMA, VSA, SPECM

CALCulate<n>:PSEarch|PEAKsearch:AUTO <State>

This command activates or deactivates the list evaluation.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

Parameters:

<State> ON | OFF

*RST: ON

Example: `CALC:ESP:PSE:AUTO OFF`
Deactivates the list evaluation.

Mode: A, CDMA, EVDO, TDS, WCDMA, VSA, SPECM

CALCulate<n>:PSEarch|PEAKsearch:MARGin

This command sets the margin used for the limit check/peak search.

Suffix:
<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

Parameters:
<Margin> -200 to 200 dB
*RST: 200 dB

Example: `CALC:ESP:PSE:MARG 100`
Sets the margin to 100 dB.

Mode: A, CDMA, EVDO, TDS, WCDMA, VSA, SPECM

CALCulate<n>:PSEarch|PEAKsearch:PSHow

This command marks all peaks with blue squares in the diagram.

Suffix:
<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

Parameters:
<State> ON | OFF
*RST: OFF

Example: `CALC:ESP:PSE:PSH ON`
Marks all peaks with blue squares.

Mode: A, CDMA, EVDO, TDS, WCDMA, VSA, SPECM

CALCulate<n>:PSEarch|PEAKsearch:SUBRanges <NumberPeaks>

This command sets the number of peaks per range that are stored in the list. Once the selected number of peaks has been reached, the peak search is stopped in the current range and continued in the next range.

Suffix:
<n> irrelevant

Parameters:
<NumberPeaks> 1 to 50
*RST: 25

Example: `CALC:PSE:SUBR 10`
Sets 10 peaks per range to be stored in the list.

Mode: A, CDMA, EVDO, TDS, WCDMA, VSA, SPECM

CALCulate:STATistics subsystem

<code>CALCulate<n>:STATistics:CCDF[:STATe]</code>	148
<code>CALCulate<n>:STATistics:NSAMples</code>	148
<code>CALCulate<n>:STATistics:PRESet</code>	149
<code>CALCulate<n>:STATistics:RESult<Trace></code>	149
<code>CALCulate<n>:STATistics:SCALE:AUTO ONCE</code>	150
<code>CALCulate<n>:STATistics:SCALE:X:RANGe</code>	150
<code>CALCulate<n>:STATistics:SCALE:X:RLEVel</code>	150
<code>CALCulate<n>:STATistics:SCALE:Y:LOWer</code>	151
<code>CALCulate<n>:STATistics:SCALE:Y:UNIT</code>	151
<code>CALCulate<n>:STATistics:SCALE:Y:UPPer</code>	151

CALCulate<n>:STATistics:CCDF[:STATe] <State>

This command switches on or off the measurement of the complementary cumulative distribution function (CCDF). On activating this function, the APD measurement is switched off.

Suffix:
<n> irrelevant

Parameters:
<State> ON | OFF

 *RST: OFF

Example: `CALC:STAT:CCDF ON`
Switches on the CCDF measurement.

Mode: A, CDMA, EVDO, TDS, WCDMA, VSA

CALCulate<n>:STATistics:NSAMples <NoMeasPoints>

This command sets the number of measurement points to be acquired for the statistical measurement functions.

Suffix:
<n> irrelevant

Parameters:
<NoMeasPoints> 100 to 1E9

 *RST: 100000

Example: `CALC:STAT:NSAM 500`
Sets the number of measurement points to be acquired to 500.

Mode: A, CDMA, EVDO, TDS, WCDMA, VSA

CALCulate<n>:STATistics:PRESet

This command resets the scaling of the X and Y axes in a statistical measurement. The following values are set:

x-axis ref level:	-20 dBm
x-axis range APD:	100 dB
x-axis range CCDF:	20 dB
y-axis upper limit:	1.0
y-axis lower limit:	1E-6

Suffix:

<n> irrelevant

Example:

`CALC:STAT:PRESet`

Resets the scaling for statistical functions

Mode:

A, CDMA, EVDO, TDS, WCDMA, VSA

CALCulate<n>:STATistics:RESult<Trace> <ResultType>

This command reads out the results of statistical measurements of a recorded trace.

Suffix:

<n> irrelevant

<Trace> 1...6

trace

Parameters:

<ResultType> MEAN | PEAK | CFACTOR | ALL

MEAN

Average (=RMS) power in dBm measured during the measurement time.

PEAK

Peak power in dBm measured during the measurement time.

CFACTOR

Determined CREST factor (= ratio of peak power to average power) in dB.

ALL

Results of all three measurements mentioned before, separated by commas: <mean power>,<peak power>,<crest factor>

The required result is selected via the following parameters:

Example:

`CALC:STAT:RES2? ALL`

Reads out the three measurement results of trace 2. Example of answer string: 5.56,19.25,13.69 i.e. mean power: 5.56 dBm, peak power 19.25 dBm, CREST factor 13.69 dB

Mode:

A, CDMA, EVDO, TDS, WCDMA, VSA

CALCulate<n>:STATistics:SCALE:AUTO ONCE

This command optimizes the level setting of the instrument depending on the measured peak power, in order to obtain maximum instrument sensitivity.

To obtain maximum resolution, the level range is set as a function of the measured spacing between peak power and the minimum power for the APD measurement and of the spacing between peak power and mean power for the CCDF measurement. In addition, the probability scale for the number of test points is adapted.

Subsequent commands have to be synchronized with *WAI, *OPC or *OPC? to the end of the auto range process which would otherwise be aborted.

Suffix:

<n> irrelevant

Example:

CALC:STAT:SCAL:AUTO ONCE;*WAI

Adapts the level setting for statistical measurements.

Mode:

A, CDMA, EVDO, TDS, WCDMA, VSA

CALCulate<n>:STATistics:SCALE:X:RANGe <Value>

This command defines the level range for the x-axis of the measurement diagram. The setting is identical to the level range setting defined with the [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) command.

Suffix:

<n> irrelevant

Parameters:

<Value> 10dB to 200dB

*RST: 100dB

Example:

CALC:STAT:SCAL:X:RANG 20dB

Mode:

A, CDMA, EVDO, TDS, WCDMA, VSA

CALCulate<n>:STATistics:SCALE:X:RLEVel <Value>

This command defines the reference level for the x-axis of the measurement diagram. The setting is identical to the reference level setting using the [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]:RLEVel](#) command.

With the reference level offset <> 0 the indicated value range of the reference level is modified by the offset.

The unit depends on the setting performed with [CALCulate<n>:UNIT:POWer](#).

Suffix:

<n> irrelevant

Parameters:**<Value>** -120dBm to 20dBm***RST:** -20dBm**Example:**

CALC:STAT:SCAL:X:RLEV -60dBm

Mode:

A, CDMA, EVDO, TDS, WCDMA, VSA

CALCulate<n>:STATistics:SCALE:Y:LOWer <Value>

This command defines the lower limit for the y-axis of the diagram in statistical measurements. Since probabilities are specified on the y-axis, the entered numeric values are dimensionless.

Suffix:**<n>** selects the screen**Parameters:****<Value>** 1E-9 to 0.1***RST:** 1E-6**Example:**

CALC:STAT:SCAL:Y:LOW 0.001

Mode:

A, CDMA, EVDO, TDS, VSA, WCDMA

CALCulate<n>:STATistics:SCALE:Y:UNIT <Unit>

This command defines the scaling type of the y-axis.

Suffix:**<n>** selects the screen**Parameters:****<Unit>** PCT | ABS***RST:** ABS**Example:**CALC:STAT:SCAL:Y:UNIT PCT
Sets the percentage scale.**Mode:**

A, CDMA, EVDO, TDS, WCDMA, VSA

CALCulate<n>:STATistics:SCALE:Y:UPPer <Value>

This command defines the upper limit for the y-axis of the diagram in statistical measurements. Since probabilities are specified on the y-axis, the entered numeric values are dimensionless.

Suffix:**<n>** irrelevant

Parameters:

<Value> 1E-8 to 1.0
 *RST: 1.0

Example:

CALC:STAT:Y:UPP 0.01

Mode:

A, CDMA, EVDO, TDS, WCDMA, VSA

Other Referenced CALCulate Commands

CALCulate<n>:UNIT:POWer.....152

CALCulate<n>:UNIT:POWer <Unit>

This command selects the unit for power.

The unit is defined globally for all windows.

Suffix:

<n> irrelevant

Parameters:

<Unit> DBM | V | A | W | DBPW | WATT | DBUV | DBMV | VOLT | DBUA
 | AMPere
 *RST: dBm

Example:

CALC:UNIT:POW DBM
 Sets the power unit to dBm.

Mode:

A, ADEMOD, BT, CDMA, EVDO, TDS, WCDMA, VSA, SPECM

4.6.3 CONFigure:WCDPower subsystem (R&S FSV-K73)

This subsystem comprises the commands for configuring the code domain power measurements. Only the numeric suffix 1 is permissible in CONFigure.

CONFigure:WCDPower:MS:MEASurement.....153
 CONFigure:WCDPower:MS:CTABLE[:STATe].....153
 CONFigure:WCDPower:MS:CTABLE:NAME.....153
 CONFigure:WCDPower:MS:CTABLE:SElect.....154
 CONFigure:WCDPower:MS:CTABLE:DATA.....154
 CONFigure:WCDPower:MS:CTABLE:DATA:HSDPcch.....155
 CONFigure:WCDPower:MS:CTABLE:COMMENT.....156
 CONFigure:WCDPower:MS:CTABLE:COPY.....156
 CONFigure:WCDPower:MS:CTABLE:DELeTe.....156
 CONFigure:WCDPower:MS:CTABLE:CATalog.....156
 CONFigure:WCDPower:MS:CTABLE:EDATa.....157
 CONFigure:WCDPower:MS:CTABLE:EDATa:EDPCc.....157

CONFigure:WCDPower:MS:MEASurement <Type>

This command selects the 3GPP FDD UE user equipment tests.

Parameters:

<Type> ACLR | ESpectrum | WCDPower | POWER | OBANdwith | OBWidth
| CCDF

ACLR

Adjacent-channel power measurement (standard 3GPP WCDMA Forward) with predefined settings

ESpectrum

Measurement of spectrum emission mask

WCDPower

Code domain power measurement. This selection has the same effect as command INSTRument:SElect

POWER

Channel power measurement (standard 3GPP WCDMA Forward) with predefined settings

OBANdwith | OBWidth

Measurement of occupied power bandwidth.

CCDF

Measurement of complementary cumulative distribution function.

*RST: WCDPower

Example: CONF:WCDP:MS:MEAS POW

Mode: WCDMA

CONFigure:WCDPower:MS:CTABLE[:STATe] <State>

This command switches the channel table on or off. When switch-on takes place, the measured channel table is stored under the name RECENT and is switched on. After the RECENT channel table is switched on, another channel table can be selected with the command [CONFigure:WCDPower:MS:CTABLE:SElect](#) on page 154.

Parameters:

<State> ON | OFF

*RST: OFF

Example: CONF:WCDP:CTAB ON

Mode: WCDMA

CONFigure:WCDPower:MS:CTABLE:NAME <FileName>

This command selects an existing channel table or creates the name of a new channel table.

Parameters:

<FileName> <file name>

*RST: RECENT

Example:

CONF:WCDP:CTAB:NAME 'NEW_TAB'

Mode:

WCDMA

CONFigure:WCDPower:MS:CTABLE:SElect <FileName>

This command selects a predefined channel table file. Before using this command, the RECENT channel table must be switched on first with the command

CONF:WCDP:CTAB:STAT ON.

Parameters:

<FileName> <string>

*RST: RECENT

Example:

CONF:WCDP:CTABL ON
CONF:WCDP:CTAB:SEL 'CTAB_1'

Mode:

WCDMA

CONFigure:WCDPower:MS:CTABLE:DATA <TableValues>

This command defines the values of the selected channel table.

Each line of the table consists of 6 values.

Parameters:

<TableValues>

Code Class | Number of active channels | Pilot length | CDP rel 1
| CDP rel 2 | CDP rel 3 | CDP rel 4 | CDP rel 5 | CDP rel 6**Code Class**

Code class of channel 1. I-mapped

Number of active channels

1 to 7

Pilot length

Pilot length of channel DPCCH

CDP rel 1

measured value of channel 1, only when queried

CDP rel 2

measured value of channel 2, only when queried

CDP rel 3

measured value of channel 3, only when queried

CDP rel 4

measured value of channel 4, only when queried

CDP rel 5

measured value of channel 5, only when queried

CDP rel 6

measured value of channel 6, only when queried

The Channel DPCCH may only be defined once. If channel DPCCH is missing in the command, it is automatically added at the end of the table. Prior to this command, the name of the channel table has to be defined with the command

CONF:WCDP:CTAB:NAME

Example:CONF:WCDP:MS:CTAB:DATA 8,0,0,5,1,0.00,
4,1,1,0,1,0.00,4,1,0,0,1,0.00

The following channels are defined: DPCCH and two data channels with 960 ksps.

Mode:

WCDMA

CONFigure:WCDPower:MS:CTABLE:DATA:HSDPcch <State>

This command activates [ON] or deactivates [OFF] the HS-DPCCH entry in a predefined channel table.

Parameters:

<State>

*RST: ON

Example:

CONF:WCDP:MS:CTAB:DATA:HSDP ON

Mode:

WCDMA

CONFigure:WCDPower:MS:CTABLE:COMMeNT <Comment>

This command defines a comment for the selected channel table:

Prior to this command, the name of the channel table has to be defined with command `CONF:WCDP:MS:CTAB:NAME` and the values of the table have to be defined with command `CONF:WCDP:MS:CTAB:DATA`.

Parameters:

<Comment> <string>

Example: `CONF:WCDP:MS:CTAB:COMM 'Comment for table 1'`

Mode: WCDMA

CONFigure:WCDPower:MS:CTABLE:COpy <FileName>

This command copies one channel table onto another one. The channel table to be copied is selected with command `CONF:WCDP:MS:CTAB:NAME`.

The name of the channel table may contain a maximum of 8 characters. This command is an "event" which is why it is not assigned an *RST value and has no query.

Parameters:

<FileName> <file_name> = name of the new channel table

Example: `CONF:WCDP:MS:CTAB:COPY 'CTAB_2'`

Mode: WCDMA

CONFigure:WCDPower:MS:CTABLE:DELeTe

This command deletes the selected channel table. The channel table to be deleted is selected with the command `CONF:WCDP:MS:CTAB:NAME`.

Example: `CONF:WCDP:MS:CTAB:DEL`

Mode: WCDMA

CONFigure:WCDPower:MS:CTABLE:CATalog?

This command reads out the names of all channel tables stored on the hard disk. Syntax of output format: <Sum of file lengths of all subsequent files>, <free memory on hard disk>, <1st file name>,, <1st file length>, <2nd file name>,, <2nd file length>,, <nth file name>, <nth file length>.

Example: `CONF:WCDP:MS:CTAB:CAT?`

Usage: Query only

Mode: WCDMA

CONFigure:WCDPower:MS:CTABLE:EDATa

This command defines the values of the selected channel table.

Code class: code class of channel 1.

Number of active channels: 0 to 4

ECDP rel. 1: measured value of channel 1, only when queried

ECDP rel. 2: measured value of channel 2, only when queried

ECDP rel. 3: measured value of channel 3, only when queried

ECDP rel. 4: measured value of channel 4, only when queried

Example: `CONF:WCDP:MS:CTAB:EDAT`

Mode: WCDMA

CONFigure:WCDPower:MS:CTABLE:EDATa:EDPCc

This command activates [ON] or deactivates [OFF] the E-DPCCH entry in a predefined channel table.

Parameters:

*RST: OFF

Example: `CONF:WCDP:MS:CTAB:EDAT:EDPC ON`

Mode: WCDMA

4.6.4 INSTRument subsystem

The INSTRument subsystem selects the operating mode of the unit either via text parameters or fixed numbers.

INSTRument[:SElect]	157
INSTRument:NSElect	157

INSTRument[:SElect] <Mode>

This command switches between the measurement modes by means of text parameters.

Parameters:

<Mode> **MWCD**
3G FDD UE Mode (R&S FSV-K73 option)

INSTRument:NSElect <Mode>

This command switches between the measurement modes by means of numbers.

Parameters:

<Mode>	9
	3G FDD UE Mode (R&S FSV-K73 option)

4.6.5 SENSE subsystem (R&S FSV-K73)

The SENSE subsystem controls the essential parameters of the analyzer. In accordance with the SCPI standard, the keyword SENSE is optional, which means that it is not necessary to include the SENSE node in command sequences.

Note that most commands in the SENSE subsystem are identical to the base unit; only the commands specific to this option are described here.

4.6.5.1	SENSE:CDPower Subsystem.....	158
4.6.5.2	SENSE:POWer Subsystem.....	166
4.6.5.3	Other SENSE Commands Referenced in this Manual.....	172

4.6.5.1 SENSE:CDPower Subsystem

This subsystem controls the parameters for the code domain mode. The numeric suffix in SENSE is not significant in this subsystem.

[SENSE:]CDPower:BASE.....	159
[SENSE:]CDPower:CODE.....	159
[SENSE:]CDPower:ETCHips.....	159
[SENSE:]CDPower:FILTer[:STATe].....	160
[SENSE:]CDPower:FRAMe[:VALue].....	160
[SENSE:]CDPower:FRAMe[:LVALue].....	160
[SENSE:]CDPower:HSDPamode.....	160
[SENSE:]CDPower:HSLot.....	161
[SENSE:]CDPower:ICThreshold.....	161
[SENSE:]CDPower:IQLength.....	161
[SENSE:]CDPower:LCODE:TYPE.....	162
[SENSE:]CDPower:LCODE:SEARCh:[IMMediate].....	162
[SENSE:]CDPower:LCODE:SEARCh:LIST.....	162
[SENSE:]CDPower:LCODE[:VALue].....	163
[SENSE:]CDPower:LEVel:ADJust.....	163
[SENSE:]CDPower:MAPPING.....	164
[SENSE:]CDPower:NORMALize.....	164
[SENSE:]CDPower:OVERview.....	164
[SENSE:]CDPower:PDISplay.....	164
[SENSE:]CDPower:QINVert.....	165
[SENSE:]CDPower:SFACTor.....	165
[SENSE:]CDPower:SLOT.....	165

[SENSe:]CDPower:BASE <BaseValue>

This command chooses the base of the CDP analysis: At SLOT one slot of the signal is analyzed only; at FRAME the complete 3GPP frame will be analyzed.

Parameters:

<BaseValue> SLOT | FRAME
 *RST: SLOT

Example: CDP:BASE SLOT"

Mode: WCDMA

[SENSe:]CDPower:CODE <CodeNumber>

This command sets the code number. The code number refers to code class 8 (spreading factor 256).

Parameters:

<CodeNumber>
 Range: 0 to 255
 *RST: 0

Example: SENS:CDP:CODE 128

Mode: WCDMA

[SENSe:]CDPower:ETCHips <State>

This command selects length of the measurement interval for calculation of error vector magnitude (EVM). In accordance with 3GPP specification Release 5, the EVM measurement interval is one slot (4096 chips) minus 25 μ s at each end of the burst (3904 chips) if power changes are expected. If no power changes are expected, the evaluation length is one slot (4096 chips).

Parameters:

<State>
 *RST: OFF
 ON: Changes of power are expected. Therefore an EVM measurement interval of one slot minus 25 μ s (3904 chips) is considered.
 OFF: Changes of power are not expected. Therefore an EVM measurement interval of one slot (4096 chips) is considered

Example: SENS:CDP:ETCH ON

Mode: WCDMA

[SENSe:]CDPower:FILTeR[:STATe] <State>

This command selects if a root raised cosine (RRC) receiver filter is used or not. This feature is useful if the RRC filter is implemented in the device under test (DUT).

Parameters:

<State>

ON

If an unfiltered WCDMA signal is received (normal case), the RRC filter should be used to get a correct signal demodulation.

OFF

If a filtered WCDMA signal is received, the RRC filter should not be used to get a correct signal demodulation. This is the case if the DUT filters the signal.

*RST: ON

Example:

SENS:CDP:FILT:STAT OFF

Mode:

WCDMA

[SENSe:]CDPower:FRAMe[:VALue] <Frame>

This command defines the frame to be analyzed within the captured data.

Range: <numeric value> [0 ... CAPTURE_LENGTH – 1]

Parameters:

<Frame>

<numeric value>

*RST: 1

Example:

CDP:FRAM:VAL 1

Mode:

WCDMA

[SENSe:]CDPower:FRAMe[:LVALue] <Value>

Selects the frame to be analyzed.

Parameters:

<Value>

<numeric value> [0 ... CAPTURE_LENGTH – 1]

*RST: 0

Example:

SENS:CDP:FRAM 1

Mode:

WCDMA

[SENSe:]CDPower:HSDPamode <State>

This command selects if the HS-DPCCH channel is searched or not.

Parameters:

<State> ON: The HSUPA/HSDPA channel can be detected.
 *RST: ON
 OFF: The HSUPA/HSDPA channel cannot be detected.

Example: CDP:HSDP OFF

Mode: WCDMA

[SENSe:]CDPower:HSLot <State>

This command switches the R&S FSV-K73 between the analysis of one half and one full slot.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: SENS:CDP:HSL ON

Mode: WCDMA

[SENSe:]CDPower:ICThreshold <ThresholdLevel>

This command defines the minimum power that a single channel must have compared to the total signal in order to be regarded as an active channel. Channels below the specified threshold are regarded as "inactive".

Parameters:

<ThresholdLevel>
 Range: -100 dB to 0 dB
 *RST: -60 dB

Example: CDP:ICT -50
 Sets the Inactive Channel Threshold to -50 dB.

Mode: CDMA, EVDO, TDS, WCDMA

[SENSe:]CDPower:IQLength <CaptureLength>

This command specifies the number of frames that are captured by one sweep.

Parameters:

<CaptureLength>
 Range: 1 to 100
 *RST: 1

Example: SENS:CDP:IQLength 3

Mode: WCDMA

[SENSe:]CDPower:LCODE:TYPE <Type>

This command switches between long and short scrambling code.

Parameters:

<Type> LONG | SHORt
*RST: LONG

Example: CDP:LCOD:TYPE SHOR

Mode: WCDMA

[SENSe:]CDPower:LCODE:SEARch:[IMMediate]?

This command automatically searches for the scrambling codes that lead to the highest signal power. The code with the highest power is stored as the new scrambling code for further measurements.

Searching requires that the correct center frequency and level are set. The scrambling code search can automatically determine the primary scrambling code number. The secondary scrambling code number is expected as 0. Alternative scrambling codes can not be detected. Therefore the range for detection is 0x0000 – 0x1FF0h, where the last digit is always 0.

If the search is successful (PASS), a code was found and can be queried using

[\[SENSe:\]CDPower:LCODE:SEARch:LIST](#).

Parameters:

<Status> **PASSed**
 Scrambling code(s) found.
 FAILed
 No scrambling code found.

Example: SENS:CDP:LCOD:SEAR?
 Searches the scrambling code that leads to the highest signal power and returns the status of the search.

Usage: Query only

Mode: WCDMA

[SENSe:]CDPower:LCODE:SEARch:LIST

This command returns the automatic search sequence (see [\[SENSe:\]CDPower:LCODE:SEARch:\[IMMediate\]](#) on page 162).

Return values:

Return value <Code (decimal)>,<Code (hexadecimal)>,<CPICH power (dBm)>
for each detected scrambling code

A comma separated result table of the highest power values and the corresponding scrambling codes in decimal and hexadecimal format.

Example:

SENS:CDP:LCOD:SEAR:LIST?

Result:

16,0x10,-18.04,32,0x20,-22.87,48,0x30,-27.62,
64,0x40,-29.46

(Explanation in table below)

Mode: WCDMA

code (dec)	code(hex)	CPICH power (dBm)
16,	0x10,	-18.04
32,	0x20,	-22.87
48,	0x30,	-27.62
64,	0x40,	-29.46

[SENSe:]CDPower:LCODE[:VALue] <ScramblingCode>

This command defines the scrambling code in hexadecimal format.

Parameters:

<ScramblingCode>

Range: #H0 to #H1fff

*RST: 0

Example: CDP:LCOD #H2

Mode: WCDMA

[SENSe:]CDPower:LEVeL:ADJust

This command adjusts the reference level to the measured channel power. This ensures that the settings of the RF attenuation and the reference level are optimally adjusted to the signal level without overloading the analyzer or limiting the dynamic range by an S/N ratio that is too small.

Example: CDP:LEV:ADJ
Adjusts the reference level.

Mode: CDMA, EVDO, TDS, WCDMA

[SENSe:]CDPower:MAPPING <SignalComponent>

This command switches between I and Q component of the signal.

Parameters:

<SignalComponent> I | Q

*RST: Q

Example:

CDP:MAPP Q

Mode:

CDMA, WCDMA

[SENSe:]CDPower:NORMALize <boolean>

This command activates or deactivates the elimination of the IQ offset from the signal.

Parameters:

<ON | OFF>

*RST: OFF

Example:

CDP:NORM ON

Activates normalization.

Mode:

CDMA, EVDO, TDS, WCDMA

[SENSe:]CDPower:OVERview <State>

This command switches to an overview display of a code domain measurement (CDP rel./CDP abs./ CDEP). If enabled, the I branch of the code power is displayed in screen A and the Q branch in screen B. Both results can be read using `TRACE:DATA? TRACE1` and `TRACE:DATA? TRACE2`; respectively. If disabled, screen A displays the I branch and screen B provides the result summary display.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CDP:OVER OFF

Mode:

CDMA, EVDO, WCDMA

[SENSe:]CDPower:PDIsplay <Mode>

This command switches between showing the absolute or relative power to the chosen reference.

This parameter only affects the display mode code domain power.

Parameters:

<Mode> ABS | REL

*RST: ABS

Example:

SENS:CDP:PDIS ABS

Mode:

WCDMA

[SENSe:]CDPower:QINVert <State>

This command inverts the Q component of the signal.

Parameters:

ON | OFF

*RST: OFF

Example:

CDP:QINV ON

Activates inversion of Q component.

Mode:

CDMA, EVDO, TDS, WCDMA

[SENSe:]CDPower:SFACTOR <SpreadingFactor>

This command defines the spreading factor. The spreading factor is only significant for display mode PEAK CODE DOMAIN ERROR.

Parameters:

<SpreadingFactor> 4 | 8 | 16 | 32 | 64 | 128 | 256

*RST: 256

Example:

CDP:SFAC 256

Mode:

WCDMA

[SENSe:]CDPower:SLOT <numeric value>

This command selects the slot/Power Control Group (PCG) to be analyzed.

Parameters:

<numeric value>

Range: 0 to TDS: 62; CDMA: (capture length-1); WCDMA.
14

Increment: 1

*RST: 0

The capture length is defined via the [\[SENSe:\]CDPower:IQLength](#) command.**Example:**

CDP:SLOT 7

Selects slot number 7 for analysis.

Mode: CDMA, EVDO, TDS, WCDMA

4.6.5.2 SENSE:POWer Subsystem

This subsystem controls the parameters for the spectral power measurements. The numeric suffix in SENSE<1...4> is not significant in this subsystem.

[SENSe:]POWer:ACHannel:ACPairs.....	166
[SENSe:]POWer:ACHannel:BANDwidth BWIDth[:CHANnel<channel>].....	166
[SENSe:]POWer:ACHannel:BANDwidth BWIDth:ACHannel.....	167
[SENSe:]POWer:ACHannel:BANDwidth BWIDth:ALTErnate<channel>.....	167
[SENSe:]POWer:ACHannel:MODE.....	168
[SENSe:]POWer:ACHannel:PRESet:RLEVel.....	168
[SENSe:]POWer:ACHannel:REFerence:AUTO ONCE.....	168
[SENSe:]POWer:ACHannel:REFerence:TXCHannel:AUTO.....	169
[SENSe:]POWer:ACHannel:TXCHannel:COUNt.....	169
[SENSe:]POWer:TRACe.....	169
[SENSe:]POWer:ACHannel:PRESet MCACpower.....	170
[SENSe:]POWer:ACHannel:SPACing[:ACHannel].....	170
[SENSe:]POWer:ACHannel:SPACing:ALTErnate<channel>.....	170
[SENSe:]POWer:ACHannel:SPACing:CHANnel<channel>.....	171
[SENSe:]POWer:HSPeEd.....	171
[SENSe:]POWer:NCORrection.....	172

[SENSe:]POWer:ACHannel:ACPairs <Value>

This command sets the number of adjacent channels (upper and lower channel in pairs). The figure 0 stands for pure channel power measurement.

Parameters:

<Value> 0 to 12 (WCDMA: 0 to 3)
*RST: 1

Example:

POW:ACH:ACP 3
Sets the number of adjacent channels to 3, i.e. the adjacent channel and alternate adjacent channels 1 and 2 are switched on.

Mode: A-F, CDMA, EVDO, TDS, WCDMA

[SENSe:]POWer:ACHannel:BANDwidth|BWIDth[:CHANnel<channel>] <Bandwidth>

This command sets the channel bandwidth of the specified TX channel in the radio communication system. The bandwidths of adjacent channels are not influenced by this modification.

With [SENSe<source>:]POWer:HSPeEd set to ON, steep-edged channel filters are available. For further information on filters refer to [chapter 4.4.3.6, "List of Available RRC and Channel Filters"](#), on page 31.

Parameters:**<Bandwidth>** 100 Hz to 1000 MHz***RST:** 14 kHz**Example:**

POW:ACH:BWID:CHAN2 30 kHz

Sets the bandwidth of the TX channel 2 to 30 kHz.

Mode:

A-F, CDMA, EVDO, OFDM, OFDMA/WiBro, TDS, WCDMA

[SENSe:]POWer:ACHannel:BANDwidth|BWIDth:ACHannel <Bandwidth>

This command defines the channel bandwidth of the adjacent channel of the radio transmission system. If the bandwidth of the adjacent channel is changed, the bandwidths of all alternate adjacent channels are automatically set to the same value.

With [SENSe<source>:]POWer:HSPEED set to ON, steep-edged channel filters are available. For further information on filters refer to [chapter 4.4.3.6, "List of Available RRC and Channel Filters"](#), on page 31 .

Parameters:**<Bandwidth>** 100 Hz to 1000 MHz***RST:** 14 kHz**Example:**

POW:ACH:BWID:ACH 30 kHz

Sets the bandwidth of all adjacent channels to 30 kHz.

Mode:

A-F, CDMA, EVDO, OFDM, OFDMA/WiBro, TDS, WCDMA

**[SENSe:]POWer:ACHannel:BANDwidth|BWIDth:ALTernate<channel>
<Bandwidth>**

This command defines the channel bandwidth of the specified alternate adjacent channels of the radio transmission system. If the channel bandwidth of one alternate adjacent channel is changed (e.g. channel 3), the bandwidth of all subsequent alternate adjacent channels (e.g. 4–11) is automatically set to the same value.

With [SENSe<source>:]POWer:HSPEED set to ON, steep-edged channel filters are available. For further information on filters refer to [chapter 4.4.3.6, "List of Available RRC and Channel Filters"](#), on page 31 .

Suffix:**<channel>** 1...11
the alternate adjacent channel**Parameters:****<Bandwidth>** 100 Hz to 1000 MHz***RST:** 14 kHz**Example:**

POW:ACH:BWID:ALT2 30 kHz

Mode:

A-F, CDMA, EVDO, TDS, WCDMA

[SENSe:]POWer:ACHannel:MODE <Mode>

This command switches between absolute and relative adjacent channel measurement. The command is only available with span > 0 and if the number of adjacent channels is greater than 0.

For the relative measurement the reference value is set to the currently measured channel power using the command `[SENSe:]POWer:ACHannel:REFerence:AUTO ONCE`.

Parameters:

<Mode> ABSolute | RELative

ABSolute
absolute adjacent channel measurement

RELative
relative adjacent channel measurement

*RST: RELative

Example: `POW:ACH:MODE REL`
Sets the adjacent channel measurement mode to relative.

Mode: A-F, CDMA, EVDO, OFDM, OFDMA/WiBro, WCDMA, TDS

[SENSe:]POWer:ACHannel:PRESet:RLEVel

This command adapts the reference level to the measured channel power and – if required – switches on previously the adjacent channel power measurement. This ensures that the signal path of the instrument is not overloaded. Since the measurement bandwidth is significantly smaller than the signal bandwidth in channel power measurements, the signal path can be overloaded although the trace is still significantly below the reference level. If the measured channel power equals the reference level, the signal path is not overloaded.

Subsequent commands have to be synchronized with *WAI, *OPC or *OPC? to the end of the auto range process which would otherwise be aborted.

Example: `POW:ACH:PRESet:RLEV; *WAI`
Adapts the reference level to the measured channel power.

Mode: A-F, CDMA, EVDO, TDS, WCDMA

[SENSe:]POWer:ACHannel:REFerence:AUTO ONCE

This command sets the reference value to the currently measured channel power for the relative measurement.

Example: `POW:ACH:REF: AUTO ONCE`

Mode: A-F, CDMA, EVDO, TDS, WCDMA

[SENSe:]POWer:ACHannel:REFerence:TXCHannel:AUTO <Channel>

This command activates the automatic selection of a transmission channel to be used as a reference channel in relative adjacent-channel power measurements.

The transmission channel with the highest power, the transmission channel with the lowest power, or the transmission channel nearest to the adjacent channels can be defined as a reference channel.

The command is available only for multicarrier channel and adjacent-channel power measurements with span > 0 ([CALCulate<n>:MARKer<m>:FUNction:POWer:SElect](#) on page 122).

Parameters:

<Channel>	MINimum MAXimum LHIGHest
	MINimum Transmission channel with the lowest power
	MAXimum Transmission channel with the highest power
	LHIGHest Lowermost transmission channel for the lower adjacent channels, uppermost transmission channel for the upper adjacent channels

Example: `POW:ACH:REF:TXCH:AUTO MAX`
The transmission channel with the highest power is used as a reference channel.

Mode: A-F, EVDO, TDS, WCDMA

[SENSe:]POWer:ACHannel:TXCHannel:COUNT <Number>

This command selects the number of carrier signals.

The command is available only for multicarrier channel and adjacent-channel power measurements with span > 0 (see [CALCulate<n>:MARKer<m>:FUNction:POWer:SElect](#) on page 122).

Parameters:

<Number>	1 to 18
	*RST: 1

Example: `POW:ACH:TXCH:COUN 3`

Mode: A, CDMA, EVDO, TDS, WCDMA

[SENSe:]POWer:TRACe <TraceNumber>

This command assigns the channel/adjacent channel power measurement to the indicated trace. The corresponding trace must be active, i.e. its state must be different from blank.

Note: The measurement of the occupied bandwidth (OBW) is performed on the trace on which marker 1 is positioned. To evaluate another trace, marker 1 must be positioned to another trace with `CALCulate<n>:MARKer<m>:TRACe`.

Parameters:

<TraceNumber> 1 to 6

Example:

`POW:TRAC 2`
Assigns the measurement to trace 2.

Mode:

A, CDMA, EVDO, TDS, WCDMA

[SENSe:]POWER:ACHannel:PRESet MCACpower

This command adjusts the frequency span, the measurement bandwidths and the detector as required for the number of channels, the channel bandwidths and the channel spacings selected in the active power measurement. If necessary, adjacent-channel power measurement is switched on prior to the adjustment. To obtain valid results, a complete sweep with synchronization to the end of the sweep must be performed after the adjustment. Synchronization is possible only in the single-sweep mode.

Example:

`POW:ACH:PRES MCAC`

Mode:

WCDMA

[SENSe:]POWER:ACHannel:SPACing[:ACHannel] <Value>

This command defines the spacing between the carrier signal and the adjacent channel (ADJ). The modification of the adjacent-channel spacing (ADJ) causes a change in all higher adjacent-channel spacings (ALT1, ALT2, ...): they are all multiplied by the same factor (new spacing value/old spacing value).

Parameters:

<Value> 100 Hz to 2000 MHz

*RST: 14 kHz

Example:

`POW:ACH:SPAC 33kHz`
Sets the spacing between the carrier signal and the adjacent channel to 33 kHz, the alternate adjacent channel 1 to 66 kHz, the alternate adjacent channel 2 to 99 kHz, and so on.

Mode:

A-F, CDMA, EVDO, OFDM, OFDMA/WiBro, TDS, WCDMA

[SENSe:]POWER:ACHannel:SPACing:ALTErnate<channel> <Spacing>

This command defines the spacing between the alternate adjacent channels and the TX channel (ALT1, ALT2, ...). A modification of a higher adjacent-channel spacing causes a change by the same factor (new spacing value/old spacing value) in all higher adjacent-channel spacings, while the lower adjacent-channel spacings remain unchanged.

Suffix:	
<channel>	1...11 the alternate adjacent channel
Parameters:	
<Spacing>	100 Hz to 2000 MHz *RST: 40 kHz (ALT1), 60 kHz (ALT2), 80 kHz (ALT3), ...
Example:	POW:ACH:SPAC:ALT1 100 kHz Sets the spacing between TX channel and alternate adjacent channel 1 (ALT1) from 40 kHz to 100 kHz. In consequence, the spacing between the TX channel and all higher alternate adjacent channels is increased by the factor $100/40 = 2.5$: ALT2 = 150 kHz, ALT3 = 200 kHz, ALT4 = 250 kHz.
Mode:	A-F, CDMA, EVDO, TDS, WCDMA

[SENSe:]POWer:ACHannel:SPACing:CHANnel<channel> <Value>

This command defines the channel spacing for the carrier signals.

Suffix:	
<channel>	1...11 the TX channel
Parameters:	
<Value>	14 kHz to 2000 MHz *RST: 20 kHz
Example:	POW:ACH:SPAC:CHAN 25kHz
Mode:	A-F, CDMA, EVDO, TDS, WCDMA

[SENSe:]POWer:HSPeed <State>

This command switches on or off the high-speed channel/adjacent channel power measurement. The measurement itself is performed in zero span on the center frequencies of the individual channels. The command automatically switches to zero span and back.

Depending on the selected mobile radio standard, weighting filters with characteristic or very steep-sided channel filters are used for band limitation.

Parameters:	
<State>	ON OFF *RST: OFF
Example:	POW:HSP ON
Mode:	A-F, CDMA, EVDO, TDS, WCDMA

[SENSe:]POWer:NCORrection

When the function is switched on, a reference measurement of the instrument's inherent noise is carried out. The noise power measured is then subtracted from the power in the channel that is being examined.

Parameters:

*RST: OFF

Example:

POW:NCOR ON

Mode:

A-F, CDMA, EVDO, OFDM, OFDMA/WiBro, TDS, WCDMA

4.6.5.3 Other SENSe Commands Referenced in this Manual

[SENSe:]ADJust:ALL

Activates all automatic settings:

- Frequency
- Level

Example:

ADJ:ALL

Mode:

A, ADEMOD, CDMA, EVDO, PHN, TDS, WCDMA

[SENSe:]ADJust:CONFigure:LEVel:DURation <Duration>

Defines the duration of the level measurement used to determine the optimal reference level automatically (for `SENS:ADJ:LEV ON`).

Parameters:

<Duration> <numeric value> in seconds

Range: 0.001 to 16000.0

*RST: 0.001

Default unit: s

Example:

ADJ:CONF:LEV:DUR:5

Mode:

A, ADEMOD, CDMA, EVDO, TDS, VSA, WCDMA

[SENSe:]ADJust:LEVel

This command automatically sets the optimal reference level for the current measurement.

Example:

ADJ:LEV

Mode:

A, ADEMOD, CDMA, EVDO, PHN, TDS, WCDMA

[SENSe:]AVERage<n>:COUNT <NoMeasurements>

This command defines the number of measurements which contribute to the average value in the window specified by the AVERage<n> suffix.

Note that continuous averaging is performed after the indicated number has been reached in continuous sweep mode.

In single sweep mode, the sweep is stopped as soon as the indicated number of measurements (sweeps) is reached. Synchronization to the end of the indicated number of measurements is only possible in single sweep mode.

This command has the same effect as the [SENSe<source>:]SWEep:COUNT command. In both cases, the number of measurements is defined whether the average calculation is active or not.

The number of measurements applies to all traces in the window.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

Parameters:

<NoMeasurements> 0 to 32767

*RST: 0

Example:

SWE:CONT OFF

Switching to single sweep mode.

AVER:COUN 16

Sets the number of measurements to 16.

AVER:STAT ON

Switches on the calculation of average.

INIT;*WAI

Starts the measurement and waits for the end of the 16 sweeps.

Mode:

all

[SENSe:]AVERage<n>:TYPE <FunctionType>

This command selects the type of average function in the window specified by the AVERage<n> suffix.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

Parameters:

<FunctionType> VIDEo | LINear | POWer

VIDeO

The logarithmic power values are averaged.

LINear

The power values are averaged before they are converted to logarithmic values.

POWer

The power level values are converted into unit Watt prior to averaging. After the averaging, the data is converted back into its original unit.

*RST: VIDEo

Example:

AVER:TYPE LIN

Switches to linear average calculation.

Mode:

A, ADEMOD, BT, WCDMA

[SENSe:]BANDwidth|BWIDth[:RESolution] <Bandwidth>

This command defines the resolution bandwidth.

The available resolution bandwidths are specified in the data sheet. For details on the correlation between resolution bandwidth and filter type refer to [chapter 4.4.3.5, "Selecting the Appropriate Filter Type"](#), on page 31.

In realtime mode, the resolution bandwidth is always coupled to the span. In all other modes, a change of the resolution bandwidth automatically switches the coupling to the span off.

Parameters:

<Bandwidth> refer to data sheet

*RST: (AUTO is set to ON)

Example:

BAND 1 MHz

Sets the resolution bandwidth to 1 MHz

Mode:

all, except ADEMOD

[SENSe:]BANDwidth|BWIDth[:RESolution]:AUTO <State>

This command either automatically couples the resolution bandwidth of the instrument to the span or cancels the coupling.

The automatic coupling adapts the resolution bandwidth to the currently set frequency span according to the relationship between frequency span and resolution bandwidth. The 6 dB bandwidths 200 Hz, 9 kHz and 120 kHz and the channel filters available are not set by the automatic coupling.

The ratio resolution bandwidth/span can be modified with the `[SENSe:]BANDwidth|BWIDth[:RESolution]:RATio` command.

Parameters:

<State> ON | OFF
*RST: ON

Example:

`BAND:AUTO OFF`
Switches off the coupling of the resolution bandwidth to the span.

Mode:

A-F, BT, CDMA, EVDO, TDS, WCDMA

[SENSe:]BANDwidth|BWIDth[:RESolution]:FFT <FilterMode>

Defines the filter mode to be used for FFT filters by defining the partial span size. The partial span is the span which is covered by one FFT analysis.

This command is only available when using the sweep type "FFT".

Parameters:

<FilterMode> WIDE | AUTO | NARRow

WIDE

The FFT filters with the wider partial span are used.

AUTO

The firmware determines whether to use wide or narrow filters to obtain the best measurement results.

NARRow

The FFT filters with the smaller partial span are used. This allows you to perform measurements near a carrier with a reduced reference level due to a narrower analog prefilter.

*RST: AUTO

Example:

`BAND:TYPE FFT`
Select FFT filter.

Example:

`BAND:FFT NARR`
Select narrow partial span for FFT filter.

Mode:

all, except ADEMOD

[SENSe:]BANDwidth|BWIDth[:RESolution]:RATio <Ratio>

This command defines the ratio resolution bandwidth (Hz)/span (Hz). The ratio to be entered is reciprocal to the ratio span/RBW used in manual operation.

Parameters:

<Ratio> 0.0001 to 1
*RST: 0.01

Example: BAND:RAT 0.1
Mode: A, BT, CDMA, EVDO, TDS, WCDMA

[SENSe:]BANDwidth|BWIDTH[:RESolution]:TYPE <FilterType>

This command switches the filter type for the resolution bandwidth.

For detailed information on filters see [chapter 4.4.3.5, "Selecting the Appropriate Filter Type"](#), on page 31 and [chapter 4.4.3.6, "List of Available RRC and Channel Filters"](#), on page 31.

When changing the filter type, the next larger filter bandwidth is selected if the same filter bandwidth is not available for the new filter type.

5 Pole filters are not available when using the sweep type "FFT".

Parameters:

<FilterType>

- NORMAL**
Gaussian filters
- FFT**
FFT filters
- CFILTER**
channel filters
- RRC**
RRC filters
- P5**
5 Pole filters
- *RST: NORMAL

Example: BAND:TYPE NORM
Mode: all, except ADEMOD

[SENSe:]BANDwidth|BWIDTH:VIDeo <Bandwidth>

This command defines the instruments video bandwidth. The available video bandwidths are specified in the data sheet.

Parameters:

<Bandwidth> refer to data sheet

*RST: (AUTO is set to ON)

Example: BAND:VID 10 kHz
Mode: A, CDMA, EVDO, TDS, WCDMA

[SENSe:]BANDwidth|BWIDth:VIDeo:AUTO <State>

This command either automatically couples the instruments video bandwidth to the resolution bandwidth or cancels the coupling.

The ratio video bandwidth/resolution bandwidth can be modified with the `[SENSe:]BANDwidth|BWIDth[:RESolution]:RATio` command.

Parameters:

<State> ON | OFF
*RST: ON

Example: BAND:VID:AUTO OFF

Mode: A, CDMA, EVDO, TDS, WCDMA

[SENSe:]BANDwidth|BWIDth:VIDeo:RATio <Ratio>

This command defines the ratio video bandwidth (Hz)/resolution bandwidth (Hz). The ratio to be entered is reciprocal to the ratio RBW/VBW used in manual operation.

Parameters:

<Ratio> 0.01 to 1000
*RST: 3

Example: BAND:VID:RAT 3
Sets the coupling of video bandwidth to video bandwidth = 3*resolution bandwidth

Mode: A, CDMA, EVDO, TDS, WCDMA

[SENSe:]FREQuency:CENTer <Frequency>

This command defines the center frequency of the analyzer or the measuring frequency for span = 0.

Parameters:

<Frequency> <numeric_value>
Range: 0 to f_{max}
*RST: f_{max}/2
Default unit: Hz
f_{max} is specified in the data sheet. min span is 10 Hz

Example: FREQ:CENT 100 MHz

Mode: all

[SENSe:]FREQuency:CENTer:STEP[:VALue] <StepSize>

This command defines the step size of the center frequency.

Parameters:

<StepSize> <numeric_value>
 Range: 1 to 1000000000
 *RST: - (AUTO 0.1 × SPAN is switched on)
 Default unit: Hz

Example: `FREQ:CENT:STEP 120 MHz`

Mode: all

[SENSe:]FREQuency:CENTer:STEP:AUTO <State>

This command couples the step size of the center frequency to the span (ON) or sets the value of the center frequency entered via `[SENSe:]FREQuency:CENTer` (OFF).

Parameters:

<State> ON | OFF
 *RST: ON

Example: `FREQ:CENT:STEP:AUTO ON`
 Activates the coupling of the step size to the span.

Mode: all

[SENSe:]FREQuency:CENTer:STEP:LINK <CouplingType>

This command couples the step size of the center frequency to span (span >0) or to the resolution bandwidth (span = 0) or cancels the couplings.

Parameters:

<CouplingType> OFF | SPAN | RBW
SPAN
 coupling to frequency display range (for span > 0)
RBW
 coupling to resolution bandwidth (for span = 0)
OFF
 manual input, no coupling
 *RST: SPAN

Example: `FREQ:CENT:STEP:LINK SPAN`

Mode: A, ADEMOD, CDMA, EVDO, TDS, WCDMA

[SENSe:]FREQuency:CENTer:STEP:LINK:FACTOR <Value>

This command couples the step size of the center frequency with a factor to the span (span >0) or to the resolution bandwidth (span = 0).

Parameters:

<Value> 1 to 100 PCT
 *RST: (AUTO 0.1 × SPAN is switched on)

Example:

FREQ:CENT:STEP:LINK:FACT 20PCT

Mode:

A, ADEMOD, CDMA, EVDO, TDS, WCDMA

[SENSe:]FREQuency:OFFSet <Offset>

This command defines the frequency offset of the instrument.

Parameters:

<Offset> <numeric_value>
 Range: -100 GHz to 100 GHz
 *RST: 0 Hz

Example:

FREQ:OFFS 1GHZ

Mode:

all

**[SENSe:]FREQuency:SPAN **

This command defines the frequency span.

Parameters:

 In realtime mode, the minimum span is 100 Hz and the maximum span is 40 MHz.
 In analyzer mode, the span range is 10 Hz to f_{max} . For SEM and Spurious Emission measurements, the minimum span 20 Hz.
 *RST: f_{max}

Example:

FREQ:SPAN 10MHz

Mode:

A, CDMA, EVDO, RT, TDS, NF, WCDMA

[SENSe:]FREQuency:SPAN:FULL

This command sets the frequency span to its maximum.

In realtime mode, the maximum span is 40 MHz.

Example:

FREQ:SPAN:FULL

Mode:

A, CDMA, EVDO, RT, TDS, NF, WCDMA

[SENSe:]FREQuency:STARt <Frequency>

This command defines the start frequency of the analyzer. This command is only available with span > 0.

Parameters:

<Frequency> 0 to (fmax - min span)

In realtime mode, the minimum span is 100 Hz and the maximum span is 40 MHz. If you set a start frequency that would exceed this span, the analyzer adjusts the stop frequency to get a span of 40 MHz.

In analyzer mode, the span range is 10 Hz to f_{max} . For SEM and Spurious Emission measurements, the minimum span 20 Hz.

*RST: 0

Example: `FREQ:STAR 20MHz`

Mode: A-F, CDMA, EVDO, RT, TDS, NF, PHN, WCDMA

[SENSe:]FREQuency:STOP <Frequency>

This command defines the stop frequency of the analyzer. This command is only available with span > 0.

Parameters:

<Frequency> min span to fmax

In realtime mode, the minimum span is 100 Hz and the maximum span is 40 MHz. If you set a stop frequency that would exceed this span, the analyzer adjusts the start frequency to get a span of 40 MHz.

In analyzer mode, the span range is 10 Hz to f_{max} . For SEM and Spurious Emission measurements, the minimum span 20 Hz.

*RST: fmax

Example: `FREQ:STOP 2000 MHz`

Mode: A-F, CDMA, EVDO, RT, TDS, NF, PHN, WCDMA

[SENSe:]SWEep:COUNT <NumberSweeps>

This command defines the number of sweeps started with single sweep, which are used for calculating the average or maximum value. If the values 0 or 1 are set, one sweep is performed.

Parameters:

<NumberSweeps> 0 to 32767

*RST: 0 (GSM: 200)

Example: SWE:COUN 64
 Sets the number of sweeps to 64.
 INIT:CONT OFF
 Switches to single sweep mode.
 INIT;*WAI
 Starts a sweep and waits for its end.

Mode: A, ADEMOD, BT, CDMA, EVDO, PHN, TDS, WCDMA, GSM, NF

[SENSe:]SWEep:POINTs <NumberPoints>

This command defines the number of measurement points to be collected during one sweep.

Note: For Spurious Emissions measurements the maximum number of sweep points in all ranges is limited to 100001.

Parameters:
 <NumberPoints> 101 to 32001
 *RST: 691 (NF: 11)

Example: SWE:POIN 251
Mode: A, ADEMOD, BT, CDMA, EVDO, TDS, NF, PHN, WCDMA

[SENSe:]SWEep:EGATe:POLarity <Polarity>

This command determines the polarity of the external gate signal. The setting applies both to the edge of an edge-triggered signal and the level of a level-triggered signal.

Parameters:
 <Polarity> POSitive | NEGative
 *RST: POSitive

Example: SWE:EGAT:POL POS
Mode: A, ADEMOD, BT, EVDO, TDS, WCDMA

[SENSe:]SWEep:TIME <Time>

This command defines the sweep time.

The range depends on the frequency span.

If this command is used in analyzer mode, automatic coupling to resolution bandwidth and video bandwidth is switched off.

Parameters:
 <Time> refer to data sheet
 *RST: (AUTO is set to ON)

Example: `SWE:TIME 10s`

Mode: ALL

[SENSe:]SWEep:TIME:AUTO <State>

In realtime mode, this command automatically sets the sweep time to 32 ms.

In analyzer mode, this command controls the automatic coupling of the sweep time to the frequency span and bandwidth settings. If `[SENSe:]SWEep:TIME` is used, automatic coupling is switched off.

Parameters:

<State> ON | OFF
 *RST: ON

Example: `SWE:TIME:AUTO ON`
 Activates automatic sweep time.

Mode: A, BT, CDMA, EVDO, RT, TDS, NF, WCDMA

[SENSe:]SWEep:TYPE <Type>

Parameters:

<Type> SWE | AUTO | FFT
SWE
 Sweep list
AUTO
 Automatic selection of the sweep type.
FFT
 FFT mode
 *RST: AUTO
 Sets the sweep type.

Example: `SWE:TYPE FFT`

Mode: all

4.6.6 STATus:QUEStionable subsystem (R&S FSV-K73)

The STATus subsystem contains the commands for the status reporting system (for details refer to the remote control basics in the base unit description). *RST does not influence the status registers.

The STATus:QUEStionable subsystem contains information about the observance of limits during adjacent power measurements, the reference and local oscillator, the observance of limit lines and limit margins and possible overloads of the unit.

The available remote commands are described in detail in the `STATus:QUESTionable` subsystem in the base unit.

4.6.6.1 `STATus:QUESTionable:SYNC` subsystem (R&S FSV-K73)

This register contains information on the error situation in the code domain power analysis of the R&S FS K73 option. It can be queried with the following commands:

<code>STATus:QUESTionable:SYNC:CONDition</code>	183
<code>STATus:QUESTionable:SYNC[:EVENT]</code>	183

`STATus:QUESTionable:SYNC:CONDition?`

This command reads the information on the error situation in the code domain power analysis.

Return values:

<Result> If the result is ON, an error occurred. Details can be obtained using `STAT:QUES:SYNC:EVEN`.
*RST: OFF

Example: `STAT:QUES:SYNC:COND?`

Usage: Query only

Mode: WCDMA, CDMA, EVDO

`STATus:QUESTionable:SYNC[:EVENT]?`

This command reads the information on the error situation in the code domain power analysis. The value can only be read once. The possible events are described in the table below.

Example: `STAT:QUES:SYNC[:EVENT]?`

Usage: Query only

Mode: WCDMA, CDMA, EVDO

Bit	Definition
0	Not used.
1	<p>Frame Sync failed</p> <p>This bit is set when synchronization is not possible within the application.</p> <p>Possible reasons:</p> <ul style="list-style-type: none"> ● Incorrectly set frequency ● Incorrectly set level ● Incorrectly set scrambling code ● Incorrectly set values for Q-INVERT or SIDE BAND INVERT ● Invalid signal at input ● !!ERROR: Document structure missing in li > Must contain atleast one child
2	Not used.

Bit	Definition
3 to 4	Not used.
5	<p>Incorrect Pilot Symbol</p> <p>This bit is set when one or more of the received pilot symbols are not equal to the specified pilot symbols of the 3GPP standard.</p> <p>Possible reasons:</p> <ul style="list-style-type: none"> • Incorrectly sent pilot symbols in the received frame. • Low signal to noise ratio (SNR) of the WCDMA signal. • One or more code channels has a significantly lower power level compared to the total power. The incorrect pilots are detected in these channels because of low channel SNR. • One or more channels are sent with high power ramping. In slots with low relative power to total power, the pilot symbols might be detected incorrectly (check the signal quality by using the symbol constellation display).
6 to 14	Not used.
15	This bit is always 0.

4.6.7 TRACe subsystem (R&S FSV-K73)

The TRACe subsystem controls access to the instruments internal trace memory.

TRACe<n>[:DATA].....	184
TRACe<n>[:DATA].....	185
TRACe<n>[:DATA].....	186
TRACe<n>[:DATA].....	186
TRACe<n>[:DATA].....	187
TRACe<n>[:DATA].....	189
TRACe<n>[:DATA].....	190
TRACe<n>[:DATA].....	191

TRACe<n>[:DATA]? <DataType>

This query reads trace data out of the instrument. The result depends on the specified data type (see also [chapter 4.5.1.3, "Measurement Modes in Code Domain Analyzer"](#), on page 50).

For details on the results see the individual command descriptions.

Suffix:

<n> 1...4
 irrelevant

Query parameters:

<DataType> TRACE1 | TRACE2 | TRACE3 | TRACE4 | ABITstream | CWCDp
 | CTABLE | TPVSlot | CEVM | LIST

Example: TRAC:DATA? CEVM

Usage: Query only

Mode: WCDMA

TRACe<n>[:DATA]? ABITstream<n>

This command returns the bit streams of all 15 slots one after the other. The output format may be REAL, UINT or ASCII. The number of bits of a 16QAM-modulated channel is twice that of a QPSK-modulated channel, the number of bits of a 64QAM-modulated channel is three times that of a QPSK-modulated channel.

This query is only available if the result diagram for the corresponding screen is set to "Bitstream", e.g. using the `CALC:FEED 'XTIM:CDP:BSTream'` command (see [CALCulate<n>:FEED](#) on page 105).

The output format is identical to that of the [CALCulate:FEED subsystem](#) command for an activated Bitstream display. The only difference is the number of symbols which are evaluated. The ABITstream parameter evaluates all symbols of one frame. Each symbol contains two (QPSK) or four (16QAM) consecutive bits. One value is transferred per bit (range 0,1,). The number of symbols is not constant and may vary depending on the selected channel and its symbol modulation type. Individual symbols in the bit stream may be invalid depending on the channel type and the bit rate (symbols without power). In this case the character '9' is returned.

Unit	[]
Value range	{0, 1, 7, 9} 0 - Low state of a transmitted bit 1 - High state of a transmitted bit 6 - Suppressed symbol of a HS-DPCCH slot 9 - Bit of an inactive channel
Bits per slot	$N_{\text{BitPerSymb}} = 2$
Number of symbols	$N_{\text{Symb}} = 150 * 2^{(8\text{-Code Class})}$
Number of bits	$N_{\text{Bit}} = N_{\text{Symb}} * N_{\text{BitPerSymb}}$
Format	Bit ₀₀ , Bit ₀₁ , Bit ₁₀ , Bit ₁₁ , Bit ₂₀ , Bit ₂₁ , ..., Bit _{N_{Symb}0} , Bit _{N_{Symb}1}

Suffix:

<n> 1...4
window

Example:

```
CALC2:FEED "XTIM:CDP:BSTream"
```

Sets the result display for screen B to bitstream.

```
TRAC2:DATA? ABITstream2
```

Returns the bit streams of all 15 slots in trace 2 (screen B), one after the other.

Usage: Query only

Mode: WCDMA

TRACe<n>[:DATA]? CEVM

This command reads the root mean square (RMS) value of the error vector magnitude (EVM_{RMS}). The measurement interval of the RMS value depends on analyzer settings and the channel configuration of the applied signal (refer to [\[SENSe:\]CDPower:ETChips](#) on page 159). The information of the chip limits of the used measurement interval are given for each slot.

Suffix:

<n> 1...4
window

Return values:

Result 15 groups with 6 values per group are returned
<slot0>,<EVM0>,
<BeginMeas0>,<EndMeas0>,<Reserved_A0>,<Reserved_B0>
<slot1>,<EVM1>,<BeginMeas1>,<EndMeas1>,
<Reserved_A1>,<Reserved_B1>
...
<slot14>,<EVM14>,<BeginMeas14>,<EndMeas14>,<Reserved_A14>,<Reserved_B14>

Example: TRAC2:DATA? CEVM

Usage: Query only

TRACe<n>[:DATA]? CTABLE

This command returns the channel state (active, inactive) in addition to the values returned for "TRACE<n>".

Suffix:

<n> 1...4
window

Return values:

<Result> <class>,<channel number>,<absolute level>,<relative level>,<I/Q component>,<pilot length>,<channel state>
Comma-separated list with 7 values for each channel; the pilot length is always 0.
For details on the other result information, see [TRACe<n>\[:DATA\]](#) on page 191.

Example: TRAC:DATA? CTABLE
Returns a list of channel information, including the pilot length and channel state.

Usage: Query only

Mode: WCDMA

TRACe<n>[:DATA]? CWCDp

This command returns pilot length, channel state, channel type, modulation type and a reserved value in addition to the values returned for "TRACE<n>" (see [TRACe<n>\[:DATA\]](#) on page 191). It can only be set if "CODE PWR ABSOLUTE" / RELATIVE, or "CHANNEL TABLE" is selected as the display mode for trace 1.

Suffix:

<n> 1...4
 window

Return values:

<Result>

<code class>, <channel number>, <absolute level>, <relative level>, <timing offset>, <pilot length>, <active flag>, <channel type>, <modulation type>, <reserved>

Comma-separated list with 10 values for each channel; the channels are output in ascending order sorted by code number, i.e. in the same sequence they are displayed on screen.

<code class>

Code class of the channel {2 ... 8}

<channel number>

Code number of the channel {0 ... 255}

<I/Q component>

IQ component of the channel {0, 1}

0 - Q component: Channel symbols (S_n) sent from quadrature component; only imaginary part of S_n is used. [$\text{Re}\{S_n\} = 0$ $\text{Im}\{S_n\} \neq 0$]

1 - I component: Channel symbols (S_n) sent from In phase component; only real part of S_n is used. [$\text{Re}\{S_n\} \neq 0$ $\text{Im}\{S_n\} = 0$]

<absolute level>

Absolute level of the code channel at the selected channel slot [dBm]. (The channel slot can be marked by the SELECTED CPICH slot.)

<relative level >

Relative level of the code channel at the selected channel slot referenced to CPICH or total power [dB]. (The channel slot can be marked by the SELECTED CPICH slot.)

<timing offset>

Timing offset of the HS-DPCCH to the frame start. The value is measured in chips. The step width is 256 chips. For all other data channels, the timing offset is zero. {0 ... 2560} [chips]

<pilot length>

Pilot length of the DPCCH. {0 to 8} [symbols]

<active flag>

Flag to indicate whether a channel is active

0 – channel not active

1 – channel active

<channel type>

Channel type indication {0 ... 4}

0 - DPDCH: Dedicated Physical Data Channel

1 - DPCCH: Dedicated Physical Control Channel

2 - HS-DPCCH: High-Speed Dedicated Physical Control Channel

3 - E-DPCCH: Enhanced Dedicated Physical Control Channel

4 - E_DPDCH: Enhanced Dedicated Physical Data Channel

<modulation type>

Modulation type of the code channel at the selected channel slot. {2 – Modulation type QPSK}

reserved
for future use

Example: TRAC:DATA? CWCDp
Returns a list of channel information for each channel in ascending order.

Usage: Query only

Mode: WCDMA

TRACe<n>[:DATA]? LIST

This command returns the peak list of the spectrum emission mask measurement list evaluation (see also [TRACe<n>\[:DATA\]](#) on page 191).

Suffix:

<n> 1...4
window

Return values:

<Result> <No>, <Start>, <Stop>, <Rbw>, <Freq>, <Levelabs>, <Levelrel>, <Delta>, <Limitcheck>, <unused1>, <unused2>

An array of values is returned for each range of the limit line (<value array of range 1>, <value array of range 2>,, <value array of range n>).

No []

number of the limit line range

Start [Hz]

start frequency of the limit line range

Stop [Hz]

stop frequency of the limit line range

Rbw [Hz]

resolution band width of the limit line range

Freq [Hz]

frequency of the power peak within the range

Power abs [dBm]

absolute power of the peak within the range

Power rel [dB]

relative power of the peak within the range related to channel power

Delta [dB]

distance to the limit line in dB (positive indicates value above the limit = fail)

Limitcheck [0 | 1]

Limit check (pass = 0, fail = 1), indicates whether the power is below [0] or above [1] the limit line

Unused1/2 []

for future use

Default unit: Hz

Example:

```
TRAC2DATA? ATRACE2
```

Returns a list of absolute frequency errors for all slots in trace 2 (screen B).

Usage:

Query only

Mode:

WCDMA

TRACe<n>[:DATA]? TPVSlot

This command returns a list of absolute frequency errors vs slot for all slots. In contrast to the scope presentation and the TRACE<n> parameter return value, absolute values are returned. The query is only possible in frame mode and not in slot mode, regardless of the display mode.

Suffix:	
<n>	1...4 window
Return values:	
<Result>	<slot number>, <level value in dBm> Comma-separated list with 15 pairs of slots (slot number of CPICH) and level values (for 15 slots) Default unit: Hz
Example:	<code>CALC2:FEED 'XTIM:CDP:PVSLOT:ABSolute'</code> Sets the result display for screen B to POWER VS SLOT. <code>TRAC2:DATA? TPVSlot</code> Returns a list of absolute frequency errors for all slots in trace 2 (screen B).
Usage:	Query only
Mode:	WCDMA

TRACe<n>[:DATA]? TRACE<t>

This command returns the trace data. Depending on the display mode, the trace data format varies. For details see [chapter 4.5.1.3, "Measurement Modes in Code Domain Analyzer"](#), on page 50.

CODE PWR ABSOLUTE/RELATIVE, CHANNEL TABLE

For each channel, the class, the channel number, the absolute level, the relative level and the timing offset are returned. The class denotes the spreading factor of the channel. Class 8 corresponds to the highest spreading factor (256, symbol rate 15 ksps), class 2 to the lowest admissible spreading factor (4, symbol rate 960 ksps).

CODE PWR ABSOLUTE/RELATIVE

The channels are output in ascending order sorted according to the code numbers, i.e. in the same sequence as they are displayed on the screen. For CHANNEL TABLE, the channels are sorted according to the code classes, i.e. the unassigned channels are transmitted last.

CODE DOMAIN ERROR POWER

Five values are transmitted for each code class 8 channel. The channels are sorted according to the code numbers

Format = <code class>1, <code number>1, <CDEP>1, <channel flag>1,

<code class>2, <code number>2, <CDEP>2, <channel flag>2,

...

<code class>256, <code number>256, <CDEP>256, <channel flag>256

where:

<Code class> = Highest code class of an uplink signal. It is always set to 8 (CC8)

<Code number> = Code number of the evaluated CC8 channel

<CDEP> = Code domain error power value of the CC8 channel [dB]

<Channel flag> = Indicates if the CC8 channel belongs to an assigned code channel

- 0b00 0d0 – CC8 is inactive
- 0b01 0d1 – CC8 channel belongs to an active code channel

RESULT SUMMARY

The following results are returned for each channel:

<composite EVM [%]>,

<peak CDE [dB]>,

<carr freq Error [Hz]>,

<chip rate error [ppm]>,

<total power [dB]>,

<trg to frame [s]>,

<EVM peak channel [%]>,

<EVM mean channel [%]>,

<class>,

<channel number>,

<power abs. channel [dB]>,

<power rel. channel [dB referred to the total power of the signal]>,

<I/Q component [abs]>,

<pilot length [bits]>,

<IQ offset [%]>,

<IQ imbalance [%]>

POWER VS SLOT

15 pairs of slot (slot number of CPICH) and level values (for 15 slots) are always transferred.

<slot number>, <level value in dB>,<slot number>,<level value in dB>.....

SYMBOL EVM

The number of level values depends on the spreading factor:

Spreading factor 256 = 10 values = Spreading factor 128 = 20 values

Spreading factor 64 = 40 values = Spreading factor 32 = 80 values

Spreading factor 16 = 160 values = Spreading factor 8 = 320 values

Spreading factor 4 = 640 values

PEAK CODE DOMAIN ERR / COMPOSITE EVM

15 pairs of slot (slot number of CPICH) and values are always transferred.

PEAK CODE DOMAIN ERR: <slot number>, <level value in dB>,.....

COMPOSITE EVM: <slot number>, <value in %>,

SYMBOL CONST

The real and the imaginary part are transferred as a pair:

<re 0>,<im 0>,<re 1>,<im 1>,...<re n>, <im n>

For the channels have exclusively I or Q components in R&S FS-K73, the <re> or <im> values are 0, depending on the selected component.

The number of level values depends on the spreading factor:

Spreading factor 256 = 10 values = Spreading factor 128 = 20 values

Spreading factor 64 = 40 values = Spreading factor 32 = 80 values

Spreading factor 16 = 160 values = Spreading factor 8 = 320 values

Spreading factor 4 = 640 values

BITSTREAM

The bitstream of one slot is transferred. One value is transferred per bit (range 0,1,). The number of symbols is not constant and may vary for each sweep. Specific symbols in the bitstream may be invalid depending on the channel type and the bit rate (symbols without power). The assigned invalid bits are marked by "9".

EVM VS CHIP

The square root of square difference between received signal and reference signal for each chip are transferred. The values are normalized to the square root of the average power at the selected slot:

Output = List of 2560 vector error values of all chips at the selected slot

MAGNITUDE ERROR VS CHIP

The magnitude difference between received signal and reference signal for each chip are transferred. The values are normalized to the square root of the average power at the selected slot:

Output = List of 2560 vector error values of all chips at the selected slot

PHASE ERROR VS CHIP

The phase differences between received signal and reference signal for each chip are transferred. The values are normalized to the square root of the average power at the selected slot:

Output = List of 2560 vector error values of all chips at the selected slot

Suffix:

<n>	1...4
	irrelevant
<t>	1...4
	trace

Return values:

<Result> <code class>, <channel number>, <absolute level>, <relative level>, <timing offset>

Comma-separated list with 5 values for each channel; the channels are output in ascending order sorted by code number, i.e. in the same sequence they are displayed on screen.

<code class>
Code class of the channel {2 ... 9}

<channel number>
Code number of the channel {0 ... 511}

<absolute level>
Absolute level of the code channel at the selected channel slot. (The channel slot can be marked by the SELECTED CPICH slot.)

<relative level >
Relative level of the code channel at the selected channel slot referenced to CPICH or total power. (The channel slot can be marked by the SELECTED CPICH slot.)

<timing offset>
Timing offset of the code channel to the frame start. The value is measured in chips. The step width is 256 chips in the case of code class 2 to 8, and 512 chips in the case of code class 9. {0 ... 38400} [chips]

Example: TRAC2:DATA? TRACE2
Returns the trace data from trace 2 (screen B).

Usage: Query only

Mode: WCDMA

4.6.8 Other Commands Referenced in this Manual

The following commands are identical to those in the base unit and are included in this manual only because they are specifically referenced to here.

See also [chapter 4.6.5.3, "Other SENSE Commands Referenced in this Manual"](#), on page 172 and [chapter 4.6.2.6, "Other CALCulate Commands Referenced in this Manual"](#), on page 125

4.6.8.1	DISPlay Subsystem.....	195
4.6.8.2	INPUt subsystem.....	199
4.6.8.3	TRIGger Subsystem.....	207
4.6.8.4	Other Referenced Commands.....	210

4.6.8.1 DISPlay Subsystem

DISPlay[:WINDow<n>]:STATe <State>

Activates/deactivates the window specified by the suffix <n>. The other measurements are not aborted but continue running in the background:

Suffix:

<n> window

Parameters:

<State> ON | OFF

*RST: OFF

Example:

DISP:WIND3:STAT ON

Turns on a third measurement screen.

Mode:

CDMA, EVDO, TDS, WCDMA

DISPlay[:WINDow<n>]:TRACe<t>:MODE <Mode>

This command defines the type of display and the evaluation of the traces in the window specified by the suffix <n>. WRITE corresponds to the Clr/Write mode of manual operation. The trace is switched off (= BLANK in manual operation) with [DISPlay\[:WINDow<n>\]:TRACe<t>\[:STATe\]](#).

The number of measurements for AVERage, MAXHold and MINHold is defined with the [\[SENSe:\]AVERage<n>:COUNt](#) or [\[SENSe:\]SWEep:COUNt](#) commands. It should be noted that synchronization to the end of the indicated number of measurements is only possible in single sweep mode.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> trace

Parameters:

<Mode> WRITe | VIEW | AVERage | MAXHold | MINHold | BLANK

*RST: WRITe for TRACe1, STATe OFF for TRACe2/3/4/5/6

For details on trace modes refer to [chapter 4.4.3.4, "Trace Mode Overview"](#), on page 29.

Example:

INIT:CONT OFF

Switching to single sweep mode.

SWE:COUN 16

Sets the number of measurements to 16.

DISP:TRAC3:MODE MAXH

Switches on the calculation of the maximum peak for trace 3.

INIT; *WAI

Starts the measurement and waits for the end of the 16 sweeps.

Mode:

all

DISPlay[:WINDow<n>]:TRACe<t>[:STATe] <State>

This command switches on or off the display of the corresponding trace in the window specified by the suffix <n>. The other measurements are not aborted but continue running in the background.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> trace

Parameters:

<State> ON | OFF

*RST: ON for TRACe1, OFF for TRACe2 to 6

Example: DISP:TRAC3 ON

Mode: all

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe] <Range>

This command defines the display range of the y-axis (level axis) with logarithmic scaling ([DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 199) in the window specified by the suffix <n>.

For linear scaling, the display range is fixed and cannot be modified.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> irrelevant

Parameters:

<Range> 10 dB to 200 dB or value in Hz

*RST: 100dB

Example: DISP:TRAC:Y 110dB

Mode: all

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE <Mode>

This command defines the scale type of the y-axis (absolute or relative) in the window specified by the suffix <n>.

When `SYSTem:DISPlay:UPDate` is set to OFF, this command has no immediate effect on the screen (see [SYSTem:DISPlay:UPDate](#) on page 214).

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> irrelevant

Parameters:**<Mode>** ABSolute | RELative***RST:** ABS**Example:**

DISP:TRAC:Y:MODE REL

Mode:

all

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:PDIVision <Value>

This remote command determines the grid spacing on the Y axis for all diagrams, where possible.

Suffix:**<n>** irrelevant**<t>** irrelevant**Parameters:****<Value>** numeric value; the unit depends on the result display***RST:** depends on the result display**Example:**

DISP:TRAC:Y:PDIV 10

Sets the grid spacing to 10 units (for example 10 dB in the Code Domain Power result display).

Mode:

CDMA, BT, EVDO, TDS, WCDMA

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel <Value>

This command sets the reference level.

With the reference level offset $\neq 0$, the indicated value range of the reference level is modified by the offset.

Suffix:**<n>** irrelevant.**<t>** irrelevant**Parameters:****<Value>** <numeric_value>, range specified in data sheet***RST:** -10dBm**Example:**

DISP:TRAC:Y:RLEV -60dBm

Mode:

A, ADEMOD, BT, CDMA, EVDO, TDS, VSA, WCDMA

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet <Value>

This command sets the reference level offset.

Suffix:

<n> irrelevant.
 <t> irrelevant

Parameters:

<Value> -200dB to 200dB
 *RST: 0dB

Example:

DISP:TRAC:Y:RLEV:OFFS -10dB

Mode:

ALL

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition <Position>

This remote command defines the position of the reference value on the Y axis (1 – 100 %) in the window specified by the suffix <n>.

When using a tracking generator (only with option R&S FSV-B9 or -B10, requires active normalization), and in Bluetooth mode (option R&S FSV-K8) this command defines the position of the reference value for all windows.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
 <t> irrelevant

Parameters:

<Position> 0 to 100PCT
 *RST: 100 PCT = "Spectrum" mode, AF spectrum display;
 50 PCT = Tracking Generator mode or time display

Example:

DISP:TRAC:Y:RPOS 50PCT

Mode:

A, BT, CDMA, EVDO, TDS, WCDMA, ADEMOD, VSA

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RVALue <Value>

The command defines the power value assigned to the reference position in the grid.

When using a tracking generator (only with option R&S FSV-B9 or -B10), this command requires active normalization.

Suffix:

<n> irrelevant
 <t> irrelevant

Parameters:

<Value> <numeric_value>
 *RST: 0 dB, coupled to reference level

Example: `DISP:TRAC:Y:RVAL -20dBm`
 (Analyzer)
 `DISP:TRAC:Y:RVAL 0`
 Sets the power value assigned to the reference position to 0 dB
 (tracking generator)

Mode: A, BT, CDMA, EVDO, TDS, WCDMA, ADEMOD

DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing <ScalingType>

This command selects the scaling for the level display range in the window specified by the suffix <n>.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> irrelevant

Parameters:

<ScalingType> LOGarithmic | LINear | LDB

LOGarithmic

Selects logarithmic scaling.

LINear

Selects linear scaling in %.

LDB

Selects linear scaling in dB.

*RST: LOGarithmic

Example: `DISP:TRAC:Y:SPAC LIN`

Mode: A, ADEMOD, BT, VSA

4.6.8.2 INPut subsystem

INPut:ATTenuation.....	200
INPut:ATTenuation:AUTO.....	200
INPut:COUPling.....	200
INPut:DIQ:CDEVice.....	201
INPut:DIQ:RANGe:AUTO.....	202
INPut:DIQ:RANGe:COUPling.....	202
INPut:DIQ:RANGe[:UPPer].....	203
INPut:DIQ:RANGe[:UPPer]:UNIT.....	203
INPut:DIQ:SRATe.....	203
INPut:DIQ:SRATe:AUTO.....	204
INPut:EATT.....	204
INPut:EATT:AUTO.....	205
INPut:EATT:STATe.....	205
INPut:FILTer:YIG[:STATe].....	205
INPut:GAIN:STATe.....	206

INPut:IMPedance.....	206
INPut:SElect.....	206

INPut:ATTenuation <Value>

This command programs the input attenuator. To protect the input mixer against damage from overloads, the setting 0 dB can be obtained by entering numerals, not by using the DOWN command.

The attenuation can be set in 5 dB steps (with option R&S FSV-B25: 1 dB steps). If the defined reference level cannot be set for the set RF attenuation, the reference level is adjusted accordingly.

In the default state with "Spectrum" mode, the attenuation set on the step attenuator is coupled to the reference level of the instrument. If the attenuation is programmed directly, the coupling to the reference level is switched off.

This function is not available if the R&S Digital I/Q Interface (R&S FSV-B17) is active.

Parameters:

<Value> <numeric_value> in dB; range specified in data sheet

*RST: 10 dB (AUTO is set to ON)

Example:

INP:ATT 30dB

Sets the attenuation on the attenuator to 30 dB and switches off the coupling to the reference level.

Mode: all

INPut:ATTenuation:AUTO <State>

This command automatically couples the input attenuation to the reference level (state ON) or switches the input attenuation to manual entry (state OFF).

This function is not available if the R&S Digital I/Q Interface (R&S FSV-B17) is active.

Parameters:

<State> ON | OFF

*RST: ON

Example:

INP:ATT:AUTO ON

Couples the attenuation set on the attenuator to the reference level.

Mode: All

INPut:COUPling <CouplingType>

Toggles the RF input of the analyzer between AC and DC coupling.

This function is not available if the R&S Digital I/Q Interface (R&S FSV-B17) is active.

Parameters:

<CouplingType> AC | DC
 *RST: AC

Example:

INP:COUP:DC

Mode:

A, ADEMOD, BTS, CDMA, EVDO, TDS, VSA, WCDMA

INPut:DIQ:CDEvice

This command queries the current configuration and the status of the digital baseband input from the optional R&S Digital I/Q Interface (option R&S FSV-B17).

For details see the section "Interface Status Information" for the R&S Digital I/Q Interface (R&S FSV-B17) in the description of the base unit.

Return values:

<ConnState> Defines whether a device is connected or not.
0
 No device is connected.
1
 A device is connected.

<DeviceName> Device ID of the connected device

<SerialNumber> Serial number of the connected device

<PortName> Port name used by the connected device

<SampleRate> Maximum or currently used sampling rate of the connected device in Hz (depends on the used connection protocol version; indicated by <SampleRateType> parameter)

<MaxTransferRate> Maximum data transfer rate of the connected device in Hz

<ConnProtState> State of the connection protocol which is used to identify the connected device.
Not Started
Has to be Started
Started
Passed
Failed
Done

<PRBSTestState>	State of the PRBS test. Not Started Has to be Started Started Passed Failed Done
<SampleRateType>	0 Maximum sampling rate is displayed 1 Current sampling rate is displayed
<Placeholder>	for future use; currently "0"

Example: INP:DIQ:CDEV?
Result:
1,SMU200A,103634,Out
A,70000000,100000000,Passed,Not Started,0,0

Mode: IQ, VSA, EVDO, CDMA, WCDMA, GSM, ADEMODO, TDS

INPut:DIQ:RANGe:AUTO <State>

If enabled, the digital input fullscale level is automatically set to the value provided by the connected device (if available).

This command is only available if the optional Digital Baseband interface (option R&S FSV-B17) is installed.

For details see the Digital Baseband Interface (R&S FSV-B17) description of the base unit.

Parameters:

<State> ON | OFF
*RST: OFF

Example: INP:DIQ:RANG:AUTO ON

Mode: IQ, VSA, EVDO, CDMA, WCDMA, GSM, ADEMODO, TDS

INPut:DIQ:RANGe:COUPling <State>

If enabled, the reference level for digital input is adjusted to the full scale level automatically if the fullscale level changes.

This command is only available if the optional R&S Digital I/Q Interface (option R&S FSV-B17) is installed.

For details see the R&S Digital I/Q Interface (R&S FSV-B17) description of the base unit.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

INP:DIQ:RANG:COUP OFF

Mode:

IQ, VSA, EVDO, CDMA, WCDMA, GSM, ADEMOD, TDS

INPut:DIQ:RANGe[:UPPer] <Level>

Defines the level that should correspond to an I/Q sample with the magnitude "1".

It can be defined either in dBm or Volt (see ["Full Scale Level"](#) on page 73).

This command is only available if the optional R&S Digital I/Q Interface (option R&S FSV-B17) is installed.

For details see the R&S Digital I/Q Interface (R&S FSV-B17) description of the base unit.

Parameters:

<Level> <numeric value>
 Range: 70.711 nV to 7.071 V
 *RST: 1 V

Example:

INP:DIQ:RANG 1V

Mode:

A, IQ, NF, TDS, VSA, CDMA, EVDO, WCDMA, ADEMOD, GSM, OFDM, OFDMA/WiBro, WLAN

INPut:DIQ:RANGe[:UPPer]:UNIT <Unit>

Defines the unit of the full scale level (see ["Level Unit"](#) on page 74). The availability of units depends on the measurement application you are using.

This command is only available if the optional R&S Digital I/Q Interface (option R&S FSV-B17) is installed.

For details see the R&S Digital I/Q Interface (R&S FSV-B17) description of the base unit.

Parameters:

<Level> V | dBm | dBpW | W | dBmV | dBuV | dBuA | A
 *RST: Volt

Example:

INP:DIQ:RANG:UNIT A

Mode:

IQ, VSA, EVDO, CDMA, WCDMA, GSM, ADEMOD, TDS

INPut:DIQ:SRATe <SampleRate>

This command specifies the sample rate of the input signal from the R&S Digital I/Q Interface (see ["Input Sample Rate"](#) on page 73).

This command is only available if the optional R&S Digital I/Q Interface (option R&S FSV-B17) is installed.

For details see the R&S Digital I/Q Interface (R&S FSV-B17) description of the base unit.

Parameters:

<SampleRate>

Range: 1 Hz to 10 GHz

*RST: 32 MHz

Example:

INP:DIQ:SRAT 200 MHz

Mode:

A, IQ, NF, TDS, VSA, CDMA, EVDO, WCDMA, ADEMOD, GSM, OFDM, OFDMA/WiBro, WLAN

INPut:DIQ:SRATe:AUTO <State>

If enabled, the sample rate of the digital baseband IQ input signal is set automatically by the connected device, if the currently used sample rate is provided (indicated by the <SampleRateType> parameter in the result of the `INPut:DIQ:CDEvice` command).

This command is only available if the optional R&S Digital I/Q Interface (option R&S FSV-B17) is installed.

For details see the R&S Digital I/Q Interface (B17) description of the base unit.

Parameters:

<State>

ON | OFF

*RST: OFF

Example:

INP:DIQ:SRAT:AUTO ON

Mode:

IQ, VSA, EVDO, CDMA, WCDMA, GSM, ADEMOD, TDS

INPut:EATT <Attenuation>

Requires option R&S FSV-B25.

Switches the electronic attenuator on (if not already active) and allows the attenuation of the electronic attenuator to be set.

This command is only available with option R&S FSV-B25, but not if R&S FSV-B17 is active.

The attenuation can be varied in 1 dB steps from 0 to 25 dB. Other entries are rounded to the next lower integer value.

If the defined reference level cannot be set for the given RF attenuation, the reference level is adjusted accordingly and the warning "Limit reached" is output.

Parameters:

<Attenuation>

0...25

*RST: 0 dB (OFF)

Example: INP1:EATT 10 dB

Mode: all

INPut:EATT:AUTO <State>

Switches the automatic behaviour of the electronic attenuator on or off. If activated, electronic attenuation is used to reduce the operation of the mechanical attenuation whenever possible.

This command is only available with option R&S FSV-B25, but not if R&S FSV-B17 is active.

Parameters:

<State> ON | OFF

*RST: ON

Example: INP1:EATT:AUTO OFF

Mode: all

INPut:EATT:STATe <State>

Switches the electronic attenuator on or off.

This command is only available with option R&S FSV-B25, but not if R&S FSV-B17 is active.

Parameters:

<State> ON | OFF

*RST: OFF

Example: INP:EATT:STAT ON

Switches the electronic attenuator into the signal path.

Mode: all

INPut:FILTer:YIG[:STATe] <State>

This command activates and deactivates the YIG filter.

Parameters:

<State> ON

OFF

*RST: ON

Example: INP:FILT:YIG OFF

Deactivates the YIG filter.

Mode: RT

INPut:GAIN:STATe <State>

This command switches the preamplifier on or off (only for option RF Preamplifier, R&S FSV-B22/B24).

With option R&S FSV-B22, the preamplifier only has an effect below 7 GHz.

With option R&S FSV-B24, the amplifier applies to the entire frequency range.

This command is not available when using R&S Digital I/Q Interface (R&S FSV-B17).

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

INP:GAIN:STAT ON
 Switches on 20 dB preamplification.

Mode:

A, ADEMOD, BT, CDMA, EVDO, NF, PHN, WCDMA, GSM, VSA, TDS

INPut:IMPedance <Value>

This command sets the nominal input impedance of the instrument. The set impedance is taken into account in all level indications of results.

The setting 75 Ω should be selected, if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = 10 log (75 Ω /50 Ω).

This function is not available if the R&S Digital I/Q Interface (R&S FSV-B17) is active.

Parameters:

<Value> 50 | 75
 *RST: 50 Ω

Example:

INP:IMP 75

Mode:

all

INPut:SElect <Source>

This command selects the signal source for measurements.

Parameters:

<Source> RF | DIQ

RF
Radio Frequency ("RF INPUT" connector)

DIQ
Baseband Digital (IQ) (only available with R&S Digital I/Q Interface, option R&S FSV-B17)

*RST: RF

Example: INP:SEL RF

Mode: A, IQ, NF, TDS, VSA, CDMA, EVDO, WCDMA, ADEMOD, GSM, OFDM, OFDMA/WiBro, WLAN

4.6.8.3 TRIGger Subsystem**TRIGger<n>[:SEQuence]:LEVel:BBPower <Level>**

This command sets the level of the baseband power trigger source (for digital input via the R&S Digital I/Q Interface, R&S FSV-B17).

Suffix:

<n> irrelevant

Parameters:

<Level>

Range: -50 dBm to +20 dBm

*RST: -20 DBM

Example: TRIG:LEV:BB -30DBM

Mode: All

TRIGger<n>[:SEQuence]:BBPower:HOLDoff <Value>

This command sets the holding time before the next BB power trigger event (for digital input via the R&S Digital I/Q Interface, R&S FSV-B17).

Suffix:

<n> irrelevant

Parameters:

<Value> <numeric_value> in s: 150 ns to 1000 s

*RST: 150 ns

Example: TRIG:SOUR BBP
Sets the baseband power trigger source.
TRIG:BBP:HOLD 200 ns
Sets the holding time to 200 ns.

Mode: all

TRIGger<n>[:SEQUENCE]:IFPower:HOLDoff <Value>

This command sets the holding time before the next IF power trigger event.

Suffix:

<n> irrelevant

Parameters:

<Value> <numeric_value> in s: 150 ns to 1000 s

*RST: 150 ns

Example:

```
TRIG:SOUR IFP
```

Sets the IF power trigger source.

```
TRIG:IFP:HOLD 200 ns
```

Sets the holding time to 200 ns.

Mode:

A-F, ADEMOD, CDMA, EVDO, GSM, VSA, OFDM, OFDMA/
WiBro, TDS, WCDMA, WLAN

TRIGger<n>[:SEQUENCE]:IFPower:HYSteresis <Value>

This command sets the limit that the hysteresis value for the IF power trigger has to fall below in order to trigger the next measurement.

Suffix:

<n> irrelevant

Parameters:

<Value> <numeric_value> in dB: 3 dB to 50 dB

*RST: 3 dB

Example:

```
TRIG:SOUR IFP
```

Sets the IF power trigger source.

```
TRIG:IFP:HYST 10DB
```

Sets the hysteresis limit value.

Mode:

ALL

TRIGger<n>[:SEQUENCE]:HOLDoff[:TIME] <Delay>

This command defines the length of the trigger delay.

A negative delay time (pretrigger) can be set in zero span only.

Suffix:

<n> irrelevant

Parameters:

<Delay>

Range: zero span: -sweeptime (see data sheet) to 30 s; span:
0 to 30 s

*RST: 0 s

Example: TRIG:HOLD 500us

Mode: All

TRIGger<n>[:SEQuence]:LEVel[:EXTernal] <TriggerLevel>

This command sets the level of the external trigger source in Volt.

Suffix:

<n> irrelevant

Parameters:

<TriggerLevel>

Range: 0.5 V to 3.5 V

*RST: 1.4 V

Example: TRIG:LEV 2V

Mode: All

TRIGger<n>[:SEQuence]:SLOPe <Type>

This command selects the slope of the trigger signal. The selected trigger slope applies to all trigger signal sources.

Suffix:

<n> irrelevant

Parameters:

<Type>

POSitive | NEGative

*RST: POSitive

Example: TRIG:SLOP NEG

Mode: all

TRIGger<n>[:SEQuence]:SOURce <Source>

This command selects the trigger source for the start of a sweep.

For details on trigger modes refer to the "Trg/Gate Source" softkey in the base unit description.

Suffix:

<n> irrelevant

Parameters:

<Source>

EXTernal | IFPower | IMMEDIATE | MASK | TIME | VIDEO

Note that the availability of the trigger source depends on the measurement you are in.

EXTernal

Selects an external trigger.

IFPower

Selects the trigger on the second intermediate frequency.

IMMEDIATE

Selects the free run mode (= no trigger).

MASK

Selects the frequency mask trigger.

TDTRIGGER

Selects the time domain trigger.

TIME

Selects the time trigger.

VIDEO

Selects the video trigger. The video trigger is available for time domain measurements.

*RST: IMMEDIATE

Example:

```
TRIG:SOUR EXT
```

Selects the external trigger input as source of the trigger signal

Mode:

ALL

4.6.8.4 Other Referenced Commands**FORMat:DEXPort:DSEParator <Separator>**

This command defines which decimal separator (decimal point or comma) is to be used for outputting measurement data to the file in ASCII format. Different languages of evaluation programs (e.g. MS-Excel) can thus be supported.

The suffix <1...4> is irrelevant, the separator is defined globally for all windows.

Parameters:

<Separator>

POINT | COMMA

*RST: (factory setting is POINT; *RST does not affect setting)

Example:

```
FORM:DEXP:DSEP POIN
```

Sets the decimal point as separator.

Mode:

all

DIAGnostic<n>:SERVice:NSOource <State>

This command switches the 28 V supply of the noise source on the front panel on or off.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:

DIAG:SERV:NSO ON

Mode:

all

INITiate<n>:CONMeas

This command continues a stopped measurement at the current position in single sweep mode. The function is useful especially for trace functions MAXHold, MINHold and AVERage, if the previous results are not to be cleared with sweep count > 0 or average count > 0 on restarting the measurement (INIT:IMMEDIATE resets the previous results on restarting the measurement).

The single sweep mode is automatically switched on. Synchronization to the end of the indicated number of measurements can then be performed with the commands *OPC, *OPC? or *WAI. In the continuous sweep mode, synchronization to the sweep end is not possible since the overall measurement "never" ends.

Suffix:

<n> irrelevant

Example:

INIT:CONT OFF

Switches to single sweep mode.

DISP:WIND:TRAC:MODE AVER

Switches on trace averaging.

SWE:COUN 20

Setting the sweep counter to 20 sweeps.

INIT;*WAI

Starts the measurement and waits for the end of the 20 sweeps.

INIT:CONM;*WAI

Continues the measurement (next 20 sequences) and waits for the end.

Mode:

A, ADEMOD, CDMA, EVDO, VSA, WCDMA, TDS

INITiate<n>:CONTInuous <State>

This command determines whether the trigger system is continuously initiated (continuous) or performs single measurements (single).

In the "**Spectrum**" mode, this setting refers to the sweep sequence (switching between continuous/single sweep).

Suffix:	
<n>	irrelevant
Parameters:	
<State>	ON OFF
	*RST: ON
Example:	INIT:CONT OFF Switches the sequence to single sweep. INIT:CONT ON Switches the sequence to continuous sweep.
Mode:	all

INITiate<n>:ESpectrum

This command starts a Spectrum Emission Mask measurement.

Suffix:	
<n>	irrelevant
Example:	INIT:ESP Starts a Spectrum Emission Mask measurement.
Mode:	A, CDMA, EVDO, TDS, WCDMA

MMEMory:STORe<n>:LIST <FileName>

This command stores the current list evaluation results in a <file name>.dat file. The file consists of a data section containing the list evaluation results.

Suffix:	
<n>	irrelevant
Parameters:	
<FileName>	<file name>
Example:	MMEM:STOR:LIST 'test' Stores the current list evaluation results in the test.dat file.
Mode:	A, ADEMOD, CDMA, EVDO, NF, TDS, WCDMA

MMEMory:STORe<n>:TRACe <Trace>, <FileName>

This command stores the selected trace in the specified window in a file with ASCII format. The file format is described in [chapter 4.4.3.7, "ASCII File Export Format"](#), on page 33

The decimal separator (decimal point or comma) for floating-point numerals contained in the file is defined with the `FORMat:DEXPort:DSEPARATOR` command (see `FORMat:DEXPort:DSEPARATOR` on page 210).

Suffix:	
<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
Parameters:	
<Trace>	1 to 6 selected measurement trace
<FileName>	DOS file name The file name includes indication of the path and the drive name. Indication of the path complies with DOS conventions.
Example:	M MEM:STOR:TRAC 3, 'TEST.ASC' Stores trace 3 in the file TEST.ASC.
Mode:	all

OUTPut:IF[:SOURce] <Source>

This command switches the source of the IF output between the demodulated signal and the IF signal.

The AF output available at the frontpanel can only be used if the IF output source is set to video.

Parameters:

<Source>	IF VIDEo
	IF intermediate frequency output
	VIDEo video output, 200 mV
	*RST: IF

Example: OUTP:IF VID
Selects the video signal for the IF output connector.

Mode: A

OUTPut:TRIGger <PortLevel>

Sets the Trigger Out port in the Additional Interfaces (option B5 only) to low or high. Thus, you can trigger an additional device via the external trigger port, for example.

Parameters:

<PortLevel>	LOW HIGH
	*RST: LOW

Example: OUTP:TRIG HIGH

Mode: A

SYSTem:DISPlay:UPDate <State>

In remote control mode, this command switches on or off the instrument display. If switched on, only the diagrams, traces and display fields are displayed and updated.

The best performance is obtained if the display output is switched off during remote control.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: SYST:DISP:UPD ON

Mode: all

4.7 Error Messages

Error messages are entered in the error/event queue of the status reporting system in the remote control mode and can be queried with the command `SYSTem:ERRor?`.

A short explanation of the device-specific error messages for R&S FSV-K73 is given below.

Status bar message	Description
Sync not found	This message is displayed if synchronization is not possible. Possible causes are that frequency, level, scrambling code, Invert Q values are set incorrectly, or the input signal is invalid.
Sync OK	This message is displayed if synchronization is possible.
Incorrect pilot symbols	This message is displayed if one or more of the received pilot symbols are not equal to the specified pilot symbols of the 3GPP standard. Possible causes are: <ul style="list-style-type: none"> • Incorrectly sent pilot symbols in the received frame. • Low signal to noise ratio (SNR) of the WCDMA signal. • One or more code channels have a significantly lower power level compared to the total power. The incorrect pilots are detected in these channels because of low channel SNR. • One or more channels are sent with high power ramping. In slots with low relative power to total power, the pilot symbols might be detected incorrectly (check the signal quality by using the symbol constellation display)

4.8 Glossary

Composite EVM	In accordance with the 3GPP specifications, the squared error between the real and imaginary parts of the test signal and an ideal reference signal is determined (EVM referred to the total signal) in a composite EVM measurement.
DPCCH	Dedicated physical control channel, control channel. The DPCCH contains pilot, TFCI, TPC and FBI bits. The control channel is assumed to be present in every signal in R&S FS-K73.
DPDCH	Dedicated physical data channel, data channel. The data channels only contain data bits. Data channels for user equipment signals are assigned a certain scheme defined in 3GPP specifications.
Inactive Channel Threshold	Minimum power that a single channel must have as compared to the total signal to be recognized as an active channel
Peak Code Domain Error	In accordance with the 3GPP specifications, the error between the test signal and the ideal reference signal is projected onto the classes of the different spreading factors in the case of a peak code domain measurement.

List of Commands

[SENSe:]ADJust:ALL.....	172
[SENSe:]ADJust:CONFigure:LEVel:DURation.....	172
[SENSe:]ADJust:LEVel.....	172
[SENSe:]AVERage<n>:COUNT.....	173
[SENSe:]AVERage<n>:TYPE.....	173
[SENSe:]BANDwidth BWIDth:VIDeo.....	176
[SENSe:]BANDwidth BWIDth:VIDeo:AUTO.....	177
[SENSe:]BANDwidth BWIDth:VIDeo:RATio.....	177
[SENSe:]BANDwidth BWIDth[:RESolution].....	174
[SENSe:]BANDwidth BWIDth[:RESolution]:AUTO.....	174
[SENSe:]BANDwidth BWIDth[:RESolution]:FFT.....	175
[SENSe:]BANDwidth BWIDth[:RESolution]:RATio.....	175
[SENSe:]BANDwidth BWIDth[:RESolution]:TYPE.....	176
[SENSe:]CDPower:BASE.....	159
[SENSe:]CDPower:CODE.....	159
[SENSe:]CDPower:ETCHips.....	159
[SENSe:]CDPower:FILTer[:STATe].....	160
[SENSe:]CDPower:FRAMe[:LVALue].....	160
[SENSe:]CDPower:FRAMe[:VALue].....	160
[SENSe:]CDPower:HSDPamode.....	160
[SENSe:]CDPower:HSLot.....	161
[SENSe:]CDPower:ICThreshold.....	161
[SENSe:]CDPower:IQLength.....	161
[SENSe:]CDPower:LCODE:SEARCh:[IMMediate].....	162
[SENSe:]CDPower:LCODE:SEARCh:LIST.....	162
[SENSe:]CDPower:LCODE:TYPE.....	162
[SENSe:]CDPower:LCODE[:VALue].....	163
[SENSe:]CDPower:LEVel:ADJust.....	163
[SENSe:]CDPower:MAPPing.....	164
[SENSe:]CDPower:NORMALize.....	164
[SENSe:]CDPower:OVERview.....	164
[SENSe:]CDPower:PDISplay.....	164
[SENSe:]CDPower:QINVert.....	165
[SENSe:]CDPower:SFACTOR.....	165
[SENSe:]CDPower:SLOT.....	165
[SENSe:]FREQuency:CENTer.....	177
[SENSe:]FREQuency:CENTer:STEP:AUTO.....	178
[SENSe:]FREQuency:CENTer:STEP:LINK.....	178
[SENSe:]FREQuency:CENTer:STEP:LINK:FACTor.....	178
[SENSe:]FREQuency:CENTer:STEP[:VALue].....	177
[SENSe:]FREQuency:OFFSet.....	179
[SENSe:]FREQuency:SPAN.....	179
[SENSe:]FREQuency:SPAN:FULL.....	179
[SENSe:]FREQuency:STARt.....	180
[SENSe:]FREQuency:STOP.....	180
[SENSe:]POWer:ACHannel:ACPairs.....	166
[SENSe:]POWer:ACHannel:BANDwidth BWIDth:ACHannel.....	167

[SENSe:]POWer:ACHannel:BANDwidth BWIDth:ALTErnatE<channel>.....	167
[SENSe:]POWer:ACHannel:BANDwidth BWIDth[:CHANnel<channel>].....	166
[SENSe:]POWer:ACHannel:MODE.....	168
[SENSe:]POWer:ACHannel:PRESet:RLEVel.....	168
[SENSe:]POWer:ACHannel:PRESet MCACpower.....	170
[SENSe:]POWer:ACHannel:REFerence:AUTO ONCE.....	168
[SENSe:]POWer:ACHannel:REFerence:TXCHannel:AUTO.....	169
[SENSe:]POWer:ACHannel:SPACing:ALTErnatE<channel>.....	170
[SENSe:]POWer:ACHannel:SPACing:CHANnel<channel>.....	171
[SENSe:]POWer:ACHannel:SPACing[:ACHannel].....	170
[SENSe:]POWer:ACHannel:TXCHannel:COUNT.....	169
[SENSe:]POWer:HSPeed.....	171
[SENSe:]POWer:NCORrection.....	172
[SENSe:]POWer:TRACe.....	169
[SENSe:]SWEep:COUNT.....	180
[SENSe:]SWEep:EGATe:POLarity.....	181
[SENSe:]SWEep:POINTs.....	181
[SENSe:]SWEep:TIME.....	181
[SENSe:]SWEep:TIME:AUTO.....	182
[SENSe:]SWEep:TYPE.....	182
CALCulate<n>:CDPower:Mapping.....	104
CALCulate<n>:DELTamarker<m>:FUNCTion:FIXed:RPOint:X.....	126
CALCulate<n>:DELTamarker<m>:FUNCTion:FIXed:RPOint:Y.....	127
CALCulate<n>:DELTamarker<m>:FUNCTion:FIXed[:STATe].....	127
CALCulate<n>:DELTamarker<m>:FUNCTion:PNOise:AUTO.....	128
CALCulate<n>:DELTamarker<m>:FUNCTion:PNOise[:STATe].....	128
CALCulate<n>:DELTamarker<m>:LINK.....	129
CALCulate<n>:DELTamarker<m>:MAXimum:LEFT.....	129
CALCulate<n>:DELTamarker<m>:MAXimum:NEXT.....	130
CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT.....	130
CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK].....	130
CALCulate<n>:DELTamarker<m>:MINimum:LEFT.....	131
CALCulate<n>:DELTamarker<m>:MINimum:NEXT.....	131
CALCulate<n>:DELTamarker<m>:MINimum:RIGHT.....	132
CALCulate<n>:DELTamarker<m>:MINimum[:PEAK].....	131
CALCulate<n>:DELTamarker<m>:TRACe.....	132
CALCulate<n>:DELTamarker<m>:X.....	133
CALCulate<n>:DELTamarker<m>:X:RELative.....	133
CALCulate<n>:DELTamarker<m>:Y.....	134
CALCulate<n>:DELTamarker<m>[:STATe].....	132
CALCulate<n>:FEED.....	105
CALCulate<n>:LIMit1:ACPower:ACHannel:ABSolute.....	109
CALCulate<n>:LIMit1:ACPower:ACHannel:ABSolute:STATe.....	110
CALCulate<n>:LIMit1:ACPower:ACHannel:RESult.....	110
CALCulate<n>:LIMit1:ACPower:ACHannel[:RELative].....	108
CALCulate<n>:LIMit1:ACPower:ACHannel[:RELative]:STATe.....	109
CALCulate<n>:LIMit1:ACPower:ALTErnatE<1...11>:ABSolute:STATe.....	112
CALCulate<n>:LIMit1:ACPower:ALTErnatE<1...11>:RESult.....	113
CALCulate<n>:LIMit1:ACPower:ALTErnatE<1...11>:ABSolute.....	112
CALCulate<n>:LIMit1:ACPower:ALTErnatE<ch>[:RELative].....	111

CALCulate<n>:LIMit1:ACPower:ALTernate<ch>[:RELative]:STATe.....	111
CALCulate<n>:LIMit1:ACPower[:STATe].....	108
CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute.....	135
CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute:STATe.....	135
CALCulate<n>:LIMit<k>:ACPower:ACHannel:RESult.....	137
CALCulate<n>:LIMit<k>:ACPower:ACHannel[:RELative].....	136
CALCulate<n>:LIMit<k>:ACPower:ACHannel[:RELative]:STATe.....	137
CALCulate<n>:LIMit<k>:ACPower:ALTernate<Channel>:ABSolute.....	138
CALCulate<n>:LIMit<k>:ACPower:ALTernate<channel>[:RELative].....	139
CALCulate<n>:LIMit<k>:ACPower:ALTernate<Channel>[:RELative]:STATe.....	139
CALCulate<n>:LIMit<k>:ACPower[:STATe].....	140
CALCulate<n>:LIMit<k>:ESPectrum:LIMits.....	141
CALCulate<n>:LIMit<k>:ESPectrum:MODE.....	142
CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>:COUNT.....	143
CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>:LIMit[:STATe].....	143
CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>:MAXimum.....	144
CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>:MINimum.....	144
CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>[:EXCLusive].....	142
CALCulate<n>:LIMit<k>:ESPectrum:RESTore.....	145
CALCulate<n>:LIMit<k>:ESPectrum:VALue.....	145
CALCulate<n>:LIMit<k>:FAIL.....	141
CALCulate<n>:MARKer<m>:AOFF.....	114
CALCulate<n>:MARKer<m>:FUNction:CPICh.....	121
CALCulate<n>:MARKer<m>:FUNction:PCCPch.....	121
CALCulate<n>:MARKer<m>:FUNction:POWer:RESult.....	121
CALCulate<n>:MARKer<m>:FUNction:POWer:SElect.....	122
CALCulate<n>:MARKer<m>:FUNction:WCDPower:MS:RESult.....	123
CALCulate<n>:MARKer<m>:FUNction:ZOOM.....	125
CALCulate<n>:MARKer<m>:MAXimum:LEFT.....	114
CALCulate<n>:MARKer<m>:MAXimum:NEXT.....	114
CALCulate<n>:MARKer<m>:MAXimum:RIGHT.....	115
CALCulate<n>:MARKer<m>:MAXimum[:PEAK].....	115
CALCulate<n>:MARKer<m>:MINimum:LEFT.....	115
CALCulate<n>:MARKer<m>:MINimum:NEXT.....	116
CALCulate<n>:MARKer<m>:MINimum:RIGHT.....	117
CALCulate<n>:MARKer<m>:MINimum[:PEAK].....	116
CALCulate<n>:MARKer<m>:POWer:RESult:PHZ.....	117
CALCulate<n>:MARKer<m>:TRACe.....	118
CALCulate<n>:MARKer<m>:X.....	119
CALCulate<n>:MARKer<m>:X:SLIMits:ZOOM.....	119
CALCulate<n>:MARKer<m>:X:SLIMits[:STATe].....	119
CALCulate<n>:MARKer<m>:Y.....	120
CALCulate<n>:MARKer<m>[:STATe].....	117
CALCulate<n>:PSEarch PEAKsearch:AUTO.....	146
CALCulate<n>:PSEarch PEAKsearch:MARGin.....	147
CALCulate<n>:PSEarch PEAKsearch:PSHow.....	147
CALCulate<n>:PSEarch PEAKsearch:SUBRanges.....	147
CALCulate<n>:PSEarch PEAKsearch[:IMMEDIATE].....	146
CALCulate<n>:STATistics:CCDF[:STATe].....	148
CALCulate<n>:STATistics:NSAMPles.....	148

CALCulate<n>:STATistics:PRESet.....	149
CALCulate<n>:STATistics:REsult<Trace>.....	149
CALCulate<n>:STATistics:SCALe:AUTO ONCE.....	150
CALCulate<n>:STATistics:SCALe:X:RANGe.....	150
CALCulate<n>:STATistics:SCALe:X:RLEVel.....	150
CALCulate<n>:STATistics:SCALe:Y:LOWer.....	151
CALCulate<n>:STATistics:SCALe:Y:UNIT.....	151
CALCulate<n>:STATistics:SCALe:Y:UPPer.....	151
CALCulate<n>:UNIT:POWer.....	152
CONFigure:WCDPower:MS:CTABle:CATalog.....	156
CONFigure:WCDPower:MS:CTABle:COMMeNt.....	156
CONFigure:WCDPower:MS:CTABle:COpy.....	156
CONFigure:WCDPower:MS:CTABle:DATA.....	154
CONFigure:WCDPower:MS:CTABle:DATA:HSDPcch.....	155
CONFigure:WCDPower:MS:CTABle:DELeTe.....	156
CONFigure:WCDPower:MS:CTABle:EDATa.....	157
CONFigure:WCDPower:MS:CTABle:EDATa:EDPCc.....	157
CONFigure:WCDPower:MS:CTABle:NAME.....	153
CONFigure:WCDPower:MS:CTABle:SELeCt.....	154
CONFigure:WCDPower:MS:CTABle[:STATe].....	153
CONFigure:WCDPower:MS:MEASurement.....	153
DIAGnostic<n>:SERVice:NSource.....	211
DISPlay[:WINDow<n>]:STATe.....	195
DISPlay[:WINDow<n>]:TRACe<t>:MODE.....	195
DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing.....	199
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe].....	196
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE.....	196
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:PDIVision.....	197
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel.....	197
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet.....	197
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOsition.....	198
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RVALue.....	198
DISPlay[:WINDow<n>]:TRACe<t>[:STATe].....	196
FORMat:DEXPort:DSEParator.....	210
INITiate<n>:CONMeas.....	211
INITiate<n>:CONTinuous.....	211
INITiate<n>:ESPeCtrum.....	212
INPut:ATTenuation.....	200
INPut:ATTenuation:AUTO.....	200
INPut:COUPling.....	200
INPut:DIQ:CDEVice.....	201
INPut:DIQ:RANGe:AUTO.....	202
INPut:DIQ:RANGe:COUPling.....	202
INPut:DIQ:RANGe[:UPPer].....	203
INPut:DIQ:RANGe[:UPPer]:UNIT.....	203
INPut:DIQ:SRATe.....	203
INPut:DIQ:SRATe:AUTO.....	204
INPut:EATT.....	204
INPut:EATT:AUTO.....	205
INPut:EATT:STATe.....	205

INPut:FiLTeR:YIG[:STATe].....	205
INPut:GAIN:STATe	206
INPut:IMPedance.....	206
INPut:SElect.....	206
INSTRument:NSElect.....	157
INSTRument[:SElect].....	157
MMEMory:STORe<n>:LIST.....	212
MMEMory:STORe<n>:TRACe.....	212
OUTPut:IF[:SOURce].....	213
OUTPut:TRIGger.....	213
STATus:QUEStionable:SYNC:CONDition.....	183
STATus:QUEStionable:SYNC[:EVENT].....	183
SYSTem:DISPlay:UPDate.....	214
TRACe<n>[:DATA].....	184
TRACe<n>[:DATA].....	185
TRACe<n>[:DATA].....	186
TRACe<n>[:DATA].....	186
TRACe<n>[:DATA].....	187
TRACe<n>[:DATA].....	189
TRACe<n>[:DATA].....	190
TRACe<n>[:DATA].....	191
TRIGger<n>[:SEquence]:BBPower:HOLDoff.....	207
TRIGger<n>[:SEquence]:HOLDoff[:TIME].....	208
TRIGger<n>[:SEquence]:IFPower:HOLDoff.....	208
TRIGger<n>[:SEquence]:IFPower:HYSTerisis.....	208
TRIGger<n>[:SEquence]:LEVel:BBPower.....	207
TRIGger<n>[:SEquence]:LEVel[:EXTeRnal].....	209
TRIGger<n>[:SEquence]:SLOPe.....	209
TRIGger<n>[:SEquence]:SOURce.....	209

Index

A

abbreviations	
K73	27
adjacent channel leakage ratio	77
Amplitude	
Menu	84
amplitude power distribution	79
amplitude probability distribution function	79
Analysis Mode	42
ASCII Trace export	33
attenuation	
(option B25)	62, 63, 88
automatic	62, 87
manual	62, 87, 200
option B25	62, 87
Auto Peak detector	28
Average detector	28
average power of inactive channels	56
Average trace mode	30, 67

B

Bandwidth	
Menu	90
Resolution	90
Video	91
Baseband Digital data	
device	73
Blank trace mode	30

C

Capture Length	43
Carrier Freq Error	56
CCDF	79
Complementary cumulative distribution function	79
CDP channel parameter	57
Center frequency	40, 60, 80
Step size	80
CF Stepsize	
softkey	60
Ch. SF	58
channel	
active	215
channel assignment table	57
channel detection settings	44
Channel tables	
Copying	47
Deleting	47
Editing	47
Chan Pow Abs	56
Chan Power Rel	56
Chan Type	58
Characters	
Special	102
chip rate error	55
Clear Write trace mode	29, 66
Code Power Displ	
K73	48
Commands	
Description	101
Composite EVM	56, 215

continuous sweep	64, 96
coupling	
default settings	95
Coupling	
Resolution bandwidth	91
Sweep time	92, 97
Video bandwidth	91

D

demodulation settings	47
descrambling	
settings	44
detector	
overview	28
DiglConf	
softkey	75
Digital Baseband Info	
Remote control	201
Softkey	74
display configuration	49
default	49
defining	49
predefined	49
removing	49
storing	49
display mode	
Bitstream	59
Code Domain Channel Table	57
Code Domain Error	57
Code Domain Power	51
Code Domain Result Summary	55
Composite Const	54
Composite EVM	52
EVM vs Chip	52
Frequency Err vs Slot	59
Mag Error vs Chip	53
Peak Code Domain Error	52
Phase Discontinuity vs Slot	59
Phase Error vs Chip	53
Power vs Slot	54, 58
Symbol Const	59
Symbol EVM	59
Symbol Magnitude Error	55
Symbol Phase Error	55
Trace Statistics	55
display range	
level	85, 86
Display range	
Frequency	40, 60, 80
DPCCH	215
DPDCH	215

E

electronic input attenuation	
FSV-B25	204
Eliminate Tail Chips	
K73	48
EX-IQ-BOX	75
DiglConf	75
export format	33
external noise source	73, 99

- F**
- FFT Filter Mode
 - Auto 93, 98
 - Narrow 93, 98
 - softkey 93, 98
 - Filters
 - Overview 31
 - Selecting 31
 - Types 31
 - filter types
 - 5-Pole 31
 - Normal (3dB) 31
 - RRC 31
 - Frame To Analyze 42
 - frequency
 - offset 40, 60, 83
 - start 82
 - stop 82
 - Frequency
 - Center 40, 60, 80
 - Frequency menu 80
 - frontend settings 40
 - Full Scale Level
 - Baseband Digital 73
 - Digital Baseband IQ (remote control) 202
 - Digital I/Q Interface (remote control) 202, 203
 - full screen 55
- I**
- IEC/IEEE bus
 - Command description 101
 - impedance
 - input 89
 - Inactive Channel Threshold 215
 - Input/Output menu 72, 99
 - Input sample rate
 - Baseband Digital 73
 - Invert Q 42
 - IQ capture settings 41
 - IQ Capture Settings
 - K72 160
 - IQ imbalance 55
 - IQ offset 55
- K**
- key
 - AMPT 60
 - Auto Scrambling Code 71
 - AUTOSET 71
 - FREQ 60
 - INPUT/OUTPUT 99
 - MKR 67
 - MKR-> 69
 - SWEEP 63
 - TRG 65
 - Key
 - INPUT/OUTPUT 72
- L**
- level
 - axis 86
 - display range 85, 86
 - range 85, 86
 - reference 40, 61, 84
 - Level Unit
 - Baseband Digital 74
 - Digital I/Q Interface (remote control) 203
 - Lower-case (commands) 102
- M**
- marker
 - peak 69
 - Max Hold trace mode 29, 66
 - maximum search 69
 - Meas Interval
 - K73 48
 - menu
 - Frequency 80
 - Span 83
 - Sweep 95
 - Menu
 - Amplitude 84
 - Bandwidth 90
 - Min Hold trace mode 30, 67
 - minimum search 70
 - modulation
 - type 56
- N**
- Negative Peak detector 28
 - New Channel Table 44
 - noise
 - source, external 73, 99
 - No of Active Chan 56
 - No of Pilot Bits 56
 - Normalize
 - K73 48
- O**
- occupied bandwidth 78
 - offset
 - frequency 40, 60, 83
 - reference level 41, 63, 88
 - trigger 43, 65
 - online help
 - working with 11
 - options
 - FSV-B25 62, 87, 204
 - RF Preamplifier (B22) 41, 61, 87
 - overwrite mode 29, 66
- P**
- Peak Code Domain Error 215
 - PEAKSEARCH 69
 - Ph. Noise Auto Peak Search
 - remote control 128
 - PilotL 58
 - Pk CDE 56
 - polarity
 - external trigger 65
 - external trigger/gate 43
 - trigger edge 43, 65
 - Positive Peak detector 28
 - power
 - channel power 76
 - power measurement 76

- power of 3GPP FDD UE signal 77
pre-trigger 43, 66
Pwr Abs/Pwr Rel 58
- Q**
- quarter screen 55
- R**
- R&S Digital I/Q Interface (B17) 74, 201
R&S Support
 softkey 75
reference level 40, 61, 84
 offset 41, 63, 88
Reference Level
 Baseband Digital 74
Resolution bandwidth 90
RF signal power 76
Rho factor 56
RMS
 VBW 29, 91
RMS detector 28
RRC Filter 42
 K72 160
RX Settings
 softkey 75
- S**
- Sample detector 28
Sample rate
 Baseband Digital 73
 Digital I/Q Interface (remote control) 203, 204
scaling
 level axis 89
SCPI
 Conformity information 101
search
 minimum 70
 peak 69
Select Channel
 K72 49
Select Channel/Slot/Branch 49
Select Slot
 K72 50
settings
 Settings Overview (K73) 39
Signal source
 (remote control) 206
Signal Source
 I/Q Analyzer 73
 softkey 73
softkey
 # of Adj Chan (remote control) 166
 # of Samples (remote control) 148
 # of TX Chan (remote control) 169
 0.1*Demod BW (K7) 81
 0.1 * RBW 81
 0.1 * RBW (remote control) 178
 0.1 * Span 81
 0.1 * Span (remote control) 178
 0.5*Demod BW (K7) 81
 0.5 * RBW 81
 0.5 * RBW (remote control) 178
 0.5 * Span 81
 0.5 * Span (remote control) 178
- = Center 82
= Marker 82
ACLR 152
ACLR Abs/Rel (remote control) 168
ACLR Ref Setting (remote control) 169
Adjacent Channel Power 77
Adjust Ref Level (remote control) 168
Adjust Settings (remote control) 150
All Marker Off 69
Ampere 86
APD (remote control) 149
ASCII File Export (remote control) 212
Auto (remote control) 182
Auto All 71
Auto Level 71
Average 30, 67
Average Mode (remote control) 173
BB Power Retrigger Holdoff (remote control) 207
Blank 30
C/N (remote control) 121, 122
C/No (remote control) 121, 122
CCDF 79
CCDF (remote control) 148, 149
Center (remote control) 177
CF Stepsize (remote control) 177
Channel Bandwidth (remote control) 166, 167
Channel Detection Settings 44
Channel Spacing (remote control) 170, 171
Clear Write 29, 66
Continue Single Sweep 64, 96
Continue Single Sweep (remote control) 211
Continuous Sweep 64, 96
Continuous Sweep (remote control) 211
Cont Meas (remote control) 211
Coupling Ratio 93
CP, ACP, MC-ACLR (remote control) 121, 122
CPICH 70
dBµA 86
dBµV 86
dBm 86
dBmV 86
dBpW 86
Decim Sep (remote control) 210
Default Coupling 95
Default Settings (remote control) 149, 151
Demodulation Settings 47
Descrambling/Sync Search Settings 44
Deviation Lin/Log (remote control) 199
DigiConf 75
Display Config 49
Edit ACLR Limit (remote control) 135, 136, 137,
138, 139
EL Atten (remote control) 205
EI Atten Mode (Auto/Man) 63, 88
EL Atten Mode (Auto/Man) (remote control) 204, 205
EI Atten On/Off 62, 88
Fast ACLR On/Off (remote control) 171, 172
Filter Type 95
Filter Type (remote control) 175, 176
Frequency Offset 40, 60, 83
Frequency Offset (remote control) 179
Frontend Settings 40
Full Span (remote control) 179
Grid Abs/Rel 89
Grid Abs/Rel (remote control) 196
IF Output IF/Video (remote control) 213
IF Power Retrigger Holdoff (remote control) 208

IF Power Retrigger Hysteresis (remote control)	208
Input (AC/DC)	63, 72, 89, 99
Input (AC/DC)(remote control)	200
Input 50 Ω/75 Ω	89
Input 50 Ω/75 Ω (remote control)	206
IQ Capture Settings	41
Last Span	84
Limit Chk On/Off (remote control)	137, 140
Limits On/Off (remote control)	119
Link Mrk1 and Delta1 (remote control)	129
Manual	82
Manual (remote control)	177
Marker 1 (remote control)	132
Marker 1/2/3/4	68
Marker 1 to 4 (remote control)	117, 119, 133, 134
Marker 2 (remote control)	132
Marker 3 (remote control)	132
Marker 4 (remote control)	132
Marker Norm/Delta	68
Marker Norm/Delta (remote control)	132
Marker to Trace (remote control)	118, 132
Marker Zoom	68
Max Hold	29, 66
Meas Start/Stop (remote control)	212
Meas Time Auto	72
Meas Time Manual	72, 172
Mech Atten Auto	62, 87
Mech Atten Auto (remote control)	200
Mech Atten Manual	62, 87
Mech Atten Manual (remote control)	200
Min	70
Min (remote control)	116, 131
Min Hold	30, 67
mult carr ACLR	152
Next Min	70
Next Min (remote control)	115, 116, 117, 131
Next Min Mode <abs>	70
Next Peak	69
Next Peak (remote control) 114, 115, 117, 129, 130, 131, 132	
Next Peak Mode	69
Noise Source	73, 99
Noise Src On/Off (remote control)	211
OBW (remote control)	122
OCCUPIED BANDWIDTH	152
PCCPCH	70
Peak	69
Peak (remote control)	115, 130
Ph Noise/Ref Fixed (remote control)	127, 128
Ph Noise On/Off (remote control)	127, 128
Power	76
POWER	152
Preamp On/Off	41, 61, 87
Preamp On/Off (remote control)	206
R&S Support	75
Range	61, 85
Range Lin. Unit	86
Range Lin. Unit (remote control)	199
Range Linear %	86
Range Linear % (remote control)	199
Range Log (remote control)	196, 199
Range Log 100 dB	85
Range Log 10 dB	85
Range Log 1 dB	86
Range Log 50 dB	85
Range Log 5 dB	85
Range Log Manual	86
RBW/VBW Manual	94
RBW/VBW Noise [10]	94
RBW/VBW Pulse [.1]	94
RBW/VBW Sine [1/3]	93
Reference Position (remote control)	198
Ref Level	40, 61, 84
Ref Level (remote control)	150, 197
Ref Level Offset	41, 63, 88
Ref Level Offset (remote control)	197
Ref Level Position	89
Ref Level Position (remote control)	198
Ref Point Frequency (remote control)	126
Ref Point Level (remote control)	127
Ref Point Time (remote control)	126
Ref Value	61
Ref Value (remote control)	198
Ref Value Position	61
Ref Value Position (remote control)	198
Res BW (remote control)	174
Res BW Auto (remote control)	174, 175
Res BW Manual (remote control)	174
RF Atten Auto	62, 87
RF Atten Auto (remote control)	200
RF Atten Manual	62, 87
RF Atten Manual (remote control)	200
Save (remote control)	212
Save Evaluation List (remote control)	212
Search Limits (remote control)	119
Search Lim Off (remote control)	119
Select 1 2 3 4 (remote control)	117
Select 1/2/3/4	69
Select Trace (remote control)	169
Settings	72
Settings Overview	39
Single Meas (remote control)	211
Single Sweep	64, 96
Single Sweep (remote control)	211
Span/RBW Auto [50]	94
Span/RBW Manual	95
Span Manual	83
Span Manual (remote control)	179
Spectrum Emission Mask	77
SPECTRUM EM MASK	152
Start	82
Start (remote control)	180
Start Frequency (remote control)	180
Stop	82
Stop (remote control)	180
Stop Frequency (remote control)	180
Sweep Count	64, 98
Sweep Count (remote control)	180
Sweep Points	98
Sweep Points (remote control)	181
Sweep Time (remote control)	181
Sweeptime Auto (remote control)	182
Sweeptime Manual	83, 92, 96
Sweeptime Manual (remote control)	181
Trace 1 2 3 4 5 6 (remote control)	196
Trace Mode (remote control)	195, 196
Trg/Gate Polarity Pos/Neg	43
Trg/Gate Polarity Pos/Neg (remote control)	181, 209
Trg/Gate Source (remote control)	207, 209
Trigger Holdoff (remote control)	208
Trigger Offset	43, 65
Trigger Out	100
Trigger Out (Low/High)(remote control)	213
Trigger Polarity	65

Unit	86
Unit (remote control)	152
Use Zoom Limits (remote control)	119
Video BW Auto (remote control)	177
Video BW Manual (remote control)	176
Video Output	99
View	30, 67
Volt	86
Watt	86
x-Axis Range (remote control)	150
x-Axis Ref Level (remote control)	150
x*Demod BW (K7)	82
X * RBW	82
X * RBW (remote control)	178
X * Span	81
X * Span (remote control)	178
y-Axis Max Value (remote control)	151
y-Unit %/Abs (remote control)	151
Y PER DIV	61
Zero Span (remote control)	179
Softkey	
AUTO	93, 98
Center	40, 60, 80
CF Stepsize	80
FFT	93, 97
FFT Filter Mode	93, 98
Full Span	84
Marker 1 to 4 (remote control)	120
Res BW Auto	91
Res BW Manual	90
Select 1 2 3 4 (remote control)	120
Sweep	93, 97
SweepTime Auto	92, 97
Sweep Type	92, 97
Video BW Auto	91
Video BW Manual	91
Span menu	83
Special characters	102
split screen	55
start frequency	82
status display	58
Step size	
Center frequency	80
stop frequency	82
supply voltage, external noise source	73, 99
sweep	
continue single sweep	64, 96
continuous	64, 96
count	64, 98
single	64, 96
time	83, 92, 96
Sweep menu	95
Sweep time	
Coupling	92, 97
Symbol EVM	56, 57
symbol rate	56, 58
sync search settings	44
T	
TFCI	58
timing offset	56
T Offs	58
total power	55
trace	
Clear Write	29, 66
trace mode	
Average	30, 67
Blank	30
Clear Write	29, 66
Max Hold	29, 66
Min Hold	30, 67
View	30, 67
trigger	
offset	43, 65
slope	43, 65
Trigger Source External	
softkey	43, 65
Trigger Source Free Run	
softkey	43, 65
trigger to frame	56
TX Settings	
EX-IQ-BOX	75
U	
Upper-case (commands)	102
V	
VBW	
RMS detector	29, 91
Video bandwidth	91
View trace mode	30, 67
Z	
zoom	
amplitude	30, 67