



ROHDE & SCHWARZ

Test and Measurement
Division

Software Manual

GSM Mobile Test for Spectrum Analyzer FSP

Application Firmware FS-K5

1141.1496.02

Printed in the Federal
Republic of Germany

Tabbed Divider Overview

Data Sheet

Safety Instructions
Certificate of quality
Support Center
List of R&S Representatives

Tabbed Divider

- | | |
|----------|----------------------------------|
| 1 | Chapter 1: Basics |
| 2 | Chapter 2: Measurements |
| 3 | Chapter 3: Remote Control |
| 4 | Chapter 4: Index |



GSM/EDGE Application Firmware FS-K5 for FSP

The solution for easy and fast GSM and EDGE measurements

- GSM/EDGE push-button measurements
- Fast modulation spectrum routine
- Easy to use
- Accurate carrier power measurement

Characteristics

The Application Firmware FS-K5 allows the user to perform the most important GSM and EDGE transmitter measurements with the push of a button:

- Phase/frequency error (GSM)
- Modulation accuracy (EDGE) including 95:th percentile and origin offset suppression
- Power-versus-time
- Carrier power
- Modulation spectrum (± 1.8 MHz)
- Transient spectrum
- Spurious emissions

Only very few parameters have to be set manually such as carrier frequency, reference level, external attenuator.

The Application Firmware FS-K5 can be installed in all models of the FSP spectrum analyzer family:

FSP3 9 kHz to 3 GHz	Covers the basic TX frequency range
FSP7 9 kHz to 7 GHz	Adds harmonics measurement capability
FSP13 9 kHz to 13 GHz	Covers the entire spurious emissions frequency range
FSP30 9 kHz to 30 GHz	Adds microwave link frequency ranges

The application firmware can be used throughout the total frequency range of the basic spectrum analyzer. This covers all GSM bands of interest such as GSM900, GSM1800, GSM1900, R-GSM, GSM 450 and even IF frequencies used in transmitters and receivers.

Features and benefits

R&D, development

Ideal development tool with easy-to-use GSM measurement functions in a cost-effective analyzer. The workhorse for every engineer.

Low measurement uncertainty for high confidence

<0.5 dB total level uncertainty and <0.7° phase error for GSM

Standard-conformant measurements for performance verification

Phase/frequency error (GSM), modulation accuracy (EDGE) and power-versus-time measurement with synchronization to midamble.

Designed for speed

Fast modulation spectrum routine for frequency list mode:
 ± 1.8 MHz/200 bursts in <25 seconds


Really portable – usable anywhere

- Lightweight, <11 kg with FSP3
- Comprehensive documentation and storage of results and hard copies on internal hard disk, print or transfer to a PC later – even via LAN /Ethernet


Trigger functions to meet many demands

- Simplified test setup, no trigger from device under test necessary
- IF power trigger for gated measurements




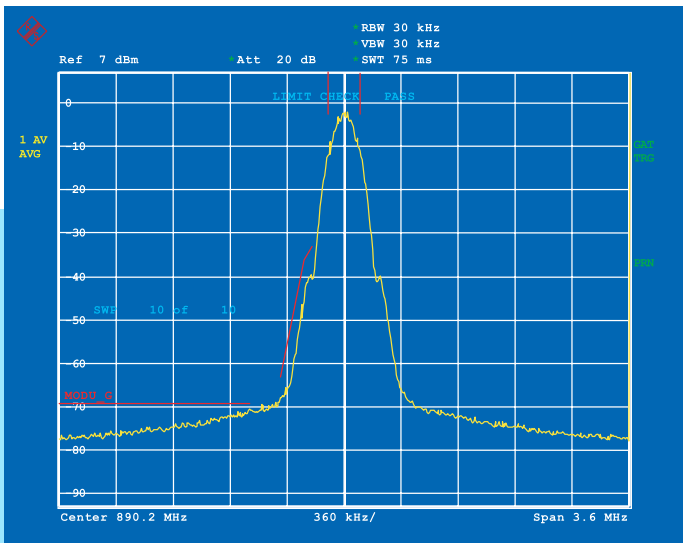

Modulation spectrum measurement in frequency sweep mode

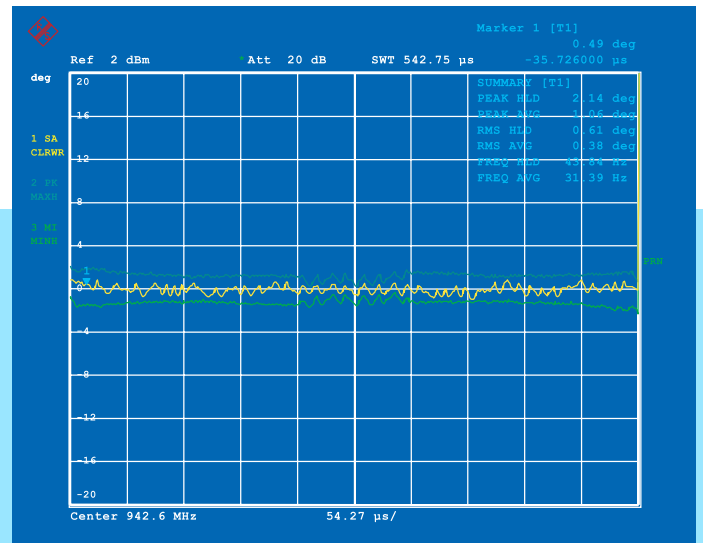

Phase/frequency error measurement: peak as well as average values over 200 bursts are indicated for RMS phase error and peak phase error

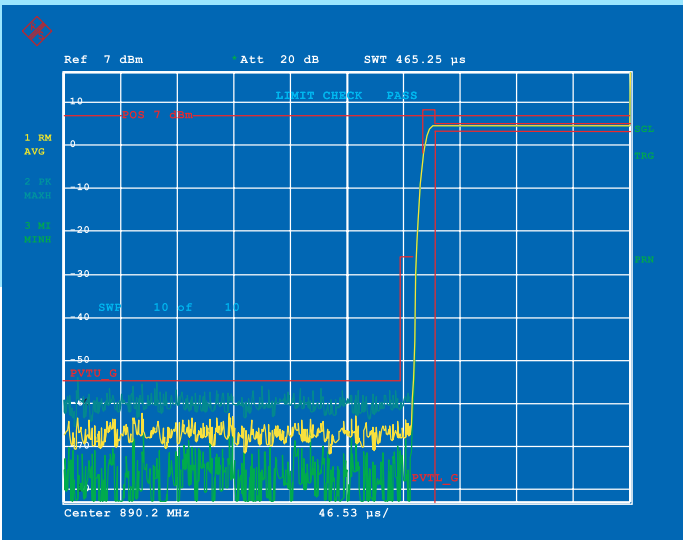

Power-versus-time measurement: details of burst can be zoomed – rising edge, falling edge, high resolution display of top of burst

MODULATION SPECTRUM LIST					
Frequency:	890.20000 MHz	Status:	PASSED		
Ext Atten:	0.0 dB	No of Bursts:	200		
Ref Pwr :	-3.55 dBm at RBW: 30 kHz	RBW:	30 kHz	VBW:	30 kHz
Offset [kHz]	Freq [dB]	+Offset [dB]	-Offset [dB]	-Limit [dB]	Status
100	-7.2	0.5	-7.6	0.5	PASSED
200	-36.2	-30.0	-36.5	-30.0	PASSED
250	-39.8	-33.0	-40.1	-33.0	PASSED
400	-66.3	-60.0	-66.3	-60.0	PASSED
600	-69.5	-66.0	-69.4	-66.0	PASSED
800	-69.8	-66.0	-69.4	-66.0	PASSED
1000	-70.0	-66.0	-70.1	-66.0	PASSED
1200	-70.3	-66.0	-70.6	-66.0	PASSED
1400	-71.5	-66.0	-71.0	-66.0	PASSED
1600	-72.0	-66.0	-71.7	-66.0	PASSED
1800	-72.7	-66.0	-72.1	-66.0	PASSED

Modulation spectrum measurement in list mode using a dedicated routine for fast measurements also when averaging over a large number of bursts

Specifications

Specifications are guaranteed under the following conditions:

15 minutes warmup time at ambient temperature, specified environmental conditions met, calibration cycle adhered to, and total calibration performed.

Data designated "nominal" apply to design parameters and are not tested.

The specifications below apply to FSP3, FSP7, FSP13 and FSP30 equipped with FS-K5. They are based on the data sheet specifications of Spectrum Analyzers FSP and are not checked separately. Level measurement uncertainties given with a tolerance are measurement uncertainties with a confidence level of 95%. Data without tolerances are typical values at 900 MHz.

The specified level measurement errors do not take into account systematic errors due to the reduced S/N ratio.

Measurement	Specification	Test specification and permissible measurement uncertainty acc. to I-ETS 300 609-1
Phase/frequency error (GMSK modulation)		
11.10.1 13.1		
Phase error, floor (S/N >40 dB)		
RMS	<0.7 °	
Peak	<2 °	
Phase error, uncertainty (S/N >40 dB)		
RMS	<0.2 °	<1.5 °
Peak	<0.7 °	<5 °
Frequency error uncertainty (S/N >40 dB)	<1.5 Hz + error of reference frequency	± 10 Hz
Modulation accuracy (3π/8 shifted 8PSK modulation)		
EVM, residual (S/N >40 dB),		
RMS	<0.5%	
Peak	<1.5%	
95.th percentile		
Resolution	<1.5%	
Resolution	0.03%	
Frequency error uncertainty (S/N >40 dB)	<1 Hz + error of reference frequency	
Origin offset suppression (S/N >40 dB)		
Measurement range	-20 dBc to -50 dBc	
Mean carrier power		
11.10.1 13.3		
Absolute level uncertainty		
(-50 dBm to +30 dBm, 10 MHz to 3 GHz)	0.5 dB	1 dB
Relative level uncertainty (from 0 dB to -50 dB from reference level)		
	0.2 dB	0.7 dB
Power versus time		
11.10.1 13.3		
Uncertainty of reference		
	0.5 dB	1 dB
Relative uncertainty		
(0 dB to -50 dB from reference)	0.2 dB	0.7 dB
(-50 dB to -70 dB from reference)	0.5 dB	
Internal symbol timing uncertainty		
	<37 ns	
Trigger reference uncertainty		
	¼ bit	¼ bit
Dynamic range (RBW = 600 kHz)		
	70 dB (with trace average)	
	60 dB (with peak hold)	

Measurement	Specification	Test specification and permissible measurement uncertainty acc. to I-ETS 300 609-1
Spectrum due to modulation		
11.10.1 13.4		
Level measurement uncertainty		
Absolute (-50 dBm to +30 dBm, 10 MHz to 3 GHz)		
	<0.5 dB	1 dB
Relative ¹⁾		
Δf ≤ 0.1 MHz	<0.2 dB	0.5 dB
0.1 MHz < Δf ≤ 1.8 MHz (0 dBc to -70 dBc)	<0.2 dB	0.7 dB
1.8 MHz < Δf ≤ 6 MHz	<0.5 dB	1.5 dB
Δf ≥ 6 MHz	<0.5 dB	2 dB
Dynamic range (carrier power = 30 dBm)		
Frequency offset		
200 kHz	65 dB	
400 kHz	67 dB	
600 kHz	68 dB	
1200 kHz	72 dB	
1800 kHz	76 dB	
1.8 MHz to 6 MHz (RBW = 100 kHz)	76 dB to 84 dB	
>6 MHz (RBW = 100 kHz)	84 dB	
Spectrum due to transients		
11.10.1 13.4		
Level measurement uncertainty		
Absolute (-50 dBm to +30 dBm, 10 MHz to 3 GHz)		
	<0.5 dB	1.5 dB
Relative		
0 dB to 50 dB from reference level	<0.2 dB	0.7 dB
>50 dB from reference level	<0.5 dB	1.5 dB
Dynamic range with 30 dBm mean carrier power		
Frequency offset		
400 kHz	62 dB	
600 kHz	64 dB	
1200 kHz	68 dB	
1800 kHz	71 dB	

¹⁾ Does not include the level uncertainty due to FSP inherent noise

Ordering information

Order designation	Type	Order No.
GSM Mobile Station Test Application Firmware for Spectrum Analyzer FSP	FS-K5	1141.1496.02
Recommended extras and options¹⁾		
Electronic Attenuator for FSP3 /7, 0 dB to 30 dB, 5 dB steps, 20 dB preamplifier	FSP-B25	1129.7746.02

¹⁾ For further options and recommended extras see FSP data sheet (PD 757.5137)











ROHDE & SCHWARZ

Safety Instructions

This unit has been designed and tested in accordance with the EC Certificate of Conformity and has left the manufacturer's plant in a condition fully complying with safety standards.

To maintain this condition and to ensure safe operation, the user must observe all instructions and warnings given in this operating manual.

Safety-related symbols used on equipment and documentation from R&S:

							
Observe operating instructions	Weight indication for units >18 kg	PE terminal	Ground terminal	Danger! Shock hazard	Warning! Hot surfaces	Ground	Attention! Electrostatic sensitive devi- ces require special care

1. The unit may be used only in the operating conditions and positions specified by the manufacturer. Unless otherwise agreed, the following applies to R&S products:
IP degree of protection 2X, Pollution severity 2, overvoltage category 2, altitude max. 2000 m.
The unit may be operated only from supply networks fused with max. 16 A.
2. For measurements in circuits with voltages $V_{rms} > 30 V$, suitable measures should be taken to avoid any hazards.
(using, for example, appropriate measuring equipment, fusing, current limiting, electrical separation, insulation).
3. If the unit is to be permanently wired, the PE terminal of the unit must first be connected to the PE conductor on site before any other connections are made. Installation and cabling of the unit to be performed only by qualified technical personnel.
4. For permanently installed units without built-in fuses, circuit breakers or similar protective devices, the supply circuit must be fused such as to provide suitable protection for the users and equipment.
5. Prior to switching on the unit, it must be ensured that the nominal voltage set on the unit matches the nominal voltage of the AC supply network.
If a different voltage is to be set, the power fuse of the unit may have to be changed accordingly.
6. Units of protection class I with disconnectible AC supply cable and appliance connector may be operated only from a power socket with earthing contact and with the PE conductor connected.
7. It is not permissible to interrupt the PE conductor intentionally, neither in the incoming cable nor on the unit itself as this may cause the unit to become electrically hazardous.
Any extension lines or multiple socket outlets used must be checked for compliance with relevant safety standards at regular intervals.
8. If the unit has no power switch for disconnection from the AC supply, the plug of the connecting cable is regarded as the disconnecting device. In such cases it must be ensured that the power plug is easily reachable and accessible at all times (length of connecting cable approx. 2 m). Functional or electronic switches are not suitable for providing disconnection from the AC supply.
If units without power switches are integrated in racks or systems, a disconnecting device must be provided at system level.
9. Applicable local or national safety regulations and rules for the prevention of accidents must be observed in all work performed.
Prior to performing any work on the unit or opening the unit, the latter must be disconnected from the supply network.
Any adjustments, replacements of parts, maintenance or repair may be carried out only by authorized R&S technical personnel.
Only original parts may be used for replacing parts relevant to safety (eg power switches, power transformers, fuses). A safety test must be performed after each replacement of parts relevant to safety.
(visual inspection, PE conductor test, insulation-resistance, leakage-current measurement, functional test).

continued overleaf

Safety Instructions

10. Ensure that the connections with information technology equipment comply with IEC950 / EN60950.
11. Lithium batteries must not be exposed to high temperatures or fire.
Keep batteries away from children.
If the battery is replaced improperly, there is danger of explosion. Only replace the battery by R&S type (see spare part list).
Lithium batteries are suitable for environmentally-friendly disposal or specialized recycling. Dispose them into appropriate containers, only.
Do not short-circuit the battery.
12. Equipment returned or sent in for repair must be packed in the original packing or in packing with electrostatic and mechanical protection.
13. Electrostatics via the connectors may damage the equipment. For the safe handling and operation of the equipment, appropriate measures against electrostatics should be implemented.
14. Any additional safety instructions given in this manual are also to be observed.

Support Center

Telefon / Telephone: (0180) 512 42 42

Fax: (++)89) 41 29 - 137 77

e-mail: CustomerSupport@rsd.rohde-schwarz.com

Für technische Fragen zu diesem Rohde & Schwarz-Gerät steht Ihnen ab sofort unsere Hotline der Rohde & Schwarz Vertriebs-GmbH, Support Center, zur Verfügung.

Unser Team bespricht mit Ihnen Ihre Fragen und sucht Lösungen für Ihre Probleme.

Die Hotline ist Montag bis Freitag von 8.00 bis 17.00 Uhr besetzt.

Bei Anfragen außerhalb der Geschäftszeiten hinterlassen Sie bitte eine Nachricht oder senden Sie eine Notiz per Fax oder e-mail. Wir setzen uns dann baldmöglichst mit Ihnen in Verbindung.

Should you have any technical questions concerning this Rohde & Schwarz product, please contact the hotline of Rohde & Schwarz Vertriebs-GmbH, Support Center.

Our hotline team will answer your questions and find solutions to your problems.

You can reach the hotline Monday through Friday from 8:00 until 17:00.

If you need assistance outside office hours, please leave a message or send us a fax or e-mail. We will contact you as soon as possible.



ROHDE & SCHWARZ

Certified Quality System ISO 9001

DQS REG. NO 1954-04

Qualitätszertifikat

Sehr geehrter Kunde,

Sie haben sich für den Kauf eines Rohde & Schwarz-Produktes entschieden. Hiermit erhalten Sie ein nach modernsten Fertigungsverfahren hergestelltes Produkt. Es wurde nach den Regeln unseres Qualitätsmanagementsystems entwickelt, gefertigt und geprüft. Das Rohde & Schwarz-Qualitätsmanagementsystem ist nach ISO 9001 zertifiziert.

Certificate of quality

Dear Customer,

You have decided to buy a Rohde & Schwarz product. You are thus assured of receiving a product that is manufactured using the most modern methods available. This product was developed, manufactured and tested in compliance with our quality management system standards.

The Rohde & Schwarz quality management system is certified according to ISO 9001.

Certificat de qualité

Cher client,

Vous avez choisi d'acheter un produit Rohde & Schwarz. Vous disposez donc d'un produit fabriqué d'après les méthodes les plus avancées. Le développement, la fabrication et les tests respectent nos normes de gestion qualité.

Le système de gestion qualité de Rohde & Schwarz a été homologué conformément à la norme ISO 9001.



ROHDE & SCHWARZ

Adressen/Addresses

FIRMENSITZ/HEADQUARTERS

ROHDE & SCHWARZ GmbH & Co. KG

Mühlldorfstraße 15 · 81671 München +49 89 41 29-0
 Postfach 801469 · 81614 München +49 89 41 29- 12164
 Internet: www.rohde-schwarz.com -

WERKE/PLANTS

ROHDE & SCHWARZ Messgerätebau GmbH

Riedbachstraße 58 · 87700 Memmingen +49 83 31 10 8-0
 Postfach 16 52 · 87686 Memmingen +49 83 31 10 81 124 -

ROHDE & SCHWARZ GmbH & Co. KG

Werk Teisnach +49 99 23 8 57-0
 Kaikenrieder Straße 27 · 94244 Teisnach +49 99 23 8 571-1 74
 Postfach 11 49 · 94240 Teisnach -

ROHDE & SCHWARZ GmbH & Co. KG · Werk Köln

Graf-Zeppelin-Straße 18 · 51147 Köln +49 22 03 49-0
 Postfach 98 02 60 · 51130 Köln +49 22 03 49-51 3 08 -

TOCHTERUNTERNEHMEN/SUBSIDIARIES

ROHDE & SCHWARZ Vertriebs-GmbH

Mühlldorfstraße 15 · 81671 München +49 89 4129-120 07
 Postfach 801469 · 81614 München +49 89 4129-135 67
 customersupport@rohde-schwarz.com

ROHDE & SCHWARZ International GmbH

Mühlldorfstraße 15 · 81671 München +49 89 4129-120 05
 Postfach 80 14 60 · 81614 München +49 89 4129-135 97 -

ROHDE & SCHWARZ Engineering and Sales GmbH

Mühlldorfstraße 15 · 81671 München +49 89 4129-137 11
 Postfach 80 14 29 · 81614 München +49 89 4129-137 23 -

R&S BICK Mobilfunk GmbH

Im Landerfeld 7 · 31848 Bad Münder +49 50 42 9 98-0
 Postfach 20 62 · 31844 Bad Münder +49 50 42 9 98-105
 rsbick@rsbick.rohde-schwarz.com

ROHDE & SCHWARZ FTK GmbH

Wendenschloßstraße 168, Haus 28 +49 30 6 58 91-122
 12557 Berlin +49 30 65 550-221 -

SIT Gesellschaft für Systeme

der Informationstechnik mbH
 Wendenschloßstraße 168, Haus 28 +49 30 6 58 84-2 22
 12557 Berlin +49 30 6 58 84-1 83
 sit.info@sit.rohde-schwarz.com

Zweigniederlassungen der Rohde & Schwarz Vertriebs-GmbH/Branch offices of Rohde & Schwarz Vertriebs-GmbH

Zweigniederlassung Berlin

Ernst-Reuter-Platz 10 · 10587 Berlin (+49 30) 34 79 48-0
 Postfach 100620 · 10566 Berlin (+49 30) 34 79 48-48
 customersupport@rohde-schwarz.com

Zweigniederlassung Büro Bonn

Josef-Wirmer-Straße 1-3 · 53123 Bonn (+49 2 28) 918 90-0
 Postfach 140264 · 53057 Bonn (+49 2 28) 25 50 87
 customersupport@rohde-schwarz.com

Zweigniederlassung Hamburg

Steilshooper Allee 47 · 22309 Hamburg (+49 40) 63 29 00-0
 Postfach 602240 · 22232 Hamburg (+49 40) 630 78 70
 customersupport@rohde-schwarz.com

Zweigniederlassung Köln

Graf-Zeppelin-Straße 18 · 51147 Köln (+49 22 03) 807-0
 Postfach 900149 · 51111 Köln (+49 22 03) 807-50
 customersupport@rohde-schwarz.com

Telefon/Phone

Telefax

E-mail

Zweigniederlassung Mitte

Siemensstraße 20 (+49 61 02) 20 07-0
 63263 Neu-Isenburg (+49 61 02) 80 00 40
 customersupport@rohde-schwarz.com

Zweigniederlassung München

Mühlldorfstraße 15 · 81671 München (+49 89) 41 86 95-0
 Postfach 801449 · 81614 München (+49 89) 40 47 64
 customersupport@rohde-schwarz.com

Zweigniederlassung Nürnberg

Donaustraße 36 (+49 9 11) 64203-0
 90451 Nürnberg (+49 9 11) 64203-33
 customersupport@rohde-schwarz.com

Zweigniederlassung Telekommunikation

Siemensstraße 20 (+49 61 02) 20 07-0
 63263 Neu-Isenburg (+49 61 02) 20 07-12
 customersupport@rohde-schwarz.com

ADRESSEN WELTWEIT/ADDRESSES WORLDWIDE

Algeria ROHDE & SCHWARZ Bureau d'Alger (2) 59 24 53
 5 B, Place de Laperrine (2) 69 46 08
 16035 Hydra-Alger -

Argentina Precisión Electrónica SRL (14) 331 16 85
 Av. Julio A. Roca 710 - Piso 6 (14) 334 51 11
 1067 Buenos Aires preelctr@satlink.com

Australia ROHDE & SCHWARZ Sales (2) 8845 4100
 (AUSTRALIA) Pty. Ltd. (2) 9738 3988
 Unit 6, 2-8 South Street Service (2) 8845 4188
 Rydalmere, N.S.W. 2116 (2) 9638 0832
 sales@rsaus.rohde-schwarz.com
 service@rsaus.rohde-schwarz.com

Austria ROHDE & SCHWARZ-ÖSTERREICH (1) 6 02 61 41
 Ges. m. b. H. (1) 6 02 61 41-14
 Sonnleithnergasse 20 office@rsoe.rohde-schwarz.com
 1100 Wien

Azerbaijan ROHDE & SCHWARZ Azerbaijan 12 93 31 38
 Liaison Office Baku 12 93 03 14
 Azerbaijan Avenue 35 -
 370139 Baku

Baltic

Countries siehe/see Denmark

Bangladesh Business International Ltd. (2) 881 06 53
 Corporation Office (2) 882 82 91
 House No: 95/A, Block 'F' -
 Road No: 4, Banani
 Dhaka - 1213

Belgium ROHDE & SCHWARZ BELGIUM N.V. (2) 7 21 50 02
 Excelsiorlaan 31 Bus 1 (2) 7 25 09 36
 1930 Zaventem info@rsb.rohde-schwarz.com

Bolivia siehe auch/see also Argentina

RIBCO LTDA. (2) 32 84 03
 Av. Mariscal Santa Cruz 1392 (2) 39 30 47
 Ed. Cámara Nacional gibatta@caoba.entelnet.bo
 de Comercio
 Piso 10, Of.1010-1011
 La Paz

Brazil

ROHDE & SCHWARZ DO BRASIL LTDA.
 Av. Alfredo Egidio de (11) 56 41 12 00
 Souza Aranha, 177 (11) 56 41 78 10
 1º andar - Santo Amaro
 04726-170 São Paulo- SP

Adressen/Addresses

Brunei	GKL Equipment PTE. Ltd. #11-01 BP Tower 396, Alexandra Road Singapore 119954 Republic of Singapore	276 06 26 276 06 29 gkleqpt@signet.com.sg	Finland	Orbis Oy P.O. B. 15 00421 Helsinki	(9) 47 88 30 (9) 53 16 04 info@orbis.fi
Bulgaria	ROHDE & SCHWARZ Representation Office Bulgaria 39, Fridtjof Nansen Blvd. 1000 Sofia	(2) 963 43 34 (2) 963 21 97 rohdebg@rsoe.com	France	ROHDE & SCHWARZ FRANCE Immeuble "Le Newton" 9-11, rue Jeanne Braconnier 92366 Meudon-la-Forêt Cédex	(1) 41 36 10 00 (1) 41 36 11 10 -
Canada	Kommunikationstechnik/Communications Equipment: ROHDE & SCHWARZ CANADA Inc. 555 March Rd. Kanata, Ontario K2K 2M5	(613) 592 80 00 (613) 592 80 09 -		Niederlassung/Subsidiary Rennes: ROHDE & SCHWARZ FRANCE Sigma 1 Rue du Bignon 35135 Chantepie	(2) 99 51 97 00 (2) 99 41 91 31 -
	Messtechnik/T & M Equipment: TEKTRONIX CANADA, Inc. 3280 Langstaff Road, Unit 1 Concord, Ontario L4K 5B6	(416) 747 50 00 (905) 760 72 41 -		Niederlassung/Subsidiary Toulouse: ROHDE & SCHWARZ FRANCE Technoparc 3 B.P.501 31674 Labège Cédex	(5) 61 39 10 69 (5) 61 39 99 10 -
Chile	DYMEQ Ltda. Avenida Larrain 6666 Santiago	(2) 277 50 50 (2) 227 87 75 dymeq@entelchile.net		Büros/Offices: Aix-en-Provence Lyon Nancy	(4) 94 07 39 94 (4) 94 07 55 11 (4) 78 29 88 10 (4) 78 29 94 71 (3) 83 54 51 29 (3) 83 55 39 51
China	ROHDE & SCHWARZ Representative Office Beijing Parkview Center, Room 602 No. 2 Jiangtai Road, Chao Yang District Beijing 100016, P. R. China	(10) 64 31 28 28 (10) 64 37 98 88 -	Ghana	KOP Engineering Ltd. P.O. Box 11012 3rd Floor Akai House, Osu Accra	(21) 77 99 13 (21) 22 47 69
Colombia	Ferrostaal de Colombia Av. Eldorado Nro. 97-03 Interior 2 Santafé de Bogotá, D.C.	(1) 415 77 00 (1) 413 18 06 mc_fsc@multiphone.net.co	Greece	MERCURY SA. 6, Loukianou Str. 10675 Athens	(1) 722 92 13 (1) 721 51 98 mercury@hol.gr
Costa Rica	siehe/see Mexico (EPSA)		Guatemala	siehe/see Mexico (EPSA)	
Croatia	siehe/see Austria		Honduras	siehe/see Mexico (EPSA)	
Republic of Cyprus	HINIS TELECAST LTD. Agiou Thoma 18 Kiti Larnaca 7550	(4) 42 51 78 (4) 42 46 21	Hong Kong	Schmidt & Co. (HK) Ltd. 9/F North Somerset House Taikoo Place 979 King's Road Quarry Bay, Hong Kong	25 07 03 33 28 27 56 56 frankwong@shk.schmidtgroup.com
Czech Republic	ROHDE & SCHWARZ – Praha, s.r.o. Pod Kastany 3 160 00 Praha 6	(2) 24 32 20 14 (2) 24 31 70 43 rohdecz@rsoe.com	Hungary	ROHDE & SCHWARZ Budapesti Iroda Etele ut. 68 1115 Budapest	(1) 203 02 82 (1) 203 02 82 rohdehu@rsoe.com
Denmark	ROHDE & SCHWARZ DANMARK A/S Ejby Industrivej 40 2600 Glostrup	43 43 66 99 43 43 77 44 RSDK@post1.tele.dk	Iceland	siehe/see Denmark	
Ecuador	REPRESENTACIONES MANFRED WEINZIERL Guanguiltagua 72 (39-93) Urbanización Jardines del Batán Quito	(2) 25 22 51 (2) 25 22 51 mweinzierl@accessinter.net	India	ROHDE & SCHWARZ India Pvt. Ltd. 244, Okhla Industrial Estate Phase - III New Delhi 110 020	(11) 683 74 84 rsindiad@vsnl.com
Egypt	U.A.S. Universal Advanced Systems 31 Manshiet El Bakry St., Heliopolis 11341 Cairo	(202) 455 67 44 (202) 256 17 40 uas@intouch.com	Indonesia	P.T. REKANUSA SOLUSI Menara Rajawali, 24th floor Jl Mega Kuningan Lot # 5.1 Kawasan Mega Kuningan Jakarta 12950	(21) 576 16 02 (21) 576 16 04 -
El Salvador	siehe/see Mexico (EPSA)		Iran	ROHDE & SCHWARZ IRAN Liaison Office - Reg. N° RFC 1947 Dr. Beheschty Ave., Pakistan Ave., 12th Street N° 1 Tehran 15317	(21) 8 73 02 82 (21) 8 73 02 83 -
Estonia	ROHDE & SCHWARZ DANMARK A/S Estonian Branch Office Narva mnt. 13 10151 Tallinn	(6) 14 31 20 (6) 14 31 21			

Adressen/Addresses

Ireland	siehe/see Great Britain	
Italy	ROHDE & SCHWARZ ITALIA S.p.a. Via Tiburtina 1182 00156 Roma	(6) 41 59 81 (6) 41 59 82 70 -
	Centro Direzionale Lombardo Via Roma 108 20060 Cassina de' Pecchi (MI)	(2) 95 70 41 (2) 95 30 27 72
Japan	ADVANTEST Corporation RS Sales Department Shinjuku-NS Building, 4-1 Nishi-Shinjuku Tokyo 163-08, Japan	(3) 33 42 75 53 (3) 53 22 72 70 yoshimu@inst.advantest.co.jp
Jordan	Middle East Development c/o Jordan Crown Engineering & Trading Co. P.O. Box 830414 Amman, 11183	(6) 465 96 71 (6) 465 96 72
Kazakhstan	ROHDE & SCHWARZ Kazakhstan Liaison Office Almaty Pl. Respubliki 15 480013 Almaty	32 72 63 55 55 32 72 63 46 33 -
Kenya	Excel Enterprises Limited Dunga Road P.O. Box 42 788 Nairobi	(2) 55 80 88 (2) 54 46 79
Korea	Hana Technica Corp. Seoul Kangnam, P.O. Box 1458 Young Dong Bldg. 4F 63-16 Nonhyun-Dong, Kang Nam-Ku Seoul	(2) 514 45 46 (2) 514 45 49 hanateco@unitel.co.kr
Kuwait	Group Five Trading & Contracting Co. P.O. Box 26645 Safat 13127 State of Kuwait	244 91 72 244 95 28
Latvia	Rohde & Schwarz Danmark A/S Latvian Branch Office Merkela iela 21-301 1050 Riga	(7) 50 23 55 (7) 50 23 60 rsdk@rsdk.rohde-schwarz.com
Lebanon	Rohde & Schwarz International Liaison Office Riyadh PO Box 361 c/o Haji Abdullah Alireza & Co. Riyadh 11411 - KSA	(1) 465 64 28 Ext. 303 (1) 465 64 28 Ext. 229
Liechtenstein	siehe/see Switzerland	
Lithuania	Rohde & Schwarz Danmark A/S Lithuanian Office Lukiskiu 5-228 2600 Vilnius	222 46 62 222 46 62
Luxembourg	siehe/see Belgium	
Malaysia	DAGANG TEKNIK SDN. BHD. No. 9, Jalan SS 4D/2 Taman People's Park 47301 Petaling Jaya Selangor Darul Ehsan	(3) 7035503/7035568 (3) 7 03 34 39 danik@tm.net.my
Malta	ITEC - International Technology Ltd. B'Kara Road San Gwann	37 43 00 37 43 53 itec@keyworld.net
Mexico	Vertrieb Kommunikationstechnik/ Sales of Communications Equipment: ELECTROINGENIERIA de Precisión S.A. (EPSA) Uxmal 520 Colonia Vertiz Narvarte 03600 Mexico DF	(5) 559 76 77 (5) 575 33 81 epsa@compuserve.com
	Vertrieb Messtechnik/Sales of T&M Equipment: Tektronix S.A. de C.V. Periférico Sur 5000, 8° Piso Col. Insurgentes Cuicuilco Del. Coyoacán 04530 Mexico, D.F.	(5) 666 63 33 (5) 666 63 36
Nepal	Abishek Trade Links (P) Ltd. P.O.B. 9700 Kathmandu	(1) 25 69 30 (1) 24 25 73 Durbar@hotel.mos.com.np
Netherlands	ROHDE & SCHWARZ NEDERLAND B.V. Perkinsbaan 1 3439 ND Nieuwegein	(30) 600 17 00 (30) 600 17 99 Rob.DenHartog@rsn.rohde-schwarz.com
New Zealand	Nichecom Level 1 Tawa Plaza 210 Main Rd / P.O.B. 56-045 Tawa, Wellington	(4) 232 32 33 (4) 232 32 30 ISDN (4) 237 30 10 robin.hodgson@nichecom.co.nz
Nicaragua	siehe/see Mexico (EPSA)	
Nigeria	Ferrostaal (Nigeria) Ltd. 27/29 Adeyemo Alkaija Street P.O. Box 72021 Victoria Island Lagos	(1) 262 00 60 (1) 262 00 64
Norway	ROHDE & SCHWARZ NORGE Østensjøveien 36, P.O.B. 103 BRYN 0611 Oslo	23 17 22 50 23 17 22 69 -
Oman	T&M Equipment and Broadcasting: Mustafa & Jawad Science & Industry Co. Ltd. P.O. Box 3340 Post Code 112 Ruwi Sultanate of Oman	60 20 09 60 70 66
Pakistan	TelcoNet Communications & Engineering 213/D, Ordnance Road Rawalpindi-Pakistan-46000	(51) 26 30 72 (51) 26 32 11 inc@meganet.com.pk
Panama	siehe auch/see also Mexico (EPSA)	
	ELECTRONICO BALBOA S.A. Av. El Paical, Edif. El Dorado Urb. Los Angeles Panama City	614 93 64 236 18 20 pdubois@ebsa.com
Papua- New Guinea	siehe/see Australia	
Peru	siehe auch/see also Argentina	
	BMP INGENIEROS S.A. Av. José Gálvez Barrenechea 645 Urb. Corpac - San Borja Lima 41	(1) 225 40 30 (1) 475 15 13 wmgarejo@bmp.com.pe

Adressen/Addresses

Philippines	MARCOM Industrial Equipment, Inc. MCC P.O.Box 2307 6-L Mezzanine Suite, Vernida I Condominium 120 Amorsolo St. Legaspi Village Makati City/Philippines 3117	(2) 8 13 29 31 (2) 8 17 05 07	12830 Skarpnäck info@rss.rohde-schwarz.com
Poland	ROHDE & SCHWARZ Oddzial w Polsce ul. Stawki 2, Pietro 28 00-193 Warszawa	(22) 860 64 90 (22) 860 64 99 rohdepl@rsoe.com	Switzerland Roschi Rohde & Schwarz AG Papiermühlestrasse 145, Postfach 3063 Ittigen -
Portugal	TELERUS Sistemas de Telecomunicações, S.A. Rua General Ferreira Martins, Lote 6,2.ºB 1495 Algés	(21) 412 35 90 (21) 412 36 00 telerus@mail.telepac.pt	Syria Electro Scientific Office Baghdad Street Dawara Clinical Lab. Building P.O.B. 8162 Damascus (11) 231 59 74 (11) 231 88 75 -
Romania	ROHDE & SCHWARZ Representation Office Bucharest Uranus 98 Bloc U8, scara 2, etaj 5, ap. 36 76102 Bucuresti	(1) 410 68 46 (1) 411 20 13 rohdero@rsoe.com	Tanzania Security Systems (T) Ltd. P.O. Box 7512 Dar Es Salaam (22) 2 76 00 37 (22) 276 02 93
Russian Federation	ROHDE & SCHWARZ Representative Office Moscow Kazachy per. 7 109017 Moscow	(095) 234 49 62 (095) 234 49 63 rohderus@rsoe.com	Taiwan Lancer Communication Co., LTD. 16F, No. 30, Pei-Ping East Road Taipei (2) 23 91 10 02 (2) 23 95 82 83 rosa.ho@lancercomm.com.tw
Saudi Arabia	Rohde & Schwarz Liaison Office c/o Haji Abdullah Alireza Co. Ltd. P.O.B. 361 Riyadh 11411	(1) 465 64 28 (1) 465 07 82 -	Thailand Vertrieb Kommunikationstechnik/Sales Communications Equipment: TPP Operation Co., Ltd. 41/5 MoobanTarinee Boromrajchonnee Rd. Talingchan, Bangkok 10170 (2) 880 93 45 (2) 880 93 47 -
Singapore	Vertrieb/Sales: INFOTEL TECHNOLOGIES LTD. 19 Tai Seng Drive Kinergy Building # 06-00 Singapore 535222	287 68 22 284 95 55 general@infotel.com.sg	Vertrieb Messtechnik/Sales T & M Equipment: Schmidt Scientific (Thailand) Ltd. 212 Government Housing Bank Bldg. Tower II, 19th Floor, Rama 9 Rd., Huaykwang, Bangkok, Bangkok 10320 (2) 643 13 30-9 (2) 643 13 40 -
	Service: Rohde & Schwarz Support Centre Asia Pte. Ltd. 1 Kaki Bukit View #04-05/07 Techview Singapore 415941	846 37 10 846 00 29 rssca@mbox4.singnet.com.sg	Turkey ROHDE & SCHWARZ Liaison Office Istanbul Bagdad Cad. 191/3, Ard. 81030 Selamicesme-Istanbul (216) 385 19 17 (216) 385 19 18 rsturk@superonline.com
Slovak Republic	Specialne systémy a software, a.s. Svrčic ul 84104 Bratislava	(7) 65 42 25 29 (7) 65 42 07 68 3s@internet.sk	Ukraine ROHDE & SCHWARZ Representative Office Kiev ul. Patrisa Loumoumba, 4 252042 Kiev (044) 268 60 55 (044) 268 83 64 rohdeukr@rsoe.com
Slovenia	ROHDE & SCHWARZ Representation Ljubljana Koprska 92 1000 Ljubljana	(61) 123 46 51 (61) 123 46 11 rohdesi@rsoe.com	United Arab Emirates Service-Center für den Mittleren Osten/ Service Center for the Middle East: ROHDE & SCHWARZ Emirates L.L.C. P.O.B. 31156 Abu Dhabi (2) 631 20 40 (2) 631 30 40 -
South Africa	Protea Data Systems (Pty) Ltd Communications & Measurement Division Private Bag X19 Bramley 2018	(11) 786 36 47 (11) 786 58 91 Colin.Forbes@protea.co.za	ROHDE & SCHWARZ Liaison Office Middle East P.O. Box 311 56 Abu Dhabi (2) 63 35 670 (2) 63 35 671 -
Spain	ROHDE & SCHWARZ ESPAÑA Salcedo, 11 28034 Madrid	(91) 334 10 70 (91) 729 05 06 rema@rsd.rohde-schwarz.com	Vertrieb/Sales: ROHDE & SCHWARZ Liaison Office Dubai P.O.B. 53726 Dubai (4) 39 44 829 (4) 39 44 794 -
Sri Lanka	LANKA AVIONICS 658/1/1, Negombo Road Mattumagala Ragama	(1) 95 66 78 (1) 95 83 11 -	R&S BICK Mobile Communication P.O.B. 17466 JAFZ, LOB 04-028 Dubai (4) 81 36 75 (4) 81 36 76 -
Sudan	SolarMan Co. Ltd. P.O. Box 11 545 Karthoum	(11) 47 31 08 (11) 78 17 25	United Kingdom ROHDE & SCHWARZ UK Ltd. Ancells Business Park Fleet, Hampshire GU 13 8UZ (12 52) 81 13 77 (12 52) 81 14 47 -
Sweden	ROHDE & SCHWARZ SVERIGE AB Flygfältsgatan 15	(8) 605 19 00 (8) 605 19 80	Uruguay siehe auch/see also Argentina

Adressen/Addresses

AEROMARINE S.A. (2) 400 39 62
Cerro Largo 1497 (2) 401 85 97
11200 Montevideo aeromar@adinet.com.uy

USA Kommunikationstechnik/Communications Equipment:
ROHDE & SCHWARZ, Inc. (301) 459 88 00
4425 Nicole Drive (301) 459 28 10
Lanham, MD 20706 -

Messtechnik/T & M Equipment:
TEKTRONIX Inc. (800) 835 9433 Ext. 6630
P.O.B. 500, M/S 50-216 (800) 835 7732
Beaverton, OR 97076 -

Venezuela EQUILAB TELECOM C.A. (2) 34 46 26
Centro Seguros La Paz (2) 239 52 05
Piso 6, Local E-61 r_ramire@equilabtelecom.com.ve
Ava. Francisco de Miranda
Boleita, Caracas 1070

Military customers only:
REPRESENTACIONES BOPIC S.A. (2) 985 21 29
Av. Diego Cisneros (2) 985 39 94
Centro Empresarial Los Ruices incotr@cantv.net
Of. 119, 1er piso
Los Ruices
Caracas

Vietnam Schmidt Vietnam Co., Ltd. (4) 834 61 86
8/F, Schmidt Tower, Hanoi (4) 834 61 88
Intern. Technology Centre svnhn@schmidt group.com
Cau Giay, Tu Liem, IPO Box 89
Hanoi

Yugoslavia see/siehe Austria

Nicht aufgeführte Länder/Countries not listed:

ROHDE & SCHWARZ INTERNATIONAL GmbH
P.O.B. 80 14 69
81614 München / Germany
Please fax to +49 89 41 29 136 62

Table of Contents – Chapter 1 “General Information”

1	General Information on Application Firmware FS-K5, GSM Mobile Station Tests	
	A brief explanation of GSM (GMSK and EDGE).....	1.1
	Firmware application FS-K5	1.5
	Installing the FS-K5 firmware application.....	1.6
	Starting the application.....	1.6
	The application’s general settings.....	1.7
	Measuring with the application.....	1.7
	Aborting a measurement.....	1.8
	Results of measurements	1.8
	Exiting the application	1.9
	Trigger options.....	1.10
	Trigger and time references	1.11
	Possible errors and difficulties during measurement	1.13
	Messages in GSM MS mode	1.14
	Figures	
	Figure 1-1 Data transmission in GSM network - T&FDMA communication	1.2
	Figure 1-2 Start screen in GSM-MS mode	1.7
	Figure 1-3 Trigger setting in <i>GENERAL SETTINGS</i> menu	1.11
	Figure 1-4 Trigger and time references	1.12
	Tables	
	Table 1-1 Downlink – base station transmitting to mobile	1.3
	Table 1-2 Uplink – mobile transmitting to base station.....	1.3
	Table 1-3 Results of measurements	1.8
	Table 1-4 Trigger options	1.10
	Table 1-5 Trigger settings in GSM trigger mode	1.10

1 General Information on Application Firmware FS-K5, GSM Mobile Station Tests

A brief explanation of GSM (GMSK and EDGE)

The GSM (Global System for Mobile Communication) standard describes the GSM mobile radio network that is in widespread use today. To enhance this network the 8PSK modulation has been defined in addition to the existing GMSK modulation. With 8PSK the mobile or base station operates in the EDGE (Enhanced Data rates for GSM Evolution) mode.

This means that GSM includes two different modes: GMSK and EDGE. . The term EDGE is used only wherever there are significant differences between the two modes. In all other cases, the term GSM will be used.

There are two different standards, distinguished primarily by their frequency bands: ETSI (for GSM900, GSM1800) and J-STD-007 (PCS 1900 , primarily in the USA).

The physical layer – the layer of the GSM network on which modulation, transmission of RF signals, reception of RF signals, and demodulation take place – is defined in the standards

GSM 05.04	Modulation
GSM 05.05 (ETS 300 910)	General measurement specifications and limit values
GSM 11.10 (ETS 300 607-1)	Detailed measurement specifications and limit values for mobiles
GSM 11.21 (ETS 300 609-1) and	Detailed measurement specifications and limit values for base stations
J-STD 007	Detailed measurement specifications and limit values for mobiles and base stations in the 1900 MHz band

As technological development progresses, J-STD 007 is now being integrated into the other GSM standards.

A T&FDMA method is used to transfer data in the GSM network. This means that the digital information is transmitted discretely in the time domain as well as in the frequency domain.

The time domain is divided logically into frames of different length, the smallest unit being known as a timeslot. A multiframe consists of 26 frames, and a frame has 8 timeslots (see GSM 05.01 for details).


A mobile, therefore, does not communicate continuously with the base station; instead, it communicates discretely in individual timeslots. In the simplest case, 8 mobiles share the 8 timeslots of a frame (TDMA - Time Division Multiple Access).

The frequency domain absolute frequency channel number is divided into frequency bands, and each band, in turn, is subdivided into channels.


Each frequency channel is identified by its center frequency and a number, known as the ARFCN, which is a non-band-specific identifier (ARFCN - absolute radio frequency channel number). A bandwidth of 200 kHz is defined for each frequency channel.

Communication between a mobile and the base station can be either frequency-continuous or frequency-discrete – distributed across various frequency channels (FDMA – Frequency Division Multiple Access). In the standards, the abbreviation "SFH" (slow frequency hopping) is used to designate this mode of communication.

Mobiles transmitting simultaneously on different frequencies: FDMA

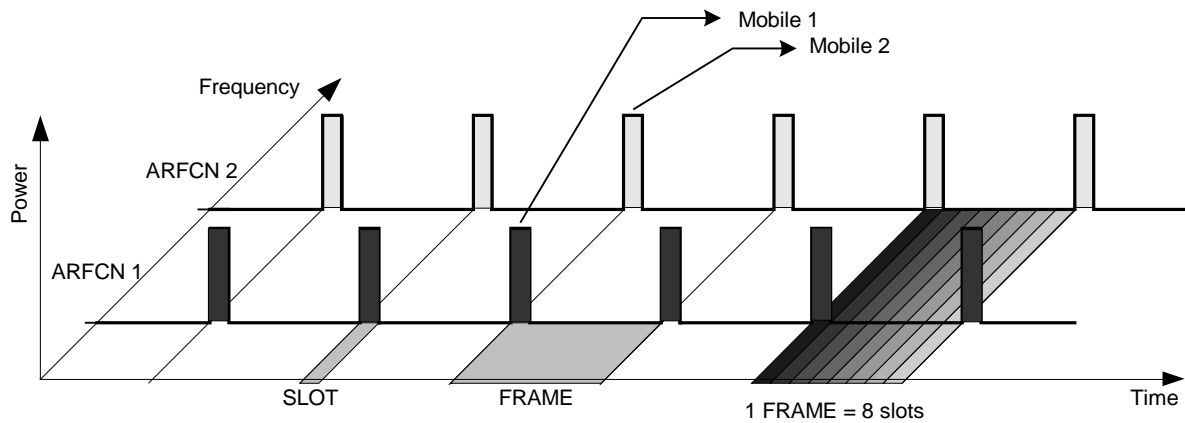

Mobiles transmitting on the same frequency at different times: TDMA

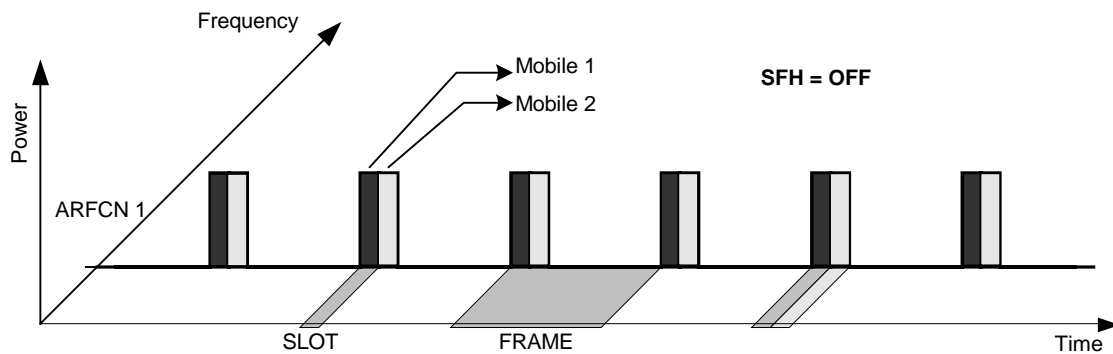

Mobile 1 transmitting on same frequency, mobile 2 transmitting on different frequencies

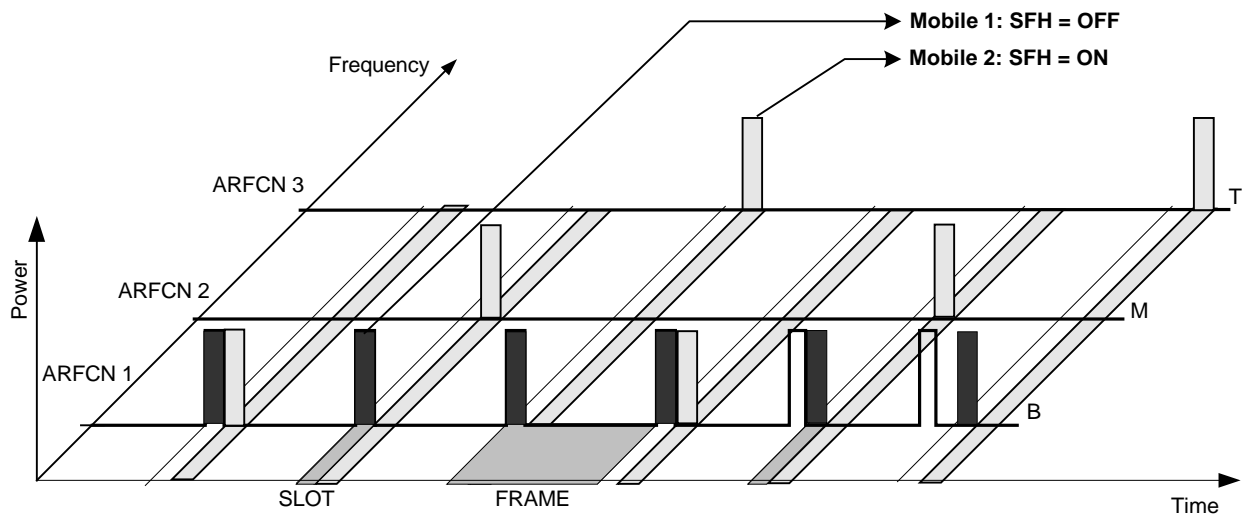


Figure 1-1 Data transmission in GSM network - T&FDMA communication

Base station and mobile communicate in different frequency ranges. The mobile sends in the "uplink", and the base station in the "downlink".

The frequencies specified in the standards plus their channel numbers are listed in the tables below.

Table 1-1 Downlink – base station transmitting to mobile

P-GSM 900	935.2MHz				959.8MHz	FREQ
	1				124	ARFCN
E-GSM 900	925.2MHz	934.8	935	935.2	959.8MHz	FREQ
	975	1023	0	1	124	ARFCN
R-GSM 900	921.2MHz	934.8	935	935.2	959.8MHz	FREQ
	955	1023	0	1	124	ARFCN
DCS 1800	1805.2MHz				1879.8MHz	FREQ
	512				885	ARFCN
PCS 1900	1930.2MHz				1989.8MHz	FREQ
	512				810	ARFCN

Table 1-2 Uplink – mobile transmitting to base station

P-GSM 900	890.2MHz				914.8MHz	FREQ
	1				124	ARFCN
E-GSM 900	880.2MHz	889.8	890	890.2	914.8MHz	FREQ
	975	1023	0	1	124	ARFCN
R-GSM 900	876.2MHz	889.8	890	890.2	914.8MHz	FREQ
	955	1023	0	1	124	ARFCN
DCS 1800	1710.2MHz				1784.8MHz	FREQ
	512				885	ARFCN
PCS 1900	1850.2MHz				1909.8MHz	FREQ
	512				810	ARFCN

At this time, two different modes of modulation are used in the GSM mobile radio network. The original GMSK method has now been joined by an 8PSK method (EDGE).

The GMSK symbol rate is $1/T = 1625/6$ ksymb/s (in other words, approx. 270.833 ksymb/s). This corresponds to $1625/6$ kbit/s (in other words approx. 270.833 kbit/s). In this method, a bit change represents a symbol. The details are laid down in ETSI standard GSM 05.04.

The 8PSK (EDGE) symbol rate is $1/T = 1625/6$ ksymb/s (in other words, approx. 270.833 ksymb/s). This corresponds to $3 \times 1625/6$ kbit/s (in other words approx. 812.5 kbit/s). In this method, three bits represent a symbol. The details are laid down in ETSI standard GSM 05.04.

In both cases, however, the channel bandwidth is restricted to 200 kHz. As these figures show, the EDGE bit rate is approx. three times higher than that of the GMSK method.

The customers' demand for higher telecommunication speeds increases the demand for bandwidth. Therefore the GSM standard has to evolve constantly. An example of this development is the recently introduced EDGE specification and the GPRS and HSCSD modes.

Until now, each mobile could use only one timeslot per frame, but the new HSCSD and GPRS methods will allow permanent assignment of more than one timeslot per mobile, plus dynamic utilization of multiple timeslots.

The concept behind GPRS (General Packet Radio Service) is dynamic assignment of up to 8 timeslots to each mobile for data transmission, depending on demand (and availability in the network).

HSCSD (High Speed Circuit Switched Data) allows permanent assignment of up to 4 timeslots to a mobile.

The two modulation modes GMSK and EDGE can be used.

Of significance for the FS-K5 application firmware in this respect is that the mobile can send power on a frequency in more than one timeslot.

Firmware application FS-K5

The characteristics of the GSM system as outlined above have to be measured in development and production and checked against limit values. The characteristics belonging to the physical layer that have to be checked include:

The characteristics of GMSK modulation:	Phase/frequency error
The characteristics of 8PSK modulation:	Modulation accuracy
Carrier power versus time	Power, time characteristic of power, and timing offset of power within a timeslot are checked.
The spectral characteristics	<p>The spectral distribution of the energy is measured in the frequency channel, in the transmit band and outside the transmit band.</p> <p>A distinction is made between two causes for the form of spectral distribution:</p> <ol style="list-style-type: none"> 1) The spectrum caused by GMSK or 8PSK (EDGE) modulation (measurement is performed only in that part of the timeslot in which power is virtually constant, in other words the switching ramps are ignored). 2) The spectrum caused by switching of the power in a timeslot.

In accordance with these requirements, the standards define the six measurements supported in this firmware application.

The GSM MS, FS-K5 application provides a convenient means of performing the measurements listed below for GSM900 (P-GSM, E-GSM and R-GSM), DCS1800 or PCS1900 mobiles (by analogy with the standards GSM 11.10, GSM 11.10-DCS, GSM11.10-1 and J-STD-007 Air Interface):

Characteristics of GMSK modulation:

- PFE Phase/frequency error Measurement of phase and frequency error with synchronization to midamble

Characteristics of GMSK modulation:

- MAC Modulation Accuracy Measurement of EVM, of 95:th percentile value, of origin offset suppression and of frequency error with synchronization to midamble

Carrier power versus time

- CPW Carrier power Measurement of carrier power
- PVT Power versus time Measurement of carrier power versus time with synchronization to midamble

Spectral characteristics

- MOD Spectrum due to modulation Measurement of spectrum due to modulation
- TRA Spectrum due to transients Measurement of spectrum due to transients
- SPU Spurious Measurement of spurious

Limit values can be defined for each individual measurement. Some basic limit values are predefined and can be changed or supplemented by other limit values.

In the PVT and MOD measurement modes, the limit values depend on the measured power of the device. An arbitrary midamble can be defined for GMSK and EDGE (8-PSK). These measurements are preceded by reference measurements to furnish the correct level setting as required by the standard.

The PFE and PVT measurement modes require a time reference to the midamble (TSC 0 to 7). The IF signal is digitized, demodulated and processed (IQ mode) for these measurements.

The sections below contain basic information on the main procedures, settings and messages of the device. The descriptions of the measurements in Chapter 2 contain more detailed information specific to the various modes of measurement. The background information in the sections entitled "Additional information" in Chapter 2 is supplementary in nature and not necessary for normal operation. This information merely explains in more detail the internal settings and procedures. Chapter 3 describes the application's remote-control commands. The relevant commands also accompany each description of a softkey.

Installing the FS-K5 firmware application

When shipped ex works, the FS-K5 firmware application is preinstalled and enabled and can be used right away.

When shipped separately, the FS-K5 firmware application is accompanied by the latest version of the instructions for installation and enabling.

Starting the application

Press the **GSM-MS** hotkey to start the GSM MS, FS-K5 application. The GSM-MS mode is now active, the **GSM-MS** hotkey has a green background.

Set triggering by switching to the GSM trigger mode (See "Trigger options"); the level versus time over approx. 9 slots is displayed. No measurement is active.

In order to simplify the procedure for working alternately with the analyzer and GSM-MS modes, the principal parameters are maintained each time you change from one mode to the other:

- Center frequency (CENTER)
- Frequency offset (FREQUENCY OFFSET)
- Reference level (REF LEVEL)
- Reference level offset (REF LEVEL OFFSET)
- Attenuation value (RF ATTEN)¹
- Mode of attenuation (RF ATTEN AUTO/MANUAL)
- Attenuation value of electronic attenuator (EL ATTEN)
- Electronic attenuator on/off (EL ATTEN OFF)¹
- Setting of electronic attenuator (EL ATTEN AUTO/MANUAL)
- Input impedance (RF INPUT 50 Ω/75 Ω)
- Sweep counter (SWEEP COUNT = NO. OF BURSTS)
- Trigger (TRIGGER; see "Trigger options")
-

¹) only with *RF ATTEN AUTO*: If the GSM application is activated, the attenuation is automatically reduced so that the mixer level is at the maximum (-10dBm). When the GSM application is exited, this modification is cancelled (mixer level maximum -30 dBm).

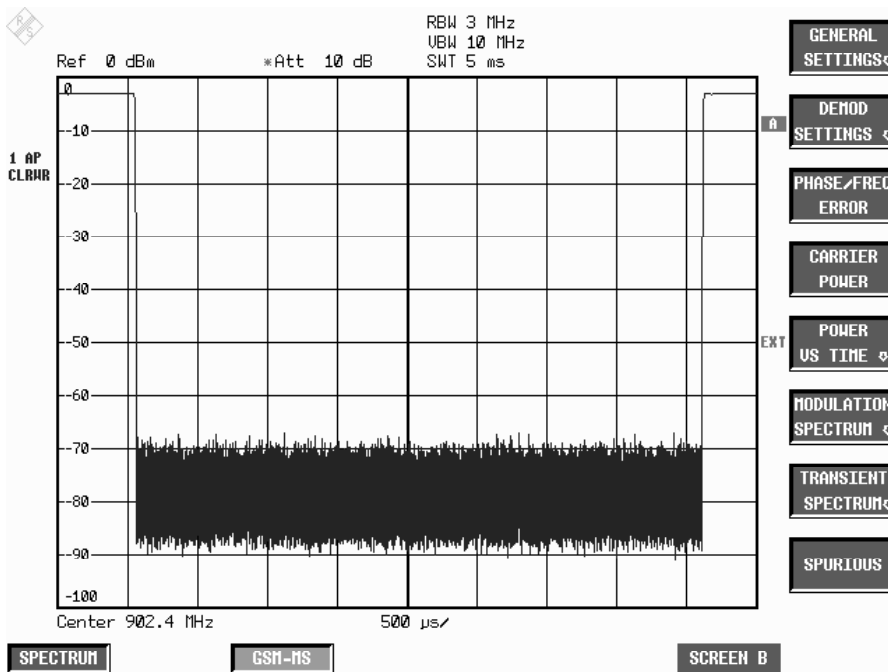


Figure 1-2 Start screen in GSM-MS mode

If the display does not update when you activate the GSM-MS mode (screen frozen), check the frequency, reduce external or internal attenuation or increase the level, or switch to an external trigger.

The application's general settings

The *GENERAL SETTINGS* menu contains the functions for setting the basic parameters needed in order to perform measurements.

All the parameters you cannot change in this menu can be controlled by means of the keys on the basic unit.

You cannot always change all the parameters for specific measurements. Availability is detailed in the descriptions of the individual measurements.

Measuring with the application

Once you exit the *GENERAL SETTINGS* menu (*PREV* or *GSM-MS*), you can start all measurements by pressing the appropriate softkey in the GSM MS menu.

The PVT, MOD and TRA measurements offer a choice of modes: you can start and parameterize these modes in the submenu of the measurement you select.

The measurements of the FS-K5 are divided into 2 classes:
Measurements with and without preceding reference measurements.

The purpose of the reference measurement – depending on the measurement selected – is to ascertain the current signal level as a reference for the subsequent (main) measurement.

This applies to all relative measurements (PVT and MOD) that require a reference value. A warning is issued at the end of the measurement if the measured signal level is below a minimum value or above a maximum value.

Reference measurement is not automatic: you must start it manually (*START REF MEAS*).

Aborting a measurement

In manual mode you can always abort a measurement in progress.

You can do so either by pressing the softkey with which you start the measurement, or in a special dialog box where you are prompted for confirmation of your intention.

To start another measurement you always have to abort the measurement in progress.

Aborts take place without further warning.

In remote-control mode the `ABORT` command can be sent to stop a measurement in progress (see the manual on IEC/IEEE bus control).

Results of measurements

Table 1-3 Results of measurements

Measurement	Result	Limit Line	Table	Curve
PFE	Phase error 'peak' and 'RMS'; frequency error in 'Hz'.	None	None	X Phase error
MAC	EVM 'Peak' and 'RMS'; Origin Offset Suppression 95:th percentile frequency error in 'Hz'.	None	None	X EVM per symbol
CPW	PASSED / MARGIN / FAILED	Upper & lower limit lines	None	X Carrier power
PVT	PASSED / MARGIN / FAILED Carrier Power	Upper & lower limit lines	None	X Carrier power
MOD Frequency sweep	PASSED / MARGIN / FAILED	Upper limit line		X Frequency sweep
MOD List	PASSED / MARGIN / FAILED	Upper limit line	One level value and one limit value per frequency value	Compressed frequency sweep while measurement is in progress
TRA Frequency sweep	PASSED / MARGIN / FAILED	Upper limit line		X
TRA List	PASSED / MARGIN / FAILED	Upper limit line	One level value and one limit value per frequency value	Compressed frequency sweep while measurement is in progress
SPU	PASSED / MARGIN / FAILED	Upper limit line		X Frequency sweep

Each measured value is assigned to one of the following quality classes:

- PASSED Best quality level Measured values inside the tolerance window
- MARGIN : Values inside the limit, but above the tolerance margin
(= MARGIN, user-definable)
- FAILED poorest quality level Values outside limit

Overall assessment of the measurement is shown along with the assessments of the individual measured values. The worst evaluation is dominant.

Exiting the application

You exit the FS-K5 application by pressing a hotkey to call another operating mode, for example by pressing the *SPECTRUM* hotkey to call the ANALYZER mode. The GSM-MS mode is no longer active, the **GSM-MS** hotkey has a grey background, the newly selected mode is active and its hotkey has a green background.

In order to simplify the procedure for working alternately with the Analyzer and GSM-MS modes, the principal parameters of the GSM-MS measurement active at the time of the changeover are maintained in the new mode:

- Center frequency (CENTER)
- Frequency offset (FREQUENCY OFFSET)
- Reference level (REF LEVEL)
- Reference level offset (REF LEVEL OFFSET)
- Attenuation value (RF ATTEN)¹
- Mode of attenuation (RF ATTEN AUTO/MANUAL)
- Attenuation value of electronic attenuator (EL ATTEN)
- Electronic attenuator on/off (EL ATTEN OFF)¹
- Setting of electronic attenuator (EL ATTEN AUTO/MANUAL)
- Input impedance (RF INPUT 50 Ω/75 Ω)
- Sweep counter (SWEEP COUNT = NO. OF BURSTS)
- Trigger (TRIGGER; see "Trigger options")
- Trigger polarity (POLARITY POS/NEG)
- Trigger offset of trigger active in GSM-MS (TRIGGER OFFSET)
- Resolution bandwidth ² (RBW)
- Video bandwidth ² (VBW)
- Sweep time ² (SWEEP TIME)

¹) Only with *RF ATTEN AUTO*: If the GSM application is activated, the attenuation is automatically reduced so that the mixer level is at the maximum (max. -10 dBm). When the GSM application is exited, this modification is cancelled (mixer level max. -30 dBm).

²) For CPW, MOD, TRA and SPU measurements only
These values cannot be transferred exactly in the case of the PFE and PVT measurements.
The values set for PFE and PVT are as follows:

	PFE	PVT
RBW:	300 kHz	300 kHz
VBW:	1 MHz	3 MHz
SWT:	542.75us	801.25us

Trigger options

The measurements in the GSM-MS mode can be triggered with the IF power trigger, the external trigger, or with free run (automatic only, cannot be selected manually).

When you call the GSM-MS mode, the trigger changes from the currently active selection to a GSM trigger mode. This automatically selects a suitable trigger.

Table 1-4 Trigger options

Trigger setting before the GSM-MS mode is called	GSM trigger
IF power	IF power
Extern	External
Other trigger	IF power, The message: "IF Power Trigger active!" draws your attention to the change

The IF power and/or external trigger settings are not always possible or useful in all measurements, so in some cases the FREE RUN trigger is selected automatically. The table below shows the triggers used for the various measurements and the GSM trigger mode selected.

Table 1-5 Trigger settings in GSM trigger mode

Measurement	Possible trigger(s)	Trigger used when	
		trigger mode = Extern	trigger mode = IF Power
PFE	External / Free Run	External	Free Run
CPW	External / IF Power	External	IF Power
PVT	External / Free Run	External	Free Run
MOD	External / IF Power	External	IF Power
TRA	Free Run	Free Run	Free Run
SPU	Free Run	Free Run	Free Run

The level of the IF Power trigger can be set manually.

Trigger and time references

You can set a trigger offset for the external trigger and for the IF POWER trigger. These values are stored in the GSM-MS. Each time you change triggers, the relevant trigger offset value is also set.

The timeslot of the TDMA burst to be measured in the PFE, PVT, MOD and CPW measuring modes is defined in the ETSI specifications.

In the PFE and PVT measuring modes, correct timing of the timeslot is ensured by synchronization to the midamble.

In the MOD and CPW measuring modes, the timing of the timeslot has to be set manually. You perform this manual setting in the *GENERAL SETTINGS* menu by adjusting the trigger offset of the selected trigger until the TDMA burst is positioned inside the mask.

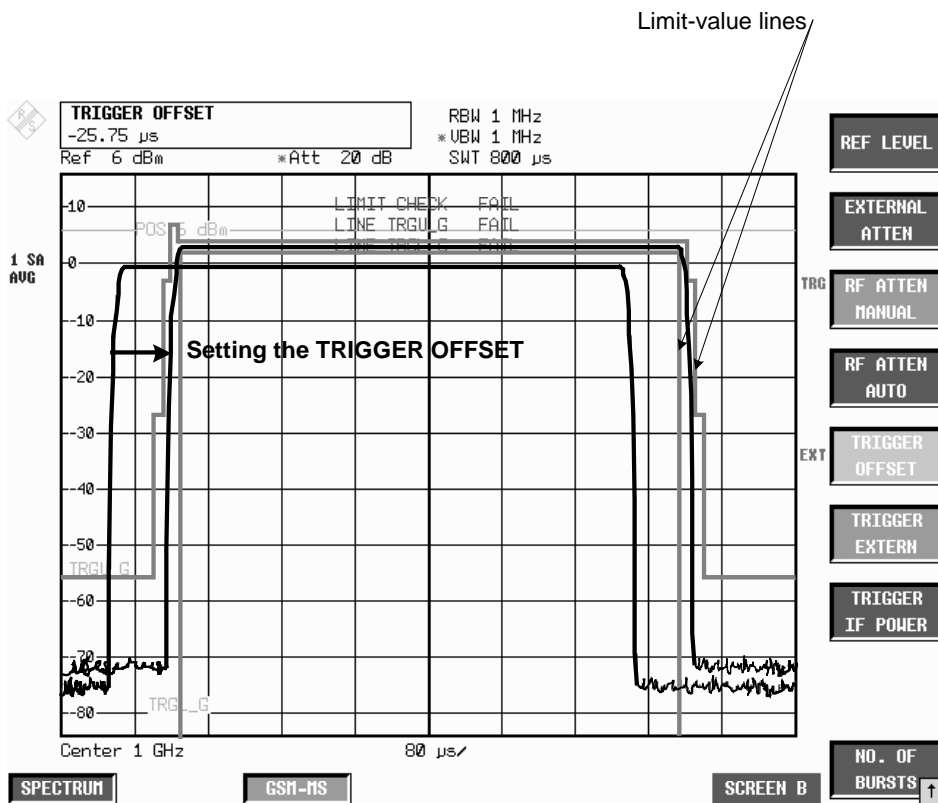


Figure 1-3 Trigger setting in *GENERAL SETTINGS* menu

Two values are computed: trigger offset and GSM trigger offset.

Trigger offset Time between trigger and start of display.

GSM trigger offset Time between trigger and start of slot.

The value of the GSM trigger offset, in other words the time between the trigger and the start of the slot, is needed for remote control. This time is displayed when you exit the *GENERAL SETTINGS* menu.

```

Trigger Offset between
external Trigger and 'begin of slot':
85.75  $\mu\text{s}$ 
OK
    
```

Figure 1-4 Trigger shows the trigger and time references used in the GSM firmware.

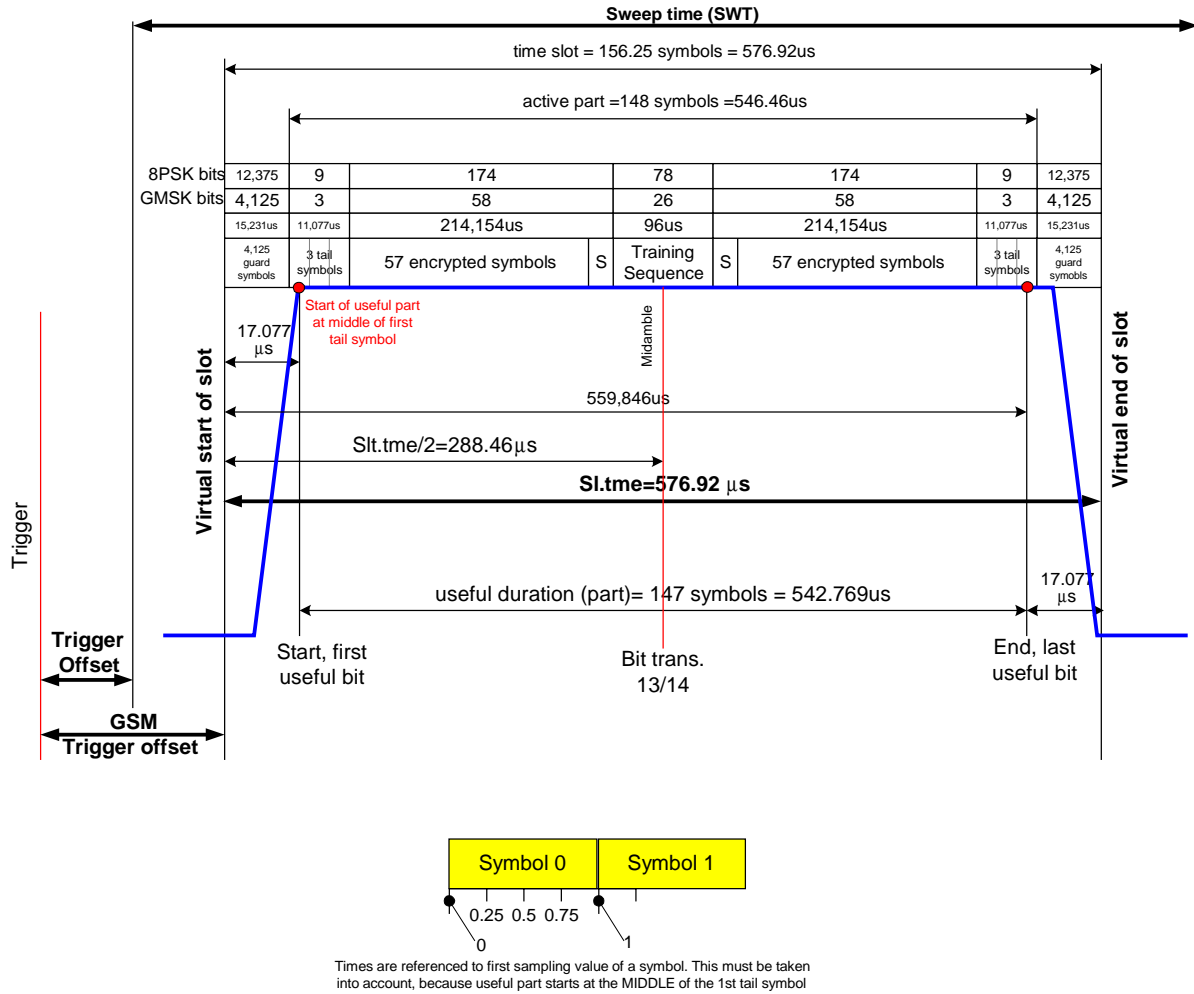


Figure 1-4 Trigger and time references

Possible errors and difficulties during measurement

The three main sources of error in GSM measurement are described below:

- **No carrier signal**

Causes:	Wrong working frequency (ARFCN), slow frequency hopping active, test line defective or wrong attenuation, wrong reference level	
Effects:	Reference measurement:	Inadequate power is measured (e.g. average measurement with slow frequency hopping), measurement issues warning. Sweep stops (measurements with midamble synchronization), warning message: Sync not found Sweep stops (measurements with IF Power trigger)
	Main measurement:	Sweep stops with midamble synchronization active (PFE, PVT) or IF Power trigger in use. Sweep resumes when signal is restored.
Remedy:	<ul style="list-style-type: none"> - Select correct frequency (FREQ ...) - Deactivate slow frequency hopping (see "Measurements with slow frequency hopping" in the descriptions of the individual measurements) - Set correct external attenuation (GENERAL SETTINGS\EXT ATTEN) - Set correct reference level (GENERAL SETTINGS \REF LEVEL ...) 	

- **No trigger**

Effects:	All triggered measurements: sweep stops. This is not immediately apparent on screen.
Remedy:	<ul style="list-style-type: none"> - Change trigger - IF Power trigger: reduce level of IF power trigger reduce external attenuation increase signal level

- **Burst not found/Sync not found**




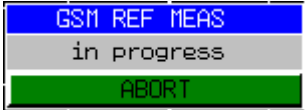

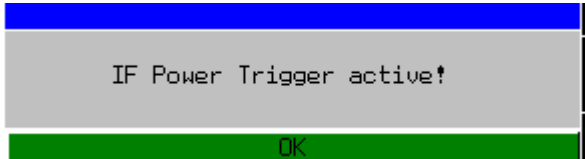

Causes:	Dummy burst, slow frequency hopping active, wrong midamble, wrong modulation type
Effects:	Sweep stops (measurements with midamble synchronization)
Remedy:	<p>Necessary only if measurement does not run, otherwise measurement is possible</p> <ul style="list-style-type: none"> - Check the modulation type - Check the midamble - Deactivate slow frequency hopping

Messages in GSM MS mode

All the messages explained below remain on screen only for as long as is absolutely necessary. They are cleared automatically three seconds after the reason why they were issued no longer applies. You can close any box with an 'OK button' by pressing ENTER.

You can continue to use softkeys, keys and hotkeys while a message box is displayed on screen.

If a message box includes an 'ABORT' key, you can abort the action in progress by pressing ENTER.

Message	Explanation
	<ul style="list-style-type: none"> - Indicates that list measurement (MOD or TRA) is in progress - Abort possible <p>➤ If this message remains in view and no progress in the trace is apparent on the screen, measurement might be waiting for a trigger.</p>
 	<ul style="list-style-type: none"> - List measurement aborted by user - Values obtained during this measurement are ignored
	<ul style="list-style-type: none"> - Reference measurement for PVT or MOD measurement in progress - Abort possible <p>➤ If this message remains in view and no progress in the trace is apparent on the screen, measurement might be waiting for a trigger.</p>
	<ul style="list-style-type: none"> - Reference measurement aborted by user - Values obtained during this measurement are ignored
	<ul style="list-style-type: none"> - When the GSM MS software is activated, this message is displayed to show that the IF Power trigger has been activated by default. <p>➤ See "Trigger and time references".</p>
	<ul style="list-style-type: none"> - Indicates that the power measured in reference measurement does not correspond to the setting for the reference level (reference level is too high). <p>➤ Reduce the reference level to approx. the value given in the message so that the reference level is about 3 dB higher than the actual power.</p>


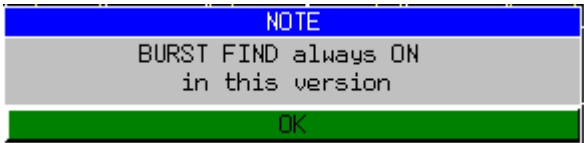
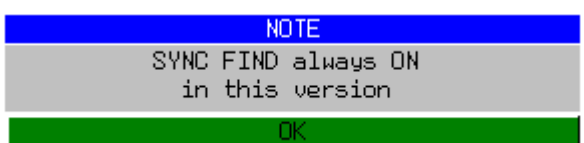
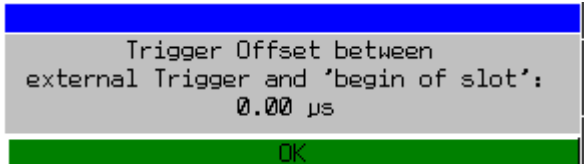
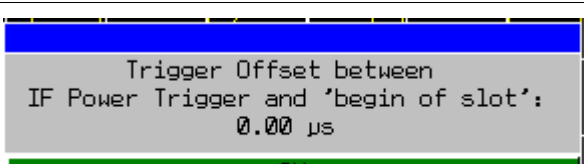
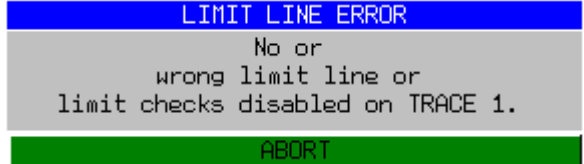
Message	Explanation
	<ul style="list-style-type: none"> - Indicates that the power measured in reference measurement does not correspond to the setting for the reference level (reference level is too low). ➤ Increase the reference level to approx. the value given in the message so that the reference level is about 3 dB higher than the actual power .
	<ul style="list-style-type: none"> - Indicates that the <i>BURST FIND</i> function is always on in this version (see DEMOD SETTINGS).
	<ul style="list-style-type: none"> - Indicates that the <i>SYNC FIND</i> function is always on in this version (see DEMOD SETTINGS).
	<ul style="list-style-type: none"> - Indicates the current setting for the time between the trigger (external) and the start of the slot. ➤ See "Trigger and time references"
	<ul style="list-style-type: none"> - Indicates the current setting for the time between the trigger (IF Power) and the start of the slot ➤ See "Trigger and time references"
	<ul style="list-style-type: none"> - Indicates that an expected limit line was not found or is incorrect ➤ Use the <i>RESTORE GSM LIMITS</i> softkey to restore the original GSM MS limit lines, correct the limit line or switch on the Limit Checks on <i>TRACE 1</i>.

Table of Contents - Measurements

2 Measurements with Application Firmware FS-K5 (GSM Mobile Station Tests) 2.1

The GSM-MS Hotkey	2.1
Menu Overview	2.2
Selecting default settings	2.3
External reference frequency	2.3
<i>GENERAL SETTINGS</i> menu	2.3
<i>DEMOD SETTINGS</i> menu	2.7
Restoring the limit lines –RESTORE GSM LINES softkey.....	2.10
Setting the transmit channel.....	2.11
Measurement of modulation accuracy of EDGE signals	2.12
Requirements for the measuring signal.....	2.12
Quick reference guide	2.12
Measurement.....	2.13
Test hints	2.15
Number of bursts to be measured - <i>NO OF BURSTS</i>	2.15
Measuring with slow frequency hopping	2.15
Additional information	2.16
Availability of FSP keys and softkeys.....	2.17
Measurement of phase and frequency error	2.18
Requirements for the measuring signal.....	2.18
Quick reference guide	2.18
Measurement.....	2.19
Test hints	2.21
Number of bursts to be measured - <i>NO OF BURSTS</i>	2.21
Measuring with slow frequency hopping	2.21
Additional information	2.22
Availability of FSP keys and softkeys.....	2.23
Measurement of carrier power	2.23
Requirements for the measuring signal.....	2.23
Quick reference guide	2.23
Measurement.....	2.24
Test hints	2.25
Number of bursts to be measured -> <i>NO OF BURSTS</i>	2.25
Measuring with slow frequency hopping	2.25
Measurement of individual power control levels and power classes	2.26
Additional information	2.27

Availability of FSP keys and softkeys.....	2.28
Measurement of carrier power versus time	2.29
Requirements for the measuring signal.....	2.29
Quick reference guide	2.29
Measurement.....	2.30
Test hints	2.37
Power measurement with reference to midamble.....	2.37
Measuring with slow frequency hopping	2.38
Number of bursts to be measured -> <i>NO OF BURSTS</i>	2.38
Measurement with maximum dynamic range	2.38
Additional information	2.39
Availability of FSP keys and softkeys.....	2.40
Measurement of spectrum due to modulation.....	2.41
Requirements for the measuring signal.....	2.41
Quick reference guide	2.41
Measurement.....	2.42
Test hints	2.48
Measuring with slow frequency hopping	2.48
Number of bursts to be measured -> <i>NO OF BURSTS</i>	2.48
Additional information	2.49
Availability of FSP keys and softkeys.....	2.51
Measurement of spectrum due to transients.....	2.52
Requirements for the measuring signal.....	2.52
Quick reference guide	2.52
Measurement.....	2.53
Test hints	2.57
Measuring with slow frequency hopping	2.57
Number of bursts to be measured -> <i>NO OF BURSTS</i>	2.57
Additional information	2.58
Availability of FSP keys and softkeys.....	2.60
Measurement of spurious	2.61
Requirements for the measuring signal.....	2.61
Quick reference guide	2.61
Measurement.....	2.62
Test hints	2.63
Number of bursts to be measured -> <i>NO OF BURSTS</i>	2.63
Additional information	2.63
Availability of FSP keys and softkeys.....	2.64

Figures

Figure 2-1	Starting and exiting the application	2.1
Figure 2-2	Overview of menus	2.2
Figure 2-3	Setting trigger offset and reference level with graphic support.....	2.4
Figure 2-4	Measurement of Modulation Accuracy.....	2.14
Figure 2-5	Measurement of phase and frequency error	2.20
Figure 2-6	Measurement of carrier power	2.24
Figure 2-7	PVT measurement – FULL BURST	2.31
Figure 2-8	PVT measurement – RISING EDGE.....	2.32
Figure 2-9	PVT measurement – FALLING EDGE	2.33
Figure 2-10	PVT measurement – TOP HIGH RESOLUTION	2.34
Figure 2-11	Spectrum due to modulation in frequency domain.....	2.43
Figure 2-12	Time domain measurement in progress.....	2.45
Figure 2-13	Results of time domain measurement.....	2.45
Figure 2-14	Spectrum due to transients in frequency domain.....	2.54
Figure 2-15	Time domain measurement in progress	2.55
Figure 2-16	Results of time domain measurement.....	2.56
Figure 2-17	Measurement of spurious.....	2.62

Tables

Table 2-1	Relationship between frequencies and channels.....	2.11
Table 2-2	Power classes	2.26
Table 2-3	Power control levels	2.26
Table 2-4	Power classes	2.37
Table 2-5	Power control level	2.37

2 Measurements with Application Firmware FS-K5 (GSM Mobile Station Tests)

The following measurements are possible with the FS-K5 application firmware

- | | | |
|-------|-----------------------|--|
| • PFE | Phase-frequency error | Measurement of phase and frequency error with synchronization to midamble |
| • MAC | Modulation Accuracy | Measurement of EVM, of 95:th percentile value, origin offset suppression and of frequency error with synchronization to midamble |
| • CPW | ofCarrier power | Measurement of carrier power |
| • PVT | Power versus time | Measurement of carrier power versus time with synchronization to midamble |
| • MOD | Modulation spectrum | Measurement of spectrum due to modulation |
| • TRA | Transient spectrum | Measurement of spectrum due to transients |
| • SPU | Spurious | Measurement of spurious |

Midamble: A standard midamble or an user defined midamble can be selected.

The GSM-MS Hotkey

Pressing the *GSM-MS* hotkey calls the application. A menu compliant with the applicable standards is displayed, with a measurement assigned to each softkey. The *GENERAL SETTINGS* and *DEMOD SETTINGS* contain the functions for setting default values.

There are **two** situations in which the *GSM-MS* hotkey can be pressed:

- 1) The GSM-MS mode is **not** active, the *GSM-MS* hotkey has a grey background:
 - Pressing the *GSM-MS* hotkey starts the GSM-MS application and opens the main menu of the FS-K5.
At the same time the display changes to Zero Span and the trigger changes to the GSM trigger.
- 2) The GSM-MS mode is active, the *GSM-MS* hotkey has a green background:
 - Pressing the *GSM-MS* hotkey opens the FS-K5 main menu.
The measurements continue. All user-modified parameter settings are retained.


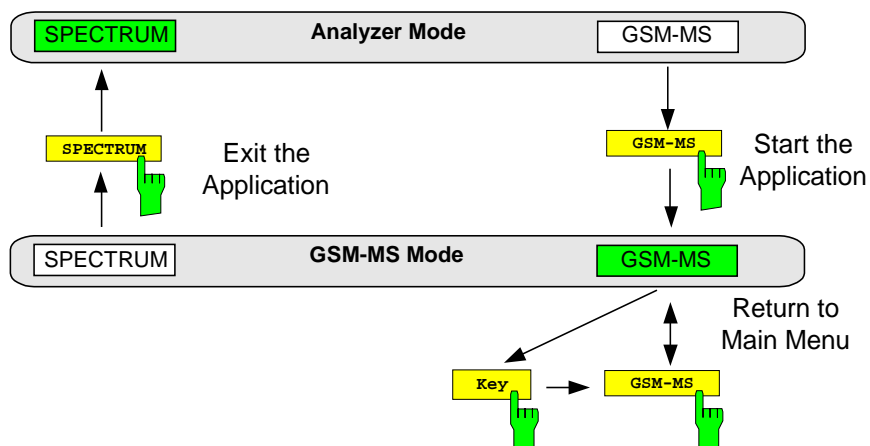


Figure 2-1 Starting and exiting the application

Menu Overview

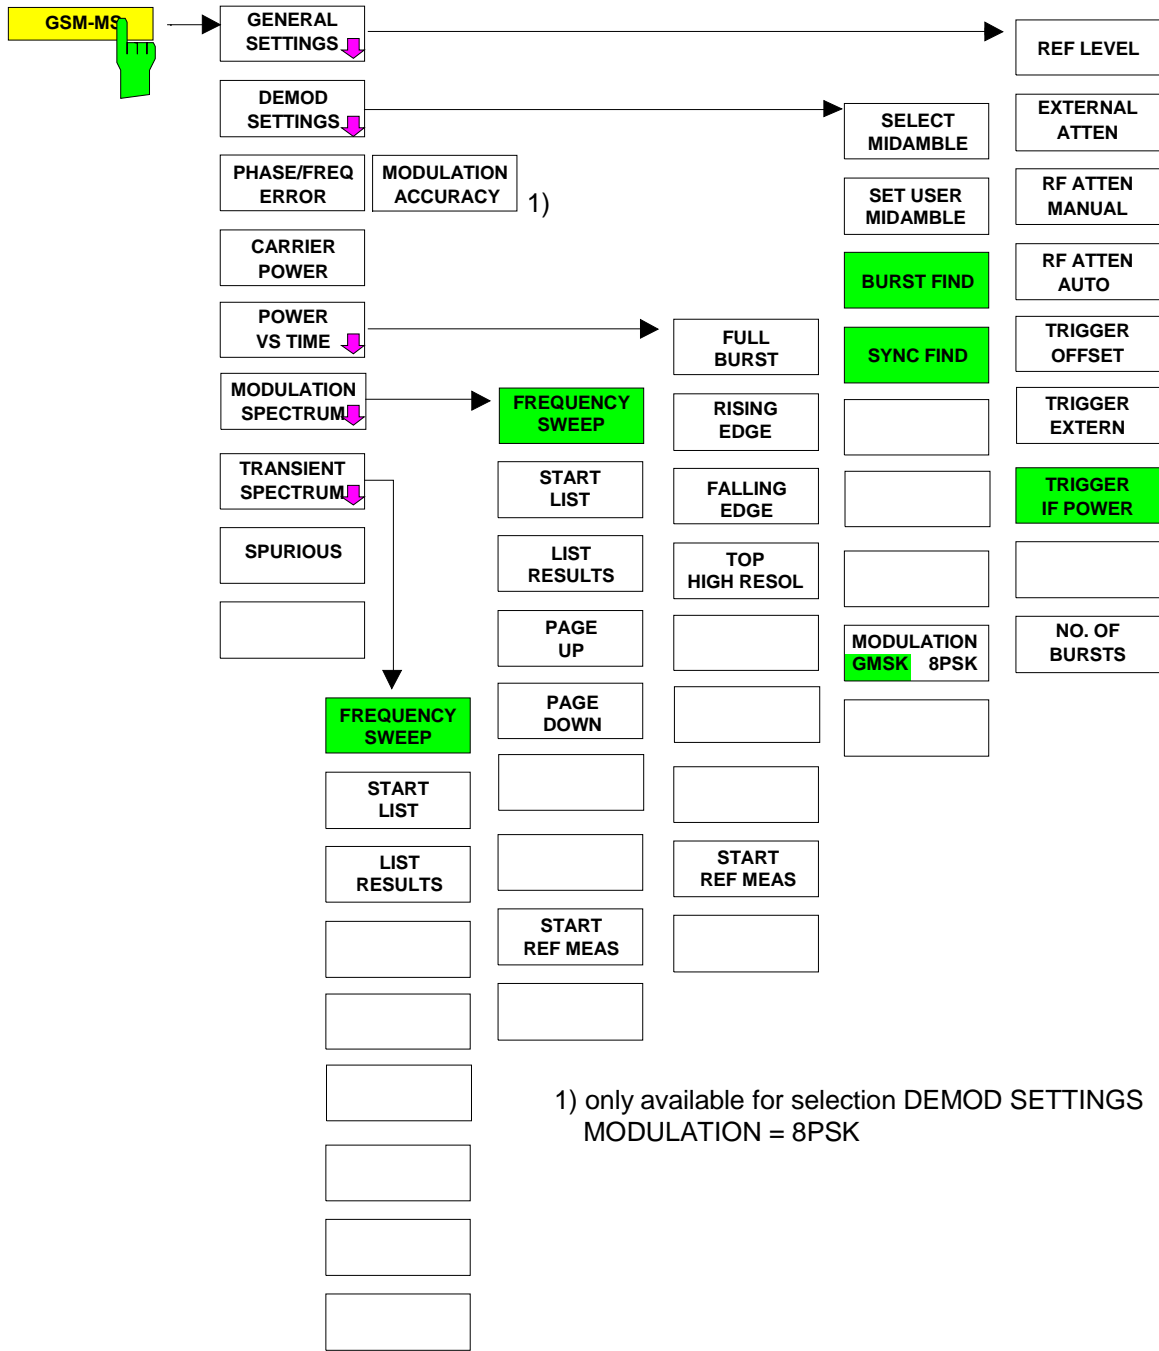

1) only available for selection DEMOD SETTINGS
MODULATION = 8PSK

Figure 2-2 Overview of menus

Selecting default settings


External reference frequency

Depending on whether or not the mobile station can be set to a service mode or whether another device (CMD, CMU) "calls" the mobile, it may be necessary to synchronize the reference frequencies of the devices in use.

This is particularly important before measuring the phase/frequency error or the carrier power.

The procedure for switching to an external reference frequency is the same as in the basic FSP unit.

SETUP menu:



Press the *REFERENCE INT / EXT* softkey to toggle between the internal and the external reference sources.


Notes: *If you toggle to external reference and the reference signal is not present, the word "EXREF" is displayed to indicate that synchronization has not been achieved.*

When switching to the internal reference, it is important to ensure that the external reference signal has been disconnected, in order to avoid undesirable interaction with the internal reference signal.

IEC/IEEE bus command: ROSC:SOUR INT

GENERAL SETTINGS menu

GSM MS menu

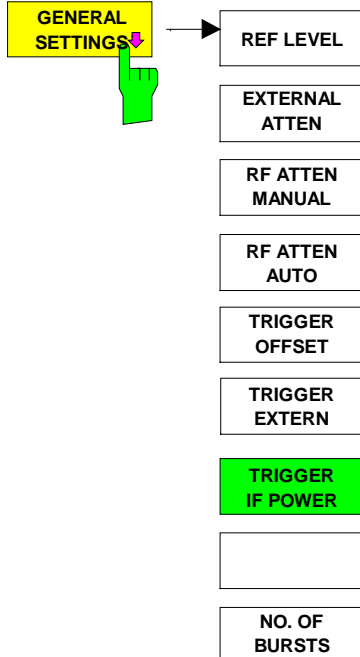

Pressing the *GENERAL SETTINGS* softkey opens a submenu for setting the major parameters of the GSM mobile station tests application.

When you open this menu the burst mask is displayed, offering graphic support for setting the reference level and the trigger offset. The burst mask corresponds to the PVT limit lines. In order for measurement to be correct, the GSM signal burst must be positioned between these lines (see Figure 2-3 and the descriptions of the *REF LEVEL* and *TRIGGER OFFSET* softkeys).

This submenu offers the only opportunity of setting the reference level (*REF LEVEL*) and the trigger settings for the application with graphic support.


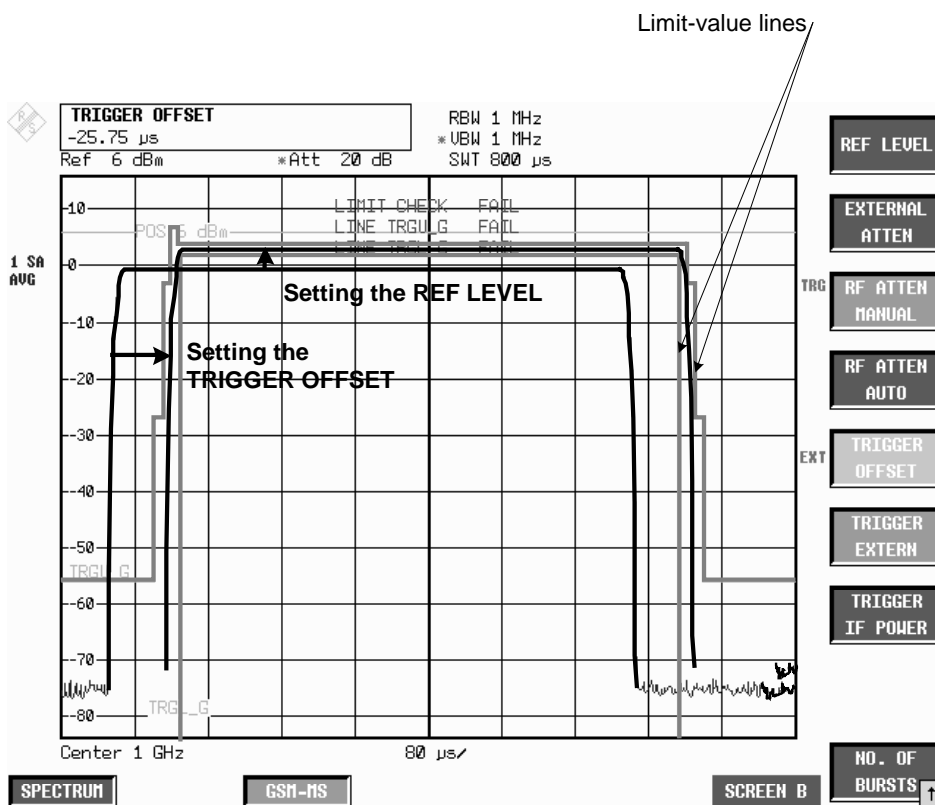


Figure 2-3 Setting trigger offset and reference level with graphic support



Press the *REF LEVEL* softkey to activate input of the reference level.

You can adjust the reference level graphically by turning the spinwheel so that the useful part of the burst is between the two horizontal limit lines.

Graphic adjustment takes into account the fact that the reference level must be approx. 3 dB higher than the power of the mobile station. This is the reason why the burst mask is 3 dB below the reference level. This protects the analyzer against overload.

In all other respects the effect of the softkey is the same as that of the *REF LEVEL* in the *AMPT* menu of the *FSP* in the Analyzer mode.

IEC/IEEE bus command `DISP:TRAC2:Y:RLEV -130dBm to 30dBm`



Press the *EXTERNAL ATTEN* softkey to activate input of external attenuation.

The attenuation is taken into account when the level reading is corrected. All measured levels and the gradations on the Y axis of the measured-value diagram are shifted by the selected correction value.

The effect of the softkey is the same as that of entering a level offset with the *REF LEVEL OFFSET* softkey in the *AMPT* menu of the *FSP* in the Analyzer mode.

IEC/IEEE bus command `DISP:TRAC2:Y:RLEV:OFFS <num_value>`

RF ATTEN
MANUAL

Press the *RF ATTEN MANUAL* softkey to activate input of internal attenuation. The automatic coupling of attenuation and reference level is cancelled.

The effect of the softkey is the same as that of the *RF ATTEN MANUAL* softkey in the *AMPT* menu of the FSP in the Analyzer mode.

Use the keypad of the FSP to set the internal attenuation to 0 dB. For safety reasons, you cannot use the spinwheel for this setting.

Warning:

*The maximum direct voltage for FSP3 and FSP7 is 50 V, maximum power is 1 W ($\hat{=}$ 30 dBm) at ≥ 10 dB attenuation.
The maximum direct voltage for FSP13 and FSP30 is 0 V, maximum power is 1 W ($\hat{=}$ 30 dBm) at ≥ 10 dB attenuation.*

IEC/IEEE bus command `INP:ATT 0 to 70/75dB (without/with FSP-B25)`

RF ATTEN
AUTO

Press the *RF ATTEN AUTO* softkey to switch on automatic coupling of attenuation and reference level.

The effect of the softkey is the same as that of the *RF ATTEN AUTO* softkey in the *AMPT* menu of the FSP in the Analyzer mode, except for the fact that the wanted mixer level is not -30 dBm but -10 dBm.

IEC/IEEE bus command `INPut<l>:ATTenuation:AUTO ON`

TRIGGER
OFFSET

Press the *TRIGGER OFFSET* softkey to activate input of the trigger offset (time between trigger and start of display).

You can adjust the trigger offset graphically by turning the spinwheel so that the burst is within the vertical limit lines (see Figure 2-3).


A trigger-offset value is saved for the external GSM trigger and another for the GSM trigger IF Power. This means:

When GSM-Trigger Extern is active, you can press the *TRIGGER OFFSET* softkey to set the offset of the external trigger.


When GSM-Trigger IF Power is active, you can press the *TRIGGER OFFSET* softkey to set the offset of the IF Power trigger.

When you change the trigger, the offset belonging to the trigger is activated at the same time.

When you exit the trigger-offset function, a status window appears showing the GSM trigger offset (time between trigger and start of slot) needed for remote control. The time references are described in Chapter 1, "Trigger options".

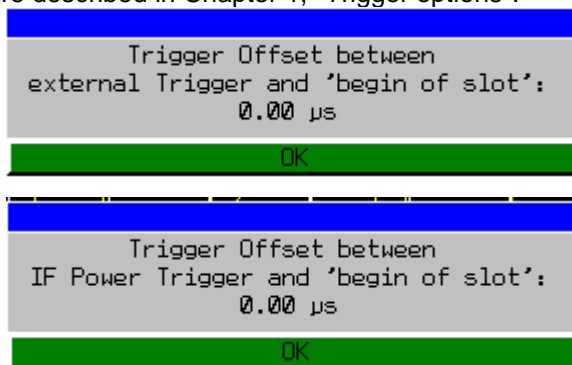

Note: The values determined here for the GSM trigger offset must be specified in remote-control mode for correct synchronization with the `TRIGGER[:SEQUENCE]:SYNChronize:ADJust:EXTErnal` or `TRIGGER[:SEQUENCE]:SYNChronize:ADJust:IFPower` commands.
IEC/IEEE bus command-- (the GSM trigger offset must be specified in remote-control mode)




Press the `TRIGGER EXTERN` softkey to switch on the external GSM trigger.

Triggering is either by an external trigger (PFE, CPW, PVT, MOD) or by a free-running trigger (TRA, SPU), see Chapter 1, "Trigger options".

When the external trigger is used triggering is by a TTL signal at the `EXT TRIGGER/GATE` input at the rear of the device.

Note: In remote-control mode the GSM trigger offset has to be entered at the same time as the GSM trigger is selected.

IEC/IEEE bus command `TRIG:SYNC:ADJ:EXT -460µs to 100s`



Press the `TRIGGER IF POWER` softkey to switch on the IF Power GSM trigger and activates the input for the IF trigger level.

Triggering is either by the IF Power trigger (CPW, MOD) or by a free-running trigger (PFE, PVT, TRA, SPU), see Chapter 1, "Trigger options".


When the IF Power trigger is used, triggering is by signals in a bandwidth of approx. 5 MHz around the center frequency, where they exceed an adjustable level value.

To this end, the FSP employs a level detector on the second intermediate frequency. This threshold can be adjusted and is preset to approx. -20 dBm of the level at the input connector (for detailed description see manual of basic instrument).

The bandwidth on the intermediate frequency is 10 MHz. Triggering occurs when the trigger threshold is exceeded within 5 MHz of the defined frequency (= start frequency in frequency sweep).

Note: In remote-control mode the GSM trigger offset has to be entered at the same time as the GSM trigger is selected.

IEC/IEEE bus command `TRIG:SYNC:ADJ:IFP -460µs to 100s`




Press the `NO. OF BURSTS` softkey to activate input of the number of bursts to be taken into account in calculation.

The effect of the softkey is the same as that of the `SWEEP COUNT` softkey in the `SWEEP` menu of the FSP in the Analyzer mode.

IEC/IEEE bus command `SENS:SWEep:COUNT 0 to 32767`


DEMOD SETTINGS menu

GSM MS menu:

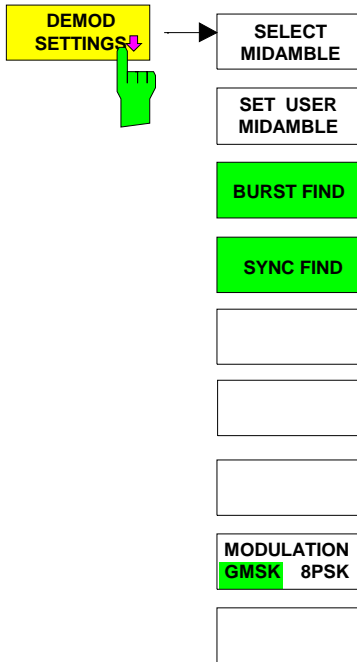

Pressing the *DEMOD SETTINGS* softkey opens a submenu for setting the major parameters of the demodulator in the GSM MS application.


These parameters cannot be set in the Analyzer mode of the FSP.



Press the *SELECT MIDAMBLE* softkey to open a picklist for selecting the midamble.

Use this softkey to specify the midamble to be used for GSM measurements with demodulation (PFE and PVT).

The user has a choice of 8 standard training sequences or an user defined training sequence (TSC_USER).

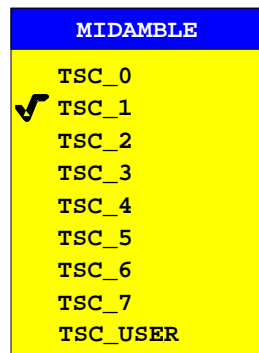

TSC bit pattern for GMSK

NAME	PATTERN (Bit no.: 61 - 86)	HexCode
TSC_0	00 1001 0111 0000 1000 1001 0111	x0970897
TSC_1	00 1011 0111 0111 1000 1011 0111	x0b778b7
TSC_2	01 0000 1110 1110 1001 0000 1110	x10ee90e
TSC_3	01 0001 1110 1101 0001 0001 1110	x11ed11e
TSC_4	00 0110 1011 1001 0000 0110 1011	x06b906b
TSC_5	01 0011 1010 1100 0001 0011 1010	x13ac13a
TSC_6	10 1001 1111 0110 0010 1001 1111	x29f629f
TSC_7	11 1011 1100 0100 1011 1011 1100	x3bc4bbc

TSC bit pattern for EDGE

NAME	PATTERN (Bit no.: 61 - 86)
TSC0	001001 111001001111 001111111111 001001001001 111001001001 111001001111 001111111111
TSC1	001001 111001111111 001111111111 001111111111 111001001001 111001111111 001111111111
TSC2	001111 001001001001 111111111001 111111111001 111001001111 001001001001 111111111001
TSC3	001111 001001001111 111111111001 111111001111 001001001111 001001001111 111111111001
TSC4	001001 001111111001 111001111111 111001001111 001001001001 001111111001 111001111111
TSC5	001111 001001111111 111001111001 111111001001 001001001111 001001111111 111001111001
TSC6	111001 111001001111 111111111111 001111111001 001001111001 111001001111 111111111111
TSC7	111111 111001111111 11111001001 001111001001 111001111111 111001111111 11111001001

The bit pattern for EDGE results from the symbol pattern for EDGE using the following transformation:

SYMBOL	PATTERN
0	111
1	011
2	010
3	000
4	001
5	101
6	100
7	110

IEC/IEEE bus command `CONFigure:CHANnel:TSC 0...7 | USER`



The *SET USER MIDAMBLE* softkey activates the input of an user specific midamble.

The midamble is entered bit by bit (GMSK: 1bit/symbol, 8PSK: 3 bits/symbol). The only admissable values are 1 and 0. Values other than 0 or 1 are set to 1.

Input fields that are not completely filled are filled with 0, inputs that are too long are cut off. If this is the case, a message appears that has to be confirmed by means of ENTER.

The midamble for EDGE (8PSK) is entered in two successive fields. The first 40 bits are entered in the first field, the remaining 38 bits in the second field. If the input of data into the second field is aborted by means of ESC/CANCEL, the data in the first field are nevertheless accepted by the instrument.

The user midamble is stored separately for each modulation type. It is set to 0 only when the instrument is switched off or when PRESET is activated.

IEC/IEEE bus command `CONFigure:CHANnel:TSC:USER <string>`

BURST FIND




Press the *BURST FIND* softkey to see whether the BURST FIND mode is active.

When this mode is active, the GSM MS measurement software presumes that a burst has been found. A burst is considered found when the burst level is greater than half of the maximum burst level in a frame.

The burst length must moreover be between 140 and 170 symbols.

The BURST FIND mode is always active. A message box brings this to the user's attention.

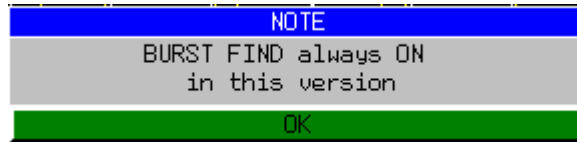

IEC/IEEE bus command -


SYNC FIND



Press the *SYNC FIND* softkey to see whether the SYNC FIND mode is active.

When this mode is active, the GSM MS measurement software presumes that the midamble found corresponds to the preset TSC.

The SYNC FIND mode is always active. A message box brings this to the user's attention.

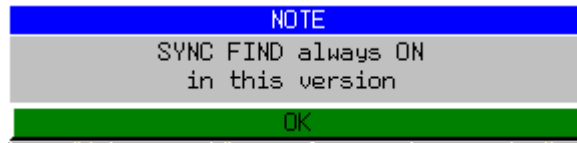

IEC/IEEE bus command -

MODULATION

GMSK 8PSK



The *MODULATION GMSK / 8PSK* softkey selects the modulation type. The limit lines are adapted to the selected modulation type upon switchover.

IEC/IEEE bus command `CONFigure:MTYPE GMSK | EDGE`

Restoring the limit lines –RESTORE GSM LINES softkey

LINES menu



Press the *RESTORE GSM LINES* softkey to reset all the limit lines of the GSM MS application to their default values.

This softkey appears in the LINES menu of the FSP as soon as the GSM-MS application is enabled.

Users have the option of adjusting the limit lines to suit their purposes. These custom settings are retained in a preset. They are not overwritten until the user explicitly presses the *RESTORE GSM LINES* softkey.

User-defined limit lines can be protected against being overwritten when the *RESTORE GSM LINES* softkey is pressed by assigning them names other than those of the GSM MS limit lines.

IEC/IEEE bus command `CONFigure:RESTore`

Note: *In remote-control mode the names of the limit lines are predefined and cannot be changed. Users must assign the limit lines these names before using them:*

Example:

```
CALCulate1:LIMit1:NAME 'PVTU_G'
```

where PVT = measurement (PVT / CPW / MOD /TRA)

 U = Upper limit line (Upper / Lower)

 _G = modulation type (GMSK / EEDGE)

Setting the transmit channel

The operating frequency is defined - as usual in FSP – by pressing the *FREQ* key.



Press the *FREQ* key to open the box for manual input of the center frequency.

IEC/IEEE bus command `FREQ:CENT 100MHz`

The relationships between channel number and frequency as specified in the standards are shown below.

Table 2-1 Relationship between frequencies and channels

P-GSM 900	$F_l(n) = 890 + 0.2 \cdot n$	$1 \leq n \leq 124$	$F_u(n) = F_l(n) + 45$
E-GSM 900	$F_l(n) = 890 + 0.2 \cdot n$	$0 \leq n \leq 124$	$F_u(n) = F_l(n) + 45$
	$F_l(n) = 890 + 0.2 \cdot (n-1024)$	$975 \leq n \leq 1023$	
R-GSM 900	$F_l(n) = 890 + 0.2 \cdot n$	$0 \leq n \leq 124$	$F_u(n) = F_l(n) + 45$
	$F_l(n) = 890 + 0.2 \cdot (n-1024)$	$955 \leq n \leq 1023$	
DCS 1 800	$F_l(n) = 1710.2 + 0.2 \cdot (n-512)$	$512 \leq n \leq 885$	$F_u(n) = F_l(n) + 95$
PCS 1 900	$F_l(n) = 1850.2 + .2 \cdot (n-512)$	$512 \leq n \leq 810$	$F_u(n) = F_l(n) + 80$

P-GSM 900	890.2MHz				914.8MHz	FREQ ARFCN
	1				124	
E-GSM 900	880.2MHz	889.8	890	890.2	914.8MHz	FREQ ARFCN
	975	1023	0	1	124	
R-GSM 900	876.2MHz	889.8	890	890.2	914.8MHz	FREQ ARFCN
	955	1023	0	1	124	
DCS 1800	1710.2MHz				1784.8MHz	FREQ ARFCN
	512				885	
PCS 1900	1850.2MHz				1909.8MHz	FREQ ARFCN
	512				810	

Measurement of modulation accuracy of EDGE signals

The modulation accuracy of 8PSK modulated signals is characterized by the following quantities:

Error vector magnitude (EVM)	The error vector magnitude is the magnitude of the error vector that links the measured I and Q values at the complex level to the ideal I and Q values at the decision points. During the measurement the EVM of each of the 142 stipulated symbols of a normal burst is determined, displayed and compared to the limit values according to GSM 05.05 and GSM 11.21. The RMS value and the peak EVM are evaluated.
Origin offset suppression	The origin offset suppression or the IQ offset is indicated as a measure of carrier suppression. According to the standard this value is given in dB.
95 th percentile	The 95:th-percentile is the statistical value that describes how many EVM values are below a specific EVM limit.
Frequency error	The frequency error is the difference between the measured frequencies from the expected frequencies. The frequency error is computed from the phase of the symbols in accordance with the standards; this frequency error is also displayed.

Requirements for the measuring signal

- At least one slot must be active and isolated, because this is the only way of reliably detecting a burst (irrespective of edge steepness)
- Sync sequence must be present in the timeslot to be measured


Quick reference guide

Without explaining them, the quick reference guide presents the settings required for measurement in a practical sequence. The precondition for the procedure as described here is that the presets are activated (*PRESET* key) before the procedure starts.

Setting	Operation
Set frequency	<i>FREQ</i> key
Start application	<i>GSM-MS</i> hotkey
Select modulation type 8PSK	Softkey <i>DEMODO SETTINGS</i> Softkey <i>MODULATION 8PSK</i>
Set midamble Default: TSC0	<i>DEMODO SETTINGS</i> softkey <i>SELECT MIDAMBLE</i> softkey
Select GSM trigger Default: IF Power	<i>TRIGGER EXTERN</i> or <i>IF POWER</i> softkey
Fine-tune level to within approx. 3 dB	<i>REF LEVEL</i> softkey → Position burst in mask
Start measurement	Hotkey <i>PREV</i> Softkey <i>MODULATION ACCURACY</i>

Measurement

GSM MS menu



The *MODULATION ACCURACY* softkey starts the measurement of the modulation accuracy in accordance with the standard (see Figure 2-4).

The overview of the numeric modulation errors is shown on the screen. The error is calculated over the 147 useful bits without tail bits (ie over 142 symbols).

The EMV value of each symbol is calculated and displayed as trace. The following values are then calculated and displayed:

PEAK HLD: Peak value of the EVM, calculated over 142 bits * *NO OF BURSTS*.

PEAK AVG: Average of the PEAK HLD value across the number of bursts defined by *NO OF BURSTS*.

RMS HLD: Maximum value of the RMS value of EVM, calculated over 142 bits * *NO OF BURSTS*.

RMS AVG: Average of the RMS HLD value across the number of bursts defined by *NO OF BURSTS*.

FREQ HLD: Peak value of the magnitude of the frequency error, calculated over 142 bits * *NO OF BURSTS*.

FREQ AVG: Average of the frequency error across the number of bursts defined by *NO OF BURSTS*.

OOS HLD: Peak value of the Origin Offset Suppression, calculated over 142 bits * *NO OF BURSTS*.

OOS AVG: Average of the Origin Offset Suppression HLD value across the number of bursts defined by *NO OF BURSTS*.

PERC HLD: Peak value of the 95:th percentile value, calculated over 142 bits * *NO OF BURSTS*.

PERC AVG: Average of the PERC HLD value across the number of bursts defined by *NO OF BURSTS*.

These readings can be switched on and off in **MEAS / TIME DOM POWER**.

The EVM value versus time within the 142 bits of the normal burst is shown in the measuring window. Three traces are displayed simultaneously:

Trace No. 1: Clear Write; Trace No. 2: Max Hold; Trace No. 3: Min Hold

The midamble selected in **DEMOD SETTINGS / SELECT MIDAMBLE** is used for synchronization.

```
IEC/IEEE bus commands      INSTRument[:SElect] MGSM
                           CONFigure:MTYPe EDGE
                           CONFigure:BURSt:MACCuracy[:IMMediate]
                           SWEEp:COUNT 20
                           INITiate:IMMediate; *WAI
```

```
Result queries:  FETCh:BURSt:MACCuracy:RMS:AVERage?
                  FETCh:BURSt:MACCuracy:RMS:MAXimum?
                  FETCh:BURSt:MACCuracy:PEAK:AVERage?
                  FETCh:BURSt:MACCuracy:PEAK:MAXimum?
                  FETCh:BURSt:MACCuracy:OSUPress:AVERage?
                  FETCh:BURSt:MACCuracy:OSUPress:MAXimum?
                  FETCh:BURSt:MACCuracy:PERCentile:AVERage?
                  FETCh:BURSt:MACCuracy:PERCentile:MAXimum?
                  FETCh:BURSt:MACCuracy:FREQuency:AVERage?
                  FETCh:BURSt:MACCuracy:FREQuency:MAXimum?
```


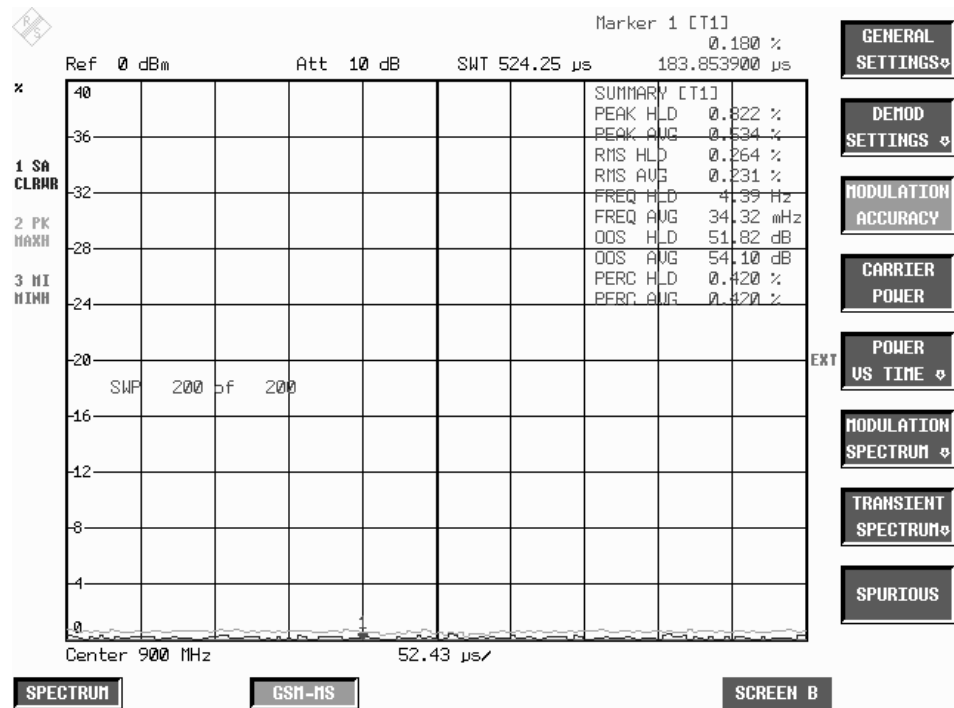


Figure 2-4 Measurement of Modulation Accuracy



Press the *SPECTRUM* hotkey to launch the Analyzer mode. The following settings are changed automatically; all other settings are taken from the GSM MS mode:

Span = ZERO SPAN

RBW = 300 kHz

Trigger = GSM trigger, i.e.

IF Power, assuming IF-Power was set

External trigger, assuming Extern was set

IEC/IEEE bus command

INSTRUMENT[:SElect] SANalyzer

Test hints

Number of bursts to be measured - *NO OF BURSTS*

The default setting when you launch the application is *NO OF BURSTS* (= *SWEEP COUNT*) = 0.

This setting produces a floating average over every 10 bursts (see FSP manual). You can change *NO OF BURSTS* if you want to measure across a different number of bursts (e.g. 200).

The settings for *NO OF BURSTS* / *SWEEP COUNT* apply to all measurements (they are not measurement-specific, in other words).

You also have the option of using *SINGLE* or *CONTINUOUS SWEEP MODE* in the same way as in the Analyzer mode.

Measuring with slow frequency hopping

This mode can be used to measure a mobile with slow frequency hopping, because errors are computed only in the bursts in which the midamble was correctly recognized. When the carrier hops, therefore, the only bursts measured are those whose frequency corresponds to the preset center frequency.

Additional information

MAC measurement requires a time reference to the midamble (TSC 0 to 7 or user midamble). The IF signal is digitized, demodulated and processed (IQ mode) for this measurement.

Parameter	Setting	Note
MODE	IQ mode	FS-K5-specific internal mode for demodulation
SWEEP MODE	CONT under local control SINGLE under remote control	
RBW	Analog prefilter with 3 MHz 600 kHz filter	
VBW	-	Irrelevant in IQ mode
Symbol rate	270.833 kbit/s	
Oversampling	4	
Sampling Length	1600 * 4 = 6400	Number of samples to be recorded = symbols * oversampling
Bits per Symbol	1	Number of bits describing a symbol, constant for GSM measurements
Receiver Filter	Gauss mit BT = 0,3	Constant for GSM measurement
BURST FIND	ON	Burst find is active
SYNC FIND	ON	Sync find is active
PFE Result Length	142	Number of symbols shown
PFE Sync Mid Offset	0	Offset in symbols of the midamble from the center of the screen.
Teilung der Y-Achse	0 to 40 %, linear, a grid line every 4 % (10 lines)	Trace shows t EVM (Error Vector Magnitude)
TRACE 1	CLEAR WRITE	Trace shows EVM (Error Vector Magnitude)
DETECTOR 1	SAMPLE	
TRACE 2	MAX HOLD	
DETECTOR 2	MAX PEAK	
TRACE 3	MIN HOLD	
DETECTOR 3	MIN PEAK	
LIMIT LINE	None	
LIMIT CHECK	-	

Availability of FSP keys and softkeys

Parameter	Availability	Note
All BW parameters (BW menu)	Not available	
Amplitude distribution (SIGNAL STATISTICS)	Function not available	
Trigger (VIDEO, IF POWER, EXTERN, FREE RUN, RF POWER)	Function not available	The GSM trigger settings are used
Gated sweep mode (GATED TRIGGER, GATE SETTINGS)	Function not available	
Start frequency (START)	Function not available	Measurement is in time domain
Stop frequency (STOP)	Function not available	Measurement is in time domain
Span parameters (SPAN, FULL/ZERO/LAST SPAN)	Function not available	Measurement is in time domain
Step width of center frequency coupled to resolution bandwidth (AUTO X x RBW)	Function not available	Step width of the center frequency is switched to manual, value 2 kHz
Level reading (REF LEVEL, RANGE LOG/MANUAL/ LINEAR, REF LEVEL POSITION, GRID ABS/REL)	Function not available	Instead of showing the level, Y axis shows phase angle in DEG
Frequency counters (SIGNAL COUNT, COUNTER RESOLUTION)	Function not available	
Reference Fixed-Marker (REFERENCE FIXED menu)	Function not available	
Noise measurement (NOISE MEAS)	Function not available	
Measurement of phase noise (PHASE NOISE menu)	Function not available	
Set reference level to current marker value (REF LEVEL = MKR LEVEL)	Function not available	Instead of showing the level, Y axis shows phase angle in DEG
Quasipeak, autopeak detectors (DETECTOR AUTO PEAK, DETECTOR QPK)	Function not available	
On-screen presentation (SPLIT SCREEN, REF LEVEL COUPLED, CENTER A = MARKER B, CENTER B = MARKER A, SCREEN B,)	Function not available	
Time domain measurement – determine reference values (SET REFERENCE)	Function not available	Unit in DEG
Time domain measurement – select power measurement (POWER ABS/REL)	Function not available	Unit in DEG
Time domain measurement – set standard deviation (STANDARD DEVIATION)	Function not available	Unit in DEG
Unit (UNIT menu)	Function not available	
Create limit lines (NEW LIMIT LINE)	Function not available	There are no limit lines with the DEG unit

Measurement of phase and frequency error

This measurement is used to determine the accuracy of the phase of each of the 147 useful bits and show the RMS phase error across the useful bits and the maximum phase error in accordance with GSM 05.05 and GSM 11.10 for modulation type GMSK.

The frequency error is computed from the phase of the symbols in accordance with the standards; this frequency error is also displayed.

Requirements for the measuring signal

- At least one slot must be active and isolated, because this is the only way of reliably detecting a burst (irrespective of edge steepness)
- Sync sequence must be present in the timeslot to be measured


Quick reference guide

Without explaining them, the quick reference guide presents the settings required for measurement in a practical sequence. The precondition for the procedure as described here is that the presets are activated (*PRESET* key) before the procedure starts.

Setting	Operation
Set frequency	<i>FREQ</i> key
Start application	<i>GSM-MS</i> hotkey
Select GSM trigger Default: <i>IF Power</i>	<i>TRIGGER EXTERN</i> or <i>IF POWER</i> softkey
Fine-tune level to within approx. 3 dB	<i>REF LEVEL</i> softkey → Position burst in mask
Set midamble Default: <i>TSC0</i>	<i>DEMOD SETTINGS</i> softkey <i>SELECT MIDAMBLE</i> softkey
Start measurement	<i>PREV</i> hotkey <i>PHASE/FREQ ERROR</i> softkey

Measurement

GSM MS menu



The *PHASE/FREQ ERROR* softkey starts the measurement of the phase and frequency error in accordance with the standard (see Figure 2-5).

The overview of the numeric modulation errors is shown on the screen. The error is calculated over the 147 useful bits.

The amount of the phase error for each of the 147 symbols is calculated. The following values are then calculated and displayed:

PEAK HLD: Peak value of the magnitude of the phase error, calculated over 147 useful bits * *NO OF BURSTS*

PEAK AVG: Average of the MAX HOLD value across the number of bursts defined by *NO OF BURSTS*

RMS HLD: Maximum value of the RMS phase error, calculated over 147 useful bits * *NO OF BURSTS*

RMS AVG: Average of the RMS HLD value across the number of bursts defined by *NO OF BURSTS*

FREQ HLD: Peak value of the magnitude of the frequency error, calculated over 147 useful bits * *NO OF BURSTS*

FREQ AVG: Average of the frequency error across the number of bursts defined by *NO OF BURSTS*

These readings can be switched on and off in **MEAS / TIME DOM POWER**.

The phase error versus time within the 147 useful bits of the normal burst is shown in the measuring window. Three traces are displayed simultaneously:

Trace No. 1: Clear Write

Trace No. 2: Max Hold

Trace No. 3: Min Hold

The midamble selected in **DEMOD SETTINGS / SELECT MIDAMBLE** is used for synchronization.

IEC/IEEE bus commands

```
INSTRument[:SElect] MGSM
CONFIgure:MTYPE GSMK
CONFIgure:BURSt:PFERror[:IMMediate]
SWEep:COUNT 20
INITiate:IMMediate; *WAI
```

Result queries:

```
FETCh: BURSt: PERRor: RMS: AVERage?
FETCh: BURSt: PERRor: RMS: MAXimum?
FETCh: BURSt: PERRor: PEAK: AVERage?
FETCh: BURSt: PERRor: PEAK: MAXimum?
FETCh: BURSt: FERRor: AVERage?
FETCh: BURSt: FERRor: MAXimum?
```


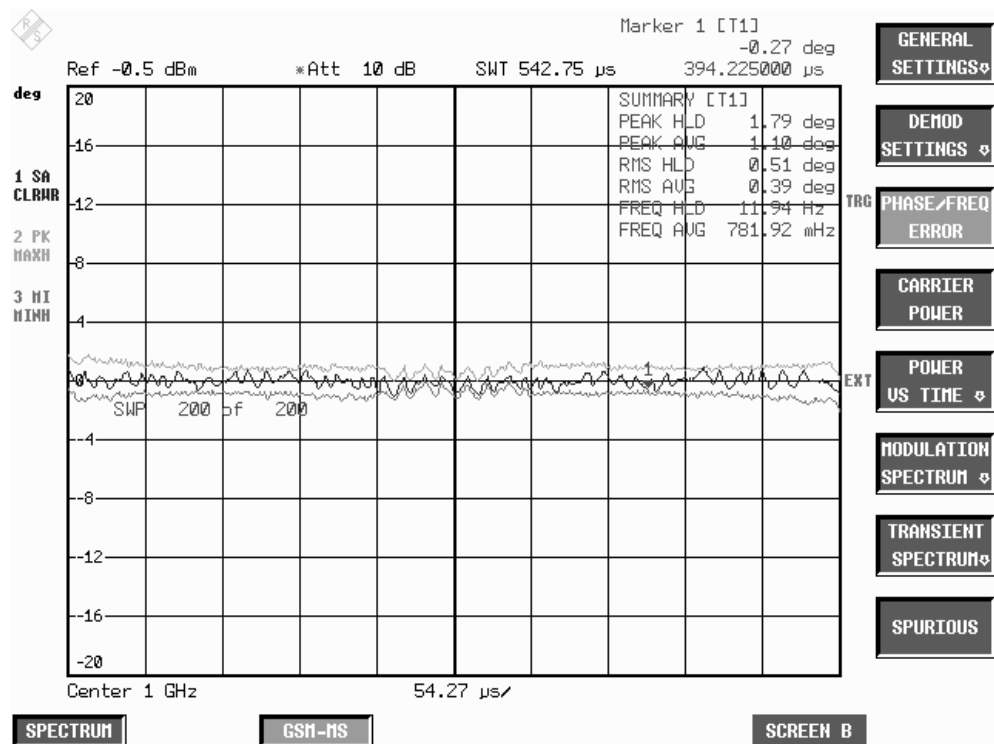


Figure 2-5 Measurement of phase and frequency error



Press the *SPECTRUM* hotkey to launch the Analyzer mode. The following settings are changed automatically; all other settings are taken from the GSM MS mode:

- Span = ZERO SPAN
- RBW = 300 kHz
- Trigger = GSM trigger, i.e. IF Power, assuming IF-Power was set
- External trigger, assuming Extern was set
- IEC/IEEE bus command INSTRUMENT[:SElect] SANalyzer

Test hints

Number of bursts to be measured - *NO OF BURSTS*

The default setting when you launch the application is *NO OF BURSTS* (= *SWEEP COUNT*) = 0. This setting produces a floating average over every 10 bursts (see FSP manual). You can change *NO OF BURSTS* if you want to measure across a different number of bursts (e.g. 200). The settings for *NO OF BURSTS* / *SWEEP COUNT* apply to all measurements (they are not measurement-specific, in other words).

You also have the option of using *SINGLE* or *CONTINUOUS SWEEP MODE* in the same way as in the Analyzer mode.

Measuring with slow frequency hopping

This mode can be used to measure a mobile with slow frequency hopping, because errors are computed only in the bursts in which the midamble was correctly recognized. When the carrier hops, therefore, the only bursts measured are those whose frequency corresponds to the preset center frequency.

Additional information

PFE measurement requires a time reference to the midamble (TSC 0 to 7 or user midamble). The IF signal is digitized, demodulated and processed (IQ mode) for this measurement.

Parameter	Setting	Note
MODE	IQ mode	FS-K5-specific internal mode for demodulation
SWEEP MODE	CONT under local control SINGLE under remote control	
RBW	Analog prefilter with 3 MHz 600 kHz filter	
VBW	-	Irrelevant in IQ mode
Symbol rate	270.833 kbit/s	
Oversampling	4	
Sampling Length	1600 * 4 = 6400	Number of samples to be recorded = symbols * oversampling
Bits per Symbol	1	Number of bits describing a symbol, constant for GSM measurements
Receiver Filter	Gauss with BT = 0.3	Constant for GSM measurement
BURST FIND	ON	Burst find is active
SYNC FIND	ON	Sync find is active
PVT Result Length	147	Number of symbols shown
PVT Sync Mid Offset	0	Offset in symbols of the midamble from the center of the screen.
Y axis pitch	-20 to +20 degrees linear, a grid line every 4 degrees	Trace shows phase versus time
TRACE 1	CLEAR WRITE	Trace shows phase versus time
DETECTOR 1	SAMPLE	
TRACE 2	MAX HOLD	
DETECTOR 2	MAX PEAK	
TRACE 3	MIN HOLD	
DETECTOR 3	MIN PEAK	
LIMIT LINE	None	
LIMIT CHECK	-	

Availability of FSP keys and softkeys

Parameter	Availability	Note
All BW parameters (BW menu)	Not available	
Amplitude distribution (SIGNAL STATISTICS)	Function not available	
Trigger (VIDEO, IF POWER, EXTERN, FREE RUN, RF POWER)	Function not available	The GSM trigger settings are used
Gated sweep mode (GATED TRIGGER, GATE SETTINGS)	Function not available	
Start frequency (START)	Function not available	Measurement is in time domain
Stop frequency (STOP)	Function not available	Measurement is in time domain
Span parameters (SPAN, FULL/ZERO/LAST SPAN)	Function not available	Measurement is in time domain
Step width of center frequency coupled to resolution bandwidth (AUTO X x RBW)	Function not available	Step width of the center frequency is switched to manual, value 2 kHz
Level reading (REF LEVEL, RANGE LOG/MANUAL/ LINEAR, REF LEVEL POSITION, GRID ABS/REL)	Function not available	Instead of showing the level, Y axis shows phase angle in DEG
Frequency counters (SIGNAL COUNT, COUNTER RESOLUTION)	Function not available	
Reference Fixed-Marker (REFERENCE FIXED menu)	Function not available	
Noise measurement (NOISE MEAS)	Function not available	
Measurement of phase noise (PHASE NOISE menu)	Function not available	
Set reference level to current marker value (REF LEVEL = MKR LEVEL)	Function not available	Instead of showing the level, Y axis shows phase angle in DEG
Quasipeak, autopeak detectors (DETECTOR AUTO PEAK, DETECTOR QPK)	Function not available	
On-screen presentation (SPLIT SCREEN, REF LEVEL COUPLED, CENTER A = MARKER B, CENTER B = MARKER A, SCREEN B,)	Function not available	
Time domain measurement – determine reference values (SET REFERENCE)	Function not available	Unit in DEG
Time domain measurement – select power measurement (POWER ABS/REL)	Function not available	Unit in DEG
Time domain measurement – set standard deviation (STANDARD DEVIATION)	Function not available	Unit in DEG
Unit (UNIT menu)	Function not available	
Create limit lines (NEW LIMIT LINE)	Function not available	There are no limit lines with the DEG unit

Measurement of carrier power

The purpose of measuring carrier power is to determine the output power of the mobile during the useful bits.

This measurement is intended for users whose signal does not have a midamble for time synchronization.

This measurement is performed in the time domain (Zero Span) at the set frequency.

Unlike power display in the PVT measurement mode, the signal is not demodulated for this measurement. This means that measurement in this mode is possible without a midamble.

There are two preconditions for correct measurement, namely correct timing of the trigger offset and correct reference level setting.

Requirements for the measuring signal

The signal's peak power cannot be more than 1 dB above the reference level.


Quick reference guide

Without explaining them, the quick reference guide presents the settings required for measurement in a practical sequence. The precondition for the procedure as described here is that the presets are activated (*PRESET* key) before the procedure starts.

Setting	Operation
Set frequency	<i>FREQ</i> key
Start application	<i>GSM-MS</i> hotkey
Enter external attenuation Default: 0 dB	<i>GENERAL SETTINGS</i> softkey <i>EXTERNAL ATTEN</i> softkey
Select GSM trigger	<i>TRIGGER EXTERN</i> or <i>TRIGGER IF POWER</i> softkey
Fine-tune level to within approx. 1 dB	<i>REF LEVEL</i> softkey → Position burst in mask
Set trigger offset	<i>TRIGGER OFFSET</i> softkey → Position burst time exactly in mask
Start measurement	<i>PREV</i> hotkey <i>CARRIER POWER</i> softkey

Measurement

GSM MS menu



Press the *CARRIER POWER* softkey to start measurement of carrier power over the 147 useful bits, in accordance with the standard.

The limit lines are displayed.

When power is exactly 3 dB below the reference level, the trace is centered between the upper and lower limit lines.

IEC/IEEE bus commands `INSTRUMENT[:SELECT] MGSM`
 `CONFIGURE:MTYPE GMSK`
 `CONFIGURE:BURSt:POWER[:IMMEDIATE]`
 `SWEEP:COUNT 20`
 `INITIATE:IMMEDIATE; *WAI`

Result queries:

```
CALCulate:MARKer:FUNCTION:SUMMARY:MEAN:RESULT?
CALCulate1:LIMIT1:NAME 'CPWU_G'
CALCulate1:LIMIT2:NAME 'CPWL_G'
CALCulate1:LIMIT1:FAIL?
CALCulate1:LIMIT2:FAIL?
```

Note: In remote-control mode, the user must assign the following names to the limit lines before they are used:

```
CALCulate1:LIMIT1:NAME 'CPWU_G' or 'CPWU_E'
CALCulate1:LIMIT2:NAME 'CPWL_G' or 'CPWL_E',
```


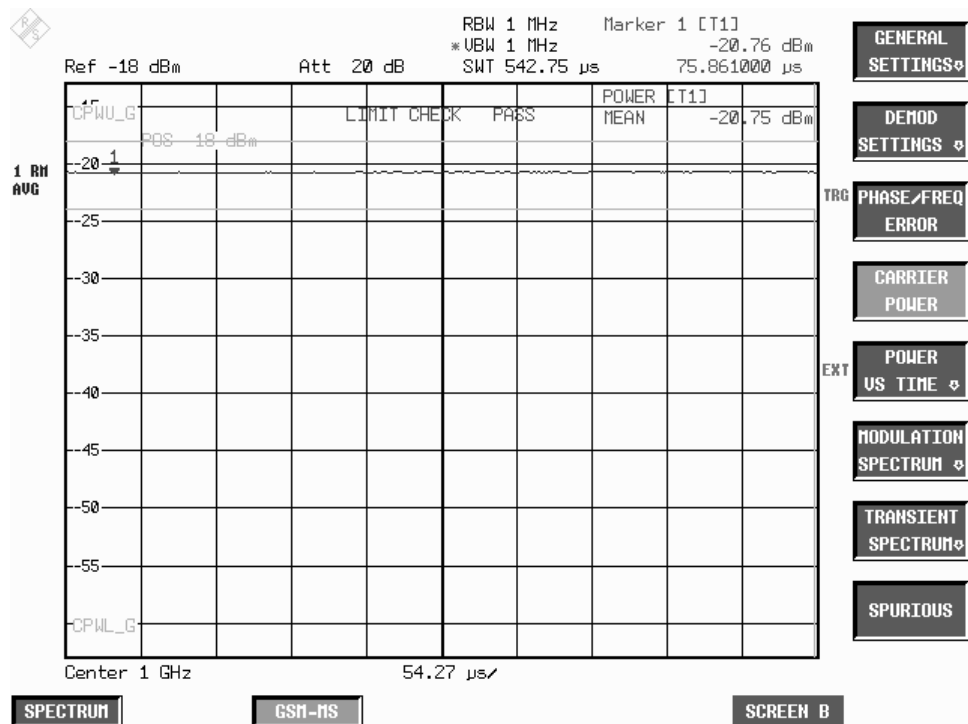


Figure 2-6 Measurement of carrier power



Press the *SPECTRUM* hotkey to launch the Analyzer mode. All settings are taken from the GSM MS mode. IF-Power is set for GSM Trigger IF Power, and the external trigger is set for GSM Trigger Extern.

IEC/IEEE bus command `INSTRUMENT[:SELECT] SANalyzer`

Test hints

Number of bursts to be measured -> **NO OF BURSTS**

The default setting when you launch the application is *NO OF BURSTS* (= *SWEEP COUNT*) = 0.

This setting produces a floating average over every 10 bursts (see FSP manual). You can change *NO OF BURSTS* if you want to measure across a different number of bursts (e.g. 200).

The settings for *NO OF BURSTS* / *SWEEP COUNT* apply to all measurements (they are not measurement-specific, in other words).

You also have the option of using *SINGLE* or *CONTINUOUS SWEEP MODE* in the same way as in the Analyzer mode.

Measuring with slow frequency hopping

Measurement with slow frequency hopping is possible under the following conditions only:

GSM-Trigger Extern: Trigger only when the burst is transmitted on the defined frequency.

GSM-Trigger IF Power: The IF trigger level is permanently set and cannot be changed.

This means that measurement with slow frequency hopping is very limited and is strictly dependent on the level to be measured.

Measurement of individual power control levels and power classes

The relationships between power, control level and power class specified in the standards are listed in the tables below.

Table 2-2 Power classes

Power Class	Power P-GSM 900 Phase I	E/P/R-GSM900 Phase II	DCS1800 Phase I	DCS1800 Phase II	PCS1900
1	43 dBm	--	30 dBm	30 dBm	30 dBm
2	39 dBm	39 dBm	24 dBm	24 dBm	24 dBm
3	37 dBm	37 dBm	--	36 dBm	33 dBm
4	33 dBm	33 dBm	--	--	--
5	29 dBm	29 dBm	--	--	--

Table 2-3 Power control levels

Power Control Level	Power				
	GSM900 Phase I	GSM900 Phase II/II+	DCS1800 Phase I	DCS1800 Phase II/II+	PCS1900
29	--	--	--	36 dBm	reserved
30	--	--	--	34 dBm	33 dBm
31	--	--	--	32 dBm	32 dBm
0	43 dBm	39 dBm	30 dBm	30 dBm	30 dBm
1	41 dBm	39 dBm	28 dBm	28 dBm	28 dBm
2	39 dBm	39 dBm	26 dBm	26 dBm	26 dBm
3	37 dBm	37 dBm	24 dBm	24 dBm	24 dBm
4	35 dBm	35 dBm	22 dBm	22 dBm	22 dBm
5	33 dBm	33 dBm	20 dBm	20 dBm	20 dBm
6	31 dBm	31 dBm	18 dBm	18 dBm	18 dBm
7	29 dBm	29 dBm	16 dBm	16 dBm	16 dBm
8	27 dBm	27 dBm	14 dBm	14 dBm	14 dBm
9	25 dBm	25 dBm	12 dBm	12 dBm	12 dBm
10	23 dBm	23 dBm	10 dBm	10 dBm	10 dBm
11	21 dBm	21 dBm	8 dBm	8 dBm	8 dBm
12	19 dBm	19 dBm	6 dBm	6 dBm	6 dBm
13	17 dBm	17 dBm	4 dBm	4 dBm	4 dBm
14	15 dBm	15 dBm	--	2 dBm	2 dBm
15	13 dBm	13 dBm	--	0 dBm	0 dBm
16	--	11 dBm	--	0 dBm	reserved
17	--	9 dBm	--	0 dBm	reserved
18	--	7 dBm	--	0 dBm	reserved
19	--	5 dBm	--	0 dBm	reserved
20..28	--	--	--	0 dBm	reserved
20..31	--	5 dBm	--	--	--

Additional information

Parameter	Setting	Note
MODE	Zero Span	
SWEEP mode	CONT under local control SINGLE under remote control	
RBW	1 MHz	
VBW	1 MHz	Coupling off
SWEEP TIME	147 * symbol duration = 147 * 3.6923 μ s = 542.75 μ s	
REF LEVEL POSITION	90%	
Y axis	LOG_50DB	
TRACE 1	AVERAGE	
DETECTOR 1	RMS	
TRACE 2	BLANK	
DETECTOR 2	-	
TRACE 3	BLANK	
DETECTOR 3	-	
Limit Line	CPWU_G	X relative to screen left, X values symmetrical with 0, therefore X offset, see below Y relative to reference level
Limit Checks	ON	
Limit Line	CPWL_G	-"-
Limit Checks	ON	
Limit X OFFSET	SWT/2 = 270 μ s	So that limit line symmetrical with 0 is in center of screen
Limit Y OFFSET	- 3dB	
Time Domain Power measurement	ON for Trace 1	

Availability of FSP keys and softkeys

Parameter	Availability	Note
SWEEP TIME	Function not available	
Start frequency (START)	Function not available	Measurement is in time domain
Stop frequency (STOP)	Function not available	Measurement is in time domain
Amplitude distribution (SIGNAL STATISTICS)	Function not available	
Trigger (VIDEO, IF POWER, EXTERN, FREE RUN, RF POWER)	Function not available	The GSM trigger settings are used
Gated sweep mode (GATED TRIGGER, GATE SETTINGS)	Function not available	
Span parameters (SPAN, FULL SPAN, ZERO SPAN, LAST SPAN)	Function not available	Measurement is in time domain
On-screen presentation (SPLIT SCREEN, REF LEVEL COUPLED, CENTER A = MARKER B, CENTER B = MARKER A, SCREEN B,)	Function not available	
Filter (FILTER TYPE)	Function not available	

Measurement of carrier power versus time

Measuring carrier power versus time provides a means of checking the time characteristic of a burst's power and the time reference between the burst edges and the midamble.

The power of the burst, moreover, is measured with synchronization to the midamble (as stipulated in the standard) and displayed.

To this end freely definable limit lines are shown, and the time characteristic of carrier power is measured against them in the ZERO SPAN mode.

Reference measurement is available as a means of obtaining a correct level setting for the limit values.

Synchronization with the midamble of the burst is active in this measurement mode (unlike the Carrier Power mode) (13/14 bit transition of the midamble). This ensures a correct time reference for the burst at all times.

Requirements for the measuring signal

- At least one slot must be active and isolated, because this is the only way of reliably detecting a burst (irrespective of edge steepness)
- Sync sequence must be present in the timeslot to be measured


Quick reference guide

Without explaining them, the quick reference guide presents the settings required for measurement in a practical sequence. The precondition for the procedure as described here is that the presets are activated (*PRESET* key) before the procedure starts.

Setting	Operation
Set frequency	<i>FREQ</i> key
Start application	<i>GSM-MS</i> hotkey
Select GSM trigger	<i>GENERAL SETTINGS</i> softkey TRIGGER EXTERN or TRIGGER IF POWER softkey
Fine-tune level to within approx. 3 dB	<i>REF LEVEL</i> softkey → Position burst in horizontal limit-value lines
Enter external attenuation Default: 0 dB	<i>EXTERNAL ATTEN</i> softkey
Set midamble Default: TSC0	<i>DEMOD SETTINGS</i> softkey SELECT MIDAMBLE softkey
Start measurement	<i>PREV</i> hotkey <i>POWER VS TIME</i> softkey
Start reference measurement	<i>START REF MEAS</i> softkey

Measurement

GSM MS menu

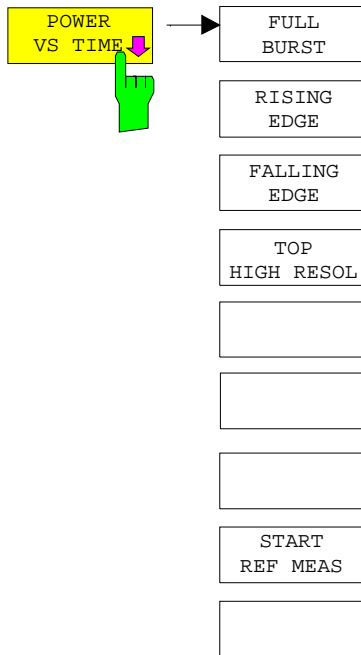

Press the *POWER VS TIME* softkey to start measurement of carrier power versus time and open a submenu for configuring the display.

The power of the burst is also measured as centered relative to the midamble and displayed.

Three curves are displayed:

Max Peak, Min Peak and Average,

but limit values are checked against the Average Trace (number of bursts > 1, if number of bursts = 1 only one curve is shown).

4 display modes are possible:

- Display of entire burst (*FULL BURST*)
- Display of useful part of burst at high resolution (*TOP HIGH RESOL*)
- Display of rising edge of burst (*RISING EDGE*)
- Display of falling edge of burst (*FALLING EDGE*)

You have a free choice of display mode for the measured-value diagram.

IEC/IEEE bus commands

```

INSTRument[:SElect] MGSM
CONFigure:MTYPE GSMK
CONFigure:BURSt:PTEMplate[:IMMediate]
CONFigure:BURSt:PTEMplate:SElect FULL
SWEep:COUNT 20
READ:BURSt:PTEMplate:REFerence[:IMMediate]?
INITiate:IMMediate; *WAI
  
```

Result queries:

```


CALCulate1:LIMit1:NAME 'PVTU_G'
CALCulate1:LIMit2:NAME 'PVTL_G'
CALCulate1:LIMit1:FAIL?
CALCulate1:LIMit2:FAIL?
  
```

Note:

In remote-control mode, the user must assign the following names to the limit lines before they are used:

```

CALCulate1:LIMit1:NAME 'PVTU_G' or 'PVTU_E' and
CALCulate1:LIMit2:NAME 'PVTL_G' or 'PVTL_E',
respectively
  
```

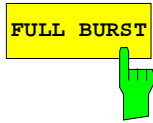Press the *FULL BURST* softkey to select a display mode in which the entire burst can be viewed on the monitor.

All the settings of relevance to this display mode are reset to their default values (see Test hints). No reference measurement is performed and the limit values are not adjusted.

The corresponding limit lines are shown on the monitor.

IEC/IEEE bus command `CONFigure:BURSt:PTEMplate:SElect FULL`


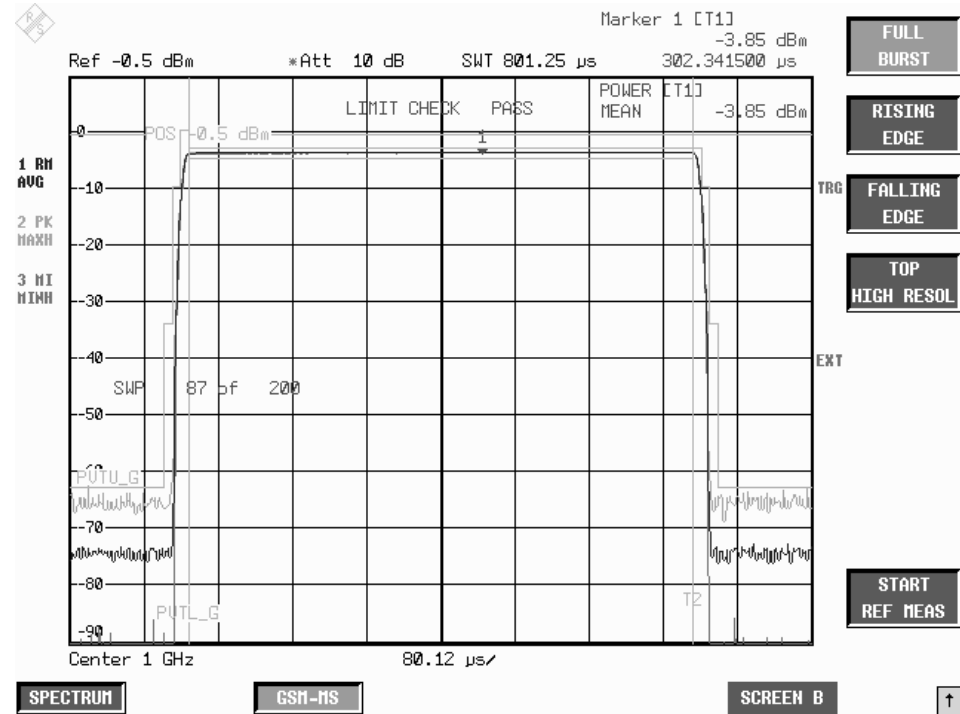


Figure 2-7 PVT measurement – FULL BURST

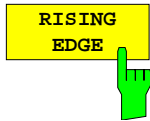

Press the *RISING EDGE* softkey to select a display mode in which the rising edge of the burst can be viewed on the monitor.

All the settings of relevance to this display mode are reset to their default values (see Test hints). No reference measurement is performed and the limit values are not adjusted.

The corresponding limit lines are shown on the monitor.

IEC/IEEE bus command `CONFigure:BURSt:PTEMplate:SELEct RISING`


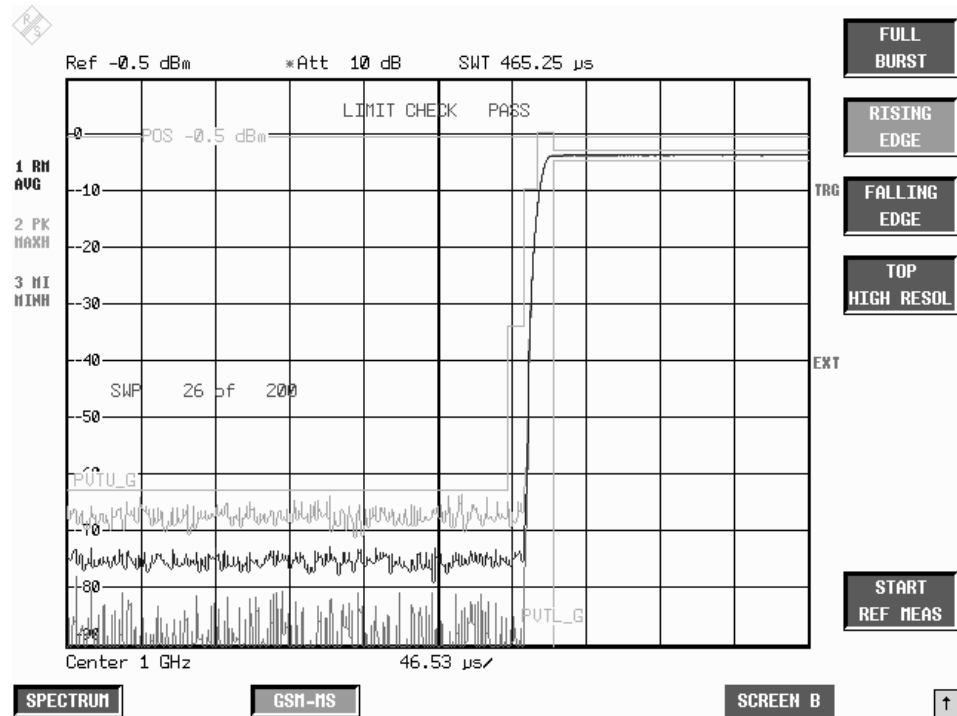


Figure 2-8 PVT measurement – RISING EDGE

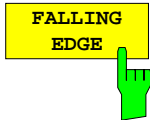

Press the *FALLING EDGE* softkey to select a display mode in which the falling edge of the burst can be viewed on the monitor.

All the settings of relevance to this display mode are reset to their default values (see Test hints). No reference measurement is performed and the limit values are not adjusted.

The corresponding limit lines are shown on the monitor.

IEC/IEEE bus command `CONFIGure:BURSt:PTEmplate:SElect FALLing`


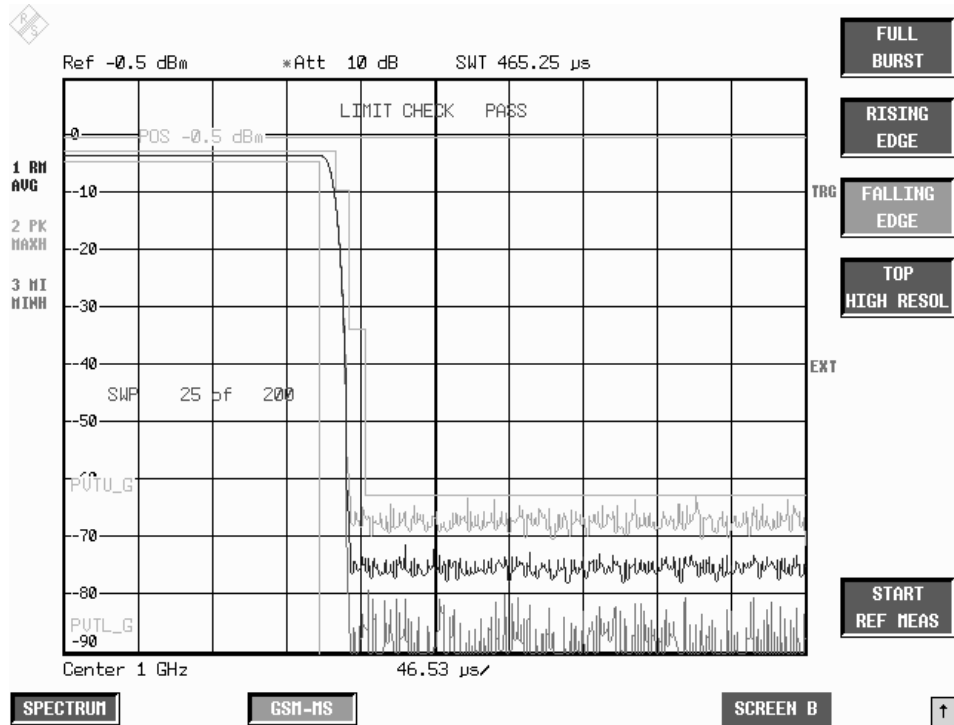


Figure 2-9 PVT measurement – FALLING EDGE

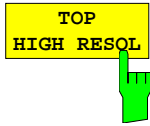

Press the *TOP HIGH RESOL* softkey to select a display mode in which the useful part of the entire burst can be viewed on the monitor with a level resolution of 1 dB/Div.

All the settings of relevance to this display mode are reset to their default values (see Test hints). No reference measurement is performed and the limit values are not adjusted.

The corresponding limit lines for the 147 useful bits only are shown on the monitor.

IEC/IEEE bus command `CONFigure: BURSt: PTEmplate: SELEct TOP`


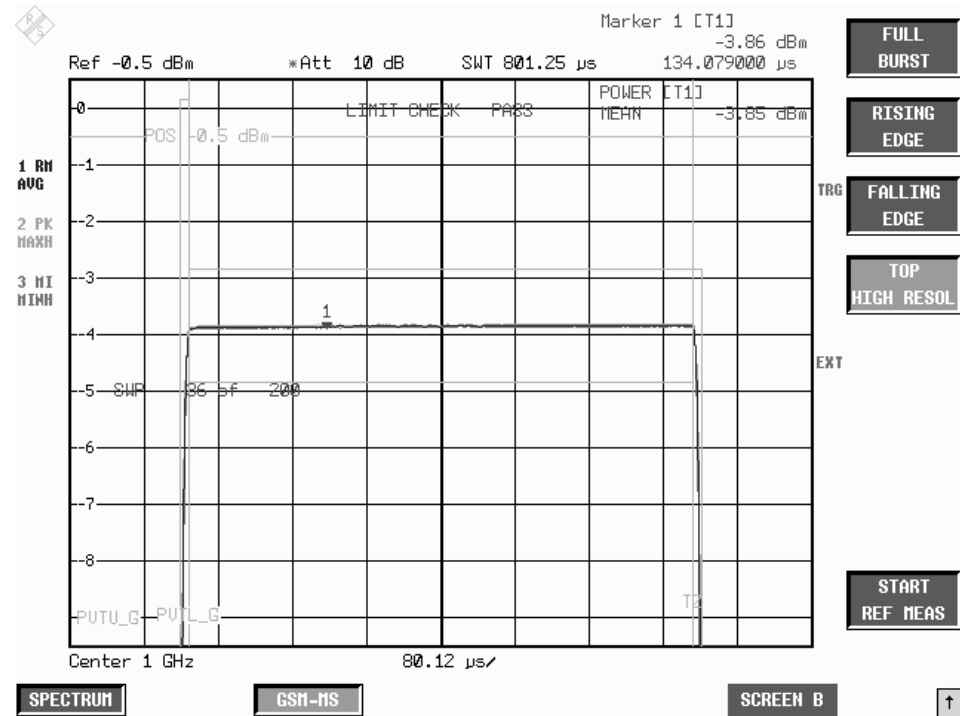


Figure 2-10 PVT measurement – TOP HIGH RESOLUTION



Press the *START REF MEAS* softkey to start reference measurement and determine the reference power for the relative measured values as well as obtain the correct level setting for the limit lines of the measurement.

Depending on the level obtained in this way, a brief message appears, drawing your attention to the optimum reference level. This permits optimum modulation of the device.

IEC/IEEE bus commands

```
INSTRument[:SElect] MGSM
CONFigure:BURSt:PTEMplate[:IMMediate]
CONFigure:BURSt:PTEMplate:SElect FULL
READ:BURSt:PTEMplate:REFerence[:IMMediate]?
```

Details of reference measurement:

The purpose of reference measurement is to obtain the reference for the applicable limit values. Averaging is always over at least 20 bursts, irrespective of the number of bursts (*NO. OF BURSTS = SWEEP COUNT*) selected for measurement as such.

If reference measurement is cancelled, the existing level of the limit lines remains unaffected.

If reference measurement is successful, the measured level is displayed and the limit lines centered relative to it (i.e. the Y offset parameter of the limit lines is recalculated).

Once determined in this way, the reference level is retained either until a preset is performed (default reference level = -20 dBm), or until a new reference measurement is started.

This means that after performing reference measurement once, the user can perform other GSM measurements for the same signal.

The reference level, once measured, is stored in memory when the GSM application is closed, which means that it remains available for the next session.


Warnings issued during reference measurement

The expected power of the DUT is 3 dB below the reference level. If GSM measurements were performed right at the reference level, there would be a danger of overloading the analyzer above the reference level.

If the reference level is too low, i.e.


Signal level of DUT – (reference level + reference-level offset) > - 5 dB

the following message is issued:

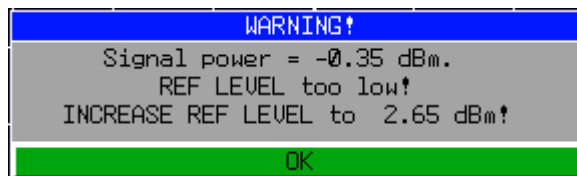


The carrier overload bit in IEC/IEEE bus status management is set.

If the reference level is too high, i.e.
 Signal level of DUT – (reference level + reference-level offset) > -11 dB
 the following message is issued:

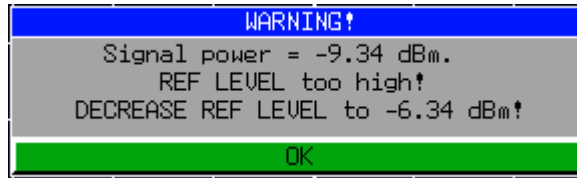

The no carrier bit in IEC/IEEE bus status management is set.

If the reference level is in range, i.e.
 -11 dB < signal level of DUT – (reference level + reference-level offset) < - 5 dB
 the following message is issued:



Press the *SPECTRUM* hotkey to launch the Analyzer mode. The following settings are changed automatically as described below; all other settings are taken from the GSM MS mode:

Span = ZERO SPAN
 RBW = 300 kHz
 Trigger = GSM trigger

IEC/IEEE bus command INSTRUMENT[:SElect] SANalyzer

Test hints

Power measurement with reference to midamble

The PVT mode can be used for high-precision measurement of burst power referenced to the 13/14 bit transition of the midamble.

The relationships between power, control level and power class specified in the standards are listed in the tables below.

Table 2-4 Power classes

Power Class	Power				
	P-GSM 900 Phase I	E/P/R-GSM900 Phase II	DCS1800 Phase I	DCS1800 Phase II	PCS1900
1	43 dBm	--	30 dBm	30 dBm	30 dBm
2	39 dBm	39 dBm	24 dBm	24 dBm	24 dBm
3	37 dBm	37 dBm	--	36 dBm	33 dBm
4	33 dBm	33 dBm	--	--	--
5	29 dBm	29 dBm	--	--	--

Table 2-5 Power control level

Power Control Level	Power				
	GSM900 Phase I	GSM900 Phase II/II+	DCS1800 Phase I	DCS1800 Phase II/II+	PCS1900
29	--	--	--	36 dBm	reserved
30	--	--	--	34 dBm	33 dBm
31	--	--	--	32 dBm	32 dBm
0	43 dBm	39 dBm	30 dBm	30 dBm	30 dBm
1	41 dBm	39 dBm	28 dBm	28 dBm	28 dBm
2	39 dBm	39 dBm	26 dBm	26 dBm	26 dBm
3	37 dBm	37 dBm	24 dBm	24 dBm	24 dBm
4	35 dBm	35 dBm	22 dBm	22 dBm	22 dBm
5	33 dBm	33 dBm	20 dBm	20 dBm	20 dBm
6	31 dBm	31 dBm	18 dBm	18 dBm	18 dBm
7	29 dBm	29 dBm	16 dBm	16 dBm	16 dBm
8	27 dBm	27 dBm	14 dBm	14 dBm	14 dBm
9	25 dBm	25 dBm	12 dBm	12 dBm	12 dBm
10	23 dBm	23 dBm	10 dBm	10 dBm	10 dBm
11	21 dBm	21 dBm	8 dBm	8 dBm	8 dBm
12	19 dBm	19 dBm	6 dBm	6 dBm	6 dBm
13	17 dBm	17 dBm	4 dBm	4 dBm	4 dBm
14	15 dBm	15 dBm	--	2 dBm	2 dBm
15	13 dBm	13 dBm	--	0 dBm	0 dBm
16	--	11 dBm	--	0 dBm	reserved
17	--	9 dBm	--	0 dBm	reserved
18	--	7 dBm	--	0 dBm	reserved
19	--	5 dBm	--	0 dBm	reserved
20..28	--	--	--	0 dBm	reserved
20..31	--	5 dBm	--	--	--

Measuring with slow frequency hopping

Analysis of the burst's time characteristic and the power readings include only the bursts that

- a) can be demodulated correctly and
- b) have the midamble set under DEMOD SETTINGS.

If these conditions are not fulfilled the "SYNC NOT FOUND" message is issued and evaluation of the measured values stops. Measurement automatically resumes on arrival of a burst with the defined midamble.

Demodulation is possible only when the DUT's carrier is on the defined frequency.

This precaution is adopted to avoid falsification of the measured values by bursts outside ARFCN and bursts with the wrong midamble.

Number of bursts to be measured -> *NO OF BURSTS*

The default value when you launch the application is *NO OF BURSTS* (= *SWEEP COUNT*) = 0.

This setting produces a floating average over every 10 bursts (see FSP manual). You can change *NO OF BURSTS* if you want to measure across a different number of bursts (e.g. 200).

The settings for *NO OF BURSTS* / *SWEEP COUNT* apply to all measurements (they are not measurement-specific, in other words).

You also have the option of using *SINGLE* or *CONTINUOUS SWEEP MODE* in the same way as in the Analyzer mode.

Measurement with maximum dynamic range

Once you have used *FULL BURST* or *TOP HIGH RESOLUTION* to ascertain that the limit lines cannot be exceeded, you can employ the method described below to extend the analyzer's usable dynamic range by a few dB:

- Move the reference level to max. 2 dB below the actual power of the signal (see power reading on the screen in Full Burst mode),
- Set RF ATTEN as low as possible
- Reselect measurement (*FULL BURST*, *RISING EDGE*, *FALLING EDGE*)
This slightly overloads the device, without falsifying the measurement. The mask is now automatically centered relative to the actual level.

Note: *If the power of the mobile is less than -20 dBm it is essential to remove external attenuation in order to achieve the maximum possible dynamic range.*

The increase in S/N ratio in dB is roughly equal to the reduction in reference level and the removed attenuation (RF ATTEN = 10 dB).

Additional information

PVT measurement requires a time reference to the midamble (TSC 0 to 7). The IF signal is digitized, demodulated and processed (IQ mode) for this measurement.

Parameter	Setting	Note
MODE	IQ mode	FS-K5-specific internal mode for demodulation
SWEEP MODE	CONT under local control SINGLE under remote control	
RBW	analog prefilter with 3 MHz 600 kHz filter	
VBW	-	Irrelevant in IQ mode
REF LEVEL POSITION	90 %	Level overshoots visible at 90%
Symbol rate	270.833 kbit/s	
Oversampling	4	
Sampling Length	1600 * 4 = 6400	Number of samples = symbols * oversampling
Bits per Symbol	1	Number of bits describing a symbol, constant for GSM measurements
Receiver Filter	Gauss with BT = 0.3	Constant for GSM measurement
BURST FIND	ON	Burst find is active
BURST FIND	ON	Sync find is active
PVT Result Length FULL BURST & TOP HIGH RES RISING EDGE FALLING EDGE	217 126 126	Number of symbols shown
PVT Sync Mid Offset FULL BURST & TOP HIGH RES RISING EDGE FALLING EDGE	0 93 -93	Offset in symbols of the midamble from the center of the screen. Positive means that the midamble is offset to the right of center. Explanation: To put rising on symbol 82: $82 - 0.5 \text{ Result Length} + \text{symbols between edge and midamble} = 82 - 0.5 * 126 + 0.5 * 148$ To put falling on symbol 44: $0.5 * 126 - 44 - 0.5 * 148 = -55$
Y axis pitch FULL & RISING & FALLING TOP HIGH RESOL	LOG_100DB LOG_10DB	Trace shows level versus time
TRACE 1	AVERAGE	
DETECTOR 1	RMS	
TRACE 2	MAX HOLD	
DETECTOR 2	MAX PEAK	
TRACE 3	MIN HOLD	
DETECTOR 3	MIN PEAK	
Limit Line	PVTU_G	
Limit Checks	ON	
Limit Line	PVTL_G	
Limit Checks	ON	
Limit X-Offset FULL BURST & TOP HIGH RES RISING EDGE FALLING EDGE	400.625µs 576.00µs -110.75µs	Limit line is centered on midamble
Limit Y-Offset	Signal power measured in reference measurement – (Ref Level + Ref Level Offset)	Reference measurement result corrects the limit lines

Availability of FSP keys and softkeys

Availability		
All BW parameters (BW menu)	Not available	Parameters not available in IQ mode
Amplitude distribution (SIGNAL STATISTICS)	Function not available	
Trigger (VIDEO, If POWER, EXTERN, FREE RUN, RF POWER)	Function not available	The GSM trigger settings are used
Gated sweep mode (GATED TRIGGER, GATE SETTINGS)	Function not available	
Start frequency (START)	Function not available	Measurement is in time domain
Stop frequency (STOP)	Function not available	Measurement is in time domain
Span parameters (SPAN, FULL SPAN, ZERO SPAN, LAST SPAN)	Function not available	Measurement is in time domain
Step width of center frequency coupled to resolution bandwidth (AUTO X x RBW)	Function not available	Step width of the center frequency is switched to manual, value 2 kHz
Frequency counters (SIGNAL COUNT, COUNTER RESOLUTION)	Function not available	
Reference Fixed-Marker (REFERENCE FIXED menu)	Function not available	
Quasipeak, autopeak detectors (DETECTOR AUTO PEAK, DETECTOR QPK)	Function not available	
On-screen presentation (SPLIT SCREEN, REF LEVEL COUPLED, CENTER A = MARKER B, CENTER B = MARKER A, SCREEN B,)	Function not available	
Switch to linear scaling (RANGE LINEAR)	Function not available	Logarithmic scaling for PVT
Noise measurement (NOISE MEAS)	Function not available	
Measurement of phase noise (PHASE NOISE menu)	Function not available	
Trigger offset (TRIGGER OFFSET)	Function not available	Although it can be set in the GENERAL SETTINGS menu, this parameter has on effect in this mode of measurement.

Measurement of spectrum due to modulation

In order not to influence the transmission quality of the adjacent channels, it is important to ensure that the power of the GSM transmit signal in the adjacent channels does not exceed the limits set down in the GSM standards. On account of the TDMA structure of the GSM signal, a distinction has to be drawn between the spectrum due to modulation and the spectrum due to switching of the TDMA bursts. Measurement of the spectrum due to modulation determines power outside the transmission channel due to the GMSK modulation procedure used and the noise.

In accordance with the GSM standard, the spectrum due to modulation is measured in the range between 50% and 90% of the active TDMA bursts. This ensures that the influence of the burst edges is excluded.

Defined limit values apply; these values depend on the transmit power of the transmitter and the offset from the nominal channel frequency. These limit values (with the exception of the absolute lower limits) are relative to the power measured at 30 kHz RBW. This power has to be ascertained by reference measurement. Depending on the result of this reference measurement, the FSP selects the correct reference value for the user-selected limit values for the spectrum due to modulation.

The FS-K5 offers two different ways of measuring the spectrum due to modulation:

- General measurement across the frequency range (the *FREQUENCY SWEEP* softkey) with display of the spectrum, and
- Measurement of the spectrum due to modulation in the time domain with discrete frequencies (± 100 , ± 200 , ± 250 kHz, $\pm n \times 200$ kHz ($2 \leq n \leq 38$) from the carrier frequency) and output of the measured values in a list (the *START LIST* softkey).

The time reference for measurement is provided by the set trigger offset. Starting at this time, the spectrum between 50% and 90% of the active burst is measured (gating). It is, therefore, important to ensure that trigger timing is set correctly in the *GENERAL SETTINGS* menu, as otherwise the spectrum due to modulation cannot be measured correctly.

A correct reference level is important for optimum dynamic range of the FSP.

Requirements for the measuring signal

At least one GSM timeslot must be switched on for the signal to be measured.


Quick reference guide

Without explaining them, the quick reference guide presents the settings required for measurement in a practical sequence. The precondition for the procedure as described here is that the presets are activated (*PRESET* key) before the procedure starts.

Setting	Operation
Set frequency	<i>FREQ</i> key
Start application	<i>GSM-MS</i> hotkey
Enter external attenuation Default = 0 dB	<i>GENERAL SETTINGS</i> softkey <i>EXTERNAL ATTEN</i> softkey
Select trigger	<i>TRIGGER EXTERN</i> or <i>TRIGGER IF POWER</i> softkey
Fine-tune level to within approx. 3 dB	<i>REF LEVEL</i> softkey → Position burst in mask
Set trigger offset	<i>TRIGGER OFFSET</i> softkey → Position burst time exactly in mask
Start reference measurement	<i>PREV</i> hotkey <i>START REF MEAS</i> softkey
Start measurement	<i>START LIST</i> softkey

Measurement

GSM MS menu

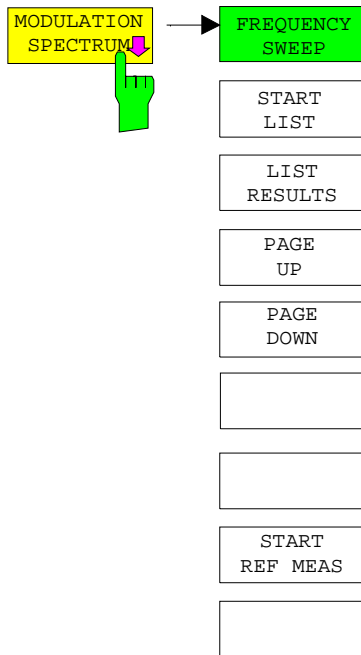

The *MODULATION SPECTRUM* softkey calls the submenu for measuring the spectrum due to modulation. In the default setting, the FSP measures the spectrum due to modulation in the frequency domain (*FREQUENCY SWEEP*).

Alternatively and in accordance with the standard, *START LIST* can be used to measure in the time domain.

In this mode the FSP measures the spectrum due to modulation in the time domain at the frequency offsets required by the GSM standard (in the spectral range from max. ARFCN +/- 7.6 MHz) and presents the results in list form.

You can use *LIST RESULTS* at any time to view the last measurement in the time domain. If the list is too long to fit onto one screen page, you can use *PAGE UP* and *PAGE DOWN* to scroll through the list.


When the *MODULATION SPECTRUM* menu is opened for the first time, the parameters are set in accordance with the GSM standards (see Additional information for other settings):

Span	3.6 MHz
Resolution bandwidth	30 kHz
Video bandwidth	30 kHz
Detector/trace	Average, log average
Sweep time	75 ms
Sweep count	0 (floating trace averaging)
Sweep	gated (50 to 90 % of the burst)

The settings correspond to those made when the *FREQUENCY SWEEP* softkey is pressed. The parameter settings can be changed. They are not reset until you exit MOD measurement (by starting another measurement or exiting the GSM-MS) or press the *FREQUENCY SWEEP* softkey.

When you start list measurement (*START LIST*) or reference measurement (*START REF MEAS*), the parameter settings used are those currently valid.

The applicable limit values are referred to the signal's absolute level measured in a user-definable bandwidth (preset is 30 kHz). This reference level is determined by reference measurement performed with *START REF MEAS*.



The *FREQUENCY SWEEP* softkey starts continuous measurement of the spectrum due to modulation in the "Continuous Sweep" mode. All the parameters used in MOD measurement are reset to their default values (see above, the *MODULATION SPECTRUM* softkey). The FSP displays the spectrum and a limit line with limits corresponding to the level (determined beforehand in reference measurement) of the DUT.

IEC/IEEE bus commands

```

INSTRument[:SElect] MGSM
CONFIgure:MTYPE GSMK
CONFIgure:SPECTrum:MODulation[:IMMediate]
SWEep:COUNT 20
READ:SPECTrum:MODulation:REFerence[:IMMediate]?
INITiate:IMMediate; *WAI
    
```

Result queries:

```

CALCulatel:LIMIT1:NAME 'TRAU_G'
CALCulatel:LIMIT1:FAIL?
    
```

Note: In remote-control mode, the user must assign the following name to the limit line before it is used:

```

CALCulatel:LIMIT1:NAME 'MODU_G' or 'MODU_E'
    
```


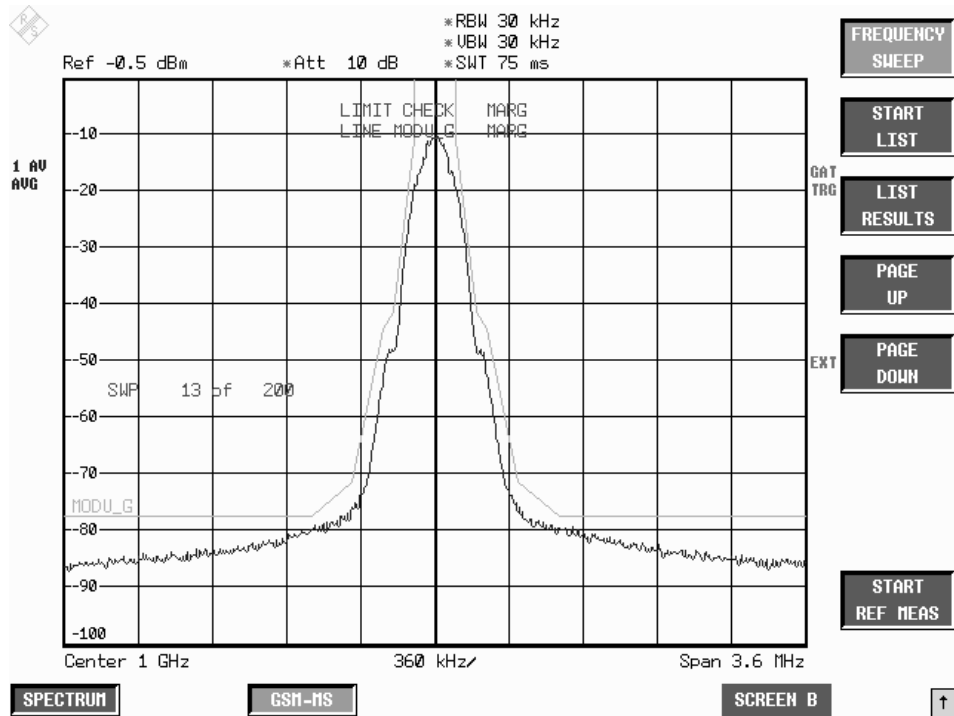


Figure 2-11 Spectrum due to modulation in frequency domain



Press the *START LIST* softkey to start measurement of the spectrum due to modulation in the time domain in the section of the TDMA burst defined in the standards (50% to 90% of the useful part).

The analyzer measures at the following offsets from the channel frequency:
 ± 100 kHz, ± 200 kHz, ± 250 kHz, ± 400 kHz, $\pm n \cdot 200$ kHz
 (n whole number and $n \leq 38$; limit frequency included, the channel frequency itself is excluded).

The number n of discrete frequencies is defined by the spectral measuring range, which is user-selectable in the range from 200 kHz to 15.2 MHz. This value is always determined from the SPAN value of the *FREQUENCY SWEEP* measurement:

The following conventions apply:

SPAN = 0	spectr. measuring range = ± 1.8 MHz
$0 < \text{SPAN} \leq 200$ kHz	spectr. measuring range = ± 100 kHz
$200 \text{ kHz} < \text{SPAN} \leq 15.2$ kHz	spectr. measuring range = SPAN
SPAN = 15.2 MHz	spectr. measuring range ± 7.6 MHz

You can choose the resolution bandwidth, but note that this bandwidth is reset to 30 kHz when you press the *FREQUENCY SWEEP* softkey.

Measurement is performed in the time domain with the AVERAGE detector. The video signal, digitized on the IF and filtered with a bandwidth of 30 kHz and bandwidth-limited by the video filter, is averaged by the average detector during the selected time. The time depends on the number of averages required (*SWEEP COUNT* = number of TDMA bursts to be averaged).

While measurement is in progress, the measured values at the various frequency offsets are displayed briefly in the measurement diagram. The curve reflects progress of the measurement.

The power measured beforehand with a freely selectable resolution bandwidth is used as the reference power for the relative measured values and for the position of the limit lines. Reference measurement therefore has to be performed beforehand with the appropriate parameter settings in order for measurement to be correct.

When the measuring sequence is completed, the results are displayed in list form.

The values marked with an x violate the margin.

The values marked with an asterisk (*) violate the limit value.

IEC/IEEE bus commands

```

INSTRument[:SElect] MGSM
CONFIgure:SPECTrum:MODulation[:IMMediate]
SWEep:COUNT 20
READ:SPECTrum:MODulation:REFerence[:IMMediate]?
READ:SPECTrum:MODulation[:ALL]?
  
```

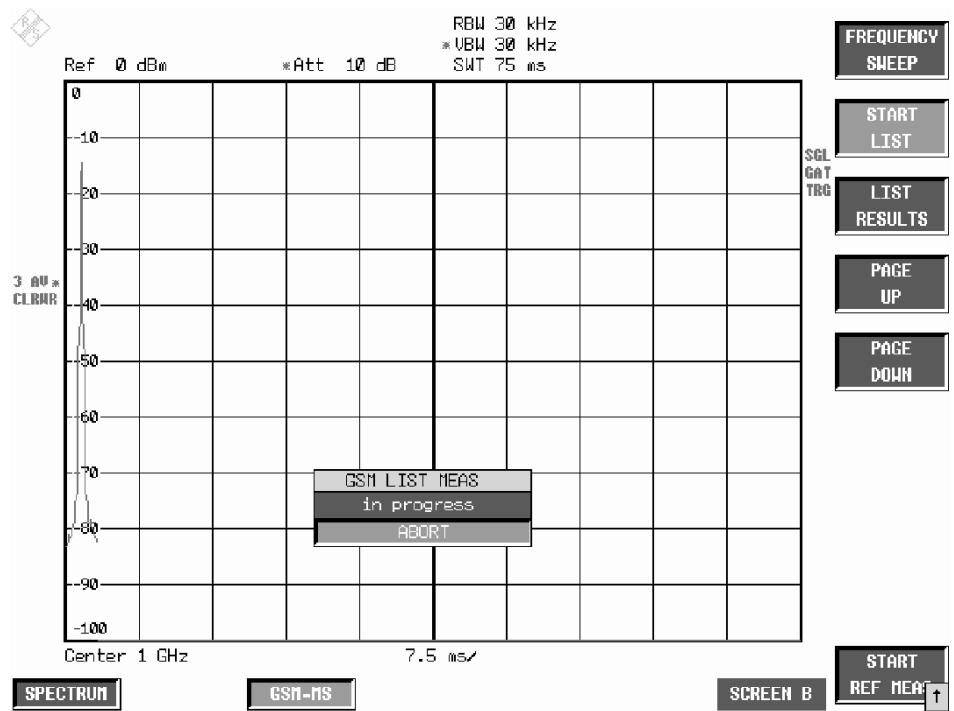


Figure 2-12 Time domain measurement in progress

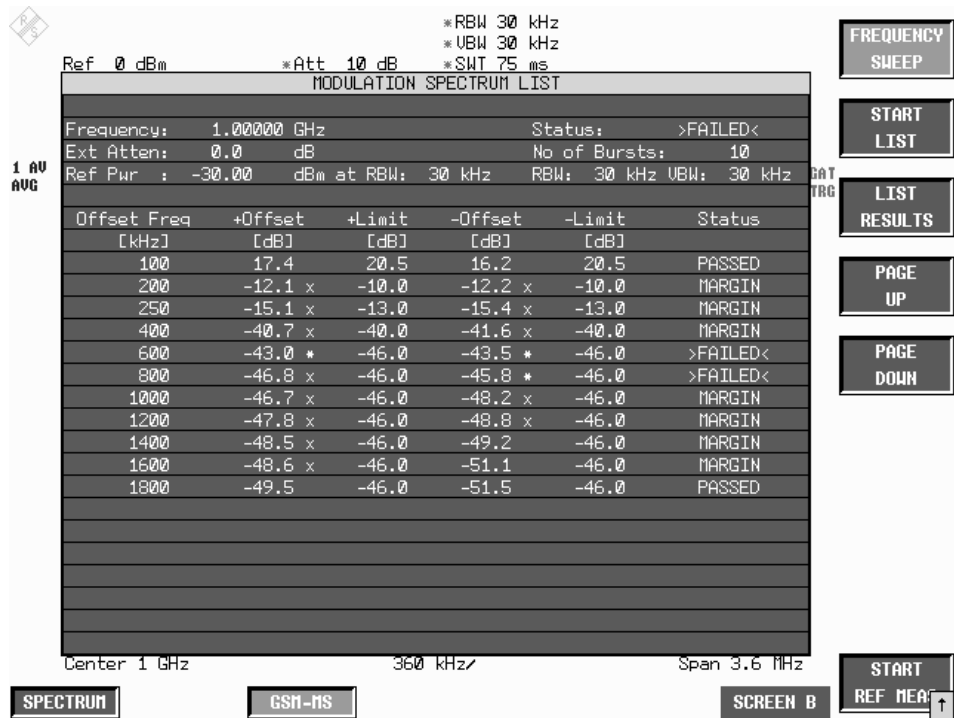


Figure 2-13 Results of time domain measurement




Press the *LIST RESULTS* softkey to view the most recent results in the time domain measurement.


IEC/IEEE bus commands

```


FETCh:SPECTrum:MODulation:REference?
FETCh:SPECTrum:MODulation[:ALL]? ARFCn
  
```



Press the *PAGE UP* softkey to browse through the results table if it is too long to fit onto one page (depending on span).



Press the *PAGE DOWN* softkey to browse through the results table if it is too long to fit onto one page (depending on span).



Press the *START REF MEAS* softkey to start reference measurement and determine the reference power for the relative measured values and obtain the correct level setting for the limit lines of the measurement.

Depending on the level obtained in this way, a brief message appears, drawing your attention to the optimum reference level. This permits optimum modulation of the device.

Details of reference measurement:

The purpose of reference measurement is to define the reference for the limit values. Averaging is always over at least 20 bursts, irrespective of the number of bursts (*NO. OF BURSTS= SWEEP COUNT*) selected for measurement as such.

The purpose of reference measurement is to determine the reference level for measurement of the spectrum due to modulation. If measurement is successful, the reference power is saved. The resolution bandwidth used for measurement is also saved (the preset bandwidth is 30 kHz). If the result is not tolerable (see below), a warning is issued, but the measured value is used nevertheless. If the operation is cancelled by the user, the reference power is not changed.

If reference measurement is successful, the measured level is displayed and the limit line positioned relative to it (the Y offset parameter of the limit line is recalculated).

Once determined in this way, the reference level is retained either until a preset is performed (default reference level = -20 dBm), or until a new reference measurement is started.

IEC/IEEE bus commands

```

INSTrument[:SElect] MGSM
CONFIgure:SPECTrum:MODulation[:IMMediate]
SWEep:COUNT 20
READ:SPECTrum:MODulation:REference[:IMMediate]?
  
```


If the reference level is too low, i.e.

Signal level of DUT – (REF LEVEL + REF LEVEL OFFSET) > lower level limit - 3 dB

the following message is issued:



The Carrier Overload Bit in IEC/IEEE bus status management is set.

If the reference level is too high, i.e.

Signal level of DUT – (REF LEVEL + REF LEVEL OFFSET) > upper level limit - 3 dB

the following message is issued:




The No Carrier Bit in IEC/IEEE bus status management is set.

The "lower level limit" and "upper level limit" values depend on the selected bandwidth:


Level limit \ RBW	≤30 kHz	100 kHz	≥300 kHz
Lower level limit	-7 dB	-5 dB	+1 dB
Upper level limit	-13 dB	-11 dB	-5 dB

Values between 30 kHz and 100 kHz and between 100 kHz and 300 kHz are mapped to near-match values from the table.

When the reference level is within the valid range, the following message is issued:



The expected power of the DUT is 3 dB below the reference level. If the settings are not compliant with the above, there is a risk either of the analyzer being overloaded or of the maximum dynamic range not being utilized.



Press the *SPECTRUM* hotkey to launch the Analyzer mode. The following settings are changed automatically as described below; all other settings are taken from the GSM MS mode:

Trigger offset = OFF
 Trigger = GSM trigger
 Gating = OFF

IEC/IEEE bus command INSTRUMENT[:SELECT] SANALYZER

Test hints

Measuring with slow frequency hopping

Bear the following in mind when the DUT is operating in slow frequency hopping mode:

- 1) If an external trigger signal is used, it should trigger the FSP only when a burst is sent on the frequency set at the FSP.
- 2) In principle, the IF trigger can be used. Note, however, that its trigger threshold is pegged (-16 dBm at the input mixer). This means that the level of the signal must be high enough to trigger measurement.

Number of bursts to be measured -> ***NO OF BURSTS***

The default value when you launch the application is *NO OF BURSTS* (= *SWEEP COUNT*) = 0.

This setting produces a floating average over every 10 bursts (see FSP manual). You can change *NO OF BURSTS* if you want to measure across a different number of bursts (e.g. 200).

The settings for *NO OF BURSTS* / *SWEEP COUNT* apply to all measurements (they are not measurement-specific, in other words).

You also have the option of using *SINGLE* or *CONTINUOUS SWEEP MODE* in the same way as in the Analyzer mode.

Additional information

The tables below show the default settings that apply after you press the *FREQUENCY SWEEP* or *START LIST* softkey.

FREQUENCY SWEEP measurement:

Parameter	Setting	Note
MODE	Frequency sweep, span 3.6 MHz	
SWEEP MODE	CONT under local control SINGLE under remote control	
RBW	30 kHz, NORM	3 dB sweep filters are used.
VBW	30 kHz	Coupling off
SWT	75 ms	Time from GSM standard
GATED TRIGGER	ON	
GATE MODE	Edge	
GATE DELAY GSM TRIGGER: Extern GSM TRIGGER: IF Power	= GSM external trigger offset + 340 μ s = GSM IF trigger offset + 340 μ s	340 μ s is a value from GSM standard: 50% to 90% excluding midamble (see Figure 1-1 in Chapter 1).
GATE LENGTH	170 μ s	Value from GSM standard
TRACE 1	AVERAGE	
DETECTOR 1	LOG AVERAGE	
TRACE 2	BLANK	
TRACE 3	BLANK	
Limit Line	MODU_G	X relative to center frequency (CF), X values symmetrical with CF, so no X offset, see below Y relative to reference level
Limit Checks	ON	
Limit X OFFSET	0	0, because symmetrical with CF
Limit Y OFFSET	Reference measurement result – (REF LEVEL + REF LEVEL OFFSET)	The limit lines are corrected with the result of the reference measurement.

LIST measurement:

Parameter	Setting	Note
SWEEP COUNT	Taken from Frequency Sweep, changed to 10 if 0	
MODE	Zero Span	reduced presentation
RBW	selectable; default is 30 kHz	
VBW	selectable; default is 30 kHz	
SWT	170 μ s	
REF LEVEL POSITION	100%	Preset value
TRIGGER OFFSET GSM-Trigger : Extern GSM-Trigger : IF Power	= GSM external trigger offset + 340 μ s = GSM IF trigger offset + 340 μ s	
TRACE 1	AVERAGE	
DETECTOR 1	Average	
TRACE 2, 3	Not possible	
Limit Line	MODU_G	X relative to center frequency (CF), X values symmetrical with CF, so no X offset, see below Y relative to reference level

Availability of FSP keys and softkeys

Parameter	Availability	Note
FFT filter (FILTER TYPE FFT)	Function not available	
Amplitude distribution (SIGNAL STATISTICS)	Function not available	
Channel and adjacent channel power measurements (CHAN POWER / ACP)	Function not available	
Measurement of occupied bandwidth (OCCUPIED BANDWIDTH)	Function not available	
Trigger (VIDEO, IF POWER, EXTERN, FREE RUN, RF POWER)	Function not available	The GSM trigger settings are used
Gated sweep mode (GATED TRIGGER, GATE SETTINGS)	Function not available	
On-screen presentation (SPLIT SCREEN, REF LEVEL COUPLED, CENTER A = MARKER B, CENTER B = MARKER A, SCREEN B,)	Function not available	
Unit (UNIT menu)	Function not available	
Linear scaling (RANGE LINEAR)	Function not available	

Measurement of spectrum due to transients

The spectrum due to transients is defined as the spectrum that results from carrier modulation and switching of the burst signal. This spectrum is measured with the aid of the Max Peak detector and Max Hold. The assumption is that the spectrum due to switching of the burst signal is the more significant.

The FS-K5 offers two different ways of measuring the spectrum due to transients:

- General measurement in the frequency domain (*FREQUENCY SWEEP*) and
- Measurement of the spectrum due to transients in the time domain with discrete frequencies ($\pm n \times 200$ kHz from carrier frequency) and output of the measured values in a list (the *START LIST* softkey).

Requirements for the measuring signal

The burst pattern must include at least one rising and one falling edge


Quick reference guide

Without explaining them, the quick reference guide presents the settings required for measurement in a practical sequence. The precondition for the procedure as described here is that the presets are activated (*PRESET* key) before the procedure starts.

Setting	Operation
Set frequency	FREQ key
Start application	GSM-MS hotkey
Enter external attenuation Default: 0 dB	<i>GENERAL SETTINGS</i> softkey <i>EXTERNAL ATTEN</i> softkey
Fine-tune level to within approx. 3 dB	<i>REF LEVEL</i> softkey → Position burst in mask
Start measurement	<i>START LIST</i> softkey

Measurement

GSM MS menu

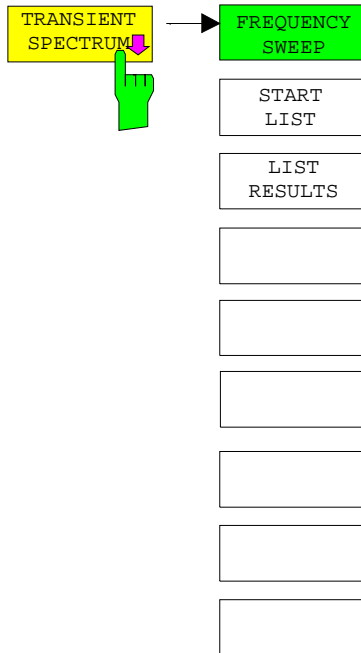

Press the *TRANSIENT SPECTRUM* softkey to call the submenu for measuring the spectrum due to transients. In the default setting, the FSP measures the spectrum due to transients in the frequency domain (*FREQUENCY SWEEP*).

Alternatively and precisely in accordance with the standard, *START LIST* can be used to measure in the time domain. In this mode, the FSP measures the spectrum due to transients in the time domain at the frequency offsets required by the GSM standard and presents the results in list form. You can use *LIST RESULTS* at any time to view the most recent measurement in the time domain.


When the *TRANSIENT SPECTRUM* menu is opened for the first time, the parameters are set in accordance with the GSM standards (see Additional information for other settings):

Span	3.6 MHz
Resolution bandwidth	30 kHz
Video bandwidth	100 kHz
Detector/trace	Max peak, max hold
Sweep time	2.5s
Sweep count	0 (floating trace averaging)

The settings correspond to those made when the *FREQUENCY SWEEP* softkey is pressed. The parameter settings can be changed.

They are not reset until you exit TRA measurement (by starting another measurement or exiting the GSM-MS), or press the *FREQUENCY SWEEP* softkey.

When you start list measurement (*START LIST*), the parameter settings used are those currently valid (with the exception of *SPAN*).



Press the *FREQUENCY SWEEP* softkey to start continuous measurement of the spectrum due to transients in the "Continuous Sweep" mode (see Figure 2-14).

All the parameters used in TRA measurement are reset to their default values (see above, the *TRANSIENT SPECTRUM* softkey).

IEC/IEEE bus commands

```
INSTRument[:SElect] MGSM
CONFIGure:MTYPE GSMK
CONFIGure:BURSt:SWITChing[:IMMediate]
SWEep:COUNT 20
INITiate:IMMediate; *WAI
CALCulate1:LIMit1:NAME 'TRAU_G'
CALCulate1:LIMit1:FAIL?
```

Note: In remote-control mode, the user must assign the following name to the limit line before it is used:

```
CALCulate1:LIMit1:NAME 'TRAU_G' or 'TRAU_E'
```


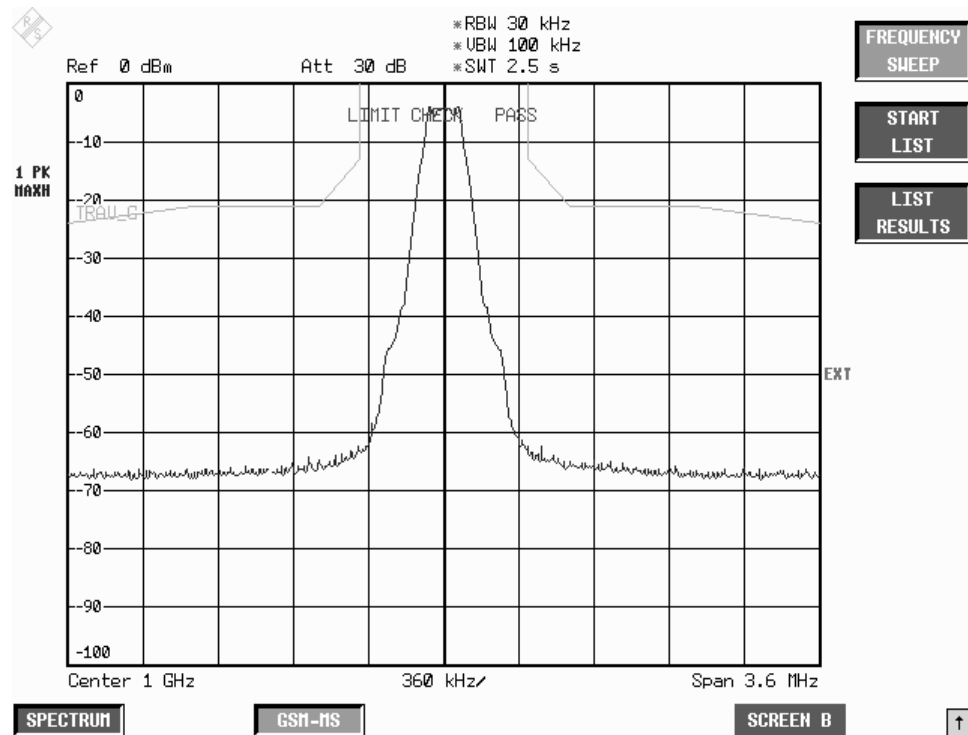


Figure 2-14 Spectrum due to transients in frequency domain



Press the *START LIST* softkey to start measurement of the spectrum due to transients in the time domain (Zero Span).

The analyzer measures at the following pegged offsets from the channel frequency:

± 400 kHz, ± 600 kHz, ± 1200 kHz, ± 1800 kHz.

You can choose the resolution bandwidth, but note that this bandwidth is reset to 30 kHz when you press the *FREQUENCY SWEEP* softkey.

Measurement is performed in the time domain with the MAX PEAK detector. The video signal, digitized on the intermediate frequency and filtered with a bandwidth of 30 kHz and bandwidth-limited by the video filter, is measured by the max peak detector during the selected time. The time depends on the number of averages required (*SWEEP COUNT*= number of TDMA bursts to be averaged).

While measurement is in progress, the measured values at the various frequency offsets are displayed briefly in the measurement diagram. The curve reflects progress through the measurement procedure (see Figure 2-15).

In the GSM standards, the mobile's power class is the decisive factor for selecting the right limit line. Consequently, the limit lines specified here are definitive.

When the measuring sequence is completed, the results are displayed in list form (see Figure 2-16). The values marked with an x violate the margin. The values marked with an asterisk (*) violate the limit value.

IEC/IEEE bus commands

```
INSTRument[:SELEct] MGSM
CONFigure:BURSt:SWITChing[:IMMediate]
SWEep:COUNT 20
CONFigure:BURSt:SWITChing[:IMMediate]
```

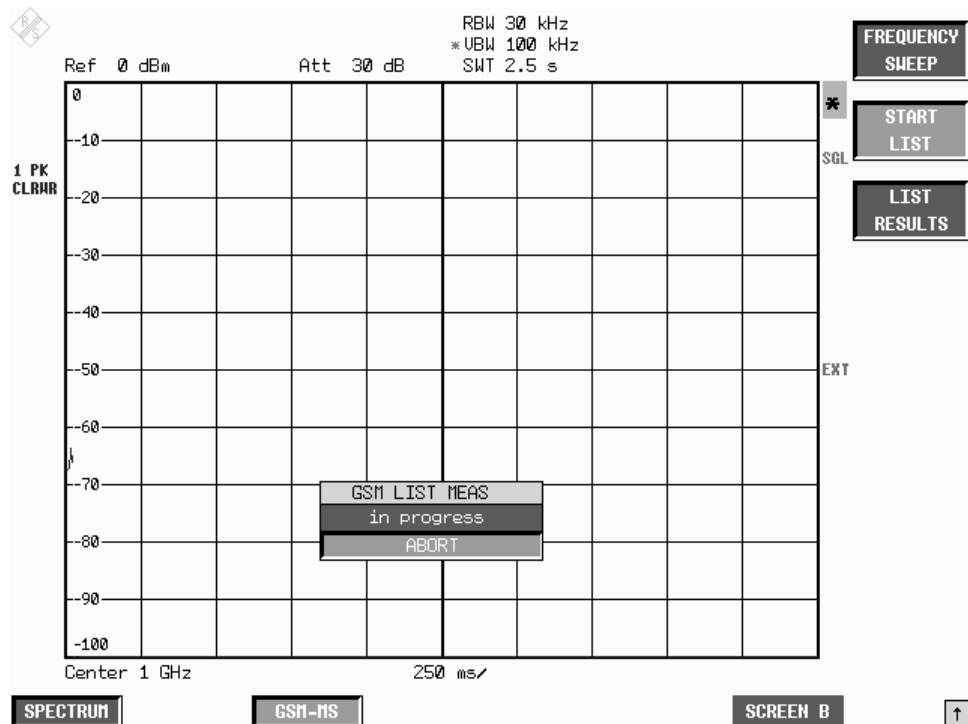


Figure 2-15 Time domain measurement in progress


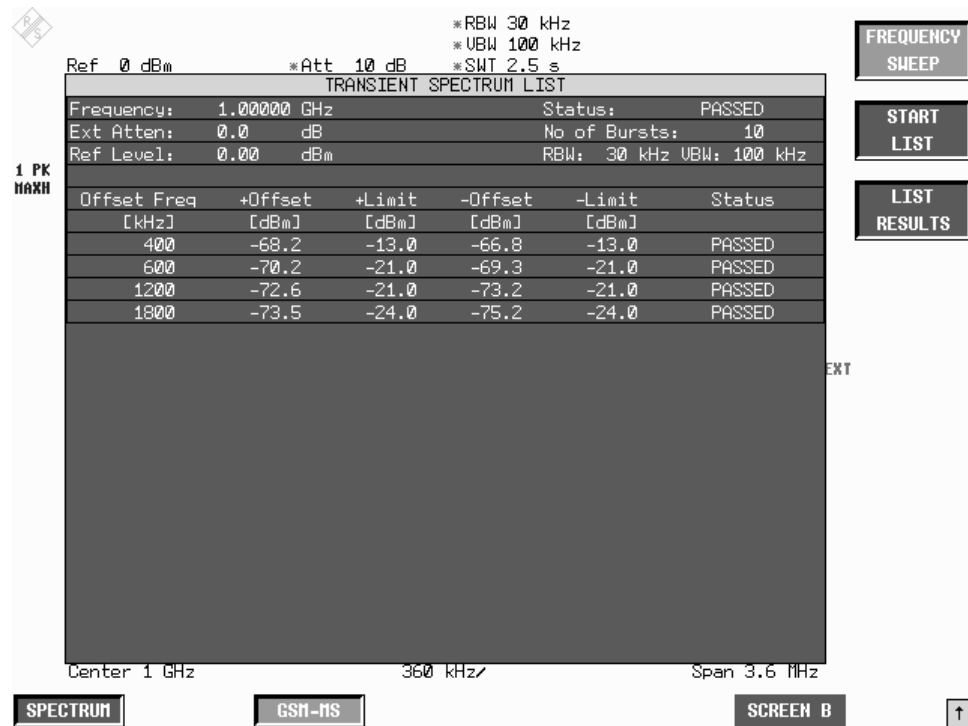


Figure 2-16 Results of time domain measurement



Press the *LIST RESULTS* softkey to view the most recent results in the list of measurements triggered by *START LIST*.

IEC/IEEE bus command FETCh:SPECTrum:SWITChing[:ALL]?



Press the *SPECTRUM* hotkey to launch the Analyzer mode. The following settings are changed automatically; all other settings are taken from the GSM MS mode:

Trigger offset = OFF
 Trigger = GSM trigger

IEC/IEEE bus command INSTRument[:SElect] SANalyzer

Test hints

Measuring with slow frequency hopping

Bear the following in mind when the DUT is operating in slow frequency hopping mode:

- The default sweep time ensures that at least one frame is recorded for each pixel of the screen. This sweep time must be increased by a factor of three if the hopping period is three frames (B M T).

Number of bursts to be measured -> **NO OF BURSTS**

The default value when you launch the application is *NO OF BURSTS* (= *SWEEP COUNT*) = 0.

This setting produces a floating average over every 10 bursts (see FSP manual). You can change *NO OF BURSTS* if you want to measure across a different number of bursts (e.g. 200).

The settings for *NO OF BURSTS* / *SWEEP COUNT* apply to all measurements (they are not measurement-specific, in other words).

You also have the option of using *SINGLE* or *CONTINUOUS SWEEP MODE* in the same way as in the Analyzer mode.

Additional information

The tables below show the default settings that apply after you press the *FREQUENCY SWEEP* or *START LIST* softkey.

FREQUENCY SWEEP measurement:

Parameter	Setting	Note
MODE	Frequency sweep span 3.6 MHz	
SWEEP MODE	CONT under local control SINGLE under remote control	
RBW	30 kHz, NORM	3 dB sweep filters are used.
VBW	100 kHz	(Coupling off)
SWT	2.5 s	At least 1 frame per pixel: $4.6154 \text{ ms} * 501 = 2.31\text{s}$
TRIG	FREE RUN	
TRACE 1	MAX HOLD	
DETECTOR 1	MAX PEAK	
TRACE 2	BLANK	
TRACE 3	BLANK	
Limit Line	TRAU_G	X relative to center frequency (CF), X values symmetrical with CF, so no X offset, see below Y absolute level Y offset has no effect
Limit Checks	ON	
Limit X OFFSET	0	0, because symmetrical with CF
Limit Y OFFSET	0	No effect, because Y absolute

LIST measurement:

Parameter	Setting	Note
SWEEP MODE	SINGLE	
SWEEP COUNT	Use as is, set to 10 if 0	
SPAN	ZERO SPAN	
TRIG	FREE RUN	
RBW	Selectable; default is 30 kHz	
VBW	Selectable; default is 100 kHz	
SWEEP TIME	Sweep time/501	In other words list measurement is dependent on the sweep time of the frequency sweep
REF LEVEL POSITION	100%	Preset value
Y axis	LOG_100DB	
TRACE 1	MAX HOLD	
DETECTOR 1	MAX PEAK	
TRACE 2, 3	All settings possible	
Limit Line	TRAU_G	X relative to center frequency (CF), X values symmetrical with CF, so no X offset, see below Y absolute level Y offset has no effect
Marker 1	Normal marker on trace 1	

Availability of FSP keys and softkeys

Parameter	Availability	Note
FFT filter (FILTER TYPE FFT)	Function not available	
Amplitude distribution (SIGNAL STATISTICS)	Function not available	
Channel and adjacent channel power measurements (CHAN POWER / ACP)	Function not available	
Measurement of occupied bandwidth (OCCUPIED BANDWIDTH)	Function not available	
Trigger (VIDEO, IF POWER, EXTERN, FREE RUN, RF POWER)	Function not available	The GSM trigger settings are used
Gated sweep mode (GATED TRIGGER, GATE SETTINGS)	Function not available	
On-screen presentation (SPLIT SCREEN, REF LEVEL COUPLED, CENTER A = MARKER B, CENTER B = MARKER A, SCREEN B,)	Function not available	
Unit (UNIT menu)	Function not available	
Linear scaling (RANGE LINEAR)	Function not available	

Measurement of spurious

Measuring spurious entails examining the entire frequency band (30 MHz to 12.75 GHz or upper frequency limit of the analyzer) for interference.

Note: *The center frequency is changed automatically and restored to its original level when measurement is completed.*

Requirements for the measuring signal

All slots active (if, for example, only one slot is active, the measuring time must be extended by a factor of eight).


Quick reference guide

Without explaining them, the quick reference guide presents the settings required for measurement in a practical sequence. The precondition for the procedure as described here is that the presets are activated (*PRESET* key) before the procedure starts.

Setting	Operation
Start application	GSM-MS hotkey
Enter external attenuation Default: 0 dB	GENERAL SETTINGS softkey EXTERNAL ATTEN softkey
Fine-tune level to within approx. 1 dB	REF LEVEL softkey → Position burst in mask In case of measurements far off the carrier the reference level can be reduced further.
Start measurement	PREV hotkey SPURIOUS softkey

Measurement

GSM MS menu



The *SPURIOUS* softkey starts measurement of the spurious in the frequency sweep (30 MHz to 12.75 GHz). The limit lines are displayed.

IEC/IEEE bus commands

```
INSTRument[:SElect] MGSM
CONFigure:MTYPe GSMK
CONFigure:SPURious[:IMMediate]
SWEep:COUNT 20
INITiate:IMMediate; *WAI
```

Result queries:

```
CALCulate:MARKer ON
CALCulate:MARKer:MAXimum
CALCulate:MARKer:MAXimum
(the marker is at the largest
spurious emission)
CALCulate:MARKer:MAXimum
```

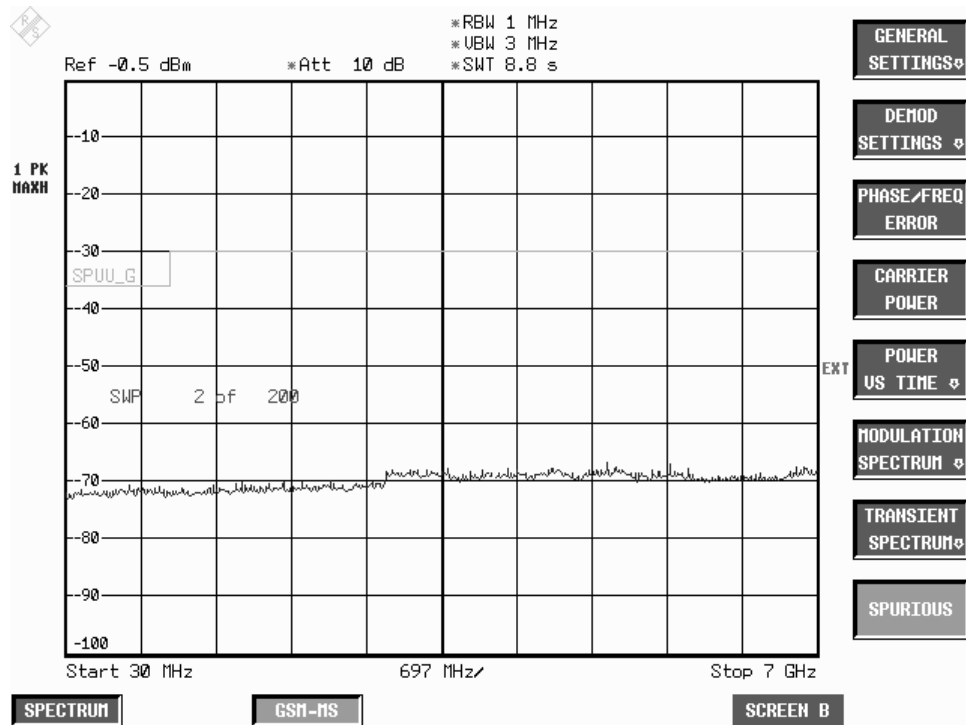


Figure 2-17 Measurement of spurious



Press the *SPECTRUM* hotkey to launch the Analyzer mode. The following settings are changed automatically; all other settings are taken from the GSM MS mode:

Center frequency = The center frequency set before spurious measurements commenced is restored.

Trigger = GSM trigger

```
IEC/IEEE bus command INSTRument[:SElect] SANalyzer
```


Test hints

Number of bursts to be measured -> **NO OF BURSTS**

The default value when you launch the application is *NO OF BURSTS* (= *SWEEP COUNT*) = 0.

This setting produces a floating average over every 10 bursts (see FSP User Guide). You can change *NO OF BURSTS* if you want to measure across a different number of bursts (e.g. 200).

The settings for *NO OF BURSTS* / *SWEEP COUNT* apply to all measurements (they are not measurement-specific, in other words).

You also have the option of using *SINGLE* or *CONTINUOUS SWEEP MODE* in the same way as in the Analyzer mode.

Additional information

Parameter	Setting	Note
MODE	Frequency sweep	
SWEEP MODE	CONT under local control SINGLE under remote control	
START FREQ	30 MHz	In other words the center frequency is changed with this SPU measurement setting
STOP FREQ	Minimum of 12.75 GHz and the max. stop frequency of the analyzer	
RBW	1 MHz	
VBW	3 MHz	
SWT	(5 s / 3.97 GHz) * SPAN	
REF LEVEL POSITION	100%	Preset value
TRIG	Free Run	
TRACE 1	MAX HOLD	
DETECTOR 1	MAX PEAK	
TRACE 2	BLANK	
DETECTOR 2		
TRACE 3	BLANK	
DETECTOR 3		
Limit Line	SPUU_G	X abs. frequency, so X offset has no effect Y abs. level, so Y offset has no effect
Limit Checks	OFF	
Limit X OFFSET	0	No effect, because X absolute
Limit Y OFFSET	0	No effect, because Y absolute

Availability of FSP keys and softkeys

Parameter	Availability	Note
FFT filter (FILTER TYPE FFT)	Function not available	
Amplitude distribution (SIGNAL STATISTICS)	Function not available	
Channel and adjacent channel power measurements (CHAN POWER / ACP)	Function not available	
Measurement of occupied bandwidth (OCCUPIED BANDWIDTH)	Function not available	
Trigger (VIDEO, IF POWER, EXTERN, FREE RUN, RF POWER)	Function not available	The GSM trigger settings are used
Gated sweep mode (GATED TRIGGER, GATE SETTINGS)	Function not available	
Time domain mode (ZERO SPAN)	Function not available	Measurement is in frequency domain
On-screen presentation (SPLIT SCREEN, REF LEVEL COUPLED, CENTER A = MARKER B, CENTER B = MARKER A, SCREEN B,)	Function not available	

Contents - Chapter 6 "Remote Control"

3 Remote Control	3.1
Description of Commands	3.1
CALCulate:DELTamarker Subsystem.....	3.1
CALCulate:LIMit Subsystem	3.1
CALCulate:MARKer Subsystem.....	3.2
CALCulate:MARKer:COUNt Subsystem.....	3.2
CALCulate:MARKer:FUNcTion Subsystem	3.2
CALCulate:MARKer:FUNcTion:POWer Subsystem.....	3.3
CALCulate:MARKer:FUNcTion:SUMMary Subsystem	3.3
CALCulate:STATistics Subsystem	3.3
CALCulate:UNIT Subsystem.....	3.3
CONFigure Subsystem.....	3.4
CONFigure:BURSt Subsystem	3.7
CONFigure:SPECtrum Subsystem	3.9
CONFigure:SPURious Subsystem.....	3.10
DISPlay Subsystem.....	3.11
FETCh Subsystem	3.12
FETCh:BURSt Subsystem	3.12
FETCh:PTEMplate Subsystem	3.22
FETCh:SPECtrum Subsystem	3.22
INSTrument Subsystem	3.25
READ Subsystem.....	3.26
READ:BURSt Subsystem	3.26
READ:SPECtrum Subsystem	3.36
SENSE Subsystem	3.39
SENSE:BANDwidth Subsystem	3.39
SENSE:CORREction Subsystem	3.39
SENSE:DETEctor Subsystem	3.39
SENSE:FREQUency Subsystem	3.40
SENSE:LIST Subsystem	3.40
SENSE:MPOWer Subsystem.....	3.41
SENSE:POWer Subsystem.....	3.41
SENSE:SWEep Subsystem	3.41
TRACe:IQ Subsystem	3.41
TRIGger Subsystem.....	3.42
UNIT Subsystem	3.43
Alphabetical List of Commands	3.44
Table of Softkeys and Hotkeys with IEC/IEEE-Bus Command Assignment	3.48
Hotkey GSM MS.....	3.48
LINES Key	3.51
Status Reporting Registers for GSM Measurements	3.52
Overview of Status Registers	3.52
STATus:QUEStionable Register	3.53
STATus-QUEStionable:SYNC Register	3.54

3 Remote Control

The following sections are to complete and update Chapters 5 and 6 of the FSP manual.

The "Description of Commands" section includes the new commands valid especially for the FS-K5 application, and all commands not available or available only with restrictions in the GSM MS mode.

Commands come in alphabetical order in separate lists in the "List of Commands" section.

The "Status Reporting Registers for GSM Measurements" section provides information on the bit assignment in the STATus:QUEStionable and STATus:QUEStionable:SYNC registers.

The FS-K5 commands were generated with a view to maximum compatibility with those of the FSE-K10 application for the FSE family. Some commands were included in the command set only for reasons of compatibility.

In the description of measurements in Chapter 2, the corresponding IEC/IEEE-bus commands are stated for each softkey.

Note: All GSM measurements are performed in screen A. Therefore, commands carrying a numerical suffix selecting the screen should start either with the numerical suffix 1 (i.e. CALCulate1) or without a numerical suffix (i.e. CALCulate).

Description of Commands

CALCulate:DELTamarker Subsystem

CALCulate<1|2>:DELTamarker<1...4>:FUNctio:n:PN0ise[:STATe] ON | OFF

Note: This command is not available in GSM MS mode.

CALCulate<1|2>:DELTamarker<1...4>:FUNctio:n:PN0ise:RESult?

Note: This command is not available in GSM MS mode.

CALCulate:LIMit Subsystem

Note: - This command is not available for GSM MS measurements MAC and PFE.

- The names of the limit lines are fixed. The names must be assigned by the user prior to their use:

```
CALCulate1:LIMit1:NAME 'xxxU_y' or
CALCulate1:LIMit2:NAME 'xxxL_y'
```

```
xxx = measurement          (PVT / CPW / MOD /TRA)
U   = upper limit line     (PVT / CPW / MOD / TRA)
L   = lower limit line     (PVT / CPW)
y   = modulation type      (_G = GMSK / _E = EDGE)
```

```
Query:  CALC1:LIM1:FAIL?
        CALC1:LIM2:FAIL?
```

```
Example:
PVTU_G = lower limit line for Power versus Timemeasurement,
        Modulation type EDGE
```

CALCulate:MARKer Subsystem

CALCulate:MARKer:COUNT Subsystem

CALCulate<1|2>:MARKer<1...4>:COUNT ON | OFF

Note: This command is not available for GSM MS measurements MAC, PFE and PVT.

CALCulate<1|2>:MARKer<1...4>:COUNT:RESolution 0.1 | 1 | 10 | 100 | 1000 | 10000 Hz

Note: This command is not available for GSM MS measurements MAC, PFE and PVT.

CALCulate<1|2>:MARKer<1...4>:COUNT:FREQuency?

Note: This command is not available for GSM MS measurements MAC, PFE and PVT.

CALCulate:MARKer:FUNCTion Subsystem

CALCulate<1|2>:MARKer<1...4>:FUNCTion:NDBDown <numeric_value>

Note: This command is not available for GSM MS measurements MAC, PFE and PVT.

CALCulate<1|2>:MARKer<1...4>:FUNCTion:NDBDown:STATe ON | OFF

Note: This command is not available for GSM MS measurements MAC, PFE and PVT.

CALCulate<1|2>:MARKer<1...4>:FUNCTion:NDBDown:RESult?

Note: This command is not available for GSM MS measurements MAC, PFE and PVT.

CALCulate<1|2>:MARKer<1...4>:FUNCTion:NDBDown:FREQuency?

Note: This command is not available for GSM MS measurements MAC, PFE and PVT.

CALCulate<1|2>:MARKer<1...4>:FUNCTion:NOISe[:STATe] ON | OFF

Note: This command is not available for GSM MS measurements MAC, PFE and PVT.

CALCulate<1|2>:MARKer<1...4>:FUNCTion:NOISe:RESult?

Note: This command is not available for GSM MS measurements MAC, PFE and PVT.

CALCulate<1|2>:MARKer<1...4>:FUNCTion:TOI[:STATe] ON | OFF

Note: This command is not available for GSM MS measurements MAC, PFE and PVT.

CALCulate<1|2>:MARKer<1...4>:FUNCTion:TOI:RESult?

Note: This command is not available for GSM MS measurements MAC, PFE and CPW.

CALCulate:MARKer:FUNCTion:POWER Subsystem

Note : The commands of this subsystem are not available in GSM MS mode.

CALCulate:MARKer:FUNCTion:SUMMery Subsystem

CALCulate<1|2>:MARKer<1...4>:FUNCTion:SUMMery:MODE ABSolute | RELative

Note: This command is not available for GSM MS measurements MAC and PFE.

CALCulate<1|2>:MARKer<1...4>:FUNCTion:SUMMery:REFerence:AUTO ONCE

Note: This command is not available for GSM MS measurements MAC and PFE.

CALCulate:STATistics Subsystem

Note : The commands of this subsystem are not available in GSM MS mode.

CALCulate:UNIT Subsystem

Note : This command is not available in GSM MS mode.
In GSM measurements the unit is prescribed: either DBM (power measurement) or DEG (phase error measurement) have to be used.

CONFigure Subsystem

The CONFigure subsystem contains commands for configuring complex measurement tasks, like those provided by the firmware application GSM MS Analyzer (FS-K5). The CONFigure subsystem is closely linked to the functions of the FETCH and READ subsystems, where the measurement cycles are started and/or the results of the measurements are queried.

The purpose of the following commands is configuring the GSM MS mode (firmware application FS-K5) for mobiles corresponding to the standards P-GSM, E-GSM, R-GSM, DCS1800 or PCS1900.

Note: Beside the notation *CONFigure:<command>* the FSP also supports the notation *CONFigure:MS:<command>* for reasons of compatibility with the FSE family of instruments.

COMMAND	PARAMETER	UNIT	COMMENT
CONFigure			Option FS-K5
:CHANnel			
:TSC	<numeric_value> USER	--	
:USER	<string>	--	
:RESTore	--		no query
:MTYPe	GMSK EDGE		

CONFigure:CHANnel:TSC <numeric_value> | USER

This command selects the midamble used by the mobile. With selection USER, the user defined midamble set with command *CONFigure:CHANnel:TSC:USER* is used. It is only available in GSM MS mode (FS-K5).

Note: The selected midamble is only significant for GSM MS measurements MAC, PFE and PVT.

Parameter: <numeric_value> ::= 0..7 (training sequence for normal burst)
USER (the TSC set with *CONF:CHAN:TSC:USER* is used)

Example: "INST MGSM" Switches FSP to GSM MS mode
"CONF:CHAN:TSC 3" selects TSC 3

Features: *RST value: 0
SCPI: device-specific

Mode: MS

CONFigure:MTYPE GSMK | EDGE

This command selects modulation typeGMSK or EDGE.

A running GSM measurement is aborted when the modulation type is changed. It has to be explicitly selected again by using one of the CONFigure commands.

Example:	"INST M GSM"	Switches the instrument to GSM MS mode
	"CONF:MTYP EDGE"	Selects modulation type EDGE (8PSK)
	"CONF:BURS:MACC"	Selects the MAC measurement
	"SWE:COUN 20"	Sets the number of bursts
	"INIT:IMM;*WAI"	Starts the measurement

Features:	*RST value:	GMSK
	SCPI:	device-specific

Mode:	MS
--------------	----

CONFigure:BURSt Subsystem

This subsystem provides the commands for configuring the measurements in the GSM MS mode (option FS-K5) which are performed on individual bursts:

- Carrier Power (CPW),
- Modulation Accuracy (MAC),
- Phase-Frequency Error (PFE),
- Power vs. Time (PVT).

COMMAND	PARAMETER	UNIT	COMMENT
CONFigure			Option FS-K5
:BURSt			
:PFERror			
[:IMMEDIATE]		--	no query
:MACCuracy			
[:IMMEDIATE]		--	no query
:POWer			
[:IMMEDIATE]		--	no query
:PTEMplate			
[:IMMEDIATE]		--	no query
:SELEct	FULL TOP RISing FALLing		

CONFigure:BURSt:PFERror[:IMMEDIATE]

This command selects measurement of the phase and frequency error of the mobile (PFE).

When the measurement is started the analyzer is automatically set to single sweep.

This command is only available in GSM MS mode (FS-K5) and when modulation type GMSK is selected (CONFigure:MTYPE GMSK).

Example:

```
"INST MGSM"           switches the FSP to GSM MS mode
"CONF:MTYP GMSK"      Selects modulation type GMSK
"CONF:BURS:PFER"      selects the PFE measurement
"SWE:COUN 20"         sets the number of bursts
"INIT:IMM;*WAI"       executes the measurement
```

Features:

```
*RST value:  --
SCPI:        device-specific
```

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

CONFigure:BURSt:MACCuracy[:IMMEDIATE]

This command selects measurement of the modulation accuracy of the mobile (MAC).

When the measurement is started the analyzer is automatically set to single sweep.

This command is only available in GSM MS mode (option FS-K5) and when modulation type EDGE (CONFigure:MTYPE EDGE) is selected.

Example:

```
"INST MGSM"           Switches the instrument to GSM MS mode
"CONF:MTYP EDGE"      Selects modulation type EDGE (8PSK)
"CONF:BURS:MACC"      Selects the MAC measurement
"SWE:COUN 20"         Sets the number of bursts
"INIT:IMM;*WAI"       Starts the measurement
```

Features:

```
*RST value:  --
SCPI:        device-specific
```

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

CONFigure:BURSt:POWER[:IMMEDIATE]

This command selects measurement of the carrier power of the mobile (CPW).

When the measurement is started the analyzer is automatically set to single sweep.
This command is only available in GSM MS mode (FS-K5).

Example:

"INST M GSM"	switches the FSP to GSM MS mode
"CONF: BURS: POW"	selects the CPW measurement
"SWE: COUN 20"	sets the number of bursts
"INIT: IMM; *WAI"	executes the measurement

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

CONFigure:BURSt:PTEMplate[:IMMEDIATE]

This command selects measurement of power of the mobile vs. time (PVT).

When the measurement is started the analyzer is automatically set to single sweep.
This command is only available in GSM MS mode (FS-K5).

Example:

"INST M GSM"	switches the FSP to GSM MS mode
"CONF: BURS: PTEM"	selects the PVT measurement
"SWE: COUN 20"	sets the number of bursts
"INIT: IMM; *WAI"	executes the measurement

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

CONFigure:BURSt:PTEMplate:SElect FULL | TOP | RISing | FALLing

This command defines the burst section to be measured.

FULL	: full burst	
RISing	: rising edge	
FALLing	: falling edge	
TOP	: top high resolution,	top of burst with smaller display range and therefore higher resolution on y-axis (power axis)

This command is only available in GSM MS mode (FS-K5).

Example:

"INST M GSM"	switches the FSP to GSM MS mode
"CONF: BURS: PTEM"	selects the PVT measurement
"CONF: BURS: PTEM: SEL TOP"	selects the top high resolution mode
"SWE: COUN 20"	sets the number of bursts
"INIT: IMM; *WAI"	executes the measurement

Features:

*RST value:	FULL
SCPI:	device-specific

Mode: MS

CONFigure:SPECtrum Subsystem

This subsystem provides the commands for configuring the measurements in the in the GSM MS Analyzer mode (FS-K5) used to determine the power of the spectral contributions due to modulation and switching:

- spectrum due to modulation (MOD)
- spectrum due to transients (TRA).

COMMAND	PARAMETER	UNIT	COMMENT
CONFigure			Option FS-K5
:SPECtrum			
:MODulation			
[:IMMEDIATE]	--	--	no query
:SWITching			
[:IMMEDIATE]	--	--	no query

CONFigure:SPECtrum:MODulation[:IMMEDIATE]

This command selects measurement of the spectrum due to modulation (MOD).

Measurement in the frequency domain is directly started with command `INITate[:IMMEDIATE]`, measurement in the time domain with command `READ:SPECtrum:MODulation[:ALL]? .`

When the measurement is started the analyzer is automatically set to single sweep. This command is only available in GSM MS mode (FS-K5).

Example:

"INST M GSM"	switches the FSP to GSM MS mode
"CONF : SPEC : MOD"	selects the MOD measurement
"SWE : COUN 20"	sets the number of bursts
"INIT : IMM ; *WAI"	executes the overview measurement

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

CONFigure:SPECtrum:SWITching[:IMMEDIATE]

This command selects measurement of the spectrum due to switching transients (TRA).

Measurement in the frequency domain is directly started with command `INITate[:IMMEDIATE]`, measurement in the time domain with command `READ:SPECtrum:MODulation[:ALL]? .`

When the measurement is started the analyzer is automatically set to single sweep. This command is only available in GSM MS mode (FS-K5).

Example:

"INST M GSM"	switches the FSP to GSM MS mode
"CONF : SPEC : SWIT"	selects the TRA measurement
"SWE : COUN 20"	sets the number of bursts
"INIT : IMM ; *WAI"	executes the overview measurement

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

CONFigure:SPURious Subsystem

This subsystem provides commands for configuring the measurements in the GSM MS (FS-K5) Analyzer mode used for measuring the power of spurious emissions (SPU).

COMMAND	PARAMETER	UNIT	COMMENT
CONFigure :SPURious [:IMMEDIATE]	--	--	Option FS-K5 no query

CONFigure:SPURious[:IMMEDIATE]

This command selects measurement of spurious emissions (SPU).

When the measurement is started the analyzer is automatically set to single sweep.

This command is only available in GSM MS mode (FS-K5)

Example:

"INST M GSM"	switches the FSP to GSM MS mode
"CONF : SPUR"	selects the SPU measurement
"SWE : COUN 20"	sets the number of bursts
"INIT : IMM ; *WAI"	executes the overview measurement

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

DISPlay Subsystem

DISPlay:FORMat SINGLE | SPLit

Note : *This command is not available in GSM MS mode. For GSM MS mode, the display is always set to FULL SCREEN.*

DISPlay[:WINDow<1|2>]:SElect

Note : *This command is not available in GSM MS mode. In GSM MS mode, the display is always set to FULL SCREEN, which corresponds to SCREEN A and thus to WINDow1. WINDow1 is automatically selected when the GSM MS mode is activated with command INSTRument:SElect:M GSM.*

DISPlay[:WINDow<1|2>]:TRACe<1...3>:Y:SPACing LINear | LOGarithmic

Note : *This command is not available in GSM MS mode.*

FETCh Subsystem

The FETCh subsystem contains commands for reading out results of complex measurement tasks like those provided by the GSM MS mode (FS-K5). The FETCh subsystem is closely linked to the functions of the CONFigure and READ subsystems, where the measurement sequences are configured, the measurements are started and their results are queried.

FETCh:BURSt Subsystem

This subsystem provides the commands for reading out results of measurements in GSM MS (option FS-K5) Analyzer mode, which are performed on individual bursts without starting the measurement by themselves:

- Phase-Frequency Error (PFE)
- Modulation Accuracy (MAC),
- Power vs Time (PVT),

COMMAND	PARAMETER	UNIT	COMMENT
FETCh			Option FS-K5
:BURSt			
:PERRor			
:RMS			
:AVERage?	--	deg	query only
:MAXimum?	--	deg	query only
:PEAK			
:AVERage?	--	deg	query only
:MAXimum?	--	deg	query only
:FERRor			
:AVERage?	--	Hz	query only
:MAXimum?	--	Hz	query only
:PTEmpIate			
:REFerence?	--	--	query only
:MACCuracy			
:RMS			
:AVERage?	--		query only
:MAXimum?	--		query only
:PEAK			
:AVERage?	--		query only
:MAXimum?	--		query only
:OSUPpress			
:AVERage?	--		query only
:MAXimum?	--		query only
:PERCentile			
:AVERage?	--		query only
:MAXimum?	--		query only
:FREQuency			
:AVERage?	--		query only
:MAXimum?	--		query only

FETCh:BURSt:PERRor:RMS:AVERage?

This command reads out the average of the RMS measurement of the phase error taken over the selected number of bursts.

This command is only available in GSM MS mode (FS-K5) and when measurement of the phase/frequency error is selected (see :CONFIgure:BURSt:PFERror).

Example:

"INST MGSM"	switches the FSP to GSM MS mode
"CONF:MTYP GMSK"	selects the modulations type GMSK
"CONF:BURS:PFER"	selects the PFE measurements
"SWE:COUN 20"	sets the number of bursts
"INIT:IMM;*WAI"	executes the measurement
"FETC:BURS:PERR:RMS:AVER?"	queries the result

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:BURSt:PERRor:RMS:MAXimum?

This command reads out the maximum of the RMS measurement of the phase error taken over the selected number of bursts.

This command is only available in GSM MS mode (FS-K5) and when measurement of the phase/frequency error is selected (see :CONFIgure:BURSt:PFERror).

Example:

"INST MGSM"	switches the FSP to GSM MS mode
"CONF:MTYP GMSK"	selects the modulation type GMSK
"CONF:BURS:PFER"	selects the PFE measurements
"SWE:COUN 20"	sets the number of bursts
"INIT:IMM;*WAI"	executes the measurement
"FETC:BURS:PERR:RMS:MAX?"	queries the result

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:BURSt:PERRor:PEAK:AVERage?

This command reads out the average of the PEAK measurement of the phase error taken over the selected number of bursts.

This command is only available in GSM MS mode (FS-K5) and when measurement of the phase/frequency error is selected (see :CONFIgure:BURSt:PFERror).

Example:

"INST MGSM"	switches the FSP to GSM MS mode
"CONF:MTYP GMSK"	selects the modulation type GMSK
"CONF:BURS:PFER"	selects the PFE measurement
"SWE:COUN 20"	sets the number of bursts
"INIT:IMM;*WAI"	executes the measurement
"FETC:BURS:PERR:PEAK:AVER?"	queries the result

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:BURSt:PERRor:PEAK:MAXimum?

This command reads out the maximum of the PEAK measurement of the phase error taken over the selected number of bursts.

This command is only available in GSM MS mode (FS-K5) and when measurement of the phase/frequency error is selected (see :CONFIgure:BURSt:PFERror).

Example:

"INST MGSM"	switches the FSP to GSM MS mode
"CONF:MTYP GMSK"	selects the modulation type GMSK
"CONF:BURS:PFER"	selects the PFE measurement
"SWE:COUN 20"	sets the number of bursts
"INIT:IMM;*WAI"	executes the measurement
"FETC:BURS:PERR:PEAK:MAX?"	queries the result

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:BURSt:FERRor:AVERage?

This command reads out the average of the frequency error measurement taken over the selected number of bursts.

This command is only available in GSM MS mode (FS-K5) and when measurement of the phase/frequency error is selected (see :CONFIgure:BURSt:PFERror).

Example:

"INST MGSM"	switches the FSP to GSM MS mode
"CONF:MTYP GMSK"	selects the modulation type GMSK
"CONF:BURS:PFER"	selects the PFE measurement
"SWE:COUN 20"	sets the number of bursts
"INIT:IMM;*WAI"	executes the measurement
"FETC:BURS:FERR:AVER?"	queries the result

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:BURSt:FERRor:MAXimum?

This command reads out the maximum of the frequency error measurement taken over the selected number of bursts.

This command is only available in GSM MS mode (FS-K5) and when measurement of the phase/frequency error is selected (see :CONFIgure:BURSt:PFERror).

Example:

"INST MGSM"	switches the FSP to GSM MS mode
"CONF:MTYP GMSK"	selects the modulation type GMSK
"CONF:BURS:PFER"	selects the PFE measurement
"SWE:COUN 20"	sets the number of bursts
"INIT:IMM;*WAI"	executes the measurement
"FETC:BURS:FERR:MAX?"	queries the result

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:BURSt:PTEMplate:REFerence?

This command reads out the results of the premeasurement of power vs. time (PVT).

The result is output as a list of partial result strings separated by ',' in the following (ASCII) format:

<Level1>,<Level2>,<RBW>

<Level1>: measured level

<Level2>: level corrected by means of the bandwidth

<RBW>: bandwidth

This command is only available in GSM MS mode (FS-K5) and when measurement of the power vs. time is selected (see :CONFIgure:BURSt:PTEMplate).

Example:

"INST MGSM"	switches the FSP to GSM MS mode
"CONF:MTYP GMSK"	selects the modulation type GMSK
"CONF:BURS:PTEM"	selects the PVT measurement
"READ:BURS:PTEM:REF?"	executes the premeasurement
"FETC:BURS:PTEM:REF?"	queries the result

Result: 43.2,43.2,1000000

Features: *RST value: --
SCPI: device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:BURSt:MACCuracy:RMS:AVERage?

This command reads out the average of the RMS-measurement of the error vector magnitude taken over the selected number of bursts.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (CONFIgure:BURSt:MACCuracy[:IMMEDIATE]).

Example:

"INST MGSM"	switches the instrument to GSM MS mode
"CONF:MTYP EDGE"	selects the modulation type EDGE (8PSK)
"CONF:BURS:MACC"	selects the MAC measurement
"SWE:COUN 20"	sets the number of bursts
"INIT:IMM;*WAI"	starts the measurement
"FETC:BURS:MACC:RMS:AVER?"	queries the result

Features: *RST value: --
SCPI: device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:BURSt:MACCuracy:RMS:MAXimum?

This command reads out the maximum of the RMS-measurement of the error vector magnitude taken over the selected number of bursts.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (see `CONFigure:BURSt:MACCuracy[:IMMEDIATE]`).

Example:	"INST MGSM"	Switches the instrument to GSM MS mode
	"CONF:MTYP EDGE"	Selects modulation type EDGE (8PSK)
	"CONF:BURS:MACC"	Selects the MAC measurement
	"SWE:COUN 20"	Sets the number of bursts
	"INIT:IMM;*WAI"	Starts the measurement
	"FETC:BURS:MACC:RMS:MAX?"	Queries the result

Features:	*RST value: --
	SCPI: device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:BURSt:MACCuracy:PEAK:AVERage?

This command reads out the average of the PEAK-measurement of the error vector magnitude taken over the selected number of bursts.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (see `CONFigure:BURSt:MACCuracy[:IMMEDIATE]`).

Example:	"INST MGSM"	Switches the instrument to GSM MS mode
	"CONF:MTYP EDGE"	Selects modulation type EDGE (8PSK)
	"CONF:BURS:MACC"	Selects the MAC measurement
	"SWE:COUN 20"	Sets the number of bursts
	"INIT:IMM;*WAI"	Starts the measurement
	"FETC:BURS:MACC:PEAK:AVER?"	Queries the result

Features:	*RST value: --
	SCPI: device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:BURSt:MACCuracy:PEAK:MAXimum?

This command reads out the maximum of the PEAK-measurement of the error vector magnitude taken over the selected number of bursts.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (see `CONFigure:BURSt:MACCuracy[:IMMEDIATE]`).

Example:

"INST M GSM"	Switches the instrument to GSM MS mode
"CONF:MTYP EDGE"	Selects modulation type EDGE (8PSK)
"CONF:BURS:MACC"	Selects the MAC measurement
"SWE:COUN 20"	Sets the number of bursts
"INIT:IMM;*WAI"	Starts the measurement
"FETC:BURS:MACC:PEAK:MAX?"	Queries the result

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:BURSt:MACCuracy:OSUPpress:AVERage?

This command reads out the average of the original offset suppression measurement taken over the selected number of bursts.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (see `CONFigure:BURSt:MACCuracy[:IMMEDIATE]`).

Example:

"INST M GSM"	Switches the instrument to GSM MS mode
"CONF:MTYP EDGE"	Selects modulation type EDGE (8PSK)
"CONF:BURS:MACC"	Selects the MAC measurement
"SWE:COUN 20"	Sets the number of bursts
"INIT:IMM;*WAI"	Starts the measurement
"FETC:BURS:MACC:OSUP:AVER?"	Queries the result

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:BURSt:MACCuracy:OSUPpress:MAXimum?

This command reads out the maximum of the original offset suppression measurement taken over the selected number of bursts.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (see `CONFigure:BURSt:MACCuracy[:IMMEDIATE]`).

Example:	"INST MGSM"	Switches the instrument to GSM MS mode
	"CONF:MTYP EDGE"	Selects modulation type EDGE (8PSK)
	"CONF:BURS:MACC"	Selects the MAC measurement
	"SWE:COUN 20"	Sets the number of bursts
	"INIT:IMM;*WAI"	Starts the measurement
	"FETC:BURS:MACC:OSUP:MAX?"	Queries the result

Features:	*RST value: --
	SCPI: device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:BURSt:MACCuracy:PERCentile:AVERage?

This command reads out the average of the 95% percentile measurement taken over the selected number of bursts.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (see `CONFigure:BURSt:MACCuracy[:IMMEDIATE]`).

Example:	"INST MGSM"	Switches the instrument to GSM MS mode
	"CONF:MTYP EDGE"	Selects modulation type EDGE (8PSK)
	"CONF:BURS:MACC"	Selects the MAC measurement
	"SWE:COUN 20"	Sets the number of bursts
	"INIT:IMM;*WAI"	Starts the measurement
	"FETC:BURS:MACC:PERC:AVER?"	Queries the result

Features:	*RST value: --
	SCPI: device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:BURSt:MACCuracy:PERCentile:MAXimum?

This command reads out the maximum of the 95% percentile measurement taken over the selected number of bursts.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (see `CONFigure:BURSt:MACCuracy[:IMMEDIATE]`).

Example:	"INST MGSM"	Switches the instrument to GSM MS mode
	"CONF:MTYP EDGE"	Selects modulation type EDGE (8PSK)
	"CONF:BURS:MACC"	Selects the MAC measurement
	"SWE:COUN 20"	Sets the number of bursts
	"INIT:IMM;*WAI"	Starts the measurement
	"FETC:BURS:MACC:PERC:MAX?"	Queries the result

Features:	*RST value:	--
	SCPI:	device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:BURSt:MACCuracy:FREQuency:AVERage?

This command reads out the average of the frequency error measurement taken over the selected number of bursts.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (see `CONFigure:BURSt:MACCuracy[:IMMEDIATE]`).

Example:	"INST MGSM"	Switches the instrument to GSM MS mode
	"CONF:MTYP EDGE"	Selects modulation type EDGE (8PSK)
	"CONF:BURS:MACC"	Selects the MAC measurement
	"SWE:COUN 20"	Sets the number of bursts
	"INIT:IMM;*WAI"	Starts the measurement
	"FETC:BURS:MACC:FREQ:AVER?"	Queries the result

Features:	*RST value:	--
	SCPI:	device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:BURSt:MACCuracy:FREQuency:MAXimum?

This command reads out the maximum of the frequency error measurement taken over the selected number of bursts.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (see `CONFigure:BURSt:MACCuracy[:IMMEDIATE]`).

Example:	"INST MGSM"	Switches the instrument to GSM MS mode
	"CONF:MTYP EDGE"	Selects modulation type EDGE (8PSK)
	"CONF:BURS:MACC"	Selects the MAC measurement
	"SWE:COUN 20"	Sets the number of bursts
	"INIT:IMM;*WAI"	Starts the measurement
	"FETC:BURS:MACC:FREQ:MAX?"	Queries the result

Features:	*RST value: --
	SCPI: device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:PTEMplate Subsystem

Note: This subsystem has been included only for reasons of compatibility with FSE-K10. It is replaced by the command FETCh:BURSt:PTEMplate:REFErence?. For a detailed description see command FETCh:BURSt:PTEMplate:REFErence?.

COMMAND	PARAMETER	UNIT	COMMENT
FETCh :PTEMplate :REFErence?	--	--	Option FS-K5 query only

FETCh:SPECTrum Subsystem

This subsystem provides the commands for reading out results of measurements in the GSM MS (FS-K5) mode, used to measure the power of the spectral contributions due to modulation and switching without first restarting a new measurement.

Spectrum due to modulation(MOD)

Spectrum due to transient (TRA)

COMMAND	PARAMETER	UNIT	COMMENT
FETCh :SPECTrum :MODulation [:ALL?] :REFErence? :SWITChing [:ALL?]	ARFCn -- --	-- -- --	Option FS-K5 query only query only query only

FETCh:SPECTrum:MODulation[:ALL]? ARFCn

This command reads out the result of the measurement of the modulation spectrum of the mobile.

Parameter: ARFCn::= ARFCN \pm 1.8 MHz

The result is output as a list of partial result strings separated by ',' in the following (ASCII) format:

```
<Index>,<Freq1>,<Freq2>,<Level>,<Limit>, <Abs/Rel>,<Status> [,
<Index>,<Freq1>,<Freq2>,<Level>,<Limit>, <Abs/Rel>,<Status>]...
```

where the parts between '['...' denote a partial result string that can be repeated n times.

<Index>: 0, if the partial result string characterizes a measurement range
current number <>0,
if the partial result string characterizes a single
limit excess.

<Freq1>: Start frequency of the measurement range or
frequency where the limit line is exceeded

<Freq2>: Start frequency of the measurement range or
frequency exceeding the measurement range. The value of
<Freq2> is equal to the value of <Freq1>, if either the
measurement is performed in the time domain or if the
partial result string contains a limit excess.

<Level>: Measured maximum level of the partial range or
measured level at the test point.

<Limit>: Limit in the partial range or at the test point
 <Abs/Rel>: ABS <Level> and <Limit> are in absolute units (dBm)
 REL <Level> and <Limit> are in relative units (dB)
 <Status>: Result of the limit check in character data form:
 PASSED no limit exceeded
 FAILED limit exceeded
 MARGIN margin exceeded
 EXC limit excess marked as an exception

The frequencies <Freq1> and <Freq2> are always absolute, i. e. not referred to the carrier frequency.

This command is only available in GSM MS mode (FS-K5) and when modulation spectrum measurement is selected (see :CONFIgure:SPECtrum:MODulation).

Example:

"INST MGSM"	switches the FSP to GSM MS mode
"CONF:SPEC:MOD"	selects the MOD measurement
"READ:SPEC:MOD:REF?"	executes the premeasurement and queries the result
"READ:SPEC:MOD?"	executes the measurement in the time domain and queries the result
"FETC:SPEC:MOD? ARFCn"	queries the result of the measurement in the time domain without starting a new measurement

Result:

```

0,890E6,915E6,-87.4,-108.0,ABS,FAILED,
1,893.2E6,893.2E6,-83.2,-108.0,ABS,FAILED,
2,895.7E6,895.7E6,-87.4,-108.0,ABS,FAILED

```

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:SPECTrum:MODulation:REFerence?

This command reads out the results of the premeasurement of modulation due to spectrum measurement.

The result is output as a list of partial result strings separated by ',' in the following (ASCII) format:

<Level1>,<Level2>,<RBW>

<Level1>: measured level

<Level2>: level corrected by means of the bandwidth

<RBW>: bandwidth

This command is only available in GSM MS mode (FS-K5) and when the measurement of the modulation due to spectrum is selected (see :CONFIgure:SPECTrum:MODulation).

Example:	"INST M GSM"	switches the FSP to GSM MS mode
	"CONF:SPEC:MOD"	selects the MOD measurement
	"READ:SPEC:MOD:REF?"	executes the premeasurement and queries the result
	"FETC:SPEC:MOD:REF?"	queries the result of the premeasurement without starting a new measurement

Result: 35.2,43.2,30000

Features: *RST value: --
SCPI: device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

FETCh:SPECTrum:SWITching[:ALL]?

This command reads out the result of the measurement of the transient spectrum of the mobile.

The result is output as a list of partial result strings separated by ',' as for the command FETCh:SPECTrum:MODulation[:ALL]?

This command is only available in GSM MS mode (FS-K5) and when modulation spectrum measurement is selected (see :CONFIgure:SPECTrum:MODulation).

Example:	"INST M GSM"	switches the FSP to GSM MS mode
	"CONF:SPEC:SWIT"	selects the TRA measurement
	"READ:SPEC:SWIT?"	executes the measurement in the time domain and queries the result
	"FETC:SPEC:SWIT?"	queries the result without starting a new measurement

Result: 0,833.4E6,833.4E6,37.4,-36.0,ABS,MARGIN,
1,834.0E6,834.0E6,-35.2,-36.0,ABS,FAILED,
2,834.6E6,834.6E6,-74.3,-75.0,REL,FAILED
0,835.0E6,835.0E6,-65,0,-60.0,REL,PASSED

Features: *RST value: --
SCPI: device-specific

Mode: MS

If no measurement has been performed yet, a query error results.

This command is an event and is therefore not assigned a query and has no *RST value.

INSTrument Subsystem

The INSTrument subsystem selects the operating mode of the unit either via text parameters or fixed numbers. The measurement windows are assigned to INSTrument1 (screen A) and INSTrument2 (screen B).

COMMAND	PARAMETER	UNIT	COMMENT
INSTrument<1 2> [:SElect] :NSElect	SANalyzer MSGM 1 5		Option FS-K5 Option FS-K5

INSTrument<1|2>[:SElect] SANalyzer | MSGM

Parameter: SANalyzer: Spectrum analyzer mode
MGSM: GSM MS mode

Example: "INST SAN" Switches the instrument to spectrum analyzer mode

Features: *RST value: SANalyzer
SCPI: conforming

Mode: all

Changeover to MGSM is only possible with firmware application GSM MS (FS-K5) installed.

- Notes on GSM MS mode:**
- After switchover to the GSM MS mode, a measurement has to be selected by means of a CONFigure command.
 - After switchover to the GSM MS mode, the modulation mode (GMSK or EDGE) selected last is active.
 - If the analyzer is set to external trigger on switchover to GSM MS mode, the 'Extern' GSM trigger is used, otherwise the 'IF Power' GSM trigger (default) is set.
 - When switching from GSM MS mode to Analyzer mode, the GSM MS trigger is maintained, i.e. IF power if 'IF Power' was set before and external trigger, if 'Extern' was set before.

INSTrument<1|2>:NSElect 1 | 5

Parameter: 1: Spectrum analyzer mode
5: GSM MS mode

Example: "INST:NSEL 1" switches the instrument to spectrum analyzer mode.

Features: *RST value: 1
SCPI: conforming

Mode: all

Changeover to MGSM is only possible with firmware application GSM MS (FS-K5) installed.

For notes on GSM MS mode see above.

READ Subsystem

The READ subsystem contains commands for starting complex measurement tasks such as those provided in the GSM MS mode (FSE-K5), and for querying the results subsequently. The READ subsystem is closely linked to the functions of the CONFIGure and FETCH subsystems, where the measurement sequences are configured or the results are queried without restarting a new measurement.

READ:BURSt Subsystem

This subsystem provides the commands for starting measurements in the GSM MS Analyzer mode (option FS-K5), which are performed on individual bursts and for reading out the results subsequently:

- Phase-Frequency Error (PFE)
- Modulation Accuracy (MAC)
- Power vs. Time (PVT)

COMMAND	PARAMETER	UNIT	COMMENT
READ			Option FS-K5
:BURSt			
:PERRor			
:RMS			
:AVERage?	--	Deg	query only
:MAXimum?	--	Deg	query only
:PEAK			
:AVERage?	--	Deg	query only
:MAXimum?	--	Deg	query only
:FERRor			
:AVERage?	--	Hz	query only
:MAXimum?	--	Hz	query only
:PTEMplate			
:REFerence			
[:IMMEDIATE?]	--	--	query only
:REFerence	--		
[:IMMEDIATE?]	--	--	query only
:MACCuracy			
:RMS			
:AVERage?	--	%	query only
:MAXimum?	--	%	query only
:PEAK			
:AVERage?	--	%	query only
:MAXimum?	--	%	query only
:OSUPpress			
:AVERage?	--	dB	query only
:MAXimum?	--	dB	query only
:PERCentile			
:AVERage?	--	%	query only
:MAXimum?	--	%	query only
:FREQuency			
:AVERage?	--	Hz	query only
:MAXimum?	--	Hz	query only

READ:BURSt:PERRor:RMS:AVERage?

This command starts the measurement of the phase and frequency error (PFE) of the mobile and reads out the average of the RMS measurement of the phase error taken over the selected number of bursts.

When the measurement is started the analyzer is automatically set to single sweep.

Further results of the PFE measurement can then be queried without restart of the measurement via the `:FETCh:BURSt` subsystem.

An ongoing measurement can be aborted via the command `ABORt`.

This command is only available in GSM MS mode (FS-K5) and when measurement of the phase/frequency error is selected (see `:CONFIgure:BURSt:PFERror`).

Example:

"INST MGSM"	switches the FSP to GSM MS mode
"CONF:MTYP GMSK"	selects modulation type GMSK
"CONF:BURS:PFER"	selects the PFE measurement
"SWE:COUN 20"	sets the number of bursts
"READ:BURS:PERR:RMS:AVER?"	executes the measurement and queries the result

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:BURSt:PERRor:RMS:MAXimum?

This command starts the measurement of the phase and frequency error (PFE) of the mobile and reads out the maximum of the RMS measurement of the phase error taken over the selected number of bursts.

When the measurement is started the analyzer is automatically set to single sweep.

Further results of the PFE measurement can then be queried without restart of the measurement via the `:FETCh:BURSt` subsystem.

An ongoing measurement can be aborted via the command `ABORt`.

This command is only available in GSM MS mode (FS-K5) and when measurement of the phase/frequency error is selected (see `:CONFIgure:BURSt:PFERror`).

Example:

"INST MGSM"	switches the FSP to GSM MS mode
"CONF:MTYP GMSK"	selects modulation type GMSK
"CONF:BURS:PFER"	selects the PFE measurement
"SWE:COUN 20"	sets the number of bursts
"READ:BURS:PERR:RMS:MAX?"	executes the measurement and queries the result

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:BURSt:PERRor:PEAK:AVERAge?

This command starts the measurement of the phase and frequency error (PFE) of the mobile and reads out the average of the PEAK measurement of the phase error taken over the selected number of bursts.

When the measurement is started the analyzer is automatically set to single sweep.

Further results of the PFE measurement can then be queried without restart of the measurement via the :FETCh:BURSt subsystem.

An ongoing measurement can be aborted via the command ABORt .

This command is only available in GSM MS mode (FS-K5) and when measurement of the phase/frequency error is selected (see :CONFIgure:BURSt:PFERror) .

Example:	"INST MGSM" "CONF:MTYP GMSK" "CONF:BURS:PFER" "SWE:COUN 20" "READ:BURS:PERR:PEAK:AVER?"	switches the FSP to GSM MS mode selects modulation type GMSK selects the PFE measurement sets the number of bursts executes the measurement and queries the result
-----------------	---	--

Features:	*RST value: -- SCPI: device-specific
------------------	---

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:BURSt:PERRor:PEAK:MAXimum?

This command starts the measurement of the phase and frequency error (PFE) of the mobile and reads out the maximum of the PEAK-measurement of the phase error taken over the selected number of bursts.

When the measurement is started the analyzer automatically is set to single sweep.

Further results of the PFE measurement can be then queried without restart of the measurement via the :FETCh:BURSt subsystem.

An ongoing measurement can be aborted via the command ABORt .

This command is only available in GSM MS mode (FS-K5) and when measurement of the phase/frequency error is selected (see :CONFIgure:BURSt:PFERror)

Example:	"INST MGSM" "CONF:MTYP GMSK" "CONF:BURS:PFER" "SWE:COUN 20" "READ:BURS:PERR:PEAK:MAX?"	switches the FSP to GSM MS mode selects modulation type GMSK selects the PFE measurement sets the number of bursts executes the measurement and queries the result
-----------------	--	--

Features:	*RST value: -- SCPI: device-specific
------------------	---

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:BURSt:FERRor:AVERage?

This command starts the measurement of the phase and frequency error (PFE) of the mobile and reads out the average of the measurement of the frequency error taken over the selected number of bursts.

When the measurement is started the analyzer is automatically set to single sweep.

Further results of the PFE measurement can then be queried without restart of the measurement via the `:FETCh:BURSt` subsystem.

An ongoing measurement can be aborted via the command `ABORt`.

This command is only available in GSM MS mode (FS-K5) and when measurement of the phase/frequency error is selected (see `:CONFIgure:BURSt:PFERror`).

Example:	"INST MGSM"	switches the FSP to GSM MS mode
	"CONF:MTYP GMSK"	selects modulation type GMSK
	"CONF:BURS:PFER"	selects the PFE measurement
	"SWE:COUN 20"	sets the number of bursts
	"READ:BURS:FERR:AVER?"	executes the measurement and queries the result

Features:	*RST value:	--
	SCPI:	device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:BURSt:FERRor:MAXimum?

This command starts the measurement of the phase and frequency error (PFE) of the mobile and reads out the average of the measurement of the frequency error taken over the selected number of bursts.

When the measurement is started the analyzer is automatically set to single sweep.

Further results of the PFE measurement can then be queried without restart of the measurement via the `:FETCh:BURSt` subsystem.

An ongoing measurement can be aborted via the command `ABORt`.

This command is only available in GSM MS mode (FS-K5) and when measurement of the phase/frequency error is selected (see `:CONFIgure:BURSt:PFERror`).

Example:	"INST MGSM"	switches the FSP to GSM MS mode
	"CONF:MTYP GMSK"	selects modulation type GMSK
	"CONF:BURS:PFER"	selects the PFE measurement
	"SWE:COUN 20"	sets the number of bursts
	"READ:BURS:FERR:MAX?"	executes the measurement and queries the result

Features:	*RST value:	--
	SCPI:	device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:BURSt:PTEmplate:REFerence[:IMMediate]?

This command starts the premeasurement of power vs. time and reads out the results.

The result is output as a list of partial result strings separated by ',' in the following (ASCII) format:

<Level1>,<Level2>,<RBW>

<Level1>: measured level

<Level2>: level corrected by means of the bandwidth

<RBW>: bandwidth

This command is only available in GSM MS mode (FS-K5) and when measurement of the power vs. time is selected (see :CONFIgure:BURSt:PTEmplate).

Example:

"INST MGSM"	switches the FSP to GSM MS mode
"CONF:MTYP GMSK"	selects modulation type GMSK
"CONF:BURS:PTEM"	selects the PVT measurement
"READ:BURS:PTEM:REF?"	executes the measurement and queries the result

Result: 43.2,43.2,400000

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:BURSt:REFerence[:IMMediate]?

This command starts the premeasurement of power vs. time and returns the measured level in dBm.

This command is only available in GSM MS mode (FS-K5) and when measurement of the power vs. time is selected (see :CONFIgure:BURSt:PTEmplate).

Note:

This command has been included only for reasons of compatibility with FSE-K10.

Instead of this command, the command READ:BURSt:PTEmplate:REFerence[IMMediate]? should be used, whose output format conforms to that of the premeasurement query commands.

For a detailed description see command READ:BURSt:PTEmplate:REFerence [IMMediate]?.

Example:

"INST MGSM"	switches the FSP to GSM MS mode
"CONF:MTYP GMSK"	selects the modulation type GMSK
"CONF:BURS:PTEM"	selects the PVT measurement
"READ:BURS:REF?"	executes the premeasurement and queries the result

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:BURSt:MACCuracy:RMS:AVERAge?

This command starts the measurement of the modulation accuracy of the mobile and reads out the average of the RMS-measurement of the error vector magnitude taken over the selected number of bursts.

When the measurement is started the analyzer is automatically set to single sweep.

Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

An ongoing measurement can be aborted via the command `ABORT`.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (`CONFigure:BURSt:MACCuracy[:IMMEDIATE]`).

Example:	"INST MGSM"	Switches the instrument to GSM MS mode
	"CONF:MTYP EDGE"	Selects the modulation type EDGE (8PSK)
	"CONF:BURS:MACC"	Selects the MAC measurement
	"SWE:COUN 20"	Sets the number of bursts
	"READ:BURS:MACC:RMS:AVER?"	Starts the measurement and reads out the result

Features:	*RST value: --
	SCPI: device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:BURSt:MACCuracy:RMS:MAXimum?

This command starts the measurement of the modulation accuracy of the mobile and reads out the maximum of the RMS-measurement of the error vector magnitude taken over the selected number of bursts.

When the measurement is started the analyzer is automatically set to single sweep.

Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

An ongoing measurement can be aborted via the command `ABORT`.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (`CONFigure:BURSt:MACCuracy[:IMMEDIATE]`).

Example:	"INST MGSM"	Switches the instrument to GSM MS mode
	"CONF:MTYP EDGE"	Selects the modulation type EDGE (8PSK)
	"CONF:BURS:MACC"	Selects the MAC measurement
	"SWE:COUN 20"	Sets the number of bursts
	"READ:BURS:MACC:RMS:MAX?"	Starts the measurement and reads out the result

Features:	*RST value: --
	SCPI: device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:BURSt:MACCuracy:PEAK:AVERage?

This command starts the measurement of the modulation accuracy of the mobile and reads out the average of the PEAK-measurement of the error vector magnitude taken over the selected number of bursts.

When the measurement is started the analyzer is automatically set to single sweep.

Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the `:FETCh:BURSt`-subsystem.

An ongoing measurement can be aborted via the command `ABORt`.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (`CONFIgure:BURSt:MACCuracy[:IMMediate]`).

Example:	"INST MGSM"	Switches the instrument to GSM MS mode
	"CONF:MTYP EDGE"	Selects the modulation type EDGE (8PSK)
	"CONF:BURS:MACC"	Selects the MAC measurement
	"SWE:COUN 20"	Sets the number of bursts
	"READ:BURS:MACC:PEAK:AVER?"	Starts the measurement and reads out the result

Features:	*RST value: --
	SCPI: device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:BURSt:MACCuracy:PEAK:MAXimum?

This command starts the measurement of the modulation accuracy of the mobile and reads out the maximum of the PEAK-measurement of the error vector magnitude taken over the selected number of bursts.

When the measurement is started the analyzer is automatically set to single sweep. Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the `:FETCh:BURSt`-subsystem.

An ongoing measurement can be aborted via the command `ABORt`.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (`CONFIgure:BURSt:MACCuracy[:IMMediate]`).

Example:	"INST MGSM"	Switches the instrument to GSM MS mode
	"CONF:MTYP EDGE"	Selects the modulation type EDGE (8PSK)
	"CONF:BURS:MACC"	Selects the MAC measurement
	"SWE:COUN 20"	Sets the number of bursts
	"READ:BURS:MACC:PEAK:MAX?"	Starts the measurement and reads out the result

Features:	*RST value: --
	SCPI: device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:BURSt:MACCuracy:OSUPpress:AVERage?

This command starts the measurement of the modulation accuracy of the mobile and reads out the average of the original offset suppression measurement taken over the selected number of bursts. When the measurement is started the analyzer is automatically set to single sweep.

Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

An ongoing measurement can be aborted via the command `ABORT`.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (`CONFigure:BURSt:MACCuracy[:IMMEDIATE]`).

Example:

"INST MGSM"	Switches the instrument to GSM MS mode
"CONF:MTYP EDGE"	Selects the modulation type EDGE (8PSK)
"CONF:BURS:MACC"	Selects the MAC measurement
"SWE:COUN 20"	Sets the number of bursts
"READ:BURS:MACC:OSUP:AVER?"	Starts the measurement and reads out the result

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:BURSt:MACCuracy:OSUPpress:MAXimum?

This command starts the measurement of the modulation accuracy of the mobile and reads out the maximum of the original offset suppression measurement taken over the selected number of bursts. When the measurement is started the analyzer is automatically set to single sweep.

Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

An ongoing measurement can be aborted via the command `ABORT`.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (`CONFigure:BURSt:MACCuracy[:IMMEDIATE]`).

Example:

"INST MGSM"	Switches the instrument to GSM MS mode
"CONF:MTYP EDGE"	Selects the modulation type EDGE (8PSK)
"CONF:BURS:MACC"	Selects the MAC measurement
"SWE:COUN 20"	Sets the number of bursts
"READ:BURS:MACC:OSUP:MAX?"	Starts the measurement and reads out the result

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:BURSt:MACCuracy:PERCentile:AVERage?

This command starts the measurement of the modulation accuracy of the mobile and reads out the average of the 95% percentile measurement taken over the selected number of bursts.

When the measurement is started the analyzer is automatically set to single sweep.

Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

An ongoing measurement can be aborted via the command `ABORT`.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (`CONFigure:BURSt:MACCuracy[:IMMEDIATE]`).

Example:

"INST M GSM"	Switches the instrument to GSM MS mode
"CONF:MTYP EDGE"	Selects the modulation type EDGE (8PSK)
"CONF:BURS:MACC"	Selects the MAC measurement
"SWE:COUN 20"	Sets the number of bursts
"READ:BURS:MACC:PERC:AVER?"	Starts the measurement and reads out the result

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:BURSt:MACCuracy:PERCentile:MAXimum?

This command starts the measurement of the modulation accuracy of the mobile and reads out the maximum of the 95% percentile measurement taken over the selected number of bursts.

When the measurement is started the analyzer is automatically set to single sweep.

Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

An ongoing measurement can be aborted via the command `ABORT`.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (`CONFigure:BURSt:MACCuracy[:IMMEDIATE]`).

Example:

"INST M GSM"	Switches the instrument to GSM MS mode
"CONF:MTYP EDGE"	Selects the modulation type EDGE (8PSK)
"CONF:BURS:MACC"	Selects the MAC measurement
"SWE:COUN 20"	Sets the number of bursts
"READ:BURS:MACC:PERC:MAX?"	Starts the measurement and reads out the result

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:BURSt:MACCuracy:FREQuency:AVERage?

This command starts the measurement of the modulation accuracy of the mobile and reads out the average of the frequency error measurement taken over the selected number of bursts.

When the measurement is started the analyzer is automatically set to single sweep.

Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

An ongoing measurement can be aborted via the command `ABORT`.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (`CONFigure:BURSt:MACCuracy[:IMMEDIATE]`).

Example:

"INST MGSM"	Switches the instrument to GSM MS mode
"CONF:MTYP EDGE"	Selects the modulation type EDGE (8PSK)
"CONF:BURS:MACC"	Selects the MAC measurement
"SWE:COUN 20"	Sets the number of bursts
"READ:BURS:MACC:FREQ:AVER?"	Starts the measurement and reags out the result

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:BURSt:MACCuracy:FREQuency:MAXimum?

This command starts the measurement of the modulation accuracy of the mobile and reads out the maximum of the frequency error measurement taken over the selected number of bursts.

When the measurement is started the analyzer is automatically set to single sweep.

Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

An ongoing measurement can be aborted via the command `ABORT`.

This command is only available with GSM MS Analyzer (option FS-K5) and when measurement of the modulation accuracy is selected (`CONFigure:BURSt:MACCuracy[:IMMEDIATE]`).

Example:

"INST MGSM"	Switches the instrument to GSM MS mode
"CONF:MTYP EDGE"	Selects the modulation type EDGE (8PSK)
"CONF:BURS:MACC"	Selects the MAC measurement
"SWE:COUN 20"	Sets the number of bursts
"READ:BURS:MACC:FREQ:MAX?"	Starts the measurement and reads out the result.

Features:

*RST value:	--
SCPI:	device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:SPECtrum Subsystem

This subsystem provides the commands for starting measurements in the GSM MS mode (FS-K5), which are used to measure the power of the spectral components due to modulation and switching, and for reading out the results subsequently.

Measurement of spectrum due to modulation (MOD)

Measurement of spectrum due to transients (TRA)

COMMAND	PARAMETER	UNIT	COMMENT
READ			Option FS-K5
:SPECtrum			
:MODulation			
[:ALL?]	--	--	query only
:REFerence			
[:IMMediate?]	--	--	query only
:SWITching			
[:ALL?]	--	--	query only

READ:SPECtrum:MODulation[:ALL]?

This command starts the measurement of the modulation spectrum of the mobile and reads out the result. The measurement is performed in the frequency range $ARFCN \pm 1.8$ MHz.

The result is read out as a list of partial ASCII result strings separated by ',' in the following format:

```
<Index>,<Freq1>,<Freq2>,<Level>,<Limit>,<Abs/Rel>,<Status> [,
<Index>,<Freq1>,<Freq2>,<Level>,<Limit>,<Abs/Rel>,<Status>]...
```

where the part set in '[...]' characterizes a partial result string which can be repeated n times.

<Index>: 0, if the partial result string characterizes a measurement range.
 current number <>0,
 if the partial result string characterizes a single limit excess.

<Freq1>: Start frequency of the measurement range or frequency where the limit is exceeded.

<Freq2>: Stop frequency of the measurement range or frequency where the measured range is exceeded. The value of <Freq2> is equal to the value of <Freq1>, if either the measurement is performed in the time domain or the partial result string contains a limit excess.

<Level>: Measured maximum level of the partial range or measured level at the test point.

<Limit>: Limit in the partial range or at the test point.

<Abs/Rel>: ABS <Level> and <Limit> are in absolute units (dBm)
 REL <Level> and <Limit> are in relative units (dB)

<Status>: Result of the limit check in character data form:
 PASSED no limit exceeded
 FAILED limit exceeded
 MARGIN margin exceeded
 EXC limited excess characterized as an exception

The frequencies <Freq1> and <Freq2> are always absolute and not referred to the carrier frequency.

An ongoing measurement can be aborted via the command `ABORT`.

This command is only available in GSM MS mode (FS-K5) option and when modulation spectrum measurement is selected (see `:CONFIGure:SPECtrum:MODulation`).

Example:

"INST MGSM"	switches the FSP to GSM MS mode
"CONF:SPEC:MOD"	selects the MOD measurement
"READ:SPEC:MOD:REF?"	executes the premeasurement and queries the result.
"READ:SPEC:MOD?"	executes the measurement in the time domain and queries the result.

Result: 0,890E6,915E6,-87.4,-108.0,ABS,FAILED,
1,893.2E6,893.2E6,-83.2,-108.0,ABS,FAILED,
2,895.7E6,895.7E6,-87.4,-108.0,ABS,FAILED

Features: *RST value: --
SCPI: device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:SPECtrum:MODulation:REFerence[:IMMediate]?

This command starts the premeasurement of the modulation due to spectrum measurement and reads out the result.

The result is output as a list of partial result strings separated by ',' in the following (ASCII) format:

<Level1>,<Level2>,<RBW>

<Level1>: measured level

<Level2>: level corrected by means of the bandwidth

<RBW>: bandwidth

This command is only available in GSM MS mode (FS-K5) and when measurement of the modulation due to spectrum is selected (see :CONFigure:SPECtrum:MODulation).

Example:

"INST MGSM"	switches the FSP to GSM MS mode
"CONF:SPEC:MOD"	selects the MOD measurement
"READ:SPEC:MOD:REF?"	executes the premeasurement and queries the result.

Result: 35.2,43.2,30000

Features: *RST value: --
SCPI: device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

READ:SPECTrum:SWITching[:ALL]?

This command starts the measurement of the transient spectrum of the mobile and reads out the result.

The result is read out as a list of partial ASCII result strings separated by ',' in the format used for `READ:SPECTrum:MODulation[:ALL]?`

An ongoing measurement can be aborted via the command `ABORT`.

This command is only available in GSM MS Analyzer mode (FS-K5) and when the spectrum due to switching measurement is selected (see `:CONFigure:SPECTrum:SWITChing`)

Example:	"INST MGSM"	switches the FSP to GSM MS mode
	"CONF:SPEC:SWIT"	selects the TRA measurement
	"READ:SPEC:SWIT?"	executes the measurement in the time domain and queries the result.

Result:	0,833.4E6,833.4E6,37.4,-36.0,ABS,MARGIN,
	1,834.0E6,834.0E6,-35.2,-36.0,ABS,FAILED,
	2,834.6E6,834.6E6,-74.3,-75.0,REL,FAILED
	0,835.0E6,835.0E6,-65,0,-60.0,REL,PASSED

Features:	*RST value: --
	SCPI: device-specific

Mode: MS

This command is an event and is therefore not assigned a query and has no *RST value.

SENSe Subsystem

The SENSe subsystem is organized in several subsystems. The commands of these subsystems directly control device-specific settings, they do not refer to the signal characteristics of the measurement signal.

The SENSe subsystem controls the essential parameters of the analyzer. In accordance with the SCPI standard, the keyword "SENSe" is optional for this reason, which means that it is not necessary to include the SENSe node in command sequences.

SENSe:BANDwidth Subsystem

[SENSe:]BANDwidth|BWIDth[:RESolution] <numeric_value>

Note: This command is not available for GSM MS measurements MAC, PFE and PVT. The bandwidth is automatically set according to standard GSM.

[SENSe:]BANDwidth|BWIDth[:RESolution]:AUTO <numeric_value>

Note: This command is not available for GSM MS measurements MAC, PFE and PVT.

[SENSe<1|2>:]BANDwidth|BWIDth[:RESolution]:TYPE NORMal | FFT | CFILter | RRC

Note: This command is not available for GSM MS measurements MAC, PFE, PVT and CPW.

[SENSe<1|2>:]BANDwidth|BWIDth:VIDeo 1Hz...10MHz

Note: This command is not available for GSM MS measurements MAC, PFE and PVT.

[SENSe<1|2>:]BANDwidth|BWIDth:VIDeo:AUTO ON | OFF

Note: This command is not available for GSM MS measurements MAC, PFE and PVT.

[SENSe<1|2>:]BANDwidth|BWIDth:VIDeo:RATio 0.01...1000

Note: This command is not available for GSM MS measurements MAC, PFE and PVT.

SENSe:CORRection Subsystem

Note : The commands of this subsystem are not available in GSM MS mode.

SENSe:DETEctor Subsystem

Note : Detectors APEAK and QPEak are not available for GSM MS measurements MAC, PFE and PVT.

SENSe:FREQuency Subsystem

[SENSe<1|2>:]FREQuency:CENTer:STEP:LINK SPAN | RBW | OFF

Note: This command is not available for GSM MS measurements MAC, PFE and PVT

[SENSe<1|2>:]FREQuency:CENTer:STEP:LINK:FACTor 1 ... 100 PCT

Note: This command is not available for GSM MS measurements MAC, PFE and PVT

[SENSe<1|2>:]FREQuency:SPAN 0 .. f_{\max}

Note: This command is not available for GSM MS measurements MAC, PFE, PVT and CPW

[SENSe<1|2>:]FREQuency:SPAN:FULL

Note: This command is not available for GSM MS measurements MAC, PFE, PVT and CPW

[SENSe<1|2>:]FREQuency:STARt 0 .. f_{\max}

Note: This command is not available for GSM MS measurements MAC, PFE, PVT and CPW

[SENSe<1|2>:]FREQuency:STOP 0 .. f_{\max}

Note: This command is not available for GSM MS measurements MAC, PFE, PVT and CPW

[SENSe<1|2>:]FREQuency:MODE CW | FIXed | SWEep

Note: This command is not available for GSM MS measurements MAC, PFE, PVT, CPW and SPU

SENSe:LIST Subsystem

Note: The commands of this subsystem are not available for GSM MS measurements MAC, PFE and PVT

SENSe:MPOWer Subsystem

Note: The commands of this subsystem are not available for GSM MS measurements MAC, PFE and PVT

SENSe:POWer Subsystem

Note : The commands of this subsystem are not available in GSM MS mode.

SENSe:SWEEp Subsystem

[SENSe<1|2>:]SWEEp:TIME 2.5 ms to 16000 s (frequency domain) | 1 μ s to 16000 s (time domain)

Note: This command is not available for GSM MS measurements MAC, PFE, PVT and CPW

[SENSe<1|2>:]SWEEp:TIME:AUTO ON | OFF

Note: This command is not available for GSM MS measurements MAC, PFE, PVT and CPW

[SENSe<1|2>:]SWEEp:EGATE...

Note: The commands of this node are not available for GSM MS measurements MAC, PFE, PVT, CPW, TRA and SPU.

TRACe:IQ Subsystem

Note : The commands of this subsystem are not available in GSM MS mode.

TRIGger Subsystem

COMMAND	PARAMETER	UNIT	COMMENT
TRIGger<1 2> [:SEQuence] :SOURce :SYNChronize :ADJust :EXTernal :IFPower	IMMediate EXTernal VIDeo IFPower <numeric_value> <numeric_value>	 s s	Option FS-K5

TRIGger<1|2>[:SEQuence]:SOURce IMMediate | EXTernal | VIDeo | IFPower

Note : This command is not available in GSM MS mode. The trigger source is selected with commands `TRIGger<1|2>[:SEQuence]:SYNChronize:ADJust:...`

TRIGger[:SEQuence]:SYNChronize:ADJust:EXTernal -460µs...100s

This command is a combination of 2 commands:

For one, the 'Extern' GSM trigger is selected. For all GSM measurements requiring a trigger signal and for which an external trigger is possible, the `EXTernal` trigger setting is used. If an external trigger is not possible, the `IMMediate` trigger setting is used (see table of triggers in section "Trigger and Time References" in Chapter 1.)

For another, the correction value for the time offset of the external trigger from the beginning of the measured slot is defined (GSM trigger offset, see section "Trigger and Time References" in Chapter 1).

This correction value is needed in order to establish an exact time reference between the trigger event and the beginning of the slot if there is no midamble triggering. The correction value for the DUT in question can be determined in the `GENERAL SETTINGS` menu with the `TRIGGER OFFSET` softkey.

This command is available only if GSM MS Analyzer (FS-K5) application firmware is installed.

Note:

- If the analyzer is set to external trigger on switchover to GSM MS mode (with `INST:SEL MGSM`), the 'Extern' GSM trigger is used, otherwise the 'IF Power' GSM trigger (default) is set.
- When switching from GSM MS mode to Analyzer mode, the GSM MS trigger setting is maintained, i.e. IF power if 'IF Power' was set before and external trigger, if 'Extern' was set before.

Example:

```

"INST MGSM"           switches the FSP to GSM MS mode
"TRIG:SYNC:ADJ:EXT 200us" selects 'Extern' GSM trigger and a GSM
                        trigger offset of 200 µs between the
                        external trigger and the beginning of the slot.

```

Features:

- *RST value: 0s
- SCPI: device-specific

Mode: MS

TRIGger[:SEquence]:SYNChronize:ADJust:IFPower -460 μ s...100s

This command is a combination of 2 commands:

For one, the 'IF Power' GSM trigger is selected. For all GSM measurements for which an IF power trigger is possible, the `IFPower` trigger setting is used. If an IF power trigger is not possible, the `IMMEDIATE` trigger setting is used (see table of triggers in section "Trigger and Time References" in Chapter 1.)

For another, the correction value for the time offset of the IF power trigger from the beginning of the measured slot is defined (GSM trigger offset, see section "Trigger and Time References" in Chapter 1.)

This correction value is needed in order to establish an exact time reference between the trigger event and the beginning of the slot if there is no midamble triggering. The correction value for the DUT in question can be determined in the `GENERAL SETTINGS` menu with the `TRIGGER OFFSET` softkey.

This command is available only if GSM MS Analyzer application firmware (FS-K5) is installed.

Note: *If the analyzer is set to external trigger on switchover to GSM MS mode (with `INST:SEL M GSM`), the 'Extern' GSM trigger is used, otherwise the 'IF Power' GSM trigger (default) is set.*

Example:

<code>"INST M GSM"</code>	switches the FSP to GSM MS mode
<code>"TRIG:SYNC:ADJ:IFP 20us"</code>	selects 'IF Power' GSM trigger and a GSM trigger offset of 20 μ s between the IF power trigger and the beginning of the slot

Features:

*RST value:	0s
SCPI:	device-specific

Mode: MS

UNIT Subsystem

UNIT<1|2>:POWER DBM | DBPW | WATT | DBUV | DBMV | VOLT | DBUA | AMPere | V | A | W

Note: *This command is not available in GSM MS mode. In GSM MS mode, the unit is fixed, i.e. dBm (for power measurements) or deg (for phase error measurements).*

Alphabetical List of Commands

The following list contains the new commands for application firmware GSM MS, FS-K5

Command	Parameter	Page
CONFigure:BURSt:MACCuracy[:IMMediate]		3.7
CONFigure:BURSt:PFERror[:IMMediate]		3.7
CONFigure:BURSt:POWEr[:IMMediate]		3.8
CONFigure:BURSt:PTEMplate[:IMMediate]		3.8
CONFigure:BURSt:PTEMplate:SELEct	FULL TOP RISing FALLing	3.8
CONFigure:CHANnel:TSC	0 to 7 USER	3.4
CONFigure:CHANnel:TSC:USER	<string>	3.5
CONFigure:MTYPE	GMSK EDGE	3.6
CONFigure:REStore		3.5
CONFigure:SPECTrum:MODulation[:IMMediate]		3.9
CONFigure:SPECTrum:SWITching[:IMMediate]		3.9
CONFigure:SPURious[:IMMediate]		3.10
FETCh:BURSt:FERRor:AVErAge?		3.15
FETCh:BURSt:FERRor:MAXimum?		3.15
FETCh:BURSt:MACCuracy:FREQUency:AVErAge?		3.20
FETCh:BURSt:MACCuracy:FREQUency:MAXimum?		3.21
FETCh:BURSt:MACCuracy:OSUPpress:AVErAge?		3.18
FETCh:BURSt:MACCuracy:OSUPpress:MAXimum?		3.19
FETCh:BURSt:MACCuracy:PEAK:AVErAge?		3.17
FETCh:BURSt:MACCuracy:PEAK:MAXimum?		3.18
FETCh:BURSt:MACCuracy:PERCentile:AVErAge?		3.19
FETCh:BURSt:MACCuracy:PERCentile:MAXimum?		3.20
FETCh:BURSt:MACCuracy:RMS:AVErAge?		3.16
FETCh:BURSt:MACCuracy:RMS:MAXimum?		3.17
FETCh:BURSt:PErRor:PEAK:AVErAge?		3.14
FETCh:BURSt:PErRor:PEAK:MAXimum?		3.14
FETCh:BURSt:PErRor:RMS:AVErAge?		3.13
FETCh:BURSt:PErRor:RMS:MAXimum?		3.13
FETCh:BURSt:PTEMplate:REFerence?		3.16
FETCh:MODulation[:ALL]?	ARFCn	3.22
FETCh:PTEMplate:REFerence?		3.22
FETCh:SPECTrum:MODulation:REFerence?		3.24
FETCh:SPECTrum:SWITching[:ALL]?		3.24
INSTrument<1 2>:NSELEct	1 5	3.25
INSTrument<1 2>[:SELEct]	SANalyzer MGSM	3.25
READ:BURSt:FERRor:AVErAge?		3.29
READ:BURSt:FERRor:MAXimum?		3.29

Command	Parameter	Page
READ:BURSt:MACCuracy:FREQuency:AVERage?		3.35
READ:BURSt:MACCuracy:FREQuency:MAXimum?		3.35
READ:BURSt:MACCuracy:OSUPpress:AVERage?		3.33
READ:BURSt:MACCuracy:OSUPpress:MAXimum?		3.33
READ:BURSt:MACCuracy:PEAK:AVERage?		3.32
READ:BURSt:MACCuracy:PEAK:MAXimum?		3.32
READ:BURSt:MACCuracy:PERCentile:AVERage?		3.34
READ:BURSt:MACCuracy:PERCentile:MAXimum?		3.34
READ:BURSt:MACCuracy:RMS:AVERage?		3.31
READ:BURSt:MACCuracy:RMS:MAXimum?		3.31
READ:BURSt:PERRor:PEAK:AVERage?		3.28
READ:BURSt:PERRor:PEAK:MAXimum?		3.28
READ:BURSt:PERRor:RMS:AVERage?		3.27
READ:BURSt:PERRor:RMS:MAXimum?		3.27
READ:BURSt:PTEMplate:REFerence[:IMMEDIATE]?		3.30
READ:BURSt:REFerence[:IMMEDIATE]?		3.30
READ:SPEctrum:MODulation:REFerence[:IMMEDIATE]?		3.37
READ:SPEctrum:MODulation[:ALL]?		3.36
READ:SPEctrum:SWITChing[:ALL]?		3.38
TRIGger[:SEQuence]:SYNChronize:ADJust:EXTernal	-460 μ s to 100s	3.42
TRIGger[:SEQuence]:SYNChronize:ADJust:IFPower	-460 μ s to 100s	3.43

The following list contains all commands not available or available only with restrictions in GSM MS mode.

Command	Restrictions	Page
CALCulate<1 2>:DELTAmarker<1...4>:FUNCTION:PNOise:RESult?	not in GSM MS mode	3.1
CALCulate<1 2>:DELTAmarker<1...4>:FUNCTION:PNOise[:STATe]	not in GSM MS mode	3.1
CALCulate<1 2>:LIMit<1...8>:....	not for MAC /PFE measurement	3.1
CALCulate<1 2>:MARKer<1...4>:COUNT	not for MAC /PFE / PVT measurements	3.2
CALCulate<1 2>:MARKer<1...4>:COUNT:FREQUency?	not for MAC /PFE / PVT measurements	3.2
CALCulate<1 2>:MARKer<1...4>:COUNT:RESolution	not for MAC /PFE / PVT measurements	3.2
CALCulate<1 2>:MARKer<1...4>:FUNCTION:NDBDown	not for MAC /PFE / PVT measurements	3.2
CALCulate<1 2>:MARKer<1...4>:FUNCTION:NDBDown:FREQUency?	not for MAC /PFE / PVT measurements	3.2
CALCulate<1 2>:MARKer<1...4>:FUNCTION:NDBDown:RESult?	not for MAC /PFE / PVT measurements	3.2
CALCulate<1 2>:MARKer<1...4>:FUNCTION:NDBDown:STATe	not for MAC /PFE / PVT measurements	3.2
CALCulate<1 2>:MARKer<1...4>:FUNCTION:NOISe:RESult?	not for MAC /PFE / PVT measurements	3.2
CALCulate<1 2>:MARKer<1...4>:FUNCTION:NOISe[:STATe]	not for MAC /PFE / PVT measurements	3.2
CALCulate<1 2>:MARKer<1...4>:FUNCTION:POWER...	not in GSM MS mode	3.3
CALCulate<1 2>:MARKer<1...4>:FUNCTION:SUMMARY:MODE	not for MAC /PFE measurement	3.3
CALCulate<1 2>:MARKer<1...4>:FUNCTION:SUMMARY:REFERENCE:AUTO	not for MAC /PFE measurement	3.3
CALCulate<1 2>:MARKer<1...4>:FUNCTION:TOI:RESult?	not for MAC /PFE / PVT measurements	3.3
CALCulate<1 2>:MARKer<1...4>:FUNCTION:TOI[:STATe]	not for MAC /PFE / PVT measurements	3.3
CALCulate<1 2>:STATistics:..	not in GSM MS mode	3.3
CALCulate<1 2>:UNIT:POWER	not in GSM MS mode	3.3
DISPlay:FORmat	not in GSM MS mode	3.11
DISPlay[:WINDow<1 2>]:TRACe<1...3>:Y:SPACing	not in GSM MS mode	3.11
DISPlay[:WINDow<1 2>]:SElect	not in GSM MS mode	3.11
[SENSe<1 2>:]BANDwidth BWIDTH[:RESolution]	not for MAC /PFE / PVT measurements	3.39
[SENSe<1 2>:]BANDwidth BWIDTH[:RESolution]:AUTO	not for MAC /PFE / PVT measurements	3.39
[SENSe<1 2>:]BANDwidth BWIDTH:VIDeo	not for MAC /PFE / PVT measurements	3.39
[SENSe<1 2>:]BANDwidth BWIDTH:VIDeo:AUTO	not for MAC /PFE / PVT measurements	3.39
[SENSe<1 2>:]BANDwidth BWIDTH:VIDeo:RATio	not for MAC /PFE / PVT measurements	3.39
[SENSe<1 2>:]BANDwidth BWIDTH[:RESolution]:TYPE	not for MAC /PFE / PVT /CPW measurements	3.39
[SENSe<1 2>:]DETEctor<1...3>[:FUNCTION]	not for MAC /PFE / PVT measurements	3.39
[SENSe<1 2>:]FREQUency:CENTer:STEP:LINK	not for MAC /PFE / PVT measurements	3.40
[SENSe<1 2>:]FREQUency:CENTer:STEP:LINK:FACTor	not for MAC /PFE / PVT measurements	3.40
[SENSe<1 2>:]FREQUency:MODE	not for MAC /PFE / PVT /CPW /SPU measurements	3.40
[SENSe<1 2>:]FREQUency:SPAN	not for MAC /PFE / PVT /CPW measurements	3.40
[SENSe<1 2>:]FREQUency:SPAN:FULL	not for MAC /PFE / PVT /CPW measurements	3.40
[SENSe<1 2>:]FREQUency:STARt	not for MAC /PFE / PVT /CPW measurements	3.40

Command	Restrictions	Page
[SENSe<1 2>:]FREQuency:STOP	not for MAC /PFE / PVT /CPW measurements	3.40
[SENSe<1 2>:]LIST:...	not for MAC /PFE / PVT measurements	3.40
[SENSe<1 2>:]MPOWer:...	not for MAC /PFE / PVT measurements	3.41
[SENSe<1 2>:]POWer:...	not in GSM MS mode	3.41
[SENSe<1 2>:]SWEep:EGATe...	not for MAC /PFE / PVT /CPW / TRA / SPU measurments	3.41
[SENSe<1 2>:]SWEep:TIME	not for MAC /PFE / PVT /CPW measurements	3.41
[SENSe<1 2>:]SWEep:TIME:AUTO	not for MAC /PFE / PVT /CPW measurements	3.41
TRACe<1 2>:IQ:...	not in GSM MS mode	3.41
TRIGger<1 2>[:SEQuence]:SOURce	not in GSM MS mode	3.42
UNIT<1 2>:POWer	not in GSM MS mode	3.43

Table of Softkeys and Hotkeys with IEC/IEEE-Bus Command Assignment

Hotkey GSM MS

GSM MS	
REF LEVEL	DISPlay[:WINDow<1>]:TRACe<1 to 3>:Y[:SCALE]:RLEVEL -130dBm to 30dBm
EXTERNAL ATTEN	DISPlay[:WINDow<1>]:TRACe<1 to 3>:Y[:SCALE]:RLEVEL:OFFSet <num_value>
RF ATTEN MANUAL	INPut<1>:ATTenuation 0 to 70/75dB (with/without FSP-B25)
RF ATTEN AUTO	INPut<1>:ATTenuation:AUTO ON OFF
TRIGGER OFFSET	-- (for remote control, the GSM trigger offset has to be set with commands TRIGger[:SEQuence]:SYNChronize:ADJust:...)
TRIGGER EXTERN	INStrument[:SElect] MGSM TRIGger[:SEQuence]:SYNChronize:ADJust:EXTErnal -460μs to 100s
TRIGGER IF POWER	INStrument[:SElect] MGSM TRIGger[:SEQuence]:SYNChronize:ADJust:IFPower -460μs to 100s
NO. OF BURSTS	[SENSe<1>:]SWEep:COUNT 0 to 32767
DEMODO SETTINGS	
SELECT MIDAMBLE	INStrument[:SElect] MGSM CONFIgure:CHANnel:TSC 0 to 7 USER
SET USER MIDAMBLE	INStrument[:SElect] MGSM CONFIgure:CHANnel:TSC:USER <string>
BURST FIND	--
SYNC FIND	--
MODULATION GMSK EDGE	CONFIgure:MTYPE GMSK EDGE

MODULATION
ACCURACY

```
INSTRUMENT[:SELECT] MGSM
CONFIGURE:MTYPE EDGE
CONFIGURE:BURST:MACCURITY[:IMMEDIATE]
SWEET:COUNT <num_value>
INITIATE:IMMEDIATE; *WAI
```

Query of result:

```
FETCH:BURST:MACCURITY:RMS:AVERAGE?
FETCH:BURST:MACCURITY:RMS:MAXIMUM?
FETCH:BURST:MACCURITY:PEAK:AVERAGE?
FETCH:BURST:MACCURITY:PEAK:MAXIMUM?
FETCH:BURST:MACCURITY:OSUPPRESS:AVERAGE?
FETCH:BURST:MACCURITY:OSUPPRESS:MAXIMUM?
FETCH:BURST:MACCURITY:PERCENTILE:AVERAGE?
FETCH:BURST:MACCURITY:PERCENTILE:MAXIMUM?
FETCH:BURST:MACCURITY:FREQUENCY:AVERAGE?
FETCH:BURST:MACCURITY:FREQUENCY:MAXIMUM?
```

PHASE/FREQ
ERROR

```
INSTRUMENT[:SELECT] MGSM
CONFIGURE:MTYPE GMSK
CONFIGURE:BURST:PFERROR[:IMMEDIATE]
SWEET:COUNT <num_value>
INITIATE:IMMEDIATE; *WAI
```

Query of result:

```
FETCH:BURST:PFERROR:RMS:AVERAGE?
FETCH:BURST:PFERROR:RMS:MAXIMUM?
FETCH:BURST:PFERROR:PEAK:AVERAGE?
FETCH:BURST:PFERROR:PEAK:MAXIMUM?
FETCH:BURST:PFERROR:AVERAGE?
FETCH:BURST:PFERROR:MAXIMUM?
```

CARRIER
POWER

```
INSTRUMENT[:SELECT] MGSM
CONFIGURE:MTYPE GMSK | EDGE
CONFIGURE:BURST:POWER[:IMMEDIATE]
SWEET:COUNT <num_value>
INITIATE:IMMEDIATE; *WAI
```

Query of result:

```
CALCULATE:MARKER:FUNCTION:SUMMARY:MEAN:RESULT?
CALCULATE1:LIMIT1:NAME 'CPWU_G' | 'CPWU_E'
CALCULATE1:LIMIT2:NAME 'CPWL_G' | 'CPWL_E'
CALCULATE1:LIMIT1:FAIL?
CALCULATE1:LIMIT2:FAIL?
```

POWER
VS TIME

```
INSTRUMENT[:SELECT] MGSM
CONFIGURE:MTYPE GMSK | EDGE
CONFIGURE:BURST:PTEMPLATE[:IMMEDIATE]
CONFIGURE:BURST:PTEMPLATE:SELECT FULL
SWEET:COUNT <num_value>
READ:BURST:PTEMPLATE:REFERENCE[:IMMEDIATE]? (premeasurement)
INITIATE:IMMEDIATE; *WAI
```

Query of result:

```
CALCULATE1:LIMIT1:NAME 'PVTU_G' | 'PVTU_E'
CALCULATE1:LIMIT2:NAME 'PVTL_G' | 'PVTL_E'
CALCULATE1:LIMIT1:FAIL?
CALCULATE1:LIMIT2:FAIL?
```

Note: For setting CONFIGURE:BURST:PTEMPLATE:SELECT FULL and TOP, the carrier power (CPW) can be queried via command
CALCULATE:MARKER:FUNCTION:SUMMARY:MEAN:RESULT?

FULL
BURST

```
INSTRUMENT[:SELECT] MGSM
CONFIGURE:BURST:PTEMPLATE[:IMMEDIATE]
CONFIGURE:BURST:PTEMPLATE:SELECT FULL
```

RISING
EDGE

```
INSTRUMENT[:SELECT] MGSM
CONFIGURE:BURST:PTEMPLATE[:IMMEDIATE]
CONFIGURE:BURST:PTEMPLATE:SELECT RISING
```

FALLING
EDGE

```
INSTRument[:SElect] MGSM
CONFIgure:BURSt:PTEmpLate[:IMMediate]
CONFIgure:BURSt:PTEmpLate:SElect FALLing
```

TOP
HIGH RESOL

```
INSTRument[:SElect] MGSM
CONFIgure:BURSt:PTEmpLate[:IMMediate]
CONFIgure:BURSt:PTEmpLate:SElect TOP
```

START
REF MEAS

```
INSTRument[:SElect] MGSM
CONFIgure:MTYPE GMSK | EDGE
CONFIgure:BURSt:PTEmpLate[:IMMediate]
READ:BURSt:PTEmpLate:REfERENCE[:IMMediate]?
```

Query of result is included in READ command

MODULATION
SPECTRUM

FREQUENCY
SWEEP

```
INSTRument[:SElect] MGSM
CONFIgure:MTYPE GMSK | EDGE
CONFIgure:SPECTrum:MODulation[:IMMediate]
SWEep:COUNT <num_value>
READ:SPECTrum:MODulation:REfERENCE[:IMMediate]? (premeasurement)
INITiate:IMMediate; *WAI
```

Query of result:

```
CALCulate1:LIMit1:NAME 'MODU_G' | 'MODU_E'
CALCulate1:LIMit1:FAIL?
```

START
LIST

```
INSTRument[:SElect] MGSM
CONFIgure:MTYPE GMSK | EDGE
CONFIgure:SPECTrum:MODulation[:IMMediate]
SWEep:COUNT <num_value>
READ:SPECTrum:MODulation:REfERENCE[:IMMediate]? (premeasurement)
READ:SPECTrum:MODulation[:ALL]?
```

Query of result is included in READ commands

LIST
RESULTS

```
INSTRument[:SElect] MGSM
CONFIgure:MTYPE GMSK | EDGE
CONFIgure:SPECTrum:MODulation[:IMMediate]
FETCh:SPECTrum:MODulation:REfERENCE?
FETCh:SPECTrum:MODulation[:ALL]? ARFCn
```

START
REF MEAS

```
INSTRument[:SElect] MGSM
CONFIgure:MTYPE GMSK | EDGE
CONFIgure:SPECTrum:MODulation[:IMMediate]
READ:SPECTrum:MODulation:REfERENCE[:IMMediate]?
```

Query of result is included in READ command.

TRANSIENT
SPECTRUM

FREQUENCY
SWEEP

```
INSTRument[:SElect] MGSM
CONFIgure:MTYPE GMSK | EDGE
CONFIgure:BURSt:SWITChing[:IMMediate]
SWEep:COUNT <num_value>
INITiate:IMMediate; *WAI
```

Query of result:

```
CALCulate1:LIMit1:NAME 'TRAU_G' | 'TRAU_E'
CALCulate1:LIMit1:FAIL?
```

START
LIST

```
INSTRument[:SElect] MGSM
CONFIgure:MTYPE GMSK | EDGE
CONFIgure:SPECTrum:SWITChing[:IMMediate]
SWEep:COUNT <num_value>
READ:SPECTrum:SWITChing[:ALL]?
```

Query of result is included in READ command

LIST
RESULTS

```
INSTRument[:SElect] MGSM
CONFIgure:MTYPE GSMK | EDGE
CONFIgure:BURSt:SWITChing[:IMMediate]
FETCh:SPECTrum:SWITChing[:ALL]?
```

SPURIOUS

```
INSTRument[:SElect] MGSM
CONFIgure:MTYPE GSMK | EDGE
CONFIgure:SPURious[:IMMediate]
SWEep:COUNT <num_value>
INITiate:IMMediate; *WAI

Query of result:
CALCulate:MARKer ON
CALCulate:MARKer:MAXimum
CALCulate:MARKer:MAXimum:NEXT
(the marker marks the peak spurious)
CALCulate:MARKer:X?;Y?
```

LINES Key

RESTORE
GSM LINES

```
INSTRument[:SElect] MGSM
CONFIgure:RESTore
```

Status Reporting Registers for GSM Measurements

Overview of Status Registers

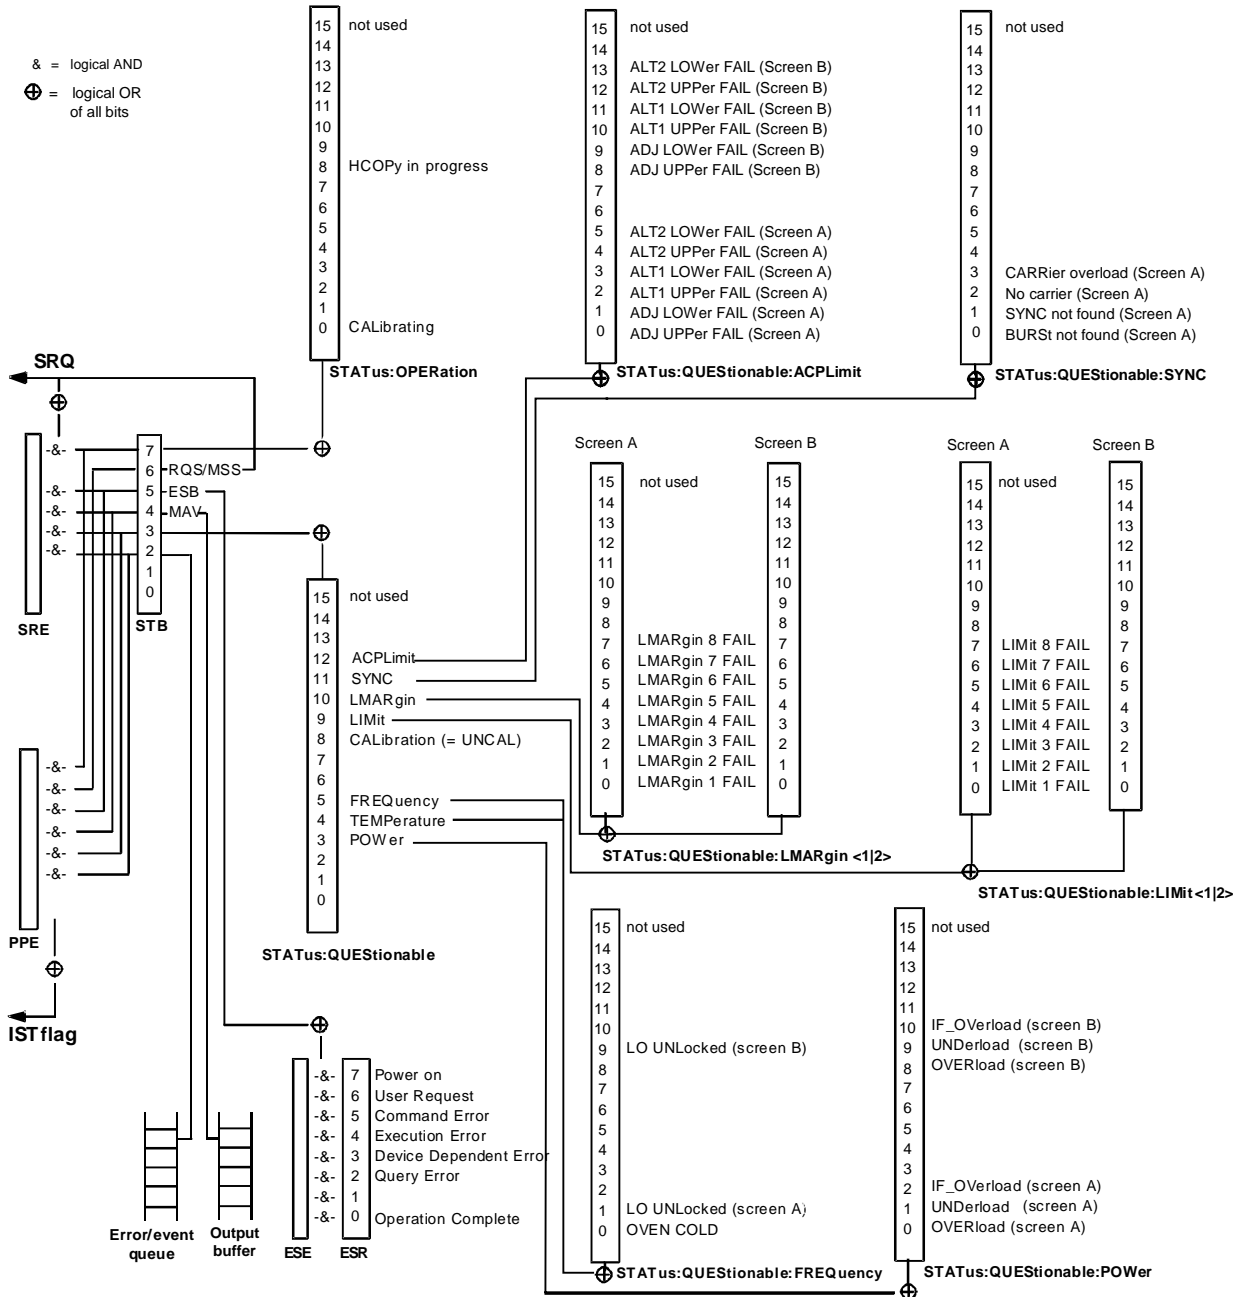


Fig 3-1 Overview of Status Registers

STATus:QUESTionable Register

This register comprises information about indefinite states which may occur if the unit is operated without meeting the specifications. It can be queried by commands `STATus:QUESTionable:CONDition?` and `STATus:QUESTionable[:EVENT]?`.

For GSM MS mode (FS-K5), the sum bit number 11 is defined.

Table 3-1 Meaning of bits in STATus:QUESTionable register

Bit No.	Meaning
0 to 2	These bits are not used.
3	POWER This bit is set if a questionable power occurs (see also section "STATus:QUESTionable:POWER Register").
4	TEMPerature This bit is set if a questionable temperature occurs.
5	FREQuency The bit is set if a frequency is questionable (see also section "STATus:QUESTionable:FREQuency Register").
6 to 7	These bits are not used.
8	CALibration The bit is set if a measurement is performed uncalibrated ($\hat{=}$ label "UNCAL").
9	LIMit (device-dependent) This bit is set if a limit value is violated (see also section STATus:QUESTionable:LIMit Register).
10	LMARgin (device-dependent) This bit is set if a margin is violated (see also section STATus:QUESTionable:LMARgin Register).
11	SYNC (device-dependent) This bit is set if, in measurements or premeasurements in GSM MS mode, synchronization to midamble fails or no burst is found. This bit is also set if, in premeasurements in GSM MS mode, the result differs too strongly from the expected value (see also "STATus:QUESTionable:SYNC Register").
12	ACPLimit (device-dependent) This bit is set if a limit for the adjacent channel power measurement is violated (see also section "STATus:QUESTionable:ACPLimit Register").
13 to 14	These bits are not used.
15	This bit is always 0.

STATus-QUEStionable:SYNC Register

This register is used only with GSM MS mode. It contains information about sync and bursts not found, and about premeasurement results exceeding or falling short of expected values.

The bits can be queried with commands "STATus:QUEStionable:SYNC:CONDition?" and "STATus:QUEStionable:SYNC[:EVENT]?".

Table 3-2 Meaning of bits in STATus:QUEStionable:SYNC register

Bit No.	Meaning
0	<p>BURSt not found (screen A)</p> <p>This bit is set if no burst is found in the measurements/premeasurements for phase/frequency error (PFE) or carrier power versus time (PVT) in GSM MS mode. If a burst is found in these measurements/premeasurements, the bit is reset.</p>
1	<p>SYNC not found (screen A)</p> <p>This bit is set if the synchronization sequence (training sequence) of the midamble is not found in the measurements/premeasurements for phase/frequency error (PFE) or carrier power versus time (PVT) in GSM MS mode. If the synchronization sequence (training sequence) of the midamble is found in these measurements/premeasurements, the bit is reset.</p>
2	<p>No carrier (screen A)</p> <p>This bit is set if, in GSM MS mode, the level value determined in the premeasurements for carrier power versus time (PVT) and spectrum due to modulation is too low. The bit is reset at the beginning of the premeasurement (see also Chapter 2, description of the named premeasurements).</p>
3	<p>Carrier overload (screen A)</p> <p>This bit is set if, in GSM MS mode, the level value determined in the premeasurements for carrier versus time (PVT) and spectrum due to modulation is too high. The bit is reset at the beginning of the premeasurement (see also Chapter 2, description of the named premeasurements).</p>
4-14	Not used.
15	This bit is always 0.

Index

Note: The softkeys are listed alphabetically under the keyword "Softkey".

8

8PSK.....	1.1
Midamble.....	2.8, 3.5
selection.....	3.6

A

Aborting a measurement.....	1.8
ARFCN.....	1.1

B

BURST FIND always ON in this version.....	1.15
Burst not found.....	1.13
Burst timing.....	2.29

C

Carrier Overload Bit.....	2.35, 2.47
Carrier power.....	2.23
Carrier power vs. time.....	2.29
Carrier signal, not detected.....	1.13
Command	
Description.....	3.1

E

EDGE.....	1.1, 1.4
Midamble.....	2.8, 3.5
selection.....	3.6
Edge of a burst.....	2.32, 2.33
Errors and difficulties during measurement.....	1.13
Ext Trig/Gate In input.....	2.6

F

FAILED.....	1.8
FDMA.....	1.1
FREQ AVG.....	2.13
FREQ HLD.....	2.13

G

GMSK.....	1.1
Midamble.....	2.8, 3.5
selection.....	3.6
GPRS.....	1.4
GSM LIST MEAS in progress.....	1.14
GSM MOD LIST MEAS Aborted.....	1.14
GSM MS.....	2.1
GSM PVT REF MEAS Aborted.....	1.14
GSM REF MEAS in progress.....	1.14
GSM TRA LIST MEAS Aborted.....	1.14

H

Hotkey	
GSM MS.....	1.6, 1.9, 2.1
HSCSD.....	1.4

I

IF Power Trigger active.....	1.14
Input	
Ext Trig/Gate In.....	2.6

K

Key	
FREQ.....	2.11

L

LIMIT LINE ERROR! No or wrong limit line or limit checks disabled on TRACE1'.....	1.15
---	------

M

MARGIN.....	1.8
Measurement	
aborting.....	1.8
Measurements	
results.....	1.8
Messages from the GSM-MS software.....	1.14

N

No Carrier Bit.....	2.36, 2.47
NOTE! BURST FIND always ON in this version.....	1.15
NOTE! SYNC FIND always ON in this version.....	1.15

P

PASSED.....	1.8
PEAK AVG.....	2.13
PEAK HLD.....	2.13
Phase/frequency error.....	2.18
Power vs. time.....	2.29

R

REF LEVEL too high DECREASE REF LEVEL.....	1.14
REF LEVEL too low INCREASE REF LEVEL.....	1.15
Results of measurements.....	1.8
RMS AVG.....	2.13
RMS HLD.....	2.13

S

Signal power = ***.* dBm.....	2.36
Signal power = ppp.p dBm. REFERENCE LEVEL too high! DECREASE REFERENCE LEVEL!	2.36, 2.47
Signal power = ppp.p dBm. REFERENCE LEVEL too low! INCREASE REFERENCE LEVEL!	2.35, 2.47
Slow frequency hopping	2.15, 2.21
Softkey	
BURS HIGH RESOLUTION	2.34
BURST FIND.....	2.9
CARRIER POWER.....	2.24
DEMOD SETTINGS	2.7
EXTERNAL ATTEN.....	2.4
FALLING EDGE	2.33
FULL BURST	2.31
GENERAL SETTINGS	2.3
LIST RESULTS	2.46, 2.56
MODULATION GMSK / 8PSK.....	2.9
MODULATION SPECTRUM.....	2.42
NO. OF BURSTS	2.6
PHASE/FREQ ERROR	2.13, 2.19
POWER VS TIME	2.30
REF LEVEL.....	2.4
REFERENCE INT/EXT.....	2.3
RESTORE GSM LINES.....	2.10
RF ATTEN AUTO.....	2.5
RF ATTEN MANUAL.....	2.5
RISING EDGE.....	2.32
SELECT MIDAMBLE.....	2.7
SINGLE FREQ SWEEP	2.42, 2.43, 2.53, 2.54
START LIST.....	2.44, 2.55
START REF MEAS	2.35, 2.46
SYNC FIND.....	2.9
TRANSIENT SPECTRUM.....	2.53
TRIGGER EXTERN.....	2.6
TRIGGER IF POWER	2.6
TRIGGER OFFSET.....	2.5
Softkey SET USER MIDAMBLE	2.8
Spectrum due to modulation	2.41
Spurious	2.61
Spurious, measuring.....	2.61
STATusQUEStionable-Register.....	3.53
SYNC.....	3.54
SYNC FIND always ON in this version	1.15
Sync not found.....	1.13
SYNC NOT FOUND	2.38

T

TDMA	1.1
Trigger	
not detected	1.13
Trigger and time references.....	1.11
Trigger Offset between external Trigger and 'begin of slot'.....	1.15
Trigger Offset between IF Power Trigger and 'begin of slot'	1.15

W

WARNING! REF LEVEL too high DECREASE REF LEVEL	1.14
WARNING! REF LEVEL too low INCREASE REF LEVEL.....	1.15
WARNING! Signal power = ppp.p dBm. REFERENCE LEVEL too high! DECREASE REFERENCE LEVEL!	2.36, 2.47
WARNING! Signal power = ppp.p dBm. REFERENCE LEVEL too low! INCREASE REFERENCE LEVEL!	2.35, 2.47