



ROHDE & SCHWARZ

Test and Measurement
Division

Operating Manual

Signal Generator

AM / FM / ϕ M

SMY01

**9 kHz - 1040 MHz
1062.5502.11**

SMY02

**9 kHz - 2080 MHz
1062.5502.12**

SMY43

**9 kHz - 2080 MHz
1062.5502.43**

Printed in the Federal
Republic of Germany

Tabbed Divider Overview

Contents

Data Sheet

Safety Instructions
Certificate of quality
EC Certificate of Conformity
List of R & S Representatives

Tabbed Divider

1	Chapter 1: Preparation for Use
2	Chapter 2: Manual Operation
3	Chapter 3: Remote Control
4	Chapter 4: Maintenance
5	Chapter 5: Performance Test
6	Index

Contents

	Page
1 Preparation for Use	
1.1 Putting into Operation.....	1.1
1.2 Power Supply/Power Fuses.....	1.1
1.3 Mounting into a 19" Rack	1.1
1.4 Option SMY-B1	1.2
1.5 Option SMY-B40	1.3
2 Manual Operation	
2.1 Front and Rear Views.....	2.2
2.2 Pattern Setting for First Users	2.4
2.3 Basic Operation	2.4
2.4 Power-on Status	2.9
2.5 Internal/External Reference Frequency	2.9
2.6 Frequency (RF)	2.10
2.7 LEVEL	2.10
2.8 Non-Interrupting Level Setting.....	2.11
2.9 Level Control Without Function.....	2.11
2.10 Level EMF.....	2.12
2.11 Internal AF Modulation Frequency	2.12
2.12 Modulation, AM.....	2.13
2.13 Pulse Modulation.....	2.15
2.14 Modulation, FM	2.15
2.15 Modulation, ϕ M	2.17
2.16 Modulation, External Source	2.18
2.17 Modulation, Two-tone	2.18
2.18 Variation, Rotary Knob.....	2.19
2.19 Sweep	2.21
2.20 Store - Recall.....	2.22
2.21 Sequence.....	2.23
2.22 Special Functions	2.24
2.23 Self-Test	2.27
2.24 Status.....	2.27
2.25 Instrument Preset	2.30
2.25 IEC-Bus Address	2.31

3 Remote Control of Instrument via IEC Bus

3.1	Brief Instructions for Simple Applications.....	3.1
3.2	Setting the Device Address	3.1
3.3	Device Messages.....	3.2
3.3.1	Device-specific Setting Commands.....	3.2
3.3.2	Device-specific Data Request Commands and Messages Sent by the SMY.....	3.6
3.3.3	Common, Device-independent Setting Commands	3.9
3.3.4	Common, Device-independent Data Request Commands	3.10
3.3.5	Examples	3.11
3.3.6	Syntax of Setting Commands and Data Request Commands	3.12
3.3.7	Data Request and Syntax of the Messages Sent by the SMY to the Controller.....	3.15
3.3.8	Alternative Commands and Notations	3.17
3.3.9	Multiple Settings	3.17
3.4	Interface Messages	3.19
3.4.1	Universal Commands	3.19
3.4.2	Addressed Commands.....	3.19
3.5	Service Request and Status Register.....	3.21
3.6	Command Processing Sequence and Synchronization	3.26
3.7	Error Handling.....	3.27
3.8	Resetting Device Functions	3.28
3.9	Local/Remote Switchover.....	3.28
3.10	Interface Function	3.29
3.11	IEC-Bus Connector and Bus Lines.....	3.30

4 Maintenance and Troubleshooting

4.1	Maintenance.....	4.1
4.1.1	Cleaning the Exterior of the Instrument.....	4.1
4.1.2	Storage	4.1
4.2	Function Check (Self-test).....	4.1
4.2.1	Self-test.....	4.1
4.2.2	Calibration.....	4.1

5 Testing the Rated Specifications

5.1	Required Measuring Equipment and Accessories.....	5.1
5.2	Test Procedure	5.2
5.2.1	Display and Keyboard.....	5.2
5.2.2	Frequency Setting.....	5.2
5.2.3	Reference Frequency	5.3
5.2.4	Settling Time.....	5.3
5.2.5	Output Level	5.4
5.2.6	Attenuation Set	5.4
5.2.7	Non-interrupting Level Setting	5.5
5.2.8	Output Reflection Coefficient.....	5.5
5.2.9	Harmonics	5.6
5.2.10	Spurious.....	5.7
5.2.11	SSB Phase Noise	5.7
5.2.12	Broadband Noise	5.9
5.2.13	Residual FM.....	5.9
5.2.14	Modulation Generator	5.10
5.2.15	Function Test of the External Modulation Level Monitoring.....	5.10
5.2.16	AM Modulation Depth	5.10
5.2.17	AM Distortion	5.11
5.2.18	AM Frequency Response	5.11
5.2.19	AM DC	5.11
5.2.20	Residual AM	5.11
5.2.21	Incidental ϕ M at AM.....	5.12
5.2.22	FM Deviation Setting	5.12
5.2.23	FM Distortion	5.12
5.2.24	FM Frequency Response	5.12
5.2.25	Incidental AM at FM.....	5.13
5.2.26	Stereo Modulation.....	5.13
5.2.27	PM Deviation Setting	5.13
5.2.28	PM Distortion	5.13
5.2.29	PM Frequency Response	5.14
5.2.30	Overvoltage Protection with OPTION SMY-B40.....	5.14
5.2.31	Overvoltage Protection without OPTION SMY-B40.....	5.14
5.2.32	Pulse Modulation with OPTION SMY-B40.....	5.15
5.2.33	Pulse Modulation without OPTION SMY-B40.....	5.15
5.3	Performance Test Report.....	5.16









6 Index

Safety Instructions

This unit has been designed and tested in accordance with the EC Certificate of Conformity and has left the manufacturer's plant in a condition fully complying with safety standards.

To maintain this condition and to ensure safe operation, the user must observe all instructions and warnings given in this operating manual.

Safety-related symbols used on equipment and documentation from R&S:

							
Observe operating instructions	Weight indication for units >18 kg	PE terminal	Ground terminal	Danger! Shock hazard	Warning! Hot surfaces	Ground	Attention! Electrostatic sensitive devices require special care

1. The unit may be used only in the operating conditions and positions specified by the manufacturer. Unless otherwise agreed, the following applies to R&S products:
Pollution severity 2, overvoltage category 2, IP degree of protection 2X, altitude max. 2000 m.
The unit may be operated only from supply networks fused with max. 16 A.
2. For measurements in circuits with voltages $V_{rms} > 30\text{ V}$, suitable measures should be taken to avoid any hazards.
(using, for example, appropriate measuring equipment, fusing, current limiting, electrical separation, insulation).
3. If the unit is to be permanently wired, the PE terminal of the unit must first be connected to the PE conductor on site before any other connections are made (installation and cabling of the unit to be performed only by qualified technical personnel).
4. For permanently installed units without built-in fuses, circuit breakers or similar protective devices, the supply circuit must be fused such as to provide suitable protection for the users and equipment.
5. Prior to switching on the unit, it must be ensured that the nominal voltage set on the unit matches the nominal voltage of the AC supply network.
If a different voltage is to be set, the power fuse of the unit may have to be changed accordingly.
6. Units of protection class I with disconnectible AC supply cable and appliance connector may be operated only from a power socket with earthing contact and with the PE conductor connected.
7. It is not permissible to interrupt the PE conductor intentionally, neither in the incoming cable nor on the unit itself as this may cause the unit to become electrically hazardous.
Any extension lines or multiple socket outlets used must be checked for compliance with relevant safety standards at regular intervals.
8. If the unit has no power switch for disconnection from the AC supply, the plug of the connecting cable is regarded as the disconnecting device. In such cases it must be ensured that the power plug is easily reachable and accessible at all times (length of connecting cable approx. 2 m). Functional or electronic switches are not suitable for providing disconnection from the AC supply.
If units without power switches are integrated in racks or systems, a disconnecting device must be provided at system level.
9. Applicable local or national safety regulations and rules for the prevention of accidents must be observed in all work performed.
Prior to performing any work on the unit or opening the unit, the latter must be disconnected from the supply network.
Any adjustments, replacements of parts, maintenance or repair may be carried out only by authorized R&S technical personnel.
Only original parts may be used for replacing parts relevant to safety (eg power switches, power transformers, fuses). A safety test must be performed after each replacement of parts relevant to safety.
(visual inspection, PE conductor test, insulation-resistance, leakage-current measurement, functional test).

continued overleaf

Safety Instructions

10. Ensure that the connections with information technology equipment comply with IEC950/EN60950.
11. Lithium batteries must not be exposed to high temperatures or fire.
Keep batteries away from children.
If the battery is replaced improperly, there is danger of explosion. Only replace the battery by R&S type (see spare part list)
Lithium batteries are suitable for environmentally-friendly disposal or specialized recycling. Dispose them into appropriate containers, only.
Do not short-circuit the battery.
12. Equipment returned or sent in for repair must be packed in the original packing or in packing with electrostatic and mechanical protection.
13. Electrostatics via the connectors may damage the equipment. For the safe handling and operation of the equipment, appropriate measures against electrostatics should be implemented.
14. Any additional safety instructions given in this manual are also to be observed.

Patent Information

This product contains technology licensed by Marconi Instruments LTD. under US patents 4609881 and 4870384 and under corresponding patents in Germany and elsewhere.

Certified Quality System ISO 9001

DQS REG. NO 1954-04

Qualitätszertifikat

Sehr geehrter Kunde,

Sie haben sich für den Kauf eines Rohde & Schwarz-Produktes entschieden. Hiermit erhalten Sie ein nach modernsten Fertigungsverfahren hergestelltes Produkt. Es wurde nach den Regeln unseres Qualitätsmanagementsystems entwickelt, gefertigt und geprüft. Das Rohde & Schwarz-Qualitätsmanagementsystem ist nach ISO 9001 zertifiziert.

Certificate of quality

Dear Customer,

You have decided to buy a Rohde & Schwarz product. You are thus assured of receiving a product that is manufactured using the most modern methods available. This product was developed, manufactured and tested in compliance with our quality management system standards.

The Rohde & Schwarz quality management system is certified according to ISO 9001.

Certificat de qualité

Cher client,

Vous avez choisi d'acheter un produit Rohde & Schwarz. Vous disposez donc d'un produit fabriqué d'après les méthodes les plus avancées. Le développement, la fabrication et les tests respectent nos normes de gestion qualité.

Le système de gestion qualité de Rohde & Schwarz a été homologué conformément à la norme ISO 9001.



ROHDE & SCHWARZ



Certificate No.: 9502291

This is to certify that:

Equipment type	Order No.	Designation
SMY01	1062.5502.11	Signalgenerator
SMY02	1062.5502.12	Signalgenerator
SMY43	1062.5502.43	Signalgenerator
SMY-B1	1062.7505.02	Reference Oscillator OCXO
SMY-B40	1062.9008.02	High Output Power

complies with the provisions of the Directive of the Council of the European Union on the approximation of the laws of the Member States

- relating to electrical equipment for use within defined voltage limits
(73/23/EEC revised by 93/68/EEC)
- relating to electromagnetic compatibility
(89/336/EEC revised by 91/263/EEC, 92/31/EEC, 93/68/EEC)

Conformity is proven by compliance with the following standards:

EN61010-1 : 1991
EN50081-1 : 1992
EN50082-1 : 1992

Affixing the EC conformity mark as from 1995

ROHDE & SCHWARZ GmbH & Co. KG
Mühldorfstr. 15, D-81671 München

Munich, 1997-10-29

Central Quality Management FS-QZ / Becker

Support Center

Telefon / Telephone: (0180) 512 42 42

Fax: (++89) 41 29 - 137 77

e-mail: CustomerSupport@rsd.rohde-schwarz.com

Für technische Fragen zu diesem Rohde & Schwarz-Gerät steht Ihnen ab sofort unsere Hotline der Rohde & Schwarz Vertriebs-GmbH, Support Center, zur Verfügung.

Unser Team bespricht mit Ihnen Ihre Fragen und sucht Lösungen für Ihre Probleme.

Die Hotline ist Montag bis Freitag von 8.00 bis 17.00 Uhr besetzt.

Bei Anfragen außerhalb der Geschäftszeiten hinterlassen Sie bitte eine Nachricht oder senden Sie eine Notiz per Fax oder e-mail. Wir setzen uns dann baldmöglichst mit Ihnen in Verbindung.

Should you have any technical questions concerning this Rohde & Schwarz product, please contact the hotline of Rohde & Schwarz Vertriebs-GmbH, Support Center.

Our hotline team will answer your questions and find solutions to your problems.

You can reach the hotline Monday through Friday from 8:00 until 17:00.

If you need assistance outside office hours, please leave a message or send us a fax or e-mail. We will contact you as soon as possible.



ROHDE & SCHWARZ

Adressen/Addresses

FIRMENSITZ/HEADQUARTERS

ROHDE & SCHWARZ GmbH & Co. KG

Mühlendorfstraße 15 · 81671 München +49 89 41 29-0
 Postfach 801469 · 81614 München +49 89 41 29-12164
 Internet: www.rohde-schwarz.com -

WERKE/PLANTS

ROHDE & SCHWARZ Messgerätebau GmbH

Riedbachstraße 58 · 87700 Memmingen +49 83 31 10 8-0
 Postfach 16 52 · 87686 Memmingen +49 83 31 10 81 124 -

ROHDE & SCHWARZ GmbH & Co. KG

Werk Teisnach +49 99 23 8 57-0
 Kaikenrieder Straße 27 · 94244 Teisnach +49 99 23 8 571-1 74
 Postfach 11 49 · 94240 Teisnach -

ROHDE & SCHWARZ GmbH & Co. KG · Werk Köln

Graf-Zeppelin-Straße 18 · 51147 Köln +49 22 03 49-0
 Postfach 98 02 60 · 51130 Köln +49 22 03 49-51 3 08 -

TOCHTERUNTERNEHMEN/SUBSIDIARIES

ROHDE & SCHWARZ Vertriebs-GmbH

Mühlendorfstraße 15 · 81671 München +49 89 4129-120 07
 Postfach 801469 · 81614 München +49 89 4129-135 67
 customersupport@rohde-schwarz.com

ROHDE & SCHWARZ International GmbH

Mühlendorfstraße 15 · 81671 München +49 89 4129-120 05
 Postfach 80 14 60 · 81614 München +49 89 4129-135 97 -

ROHDE & SCHWARZ Engineering and Sales GmbH

Mühlendorfstraße 15 · 81671 München +49 89 4129-137 11
 Postfach 80 14 29 · 81614 München +49 89 4129-137 23 -

R&S BICK Mobilfunk GmbH

Im Landerfeld 7 · 31848 Bad Münder +49 50 42 9 98-0
 Postfach 20 62 · 31844 Bad Münder +49 50 42 9 98-105
 rsbick@rsbick.rohde-schwarz.com

ROHDE & SCHWARZ FTK GmbH

Wendenschloßstraße 168, Haus 28 +49 30 6 58 91-122
 12557 Berlin +49 30 65 550-221 -

SIT Gesellschaft für Systeme

der Informationstechnik mbH +49 30 6 58 84-2 22
 Wendenschloßstraße 168, Haus 28 +49 30 6 58 84-1 83
 12557 Berlin sit.info@sit.rohde-schwarz.com

Zweigniederlassungen der Rohde & Schwarz Vertriebs-GmbH/Branch offices of Rohde & Schwarz Vertriebs-GmbH

Zweigniederlassung Berlin

Ernst-Reuter-Platz 10 · 10587 Berlin (+49 30) 34 79 48-0
 Postfach 100620 · 10566 Berlin (+49 30) 34 79 48-48
 customersupport@rohde-schwarz.com

Zweigniederlassung Büro Bonn

Josef-Wirmer-Straße 1-3 · 53123 Bonn (+49 2 28) 918 90-0
 Postfach 140264 · 53057 Bonn (+49 2 28) 25 50 87
 customersupport@rohde-schwarz.com

Zweigniederlassung Hamburg

Steilshooper Allee 47 · 22309 Hamburg (+49 40) 63 29 00-0
 Postfach 602240 · 22232 Hamburg (+49 40) 630 78 70
 customersupport@rohde-schwarz.com

Zweigniederlassung Köln

Graf-Zeppelin-Straße 18 · 51147 Köln (+49 22 03) 807-0
 Postfach 900149 · 51111 Köln (+49 22 03) 807-50
 customersupport@rohde-schwarz.com

Telefon/Phone

Telefax

E-mail

Zweigniederlassung Mitte

Siemensstraße 20 (+49 61 02) 20 07-0
 63263 Neu-Isenburg (+49 61 02) 80 00 40
 customersupport@rohde-schwarz.com

Zweigniederlassung München

Mühlendorfstraße 15 · 81671 München (+49 89) 41 86 95-0
 Postfach 801449 · 81614 München (+49 89) 40 47 64
 customersupport@rohde-schwarz.com

Zweigniederlassung Nürnberg

Donaustraße 36 (+49 9 11) 64203-0
 90451 Nürnberg (+49 9 11) 64203-33
 customersupport@rohde-schwarz.com

Zweigniederlassung Telekommunikation

Siemensstraße 20 (+49 61 02) 20 07-0
 63263 Neu-Isenburg (+49 61 02) 20 07-12
 customersupport@rohde-schwarz.com

ADRESSEN WELTWEIT/ADDRESSES WORLDWIDE

Algeria

ROHDE & SCHWARZ Bureau d'Alger (2) 59 24 53
 5 B, Place de Laperrine (2) 69 46 08
 16035 Hydra-Alger -

Argentina

Precisión Electrónica SRL (14) 331 16 85
 Av. Julio A. Roca 710 - Piso 6 (14) 334 51 11
 1067 Buenos Aires preelctr@satlink.com

Australia

ROHDE & SCHWARZ Sales (2) 8845 4100
 (AUSTRALIA) Pty. Ltd. (2) 9738 3988
 Unit 6, 2-8 South Street Service (2) 8845 4188
 Rydalmere, N.S.W. 2116 (2) 9638 0832
 sales@rsaus.rohde-schwarz.com
 service@rsaus.rohde-schwarz.com

Austria

ROHDE & SCHWARZ-ÖSTERREICH (1) 6 02 61 41
 Ges. m. b. H. (1) 6 02 61 41-14
 Sonnleithnergasse 20 office@rsoe.rohde-schwarz.com
 1100 Wien

Azerbaijan

ROHDE & SCHWARZ Azerbaijan 12 93 31 38
 Liaison Office Baku 12 93 03 14
 Azerbaijan Avenue 35 -
 370139 Baku

Baltic

Countries siehe/see Denmark

Bangladesh

Business International Ltd. (2) 881 06 53
 Corporation Office (2) 882 82 91
 House No: 95/A, Block 'F'
 Road No: 4, Banani -
 Dhaka - 1213

Belgium

ROHDE & SCHWARZ BELGIUM N.V. (2) 7 21 50 02
 Excelsiorlaan 31 Bus 1 (2) 7 25 09 36
 1930 Zaventem info@rsb.rohde-schwarz.com

Bolivia

siehe auch/see also Argentina
 RIBCO LTDA. (2) 32 84 03
 Av. Mariscal Santa Cruz 1392 (2) 39 30 47
 Ed. Cámara Nacional gibatta@caoba.entelnet.bo
 de Comercio
 Piso 10, Of.1010-1011
 La Paz

Brazil

ROHDE & SCHWARZ DO BRASIL LTDA.
 Av. Alfredo Egidio de (11) 56 41 12 00
 Souza Aranha, 177 (11) 56 41 78 10
 1º andar - Santo Amaro
 04726-170 São Paulo- SP

Adressen/Addresses

Brunei	GKL Equipment PTE. Ltd. #11-01 BP Tower 396, Alexandra Road Singapore 119954 Republic of Singapore	276 06 26 276 06 29 gkleqpt@signet.com.sg	Finland	Orbis Oy P.O. B. 15 00421 Helsinki	(9) 47 88 30 (9) 53 16 04 info@orbis.fi
Bulgaria	ROHDE & SCHWARZ Representation Office Bulgaria 39, Fridtjof Nansen Blvd. 1000 Sofia	(2) 963 43 34 (2) 963 21 97 rohdebg@rsoe.com	France	ROHDE & SCHWARZ FRANCE Immeuble "Le Newton" 9-11, rue Jeanne Braconnier 92366 Meudon-la-Forêt Cédex	(1) 41 36 10 00 (1) 41 36 11 10 -
Canada	Kommunikationstechnik/Communications Equipment: ROHDE & SCHWARZ CANADA Inc. 555 March Rd. Kanata, Ontario K2K 2M5	(613) 592 80 00 (613) 592 80 09 -		Niederlassung/Subsidiary Rennes: ROHDE & SCHWARZ FRANCE Sigma 1 Rue du Bignon 35135 Chantepie	(2) 99 51 97 00 (2) 99 41 91 31 -
	Messtechnik/T & M Equipment: TEKTRONIX CANADA, Inc. 3280 Langstaff Road, Unit 1 Concord, Ontario L4K 5B6	(416) 747 50 00 (905) 760 72 41 -		Niederlassung/Subsidiary Toulouse: ROHDE & SCHWARZ FRANCE Technoparc 3 B.P.501 31674 Labège Cédex Büros/Offices: Aix-en-Provence	(5) 61 39 10 69 (5) 61 39 99 10 -
Chile	DYMEQ Ltda. Avenida Larrain 6666 Santiago	(2) 277 50 50 (2) 227 87 75 dymeq@entelchile.net		Lyon Nancy	(4) 94 07 39 94 (4) 94 07 55 11 (4) 78 29 88 10 (4) 78 29 94 71 (3) 83 54 51 29 (3) 83 55 39 51
China	ROHDE & SCHWARZ Representative Office Beijing Parkview Center, Room 602 No. 2 Jiangtai Road, Chao Yang District Beijing 100016, P. R. China	(10) 64 31 28 28 (10) 64 37 98 88 -	Ghana	KOP Engineering Ltd. P.O. Box 11012 3rd Floor Akai House, Osu Accra	(21) 77 99 13 (21) 22 47 69
Colombia	Ferrostaal de Colombia Av. Eldorado Nro. 97-03 Interior 2 Santafé de Bogotá, D.C.	(1) 415 77 00 (1) 413 18 06 mc_fsc@multiphone.net.co	Greece	MERCURY SA. 6, Loukianou Str. 10675 Athens	(1) 722 92 13 (1) 721 51 98 mercury@hol.gr
Costa Rica	siehe/see Mexico (EPSA)		Guatemala	siehe/see Mexico (EPSA)	
Croatia	siehe/see Austria		Honduras	siehe/see Mexico (EPSA)	
Republic of Cyprus	HINIS TELECAST LTD. Agiou Thoma 18 Kiti Larnaca 7550	(4) 42 51 78 (4) 42 46 21	Hong Kong	Schmidt & Co. (HK) Ltd. 9/F North Somerset House Taikoo Place 979 King's Road Quarry Bay, Hong Kong	25 07 03 33 28 27 56 56 frankwong@shk.schmidtgroup.com
Czech Republic	ROHDE & SCHWARZ – Praha, s.r.o. Pod Kastany 3 160 00 Praha 6	(2) 24 32 20 14 (2) 24 31 70 43 rohdecz@rsoe.com	Hungary	ROHDE & SCHWARZ Budapesti Iroda Etele ut. 68 1115 Budapest	(1) 203 02 82 (1) 203 02 82 rohdehu@rsoe.com
Denmark	ROHDE & SCHWARZ DANMARK A/S Ejby Industrivej 40 2600 Glostrup	43 43 66 99 43 43 77 44 RSDK@post1.tele.dk	Iceland	siehe/see Denmark	
Ecuador	REPRESENTACIONES MANFRED WEINZIERL Guanguiltagua 72 (39-93) Urbanización Jardines del Batán Quito	(2) 25 22 51 (2) 25 22 51 mweinzierl@accessinter.net	India	ROHDE & SCHWARZ India Pvt. Ltd. 244, Okhla Industrial Estate Phase - III New Delhi 110 020	(11) 683 74 84 rsindiad@vsnl.com
Egypt	U.A.S. Universal Advanced Systems 31 Manshiet El Bakry St., Heliopolis 11341 Cairo	(202) 455 67 44 (202) 256 17 40 uas@intouch.com	Indonesia	P.T. REKANUSA SOLUSI Menara Rajawali, 24th floor Jl Mega Kuningan Lot # 5.1 Kawasan Mega Kuningan Jakarta 12950	(21) 576 16 02 (21) 576 16 04 -
El Salvador	siehe/see Mexico (EPSA)		Iran	ROHDE & SCHWARZ IRAN Liaison Office - Reg. N° RFC 1947 Dr. Beheschty Ave., Pakistan Ave., 12th Street N° 1 Tehran 15317	(21) 8 73 02 82 (21) 8 73 02 83 -
Estonia	ROHDE & SCHWARZ DANMARK A/S Estonian Branch Office Narva mnt. 13 10151 Tallinn	(6) 14 31 20 (6) 14 31 21			

Adressen/Addresses

Ireland	siehe/see Great Britain		
Italy	ROHDE & SCHWARZ ITALIA S.p.a. Via Tiburtina 1182 00156 Roma	(6) 41 59 81 (6) 41 59 82 70 -	
	Centro Direzionale Lombardo Via Roma 108 20060 Cassina de' Pecchi (MI)	(2) 95 70 41 (2) 95 30 27 72	
Japan	ADVANTEST Corporation RS Sales Department Shinjuku-NS Building, 4-1 Nishi-Shinjuku Tokyo 163-08, Japan	(3) 33 42 75 53 (3) 53 22 72 70 yoshimu@inst.advantest.co.jp	
Jordan	Middle East Development c/o Jordan Crown Engineering & Trading Co. P.O. Box 830414 Amman, 11183	(6) 465 96 71 (6) 465 96 72	
Kazakhstan	ROHDE & SCHWARZ Kazakhstan Liaison Office Almaty Pl. Respubliki 15 480013 Almaty	32 72 63 55 55 32 72 63 46 33 -	
Kenya	Excel Enterprises Limited Dunga Road P.O. Box 42 788 Nairobi	(2) 55 80 88 (2) 54 46 79	
Korea	Hana Technica Corp. Seoul Kangnam, P.O. Box 1458 Young Dong Bldg. 4F 63-16 Nonhyun-Dong, Kang Nam-Ku Seoul	(2) 514 45 46 (2) 514 45 49 hanateco@unitel.co.kr	
Kuwait	Group Five Trading & Contracting Co. P.O. Box 26645 Safat 13127 State of Kuwait	244 91 72 244 95 28	
Latvia	Rohde & Schwarz Danmark A/S Latvian Branch Office Merkela iela 21-301 1050 Riga	(7) 50 23 55 (7) 50 23 60 rsdk@rsdk.rohde-schwarz.com	
Lebanon	Rohde & Schwarz International Liaison Office Riyadh PO Box 361 c/o Haji Abdullah Alireza & Co. Riyadh 11411 - KSA	(1) 465 64 28 Ext. 303 (1) 465 64 28 Ext. 229	
Liechtenstein	siehe/see Switzerland		
Lithuania	Rohde & Schwarz Danmark A/S Lithuanian Office Lukiskiu 5-228 2600 Vilnius	222 46 62 222 46 62	
Luxembourg	siehe/see Belgium		
Malaysia	DAGANG TEKNIK SDN. BHD. No. 9, Jalan SS 4D/2 Taman People's Park 47301 Petaling Jaya Selangor Darul Ehsan	(3) 7035503/7035568 (3) 7 03 34 39 danik@tm.net.my	
Malta	ITEC - International Technology Ltd. B'Kara Road San Gwann	37 43 00 37 43 53 itec@keyworld.net	
Mexico	Vertrieb Kommunikationstechnik/ Sales of Communications Equipment: ELECTROINGENIERIA de Precisión S.A. (EPSA) Uxmal 520 Colonia Vertiz Narvarte 03600 Mexico DF		(5) 559 76 77 (5) 575 33 81 epsa@compuserve.com
	Vertrieb Messtechnik/Sales of T&M Equipment: Tektronix S.A. de C.V. Periférico Sur 5000, 8° Piso Col. Insurgentes Cuicuilco Del. Coyoacán 04530 Mexico, D.F.		(5) 666 63 33 (5) 666 63 36
Nepal	Abishek Trade Links (P) Ltd. P.O.B. 9700 Kathmandu	(1) 25 69 30 (1) 24 25 73 Durbar@hotel.mos.com.np	
Netherlands	ROHDE & SCHWARZ NEDERLAND B.V. Perkinsbaan 1 3439 ND Nieuwegein	(30) 600 17 00 (30) 600 17 99 Rob.DenHartog@rsn.rohde-schwarz.com	
New Zealand	Nichecom Level 1 Tawa Plaza 210 Main Rd / P.O.B. 56-045 Tawa, Wellington	(4) 232 32 33 (4) 232 32 30 ISDN (4) 237 30 10 robin.hodgson@nichecom.co.nz	
Nicaragua	siehe/see Mexico (EPSA)		
Nigeria	Ferrostaal (Nigeria) Ltd. 27/29 Adeyemo Alkaija Street P.O. Box 72021 Victoria Island Lagos	(1) 262 00 60 (1) 262 00 64	
Norway	ROHDE & SCHWARZ NORGE Østensjøveien 36, P.O.B. 103 BRYN 0611 Oslo	23 17 22 50 23 17 22 69 -	
Oman	T&M Equipment and Broadcasting: Mustafa & Jawad Science & Industry Co. Ltd. P.O. Box 3340 Post Code 112 Ruwi Sultanate of Oman	60 20 09 60 70 66	
Pakistan	TelcoNet Communications & Engineering 213/D, Ordnance Road Rawalpindi-Pakistan-46000	(51) 26 30 72 (51) 26 32 11 tnc@meganet.com.pk	
Panama	siehe auch/see also Mexico (EPSA)		
	ELECTRONICO BALBOA S.A. Av. El Paical, Edif. El Dorado Urb. Los Angeles Panama City	614 93 64 236 18 20 pdubois@ebsa.com	
Papua- New Guinea	siehe/see Australia		
Peru	siehe auch/see also Argentina		
	BMP INGENIEROS S.A. Av. José Gálvez Barrenechea 645 Urb. Corpac - San Borja Lima 41	(1) 225 40 30 (1) 475 15 13 wmgelgarejo@bmp.com.pe	

Adressen/Addresses

Philippines	MARCOM Industrial Equipment, Inc. MCC P.O.Box 2307 6-L Mezzanine Suite, Vernida I Condominium 120 Amorsolo St. Legaspi Village Makati City/Philippines 3117	(2) 8 13 29 31 (2) 8 17 05 07	12830 Skarpnäck info@rss.rohde-schwarz.com
Poland	ROHDE & SCHWARZ Oddzial w Polsce ul. Stawki 2, Pietro 28 00-193 Warszawa	(22) 860 64 90 (22) 860 64 99 rohdepl@rsoe.com	Switzerland Roschi Rohde & Schwarz AG Papiermühlestrasse 145, Postfach 3063 Ittigen -
Portugal	TELERUS Sistemas de Telecomunicações, S.A. Rua General Ferreira Martins, Lote 6,2.ºB 1495 Algés	(21) 412 35 90 (21) 412 36 00 telerus@mail.telepac.pt	Syria Electro Scientific Office Baghdad Street Dawara Clinical Lab. Building P.O.B. 8162 Damascus
Romania	ROHDE & SCHWARZ Representation Office Bucharest Uranus 98 Bloc U8, scara 2, etaj 5, ap. 36 76102 Bucuresti	(1) 410 68 46 (1) 411 20 13 rohdero@rsoe.com	Tanzania Security Systems (T) Ltd. P.O. Box 7512 Dar Es Salaam
Russian Federation	ROHDE & SCHWARZ Representative Office Moscow Kazachy per. 7 109017 Moscow	(095) 234 49 62 (095) 234 49 63 rohderus@rsoe.com	Taiwan Lancer Communication Co., LTD. 16F, No. 30, Pei-Ping East Road Taipei rosa.ho@lancercomm.com.tw
Saudi Arabia	Rohde & Schwarz Liaison Office c/o Haji Abdullah Alireza Co. Ltd. P.O.B. 361 Riyadh 11411	(1) 465 64 28 (1) 465 07 82 -	Thailand Vertrieb Kommunikationstechnik/Sales Communications Equipment: TPP Operation Co., Ltd. (2) 880 93 45 41/5 MoobanTarinee Boromrajchonnee Rd. (2) 880 93 47 Talingchan, Bangkok 10170 -
Singapore	Vertrieb/Sales: INFOTEL TECHNOLOGIES LTD. 19 Tai Seng Drive Kinergy Building # 06-00 Singapore 535222	287 68 22 284 95 55 general@infotel.com.sg	Vertrieb Messtechnik/Sales T & M Equipment: Schmidt Scientific (Thailand) Ltd. (2) 643 13 30-9 212 Government Housing Bank Bldg. (2) 643 13 40 Tower II, 19th Floor, Rama 9 Rd., Huaykwang, Bangkapi, Bangkok 10320 -
	Service: Rohde & Schwarz Support Centre Asia Pte. Ltd. 1 Kaki Bukit View #04-05/07 Techview Singapore 415941	846 37 10 846 00 29 rssca@mbox4.singnet.com.sg	Turkey ROHDE & SCHWARZ Liaison Office Istanbul Bagdad Cad. 191/3, Ard. 81030 Selamicesme-Istanbul
Slovak Republic	Specialne systémy a software, a.s. Svrčic ul 84104 Bratislava	(7) 65 42 25 29 (7) 65 42 07 68 3s@internet.sk	Ukraine ROHDE & SCHWARZ Representative Office Kiev ul. Patrisa Loumoumba, 4 252042 Kiev
Slovenia	ROHDE & SCHWARZ Representation Ljubljana Koprska 92 1000 Ljubljana	(61) 123 46 51 (61) 123 46 11 rohdesi@rsoe.com	United Arab Emirates Service-Center für den Mittleren Osten/ Service Center for the Middle East: ROHDE & SCHWARZ Emirates L.L.C. P.O.B. 31156 Abu Dhabi -
South Africa	Protea Data Systems (Pty) Ltd Communications & Measurement Division Private Bag X19 Bramley 2018	(11) 786 36 47 (11) 786 58 91 Colin.Forbes@protea.co.za	ROHDE & SCHWARZ Liaison Office Middle East P.O. Box 311 56 Abu Dhabi -
Spain	ROHDE & SCHWARZ ESPAÑA Salcedo, 11 28034 Madrid	(91) 334 10 70 (91) 729 05 06 rema@rsd.rohde-schwarz.com	Vertrieb/Sales: ROHDE & SCHWARZ Liaison Office Dubai (4) 39 44 829 P.O.B. 53726 (4) 39 44 794 Dubai -
Sri Lanka	LANKA AVIONICS 658/1/1, Negombo Road Mattumagala Ragama	(1) 95 66 78 (1) 95 83 11 -	R&S BICK Mobile Communication P.O.B. 17466 (4) 81 36 75 JAFZ, LOB 04-028 (4) 81 36 76 Dubai -
Sudan	SolarMan Co. Ltd. P.O. Box 11 545 Karthoum	(11) 47 31 08 (11) 78 17 25	United Kingdom ROHDE & SCHWARZ UK Ltd. Ancells Business Park Fleet, Hampshire GU 13 8UZ -
Sweden	ROHDE & SCHWARZ SVERIGE AB Flygfälsgatan 15	(8) 605 19 00 (8) 605 19 80	Uruguay siehe auch/see also Argentina

Adressen/Addresses

AEROMARINE S.A. (2) 400 39 62
Cerro Largo 1497 (2) 401 85 97
11200 Montevideo aeromar@adinet.com.uy

USA Kommunikationstechnik/Communications Equipment:
ROHDE & SCHWARZ, Inc. (301) 459 88 00
4425 Nicole Drive (301) 459 28 10
Lanham, MD 20706 -

Messtechnik/T & M Equipment:
TEKTRONIX Inc. (800) 835 9433 Ext. 6630
P.O.B. 500, M/S 50-216 (800) 835 7732
Beaverton, OR 97076 -

Venezuela EQUILAB TELECOM C.A. (2) 34 46 26
Centro Seguros La Paz (2) 239 52 05
Piso 6, Local E-61 r_ramire@equilabtelecom.com.ve
Ava. Francisco de Miranda
Boleita, Caracas 1070

Military customers only:
REPRESENTACIONES BOPIC S.A. (2) 985 21 29
Av. Diego Cisneros (2) 985 39 94
Centro Empresarial Los Ruices incotr@cantv.net
Of. 119, 1er piso
Los Ruices
Caracas

Vietnam Schmidt Vietnam Co., Ltd. (4) 834 61 86
8/F, Schmidt Tower, Hanoi (4) 834 61 88
Intern. Technology Centre svhn@schmidt group.com
Cau Giay, Tu Liem, IPO Box 89
Hanoi

Yugoslavia see/siehe Austria

Nicht aufgeführte Länder/Countries not listed:
ROHDE & SCHWARZ INTERNATIONAL GmbH
P.O.B. 80 14 69
81614 München / Germany
Please fax to +49 89 41 29 136 62

1 Preparation for Use

1.1 Putting into Operation

Before putting the SMY into operation, see to it that

- the covers of the casing are put on and bolted,
- the ventilation ducts are free,
- there are no signal voltage levels exceeding the permissible limits present at the inputs,
- the outputs of the instrument are not overloaded or connected incorrectly.

If this is not observed, the instrument might be damaged.

1.2 Power Supply/Power Fuses

The SMY can be operated at a.c. systems of 100 to 120 V and 200 to 240 V at system frequencies of 47 to 440 Hz. The power supply socket is at the rear of the instrument.

Adaption of the power supply, exchange of the power fuse:

- Withdraw the power supply cable.
- Open the cover of the voltage selector at the rear of the instrument using a screwdriver.
- Remove the coding cylinder now accessible and set in in such a way that the voltage value desired can be read from outside.
- Close the cover pressing it firmly.
- Check whether the voltage value desired is visible from outside in the window of the cover.

1.3 Mounting into a 19" Rack

The SMY can be mounted into a 19" rack by means of rack adapter ZZA-93 (stock no. 396.4892.00). The mounting instructions are attached to the adapter.

Caution: *When mounting into the rack, ensure unhindered admission of air at the perforation of the side panels and air escape at the rear of the instrument.*

1.4 Option SMY-B1

The SMY can be equipped with option SMY-B1, reference oscillator, OCXO.

Reference \square is briefly displayed in the amplitude/modulation display after switch-on of the instrument if the option has been fitted.

Further details can be found in section "Reference Frequency Int/Ext." as well as the data sheet.

Subsequent fitting of option SMY-B1:

The crystal oscillator has been tuned to nominal frequency with R&S and the appropriate tuning voltage noted on the option. Note this tuning voltage down on a note sheet as the value must be transmitted into the memory of the signal generator after fitting the option.

The fitted option is automatically recognized from the firmware.

- Opening the casing**
- Loosen four screws in the two rear panel feet and withdraw feet.
 - Withdraw the upper cover to the rear.
 - Turn the instrument.
 - Withdraw the lower cover to the rear.
- Fitting the option**
- The option is fitted behind the modules at the free space of the left side panel in such a way that the ribbon cable is at the top. It is fastened mechanically at the side panel by means of the 4 screws supplied.
 - Insert ribbon cable W22 into socket X22 of the power supply unit.
 - Withdraw coaxial cable W28 from socket X711 of the option and connect it to socket X128 of module A4 "synthesis".
- Closing the casing**
- Fix the upper and lower cover in the reverse order as in opening the instrument.
 - Insert and screw down the rear panel feet.
- Set the tuning voltage**
- Switch on special function "Calibration REF-OSC" by means of code 51.
 - Using the tuning voltage previously noted, calculate a value for setting the D/A converter (DAC) according to the following equation:
$$\text{DAC} = 4096 \times \frac{\text{tuning voltage}}{10 \text{ V}}$$
 - Enter the DAC value.
 - Terminate special function "Calibration REF-OSC" by means of code 52.

The crystal oscillator can be recalibrated to compensate for aging. Calibration is described in the service manual.

1.5 Option SMY-B40

The SMY can be equipped with option SMY-B40, pulse modulator and high output power.

The note $b-40$ is briefly displayed in the amplitude/modulation display after switch-on of the instrument if the option has been fitted.

Further details can be found in the sections "Level" and "Pulse Modulation" as well as in the data sheet.

Fitting or disassembling option SMY-B40 is only possible at the factory or at authorized service centers.

2 Manual Operation

Signal generator SMY can be operated easily and comfortably. It can be set via the keyboard, the rotary knob variation and via the IEC-bus remote control interface (remote control of the SMY is described in detail in section 3).


On the following pages, you will find the front and rear panel views of the instrument, each with short explanations.


If you are getting familiar with the SMY and like to have a fast overview, please read section 2.2, "Pattern Setting for First Users", and then section 2.3, "Basic Operation" first.

The complete functions of the manual operation are described as of Section 2.4.

Values mentioned in this section are not guaranteed, only the technical data in the specifications are binding.

2.1 Front and Rear Views

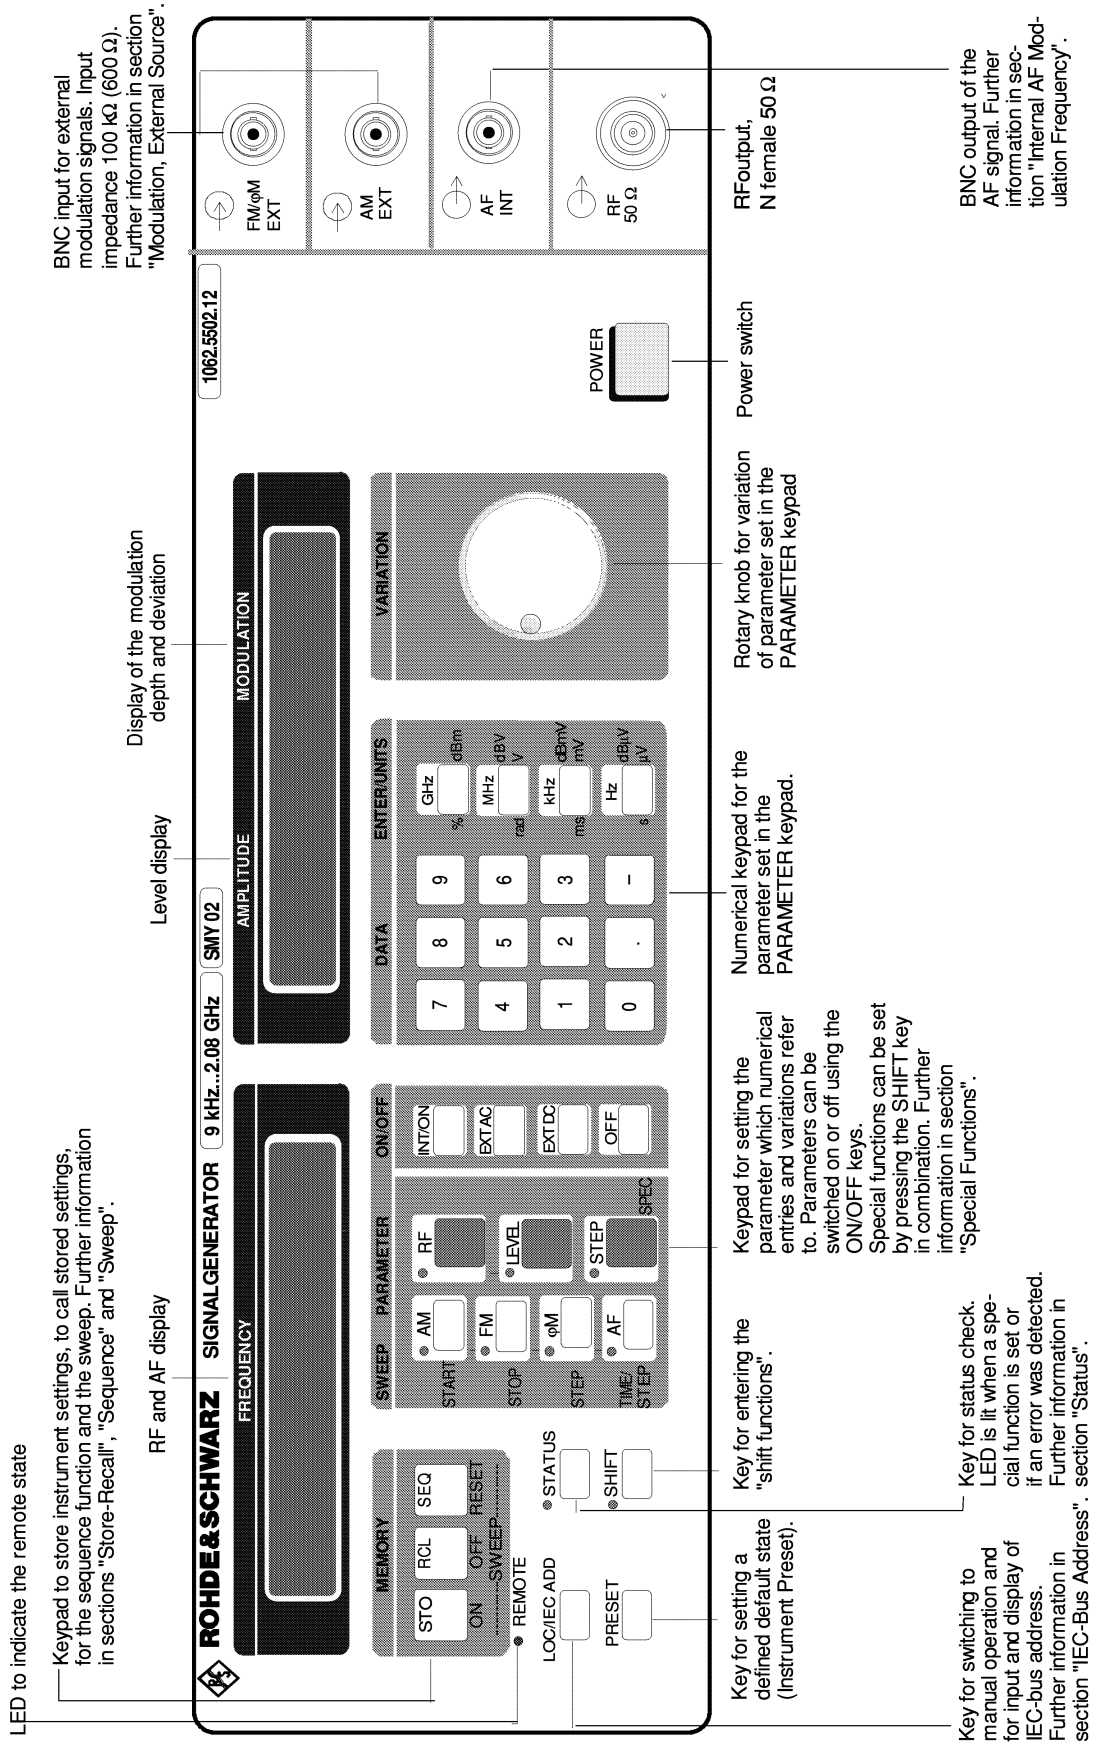

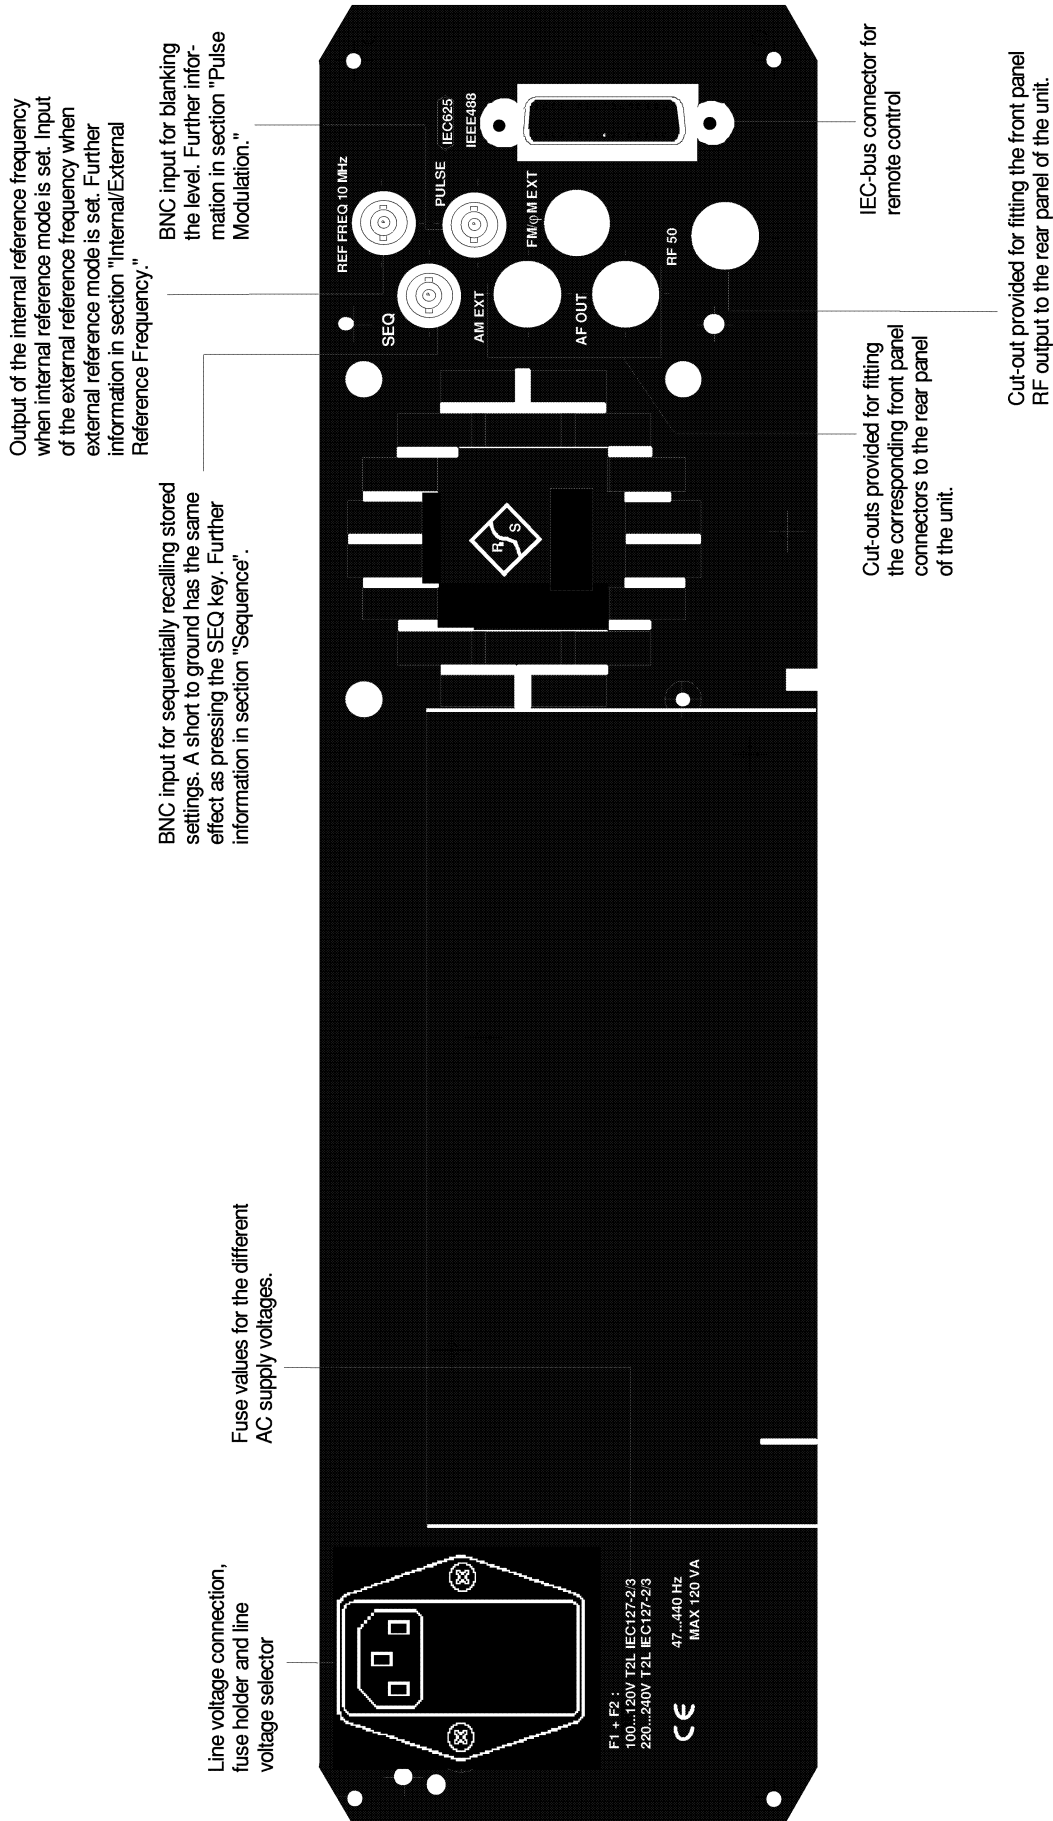

2.2 Pattern Setting for First Users

The fastest way for first users to get familiar with the operation of the instrument is to execute the pattern setting of this section.

A setting is made from the left to the right in the order Parameter — Data — Unit.

Operating steps	Explanations										
<p>PRESET</p> <input type="checkbox"/>	Reset instrument to the defined status.										
<table border="0"> <tr> <td style="border: 1px solid black; padding: 2px;">PARAMETER</td> <td style="border: 1px solid black; padding: 2px;">ON/OFF</td> <td style="border: 1px solid black; padding: 2px;">DATA</td> <td style="border: 1px solid black; padding: 2px;">ENTER/UNITS</td> <td></td> </tr> <tr> <td style="padding: 2px;">● RF</td> <td style="padding: 2px;"><input checked="" type="checkbox"/></td> <td style="padding: 2px;"><input type="text" value="2"/> <input type="text" value="5"/> <input type="text" value="0"/></td> <td style="padding: 2px;"><input type="text" value=""/></td> <td style="padding: 2px;">MHz</td> </tr> </table>	PARAMETER	ON/OFF	DATA	ENTER/UNITS		● RF	<input checked="" type="checkbox"/>	<input type="text" value="2"/> <input type="text" value="5"/> <input type="text" value="0"/>	<input type="text" value=""/>	MHz	Set RF to 250 MHz.
PARAMETER	ON/OFF	DATA	ENTER/UNITS								
● RF	<input checked="" type="checkbox"/>	<input type="text" value="2"/> <input type="text" value="5"/> <input type="text" value="0"/>	<input type="text" value=""/>	MHz							
<table border="0"> <tr> <td style="border: 1px solid black; padding: 2px;">PARAMETER</td> <td style="border: 1px solid black; padding: 2px;">ON/OFF</td> <td style="border: 1px solid black; padding: 2px;">DATA</td> <td style="border: 1px solid black; padding: 2px;">ENTER/UNITS</td> <td></td> </tr> <tr> <td style="padding: 2px;">● LEVEL</td> <td style="padding: 2px;"><input checked="" type="checkbox"/></td> <td style="padding: 2px;"><input type="text" value="1"/> <input type="text" value="0"/></td> <td style="padding: 2px;"><input type="text" value=""/></td> <td style="padding: 2px;">dBm</td> </tr> </table>	PARAMETER	ON/OFF	DATA	ENTER/UNITS		● LEVEL	<input checked="" type="checkbox"/>	<input type="text" value="1"/> <input type="text" value="0"/>	<input type="text" value=""/>	dBm	Set level to 10 dBm.
PARAMETER	ON/OFF	DATA	ENTER/UNITS								
● LEVEL	<input checked="" type="checkbox"/>	<input type="text" value="1"/> <input type="text" value="0"/>	<input type="text" value=""/>	dBm							

2.3 Basic Operation

Selection of the Parameters

The PARAMETER ON/OFF keypad is used to set the parameter to which numerical entries and variations refer. The set parameter is indicated by the LED flashing. Only one parameter can be set at a time. The only exception is the STEP parameter which is set at the same time as another parameter (to enter the step size for the STEP function). The SHIFT parameters (blue inscription) SWEEP ON, OFF, RESET, START, STOP, STEP, TIME/STEP and SPEC are set by pressing the SHIFT key before the corresponding parameter key.

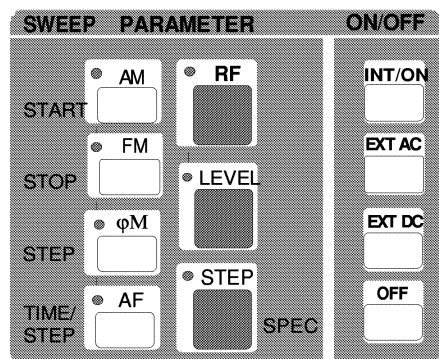


Fig. 2-1 PARAMETER ON/OFF keypad

Switching the parameters on and off

Parameters which can be switched on and off are AM, FM, φM, AF, LEVEL.

The parameters are switched on by pressing the parameter key and then one of the three ON keys (INT/ON, EXT AC and EXT DC) in the parameter keypad. The parameters are then switched to the stored value of the last setting.

The parameters can also be switched to numerical entry using one of the ENTER/UNITS keys. If the data input is then omitted, the parameter is set again to the stored value of the last setting.

The parameters are switched off by pressing the parameter key and then the OFF key in the ON/OFF key column of the parameter keypad.

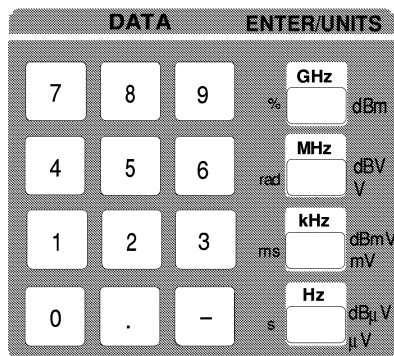



Fig. 2-2 DATA and ENTER/UNITS keypad

Numerical entry

A value is entered in the order Parameter — Data — Unit:

Example	Input		
Setting the RF to 1 MHz	<div style="display: flex; justify-content: space-around; border-bottom: 1px solid black;"> PARAMETER ON/OFF DATA ENTER/UNITS </div>		
		<input type="text" value="1"/>	<input type="text" value="MHz"/>

The parameter need not be set again for further entries once it has been set (parameter LED on). This does not apply to parameters SPEC, IEC ADD and STEP which only remain set for **one** entry.

The value is set by pressing an ENTER/UNITS key.

Numerical entries must always be terminated by pressing one of the ENTER/UNITS keys. Any of the four ENTER/UNITS keys can be used for parameters without a unit.

Example	Input
Calling memory location setting 5	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>MEMORY</p> <p>RCL</p> <input type="text"/> </div> <div style="text-align: center;"> <p>DATA</p> <p>5</p> <input type="text"/> </div> <div style="text-align: center;"> <p>ENTER/UNITS</p> <input type="text"/> </div> </div>
Switch-on of special function AM two-tone	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>SHIFT</p> <input type="text"/> </div> <div style="text-align: center;"> <p>STEP</p> <input checked="" type="checkbox"/> <p>SPEC</p> </div> <div style="text-align: center;"> <p>DATA</p> <p>5</p> <input type="text"/> </div> <div style="text-align: center;"> <p>ENTER/UNITS</p> <input type="text"/> </div> </div>

Correction of entry

An entered value can be cleared before being set (i. e. before pressing one of the ENTER/UNITS keys) by pressing the key of the set parameter (LED on) or one of the other parameters.

Entries made via the numerical keypad can be corrected with the key "-" as long as one of the ENTER keys was not pressed. One digit is cleared each time the key "-" is pressed.

Changing the unit

In order to change the unit displayed, set the parameter (RF or LEVEL) and press the required unit in the ENTER/UNITS column.

Example	Input
The level is displayed in mV and shall be displayed in dbm.	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>PARAMETER</p> <p><input checked="" type="checkbox"/> LEVEL</p> <input type="text"/> </div> <div style="text-align: center;"> <p>ON/OFF</p> </div> <div style="text-align: center;"> <p>DATA</p> </div> <div style="text-align: center;"> <p>ENTER/UNITS</p> <input type="text"/> dBm </div> </div>

The parameter key need not be pressed again if the parameter has already been set (LED on).

Displays

The RF is output with up to 10 digits in the **FREQUENCY display**:

The following is also output in this display:

- step size for STEP variation of RF,
- start and stop frequency as well as frequency step and step time for the RF sweep,
- AF up to 7 digits,
- status codes of the set special functions,
- external reference mode and
- the IEC-bus address.

The following is output in the **AMPLITUDE display**:

- level of the RF signal,
- step size for the STEP variation of the level,
- measured values of internal test points (diagnostic test),
- reference OVERLOAD if the RF output is externally overloaded and
- indication of the fitted options.

The following is output in the **MODULATION display**:

- type of modulation switched on,
- parameters modulation depth and deviation,
- step sizes for the STEP variation of the modulation parameters and AF
- warning LOW or HIGH if the external modulation voltage is not equal to 1 V (V_p),
- number of memory location for STO, RCL and SEQ,
- fine variation range with special function "non-interrupting level setting" on,
- numbers of internal test points (diagnostic test) and
- status codes of function/input errors and overrange/underrange settings.

Display of functions which are not switched on

The parameters of functions which are not switched on such as AM modulation depth or FM deviation are displayed as long as the respective parameter key is pressed.

Display of entered numerical value

While entering a numerical value (DATA keys), the digits of the newly entered value are progressively output in the display of the related parameter.

Variation

Parameters AM modulation depth, FM deviation, ϕ M deviation, AF, RF and LEVEL can be varied.

The parameter currently set in the parameter keypad can always be varied using the rotary knob.

For further information, please see section "Variation, Rotary Knob".

Store - recall

The generator can store settings which can later be recalled. This function is accessed using the keys in the MEMORY keypad. Further information in sections "Store- Recall" and "Sequence".

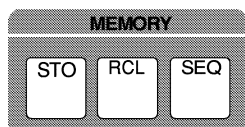


Fig. 2-3 MEMORY keypad

Special functions

Special functions extend the given settings indicated on the front panel. Further information in section "Special Functions".

Status

Input errors are indicated in the modulation display by a brief appearance of the status code identifying the error and flashing of the STATUS LED.

Function errors are indicated by continuous flashing of the STATUS LED. The status code describing the error appears in the modulation display when the STATUS key is pressed.

Ovrange/underrange settings are indicated by continuous lighting of the STATUS LED. The status code describing the setting appears in the modulation display when the STATUS key is pressed.

Continuous lighting of the STATUS LED also indicates that a special function is switched on. The status code describing the special function is output in the frequency display by pressing the STATUS key. Further information in section "Status".

IEC-bus address

The IEC-bus address can be output in the frequency display and set via the keyboard. Further information in section "IEC-bus Address".

Instrument preset

The generator is set to a defined basic status by means of key PRESET. For further information, please see section "Instrument Preset".

2.4 Power-on Status

The generator has the same status when switched on as before switching off.

Exceptions:

- Local mode is always set.
- An RQS can be output on the IEC bus each time the instrument is switched on.
- For setting the registers of the service request function, see sections "Service Request and Status Registers" and "Resetting Device Function".

A function test is carried out following switch-on. The ROM, EPROM and RAM contents are checked. The LED of the STATUS key flashes if an error is detected. The associated status display is output in the modulation display by pressing the STATUS key.

The preset status is set if the status prior to switch-off cannot be set again because of a memory error.

Display: The IEC-bus address set is displayed in the frequency display and the fitted options are indicated in the amplitude/modulation display following power-on for a brief period.

2.5 Internal/External Reference Frequency

The internal standard reference source of the SMY is a 10-MHz crystal oscillator. Higher demands on frequency accuracy are satisfied by the option Reference Oscillator SMY-B1, OCXO. Subsequent fitting of this option is described in section "Option SMY-B1".

In internal reference mode, the internal reference signal with a frequency of 10 MHz is present at the female connector REF FREQ 10MHz.

In external reference mode, an external signal with a frequency of 5 or 10 MHz must be fed into the female connector REF FREQ 10MHz. Synchronization to 5 or 10 MHz is automatic.

Frequency at the input/output

REF FREQ 10MHz: 10 MHz

Internal reference mode: Signal output
($V_{rms} = 1V$, EMF),
female connector REF FREQ 10MHz at the rear panel.

External reference mode: Signal input ($0.2 V \leq V_{rms} \leq 2 V$,
sinewave, squarewave or TTL),
female connector REF FREQ 10MHz at the rear panel.

The internal or external reference is selected using the keyboard or via the IEC bus.

Example	Input	IEC-Bus Code
Setting for external reference		REFERENCE_OSCILLATOR:EXTERNAL
Setting for internal reference		REFERENCE_OSCILLATOR:INTERNAL

Display: The note "REF EXT" appears in the frequency display if the external reference mode has been selected.

Note: The externally applied reference frequency of 10 MHz must not deviate by more than $\pm 5 \cdot 10^{-6}$ from 10 MHz.

Associated instructions: Special function "Calibration REF-OSC"

2.6 Frequency (RF)

Range: 9 kHz to 1040 MHz (2080 MHz with SMY02, adjustable as from 5 kHz without guarantee of rated specifications)
Resolution: 1 Hz
Units: GHz, MHz, kHz, Hz
Setting: RF — data — unit

Example	Input	IEC-Bus Code
Setting the RF to 500 MHz		RF 500MHZ

Display: The RF output frequency appears in the frequency display.

Associated instructions: Internal/external reference frequency

2.7 LEVEL

Range: -140 to 13 dBm (settable up to 19 dBm without guarantee of rated specifications)
-134 to 19 dBm with option SMY-B40 (settable as from -140 dBm up to 25 dBm with restricted data)
Resolution: 0.1 dB
Units: dBm, V, mV, μ V, dBV, dBmV, dB μ V
Setting: [SHIFT] — LEVEL — data — unit

Example	Input	IEC-Bus Code
Setting of level 60 dB μ V		LEVEL 60DBUV
Switching off the level		LEVEL:OFF
Switching on the level to the stored value		LEVEL:ON

Associated instructions: Non-interrupting level setting
Level EMF

Note: For output levels > 19 dBm and mismatch load termination of the SMY's RF-output the overvoltage protection of the attenuator can respond to the RF-voltage generated internally (indication OFF and blinking OVERLOAD message in the AMPLITUDE display). The protection switch can be reset by entering a level of < 19 dBm and pressing the INT/ON key.

2.8 Non-Interrupting Level Setting

Independent of the set value, the special function "Non-interrupting level setting" permits to attenuate the level electronically up to 20 dB without interruption, i. e. without using the interrupting mechanical attenuator. The value set when switching on the special function is used as reference level. Within the 20-dB range, the level can be set via the keyboard or the IEC bus.

Setting of a level outside the 20-dB range is made using the interrupting mechanical attenuator set. Starting at this new level, further level settings are made non-interruptive again in the range 0 to -20 dB.

If the special function "Non-interrupting level setting" is switched on again when already having been switched on, this has the same effect as if the special function were switched on for the first time, i. e. the full setting range 0 to -20 dB is then available with respect to the set level.

Switching on special function with code 1 } see special functions
Switching off special function with code 2 }

Note: *Specifications concerning level error, modulation depth error and distortion factor with AM do not apply with the special function "Non-interrupting level setting" switched on.*

Associated instructions: LEVEL
Level EMF
Special functions

2.9 Level Control Without Function

With the special function "Level control without function" (ALC off), internal level control is switched over to a sample-and-hold mode. This special function is used for multi-transmitter measurements to achieve a higher signal-to-intermodulation ratio. The self-intermodulation products of two generators connected using a signal divider ($2 \times 50 \Omega$) remain below the following values:

Without option SMY-B40:
for output levels of 13 dBm below -40 dBc
for output levels of less than 0 dBm below -70 dBc

With option SMY-B40:
for 19 dBm below -50 dBc
for 16 dBm below -60 dBc
for 10 dBm below -70 dBc.

In this special function, the SMY can be operated as usual.

Switching on special function with code 21

Switching off special function with code 22

Note: *The specifications in the data sheet concerning level error, AM and VSWR do not apply in the special function "ALC off".*

Associated instructions: LEVEL
Level EMF
Special functions

2.10 Level EMF

With the special function "Level EMF", the EMF value of the RF voltage is displayed and no longer the value of the RF voltage into 50 Ω. The EMF display appears if one of the units dBμV, dBmV, dBV, V, mV or μV is selected.

Switching on special function with code 3 } see special functions
 Switching off special function with code 4 }

Associated

instructions: LEVEL
 Non-interrupting level setting
 Special functions

2.11 Internal AF Modulation Frequency

Frequency range: 1 Hz to 500 kHz

Resolution: 0.1 Hz

Resolution of Display: 7-digit

As a modulation source, the SMY contains an AF synthesizer which is also brought out to be used externally at socket AF INT. The AF signal at the socket is automatically switched on if an internal modulation is activated. It can also be switched on if no internal modulation is activated. The output amplitude is 1V (V_p).

Setting the frequency: AF ——— Data ——— Unit

Example	Input	IEC-Bus Code										
Setting the AF (int. modulation frequency) to 400 Hz	<table border="0"> <tr> <td style="text-align: center;">PARAMETER</td> <td style="text-align: center;">ON/OFF</td> <td style="text-align: center;">DATA</td> <td style="text-align: center;">ENTER/UNITS</td> <td></td> </tr> <tr> <td style="text-align: center;">● AF <input type="text"/></td> <td></td> <td style="text-align: center;"><input type="text" value="4"/> <input type="text" value="0"/> <input type="text" value="0"/></td> <td style="text-align: center;"><input type="text" value="Hz"/></td> <td style="text-align: center;">AF 400HZ</td> </tr> </table>	PARAMETER	ON/OFF	DATA	ENTER/UNITS		● AF <input type="text"/>		<input type="text" value="4"/> <input type="text" value="0"/> <input type="text" value="0"/>	<input type="text" value="Hz"/>	AF 400HZ	
PARAMETER	ON/OFF	DATA	ENTER/UNITS									
● AF <input type="text"/>		<input type="text" value="4"/> <input type="text" value="0"/> <input type="text" value="0"/>	<input type="text" value="Hz"/>	AF 400HZ								
Switching on the AF signal to the stored value	<table border="0"> <tr> <td style="text-align: center;">● AF <input type="text"/></td> <td style="text-align: center;">INT/ON <input type="text"/></td> <td></td> <td></td> <td style="text-align: center;">AF:ON</td> </tr> </table>	● AF <input type="text"/>	INT/ON <input type="text"/>			AF:ON						
● AF <input type="text"/>	INT/ON <input type="text"/>			AF:ON								
Switching off the AF signal	<table border="0"> <tr> <td style="text-align: center;">● AF <input type="text"/></td> <td style="text-align: center;">OFF <input type="text"/></td> <td colspan="2" style="text-align: center;">(no effect if internal modulation switched on)</td> <td style="text-align: center;">AF:OFF</td> </tr> </table>	● AF <input type="text"/>	OFF <input type="text"/>	(no effect if internal modulation switched on)		AF:OFF						
● AF <input type="text"/>	OFF <input type="text"/>	(no effect if internal modulation switched on)		AF:OFF								

Display: The frequency display indicates both the RF and the AF. The value of the parameter pressed last in the parameter keypad is displayed. An AF-value is characterized by the characters "AF" in front of the numeric value.

Associated

instructions: Modulation (AM, FM, φM)
 Two-tone modulation

2.12 Modulation, AM

Modulation depth: 0 to 100 %
Resolution: 0.1 %
Ext. modulation frequency range: DC to 50 kHz
Internal modulation frequencies: 1 Hz to 50 kHz

The internal modulation source and one external modulation source can be switched on simultaneously (see section "Two-tone modulation").

For increasing levels between 7 dBm and 13 dBm (or between 13 dBm and 19 dBm with option SMY-B40), AM specifications are guaranteed only if the modulation depth decreases linearly.

When AM is switched on, the ALC bandwidth is automatically set to "broad" if the special functions 13 and 15 are not active.

The AM specifications are not valid in the special function "ALC bandwidth narrow" (Spec 13).

Setting too large a modulation depth causes the status LED to light up. In this case, the status indication in the modulation display is 70 (see section "Status").

Setting: AM — Data — %
Selection of modulation source: AM — INT/ON or AM — EXT AC (EXT DC)
Selection of internal modulation frequency: See section "Internal AF Modulation Frequency".
Switching off the AM: AM — OFF
Switching on the AM to the stored value (new value not entered): AM — INT/ON or AM — EXT AC (EXT DC)

Example	Input	IEC-Bus Code								
Setting and switching on the AM with m=80 %	<table border="1"> <thead> <tr> <th>PARAMETER</th> <th>ON/OFF</th> <th>DATA</th> <th>ENTER/UNITS</th> </tr> </thead> <tbody> <tr> <td><input checked="" type="radio"/> AM</td> <td></td> <td><input type="text" value="8"/> <input type="text" value="0"/></td> <td>% <input type="text"/></td> </tr> </tbody> </table>	PARAMETER	ON/OFF	DATA	ENTER/UNITS	<input checked="" type="radio"/> AM		<input type="text" value="8"/> <input type="text" value="0"/>	% <input type="text"/>	AM 80PCT
PARAMETER	ON/OFF	DATA	ENTER/UNITS							
<input checked="" type="radio"/> AM		<input type="text" value="8"/> <input type="text" value="0"/>	% <input type="text"/>							
Selection of the external modulation source	<table border="1"> <tbody> <tr> <td><input checked="" type="radio"/> AM</td> <td><input type="text" value="EXT AC"/></td> <td></td> <td></td> </tr> </tbody> </table>	<input checked="" type="radio"/> AM	<input type="text" value="EXT AC"/>			AM:EXTERNAL:AC				
<input checked="" type="radio"/> AM	<input type="text" value="EXT AC"/>									
Switching off the AM	<table border="1"> <tbody> <tr> <td><input checked="" type="radio"/> AM</td> <td><input type="text" value="OFF"/></td> <td></td> <td></td> </tr> </tbody> </table>	<input checked="" type="radio"/> AM	<input type="text" value="OFF"/>			AM:OFF				
<input checked="" type="radio"/> AM	<input type="text" value="OFF"/>									

Display: 

If amplitude modulation is switched on, this is indicated by

AM^{EXT} , $AM^{EXT DC}$, AM_{INT}^{EXT} , AM_{INT}^{EXT} and $AM_{INT}^{EXT DC}$

depending on the modulation source selected.

The modulation depth is output in 3 digits in the modulation display. The display is common to the modulation depth with AM and the deviation with FM/φM. The value of the parameter AM, FM or φM pressed last in the parameter keypad is displayed.

Comment on AM DC:

This mode enables external level control or regulation via level detectors with a negative or positive detector voltage.

Modulation frequency..... DC to 50 kHz
Modulation depth..... 0 to 100 %
Input voltage..... -1.0 V to +1.0 V

The level variation range is determined by the modulation depth input. A range from -1 V to +1 V corresponds to a change in level from $level_{0V} \cdot (1-m)$ to $level_{0V} \cdot (1+m)$. With special function AM invers active this level variation is obtained for inverted polarity of the input voltage. This allows to decrease the level by means of a positive input voltage.

$level_{0V}$ is the RF level in V entered numerically.

The maximum control range, e.g. for maximum carrier blanking, is at $m = 100 \%$.

Associated

instructions: LEVEL
 Internal AF modulation frequency
 Modulation, external source
 Two-tone modulation
 Pulse modulation
 Special function ALC bandwidth
 Special function AM invers

Example	Input	IEC-Bus code								
Setting and switching on the FM with 40 kHz deviation	<table border="1"> <thead> <tr> <th data-bbox="461 389 638 416">PARAMETER</th> <th data-bbox="638 389 826 416">ON/OFF</th> <th data-bbox="826 389 1011 416">DATA</th> <th data-bbox="1011 389 1166 416">ENTER/UNITS</th> </tr> </thead> <tbody> <tr> <td data-bbox="461 434 571 492">● FM <input type="text"/></td> <td data-bbox="638 434 826 492"></td> <td data-bbox="826 434 1011 492"><input type="text" value="4"/> <input type="text" value="0"/></td> <td data-bbox="1011 434 1166 492"><input type="text" value="kHz"/></td> </tr> </tbody> </table>	PARAMETER	ON/OFF	DATA	ENTER/UNITS	● FM <input type="text"/>		<input type="text" value="4"/> <input type="text" value="0"/>	<input type="text" value="kHz"/>	FM 40KHZ
PARAMETER	ON/OFF	DATA	ENTER/UNITS							
● FM <input type="text"/>		<input type="text" value="4"/> <input type="text" value="0"/>	<input type="text" value="kHz"/>							
Selection of modulation source EXT AC	<table border="1"> <tbody> <tr> <td data-bbox="461 528 571 586">● FM <input type="text"/></td> <td data-bbox="638 528 826 586">EXT AC <input type="text"/></td> <td colspan="2"></td> </tr> </tbody> </table>	● FM <input type="text"/>	EXT AC <input type="text"/>			FM:EXTERNAL:AC				
● FM <input type="text"/>	EXT AC <input type="text"/>									
Switching off the FM	<table border="1"> <tbody> <tr> <td data-bbox="461 631 571 689">● FM <input type="text"/></td> <td data-bbox="638 631 826 689">OFF <input type="text"/></td> <td colspan="2"></td> </tr> </tbody> </table>	● FM <input type="text"/>	OFF <input type="text"/>			FM:OFF				
● FM <input type="text"/>	OFF <input type="text"/>									

Display:

4 kHz FM^{EXT}

If frequency modulation is switched on, this is indicated by

FM^{EXT}, FM^{EXT DC}, FM_{INT}^{EXT} or FM_{INT}^{EXT DC}

depending on the modulation source selected.

The deviation is output in 3 digits in the modulation display. The display is common to the deviation with FM and the modulation depth with AM. The value of parameter AM, FM or φM pressed last in the parameter keypad is displayed.

Associated instructions:

Internal AF modulation frequency
Modulation, external source
Two-tone modulation
Special functions

2.15 Modulation, M

Deviation:..... 0 to 400 rad (depending on the carrier frequency)

Resolution: 0.001 to 1 rad (depending on the deviation range)

External modulation frequency range: 20 Hz to 20 kHz

Internal modulation frequency range: 20 Hz to 20 kHz

The internal and one external modulation source can also be switched on simultaneously (cf. section "Two-Tone Modulation").

Setting:..... ϕM — Data — rad

Selection of the modulation source:..... ϕM — INT/ON or ϕM — EXT AC

Selection of the int. modulation frequency: Cf. section "AF modulation frequency internal".

Switching off the ϕM : ϕM — OFF

Switching on the ϕM without entering a new value to the one stored:..... ϕM — INT/ON or ϕM — EXT AC

Example	Input	IEC-Bus code								
Setting and switching on the ϕM with a deviation of 20 rad	<table border="1"> <thead> <tr> <th>PARAMETER</th> <th>ON/OFF</th> <th>DATA</th> <th>ENTER/UNITS</th> </tr> </thead> <tbody> <tr> <td>ϕM <input type="text"/></td> <td></td> <td>2 0</td> <td>rad <input type="text"/></td> </tr> </tbody> </table>	PARAMETER	ON/OFF	DATA	ENTER/UNITS	ϕM <input type="text"/>		2 0	rad <input type="text"/>	PHM:20RAD
PARAMETER	ON/OFF	DATA	ENTER/UNITS							
ϕM <input type="text"/>		2 0	rad <input type="text"/>							
Selection of modulation source INT	<table border="1"> <thead> <tr> <th>PARAMETER</th> <th>ON/OFF</th> <th>DATA</th> <th>ENTER/UNITS</th> </tr> </thead> <tbody> <tr> <td>ϕM <input type="text"/></td> <td>INT/ON <input type="text"/></td> <td></td> <td></td> </tr> </tbody> </table>	PARAMETER	ON/OFF	DATA	ENTER/UNITS	ϕM <input type="text"/>	INT/ON <input type="text"/>			PHM:INTERNAL
PARAMETER	ON/OFF	DATA	ENTER/UNITS							
ϕM <input type="text"/>	INT/ON <input type="text"/>									
Switching off the ϕM	<table border="1"> <thead> <tr> <th>PARAMETER</th> <th>ON/OFF</th> <th>DATA</th> <th>ENTER/UNITS</th> </tr> </thead> <tbody> <tr> <td>ϕM <input type="text"/></td> <td>OFF <input type="text"/></td> <td></td> <td></td> </tr> </tbody> </table>	PARAMETER	ON/OFF	DATA	ENTER/UNITS	ϕM <input type="text"/>	OFF <input type="text"/>			PHM:OFF
PARAMETER	ON/OFF	DATA	ENTER/UNITS							
ϕM <input type="text"/>	OFF <input type="text"/>									

Display:

20.0 rad ϕM_{INT}^{EXT}

If ϕM is switched on, this is indicated, depending on the modulation source, by means of

ϕM_{EXT}^{EXT} , ϕM_{INT}^{EXT} or ϕM_{INT}^{EXT}

The phase deviation can be read in 3 digits in the modulation display. The numerical display is common to the deviation with FM or ϕM and the modulation depth with AM. The value of parameter AM, FM or ϕM pressed last in the parameter keypad is displayed.

Associated instructions:

Internal AF modulation frequency
Modulation, external source
Two-tone modulation
Special functions

2.16 Modulation, External Source

Modulation inputs AM EXT and FM/φM EXT are available for the modulation fed externally.

For modulations AM and FM, the two modulation inputs can be a.c.-coupled or d.c.-coupled. Selection is effected using keys EXT AC or EXT DC in the parameter keypad.

The input resistances of both inputs are 100 kΩ when the instrument is delivered.

The input resistances can be changed to 600 Ω by means of internal jumpers. The jumpers are on module "processor" for AM and on module "synthesis" for FM/φM.

The pin positions are:

Input resistance	AM module "processor"	FM/φM module "synthesis"
100 kΩ	X501/2-3	X80/1-2
600 Ω	X501/1-2	X80/2-3

A signal of $V_p = 1 \text{ V}$ ($V_{rms} = 0.707 \text{ V}$) must be applied to achieve the deviation and modulation depth accuracies guaranteed in the data sheet.

Deviations from the required input voltage are indicated in the modulation display by LOW or HIGH.

The display LOW appears for voltages $V_p \leq 0.97 \text{ V}$, the display HIGH for voltages $V_p \geq 1.03 \text{ V}$. An external voltmeter must be used if higher accuracy is required.

Associated

instructions: Modulation, AM
Modulation, FM
Two-tone modulation

2.17 Modulation, Two-tone

Two-tone modulation takes place with the signals from the internal modulation source and an external modulation source.

The corresponding special function AM two-tone or FM/φM two-tone must be switched on in order to connect internal and external modulation signals simultaneously.

Modulation is not switched on simply by switching on the special function. Entry of the modulation parameters and switching on and off the modulations must take place exactly as described in the sections on modulation AM, FM or φM. Separate deviation or modulation depth settings for the internal and external modulations are not possible. The required voltage of the external modulation signal is 1 V (V_p).

The total deviation or the total modulation depth is equal to twice the value of the one set after value entry.

Ensure that the permissible maximum values for deviation and modulation depth, as listed on the data sheet, are not exceeded.

Switch on/off codes of the two-tone special functions:

Type of modulation	Switch-on	Switch-off
AM two-tone	5	6
FM/φM two-tone	7	8

Example	Input	IEC-bus code
Switching on special function "FM/φM two-tone"	<div style="text-align: center;"> DATA ENTER/UNITS </div> ● SHIFT ● STEP <input type="text"/> <input type="text"/> SPEC <input type="text" value="7"/> <input type="text"/>	FM:DUAL:AC or FM:DUAL:DC
Switching off special function "FM/φM two-tone"	● SHIFT ● STEP <input type="text"/> <input type="text"/> SPEC <input type="text" value="8"/> <input type="text"/>	FM:OFF

Associated

Instructions: Modulation, (AM, FM/φM)
Modulation, external source
Special functions


2.18 Variation, Rotary Knob

The rotary knob enables parameters to be increased or decreased in selectable steps. The set parameter (whose LED in the parameter keypad is on) is variable.

RF, AF, LEVEL and the modulation depth with AM and the deviation with FM or φM are variable parameter steps.

A STEP size can be entered for each variable parameter which remains stored when the parameter is changed.

Operation:

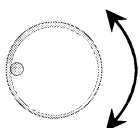

Clockwise rotation increases the value of the parameter set, counter-clockwise rotation decreases it.

Setting the STEP size:

Parameter — Step — Data — Unit

The STEP key must be pressed again for each data input. The parameter key need not be pressed first if the parameter has already been set (LED is on).

The smallest step sizes for the various parameters are:

Frequency (RF)	1 Hz
Frequency (AF)	0.1 Hz
Level (RF)	0.1 dB
Modulation depth (AM)	0.1 %
Deviation (FM)	10 Hz
Deviation (φM)	0.001 rad

The STEP size of the level may only be entered in dB even if V, mV or μV is selected as the level unit.

Example	Input	IEC-bus code
Setting an RF step size of 25 kHz	<p>The diagram shows a control panel with two indicator lights labeled 'RF' and 'STEP', both of which are illuminated. Below the lights are two buttons labeled 'RF' and 'STEP'. To the right, there are three input fields: the first contains the number '2', the second contains the number '5', and the third contains the unit 'kHz'.</p>	RF:VAR_STEP 25KHZ

Display: A new step size is output in the display of the set parameter until the entry is terminated by the unit key. The set value of the parameter is then displayed.

The step size entered for a parameter can be displayed by pressing the parameter key and then the STEP key.

The step size display is cleared again by pressing a parameter or an ENTER/UNITS key.

2.19 Sweep

The SMY provides a digital, step-by-step linear sweep for the RF-frequency (available only with software version 2.0 or higher and with new frontpanel design).

Start frequency:..... 5 kHz to 1040 MHz (2080 MHz with SMY02)

Stop frequency:..... 5 kHz to 1040 MHz (2080 MHz with SMY02)

Frequency step: 1 Hz to 1040 MHz (2080 MHz with SMY02)

Step time:..... 10 ms to 5 s

Resolution: 1 ms

Example	Input	IEC-bus code
Entry of start frequency	<div style="text-align: center;">DATA ENTER/UNITS</div> ● SHIFT <input type="checkbox"/> START <input type="checkbox"/> <input type="text" value="7"/> <input type="text" value="MHz"/>	RF:START
Entry of step time	● SHIFT <input type="checkbox"/> TIME/ STEP <input type="checkbox"/> <input type="text" value="1"/> s <input type="text"/>	TIME:[RF_SWP]

In the ON mode, the sweep runs from the start frequency to the stop frequency with automatic restart at the start frequency.

The sweep can be stopped by means of the OFF key.

The sweep waits again at the start frequency when the RESET key is pressed.

If the start frequency is larger than the stop frequency, the sweep is performed with negative frequency steps.

The current sweep frequency is indicated in the FREQUENCY display.

The sweep can be stopped by means of the RF key as well. The RF frequency can now be varied. If the RF frequency still lies inside the sweep range, the sweep is continued starting from the current RF frequency upon pressing the ON key.

All other parameters (e. g. level, modulation etc.) can be changed while the sweep is running.

Example	Input	IEC-bus code
Switch on sweep	<div style="text-align: center;">MEMORY</div> ● SHIFT <input type="checkbox"/> <input type="text"/>	SWP:ON or SWP:AUTO
Switch off sweep	<div style="text-align: center;">---SWEEP---</div> ● SHIFT <input type="checkbox"/> <input type="text"/>	SWP:OFF
Restart Sweep	<div style="text-align: center;">---SWEEP---</div> ● SHIFT <input type="checkbox"/> <input type="text"/>	SWP:RESET

2.20 Store - Recall

99 complete instrument settings can be stored. These comprise the complete instrument status including all non-displayed settings and all special functions.

Storing the current instrument setting:

STO — Memory address — ENTER/UNITS

Recall of an instrument setting:

RCL — Memory address — ENTER/UNITS

After entering the address, press any ENTER/UNITS key to activate store or recall.

Values of the memory address:

1 to 99 for STO
0 to 99 for RCL

Example	Input			IEC-bus code
	MEMORY	DATA	ENTER/UNITS	
Storing an instrument setting at memory location 7	STO	7	<input type="text"/>	STORE 7
Storing an instrument setting at memory location 25	STO	2 5	<input type="text"/>	STORE 25
Recalling the instrument setting from memory location 7	RCL	7	<input type="text"/>	RECALL 7

Location 0 serves for a special function, i.e. the current instrument setting prior to the last memory or preset recall is stored at this location. This instrument setting can be set again using RCL 0.

Using function SEQ (sequence), the memory settings can be recalled by repeated keying.

Display: Reference "MEM" and the memory address are indicated in the modulation display during entry, e.g.:

25
MEM

Associated instructions: Sequence

2.21 Sequence

It is possible to recall stored settings in ascending order by repeated keying using the SEQ key in the memory keypad. The same sequencing causes a closure of contacts, as e.g. by means of a foot switch, at the SEQ input (at the rear of the instrument).

The first setting in the sequence of memory calls planned is effected by means of a recall using the RCL key, the setting stored in the next higher memory location is activated by each subsequent keying of the SEQ key or the SEQ input. After the highest memory location number (99), the number of the last RCL call is the one to begin with.

The sequence of the memory addresses starts with 1 if the PRESET key has been actuated before.

Example	Input	IEC-bus code
Recall of memory locations 7, 8, 9 ...	<div style="display: flex; justify-content: space-around; border-bottom: 1px solid black; margin-bottom: 5px;"> MEMORY DATA ENTER/UNITS </div>	
	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; padding: 5px; text-align: center;">RCL</div> <div style="border: 1px solid black; padding: 5px; text-align: center;">7</div> <div style="border: 1px solid black; width: 30px; height: 20px;"></div> </div>	RECALL 7
	<div style="display: flex; justify-content: center; align-items: center;"> <div style="border: 1px solid black; padding: 5px; text-align: center; margin: 0 10px;">SEQ</div> </div>	SEQUENCE
	<div style="display: flex; justify-content: center; align-items: center;"> <div style="border: 1px solid black; padding: 5px; text-align: center; margin: 0 10px;">SEQ</div> </div>	SEQUENCE
	<div style="display: flex; justify-content: center; align-items: center;"> <div style="margin: 0 10px;">.</div> <div style="margin: 0 10px;">.</div> <div style="margin: 0 10px;">.</div> <div style="margin: 0 10px;">.</div> </div>	. . .

Display: The address of the memory location called last is indicated in the modulation display by the text "MEM" following each actuation of the SEQ key.

Associated instructions: Store - recall

2.22 Special Functions

The special functions enable settings to be made other than those indicated on the front panel.

The special functions are switched on and off using codes (data input) (see Table 2-1).

All special functions which are switched on are switched off using code 0. All special functions are also switched off by a PRESET.

Example	Input	IEC-bus code
Switching on the special function "Non-interrupting level setting"	<div style="text-align: center; background-color: #cccccc; padding: 2px;">DATA ENTER/UNITS</div> <div style="display: flex; align-items: center; justify-content: center; gap: 10px;"> <div style="display: flex; flex-direction: column; align-items: center;"> <div style="display: flex; gap: 5px;"> ● SHIFT ● STEP </div> <div style="display: flex; gap: 5px;"> <input style="width: 30px; height: 20px;" type="text"/> <input style="width: 30px; height: 20px;" type="text"/> </div> </div> <div style="text-align: center;">SPEC</div> <div style="display: flex; gap: 10px;"> <div style="border: 1px solid black; width: 30px; height: 30px; text-align: center; line-height: 30px;">1</div> <div style="border: 1px solid black; width: 30px; height: 30px;"></div> </div> </div>	ATTENUATOR:FIXED
Switching off the special function "Non-interrupting level setting"	<div style="display: flex; align-items: center; justify-content: center; gap: 10px;"> <div style="display: flex; flex-direction: column; align-items: center;"> <div style="display: flex; gap: 5px;"> ● SHIFT ● STEP </div> <div style="display: flex; gap: 5px;"> <input style="width: 30px; height: 20px;" type="text"/> <input style="width: 30px; height: 20px;" type="text"/> </div> </div> <div style="text-align: center;">SPEC</div> <div style="display: flex; gap: 10px;"> <div style="border: 1px solid black; width: 30px; height: 30px; text-align: center; line-height: 30px;">2</div> <div style="border: 1px solid black; width: 30px; height: 30px;"></div> </div> </div>	ATTENUATOR:NORMAL
Switching off all special functions	<div style="display: flex; align-items: center; justify-content: center; gap: 10px;"> <div style="display: flex; flex-direction: column; align-items: center;"> <div style="display: flex; gap: 5px;"> ● SHIFT ● STEP </div> <div style="display: flex; gap: 5px;"> <input style="width: 30px; height: 20px;" type="text"/> <input style="width: 30px; height: 20px;" type="text"/> </div> </div> <div style="text-align: center;">SPEC</div> <div style="display: flex; gap: 10px;"> <div style="border: 1px solid black; width: 30px; height: 30px; text-align: center; line-height: 30px;">0</div> <div style="border: 1px solid black; width: 30px; height: 30px;"></div> </div> </div>	

Display: The LED of the STATUS key lights up if a special function is switched on. By pressing the status key the code of the special function is output on the FREQUENCY display. If more than one special function is active, the codes are automatically output repeatedly if the STATUS key is pressed continuously or are output one after the other every time the STATUS key is pressed (see section "Status").

Table 2-1 Special functions

Special functions	Code	Remote Control Command
Non-interrupting level setting	1	ATTENUATOR:FIXED
Normal level setting	2	ATTENUATOR:NORMAL
EMF level	3	LEVEL:EMF
Normal level	4	LEVEL
AM two-tone	5	AM:DUAL
AM normal	6	AM
FM/φM two tone	7	FM:DUAL (e.g. FM)
FM/φM normal	8	FM (e.g. FM)
BLANK on	9	BLANK:ON
BLANK off	10	BLANK:OFF
BLANK polarity inverted	11	BLANK:INVERTED
BLANK polarity normal	12	BLANK:NORMAL
ALC bandwidth narrow	13	SPECIAL_FUNCTION 13
ALC bandwidth automatically adapted	14	SPECIAL_FUNCTION 14
ALC bandwidth broad	15	SPECIAL_FUNCTION 15
ALC bandwidth automatically adapted	16	SPECIAL_FUNCTION 16
Set power-on clear flag	17	
Delete power-on clear flag	18	
User request	19	
ALC off	21	SPECIAL_FUNCTION 21
ALC on	22	SPECIAL_FUNCTION 22
AM inverse	23	SPECIAL_FUNCTION 23
AM normal	24	SPECIAL_FUNCTION 24
RF output impedance "open" for LEVEL OFF	25	SPECIAL_FUNCTION 25
RF output impedance 50 Ω for LEVEL OFF	26	SPECIAL_FUNCTION 26
Display of firmware version	29	
Display test	31	SPECIAL_FUNCTION 31
ROM test	33	SPECIAL_FUNCTION 33
RAM test	35	SPECIAL_FUNCTION 35
EEPROM test	37	SPECIAL_FUNCTION 37
Calibrate all	40	SPECIAL_FUNCTION 40
Calibration routine VCO	41	SPECIAL_FUNCTION 41
Calibration routine FM	43	SPECIAL_FUNCTION 43

Table 2-1 Special functions (continued)

Special functions	Code	Remote Control Command
Calibration routine LEVEL PRESET	45	SPECIAL_FUNCTION 45
Calibration RF level on	47	SPECIAL_FUNCTION 47
Terminate calibration of RF level	48	SPECIAL_FUNCTION 48
Level correction off	49	LEVEL:CORRECTION:OFF
Level correction on	50	LEVEL:CORRECTION:ON
Calibration REF-OSC on	51	SPECIAL_FUNCTION 51
Terminate calibration of REF-OSC	52	SPECIAL_FUNCTION 52
FM DC center frequency calibration	55	SPECIAL_FUNCTION 55
Switch off diagnostic test point	100	TEST:OFF
Switch on diagnostic test point	101-116	TEST:POINT 1 (e.g. point 1)

Explanation of the Individual Special Functions:

Non-interrupting level setting:	Non-interrupting level setting is possible in a range of 20 dB. Cf. section "Non-interrupting Level Setting".
EMF level:	Indication of the EMF voltage. Cf. section "Level EMF".
AM two tone:	AM with internal and external modulation signal. Cf. section "Two-Tone Modulation".
FM/φM two tone:	FM or φM with internal and external modulation signal. Cf. section "Two-Tone Modulation".
BLANK:	Level blanking with an external TTL signal. Cf. section "Pulse Modulation".
BLANK polarity inverted:	Level blanking with inverted polarity. Cf. section "Pulse Modulation".
ALC bandwidth ...	The bandwidth of the level control loop can be switched to narrow or broad for special purposes. In normal state, it is adapted automatically.
Set (delete) power-on clear flag:	Cf. section "Common, Device-Independent Commands" (Table 3-3).
User request:	When entering the code of this special function, the user triggers a service request via the IEC bus in the LOCAL mode. This service function does not trigger a status indication. Cf. section "Service Request and Status Register".
ALC off:	The level control is switched to sample and hold operation.
AM invers:	For positive AM-signal, the RF-level is reduced.
RF output impedance "OPEN" for LEVEL OFF	When the RF-level is switched off via LEVEL OFF, the RF-output is set to an open impedance.
Display of firmware version:	The special function indicates the number of the firmware version in the amplitude display.
Display test:	The special function indicates all display segments. The indication is held as long as one of the four unit keys is pressed.
ROM test:	The special functions check the data contents. A recognized data error is indicated by a blinking of the status LED and after pressing the status key by means of an error code. Cf. table 2-3, "Status Codes of Errors".
RAM test:	
EEPROM test:	

VCO calibration routine:	Self-calibration for the optimal working point of the VCO-PLL. The calibration routine must only be executed in the case of data loss in the RAM or after the exchange of a module.
FM calibration routine:	Self-calibration of the FM. The calibration routine determines correction values to compensate for the fluctuating modulation sensitivity. The routine is to be executed in the case of considerable variations of the temperature, data loss in the RAM or the exchange of a module.
LEVEL PRESET calibration routine:	Self-calibration for the optimal working point of the level control loop. The calibration routine must only be executed in the case of data loss in the RAM or after the exchange of a module.
Calibration RF level:	Permits the input of correction values for the calibrated RF level (see service manual).
Level correction off/on:	Switching on or off level correction (on = default status).
Calibration REF-OSC:	Permits the input of the correction value for the calibrated reference frequency.
FM DC center frequency calibration:	Calibration of the center frequency when FM DC is set.

2.23 Self-Test

The SMY carries out a self-test on power-on and permanently during operation.

The RAM and ROM contents are checked when the instrument is switched on. The most important instrument functions are automatically monitored during operation.

A faulty function determined during the self-test is indicated by a flashing of the status LED and by a SERVICE Request message. The status code to identify the error can be output in the modulation display by pressing the STATUS key (see Table 2-3, status codes of errors and overrange/underrange settings in section "Status").

In addition, 16 internal test points can be scanned via the keyboard or the IEC bus and the results read out and displayed in the amplitude display. This more detailed test facility is described in the Service Manual.

2.24 Status

The generator produces numerical status messages to identify special functions and errors.

The status codes of special functions are output in the frequency display. The status codes of errors (input or function errors) are output in the modulation display by the test "Err." in the amplitude display.

They can also be scanned via the IEC bus (see section "Error Handling"). The meanings of the status codes are defined in tables 2-2 and 2-3.

Operation: The status codes are output in the frequency and modulation displays as long as the STATUS key is pressed. If several status messages are applicable, the codes are automatically output repeatedly if the STATUS key is pressed continuously or are output one after the other every time the STATUS key is stroked.

Display: The STATUS LED **lights up continuously** if special functions are switched on or overrange/underrange settings are made.

The STATUS LED **flashes continuously** in the case of function errors.

The STATUS LED **flashes briefly** in the case of input errors.

The status codes of the special functions are output in the frequency display in the following form:

SPECIALS

The code is 0 if no special function is switched on.

The status codes of the function errors and of overrange/underrange settings are output in the amplitude/modulation display in the following form:

Err. 2

The code is 0 if no error is present.

In the case of operator errors, the status codes of the input errors automatically appear briefly in the amplitude/modulation display in the following form:

Err. 51

IEC bus: A Service Request message (SRQ) may be output in the case of input and function errors and overrange/underrange settings. The type of error can be recognized from the event status register. An error code can be read out to permit exact error identification.

Table 2-2 Status codes of the special functions

Code	Meaning
0	No special function switched on
1	Non-interrupting level setting
3	EMF level
5	AM two tone
7	FM/φM two tone
9	BLANK on
11	BLANK polarity inverted
13	ALC bandwidth narrow
15	ALC bandwidth broad
21	ALC off
23	AM invers
25	RF output impedance "OPEN"
47	RF level calibration on
49	Level correction off
51	REF-OSC calibration on

Table 2-3 Status codes of errors and overrange/underrange settings

Code	Meaning
0	No error
Function error	
1	10-MHz reference loop out of synchronisation
2	640-MHz loop out of synchronisation
3	Main oscillator loop out of synchronisation
4	Level control not working
5	External overvoltage at the RF output
6	ROM data error
7	RAM data error of the settings stored
8	RAM data error of the VCO correction values
9	RAM data error of the FM correction values
10	RAM data error of the LEVEL PRESET correction values
11	EEPROM data error of the RF level correction values
12	EEPROM data error of the REF OSC correction values
13	EEPROM data error of the option data block
14	EEPROM disfunction
15	Calibration cannot be executed
Input error	
50	Syntax error
51	Value entry without the permissible range
52	Impermissible unit to the parameter selected
53	Impermissible header (IEC bus)
55	Deviation input is too high with the RF set
56	Variation is not possible unless the respective parameter is switched on (IEC bus).
57	FM DC center frequency calibration is only possible when FM DC is set.
Overrange/Underrange Settings	
70	AM not specified with the level set
71	AM not specified for AF > 50 kHz
72	RF < 9 kHz
73	AM EXT signal out of tolerance
74	FM/φM EXT signal out of tolerance
75	φM not specified for AF < 20 Hz or AF > 20 kHz
76	AF > 500 kHz
77	Level > 13 dBm (> 19 dBm with option SMY-B40)
78	OVEN COLD
81	ALC WIDE is not allowed (with option SMY-B40 at level >19 dBm)
82	TIME/STEP is too small

2.25 Instrument Preset

The instrument is set to a defined basic status by pressing the key PRESET.

Table 2-4 Preset status

	Setting
Reference frequency	internal
RF	100 MHz
Amplitude	-30 dBm
Parameter set	RF
Modulation	switched off
AF	switched off
Special functions	switched off
Status and mask registers of the service request functions	unchanged
IEC-bus address	unchanged

	Preset to
RF step	1 MHz
Amplitude, step	0.1 dB
AF	1 kHz
AF step	0.1 kHz
AM modulation depth	30 %
AM step	1 %
FM deviation	10 kHz
FM step	1 kHz
ϕ M deviation	1 rad
ϕ M step	0.1 rad
Memory locations	unchanged

2.26 IEC-Bus Address

The IEC-bus address can be displayed and set using the keys. It is stored until overwritten by a new address. The address range is from 0 to 30. The SMY is set to address 28 on delivery.

Example	Input	IEC-bus code
Output IEC-bus address on display Set IEC-bus address 7	<div style="text-align: center; background-color: #cccccc; padding: 2px;">DATA ENTER/UNITS</div> LOC/IEC ADD <input style="width: 40px; height: 15px;" type="text"/> LOC/IEC ADD <input style="width: 40px; height: 15px;" type="text"/> <input style="width: 30px; height: 15px; text-align: center; border: 1px solid black;" type="text" value="7"/> <input style="width: 40px; height: 15px;" type="text"/>	

Display: The IEC-bus address is output in the frequency display which is cleared by pressing any one of the parameter keys or the ENTER/UNITS keys.

