

XR-C720RDS

SERVICE MANUAL

AEP Model
UK Model



Model Name Using Similar Mechanism	XR-C510RDS
Tape Transport Mechanism Type	MG-50DX-39

SPECIFICATIONS

Cassette player section

Tape track 4-track 2-channel stereo
Wow and flutter 0.08 % (WRMS)
Frequency response 30 – 22,000 Hz
Signal-to-noise ratio

Cassette type	Dolby B NR	Dolby C NR	Dolby NR off
TYPE II, IV	67 dB	73 dB	61 dB
TYPE I	64 dB	70 dB	58 dB

Tuner section

FM
Tuning range 87.5 – 108.0 MHz
Antenna terminal External antenna connector
Intermediate frequency 10.7 MHz
Usable sensitivity 8 dBf
Selectivity 75 dB at 400 kHz
Signal-to-noise ratio 65 dB (stereo),
68 dB (mono)
Harmonic distortion at 1 kHz
0.5 % (stereo),
0.3 % (mono)
Separation 35 dB at 1 kHz
Frequency response 30 – 15,000 Hz
Capture ratio 2 dB

MW/LW (AEP, UK model)/SW (German model)

Tuning range MW: 531 – 1,602 kHz
LW: 153 – 281 kHz
SW: 5,950 – 6,205 kHz
Antenna terminal External antenna connector
Intermediate frequency 10.71 MHz/450 kHz
Sensitivity MW: 30 μ V
LW: 50 μ V
SW: 50 μ V

Power amplifier section

Outputs Speaker outputs
(sure seal connectors)
Speaker impedance 4 – 8 ohms
Maximum power output 30 W \times 4 (at 4 ohms)

—Continued on next page—

FM/MW/LW CASSETTE CAR STEREO
AEP/UK Model

FM/MW/SW CASSETTE CAR STEREO
German Model

SONY®

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL		
	Location of Controls	3
	Setting the Clock	4
	Cassette Player Operation	4
	Radio Reception	5
	RDS Functions	6
	Other Functions	7
	DSP Functions	8
	Connection	13
2. DISASSEMBLY		
2-1.	Sub Panel	15
2-2.	Heat Sink	15
2-3.	Mechanism Deck Block	16
2-4.	Main Board	16
2-5.	Front Back Panel	16
3. ASSEMBLY OF MECHANISM DECK		
3-1.	Installing the Loading Gears	17
3-2.	Installing the Reel Bracket	17
3-3.	Installing the Mode Lever and Pinch Levers	18
3-4.	Installing the Cassette Housing	19
3-5.	Installing the Loading Lever	19
3-6.	Positioning the Loading Levers	20
3-7.	Installing the Gear (Loading F)	20
4. MECHANICAL ADJUSTMENTS		
5. ELECTRICAL ADJUSTMENTS		
	Deck Section	21
	Tuner Section	22
6. DIAGRAMS		
6-1.	Pin Descriptions	26
6-2.	Block Diagram	30
6-3.	Printed Wiring Boards—Main Section—	33
6-4.	Schematic Diagram—Main Section—	37
6-5.	Schematic Diagram—Panel Section—	41
6-6.	Printed Wiring Board—Panel Section—	43
6-7.	Semiconductor Lead Layouts	45
7. EXPLODED VIEWS		
7-1.	Chassis Section	50
7-2.	Front Panel Section	51
7-3.	Mechanism Deck Section	52
8. ELECTRICAL PARTS LIST		
		53

General

Output lead	Power antenna relay control lead
	Power amplifier control lead
Tone controls	Bass ± 8 dB at 100 Hz
	Treble ± 8 dB at 10 kHz
Power requirements	12 V DC car battery (negative ground)
Dimensions	Approx. 188 x 58 x 176 mm (w/h/d)
Mounting dimension	Approx. 182 x 53 x 156 mm (w/h/d)
Mass	Approx. 1.2 kg
Supplied accessories	Power connecting cord (1)
	Cord with connector (AUDIO) (1)
	Mounting hardware (1 set)
	Front panel case (1)
	Rotary Commander RM-X2S
	Wireless remote commander RM-X40


Design and specifications are subject to change without notice.

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
 "DOLBY" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

SECTION 1 GENERAL

This section is extracted from instruction manual.


Location of Controls

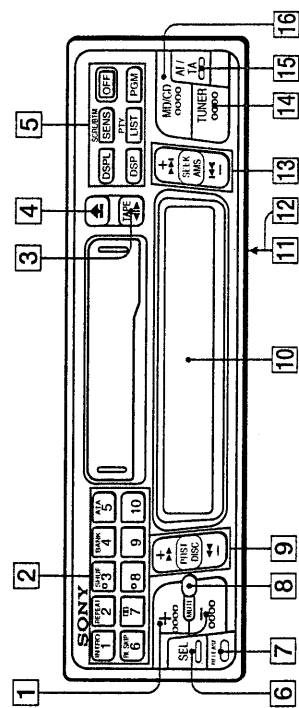

Refer to the pages in ● for details.

- 1 (volume/sub output level*/bass/treble/balance/fader control) button ①②③④⑤⑥⑦⑧⑨⑩⑪⑫⑬⑭⑮⑯⑰⑱⑲
- * XR-C720RDS only
- 2 During radio reception: Preset number buttons ②
- During tape/CD/MD playback:
 - INTRO button ②③④⑤⑥⑦⑧⑨⑩⑪⑫⑬⑭⑮⑯⑰⑱⑲
 - REPEAT button ②③④⑤⑥⑦⑧⑨⑩⑪⑫⑬⑭⑮⑯⑰⑱⑲
 - SHUF button ⑫⑬
 - BANK button ⑭⑮⑯
 - ATA (Automatic Tuner Activation) button ⑰⑱
 - BL.SKIP button ⑲⑳
 - DD (Dolby B NR or C NR) button ㉑⑳
- During CD/MD playback:
 - Direct disc selection button ⑲
 - For CD changers:
 - ①②③④⑤⑥⑦⑧⑨⑩⑪⑫⑬⑭⑮⑯⑰⑱⑲
 - ①②③④⑤⑥⑦⑧⑨⑩⑪⑫⑬⑭⑮⑯⑰⑱⑲
 - For MD changers:
 - TAPE/⏪ (playback/transport direction change) button ㉑⑳⑲⑳
 - ⏩ (eject) button ㉑⑳
 - OSPL (display mode change/time set) button ㉑⑳⑲⑳
 - SENS (Sensitivity adjust/Scroll/Best Tuning Memory Function) button ㉑⑳⑲⑳
- 3 OPEN (volume/sub output level*/bass/treble/balance/fader control) button ①②③④⑤⑥⑦⑧⑨⑩⑪⑫⑬⑭⑮⑯⑰⑱⑲
- 4 DSP (custom file mode select • set/list up) /PTY (programme type) button ②③④⑤⑥⑦⑧⑨⑩⑪⑫⑬⑭⑮⑯⑰⑱⑲
- 5 PRESET (programme type) button ②③④⑤⑥⑦⑧⑨⑩⑪⑫⑬⑭⑮⑯⑰⑱⑲
- 6 SEL (control mode select) button ②③④⑤⑥⑦⑧⑨⑩⑪⑫⑬⑭⑮⑯⑰⑱⑲
- 7 RELEASE (front panel release) button ②③④⑤⑥⑦⑧⑨⑩⑪⑫⑬⑭⑮⑯⑰⑱⑲
- 8 MUTE button ②③④⑤⑥⑦⑧⑨⑩⑪⑫⑬⑭⑮⑯⑰⑱⑲
- 9 PRST (preset) /DISC button ②③④⑤⑥⑦⑧⑨⑩⑪⑫⑬⑭⑮⑯⑰⑱⑲
- 10 Display window
- 11 POWER SELECT switch (located on the bottom of the unit)
See "POWER SELECT Switch" in the installation/Connections manual.
- 12 LINE-OUT/IN SELECT switch (located on the bottom of the unit)
See "LINE-OUT /IN SELECT Switch" in the installation/Connections manual.
- 13 SEEK/AMS button ㉑⑳⑲⑳
- 14 TUNER (radio on/band select) button ㉑⑳⑲⑳
- 15 AF/TA (alternative frequency/traffic announcement) button ㉑⑳⑲⑳
- 16 MD/CD (disc play • MD/CD changer select) button ㉑⑳⑲⑳

Wireless Remote Commander (RM-X40)

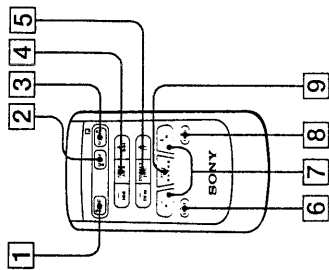

Buttons with the same function as those on the master unit.


- 1 OFF button
- 4 SEEK/AMS button
- 5 PRESET/DISC button
You cannot do the manual search and manual tuning with the remote commander.
- 6 MUTE button
- 7 button
- 8 DSPL button
- 9 SEL button

Different function buttons

- 2 MODE button
During Tape playback: Changes the playback side of the cassette.
During CD/MD playback: Selects CD/MD changers when several CD/MD changers are connected.
- During radio reception: Changes the preset groups within the band received.
FM1 ↔ FM2 MW ↔ LW(SW)
- 3 SOURCE button
Press to select program sources.
Each time the button is pressed, the program source mode changes as follows:
FM → MW → CD → MD → TAPE

When the POWER SELECT switch is set to the ① position, the unit cannot be operated with the wireless remote commander unless the MD/CD or TUNER button on the unit is pressed or a cassette is inserted to activate the unit first.

Installing the Batteries

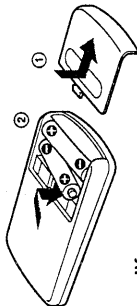

Battery life

When the batteries become weak, you will not be able to operate the unit with the remote commander. Battery life is approx. six months although it depends on the way of use.

Notes on batteries

- To avoid damage from battery leakage and subsequent corrosion:
 - insert the batteries by matching the "+" and "-" on the batteries to the "+" and "-" in the battery compartment
 - do not use an old battery with a new one, or different types of batteries together
 - remove the batteries when you do not use the unit for a long period of time
 - do not charge the batteries.

If any battery leakage occurs, replace the batteries with new ones after cleaning the battery compartment.

Notes on wireless remote commander

- Do not leave the remote commander in a location near any heat sources, or in a place subject to direct sunlight (especially on the dashboard in summer etc.).
- When you park your car in direct sunlight, detach the remote commander and place it in a location such as the glove-box, where it will not be subjected to direct sunlight.


Setting the Clock

The clock has a 24-hour digital indication.

For example, setting it to 10:08

- 1 **Display the time.**
(Press the **OFF** or the **OSPEL** button during unit operation.)

- 2 Press the **OSPEL** button for more than two seconds.




The hour digit blinks.


Set the hour digits.



to go forward
to go back



- 3 Press the **MIN** button momentarily.



The minute digit blinks.


Set the minute digits.



to go forward
to go back



- 4 Press the **OSPEL** button momentarily.



The clock activates.

Note

If the **POWER SELECT** switch on the bottom of the unit is set to the **⊕** position, the clock cannot be set unless the power is turned on. Set the clock after you have turned on the radio, or started CD, MD or tape playback.

Cassette Player Operation


Listening to Tape Playback

After inserting the cassette, playback will start automatically.




If a cassette is already inserted, press the **STOP** button to start playback. If you press during playback, the tape transport direction will change.

Indication of Tape Transport Direction



The side facing up is being played.



The side facing down is being played.

To stop playback,

eject the cassette by pressing the **EJECT** button or press the **OFF** button.

Playback stops also when you select another source (radio, CD or MD) by pressing the **RADIO** or **CD/MD** button.

Ejecting the Cassette

Press the **EJECT** button.

To Fast-wind the Tape



To start playback during rewinding or fast-forwarding, press the **STOP** button.

Playing a Tape Recorded in the Dolby B-NR or C-NR System

Press the **DOLBY** button when you want to listen to a tape recorded in Dolby B-NR or C-NR system. → "DOLBY" appears on the display.

Each time you press the **DOLBY** button, the mode changes as follows:

→ Dolby B-NR → Dolby C-NR → Cancel

Locating the Beginnings of the Tracks

— AMS (Automatic Music Sensor) Function

During playback, press either side of the **SEEK/AMS** button the number of times you wish to skip the tracks.



To locate the succeeding tracks

To locate the previous tracks

Up to nine tracks can be skipped.

If the blanks between the tracks are shorter than four seconds, or if there are noises, the AMS function will not work. Also, the unit may read long sections of low volume music or quiet sections on a track as blanks between tracks.

Searching the Desired Track — Intro Scan Function

Press the **INTRO** button during playback. → "INTRO" appears on the display.

The first 10 seconds of all the tracks are played. When you find the desired track, press the button once more. The unit returns to the normal playback mode.

Playing Tracks Repeatedly

— Repeat Play Function

Press the **[REPEAT]** button during playback. → "REP" appears on the display. When the currently played track is over, it will be played again from the beginning. To cancel this mode, press the button again.

Radio Reception during Fast-forwarding or Rewinding of a Tape

— ATA (Automatic Tuner Activation) Function

Press the **[FAST FWD]** button during playback. → "ATA" appears on the display. When fast-forwarding or rewinding with the PRST/DISC button, the tuner will turn on automatically.

Skipping Blanks Automatically during Tape Playback

— Blank Skip Function

Press the **[BLANK SKIP]** button during playback. → "BL.SKIP" appears on the display. Blanks longer than eight seconds will be automatically skipped during tape playback.

Radio Reception

Searching for the Stations Automatically

— Automatic Tuning

1 Select the desired band.



FM1 → FM2 → MW →
LW (SW) → FM1


2 Press either side of the SEEK/AMS button momentarily to search for the station (automatic tuning).



For higher frequencies
For lower frequencies

The scanning stops when a station is received. Press either side of the button repeatedly until the desired station is received.

When an FM stereo programme with a sufficient signal strength is tuned in,



the "ST" indication will appear.

To avoid the automatic tuning from stopping on stations too frequently (local seek mode), press the **[SENS]** button momentarily to get the "LCL" indication.

Only the stations with relatively strong signals can be tuned in. The local seek mode functions only when the automatic tuning is in operation.

If FM Stereo Reception is Poor

— Monaural Mode

Press the **[SENS]** button momentarily. → "MONO" appears on the display. The sound will improve, but it will become monaural.

Tuning in by Adjusting the Frequency — Manual Tuning

1 Select the desired band.



2 Press and hold either side of the PRST/DISC button.

Release the button when the desired station is received.



For higher frequencies
For lower frequencies

PREVENTING ACCIDENTS!

When tuning in during driving, use the automatic tuning and the memory preset tuning instead of the manual tuning.

Memorizing Stations Automatically

— BTM (Best Tuning Memory) Function

This function selects from the currently received band the stations with the strongest signals and memorizes them in order of their frequency.

1 Select the desired band.



2 Press the **[SENS]** button for more than two seconds.

- When there is no preset number indicated on the display window, stations will be stored on all preset number buttons on the currently selected band.
- When there is a preset number indicated on the display window, the unit will store stations on all preset number buttons from the one currently displayed.

For example, when you select FM2 and preset number 3 is displayed, the operation will start from preset number 3 on FM2, and will stop at preset number 10 on FM2.

3 FM1 and FM2 only:

Press preset number button **[1]** momentarily, then press again for about two seconds until you hear a beep tone. → The station will be stored. Repeat this operation with preset number buttons **[2]** through **[10]**.

Notes

- When "AF OFF" is displayed and you activate BTM, the unit will store only stations not transmitting RDS data. Depending on reception conditions however, it may happen that RDS stations are stored.
- When storing only RDS stations (page 11), step 3 is not necessary.

Memorizing Only the Desired Stations

1 Select the desired band.



2 Tune in the station which you wish to store on the preset number button.

3 Keep the desired preset number button (**[1]** to **[10]**) pressed for about two seconds until you hear a beep tone.

The number of the pressed preset number button appears on the display window.

Up to 10 stations on each band (FM1, FM2, MW and LW(SW)) can be stored on the preset number buttons in order of your choice. Therefore, 20 stations can be memorized on FM.

If you try to store another station on the same preset number button, the previously stored station will be erased.

Receiving the Memorized Stations

- 1 Select the desired band.



- 2 Press momentarily the preset number button on which the desired station is stored.

Note

If you press the preset number button for more than two seconds, the currently received station will be memorized again. To receive the previously memorized station, make sure that the preset number button is pressed only momentarily.

Press either side of the PRST/DISC button momentarily to receive in order the stations stored in the memory (Preset Search Function).



Press momentarily

1 → 2 → → 9 → 10 → 1 →



Press momentarily

1 → 10 → 9 → → 2 → 1 →

RDS Functions

Overview of the RDS Function

RDS (Radio Data System) is a system which uses FM radio waves to receive digital signals. Receiving RDS data with your car stereo unit allows it to use a variety of services. There are several ways to use these services. For instance, you can receive information such as traffic announcements and station names, or you can cause the unit to automatically retune to the strongest signal that is broadcasting the same programme. So even if you travel a long distance, it is still possible to listen to the same programme without having to retune manually again and again. Another function allows it to receive traffic announcements during tape, CD or MD playback. RDS offers various functions, but depending on the country or region, not all of these are available. Following information explains the RDS functions of this unit.

Notes

- In case of weak signals or other poor reception conditions, the RDS functions may not work properly.
- If the FM station currently received does not transmit RDS data, the functions described below will not work.

Displaying the Station Name

By using RDS data, the name of the station currently received can be displayed.

Select an FM station. → If it is a station transmitting RDS data, the station name will appear on the display.

BBC R1

When “**” appears in addition to the usual frequency indication, an RDS station is being received.

Changing the displayed items


Each time you press the DSPL button, the display on the displayed items change as follows:

→ Frequency → Time → Station Name

When “NO Name” (“NO NAME” for the XR-C620RDS) is displayed instead of the station name, the currently received station does not transmit RDS data. After some seconds, “NO Name” (“NO NAME” for the XR-C620RDS) will disappear, and the frequency will be displayed.

Listening to the same Programme without Manual Retuning even if the Location has changed — AF Function

Using “AF” (List of Alternative Frequencies), to automatically tune to that frequency among the frequencies of the currently received station, which carries the strongest signal in the respective region. As result, you can continuously listen to the same programme during a long-distance drive without repeated manual retuning.

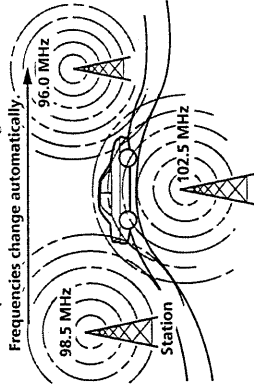

- 1 Select an FM station.
- 2 Press the button to get “AF” displayed.

Notes

- When the currently received frequency is weak and the same programme cannot be received with another frequency, “NO AF” will be indicated.
- When automatic tuning (page 8) is activated while “AF” is displayed, only FM stations which transmit RDS data will be received.
- When you press the AF/TA button while on MW or LW (SW) station is received, FM1 will be automatically selected.

Getting the Stored RDS Stations Tuned in from the Broadcasting Networks

When the unit stores an RDS station transmitting the AF data on a preset number button, it stores not only its frequency but also its AF and PI (Programme Identification) data. The unit will store this data in its memory no matter whether the AF function is ON or Off. Using the AF function, you can select a better signal station by re-tuning within the same broadcasting network of the memorized station.

Press the button, then press the preset number button.

Note

If the AF data on other station can be found in the network of the memorized station, “RS” will blink for eight seconds. Then, “PI seek” will be displayed, and the unit will search for a station with the same PI data. If the unit finds no other station with the same PI data, it will return to the original station.

Listening to a Regional Programme Press the button for more than two seconds. → “REG” appears on the display.

To cancel, press again for more than two seconds.

Note

The initial setting is “Regional ON”.

This function cannot be activated in the United Kingdom and some other areas.

Local Link Function (United Kingdom only)

When local stations stored on the preset number buttons are partly received, or when you want to change to another local station, use this function to activate automatic search for other local stations and to tune to them one by one. Within five seconds after its reception started, press the preset number button of the local station you want to change, and keep the button pressed. Repeat this procedure several times until the desired local station is received.

Storing only RDS stations

The BTM function (page 9) allows it to store only RDS stations on the preset number buttons; activate the AF function, then press the button for two seconds. When “AF OFF” is displayed and you activate BTM, the unit will store only stations not transmitting RDS data.

Listening to Traffic Announcements

By using TA (Traffic Announcement) and TI¹ (Traffic Programme) data, a station broadcasting traffic announcements can be automatically received. Even during tape, CD or MD playback you can hear traffic announcements, as the unit continues searching for such a station, and will automatically change to FM reception when a traffic announcement starts.

Press the button to get “TA” displayed. → The unit will start to search for traffic information stations. When a station transmitting a traffic announcement is found, “TP” will be displayed. During reception of the announcement, the “TA” indication will blink. The blinking will stop when the traffic announcement is over.

The TA function works also during tape, CD or MD playback.

continue to next page →

Press the **[TA]** button during tape, CD or MD playback. → "TA" appears on the display.

The unit will start to search for traffic announcements. When an announcement is received, tape, CD or MD playback will stop, and the traffic information station can be heard. In case you press the **[AF]** button while an MW or LW (SW) station is received, the unit will automatically change to FM reception.

Canceling the Currently Received Traffic Announcement
Press the **[AF/TA]** button momentarily.

Canceling the TA mode
Press the **[AF/TA]** button until "AF/TA OFF" appears on the display.

Note
If no traffic information stations can be received, "NO TIP" will blink for about four seconds, and then the search for other stations transmitting traffic announcements will start.

Each time you press the **[AF/TA]** button, the display window changes as follows:

→ AF ON → TA ON → AF/TA ON → AF/TA OFF ←

The "EON" indication
When both "TA" and "EON" are displayed, this means that in addition to the currently received station, another station too is broadcasting a traffic announcement.

Presetting the Volume of Traffic Announcements

It is possible to hear the traffic announcements at a previously set volume level. For example, even if volume is turned to zero, it will automatically change to the preset level when a traffic announcement starts. (In case the current volume level is higher than the preset level, the current level will not change.)

- 1 Select an FM station and the desired volume level.
- 2 Press button **[SWF 03]** while pressing the **[TA]** button.
When you hear a beep tone, the setting is completed.

Receiving Emergency Announcements
In case of danger through an emergency or a natural disaster, RDS stations transmit emergency announcements to warn the drivers in that area. Such announcements can be received only when the AF or TA functions are activated. When an emergency announcement is received, tape, CD or MD playback will stop, the unit will automatically change to FM, and the information can be heard.

Selecting the Programme Type

Some stations use RDS to distinguish the types of their programmes during broadcasting.

There are following programme types:

Program types	Display
News	NEWS
Current Affairs	AFFAIRS
Information	INFO
Sport	SPORT
Education	EDUCATE
Drama	DRAMA
Culture	CULTURE
Science	SCIENCE
Varied	VARIED
Pop	POP M
Rock	ROCK M
Middle of the Road	M.O.R. M
Light Classical	LIGHT M
Serious Classics	CLASSICS
Other Music Types	OTHER M
Not specified (without the station does not specify the programme type)	NONE

- 1 Press the **[PTY]** button during FM reception. → "PTY" appears on the display.

If the currently received station is transmitting iPTY (programme type selection) data, one of above-shown programme type names will be displayed. If the currently received station is no RDS station, or if the RDS data has not been read, "----" will be displayed. In this case, you can select "NEWS" or other programme types by pressing the **[LIST]** button.

PTY INFO

- 2 Press again within five seconds.
The programme types will be displayed in the order shown above.

PTY SPORT

- 3 When the desired programme type is displayed, press the either side of the SEEK/AMS button. → "SEARCH" will blink in the display.
The unit will search for station broadcasting this programme type.

PTY SEARCH

- 4 When a programme of the desired type is received, the programme type will again appear in the display for five seconds.

PTY SPORT

If the desired programme type cannot be found, "NO Data" ("NO DATA" for the XR-C620RDS) will be displayed for five seconds, and the unit returns to the previous station (programme).

PTY NO Data

Using RDS Data for Setting the Clock Automatically

By receiving CT (Clock Time) data, the clock of this unit can be set automatically.

- During FM reception, press the **[CT]** button while pressing the **[SEL]** button. → "CT" will be displayed, and the clock will be set.

CT 1:00

To cancel the CT function, press these buttons again.

- Notes**
- The CT function may not work even though an RDS station is being received.
 - The time set by the CT function may not be exact.

Other Functions

Adjusting the Sound Characteristics

- 1 Select the item you want to adjust by pressing the **[EQ]** button repeatedly.

XR-C720RDS:
VOL (volume) → SUB (Sub output level) → BAS* (bass) → TRE* (treble) → BAL (balance) → FAD* (fader) → VOL (volume)
* The level of the SUB output cannot be adjusted.

XR-C620RDS:
VOL (volume) → BAS (bass) → TRE (treble) → BAL (balance) → FAD (fader) → VOL (volume)

- 2 Adjust the selected item by pressing either the **[+]** or **[-]** button.

Adjust within three seconds after selecting. (After three seconds the button will again serve as volume control button.)

- Notes**
- When another digital pre-amplifier than XDP-LS6D or a graphic equalizer is connected and the LINE-CUT/IN SELECT switch is set to "SUB" and "FAD", "FAD" for the XR-C620RDS will not be displayed even with the SEL button pressed.
 - When the optional XDP-LS6D is connected, the fader settings can be set separately for the DSP on mode and DSP off mode.
 - When you use a stereo graphic equalizer (not supplied), set the fader control to the center position and adjust the level with the equalizer.

Muting the Sound Quickly

— Mute Function

- Press the **[MUTE]** button. → The "MUTE" indication flashes.

The sound is muted at once. To restore the previous volume level, press again.

This function will be also cancelled when:

- the **[+]** or **[-]** button is pressed.
- ejecting a cassette by pressing the **[EJECT]** button during tape playback.

Changing the Illumination Color

Press the **[MEMO]** button while pressing the **[ON]** button.
You can choose the color between amber and green.

Storing the Sound Characteristics of each Source

— Source Tone Memory Function

Press the **[MEMO]** button while pressing the **[SRC]** button. → "STM" will appear on the display.

This function memorizes the adjusted sound characteristics (the bass, treble, and different between volume and sub output level*) of each programme source. With this function, you can listen to the same source always in the same sound characteristics even after changing the programme source or tuning the unit off and on again.

* XR-C720RDS only

To cancel the STM function, press these buttons again.

Note

When the optional XDP-U50D is connected, the STM function will not work.

Muting the Beep Tone

Press the **[MUTE]** button while pressing the **[ON]** button.

To obtain the beep tone again, press these buttons once more.

Enjoying Bass and Treble even at Low Volume

— Loudness Function

Press the **[Loudness]** button while pressing the **[ON]** button. → "LOUD" will appear on the display.

Bass and treble will be reinforced. To cancel, press these buttons again.

Note

When the optional XDP-U50D is connected, the loudness function will not work.

Changing the Line Output Level

(when the optional XDP-U50D and a graphic equalizer are connected)

Press the **[EQ]** button while pressing the **[ON]** button.

To cancel the mode, press these buttons again.

Changing the Brightness of the Display Window

(for the XR-C720RDS)

Press the **[DIM]** button, while pressing the **[ON]** button.

The display window Brightness will be dimmed.

To change to the original Brightness, press these buttons again.

DSP Function

With the optional XDP-U50D connected

If you connect the optional XDP-U50D, you can add some effects to the soundfield of the currently selected programme source.

Overview of the Digital Signal Processor (DSP) Function

The DSP can digitalize and process the audio signal with high speed thus enabling you to adjust the acoustic characteristics of the source sound without losing the sound quality. With the DSP unit you can control the audio output and adjust the acoustic characteristics according to your preference.

Notes

- When the optional XDP-U50D and a graphic equalizer are connected, the reproduced sound may become distorted if the audio output signal of the graphic equalizer is boosted too much. In this case, press **preset number button 8** while pressing the **SEL** button. This will reduce the volume, but the distorted sound can be suppressed. To cancel the mode, press these buttons once again. (In case the optional XDP-U50D is connected by the optical cable, the volume will not get reduced even if you press **preset number button 8** and the **SEL** button.)
- To improve the efficiency of the listening position setting, the volume of the output sound from the rear speakers is lowered automatically.
- When the optional XDP-U50D is connected, the loudness function and STM function will not work.

The DSP edit mode

The DSP function includes following select / adjust modes:

- Surround (SUR) menu select / effect level control mode (see page 25)
- Listening position (LP) adjust mode (see page 26)
- Subwoofer (SUB) cut-off frequency / volume control mode (see page 27)
- Bass (BAS) adjust mode (see page 28)
- Treble (TRE) adjust mode (see page 28)
- Fader (FAD) adjust mode (see page 29)

EN

EN



Display window	Selected mode	Adjustment of
SUR	Surround menu	Effect Level
LP1	Listening position	Left, right, front and rear listening position
SUB	Cut-off frequency	Subwoofer volume
BAS	Bass turn-over frequency	Bass volume
TRE	Treble turn-over frequency	Treble volume

In addition, there are also following DSP-

- DSP custom file function (see page 29)
- Last sound memory function (see page 29)

Selecting the Surround Mode

This unit features ten preset surround modes. You can select your desired surround mode to suit the source audio. These modes can simulate different soundfields so that you can enjoy the sensation of being close to the music source or being at a live concert etc.


Surround Menu

HALL	Concert hall
JAZZ	Jazz club
DISCO	Disco with thick walls
THEATER	Movie theater/cinema
PARK	Big, open space
LIVE	Live concert
OPERA	Opera house
CHURCH	Church/chapel with a lot of reverberation
STADIUM	Open-air concert in a stadium
CELLAR	Cellar with a lot of reverberation
DEFEAT	Normal mode without any DSP effects*

* The surround mode will be canceled. However, other preset levels of the DSP function menu can be adjusted.

- 1 Select a programme source (tape, radio, CD or MD) by pressing the , or button.

- 2 Press the button for more than one second. → "DSP" appears on the display. Enter the surround menu select mode.



- 3 Press either the or button to select the desired surround menu.

HALL → JAZZ → DISCO → →
CELLAR → STADIUM → CHURCH →
..... → DEFEAT → CELLAR

Note

If the "DEFEAT" mode is selected, the sound will be restored to the original state without any effects. (The "DSP" indication will disappear.)

- 4 Press the button for more than one second.

You can continue to listen with the selected surround menu.

To cancel, press the button momentarily. → "DSP" disappears from the display.


Adjusting the Effect Level

Balance and level of the reflections and of the reverberation of the selected surround mode can be adjusted.


- 1 Select the surround mode by performing steps 1 to 3 noted above.

- 2 Press the button momentarily.


Enter the effect level adjust mode.



- 3 Press either the or button to select the desired level.



You can adjust from 0 to 100%. The higher the percentage, the more resembles the sound a live performance.

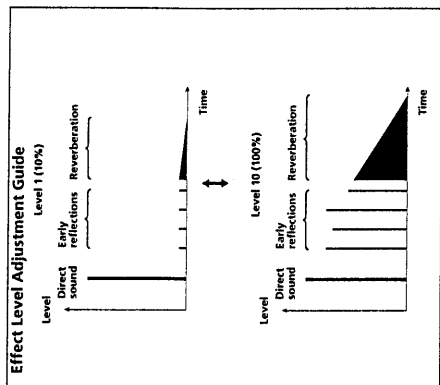

- 4 To continue to adjust the effect level of another surround menu, press the button momentarily.

- To cancel the effect level adjust mode, press the button for more than one second.

To stop the setting procedure,


Press the button for more than one second.

To change the effect level to the original (factory-set) setting,

Press the button for more than two seconds.

Selecting the Listening Position


The time it takes for the sound from the speakers to the listener can be selected. Even in an imperfect listening environment, such as inside a car, it is possible to simulate a natural soundfield so that a listener can feel as if he is in the centre of the soundfield wherever he sits in the car.

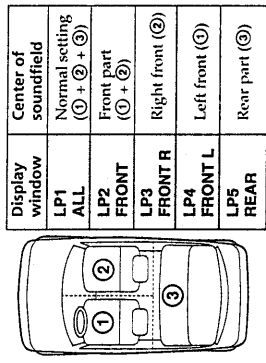

- 1 Select a programme source (tape, radio, CD or MD) by pressing the , or button.

- 2 Press the button for more than one second. → "DSP" appears on the display.

- 3 Press the button momentarily several times until you get the "LP1" indication. Enter the listening position adjust mode.



- 4 Press either the or button to select the desired level.

By pressing either the or button repeatedly, the listening position indication in the display window will change as follows:

ALL (LP1) → FRONT (LP2) → →
REAR (LP5) → ALL (LP1)
ALL (LP1) → REAR (LP5) → →
FRONT (LP2) → ALL (LP1)

- 5 To cancel the listening position adjust mode, press the button for more than one second.


EN EN

CD Custom File Function/DSP Function


Setting the listening position more specifically

1 After selecting the listening position by performing steps 1 to 3, press the button. Enter the left/right balance adjust mode.

2 Press either the or button to set the centre of the soundfield.




For example, adjustment of the left/right balance of "LP3"

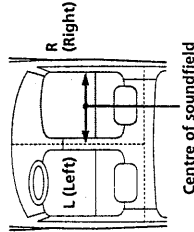


3 Press the button. Enter the front/rear balance adjust mode.

4 Press either the or button to set the centre of the soundfield.



For example, adjustment of the front/rear balance of "LP3"

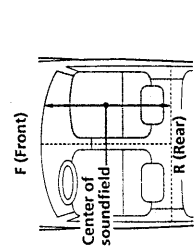


5 **A** To continue to adjust another the listening position, press the button momentarily.

B To cancel the balance adjust mode, press the button for more than one second.

Adjusting the Cut-off Frequency and Volume of the Subwoofer(s)

To match the characteristics of the connected subwoofer(s), you can cut the unwanted high and middle frequency audio signal entering the subwoofer(s). The frequency at which the audio signal is cut off is called the cut-off frequency. By setting the cut-off frequency, the subwoofer(s) will output only low frequency signals so that a clearer sound image can be created.

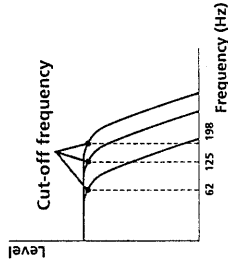


1 Select a programme source (tape, radio, CD or MD) by pressing the , or button.

2 Press the button for more than one second. → "DSP" appears on the display.


3 Press the button momentarily several times until you get the "SUB" indication.

Enter the cut-off frequency adjust mode.



4 Press either the or button to select the desired cut-off frequency.

By pressing either the + or - button repeatedly, the listening position indication in the display window will change as follows:




* Factory-set frequency

5 Press the button momentarily. Enter the volume control mode.

continue to next page →

6 Press either the or button to adjust the volume.



Note
At the lowest volume setting the subwoofer sound will be completely cut out (silence).

7 **A** To continue to select another the cut-off frequency, press the button momentarily.


B To cancel the cut-off frequency adjust mode, press the button for more than one second.

Stopping the setting procedure
Press the button for more than one second.

Changing the cut-off frequency to the original (factory-set) setting
Press the button for more than two seconds.

Adjusting the Bass and Treble


When the bass or treble frequency is changed, the original frequency is called the turn-over frequency. By selecting the bass or treble turn-over frequencies, you can control the volume thus matching the acoustic characteristics inside your car.

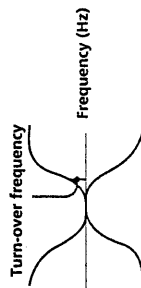


1 Select a programme source (tape, radio, CD or MD) by pressing the , or button.

2 Press the button for more than one second. → "DSP" appears on the display.

3 Press the button momentarily several times to get the "BAS" or "TRE" indication. Enter the bass or treble adjust mode.




Bass adjust mode



Treble adjust mode


4 Press either the or button to select the turn-over frequency.

By pressing either the + or - button repeatedly, the turn-over frequencies in the bass adjust mode will change as follows:



* Factory-set frequency


By pressing either the + or - button repeatedly, the turn-over frequencies in the treble adjust mode will change as follows:



* Factory-set frequency

5 Press the button momentarily. Enter the volume control mode.

6 Press either the or button to adjust the volume.



7 **A** To continue to select another the turn-over frequency, press the button momentarily.

B To cancel the bass or treble adjust mode, press the button for more than one second.

To stop the setting procedure
Press the button for more than one second.

To change the bass or treble to the original (factory-set) setting
Press the button for more than two seconds.

Fader (FAD) Adjustment

The fader can be adjusted separately for the DSP on mode and DSP off mode. Normally, with the DSP mode on, the volume of the output sound from the rear speakers is lowered automatically to improve the efficiency of the listening position setting. If you want to raise the rear speaker volume, adjust the fader.

For this operation, refer to page 13.

DSP Custom File Function (With Optional CD changer(s) connected)

Registering Surround Modes onto Discs

Once you have registered the desired surround modes onto the discs, you can enjoy the same surround modes every time you play these discs. (With one CD changer, you can register surround modes onto a maximum of 110 discs. See page 22 for more details.)

Note
Before registering the DSP custom file, make sure that you have titled the discs (page 22).

1 Play the disc whose surround mode you wish to register.

2 Press the **PTY** button for more than two seconds.

Enter the name exit mode.

Note
If the disc has no title, "-----" will appear in the display window. Refer to "Putting Your Personalized Titles onto the CDs" on page 22.

3 Press the **PTY** button momentarily twice.

Enter the DSP file registering mode.

CD1 -DEFEAT-

4 Press either the **MD** or **DISCO** button to select the surround menu.

MD → JAZZ → DISCO → → DEFEAT → HALL
DISCO → STADIUM → CHURCH → → DEFEAT → CELLAR

5 Press the **PTY** button for more than two seconds.

Enter the normal CD playback mode.

Playing in the DSP Custom File Mode

Press the **MD** button while pressing the **DISCO** button during CD playback. → "DSP" and "FILE" appears on the display.

CD1 1. 2. 15

To cancel, press these buttons again.

Notes

- When you press the DSP button during CD playback in the DSP custom file mode, the surround mode will be cancelled. However, if you change the disc, the new disc will be played in the surround mode registered in the DSP custom file.
- If no surround mode is registered on a disc, the "DSP" indication will not appear.

Changing the registered surround mode

Play the disc whose surround mode you wish to change, and repeat from step 2 to step 5 in this page.

Erasing the registered surround mode

Select the DEFEAT mode in step 4 this page.

Listening to each Programme Source in its Registered Surround Mode — LSM (Last Sound Memory) Function

This function memorizes the last-selected surround mode of each programme source. With this function, you can listen to the same source always in the same surround mode even after changing the programme source or turning the unit off and on again.

For example, if you listen in following order to a MD in the "HALL" mode, to the radio in the "DEFEAT" mode, to a CD in the "LIVE" mode and change then to MD playback, the surround mode will automatically change to "HALL". If you change then to radio, the surround mode will change to "DEFEAT".

Maintenance

Fuse Replacement

When replacing the fuse, be sure to use one with the correct amperage which is stated on the fuse case. Never use a fuse whose amperage rating exceeds the one supplied to the unit as this could cause a malfunction of the unit.

Warning


Use a fuse with the specified amperage. Use of a fuse with higher amperage may cause serious damage.

Cleaning the Connectors



The unit may not function properly if the connectors between the unit and the front panel are not clean. In order to prevent this, open the front panel by pressing the RELEASE button, then detach it and clean with a cotton swab which was dipped in alcohol. Do not apply too much force. Otherwise, the connector may get damaged.



Main unit



Back of the front panel

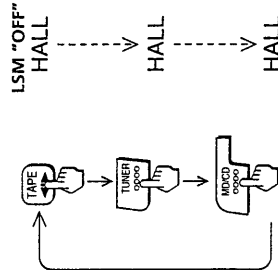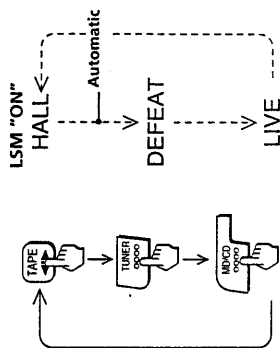

Note
Even with the LSM function off, it is possible to change the surround mode manually.

Playback with the LSM Function

Press the **DISCO** button while pressing the **MD** button. → "LSM" appears on the display.

LSM ON

To cancel, press these buttons again.

Note

When you play a CD in the DSP custom file mode, the various surround modes registered on the discs will change automatically even when the LSM function is on.

Error displays (with the optional CD/MD changer(s) connected)

The following indications will flash for about five seconds and an alarm sound will be heard.

Display	Cause	Solution
NO Mag	The disc magazine is not inserted in the CD/MD changer.	Insert the disc magazine with discs into the CD/MD changer.
NO Disc	No disc is inserted in the disc magazine.	Take out the magazine and insert the discs.
Error	The disc is dirty. The disc is inserted upside down.	Clean the disc*. Insert the disc correctly.
Push Reset	The CD/MD changer cannot be operated because of some problem.	Press the reset button of the unit.
Not Ready	The lid of the MD changer is open or MDs are not inserted properly.	Close the lid or inserted the MDs properly.
Blank	No tracks have been recorded on the MD.	Play a MD with recorded tracks on it.
High Temp	The ambient temperature is more than 50°C.	Wait until the temperature goes down below 50°C.

* In case of a MD, insert another MD.

If the above-mentioned solutions do not help to improve the situation, consult your nearest Sony dealer.

Connection

Caution

- This unit is designed for negative ground 12 V DC operation only.
- Before making connections, disconnect the ground terminal of the car battery to avoid short circuits.
- Connect the yellow and red power input leads only after all other leads have been connected.
- Be sure to connect the red power input lead to the positive 12 V power terminal which is energized when the ignition key is in the accessory position.
- Run all ground wires to a common ground point.

If Your Car has No Accessory Position on the Ignition Key Switch — POWER SELECT Switch

The illumination on the front panel is factory-set to be turned on even when the unit is not being played. However, this setting may cause some car battery wear if your car has no accessory position on the ignition key switch. To avoid this battery wear, set the POWER SELECT switch located on the bottom of the unit to the 0 position, then press the reset button. The illumination is reset to stay off while the unit is not being played.

Note

The caution alarm for the front panel is not activated when the POWER SELECT switch is set to the 0 position.

When Using the SUB OUT/LINE OUT Terminal

— LINE-OUT/IN SELECT Switch

With the LINE-OUT/IN SELECT switch on the bottom of the unit, you can change the SUB VOLUME OUT/LINE OUT terminal to work as subwoofer output* terminal or as LINE OUT terminal.


- When you want to use the SUB VOLUME OUT/LINE OUT terminal as subwoofer output terminal and connect an active subwoofer to it, set the switch to 0.
- When you want to use the SUB VOLUME OUT/LINE OUT terminal as LINE OUT terminal and connect a digital signal processor or graphic equalizer to it, set the switch to 1. In this case, the FRONT LINE OUT terminal and REAR LINE OUT terminal will serve as FRONT LINE IN terminal and REAR LINE IN terminal, respectively.

* Bass, treble, and fader cannot be adjusted.

When you change the position of the switch, be sure to press one of the reset buttons after the connections are completed.

Reset Button

When the installation and connections are over, be sure to press the reset button with a ball-point pen etc. The reset button is located on the left of the connector on the unit side when the front panel is detached.



Reset button
Touche de réinitialisation
Rückstellaste
Pulsante di azzeramento

Connexions

Précautions

- Cet appareil est conçu pour fonctionner sur courant continu de 12 V avec masse négative.
- Avant d'effectuer les raccordements, débranchez la borne de terre de la batterie du véhicule pour éviter tout court-circuit.
- Raccordez les fils jaune et rouge d'alimentation uniquement après avoir réalisé toutes les autres connexions.
- Raccordez le fil d'alimentation rouge à la borne positive de 12 V qui est alimentée quand la clé de contact est sur la position accessoire.
- Rassemblez tous les fils de terre en un point de masse commun.

Si l'appareil est utilisé dans une voiture dont la clé de contact n'a pas de position accessoires — Interrupteur POWER SELECT

L'éclairage du panneau avant est réglé en usine de manière à s'allumer même quand l'appareil ne fonctionne pas. Cependant, ce réglage risque d'épuiser la batterie si l'appareil est utilisé dans une voiture dont la clé de contact ne possède pas de position accessoires. Pour éviter d'épuiser la batterie, réglez l'interrupteur POWER sur le socle de l'appareil sur la position 0, puis appuyez sur la touche de réinitialisation. L'éclairage est réglé pour rester éteint quand l'appareil n'est pas utilisé.

Remarque

Quand l'interrupteur POWER SELECT est réglé sur la position 0, l'avertisseur du panneau avant ne fonctionne pas.

Si vous utilisez la borne SUB OUT/LINE OUT


— Commutateur LINE OUT/IN SELECT

Le commutateur LINE-OUT / IN SELECT situé sous l'appareil vous permet de changer la borne SUB VOLUME OUT / LINE OUT pour qu'elle serve de borne de sortie* subwoofer ou de borne LINE OUT.

- Si vous souhaitez utiliser la borne SUB VOLUME OUT/LINE OUT comme borne de sortie du subwoofer et y raccorder un subwoofer actif, réglez le commutateur sur 0.
- Si vous souhaitez utiliser la borne SUB VOLUME OUT / LINE OUT comme borne de sortie LINE OUT et raccorder un processeur de signal numérique ou un égaliseur graphique, réglez le commutateur sur 1. Dans ce cas, les bornes FRONT LINE OUT et REAR LINE OUT servent respectivement de bornes FRONT LINE IN et REAR LINE IN.

* Les basses, les aigus et la balance avant/arrière ne peuvent être réglées.

Change the position with a jeweler's screwdriver, etc.
Changer la position avec un tournevis de joaillier ou autre objet similaire.
Den Schalter mit einem kleinen Schraubenzieher o.ä. umstellen.
Cambiare la posizione con un cacciavite da gioielliere, ecc.



Nach einer Umstellung des Schalters drücken Sie bei vollständigem angeschlossenen Gerät die Rückstellaste.

Quando si cambia la posizione dell'interuttore, assicurarsi di premere uno dei pulsanti di azzeramento dopo aver completato i collegamenti.

Touche de réinitialisation

Quand vous avez terminé l'installation et les raccordements, appuyez sur la touche de réinitialisation avec un stylo-bille ou un objet pointu. La touche de réinitialisation est située à gauche du connecteur sur la partie de l'appareil qui se trouve derrière la façade.

Rückstellaste

Nach der Installation und dem Anschluß muß die Rückstellaste mit einem Kugelschreiber o.ä. gedrückt werden. Die Rückstellaste befindet sich bei abgenommener Frontplatte links neben dem Anschluß.

Pulsante di azzeramento

Dopo avere terminato l'installazione e i collegamenti, assicurarsi di premere il pulsante di azzeramento con la punta di una penna a sfera ecc. Il pulsante di azzeramento è collocato sulla sinistra del connettore sul lato dell'apparecchio quando il pannello anteriore è staccato.

Anschluß

Vorsicht

- Dieses Gerät ist ausschließlich für eine negativ geerdete 12-V-Autobatterie bestimmt.
- Trennen Sie vor dem Anschließen des Geräts die Erdungsklemme der Batterie ab, um einen Kurzschluß zu vermeiden.
- Schließen Sie das gelbe und rote Stromversorgungskabel erst an, wenn alle anderen Kabel bereits angeschlossen sind.
- Leiten Sie das rote Stromversorgungskabel an einen positiven 12-V-Kontakt des Bordnetzes, der in der Zubehörposition des Zündschlosses unter Strom steht.
- Leiten Sie alle Erdungskabel an einen gemeinsamen Massepunkt ab.

Wenn das Zündschloß Ihres Wagens keine Position I bzw. ACC besitzt — POWER SELECT-Schalter

Das Gerät ist werkseitig so voreingestellt, daß das Bedienfeld auch dann beleuchtet ist, wenn das Gerät nicht betrieben wird. Besitzt das Zündschloß Ihres Fahrzeugs keine Position I bzw. ACC, so ist die Beleuchtung ständig eingeschaltet und entzieht der Batterie Strom. Stellen Sie in einem solchen Fall den POWER SELECT-Schalter an der Unterseite des Geräts auf Position 0, und drücken Sie dann die Rücksetztaste. Bei ausgeschaltetem Gerät ist das Bedienfeld dann nicht mehr beleuchtet.

Hinweis

Der Warnton für die Frontplatte ertönt nicht, wenn der POWER SELECT-Schalter auf Position 0 gestellt ist.

Der Anschluß SUB OUT/LINE OUT — Schalter LINE-OUT/IN SELECT

Mit dem Schalter LINE-OUT/IN SELECT an der Geräteunterseite können Sie den Anschluß SUB VOLUME OUT/LINE OUT so schalten, daß Sie ihn als Tiefsttonlautsprecherausgang* oder als Anschluß LINE OUT nutzen können.

- Wenn Sie den Anschluß SUB VOLUME OUT / LINE OUT als Tiefsttonlautsprecherausgang nutzen wollen und einen Aktivtiefsttonlautsprecher anschließen, stellen Sie den Schalter auf 0.
- Wenn Sie den Anschluß SUB VOLUME OUT / LINE OUT als Anschluß LINE OUT nutzen wollen und einen digitalen Signalprozessor oder Graphic Equalizer anschließen, stellen Sie den Schalter auf 1. In diesem Fall dienen die Anschlüsse FRONT LINE OUT und REAR LINE OUT als Anschluß FRONT LINE IN bzw. REAR LINE IN.

* Bässe, Höhen und Fader können nicht eingestellt werden.

Collegamenti

Attenzione

- Questo apparecchio è stato progettato per l'uso solo in funzionamento a 12 V CC con massa negativa.
- Prima di eseguire i collegamenti, scollegare il terminale di massa della batteria dell'auto per evitare cortocircuiti.
- Collegare i cavi di collegamento alimentazione rosso e giallo solo dopo aver collegato tutti gli altri cavi.
- Assicurarsi di collegare il cavo rosso di collegamento alimentazione al terminale di alimentazione 12 V positivo che è sotto tensione quando la chiavetta di accensione è in posizione accessoria.
- Portare tutti i cavi di massa a un punto di massa comune.

Quando si usa l'apparecchio in un'auto priva di posizione accessoria per la chiavetta di accensione — Interruttore POWER SELECT

L'illuminazione del pannello anteriore è stata predisposta in fabbrica per l'attivazione anche quando non si usa l'apparecchio. Tuttavia questa regolazione può causare scaricamento della batteria dell'auto se si usa l'apparecchio in un'auto priva di posizione accessoria per la chiavetta di accensione. Per evitare ciò, regolare su 0 l'interuttore POWER SELECT situato alla base dell'apparecchio e quindi premere il tasto di azzeramento. L'illuminazione rimane così spenta finché l'apparecchio rimane spento.

Nota

La suoneria di avvertimento per il pannello anteriore non si attiva quando l'interuttore POWER SELECT è in posizione 0.

Utilizzo del terminale SUB OUT/LINE OUT

— Interruttore LINE-OUT/IN SELECT

L'interuttore LINE-OUT/IN, posto alla base dell'apparecchio, consente di utilizzare il cavo terminale SUB VOLUME OUT/LINE OUT come uscita del subwoofer* o come cavo terminale LINE OUT.

- Se si desidera utilizzare il terminale SUB VOLUME OUT/LINE OUT come terminale di uscita del subwoofer e collegarlo ad un subwoofer attivo, posizionare l'interuttore su 0.
- Se si desidera utilizzare il terminale SUB VOLUME OUT/LINE OUT come terminale di uscita LINE OUT e collegarlo ad un processore digitale di segnale o ad un equalizzatore grafico, posizionare l'interuttore su 1. In questo caso, i terminali FRONT LINE OUT e REAR LINE OUT fungeranno rispettivamente da terminali FRONT LINE IN e REAR LINE IN.


*Non è possibile regolare i bassi, gli acuti e l'attenuatore.

Connection Example

Exemple de raccordement

Anschlußbeispiel


Esempio di collegamento

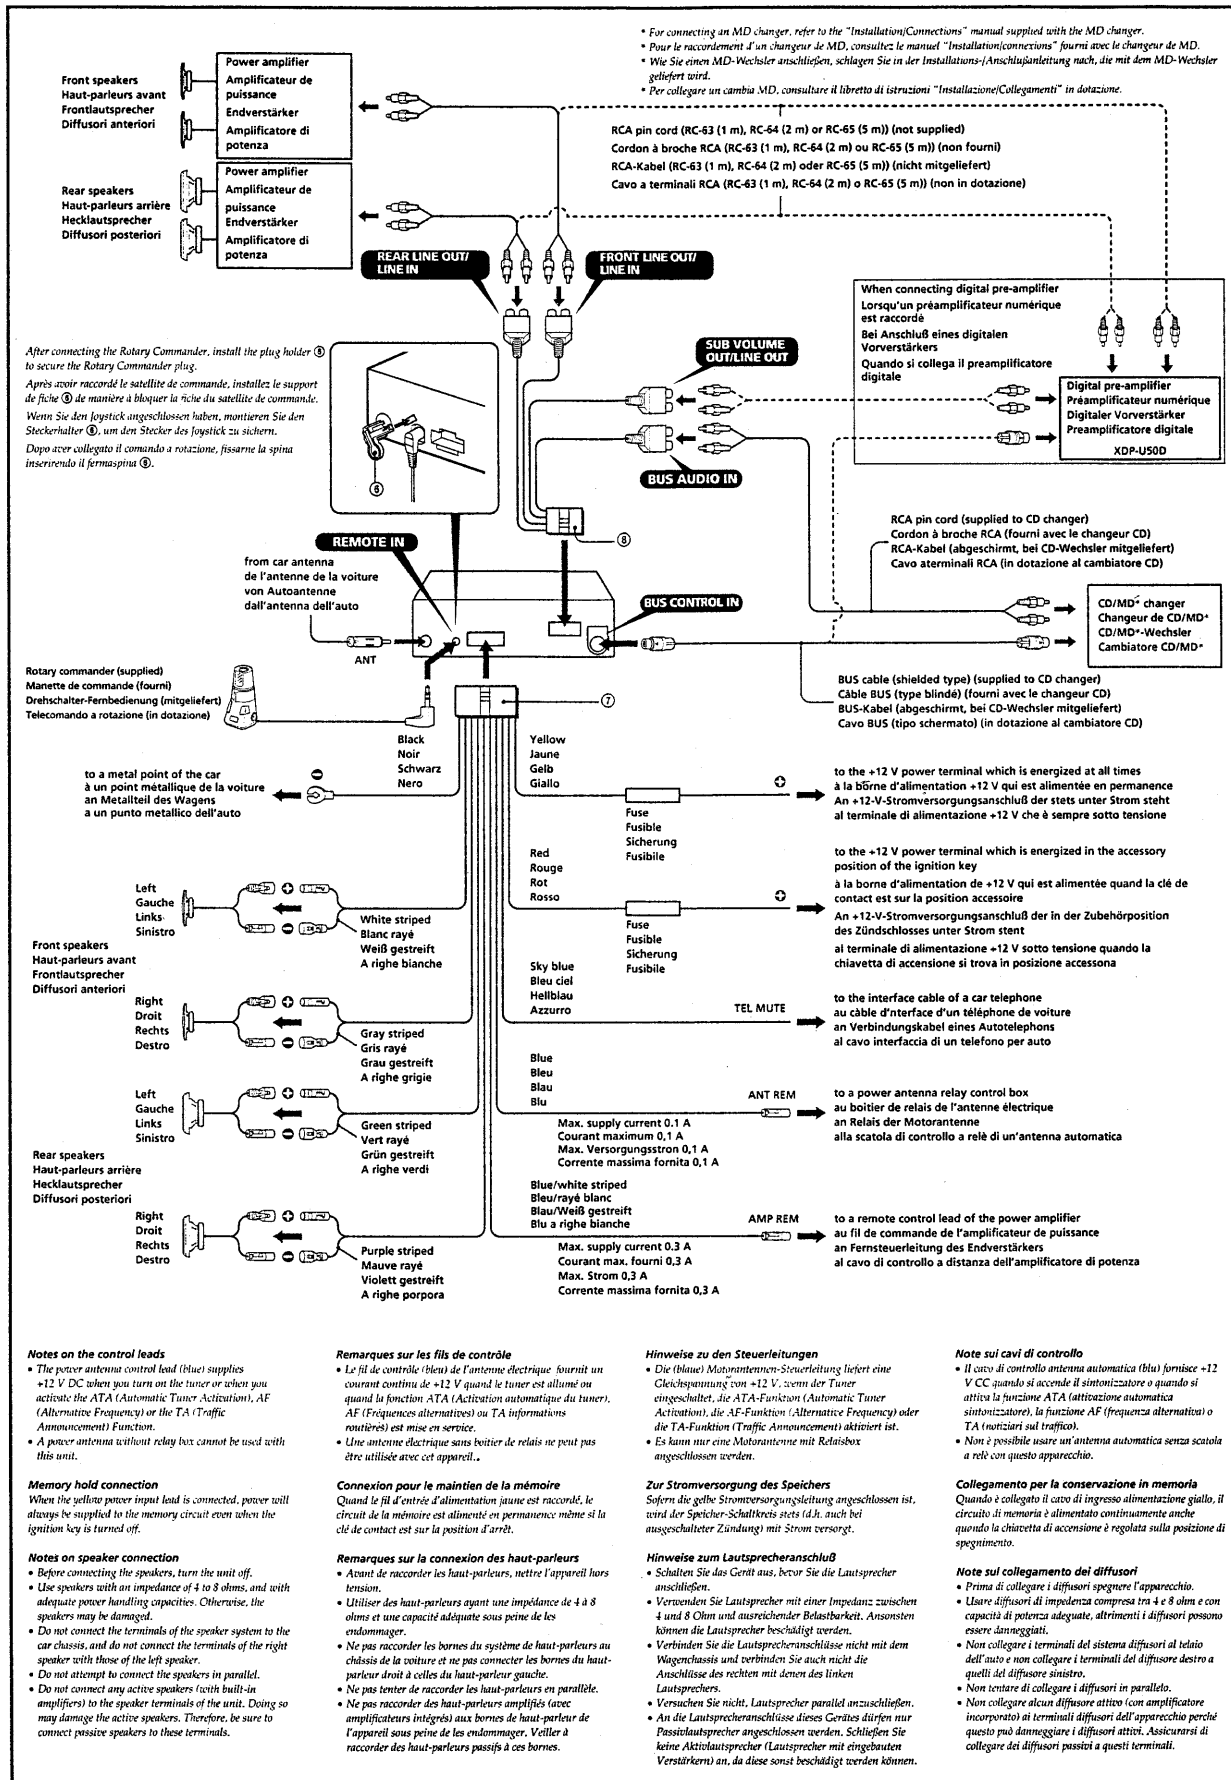


SECTION 2 DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.


2-1. SUB PANEL

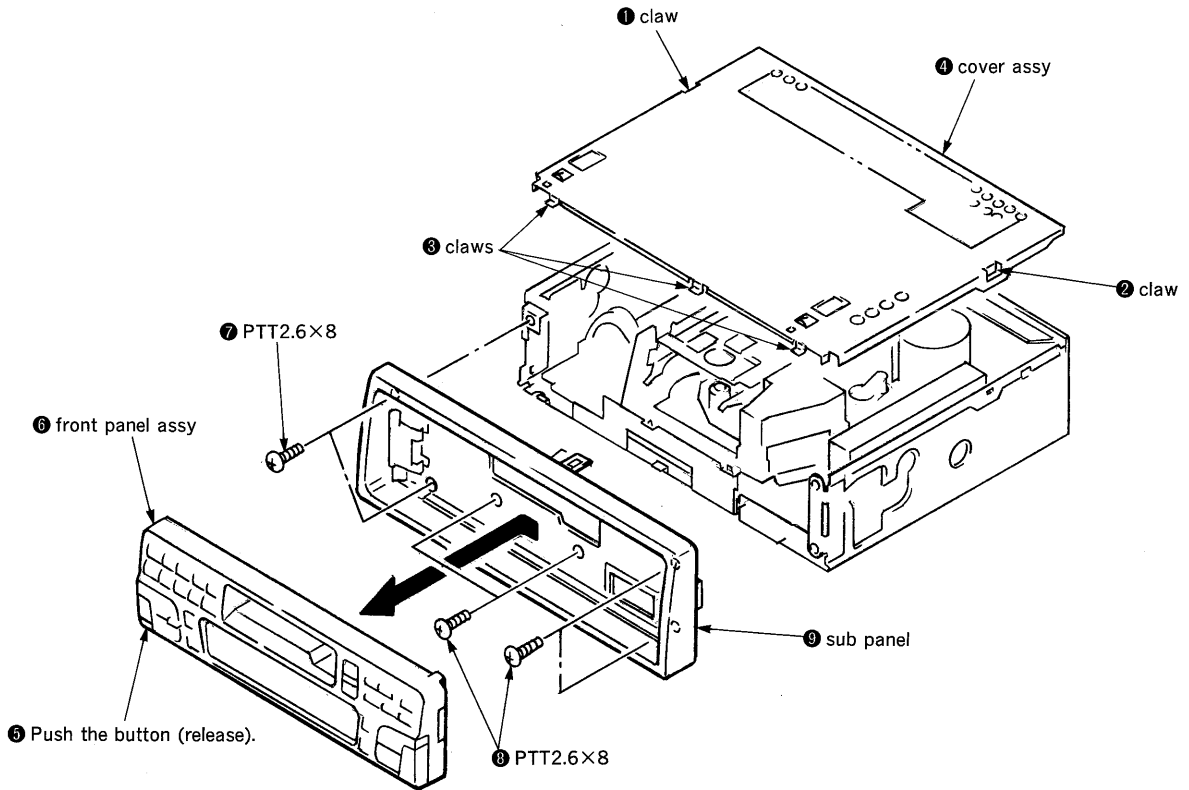


2-2. HEAT SINK

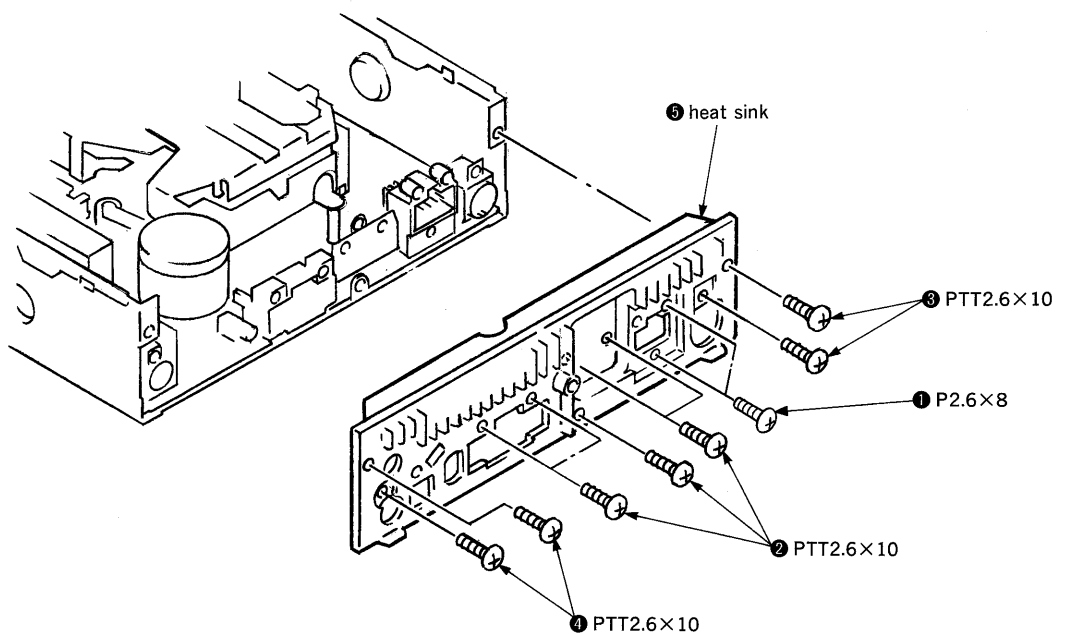


2-3. MECHANISM DECK BLOCK

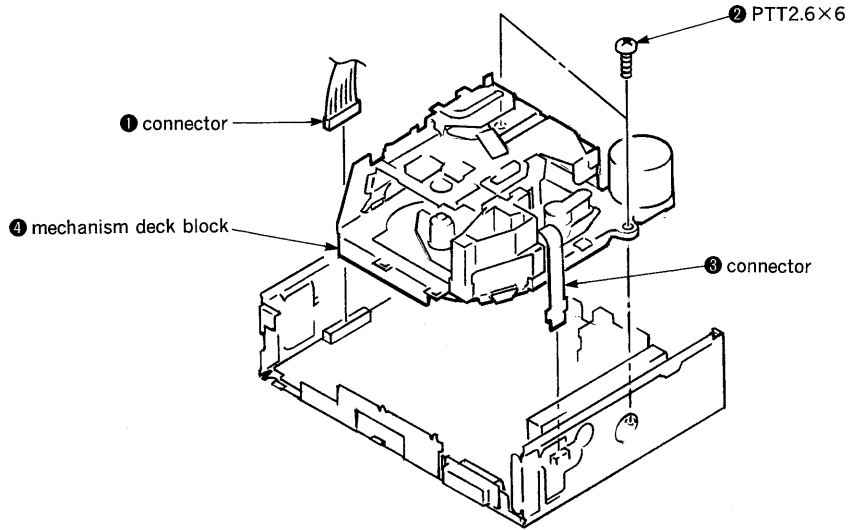

2-4. MAIN BOARD

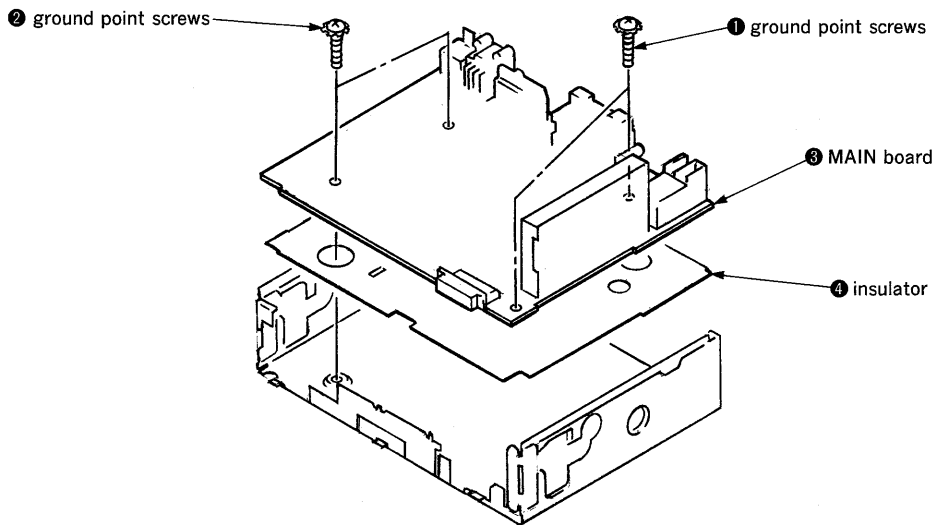


2-5. FRONT BACK PANEL

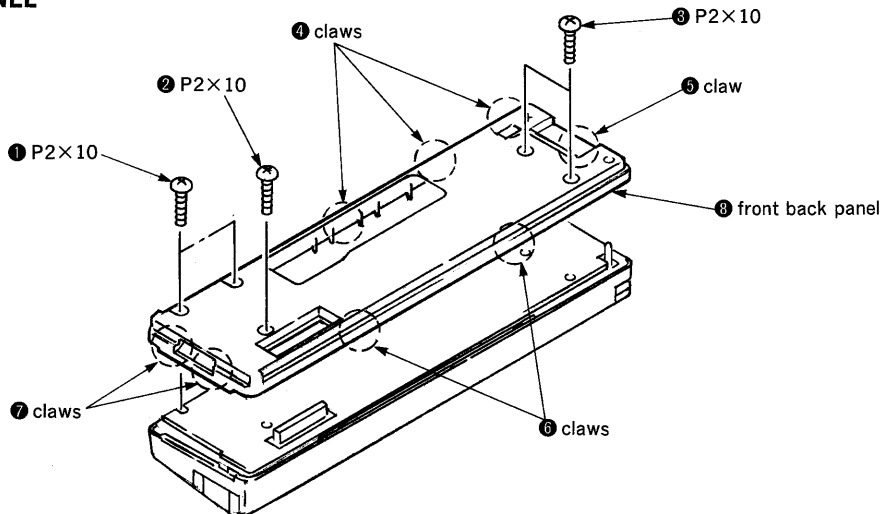


SECTION 3 ASSEMBLY OF MECHANISM DECK

Note: Follow the assembly procedure in the numerical order given.


3-1. INSTALLING THE LOADING GEARS

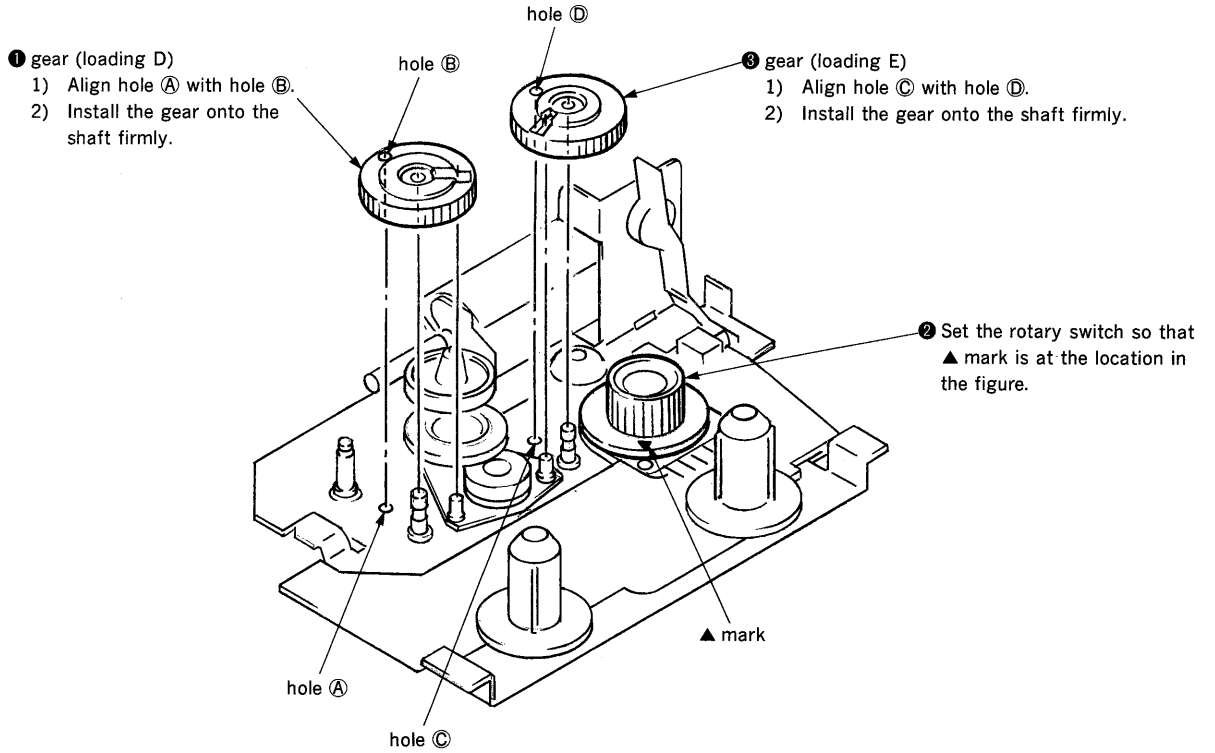

3-2. INSTALLING THE REEL BRACKET

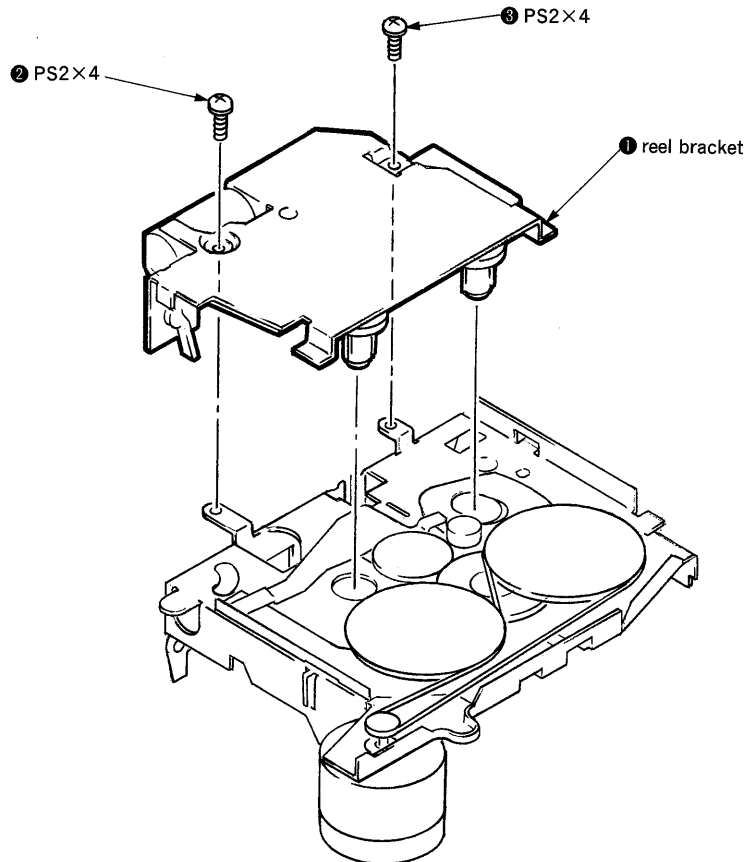

3-3. INSTALLING THE MODE LEVER AND PINCH LEVERS

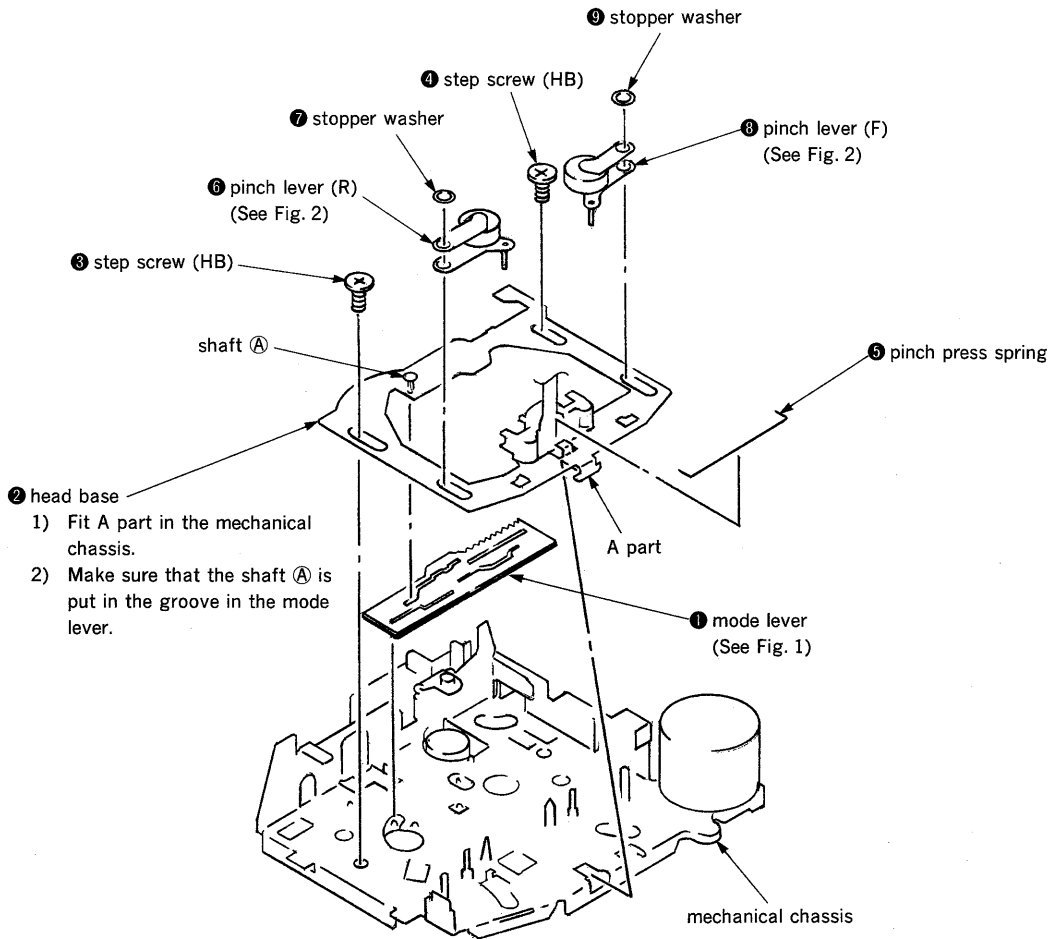

- 1) Align ● mark on the rotary switch with hole on the mode lever.
- 2) Make sure that the two shafts and three projections are located as shown below.

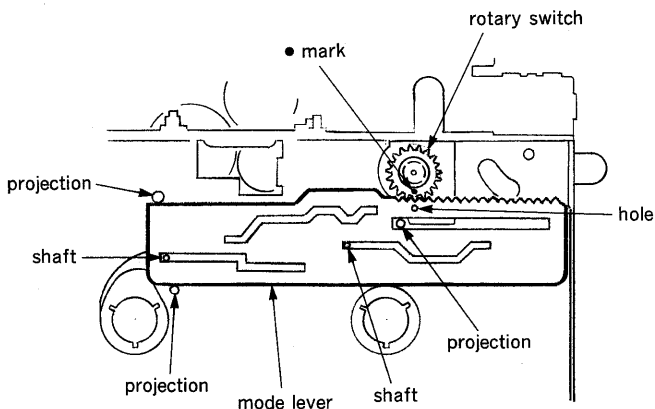


Fig. 1

- 1) Put the shafts of the pinch levers in the pinch press spring on its head side.


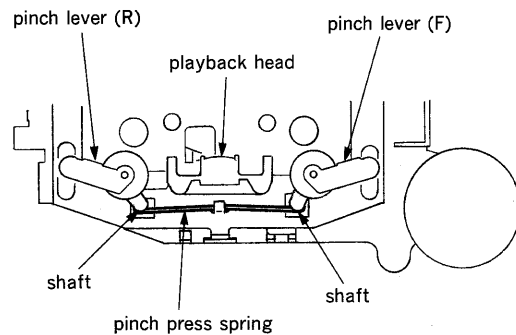


Fig. 2

3-4. INSTALLING THE CASSETTE HOUSING

③ housing hanger

- 1) Fit three projections in holes on the mechanical chassis.
- 2) Bend C part in the direction of the arrow and fasten to prevent dislocation from the chassis.

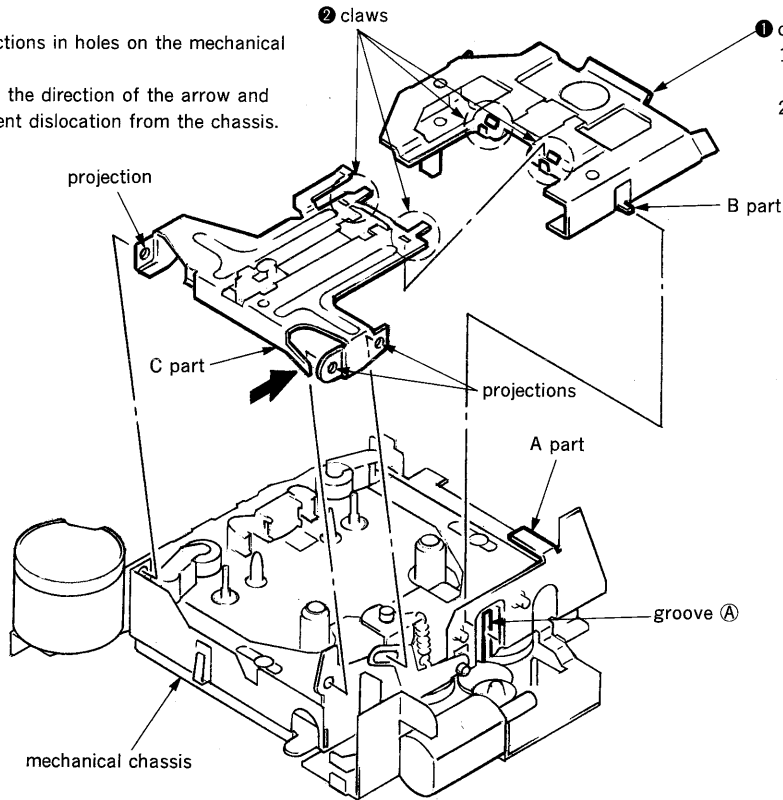


① cassette housing

- 1) Put the cassette housing under A part.
- 2) Fit B part in groove A.

3-5. INSTALLING THE LOADING LEVER

① suction arm

- 1) Align with axis A and install the arm onto the claw.
- 2) With the claw in the center, rotate the arm so as to be directed along axis B, then fit the arm on the projection.

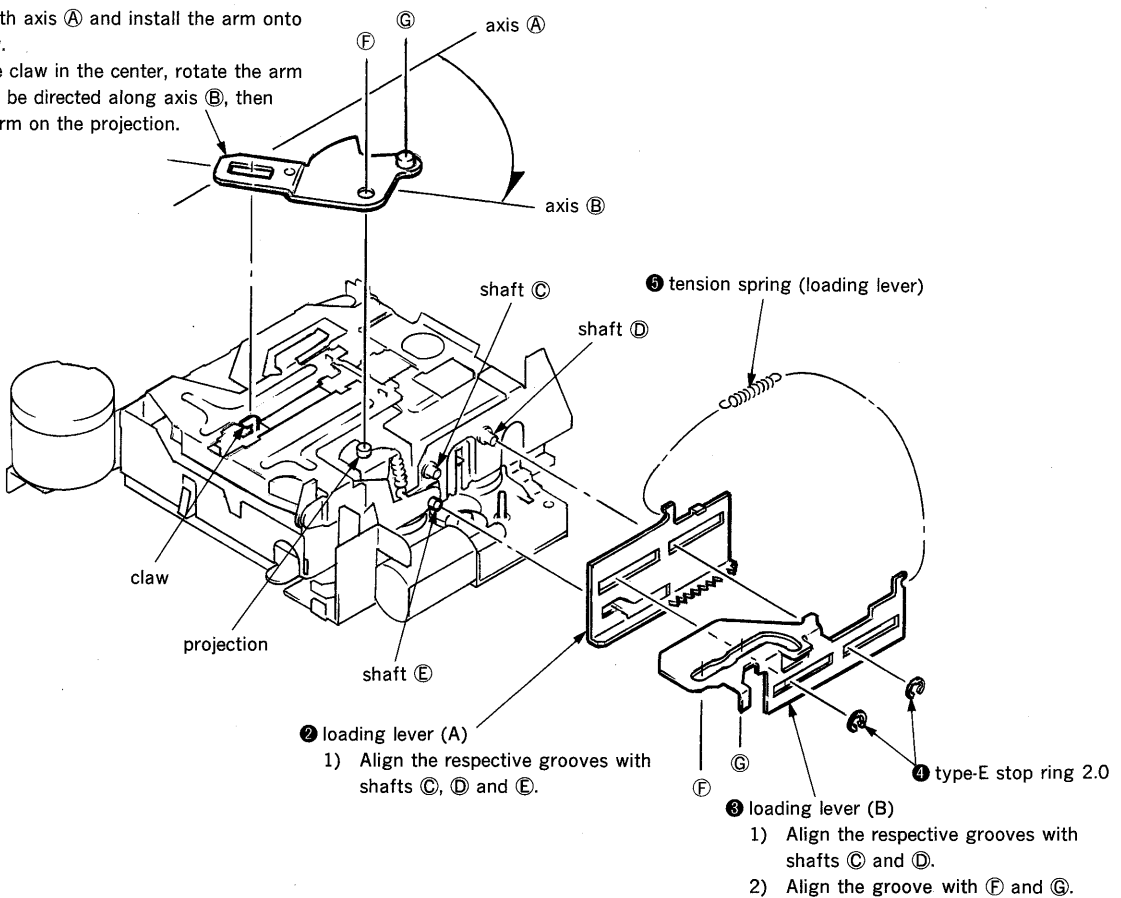


② loading lever (A)

- 1) Align the respective grooves with shafts C, D and E.


③ loading lever (B)

- 1) Align the respective grooves with shafts C and D.
- 2) Align the groove with F and G.

3-6. POSITIONING THE LOADING LEVERS

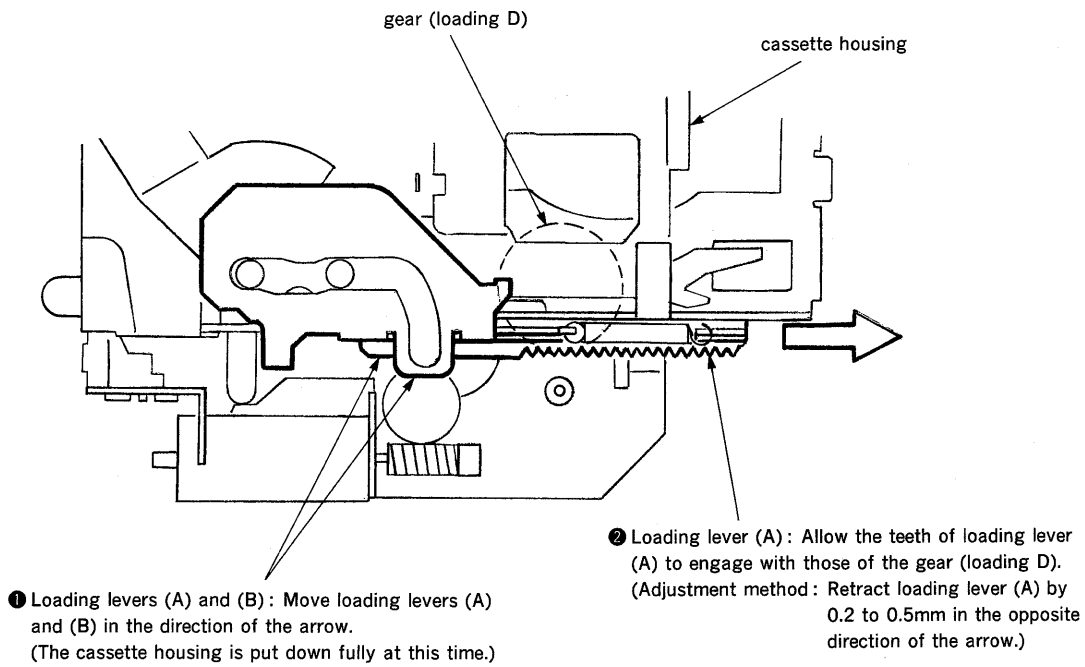

3-7. INSTALLING THE GEAR (LOADING F)

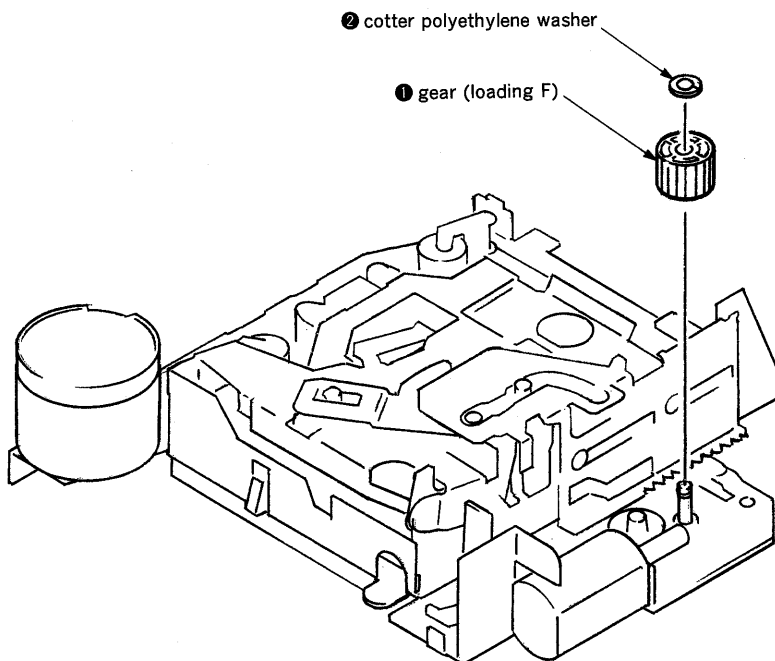

SECTION 4 MECHANICAL ADJUSTMENTS

PRECAUTION

1. Wipe the following components with an absorbent cotton cloth moistened with alcohol before adjustment :

PB head	Pinch roller
Idler	Rubber belt
Capstan	
2. Demagnetize the PB head using a head demagnetizer.
3. Be careful not to use a magnetized screwdriver.
4. After the adjustment is completed, lock the adjustment parts using screws.
5. Unless otherwise specified, make adjustments at the specified voltage (14.4V).

Torque Measurement

Mode	Torque Meter	Meter Reading
FWD	CQ-102C	30–65g·cm (0.42–0.90 oz·inch)
FWD Back Tension		0.5–4.5g·cm (0.01–0.06 oz·inch)
REV	CQ-102RC	30–65g·cm (0.42–0.90 oz·inch)
REV Back Tension		0.5–4.5g·cm (0.01–0.06 oz·inch)
FF, REW	CQ-201B	60–200g·cm (0.83–2.78 oz·inch)

Tape Tension Measurement

Mode	Tension Meter	Meter Reading
FWD	CQ-403A	more than 90g (more than 3.18 oz)
REV	CQ-403R	

SECTION 5 ELECTRICAL ADJUSTMENTS

TEST MODE

This set have the test mode function. In the test mode, FM Auto Scan/Stop Level and MW Auto Scan/Stop Level adjustments can be performed easier than it in ordinary procedure.

<Set the Test Mode>

1. Set the "OFF" mode.
2. Push the preset **[4]** button.
3. Push the preset **[5]** button.
4. Press the preset **[1]** button for two seconds.
5. Then the display indicates all lights, the test mode is set.

<Release the Test mode>

1. Push the "OFF" button.

See the adjustment location from on page 25 for the adjustment.


DECK SECTION

0dB=0.775V

Tape Speed Adjustment

Procedure :

1. Put the set into the FWD PB mode.

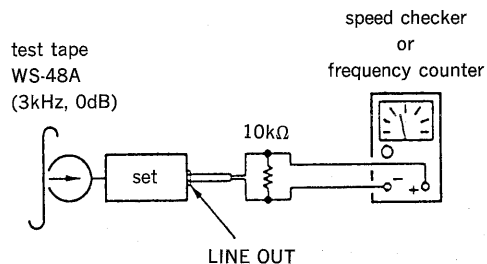

Specification : Constant speed

Speed checker	Frequency counter
–1.5 to +2.5%	2,955 to 3,075Hz

Adjustment Location : See page 25.

DOLBY Level Adjustment

Setting :


Preset **[7]** (DOLBY) button : OFF

SEL (BAS) button : Center

SEL (TRE) button : Center

SEL (BAL) button : Center

SEL (VOL) button : Maximum

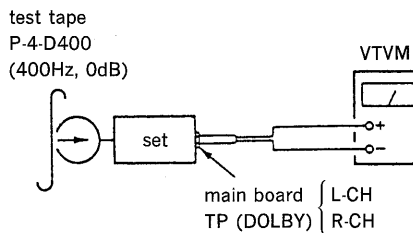

Procedure :

1. Put the set into the FWD PB mode.
2. Adjust RV101 (L-CH) and RV201 (R-CH) so that VTVM reading is -6 ± 0.5 dB (0.37 to 0.41V).


Adjustment Location : See page 25.

TUNER SECTION**OdB=1 μ V****Cautions during repair**

When the front end is defective, replace it by a new one because its internal block is difficult to repair.

FM Auto Scan/Stop Level Adjustment**Setting :**

TUNER button : FM

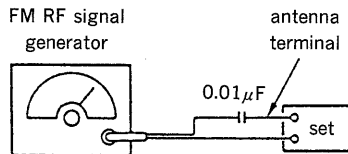


Carrier frequency : 98.0MHz
 Output level : 22dB (12.6 μ V)
 Mode : mono
 Modulation : 1kHz, 75kHz deviation

Procedure :


1. Set to the test mode. (See page 21.)
2. Push the **TUNER** button and set to FM.

Display



3. Push the preset **[3]** button.


Display




4. Adjust with the volume RV3 on TU1 so that the "FM" indication turns to "FM0" indication on the display window.

But, in case of already indicated "FM0", turn the RV3 so that put out light "0" indication and adjustment.

Display

**Adjustment Location :** See page 25.**MW Auto Scan/Stop Level Adjustment****Setting :**

TUNER button : MW

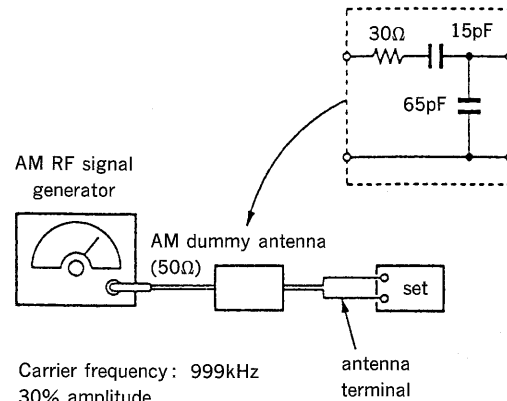


Carrier frequency : 999kHz
 30% amplitude
 modulation by
 400Hz signal
 Output level : 33dB (44.7 μ V)

Procedure :


1. Set to the test mode. (See page 21.)
2. Push the **TUNER** button and set to MW.

Display



3. Push the preset **[3]** button.


Display



4. Adjust with the volume RV1 on TU1 so that the "MW" indication turns to "MW0" indication on the display window.

But, in case of already indicated "MW0", turn the RV1 so that put out light "0" indication and adjustment.


Display

**Adjustment Location :** See page 25.

High Cut Control Effect Adjustment

Setting :

TUNER button: FM

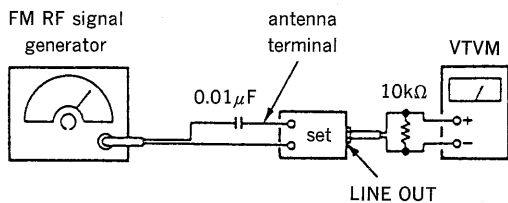

Carrier frequency: 98.0MHz
 Output level : 60dB (1mV)
 Mode : mono
 Modulation : 10kHz, 40kHz deviation

Procedure :


1. Tune the 98.0MHz.
2. The then output level is supposing that (A) dB.
3. Adjust with the volume RV2 on TU1 so that the output level is (A)–5dB then signal generator input set to 20dB.

Adjustment Location : See page 25.

FM Noise Focus Adjustment

Setting :

TUNER button: FM

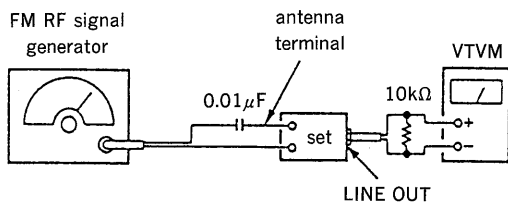

Carrier frequency: 98.0MHz
 Output level : 60dB (1mV)
 Mode : mono
 Modulation : 1kHz, 75kHz deviation

Procedure :


1. Tune the 98.0MHz.
2. The then output level is supposing that (B) dB.
3. Adjust with the volume RV5 on TU1 so that the output level is (B)–30dB then signal generator input set to –20dB.

Adjustment Location : See page 25.

FM Stereo Separation Adjustment

Setting :

TUNER button: FM

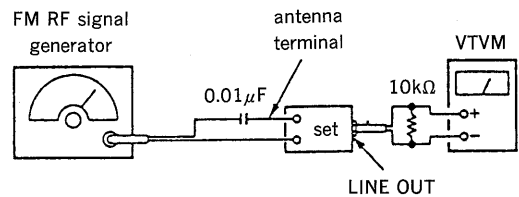

Carrier frequency: 98.0MHz
 Output level : 70dB (3.2mV)
 Mode : stereo
 Modulation : main: 1kHz, 20kHz deviation (26%)
 sub: 1kHz, 20kHz deviation (26%)
 19kHz pilot: 7.5kHz deviation (10%)

Procedure :

FM stereo signal generator output channel	VTVM connection	VTVM reading (dB)
L-CH	L-CH	Ⓐ
R-CH	L-CH	Ⓑ [Ⓐ] Adjust RV4 on TU1 for minimum reading.
R-CH	R-CH	Ⓒ
L-CH	R-CH	Ⓓ [Ⓒ] Adjust RV4 on TU1 for minimum reading.

L-CH Stereo separation: Ⓐ–Ⓑ

R-CH Stereo separation: Ⓒ–Ⓓ

The separations of both channels should be equal.


Specification : Separation more than 30dB

Adjustment Location : See page 25.

RDS S-Meter Adjustment

Setting :

TUNER button : FM

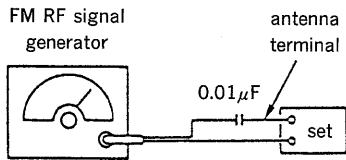


Carrier frequency : 98.0MHz
Output level : 35dB (56.2μV)
Mode : mono
Modulation : no modulation

Procedure :


1. Set to the test mode. (See page 21.)
2. Push the **TUNER** button and set to FM.

Display



3. Push the preset **10** button.
4. Adjust RV1 so that the display indication is "11.80".


Display




Specification : Display indication : 11.60 to 12.00

Adjustment Location : See page 25.

Adjustment Location :

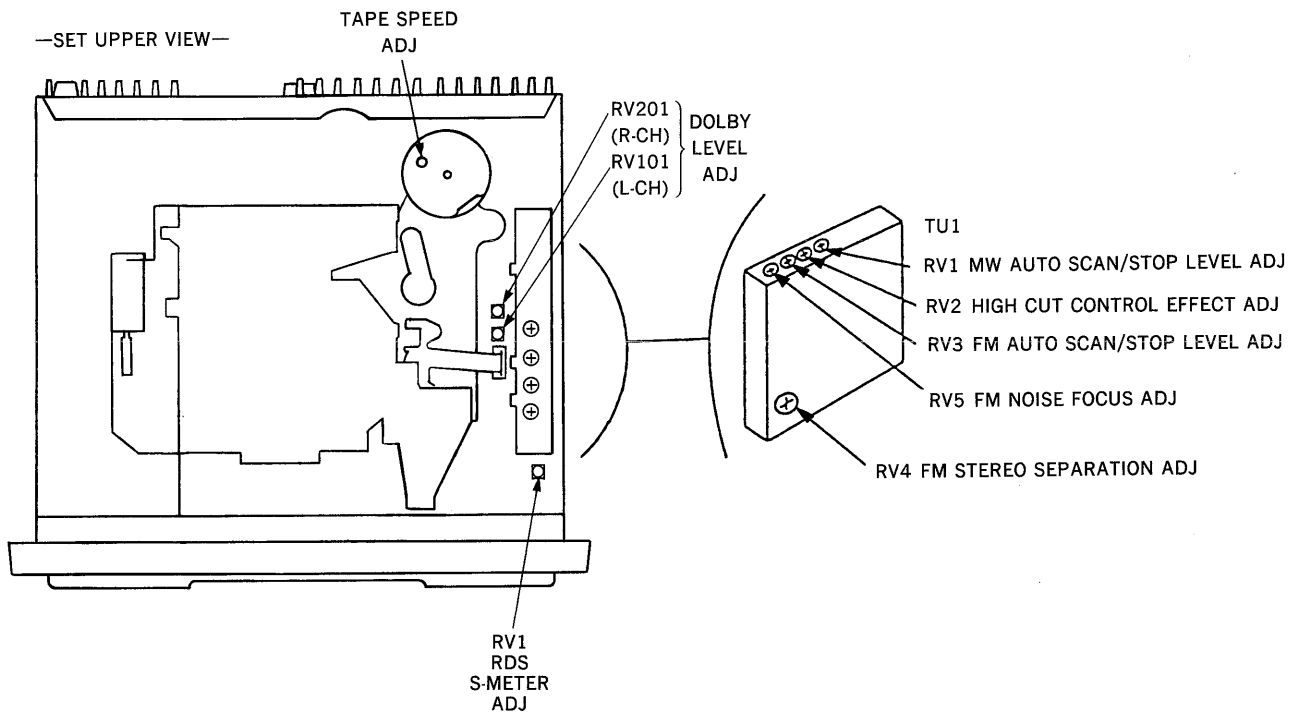

—main board (side B)—

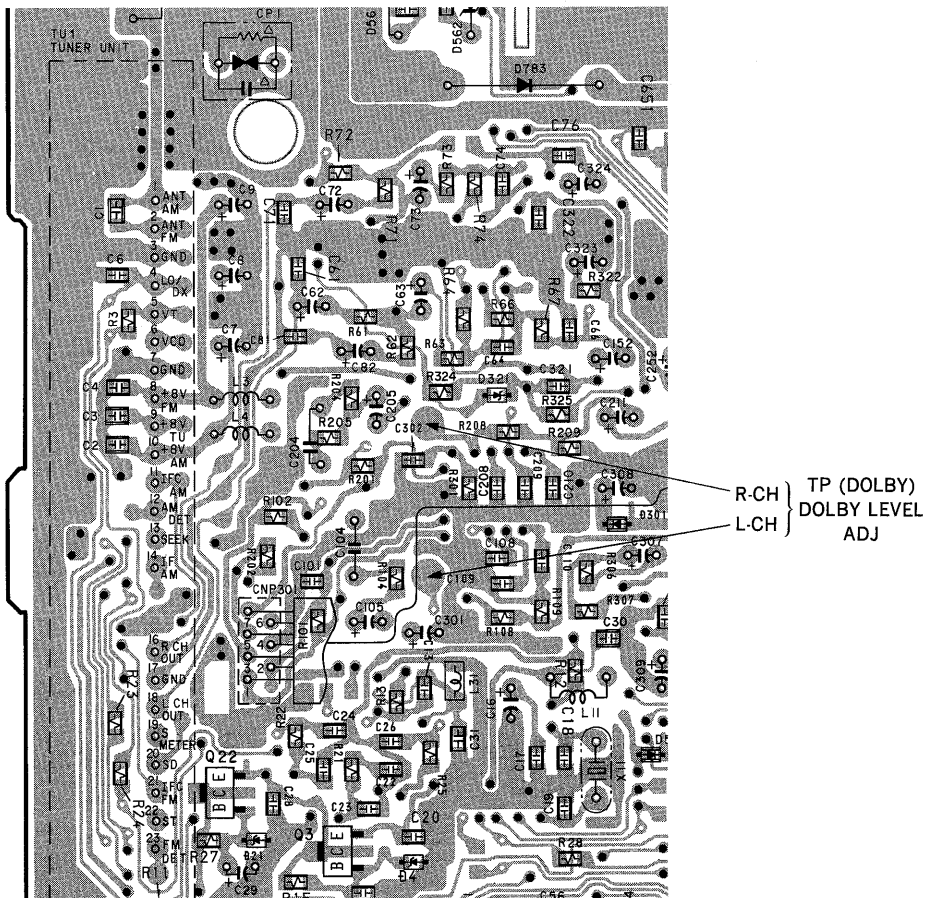

SECTION 6 DIAGRAMS

6-1. IC PIN DESCRIPTIONS

• IC501 μ PD78058GC-060-3B9 (System Control)

Pin No.	Pin Name	I/O	Pin Description
1	DSTSEL 1	I	Destination the first setting A/D input. This set is fixed at "L".
2	F-SEL	I	Slave and function select the first setting
3	SD IN	I	Station detector detect input. This set is not used.
4	AVSS	—	GND
5	ST	I/O	Use a thing stereo input and monaural output. This set is not used.
6	PLLCE	O	PLL serial chip enable output. This set is not used.
7	AVREF	—	D/A conversion reference power supply voltage.
8	PLLSI	I	PLL serial data input. This set is not used.
9	PLLSO	O	PLL serial data output. This set is not used.
10	PLLCKO	O	PLL serial clock output. This set is not used.
11	NC	—	Not used. Connect to GND.
12	LCDSO	O	LCD serial data output
13	LCDCO	O	LCD serial clock output
14	LCDCE	O	LCD chip enable output
15	$\overline{\text{LCDINH}}$	O	LCD blank display control output
16	UNISI	I	Serial data input
17	UNISO	O	Serial data output
18	UNICKI	I	Serial clock input
19	UNICKO	O	Serial clock output
20	BUSON	O	BUS ON control output
21	SYRST	O	System reset control output
22	PW ON	O	System power control output
23	TUNON	O	Tuner power control output
24	FM ON	O	FM power control output
25	AMPON	O	Power amplifier power control output
26	ILLON	O	Illumination power control output
27	DOLON	I/O	DOLBY control input/output
28	AMSIN	I	At AMS, music with/without detect input
29	REL T	I	Reel table forward rotation detect input
30	REL S	I	Reel table reverse rotation detect input
31, 32	POS0, 1	I	Position signal detect input
33	GND	—	GND
34, 35	POS2, 3	I	Position signal detect input
36	LM LOD	O	Loading motor control output (Loading direction : forward)
37	LM EJ	O	Loading motor control output (Eject direction : reverse)
38	TAPEON	O	Tape power control output
39	CM ON	O	Capstan motor control output
40	MTLON	I/O	Metal control input/output
41	$\overline{\text{MTLIN}}$	I	Auto metal detect input
42	DOLBC	I/O	DOLBY B/C select control input/output
43	TAPMUT	O	Tape mute control output
44	N/ROUT	O	Forward/reverse detect output
45	DIMMER	I/O	Dimmer control input/output
46	BEEP	O	Buzzer control output


Pin No.	Pin Name	I/O	Pin Description
47	COLOR	I/O	Illumination color select control input/output
48	AD ON	O	A/D select power control output
49	TESTIN	I	Test mode setting input
50	RC IN1	I	Rotary commander input
51	MUT	O	System mute control output
52	VOLCE	O	Electron volume serial chip enable output
53	SUBCE	O	Sub volume serial chip enable output
54	VOLCKO	O	Electron volume serial clock output
55	SUBCKO	O	Sub volume serial clock output
56	VOLSO	O	Electron volume serial data output
57	MTLSEL	I	Auto metal function with/without the first setting
58	EQ SEL	I	Equalizer connection with/wituout the first setting
59	RAMBU	I	RAM reset detect input
60	RESET	—	Reset input
61	SIRCS	I	Remote commander input
62	BU IN	I	Back up power detect input
63	KEYACK	I	Key input acknowledge
64	ACCIN	I	Accessory power detect input
65	PW SEL	I	Power select the first setting
66	TELMUT	I	Telephone mute detect input
67	NOSESW	I	Front panel with/without detect input
68	VDD	—	Microcomputer power voltage supply
69	X OUT	—	Main ceramic oscillator output (5MHz)
70	X IN	—	Main ceramic oscillator input (5MHz)
71	GND	—	GND
72	XT OUT	—	Sub crystal oscillator output (32.67kHz)
73	XT IN	—	Sub crystal oscillator input (32.67kHz)
74	AVDD	—	A/D conversion power supply voltage
75	AVREF	—	A/D conversion reference power supply voltage
76	KEYIN 0	I	Key input
77	KEYIN 1	I	
78	RC IN 0	I	Rotary commander input
79	VSM	I	FM/AM common signal meter A/D conversion input. This set is not used.
80	DSTSEL 0	I	Destination the first setting A/D input. This set is fixed at "L".

● IC551 MN1883220SZG (Tuner Control)

Pin No.	Pin Name	I/O	Pin Description
1-6	—	—	Not used. (open)
7	VDD	—	Power supply terminal (+5V)
8	X1	I	Clock input (8MHz)
9	X2	O	Clock output (8MHz)
10	GND	—	GND terminal
11	XI	I	Not used. (Connect to GND.)
12	—	—	No connection
13	XO	O	Not used. (Connect to GND.)
14	RESET	I	Reset signal input
15	RDS-CLK	I	RDS CLK signal input from the RDS decoder (IC51).
16	BU-IN	I	Backup power supply detection input. "H": Backup ON
17	BUSON	I	BUS interface ON/OFF selection input from the system control (IC501).
18-29	—	—	Not used. (open)
30	RDS-DATA	I	RDS DATA signal input from the RDS decoder (IC51).
31	—	—	Not used. (Connect to GND.)
32-35	—	—	Not used. (open)
36	—	—	Not used. (Connect to GND.)
37	—	—	Not used. (Fixed at "L".)
38	PLL-DI	I	Data input from the tuner PLL (IC11).
39	PLL-DO	O	Data output to the tuner PLL (IC11).
40	PLL-CLK	O	Clock output to the tuner PLL (IC11).
41	CE	O	Chip enable output to the tuner PLL (IC11).
42	RQ	O	BUS interface request output. Terminal for requesting communication Requests at "H".
43	LINK-OFF	O	BUS interface link ON/OFF selection output. "H": LINK OFF
44	SCK	I	Serial clock input from the system control (IC501).
45	SI	I	Data input from the BUS unit (IC571).
46	SO	O	Data output to the BUS unit (IC571).
47	VDD	—	Power supply terminal (+5V)
48	AVDD	—	Power supply terminal (+5V)
49	VREF	I	Reference voltage input terminal of A/D conversion.
50, 51	—	—	Not used. (Connect to GND.)
52	SRAM-RST	—	Not used. (Fixed at "L".)
53	MUTE-SEL	—	Not used. (Connect to GND.)
54	DIST-SEL 1	I	Model selection input terminal. (Fixed at "L": AEP, UK model, "H": German model.)
55	DIST-SEL 0	I	Model selection input terminal. (Fixed at "L".)
56	AM-S. METER	I	AM S meter voltage detection input
57	FM-S. METER	I	FM S meter voltage detection input. Uses the A/D conversion functions during BTM and RDS.
58-60	—	—	Not used. (Connect to GND.)
61	MODE 2	O	Tuner ON/OFF selection output to the power regulator (IC601).
62	—	—	Not used. (open)
63	RECEIVE	I	Receive input. Input level "L" when change the frequency.

Pin No.	Pin Name	I/O	Pin Description
64	—	—	Not used. (Fixed at “L”.)
65	MODE 1	O	FM ON/OFF selection output to the power regulator (IC601).
66	TUNER-MUTE	O	Muting control signal output
67	AF-SEEK	O	AF seek control output
68	—	—	Not used. (Fixed at “L”.)
69	—	O	Not used. (open)
70	ST-IN-MONO	I	Stereo indicator control input
71	SD-IN	I	SD input
72—80	—	—	Not used. (open)

6-2. BLOCK DIAGRAM





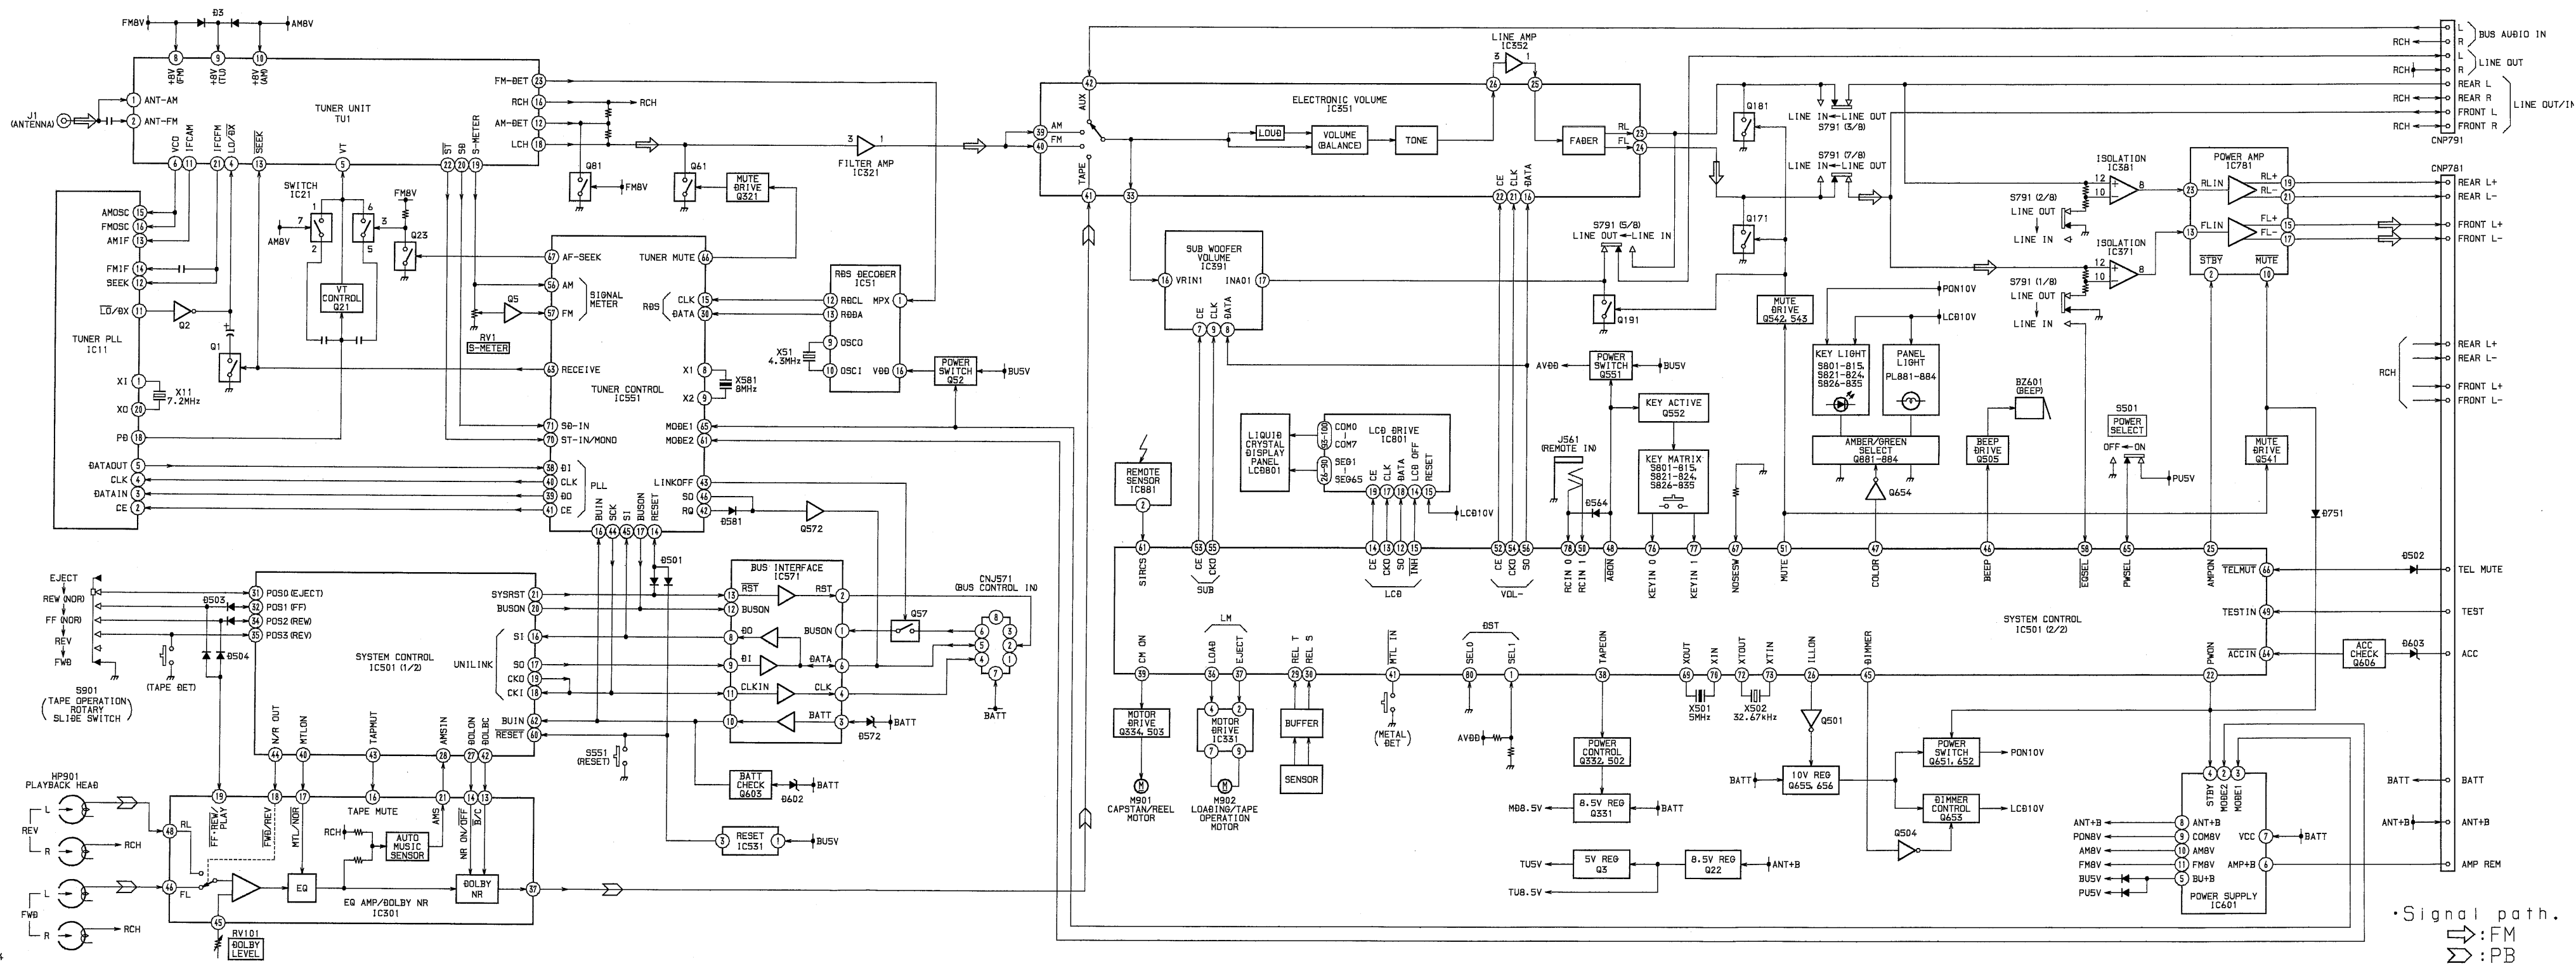


6-3. PRINTED WIRING BOARDS—MAIN SECTION— •Refer to page 45 for Semiconductor Lead Layouts.


• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D3	F-10	IC371	C-3
D4	H-14	IC381	C-1
D21	H-13	IC391	F-4
D301	F-15	IC501	H-5
D321	E-14	IC531	I-1
D331	G-20	IC551	H-7
D332	G-21	IC571	F-1
D501	I-6	IC601	D-18
D502	G-4	IC781	B-18
D503	I-4		
D504	I-4	Q1	H-10
D543	F-20	Q2	G-9
D544	H-2	Q3	H-13
D551	H-3	Q5	I-10
D552	H-2	Q21	H-9
D553	J-7	Q22	H-13
D554	I-20	Q23	G-9
D555	J-15	Q52	H-8
D561	C-14	Q61	E-9
D562	C-14	Q71	E-9
D563	I-13	Q81	E-9
D564	C-9	Q171	E-2
D571	F-20	Q181	E-2
D572	F-20	Q191	F-3
D573	B-21	Q271	E-2
D574	B-20	Q281	E-2
D575	F-20	Q291	F-2
D581	G-15	Q321	E-8
D602	F-2	Q331	G-2
D603	D-5	Q332	G-21
D651	D-16	Q334	F-21
D652	I-14	Q501	H-4
D653	I-14	Q502	I-4
D654	I-14	Q503	I-5
D655	I-13	Q504	G-5
D656	I-13	Q505	I-5
D657	I-13	Q541	G-2
D751	E-19	Q542	G-2
D781	D-16	Q543	H-2
D782	D-16	Q551	J-6
D783	D-14	Q552	I-7
D991	B-18	Q571	F-2
		Q572	F-21
IC11	H-8	Q603	F-2
IC21	H-9	Q606	E-19
IC51	H-9	Q651	D-16
IC301	F-8	Q652	E-7
IC321	E-8	Q653	D-15
IC331	H-2	Q654	I-7
IC351	F-6	Q655	D-17
IC352	F-4	Q656	D-7


Note:
 ○ : parts extracted from the component side.
 ● : Through hole.
 [Pattern] : Pattern on the side which is seen.
 (The other layer's patterns are not indicated.)
 • Abbreviation
 G: German model

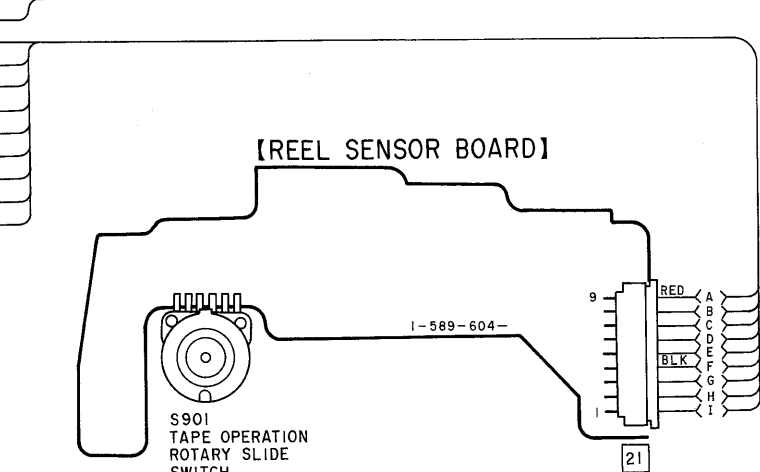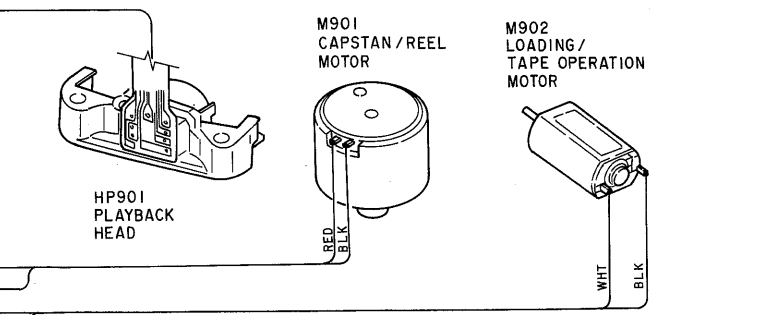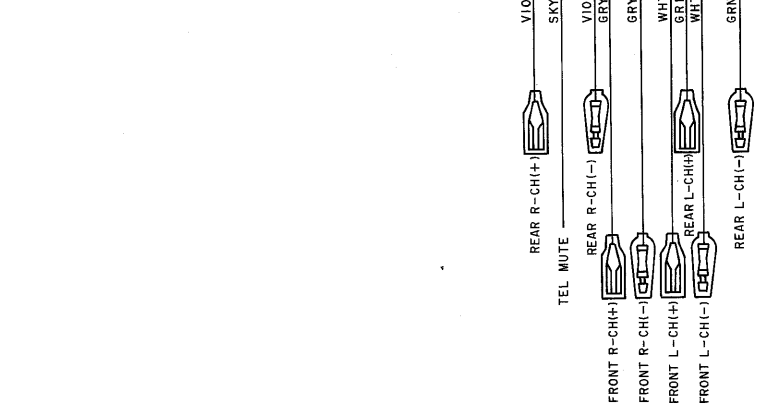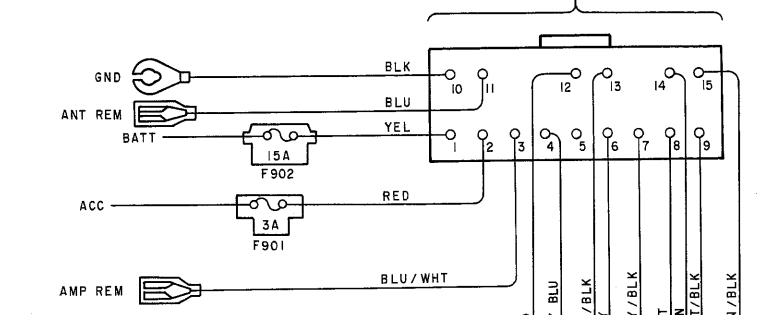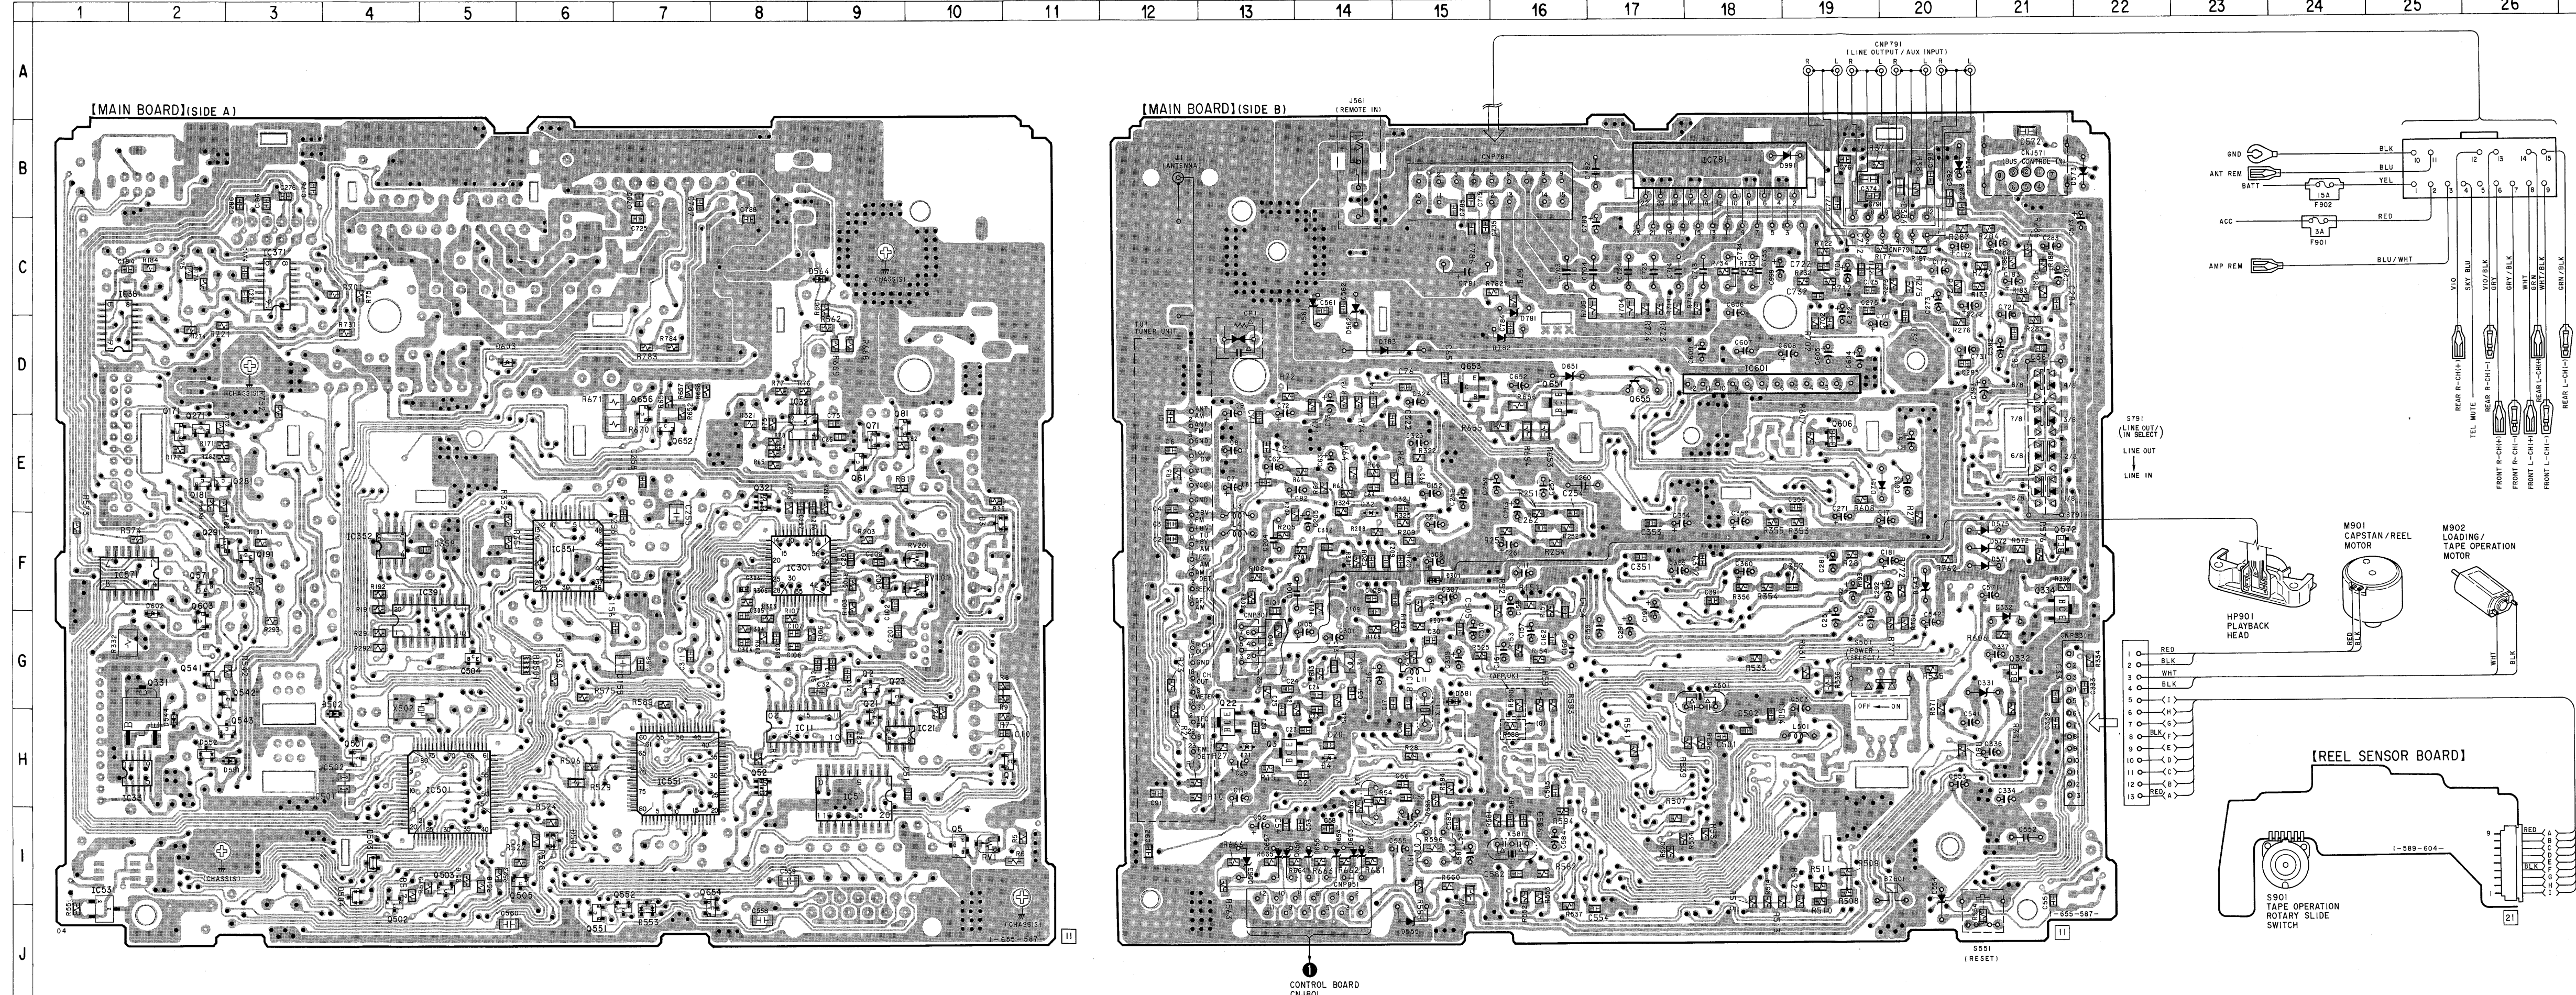


6-4. SCHEMATIC DIAGRAM—MAIN SECTION— Refer to page 46 for IC Block Diagrams.

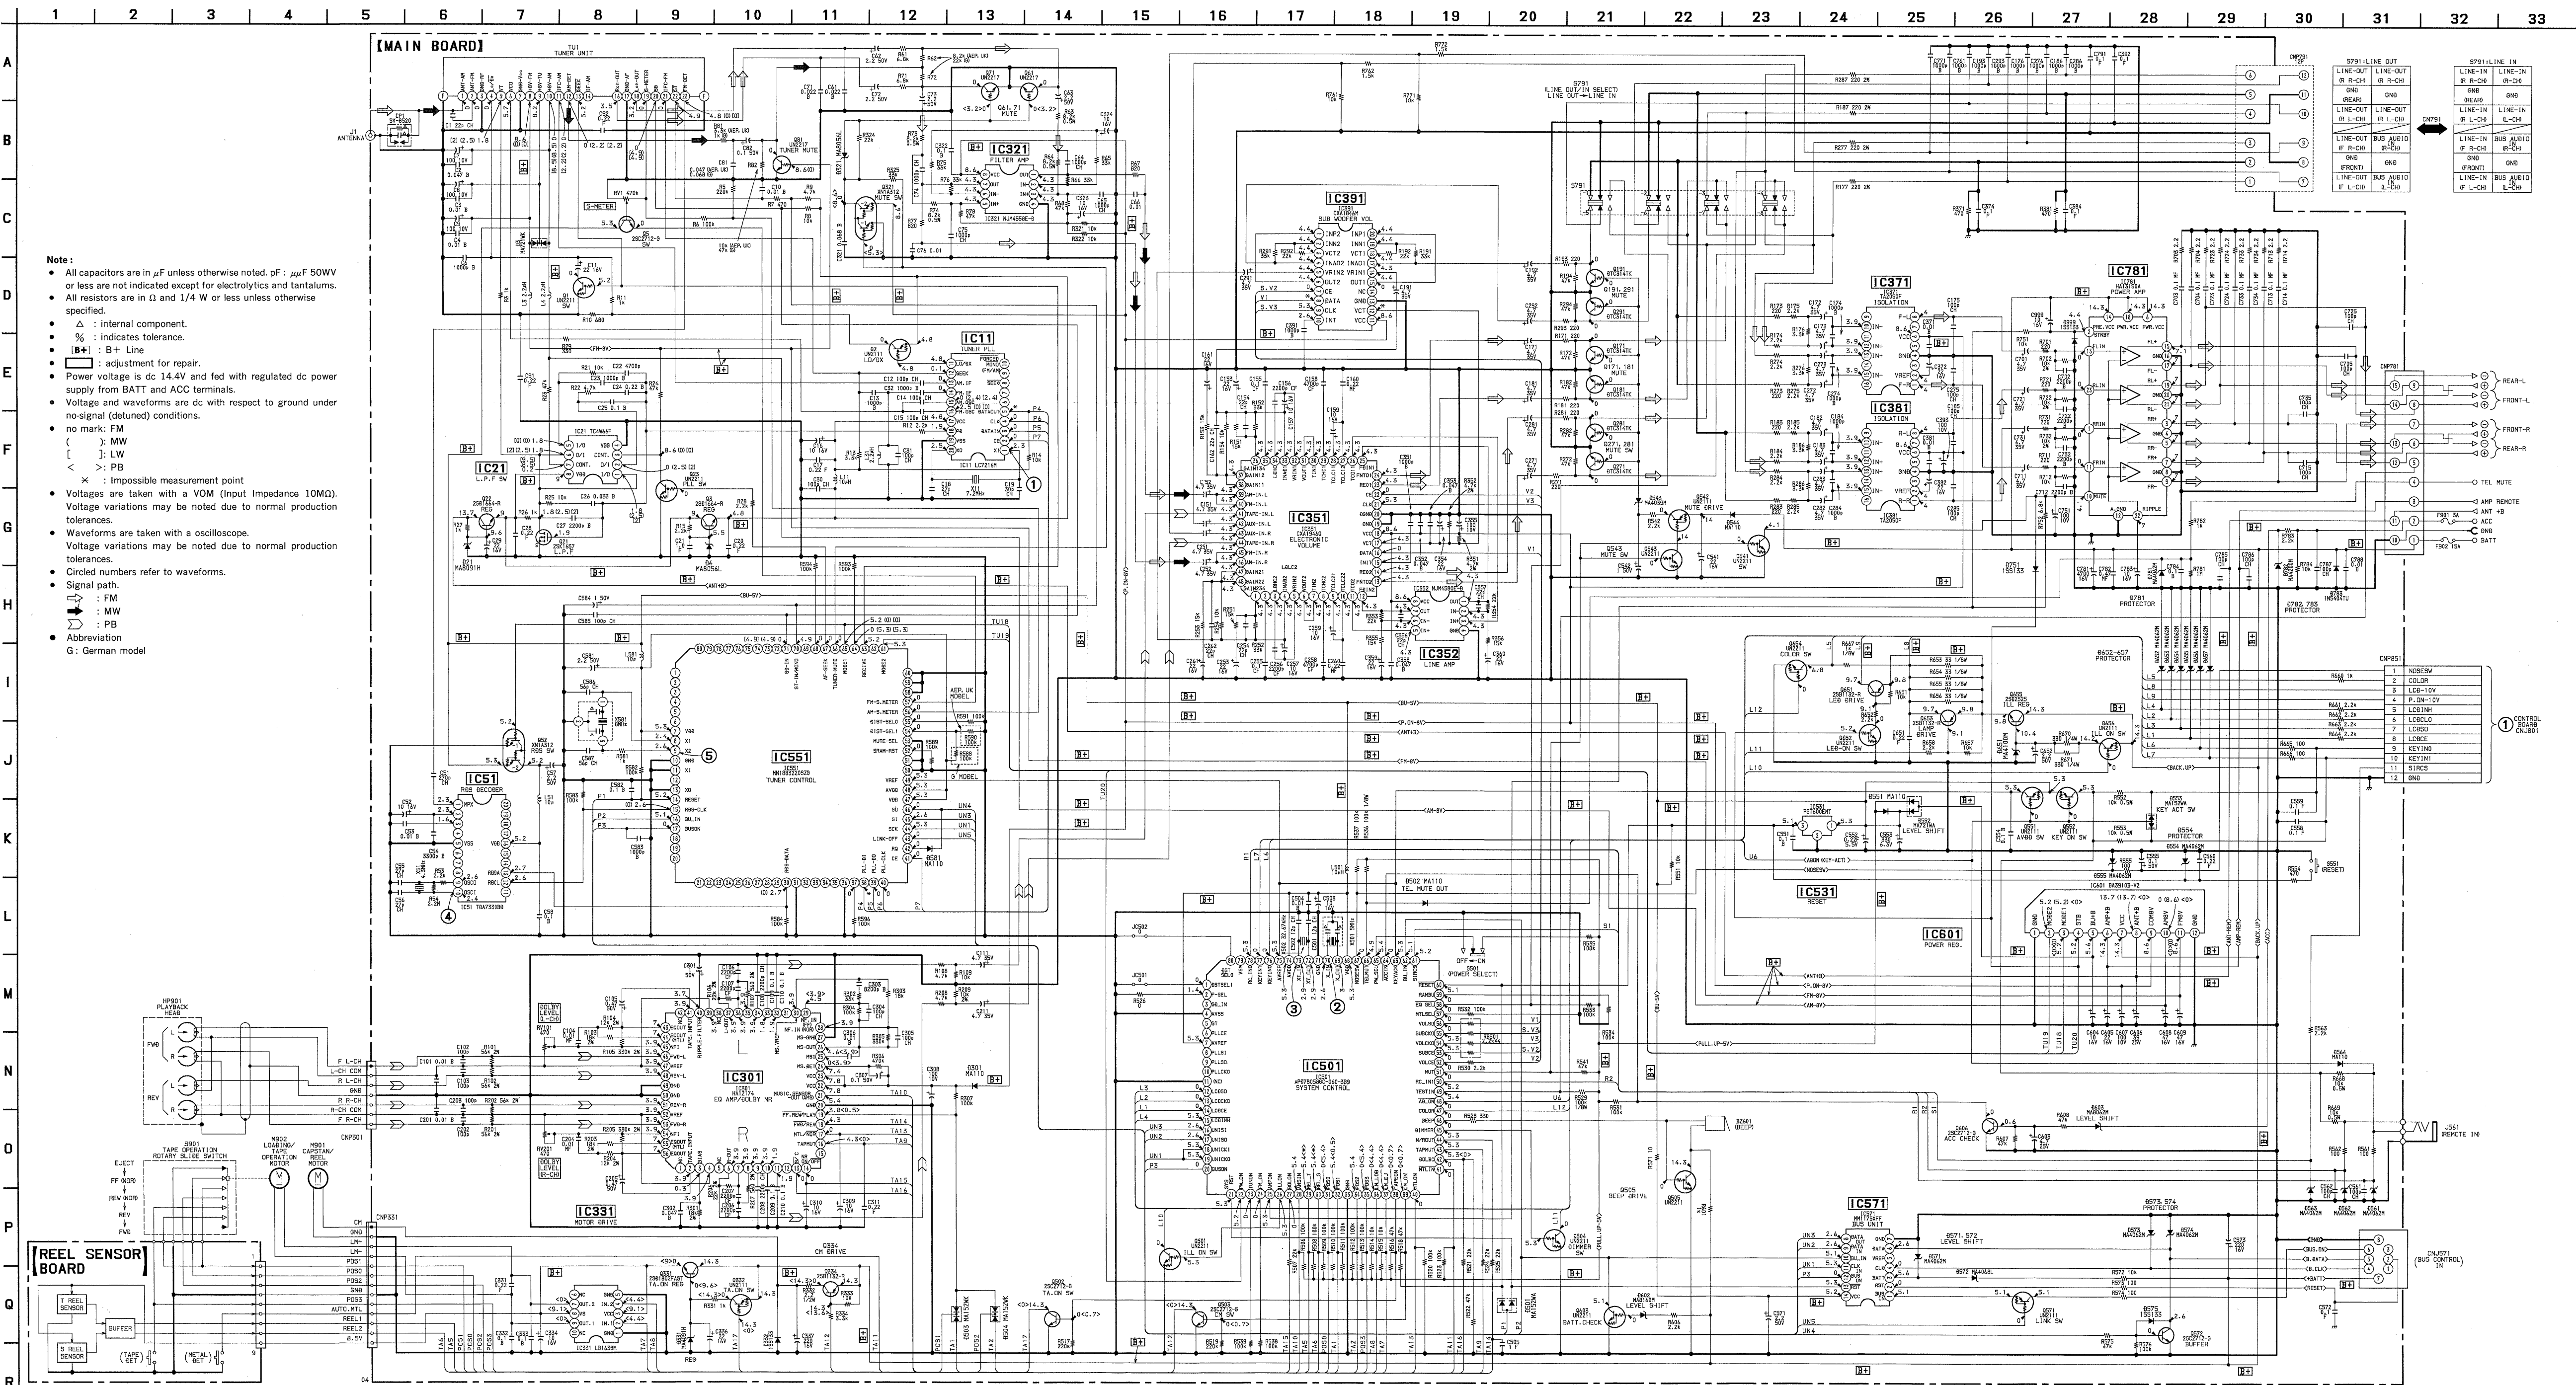

- Note:**
- All capacitors are in μF unless otherwise noted. pF: μF F 50WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and $1/4\text{ W}$ or less unless otherwise specified.
 - Δ : internal component.
 - %: indicates tolerance.
 - B+: B+ Line
 - []: adjustment for repair.
 - Power voltage is dc 14.4V and fed with regulated dc power supply from BATT and ACC terminals.
 - Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
 - no mark: FM
 - (): MW
 - []: LW
 - < >: PB
 - \times : impossible measurement point
 - Voltages are taken with a VOM (Input Impedance 10M Ω). Voltage variations may be noted due to normal production tolerances.
 - Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
 - Circled numbers refer to waveforms.
 - Signal path.
 - FM
 - MW
 - PB
 - Abbreviation
 - G: German model

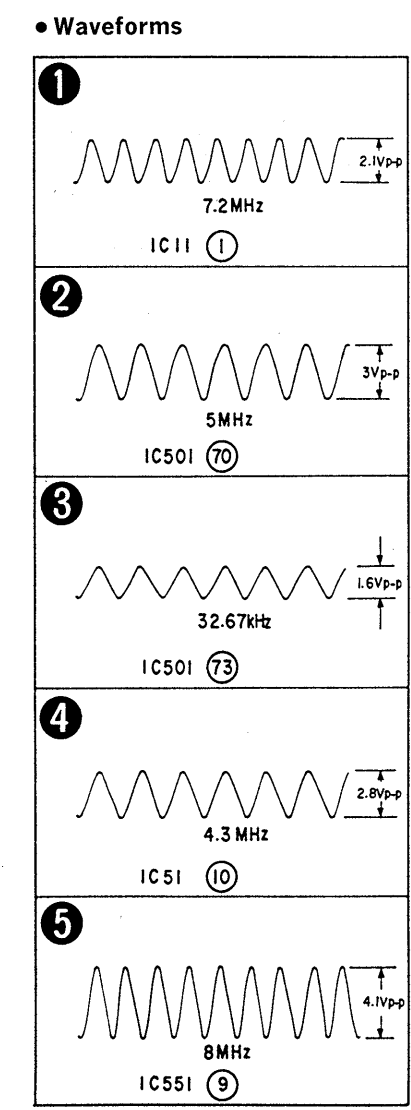


6-5. SCHEMATIC DIAGRAM—PANEL SECTION—

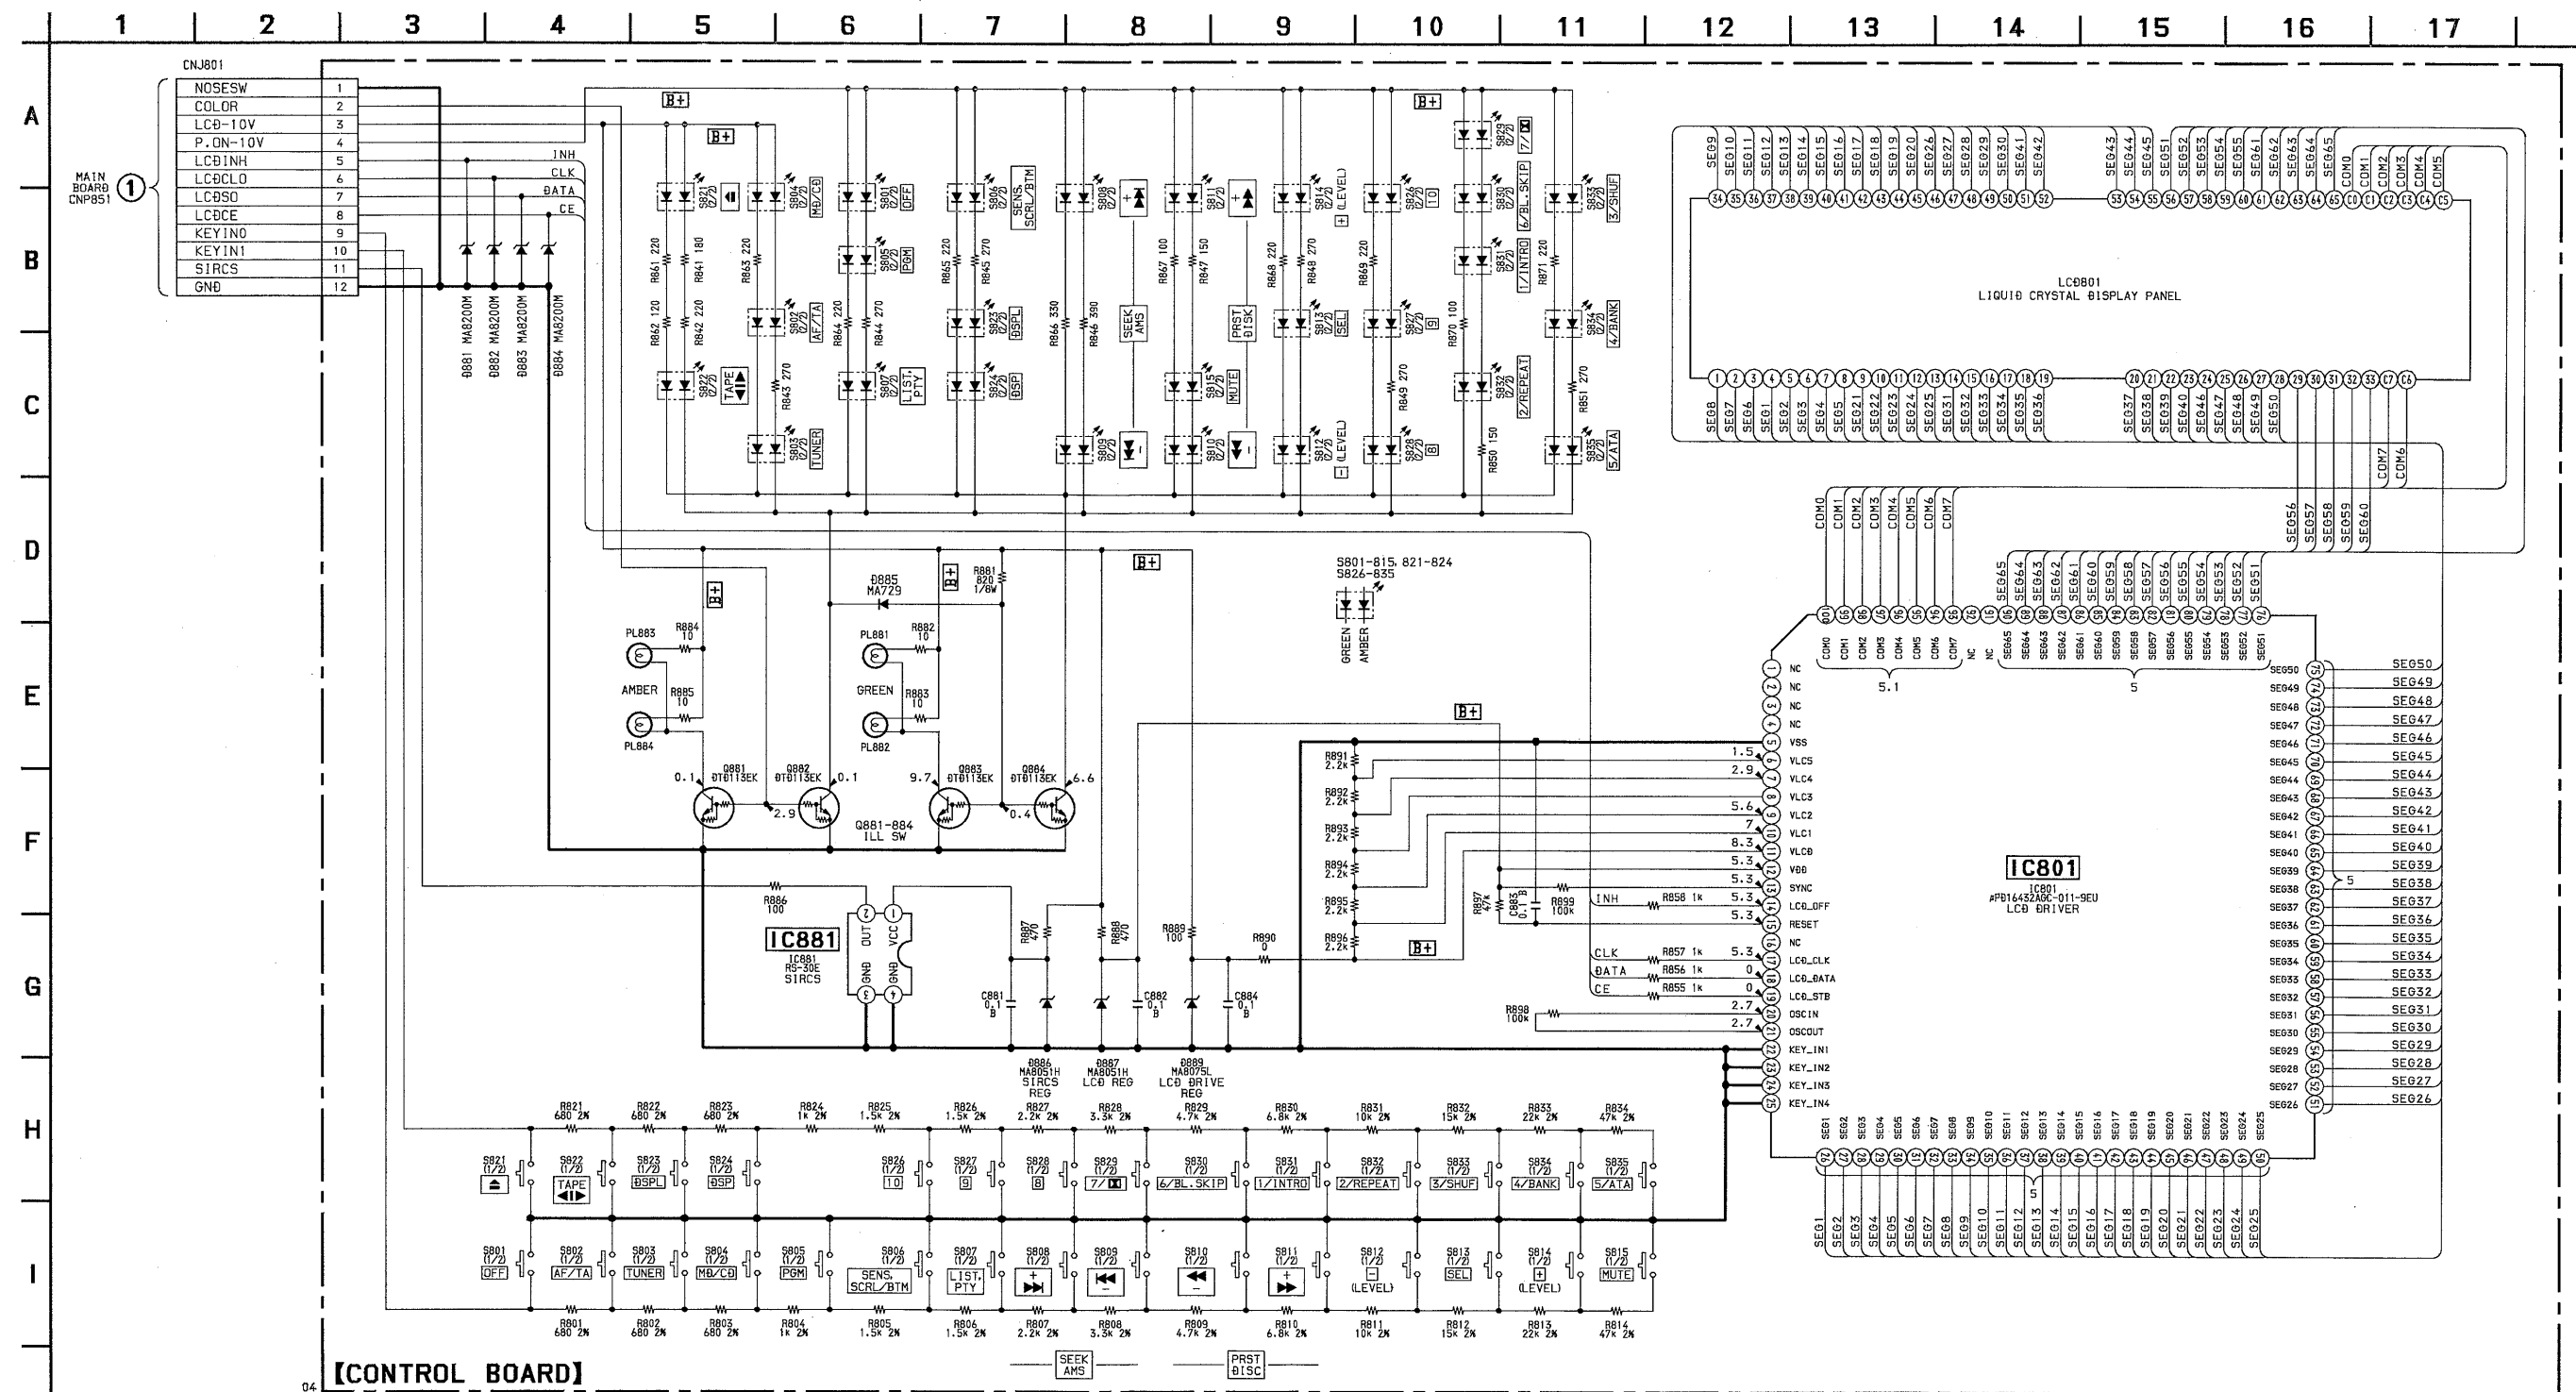

- Note:**
- All capacitors are in μF unless otherwise noted. pF : μF 50WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and 1/4 W or less unless otherwise specified.
 - % : indicates tolerance.
 - B+ : B+ Line
 - Power voltage is dc 14.4V and fed with regulated dc power supply from BATT and ACC terminals.
 - Voltage is dc with respect to ground under no-signal (detuned) conditions.
 - no mark: FM
 - Voltages are taken with a VOM (Input Impedance 10M Ω). Voltage variations may be noted due to normal production tolerances.

6-6. PRINTED WIRING BOARD—PANEL SECTION—

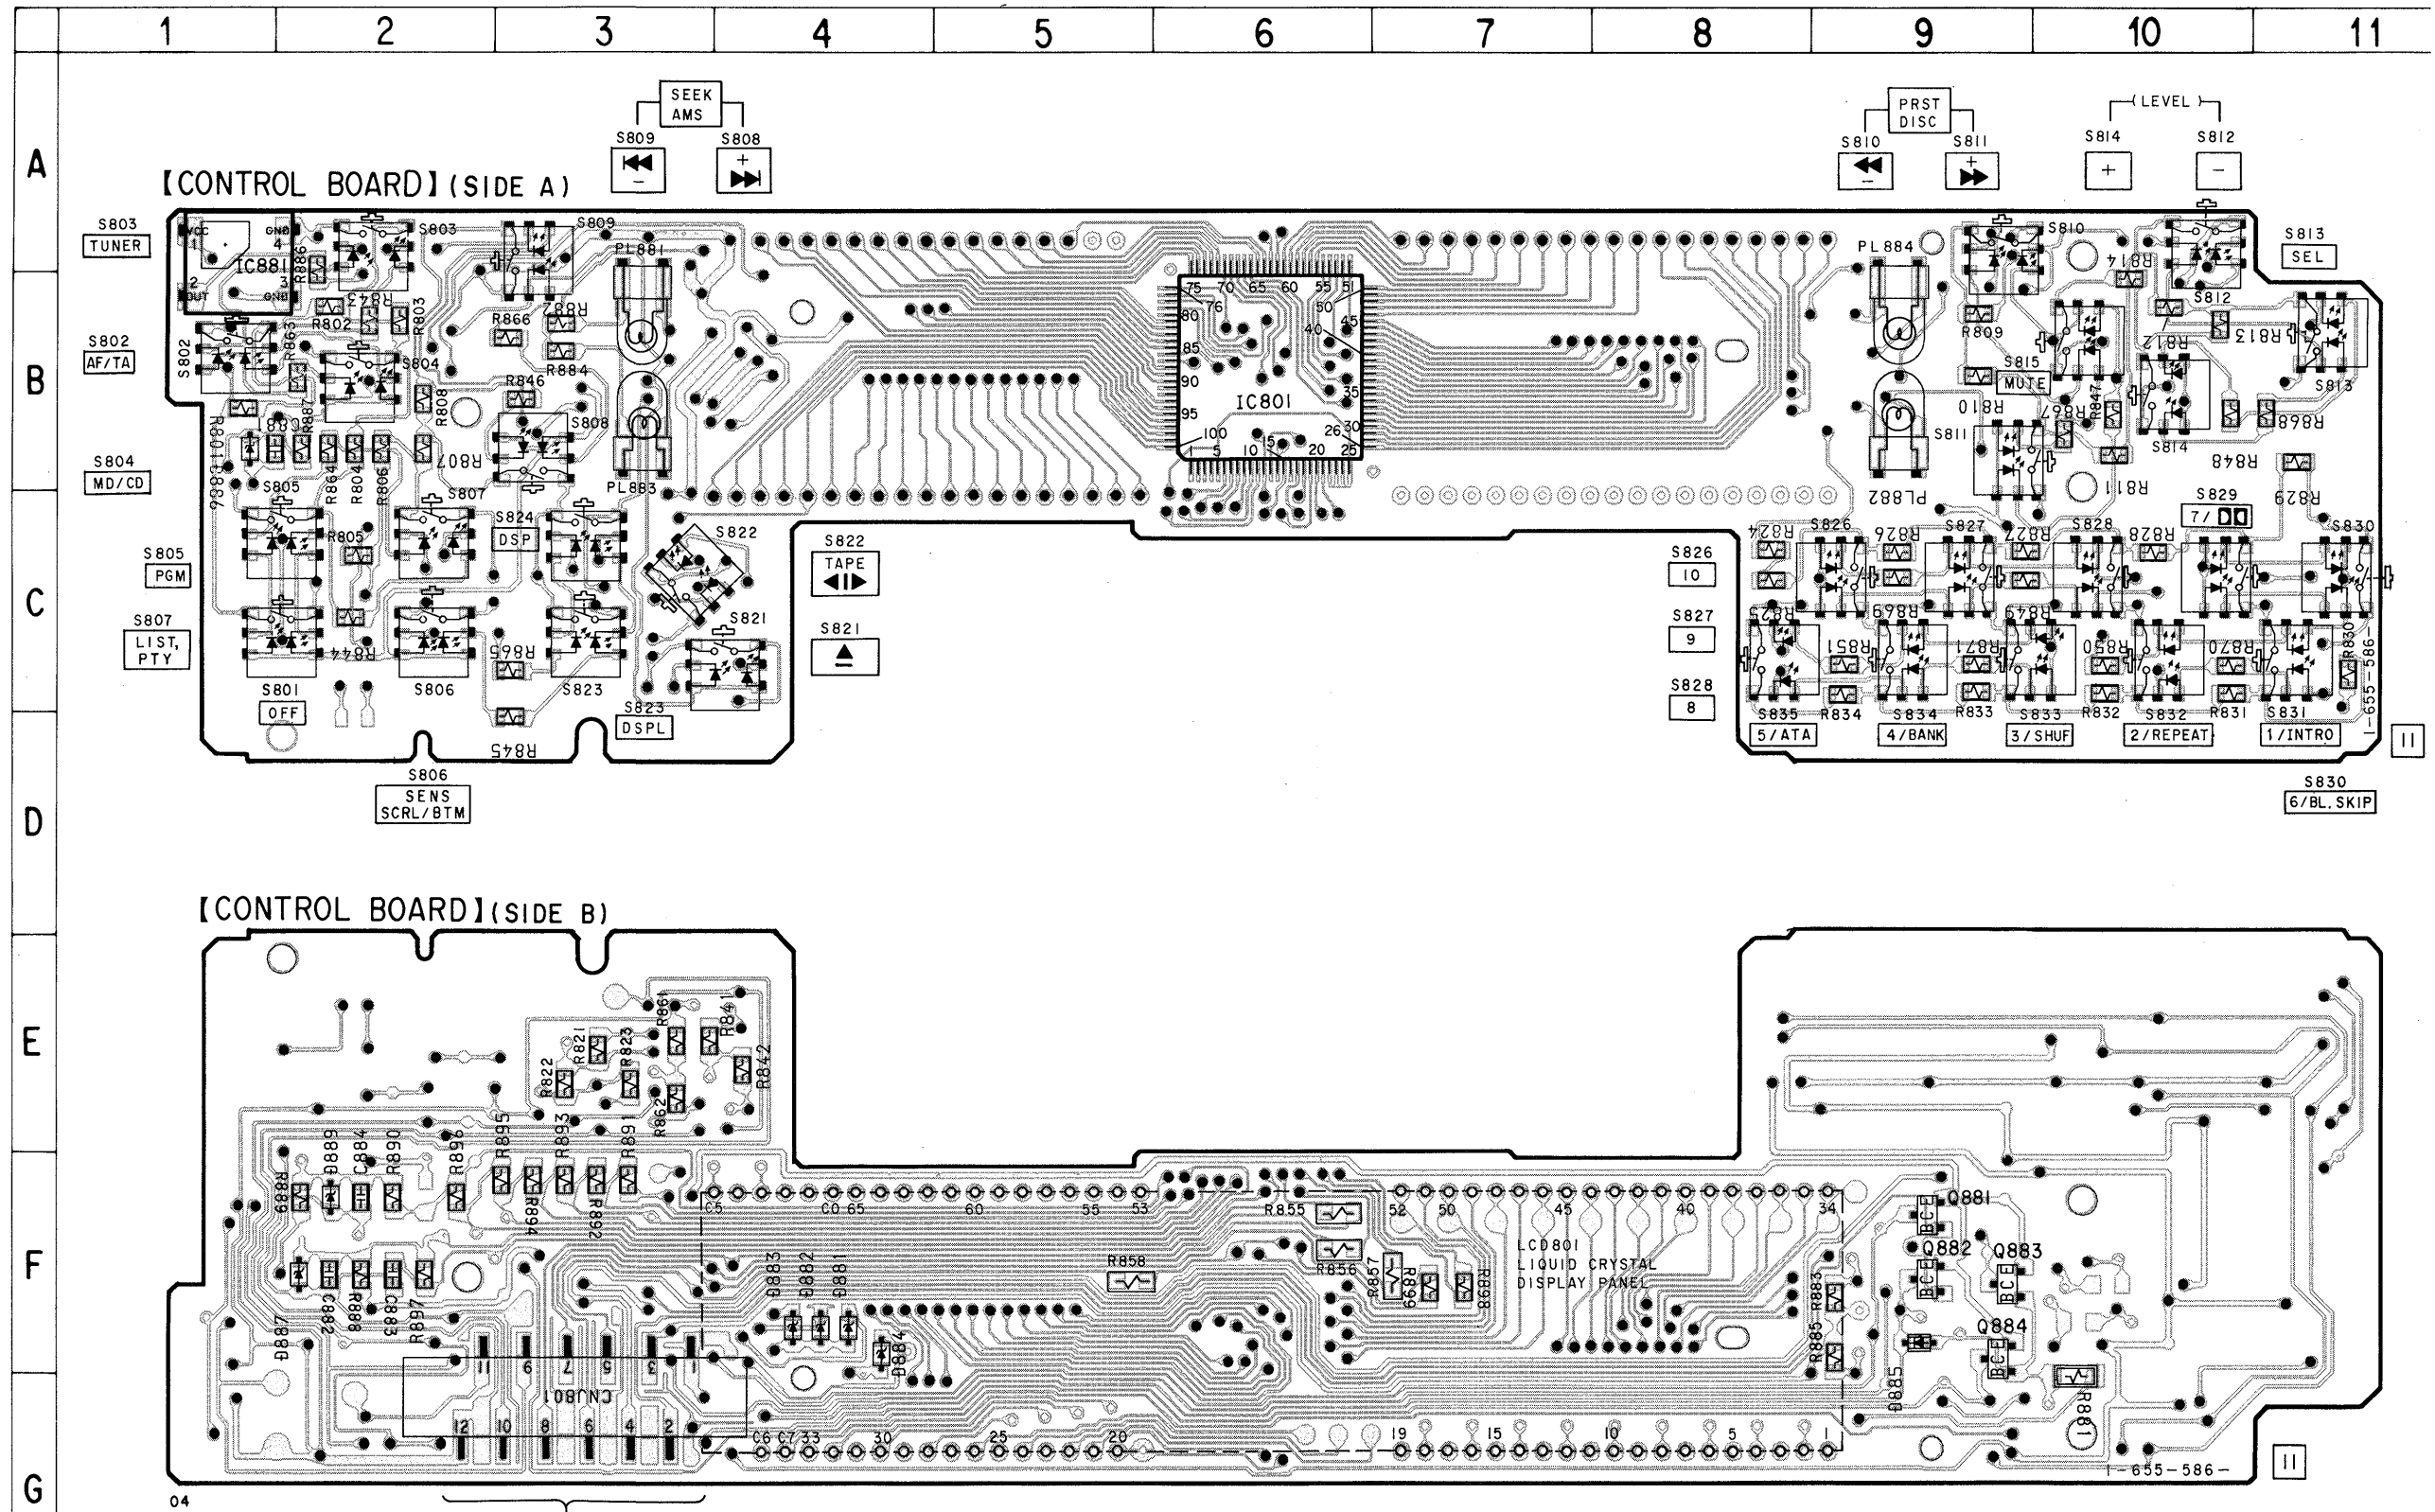


• Semiconductor Location

Ref. No.	Location
D881	F-4
D882	F-4
D883	F-4
D884	F-4
D885	F-9
D886	B-1
D887	F-2
D889	F-2
IC801	B-6
IC881	B-1
Q881	F-9
Q882	F-9
Q883	F-9
Q884	F-9


- Note:**
- : parts extracted from the component side.
 - : Through hole.
 - ▨ : Pattern on the side which is seen. (The other layer's patterns are not indicated.)

6-7. SEMICONDUCTOR LEAD LAYOUTS

BA3910B-V2

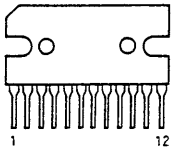


MM1175XFF

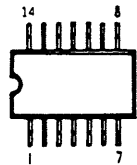

(TOP VIEW)

μPD16432AGC-011 -9EU


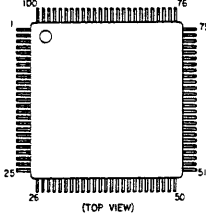


(TOP VIEW)


2SD2525



MA721WK-(TX) 1SS184




**CXA1846M-T6
LC7216M
TDA7330BD-013TR**

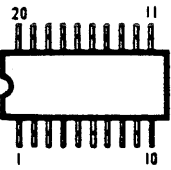


(TOP VIEW)


**MN1883220SZG
μPD78056GC-060 -3B9**

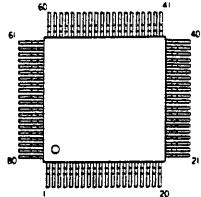


**DTC314TKH04
DTD113EK
UN2111
UN2211
UN2217
2SC2712-YG**




2SK1657-T1B



**MA729
MA8056-L
MA8062-M
MA8091-M**

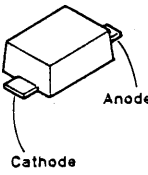


CXA1946Q

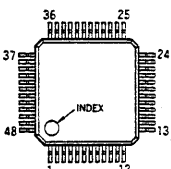



(TOP VIEW)

**NJM4558E-D (TE2)
NJM4580E-D
TC4W66F**




(TOP VIEW)


XN1A312-TX

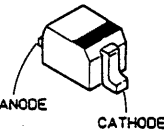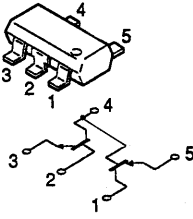

1N5404TU

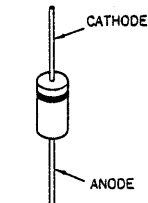


HA12174

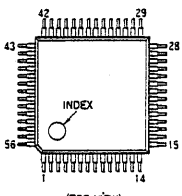


(TOP VIEW)

PST600EMT-T1

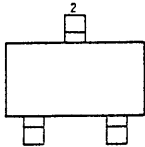


(TOP VIEW)


**2SB1115A-YQ
2SD1615A-GP**

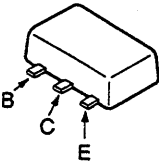


**MA152WA
MA721WA-TX**




1SS133T-91S



HA13150A

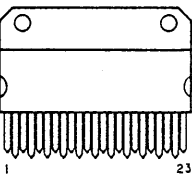


RS-30E-T

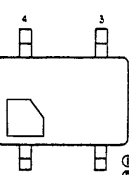


① Vcc
② OUT
③ GND
④ GND


2SD1802FAST-TL




**MA4039-M (QZ)
MA4062-M (QZ)
MA4068-L (QZ)
MA4091-H (QZ)
MA4100-M (QZ)
MA4200-M (QZ)**



LB1638M

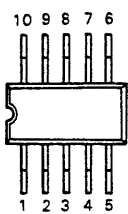


TA2050F (EL)

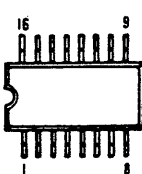


(TOP VIEW)

• IC Block Diagrams


IC11 LC7216M

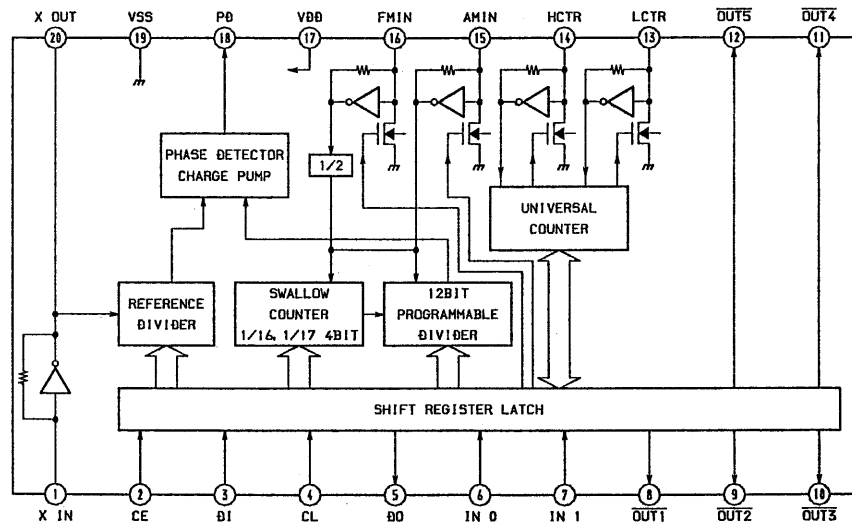


IC21 TC4W66F

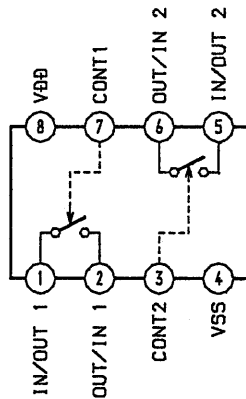

IC51 TDA7330BD


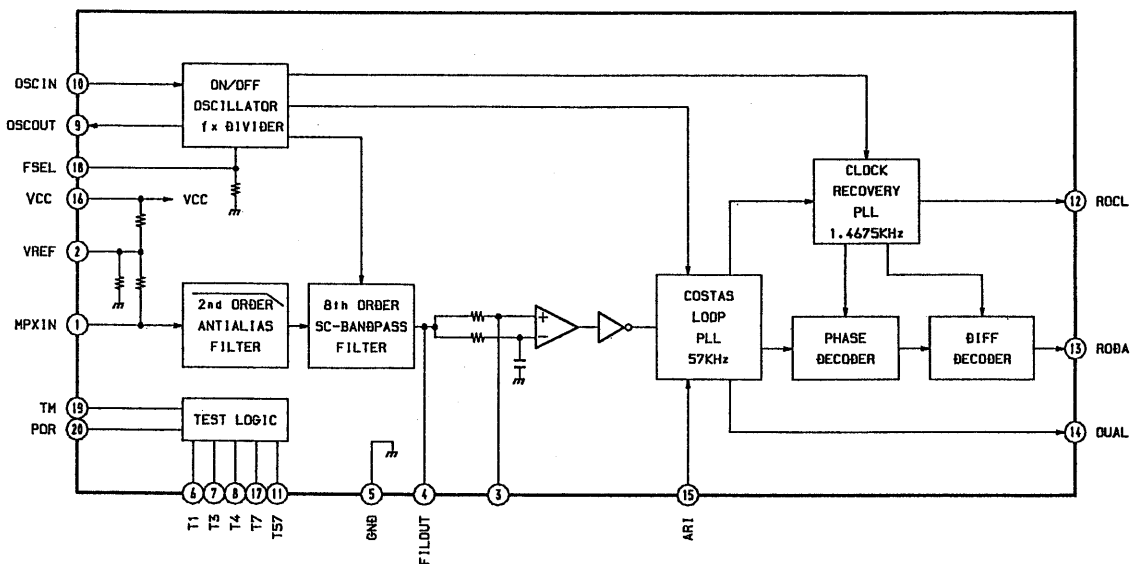


IC301 HA12174

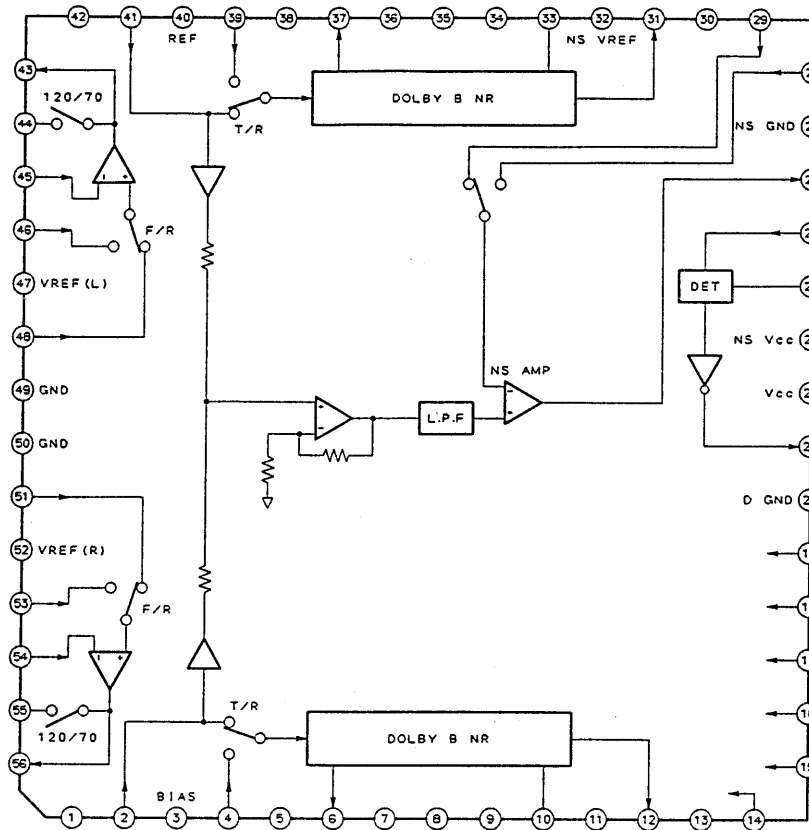


IC331 LB1638M


IC321 NJM4558E-D
IC352 NJM4580E-D

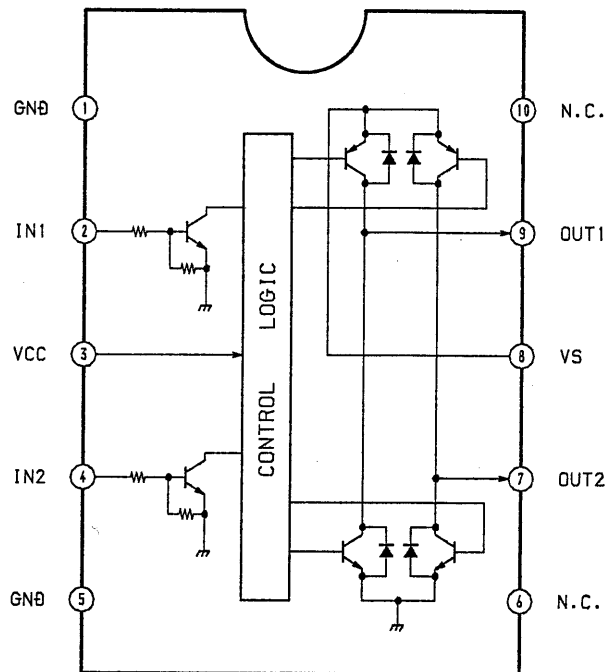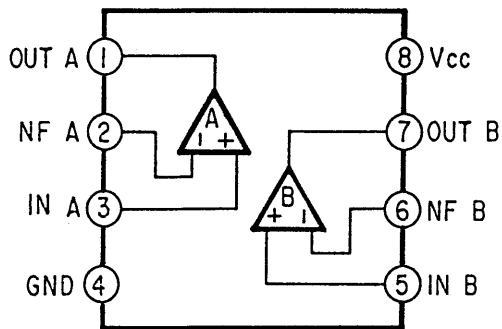


IC351 CXA1946Q

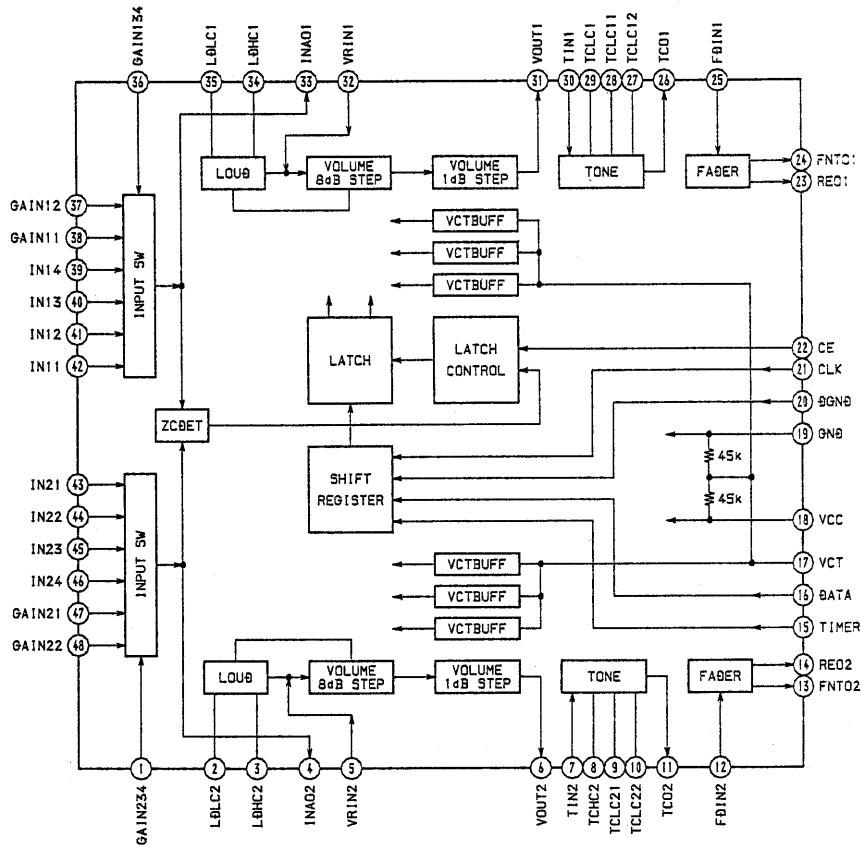


IC371, 381 TA2050F

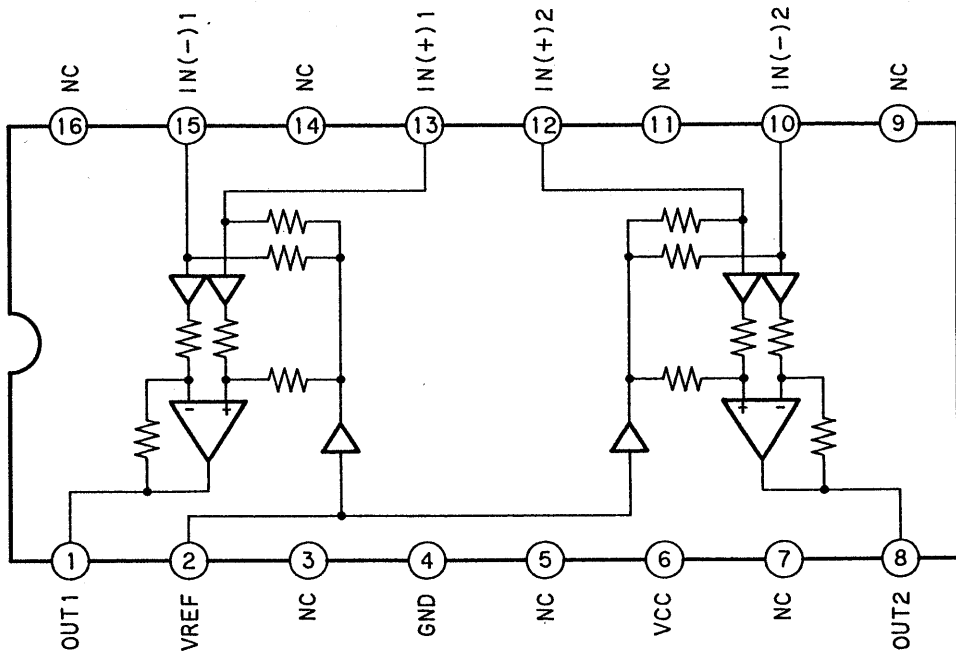


IC391 CXA1846M

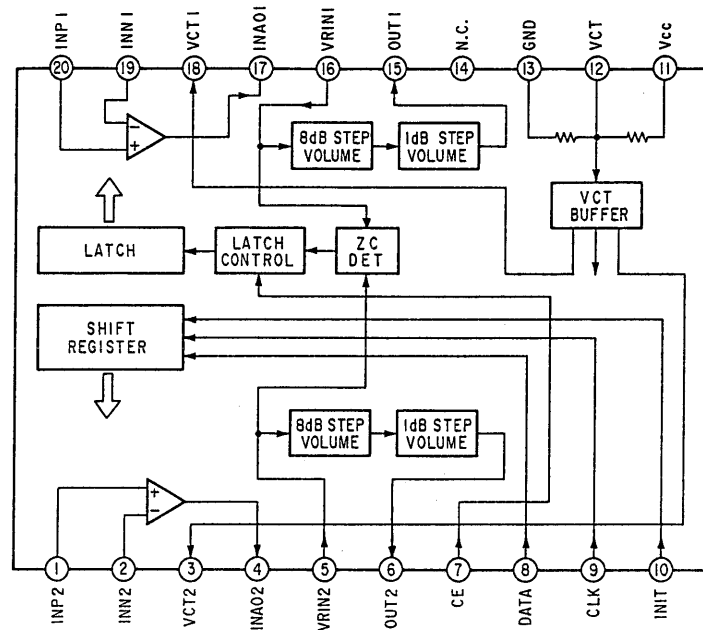


IC571 MM1175XFF

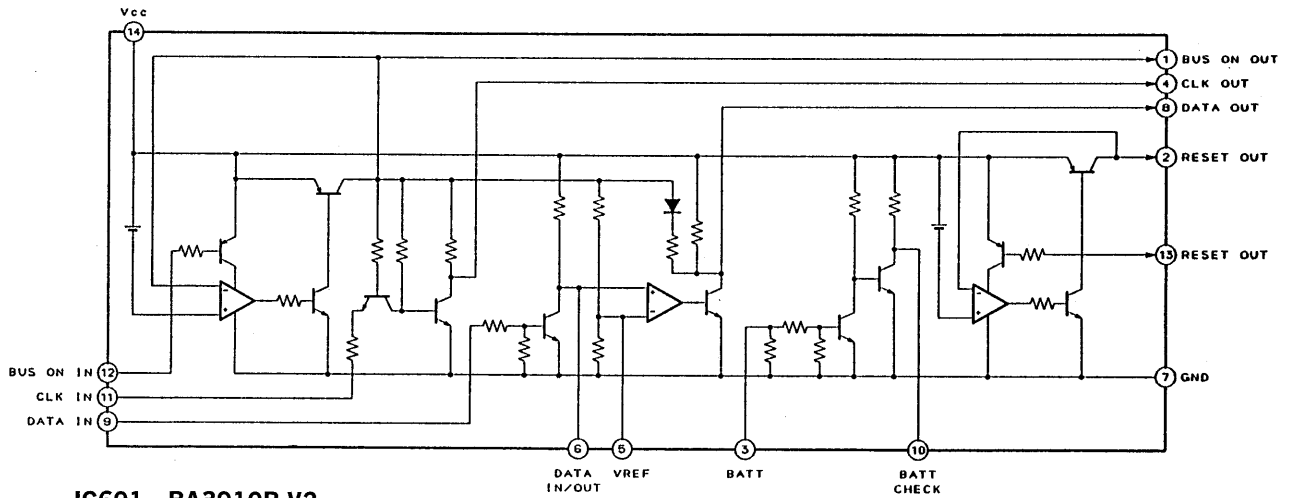

IC601 BA3910B-V2

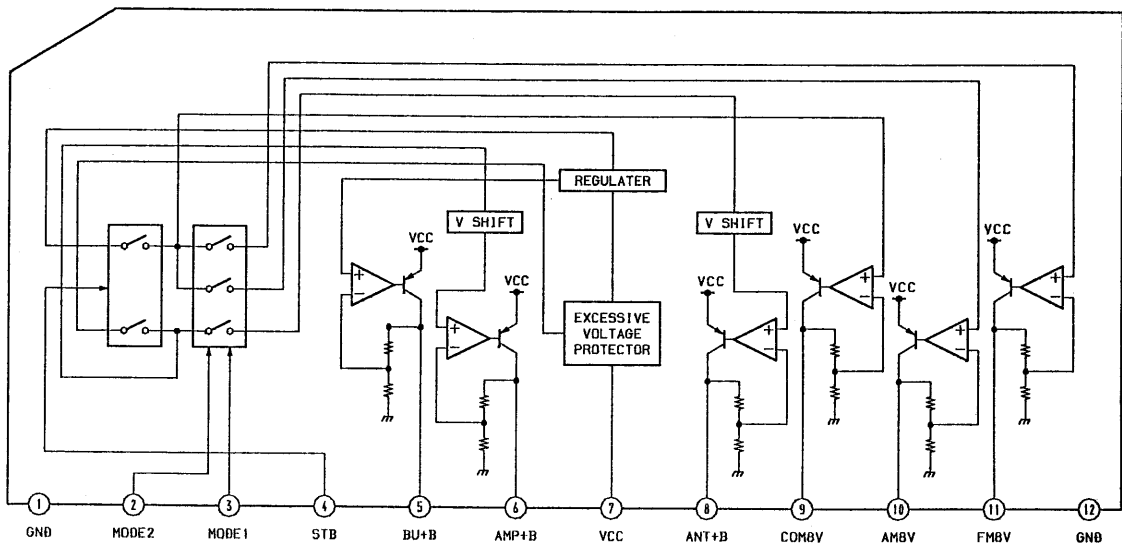


7-2. FRONT PANEL SECTION

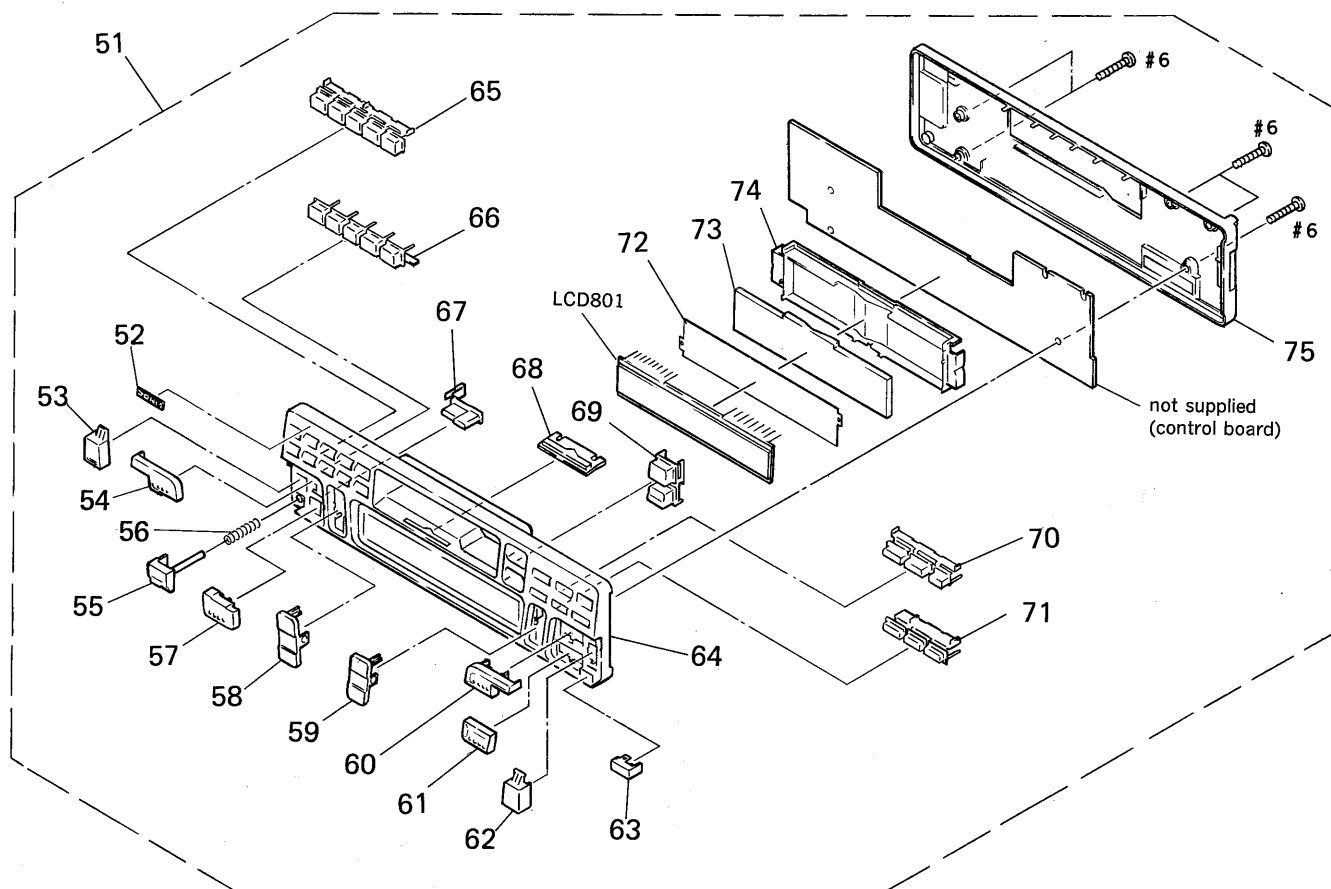

Ref. No.	Part No.	Description	Remark
* 51	A-3291-271-A	PANEL ASSY, FRONT	
52	3-904-194-01	EMBLEM (NO. 2, 5), SONY	
53	3-920-594-01	BUTTON (SEL)	
54	3-920-592-01	BUTTON (+)	
55	3-920-596-01	BUTTON (RELEASE)	
56	3-920-608-01	SPRING (RELEASE)	
57	3-920-593-01	BUTTON (-)	
58	3-920-597-01	BUTTON (P/D)	
59	3-920-598-01	BUTTON (S/A)	
60	3-920-587-01	BUTTON (MD/CD)	
61	3-920-588-01	BUTTON (TUNER)	
62	3-920-589-11	BUTTON (TV)	
63	3-920-600-01	FILTER (RAY CATCHER)	

Ref. No.	Part No.	Description	Remark
64	X-3370-275-1	PANEL SUB ASSY	
65	3-920-585-01	BUTTON (PRE 1-5)	
66	3-920-586-01	BUTTON (PRE 6-10)	
67	3-920-595-11	BUTTON (MUTE)	
68	3-920-607-01	PLATE (C), LIGHT GUIDE	
69	3-920-599-01	BUTTON (EJECT)	
70	3-920-590-01	BUTTON (D. S. O)	
71	3-920-591-01	BUTTON (D. L. P)	
* 72	3-920-602-01	SHEET (REFLECTOR)	
* 73	3-920-610-01	PLATE (LCD), LIGHT GUIDE	
* 74	3-920-601-01	HOLDER (LCD)	
75	3-920-582-11	PANEL, FRONT BACK	
LCD801	1-810-774-11	DISPLAY PANEL, LIQUID CRYSTAL	

7-3. MECHANISM DECK SECTION
(MG-50DX-39)

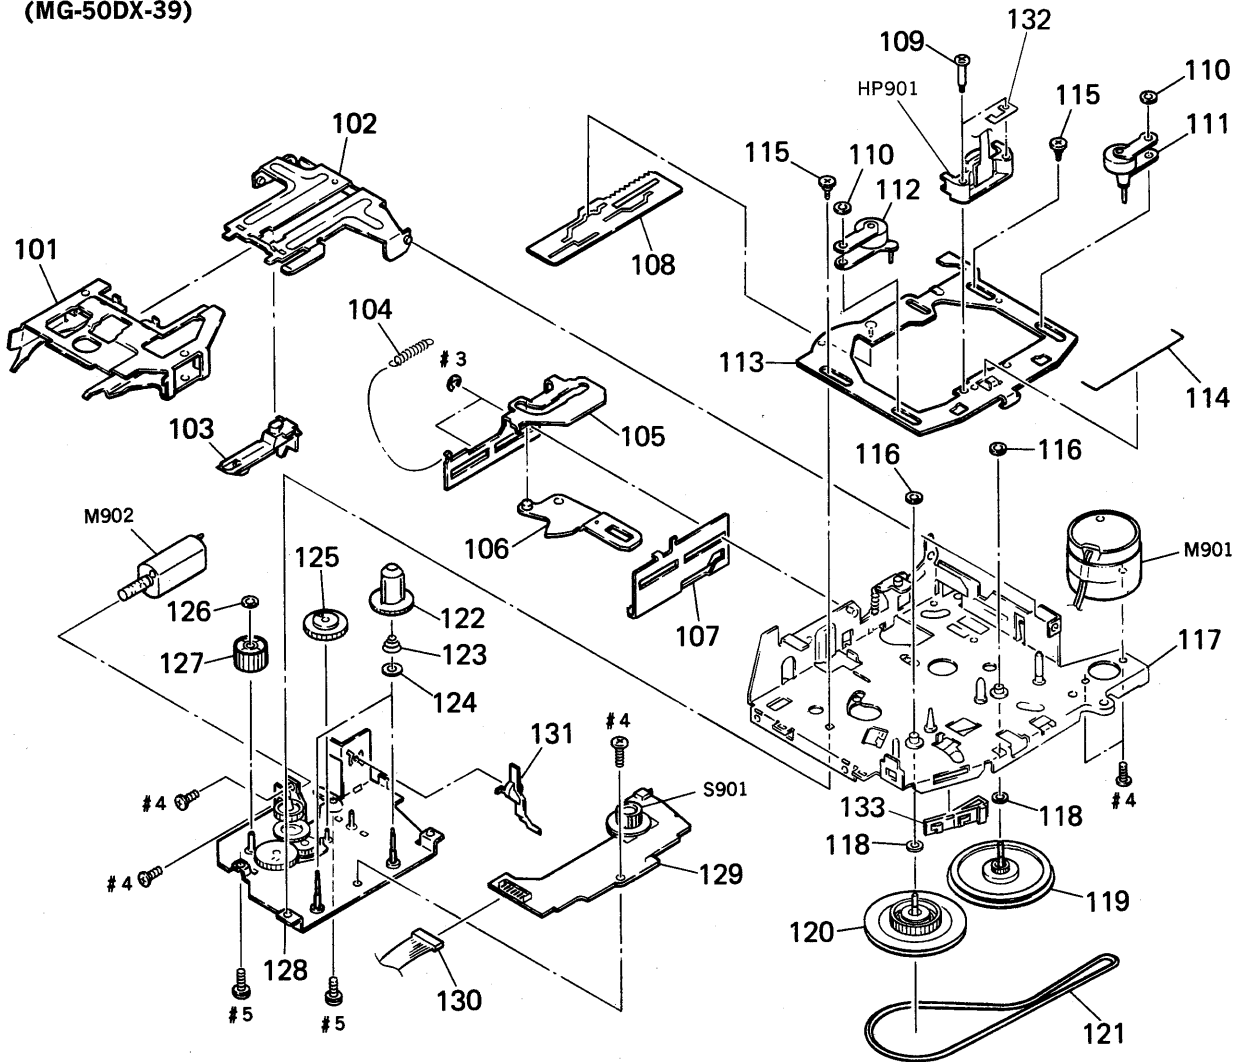

Ref. No.	Part No.	Description	Remark
101	3-912-881-01	HOUSING, CASSETTE	
* 102	3-912-882-01	HANGER, HOUSING	
103	3-912-884-01	CATCHER	
104	3-912-885-01	SPRING (LOADING LEVER), TENSION	
* 105	3-912-892-01	LEVER (B), LOADING	
* 106	3-912-883-01	ARM, SUCTION	
* 107	3-922-941-01	LEVER (A2), LOADING	
* 108	3-912-876-01	LEVER, MODE	
109	3-912-893-01	SCREW, HEAD FITTING	
110	3-579-788-01	WASHER, STOPPER	
111	X-3368-266-1	PINCH LEVER (F) ASSY	
112	X-3368-267-1	PINCH LEVER (R) ASSY	
* 113	X-3368-268-1	BASE ASSY, HEAD	
114	3-912-879-01	SPRING, PINCH PRESS	
115	3-912-897-01	SCREW (HB), STEP	
116	3-364-151-01	WASHER	
117	X-3368-984-1	CHASSIS (SV) ASSY (B), MECHANICAL	
118	3-701-437-21	WASHER	
119	3-913-825-01	FLYWHEEL (FZ)	

Ref. No.	Part No.	Description	Remark
120	X-3369-124-1	CLUTCH (S) ASSY, FR	
121	3-912-896-01	BELT	
122	X-3368-843-1	GEAR (SV) ASSY, REEL	
123	3-917-222-01	SPRING (B-T), COIL	
124	3-917-324-01	WASHER (B-T)	
125	3-912-888-01	GEAR (LOADING E)	
126	3-321-813-01	WASHER, COTTER POLYETHYLENE	
127	3-912-889-01	GEAR (LOADING F)	
128	X-3368-842-1	BRACKET (SV) ASSY, REEL	
129	1-589-604-21	REEL SENSOR BOARD	
130	1-765-460-12	CORD (WITH CONNECTOR)	
131	3-916-358-01	LEVER (TAPE IN 2)	
* 132	3-917-258-01	PLATE, GROUND	
133	3-919-553-01	GUIDE (BELT)	
HP901	1-500-200-11	HEAD, MAGNETIC (PLAYBACK)	
M901	X-3368-684-1	MOTOR ASSY, MAIN (CAPSTAN/REEL)	
M902	X-3368-685-1	MOTOR ASSY, SUB (LOADING/TAPE OPERATION)	
S901	1-692-885-11	SWITCH, ROTARY SLIDE (TAPE OPERATION)	

SECTION 8 ELECTRICAL PARTS LIST

CONTROL

MAIN

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA . . : μ A. uPA . . : μ PA.
uPB . . : μ PB. uPC . . : μ PC. uPD . . : μ PD.
- CAPACITORS
uF: μ F
- COILS
uH: μ H

When indicating parts by reference number, please include the board.

- Abbreviation
G : German model

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		CONTROL BOARD *****					
		< DIODE >					
D881	8-719-017-98	DIODE MA8200-TX		D503	8-719-801-78	DIODE 1SS184	
D882	8-719-017-98	DIODE MA8200-TX		D504	8-719-801-78	DIODE 1SS184	
D883	8-719-017-98	DIODE MA8200-TX		D543	8-719-034-22	DIODE MA4039-M(QZ)	
D884	8-719-017-98	DIODE MA8200-TX		D544	8-719-404-46	DIODE MA110	
D885	8-719-420-51	DIODE MA729		D551	8-719-404-46	DIODE MA110	
D886	8-719-422-43	DIODE MA8051-H		D552	8-719-041-79	DIODE MA721WA-TX	
D887	8-719-422-43	DIODE MA8051-H		D553	8-719-400-20	DIODE MA152WA	
D889	8-719-422-73	DIODE MA8075-L		D554	8-719-034-46	DIODE MA4062-M(QZ)	
		< IC >		D555	8-719-034-46	DIODE MA4062-M(QZ)	
IC801	8-759-331-68	IC uPD16432AGC-011-9EU		D561	8-719-034-46	DIODE MA4062-M(QZ)	
IC881	8-749-925-07	IC RS-30E-T		D562	8-719-034-46	DIODE MA4062-M(QZ)	
		< TRANSISTOR >		D563	8-719-034-46	DIODE MA4062-M(QZ)	
Q881	8-729-904-66	TRANSISTOR DTD113EK		D564	8-719-404-46	DIODE MA110	
Q882	8-729-904-66	TRANSISTOR DTD113EK		D571	8-719-034-46	DIODE MA4062-M(QZ)	
Q883	8-729-904-66	TRANSISTOR DTD113EK		D572	8-719-034-49	DIODE MA4068-L(QZ)	
Q884	8-729-904-66	TRANSISTOR DTD113EK		D573	8-719-034-46	DIODE MA4062-M(QZ)	

*	A-3298-546-A	MAIN BOARD, COMPLETE (AEP, UK)		D574	8-719-034-46	DIODE MA4062-M(QZ)	
*	A-3298-548-A	MAIN BOARD, COMPLETE (G)		D575	8-719-050-86	DIODE 1SS133T-91S	
		*****		D581	8-719-404-46	DIODE MA110	
		< DIODE >		D602	8-719-022-90	DIODE MA8160-M	
D3	8-719-040-04	DIODE MA721WK-(TX)		D603	8-719-422-64	DIODE MA8062-M	
D4	8-719-422-49	DIODE MA8056-L		D651	8-719-034-66	DIODE MA4100-M(QZ)	
D21	8-719-422-97	DIODE MA8091-M		D652	8-719-034-46	DIODE MA4062-M(QZ)	
D301	8-719-404-46	DIODE MA110		D653	8-719-034-46	DIODE MA4062-M(QZ)	
D321	8-719-422-49	DIODE MA8056-L		D654	8-719-034-46	DIODE MA4062-M(QZ)	
D331	8-719-034-63	DIODE MA4091-H(QZ)		D655	8-719-034-46	DIODE MA4062-M(QZ)	
D332	8-719-050-86	DIODE 1SS133T-91S		D656	8-719-034-46	DIODE MA4062-M(QZ)	
D501	8-719-400-20	DIODE MA152WA		D657	8-719-034-46	DIODE MA4062-M(QZ)	
D502	8-719-404-46	DIODE MA110		D751	8-719-050-86	DIODE 1SS133T-91S	
		< IC >		D781	8-719-034-46	DIODE MA4062-M(QZ)	
IC11	8-759-823-81	IC LC7216M		D782	8-719-034-98	DIODE MA4200-M(QZ)	
IC21	8-759-242-66	IC TC4W66F		D783	8-719-049-38	DIODE 1N5404TU	
IC51	8-759-163-63	IC TDA7330BD-013TR		D991	8-719-404-46	DIODE MA110	
IC301	8-759-160-99	IC HA12174					

MAIN

Ref. No.	Part No.	Description	Remark
IC321	8-759-331-72	IC NJM4558E-D (TE2)	
IC331	8-759-823-87	IC LB1638M	
IC351	8-752-071-19	IC CXA1946Q	
IC352	8-759-711-85	IC NJM4580E-D	
IC371	8-759-262-37	IC TA2050F (EL)	
IC381	8-759-262-37	IC TA2050F (EL)	
IC391	8-752-068-73	IC CXA1846M-T6	
IC501	8-759-333-09	IC uPD78056GC-060-3B9	
IC531	8-759-167-83	IC PST600EMT-T1	
IC551	8-759-332-47	IC MN1883220SZG	
IC571	8-759-096-16	IC MM1175XFF	
IC601	8-759-182-75	IC BA3910B-V2	
IC781	8-759-260-77	IC HA13150A	
< TRANSISTOR >			
Q1	8-729-421-22	TRANSISTOR UN2211	
Q2	8-729-424-08	TRANSISTOR UN2111	
Q3	8-729-106-68	TRANSISTOR 2SD1615A-GP	
Q5	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q21	8-729-021-94	TRANSISTOR 2SK1657-T1B	
Q22	8-729-106-68	TRANSISTOR 2SD1615A-GP	
Q23	8-729-421-22	TRANSISTOR UN2211	
Q52	8-729-020-67	TRANSISTOR XN1A312-TX	
Q61	8-729-424-70	TRANSISTOR UN2217	
Q71	8-729-424-70	TRANSISTOR UN2217	
Q81	8-729-424-70	TRANSISTOR UN2217	
Q171	8-729-920-21	TRANSISTOR DTC314TKH04	
Q181	8-729-920-21	TRANSISTOR DTC314TKH04	
Q191	8-729-920-21	TRANSISTOR DTC314TKH04	
Q271	8-729-920-21	TRANSISTOR DTC314TKH04	
Q281	8-729-920-21	TRANSISTOR DTC314TKH04	
Q291	8-729-920-21	TRANSISTOR DTC314TKH04	
Q321	8-729-020-67	TRANSISTOR XN1A312-TX	
Q331	8-729-015-11	TRANSISTOR 2SD1802FAST-TL	
Q332	8-729-424-08	TRANSISTOR UN2111	
Q334	8-729-106-60	TRANSISTOR 2SB1115A-YQ	
Q501	8-729-421-22	TRANSISTOR UN2211	
Q502	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q503	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q504	8-729-421-22	TRANSISTOR UN2211	
Q505	8-729-421-22	TRANSISTOR UN2211	
Q541	8-729-421-22	TRANSISTOR UN2211	
Q542	8-729-424-08	TRANSISTOR UN2111	
Q543	8-729-421-22	TRANSISTOR UN2211	
Q551	8-729-424-08	TRANSISTOR UN2111	
Q552	8-729-424-08	TRANSISTOR UN2111	
Q571	8-729-424-08	TRANSISTOR UN2111	
Q572	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q603	8-729-421-22	TRANSISTOR UN2211	

Ref. No.	Part No.	Description	Remark
Q606	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q651	8-729-106-60	TRANSISTOR 2SB1115A-YQ	
Q652	8-729-421-22	TRANSISTOR UN2211	
Q653	8-729-106-60	TRANSISTOR 2SB1115A-YQ	
Q654	8-729-421-22	TRANSISTOR UN2211	
Q655	8-729-030-18	TRANSISTOR 2SD2525	
Q656	8-729-424-08	TRANSISTOR UN2111	

MISCELLANEOUS			

14	1-765-081-11	CORD (WITH CONNECTOR)	
15	1-769-448-11	CORD (WITH CONNECTOR) (AUDIO)	
130	1-765-460-12	CORD (WITH CONNECTOR)	
F901	1-533-326-11	FUSE (BLADE TYPE) (AUTO FUSE) (3A)	
F902	1-533-331-11	FUSE (BLADE TYPE) (AUTO FUSE) (15A)	
HP901	1-500-200-11	HEAD, MAGNETIC (PLAYBACK)	
M901	X-3368-684-1	MOTOR ASSY, MAIN (CAPSTAN/REEL)	
M902	X-3368-685-1	MOTOR ASSY, SUB (LOADING/TAPE OPERATION)	
S901	1-692-885-11	SWITCH, ROTARY SLIDE (TAPE OPERATION)	


ACCESSORIES & PACKING MATERIALS			

1-467-559-22		REMOTE COMMANDER (RM-X40)	
1-473-067-31		REMOTE COMMANDER (RM-X2S)	
3-798-362-11		MANUAL, INSTRUCTION (ENGLISH, FRENCH, GERMAN)	
3-798-362-41		MANUAL, INSTRUCTION (SPANISH, ITALIAN)	
3-798-362-71		MANUAL, INSTRUCTION (DUTCH, SWEDISH, PORTUGUESE) (AEP, UK)	
3-798-363-11		MANUAL, INSTRUCTION, INSTALL (ENGLISH, FRENCH, GERMAN, ITALIAN)	
3-798-363-41		MANUAL, INSTRUCTION, INSTALL (SPANISH, DUTCH, SWEDISH, PORTUGUESE) (AEP, UK)	
X-3369-665-1		CASE ASSY	
X-3369-817-1		BRACKET ASSY	

HARDWARE LIST			

#1	7-621-770-67	SCREW +PTT 2.6X6 (S)	
#2	7-621-773-87	SCREW +PTT 2.6X10 (S)	
#3	7-624-104-04	STOP RING 2.0, TYPE -E	
#4	7-627-553-17	PRECISION SCREW +P 2X2 TYPE 3	
#5	7-628-253-05	SCREW +PS 2X4	
#6	7-685-106-19	SCREW +P 2X10 TYPE2 NON-SLIT	
#7	7-685-134-19	SCREW +P 2.6X8 TYPE2 NON-SLIT	
#8	7-621-772-10	SCREW +B 2X4	

Ref. No.	Part No.	Description	Remark
MOUNTING HARDWARE *****			
* 151	3-916-161-01	FRAME, FITTING	
152	3-386-828-01	SCREW, FITTING	
153	3-349-410-01	BUSHING	
154	3-388-078-01	KEY	
155	3-920-584-01	COLLAR	
156	3-923-046-01	STOPPER	
157	1-765-081-11	CORD (WITH CONNECTOR)	
158	1-769-448-11	CORD (WITH CONNECTOR) (AUDIO)	
159	X-3370-077-1	SCREW ASSY (KEY), FITTING	

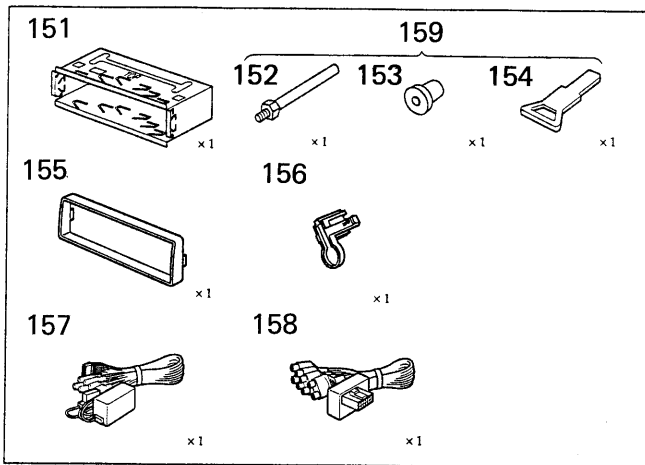

XR-C720RDS

SONY[®]
SERVICE MANUAL


AEP Model
UK Model

SUPPLEMENT-1

File this supplement with the service manual.

Subject: Change the Main Board and Schematic Diagram
Add the Electrical Parts List

1. SCHEMATIC DIAGRAM—PANEL SECTION—

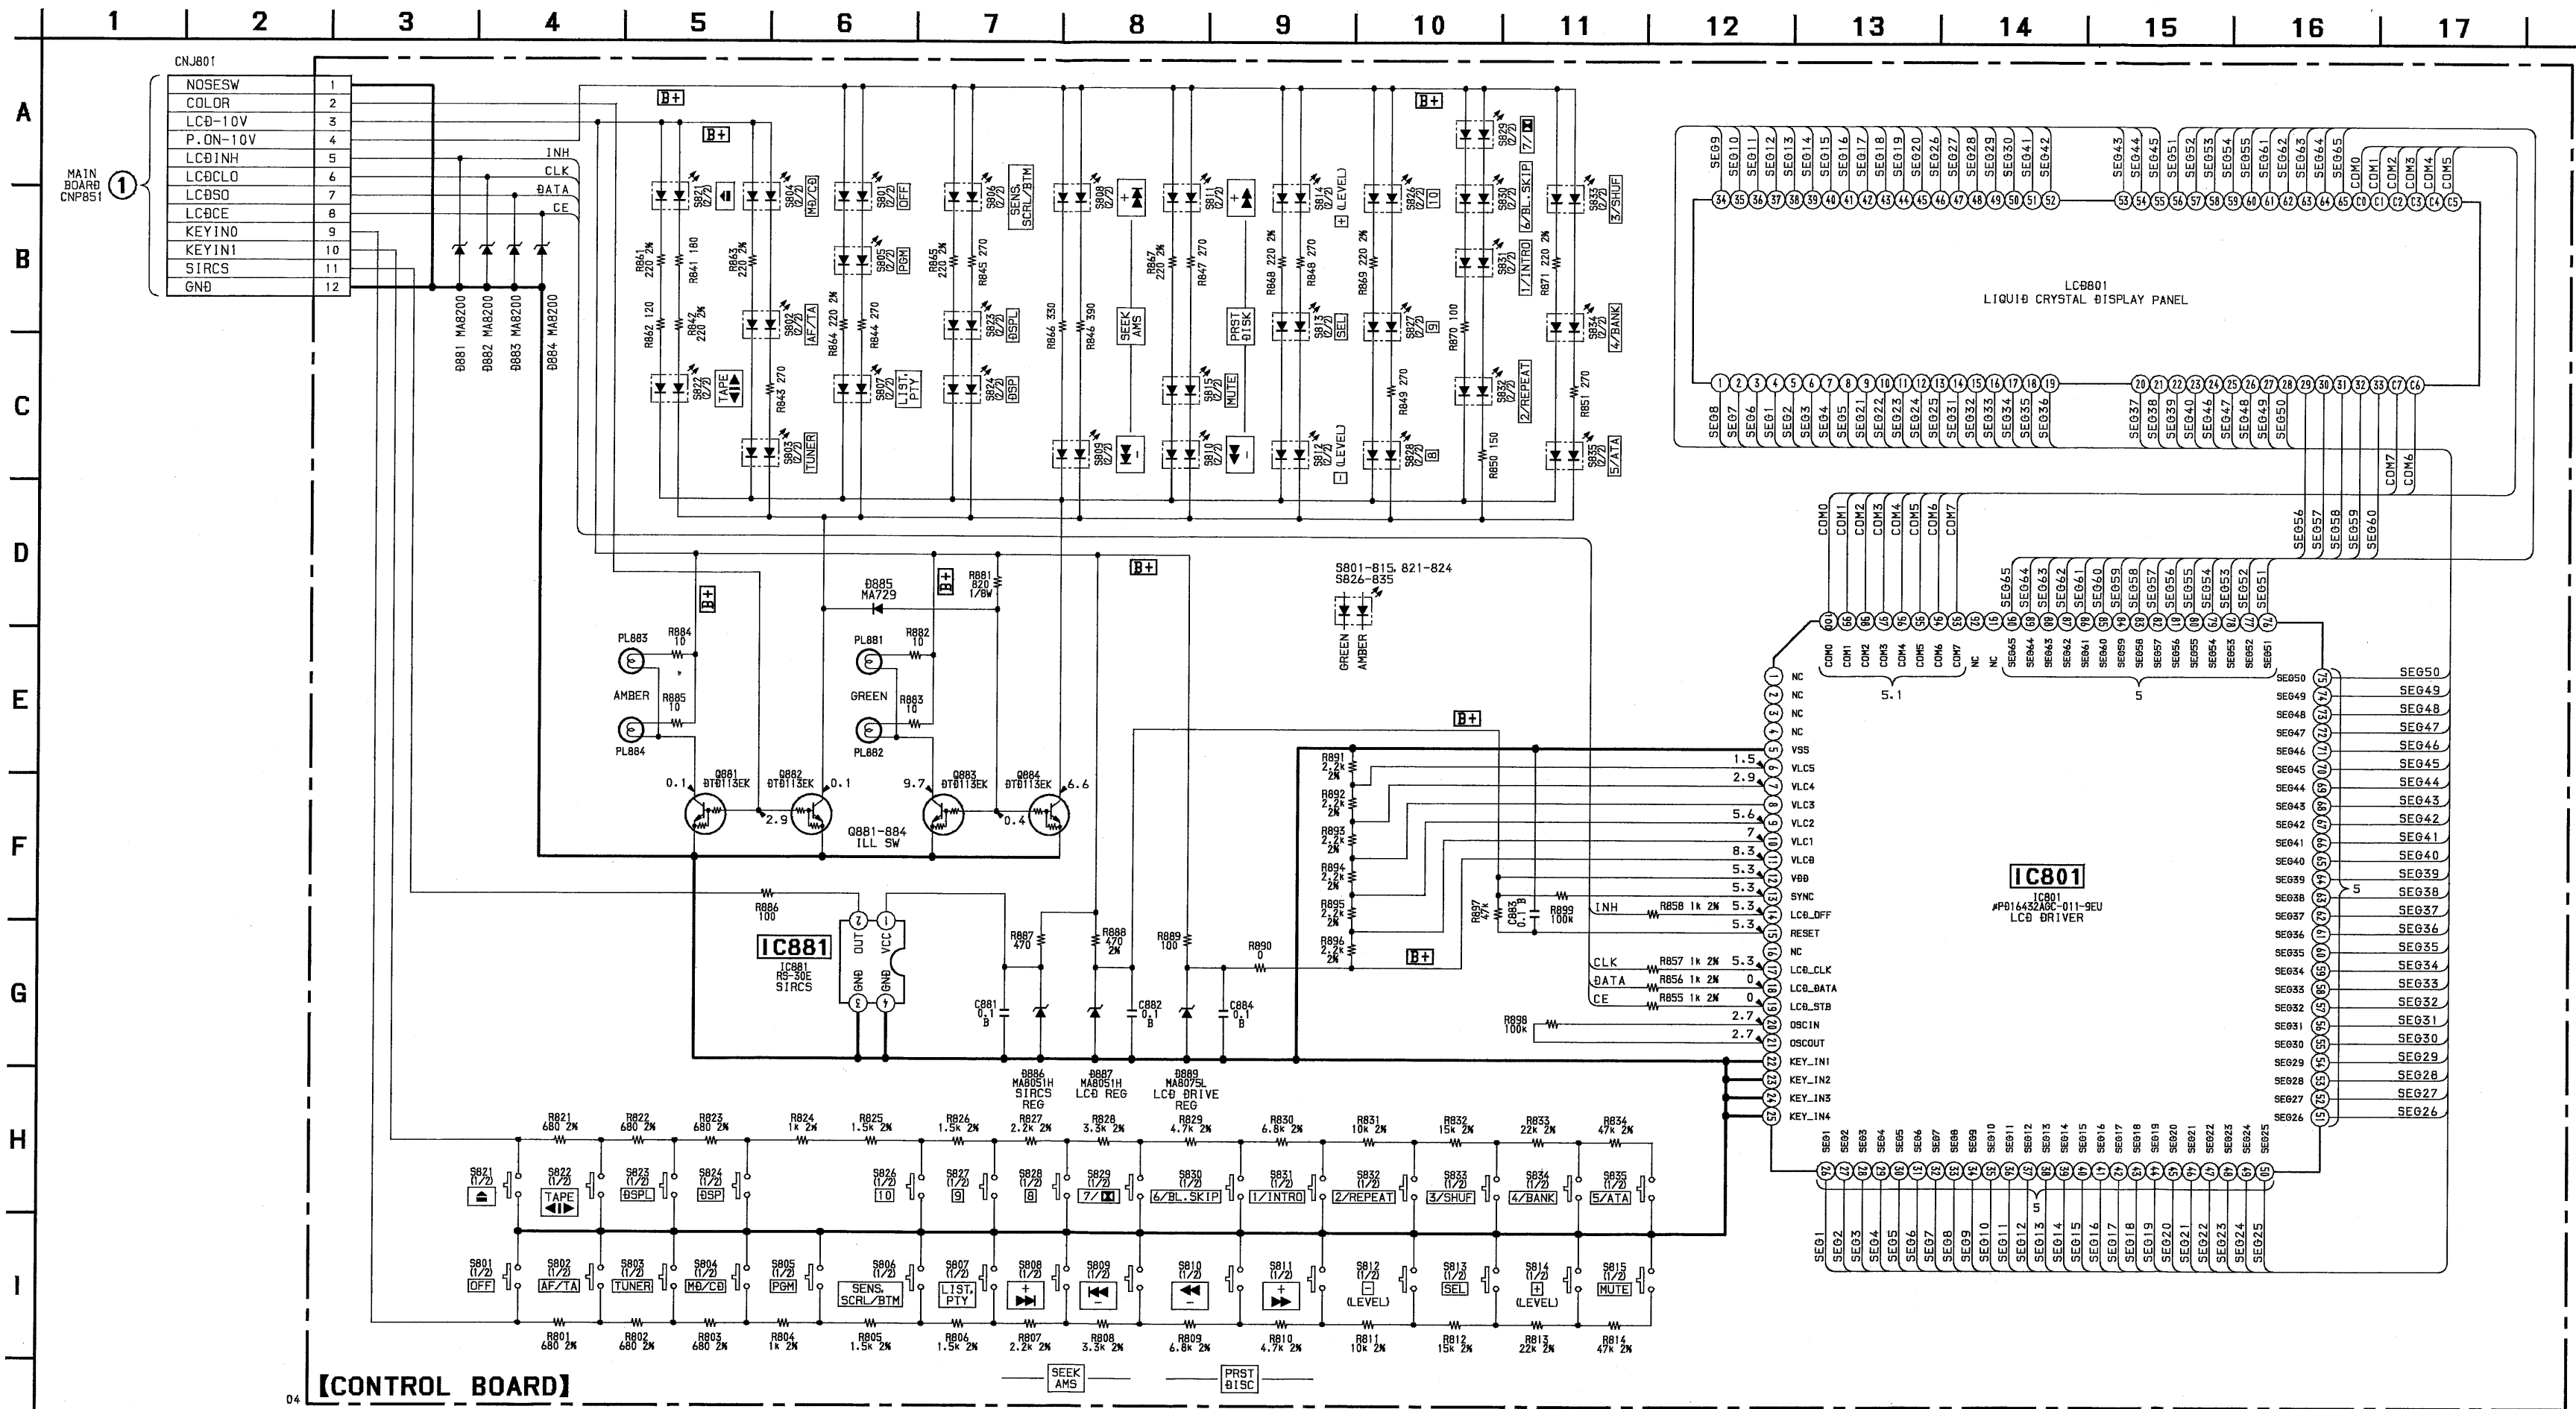

- Note:**
- All capacitors are in μF unless otherwise noted. pF : μF 50WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and 1/4 W or less unless otherwise specified.
 - % : indicates tolerance.
 - B+ : B+ Line
 - Power voltage is dc 14.4V and fed with regulated dc power supply from BATT and ACC terminals.
 - Voltage is dc with respect to ground under no-signal (detuned) conditions.
 - no mark: FM
 - Voltages are taken with a VOM (Input Impedance 10M Ω). Voltage variations may be noted due to normal production tolerances.




04 [CONTROL BOARD]

2. PRINTED WIRING BOARDS—MAIN SECTION—

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D3	F-10	IC352	F-4
D4	H-14	IC371	C-3
D21	H-13	IC381	C-1
D301	F-15	IC391	F-4
D321	E-14	IC501	H-5
D331	G-20	IC531	I-1
D332	G-21	IC551	H-7
D501	I-6	IC571	F-1
D502	G-4	IC601	D-18
D503	I-4	IC781	B-18
D504	I-4		
D543	F-20	Q1	H-10
D544	H-2	Q2	G-9
D551	H-3	Q3	H-13
D552	H-2	Q5	I-10
D553	J-7	Q21	H-9
D554	I-20	Q22	H-13
D555	J-15	Q23	G-9
D561	C-14	Q52	H-8
D562	C-14	Q61	E-9
D563	I-13	Q71	E-9
D564	C-9	Q81	E-9
D571	F-20	Q171	E-2
D572	F-20	Q181	E-2
D573	B-21	Q191	F-3
D574	B-20	Q271	E-2
D575	F-20	Q281	E-2
D581	G-15	Q291	F-2
D602	F-2	Q321	E-8
D603	D-5	Q331	G-2
D651	D-16	Q332	G-21
D652	I-14	Q334	F-21
D654	I-14	Q501	H-4
D655	I-13	Q502	I-4
D656	I-13	Q503	I-5
D657	I-13	Q504	G-5
D701	C-6	Q505	I-5
D711	C-7	Q541	G-2
D751	E-19	Q542	G-2
D781	D-16	Q543	H-2
D782	D-16	Q551	J-6
D783	D-14	Q552	I-7
D901	D-7	Q571	F-2
D999	B-19	Q572	F-21
		Q603	F-2
IC11	H-8	Q606	E-19
IC21	H-9	Q651	D-16
IC51	H-9	Q652	E-7
IC301	F-8	Q653	D-15
IC321	E-8	Q654	I-7
IC331	H-2	Q655	D-17
IC351	F-6	Q656	D-7

Note:
 ○ : parts extracted from the component side.
 ● : Through hole.
 ▨ : Pattern on the side which is seen.
 (The other layer's patterns are not indicated.)
 • Abbreviation
 G: German model

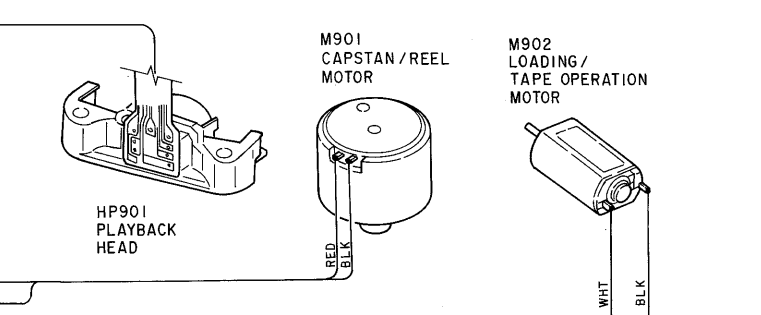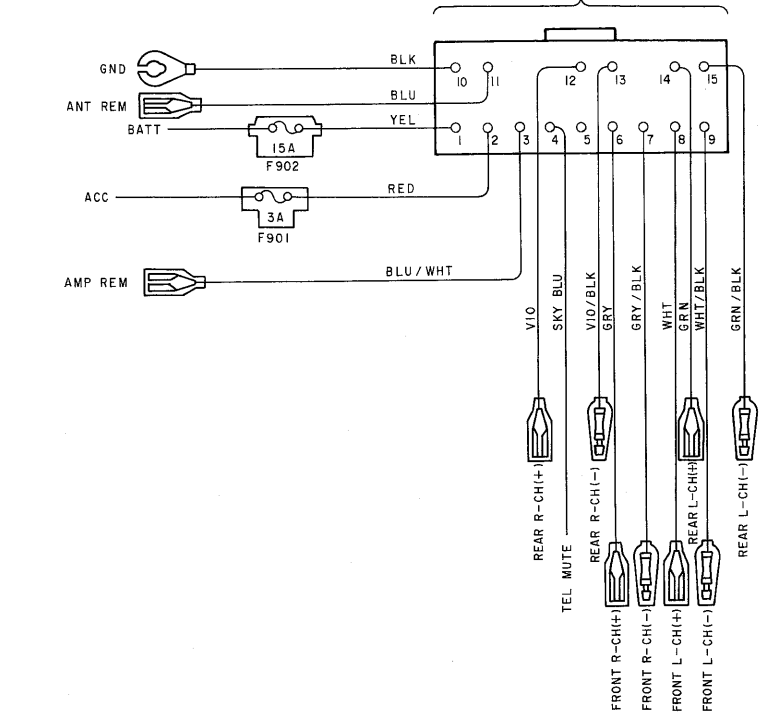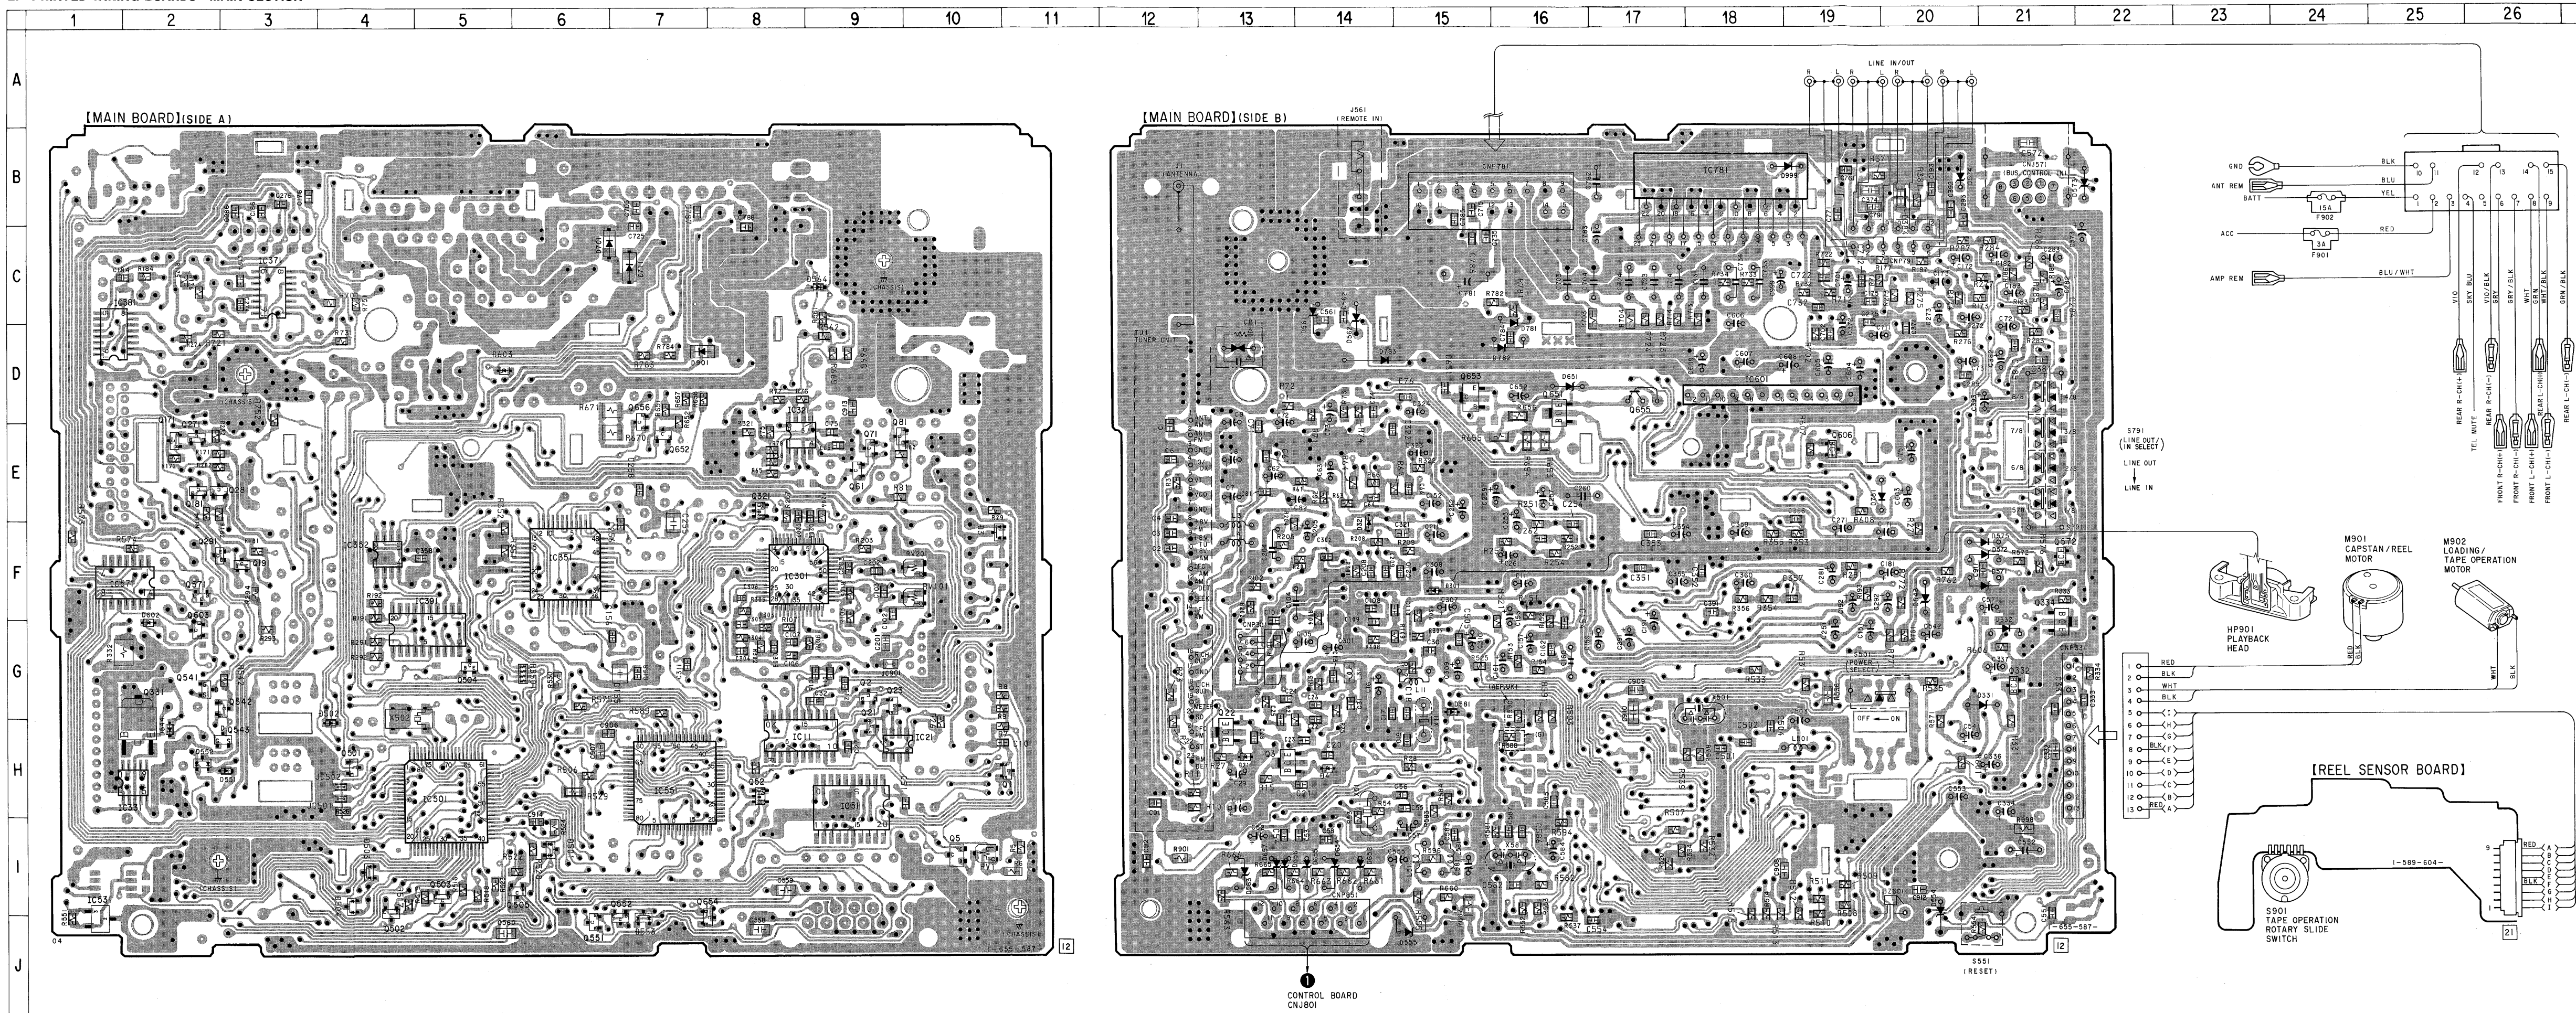

4. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA.: μ A. uPA.: μ PA..
uPB.: μ PB. uPC.: μ PC. uPD.: μ PD..
- CAPACITORS
uF: μ F
- COILS
uH: μ H

When indicating parts by reference number, please include the board.

- Abbreviation
G : German model

Ref. No.	Part No.	Description	Remark
		CONTROL BOARD *****	
*	3-920-601-01	HOLDER (LCD)	
*	3-920-602-01	SHEET (REFLECTOR)	
*	3-920-610-01	PLATE (LCD), LIGHT GUIDE	
		< CAPACITOR >	
C881-884	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
		< CONNECTOR >	
CNJ801	1-764-423-11	PIN, CONNECTOR 12P	
		< DIODE >	
D881	8-719-017-98	DIODE MA8200-TX	
D882	8-719-017-98	DIODE MA8200-TX	
D883	8-719-017-98	DIODE MA8200-TX	
D884	8-719-017-98	DIODE MA8200-TX	
D885	8-719-420-51	DIODE MA729	
D886	8-719-422-43	DIODE MA8051-H	
D887	8-719-422-43	DIODE MA8051-H	
D889	8-719-422-73	DIODE MA8075-L	
		< IC >	
IC801	8-759-331-68	IC uPD16432AGC-011-9EU	
IC881	8-749-925-07	IC RS-30E-T	
		< LIQUID CRYSTAL DISPLAY >	
LCD801	1-810-774-11	DISPLAY PANEL, LIQUID CRYSTAL	
		< PILOT LAMP >	
PL881	1-517-181-41	LAMP, PILOT	
PL882	1-517-181-41	LAMP, PILOT	
PL883	1-517-181-51	LAMP, PILOT	
PL884	1-517-181-51	LAMP, PILOT	
		< TRANSISTOR >	
Q881	8-729-904-66	TRANSISTOR DTD113EK	

Ref. No.	Part No.	Description	Remark
Q882	8-729-904-66	TRANSISTOR DTD113EK	
Q883	8-729-904-66	TRANSISTOR DTD113EK	
Q884	8-729-904-66	TRANSISTOR DTD113EK	
		< RESISTOR >	
		R801-803	
	1-216-647-11	METAL CHIP 680 0.5% 1/10W	
R804	1-216-651-11	METAL CHIP 1K 0.5% 1/10W	
R805	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W	
R806	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W	
R807	1-216-659-11	METAL CHIP 2.2K 0.5% 1/10W	
R808	1-216-663-11	METAL CHIP 3.3K 0.5% 1/10W	
R809	1-216-671-11	METAL CHIP 6.8K 0.5% 1/10W	
R810	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W	
R811	1-208-806-11	METAL GLAZE 10K 2% 1/10W	
R812	1-208-810-11	METAL GLAZE 15K 2% 1/10W	
R813	1-208-814-11	METAL GLAZE 22K 2% 1/10W	
R814	1-208-822-11	METAL GLAZE 47K 2% 1/10W	
		R821-823	
	1-216-647-11	METAL CHIP 680 0.5% 1/10W	
R824	1-216-651-11	METAL CHIP 1K 0.5% 1/10W	
R825	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W	
R826	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W	
R827	1-216-659-11	METAL CHIP 2.2K 0.5% 1/10W	
R828	1-216-663-11	METAL CHIP 3.3K 0.5% 1/10W	
R829	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W	
R830	1-216-671-11	METAL CHIP 6.8K 0.5% 1/10W	
R831	1-208-806-11	METAL GLAZE 10K 2% 1/10W	
R832	1-208-810-11	METAL GLAZE 15K 2% 1/10W	
R833	1-208-814-11	METAL GLAZE 22K 2% 1/10W	
R834	1-208-822-11	METAL GLAZE 47K 2% 1/10W	
R841	1-216-031-00	METAL CHIP 180 5% 1/10W	
R842	1-216-635-11	METAL CHIP 220 0.5% 1/10W	
		R843-845	
	1-216-035-00	METAL CHIP 270 5% 1/10W	
R846	1-216-039-00	METAL CHIP 390 5% 1/10W	
		R847-849	
	1-216-035-00	METAL CHIP 270 5% 1/10W	
R850	1-216-029-00	METAL CHIP 150 5% 1/10W	
R851	1-216-035-00	METAL CHIP 270 5% 1/10W	

CONTROL

MAIN

Ref. No.	Part No.	Description	Remark		
R855-858	1-216-651-11	METAL CHIP	1K	0.5%	1/10W
R861	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R862	1-216-027-00	METAL CHIP	120	5%	1/10W
R863-865	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R866	1-216-037-00	METAL CHIP	330	5%	1/10W
R867-869	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R870	1-216-025-00	METAL CHIP	100	5%	1/10W
R871	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R881	1-216-196-00	METAL GLAZE	820	5%	1/8W
R882-885	1-216-001-00	METAL CHIP	10	5%	1/10W
R886	1-216-025-00	METAL CHIP	100	5%	1/10W
R887	1-216-041-00	METAL CHIP	470	5%	1/10W
R888	1-208-774-11	METAL GLAZE	470	2%	1/10W
R889	1-216-025-00	METAL CHIP	100	5%	1/10W
R890	1-216-295-00	METAL CHIP	0	5%	1/10W
R891-896	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R897	1-216-089-00	METAL CHIP	47K	5%	1/10W
R898	1-216-097-00	METAL CHIP	100K	5%	1/10W
R899	1-216-097-00	METAL CHIP	100K	5%	1/10W
< SWITCH >					
S801	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(OFF)		
S802	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(AF/TA)		
S803	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(TUNER)		
S804	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(MD/CD)		
S805	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(PGM)		
S806	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(SENS, SCRL/BTM)		
S807	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(LIST, PTY)		
S808	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(+ ▶▶ (SEEK AMS))		
S809	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(- ◀◀ (SEEK AMS))		
S810	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(- ◀◀ (PRST DISC))		
S811	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(+ ▶▶ (PRST DISC))		
S812	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(- (LEVEL))		
S813	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(SEL)		
S814	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(+ (LEVEL))		
S815	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(MUTE)		
S821	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(▲)		
S822	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(TAPE ◀▶▶)		
S823	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(DSPL)		
S824	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(DSP)		
S826	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(10)		

Ref. No.	Part No.	Description	Remark		
S827	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(9)		
S828	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(8)		
S829	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(7/□□)		
S830	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(6/BL. SKIP)		
S831	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(1/INTRO)		
S832	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(2/REPEAT)		
S833	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(3/SHUF)		
S834	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(4/BANK)		
S835	1-762-143-11	SWITCH, KEY BOARD (WITH LED)	(5/ATA)		

*	A-3298-546-A	MAIN BOARD, COMPLETE (AEP, UK)			
*	A-3298-548-A	MAIN BOARD, COMPLETE (G)			

*	3-920-605-01	HEAT SINK (IC)			
< BUZZER >					
BZ601	1-504-468-21	SOUNDER, PIEZOELECTRIC			
< CAPACITOR >					
C1	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C2	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C3	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C4	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C6	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C7-9	1-126-933-11	ELECT	100uF	20%	10V
C10	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C11	1-124-234-00	ELECT	22uF	20%	16V
C12	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C13	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C14	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C15	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C16	1-126-157-11	ELECT	10uF	20%	16V
C17	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C18	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C19	1-163-104-00	CERAMIC CHIP	30PF	5%	50V
C20	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C21	1-164-346-11	CERAMIC CHIP	1uF		16V
C22	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V
C23	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V
C24	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C25	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C26	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V
C27	1-104-543-11	FILM CHIP	0.0022uF	5%	50V
C28	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C29	1-124-234-00	ELECT	22uF	20%	16V
C30	1-163-251-11	CERAMIC CHIP	100PF	5%	50V

Ref. No.	Part No.	Description	Remark		
C31	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C32	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C51	1-163-127-00	CERAMIC CHIP	270PF	5%	50V
C52	1-126-157-11	ELECT	10uF	20%	16V
C53	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C54	1-164-182-11	CERAMIC CHIP	0.0033uF	10%	50V
C55	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C56	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C57	1-124-257-00	ELECT	2.2uF	20%	50V
C58	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C61	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C62	1-126-161-11	ELECT	2.2uF	20%	50V
C63	1-126-161-11	ELECT	2.2uF	20%	50V
C64	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V
C65	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V
C66	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C71	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C72	1-126-161-11	ELECT	2.2uF	20%	50V
C73	1-126-161-11	ELECT	2.2uF	20%	50V
C74	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V
C75	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V
C76	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C81	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C81	1-164-344-11	CERAMIC CHIP	0.068uF	10%	25V
				(AEP, UK)	
				(G)	
C82	1-124-463-00	ELECT	0.1uF	20%	50V
C91	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C92	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C101	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C102	1-104-527-11	FILM CHIP	100PF	5%	50V
C103	1-104-527-11	FILM CHIP	100PF	5%	50V
C104	1-136-153-00	FILM	0.01uF	5%	50V
C105	1-104-941-11	ELECT	0.47uF	20%	50V
C106	1-104-543-11	FILM CHIP	0.0022uF	5%	50V
C107	1-104-543-11	FILM CHIP	0.0022uF	5%	50V
C108	1-164-695-11	CERAMIC CHIP	0.0022uF	5%	50V
C109	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C110	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C111	1-126-294-11	ELECT	4.7uF	20%	35V
C151	1-126-294-11	ELECT	4.7uF	20%	35V
C152	1-126-294-11	ELECT	4.7uF	20%	35V
C153	1-104-952-11	ELECT	22uF	20%	16V
C154	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C155	1-104-563-11	FILM CHIP	0.1uF	5%	16V
C156	1-104-543-11	FILM CHIP	0.0022uF	5%	50V
C157	1-104-951-11	ELECT	10uF	20%	16V
C158	1-104-547-11	FILM CHIP	0.0047uF	5%	16V
C159	1-104-951-11	ELECT	10uF	20%	16V

Ref. No.	Part No.	Description	Remark		
C160	1-136-169-00	FILM	0.22uF	5%	50V
C161	1-104-952-11	ELECT	22uF	20%	16V
C162	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C171-173					
	1-126-294-11	ELECT	4.7uF	20%	35V
C174	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C175	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C176	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C181-183					
	1-126-294-11	ELECT	4.7uF	20%	35V
C184	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C185	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C186	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C191	1-126-294-11	ELECT	4.7uF	20%	35V
C192	1-126-294-11	ELECT	4.7uF	20%	35V
C193	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C201	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C202	1-104-527-11	FILM CHIP	100PF	5%	50V
C203	1-104-527-11	FILM CHIP	100PF	5%	50V
C204	1-136-153-00	FILM	0.01uF	5%	50V
C205	1-104-941-11	ELECT	0.47uF	20%	50V
C206	1-104-543-11	FILM CHIP	0.0022uF	5%	50V
C207	1-104-543-11	FILM CHIP	0.0022uF	5%	50V
C208	1-164-695-11	CERAMIC CHIP	0.0022uF	5%	50V
C209	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C210	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C211	1-126-294-11	ELECT	4.7uF	20%	35V
C251	1-126-294-11	ELECT	4.7uF	20%	35V
C252	1-126-294-11	ELECT	4.7uF	20%	35V
C253	1-104-952-11	ELECT	22uF	20%	16V
C254	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C255	1-104-563-11	FILM CHIP	0.1uF	5%	16V
C256	1-104-543-11	FILM CHIP	0.0022uF	5%	50V
C257	1-104-951-11	ELECT	10uF	20%	16V
C258	1-104-547-11	FILM CHIP	0.0047uF	5%	16V
C259	1-104-951-11	ELECT	10uF	20%	16V
C260	1-136-169-00	FILM	0.22uF	5%	50V
C261	1-104-952-11	ELECT	22uF	20%	16V
C262	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C271-273					
	1-126-294-11	ELECT	4.7uF	20%	35V
C274	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C275	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C276	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C281-283					
	1-126-294-11	ELECT	4.7uF	20%	35V
C284	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C285	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C286	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V

MAIN

Ref. No.	Part No.	Description	Remark
C291	1-126-294-11	ELECT 4.7uF	20% 35V
C292	1-126-294-11	ELECT 4.7uF	20% 35V
C293	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V
C301	1-126-301-11	ELECT 1uF	20% 50V
C302	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V
C303	1-163-020-00	CERAMIC CHIP 0.0082uF	10% 50V
C304	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
C305	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
C306	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C307	1-124-463-00	ELECT 0.1uF	20% 50V
C308	1-126-277-11	ELECT 100uF	20% 10V
C309	1-126-157-11	ELECT 10uF	20% 16V
C310	1-126-157-11	ELECT 10uF	20% 16V
C311	1-164-222-11	CERAMIC CHIP 0.22uF	25V
C321	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
C322	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C323	1-104-951-11	ELECT 10uF	20% 16V
C324	1-104-951-11	ELECT 10uF	20% 16V
C331	1-164-222-11	CERAMIC CHIP 0.22uF	25V
C332	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C333	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C334	1-126-157-11	ELECT 10uF	20% 16V
C336	1-124-234-00	ELECT 22uF	20% 16V
C337	1-126-934-11	ELECT 220uF	20% 16V
C351	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V
C352	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V
C353	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V
C354	1-104-952-11	ELECT 22uF	20% 16V
C355	1-126-277-11	ELECT 100uF	20% 10V
C356	1-163-235-11	CERAMIC CHIP 22PF	5% 50V
C357	1-163-235-11	CERAMIC CHIP 22PF	5% 50V
C358	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V
C359	1-104-952-11	ELECT 22uF	20% 16V
C360	1-104-952-11	ELECT 22uF	20% 16V
C371	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C372	1-104-952-11	ELECT 22uF	20% 16V
C374	1-163-077-00	CERAMIC CHIP 0.1uF	50V
C381	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C382	1-104-952-11	ELECT 22uF	20% 16V
C384	1-163-077-00	CERAMIC CHIP 0.1uF	50V
C391	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V
C392	1-163-077-00	CERAMIC CHIP 0.1uF	50V
C393	1-126-277-11	ELECT 100uF	20% 10V
C501	1-163-229-11	CERAMIC CHIP 12PF	5% 50V
C502	1-163-229-11	CERAMIC CHIP 12PF	5% 50V
C503	1-126-157-11	ELECT 10uF	20% 16V
C504	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C505	1-164-346-11	CERAMIC CHIP 1uF	16V
C541	1-124-234-00	ELECT 22uF	20% 16V

Ref. No.	Part No.	Description	Remark
C542	1-126-301-11	ELECT 1uF	20% 50V
C551	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C552	1-125-705-11	DOUBLE LAYERS 0.22F	5.5V
C553	1-128-057-11	ELECT 330uF	20% 6.3V
C554	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C555	1-124-463-00	ELECT 0.1uF	20% 50V
C558	1-163-077-00	CERAMIC CHIP 0.1uF	50V
C559	1-163-077-00	CERAMIC CHIP 0.1uF	50V
C560	1-163-081-00	CERAMIC CHIP 0.22uF	25V
C561	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
C562	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
C571	1-124-257-00	ELECT 2.2uF	20% 50V
C572	1-163-077-00	CERAMIC CHIP 0.1uF	50V
C573	1-126-934-11	ELECT 220uF	20% 16V
C581	1-124-257-00	ELECT 2.2uF	20% 50V
C582	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C583	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V
C584	1-126-301-11	ELECT 1uF	20% 50V
C585	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
C586	1-163-245-11	CERAMIC CHIP 56PF	5% 50V
C587	1-163-245-11	CERAMIC CHIP 56PF	5% 50V
C603	1-126-163-11	ELECT 4.7uF	20% 50V
C604	1-126-157-11	ELECT 10uF	20% 16V
C605	1-124-234-00	ELECT 22uF	20% 16V
C606	1-128-195-11	ELECT 39uF	20% 25V
C607	1-126-277-11	ELECT 100uF	20% 10V
C608	1-124-589-11	ELECT 47uF	20% 16V
C609	1-124-589-11	ELECT 47uF	20% 16V
C651	1-164-222-11	CERAMIC CHIP 0.22uF	25V
C652	1-124-257-00	ELECT 2.2uF	20% 50V
C701	1-126-294-11	ELECT 4.7uF	20% 35V
C702	1-164-161-11	CERAMIC CHIP 0.0022uF	10% 100V
C703	1-136-165-00	FILM 0.1uF	5% 50V
C704	1-136-165-00	FILM 0.1uF	5% 50V
C705	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
C711	1-126-294-11	ELECT 4.7uF	20% 35V
C712	1-164-161-11	CERAMIC CHIP 0.0022uF	10% 100V
C713	1-136-165-00	FILM 0.1uF	5% 50V
C714	1-136-165-00	FILM 0.1uF	5% 50V
C715	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
C721	1-126-294-11	ELECT 4.7uF	20% 35V
C722	1-164-161-11	CERAMIC CHIP 0.0022uF	10% 100V
C723	1-136-165-00	FILM 0.1uF	5% 50V
C724	1-136-165-00	FILM 0.1uF	5% 50V
C725	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
C731	1-126-294-11	ELECT 4.7uF	20% 35V
C732	1-164-161-11	CERAMIC CHIP 0.0022uF	10% 100V
C733	1-136-165-00	FILM 0.1uF	5% 50V
C734	1-136-165-00	FILM 0.1uF	5% 50V

Ref. No.	Part No.	Description	Remark
C735	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
C751	1-124-584-00	ELECT 100uF	20% 10V
C761	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V
C771	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V
C781	1-111-233-11	ELECT 5600uF	20% 16V
C782	1-136-173-00	FILM 0.47uF	5% 50V
C783	1-104-951-11	ELECT 10uF	20% 16V
C784	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C785-787			
	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
C788	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C791	1-163-077-00	CERAMIC CHIP 0.1uF	50V
C906-909			
	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
C910	1-163-063-00	CERAMIC CHIP 0.022uF	10% 50V
C911	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
C912	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C913	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V
C914	1-164-315-11	CERAMIC CHIP 470PF	5% 50V
C999	1-126-157-11	ELECT 10uF	20% 16V

< CONNECTOR >

CNJ571	1-580-907-31	PLUG, CONNECTOR (BUS CONTROL IN)
CNP301	1-766-260-11	CONNECTOR, FFC/FPC (ZIF) 7P
* CNP331	1-506-995-11	PIN, CONNECTOR (PC BOARD) 13P
CNP781	1-764-426-11	PLUG, CONNECTOR 15P
CNP791	1-770-284-21	PLUG, CONNECTOR (PC BOARD)
CNP851	1-764-422-11	PLUG, CONNECTOR 12P

< DISCHARGE GAP >

CP1	1-519-504-11	GAP, DISCHARGE
-----	--------------	----------------

< DIODE >

D3	8-719-040-04	DIODE MA721WK-(TX)
D4	8-719-422-49	DIODE MA8056-L
D21	8-719-422-97	DIODE MA8091-M
D301	8-719-404-46	DIODE MA110
D321	8-719-422-12	DIODE MA8039
D331	8-719-034-63	DIODE MA4091-H(QZ)
D332	8-719-050-86	DIODE 1SS133T-91S
D501	8-719-400-20	DIODE MA152WA
D502	8-719-404-46	DIODE MA110
D503	8-719-801-78	DIODE 1SS184
D504	8-719-801-78	DIODE 1SS184
D543	8-719-034-22	DIODE MA4039-M(QZ)
D544	8-719-404-46	DIODE MA110
D551	8-719-404-46	DIODE MA110
D552	8-719-041-79	DIODE MA721WA-TX

Ref. No.	Part No.	Description	Remark
D553	8-719-400-20	DIODE MA152WA	
D554	8-719-034-46	DIODE MA4062-M(QZ)	
D555	8-719-034-46	DIODE MA4062-M(QZ)	
D561	8-719-034-46	DIODE MA4062-M(QZ)	
D562	8-719-034-46	DIODE MA4062-M(QZ)	
D563	8-719-034-46	DIODE MA4062-M(QZ)	
D564	8-719-404-46	DIODE MA110	
D571	8-719-034-46	DIODE MA4062-M(QZ)	
D572	8-719-034-49	DIODE MA4068-L(QZ)	
D573	8-719-034-46	DIODE MA4062-M(QZ)	
D574	8-719-034-46	DIODE MA4062-M(QZ)	
D575	8-719-050-86	DIODE 1SS133T-91S	
D581	8-719-404-46	DIODE MA110	
D602	8-719-022-90	DIODE MA8160-M	
D603	8-719-422-64	DIODE MA8062-M	
D651	8-719-034-66	DIODE MA4100-M(QZ)	
D652	8-719-034-46	DIODE MA4062-M(QZ)	
D654	8-719-034-46	DIODE MA4062-M(QZ)	
D655	8-719-034-46	DIODE MA4062-M(QZ)	
D656	8-719-034-46	DIODE MA4062-M(QZ)	

D657	8-719-034-46	DIODE MA4062-M(QZ)
D701	8-719-053-18	DIODE 1SR154-400TE-25
D711	8-719-053-18	DIODE 1SR154-400TE-25
D751	8-719-050-86	DIODE 1SS133T-91S
D781	8-719-034-46	DIODE MA4062-M(QZ)
D782	8-719-034-98	DIODE MA4200-M(QZ)
D783	8-719-049-38	DIODE 1N5404TU
D901	8-719-053-18	DIODE 1SR154-400TE-25
D999	8-719-050-86	DIODE 1SS133T-91S

< IC >

IC11	8-759-823-81	IC LC7216M
IC21	8-759-242-66	IC TC4W66F
IC51	8-759-163-63	IC TDA7330BD-013TR
IC301	8-759-160-99	IC HA12174
IC321	8-759-331-72	IC NJM4558E-D(TEZ)
IC331	8-759-823-87	IC LB1638M
IC351	8-752-071-19	IC CXA1946Q
IC352	8-759-711-85	IC NJM4580E-D
IC371	8-759-262-37	IC TA2050F(EL)
IC381	8-759-262-37	IC TA2050F(EL)
IC391	8-752-068-73	IC CXA1846M-T6
IC501	8-759-333-09	IC uPD78056GC-060-3B9
IC531	8-759-167-83	IC PST600EMT-T1
IC551	8-759-351-21	IC MN1883220S2J
IC571	8-759-096-16	IC MM1175XFF
IC601	8-759-182-75	IC BA3910B-V2
IC781	8-759-260-77	IC HA13150A

MAIN

Ref. No.	Part No.	Description	Remark
< JACK >			
J1	1-764-808-11	JACK (ANTENNA)	
J561	1-566-822-11	JACK (REMOTE IN)	
< JUMPER RESISTOR >			
JC501	1-216-295-00	METAL CHIP	0 5% 1/10W
JC502	1-216-295-00	METAL CHIP	0 5% 1/10W
JC901	1-216-295-00	METAL CHIP	0 5% 1/10W
< COIL >			
L3	1-414-146-31	INDUCTOR	2. 2uH
L4	1-414-146-31	INDUCTOR	2. 2uH
L11	1-410-509-11	INDUCTOR	10uH
L31	1-410-196-11	INDUCTOR CHIP	2. 2uH
L51	1-410-509-11	INDUCTOR	10uH
L501	1-410-509-11	INDUCTOR	10uH
L581	1-410-509-11	INDUCTOR	10uH
< TRANSISTOR >			
Q1	8-729-421-22	TRANSISTOR	UN2211
Q2	8-729-424-08	TRANSISTOR	UN2111
Q3	8-729-106-68	TRANSISTOR	2SD1615A-GP
Q5	8-729-230-49	TRANSISTOR	2SC2712-YG
Q21	8-729-021-94	TRANSISTOR	2SK1657-T1B
Q22	8-729-106-68	TRANSISTOR	2SD1615A-GP
Q23	8-729-421-22	TRANSISTOR	UN2211
Q52	8-729-020-67	TRANSISTOR	XN1A312-TX
Q61	8-729-424-70	TRANSISTOR	UN2217
Q71	8-729-424-70	TRANSISTOR	UN2217
Q81	8-729-424-70	TRANSISTOR	UN2217
Q171	8-729-920-21	TRANSISTOR	DTC314TKH04
Q181	8-729-920-21	TRANSISTOR	DTC314TKH04
Q191	8-729-920-21	TRANSISTOR	DTC314TKH04
Q271	8-729-920-21	TRANSISTOR	DTC314TKH04
Q281	8-729-920-21	TRANSISTOR	DTC314TKH04
Q291	8-729-920-21	TRANSISTOR	DTC314TKH04
Q321	8-729-020-67	TRANSISTOR	XN1A312-TX
Q331	8-729-015-11	TRANSISTOR	2SD1802FAST-TL
Q332	8-729-424-08	TRANSISTOR	UN2111
Q334	8-729-106-60	TRANSISTOR	2SB1115A-YQ
Q501	8-729-421-22	TRANSISTOR	UN2211
Q502	8-729-230-49	TRANSISTOR	2SC2712-YG
Q503	8-729-230-49	TRANSISTOR	2SC2712-YG
Q504	8-729-421-22	TRANSISTOR	UN2211
Q505	8-729-421-22	TRANSISTOR	UN2211
Q541	8-729-021-94	TRANSISTOR	2SK1657-T1B
Q542	8-729-424-08	TRANSISTOR	UN2111
Q543	8-729-021-94	TRANSISTOR	2SK1657-T1B

Ref. No.	Part No.	Description	Remark
Q551	8-729-424-08	TRANSISTOR	UN2111
Q552	8-729-424-08	TRANSISTOR	UN2111
Q571	8-729-424-08	TRANSISTOR	UN2111
Q572	8-729-230-49	TRANSISTOR	2SC2712-YG
Q603	8-729-421-22	TRANSISTOR	UN2211
Q606	8-729-230-49	TRANSISTOR	2SC2712-YG
Q651	8-729-106-60	TRANSISTOR	2SB1115A-YQ
Q652	8-729-421-22	TRANSISTOR	UN2211
Q653	8-729-106-60	TRANSISTOR	2SB1115A-YQ
Q654	8-729-421-22	TRANSISTOR	UN2211
Q655	8-729-030-18	TRANSISTOR	2SD2525
Q656	8-729-424-08	TRANSISTOR	UN2111
< RESISTOR >			
R3	1-216-651-11	METAL CHIP	1K 0.5% 1/10W
R5	1-216-119-00	METAL CHIP	820K 5% 1/10W
R6	1-216-113-00	METAL CHIP	470K 5% 1/10W
R7	1-216-041-00	METAL CHIP	470 5% 1/10W
R8	1-208-806-11	METAL GLAZE	10K 2% 1/10W
R9	1-216-667-11	METAL CHIP	4. 7K 0.5% 1/10W
R10	1-216-647-11	METAL CHIP	680 0.5% 1/10W
R11	1-216-651-11	METAL CHIP	1K 0.5% 1/10W
R12	1-216-659-11	METAL CHIP	2. 2K 0.5% 1/10W
R13	1-216-663-11	METAL CHIP	3. 3K 0.5% 1/10W
R14	1-208-806-11	METAL GLAZE	10K 2% 1/10W
R15	1-216-659-11	METAL CHIP	2. 2K 0.5% 1/10W
R21	1-208-806-11	METAL GLAZE	10K 2% 1/10W
R22	1-216-667-11	METAL CHIP	4. 7K 0.5% 1/10W
R23	1-216-089-00	METAL CHIP	47K 5% 1/10W
R24	1-216-089-00	METAL CHIP	47K 5% 1/10W
R25	1-208-806-11	METAL GLAZE	10K 2% 1/10W
R26	1-216-651-11	METAL CHIP	1K 0.5% 1/10W
R27	1-216-651-11	METAL CHIP	1K 0.5% 1/10W
R28	1-216-659-11	METAL CHIP	2. 2K 0.5% 1/10W
R29	1-216-037-00	METAL CHIP	330 5% 1/10W
R53	1-216-659-11	METAL CHIP	2. 2K 0.5% 1/10W
R54	1-216-129-00	METAL CHIP	2. 2M 5% 1/10W
R61	1-216-671-11	METAL CHIP	6. 8K 0.5% 1/10W
R62	1-216-673-11	METAL CHIP	8. 2K 0.5% 1/10W
R62	1-208-814-11	METAL GLAZE	22K 2% 1/10W (G)
R63	1-216-673-11	METAL CHIP	8. 2K 0.5% 1/10W
R64	1-216-673-11	METAL CHIP	8. 2K 0.5% 1/10W
R65	1-216-687-11	METAL CHIP	33K 0.5% 1/10W
R66	1-216-687-11	METAL CHIP	33K 0.5% 1/10W
R67	1-216-649-11	METAL CHIP	820 0.5% 1/10W
R68	1-208-822-11	METAL GLAZE	47K 2% 1/10W
R71	1-216-671-11	METAL CHIP	6. 8K 0.5% 1/10W

Ref. No.	Part No.	Description	Remark		
R72	1-216-673-11	METAL CHIP	8.2K	0.5%	1/10W (AEP, UK)
R72	1-208-814-11	METAL GLAZE	22K	2%	1/10W (G)
R73	1-216-673-11	METAL CHIP	8.2K	0.5%	1/10W
R74	1-216-673-11	METAL CHIP	8.2K	0.5%	1/10W
R75	1-216-687-11	METAL CHIP	33K	0.5%	1/10W
R76	1-216-687-11	METAL CHIP	33K	0.5%	1/10W
R77	1-216-649-11	METAL CHIP	820	0.5%	1/10W
R78	1-208-822-11	METAL GLAZE	47K	2%	1/10W
R81	1-216-663-11	METAL CHIP	3.3K	0.5%	1/10W (AEP, UK)
R81	1-216-651-11	METAL CHIP	1K	0.5%	1/10W (G)
R82	1-208-806-11	METAL GLAZE	10K	2%	1/10W (AEP, UK)
R82	1-208-822-11	METAL GLAZE	47K	2%	1/10W (G)
R101	1-216-685-11	METAL CHIP	27K	0.5%	1/10W
R102	1-216-685-11	METAL CHIP	27K	0.5%	1/10W
R103	1-208-812-11	METAL GLAZE	18K	2%	1/10W
R104	1-216-677-11	METAL CHIP	12K	0.5%	1/10W
R105	1-218-764-11	METAL GLAZE	330K	2%	1/10W
R106	1-208-814-11	METAL GLAZE	22K	2%	1/10W
R107	1-208-776-11	METAL GLAZE	560	2%	1/10W
R108	1-216-667-11	METAL CHIP	4.7K	0.5%	1/10W
R109	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R151	1-208-810-11	METAL GLAZE	15K	2%	1/10W
R152	1-216-687-11	METAL CHIP	33K	0.5%	1/10W
R153	1-208-810-11	METAL GLAZE	15K	2%	1/10W
R154	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R171	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R172	1-208-822-11	METAL GLAZE	47K	2%	1/10W
R173	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R174	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R175	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R176	1-216-663-11	METAL CHIP	3.3K	0.5%	1/10W
R177	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R181	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R182	1-208-822-11	METAL GLAZE	47K	2%	1/10W
R183	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R184	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R185	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R186	1-216-663-11	METAL CHIP	3.3K	0.5%	1/10W
R187	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R191	1-216-687-11	METAL CHIP	33K	0.5%	1/10W
R192	1-208-814-11	METAL GLAZE	22K	2%	1/10W
R193	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R194	1-208-822-11	METAL GLAZE	47K	2%	1/10W
R201	1-216-685-11	METAL CHIP	27K	0.5%	1/10W
R202	1-216-685-11	METAL CHIP	27K	0.5%	1/10W
R203	1-208-812-11	METAL GLAZE	18K	2%	1/10W

Ref. No.	Part No.	Description	Remark		
R204	1-216-677-11	METAL CHIP	12K	0.5%	1/10W
R205	1-218-764-11	METAL GLAZE	330K	2%	1/10W
R206	1-208-814-11	METAL GLAZE	22K	2%	1/10W
R207	1-208-776-11	METAL GLAZE	560	2%	1/10W
R208	1-216-667-11	METAL CHIP	4.7K	0.5%	1/10W
R209	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R251	1-208-810-11	METAL GLAZE	15K	2%	1/10W
R252	1-216-687-11	METAL CHIP	33K	0.5%	1/10W
R253	1-208-810-11	METAL GLAZE	15K	2%	1/10W
R254	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R271	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R272	1-208-822-11	METAL GLAZE	47K	2%	1/10W
R273	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R274	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R275	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R276	1-216-663-11	METAL CHIP	3.3K	0.5%	1/10W
R277	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R281	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R282	1-208-822-11	METAL GLAZE	47K	2%	1/10W
R283	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R284	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R285	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R286	1-216-663-11	METAL CHIP	3.3K	0.5%	1/10W
R287	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R291	1-216-687-11	METAL CHIP	33K	0.5%	1/10W
R292	1-208-814-11	METAL GLAZE	22K	2%	1/10W
R293	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R294	1-208-822-11	METAL GLAZE	47K	2%	1/10W
R301	1-208-812-11	METAL GLAZE	18K	2%	1/10W
R302	1-216-687-11	METAL CHIP	33K	0.5%	1/10W
R303	1-208-812-11	METAL GLAZE	18K	2%	1/10W
R304	1-216-097-00	METAL CHIP	100K	5%	1/10W
R305	1-218-764-11	METAL GLAZE	330K	2%	1/10W
R306	1-216-113-00	METAL CHIP	470K	5%	1/10W
R307	1-216-097-00	METAL CHIP	100K	5%	1/10W
R321	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R322	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R331	1-216-651-11	METAL CHIP	1K	0.5%	1/10W
R332	1-220-149-11	METAL GLAZE	2.2	10%	1/2W
R333	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R334	1-216-663-11	METAL CHIP	3.3K	0.5%	1/10W
R351	1-216-667-11	METAL CHIP	4.7K	0.5%	1/10W
R352	1-216-667-11	METAL CHIP	4.7K	0.5%	1/10W
R353	1-208-814-11	METAL GLAZE	22K	2%	1/10W
R354	1-208-814-11	METAL GLAZE	22K	2%	1/10W
R355	1-208-810-11	METAL GLAZE	15K	2%	1/10W
R356	1-208-810-11	METAL GLAZE	15K	2%	1/10W
R371	1-208-774-11	METAL GLAZE	470	2%	1/10W
R381	1-208-774-11	METAL GLAZE	470	2%	1/10W

MAIN

Ref. No.	Part No.	Description	Remark		
R506	1-216-097-00	METAL CHIP	100K	5%	1/10W
R507	1-208-814-11	METAL GLAZE	22K	2%	1/10W
R508-513					
	1-216-097-00	METAL CHIP	100K	5%	1/10W
R514	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R515	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R516	1-208-822-11	METAL GLAZE	47K	2%	1/10W
R517	1-218-760-11	METAL GLAZE	220K	2%	1/10W
R518	1-208-822-11	METAL GLAZE	47K	2%	1/10W
R519	1-218-760-11	METAL GLAZE	220K	2%	1/10W
R520	1-216-097-00	METAL CHIP	100K	5%	1/10W
R521	1-208-814-11	METAL GLAZE	22K	2%	1/10W
R522	1-208-822-11	METAL GLAZE	47K	2%	1/10W
R523	1-216-097-00	METAL CHIP	100K	5%	1/10W
R524	1-208-814-11	METAL GLAZE	22K	2%	1/10W
R525	1-208-814-11	METAL GLAZE	22K	2%	1/10W
R526	1-216-295-00	METAL CHIP	0	5%	1/10W
R528	1-216-037-00	METAL CHIP	330	5%	1/10W
R529	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R530	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R531-535					
	1-216-097-00	METAL CHIP	100K	5%	1/10W
R536	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R537-539					
	1-216-097-00	METAL CHIP	100K	5%	1/10W
R542	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R551-553					
	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R554	1-208-774-11	METAL GLAZE	470	2%	1/10W
R555	1-216-025-00	METAL CHIP	100	5%	1/10W
R561	1-216-025-00	METAL CHIP	100	5%	1/10W
R562	1-216-025-00	METAL CHIP	100	5%	1/10W
R563	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R571	1-216-001-00	METAL CHIP	10	5%	1/10W
R572	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R573	1-216-025-00	METAL CHIP	100	5%	1/10W
R574	1-216-025-00	METAL CHIP	100	5%	1/10W
R575	1-208-822-11	METAL GLAZE	47K	2%	1/10W
R576	1-216-097-00	METAL CHIP	100K	5%	1/10W
R581	1-216-651-11	METAL CHIP	1K	0.5%	1/10W
R582-584					
	1-216-097-00	METAL CHIP	100K	5%	1/10W
R588	1-216-097-00	METAL CHIP	100K	5%	1/10W (G)
R589	1-216-097-00	METAL CHIP	100K	5%	1/10W
R590	1-216-097-00	METAL CHIP	100K	5%	1/10W
(AEP, UK)					
R591	1-216-097-00	METAL CHIP	100K	5%	1/10W
R593	1-216-097-00	METAL CHIP	100K	5%	1/10W
R594	1-216-097-00	METAL CHIP	100K	5%	1/10W
R596	1-216-097-00	METAL CHIP	100K	5%	1/10W

Ref. No.	Part No.	Description	Remark		
R601	1-216-651-11	METAL CHIP	1K	0.5%	1/10W
R606	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R607	1-216-089-00	METAL CHIP	47K	5%	1/10W
R608	1-216-089-00	METAL CHIP	47K	5%	1/10W
R651	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R652	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R653-656					
	1-216-162-00	METAL GLAZE	33	5%	1/8W
R657	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R658	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R660	1-216-651-11	METAL CHIP	1K	0.5%	1/10W
R661-664					
	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R665	1-216-025-00	METAL CHIP	100	5%	1/10W
R666	1-216-025-00	METAL CHIP	100	5%	1/10W
R667	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R668	1-208-806-11	METAL GLAZE	10K	0.50%	1/10W
R669	1-208-806-11	METAL GLAZE	10K	0.50%	1/10W
R670	1-218-478-11	METAL GLAZE	330	5%	1/4W
R671	1-218-478-11	METAL GLAZE	330	5%	1/4W
R701	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R702	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R703	1-216-298-00	METAL CHIP	2.2	5%	1/10W
R704	1-216-298-00	METAL CHIP	2.2	5%	1/10W
R711	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R712	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R713	1-216-298-00	METAL CHIP	2.2	5%	1/10W
R714	1-216-298-00	METAL CHIP	2.2	5%	1/10W
R721	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R722	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R723	1-216-298-00	METAL CHIP	2.2	5%	1/10W
R724	1-216-298-00	METAL CHIP	2.2	5%	1/10W
R731	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R732	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R733	1-216-298-00	METAL CHIP	2.2	5%	1/10W
R734	1-216-298-00	METAL CHIP	2.2	5%	1/10W
R751	1-216-671-11	METAL CHIP	6.8K	0.5%	1/10W
R752	1-216-671-11	METAL CHIP	6.8K	0.5%	1/10W
R761	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R762	1-216-655-11	METAL CHIP	1.5K	0.5%	1/10W
R771	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R772	1-216-655-11	METAL CHIP	1.5K	0.5%	1/10W
R781	1-216-121-00	METAL CHIP	1M	5%	1/10W
R782	1-216-651-11	METAL CHIP	1K	0.5%	1/10W
R783	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R784	1-208-806-11	METAL GLAZE	10K	2%	1/10W
R901	1-216-097-00	METAL CHIP	100K	5%	1/10W
R998	1-216-296-00	METAL CHIP	0	5%	1/8W

Ref.No.	Part No.	Description	Remark
		< NETWORK RESISTOR >	
RB501	1-239-426-11	NETWORK RESISTOR (CHIP) 2.2KX4	
		< VARIABLE RESISTOR >	
RV1	1-238-861-11	RES, ADJ, CERMET 470K	
RV101	1-238-852-11	RES, ADJ, CERMET 470	
RV201	1-238-852-11	RES, ADJ, CERMET 470	
		< SWITCH >	
S501	1-571-478-11	SWITCH, SLIDE (POWER SELECT)	
S551	1-692-431-21	SWITCH, TACTILE (RESET)	
S791	1-762-284-11	SWITCH, SLIDE (LINE OUT/IN SELECT)	
		< TUNER >	
TU1	A-3282-003-A	TUNER UNIT (TUX-001A)	
		< VIBRATOR >	
X11	1-577-126-51	VIBRATOR, CRYSTAL (7.2MHz)	
X51	1-760-556-11	VIBRATOR, CRYSTAL (4.3MHz)	
X501	1-760-489-11	VIBRATOR, CERAMIC (5MHz)	
X502	1-579-886-21	VIBRATOR, CRYSTAL (32.67kHz)	
X581	1-579-952-21	VIBRATOR, CERAMIC (8MHz)	

XR-C720RDS

9-959-952-81

**Sony Corporation
Mobile Electronics Company**

—24—

English
95E0455-1
Printed in Japan
© 1995. 5

**Published by Home A & V Products Div.
Quality Engineering Dept.**

