

DVP-F5/FX1

RMT-D114A

SERVICE MANUAL

Self Diagnosis
Supported model


DVD
VIDEO

COMPACT
disc
DIGITAL VIDEO



Photo: DVP-FX1

US Model
Canadian Model
AEP Model
UK Model
Chinese Model
DVP-FX1/F5
Hong Kong Model
DVP-FX1
Australian Model
DVP-F5

Manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.

SPECIFICATIONS

CD/DVD player

Laser
Semiconductor laser
Signal format system
NTSC

Audio characteristics

Frequency response
DVD (PCM 96 kHz): 4 Hz to 44 kHz (± 1 dB)*
DVD (PCM 48 kHz): 4 Hz to 22 kHz (± 0.5 dB)*
CD: 4 Hz to 20 kHz (± 0.5 dB)*
Signal-to-noise ratio
More than 115 dB
(AUDIO OUT connectors only)
Harmonic distortion
Less than 0.005 %*
Dynamic range
More than 99 dB* (DVD)
More than 98 dB* (CD)
Wow and flutter
Less than detected value*
($\pm 0.001\%$ W PEAK)
Speaker output level
More than 1 W + 1 W

* The signals from AUDIO OUT connectors are measured. When you play PCM sound tracks with a 96 kHz sampling frequency, the output signals from the OPTICAL OUT are converted to 48 kHz (sampling frequency).

General

Power requirements
Power supply jack
DC IN 10V jack accepts the AC-FX1 AC power adaptor (supplied),
100-240 V AC, 50/60 Hz
Battery pack (supplied with DVP-FX1 only)
Power consumption
10 W (DVP-FX1, DVD VIDEO playback with the LCD screen turned on)
5 W (DVP-F5, DVD VIDEO playback)
0.1 W (DVP-FX1/F5, standby)
Dimensions (approx.)
189 × 26.1 × 137 mm
(7 1/2 × 1 1/16 × 5 1/2 in.) (DVP-FX1)
189 × 16 × 137 mm
(7 1/2 × 21/32 × 5 1/2 in.) (DVP-F5)
(w/h/d) incl. projecting parts
Mass (approx.)
641 g (1 lb 7 oz) (DVP-FX1)
308 g (11 oz) (DVP-F5)
Operating temperature
41 °F to 95 °F (5 °C to 35 °C)
Operating humidity
5% to 80%

PORTABLE CD/DVD PLAYER

SONY®

Outputs and inputs

	Jack type	Output level	Input level*	Load impedance
AUDIO	Stereo mini jack	2 Vrms (at 50 kilohms)	2 Vrms	Over 10 kilohms
OPTICAL OUT	Optical output connector	-18 dBm		Wave length: 660 nm
VIDEO	Mini jack	1.0 Vp-p	1.0 Vp-p	75 ohms, sync negative
S VIDEO OUT	4-pin mini DIN	Y: 1.0 Vp-p C: 0.286 Vp-p		75 ohms, sync negative 75 ohms terminated
PHONES	Stereo mini jack	12 mW + 12 mW		32 ohms

* DVP-FX1 only

Supplied accessories

See page 1-3.

Optional accessories

- Battery pack
NP-FX1
- AV cordless IR transmitter
IFV-FX1
- Optical digital connecting cord
POC-15B/15AB
- AV cordless IR receiver
IFT-R20

Some accessories may not be available depending on the area.

Design and specifications are subject to change without notice.

CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/ DVD player is harmful to eyes, do not attempt to disassemble the cabinet.

Refer servicing to qualified personnel only.



This label is located on the bottom enclosure (Laser protective housing).

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFÉS PAR UNE MARQUE \triangle SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

与安全有关的零部件须知

在原理图上用阴影及 \triangle 标记来识别的零部件在安全操作上是具有关键性的。这些零部件要用本手册中所示的部件号对应的索尼零部件进行更换。

在安全操作上具有关键性的电路调整与索尼公司出版的维修手册完全一致。在更换关键零部件时或怀疑动作失常时，请进行这些调整操作。

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer.

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, through functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.
6. Flexible Circuit Board Repairing
 - Keep the temperature of the soldering iron around 270°C during repairing.
 - Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
 - Be careful not to apply force on the conductor when soldering or unsoldering.

TABLE OF CONTENTS

1. GENERAL

About this manual	1-1
This Player Can Play the Following Discs	1-1
Precautions	1-2
Notes about the Discs	1-2
Getting Started	
Unpacking	1-3
Using the LCD Screen (DVP-FX1 only)	1-3
TV Hookups	1-3
Receiver (Amplifier) Hookups	1-4
5.1 Channel Surround Hookups	1-5
Connecting the AC Power Adapter	1-6
Using the Rechargeable Battery Pack	1-6
Selecting the Language for the On-Screen Display	1-6
Playing discs	
Playing discs	1-7
Searching for a Particular Point on a Disc	1-8
Resuming Playback from the Point Where You Stopped the Disc (Resume Play)	1-8
Using the DVD's Menu	1-9
Playing VIDEO CDs with PBC Functions (PBC Playback)	1-9
Using the Display Window	1-10
Using Various Functions with the Control Menu	
Using the Control Menu Display	1-11
Control Menu Item List	1-11
Searching for a Title/Chapter/Track/Index/Scene	1-12
Checking the Playing Time and Remaining Time	1-12
Selecting a Starting Point Using the Time Code	1-12
Viewing the Disc Information	1-13
Checking the Sound	1-13
Displaying the Subtitles	1-14
Changing the Angles	1-14
Digital Cinema Sound Settings	1-14
Checking the Play Information	1-15
Locking Discs (Custom Parental Control)	1-16
Creating Your Own Program (Program Play)	1-16
Playing in Random Order (Shuffle Play)	1-17
Playing Repeatedly (Repeat Play)	1-18
Repeating a Specific Portion (A-B Repeat)	1-18
Settings and Adjustments	
Using the Setup Display	1-18
Setup Display Item List	1-19
Setting the Display Language or Sound Track (LANGUAGE SETUP)	1-19
Settings for the Display (SCREEN SETUP)	1-20
Custom Settings (CUSTOM SETUP)	1-21
Settings for the Sound (AUDIO SETUP)	1-22
Preventing the Buttons from being Pressed Accidentally	1-23
Additional Operations	
Listening with Headphones	1-23
Watching the Picture without Connecting Cables -LASER LINK	1-23
Watching the Picture of Other Equipment on the LCD Screen (DVP-FX1 only)	1-24
Additional Information	
Troubleshooting	1-24
Self-diagnosis Function	1-26
Language Code List	1-26
Index to Parts and Controls	1-26
2. DISASSEMBLY	
2-1. Cabinet Assy-1	2-1
2-2. Cabinet Assy-2	2-1
2-3. Cabinet Assy-3	2-1

2-4. CD, LID	2-2
2-5. MB-90 Board, LC-68 Board, MD Comple	2-2
2-6. Display Panel (FX1)	2-3

3. BLOCK DIAGRAMS

3-1. OVERALL BLOCK DIAGRAM (1/2)	3-1
3-2. OVERALL BLOCK DIAGRAM (2/2)	3-3
3-3. VIDEO OUT BLOCK DIAGRAM	3-5
3-4. RF BLOCK DIAGRAM (1/2)	3-7
3-5. RF BLOCK DIAGRAM (2/2)	3-9
3-6. AUDIO BLOCK DIAGRAM	3-11
3-7. LCD BLOCK DIAGRAM	3-13
3-8. POWER BLOCK DIAGRAM (1/2)	3-15
3-9. POWER BLOCK DIAGRAM (2/2)	3-17

4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. FRAME SCHEMATIC DIAGRAMS	4-1
4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS	4-4
• LC-68 (LCD) PRINTED WIRING BOARD	4-5
• LC-68 (LCD) SCHEMATIC DIAGRAM	4-6
• MB-90 (RF, VIDEO, AUDIO, SERVO, SYSTEM CONTROL) PRINTED WIRING BOARD	4-7
• MB-90 (1/12)(DC-DC CONVERTER) SCHEMATIC DIAGRAM	4-11
• MB-90 (2/12)(D/D CONV, BATT, CHG) SCHEMATIC DIAGRAM	4-13
• MB-90 (3/12)(SIGNAL PROCESSOR) SCHEMATIC DIAGRAM	4-15
• MB-90 (4/12)(SERVO (1)) SCHEMATIC DIAGRAM	4-17
• MB-90 (5/12)(SERVO, DSP) SCHEMATIC DIAGRAM	4-19
• MB-90 (6/12)(ARP, DRAM) SCHEMATIC DIAGRAM	4-21
• MB-90 (7/12)(AV DECODER) SCHEMATIC DIAGRAM	4-23
• MB-90 (8/12)(16M SDRAM) SCHEMATIC DIAGRAM	4-25
• MB-90 (9/12)(SYSTEM CONTROL) SCHEMATIC DIAGRAM	4-27
• MB-90 (10/12)(IF CONTROLLER) SCHEMATIC DIAGRAM	4-29
• MB-90 (11/12)(AUDIO IN/OUT) SCHEMATIC DIAGRAM	4-31
• MB-90 (12/12)(VIDEO IN/OUT SELECT) SCHEMATIC DIAGRAM	4-33
• MB-90 WAVEFORMS	4-35
• TP-61 (1/3)(DC-DC CONVERTER) SCHEMATIC DIAGRAM	4-39
• TP-61 (2/3)(RGB DECODER) SCHEMATIC DIAGRAM	4-41
• TP-61 (3/3)(TIMING GENERATOR) SCHEMATIC DIAGRAM	4-43
• TP-61 (TIMING GEN, RGB DECODER) PRINTED WIRING BOARD	4-45
• TP-61 WAVEFORMS	4-47

5. IC PIN FUNCTION

5-1. SYSTEM CONTROL (MB-90 BOARD IC002: MB91107PFV-G-BEN)	5-1
5-2. IF CONTROL (MB-90 BOARD IC701: M37513MB-055GP)	5-3

6. TEST MODE

6-1. GENERAL DESCRIPTION 6-1
6-2. STARTING TEST MODE 6-1
6-3. SYSCON DIAGNOSIS 6-1
6-4. DRIVE AUTO ADJUSTMENT 6-5
6-5. DRIVE MANUAL OPERATION 6-7
6-6. EVR ADJUSTMENT 6-9
6-7. EMERGENCY HISTORY 6-11
6-8. VERSION INFORMATION 6-12
6-9. VIDEO LEVEL ADJUSTMENT 6-12
6-10. SELF-DIAGNOSIS OF IF CONTROLLER 6-12

7. ELECTRICAL ADJUSTMENT

7-1. POWER SUPPLY BLOCK (TP-61 BOARD)..... 7-1
7-2. SYSTEM CONTROL ADJUSTMENT
(TP-61 BOARD) 7-2
7-3. VIDEO SYSTEM ADJUSTMENT 7-2
7-4. ARRANGEMENT DIAGRAM FOR ADJUSTMENT
PARTS 7-4

8. REPAIR PARTS LIST

8-1. EXPLODED VIEWS 8-1
8-2. ELECTRICAL PARTS LIST 8-7

SERVICE NOTES

1. REPLACING OPTICAL PICK-UP


1-1. Handling

1) A red laser diode for DVD requires more attention to static electricity than general infrared laser diodes for CD. Because its durability to static electricity is far weaker than that of infrared laser diodes, always use an earth band when handling the optical pick-up block as service parts.

2) The optical pick-up of the DVP-F5/FX1 cannot be replaced as a single part. It is supplied as the MD COMPLE (DVDM-FX1).


Note: When the MD COMPLE is going to be replaced, be very careful not to damage the flexible board to peel off the flexible board because the flexible board is attached underneath the cabinet by the double-sided adhesive tape.

3) When handling the MD COMPLE (DVDM-FX1), be careful not to touch the portions specified in the illustration of the MD COMPLE with hand. Be sure to hold the hatched portions described as "HOLD" in the illustration.

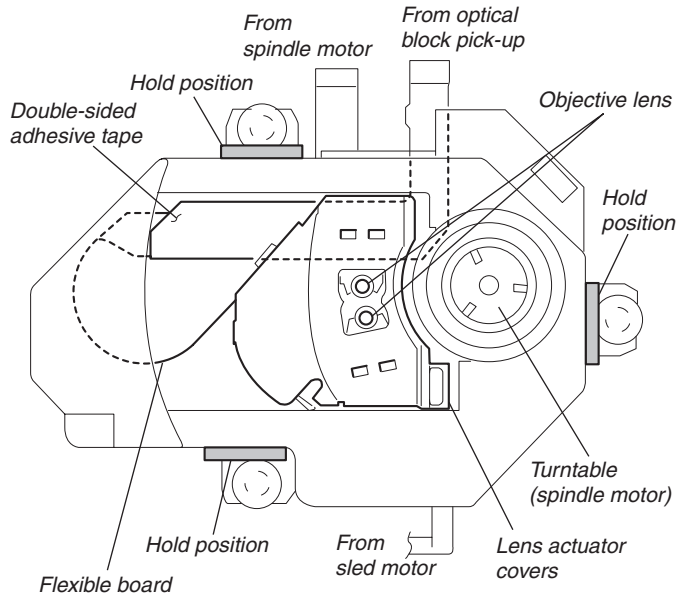


1-2. Connection of the DM flexible extension board (J-6090-101-A) for service

For any attempt is going to be made to inspect, check and adjust the MB-90 board, connect the DM flexible extension board as shown below.

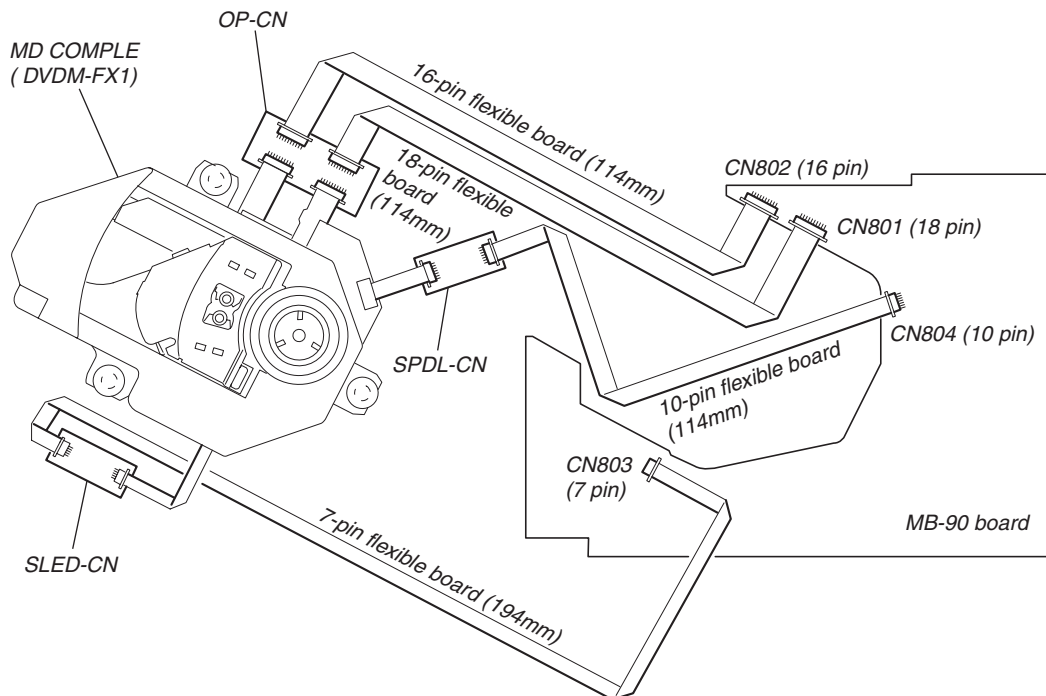

Self-diagnosis Function

When the self-diagnosis function activates to prevent the player from malfunctioning, a five-character service number (combination of a letter and digits) flashes on the screen and on the display window. In this case, check the following table.

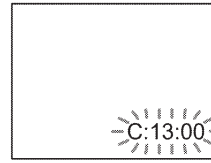

First three characters	Cause and/or Corrective Action
C13	<ul style="list-style-type: none"> The disc is dirty. ➔ Clean the disc with a cleaning cloth (page 12).
C31	<ul style="list-style-type: none"> The disc is not inserted correctly. ➔ Open the disc tray and insert the disc correctly.
Exx (xx is any number)	<ul style="list-style-type: none"> To prevent a malfunction, the player has performed the self-diagnosis function. ➔ When you contact your Sony dealer or local authorized Sony service facility, give the 5-character service number. (example: E:61:10)

MEMO

SECTION 1 GENERAL

This section is extracted from instruction manual.

DISPOSAL OF LITHIUM ION BATTERY

LITHIUM ION BATTERY. DISPOSE OF PROPERLY.

You can return your unwanted lithium ion batteries to your nearest Sony Service Center or Factory Service Center.

Note: In some areas the disposal of lithium ion batteries in household or business trash may be prohibited.

For the Sony Service Center nearest you, call 1-800-222-SONY (United States only)
For the Sony Factory Service Center nearest you, call 416-499-SONY (Canada only)

Caution: Do not handle damaged or leaking lithium ion battery.

Welcome!

Thank you for purchasing this Sony CD/ DVD Player. Before operating the unit, please read this manual thoroughly and retain it for future reference.

About this manual

Conventions

- Instructions in this manual describe the controls on the player.
- You can also use the controls on the remote if they have the same or similar names as those on the player.
- The icons below are used in this manual:

Icon	Meaning
	Indicates that you can use only the remote to do the task.
	Indicates tips and hints for making the task easier.
	Indicates that the function is for DVD VIDEOS.
	Indicates that the function is for VIDEO CDs.
	Indicates that the function is for Audio CDs.

Checking your model name

The instructions in this manual are for the DVP-FX1 and DVP-F5. Check your model number by looking at the bottom of the unit. DVP-FX1 is used for the illustrations purposes. Any difference in operation is clearly indicated in the text, for example, "DVP-FX1 only."

This Player Can Play the Following Discs


Disc logo	DVD VIDEOS		VIDEO CDs		Audio CDs	
Contents	Audio + Video		Audio + Video		Audio	
Disc size	12 cm	8 cm	12 cm	8 cm	12 cm	8 cm (CD single)
Play time	About 4 h (for single-sided DVD) / about 8 h (for double-sided DVD)	About 80 min. (for single-sided DVD) / about 160 min. (for double-sided DVD)	74 min.	20 min.	74 min.	20 min.

The "DVD VIDEO" logo is a trademark.

This player conforms to the NTSC color system. You cannot play discs recorded in other color systems such as PAL or SECAM.

Region code of DVDs you can play on this unit

Your DVD player has a region code printed on the bottom of the unit and will only play DVDs that are labeled with identical region codes.



DVDs labeled will also play on this unit.

If you try to play any other DVD, the message "Playback prohibited by area limitations." will appear on the screen. Depending on the DVD, no region code indication may be labeled even though playing the DVD is prohibited by area restrictions.


Note on playback operations of DVDs and VIDEO CDs

Some playback operations of DVDs and VIDEO CDs may be intentionally fixed by software producers. Since this player plays DVDs and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also refer to the instructions supplied with the DVDs or VIDEO CDs.


Terms for discs

- **Title**
The longest section of a picture or music feature on a DVD, the movie, etc. in video software, or the name of an album in audio software.
- **Chapter**
Sections of a picture or a music feature that are smaller than titles. A title is composed of several chapters. Each chapter is assigned a chapter number enabling you to locate the chapter you want. Depending on the disc, no chapters may be recorded.
- **Track**
Sections of a picture or a music feature on a VIDEO CD or a CD. Each track is assigned a track number enabling you to locate the track you want.

DVD structure



VIDEO CD or CD structure



- **Index (CD) / Video Index (VIDEO CD)**
A number that divides a track into sections to easily locate the point you want on a VIDEO CD or a CD. Depending on the disc, no indexes may be recorded.
- **Scene**
On a VIDEO CD with PBC (playback control) functions, the menu screens, moving pictures and still pictures are divided into sections called "scenes." Each scene is assigned a scene number enabling you to locate the scene you want.

Note on PBC (Playback Control) (VIDEO CDs)

This player conforms to Ver. 1.1 and Ver. 2.0 of VIDEO CD standards. You can enjoy two kinds of playback according to the disc type.

Disc type	You can
VIDEO CDs without PBC functions (Ver. 1.1 discs)	Enjoy video playback (moving pictures) as well as music.
VIDEO CDs with PBC functions (Ver. 2.0 discs)	Play interactive software using menu screens displayed on the screen (PBC Playback), in addition to the video playback functions of Ver. 1.1 discs. Moreover, you can play high-resolution still pictures if they are included on the disc.

Discs that the player cannot play

The player cannot play discs other than the ones listed in the table on page 6. CD-ROMs including PHOTO CDs, data sections in CD-EXTRAS, DVD-ROMs, DVD-audio, HD (high density) layer of Super Audio CD etc., cannot be played.

Note

The player may not be able to play a CD-R if it is in poor recording condition.

This Player Can Play the Following Discs (continued)

When playing DTS*-encoded CDs, excessive noise will be heard from the analog stereo outputs. To avoid possible damage to the audio system, the consumer should take proper precautions when the analog stereo outputs of the DVD player are connected to an amplification system. To enjoy DTS Digital Surround™ playback, an external 5.1-channel DTS Digital Surround™ decoder system must be connected to the digital output of the DVD player.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

* "DTS," "DTS Digital Surround" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

Precautions

On safety

- Caution – The use of optical instruments with this product will increase eye hazard.
- Should any solid object or liquid fall into the cabinet, unplug the player and have it checked by qualified personnel before operating it any further.


On AC power adaptor and AC power cord

- Use only the supplied AC power adaptor. Do not use any other AC power adaptor. It may cause a malfunction.

Polarity of the plug




- If the AC power adaptor causes interference to the radio reception, move it away from the radio.
- Disconnect the DC IN 10V jack first, then disconnect from the mains, even if the player itself has been turned off.
- If you are not going to use the player for a long time, be sure to disconnect the player from the mains and/or detach the battery pack. To disconnect the AC power cord (mains lead), grasp the plug itself; never pull the cord.
- The nameplate indicating operating voltage, power consumption, etc. is located at the bottom of the AC power adaptor.
- If the AC plug of your unit does not fit into the wall outlet, attach a commercially available AC plug adaptor.




- Do not plug the AC power cord into a voltage transformer or similar device.
- Should the AC power cord (mains lead) need to be changed, have it done at a qualified service shop only.

On the bottom of the unit

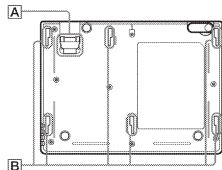

- Do not allow dust to come into contact with the terminals (A) in the illustration) or holes (B) in the illustration).
- Do not open the terminal covers (A) in the illustration).

On rechargeable batteries

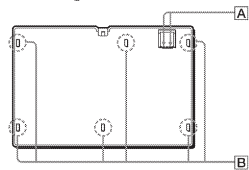

- Do not short the terminals (A) in the illustration).
- Do not open the terminal covers (A) in the illustration).
- Do not allow dust to come into contact with the terminals (A) in the illustration) or projecting guides (B) in the illustration).
- Do not expose to high temperatures (60 °C (140 °F)).

continued

Introduction 9

Precautions (continued)

- The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100 °C (212 °F) or incinerate.
- Danger of explosion if battery is incorrectly replaced. Replace battery with Sony NP-FX1 only. Use of another battery may present a risk of fire or explosion.
- Battery pack is suitable for use only with Sony Portable CD/DVD Player.
- Burn hazard if mistreated. Do not disassemble. Handle damaged or leaking lithium-ion battery with extreme care. If the battery is damaged, electrolyte may leak from the cells and may cause personal injury.
- There may be local restrictions on the disposal or recycling of batteries. Consult your local regulations or waste disposal provider.
- Dispose of use battery promptly.
- Keep away from children.

On placement

- Place the player in a location with adequate ventilation to prevent heat build-up in the player.
- Do not put any heavy object on top of the player. The unit and the disc may be damaged.
- Do not leave the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, unlevelled surface, or in a car with its windows closed.
- If the player causes interference to radio or television reception, turn off the player or move it away from the radio or television.
- Do not wrap the player in a cloth or blanket during use as it may cause malfunction or serious accidents.

On operation

- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.
- While operating, do not move, shake, or otherwise allow any shock to the player. It may cause a malfunction.
- Use this player in a stable, horizontal position where it is not subject to vibration.
- Do not touch the disc if it is still spinning when you open the lid. Doing so may cause injury.

On adjusting volume

Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speakers may be damaged when a peak level section is played. Turn the volume down before you start playback.

Road safety

Do not use headphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headsets at high volume while walking, especially at pedestrian crossing. You should exercise extreme caution or discontinue use in potentially hazardous situations.

On headphones

Preventing hearing damage

Avoid using headphones at high volume. Hearing experts advise against continuous, loud and extended play. If

10 Introduction


you experience a ringing in your ears, reduce volume or discontinue use.

Caring for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

On cleaning

- Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.
- If the turntable does not work properly, check for dust or dirt on the turntable and clean using a soft cloth.
- Never remove the printed "Warranty void if removed." seal attached around the lens.
- If dust on the lens prevents the player from operating properly, clean the lens with a commercially available blower brush designed for cameras. Be careful not to touch the lens directly. Do not use a lens cleaning disc. If you do so, the lens may be damaged.

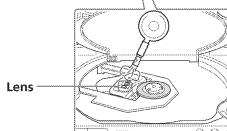

On transportation

- When you transport this player, use the original carton box and packing materials.
- Before you move this player, make sure to remove any discs from the player.

On handling the LCD screen (DVP-FX1 only)

The LCD is manufactured using high-precision technology. You may, however, see tiny black points and/or bright points (red, blue, or green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

- Do not scratch the LCD or exert pressure on it. This could cause malfunction.
- Using the player in low temperature conditions may produce a residual image on the screen. This is not a malfunction. When the player returns to normal temperature, the screen returns to normal.
- A residual image may appear on the screen if the same image is displayed for a lengthy period of time. The residual image disappears in a while. You can use a screen saver to prevent residual images.
- The screen becomes warm during operation. This is normal and does not indicate a malfunction.

If you have any questions or problems concerning your player, please consult your nearest Sony dealer.

Introduction 11

Precautions (continued)


IMPORTANT NOTICE

Caution: The enclosed DVD player is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Projection televisions are especially susceptible to this.

Notes about the Discs

On handling discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface.
- Do not stick paper or tape on the disc. If there is glue (or a similar substance) on the disc, remove the glue completely before using the disc.



- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.
- After playing, store the disc in its case.

On cleaning

- Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center out.



- Do not use solvents such as benzene, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.

On novelty discs

- Do not use irregularly shaped CDs such as heart- or star-shaped CDs as they may cause the player to malfunction.


12 Introduction


Unpacking

Check that you have the following items:

- Audio/video connecting cord (1)
- AC power adaptor AC-FX1 (1)
- AC power cord (1)
- Remote commander (remote) RMT-D114A (1)
- Size AA (R6) batteries (2)
- Battery pack NP-FX1 (DVP-FX1 only) (1)

Inserting batteries into the remote

You can control the player using the supplied remote. Insert two Size AA (R6) batteries by matching the + and - ends on the batteries to the markings inside the compartment. When using the remote, point it at the remote sensor  on the player.

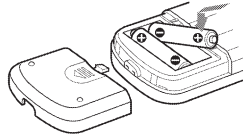

Notes


- Do not leave the remote in an extremely hot or humid place.
- Do not drop any foreign object into the remote casing, particularly when replacing the batteries.
- Do not expose the remote sensor to direct sunlight or lighting apparatuses. Doing so may cause a malfunction.
- If you do not use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

Using the LCD Screen (DVP-FX1 only)


You can watch the playback picture on the LCD screen.

Opening the LCD panel

- 1 When using the AC power adaptor, pull out the stabilizer tab on the bottom of the player to prevent the player from tipping over.

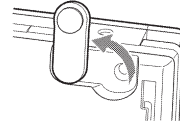


- 2 Press PUSH OPEN and lift open the LCD panel.

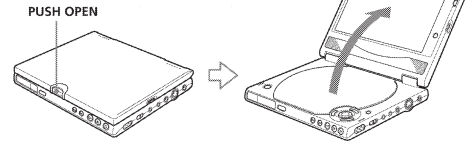

When using the LCD screen, you do not have to connect the TV or the receiver (amplifier). See "Connecting the AC power adaptor" on page 25 or "Using the rechargeable battery pack" on page 26.

Adjusting the brightness of the LCD screen

If necessary, adjust the brightness of the LCD screen using the BRIGHT dial.

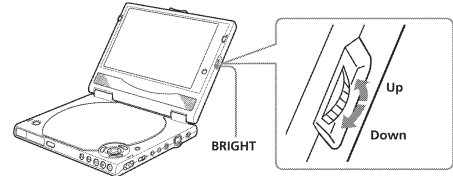



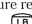
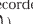
Selecting the display mode


You can select the display mode according to the aspect ratio (4:3 or 16:9) of the playback/input picture.


Each time you press DISPLAY MODE, the mode changes as follows:


→ Wide → Full → Cinema → Normal → Off



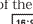

Selecting the display mode according to the aspect ratio of the picture

The aspect ratio of the picture recorded on the DVD is printed on the jacket of the DVD (, , , ).




- Wide mode 

Enlarges the 4:3 picture. The upper and lower parts of the picture are condensed to fit the 16:9 screen.
- Full mode 

Displays the 16:9 picture to fit the screen.
- Cinema mode 

Enlarges the 4:3 letter box picture and cuts off the black bands to fit the 16:9 screen. Depending on the DVD, the edges of the picture may be distorted.
- Normal mode    

Displays the original picture as it is. The 4:3 picture will have black bands on both sides. The 16:9/4:3 letter box picture will have black bands on all sides.



Adjusting the volume

When you listen to the sound through the built-in speakers, adjust the volume by turning the VOL dial. You can also adjust the volume of external headphones with the VOL dial.

TV Hookups

This connection is for listening to the sound through TV speakers (L: left, R: right). Refer to the instructions supplied with the component to be connected.

For DVP-FX1


Be sure to set the LINE SELECT switch to OUT.

You can enjoy surround sound using your TV's built-in speakers

You can use 3D sound imaging to create virtual rear speakers from the sound of built-in TV speakers without using actual rear speakers (VES TV: Virtual Enhanced Surround TV). For details, see page 60.

Required cords

Audio/Video connecting cord (supplied) (1)




S video cord (not supplied) (1)



When connecting the cords, be sure to match the color-coded cord to the appropriate jacks on the components: Yellow (video) to Yellow, Red (right) to Red and White (left) to White. Connect the Black jack of the audio/video connecting cord to AUDIO OUT (White) on the player. Be sure to make connections firmly to avoid hum and noise.

If your TV has an S video input connector, connect the component via the S VIDEO OUT connector using an S video cord (not supplied) instead of the video connecting cord. You will get a better picture.

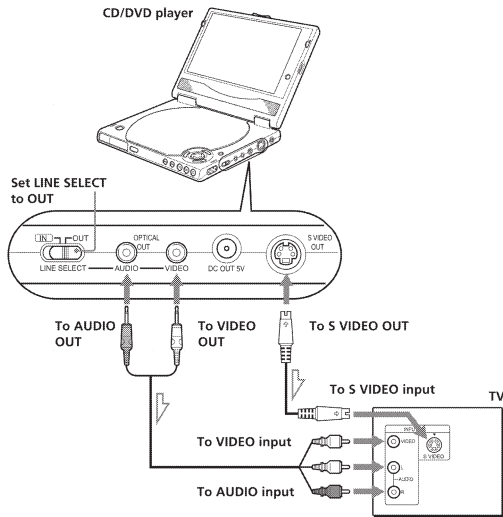

: Signal flow

For DVP-FX1


- To turn off the LCD screen: press the DISPLAY MODE button on the player repeatedly.
- To adjust the volume of the built-in speakers: turn the VOL dial on the player.

continued

TV Hookups (continued)

Notes

- Refer to the instructions supplied with the component to be connected.
- Do not connect this player to a video deck. If you do, noise may appear in the picture.



Setups for the player

Some setup adjustments are necessary for the player depending on the TV or other components to be connected.

Use the setup display to change the various settings.

For details on using the setup display, see page 76.

- To connect the player to a normal TV**
In the setup display, set "TV TYPE" in "SCREEN SETUP" to "4:3 LETTER BOX" (default setting) or "4:3 PAN SCAN." For details, see page 83.
- To connect the player to a TV having the WIDE MODE function**
In the setup display, set "TV TYPE" in "SCREEN SETUP" to "16:9/4:3 WIDE MODE." For details, see page 83.
- To connect the player to a wide-screen TV**
In the setup display, set "TV TYPE" in "SCREEN SETUP" to "16:9/4:3 WIDE MODE." For details, see page 83.

Receiver (Amplifier) Hookups

This connection is for listening to the sound through speakers connected to a receiver lacking a built-in DTS or Dolby® Digital decoder. Refer as well to the instructions supplied with the component to be connected.

For DVP-FX1

Be sure to set the LINE SELECT switch to OUT.

You can enjoy surround sounds even if you connect front speakers only. You can use 3D sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers (VES:Virtual Enhanced Surround). For details, see page 60.

* Manufactured under license from Dolby Laboratories. "Dolby," "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. ©1992-1997 Dolby Laboratories. All rights reserved.

Required cords

Audio/Video connecting cord (supplied) (1)



S video cord (not supplied) (1)



When connecting the cords, be sure to match the color-coded cord to the appropriate jacks on the components: Red (right) to Red and White (left) to White. Connect the Black jack of the audio/video connecting cord to AUDIO OUT (White) on the player. Be sure to make connections firmly to avoid hum and noise.


If you have a digital component such as a receiver (amplifier) with a digital connector, DAT or MD, connect the component via the OPTICAL OUT connector using an optical digital connecting cord (not supplied).

Optical digital connecting cord (not supplied) (1)



continued

Receiver (Amplifier) Hookups (continued)

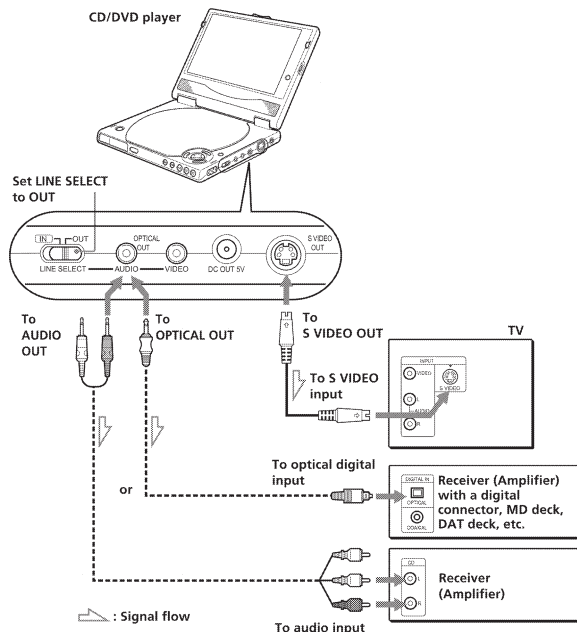


Note

You cannot enjoy a picture with an S video signal if your TV does not conform to the S video signal. When your TV does not have an S VIDEO input, connect the component via the VIDEO INPUT connector using the video connecting cord (not supplied) instead of the S-video cord. For details, see page 17. Refer to the instructions supplied with your TV.

Setups for the optical digital connection

- To listen to the sound through speakers connected to a receiver (amplifier) which has a digital connector and lacks a built-in DTS or Dolby Digital decoder, or to output the sound to a digital component such as a DAT or MD deck

Set the "AUDIO SETUP" items in the setup display (page 91) as shown in the illustration below. These are the default settings.

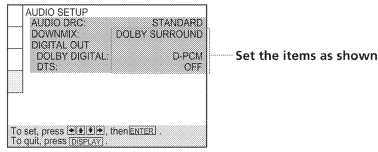

- If you have a digital component with a built-in DTS or Dolby Digital decoder You can enjoy multi-channel surround sound by connecting the component via the OPTICAL OUT connector using an optical digital connecting cord (not supplied). For details on hookups and settings, see page 22.

Notes

When you have made the connections using an optical digital connecting cord, do not set "DOLBY DIGITAL" to "DOLBY DIGITAL" and "DTS" to "ON" in "DIGITAL OUT." If you do, a loud noise will suddenly come out from the speakers, affecting your ears or causing the speakers to be damaged.

- When you have made the connections using an optical digital connecting cord, set "VES" to "OFF" in the Control Menu display (page 60). Otherwise, the player will not output the Dolby Digital signals when you select "DIGITAL OUT" in "AUDIO SETUP" and set "DOLBY DIGITAL" to "D-PCM."
- When you have made the connections using an optical digital connecting cord and output the signals which do not reproduce the Dolby Surround (Pro Logic) effect, set "DOWNMIX" to "NORMAL" in "AUDIO SETUP" in the setup display.
- You cannot make digital audio recordings of discs recorded in multi-channel surround format directly using an MD deck or DAT deck.

Getting Started

5.1 Channel Surround Hookups

With DVDs which contain DTS or Dolby Digital sound, you can enjoy the surround sound while producing the effect of being in a movie theater or a concert hall using a digital component with a built-in DTS or Dolby Digital decoder (not supplied). The player outputs the surround sound signals from the OPTICAL OUT connector.

Using a receiver (amplifier) having the OPTICAL OUT connector and 6 speakers, you can enjoy even greater real audio presence in the comfort of your own home.

For DVP-FX1

Be sure to set the LINE SELECT switch to OUT.

Required cords

Optical digital connecting cord* (not supplied) (1)




S video cord (not supplied) (1)



* Connect the component via the OPTICAL OUT connector using an optical digital connecting cord (not supplied). See the figure on the next page.

Notes

- Do not connect the power cord to an AC outlet before completing all connections.
- Refer to the instructions supplied with the component to be connected.
- The cord connectors should be fully inserted into the jacks. A loose connection may cause hum and noise.

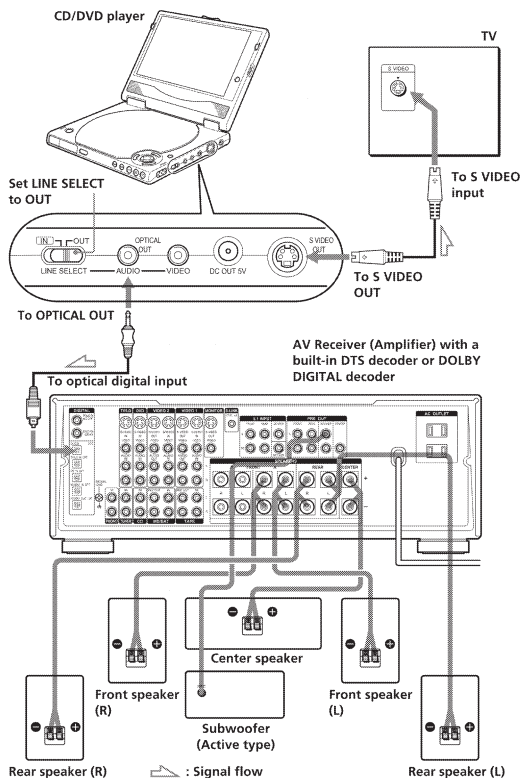

Getting Started

continued

5.1 Channel Surround Hookups (continued)

Setups for the player

Some setup adjustments are necessary for the player depending on the components to be connected.

Use the setup display to change the various settings.


For details on using the setup display, see page 76.

- When you connect an audio component with a built-in DOLBY DIGITAL decoder

Select "DOLBY DIGITAL" under "DIGITAL OUT" in the "AUDIO SETUP" display and set "DOLBY DIGITAL" to "DOLBY DIGITAL." (page 93)

- When you connect an audio component with a built-in DTS decoder

Select "DTS" under "DIGITAL OUT" in the "AUDIO SETUP" display and set "DTS" to "ON." (page 93)

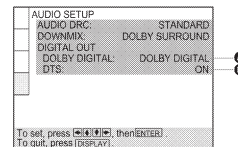


Notes

- When you do not connect an audio component with a built-in DOLBY DIGITAL decoder, do not set "DOLBY DIGITAL" to "DOLBY DIGITAL."
- When you do not connect an audio component with a built-in DTS decoder, do not set "DTS" to "ON."

Connecting the AC Power Adaptor

- 1 Connect the supplied AC power cord to the AC power adaptor.
- 2 Connect the AC power adaptor to the player and then plug the cord into the AC outlet.

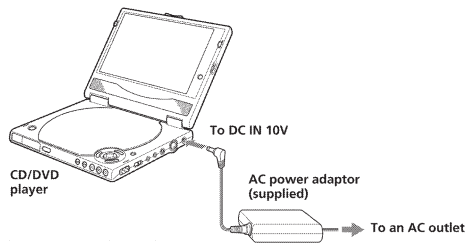

You can attach a battery pack
See "Using the rechargeable battery pack" on the next page.

Note
When you disconnect the AC power cord, be sure to stop playback. Disconnecting the AC power cord during playback may cause a malfunction.

Getting Started

Getting Started | 25

Using the Rechargeable Battery Pack

You can use the NP-FX1 rechargeable battery pack (supplied with DVP-FX1 only) to enjoy the player when an AC outlet is not available.


Battery life*

Model name	Playing time with		
	DVD VIDEO	VIDEO CD	AUDIO CD
DVP-FX1 (LCD screen: On)	4.5	4.5	4.5
DVP-FX1 (LCD screen: Off)	8.0	8.0	8.0
DVP-F5	8.0	8.0	8.0


* Approximate hours when played continuously at room temperature (20°C) while:
 - using the power saving function (DVP-FX1 only, page 90)
 - using the headphones
 - the brightness of the LCD screen is set to the lowest level (DVP-FX1 only, page 14)

Attaching the battery pack

- 1 Fit the hooks of the battery pack to the holes on the bottom of the player, as shown below.

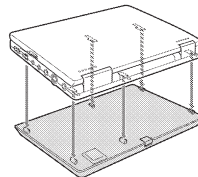

- 2 Slide the player forward in the direction of the arrow until it clicks.




To prevent the buttons from being pressed accidentally
Turn the power off while attaching the battery pack.

Note
Do not touch the terminals on the unit and battery. Doing so may cause a malfunction.

26 | Getting Started

Detaching the battery pack

Unlock the battery pack and slide the player.
Be careful not to drop the battery pack.

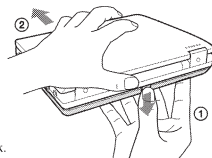

Note
Do not detach the battery pack during playback.

Charging the battery pack

After attaching the battery pack, connect the AC power adaptor, then charge the battery pack.

- 1 Attach the battery pack to the player.
- 2 Connect the AC power adaptor to the player and the plug into an AC outlet.
When charging starts, "CHG" appears on the display window.
- 3 Disconnect the AC power adaptor from the player and pull out the plug from the AC outlet after charging.
When charging is complete, "100%" appears on the display window. This process takes approximately 8 hours.

When to charge the battery pack

You can check the remaining power of the battery on the display window.

- Battery power is full.
- Battery power is getting low.
- Battery power is low.
- Batteries are depleted.

If "CHG" flashes, connect the AC power adaptor to start charging the battery pack.

Notes



- If you turn on the player while charging, charging is suspended until you turn off the player.
- If you press while charging, charging is suspended and playback starts. Charging will resume when you turn off the player.
- If "CHG" flashes while charging, there may be a problem with charging. Disconnect the AC power adaptor and detach the battery pack. Then attach the battery pack and connect the AC power adaptor to start charging again.

Getting Started


Getting Started | 27

Selecting the Language for the On-Screen Display


You can select the language for the setup display, the Control Menu display or the messages displayed on the screen. The default setting is "ENGLISH."

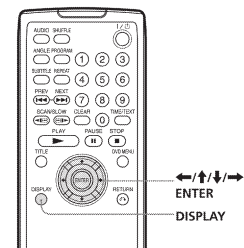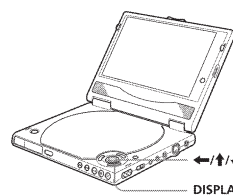

- 1 When the player is in stop mode, press DISPLAY and select "SETUP" using .
The on-screen menu items are different depending on whether there is a disc in the player or not.

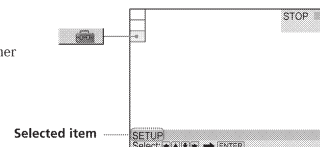


- 2 Press ENTER.
The setup display appears on the screen.

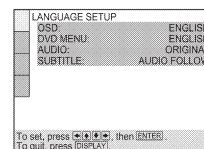


28 | Getting Started

- 3 Select "LANGUAGE SETUP" using \uparrow/\downarrow , and then press ENTER.

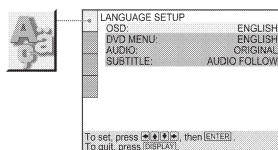

- 4 Select "OSD" using \uparrow/\downarrow , then press \rightarrow or ENTER.
The languages you can select are displayed.

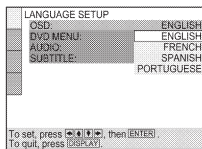

- 5 Select the desired language using \uparrow/\downarrow , then press ENTER.



- 6 Press DISPLAY.
The setup display disappears.
- 7 Press DISPLAY repeatedly to turn off the on-screen display.

To return to the previous screen
Press \leftarrow RETURN.

To quit while making a selection
Press DISPLAY.

Note
The language you can select are the ones displayed in step 4. For details, see page 80.


Getting Started

Playing discs



Depending on the DVD or VIDEO CD, some operations may be different or restricted. Refer to the instructions supplied with your disc.

- For DVP-FX1**
Be sure to set the LINE SELECT switch to OUT.

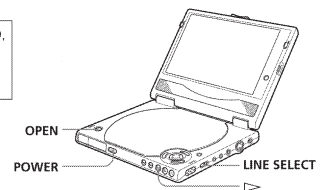

- 1 Press POWER to turn on the player.
The display window lights up.
When using the AC power adaptor, you can turn on the player with \mathbb{I}/\mathbb{O} on the remote.

When connecting the player to a TV


Turn on the TV and select the video input so that you can view the pictures from this player.

When using a receiver (amplifier)

Turn on the receiver (amplifier) and select the appropriate position so that you can listen to the sound from this player.

- 2 Press OPEN to open the lid.

- 3 Insert a disc horizontally.
Push down the center of the disc gently with two fingers. Make sure the disc clicks into the position.

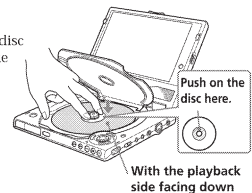

- 4 Close the lid, then press \triangleright .
The player starts playback (continuous play). Adjust the volume on the player, the TV or the receiver (amplifier).

After following Step 4

- When playing a DVD
A DVD menu or title menu may appear on the screen (see page 37).
- When playing a VIDEO CD
A menu screen may appear on the screen depending on the VIDEO CD. You can play the disc interactively, following the instructions on the menu screen. (PBC Playback, see page 39).

When using the battery pack

Normally you cannot use the remote to turn on the player. However, within 10 minutes after having turned off the player with the remote, you can use the remote to turn on the player.

Notes on playing DTS sound tracks on a CD

- Do not play DTS sound tracks without first connecting the player to an audio component having a built-in DTS decoder. The player outputs the DTS signal even if "DTS" in "DIGITAL OUT" is set to "OFF" in "AUDIO SETUP" in the setup display, and may affect your ears or cause your speakers to be damaged.
- Set the sound to "STEREO" when you play DTS sound tracks on a CD. (See "Changing the Sound" on page 54.) If you have made the connections using an optical digital connecting cord and set the sound to "1/L" or "2/R," no sound will come out.
- If you have made the connections using an audio connecting cord and play a CD with a DTS sound track, a loud noise may come out, affecting your ears or causing the speakers to be damaged.

Notes on playing DTS sound tracks on a DVD

- The signals of the DTS sound tracks are output only when you have made the connections using an optical digital connecting cord. No sound will be output when you have made the connections using an audio connecting cord.
- If the player is connected to an audio component lacking a built-in DTS decoder, do not set "DTS" in "DIGITAL OUT" to "ON" in "AUDIO SETUP" in the setup display. Otherwise, when you play the DTS sound track, a loud noise will come out from the speakers, affecting your ears or causing the speakers to be damaged.
 - When you set "DTS" in "DIGITAL OUT" to "OFF," no sound will come out even if you have made the connections using an optical digital connecting cord and play DTS sound tracks on DVDs.


Notes

- If you leave the player or the remote in pause or stop mode for 15 minutes, the screen saver image appears automatically. To make the screen saver image go away, press \triangleright . (If you want to set the screen saver function to off, see page 84.)
- While playing a disc, do not turn off the player. Doing so may cancel the settings of the menu. When you turn off the player, press \blacksquare first to stop playback and then press POWER.
- The power is automatically turned off whenever,
 - a disc is not being played.
 - you do not operate the player or the remote for more than 30 minutes.

Playing discs

Playing Discs (continued)

Additional operations

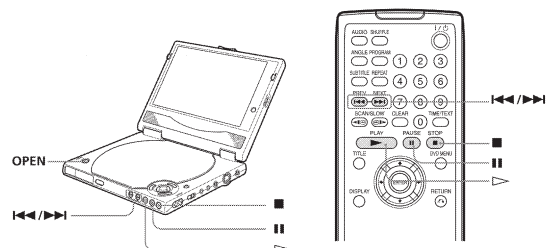

To	Operation
Stop	Press \blacksquare
Pause	Press \mathbb{I}
Resume playback after pause	Press \mathbb{I} or \triangleright
Go to the next chapter, track or scene in continuous play mode	Press \mathbb{I}
Go back to the preceding chapter, track or scene in continuous play mode	Press \mathbb{I}
Stop play and remove the disc	Press OPEN

You can play discs in various modes such as Program Play using the on-screen menu (Control Menu). For Control Menu operations, see page 45.

Searching for a Particular Point on a Disc


You can locate a particular point on a disc quickly by monitoring the picture or playing back slowly.

Note
Depending on the DVD/VIDEO CD, you may not be able to do some of the operations described.

Locating a point quickly (Search)

While a disc is playing, keep **▶▶▶** pressed on the player to locate a point in playback direction at the **FF1▶▶▶*** speed or keep **◀◀◀** pressed on the player to locate a point in opposite direction at the **FR1◀◀◀*** speed. When you find the point you want, release the button to return to normal playback speed.

* The **FF1▶▶▶**/**FR1◀◀◀** playback speed is one of the scan speed described on the next page.

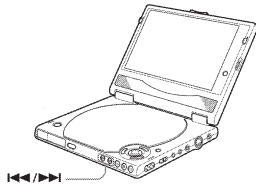

Playing discs

Searching for a Particular Point on a Disc (continued)

Locating a point quickly by playing a disc in fast forward or fast reverse (Scan)

While a disc is playing, press **▶▶▶** to locate a point in the playback direction, or press **◀◀◀** to locate a point in the opposite direction. When you find the point you want, press **▶** to return to normal playback speed.

Each time you press the **◀◀◀** or **▶▶▶** button during Speed scan, the playback speed changes. Three speeds are available. With each press, the display changes as follows:

Playback direction


×2▶▶▶ (DVD/CD only) → FF1▶▶▶ → FF2▶▶▶

Opposite direction

×2◀◀◀ (DVD only) → FR1◀◀◀ → FR2◀◀◀

The ×2▶▶▶/×2◀◀◀ playback speed is about twice the normal speed.

The FF2▶▶▶/FR2◀◀◀ playback speed is faster than FF1▶▶▶/FR1◀◀◀.

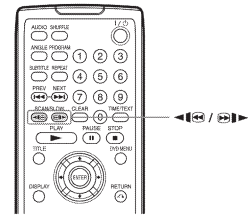

Locating a point slowly by watching the screen (Slow-motion play)

You can use this function only for DVDs or VIDEO CDs.

When the player is in the pause mode, press **▶▶▶** to locate a point in the playback direction, or press **◀◀◀** to locate a point in the opposite direction. When you find the point you want, press **▶** to return to the normal playback speed.

Each time you press the **◀◀◀** or **▶▶▶** button during Slow-motion play, the playback speed changes. Two speeds are available. With each press, the indication changes as follows:


Playback direction

SLOW2▶▶▶ ↔ SLOW1▶▶▶

Opposite direction (DVD only)

SLOW2◀◀◀ ↔ SLOW1◀◀◀



The SLOW2▶▶▶/SLOW2◀◀◀ playback speed is slower than SLOW1▶▶▶/SLOW1◀◀◀.

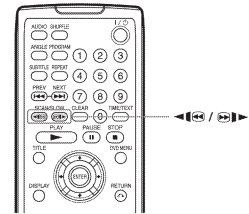

Resuming Playback from the Point Where You Stopped the Disc (Resume Play)

The player remembers the point where you stopped the disc, and when "RESUME" appears on the display window, you can resume playback from that point.

As long as you do not open the lid, Resume Play will work even if you press POWER.

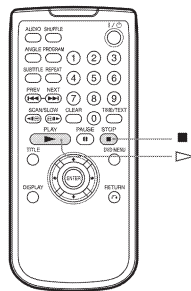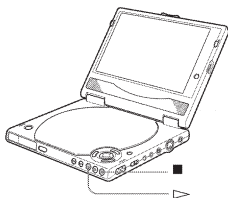

Playing discs

1 While playing a disc, press **■** to stop playback. "RESUME" appears on the display window and "Disc will restart from current point. To start from beginning, press [STOP] again." appears on the screen.
If "RESUME" does not appear, Resume Play is not available.

2 Press **▶**.
The player starts playback from the point where you stopped the disc in Step 1.

 **To play from the beginning of the disc**
When the playing time appears on the display window before you start playing, press **■** to reset the playing time, then press **▶**.

Resuming Playback from the Point Where You Stopped the Disc (Resume Play) (continued)


- Notes**
- Resume Play may not be available on some DVDs.
 - Resume Play is not available in Shuffle or Program Play mode.
 - Depending on where you stopped the disc, the player may resume playback from a different point.
 - The point where you stopped playing is cleared when:
 - you open the lid
 - you change the play mode
 - you start playback after selecting a title or track
 - you change the settings in the setup display
 - you disconnect the AC power adaptor
 - you detach the battery pack

Using the DVD's Menu

Some DVDs have a title menu or a DVD menu that is provided with DVDs only.

Using the title menu

A DVD is divided into long sections of a picture or a music feature called "titles." When you play a DVD which contains several titles, you can select the title you want using the title menu.

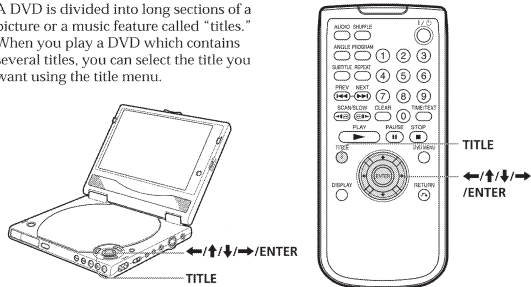

- 1 Press TITLE.
The title menu appears on the screen.
The contents of the menu vary from disc to disc.
- 2 Press $\leftarrow/\uparrow/\downarrow/\rightarrow$ to select the title you want to play.
Depending on the disc, you can use the number buttons to select the title.
- 3 Press ENTER.
The player starts playing the selected title.

Notes


- On some DVDs, you may not be able to select the title.
- On some DVDs, a "title menu" may simply be called a "menu" or "title" in the instructions supplied with the disc. "Press ENTER," may also be expressed as "Press SELECT."

Playing discs 37


Using the DVD's Menu (continued)

Using the DVD menu

Some DVDs allow you to select the disc contents using a menu. When you play these DVDs, you can select the language for the subtitles, the language for the sound, etc., using the DVD menu.

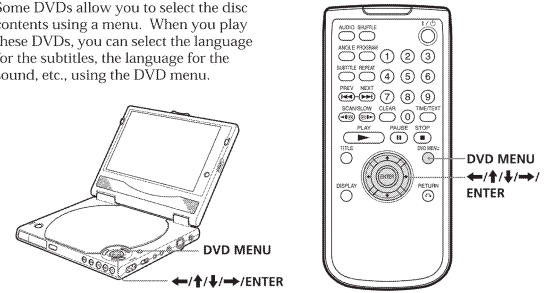

- 1 Press DVD MENU.
The DVD menu appears on the screen.
The contents of the menu vary from disc to disc.
- 2 Press $\leftarrow/\uparrow/\downarrow/\rightarrow$ to select the item you want to change.
Depending on the disc, you can use the number buttons to select the item.
- 3 To change other items, repeat Step 2.
- 4 Press ENTER.

 **If you want to select the language for the DVD menu**
Change the setting using "DVD MENU" in "LANGUAGE SETUP" in the setup display. For details, see page 80.

Note

Depending on the DVD, a "DVD menu" may simply be called a "menu" in the instructions supplied with the disc.


Playing discs 38

Playing VIDEO CDs with PBC Functions (PBC Playback)

When playing VIDEO CDs with PBC (Play Back Control) functions (Ver. 2.0 discs), you can enjoy simple interactive operations, search functions, and other such operations.

PBC Playback allows you to play VIDEO CDs interactively by following the menu on the screen.

On this player, you can use the number buttons, ENTER, $\leftarrow/\triangleright/\blacktriangleleft/\blacktriangleright$, \uparrow/\downarrow and \curvearrowright RETURN during PBC Playback.

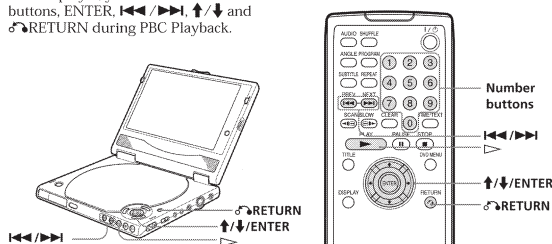

- 1 Start playing a VIDEO CD with PBC functions by following Steps 1 to 4 in "Playing Discs" on page 30.
- 2 Select the item number you want.
Press \uparrow/\downarrow to select the item number.
You can also select the item number with the number buttons on the remote.
- 3 Press ENTER.
- 4 Follow the instructions in the menu for interactive operations.
Refer to the instructions supplied with the disc, as the operating procedure may differ according to the VIDEO CD.

continued

Playing discs 39

Playing VIDEO CDs with PBC Functions (PBC Playback) (continued)

To go back to the menu

Press \curvearrowright RETURN, \blacktriangleleft or \blacktriangleright .

To cancel PBC playback of a VIDEO CD with PBC functions and play the disc in continuous play mode

There are two ways.

- Before you start playing, select the track you want using \blacktriangleleft or \blacktriangleright , then press ENTER or \blacktriangleright .
- Before you start playing, select the track number using the number buttons on the remote, then press ENTER or \blacktriangleright .
"Play without PBC," appears on the TV screen and the player starts continuous play. You cannot play still pictures such as a menu.
To return to PBC playback, press \blacksquare twice then press \blacktriangleright .

Note


Depending on the VIDEO CD, "Press ENTER" in Step 3 may be expressed as "Press SELECT" in the instructions supplied with the disc.

Playing discs 40

Using the Display Window




You can check information about the disc, such as the total number of titles or tracks or remaining time, using the display window.

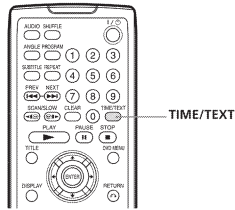

When playing back a DVD

Displaying information while playing the disc

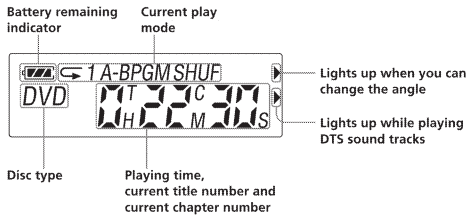


Playing discs

Using the Display window (continued)

Checking the remaining time

Press TIME/TEXT.

Each time you press TIME/TEXT while playing the disc, the display changes as shown in the following chart.

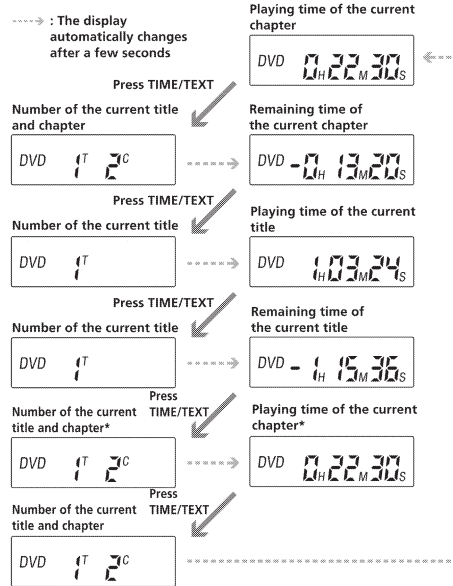


* The DVD TEXT is displayed on the screen.

Notes

- On some DVDs, the chapter number or time may not appear or you may not be able to change the display window.
- While you are doing Shuffle Play or Program Play, the playing time of the title and the remaining time of the title are not displayed.

When playing back a CD/VIDEO CD

Displaying information while playing the disc

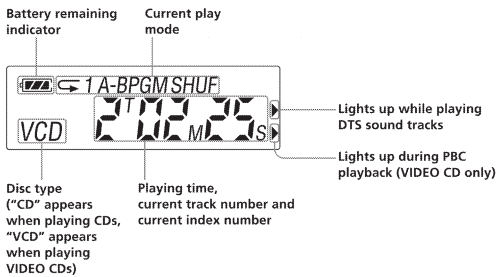

When playing VIDEO CDs with PBC functions

The current scene number is displayed instead of the current track number and the current index number. In this case, the display window does not change when you press TIME/TEXT (see page 51).


Playing discs

Using the Display window (continued)

Checking the remaining time

Press TIME/TEXT.

Each time you press TIME/TEXT while playing a disc, the display changes as shown in the following chart.

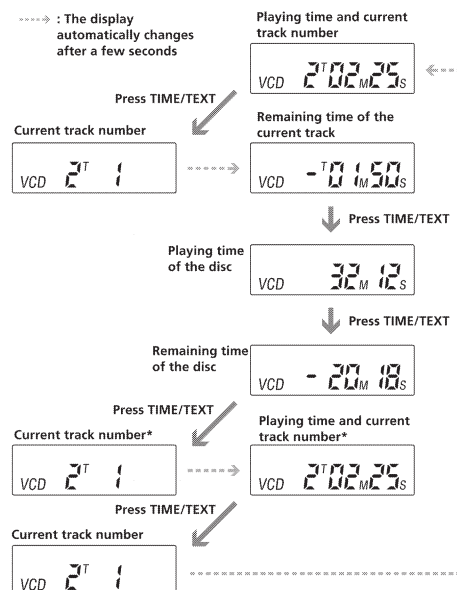

* The CD TEXT is displayed on the screen.

Note


While you are doing Shuffle Play, or Program Play, the playing time of the disc and the remaining time of the disc are not displayed.

Using the Control Menu Display




Using the Control Menu display, you can select the starting point, play scenes in any order you like, change the viewing angles, make Digital Cinema Sound settings, and other such operations. The possible operations are different depending on the kind of disc.


For details on each Control Menu display item, see pages 48 to 75.

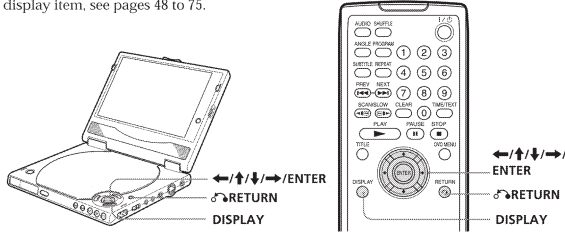

- 1 Press DISPLAY to show the Control Menu display on the screen.

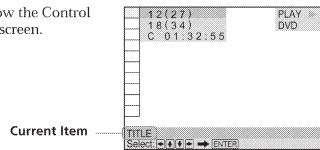


- 2 Select the item you want using ↑/↓.

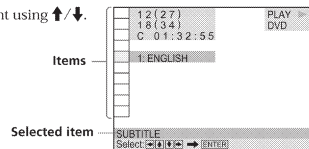


continued

Using the Control Menu Display (continued)


- 3 Press ENTER.

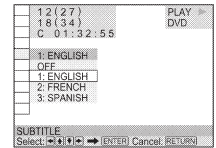

- 4 Select the item you want using ↑/↓.




- 5 Press ENTER.

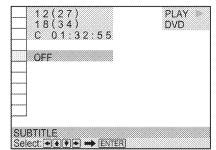

To cancel while making a selection
Press RETURN.

To display other items

Each time you press DISPLAY, the Control Menu display changes as follows:

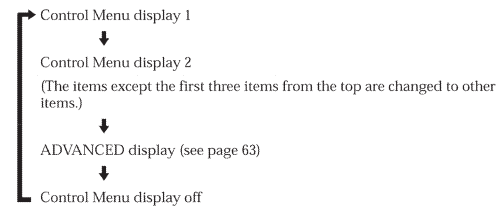

The Control Menu display items are different depending on the discs.

You can select some items directly

Some items can be selected by pressing the corresponding button on the remote. In this case, only the item you selected is displayed. For instructions on using the remote, see the pages of each relevant item.

Note

Some Control Menu display items require operations other than selecting the setting. For details on these items, see the relevant pages.

Control Menu Item List

- TITLE (DVD only) (page 50)/**
- SCENE (VIDEO CD during PBC playback only) (page 50)/**
- TRACK (VIDEO CD only) (page 50)**
- CHAPTER (DVD only) (page 50)/**
- INDEX (VIDEO CD only) (page 50)**
- TRACK (CD only) (page 50)**
- INDEX (CD only) (page 50)**

You can search for a point on the DVD by selecting the title, chapter, track, index or scene.

TIME/TEXT (pages 51 to 53)

You can check the playing time and remaining time of the current title, chapter, track and the total playing time or remaining time of the disc. You can also search by inputting the time code.

You can check the DVD TEXT or CD TEXT of the disc on the screen.

AUDIO (page 54)

If the DVD is recorded with multilingual tracks, you can select the language you want while playing the DVD.

If the DVD is recorded in multiple audio formats (PCM, Dolby Digital or DTS), you can select the audio format you want while playing the DVD.

With multiplex CDs or VIDEO CDs, you can select the sound from the right or left channel and listen to the sound of the selected channel through both the right and left speakers.

SUBTITLE (DVD only) (page 57)

With DVDs on which multilingual subtitles are recorded, you can change the subtitle language whenever you want while playing the DVD, and turn it on or off whenever you want.

ANGLE (DVD only) (page 58)

With DVDs on which various angles (multi-angles) are recorded, you can change the angle of the scene.

VES (DVD only) (page 60)

Select a mode to enjoy multichannel surround sound such as Dolby Digital. Even if you connect only front speakers, Virtual Enhanced Surround (VES) lets you enjoy 3D sound by using 3D sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers.

ADVANCED (DVD only) (page 63)

You can check play information about the bit rate or the position where the disc is being played (layer).

CUSTOM PARENTAL CONTROL (page 65)

Using the registered password, you can set playback restrictions for a desired disc.

The same password is used for both Parental Control (page 85) and Custom Parental Control.

SETUP (page 76)

Using the setup display, you can do the initial setup, adjust the picture and sound and set the various outputs. You can also set a language for the subtitles and the setup display, limit playback by children, and so on. For details about the setup display, see page 76.

PROGRAM (page 68)

You can play the contents of the disc in the order you want by arranging the order of the titles, chapters or tracks on the disc to create your own program.

SHUFFLE (page 72)

You can have the player "shuffle" titles, chapters or tracks and play them in a random order. Subsequent "shuffling" may produce a different playing order.

REPEAT (page 73)

You can play all the titles/tracks on a disc or a single title/chapter/track repeatedly.

A-B REPEAT (page 74)


You can play a specific portion of a title, chapter, or track repeatedly.

Searching for a Title/Chapter/Track/ Index/Scene


You can search the disc by title, chapter, track, index or scene.

Select "TITLE," "CHAPTER," "TRACK," "INDEX" or "SCENE" after pressing DISPLAY.


When you play back a DVD, "TITLE" and "CHAPTER" are displayed. When you play back a VIDEO CD/CD, "TRACK" and "INDEX" are displayed. When you play back a VIDEO CD with PBC functions, "SCENE" is displayed.

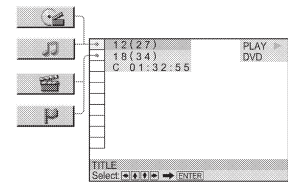

- 1 Select "TITLE," "CHAPTER," "TRACK," "INDEX" or "SCENE" using \uparrow/\downarrow .
"*** (**)" is highlighted. (** refers to a number) The number in parentheses indicates the total number of titles, chapters, tracks, indexes or scenes.

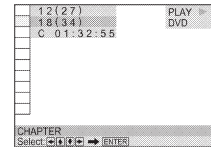

- 2 Press \rightarrow or ENTER.
"*** (**)" changes to "-- (**)".

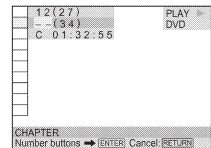

- 3 Select the number of the title, chapter, track, index or scene you want to search for using the number buttons, then press ENTER.

The player starts playback at the selected number.
To cancel the number, press CLEAR before pressing ENTER.

To cancel while making a selection

Press \rightarrow RETURN.

Notes

- The title, chapter or track number displayed is the same number recorded on the disc.
- The index numbers are not displayed during PBC playback of VIDEO CDs.


Checking the Playing Time and Remaining Time



You can check the playing time and remaining time of the current title, chapter or track and the total playing time or remaining time of the disc.

Press DISPLAY. Then press TIME/TEXT on the remote to change the time information.

You can also check the DVD TEXT or CD TEXT. See page 53.

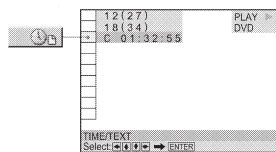

When playing a DVD

■ TIME/TEXT

- C **: **: **: **: **: Playing time of the current chapter
- C - **: **: **: **: **: Remaining time of the current chapter
- T **: **: **: **: **: Playing time of the current title
- T - **: **: **: **: **: Remaining time of the current title

When playing a VIDEO CD (during PBC playback)

■ TIME/TEXT

- **: **: **: **: **: Playing time of the current scene

When playing a VIDEO CD (in continuous play) or CD

■ TIME/TEXT

- T **: **: **: **: **: Playing time of the current track
- T - **: **: **: **: **: Remaining time of the current track
- D **: **: **: **: **: Playing time of the current disc
- D - **: **: **: **: **: Remaining time of the current disc

You can select "TIME/TEXT" directly


Press TIME/TEXT on the remote. Each time you press the button, the time information changes.

Selecting a Starting Point Using the Time Code


You can search for a starting point by inputting the time code.

Select "TIME/TEXT" after pressing DISPLAY.


The time code corresponds to the approximate actual playing time. For example, to search for a scene 2 hours 10 minutes 20 seconds past the beginning, input 2:10:20.

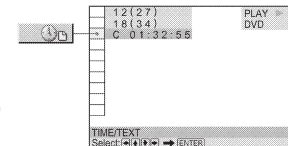

- 1 Select "C **: **: **: **: **: " (playing time of the current chapter) when playing a DVD.

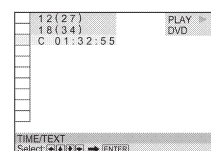

- 2 Press \rightarrow or ENTER.
Time code changes to "T - -: -: -:".

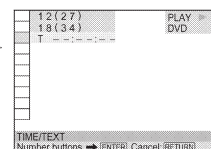

- 3 Input the time code using the number buttons, then press ENTER.
The player starts playing at the selected time code.
To cancel the number, press CLEAR before pressing ENTER.

To cancel while making a selection

Press \rightarrow RETURN.

Note

When you input the time code, input the playing time of the title, not the chapter or track time.


Viewing the Disc Information



You can check the DVD TEXT or CD TEXT of the disc on the screen. DVD TEXT and CD TEXT are information recorded on the disc which you cannot change.

Press DISPLAY. Then press TIME/TEXT on the remote until DVD/CD TEXT is displayed.

The information is displayed at the bottom of the display. As DVD/CD text is not scrolled, some characters may not be displayed.

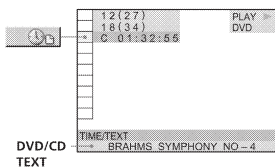

You can select "TIME/TEXT" directly

Press TIME/TEXT on the remote. To display DVD/CD TEXT, press TIME/TEXT until DVD/CD TEXT is displayed.

Notes


- DVD TEXT is displayed only in English.
- "NO TEXT" appears when the DVD/CD TEXT is not recorded on the disc.
- This player can only display the first level of DVD/CD TEXT information.
- When the DVD/CD TEXT is displayed, the operation guide does not appear.

Changing the Sound



If the DVD is recorded with multilingual tracks, you can select the language you want while playing the DVD. If the DVD is recorded in multiple audio formats (PCM, Dolby Digital or DTS), you can select the audio format you want while playing the DVD.

With multiplex CDs or VIDEO CDs, you can select the sound from the right or left channel and listen to the sound of the selected channel through both the right and left speakers. In this case, the sound loses its stereo effect. For example, with a disc containing a song, the right channel may output the vocals and the left channel may output the instrumental. If you only want to hear the instrumental, you can select the left channel and hear it from both speakers.

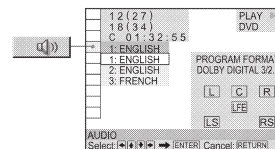

Select "AUDIO" after pressing DISPLAY.

AUDIO

When playing a DVD

Select the language. The languages you can select are different depending on the DVD. When 4 digits are displayed, they represent the language code. Select the language code from the list on page 110.

When the same language is displayed two or more times, the DVD is recorded in multiple audio formats. The current audio format is shown on the "PROGRAM FORMAT" display.

When playing a VIDEO CD or a CD

The default setting is underlined.

- **STEREO**: The standard stereo sound
- **1/L**: The sound of the left channel (monaural)
- **2/R**: The sound of the right channel (monaural)

You can select "AUDIO" directly

Press AUDIO on the remote. Each time you press the button, the item changes.


Notes

- Depending on the DVD, you may not be able to change the languages even if multilingual tracks are recorded on the DVD.
- While playing the CD/VIDEO CD, standard stereo playback will be resumed when:
 - you open the lid
 - you turn the power off
- While playing the DVD, the sound may be changed when:
 - you open the lid
 - you change the title
 - you disconnect the AC power adaptor
 - you detach the battery pack

Displaying the audio information of the disc


When you select "AUDIO," the channels being played are displayed on the screen.

For example, in Dolby Digital format, multiple signals ranging from monaural to 5.1 channel signals can be recorded on a DVD. Depending on the DVD, the number of the recorded channels may be different.

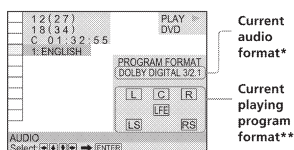

* "PCM," "DTS" or "DOLBY DIGITAL" is displayed. In case of "DOLBY DIGITAL," the channels in the playing track are displayed by numbers as follows:

For Dolby Digital 5.1 ch:

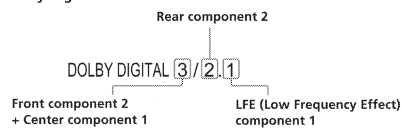

** The letters in the program format display mean the following:


- L: Front (left)
- R: Front (right)
- C: Center (monaural)
- LS: Rear (left)
- RS: Rear (right)
- S: Rear (monaural) - the rear component of the Dolby Surround processed stereo signal and the Dolby Digital signal.
- LFE: - LFE (Low Frequency Effect)

continued


Changing the Sound (continued)

The display examples are as follows:


- PCM (stereo)




- Dolby Surround



- Dolby Digital 5.1 ch
"LFE" appears only when a disc contains an LFE signal component. "LFE" remains on the "PROGRAM FORMAT" display even if the LFE signal component is not being output.



- DTS
"LFE" is always enclosed in a solid line regardless of the LFE signal component being output.



Note


When the signal does not contain rear signal components such as LS, RS or S, the Virtual Enhanced Surround (VES) effect cannot be heard (page 60).

Displaying the Subtitles

With DVDs on which subtitles are recorded, you can turn the subtitles on and off whenever you want while playing the DVD.

With DVDs on which multilingual subtitles are recorded, you can change the subtitle language whenever you want while playing the DVD, and turn it on or off whenever you want. For example, you can select the language you want to practice and turn the subtitles on for better understanding.

Select "SUBTITLE" after pressing DISPLAY.

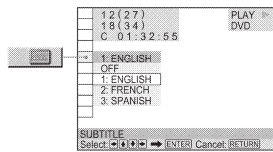

■ SUBTITLE

Select the language. The languages you can select are different depending on the DVD. When 4 digits are displayed, they indicate the language code. Select the language code from the list on page 110.

You can select "SUBTITLE" directly

Press SUBTITLE on the remote. Each time you press the button, the item changes.


Notes

- When playing a DVD on which no subtitles are recorded, no subtitles appear.
- Depending on the DVD, you may not be able to turn the subtitles on even if they are recorded on the DVD.
- Depending on the DVD, you may not be able to turn the subtitles off.
- The type and number of languages for subtitles vary from disc to disc.
- Depending on the DVD, you may not be able to change the subtitles even if multilingual subtitles are recorded on it.
- While playing the DVD, the subtitle may change when:
 - you open the lid
 - you change the title
 - you disconnect the AC power adaptor
 - you detach the battery pack


Changing the Angles

With DVDs on which various angles (multi-angles) for a scene are recorded, you can change the angles. For example, while playing a scene of a train in motion, you can display the view from either the front of the train, the left window of the train or from the right window without having the train's movement interrupted.

Select "ANGLE" after pressing DISPLAY. When the angles can be changed, the "ANGLE" indicator lights up in green.

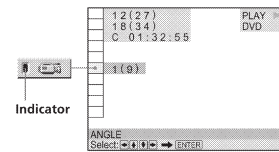


1 Select "ANGLE."

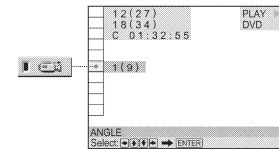


2 Press →.

The number of the angle changes to "1". The number in parentheses indicates the total number of angles.

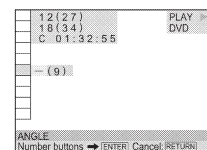

3 Select the angle number using the number buttons or ↑/↓, then press ENTER.

The angle is changed to the selected angle.

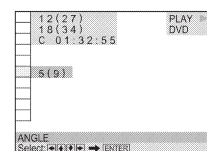

You can select "ANGLE" directly

Press ANGLE on the remote. Each time you press the button, the angle changes.

Notes

- The number of angles varies from disc to disc or from scene to scene. The number of angles that can be changed on a scene is equal to the number of angles recorded for that scene.
- Depending on the DVD, you may not be able to change the angles even if multi-angles are recorded on the DVD.

Digital Cinema Sound Settings


Select a mode to enjoy multichannel surround sound such as Dolby Digital.

Even if you connect only a stereo TV or front speakers, Virtual Enhanced Surround (VES) lets you enjoy 3D sound by using 3D sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers.

The surround sound signals are output when you have made the connections using an audio connecting cord.

When you have made the connections using an optical digital connecting cord and select a surround mode, the player does not output the Dolby Digital signals when you select "DOLBY DIGITAL" under "DIGITAL OUT" in the "AUDIO SETUP" display and set "DOLBY DIGITAL" to "D-PCM."

Select "VES" after pressing DISPLAY. When you select any item except "OFF," the "VES" indicator lights up in green.

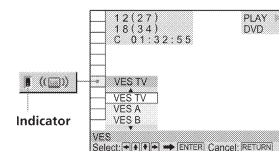

■ VES

Select the desired item. For details on each item, see "Effects of each item." The default setting is underlined.

- OFF
- VES TV
- VES A
- VES B
- VIRTUAL SEMI MULTI DIMENSION


Effects of each item

OFF

Outputs 2-channel signals for stereo sound. 5-channel signals for Dolby Digital sound of a DVD are mixed down to 2-channels.


VES (Virtual Enhanced Surround) TV

Uses 3D sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. This mode is effective when the distance between the front L and R speakers is short, such as built-in speakers on a stereo TV.

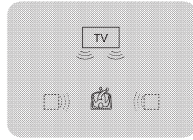


VES (Virtual Enhanced Surround) A

Uses 3D sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. The virtual speakers are reproduced as shown in the illustration on the right.

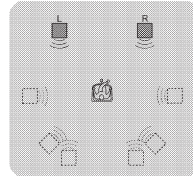


VES (Virtual Enhanced Surround) B

Uses 3D sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. The virtual speakers are reproduced as shown in the illustration on the right.

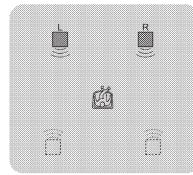

VIRTUAL SEMI MULTI DIMENSION

Uses 3D sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. This mode creates 5 sets of virtual speakers surrounding the listener at a 30° angle of elevation.

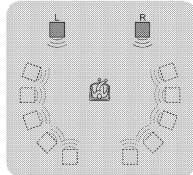

Using Various Functions with the Control Menu | 61

Digital Cinema Sound Settings (continued)

Notes

- When you select an item, the sound cuts off for a moment.
- When the playing signal does not contain the surround component, the effects may be difficult to hear even if you select "VES TV," "VES A," "VES B" or "VIRTUAL SEMI MULTI DIMENSION."
- Set the front speakers to form an equilateral triangle with the listening position at the top, or the effects may be difficult to hear even if you select "VES A," "VES B" or "VIRTUAL SEMI MULTI DIMENSION."
- When you select "VES TV," "VES A," "VES B" or "VIRTUAL SEMI MULTI DIMENSION," set the surround settings of the connected units, such as the amplifier, to OFF.
- You cannot use the headphone surround function and Virtual Enhanced Surround (VES) at the same time. When you turn on the headphone surround function, "VES" is automatically set to "OFF" (page 95).


62 | Using Various Functions with the Control Menu

Checking the Play Information (DVD)

You can check information such as the bit rate or the disc layer that is being played.

While playing a disc, the approximate bit rate of the playback picture is always displayed as Mbps (Mega bit per second) and the audio as kbps (kilo bit per second).

Select "ADVANCED" after pressing DISPLAY.

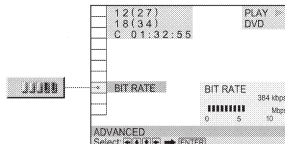

ADVANCED

The default setting is underlined.

When playing a DVD

- BIT RATE: displays the bit rate.
- LAYER: displays the layer and the pick-up point.
- OFF: turns off ADVANCED display.

continued


Using Various Functions with the Control Menu | 63

Checking the Play Information (continued)

Displays of each item

By pressing DISPLAY repeatedly, you can display either "BIT RATE" or "LAYER," whichever was selected in "ADVANCED."

BIT RATE

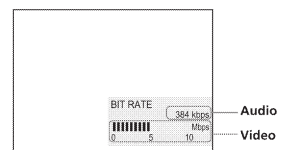

Bit rate refers to the amount of video/audio data per second in a disc. The higher the bit rate, the larger the amount of data. When the bit rate level is high, there is a large amount of data. However, this does not always mean that you can get higher quality pictures or sounds.

LAYER



Appears when the DVD has dual layers


Indicates the approximate point where the disc is playing. If it is a dual-layer DVD, the player indicates which layer is being read ("Layer 0" or "Layer 1"). For details on the layers, see page 108 (DVD).

64 | Using Various Functions with the Control Menu

Locking Discs (Custom Parental Control)




Using a registered password, you can set playback restrictions for the desired disc. You can set the same Custom Parental Control password for up to 50 discs. When you set the fifty-first disc, the first disc is canceled. The same password is used for both Parental Control (page 85) and Custom Parental Control. Select "CUSTOM PARENTAL CONTROL" after pressing DISPLAY.

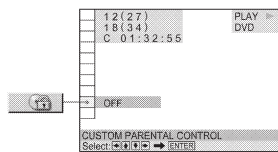


Setting the Custom Parental Control for a disc

- 1 Insert the disc you want to lock. If a disc is playing, press **■** to stop playback.
- 2 Select "CUSTOM PARENTAL CONTROL" using **↑/↓**, then press ENTER.
- 3 Select "ON" using **↑/↓**, then press ENTER.

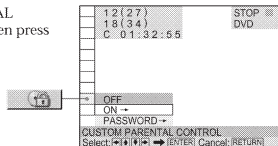

■ If you have not entered a password
The display for entering a password appears.

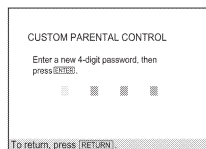

continued


Using Various Functions with the Control Menu | 65

Locking Discs (Custom Parental Control) (continued)

■ When you have already registered a password
The display for confirming the password appears. Skip Step 4.



- 4 Enter a 4-digit password using the number buttons, then press ENTER. The digits change to asterisks (*), and the display for confirming the password appears.

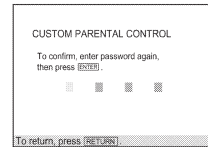

- 5 Enter the same 4-digit password using the number buttons, then press ENTER. "Custom parental control is set." appears and then the screen returns to the Control Menu display.

To return to the normal screen

Press **↵** RETURN.

To turn off the Custom Parental Control function

- 1 Select "CUSTOM PARENTAL CONTROL" using **↑/↓**, then press ENTER.
- 2 Select "OFF" using **↑/↓**, then press ENTER.
- 3 Enter your 4-digit password using the number buttons, then press ENTER.


To change the password

- 1 Select "CUSTOM PARENTAL CONTROL" using **↑/↓**, then press ENTER.
- 2 Select "PASSWORD" using **↑/↓**, then press ENTER.
- 3 Enter your 4-digit password using the number buttons, then press ENTER. The display for changing the password appears.
- 4 Enter a new 4-digit password using the number buttons, then press ENTER.
- 5 To confirm your password, re-enter it using the number buttons, then press ENTER.

66 | Using Various Functions with the Control Menu

Playing the disc for which the Custom Parental Control is set

- 1 Insert the disc. The CUSTOM PARENTAL CONTROL display appears.
- 2 Enter your 4-digit password using the number buttons, then press ENTER. The player starts playback.

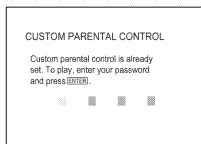

⚠ If you forget your password

Enter the 6-digit number "199703" whenever the CUSTOM PARENTAL CONTROL display asks you for your password, then press ENTER. The display will ask you to enter a new 4-digit password.

Notes

- Unless you enter the password, the player cannot play the disc for which the Custom Parental Control is set. When you do not know the password, press OPEN and remove the disc.
- When you insert the disc for which the Custom Parental Control is set, "CPC" appears on the display window. To play the disc, follow the steps above.


Using Various Functions with the Control Menu | 67

Creating Your Own Program (Program Play)



You can play the contents of the disc in the order you want by arranging the order of the titles, chapters or tracks on the disc and create your own program. One program can be stored in the player and contain up to 99 titles, chapters and tracks.

Select "PROGRAM" after pressing DISPLAY. When you select "ON," the "PROGRAM" indicator lights up in green.

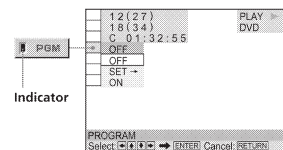

■ PROGRAM


The default setting is underlined.

- OFF: plays normally.
- SET: allows you to create your own program.
- ON: plays Program Play.


Creating the program

- 1 Select "SET" in "PROGRAM." The programming display appears.

"TRACK" is displayed when you play a VIDEO CD or a CD.

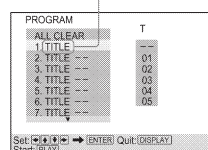

- 2 Press **→**. "01" is highlighted. It is ready to set the first title or track for Program Play.

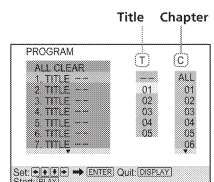



68 | Using Various Functions with the Control Menu

- 3 Select the title, chapter or track you want to program using \uparrow/\downarrow , then press ENTER.

For example, select title or track 2.
(You can also use the number buttons and ENTER button to make a selection. In this case, the selected number is displayed on the screen.)


■ **When playing a DVD**

When both titles and chapters are recorded on the disc, select the title, then the chapter.

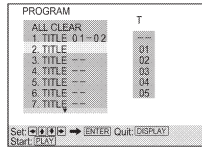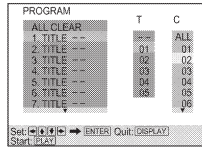

■ **When playing a VIDEO CD or CD**

Select the track you want to program.

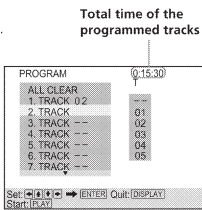

continued

Creating Your Own Program (Program Play) (continued)

- 4 To program other titles, chapters or tracks, repeat Step 3.
The programmed titles, chapters or tracks are displayed in the selected order.
- 5 Press \triangleright to start Program Play.

To stop Program Play

Press CLEAR on the remote.

To change the program

- 1 In Step 2, select the program number of the title, chapter or track you want to change using \uparrow/\downarrow .
- 2 Follow Step 3 for new programming.

To cancel the programmed order

To cancel all the titles, chapters or tracks in the programmed order, select "ALL CLEAR" in Step 2.
To cancel the selected program, select the program using \uparrow/\downarrow in Step 2 then press CLEAR, or select "--" in Step 3 then press ENTER.

💡 **The program remains even after Program Play ends**

When you press \triangleright , you can play the same program again.

💡 **You can do Repeat Play or Shuffle Play of the programmed titles, chapters or tracks**

During Program Play, set "REPEAT" or "SHUFFLE" to "ON" in the Control Menu display.


💡 **You can select "PROGRAM" directly**

Press PROGRAM on the remote.

💡 **You can select discs, titles, chapters and tracks for the program by looking at the display window**

You can program by looking at the display window instead of using the programming display on the screen.

When you select Track 3 in a VIDEO CD for Program 1, the display window will appear as follows:

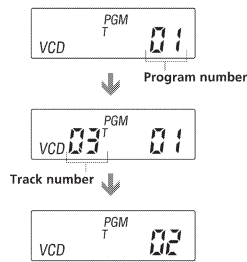


Notes

- The number of titles, chapters or tracks displayed are the same number of titles, chapters or tracks recorded on a disc.
- The program is canceled when:
 - you open the lid
 - you turn the power off
- Depending on the DVD, you may not be able to perform Program Play.
- If you are using the PBC playback function, you must first stop the disc before you can set a program.

Playing in Random Order (Shuffle Play) DVD VIDEO CD

You can have the player "shuffle" titles or tracks and play them in a random order. Subsequent "shuffling" may produce a different playing order.

Select "SHUFFLE" after pressing DISPLAY. When you select a shuffle mode other than "OFF," the "SHUFFLE" indicator lights up in green.

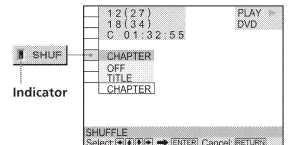

■ **SHUFFLE**

Selects the Shuffle Play setting. The default settings are underlined.

When playing a DVD and when Program Play is set to OFF

- OFF: does not play a disc in random order.
- TITLE: has the player "shuffle" titles and play them in a random order.
- CHAPTER: has the player "shuffle" chapters and play them in a random order.

When playing a VIDEO CD or CD (when Program Play is set to OFF)

- OFF: does not play a disc in random order.
- TRACK: has the player "shuffle" tracks and play them in a random order.

When playing a VIDEO CD, CD or DVD (when Program Play is set to ON)

- OFF: does not play a disc in random order.
- ON: has the player "shuffle" titles or tracks selected in Program Play and play them in a random order.

To stop Shuffle Play

Press CLEAR on the remote.

💡 **You can set Shuffle Play while the disc is stopped**

After selecting the "SHUFFLE" option, press \triangleright . The player starts Shuffle Play.

💡 **You can select "SHUFFLE" directly**

Press SHUFFLE on the remote.

Notes

- Shuffle Play is canceled when:
 - you open the lid
 - you turn the power off
- Depending on the DVD, you may not be able to perform Shuffle Play.
- Up to 200 chapters in a disc can be played in random order when "CHAPTER" is selected.
- You cannot perform Shuffle Play during PBC playback of VIDEO CDs (page 39).

Playing Repeatedly (Repeat Play)


DVD VIDEO CD

You can play all of the titles or tracks on a disc or a single title, chapter or track repeatedly.

In Shuffle or Program Play mode, the player repeats the titles or tracks in the shuffled or programmed order.

You cannot perform Repeat Play during PBC playback of VIDEO CDs (page 39).

Select "REPEAT" after pressing DISPLAY. When you select a repeat mode other than "OFF," the "REPEAT" indicator lights up in green.

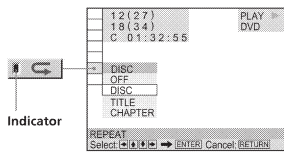

REPEAT

Selects the Repeat Play setting. The default settings are underlined.

When playing a DVD and when Program Play and Shuffle Play are set to OFF

- OFF: does not play repeatedly.
- DISC: repeats all of the titles.
- TITLE: repeats the current title on a disc.
- CHAPTER: repeats the current chapter.

When playing a VIDEO CD/CD and when Program Play and Shuffle Play are set to OFF

- OFF: does not play repeatedly.
- DISC: repeats all of the tracks on a disc.
- TRACK: repeats the current track.

When Program Play or Shuffle Play is on

- OFF: does not play repeatedly.
- ON: repeats Program Play or Shuffle Play.

To stop Repeat Play

Press CLEAR on the remote.

You can set Repeat Play while the disc is stopped

After selecting the "REPEAT" option, press >. The player starts Repeat Play.

You can select "REPEAT" directly

Press REPEAT on the remote.

Notes

- Repeat play is canceled when:
 - you open the lid
 - you turn the power off
- Depending on the DVD, you may not be able to perform Repeat Play.

Using Various Functions with the Control Menu 73


Repeating a Specific Portion (A-B Repeat)

DVD VIDEO CD

You can play a specific portion of a title, chapter or track repeatedly. This function is useful when you want to do such things as memorize lyrics.

During PBC Playback of VIDEO CDs (page 39), this function is available only while playing moving pictures.

Select "A-B REPEAT" after pressing DISPLAY. During A-B Repeat Play, the "A-B REPEAT" indicator lights up in green.

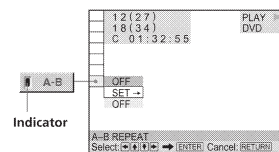

A-B REPEAT



The default setting is underlined.

- SET: sets the A and B points.
- OFF: does not play a specific portion of a title/chapter/track repeatedly.

Setting a portion for A-B repeat


1 Select "SET" in "A-B REPEAT."

The A-B REPEAT setting display appears.

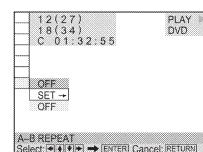


74 Using Various Functions with the Control Menu

- 2 During playback, when you find the starting point (point A) of the portion to be played repeatedly, press ENTER. The starting point (point A) is set.



- 3 When you reach the ending point (point B), press ENTER again. The set points are displayed and the player starts repeating this specific portion. "A-B" appears on the display window during A-B repeat play.

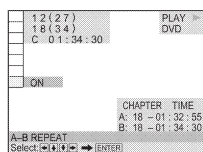

To stop A-B Repeat Play

Press CLEAR on the remote.

Notes

- You can set A-B Repeat for only one specific portion.
- A-B Repeat is canceled when:
 - you open the lid
 - you turn the power off
- When you set A-B Repeat, the settings for Shuffle Play, Repeat Play and Program Play are canceled.
- You may not be able to set A-B Repeat for some DVD or VIDEO CD scenes.

Using Various Functions with the Control Menu 75

Settings and Adjustments

Using the Setup Display


DVD VIDEO CD

Using the setup display, you can do the initial setup, adjust the picture and sound and set the various outputs. You can also set a language for the subtitles and the setup display, limit playback by children, and so on.


For details on each setup display item, see pages 79 to 93.

Note


You can display the setup display only when the player is in stop mode.

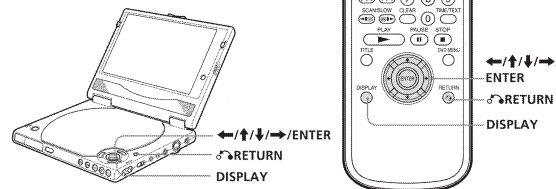

- 1 Press DISPLAY and select "SETUP" using </>.

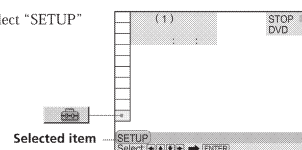


- 2 Press ENTER. The setup display appears.

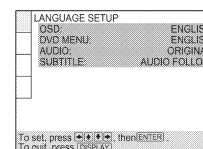


76 Settings and Adjustments


- 3 Select the main item you want using \uparrow/\downarrow .




- 4 Press ENTER.
The selected main item is highlighted.

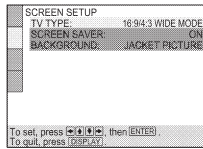

- 5 Select the item you want using \uparrow/\downarrow .

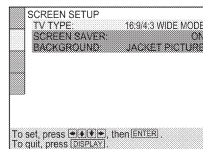


- 6 Press ENTER.

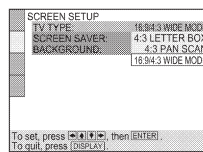


continued

Using the Setup Display (continued)

- 7 Select the setting you want using $\leftarrow/\rightarrow/\uparrow/\downarrow$.

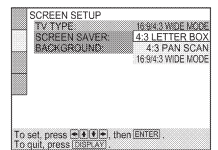

- 8 Press ENTER.

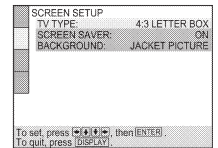

- 9 Press DISPLAY.
The setup display disappears.

- 10 Press DISPLAY repeatedly to turn off the on-screen menu.

To return to the previous screen

Press \leftarrow RETURN.

To quit while making a selection

Press DISPLAY.


Note

Some setup display items require operations other than selecting the setting. For details on these items, see the relevant pages.


Setup Display Item List

Default settings are underlined.


LANGUAGE SETUP (page 80)

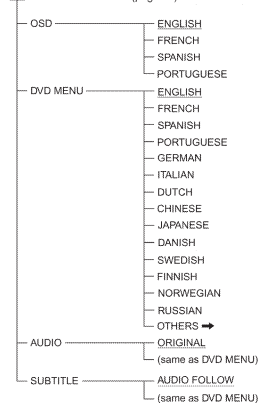

CUSTOM SETUP (page 85)

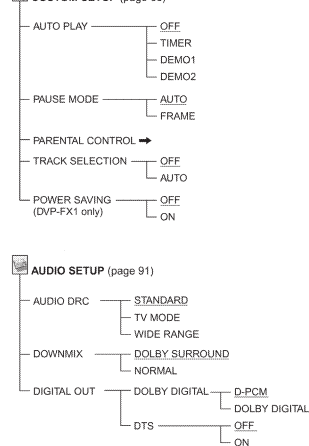


SCREEN SETUP (page 83)

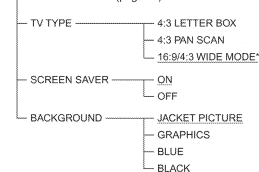

* The default setting for DVP-F5 is "4:3 LETTER BOX."

Setting the Display Language or Sound Track (LANGUAGE SETUP) DVD VIDEO CD

"LANGUAGE SETUP" allows you to set various languages for the on-screen display or sound track. The default settings are underlined. Select "LANGUAGE SETUP" in the setup display.

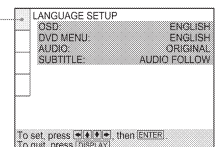

Notes

- When you select a language that is not recorded on the DVD, one of the recorded languages is automatically selected for the "DVD MENU", "AUDIO" and "SUBTITLE" settings.
- Depending on the DVD, the player may not start playing with the selected language even when you select a language in "DVD MENU", "AUDIO" or "SUBTITLE."

■ OSD (On-Screen Display)

Selects the language for the on-screen display.

- ENGLISH
- FRENCH
- SPANISH
- PORTUGUESE

■ DVD MENU

Selects the language for the DVD menu.

- ENGLISH
- FRENCH
- SPANISH
- PORTUGUESE
- GERMAN
- ITALIAN
- DUTCH
- CHINESE
- JAPANESE
- DANISH
- SWEDISH
- FINNISH
- NORWEGIAN
- RUSSIAN
- OTHERS \rightarrow

When you select "OTHERS→," select and enter the language code from the list using the number buttons (page 110).
After you have made a selection, the language code (4 digits) is displayed.

■ AUDIO

Selects the language for the sound track.

- ORIGINAL: the language given priority in the disc
- ENGLISH
- FRENCH
- SPANISH
- PORTUGUESE
- GERMAN
- ITALIAN
- DUTCH
- CHINESE
- JAPANESE
- DANISH
- SWEDISH
- FINNISH
- NORWEGIAN
- RUSSIAN
- OTHERS→

When you select "OTHERS→," select and enter the language code from the list using the number buttons (page 110).
After you have made a selection, the language code (4 digits) is displayed.

continued

Setting the Display Language or Sound Track (LANGUAGE SETUP) (continued)

■ SUBTITLE

Selects the language for the subtitles.

- AUDIO FOLLOW*
- ENGLISH
- FRENCH
- SPANISH
- PORTUGUESE
- GERMAN
- ITALIAN
- DUTCH
- CHINESE
- JAPANESE
- DANISH
- SWEDISH
- FINNISH
- NORWEGIAN
- RUSSIAN
- OTHERS→

When you select "OTHERS→," select and enter the language code from the list using the number buttons (page 110).
After you have made a selection, the language code (4 digits) is displayed.

* When you select "AUDIO FOLLOW," the language for the subtitles changes according to the language for the setting you selected in "AUDIO."


Settings for the Display (SCREEN SETUP)



"SCREEN SETUP" allows you to set the display according to the playback conditions.

The default settings are underlined.

Select "SCREEN SETUP" in the setup display.

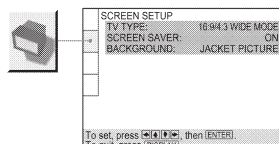

■ TV TYPE

Selects the aspect ratio of the TV to be connected.

- 4:3 LETTER BOX: select this when you connect a normal TV to the player. Displays a wide picture with bands on the upper and lower portions of the screen.
- 4:3 PAN SCAN: select this when you connect a normal TV to the player. Displays the wide picture on the whole screen automatically and cuts off the portions that do not fit.
- 16:9/4:3 WIDE MODE: select this when you connect a wide-screen TV to the player or when you connect a TV with WIDE MODE function to the player (displays a wide picture with bands displayed on the upper and lower portions of the screen).

4:3 LETTER BOX



16:9



4:3 PAN SCAN



4:3 WIDE MODE



continued

Settings for the Display (SCREEN SETUP) (continued)

💡 To select the display mode (DVP-FX1 only)

You can select the display mode of the LCD screen according to the TV TYPE setting. Press DISPLAY MODE on the player repeatedly to select the display mode. For details, see "Selecting the display mode" (page 15).

Notes

- Depending on the DVD, "4:3 LETTER BOX" may be selected automatically instead of "4:3 PAN SCAN" and vice versa.
- The default setting for DVP-F5 is "4:3 LETTER BOX."

■ SCREEN SAVER

Turns on and off the screen saver. If you turn on the screen saver, the screen saver image appears when you leave the player or the remote in pause or stop mode for 15 minutes, or when you play back a CD for more than 15 minutes. The screen saver will help prevent your display device from becoming damaged.

- ON: turns on the screen saver.
- OFF: turns off the screen saver.

■ BACKGROUND

Selects the background color or picture on the screen in stop mode or while playing a CD.

- JACKET PICTURE: The jacket picture appears in the background, but only when the jacket picture is already recorded on the disc.
- GRAPHICS: A preset picture stored in the player appears in the background.
- BLUE: The background color is blue.
- BLACK: The background color is black.


Note

If a disc which does not contain the jacket picture is played while "BACKGROUND" is set to "JACKET PICTURE," the picture stored in the player will automatically appear in the background.

Custom Settings (CUSTOM SETUP)

DVD VIDEO CD

"CUSTOM SETUP" allows you to set the playback conditions. The default settings are underlined. Select "CUSTOM SETUP" in the setup display.

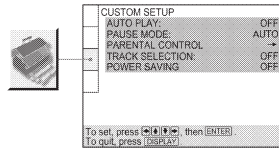

AUTO PLAY

Selects the Auto Play setting when you connect the AC power cord to the AC outlet.

- **OFF:** does not use "TIMER," "DEMO1" or "DEMO2" to start playback.
- **TIMER:** starts playing when the player is turned on, or at any time you want when connected to a timer (not supplied). Before setting the timer, detach the battery pack, connect the AC power adaptor and turn off the player.
- **DEMO1:** starts playing the first demonstration automatically.
- **DEMO2:** starts playing the second demonstration automatically.

PAUSE MODE (DVD only)

Selects the picture in pause mode.

- **AUTO:** A picture including subjects that move dynamically is output with no jitter. Normally select this position.
- **FRAME:** A picture including subjects that do not move dynamically is output with high resolution.

PARENTAL CONTROL

Sets a password and playback limitation level for DVDs with playback limitation for children.

The same password is used for both Parental Control and Custom Parental Control (page 65).

For details, see "Limiting Playback by Children (Parental Control)." continued


Custom Settings (CUSTOM SETUP) (continued)

Limiting Playback by Children (Parental Control)


DVD

Playback of some DVDs can be limited depending on the age of the users. The "Parental Control" function allows you to set a playback limitation level.

Select "CUSTOM SETUP" in the setup display.

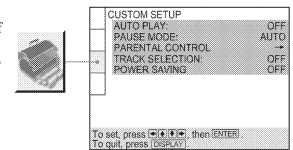


- 1 Select "PARENTAL CONTROL" using \uparrow/\downarrow , then press ENTER.

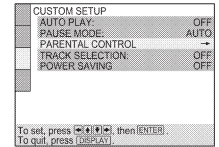


When you have not entered a password

The display for entering a password appears.

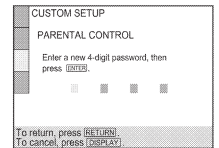


When you have already registered a password

The display for confirming the password appears. Skip Step 2.

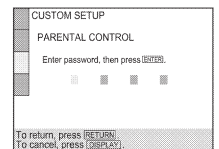


- 2 Enter a password in 4 digits using the number buttons, then press ENTER.

The digits change to asterisks (*), and the display for confirming the password appears.

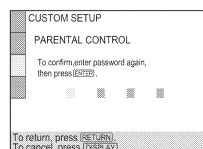


- 3 To confirm your password, enter it again using the number buttons, then press ENTER.


The display for setting the playback limitation level and changing the password appears.

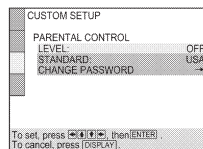

- 4 Select "STANDARD" using \uparrow/\downarrow , then press \rightarrow .

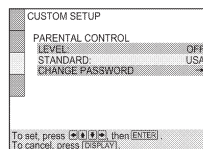


- 5 Select a geographic area as the playback limitation level standard using \uparrow/\downarrow , then press \rightarrow . When you select "OTHERS \rightarrow ," select and enter the standard code in the table on page 89 using the number buttons.

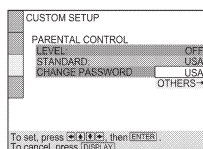

continued


Custom Settings (CUSTOM SETUP) (continued)

- 6 Select "LEVEL" using \uparrow/\downarrow , then press \rightarrow .

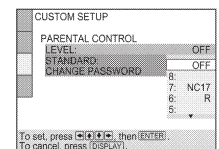

- 7 Select the level you want using \uparrow/\downarrow , then press ENTER.

The lower the value, the more strict the limitation.

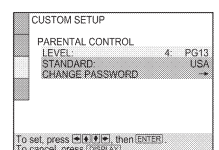

To return to the normal screen Press DISPLAY.

To turn off the Parental Control function and play the DVD after entering your password

Set "LEVEL" to "OFF" in Step 7, then press \triangleright .

To change the password

- 1 After Step 3, select "CHANGE PASSWORD" using \uparrow/\downarrow , then press \rightarrow or ENTER.

The display for changing the password appears.

- 2 Follow Steps 2 and 3 to enter a new password.

Playing a disc which is blocked by the playback limitation level

- 1 Insert the disc and press \triangleright .

The PARENTAL CONTROL display appears.

- 2 Enter your 4-digit password using the number buttons, then press ENTER.

The player starts playback.

When you stop playing the DVD, the level returns to the original level.

🔑 If you forget your password

Enter the 6-digit number "199703" whenever the PARENTAL CONTROL display asks you for your password, then press ENTER. The display will ask you to enter a new 4-digit password.

Notes

- When you play DVDs which do not have the Parental Control function, playback cannot be limited on this player.
- If you do not set a password, you cannot change the settings for playback limitation.
- Depending on the DVD, you may be asked to change the parental control level while playing the disc. In this case, enter your password, then change the level. When you stop playing the DVD, the level returns to the original level.
- The same password is used for both Parental Control and Custom Parental Control (page 65).

Standard	Code number	Standard	Code number
Argentina	2044	Korea	2304
Australia	2047	Malaysia	2363
Austria	2046	Mexico	2362
Belgium	2057	Netherlands	2376
Brazil	2070	New Zealand	2390
Canada	2079	Norway	2379
Chile	2090	Pakistan	2427
China	2092	Philippines	2424
Denmark	2115	Portugal	2436
Finland	2165	Russia	2489
France	2174	Singapore	2501
Germany	2109	Spain	2149
Hong Kong	2219	Sweden	2499
India	2248	Switzerland	2086
Indonesia	2238	Taiwan	2543
Italy	2254	Thailand	2528
Japan	2276	United Kingdom	2184

Custom Settings (CUSTOM SETUP) (continued)

■ TRACK SELECTION

Gives the sound track which contains the highest number of channels priority when you play a DVD on which multiple audio formats (PCM, DTS or Dolby Digital format) are recorded.

- OFF : No priority given.
- AUTO : Priority given.

Notes

- When you set this item to "AUTO", the language may change depending on the "AUDIO" settings in "LANGUAGE SETUP". The "TRACK SELECTION" setting has higher priority than the "AUDIO" settings in "LANGUAGE SETUP" (page 81).
- If you select "DIGITAL OUT" in "AUDIO SETUP" and set "DTS" to "OFF," the DTS sound track is not played even if you set this item to "AUTO" and the highest-numbered audio channel is recorded in DTS format.
- If PCM, DTS and Dolby Digital sound tracks have the same number of channels, the player selects PCM, DTS and Dolby Digital sound tracks in this order.
- Depending on the DVD, the audio channel with priority may be predetermined. In this case, you cannot give priority to the DTS or Dolby Digital format by selecting "AUTO."

■ POWER SAVING (DVP-FX1 only)

Turns on and off the power saving function. If you turn on the power saving function, the brightness of the LCD screen is reduced to conserve the battery life of the battery pack.

- OFF : turns off the power saving function.
- ON : turns on the power saving function. The player can reduce the power consumption by approximately 10 percent.

Note


- Even if you set this item to "ON," the display window lights up whenever:
 - you set the LINE SELECT switch to "JIN" to watch the picture from other equipment
 - you turn on the player

Settings for the Sound (AUDIO SETUP)

"AUDIO SETUP" allows you to set the sound according to the playback conditions.

The default settings are underlined.

Select "AUDIO SETUP" in the setup display.

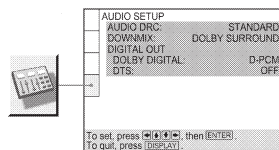

■ AUDIO DRC (Dynamic Range Control)

Makes the sound clear when the volume is turned down when playing a DVD. This function works only when you play a DVD which has the AUDIO DRC function.

This affects the output when:

- you have made the connections using an audio connecting cord
- you have made the connections using an optical digital connecting cord (when you set "DOLBY DIGITAL" to "D-PCM" in "DIGITAL OUT")

- **STANDARD**: Normally select this position.
- **TV MODE**: makes the low sounds clear even if you turn the volume down. It is especially recommended when you listen to the sound using the speakers of the TV.
- **WIDE RANGE**: It gives you the feeling of being at a live performance. When you use high quality speakers, it is more effective.

Note

When you play DVDs without the AUDIO DRC function, there may be no effect on the sound.

Settings for the Sound (AUDIO SETUP) (continued)

■ DOWNMIX

Switches the mixing down methods when you play a DVD on which rear signal components such as LS, RS or S are recorded in Dolby Digital format. For details on the rear signal components, see "Displaying the audio information of the disc" (page 55).

This affects the output when:

- you have made the connections using an audio connecting cord
- you have made the connections using an optical digital connecting cord (when you set "DOLBY DIGITAL" to "D-PCM" in "DIGITAL OUT")

- **DOLBY SURROUND**: when the player is connected to an audio component that conforms to Dolby Surround (Pro Logic). The output signals which reproduce the Dolby Surround (Pro Logic) effect are mixed down to 2 channels.
- **NORMAL**: when the player is connected to an audio component that does not conform to Dolby Surround (Pro Logic). The signal without the Dolby Surround (Pro Logic) effect are output.

Setting the digital output signal (DIGITAL OUT)

Switches the methods of outputting audio signals when you connect 1. a digital component such as a receiver (amplifier) having a digital connector, 2. an audio component having a built-in decoder (Dolby Digital or DTS), 3. a DAT or MD using an optical digital connecting cord. For connection details, see pages 19 and 22.

Note

When you have made the connections using an optical digital connecting cord and play sound tracks with a 96 kHz sampling frequency, the output signals are converted to 48 kHz (sampling frequency). When you have made the connections using an audio connecting cord, sampling frequency stays at 96 kHz and the output signals are converted to analog signals.

■ DOLBY DIGITAL

Selects the Dolby Digital signals to be output when you have made the connections using an optical digital connecting cord.

- **D-PCM** (Downmix PCM): when you play Dolby Digital sound tracks, the output audio signals are mixed down to 2 channels. You can select whether the signals conform to Dolby Surround (Pro Logic) or not by making adjustments to the "DOWNMIX" item in "AUDIO SETUP."
- **DOLBY DIGITAL**: when the player is connected to an audio component with a built-in Dolby Digital decoder.

If the player is connected to an audio component lacking a built-in Dolby Digital decoder, do not set this. Otherwise, when you play the Dolby Digital sound track, a loud noise or no sound will come out from the speakers, affecting your ears or causing the speakers to be damaged.

Note

When you select "D-PCM," set Virtual Enhanced Surround (VES) to "OFF." Otherwise, the player will not output signals when you have made the connections using an optical digital connecting cord.

■ DTS


Selects the DTS signals to be output when you have made the connections using an optical digital connecting cord.

- **OFF**: when the player is connected to an audio component lacking a built-in DTS decoder.
- **ON**: when the player is connected to an audio component having a built-in DTS decoder.

If the player is connected to an audio component lacking a built-in DTS decoder, do not set this. Otherwise, when you play the DTS sound track, a loud noise will come out from the speakers, affecting your ears or causing the speakers to be damaged.

Preventing the Buttons from being Pressed Accidentally

You can prevent the buttons from being pressed accidentally on this player (when carrying it, for example). After setting the HOLD switch to on, the buttons are locked. (You can still use the remote to operate the player.)

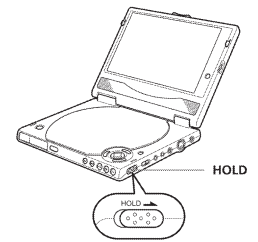

Slide HOLD in the direction of the arrow.

The buttons are locked.

If you press the buttons, "Hold" appears on the display window.


To cancel the Hold function

Slide HOLD back.

Additional Operations

Listening with Headphones

You can enjoy the audio sound through headphones (not supplied) by connecting them to the PHONES jack. Turn VOL to adjust the volume.

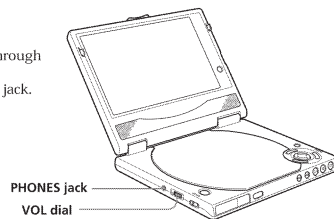


Before starting playback

Adjust the sound volume to MIN (lowest level), then press ► and turn up the volume little by little.

Using the headphone surround function

Even if you listen to the sound through headphones, the headphone surround function gives the sound a 3D surround effect for a more realistic listening experience. The headphone surround function uses the SRS HEADPHONE* technology.

Set HP SURROUND to ON to turn on the headphone surround function.

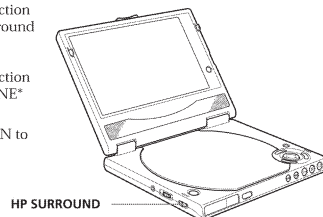

Notes

- You cannot use the headphone surround function and Virtual Enhanced Surround (VES) at the same time. When you turn on the headphone surround function, "VES" is automatically set to "OFF" (page 60).
- The sound may be interrupted for a moment when you switch HP SURROUND on or off.
- Depending on the disc, the headphone surround function may not work properly.

* SRS HEADPHONE and the (●) symbol are trademarks of SRS Labs, Inc. in the United States and selected foreign countries. SRS HEADPHONE technology is incorporated under license from SRS Labs, Inc.

Watching the Picture without Connecting Cables — LASER LINK

If you use the LASER LINK* function, you can easily view the picture on your TV without connecting cables. LASER LINK is a system which transmits and receives pictures and sound between LASER LINK compatible video equipment by using infrared rays.


To enjoy the LASER LINK function, the following accessories are needed:

- AV cordless IR transmitter IFV-FX1 (not supplied)
- AV cordless IR receiver IFT-R20 (not supplied)

* LASER LINK is a trademark of Sony Corporation.

Hookups

- 1 Connect the IFV-FX1 AV cordless IR transmitter (not supplied) to the player.

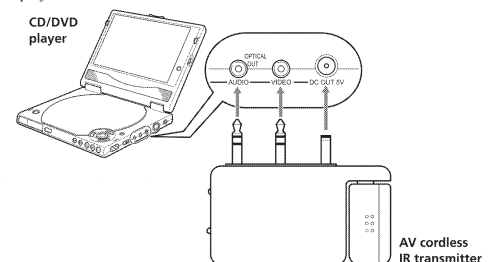


- 2 Connect the AV cordless IR receiver (ex. IFT-R20, not supplied) to your TV.


For details, refer to the operating instructions of the receiver.

Operation

- 1 Turn on the TV and select the video input.
- 2 Turn on the AV cordless IR receiver.
- 3 Set the LINE SELECT switch on the player to OUT.
- 4 Press POWER to turn on the player.
- 5 Set the POWER switch on the AV cordless IR transmitter to ON.
The POWER indicator lights up.

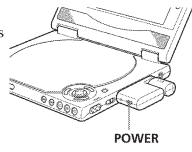

- 6 Adjust the angle and direction of the AV cordless IR transmitter to match the AV cordless IR receiver.
Place the player directly in front of the TV within the range specified on the right.

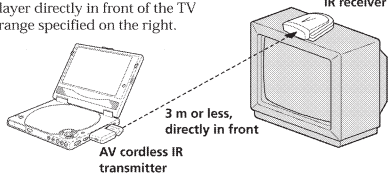

- 7 Start playback on the player.
- 8 Adjust the distance and angle between the AV cordless IR transmitter and the AV cordless IR receiver so that the playback picture appears clearly on the TV.

To turn off the equipment

Be sure to turn off the AV cordless IR transmitter before you turn off the player.

Notes


- Do not connect the AV cordless IR receiver to a video deck, or do not use an AV cordless IR receiver built into a video deck. If you do, noise may appear in the picture.
- Do not cover the AV cordless IR transmitter and the AV cordless IR receiver with your hands or other objects.
- Infrared rays cannot pass through walls or opaque glass. Be sure to place the player in an unobstructed position. Using LASER LINK through glass will shorten the transmission range.
- Do not place the player too close to the TV, as this may cause noise and/or beat.
- When using the battery pack, picture or sound noise may appear or the transmission range may be shortened if the battery power is low. Use the AC power adaptor or charge the battery pack.

Additional Operations | 97

Watching the Picture of Other Equipment on the LCD Screen (DVP-FX1 only)

You can watch the picture of other connected equipment, such as a video camera, on the LCD screen.

Be sure to set the LINE SELECT switch on the player to IN.

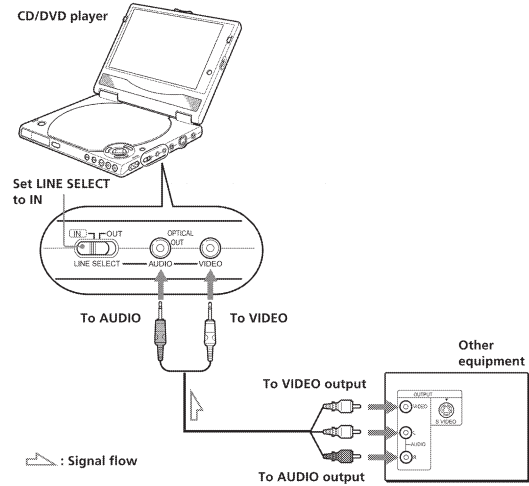

Note

When LINE SELECT is set to IN, you cannot play discs on the player.

98 | Additional Operations

Additional Information

Troubleshooting

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help remedy the problem. Should any problem persist, consult your nearest Sony dealer.

Symptom	Remedy		
Power	The power is not turned on.	<ul style="list-style-type: none"> • Check that the AC power cord is connected securely. • When using the battery pack, check the remaining battery life. • Make sure you use the supplied AC power adaptor. (Do not use any other AC power adaptor.) • Check that the HOLD switch is set to off. • Disconnect the AC power adaptor from this player for more than 10 minutes. Then connect the AC power adaptor and turn the power on again. If the power is still not turned on, disconnect the AC power adaptor and the battery pack and refer to your nearest Sony dealer. 	
	The power is turned off automatically.	<ul style="list-style-type: none"> • The Auto Power Off function is activated. (If you do not operate the player or the remote for more than 30 minutes when a disc is not being played, the power will be automatically turned off.) Press POWER on the player to turn the power on. • Batteries are depleted. Recharge the battery pack. 	
	Picture	There is no picture.	<ul style="list-style-type: none"> • The LINE SELECT switch is set to IN. Set it to OUT. (DVP-FX1 only) • Check that the player is connected securely. • The video connecting cord is damaged. Replace it with a new one. • Use only the supplied video connecting cord. • Make sure you connect the player to the video input connector on the TV (page 17). • Make sure you turn on the TV. • Make sure you select the video input on the TV so that you can view the pictures from the player. • The display mode is set to off. Press DISPLAY MODE to change the display mode. (DVP-FX1 only)

continued

Additional Information | 99

Troubleshooting (continued)

Symptom	Remedy	
Picture	Picture noise appears.	<ul style="list-style-type: none"> • Clean the disc. • If the video signal from your DVD player has to go through your VCR to get to your TV, the copy-protection applied to some DVD programs could affect picture quality. If you still experience problems after checking your connections, please try connecting your DVD player directly to your TV's S-input, if your TV is equipped with this input (page 17). • Check that this player is placed in a horizontal position and there is no mechanical vibration or shock. • There is a flaw on the disc. • When you watch the picture of other equipment using the LCD screen, the picture noise may appear if the color system of the input signal is different from that of the LCD screen. Change the color system of the LCD screen by pressing DISPLAY on the player for more than two seconds (DVP-FX1 only; page 98). • Picture noise may appear when you use the LASER LINK function. Use the supplied audio/video connecting cord to get a clear picture.
	Even though you set the aspect ratio in "TV TYPE" in "SCREEN SETUP" of the setup display, the picture does not fill the screen.	<ul style="list-style-type: none"> • The aspect ratio is fixed on your DVD.
	The VIDEO CD menu does not appear.	<ul style="list-style-type: none"> • Make sure you play a VIDEO CD with PBC functions. • Make sure you follow the instructions for interactive operations. Refer to the instructions supplied with the disc.
	Sound	There is no sound.

100 | Additional Information

Symptom	Remedy
There is no sound.	<ul style="list-style-type: none"> The player is in pause mode or in Slow-motion Play mode. Press ⏪ to return to normal play mode. The player is in fast forward or fast reverse mode. Press ⏩ to return to normal play mode. Check the speaker connections (page 23). Refer to the operating manual of your receiver (amplifier). You selected a VES mode other than "OFF" in the Control Menu display when you connected the component using the optical digital connecting cord. Set "VES" to "OFF" in the Control Menu display (page 60). When you have made the connections using an audio connecting cord and play DTS sound tracks, no sound will come out (page 31). Check that the headphones plug connected to the headphones jack is firmly connected to this player. Check that the VOL dial is not set to "MIN." When you close the LCD panel, no sound will come out from the built-in speakers (DVP-FX1 only).
Sound is noisy.	<ul style="list-style-type: none"> Clean the disc. There is a flaw on the disc. When you have made the connections using an audio connecting cord and play a CD with DTS sound tracks, sound noise will come out (page 31). Check that this player is placed in a horizontal position and there is no mechanical vibration or shock.
The sound loses its stereo effect when you play a VIDEO CD or a CD.	<ul style="list-style-type: none"> Set "AUDIO" to "STEREO" in the Control Menu display (page 54). Make sure you connect the player correctly (pages 17, 20, 23).
The surround effect is difficult to hear when you are playing a Dolby Digital sound track.	<ul style="list-style-type: none"> Check the speaker connections (page 23). Refer to the operating manual of your receiver (amplifier). Depending on the DVD, the output signal may not be the entire 5.1 channels. It may be monaural or stereo even if the sound track is recorded in Dolby Digital format.

continued

Troubleshooting (continued)

Symptom	Remedy
The remote does not function.	<ul style="list-style-type: none"> Remove any obstacles between the remote and the player. Use the remote near the player. Point the remote at the remote sensor ④ on the player. Replace all of the batteries in the remote with new ones if they are weak. When using the battery pack, press POWER on the player to turn on it. When using the battery pack and 10 minutes have passed after turning off the player, you cannot turn on the player with the remote. Make sure you use the supplied remote.
The disc does not play.	<ul style="list-style-type: none"> There is no disc inside ("Insert disc." appears on the screen). Insert a disc. Insert the disc correctly with the playback side facing down. Clean the disc. There is a flaw on the disc. The player cannot play CD-ROMs, etc (page 7). Insert a DVD, a VIDEO CD, or CD. Check the region code of the DVD (page 6). Moisture has condensed inside the player. Remove the disc and leave the player turned on for about half an hour (page 10). Check that the player is placed in a horizontal position. The buttons on the player are locked. Slide HOLD back to the off position. The LINE SELECT switch is set to IN. Set it to OUT. (DVP-FX1 only)
VES (Virtual Enhanced Surround) does not function.	<ul style="list-style-type: none"> The headphone surround function is turned on. Set HP SURROUND to OFF.
The player does not play from the beginning when playing a disc.	<ul style="list-style-type: none"> Repeat Play, Shuffle Play or Program Play has been selected. Press CLEAR (pages 68 to 73). Resume Play has been selected. Press ⏮ on the player or on the remote before you start playing (page 35). A title menu or a DVD menu automatically appears on the TV screen when you play your DVD, or a setup display automatically appears on the TV screen when you play your VIDEO CD with PBC functions.

Operation

Additional Information | 101 | 102 | Additional Information

Symptom	Remedy
The player starts playing the disc automatically.	<ul style="list-style-type: none"> The DVD features the auto playback function. "AUTO PLAY" in "CUSTOM SETUP" is set to "TIMER." (page 85)
Playback stops automatically.	<ul style="list-style-type: none"> The disc may contain an auto pause signal. While playing such a disc, the player stops playback at the signal. There is a flaw on the disc.
You cannot perform some functions such as Stop, Search, Slow-motion Play, Repeat Play, Shuffle Play or Program Play.	<ul style="list-style-type: none"> Depending on the disc, you may not be able to do some of these operations.
Messages do not appear on the screen in the language you want.	<ul style="list-style-type: none"> In the setup display, select the desired language for the on-screen display in "OSD" under "LANGUAGE SETUP" (page 80).
The language for the sound track cannot be changed when you play a DVD.	<ul style="list-style-type: none"> Multilingual tracks are not recorded on the DVD. Changing the language for the track is prohibited on the DVD.
The subtitle language cannot be changed when you play a DVD.	<ul style="list-style-type: none"> Multilingual subtitles are not recorded on the DVD. Changing the language for the subtitles is prohibited on the DVD.
The subtitles cannot be turned off when you play a DVD.	<ul style="list-style-type: none"> Depending on the DVD, you may not be able to turn the subtitles off.
The angles cannot be changed when you play a DVD.	<ul style="list-style-type: none"> Multi-angles are not recorded on the DVD. Changing the angles is prohibited on the DVD.
The player does not operate properly.	<ul style="list-style-type: none"> Static electricity, etc., may affect the player's operation. Disconnect the AC power cord once, then connect it again. When using the battery pack, detach it once and attach it again.
"Lo dc In" appears on the display window.	<ul style="list-style-type: none"> When using the battery pack, the AC power adaptor is not connected to an AC outlet even if the AC power adaptor is connected to the player. Disconnect the AC power adaptor from the player. Check that the AC power adaptor is connected to an AC outlet, then disconnect from this player and connect again. Use only the supplied AC power adaptor.
"Hi dc In" appears on the display window.	<ul style="list-style-type: none"> Use only the supplied AC power adaptor.
"Hi bat" appears on the display window.	<ul style="list-style-type: none"> There may be a problem with the battery pack. Detach it and consult your nearest Sony dealer.

continued

Additional Information | 103 | 104 | Additional Information

Troubleshooting (continued)

Symptom	Remedy
"□" flashes on the display window.	<ul style="list-style-type: none"> There may be a problem with charging. Disconnect the AC power adaptor and detach the battery pack. Then attach the battery pack and connect the AC power adaptor to start charging again. If "□" still flashes, consult your nearest Sony dealer.
"HiTEMP" appears and "□" flashes on the display window.	<ul style="list-style-type: none"> The player and the battery pack unusually heat up while charging. Charge the battery pack at a temperature between 41 °F to 95 °F (5 °C to 35 °C).
"dcOut" appears on the display window.	<ul style="list-style-type: none"> There may be a problem with the AV cordless IR transmitter. Detach it and consult your nearest Sony dealer.
5 numbers or letters are displayed on the screen and on the display window.	<ul style="list-style-type: none"> The self diagnosis function was activated. See the table on page 105.

Operation

Self-diagnosis Function

When the self-diagnosis function activates to prevent the player from malfunctioning, a five-character service number (combination of a letter and digits) flashes on the screen and on the display window. In this case, check the following table.



First three characters	Cause and/or Corrective Action
C13	<ul style="list-style-type: none"> The disc is dirty. → Clean the disc with a cleaning cloth (page 12).
C31	<ul style="list-style-type: none"> The disc is not inserted correctly. → Open the disc tray and insert the disc correctly.
Exx (xx is any number)	<ul style="list-style-type: none"> To prevent a malfunction, the player has performed the self-diagnosis function. → When you contact your Sony dealer or local authorized Sony service facility, give the 5-character service number. (example: E:61:10)

Additional Information | 105

Language Code List

For details, see pages 54, 57 and 81.

The language spellings conform to the ISO 639: 1988 (E/F) standard.

Code	Language	Code	Language	Code	Language
1027	Afar	1151	Basque	1297	Kazakh
1028	Abkhazian	1157	Persian	1298	Greenlandic
1032	Afrikaans	1165	Finnish	1299	Cambodian
1039	Amharic	1166	Fiji	1300	Kannada
1044	Arabic	1171	Faroese	1301	Korean
1045	Assamese	1174	French	1305	Kashmiri
1051	Aymara	1181	Frisian	1307	Kurdish
1052	Azerbaijani	1183	Irish	1311	Kirghiz
1053	Bashkir	1186	Scots Gaelic	1313	Latin
1057	Byelorussian	1194	Galician	1326	Lingala
1059	Bulgarian	1196	Guarani	1327	Laotian
1060	Bihari	1203	Gujarati	1332	Lithuanian
1061	Bislama	1209	Hausa	1334	Latvian; Lettish
1066	Bengali; Bangla	1217	Hindi	1345	Malagasy
1067	Tibetan	1226	Croatian	1347	Maori
1070	Breton	1229	Hungarian	1349	Macedonian
1079	Catalan	1233	Armenian	1350	Malayalam
1093	Corsican	1235	Interlingua	1352	Mongolian
1097	Czech	1239	Interlingue	1353	Moldavian
1103	Welsh	1245	Inupiak	1356	Marathi
1105	Danish	1248	Indonesian	1357	Malay
1109	German	1253	Icelandic	1358	Maltese
1130	Bhutani	1254	Italian	1363	Burmese
1142	Greek	1257	Hebrew	1365	Nauru
1144	English	1261	Japanese	1369	Nepali
1145	Esperanto	1269	Yiddish	1376	Dutch
1149	Spanish	1283	Javanese	1379	Norwegian
1150	Estonian	1287	Georgian	1393	Occitan

110 | Additional Information

Code	Language	Code	Language	Code	Language
1403	(Afan) Oromo	1506	Slovenian	1535	Tonga
1408	Oriya	1507	Samoan	1538	Turkish
1417	Punjabi	1508	Shona	1539	Tsonga
1428	Polish	1509	Somali	1540	Tatar
1435	Pashto; Pushto	1511	Albanian	1543	Twi
1436	Portuguese	1512	Serbian	1557	Ukrainian
1463	Quechua	1513	Siswati	1564	Urdu
1481	Rhaeto-Romance	1514	Sesotho	1572	Uzbek
1482	Kirundi	1515	Sundanese	1581	Vietnamese
1483	Romanian	1516	Swedish	1587	Volapük
1489	Russian	1517	Swahili	1613	Wolof
1491	Kinyarwanda	1521	Tamil	1632	Xhosa
1495	Sanskrit	1525	Telugu	1665	Yoruba
1498	Sindhi	1527	Tajik	1684	Chinese
1501	Sangho	1528	Thai	1697	Zulu
1502	Serbo-Croatian	1529	Tigrinya	1703	Not specified
1503	Singhalese	1531	Turkmen		
1505	Slovak	1532	Tagalog		


Additional Information | 111 112 | Additional Information

Index to Parts and Controls


Refer to the pages indicated in parentheses for details.

Console

DVP-FX1

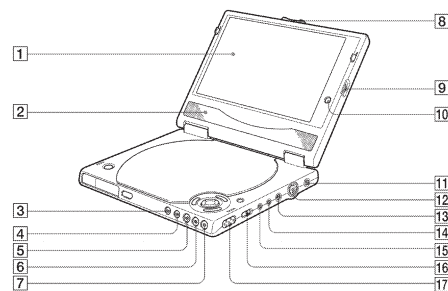

DVP-F5

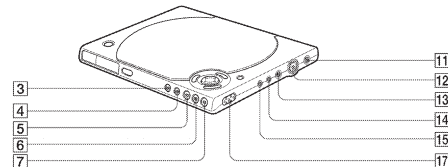


- 1 LCD screen (14)**
Displays the playback picture, etc.
- 2 Speaker (15)**
Emits the sound.
- 3 ◀◀ PREV button (32)**
Press to go back to the previous chapter or track.
- 4 ▶▶ NEXT button (32)**
Press to go to the next chapter or track.
- 5 ▷▶▶ PLAY button (31)**
Plays a disc.
- 6 ⏸ PAUSE button (32)**
Pauses playing a disc.
- 7 ■ STOP button (32, 35)**
Stops playing a disc.
- 8 ▶ PUSH OPEN button (14)**
Press to lift open the LCD panel.
- 9 BRIGHT dial (14)**
Adjusts the brightness of the LCD screen.
- 10 DISPLAY MODE button (15)**
Changes the display mode of the LCD screen.

- 11 DC IN 10V connector (25)**
Connect to the AC power adaptor.
- 12 S VIDEO OUT connector (17, 20)**
Connect to the S video input connector on your TV or monitor.
- 13 DC OUT 5V connector (96)**
Connect the DC IN 5V connector of another component requiring a power source.
- 14 VIDEO IN/OUT connector (17, 98)**
Connect to the video input/output connector on your TV or monitor.
- 15 AUDIO IN/OUT / OPTICAL OUT connector (17, 20, 23, 98)**
Connect to the audio input/output connector on your TV or receiver (amplifier), or connect to an audio component using an optical digital connecting cord.
- 16 LINE SELECT switch (17, 20, 98)**
Switches input/output of the VIDEO and AUDIO connectors.
- 17 HOLD switch (94)**
Turns on and off the hold function.


Index to Parts and Controls (continued)

Console

DVP-FX1

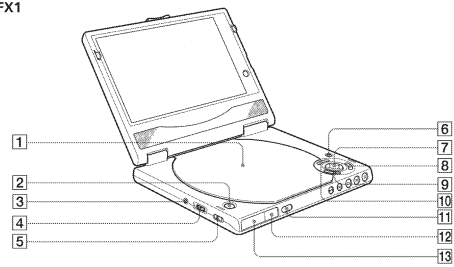

DVP-F5

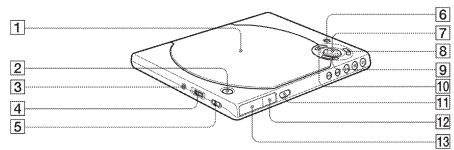


- 1 Lid (30)**
- 2 OPEN button (30)**
Opens the lid.
- 3 PHONES connector (95)**
Connect the headphones.
- 4 VOL dial (95)**
Adjusts the volume of the built-in speakers and the headphones.
- 5 HP SURROUND switch (95)**
Turns on and off the headphone surround function.
- 6 ↶ RETURN button (39, 46)**
Press to return to the previously selected screen, etc.
- 7 ◀/↑/↓/▶/ENTER button**
Selects and executes the items or settings.

- 8 DISPLAY button (45)**
Displays the Control Menu display on the screen to set or adjust the Control Menu items.
- 9 TITLE button (37)**
Displays the title menu on the screen.
- 10 DVD MENU button (38)**
Displays the DVD menu on the screen.
- 11 POWER button (30)**
Turns on and off the power of the player.
- 12 □ (remote sensor) (13)**
Accepts the remote control signals.
- 13 Display window (41)**
Indicates the playing time, etc.


Index to Parts and Controls (continued)

Bottom

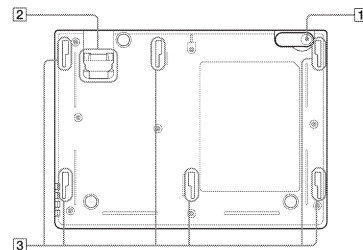

- 1 Stabilizer tab (DVP-FX1 only) (14)**
Pull out to prevent the player from tipping over when using the LCD screen.
- 2 Battery terminals (9)**
- 3 Slots for the battery (9)**

Remote commander

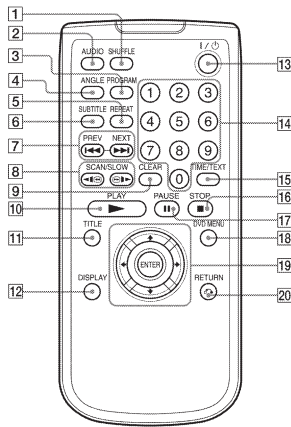

- 1 SHUFFLE button (72)**
Changes the "SHUFFLE" mode.
- 2 AUDIO button (54)**
Changes the sound while playing a DVD or VIDEO CD.
- 3 PROGRAM button (68)**
Displays the "PROGRAM" display on the screen.
- 4 ANGLE button (59)**
Changes the angles when playing a DVD.
- 5 REPEAT button (73)**
Changes the "REPEAT" mode.
- 6 SUBTITLE button (57)**
Changes the subtitles when playing a DVD.
- 7 << / >> PREV/NEXT buttons (32)**
Press to go to the next chapter or track, or to go back to the previous chapter or track.
- 8 <-> / <-> SCAN/SLOW buttons (34)**
Locate a point quickly while monitoring the picture or play a disc in slow motion.

continued


Index to Parts and Controls (continued)

- 9 CLEAR button (70, 72, 73, 75)**
Press to return to continuous play etc.
- 10 >> PLAY button (31)**
Plays a disc.
- 11 TITLE button (37)**
Displays the title menu on the screen.
- 12 DISPLAY button (45)**
Displays the Control Menu display on the screen to set or adjust the Control Menu items.
- 13 I/O button (30)**
Turns on and off the power of the player.
- 14 Number buttons**
Selects the items or settings.
- 15 TIME/TEXT button (41)**
Displays the playing time of the disc, etc., on the display window.
- 16 ■ STOP button (32, 35)**
Stops playing a disc.
- 17 || PAUSE button (32)**
Pauses playing a disc.
- 18 DVD MENU button (38)**
Displays the DVD menu on the screen.
- 19 <- / <- / > / > / ENTER buttons**
Selects and executes the items or settings.
- 20 ↶ RETURN button (39, 46)**
Press to return to the previously selected screen, etc.


SECTION 2 DISASSEMBLY

NOTE: Follow the disassembly procedure in the numerical order given.


2-1. CABINET ASSY-1

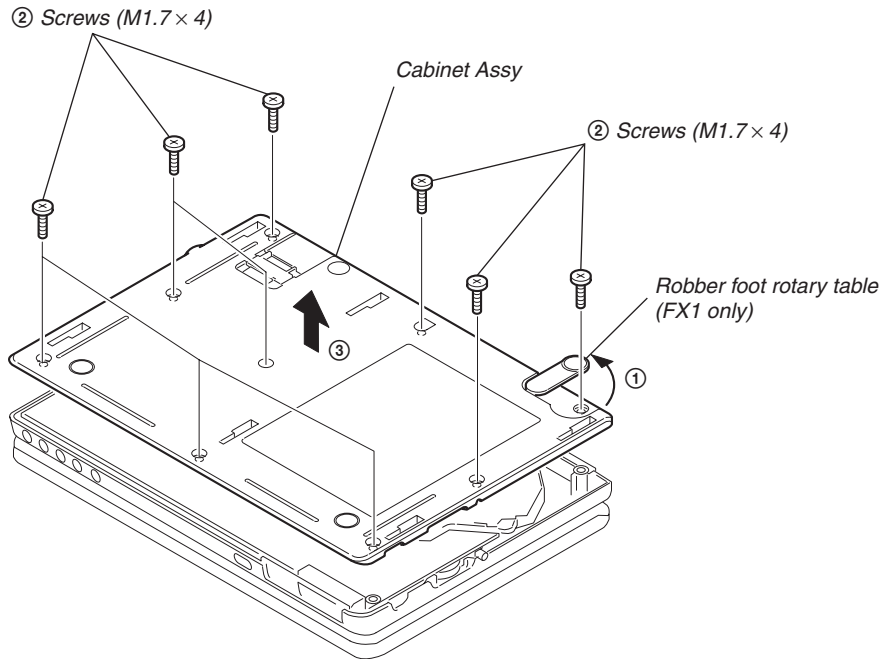


2-2. CABINET ASSY-2 (FX1)

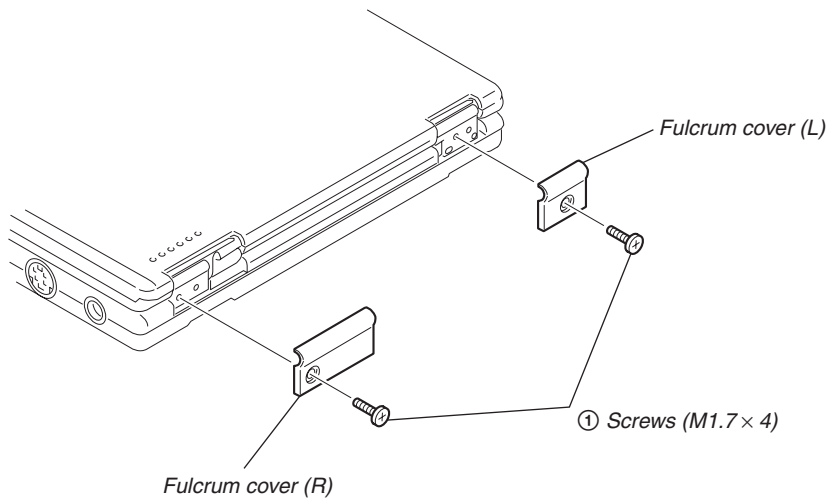


2-3. CABINET ASSY-3 (FX1)

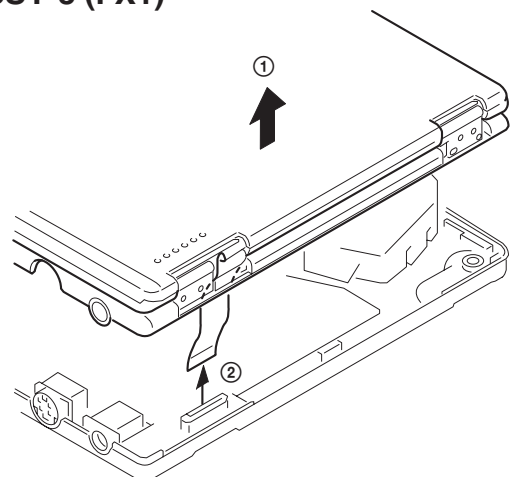


2-4. CD, LID

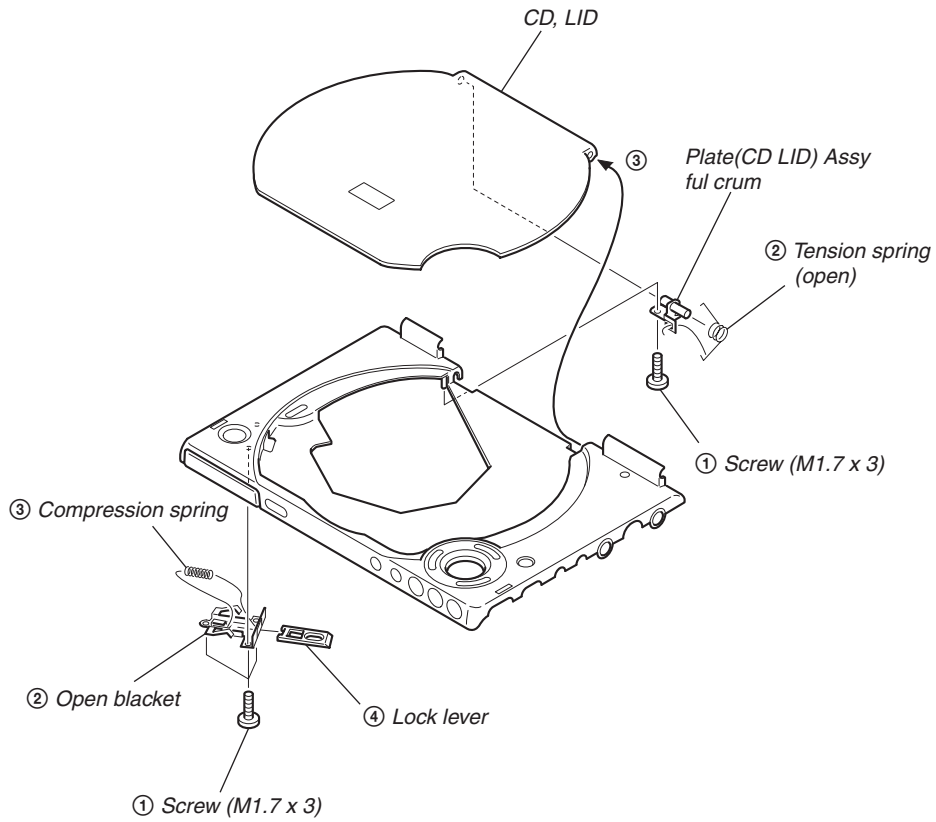

2-5. MB-90 BOARD, LC-68 BOARD, MD COMPLE

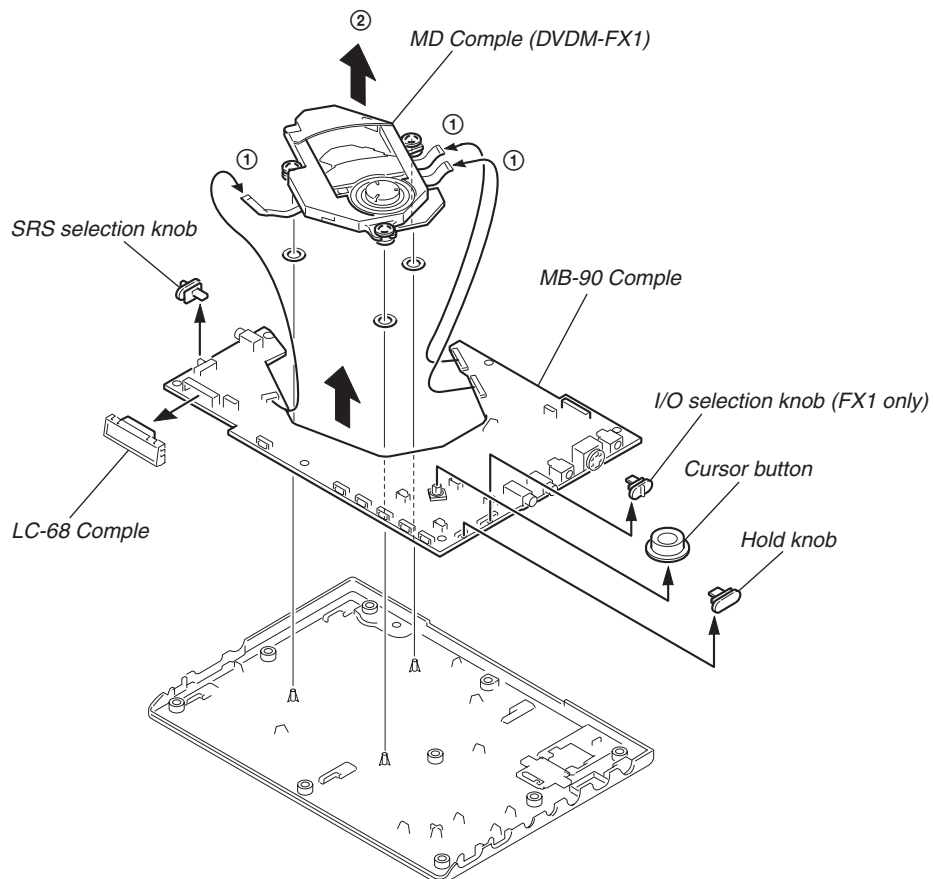


2-6. DISPLAY PANEL (FX1)

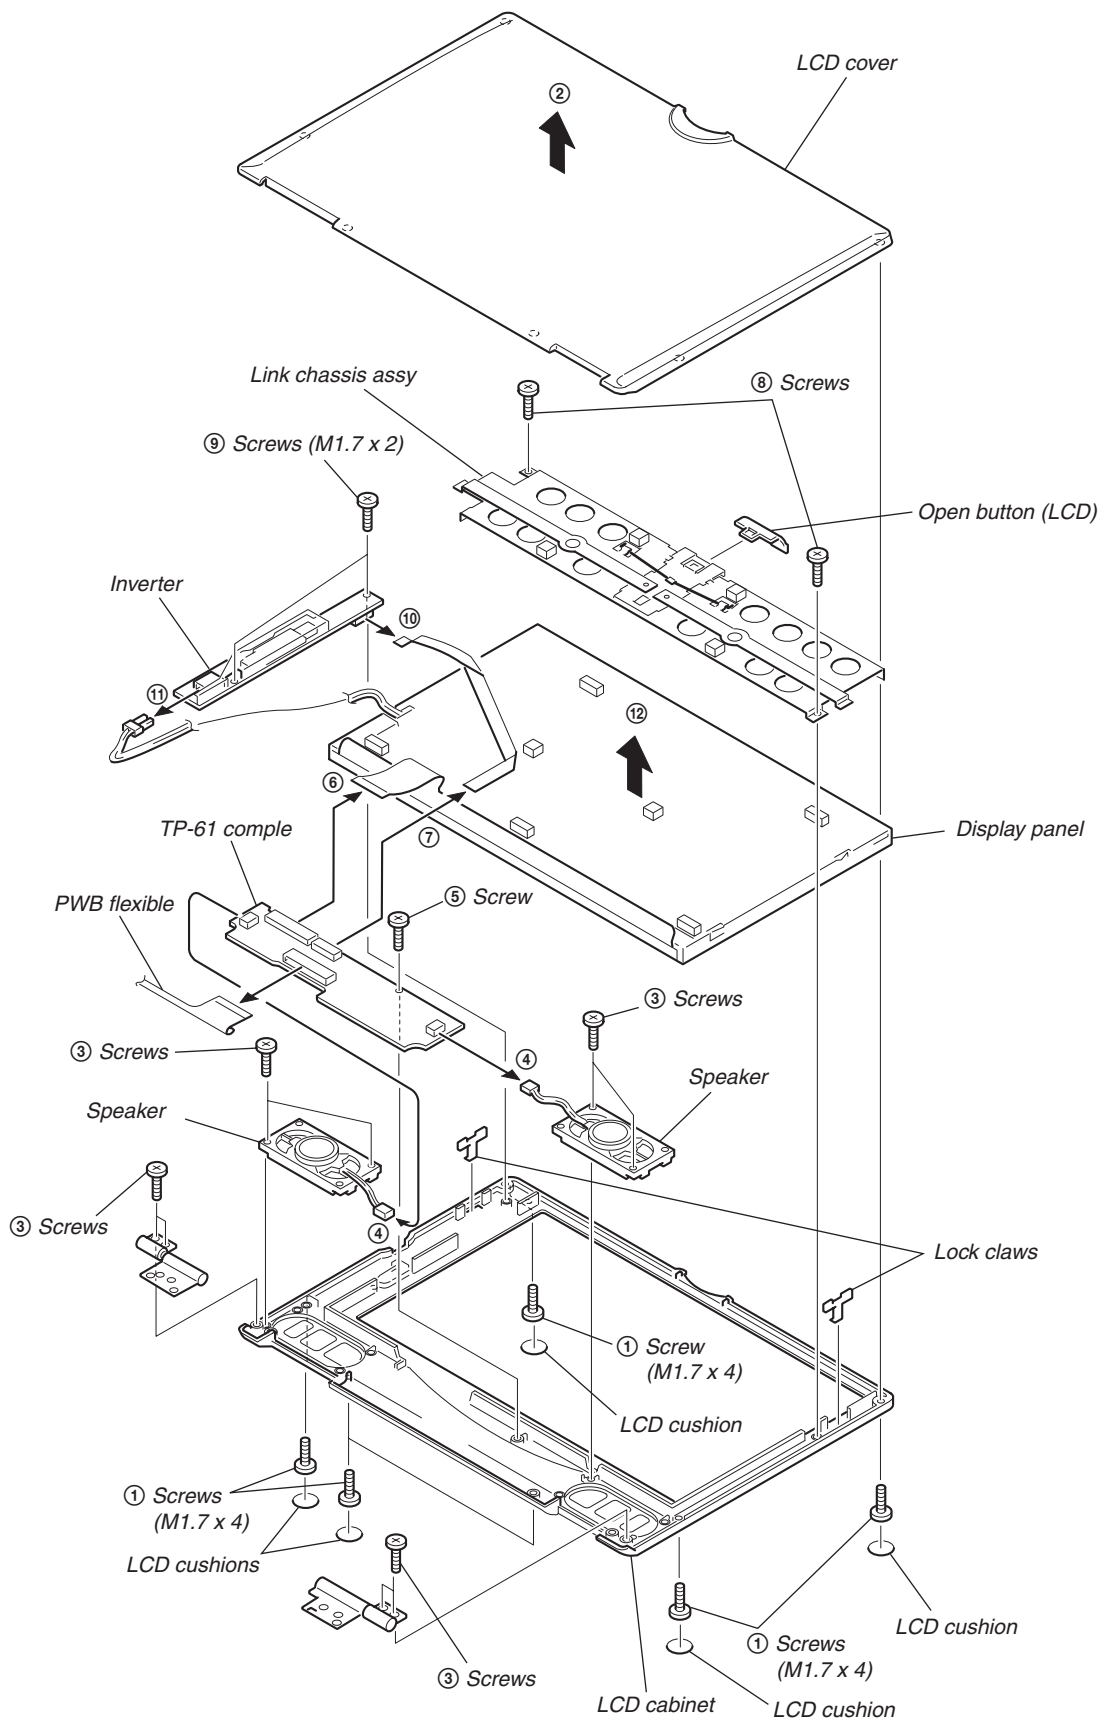

MEMO


SECTION 3
BLOCK DIAGRAMS

3-1. OVERALL BLOCK DIAGRAM (1/2)

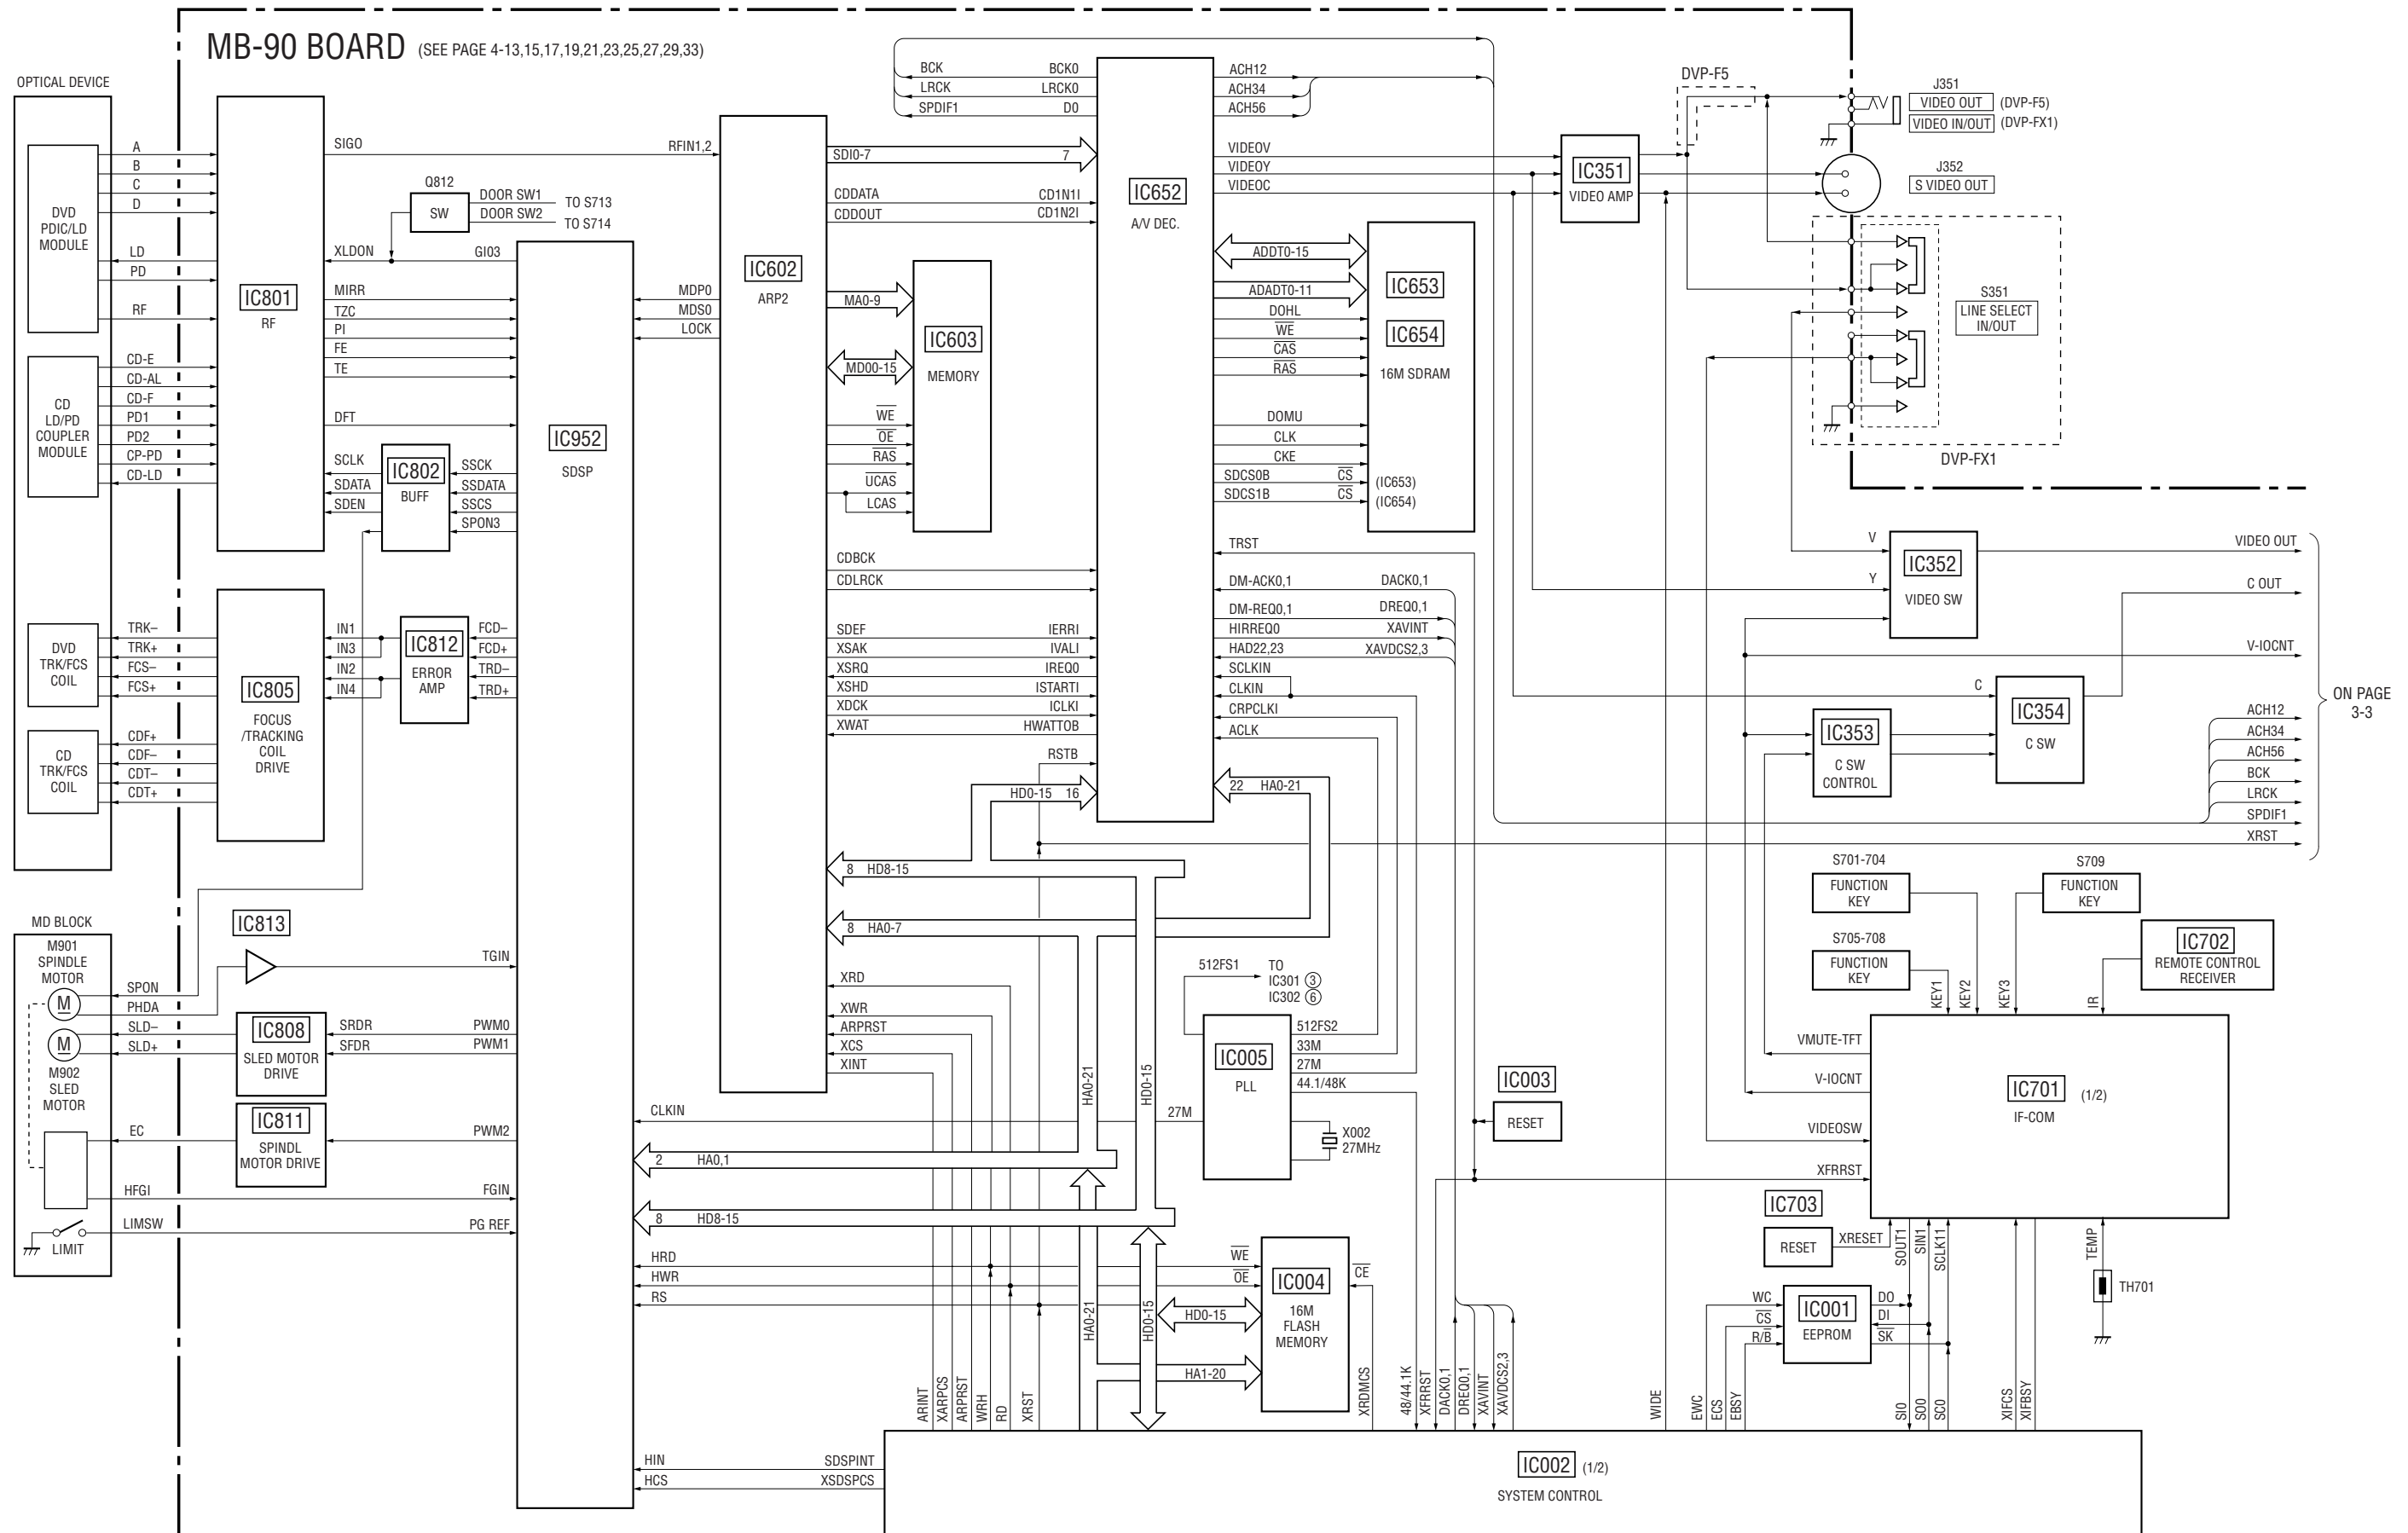


ON PAGE
3-3

3-2. OVERALL BLOCK DIAGRAM (2/2)

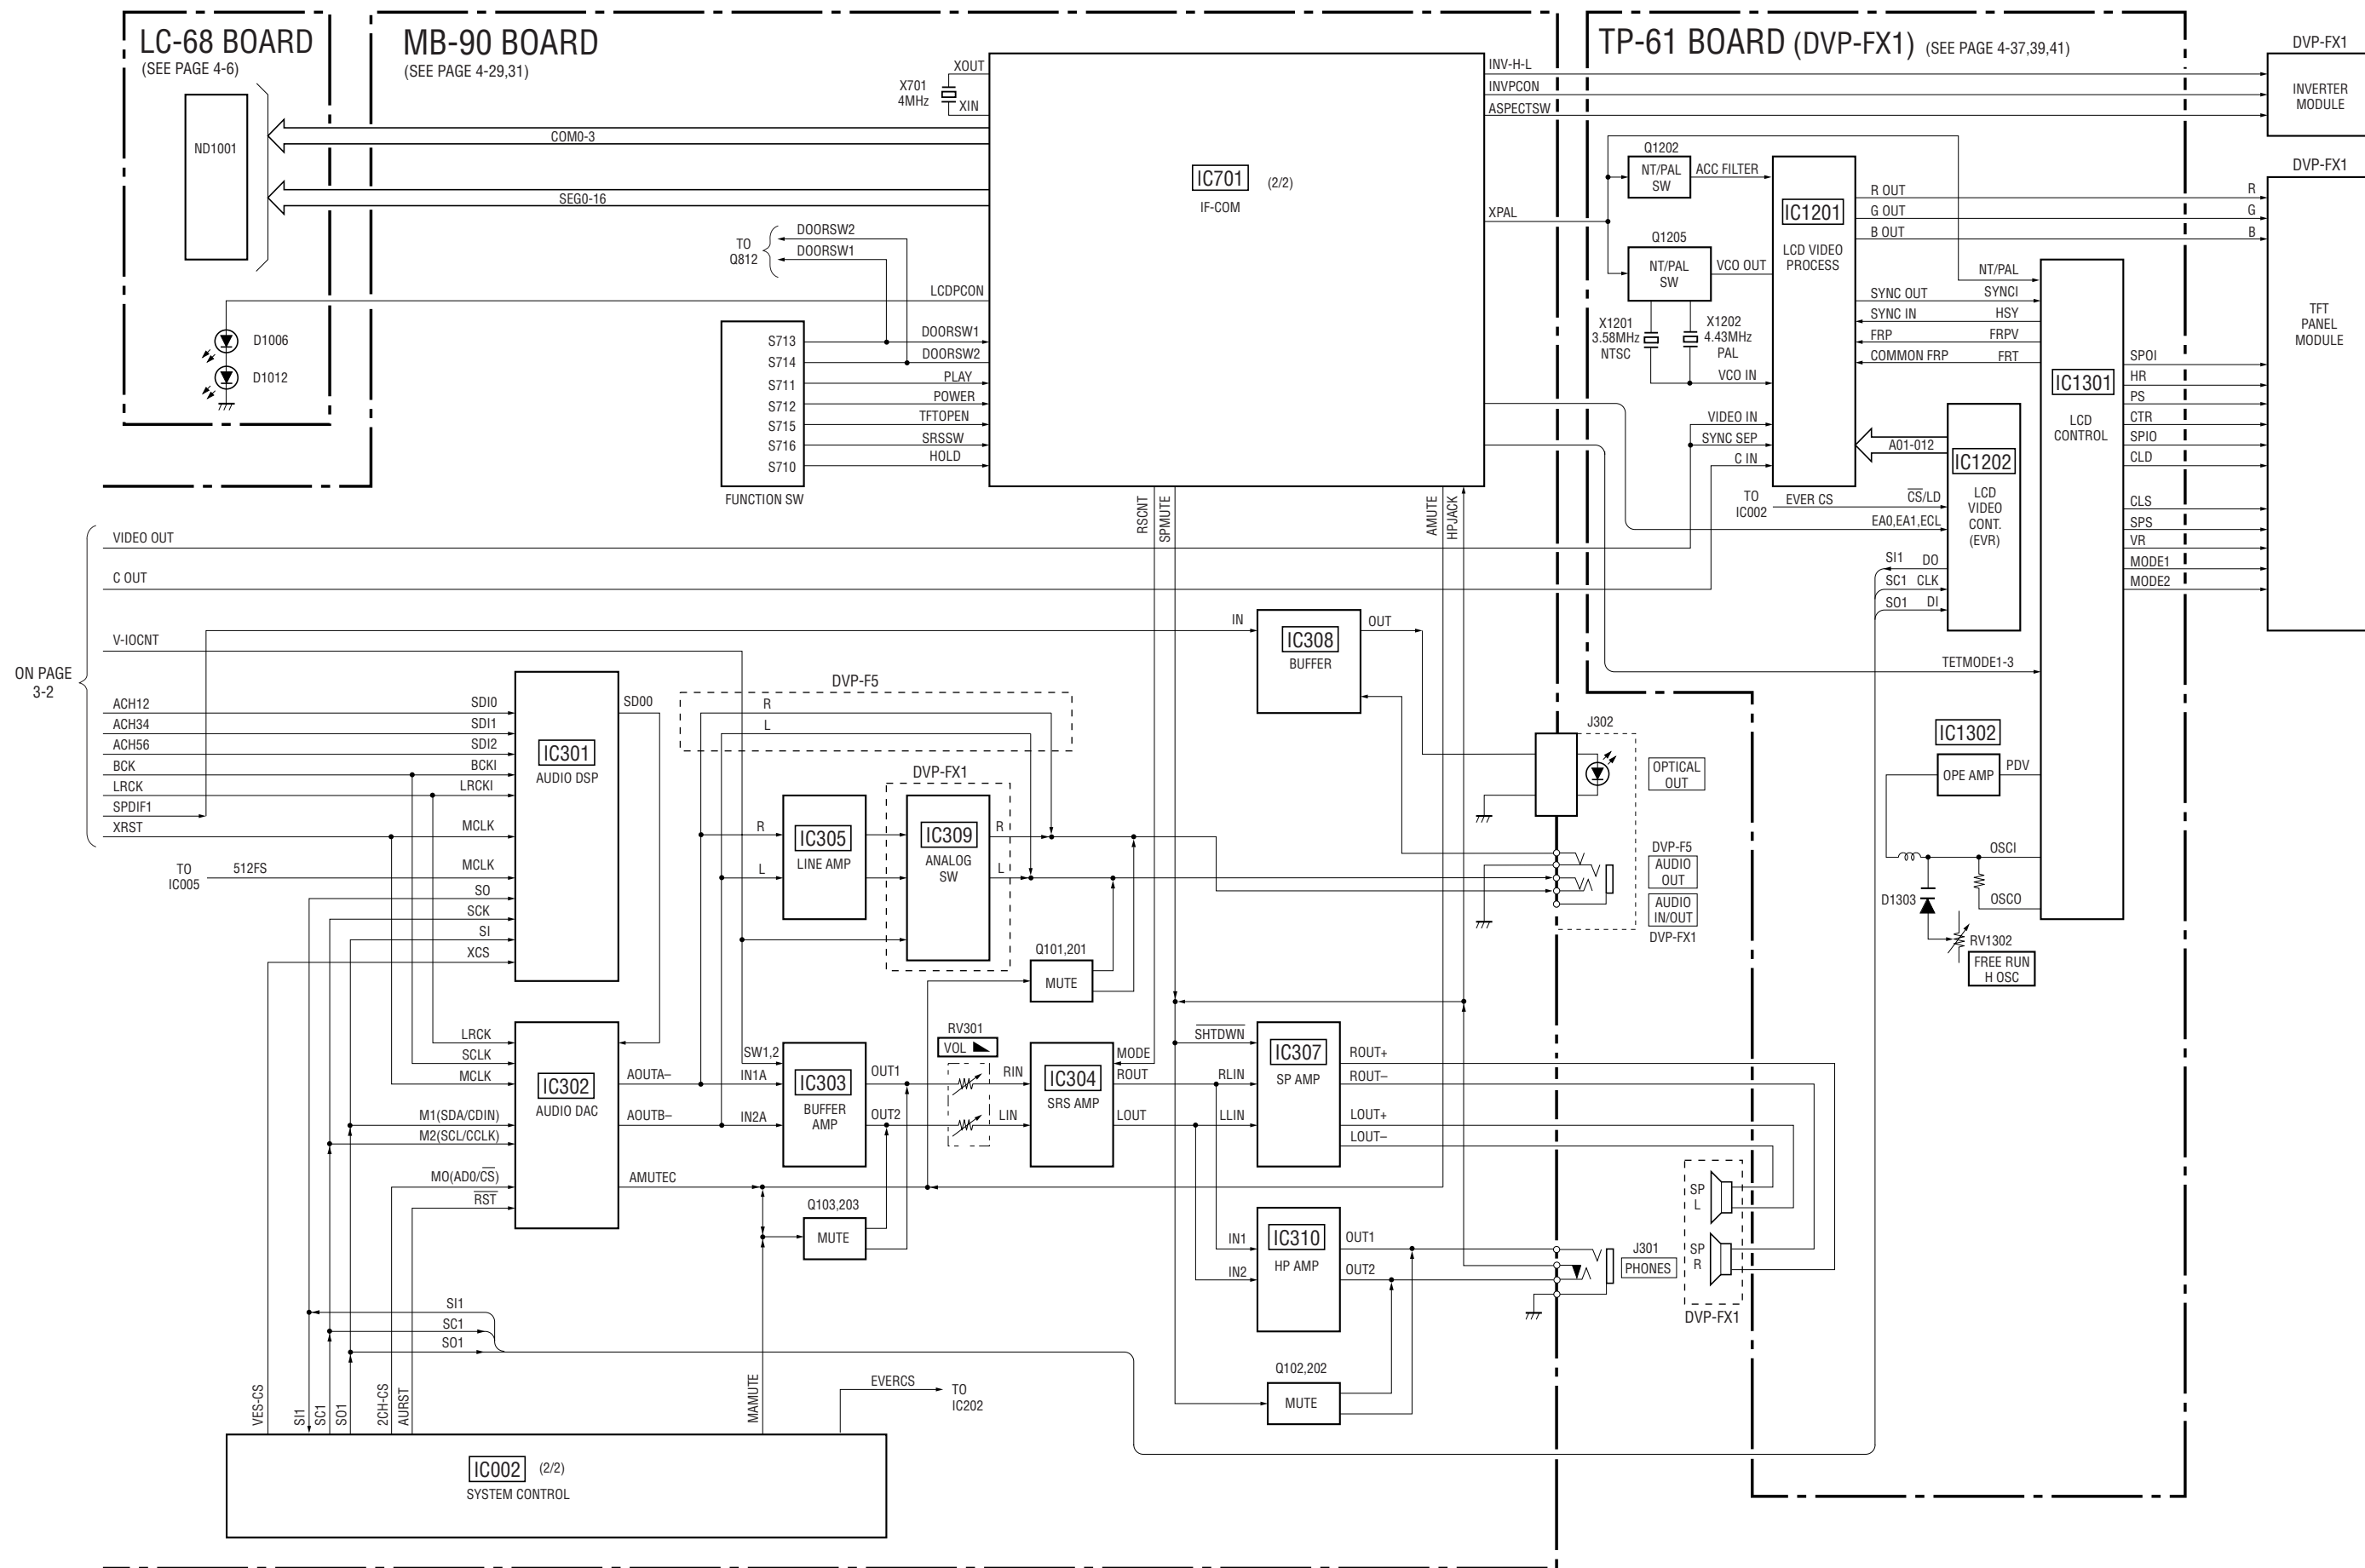


ON PAGE 3-2

3-3. VIDEO OUT BLOCK DIAGRAM

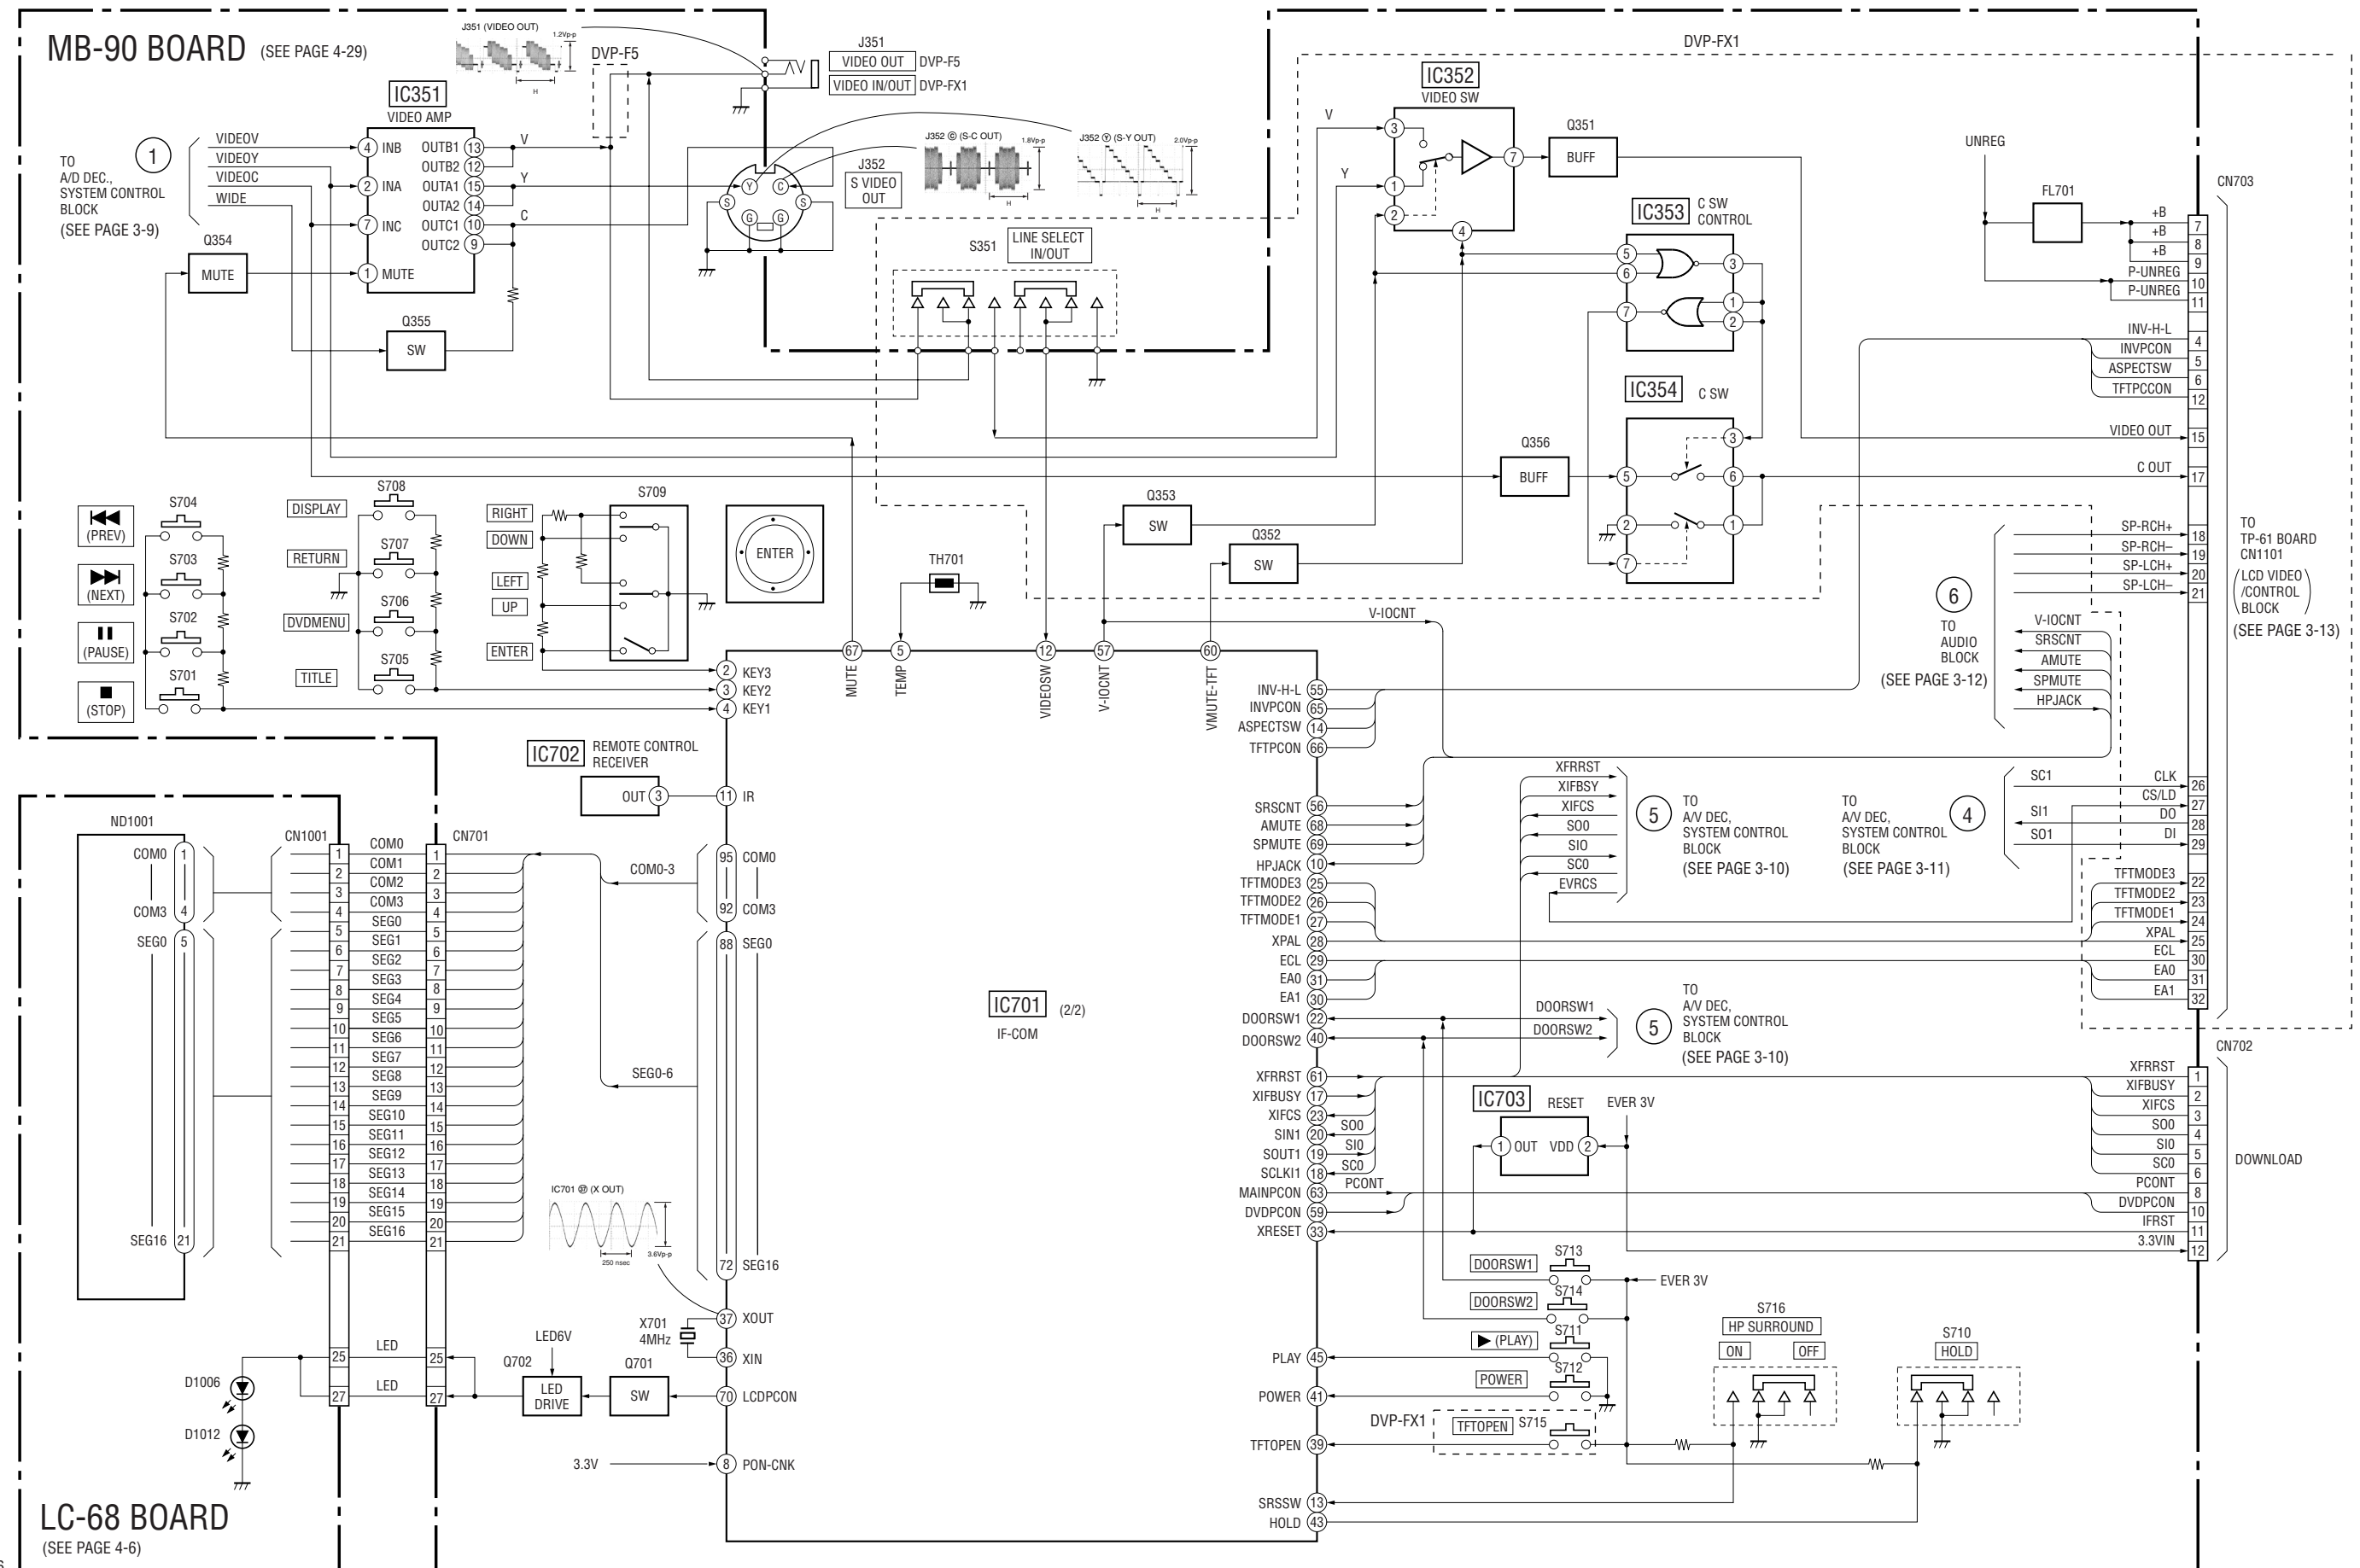


3-4. RF BLOCK DIAGRAM (1/2)

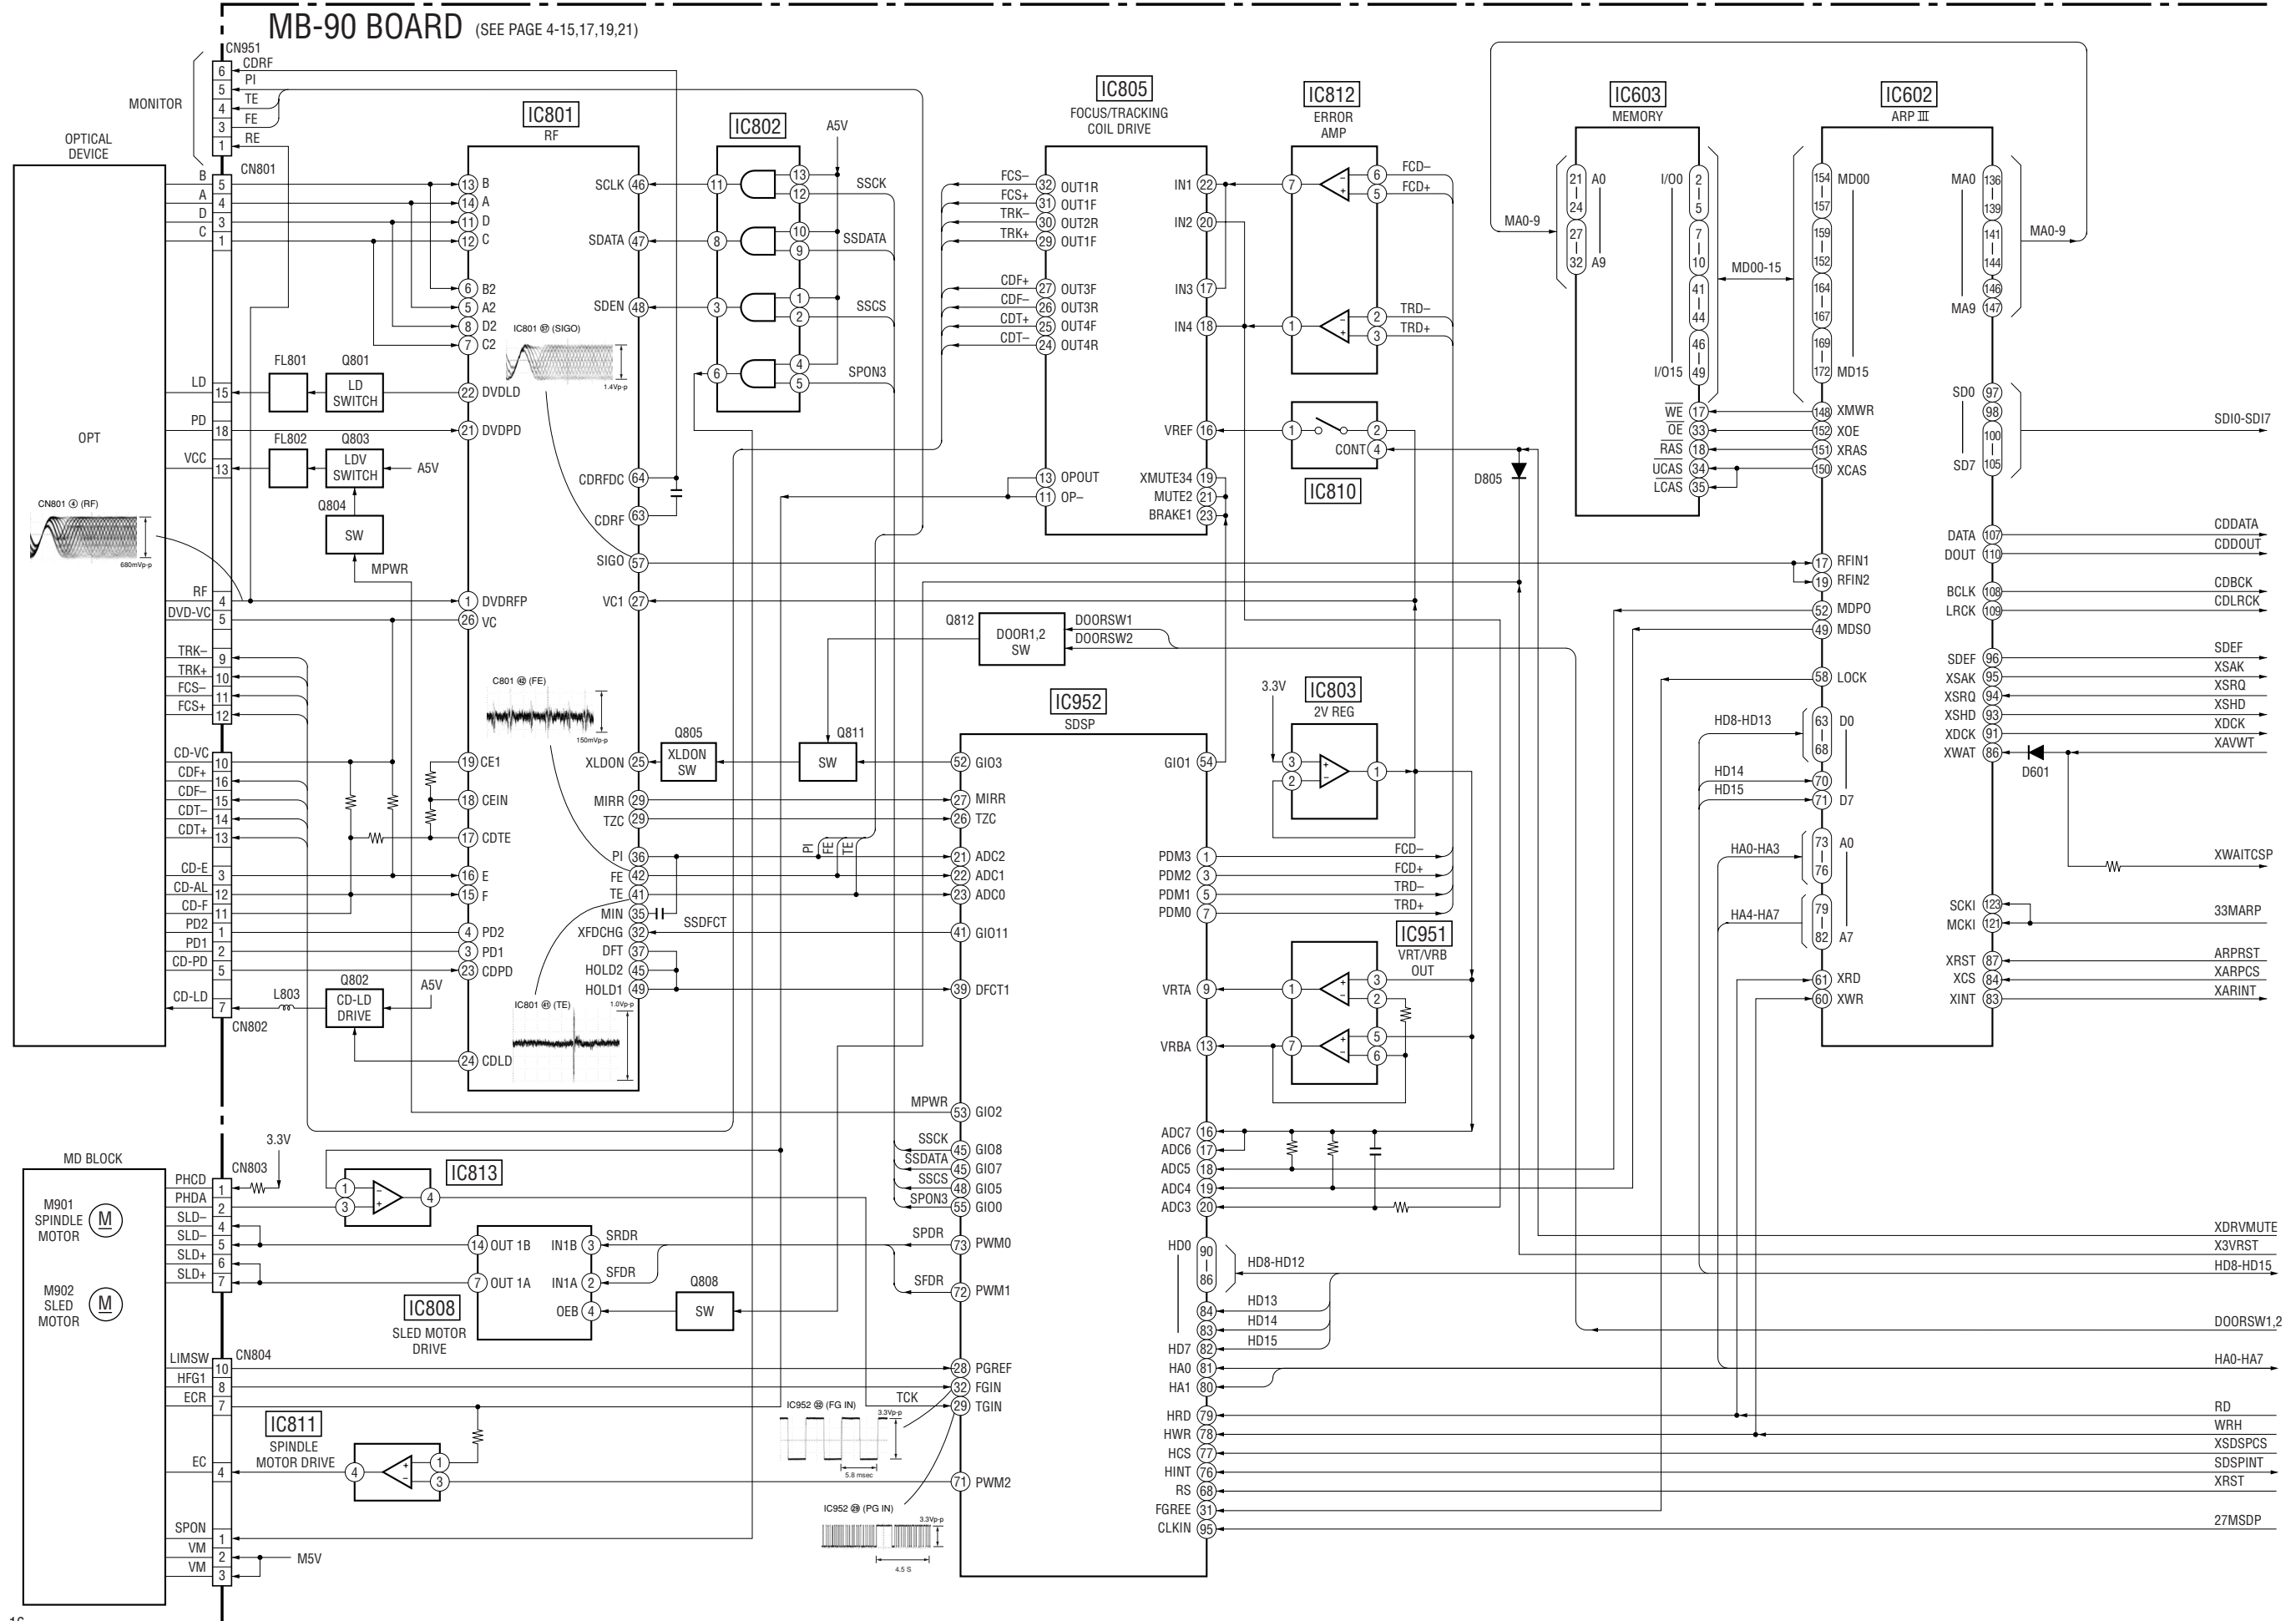


3-5. RF BLOCK DIAGRAM (2/2)


MB-90 BOARD (SEE PAGE 4-23,27)

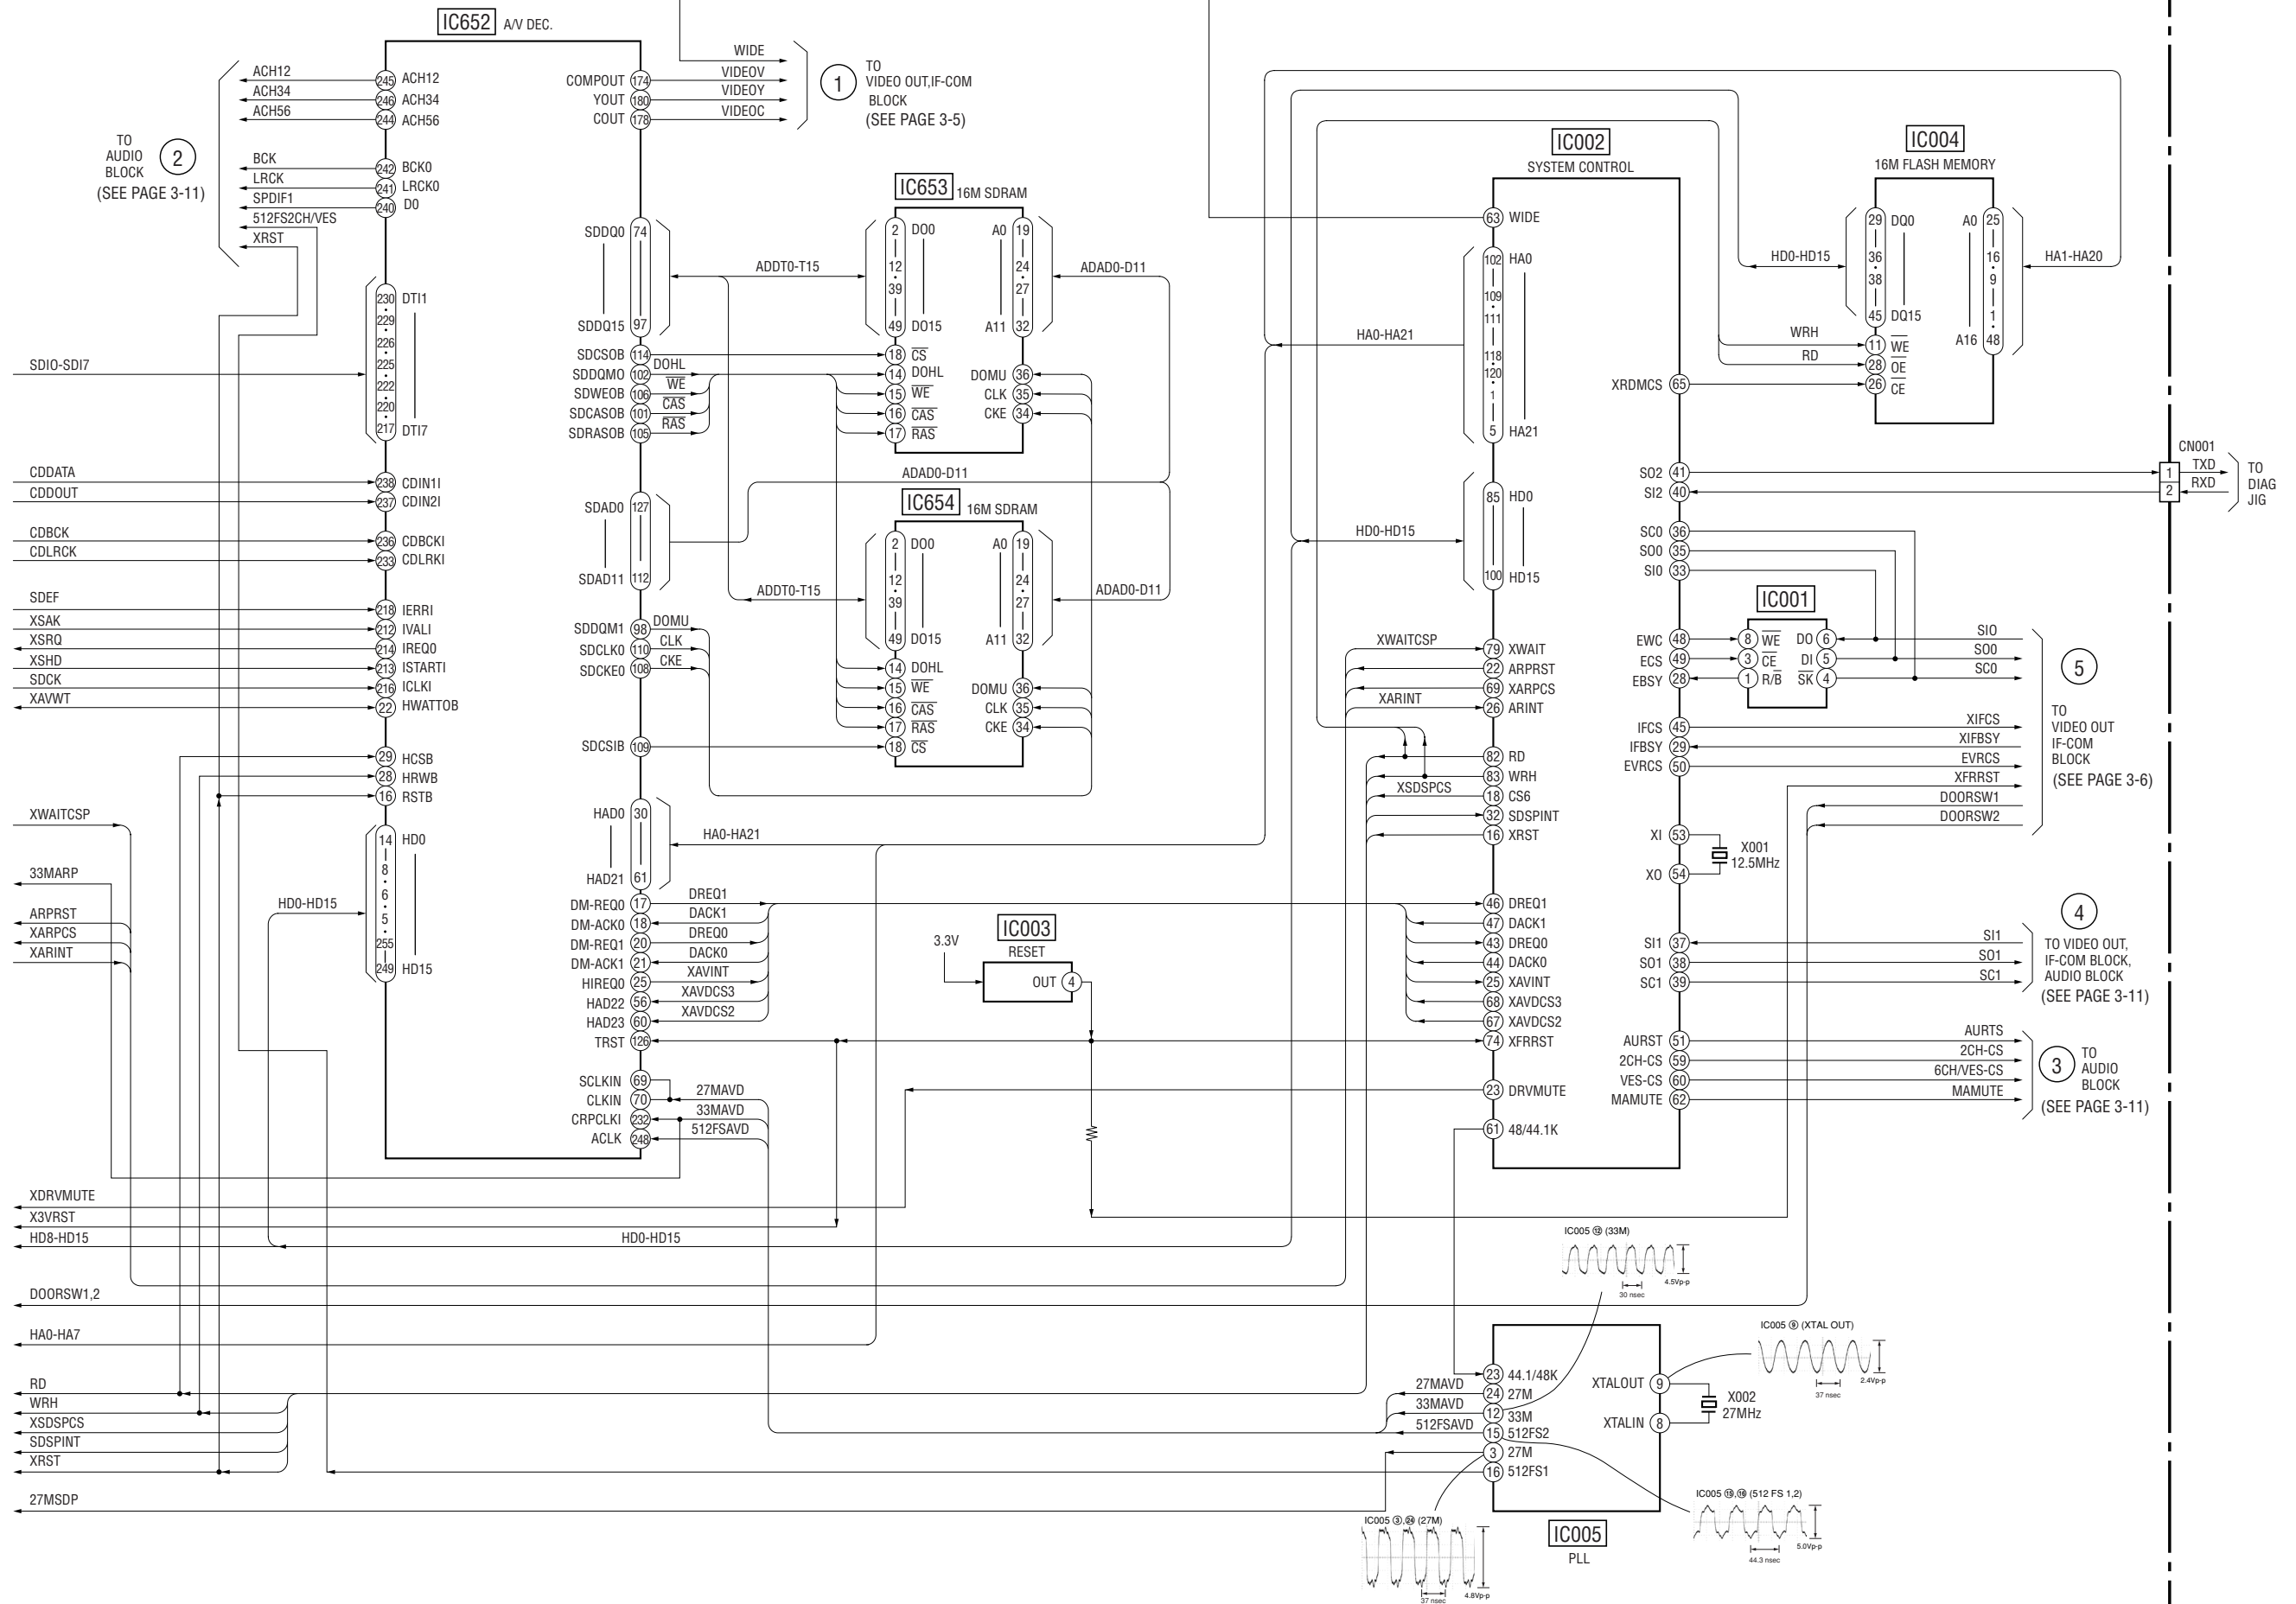


3-6. AUDIO BLOCK DIAGRAM

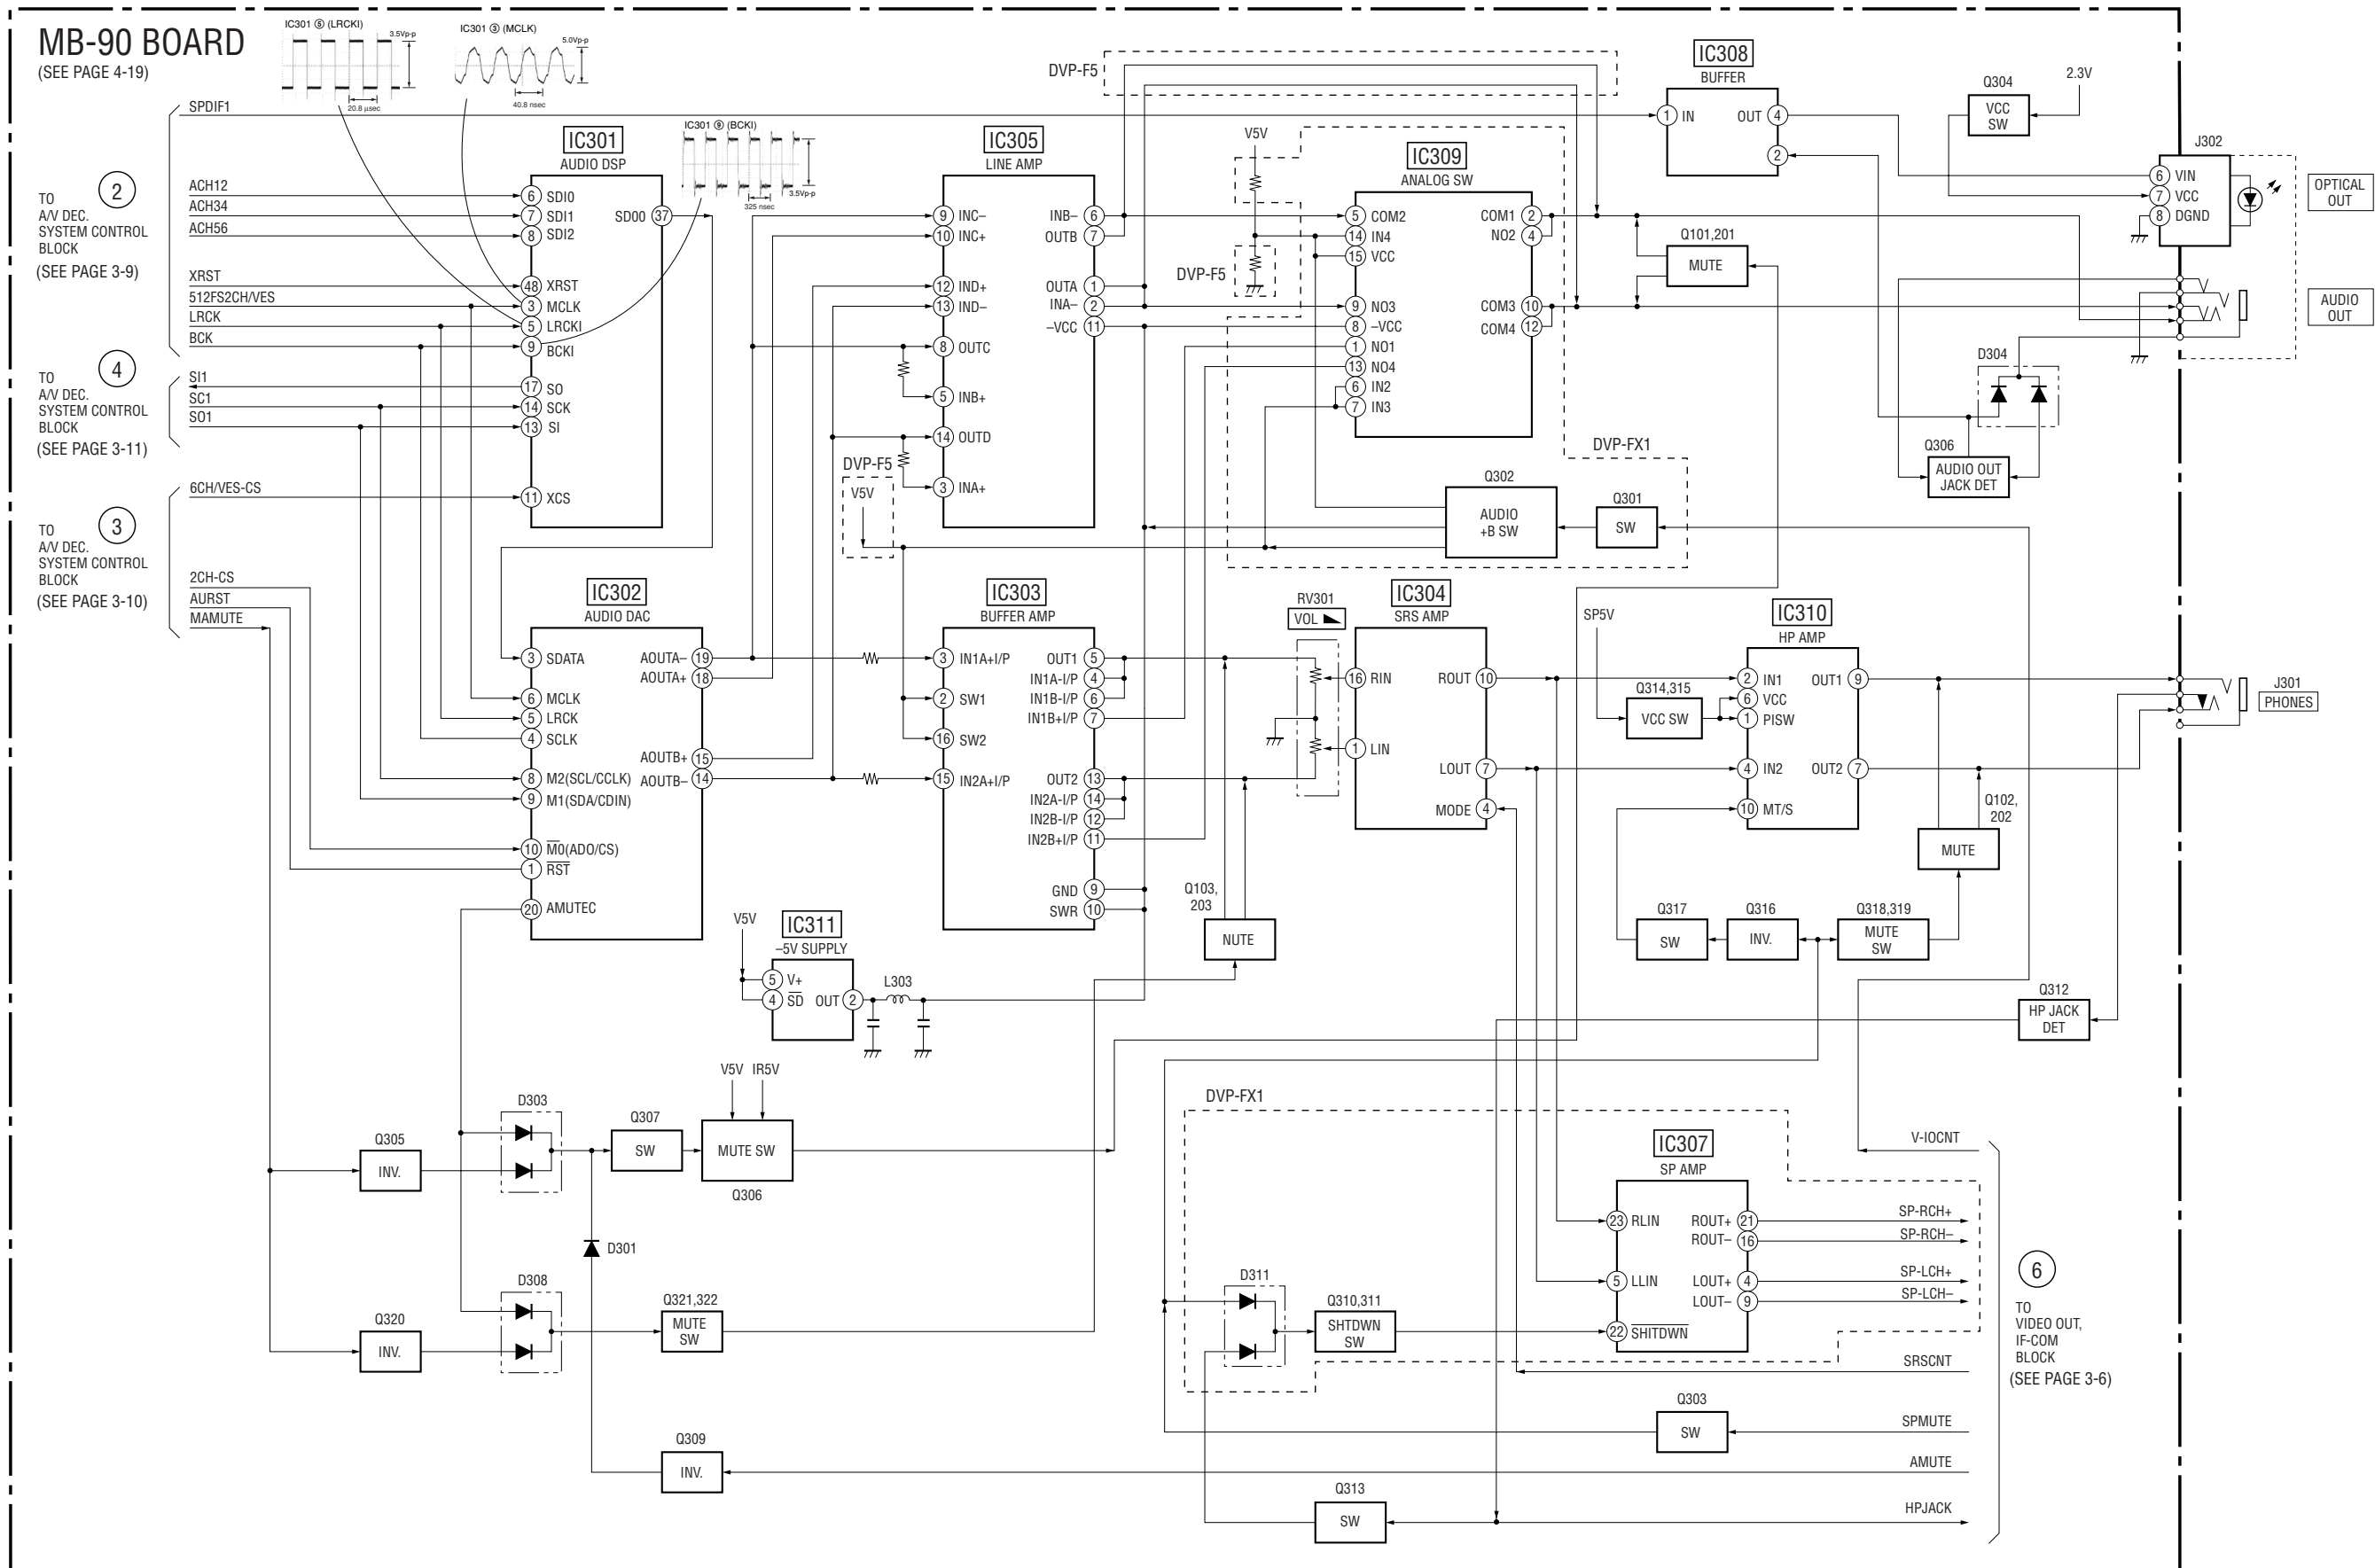

3-7. LCD BLOCK DIAGRAM

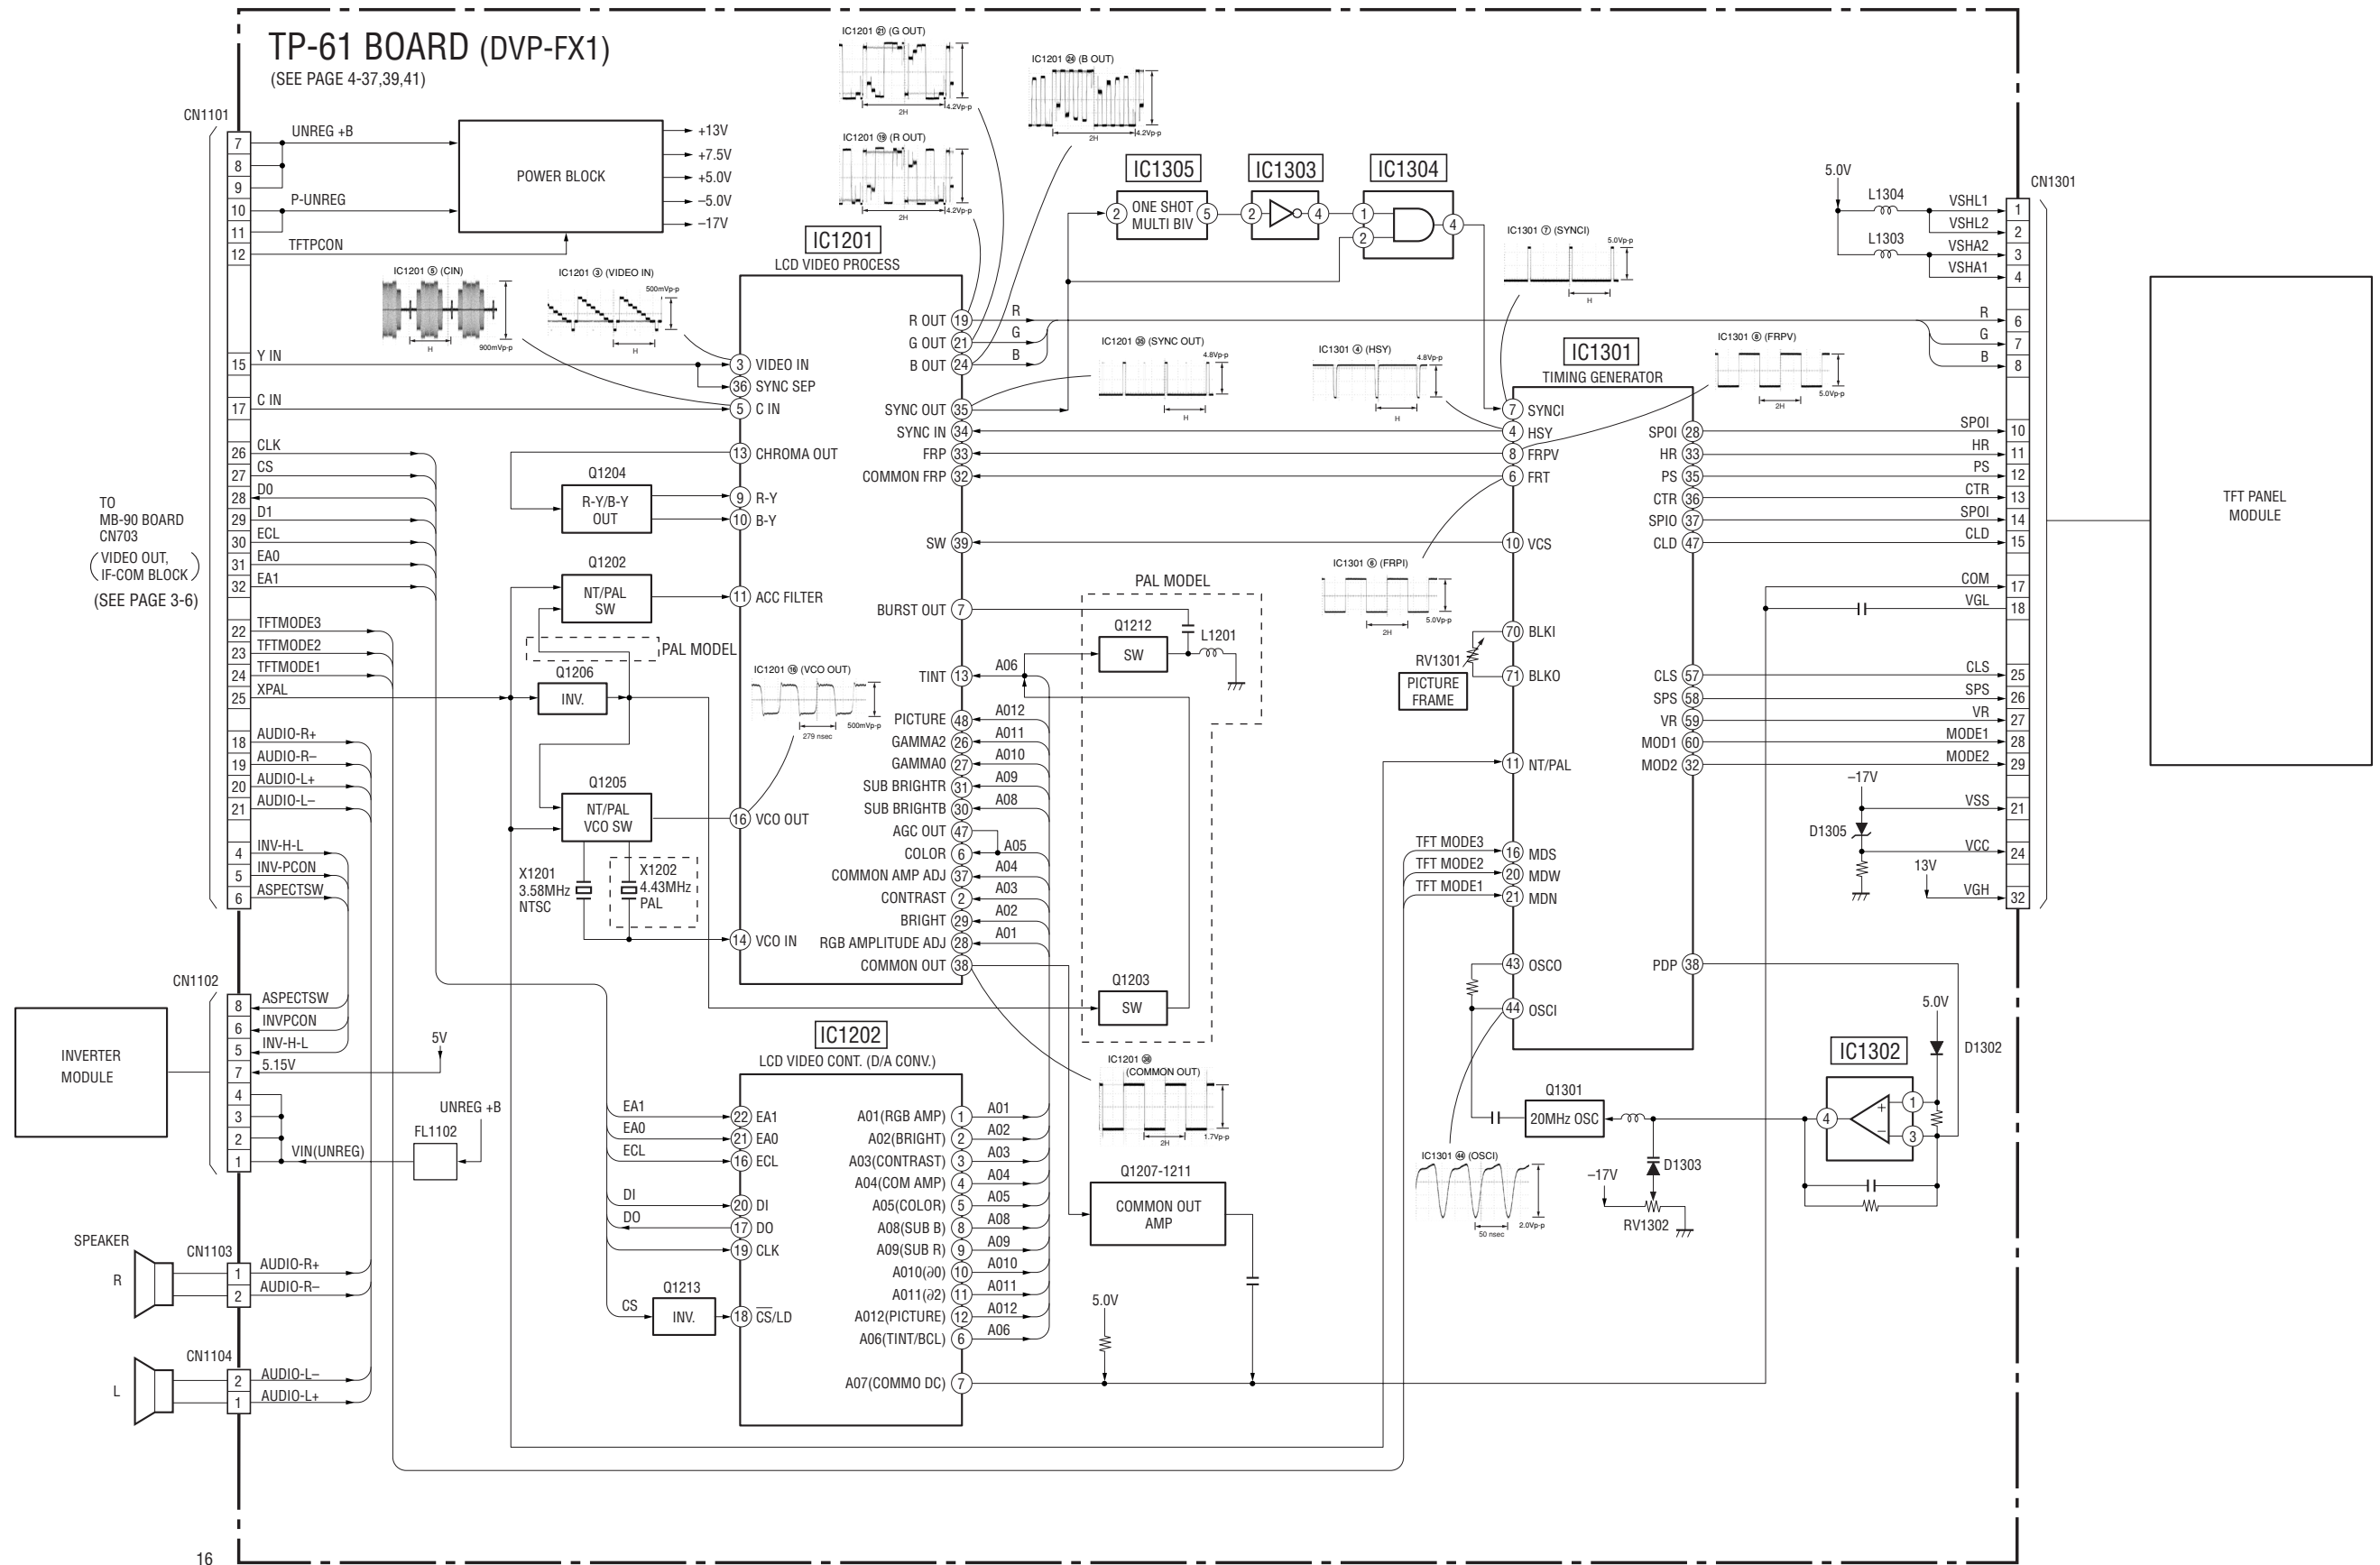


3-8. POWER BLOCK DIAGRAM (1/2)

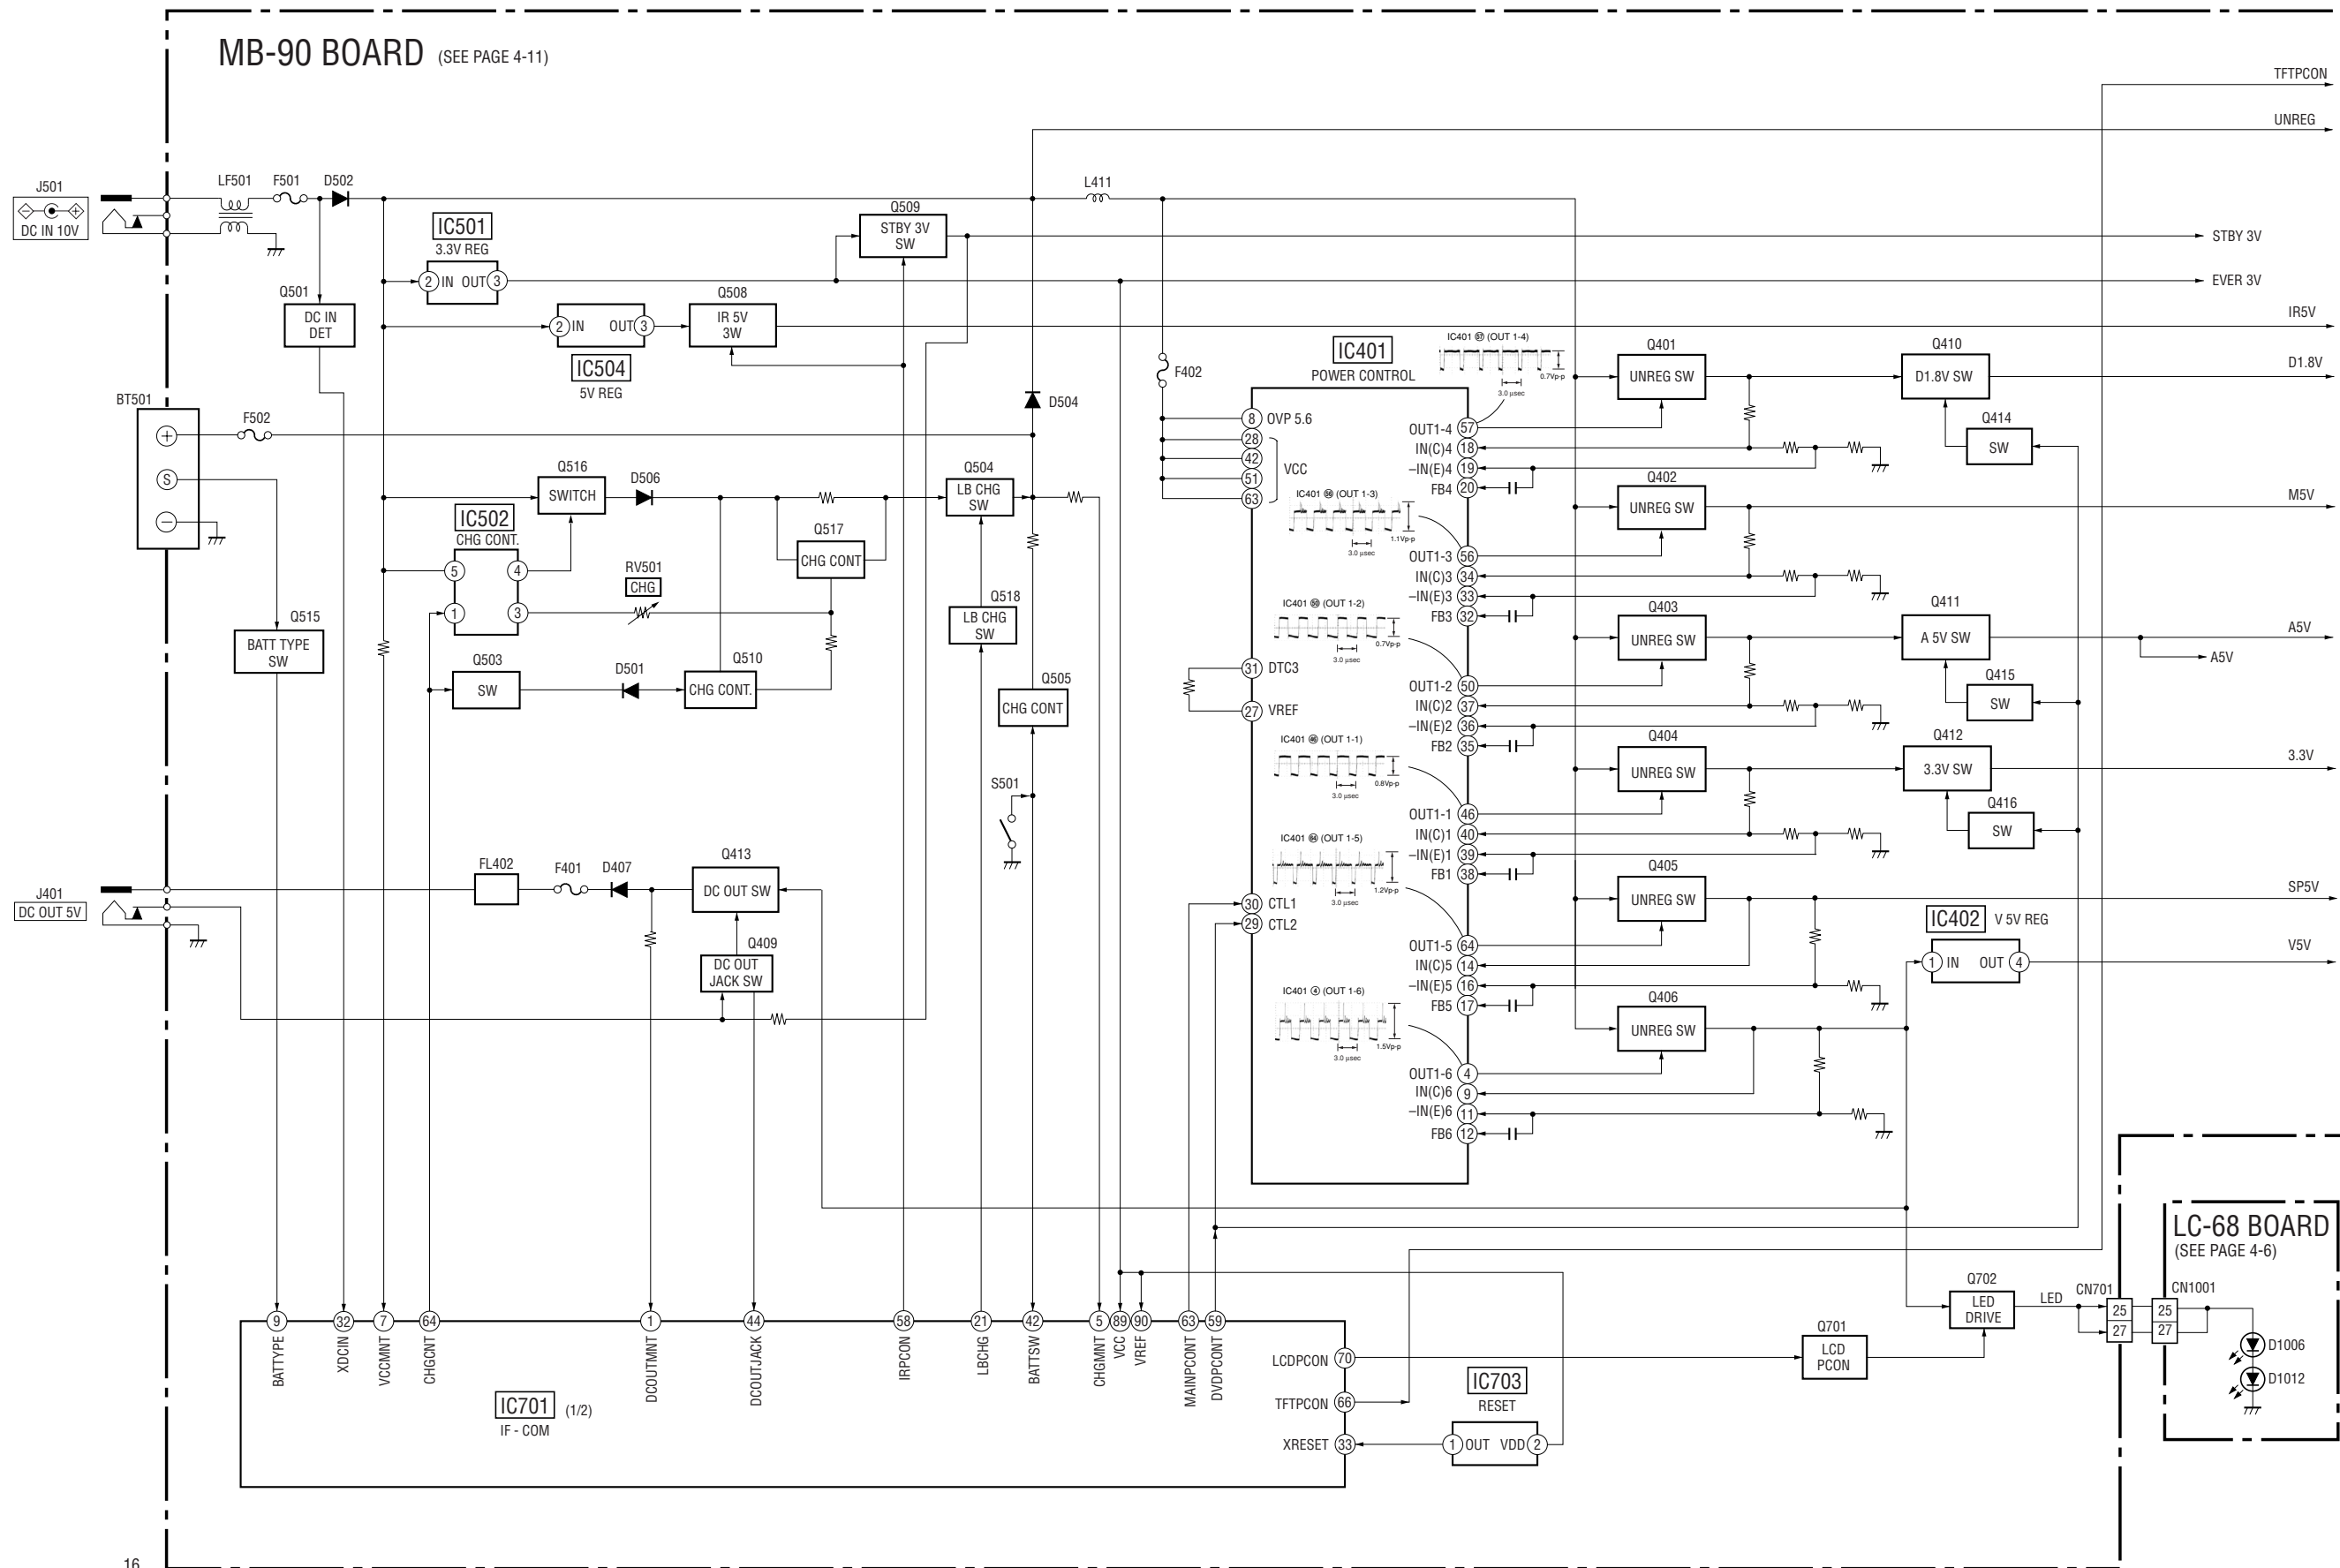

MB-90 BOARD (SEE PAGE 4-11)

LC-68 BOARD (SEE PAGE 4-6)


3-9. POWER BLOCK DIAGRAM (2/2)

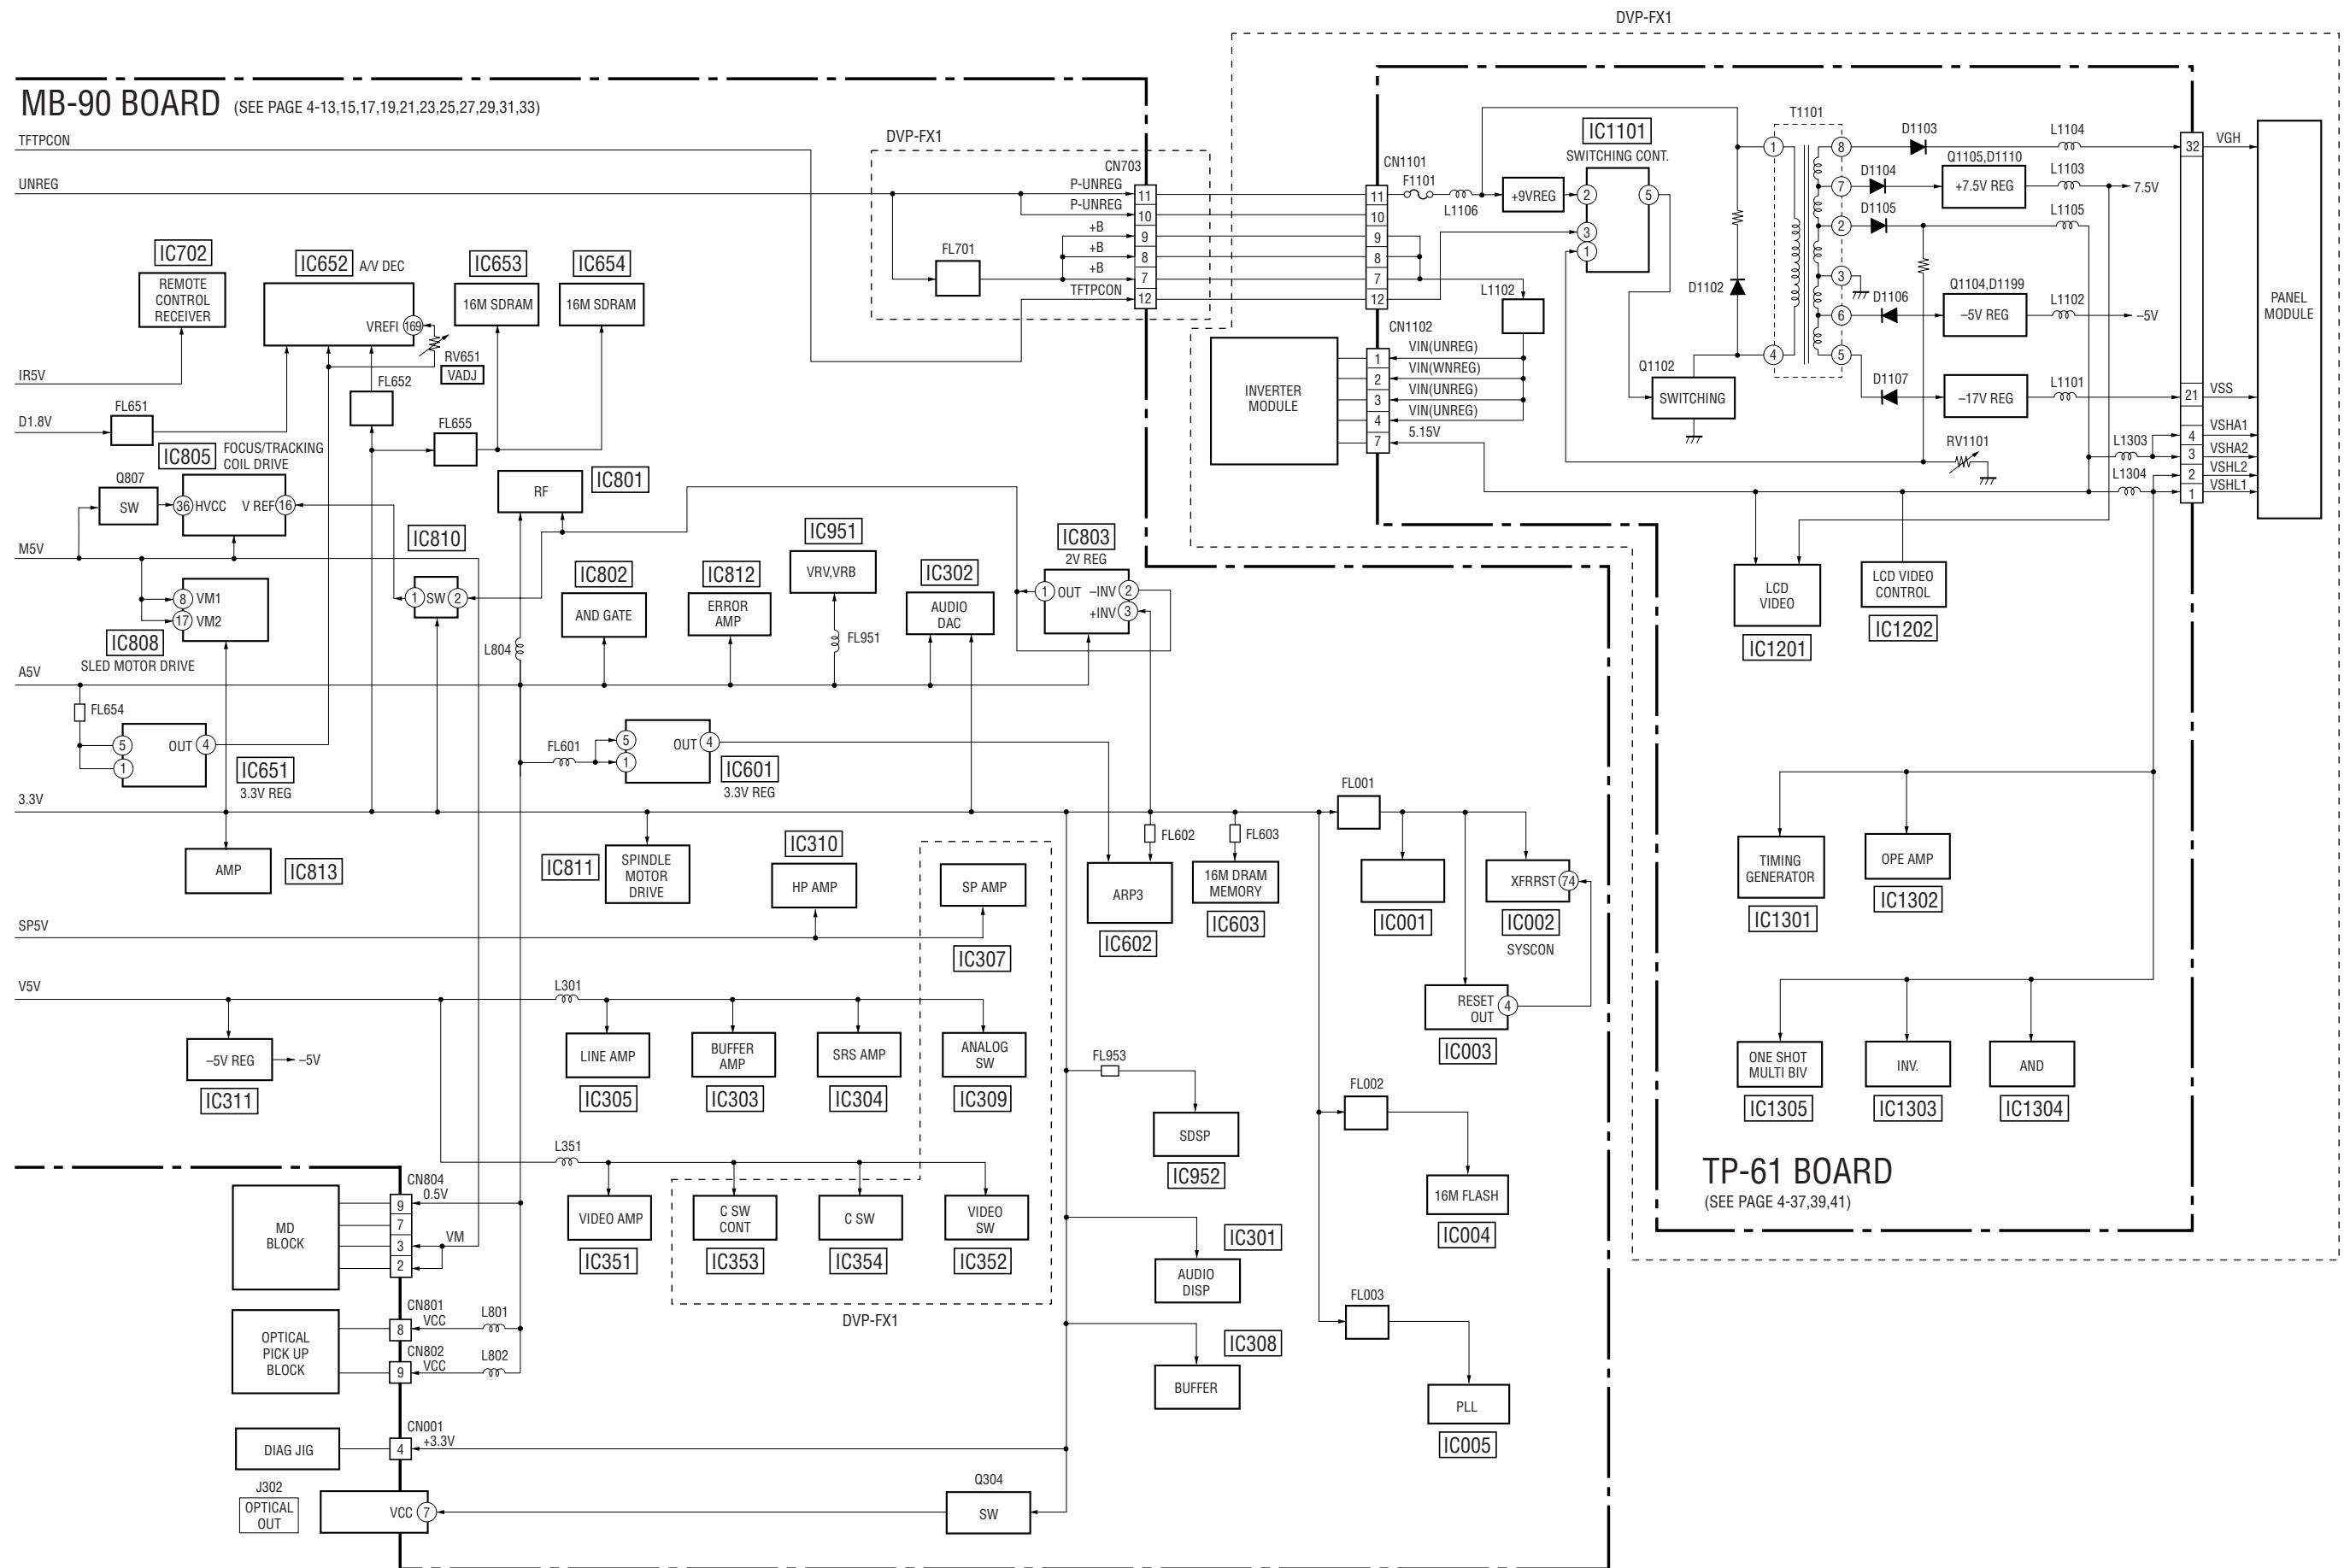

MEMO

SECTION 4
PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS


4-1. FRAME SCHEMATIC DIAGRAM

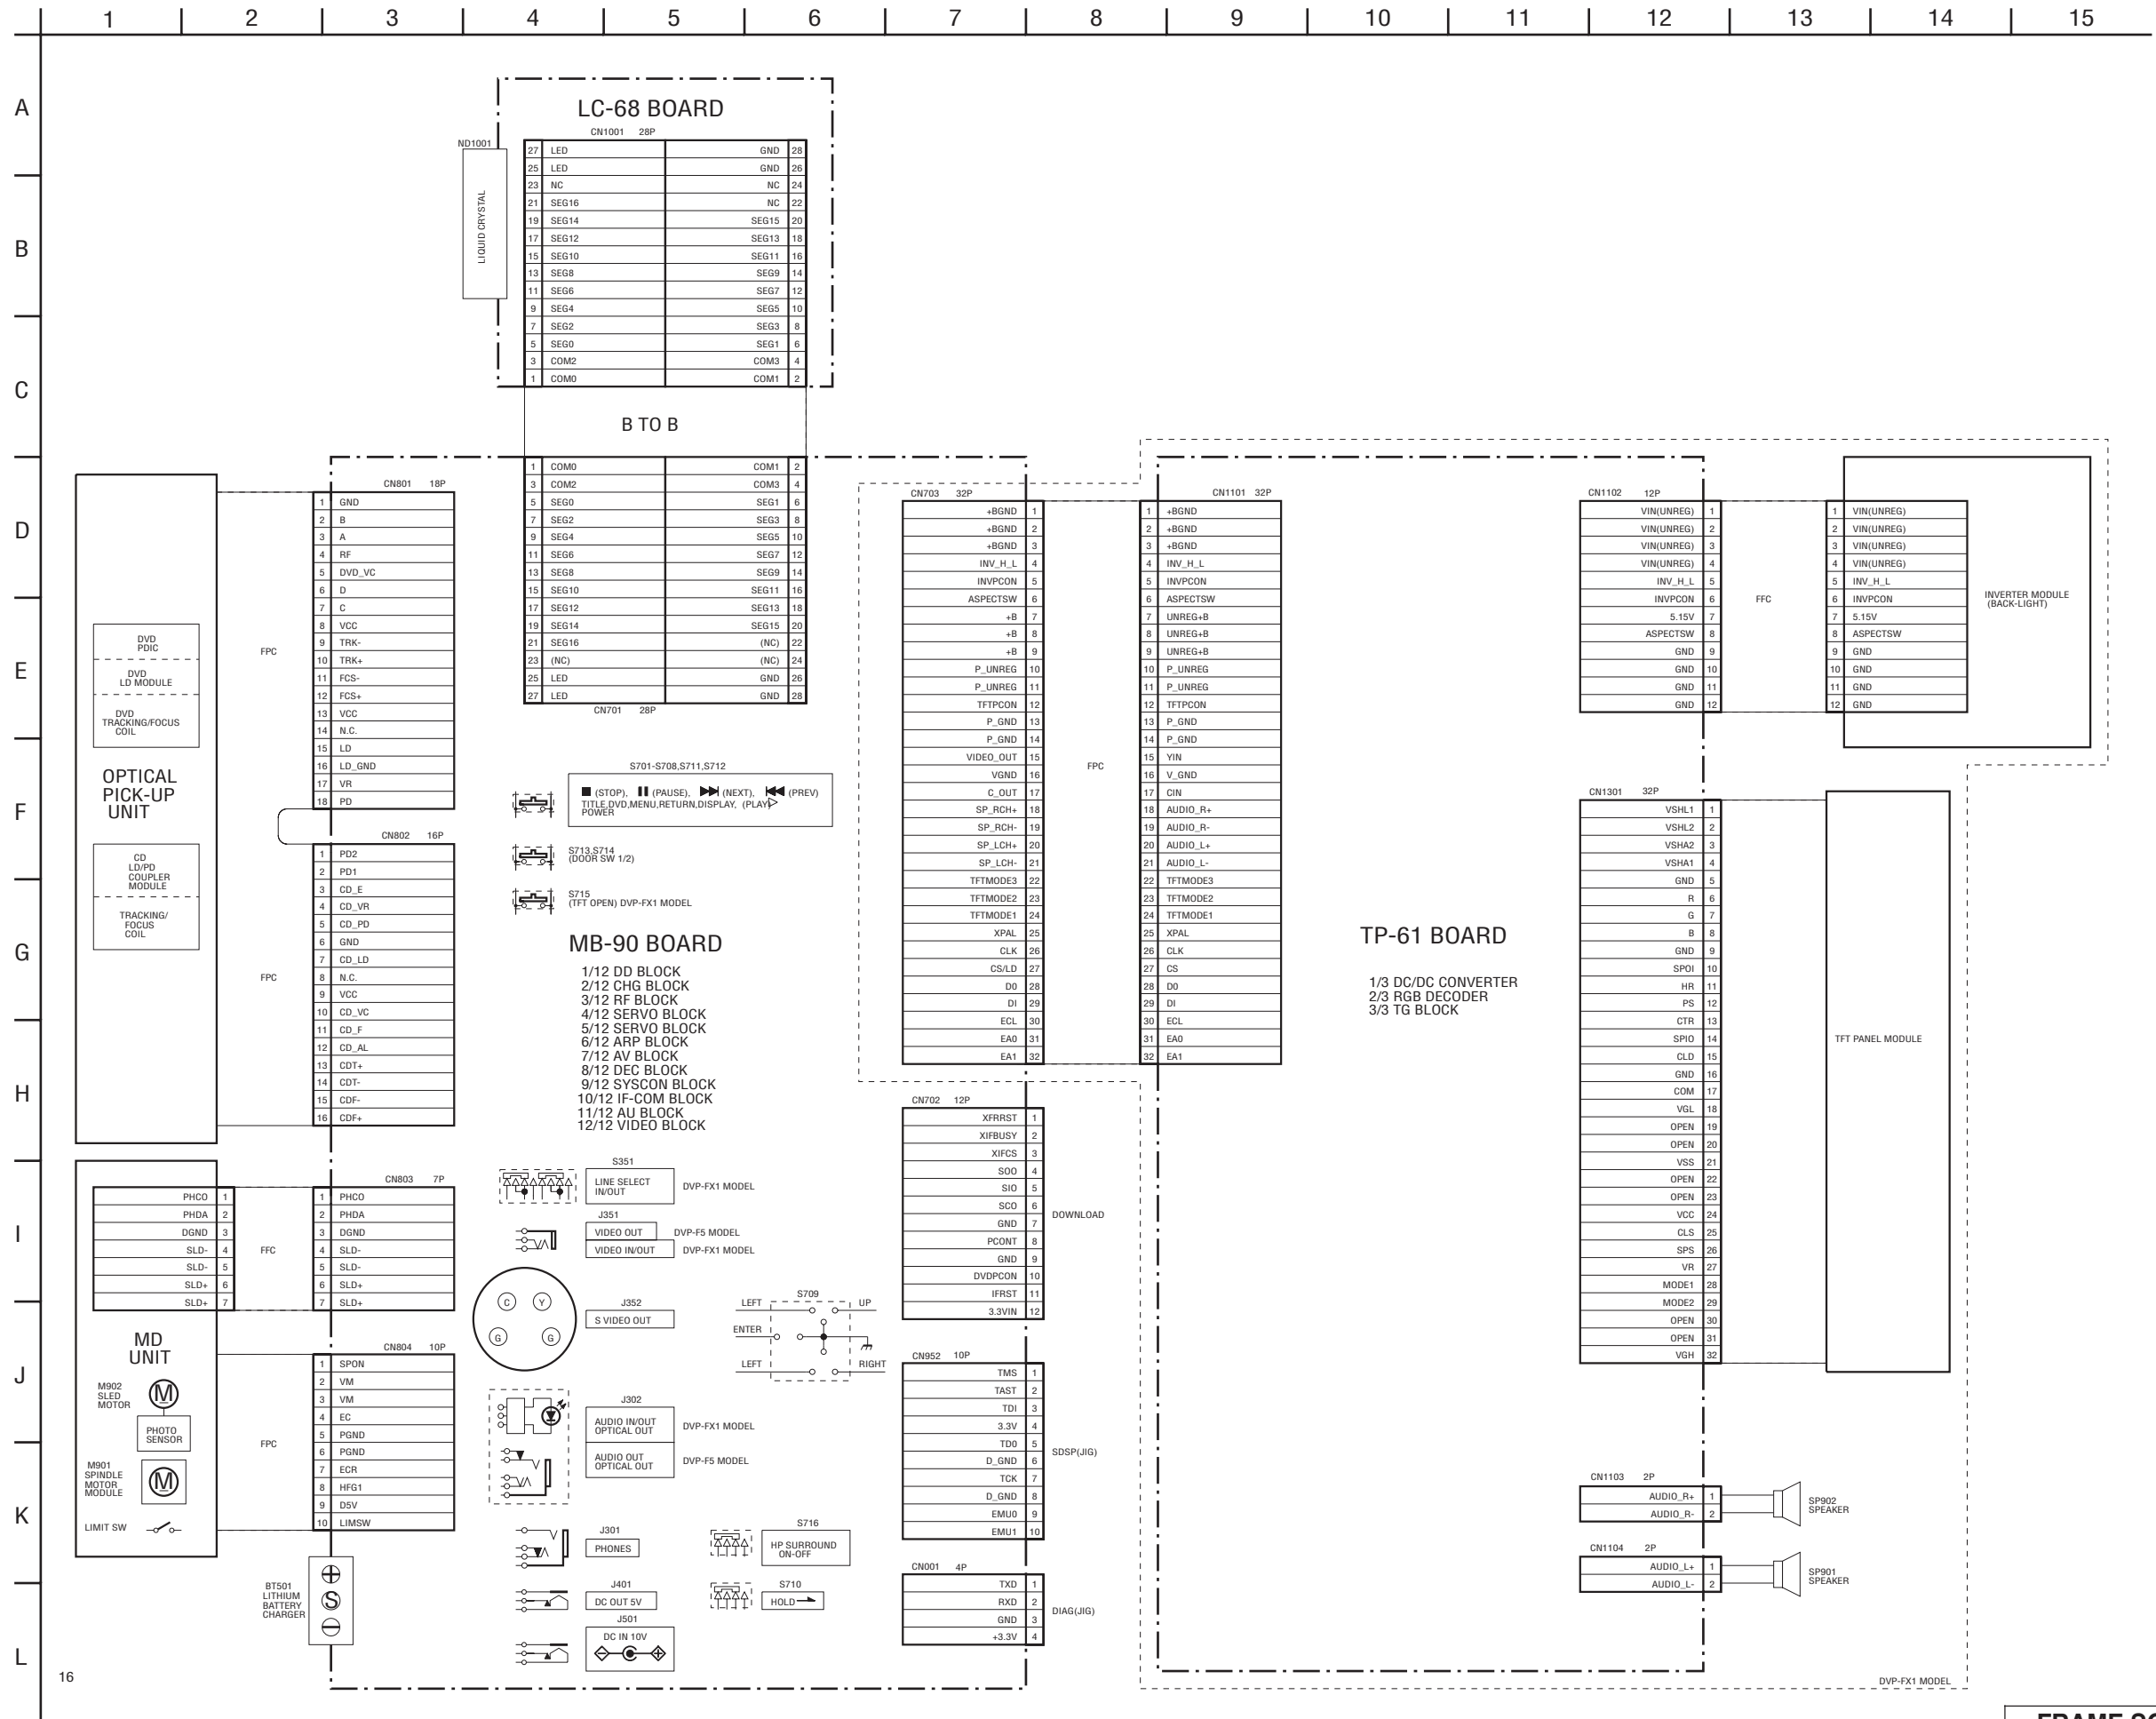


4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR WIRING BOARDS AND SCHEMATIC DIAGRAMS
(In addition to this, the necessary note is printed in each block)


(For printed wiring boards)

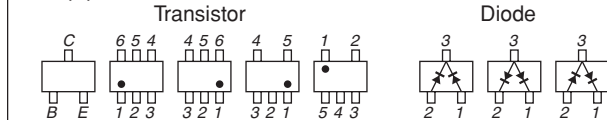


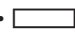
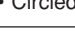
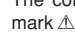
- : Pattern from the side which enables seeing.
 (The other layers' patterns are not indicated.)
- Through hole is omitted.
- Circled numbers refer to waveforms.
- There are few cases that the part printed on diagram isn't mounted in this model.
- Chip parts.



(For schematic diagrams)

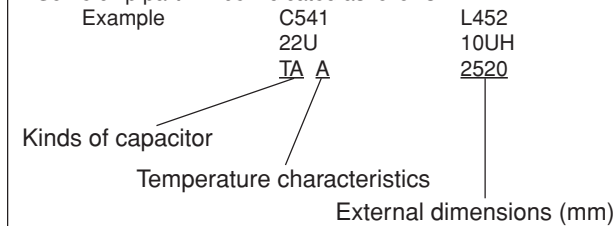- All capacitors are in μF unless otherwise noted. $\text{pF} : \mu\mu\text{F}$. 50V or less are not indicated except for electrolytics and tantalums.
- Chip resistors are 1/10W unless otherwise noted. $\text{k}\Omega=1000\Omega$, $\text{M}\Omega=1000\text{k}\Omega$.
- Caution when replacing chip parts.
 New parts must be attached after removal of chip.
 Be careful not to heat the minus side of tantalum capacitor, Because it is damaged by the heat.
- Some chip part will be indicated as follows.




- Constants of resistors, capacitors, ICs and etc with XX indicate that they are not used.
 In such cases, the unused circuits may be indicated.
- Parts with \star differ according to the model/destination.
 Refer to the mount table for each function.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Signal name
 $\text{XEDIT} \rightarrow \text{EDIT}$ $\text{PB/XREC} \rightarrow \text{PB/REC}$
-  : non flammable resistor
-  : fusible resistor
-  : panel designation
-  : B+ Line
-  : B- Line
-  : adjustment for repair.
- Circled numbers refer to waveforms.


<p>The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.</p>	<p>Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>	<p>以阴影和 Δ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。</p>
--	--	--

LC-68 (LCD) PRINTED WIRING BOARD


LC-68 BOARD (SIDE A)

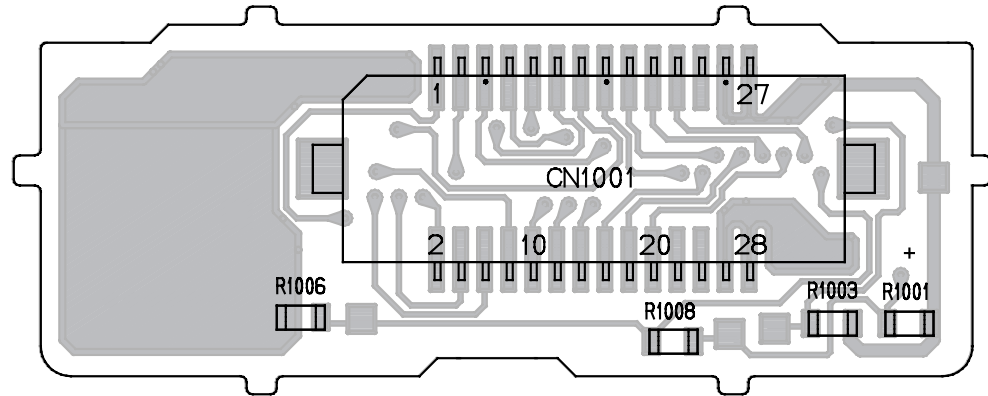

LC-68 BOARD (SIDE B)

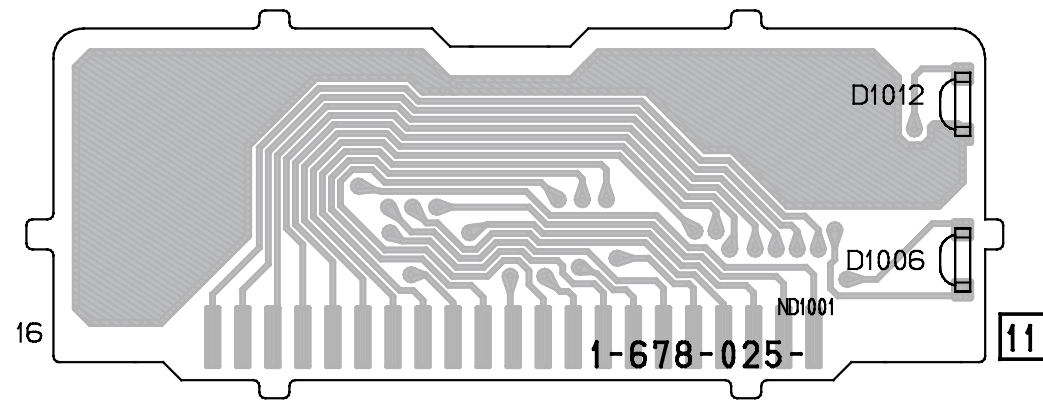


For schematic diagram

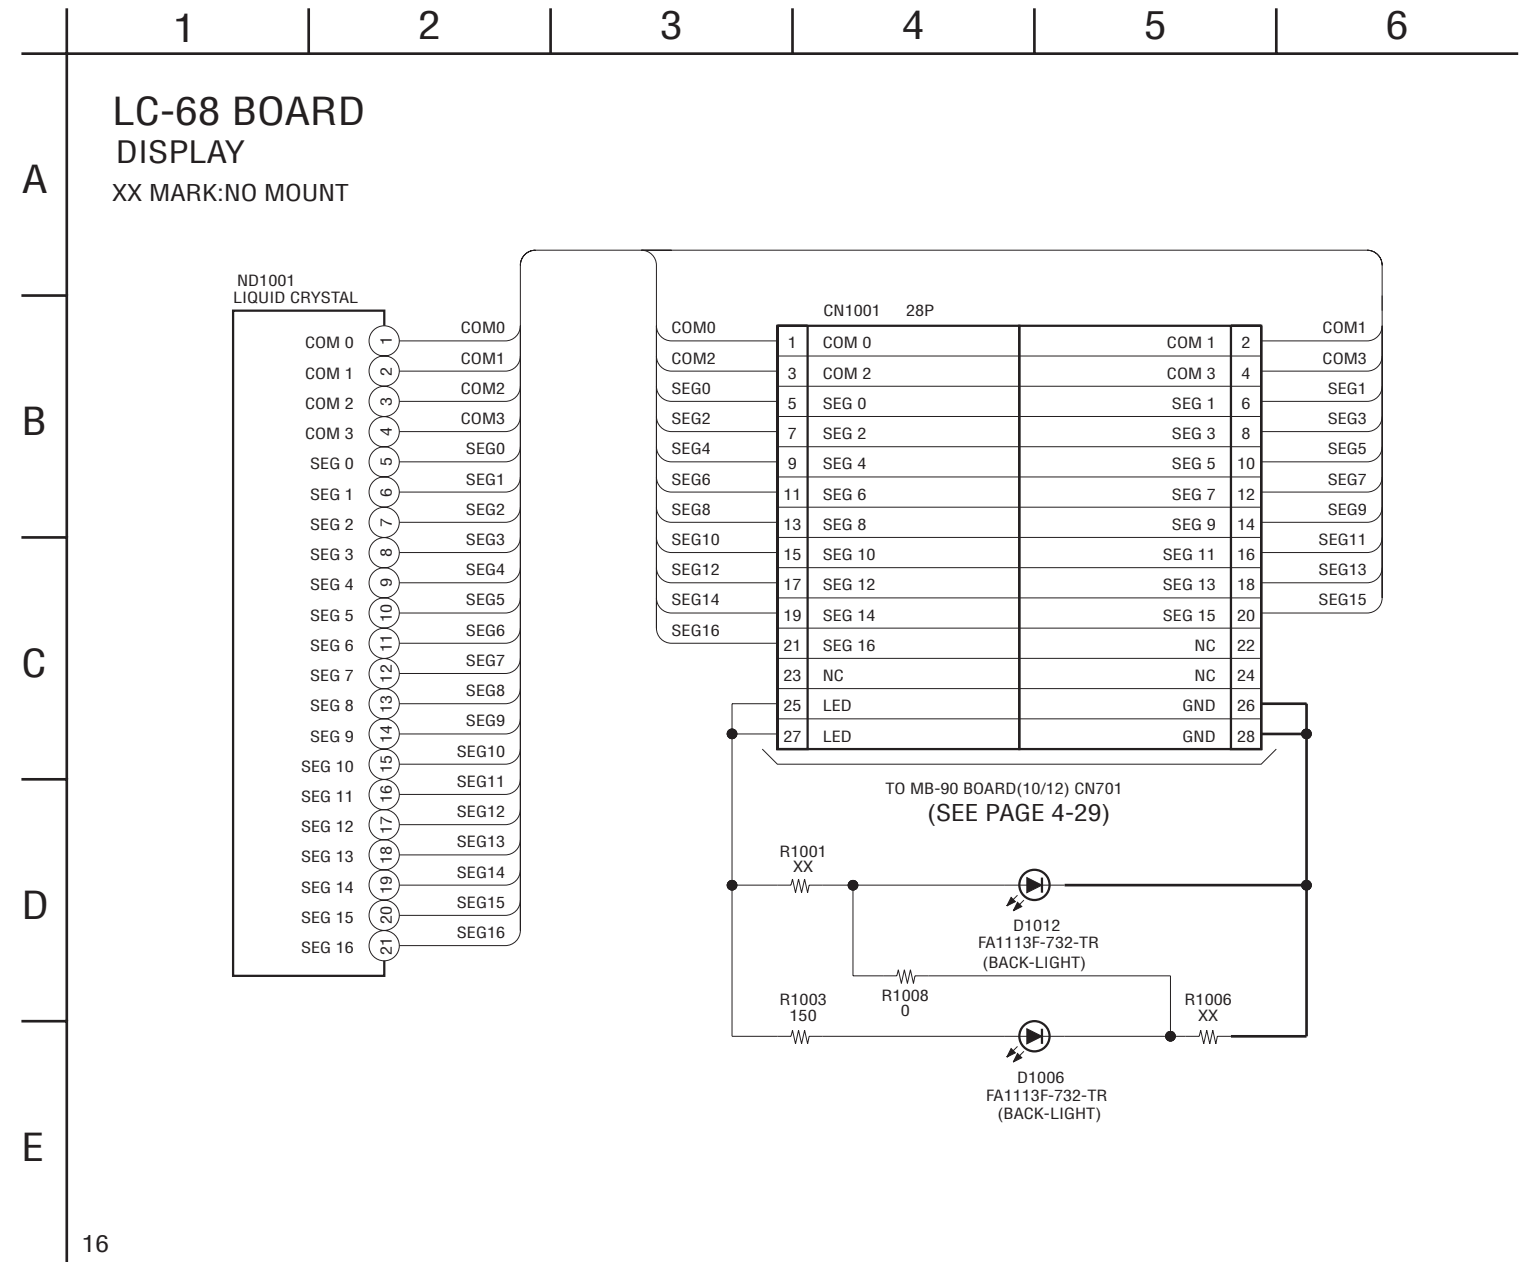

MB-90 (RF, VIDEO, AUDIO, SERVO, SYSTEM CONTROL) PRINTED WIRING BOARD

- Ref. No. MB-90 Board; 000 Series -

MB-90 BOARD (SIDE A)

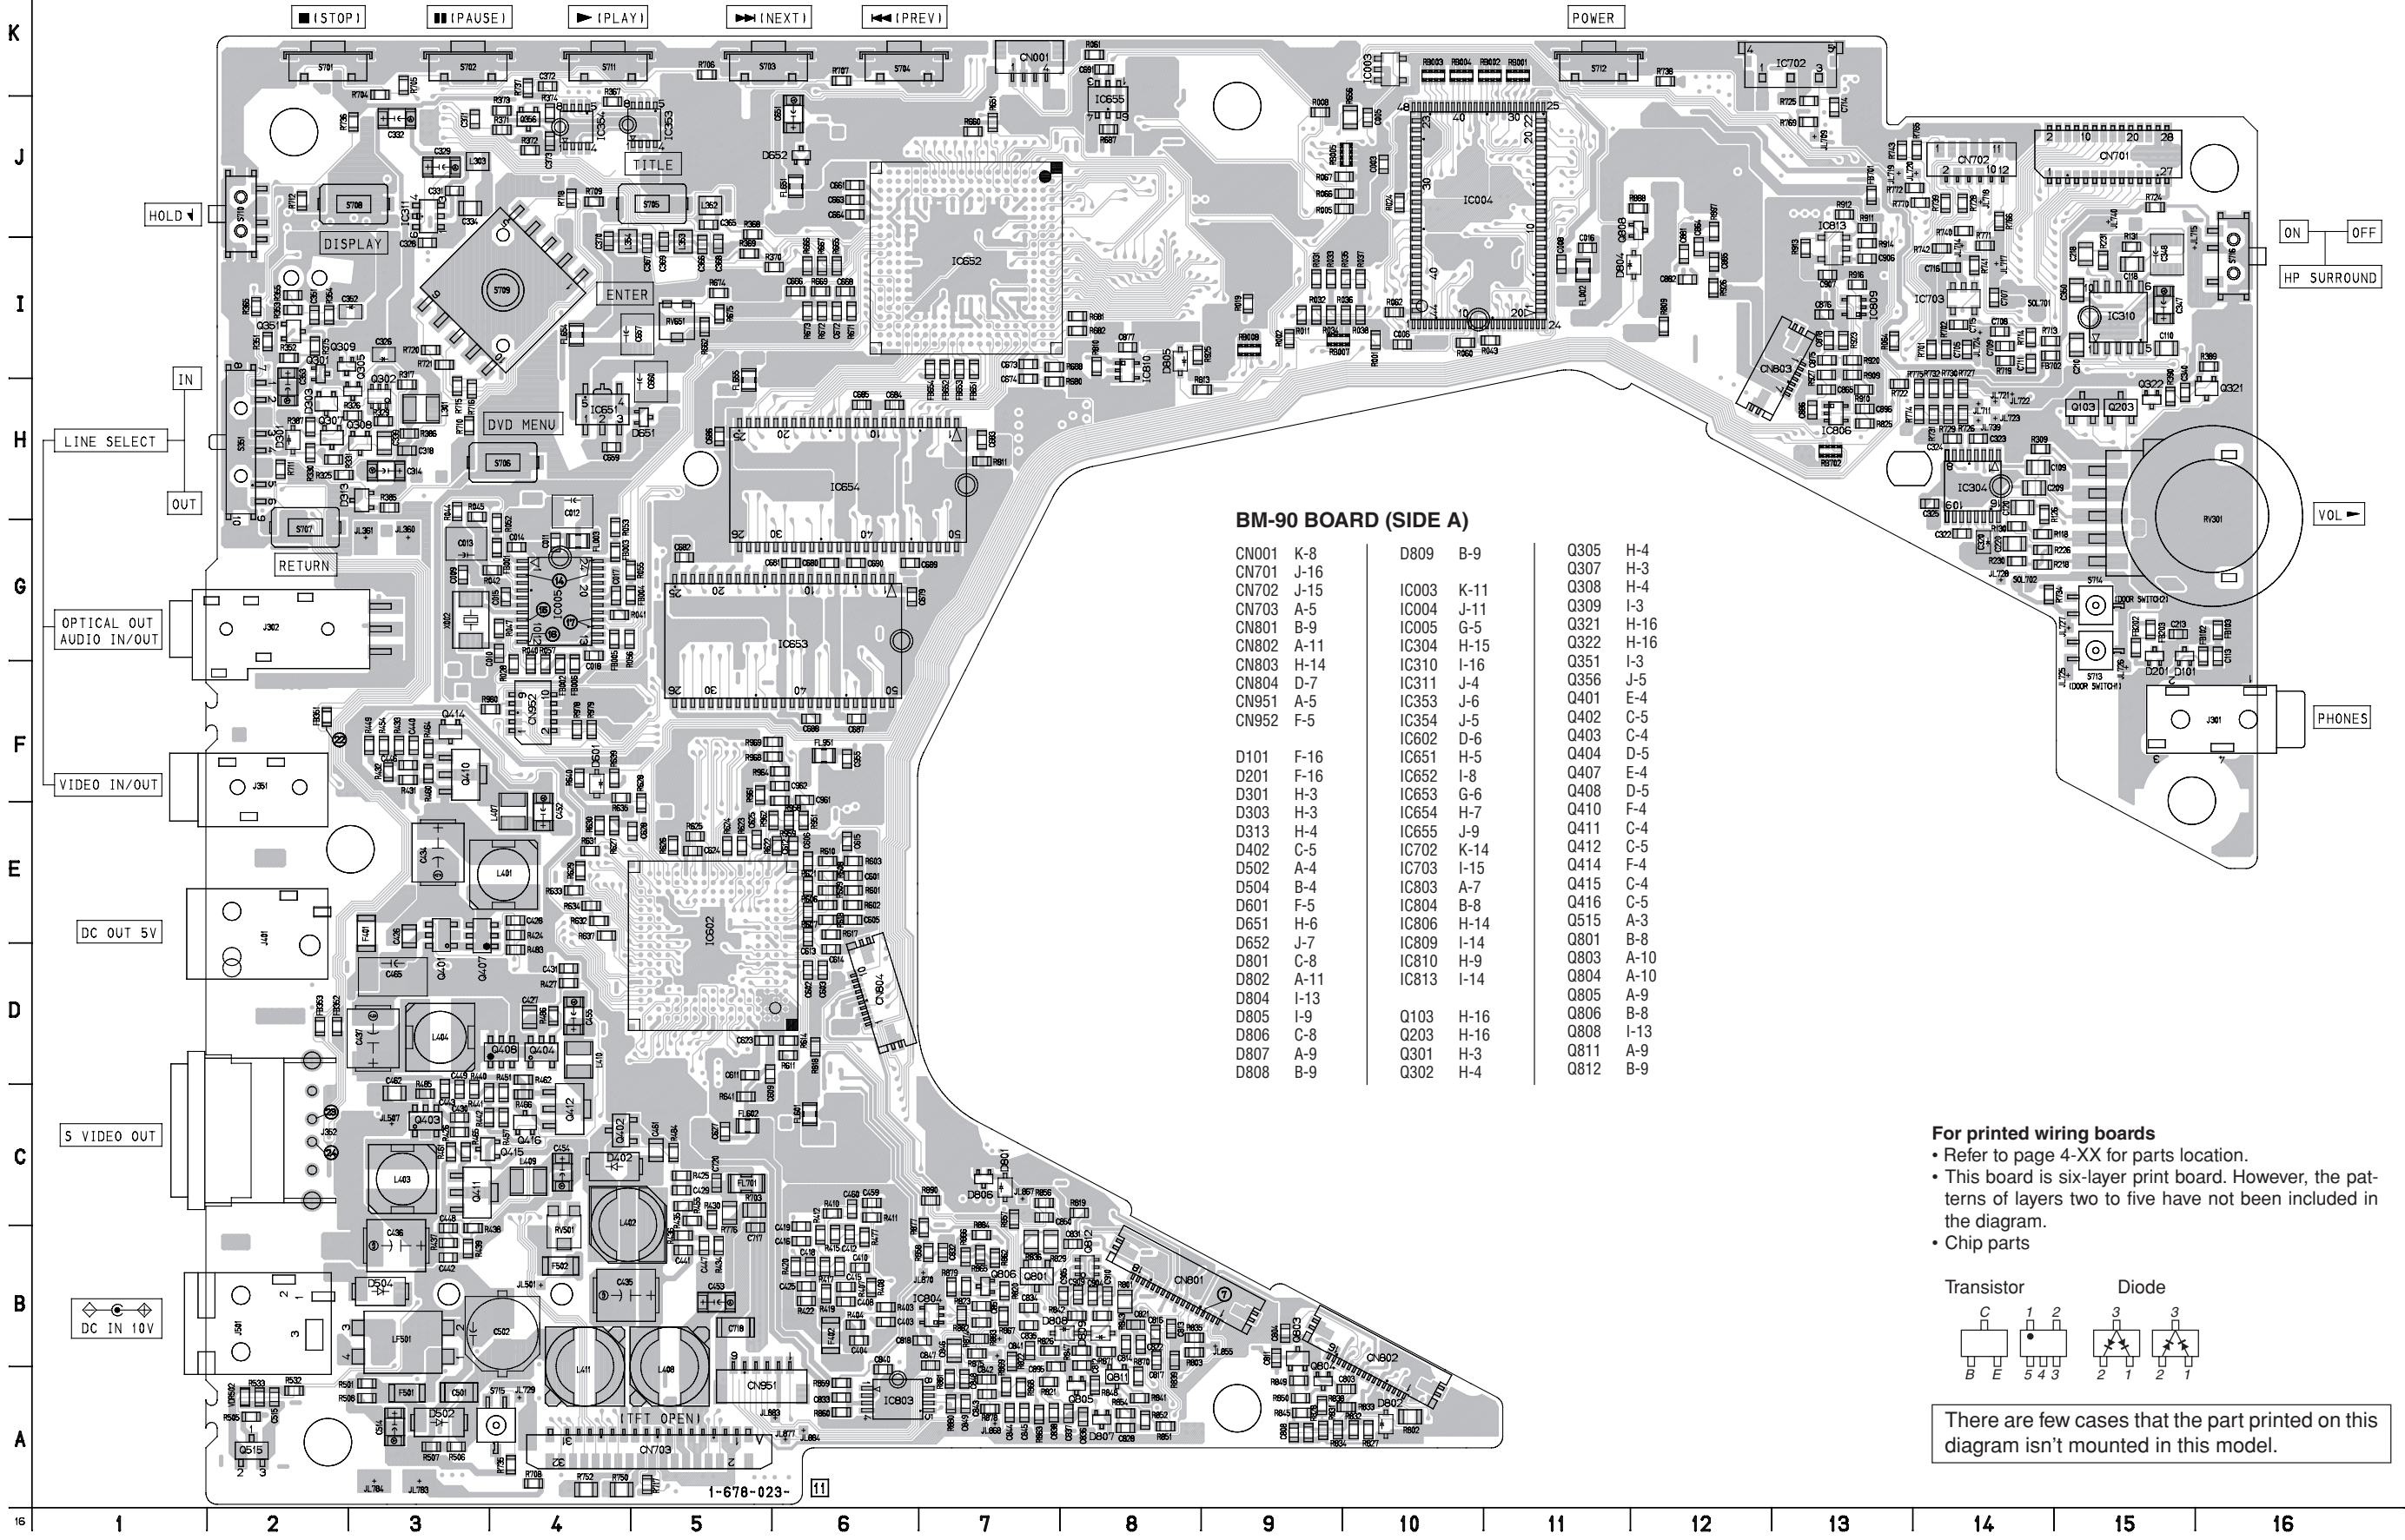


BM-90 BOARD (SIDE A)

CN001	K-8	D809	B-9	Q305	H-4
CN701	J-16	IC003	K-11	Q307	H-3
CN702	J-15	IC004	J-11	Q308	H-4
CN703	A-5	IC005	G-5	Q309	I-3
CN801	B-9	IC304	H-15	Q321	H-16
CN802	A-11	IC310	I-16	Q322	H-16
CN803	H-14	IC311	J-4	Q351	I-3
CN804	D-7	IC353	J-6	Q356	J-5
CN951	A-5	IC354	J-5	Q401	E-4
CN952	F-5	IC602	D-6	Q402	C-5
D101	F-16	IC651	H-5	Q403	C-4
D201	F-16	IC652	I-8	Q404	D-5
D301	H-3	IC653	G-6	Q407	E-4
D303	H-3	IC654	H-7	Q408	D-5
D313	H-4	IC655	J-9	Q410	F-4
D402	C-5	IC702	K-14	Q411	C-4
D502	A-4	IC703	I-15	Q412	C-5
D504	B-4	IC803	A-7	Q414	F-4
D601	F-5	IC804	B-8	Q415	C-4
D651	H-6	IC806	H-14	Q416	C-5
D652	J-7	IC809	I-14	Q515	A-3
D801	C-8	IC810	H-9	Q801	B-8
D802	A-11	IC813	I-14	Q803	A-10
D804	I-13	Q103	H-16	Q804	A-10
D805	I-9	Q203	H-16	Q805	A-9
D806	C-8	Q301	H-3	Q806	B-8
D807	A-9	Q302	H-4	Q808	I-13
D808	B-9			Q811	A-9
				Q812	B-9


For printed wiring boards

- Refer to page 4-XX for parts location.
- This board is six-layer print board. However, the patterns of layers two to five have not been included in the diagram.
- Chip parts

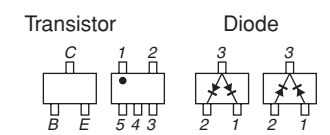

There are few cases that the part printed on this diagram isn't mounted in this model.


MB-90 BOARD (SIDE B)

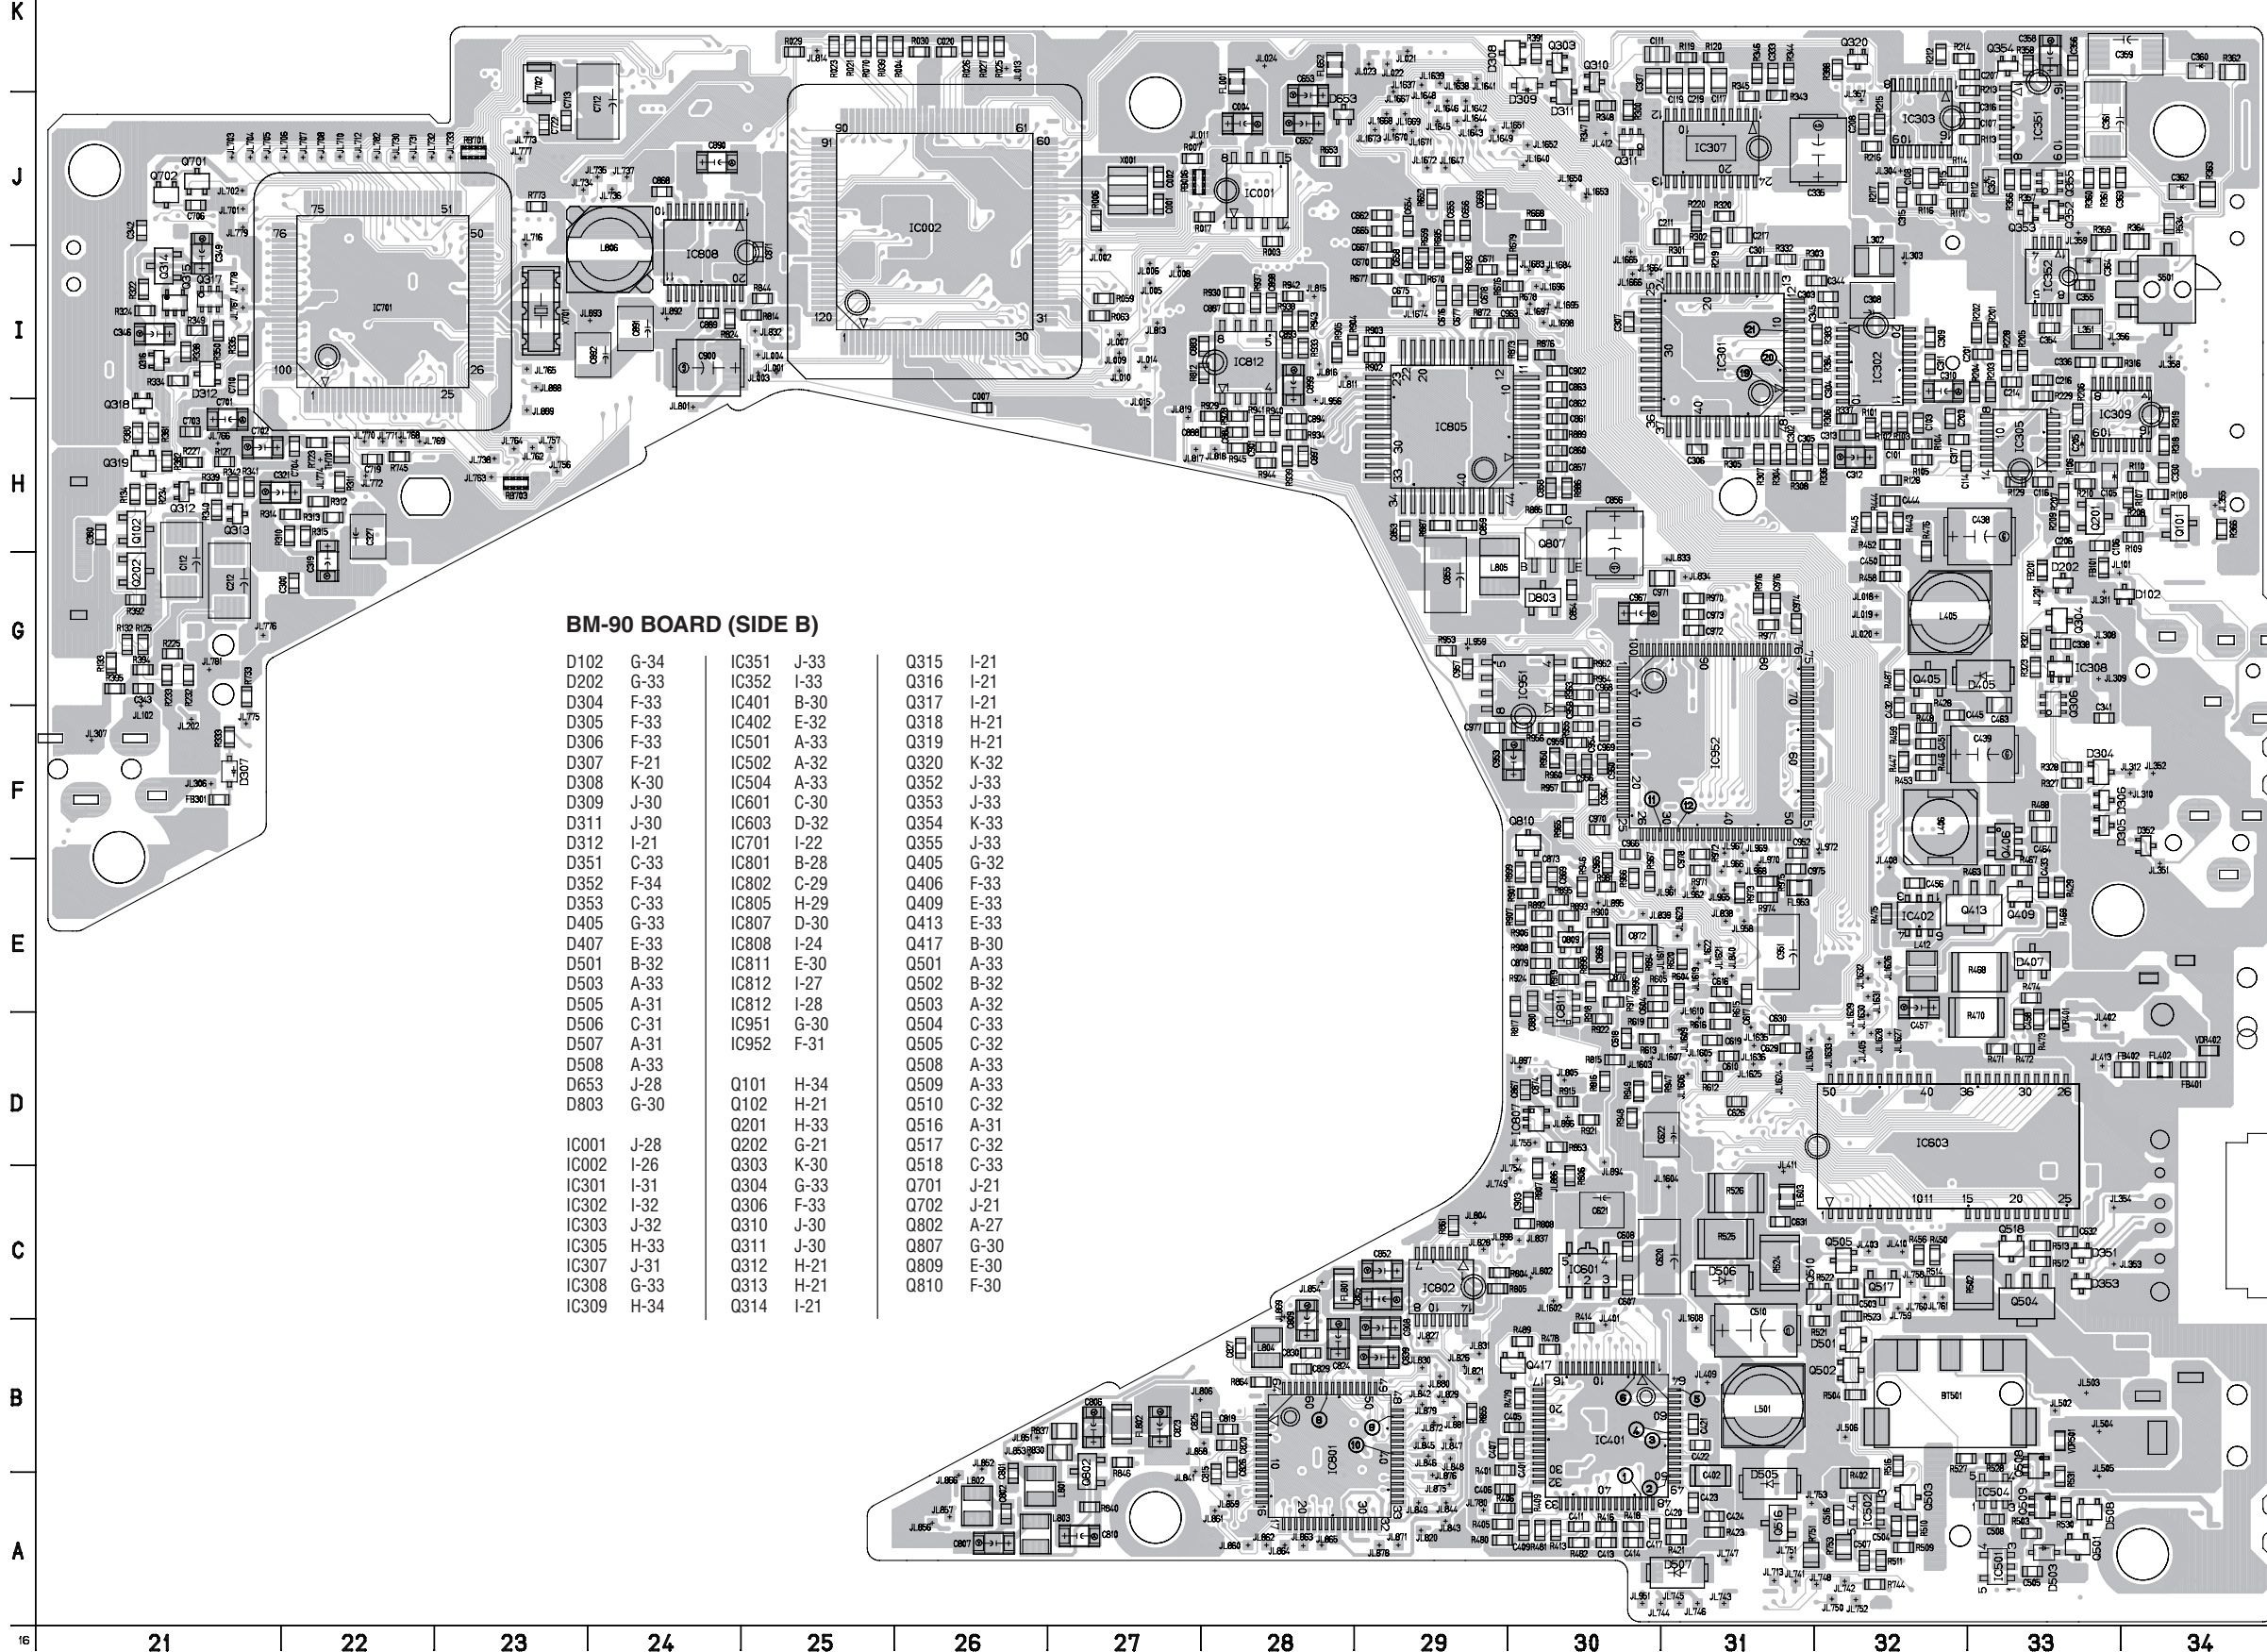

BM-90 BOARD (SIDE B)

D102	G-34	IC351	J-33	Q315	I-21
D202	G-33	IC352	I-33	Q316	I-21
D304	F-33	IC401	B-30	Q317	I-21
D305	F-33	IC402	E-32	Q318	H-21
D306	F-33	IC501	A-33	Q319	H-21
D307	F-21	IC502	A-32	Q320	K-32
D308	K-30	IC504	A-33	Q352	J-33
D309	J-30	IC601	C-30	Q353	J-33
D311	J-30	IC603	D-32	Q354	K-33
D312	I-21	IC701	I-22	Q355	J-33
D351	C-33	IC801	B-28	Q405	G-32
D352	F-34	IC802	C-29	Q406	F-33
D353	C-33	IC805	H-29	Q409	E-33
D405	G-33	IC807	D-30	Q413	E-33
D407	E-33	IC808	I-24	Q417	B-30
D501	B-32	IC811	E-30	Q501	A-33
D503	A-33	IC812	I-27	Q502	B-32
D505	A-31	IC812	I-28	Q503	A-32
D506	C-31	IC951	G-30	Q504	C-33
D507	A-31	IC952	F-31	Q505	C-32
D508	A-33			Q508	A-33
D653	J-28	Q101	H-34	Q509	A-33
D803	G-30	Q102	H-21	Q510	C-32
IC001	J-28	Q201	H-33	Q516	A-31
IC002	I-26	Q202	G-21	Q517	C-32
IC301	I-31	Q303	K-30	Q518	C-33
IC302	I-32	Q304	G-33	Q701	J-21
IC303	J-32	Q306	F-33	Q702	J-21
IC305	H-33	Q310	J-30	Q802	A-27
IC307	J-31	Q311	J-30	Q807	G-30
IC308	G-33	Q312	H-21	Q809	E-30
IC309	H-34	Q313	H-21	Q810	F-30
		Q314	I-21		

For Schematic Diagram
 • Refer to page 4-7 for printed wiring board.
 • Refer to page 4-35 for waveforms.

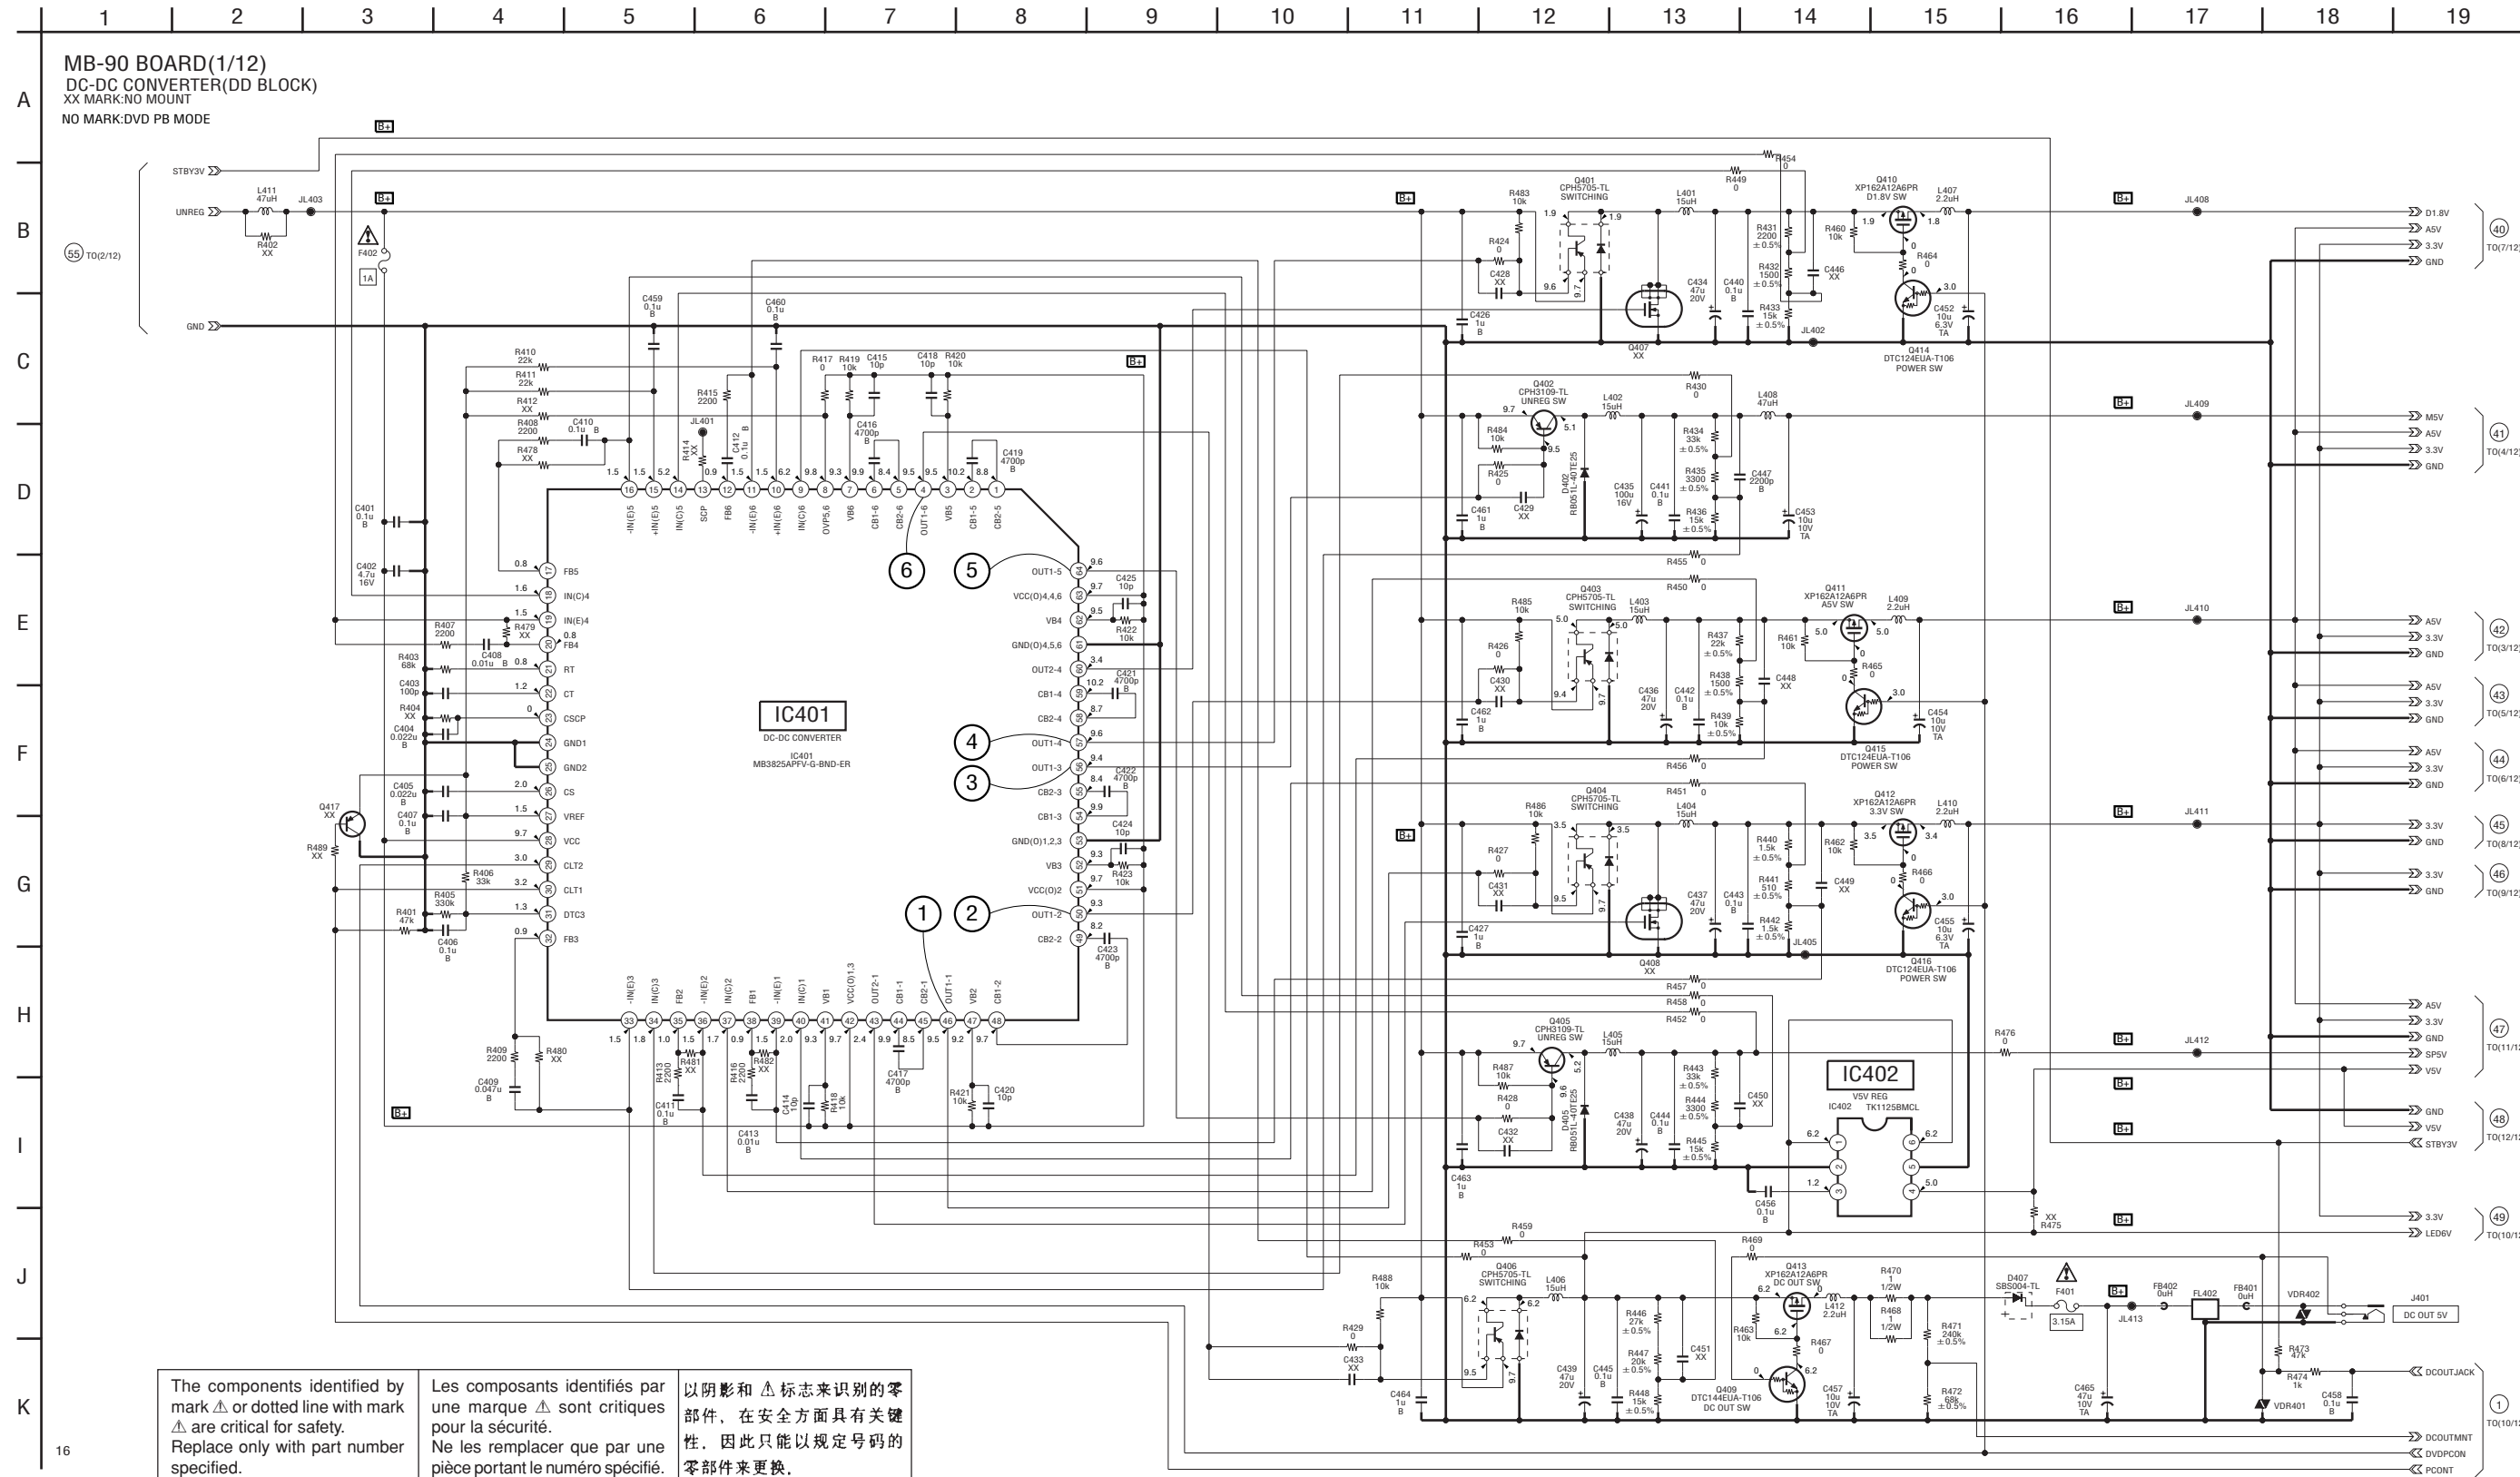


The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 \triangle 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。


For Schematic Diagram

• Refer to page 4-7 for printed wiring board.

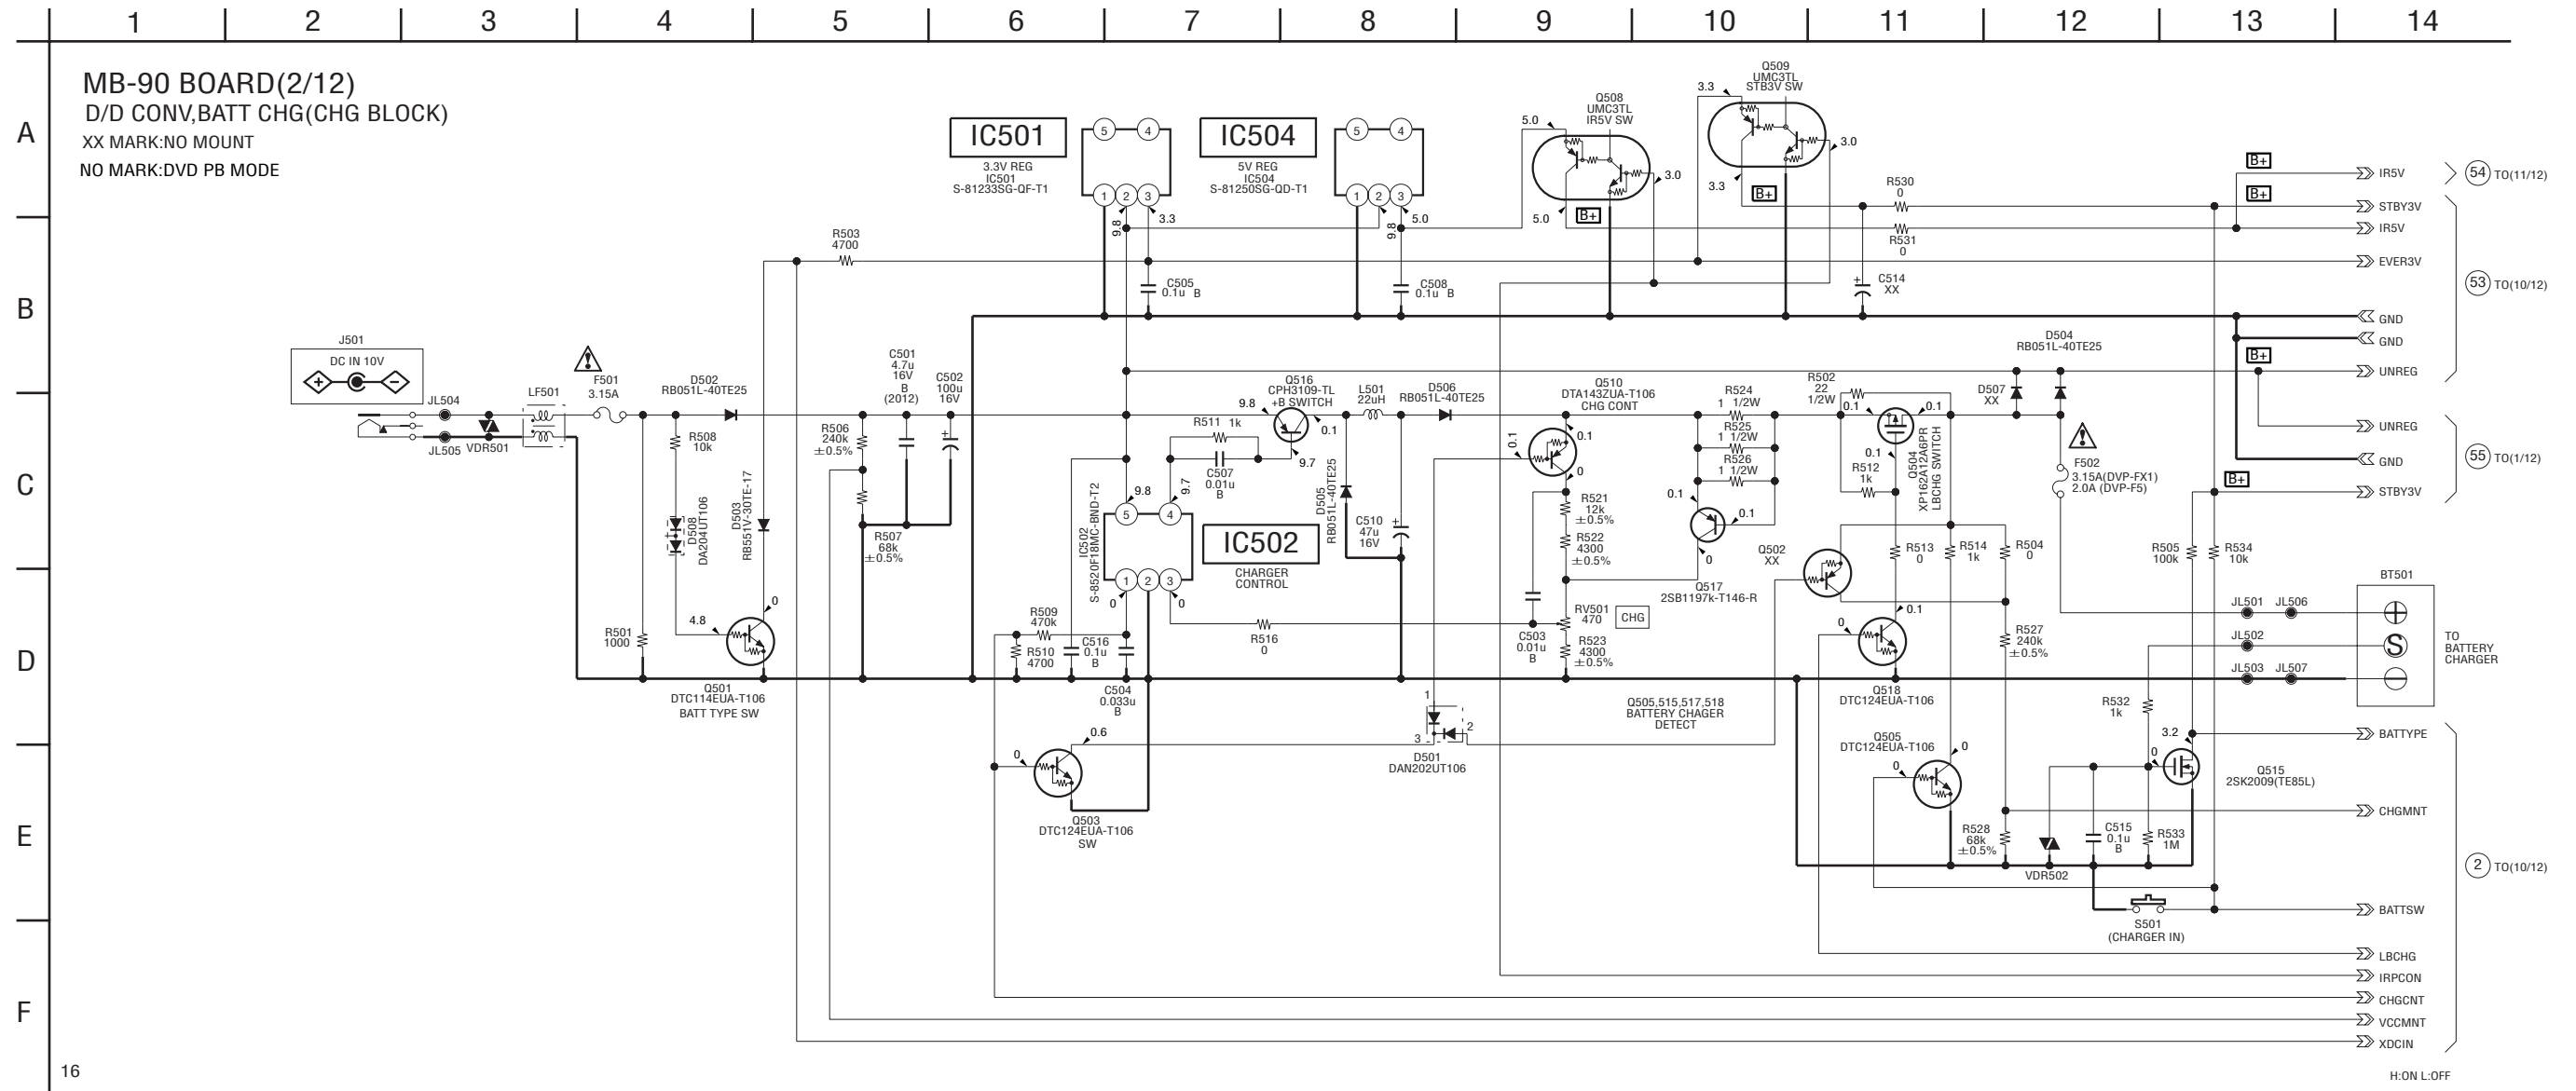


<p>The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.</p>	<p>Les composants identifiés par une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>	<p>以阴影和 \triangle 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。</p>
---	--	---


For Schematic Diagram
 • Refer to page 4-7 for printed wiring board.
 • Refer to page 4-35 for waveforms.

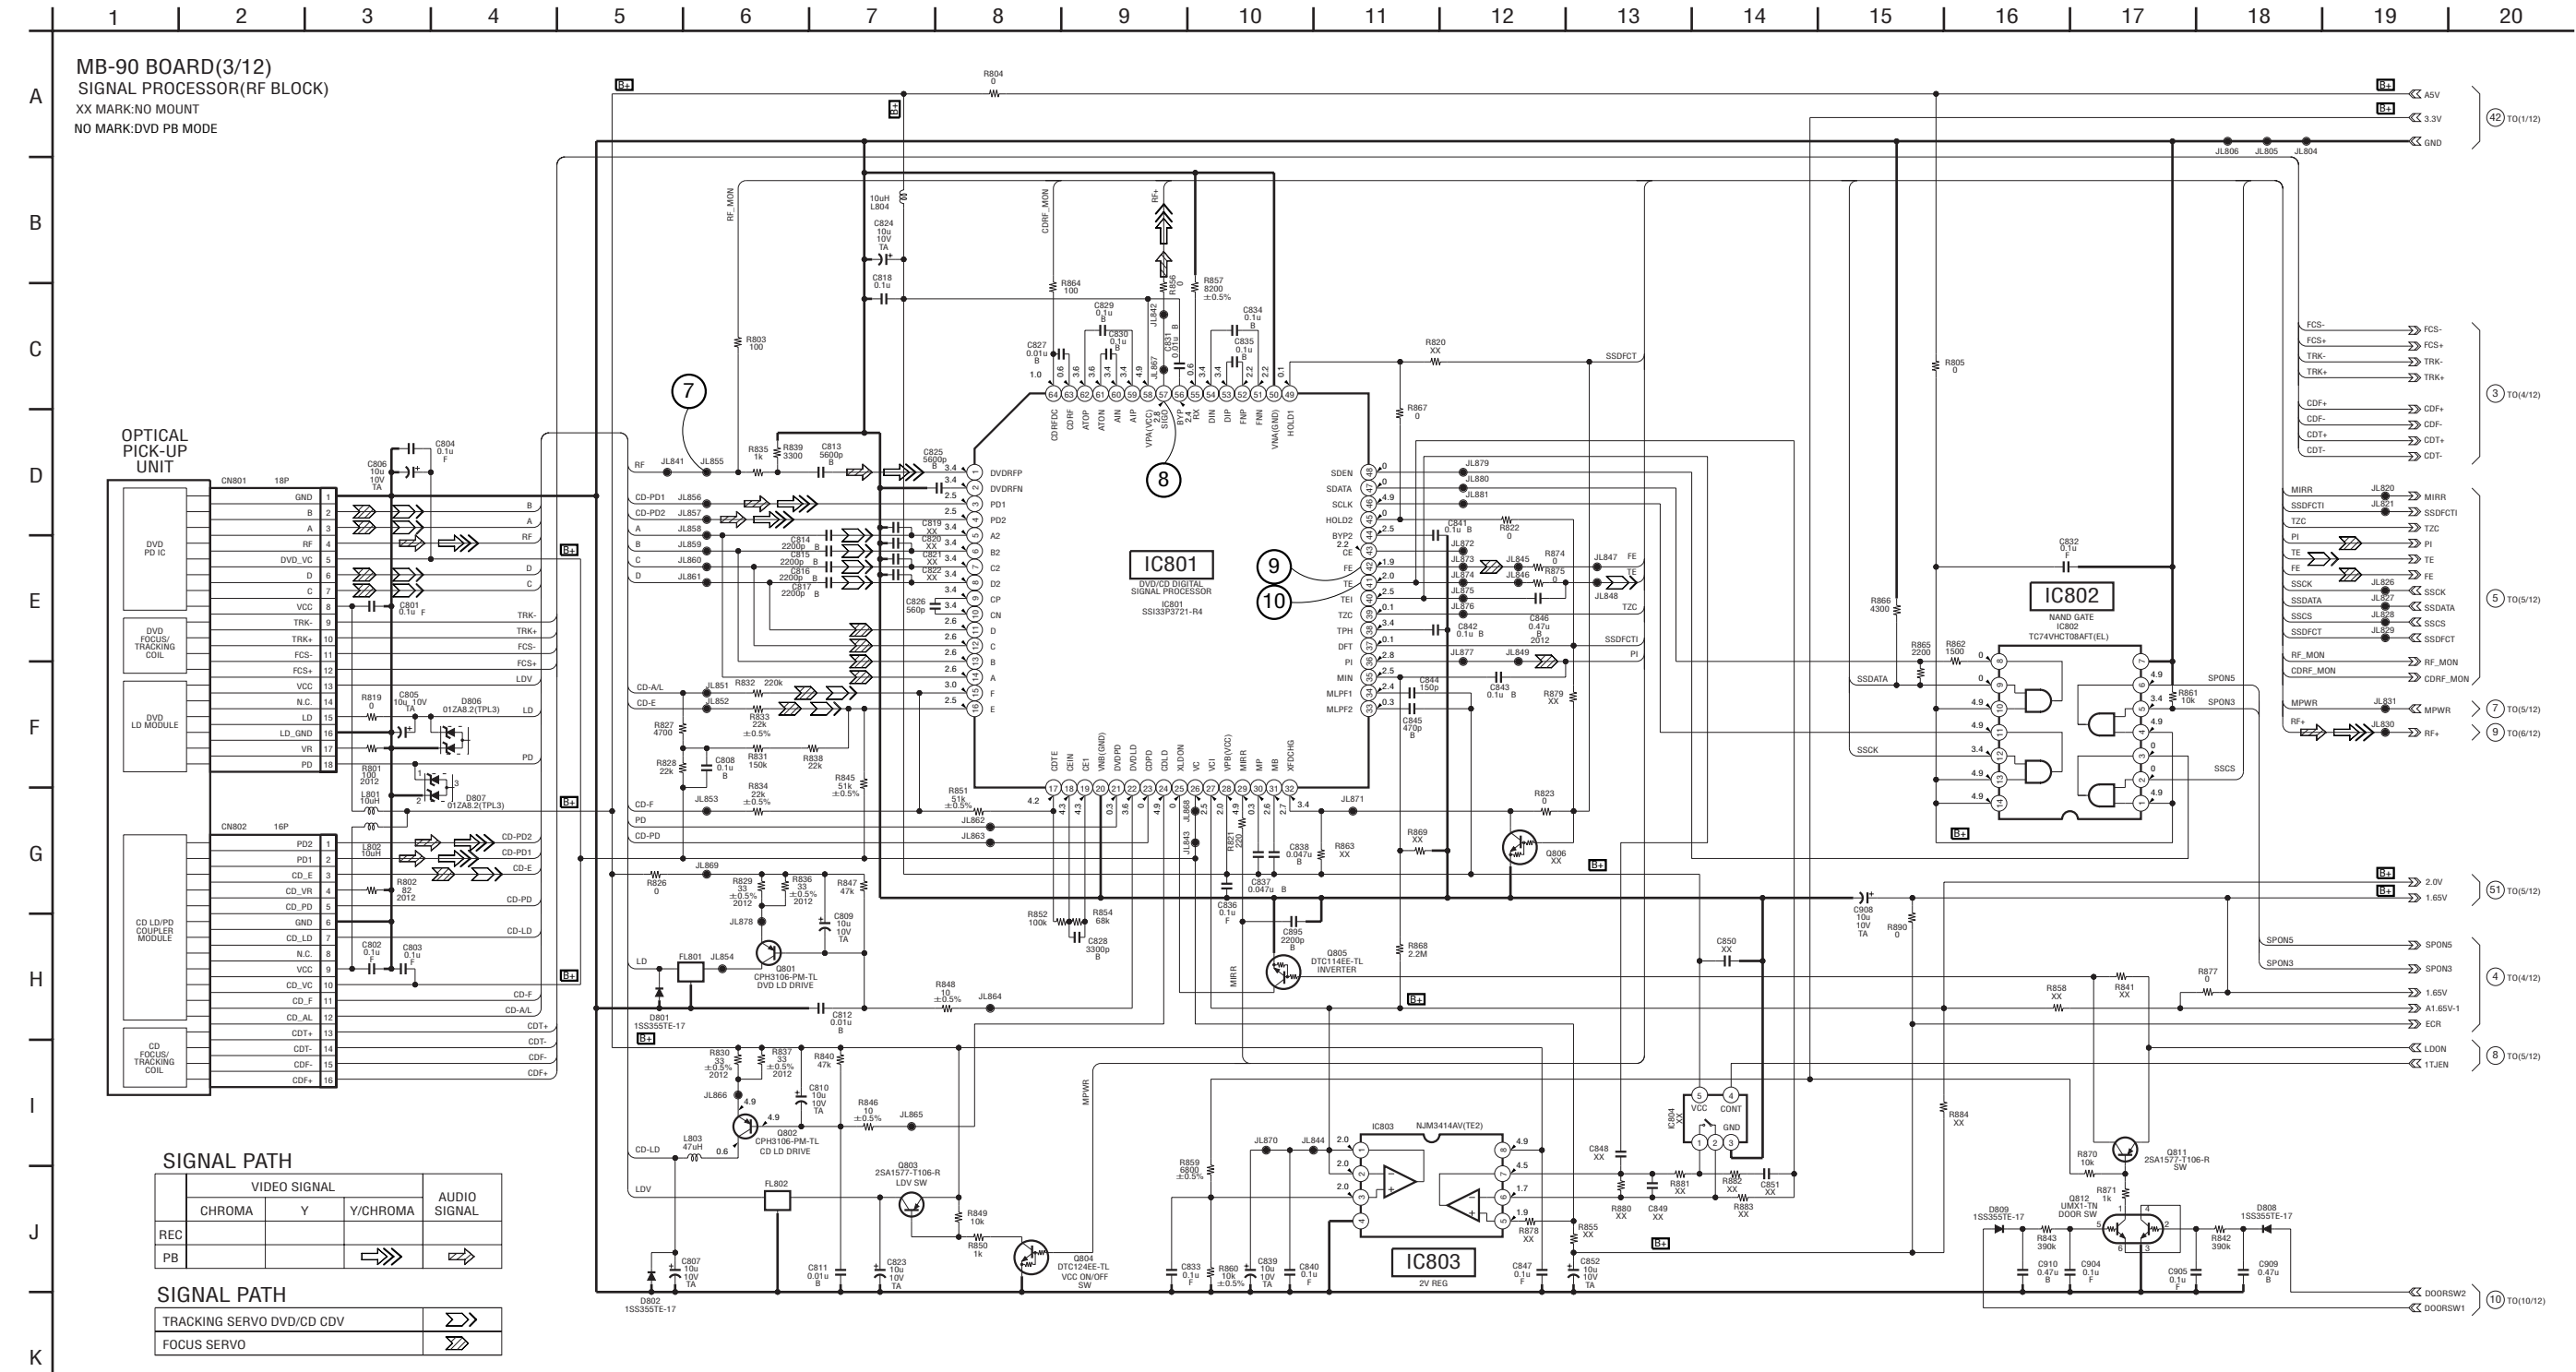

For Schematic Diagram
 • Refer to page 4-7 for printed wiring board.

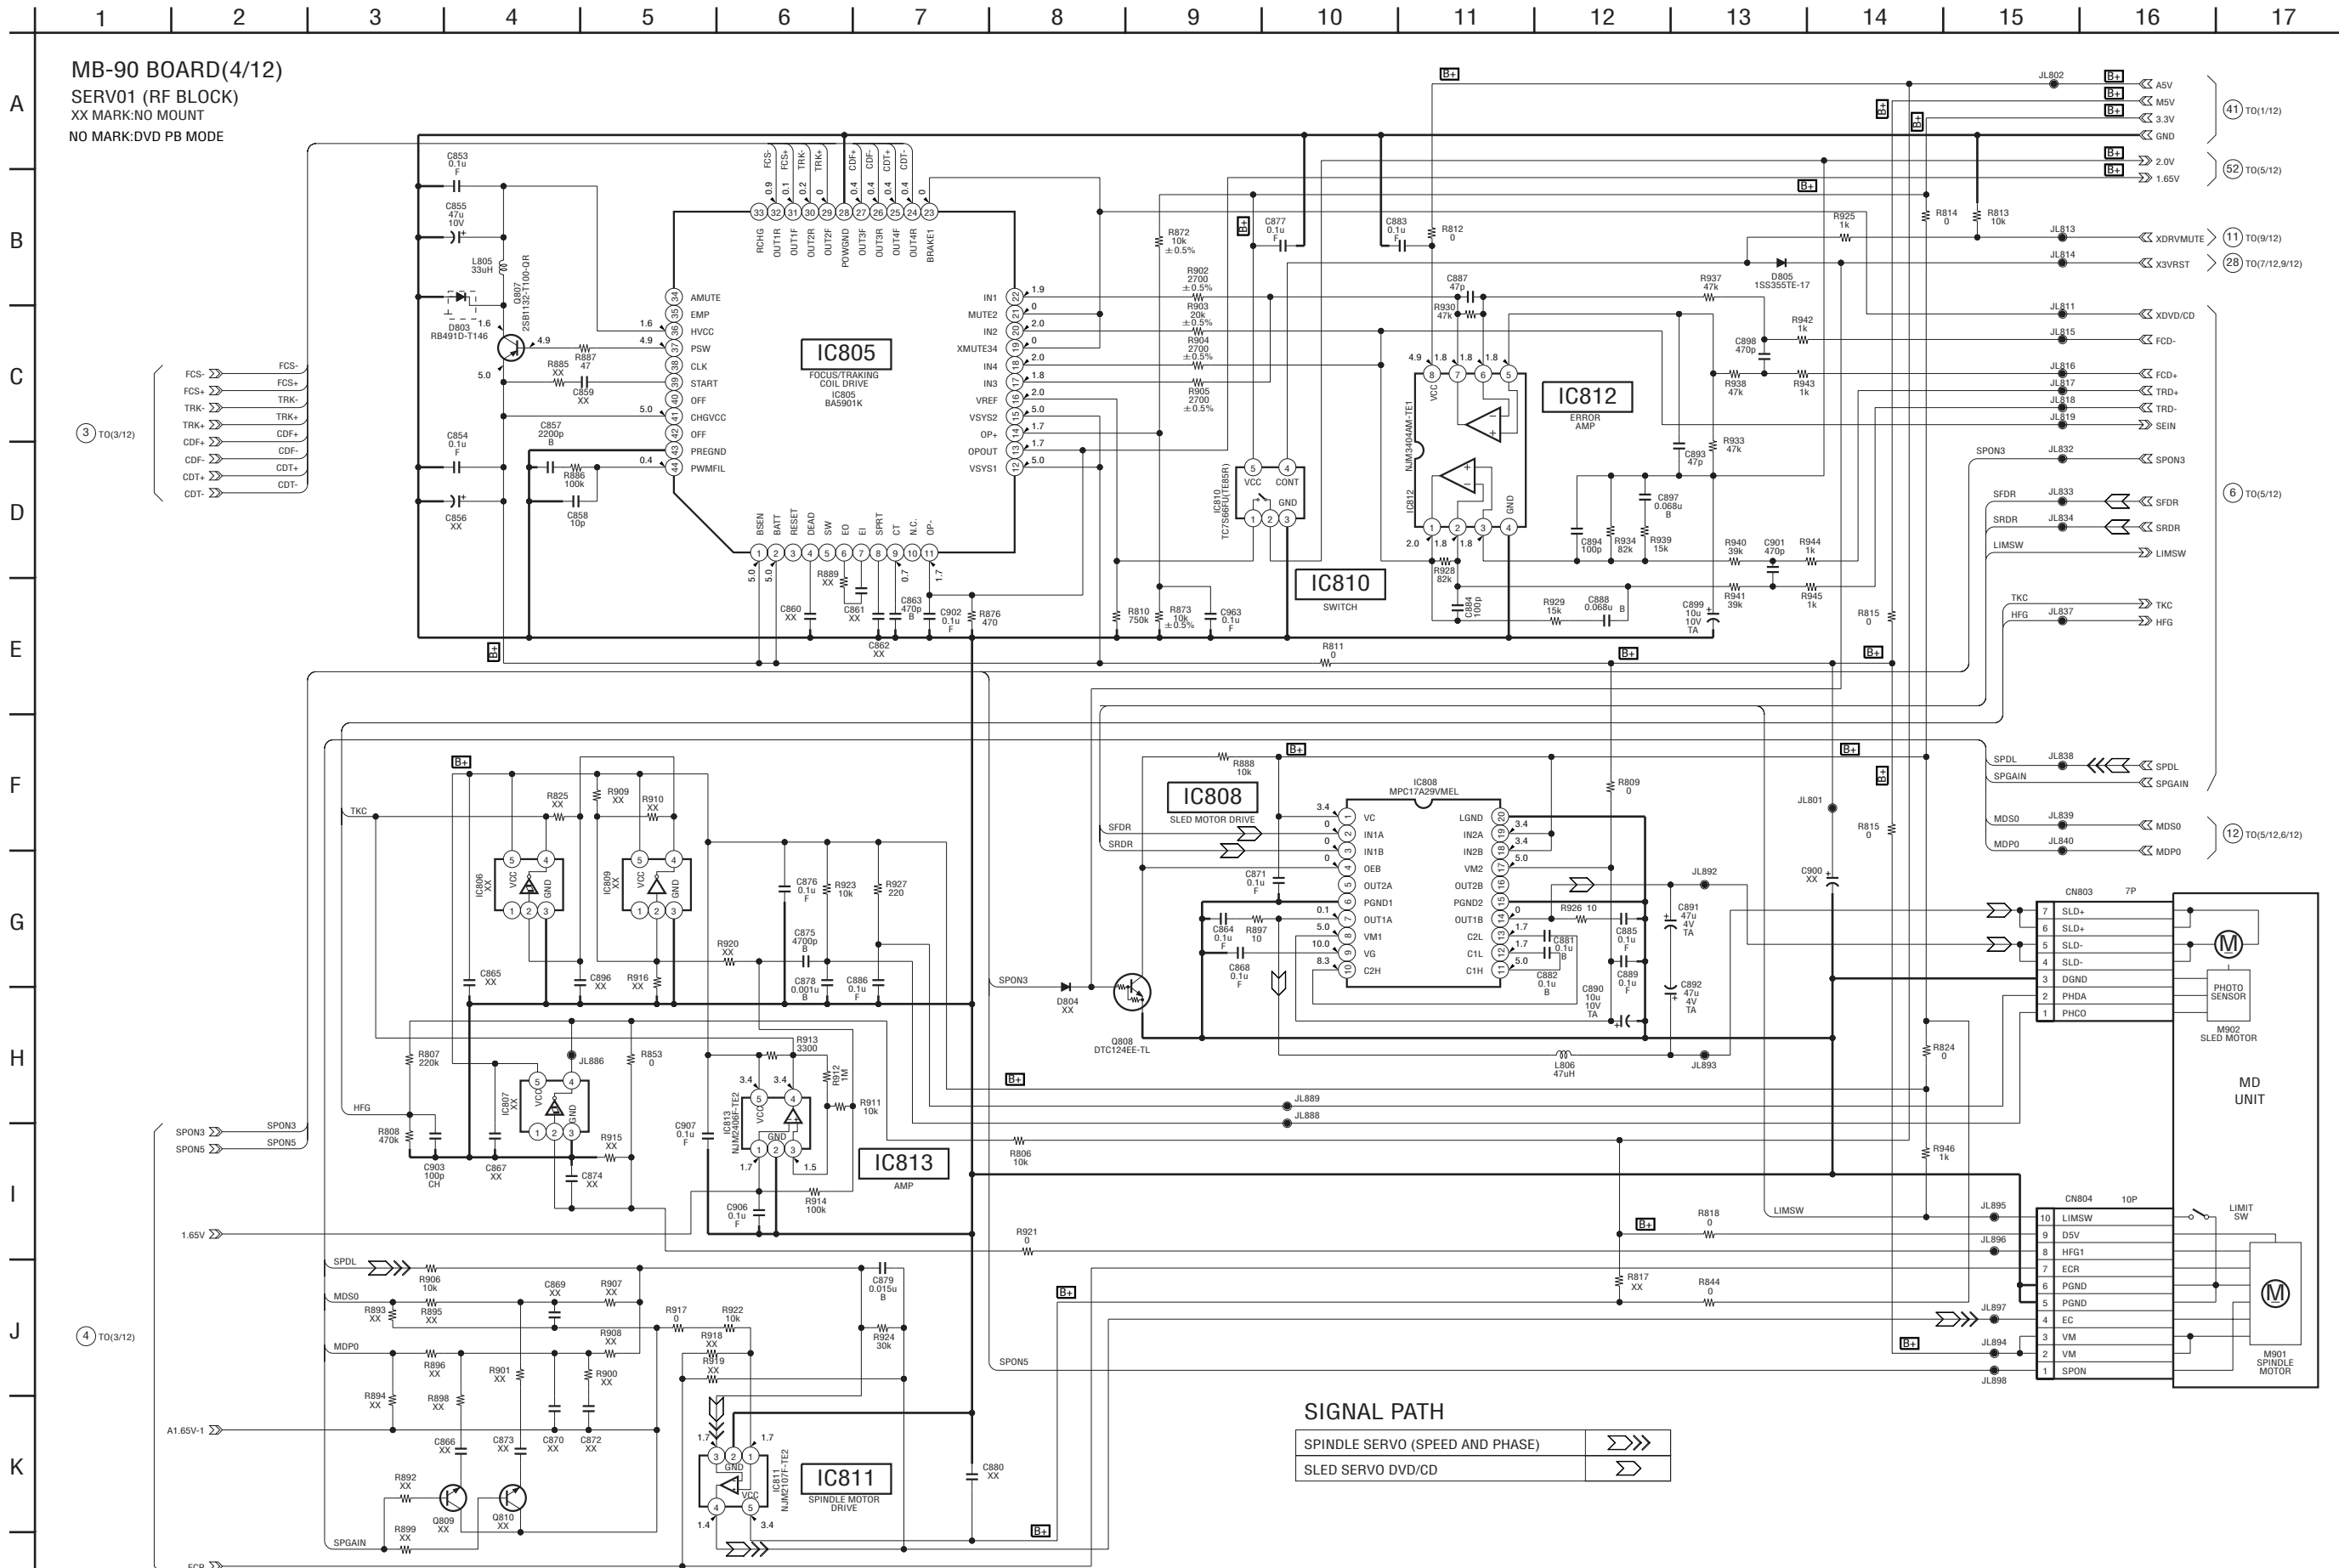


- For Schematic Diagram
- Refer to page 4-7 for printed wiring board.
 - Refer to page 4-35 for waveforms.

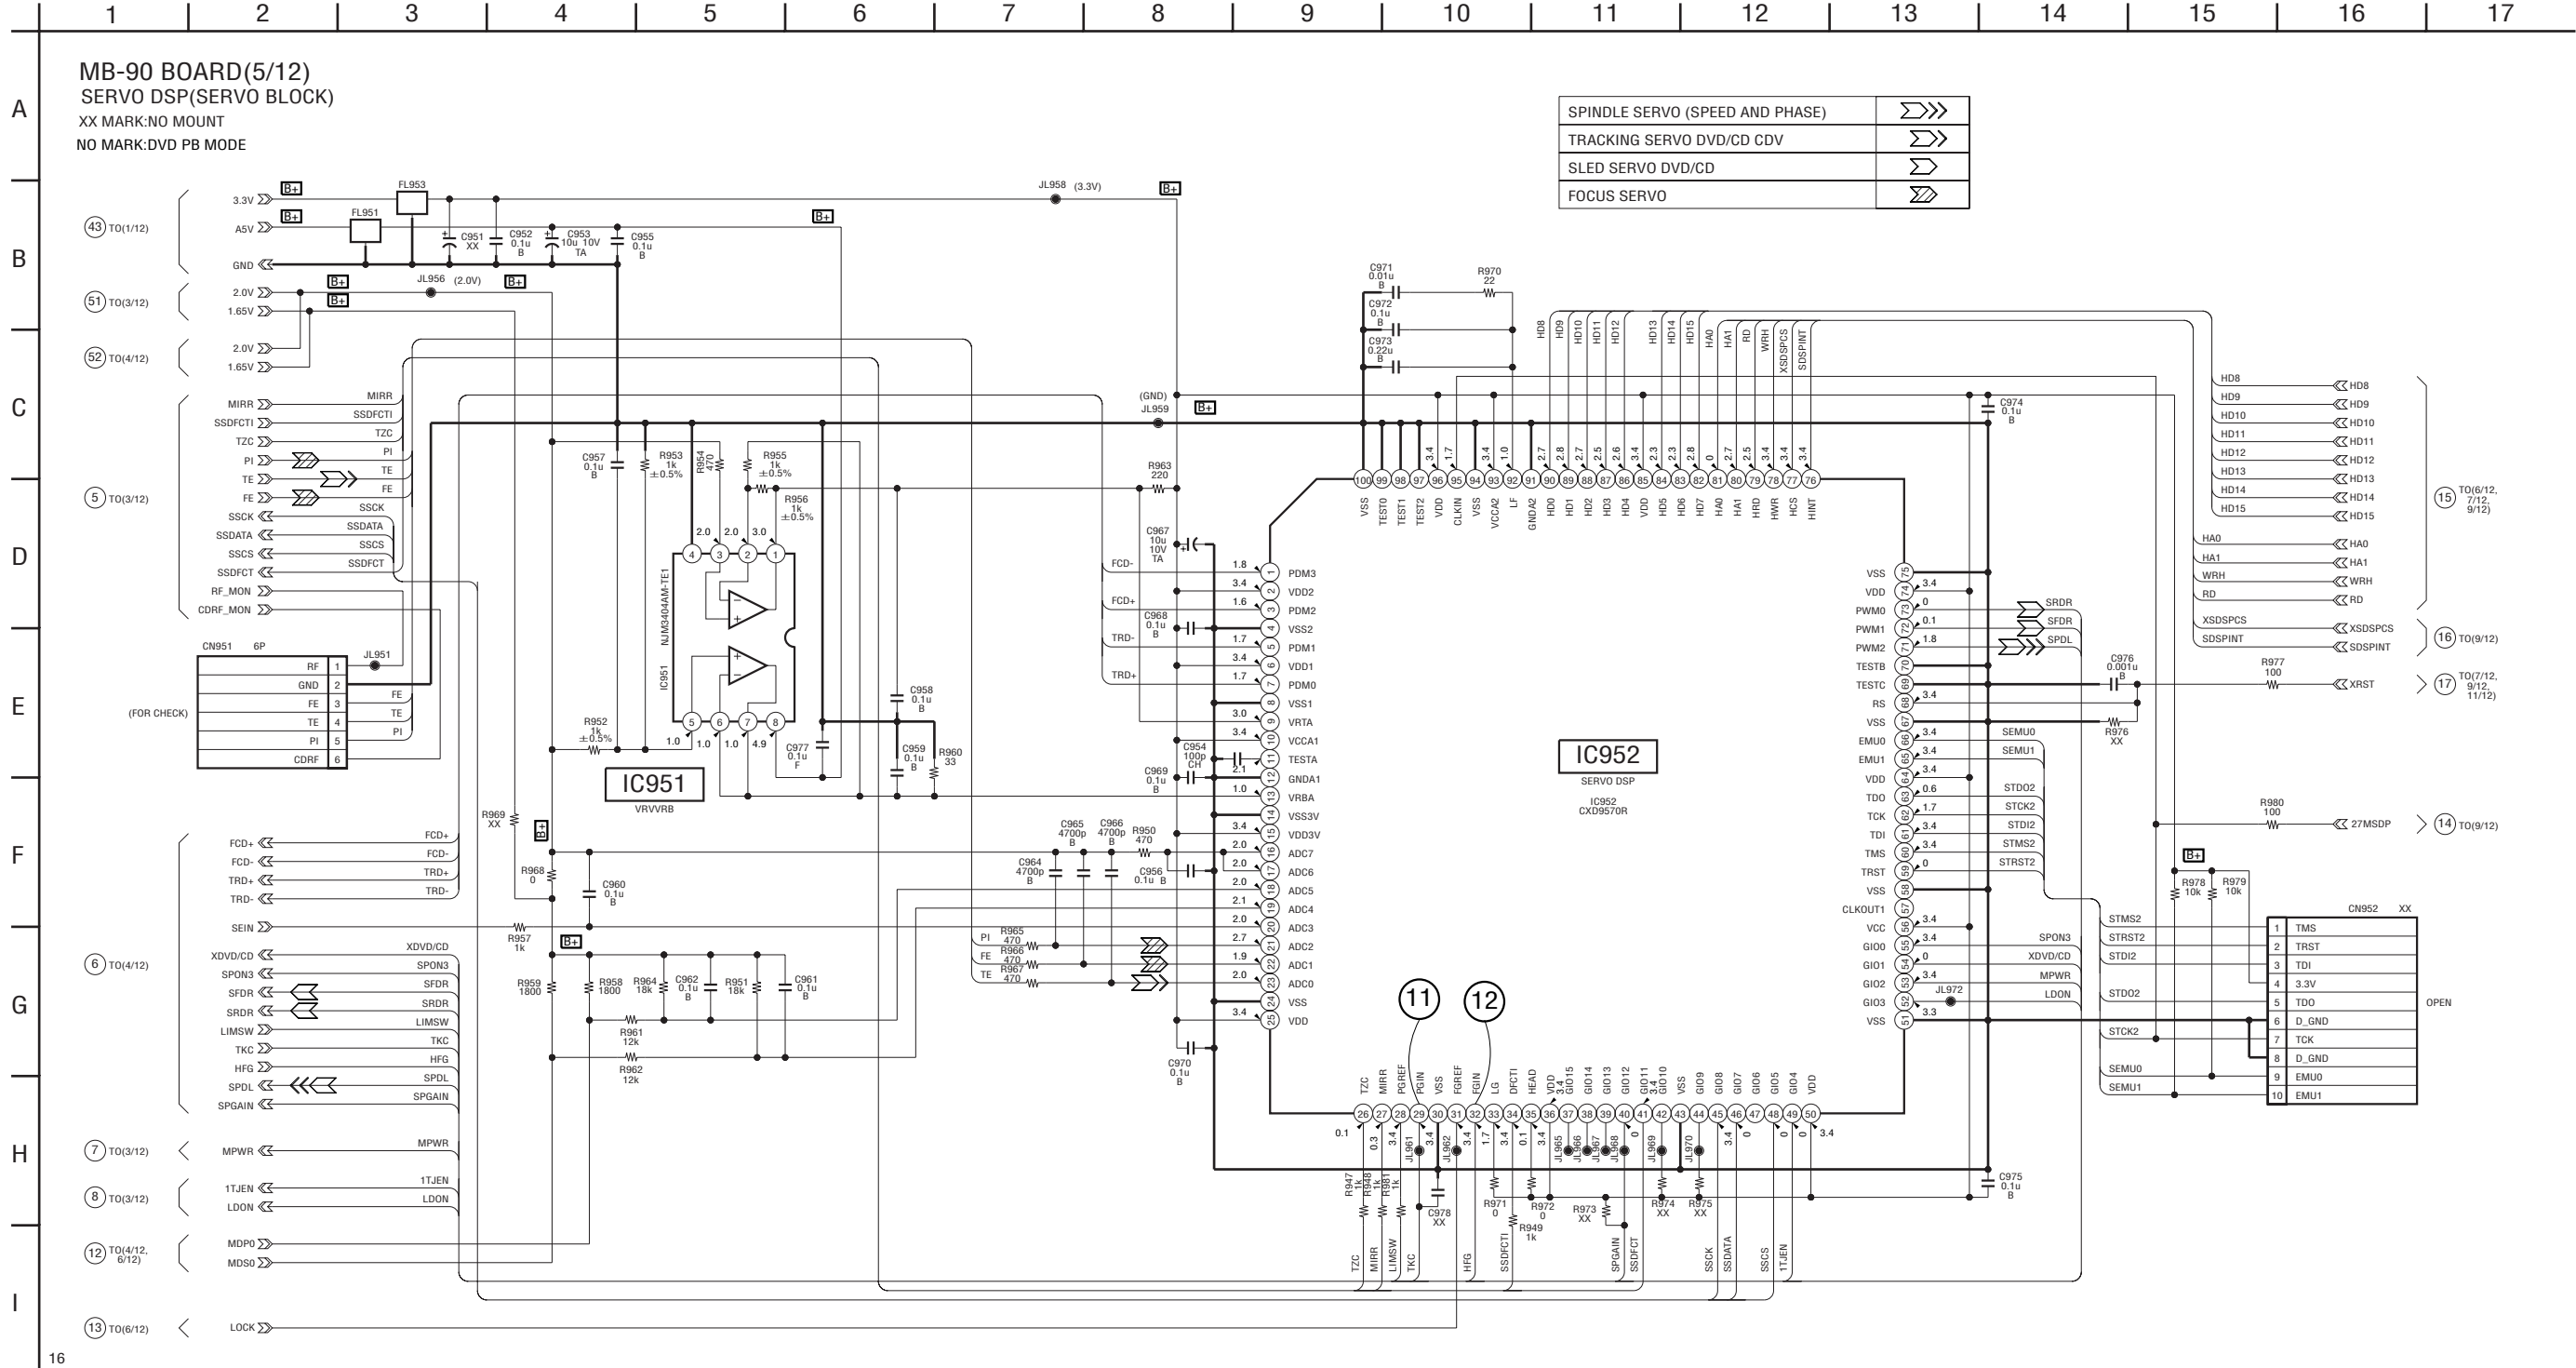


SPINDLE SERVO (SPEED AND PHASE)	
TRACKING SERVO DVD/CD CDV	
SLED SERVO DVD/CD	
FOCUS SERVO	

For Schematic Diagram
 • Refer to page 4-7 for printed wiring board.

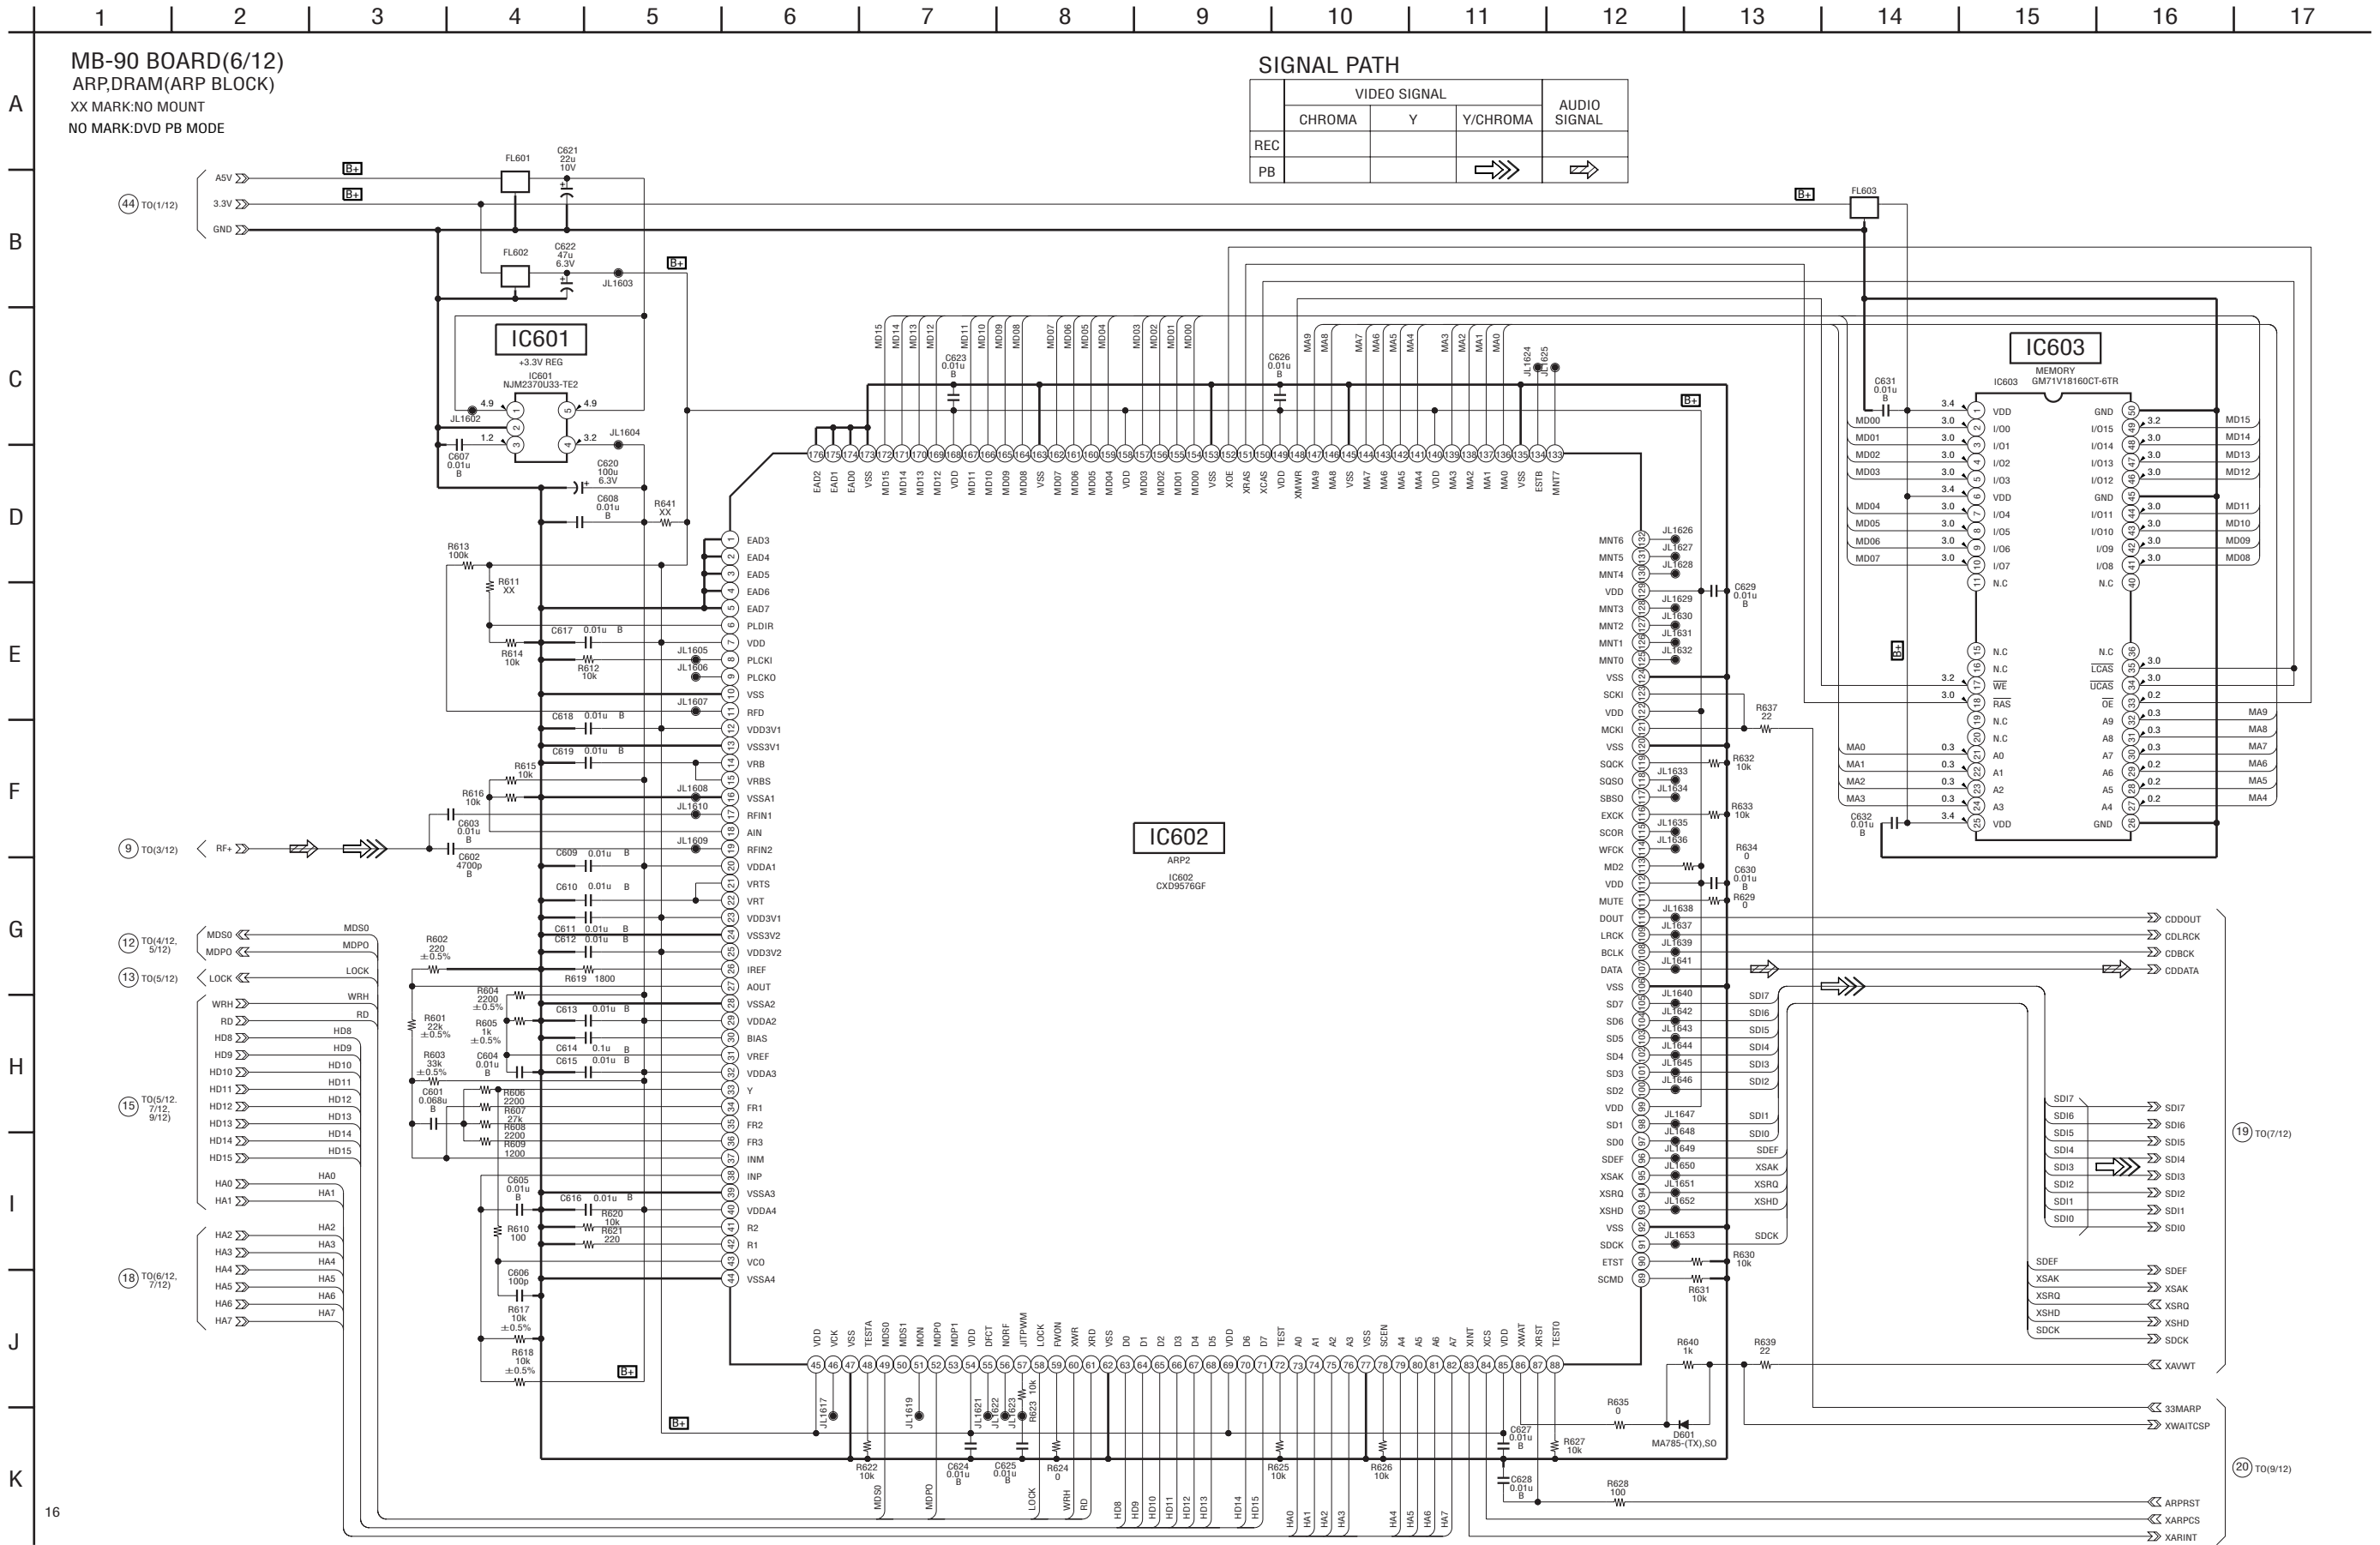

For Schematic Diagram
 • Refer to page 4-7 for printed wiring board.

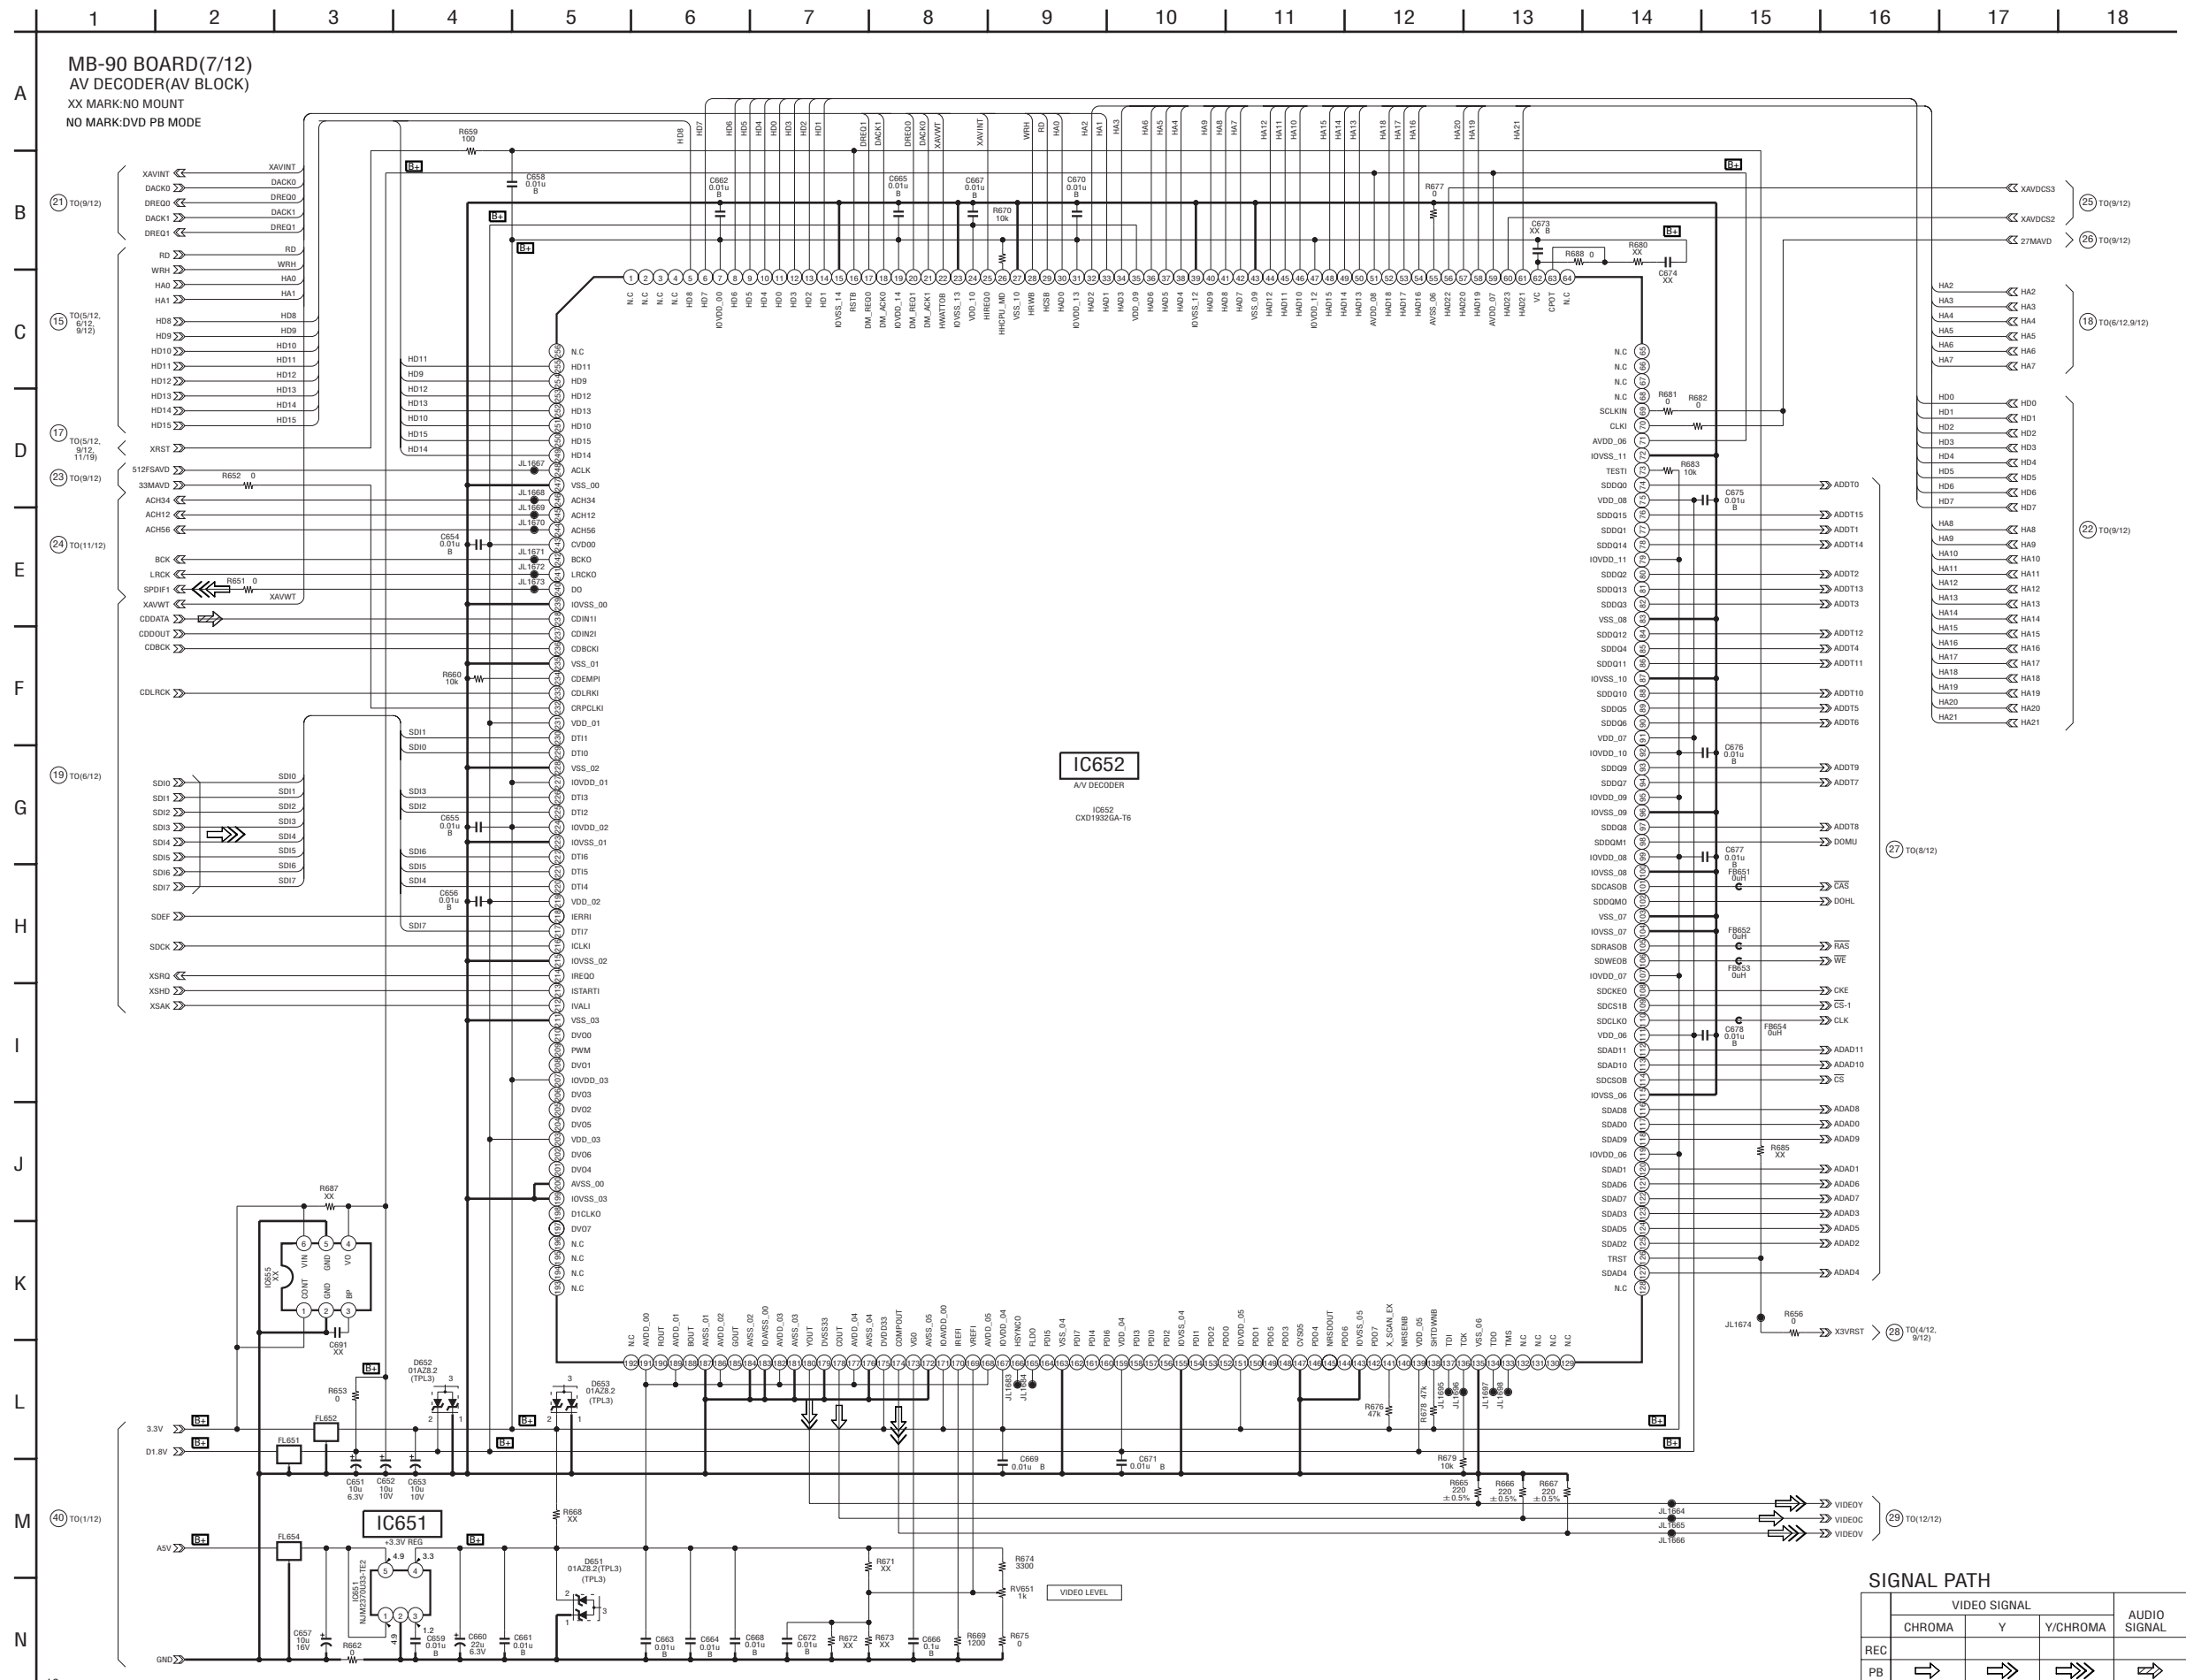


SIGNAL PATH


REC	VIDEO SIGNAL		AUDIO SIGNAL
	CHROMA	Y/CHROMA	
PB	⇒	⇒⇒	⇒⇒⇒

For Schematic Diagram


• Refer to page 4-7 for printed wiring board.

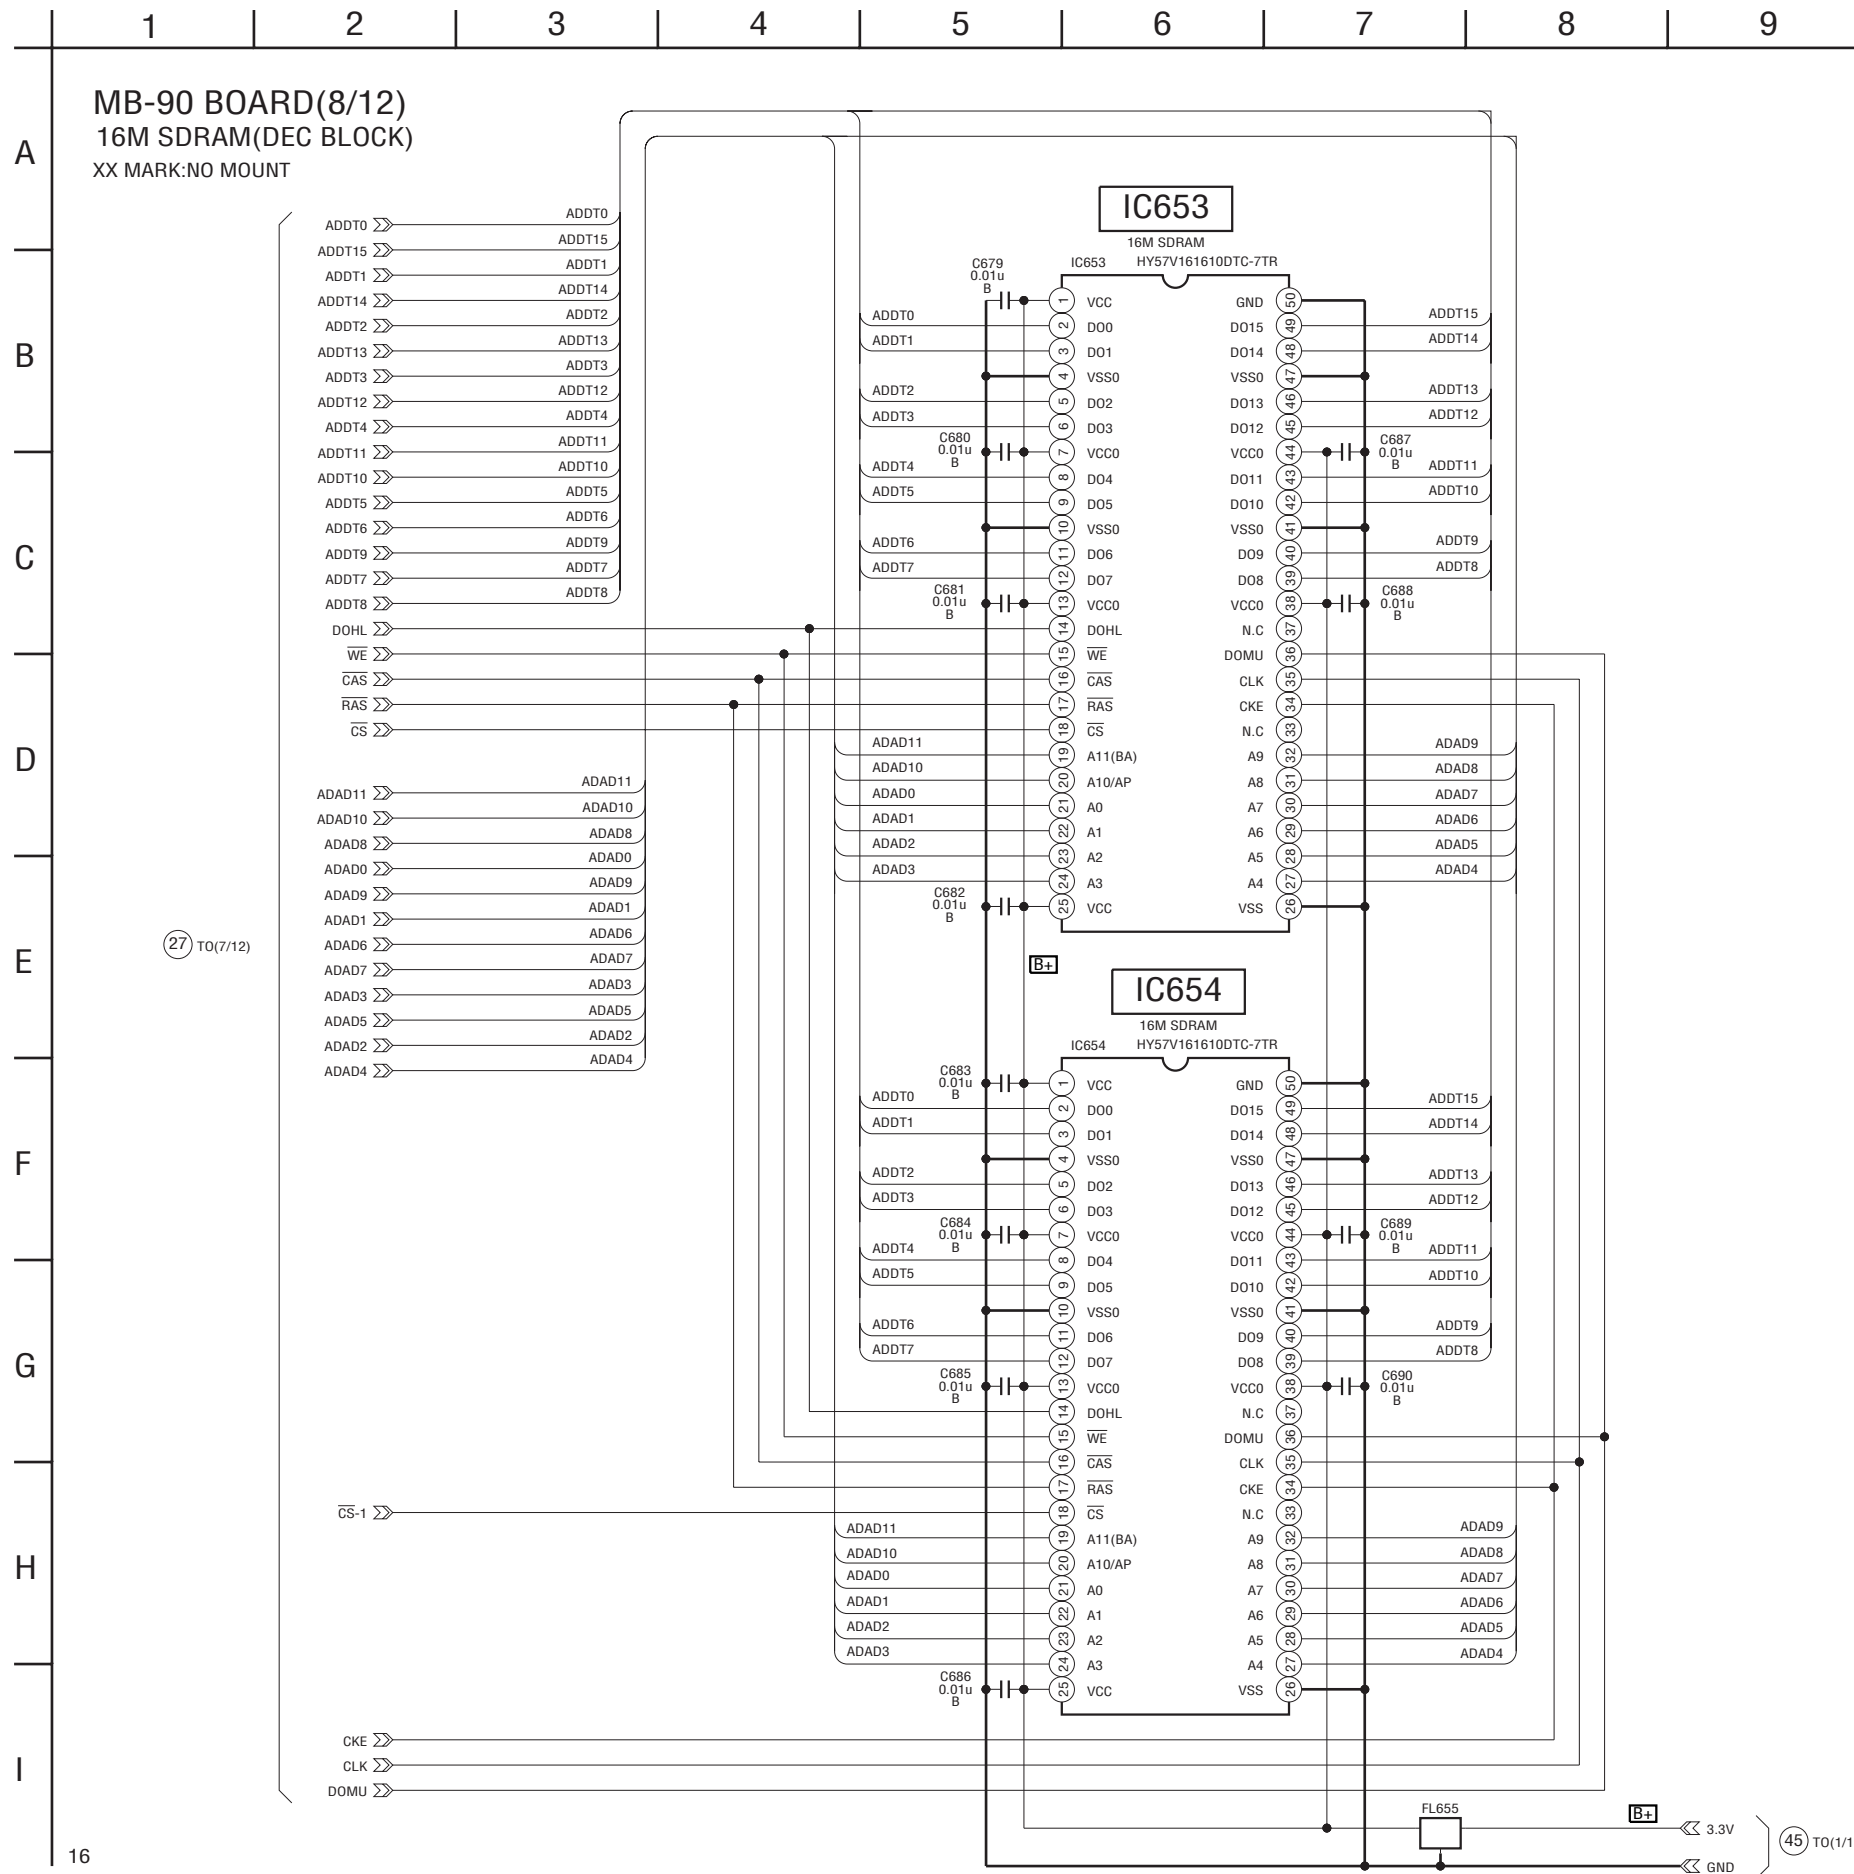


For Schematic Diagram
Refer to page 4-7 for printed wiring board.
Refer to page 4-35 for waveforms.

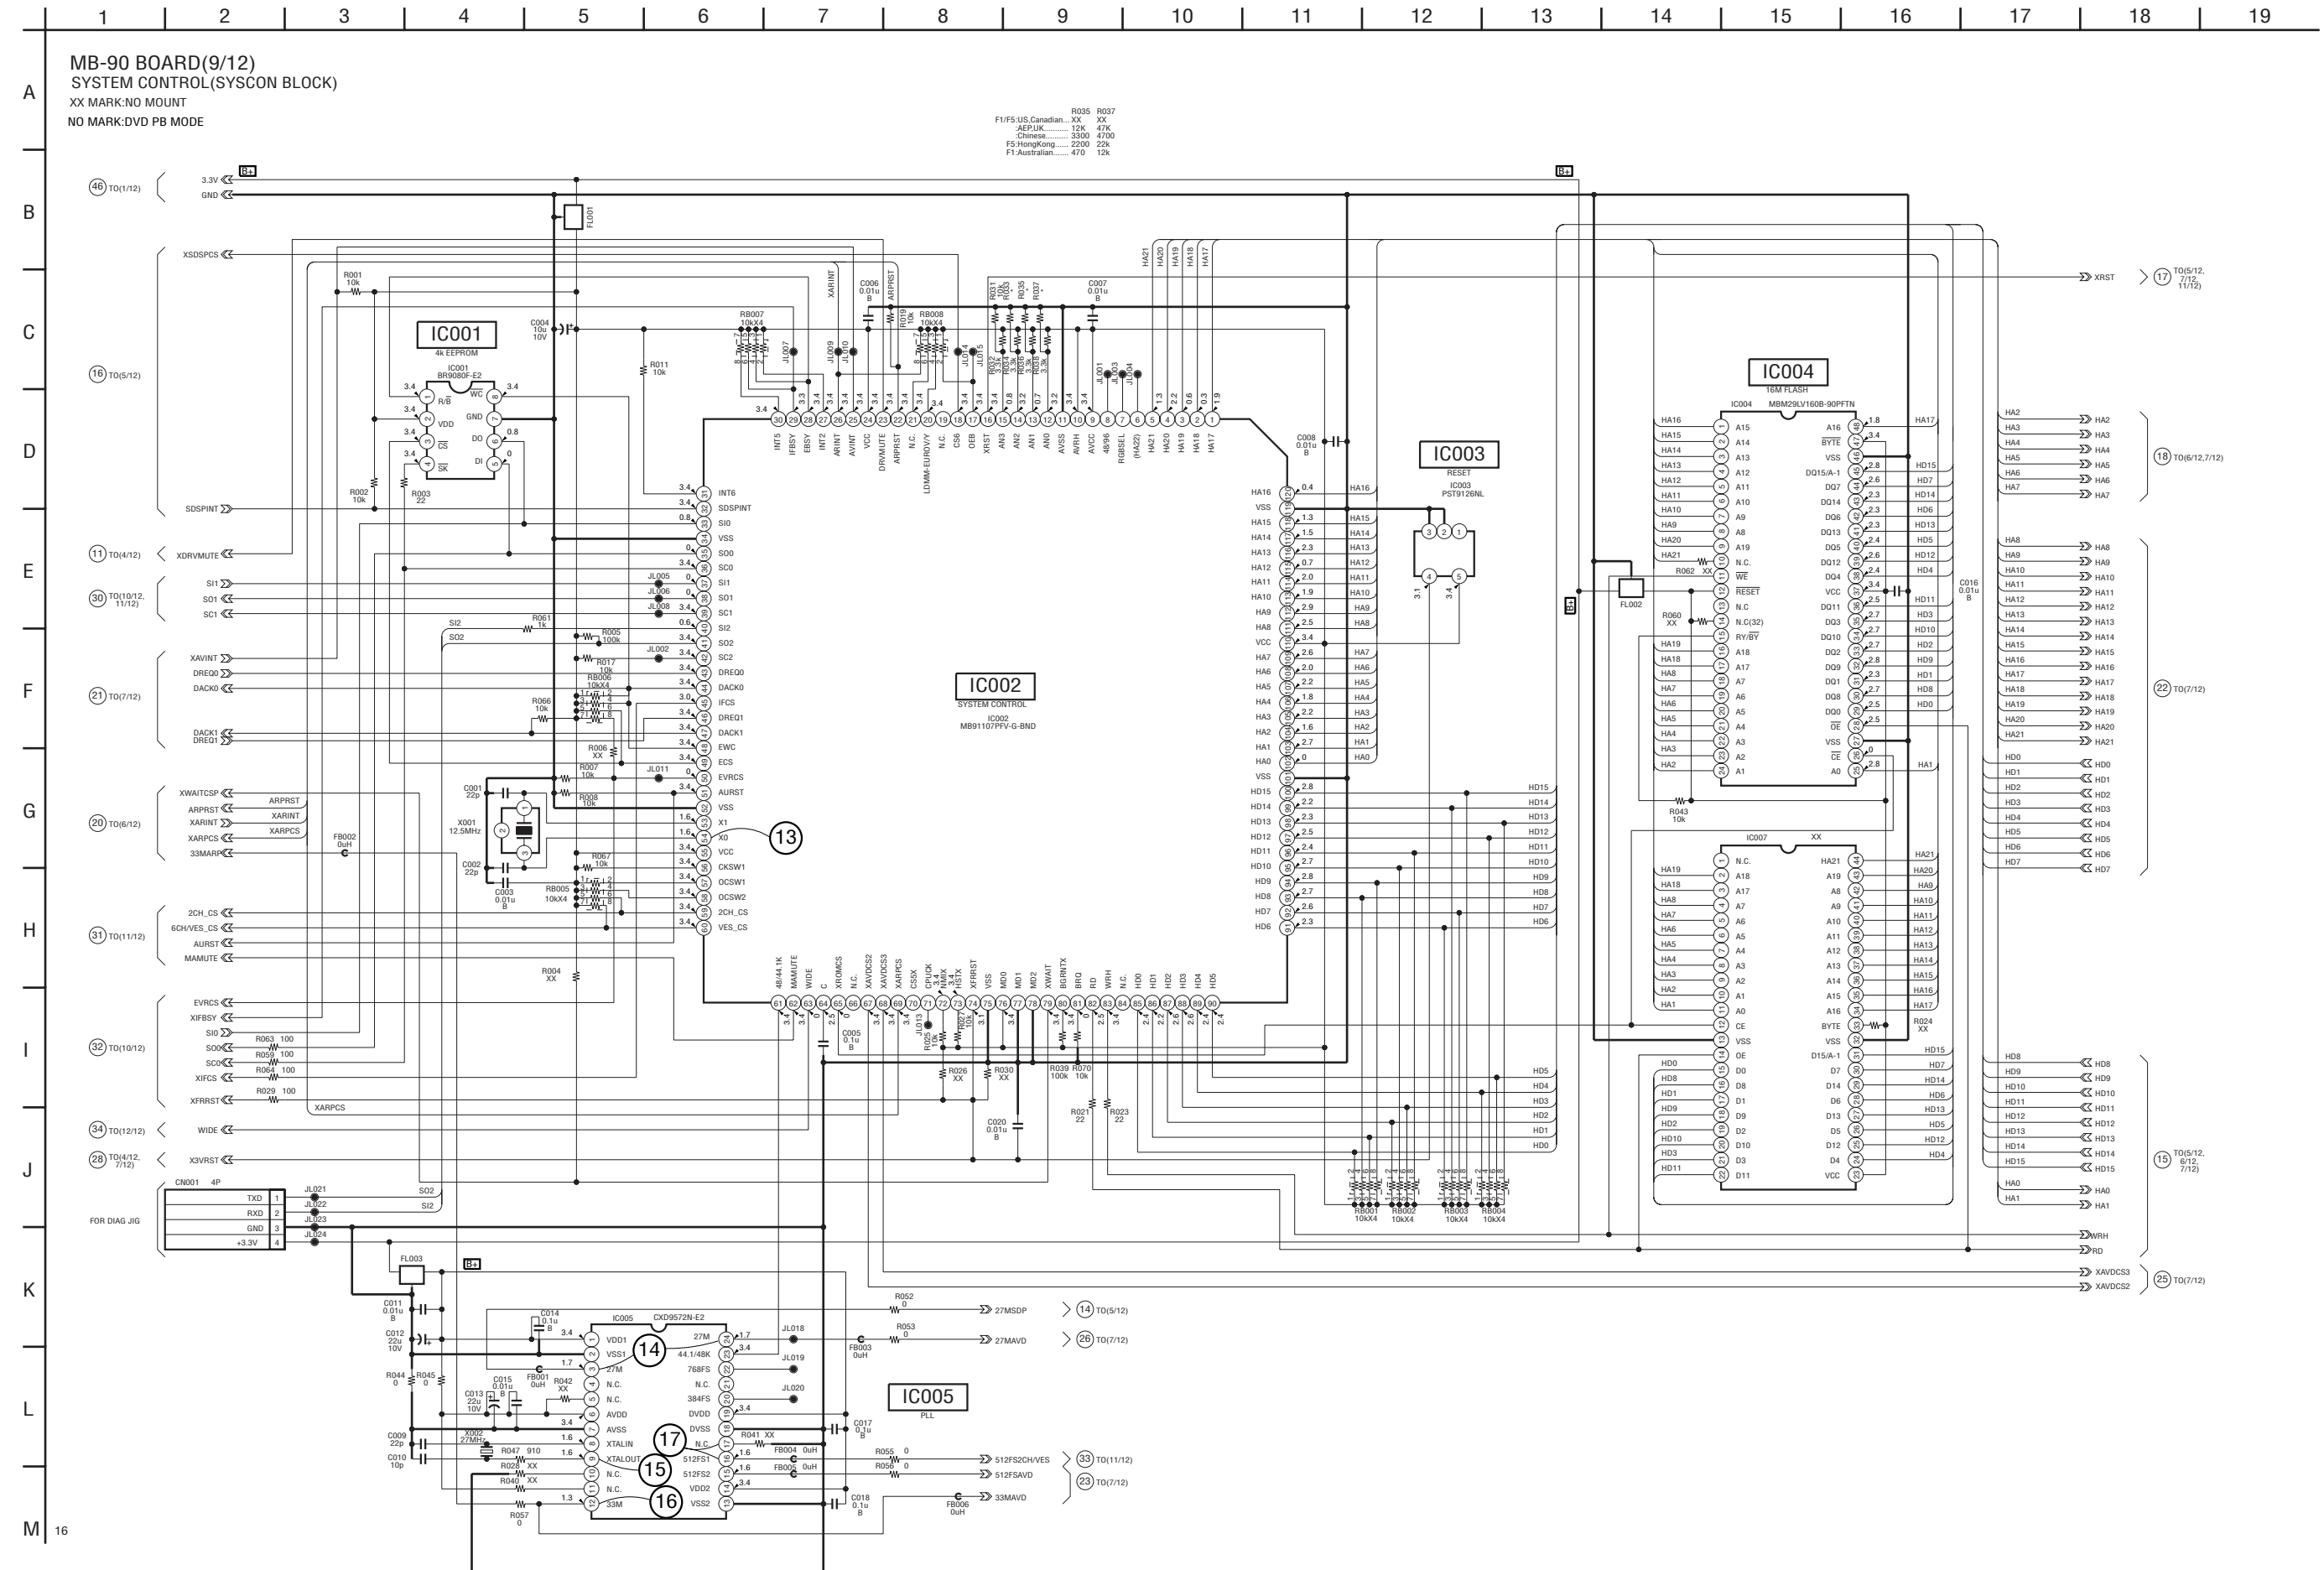

For Schematic Diagram
 • Refer to page 4-7 for printed wiring board.
 • Refer to page 4-35 for waveforms.

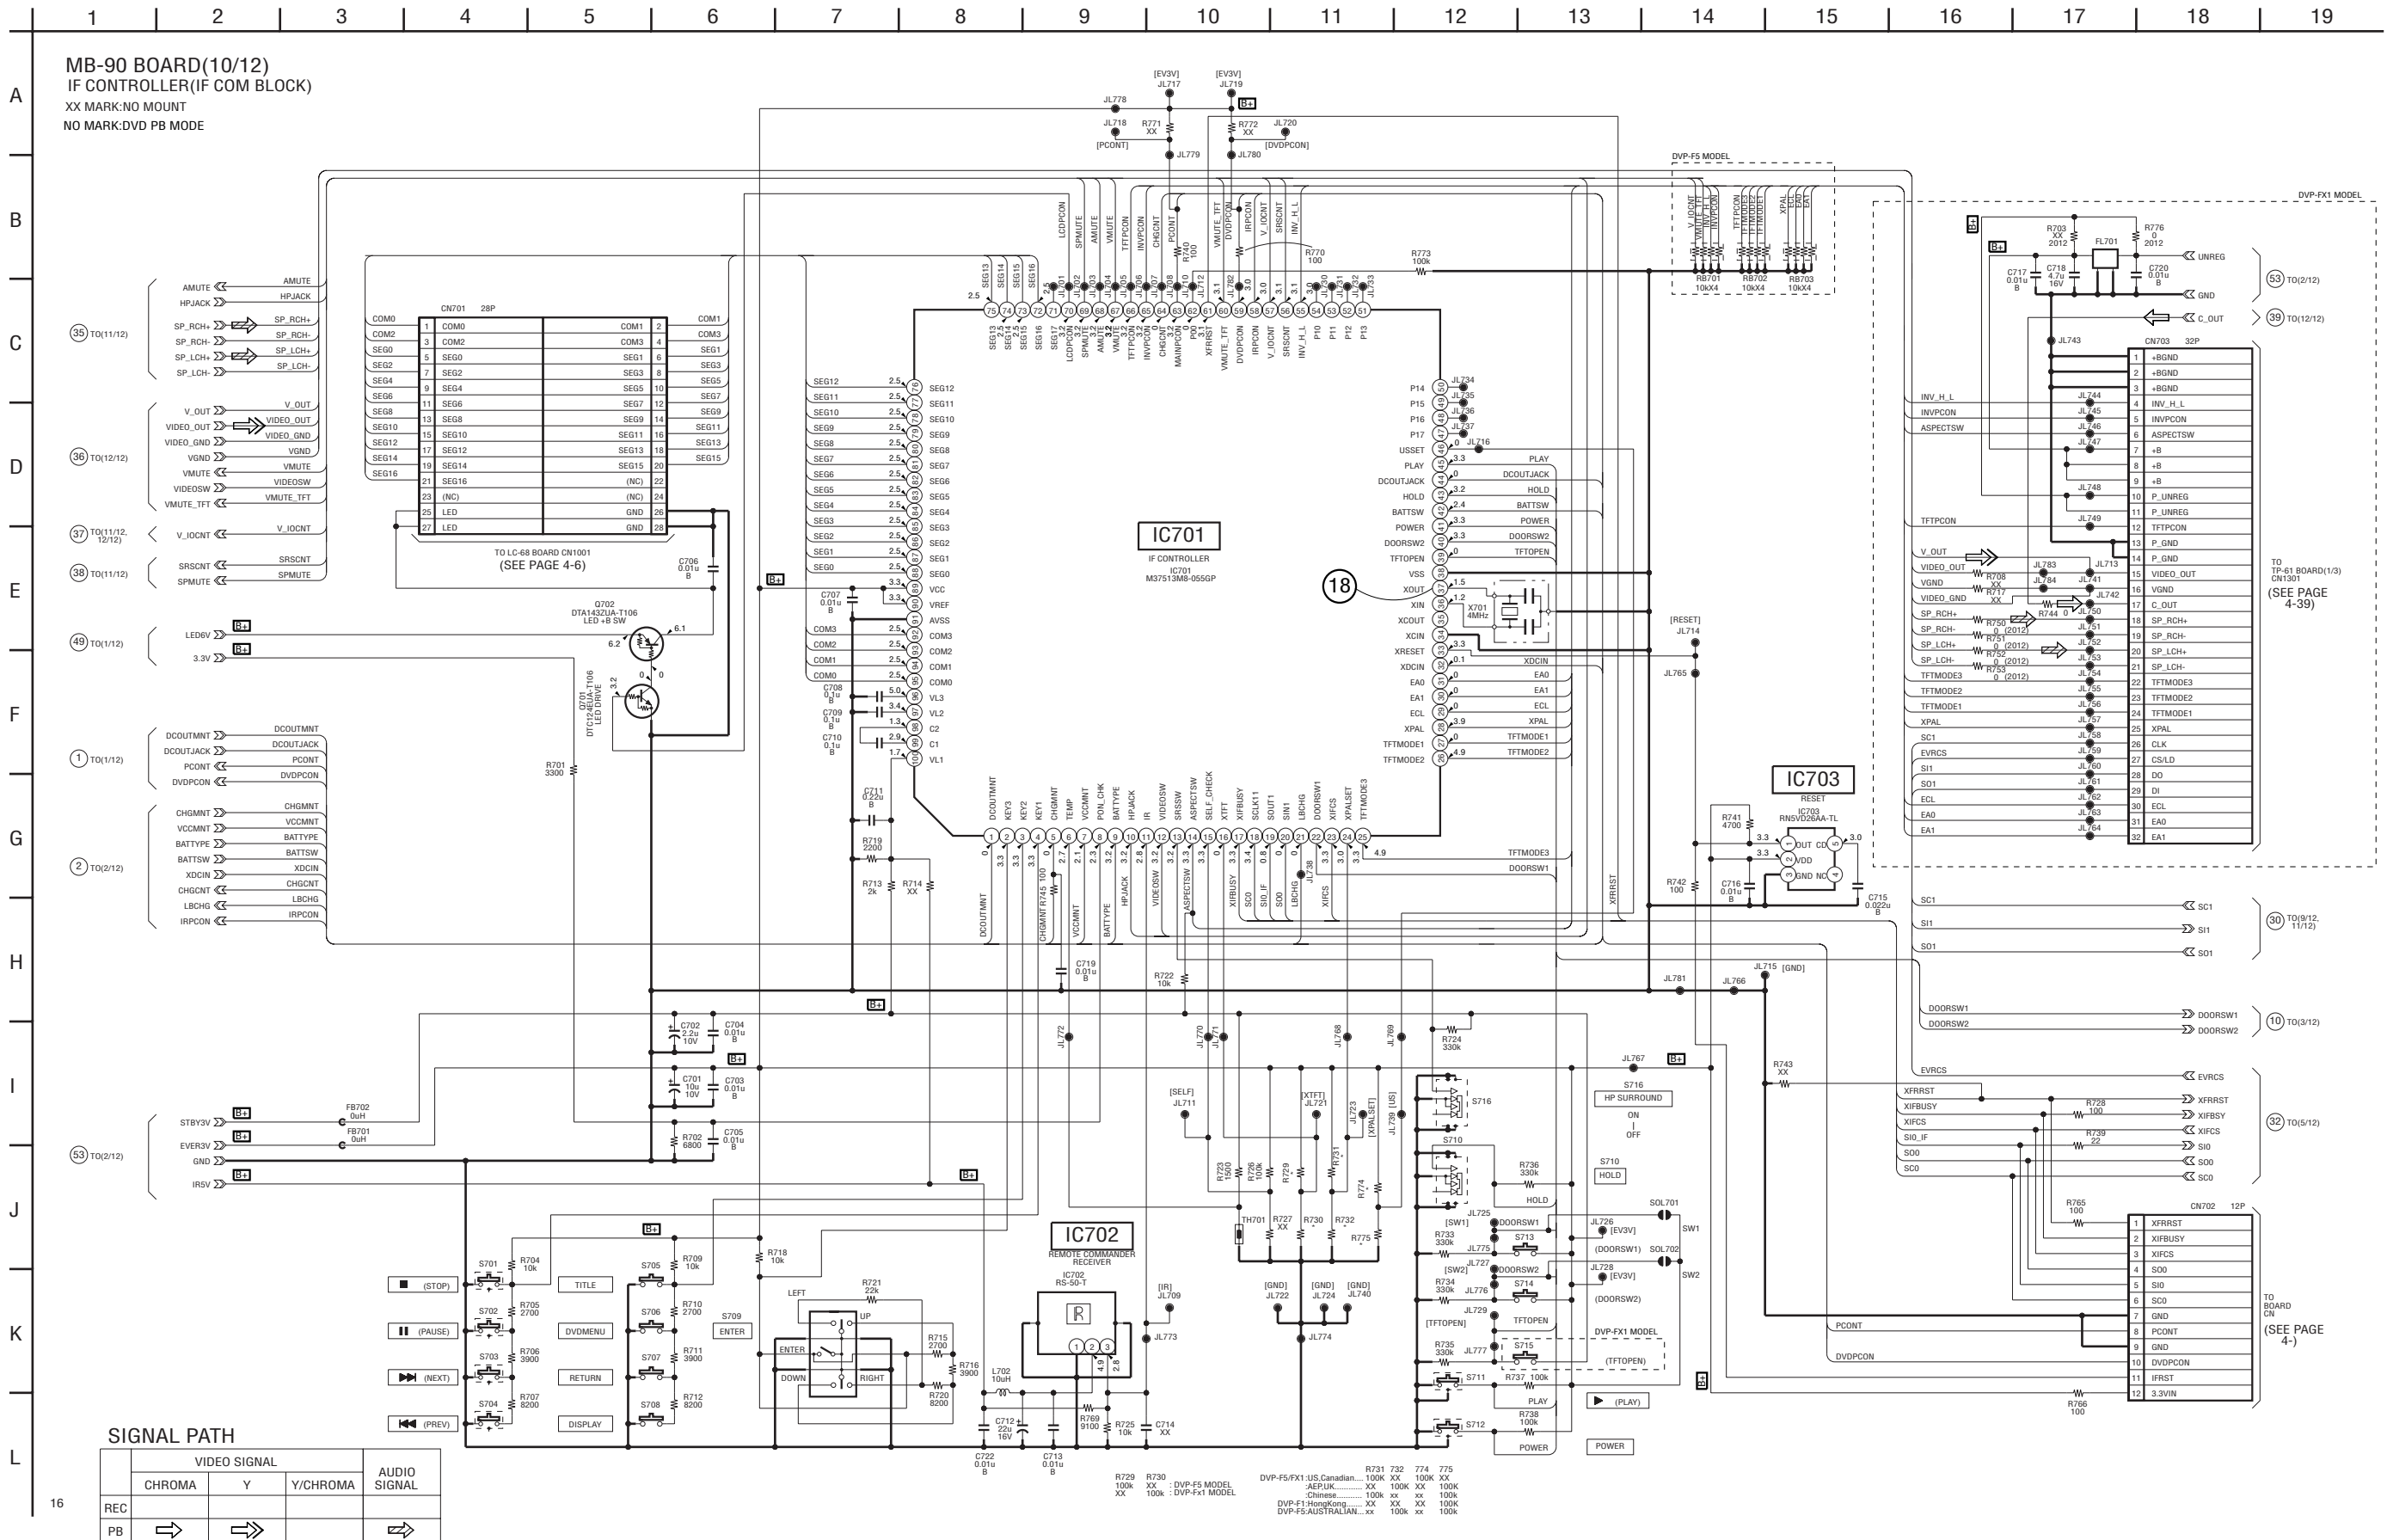

For Schematic Diagram
 • Refer to page 4-7 for printed wiring board.
 • Refer to page 4-35 for waveforms.

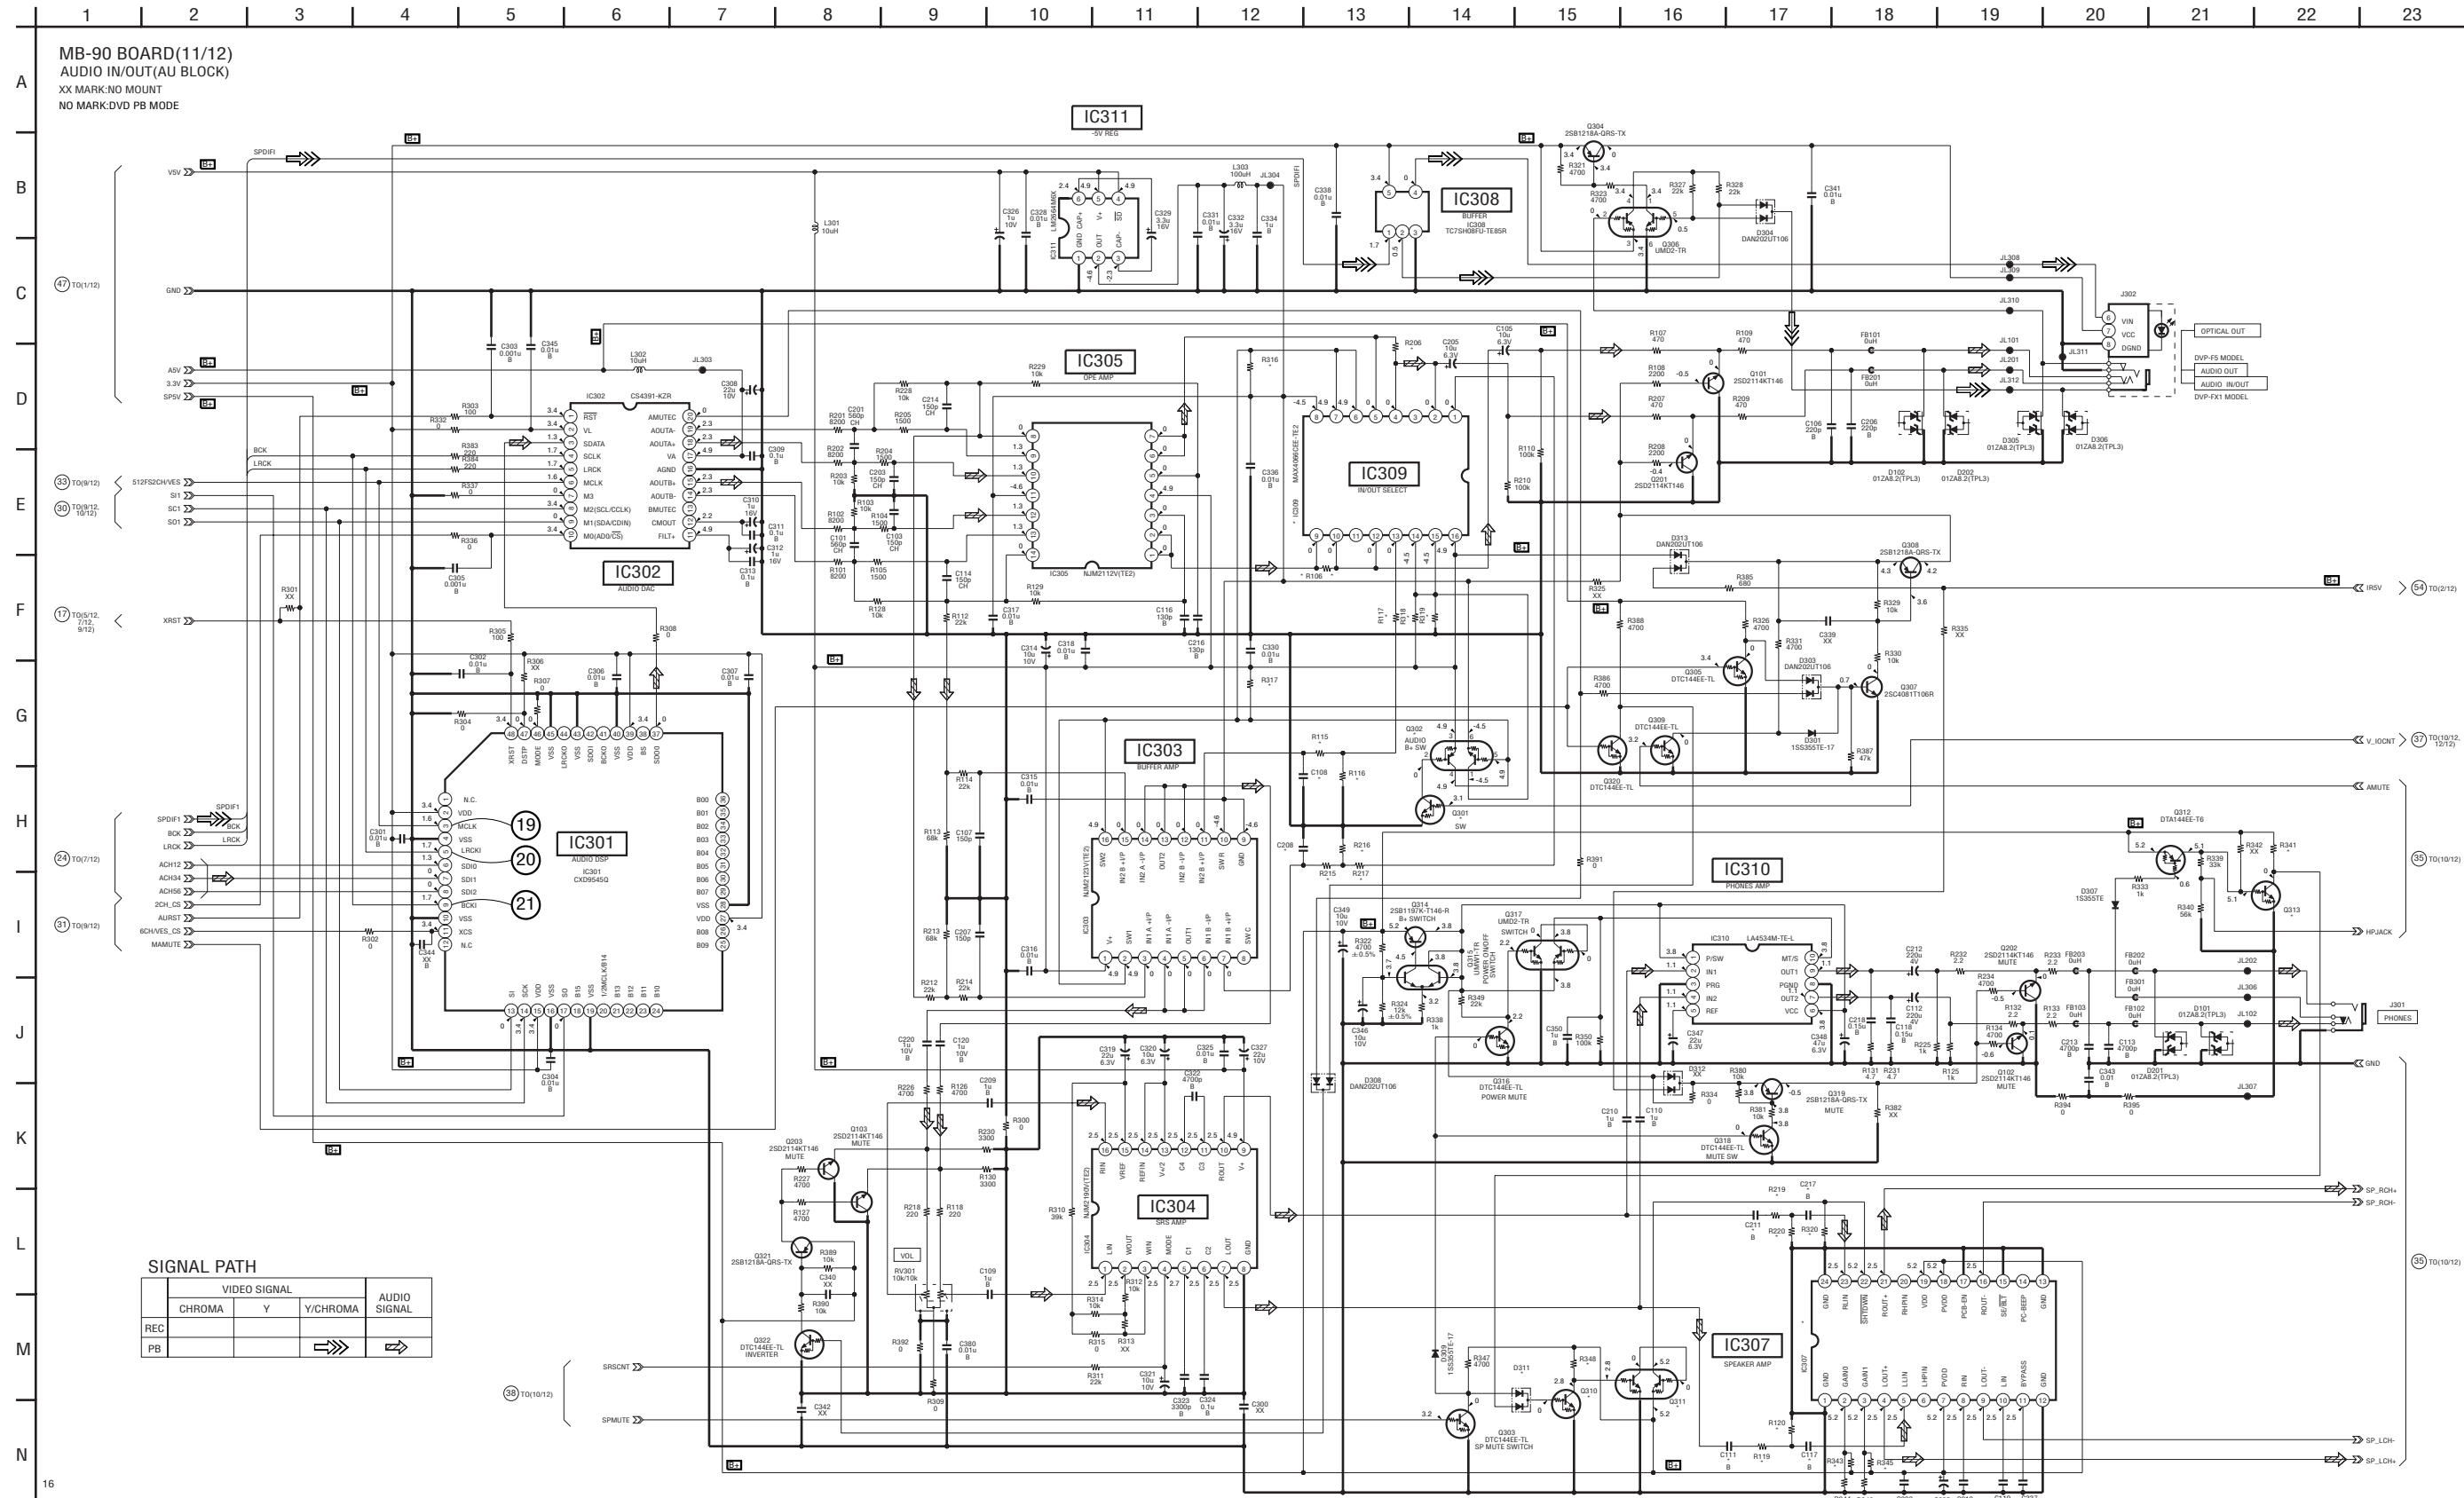


SIGNAL PATH

	VIDEO SIGNAL		AUDIO SIGNAL
	CHROMA	Y/C/CHROMA	
REC			
PB			


For Schematic Diagram
 • Refer to page 4-7 for printed wiring board.
 • Refer to page 4-35 for waveforms.

*MARKED:MOUNT TABLE

REF.NO.	DVP-FX1	DVP-F5
C108	150p 50V CH	XX
C111	1u 10V B	XX
C117	0.47u 16V B	XX
C119	0.47u 16V B	XX
C208	150p 50V CH	XX
C211	1u 10V B	XX
C217	0.47u 16V B	XX
C219	0.47u 16V B	XX
C333	0.01u 25V B	XX
C335	100u 10V	XX
C337	0.47u 16V B	XX
D311	DAN202UT10	XX
IC307	TPA0122PWPR	XX
IC309	MAX4066CEE	XX
Q301	DTC144EE-T	XX
Q302	UMD2-TR	XX
Q310	DTC144EE-T	XX
Q311	UMD2-TR	XX
Q313	DTC144EE-T	XX
R106	XX	0
R115	22k	0
R116	68k	0
R117	22k	XX
R119	0	XX
R120	100k	XX
R206	XX	0
R215	22k	0
R216	68k	0
R217	22k	XX
R219	0	XX
R220	100k	XX
R316	22k	XX
R317	XX	0
R318	22k	XX
R319	XX	0
R320	100k	XX
R341	4700	XX
R343	0	XX
R345	0	XX
R348	22k	XX

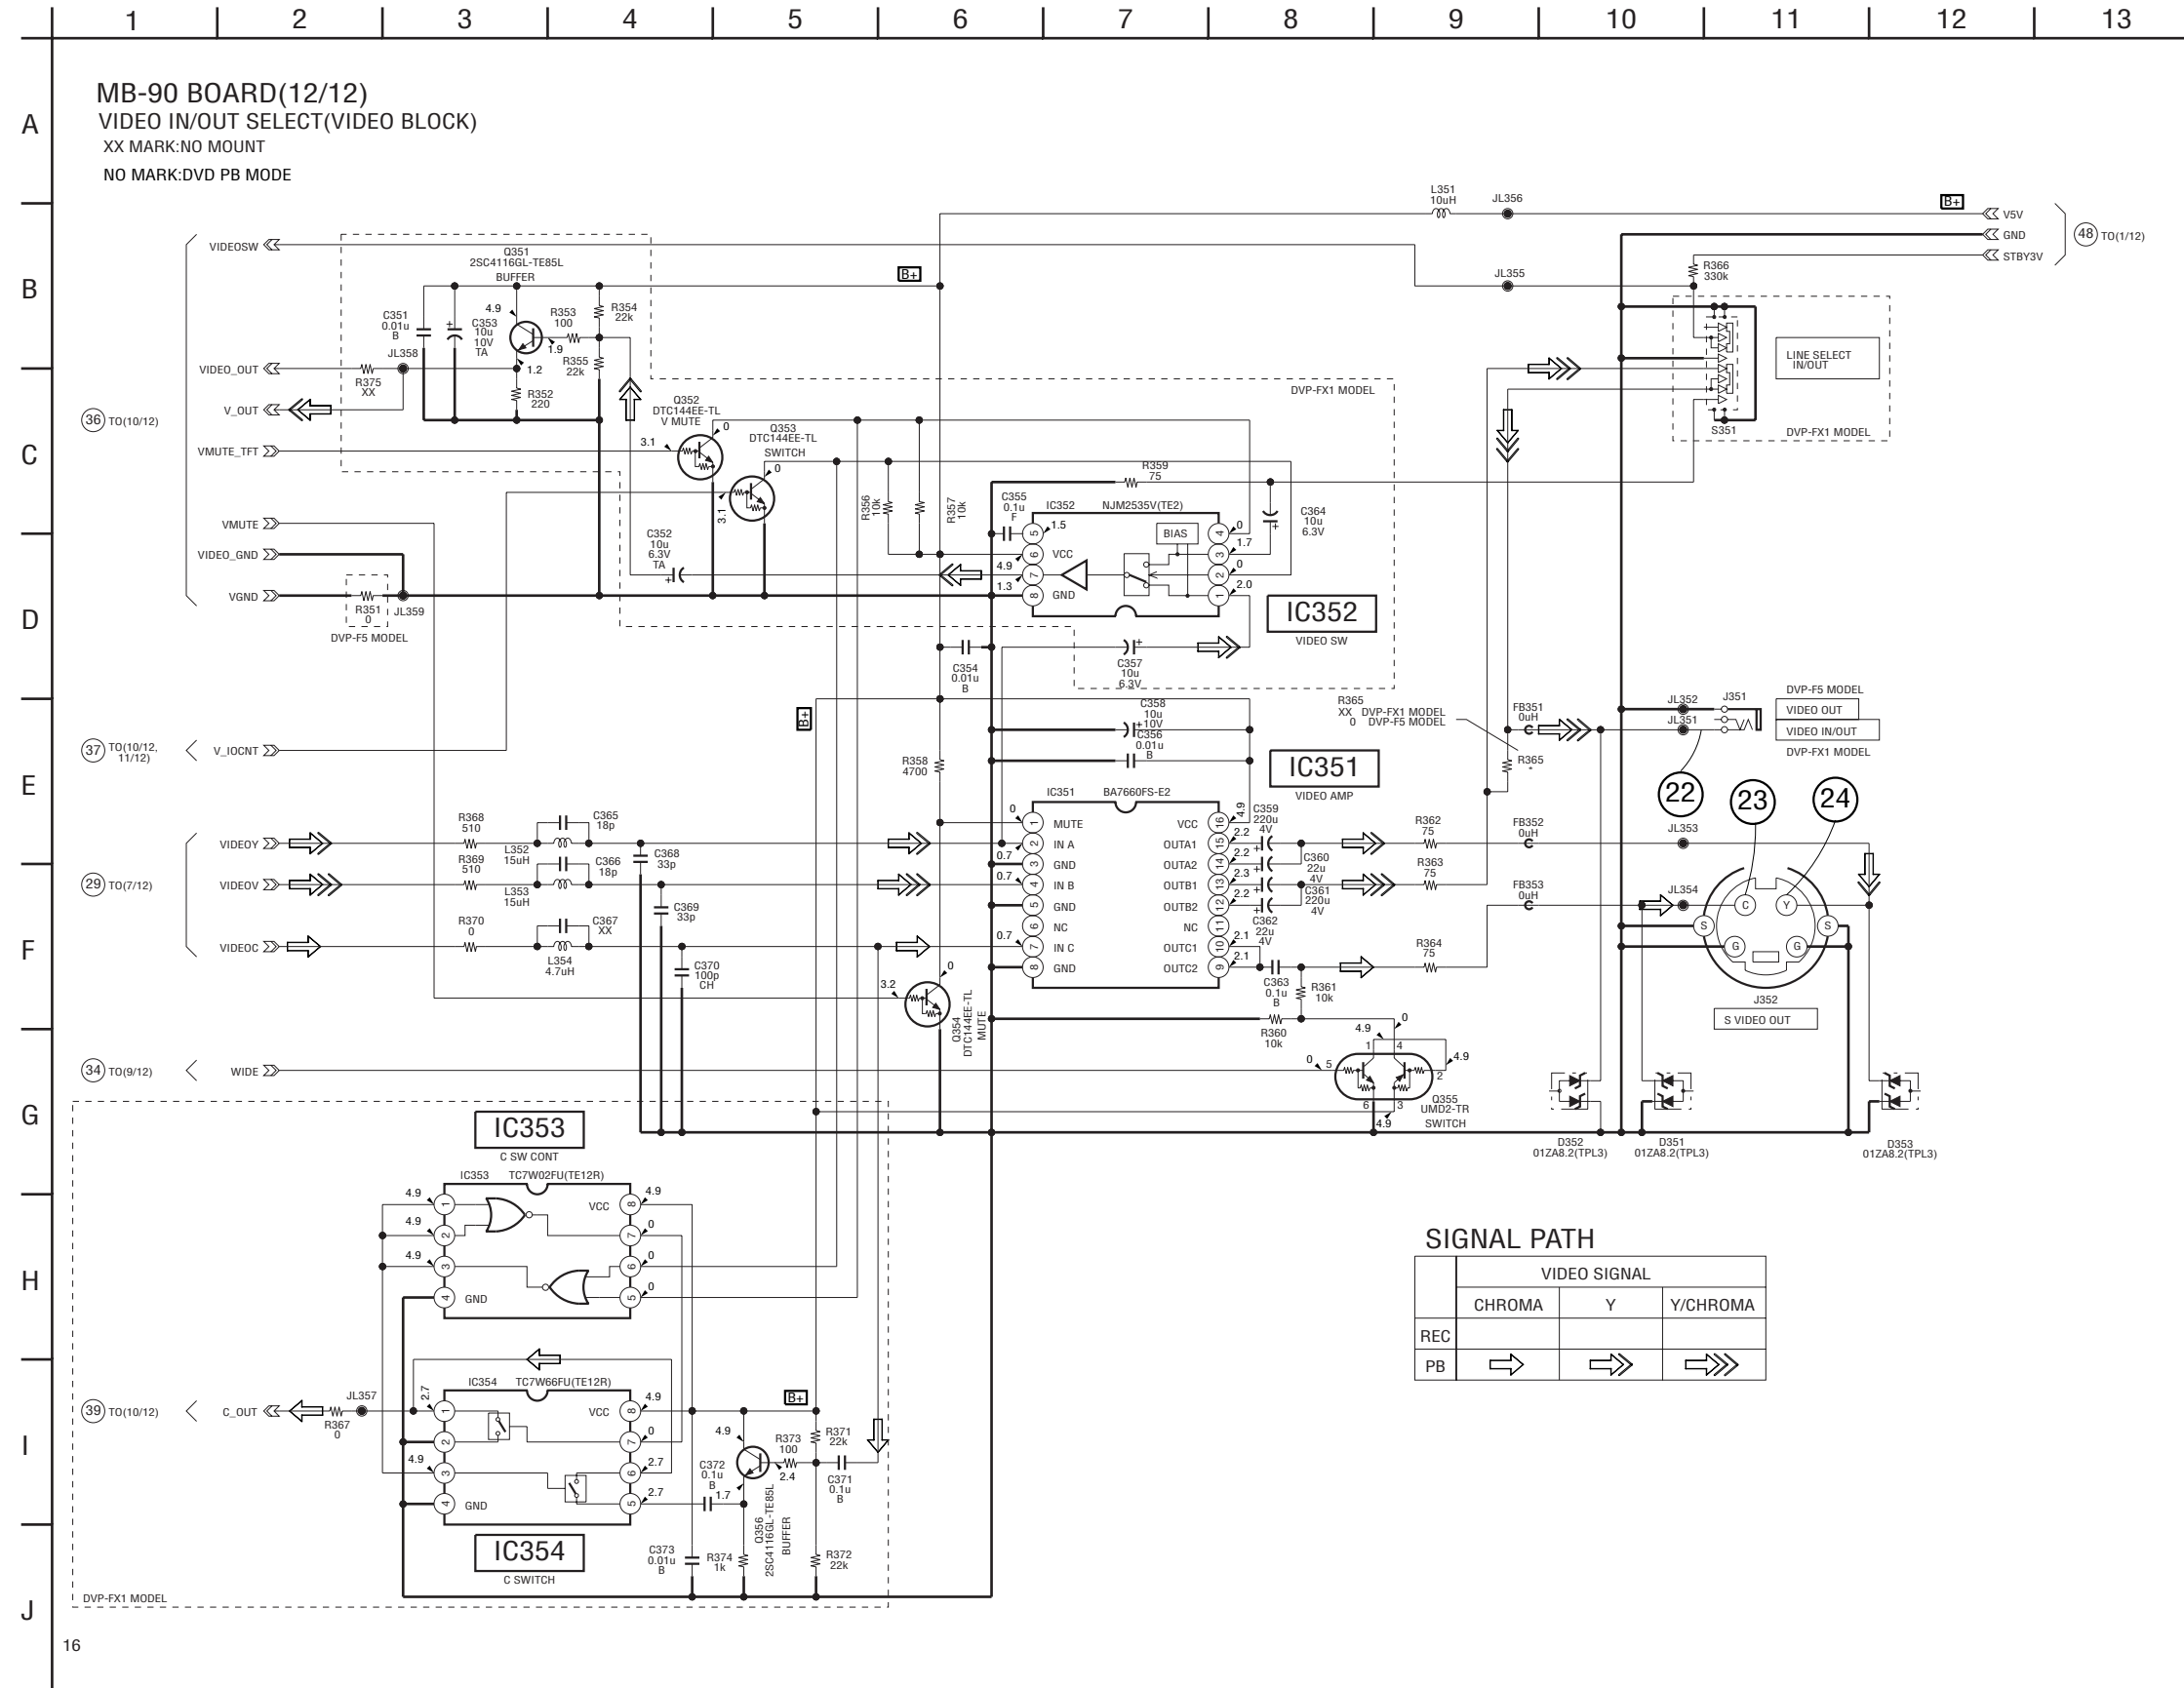


MB-90 BOARD

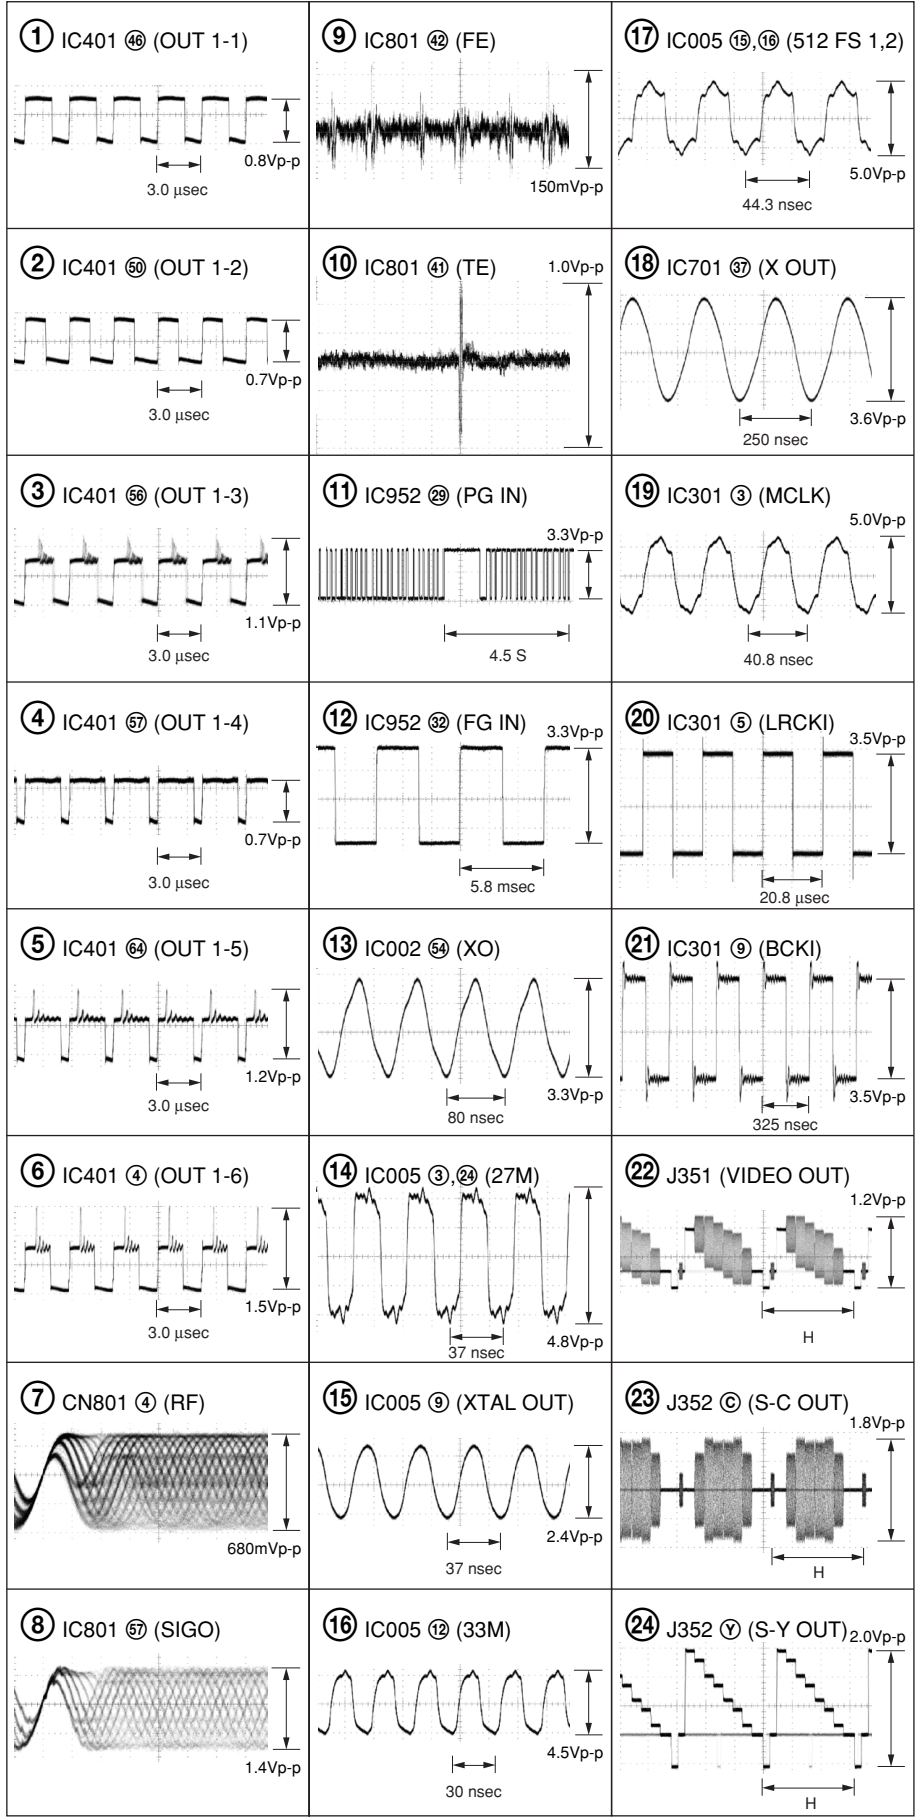


MEMO

For Schematic Diagram
 • Refer to page 4-45 for printed wiring board.
 • Refer to page 4-47 for waveforms.

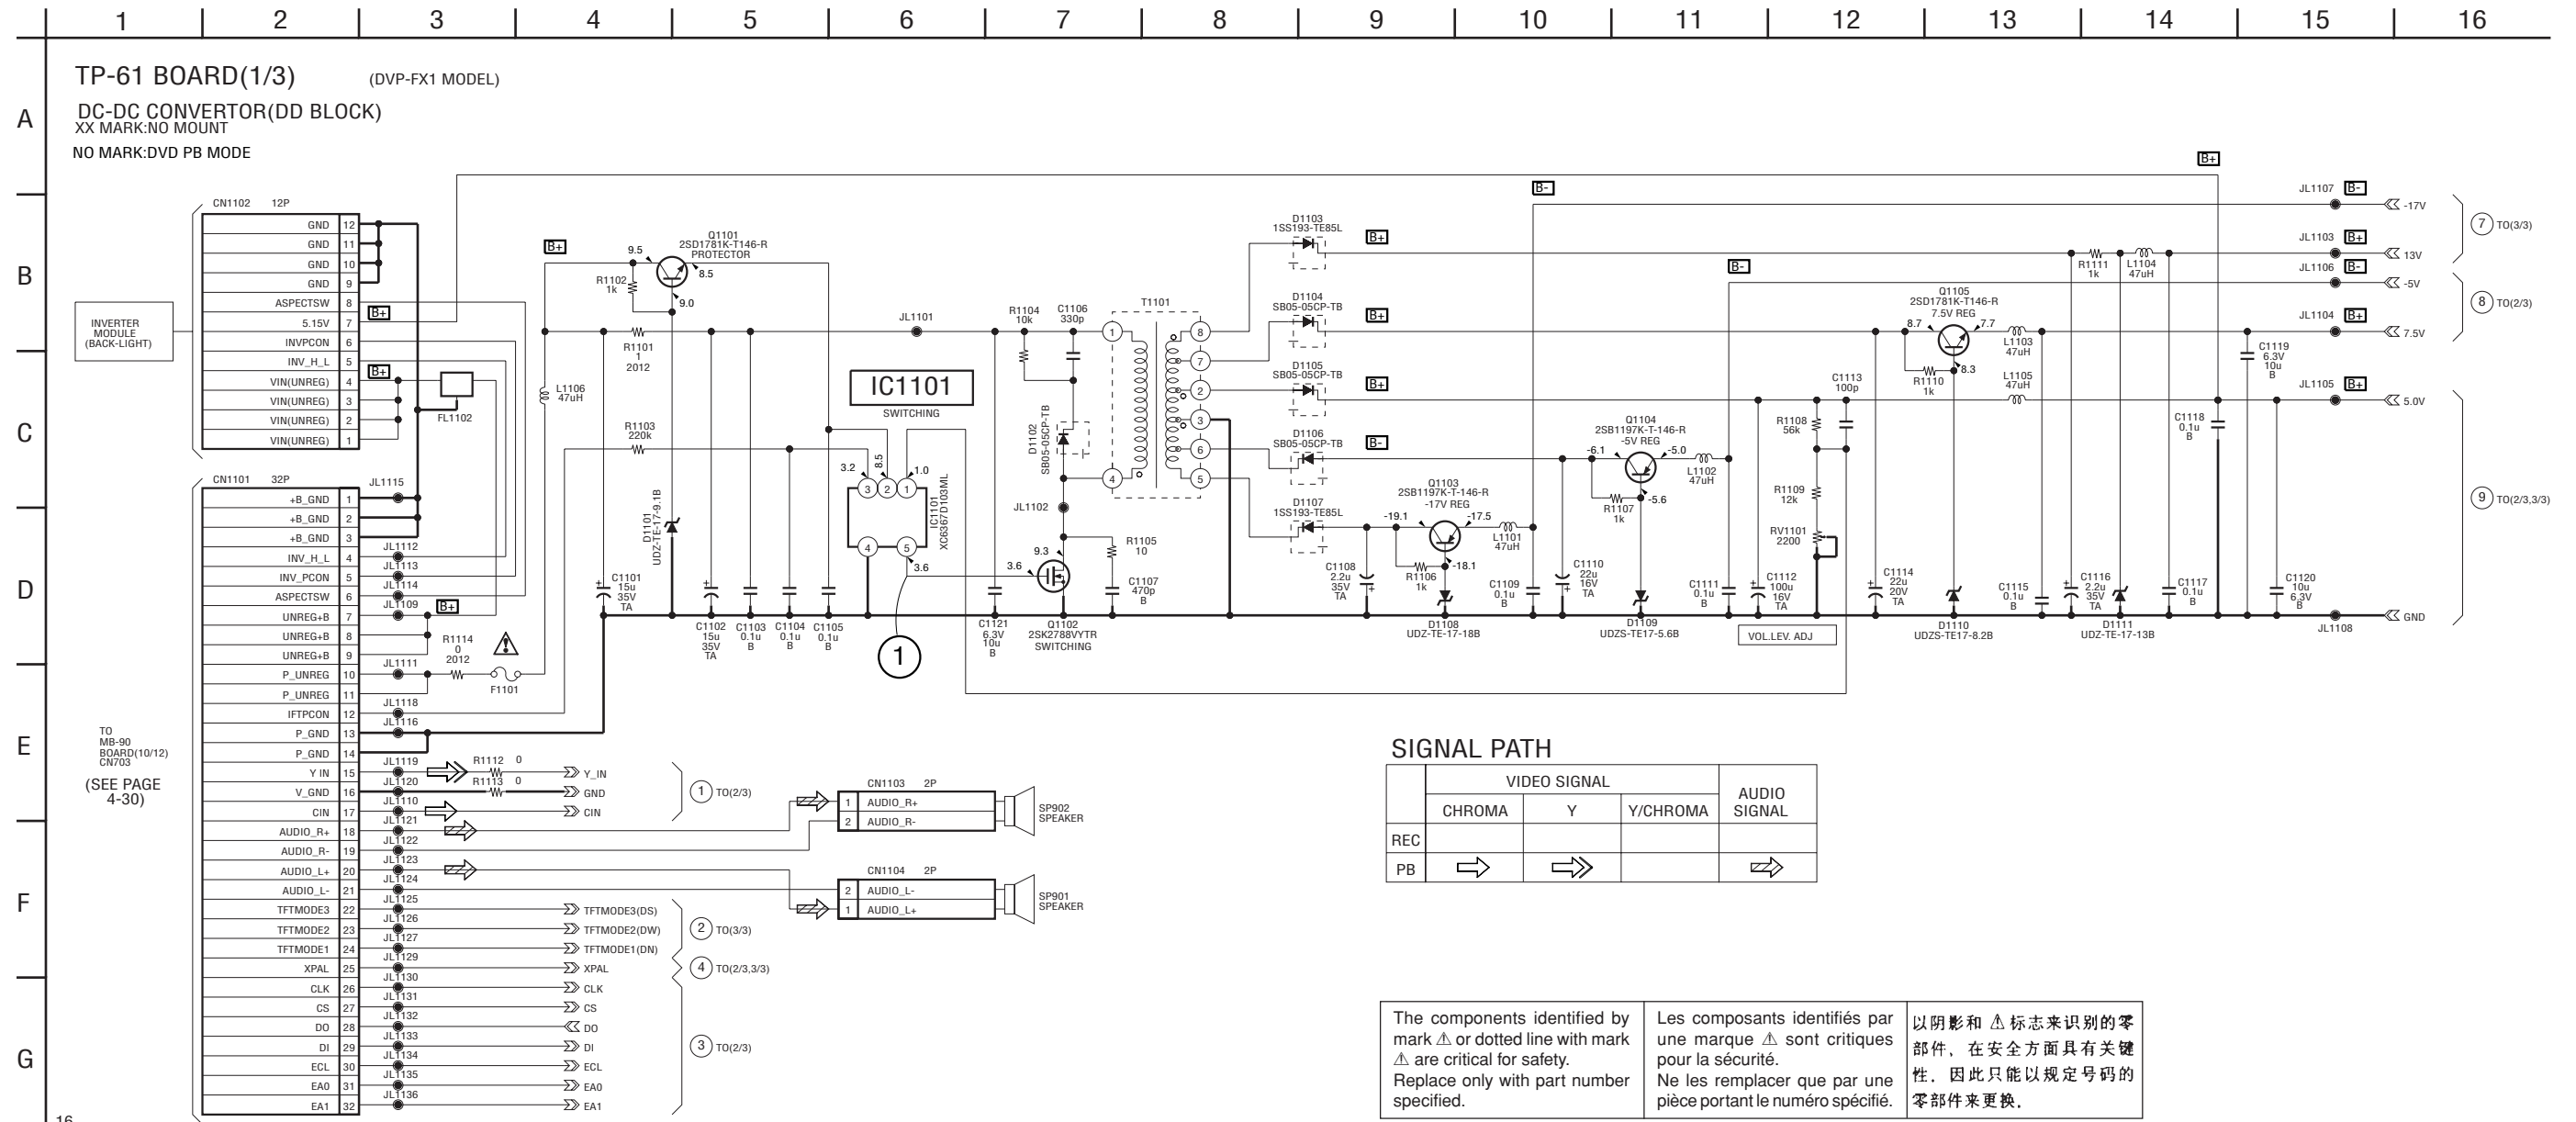


For Schematic Diagram

- Refer to page 4-45 for printed wiring board.
- Refer to page 4-47 for waveforms.

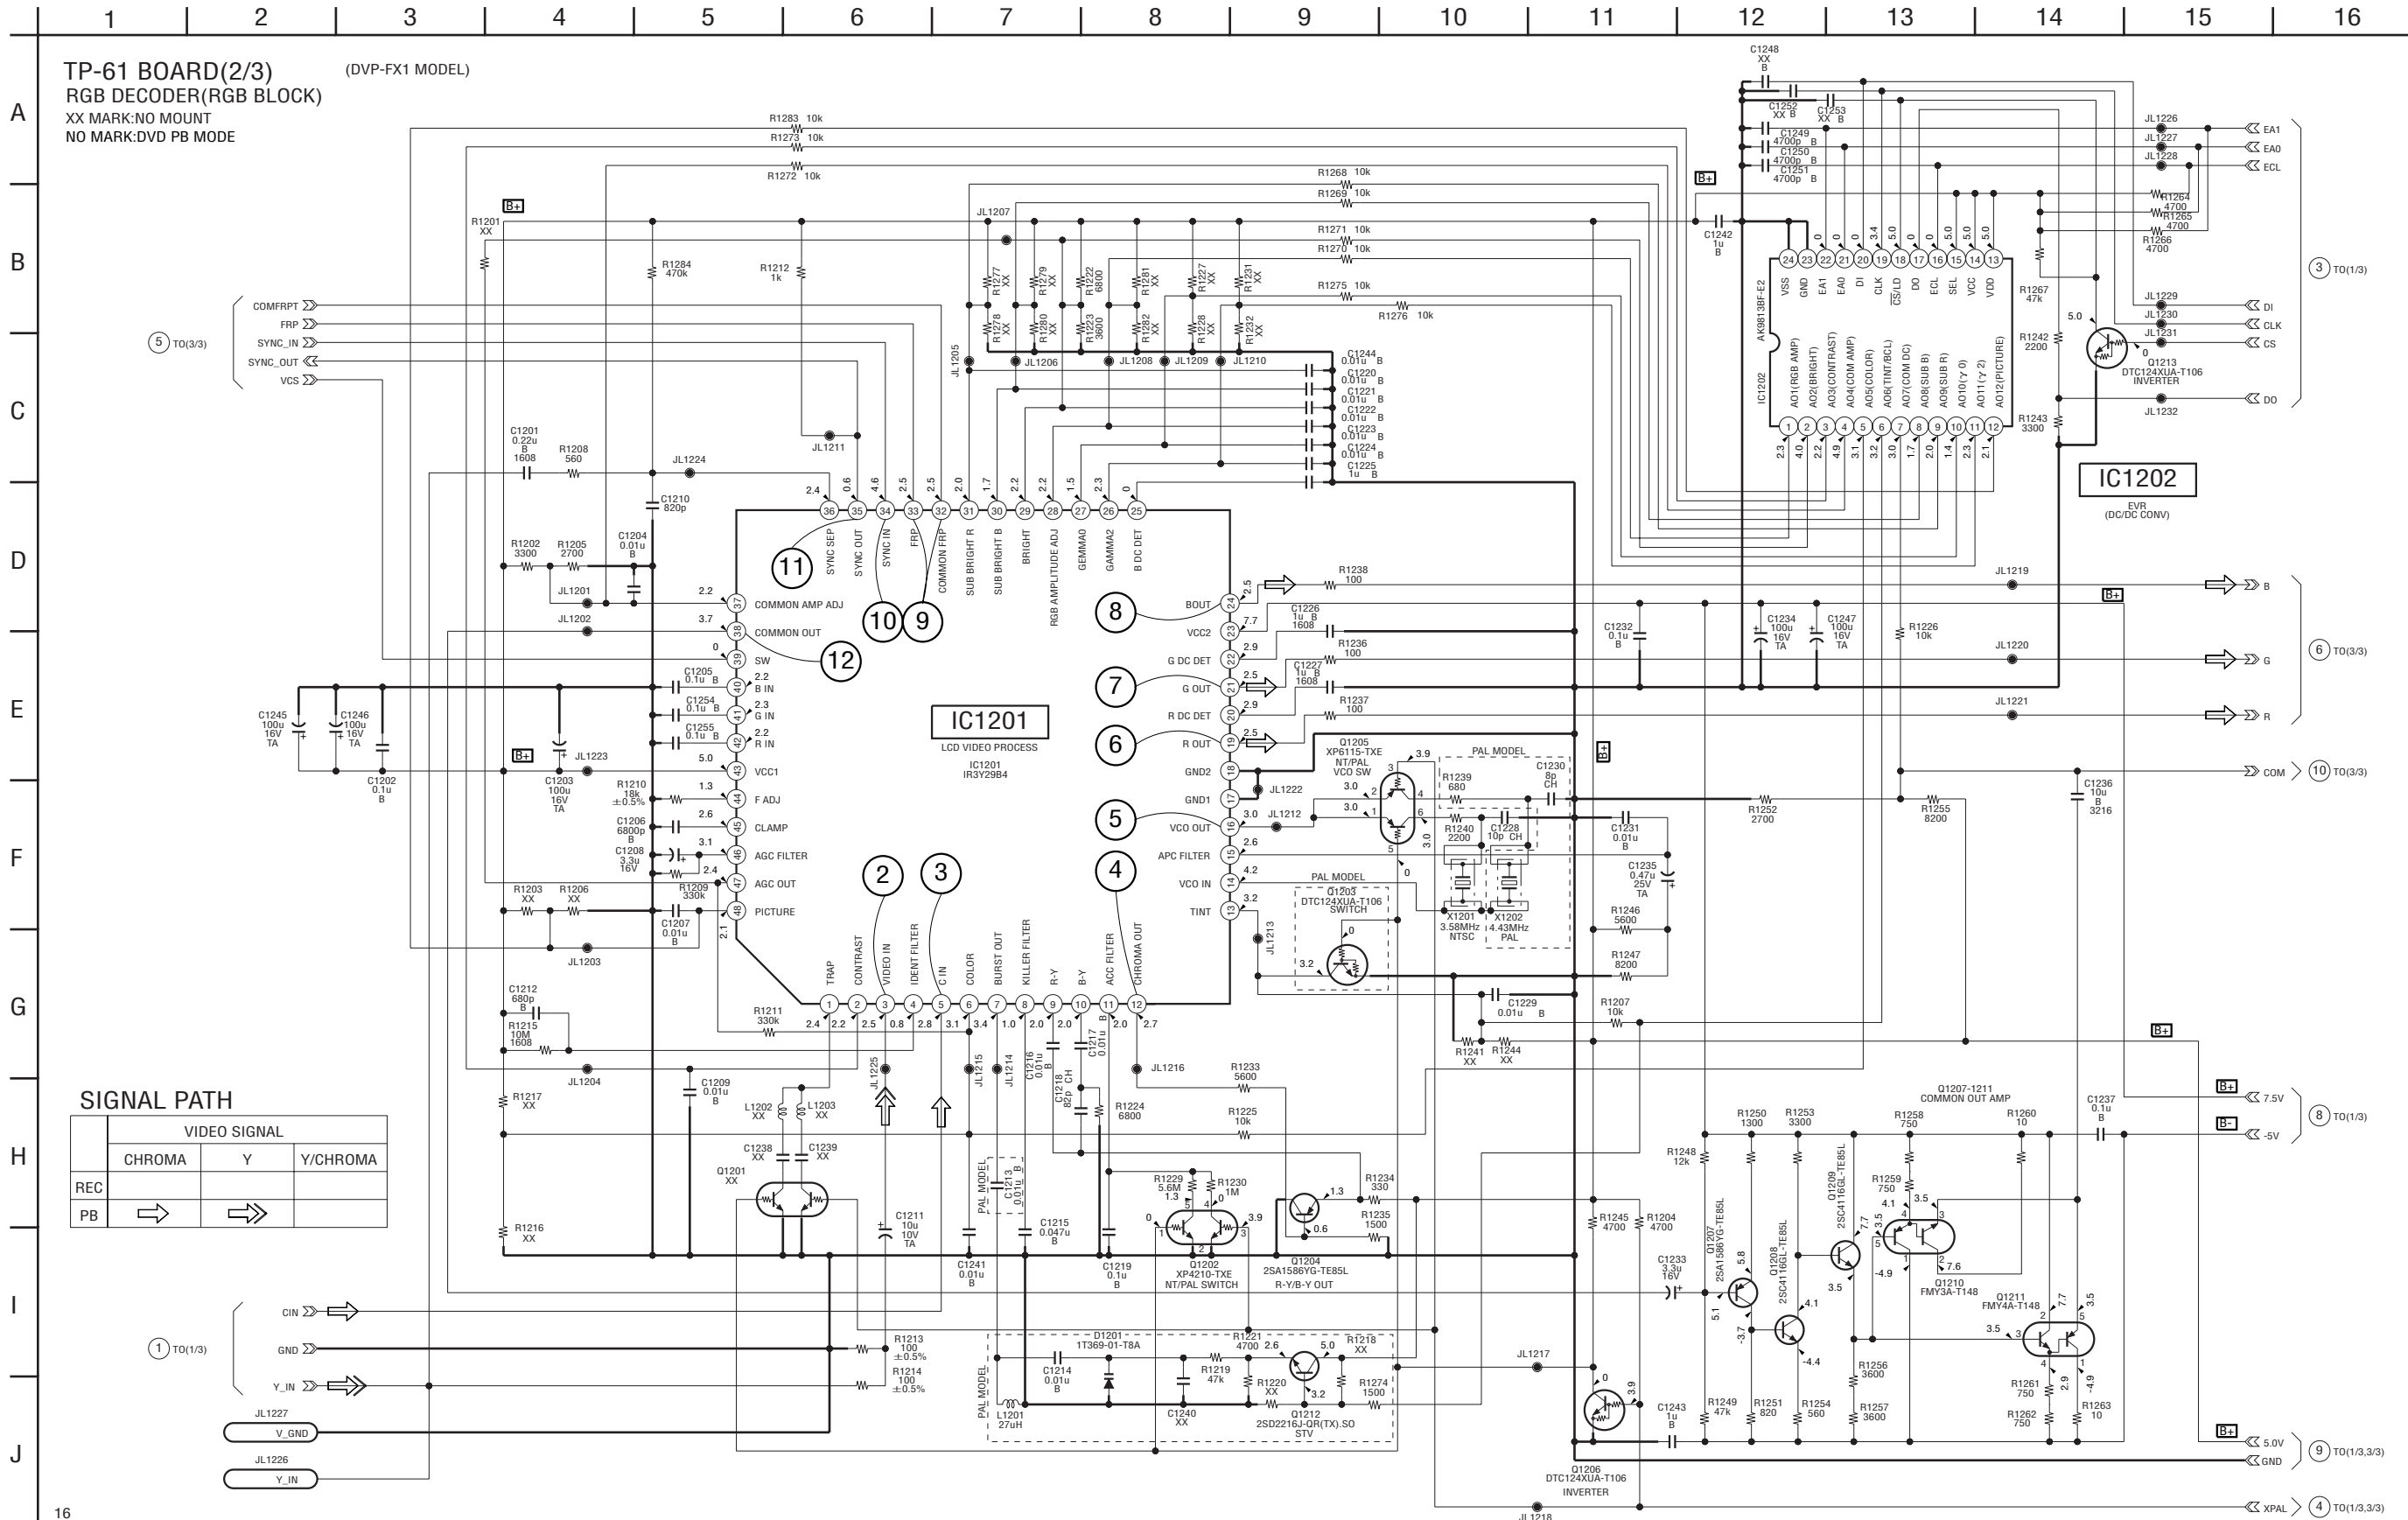

For Schematic Diagram

- Refer to page 4-45 for printed wiring board.
- Refer to page 4-47 for waveforms.

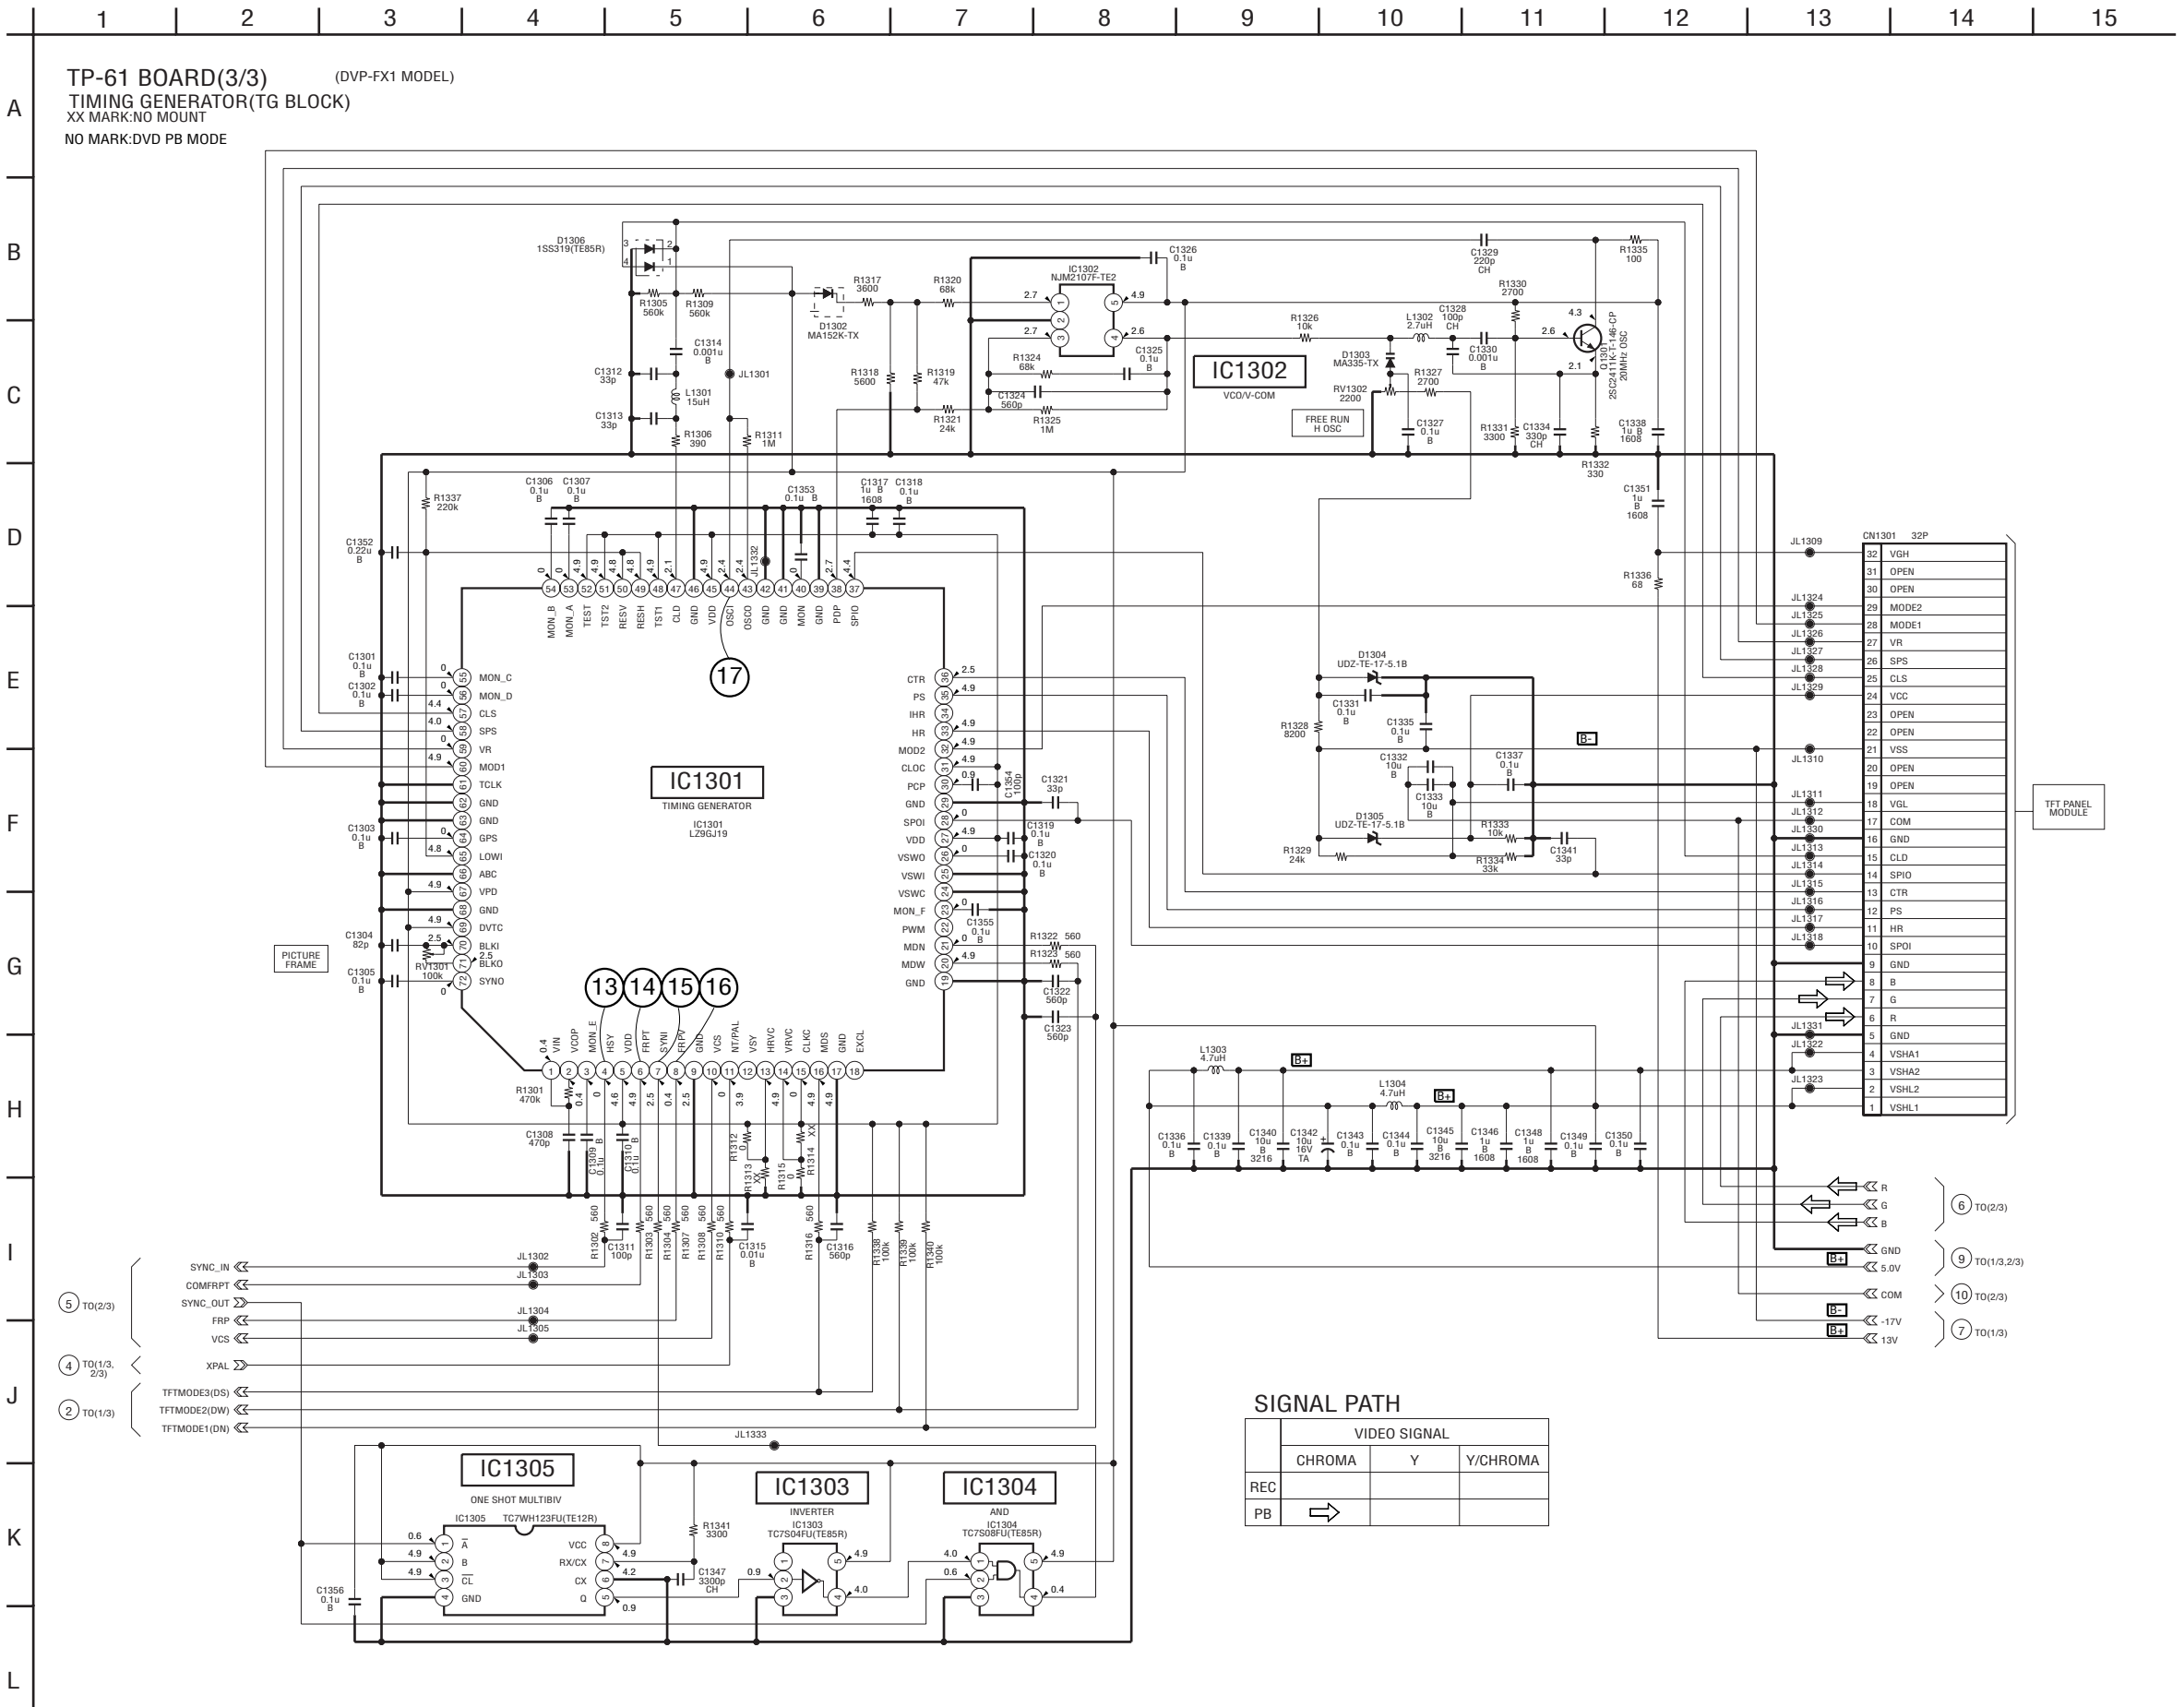


TP-61 (TIMING GEN, RGB DECODER) PRINTED WIRING BOARD

TP-61 BOARD (SIDE A)

- CN1101 D-3
- CN1102 E-4
- CN1103 E-1
- CN1104 E-8
- CN1301 E-2
- D1201 E-4
- D1302 D-1
- D1303 D-2
- D1304 D-3
- D1305 E-1
- IC1202 D-6
- IC1302 D-2
- Q1203 E-4
- Q1212 E-4
- Q1213 D-5
- Q1301 D-2


TP-61 BOARD (SIDE A)

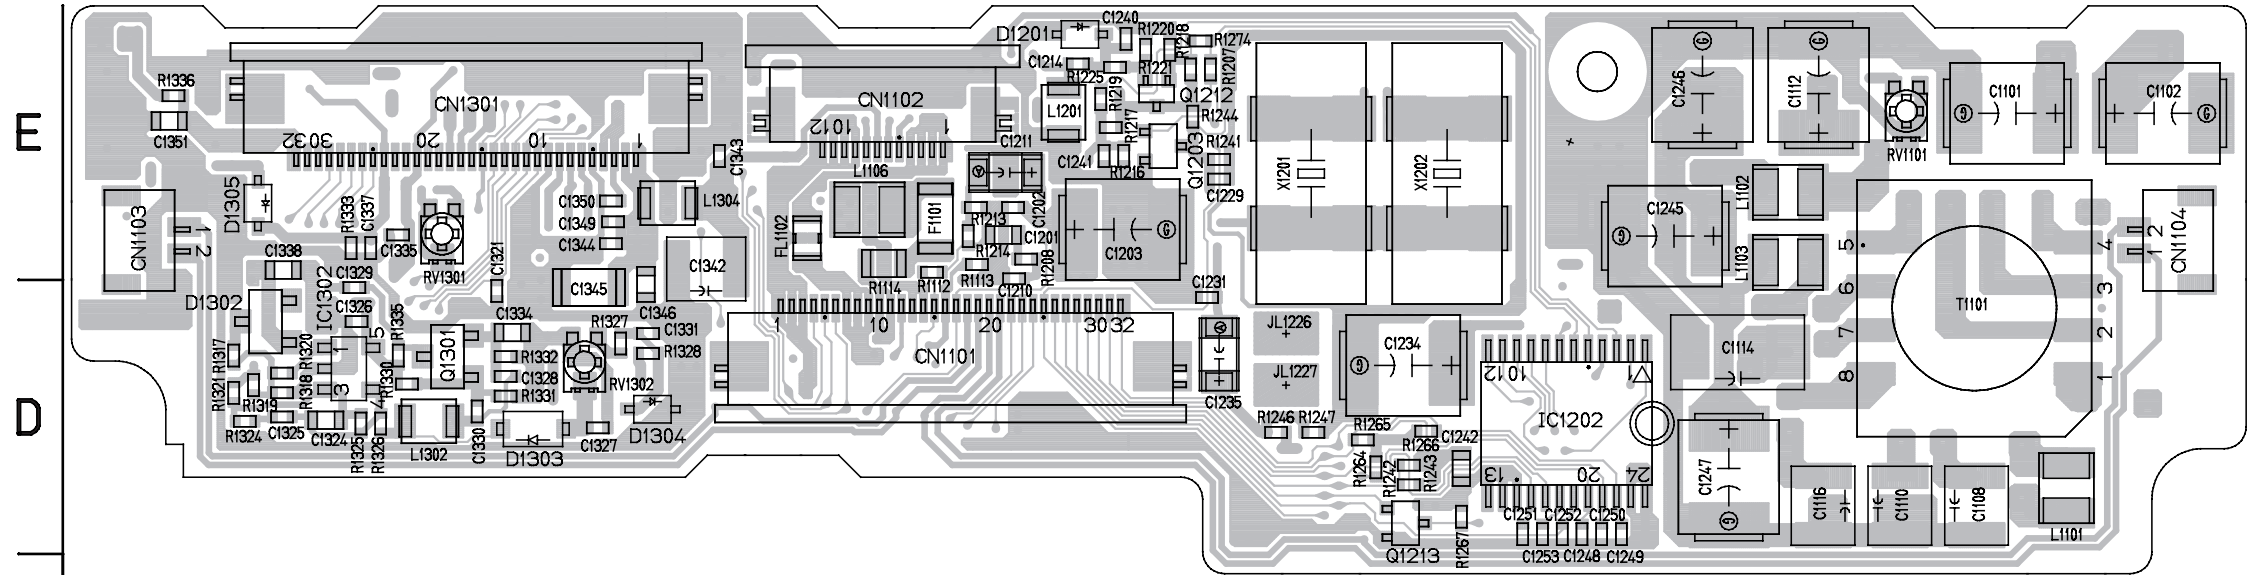

TP-61 BOARD (SIDE B)


- D1101 B-8
- D1102 A-8
- D1103 B-7
- D1104 B-7
- D1105 A-7
- D1106 A-7
- D1107 A-7
- D1108 B-8
- D1109 A-7
- D1110 A-7
- D1111 B-7
- D1306 A-1
- IC1101 A-8
- IC1201 A-4
- IC1301 A-1
- IC1303 A-3
- IC1304 A-3
- IC1305 B-3
- Q1101 B-8
- Q1102 A-8
- Q1103 B-7
- Q1104 A-7
- Q1105 A-7
- Q1201 A-3
- Q1202 A-4
- Q1204 A-5
- Q1205 A-5
- Q1206 A-3
- Q1207 B-6
- Q1208 B-6
- Q1209 B-6
- Q1210 B-6
- Q1211 B-6

TP-61 BOARD (SIDE B)

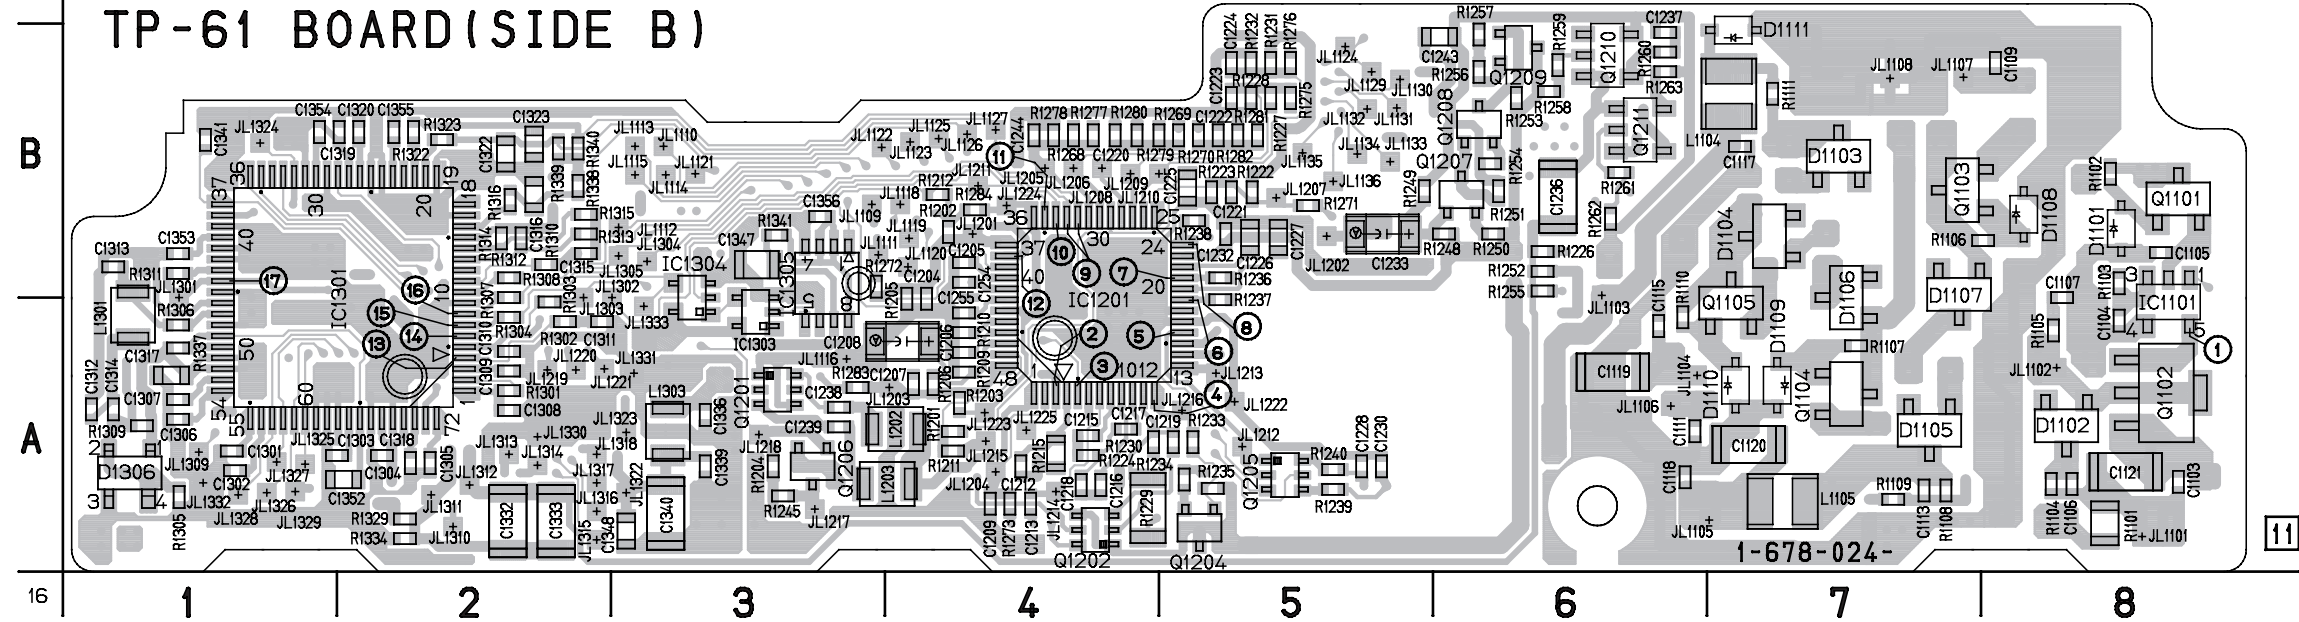


For printed wiring boards

- Refer to page 4-XX for parts location.
- This board is six-layer print board. However, the patterns of layers two to five have not been included in the diagram.
- Chip parts

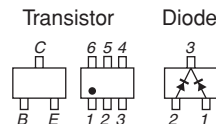

There are few cases that the part printed on this diagram isn't mounted in this model.

TP-61 BOARD

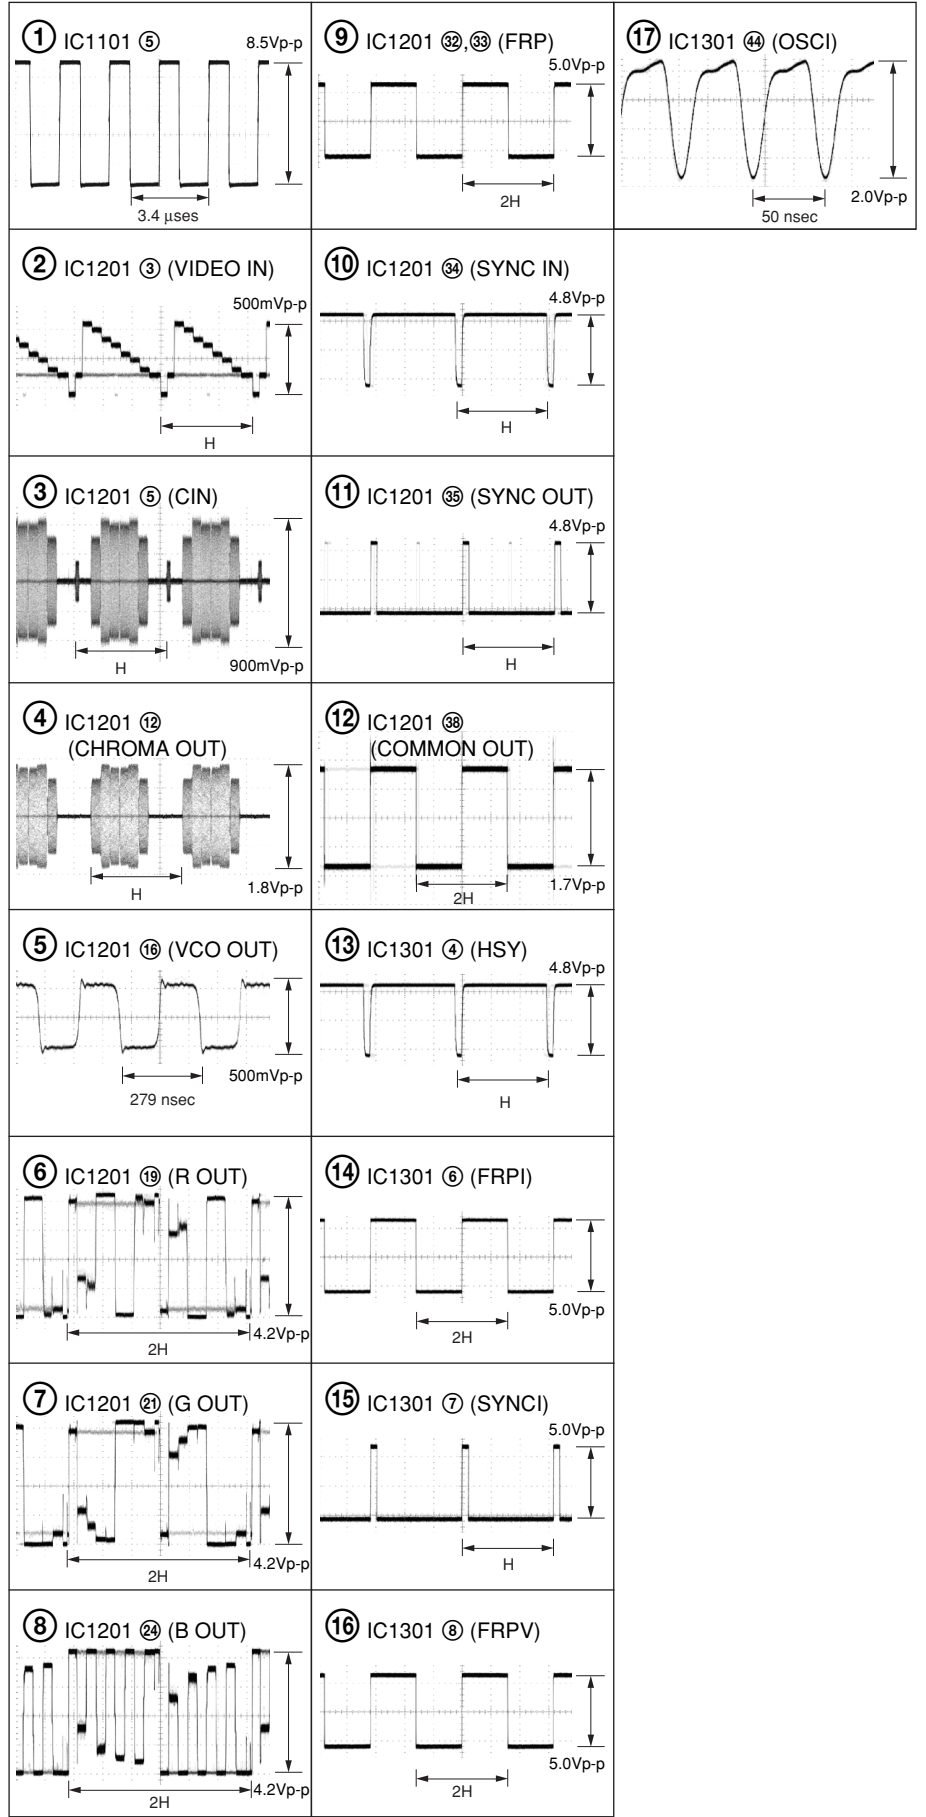

SECTION 5 IC PIN FUNCTION

5-1. SYSTEM CONTROL (MB-90 BOARD IC002: MB91107PFV-G-BEN)

Pin No.	Pin Name	I/O	Description
1 to 5	HA17 to HA21	O	Address bus A17 to A21
6	HA22	–	Not used
7	A23/P67	O	Not used
8	A34/P70	O	Not used
9	AVCC	–	Power supply
10	AVRH	–	Reference power supply (+3.3V)
11	AVSS	–	Ground
12	AN0	I	Set of mode 0
13	AN1	I	Set of mode 1
14	AN2	I	Set of mode 2
15	AN3	I	Set of mode 3
16	XRST	O	System reset signal output
17	OEB	–	Not used
18	CS6	O	Chip select signal for servo DSP
19	NC	–	Not used
20	EUROV/Y	O	Fixed to “H”
21	PH5/OCPAO	O	Fixed to “H”
22	ARPRST	O	Reset signal output for ARP
23	DRVMUTE	O	Drive mute signal output
24	VCC	–	Power supply
25	INT0	I	Input of interrupt from AV DEC
26	INT1	I	Input of interrupt from ARP
27	INT2	I	Fixed to “H”
28	INT3	I	Input of interrupt from EEPROM
29	INT4	I	Input of interrupt from IF CON
30	INT5	I	Fixed to “H”
31	INT6	I	Fixed to “H”
32	INT7	I	Input of interrupt from servo DSP
33	SI0	I	Serial data input from IF CON and EEPROM
34	VSS	–	Ground
35	SO0	O	Serial data output to IF CON and EEPROM
36	SC0	O	Serial clock output to IF CON and EEPROM
37	SI1	I	Serial bus 1 (for data input) (to Audio DAC of TP-61 board)
38	SO1	O	Serial bus 1 (for data output) (to Audio DAC of TP-61 board)
39	SC1	O	Serial clock output (to Audio DAC of TP-61 board)
40	SI2	I	Serial bus 2 (for data input) (to Diag connector)
41	SO2	O	Serial bus 2 (for data output) (to Diag connector)
42	SC2	O	Fixed to “H”
43	DREQ0	I	Input of DMA-REQ 0 from AV DEC
44	DACK0	O	Output of DMA-ACK 0 to AV DEC
45	IFCS	O	Chip select signal to IF CON
46	DREQ1	I	Input of DMA-REQ 1 from AV DEC
47	DACK1	O	Output of DMA-ACK 1 to AV DEC
48	EWC	O	Write control signal output to EEPROM
49	ECS	O	Chip select signal output to EEPROM
50	EVRCS	O	Chip select signal output to EVR
51	AURST	O	Reset signal output to audio DAC
52	VSS	–	Ground
53	X1	O	Clock output (12.5MHz)
54	X0	I	Clock input (12.5MHz)

Pin No.	Pin Name	I/O	Description
55	VCC	–	Power supply
56	CKSW1	I	Chuck sensor input
57	OCSW1	I	Tray sensor input
58	OCSW2	I	Tray sensor input
59	2CH_CS	O	Chip select signal output to DAC (2CH)
60	VES_CS	O	Chip select signal output to VES DSP
61	48/44.1K	O	PLL FS control signal output
62	MAMUTE	O	Audio mute signal output
63	WIDE	O	WIDE select signal output
64	C	–	Capacitor (0.1uF) connect between ground
65	CS0X	O	External ROM chip select signal output (to EEPROM)
66	CS1X	–	Not used
67	CS2X	O	Chip select signal output (for AV DEC)
68	CS3X	O	Chip select signal output (for AV DEC)
69	CS4X	O	Chip select signal output (for ARP)
70	CS5X	O	Not used
71	CPUCK	O	CPU clock signal output
72	NMIX	–	Not used (fixed at “H”)
73	HSTX	–	Not used (fixed at “H”)
74	FRRSTIN	I	Reset signal input from IF CON
75	VSS	–	Ground
76	MD0	I	Input of mode select 0 (fixed at “T”)
77	MD1	–	Ground
78	MD2	–	Ground
79	XWAIT	I	Wait signal input
80	BGRNTX	–	Test terminal (fixed at “H”)
81	BRQ	–	Test terminal (fixed at “L”)
82	RD	O	Read enable signal output
83	WRH	O	High byte write enable signal output (16 bit and 8 bit)
84	NC	–	Not used
85 to 92	HD0 to HD7	I/O	Data bus D0 to D7 (16 bit only)
93 to 100	HD8 to HD15	I/O	Data bus D8 to D15 (16 bit), D0 to D7 (8 bit)
101	VSS	–	Ground
102 to 109	HA0 to HA7	O	Address bus A00 to A07
110	VCC	–	Power supply
110 to 118	HA8 to HA15	O	Address bus A08 to A15

5-2. IF CONTROL (MB-90 BOARD IC701: M37513MB-055GP)

GP Pin	Pin name	I/O	Function
1	DCOUNT MNT	I	External power supply voltage monitor input
2	KEY3	I	D KEY3 input
3	KEY2	I	D KEY2 input
4	KEY1	I	D KEY1 input
5	CHGMNT	I	Battery voltage input
6	TEMP	I	Main unit temperature measurement
7	VCCMNT	I	DC voltage monitor input
8	PON_CHK	I	Power supply (SW3.3V) voltage monitor input
9	BATTYPE	I	Battery type discrimination input
10	HPJACK	I	HP JACK insertion discrimination input
11	IR	I	REMOCON input
12	VIDEOSW	I	VIDEO input/output select switch input
13	SRSSW	I	SRS select switch input
14	ASPECTSW	I	TFT display mode select switch input
15	SELF_CHECK	I	Self-check identification input
16	XTFT	I	TFT model identification input
17	XIFBUSY	O	Communication start request to system computer
18	SCLK11	I	Communication SCLK with system computer
19	SOUT1	O	Communication SOUT with system computer
20	SIN1	I	Communication SIN with system computer
21	LBCHG	O	Low battery charge control output
22	DOORSW1	I	Disc lid open detection input 1
23	XIFCS	I	CS signal input from system computer
24	XPALSET	I	Destination identification input (NT/PAL destination identification)
25	TFTMODE3	O	TFT display mode control output 3
26	TFTMODE2	O	TFT display mode control output 2
27	TFTMODE1	O	TFT display mode control output 1
28	XPAL	O	TFT NTSC/PAL select control output
29	ECL	O	EVR control output
30	EA1	O	EVR control output
31	EAO	O	EVR control output
32	XDCIN	I	DC connection detection input
33	XRESET	I	RESET input
34	XCIN	I	(Low speed clock input)
35	XCOU	O	(Low speed clock output)
36	XIN	I	High speed clock input (4 MHz)
37	XOUT	O	High speed clock output (4 MHz)
38	VSS	-	Power supply ground
39	TFTOPEN	I	TFT block open detection input
40	DOORSW2	I	Disc lid open detection input 2
41	POWER	I	POWER KEY input
42	BATTSW	I	Battery attachment detection switch input
43	HOLD	I	Hold switch input
44	DCOUNT JACK	I	DCOUT JACK insertion detection input
45	PLAY	I	PLAY KEY input
46	USSET	I	US destination identification input
47	P17	O	(RESERVE)
48	P16	O	(RESERVE)
49	P15	O	(RESERVE)
50	P14	O	(RESERVE)

51	P13	O	(RESERVE)
52	P12	O	(RESERVE)
53	P11	O	(RESERVE)
54	P10	O	(RESERVE)
55	INV_H_L	O	TFT inverter 2-step dimmer control output
56	SRSCNT	O	SRS control output
57	V_IOCNT	O	VIDEO input/output selector switch output
58	IRPCON	O	REMOCON receptor power supply control output
59	DVDPCON	O	Power supply control output of disc playback system
60	VMUTE_TFT	O	VMUTE output for TFT LCD panel
61	XFRRST	O	Syscon reset control output
62	POO	O	(RESERVE)
63	MAINPCON	O	Main power supply control output
64	CHGCNT	O	Charge control output
65	INVPCON	O	Inverter lighting control output
66	TFTPCON	O	TFT block power supply control output
67	VMUTE	O	VIDEO mute control output
68	AMUTE	O	AUDIO mute control output
69	SPMUTE	O	SPEAKER mute control output
70	LCDPCON	O	Function display LCD backlight control output
71	SEG17	O	(RESERVE)
72	SEG16	O	LCD segment output
73	SEG15	O	LCD segment output
74	SEG14	O	LCD segment output
75	SEG13	O	LCD segment output
76	SEG12	O	LCD segment output
77	SEG11	O	LCD segment output
78	SEG10	O	LCD segment output
79	SEG09	O	LCD segment output
80	SEG08	O	LCD segment output
81	SEG07	O	LCD segment output
82	SEG06	O	LCD segment output
83	SEG05	O	LCD segment output
84	SEG04	O	LCD segment output
85	SEG03	O	LCD segment output
86	SEG02	O	LCD segment output
87	SEG01	O	LCD segment output
88	SEG00	O	LCD segment output
89	VCC	–	Power supply 3.3 V
90	VREF	–	AD converter reference voltage
91	AVSS	–	AD converter ground
92	COM3	O	LCD common output
93	COM2	O	LCD common output
94	COM1	O	LCD common output
95	COM0	O	LCD common output
96	VL3	–	LCD power supply input
97	VL2	–	LCD power supply input
98	C2	–	The terminal to which external capacitor setup for LCD, is connected.
99	C1	–	The terminal to which external capacitor setup for LCD, is connected.
100	VL1	–	LCD power supply input

SECTION 6 TEST MODE

6-1. GENERAL DESCRIPTION

The Test Mode allows you to make diagnosis and adjustment easily using the remote commander and monitor TV. The instructions, diagnostic results, etc. are given on the on-screen display (OSD).

6-2. STARTING TEST MODE

Press **TITLE**, **CLEAR**, **POWER** buttons on the remote commander in this order with the power of main unit in OFF status, and the Test Mode starts, then the menu shown below will be displayed on the TV screen. At the bottom of menu screen, the model name and revision number are displayed.

To execute each function, select the desired menu and press its number on the remote commander.

To exit from the Test Mode, press the POWER button.

```

Test Mode Menu

0. Syscon Diagnosis
1. Drive Auto Adjustment
2. Drive Manual Operation
3. EVR Adjust
4. Emergency History
5. Version Information
6. Video Level Adjustment
    Exit : Power Key

Model : DPX13xxxx
Revision : 1.xxxx

```

6-3. SYSCON DIAGNOSIS

The same contents are board detail check by serial interface can be checked from the remote commander.

On the Test Mode Menu screen, press **0** key on the remote commander, and the following check menu will be displayed.

```

### Syscon Diagnosis ###
Check Menu

0. Quit
1. All
2. Version
3. Peripheral
4. Servo
5. Supply
6. AV Decoder
7. Video
8. Audio
-

```

0. Quit

Quit the Syscon Diagnosis and return to the Test Mode Menu.

1. All

All items continuous check

This menu checks all diagnostic items continuously. Normally, all items are checked successively one after another automatically unless an error is found, but at a certain item that requires judgment through a visual check to the result, the following screen is displayed for the key entry.

```

### Syscon Diagnosis ###

Diag All Check
No. 2 Version

2-3. ROM Check Sum
Check Sum = xxxx

Press NEXT Key to Continue
Press PREV Key to Repeat
-

```

For the ROM Check, the check sum calculated by the Syscon is output, and therefore you must compare it with the specified value for confirmation.

Following the message, press **NEXT** key to go to the next item, or **PREV** key to repeat the same check again. To quit the diagnosis and return to the Check Menu screen, press **STOP** or **ENTER** key. If an error occurred, the diagnosis is suspended and the error code is displayed as shown below.

```

### Syscon Diagnosis ###

3-2. EEPROM Check
Error 03 : EEPROM Write/Reed N
Address : 00000001
Write Data : 2492
Read Data : 2490
Press NEXT Key to Continue
Press PREV Key to Repeat
-

```

Press **STOP** key to quit the diagnosis, or **PREV** key to repeat the same item where an error occurred, or **NEXT** key to continue the check from the item next to faulty item.

Submenu

Selecting 2 and subsequent items calls the submenu screen of each item.

For example, if "5. Supply" is selected, the following submenu will be displayed.

```

### Syscon Diagnosis ###
Check Menu
No.5 Supply

0. Quit
1. All
2. ARP Register Check
3. ARP to RAM Data Bus
4. ARP to RAM Address Bus
5. ARP RAM Check
-

```

0. Quit

Quit the submenu and return to the main menu.

1. All

All submenu items continuous check

This menu checks 2 and subsequent items successively. At the item where visual check is required for judgment or an error occurred, the checking is suspended and the message is output for key entry. Normally, all items are checked successively one after another automatically unless an error is found.

Selecting 2 and subsequent items executes respective menus and outputs the results.

For the contents of each submenu, see "Check Items List".

General Description of Checking Method

2. Version

(2-2) Revision

ROM revision number is displayed.

Error : Not detected.

The revision number defined in the source file of ROM (IC004) is displayed with four digits.

(2-3) ROM Check Sum

Check sum is calculated.

Error : Not detected.

The data are added of ROM (IC004) and the result is displayed with 4-digit hexadecimal number. Error is not detected. Compare the result with the specified value.

(2-4) Model Type

Model code is displayed.

Error : Not detected.

The model code is displayed with 2-digit hexadecimal number.

	Model	type
DVP-FX1	9	1
DVP-F5	A	1

(2-5) Region

Region code is displayed.

Error : Not detected.

The region code determined from the model code is displayed.

3. Peripheral

(3-2) EEPROM Check

Data write → read, and accord check

Error 03 : EEPROM write/read discord.

Before writing, the data are saved, then after checking, they are written to restore the contents of EEPROM.

4. Servo

(4-2) Servo DSP Check

Data write → read, and accord check

Error 12 : Read data discord

(4-3) DSP Driver Test

Test signal data → DSP Driver

Error : Not detected.

5. Supply

Caution : Do not conduct this check with a mechanical deck connected.

An access is made to the stream supply and servo control IC (IC602) and external RAM (IC603) using check data.

If mechanical deck is connected, the motor and optics could be damaged. This check is also executed by the "All" menu item.

Supplement : How to disconnect mechanical deck

Disconnect flexible flat cables connected to the CN801, CN802, CN803 and CN804 of MB-90 board.

(5-2) ARP Register Check

Data write → read, and accord check

Error 08 : ARP register write, and read data discord.

(5-3) ARP to RAM Data Bus

Data write → read, and accord check

Error 09 : ←→ RAM data bus error

Data 0x0001 to 0x8000 where one bit each is set to 1 are written to the address 0 of RAM (IC603) connected to the ARP (IC602) through the bus, then they are read and checked. In case of discord, written bit pattern and read data are displayed. If data where multiple bits are 1 are read, the bits concerned may touch each other. Further, if data where certain bit is always 1 or 0 regardless of written data, the line could be disconnected or shorted.

(5-4) ARP to RAM Address Bus

Data write → other address read discord check

Error 10 : ARP → RAM data bus error

Caution : Address and data display in case of an error is different from the display of other diagnosis (described later).

Before starting the test, all addresses of RAM (IC603) are cleared to 0x0000.

First, 0xA55A is written to the address 0x00000, and the address data are read and checked from addresses 0x00001 to 0x80000 while shifting 1 bit each. Next, the data at that address is cleared, and it is written to the address 0x00001, and read and checked in the same manner. This check is repeated up to the address 0x80000 while shifting the address data by 1 bit each.

If data other than 0 is read at the addresses except written address, an error is given because all addresses were already cleared to 0. In this check, the error display pattern is different from that of other diagnosis ; read data, written address, and read address are displayed in this order. However, the message uses same template, and accordingly exchange Address and Data when reading. The following display, for example,

```
### Syscon Diagnosis ###

5-4. ARP to RAM Address Bus
Error 10 : ARP - RAM Address B
Address : 0000A55A
Write Data : 00000000
Read Data : 00000000
Press NEXT Key to Continue
Press PREV Key to Repeat
-
```

shows the data 0xA55A was read from address 0x00080000 though it was written to the address 0x00000000. This implies that these addresses are in the form of shadow. Also, if the read data is not 0xA55A, another error will be present.

(5-5) ARP RAM Check

Data write → read, and accord check

Error 11 : ARP RAM read data discord

The program code data stored in ROM are copied to all areas of RAM (IC603) connected to the ARP (IC602) through the bus, then they are read and checked if they accord. If the detail check was selected initially, the data are written to all areas and read, then the same test is conducted once again with the data where all bits are inverted between 1 and 0. If discord is detected, faulty address, written data, and read data are displayed following the error code 11, and the test is suspended.

6. AV Decoder

(6-2) 1932 RAM

Data write → read, and accord check

Error 13 : ARP RAM read data discord

The program code data stored in ROM (IC004) are copied to all areas of RAM (IC653, IC654) connected to the AVD (IC652) through the bus, then they are read and checked if they accord. Further, the same test is conducted once again with the data where all bits are inverted between 1 and 0. If discord is detected, faulty address, written data, and read data are displayed following the error code 13, and the test is suspended.

(6-3) 1932 SP

ROM → AVD RAM → Video OUT

Error : Not detected

The data including sub picture streams in ROM (IC004) are transferred to the RAM (IC653, IC654) in AVD (IC652) and output as video signals from the AVD (IC652).

They are output from all video terminals (Composite, Y/C, Component) except EURO AV terminal.

7. Video

(7-2) Color Bar

AVD color bar command write → Video OUT

Error : Not detected.

The command is transferred to the AVD, and the color bar signals are output from video terminals.

They are output from all video terminals (Composite, Y/C, Component).

8. Audio

(8-2) ARP → 1932

Error 14 : ARP → 1932 video NG

Error 15 : ARP → 1932 audio NG

(8-3) Test Tone

A pink noise signal is output from the AVD (IC652) through optical coaxial digital terminal and analog audio terminal.

Error : Not detected.

All channels → 2 ch Left → 2 ch Right are checked in this order.

Check Items List

- 2. Version
 - (2-2) Revision
 - (2-3) ROM Check Sum
 - (2-4) Model type
 - (2-5) Region
- 3. Peripheral
 - (3-1) EEPROM Check
- 4. Servo
 - (4-2) Servo DSP Check
 - (4-2) DSP Driver Test
- 5. Supply (Data Supply)
 - (5-2) ARP Register Check
 - (5-3) ARP to RAM Data Bus
 - (5-4) ARP to RAM Address Bus
 - (5-5) ARP RAM Check
- 6. AV Decoder
 - (6-2) 1932 RAM
 - (6-3) 1932 SP
- 7. Video (Video Output)
 - (7-2) Color Bar
- 8. Audio (Audio Output)
 - (8-2) ARP→1932
 - (8-3) Test Tone

Error Codes List

- 00: Error not detected
- 01: RAM write/read data discord
- 02: Gate array NG
- 03: EEPROM NG
- 04: Flashmemory clear error
- 05: Flash memory write error
- 06: Flash memory read data discord
- 08: ARP register read data discord
- 09: ARP ↔ RAM data bus error
- 10: ARP ↔ RAM address bus error
- 11: ARP RAM read data discord
- 12: Servo DSP NG
- 13: 1932 SDRAM NG
- 14: ARP → 1932 video NG
- 15: ARP → 1932 audio NG
- 16: 1932 UCODE download NG
- 17: System call error (function not supported)
- 18: System call error (parameter error)
- 19: System call error (illegal ID number)
- 20: System call error (time out)
- 21: NAND Flash faulty blocks exceed 10
- 90: Error occurred
- 91: User verification NG
- 92: Diagnosis cancelled

6-4. DRIVE AUTO ADJUSTMENT

On the Test Mode Menu screen, press **[1]** key on the remote commander, and the drive auto adjustment menu will be displayed.

```
### Drive Auto Adjustment ###

      Adjustment Menu

0. All
1. DVD-SL
2. CD
3. DVD-DL
4. SACD

Exit : RETURN
```

Normally, **[0]** is selected to adjust DVD (single layer), CD, DVD (dual layer), and SACD in this order. But, individual items can be adjusted for the case where adjustment is suspended due to an error. In this mode, the adjustment can be made easily through the operation following the message displayed on the screen.

The disc used for adjustment must be the one specified for adjustment. However, for SACD disc, use the player with initial data if the disc is not available.

Note : The optical laser does not turn on when the disc lid is not closed in the DVP-FX1/F5. When a disc is inserted, be sure to close the disc lid before starting adjustment.

* It is judged that the disc lid is closed when the switches S713 and S714 are turned on.

0. All

You will be asked if EEPROM data are initialized or not, and for this prompt, select **[0]** and press the **[ENTER]** key, and the servo set data in EEPROM will be initialized. Then, 1. DVD-SL disc, 2. CD disc, 3. DVD-DL disc, and 4. SACD disc are adjusted in this order. Each time one disc is adjusted, open and close the disc lid. Replace the disc following the message. Though the message to confirm whether discs other than SACD disc are adjusted is not displayed, you can finish the adjustment if pressing the **[STOP]** button. The S curve level, RF level, and jitter value can be confirmed during adjustment, and if OK, press the **[ENTER]** key and continue adjustment. (If NG, press the **[STOP]** button) During adjustment of each disc, the measurement for disc type judgment is made. As automatic adjustment does not judge the disc type unlike conventional models, take care not to insert wrong type discs. Also, do not give a shock during adjustment.

1. DVD-SL (single layer disc)

Select **[1]**, insert DVD single layer disc, and press **[ENTER]** key, and the adjustment will be made through the following steps, then adjusted values will be written to the EEPROM.

DVD Single Layer Disc Adjustment Steps

1. SLED TILT Reset
2. Disc Check Memory SL
3. Wait 500 msec
4. Set Disc Type SL
5. LD ON
6. Spdl Start
7. Wait 1 sec
8. Focus Search ON
9. Focus Search OFF
10. Focus Servo ON 1
11. Auto Track Offset Adjust
12. Tracking ON
13. CLVA ON
14. Wait 1 sec
15. Sled ON
16. Check CLV Lock
17. Auto LFO Adjust
18. Auto Focus Offset Adjust
19. Auto Tilt Position Adjust
20. Auto Focus Gain Adjust
21. Auto Focus Offset Adjust
22. EQ Boost Adjust
23. Auto LFO Adjust
24. Auto Track Gain Adjust
25. All Servo Stop
26. Eep Copy Loop Filter Offset

2. CD (CD disc)

Select **[2]**, insert CD disc, and press **[ENTER]** key, and the adjustment will be made through the following steps, then adjusted values will be written to the EEPROM.

CD Adjustment Steps

1. Sled Tilt Reset
2. Disc Check Memory CD
3. Wait 500 msec
4. Set Disc Type CD
5. LD ON
6. Spdl Start
7. Wait 1 sec
8. Focus Search ON
9. Focus Search OFF
10. Focus Servo ON 1
11. Auto Track Offset Adjust
12. Tracking ON
13. (TC Display Start)
14. CLVA ON
15. Wait 1 sec
16. Jitter Display Start
17. Sled ON
18. Check CLV Lock
19. Auto LFO Adjust
20. Auto Focus Offset Adjust
21. Auto Focus Gain Adjust
22. Auto Focus Offset Adjust
23. Eq Boost Adjust
24. Auto LFO Adjust
25. Auto Track Gain Adjust
26. All Servo Stop

3. DVD-DL (dual layer disc)

Select **[3]**, insert DVD dual layer disc, and press **[ENTER]** key, and the adjustment will be made through the following steps, then adjusted values will be written to the EEPROM.

DVD Dual Layer Disc Adjustment Steps

1. Sled Tilt Reset
2. Disc Check Memory DL
3. Wait 500 msec
4. Set Disc Type DL
5. LD ON
6. Spdl Start
7. Wait 1 sec
Layer 1 Adjust
8. Focus Servo ON
9. Auto Track Offset Adjust
10. Tracking ON
11. Clva ON
12. Wait 1 sec
13. Sled On
14. Check CLV Lock
15. Auto Loop Filter Offset Adjust
16. Auto Focus Offset Adjust
17. Auto Focus Gain Adjust
18. Auto Focus Offset Adjust
19. Eq Boost Adjust
20. Auto Loop Filter Offset
21. Auto Track Gain Adjust
22. Fj (L1 → L0)
23. Auto Track Offset Adjust L0
24. Tracking ON
25. Clva ON
26. Wait 1 sec
27. Sled On
28. Check CLV Lock
29. Auto Loop Filter Offset Adjust
30. Auto Focus Offset Adjust
31. Auto Focus Gain Adjust
32. Auto Focus Offset Adjust
33. Eq Boost Adjust
34. Auto Loop Filter Offset
35. Auto Track Gain Adjust
36. All Servo Stop

4. SACD (SACD disc)

Select [4], insert SACD disc, and press [ENTER] key, and the adjustment will be made through the following steps, then adjusted values will be written to the EEPROM. However, if SACD disc is not available, use the player with initial data, skipping the SACD adjustment. In this case, you can finish the adjustment if pressing the [STOP] button.

SACD Adjustment Steps

1. Sled Tilt Reset
2. Set Disc Type CD
3. LD ON
4. Spdl Start
5. Wait 1 sec
6. Focus Servo ON
7. Auto Track Offset Adjust
8. Tracking ON
9. Clva ON
10. Wait 1 sec
11. Sled On
12. Check CLV ON
13. Auto LFO Adjust
14. Auto Focus Offset Adjust
15. Auto Focus Gain Adjust
16. Auto Focus Offset Adjust
17. Eq Boost Adjust
18. Auto LFO Adjust
19. Auto Track Gain Adjust
20. All Servo Stop

6-5. DRIVE MANUAL OPERATION

On the Test Mode Menu screen, select [2], and the manual operation menu will be displayed. For the manual operation, each servo on/off control and adjustment can be executed manually.

```
### Drive Manual Operation ###  
  
                Operation Menu  
1. Disc Type  
2. Servo Control  
3. Track/Layer Jump  
4. Manual Adjustment  
5. Auto Adjustment  
6. Memory Check  
  
0. Disc Check Memory  
  
                Exit : Return
```

In using the manual operation menu, take care of the following points. These commands do not provide protection, thus requiring correct operation. The sector address or time code field is displayed when a disc is loaded.

1. Set correctly the disc type to be used on the Disc Type screen. The disc type must be set after a disc is inserted. Be sure to close the disc lid. The set disc type is cleared when the tray is opened.
2. After power ON, if the Drive Manual Operation was selected, first perform "Reset SLED TILT" by opening 1. Disc Type screen.
3. In case of an alarm, immediately press the [STOP] button to stop the servo operation, and turn the power OFF.

Basic operation (controllable from front panel or remote commander)

[POWER]	Power OFF
[STOP]	Servo stop
[RETURN]	Return to Operation Menu or Test Mode Menu
[NEXT], [PREV]	Transition between sub modes of menu
[1] to [9], [0]	Selection of menu items
Cursor UP/DOWN	Increase/Decrease in manually adjusted value

0. Disc Check Memory

```
                Disc Check  
  
1. SL Disc Check  
2. CD Disc Check  
3. DL Disc Check  
  
0. Reset SLED TILT
```

On this screen, the mirror time is measured to judge the disc and it is written to the EEPROM. First load DVD SL disc and press [1], next load CD disc and press [2], and finally load DVD DL disc and press [3].

The adjustment must be executed more than once after default data were written. External vibration or shock to the player must not be given. Reference value for DVD is from 48 to 68, and for CD, from A0 to BF.

Check that the value of CD is larger than that of DVD.

When those values are beyond a range perform this adjustment again.

From this screen, you can go to another mode by pressing !NEXT! or !PREV! key, but you cannot enter this mode from another mode.

You can enter this mode from the Operation Menu screen only.

1. Disc Type

Disc Type	
1. Disc Type Auto Check	
2. DVD SL	12 cm
3. DVD DL	12 cm
4. CD	12 cm
5. SACD	12 cm
6. DVD SL	8 cm
7. DVD DL	8 cm
8. CD	8 cm
9. SACD	8 cm
0. Reset SLED TILT	
	EMG. 00

On this screen, select the disc type. To select the disc type, press the number of the loaded disc. The selected disc type is displayed at the bottom. Selecting [1] automatically selects and displays the disc type. In case of wrong display, retry "Disc Check Memory". Also, opening the tray causes the set disc type to be cleared. In this case, set the disc type again after loading.

In performing manual operation, the disc type must be set.

Once the disc type has been selected, the sector address or time code display field will appear as shown below. These values are displayed when PLL is locked.

Disc Type	
1. Disc Type Auto Check	
2. DVD SL	12 cm
3. DVD DL	12 cm
4. CD	12 cm
5. SACD	12 cm
6. DVD SL	8 cm
7. DVD DL	8 cm
8. CD	8 cm
9. SACD	8 cm
0. Reset SLED TILT	
	SA. - ST. - EMG. 00
DVD SL	12 cm

Display when DVD SL 12 cm disc was selected

Disc Type	
1. Disc Type Auto Check	
2. DVD SL	12 cm
3. DVD DL	12 cm
4. CD	12 cm
5. SACD	12 cm
6. DVD SL	8 cm
7. DVD DL	8 cm
8. CD	8 cm
9. SACD	8 cm
0. Reset SLED TILT	
	TC. - : - : - EMG. 00
CD	12 cm

Display when CD 12 cm disc was selected

[0] Reset SLED TILT Reset the Sled and Tilt to initial position.

[1] Disk Type Check Judge automatically the loaded disc. As the judged result is displayed at the bottom of screen, make sure that it is correct.

If Disc Check Memory menu has not been executed after EEPROM default setting, the disc type cannot be judged.

In this case, return to the initial menu and make a check for three types of discs (SL, DL, CD).

[2] to [9] Select the loaded disc. The adjusted value is written to the address of selected disc. No further entry is necessary if [1] was selected.

2. Servo Control

Servo Control	
1. LD	off R. sled FWD
2. SP	off L. sled REV
3. Focus	off U. Tilt Up
4. TRK.	off D. TILT Down
5. Sled	off
6. CLVA	off
7. FCS. Sred	off
0. Reset SLED TILT	
	SA. - TI. - EMG. 00
DVD SL	12 cm

On this screen, the servo on/off control necessary for replay is executed. Normally, turn on each servo from 1 sequentially and when CLVA is turned on, the usual trace mode becomes active. In the trace mode, DVD sector address or CD time code is displayed. This is not displayed where the spindle is not locked.

The spindle could run overriding the control if the spindle system is faulty or RF is not present. In such a case, do not operate CLVA.

[0]	Reset SLED TILT	Reset the Sled and Tilt to initial position.
[1]	LD	Turn ON/OFF the laser.
[2]	SP	Turn ON/OFF the spindle.
[3]	Focus	Search the focus and turn on the focus.
[4]	TRK	Turn ON/OFF the tracking servo.
[5]	Sled	Turn ON/OFF the sled servo.
[6]	CLVA	Turn ON/OFF normal servo of spindle servo.
[7]	FCS. Srch	Apply same voltage as that of focus search to the focus drive to check the focus drive system.
[→]	Sled FWD	Move the sled outward. Perform this operation with the tracking servo turned off.
[←]	Sled REV	Move the sled inward. Perform this operation with the tracking servo turned off.

The following menus are normally not used.

- 3. Track/Layer Jump
- 4. Manual/Adjustment
- 5. Auto Adjustment

The persons who do not know well about these menus should not use them.

6. Memory Check

EEPROM DATA	--DL--				
	CD	SACD	SL	L0	L1
Focus Gain	xx	xx	xx	xx	xx
TRK. Gain	xx	xx	xx	xx	xx
Focus Offset	xx	xx	xx	xx	xx
TRK. Offset	xx	xx	xx	xx	xx
L.F. Offset	xx	xx	xx	xx	xx
Analog FRSW	xx	xx	xx	xx	xx
PLL DAC Gain	xx	xx	xx	xx	xx
EQ Boost	xx	xx	xx	xx	xx
Jitter	xx	xx	xx	xx	xx
Mirror Time	xx	xx	xx		
-	CLEAR : Default Set				

This screen displays current servo adjusted data stored in the EEPROM. Though adjusted data can be initialized with the [CLEAR] key, they cannot be restored after initialization. So, before clearing, make a note of the adjusted data. For reference, the drive has been designed so that the gain center value is 20 and offset value is 80 except the Mirror Time. Other values will be in a range of 10 to 80. If extreme value such as 00 or FF is set, adjustment will be faulty. In such a case, check for disc scratch or cable disconnection, then perform adjustment again.

6-6. EVR Adjustment

The picture display adjustment of both NTSC and PAL can be performed by the MANUAL adjustment using the menu display of the test mode.

Press [3] of the remote controller. The following check menu appears.

###	EVR	###
#	Main Menu	#
1.	NTSC	Adjustment
2.	PAL	Adjustment
3.	NTSC	Default Set
4.	PAL	Default Set
5.	Copy	NTSC → PAL
6.	Copy	PAL → NTSC
7.	PUMP	
8.	Change to NTSC	
9.	Change to PAL	
	Exit :	RETURN

[1] NTSC Adjustment

The respective EVR adjustment channels of the NTSC screen can be set by the MANUAL adjustment.

Press [1] of the remote controller. The following sub-menu appears.

###	EVR	###
#	NTSC Adjustment	#
0.	RGB AMP	1 ch
1.	BRIGHT	2 ch
2.	GAMMA0	10 ch
3.	GAMMA1	11 ch
4.	CONTRAST	3 ch
5.	COM AMP	4 ch
6.	SUB_B	8 ch
7.	SUB_R	9 ch
8.	(Next)	
	Exit :	RETURN

[1]-1. Setting the respective channels

Press the desired key ([0] for an example) of the remote controller from the sub-menu display.

A binary number appears to the right of the selected channel on the sub-menu as shown.

###	EVR	###
#	NTSC Adjustment	#
0.	RGB AMP	1 ch 60
1.	BRIGHT	2 ch ↑
2.	GAMMA0	10 ch Flashes
3.	GAMMA1	11 ch
4.	CONTRAST	3 ch
5.	COM AMP	4 ch
6.	SUB_B	8 ch
7.	SUB_R	9 ch
8.	(Next)	
	Exit :	RETURN

- * Pressing the UP or DOWN key of the cursor key of the remote control increments or decrements the binary number. At the same time, value of the binary number is written in the E²PROM of the EVR IC.
- * When the EVR value of each channel is changed, the change of the setup can be confirmed on the display as follows. Set the LINE selector switch to the LINE IN position. Connect any video signal and change the setup value. Change of the setup can be confirmed on the display.
- * When you want to change the channel to be adjusted, press the RIGHT or LEFT key of the cursor key. You can select the next channel or previous channel. When you want to select the desired channel, press the numeric key. You can select the channel of the number that you have pressed.
- * Pressing [8] (next) on the sub-menu advances the display to the display of the next adjustment.

```

      ###   EVR   ###
      #  NTSC Adjustment  #
0.  FLICKER    7 ch
1.  TINT       6 ch
2.  SHARPNESS 12 ch
3.  COLOR      5 ch
4.  (Prev)

Exit : RETURN

```

2 PAL Adjustment

The PAL adjustment can be performed in the same manner as in the previous section “ [1] NTSC Adjustment”. However, the following display of the PAL sub-menu is different from that of NTSC.

```

      ###   EVR   ###
      #  PAL Adjustment  #
0.  FLICKER    7 ch
1.  NOLSE      6 ch ←
2.  SHARPNESS 12 ch
3.  COLOR      5 ch
4.  (Prev)

Exit : RETURN

```

This item is different from the display of the NTSC adjustment.

3 NTSC Default Setting

4 PAL Default Setting

The default values of the EVR can be written into the E²PROM using the EVR main menu.

Press either [3] or [4] of the remote controller. The following display appears and a question is asked if you want to set the default value into E²PROM or not.

Press [ENTER] to set the default value. Press the [STOP] key not to set.

```

      ###   EVR   ###
      #  NTSC Default Set  #

Default Set?
Yes : ENTER / NO : STOP

Exit : RETURN

```

5 Copy NTSC → PAL

6 Copy PAL → NTSC

Press either [5] or [6] of the remote controller. The following display appears and a question is asked if you want to copy the setup values that are stored in the NTSC (or PAL) EVR to the address of the E²PROM where the PAL (or NTSC) setup values are stored at present.

Press [ENTER] to copy. Press the [STOP] key not to copy.

```

      ###   EVR   ###
      #  Copy NTSC → PAL  #

Copy?
Yes : ENTER / NO : STOP

Exit : RETURN

```

7 DUMP

Pressing the [7] key on the remote controller from the EVR main menu shows the EVR values of both NTSC and PAL.

```

      ###   EVR   ###
      #  EVR MEMORY DUMP  #
                                NTSC  PAL
RGB AMP      1 ch      60  60
BRIGHT       2 ch      CF  CF
CONTRAST     3 ch      71  71
COM AMP      4 ch      62  62
COLOR        5 ch      AO  AO
TINT/NOISE   6 ch      A3  88
FLICKER      7 ch      96  96
SUB_B        8 ch      6C  6C
Turn Page : LR
Exit : RETURN

```

The display pages can be scrolled by pressed the RIGHT or LEFT cursor key.

The next page will be as follows.

```

      ###   EVR   ###
      #  EVR MEMORY DUMP  #
                                NTSC  PAL
SUB_R        9 ch      89  89
GAMMA0       10ch     36  36
GAMMA1       11ch     6E  6E
SHARPNESS    12ch     87  87

Turn Page : LR
Exit : RETURN

```

8 Change to NTSC

9 Change to PAL

Pressing the [8] numeric key of the remote controller changes the display to the NTSC EVR values Pressing the [9] numeric key of the remote controller changes the display to the PAL EVR values.

Press [RETURN] to exit the menu.

6-7. EMERGENCY HISTORY

```

### MEG. History ###

Laser Hours   CD xxxxxxxxh
               DVD xxxxxxxxh

1. 00 00 00 00 00 00 00 00
   00 00 00 00 00 00 00 00

2. 00 00 00 00 00 00 00 00
   00 00 00 00 00 00 00 00

Select : 1-9  Scroll : UP/DOWN
(1:Last EMG.) Exit : Return

```


On the Test Mode Menu screen, selecting **[4]** displays the information such as servo emergency history. The history information from last 1 up to 10 can be scrolled with **[↑]** key or **[↓]** key. Also, specific information can be displayed by directly entering that number with ten keys.

The upper two lines display the laser ON total hours. Data below minutes are omitted.

Clearing History Information

- ⊙ Clearing laser hours
Press **[DISPLAY]** and **[CLEAR]** keys in this order.
Both CD and DVD data are cleared.
- ⊙ Clearing emergency history
Press **[TITLE]** and **[CLEAR]** keys in this order.
- ⊙ Initializing set up data
Press **[DVD]** and **[CLEAR]** keys in this order.
The data have been initialized when "Set Up Initialized" message is displayed. The EMG. History screen will be restored soon.

How to see Emergency History

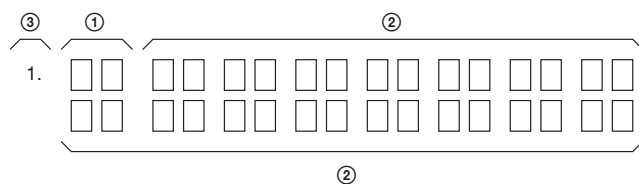

- ①: Emergency Code
- ②: Don't Care
These codes are used for verification of software designing.
- ③: Historical order 1 to 9.

Emergency Codes List

- 10: Communication to IC801 (MB-90 board) failed.
- 11: Each servo for focus, tracking, and spindle is unlocked.
- 12: Communication to EEPROM, IC001 (MB-90 board) failed.
- 13: Writing of hours meter data to EEPROM, IC001 (MB-90 board) failed.
- 14: Communication to Servo DSP IC952 (MB-90 board) failed, or Servo DSP is faulty.
- 20: Initialization of tilt servo and sled servo failed. They are not placed in the initial position.
- 21: Tilt servo operation error
- 24: Syscon made a request to move the sled servo to wrong position.
- 30: Tracking balance adjustment error
- 31: Tracking gain adjustment error
- 32: Focus balance adjustment error
- 33: Focus bias adjustment error
- 35: Tilt servo adjustment error
- 36: RF equalizer adjustment error
- 37: RF group delay adjustment error
- 38: Jitter value after adaptive servo operation is too large.
- 40: Focus servo does not operate.
- 41: With a dual layer (DL) disc, focus jump failed.
- 50: CLV (spindle) servo does not operate.
- 51: Spindle does not stop.
- 60: With a DVD disc, Syscon made a request to seek nonexistent address.
- 61: With a CD disc, Syscon made a request to seek nonexistent address.
- 62: With a CD disc, Syscon made a request to seek nonexistent track No. and index No.
- 63: With a DVD disc, seeking of target address failed.
- 64: With a CD disc, seeking of target address failed.
- 65: With a CD disc, seeking of target index failed.
- 70: With a DVD disc, physical information data could not be read.
- 71: With a CD disc, TOC data could not be read.
- 80: Disc type judgment failed.
- 81: As disc type judgment failed, retry was repeated.
- 82: As disc type judgment failed, a measurement error occurred.
- 83: Disc type could not be judged within the specified time.
- 84: Illegal command code was received from Syscon.
- 85: Illegal command was received from Syscon.

6-8. VERSION INFORMATION

## Version Information ##			
IF con.	Ver. x.	xxx	(xxx)
	Group	00	
SYScon.	Ver. x.	xxx	(xxx)
	Model	xx	
	Region	ux	
Servo DSP.	Ver. 1.	xxxx	
Exit : Return			


On the Test Mode Menu screen, selecting **[5]** displays the ROM version and region code.

The parenthesized hexadecimal number in version field is checksum value of ROM.

6-9. VIDEO LEVEL ADJUSTMENT

On the Test Mode Menu screen, selecting **[6]** displays color bars for video level adjustment. During display of color bars, OSD disappears but the menu screen will be restored if pressing any key.

Measuring point	: J351 (Video out) (terminat at 75Ω)
Measuring instrument	: Oscilloscope
Adjustment device	: RV651 on MB-90 board
Specified value	: $1.00^{+0.04}_{-0.02}$ Vp-p

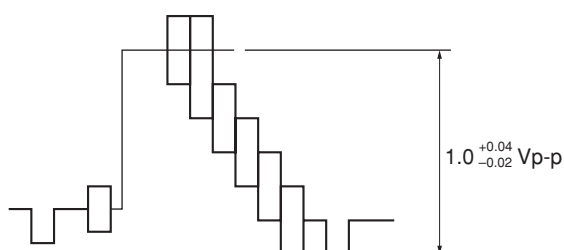

6-10. SELF-DIAGNOSIS OF IF CONTROLLER

1. IF Controller Test Mode

The IF controller test mode means the self-diagnosis mode of the IF controller. The test mode can diagnose the various blocks that are controlled by the IF controller.

The IF controller runs in accordance with the instructions of the system controller IC as it establishes the serial communication with the system controller IC to receive instructions. However, the IF controller runs by itself without receiving instructions from the system controller IC in the test mode.

The following functions can be checked using the test mode.

1. Button function
2. Remote control signal reception function
3. Serial communication between system controller IC and IF controller
4. LCD lighting check
5. Power control check
6. Charge control check

In the test mode, the machine performs the same operations as the normal state except the voltage monitoring, communication monitoring, LCD display, forced output of the test mode, TFT open monitoring and charge control.

1. The sub-routine to monitor + 3.3 V (PCONT) on the MB board is not included in the POWER ON sequence.
2. The timer to monitor the serial communication with the system controller IC is not included. Even if the communication with the system controller IC is not normal, the STANDBY display does not appear.
3. Indication on the LCD display (Indication on the LCD display normally appears according to the instructions from the system controller IC.)
4. The status that is specified by the test mode items No. 6, No. 7, No. 10 to No. 17 and N. 28 to No. 29 are kept maintained until the machine exits the test mode or the specific status is switched in test mode.
5. During the test mode, the TFT open monitoring input is ignored and is fixed to the open state.
6. The charge control that is specified by the test mode items No. 30 to No. 32. (Various protection routines are used normally.)

2. How To Enter The IF Controller Test Mode

In the STANDBY state, while pressing the **[STOP]** key, press the **[RETURN]** key and the **[DISPLAY MODE]** key at the same time on the remote control unit. Then the machine enters the test mode. When the machine enters the test mode, the LCD starts the automatic display sequence.


1. Backlight of the LCD turns on and all segments turns on for about 5 seconds.
2. Trial production model name appears. (The trial production model name is the representative model name of the series.)
Display
1020 – Model name DVP-FX1
3. Program version display
1000 → Ver 1.00
4. Date of the last update of the program appears.
Example: 000225
5. Returns to the all segments lighting. (Steps 1 to 4 are repeated.)

3. How To Exit The Test Mode


Press the **[0]** key and the **[ENTER]** key at the same time on the remote control unit. The test mode indication on the LCD disappears and the machine returns to the normal operating state.

Automatic indication sequence of LCD


- ① All segments turn on (5 seconds)

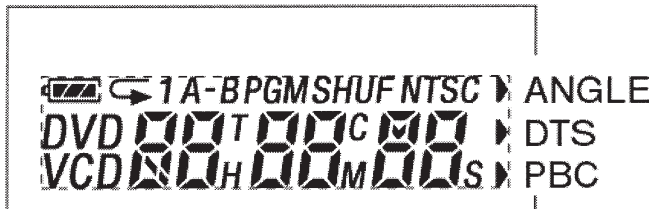


- ② Trial production model name appears. (2 seconds)

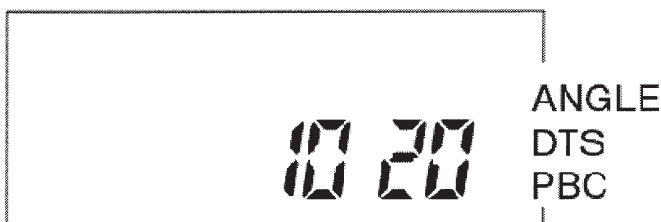

- ③ Program version display (2 seconds)

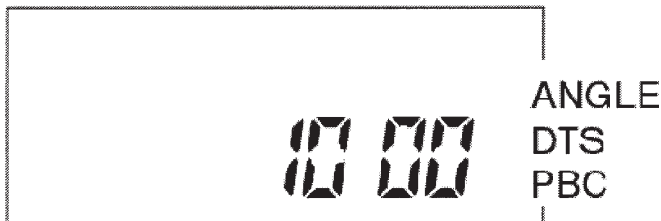

- ④ Date of the last update of the program appears. (2 seconds)

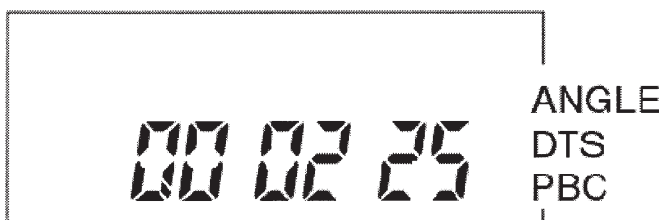

4. Description of IF Controller Function Check Mode

All functions can be operated by pressing the numeric key on the remote controller.

Example) Numeric key + **[ENTER]** key

0. Test Mode Cancel

Command : 00

Operation : Test mode cancel and the status that is selected and outputted during the test mode are cancelled.

LCD display : Normal DVD display

1. ROM version check

Command : 01

Operation : ROM version appears.

LCD display : "1000"

2. Model identification display

Command : 02

Operation : The identified model appears.

LCD display : "1020" or "1030"

3. Destination bit display

Command : 03

Operation : The identified XPALSET and US bit appear.

LCD display : "nt us" or "nt -" or "PAL us" or "PAL -"

4. All segments of LCD turn on

Command : 04

Operation : All segments of LCD turn on.

LCD display : All segments of LCD turn on.

5. LCD sequential display

Command : 05

Operation : Segments of LCD are sequentially turned on.

LCD display : Sequential display

6. LCD backlight OFF forced output

Command : 06

Operation : LCD backlight OFF

This state is maintained once this operation is specified.

LCD display : "06 - OFF"

7. LCD backlight ON forced output

Command : 07

Operation : LCD backlight ON

This state is maintained once this operation is specified.

LCD display : "07 - on"

8. KEY check

Command : 08
Operation : The LCD segments as many as the number of the key switches are turned on. Every pressing of the key switch turns off the corresponding segment. The test ends in success when all segments are turned off finally. If any key switches have already been pressed before the machine enters this test mode, the corresponding segment flashes.

LCD display : "05 – XX". XX means the key No.

Corresponding segment

STOP key	"DVD"	
PAUSE key	"CD"	
NEXT key	"V"	
PREVIOUS key	"BATTERY FRAME"	
TITLE key	"BATTERY 1"	
DVD MENU key	"BATTERY 2"	
RETURN key	"BATTERY 3"	
DISPLAY key	"REPEAT"	
LEFT key	"1"	
DOWN key	"A"	
ENTER key	"_"	
UP key	"B"	
RIGHT key	"PGM"	
PLAY key	"SHUFFLE"	
ASPECT switch	"NTSC"	DPX 1020 only

9. Operation check of the slide switch and detection switch

Command : 09
Operation : The input state of the respective switches is displayed on LCD.

LCD display : "abcdef"

- a : DOOR switch 1 check: "0" (open state) or "1" (close state)
- b : DOOR switch 2 check: "0" (open state) or "1" (close state)
- c : SRS switch check: "0" (SRS ON state) or "1" (SRS OFF state)
- d : HOLD switch check: "0" (HOLD ON state) or "1" (HOLD OFF state)
- e : VIDEO switch check: "0" (LINE OUT state) or "1" (LINE IN state)
- f : TFTPEN switch check: "0" (open state) or "1" (close state)

10. POWER_SAVE TFT inverter low output

Command : 10
Operation : Low output to panel backlight
This state is maintained once this operation is specified.
LCD display : "10 – Lo"

11. POWER_SAVE TFT inverter high output

Command : 11
Operation : High output to panel backlight
This state is maintained once this operation is specified.
LCD display : "11 – Hi"

12. Forced OFF output to TFT LCD INVPCON

Command : 12
Operation : The TFT LCD inverter is set to the forced OFF state.
This state is maintained once this operation is specified.
LCD display : "12 – OFF"

13. Forced ON output to TFT LCD INVPCON

Command : 13
Operation : The TFT LCD inverter is set to the forced ON state.
This state is maintained once this operation is specified.
LCD display : "13 – on"

14. Forced OFF output to TFT LCD power supply TFTPCON

Command : 14
Operation : The TFT LCD power supply TFTPCON is set to the forced OFF state.
This state is maintained once this operation is specified.
LCD display : "14 – OFF"

15. Forced ON output to TFT LCD power supply TFTPCON

Command : 15
Operation : The TFT LCD power supply TFTPCON is set to the forced ON state.
This state is maintained once this operation is specified.
LCD display : "15 – on"

16. TFT LCD panel forced PAL

Command : 16
Operation : The TFT LCD panel is forced to the PAL mode display.
This state is maintained once this operation is specified.
LCD display : "16 – Pal"

17. TFT LCD panel forced NTSC

Command : 17
Operation : The TFT LCD panel is forced to the NTSC mode display.
This state is maintained once this operation is specified.
LCD display : "17ntSc"

18. TEMP input voltage display

Command : 18
Operation : The TEMP input voltage is displayed on LCD.
* Valid voltage to the TEMP input
 $1.65 \text{ V (200 h)} \leq \text{TEMPMNT}$
LCD display : "18 – XXX". XXX is the input voltage.
* Display is around 356 under normal temperature.

19. Sleep mode test

Command : 19
Operation : The machine enters the sleep mode immediately after the forced POWER OFF processing is complete.
LCD display: Non

20. Monitoring communication with system controller

Command : 20
Operation : The communication status with system controller is displayed on LCD.
LCD display : "20 — " When communication error occurs.
LCD display : "20 – Sio" When communication is under way.

21. ROM creation date display

Command : 21
Operation : Date of the ifcon ROM creation is displayed on LCD.
LCD display : "990901"

22. Auto LCD test display

Command : 22
Operation : The following operation is repeated.
LCD all segments turn on (5 seconds) All segments turn on (5 seconds) → Model name display (2 seconds) → ROM version display (2 seconds) → ROM creation date display (2 seconds).

LCD display : As described above.

23. Initialization of the outputs that are set by the test mode

Command : 23
Operation : The forced output that is specified by the test mode item No. 6, No. 7, No. 10 to No. 7 and No. 30 to No. 32 are initialized.

LCD display : "23 - ini"

- *The TFT PANEL is set to the default state from the NTSC/PAL setting.
- *POWER_SAVE TFT inverter high output
- *Forced ON output to TFT LCD INVPCON
- *Forced ON output to TFT LCD power supply TFTP CON
- *LCD backlight check forced ON output
- *CHGCNT forced OFF output, LBCHG forced ON output

24. SW 3.3 V check

Command : 24
Operation : The 3.3 V input voltage is displayed on LCD.
* Valid range during POWER ON
 $2.02 \text{ V (272h)} \leq \text{PON_CHK} \leq 2.42 \text{ V (2FDh)}$

* Valid range during STAND-BY
 $\text{PON_CHK} \leq 0.1 \text{ V (01Fh)}$

LCD display : "24 - XXX". XXX is the input voltage.

* Reference value : This value is around 2C6.

25. DC_OUT check

Command : 25
Operation : The DC_OUT voltage is displayed on LCD.
* Valid voltage when the DC OUT JACK is connected.
 $1.28 \text{ V (18Dh)} \leq \text{DC OUT MNT}$

LCD display : "25 - XXX". XXX is the input voltage.

* Reference value : This value is around 1A8 to 198.

26. BATT-MNT check

Command : 26
Operation : The BATT voltage is displayed on LCD.
* Valid voltage when operated on battery.
 $1.43 \text{ V (1BDh)} \leq \text{BATMNT} < 2.03 \text{ V (276h)}$

LCD display : "26 - XXX". XXX is the input voltage.

* Reference value : This value is around 275 to 1BD.

27. DC_IN check

Command : 27
Operation : The DC_IN voltage is displayed on LCD.
* Valid voltage when operated on DC.
 $1.96 \text{ V (261h)} \leq \text{VCCMNT} < 2.65 \text{ V (335h)}$

LCD display : "27 - XXX". XXX is the input voltage.

* Reference value : This value is around 261 to 334.

28. TFT LCD EVR adjustment (NTSC setting)

Command : 28
Operation : Even when the LINE IN/OUT is switched by the VIDEO switch for the TFT LCD monitor EVR adjustment, the DVDPCON is maintained in the ON state and the V_IOCNT output is switched so that the LINE OUT picture or the LINE IN picture is output to the TFT LCD.

When the machine enters this mode, the state that is specified by the test mode is initialized.

* XPAL and EVR setting

During LINE IN mode

XPAL : NTSC setting

EVR : NTSC setting

During LINE OUT mode

XPAL : NTSC setting

EVR : NTSC setting

LCD display : "28-tFt" + NTSC segment display

29. TFT LCD EVR adjustment (PAL setting)

Command : 29
Operation : Even when the LINE IN/OUT is switched by the VIDEO switch for the TFT LCD monitor EVR adjustment, the DVDPCON is maintained in the ON state and the V_IOCNT output is switched so that the LINE OUT picture or the LINE IN picture is output to the TFT LCD.

When the machine enters this mode, the state that is specified by the test mode is initialized.

* XPAL and EVR setting

During LINE IN mode

XPAL : PAL setting

EVR : PAL setting

During LINE OUT mode (The XPAL is set to the NTSC setting in order to display the SYScon diagnosis display on the TFT LCD.)

XPAL : NTSC setting

EVR : PAL setting

LCD display : "29-tFt" + NTSC segment display

30. Forced CHGCNT ON & LBCHG OFF

Command : 30
Operation : The CHGCNT is forced to ON and the LBCHG is forced to OFF. (The charging processing is interrupted.)

When charging is in progress in the STAND-BY mode, the charging processing is interrupted.

When charging is in progress in the POWER ON mode, the machine enters the forced STAND-BY mode.

When 10 minutes have elapsed after the forced charge is set to ON, the forced charging is cancelled.

When charging is started by any commands other than this command, the machine follows their outputs after charging is started once.

LCD display : "30 - on"

31. CHGCNT OFF & LBCHG ON

Command : 31

Operation : The CHGCNT is forced to OFF and the LBCHG is forced to ON.

When charging is in progress in the STAND-BY mode, the charging processing is interrupted. When charging is in progress in the POWER ON mode, the machine enters the forced STAND-BY mode.

When charging is started by any commands other than this command, the machine follows their outputs after charging is started once.

LCD display : "31 – OFF"

32. Forced CHGCNT ON & LBCHG ON (State of forced charging the low voltage battery)

Command : 32

Operation : The CHGCNT is forced to ON and the LBCHG is forced to ON. (The charging processing is interrupted.)

When charging is in progress in the STAND-BY mode, the charging processing is interrupted. When charging is in progress in the POWER ON mode, the machine enters the forced STAND-BY mode.

When 10 minutes have elapsed after the forced charge is set to ON, the forced charging is cancelled.

When charging is started by any commands other than this command, the machine follows their outputs after charging is started once.

LCD display : "32 – on"

33. (intentionally left blank)

34. Forced STAND-BY state setting

Command : 34

Operation : When charging is in progress in the POWER ON mode, the machine enters the forced STAND-BY mode.

The charging processing is interrupted and the charging is re-started.

LCD display : "34 – St"

35. (intentionally left blank)

36. VCCMNT voltage during charging display

Command : 36

Operation : The VCCMNT voltage that is inputted by the charging sequence is displayed.

* Valid voltage of VCCMNT

$1.96 \text{ V (261h)} \leq \text{VCCMNT} < 2.65 \text{ V (335h)}$

LCD display : "36 – XXX". XXX is the input voltage.

* Reference value : This value is around 261 to 334.

37. CHGMNT voltage during charging display (when CHGMNT = ON)

Command : 37

Operation : The CHGMNT voltage that is inputted by the charging sequence is displayed. (Voltage when CHGMNT = ON)

* Valid voltage of BATTMTN

$5.0 \text{ V (156h)} \leq \text{BATTMTN} < 1.90 \text{ V (24Dh)}$

LCD display : "37 – XXX". XXX is the input voltage.

* Reference value : This value is around 156 to 24C.

38. CHGMNT voltage during charging display (when CHGMNT = OFF)

Command : 38

Operation : The CHGMNT voltage that is inputted by the charging sequence is displayed. (Voltage when CHGMNT = OFF)

* Valid voltage of BATTMTN

$\text{BATTMTN} < 1.90 \text{ V (24Dh)}$

LCD display : "38 – XXX". XXX is the input voltage.

* Reference value: This value is around 0 to 24C.

39. (intentionally left blank)

40. Charging status display

Command : 40

Operation : Charging status display

LCD display : "40 – XXX". XXX is the charging status data.

* Contents of the charging status display

00h : State waiting for starting of charging.

01h : Continuous charging is in progress.

02h : Full charged judgment processing is in progress.

03h : Supplementary charging of 1 hour is in progress.

04h : Normal charging is complete.

05h : The 1 hour timer has ended.

06h : The 12 hour timer has ended.

07h : Charging the low voltage battery is in progress during the continuous charging.

10h : Charging is terminated due to the charging condition error.

11h : Charging is terminated due to the abnormal voltage during continuous charging.

12h : Charging is terminated due to the abnormal voltage when full charged condition is detected.

13h : Charging is terminated due to the abnormal voltage during the supplementary charging. (Or normal end.)

14h : Charging is terminated due to abnormal voltage of 8.6 V or more of battery voltage when fully charged.

15h : Charging is terminated due to abnormal voltage of 5.0 V or less battery voltage when fully charged.

41. BATT switch check and BATTTYPE check

Command : 41

LCD display : "41 - m n"

m: BATT switch = "1" (Already connected state)
or "0" (Not connected yet state) display.

m: BATTTYPE = "1" (Lithium-ion battery) or "0"
(Other batteries than the lithium-ion battery)
display.

MEMO

SECTION 7 ELECTRICAL ADJUSTMENT

In making adjustment, refer to 6-4. Adjustment Related Parts Arrangement.

This section describes procedures and instructions necessary for adjusting electrical circuits in this set.

Instruments required

- 1) Color monitor TV
- 2) Oscilloscope 1 or 2 phenomena, band width over 100 MHz, with delay mode
- 3) Frequency counter (over 8 digits)
- 4) Digital voltmeter
- 5) Remote controller for adjustment
RMT-D100E (1-475-086-31) or
RMT-D101J (1-475-219-11) (1-475-219-21)
- 6) DVD standard disk
HCX510
HCX511
- 7) Extension Cable
(J-6090-101-A)

7-1. POWER SUPPLY BLOCK (TP-61 Board)

1. Power Supply Check

Mode	E-E
Instrument	Digital voltmeter
13 V Check	
Instrument	JL1103
Specifications	13 V
REG 7.5 V Check	
Instrument	JL1104
Specifications	7.5 V \pm 0.1 V
-5 V Check	
Instrument	JL1106
Specifications	-5.0 V \pm 0.1 V
-12 V Check	
Instrument	JL1107
Specifications	-12.0 V \pm 0.1 V

Checking method

- 1) Input 10 Vdc in De IN and confirm that each voltage satisfies the specifications.

2. 5V Power Supply Adjustment (TP-61 Board)

Mode	E-5
Measurement Point	JL1105
Instrument	Digital voltmeter
Adjustment element	RV1101
Specifications	5.05 V \pm 0.01 V


Adjustment method

- 1) Input 10 Vdc in DC IN.
- 2) Connect the digital voltmeter to JL1105.
- 3) Adjust RV1101 to attain 5.05 \pm 0.01 V.

3. Charge Voltage Adjustment (MB-90 Board)

Mode	CHG "30" is forced to be set in test mode
Measurement Point	Between JL501 \oplus and JL503 \ominus
Instrument	Digital voltmeter
Adjustment element	RV501
Specifications	8.43 V \pm 0.05 V

Connection

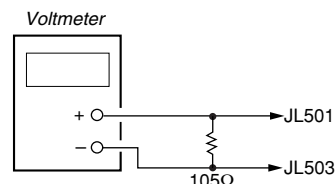


Adjustment method

- 1) Input 10 Vdc in DC IN.
- 2) Adjust RV501 to attain 8.43 V \pm 0.05 V.

4. Over Discharge Battery Protective Circuit Check (MB-90 Board)

Mode	"32" \rightarrow "31" in test mode (charge operation OFF)
Measurement Point	Between JL501 \oplus and JL503 \ominus
Instrument	Digital voltmeter
Specifications	7.0 V \pm 0.5 V

Connection

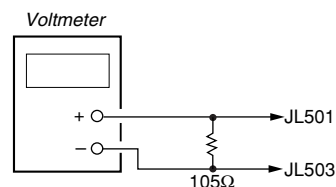

Checking method

- 1) Confirm that the voltage between JL501 \oplus and JL503 \ominus is 7.0 \pm 0.5 V.

7-2. SYSTEM CONTROL ADJUSTMENT (TP-61 Board)

1. Free Run Level Sync Frequency (or 19.98 MHz) Adjustment (TP-61 board)

Purpose

This is the reference clock for the MPEG system. If this adjustment is not performed, an error may occur during lock check.

Mode	EE
Measurement Point	JL1302 (JL1301)
Instrument	Frequency counter
Adjustment element	RV1302
Specifications	15.73 V \pm 0.6 KHz (PLL: 19.98 MHz)

Adjustment method

- 1) Connect the frequency counter to JL1302.
- 2) Adjust RV1302 to attain 15.73 V \pm 0.6 KHz.

2. Display Position Adjustment (TP-61 Board)

Mode	Playback
Signal	Monoscope
Instrument	LCD or monitor
Adjustment element	RV1301
Specifications	Display should be on the center.

Adjustment method

- 1) Play back the monoscope of TEST DISK HLK510.
- 2) Adjust RV1301 so that the image is on the center of the LCD or monitor.

7-3. VIDEO SYSTEM ADJUSTMENT

1. Video Level Adjustment (MB-90 Board)

Purpose

This adjustment is made to satisfy the standard, and if not adjusted correctly, the brightness will be too large or small.

Mode	Test mode "Video level Adjustment"
Signal	Color bars (100%)
Measurement point	J351 (terminated at 75 Ω)
Instrument	Oscilloscope
Adjustment element	RV651
Specifications	1.00 \pm $\begin{matrix} +0.04 \\ -0.02 \end{matrix}$ Vp-p

Checking method

- 1) In the test mode initial menu "Video Level Adjustment", set so that internal color bars are generated.
- 2) Adjust RV651 to attain 1.00 \pm $\begin{matrix} +0.04 \\ -0.02 \end{matrix}$ Vp-p.



Fig. 7-1

2. S-terminal Y Output Check (MB-90 Board)

Purpose

This checks S-terminal video output Y. If it is incorrect, correct brightness will not be attained when connected to, for instance, projector of the S-terminal input.

Mode	TEST DISK HLX510 Title 2
Signal	Color bars
Measurement point	J352 S-terminal Y output (terminated at 75 Ω)
Instrument	Oscilloscope
Specifications	1.00 \pm 0.05 Vp-p

Checking method

- 1) Play back TEST DISK HLX510 Title2.
- 2) Confirm that the S-Y level is 1.00 \pm 0.05 Vp-p.



Fig. 7-2


3. S-terminal Chroma Output Check (MB-90 Board)

Purpose

This adjustment is made to satisfy the standard, and if not adjusted correctly, the brightness will be too large or small.

Mode	TEST DISK HLK510 Title2 playback
Signal	Color bars
Measurement point	J352 S-terminal C output
Instrument	Oscilloscope
Specifications	286 ± 30 mVp-p (NTSC) 300 ± 30 mVp-p (PAL)

Connection

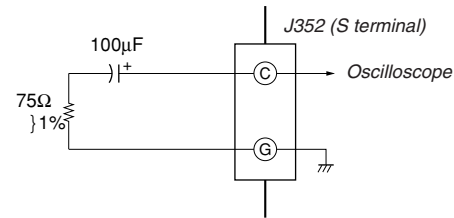

Checking method

- 1) Play back TEST DISK HLX510 Title2.
- 2) Confirm that the S-C burst is 286 ± 30 mVp-p.



Fig. 7-3


4. S-terminal Chroma DC Check (MB-90 Board)

Purpose

This check signals for S-terminal compatible TV. If they are not correct, the TV will not switch automatically to letter box mode, etc.

Mode	TEST DISK HLK510 Title5 playback
Signal	
Measurement point	J352 S-terminal C output (terminated at 100kΩ)
Instrument	Digital voltmeter
Specifications	5.0 \pm 0.5 Vdc

Connection

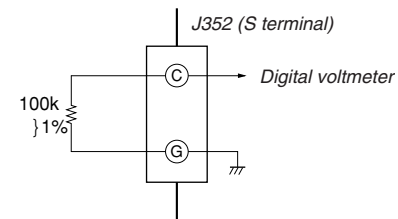


Checking method


- 1) Play back TEST DISK HLK510 Title5.
- 2) Confirm that the C output of the J352 S-terminal is 5.0 \pm 0.5 Vdc.

7-4. ARRANGEMENT DIAGRAM FOR ADJUSTMENT PARTS

MB-98 Board (Side A)

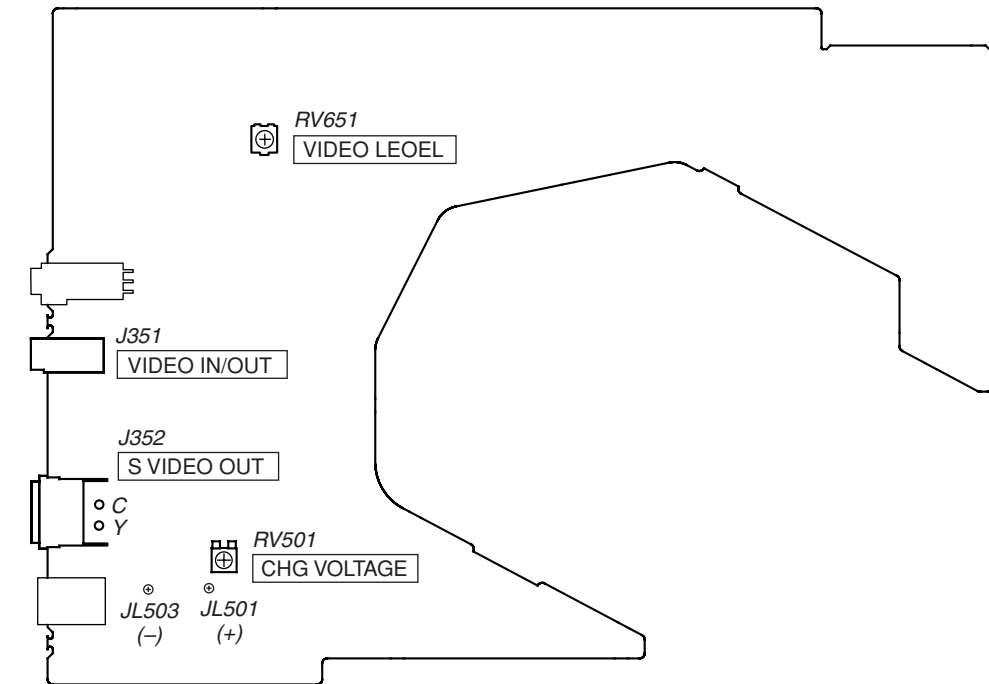

TP-61 Board (Side A)

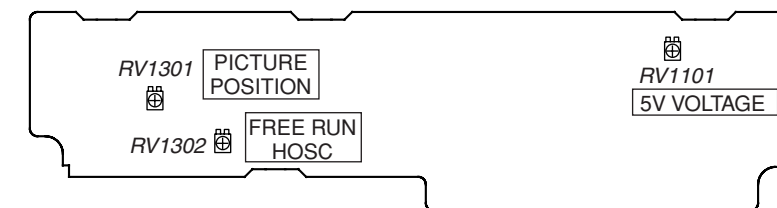

TP-61 Board (Side B)



MEMO

SECTION 8 REPAIR PARTS LIST

8-1. EXPLODED VIEWS

NOTE:


- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Abbreviation
 - CND : Canadian model
 - HK : Hong Kong model
 - CN : Chinese model
 - AUS : Australian model

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


以阴影和 \triangle 标志来识别的零部件在安全方面具有关键性。因此只能以规定号码的零部件来更换。

8-1-1. MAIN SECTION (FX1)

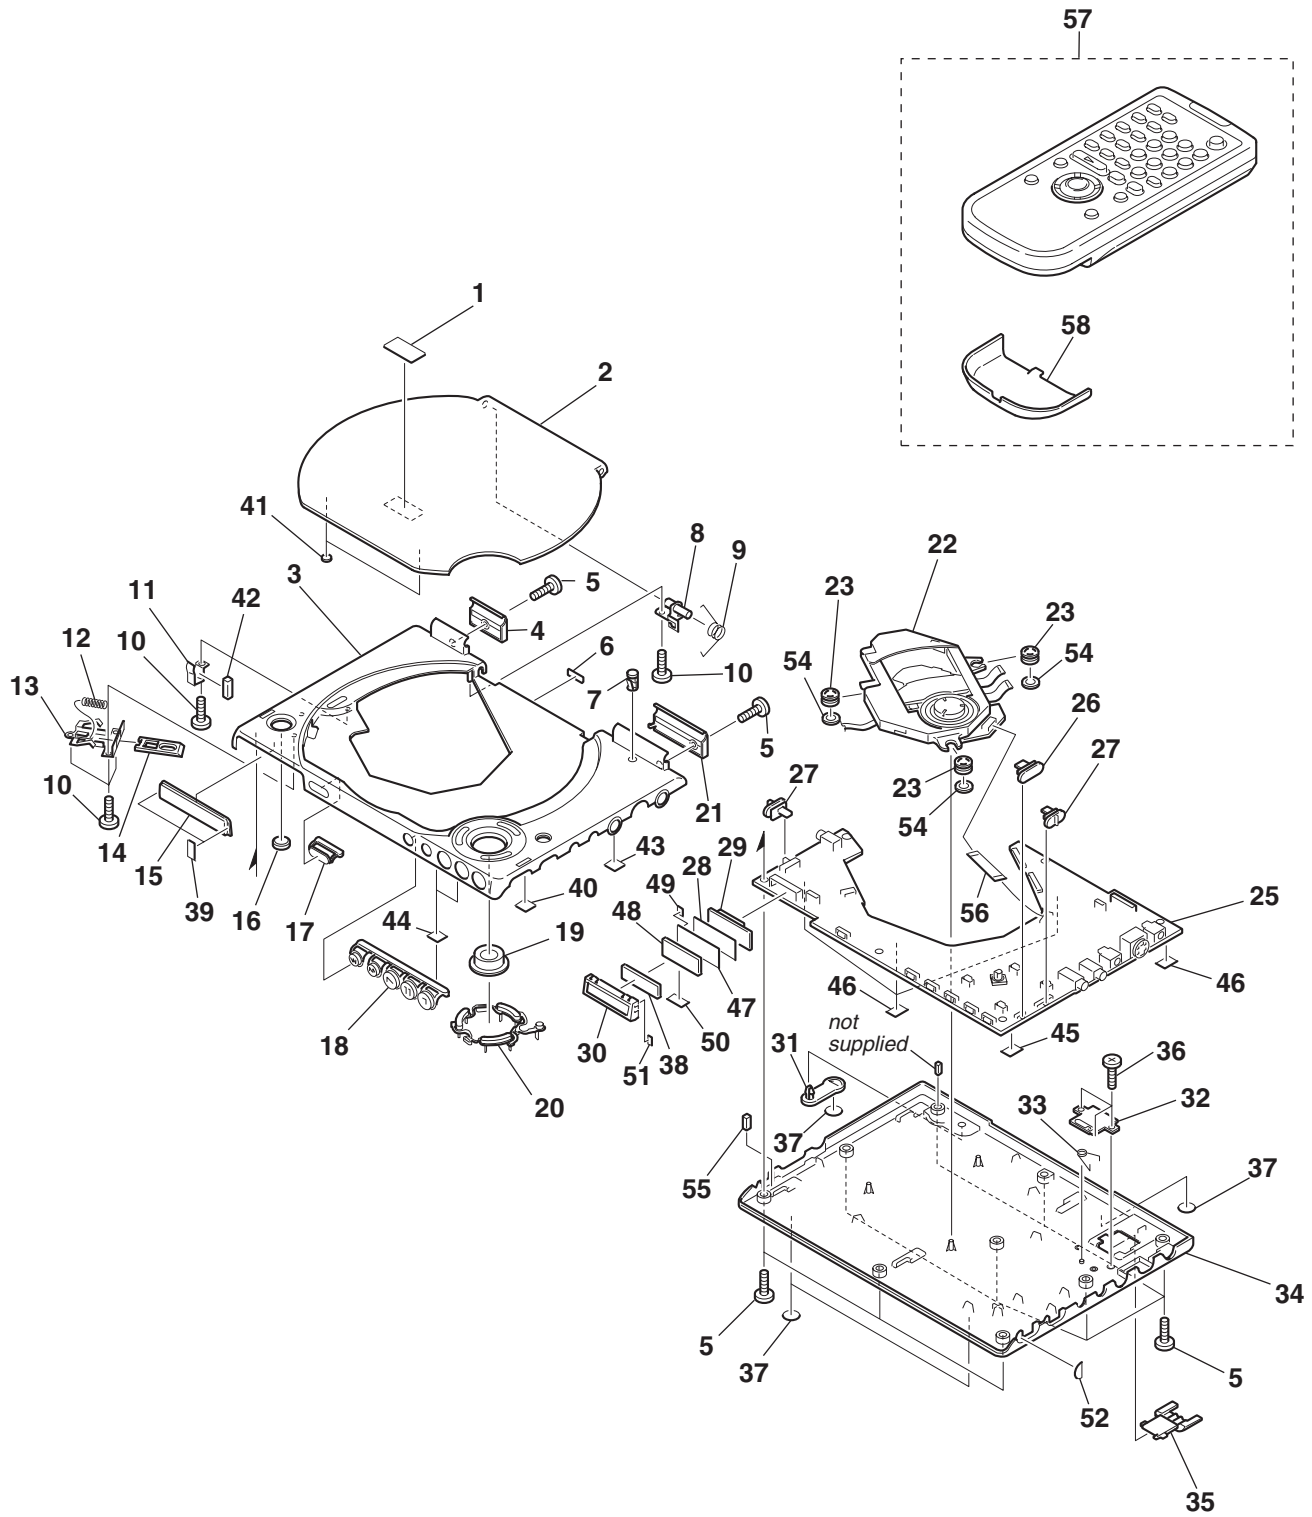


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	3-060-742-01	EMBLEM, DVD		* 29	A-6065-433-A	LC-68 COMPLE	
2	3-060-740-01	LID,CD		30	3-060-761-01	PLATE, LIGHT GUIDE	
3	3-060-731-01	CABINET (UPPER)		31	3-060-725-01	TABLE, RUBBER FOOT ROTARY	
4	3-060-728-01	COVER (L), FULCRUM		32	3-060-722-01	BRACKET, SHUTTER	
5	3-060-730-01	SCREW (M1.7X4)		33	3-060-723-01	SPRING (SHUTTER), TORSION	
6	3-062-580-01	CUSION (CD LID)		34	3-060-720-01	CABINET (LOWER)	
7	3-060-741-01	BOSS (LCD), DETECTION		35	3-060-721-01	SHUTTER	
8	X-3950-587-1	PLATE (CD LID) ASSY FULCRUM		36	3-060-724-01	PRECISION (M1.4), 0 PLATE	
9	3-060-736-01	SPRING (OPEN), TORSION		37	3-061-129-01	FOOT, RUBBER	
10	7-627-852-27	+P1.7X3		38	1-803-942-11	DISPLAY PANEL	
11	3-061-138-01	SPRING, CLICK		39	3-060-745-01	SHEET (TRANSPARENT PLATE)	
12	3-060-743-01	SPRING, COMPRESSION		40	3-062-578-01	SHEET (TMDR), ADHESIVE	
13	3-060-739-01	BRACKET (OPEN)		41	3-062-579-01	CUSHION (DIA 2.5)	
14	3-060-738-01	LEVER, LOCK		42	3-062-923-02	CUSHION (CLICK SPRING)	
15	3-060-734-01	PLATE (LCD), TRANSPARENT		43	3-063-209-02	SHEET (DC OUT)	
16	3-060-737-01	BUTTON, OPEN		44	3-063-152-01	SHEET (TD), ADHESIVE	
17	3-060-735-01	BUTTON, POWER		45	3-062-912-01	SHEET, LUMILER	
18	3-060-732-01	BUTTON (SPPS), CONTROL		46	4-926-729-01	CUSHION (F)	
19	3-060-759-01	BUTTON, CURSOR		47	3-060-760-01	BRACKET, LCD	
20	3-060-733-01	BUTTON (TMDR), CONTROL		48	3-060-762-01	SHEET, DIFFUSION	
21	3-060-729-01	COVER (R), FULCRUM		49	3-062-581-01	SHEET (LIGHT GUIDE PLATE)	
22	A-6066-015-A	AX-202 (J)		50	3-060-763-01	CONNECTOR, RUBBER	
23	4-221-927-11	INSULATOR		51	3-559-407-01	CUSHION, STOPPER	
* 25	A-6065-526-A	MB-90 COMPL (US, CND)		52	3-060-726-01	SEAL (HOLD)	
* 25	A-6065-527-A	MB-90 COMPL (AEP)		54	3-063-154-01	CUSHION (INSULATOR)	
* 25	A-6065-528-A	MB-90 COMPL (UK)		55	3-063-210-01	CUSHION (SPACER)	
* 25	A-6065-529-A	MB-90 COMPL (HK)		56	1-792-690-11	CABLE, FLEXIBLE FLAT 10P	
* 25	A-6065-530-A	MB-90 COMPL (CH)		57	1-418-987-11	REMOTE COMMANDER (RMT-D114A)	
26	3-060-764-01	KNOB, HOLD		58	3-709-572-01	COVER, BATTERY (FOR RMT-D114A)	
27	3-060-765-01	KNOB, I/O SELECTION (for LINE/HP SRS)					
28	3-061-130-01	SHEET, REFLECTION					

8-1-2. MAIN SECTION (F5)

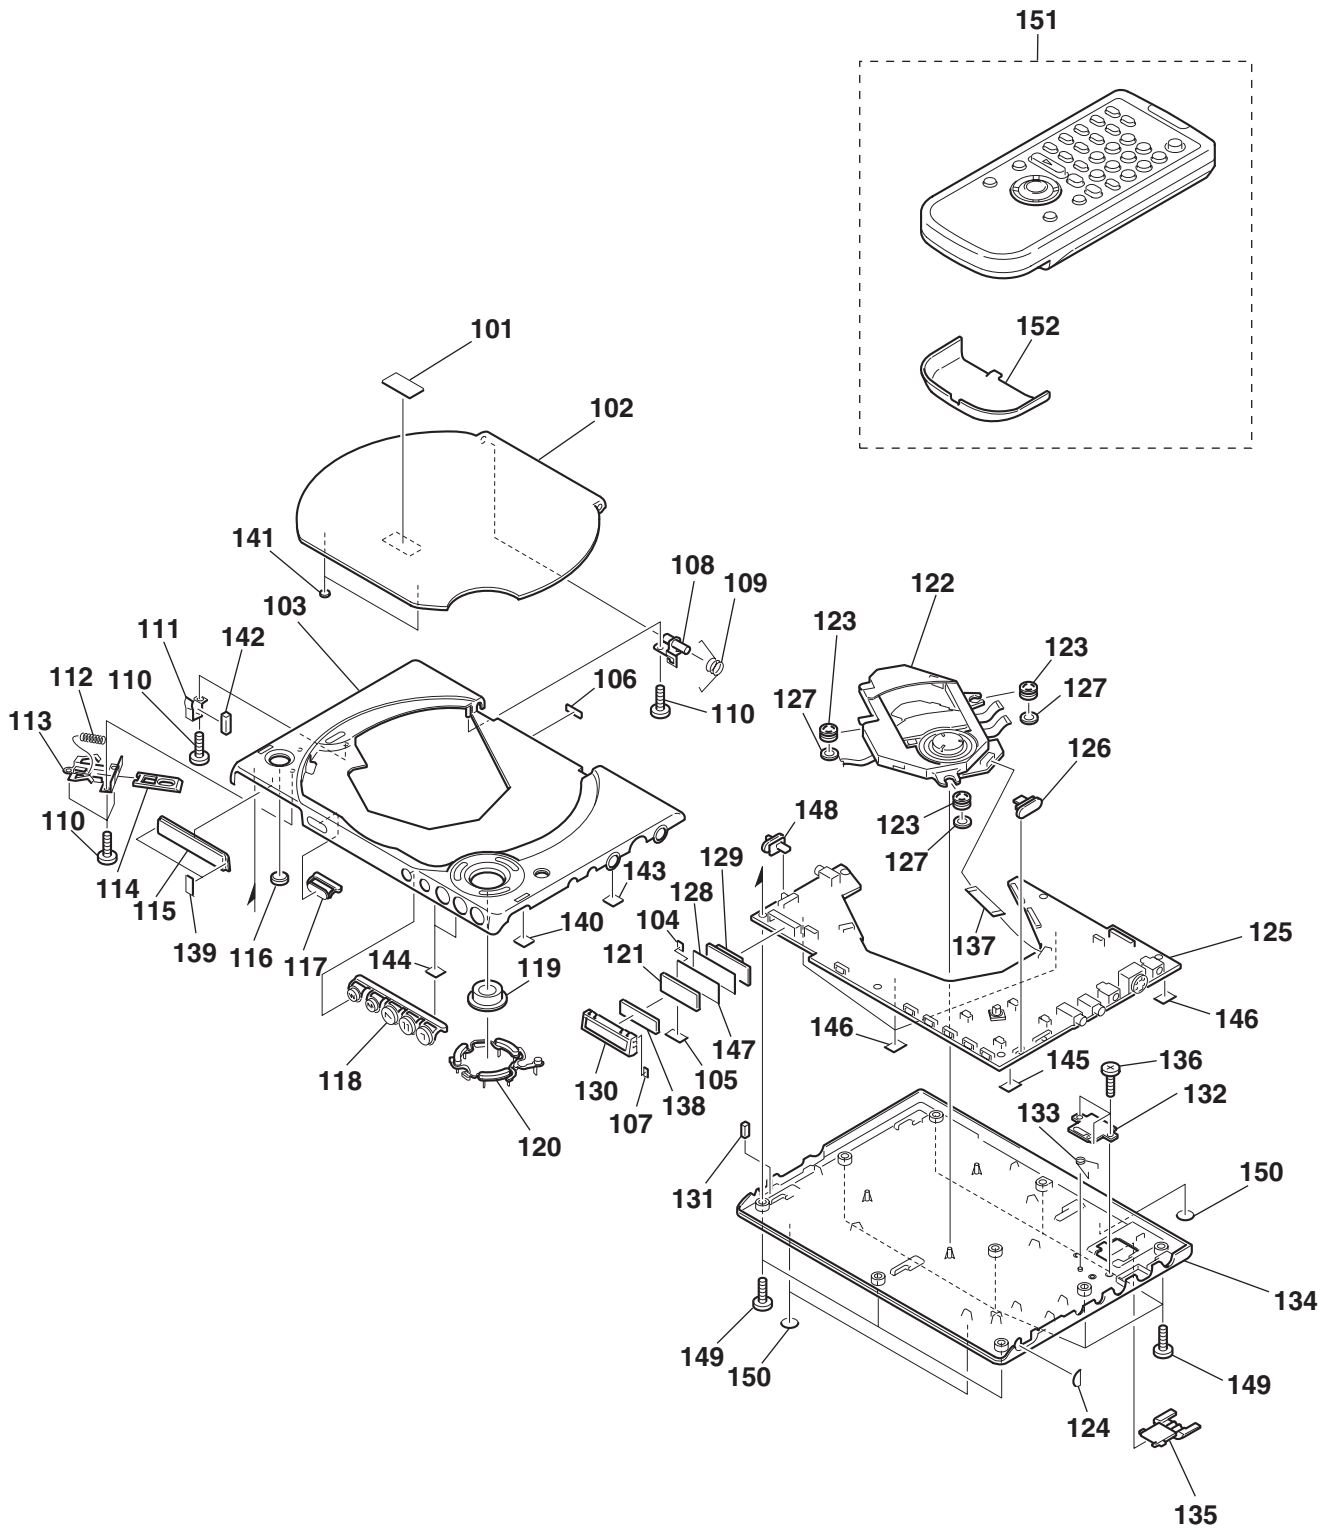

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
101	3-060-742-01	EMBLEM, DVD		126	3-060-764-01	KNOB, HOLD	
102	3-060-740-11	LID,CD		127	3-063-154-01	CUSHION (INSULATOR)	
103	3-060-731-11	CABINET (UPPER)		128	3-061-130-01	SHEET, REFLECTION	
104	3-062-581-01	SHEET (LIGHT GUIDE PLATE)		* 129	A-6065-433-A	LC-68 COMPLE	
105	3-060-763-01	CONNECTOR, RUBBER		130	3-060-761-01	PLATE, LIGHT GUIDE	
106	3-062-580-01	CUSION (CD LID)		131	3-063-210-01	CUSHION (SPACER)	
107	3-559-407-01	CUSHION, STOPPER		132	3-060-722-01	BRACKET, SHUTTER	
108	X-3950-587-1	PLATE (CD LID) ASSY FULCRUM		133	3-060-723-01	SPRING (SHUTTER), TORSION	
109	3-060-736-01	SPRING (OPEN), TORSION		134	3-060-720-11	CABINET (LOWER)	
110	7-627-852-27	+P1.7X3		135	3-060-721-01	SHUTTER	
111	3-061-138-01	SPRING, CLICK		136	3-060-724-01	PRECISION (M1.4), 0 PLATE	
112	3-060-743-01	SPRING, COMPRESSION		137	1-792-690-11	CABLE, FLEXIBLE FLAT 10P	
113	3-060-739-01	BRACKET (OPEN)		138	1-803-942-11	DISPLAY PANEL, LIQUID CRYSTAL	
114	3-060-738-01	LEVER, LOCK		139	3-060-745-01	SHEET (TRANSPARET PLATE)	
115	3-060-734-01	PLATE (LCD), TRANSPARENT		140	3-062-578-01	SHEET (TMDR), ADHESIVE	
116	3-060-737-01	BUTTON, OPEN		141	3-062-579-01	CUSHION (DIA 2.5)	
117	3-060-735-01	BUTTON, POWER		142	3-062-923-02	CUSHION (CLICK SPRING)	
118	3-060-732-01	BUTTON (SPPS), CONTROL		143	3-063-209-02	SHEET (DC OUT)	
119	3-060-759-01	BUTTON, CURSOR		144	3-063-152-01	SHEET (TD), ADHESIVE	
120	3-060-733-01	BUTTON (TMDR), CONTROL		145	3-062-912-01	SHEET, LUMILER	
121	3-060-762-01	SHEET, DIFFUSION		146	4-926-729-01	CUSHION (F)	
122	A-6066-015-A	AX-202		147	3-060-760-01	BRACKET, LCD	
123	4-221-927-11	INSULATOR		148	3-060-765-01	KNOB, I/O SELECTION (for LINE/HP SRS)	
124	3-060-726-01	SEAL (HOLD)		149	3-060-730-01	SCREW (M1.7X4)	
* 125	A-6065-521-A	MB-90 COMPL (AEP)		150	3-061-129-01	FOOT, RUBBER	
* 125	A-6065-522-A	MB-90 COMPL (UK)		151	1-418-987-11	REMOTE COMMANDER (RMT-D114A)	
* 125	A-6065-524-A	MB-90 COMPL (AUS)		152	3-709-572-01	COVER, BATTERY (FOR RMT-D114A)	
* 125	A-6065-525-A	MB-90 COMPL (CH)					

8-1-3. LCD SECTION (FX1)

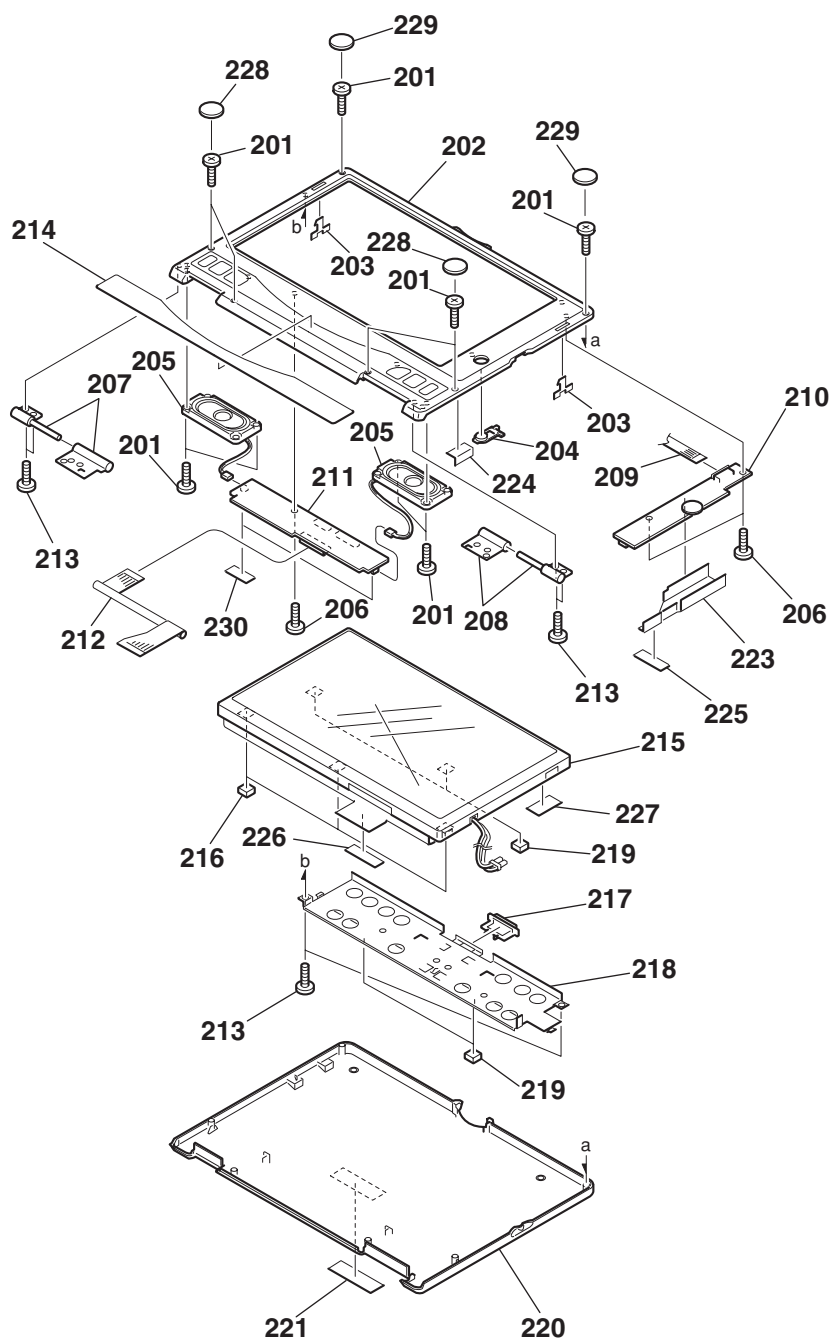

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
201	3-060-730-01	SCREW (M1.7X4)		215	1-803-941-11	DISPLAY PANEL, LIQUID CRYSTAL	
202	3-060-750-01	COVER, LCD		216	4-638-847-01	CUSHION, HOLDER	
203	3-060-754-01	CLAW, LOCK		217	3-060-753-01	BUTTON (LCD), OPEN	
204	3-060-752-01	BUTTON, MODE		218	X-3950-588-1	CHASSIS ASSY, LINK	
205	1-529-633-11	SPEAKER (4X2CM)		219	3-062-234-01	CUSHION (A)	
206	3-060-757-01	SCREW (M1.7X2)		220	3-060-746-01	CABINET, LCD	
207	3-060-751-01	HINGE, TORQUE		221	3-060-747-01	EMBLEM, SONY	
208	3-060-758-01	HINGE, DUMMY		223	3-060-755-01	COVER (INV), INSULATING	
209	1-792-691-11	CABLE, FLEXIBLE FLAT		224	3-062-750-01	COVER (BL) INSULATING	
210	1-418-888-11	INVERTER		225	3-941-343-01	TAPE (A)	
* 211	A-6065-432-A	TP-61 COMPL (AEP,UK,CN,HK)		226	3-062-235-01	SHEET (LCD), PROTECTION	
* 211	A-6065-531-A	TP-61 COMPL (US,CND)		227	3-062-236-01	SHEET (INV), PROTECTION	
212	1-678-130-11	PWB, FLEXIBLE		228	3-060-749-01	CUSHION, RLIND	
213	7-627-857-27	+P1.7X3		229	3-060-748-01	CUSHION (LCD)	
214	3-060-756-01	GRILLE, SPEAKER		230	3-321-147-01	CUSHION (C)	

LC-68

MB-90

8-2. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:
uF: μ F

- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- COILS
uH: μ H
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A..., uPA..., μ PA...,
uPB..., μ PB..., uPC..., μ PC...,
uPD..., μ PD...
- Abbreviation:
CND : Canadian model
HK : Hong Kong model
CN : Chinese model
AUS : Australian model

When indicating parts by reference number, please include the board name.

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 \triangle 标志来识别的零部件在安全方面具有关键性。因此只能以规定号码的零部件来更换。

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
*	A-6065-433-A	LC-68 BOARD, COMPLETE *****		C006	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
		< CONNECTOR >		C007	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
CN1001	1-691-477-21	CONNECTOR, BOARD TO BOARD 28P < DIODE >		C008	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
D1006	8-719-080-36	DIODE FA1113F-732-TR		C009	1-162-919-11	CERAMIC CHIP 22PF 5%	50V
D1012	8-719-080-36	DIODE FA1113F-732-TR < RESISTOR >		C010	1-162-915-11	CERAMIC CHIP 10PF 0.5PF	50V
R1003	1-216-811-11	METAL CHIP 150 5% 1/16W		C011	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
R1008	1-216-864-11	METAL CHIP 0 5% 1/16W		C012	1-104-852-11	TANTAL. CHIP 22uF 20%	10V
				C013	1-104-852-11	TANTAL. CHIP 22uF 20%	10V
				C014	1-107-826-91	CERAMIC CHIP 0.1uF 10%	16V
				C015	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
				C016	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
				C017	1-107-826-91	CERAMIC CHIP 0.1uF 10%	16V
				C018	1-107-826-91	CERAMIC CHIP 0.1uF 10%	16V
				C020	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
				C101	1-164-739-11	CERAMIC CHIP 560PF 5%	50V
				C103	1-164-217-11	CERAMIC CHIP 150PF 5%	50V
*	A-6065-526-A	MB-90 BOARD, COMPLETE (FX1:US,CND) *****		C105	1-117-919-11	TANTAL. CHIP 10uF 20%	6.3V
*	A-6065-520-A	MB-90 BOARD, COMPLETE (F5:US,CND) *****		C106	1-162-960-11	CERAMIC CHIP 220PF 10%	50V
*	A-6065-527-A	MB-90 BOARD, COMPLETE (FX1:AEP) *****		C107	1-164-217-11	CERAMIC CHIP 150PF 5%	50V
*	A-6065-521-A	MB-90 BOARD, COMPLETE (F5:AEP) *****		C108	1-164-217-11	CERAMIC CHIP 150PF 5%	50V (FX1)
*	A-6065-528-A	MB-90 BOARD, COMPLETE (FX1:UK) *****		C109	1-109-982-11	CERAMIC CHIP 1uF 10%	10V
*	A-6065-522-A	MB-90 BOARD, COMPLETE (F5:UK) *****		C110	1-109-982-11	CERAMIC CHIP 1uF 10%	10V
*	A-6065-530-A	MB-90 BOARD, COMPLETE (FX1:CN) *****		C111	1-109-982-11	CERAMIC CHIP 1uF 10%	10V (FX1)
*	A-6065-525-A	MB-90 BOARD, COMPLETE (F5:CN) *****		C112	1-125-899-11	TANTAL. CHIP 220uF 20%	4V
*	A-6065-529-A	MB-90 BOARD, COMPLETE (FX1:HK) *****		C113	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V
*	A-6065-524-A	MB-90 BOARD, COMPLETE (F5:AUS) *****		C114	1-164-217-11	CERAMIC CHIP 150PF 5%	50V
		< CONNECTOR >		C116	1-164-384-11	CERAMIC CHIP 130PF 5%	50V
BT501	1-694-678-21	CONNECTOR, BLOCK (BATTERY CHARGE) < CAPACITOR >		C117	1-107-823-11	CERAMIC CHIP 0.47uF 10%	16V (FX1)
C001	1-162-919-11	CERAMIC CHIP 22PF 5% 50V		C118	1-164-492-11	CERAMIC CHIP 0.15uF 10%	16V
C002	1-162-919-11	CERAMIC CHIP 22PF 5% 50V		C119	1-107-823-11	CERAMIC CHIP 0.47uF 10%	16V (FX1)
C003	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		C120	1-109-982-11	CERAMIC CHIP 1uF 10%	10V
C004	1-104-851-11	TANTAL. CHIP 10uF 20% 10V		C201	1-164-739-11	CERAMIC CHIP 560PF 5%	50V
C005	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V		C203	1-164-217-11	CERAMIC CHIP 150PF 5%	50V
				C205	1-117-919-11	TANTAL. CHIP 10uF 20%	6.3V
				C206	1-162-960-11	CERAMIC CHIP 220PF 10%	50V
				C207	1-164-217-11	CERAMIC CHIP 150PF 5%	50V
				C208	1-164-217-11	CERAMIC CHIP 150PF 5%	50V (FX1)
				C209	1-109-982-11	CERAMIC CHIP 1uF 10%	10V
				C210	1-109-982-11	CERAMIC CHIP 1uF 10%	10V
				C211	1-109-982-11	CERAMIC CHIP 1uF 10%	10V (FX1)

MB-90

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
C212	1-125-899-11	TANTAL. CHIP	220uF	20%	4V	C348	1-110-569-11	TANTAL. CHIP	47uF	20%	6.3V
C213	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V	C349	1-125-822-11	TANTALUM	10uF	20%	10V
C214	1-164-217-11	CERAMIC CHIP	150PF	5%	50V	C350	1-109-982-11	CERAMIC CHIP	1uF	10%	0V
C216	1-164-384-11	CERAMIC CHIP	130PF	5%	50V	C351	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C217	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V						(FX1)
					(FX1)	C352	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
											(FX1)
C218	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V	C353	1-125-822-11	TANTALUM	10uF	20%	10V
C219	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V						(FX1)
					(FX1)	C354	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C220	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	C355	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C301	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V						(FX1)
C302	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C356	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
						C357	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
											(FX1)
C303	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C358	1-125-822-11	TANTALUM	10uF	20%	10V
C304	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C359	1-125-899-11	TANTAL. CHIP	220uF	20%	4V
C305	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C360	1-127-895-91	TANTAL. CHIP	22uF	20%	4V
C306	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C361	1-125-899-11	TANTAL. CHIP	220uF	20%	4V
C307	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C362	1-127-895-91	TANTAL. CHIP	22uF	20%	4V
C308	1-104-852-11	TANTAL. CHIP	22uF	20%	10V	C363	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C309	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C364	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
C310	1-135-177-21	TANTALUM CHIP	1uF	20%	20V						(FX1)
C311	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C365	1-162-918-11	CERAMIC CHIP	18PF	5%	50V
C312	1-135-177-21	TANTALUM CHIP	1uF	20%	16V	C366	1-162-918-11	CERAMIC CHIP	18PF	5%	50V
						C368	1-162-921-11	CERAMIC CHIP	33PF	5%	50V
C314	1-125-822-11	TANTALUM	10uF	20%	10V						
C315	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C369	1-162-921-11	CERAMIC CHIP	33PF	5%	50V
C316	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C370	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C317	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C371	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C318	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V						(FX1)
						C372	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C319	1-119-750-11	TANTAL. CHIP	22uF	20%	6.3V						(FX1)
C320	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V	C373	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C321	1-125-822-11	TANTALUM	10uF	20%	10V						(FX1)
C322	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V						
C323	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V						
						C380	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C324	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C401	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C325	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C402	1-127-820-91	CERAMIC	4.7uF		16V
C326	1-113-601-11	TANTAL. CHIP	1uF	20%	10V	C403	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C327	1-104-852-11	TANTAL. CHIP	22uF	20%	10V	C404	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C328	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V						
						C405	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C329	1-104-912-11	TANTAL. CHIP	3.3uF	20%	16V	C406	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C330	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C407	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C331	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C408	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C332	1-104-912-11	TANTAL. CHIP	3.3uF	20%	16V	C409	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C333	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V						
					(FX1)	C410	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C334	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	C411	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C335	1-113-500-11	TANTAL. CHIP	100uF	20%	10V	C412	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
					(FX1)	C413	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C336	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C414	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C337	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V						
					(FX1)	C415	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C338	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C416	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
						C417	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C341	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C418	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C343	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C419	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C345	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V						
C346	1-125-822-11	TANTALUM	10uF	20%	10V	C420	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C347	1-119-750-11	TANTAL. CHIP	22uF	20%	6.3V	C421	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
						C422	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
						C423	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
						C424	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
C425	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V	C616	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C426	1-127-573-91	CERAMIC CHIP	1uF	10%	16V	C617	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C427	1-127-573-91	CERAMIC CHIP	1uF	10%	16V	C618	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C434	1-125-990-11	ELECT CHIP	47uF	20%	20V	C619	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C435	1-115-581-11	TANTAL. CHIP	100uF	20%	16V	C620	1-111-253-11	TANTAL. CHIP	100uF	20%	6.3V
C436	1-125-990-11	ELECT CHIP	47uF	20%	20V	C621	1-104-852-11	TANTAL. CHIP	22uF	20%	10V
C437	1-125-990-11	ELECT CHIP	47uF	20%	20V	C622	1-110-569-11	TANTAL. CHIP	47uF	20%	6.3V
C438	1-125-990-11	ELECT CHIP	47uF	20%	20V	C623	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C439	1-125-990-11	ELECT CHIP	47uF	20%	20V	C624	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C440	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C625	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C441	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C626	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C442	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C627	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C443	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C628	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C444	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C629	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C445	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C630	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C447	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C631	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C452	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C632	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C453	1-125-822-11	TANTALUM	10uF	20%	10V	C651	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C454	1-125-822-11	TANTALUM	10uF	20%	10V	C652	1-125-822-11	TANTALUM	10uF	20%	10V
C455	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C653	1-125-822-11	TANTALUM	10uF	20%	10V
C456	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C654	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C457	1-125-822-11	TANTALUM	10uF	20%	10V	C655	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C458	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C656	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C459	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C657	1-104-913-11	TANTAL. CHIP	10uF	20%	16V
C460	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C658	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C461	1-127-573-91	CERAMIC CHIP	1uF	10%	16V	C659	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C462	1-127-573-91	CERAMIC CHIP	1uF	10%	16V	C660	1-104-852-11	TANTAL. CHIP	22uF	20%	6.3V
C463	1-127-573-91	CERAMIC CHIP	1uF	10%	16V	C661	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C464	1-127-573-91	CERAMIC CHIP	1uF	10%	16V	C662	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C465	1-113-642-11	TANTAL. CHIP	47uF	20%	10V	C663	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C501	1-127-820-91	CERAMIC	4.7uF		16V	C664	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C502	1-117-681-11	ELECT CHIP	100uF	20%	16V	C665	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C503	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C666	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C504	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V	C667	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C505	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C668	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C507	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C669	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C508	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C670	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C510	1-135-407-21	TANTAL. CHIP	47uF	20%	16V	C671	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C515	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C672	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C516	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C675	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C601	1-110-563-11	CERAMIC CHIP	0.068uF	10%	16V	C676	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C602	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V	C677	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C603	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C678	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C604	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C679	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C605	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C680	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C606	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C681	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C607	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C682	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C608	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C683	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C609	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C684	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C610	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C685	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C611	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C686	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C612	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C687	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C613	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C688	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C614	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C689	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C615	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C690	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V

MB-90

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C701	1-125-822-11	TANTALUM	10uF 20% 10V	C840	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C702	1-135-149-21	TANTALUM CHIP	2.2uF 20% 10V	C841	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V
C703	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C842	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V
C704	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C843	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V
C705	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C844	1-164-217-11	CERAMIC CHIP	150PF 5% 50V
C706	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C845	1-162-962-11	CERAMIC CHIP	470PF 10% 50V
C707	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C846	1-107-823-11	CERAMIC CHIP	0.47uF 10% 16V
C708	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	C847	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C709	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	C852	1-125-822-11	TANTALUM	10uF 20% 10V
C710	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	C853	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C711	1-115-467-11	CERAMIC CHIP	0.22uF 10% 10V	C854	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C712	1-104-914-11	TANTAL. CHIP	22uF 20% 16V	C855	1-113-642-11	TANTAL. CHIP	47uF 20% 10V
C713	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C857	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V
C715	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V	C858	1-162-915-11	CERAMIC CHIP	10PF 0.5PF 50V
C716	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C863	1-162-962-11	CERAMIC CHIP	470PF 10% 50V
C717	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C864	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C718	1-127-820-91	CERAMIC	4.7uF 16V (FX1)	C868	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C719	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C871	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C720	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C875	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C722	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C876	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C801	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C877	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C802	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C878	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C803	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C879	1-164-245-11	CERAMIC CHIP	0.015uF 10% 25V
C804	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C881	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V
C805	1-125-822-11	TANTALUM	10uF 20% 10V	C882	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V
C806	1-125-822-11	TANTALUM	10uF 20% 10V	C883	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C807	1-125-822-11	TANTALUM	10uF 20% 10V	C884	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C808	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	C885	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C809	1-125-822-11	TANTALUM	10uF 20% 10V	C886	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C810	1-125-822-11	TANTALUM	10uF 20% 10V	C887	1-162-923-11	CERAMIC CHIP	47PF 5% 50V
C811	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C888	1-110-563-11	CERAMIC CHIP	0.068uF 10% 16V
C812	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C889	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C813	1-164-172-11	CERAMIC CHIP	0.0056uF 10% 25V	C890	1-125-822-11	TANTALUM	10uF 20% 10V
C814	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	C891	1-110-569-11	TANTAL. CHIP	47uF 20% 4V
C815	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	C892	1-110-569-11	TANTAL. CHIP	47uF 20% 4V
C816	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	C893	1-162-923-11	CERAMIC CHIP	47PF 5% 50V
C817	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	C894	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C818	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C895	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V
C823	1-125-822-11	TANTALUM	10uF 20% 10V	C897	1-110-563-11	CERAMIC CHIP	0.068uF 10% 16V
C824	1-125-822-11	TANTALUM	10uF 20% 10V	C898	1-164-315-11	CERAMIC CHIP	470PF 5% 50V
C825	1-164-172-11	CERAMIC CHIP	0.0056uF 10% 25V	C899	1-125-822-11	TANTALUM	10uF 20% 10V
C826	1-164-739-11	CERAMIC CHIP	560PF 5% 50V	C901	1-164-315-11	CERAMIC CHIP	470PF 5% 50V
C827	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C902	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C828	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V	C903	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C829	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	C904	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C830	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	C905	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C831	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C906	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C832	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C907	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C833	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C908	1-125-822-11	TANTALUM	10uF 20% 10V
C834	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	C909	1-125-891-11	CERAMIC CHIP	0.47uF 10% 10V
C835	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	C910	1-125-891-11	CERAMIC CHIP	0.47uF 10% 10V
C836	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C952	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V
C837	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V	C953	1-125-822-11	TANTALUM	10uF 20% 10V
C838	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V	C954	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C839	1-125-822-11	TANTALUM	10uF 20% 10V	C955	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C956	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	D501	8-719-941-86	DIODE	DAN202UT106
C957	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	D502	8-719-066-98	DIODE	RB051L-40TE25
C958	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	D503	8-719-073-35	DIODE	RB551V-30TE-17
C959	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	D504	8-719-066-98	DIODE	RB051L-40TE25
C960	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	D505	8-719-066-98	DIODE	RB051L-40TE25
C961	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	D506	8-719-066-98	DIODE	RB051L-40TE25
C962	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	D508	8-719-941-23	DIODE	DA204UT106
C963	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D601	8-719-071-87	DIODE	MA785- (TX),SO
C964	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V	D651	8-719-062-16	DIODE	01ZA8.2 (TPL3)
C965	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V	D652	8-719-062-16	DIODE	01ZA8.2 (TPL3)
C966	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V	D653	8-719-062-16	DIODE	01ZA8.2 (TPL3)
C967	1-125-822-11	TANTALUM	10uF 20% 10V	D801	8-719-988-61	DIODE	1SS355TE-17
C968	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	D802	8-719-988-61	DIODE	1SS355TE-17
C969	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	D803	8-719-066-16	DIODE	RB491D-T146
C970	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	D805	8-719-988-61	DIODE	1SS355TE-17
C971	1-163-021-91	CERAMIC CHIP	0.01uF 10% 50V	D806	8-719-062-16	DIODE	01ZA8.2 (TPL3)
C972	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	D807	8-719-062-16	DIODE	01ZA8.2 (TPL3)
C973	1-115-467-11	CERAMIC CHIP	0.22uF 10% 10V	D808	8-719-988-61	DIODE	1SS355TE-17
C974	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	D809	8-719-988-61	DIODE	1SS355TE-17
C975	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V			< FUSE >	
C976	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	△F401	1-576-410-21	FUSE, CHIP (2A)	
C977	1-164-156-11	CERAMIC CHIP	0.1uF 25V	△F402	1-533-922-21	FUSE, CHIP	
		< CONNECTOR >		△F501	1-533-952-21	FUSE, CHIP	
CN001	1-779-884-11	CONNECTOR 4P		△F502	1-533-952-21	FUSE, CHIP (FX1:3.15A)	
CN701	1-691-538-11	CONNECTOR, BOARD TO BOARD 28P		△F502	1-576-410-21	FUSE, CHIP (F5:2A)	
CN702	1-779-330-21	CONNECTOR, FFC/FPC 12P				< FERRITE BEAD >	
CN703	1-794-620-11	CONNECTOR, FFC/FPC (ZIF) 32P (FX1)		FB001	1-414-226-21	INDUCTOR CHIP 0UH	
CN801	1-794-186-21	CONNECTOR, FPC (ZIF) 18P		FB002	1-414-226-21	INDUCTOR CHIP 0UH	
CN802	1-794-187-21	CONNECTOR, FPC (ZIF) 16P		FB003	1-414-226-21	INDUCTOR CHIP 0UH	
CN803	1-794-188-21	CONNECTOR, FPC (ZIF) 7P		FB004	1-414-226-21	INDUCTOR CHIP 0UH	
*CN804	1-793-751-21	CONNECTOR, FPC (ZIF) 10P		FB005	1-414-226-21	INDUCTOR CHIP 0UH	
CN951	1-785-125-21	CONNECTOR 6P		FB006	1-414-226-21	INDUCTOR CHIP 0UH	
		< DIODE >		FB101	1-469-117-21	FERRITE 0UH	
D101	8-719-062-16	DIODE	01ZA8.2 (TPL3)	FB102	1-414-445-11	FERRITE 0UH	
D102	8-719-062-16	DIODE	01ZA8.2 (TPL3)	FB103	1-414-445-11	FERRITE 0UH	
D201	8-719-062-16	DIODE	01ZA8.2 (TPL3)	FB201	1-469-117-21	FERRITE 0UH	
D202	8-719-062-16	DIODE	01ZA8.2 (TPL3)	FB202	1-414-445-11	FERRITE 0UH	
D301	8-719-988-61	DIODE	1SS355TE-17	FB203	1-414-445-11	FERRITE 0UH	
D303	8-719-941-86	DIODE	DAN202UT106	FB301	1-414-445-11	FERRITE 0UH	
D304	8-719-941-86	DIODE	DAN202UT106	FB351	1-469-117-21	FERRITE 0UH	
D305	8-719-062-16	DIODE	01ZA8.2 (TPL3)	FB352	1-469-117-21	FERRITE 0UH	
D306	8-719-062-16	DIODE	01ZA8.2 (TPL3)	FB353	1-469-117-21	FERRITE 0UH	
D307	8-719-988-61	DIODE	1SS355TE-17	FB401	1-469-324-21	FERRITE 0UH	
D308	8-719-941-86	DIODE	DAN202UT106	FB402	1-469-324-21	FERRITE 0UH	
D309	8-719-988-61	DIODE	1SS355TE-17	FB651	1-469-835-21	INDUCTOR 0UH	
D311	8-719-941-86	DIODE	DAN202UT106 (FX1)	FB652	1-469-835-21	INDUCTOR 0UH	
D313	8-719-941-86	DIODE	DAN202UT106	FB653	1-469-835-21	INDUCTOR 0UH	
D351	8-719-062-16	DIODE	01ZA8.2 (TPL3)	FB654	1-469-835-21	INDUCTOR 0UH	
D352	8-719-062-16	DIODE	01ZA8.2 (TPL3)	FB701	1-414-921-11	INDUCTOR CHIP 0UH	
D353	8-719-062-16	DIODE	01ZA8.2 (TPL3)	FB702	1-414-921-11	INDUCTOR CHIP 0UH	
D402	8-719-066-98	DIODE	RB051L-40TE25				
D405	8-719-066-98	DIODE	RB051L-40TE25				
D407	8-719-076-80	DIODE	SBS004-TL				

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 △标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

MB-90

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
		< FILTER >					
FL001	1-234-177-21	FILTER, CHIP EMI		IC803	8-759-359-49	IC NJM3414AV (TE2)	
FL002	1-234-177-21	FILTER, CHIP EMI		IC805	8-759-660-82	IC BA5901K	
FL003	1-234-177-21	FILTER, CHIP EMI		IC808	8-759-490-72	IC MPC17A29VMEL	
FL402	1-234-177-21	FILTER, CHIP EMI		IC810	8-759-082-60	IC TC7S66FU (TE85R)	
FL601	1-234-177-21	FILTER, CHIP EMI		IC811	8-759-710-79	IC NJM2107F-TE2	
				IC812	8-759-701-40	IC NJM3404AM-TE1	
FL602	1-234-177-21	FILTER, CHIP EMI		IC813	8-759-710-82	IC NJM2406F-TE2	
FL603	1-234-177-21	FILTER, CHIP EMI		IC951	8-759-701-40	IC NJM3404AM-TE1	
FL651	1-234-177-21	FILTER, CHIP EMI		IC952	8-759-660-85	IC CXD9570R	
FL652	1-234-177-21	FILTER, CHIP EMI				< JACK >	
FL654	1-234-177-21	FILTER, CHIP EMI					
				J301	1-569-950-41	JACK (SMALL TYPE) (PHONES)	
FL655	1-234-177-21	FILTER, CHIP EMI		J302	8-749-016-28	ICJFJ8001-010010	
FL701	1-233-893-21	FILTER, CHIP EMI (FX1)				(AUDIO IN/OUT/OPTICAL OUT)	
FL801	1-233-736-21	FILTER, EMI		J351	1-794-192-11	JACK,SMALL TYPE (VIDEO IN/OUT)	
FL802	1-233-736-21	FILTER, EMI		J352	1-794-189-11	CONNECTOR, MINIATURE DIN 4P	
FL951	1-234-177-21	FILTER, CHIP EMI				(S VIDEO OUT)	
				J401	1-794-190-11	JACK,LINIFIED POLARIT TYPE DC (DC OUT 5V)	
FL953	1-234-177-21	FILTER, CHIP EMI		J501	1-569-966-11	JACK,DC(POLARITY UNIFIED TYPE)	
		< IC >				(DC IN 10V)	
						< COIL >	
IC001	8-759-667-20	IC BR9080F-E2		L301	1-412-029-11	INDUCTOR CHIP 10uH	
IC002	8-759-663-92	IC MB91107PFV-G-BND		L302	1-412-029-11	INDUCTOR CHIP 10uH	
IC003	8-759-427-92	IC PST9126NL		L303	1-469-561-21	INDUCTOR 100uH	
IC005	8-759-667-86	IC CXD9572N-E2		L351	1-412-029-11	INDUCTOR CHIP 10uH	
IC301	7-759-667-85	IC CXD9545Q		L352	1-469-556-21	INDUCTOR 15uH	
				L353	1-469-556-21	INDUCTOR 15uH	
IC302	8-759-672-74	IC CS4391-KZR		L354	1-469-553-21	INDUCTOR 4.7uH	
IC303	8-759-661-88	IC NJM2123V (TE2)		L401	1-419-314-21	INDUCTOR 15uH	
IC304	8-759-597-24	IC NJM2190V (TE2)		L402	1-419-605-21	INDUCTOR 15uH	
IC305	8-759-161-75	IC NJM2112V (TE2)		L403	1-419-314-21	INDUCTOR 15uH	
IC307	8-759-672-75	IC TPA0122PWPR (FX1)		L404	1-419-314-21	INDUCTOR 15uH	
				L405	1-419-605-21	INDUCTOR 15uH	
IC308	8-759-196-96	IC TC7SH08FU-TE85R		L406	1-419-314-21	INDUCTOR 15uH	
IC309	8-759-544-55	IC MAX4066CEE-TE2 (FX1)		L407	1-412-027-11	INDUCTOR CHIP 2.2uH	
IC310	8-759-048-93	IC LA4534M-TE-L		L408	1-419-098-21	INDUCTORS (POWER)	
IC311	8-749-014-79	IC LM2664M6X		L409	1-412-027-11	INDUCTOR CHIP 2.2uH	
IC351	8-759-522-11	IC BA7660FS-E2		L410	1-412-027-11	INDUCTOR CHIP 2.2uH	
				L411	1-419-098-21	INDUCTORS (POWER)	
IC352	8-759-661-87	IC NJM2535V (TE2) (FX1)		L412	1-412-027-11	INDUCTOR CHIP 2.2uH	
IC353	8-759-242-78	IC TC7W02FU (TE12R) (FX1)		L501	1-419-606-21	INDUCTOR 22uH	
IC354	8-759-488-29	IC TC7W66FU (TE12R) (FX1)		L702	1-414-398-11	INDUCTOR 10uH	
IC401	8-759-491-22	IC MB3825APFV-G-BND-ER		L801	1-412-029-11	INDUCTOR CHIP 10uH	
IC402	8-759-474-97	IC TK1125BMCL		L802	1-412-029-11	INDUCTOR CHIP 10uH	
				L803	1-412-031-11	INDUCTOR CHIP 47uH	
IC501	8-759-347-77	IC S-81233SG-QF-T1		L804	1-412-029-11	INDUCTOR CHIP 10uH	
IC502	8-759-660-86	IC S-8520F18MC-BND-T2		L805	1-412-628-51	INDUCTOR 33uH	
IC504	8-759-281-13	IC S-81250SG-QD-T1		L806	1-419-098-21	INDUCTORS (POWER)	
IC601	8-759-486-55	IC NJM2370U33-TE2				< LINE FILTER >	
IC602	8-759-656-89	IC CXD9576GF		LF501	1-239-581-21	FILTER, EMI	
IC603	8-759-643-10	IC GM71V18160CT-6TR					
IC651	8-759-486-55	IC NJM2370U33-TE2					
IC652	8-752-404-72	IC CXD1932GA-T6					
IC653	8-759-567-34	IC HY57V161610DTC-7TR					
IC654	8-759-567-34	IC HY57V161610DTC-7TR					
IC701	8-759-661-91	IC M37513M8-055GP					
IC702	8-759-177-23	IC RS-50-T					
IC703	8-759-445-82	IC RN5VD26AA-TL					
IC801	8-749-016-23	IC SSI33P3721-R4					
IC802	8-759-491-47	IC TC74VHCT08AFT (EL)					

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
		< TRANSISTOR >					
Q101	8-729-023-22	TRANSISTOR 2SD2114KT146		Q515	8-729-028-27	TRANSISTOR 2SK2009 (TE85L)	
Q102	8-729-023-22	TRANSISTOR 2SD2114KT146		Q516	8-729-048-75	TRANSISTOR CPH3109-TL	
Q103	8-729-023-22	TRANSISTOR 2SD2114KT146		Q517	8-729-904-87	TRANSISTOR 2SB1197K-T-146-R	
Q201	8-729-023-22	TRANSISTOR 2SD2114KT146		Q518	8-729-029-06	TRANSISTOR DTC124EUA-T106	
Q202	8-729-023-22	TRANSISTOR 2SD2114KT146		Q701	8-729-029-06	TRANSISTOR DTC124EUA-T106	
Q203	8-729-023-22	TRANSISTOR 2SD2114KT146		Q702	8-729-028-90	TRANSISTOR DTA143ZUA-T106	
Q301	8-729-928-81	TRANSISTOR DTC144EE-TL (FX1)		Q801	8-729-043-94	TRANSISTOR CPH3106-PM-TL	
Q302	8-729-930-00	TRANSISTOR UMD2-TR (FX1)		Q802	8-729-043-94	TRANSISTOR CPH3106-PM-TL	
Q303	8-729-928-81	TRANSISTOR DTC144EE-TL		Q803	8-729-922-10	TRANSISTOR 2SA1577-T106-R	
Q304	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX		Q804	8-729-928-87	TRANSISTOR DTC124EE-TL	
Q305	8-729-928-81	TRANSISTOR DTC144EE-TL		Q805	8-729-928-90	TRANSISTOR DTC114EE-TL	
Q306	8-729-930-00	TRANSISTOR UMD2-TR		Q807	8-729-903-46	TRANSISTOR 2SB1132-T100-QR	
Q307	8-729-905-35	TRANSISTOR 2SC4081T106R		Q808	8-729-928-87	TRANSISTOR DTC124EE-TL	
Q308	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX		Q811	8-729-922-10	TRANSISTOR 2SA1577-T106-R	
Q309	8-729-928-81	TRANSISTOR DTC144EE-TL		Q812	8-729-927-62	TRANSISTOR UMX1-TN	
Q310	8-729-928-81	TRANSISTOR DTC144EE-TL (FX1)				< RESISTOR >	
Q311	8-729-930-00	TRANSISTOR UMD2-TR (FX1)		R001	1-216-833-91	RES-CHIP 10K 5%	1/16W
Q312	8-729-928-27	TRANSISTOR DTA144EE-TL		R002	1-216-833-91	RES-CHIP 10K 5%	1/16W
Q313	8-729-928-81	TRANSISTOR DTC144EE-TL (FX1)		R003	1-216-801-11	METAL CHIP 22 5%	1/16W
Q314	8-729-904-87	TRANSISTOR 2SB1197K-T-146-R		R005	1-216-845-11	METAL CHIP 100K 5%	1/16W
Q315	8-729-927-68	TRANSISTOR UMW1-TR		R007	1-216-833-91	RES-CHIP 10K 5%	1/16W
Q316	8-729-928-81	TRANSISTOR DTC144EE-TL		R008	1-216-833-91	RES-CHIP 10K 5%	1/16W
Q317	8-729-930-00	TRANSISTOR UMD2-TR		R011	1-216-833-91	RES-CHIP 10K 5%	1/16W
Q318	8-729-928-81	TRANSISTOR DTC144EE-TL		R017	1-216-833-91	RES-CHIP 10K 5%	1/16W
Q319	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX		R019	1-216-833-91	RES-CHIP 10K 5%	1/16W
Q320	8-729-928-81	TRANSISTOR DTC144EE-TL		R021	1-216-801-11	METAL CHIP 22 5%	1/16W
Q321	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX		R023	1-216-801-11	METAL CHIP 22 5%	1/16W
Q322	8-729-928-81	TRANSISTOR DTC144EE-TL		R025	1-216-833-91	RES-CHIP 10K 5%	1/16W
Q351	8-729-231-74	TRANSISTOR 2SC4116GL-TE85L (FX1)		R027	1-216-833-91	RES-CHIP 10K 5%	1/16W
Q352	8-729-928-81	TRANSISTOR DTC144EE-TL (FX1)		R029	1-216-809-11	METAL CHIP 100 5%	1/16W
Q353	8-729-928-81	TRANSISTOR DTC144EE-TL (FX1)		R031	1-216-833-91	RES-CHIP 10K 5%	1/16W
Q354	8-729-928-81	TRANSISTOR DTC144EE-TL		R032	1-216-827-11	METAL CHIP 3.3K 5%	1/16W
Q355	8-729-930-00	TRANSISTOR UMD2-TR		R033	1-216-834-11	METAL CHIP 12K 5%	1/16W
Q356	8-729-231-74	TRANSISTOR 2SC4116GL-TE85L (FX1)				(FX1:AEP,UK/F5:AEP,UK)	
Q401	8-729-052-30	TRANSISTOR CPH5705-TL		R033	1-216-827-11	METAL CHIP 3.3K 5%	1/16W
Q402	8-729-048-75	TRANSISTOR CPH3109-TL				(FX1:CN/F5:CN)	
Q403	8-729-052-30	TRANSISTOR CPH5705-TL		R033	1-216-825-11	METAL CHIP 2.2K 5%	1/16W
Q404	8-729-052-30	TRANSISTOR CPH5705-TL				(DVP-FX1:HK)	
Q405	8-729-048-75	TRANSISTOR CPH3109-TL		R033	1-216-817-11	METAL CHIP 470 5%	1/16W
Q406	8-729-052-30	TRANSISTOR CPH5705-TL				(F5:AUS)	
Q409	8-729-029-14	TRANSISTOR DTC144EUA-T106		R034	1-216-827-11	METAL CHIP 3.3K 5%	1/16W
Q410	8-729-051-47	TRANSISTOR XP162A12A6PR		R035	1-216-820-11	METAL CHIP 820 5%	1/16W
Q411	8-729-051-47	TRANSISTOR XP162A12A6PR				(FX1)	
Q412	8-729-051-47	TRANSISTOR XP162A12A6PR		R035	1-216-817-11	METAL CHIP 470 5%	1/16W
Q413	8-729-051-47	TRANSISTOR XP162A12A6PR				(F5)	
Q414	8-729-029-06	TRANSISTOR DTC124EUA-T106		R036	1-216-827-11	METAL CHIP 3.3K 5%	1/16W
Q415	8-729-029-06	TRANSISTOR DTC124EUA-T106		R037	1-216-841-11	METAL CHIP 47K 5%	1/16W
Q416	8-729-029-06	TRANSISTOR DTC124EUA-T106				(FX1:AEP,UK/F5:AEP,UK)	
Q501	8-729-907-00	TRANSISTOR DTC114EUA-T106		R037	1-216-829-11	METAL CHIP 4.7K 5%	1/16W
Q503	8-729-029-06	TRANSISTOR DTC124EUA-T106				(FX1:CN/F5:CN)	
Q504	8-729-051-47	TRANSISTOR XP162A12A6PR		R037	1-216-837-11	METAL CHIP 22K 5%	1/16W
Q505	8-729-029-06	TRANSISTOR DTC124EUA-T106				(DVP-FX1:HK)	
Q508	8-729-015-88	TRANSISTOR UMC3TL		R037	1-216-834-11	METAL CHIP 12K 5%	1/16W
Q509	8-729-015-88	TRANSISTOR UMC3TL				(F5:AUS)	
Q510	8-729-028-90	TRANSISTOR DTA143ZUA-T106		R038	1-216-827-11	METAL CHIP 3.3K 5%	1/16W
				R039	1-216-845-11	METAL CHIP 100K 5%	1/16W

MB-90

Ref. No.	Part No.	Description	Quantity	Unit	Remarks	Ref. No.	Part No.	Description	Quantity	Unit	Remarks
R043	1-216-833-91	RES-CHIP	10K	5%	1/16W	R204	1-218-851-11	METAL CHIP	1.5K	0.5%	1/16W
R044	1-216-864-11	METAL CHIP	0	5%	1/16W	R205	1-218-851-11	METAL CHIP	1.5K	0.5%	1/16W
R045	1-216-864-11	METAL CHIP	0	5%	1/16W	R206	1-216-864-11	METAL CHIP	0	5%	1/16W
R047	1-218-457-11	RES-CHIP	910	5%	1/16W						(F5)
R052	1-216-864-11	METAL CHIP	0	5%	1/16W	R207	1-216-817-11	METAL CHIP	470	5%	1/16W
R053	1-216-864-11	METAL CHIP	0	5%	1/16W	R208	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R055	1-216-864-11	METAL CHIP	0	5%	1/16W	R209	1-216-817-11	METAL CHIP	470	5%	1/16W
R056	1-216-864-11	METAL CHIP	0	5%	1/16W	R210	1-216-845-11	METAL CHIP	100K	5%	1/16W
R057	1-216-864-11	METAL CHIP	0	5%	1/16W	R212	1-218-879-11	METAL CHIP	22K	0.5%	1/16W
R059	1-216-809-11	METAL CHIP	100	5%	1/16W	R213	1-218-891-11	METAL CHIP	68K	0.5%	1/16W
R061	1-216-821-11	METAL CHIP	1K	5%	1/16W	R214	1-218-879-11	METAL CHIP	22K	0.5%	1/16W
R063	1-216-809-11	METAL CHIP	100	5%	1/16W	R215	1-218-879-11	METAL CHIP	22K	0.5%	1/16W
R064	1-216-809-11	METAL CHIP	100	5%	1/16W						(FX1)
R066	1-216-833-91	RES-CHIP	10K	5%	1/16W	R215	1-216-864-11	METAL CHIP	0	5%	1/16W
R067	1-216-833-91	RES-CHIP	10K	5%	1/16W						(F5)
R070	1-216-833-91	RES-CHIP	10K	5%	1/16W	R216	1-218-891-11	METAL CHIP	68K	0.5%	1/16W
R101	1-218-869-11	METAL CHIP	8.2K	0.5%	1/16W						(FX1)
R102	1-218-869-11	METAL CHIP	8.2K	0.5%	1/16W	R216	1-216-864-11	METAL CHIP	0	5%	1/16W
R103	1-218-871-11	METAL CHIP	10K	0.5%	1/16W						(F5)
R104	1-218-851-11	METAL CHIP	1.5K	0.5%	1/16W	R217	1-218-879-11	METAL CHIP	22K	0.5%	1/16W
R105	1-218-851-11	METAL CHIP	1.5K	0.5%	1/16W						(FX1)
R106	1-216-864-11	METAL CHIP	0	5%	1/16W	R218	1-218-831-11	METAL CHIP	220	0.5%	1/16W
					(F5)	R219	1-216-864-11	METAL CHIP	0	5%	1/16W
R107	1-216-817-11	METAL CHIP	470	5%	1/16W						(FX1)
R108	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	R220	1-216-845-11	METAL CHIP	100K	5%	1/16W
R109	1-216-817-11	METAL CHIP	470	5%	1/16W						(FX1)
R110	1-216-845-11	METAL CHIP	100K	5%	1/16W	R225	1-216-821-11	METAL CHIP	1K	5%	1/16W
R112	1-218-879-11	METAL CHIP	22K	0.5%	1/16W	R226	1-218-863-11	METAL CHIP	4.7K	0.5%	1/16W
R113	1-218-891-11	METAL CHIP	68K	0.5%	1/16W	R227	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R114	1-218-879-11	METAL CHIP	22K	0.5%	1/16W	R228	1-218-871-11	METAL CHIP	10K	0.5%	1/16W
R115	1-218-879-11	METAL CHIP	22K	0.5%	1/16W	R229	1-218-871-11	METAL CHIP	10K	0.5%	1/16W
					(FX1)	R230	1-218-859-11	METAL CHIP	3.3K	0.5%	1/16W
R115	1-216-864-11	METAL CHIP	0	5%	1/16W	R231	1-216-793-11	RES-CHIP	4.7	5%	1/16W
					(F5)	R232	1-216-789-11	METAL CHIP	2.2	5%	1/16W
R116	1-218-891-11	METAL CHIP	68K	0.5%	1/16W	R233	1-216-789-11	METAL CHIP	2.2	5%	1/16W
					(FX1)	R234	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R116	1-216-864-11	METAL CHIP	0	5%	1/16W	R300	1-216-864-11	METAL CHIP	0	5%	1/16W
					(F5)	R302	1-216-864-11	METAL CHIP	0	5%	1/16W
R117	1-218-879-11	METAL CHIP	22K	0.5%	1/16W	R303	1-216-809-11	METAL CHIP	100	5%	1/16W
					(FX1)	R304	1-216-864-11	METAL CHIP	0	5%	1/16W
R118	1-218-831-11	METAL CHIP	220	0.5%	1/16W	R305	1-216-809-11	METAL CHIP	100	5%	1/16W
R119	1-216-864-11	METAL CHIP	0	5%	1/16W	R307	1-216-864-11	METAL CHIP	0	5%	1/16W
					(FX1)	R308	1-216-864-11	METAL CHIP	0	5%	1/16W
R120	1-216-845-11	METAL CHIP	100K	5%	1/16W	R309	1-216-864-11	METAL CHIP	0	5%	1/16W
					(FX1)	R310	1-218-885-11	METAL CHIP	39K	0.5%	1/16W
R125	1-216-821-11	METAL CHIP	1K	5%	1/16W	R311	1-216-837-11	METAL CHIP	22K	5%	1/16W
R126	1-218-863-11	METAL CHIP	4.7K	0.5%	1/16W	R312	1-218-871-11	METAL CHIP	10K	0.5%	1/16W
R127	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R314	1-218-871-11	METAL CHIP	10K	0.5%	1/16W
R128	1-218-871-11	METAL CHIP	10K	0.5%	1/16W	R315	1-216-864-11	METAL CHIP	0	5%	1/16W
R129	1-218-871-11	METAL CHIP	10K	0.5%	1/16W	R316	1-216-837-11	METAL CHIP	22K	5%	1/16W
R130	1-218-859-11	METAL CHIP	3.3K	0.5%	1/16W						(FX1)
R131	1-216-793-11	RES-CHIP	4.7	5%	1/16W	R317	1-216-864-11	METAL CHIP	0	5%	1/16W
R132	1-216-789-11	METAL CHIP	2.2	5%	1/16W						(F5)
R133	1-216-789-11	METAL CHIP	2.2	5%	1/16W	R318	1-216-837-11	METAL CHIP	22K	5%	1/16W
R134	1-216-829-11	METAL CHIP	4.7K	5%	1/16W						(FX1)
R201	1-218-869-11	METAL CHIP	8.2K	0.5%	1/16W	R319	1-216-864-11	METAL CHIP	0	5%	1/16W
R202	1-218-869-11	METAL CHIP	8.2K	0.5%	1/16W						(F5)
R203	1-218-871-11	METAL CHIP	10K	0.5%	1/16W						

Ref. No.	Part No.	Description	Quantity	Unit Price	Remarks	Ref. No.	Part No.	Description	Quantity	Unit Price	Remarks
R320	1-216-845-11	METAL CHIP	100K	5%	1/16W (FX1)	R370	1-216-864-11	METAL CHIP	0	5%	1/16W
R321	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R371	1-216-837-11	METAL CHIP	22K	5%	1/16W (FX1)
R322	1-218-863-11	METAL CHIP	4.7K	0.5%	1/16W	R372	1-216-837-11	METAL CHIP	22K	5%	1/16W (FX1)
R323	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R373	1-216-809-11	METAL CHIP	100	5%	1/16W (FX1)
R324	1-218-873-11	METAL CHIP	12K	0.5%	1/16W	R374	1-216-821-11	METAL CHIP	1K	5%	1/16W (FX1)
R326	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R380	1-216-833-91	RES-CHIP	10K	5%	1/16W
R327	1-216-837-11	METAL CHIP	22K	5%	1/16W	R381	1-216-833-91	RES-CHIP	10K	5%	1/16W
R328	1-216-837-11	METAL CHIP	22K	5%	1/16W	R383	1-216-813-11	METAL CHIP	220	5%	1/16W
R329	1-216-833-91	RES-CHIP	10K	5%	1/16W	R384	1-216-813-11	METAL CHIP	220	5%	1/16W
R330	1-216-833-91	RES-CHIP	10K	5%	1/16W	R385	1-216-819-11	METAL CHIP	680	5%	1/16W
R331	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R386	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R332	1-216-864-11	METAL CHIP	0	5%	1/16W	R387	1-216-841-11	METAL CHIP	47K	5%	1/16W
R333	1-216-821-11	METAL CHIP	1K	5%	1/16W	R388	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R334	1-216-864-11	METAL CHIP	0	5%	1/16W	R389	1-216-833-91	RES-CHIP	10K	5%	1/16W
R336	1-216-864-11	METAL CHIP	0	5%	1/16W	R390	1-216-833-91	RES-CHIP	10K	5%	1/16W
R337	1-216-864-11	METAL CHIP	0	5%	1/16W	R391	1-216-864-11	METAL CHIP	0	5%	1/16W
R338	1-216-821-11	METAL CHIP	1K	5%	1/16W	R392	1-216-864-11	METAL CHIP	0	5%	1/16W
R339	1-216-839-11	METAL CHIP	33K	5%	1/16W	R394	1-216-864-11	METAL CHIP	0	5%	1/16W
R340	1-216-842-11	METAL CHIP	56K	5%	1/16W	R395	1-216-864-11	METAL CHIP	0	5%	1/16W
R341	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R401	1-216-841-11	METAL CHIP	47K	5%	1/16W
R343	1-216-864-11	METAL CHIP	0	5%	1/16W (FX1)	R403	1-216-843-11	METAL CHIP	68K	5%	1/16W
R345	1-216-864-11	METAL CHIP	0	5%	1/16W (FX1)	R405	1-216-851-11	METAL CHIP	330K	5%	1/16W
R347	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R406	1-216-839-11	METAL CHIP	33K	5%	1/16W
R348	1-216-837-11	METAL CHIP	22K	5%	1/16W (FX1)	R407	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R349	1-216-837-11	METAL CHIP	22K	5%	1/16W	R408	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R350	1-216-845-11	METAL CHIP	100K	5%	1/16W	R409	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R351	1-216-864-11	METAL CHIP	0	5%	1/16W (F5)	R410	1-216-837-11	METAL CHIP	22K	5%	1/16W
R352	1-216-813-11	METAL CHIP	220	5%	1/16W (FX1)	R411	1-216-837-11	METAL CHIP	22K	5%	1/16W
R353	1-216-809-11	METAL CHIP	100	5%	1/16W (FX1)	R413	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R354	1-216-837-11	METAL CHIP	22K	5%	1/16W (FX1)	R415	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R355	1-216-837-11	METAL CHIP	22K	5%	1/16W (FX1)	R416	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R356	1-216-833-91	RES-CHIP	10K	5%	1/16W (FX1)	R417	1-216-864-11	METAL CHIP	0	5%	1/16W
R357	1-216-833-91	RES-CHIP	10K	5%	1/16W (FX1)	R418	1-216-833-91	RES-CHIP	10K	5%	1/16W
R358	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R419	1-216-833-91	RES-CHIP	10K	5%	1/16W
R359	1-208-755-11	METAL CHIP	75	0.5%	1/10W (FX1)	R420	1-216-833-91	RES-CHIP	10K	5%	1/16W
R360	1-216-833-91	RES-CHIP	10K	5%	1/16W	R421	1-216-833-91	RES-CHIP	10K	5%	1/16W
R361	1-216-833-91	RES-CHIP	10K	5%	1/16W	R422	1-216-833-91	RES-CHIP	10K	5%	1/16W
R362	1-208-755-11	METAL CHIP	75	0.5%	1/10W	R423	1-216-833-91	RES-CHIP	10K	5%	1/16W
R363	1-208-755-11	METAL CHIP	75	0.5%	1/10W	R424	1-216-864-11	METAL CHIP	0	5%	1/16W
R364	1-208-755-11	METAL CHIP	75	0.5%	1/10W	R425	1-216-864-11	METAL CHIP	0	5%	1/16W
R365	1-216-864-11	METAL CHIP	0	5%	1/16W (F5)	R426	1-216-864-11	METAL CHIP	0	5%	1/16W
R366	1-216-851-11	METAL CHIP	330K	5%	1/16W	R427	1-216-864-11	METAL CHIP	0	5%	1/16W
R367	1-216-864-11	METAL CHIP	0	5%	1/16W (FX1)	R428	1-216-864-11	METAL CHIP	0	5%	1/16W
R368	1-218-289-11	RES-CHIP	510	5%	1/16W	R429	1-216-864-11	METAL CHIP	0	5%	1/16W
R369	1-218-289-11	RES-CHIP	510	5%	1/16W	R430	1-216-864-11	METAL CHIP	0	5%	1/16W
						R431	1-218-855-11	METAL CHIP	2.2K	0.5%	1/16W
						R432	1-218-851-11	METAL CHIP	1.5K	0.5%	1/16W
						R433	1-218-875-11	METAL CHIP	15K	0.5%	1/16W
						R434	1-218-883-11	METAL CHIP	33K	0.5%	1/16W
						R435	1-218-859-11	METAL CHIP	3.3K	0.5%	1/16W
						R436	1-218-875-11	METAL CHIP	15K	0.5%	1/16W
						R437	1-218-879-11	METAL CHIP	22K	0.5%	1/16W
						R438	1-218-851-11	METAL CHIP	1.5K	0.5%	1/16W
						R439	1-218-871-11	METAL CHIP	10K	0.5%	1/16W
						R440	1-218-851-11	METAL CHIP	1.5K	0.5%	1/16W

MB-90

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R441	1-218-289-11	RES-CHIP	510	5%	1/16W	R516	1-216-864-11	METAL CHIP	0	5%	1/16W
R442	1-218-851-11	METAL CHIP	1.5K	0.5%	1/16W	R521	1-218-873-11	METAL CHIP	12K	0.5%	1/16W
R443	1-218-883-11	METAL CHIP	33K	0.5%	1/16W	R522	1-218-862-11	METAL CHIP	4.3K	0.5%	1/16W
R444	1-218-859-11	METAL CHIP	3.3K	0.5%	1/16W	R523	1-218-862-11	METAL CHIP	4.3K	0.5%	1/16W
R445	1-218-875-11	METAL CHIP	15K	0.5%	1/16W	R524	1-218-231-11	RES-CHIP	1	10%	1/2W
R446	1-218-881-11	METAL CHIP	27K	0.5%	1/16W	R525	1-218-231-11	RES-CHIP	1	10%	1/2W
R447	1-218-878-11	METAL CHIP	20K	0.5%	1/16W	R526	1-218-231-11	RES-CHIP	1	10%	1/2W
R448	1-218-875-11	METAL CHIP	15K	0.5%	1/16W	R527	1-218-904-11	METAL CHIP	240K	0.5%	1/16W
R449	1-216-864-11	METAL CHIP	0	5%	1/16W	R528	1-218-891-11	METAL CHIP	68K	0.5%	1/16W
R450	1-216-864-11	METAL CHIP	0	5%	1/16W	R530	1-216-864-11	METAL CHIP	0	5%	1/16W
R451	1-216-864-11	METAL CHIP	0	5%	1/16W	R531	1-216-864-11	METAL CHIP	0	5%	1/16W
R452	1-216-864-11	METAL CHIP	0	5%	1/16W	R532	1-216-821-11	METAL CHIP	1K	5%	1/16W
R453	1-216-864-11	METAL CHIP	0	5%	1/16W	R533	1-216-857-11	METAL CHIP	1M	5%	1/16W
R454	1-216-864-11	METAL CHIP	0	5%	1/16W	R534	1-216-833-91	RES-CHIP	10K	5%	1/16W
R455	1-216-864-11	METAL CHIP	0	5%	1/16W	R601	1-218-879-11	METAL CHIP	22K	0.5%	1/16W
R456	1-216-864-11	METAL CHIP	0	5%	1/16W	R602	1-218-831-11	METAL CHIP	220	0.5%	1/16W
R457	1-216-864-11	METAL CHIP	0	5%	1/16W	R603	1-218-883-11	METAL CHIP	33K	0.5%	1/16W
R458	1-216-864-11	METAL CHIP	0	5%	1/16W	R604	1-218-855-11	METAL CHIP	2.2K	0.5%	1/16W
R459	1-216-864-11	METAL CHIP	0	5%	1/16W	R605	1-218-847-11	METAL CHIP	1K	0.5%	1/16W
R460	1-216-833-91	RES-CHIP	10K	5%	1/16W	R606	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R461	1-216-833-91	RES-CHIP	10K	5%	1/16W	R607	1-216-838-11	METAL CHIP	27K	5%	1/16W
R462	1-216-833-91	RES-CHIP	10K	5%	1/16W	R608	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R463	1-216-833-91	RES-CHIP	10K	5%	1/16W	R609	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R464	1-216-864-11	METAL CHIP	0	5%	1/16W	R610	1-216-809-11	METAL CHIP	100	5%	1/16W
R465	1-216-864-11	METAL CHIP	0	5%	1/16W	R612	1-216-833-91	RES-CHIP	10K	5%	1/16W
R466	1-216-864-11	METAL CHIP	0	5%	1/16W	R613	1-216-845-11	METAL CHIP	100K	5%	1/16W
R467	1-216-864-11	METAL CHIP	0	5%	1/16W	R614	1-216-833-91	RES-CHIP	10K	5%	1/16W
R468	1-218-231-11	RES-CHIP	1	10%	1/2W	R615	1-216-833-91	RES-CHIP	10K	5%	1/16W
R469	1-216-864-11	METAL CHIP	0	5%	1/16W	R616	1-216-833-91	RES-CHIP	10K	5%	1/16W
R470	1-218-231-11	RES-CHIP	1	10%	1/2W	R617	1-218-871-11	METAL CHIP	10K	0.5%	1/16W
R471	1-218-904-11	METAL CHIP	240K	0.5%	1/16W	R618	1-218-871-11	METAL CHIP	10K	0.5%	1/16W
R472	1-218-891-11	METAL CHIP	68K	0.5%	1/16W	R619	1-218-853-11	METAL CHIP	1.8K	0.5%	1/16W
R473	1-216-841-11	METAL CHIP	47K	5%	1/16W	R620	1-216-833-91	RES-CHIP	10K	5%	1/16W
R474	1-216-821-11	METAL CHIP	1K	5%	1/16W	R621	1-216-813-11	METAL CHIP	220	5%	1/16W
R476	1-216-864-11	METAL CHIP	0	5%	1/16W	R622	1-216-833-91	RES-CHIP	10K	5%	1/16W
R483	1-216-833-91	RES-CHIP	10K	5%	1/16W	R623	1-216-833-91	RES-CHIP	10K	5%	1/16W
R484	1-216-833-91	RES-CHIP	10K	5%	1/16W	R624	1-216-864-11	METAL CHIP	0	5%	1/16W
R485	1-216-833-91	RES-CHIP	10K	5%	1/16W	R625	1-216-833-91	RES-CHIP	10K	5%	1/16W
R486	1-216-833-91	RES-CHIP	10K	5%	1/16W	R626	1-216-833-91	RES-CHIP	10K	5%	1/16W
R487	1-216-833-91	RES-CHIP	10K	5%	1/16W	R627	1-216-833-91	RES-CHIP	10K	5%	1/16W
R488	1-216-833-91	RES-CHIP	10K	5%	1/16W	R628	1-216-809-11	METAL CHIP	100	5%	1/16W
R501	1-216-821-11	METAL CHIP	1K	5%	1/16W	R629	1-216-864-11	METAL CHIP	0	5%	1/16W
R502	1-218-282-11	RES-CHIP	22	5%	1/2W	R630	1-216-833-91	RES-CHIP	10K	5%	1/16W
R503	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R631	1-216-833-91	RES-CHIP	10K	5%	1/16W
R504	1-216-864-11	METAL CHIP	0	5%	1/16W	R632	1-216-833-91	RES-CHIP	10K	5%	1/16W
R505	1-216-845-11	METAL CHIP	100K	5%	1/16W	R633	1-216-833-91	RES-CHIP	10K	5%	1/16W
R506	1-218-904-11	METAL CHIP	240K	0.5%	1/16W	R634	1-216-864-11	METAL CHIP	0	5%	1/16W
R507	1-218-891-11	METAL CHIP	68K	0.5%	1/16W	R635	1-216-864-11	METAL CHIP	0	5%	1/16W
R508	1-216-833-91	RES-CHIP	10K	5%	1/16W	R637	1-216-801-11	METAL CHIP	22	5%	1/16W
R509	1-216-853-11	METAL CHIP	470K	5%	1/16W	R639	1-216-801-11	METAL CHIP	22	5%	1/16W
R510	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R640	1-216-821-11	METAL CHIP	1K	5%	1/16W
R511	1-216-821-11	METAL CHIP	1K	5%	1/16W	R651	1-216-864-11	METAL CHIP	0	5%	1/16W
R512	1-216-821-11	METAL CHIP	1K	5%	1/16W	R652	1-216-864-11	METAL CHIP	0	5%	1/16W
R513	1-216-864-11	METAL CHIP	0	5%	1/16W	R653	1-216-864-11	METAL CHIP	0	5%	1/16W
R514	1-216-821-11	METAL CHIP	1K	5%	1/16W	R656	1-216-295-91	SHORT	0		

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R659	1-216-809-11	METAL CHIP	100	5%	1/16W	R744	1-216-864-11	METAL CHIP	0	5%	1/16W
R660	1-216-833-91	RES-CHIP	10K	5%	1/16W						(FX1)
R662	1-216-864-11	METAL CHIP	0	5%	1/16W	R745	1-216-809-11	METAL CHIP	100	5%	1/16W
R665	1-218-831-11	METAL CHIP	220	0.5%	1/16W	R750	1-216-295-91	SHORT	0		(FX1)
R666	1-218-831-11	METAL CHIP	220	0.5%	1/16W	R751	1-216-295-91	SHORT	0		(FX1)
						R752	1-216-295-91	SHORT	0		(FX1)
R667	1-218-831-11	METAL CHIP	220	0.5%	1/16W	R753	1-216-295-91	SHORT	0		(FX1)
R669	1-216-822-11	METAL CHIP	1.2K	5%	1/16W	R765	1-216-809-11	METAL CHIP	100	5%	1/16W
R670	1-216-833-91	RES-CHIP	10K	5%	1/16W	R766	1-216-809-11	METAL CHIP	100	5%	1/16W
R674	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	R769	1-218-345-11	RES-CHIP	9.1K	5%	1/16W
R675	1-216-864-11	METAL CHIP	0	5%	1/16W	R770	1-216-809-11	METAL CHIP	100	5%	1/16W
R676	1-216-841-11	METAL CHIP	47K	5%	1/16W						
R677	1-216-864-11	METAL CHIP	0	5%	1/16W	R773	1-216-845-11	METAL CHIP	100K	5%	1/16W
R678	1-216-841-11	METAL CHIP	47K	5%	1/16W	R774	1-216-845-11	METAL CHIP	100K	5%	1/16W
R679	1-216-833-91	RES-CHIP	10K	5%	1/16W						(FX1:US,CND)
R681	1-216-864-11	METAL CHIP	0	5%	1/16W	R775	1-216-845-11	METAL CHIP	100K	5%	1/16W
											(FX1/F5:AEP,UK,HK,CN)
R682	1-216-864-11	METAL CHIP	0	5%	1/16W	R776	1-216-295-91	SHORT	0		(FX1)
R683	1-216-833-91	RES-CHIP	10K	5%	1/16W	R801	1-216-025-91	RES-CHIP	100	5%	1/10W
R688	1-216-864-11	METAL CHIP	0	5%	1/16W						
R701	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	R802	1-216-023-00	METAL CHIP	82	5%	1/10W
R702	1-216-831-11	METAL CHIP	6.8K	5%	1/16W	R803	1-216-809-11	METAL CHIP	100	5%	1/16W
						R804	1-216-864-11	METAL CHIP	0	5%	1/16W
R704	1-216-833-91	RES-CHIP	10K	5%	1/16W	R805	1-216-864-11	METAL CHIP	0	5%	1/16W
R705	1-216-826-11	METAL CHIP	2.7K	5%	1/16W	R806	1-218-871-11	METAL CHIP	10K	0.5%	1/16W
R706	1-216-828-11	METAL CHIP	3.9K	5%	1/16W						
R707	1-216-832-11	METAL CHIP	8.2K	5%	1/16W	R807	1-216-849-11	METAL CHIP	220K	5%	1/16W
R709	1-216-833-91	RES-CHIP	10K	5%	1/16W	R808	1-216-853-11	METAL CHIP	470K	5%	1/16W
						R809	1-216-864-11	METAL CHIP	0	5%	1/16W
R710	1-216-826-11	METAL CHIP	2.7K	5%	1/16W	R810	1-202-930-11	RES-CHIP	750K	5%	1/16W
R711	1-216-828-11	METAL CHIP	3.9K	5%	1/16W	R811	1-216-864-11	METAL CHIP	0	5%	1/16W
R712	1-216-832-11	METAL CHIP	8.2K	5%	1/16W						
R713	1-218-271-11	RES-CHIP	2K	5%	1/16W	R812	1-216-864-11	METAL CHIP	0	5%	1/16W
R715	1-216-826-11	METAL CHIP	2.7K	5%	1/16W	R813	1-216-833-91	RES-CHIP	10K	5%	1/16W
						R814	1-216-864-11	METAL CHIP	0	5%	1/16W
R716	1-216-828-11	METAL CHIP	3.9K	5%	1/16W	R815	1-216-864-11	METAL CHIP	0	5%	1/16W
R718	1-216-833-91	RES-CHIP	10K	5%	1/16W	R816	1-216-864-11	METAL CHIP	0	5%	1/16W
R719	1-216-825-11	METAL CHIP	2.2K	5%	1/16W						
R720	1-216-832-11	METAL CHIP	8.2K	5%	1/16W	R818	1-216-864-11	METAL CHIP	0	5%	1/16W
R721	1-216-837-11	METAL CHIP	22K	5%	1/16W	R819	1-216-864-11	METAL CHIP	0	5%	1/16W
						R821	1-216-813-11	METAL CHIP	220	5%	1/16W
R722	1-216-833-91	RES-CHIP	10K	5%	1/16W	R822	1-216-864-11	METAL CHIP	0	5%	1/16W
R723	1-216-823-11	METAL CHIP	1.5K	5%	1/16W	R823	1-216-864-11	METAL CHIP	0	5%	1/16W
R724	1-216-851-11	METAL CHIP	330K	5%	1/16W						
R725	1-216-833-91	RES-CHIP	10K	5%	1/16W	R824	1-216-864-11	METAL CHIP	0	5%	1/16W
R726	1-216-845-11	METAL CHIP	100K	5%	1/16W	R826	1-216-864-11	METAL CHIP	0	5%	1/16W
						R827	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R728	1-216-809-11	METAL CHIP	100	5%	1/16W	R828	1-216-837-11	METAL CHIP	22K	5%	1/16W
R729	1-216-845-11	METAL CHIP	100K	5%	1/16W	R829	1-211-964-11	METAL CHIP	33	0.5%	1/10W
					(F5)						
R730	1-216-845-11	METAL CHIP	100K	5%	1/16W	R830	1-211-964-11	METAL CHIP	33	0.5%	1/10W
					(FX1)	R831	1-216-847-11	METAL CHIP	150K	5%	1/16W
R731	1-216-845-11	METAL CHIP	100K	5%	1/16W	R832	1-216-849-11	METAL CHIP	220K	5%	1/16W
					(FX1:US,CND,CN,HK/F5:CN)	R833	1-218-879-11	METAL CHIP	22K	0.5%	1/16W
R732	1-216-845-11	METAL CHIP	100K	5%	1/16W	R834	1-218-879-11	METAL CHIP	22K	0.5%	1/16W
					(FX1/F5:AEP,UK)						
R733	1-216-851-11	METAL CHIP	330K	5%	1/16W	R835	1-216-821-11	METAL CHIP	1K	5%	1/16W
R734	1-216-851-11	METAL CHIP	330K	5%	1/16W	R836	1-211-964-11	METAL CHIP	33	0.5%	1/10W
R735	1-216-851-11	METAL CHIP	330K	5%	1/16W	R837	1-211-964-11	METAL CHIP	33	0.5%	1/10W
R736	1-216-851-11	METAL CHIP	330K	5%	1/16W	R838	1-216-837-11	METAL CHIP	22K	5%	1/16W
R737	1-216-845-11	METAL CHIP	100K	5%	1/16W	R839	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R738	1-216-845-11	METAL CHIP	100K	5%	1/16W	R840	1-216-841-11	METAL CHIP	47K	5%	1/16W
R739	1-216-801-11	METAL CHIP	22	5%	1/16W	R842	1-216-852-11	METAL CHIP	390K	5%	1/16W
R740	1-216-809-11	METAL CHIP	100	5%	1/16W	R843	1-216-852-11	METAL CHIP	390K	5%	1/16W
R741	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R844	1-216-864-11	METAL CHIP	0	5%	1/16W
R742	1-216-809-11	METAL CHIP	100	5%	1/16W	R845	1-218-888-11	METAL CHIP	51K	0.5%	1/16W

MB-90

Ref. No.	Part No.	Description	Quantity	Unit Cost	Material Cost	Remarks	Ref. No.	Part No.	Description	Quantity	Unit Cost	Material Cost	Remarks
R846	1-211-969-11	METAL CHIP	10	0.5%	1/16W		R937	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R847	1-216-841-11	METAL CHIP	47K	5%	1/16W		R938	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R848	1-211-969-11	METAL CHIP	10	0.5%	1/16W		R939	1-216-835-11	METAL CHIP	15K	5%	1/16W	
R849	1-216-833-91	RES-CHIP	10K	5%	1/16W		R940	1-216-840-11	METAL CHIP	39K	5%	1/16W	
R850	1-216-821-11	METAL CHIP	1K	5%	1/16W		R941	1-216-840-11	METAL CHIP	39K	5%	1/16W	
R851	1-218-888-11	METAL CHIP	51K	0.5%	1/16W		R942	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R852	1-216-845-11	METAL CHIP	100K	5%	1/16W		R943	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R853	1-216-864-11	METAL CHIP	0	5%	1/16W		R944	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R854	1-216-843-11	METAL CHIP	68K	5%	1/16W		R945	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R856	1-216-864-11	METAL CHIP	0	5%	1/16W		R946	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R857	1-218-869-11	METAL CHIP	8.2K	0.5%	1/16W		R947	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R859	1-218-867-11	METAL CHIP	6.8K	0.5%	1/16W		R948	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R860	1-218-871-11	METAL CHIP	10K	0.5%	1/16W		R949	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R861	1-216-833-91	RES-CHIP	10K	5%	1/16W		R950	1-216-817-11	METAL CHIP	470	5%	1/16W	
R862	1-216-823-11	METAL CHIP	1.5K	5%	1/16W		R951	1-216-836-11	METAL CHIP	18K	5%	1/16W	
R864	1-216-809-11	METAL CHIP	100	5%	1/16W		R952	1-218-847-11	METAL CHIP	1K	0.5%	1/16W	
R865	1-216-825-11	METAL CHIP	2.2K	5%	1/16W		R953	1-218-847-11	METAL CHIP	1K	0.5%	1/16W	
R866	1-218-707-11	RES-CHIP	4.3K	5%	1/16W		R954	1-216-817-11	METAL CHIP	470	5%	1/16W	
R867	1-216-864-11	METAL CHIP	0	5%	1/16W		R955	1-218-847-11	METAL CHIP	1K	0.5%	1/16W	
R868	1-216-861-11	METAL CHIP	2.2M	5%	1/16W		R956	1-218-847-11	METAL CHIP	1K	0.5%	1/16W	
R870	1-216-833-91	RES-CHIP	10K	5%	1/16W		R957	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R871	1-216-821-11	METAL CHIP	1K	5%	1/16W		R958	1-216-824-11	METAL CHIP	1.8K	5%	1/16W	
R872	1-218-871-11	METAL CHIP	10K	0.5%	1/16W		R959	1-216-824-11	METAL CHIP	1.8K	5%	1/16W	
R873	1-218-871-11	METAL CHIP	10K	0.5%	1/16W		R960	1-216-803-11	METAL CHIP	33	5%	1/16W	
R874	1-216-864-11	METAL CHIP	0	5%	1/16W		R961	1-216-834-11	METAL CHIP	12K	5%	1/16W	
R875	1-216-864-11	METAL CHIP	0	5%	1/16W		R962	1-216-834-11	METAL CHIP	12K	5%	1/16W	
R876	1-216-817-11	METAL CHIP	470	5%	1/16W		R963	1-216-813-11	METAL CHIP	220	5%	1/16W	
R877	1-216-864-11	METAL CHIP	0	5%	1/16W		R964	1-216-836-11	METAL CHIP	18K	5%	1/16W	
R886	1-216-845-11	METAL CHIP	100K	5%	1/16W		R965	1-216-817-11	METAL CHIP	470	5%	1/16W	
R887	1-216-805-11	METAL CHIP	47	5%	1/16W		R966	1-216-817-11	METAL CHIP	470	5%	1/16W	
R888	1-216-833-91	RES-CHIP	10K	5%	1/16W		R967	1-216-817-11	METAL CHIP	470	5%	1/16W	
R890	1-216-864-11	METAL CHIP	0	5%	1/16W		R968	1-216-864-11	METAL CHIP	0	5%	1/16W	
R897	1-216-797-11	METAL CHIP	10	5%	1/16W		R970	1-216-801-11	METAL CHIP	22	5%	1/16W	
R902	1-218-857-11	METAL CHIP	2.7K	0.5%	1/16W		R971	1-216-864-11	METAL CHIP	0	5%	1/16W	
R903	1-218-878-11	METAL CHIP	20K	0.5%	1/16W		R972	1-216-864-11	METAL CHIP	0	5%	1/16W	
R904	1-218-857-11	METAL CHIP	2.7K	0.5%	1/16W		R977	1-216-809-11	METAL CHIP	100	5%	1/16W	
R905	1-218-857-11	METAL CHIP	2.7K	0.5%	1/16W		R978	1-216-833-91	RES-CHIP	10K	5%	1/16W	
R906	1-216-833-91	RES-CHIP	10K	5%	1/16W		R979	1-216-833-91	RES-CHIP	10K	5%	1/16W	
R911	1-216-833-91	RES-CHIP	10K	5%	1/16W		R980	1-216-809-11	METAL CHIP	100	5%	1/16W	
R912	1-216-857-11	METAL CHIP	1M	5%	1/16W		R981	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R913	1-216-827-11	METAL CHIP	3.3K	5%	1/16W								< COMPOSITION CIRCUIT BLOCK >
R914	1-216-845-11	METAL CHIP	100K	5%	1/16W		RB001	1-233-967-11	RES, NETWORK (CHIP TYPE)	10K			
R917	1-216-864-11	METAL CHIP	0	5%	1/16W		RB002	1-233-967-11	RES, NETWORK (CHIP TYPE)	10K			
R921	1-216-864-11	METAL CHIP	0	5%	1/16W		RB003	1-233-967-11	RES, NETWORK (CHIP TYPE)	10K			
R922	1-216-833-91	RES-CHIP	10K	5%	1/16W		RB004	1-233-967-11	RES, NETWORK (CHIP TYPE)	10K			
R923	1-216-833-91	RES-CHIP	10K	5%	1/16W		RB005	1-233-967-11	RES, NETWORK (CHIP TYPE)	10K			
R924	1-218-294-11	RES-CHIP	30K	5%	1/16W								
R925	1-216-821-11	METAL CHIP	1K	5%	1/16W		RB006	1-233-967-11	RES, NETWORK (CHIP TYPE)	10K			
R926	1-216-797-11	METAL CHIP	10	5%	1/16W		RB007	1-233-967-11	RES, NETWORK (CHIP TYPE)	10K			
R927	1-216-813-11	METAL CHIP	220	5%	1/16W		RB008	1-233-967-11	RES, NETWORK (CHIP TYPE)	10K			
R928	1-216-844-11	METAL CHIP	82K	5%	1/16W		RB701	1-233-967-11	RES, NETWORK (CHIP TYPE)	10K			(F5)
R929	1-216-835-11	METAL CHIP	15K	5%	1/16W		RB702	1-233-967-11	RES, NETWORK (CHIP TYPE)	10K			(F5)
R930	1-216-841-11	METAL CHIP	47K	5%	1/16W								
R933	1-216-841-11	METAL CHIP	47K	5%	1/16W		RB703	1-233-967-11	RES, NETWORK (CHIP TYPE)	10K			(F5)
R934	1-216-844-11	METAL CHIP	82K	5%	1/16W								< VARIABLE RESISTOR >
							RV301	1-225-315-11	RES, VAR, CARBON	10K/10K			
							RV501	1-241-391-11	RES, ADJ, METAL GLAZE	470			
							RV651	1-223-583-11	RES, ADJ, CARBON	1K			

Ref. No.	Part No.	Description	Remarks
		< SWITCH >	
S351	1-571-277-31	SWITCH, SLIDE (LIINE SELECT (IN/OUT)) (FX1)	
S501	1-762-983-11	SWITCH, PUSH	
S701	1-771-248-11	SWITCH, TACTILE ((STOP))	
S702	1-771-248-11	SWITCH, TACTILE (PAUSE)	
S703	1-771-248-11	SWITCH, TACTILE ((NEXT))	
S704	1-771-248-11	SWITCH, TACTILE ((REW))	
S705	1-762-526-11	SWITCH (TITLE)	
S706	1-762-526-11	SWITCH (DVD MENU)	
S707	1-762-526-11	SWITCH (RETURN)	
S708	1-762-526-11	SWITCH (DISPLAY)	
S709	1-771-909-21	SWITCH, TACTILE (ENTER)	
S710	1-572-922-11	SWITCH, SLIDE (HOLD)	
S711	1-771-248-11	SWITCH, TACTILE ((PLAY))	
S712	1-771-248-11	SWITCH, TACTILE (POWER)	
S713	1-762-805-41	SWITCH, PUSH (1 KEY) (DOOR SW1)	
S714	1-762-805-41	SWITCH, PUSH (1 KEY) (DOOR SW2)	
S715	1-762-805-41	SWITCH, PUSH (1 KEY) (OPEN) (FX1)	
S716	1-572-922-11	SWITCH, SLIDE (HP SURROUND)	
		< THERMISTOR >	
TH701	1-809-357-21	THERMISTOR, NTC (2125)	
		< VARISTOR >	
VDR401	1-801-864-21	VARISTOR, CHIP	
VDR402	1-801-864-21	VARISTOR, CHIP	
VDR501	1-801-864-21	VARISTOR, CHIP	
VDR502	1-801-864-21	VARISTOR, CHIP	
		< VIBRATOR >	
X001	1-781-185-21	VIBRATOR, CERAMIC (12.5MHz)	
X002	1-781-796-21	VIBRATOR, CRYSTAL (27MHz)	
X701	1-767-359-11	VIBRATOR, CERAMIC (4MHz)	
* A-6065-531-A		TP-61 BOARD, COMPLETE (FX1:US,CND)	

* A-6065-432-A		TP-61 BOARD, COMPLETE	
		(FX1:AEP,UK,CN,HK)	

		< CAPACITOR >	
C1101	1-110-398-11	TANTAL. CHIP 15uF 20% 35V	
C1102	1-110-398-11	TANTAL. CHIP 15uF 20% 35V	
C1103	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C1104	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C1105	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C1106	1-164-930-11	CERAMIC CHIP 330PF 5% 16V	
C1107	1-164-935-11	CERAMIC CHIP 470PF 10% 16V	
C1108	1-135-212-21	TANTAL. CHIP 2.2uF 20% 35V	
C1109	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C1110	1-119-751-11	TANTAL. CHIP 22uF 20% 16V	
C1111	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C1112	1-115-581-11	TANTAL. CHIP 100uF 20% 16V	
C1113	1-164-874-11	CERAMIC CHIP 100PF 5% 16V	
C1114	1-113-981-11	TANTAL. CHIP 22uF 20% 20V	
C1115	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	

Ref. No.	Part No.	Description	Remarks
C1116	1-135-212-21	TANTAL. CHIP 2.2uF 20% 35V	
C1117	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C1118	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C1119	1-125-817-11	CERAMIC CHIP 10uF 10% 6.3V	
C1120	1-125-817-11	CERAMIC CHIP 10uF 10% 6.3V	
C1121	1-125-817-11	CERAMIC CHIP 10uF 10% 6.3V	
C1201	1-115-467-11	CERAMIC CHIP 0.22uF 10% 10V	
C1202	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C1203	1-115-581-11	TANTAL. CHIP 100uF 20% 16V	
C1204	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C1205	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C1206	1-164-942-11	CERAMIC CHIP 0.0068uF 10% 16V	
C1207	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C1208	1-104-912-11	TANTAL. CHIP 3.3uF 20% 16V	
C1209	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C1210	1-117-949-81	CERAMIC CHIP 820PF 10% 16V	
C1211	1-125-822-11	TANTALUM 10uF 20% 10V	
C1212	1-164-936-11	CERAMIC CHIP 680PF 10% 16V	
C1213	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	(AEP,UK,CN,HK)
C1214	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	(AEP,UK,CN,HK)
C1215	1-119-923-81	CERAMIC CHIP 0.047uF 10% 10V	
C1216	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C1217	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C1218	1-164-872-11	CERAMIC CHIP 82PF 5% 16V	
C1219	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C1220	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C1221	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C1222	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C1223	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C1224	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C1225	1-125-837-91	CERAMIC CHIP 1uF 10% 6.3V	
C1226	1-125-837-91	CERAMIC CHIP 1uF 10% 6.3V	
C1227	1-125-837-91	CERAMIC CHIP 1uF 10% 6.3V	
C1228	1-164-850-11	CERAMIC CHIP 10PF 0.50PF 16V	
C1229	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C1230	1-164-848-11	CERAMIC CHIP 8PF 0.50PF 16V	(AEP,UK,CN,HK)
C1231	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C1232	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C1233	1-104-912-11	TANTAL. CHIP 3.3uF 20% 16V	
C1234	1-115-581-11	TANTAL. CHIP 100uF 20% 16V	
C1235	1-135-145-11	TANTALUM CHIP 0.47uF 10% 35V	
C1236	1-125-817-11	CERAMIC CHIP 10uF 10% 6.3V	
C1237	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C1241	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C1242	1-125-837-91	CERAMIC CHIP 1uF 10% 6.3V	
C1243	1-125-837-91	CERAMIC CHIP 1uF 10% 6.3V	
C1244	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C1245	1-115-581-11	TANTAL. CHIP 100uF 20% 16V	
C1246	1-115-581-11	TANTAL. CHIP 100uF 20% 16V	
C1247	1-115-581-11	TANTAL. CHIP 100uF 20% 16V	
C1249	1-164-941-11	CERAMIC CHIP 0.0047uF 10% 16V	
C1250	1-164-941-11	CERAMIC CHIP 0.0047uF 10% 16V	
C1251	1-164-941-11	CERAMIC CHIP 0.0047uF 10% 16V	
C1254	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C1255	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	

TP-61

Ref. No.	Part No.	Description		Remarks	Ref. No.	Part No.	Description	Remarks
C1301	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		< CONNECTOR >	
C1302	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V			
C1303	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V			
C1304	1-164-872-11	CERAMIC CHIP	82PF	5%	16V	CN1101	1-784-894-11	CONNECTOR, FFC/FPC 32P
C1305	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	CN1102	1-691-350-21	CONNECTOR, FFC/FPC (ZIF) 12P
						CN1103	1-778-506-21	PIN, CONNECTOR (PC BOARD) 2P
						CN1104	1-778-506-21	PIN, CONNECTOR (PC BOARD) 2P
						CN1301	1-784-894-11	CONNECTOR, FFC/FPC 32P
C1306	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		< DIODE >	
C1307	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V			
C1308	1-164-935-11	CERAMIC CHIP	470PF	10%	16V			
C1309	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	D1101	8-719-977-22	DIODE UDZ-TE-17-9.1B
C1310	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	D1102	8-719-938-75	DIODE SB05-05CP-TB
						D1103	8-719-801-48	DIODE 1SS193-TE85L
C1311	1-164-874-11	CERAMIC CHIP	100PF	5%	16V	D1104	8-719-938-75	DIODE SB05-05CP-TB
C1312	1-164-862-11	CERAMIC CHIP	33PF	5%	16V	D1105	8-719-938-75	DIODE SB05-05CP-TB
C1313	1-164-862-11	CERAMIC CHIP	33PF	5%	16V			
C1314	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V	D1106	8-719-938-75	DIODE SB05-05CP-TB
C1315	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	D1107	8-719-801-48	DIODE 1SS193-TE85L
						D1108	8-719-056-93	DIODE UDZ-TE-17-18B
C1316	1-164-739-11	CERAMIC CHIP	560PF	5%	50V	D1109	8-719-069-55	DIODE UDZS-TE17-5.6B
C1317	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	D1110	8-719-069-59	DIODE UDZS-TE17-8.2B
C1318	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V			
C1319	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	D1111	8-719-977-40	DIODE UDZ-TE-17-13B
C1320	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	D1201	8-713-102-80	DIODE 1T369-01-T8A (AEP,UK,CN,HK)
						D1302	8-719-057-55	DIODE MA152K-TX
C1321	1-164-862-11	CERAMIC CHIP	33PF	5%	16V	D1303	8-719-022-91	DIODE MA335-TX
C1322	1-164-739-11	CERAMIC CHIP	560PF	5%	50V	D1304	8-719-976-99	DIODE UDZ-TE-17-5.1B
C1323	1-164-739-11	CERAMIC CHIP	560PF	5%	50V			
C1324	1-164-739-11	CERAMIC CHIP	560PF	5%	50V	D1305	8-719-976-99	DIODE UDZ-TE-17-5.1B
C1325	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	D1306	8-719-038-48	DIODE 1SS319 (TE85R)
							< FUSE >	
C1326	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	△F1101	1-533-922-21	FUSE, CHIP
C1327	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V			
C1328	1-164-874-11	CERAMIC CHIP	100PF	5%	16V		< FILTER >	
C1329	1-164-882-11	CERAMIC CHIP	220PF	5%	16V	FL1102	1-234-177-21	FILTER, CHIP EMI
C1330	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V			
							< IC >	
C1331	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	IC1101	8-759-664-19	IC XC6367D103ML
C1332	1-125-817-11	CERAMIC CHIP	10uF	10%	6.3V	IC1201	8-759-450-52	IC IR3Y29B4
C1333	1-125-817-11	CERAMIC CHIP	10uF	10%	6.3V	IC1202	8-759-672-76	IC AK9813BF-E2
C1334	1-162-959-11	CERAMIC CHIP	330PF	5%	50V	IC1301	8-749-016-07	IC LZ9GJ18
C1335	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	IC1302	8-759-710-79	IC NJM2107F-TE2
C1336	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	IC1303	8-759-058-58	IC TC7S04FU (TE85R)
C1337	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	IC1304	8-759-058-62	IC TC7S08FU (TE85R)
C1338	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	IC1305	8-759-586-19	IC TC7WH123FU (TE12R)
C1339	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V			
C1340	1-125-817-11	CERAMIC CHIP	10uF	10%	6.3V		< COIL >	
						L1101	1-412-031-11	INDUCTOR CHIP 47uH
C1341	1-164-862-11	CERAMIC CHIP	33PF	5%	16V	L1102	1-412-031-11	INDUCTOR CHIP 47uH
C1342	1-104-913-11	TANTAL. CHIP	10uF	20%	16V	L1103	1-412-031-11	INDUCTOR CHIP 47uH
C1343	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	L1104	1-412-031-11	INDUCTOR CHIP 47uH
C1344	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	L1105	1-412-031-11	INDUCTOR CHIP 47uH
C1345	1-125-817-11	CERAMIC CHIP	10uF	10%	6.3V			
						L1106	1-412-031-11	INDUCTOR CHIP 47uH
C1346	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	L1201	1-412-956-21	INDUCTOR 27uH (AEP,UK,CN,HK)
C1347	1-115-419-11	CERAMIC CHIP	3300PF	5%	25V	L1301	1-412-953-11	INDUCTOR 15uH
C1348	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	L1302	1-412-944-11	INDUCTOR 2.7uH
C1349	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	L1303	1-412-947-11	INDUCTOR 4.7uH
C1350	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V			
						L1304	1-412-947-11	INDUCTOR 4.7uH
C1351	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V			
C1352	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V			
C1353	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V			
C1354	1-164-874-11	CERAMIC CHIP	100PF	5%	16V			
C1355	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V			
C1356	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V			

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 △标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
		< TRANSISTOR >		R1224	1-218-963-11	RES-CHIP	6.8K 5% 1/16W
Q1101	8-729-921-72	TRANSISTOR 2SD1781K-T146-R		R1225	1-218-965-11	RES-CHIP	10K 5% 1/16W
Q1102	8-729-048-88	TRANSISTOR 2SK2788VYTR		R1226	1-218-965-11	RES-CHIP	10K 5% 1/16W
Q1103	8-729-904-87	TRANSISTOR 2SB1197K-T-146-R		R1229	1-216-288-11	RES-CHIP	5.6M 5% 1/8W
Q1104	8-729-904-87	TRANSISTOR 2SB1197K-T-146-R					(AEP,UK,CN,HK)
Q1105	8-729-921-72	TRANSISTOR 2SD1781K-T146-R		R1230	1-218-989-11	RES-CHIP	1M 5% 1/16W
Q1202	8-729-427-61	TRANSISTOR XP4210-TXE		R1233	1-218-962-11	RES-CHIP	5.6K 5% 1/16W
Q1203	8-729-029-08	TRANSISTOR DTC124XUA-T106		R1234	1-218-947-11	RES-CHIP	330 5% 1/16W
			(AEP,UK,CN,HK)	R1235	1-218-955-11	RES-CHIP	1.5K 5% 1/16W
Q1204	8-729-230-60	TRANSISTOR 2SA1586YG-TE85L		R1236	1-218-941-11	RES-CHIP	100 5% 1/16W
Q1205	8-729-428-01	TRANSISTOR XP6115-TXE		R1237	1-218-941-11	RES-CHIP	100 5% 1/16W
Q1206	8-729-029-08	TRANSISTOR DTC124XUA-T106		R1238	1-218-941-11	RES-CHIP	100 5% 1/16W
Q1207	8-729-230-60	TRANSISTOR 2SA1586YG-TE85L		R1239	1-218-951-11	RES-CHIP	680 5% 1/16W
Q1208	8-729-231-74	TRANSISTOR 2SC4116GL-TE85L					(AEP,UK,CN,HK)
Q1209	8-729-231-74	TRANSISTOR 2SC4116GL-TE85L		R1240	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
Q1210	8-729-026-58	TRANSISTOR FMY3A-T148		R1242	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
Q1211	8-729-026-55	TRANSISTOR FMY4A-T148		R1243	1-218-959-11	RES-CHIP	3.3K 5% 1/16W
Q1212	8-729-037-52	TRANSISTOR 2SD2216J-QR (TX),SO		R1245	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
			(AEP,UK,CN,HK)	R1246	1-218-962-11	RES-CHIP	5.6K 5% 1/16W
Q1213	8-729-029-08	TRANSISTOR DTC124XUA-T106		R1247	1-218-964-11	RES-CHIP	8.2K 5% 1/16W
Q1301	8-729-901-90	TRANSISTOR 2SC2411K-T-146-CP		R1248	1-218-966-11	RES-CHIP	12K 5% 1/16W
		< RESISTOR >		R1249	1-218-973-11	RES-CHIP	47K 5% 1/16W
R1101	1-219-724-11	METAL CHIP	1 1% 1/4W	R1250	1-220-184-11	RES-CHIP	1.3K 5% 1/16W
R1102	1-218-953-11	RES-CHIP	1K 5% 1/16W	R1251	1-218-952-11	RES-CHIP	820 5% 1/16W
R1103	1-218-981-11	RES-CHIP	220K 5% 1/16W	R1252	1-218-958-11	RES-CHIP	2.7K 5% 1/16W
R1104	1-218-965-11	RES-CHIP	10K 5% 1/16W	R1253	1-218-959-11	RES-CHIP	3.3K 5% 1/16W
R1105	1-218-929-11	RES-CHIP	10 5% 1/16W	R1254	1-218-950-11	RES-CHIP	560 5% 1/16W
R1106	1-218-953-11	RES-CHIP	1K 5% 1/16W	R1255	1-218-964-11	RES-CHIP	8.2K 5% 1/16W
R1107	1-218-953-11	RES-CHIP	1K 5% 1/16W	R1256	1-208-696-11	RES-CHIP	3.6K 5% 1/16W
R1108	1-218-974-11	RES-CHIP	56K 5% 1/16W	R1257	1-208-696-11	RES-CHIP	3.6K 5% 1/16W
R1109	1-218-966-11	RES-CHIP	12K 5% 1/16W	R1258	1-220-181-11	RES-CHIP	750 5% 1/16W
R1110	1-218-953-11	RES-CHIP	1K 5% 1/16W	R1259	1-220-181-11	RES-CHIP	750 5% 1/16W
R1111	1-218-953-11	RES-CHIP	1K 5% 1/16W	R1260	1-218-929-11	RES-CHIP	10 5% 1/16W
R1112	1-218-990-11	SHORT	0	R1261	1-220-181-11	RES-CHIP	750 5% 1/16W
R1113	1-218-990-11	SHORT	0	R1262	1-220-181-11	RES-CHIP	750 5% 1/16W
R1114	1-216-295-91	SHORT	0	R1263	1-218-929-11	RES-CHIP	10 5% 1/16W
R1202	1-218-959-11	RES-CHIP	3.3K 5% 1/16W	R1264	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
R1204	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	R1265	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
R1205	1-218-958-11	RES-CHIP	2.7K 5% 1/16W	R1266	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
R1207	1-218-965-11	RES-CHIP	10K 5% 1/16W	R1267	1-218-973-11	RES-CHIP	47K 5% 1/16W
R1208	1-218-950-11	RES-CHIP	560 5% 1/16W	R1268	1-218-965-11	RES-CHIP	10K 5% 1/16W
R1209	1-218-983-11	RES-CHIP	330K 5% 1/16W	R1269	1-218-965-11	RES-CHIP	10K 5% 1/16W
R1210	1-208-713-11	METAL CHIP	18K 0.5% 1/16W	R1270	1-218-965-11	RES-CHIP	10K 5% 1/16W
R1211	1-218-983-11	RES-CHIP	330K 5% 1/16W	R1271	1-218-965-11	RES-CHIP	10K 5% 1/16W
R1212	1-218-953-11	RES-CHIP	1K 5% 1/16W	R1272	1-218-965-11	RES-CHIP	10K 5% 1/16W
R1213	1-218-941-11	METAL CHIP	100 0.5% 1/16W	R1273	1-218-965-11	RES-CHIP	10K 5% 1/16W
R1214	1-218-941-11	METAL CHIP	100 0.5% 1/16W	R1274	1-218-955-11	RES-CHIP	1.5K 5% 1/16W
							(AEP,UK,CN,HK)
R1215	1-219-570-11	RES-CHIP	10M 5% 1/16W	R1275	1-218-965-11	RES-CHIP	10K 5% 1/16W
R1219	1-218-973-11	RES-CHIP	47K 5% 1/16W	R1276	1-218-965-11	RES-CHIP	10K 5% 1/16W
			(AEP,UK,CN,HK)	R1283	1-218-965-11	RES-CHIP	10K 5% 1/16W
R1221	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	R1284	1-218-985-11	RES-CHIP	470K 5% 1/16W
			(AEP,UK,CN,HK)	R1301	1-218-983-11	RES-CHIP	330K 5% 1/16W
R1222	1-218-963-11	RES-CHIP	6.8K 5% 1/16W	R1302	1-218-950-11	RES-CHIP	560 5% 1/16W
R1223	1-208-696-11	RES-CHIP	3.6K 5% 1/16W	R1303	1-218-950-11	RES-CHIP	560 5% 1/16W
				R1304	1-218-950-11	RES-CHIP	560 5% 1/16W
				R1305	1-218-986-11	RES-CHIP	560K 5% 1/16W
				R1306	1-218-948-11	RES-CHIP	390 5% 1/16W

TP-61

Ref. No.	Part No.	Description	Remarks
R1307	1-218-950-11	RES-CHIP 560	5% 1/16W
R1308	1-218-950-11	RES-CHIP 560	5% 1/16W
R1309	1-218-986-11	RES-CHIP 560K	5% 1/16W
R1310	1-218-950-11	RES-CHIP 560	5% 1/16W
R1311	1-218-989-11	RES-CHIP 1M	5% 1/16W
R1312	1-218-990-11	SHORT 0	
R1315	1-218-990-11	SHORT 0	
R1316	1-218-950-11	RES-CHIP 560	5% 1/16W
R1317	1-208-696-11	RES-CHIP 3.6K	5% 1/16W
R1318	1-218-962-11	RES-CHIP 5.6K	5% 1/16W
R1319	1-218-973-11	RES-CHIP 47K	5% 1/16W
R1320	1-218-975-11	RES-CHIP 68K	5% 1/16W
R1322	1-218-950-11	RES-CHIP 560	5% 1/16W
R1323	1-218-950-11	RES-CHIP 560	5% 1/16W
R1324	1-218-975-11	RES-CHIP 68K	5% 1/16W
R1325	1-218-989-11	RES-CHIP 1M	5% 1/16W
R1326	1-218-965-11	RES-CHIP 10K	5% 1/16W
R1327	1-218-958-11	RES-CHIP 2.7K	5% 1/16W
R1328	1-218-964-11	RES-CHIP 8.2K	5% 1/16W
R1330	1-218-958-11	RES-CHIP 2.7K	5% 1/16W
R1331	1-218-959-11	RES-CHIP 3.3K	5% 1/16W
R1332	1-218-947-11	RES-CHIP 330	5% 1/16W
R1333	1-218-965-11	RES-CHIP 10K	5% 1/16W
R1334	1-218-971-11	RES-CHIP 33K	5% 1/16W
R1335	1-218-941-11	RES-CHIP 100	5% 1/16W
R1336	1-218-939-11	RES-CHIP 68	5% 1/16W
R1337	1-218-981-11	RES-CHIP 220K	5% 1/16W
R1338	1-218-977-11	RES-CHIP 100K	5% 1/16W
R1339	1-218-977-11	RES-CHIP 100K	5% 1/16W
R1340	1-218-977-11	RES-CHIP 100K	5% 1/16W
R1341	1-218-959-11	RES-CHIP 3.3K	5% 1/16W
		< VARIABLE RESISTOR >	
RV1101	1-225-567-21	RES, ADJ, CERMET 2.2K	
RV1301	1-225-672-21	RES, ADJ, CERMET 100K	
RV1302	1-225-567-21	RES, ADJ, CERMET 2.2K	
		< TRANSFORMER >	
T1101	1-435-404-21	TRANSFORMER, CONVERTER OUTPUT	
		< VIBRATOR >	
X1201	1-781-795-21	VIBRATOR, CRYSTAL (3.58MHz)	
X1202	1-781-832-21	VIBRATOR, CRYSTAL (4.4MHz)	(AEP,UK,CN,HK)

Ref. No.	Part No.	Description	Remarks
		MISCELLANEOUS	

38	1-803-942-11	DISPLAY PANEL, LIQUID CRYSTAL	
138	1-803-942-11	DISPLAY PANEL, LIQUID CRYSTAL	
205	1-529-633-11	SPEAKER (4X2CM) (FX1)	
209	1-792-691-11	CABLE, FLEXIBLE FLAT (FX1)	
210	1-418-888-11	INVERTER (FX1)	
212	1-678-130-11	PWB,FLEXIBLE (FX1)	
215	1-803-941-11	DISPLAY PANEL, LIQUID CRYSTAL (FX1)	
		ACCESSORIES	

	1-418-889-11	ADAPTOR, AC	
	1-418-987-11	REMOTECOMMANDER (RMT-D114A)	
	1-770-019-11	ADAPTOR, CONVERSION PLUG 3P	(FX1:UK,HK/F5:UK)
△	1-790-107-22	CORD,POWER (FX1:US,CND)	
△	1-791-638-11	CORD,POWER (FX1:AEP,UK,HK/F5:AEP,UK)	
△	1-791-667-11	CORD,POWER (F5:AUS)	
△	1-791-937-11	CORD,POWER (FX1:CN/F5:CN)	
	1-792-682-11	CORD,CONNECTION (1.5m) (AV CABLE)	
	3-060-538-11	MANUAL, INSTRUCTION (ENGLISH)	(F5:AUS,CN)
	3-060-538-21	MANUAL, INSTRUCTION	(SIMPLIFIED, CHINESE) (F5:CN)
	3-060-719-11	MANUAL, INSTRUCTION (ENGLISH)	(FX1/F5:US,CND)
	3-060-719-21	MANUAL, INSTRUCTION (FRENCH)	(FX1/F5:US,CND)
	3-061-538-11	MANUAL, INSTRUCTION (ENGLISH)	(FX1/F5:AEP,UK)
	3-061-538-21	MANUAL, INSTRUCTION (FRENCH)	(FX1/F5:AEP)
	3-061-538-31	MANUAL, INSTRUCTION (GERMAN)	(FX1/F5:AEP)
	3-061-538-41	MANUAL, INSTRUCTION (ITALIAN)	(FX1/F5:AEP)
	3-061-538-51	MANUAL, INSTRUCTION (DUTCH)	(FX1/F5:AEP)
	3-061-538-61	MANUAL, INSTRUCTION (SPANISH)	(FX1/F5:AEP)
	3-061-539-11	MANUAL, INSTRUCTION (ENGLISH)	(FX1:CN,HK)
	3-061-539-21	MANUAL, INSTRUCTION	(TRADITIONAL CHINESE) (FX1:HK)
	3-061-539-31	MANUAL, INSTRUCTION	(SIMPLIFIED,CHINESE) (FX1:CN,HK)
	3-709-572-01	COVER,BATTERY (FOR RMT-D114A)	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 △标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。
--	--	--