


SERVICE MANUAL RA-2A CHASSIS

<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>
<i>KP-48V75</i>	<i>RM-Y903</i>	<i>US</i>	<i>SCC-N65G-A</i>
<i>KP-48V75</i>	<i>RM-Y903</i>	<i>Canadian</i>	<i>SCC-N66G-A</i>
<i>KP-53V75</i>	<i>RM-Y903</i>	<i>US</i>	<i>SCC-N65F-A</i>
<i>KP-53V75</i>	<i>RM-Y903</i>	<i>Canadian</i>	<i>SCC-N66F-A</i>


<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>
<i>KP-61V75</i>	<i>RM-Y903</i>	<i>US</i>	<i>SCC-N65H-A</i>
<i>KP-61V75</i>	<i>RM-Y903</i>	<i>Canadian</i>	<i>SCC-N66H-A</i>



RM-Y903

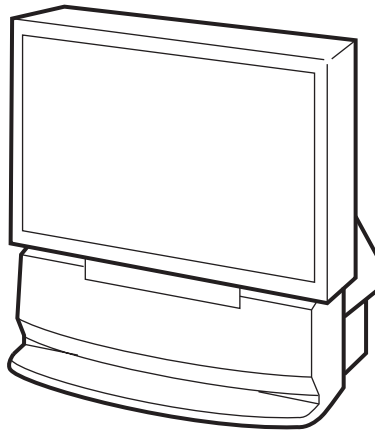

KP-48V75/53V75

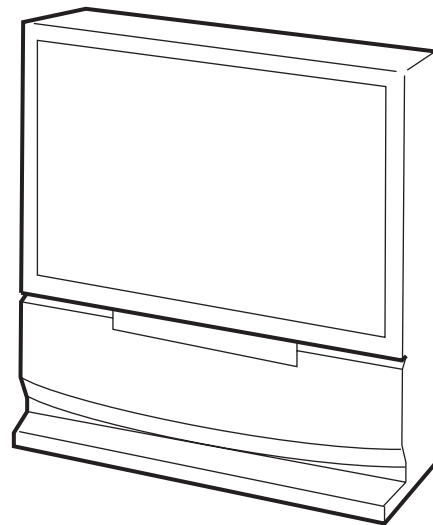

KP-61V75



* Please file according to model size.■

48 53 61

PROJECTION TV
SONY®

SPECIFICATIONS

Projection system 3 picture tubes, 3 lenses, horizontal in-line system

Picture tube 7 inch high-brightness monochrome tubes (6.3 raster size), with optical coupling and liquid cooling system

Projection lenses High performance, large-diameter hybrid lens F1.1

Screen size (measured diagonally)

KP-48V75	48 inches
KP-53V75	53 inches
KP-61V75	61 inches

Television system American TV standards

Channel coverage VHF: 2 – 13 / UHF: 14 – 69 / CATV: 1 – 125

Antenna 75 ohm external antenna terminal for VHF/UHF

Inputs/output

VIDEO IN 1
VIDEO 2 INPUT
VIDEO IN 3
S VIDEO (4-pin mini DIN):
Y: 1 Vp-p, 75-ohms unbalanced, sync negative
C: 0.286 Vp-p (Burst signal) 75 ohms
VIDEO (phono jack): 1 Vp-p, 75-ohms unbalanced, sync negative
AUDIO (phono jacks): 500 mVrms (100% modulation) Impedance : 47 kilohms

VIDEO IN 4
Y: 1 Vp-p, 75-ohms, sync negative
CB: 0.7 Vp-p, 75-ohms
CR: 0.7 Vp-p, 75-ohms

TV OUT
MONITOR OUT
VIDEO (phono jack): 1 Vp-p, 75-ohms unbalanced, sync negative
AUDIO (phono jacks): 500 mVrms (100% modulation), Impedance: 10 kilohms
AUDIO (VAR/FIX) OUT (phono jacks): 500mVrms (100% modulation) Impedance: 5 kilohms

Speaker Full range speaker 100 mm (3.9 inches) diameter

Speaker output 15 W x 2
CENTER SPEAKER IN : 30 W x 1 (NORMAL), 60W x 1 (MAX), 16 ohms

Power requirement 120 V, 60 Hz

Power consumption 175 W
Standby mode: 2.5 W

	Dimensions (W/H/D)	Mass
KP-48V75	1,106 x 1,337 x 571 mm (43 ⁵ / ₈ x 52 ⁵ / ₈ x 22 ¹ / ₂ inches)	70 kg (154 lbs 5 oz)
KP-53V75	1,218 x 1,413 x 614 mm (48 x 55 ⁵ / ₈ x 24 ¹ / ₄ inches)	73 kg (161 lbs 2 oz)
KP-61V75	1,338 x 1,506 x 642 mm (52 ³ / ₄ x 59 ³ / ₈ x 25 ³ / ₈ inches)	124 kg (273 lbs 9 oz)

Supplied accessories Remote control RM-Y903 (1)
Size AA (R6) battery (2)

Optional accessories U/V mixer EAC-66
Connecting cables RK-74A, RK-G34, VMC-10HG, VMC-720M, VMC-810S/820S, YC-15V/30V

Design and specifications are subject to change without notice.

SRS (●)[®] (SOUND RETRIEVAL SYSTEM)

The SRS (●)[®] (SOUND RETRIEVAL SYSTEM) is manufactured by Sony Corporation under license from SRS Labs, Inc. It is covered by U.S. Patent No. 4,748,669. Other U.S. and foreign patents pending.

The word 'SRS' and the SRS symbol (●) are registered trademarks of SRS Labs, Inc.

SAFETY CHECK-OUT (US model only)

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, through functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the condition of the monopole antenna (if any). Make sure the end is not broken off, and has the plastic cap on it. Point out the danger of impalement on a broken antenna to the customer, and recommend the antenna's replacement.
8. Check the B+ and HV to see they are at the values specified. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
9. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5mA (500 microampers) . Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

HOW TO FIND A GOOD EARTH GROUND

A cold-water pipe is guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth-ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms. If a cold-water pipe is not accessible, connect a 60-100 watts trouble light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side of the line, the lamp should light at normal brilliance if the screw is at ground potential. (See Fig. B)

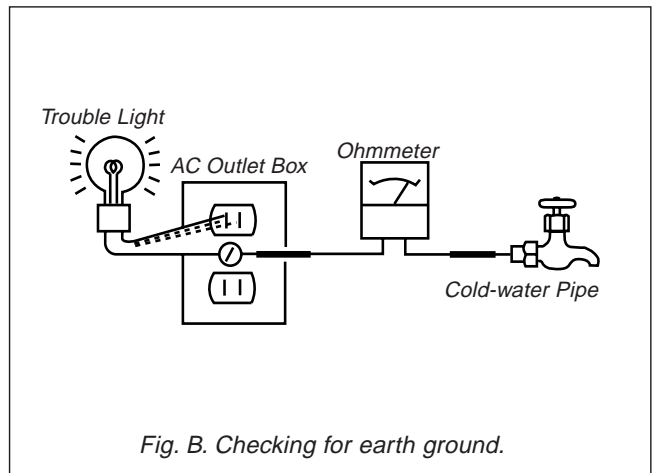
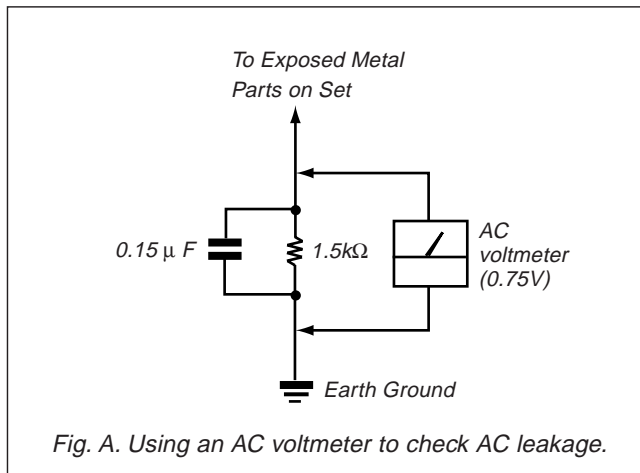


TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL					
Step 1 :	Installing the projection TV	5	2-7.	High-Voltage Cable Installation and Removal	29
Step 2 :	Hook up	5	2-8.	Picture Tube Removal	30
Step 3 :	Setting up the remote control	12	2-9.	Wiring drawings and Wiring layout	31
Step 4 :	Setting up the projection TV automatically (AUTO SET UP) ..	13	2-10.	Service stay Assy How to use and Carry Back Service stay Assy ...	32
	Changing the menu language	15	(1)	Picture Tube Bracket Assy Removal	32
	Watching the TV	15	(2)	Setting of Service stay Assy (KP-48V75/53V75)	33
	Watching tow programs at one time-PIP/P&P(Twin View™)/ CH INDEX ..	16	(3)	Install a Chassis Assy and Carry the Picture Tube Bracket	33
	Freezing the picture (FREEZE)	17	3. SET-UP ADJUSTMENTS		
	Adjusting the picture (VIDEO)	17	4. SAFETY RELATED DP ADJUSTMENTS		
	Adjusting the color temperature (TRINITONE)	18	5. CIRCUIT ADJUSTMENTS		
	Selecting the video mode (VIDEO)	18	6. DIAGRAMS		
	Adjusting the sound (AUDIO)	18	6-1.	Block Diagram (1)	52
	Using audio effect (EFFECT)	19		Block Diagram (2)	55
	Selecting stereo or bilingual programs (MTS)	19		Block Diagram (3)	58
	Setting the speaker switch (SPEAKER)	20	6-2.	Frame Schematic Diagram	61
	Setting audio out (AUDIO OUT)	20	6-3.	Circuit Boards Location	64
	Setting daylight saving time (DAYLIGHT SAVING)	20	6-4.	Printed Wiring Boards and Schematic Diagrams	64
	Setting the clock (CURRENT TIME SET)	21		• A(1/2) Board	65
	Setting the timer to turn the projection TV on and off (ON/OFF TIMER) ...	21		• A(2/2) Board	69
	Customizing the channel names (CHANNEL CAPTION)	21		• G Board	74
	Blocking out a channel (CHANNEL BLOCK)	22		• PD Board	82
	Setting your favorite channels (FAVORITE CHANNEL)	22		• CR, CG, CB Boards	89
	Setting video labels (VIDEO LABEL)	23		• HA, U Boards	93
	Setting Caption Vision (CAPTION VISION)	23		• Z Board	95
	Operating video equipment	23	6-5.	Semiconductors	98
	Operating a cable box or DBS receiver	25	7. EXPLODED VIEWS		
	Troubleshooting	25	7-1.	Cover (KP-48V75/53V75)	100
	Index to parts and controls	26	7-2.	Cover (KP-61V75)	101
2. DISASSEMBLY					
2-1.	Rear Board Removal	27	7-3.	Chassis	102
2-2.	Chassis Assy Removal	27	7-4.	Picture Tube	103
2-3.	Service Position	27	8. ELECTRICAL PARTS LIST		
2-4.	HA Board Removal	28	104		
2-5-1.	Beznet Assy Removal (KP-48V75/53V75)	28			
2-5-2.	Screen Frame Assy Removal (KP-61V75)	28			
2-6-1.	Mirror Cover Assy Removal (KP-48V75/53V75)	29			
2-6-2.	Reflection Mirror Removal (KP-61V75)	29			

(CAUTION)

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

WARNING!!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS. THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK Δ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL TO SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

(ATTENTION)

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

ATTENTION!!

AFIN D'EVITER TOUT RISQUE DE ELECTROCUTION PROVENANT D'UN CHÂSSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÉ LORS DE TOUT DEPANNAGE. LE CHÂSSIS DE CE RECEPTEUR EST DIRECTEMENT RACCORDÉ Á L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS Á LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET PAR UNE MAPQUE Δ SUR LES SCHÉMAS DE PRINCIPE, LES VUES EXPLOSÉES ET LES LISTES DE PIÉCES CONT D'UNE IMPORTANCE CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMÉRO DE PIÉCE EST INDIQUÉ DANS LE PRÉSENT MANUEL OU DANS DES SUPPLÉMENTS PUBLIÉS PAR SONY. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIÉS DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.

SECTION 1 GENERAL


The operating instructions mentioned here partial abstracts from the Operating Instructions Manual. The page numbers of the Operating Instruction Manual remain as in the manual.(part.no : 3-862-729-11)

Getting Started


Step 1: Installing the projection TV

For the best picture quality, install the projection TV within the areas shown below.

Optimum viewing area (Horizontal)

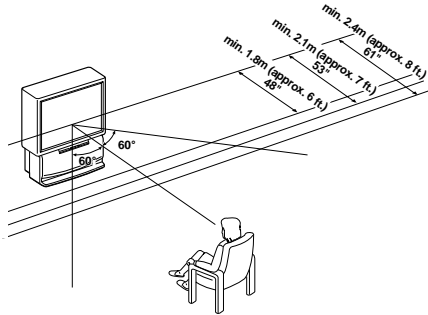


Optimum viewing area (Vertical)

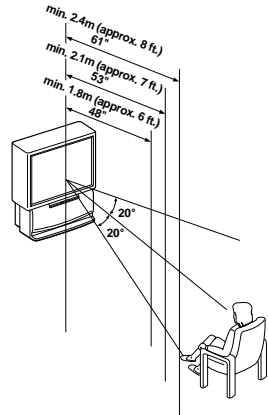

Carrying your projection TV

■ KP-48V75/53V75 only

Be sure to grasp the areas indicated when carrying the projection TV, and to use more than two people.

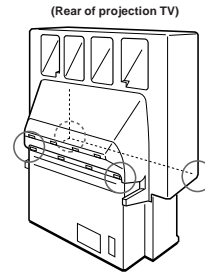

■ KP-61V75 only

Carry your projection TV by the casters.

EN

Preparing for your projection TV


Before you use your projection TV, adjust convergence. For the procedure, see "Step 4: Setting up the projection TV automatically (AUTO SET UP)" on page 21.

Step 2: Hookup

Although you can use either an indoor or outdoor antenna with your projection TV, we recommend that you connect an outdoor antenna or a cable TV system to get better picture quality.

Connecting an antenna

Connect your antenna cable to the VHF/UHF antenna terminal. If you cannot connect your antenna cable directly to the terminal, follow one of the instructions below depending on your cable type.

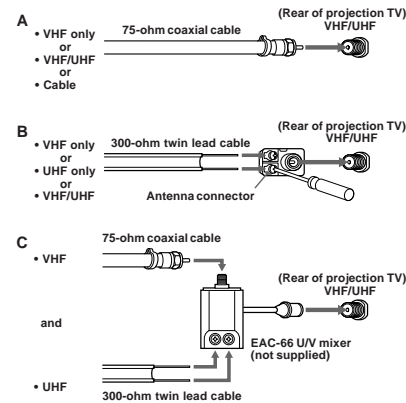


Notes

- Most VHF/UHF combination antennas have a signal splitter. Remove the splitter before attaching the appropriate connector.
- If you use the U/V mixer, snow and noise may appear in the picture when viewing cable TV channels over 37.


Connecting an antenna/cable TV system without a VCR

To cable or antenna




To cable box

If your cable company requires you to connect a cable box, make the connection as follows:

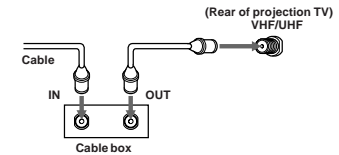

To cable box and cable

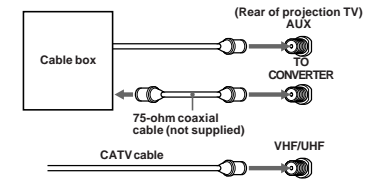


Pay cable TV systems use scrambled or encoded signals requiring a cable box* in addition to the normal cable connection.

* The cable box will be supplied by the cable company.

Note

- You cannot watch the signal through an AUX connector as a window picture.

To cable and antenna

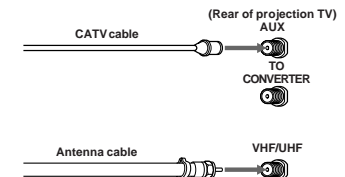

Note

- Do not connect anything to the TO CONVERTER connector in this case.

Connecting an antenna/cable TV system with a VCR

For details on connection, see your VCR instruction manual.

Before making the connection, disconnect the AC power cords of the equipment to be connected.

To a conventional VCR


Note

- To connect a monaural VCR, connect the audio output of the VCR to AUDIO-L (MONO) of VIDEO 1/3 IN on the projection TV.


After making these connections, you will be able to do the following:

- View the playback of video tapes
- Record one TV program while viewing another program
- Watch two TV programs at once using PIP

Without a cable box

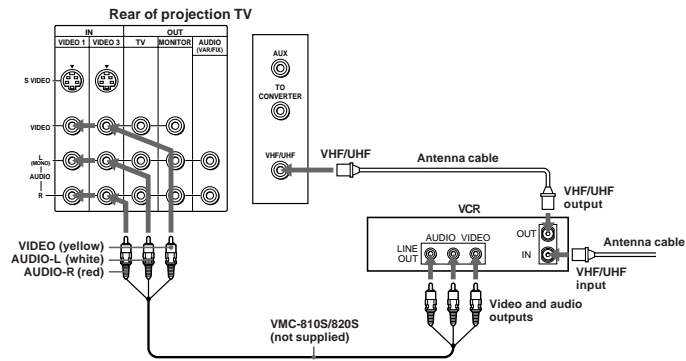

With a cable box

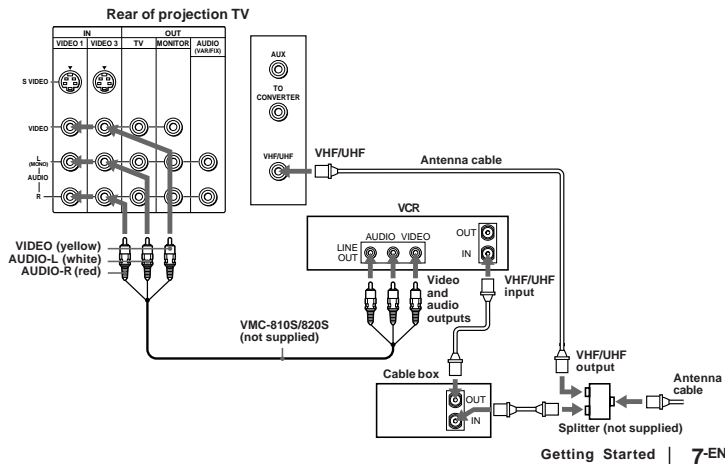


To an S video equipped VCR


If your VCR has an S VIDEO output connector, make the following connections.

Whenever you connect the cable to the S VIDEO input connector, the projection TV automatically receives S video signals.

Without a cable box

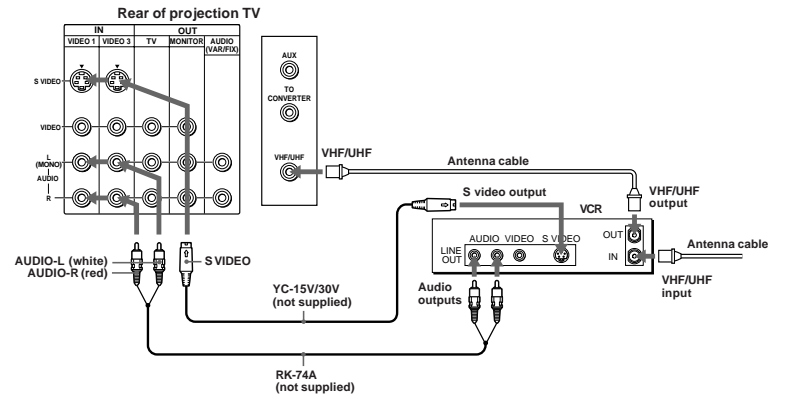

With a cable box

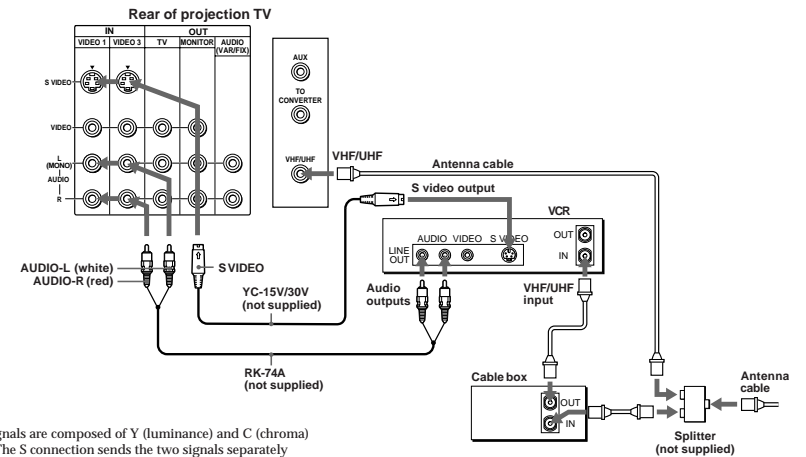


Note

- Video signals are composed of Y (luminance) and C (chroma) signals. The S connection sends the two signals separately preventing degradation, and gives better picture quality compared to conventional connections.

Connecting a DBS receiver


For details on connection, see the instruction manual of the DBS (Digital Broadcasting Satellites) receiver.

To a projection TV

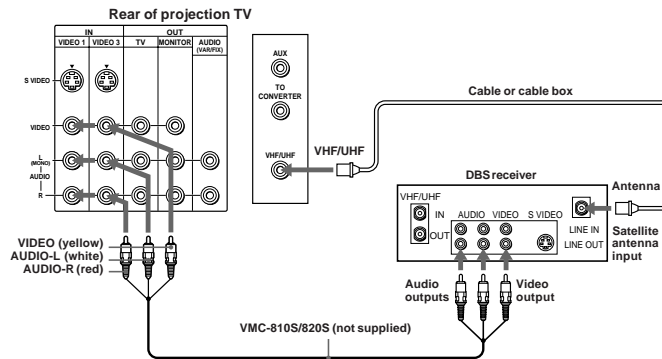


- Note**
- You can use the S VIDEO connector or the composite video connector for the video connection.

To a projection TV and VCR

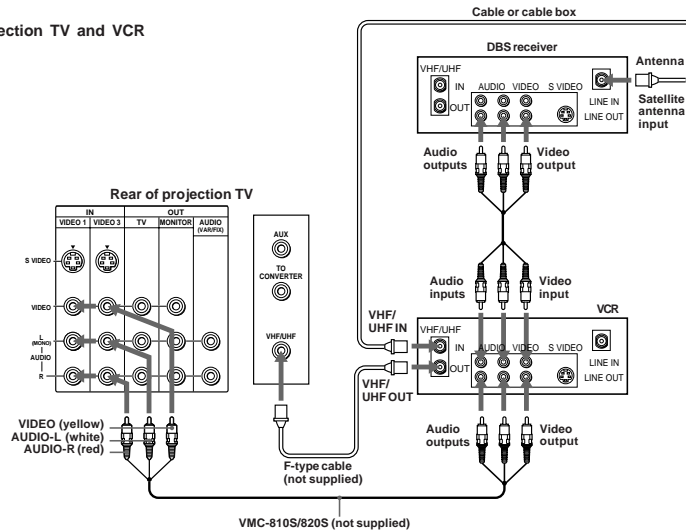

Connecting a camcorder

Use this connection to view a camcorder picture.

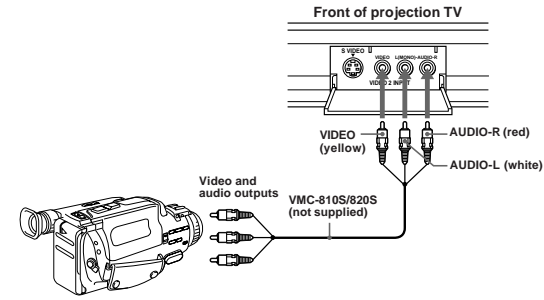


- Notes**
- To connect a monaural camcorder, connect the audio output of the camcorder to AUDIO-L (MONO) of VIDEO 2 INPUT on the projection TV.
 - To connect a camcorder equipped with the S video output, connect the S video output of the camcorder to the S VIDEO connector of the projection TV.

EN

Connecting an audio system

When connecting audio equipment, see page 32 for more information.

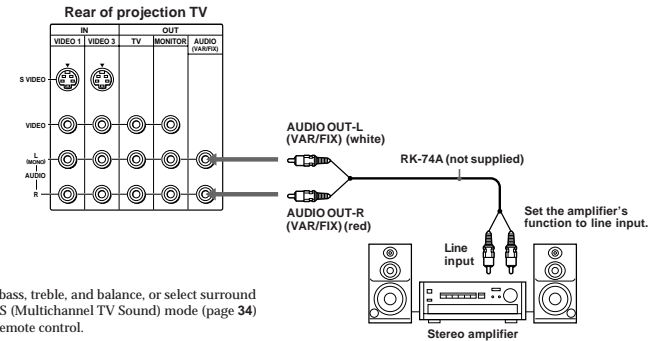


- Note**
- You can adjust the bass, treble, and balance, or select surround (page 33) or an MTS (Multichannel TV Sound) mode (page 34) with the supplied remote control.

Connecting an AV receiver


Connect an optional AV receiver to the VIDEO 1 IN jacks at the rear of the projection TV.

If your AV receiver has the TV input jacks, connect them to the TV OUT jacks at the rear of the projection TV.

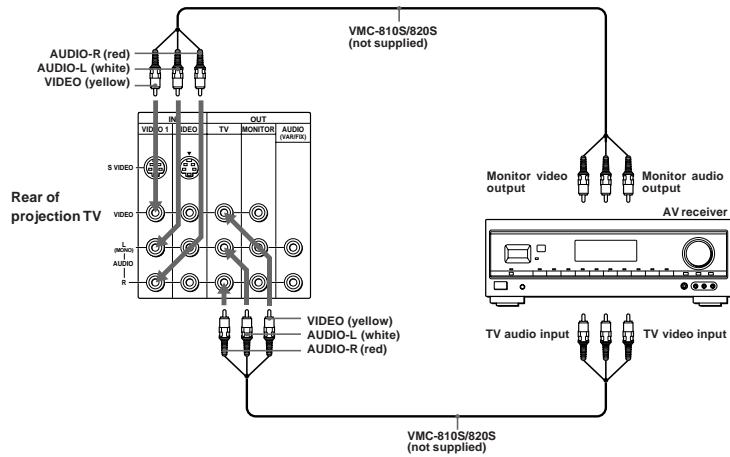


Connecting two VCRs for tape editing using MONITOR OUT

You can record input images displayed on the screen. This type of connection should be used only when you connect from the line input of one VCR, and from the line output of a second VCR.

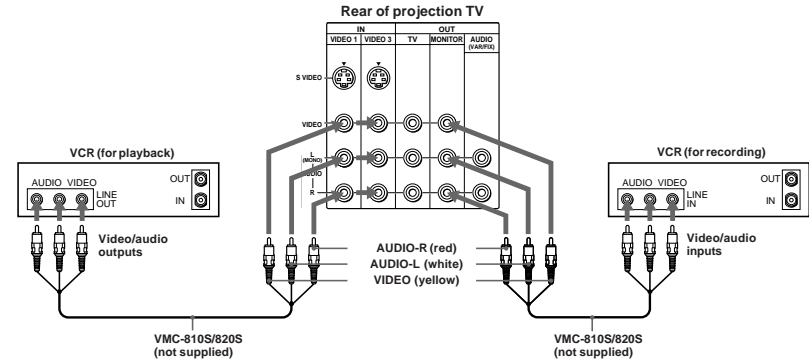

Notes


- Do not change the input signal while editing through MONITOR OUT, or the output signal will also change.
- You can use the S video jack to connect a VCR for playback and the composite video connector to connect a VCR for recording.
- When connecting a single VCR to the projection TV, do not connect the MONITOR OUT to the VCR's line input, while at the same time connecting from the projection TV's VIDEO IN connectors to the VCR's line output, as shown below.

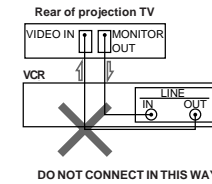

DO NOT CONNECT IN THIS WAY.

Connecting a DVD player without component video output connectors

Connect VIDEO 1/3 connectors on the projection TV to line output connectors on the DVD player.

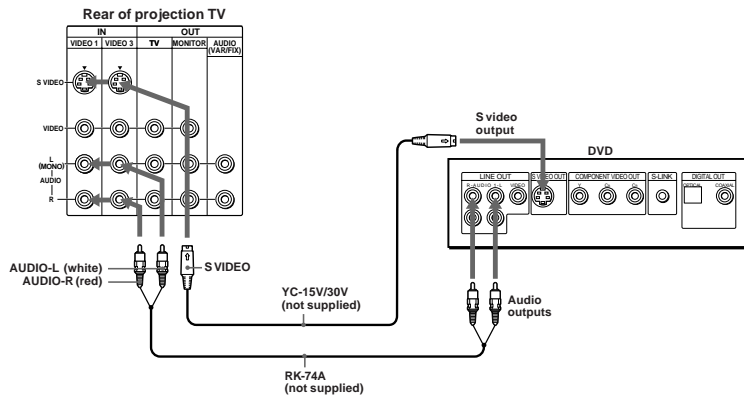


Notes

- Connect your DVD player directly to your TV. Connecting the DVD player through other video equipment will cause unwanted picture noise.
- If your DVD player does not have S video output connector, use composite video connector for the video connection.
- Video signals are composed of Y (luminance) and C (chroma) signals. The S connection sends the two signals separately preventing degradation, and gives better picture quality compared to conventional connections.
- Because the high quality pictures on a DVD disc contain a lot of information, picture noise may appear. In this case, reduce the SHARPNESS level in the VIDEO menu (see SHARPNESS on page 31).

(continued)

Connecting a DVD player with component video output connectors

Component video terminals Y/C_B/C_R provide a sharper, higher resolution picture by reducing the amount of signal processing thus creating a more accurate reproduction of the source. If your DVD player has component video output connectors, connect them to VIDEO 4 IN on the projection TV in the following way.

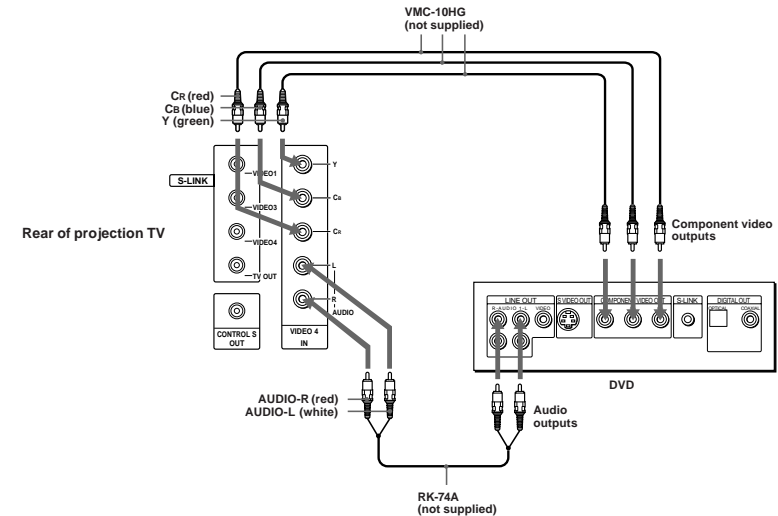


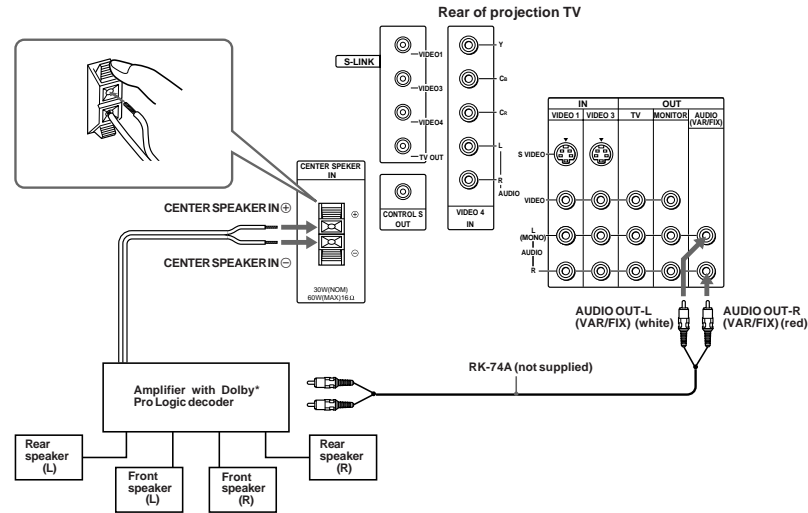
Notes

- Connect your DVD player directly to your TV. Connecting the DVD player through other video equipment will cause unwanted picture noise.
- When the DVD player is connected using VIDEO 4 IN, its MONITOR OUT signals cannot be output.
- Some DVD player connectors may be labeled Y, B-Y, and R-Y. In this case, connect Y (green) on the projection TV to Y on the DVD player, C_B (blue) to B-Y, and C_R (red) to R-Y.
- The jacks of this projection TV are colored in green (Y), blue (C_B), and red (C_R). If line output connectors of your DVD player have different colors, make connections according to their labels.
- Because the high quality pictures on a DVD disc contain a lot of information, picture noise may appear. In this case, reduce the SHARPNESS level in the VIDEO menu (see SHARPNESS on page 31).
- If the incorrect colors appear when using this component video input, recheck the connections they may be reversed.

Connecting an amplifier with Dolby Pro Logic decoder

If you use an amplifier with Dolby Pro Logic decoder instead of the projection TV's audio system, you can still use the projection TV's center speaker. See "Setting the speaker switch (SPEAKER)" on page 35.


* Manufactured under license from Dolby Laboratories Licensing Corporation. Additionally licensed under Canadian patent number 1,037,877. "Dolby", the double-D symbol  and "Pro Logic" are trademarks of Dolby Laboratories Licensing Corporation.



EN

Connecting a Sony SAVA series speaker system

If you have a Sony SAVA series speaker system, connect your speakers to the AUDIO (VAR/FIX) OUT jacks on the rear of the projection TV with the audio cable supplied with the speakers. You can take advantage of the speakers' Dolby Pro Logic surround system and super woofer mode, and control them with the supplied remote control. When connecting a Sony SAVA series speaker system, see page 35 for more information.

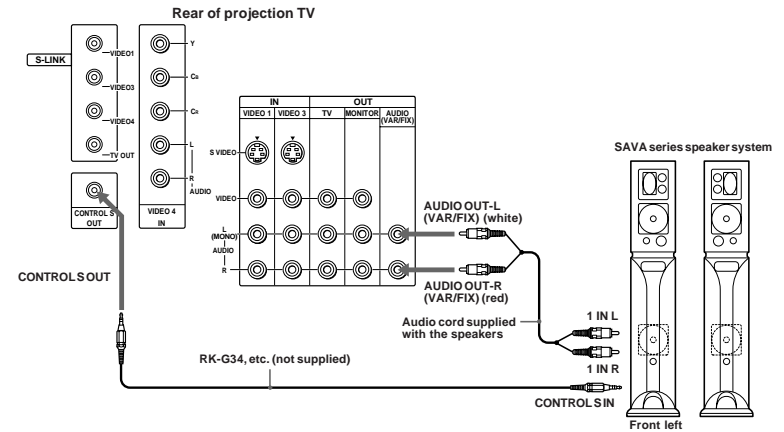

Using the S-Link function

S-Link function is a Sony innovation designed to make your Sony components work together. It allows you to switch automatically the TV's input mode to video when you press the play button on your Sony S-Link VCR. It also allows you to turn the VCR and TV off at the same time with the SYSTEM OFF button on the remote control (see page 44 for details).


Using the S-Link function without a Sony AV receiver

To make use of this function, be sure to connect the video equipment to the VIDEO IN and S-LINK connectors with the same label, that is, to VIDEO 1 IN and S-LINK VIDEO 1, to VIDEO 3 IN and S-LINK VIDEO 3, and to VIDEO 4 IN and S-LINK VIDEO 4.

Notes

- The projection TV may malfunction if you connect the S-Link cable to the projection TV without connecting the other end of the cable to the VCR.
- When making the S-Link connection, be sure to insert all the connectors firmly.

Refer also to the Operating Instructions supplied with your VCR, DBS tuner, LD player, and other Sony video equipment for details.

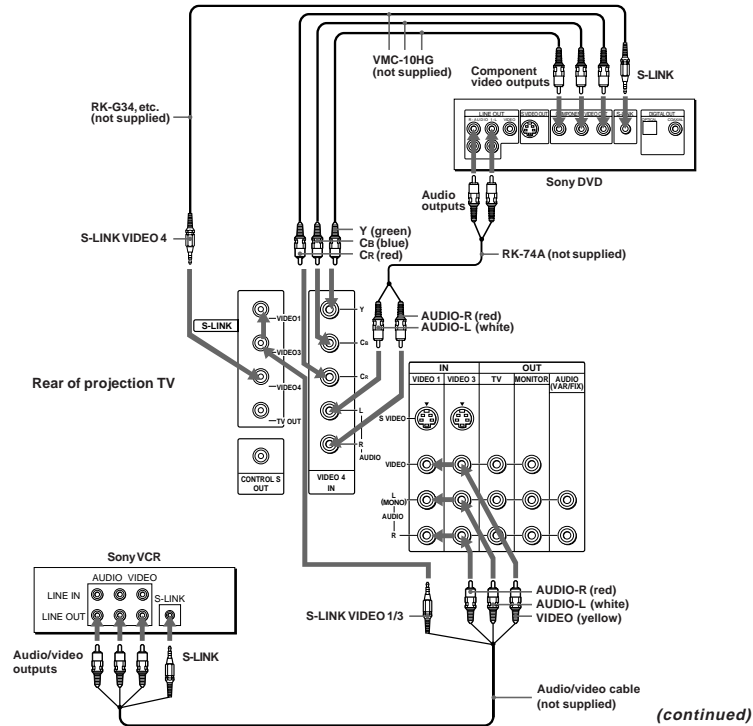


Getting Started | 17-EN

Using the S-Link function with a Sony AV receiver

When making S-Link connections through a Sony AV receiver, set the TV speaker switch to OFF, CENTER or SAVA SP, but never to ON (see page 35).

Refer also to the Operating Instructions supplied with your VCR, DBS tuner, LD player, AV receiver, and other Sony video equipment for details.

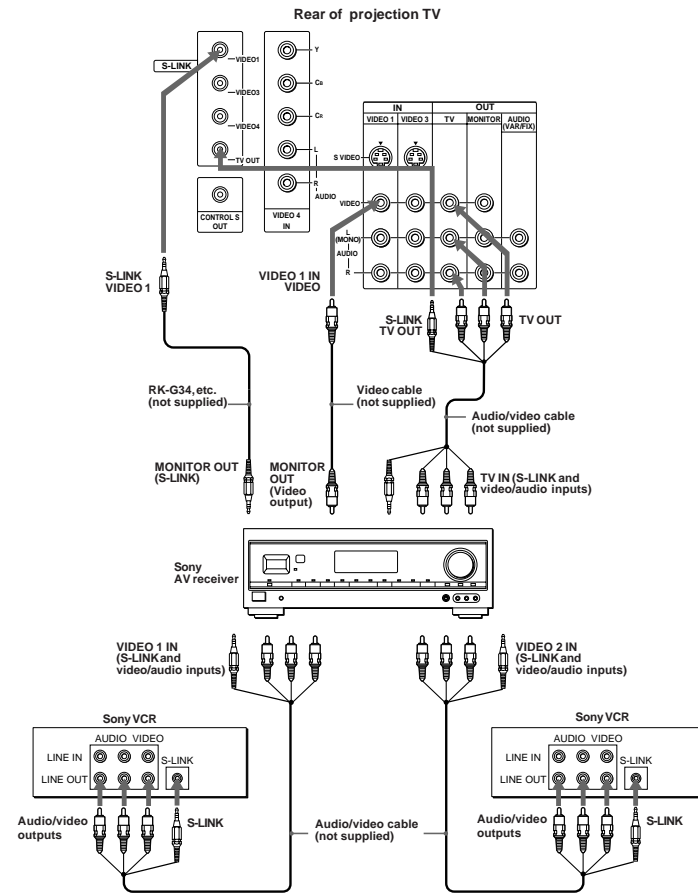


18-EN | Getting Started

Connecting other Sony equipment with CONTROL S jack

This feature allows you to control your projection TV and other Sony equipment with one remote control.

To control other Sony equipment with the projection TV's remote control, connect the input of the equipment to CONTROL S OUT jack on the projection TV.

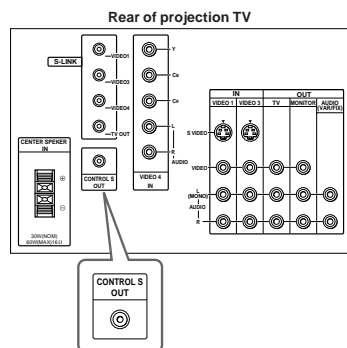


EN

Step 3: Setting up the remote control

Inserting batteries

Insert two size AA (R6) batteries (supplied) by matching the + and - on the battery to the diagram inside the battery compartment.



Notes

- Under normal conditions, batteries will last up to six months. If the remote control does not operate properly or the indicators of the buttons on the remote control do not light up, the batteries may be worn out. When replacing batteries, replace both of them with new ones.
- Do not mix old batteries with new ones or mix different types of batteries together.
- If the electrolyte inside the battery should leak, wipe the contaminated area of the battery compartment with a cloth and replace the old batteries with new ones. To prevent the electrolyte from leaking, remove the batteries when you don't plan to use the remote control for a long period of time.
- Do not handle the remote control roughly. Do not drop it, step on it, or let it get wet.
- Do not place the remote control in direct sunlight, near a heater, or where the humidity is high.

Getting to know buttons on the remote control

Names of buttons on the remote control are indicated in different colors to represent the available functions.

Button color

Transparent TV/VCR/DBS/Cable box function (light up) buttons. Press the appropriate function button first to change the remote control's function.


Green Buttons relevant to power operations.

Label color

White TV/VCR/DBS/Cable box operation buttons.


Yellow PIP operation buttons.

Blue DBS operation buttons.

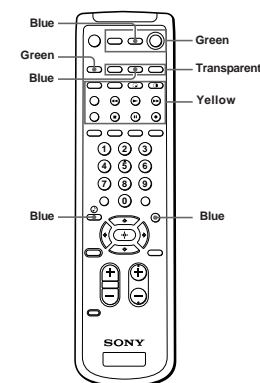

Step 4: Setting up the projection TV automatically (AUTO SET UP)

You can set up your projection TV easily by using the AUTO SET UP feature. It presets all the receivable channels, adjusts the convergence and changes the on-screen menu language. To set up the projection TV manually, see "Adjusting convergence" (page 23), "Setting cable TV on or off" (page 24), "Presetting channels" (page 25) and "Changing the menu language" (page 25).
If the projection TV is set to a video input, you cannot perform AUTO SET UP. Press TV/VIDEO so that a channel number appears.

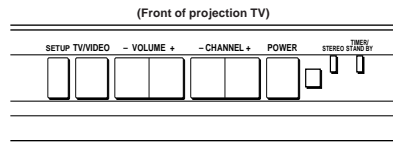


Before you start using AUTO SET UP, be sure to connect the antenna or cable to the projection TV (see page 6).

1 Press POWER to turn the projection TV on.




2 Press SETUP on the front of the projection TV. AUTO SET UP screen appears.




3 Press CHANNEL +/- or VOLUME + to select the on-screen menu language.

If you prefer Spanish or French to English, you can change the on-screen menu language.



All of the menus will be set to the factory preset condition in the selected language.


4 Press VOLUME - to start AUTO SET UP.



5 Press CHANNEL + to preset channels.




"AUTO PROGRAM" appears on the screen and the TV starts scanning and presetting channels automatically. When all the receivable channels are stored, "AUTO PROGRAM" disappears and the following menu appears. If the projection TV receives cable TV channels, CABLE is set to ON automatically.



To exit AUTO PROGRAM Press any button.


6 Adjust convergence.

(1) Press CHANNEL +. The CONVERGENCE adjustment screen appears.

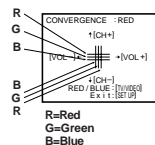


Getting Started | 21-EN

(2) Press TV/VIDEO to select RED or BLUE.




(3) Using CHANNEL +/- or VOLUME +/-, move the line until it converges with the center green line.



To move horizontal line up/down, press CHANNEL +/-.
To move vertical line right/left, press VOLUME +/-.

(4) Repeat steps (2) and (3) to adjust the other lines until all three lines converge and are seen as a white cross.



Note

- Using the AUX connector, press ANT first and make sure that "AUX" is displayed beside the channel number on the screen. Then follow the steps 2 to 6 above to perform AUTO SET UP.


To preview the main functions (DEMO) Press TV/VIDEO on the projection TV in step 4. The functions and menus are displayed one by one.

To exit DEMO Press any button.


22-EN | Getting Started

Erasing or adding channels

After AUTO SET UP, you can erase unnecessary channels or add the channels you want. Preset channels during the day rather than late at night, when some channels may not be broadcasting.

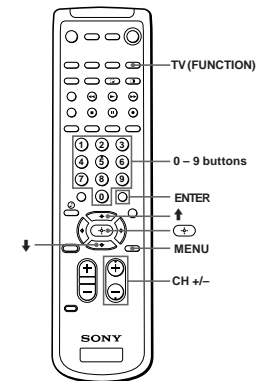

1 Press TV (FUNCTION).




2 Press MENU.

The main menu appears.




3 Press + or - to select, and press <=>.


The SET UP menu appears.



- 4** Press \uparrow or \downarrow to select CHANNEL ERASE/ADD, and press ENTER .
The CHANNEL ERASE/ADD menu appears.



- 5** Erase and/or add channels:
To erase an unwanted channel:
(1) Make sure the cursor (▶) is beside ERASE.
(2) Press CH +/- or the 0-9 buttons to select the channel you want to erase, and press ENTER.



- (3) Press ENTER .
The "-" indication appears beside the channel number, showing that the channel is erased from the preset memory.



- To add a channel that you want**
(1) Press \uparrow or \downarrow to move the cursor (▶) to ADD.
(2) Press the 0-9 buttons to select the channel you want to add, and press ENTER.



- (3) Press ENTER .
The "+" indication appears beside the channel number, showing that the channel is added to the preset memory.



- 6** To erase and/or add other channels, repeat step 5.

- 7** Press MENU to return to the original screen.



Notes


- If you erase or add a VHF or UHF channel, the cable TV channel with the same number is also erased or added, and vice versa.
- Erasing and adding channels is also available for the AUX input.

Adjusting convergence (CONVERGENCE)


The projection tube image appears on the screen in three layers (red, green and blue). If they do not converge, the color is poor and the picture blurs. To correct this, adjust convergence.
You do not have to do this procedure if you perform AUTO SET UP (page 21). Do this procedure only when you want to adjust it manually.

EN

- Press MENU.
- Press \uparrow or \downarrow to select CONVERGENCE , and press ENTER .
- Press \uparrow or \downarrow to select CONVERGENCE, and press ENTER .
The CONVERGENCE adjustment screen appears.

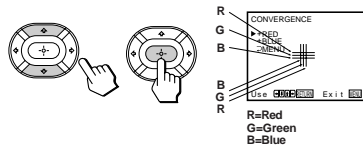


- 4** Press \uparrow or \downarrow to move the cursor (▶) to the symbol showing the line you want to adjust, and press ENTER .



- +RED: Red vertical and horizontal line (left/right/up/down adjustment)
- +BLUE: Blue vertical and horizontal line (left/right/up/down adjustment)

- 5** Press \uparrow , \leftarrow , \rightarrow , or \downarrow to move the line until it converges with the center green line, and press ENTER .



To move	Press
Up	\uparrow
Down	\downarrow
Right	\rightarrow
Left	\leftarrow


- 6** Repeat steps 4 and 5 to adjust the other lines until all three lines converge and are seen as a white cross.

- 7** Press MENU to return to the original screen.

Setting cable TV on or off

If you have connected the projection TV to a cable TV system, set CABLE to ON (the factory setting). If not, set CABLE to OFF.
You do not have to do this procedure if you perform AUTO SET UP (page 21). Do this procedure only when you want to set it manually.

- Press MENU.
- Press \uparrow or \downarrow to select CABLE , and press ENTER .
- Set CABLE to ON or OFF:
(1) Press \uparrow or \downarrow to move the cursor (▶) to CABLE, and press ENTER .
(2) Press \uparrow or \downarrow to select ON or OFF, and press ENTER .




- 4** Press MENU to return to the original screen.


Note

- If CABLE appears in gray, the projection TV is set to a video input and you cannot select CABLE. Press ANT so that a channel number appears.

Presetting channels

You can preset TV channels easily by using the AUTO PROGRAM feature. You do not have to do this procedure if you perform AUTO SET UP (page 21). Do this procedure only when you want to set it manually.

- 1 Press MENU.
- 2 Press \uparrow or \downarrow to select , and press \odot .
- 3 Press \uparrow or \downarrow to select AUTO PROGRAM, and press \odot .



"AUTO PROGRAM" appears on the screen and the projection TV starts scanning and presetting channels automatically. When all the receivable channels are stored, "AUTO PROGRAM" disappears and the lowest numbered channel is displayed.

- 4 Press MENU to return to the original screen.


To exit AUTO PROGRAM
Press any button.


Notes

- If the AUTO PROGRAM menu appears in gray, the projection TV is set to a video input and you cannot select AUTO PROGRAM. Press ANT so that a channel number appears.
- Presetting channels is also available for the AUX input.

Changing the menu language

If you prefer Spanish or French to English, you can change the menu language. You do not have to do this procedure if you select the language during AUTO SET UP (page 21). Do this procedure only when you want to set it manually.

- 1 Press MENU.
- 2 Press \uparrow or \downarrow to select , and press \odot .
- 3 Press \uparrow or \downarrow to select LANGUAGE, and press \odot .



- 4 Press \uparrow or \downarrow to select your favorite language, "ENGLISH", "ESPAÑOL", or "FRANÇAIS" and press \odot .




- 5 Press MENU to return to the original screen.

Note

- Certain parts of the Spanish or French menus remain in English.

Operations

Watching the TV

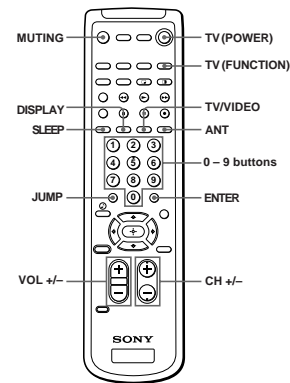


- 1 Press TV (POWER) to turn on the projection TV.

The TIMER/STANDBY indicator flashes until the picture appears.



If "VIDEO" appears on the screen, press ANT so that a channel number appears.

- 2 Press TV (FUNCTION).



Once you press TV (FUNCTION), the projection TV function is set unless another function button is pressed.

- 3 Select the channel you want:

To select a channel directly


Press the 0 - 9 buttons, and press ENTER.

For example, to select channel 10, press 1, 0 and ENTER.



To scan through channels

Press CH +/- until the channel you want appears.



The channel can also be selected without pressing ENTER.

- 4 Press VOL +/- to adjust the volume.



Switching quickly between two channels

You can use the JUMP button to switch or "jump" back and forth between two channels.

Press JUMP.



Pressing JUMP again switches the channel back to the one you selected last.

Note

- You cannot jump to channels you scanned through using the CH +/- buttons.

Muting the sound

Press MUTING.

"MUTING" appears on the screen.




To restore the sound, press MUTING again, or press VOL +.

Displaying on-screen information

Press **DISPLAY** repeatedly until the desired display appears.

Each time you press **DISPLAY**, the display changes as follows:

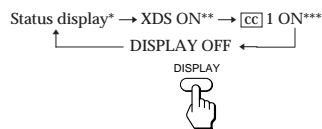

* Channel number, the current time, channel caption (if set), and MTS mode (if SAP is selected) are displayed. SAP indication disappears after three seconds.

** Some programs are broadcast with XDS (Extended Data Service) which shows a network name, program name, program type, program length, call letters, and time of the show. When you select XDS with the **DISPLAY** button, this information will be displayed on the screen if the broadcaster offers this service.

*** Some programs are broadcast with Caption Vision. When you select Caption Vision with the **DISPLAY** button, Caption Vision will be displayed on the screen if the broadcaster offers this service. (See page 42 for selecting Caption Vision.)


To cancel the display, press **DISPLAY** repeatedly until "DISPLAY OFF" appears. "DISPLAY OFF" goes off after three seconds.

Setting the Sleep Timer

The projection TV stays on for the length of time you specify and then shuts off automatically.

Press **SLEEP** repeatedly until the time (minutes) you want appears.

Each time you press **SLEEP**, the time changes as follows:




To cancel the Sleep Timer, press **SLEEP** repeatedly until "SLEEP OFF" appears, or turn off the projection TV.

Watching a video input picture

Press **TV/VIDEO** repeatedly until the desired video input appears.

Each time you press **TV/VIDEO**, the display changes as follows:

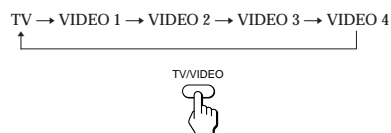

To return to the TV picture, press **ANT** so that a channel number appears.

Note

- When the video label for VIDEO 4 is set to SKIP, the display changes skipping the VIDEO 4 connection (see page 41).

Changing the VHF/UHF input to the AUX input

Press **ANT**.


"AUX" appears beside the channel number.



Pressing **ANT** again switches back to the VHF/UHF input.

Watching two programs at one time — PIP/P&P (Twin View™)/CH INDEX


You can watch both the main/right picture and a window/left picture simultaneously using the Picture-in-Picture (PIP) or the Picture-and-Picture (Twin View™) feature.

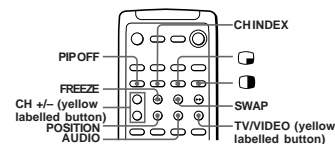

Use the yellow labelled buttons for PIP operations.

Displaying a window picture (PIP)

Press **TV/VIDEO**.

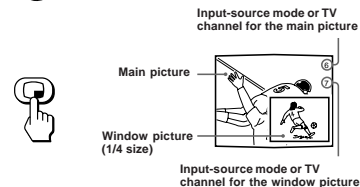


Press **TV/VIDEO** repeatedly to display a smaller window picture.

Each time you press **TV/VIDEO**, the size of the window picture changes as follows: 1/4 size → 1/9 size → 1/16 size.

To remove the window picture, press **PIP OFF**.

Displaying a left picture (P&P)

Press **TV/VIDEO**.

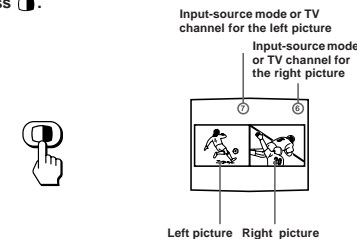

To restore the normal picture, press **PIP OFF**.

Notes

- If the main/right picture is not receiving an image, the window/left picture may become a noisy picture.
- The window/left picture sound is also output from the AUDIO (VAR/FIX) OUT jacks when you listen to it.

Changing the window/left picture input mode

Press **TV/VIDEO** (yellow labelled button) in **PIP** or **P&P** mode to select the input mode.

Each time you press **TV/VIDEO** (yellow labelled button), "TV", "VIDEO 1", "VIDEO 2", "VIDEO 3", and "VIDEO 4" appear in sequence.



A window/left picture will appear in the same input mode as the last time you used PIP.


Notes

- If you connect your VCR without a cable box, your PIP input source is a VCR. If you connect your VCR with a cable box, your PIP input source is a VCR or cable box.
- When the video label for VIDEO 4 is set to SKIP, "VIDEO 4" does not appear on the display.

Listening to the sound of the window/left picture

Press **AUDIO** in PIP or P&P mode.

The \rightarrow display appears above the window/left picture for a few seconds, indicating that the window/left picture sound is being received.

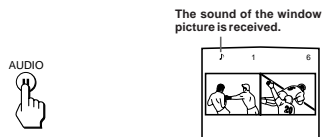

To restore the main picture sound, press **AUDIO** again. The \rightarrow display moves to the main picture channel number.

Changing TV channels in the window/left picture

Press **CH +/-** (yellow labelled button) in PIP or P&P mode.



Changing the position of the window picture

Press **POSITION** in PIP mode.


Each time you press **POSITION**, the window picture will move counterclockwise on the screen.



Swapping the main/right and window/left pictures

Press **SWAP** in PIP or P&P mode.

Each time you press **SWAP**, the images and sound from the main/right and window/left pictures switch places with another.



Note

- The channels being received through the AUX connector cannot be displayed as a window picture.


Watching multiple TV channels at one time (CH INDEX)

EN

You can display all the preset channels in sequence.

1 Press CH INDEX.

The main picture is displayed in the center with a pink frame and 12 window pictures are displayed around the main picture.



Each time you press **CH INDEX**, the 12 window pictures will rotate and a new picture will appear.

2 Press \uparrow , \downarrow , \leftarrow or \rightarrow to move the pink frame to the channel you want to watch, and press \odot .


The selected channel appears on the screen.

To display eight favorite channels, press \odot .

To return to the normal picture, press **PIP OFF**.

Freezing the picture (FREEZE)

The **FREEZE** feature is useful when you want to write down an information such as a recipe from a cooking program, a displayed address, or a phone number.

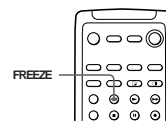


Press **FREEZE**.



The frozen picture differs depending on the current display mode.

Normal mode



The current picture freezes.

PIP mode



The main picture freezes and the window picture disappears.

P&P mode



Both pictures freeze.

CH INDEX mode




Only the main picture freezes.

To cancel the frozen picture, press **FREEZE** again.


Adjusting the picture (VIDEO)

When watching TV programs, you can adjust the picture to suit your taste. You can adjust the picture of video input(s) as well.

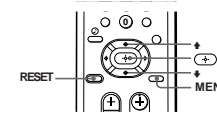

1 Press **MENU**.


2 Press \uparrow or \downarrow to select \square , and press \odot .



3 Select the item you want to adjust.

For example:

- To adjust the brightness, press \uparrow or \downarrow to move the cursor (\blacktriangleright) to **BRIGHTNESS**.




(2) Press \odot .



4 Adjust the selected item:

(1) Press \uparrow , \downarrow , \leftarrow , or \rightarrow to adjust the item.



(2) Press \odot .

The new setting appears in the VIDEO menu.



For details on each item, see "Description of adjustable items" below.

5 To adjust other items, repeat steps 3 and 4.

6 Press MENU to return to the original screen.

Description of adjustable items

Item	Press \uparrow or \downarrow to	Press \rightarrow or \leftarrow to
PICTURE	Decrease picture contrast and give soft color.	Increase picture contrast and give vivid color.
HUE	Make picture tones become purplish.	Make picture tones become greenish.
COLOR	Decrease color intensity.	Increase color intensity.
BRIGHTNESS	Darken the picture.	Brighten the picture.
SHARPNESS	Soften the picture.	Sharpen the picture.


To restore the factory settings

Press RESET after displaying and selecting the VIDEO menu.

All of the settings are restored to the factory settings.

Adjusting the color temperature (TRINITONE)

The TRINITONE feature controls the color temperature, permitting white balance preference adjustment without affecting skin tones.

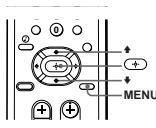


1 Press MENU.


2 Press \uparrow or \downarrow to select \square and press \odot .

EN

3 Press \uparrow or \downarrow to select TRINITONE and press \odot .



4 Press \uparrow or \downarrow to select NTSC STD, MEDIUM, or HIGH and press \odot .



Choose	To
HIGH	a cool (bluish) white.
MEDIUM	a neutral white.
NTSC STD	a warm (reddish) white.

Selecting the video mode (VIDEO)


The video mode feature allows you to choose four different modes of picture settings. Choose the one that best suits the type of program that you want to watch.

1 Press MENU.

2 Press \uparrow or \downarrow to select \square , and press \odot .

3 Press \uparrow or \downarrow to select MODE, and press \odot .

4 Press \uparrow or \downarrow to select VIVID, STANDARD, MOVIE, or SPORTS mode, and press \odot .



Choose	To
VIVID	Receive a highly contrasted, sharp picture.
STANDARD	Receive a standard picture.
MOVIE	Receive a finely detailed picture.
SPORTS	Receive a colorful, bright picture.


5 Press MENU to return to the original screen.

Note

- The settings for these modes can be adjusted in the VIDEO menu.


Adjusting the sound (AUDIO)

You can adjust the quality of the TV sound to suit your taste. You can adjust the sound of the video input(s) as well.



1 Press MENU.


2 Press \uparrow or \downarrow to select \square , and press \odot .




3 Select the item you want to adjust.

For example:

(1) To adjust bass, press \uparrow or \downarrow to move the cursor (\blacktriangleright) to BASS.





(2) Press \odot .



4 Adjust the selected item:

(1) Press \uparrow , \downarrow , \leftarrow , or \rightarrow to adjust the item.



(2) Press \odot .

The new setting appears in the AUDIO menu.



For details on each item, see "Description of adjustable items" below.

5 To adjust other items, repeat steps 3 and 4.

6 Press MENU to return to the original screen.

Description of adjustable items

Item	Press \uparrow or \leftarrow to	Press \downarrow or \rightarrow to
TREBLE	Decrease the treble response.	Increase the treble response.
BASS	Decrease the bass response.	Increase the bass response.
BALANCE	Emphasize the left speaker's volume.	Emphasize the right speaker's volume.

To restore the factory settings

Press RESET after displaying and selecting the AUDIO menu.


All of the settings are restored to the factory settings.

Note

- When SPEAKER (page 35) is OFF and AUDIO OUT (page 36) is in the FIXED condition, the volume, TREBLE, BASS, and BALANCE cannot be adjusted.

Using audio effect (EFFECT)

Using the \odot (audio effect) button

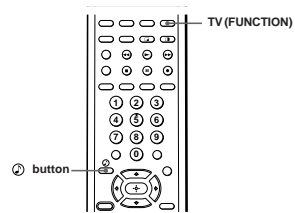

1 Press TV (FUNCTION).

2 Press \odot .

Each time you press the \odot button, the display changes as follows:


SRS → 3D MONO → EFFECT OFF



Choose	To
SRS	When the program's audio signal is stereo or encoded, SRS expands the material and embraces you with dynamic three-dimensional sound.
3D MONO	Receive monaural sound with a surround-like effect.
EFFECT OFF	Cancel audio effect.

EN


Using the menu to set audio effect




1 Press MENU.

2 Press \uparrow or \downarrow to select \downarrow , and press \odot .

3 Press \uparrow or \downarrow to select EFFECT, and press \odot .




4 Press \uparrow or \downarrow to select SRS, 3D MONO or OFF, and press \odot .



5 Press MENU to return to the original screen.

Selecting stereo or bilingual programs (MTS)

The Multichannel TV Sound (MTS) feature allows you to enjoy stereo sound or Second Audio Programs (SAP) of your choice. The initial setting is stereo sound (STEREO).



Press MTS repeatedly to select STEREO, SAP, or MONO.

STEREO → SAP → MONO

Choose	To
STEREO	Listen to stereo sound. The STEREO indicator on the projection TV lights up when a stereo broadcast is received.
SAP	Listen to bilingual programs. There is no sound when the SAP signal is not broadcasting.
MONO	Listen to monaural sound. Reduce noise during stereo broadcasts.

Note

- Stereo and SAP sounds are subject to program sources.

To set MTS using the menu


- Press MENU.
- Press \uparrow or \downarrow to select \downarrow , and press \odot .
- Press \uparrow or \downarrow to select MTS, and press \odot .
- Press \uparrow or \downarrow to select STEREO, SAP, or MONO.
- Press MENU to return to the original screen.



Setting the speaker switch (SPEAKER)

You may switch off the projection TV speakers when, for example, you want to listen to the sound through a stereo system.

If you connect an amplifier with Dolby Pro Logic decoder to the CENTER SPEAKER IN terminals, you can use the projection TV speakers as center speaker. After making the connection (page 15), set SPEAKER to CENTER.

If you connect the Sony SAVA series speaker system to the AUDIO (VAR/FIX) OUT connectors, you can take advantage of the speakers' surround sound and super woofer mode. After making the connections (page 16), set SPEAKER to SAVA SP, then adjust SURROUND MODE or SUPER WOOFER MODE.



- 1 Press MENU.
- 2 Press \uparrow or \downarrow to select \downarrow , and press \odot .
- 3 Press \uparrow or \downarrow to select SPEAKER, and press \odot .

- 4 Press \uparrow or \downarrow to select ON, OFF, CENTER or SAVA SP, and press \odot .

- 5 Press MENU to return to the original screen.

Choose	To
ON	Listen to the sound from the projection TV.
OFF	Turn off the projection TV speaker sound and listen to the projection TV's sound solely through the audio system speakers.
CENTER	Use the projection TV center speakers as the center speaker in another surround audio system.
SAVA SP	Turn off the projection TV speaker sound and listen to the projection TV's sound through the Sony SAVA series speaker system. You can adjust volume, muting, surround modes, and super woofer mode with the remote control supplied with the projection TV.

To select surround sound or super woofer mode of the SAVA speaker system

After setting SPEAKER to SAVA SP, follow the procedure below.


Press \uparrow or \downarrow to select SURROUND MODE or SUPER WOOFER MODE, and press \odot . For details on each option, refer to the operating instructions of the speaker system.





- Note**
- This feature is only for Sony SAVA speaker system with an operation capability for KP-48V75, KP-53V75, and KP-61V75.

Setting audio out (AUDIO OUT)

You can change AUDIO OUT to VARIABLE or FIXED when SPEAKER is set to OFF. AUDIO OUT is variable when SPEAKER is set to ON.



- 1 Press MENU.
- 2 Press \uparrow or \downarrow to select \downarrow , and press \odot .
- 3 Press \uparrow or \downarrow to select AUDIO OUT, and press \odot .

- 4 Press \uparrow or \downarrow to select VARIABLE or FIXED, and press \odot .


VARIABLE: Sound output varied according to the projection TV settings. You can adjust the volume, bass, treble, and balance.

FIXED: Sound output is always fixed to a certain level. The volume, bass, treble, and balance are also fixed to the factory settings.

- 5 Press MENU to return to the original screen.

- Note**
- If AUDIO OUT appears in gray, set SPEAKER to OFF.

Setting daylight saving time (DAYLIGHT SAVING)


If your area uses daylight saving time, change DAYLIGHT SAVING setting depending on the season, before setting the current time.



Daylight saving start

- After the first Sunday in April, set DAYLIGHT SAVING to YES. Current time setting (right column) automatically moves one hour ahead.

Daylight saving end

- After the last Sunday in October, set DAYLIGHT SAVING to NO. Current time setting automatically moves one hour back.




- 1 Press MENU.
- 2 Press \uparrow or \downarrow to select \downarrow , and press \odot .
- 3 Press \uparrow or \downarrow to select DAYLIGHT SAVING, and press \odot .

- 4 Press \uparrow or \downarrow to select YES or NO, and press \odot .


Choose	To
YES	Set for daylight saving start.
NO	Set for daylight saving end.


- 5 Press MENU to return to the original screen.

Setting the clock (CURRENT TIME SET)

Setting the clock enables you to turn the projection TV on and off with the timer. Make sure to set daylight saving time first.




- 1 Press MENU.
- 2 Press \uparrow or \downarrow to select 0, and press \rightarrow .
- 3 Press \uparrow or \downarrow to select CURRENT TIME SET, and press \rightarrow .




- 4 Make sure the cursor (\blacktriangleright) is to the left of "--:-- AM", and press \rightarrow .



- 5 Set the current day of the week and time.
 - (1) Press \uparrow or \downarrow to set the day of the week, and press \rightarrow .




- (2) Set the hour and minutes in the same way as in step (1). When you press \rightarrow after setting the minutes, the clock starts.




- 6 Press MENU to return to the original screen.

Setting the timer to turn the projection TV on and off (ON/OFF TIMER)

You can set the projection TV to turn on and off at the times you specify. Make sure the clock is set correctly. If it is not, set the clock first (left column).

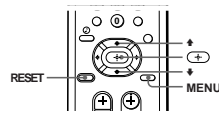


- 1 Press MENU.
- 2 Press \uparrow or \downarrow to select 0, and press \rightarrow .
- 3 Press \uparrow or \downarrow to select ON/OFF TIMER, and press \rightarrow .




- 4 Press \rightarrow and enter the ON/OFF TIMER setting.
 - (1) Press \uparrow or \downarrow to set the day(s), and press \rightarrow .

Each time you press \uparrow or \downarrow , the days cycle as follows:
 EVERY SUN-SAT → EVERY MON-FRI → SUNDAY → ... → SATURDAY → EVERY SUNDAY → ... → EVERY SATURDAY

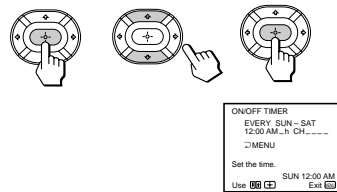


(continued)

- (2) Press \uparrow or \downarrow to set the time (hour then minutes) that you want to turn on the projection TV, and press \rightarrow .




- (3) Press \uparrow or \downarrow to set the time duration, and press \rightarrow .

Each time you press \uparrow , the time duration increases by one hour up to a maximum of six hours.



- (4) Press \uparrow or \downarrow to select the channel, and press \rightarrow .



The TIMER/STANDBY indicator on the projection TV lights up.

- 5 To set the other program, press \rightarrow , and repeat step 4.
- 6 Press MENU to return to the original screen.

One minute before the projection TV turns off, the message "TV will turn off soon." is displayed on the screen.


To cancel the timer
 In step 3 or 4, press RESET.

Note


- If you unplug the projection TV or a power interruption occurs, the ON/OFF TIMER setting will be erased. Reset the current time, then set the timer.

Customizing the channel names (CHANNEL CAPTION)

You can add a caption for up to 12 channels. This feature allows you to easily identify which channel you are watching. You can make your own caption.

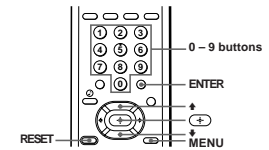


- 1 Press MENU.
- 2 Press \uparrow or \downarrow to select 0, and press \rightarrow .



- 3 Press \uparrow or \downarrow to select CHANNEL CAPTION, and press \rightarrow .



- 4 Press \rightarrow and press \uparrow or \downarrow to select the channel that you want to caption, and press \rightarrow .

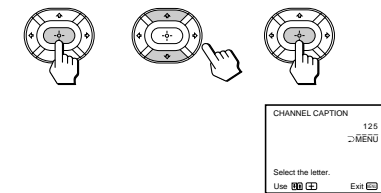


5 Enter the letters (up to four) to caption the channel:


(1) Press **▲** or **▼** to select the first letter.

Each time you press **▲** or **▼**, the letter changes as follows:

0...9→A...Z←→&./_(blank space)



(2) Press **+**.



(3) Repeat steps (1) and (2) to select the remaining letters, and press **+**.

6 Repeat steps 4 and 5 to caption other channels.

7 Press MENU to return to the original screen.

After you customize the channel, the channel caption appears green.

To erase a caption


In step 5, press RESET.

Notes

- If the CHANNEL CAPTION menu appears in gray, the projection TV is set to a video input, and you cannot select CHANNEL CAPTION. Press ANT so that a channel number appears.
- If more than 90 seconds elapse after you press a button, the menu disappears automatically.
- The channel caption feature is not available for the AUX input.

Blocking out a channel (CHANNEL BLOCK)

The channel block feature allows you to prevent children from watching unsuitable programs. You can block out two channels.




1 Press MENU.


2 Press **▲** or **▼** to select , and press **+**.

3 Press **▲** or **▼** to select CHANNEL BLOCK, and press **+**.


EN



4 Press **▲** or **▼** to select program 1 or 2, and press **+**.




5 Press **▲** or **▼** to select the channel which you want to block out, and press **+**.



6 Press MENU to return to the original screen.

When you select the blocked channel, the message "BLOCKED" appears on the screen.



To cancel a CHANNEL BLOCK setting

In step 4 or 5, press RESET.


Note

- Once you use CHANNEL BLOCK, Caption Vision and XDS of the blocked channel and the selected channel output from MONITOR OUT are also blocked out.

Setting your favorite channels (FAVORITE CHANNEL)

The favorite channel feature allows your projection TV to memorize your favorite channels easily. If you set to AUTO, the last eight channels you selected with the 0 - 9 buttons are automatically set as your favorite channels. If you want to input your own selection of channels, set to MANUAL.


Setting your favorite channels




1 Press MENU.

2 Press **▲** or **▼** to select , and press **+**.

3 Press **▲** or **▼** to select FAVORITE CHANNEL, and press **+**.



4 Press **+** and press **▲** or **▼** to select AUTO or MANUAL, and press **+**.




If you select AUTO, skip steps 5 to 7.


The last eight channels you selected with the 0 - 9 buttons are automatically set as your favorite channels.

If you select MANUAL, the favorite channel numbers become white, indicating that favorite channels can be entered.

5 Press **▲**, **▲**, **▼** or **▼** to select a favorite channel number, and press **+**.



6 Press **▲** or **▼** to select the channel that you want to set as your favorite channel, and press **+**.




7 To set the other favorite channels, repeat steps 5 and 6.

8 Press MENU to return to the original screen.

Notes

- If more than 90 seconds elapse after you press another button, the menu disappears automatically.
- The favorite channel feature is not available for the AUX input.

Selecting your favorite channel





1 Press **+**.

The picture of the current channel is displayed in the center with a pink frame and the eight favorite channels are displayed around it.




2 Press **▲**, **▲**, **▼** or **▼** to move the pink frame to the channel you want to watch, and press **+**.

The selected channel appears on the screen.




Setting video labels (VIDEO LABEL)


The video label feature allows you to label each input mode so that you can easily identify the connected equipment. For example, you can label VIDEO 1 as VHS.




- 1 Press MENU.
- 2 Press \uparrow or \downarrow to select , and press \rightarrow .
- 3 Press \uparrow or \downarrow to select VIDEO LABEL, and press \rightarrow .




- 4 Press \uparrow or \downarrow to select the input mode you want to label, and press \rightarrow .



- 5 Press \uparrow or \downarrow to select the label, and press \rightarrow .



Each time you press \uparrow or \downarrow , the label changes as follows:

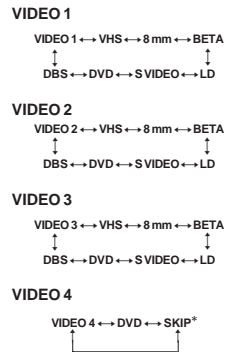

* The projection TV will skip the VIDEO 4 connection when you scan through video sources pressing the TV/VIDEO button.

- 6 Repeat steps 4 and 5 to label other input modes.


Note

- If more than 90 seconds elapse before you press another button, the menu disappears automatically.

EN

Setting Caption Vision (CAPTION VISION)

Some programs are broadcast with Caption Vision. To display Caption Vision, select either CC1, CC2, CC3, CC4, TEXT1, TEXT2, TEXT3, or TEXT4 from the menu. CC1, CC2, CC3, or CC4 shows you on-screen version of the dialogue or sound effects of a program. (The mode should be set to CC1 for most programs.) TEXT1, TEXT2, TEXT3, or TEXT4 shows you on-screen information presented using either half or the whole screen. It is not usually related to the program.



- 1 Press MENU.
- 2 Press \uparrow or \downarrow to select , and press \rightarrow .



- 3 Press \uparrow or \downarrow to select the caption type, and press \rightarrow .



- 4 Press MENU to return to the original screen.

To display Caption Vision
Press DISPLAY. (See page 27 for details.)


Notes

- Poor reception of TV programs can cause errors in Caption Vision and XDS.
- Captions may appear with a white box or other errors instead of a certain word.
- XDS, Caption Vision, and the status display cannot be used at the same time.
- For details on XDS, see page 27.

Operating video equipment


You can use the supplied remote control to operate Sony or non-Sony video equipment that has an infrared remote sensor. For this operation, set the manufacturer's code number.

Setting the manufacturer's code

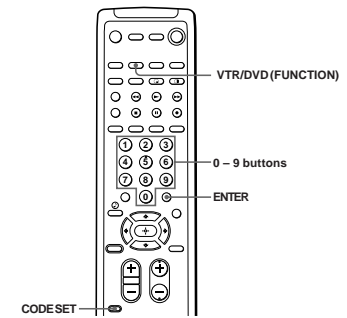

Press the CODE SET, VTR/DVD (FUNCTION), and 0 - 9 buttons to enter the manufacturer's code number (see the chart on page 43), then press ENTER.

For example, to operate a Sony 8 mm VCR, press CODE SET, VTR/DVD (FUNCTION), 3, 0, 2, and ENTER.



VCR manufacturer code numbers

Manufacturer	Code number
Sony	301, 302, 303
Aiwa	338
Audio Dynamic	314, 337
Bell & Howell (M. Wards)	330, 343
Brocosonic	319
Canon	309, 308
Citizen	332
Craig	315, 302, 332
Curtis Mathis	304, 338, 309
Daewoo	341, 312, 309
DBX	314, 336, 337
Dimensia	304
Emerson	319, 320, 316, 317, 318
Fisher	330, 334, 335, 333
Funai	338
General Electric	329, 304, 309
Goldstar	332
Hitachi	306, 304, 305
Instant Replay	309, 308
JC Penny	309, 305, 304, 330, 314, 336, 337
JVC	314, 336, 337
Kenwood	314, 336, 332, 337
LXI (Sears)	332, 305, 333, 334, 330, 335
Magnavox	308, 309
Marantz	314, 336, 337
Marta	332
Memorex	309, 335
Minolta	305, 304
Mitsubishi/MGA	323, 324, 325, 326
Multitech	325, 338, 321
NEC	314, 336, 337
Olympic	309, 308
Panasonic	308, 309, 306, 307
Pentax	305, 304
Philco	308, 309
Philips	308, 309
Pioneer	308
Quasar	308, 309
RCA/PROSCAN	304, 305, 308, 309, 311, 312, 313
Realistic	309, 330, 328, 335, 324, 338
Sansui	314
Singer	315
Samsung	322, 313, 321
Sanyo	330, 335
Scott	312, 313, 321, 335, 323, 324, 325, 326
Sharp	327, 328
Shintom	315
Signature 2000 (M. Wards)	338, 327
Sylvania	308, 309, 338
Symphonic	338
Tashiro	332
Tatung	314, 336, 337
Teac	314, 336, 338, 337
Technics	309, 308
Toshiba	312, 311
Wards	327, 328, 335, 331, 332
Yamaha	330, 314, 336, 337
Zenith	331

MDP manufacturer code numbers

Manufacturer	Code number
Sony	701
Kenwood	707
Magnavox	703
Maranz	702
Mitsubishi	702
Panasonic	704
Philips	703
Pioneer	702
RCA	702
Sanyo	706
Sharp	705
Yamaha	703

DVD manufacturer code numbers


Manufacturer	Code number
Sony	751

Notes

- If more than one code number is listed, try entering them one by one, until you come to the correct code for your equipment.
- In some rare cases, you may not be able to operate your non-Sony video equipment with the supplied remote control. This is because your equipment may use a code that is not included with this remote control. In this case, please use the equipment's own remote control unit.
- The code numbers for Sony equipment are assigned at the factory as follows:
VHS VCR 301 (preset code for the supplied remote control)
8 mm VCR 302
Beta, ED Beta VCRs 303
- Whenever you remove the batteries — to replace them, for example — if too much time is taken, the code number may revert to the factory setting and must be reset.

EN

Operating video equipment

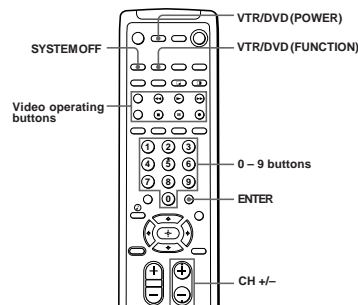

Use the video operating buttons on the remote control to operate the video equipment. Press **VTR/DVD (FUNCTION)** before operating the video equipment.

Operating a VCR	Buttons on the remote control
To turn on or off	Press VTR/DVD (POWER).
To select a channel directly	Press the 0 - 9 buttons.
To change channels	Press CH +/-.
To record	Press ► while pressing ●. First release ►, then release ●.
To play	Press ►.
To stop	Press ■.
To fast forward	Press ►►.
To rewind the tape	Press ◄◄.
To pause	Press ■■. To resume normal playback, press again.
To search the picture forward or backward	Press ►► or ◄◄ during playback. To resume normal playback, release the button.
To change input mode	Press TV/VTR.

Operating an MDP	Buttons on the remote control
To turn on or off	Press VTR/DVD (POWER).
To play	Press ►.
To stop	Press ■.
To pause	Press ■■. To resume normal playback, press again.
To search the picture forward or backward	Keep pressing ►► or ◄◄ during playback. To resume normal playback, release the button.
To search the chapter forward and backward	Press CH +/-.

Operating an DVD	Buttons on the remote control
To turn on or off	Press VTR/DVD (POWER).
To play	Press ►.
To stop	Press ■.
To pause	Press ■■. To resume normal playback, press again.
To search the picture forward or backward	Keep pressing ►► or ◄◄ during playback. To resume normal playback, release the button.

Note

- If the video equipment does not have a certain function, the corresponding button on this remote control will not operate.

Turning off the system


You can turn off the projection TV and Sony equipment with the S-Link function, such as a VCR, together when you make the S-Link connection (see pages 17 and 18 for the connection).

Press **SYSTEM OFF**.




Operating a cable box or DBS receiver

You can program the supplied remote control to operate a cable box or DBS receiver. Follow the procedures below to set the manufacturer's code number in the remote control.

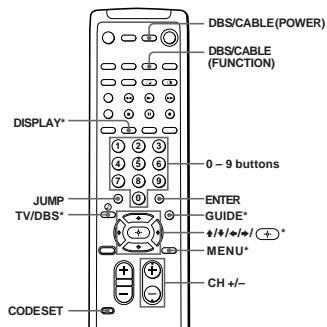


* The TV/DBS, GUIDE, DISPLAY, $\uparrow/\downarrow/\leftarrow/\rightarrow$, and MENU buttons can be used only with a DBS receiver.

- 1 Turn off the equipment you want to set up, and press DBS/CABLE (FUNCTION).



- 2 Press the CODE SET, DBS/CABLE (FUNCTION), and 0 - 9 buttons to enter the manufacturer's code number (see the chart on the right column), then press ENTER. For example, to program your remote control to operate a Sony DBS receiver, press CODE SET, DBS/CABLE (FUNCTION), 8, 0, 1, and ENTER.



- 3 Press DBS/CABLE (POWER) to turn on the cable box or DBS receiver.



- 4 Use the cable box/DBS control buttons to check if the code number works.

For example, to operate a cable box or DBS receiver, you can use the DBS/CABLE (POWER), JUMP, CH +/-, 0 - 9 and ENTER buttons.

Note

- If the cable box or DBS receiver does not have a certain function, the corresponding button on this remote control will not operate.

To operate the projection TV

Press TV (FUNCTION). Then use the projection TV control buttons to control the projection TV.

For more details on operating the cable box or DBS receiver

Refer to the operating instructions that come with the equipment.

If the remote control doesn't work

- First, try repeating the setup procedures using the other codes listed for your equipment.

Manufacturer code numbers (cable box)

Manufacturer	Code number
Hamlin/Regal	222, 223, 224, 225, 226
Jerrold/G. I.	201, 202, 203, 204, 205, 206, 207, 208, 218
Oak	227, 228, 229
Panasonic	219, 220, 221
Pioneer	214, 215
Scientific Atlanta	209, 210, 211
Tocom	216, 217
Zenith	212, 213

Manufacturer code numbers (DBS receiver)

Manufacturer	Code number
Sony	801 (preset code for the supplied remote control)
RCA	802

Notes

- If more than one code number is listed, try entering them one by one until you come to the correct code for your equipment.
- If you enter a new code number, the code number you previously entered at that setting is erased.
- In some rare cases, your equipment may use a code that is not provided with this remote control and you may not be able to operate your equipment with the supplied remote control. In this case, use the equipment's own remote control unit.
- Whenever you remove the batteries — to replace them, for example — if too much time is taken, the code numbers may revert to the factory setting and must be reset.

Additional Information

Troubleshooting

If the problem persists after trying the methods below, contact your nearest Sony dealer.

No picture (screen not lit), no sound

- ➔ Make sure the power cord is connected securely.
- ➔ Operate with the buttons on the projection TV.
- ➔ Insert the batteries in the remote control with the correct polarity.
- ➔ Replace the batteries with new ones if they are weak.
- ➔ Check to see if the TV/VIDEO setting is correct: when watching TV, set to TV, and when watching video input pictures, set to VIDEO 1, 2, 3, or 4.
- ➔ Try another channel. It could be station trouble.
- ➔ Perform AUTO SET UP again using the SETUP button to return to the factory preset condition. (page 21)

Poor or no picture (screen lit), good sound

- ➔ Adjust PICTURE in the VIDEO menu. (page 30)
- ➔ Adjust BRIGHTNESS in the VIDEO menu. (page 30)
- ➔ Adjust convergence. (page 23)
- ➔ Check antenna/cable connections. (page 6)
- ➔ Perform AUTO SET UP again using the SETUP button to return to the factory preset condition. (page 21)
- ➔ Remove objects from the front of the projection TV.

Good picture, no sound

- ➔ Press MUTING so that "MUTING" disappears from the screen. (page 26)
- ➔ Check the MTS setting in the AUDIO menu. (page 34)
- ➔ Make sure SPEAKER is set to ON in the AUDIO menu. (page 35)
- ➔ Perform AUTO SET UP again using the SETUP button to return to the factory preset condition. (page 21)

No color

- ➔ Adjust the COLOR in the VIDEO menu. (page 31)
- ➔ Confirm that black and white program is not being broadcast.
- ➔ Perform AUTO SET UP again using the SETUP button to return to the factory preset condition. (page 21)

Only snow and noise appear on the screen

- ➔ Check the CABLE setting in the SET UP menu. (page 24)
- ➔ Check the antenna/cable connections. (page 6)
- ➔ Make sure the channel is broadcasting programs.
- ➔ Press ANT to change the input mode. (page 27)

Dotted lines or stripes

- ➔ Adjust the antenna.
- ➔ Move the projection TV away from noise sources such as cars, neon signs, and hair-dryers.

Double images or ghosts

- ➔ Use a highly directional outdoor antenna or a cable (when the problem is caused by reflections from nearby mountains or tall buildings).

Cannot operate menu

- ➔ If the item you want to choose appears in gray, you cannot select it. Press TV/VIDEO correctly.
- ➔ Check the CABLE setting in the SET UP menu. (page 24)

Cannot receive upper channels (UHF) when using an antenna

- ➔ Make sure CABLE is OFF in the SET UP menu. (page 24)
- ➔ Use AUTO PROGRAM to add receivable channels that are not presently in projection TV memory. (pages 21, 25)

Cannot receive any channels when using cable TV

- ➔ Make sure CABLE is ON in the SET UP menu. (page 24)
- ➔ Use AUTO PROGRAM to add receivable channels that are not presently in projection TV memory. (pages 21, 25)

Remote control does not operate

- ➔ Batteries could be weak. Replace the batteries. (page 20)
- ➔ Make sure the projection TV's power cord is connected securely to the wall outlet.
- ➔ Press TV (FUNCTION) when operating your projection TV.
- ➔ Are fluorescent lights too close to the projection TV? Move them at least 3-4 feet away from the projection TV.

Cannot gain enough volume when using a cable box

- ➔ Increase the volume at the cable box. Then press TV (FUNCTION) and adjust the projection TV's volume.

Projection TV malfunctions when using the S-Link function

- ➔ Make sure the projection TV's power cord is connected securely to the wall outlet.
- ➔ Check the S-Link connection. (pages 17, 18)


The projection TV needs to be cleaned

- ➔ Clean the projection TV with a soft dry cloth. Never use strong solvents such as thinner or benzine, which might damage the finish of the cabinet.

Index to parts and controls


This section briefly describes the buttons and controls on the projection TV and on the remote control. For more information, refer to the pages next to each description.

Projection TV — Front

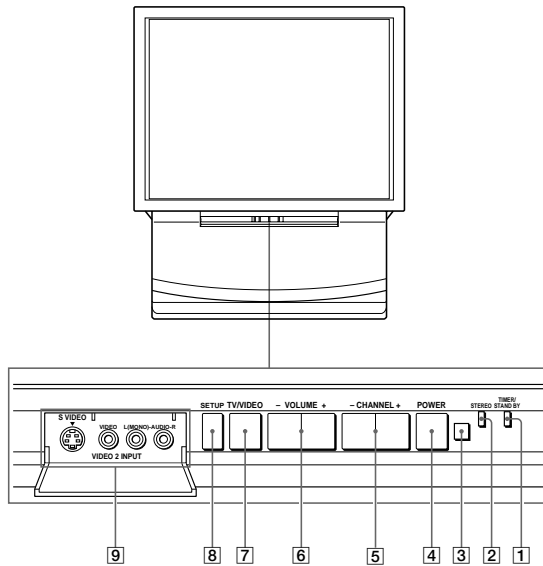

- | | |
|--|---|
| 1 TIMER/STANDBY indicator (pages 26, 38) | 6 VOLUME +/- buttons (page 21) |
| 2 STEREO indicator (page 34) | 7 TV/VIDEO button (page 21, 22) |
| 3 Remote sensor | 8 SETUP button (page 21) |
| 4 POWER switch (page 21) | 9 S VIDEO/VIDEO 2 INPUT (VIDEO/AUDIO L(MONO)/R) jacks (page 10) |
| 5 CHANNEL +/- buttons (page 21) | |


Remote control

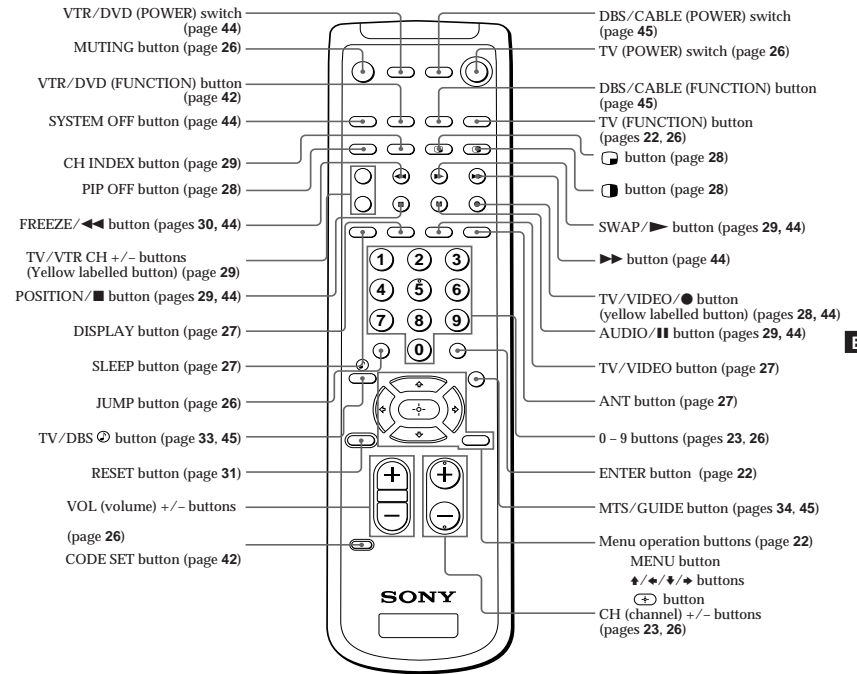


EN

SECTION 2 DISASSEMBLY


2-1. REAR BOARD REMOVAL

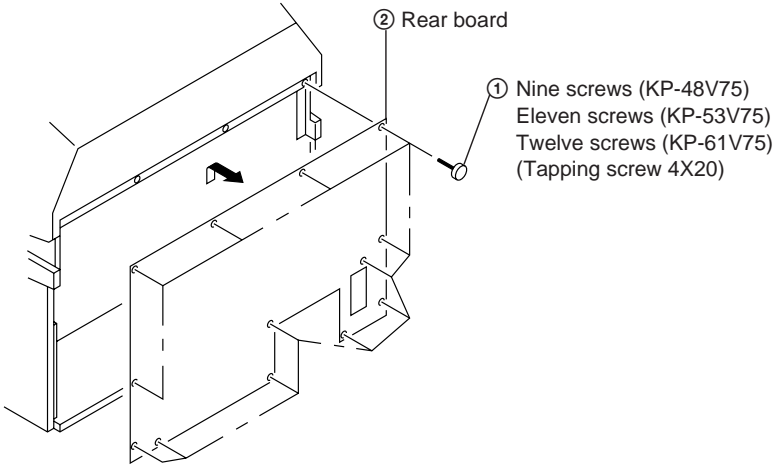


2-2. CHASSIS ASSY REMOVAL

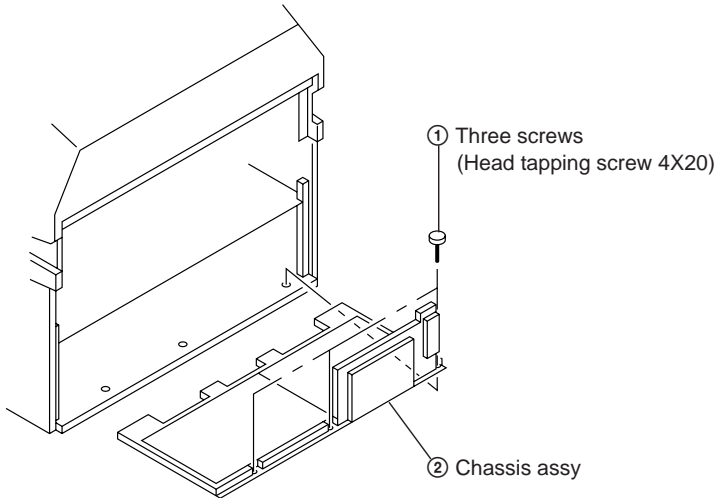


2-3. SERVICE POSITION

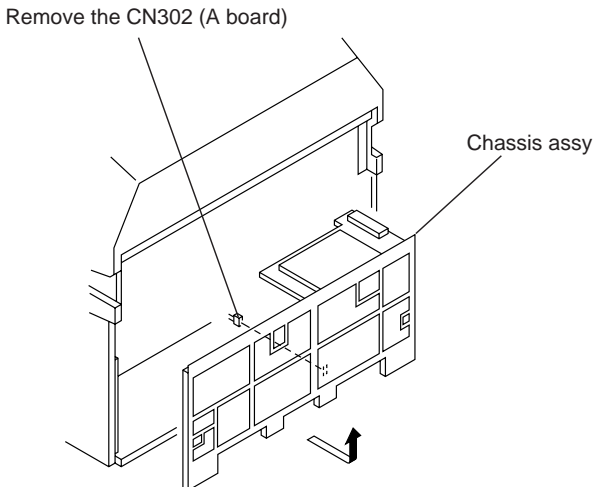


2-4. HA BOARD REMOVAL

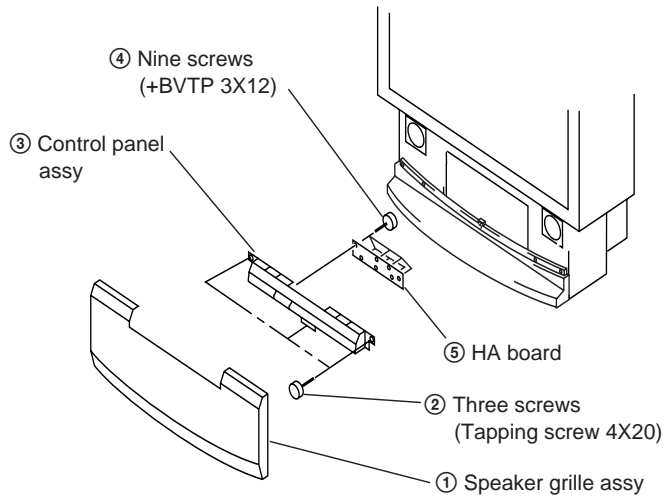


2-5-1. BEZNET ASSY REMOVAL (KP-48V75/53V75)

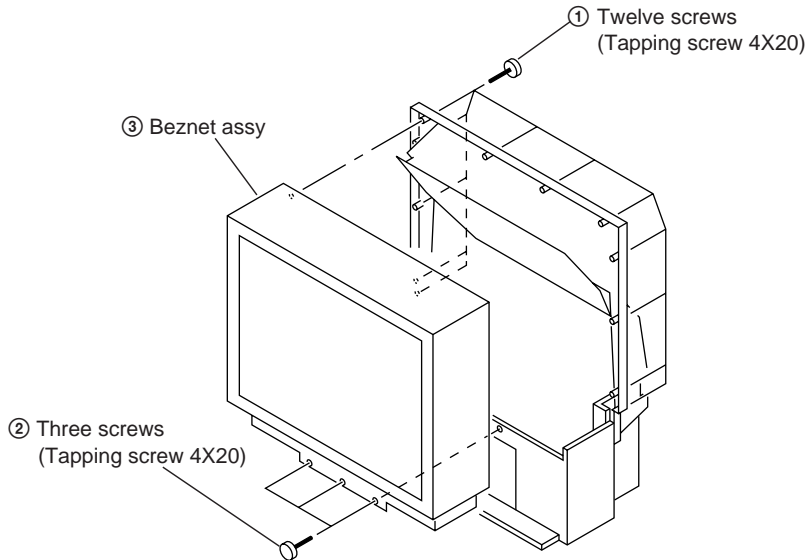


2-5-2. SCREEN FRAME ASSY REMOVAL (KP-61V75)

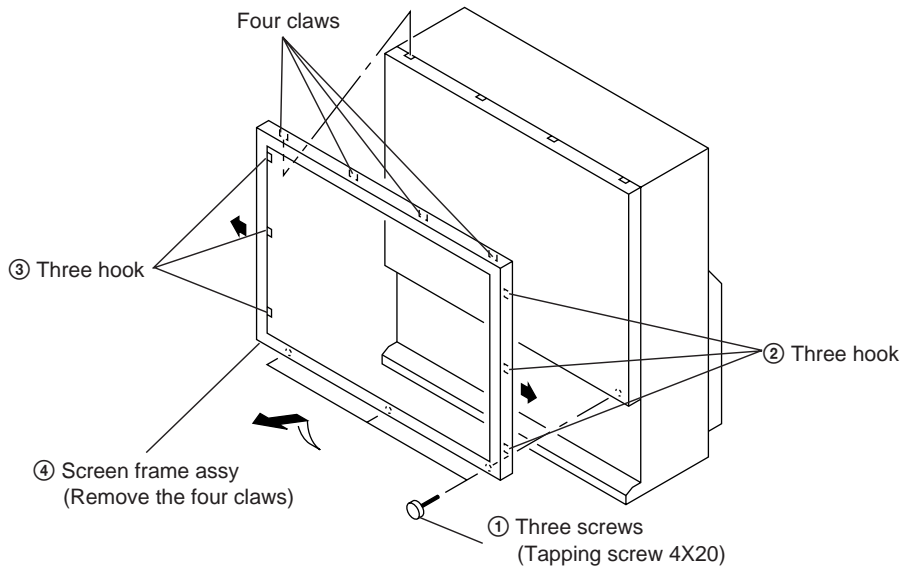

2-6-1. MIRROR COVER ASSY REMOVAL (KP-48V75/53V75)

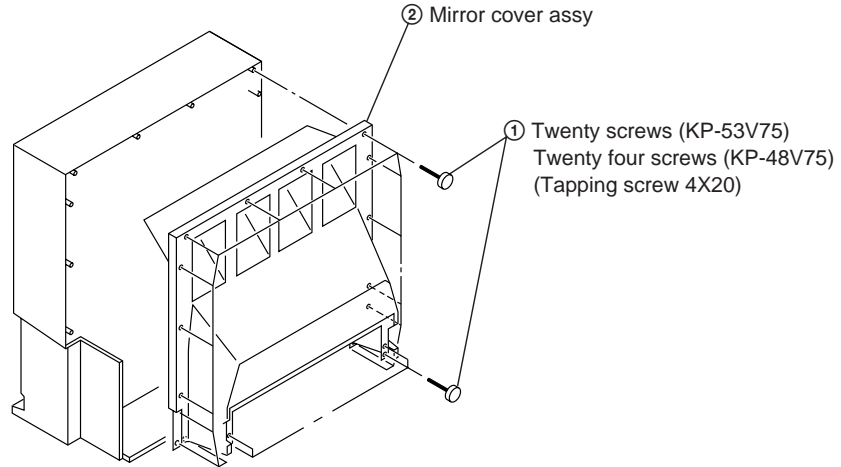


2-6-2. REFLECTION MIRROR REMOVAL (KP-61V75)

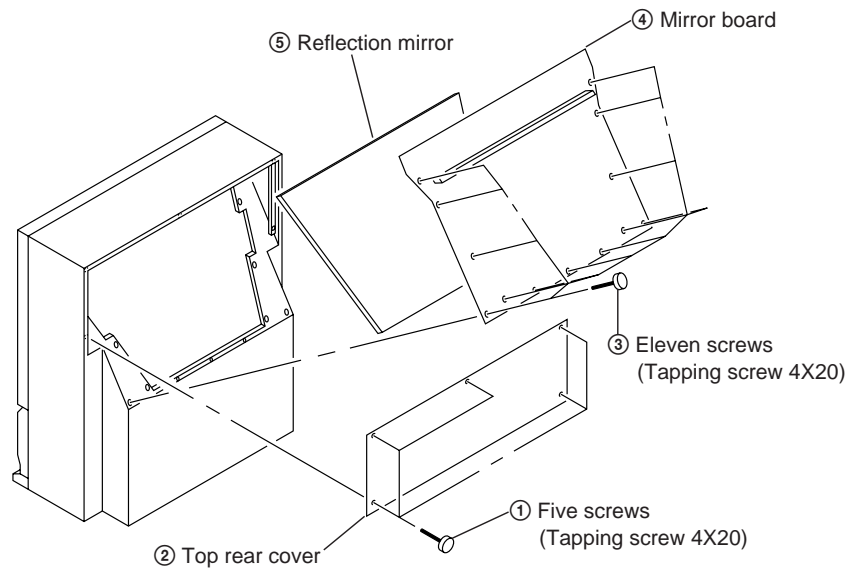


2-7. HIGH-VOLTAGE CABLE INSTALLATION AND REMOVAL

(1) Remover

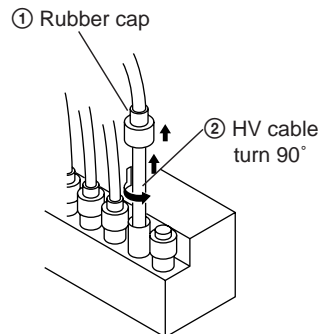


(2) Installation

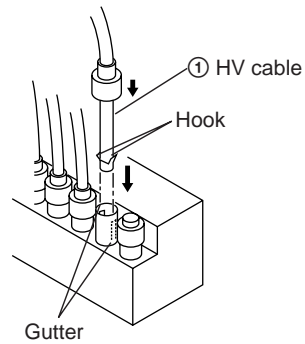


2-8. PICTURE TUBE REMOVAL


CAUTION: Removing the arrow-marked screws is strictly inhibited. If removed, it may cause liquid spill.

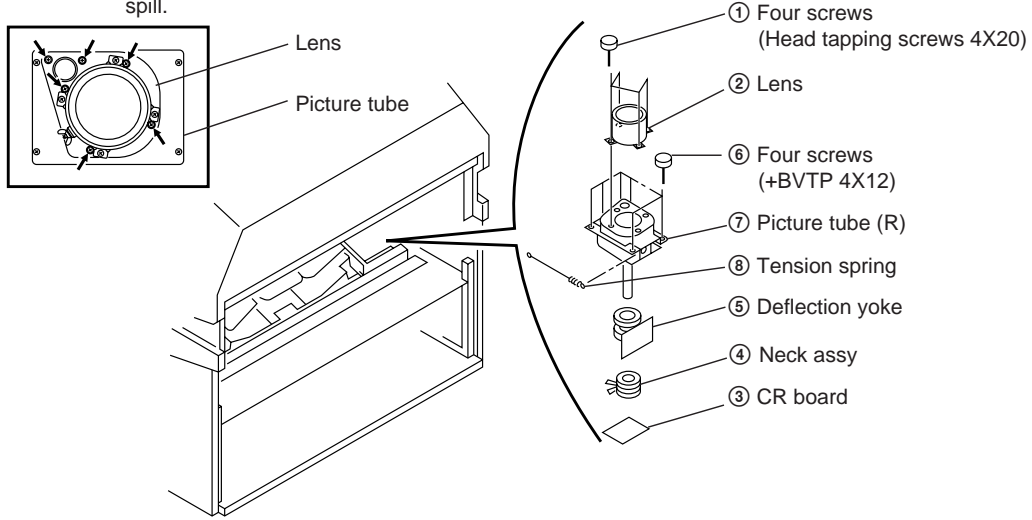

2-9. WIRING DRAWINGS AND WIRING LAYOUT

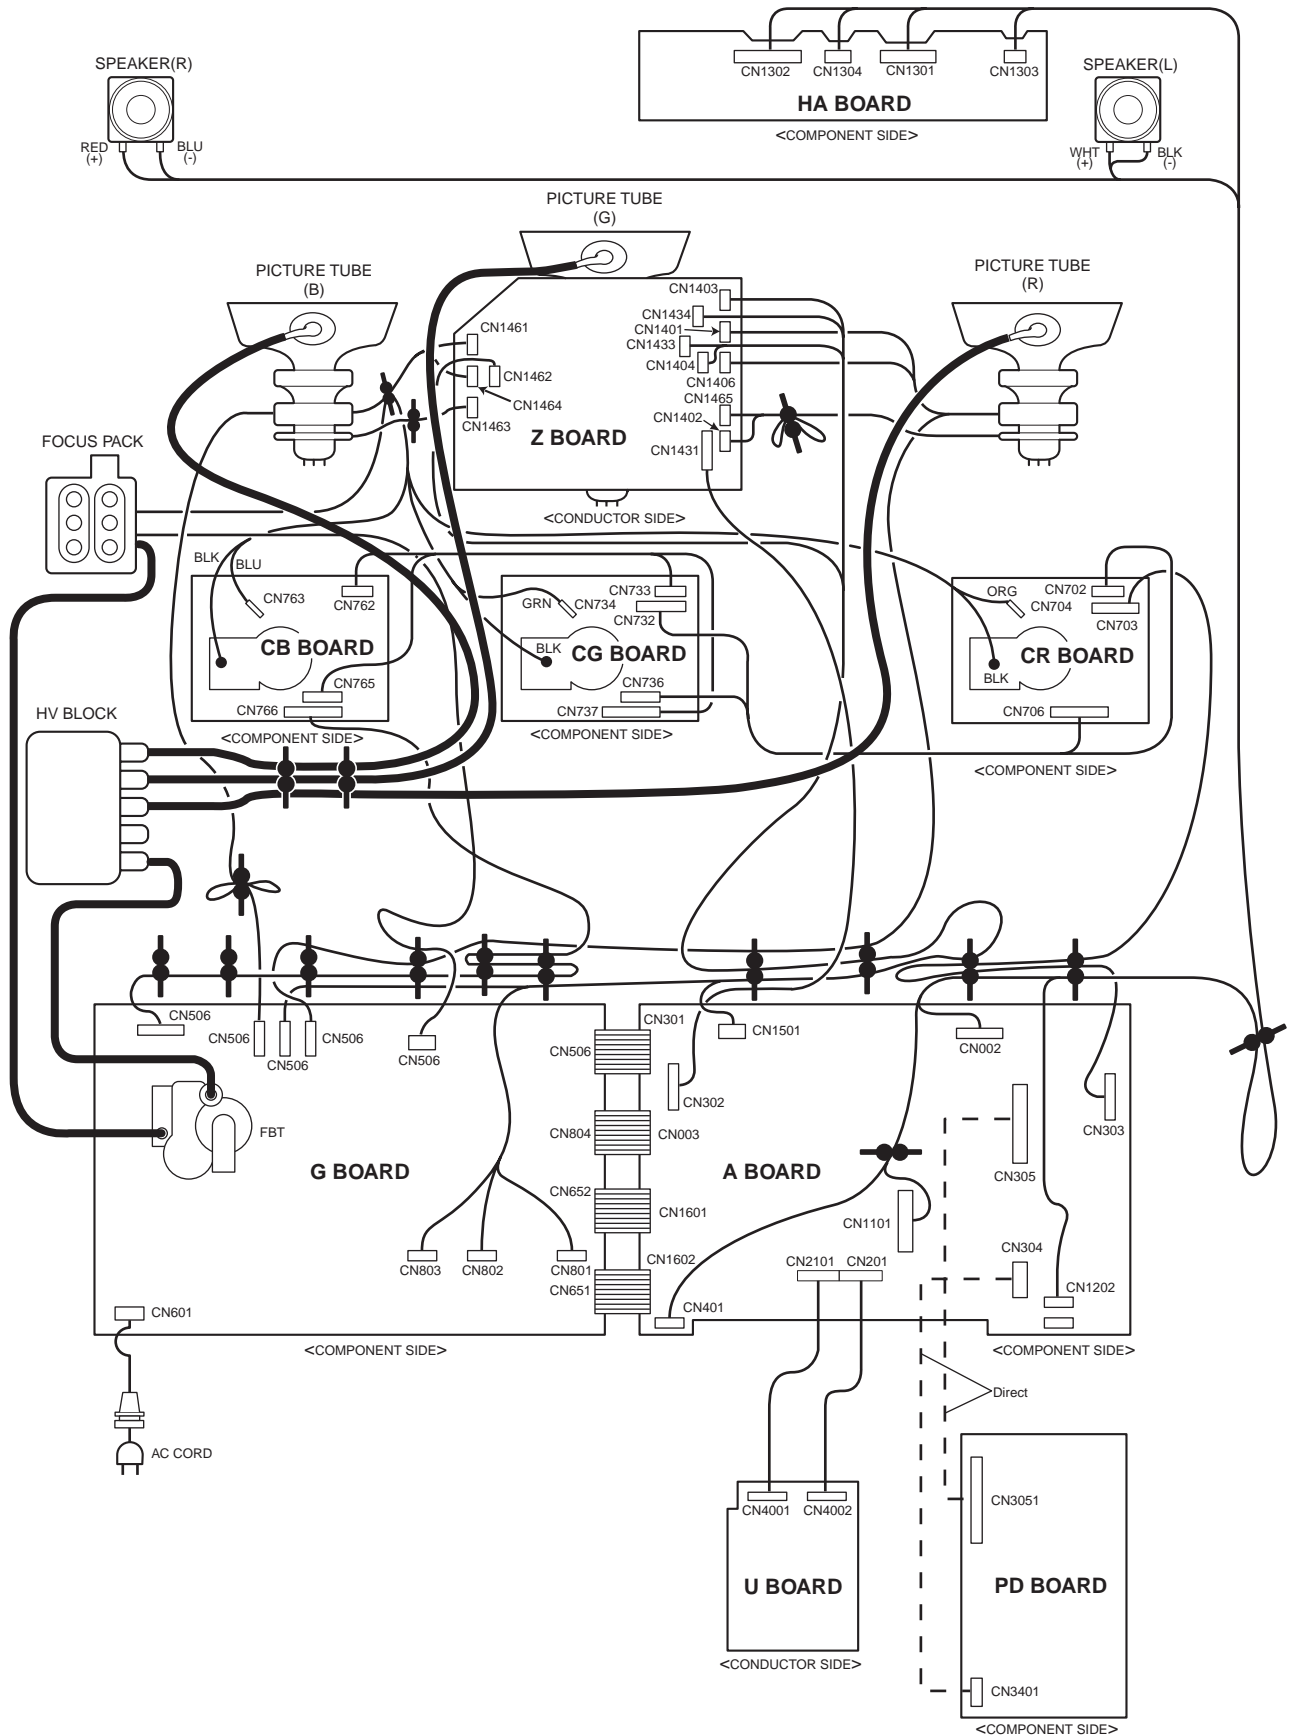


2-10. SERVICE STAY ASSY HOW TO USE AND CARRY BACK SERVICE STAY ASSY.

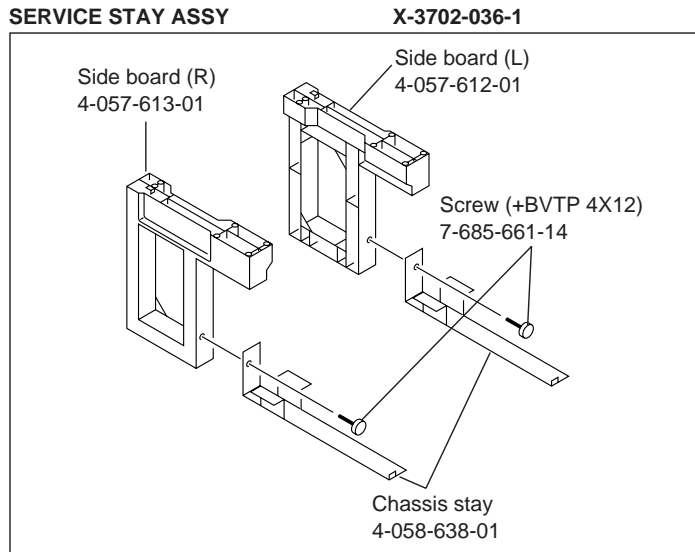

(1) PICTURE TUBE BRACKET ASSY REMOVAL


- Disassemble HA board and speaker cord.
- Disassemble all the harness from purse lock.

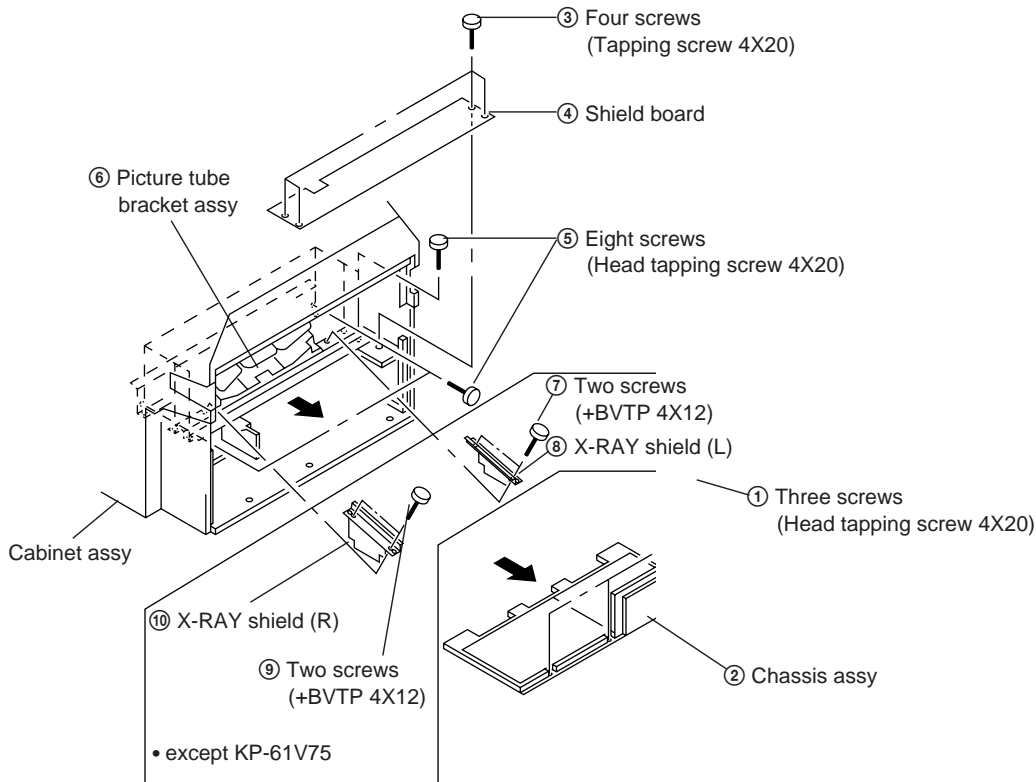

- 1) Remove ① three screws (head tapping screw 4X20) and pull out ② chassis assy from cabinet assy.
- 2) Remove ③ four screws (tapping screw 4X20) and remove ④ shield board.
- 3) Remove ⑤ eight screws (head tapping screw 4X20) and release ⑥ picture tube bracket assy from cabinet assy.


- 4) Remove ⑦ two screws (+BVTP 4X12) and remove ⑧ X-RAY shield (L).
- 5) Remove ⑨ two screws (+BVTP 4X12) and remove ⑩ X-RAY shield (R).
• except KP-61V75

**(2) SETTING OF SERVICE STAY ASSY.
(KP-48V75/53V75)**

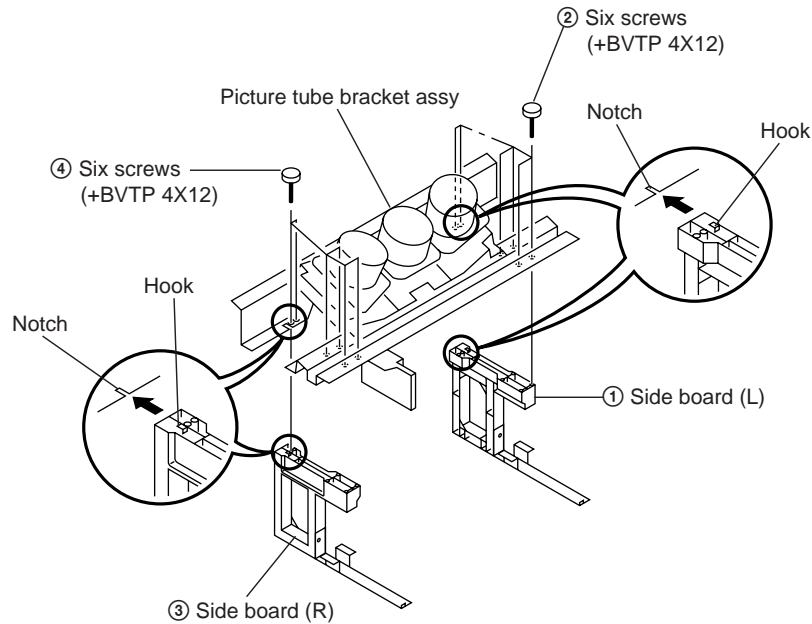

- 1) Lift up picture tube bracket assy and fit the hook of ① side board (L) to the notch on the assy. Then fix then with ② six screws (+BVTP 4X12).
- 2) Lift up picture tube bracket assy and fit the hook of ③ side board (R) to the notch on the assy. Then fix then with ④ six screws (+BVTP 4X12).

(3) INSTALL A CHASSIS ASSY AND CARRY THE PICTURE TUBE BRACKET

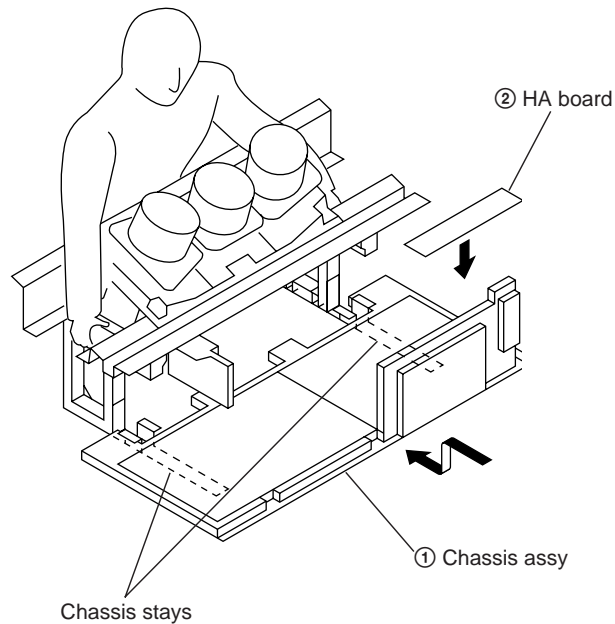

- 1) Put ① chassis assy on chassis stays.
- 2) Put ② HA board on ① chassis assy
- 3) Put your hands to side board (L) and (R).
- 4) You can carry the chassis assy in this condition.

*When carrying the chassis assy, be careful not to touch the CR, CG or CB boards with your legs.

SECTION 3 SET-UP ADJUSTMENTS

3-1. SCREEN VOLTAGE ADJUSTMENT (ROUGH ALIGNMENT)

1. Receive the Monoscope signal.
2. Set 50% BRIGHTNESS and minimum PICTURE.
3. Turn the red VR on the FOCUS block all the way to the left and then gradually turn it to the right until the point where you can see the retrace line.
4. Next gradually turn it to the left to the position where the retrace line disappears.

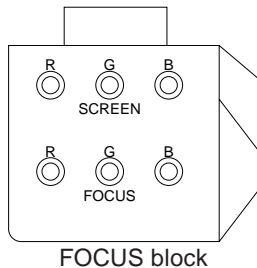


Fig. 3-1

3-2. FOCUS LENS ADJUSTMENT

1. Loose the lens screw.
2. Set in service mode.
3. Use VP on the service mode menu to shown only the green color.
4. Press the Commander Menu button and select FEATURES and CONVERGENCE to display the test signal (crosshatch) on the screen.
5. Rotate the green lens and align with the optimal focus point from the test signal.
6. Use RG-RH from the service mode menu to set to green and red.
7. Output the test signal and rotate the red lens to obtain the optimum focus at the point where the red and green spots overlap.
8. Use RG-BH from the service mode menu to set to red and blue.
9. Output the test signal and rotate the blue lens to obtain the optimum focus at the point where the blue and red spots overlap.
10. Tighten the lens screw.

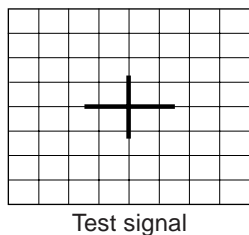


Fig. 3-2

3-3. SCREEN (G2) ADJUSTMENT

1. Select VIDEO mode without signals.
2. Connect an oscilloscope to the TP701(KR), TP731(KG) and TP761(KB) of CR board, CG board and CB board.
3. Adjust R, G and B screen voltage to 170 – 173V with screen VR on the focusblock.

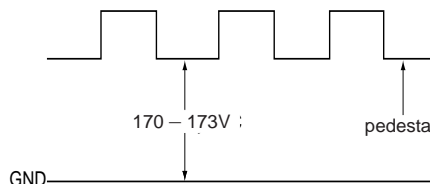


Fig. 3-3

3-4. FOCUS VR ADJUSTMENT

1. Set in service mode.
2. Use VP on the service mode menu to shown only the green color.
3. Press the Commander Menu button (convergence) and output the test signal (crosshach).
4. Rotate the green VR on the FOCUS block and align to obtain the optimal focus point.
5. Use RG-RH from the service mode menu to set to green and red.
6. Output the test signal and rotate the red VR to obtain the optimum focus at the point where the red and green spots overlap.
7. Use RG-BH from the service mode menu to set to red and blue.
8. Output the test signal and rotate the blue VR aligning to obtain the optimum focus at the point where the blue and green spots overlap.

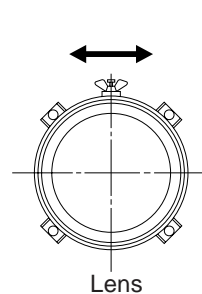


Fig. 3-4

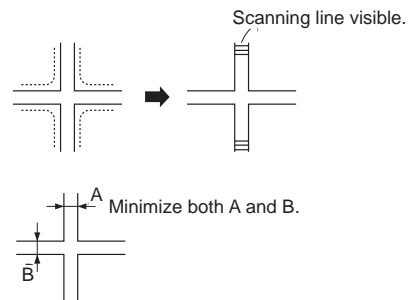


Fig. 3-5

3-5. DEFLECTION YOKE TILT ADJUSTMENT

1. Set to receive the Monoscope signal.
2. Set in service mode.
3. Use VP on the service mode menu to show only the green color.
4. Loosen the deflection yoke set screw and align the tilt of the Deflection Yoke so that the bars at the center of the monoscope pattern are horizontal.
5. After aligning the deflection yoke, fasten it securely to the funnel-shaped portion (neck) of the CRT.
6. The tilt of the deflection yoke for red is aligned with RG-RH on the service mode menu, and the tilt on the deflection yoke for blue is aligned with RG-BH on the service menu, is aligned the same as was done for green.

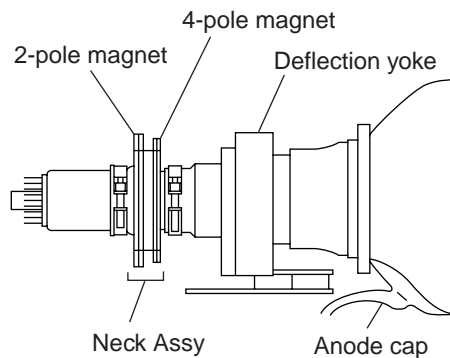


Fig. 3-6

3-6. 2-POLE MAGNET ADJUSTMENT

1. Set in service mode.
2. Set to receive the Dot signal.
3. Place the caps on the red and blue lens so that only the green color is shown.
4. Turn the green VR on the focus block to the right and set to overfocus to enlarge the spot.
5. Now align the 2-Pole Magnet so that the enlarged spot is in the center of the Just Focus spot.
6. Align the green focus VR and set for just (precise) focus.
7. Perform the same alignment for red and blue.

Use the center dot

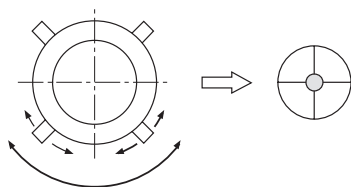


Fig. 3-7

3-7. 4-POLE MAGNET ADJUSTMENT

1. Set in service mode.
2. Set to receive the Dot signal.
3. Remove CN302 connector for A board
4. Place the caps on the red and blue lens so that only the green color is shown.
5. Turn the green VR on the focus block to the left and set to underfocus to enlarge the spot.
6. Now align the 4-Pole Magnet so that the enlarged spot becomes a perfect circle.
7. Perform the same alignment for red and blue.

Use the center dot

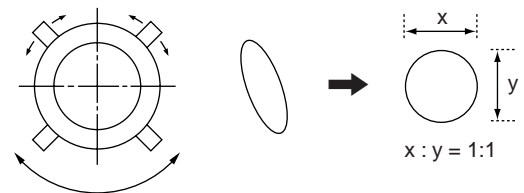


Fig. 3-8

3-8. DEFOCUS ADJUSTMENT (Blue)

1. Receive the crosshatch signal
2. Adjust the FOCUS knob so that the crosshatch pattern vertical line width is as in the figure on the right.
3. Blue only defocus Adjustment.

[Focus adjustment point]

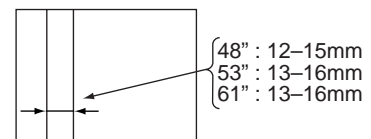


Fig. 3-9

3-9. ELECTRICAL ADJUSTMENT BY REMOTE COMMANDER

2. MEMORY WRITE CONFIRMATION METHOD

1. After adjustment, remove the plug from AC outlet, and then replace the plug in AC outlet again.
2. Turn the power switch ON and set to Service Mode.
3. Call the adjusted items again and confirm they were adjusted.



By using Remote Commander (RM-Y903), all circuit adjustments can be made.

NOTE : Test Equipment Required.

1. Pattern Generator
2. Frequency counter
3. Digital multimeter
4. Audio oscillator

1. METHOD OF SETTING THE SERVICE ADJUSTMENT MODE


SERVICE MODE PROCEDURE

1. Standby mode. (Power off)
2. **DISPLAY** → **5** → **VOL (+)** → **TV POWER**
 (**+** → **5** →  → )

on the Remote Commander.


(Press each button within a second.)

SERVICE MODE ADJUSTMENT

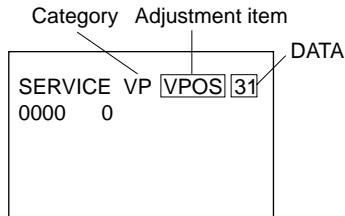


3. The CRT displays the item being adjusted.
4. Press **1** or **4** on the Remote Commander to select the item.
5. Press **3** or **6** on the Remote Commander to change the data.
6. Press **2** or **5** on the Remote Commander to select the category.
7. If you want to recover the latest values press **7** then **ENTER** to read the memory.
8. Press **MUTING** then **ENTER** to write into memory.

SERVICE MODE ADJUSTMENT

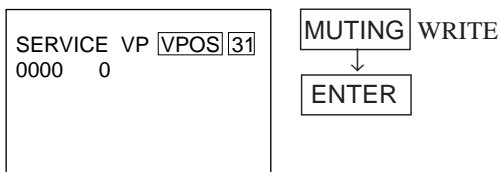

8. Press **8** then **ENTER** on the Remote Commander to initialize.
9. Turn set off and on to exit.

3. ADJUST BUTTONS AND INDICATOR

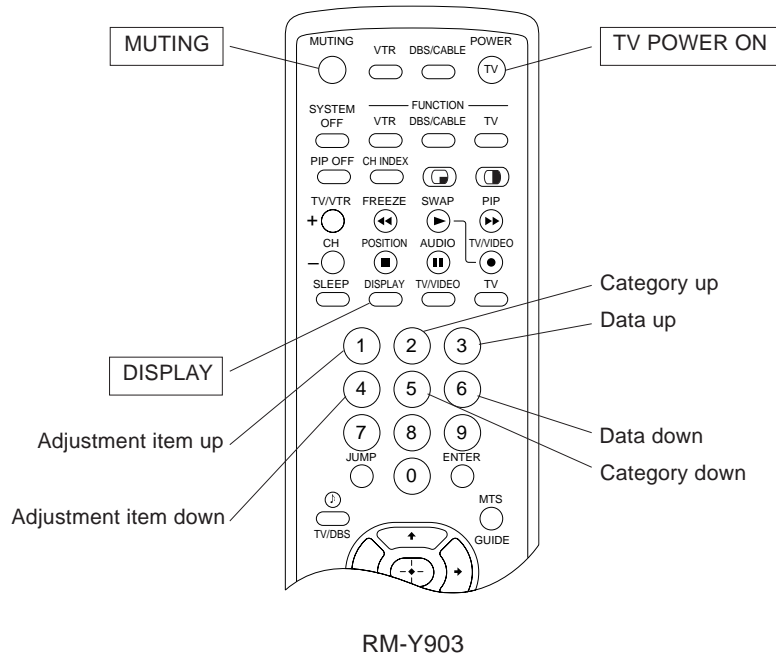

4. SERVICE MODE LIST

Category	Adjustment item	Standard data	Data range	Note
VP	VPOS	-	0-63	V SHIFT
	VSIZ	-	0-63	V SIZE
	VCOM	0	0-3	HV-COMP-V
	VLIN	7	0-15	V LIN
	VSCO	7	0-15	S CORRECTION
	HPOS	7	0-15	H SHIFT
	HSIZ	-	0-63	H SIZE
	PAMP	-	0-63	PIN AMP
	UPIN	7	0-15	UPPER CORNER PIN
	LPIN	7	0-15	LOWER CORNER PIN
	PPHA	7	0-15	H TRAPEZOID
	AFC	2	0-3	AFC LOOP GAIN
	VBOW	7	0-15	V BOW
	VANG	7	0-15	V ANGLE
	REF	3	0-3	AKB REFERENCE
	GDRV	-	0-63	GREEN DRIVE
	BDRV	-	0-63	BLUE DRIVE
	GCUT	-	0-15	GREEN CUT OFF
	BCUT	-	0-15	BLUE CUT OFF
	SCON	-	0-15	SUB CONTRAST
	SHUE	-	0-15	SUB HUE
	SCOL	-	0-15	SUB COLOR
	SBRT	31	0-63	SUB BRIGHTNESS
	SSHP	7	0-15	SUB SHARPNESS
	GMMA	0	0-3	GAMMA LEVEL
	EYSW	0	0,1	EXT-Y SWITCH
	CDM2	0	0,1	COUNT DOWN MODE 2
	DPIX	1	0,1	DYNAMIC PICTURE
	Y-DC	1	0,1	DC TRANSMISSION RATIO
	ABLM	1	0,1	ABL MODE
	AXIS	0	0,1	R-Y, G-Y AXIS
	NOTC	0	0,1	C TRAP
	CROM	7	0-15	C TRAP F0
	TOT	0	0,1	C TOT FILTER
	PREL	3	0-3	PRE/OVER LEVEL
	SHPF	3	0-3	SHARPNESS F0
	RON	1	0,1	RED ON/OFF
	GON	1	0,1	GREEN ON/OFF
	BON	1	0,1	BLUE ON/OFF
	DCOL	0	0,1	DYNAMIC COLOR
	CDMD	0	0,1	V COUNT DOWN
	LBLK	13	0-15	H BLK WIDTH LEFT SIDE
	RBLK	13	0-15	H BLK WIDTH RIGHT SIDE

3D

Category	Adjustment item	Standard data	Data range	Note
3D	NRMD	0	0-13	NOISE REDUCER MODE
	DYCO	2	0-15	Δ Y CORING LEVEL SETTING
	DYGA	10	0-15	Δ Y GAIN SETTING
	DCCO	5	0-15	Δ C CORING LEVEL SETTING
	DCGA	5	0-15	Δ C GAIN SETTING
	SELD	1	0,1	SELECT Δ Y SIGNAL FILTER
	D2GA	4	0-7	Δ Y/C 2nd GAIN SETTING
	VTRH	1	0-3	VTR HSYNC HYSTERESIS SETTING
	VTRR	1	0-3	VTR HSYNC REFERENCE SETTING
	LDSR	2	0-3	LD SIGNAL REFERENCE
	VAPG	5	0-7	V APERTURE GAIN
	VAPI	11	0-31	V APERTURE INVERT POINT
	VPFT	0	0-3	Y PEAKING FILTER TAP
	VPFG	8	0-15	Y PEAKING FILTER GAIN
	V1PS	2	0-3	VERTICAL 1 LINE SELECTOR
	VEGS	1	0-3	VERTICAL EDGE SELECTOR
	CC3N	0	0,1	C SIGNAL 3-LINE COM FILTER
	HDP	4	0-7	HD HORIZONTAL PHASE
	CDL	4	0-7	C DELAY
	HSSL	12	0-15	H SYNC SLICE LEVEL
	VSSL	8	0-15	V SYNC SLICE LEVEL
	HPLF	1	0,1	H PLL FILTER
	BPLF	0	0,1	BURST PLL FILTER
	FSCF	1	0,1	FSC FILTER GAIN
	PLFG	1	0,1	PLL FILTER GAIN
	EXAD	1	0,1	EXTERNAL AD IN
	MSS	0	0-3	FORCED MOTION SIGNAL
	COUT	3	0-3	C SIGNAL OUTPUT
	YAPS	1	0-3	Y APERTURE
	NSDS	0	0-3	NON STD SIGNAL DETCT.
	EXCS	1	0-3	EXTERNAL COMP. SYNC.
	CPP	0	0-3	CLAMP PULSE & AD RANGE
	YHCO	0	0-3	Y HIGH FREQ. SIGNAL CORING
	YPCO	0	0,1	Y PEEK FILTER CORING OFF
	KILR	3	0-15	KILLER REFERENCE
	BGPS	4	0-15	BGP START POSITION
	BGPW	10	0-15	BGP WIDTH
	ADCL	2	0-3	AD CLOCK DELAY

AP

Category	Adjustment item	Standard data	Data range	Note
AP	SVOL	0	0-15	SUB VOLUME
	SBAL	7	0-15	SUB BLANCE
	SBAS	7	0-15	SUB BASS
	STRE	7	0-15	SUB TREBLE

PP

Category	Adjustment item	Standard data	Data range	Note
PP	BGHP	5	0-15	PIP H POSITION
	BGVP	9	0-15	PIP V POSITION
	MAHP	-	0-15	P&P MAIN H AQUISITION
	MAVP	27	0-255	P&P MAIN V AQUISITION
	SAHP	-	0-15	P&P SUB H AQUISITION
	SAVP	27	0-255	P&P SUB V AQUISITION
	DECM	18	0-31	M DECODER REGISTERS
	DECS	18	0-31	S DECODER REGISTERS
	DIS	66	0-127	DISPLAY SETTING
	BSIZ	2	0-15	BORDER SIZE
	6BIT	1	0-3	6bit (SMART6/SKIP6)
	VPED	13	0-15	V OFFSET
	UPED	13	0-15	U OFFSET

DA

Category	Adjustment item	Standard data	Data range	Note
DA	UVSH	-	0-63	YUV SUB HUE
	UVSC	-	0-63	YUV SUB COLOR

MC

Category	Adjustment item	Standard data	Data range	Note
MC	MSCN	-	0-15	P&P MAIN SUB CONTRAST
	MSHU	-	0-15	P&P MAIN SUB HUE
	MSCL	-	0-15	P&P MAIN SUB COLOR
	MUPD	-	0-15	P&P MAIN U OFFSET
	MVPD	-	0-15	P&P MAIN V OFFSET
	MDLY	0	0-3	P&P MAIN Y DELAY
	MBGR	3	0-3	P&P MAIN SCP CONTROL(1)
	MBGF	3	0-3	P&P MAIN SCP CONTROL(2)
	MU2P	7	0-7	P & P MAIN U2 PEDESTAL OFFSET
	MV2P	7	0-7	P & P MAIN V2 PEDESTAL OFFSET
	MY2D	19	0-31	P & P MAIN Y2 DRIVE
	MU2D	14	0-31	P & P MAIN U2 DRIVE
	MV2D	14	0-31	P & P MAIN V2 DRIVE

IC

Category	Adjustment item	Standard data	Data range	Note
IC	SSCN	-	0-15	P&P SUB SUB CONTRAST
	SSHU	-	0-15	P&P SUB SUB HUE
	SSCL	-	0-15	P&P SUB SUB COLOR
	SUPD	-	0-15	P&P SUB U OFFSET
	SVPD	-	0-15	P&P SUB V OFFSET
	SDLY	0	0-3	P&P SUB Y DELAY
	SBGR	3	0-3	P&P SUB SCP CONTROL(1)
	SBGF	3	0-3	P&P SUB SCP CONTROL(2)
	SU2P	7	0-15	P & P SUB U2 PEDESTAL OFFSET
	SV2P	7	0-15	P & P SUB V2 PEDESTAL OFFSET
	SY2D	19	0-31	P & P SUB Y2 DRIVE
	SU2D	14	0-31	P & P SUB U2 DRIVE
	SV2D	14	0-31	P & P SUB V2 DRIVE
	PCDR	32	0-63	PIP COLOR
	PHDR	31	0-63	PIP HUE
	PAFC	2	0-3	PIP AFC LOOP GAIN
	PTOT	0	0,1	PIP CHROMA TOT FILTER
	PYDR	23	0-31	PIP Y DRIVE
	PYDC	0	0-7	PIP DC TRAN
	PSHP	1	0,1	PIP SHARPNESS F0
	PDPI	0	0,1	PIP DYNAMIC PICTURE
	PSYS	0	0-3	PIP COLOR SYSTEM
	PXTL	0	0-3	PIP X' TAL
	PLOP	0	0-3	PIP COLOR LOOP

RG

Category	Adjustment item	Standard data	Data range	Note
RG-GH	GH CENT	-	-127- +127	GREEN H SENT
	GH SKEW	-	-127-+127	GREEN H SKEW
	GH BOW	-	-127-+127	GREEN H BOW
	GH 4BOW	-	-127-+127	GREEN H 4TH BOW
	GH SIZE	20	-127-+127	GREEN H SIZE
	GH LIN	-	-127-+127	GREEN H LINEARITY
	GH MSIZ	-	-127-+127	GREEN H MID SIZE
	GH MLIN	-	-127-+127	GREEN H MID LINEARITY
	GH KEY	-	-127-+127	GREEN H KEY
	GH SSKW	-	-127-+127	GREEN H SUB SKEW
	GH MPIN	-	-127-+127	GREEN H MID PIN
	GH PIN	-	-127-+127	GREEN H PIN
	GH SBOW	-	-127-+127	GREEN H SUB BOW
	GH MBOW	-	-127-+127	GREEN H MID BOW
	GH 4PIN	-	-127-+127	GREEN H 4TH PIN
	GH 4SBO	-	-127-+127	GREEN H 4TH SUB BOW

Category	Adjustment item	Standard data	Data range	Note
RG-GV	GV CENT	-	-127-+127	GREEN V CENT
	GV SKEW	-	-127-+127	GREEN V SKEW
	GV BOW	-	-127-+127	GREEN V BOW
	GV SIZE	-20	-127-+127	GREEN V SIZE
	GV LIN	-	-127-+127	GREEN V LINEARITY
	GV MSIZ	-	-127-+127	GREEN V MID SIZE
	GV MKEY	-	-127-+127	GREEN V MID KEY
	GV KEY	-	-127-+127	GREEN V KEY
	GV SSKW	-	-127-+127	GREEN V SUB SKEW
	GV MPIN	-	-127-+127	GREEN V MID PIN
	GV PIN	-	-127-+127	GREEN V PIN
RG-RH	RV CENT	-	-95-+96	RED V CENT
	RV SKEW	-	-127-+127	RED V SKEW
	RV BOW	-	-127-+127	RED V BOW
	RV 4BOW	-	-127-+127	RED V 4TH BOW
	RV SIZE	-	-127-+127	RED V SIZE
	RV LIN	-	-127-+127	RED V LINEARITY
	RV MSIZ	-	-127-+127	RED V MID SIZE
	RV MLIN	-	-127-+127	RED V MID LINEARITY
	RV KEY	-	-127-+127	RED V KEY
	RV SSKW	-	-127-+127	RED V SUB SKEW
	RV MPIN	-	-127-+127	RED V MID PIN
RG-RV	RH CENT	-	-95-+96	RED H CENT
	RH SKEW	-	-127-+127	RED H SKEW
	RH BOW	-	-127-+127	RED H BOW
	RH 4BOW	-	-127-+127	RED H 4TH BOW
	RH SIZE	-	-127-+127	RED H SIZE
	RH LIN	-	-127-+127	RED H LINEARITY
	RH MSIZ	-	-127-+127	RED H MID SIZE
	RH MLIN	-	-127-+127	RED H MID LINEARITY
	RH KEY	-	-127-+127	RED H KEY
	RH SSKW	-	-127-+127	RED H SUB SKEW
	RH MPIN	-	-127-+127	RED H MID PIN
RG-RV	RH PIN	-	-127-+127	RED H PIN
	RH SBOW	-	-127-+127	RED H SUB BOW
	RH MBOW	-	-127-+127	RED H MID BOW
	RH 4PIN	-	-127-+127	RED H 4TH PIN
	RH 4SBO	-	-127-+127	RED H 4TH SUB BOW
	RV CENT	-	-95-+96	RED V CENT
	RV SKEW	-	-127-+127	RED V SKEW
	RV BOW	-	-127-+127	RED V BOW
	RV SIZE	-	-127-+127	RED V SIZE
	RV LIN	-	-127-+127	RED V LINEARITY
	RV MSIZ	-	-127-+127	RED V MID SIZE
RV MKEY	-	-127-+127	RED V MID KEY	
RV KEY	-	-127-+127	RED V KEY	
RV SSKW	-	-127-+127	RED V SUB SKEW	
RV MPIN	-	-127-+127	RED V MID PIN	
RV PIN	-	-127-+127	RED V PIN	
RV SBOW	-	-127-+127	RED V SUB BOW	
RV WAVE	-	-127-+127	RED V WAVE	
RV 4PIN	-	-127-+127	RED V 4TH PIN	
RV WING	-	-31-+32	RED V WING	

Category	Adjustment item	Standard data	Data range	Note
RG-BH	BH CENT	-	-95+96	BLUE H CENT
	BH SKEW	-	-127+127	BLUE H SKEW
	BH BOW	-	-127+127	BLUE H BOW
	BH 4BOW	-	-127+127	BLUE H 4TH BOW
	BH SIZE	-	-127+127	BLUE H SIZE
	BH LIN	-	-127+127	BLUE H LINEARITY
	BH MSIZ	-	-127+127	BLUE H MID SIZE
	BH MLIN	-	-127+127	BLUE H MID LINEARITY
	BH KEY	-	-127+127	BLUE H KEY
	BH SSKW	-	-127+127	BLUE H SUB SKEW
	BH MPIN	-	-127+127	BLUE H MID PIN
	BH PIN	-	-127+127	BLUE H PIN
	BH SBOW	-	-127+127	BLUE H SUB BOW
	BH MBOW	-	-127+127	BLUE H MID BOW
	BH 4PIN	-	-127+127	BLUE H 4TH PIN
	BH 4SBO	-	-127+127	BLUE H 4TH SUB BOW
BV CENT	-	-95+96	BLUE V CENT	
RG-BV	BV SKEW	-	-127+127	BLUE V SKEW
	BV BOW	-	-127+127	BLUE V BOW
	BV SIZE	-	-127+127	BLUE V SIZE
	BV LIN	-	-127+127	BLUE V LINEARITY
	BV MSIZ	-	-127+127	BLUE V MID SIZE
	BV MKEY	-	-127+127	BLUE V MID KEY
	BV KEY	-	-127+127	BLUE V KEY
	BV SSKW	-	-127+127	BLUE V SUB SKEW
	BV MPIN	-	-127+127	BLUE V MID PIN
	BV PIN	-	-127+127	BLUE V PIN
	BV SBOW	-	-127+127	BLUE V SUB BOW
	BV WAVE	-	-127+127	BLUE V WAVE
	BV 4PIN	-	-127+127	BLUE V 4TH PIN
	BV WING	-	-31+32	BLUE V WING

CC

Category	Adjustment item	Standard data	Data range	Note
CC	CRIL	2	0-15	CRI COUNT LOW
	CFLD	5	0-15	FIXED FIELD COUNT
	CCDI	3	0-7	NO CCD INT COMPARE
	CRIP	4	0-7	CRI & PARITY ERROR
	CRIT	1	0-3	CRI TIME CONSTANT
	CSB1	3	0-3	SYNC SLICE BIAS 1
	CSB2	4	0-7	SYNC SLICE BIAS 2
	CREP	142	0-255	CRI SIGNAL END POSITION
	CDSO	8	0-31	DATA START DELAY
	CCDS	9	0-31	CAPTION DT THRESHOLD
	CHMK	42	0-63	H SYNC MASK WIDTH
	CHSY	136	0-255	H SYNC VCO COUNT

OP

Category	Adjustment item	Standard data	Data range	Note
OP	DISP	-	0-63	OSD POSITION
	POPS	-	0-255	FAV/IDX CH POSITION
	POPO	-	0-7	CH POSITION (OFF SET)


ID

Category	Adjustment item	Standard data	Data range	Note
ID	ID0	25	0-255	MODEL ID#0
	ID1	55	0-255	MODEL ID#1
	ID2	47	0-255	MODEL ID#2
	ID3	0	0-255	MODEL ID#3
	ID4	155	0-255	MODEL ID#4
	ID5	181	0-255	MODEL ID#5
	ID6	214	0-255	MODEL ID#6
	ID7	71	0-255	MODEL ID#7

3-10. CONVERGENCE ADJUSTMENT


- When replacing the deflection yoke, always perform "DEFLECTION YOKE TILT ADJUSTMENT" before adjusting the convergence.

Adjustment procedure

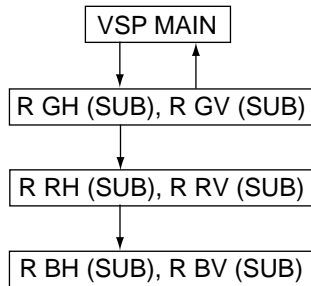


[GREEN REGISTRATION ADJUSTMENT]

• V-SHIFT adjustment




• V-LINEARITY adjustment




• V-SIZE, V-CORRECTION adjustment

While tracking, adjust so that the lattice intervals for VSIZ and VSCO are equal.

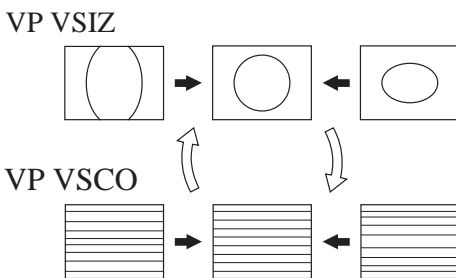


• H-SHIFT adjustment

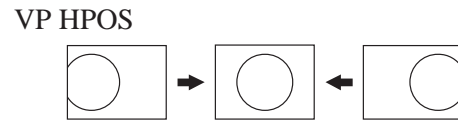


• H-SIZE adjustment

Finely adjust with SUB MSIZ.



• PIN-AMP adjustment

Finely adjust with SUB MPIN.





• UPPER/LOWER-CORNER PIN adjustment

Correct the screens top and bottom bow line.



However, if this adjustment is overdone, distortion may occur with the PIN-AMP adjustment that can not be re-adjusted.

Note : The PIN-AMP adjusts the overall screen from top to bottom, but the UPPER/LOWER-CORNER PIN adjustments have large movement in the top and bottom sections, so be careful.

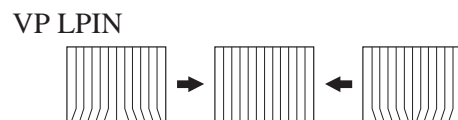


• V-ANGLE, V-BOW adjustment

Correct the tilt and bow of the vertical line at the center of the screen.




**[GREEN SUB ADJUSTMENT]
SCREEN CENTER SECTION GREEN VERTICAL LINE
ADJUSTMENT**

1. Finely adjust with GH CENT, GH BOW, GH SKEW.
Adjust by watching out for the GH CENT screen center section.
2. RGH 4TH BOW adjustment
Correct the corner distortion that could not be adjusted away with the GH 4BOW adjustment.

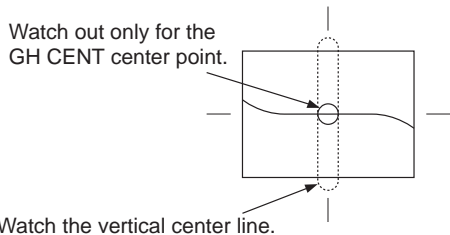


GH CENT



GH BOW



GH SKEW




GH 4BOW



**SCREEN CENTER SECTION GREEN HORIZONTAL LINE
ADJUSTMENT**

1. Finely adjust the center position of the vertical line at the center of the screen with GV CENT.
2. Correct the tilt and bow of the horizontal line at the center of the screen with GV SKEW and GV BOW.

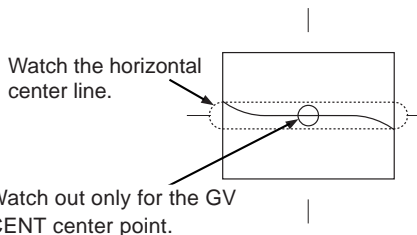


GV CENT



GV SKEW




GV BOW



GREEN SIZE AND LINEARITY ADJUSTMENT


1. Balance the sizes at both sides of the center section of the screen with RGH MLIN.
2. Balance the sizes on both end sections of the screen with RGH LIN.
3. While tracking, adjust with RGH MLIN and RGH LIN so that the sizes of the horizontal line at the center of the screen are symmetrical left and right.

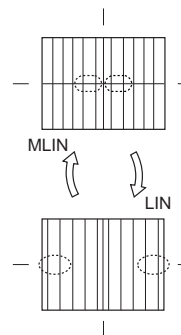

GREEN HORIZONTAL SIZE ADJUSTMENT


1. Adjust with RGH MSIZE so that the sizes of both ends and of both sides of the center section of the screen are equal.
2. Adjust with GH SIZE so that the horizontal sizes of both ends and of both sides of the center section of the screen are equal.
3. While tracking, adjust with GH MSIZ and GH SIZE so that the lattice intervals for the horizontal line section of the center section of the screen are equal and so that the horizontal size is the prescribed value.
4. If M LIN is changed when the GH MSIZ and GH SIZE adjustment is complete, adjust again while tracking.

- With just the H SIZE adjustment in MAIN, if there is no need to adjust RGH SIZE in SUB this can save power.

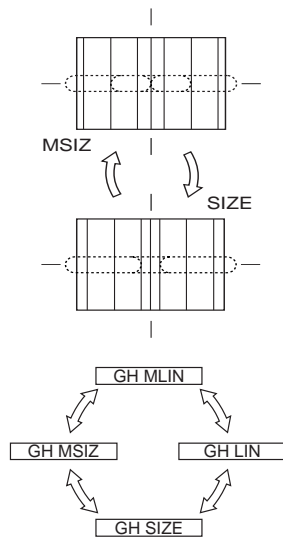

GREEN VERTICAL LINEARITY ADJUSTMENT


1. Adjust GV LIN so that the vertical lines at the top and bottom of the screen are symmetrical.

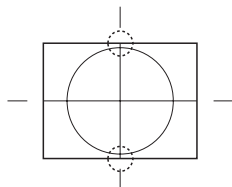

GREEN VERTICAL SIZE ADJUSTMENT


1. Adjust with GV MSIZE so that the sizes for the top and bottom sections of the screen and for both sides of the center section of the screen are equal.
2. Set the vertical size to the prescribed value with GV SIZE.
3. Adjust GV MSIZ and GV SIZE watching the vertical line at the center section of the screen.
4. While tracking, adjust with GV MSIZ and GV SIZE so that the lattice intervals for the vertical line section of the center section of the screen are equal and so that the vertical size is the regulation value.
5. If GV LIN is out of place when the GV MSIZ and GV SIZE adjustment is complete, adjust again while tracking.

- If there is no need to adjust GV SIZE in SUB with just the V SIZE adjustment in MAIN, this can save power.

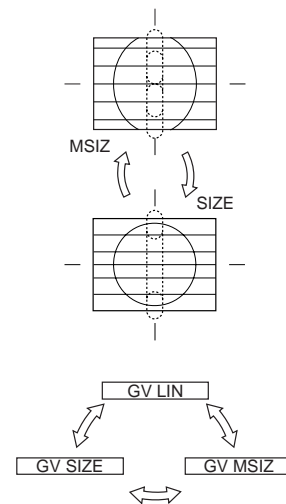


GREEN HORIZONTAL TRAPEZOIDAL DISTORTION ADJUSTMENT

1. Adjust with GH SSKW so that the tilt of the vertical lines at both ends of the screen is symmetrical left and right.
2. Adjust with GH KEY so that there is no tilt in the vertical lines at both ends of the screen.
3. If there is a tilt on either the left or right after the GH KEY adjustment, adjust while tracking.

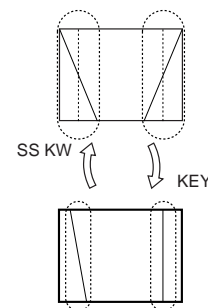


GREEN HORIZONTAL QUATERNARY ADJUSTMENT

1. Correct the quaternary distortion with GH 4PIN.
2. While balancing, correct the quaternary distortion of both end sections of the screen with GH 4SBOW.
3. While tracking, adjust with GH 4PIN and RGH 4SBOW.

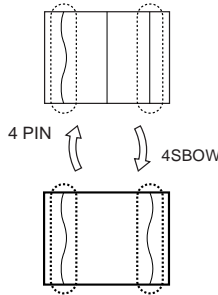

GREEN HORIZONTAL ASYMMETRICAL PIN DISTORTION ADJUSTMENT


1. Adjust with GH MBOW so that the pin asymmetry at both sides of the center section of screen is symmetrical.
2. Adjust with GH SBOW so that the bow at both end sections of the screen is symmetrical left and right.
3. While tracking, adjust with GH MBOW and GH SBOW so that the bow of vertical lines on the entire screen is symmetrical left and right.

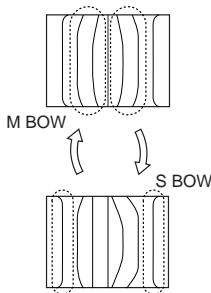

GREEN HORIZONTAL SYMMETRICAL PIN DISTORTION ADJUSTMENT

1. Adjust the pin distortion at both sides of the center section of the screen with GH MPIN.
2. Adjust the pin distortion at both end sections of the screen with GH PIN.
3. While tracking, adjust with GH MPIN and GH PIN so that the PIN of vertical lines on the entire screen have no bowing.
4. If there is asymmetrical pin distortion after the GH MPIN and GH PIN adjustments, adjust with GH MBOW and GH SBOW while tracking.


- With just the PIN AMP adjustment in MAIN, if there is no need to adjust GV PIN in SUB, this can save power.

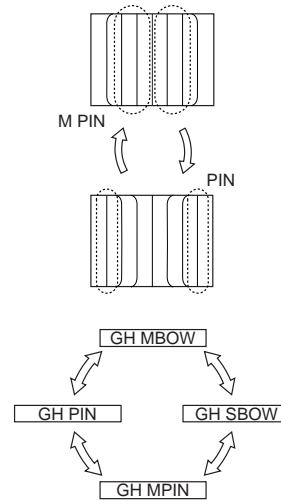



GREEN VERTICAL WAVE (TERTIARY DISTORTION) ADJUSTMENT

1. Take the screen top and bottom horizontal lines with GV WAVE and find the secondary and quaternary waveform.
2. There is KEY distortion after the GV WAVE adjustment, so adjust with RGV WAVE and RGV KEY while tracking.

GV WAVE




GV KEY

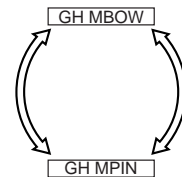

GREEN VERTICAL QUATERNARY DISTORTION ADJUSTMENT

1. Correct the quaternary distortion of the horizontal lines at the top and bottom sections of the screen with GV 4PIN.
- 1) Since there is no 4SBOW for vertical correction, there will be a slight imbalance, but adjust to eliminate the distortion from the horizontal line at either the top or the bottom of the screen.
- 2) In many cases, the horizontal lines at the top and bottom sections of the screen are not straight lines after the adjustment. As long as the secondary distortion is mild enough that it can be corrected with the PIN adjustment, this is OK.


GV 4PIN



GREEN VERTICAL TRAPEZOIDAL DISTORTION ADJUSTMENT

1. Adjust with GV SSKW so that the tilt of the horizontal lines at the top and bottom sections of the screen is symmetrical about the center position horizontal line.
2. Adjust with GV MKEY so that there is no tilt for the line sections at both sides of the horizontal lines at the center section of the stream.
3. Adjust with GV KEY so that there is no tilt for the horizontal lines at the top and bottom sections of the screen.
4. While tracking, adjust with GV MKEY and GV KEY so that there is no tilt for the horizontal lines on the entire screen.
5. If the tilt is unbalanced after the GV MKEY and GV KEY adjustment, adjust again with GV SSKW.


GV SSKW

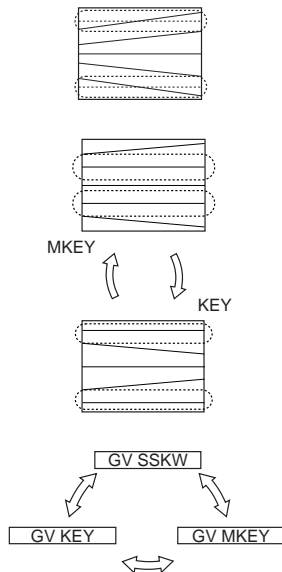

GREEN VERTICAL ASYMMETRICAL PIN DISTORTION (SECONDARY DISTORTION) ADJUSTMENT



1. Correct the asymmetrical pin distortion at the top and bottom sections of the screen with RGV SBOW.

GV SBOW



GREEN VERTICAL ASYMMETRICAL PIN DISTORTION ADJUSTMENT

1. Adjust the pin distortion for both side sections and the center of the screen with GV MPIN.
2. Adjust with GV PIN so that the horizontal lines at the top and bottom sections of the screen are straight lines.
3. Adjust with GV MPIN and GV PIN so that there is no curve in the horizontal lines on the entire screen.
4. After the adjustments in Items 1-3, adjust the tracking with GV SBOW, GV MPIN, and GV PIN.

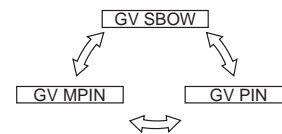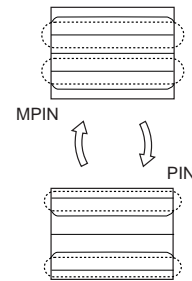

**GREEN AND RED REGISTRATION ADJUSTMENT
(RRH, RRV)**

1. Receive a cross-hatch signal.
2. Adjust so that the red lines lay on the green lines.
Adjust with the same procedure as the GREEN SUB adjustment.

- Notes:
1. The main correction is not carried out during red registration adjustment.
 2. Beware. The green adjustment items can be changed by mistake.
 3. Unlike for green, adjust within the range -127 ~ +128.

**GREEN AND BLUE REGISTRATION ADJUSTMENT
(RBH, RBV)**

1. Receive a cross-hatch signal.
2. Adjust so that the blue and green lines are on top of each other.

- Notes :
1. The main correction is not carried out during RED registration adjustment.
 2. Beware. The GREEN and RED adjustment items can be changed by mistake.

3-11. AGC ADJUSTMENT

1. Receive an off-air signal.
2. Adjust the AGC VR (TU 1001) so that there is no snow noise and cross-modulation.

3-12. WHITE BALANCE ADJUSTMENT

1. Receive the monoscope pattern signal and adjust the picture quality with the menu.
2. Adjust service mode SBRT so that the signal 30 IRE section barely glows.
3. Receive the all-white pattern signal.
4. Adjust the white balance with service mode GCUT and BCUT.
5. Adjust service mode SBRT so that the signal 100 IRE section barely glows.
6. Adjust the white balance with service mode GAMP and BAMP.
7. Repeatedly adjust the white balance for the minimum and maximum picture settings.

**3-13. P IN P WHITE BALANCE ADJUSTMENT
(MU2D, MV2D, SU2D, SV2D)**


1. Receive the white pattern signal on both picture.
2. PICTURE : minimum
COLOR : center
BRIGHTNESS : center
TRINTONE : medium
3. Set to P & P () mode, and to service mode.
4. Adjust white balance level of right picture with “ MU2D ” and “ MV2D ”.
5. Adjust white balance level of left picture with “ SU2D ” and “ SV2D ”.
 - Make this adjustment after adjusting the MAIN PICTURE white balance level.



SECTION 4

SAFETY RELATED ADJUSTMENTS

[G BOARD]

4-1. HV REGULATION CIRCUIT CHECK AND ADJUSTMENT

When replacing the following components marked with  on the schematic diagram always check HV regulation, and if necessary re-adjust.

- : C514
- : C514, C515, C516
IC651
T502, T503, T504 (FBT)
D.Y

OPERATION CHECK

1. Connect a HV static voltmeter to the unconnected plug of the high-voltage block. **(Fig.4-1)**
2. Power on the set.
3. Receive the dot signal. (PICTURE and BRIGHTNESS to minimum)
4. Check that the HV static voltmeter is reading $31.00 \pm 1.0kVdc$.

HV Regulation adjustment

1. Connect a HV static voltmeter to the unconnected plug of the high-voltage block.
2. Power on the set.
3. Receive the dot signal. (PICTURE and BRIGHTNESS to minimum)
4. If anode voltage is 32kV or higher, replace C514 of 390PF/2kV with that of 680PF/2kV, and check if the voltage is within the standard range.
5. If anode voltage is 30kV or lower, replace C514 of 390PF/2kV with that of 100PF/2kV, and check if the voltage is within the standard range. **(Fig.4-2)**

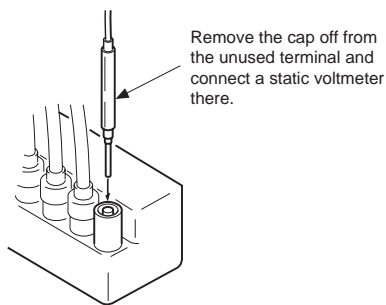


Fig. 4-1

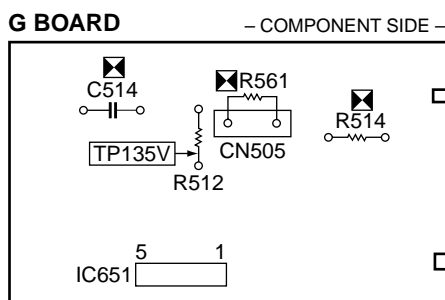





Fig. 4-2

4-2. HV HOLD DOWN CIRCUIT OPERATION CHECK AND ADJUSTMENT

When replacing the following components marked with  on the schematic diagram always check hold-down voltage and if necessary re-adjust.

- : R514, R561
- : C507, C513
D501, D504, D507
IC301, IC501, IC651
R502, R514, R516, R517, R539, R560, R561
T502, T503, T504 (FBT)
D.Y

OPERATION CHECK

1. Remove CN651 connector.
2. Short-circuit across TP-PROT (R692) and ground.
3. Connect a HV static voltmeter to the unconnected plug of the high-voltage block.
4. Connect a 220k variable resistor, across pin ③ and pin ⑤ of IC651 set to maximum value.
5. Power on the set.
6. Receive the dot signal. (PICTURE and BRIGHTNESS to minimum)
7. Gradually lower the value of the variable resistor and check that the hold-down circuit operates at a static voltmeter reading of $33.5 \pm 1.0kVdc$ when the raster disappears.

HV HOLD-DOWN ADJUSTMENT

1. Repeat steps ① ~ ⑦ as above.
2. If hold down voltage is 34.5kV or higher, remove R514, mount a resistor (390kΩ, 1/4W : RN) onto R561 instead, and check again if the hold-down voltage is within the standard range.
3. If hold down voltage is 32.5kV or lower, mount a resistor (220kΩ, 1/4W : RN) onto R561 and check again if the hold-down voltage is within the standard range. **(Fig.4-2)**

NOTE : Please finish the adjustment as soon as possible


4-3. +B MAX VOLTAGE CONFIRMATION

The following adjustments should always be performed when replacing IC651.




1. Supply 130VAC to with variable autotransformer.
2. Input a dot signal.
3. Set the PICTURE control and the BRIGHTNESS controls to minimum.
4. Confirm the voltage of G BOARD TP135V is less than 137.0Vdc.
5. If step 4 is not satisfied, replace IC651 and repeat above steps. **(Fig.4-2)**

4-4. +B OVP CONFIRMATION


1. Remove CN651 connector.
2. Connect a voltmeter to TP135V, and TP (PROT) and ground.
3. Connect a 220k Ω variable resistor, across pin ③ and pin ⑤ of IC651 set to maximum value.
4. Supply 120VAC to variable autotransformer.
5. Set PICTURE and the BRIGHTNESS controls to minimum.
6. Gradually turn the 220k Ω variable resistor, and check if OVP works properly when the voltage of TP135V is between 139.0 ~ 151.5V. **(Fig.4-2)**

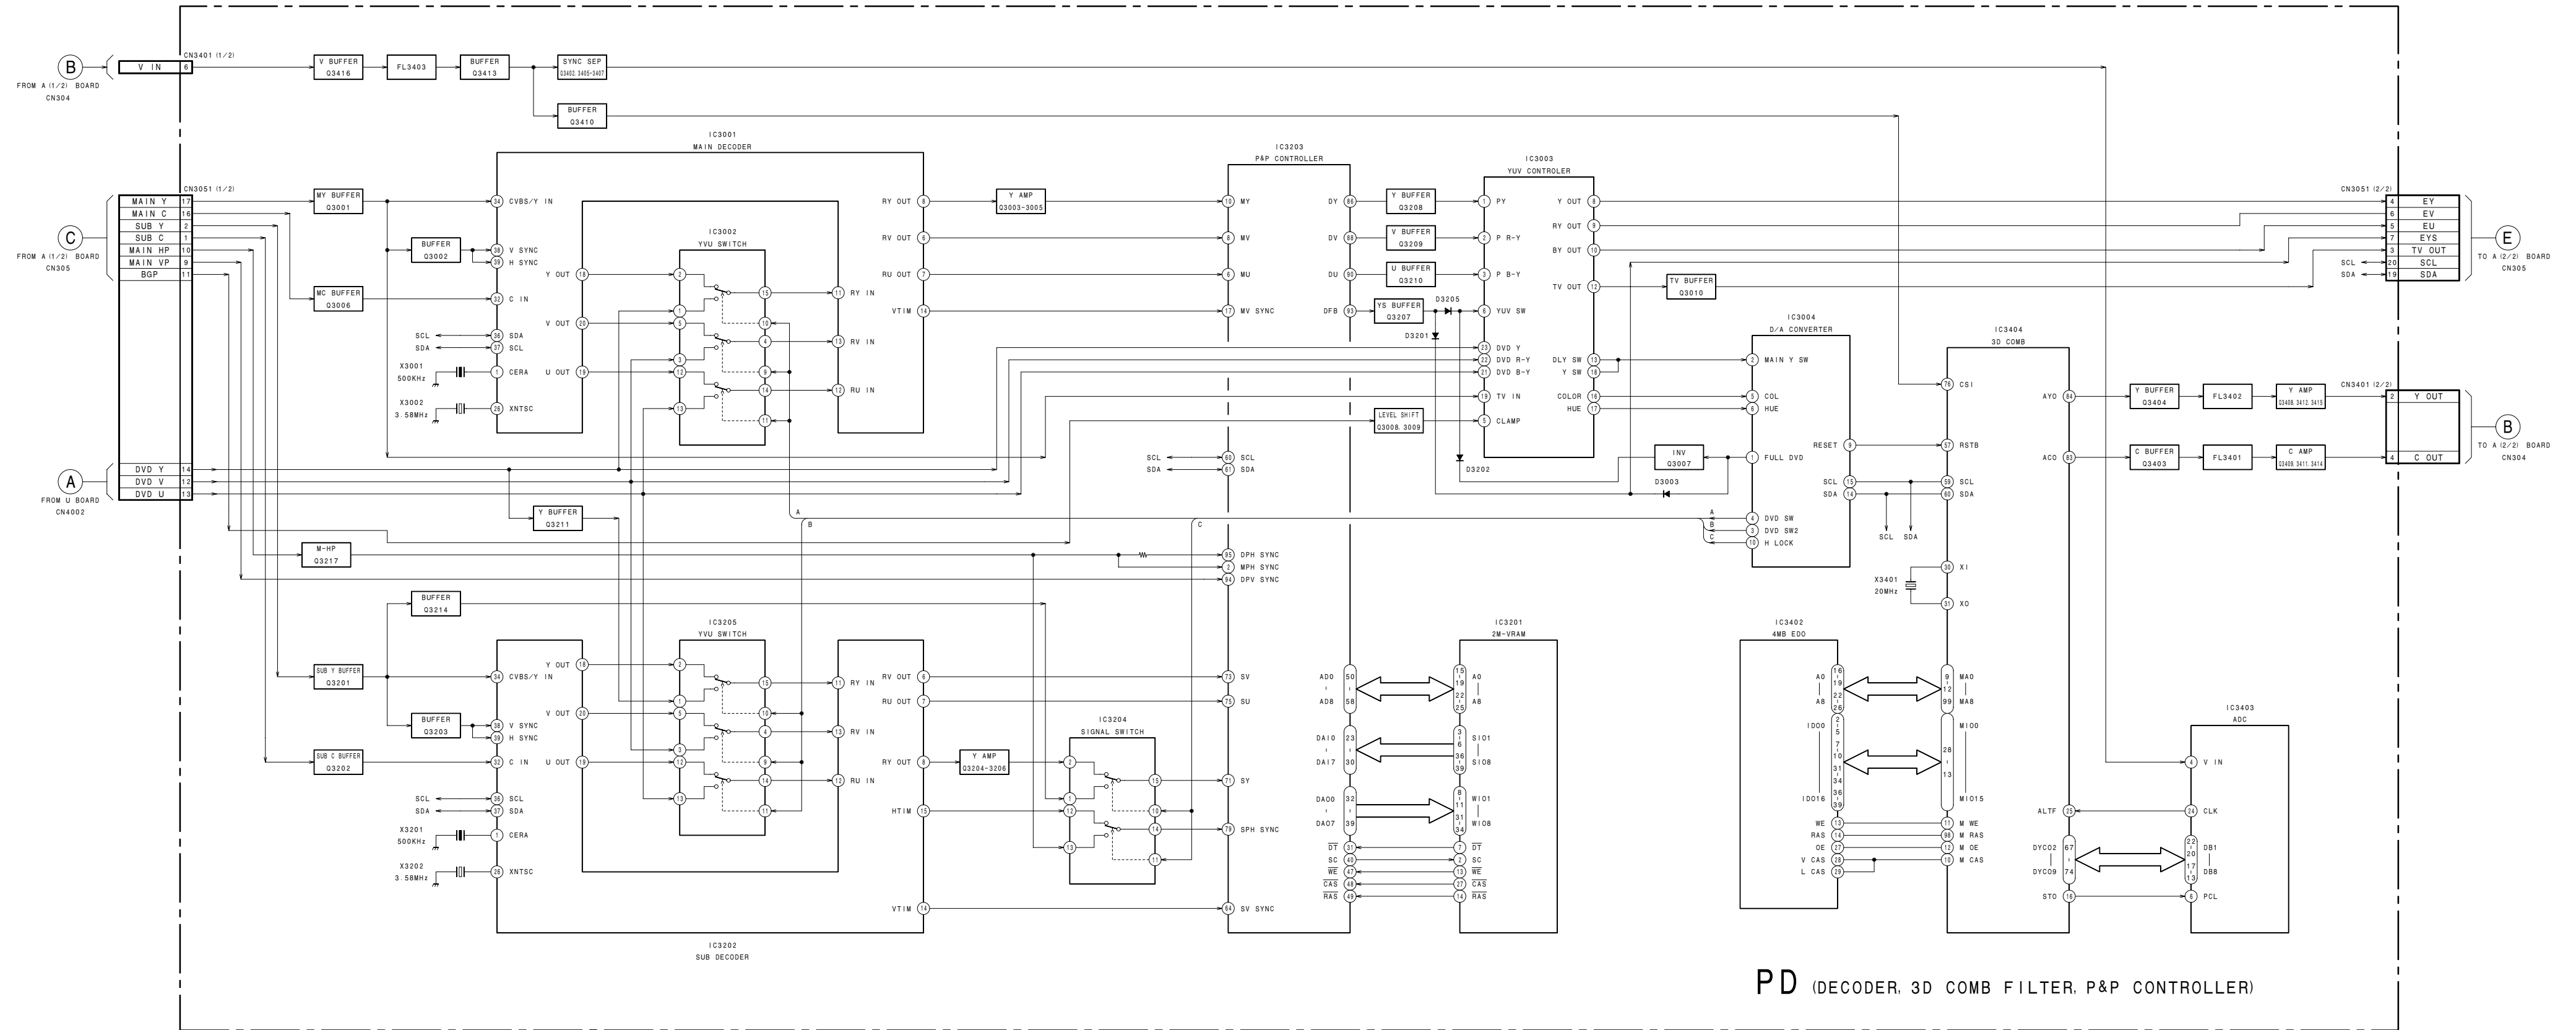


PD (DECODER, 3D COMB FILTER, P&P CONTROLLER)

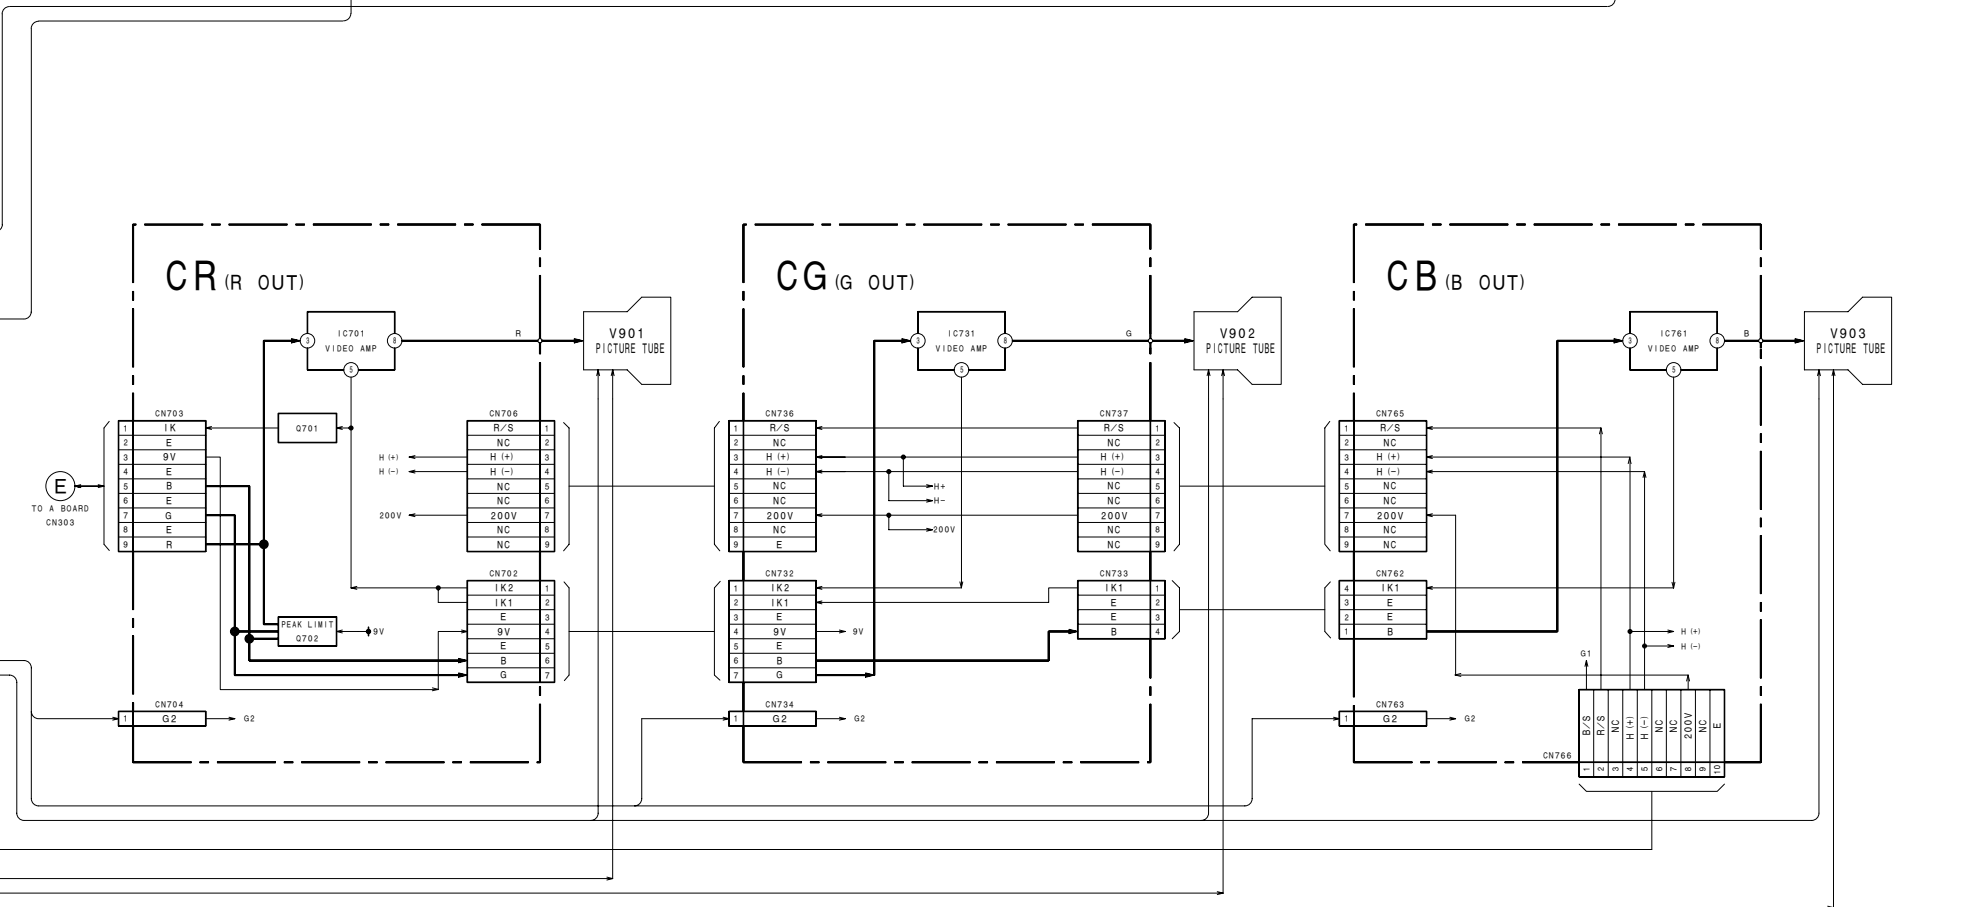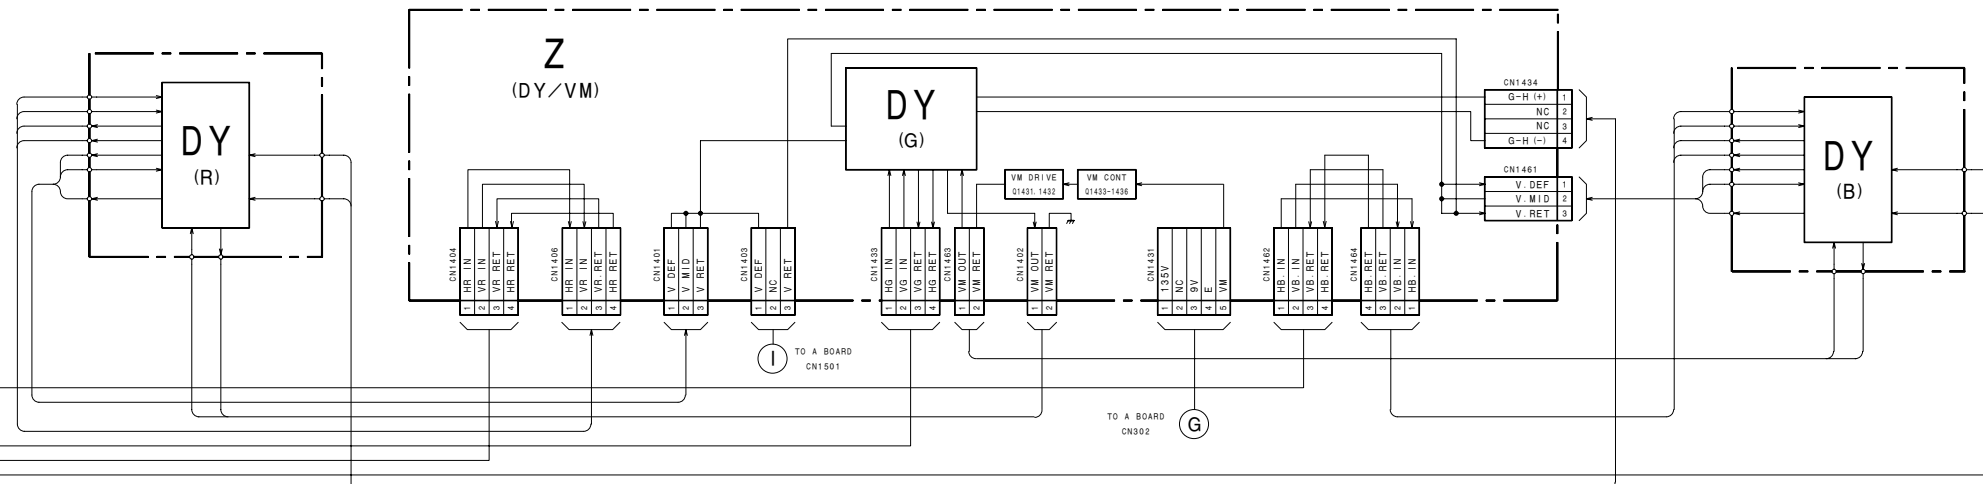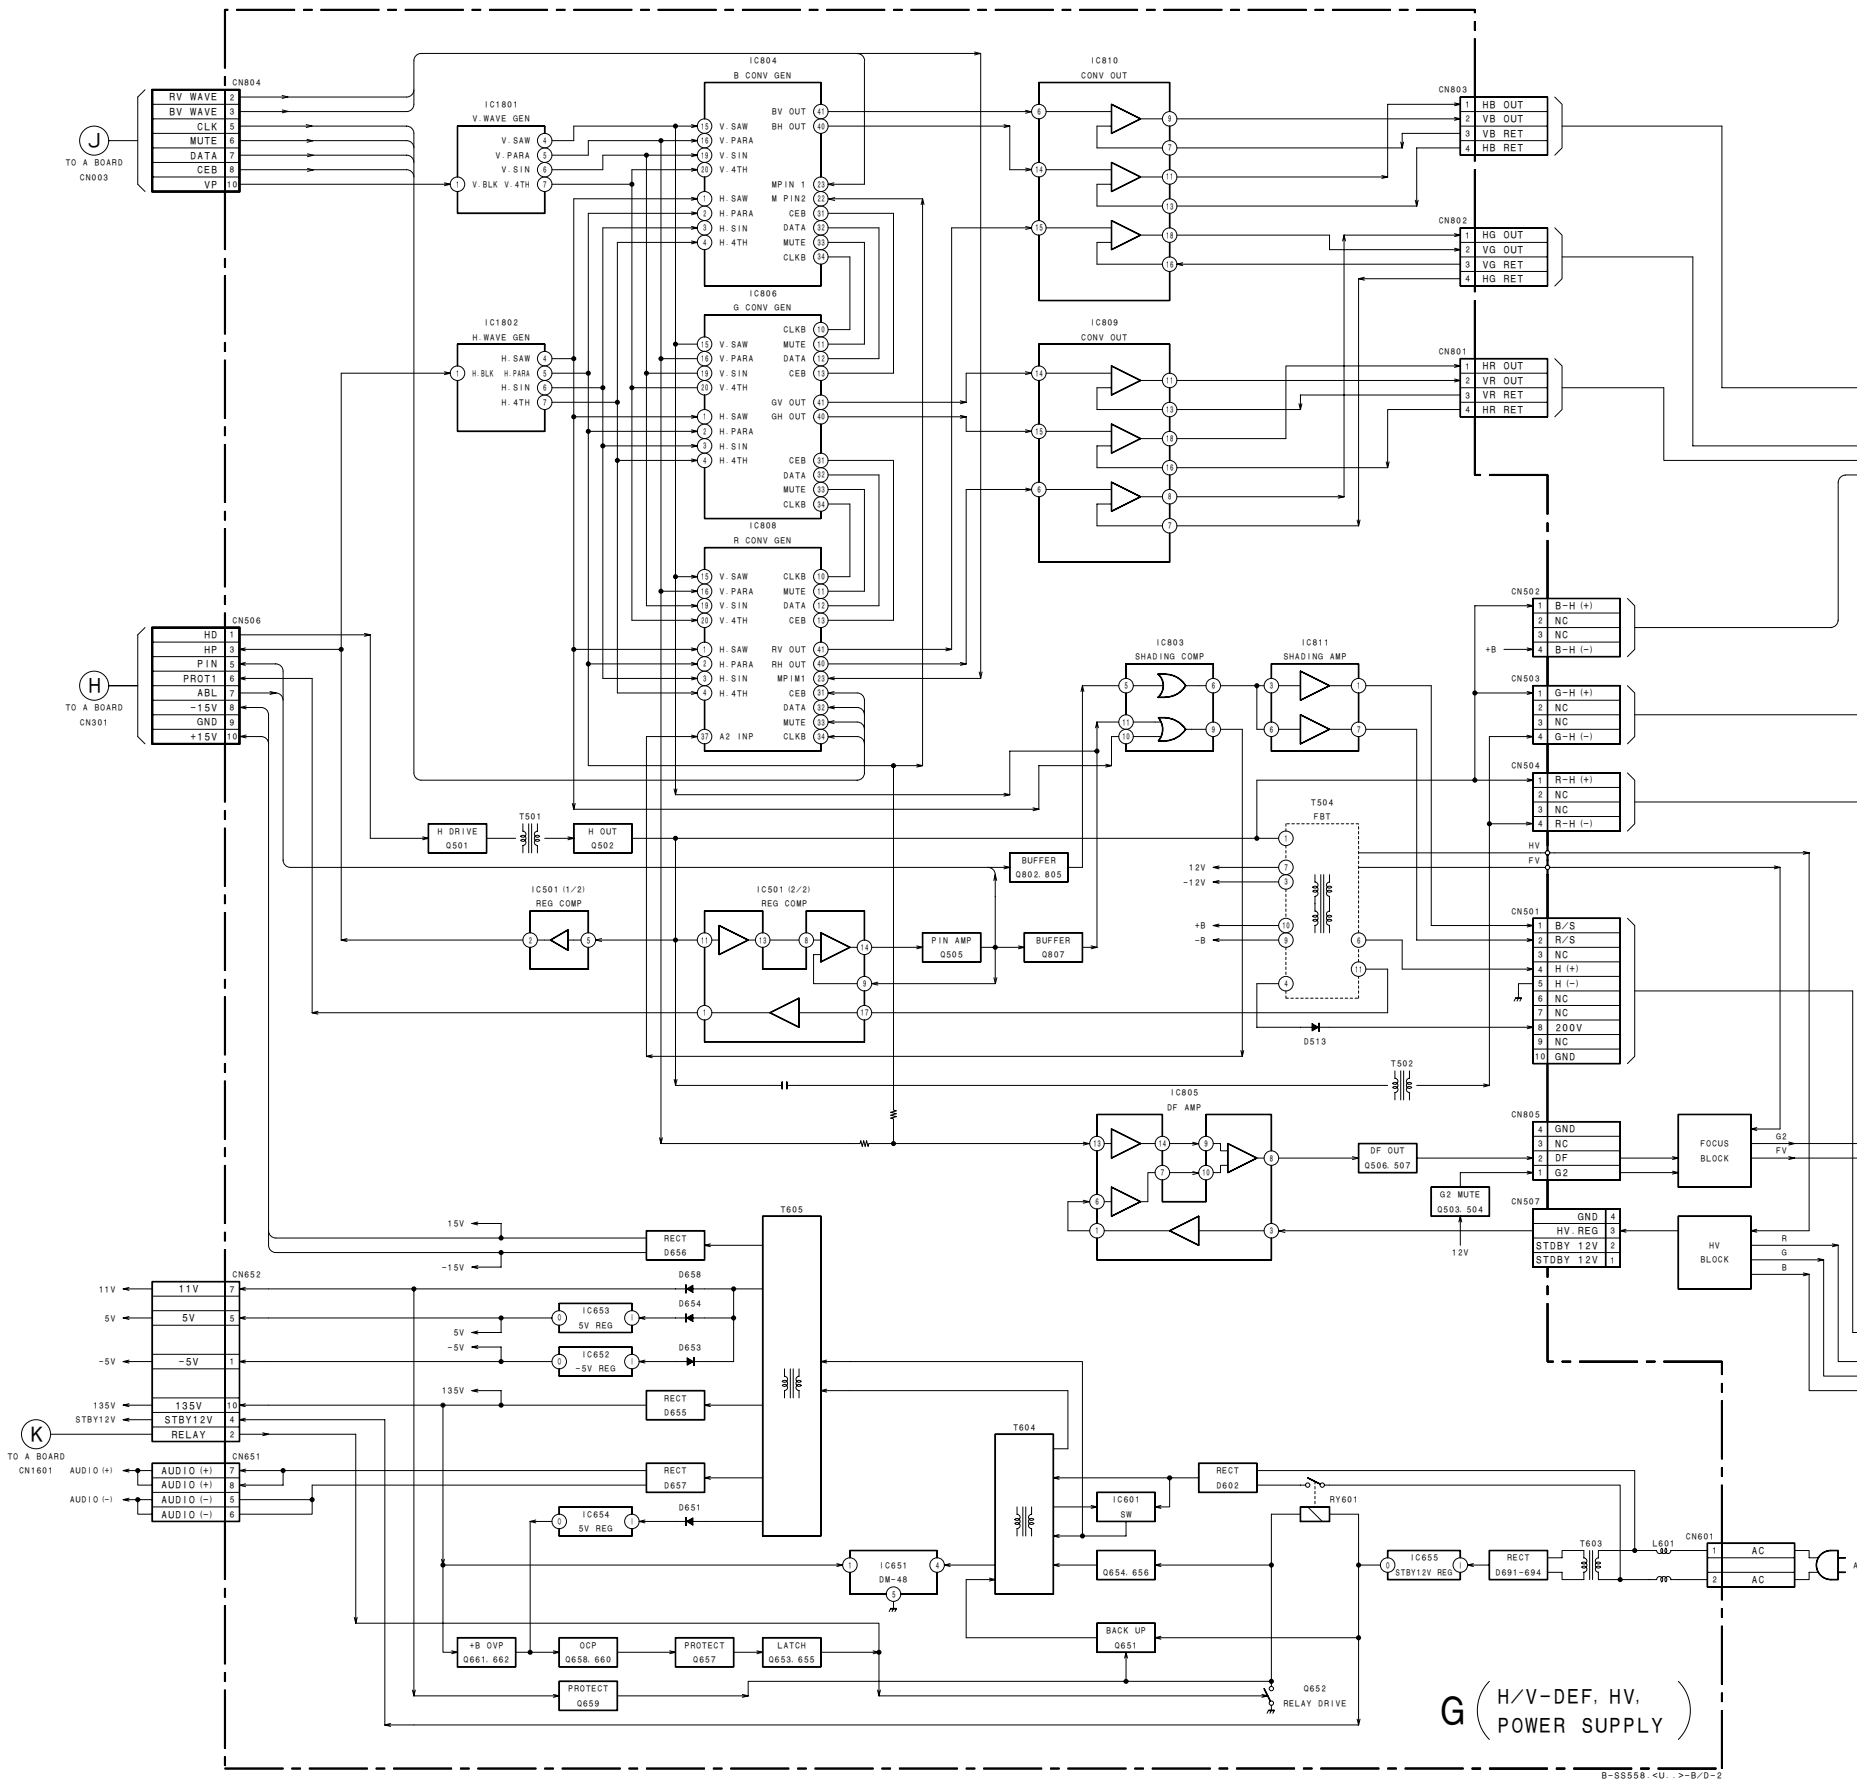

G (H/V-DEF, HV, POWER SUPPLY)

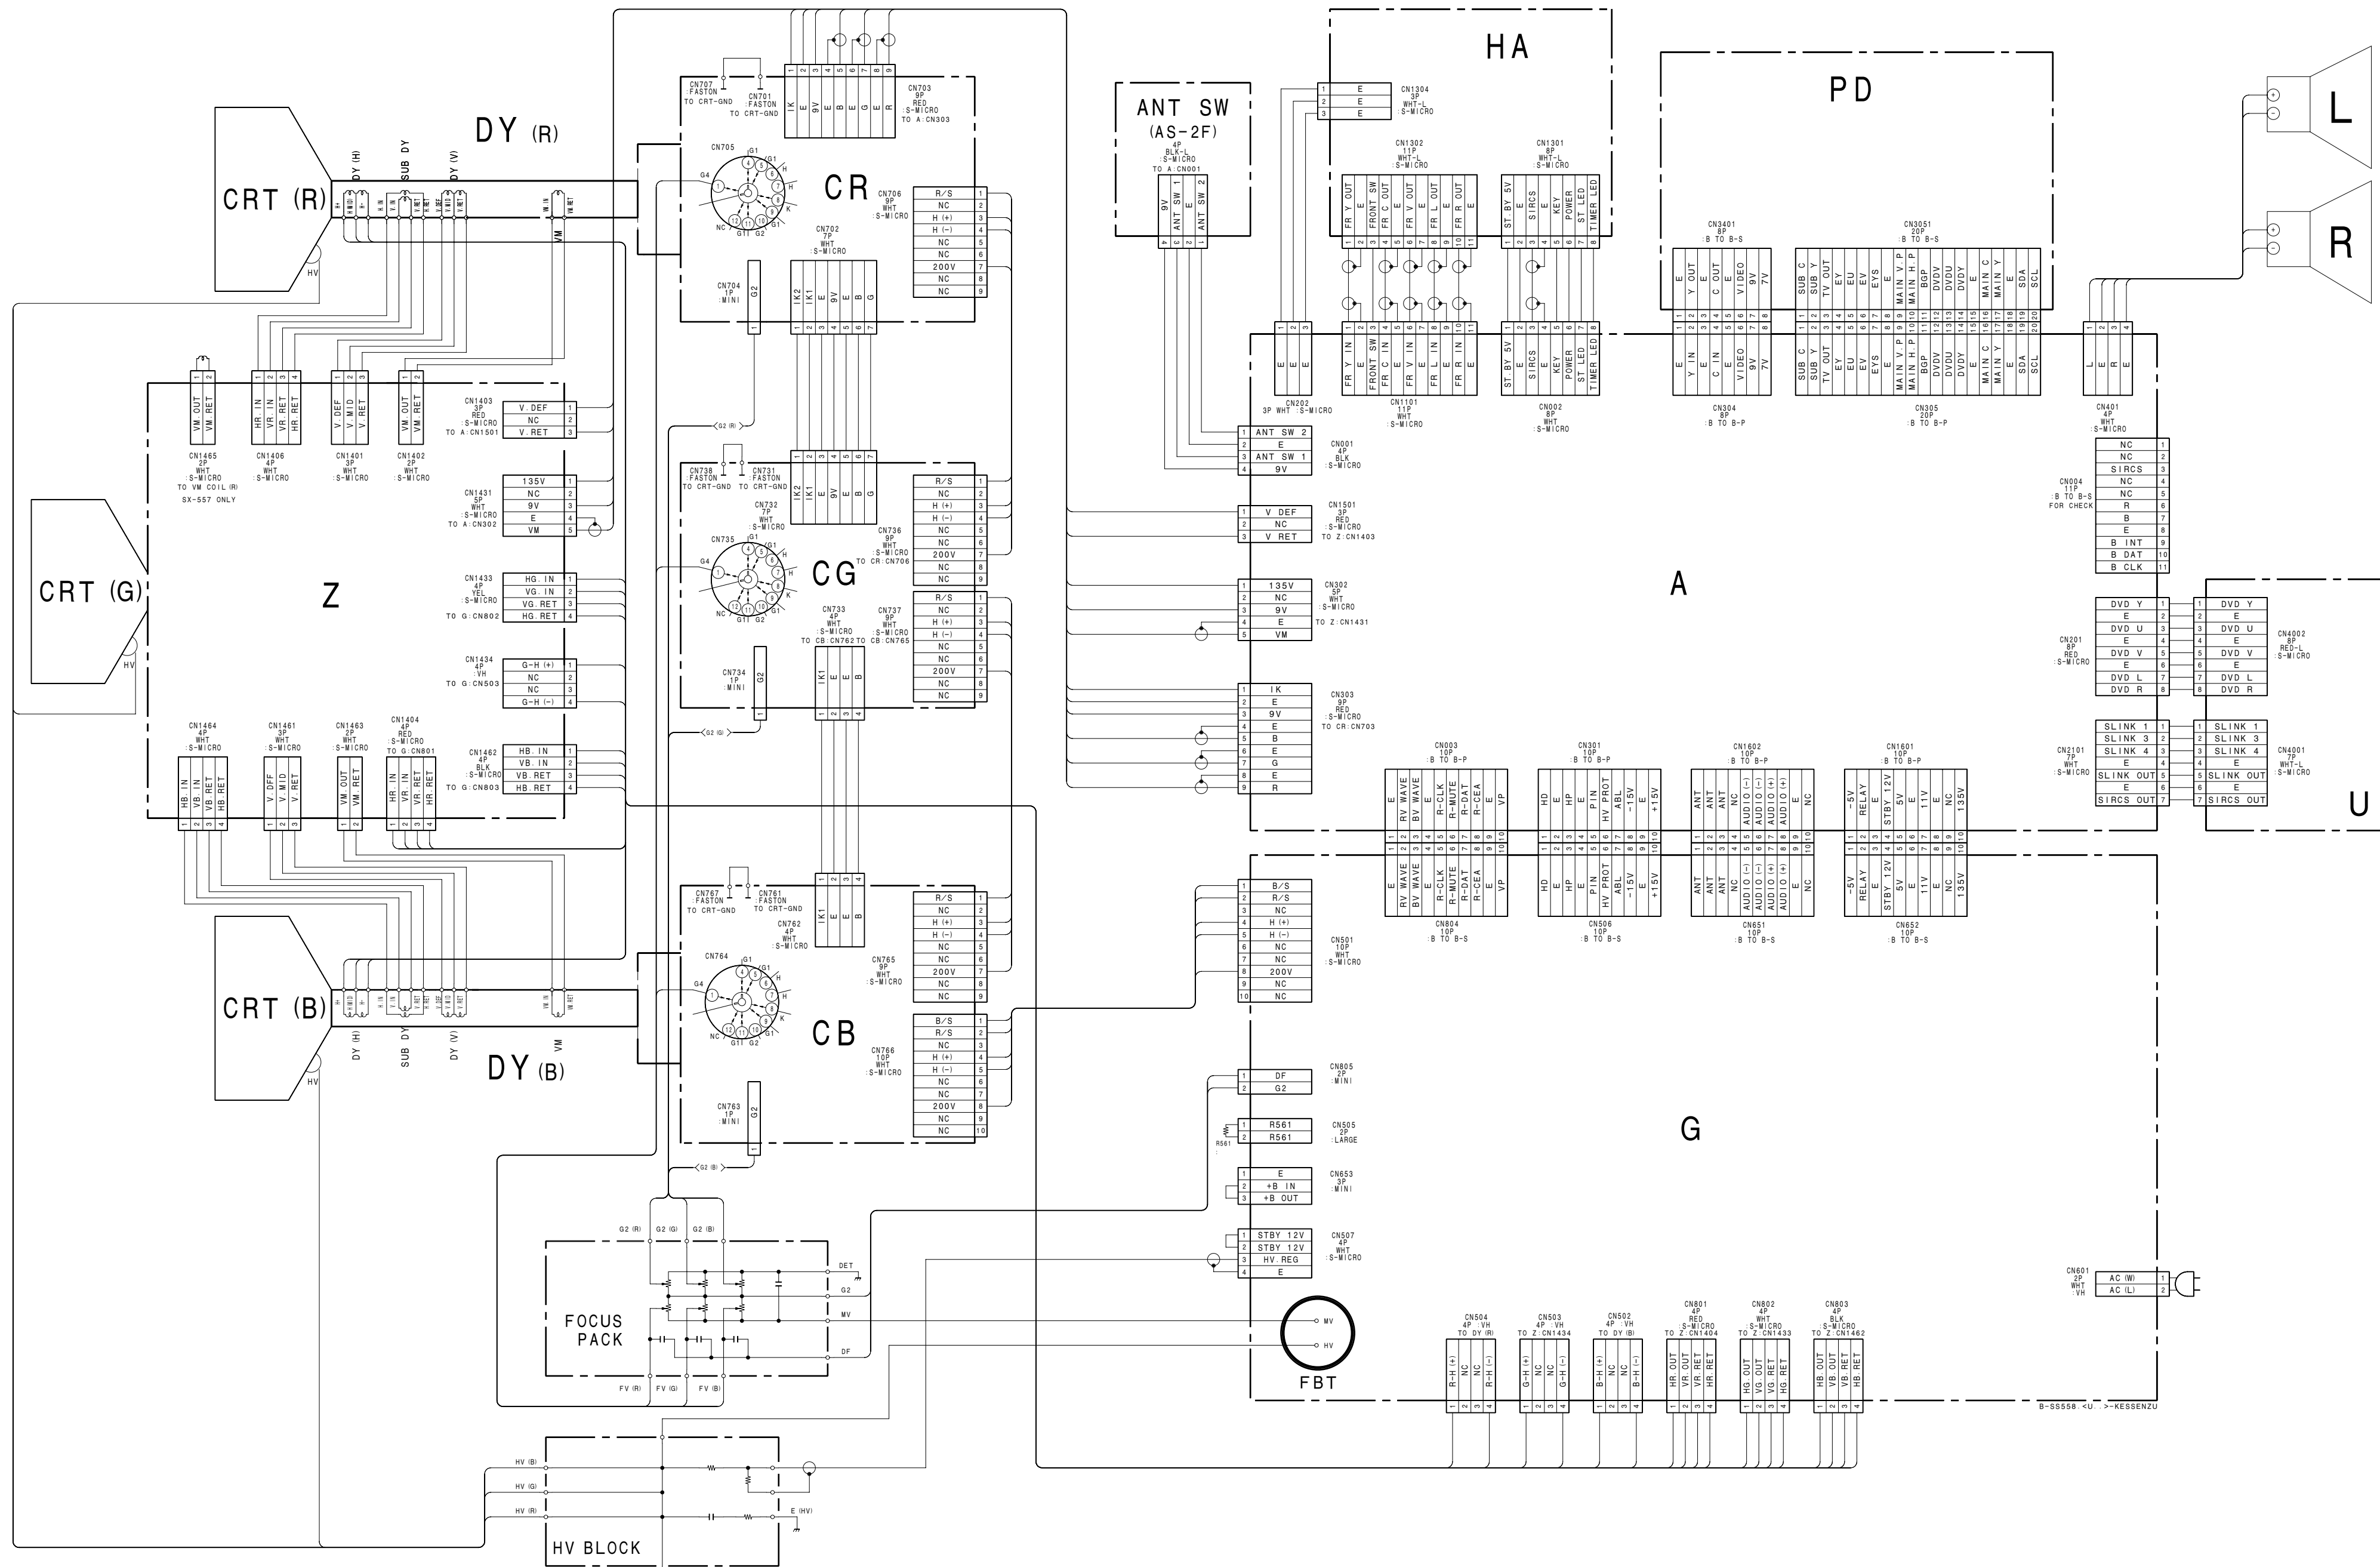

6-3. CIRCUIT BOARDS LOCATION

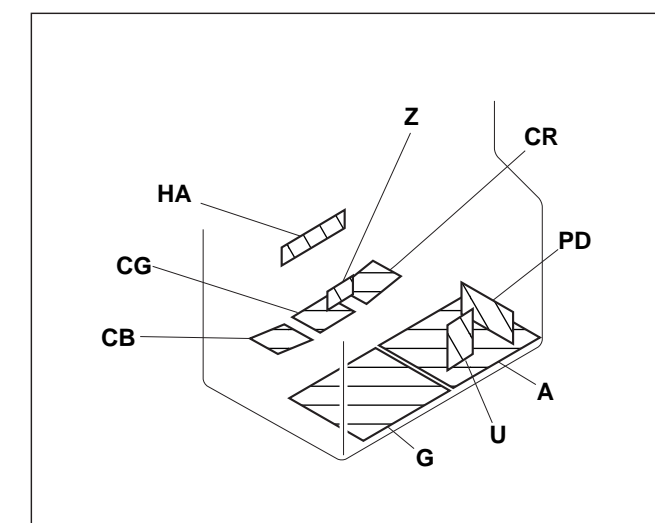

6-4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

- Note:
- Capacitors without voltage indication are all 50V.
 - All resistors are in ohms.
 - AC=1000Ω, MΩ=1000kΩ
 - Indication of resistance, which does not have one for rating electrical power, is as follows.
 - Pitch: 5mm
 - Rating electrical power: 1/4W
 - nonflammable resistor.
 - fusible resistor.
 - internal component.
 - panel designation and adjustment for repair.
 - All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
 - earth-chassis.
 - The components identified by in this basic schematic diagram have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation.
 - Should replacement be required, replace only with the value originally used.
 - When replacing components identified by , make the necessary adjustments indicated. If results do not meet the specified value, change the component identified by and repeat the adjustment until the specified value is achieved. (Refer to R514, R561 and C514 adjustment on Page 47-48.)
 - When replacing the part in below table, be sure to perform the related adjustment.
- | Part replaced () | Adjustment () |
|---|---------------------------|
| C514, C515, C516, IC651, T502, T503, T504, DY | HV Reagurator (C514) |
| C507, C513, D501, D504, D507, IC301, IC501, IC651, R502, R514, R516, R517, R539, R560, R561, T502, T503, T504, DY | HV HOLD-DOWN (R514, R561) |
- As to the voltage value shown by the semiconductors on the Schematic Diagram, see the another list
 - Readings are taken with a color-bar signal input.
 - Readings are taken with a 10MΩ digital multimeter.
 - Voltages are dc with respect to ground unless otherwise noted.
 - Voltage variations may be noted due to normal production tolerances.
 - All voltages are in V.
 - ∞: Measurement impossibility.
 - Circled numbers are waveform references.
 - : B+ bus.
 - - -: B- bus.
 - : signal path (RF)

- Reference information
- RESISTOR : RN METAL FILM
 : RC SOLID
 : FPRD NONFLAMMABLE CARBON
 : FUSE NONFLAMMABLE FUSE
 : RW NONFLAMMABLE WIREWOUND
 : RS NONFLAMMABLE METAL OXIDE
 : RB NONFLAMMABLE CEMENT
 : X ADJUSTMENT RESISTOR
- COIL : LF-8L MICRO INDUCTOR
- CAPACITOR : TA TANTALUM
 : PS STYROL
 : PP POLYPROPYLENE
 : PT MYLAR
 : MPS METALIZED POLYESTER
 : MPP METALIZED POLYPROPYLENE
 : ALB BIPOLAR
 : ALT HIGH TEMPERATURE
 : ALR HIGH RIPPLE

Note: The symbol display is on the component side.

The components identified by shading and mark are critical for safety. Replace only with part number specified.

The symbol indicate fast operating fuse. Replace only with fuse of same rating as made.

Note: Les composants identifiés par un trame et une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Le symbole indique une fusible à action rapide. Doit être remplacé par une fusible de même valeur, comme maque.

Terminal name of semiconductors in silk screen printed circuit (※)

Device	Printed Symbol	Terminal name	Circuit
① Transistor		Collector Base Emitter	
② Transistor		Collector Base Emitter	
③ Diode		Cathode Anode	
④ Diode		Cathode Anode (NC)	
⑤ Diode		Cathode Anode (NC)	
⑥ Diode		Common Anode Cathode	
⑦ Diode		Common Anode Cathode	
⑧ Diode		Common Anode Anode	
⑨ Diode		Common Anode Anode	
⑩ Diode		Common Cathode Cathode	
⑪ Diode		Common Cathode Cathode	
⑫ Diode		Anode Cathode Cathode Anode	
⑬ Transistor (FET)		Drain Gate	
⑭ Transistor (FET)		Drain Source Gate	
⑮ Transistor (FET)		Source Drain Gate	

— Discrete semiconductor


(Chip semiconductors that are not actually used are included.)

A(1/2) BOARD IC VOLTAGE LIST

REF.	Pin NO.	VOL.	REF.	Pin NO.	VOL.	REF.	Pin NO.	VOL.	REF.	Pin NO.	VOL.
IC001	0	4.1	IC001	0	4.8	IC401	0	4.4	IC401	0	4.4
IC001	0	4.9	IC001	0	3.6	IC401	0	5.1	IC401	0	12.1
IC001	0	4.7	IC001	0	5.0	IC401	0	12.1	IC401	0	12.1
IC001	0	4.3	IC001	0	6.7	IC401	0	12.1	IC401	0	12.1
IC001	0	0	IC001	0	0.9	IC401	0	12.1	IC401	0	12.1
IC001	0	2.4	IC001	0	6.5	IC401	0	12.1	IC401	0	12.1
IC001	0	0	IC001	0	0.8	IC401	0	12.1	IC401	0	12.1
IC001	0	4.9	IC001	0	2.1	IC401	0	12.1	IC401	0	12.1
IC001	0	4.3	IC001	0	4.7	IC401	0	24.3	IC401	0	12.1
IC001	0	GND	IC001	0	4.6	IC401	0	12.1	IC401	0	12.1
IC001	0	GND	IC001	0	1.5	IC401	0	12.1	IC401	0	12.1
IC001	0	5.0	IC001	0	4.4	IC401	0	12.1	IC401	0	12.1
IC001	0	GND	IC001	0	4.0	IC401	0	12.1	IC401	0	12.1
IC001	0	2.5	IC001	0	4.8	IC401	0	12.1	IC401	0	12.1
IC001	0	GND	IC001	0	4.3	IC401	0	12.1	IC401	0	12.1
IC001	0	GND	IC001	0	8.9	IC401	0	24.3	IC401	0	12.1
IC001	0	5.0	IC001	0	4.6	IC401	0	1.6	IC401	0	1.6
IC001	0	2.1	IC001	0	4.6	IC401	0	8.7	IC401	0	0
IC001	0	2.2	IC001	0	4.6	IC401	0	4.7	IC401	0	3.4
IC001	0	GND	IC001	0	3.0	IC401	0	0	IC401	0	0
IC001	0	GND	IC001	0	4.3	IC401	0	12.1	IC401	0	12.1
IC001	0	GND	IC001	0	8.9	IC401	0	4.2	IC401	0	24.3
IC001	0	4.7	IC001	0	4.6	IC401	0	4.6	IC401	0	4.6
IC001	0	GND	IC001	0	8.7	IC401	0	0	IC401	0	0
IC001	0	2.2	IC001	0	3.4	IC401	0	4.0	IC401	0	4.0
IC001	0	GND	IC001	0	4.3	IC401	0	3.0	IC401	0	12.1
IC001	0	GND	IC001	0	4.3	IC401	0	3.8	IC401	0	12.1
IC001	0	GND	IC001	0	4.2	IC401	0	1.6	IC401	0	1.6
IC001	0	1.7	IC001	0	2.3	IC401	0	15.3	IC401	0	15.3
IC001	0	2.6	IC001	0	3.6	IC401	0	3.6	IC401	0	3.6
IC001	0	2.3	IC001	0	4.3	IC401	0	32.2	IC401	0	32.2
IC001	0	5.0	IC001	0	GND	IC401	0	GND	IC401	0	GND
IC001	0	1.8	IC001	0	2.7	IC401	0	2.8	IC401	0	2.8
IC001	0	GND	IC001	0	4.4	IC401	0	3.0	IC401	0	14.7
IC001	0	GND	IC001	0	5.0	IC401	0	5.7	IC401	0	8.9
IC001	0	GND	IC001	0	4.7	IC401	0	0.3	IC401	0	GND
IC001	0	GND	IC001	0	4.7	IC401	0	0	IC401	0	5.0
IC001	0	GND	IC001	0	4.9	IC401	0	1.2	IC401	0	1.2
IC001	0	GND	IC001	0	4.2	IC401	0	14.8	IC401	0	14.8
IC001	0	GND	IC001	0	4.3	IC401	0	0.4	IC401	0	0.4
IC001	0	GND	IC001	0	4.4	IC401	0	1.3	IC401	0	1.3
IC001	0	GND	IC001	0	4.5	IC401	0	-0.3	IC401	0	-0.3
IC001	0	GND	IC001	0	4.4	IC401	0	0	IC401	0	0
IC001	0	2.7	IC001	0	5.0	IC401	0	4.4	IC401	0	4.4
IC001	0	GND	IC001	0	4.7	IC401	0	5.8	IC401	0	5.8
IC001	0	GND	IC001	0	3.9	IC401	0	GND	IC401	0	GND
IC001	0	4.9	IC001	0	4.4	IC401	0	10.5	IC401	0	10.5
IC001	0	GND	IC001	0	4.4	IC401	0	0	IC401	0	0
IC001	0	GND	IC001	0	4.4	IC401	0	4.6	IC401	0	4.6
IC001	0	GND	IC001	0	4.4	IC401	0	0	IC401	0	0
IC001	0	4.7	IC001	0	4.8	IC401	0	-0.3	IC401	0	-0.3
IC001	0	4.7	IC001	0	4.8	IC401	0	4.9	IC401	0	4.9
IC001	0	GND	IC001	0	4.8	IC401	0	5.8	IC401	0	5.8
IC001	0	GND	IC001	0	3.9	IC401	0	GND	IC401	0	GND
IC001	0	GND	IC001	0	3.9	IC401	0	10.5	IC401	0	10.5
IC001	0	GND	IC001	0	0.4	IC401	0	0.8	IC401	0	0.8
IC001	0	4.6	IC001	0	3.9	IC401	0	8.9	IC401	0	8.9
IC001	0	4.5	IC001	0	3.9	IC401	0	10.5	IC401	0	10.5
IC001	0	4.5	IC001	0	4.4	IC401	0	0	IC401	0	0
IC001	0	4.7	IC001	0	4.8	IC401	0	11.9	IC401	0	11.9
IC001	0	4.7	IC001	0	4.8	IC401	0	4.8	IC401	0	4.8
IC001	0	GND	IC001	0	3.9	IC401	0	GND	IC401	0	GND
IC001	0	GND	IC001	0	3.9	IC401	0	5.0	IC401	0	5.0
IC001	0	GND	IC001	0	6.4	IC401	0	10.5	IC401	0	10.5
IC001	0	4.0	IC001	0	3.9	IC401	0	4.4	IC401	0	4.4
IC001	0	GND	IC001	0	6.1	IC401	0	8.9	IC401	0	8.9
IC001	0	GND	IC001	0	4.3	IC401	0	10.5	IC401	0	10.5
IC001	0	GND	IC001	0	4.3	IC401	0	4.4	IC401	0	4.4

*All voltage are in V.
*Pin number which are not described are not used.


A(1/2) BOARD WAVEFORMS

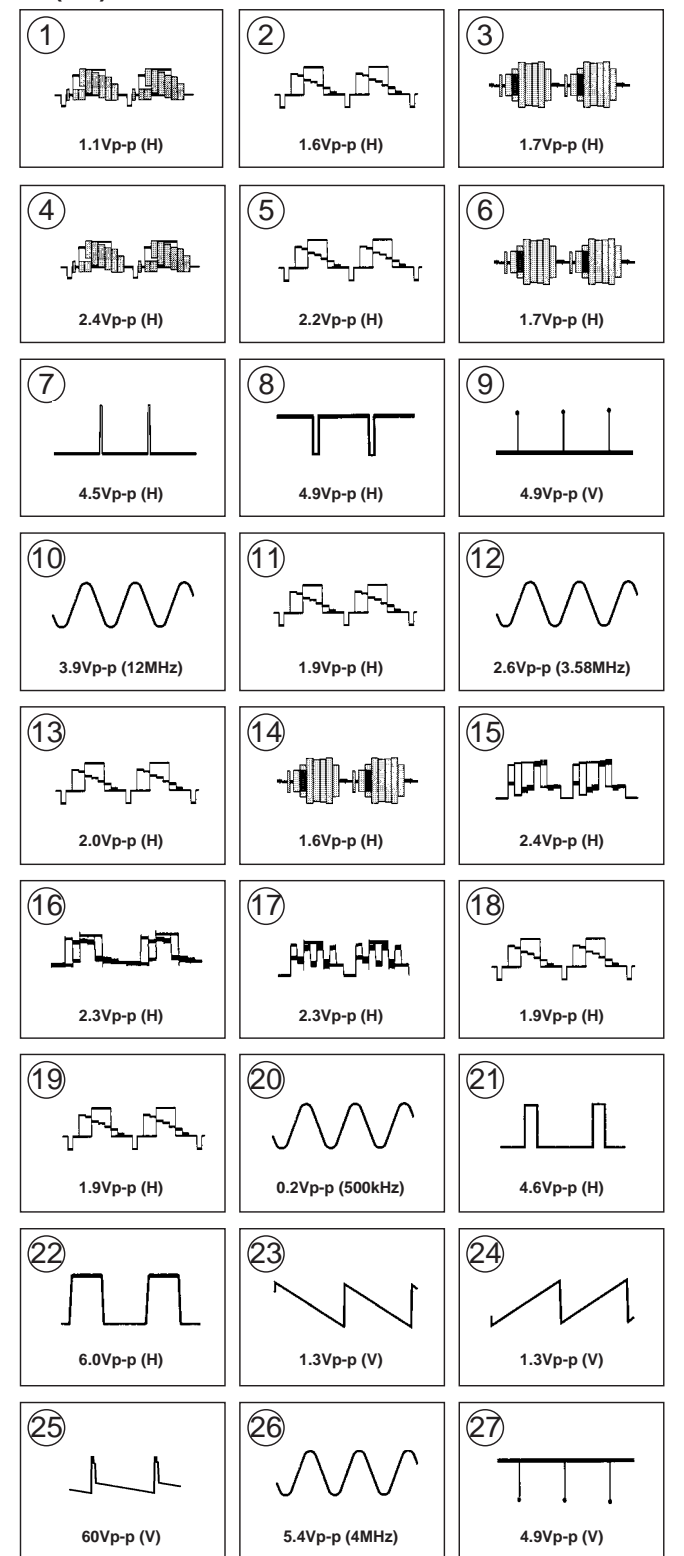

A(1/2) BOARD TRANSISTOR VOLTAGE LIST


REF.	VOL.	REF.	VOL.	REF.	VOL.
Q001	B 0	Q208	B 0	Q304	B 3.5
Q001	E GND	Q208	E GND	Q304	E 2.9
Q001	C 4.8	Q208	C 0	Q304	C 6.6
Q002	B 0	Q209	B 0	Q305	B 6.6
Q002	E 2.0	Q209	E GND	Q305	E 5.9
Q002	C GND	Q209	C 0	Q305	C 8.2
Q003	B 3.8	Q210	B 2.8	Q306	B 1.0
Q003	E 3.8	Q210	E 2.1	Q306	E 1.7
Q003	C GND	Q210	C 8.2	Q306	C GND
Q004	B 5.4	Q211	B 2.8	Q307	B 5.0
Q004	E 4.9	Q211	E 2.2	Q307	E 4.4
Q004	C 1.0	Q211	C 8.2	Q307	C 8.9
Q005	B 4.9	Q212	B 2.8	Q308	B 4.0
Q005	E 4.9	Q212	E 2.2	Q308	E 4.6
Q005	C 0.7	Q212	C GND	Q308	C GND
Q006	B 8.8	Q213	B 8.2	Q311	B 3.9
Q006	E 8.9	Q213	E 8.9	Q311	E 5.2
Q006	C 0	Q213	C 3.9	Q311	C 8.9
Q007	B 0.1	Q214	B 8.2	Q312	B 5.7
Q007	E GND	Q214	E 8.9	Q312	E 5.2
Q007	C 4.8	Q214	C 3.9	Q312	C 8.9
Q008	B 0	Q215	B 0	Q313	B 5.3
Q008	E GND	Q215	E 0	Q313	E 4.8
Q008	C 4.3	Q215	C 8.8	Q313	C 7.5
Q009	B 0	Q216	B 0	Q314	B 1.5
Q009	E 5.1	Q216	E GND	Q314	E 1.4
Q009	C 4.8	Q216	C 0	Q314	C 4.0
Q010	B 3.9	Q217	B 0	Q401	B 0
Q010	E 3.2	Q217	E GND	Q401	E GND
Q010	C 5.0	Q217	C 0	Q401	C 14.8
Q011	B -0.8	Q218	B 0	Q402	B 2.0
Q011	E GND	Q218	E GND	Q402	E GND
Q011	C 8.8	Q218	C 8.8	Q402	C 0
Q012	B -0.8	Q219	B 4.3	Q404	B 0.2
Q012	E GND	Q219	E 3.6	Q404	E GND
Q012	C 0	Q219	C 8.3	Q404	C 0
Q013	B -0.8	Q220	B 4.4	Q405	B 8.7
Q013	E GND	Q220	E GND	Q405	E 8.6
Q013	C 0	Q220	C 3.8	Q405	C 8.6
Q014	B 0	Q221	B 0	Q406	B 0
Q014	E GND	Q221	E GND	Q406	E GND
Q014	C 8.9	Q221	C 8.9	Q406	C -2.5
Q015	B 1.5	Q222	B 4.3	Q407	B 8.7
Q015	E 0.8	Q222	E 3.6	Q407	E 8.6
Q015	C 3.6	Q222	C 8.1	Q407	C -2.5
Q016	B 0	Q223	B 1.0	Q408	B GND
Q016	E GND	Q223	E 1.0	Q408	E GND
Q016	C 0	Q223	C 8.9	Q408	C 14.8
Q017	B 1.5	Q224	B 1.4	Q409	B 0.7
Q017	E 0.9	Q224	E 0.9	Q409	E GND
Q017	C 3.7	Q224	C 8.9	Q409	C 0
Q018	B 8.2	Q225	B 4.3	Q101	B 0.7
Q018	E 8.9	Q225	E 3.7	Q101	E GND
Q018	C 3.7	Q225	C 8.5	Q101	C 0
Q019	B 0	Q301	B 1.0	Q101	B 0
Q019	E GND	Q301	E 1.7	Q101	E GND
Q019	C 1.5	Q301	C GND	Q101	C 2.9
Q020	B 0	Q302	B 1.0	Q101	B 4.0
Q020	E GND	Q302	E 1.7	Q101	E 4.6
Q020	C 0	Q302	C GND	Q101	C GND
Q021	B 0	Q303	B 3.4	Q101	B -0.4
Q021	E GND	Q303	E 2.7	Q101	E 0.1
Q021	C 1.5	Q303	C 8.9	Q101	C 14.8

*All voltage are in V.

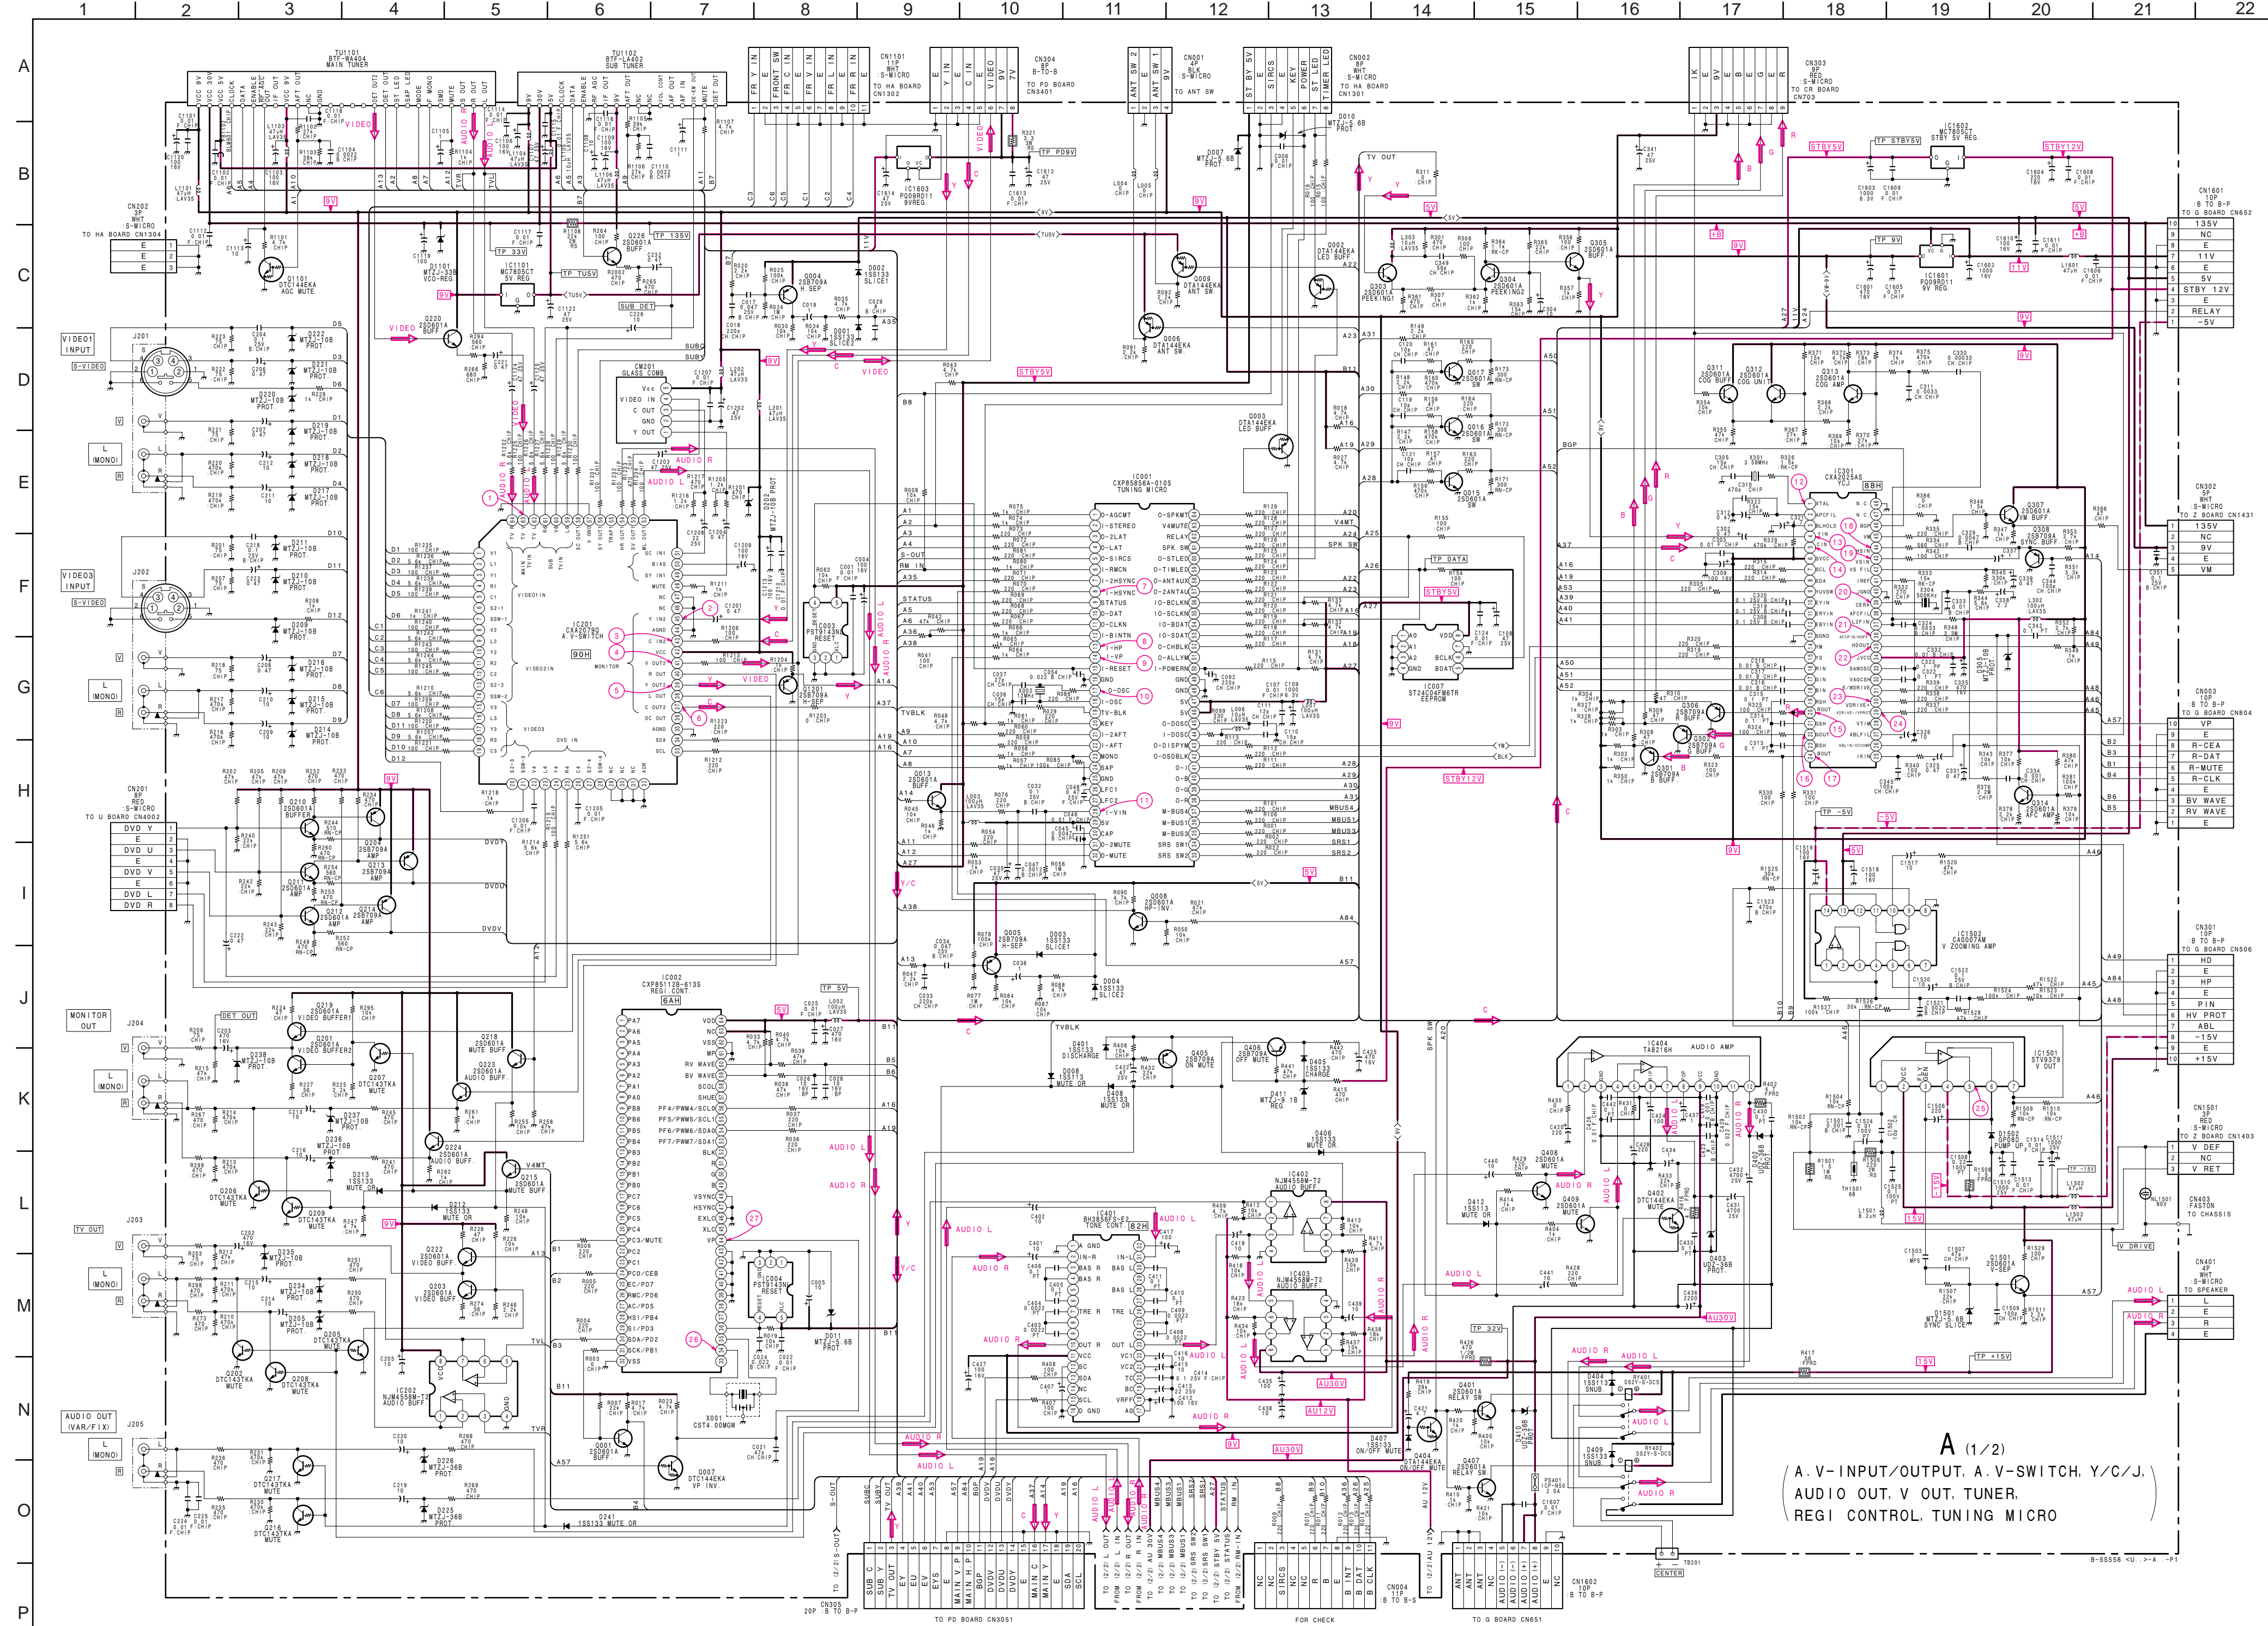


A(1/2)
A. V-INPUT/OUTPUT. A. V-SWITCH. Y/C/J.
AUDIO CONTROL. V. OUT. TUNER.
REGI CONTROL. TUNING MICRO

G BOARD : IC651 DM-58

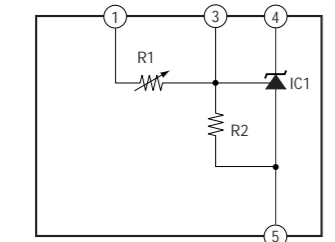

G BOARD : IC801,802 PA0053B

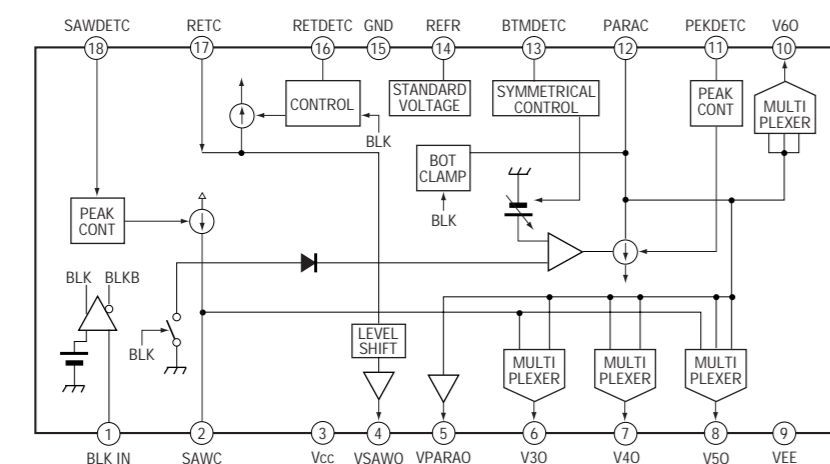


G BOARD TRANSISTOR VOLTAGE LIST

REF.	VOL.	REF.	VOL.
Q501	B -0.4	Q657	B 4.9
	E GND		C 4.9
	C 47.0		B 0
Q502	B 0	Q658	E 0.4
	C 140.0		C 4.9
	B 0.5		B 17.6
Q503	E 2.4	Q659	E 2.4
	C 0		C 0
	B 0		B 0.6
Q504	E GND	Q660	E GND
	C 0.5		C 0.6
	B 9.9		B 3.1
Q505	D 21.9	Q661	E 2.4
	S GND		C 5.2
Q506	B 1.7	Q662	E 2.4
	C 11.3		C 4.9
	B 0		B 4.0
Q507	E 11.5	Q802	E 4.9
	C 138.2		C 2.3
	B 11.2		B 2.3
Q651	E 11.9	Q803	E 0.5
	C 11.9		C 0
	B 0.7		B 0
Q652	E GND	Q804	E GND
	C 0		C 0.5
	B 0		B 2.3
Q653	E GND	Q805	E 1.7
	C 1.7		C 12.1
	B 13.6		B -15.3
Q654	E 14.0	Q809	E -15.3
	C GND		C -14.3
	B 1.7		B -15.3
Q655	C 0	Q810	E -15.3
	E GND		C -14.5
Q656	C 13.6		

All voltages are in V.

G BOARD WAVEFORMS

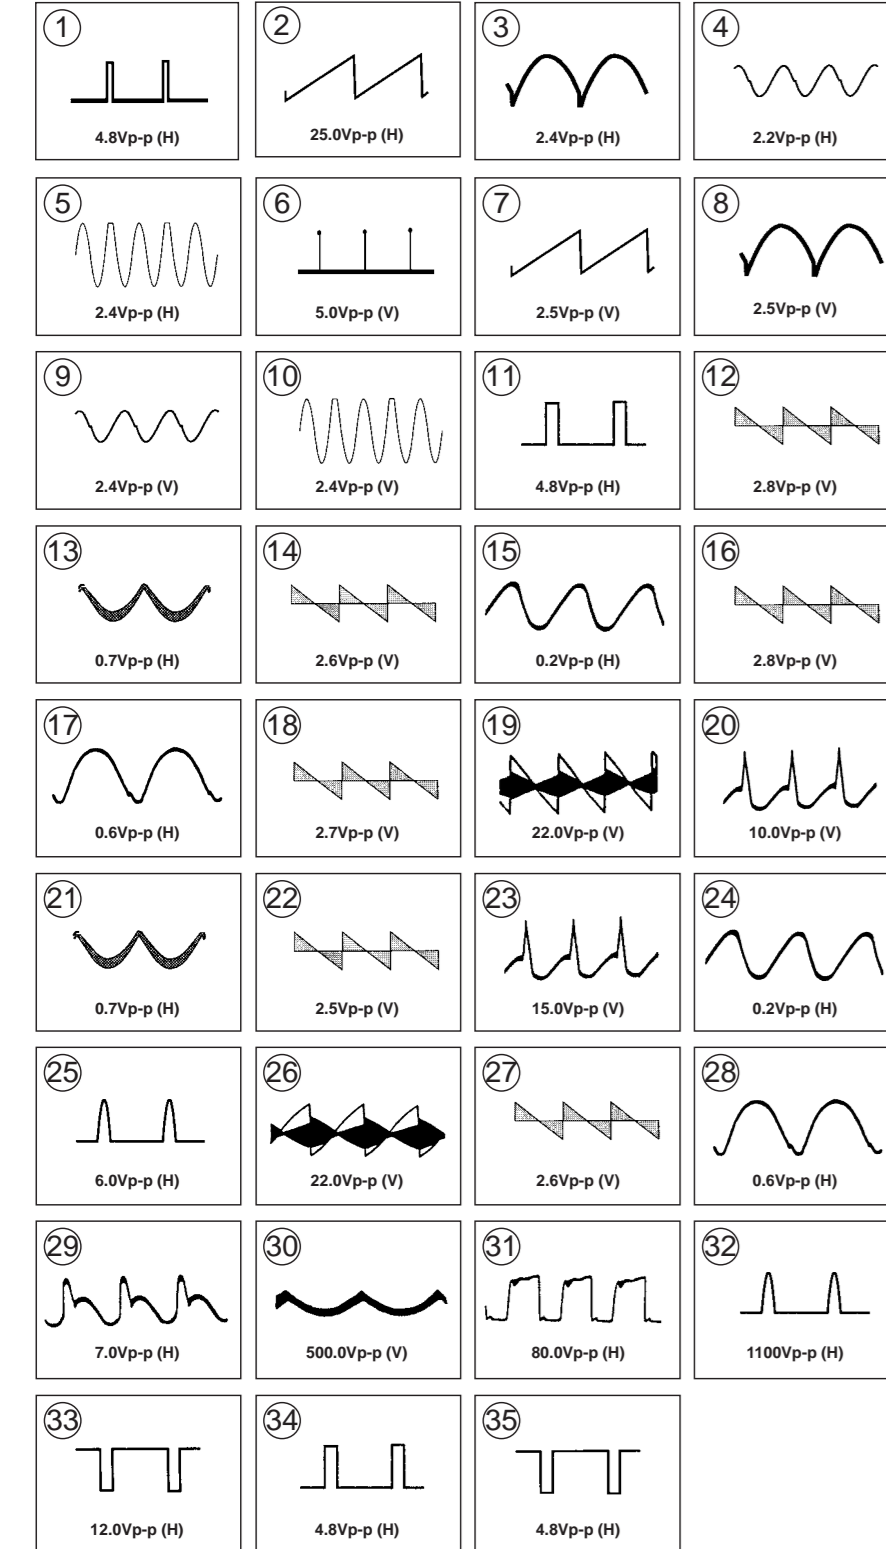

G BOARD IC VOLTAGE LIST

REF.	Pin NO.	VOL.	REF.	Pin NO.	VOL.	REF.	Pin NO.	VOL.	REF.	Pin NO.	VOL.
IC501	①	3.4	IC802	①	0.5	IC804	①	0	IC806	①	0
	②	0.7		②	1.1		②	0.5		②	0
	③	12.1		③	4.9		③	4.7		③	0
	④	3.3		④	0		④	0.1		④	0
	⑤	1.8		⑤	-0.9		⑤	4.9		⑤	0
	⑥	7.9		⑥	0		⑥	4.8		⑥	0.4
	⑦	8.1		⑦	-1.0		⑦	0		⑦	0.4
	⑧	1.4		⑧	0		⑧	1.4		⑧	GND
	⑨	2.2		⑨	0		⑨	0		⑨	4.9
	⑩	5.5		⑩	-0.9		⑩	0		⑩	4.8
	⑪	1.8		⑪	0.3		⑪	0		⑪	GND
	⑫	GND		⑫	1.2		⑫	0		⑫	-14.3
IC601	⑬	GND	IC803	⑬	GND	IC805	⑬	0	IC807	⑬	1.2
	⑭	1.4		⑭	GND		⑭	0.2		⑭	14.5
	⑮	9.9		⑮	-1.9		⑮	GND		⑮	-0.1
	⑯	GND		⑯	1.2		⑯	0		⑯	-0.1
	⑰	-1.9		⑰	-1.1		⑰	7.2		⑰	0
	⑱	136.0		⑱	-0.4		⑱	7.0		⑱	-0.2
	⑲	274.0		⑲	-0.4		⑲	12.1		⑲	GND
	⑳	136.0		㉑	-0.3		㉑	0		㉑	14.5
	㉑	134.0		㉒	-0.3		㉒	0		㉒	-15.3
	㉒	134.0		㉓	1.6		㉓	0		㉓	-0.4
	㉓	2.4		㉔	0.3		㉔	-0.8		㉔	0.3
	㉔	13.8		㉕	GND		㉕	0		㉕	0
IC651	㉖	GND	IC808	㉖	0	IC809	㉖	-0.2	IC810	㉖	0
	㉗	0		㉗	0		㉗	-0.4		㉗	-0.2
	㉘	0		㉘	0		㉘	-12.9		㉘	-15.3
	㉙	0		㉙	0		㉙	4.9		㉙	-0.4
	㉚	-5.1		㉚	4.9		㉚	-5.1		㉚	GND
	㉛	10.6		㉛	-5.1		㉛	0.8		㉛	GND
	㉜	GND		㉜	0		㉜	0		㉜	4.9
	㉝	4.9		㉝	-0.9		㉝	0.1		㉝	-14.5
	㉞	18.0		㉞	0		㉞	0		㉞	-15.3
	㉟	GND		㉟	-1.0		㉟	-1.0		㉟	4.7
	㊱	5.0		㊱	0		㊱	0		㊱	14.5
	㊲	15.7		㊲	-0.4		㊲	-0.4		㊲	0.2
IC655	㊳	GND	IC804	㊳	-0.4	IC806	㊳	-0.5	IC811	㊳	-0.3
	㊴	0		㊴	-5.1		㊴	0		㊴	0.3
	㊵	0		㊵	4.9		㊵	-0.9		㊵	14.5
	㊶	0		㊶	-5.1		㊶	-5.1		㊶	0.1
	㊷	11.9		㊷	4.9		㊷	4.9		㊷	0
	㊸	0.2		㊸	-5.1		㊸	-5.1		㊸	0
	㊹	1.2		㊹	-2.2		㊹	4.8		㊹	-15.3
	㊺	4.9		㊺	0		㊺	4.9		㊺	0
	㊻	0		㊻	-0.8		㊻	0.1		㊻	0
	㊼	-0.8		㊼	0		㊼	4.7		㊼	0.1
	㊽	0		㊽	-0.9		㊽	-2.1		㊽	-0.1
	㊾	-1.1		㊾	0		㊾	-0.5		㊾	-15.3
IC801	㊿	-5.1	①	-0.5	①	-0.8	①	0	②	0.2	
	①	0.4	②	4.9	②	0	②	0	③	-1.2	
	②	-11.5	③	0	③	-0.9	③	0	④	-0.3	
	③	0.3	④	-0.1	④	0	④	0.2	⑤	-0.3	
	④	1.2	⑤	-0.5	⑤	-0.5	⑤	-12.3	⑥	GND	
	⑤	-1.5	⑥	-0.4	⑥	4.9	⑥	4.7	⑦	0	
	⑥	1.2	⑦	0	⑦	1.2	⑦	0	⑧	4.9	
	⑦	-1.6	⑧	0	⑧	0	⑧	4.8	⑨	12.1	


*All voltage are in V.

*Pin number which are not described are not used.

• The figures in the parentheses are the voltage difference from primary side ground.

G BOARD * MARK LIST

	KP-48V75E1V75	KP-63V75
R540	0.68	0.47
R542	68 1W : RS	150 1W : RS
R544	68 1W : RS	150 1W : RS
R569	1.8 3W : RS	1.0 3W : RS

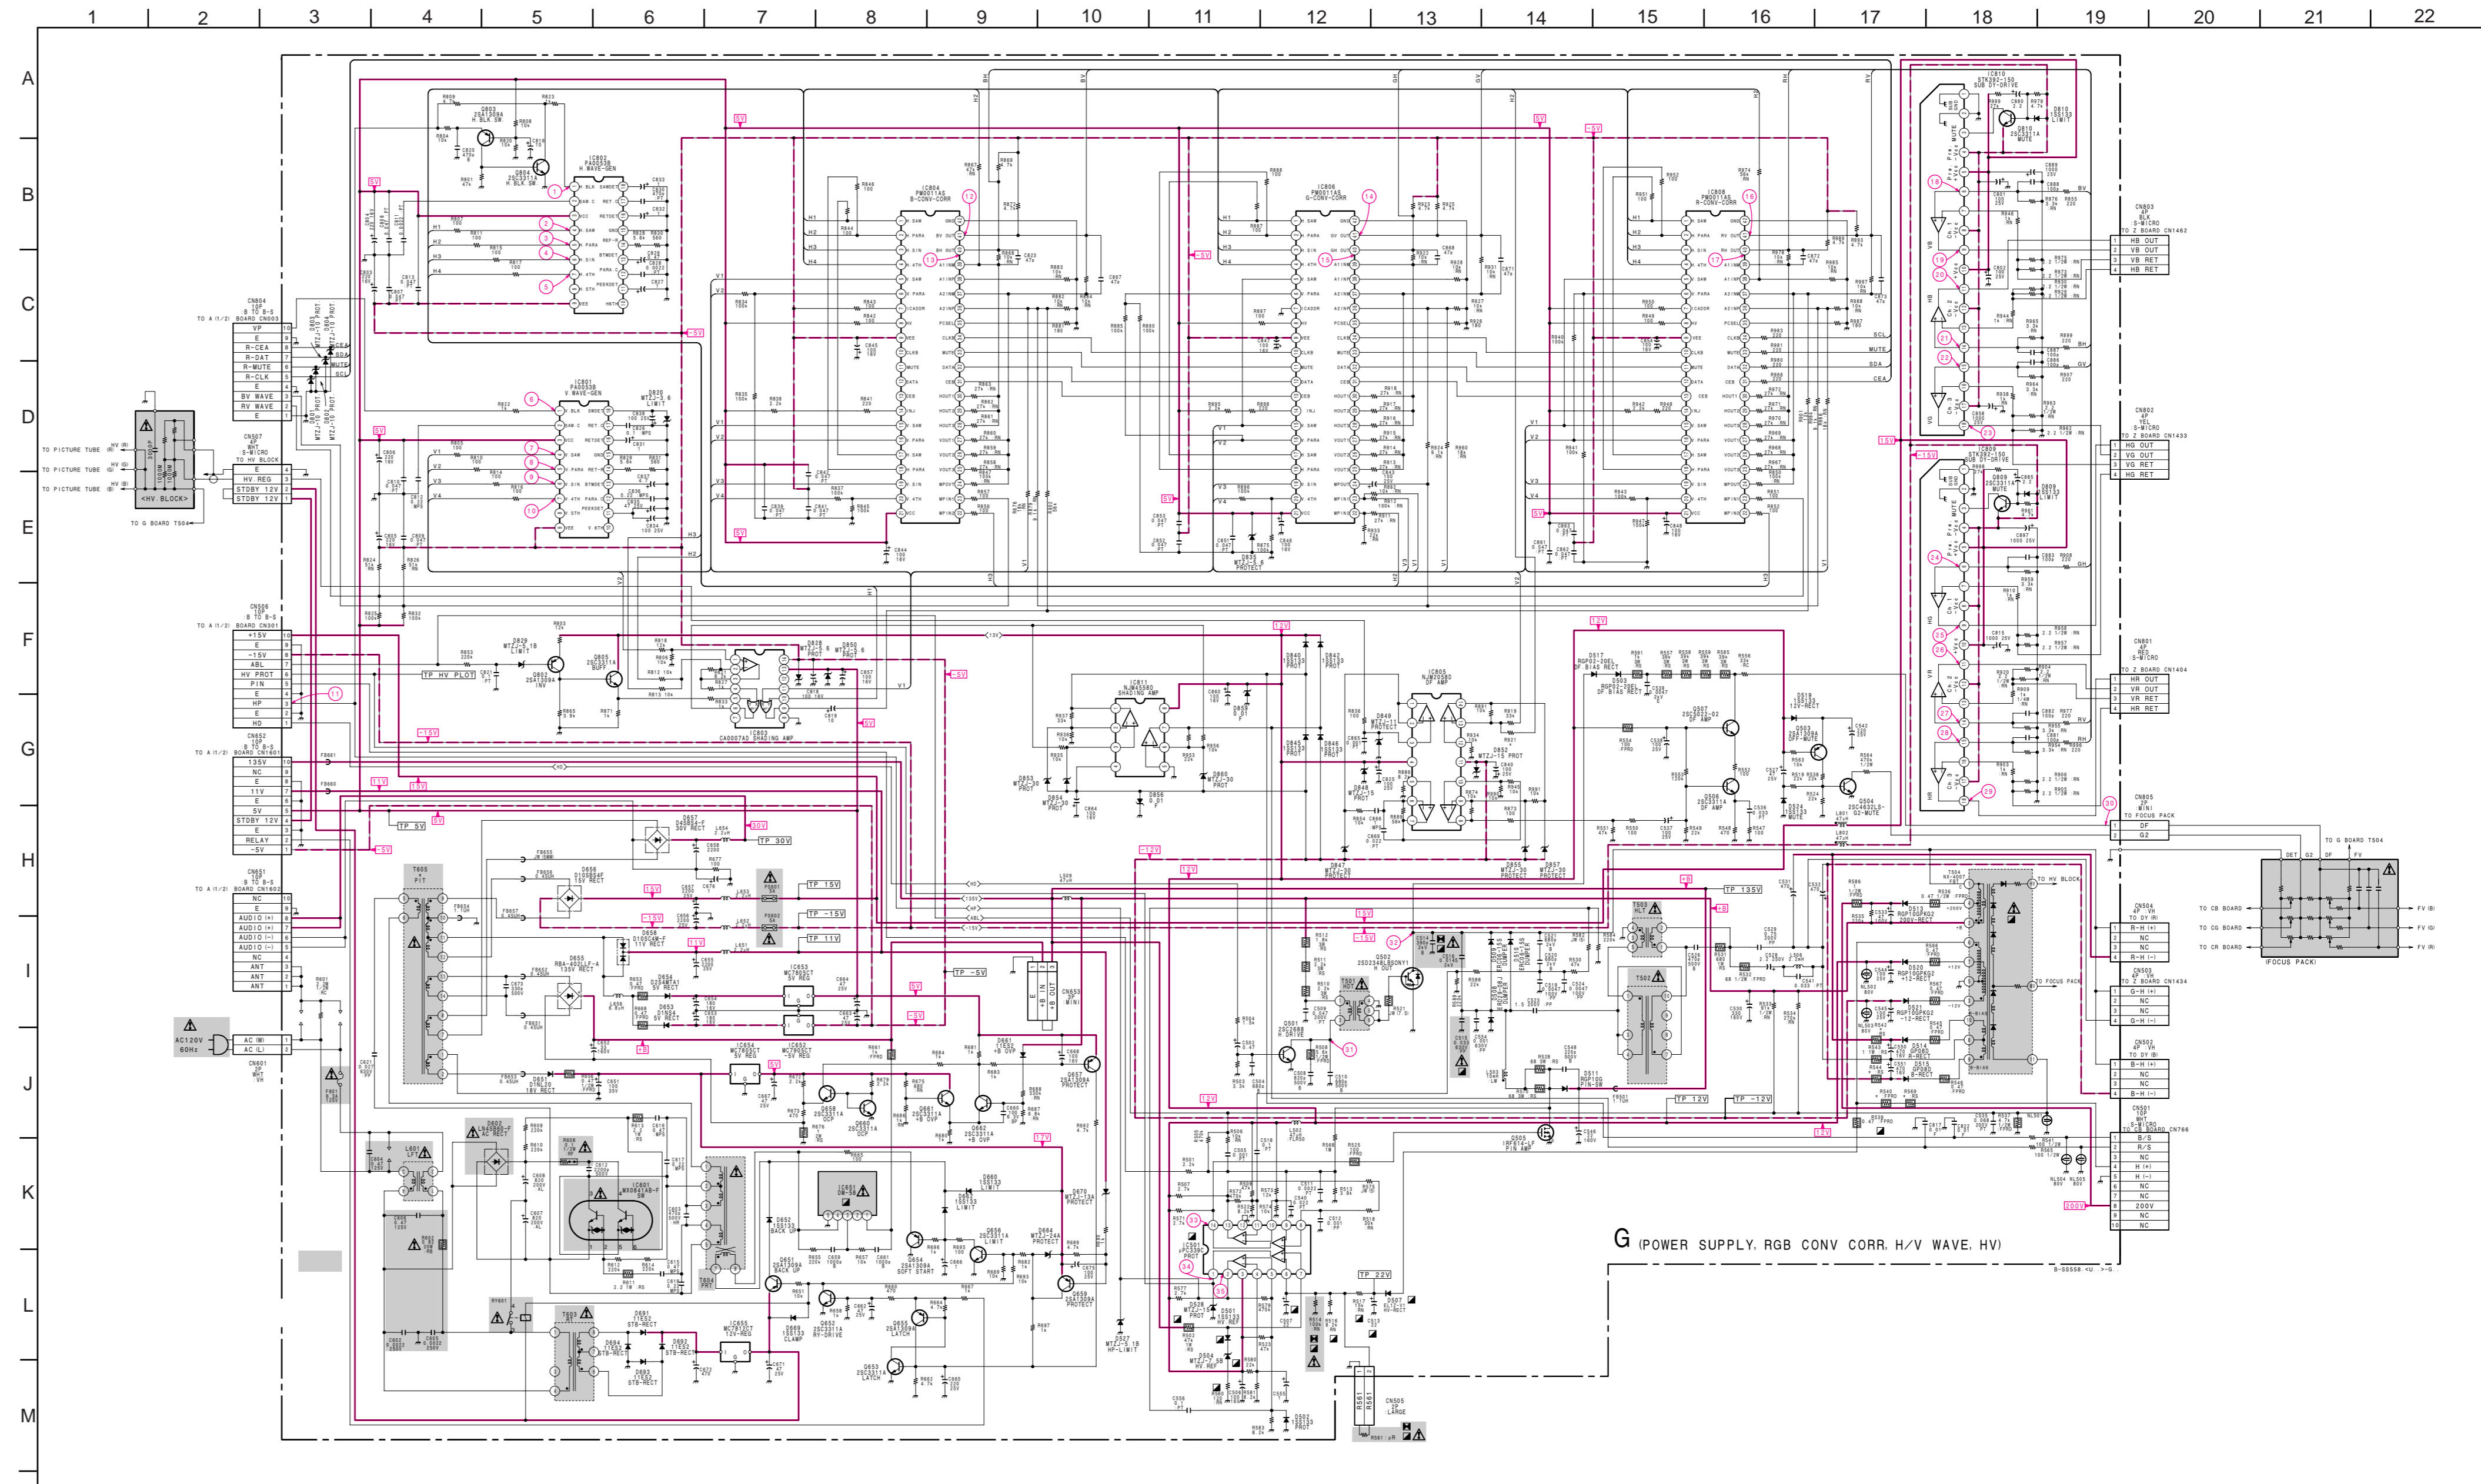


PD [DECODER, Y/V/U CONTROL, 3D COMB FILTER, P&P CONTROL]

NOTE:
 • : Pattern from the side which enables seeing.
 • : Pattern of the rear side.

PD BOARD

DIODE *		TRANSISTOR *		IC	
D3003	D-15	Q3401	C-6	IC3001	D-4
D3051	E-14	Q3402	D-7	IC3002	D-1
D3052	E-14	Q3403	B-10	IC3003	D-1
D3201	C-5	Q3404	D-9	IC3004	D-2
D3202	C-5	Q3405	D-10	IC3201	A-4
D3205	C-5	Q3406	D-10	IC3202	B-2
D3401	C-6	Q3407	D-10	IC3203	B-4
		Q3408	D-8	IC3204	C-2
		Q3409	B-10	IC3205	B-4
		Q3410	D-10	IC3206	C-15
		Q3411	B-8	IC3207	C-12
		Q3412	D-8	IC3208	C-4
		Q3413	D-10	IC3209	C-4
		Q3414	B-8	IC3210	C-4
		Q3415	D-8	IC3404	B-6
		Q3416	D-10	IC3405	E-6,E-11
				IC3407	D-7,D-10


- PD Board -

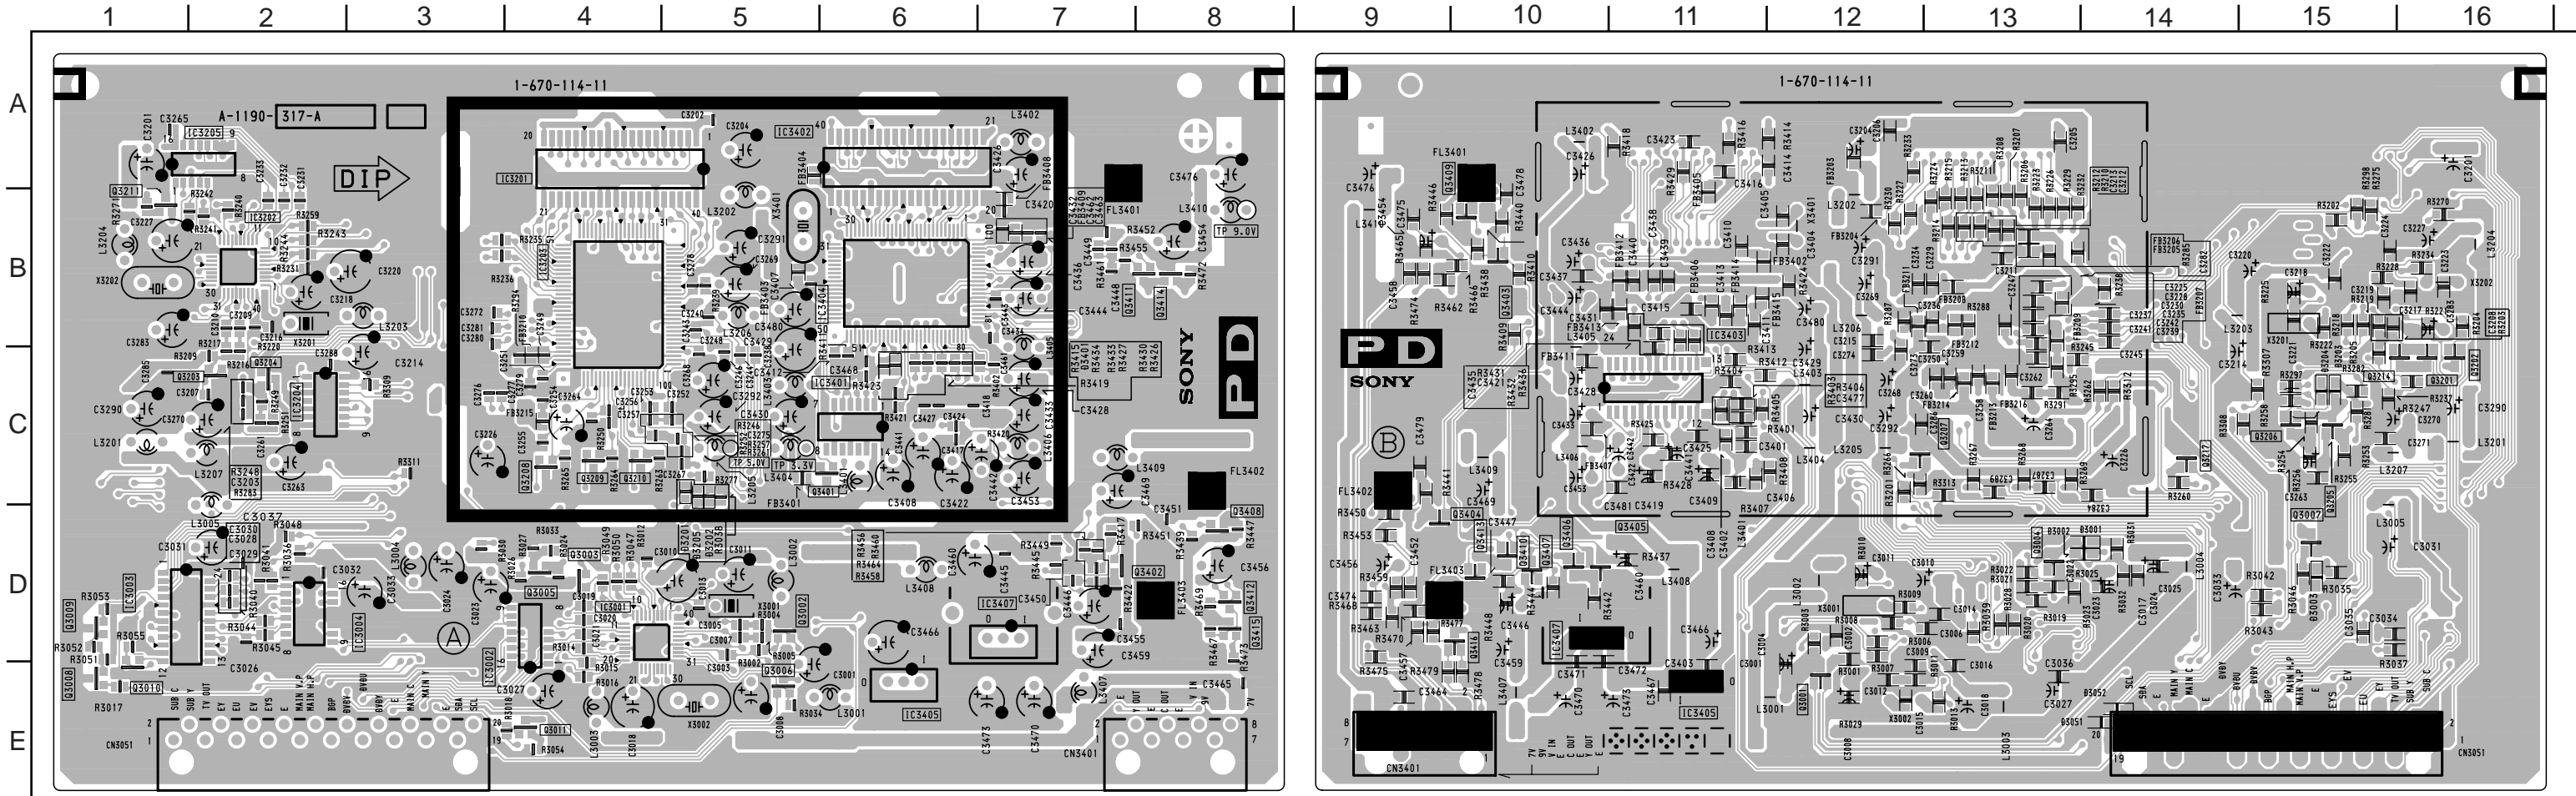


< Component Side >

< Conductor Side >


PD BOARD : IC3004 CXA1315M

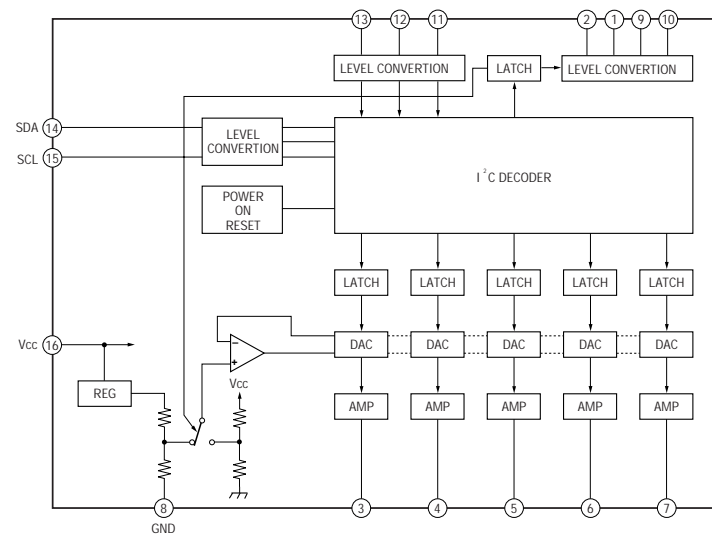


PD BOARD : IC3403 μPC659AGS

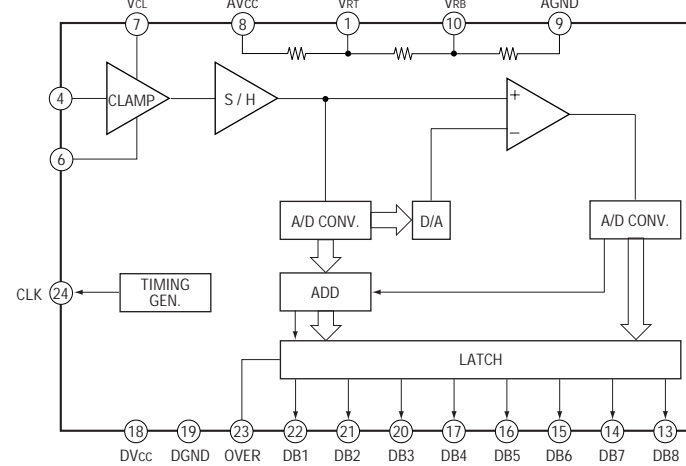

• PD BOARD WAVEFORMS

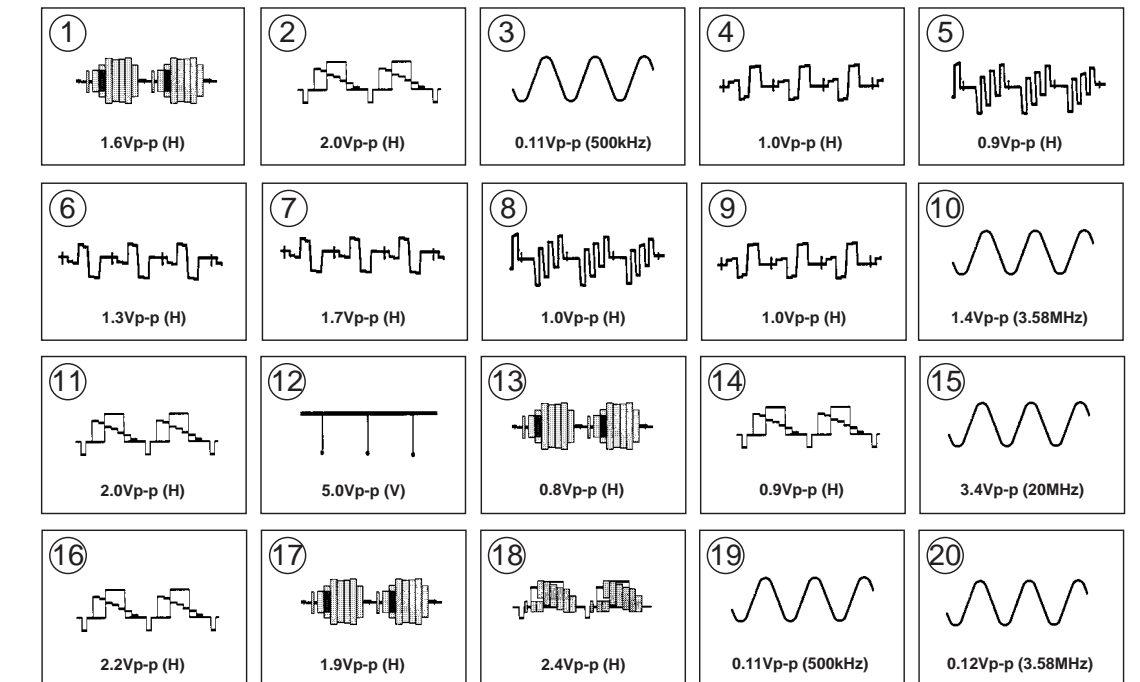

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

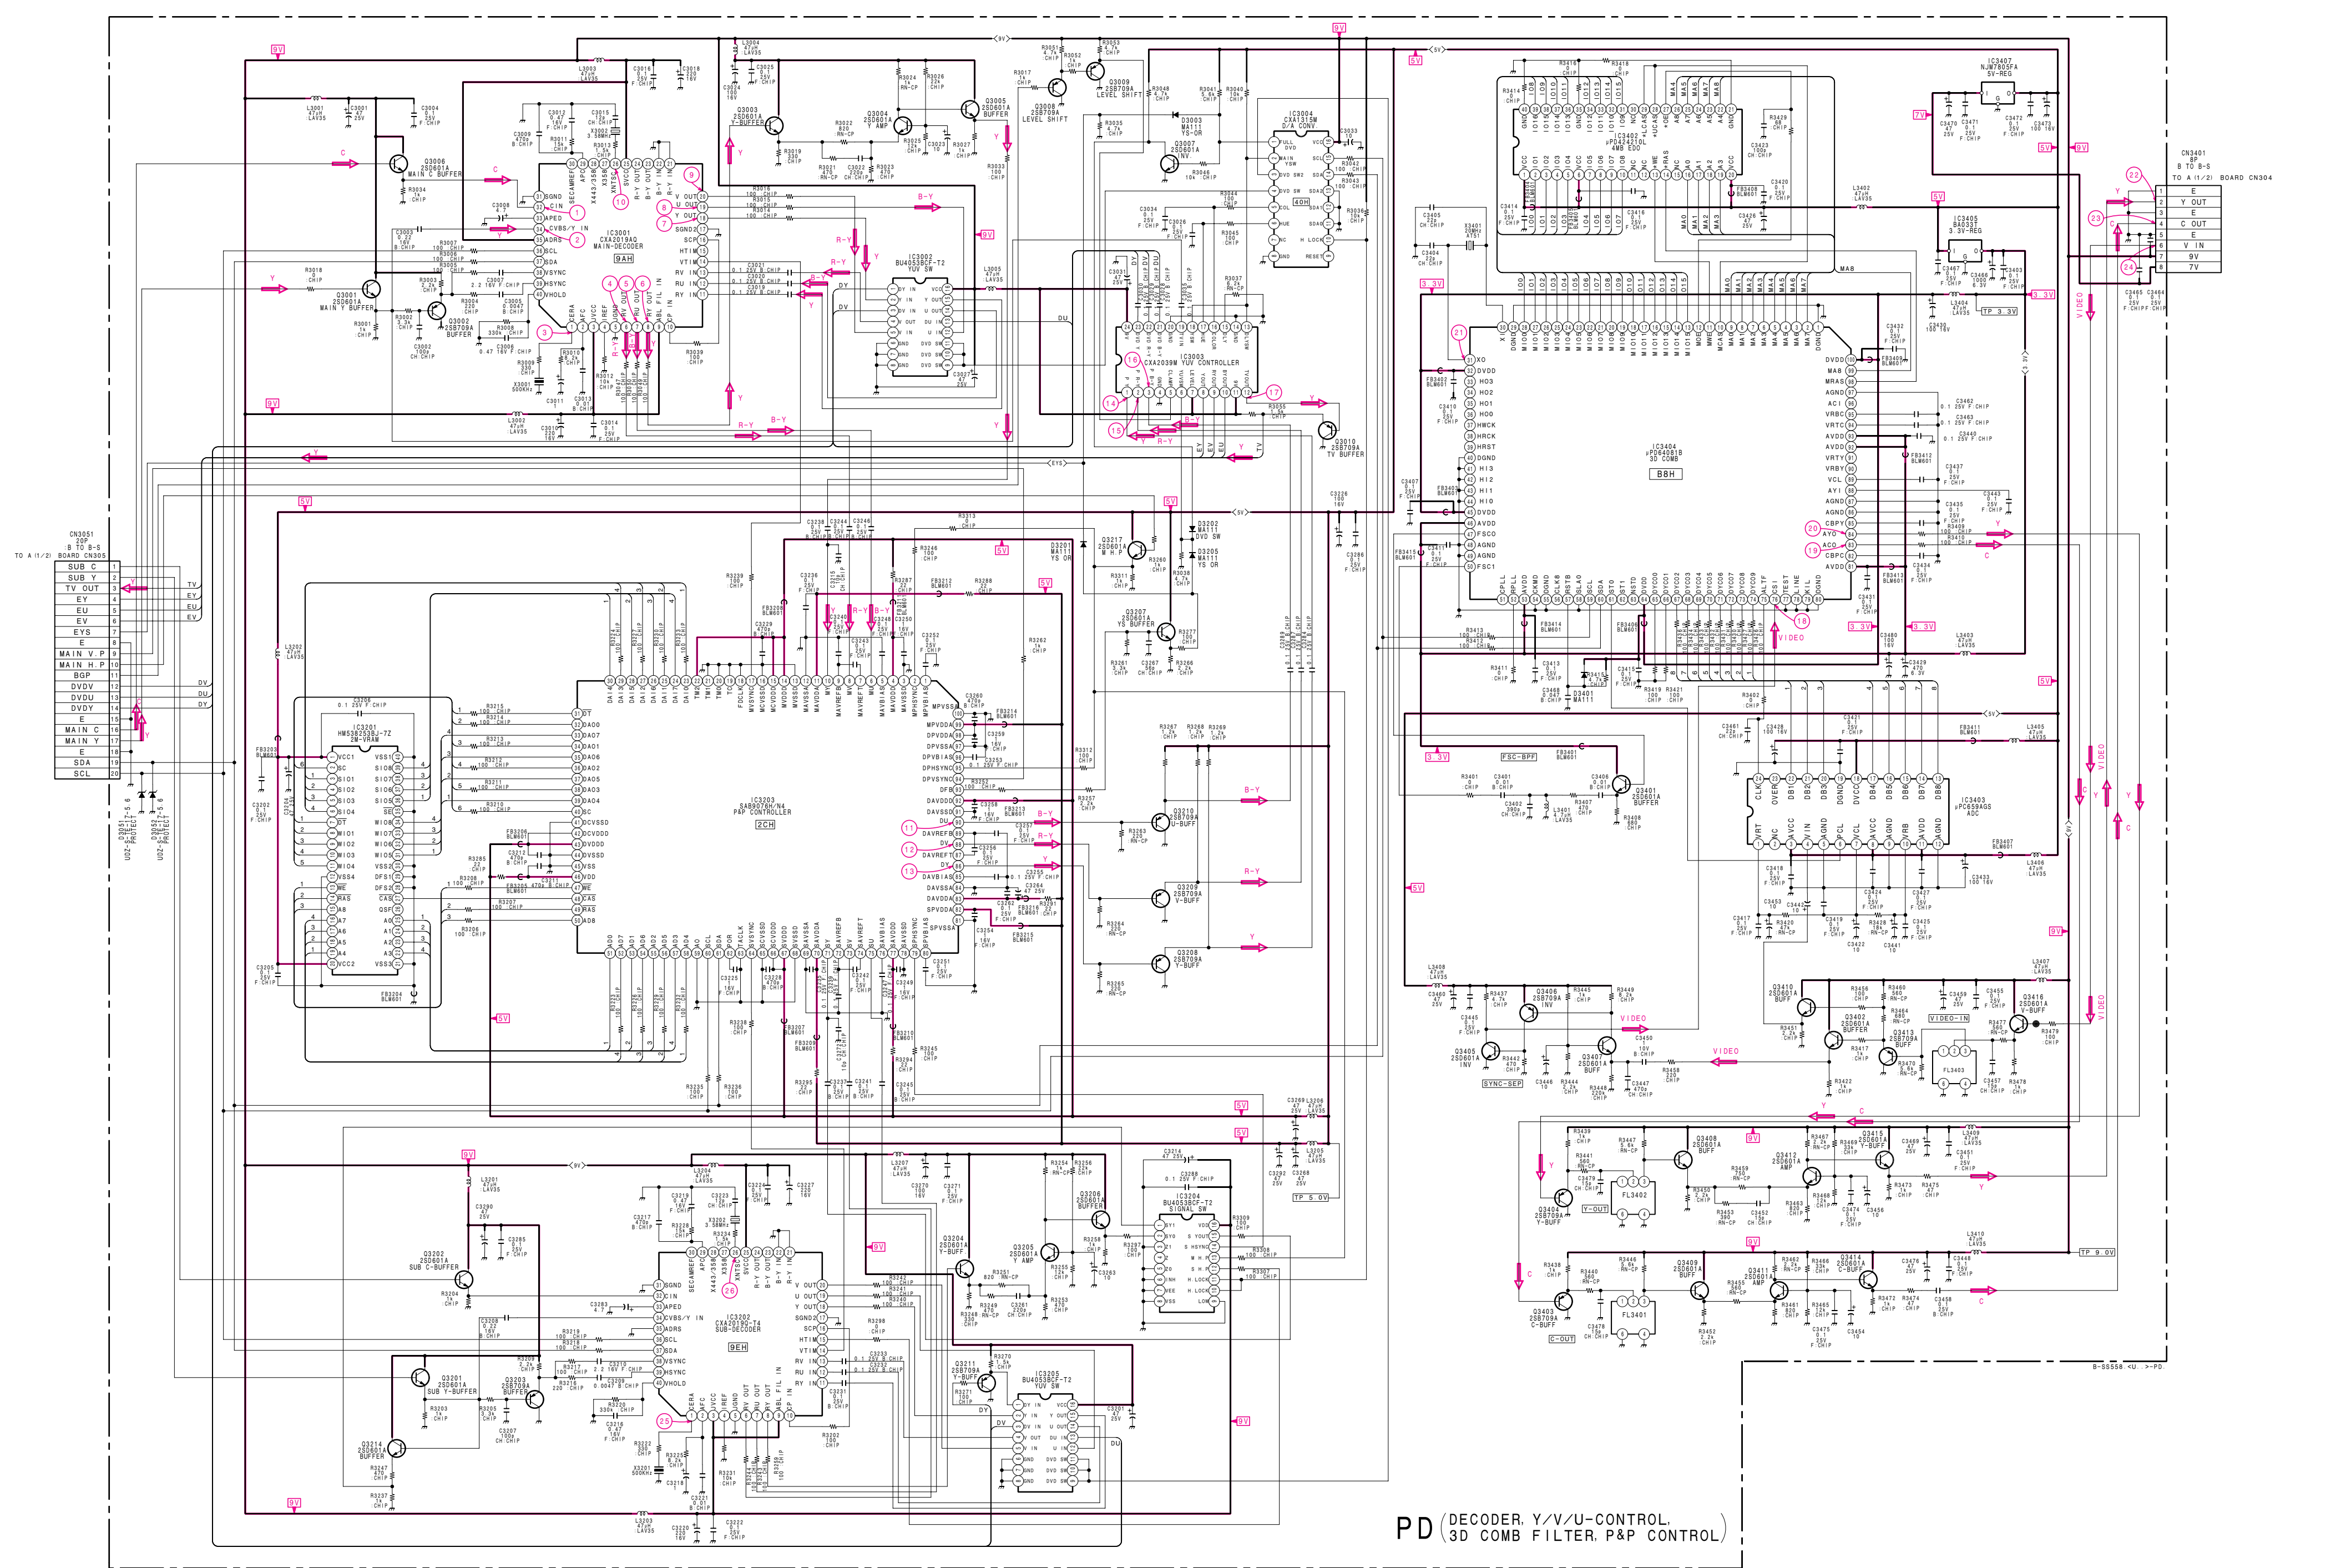

PD BOARD IC VOLTAGE LIST

REF.	Pin NO.	VOL.	REF.	Pin NO.	VOL.	REF.	Pin NO.	VOL.	REF.	Pin NO.	VOL.	REF.	Pin NO.	VOL.					
IC3000	2.3	0.2	IC3202	1.4	1.4	IC3303	1.4	1.4	IC3402	1.4	1.4	IC3404	1.4	1.4					
	4.1	0		4.5	4.5		4.5	4.5		4.5	4.5		4.5	4.5	4.5	4.5	4.5		
	8.9	0.4		8.8	4.9		4.9	4.9		4.9	4.9		4.9	4.9	4.9	4.9	4.9		
	1.8	0.4		2.4	GND		GND	GND		GND	GND		GND	GND	GND	GND	GND	GND	
	GND	4.4		4.6	GND		GND	GND		GND	GND		GND	GND	GND	GND	GND	GND	
	2.9	4.5		GND	GND		GND	GND		GND	GND		GND	GND	GND	GND	GND	GND	
	2.9	GND		3.6	4.9		4.9	4.9		4.9	4.9		4.9	4.9	4.9	4.9	4.9	4.9	
	3.3	4.0		2.9	4.9		4.9	4.9		4.9	4.9		4.9	4.9	4.9	4.9	4.9	4.9	
	8.9	8.9		4.4	GND		GND	GND		GND	GND		GND	GND	GND	GND	GND	GND	GND
	0.8	GND		4.7	GND		GND	GND		GND	GND		GND	GND	GND	GND	GND	GND	GND

PD BOARD TRANSISTOR VOLTAGE LIST





REF.	B	VOL.	REF.	B	VOL.	REF.	B	VOL.	REF.	B	VOL.
Q3001	E	2.6	Q3201	E	2.5	Q3211	E	4.9	Q3408	E	2.3
	C	8.9		C	8.9		C	2.1		C	4.2
	B	3.4		B	4.2		B	2.5		B	3.1
Q3002	E	4.0	Q3202	E	3.6	Q3214	E	1.9	Q3409	E	2.4
	C	GND		C	8.9		C	8.9		C	8.9
	B	3.3		B	2.5		B	1.1		B	3.4
Q3003	E	2.7	Q3203	E	3.2	Q3217	E	0.5	Q3410	E	2.7
	C	8.9		C	GND		C	5.1		C	8.9
	B	3.1		B	2.9		B	1.9		B	2.4
Q3004	E	2.4	Q3204	E	2.3	Q3401	E	1.3	Q3411	E	1.8
	C	4.1		C	8.9		C	3.3		C	6.7
	B	4.1		B	3.1		B	4.0		B	2.3
Q3005	E	3.4	Q3205	E	2.4	Q3402	E	3.4	Q3412	E	1.8
	C	8.9		C	8.9		C	8.9		C	6.0
	B	4.2		B	3.6		B	1.8		B	4.3
Q3006	E	3.6	Q3206	E	3.0	Q3403	E	2.4	Q3413	E	3.7
	C	8.9		C	8.9		C	GND		C	GND
	B	0.2		B	0		B	1.7		B	6.7
Q3007	E	GND	Q3207	E	0	Q3404	E	2.4	Q3414	E	6.0
	C	3.4		C	5.1		C	GND		C	8.9
	B	0.4		B	0.4		B	0.1		B	6.0
Q3008	E	1.0	Q3208	E	1.0	Q3405	E	GND	Q3415	E	5.3
	C	GND		C	GND		C	4.5		C	8.9
	B	1.1		B	1.1		B	5.0		B	4.3
Q3009	E	2.4	Q3209	E	1.7	Q3406	E	5.1	Q3416	E	3.7
	C	3.4		C	0.1		C	8.9		C	8.9
	B	GND		B	1.1		B	3.5		B	6.0
Q3010	E	4.0	Q3210	E	1.8	Q3407	E	3.8	Q3417	E	5.1
	C	GND		C	GND		C	5.0		C	GND

*Pin number which are not described are not used. *All voltages are in V.

PD (DECODER, Y/V/U-CONTROL, 3D COMB FILTER, P&P CONTROL)

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22

A
B
C
D
E
F
G
H

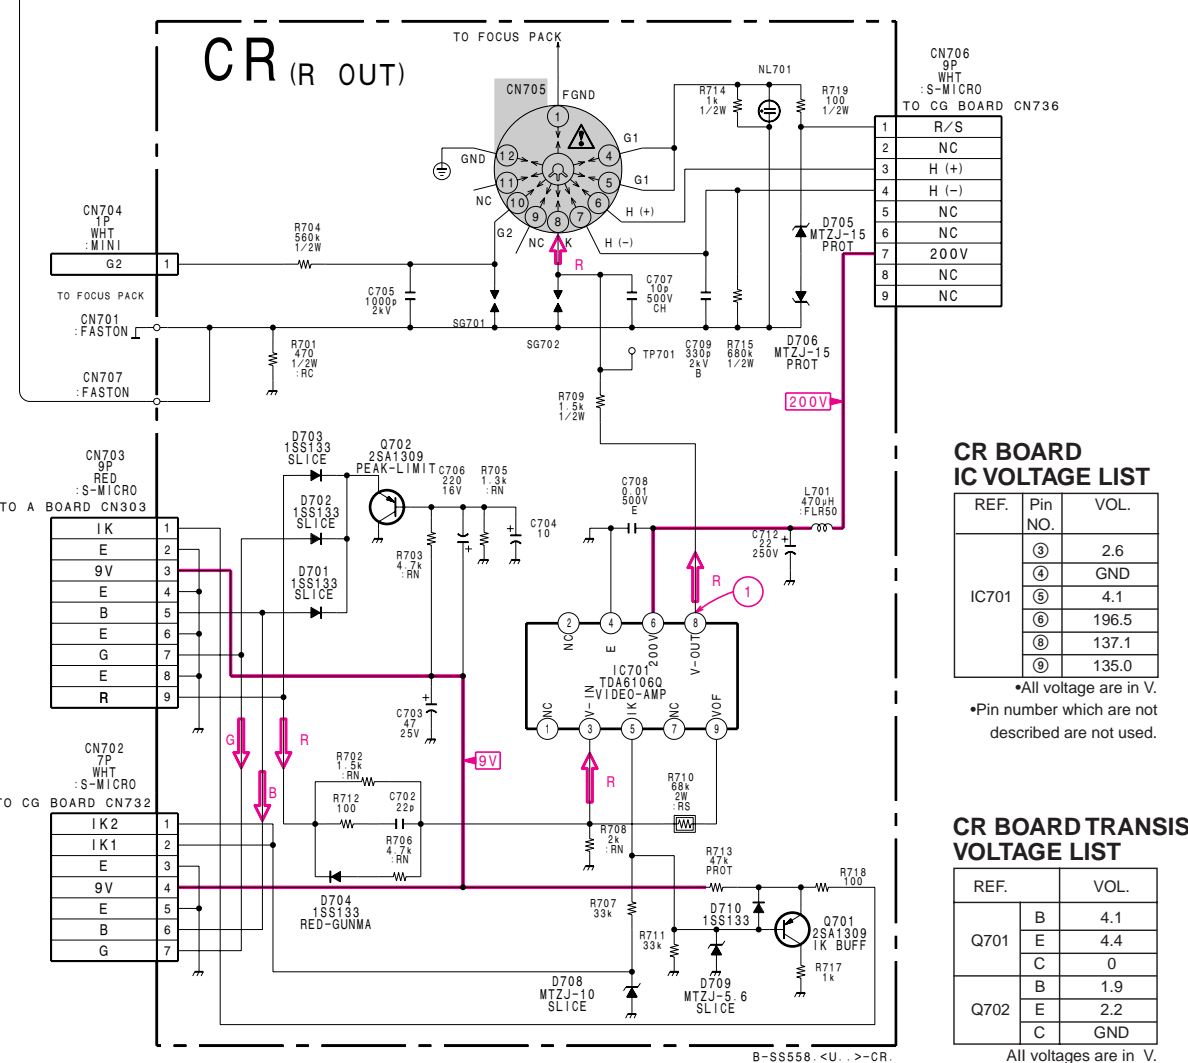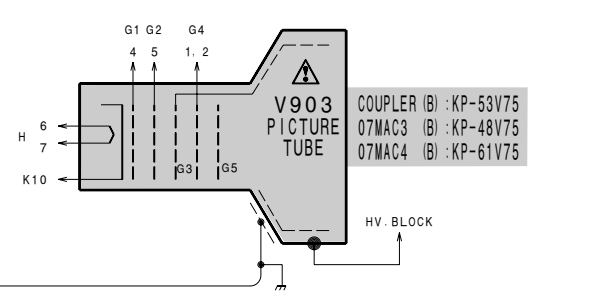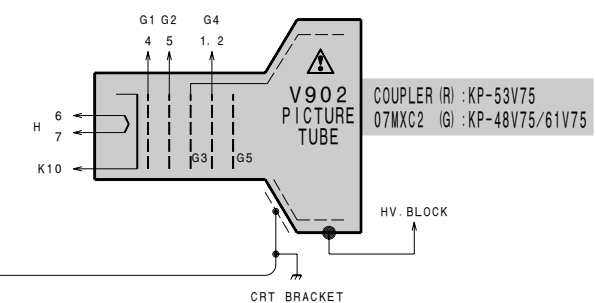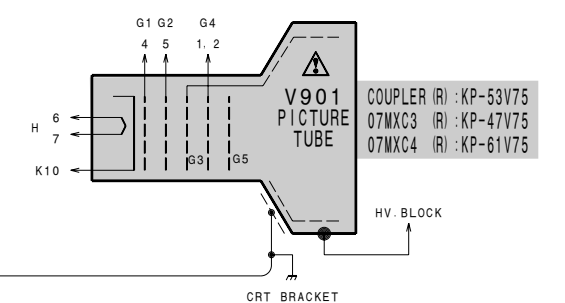

CR BOARD IC VOLTAGE LIST

REF.	Pin NO.	VOL.
CN736	1	R/S
	2	NC
	3	H (+)
	4	H (-)
IC701	1	4.1
	2	GND
	3	196.5
	4	137.1
	5	135.0



*All voltage are in V.
*Pin number which are not described are not used.

CR BOARD TRANSISTOR VOLTAGE LIST

REF.	VOL.
Q701	B 4.1
	E 4.4
	C 0
Q702	B 1.9
	E 2.2
	GND

All voltages are in V.

• CR BOARD WAVEFORM

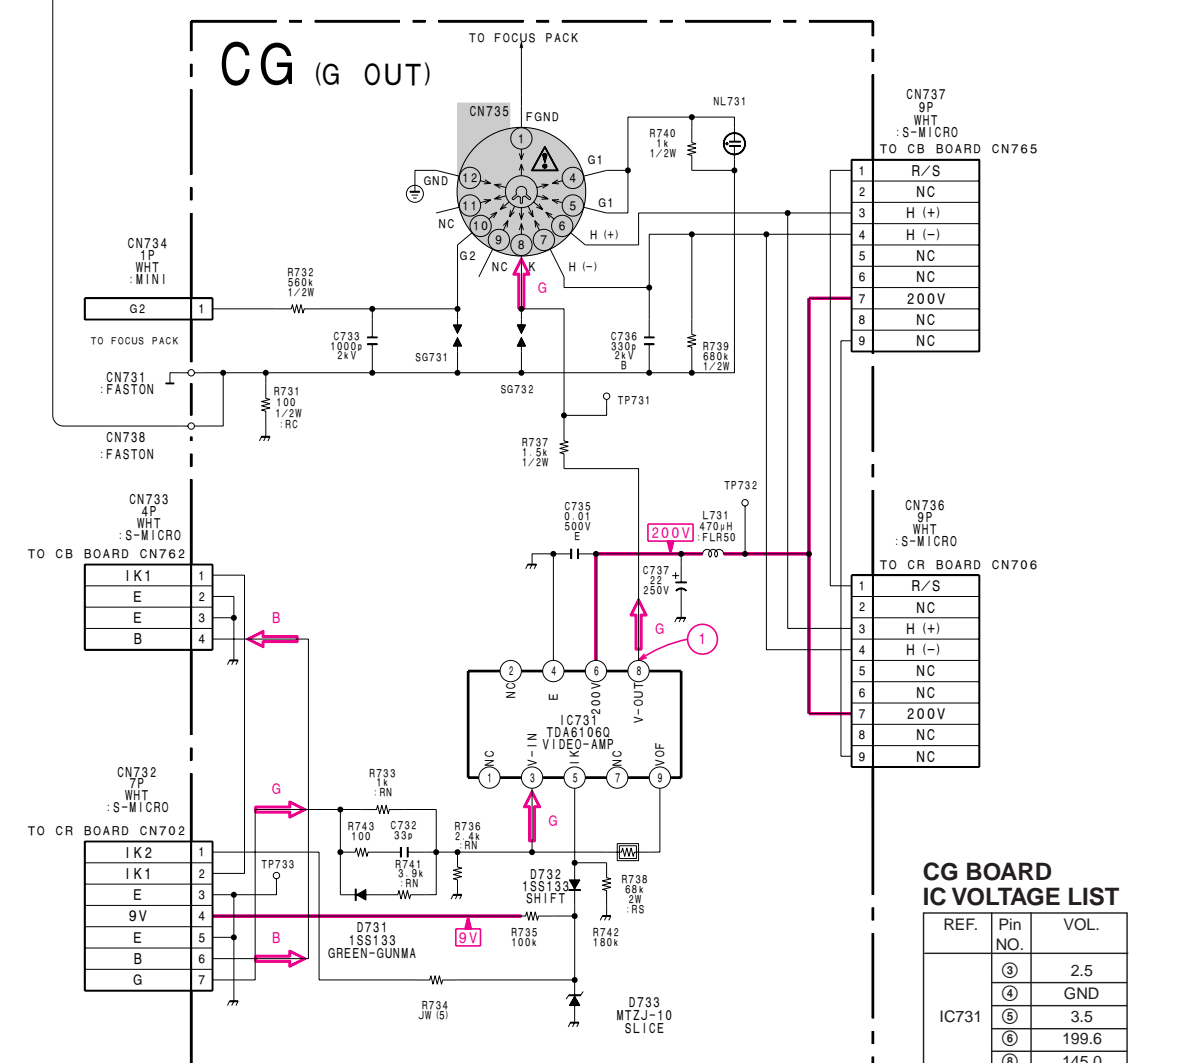
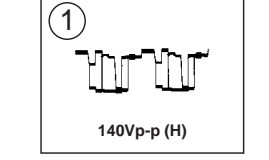


CG BOARD IC VOLTAGE LIST

REF.	Pin NO.	VOL.
CN737	1	R/S
	2	NC
	3	H (+)
	4	H (-)
IC731	1	2.5
	2	GND
	3	3.5
	4	145.0
	5	144.0

*All voltage are in V.
*Pin number which are not described are not used.

• CG BOARD WAVEFORM

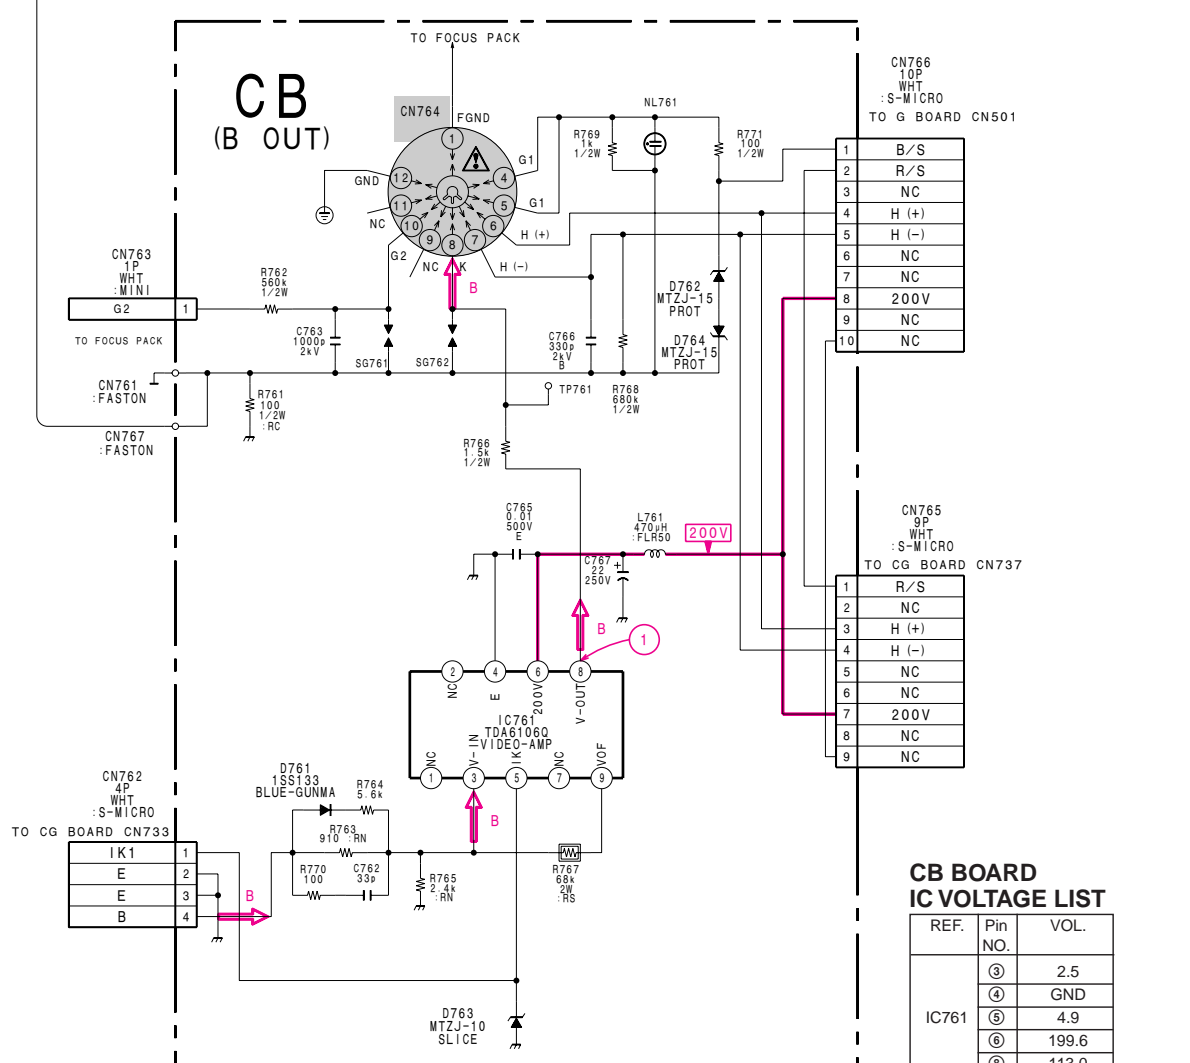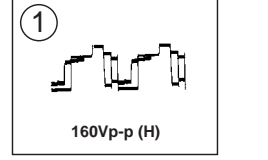


CB BOARD IC VOLTAGE LIST

REF.	Pin NO.	VOL.
CN765	1	R/S
	2	NC
	3	H (+)
	4	H (-)
IC761	1	2.5
	2	GND
	3	4.9
	4	199.6
	5	113.0


*All voltage are in V.
*Pin number which are not described are not used.

• CB BOARD WAVEFORM

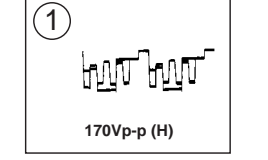


CR [R OUT] CG [G OUT] CB [B OUT]


- CR Board -

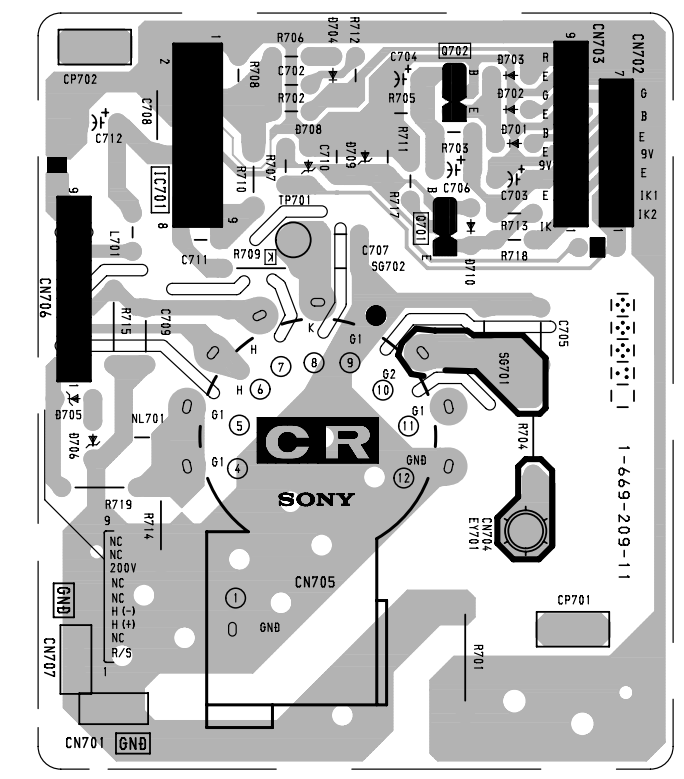

- CG Board -


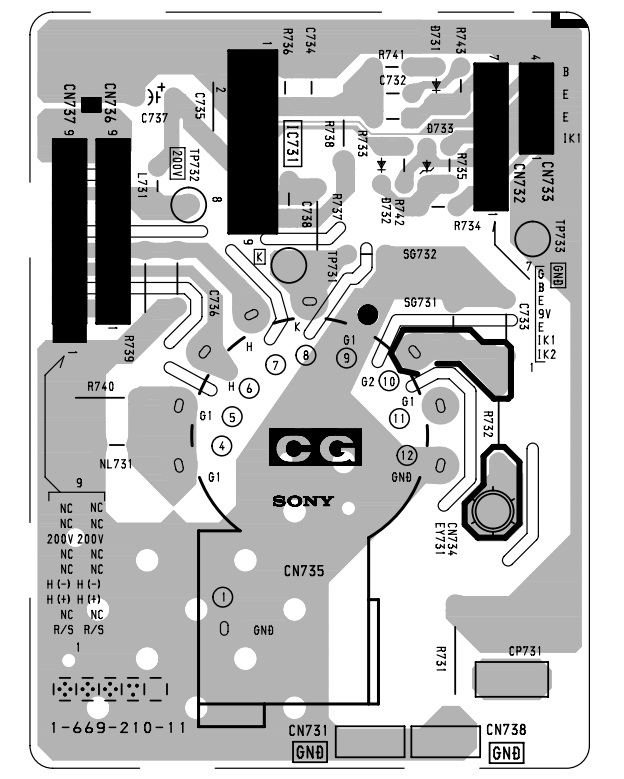


- CB Board -

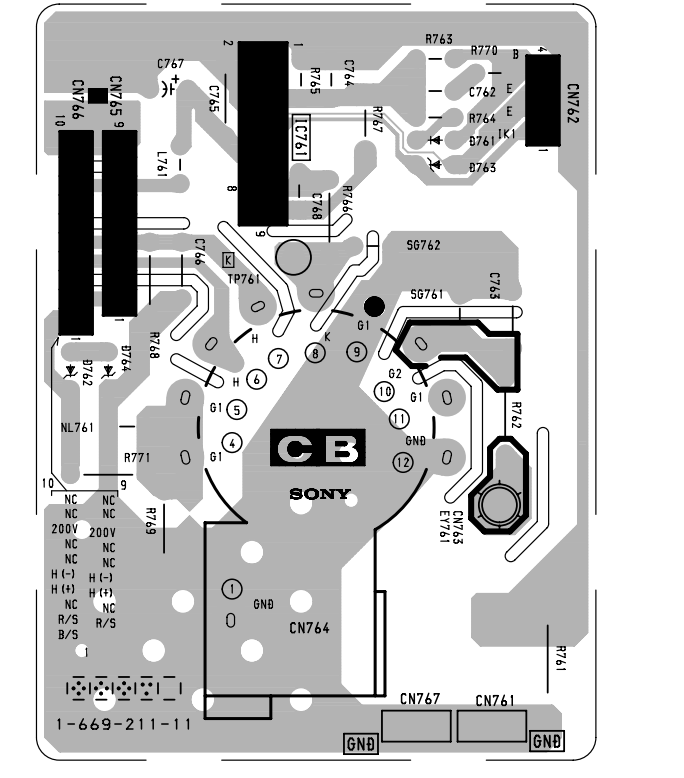

U [VIDEO 4 INPUT, SIRCS INPUT/OUTPUT]

- U Board -

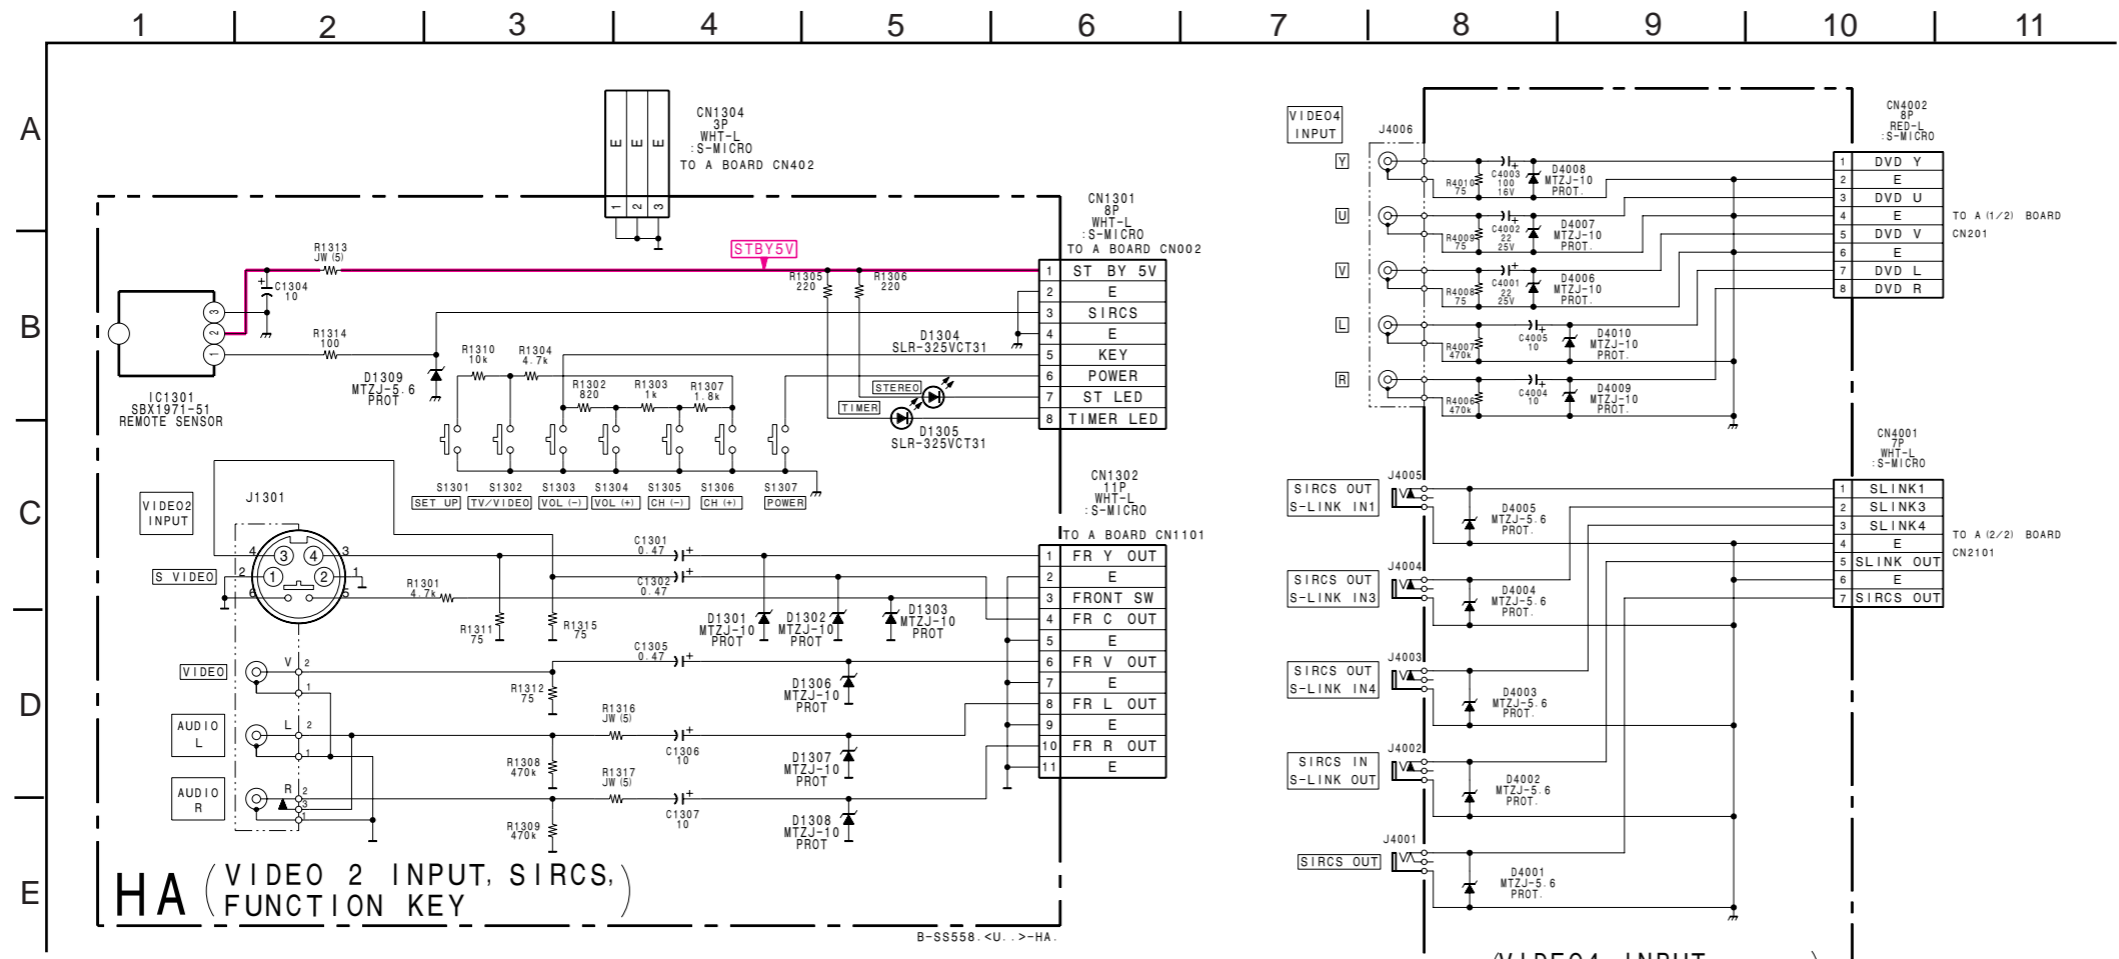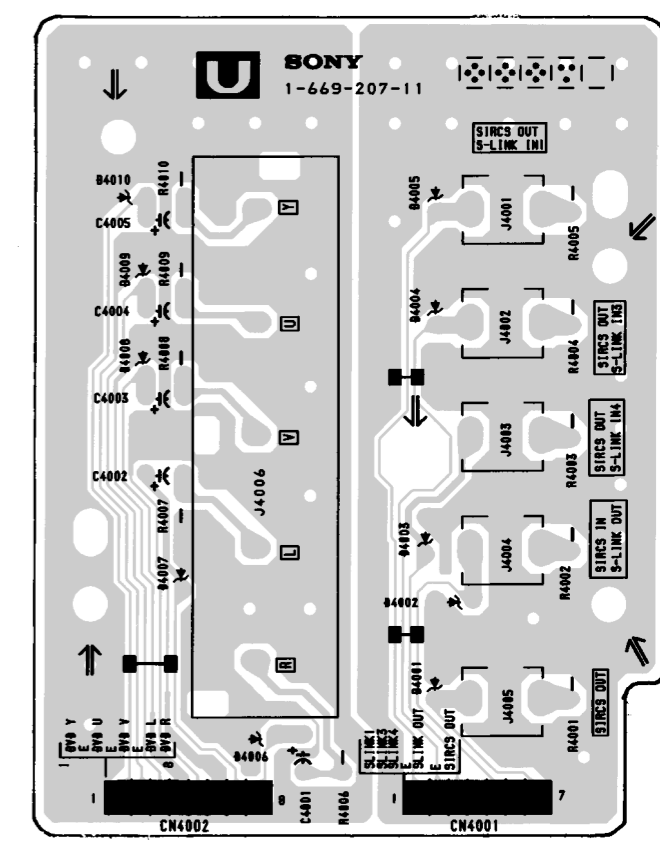

HA (VIDEO 2 INPUT, SIRCS, FUNCTION KEY)

U (VIDEO4 INPUT, SIRCS INPUT/OUTPUT)


HA BOARD IC VOLTAGE LIST

REF.	Pin NO.	VOL.
IC1301	①	5.0
	②	5.0
	③	GND

•All voltage are in V.

HA [VIDEO 2 INPUT, SIRCS FUNCTION KEY]

- HA Board -

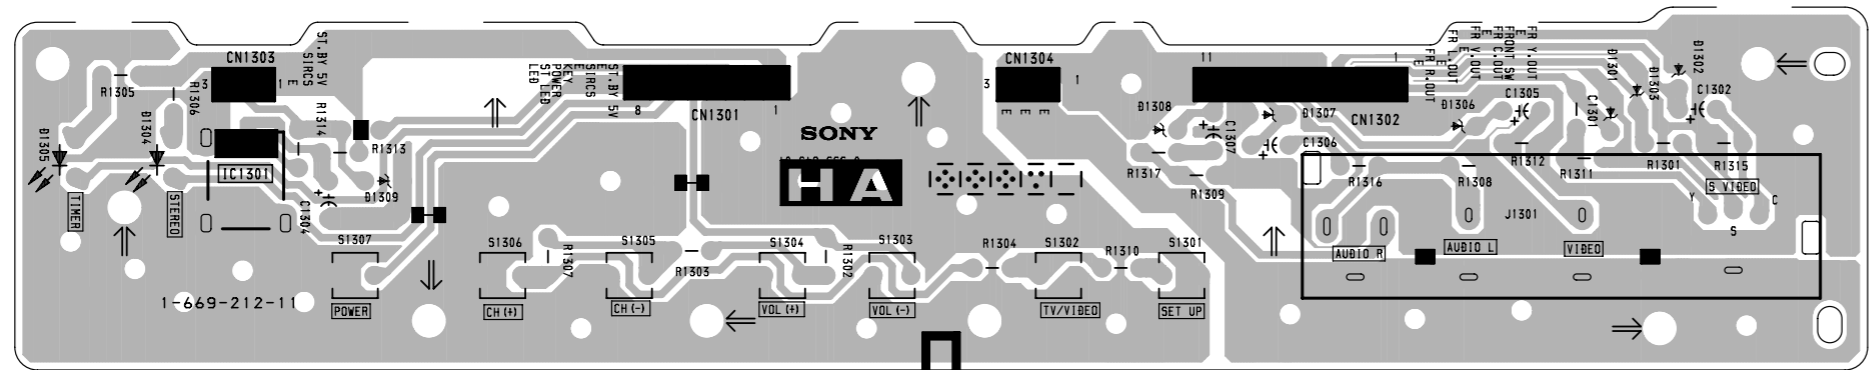


Z BOARD TRANSISTOR VOLTAGE LIST

REF.		VOL.
Q1431	B	0.9
	E	0.5
	C	67.2
Q1432	B	134.4
	E	138.4
	C	67.2
Q1433	B	5.7
	E	5.8
	C	GND
Q1434	B	5.7
	E	5.8
	C	9.0
Q1435	B	2.7
	E	2.1
	C	5.7
Q1436	B	2.7
	E	2.1
	C	9.0

All voltages are in V.


Z BOARD * MARK LIST

	KP-48V75/61V75	KP-53V75
CN1465		2P WHT : S-MICRO

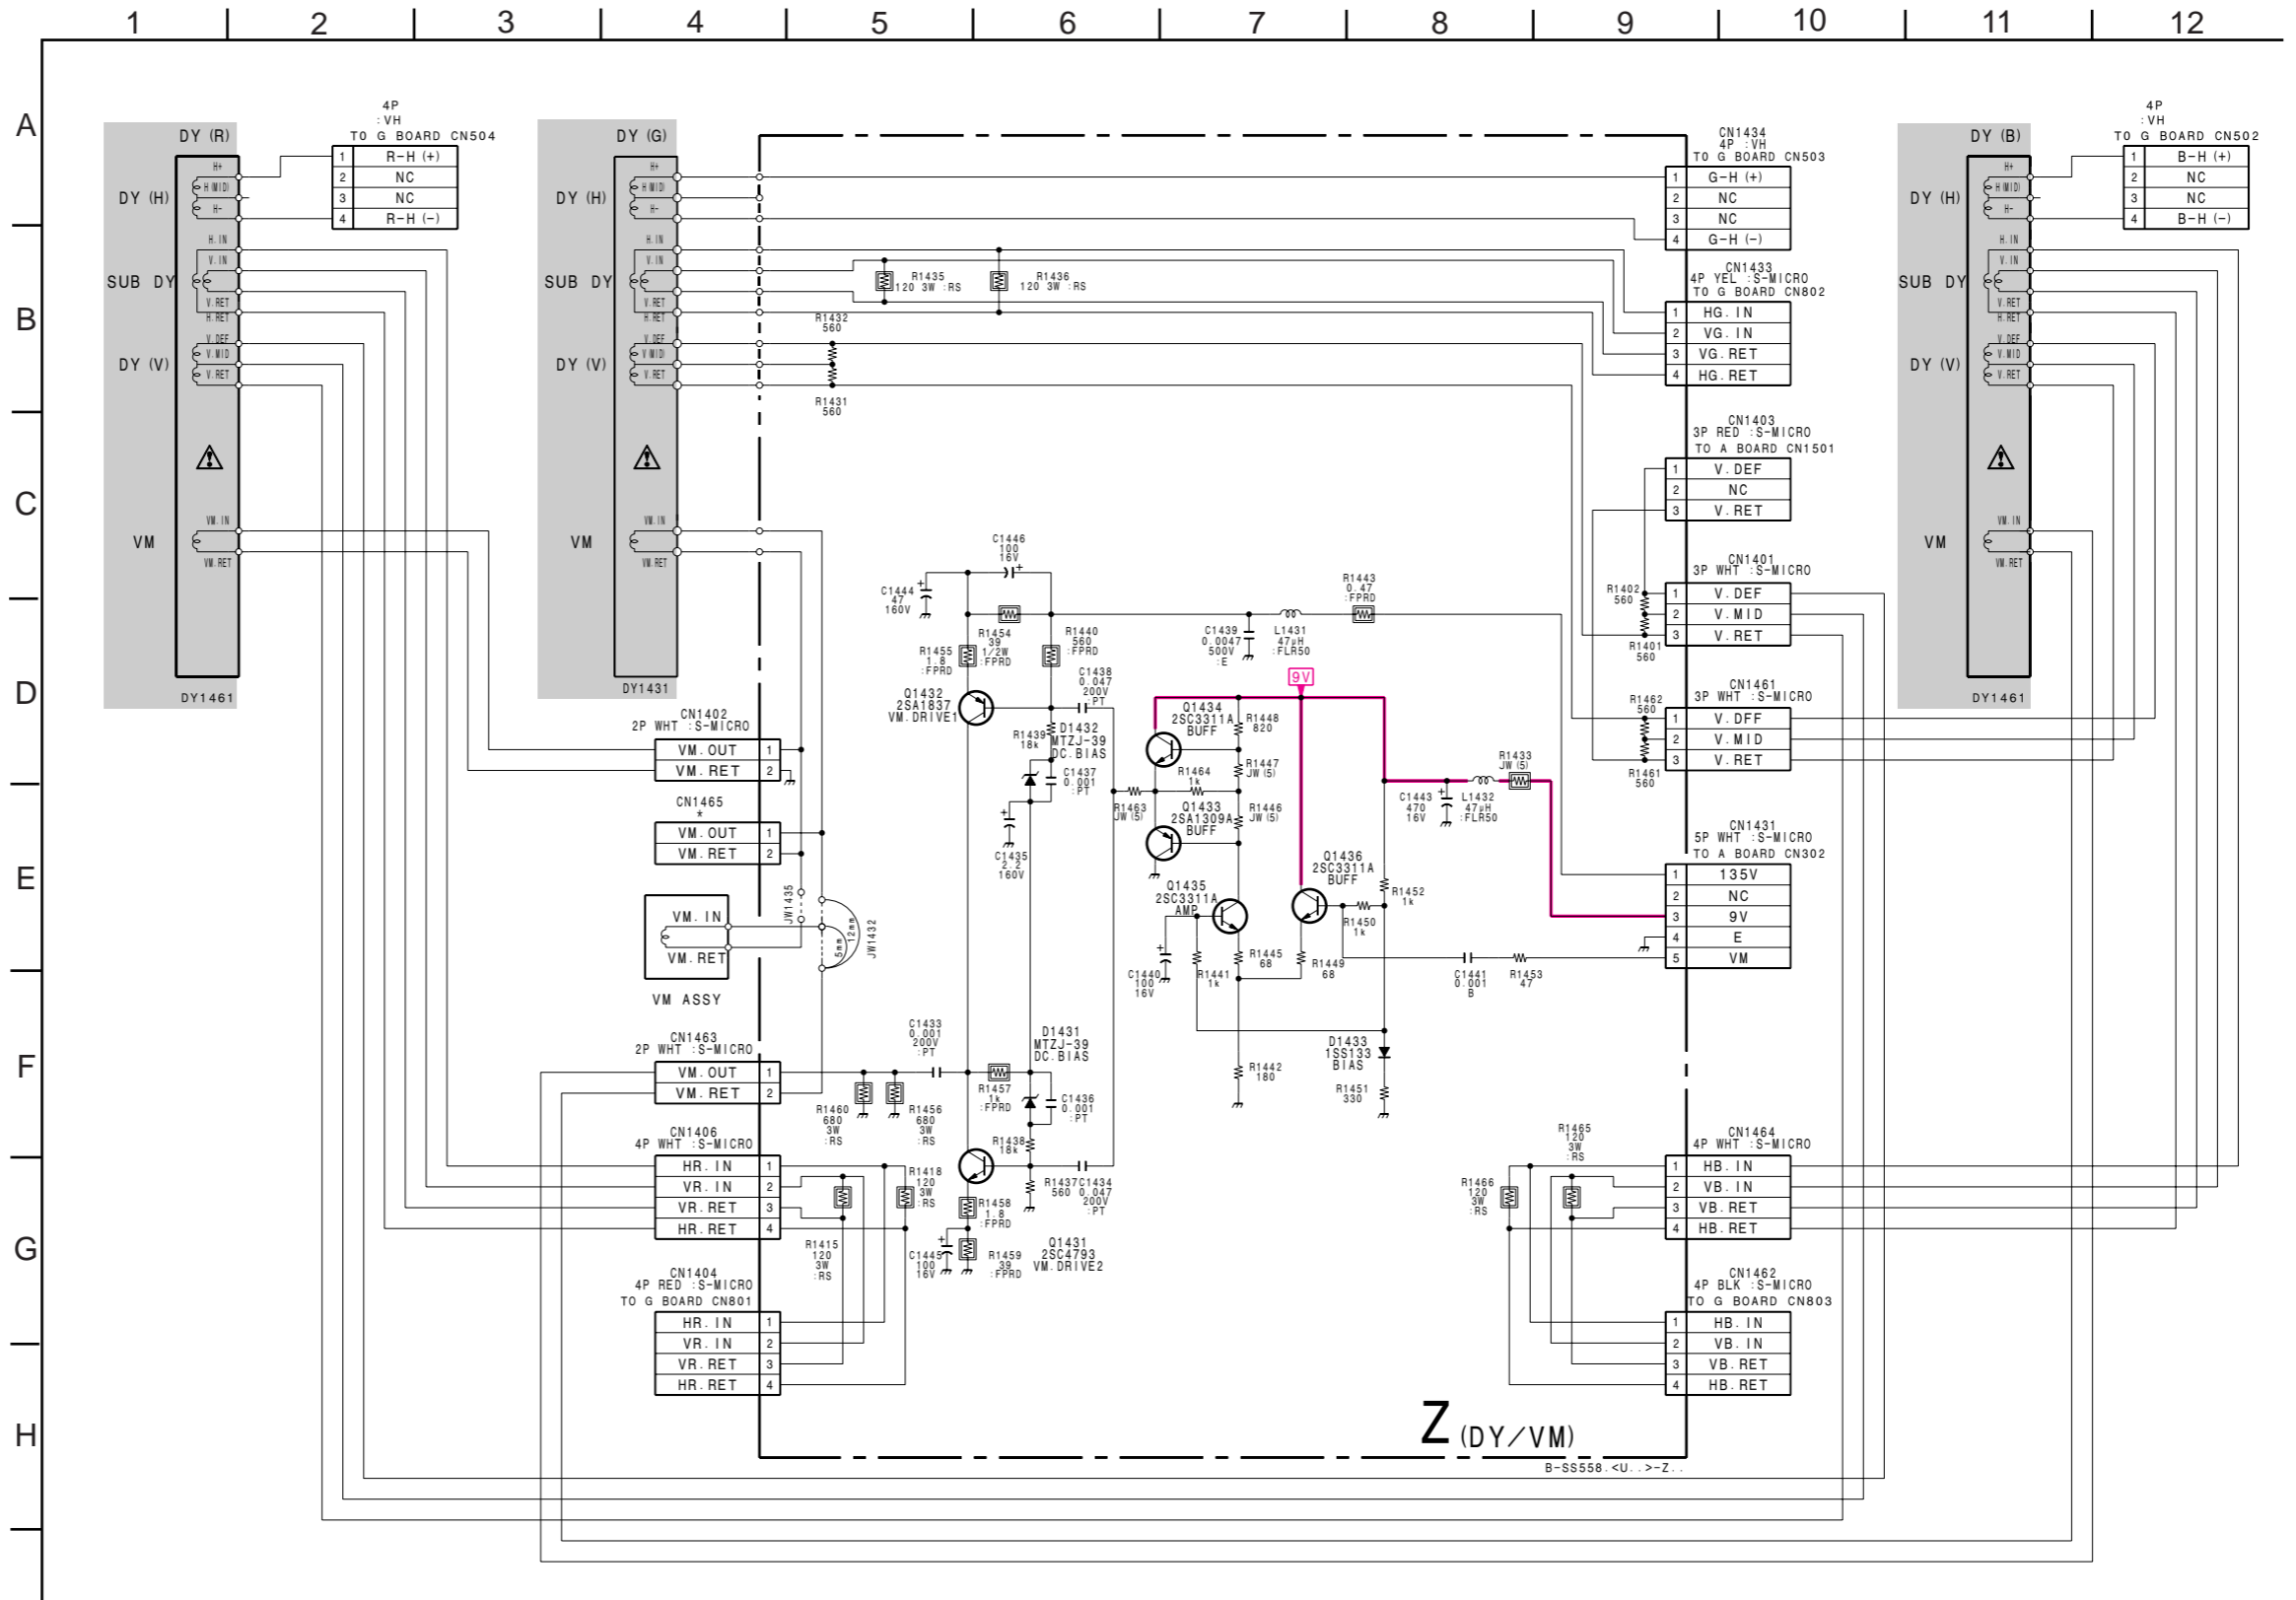


6-5. SEMICONDUCTORS


BA033T




CXA2079Q

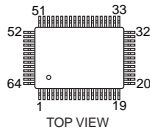


NJM2178M-T2

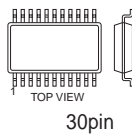


STK392-150

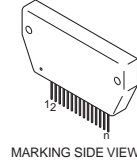


2SA1175-HFE
2SC2785-HFE

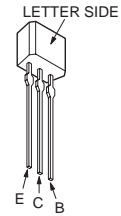


BH3856FS-E2




CXP85112B-613S
CXP85856A-010S




NJM78M05FA
TA7805S
TA7812S




STV9379




2SC2688-LK

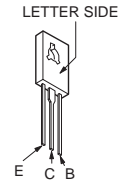


BU4053BCF-T2
CXA1315M
NJM2145M-TE2

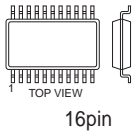


DM-58

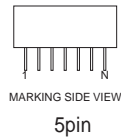


PA0053B





TA8200AH

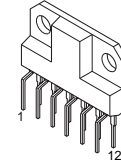

2SC4632LS-CB7




CA0007AM
CA0007AD
NJM2058D
UPC339C

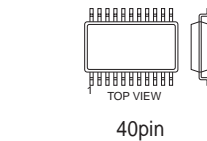


PQ09RD11




TDA6106Q

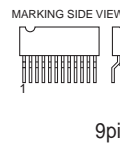


2SC5022-02




CXA2019Q

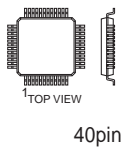


MC7905CT



PST9143NL




UPC4558G2

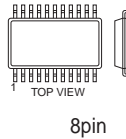


2SD2348 (LBSONY)




CXA2025AS




PM0011AS




SAB9076H/N4
μPD6408/BGF-3BA

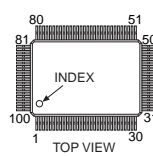


DTA144EKA-T146
DTC143TKA-T146
DTC144EKA
2SA1162-G
2SD601A-Q




CXA2039M-T6
μPC659AGS-E2

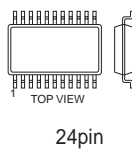


MX0841AB-F




SBX1780-51(10)




IRF614
2SA1837
2SC4793




MA111
UDZ-S-TE-17-5.6
UDZ-TE-17-36B

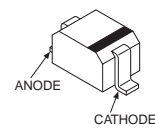


D1NL20
EL1Z
GP08D
RGP02-20EL-6394



D2S4MF





ERC06-15S
ERD29-08J




D1NS4
HZS9.1NB2
MTZJ-T-77-15
MTZJ-T-77-36B
MTZJ-30A
MTZJ-33B
MTZJ-7.5B
RD10ESB2
RD11ES-B2
RD24ES-B1
RD3.6ES-B1
RD39ES-B2
RD5.1ESB2
RD5.6ES-B1
RD5.6ESB2
11ES2


RD43M-B




SLR-325VCT31

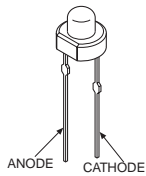


D10SBS4F
D4SBS4-F
LN4SB60
RBA-402LLF-A



1SS133T-77



D10SC4M



SECTION 7
EXPLODED VIEWS

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE:


• Items with no part number and no description are not stocked because they are seldom required for routine service.

• The construction parts of an assembled part are indicated with a collation number in the remark column.

• Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

7-1. COVER (KP-48V75/53V75)

- : +BVTP 4X12 7-685-661-14
- : +BVTP 3X12 7-685-648-79
- ▲ : +BVTP 4X16 7-685-663-71
- : +BVTP 4X12 7-685-661-79

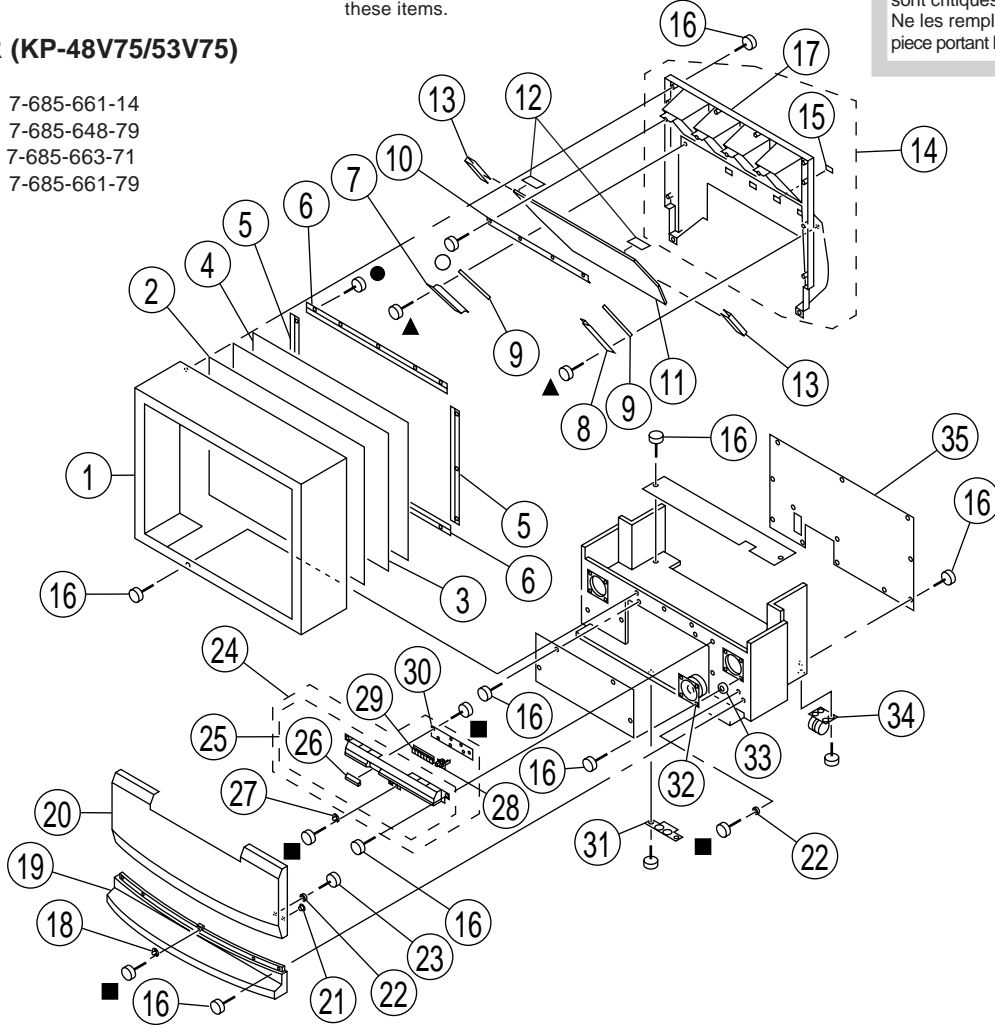


REF. NO.	PART NO.	DESCRIPTION	REMARK
1	\triangle 1-223-925-11	RESISTOR ASSY (HIGH-VOLTAGE)	
2	* 4-057-594-01	BRACKET, MAIN	
3	4-052-894-01	SCREW (4X20), HEAD TAPPING	
4	* A-1316-376-A	G BOARD, COMPLETE (KP-53V75)	
	* A-1316-388-A	G BOARD, COMPLETE (KP-48V75/61V75)	
5	\triangle 1-453-238-11	TRANSFORMER ASSY, FLYBACK (NX/4007//X4A4)	
6	\triangle 1-769-796-11	CORD, POWER (WITH NOISE FILTER)	

REF. NO.	PART NO.	DESCRIPTION	REMARK
7	* A-1298-550-A	A BOARD, COMPLETE	
8	* A-1190-317-A	PD BOARD, COMPLETE	
9	8-598-339-00	TUNER, FSS BTF-LA402	
10	8-598-340-00	TUNER, FSS BTF-WA404	
11	* 1-557-056-41	CABLE, P-P	
12	1-551-448-61	CABLE, P-P	
13	8-598-414-00	ANTENNA SWITCH AS-2F	
14	* A-1373-667-A	U BOARD, COMPLETE	
15	4-057-595-21	TERMINAL BOARD	

7-2. COVER (KP-61V75)

■ : +BVTP 3X12 7-685-648-79

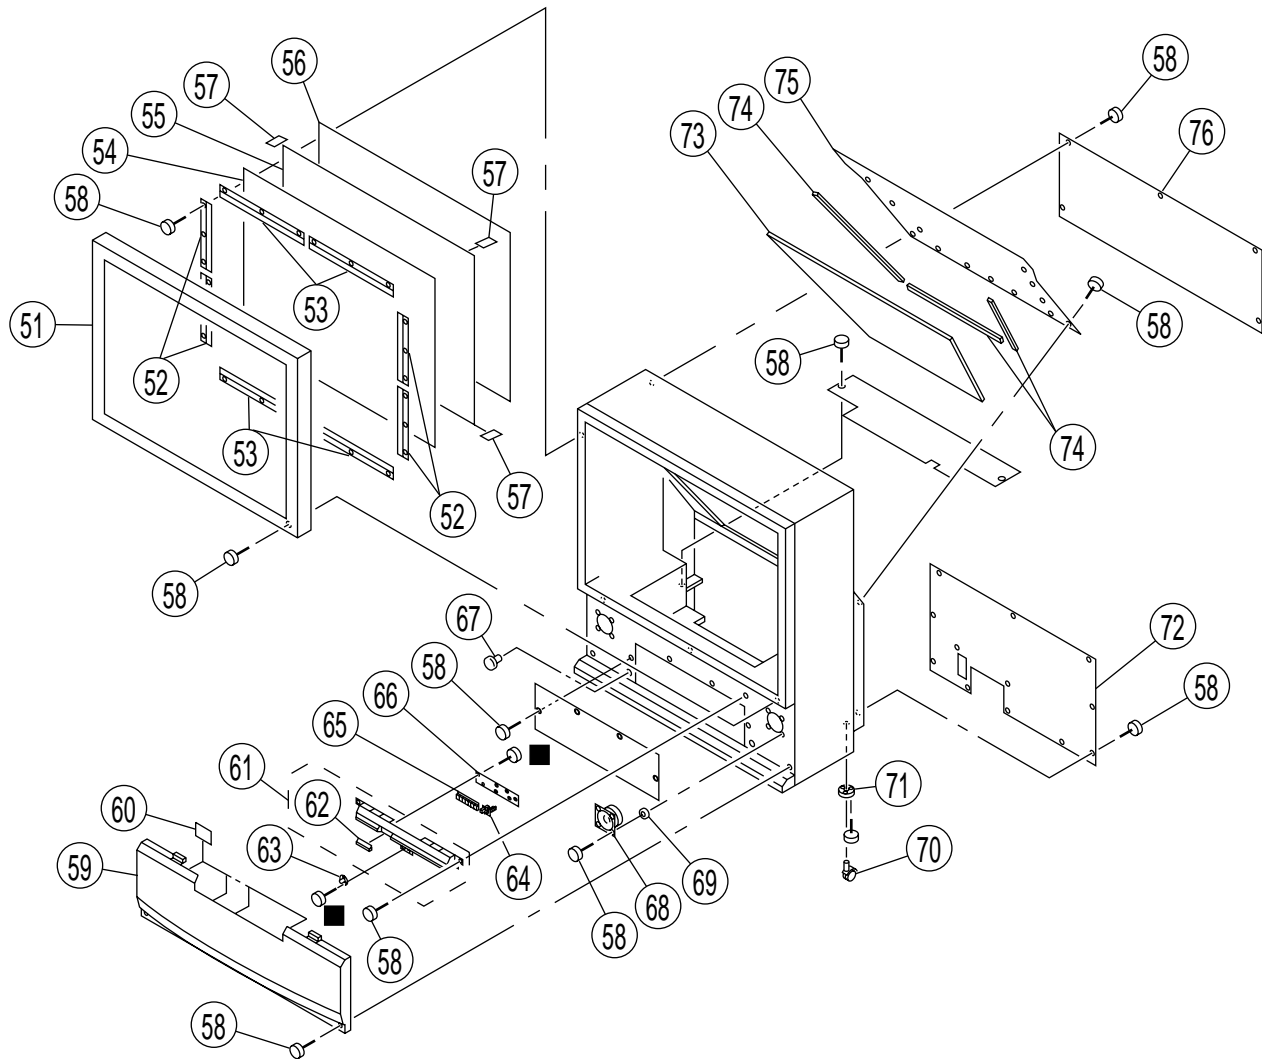


REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
51	△ 1-223-925-11	RESISTOR ASSY (HIGH-VOLTAGE)		57	* A-1298-550-A	A BOARD, COMPLETE	
52	* 4-057-594-01	BRACKET, MAIN		58	* A-1190-317-A	PD BOARD, COMPLETE	
53	4-052-894-01	SCREW (4X20), HEAD TAPPING		59	8-598-339-00	TUNER, FSS BTF-LA402	
54	* A-1316-376-A	G BOARD, COMPLETE (KP-53V75)		60	8-598-340-00	TUNER, FSS BTF-WA404	
	* A-1316-388-A	G BOARD, COMPLETE (KP-48V75/61V75)		61	* 1-557-056-41	CABLE, P-P	
55	△ 1-453-238-11	TRANSFORMER ASSY, FLYBACK (NX/4007//X4A4)		62	1-551-448-61	CABLE, P-P	
56	△ 1-769-796-11	CORD, POWER (WITH NOISE FILTER)		63	8-598-414-00	ANTENNA SWITCH AS-2F	
				64	* A-1373-667-A	U BOARD, COMPLETE	
				65	4-057-595-21	TERMINAL BOARD	

Les composants identifiés par une trame et une marque Δ sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

7-3. CHASSIS (KP-48V75/53V75/61V75)

■ : +BVTP 3X12 7-685-648-79

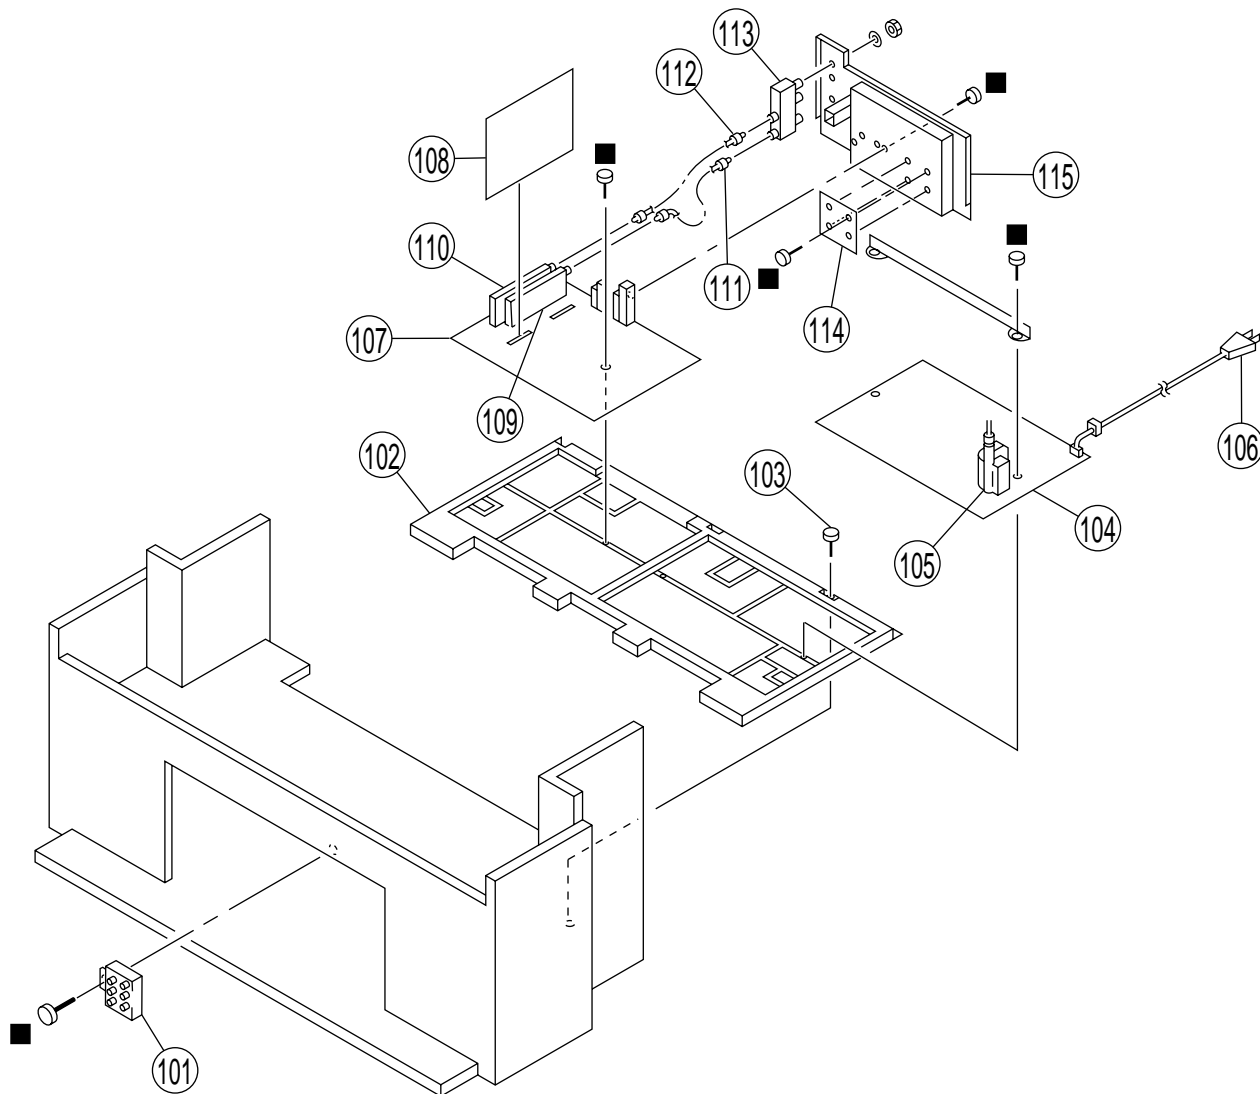


REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
101	Δ 1-223-925-11	RESISTOR ASSY (HIGH-VOLTAGE)		107	* A-1298-550-A	A BOARD, COMPLETE	
102	* 4-057-594-01	BRACKET, MAIN		108	* A-1190-317-A	PD BOARD, COMPLETE	
103	4-052-894-01	SCREW (4X20), HEAD TAPPING		109	8-598-339-00	TUNER, FSS BTF-LA402	
104	* A-1316-376-A	G BOARD, COMPLETE (KP-53V75)		110	8-598-340-00	TUNER, FSS BTF-WA404	
	* A-1316-388-A	G BOARD, COMPLETE (KP-48V75/61V75)		111	* 1-557-056-41	CABLE, P-P	
105	Δ 1-453-238-11	TRANSFORMER ASSY, FLYBACK (NX/4007//X4A4)		112	1-551-448-61	CABLE, P-P	
106	Δ 1-769-796-11	CORD, POWER (WITH NOISE FILTER)		113	8-598-414-00	ANTENNA SWITCH AS-2F	
				114	* A-1373-667-A	U BOARD, COMPLETE	
				115	4-057-595-21	TERMINAL BOARD	

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

7-4. PICTURE TUBE

● : +BVTP 4X12 7-685-661-14

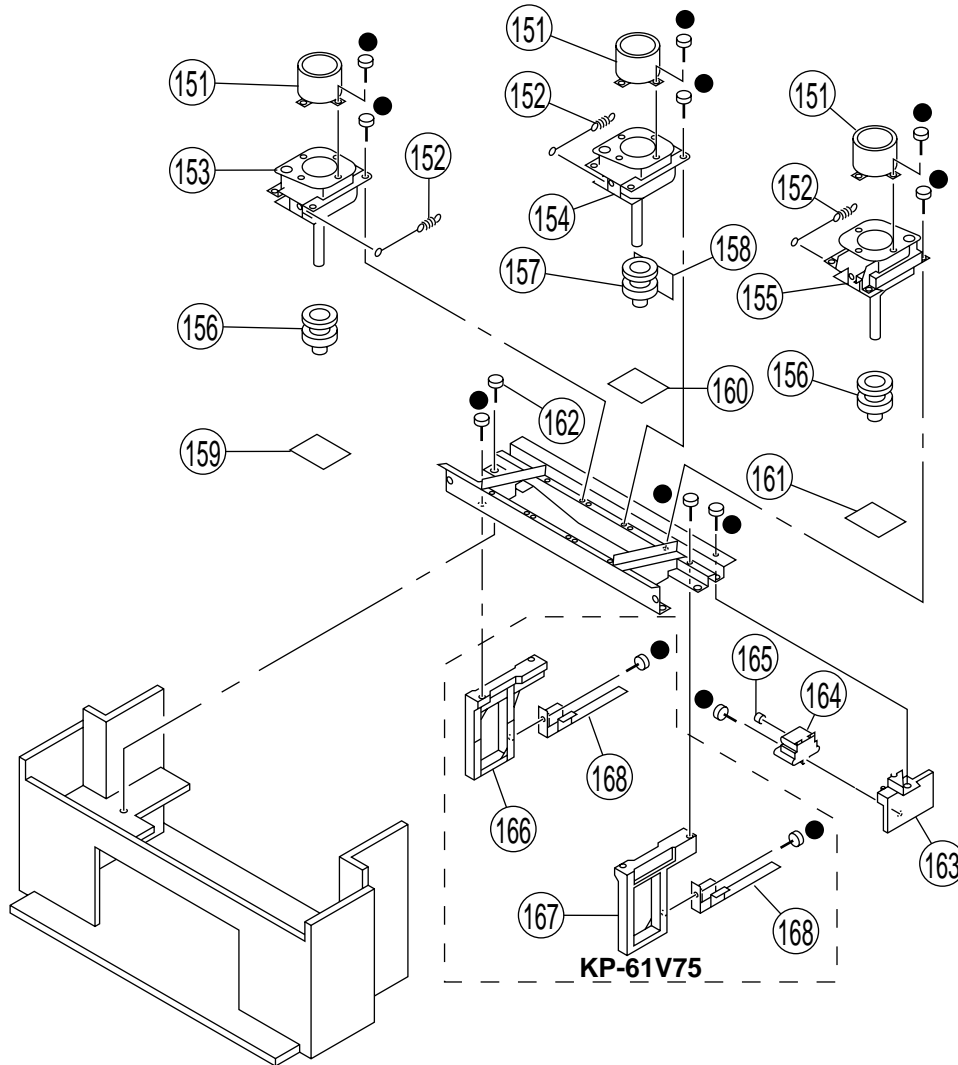

REF. NO.	PART NO.	DESCRIPTION	REMARK
151	4-040-131-21	LENS (LINNIT POINT 6) (KP-61V75)	
	4-056-258-01	LENS (DELTA 78) (KP-48V75/53V75)	
152	4-048-142-01	SPRING, TENSION	
153	Δ A-1501-278-A	COUPLER (R) ASSY, PICTURE TUBE	(KP-53V75)
	Δ 8-733-553-05	PICTURE TUBE 07MXC3 (R) (KP-48V75)	
	Δ 8-733-555-05	PICTURE TUBE 07MXC4 (R) (KP-61V75)	
154	Δ A-1501-279-A	COUPLER (G) ASSY, PICTURE TUBE	(KP-53V75)
	Δ 8-733-537-05	PICTURE TUBE 07MXC2 (G)	(KP-48V75/61V75)
155	Δ A-1501-277-A	COUPLER (B) ASSY, PICTURE TUBE	(KP-53V75)
	Δ 8-733-528-05	PICTURE TUBE 07MAC3 (B)	(GROUND SPRING) (KP-48V75)
	Δ 8-733-529-05	PICTURE TUBE 07MAC4 (B)	(GROUND SPRING) (KP-61V75)

REF. NO.	PART NO.	DESCRIPTION	REMARK
156	Δ 1-451-454-31	DEFLECTION YOKE (R) (B)	
157	Δ 1-451-454-11	DEFLECTION YOKE (G)	
158	* A-1390-826-A	Z BOARD, COMPLETE	
159	* A-1331-804-A	CR BOARD, COMPLETE	
160	* A-1331-805-A	CG BOARD, COMPLETE	
161	* A-1331-806-A	CB BOARD, COMPLETE	
162	4-052-894-01	SCREW (4X20), HEAD TAPPING	
163	* 4-057-596-01	BRACKET, HV	
164	Δ 8-598-955-30	BLOCK ASSY, HIGH-VOLTAGE	
165	4-373-137-01	CAP (Z), RUBBER	
166	4-057-612-01	BOARD (L), SIDE (KP-61V75)	
167	4-057-613-01	BOARD (R), SIDE (KP-61V75)	
168	4-058-638-01	STAY, CHASSIS (KP-61V75)	



SECTION 8 ELECTRICAL PARTS LIST

NOTE:

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

• The components identified by \blacktriangleright in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

• Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

RESISTORS

- All resistors are in ohms
- F : nonflammable

When indicating parts by reference number, please include the board name.

• CAPACITORS
PF : $\mu\mu\text{F}$

• There are some cases the reference number on one board overlaps on the other board. Therefore, when ordering parts by the reference number, please include the board name.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
* A-1298-550-A	A BOARD, COMPLETE *****			C119	1-163-227-11	CERAMIC CHIP 10PF	0.5PF 50V
				C120	1-163-227-11	CERAMIC CHIP 10PF	0.5PF 50V
4-382-854-11	SCREW (M3X10), P, SW (+)			C121	1-163-227-11	CERAMIC CHIP 10PF	0.5PF 50V
4-382-854-11	SCREW (M3X10), P, SW (+)			C124	1-163-031-11	CERAMIC CHIP 0.01 μF	50V
				C202	1-126-935-11	ELECT 470 μF	20% 16V
				C203	1-126-935-11	ELECT 470 μF	20% 16V
				C204	1-164-004-11	CERAMIC CHIP 0.1 μF	10% 25V
		<CAPACITOR>		C205	1-126-964-11	ELECT 10 μF	20% 50V
C001	1-163-031-11	CERAMIC CHIP 0.01 μF	50V	C206	1-126-959-11	ELECT 0.47 μF	20% 50V
C004	1-126-933-11	ELECT 100 μF	20% 16V	C207	1-126-959-11	ELECT 0.47 μF	20% 50V
C005	1-126-964-11	ELECT 10 μF	20% 50V	C208	1-126-959-11	ELECT 0.47 μF	20% 50V
C006	1-163-031-11	CERAMIC CHIP 0.01 μF	50V	C209	1-126-964-11	ELECT 10 μF	20% 50V
C017	1-163-809-11	CERAMIC CHIP 0.047 μF	10% 25V	C210	1-126-964-11	ELECT 10 μF	20% 50V
C018	1-163-259-91	CERAMIC CHIP 220PF	5% 50V	C211	1-126-964-11	ELECT 10 μF	20% 50V
C019	1-126-960-11	ELECT 1 μF	20% 50V	C212	1-126-964-11	ELECT 10 μF	20% 50V
C021	1-163-243-11	CERAMIC CHIP 47PF	5% 50V	C213	1-126-964-11	ELECT 10 μF	20% 50V
C022	1-163-031-11	CERAMIC CHIP 0.01 μF	50V	C214	1-126-964-11	ELECT 10 μF	20% 50V
C024	1-163-037-11	CERAMIC CHIP 0.022 μF	10% 50V	C215	1-126-964-11	ELECT 10 μF	20% 50V
C025	1-163-031-11	CERAMIC CHIP 0.01 μF	50V	C216	1-126-964-11	ELECT 10 μF	20% 50V
C026	1-107-714-11	ELECT 10 μF	20% 16V	C218	1-164-004-11	CERAMIC CHIP 0.1 μF	10% 25V
C027	1-126-935-11	ELECT 470 μF	20% 16V	C219	1-126-964-11	ELECT 10 μF	20% 50V
C028	1-107-714-11	ELECT 10 μF	20% 16V	C220	1-126-964-11	ELECT 10 μF	20% 50V
C032	1-164-004-11	CERAMIC CHIP 0.1 μF	10% 25V	C221	1-126-959-11	ELECT 0.47 μF	20% 50V
C033	1-163-259-91	CERAMIC CHIP 220PF	5% 50V	C222	1-126-959-11	ELECT 0.47 μF	20% 50V
C034	1-163-809-11	CERAMIC CHIP 0.047 μF	10% 25V	C223	1-126-959-11	ELECT 0.47 μF	20% 50V
C035	1-104-664-11	ELECT 47 μF	20% 25V	C224	1-163-031-11	CERAMIC CHIP 0.01 μF	50V
C036	1-163-231-11	CERAMIC CHIP 15PF	5% 50V	C225	1-163-031-11	CERAMIC CHIP 0.01 μF	50V
C037	1-163-237-11	CERAMIC CHIP 27PF	5% 50V	C226	1-126-964-11	ELECT 10 μF	20% 50V
C038	1-126-960-11	ELECT 1 μF	20% 50V	C232	1-126-959-11	ELECT 0.47 μF	20% 50V
C045	1-163-017-00	CERAMIC CHIP 0.0047 μF	10% 50V	C302	1-126-959-11	ELECT 0.47 μF	20% 50V
C046	1-163-031-11	CERAMIC CHIP 0.01 μF	50V	C303	1-163-031-11	CERAMIC CHIP 0.01 μF	50V
C047	1-163-010-11	CERAMIC CHIP 0.0012 μF	10% 50V	C304	1-126-964-11	ELECT 10 μF	20% 50V
C048	1-164-005-11	CERAMIC CHIP 0.47 μF	25V	C305	1-163-231-11	CERAMIC CHIP 15PF	5% 50V
C054	1-163-037-11	CERAMIC CHIP 0.022 μF	10% 50V	C308	1-164-004-11	CERAMIC CHIP 0.1 μF	10% 25V
C057	1-163-259-91	CERAMIC CHIP 220PF	5% 50V	C309	1-126-933-11	ELECT 100 μF	20% 16V
C092	1-163-259-91	CERAMIC CHIP 220PF	5% 50V	C310	1-163-133-00	CERAMIC CHIP 470PF	5% 50V
C107	1-163-031-11	CERAMIC CHIP 0.01 μF	50V	C311	1-115-419-11	CERAMIC CHIP 3300PF	5% 25V
C108	1-104-664-11	ELECT 47 μF	20% 25V	C312	1-126-959-11	ELECT 0.47 μF	20% 50V
C109	1-126-916-11	ELECT 1000 μF	20% 6.3V	C313	1-130-495-00	FILM 0.1 μF	5% 50V
C110	1-163-231-11	CERAMIC CHIP 15PF	5% 50V	C314	1-130-495-00	FILM 0.1 μF	5% 50V
C111	1-163-229-11	CERAMIC CHIP 12PF	5% 50V	C315	1-130-495-00	FILM 0.1 μF	5% 50V
				C316	1-163-021-91	CERAMIC CHIP 0.01 μF	10% 50V



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C317	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	C432	1-128-548-11	ELECT	4700μF 20% 25V
C318	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	C433	1-130-495-00	FILM	0.1μF 5% 50V
C319	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V	C434	1-126-960-11	ELECT	1μF 20% 50V
C320	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V	C435	1-126-968-11	ELECT	100μF 20% 50V
C321	1-126-963-11	ELECT	4.7μF 20% 50V	C436	1-128-550-11	ELECT	2200μF 20% 50V
C322	1-130-495-00	MYLAR	0.1μF 5% 50V	C437	1-126-960-11	ELECT	1μF 20% 50V
C323	1-137-581-11	FILM	0.1μF 5% 100V	C438	1-126-964-11	ELECT	10μF 20% 50V
C324	1-164-182-11	CERAMIC CHIP	0.0033μF 10% 50V	C439	1-126-964-11	ELECT	10μF 20% 50V
C325	1-126-959-11	ELECT	0.47μF 20% 50V	C440	1-126-964-11	ELECT	10μF 20% 50V
C326	1-126-964-11	ELECT	10μF 20% 50V	C441	1-126-964-11	ELECT	10μF 20% 50V
C329	1-163-017-00	CERAMIC CHIP	0.0047μF 10% 50V	C442	1-130-495-00	FILM	0.1μF 5% 50V
C330	1-163-263-11	CERAMIC CHIP	330PF 5% 50V	C1101	1-163-031-11	CERAMIC CHIP	0.01μF 50V
C331	1-126-959-11	ELECT	0.47μF 20% 50V	C1102	1-163-031-11	CERAMIC CHIP	0.01μF 50V
C332	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	C1103	1-126-933-11	ELECT	100μF 20% 16V
C333	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	C1104	1-164-161-11	CERAMIC CHIP	0.0022μF 10% 50V
C334	1-163-275-11	CERAMIC CHIP	0.001μF 5% 50V	C1105	1-126-960-11	ELECT	1μF 20% 50V
C335	1-126-935-11	ELECT	470μF 20% 16V	C1106	1-126-933-11	ELECT	100μF 20% 16V
C337	1-126-960-11	ELECT	1μF 20% 50V	C1107	1-104-664-11	ELECT	47μF 20% 25V
C338	1-126-961-11	ELECT	2.2μF 20% 50V	C1108	1-126-964-11	ELECT	10μF 20% 50V
C339	1-126-959-11	ELECT	0.47μF 20% 50V	C1109	1-126-933-11	ELECT	100μF 20% 16V
C341	1-104-664-11	ELECT	47μF 20% 25V	C1110	1-164-161-11	CERAMIC CHIP	0.0022μF 10% 50V
C342	1-130-495-00	FILM	0.1μF 5% 50V	C1111	1-126-960-11	ELECT	1μF 20% 50V
C344	1-163-251-11	CERAMIC CHIP	100PF 5% 50V	C1112	1-163-031-11	CERAMIC CHIP	0.01μF 50V
C345	1-163-251-11	CERAMIC CHIP	100PF 5% 50V	C1113	1-126-964-11	ELECT	10μF 20% 50V
C349	1-163-245-11	CERAMIC CHIP	56PF 5% 50V	C1114	1-163-031-11	CERAMIC CHIP	0.01μF 50V
C351	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V	C1115	1-163-031-11	CERAMIC CHIP	0.01μF 50V
C401	1-126-964-11	ELECT	10μF 20% 50V	C1116	1-163-031-11	CERAMIC CHIP	0.01μF 50V
C402	1-126-964-11	ELECT	10μF 20% 50V	C1117	1-163-031-11	CERAMIC CHIP	0.01μF 50V
C403	1-137-366-11	FILM	0.0022μF 5% 50V	C1118	1-163-031-11	CERAMIC CHIP	0.01μF 50V
C404	1-137-366-11	FILM	0.0022μF 5% 50V	C1119	1-126-968-11	ELECT	100μF 20% 50V
C405	1-130-495-00	FILM	0.1μF 5% 50V	C1120	1-126-933-11	ELECT	100μF 20% 16V
C406	1-130-495-00	FILM	0.1μF 5% 50V	C1122	1-104-664-11	ELECT	47μF 20% 25V
C407	1-126-960-11	ELECT	1μF 20% 50V	C1124	1-104-664-11	ELECT	47μF 20% 25V
C408	1-137-366-11	FILM	0.0022μF 5% 50V	C1125	1-104-664-11	ELECT	47μF 20% 25V
C409	1-137-366-11	FILM	0.0022μF 5% 50V	C1201	1-126-959-11	ELECT	0.47μF 20% 50V
C410	1-130-495-00	FILM	0.1μF 5% 50V	C1202	1-104-664-11	ELECT	47μF 20% 25V
C411	1-130-495-00	FILM	0.1μF 5% 50V	C1203	1-104-664-11	ELECT	47μF 20% 25V
C412	1-126-933-11	ELECT	100μF 20% 16V	C1204	1-126-959-11	ELECT	0.47μF 20% 50V
C413	1-128-551-11	ELECT	22μF 20% 25V	C1205	1-163-031-11	CERAMIC CHIP	0.01μF 50V
C414	1-163-038-91	CERAMIC CHIP	0.1μF 25V	C1206	1-163-031-11	CERAMIC CHIP	0.01μF 50V
C415	1-126-964-11	ELECT	10μF 20% 50V	C1207	1-163-031-11	CERAMIC CHIP	0.01μF 50V
C416	1-126-964-11	ELECT	10μF 20% 50V	C1208	1-128-551-11	ELECT	22μF 20% 25V
C417	1-126-968-11	ELECT	100μF 20% 50V	C1209	1-126-933-11	ELECT	100μF 20% 16V
C418	1-126-964-11	ELECT	10μF 20% 50V	C1210	1-163-031-11	CERAMIC CHIP	0.01μF 50V
C419	1-163-009-11	CERAMIC CHIP	0.001μF 10% 50V	C1213	1-126-933-11	ELECT	100μF 20% 16V
C420	1-126-969-11	ELECT	220μF 20% 50V	C1501	1-163-009-11	CERAMIC CHIP	0.001μF 10% 50V
C421	1-126-963-11	ELECT	4.7μF 20% 50V	C1502	1-107-504-11	CERAMIC	10PF 0.5PF 500V
C422	1-104-664-11	ELECT	47μF 20% 25V	C1503	1-136-177-00	FILM	1μF 5% 50V
C424	1-126-968-11	ELECT	100μF 20% 50V	C1506	1-126-969-11	ELECT	220μF 20% 50V
C425	1-126-935-11	ELECT	470μF 20% 16V	C1507	1-163-243-11	CERAMIC CHIP	47PF 5% 50V
C426	1-163-031-11	CERAMIC CHIP	0.01μF 50V	C1508	1-137-401-11	FILM	0.22μF 10% 100V
C427	1-126-933-11	ELECT	100μF 20% 16V	C1509	1-163-251-11	CERAMIC CHIP	100PF 5% 50V
C428	1-126-969-11	ELECT	220μF 20% 50V	C1510	1-126-942-61	ELECT	1000μF 20% 25V
C429	1-163-033-91	CERAMIC CHIP	0.022μF 50V	C1511	1-126-942-61	ELECT	1000μF 20% 25V
C430	1-130-495-00	FILM	0.1μF 5% 50V	C1513	1-163-031-11	CERAMIC CHIP	0.01μF 50V
C431	1-128-548-11	ELECT	4700μF 20% 25V	C1514	1-163-031-11	CERAMIC CHIP	0.01μF 50V



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
D238	8-719-110-17	DIODE RD10ESB2		J205	1-774-750-11	JACK BLOCK, PIN	
D241	8-719-991-33	DIODE 1SS133T-77				<CHIP CONDUCTOR>	
D305	8-719-110-17	DIODE RD10ESB2					
D401	8-719-991-33	DIODE 1SS133T-77		JR20	1-216-295-91	CONDUCTOR, CHIP	
D402	8-719-057-00	DIODE UDZ-TE-17-36B		JR21	1-216-295-91	CONDUCTOR, CHIP	
D403	8-719-057-00	DIODE UDZ-TE-17-36B		JR22	1-216-295-91	CONDUCTOR, CHIP	
D404	8-719-991-33	DIODE 1SS133T-77				<COIL>	
D405	8-719-991-33	DIODE 1SS133T-77		L002	1-414-857-11	INDUCTOR 100μH	
D406	8-719-991-33	DIODE 1SS133T-77		L003	1-414-857-11	INDUCTOR 100μH	
D407	8-719-991-33	DIODE 1SS133T-77		L004	1-216-295-91	CONDUCTOR, CHIP	
D408	8-719-991-33	DIODE 1SS133T-77		L005	1-216-295-91	CONDUCTOR, CHIP	
D409	8-719-991-33	DIODE 1SS133T-77		L006	1-414-856-11	INDUCTOR 10μH	
D410	8-719-057-00	DIODE UDZ-TE-17-36B		L007	1-414-857-11	INDUCTOR 100μH	
D411	8-719-929-15	DIODE HZS9.1NB2		L201	1-414-187-11	INDUCTOR 47μH	
D412	8-719-991-33	DIODE 1SS133T-77		L202	1-414-187-11	INDUCTOR 47μH	
D1101	8-719-982-26	DIODE MTZJ-33B		L302	1-414-857-11	INDUCTOR 100μH	
D1501	8-719-109-89	DIODE RD5.6ESB2		L303	1-414-856-11	INDUCTOR 10μH	
D1502	8-719-908-03	DIODE GP08D		L1101	1-414-187-11	INDUCTOR 47μH	
D2101	8-719-991-33	DIODE 1SS133T-77		L1103	1-414-187-11	INDUCTOR 47μH	
D2102	8-719-991-33	DIODE 1SS133T-77		L1104	1-414-187-11	INDUCTOR 47μH	
D2201	8-719-991-33	DIODE 1SS133T-77		L1105	1-414-856-11	INDUCTOR 10μH	
		<FERRITE BEAD>		L1106	1-414-187-11	INDUCTOR 47μH	
FB1102	1-414-135-11	FERRITE 0μH		L1501	1-412-524-11	INDUCTOR 8.2μH	
		<IC>		L1502	1-412-533-21	INDUCTOR 47μH	
IC001	8-752-895-38	IC CXP85856A-010S		L1503	1-412-533-21	INDUCTOR 47μH	
IC002	8-752-861-57	IC CXP85112B-613S		L1601	1-406-975-21	INDUCTOR 0μH	
IC003	8-759-352-91	IC PST9143NL				<IC LINK>	
IC004	8-759-352-91	IC PST9143NL		PS401	1-532-984-11	LINK, IC 2A/90V	
IC007	8-759-518-23	IC X24C04S8				<TRANSISTOR>	
IC201	8-752-081-32	IC CXA2079Q		Q001	8-729-422-27	TRANSISTOR 2SD601A-Q	
IC202	8-759-100-96	IC UPC4558G2		Q002	8-729-027-38	TRANSISTOR DTA144EKA-T146	
IC301	8-752-076-76	IC CXA2025AS		Q003	8-729-027-38	TRANSISTOR DTA144EKA-T146	
IC401	8-759-369-39	IC BH3856FS-E2		Q004	8-729-216-22	TRANSISTOR 2SA1162-G	
IC402	8-759-100-96	IC UPC4558G2		Q005	8-729-216-22	TRANSISTOR 2SA1162-G	
IC403	8-759-100-96	IC UPC4558G2		Q006	8-729-027-38	TRANSISTOR DTA144EKA-T146	
IC404	8-759-168-24	IC TA8200AH		Q007	1-801-806-11	TRANSISTOR DTC144EKA-T146	
IC1101	8-759-231-53	IC TA7805S		Q008	8-729-422-27	TRANSISTOR 2SD601A-Q	
IC1501	8-759-192-71	IC STV9379		Q009	8-729-027-38	TRANSISTOR DTA144EKA-T146	
IC1502	8-759-251-31	IC CA0007AM		Q013	8-729-422-27	TRANSISTOR 2SD601A-Q	
IC1601	8-759-459-99	IC PQ09RD11		Q015	8-729-422-27	TRANSISTOR 2SD601A-Q	
IC1602	8-759-231-53	IC TA7805S		Q016	8-729-422-27	TRANSISTOR 2SD601A-Q	
IC1603	8-759-459-99	IC PQ09RD11		Q017	8-729-422-27	TRANSISTOR 2SD601A-Q	
IC2101	8-759-470-63	IC NJM2145M-TE2		Q201	8-729-422-27	TRANSISTOR 2SD601A-Q	
IC2201	8-759-493-92	IC NJM2178M-T2		Q202	8-729-027-56	TRANSISTOR DTC143TKA-T146	
IC2202	8-759-231-58	IC TA7812S		Q203	8-729-422-27	TRANSISTOR 2SD601A-Q	
		<JACK>		Q204	8-729-216-22	TRANSISTOR 2SA1162-G	
J201	1-774-751-11	TERMINAL BLOCK, S		Q205	8-729-027-56	TRANSISTOR DTC143TKA-T146	
J202	1-774-751-11	TERMINAL BLOCK, S		Q206	8-729-027-56	TRANSISTOR DTC143TKA-T146	
J203	1-774-749-11	JACK BLOCK, PIN		Q207	8-729-027-56	TRANSISTOR DTC143TKA-T146	
J204	1-774-749-11	JACK BLOCK, PIN					



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
Q208	8-729-027-56	TRANSISTOR DTC143TKA-T146		R006	1-216-033-00	RES,CHIP	220 5% 1/10W
Q209	8-729-027-56	TRANSISTOR DTC143TKA-T146		R007	1-216-081-00	RES,CHIP	22K 5% 1/10W
Q210	8-729-422-27	TRANSISTOR 2SD601A-Q		R008	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q211	8-729-422-27	TRANSISTOR 2SD601A-Q		R009	1-216-033-00	RES,CHIP	220 5% 1/10W
Q212	8-729-422-27	TRANSISTOR 2SD601A-Q		R010	1-216-033-00	RES,CHIP	220 5% 1/10W
Q213	8-729-216-22	TRANSISTOR 2SA1162-G		R011	1-216-033-00	RES,CHIP	220 5% 1/10W
Q214	8-729-216-22	TRANSISTOR 2SA1162-G		R012	1-216-033-00	RES,CHIP	220 5% 1/10W
Q215	8-729-422-27	TRANSISTOR 2SD601A-Q		R013	1-216-033-00	RES,CHIP	220 5% 1/10W
Q216	8-729-027-56	TRANSISTOR DTC143TKA-T146		R014	1-216-033-00	RES,CHIP	220 5% 1/10W
Q217	8-729-027-56	TRANSISTOR DTC143TKA-T146		R015	1-216-025-91	RES,CHIP	100 5% 1/10W
Q218	8-729-422-27	TRANSISTOR 2SD601A-Q		R016	1-216-025-91	RES,CHIP	100 5% 1/10W
Q219	8-729-422-27	TRANSISTOR 2SD601A-Q		R017	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
Q220	8-729-422-27	TRANSISTOR 2SD601A-Q		R018	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
Q222	8-729-422-27	TRANSISTOR 2SD601A-Q		R019	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q223	8-729-422-27	TRANSISTOR 2SD601A-Q		R020	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
Q224	8-729-422-27	TRANSISTOR 2SD601A-Q		R021	1-216-089-91	RES,CHIP	47K 5% 1/10W
Q226	8-729-422-27	TRANSISTOR 2SD601A-Q		R022	1-216-033-00	RES,CHIP	220 5% 1/10W
Q301	8-729-216-22	TRANSISTOR 2SA1162-G		R023	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
Q302	8-729-216-22	TRANSISTOR 2SA1162-G		R024	1-216-121-91	RES,CHIP	1M 5% 1/10W
Q303	8-729-422-27	TRANSISTOR 2SD601A-Q		R025	1-216-097-91	RES,CHIP	100K 5% 1/10W
Q304	8-729-422-27	TRANSISTOR 2SD601A-Q		R027	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
Q305	8-729-422-27	TRANSISTOR 2SD601A-Q		R029	1-216-033-00	RES,CHIP	220 5% 1/10W
Q306	8-729-216-22	TRANSISTOR 2SA1162-G		R030	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q307	8-729-422-27	TRANSISTOR 2SD601A-Q		R033	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
Q308	8-729-216-22	TRANSISTOR 2SA1162-G		R034	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q311	8-729-422-27	TRANSISTOR 2SD601A-Q		R035	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
Q312	8-729-422-27	TRANSISTOR 2SD601A-Q		R036	1-216-033-00	RES,CHIP	220 5% 1/10W
Q313	8-729-422-27	TRANSISTOR 2SD601A-Q		R037	1-216-033-00	RES,CHIP	220 5% 1/10W
Q314	8-729-422-27	TRANSISTOR 2SD601A-Q		R038	1-216-089-91	RES,CHIP	47K 5% 1/10W
Q401	8-729-422-27	TRANSISTOR 2SD601A-Q		R039	1-216-089-91	RES,CHIP	47K 5% 1/10W
Q402	1-801-806-11	TRANSISTOR DTC144EKA-T146		R040	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
Q404	8-729-027-38	TRANSISTOR DTA144EKA-T146		R041	1-216-025-91	RES,CHIP	100 5% 1/10W
Q405	8-729-216-22	TRANSISTOR 2SA1162-G		R042	1-216-089-91	RES,CHIP	47K 5% 1/10W
Q406	8-729-216-22	TRANSISTOR 2SA1162-G		R043	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
Q407	8-729-422-27	TRANSISTOR 2SD601A-Q		R045	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q408	8-729-422-27	TRANSISTOR 2SD601A-Q		R046	1-216-049-91	RES,CHIP	1K 5% 1/10W
Q409	8-729-422-27	TRANSISTOR 2SD601A-Q		R047	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
Q1101	1-801-806-11	TRANSISTOR DTC144EKA-T146		R048	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
Q1201	8-729-216-22	TRANSISTOR 2SA1162-G		R050	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q1501	8-729-422-27	TRANSISTOR 2SD601A-Q		R053	1-216-049-91	RES,CHIP	1K 5% 1/10W
Q2101	8-729-422-27	TRANSISTOR 2SD601A-Q		R054	1-216-033-00	RES,CHIP	220 5% 1/10W
Q2102	8-729-422-27	TRANSISTOR 2SD601A-Q		R056	1-216-121-91	RES,CHIP	1M 5% 1/10W
Q2103	8-729-216-22	TRANSISTOR 2SA1162-G		R057	1-216-049-91	RES,CHIP	1K 5% 1/10W
Q2104	8-729-216-22	TRANSISTOR 2SA1162-G		R058	1-216-049-91	RES,CHIP	1K 5% 1/10W
Q2106	8-729-216-22	TRANSISTOR 2SA1162-G		R059	1-216-033-00	RES,CHIP	220 5% 1/10W
Q2107	8-729-216-22	TRANSISTOR 2SA1162-G		R060	1-216-033-00	RES,CHIP	220 5% 1/10W
Q2109	8-729-216-22	TRANSISTOR 2SA1162-G		R061	1-216-049-91	RES,CHIP	1K 5% 1/10W
Q2111	1-801-806-11	TRANSISTOR DTC144EKA-T146		R063	1-216-073-00	RES,CHIP	10K 5% 1/10W
		<RESISTOR>		R064	1-216-049-91	RES,CHIP	1K 5% 1/10W
				R065	1-216-049-91	RES,CHIP	1K 5% 1/10W
R001	1-216-033-00	RES,CHIP	220 5% 1/10W	R066	1-216-049-91	RES,CHIP	1K 5% 1/10W
R002	1-216-033-00	RES,CHIP	220 5% 1/10W	R067	1-216-033-00	RES,CHIP	220 5% 1/10W
R003	1-216-295-91	CONDUCTOR, CHIP		R068	1-216-033-00	RES,CHIP	220 5% 1/10W
R004	1-216-033-00	RES,CHIP	220 5% 1/10W	R069	1-216-033-00	RES,CHIP	220 5% 1/10W
R005	1-216-033-00	RES,CHIP	220 5% 1/10W	R070	1-216-033-00	RES,CHIP	220 5% 1/10W
				R071	1-216-033-00	RES,CHIP	220 5% 1/10W



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R072	1-216-033-00	RES,CHIP	220 5% 1/10W	R173	1-208-769-11	RES,CHIP	300 0.50% 1/10W
R073	1-216-033-00	RES,CHIP	220 5% 1/10W	R201	1-216-022-00	RES,CHIP	75 5% 1/10W
R074	1-216-049-91	RES,CHIP	1K 5% 1/10W	R202	1-216-089-91	RES,CHIP	47K 5% 1/10W
R075	1-216-049-91	RES,CHIP	1K 5% 1/10W	R203	1-216-022-00	RES,CHIP	75 5% 1/10W
R076	1-216-033-00	RES,CHIP	220 5% 1/10W	R205	1-216-089-91	RES,CHIP	47K 5% 1/10W
R077	1-216-121-91	RES,CHIP	1M 5% 1/10W	R206	1-216-022-00	RES,CHIP	75 5% 1/10W
R078	1-216-097-91	RES,CHIP	100K 5% 1/10W	R207	1-216-022-00	RES,CHIP	75 5% 1/10W
R080	1-216-049-91	RES,CHIP	1K 5% 1/10W	R208	1-216-049-91	RES,CHIP	1K 5% 1/10W
R081	1-216-033-00	RES,CHIP	220 5% 1/10W	R209	1-216-089-91	RES,CHIP	47K 5% 1/10W
R084	1-216-073-00	RES,CHIP	10K 5% 1/10W	R210	1-216-113-00	RES,CHIP	470K 5% 1/10W
R085	1-216-097-91	RES,CHIP	100K 5% 1/10W	R211	1-216-113-00	RES,CHIP	470K 5% 1/10W
R086	1-216-033-00	RES,CHIP	220 5% 1/10W	R212	1-216-089-91	RES,CHIP	47K 5% 1/10W
R087	1-216-073-00	RES,CHIP	10K 5% 1/10W	R213	1-216-113-00	RES,CHIP	470K 5% 1/10W
R088	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R214	1-216-113-00	RES,CHIP	470K 5% 1/10W
R090	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R215	1-216-089-91	RES,CHIP	47K 5% 1/10W
R091	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R216	1-216-113-00	RES,CHIP	470K 5% 1/10W
R092	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R217	1-216-113-00	RES,CHIP	470K 5% 1/10W
R099	1-216-037-00	RES,CHIP	330 5% 1/10W	R218	1-216-022-00	RES,CHIP	75 5% 1/10W
R101	1-216-033-00	RES,CHIP	220 5% 1/10W	R219	1-216-113-00	RES,CHIP	470K 5% 1/10W
R106	1-216-033-00	RES,CHIP	220 5% 1/10W	R220	1-216-113-00	RES,CHIP	470K 5% 1/10W
R111	1-216-033-00	RES,CHIP	220 5% 1/10W	R221	1-216-022-00	RES,CHIP	75 5% 1/10W
R112	1-216-033-00	RES,CHIP	220 5% 1/10W	R222	1-216-022-00	RES,CHIP	75 5% 1/10W
R113	1-216-033-00	RES,CHIP	220 5% 1/10W	R223	1-216-022-00	RES,CHIP	75 5% 1/10W
R115	1-216-033-00	RES,CHIP	220 5% 1/10W	R224	1-216-017-91	RES,CHIP	47 5% 1/10W
R117	1-216-033-00	RES,CHIP	220 5% 1/10W	R225	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R118	1-216-033-00	RES,CHIP	220 5% 1/10W	R226	1-216-073-00	RES,CHIP	10K 5% 1/10W
R119	1-216-033-00	RES,CHIP	220 5% 1/10W	R227	1-216-019-00	RES,CHIP	56 5% 1/10W
R120	1-216-033-00	RES,CHIP	220 5% 1/10W	R228	1-216-017-91	RES,CHIP	47 5% 1/10W
R121	1-216-033-00	RES,CHIP	220 5% 1/10W	R229	1-216-049-91	RES,CHIP	1K 5% 1/10W
R122	1-216-033-00	RES,CHIP	220 5% 1/10W	R230	1-216-113-00	RES,CHIP	470K 5% 1/10W
R123	1-216-033-00	RES,CHIP	220 5% 1/10W	R231	1-216-113-00	RES,CHIP	470K 5% 1/10W
R124	1-216-033-00	RES,CHIP	220 5% 1/10W	R232	1-216-041-00	RES,CHIP	470 5% 1/10W
R125	1-216-033-00	RES,CHIP	220 5% 1/10W	R233	1-216-041-00	RES,CHIP	470 5% 1/10W
R126	1-216-033-00	RES,CHIP	220 5% 1/10W	R234	1-216-041-00	RES,CHIP	470 5% 1/10W
R127	1-216-033-00	RES,CHIP	220 5% 1/10W	R235	1-216-041-00	RES,CHIP	470 5% 1/10W
R128	1-216-033-00	RES,CHIP	220 5% 1/10W	R236	1-216-041-00	RES,CHIP	470 5% 1/10W
R129	1-216-033-00	RES,CHIP	220 5% 1/10W	R240	1-216-081-00	RES,CHIP	22K 5% 1/10W
R131	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R241	1-216-041-00	RES,CHIP	470 5% 1/10W
R132	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R242	1-216-081-00	RES,CHIP	22K 5% 1/10W
R133	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R243	1-216-081-00	RES,CHIP	22K 5% 1/10W
R147	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R244	1-208-775-11	RES,CHIP	510 0.50% 1/10W
R148	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R245	1-216-041-00	RES,CHIP	470 5% 1/10W
R149	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R246	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R154	1-216-025-91	RES,CHIP	100 5% 1/10W	R247	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R155	1-216-025-91	RES,CHIP	100 5% 1/10W	R248	1-216-073-00	RES,CHIP	10K 5% 1/10W
R156	1-216-113-00	RES,CHIP	470K 5% 1/10W	R249	1-208-774-11	RES,CHIP	470 0.50% 1/10W
R157	1-216-017-91	RES,CHIP	47 5% 1/10W	R250	1-216-041-00	RES,CHIP	470 5% 1/10W
R158	1-216-113-00	RES,CHIP	470K 5% 1/10W	R251	1-216-041-00	RES,CHIP	470 5% 1/10W
R159	1-216-017-91	RES,CHIP	47 5% 1/10W	R252	1-208-776-11	RES,CHIP	560 0.50% 1/10W
R160	1-216-113-00	RES,CHIP	470K 5% 1/10W	R253	1-208-774-11	RES,CHIP	470 0.50% 1/10W
R161	1-216-017-91	RES,CHIP	47 5% 1/10W	R254	1-208-776-11	RES,CHIP	560 0.50% 1/10W
R163	1-216-035-00	RES,CHIP	270 5% 1/10W	R255	1-216-073-00	RES,CHIP	10K 5% 1/10W
R164	1-216-035-00	RES,CHIP	270 5% 1/10W	R258	1-216-089-91	RES,CHIP	47K 5% 1/10W
R165	1-216-035-00	RES,CHIP	270 5% 1/10W	R260	1-208-774-11	RES,CHIP	470 0.50% 1/10W
R171	1-208-769-11	RES,CHIP	300 0.50% 1/10W	R261	1-216-049-91	RES,CHIP	1K 5% 1/10W
R172	1-208-769-11	RES,CHIP	300 0.50% 1/10W	R262	1-216-049-91	RES,CHIP	1K 5% 1/10W



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R264	1-216-025-91	RES,CHIP	100 5% 1/10W	R352	1-216-059-00	RES,CHIP	2.7K 5% 1/10W
R265	1-216-041-00	RES,CHIP	470 5% 1/10W	R353	1-216-059-00	RES,CHIP	2.7K 5% 1/10W
R266	1-216-045-00	RES,CHIP	680 5% 1/10W	R354	1-216-073-00	RES,CHIP	10K 5% 1/10W
R267	1-216-041-00	RES,CHIP	470 5% 1/10W	R355	1-216-089-91	RES,CHIP	47K 5% 1/10W
R268	1-216-041-00	RES,CHIP	470 5% 1/10W	R356	1-216-025-91	RES,CHIP	100 5% 1/10W
R269	1-216-041-00	RES,CHIP	470 5% 1/10W	R357	1-216-049-91	RES,CHIP	1K 5% 1/10W
R273	1-216-041-00	RES,CHIP	470 5% 1/10W	R361	1-216-041-00	RES,CHIP	470 5% 1/10W
R274	1-216-019-00	RES,CHIP	56 5% 1/10W	R362	1-216-049-91	RES,CHIP	1K 5% 1/10W
R294	1-216-043-91	RES,CHIP	560 5% 1/10W	R363	1-216-077-00	RES,CHIP	15K 5% 1/10W
R295	1-216-073-00	RES,CHIP	10K 5% 1/10W	R364	1-208-783-11	RES,CHIP	1.1K 0.50% 1/10W
R298	1-216-041-00	RES,CHIP	470 5% 1/10W	R365	1-216-081-00	RES,CHIP	22K 5% 1/10W
R299	1-216-041-00	RES,CHIP	470 5% 1/10W	R366	1-216-017-91	RES,CHIP	47 5% 1/10W
R301	1-216-041-00	RES,CHIP	470 5% 1/10W	R367	1-216-083-00	RES,CHIP	27K 5% 1/10W
R302	1-216-049-91	RES,CHIP	1K 5% 1/10W	R368	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R303	1-216-049-91	RES,CHIP	1K 5% 1/10W	R369	1-216-073-00	RES,CHIP	10K 5% 1/10W
R304	1-216-049-91	RES,CHIP	1K 5% 1/10W	R370	1-216-083-00	RES,CHIP	27K 5% 1/10W
R305	1-216-033-00	RES,CHIP	220 5% 1/10W	R371	1-216-077-00	RES,CHIP	15K 5% 1/10W
R306	1-216-025-91	RES,CHIP	100 5% 1/10W	R372	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R307	1-216-049-91	RES,CHIP	1K 5% 1/10W	R373	1-216-079-00	RES,CHIP	18K 5% 1/10W
R308	1-216-017-91	RES,CHIP	47 5% 1/10W	R374	1-216-049-91	RES,CHIP	1K 5% 1/10W
R309	1-216-017-91	RES,CHIP	47 5% 1/10W	R375	1-216-113-00	RES,CHIP	470K 5% 1/10W
R310	1-216-017-91	RES,CHIP	47 5% 1/10W	R376	1-216-129-00	RES,CHIP	2.2M 5% 1/10W
R311	1-216-295-91	CONDUCTOR, CHIP		R377	1-216-073-00	RES,CHIP	10K 5% 1/10W
R314	1-216-033-00	RES,CHIP	220 5% 1/10W	R378	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R315	1-216-033-00	RES,CHIP	220 5% 1/10W	R379	1-216-073-00	RES,CHIP	10K 5% 1/10W
R319	1-216-033-00	RES,CHIP	220 5% 1/10W	R380	1-216-089-91	RES,CHIP	47K 5% 1/10W
R320	1-216-033-00	RES,CHIP	220 5% 1/10W	R381	1-216-097-91	RES,CHIP	100K 5% 1/10W
R321	1-216-395-00	METAL OXIDE	3.3 5% 3W F	R386	1-216-295-91	CONDUCTOR, CHIP	
R322	1-216-077-00	RES,CHIP	15K 5% 1/10W	R402	1-249-389-11	CARBON	4.7 5% 1/4W F
R323	1-216-025-91	RES,CHIP	100 5% 1/10W	R404	1-216-049-91	RES,CHIP	1K 5% 1/10W
R324	1-216-025-91	RES,CHIP	100 5% 1/10W	R405	1-216-073-00	RES,CHIP	10K 5% 1/10W
R325	1-216-025-91	RES,CHIP	100 5% 1/10W	R406	1-216-073-00	RES,CHIP	10K 5% 1/10W
R326	1-208-786-11	RES,CHIP	1.5K 0.50% 1/10W	R407	1-216-025-91	RES,CHIP	100 5% 1/10W
R327	1-216-049-91	RES,CHIP	1K 5% 1/10W	R408	1-216-025-91	RES,CHIP	100 5% 1/10W
R328	1-216-049-91	RES,CHIP	1K 5% 1/10W	R409	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R329	1-216-113-00	RES,CHIP	470K 5% 1/10W	R410	1-216-049-91	RES,CHIP	1K 5% 1/10W
R330	1-216-025-91	RES,CHIP	100 5% 1/10W	R411	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R331	1-216-025-91	RES,CHIP	100 5% 1/10W	R412	1-216-073-00	RES,CHIP	10K 5% 1/10W
R332	1-216-035-00	RES,CHIP	270 5% 1/10W	R413	1-216-073-00	RES,CHIP	10K 5% 1/10W
R333	1-208-810-11	RES,CHIP	15K 0.50% 1/10W	R414	1-216-049-91	RES,CHIP	1K 5% 1/10W
R334	1-216-043-91	RES,CHIP	560 5% 1/10W	R415	1-216-041-00	RES,CHIP	470 5% 1/10W
R335	1-216-033-00	RES,CHIP	220 5% 1/10W	R416	1-249-389-11	CARBON	4.7 5% 1/4W F
R337	1-216-033-00	RES,CHIP	220 5% 1/10W	R417	1-249-402-11	CARBON	56 5% 1/4W F
R338	1-216-033-00	RES,CHIP	220 5% 1/10W	R418	1-216-073-00	RES,CHIP	10K 5% 1/10W
R339	1-216-033-00	RES,CHIP	220 5% 1/10W	R419	1-216-689-11	RES,CHIP	39K 5% 1/10W
R340	1-216-025-91	RES,CHIP	100 5% 1/10W	R420	1-216-049-91	RES,CHIP	1K 5% 1/10W
R342	1-216-025-91	RES,CHIP	100 5% 1/10W	R421	1-216-073-00	RES,CHIP	10K 5% 1/10W
R343	1-216-073-00	RES,CHIP	10K 5% 1/10W	R423	1-216-079-00	RES,CHIP	18K 5% 1/10W
R344	1-216-067-00	RES,CHIP	5.6K 5% 1/10W	R426	1-260-324-11	CARBON	470 5% 1/2W
R345	1-216-109-00	RES,CHIP	330K 5% 1/10W	R428	1-216-033-00	RES,CHIP	220 5% 1/10W
R346	1-216-053-00	RES,CHIP	1.5K 5% 1/10W	R429	1-216-033-00	RES,CHIP	220 5% 1/10W
R347	1-216-049-91	RES,CHIP	1K 5% 1/10W	R430	1-216-295-91	CONDUCTOR, CHIP	
R348	1-216-133-00	RES,CHIP	3.3M 5% 1/10W	R431	1-216-295-91	CONDUCTOR, CHIP	
R349	1-216-049-91	RES,CHIP	1K 5% 1/10W	R432	1-216-081-00	RES,CHIP	22K 5% 1/10W
R350	1-216-049-91	RES,CHIP	1K 5% 1/10W	R433	1-216-081-00	RES,CHIP	22K 5% 1/10W
R351	1-216-061-00	RES,CHIP	3.3K 5% 1/10W	R434	1-216-073-00	RES,CHIP	10K 5% 1/10W



REF. NO.	PART NO.	DESCRIPTION		REMARK	REF. NO.	PART NO.	DESCRIPTION		REMARK
R437	1-216-073-00	RES,CHIP	10K	5% 1/10W	R1501	1-216-351-00	METAL OXIDE	1.5	5% 1W F
R438	1-216-079-00	RES,CHIP	18K	5% 1/10W	R1502	1-208-806-11	RES,CHIP	10K	0.50% 1/10W
R439	1-216-073-00	RES,CHIP	10K	5% 1/10W	R1504	1-208-806-11	RES,CHIP	10K	0.50% 1/10W
R441	1-216-089-91	RES,CHIP	47K	5% 1/10W	R1506	1-215-888-00	METAL OXIDE	220	5% 2W F
R442	1-216-041-00	RES,CHIP	470	5% 1/10W					
R1101	1-216-065-91	RES,CHIP	4.7K	5% 1/10W	R1507	1-216-081-00	RES,CHIP	22K	5% 1/10W
R1102	1-216-083-00	RES,CHIP	27K	5% 1/10W	R1508	1-249-383-11	CARBON	1.5	5% 1/4W F
R1103	1-216-689-11	RES,CHIP	39K	5% 1/10W	R1509	1-208-806-11	RES,CHIP	10K	0.50% 1/10W
R1104	1-216-049-91	RES,CHIP	1K	5% 1/10W	R1510	1-208-806-11	RES,CHIP	10K	0.50% 1/10W
R1105	1-216-689-11	RES,CHIP	39K	5% 1/10W	R1511	1-216-057-00	RES,CHIP	2.2K	5% 1/10W
R1106	1-216-083-00	RES,CHIP	27K	5% 1/10W	R1520	1-216-089-91	RES,CHIP	47K	5% 1/10W
R1107	1-216-065-91	RES,CHIP	4.7K	5% 1/10W	R1522	1-216-089-91	RES,CHIP	47K	5% 1/10W
R1108	1-215-900-11	METAL OXIDE	22K	5% 2W F	R1523	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1201	1-216-041-00	RES,CHIP	470	5% 1/10W	R1524	1-216-097-91	RES,CHIP	100K	5% 1/10W
R1202	1-216-067-00	RES,CHIP	5.6K	5% 1/10W	R1525	1-208-817-11	RES,CHIP	30K	0.50% 1/10W
R1203	1-216-295-91	SHORT	0		R1526	1-208-817-11	RES,CHIP	30K	0.50% 1/10W
R1204	1-216-049-91	RES,CHIP	1K	5% 1/10W	R1527	1-216-097-91	RES,CHIP	100K	5% 1/10W
R1205	1-216-051-00	RES,CHIP	1.2K	5% 1/10W	R1528	1-216-089-91	RES,CHIP	47K	5% 1/10W
R1206	1-216-025-91	RES,CHIP	100	5% 1/10W	R1529	1-216-025-91	RES,CHIP	100	5% 1/10W
R1207	1-216-067-00	RES,CHIP	5.6K	5% 1/10W	R2002	1-216-041-00	RES,CHIP	470	5% 1/10W
R1208	1-216-067-00	RES,CHIP	5.6K	5% 1/10W	R2101	1-216-041-00	RES,CHIP	470	5% 1/10W
R1209	1-216-025-91	RES,CHIP	100	5% 1/10W	R2102	1-216-065-91	RES,CHIP	4.7K	5% 1/10W
R1210	1-216-067-00	RES,CHIP	5.6K	5% 1/10W	R2103	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1211	1-216-049-91	RES,CHIP	1K	5% 1/10W	R2104	1-216-089-91	RES,CHIP	47K	5% 1/10W
R1212	1-216-033-00	RES,CHIP	220	5% 1/10W	R2105	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1213	1-216-025-91	RES,CHIP	100	5% 1/10W	R2106	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1214	1-216-067-00	RES,CHIP	5.6K	5% 1/10W	R2108	1-216-089-91	RES,CHIP	47K	5% 1/10W
R1215	1-216-025-91	RES,CHIP	100	5% 1/10W	R2109	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1216	1-216-051-00	RES,CHIP	1.2K	5% 1/10W	R2110	1-216-057-00	RES,CHIP	2.2K	5% 1/10W
R1217	1-216-041-00	RES,CHIP	470	5% 1/10W	R2112	1-216-105-91	RES,CHIP	220K	5% 1/10W
R1218	1-216-049-91	RES,CHIP	1K	5% 1/10W	R2113	1-216-097-91	RES,CHIP	100K	5% 1/10W
R1220	1-216-025-91	RES,CHIP	100	5% 1/10W	R2114	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1221	1-216-025-91	RES,CHIP	100	5% 1/10W	R2115	1-216-065-91	RES,CHIP	4.7K	5% 1/10W
R1223	1-216-033-00	RES,CHIP	220	5% 1/10W	R2117	1-216-089-91	RES,CHIP	47K	5% 1/10W
R1225	1-216-025-91	RES,CHIP	100	5% 1/10W	R2118	1-216-025-91	RES,CHIP	100	5% 1/10W
R1226	1-216-067-00	RES,CHIP	5.6K	5% 1/10W	R2201	1-216-077-00	RES,CHIP	15K	5% 1/10W
R1227	1-216-067-00	RES,CHIP	5.6K	5% 1/10W	R2202	1-216-077-00	RES,CHIP	15K	5% 1/10W
R1228	1-216-025-91	RES,CHIP	100	5% 1/10W	R2203	1-216-081-00	RES,CHIP	22K	5% 1/10W
R1229	1-216-067-00	RES,CHIP	5.6K	5% 1/10W	R2204	1-216-081-00	RES,CHIP	22K	5% 1/10W
R1230	1-216-025-91	RES,CHIP	100	5% 1/10W	R2205	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1231	1-216-025-91	RES,CHIP	100	5% 1/10W	R2206	1-208-831-11	RES,CHIP	110K	0.50% 1/10W
R1232	1-216-025-91	RES,CHIP	100	5% 1/10W	R2207	1-216-053-00	RES,CHIP	1.5K	5% 1/10W
R1233	1-216-041-00	RES,CHIP	470	5% 1/10W	R2208	1-208-797-11	RES,CHIP	4.3K	0.50% 1/10W
R1234	1-216-025-91	RES,CHIP	100	5% 1/10W	R2209	1-208-825-11	RES,CHIP	62K	0.50% 1/10W
R1235	1-216-025-91	RES,CHIP	100	5% 1/10W	R2210	1-216-085-00	RES,CHIP	33K	5% 1/10W
R1236	1-216-067-00	RES,CHIP	5.6K	5% 1/10W	R2211	1-216-089-91	RES,CHIP	47K	5% 1/10W
R1237	1-216-025-91	RES,CHIP	100	5% 1/10W	R2212	1-216-063-91	RES,CHIP	3.9K	5% 1/10W
R1238	1-216-067-00	RES,CHIP	5.6K	5% 1/10W	R2213	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1239	1-216-025-91	RES,CHIP	100	5% 1/10W	R2214	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1240	1-216-025-91	RES,CHIP	100	5% 1/10W	R2215	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1241	1-216-049-91	RES,CHIP	1K	5% 1/10W	R2216	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1242	1-216-067-00	RES,CHIP	5.6K	5% 1/10W	R2217	1-216-097-91	RES,CHIP	100K	5% 1/10W
R1243	1-216-025-91	RES,CHIP	100	5% 1/10W	R2218	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1244	1-216-067-00	RES,CHIP	5.6K	5% 1/10W	R2219	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1245	1-216-025-91	RES,CHIP	100	5% 1/10W	R2220	1-216-097-91	RES,CHIP	100K	5% 1/10W
R1251	1-216-067-00	RES,CHIP	5.6K	5% 1/10W	R2221	1-216-073-00	RES,CHIP	10K	5% 1/10W
					R2222	1-216-097-91	RES,CHIP	100K	5% 1/10W



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R2223	1-216-073-00	RES,CHIP	10K 5% 1/10W	C3016	1-163-038-91	CERAMIC CHIP	0.1μF 25V
R2224	1-216-073-00	RES,CHIP	10K 5% 1/10W	C3018	1-126-934-11	ELECT	220μF 20% 16V
R2225	1-260-324-11	CARBON	470 5% 1/2W	C3019	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V
		<RELAY>		C3020	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V
RY401	1-755-028-11	RELAY		C3021	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V
RY402	1-755-028-11	RELAY					
		<TERMINAL BOARD>		C3022	1-163-259-91	CERAMIC CHIP	220PF 5% 50V
TB201	1-694-303-11	TERMINAL, PUSH		C3023	1-126-964-11	ELECT	10μF 20% 50V
		<THERMISTOR>		C3024	1-126-933-11	ELECT	100μF 20% 16V
TH1501	1-800-193-00	THERMISTOR		C3025	1-163-038-91	CERAMIC CHIP	0.1μF 25V
		<TUNER>		C3026	1-163-038-91	CERAMIC CHIP	0.1μF 25V
TU1101	8-598-340-00	TUNER, FSS BTF-WA404					
TU1102	8-598-339-00	TUNER, FSS BTF-LA402		C3027	1-104-664-11	ELECT	47μF 20% 25V
		<CRYSTAL>		C3028	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V
X001	1-577-358-21	VIBRATOR, CERAMIC		C3029	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V
X002	1-578-774-11	VIBRATOR, CRYSTAL		C3030	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V
X301	1-567-505-11	OSCILLATOR, CRYSTAL		C3031	1-104-664-11	ELECT	47μF 20% 25V
X304	1-577-611-11	OSCILALTOR, CERAMIC					
X3001	1-577-611-11	OSCILALTOR, CERAMIC		C3033	1-126-964-11	ELECT	10μF 20% 50V
				C3034	1-163-038-91	CERAMIC CHIP	0.1μF 25V
X3002	1-567-505-11	OSCILLATOR, CRYSTAL		C3035	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V
X3201	1-577-611-11	OSCILALTOR, CERAMIC		C3201	1-104-664-11	ELECT	47μF 20% 25V
X3202	1-567-505-11	OSCILLATOR, CRYSTAL		C3202	1-163-038-91	CERAMIC CHIP	0.1μF 25V
X3401	1-767-882-21	VIBRATOR, CRYSTAL					
				C3204	1-104-664-11	ELECT	47μF 20% 25V
				C3205	1-163-038-91	CERAMIC CHIP	0.1μF 25V
				C3206	1-163-038-91	CERAMIC CHIP	0.1μF 25V
				C3207	1-163-251-11	CERAMIC CHIP	100PF 5% 50V
				C3208	1-164-489-11	CERAMIC CHIP	0.22μF 10% 16V
				C3209	1-163-017-00	CERAMIC CHIP	0.0047μF 10% 50V
				C3210	1-164-505-11	CERAMIC CHIP	2.2μF 16V
				C3211	1-163-005-11	CERAMIC CHIP	470PF 10% 50V
				C3212	1-163-005-11	CERAMIC CHIP	470PF 10% 50V
				C3214	1-104-664-11	ELECT	47μF 20% 25V
				C3215	1-163-227-11	CERAMIC CHIP	10PF 0.5PF 50V
				C3216	1-164-005-11	CERAMIC CHIP	0.47μF 16V
				C3217	1-163-005-11	CERAMIC CHIP	470PF 10% 50V
				C3218	1-126-960-11	ELECT	1μF 20% 50V
				C3219	1-164-005-11	CERAMIC CHIP	0.47μF 16V
				C3220	1-126-934-11	ELECT	220μF 20% 16V
				C3221	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V
				C3222	1-163-038-91	CERAMIC CHIP	0.1μF 25V
				C3223	1-163-229-11	CERAMIC CHIP	12PF 5% 50V
				C3224	1-163-038-91	CERAMIC CHIP	0.1μF 25V
				C3225	1-164-346-11	CERAMIC CHIP	1μF 16V
				C3226	1-126-933-11	ELECT	100μF 20% 16V
				C3227	1-126-934-11	ELECT	220μF 20% 16V
				C3228	1-163-005-11	CERAMIC CHIP	470PF 10% 50V
				C3229	1-163-005-11	CERAMIC CHIP	470PF 10% 50V
				C3231	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V
				C3232	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V
				C3233	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V
				C3235	1-163-038-91	CERAMIC CHIP	0.1μF 25V
				C3236	1-163-038-91	CERAMIC CHIP	0.1μF 25V
				C3237	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V
				C3238	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V
				C3239	1-163-038-91	CERAMIC CHIP	0.1μF 25V
				C3240	1-163-038-91	CERAMIC CHIP	0.1μF 25V
				C3241	1-164-004-11	CERAMIC CHIP	0.1μF 10% 25V
				C3242	1-163-038-91	CERAMIC CHIP	0.1μF 25V

* A-1190-317-A PD BOARD, COMPLETE

<CAPACITOR>



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK				
C3243	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3423	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	
C3244	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V	C3424	1-163-038-91	CERAMIC CHIP	0.1μF	25V	
C3245	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V	C3425	1-163-038-91	CERAMIC CHIP	0.1μF	25V	
C3246	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V	C3426	1-104-664-11	ELECT	47μF	20%	25V
C3247	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3427	1-163-038-91	CERAMIC CHIP	0.1μF	25V		
C3248	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3428	1-126-933-11	ELECT	100μF	20%	16V	
C3249	1-164-346-11	CERAMIC CHIP	1μF	16V	C3429	1-126-935-11	ELECT	470μF	20%	6.3V	
C3250	1-164-346-11	CERAMIC CHIP	1μF	16V	C3430	1-126-933-11	ELECT	100μF	20%	16V	
C3251	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3431	1-163-038-91	CERAMIC CHIP	0.1μF	25V		
C3252	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3432	1-163-038-91	CERAMIC CHIP	0.1μF	25V		
C3253	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3433	1-126-933-11	ELECT	100μF	20%	16V	
C3254	1-164-346-11	CERAMIC CHIP	1μF	16V	C3434	1-163-038-91	CERAMIC CHIP	0.1μF	25V		
C3255	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3435	1-163-038-91	CERAMIC CHIP	0.1μF	25V		
C3256	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3437	1-163-038-91	CERAMIC CHIP	0.1μF	25V		
C3257	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3440	1-163-038-91	CERAMIC CHIP	0.1μF	25V		
C3258	1-164-346-11	CERAMIC CHIP	1μF	16V	C3441	1-126-964-11	ELECT	10μF	20%	50V	
C3259	1-164-346-11	CERAMIC CHIP	1μF	16V	C3442	1-126-964-11	ELECT	10μF	20%	50V	
C3260	1-163-005-11	CERAMIC CHIP	470PF	10%	50V	C3443	1-163-038-91	CERAMIC CHIP	0.1μF	25V	
C3261	1-163-259-91	CERAMIC CHIP	220PF	5%	50V	C3445	1-163-038-91	CERAMIC CHIP	0.1μF	25V	
C3262	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3446	1-126-964-11	ELECT	10μF	20%	50V	
C3263	1-126-964-11	ELECT	10μF	20%	50V	C3447	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C3264	1-104-664-11	ELECT	47μF	20%	25V	C3448	1-163-038-91	CERAMIC CHIP	0.1μF	25V	
C3267	1-163-245-11	CERAMIC CHIP	56PF	5%	50V	C3450	1-109-982-11	CERAMIC CHIP	1μF	10%	10V
C3268	1-104-664-11	ELECT	47μF	20%	25V	C3451	1-163-038-91	CERAMIC CHIP	0.1μF	25V	
C3269	1-104-664-11	ELECT	47μF	20%	25V	C3452	1-163-231-11	CERAMIC CHIP	15PF	5%	50V
C3270	1-126-933-11	ELECT	100μF	20%	16V	C3453	1-126-964-11	ELECT	10μF	20%	50V
C3271	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3454	1-126-964-11	ELECT	10μF	20%	50V	
C3272	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V	C3455	1-163-038-91	CERAMIC CHIP	0.1μF	25V	
C3283	1-126-963-11	ELECT	4.7μF	20%	50V	C3456	1-126-964-11	ELECT	10μF	20%	50V
C3284	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V	C3457	1-163-231-11	CERAMIC CHIP	15PF	5%	50V
C3285	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3458	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V	
C3286	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3459	1-104-664-11	ELECT	47μF	20%	25V	
C3287	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V	C3460	1-104-664-11	ELECT	47μF	20%	25V
C3288	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3461	1-163-235-11	CERAMIC CHIP	22PF	5%	50V	
C3289	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V	C3462	1-163-038-91	CERAMIC CHIP	0.1μF	25V	
C3290	1-104-664-11	ELECT	47μF	20%	25V	C3463	1-163-038-91	CERAMIC CHIP	0.1μF	25V	
C3292	1-104-664-11	ELECT	47μF	20%	25V	C3464	1-163-038-91	CERAMIC CHIP	0.1μF	25V	
C3401	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V	C3465	1-163-038-91	CERAMIC CHIP	0.1μF	25V	
C3402	1-163-131-00	CERAMIC CHIP	390PF	5%	50V	C3466	1-126-916-11	ELECT	1000μF	20%	6.3V
C3403	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3467	1-163-038-91	CERAMIC CHIP	0.1μF	25V		
C3404	1-163-235-11	CERAMIC CHIP	22PF	5%	50V	C3468	1-104-760-11	CERAMIC CHIP	0.047μF	10%	50V
C3405	1-163-235-11	CERAMIC CHIP	22PF	5%	50V	C3469	1-104-664-11	ELECT	47μF	20%	25V
C3406	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V	C3470	1-104-664-11	ELECT	47μF	20%	25V
C3407	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3471	1-163-038-91	CERAMIC CHIP	0.1μF	25V		
C3410	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3472	1-163-038-91	CERAMIC CHIP	0.1μF	25V		
C3411	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3473	1-126-933-11	ELECT	100μF	20%	16V	
C3413	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3474	1-163-038-91	CERAMIC CHIP	0.1μF	25V		
C3414	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3475	1-163-038-91	CERAMIC CHIP	0.1μF	25V		
C3415	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3476	1-104-664-11	ELECT	47μF	20%	25V	
C3416	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3478	1-163-231-11	CERAMIC CHIP	15PF	5%	50V	
C3417	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3479	1-163-231-11	CERAMIC CHIP	15PF	5%	50V	
C3418	1-163-038-91	CERAMIC CHIP	0.1μF	25V	C3480	1-126-933-11	ELECT	100μF	20%	16V	
C3419	1-163-038-91	CERAMIC CHIP	0.1μF	25V	<CONNECTOR>						
C3420	1-163-038-91	CERAMIC CHIP	0.1μF	25V	CN3051	1-573-301-21	CONNECTOR, BOARD TO BOARD	20P			
C3421	1-163-038-91	CERAMIC CHIP	0.1μF	25V							
C3422	1-126-964-11	ELECT	10μF	20%	50V						



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
CN3401	1-770-156-21	CONNECTOR, BOARD TO BOARD 8P		IC3202	8-752-086-80	IC CXA2019AQ-T4	
		<DIODE>		IC3203	8-759-498-32	IC SAB9076H/N4	
D3003	8-719-404-49	DIODE MA111		IC3204	8-759-932-69	IC BU4053BCF-T2	
D3051	8-719-054-26	DIODE UDZ-S-TE-17-5.6		IC3205	8-759-932-69	IC BU4053BCF-T2	
D3052	8-719-054-26	DIODE UDZ-S-TE-17-5.6		IC3402	8-759-473-05	IC UPD424210LE-60-E2	
D3201	8-719-404-49	DIODE MA111		IC3403	8-759-161-24	IC UPC659AGS-E2	
D3202	8-719-404-49	DIODE MA111		IC3404	8-759-536-12	IC UPD64081BGF-3BA	
D3205	8-719-404-49	DIODE MA111		IC3405	8-759-445-59	IC BA033T	
D3401	8-719-404-49	DIODE MA111		IC3407	8-759-701-75	IC NJM7805FA	
		<FERRITE BEAD>				<COIL>	
FB3203	1-414-135-11	FERRITE	0μH	L3001	1-414-187-11	INDUCTOR	47μH
FB3204	1-414-135-11	FERRITE	0μH	L3002	1-414-187-11	INDUCTOR	47μH
FB3205	1-414-135-11	FERRITE	0μH	L3003	1-414-187-11	INDUCTOR	47μH
FB3206	1-414-135-11	FERRITE	0μH	L3004	1-414-187-11	INDUCTOR	47μH
FB3207	1-414-135-11	FERRITE	0μH	L3005	1-414-187-11	INDUCTOR	47μH
FB3208	1-414-135-11	FERRITE	0μH	L3201	1-414-187-11	INDUCTOR	47μH
FB3209	1-414-135-11	FERRITE	0μH	L3202	1-414-187-11	INDUCTOR	47μH
FB3210	1-414-135-11	FERRITE	0μH	L3203	1-414-187-11	INDUCTOR	47μH
FB3211	1-414-135-11	FERRITE	0μH	L3204	1-414-187-11	INDUCTOR	47μH
FB3212	1-414-135-11	FERRITE	0μH	L3205	1-414-187-11	INDUCTOR	47μH
FB3213	1-414-135-11	FERRITE	0μH	L3206	1-414-187-11	INDUCTOR	47μH
FB3214	1-414-135-11	FERRITE	0μH	L3207	1-414-187-11	INDUCTOR	47μH
FB3215	1-414-135-11	FERRITE	0μH	L3401	1-414-181-11	INDUCTOR	4.7μH
FB3216	1-414-135-11	FERRITE	0μH	L3402	1-414-187-11	INDUCTOR	47μH
FB3401	1-414-135-11	FERRITE	0μH	L3403	1-414-187-11	INDUCTOR	47μH
FB3402	1-414-135-11	FERRITE	0μH	L3404	1-414-187-11	INDUCTOR	47μH
FB3403	1-414-135-11	FERRITE	0μH	L3405	1-414-187-11	INDUCTOR	47μH
FB3404	1-414-135-11	FERRITE	0μH	L3406	1-414-187-11	INDUCTOR	47μH
FB3405	1-414-135-11	FERRITE	0μH	L3407	1-414-187-11	INDUCTOR	47μH
FB3406	1-414-135-11	FERRITE	0μH	L3408	1-414-187-11	INDUCTOR	47μH
FB3407	1-414-135-11	FERRITE	0μH	L3409	1-414-187-11	INDUCTOR	47μH
FB3408	1-414-135-11	FERRITE	0μH	L3410	1-414-187-11	INDUCTOR	47μH
FB3409	1-414-135-11	FERRITE	0μH			<TRANSISTOR>	
FB3411	1-414-135-11	FERRITE	0μH	Q3001	8-729-422-27	TRANSISTOR 2SD601A-Q	
FB3412	1-414-135-11	FERRITE	0μH	Q3002	8-729-216-22	TRANSISTOR 2SA1162-G	
FB3413	1-414-135-11	FERRITE	0μH	Q3003	8-729-422-27	TRANSISTOR 2SD601A-Q	
FB3414	1-414-135-11	FERRITE	0μH	Q3004	8-729-422-27	TRANSISTOR 2SD601A-Q	
FB3415	1-414-135-11	FERRITE	0μH	Q3005	8-729-422-27	TRANSISTOR 2SD601A-Q	
		<FILTER>		Q3006	8-729-422-27	TRANSISTOR 2SD601A-Q	
FL3401	1-239-847-11	FILTER, LOW PASS		Q3007	8-729-422-27	TRANSISTOR 2SD601A-Q	
FL3402	1-239-847-11	FILTER, LOW PASS		Q3008	8-729-216-22	TRANSISTOR 2SA1162-G	
FL3403	1-239-847-11	FILTER, LOW PASS		Q3009	8-729-216-22	TRANSISTOR 2SA1162-G	
		<IC>		Q3010	8-729-216-22	TRANSISTOR 2SA1162-G	
IC3001	8-752-086-80	IC CXA2019AQ-T4		Q3201	8-729-422-27	TRANSISTOR 2SD601A-Q	
IC3002	8-759-932-69	IC BU4053BCF-T2		Q3202	8-729-422-27	TRANSISTOR 2SD601A-Q	
IC3003	8-752-080-75	IC CXA2039M-T6		Q3203	8-729-216-22	TRANSISTOR 2SA1162-G	
IC3004	8-752-058-68	IC CXA1315M		Q3204	8-729-422-27	TRANSISTOR 2SD601A-Q	
IC3201	8-759-351-59	IC TC528257J-80(EL)		Q3205	8-729-422-27	TRANSISTOR 2SD601A-Q	
				Q3206	8-729-422-27	TRANSISTOR 2SD601A-Q	
				Q3207	8-729-422-27	TRANSISTOR 2SD601A-Q	
				Q3208	8-729-216-22	TRANSISTOR 2SA1162-G	
				Q3209	8-729-216-22	TRANSISTOR 2SA1162-G	
				Q3210	8-729-216-22	TRANSISTOR 2SA1162-G	



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
Q3211	8-729-216-22	TRANSISTOR 2SA1162-G		R3042	1-216-025-91	RES,CHIP	100 5% 1/10W
Q3214	8-729-422-27	TRANSISTOR 2SD601A-Q		R3043	1-216-025-91	RES,CHIP	100 5% 1/10W
Q3217	8-729-422-27	TRANSISTOR 2SD601A-Q		R3044	1-216-025-91	RES,CHIP	100 5% 1/10W
Q3401	8-729-422-27	TRANSISTOR 2SD601A-Q		R3045	1-216-025-91	RES,CHIP	100 5% 1/10W
Q3402	8-729-422-27	TRANSISTOR 2SD601A-Q		R3046	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q3403	8-729-216-22	TRANSISTOR 2SA1162-G		R3047	1-216-025-91	RES,CHIP	100 5% 1/10W
Q3404	8-729-216-22	TRANSISTOR 2SA1162-G		R3048	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
Q3405	8-729-422-27	TRANSISTOR 2SD601A-Q		R3049	1-216-025-91	RES,CHIP	100 5% 1/10W
Q3406	8-729-216-22	TRANSISTOR 2SA1162-G		R3050	1-216-025-91	RES,CHIP	100 5% 1/10W
Q3407	8-729-422-27	TRANSISTOR 2SD601A-Q		R3051	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
Q3408	8-729-422-27	TRANSISTOR 2SD601A-Q		R3052	1-216-049-91	RES,CHIP	1K 5% 1/10W
Q3409	8-729-422-27	TRANSISTOR 2SD601A-Q		R3053	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
Q3410	8-729-422-27	TRANSISTOR 2SD601A-Q		R3055	1-216-053-00	RES,CHIP	1.5K 5% 1/10W
Q3411	8-729-422-27	TRANSISTOR 2SD601A-Q		R3202	1-216-025-91	RES,CHIP	100 5% 1/10W
Q3412	8-729-422-27	TRANSISTOR 2SD601A-Q		R3203	1-216-049-91	RES,CHIP	1K 5% 1/10W
Q3413	8-729-216-22	TRANSISTOR 2SA1162-G		R3204	1-216-049-91	RES,CHIP	1K 5% 1/10W
Q3414	8-729-422-27	TRANSISTOR 2SD601A-Q		R3205	1-216-061-00	RES,CHIP	3.3K 5% 1/10W
Q3415	8-729-422-27	TRANSISTOR 2SD601A-Q		R3206	1-216-025-91	RES,CHIP	100 5% 1/10W
Q3416	8-729-422-27	TRANSISTOR 2SD601A-Q		R3207	1-216-025-91	RES,CHIP	100 5% 1/10W
		<RESISTOR>		R3208	1-216-025-91	RES,CHIP	100 5% 1/10W
R3001	1-216-049-91	RES,CHIP	1K 5% 1/10W	R3209	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R3002	1-216-061-00	RES,CHIP	3.3K 5% 1/10W	R3210	1-216-025-91	RES,CHIP	100 5% 1/10W
R3003	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R3211	1-216-025-91	RES,CHIP	100 5% 1/10W
R3004	1-216-033-00	RES,CHIP	220 5% 1/10W	R3212	1-216-025-91	RES,CHIP	100 5% 1/10W
R3005	1-216-025-91	RES,CHIP	100 5% 1/10W	R3213	1-216-025-91	RES,CHIP	100 5% 1/10W
R3006	1-216-025-91	RES,CHIP	100 5% 1/10W	R3214	1-216-025-91	RES,CHIP	100 5% 1/10W
R3007	1-216-025-91	RES,CHIP	100 5% 1/10W	R3215	1-216-025-91	RES,CHIP	100 5% 1/10W
R3008	1-216-109-00	RES,CHIP	330K 5% 1/10W	R3216	1-216-033-00	RES,CHIP	220 5% 1/10W
R3009	1-216-037-00	RES,CHIP	330 5% 1/10W	R3217	1-216-025-91	RES,CHIP	100 5% 1/10W
R3010	1-216-071-00	RES,CHIP	8.2K 5% 1/10W	R3218	1-216-025-91	RES,CHIP	100 5% 1/10W
R3011	1-216-077-00	RES,CHIP	15K 5% 1/10W	R3219	1-216-025-91	RES,CHIP	100 5% 1/10W
R3012	1-216-073-00	RES,CHIP	10K 5% 1/10W	R3220	1-216-109-00	RES,CHIP	330K 5% 1/10W
R3013	1-216-053-00	RES,CHIP	1.5K 5% 1/10W	R3222	1-216-037-00	RES,CHIP	330 5% 1/10W
R3014	1-216-025-91	RES,CHIP	100 5% 1/10W	R3223	1-216-025-91	RES,CHIP	100 5% 1/10W
R3015	1-216-025-91	RES,CHIP	100 5% 1/10W	R3224	1-216-025-91	RES,CHIP	100 5% 1/10W
R3016	1-216-025-91	RES,CHIP	100 5% 1/10W	R3225	1-216-071-00	RES,CHIP	8.2K 5% 1/10W
R3017	1-216-049-91	RES,CHIP	1K 5% 1/10W	R3226	1-216-025-91	RES,CHIP	100 5% 1/10W
R3018	1-216-295-91	CONDUCTOR, CHIP		R3227	1-216-025-91	RES,CHIP	100 5% 1/10W
R3019	1-216-037-00	RES,CHIP	330 5% 1/10W	R3228	1-216-077-00	RES,CHIP	15K 5% 1/10W
R3021	1-208-774-11	RES,CHIP	470 0.50% 1/10W	R3229	1-216-025-91	RES,CHIP	100 5% 1/10W
R3022	1-208-780-11	RES,CHIP	820 0.50% 1/10W	R3230	1-216-025-91	RES,CHIP	100 5% 1/10W
R3023	1-216-041-00	RES,CHIP	470 5% 1/10W	R3231	1-216-073-00	RES,CHIP	10K 5% 1/10W
R3024	1-208-782-11	RES,CHIP	1K 0.50% 1/10W	R3232	1-216-025-91	RES,CHIP	100 5% 1/10W
R3025	1-216-075-00	RES,CHIP	12K 5% 1/10W	R3233	1-216-025-91	RES,CHIP	100 5% 1/10W
R3026	1-216-081-00	RES,CHIP	22K 5% 1/10W	R3234	1-216-053-00	RES,CHIP	1.5K 5% 1/10W
R3027	1-216-049-91	RES,CHIP	1K 5% 1/10W	R3235	1-216-025-91	RES,CHIP	100 5% 1/10W
R3033	1-216-025-91	RES,CHIP	100 5% 1/10W	R3236	1-216-025-91	RES,CHIP	100 5% 1/10W
R3034	1-216-049-91	RES,CHIP	1K 5% 1/10W	R3237	1-216-049-91	RES,CHIP	1K 5% 1/10W
R3035	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R3238	1-216-025-91	RES,CHIP	100 5% 1/10W
R3036	1-216-073-00	RES,CHIP	10K 5% 1/10W	R3239	1-216-025-91	RES,CHIP	100 5% 1/10W
R3037	1-208-801-11	RES,CHIP	6.2K 0.50% 1/10W	R3240	1-216-025-91	RES,CHIP	100 5% 1/10W
R3038	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R3241	1-216-025-91	RES,CHIP	100 5% 1/10W
R3039	1-216-025-91	RES,CHIP	100 5% 1/10W	R3242	1-216-025-91	RES,CHIP	100 5% 1/10W
R3040	1-216-073-00	RES,CHIP	10K 5% 1/10W	R3243	1-216-025-91	RES,CHIP	100 5% 1/10W
R3041	1-216-067-00	RES,CHIP	5.6K 5% 1/10W	R3244	1-216-025-91	RES,CHIP	100 5% 1/10W
				R3245	1-216-025-91	RES,CHIP	100 5% 1/10W



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R3246	1-216-025-91	RES,CHIP	100 5% 1/10W	R3421	1-216-025-91	RES,CHIP	100 5% 1/10W
R3247	1-216-041-00	RES,CHIP	470 5% 1/10W	R3422	1-216-049-91	RES,CHIP	1K 5% 1/10W
R3248	1-216-037-00	RES,CHIP	330 5% 1/10W	R3426	1-216-025-91	RES,CHIP	100 5% 1/10W
R3249	1-208-774-11	RES,CHIP	470 0.50% 1/10W	R3427	1-216-025-91	RES,CHIP	100 5% 1/10W
R3251	1-208-780-11	RES,CHIP	820 0.50% 1/10W	R3428	1-208-812-11	RES,CHIP	18K 0.50% 1/10W
R3252	1-216-025-91	RES,CHIP	100 5% 1/10W	R3429	1-216-021-00	RES,CHIP	68 5% 1/10W
R3253	1-216-041-00	RES,CHIP	470 5% 1/10W	R3430	1-216-025-91	RES,CHIP	100 5% 1/10W
R3254	1-208-782-11	RES,CHIP	1K 0.50% 1/10W	R3431	1-216-025-91	RES,CHIP	100 5% 1/10W
R3255	1-216-075-00	RES,CHIP	12K 5% 1/10W	R3432	1-216-025-91	RES,CHIP	100 5% 1/10W
R3256	1-216-081-00	RES,CHIP	22K 5% 1/10W	R3433	1-216-025-91	RES,CHIP	100 5% 1/10W
R3257	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R3434	1-216-025-91	RES,CHIP	100 5% 1/10W
R3258	1-216-049-91	RES,CHIP	1K 5% 1/10W	R3436	1-216-025-91	RES,CHIP	100 5% 1/10W
R3259	1-216-025-91	RES,CHIP	100 5% 1/10W	R3437	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R3260	1-216-049-91	RES,CHIP	1K 5% 1/10W	R3438	1-216-049-91	RES,CHIP	1K 5% 1/10W
R3261	1-216-061-00	RES,CHIP	3.3K 5% 1/10W	R3439	1-216-049-91	RES,CHIP	1K 5% 1/10W
R3262	1-216-049-91	RES,CHIP	1K 5% 1/10W	R3440	1-208-776-11	RES,CHIP	560 0.50% 1/10W
R3263	1-208-766-11	RES,CHIP	220 0.50% 1/10W	R3441	1-208-776-11	RES,CHIP	560 0.50% 1/10W
R3264	1-208-766-11	RES,CHIP	220 0.50% 1/10W	R3442	1-216-041-00	RES,CHIP	470 5% 1/10W
R3265	1-208-766-11	RES,CHIP	220 0.50% 1/10W	R3444	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R3266	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R3445	1-216-049-91	RES,CHIP	1K 5% 1/10W
R3267	1-216-051-00	RES,CHIP	1.2K 5% 1/10W	R3446	1-208-800-11	RES,CHIP	5.6K 0.50% 1/10W
R3268	1-216-051-00	RES,CHIP	1.2K 5% 1/10W	R3447	1-208-800-11	RES,CHIP	5.6K 0.50% 1/10W
R3269	1-216-051-00	RES,CHIP	1.2K 5% 1/10W	R3448	1-216-105-91	RES,CHIP	220K 5% 1/10W
R3270	1-216-053-00	RES,CHIP	1.5K 5% 1/10W	R3449	1-216-071-00	RES,CHIP	8.2K 5% 1/10W
R3271	1-216-025-91	RES,CHIP	100 5% 1/10W	R3450	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R3277	1-216-025-91	RES,CHIP	100 5% 1/10W	R3451	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R3285	1-216-009-00	RES,CHIP	22 5% 1/10W	R3452	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R3287	1-216-009-00	RES,CHIP	22 5% 1/10W	R3453	1-208-772-11	RES,CHIP	390 0.50% 1/10W
R3288	1-216-009-00	RES,CHIP	22 5% 1/10W	R3455	1-208-776-11	RES,CHIP	560 0.50% 1/10W
R3291	1-216-009-00	RES,CHIP	22 5% 1/10W	R3456	1-216-025-91	RES,CHIP	100 5% 1/10W
R3294	1-216-009-00	RES,CHIP	22 5% 1/10W	R3458	1-216-033-00	RES,CHIP	220 5% 1/10W
R3295	1-216-009-00	RES,CHIP	22 5% 1/10W	R3459	1-208-779-11	RES,CHIP	750 0.50% 1/10W
R3297	1-216-025-91	RES,CHIP	100 5% 1/10W	R3460	1-208-776-11	RES,CHIP	560 0.50% 1/10W
R3298	1-216-295-91	CONDUCTOR, CHIP		R3461	1-216-047-91	RES,CHIP	820 5% 1/10W
R3307	1-216-025-91	RES,CHIP	100 5% 1/10W	R3462	1-208-790-11	RES,CHIP	2.2K 0.50% 1/10W
R3308	1-216-025-91	RES,CHIP	100 5% 1/10W	R3463	1-216-047-91	RES,CHIP	820 5% 1/10W
R3309	1-216-025-91	RES,CHIP	100 5% 1/10W	R3464	1-208-778-11	RES,CHIP	680 0.50% 1/10W
R3311	1-216-049-91	RES,CHIP	1K 5% 1/10W	R3465	1-216-075-00	RES,CHIP	12K 5% 1/10W
R3312	1-216-025-91	RES,CHIP	100 5% 1/10W	R3466	1-216-085-00	RES,CHIP	33K 5% 1/10W
R3313	1-216-295-91	CONDUCTOR, CHIP		R3467	1-208-790-11	RES,CHIP	2.2K 0.50% 1/10W
R3401	1-216-295-91	CONDUCTOR, CHIP		R3468	1-216-075-00	RES,CHIP	12K 5% 1/10W
R3402	1-216-295-91	CONDUCTOR, CHIP		R3469	1-216-085-00	RES,CHIP	33K 5% 1/10W
R3407	1-216-041-00	RES,CHIP	470 5% 1/10W	R3470	1-208-800-11	RES,CHIP	5.6K 0.50% 1/10W
R3408	1-216-045-00	RES,CHIP	680 5% 1/10W	R3472	1-216-049-91	RES,CHIP	1K 5% 1/10W
R3409	1-216-025-91	RES,CHIP	100 5% 1/10W	R3473	1-216-049-91	RES,CHIP	1K 5% 1/10W
R3410	1-216-025-91	RES,CHIP	100 5% 1/10W	R3474	1-216-017-91	RES,CHIP	47 5% 1/10W
R3411	1-216-295-91	CONDUCTOR, CHIP		R3475	1-216-017-91	RES,CHIP	47 5% 1/10W
R3412	1-216-025-91	RES,CHIP	100 5% 1/10W	R3477	1-208-776-11	RES,CHIP	560 0.50% 1/10W
R3413	1-216-025-91	RES,CHIP	100 5% 1/10W	R3478	1-216-049-91	RES,CHIP	1K 5% 1/10W
R3414	1-216-295-91	CONDUCTOR, CHIP		R3479	1-216-025-91	RES,CHIP	100 5% 1/10W
R3415	1-216-065-91	RES,CHIP	4.7K 5% 1/10W			<CRYSTAL>	
R3416	1-216-295-91	CONDUCTOR, CHIP		X3001	1-577-611-11	OSCILALTOR, CERAMIC	
R3417	1-216-049-91	RES,CHIP	1K 5% 1/10W	X3002	1-567-505-11	OSCILLATOR, CRYSTAL	
R3418	1-216-295-91	CONDUCTOR, CHIP		X3201	1-577-611-11	OSCILALTOR, CERAMIC	
R3419	1-216-025-91	RES,CHIP	100 5% 1/10W				
R3420	1-208-822-11	RES,CHIP	47K 0.50% 1/10W				

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

The components identified by \boxtimes in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

KP-48V75/53V75/61V75
RM-Y903 RM-Y903 RM-Y903



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK	
X3202	1-567-505-11	OSCILLATOR, CRYSTAL		C548	1-102-244-00	CERAMIC	220PF 10% 500V	
X3401	1-767-882-21	VIBRATOR, CRYSTAL		C550	1-126-935-11	ELECT	470μF 20% 16V	
*****				C551	1-126-935-11	ELECT	470μF 20% 16V	
* A-1316-376-A	G BOARD, COMPLETE (KP-53V75)			C554	1-129-702-00	FILM	0.001μF 5% 630V	
*****				C555	1-126-960-11	ELECT	1μF 20% 50V	
* A-1316-388-A	G BOARD, COMPLETE (KP-48V75/61V75)			C556	1-130-495-00	MYLAR	0.1μF 5% 50V	
*****				C602	Δ 1-113-920-11	CERAMIC	0.0022μF 20% 250V	
* 4-057-835-01	PLATE, TRANSFORMER SHIELD			C603	1-104-330-91	CERAMIC	470PF 10% 1KV	
4-382-854-11	SCREW (M3X10), P, SW (+)			C604	Δ 1-136-311-11	FILM	0.47μF 20% 125V	
4-382-854-51	SCREW (M3X8), P, SW (+)			C605	Δ 1-113-920-11	CERAMIC	0.0022μF 20% 250V	
7-682-952-09	SCREW +PSW 3X16			C606	Δ 1-136-311-11	FILM	0.47μF 20% 125V	
<CAPACITOR>				C607	1-125-692-11	ELECT(BLOCK)	820μF 20% 200V	
C502	1-126-959-11	ELECT	0.47μF 20% 50V	C608	1-125-692-11	ELECT(BLOCK)	820μF 20% 200V	
C504	1-102-116-00	CERAMIC	680PF 10% 50V	C612	1-164-646-11	CERAMIC	2200PF 10% 500V	
C505	1-130-471-00	MYLAR	0.001μF 5% 50V	C615	1-136-173-00	FILM	0.47μF 5% 50V	
C506	1-126-933-11	ELECT	100μF 20% 16V	C616	1-136-173-00	FILM	0.47μF 5% 50V	
C507	1-126-965-11	ELECT	22μF 20% 50V	C617	1-136-169-00	FILM	0.22μF 5% 50V	
C508	1-102-212-00	CERAMIC	820PF 10% 500V	C618	1-136-169-00	FILM	0.22μF 5% 50V	
C509	1-106-383-00	MYLAR	0.047μF 10% 200V	C621	1-129-719-00	FILM	0.027μF 5% 630V	
C510	1-102-002-00	CERAMIC	680PF 10% 500V	C651	1-107-910-11	ELECT	100μF 20% 35V	
C511	1-130-475-00	MYLAR	0.0022μF 5% 50V	C652	1-123-024-21	ELECT	33μF 160V	
C512	1-136-479-11	FILM	0.001μF 5% 50V	C653	1-115-755-11	ELECT	180μF 20% 16V	
C513	1-126-965-11	ELECT	22μF 20% 50V	C654	1-115-755-11	ELECT	180μF 20% 16V	
\boxtimes C514 Δ		CERAMIC		2KV	C655	1-126-943-11	ELECT	2200μF 20% 25V
C515 Δ	1-125-831-91	FILM	0.033μF 3% 630V	C656	1-126-943-11	ELECT	2200μF 20% 25V	
C516 Δ	1-117-807-11	FILM	14500PF 3% 1.6KV	C657	1-126-943-11	ELECT	2200μF 20% 25V	
C518	1-130-495-00	MYLAR	0.1μF 5% 50V	C658	1-128-550-11	ELECT	2200μF 20% 50V	
C519	1-136-287-11	FILM	0.0047μF 5% 100V	C659	1-102-074-00	CERAMIC	0.001μF 10% 50V	
C520	1-162-116-00	CERAMIC	680PF 10% 2KV	C660	1-126-235-11	ELECT	100μF 20% 6.3V	
C521	1-162-116-00	CERAMIC	680PF 10% 2KV	C661	1-102-074-00	CERAMIC	0.001μF 10% 50V	
C523	1-117-673-11	FILM	1.5μF 5% 200V	C662	1-104-664-11	ELECT	47μF 20% 25V	
C524	1-136-287-11	FILM	0.0047μF 5% 100V	C663	1-104-664-11	ELECT	47μF 20% 25V	
C526	1-102-228-00	CERAMIC	470PF 10% 500V	C664	1-107-888-11	ELECT	47μF 20% 25V	
C527	1-104-664-11	ELECT	47μF 20% 25V	C665	1-104-666-11	ELECT	220μF 20% 25V	
C528	1-107-649-11	ELECT	2.2μF 20% 250V	C666	1-126-960-11	ELECT	1μF 20% 50V	
C529	1-109-961-11	FILM	0.75μF 5% 200V	C667	1-104-664-11	ELECT	47μF 20% 25V	
C530	1-110-626-11	ELECT	330μF 20% 160V	C668	1-126-933-11	ELECT	100μF 20% 16V	
C531	1-126-971-11	ELECT	470μF 20% 50V	C671	1-104-664-11	ELECT	47μF 20% 25V	
C532	1-126-971-11	ELECT	470μF 20% 50V	C672	1-126-971-11	ELECT	470μF 20% 50V	
C533	1-128-562-11	ELECT	47μF 20% 100V	C673	1-162-115-00	CERAMIC	330PF 10% 1KV	
C535	1-106-387-00	MYLAR	0.068μF 5% 200V	C675	1-104-665-11	ELECT	100μF 20% 25V	
C536	1-130-489-00	MYLAR	0.033μF 5% 50V	C676	1-126-960-11	ELECT	1μF 20% 50V	
C537	1-104-665-11	ELECT	100μF 20% 25V	C801	1-104-665-11	ELECT	100μF 20% 25V	
C538	1-104-665-11	ELECT	100μF 20% 25V	C802	1-104-665-11	ELECT	100μF 20% 25V	
C539	1-162-114-00	CERAMIC	0.0047μF 2KV	C803	1-126-934-11	ELECT	220μF 20% 16V	
C540	1-130-487-00	MYLAR	0.022μF 5% 50V	C804	1-126-934-11	ELECT	220μF 20% 16V	
C541	1-130-489-00	MYLAR	0.033μF 5% 50V	C805	1-126-934-11	ELECT	220μF 20% 16V	
C542	1-104-666-11	ELECT	220μF 20% 25V	C806	1-126-934-11	ELECT	220μF 20% 16V	
C544	1-104-665-11	ELECT	100μF 20% 25V	C807	1-137-374-11	FILM	0.047μF 5% 50V	
C545	1-104-665-11	ELECT	100μF 20% 25V	C808	1-137-374-11	FILM	0.047μF 5% 50V	
C546	1-107-637-11	ELECT	22μF 20% 160V	C809	1-137-374-11	FILM	0.047μF 5% 50V	
				C810	1-137-374-11	FILM	0.047μF 5% 50V	
				C811	1-137-366-11	FILM	0.0022μF 5% 50V	
				C812	1-136-169-00	FILM	0.22μF 5% 50V	
				C813	1-137-374-11	FILM	0.047μF 5% 50V	
				C815	1-126-941-11	ELECT	470μF 20% 25V	



Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C816	1-126-964-11	ELECT	10μF 20% 50V	C886	1-102-973-00	CERAMIC 100PF 5% 50V	
C817	1-164-096-11	CERAMIC	0.01μF 50V	C887	1-102-973-00	CERAMIC 100PF 5% 50V	
C818	1-126-933-11	ELECT	100μF 20% 16V	C888	1-102-973-00	CERAMIC 100PF 5% 50V	
C819	1-126-964-11	ELECT	10μF 20% 50V	C889	1-126-941-11	ELECT 470μF 20% 25V	
C820	1-102-114-00	CERAMIC	470PF 10% 50V	C897	1-126-941-11	ELECT 470μF 20% 25V	
C821	1-130-495-00	MYLAR	0.1μF 5% 50V			<CONNECTOR>	
C822	1-164-096-11	CERAMIC	0.01μF 50V	CN501	1-564-513-11	PLUG, CONNECTOR 10P	
C823	1-101-880-00	CERAMIC	47PF 5% 50V	CN502	* 1-580-689-11	PIN, CONNECTOR (PC BOARD) 4P	
C825	1-104-665-11	ELECT	100μF 20% 25V	CN503	* 1-580-689-11	PIN, CONNECTOR (PC BOARD) 4P	
C826	1-136-165-00	FILM	0.1μF 5% 50V	CN504	* 1-580-689-11	PIN, CONNECTOR (PC BOARD) 4P	
C827	1-126-960-11	ELECT	1μF 20% 50V	CN505	* 1-506-371-00	PIN, CONNECTOR 2P	
C828	1-137-366-11	FILM	0.0022μF 5% 50V	CN506	* 1-774-182-11	CONNECTOR, BOARD TO BOARD10P	
C829	1-126-959-11	ELECT	0.47μF 20% 50V	CN507	* 1-564-507-11	PLUG, CONNECTOR 4P	
C830	1-136-356-11	FILM	470PF 5% 50V	CN601	* 1-580-843-11	PIN, CONNECTOR (POWER)	
C831	1-126-960-11	ELECT	1μF 20% 50V	CN651	* 1-774-182-11	CONNECTOR, BOARD TO BOARD10P	
C832	1-126-960-11	ELECT	1μF 20% 50V	CN652	* 1-774-182-11	CONNECTOR, BOARD TO BOARD10P	
C833	1-126-960-11	ELECT	1μF 20% 50V	CN653	* 1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P	
C834	1-104-665-11	ELECT	100μF 20% 25V	CN801	* 1-564-507-11	PLUG, CONNECTOR 4P	
C835	1-104-664-11	ELECT	47μF 20% 25V	CN802	* 1-564-507-11	PLUG, CONNECTOR 4P	
C836	1-136-169-00	FILM	0.22μF 5% 50V	CN803	* 1-564-507-11	PLUG, CONNECTOR 4P	
C837	1-126-963-11	ELECT	4.7μF 20% 50V	CN804	* 1-774-182-11	CONNECTOR, BOARD TO BOARD10P	
C838	1-104-665-11	ELECT	100μF 20% 25V	CN805	* 1-691-134-11	PIN, CONNECTOR (PC BOARD) 2P	
C839	1-137-374-11	FILM	0.047μF 5% 50V			<DIODE>	
C840	1-104-665-11	ELECT	100μF 20% 25V	D501	8-719-991-33	DIODE 1SS133T-77	
C841	1-137-374-11	FILM	0.047μF 5% 50V	D502	8-719-991-33	DIODE 1SS133T-77	
C842	1-137-374-11	FILM	0.047μF 5% 50V	D503	8-719-018-82	DIODE RGP02-20EL-6394	
C843	1-104-665-11	ELECT	100μF 20% 25V	D504	8-719-921-63	DIODE MTZJ-7.5B	
C844	1-126-933-11	ELECT	100μF 20% 16V	D507	Δ 8-719-302-43	DIODE EL1Z	
C845	1-126-933-11	ELECT	100μF 20% 16V	D508	8-719-900-26	DIODE ERD29-08J	
C846	1-126-933-11	ELECT	100μF 20% 16V	D509	8-719-945-80	DIODE ERC06-15S	
C847	1-126-933-11	ELECT	100μF 20% 16V	D510	8-719-945-80	DIODE ERC06-15S	
C848	1-126-933-11	ELECT	100μF 20% 16V	D511	8-719-302-43	DIODE EL1Z	
C851	1-137-374-11	FILM	0.047μF 5% 50V	D513	8-719-302-43	DIODE EL1Z	
C852	1-137-374-11	FILM	0.047μF 5% 50V	D514	8-719-908-03	DIODE GP08D	
C853	1-137-374-11	FILM	0.047μF 5% 50V	D515	8-719-908-03	DIODE GP08D	
C854	1-126-933-11	ELECT	100μF 20% 16V	D517	8-719-018-82	DIODE RGP02-20EL-6394	
C857	1-126-933-11	ELECT	100μF 20% 16V	D519	8-719-991-33	DIODE 1SS133T-77	
C858	1-126-941-11	ELECT	470μF 20% 25V	D520	8-719-302-43	DIODE EL1Z	
C860	1-126-933-11	ELECT	100μF 20% 16V	D521	8-719-302-43	DIODE EL1Z	
C861	1-137-374-11	FILM	0.047μF 5% 50V	D524	8-719-991-33	DIODE 1SS133T-77	
C862	1-137-374-11	FILM	0.047μF 5% 50V	D527	8-719-109-85	DIODE RD5.1ESB2	
C863	1-137-374-11	FILM	0.047μF 5% 50V	D528	8-719-923-86	DIODE MTZJ-T-77-15	
C864	1-126-933-11	ELECT	100μF 20% 16V	D602	Δ 8-719-052-84	DIODE LN4SB60	
C865	1-130-471-00	MYLAR	0.001μF 5% 50V	D651	8-719-510-26	DIODE D1NL20-TA	
C866	1-136-177-00	FILM	1μF 5% 50V	D652	8-719-991-33	DIODE 1SS133T-77	
C867	1-101-880-00	CERAMIC	47PF 5% 50V	D653	8-719-510-02	DIODE D1NS4	
C868	1-101-880-00	CERAMIC	47PF 5% 50V	D654	8-719-022-97	DIODE D2S4μF	
C869	1-130-487-00	MYLAR	0.022μF 5% 50V	D655	8-719-061-56	DIODE RBA-402LLF-A	
C871	1-101-880-00	CERAMIC	47PF 5% 50V	D656	8-719-052-92	DIODE D10SBS4F	
C872	1-101-880-00	CERAMIC	47PF 5% 50V	D657	8-719-052-91	DIODE D4SBS4-F	
C873	1-101-880-00	CERAMIC	47PF 5% 50V	D658	8-719-510-12	DIODE D10SC4M	
C880	1-126-961-11	ELECT	2.2μF 20% 50V	D660	8-719-991-33	DIODE 1SS133T-77	
C881	1-102-973-00	CERAMIC	100PF 5% 50V				
C882	1-102-973-00	CERAMIC	100PF 5% 50V				
C883	1-102-973-00	CERAMIC	100PF 5% 50V				
C885	1-126-961-11	ELECT	2.2μF 20% 50V				

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
D661	8-719-200-82	DIODE 11ES2		IC601	Δ 8-729-041-12	TRANSISTOR MX0841AB-F	
D662	8-719-991-33	DIODE 1SS133T-77		IC651	Δ 8-749-012-13	IC DM-58	
D664	8-719-110-61	DIODE RD24ESB1		IC652	8-759-012-67	IC MC7905CT	
D669	8-719-991-33	DIODE 1SS133T-77		IC653	8-759-231-53	IC TA7805S	
D670	8-719-923-86	DIODE MTZJ-T-77-15		IC654	8-759-231-53	IC TA7805S	
D691	8-719-200-82	DIODE 11ES2		IC655	8-759-231-58	IC TA7812S	
D692	8-719-200-82	DIODE 11ES2		IC801	8-759-327-51	IC PA0053B	
D693	8-719-200-82	DIODE 11ES2		IC802	8-759-327-51	IC PA0053B	
D694	8-719-200-82	DIODE 11ES2		IC803	8-759-183-37	IC CA0007AD	
D801	8-719-110-17	DIODE RD10ESB2		IC804	8-759-464-79	IC PM0011AS	
D802	8-719-110-17	DIODE RD10ESB2		IC805	8-759-711-28	IC NJM2058D	
D803	8-719-110-17	DIODE RD10ESB2		IC806	8-759-464-79	IC PM0011AS	
D804	8-719-110-17	DIODE RD10ESB2		IC808	8-759-464-79	IC PM0011AS	
D809	8-719-991-33	DIODE 1SS133T-77		IC809	8-749-014-37	IC STK392-150	
D810	8-719-991-33	DIODE 1SS133T-77		IC810	8-749-014-37	IC STK392-150	
D820	8-719-109-68	DIODE RD3.6ESB1		IC811	8-759-634-51	IC M5218AP	
D828	8-719-109-89	DIODE RD5.6ESB2				<COIL>	
D829	8-719-109-85	DIODE RD5.1ESB2		L502	1-410-478-11	INDUCTOR	47 μ H
D835	8-719-109-89	DIODE RD5.6ESB2		L503	1-459-111-00	INDUCTOR	0 μ H
D840	8-719-991-33	DIODE 1SS133T-77		L506	1-412-552-11	INDUCTOR	2.2mmH
D842	8-719-991-33	DIODE 1SS133T-77		L509	1-412-533-21	INDUCTOR	47 μ H
D845	8-719-991-33	DIODE 1SS133T-77		L601	Δ 1-424-248-11	TRANSFORMER, LINE FILTER	
D846	8-719-991-33	DIODE 1SS133T-77		L651	1-414-158-11	INDUCTOR	2.2 μ H
D847	8-719-982-19	DIODE MTZJ-30A		L652	1-414-158-11	INDUCTOR	2.2 μ H
D848	8-719-923-86	DIODE MTZJ-T-77-15		L653	1-414-158-11	INDUCTOR	2.2 μ H
D849	8-719-110-22	DIODE RD11ESB2		L654	1-414-158-11	INDUCTOR	2.2 μ H
D850	8-719-109-89	DIODE RD5.6ESB2		L656	1-412-523-11	INDUCTOR	6.8 μ H
D852	8-719-923-86	DIODE MTZJ-T-77-15		L801	1-406-975-21	INDUCTOR	0 μ H
D853	8-719-982-19	DIODE MTZJ-30A		L802	1-406-975-21	INDUCTOR	0 μ H
D854	8-719-982-19	DIODE MTZJ-30A				<IC LINK>	
D855	8-719-982-19	DIODE MTZJ-30A		PS601	Δ 1-533-597-31	LINK, IC	
D856	1-164-096-11	CERAMIC	0.01 μ F 50V	PS602	Δ 1-533-597-31	LINK, IC	
D857	8-719-982-19	DIODE MTZJ-30A				<TRANSISTOR>	
D859	1-164-096-11	CERAMIC	0.01 μ F 50V	Q501	8-729-119-80	TRANSISTOR 2SC2688-LK	
D860	8-719-982-19	DIODE MTZJ-30A		Q502	8-729-024-05	TRANSISTOR 2SD2348(LBSONY-1)	
		<FUSE>		Q503	8-729-119-76	TRANSISTOR 2SA1175-HFE	
F601	Δ 1-532-748-11	FUSE, GLASS TUBE 6.3A/125V		Q504	8-729-823-81	TRANSISTOR 2SC4632LS-CB7	
	1-533-223-11	CLIP, FUSE ; F601		Q505	8-729-931-45	TRANSISTOR IRF614	
		<FERRITE BEAD>		Q506	8-729-119-78	TRANSISTOR 2SC2785-HFE	
FB501	1-410-397-21	FERRITE	1.1 μ H	Q507	8-729-032-61	TRANSISTOR 2SC5022-02	
FB651	1-410-396-41	FERRITE	0.45 μ H	Q651	8-729-119-76	TRANSISTOR 2SA1175-HFE	
FB652	1-410-396-41	FERRITE	0.45 μ H	Q652	8-729-119-78	TRANSISTOR 2SC2785-HFE	
FB653	1-410-396-41	FERRITE	0.45 μ H	Q653	8-729-119-78	TRANSISTOR 2SC2785-HFE	
FB654	1-410-397-21	FERRITE	1.1 μ H	Q654	8-729-119-76	TRANSISTOR 2SA1175-HFE	
FB656	1-410-396-41	FERRITE	0.45 μ H	Q655	8-729-119-76	TRANSISTOR 2SA1175-HFE	
FB657	1-410-396-41	FERRITE	0.45 μ H	Q656	8-729-119-78	TRANSISTOR 2SC2785-HFE	
FB660	1-412-761-11	FERRITE	0 μ H	Q657	8-729-119-76	TRANSISTOR 2SA1175-HFE	
FB661	1-412-761-11	FERRITE	0 μ H	Q658	8-729-119-78	TRANSISTOR 2SC2785-HFE	
		<IC>		Q659	8-729-119-76	TRANSISTOR 2SA1175-HFE	
IC501	8-759-133-90	IC UPC339C		Q660	8-729-119-78	TRANSISTOR 2SC2785-HFE	

• The components identified by **■** in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

Les composants identifiés par une trame et une marque **▲** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark **▲** are critical for safety. Replace only with part number specified.



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
Q661	8-729-119-78	TRANSISTOR 2SC2785-HFE		R544	1-215-864-00	METAL OXIDE	150 5% 1W F
Q662	8-729-119-78	TRANSISTOR 2SC2785-HFE					(KP-53V75)
Q802	8-729-119-76	TRANSISTOR 2SA1175-HFE		R545	1-249-377-11	CARBON	0.47 5% 1/4W F
Q803	8-729-119-76	TRANSISTOR 2SA1175-HFE		R546	1-249-377-11	CARBON	0.47 5% 1/4W F
Q804	8-729-119-78	TRANSISTOR 2SC2785-HFE		R547	1-247-807-31	CARBON	100 5% 1/4W
Q805	8-729-119-78	TRANSISTOR 2SC2785-HFE		R548	1-249-413-11	CARBON	470 5% 1/4W
Q809	8-729-119-78	TRANSISTOR 2SC2785-HFE		R549	1-247-863-91	CARBON	22K 5% 1/4W
Q810	8-729-119-78	TRANSISTOR 2SC2785-HFE		R550	1-247-807-31	CARBON	100 5% 1/4W
		<RESISTOR>		R551	1-249-437-11	CARBON	47K 5% 1/4W
				R552	1-247-807-31	CARBON	100 5% 1/4W
R501	1-249-421-11	CARBON	2.2K 5% 1/4W	R553	1-247-881-00	CARBON	120K 5% 1/4W
R502	1-215-879-11	METAL OXIDE	47K 5% 1W F	R554	1-249-405-11	CARBON	100 5% 1/4W F
R503	1-247-843-11	CARBON	3.3K 5% 1/4W	R556	1-260-117-11	CARBON	33K 5% 1/2W
R504	1-249-419-11	CARBON	1.5K 5% 1/4W	R557	1-216-490-11	METAL OXIDE	39K 5% 3W F
R505	1-247-895-91	CARBON	470K 5% 1/4W	R558	1-216-490-11	METAL OXIDE	39K 5% 3W F
R506	1-249-429-11	CARBON	10K 5% 1/4W	R559	1-216-490-11	METAL OXIDE	39K 5% 3W F
R507	1-249-422-11	CARBON	2.7K 5% 1/4W	R560	1-215-399-00	METAL	120 1% 1/4W
R508	1-260-337-11	CARBON	5.6K 5% 1/2W	■ R561 ▲		METAL	1/4W
R509	1-249-437-11	CARBON	47K 5% 1/4W	R563	1-249-429-11	CARBON	10K 5% 1/4W
R510	1-215-919-11	METAL OXIDE	2.2K 5% 3W F	R564	1-260-131-11	CARBON	470K 5% 1/2W
R511	1-215-919-11	METAL OXIDE	2.2K 5% 3W F	R565	1-260-087-11	CARBON	100 5% 1/2W
R512	1-216-482-11	METAL OXIDE	1.8K 5% 3W F	R566	1-249-377-11	CARBON	0.47 5% 1/4W F
R513	1-249-424-11	CARBON	3.9K 5% 1/4W	R567	1-249-377-11	CARBON	0.47 5% 1/4W F
■ R514 ▲		METAL	1/4W	R568	1-247-903-00	CARBON	1M 5% 1/4W
R516	1-215-443-00	METAL	8.2K 1% 1/4W	R569	1-216-389-11	METAL OXIDE	1 5% 3W F
							(KP-53V75)
R517	1-215-449-00	METAL	15K 1% 1/4W	R569	1-216-392-11	METAL OXIDE	1.8 5% 3W F
R518	1-215-456-00	METAL	30K 1% 1/4W				(KP-48V75/61V75)
R519	1-247-863-91	CARBON	22K 5% 1/4W	R570	1-215-910-00	METAL OXIDE	68 5% 3W F
R522	1-249-428-11	CARBON	8.2K 5% 1/4W	R571	1-249-422-11	CARBON	2.7K 5% 1/4W
R523	1-249-437-11	CARBON	47K 5% 1/4W	R572	1-247-895-91	CARBON	470K 5% 1/4W
R524	1-247-863-91	CARBON	22K 5% 1/4W	R573	1-249-430-11	CARBON	12K 5% 1/4W
R525	1-249-405-11	CARBON	100 5% 1/4W F	R574	1-249-429-11	CARBON	10K 5% 1/4W
R528	1-215-910-00	METAL OXIDE	68 5% 3W F	R577	1-249-422-11	CARBON	2.7K 5% 1/4W
R530	1-249-437-11	CARBON	47K 5% 1/4W	R579	1-247-895-91	CARBON	470K 5% 1/4W
R531	1-215-868-00	METAL OXIDE	680 5% 1W F	R580	1-247-863-91	CARBON	22K 5% 1/4W
R532	1-260-314-11	CARBON	68 5% 1/2W	R581	1-249-428-11	CARBON	8.2K 5% 1/4W
R533	1-214-912-00	METAL	91K 1% 1/2W	R583	1-249-428-11	CARBON	8.2K 5% 1/4W
R534	1-215-479-00	METAL	270K 1% 1/4W	R584	1-247-887-00	CARBON	220K 5% 1/4W
R535	1-247-887-00	CARBON	220K 5% 1/4W	R585	1-216-490-11	METAL OXIDE	39K 5% 3W F
R536	1-260-288-11	CARBON	0.47 5% 1/2W	R586	1-260-292-11	CARBON	1 5% 1/2W
R537	1-260-336-11	CARBON	4.7K 5% 1/2W	R588	1-247-863-91	CARBON	22K 5% 1/4W
R538	1-247-863-91	CARBON	22K 5% 1/4W	R589	1-247-887-00	CARBON	220K 5% 1/4W
R539	1-249-377-11	CARBON	0.47 5% 1/4W F	R591	1-215-917-11	METAL OXIDE	1K 5% 3W F
R540	1-249-377-11	CARBON	0.47 5% 1/4W F	R601 ▲	1-219-512-11	CARBON	2.2M 5% 1/2W
			(KP-53V75)	R602 ▲	1-202-981-11	CEMENTED	0.82 5% 20W
R540	1-249-379-11	CARBON	0.68 5% 1/4W F	R608 ▲	1-202-933-61	FUSIBLE	0.1 10% 1/2W F
			(KP-48V75/61V75)	R609	1-247-887-00	CARBON	220K 5% 1/4W
R541	1-260-087-11	CARBON	100 5% 1/2W	R610	1-247-887-00	CARBON	220K 5% 1/4W
R542	1-215-862-11	METAL OXIDE	68 5% 1W F	R611	1-216-353-00	METAL OXIDE	2.2 5% 1W F
			(KP-48V75/61V75)	R612	1-247-887-00	CARBON	220K 5% 1/4W
R542	1-215-864-00	METAL OXIDE	150 5% 1W F	R613	1-216-353-00	METAL OXIDE	2.2 5% 1W F
			(KP-53V75)	R614	1-247-887-00	CARBON	220K 5% 1/4W
R543	1-216-349-00	METAL OXIDE	1 5% 1W F	R651	1-249-429-11	CARBON	10K 5% 1/4W
R544	1-215-862-11	METAL OXIDE	68 5% 1W F	R653	1-249-377-11	CARBON	0.47 5% 1/4W F
			(KP-48V75/61V75)	R655	1-247-887-00	CARBON	220K 5% 1/4W
				R656	1-260-288-11	CARBON	0.47 5% 1/2W



REF. NO.	PART NO.	DESCRIPTION		REMARK	REF. NO.	PART NO.	DESCRIPTION		REMARK
R657	1-249-429-11	CARBON	10K	5%	1/4W	R828	1-249-426-11	CARBON	5.6K 5% 1/4W
R658	1-249-417-11	CARBON	1K	5%	1/4W	R829	1-249-426-11	CARBON	5.6K 5% 1/4W
R660	1-249-413-11	CARBON	470	5%	1/4W	R830	1-249-414-11	CARBON	560 5% 1/4W
R661	1-249-417-11	CARBON	1K	5%	1/4W F	R831	1-249-414-11	CARBON	560 5% 1/4W
R662	1-249-425-11	CARBON	4.7K	5%	1/4W	R832	1-249-441-11	CARBON	100K 5% 1/4W
R664	1-249-425-11	CARBON	4.7K	5%	1/4W	R833	1-249-417-11	CARBON	1K 5% 1/4W
R665	1-247-807-31	CARBON	100	5%	1/4W	R834	1-249-441-11	CARBON	100K 5% 1/4W
R667	1-249-417-11	CARBON	1K	5%	1/4W	R835	1-249-441-11	CARBON	100K 5% 1/4W
R668	1-249-377-11	CARBON	0.47	5%	1/4W F	R836	1-247-807-31	CARBON	100 5% 1/4W
R669	1-249-429-11	CARBON	10K	5%	1/4W	R837	1-249-441-11	CARBON	100K 5% 1/4W
R672	1-249-421-11	CARBON	2.2K	5%	1/4W	R838	1-249-421-11	CARBON	2.2K 5% 1/4W
R673	1-249-413-11	CARBON	470	5%	1/4W	R841	1-247-815-91	CARBON	220 5% 1/4W
R675	1-215-417-00	METAL	680	1%	1/4W	R842	1-247-807-31	CARBON	100 5% 1/4W
R676	1-216-369-00	METAL OXIDE	1	5%	2W F	R843	1-247-807-31	CARBON	100 5% 1/4W
R677	1-247-807-31	CARBON	100	5%	1/4W	R844	1-247-807-31	CARBON	100 5% 1/4W
R679	1-249-421-11	CARBON	2.2K	5%	1/4W	R845	1-249-441-11	CARBON	100K 5% 1/4W
R680	1-249-417-11	CARBON	1K	5%	1/4W	R846	1-247-807-31	CARBON	100 5% 1/4W
R681	1-249-417-11	CARBON	1K	5%	1/4W	R847	1-215-469-00	METAL	100K 1% 1/4W
R682	1-249-417-11	CARBON	1K	5%	1/4W	R850	1-215-469-00	METAL	100K 1% 1/4W
R683	1-249-417-11	CARBON	1K	5%	1/4W	R851	1-247-807-31	CARBON	100 5% 1/4W
R684	1-249-417-11	CARBON	1K	5%	1/4W	R852	1-247-807-31	CARBON	100 5% 1/4W
R686	1-215-421-00	METAL	1K	1%	1/4W	R853	1-247-887-00	CARBON	220K 5% 1/4W
R687	1-215-441-00	METAL	6.8K	1%	1/4W	R854	1-249-429-11	CARBON	10K 5% 1/4W
R688	1-215-481-00	METAL	330K	1%	1/4W	R855	1-247-815-91	CARBON	220 5% 1/4W
R689	1-249-425-11	CARBON	4.7K	5%	1/4W	R856	1-247-807-31	CARBON	100 5% 1/4W
R690	1-249-417-11	CARBON	1K	5%	1/4W	R857	1-247-807-31	CARBON	100 5% 1/4W
R692	1-249-425-11	CARBON	4.7K	5%	1/4W	R858	1-215-455-00	METAL	27K 1% 1/4W
R693	1-249-429-11	CARBON	10K	5%	1/4W	R859	1-215-455-00	METAL	27K 1% 1/4W
R695	1-247-807-31	CARBON	100	5%	1/4W	R860	1-215-455-00	METAL	27K 1% 1/4W
R696	1-249-417-11	CARBON	1K	5%	1/4W	R861	1-215-455-00	METAL	27K 1% 1/4W
R697	1-249-417-11	CARBON	1K	5%	1/4W	R862	1-215-455-00	METAL	27K 1% 1/4W
R801	1-249-437-11	CARBON	47K	5%	1/4W	R863	1-215-455-00	METAL	27K 1% 1/4W
R803	1-249-430-11	CARBON	12K	5%	1/4W	R865	1-249-424-11	CARBON	3.9K 5% 1/4W
R804	1-249-429-11	CARBON	10K	5%	1/4W	R867	1-215-461-00	METAL	47K 1% 1/4W
R805	1-247-807-31	CARBON	100	5%	1/4W	R868	1-215-445-00	METAL	10K 1% 1/4W
R806	1-249-429-11	CARBON	10K	5%	1/4W	R869	1-247-863-91	CARBON	22K 5% 1/4W
R807	1-247-807-31	CARBON	100	5%	1/4W	R871	1-249-417-11	CARBON	1K 5% 1/4W
R808	1-249-429-11	CARBON	10K	5%	1/4W	R872	1-247-863-91	CARBON	22K 5% 1/4W
R809	1-249-425-11	CARBON	4.7K	5%	1/4W	R873	1-247-807-31	CARBON	100 5% 1/4W
R810	1-247-807-31	CARBON	100	5%	1/4W	R874	1-249-429-11	CARBON	10K 5% 1/4W
R811	1-247-807-31	CARBON	100	5%	1/4W	R875	1-249-441-11	CARBON	100K 5% 1/4W
R812	1-249-429-11	CARBON	10K	5%	1/4W	R876	1-215-451-00	METAL	18K 1% 1/4W
R813	1-249-429-11	CARBON	10K	5%	1/4W	R879	1-215-444-00	METAL	9.1K 1% 1/4W
R814	1-247-807-31	CARBON	100	5%	1/4W	R881	1-249-408-11	CARBON	180 5% 1/4W
R815	1-247-807-31	CARBON	100	5%	1/4W	R882	1-215-445-00	METAL	10K 1% 1/4W
R816	1-247-807-31	CARBON	100	5%	1/4W	R883	1-215-445-00	METAL	10K 1% 1/4W
R817	1-247-807-31	CARBON	100	5%	1/4W	R884	1-215-445-00	METAL	10K 1% 1/4W
R818	1-249-430-11	CARBON	12K	5%	1/4W	R885	1-249-441-11	CARBON	100K 5% 1/4W
R820	1-249-429-11	CARBON	10K	5%	1/4W	R886	1-249-428-11	CARBON	8.2K 5% 1/4W
R821	1-249-428-11	CARBON	8.2K	5%	1/4W	R887	1-247-807-31	CARBON	100 5% 1/4W
R822	1-249-417-11	CARBON	1K	5%	1/4W	R888	1-247-807-31	CARBON	100 5% 1/4W
R823	1-249-417-11	CARBON	1K	5%	1/4W	R889	1-249-438-11	CARBON	56K 5% 1/4W
R824	1-215-462-00	METAL	51K	1%	1/4W	R890	1-249-441-11	CARBON	100K 5% 1/4W
R825	1-249-441-11	CARBON	100K	5%	1/4W	R891	1-249-429-11	CARBON	10K 5% 1/4W
R826	1-215-462-00	METAL	51K	1%	1/4W	R892	1-215-445-00	METAL	10K 1% 1/4W
R827	1-249-417-11	CARBON	1K	5%	1/4W	R895	1-249-421-11	CARBON	2.2K 5% 1/4W



Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R896	1-249-441-11	CARBON	100K 5% 1/4W	R955	1-215-433-00	METAL	3.3K 1% 1/4W
R897	1-247-807-31	CARBON	100 5% 1/4W	R956	1-249-429-11	CARBON	10K 5% 1/4W
R898	1-247-815-91	CARBON	220 5% 1/4W	R957	1-214-800-11	METAL	2.2 1% 1/2W
R899	1-247-815-91	CARBON	220 5% 1/4W	R958	1-214-800-11	METAL	2.2 1% 1/2W
R901	1-249-430-11	CARBON	12K 5% 1/4W	R959	1-215-433-00	METAL	3.3K 1% 1/4W
R902	1-249-438-11	CARBON	56K 5% 1/4W	R960	1-215-451-00	METAL	18K 1% 1/4W
R903	1-215-421-00	METAL	1K 1% 1/4W	R961	1-249-425-11	CARBON	4.7K 5% 1/4W
R904	1-214-800-11	METAL	2.2 1% 1/2W	R962	1-214-800-11	METAL	2.2 1% 1/2W
R905	1-214-800-11	METAL	2.2 1% 1/2W	R963	1-214-800-11	METAL	2.2 1% 1/2W
R906	1-214-800-11	METAL	2.2 1% 1/2W	R964	1-215-433-00	METAL	3.3K 1% 1/4W
R907	1-247-815-91	CARBON	220 5% 1/4W	R965	1-215-433-00	METAL	3.3K 1% 1/4W
R908	1-247-815-91	CARBON	220 5% 1/4W	R966	1-247-815-91	CARBON	220 5% 1/4W
R909	1-215-421-00	METAL	1K 1% 1/4W	R967	1-215-455-00	METAL	27K 1% 1/4W
R910	1-215-421-00	METAL	1K 1% 1/4W	R968	1-215-455-00	METAL	27K 1% 1/4W
R911	1-215-455-00	METAL	27K 1% 1/4W	R969	1-215-455-00	METAL	27K 1% 1/4W
R912	1-215-469-00	METAL	100K 1% 1/4W	R970	1-215-455-00	METAL	27K 1% 1/4W
R913	1-215-455-00	METAL	27K 1% 1/4W	R971	1-215-455-00	METAL	27K 1% 1/4W
R914	1-215-455-00	METAL	27K 1% 1/4W	R972	1-215-455-00	METAL	27K 1% 1/4W
R915	1-215-455-00	METAL	27K 1% 1/4W	R973	1-214-800-11	METAL	2.2 1% 1/2W
R916	1-215-455-00	METAL	27K 1% 1/4W	R974	1-215-463-00	METAL	56K 1% 1/4W
R917	1-215-455-00	METAL	27K 1% 1/4W	R975	1-214-800-11	METAL	2.2 1% 1/2W
R918	1-215-455-00	METAL	27K 1% 1/4W	R976	1-215-433-00	METAL	3.3K 1% 1/4W
R919	1-249-435-11	CARBON	33K 5% 1/4W	R977	1-247-815-91	CARBON	220 5% 1/4W
R920	1-214-800-11	METAL	2.2 1% 1/2W	R978	1-215-445-00	METAL	10K 1% 1/4W
R921	1-249-429-11	CARBON	10K 5% 1/4W	R979	1-249-425-11	CARBON	4.7K 5% 1/4W
R922	1-215-445-00	METAL	10K 1% 1/4W	R980	1-247-815-91	CARBON	220 5% 1/4W
R923	1-247-863-91	CARBON	22K 5% 1/4W	R981	1-247-815-91	CARBON	220 5% 1/4W
R924	1-215-444-00	METAL	9.1K 1% 1/4W	R982	1-247-815-91	CARBON	220 5% 1/4W
R925	1-247-863-91	CARBON	22K 5% 1/4W	R983	1-215-444-00	METAL	9.1K 1% 1/4W
R926	1-249-408-11	CARBON	180 5% 1/4W	R984	1-215-445-00	METAL	10K 1% 1/4W
R927	1-215-445-00	METAL	10K 1% 1/4W	R985	1-215-445-00	METAL	10K 1% 1/4W
R928	1-215-445-00	METAL	10K 1% 1/4W	R986	1-215-451-00	METAL	18K 1% 1/4W
R929	1-214-800-11	METAL	2.2 1% 1/2W	R987	1-249-408-11	CARBON	180 5% 1/4W
R930	1-214-800-11	METAL	2.2 1% 1/2W	R988	1-215-445-00	METAL	10K 1% 1/4W
R931	1-215-445-00	METAL	10K 1% 1/4W	R989	1-247-863-91	CARBON	22K 5% 1/4W
R933	1-215-453-00	METAL	22K 1% 1/4W	R990	1-249-429-11	CARBON	10K 5% 1/4W
R934	1-249-429-11	CARBON	10K 5% 1/4W	R991	1-249-429-11	CARBON	10K 5% 1/4W
R935	1-249-429-11	CARBON	10K 5% 1/4W	R993	1-247-863-91	CARBON	22K 5% 1/4W
R936	1-249-429-11	CARBON	10K 5% 1/4W	R996	1-247-815-91	CARBON	220 5% 1/4W
R937	1-249-435-11	CARBON	33K 5% 1/4W	R997	1-215-445-00	METAL	10K 1% 1/4W
R938	1-215-421-00	METAL	1K 1% 1/4W	R998	1-249-434-11	CARBON	27K 5% 1/4W
R940	1-249-441-11	CARBON	100K 5% 1/4W	R999	1-249-434-11	CARBON	27K 5% 1/4W
R941	1-249-441-11	CARBON	100K 5% 1/4W			<RELAY>	
R942	1-249-421-11	CARBON	2.2K 5% 1/4W				
R943	1-249-441-11	CARBON	100K 5% 1/4W	RY601	1-755-018-11	RELAY	
R944	1-215-421-00	METAL	1K 1% 1/4W			<TRANSFORMER>	
R945	1-249-429-11	CARBON	10K 5% 1/4W				
R946	1-215-421-00	METAL	1K 1% 1/4W	T501	Δ 1-437-195-11	TRANSFORMER, HORIZONTAL DRIVE	
R947	1-249-441-11	CARBON	100K 5% 1/4W	T502	Δ 1-431-896-11	TRANSFORMER, FERRITE (PMT)	
R948	1-247-815-91	CARBON	220 5% 1/4W	T503	Δ 1-431-212-11	TRANSFORMER, HORIZONTAL LINEAR	
R949	1-247-807-31	CARBON	100 5% 1/4W	T504	Δ 1-453-238-11	FBT ASSY, NX-4007//X4A4	
R950	1-247-807-31	CARBON	100 5% 1/4W	T603	Δ 1-423-665-11	TRANSFORMER, POWER	
R951	1-247-807-31	CARBON	100 5% 1/4W	T604	Δ 1-429-992-11	TRANSFORMER, CONVERTER (PRT)	
R952	1-247-807-31	CARBON	100 5% 1/4W	T605	Δ 1-429-986-11	TRANSFORMER, CONVERTER (PIT)	
R953	1-247-863-91	CARBON	22K 5% 1/4W				
R954	1-215-433-00	METAL	3.3K 1% 1/4W				

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
*****				R703	1-215-437-00	METAL	4.7K 1% 1/4W
* A-1331-804-A CR BOARD, COMPLETE				R704	1-260-132-11	CARBON	560K 5% 1/2W
*****				R705	1-215-424-00	METAL	1.3K 1% 1/4W
<CAPACITOR>				R706	1-215-431-00	METAL	2.7K 1% 1/4W
C702	1-102-959-00	CERAMIC	22PF 5% 50V	R707	1-249-435-11	CARBON	33K 5% 1/4W
C703	1-104-664-11	ELECT	47μF 20% 25V	R708	1-215-428-00	METAL	2K 1% 1/4W
C704	1-126-964-11	ELECT	10μF 20% 50V	R709	1-260-101-11	CARBON	1.5K 5% 1/2W
C705	1-161-754-00	CERAMIC	0.001μF 10% 2KV	R710	1-215-903-11	METAL OXIDE	68K 5% 2W F
C706	1-126-934-11	ELECT	220μF 20% 16V	R711	1-249-435-11	CARBON	33K 5% 1/4W
C707	1-107-504-11	CERAMIC	10PF 0.5PF 500V	R712	1-247-807-31	CARBON	100 5% 1/4W
C708	1-102-050-00	CERAMIC	0.01μF 99% 500V	R713	1-249-437-11	CARBON	47K 5% 1/4W
C709	1-162-115-00	CERAMIC	330PF 10% 2KV	R714	1-260-099-11	CARBON	1K 5% 1/2W
C712	1-107-662-11	ELECT	22μF 20% 250V	R715	1-260-133-11	CARBON	680K 5% 1/2W
<CONNECTOR>				R717	1-249-417-11	CARBON	1K 5% 1/4W
CN701	1-695-915-11	TAB (CONTACT)		R718	1-247-807-31	CARBON	100 5% 1/4W
CN702	* 1-564-510-11	PLUG, CONNECTOR 7P		R719	1-260-087-11	CARBON	100 5% 1/2W
CN703	* 1-564-512-11	PLUG, CONNECTOR 9P		<SPARK GAP>			
CN704	* 1-508-784-00	PIN, CONNECTOR (5mm PITCH) 1P		SG701	1-519-422-11	GAP, SPARK	
CN705	Δ 1-251-182-11	SOCKET, CRT		SG702	1-519-422-11	GAP, SPARK	
CN706	* 1-564-512-11	PLUG, CONNECTOR 9P		*****			
CN707	1-695-915-11	TAB (CONTACT)		* A-1331-771-A CG BOARD, COMPLETE			
<DIODE>				*****			
D701	8-719-991-33	DIODE 1SS133T-77		<CAPACITOR>			
D702	8-719-991-33	DIODE 1SS133T-77		C732	1-102-963-00	CERAMIC	33PF 5% 50V
D703	8-719-991-33	DIODE 1SS133T-77		C733	1-161-754-00	CERAMIC	0.001μF 10% 2KV
D704	8-719-991-33	DIODE 1SS133T-77		C735	1-102-050-00	CERAMIC	0.01μF 99% 500V
D705	8-719-923-86	DIODE MTZJ-T-77-15		C736	1-162-115-00	CERAMIC	330PF 10% 2KV
D706	8-719-923-86	DIODE MTZJ-T-77-15		C737	1-107-662-11	ELECT	22μF 20% 250V
D708	8-719-110-17	DIODE RD10ESB2		<CONNECTOR>			
D709	8-719-109-88	DIODE RD5.6ESB1		CN731	1-695-915-11	TAB (CONTACT)	
D710	8-719-991-33	DIODE 1SS133T-77		CN732	* 1-564-510-11	PLUG, CONNECTOR 7P	
<IC>				CN733	* 1-564-507-11	PLUG, CONNECTOR 4P	
IC701	8-759-434-39	IC TDA6106Q		CN734	* 1-508-784-00	PIN, CONNECTOR (5mm PITCH) 1P	
<COIL>				CN735	Δ 1-251-182-11	SOCKET, CRT	
L701	1-410-682-31	INDUCTOR	470μH	CN736	* 1-564-512-11	PLUG, CONNECTOR 9P	
<TRANSISTOR>				CN737	* 1-564-512-11	PLUG, CONNECTOR 9P	
Q701	8-729-119-76	TRANSISTOR 2SA1175-HFE		CN738	1-695-915-11	TAB (CONTACT)	
Q702	8-729-119-76	TRANSISTOR 2SA1175-HFE		<DIODE>			
<RESISTOR>				D731	8-719-991-33	DIODE 1SS133T-77	
R701	1-219-745-11	CARBON	470 5% 1/2W	D732	8-719-991-33	DIODE 1SS133T-77	
R702	1-215-425-00	METAL	1.5K 1% 1/4W	D733	8-719-110-17	DIODE RD10ESB2	
<IC>				IC731	8-759-434-39	IC TDA6106Q	

CG CB HA

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK
		<COIL>	
L731	1-410-682-31	INDUCTOR 470μH	
		<RESISTOR>	
R731	1-219-743-11	CARBON 100 5% 1/2W	
R732	1-260-132-11	CARBON 560K 5% 1/2W	
R733	1-215-421-00	METAL 1K 1% 1/4W	
R735	1-249-441-11	CARBON 100K 5% 1/4W	
R736	1-215-430-00	METAL 2.4K 1% 1/4W	
R737	1-260-101-11	CARBON 1.5K 5% 1/2W	
R738	1-215-903-11	METAL OXIDE 68K 5% 2W F	
R739	1-260-133-11	CARBON 680K 5% 1/2W	
R740	1-260-099-11	CARBON 1K 5% 1/2W	
R741	1-215-424-00	METAL 1.3K 1% 1/4W	
R742	1-247-885-00	CARBON 180K 5% 1/4W	
R743	1-247-807-31	CARBON 100 5% 1/4W	
		<SPARK GAP>	
SG731	1-519-422-11	GAP, SPARK	
SG732	1-519-422-11	GAP, SPARK	

* A-1331-806-A CB BOARD, COMPLETE			

		<CAPACITOR>	
C762	1-102-963-00	CERAMIC 33PF 5% 50V	
C763	1-161-754-00	CERAMIC 0.001μF 10% 2KV	
C765	1-102-050-00	CERAMIC 0.01μF 99% 500V	
C766	1-162-115-00	CERAMIC 330PF 10% 2KV	
C767	1-107-662-11	ELECT 22μF 20% 250V	
		<CONNECTOR>	
CN761	1-695-915-11	TAB (CONTACT)	
CN762	* 1-564-507-11	PLUG, CONNECTOR 4P	
CN763	* 1-508-784-00	PIN, CONNECTOR (5mm PITCH) 1P	
CN764	Δ 1-251-182-11	SOCKET, CRT	
CN765	* 1-564-512-11	PLUG, CONNECTOR 9P	
CN766	1-564-513-11	PLUG, CONNECTOR 10P	
CN767	1-695-915-11	TAB (CONTACT)	
		<DIODE>	
D761	8-719-991-33	DIODE 1SS133T-77	
D762	8-719-923-86	DIODE MTZJ-T-77-15	
D763	8-719-110-17	DIODE RD10ESB2	
D764	8-719-923-86	DIODE MTZJ-T-77-15	
		<IC>	

REF. NO.	PART NO.	DESCRIPTION	REMARK
IC761	8-759-434-39	IC TDA6106Q	
		<COIL>	
L761	1-410-682-31	INDUCTOR 470UH	
		<RESISTOR>	
R761	1-219-743-11	CARBON 100 5% 1/2W	
R762	1-260-132-11	CARBON 560K 5% 1/2W	
R763	1-215-420-00	METAL 910 1% 1/4W	
R764	1-249-426-11	CARBON 5.6K 5% 1/4W	
R765	1-215-430-00	METAL 2.4K 1% 1/4W	
R766	1-260-101-11	CARBON 1.5K 5% 1/2W	
R767	1-215-903-11	METAL OXIDE 68K 5% 2W F	
R768	1-260-133-11	CARBON 680K 5% 1/2W	
R769	1-260-099-11	CARBON 1K 5% 1/2W	
R770	1-247-807-31	CARBON 100 5% 1/4W	
R771	1-260-087-11	CARBON 100 5% 1/2W	
		<SPARK GAP>	
SG761	1-519-422-11	GAP, SPARK	
SG762	1-519-422-11	GAP, SPARK	

* A-1372-441-A HA BOARD, COMPLETE			

		<CAPACITOR>	
C1301	1-126-959-11	ELECT 0.47μF 20% 50V	
C1302	1-126-959-11	ELECT 0.47μF 20% 50V	
C1304	1-126-964-11	ELECT 10μF 20% 50V	
C1305	1-126-959-11	ELECT 0.47μF 20% 50V	
C1306	1-126-964-11	ELECT 10μF 20% 50V	
C1307	1-126-964-11	ELECT 10μF 20% 50V	
		<CONNECTOR>	
CN1301	1-564-523-11	PLUG, CONNECTOR 8P	
CN1302	* 1-564-526-11	PLUG, CONNECTOR 11P	
CN1304	* 1-564-518-11	PLUG, CONNECTOR 3P	
		<DIODE>	
D1301	8-719-110-17	DIODE RD10ESB2	
D1302	8-719-110-17	DIODE RD10ESB2	
D1303	8-719-110-17	DIODE RD10ESB2	
D1304	8-719-053-43	DIODE SLR-325VCT31	
D1305	8-719-053-43	DIODE SLR-325VCT31	



REF. NO.	PART NO.	DESCRIPTION	REMARK
D1306	8-719-110-17	DIODE RD10ESB2	
D1307	8-719-110-17	DIODE RD10ESB2	
D1308	8-719-110-17	DIODE RD10ESB2	
D1309	8-719-109-89	DIODE RD5.6ESB2	
<IC>			
IC1301	8-742-088-10	HYB IC SBX1780-51(10)	
<JACK>			
J13011-770-361-11	TERMINAL BLOCK, S		
<RESISTOR>			
R1301	1-249-425-11	CARBON	4.7K 5% 1/4W
R1302	1-249-416-11	CARBON	820 5% 1/4W
R1303	1-249-417-11	CARBON	1K 5% 1/4W
R1304	1-249-425-11	CARBON	4.7K 5% 1/4W
R1305	1-247-815-91	CARBON	220 5% 1/4W
R1306	1-247-815-91	CARBON	220 5% 1/4W
R1307	1-249-420-11	CARBON	1.8K 5% 1/4W
R1308	1-247-895-91	CARBON	470K 5% 1/4W
R1309	1-247-895-91	CARBON	470K 5% 1/4W
R1310	1-249-429-11	CARBON	10K 5% 1/4W
R1311	1-247-804-11	CARBON	75 5% 1/4W
R1312	1-247-804-11	CARBON	75 5% 1/4W
R1314	1-247-807-31	CARBON	100 5% 1/4W
R1315	1-247-804-11	CARBON	75 5% 1/4W
<SWITCH>			
S1301	1-572-198-11	SWITCH, KEYBOARD	
S1302	1-572-198-11	SWITCH, KEYBOARD	
S1303	1-572-198-11	SWITCH, KEYBOARD	
S1304	1-572-198-11	SWITCH, KEYBOARD	
S1305	1-572-198-11	SWITCH, KEYBOARD	
S1306	1-572-198-11	SWITCH, KEYBOARD	
S1307	1-572-198-11	SWITCH, KEYBOARD	
<CAPACITOR>			

* A-1373-667-A U BOARD, COMPLETE			

<CONNECTOR>			
CN4001 *	1-564-522-11	PLUG, CONNECTOR 7P	

REF. NO.	PART NO.	DESCRIPTION	REMARK
CN4002 *	1-564-523-11	PLUG, CONNECTOR 8P	
<DIODE>			
D4001	8-719-109-89	DIODE RD5.6ESB2	
D4002	8-719-109-89	DIODE RD5.6ESB2	
D4003	8-719-109-89	DIODE RD5.6ESB2	
D4004	8-719-109-89	DIODE RD5.6ESB2	
D4005	8-719-109-89	DIODE RD5.6ESB2	
D4006	8-719-110-17	DIODE RD10ESB2	
D4007	8-719-110-17	DIODE RD10ESB2	
D4008	8-719-110-17	DIODE RD10ESB2	
D4009	8-719-110-17	DIODE RD10ESB2	
D4010	8-719-110-17	DIODE RD10ESB2	
<JACK>			
J4001	1-764-143-11	JACK 3P	
J4002	1-764-143-11	JACK 3P	
J4003	1-764-143-11	JACK 3P	
J4004	1-764-143-11	JACK 3P	
J4005	1-764-143-11	JACK 3P	
J4006	1-774-358-11	JACK BLOCK, PIN	
<RESISTOR>			
R4006	1-247-895-91	CARBON	470K 5% 1/4W
R4007	1-247-895-91	CARBON	470K 5% 1/4W
R4008	1-247-804-11	CARBON	75 5% 1/4W
R4009	1-247-804-11	CARBON	75 5% 1/4W
R4010	1-247-804-11	CARBON	75 5% 1/4W
<CAPACITOR>			
C1433	1-106-343-00	MYLAR	0.001μF 10% 200V
C1434	1-106-383-00	MYLAR	0.047μF 10% 200V
C1435	1-107-667-11	ELECT	2.2μF 20% 160V
C1436	1-137-364-11	FILM	0.001μF 5% 50V
C1437	1-137-364-11	FILM	0.001μF 5% 50V
C1438	1-106-383-00	MYLAR	0.047μF 10% 200V
C1439	1-161-830-00	CERAMIC	0.0047μF 500V
C1440	1-126-933-11	ELECT	100μF 20% 16V
C1441	1-102-074-00	CERAMIC	0.001μF 10% 50V
C1443	1-126-935-11	ELECT	470μF 20% 16V
C1444	1-107-639-11	ELECT	47μF 20% 160V
C1445	1-126-933-11	ELECT	100μF 20% 16V
C1446	1-126-933-11	ELECT	100μF 20% 16V

* A-1390-826-A Z BOARD, COMPLETE

4-382-854-11 SCREW (M3X10), P, SW (+)



Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK
<CONNECTOR>			
CN1401 *	1-564-506-11	PLUG, CONNECTOR 3P	
CN1402	1-564-505-11	PLUG, CONNECTOR 2P	
CN1403 *	1-564-506-11	PLUG, CONNECTOR 3P	
CN1404 *	1-564-507-11	PLUG, CONNECTOR 4P	
CN1406 *	1-564-507-11	PLUG, CONNECTOR 4P	
CN1431 *	1-564-508-11	PLUG, CONNECTOR 5P	
CN1433 *	1-564-507-11	PLUG, CONNECTOR 4P	
CN1434 *	1-580-689-11	PIN, CONNECTOR (PC BOARD) 4P	
CN1461 *	1-564-506-11	PLUG, CONNECTOR 3P	
CN1462 *	1-564-507-11	PLUG, CONNECTOR 4P	
CN1463	1-564-505-11	PLUG, CONNECTOR 2P	
CN1464 *	1-564-507-11	PLUG, CONNECTOR 4P	
CN1465	1-564-505-11	PLUG, CONNECTOR 2P (KP-53V75)	
<DIODE>			
D1431	8-719-110-88	DIODE RD39ESB2	
D1432	8-719-110-88	DIODE RD39ESB2	
D1433	8-719-991-33	DIODE 1SS133T-77	
<CONNECTOR>			
DY1431 Δ	1-451-454-11	DEFLECTION YOKE	
<COIL>			
L1431	1-410-478-11	INDUCTOR 47 μ H	
L1432	1-410-478-11	INDUCTOR 47 μ H	
<TRANSISTOR>			
Q1431	8-729-017-06	TRANSISTOR 2SC4793	
Q1432	8-729-017-05	TRANSISTOR 2SA1837	
Q1433	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q1434	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q1435	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q1436	8-729-119-78	TRANSISTOR 2SC2785-HFE	
<RESISTOR>			
R1401	1-249-414-11	CARBON 560	5% 1/4W
R1402	1-249-414-11	CARBON 560	5% 1/4W
R1415	1-216-475-11	METAL OXIDE 120	5% 3W F
R1418	1-216-475-11	METAL OXIDE 120	5% 3W F
R1431	1-249-414-11	CARBON 560	5% 1/4W
R1432	1-249-414-11	CARBON 560	5% 1/4W
R1435	1-216-475-11	METAL OXIDE 120	5% 3W F
R1436	1-216-475-11	METAL OXIDE 120	5% 3W F
R1437	1-249-414-11	CARBON 560	5% 1/4W
R1438	1-249-432-11	CARBON 18K	5% 1/4W
R1439	1-249-432-11	CARBON 18K	5% 1/4W
R1440	1-249-414-11	CARBON 560	5% 1/4W F
R1441	1-249-417-11	CARBON 1K	5% 1/4W
R1442	1-249-408-11	CARBON 180	5% 1/4W
R1443	1-249-377-11	CARBON 0.47	5% 1/4W F

REF. NO.	PART NO.	DESCRIPTION	REMARK
R1445	1-249-403-11	CARBON 68	5% 1/4W
R1448	1-249-416-11	CARBON 820	5% 1/4W
R1449	1-249-403-11	CARBON 68	5% 1/4W
R1450	1-249-417-11	CARBON 1K	5% 1/4W
R1451	1-249-411-11	CARBON 330	5% 1/4W
R1452	1-249-417-11	CARBON 1K	5% 1/4W
R1453	1-249-401-11	CARBON 47	5% 1/4W
R1454	1-260-311-11	CARBON 39	5% 1/2W
R1455	1-249-384-11	CARBON 1.8	5% 1/4W F
R1456	1-215-916-00	METAL OXIDE 680	5% 3W F
R1457	1-249-417-11	CARBON 1K	5% 1/4W F
R1458	1-249-384-11	CARBON 1.8	5% 1/4W F
R1459	1-249-400-11	CARBON 39	5% 1/4W F
R1460	1-215-916-00	METAL OXIDE 680	5% 3W F
R1461	1-249-414-11	CARBON 560	5% 1/4W
R1462	1-249-414-11	CARBON 560	5% 1/4W
R1464	1-249-417-11	CARBON 1K	5% 1/4W
R1465	1-216-475-11	METAL OXIDE 120	5% 3W F
R1466	1-216-475-11	METAL OXIDE 120	5% 3W F

MISCELLANEOUS			

Δ	A-1501-277-A	COUPLER (B) ASSY, PICTURE TUBE (KP-53V75)	
Δ	A-1501-278-A	COUPLER (R) ASSY, PICTURE TUBE (KP-53V75)	
Δ	A-1501-279-A	COUPLER (G) ASSY, PICTURE TUBE (KP-53V75)	
Δ	1-223-925-11	RESISTOR ASSY (HIGH-VOLTAGE)	
Δ	1-451-454-11	DEFLECTION YOKE (G)	
Δ	1-451-455-31	DEFLECTION YOKE (R) (B)	
Δ	1-452-790-21	NECK ASSY	
	1-452-909-11	MAGNET ASSY, 4 POLE	
	1-505-426-11	SPEAKER (10.6CM)	
	1-556-945-21	CABLE, P-P	
*	1-557-056-31	CABLE, P-P	
Δ	1-769-837-11	CORD, POWER (WITH NOISE FILTER)	
	8-598-414-00	ANTENNA SWITCH AS-2F	
Δ	8-733-528-05	PICTURE TUBE 07MAC3 (B) (GROUND SPRING) (KP-48V75)	
Δ	8-733-529-05	PICTURE TUBE 07MAC4 (B) (GROUND SPRING) (KP-61V75)	
Δ	8-733-537-05	PICTURE TUBE 07MXC2 (G) (KP-48V75/61V75)	
Δ	8-733-553-05	PICTURE TUBE 07MXC3 (R) (KP-48V75)	
Δ	8-733-555-05	PICTURE TUBE 07MXC4 (R) (KP-61V75)	

ACCESSORIES AND PACKING MATERIALS			

	3-862-729-11	MANUAL, INSTRUCTION	

<u>REF. NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>REMARK</u>
*	4-037-674-01	BOARD, TOP (KP-48V75)	
*	4-041-423-01	SHEET, PROTECTION (KP-48V75)	
*	4-041-425-01	BAG, PROTECTION (KP-48V75)	
*	4-041-426-01	BAG, PROTECTION (KP-53V75)	
*	4-041-428-01	BAG, POLYETHYLENE (KP-61V75)	
*	4-042-463-01	SHEET, PROTECTION (KP-53V75/61V75)	
*	4-047-555-01	PLATE, TOP (KP-61V75)	
*	4-047-774-01	PLATE, TOP (KP-53V75)	
*	4-056-291-01	INDIVIDUAL CARTON (KP-53V75)	
*	4-056-292-01	CUSHION (UPPER) (ASSY) (KP-53V75)	
*	4-056-293-01	CUSHION (LOWER) (ASSY) (KP-53V75)	
*	4-056-298-01	BOARD, BOTTOM (KP-53V75)	
*	4-056-300-01	TRAY (KP-53V75)	
*	4-057-642-01	CUSHION (UPPER) (ASSY) (KP-61V75)	
*	4-057-643-01	CUSHION (LOWER) (ASSY) (KP-61V75)	
*	4-057-648-01	INDIVIDUAL CARTON (KP-61V75)	
*	4-057-649-01	TRAY (KP-61V75)	
*	4-057-650-01	BOARD, BOTTOM (KP-61V75)	
*	4-057-651-02	CUSHION (UPPER) (ASSY) (KP-48V75)	
*	4-057-652-01	CUSHION (LOWER) (ASSY) (KP-48V75)	
*	4-057-657-01	INDIVIDUAL CARTON (KP-48V75)	
*	4-057-658-01	TRAY (KP-48V75)	
*	4-057-659-01	BOARD, BOTTOM (KP-48V75)	
	4-060-039-01	TAPE, INSTRUCTION	
		REMOTE COMMANDER	

	1-475-215-21	REMOTE COMMANDER (RM-Y903)	
	4-978-977-01	POCKET, COVER (FOR RM-Y903)	

SONY[®] SERVICE MANUAL

RA-2A CHASSIS

<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>	<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>
KP-48V75	RM-Y903	US	SCC-N65G-A	KP-61V75	RM-Y903	US	SCC-N65H-A
KP-48V75	RM-Y903	Canadian	SCC-N79G-A	KP-61V75	RM-Y903	Canadian	SCC-N66H-A
KP-53V75	RM-Y903	US	SCC-N65F-A				
KP-53V75	RM-Y903	Canadian	SCC-N65F-A				

CORRECTION-1

File this correction with the Supplement and Service manual.

 : Indicates corrected portion

See page103.

SECTION 7.EXPLODED VIEWS

INCORRECT			CORRECT		
<u>REF NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>REF NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
159	A-1331-770-A	CR BOARD, COMPLETE	159	A-1331-804-A	CR BOARD, COMPLETE
160	A-1331-771-A	CG BOARD, COMPLETE	160	A-1331-805-A	CG BOARD, COMPLETE
161	A-1331-772-A	CB BOARD, COMPLETE	161	A-1331-806-A	CB BOARD, COMPLETE

SECTION 8.ELECTRICAL PARTS LIST

See page123.

INCORRECT			CORRECT		
<u>REF NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>REF NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
	A-1331-770-A	CR BOARD, COMPLETE		A-1331-804-A	CR BOARD, COMPLETE
	A-1331-771-A	CG BOARD, COMPLETE		A-1331-805-A	CG BOARD, COMPLETE

See page124.

INCORRECT			CORRECT		
<u>REF NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>REF NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
	A-1331-770-A	CB BOARD, COMPLETE		A-1331-806-A	CB BOARD, COMPLETE



※ Please file according to model size.

48