


# Owner's Manual

Version 1.0

## SW4024 Series Inverters

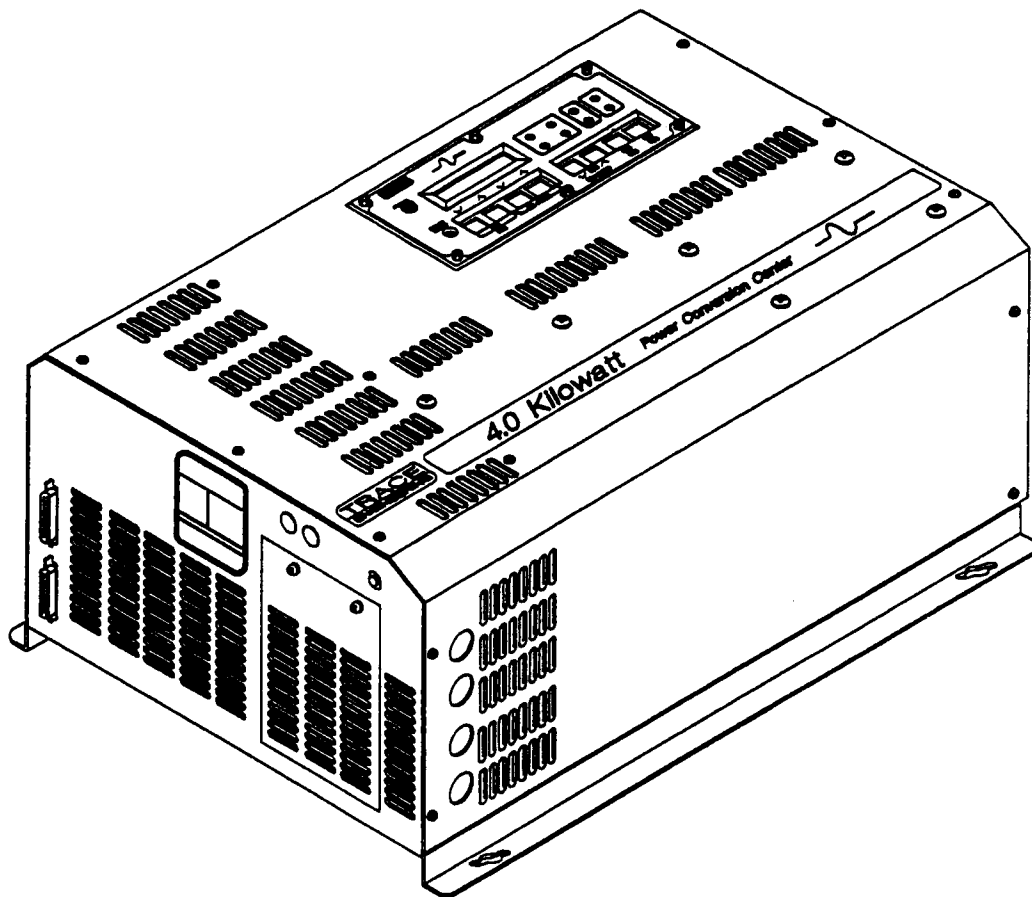

Trace Engineering  
5916 - 195th Street N.E.  
Arlington, WA 98223  
Phone: (360) 435-8826  
Fax: (360) 435-2229

visit our website at: [www.traceengineering.com](http://www.traceengineering.com)

P/N 2031

# Table Of Contents

---

## Important Safety Instructions

General Precautions . . . . .	1
Personal Precautions . . . . .	3

## Introduction

. . . . .	4
-----------	---

## Overview

## Operation Characteristics

### Inverter Mode

Waveform . . . . .	5
Search Mode Control . . . . .	5
Menu Adjustable Inverter Parameters . . . . .	7

### Battery Charger Mode

AC Characteristics . . . . .	7
Charging Method . . . . .	7
Menu Adjustable Charger Parameters . . . . .	8

### Inverter / Charger Mode

In Brief . . . . .	8
AC Input Connections . . . . .	8
Using Both Inputs . . . . .	8
Transfer Time . . . . .	9
Menu Adjustable Inverter/Charger Parameters . . . . .	9

### Generator Interactive Mode

In Brief . . . . .	9
Generator Overload Protection . . . . .	9
Generator Support . . . . .	10
Automatic Generator Start and Stop . . . . .	10
Menu Adjustable Generator Interactive Parameters . . . . .	10

## **UPS Mode**

In Brief . . . . .	11
Line Support . . . . .	12
Line Conditioning . . . . .	12
Using Skip Mode . . . . .	12
Battery Requirements . . . . .	12
Menu Adjustable UPS Parameters . . . . .	12

## **Utility Interactive Mode**

Overview . . . . .	13
Battery Requirements . . . . .	13
Theory of Operation . . . . .	13
Protection Circuitry . . . . .	13
Menu Adjustable Utility Interactive Parameters . . . . .	14

## **Control Panel**

### **User Menu**

Overview . . . . .	15
Navigating the User Menu . . . . .	15
On/Off Menu . . . . .	16
Generator Menu . . . . .	16
Mode Menu . . . . .	16
User Menu Headings and Items . . . . .	17
LED Indicators . . . . .	21

## **Batteries**

### **Selection of Battery Type**

Starting Batteries . . . . .	22
Telephone Company Batteries . . . . .	22
Deep Cycle Batteries . . . . .	22
Sealed Gel Cell Batteries . . . . .	23
NiCad and Nickel Iron Batteries . . . . .	23

### **Maintenance**

Charge Rate . . . . .	24
Charge Voltage . . . . .	24
Float Voltage . . . . .	24
Equalization . . . . .	24

Temperature Compensation . . . . .	24
------------------------------------	----

## **Sizing**

Estimating Battery Requirements . . . . .	25
Hookup Configurations . . . . .	25

## **Installation**

Environment . . . . .	26
-----------------------	----

## **AC Wiring**

Overview . . . . .	27
AC Connections . . . . .	27
Ground Fault Interrupters . . . . .	28
Important Precautions . . . . .	28

## **DC Wiring Connections**

Safety Instructions . . . . .	28
DC Disconnect . . . . .	29
Battery Cable Connections . . . . .	29
Battery Cable Sizing . . . . .	29

## **Tables**

Cable Lengths . . . . .	30
Load vs Time vs Amps at 24 VDC . . . . .	30

## **Applications**

Resistive Loads . . . . .	31
Inductive Loads . . . . .	31

## **Technical Information**

Theory of Operation . . . . .	32
SW4024 Specifications . . . . .	33

## **Performance Graphs**

Power vs. Efficiency . . . . .	34
Maximum RMS Am AC ps vs. Time . . . . .	35
Maximum Regulated Power vs Battery Voltage . . . . .	36
Charger Performance at 100 VAC . . . . .	36

## Diagrams

D1 SW4024 External Specs . . . . .	A-1
D2 Series Stacked Installation . . . . .	A-2
D3 Series Stacked Schematic . . . . .	A-3
D4 Single Unit Installation . . . . .	A-4
D5 Single Unit Schematic . . . . .	A-5

## Other Products

. . . . .	B-1
-----------	-----

## Warranty Information

Limited Warranty . . . . .	i
Warranty Procedure . . . . .	ii
Registration Form . . . . .	iii

---

# IMPORTANT SAFETY INSTRUCTIONS

---

## SAVE THESE INSTRUCTIONS

This manual contains important safety and operating instructions as prescribed by ANSI/UL specifications for inverters used in residential applications. This manual covers Trace Engineering model number SW4024, sinewave series for use in Residential and Commercial applications.

The Sinewave Series inverter is ETL listed to the general UL specification 1741, Power Conditioning Units for use in Residential Photovoltaic Power Systems.

---

### General Precautions

1. Before using the inverter/charger, read all instructions and cautionary markings on (1) the inverter/charger and (2) the batteries.
2. **CAUTION-** To reduce risk of injury, charge only deep cycle lead acid, lead antimony, lead calcium and gel cell or nickel type rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
3. Do not expose inverter/charger to rain, snow or moisture of any type.
4. Do not disassemble the inverter/charger; take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
5. To reduce risk of electric shock, disconnect all wiring before attempting any maintenance or cleaning. Turning off controls will not reduce this risk.
6. **WARNING - WORKING IN VICINITY OF A LEAD ACID BATTERY IS DANGEROUS. BATTERIES GENERATE EXPLOSIVE GASES DURING NORMAL OPERATION.** Provide ventilation to outdoors from the battery compartment.
7. **NEVER** charge a frozen battery.
8. No terminals or lugs are required for hook-up of the AC wiring. AC wiring should be no less than 10 (AWG) gauge copper wire rated at 90 degree C. Battery cables must be rated for 105 degree Celsius and should be no less than 2/0 (AWG) gauge (welding cable). A crimped and soldered lug with a 5/16 hole attached to the battery cable is required for connection to the inverter/charger.


9. Torque all AC wiring connections to 20 inch pounds. Torque all DC cable connections to 12 foot pounds.

Be extra cautious to reduce the risk of dropping a metal tool onto batteries. It might spark or short-circuit batteries or other electrical parts that could cause an explosion.

10. Symbols used in this manual and on the inverter/charger are:



**Chassis**

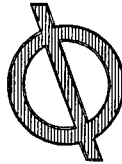

**Phase**



**AC Output**



**AC Input**

11. Tools required to make AC wiring connections: Wire strippers, 1/2" (13MM) open-end wrench or socket, Phillips screw driver #2, Slotted screw driver 1/4" (6MM) blade.
12. This inverter/charger is intended to be used with a battery supply of nominal voltage that matches the last two digits of the inverter model number, e.g., 24 volt with a SW4024.
13. Instructions for wall mounting: See mounting instruction section of this manual. **NOTE:** Do not use the keyhole mounting slots. For battery installation and maintenance: read the manufacturer's installation and maintenance instructions prior to operating.
14. No AC or DC disconnect switch is provided as an integral part of this unit. Both AC and DC disconnects must be provided as part of the system installation. See SYSTEM SAFETY WIRING REQUIREMENTS section of this manual.
15. No overcurrent protection for the battery supply is provided as an integral part of this unit. Over current protection of the battery cables must be provided as part of the system installation. See SYSTEM SAFETY WIRING REQUIREMENTS section of this manual.
16. No over current protection for the AC output wiring is provided as an integral part of this unit. Over current protection of the AC output wiring must be provided as part of the system installation. See SYSTEM SAFETY WIRING REQUIREMENTS section of this manual.
17. **GROUNDING INSTRUCTIONS** - This battery charger should be connected to a grounded, metal, permanent wiring system. Connections to inverter should comply with all local codes and ordinances.

---

## PERSONAL PRECAUTIONS

1. Someone should be within range of your voice or close enough to come to your aid when you work near lead-acid batteries.
2. Have plenty of fresh water and soap nearby in case battery acid contacts skin, clothing, or eyes.
3. Wear complete eye protection and clothing protection. Avoid touching eyes while working near batteries.
4. If battery acid contacts skin or clothing, wash immediately with soap and water. If acid enters eye, immediately flood eye with running cold water for at least 10 minutes and get medical attention immediately. Baking soda neutralizes battery acid (lead acid batteries) also.
5. **NEVER** smoke or allow a spark or flame in vicinity of battery or engine.
6. Be extra cautious to reduce the risk of dropping a metal tool onto batteries. It might spark or short-circuit batteries or other electrical parts that may cause an explosion.
7. Remove personal metal items such as rings, bracelets, necklaces, and watches when working with a lead-acid battery. A lead-acid battery can produce a short-circuit current high enough to weld a ring or the like to metal, causing a severe burn.



---

# Introduction

Congratulations! You are the proud owner of the finest inverter on the market today - and one very complex piece of equipment. The Model SW4024 has many features and capabilities previously either non-existent, or found only in separate products.

With proper installation, the unit will typically work satisfactorily for stand-alone applications straight out of the box using factory settings. To fully utilize the unit's generator interactive, or utility interactive capabilities, it is necessary to understand the way the unit thinks and tailor operation via the user menu. This manual will provide the necessary information. However, it is recommended that you consult with your authorized dealer to ensure correct installation and maximum utilization of this product's numerous features. If you do not understand any aspect of installation and your authorized dealer/installer is not available, please contact Trace Engineering for assistance.

As a minimum, you should read the operation sections that relate to your type of installation. Then read the chapter on using the control menu. Focus on the menu items that relate to your type of installation and make the appropriate selections and adjustments. Installation diagrams are provided for various applications.

The Operation Characteristics chapter explains how the unit works in each of its different modes. The Control Panel chapter explains the user control menu. This menu enables features and adjusts operating parameters.

This is a long manual and much of it is fairly technical. If you are an insomniac, properly used, this manual is guaranteed to provide several good nights of sleep.

---

## Overview

---

### Operation Characteristics

The Model SW4024 Power Conversion Center can operate in one or more of the following modes:

- Stand-alone 4KW sine wave inverter.
- 120 amp, low current distortion 24V battery charger
- Inverter/charger with automatic transfer
- UPS Standby with maximum 16 millisecond transfer time
- Utility interactive

- Peak load shaving with onboard clock to set inverter operation times.

Numerous features are provided to enhance and customize the inverter's operation while in its different operational modes:

- Automatic generator start and stop.
- Generator support - in which the inverter switches from charger mode - to assist the generator in starting large loads. Selectable generator support voltage.
- Three stage battery charging with adjustable charge parameters.
- Battery temperature sensor for scaling charge parameters to temperature changes.
- Adjustable sell back current for utility interactive mode.
- AC inputs for utility and generator sources with utility priority.
- Three independently set voltage controlled relays.

---

## Inverter Mode

---

### Waveform

The inverter makes a stepped approximation to a sine wave. The number of steps typically varies from 34 to 52 per cycle. Lower battery voltage and/or higher power increases the number of steps. Distortion varies from 3% to 5%. The minimum battery voltage at which the inverter will regulate at rated power is 22 VDC. The internal protection circuitry is set at 90 AC amps.

---

### Search Mode Control

During inverter operation an adjustable search mode circuit is available. It minimizes power drain by reducing the inverter's output to pulses of a single cycle. The spacing of these pulses is a menu adjustable item. These pulses are used to detect the presence of a load. When a load is detected the inverter's output goes to full voltage. The sensitivity of the detection threshold, the spacing of the pulses and the delay time until search mode is resumed, are all adjustable.

The yellow inverter LED indicates inverter status.

- In search mode the LED blinks.
- In inverter mode with full output voltage the LED is solid.
- When the unit is in charger mode the LED is off.

Search Mode is activated by selection *AUTO* from the *ON/OFF MENU*. The *ON/OFF MENU* is accessed by pressing the *ON/OFF MENU* button.

### Setting Search Mode Watts

**Example:** With the *search watts* control set at 40, a 50 watt load will bring the unit to full output voltage. However, a 30 watt load will leave the inverter in its energy saving search mode state. If the sensitivity is increased by setting the control to 10, a 20 watt load will bring the inverter out of the search mode, while a 5 watt load will not.

When in the search mode, the yellow inverter LED will blink and the inverter will make a ticking sound. At full output voltage, the yellow power LED will burn steadily and the inverter will make a steady humming sound. When the inverter is used as an uninterruptable power supply the search mode function should be defeated.


A neon nightlite can be used as a good indicator to determine if the inverter is in search mode. Simply plug the light into any AC outlet. When the inverter is in search mode, the light will blink. If the inverter is running a load, the light will be solid.

**Exceptions: (Murphy's Law)** Unfortunately, things don't always work the way the manual says they will.

**Example A:** If the *search watts* control is set at 40 and a 30 watt incandescent light is turned on, the inverter will detect the light. The light is a bigger load than 40 watts when its filaments are cold. When the light gets bright, the filaments heat up and the light becomes a 30 watt load. Since this is below the control setting of 40, the inverter will not detect it and the light will go out. And so on and so forth.

**Example B:** If the *search watts* control is set at 30 and a 40 watt florescent light is turned on, the inverter will not detect the light. The light presents a smaller load than 30 watts until the gas in the florescent tube ionizes.

**Example C:** There are some appliances that draw power even though they are turned off. TVs with instant on circuits, microwave ovens with digital displays and VCRs are examples. These loads present a dilemma. If the sensitivity is set higher than the combination of these loads, then an auxiliary load must be used to bring the inverter out of the search mode before the appliances can be turned on. If the sensitivity is set lower than this combination of loads, the loads will be left on and will put an additional drain on the batteries. (Three such 15 watt loads would amount to an additional 45 amp/hours per 24 hours in a 24 VDC system.) One solution is to turn these items off at the wall. Use an extension cord with a rocker switch, a switch at the outlet, or the appropriate circuit breaker.

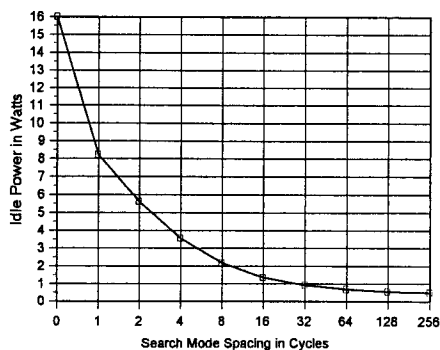

**Figure 1, Search Spacing vs. Idle Power**

### Setting Search Mode Spacing

*Search spacing* is calibrated in cycles. Therefore, to test once each second, set *search spacing* to 60. To test for loads once each 1/2 second, set to 30. The available range is 3 to 255. While in search mode there is no voltage regulation.

### Setting Search Off Delay

*Search off delay* determines the length of time that the inverter waits once it has detected no load before initiating search mode. The available range is 0 to 255. Calibration is in cycles. A setting of 240 gives a 4 second delay.

---

## Menu Adjustable Inverter Parameters

- *ON/OFF MENU*
- *SEARCH WATTS*
- *SEARCH SPACING*
- *SEARCH OFF DELAY*

---

# Battery Charger Mode

---

## AC Characteristics

The charger is a very powerful low current distortion design. Power is drawn over the full AC cycle. The result is little distortion of the AC waveform and good performance with low AC voltage and generators.

---

## Charging Method

The charging cycle uses three stages. During the initial, "Bulk Charge" stage, the unit charges at a constant current causing the battery voltage to rise. A constant voltage, "Absorption" stage, begins after the battery voltage reaches the bulk charge voltage. During this second phase, the charge rate is gradually reduced, holding the battery voltage constant at the bulk charge voltage. The third, or "Float" stage, is initiated when the current required to hold the batteries at the bulk charge voltage has tapered to a low level (*BULK DONE AMPS AC*). At this point, the battery voltage is allowed to fall to the float voltage, where it is maintained until another charge cycle is initiated. A new charge cycle is triggered when the battery voltage falls to 2 volts below float (24.4) for 90 seconds, the factory default in a 24 volt configuration..

As a safety feature, the bulk charge stage is timed. Should there be DC loads on the battery, the charge current during the bulk charge stage may not fall to a low enough level to initiate the change to float stage. This would cause undesirable gassing of the batteries. The max charge time parameter limits the amount of time that the charger will remain in bulk charge stage.

For information on battery characteristics see the chapter "Batteries".

---

## Menu Adjustable Charger Parameters

- *FLOAT VOLTAGE*
- *BULK CHARGE VOLTAGE*
- *CHARGE RATE AMPS AC* - this number is AC amps drawn by the charger when charging. (DC amps is approximately 5 times greater.)
- *BULK DONE AMPS AC*
- *MAX CHARGE TIME*

---

## Inverter/Charger Mode

---

### In Brief

When AC power is supplied to either or both of the AC HOT IN 1 and AC HOT IN 2 inputs, the unit will automatically transfer from inverter mode to battery charger mode. Before transferring, the inverter checks to see if the AC input voltage is within tolerance. If AC voltage is acceptable, the inverter synchronizes its output to the AC source. The AC source is then connected directly to the inverter's AC output. There is no transfer time interruption.

---

### AC Input Connections

AC HOT IN 1 is the priority input. It is to be used with utility power. Its acceptable AC voltage tolerance is tighter. Transfer delay is 8 seconds.

AC HOT IN 2 is for use with a generator. With this input there is a 30 second (default) delay before transfer. This delay gives the generator time to stabilize before being loaded.

**DO NOT connect AC 1 and AC 2 to a 240 VAC system. This will not work unless 2 (two) SW4024's are stacked in series.**

---

### Using Both Inputs

When both utility power and a generator are connected, the unit charges from AC HOT IN 1- the priority input. If utility power fails, the inverter supports the load and the generator is instructed to start as required by battery voltage(see section on Automatic Generator Starting). The inverter synchronizes with the generator and then transfers output power to it. When utility power returns, the

unit disconnects the generator (if it's still running), instructs it to turn off, synchronizes and reconnects to utility power.

---

## Transfer Time

Normally there is no transfer time. However, if the utility fails instantaneously and in a shorted condition, there will be a 16 millisecond transfer time. This condition causes the inverter to overload - since it is suddenly running everything that is connected to the grid. The unit has to protect itself until its internal relay disconnects the grid. Operation is then resumed one cycle later.

---

## Menu Adjustable Inverter/Charger Parameters

- *GEN WARMUP DELAY TIME*

---

# Generator Interactive Mode

---

## In Brief

The factory default settings are configured to operate the unit as an inverter/charger connected to a generator.

- Connect generator AC power out to the unit's AC HOT 2 input and NEUTRAL IN 2 terminals.
- Connect AC loads to the unit's AC HOT OUT and NEUTRAL OUT terminals.
- Set battery charger parameters (if the factory defaults listed in the technical section are not satisfactory).
- Set *GEN SIZE AMPS AC* located in the *AC INPUTS* menu heading, to that of the generator's AC breaker or output capability. This allows the generator overload and generator support features to function correctly.
- Set *GEN LOWER LIMIT AC* located in the *AC INPUTS* menu heading, to the lowest voltage that the generator will be allowed to operate without automatic support from the inverter. Keep in mind that when the inverter supports the generator it uses power from the batteries. Therefore, the generator may be running and the batteries being discharged.

---

## Generator Overload Protection

The charger is very powerful and without limits could overload a small generator. Therefore, the charger has circuitry that will keep it from overloading its source of AC power. If AC charge current combined with load current exceed the settings in the *GEN SIZE AMPS AC* menu, the charge rate will be automat-

ically reduced to keep currents from tripping the generator's breaker. In fact, if the load is large enough, the unit will stop charging completely and draw power from the batteries to support the generator.

---

## Generator Support

When the amount of amperage demanded by the AC loads is greater than the *GEN SIZE AMPS AC* setting, the inverter's power is added to that of the generator's. The unit attempts to hold the current drawn from the generator at the setting of the *GEN SIZE AMPS AC*. This allows the generator to start larger loads than it could normally.

Generator support is also available if AC voltage falls below the *SET GEN LOWER LIMIT PARAMETER*. In this case the unit will support the generator at the *SET GEN LOWER LIMIT* voltage setting as long as there is power flowing from the generator to the load.

---

## Automatic Generator Start and Stop

Extensive control of automatic generator operation is available thru the items under the menu headings *GEN AUTO START SETUP*, *GEN STARTING DETAILS*, *GEN RUNNING DETAILS* and *GEN AUTO START LOCKOUT TIMER*. The generator can be set to start on low battery and/or AC amps. The length of time the generator is forced to run (once started) is adjustable. A lock out period can be set that restricts the generator from starting during defined hours of the day. A "Must Start Bat Volts" parameter is available to override the time lock. Menu items are also provided to customize the start sequence.

Two types of relay actions are available:

- The terminals marked **RELAY 7 COIL** provide contacts that remain closed during generator run time.
- The terminals marked **RELAY 8 STARTER** provide contacts that remain closed only during generator starting.

---

## Menu Adjustable Generator Interactive Parameters

- *GEN SIZE AMPS AC*
- *SELL BACK*
- *SET GEN LOWER LIMIT*

### GEN AUTO START SETUP Menu Heading

- *AUTO START LOAD AMPS* - sets the load amps that when exceeded will start the generator.
- *AUTO START BAT VOLTS* - sets a battery voltage that will trigger generator start.

- *AUTO START DELAY MIN* - sets the length of time in minutes that the battery is allowed to be at or below the *AUTO START BAT VOLTS* or *AUTOSTART LOAD AMPS* before initiating gen-start.
- *MUST START BAT VOLTS* - sets a battery voltage that will override *GEN AUTO START LOCKOUT TIMER* settings and trigger generator start.

#### **GEN STARTING DETAILS Menu Heading**

- *GEN WARM UP SECONDS* - sets the length of time after the generator starts that the charger waits before connecting to it.
- *MAX CRANKING SECONDS*
- *MAX STARTING ATTEMPTS* - sets the number of times the inverter will try to start the generator.

#### **GEN RUNNING DETAILS Menu heading**

- *MIN RUN TIME MINUTES* - sets the minimum time the generator is forced to run after starting.
- *START RUN TIME* - Sets a time at which the generator will automatically start.
- *END RUN TIME* - Sets a time at which the generator will automatically stop.
- *START QUIET TIME* - Sets the beginning time for a period during which the generator is not allowed to run.
- *END QUIET TIME* - Sets the ending time for a period during which the generator is not allowed to run.

---

## **UPS Mode (uninterruptable power supply)**

---

### **In Brief**

With a 16 millisecond worst case transfer time, this unit makes an excellent UPS system for all but the most demanding applications. Computer magazines have demonstrated that 100 milliseconds is typically fast enough to hold up today's personal computers.

- Connect utility AC power to the unit's AC HOT 1 input and NEUTRAL IN 1 terminals.
- Connect AC loads to the unit's AC HOT OUT and NEUTRAL OUT terminals.
- Set battery charger parameters if the factory defaults listed in the technical section are not satisfactory. For UPS applications, lower charge rates with their lower AC requirements may be desirable.



- Set *GRID SIZE AMPS AC* - located in the *AC INPUTS* menu heading - (See Line Support, below).

---

## Line Support

In addition to fast transfer time, the unit will support grid in the event unintended loads threaten to trip the AC breaker. If the amount of power demanded by the AC loads is accidentally greater than the *GRID SIZE AMPS AC* setting, the inverter will contribute power to the system.

---

## Line Conditioning

The inverter's output waveform is safe for running all equipment. No filtering or conditioning is required. The AC power that is passed thru the inverter is conditioned. The natural action of the unit when charging or maintaining batteries smooths the AC source's wave form. "Surge arrestors" are still useful for high frequency voltage spikes.

---

## Using *SKIP* Mode

*SKIP* mode puts the unit in battery charger mode only periodically, and therefore defeats the unit's natural line conditioning capability. Transfer time is also increased to 50 ms. Normally, this transfer time will be satisfactory. The advantage of *SKIP* mode is the lack of audible noise.

---

## Battery Requirements

UPS requirements are, usually, of a shorter duration than most alternative energy applications. Typically, batteries are rated at 20 hours. This means that a 100 amp hour battery can deliver 5 amp hours for 20 hours. It cannot deliver 100 amp hours for 1 hour. Battery manufacturers should have derating curves for their products.

---

## Menu Adjustable UPS Parameters

- *STDBY*
- *SET GRIDSIZE AMPS AC* - set to the size of the AC breaker feeding the unit's AC INPUT 1.

---

# Utility Interactive Mode

---

---

## Overview

This mode is used to sell power to the utilities. It is simple to set the unit up to accomplish this. However, this type of installation is so new, that not all utility companies have formalized their regulations for acceptable installation. Regulations will vary from one utility to another. The utility companies have a right and a need to be careful about how power is fed into their system. **Utility inter-tie should be done with the assistance of your dealer and must be done with the approval of the local utility company.**

Note: Since a utility interactive installation requires an understanding of your local utility code, no installation diagrams or details are included in this manual.

---

## Battery Requirements

Batteries are required for utility inter-tie operation. The batteries can be small, if there is no requirement for back-up power in the event of utility failure. Two thousand watt/hours is sufficient (100 amp/hours at 24 volts is 2400 watt hours).

---

## Theory of Operation

When the *SELL* item is highlighted from the grid mode menu, the unit moves excess power from the batteries to the grid. In utility line tie mode, the unit is simply a battery charger that is capable of executing its three stage charging cycle even if it requires pulling the battery voltage down. To pull battery voltage down, power is taken from the batteries and put on the grid. The unit is more accurately described as a utility interactive battery charger. This means that battery voltages are properly maintained whenever utility, or grid power, is connected.

In a solar array configuration, a charge controller is not needed when the unit is operational and utility is connected. If the unit were turned off, or utility power were to fail, the batteries could quickly be over-charged. One of the unit's voltage controlled relays could be used to protect the batteries in the event of utility failure. It would be programmed to open a relay from solar panels at a battery voltage above the bulk charge voltage setting of the charger.

---

## Protection Circuitry

In utility interactive mode the unit is capable of detecting three types of failures.

- **Grid shorted** - Normally if power fails, the inverter will be trying to supply power for the entire neighborhood. This condition looks like a short circuit to the inverter and causes it to disconnect from grid.

- **Grid open** - The inverter can tell when there is no current being delivered to the grid and it will disconnect.
- **Islanding** - This occurs when the grid has failed and the "neighborhood" that the inverter is powering requires the same amount of power that is being supplied to the unit's batteries. The islanding detection circuit checks once each minute for this condition.

---

### **Menu Adjustable Utility Interactive Parameters**

- *SET GRID SIZE AMPS AC* - sets the maximum amount of AC amps allowed to be fed back to the grid.
- *SELL*

---

# Control Panel


---

## User Menu

---

### Overview

All selectable features and adjustable parameters are controlled via the liquid crystal display (LCD) and the eight function buttons on the control panel. This includes turning the unit on or off. The menu is composed of 15 menu headings with related menu items under each heading. At the menu item level, either a parameter is changed, a feature is enable or or a value is read.

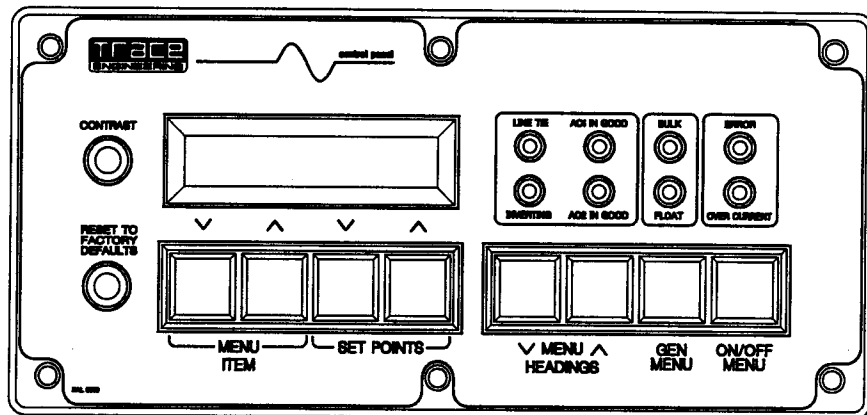

Figure, 2 - Control Panel

---

### Navigating the User Menu

The two *Menu Heading* buttons are used to move either up or down thru the selection of menu headings. Once a menu heading is selected, the two *MENU ITEM* buttons are used to move up or down thru the list of menu items. The *two SET POINT* buttons change the value of a parameter or enable a feature. Two buttons are dedicated to automatically select commonly used menu headings. These are *ON/OFF MENU* and *GEN MENU* buttons.

---

## On/Off Menu

When the unit is first connected to batteries the On/Off menu is displayed. Pressing the *ON/OFF MENU* button from any where in the user menu will display the on/off menu. There are three options available from this menu.

INVERTER
OFF    AUTO    ON

Figure 3, On/Off Menu Display

- **OFF** - Inverter and charger are off.
- **AUTO** - Inverter and charger are enabled and search mode is activated.
- **ON** - Inverter and charger are enabled and search mode is off.

Use the *MENU ITEM* buttons to make a selection.. The second letter of the selected item will be underlined.

---

## Generator Menu

Pressing the *GEN MENU* button from anywhere in the user menu will display the generator menu. There are three options available from this menu.

GENERATOR
OFF    AUTO    ON

Figure 4, Generator Menu Display

- **OFF** - Turns off a generator if one has been started and is controlled by the unit. Defeats the automatic generator start features.
- **AUTO** - Enables the automatic generator start features.
- **ON** - Starts a generator that is wired to be controlled by the unit.

Use the *MENU ITEM* buttons to make a selection. The second letter of the selected item will be underlined.

---

## Mode Menu

The second menu heading sets the mode in which the inverter will be operating.

- **FLOAT** - This mode will charge batteries from grid and maintain the preset float voltage at all times grid is connected.
- **STDBY** - This is very similar to Float. The inverter will perform a bulk charge once per day from the grid. The inverter will then go totally silent and wait for AC to fail, or until the next day when it performs another bulk charge.
- **SELL** - Enables the inverter to move excess power from the batteries to the grid (AC1 IN). **This mode must have the approval of the local power utility prior to its use.** In the U.S utility companies are required by law to purchase any excess power generated by their customers; however, they make the rules. Be advised: some utilities will be more receptive than others.

---

## User Menu Headings and Items

### AMP METERS

INVERTER AMPS AC	Reads AC amperage. Plus (+) Amps indicates rate of charge. Negative (-) gives rate of discharge.
INPUT AMPS AC	Reads total AC input current from the grid or generator. The reading is positive if buying power and negative if selling.
LOAD AMPS AC	Reads that portion of the input current that is going to the load. The reading is always positive.

### VOLT METERS

BATTERY VOLTS DC	Reads the average output voltage. Similar to the voltage reading of a standard voltmeter.
INVERTER VOLTS AC	Reads the RMS value of the inverter's AC output voltage.

### ERROR CAUSES

OVER CURRENT	Safe operating limits of the power devices were reached. This can occur in inverter or charger mode.
TRANSFORMER OVERTEMP	Transformer exceeded safe operating temperature.
HEATSINK OVERTEMP	Power devices exceeded safe operating temperature.
HIGH BATTERY	Battery voltage above safe limits.
LOW BATTERY	Battery voltage below safe limits.
EXTERNAL ERROR (STACKED)	Something amiss with the series interface cable or the unit in series.
MANUAL OFF	The unit was turned off.

### BATTERY

SET FLOAT VOLTS DC	Sets the voltage at which the batteries will be maintained upon completion of the charge cycle.
SET BULK VOLTS DC	Sets the maximum voltage at which the batteries will be charged.
SET MAX CHARGE AMPS AC	Sets the maximum charge rate in terms of AC current. Battery current is approximately 5 times this amount for a 24 volt model and 2.5 times for a 48 volt model. The available range is 0 to 33 amps.

SET BULK DONE AMPS AC	Sets the current level at which the charger stops charging at the bulk voltage and begins charging at the float voltage.
SET MAX CHARGE TIME HM	This setting provides a limit to the amount of time that the batteries are held above float charge voltage. The charge current may not fall to a low enough level to trigger the change to float stage if DC loads are present.
SET LOW BATTERY CUT OUT VDC	The inverter turns off to protect the batteries when temperature compensated battery voltage is reached.
SET LOW BATTERY CUT IN VDC	This is the battery voltage at which the inverter turns on after having shut off due to the low battery cut out.
SET HIGH BATTERY CUT OUT VDC	This is the high battery voltage at which the inverter turns off. Hi battery cut-in occurs at 2 VDC under HBCO.
SET TEMP COMP -0.1V/8 DEG C	Battery temperature compensation is adjustable from 0 to -.6 volts/deg C on 24 VDC models and from 0 to -1.2 volts/deg C on 48 VDC models.

## INVERTER

SET SEARCH WATTS	The threshold sensitivity of the search mode circuit is adjustable. The available settings are from 16 to 240 watts in 16 watt increments.
SET SEARCH SPACING	The length of time between each search pulse is adjustable. The setting is in cycles. Therefore, a setting of 30 would generate search pulses that are 1/2 second apart. The range of settings is from 0 to 255 cycles.
SET SEARCH OFF DELAY	When the inverter determines that the load size is below the search mode threshold setting, it waits before entering the search mode. The length of this wait is adjustable. The setting is in cycles. Therefore, a setting of 120 would cause the inverter to wait 2 seconds before entering the search mode. The range of settings is from 0 to 255 cycles.

## AC INPUTS

SET GRID SIZE AMPS AC	This setting determines the level in AC amps at which the unit begins to support the line. Typically this is set to the size of the AC circuit breaker that feeds the <i>AC INPUT 1</i> .
SET GEN SIZE AMPS AC	This setting determines the level in AC amps at which the unit begins to support the generator. Typically this is set to the size of the generator's circuit breaker feeding the <i>AC INPUT 2</i> .

**SET GRID LOWER LIMIT VAC** Sets the lowest voltage at which the unit will connect to the generator. This also sets the voltage at which the unit will begin supporting the grid. Grid support is maintained as long as there is power flowing from the grid to the load.

**SET GEN LOWER LIMIT VAC** Sets the lowest voltage at which the unit will connect to the generator. This also sets the voltage at which the unit will begin supporting the generator. Generator support is maintained as long as there is power flowing from the generator to the load.

**Note:** Typically SET GEN LOWER LIMIT VAC and SET GRID LOWER LIMIT AC will be based upon load requirements.

**SET UPPER LIMIT VAC** Sets the highest voltage at which the unit is allowed to connect to the line. This is also the maximum voltage at which the inverter will *sell* back to the line if SELL BACK is enabled.

#### **GRID USAGE TIMER**

**START CHARGING TIME** - Connects AC1 input to the grid and starts charging.

**END CHARGING TIME** - Disconnects from the grid and runs the house from battery power.

**Note:** By setting the beginning time equal to the ending time, the grid usage timer feature is defeated.

#### **GENERATOR TIMER**

**START RUN** time H:M - Will start generator daily at this time.

**END RUN** time H:M - Will stop generator daily at this time.

**START QUIET** For auto starting based on battery voltage. Unit will not start during this period. Usually set during sleeping hours.

**END QUIET** This finishes the QUIET Timer, allowing the generator to start as required.

#### **GEN AUTO START SETUP**

**SET AUTO START LOAD AMPS** The automatic generator start feature can be triggered by the amount of inverter current that is being delivered to the loads. The available range is 0 to 255 amps. To defeat this feature, set the current trigger level to a high value.

**SET AUTO START BATT VOLTS** Sets a battery voltage that will initiate generator start.



SET AUTO START DELAY MIN	Sets the amount of time in minutes that an autostart condition must persist before generator start is initiated.
SET MUST START BATT VOLTS	Sets a battery voltage that will initiate generator start regardless of generator QUIET timer settings.
SET MINIMUM RUN TIME MINUTES	Sets the minimum amount of time the generator is forced to run after it has been automatically started.

#### **GEN STARTING DETAILS**

SET GEN WARMUP SECONDS	Sets the number of seconds the generator is allowed to run before being connected to the loads. Factory default - 30 seconds.
SET MAX CRANK- ING SECONDS	Sets the maximum number of seconds the starter will be engaged during the starting sequence. Factory default - 5 seconds.
SET MAX STARTING ATTEMPTS	Sets the maximum number of attempts that will be made to start the generator. The starting attempt counter is reset with the <i>GEN OFF</i> command.

#### **TIME OF DAY**

SET SECOND	Sets the seconds of the unit's internal clock.
SET MINUTE	Sets the minutes of the unit's internal clock.
SET HOUR	Sets the hour. The setting is based on a 24 hour clock.
TIME OF DAY	Reads the time of day setting.

#### **AUXILARY RELAYS R9,R10 AND R11**

SET AUX RELAY 9 VOLTS DC	Sets the voltage trip point for the auxillary relay number 9.
SET AUX RELAY 10 VOLTS DC	Sets the voltage trip point for the auxillary relay number 10.
SET AUX RELAY 11 VOLTS DC	Sets the voltage trip point for the auxillary relay number 12.
SET HYSTERESIS TENTHS VDC	The hysteresis setting determines the voltage difference between when the relay is activated and when it returns to its normal condition. The relay closes at set point and opens on set point minus the hysteresis value.

---

## LED Indicators

The Trace SW4024 Series features eight LED indicators which identify the various operating parameters of the sine wave unit. Unless otherwise indicated, LED's will be "solid" in appearance, when operational. Starting from left to right:

### LINE TIE (Yellow)

- *SELL* has been enabled.

### AC1 IN (Green)

- AC is available at input terminal, but not necessarily good.

### BULK (Yellow)

- The unit is charging at a constant current, causing battery voltage to rise until bulk volts is reached.

### ERROR (Red)

- A shutdown condition has occurred. (Refer to SHUTDOWN CAUSES in Control Panel section for a list of possible conditions.)

### INVERTING (Yellow)

- The inverter is providing primary power.

### AC2 IN GOOD (Green)

- Generator AC has been detected by the inverter, but is not necessarily good.

### FLOAT (Green)

- Battery voltage has reached "Float" voltage, where it will be maintained until another charge cycle is initiated.

### OVER CURRENT (Red)

- The output has reached 90 amps. A sustained over current condition will require a manual reset.

---

# Batteries

Batteries come in different sizes, types, amp hours, voltages and chemistries. There are nearly as many descriptions of exactly how batteries should be charged as there are people willing to offer explanations. It is not possible here to discuss all aspects in detail. However, there are basic guidelines you can follow that will help in battery selection and ensure that your batteries are far better maintained than the majority.

---

## Selection of Battery Type

### Starting Batteries

These are designed for high cranking power, but not deep cycling. Don't use them. It does not hurt the inverter - they simply will not last long in a deep cycle application. The way they are rated should give you a good indication of their intended use. "Cold Cranking Amps" is a measure of the amperage output that can be sustained for 30 seconds.

### Telephone Company Batteries

Second-hand telephone batteries are often available at far below original cost. They are sometimes used in remote homes successfully. Typically, they are lead calcium in design. Therefore, they should not be cycled below 80% of their amp/hr rating. Keep this in mind when evaluating their amp/hr to cost ratio.

### Deep Cycle Batteries

This is the type of battery best suited for use with inverters. They are designed to have the majority of their capacity used before being recharged. They are available in many sizes and types. The most common type is the non-sealed liquid electrolyte battery.

Non-sealed types have battery caps. The caps should be removed periodically to check the level of electrolyte. When a cell is low, distilled water should be added.

A popular and inexpensive battery of this type is the "golf cart" battery. It is a 6 volt design typically rated at 220 amp/hr, and costing about \$70-\$80.

Many systems use Trojan L16's. These are 350 amp/hr, 6 volts, and distributed by Interstate Batteries at a list of about \$185. They are 17 inches in height - which may be troublesome in RV or marine installations.

8D batteries are available with either cranking or deep cycle construction. Since they are most commonly used to start truck engines, you should make sure you purchase the deep cycle version. Rolls and Surette make a very rugged but expensive 8D (800 deep cycles claimed). The 8D is typically rated at 220 amp/hrs at 12 volts.

### Sealed Gel Cell

Another type of battery construction is the sealed gel cell. They don't use battery caps. The electrolyte is in the form of a gel rather than a liquid which allows the batteries to be mounted in any position. The advantages are no maintenance, long life (800 cycles claimed) and low self discharge. The disadvantage is high initial cost. Typically \$450 to \$500 for an 8D.

While there are many manufacturers of quality non-sealed batteries, there are only a few manufacturers of gel cells. Sonnenschein, marketed as Prevailer, and the Dynasty, by Johnson Controls are two.

### NiCad and Nickel Iron (NiFe)

Trace inverters and battery chargers are optimized for use with lead acid batteries which have a nominal voltage of 2.0 volts per cell. NiCad/NiFe batteries have a nominal cell voltage of 1.2 volts per cell. The nominal voltage of a NiCad/NiFe battery bank can be made the same as a lead acid bank just by juggling the number of cells (20 cells for NiCad/NiFe vs 12 cells for lead acid both produce 24 volts nominal.) However, the NiCad/NiFe battery bank will have a much higher operating voltage range.

The easiest and most effective way to use NiCad/NiFe batteries with Trace inverters is to use nineteen cells in the battery bank instead of twenty. This will reduce the battery bank operating voltage to about the same level as a lead-acid bank, so standard charger settings can be used.

A second option on either 12 or 24 volt systems is to adjust the Bulk Charge Voltage to its maximum setting (14.7 on a 12 volt system; 29.4 on a 24 volt system.) This will provide a complete charge, albeit at a slower rate than if a higher charge voltage (or lesser number of cells) were used.

*Return Amps* menu can be set higher than with lead acid batteries since NiCad/NiFe batteries do not require an Absorption stage.

If battery requirements are large, industrial grade 2 volt batteries are suitable. This is the type of battery used in fork lifts and submarines.

Float Voltage settings for NiCad/NiFe batteries should be 1.32 to 1.35 volts per cell ( 26.4 - 27.0 volts).

Note: In alternative energy applications (solar, wind, hydro) DC charge controllers should be set to a level below the inverter high voltage cutoff point of 30.5 volts.

---

## Maintenance

If you have read the section "Theory of Operation", you already have a good idea of the stages of battery charging that combine to promote fast charging and ensure long battery life. Basically, there are four charger related considerations to properly care for your batteries.

- **Charge Rate** - The maximum safe charge rate is related to the size and type of your batteries. Standard vented lead acid batteries (with battery caps) can be charged at a high rate - equal to their capacity. Sealed and gel cell batteries require a lower charge rate. Check with the battery manufacturer. Use the MAX CHG AMPS control to make this setting.
- **Charge Voltage** - The normal range based on cell voltage is 2.367 to 2.4 VDC. Gel cell batteries are usually set to the lower figure, while non-sealed batteries are set to the higher.
- **Float Voltage** - The batteries experience less gassing if they are maintained at a lower voltage than the voltage at which they are charged. Both sealed and non-sealed batteries can be set to a float charge of 2.2 VDC per cell.
- **Equalization (Non-Sealed Batteries Only)** - Every month or two batteries may need to be "equalized." (A fancy term for over-charged.) Since the individual battery cells are not exactly identical, some may still have sulfate on their plates after a complete charge cycle. Or, if the batteries never received a full charge, all plates will have sulfate left on them. If the sulfate remains on the plates for an extended period of time, it will harden and seal off a percentage of the plate area, reducing the capacity of the battery. By equalizing the batteries, all the sulfate is removed from the plates. Additionally, the gassing that results stirs up the electrolyte which tends to stratify. Stratification concentrates the sulfuric acid in the bottom of the cell while the top becomes watery. This corrodes the plates.

Equalization is accomplished by charging batteries at a voltage of 2.5 to 2.6 VDC per cell.

**CAUTION: Equalization should be done only with standard electrolyte batteries. If you have sealed or gel cell batteries, check first with the battery manufacturer before equalizing. DC loads should be disconnected before equalization to protect appliances from high battery voltage.**

**Temperature Compensation** - Temperature affects the optimum voltage values for the different charge stages. The temperature probe automatically fine tunes these voltages.

---

## Sizing

Batteries are the inverter's fuel tank. The larger the batteries, the longer the inverter can operate before recharging is necessary. An undersized battery bank results in reduced battery life and disappointing system performance.

### Estimating Battery Requirements

In order to determine the proper battery bank size, it is necessary to compute the number of amp hours that will be used **between charging cycles**. When the required amp/hrs are known, size the batteries at approximately twice this amount. Doubling the expected amp/hr usage ensures that the batteries will not be overly discharged and extends battery life.

To compute total amp/hrs usage, the amp/hr requirements of each appliance that is to be used are determined and then added together. *Table 1* in the tables section provides a means of figuring the amp hours drawn by various types and sizes of loads. Use the table as follows: (1) enter on the left with the row of the appropriate appliance or wattage (2) enter from the top with the column of the length of time the appliance will be run between charge cycles, (3) the intersection of row and column provides the amp hours that will be consumed.

Follow this procedure for each item you want to use with the inverter. Add the resulting amp hour requirements. The minimum properly sized battery bank will be double this amount.

You may wish to compute your battery requirements using the nameplate rating of your appliances. The critical formula is  $Watts = Volts \times Amps$ . Divide the wattage of your load by the battery voltage to determine the amperage the load will draw from the batteries. Multiply the amperage times the hours and you have, reasonably enough, amp-hrs.

**Notes:** If the AC current is known, then, the battery amperage will be: *AC current times AC voltage divided by the battery voltage.*

Motors are normally marked with their running current rather than their starting current. Starting current may be 3 to 6 times running current.

---

## Hook-up Configurations


Battery banks of substantial size are generally created by connecting several batteries together. There are three ways to do this. Batteries may be connected in series, parallel or series/parallel.

### Series Connection

When batteries are connected with the plus terminal of one to the minus of the next, they are in series. A group of batteries in series has the amp/hour rating of a single battery but a voltage rating equal to the sum of the individual batteries voltages.

### Parallel Connection

Batteries are connected in parallel when all the positive terminals of a group of batteries are connected and, then, all the negative terminals are connected. In parallel, batteries have the voltage of a single battery and an amp/hour rating equal to the sum of the individual batteries.

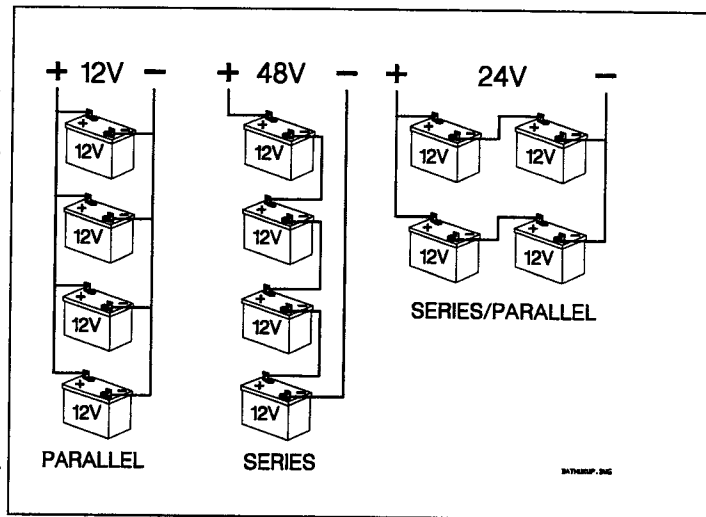

**Figure 5, Multiple Battery Configurations**

### Series Parallel Connection

As the name implies, both of the above techniques are used in combination.

---

## Installation

---

## Environment

Inverters are sophisticated electronic devices and should be treated accordingly. When selecting the operating environment for the inverter, don't think of it in the same terms as other equipment that works with it, e.g. batteries, diesel generators, motor generators, washing machines etc. It is a highly complex microprocessor controlled device. There are nearly 500,000 silicon junctions in its output devices and integrated circuits. The crystal oscillator runs at 4 megahertz. The drive circuitry timing is accurate to a thousandth of a second. Genetically speaking, it is a cousin to stereo equipment, television sets or computers. The use of conformal coated circuit boards, plated copper bus bars, powder coated metal components, and stainless steel fasteners improves tolerance to hostile environments. However, in a condensing environment (one in which humidity and/or temperature change cause water to form on components) all the ingredients for electrolysis are present - water, electricity and metals. In a condensing environment the life expectancy of the inverter is indeterminate and the warranty is voided.

**Caution:** It is in your best interests to install the inverter in a dry, protected location away from sources of high temperature and moisture. Exposure to saltwater is particularly destructive and potentially hazardous.

Locate the inverter as close to the batteries as possible in order to keep the battery cables short. However, do **not** locate the inverter in the same compartment as the batteries. Batteries generate hydrogen sulfide gas which is very corrosive to electronics equipment - and everything else. They also generate hydrogen and oxygen. If accumulated, this mixture could be ignited by an arc caused by the connecting of battery cables or the switching of a relay.

Do not mount the inverter in a closed container. To operate at high power for sustained periods of time, unrestricted air flow is required. Without it, the protection circuitry will activate and reduce the maximum power available.

**UL specification 1741 (photovoltaic installations) requires that the inverter be mounted on a vertical surface (on a wall) and that the keyhole slots not be used for mounting.** The purpose of this requirement is to orient the inverter so that its bottom cover has no holes that would allow burning material to be ejected in the event of an internal fire.

Use 1/4" minimum diameter bolts for mounting. The mounting must be capable of supporting twice the weight of the inverter in order to comply with UL 1741.

---

## AC Wiring

---

### Overview

The National Electrical Code (NEC) defines the standards for AC and DC installation wiring in residential, commercial and RV applications, but there are still many installation variables. Most are determined by the level of automatic switching desired, the amount of external AC power to be switched and the loads to be driven.

---

### AC Connections

**Installation should be done by a qualified electrician. Consult local code for the proper wire sizes, connectors and conduit.**

In mobile installations it is advantageous to mount the inverter so that it is isolated from vibration. Treat the inverter as you would any fine piece of electronic equipment.

A six station internal terminal block is provided to make the AC connections. The terminal block is located on the left-hand side of the inverter, enclosed under a cover plate. The terminal block is used to hardwire all AC connections. Consult your local code for proper wire sizes, connectors, conduit, etc. For 120 VAC units, we recommend 6 AWG (THHN) wire. Code requires that an external disconnect switch be used in the AC input wiring circuit. The AC breakers in a sub panel will meet this requirement.



**Ensure the inverter is disconnected from the battery.** Feed the wires thru conduit fittings located on the side of the inverter. (Note: Conduit fittings must be purchased separately and are required by code to comply with photovoltaic installations.) Following the wiring guide on the AC board inside the cover plate, connect AC wiring, as follows: (from top to bottom)

Wire	Color	Terminal Block
Public Power (Grid)	Black (Hot)	AC HOT IN 1
Generator	Black (Hot)	AC HOT IN 2
Public Power	White (Neutral)	NEUTRAL IN 1
Generator	White (Neutral)	NEUTRAL IN 2
AC Neutral Out	White (Neutral)	NEUTRAL OUT
AC Power Out	Black (Hot)	AC HOT OUT

---

### Ground Fault Interrupt Outlets (GFI's)

Trace Engineering has tested the following GFI's and found them to work satisfactorily with our inverters:

LEVITON	6599-W
PASS & SEYMOR	1591RI 4A957
ACE Hardware	ACE 33238

---

### Important Precautions

The output side of the inverter's AC wiring should at no time be connected to public power or a generator. This condition is far worse than a short circuit. If the unit survives this condition, it will shut down until corrections are made.

---

## DC Wiring

---

### Safety Instructions

THIS INVERTER IS NOT REVERSE POLARITY PROTECTED. If the positive terminal of the battery is connected to the negative terminal of the inverter and vice versa, the result will be instantaneous failure of nearly every power FET. To compound your misfortune, this type of failure is very obvious, and is **not covered under the warranty**. So, pay close attention and double-check when making the battery connections.

The inverter's maximum peak current requirements are high. If battery cables are too small and/or connections are loose, efficiency and maximum output

power are degraded. Small cables or loose connections can also cause dangerous overheating of the wire and/or terminals.

Make the battery cables as large and as short as possible. Tape the battery cables together. This reduces the inductance of the wire resulting in a better waveform and less current in the inverter's filter capacitors.

Code your battery cables with colored tape or heat shrink tubing. Cable ends must have crimped and soldered copper ring terminals.

---

## DC Disconnect

In order to comply with the UP 1741 safety standard (residential installations) a UL approved form of battery disconnect is required. These installation parts are not supplied by Trace Engineering. They may be obtained from your dealer, electrical supply houses or:

Industrial Controls Supply Company  
22410 70th Ave West Unit 6  
Mountlake Terrace, Wa. 98043  
Phone (206) 771-6344  
Fax (206) 775-8901

Ananda Power Technologies, Inc.  
14618 Tyler Foote Rd.  
Nevada City, CA 95959  
Phone (916) 292-3834  
Fax (916) 292-3330

---

## Battery Cable Connection

**Observe Battery Polarity!** Place the ring terminal over the bolt and directly against the inverter's copper terminal. Tighten the 5/16 nut to 10-15 ft./lbs.

Note: Connecting the battery cables to the inverter battery terminals will cause an arc - usually accompanied by a "snap". This is normal - don't let it scare you.

Never disconnect the battery cables while the inverter is delivering power or battery charger is operating. Always turn the unit off first.

---

## Battery Cable Sizing

The bigger the battery cables the better. Undersized cables result in additional stress on the inverter, lower efficiency, reduced surge power and lower peak output voltage. Don't use cables that are too small and degrade the efficiency that we have worked so hard to achieve and you have paid so much to own. The following table gives recommended cable sizes for various cable run lengths and inverter voltages.

### Cable Length

DC Volts	Under 5 ft	5 to 10 ft	10 to 20 ft
12	00	0000	0000
24	0	00	0000
32	1	0	000
36	2	0	00
48	4	1	0

**WARNING !!** Battery cables that are very small will melt and burn the first time the inverter is asked to produce high power.

**Table of Load size vs. Time vs. Amp-Hours at 24 VDC**

Appliance	Watts	Time in Minutes					
		5	15	30	60	120	240
Single PL Light	10	.06	.2	.3	.7	1.3	2.7
B & W TV	50	.2	.6	1	2	4.	8
Computer	100	.4	1	2	4	8	17
Color TV	200	1	2	4	8	17	34
Blender	400	2	4	8	17	34	67
Skil Saw	800	3	8	17	34	67	133
Toaster	1000	4	11	23	46	93	185
Microwave	1200	5	14	28	57	114	227
Hot Plate	1800	8	22	44	88	177	353
		Amp Hours at 24 VDC					

---

# Applications

---

## Resistive Loads

These are the loads that the inverter finds the simplest and most efficient to drive. Voltage and current are in phase, or, in this case, in step with one another. Resistive loads usually generate heat in order to accomplish their tasks. Toasters, coffee pots and incandescent lights are typical resistive loads. Larger resistive loads--such as electric stoves and water heaters--are usually impractical to run off an inverter. Even if the inverter could accommodate the load, the size of battery bank required would be impractical.

---

## Inductive Loads

Any device that has a coil of wire in it probably has an inductive load characteristic. Most electronics have transformers (TV's, stereos, etc.) and are therefore inductive. Typically, the most inductive loads are motors. The most difficult load for the inverter to drive will be the largest motor you manage to start. With inductive loads, the rise in voltage applied to the load is not accompanied by a simultaneous rise in current. The current is delayed. The length of the delay is a measure of inductance. The current makes up for its slow start by continuing to flow after the inverter changes AC voltage polarity.

Inductive loads, by their nature, require more current to operate than a resistive load of the same wattage rating, regardless of whether power is being supplied by an inverter, a generator or grid.

Induction motors (motors without brushes) require 2 to 6 times their running current on start-up. The most demanding are those that start under load, eg. compressors and pumps. The largest motor of this type that the inverter will run varies from 1/3 to 3/4 hp. Of the capacitor start motors, typical in drill presses, band saws, etc., the largest you may expect to run is 1 to 1.5 hp. Universal motors are generally easier to start. The inverter may start up to 2.5 hp universal motors. Since motor characteristics vary, only testing will determine if a specific load can be started and how long it can be run.

---

# Technical Information

---

## Theory of Operation

The design of the SW4000 Series is patent pending in the United States, Japan and Europe. It uses three transformers in a topology that allows their individual voltages to be added or subtracted. Three transformers make twenty-seven possible voltages. The maximum number of steps in a sinewave is 52. One of the microprocessors uses the available voltages to create waveforms of different voltages and frequencies.

The unit runs in two basic formats: as a standalone inverter, or with its output in parallel with and synchronized to an AC source. In inverter mode only 60 hz waveforms are created. As the battery voltage rises, waveforms with progressively fewer steps are generated. More steps are used with increased power and decreased battery voltage.

In synchronized mode the unit synchronizes with AC and then connects AC to the unit's output. The frequency of the AC source is tracked and the unit constantly adjusts its frequency to maintain a lock.

The power topology is bi-directional. If the waveform created by the unit is larger than the AC source, power flows from the batteries to the load. When the waveform generated is smaller than the AC source, power flows to the battery. The various modes of operation use different algorithms for determining the size of the waveform to be created by the unit. In battery charger mode, for example, waveforms smaller than the AC source are created that cause current to flow into the batteries in accordance with the three stage charge cycle. However, if the AC source current approaches MAX AC INPUT, the unit will switch the generator support algorithm and create waveforms that are larger than the AC source. This draws power from the batteries and prevents the AC input power from exceeding the MAX AC INPUT set point.

In utility inter-active mode, the unit acts as a bi-directional battery charger. Thus, if an external source such as solar panels attempts to raise the batteries above the float voltage setting, the unit will act to hold the battery voltage constant. The battery charger's output waveform will increase in amplitude moving power from the batteries to the grid in an amount appropriate to maintain the batteries at the float voltage setting.

## Specifications

MODEL	SW4024	SW4048	SW4024W
Continuous Power @ 20° C	4000 watts	4000 watts	4000 watts
Maximum AC Output	78 amps RMS	78 amps RMS	78 amps RMS
Efficiency	94% maximum	95% maximum	94% maximum
Input Current			
Search Mode (lowest setting)	.04 amps	.025 amps	.040 amps
Full Voltage	.70 amps	.35 amps	.70 amps
Rated Power	200 amps	100 amps	200 amps
Short Circuit	360 amps	180 amps	360 amps
Nominal Input Voltage	24 vdc	48 vdc	24 vdc
Input Voltage Range	20 to 31.5 vdc	40 to 63 vdc	20 to 31.5 vdc
Voltage Regulation	+/- 2%	+/- 2%	+/-2%
Waveform	sine wave	sine wave	sine wave
Distortion	3 to 5%	3 to 5%	3 to 5%
Power Factor Allowed	-1 to 1	-1 to 1	-1 to 1
Frequency Regulation	60 Hz +/- .04%	60 Hz +/- .04%	60 Hz +/- .04%
Output Voltage	120 vac	120 vac	220 vac
Adjustable Load Sensing	16 watts to defeated	16 watts to defeated	16 watts to defeated
Series Operation (with optional cable)	yes (240 vac)	yes (240 vac)	no
Automatic Low Battery Protection	adjustable	adjustable	adjustable
Forced Air Cooling - 4 Speed	thermally activated	thermally activated	thermally activated
Automatic Transfer Relay	60 amp	60 amp	50 amp
Adjustable Charge Rate	0 to 120 amps DC	0 to 120 amps DC	0 to 120 amps DC
Three Stage Charging	yes	yes	yes
Temperature Compensation Probe	yes	yes	yes
Remote Control	optional	optional	optional
Environmental Characteristics			
Operating Ambient Temperature	0°C to +60°C	0°C to +60°C	0°C to +60°C
Non-operating Ambient Temp	-55°C to +75°C	-55°C to +75°C	-55°C to +75°C
Altitude Operating	15,000 ft	15,000 ft	15,000 ft
Altitude Non-operating	50,000 ft	50,000 ft	50,000 ft
Weight	105 lbs	105 lbs	105 lbs
Dimensions			
Mounting	Wall with 16" mounting centers or shelf		


---

## Performance Graphs

---

### Power vs. Efficiency

There are two primary types of losses that combine to create the efficiency curve. The first is the energy that is required to operate the inverter at full output voltage while delivering no current. This is the idle power. At low power levels it is the largest contributor to efficiency losses.

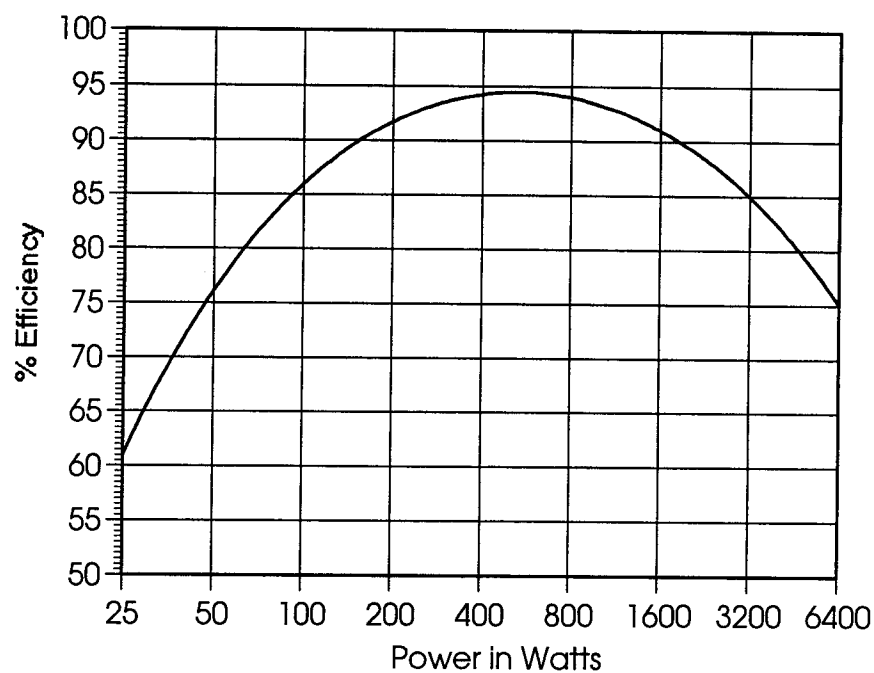


The second and largest source of loss is a result of the resistance in the transformer and power devices. The power lost here is proportional to the square of the output power. For Example, losses at 2000 watts will be four times higher than losses at 1000 watts.

This graph above represents a typical inverter's efficiency while operating resistive loads. Inductive loads such as motors are run less efficiently due to the impact of power factor losses.

---

## Maximum RMS Amps AC vs. Time

Loads presented to the inverter are seldom constant. Typically, large loads are operated for only short periods of time. In order to provide the maximum utility, TRACE inverters are allowed to operate at power levels that exceed their continuous power ratings. This graph shows how AC currents that are larger than the inverter can sustain continuously can be operated for useful periods of time.

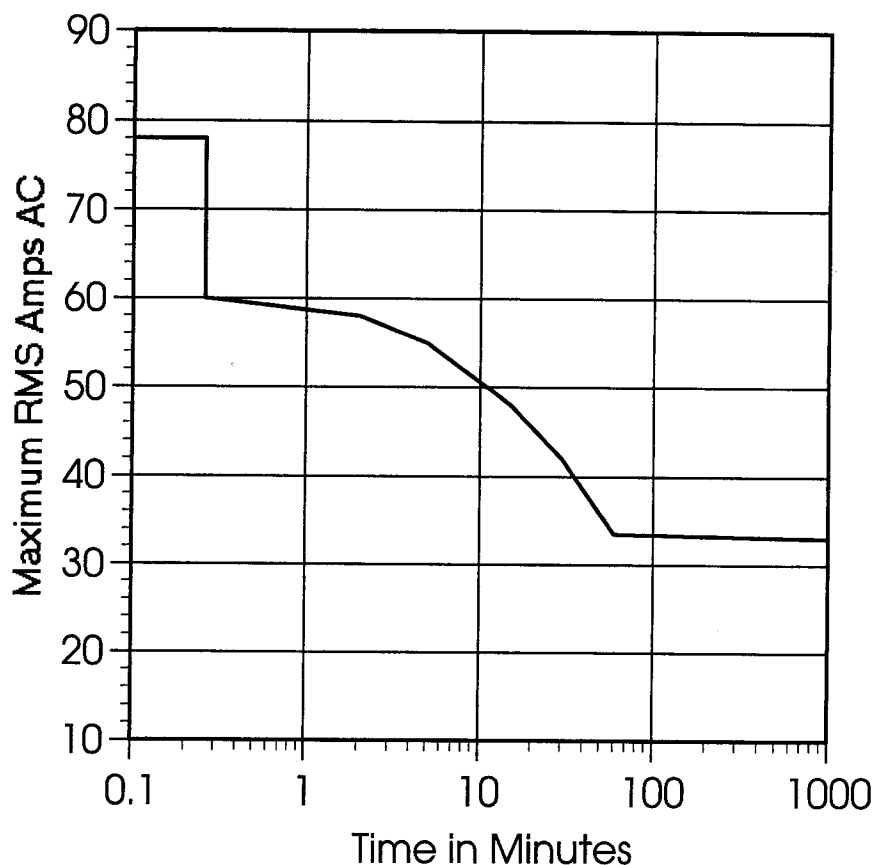

The length of time that the inverter can operate at high power is limited by temperature. When large loads are run, the inverter's temperature increases. At the point where more heat is created in the inverter than can be dissipated, its ability to operate becomes time limited. The accompanying graph shows the relationship between AC output current and the length of time the indicated current can be sustained. If the combination of battery voltage and load size are within the inverter's regulation capability, then power will be  $\text{AMPS} \times 120$ . Typically, most battery bank's voltage will drop under heavy loads, limiting maximum regulation to a range of 40 to 50 amps.


This graph assumes an ambient operating temperature of  $20^{\circ}\text{C}$ .



---

### Maximum Regulated Power vs. Battery Voltage


The inverter's ability to regulate its output voltage is affected by battery voltage. As the battery voltage is reduced, the maximum regulated power the inverter can produce decreases. The area below the line defines the region in which there is insufficient battery voltage to achieve the related power level and still provide regulated output.

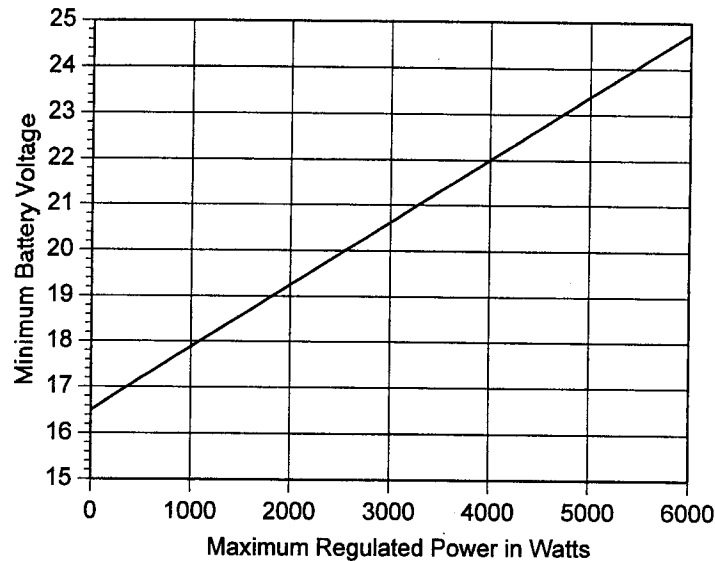

---

### Charger Performance at 100 VAC (Low Line Voltage)

With Low AC line voltage the charging capability of the unit is reduced. The combination of low line and high battery voltage reduces maximum charge rate still further. The graph below shows the maximum charge rate for various battery voltages when the line voltage is 100 VAC.

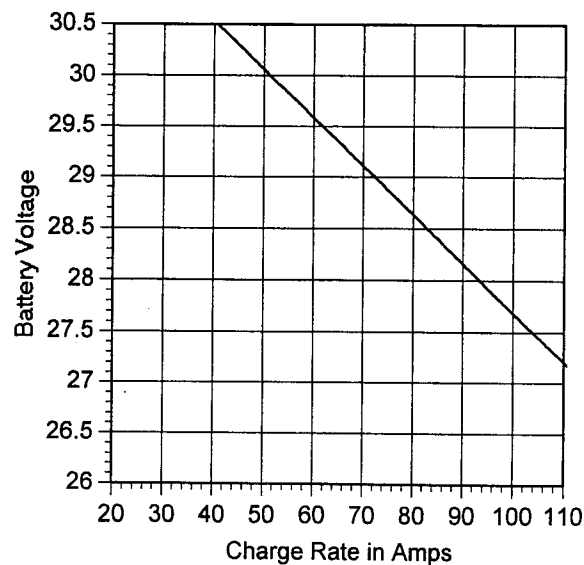



5916 - 195th Street N.E., Arlington, WA 98223 Phone: (360) 435-8826 Fax: (360) 435-2229

visit our website at: [www.traceengineering.com](http://www.traceengineering.com)