

---

User's  
Manual

**DXAdvanced** 

**DX1000/DX1000N/DX2000  
Communication Interface**

---

**vigilantplant.**<sup>®</sup>

---

## Foreword

Thank you for purchasing the DX1000/DX2000.

This Communication Interface User's Manual contains information about the Ethernet/serial interface communication functions. To ensure correct use, please read this manual thoroughly before operation.

Keep this manual in a safe place for quick reference in the event a question arises.

The following manuals, including this one, are provided as manuals for the DX.

- **Electronic manuals provided on the accompanying CD-ROM**

| Manual Name   | Manual No.      | Description  |
|---|-----------------|--|
| DX1000/DX1000N<br>User's Manual   | IM 04L41B01-01E | Explains all functions and procedures of the DX1000/DX1000N excluding the communication functions.     |
| DX2000 User's Manual  | IM 04L42B01-01E | Explains all functions and procedures of the DX2000 excluding the communication functions.             |
| DX1000/DX1000N/DX2000<br>Multi Batch (/BT2)<br>User's Manual                            | IM 04L41B01-03E | Describes how to use the multi batch function (/BT2 option).   |
| DX1000/DX1000N/DX2000<br>Custom Display<br>User's Manual                                | IM 04L41B01-04E | Describes how to use the custom display function.  |
| DX1000/DX1000N/DX2000<br>Communication Interface<br>User's Manual                       | IM 04L41B01-17E | Explains the communication functions of the DX1000/DX1000N/DX2000 using the Ethernet/serial interface. |
| DX1000/DX1000N/DX2000<br>EtherNet/IP Communication<br>Interface User's Manual           | IM 04L41B01-18E | Describes how to use communication functions through the EtherNet/IP interface.                        |
| DX1000/DX1000N/DX2000<br>PROFIBUS-DP (/CP1)<br>Communication Interface<br>User's Manual | IM 04L41B01-19E | Describes how to use communication functions through the PROFIBUS-DP interface (/CP1 option).          |
| DAQSTANDARD<br>User's Manual  | IM 04L41B01-61E | Explains the functions and operating procedure of DAQSTANDARD.   |

- **Paper manual**

| Manual Name  | Manual No.      | Description   |
|--|-----------------|---|
| DX1000/DX1000N<br>Operation Guide                                      | IM 04L41B01-02E | Explains concisely the operating procedure of the DX1000 and DX1000N. |
| DX2000<br>Operation Guide  | IM 04L42B01-02E | Explains concisely the operating procedure of the DX2000.             |
| DX1000/DX1000N/DX2000<br>Control of Pollution Caused<br>by the Product | IM 04L41B01-91C | Gives a description of pollution control.                             |

## Notes

- The contents of this manual are subject to change without prior notice as a result of continuing improvements to the instrument's performance and functions. The figures given in this manual may differ from those that actually appear on your screen.
- Every effort has been made in the preparation of this manual to ensure the accuracy of its contents. However, should you have any questions or find any errors, please contact your nearest YOKOGAWA dealer.
- Copying or reproducing all or any part of the contents of this manual without YOKOGAWA's permission is strictly prohibited.
- The TCP/IP software of this product and the document concerning the TCP/IP software have been developed/created by YOKOGAWA based on the BSD Networking Software, Release 1 that has been licensed from the Regents of the University of California.

## **Trademarks**

- vigilantplant, DAQSTATION, Daqstation, and DXAdvanced are registered trademarks of Yokogawa Electric Corporation.
- Microsoft and Windows are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Adobe and Acrobat are registered trademarks or trademarks of Adobe Systems Incorporated.
- Company and product names that appear in this manual are registered trademarks or trademarks of their respective holders.
- The company and product names used in this manual are not accompanied by the registered trademark or trademark symbols (® and ™).

## **Revisions**

- 1st edition: December 2005
- 2nd edition: October 2006
- 3rd edition: April 2007
- 4th edition: December 2007
- 5th edition: November 2008

## DX's version and functions described in this manual

The contents of this manual cover DXs with hardware style 3 and firmware release 3. For details on the functions that have been added or changed, see "DX's Version and Functions Described in This Manual" in the *DX1000/DX2000 User's Manual (IM04L41B01-01E or IM04L42B01-01E)*.

| Edition | DX                              | Description   |
|---------|---------------------------------|---|
| 2       | Version 1.11                    | Additions and improvements to functionality.                    |
|         | Version 1.21                    |   |
| 3       | Release number 2 (Version 2.0x) | Additions and improvements to functionality.                    |
|         | Style number 2                  | NEMA4 compliance.   |
| 4       | Same as edition 3.              | Additions and improvements to functionality.                    |
|         |                                 | Changed the direction of the clamp input terminal (/H2 option). |
| 5       | Release number 3 (Version 3.0x) | Additions and improvements to functionality.                    |
|         | Style number 3                  | Changed the boot ROM.   |

## Conventions Used in This Manual

- **Unit**
  - k: Denotes 1000. Example: 5 kg, 100 kHz
  - K: Denotes 1024. Example: 640 KB

- **Markings**

The following markings are used in this manual.



Refer to corresponding location on the instrument. This symbol appears on dangerous locations on the instrument which require special instructions for proper handling or use. The same symbol appears in the corresponding place in the manual to identify those instructions.

### **WARNING**

Calls attention to actions or conditions that could cause serious injury or death to the user, and precautions that can be taken to prevent such occurrences.

### **CAUTION**

Calls attentions to actions or conditions that could cause light injury to the user or damage to the instrument or user's data, and precautions that can be taken to prevent such occurrences.

### **Note**

Calls attention to information that is important for proper operation of the instrument.

- **Bold characters**

Bold characters are mainly characters and numbers that appear on the display. The  $\diamond$  symbol indicates key and menu operations.

## Models Covered in This Manual

This manual mainly describes the operating procedures on the DX1000. When the procedures differ between the DX2000 and the DX1000, the procedures (including the menu operation) on the DX2000 are also given.

### **High-Speed and Medium-Speed Model Groupings**


This manual uses the terms high-speed input model and medium-speed input model to distinguish between DX models as follows:

| Model                    | Type Model   |
|--------------------------|--|
| High-speed input model   | DX1002, DX1004, DX1002N, DX1004N, DX2004, and MV2008                         |
| Medium-speed input model | DX1006, DX1012, DX1006N, DX1012N, DX2010, DX2020, DX2030, DX2040, and DX2048 |

# Names and Uses of Parts and the Setup Procedures Using the Operation Keys


## Front Panel

DX1000

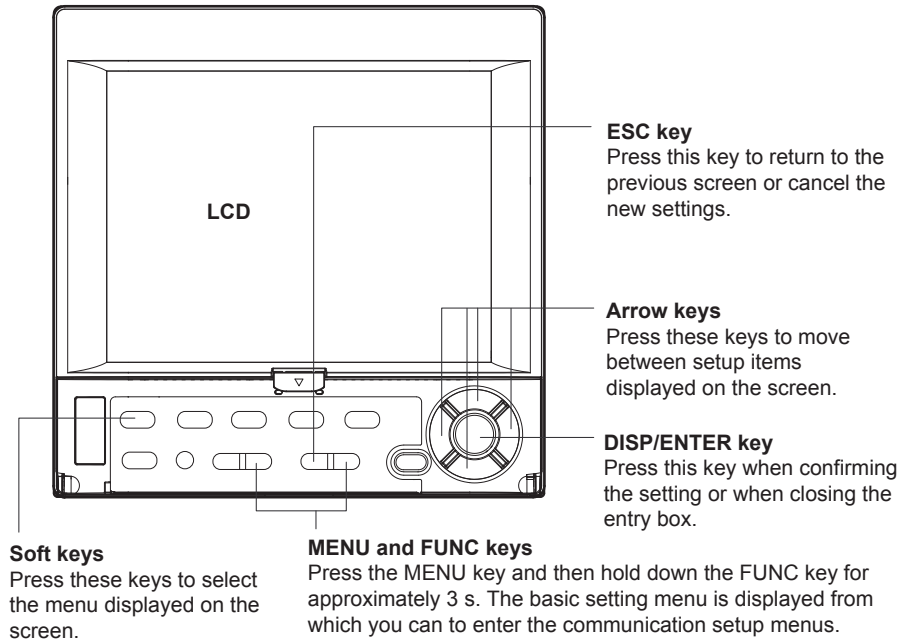

## Rear Panel

DX1000

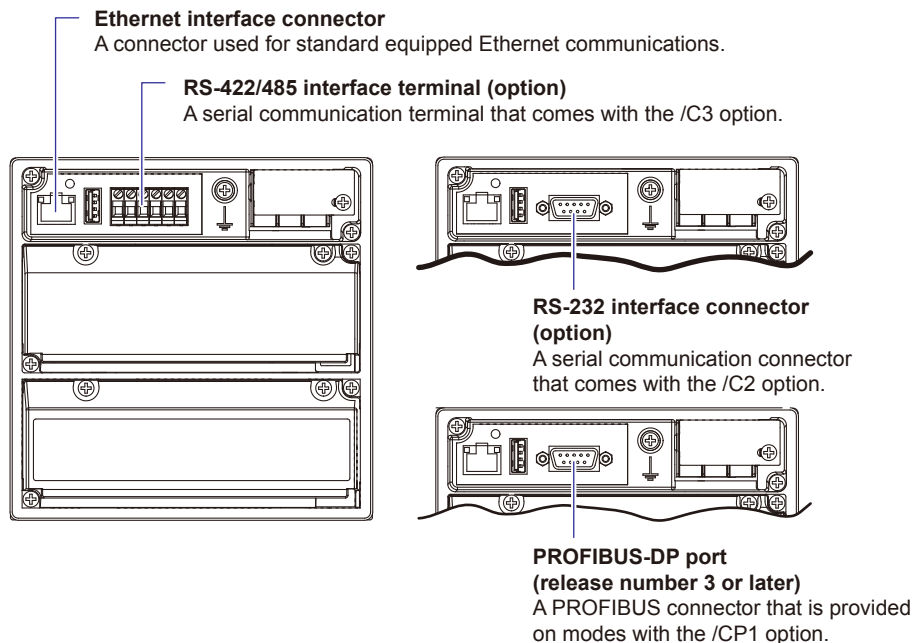

---

# Contents

|   |      |
|---|------|
| Foreword.....   | i    |
| Names and Uses of Parts and the Setup Procedures Using the Operation Keys ..... | v    |
| <b>Chapter 1 Using the Ethernet Interface</b>                                   |      |
| 1.1 DX1000/DX2000 Features.....   | 1-1  |
| 1.2 Flow of Operation When Using the Ethernet Interface .....                   | 1-9  |
| 1.3 Connecting the DX.....  | 1-10 |
| 1.4 Sending E-mail Messages .....   | 1-16 |
| Settings for Sending E-mail .....   | 1-16 |
| 1.5 Monitoring the DX on a PC Browser.....                                      | 1-25 |
| 1.6 Accessing the Measurement Data File on the DX from a PC.....                | 1-41 |
| Accessing the DX from the PC (Release number 3 or later) .....                  | 1-41 |
| 1.7 Transferring Data Files from the DX .....                                   | 1-43 |
| 1.8 Synchronizing the Time .....  | 1-47 |
| 1.9 Using the Modbus Server Function .....                                      | 1-49 |
| 1.10 Using the Modbus Client Function.....                                      | 1-51 |
| 1.11 Usage Example of the Modbus Function.....                                  | 1-60 |
| <b>Chapter 2 Using the Serial Interface</b>                                     |      |
| 2.1 DX1000/DX2000 Features.....   | 2-1  |
| PROFIBUS-DP (/CP1 option; release number 3 or later).....                       | 2-2  |
| 2.2 Flow of Operation When Using the Serial Interface.....                      | 2-3  |
| 2.3 Connecting the DX.....  | 2-4  |
| 2.4 Setting the Serial Communication .....                                      | 2-10 |
| 2.5 Using the Modbus Slave Function .....                                       | 2-11 |
| 2.6 Using the Modbus Master Function .....                                      | 2-12 |
| 2.7 Usage Example of the Modbus Function.....                                   | 2-15 |
| <b>Chapter 3 Commands</b>   |      |
| 3.1 Command Syntax .....  | 3-1  |
| 3.2 A List of Commands.....   | 3-4  |
| 3.3 Setup Parameters.....   | 3-9  |
| Channel Number and Other Notations and Valid Ranges .....                       | 3-11 |
| <b>Chapter 4 Responses</b>  |      |
| 4.1 Response Syntax.....  | 4-1  |
| 4.2 Output Format of ASCII Data.....  | 4-6  |
| Relay Status and Internal Switch Status.....                                    | 4-9  |
| Event Level Switch Status (Release number 3 or later) .....                     | 4-27 |
| 4.3 Output Format of Binary Data.....   | 4-28 |
| 4.4 Output Format of Instrument Information.....                                | 4-34 |
| <b>Chapter 5 Status Reports</b>   |      |
| 5.1 Status Information and Filter.....  | 5-1  |
| 5.2 Bit Structure of the Status Information.....                                | 5-2  |
| Status Information 5.....   | 5-3  |
| Status Information 6.....   | 5-3  |

**Chapter 6 Specifications**

6.1 Ethernet Interface Specifications ..... 6-1  
6.2 Serial Interface Specifications ..... 6-2  
6.3 Modbus Protocol Specifications..... 6-3

**Appendix**

**Index**

**1**  
**2**  
**3**  
**4**  
**5**  
**6**  
**App**  
**Index**



## 1.1 DX1000/DX2000 Features

This section gives an overview of the communication functions that the DX can control when it is connected to a network via the Ethernet interface.


### Modbus Client

- The DX acting as a Modbus client device can connect to a Modbus server device and read or write to the internal register. The read data can be used as communication input data of the computation function\* on a computation channel. The data can also be handled on the external input channel\*\*. The data that can be written to the internal register is measured data and computed data.

\* /M1 and /PM1 options


\*\* DX2000 with /MC1 option

- For details on the Modbus function codes that the DX supports, see section 6.3.
- For a description of the settings required to use this function, see section 1.10.

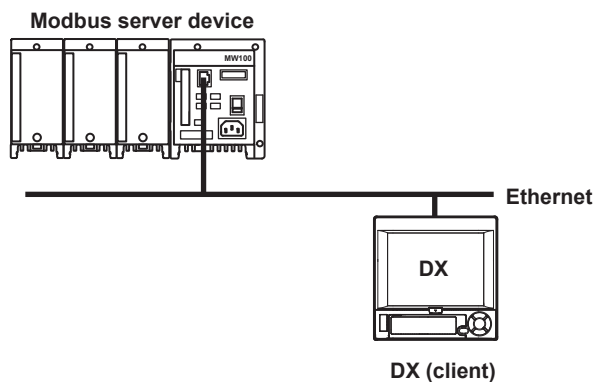

## Modbus Server

- A Modbus client device can carry out the following operations on the DX that is operating as a Modbus server device.
  - Load data from measurement, computed,\* and external input channels\*\* (using the input register)
  - Load communication input data\* (using the hold register)
  - Write communication input data\* (using the hold register)
  - Write to external input channels\* (using the hold register)
  - Start and stop recording, write messages, and perform other similar operations (using the hold register; models with release number 3 or later)
  - Load the recording start/stop condition, message strings, and other types of data (using the hold register; models with release number 3 or later)
- \* /M1 and /PM1 options
- For details on the Modbus function codes that the DX supports, see section 6.3.
- For a description of the settings required to use this function, see section 1.9.

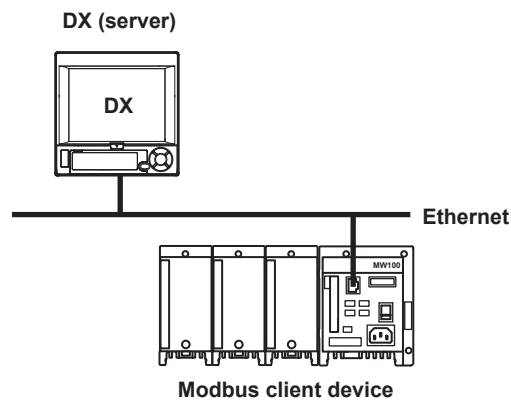

## Setting/Measurement Server

- This function can be used to set almost all of the settings that can be configured using the front panel keys. However, you cannot turn the power ON/OFF, register users, set the key lock password, or set the connection destination of the FTP client function.
- The following types of data can be output.
  - Measured, computed<sup>\*</sup>, and external input<sup>\*\*</sup> data.
  - Files in the internal memory or files on the external storage medium.
  - Setup information and status byte.
  - A log of operation errors and communications.
  - Alarm summary and message summary.
  - Relay status information.

The measured, computed<sup>\*</sup>, and external input<sup>\*\*</sup> data can be output to a PC in BINARY or ASCII format. Other types of data are output in ASCII format. For a description of the data output format, see chapter 4.

\* /M1 option

\*\* DX2000 with /MC1 option


- The commands that can be used with this function are setting commands (see sections 3.4 and 3.5), basic setting commands (see section 3.6), and output commands (see sections 3.7 and 3.8).
- This function can be used when communicating via the Ethernet interface or the serial interface (option).
- For a description of the settings required to use this function via the serial interface, see chapter 2.

## Maintenance/Test Server

- This function can be used to output connection information, network information, and other information regarding Ethernet communications.
- The commands that can be used with this function are maintenance/test commands (see section 3.10).

## FTP Server


- You can use a PC to access the DX via FTP. You can perform operations such as retrieving directory and file lists from the external storage medium of the DX and transferring and deleting files. In addition, you can also retrieve the directory or file list and transfer files in the internal memory.
- For a description of the settings required to use this function, see section 1.6.

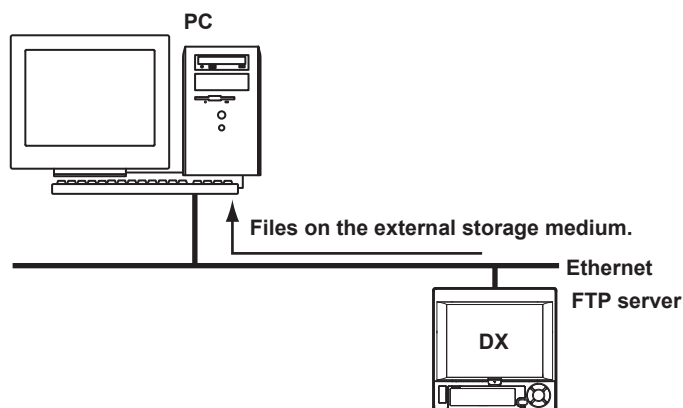

## FTP Client

### Automatic transferring of files

- The display data file, event data file, report data file, and snapshot data file that are created in the internal memory of the DX can be automatically transferred to a remote FTP server. The result of the transfer is recorded in the FTP log. The FTP log can be shown on the DX's display (see "Log Display" described later) or output to a PC using commands.

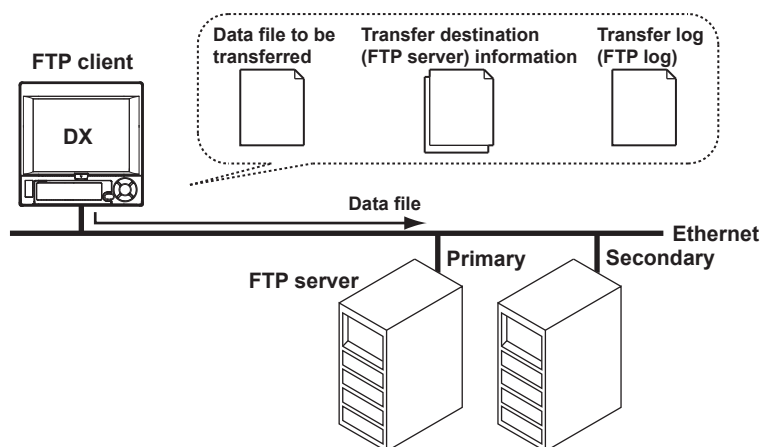

You can specify two destination FTP servers, primary and secondary. If the primary server is down, the file is transferred to the secondary server.

- For a description of the settings required to use this function, see section 1.7.
- FTP test**
  - You can test whether files can be transferred by transferring a test file from the DX to a remote FTP server.
  - The result of the FTP test can be confirmed on the FTP log display.
  - For the procedure to use this function, see section 1.7.

## Instrument Information Server

- This function can be used to output the serial number, model name, and other information about the DX connected via the Ethernet network.
- The commands that can be used with this function are instrument information output commands (see section 3.12).

## Login

- This function can be used only when communicating via the Ethernet interface and when using the setting/measurement server, maintenance/test server, and the FTP server functions.
- For a description of the settings required to use this function, see the *DX1000/DX2000 User's Manual (IM04L41B01-01E or IM04L42B01-01E)*.
- For a description of the login process of the setting/measurement server and maintenance/test server, see appendix 2.

### User registration

Users are registered using the login function of the DX. There are two user levels: administrator and user.

- **Administrator**

An administrator has privileges to use all the functions of the setting/measurement server, maintenance/test server, and FTP server.

- **User**

A user has limited privileges to use the setting/measurement server, maintenance/test server, and FTP server. For the limitation on the commands, see section 3.2.

- Limitations on the use of the setting/measurement server  
A user is not authorized to change the settings that would change the operation of the DX. However, a user can output measured and setting data.
- Limitations on the use of the maintenance/test server  
A user cannot disconnect a connection between another PC and the DX. A user can disconnect the connection between the PC that the user is using and the DX.
- Limitations on the use of the FTP server  
A user cannot save files to the external storage medium of the DX or delete files on it. A user can load files.


### Application timeout

This function drops the connection with the PC if there is no data transfer for a given time. For example, this function prevents a PC from being connected to the DX indefinitely which would prohibit other users from making new connections for data transfer.

## Web Server

Microsoft Internet Explorer can be used to display the DX screen on the PC.

- The following two pages are available.
  - Monitor page: Screen dedicated for monitoring.
  - Operator page: You can switch the DX screen. You can also modify and write messages.
- You can set access control (user name and password specified with the login function) on each page.
- The screen can be updated at a constant period (approximately 10 s).

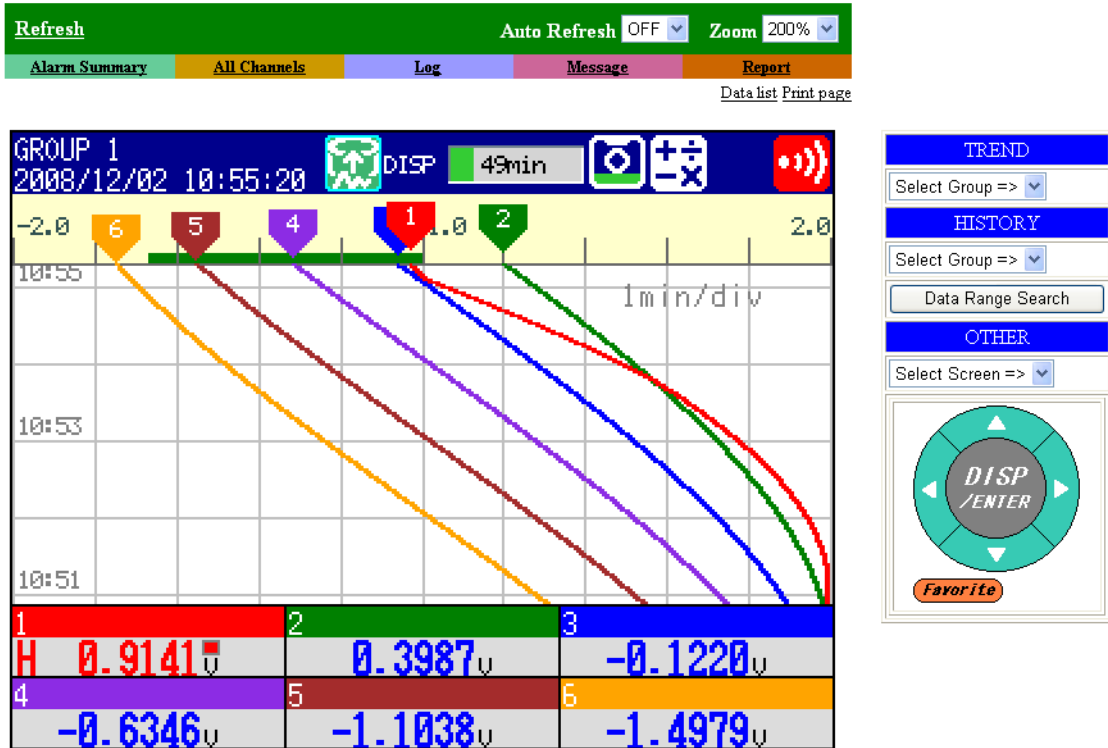

For the procedure to set the Web server function, see section 1.5.

For operations on the monitor page and operator page, see section 1.5.

## E-mail Transmission

### Transmitting e-mail messages

The available types of e-mails are listed below. E-mail can be automatically transmitted for each item. You can specify two groups of destinations and specify the destination for each item. In addition, you can set a header string for each item.

- Alarm mail  
Reports alarm information when an alarm occurs or clears. Alternatively, reports alarm information only when an alarm occurs.
- System mail  
Notifies the time of the power failure and the time of recovery when the DX recovers from a power failure.  
Notifies the detection of memory end when it is detected.  
Notifies the error code and message when a media-related error occurs (an error on the external storage medium or when the data cannot be stored due to insufficient free space on the external storage medium).  
Notifies the error code and message when an error related to FTP client (when a data transfer fails using the FTP client function) occurs.
- Scheduled mail  
Transmits an e-mail message when the specified time is reached. This can be used to confirm that the e-mail transmission function including the network is working properly. You can specify the reference time and the e-mail transmission interval for each destination.
- Report mail (only on models with the computation function (/M1 option))  
Notifies the report results.

For the procedure to set the e-mail transmission function, see section 1.4.

For the e-mail transmission format, see section 1.4.

For the procedure to start/stop e-mail transmission, see section 1.4.

#### Example of an e-mail sent at a scheduled time

|  |          |
|--|----------|
| From: DX1000@daqstation.com                |          |
| Date: Sun, 5 Oct 2003 08:00:45 +0900 (JST) |          |
| Subject: Periodic_data                     | Subject  |
| To: user1@daqstation.com, user2@daq.co.jp  |          |
| LOOP1                                      | Header 1 |
| TEMPERATURE                                | Header 2 |
| Time                                       |          |
| Host name                                  |          |
| DX1000                                     |          |
| Time of transmission                       |          |
| 10/05 08:00:01                             |          |

### E-mail test

- You can send a test message from the DX to the destination to check e-mail transmissions.
- You can confirm the result of the e-mail test on the e-mail log screen.
- For the procedure to use this function, see section 1.4.

## SNTP Server/Client

The client function retrieves time information from a specified SNTP server such as at the specified interval.

The server function provides time information to DXs connected to the same network.

## DHCP Client

This function can be used to automatically retrieve IP addresses from a DHCP server. You can also manually request or release network information.

## EtherNet/IP Server (Release number 3 or later)

The DX supports the following features.

- Loads data for measurement, computed, and external input channels.
- Writes to communication input data and external input channels.

For operating instructions, see the *EtherNet/IP Communication Interface User's Manual (IM04L41B01-18E)*.

## Other Functions

### Checking the connection status of the Ethernet interface

You can check the connection status of the Ethernet interface on the rear panel or on the display of the DX.

For a description on the location and meaning of the connection status indicator, see section 1.3.

### Keepalive (extension function of TCP)

This function drops the connection if there is no response to the inspection packet that is periodically transmitted at the TCP level.

For a description of the settings required to use this function, see section 1.3.

### Log display

You can display operation logs on the log display. The log can also be confirmed using a communication command. In addition, the Web screen can show the log display (excluding the communication log and DHCP log).

- Error log screen: Log of operation errors
- Communication log screen: Log of communication input/output to the setting/measurement server
- FTP log screen : Log of file transfers carried out using the FTP client function.
- WEB log screen : Log of operations using the Web server function
- Mail log screen : Log of E-mail transmissions
- Login log screen : Log of login and logout
- SNTP log screen : Log of access to the SNTP server
- DHCP log screen : Log of access to the DHCP server
- Modbus log screen : Log of Modbus status (access to the master or client)


For the operating procedure of the log screen and the details on the displayed contents, see the *DX1000/DX2000 User's Manual (IM04L41B01-01E or IM04L42B01-01E)*. For details on the Modbus status log, see section 1.9.

For details on the log output using communication commands, see section 4.2. For a description of the log display on the Web screen, see section 1.5.



## 1.2 Flow of Operation When Using the Ethernet Interface

Follow the flowchart below to set the Ethernet communications.

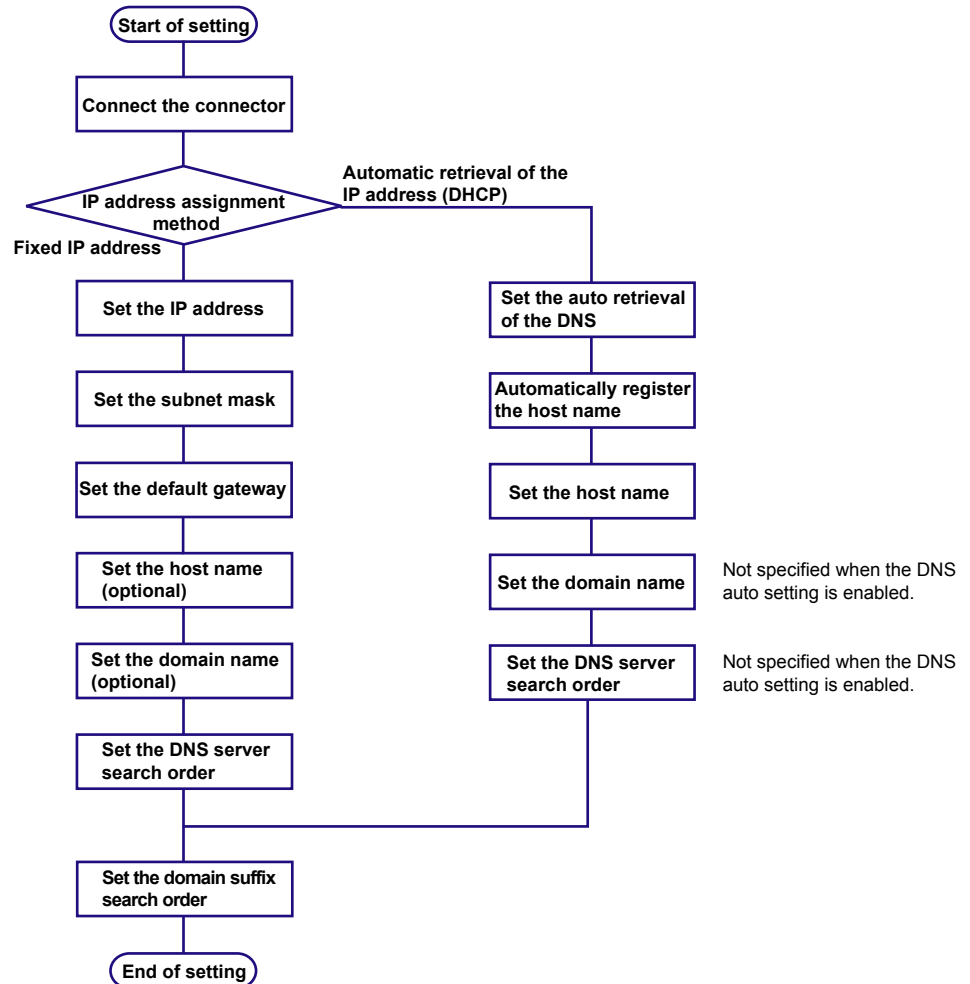


## 1.3 Connecting the DX

### Connecting to the Port

#### Connector

Connect an Ethernet cable to the Ethernet port on the DX rear panel.

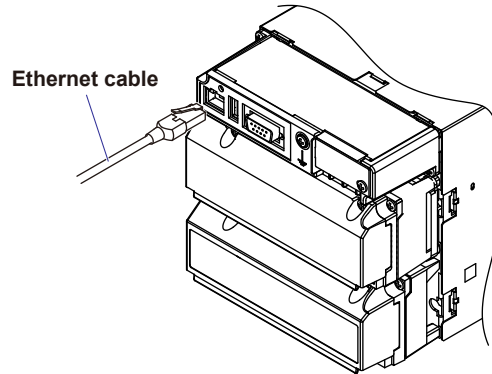


#### CAUTION

Do not connect an Ethernet cable whose plug does not comply with FCC specifications. If you do, the DX may malfunction.

### Connecting to the PC

Make the connection via a hub. For a one-to-one connection with a PC, make the connection as shown in the figure below. Multiple DXs can be connected to a single PC in a similar manner.

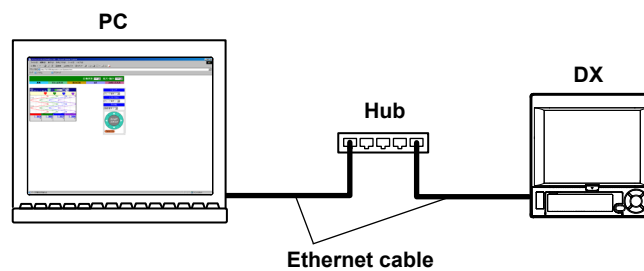

## Setting the IP Address and Host Information

- DX1000
  - ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **IP address**
  - ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **Host settings**
  - ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **DNS settings**
- DX2000
  - ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **IP Address, Host settings**
  - ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **DNS settings**

### IP address setting

| Basic Setting Mode  |                                    | Ethernet Link |
|---|------------------------------------|---------------|
| IP-address  |                                    |               |
| DHCP  | <input type="button" value="Not"/> |               |
| Fixed IP-address  |                                    |               |
| IP-address  | 10. 0. 23. 75                      |               |
| Subnet mask   | 255.255.255. 0                     |               |
| Default gateway   | 10. 0. 23. 1                       |               |
| <input type="button" value="Use"/> <input type="button" value="Not"/> |                                    |               |

### Host name setting

| Basic Setting Mode  |                | Ethernet Link |
|---|----------------|---------------|
| Host settings   |                |               |
| Host name   | dx1000         |               |
| Domain name   | daastation.com |               |
| <input type="button" value="Input"/> <input type="button" value="Clear"/> <input type="button" value="Copy"/> |                |               |

### DNS setting

| Basic Setting Mode                   |                      | Ethernet Link |
|--------------------------------------|----------------------|---------------|
| Server search order                  |                      |               |
| Primary                              | 0. 0. 0. 0           |               |
| Secondary                            | 0. 0. 0. 0           |               |
| Domain suffix search order           |                      |               |
| Primary                              | <input type="text"/> |               |
| Secondary                            | <input type="text"/> |               |
| <input type="button" value="Input"/> |                      |               |

Set the IP address to a fixed IP address or obtain it automatically (DHCP). Consult with your network administrator for the network parameters such as the IP address, subnet mask, default gateway, and DNS.

### When using a fixed IP address

- **DHCP**  
Set DHCP to **Not**.
- **IP address**  
Set the IP address to assign to the DX.
- **Subnet mask**  
Set the subnet mask according to the system or network to which the DX belongs.
- **Default gateway**  
Set the IP address of the gateway.
- **Host name**  
Set the DX's host name using up to 64 alphanumeric characters. You do not have to set this parameter.
- **Domain name**  
Set the network domain name that the DX belongs to using up to 64 characters. You do not have to set this parameter.
- **Server search order**  
Register up to two IP addresses for the primary and secondary DNS servers.
- **Domain suffix search order**  
Set up to two domain suffixes: primary and secondary.

### When obtaining the IP address from DHCP

- **DHCP**  
Set DHCP to **Use**.
- **DNS accession**  
To automatically obtain the DNS server address, select **Use**. Otherwise, select **Not**. If you select **Not**, you must set the server search order.
- **Host-name register**  
To automatically register the host name to the DNS server, select **Use**.
- **Host name**  
Set the DX's host name using up to 64 alphanumeric characters.
- **Domain name**  
Set the network domain name that the DX belongs to using up to 64 characters.
- **Server search order (not necessary when DNS accession is enabled)**  
Register up to two IP addresses for the primary and secondary DNS servers.
- **Domain suffix search order**  
Set up to two domain suffixes: primary and secondary.


## Requesting/Releasing Network Information from DHCP

You can manually request or release network information such as the IP address.


This operation applies when DHCP is set to Use. Perform the request or release after displaying the network information screen.

### Requesting Network Information

1. Display the network information screen.
  - ◇ Press **FUNC** and select **Network info**.

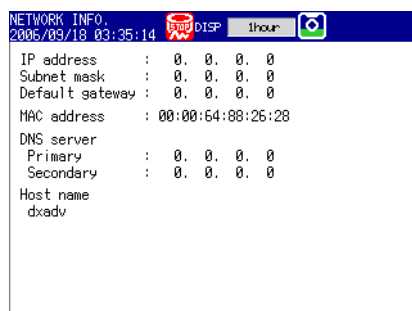


2. Execute the network information request.
  - ◇ Press **FUNC** and select **Network info > Request**

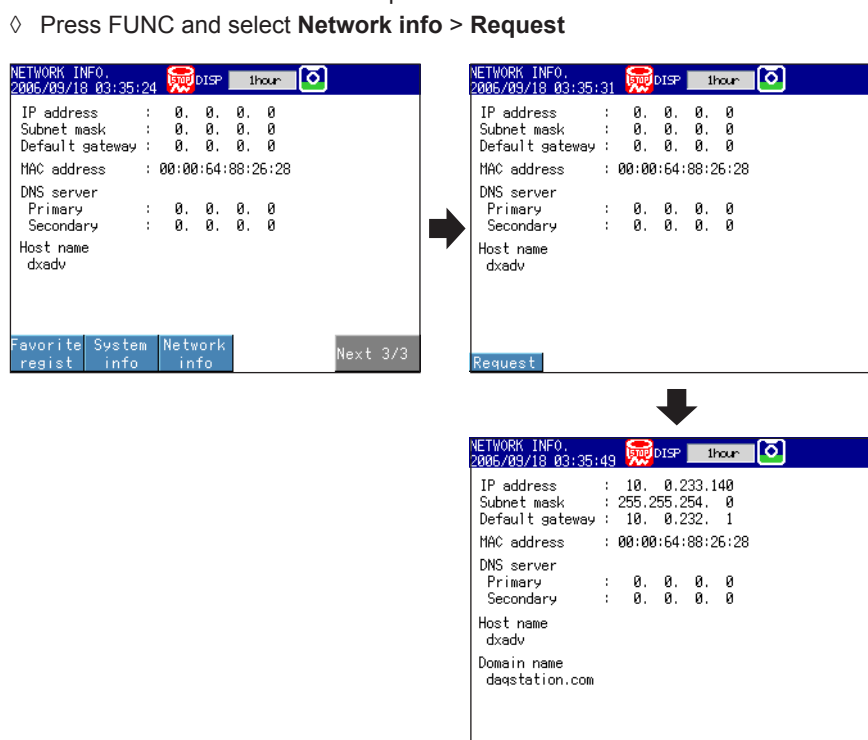

The network information is displayed.




**Releasing Network Information**

1. Display the network information screen.
  - ◇ Press **FUNC** and select **Network info**.

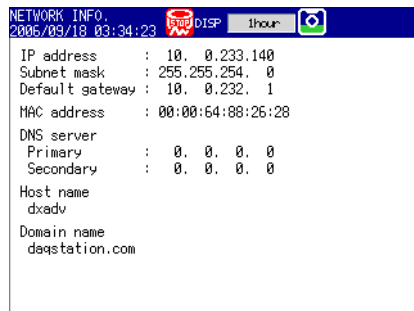

2. Execute the network information release.

- ◇ Press **FUNC** and select **Network info > Release**

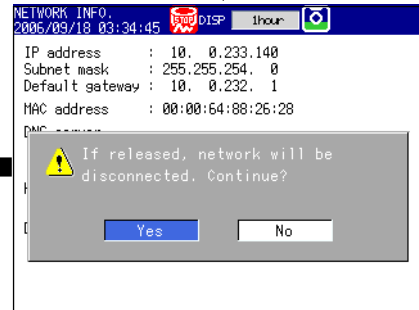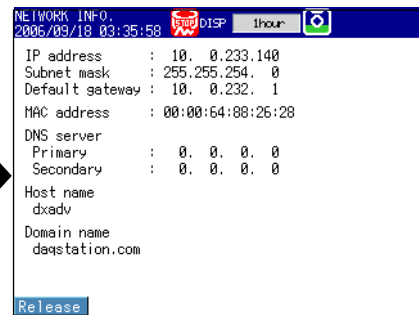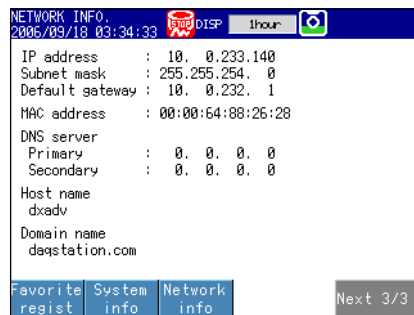


The network information is released.

DISP/ENTER key

## Setting the Communication Status

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **Keep alive, Timeout**

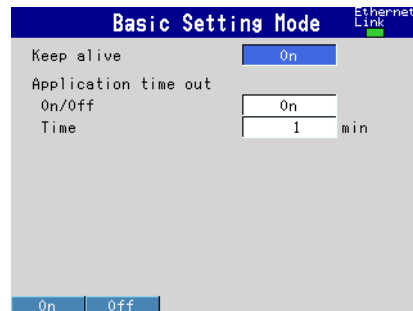

### Setting the keepalive

To disconnect when there is no response to the test packets that are periodically sent, select **On**. Otherwise, select **Off**.

### Setting the application timeout

- Selecting On/Off  
To use the application timeout function, select **On**. Otherwise, select **Off**. If you select **On**, a timeout item is displayed.
- Time  
Set the timeout value between 1 and 120 (minutes).

### Checking the communication status

The Ethernet communication status can be confirmed with the LED lamp that is provided on the Ethernet connector on the DX rear panel or the Ethernet link that is shown at the upper right of the basic setting screen.

# 1.4 Sending E-mail Messages

## Settings for Sending E-mail

Set the server configuration and the contents of the e-mail transmission.

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **E-Mail**

### Basic settings

**Basic Setting Mode** Ethernet Link

Basic settings

SMTP server name

Port number 25

Security Off

Input Clear Copy

### Recipients

**Basic Setting Mode** Ethernet Link

Recipients

Recipient 1

Recipient 2

Sender

Input Clear Copy

### POP3 Settings

**Basic Setting Mode** Ethernet Link

POP3 Settings

POP3 Server name

Port number 110

Login name

Password \*\*\*\*\*

Input Clear Copy

### Alarm settings

**Basic Setting Mode** Ethernet Link

Alarm settings

Recipient 1 Off Recipient 2 Off

Active Alarms

1 Off 2 Off 3 Off 4 Off

Include INST Off

Include source URL Off

Subject Alarm\_summary

Header 1

Header 2

Send alarm action On

Include tag/ch in Subject On

On Off

### Scheduled settings

**Basic Setting Mode** Ethernet Link

Scheduled settings

Recipient 1 Off Recipient 2 Off

Interval 24h Interval 24h

Ref.time 00:00 Ref.time 00:00

Include INST Off

Include source URL Off

Subject Periodic\_data

Header 1

Header 2

On Off

### System settings

**Basic Setting Mode** Ethernet Link

System settings

Recipient 1 Off Recipient 2 Off

Include source URL Off

Subject System\_warning

Header 1

Header 2

On Off

### Report settings

**Basic Setting Mode** Ethernet Link

Report settings

Recipient 1 Off Recipient 2 Off

Include source URL Off

Subject Report\_data

Header 1

Header 2

On Off



**Basic Settings**

Set the SMTP server and mail address.

- **SMTP server name**  
Enter the host name or IP address of the SMTP server.
- **Port number**  
Unless specified otherwise, set the number to the default value. The default value is 25.
- **Security (release number 3 or later)**  
Select **PbS** if you want to enable POP before SMTP.
- **Recipient1 and Recipient2**  
Enter the e-mail address. Multiple e-mail addresses can be entered in the box of one recipient. When entering multiple addresses, delimit each address with a space. Up to 150 characters can be entered.
- **Sender**  
Enter the sender e-mail address. You can enter up to 64 characters.

**POP3 Settings (release number 3 or later)**

If you need to use POP before SMTP, specify the POP3 server that will be used for authentication.

For instructions on how to set the POP3 login method, see "Configuring the POP3 Server Connection" later in this section.

- **POP3 Server name**  
Enter the POP3 server host name or IP address.
- **Port number**  
Use the default setting unless you need to change it. The default value is 110.
- **Login name**  
Enter the POP3 server login name.
- **Password**  
Enter the POP3 server login password using up to 32 characters.

**Alarm Settings**

Specify the settings for sending e-mail when alarms occur or release.

- **Recipient1 and Recipient2**  
Set the e-mail recipients. For Recipient1 and Recipient2, select **On** to send e-mail or **Off** to not send e-mail.
- **Active alarms**  
Sends an e-mail when an alarm occurs or releases. You can select **On** (send e-mail) or **Off** (not send e-mail) for alarms 1 to 4.
- **Include instantaneous value**  
Select **On** to attach instantaneous value data. The data that is attached is the instantaneous value that is measured at the time the e-mail is transmitted.
- **Include source URL**  
Select **On** to attach the source URL. Attach the URL when the Web server is enabled.
- **Subject**  
Enter the subject of the e-mail using up to 32 alphanumeric characters. The default setting is Alarm\_summary.
- **Header1 and Header2**  
Enter header 1 and header 2 using up to 64 characters.
- **Send alarm action (Release number 3 or later)**  
To send e-mail when an alarm occurs and when it is cleared, select **On+Off**. To only send e-mail when an alarm occurs, select **On**.
- **Include tag/ch in Subject (Release number 3 or later)**  
Select **On** to include a tag number in the subject. If the tag number is not set, the corresponding channel number is included.

### Scheduled Settings

Specify the settings for sending e-mail at scheduled times.

- **Recipient1 and Recipient2**  
Set the e-mail recipients. For Recipient1 and Recipient2, select **On** to send e-mail or **Off** to not send e-mail.
- **Interval**  
Select the interval for sending e-mail to Recipient1 and Recipient2 from 1, 2, 3, 4, 6, 8, 12, and 24 hours.
- **Ref. time**  
Enter the time used as a reference for sending the e-mail at the specified interval to Recipient1 and Recipient2.
- **Include instantaneous value, Include source URL, Subject, and Header**  
These items are the same as the e-mail that is sent when an alarm occurs. The default subject is Periodic\_data.

### System Settings

Specify the settings for sending e-mail when the DX recovers from a power failure, at memory end, and when an error occurs.

- **Recipient1 and Recipient2**  
Set the e-mail recipients. For Recipient1 and Recipient2, select **On** to send e-mail or **Off** to not send e-mail.
- **Include source URL, Subject, and Header**  
These items are the same as the e-mail that is sent when an alarm occurs. The default subject is System\_warning.

### Report Settings


Specify the settings for sending e-mail when reports are created.

- **Recipient1 and Recipient2**  
Set the recipients. For Recipient1 and Recipient2, select **On** to send e-mail or **Off** to not send e-mail.
- **Include source URL, Subject, and Header**  
These items are the same as the e-mail that is sent when an alarm occurs. The default subject is Report\_data.

## Configuring the POP3 Server Connection (Release number 3 or later)

Specify how the DX operates when it connects to a POP server.

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode) and select the **Environment** tab > **Communication** > **POP3 Details**

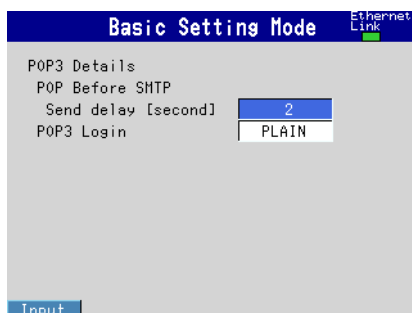

### Send delay [seconds]

Enter the delay between a POP3 server authentication and the transmission in the range of 0 to 10 seconds.

### POP3 Login

To encrypt the password when logging into the POP3 server, select APOP. To send it in plain text, select PLAIN.

## E-mail Test

- ◇ Press **FUNC** and select **E-mail test** > **Recipient1** or **Recipient2**  
You can send a test e-mail to check the e-mail settings.

## Starting/Stopping the E-mail Transmission

### Starting the e-mail transmission

- ◇ Press **FUNC** and select **E-Mail START**  
The e-mail transmission function is enabled.

### Stopping the e-mail transmission

- ◇ Press **FUNC** and select **E-Mail STOP**  
The e-mail transmission function is disabled. Unsent e-mail messages are cleared.

### E-mail retransmission

If the e-mail transmission fails, the message is retransmitted up to three times at 30-s, 1-minute, or 3-minute intervals. If retransmission fails, the e-mail message is discarded.

## E-mail Format

The formats of alarm e-mails, scheduled e-mails, system e-mails, report e-mails, and test e-mails are given below. For details on the common display items, see “Common Display Items for All Formats” in this section.

### Alarm Notification E-mail Format

- **Subject**

Subject: Alarm Summary(-[tag number or channel number])

The tag number or channel number enclosed in parentheses is used only when they are configured to be included in the subject (on models with release number 3 or later).

- **Syntax**

```
header1CRLF
header2CRLF
CRLF
Alarm_summary.CRLF
<Host_name>CRLF
hostCRLF
CRLF
<CH>ccc...cCRLF
<Type>lqCRLF
<aaa>mo/dd_hh:mi:ssCRLF
CRLF
<Inst._value>CRLF
mo/dd_hh:mi:ssCRLF
ccc...c=ddd...dCRLF
.....
CRLF
Access_the_following_URL_in_order_to_look_at_a_screen.CRLF
http://host.domain/CRLF
CRLF
```

- ccc...c Channel number, tag comment, or tag number  
(Up to 16 characters. Channels set to Skip or Off are not output. (For the channel number, see section 3.3.)
- l Alarm level (1 to 4)
- q Alarm type (H, L, h, l, R, or r)  
H (high limit alarm), L (low limit alarm), h (difference high limit alarm), l(difference low limit alarm), R(high limit on rate-of-change alarm), r(low limit on rate-of-change alarm)
- aaa Alarm status (off or on)
- ddd...d Measured/Computed value (up to 10 digits including the sign and decimal point) + unit (up to 6 characters)  
+OVER: Positive overrange  
-OVER: Negative overrange  
Burnout: Burnout data  
\*\*\*\*: Error data

The DX transmits channel numbers, alarm types, and alarm statuses for up to 10 events in a single e-mail. If the DX is configured to include a tag number or a channel number in the e-mail subject, one e-mail is sent for each event.

**Scheduled E-mail Format**• **Subject**

Subject:Periodic\_Data

• **Syntax**

header1CRLF

header2CRLF

CRLF

Periodic\_data.CRLF

&lt;Host\_name&gt;CRLF

hostCRLF

CRLF

&lt;Time&gt;CRLF

mo/dd\_hh:mi:ssCRLF

CRLF

E-mail\_message(s)\_did\_not\_reach\_intended\_recipient(s).CRLF

ttt...t

Count=nnCRLF

mo/dd\_hh:mi:ssCRLF

.....

CRLF

&lt;Time&gt;CRLF

mo/dd\_hh:mi:ssCRLF

ccc...c=ddd...dCRLF

.....

CRLF

Access\_the\_following\_URL\_in\_order\_to\_look\_at\_a\_screen.CRLF

http://host.domain/CRLF

CRLF

ccc...c Channel number, tag comment, or tag number

(Up to 16 characters. Channels set to Skip or Off are not output. (For the channel number, see section 3.3.)

ttt...t Type of discarded e-mail

Alarm\_summary: Alarm mail

Periodic\_data: Scheduled mail

System\_warning: System mail

Report\_data: Report mail

nn Number of discarded e-mails

ddd...d Measured/Computed value (up to 10 digits including the sign and decimal point) + unit (up to 6 characters)

+OVER: Positive overrange

-OVER: Negative overrange

Burnout: Burnout data

\*\*\*\*\*: Error data

The time that follows the type and count of discarded e-mails is the time when the e-mail is discarded last.

### System Mail (Power Failure) Format

- **Subject**

Subject: System\_warning

- **Syntax**

header1CRLF

header2CRLF

CRLF

Power\_failure.CRLF

<Host\_name>CRLF

hostCRLF

CRLF

<Power\_fail>mo/dd\_hh:mi:ssCRLF

<Power\_on>mo/dd\_hh:mi:ssCRLF

CRLF

Access\_the\_following\_URL\_in\_order\_to\_look\_at\_a\_screen.CRLF

http://host.domain/CRLF

CRLF

### System Mail (Memory Full) Format

- **Subject**

Subject: System\_warning

- **Syntax**

header1CRLF

header2CRLF

CRLF

Memory\_full.CRLF

<Host\_name>CRLF

hostCRLF

CRLF

<Memory\_remain>ppp...pMbytesCRLF

<Memory\_blocks>bbb/400CRLF

<Media\_remain>rrr...rMbytesCRLF

CRLF

Access\_the\_following\_URL\_in\_order\_to\_look\_at\_a\_screen.CRLF

http://host.domain/CRLF

CRLF

ppp...p Remaining amount of internal memory

bbb Number of unsaved blocks (0 to 400)

rrr...r Remaining free space on the external storage medium (when an external storage medium is connected)

**System Mail (Error) Format**• **Subject**

Subject: System\_warning

• **Syntax**

header1CRLF

header2CRLF

CRLF

Error.CRLF

<Host\_name>CRLF

hostCRLF

CRLF

mo/dd\_hh:mi:ssCRLF

ERROR:fffCRLF

.....

"Operation\_aborted\_because\_an\_error\_was\_found\_in\_media."CRLF

CRLF

Access\_the\_following\_URL\_in\_order\_to\_look\_at\_a\_screen.CRLF

http://host.domain/CRLF

CRLF

fff            Error number (200, 201, 211, 281 to 285)

For details on the error, see the *DX1000/DX2000 User's Manual (IM04L41B01-01E or IM04L42B01-01E)*.

**Report Mail Format**• **Subject**

Subject: Report\_data

• **Syntax**

header1CRLF

header2CRLF

CRLF

ti\_report.CRLF

<Host\_name>CRLF

hostCRLF

CRLF

mo/dd\_hh:mi:ssCRLF

<CH>ccc...cCRLF

<tp>eee...eCRLF

<tp>eee...eCRLF

<tp>eee...eCRLF

<tp>eee...eCRLF

<Unit>uuu...uCRLF

.....

CRLF

Access\_the\_following\_URL\_in\_order\_to\_look\_at\_a\_screen.CRLF

http://host.domain/CRLF

CRLF

ti            Contents of the report mail (hourly, daily, weekly, or monthly report)

ccc...c      Channel number, tag comment, or tag number

(Up to 16 characters. Channels set to Skip or Off are not output. For the channel number, see section 3.3.)

## 1.4 Sending E-mail Messages

---

|         |   |
|---------|---|
| tp      | Report content (average, maximum, minimum, instantaneous, and sum. Four items among these are output.)  |
| eee...e | Measured/Computed value (up to 10 digits including the sign and decimal point). However, for the sum value, the value is output as a combination of the sign, mantissa, E, sign, and exponent such as in -3.8000000E+02.<br>+OVER: Positive overrange<br>-OVER: Negative overrange<br>Burnout: Burnout data<br>Empty data: Error data |
| uuu...u | Unit (up to 6 characters)   |

### Test E-mail Format

- **Subject**

Subject: Test

- **Syntax**

```
Test_mail.CRLF
<Host_name>CRLF
hostCRLF
CRLF
<Time>CRLF
mo/dd_hh:mi:ssCRLF
CRLF
<Message>CRLF
x:msCRLF
.....
CRLF
```

|    |   |
|----|---|
| x  | Message number (1 to 10)                              |
| ms | Message content (only specified messages are output.) |

### Common Display Items for All Formats

- Time information

|    |                   |
|----|-------------------|
| mo | Month (01 to 12)  |
| dd | Day (01 to 31)    |
| hh | Hour (00 to 23)   |
| mi | Minute (00 to 59) |
| ss | Second (00 to 59) |

The month, day, hour, minute, and second of the time information are output in the order specified by the date format in the basic setting mode.

- Host name, domain name, and header information

|         |   |
|---------|---|
| header1 | Header 1 (displayed only when it is set)  |
| header2 | Header 2 (displayed only when it is set)  |
| host    | Host name or IP address (IP address when the host name is not assigned. In the case of an IP address, the <Host> section is set to <IP address>.) |
| domain  | Domain name   |
| _       | Space   |




## 1.5 Monitoring the DX on a PC Browser

### Setting the Web Server Function

From the basic setting mode menu, set the server function and Web page of Communication (Ethernet).

#### Setting the Web server

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **Server** > **Server modes**

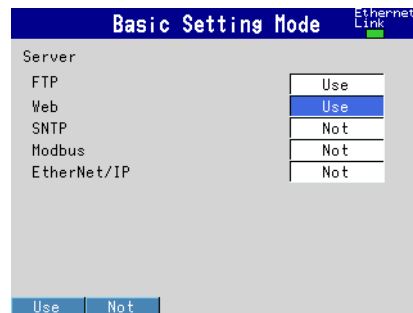

- **Web**

For the Web item under Server, select **Use** or **Not** (don't use). When **Use** is selected, the Web page item is added to the basic setting mode menu.


#### Port Number

The default value is 80. To change the setting,

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Environment** tab > **Communication** > **Service port**
- For the selectable range of port numbers, see section 6.1.

#### Setting the Web page

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **Web page**

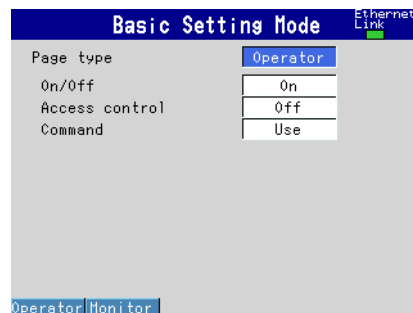

### Page Type

- Monitor  
Configure the monitor page. You can carry out the following operations on the monitor page.
  - Display the alarm summary
  - Display the measured and computed values of all channels
  - Display logs (message summary, error log, etc.)
  - Print the DX screen with an attached title and comment
  - Display and print reports
  - Connect to the DX via FTP and retrieve filesFor screen examples, see “Monitoring with the Browser” in this section.
- Operator  
Set the operator page. The following operations can be carried out in addition to the functions available on the monitor page.
  - Switch the operation screen
  - Control the DX's DISP/ENTER key, arrow keys, and favorite key
  - Write messages
  - Search data by date and timeFor screen examples, see “Monitoring with the Browser” in this section.

### Setting the monitor page

- Page type  
Select **Monitor**.
- Setting On/Off  
To display the monitor page on a browser, select **On**; otherwise, select **Off**.
- Access control  
To use access control, select **On**. If you set this to On, you must enter a user name and password to display the monitor page. Set the user name and password in the security and login settings under the environment settings. For details, see the *DX1000/DX2000 User's Manual (IM04L41B01-01E or IM04L42B01-01E)*.

### Setting the operator page

- Page type  
Select **Operator**.
- On/Off  
To display the operator page in the browser, select **On**. Otherwise, select **Off**.
- Access control  
This is the same as the setting on the monitor page.
- Command input  
To use message write commands, select **On**. Otherwise, select **Off**.

## Monitoring with a Browser

### Setting the URL

Set the URL appropriately according to the network environment that you are using. You can access the DX by setting the URL as follows:

`http://host name.domain name/file name`

`http`

Protocol used to access the server.

`Host name.domain name`

Host name and domain name of the DX.

You can also use the IP address in place of the host name and domain name.

`File name`

File name of the monitor page and operator page of the DX.

File name of the monitor page: `monitor.htm`

File name of the operator page: `operator.htm`

Omitting the file name is equivalent to specifying the monitor page. However, if the monitor page is disabled, it is equivalent to specifying the operator page.

### Example

To display the operator page on a PC in the same domain as the DX, enter the URL in the Address box of the browser as follows:

`http://dx1000.adv.daqstation.com/operator.htm` or

`http://192.168.1.100/operator.htm`

(In the example, the domain name is set to `adv.daqstation.com`, the host name to `dx1000`, and the IP address to `192.168.1.100`.)

### Login

Enter the user name and login password. You do not have to enter these items if access control is set to **Off** on the Web page setting.

## 1.5 Monitoring the DX on a PC Browser

### Contents of the Monitor Page

#### Note

If the DX is in setting mode or basic setting mode, you cannot display the monitor page or the operator page. If you try to do so, an error message appears. For details on the different modes, see the *Operation Guide (IM04L41B01-02E or IM04L42B01-02E)*.

**Refresh the screen**

**Display the alarm summary**  
Displays the alarm summary in a separate window.

**All channel display**  
Displays the measured values and alarm statuses of all channels in a separate window.

**Log**  
Displays various logs in a separate window.


**Automatically refresh the screen**  
Turn this ON to automatically refresh the screen.

**Report**  
Display and prints reports

**Zoom**  
Change the zoom rate of the screen.  
DX1000 : 100%, 200%  
DX2000 : 50%, 100%

**Print page**  
Print the DX screen by attaching a title and comment.

**Data list**  
Connect to the DX FTP server and download files from its internal memory and external medium.

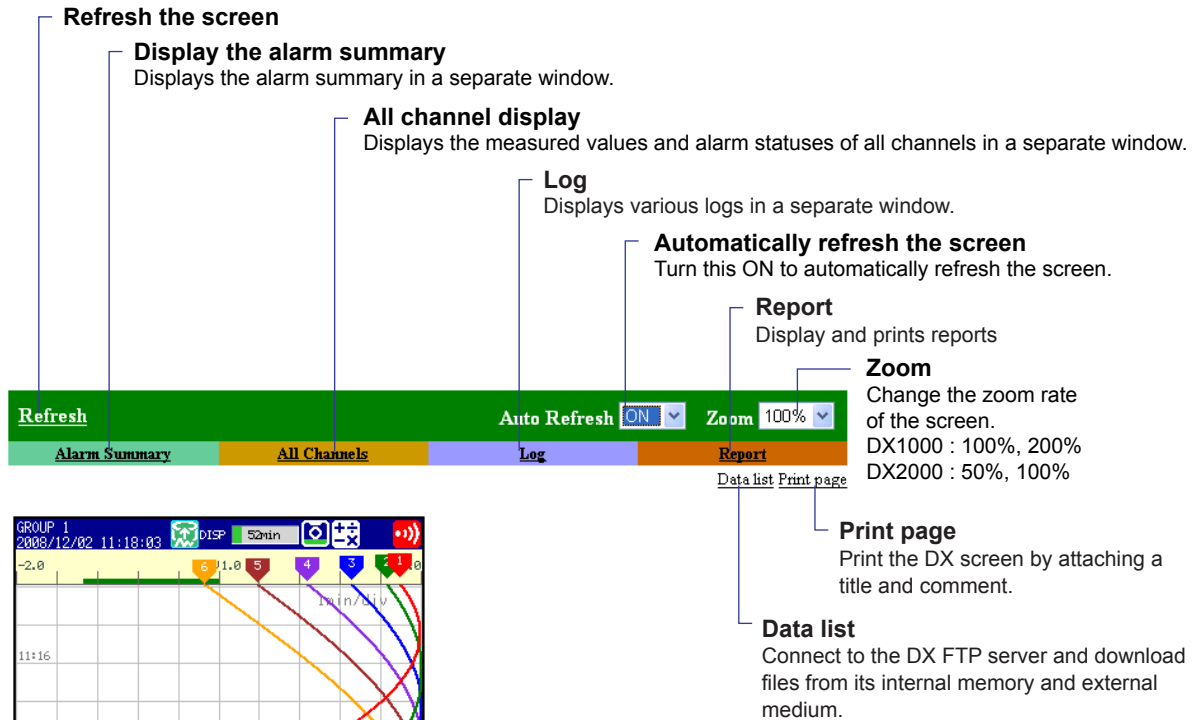

| 1                     | 2                   | 3                    |
|-----------------------|---------------------|----------------------|
| H 1.8953 <sub>v</sub> | 1.6580 <sub>v</sub> | 1.3121 <sub>v</sub>  |
| 4 0.8767 <sub>v</sub> | 0.3816 <sub>v</sub> | -0.1395 <sub>v</sub> |

#### DX screen image

#### Refreshing the page

The monitor page can be refreshed automatically or manually.



- Auto Refresh ON  
Refreshes the monitor page once approximately every 10 seconds.
- Auto Refresh OFF  
Does not automatically refresh the monitor page. If is refreshed when you click **Refresh**. You cannot refresh the page within approximately 10 seconds of the previous refreshing of the page, even if you click **Refresh**.

#### Zoom

Select the zoom factor from the list box to zoom into or out of the DX screen.

### Contents of the Operator Page

When the multi batch function (/BT2 option) is not in use

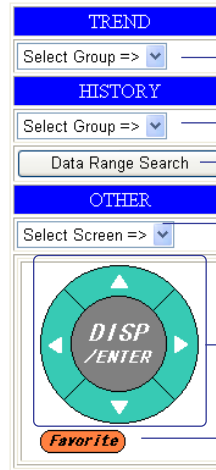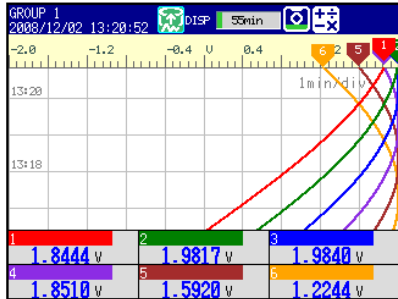

**Message**

Write a message.

**Select the trend screen**

Directly select the group you want to display.

**Select the historical screen**

Directly select the group you want to display.

**Search by date and time**

Search data by date and time.

**Select other displays**

You can select the overview display, digital display, bar graph display, or custom display.

**Arrow keys and DISP/ENTER key**

Carry out the same operation as the corresponding keys on the DX.

**Favorite key**

Carry out the same operation as the corresponding key on the DX.

## 1.5 Monitoring the DX on a PC Browser

When the multi batch function (/BT2 option) is in use  
Batch single mode

The screenshot shows the 'Batch single mode' interface. At the top, there is a navigation bar with 'Refresh', 'Auto Refresh ON', and 'Zoom 100%'. Below this is a menu with 'Alarm Summary', 'All Channels', 'Log', 'Message', and 'Report'. A 'Data list Print page' link is visible. The main area features a graph with a red vertical line at approximately -0.4 on the x-axis. Below the graph is a table with four columns: ABC-1, ABC-2, ABC-3, and ABC-4. Each column contains a value of 0.0001 and a unit 'V'. To the right of the graph is a 'SCREEN MODE' control panel with a 'Select Screen Mode =>' dropdown, buttons for 'TREND', 'HISTORY', and 'OTHER', a 'Data Range Search' button, and a 'DISP /ENTER' button with a 'Favorite' label. A 'List box' on the far right shows a 'SCREEN MODE' dropdown menu with options: 'Batch Overview', 'Batch Group1', 'Batch Group2', 'Batch Group3', and 'Batch Group4'.

Batch overview mode

The screenshot shows the 'Batch overview mode' interface. At the top, there is a navigation bar with 'Refresh', 'Auto Refresh ON', and 'Zoom 100%'. Below this is a menu with 'Alarm Summary', 'All Channels', 'Log', 'Message', and 'Report'. A 'Data list Print page' link is visible. The main area features a table titled 'BATCH OVERVIEW' with columns for batch ID, status, and settings. The table contains two rows of data. To the right of the table is a 'SCREEN MODE' control panel with a 'Select Screen Mode =>' dropdown, a 'DISP /ENTER' button with a 'Favorite' label, and a 'List box' on the far right showing a 'SCREEN MODE' dropdown menu with options: 'Batch Overview', 'Batch Group1', 'Batch Group2', 'Batch Group3', and 'Batch Group4'.

| Batch ID        | Status  | Settings        |
|-----------------|---------|-----------------|
| [1] AAA<br>11   | RUNNING | DISP 59min, OFF |
| [2] BBB<br>1234 | RUNNING | DISP 59min, OFF |

**Switching the Screen (Operator page only)**

- **Screen Mode (Only when the multi batch function (/BT2 option) is in use)**

From the **Select Screen Mode** list box, select **Batch Overview** (batch overview mode) or **Batch Group#** (batch single mode).

- **Trend and Historical Trend**

Using the **Select Group** list box, you can switch to the trend or historical trend display for the group that you specify.

If you are using the multi batch function (/BT2 option) and are displaying the batch single mode screen, you can switch between the screens in the displayed batch group.

- **Other Screens**

From the **Select Screen** list box, you can switch the screen by specifying digital, bar graph, overview, or custom.

If you are using the multi batch function (/BT2 option) and are displaying the batch single mode screen, you can switch between the screens in the displayed batch group.

- **DISP/ENTER Key, Arrow Keys, and Favorite Key**

If the DX is in operation mode, you can click the DISP/ENTER, arrow, and favorite keys to carry out the corresponding operation on the DX.

## 1.5 Monitoring the DX on a PC Browser

### Alarm Summary

Click **Alarm Summary** to display the alarm summary. Click **Refresh** to update the data.

- You can display information for up to 400 alarms.
- Based on the DX settings, the Channel column displays channel numbers, tag comments, or tag numbers and tag comments.
- Alarms are displayed using the specified alarm colors.

Alarm summary example (when the multi batch function (/BT2 option) is not in use)

| Status | Channel | Type | Alarm Time          |
|--------|---------|------|---------------------|
| ON     | ABC-3   | 1L   | 2008/12/06 16:50:41 |
| OFF    | ABC-1   | 1H   | 2008/12/06 16:49:45 |
| OFF    | ABC-2   | 2H   | 2008/12/06 16:47:43 |
| ACK    |         | 2H   | 2008/12/06 16:42:14 |
| ON     | ABC-2   | 2H   | 2008/12/06 16:39:41 |
| ON     | ABC-1   | 1H   | 2008/12/06 16:39:38 |

Alarm summary example (when the multi batch function (/BT2 option) is in use; release number 3 or later)

Select the batch group from the list box. If you select **All**, the alarm information for every batch group is displayed.

| Status | Channel | Type | Alarm Time          |
|--------|---------|------|---------------------|
| ACK    |         |      | 2008/12/06 16:59:28 |
| ON     | ABC-2   | 2H   | 2008/12/06 16:58:30 |
| ON     | ABC-1   | 1H   | 2008/12/06 16:58:27 |

### All Channel Display

Click **All Channels** to display the measured values and alarm status of all channels.

Click **Refresh** to update the data.

- Based on the DX settings, the Channel column displays channel numbers, tag comments, or tag numbers and tag comments.
- Alarms are displayed using the specified alarm colors.
- If you are using the annunciator function, the alarm display is based on the annunciator sequence. However, the indicators do not blink.
- Channels are not displayed in batch groups even if you are using the multi batch function (/BT2 option).

All channel display example

| Channel | Alarm status |   |   |   | Reading | Units |
|---------|--------------|---|---|---|---------|-------|
|         | 1            | 2 | 3 | 4 |         |       |
| ABC-1   | H            |   |   |   | -0.6014 | V     |
| ABC-2   |              | H |   |   | -1.0745 | V     |
| ABC-3   |              |   | L |   | -1.4745 | V     |
| ABC-4   |              |   |   |   | -1.7740 | V     |



**Log**

Displays the message summary, error log, FTP log, login log, Web operation log, e-mail log, SNMP log, and Modbus log in a separate window. From the **Log** list box, select the log you want to display. Click **Refresh** to update the data.

- You can display up to 100 messages and up to 50 added messages.

Message log example (when the multi batch function (/BT2 option) is not in use)

| LOG                    |         |                                     |                 |
|------------------------|---------|-------------------------------------|-----------------|
| MESSAGE ▾              |         |                                     |                 |
| Refresh                | Close   | Creation date : 2008/12/02 13:54:41 |                 |
| Time                   | Message | Group                               | User Name       |
| 2008/12/02<br>13:54:29 | hold1   | ALL                                 | [Communication] |
| 2008/12/02<br>13:53:25 | start   | ALL                                 | [Key]           |
| 2008/12/02<br>13:53:15 | hold1   | ALL                                 | [Key]           |
| 2008/12/02<br>13:53:09 | start   | ALL                                 | [Key]           |
| 2008/12/02<br>13:52:56 | stop    | ALL                                 | [Key]           |
| 2008/12/02             |         |                                     |                 |

Message log example (when the multi batch function (/BT2 option) is in use; release number 3 or later)

Displays the batch group that messages were written to.

| LOG                    |         |                                     |       |           |
|------------------------|---------|-------------------------------------|-------|-----------|
| MESSAGE ▾              |         |                                     |       |           |
| Refresh                | Close   | Creation date : 2008/12/02 14:30:35 |       |           |
| Time                   | Message | Batch Group                         | Group | User Name |
| 2008/12/02<br>14:30:33 | start   | 2                                   | ALL   | [Key]     |
| 2008/12/02<br>14:28:49 | start   | 1                                   | ALL   | [Key]     |

**Displaying and Printing Report Data (/M1 and /PM1 options; release number 3 or later)**

You can display report data in the specified format (layout) and print it.

• **Procedure**

- Set the report display layout before you carry out this operation. In the layout, set the report title, the report channels to display, and the item names.
- From the operator or monitor page, open the create web report window, and select the report file and the layout to use.

**Report layout example**

**Daily report**

| Plant Section 50 Industrial water            |                         |                         |                         |                            |                |
|--|-------------------------|-------------------------|-------------------------|----------------------------|----------------|
| Daily report Start time: 2007/03/01 01:00:00 |                         |                         |                         |                            |                |
| Timeout time                                 | Minimum pump volume [k] | Maximum pump volume [k] | Average pump volume [k] | Integrated pump volume [k] | Flow rate [m3] |
| 03/02 1:00:00                                |                         |                         |                         |                            |                |
| 03/03 1:00:00                                |                         |                         |                         |                            |                |
| 03/04 1:00:00                                |                         |                         |                         |                            |                |
| 03/05 1:00:00                                |                         |                         |                         |                            |                |
| 03/06 1:00:00                                |                         |                         |                         |                            |                |
| 03/07 1:00:00                                |                         |                         |                         |                            |                |
| 03/08 1:00:00                                |                         |                         |                         |                            |                |
| 03/09 1:00:00                                |                         |                         |                         |                            |                |
| 03/10 1:00:00                                |                         |                         |                         |                            |                |
| 03/11 1:00:00                                |                         |                         |                         |                            |                |
| 03/12 1:00:00                                |                         |                         |                         |                            |                |
| 03/13 1:00:00                                |                         |                         |                         |                            |                |
| 03/14 1:00:00                                |                         |                         |                         |                            |                |
| 03/15 1:00:00                                |                         |                         |                         |                            |                |
| 03/16 1:00:00                                |                         |                         |                         |                            |                |
| 03/17 1:00:00                                |                         |                         |                         |                            |                |
| 03/18 1:00:00                                |                         |                         |                         |                            |                |
| 03/19 1:00:00                                |                         |                         |                         |                            |                |
| 03/20 1:00:00                                |                         |                         |                         |                            |                |
| 03/21 1:00:00                                |                         |                         |                         |                            |                |
| 03/22 1:00:00                                |                         |                         |                         |                            |                |
| 03/23 1:00:00                                |                         |                         |                         |                            |                |
| 03/24 1:00:00                                |                         |                         |                         |                            |                |
| 03/25 1:00:00                                |                         |                         |                         |                            |                |
| 03/26 1:00:00                                |                         |                         |                         |                            |                |
| 03/27 1:00:00                                |                         |                         |                         |                            |                |
| 03/28 1:00:00                                |                         |                         |                         |                            |                |
| 03/29 1:00:00                                |                         |                         |                         |                            |                |
| 03/30 1:00:00                                |                         |                         |                         |                            |                |
| 03/31 1:00:00                                |                         |                         |                         |                            |                |
| 04/01 1:00:00                                |                         |                         |                         |                            |                |

Please enter comments.

## Daily and monthly reports

| Plant Section 50 Industrial water              |                         |                         |                         |                            |                |
|--|-------------------------|-------------------------|-------------------------|----------------------------|----------------|
| Daily report Start time: 2007/03/01 01:00:00   |                         |                         |                         |                            |                |
| Timeout time                                   | Minimum pump volume [k] | Maximum pump volume [k] | Average pump volume [k] | Integrated pump volume [k] | Flow rate [m3] |
| 03/02 1:00:00                                  |                         |                         |                         |                            |                |
| 03/03 1:00:00                                  |                         |                         |                         |                            |                |
| ...  | ...                     | ...                     | ...                     | ...                        | ...            |
| 03/31 1:00:00                                  |                         |                         |                         |                            |                |
| 04/01 1:00:00                                  |                         |                         |                         |                            |                |
| Monthly report Start time: 2007/03/01 01:00:00 |                         |                         |                         |                            |                |
| Timeout time                                   | Minimum pump volume [k] | Maximum pump volume [k] | Average pump volume [k] | Integrated pump volume [k] | Flow rate [m3] |
| 04/01 1:00:00                                  |                         |                         |                         |                            |                |
| Please enter comments.                         |                         |                         |                         |                            |                |

- **Setting the Report Layout**

This item only appears on models with the computation function (/M1 or /PM1 option) when the basic setting items are set as follows:

- The type of report to create is specified (**Report > Basic settings**).
- Web server is set to **Use (Communication (Ethernet) > Server > Server modes)**
- The operator or monitor page is set to **On (Communication (Ethernet) > Web page)**

◇ Press **MENU** (to switch to setting mode), and select the **Menu tab > Web Report**

### Web Report No

You can configure 10 different report layouts. Set the number in the range of 1 to 10.

### On/Off

Select **On** to use the layout.

### Title

The report title. This title is used to select the layout when displaying reports on the Web browser. Enter the title using up to 64 alphanumeric characters and symbols.

### Item No (DX1000 and DX1000N only)

You can set up to 10 items. Select **1-5** or **6-10**.

### Item, Channel, Value, and Name


For each item number, set the report channel, computation type, and name to assign to the item.

Enter the name using up to 16 alphanumeric characters and symbols.

For the procedure to configure the report, see section 9.5 in the *DX1000/DX2000 User's Manual (IM04L41B01-01E or IM04L42B01-01E)*.

• **Displaying a Report**

1. Click **Report** to open the Create Web Report window.

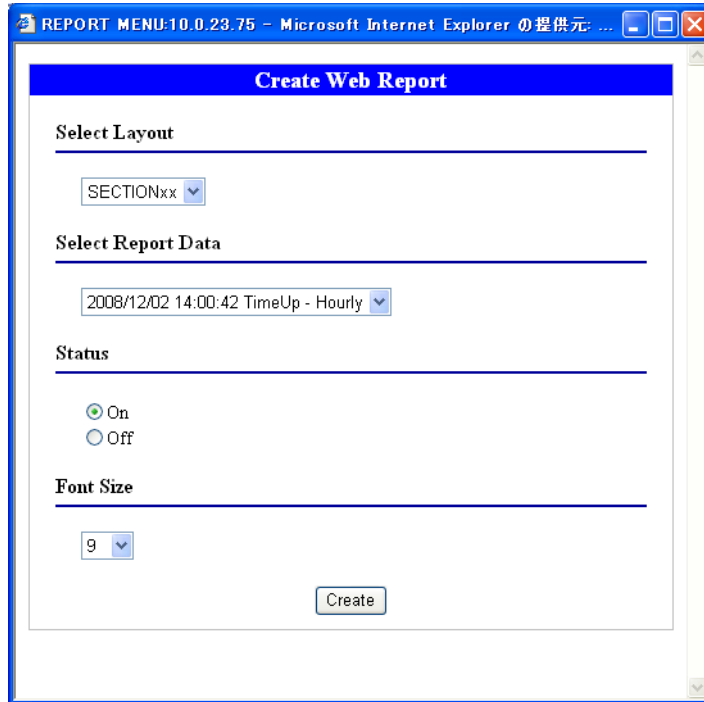

2. Select the layout and report data.

Select Layout






Select the layout title from the list box.

Select Report Data

Select the report data from the list box. The report data is the data in the DX internal memory. The report data is displayed using the date when the report was created and the report value.

Status

To display the report data status, select **On**.

| Status Indication   | Description  |
|---|--|
|  | A burnout occurred during the reporting period.                          |
|  | A measurement or computation error occurred during the reporting period. |
|  | Over range or computation overflow occurred during the reporting period. |
|  | A power failure occurred during the reporting period.                    |
|  | The time was changed during the reporting period.                        |

Font Size

Select a display font size from 6 points to 12 points.

**3. Click Create.**

The report data appears in a separate window.

PLANTxx

Hourly Start Time:2008/12/06 19:04:55

| Time Up        | PUMP 1[W]    | PUMP 2[W]    | PUMP 3[W] | PUMP 4[W]    | PUMP 5[W]    |
|----------------|--------------|--------------|-----------|--------------|--------------|
| 12/06 20:00:00 | 6.811100E+00 | 2.147660E+01 | 1.1958    | 4.551670E+01 | 5.325290E+01 |
| 12/06 21:00:00 | 9.986400E+00 | 2.073220E+01 | 1.3666    | 3.734930E+01 | 4.208800E+01 |
| 12/06 22:00:00 | 2.719522E+02 | 3.405181E+02 | 1.8375    | 4.049394E+02 | 3.964047E+02 |
| 12/06 23:00:00 | 3.777920E+01 | 3.988270E+01 | 1.9634    | 3.597750E+01 | 3.023500E+01 |

Please enter comments.

- **Printing a Report**

**Title**

You can edit the report title. Click within the report title box, and edit the text using up to 64 characters. The title that you enter here does not affect the DX setting.

**Comment**

You can enter two lines of comments in the comment text field. Click within the comment text field, and enter text.


**Print**

Print the report from the browser.

**Data list (Release number 3 or later)**

You can easily retrieve files via FTP using the data list link, without having to specify the URL.

For operating instructions, see section 1.6.

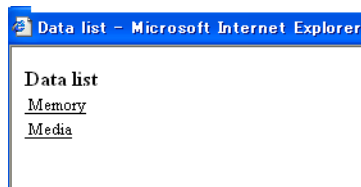

## 1.5 Monitoring the DX on a PC Browser


### Printing the Screen (Release number 3 or later)

You can print a screen capture with an optional title and comment attached.

#### Title box

The default title is the IP address or host name.

You can overwrite the default title with your own title.

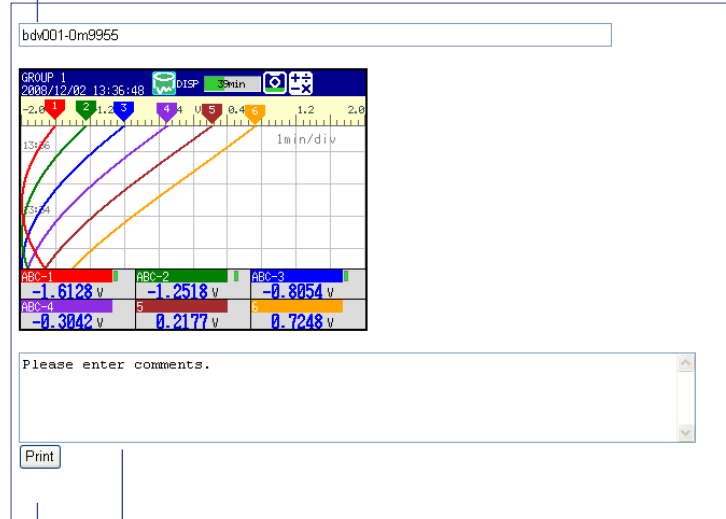

The screenshot shows a web browser window with the address bar containing "bdv001-0m9955". The main content area displays a graph titled "GR01P\_1" with a timestamp of "2008/12/02 13:36:48". The graph shows five data series (1-5) with a scale of "1min/div". Below the graph is a table of data points:

| ABC-1    | ABC-2     | ABC-3     |
|----------|-----------|-----------|
| 1.6128 v | -1.2518 v | -0.8054 v |
| 0.3042 v | 0.2177 v  | 0.7248 v  |

Below the table is a text input box with the placeholder text "Please enter comments." and a "Print" button.

#### Comment input box

Enter comments. You can enter more than five lines of comments, but only the first five lines will be printed.

#### Print button

Opens the print window.

Click **Print** to open the Print window.

### Writing Messages (Operator page only)

You can assign a text string to one of the DX messages 1 through 10 and write the message to a specified group at the same time. The maximum message length is 32 alphanumeric characters. The current message setting is overwritten.

Example of Writing a Message (when the multi batch function (/BT2 option) is not in use)  
Use message number 9 and write the message "ALARM" to all groups. Successful completion of the writing operation is indicated in the Command Response box.

Specify a message number to display the corresponding character string.

Example of Writing a Message (when the multi batch function (/BT2 option) is in use)  
Use message number 1 and write the message "start" to all display groups in batch group 1. Successful completion of the writing operation is indicated in the Command Response box.


**Displaying the Measured Data at the Specified Date and Time (Operator page only; release number 3 or later)**

You can search for measured data at the specified date and time and display the results. You can search the display data or event data in the DX internal memory.


**Note**

- This function uses the DX function that displays the measured data at the specified date and time.
- You can search the last 10 years of data excluding the data before year 2000.
- For details on the display conditions, see section 4.3 in the DX1000/DX2000 User's Manual (IM04L41B01-01E or IM04L42B01-01E).

1. Click **Data Range Search** to open the ENTER DATE & TIME RANGE window.
2. Set the date and time of the data recording and the data type.

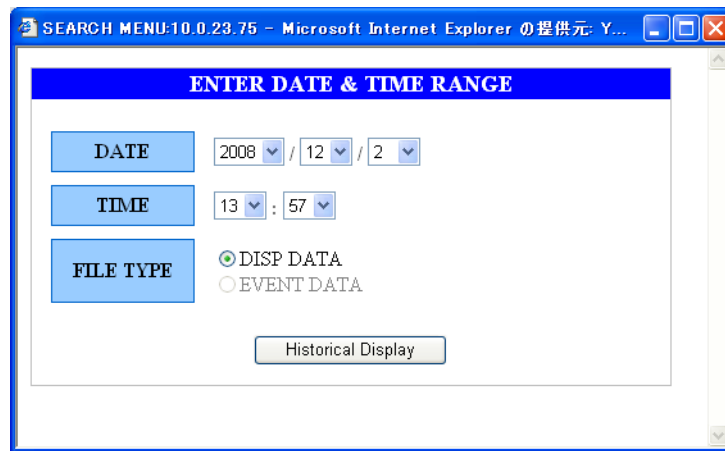

3. Click **Historical Display**.  
The DX screen switches and the data at the specified date and time appears.

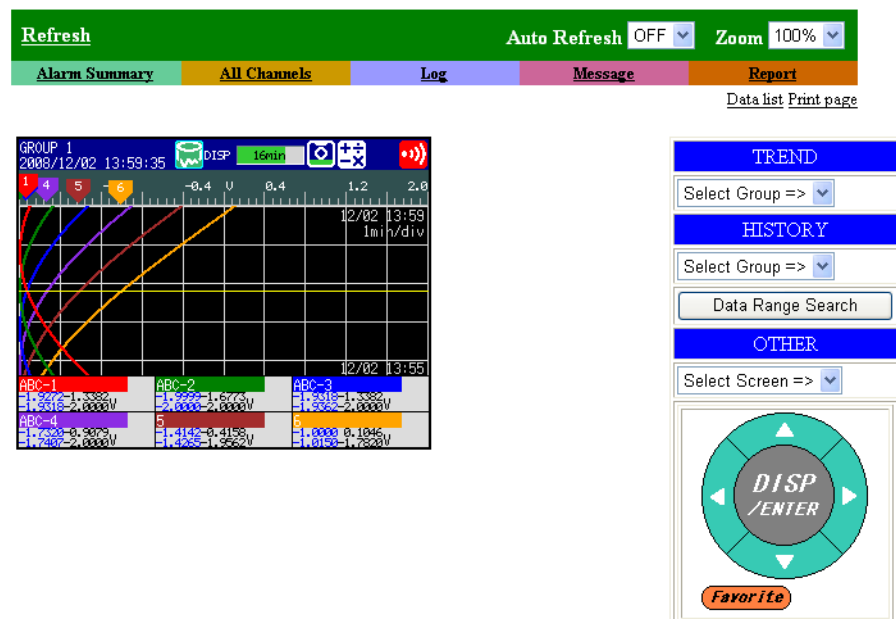




## 1.6 Accessing the Measurement Data File on the DX from a PC

You can access data files stored on the external storage medium.

### Setting the FTP Server

#### Server Function

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **Server** > **Server modes**

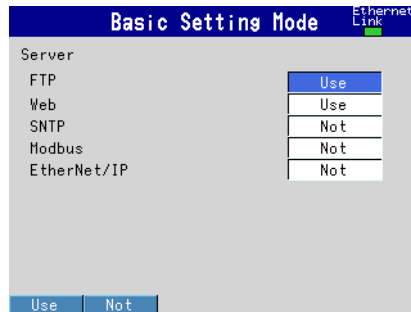


- **FTP**

For the FTP item under Server, select **Use** or **Not** (don't use).

#### FTP Server Directory Output Format (Release number 3 or later)

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Environment** tab > **Communication** > **FTP Server** > **Details**

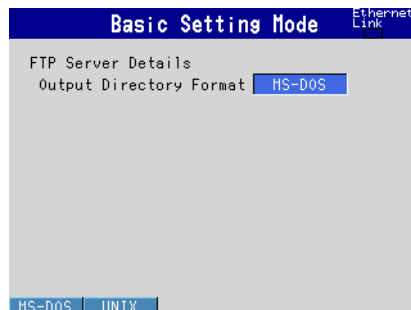

- **Directory Output Format**

Set the directory output format to **MS-DOS** or **UNIX**.

### Accessing the DX from the PC (Release number 3 or later)

When the FTP server is enabled, you can do the following:

#### Accessing Data Files from the Web Browser

1. Click **Data list**.
2. Click **Memory** or **Media**.
3. From the file list, select the files you want to retrieve.

#### Note

- You can view the files by installing the provided DAQSTANDARD software on the PC and by associating DAQSTANDARD with the files you want it to receive.
- Memory is linked to ftp://hostname/MEM0/DATA.
- Media is linked to ftp://hostname/DRV0/. The external storage medium is the CF card.
- You cannot retrieve data files that are being created.

## 1.6 Accessing the Measurement Data File on the DX from a PC

---

### Connecting from a PC via the FTP

An example of retrieving files using a browser is described below. In the Address box, enter the following:

ftp://host name.domain name/file name

Drag the data you want to retrieve from the /MEMO/DATA0 folder in the case of internal memory data or the /DRV0 folder in the case of data on the external storage medium to the PC. You can also use the IP address in place of the “host name.domain name.”

### Login

If security is enabled, you are prompted to enter the login name and password. Enter the login name and password to establish the connection.

### Port Number

The default value is 21. To change the setting,

◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Environment** tab > **Communication** > **Service port**

For the selectable range of port numbers, see section 6.1.

## 1.7 Transferring Data Files from the DX

The display and event data files, report data files, and snapshot data files created in the internal memory of the DX can be automatically transferred using FTP at the time the files are created.

### Files to Be Transferred via FTP


The display or event data files are automatically transferred to the FTP destination described in the next section at appropriate times.

| File Type          | Description   |
|--------------------|---|
| Display data file  | Data files are automatically transferred at each file save interval.  |
| Event data file    | Files are automatically transferred when the data length of data is recorded.   |
| Report data file   | Data files are automatically transferred when a report file is closed (or divided). For example, data files are transferred once per month when generating only daily reports.  |
| Snapshot data file | The files are automatically transferred when a snapshot is executed. They are transferred regardless of the media storage setting.<br>* Indicates snapshot using the FUNC key, communication command (EV2 command), USER key, or remote control function. |

### Shifting the Transfer Time (Release number 3 or later)

There may be cases when data cannot be transferred from the DX to the FTP server due to too many simultaneous connections to the FTP server. An example is when multiple files are created and need to be transferred at the same time from multiple DXs. By shifting the transfer time, you can avoid having too many simultaneous connections to the FTP server. The time that display data files, event data files, and report files are transferred can be shifted.

- Even if a new event that requires an FTP transfer occurs while the DX is waiting to transfer the data of the previous event, it does not affect the transfer wait time of the previous event. When the transfer shift time passes, all data files of the same type that have been created (all of the files that have not been transferred) are transferred via FTP. The following figure is an example for display data.
- To avoid accumulating too many files that have not been transferred, we recommend that you set the transfer wait time shorter than the interval at which events that require FTP transfers occur.

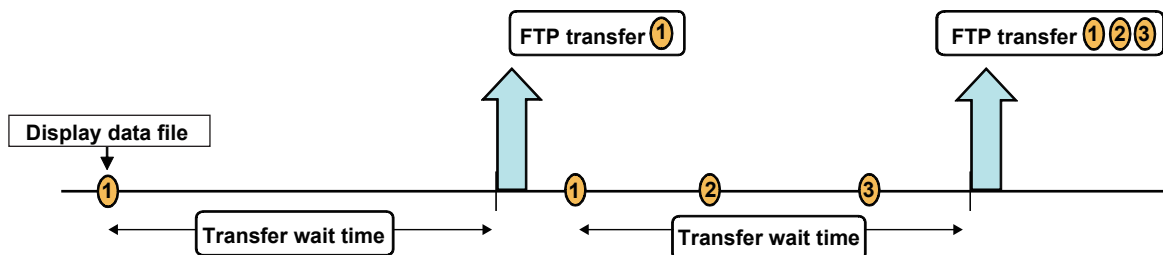

- Even if you turn the power off during FTP transfer wait time, the elapsed time is recorded.
- If you change the FTP transfer time settings during FTP transfer wait time, the data files that are being held are transferred using the previous setting. Subsequent data files are sent according to the new setting.
- If you initialize the DX during FTP transfer wait time (using Clear1, Clear2, or Clear3), the elapsed time is cleared.

### Setting the FTP Client

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **FTP client** > **FTP transfer file**

#### FTP transfer file settings

**Basic Setting Mode** Ethernet Link

FTP transfer file

Disp&Event data  Off

Report  Off

Snapshot  On

Transfer wait time

Disp&Event data  min

Report  min

On  Off

#### FTP connection destination settings

**Basic Setting Mode** Ethernet Link

FTP connection  Primary

Server name

Port number

Login name

Password

Account

PASV mode  Off

Initial path

Primary  Second

#### Setting the FTP transfer files

- **Display and Event Data**  
Select **On** when automatically transferring display and event data files.
- **Report**  
Select **On** when automatically transferring report data files.
- **Snapshot**  
Select **On** when automatically transferring snapshot data files.

#### Transfer wait time

- **Disp&Event data**  
Set the time to delay the data transfer to the FTP server in the range of 0 to 120 minutes.
- **Report**  
Set the time to delay the data transfer to the FTP server in the range of 0 to 120 minutes.

### Setting the FTP connection destination

Consult your network administrator when setting parameters such as the primary/secondary FTP servers, port number, login name, password, account, and availability of the PASV mode.

- **FTP connection**

You can specify two destination FTP servers, **Primary** and **Secondary**. If the primary FTP server is down, the file is transferred to the secondary FTP server.

- **FTP server name**

Enter the name of the file transfer destination FTP server using up to 64 alphanumeric characters.

- If the DNS is used, you can set the host name as a server name. For details on setting the DNS, see section 1.3.
- You can also set the IP address. In this case, the DNS is not required.

- **Port number**

Enter the port number of the file transfer destination FTP server in the range of 1 to 65535. The default value is 21.

- **Login name**

Enter the login name for accessing the FTP server using up to 32 alphanumeric characters.

- **Password**

Enter the password for accessing the FTP server using up to 32 alphanumeric characters.

- **Account**

Enter the account (ID) for accessing the FTP server using up to 32 alphanumeric characters.

- **PASV mode**

Select On when using the DX behind a firewall that requires the passive mode. The default setting is Off.

- **Initial path**

Enter the directory of the file transfer destination using up to 64 alphanumeric characters. The delimiter for directories varies depending on the implementation of the destination FTP server.

Example) When transferring files to the "data" directory in the "home" directory of an FTP server on a UNIX file system.

/home/data

### Operation When the Data Transfer Fails

If the DX fails to transfer files to both the primary and secondary FTP servers, the DX aborts the file transfer operation. If the connection to the destination recovers, the DX transfers new data files along with the files that the DX failed to transfer. Note that because the DX transfers data from its internal memory, if the data that the DX failed to transfer is overwritten, it is lost.

### Testing the FTP Transfer

You can test whether a test file can be transferred from the DX to an FTP server.

- ◇ Press **FUNC** and select **FTPtest**

#### Items to check before performing this test

- Connect the Ethernet cable correctly. For the connection procedure, see section 1.3.
- Check that the Ethernet interface settings are correct. For the procedure, see section 1.3.

#### Checking the results of the FTP test

- When an FTP test is executed, a test file named FTP\_TEST.TXT is transferred to the directory indicated by the initial path at the FTP destination specified in this section.
- The result of the FTP test can be confirmed by displaying the FTP log (displayed on the DX (see the *DX1000/DX2000 User's Manual*)) or Web screen (see section 1.5) or by outputting the result using the FL command (see section 3.4).

## 1.8 Synchronizing the Time

The DX time can be synchronized to the time on an SNTP server. The DX can also function as an SNTP server.

### Setting the SNTP Client

Synchronize the DX time to the time on an SNTP server.

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **SNTP client**

| Basic Setting Mode          |                     |
|-----------------------------|---------------------|
| SNTP client settings        |                     |
| Use/Not                     | Use                 |
| Server name                 | sntp.daqstation.com |
| Port number                 | 123                 |
| Access interval             | 8h                  |
| Access reference time       | 00:00               |
| Access timeout              | 30s                 |
| Time adjust on Start action | Off                 |
| Use                         | Not                 |

- **Use/Not**  
Select **Use** to use the SNTP client function; Otherwise, select **Not**. If you select **Use**, the SNTP client settings are displayed.
- **SNTP server name**  
Set the SNTP server name using up to 64 alphanumeric characters.
  - If the DNS is used, you can set the host name as a server name. For details on setting the DNS, see section 1.3.
  - You can also set the IP address. In this case, the DNS is not required.
- **Port number**  
Enter the port number of the SNTP server in the range of 1 to 65535. The default value is 123.
- **Access interval**  
Set the time interval for synchronizing the time with the server to OFF, 1, 8, 12, or 24h. If you select OFF, you can synchronize the time manually by operating soft keys. The time is not synchronized if the difference in the time between the DX and the server is greater than or equal to 10 minutes.
- **Access reference time**  
Set the reference time for making queries.
- **Access timeout**  
Set the time to wait for the response from the SNTP server when querying the time to 10, 30, 90s.
- **Time adjust on Start action**  
Select **On** to synchronize the time using SNTP when memory start is executed; Otherwise, select **Off**.

### Manually Synchronizing the Time


You can synchronize the time at any time by operating the FUNC key. The SNTP client setting must be enabled.

- ◇ Press **FUNC** and select **SNTP**

### Setting the SNTP Server

Carry out the steps below to run the DX as an SNTP server.

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **Server** > **Server modes**

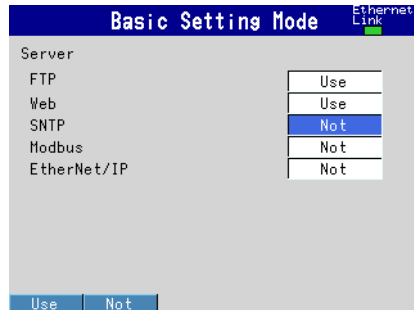

- **SNTP**

For the SNTP item under Server, select **Use** or **Not** (don't use).

When an SNTP client on the network queries the time information to the DX, the DX sends the time information.

#### Port Number

The default value is 123. To change the setting,

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Environment** tab > **Communication** > **Service port**
- For the selectable range of port numbers, see section 6.1.



## 1.9 Using the Modbus Server Function

The DX is used as a Modbus server.  
For the Modbus specifications, see section 6.3.

### Setting the Modbus Server

Carry out the steps below to enable another device to read the DX data or write data to the DX using Modbus.

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **Server** > **Server modes**

The screenshot shows the 'Basic Setting Mode' screen with the 'Server' section. The 'Modbus' option is highlighted in blue. The 'Ethernet Link' indicator is green.

| Server      | Use/Not |
|-------------|---------|
| FTP         | Not     |
| Web         | Use     |
| SNTP        | Not     |
| Modbus      | Not     |
| EtherNet/IP | Not     |

Use Not

- **Modbus**

For the Modbus item under Server, select **Use** or **Not** (don't use).

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **Server** > **Allowed Modbus clients**

The screenshot shows the 'Basic Setting Mode' screen with the 'Modbus client connect limits' section. The 'Use/Not' option is set to 'Use'. The 'Client number' is 1, 'On/Off' is On, and 'Allowed IP Address' is 0.0.0.0. The 'Ethernet Link' indicator is green.

|                    |            |
|--------------------|------------|
| Use/Not            | Use        |
| Client number      | 1          |
| On/Off             | On         |
| Allowed IP Address | 0. 0. 0. 0 |

Use Not

- **Use/Not**

To place a limitation on the IP addresses that can connect to the DX Modbus server, select **Use**. Only the IP addresses specified here can connect to the DX Modbus server. To not place a limitation, select **Not**.

- **Client number**

You can register up to 10 IP addresses. Select the client number from 1 to 10.

- **On/Off**

To allow connections, select **On**.

- **Allowed IP Address**

Enter the IP address in the range of 0.0.0.0 to 255.255.255.255. You cannot enter a host name.

## 1.9 Using the Modbus Server Function

---

### Port Number

The default value is 502. To change the setting,

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Environment** tab > **Communication** > **Service port**

For the selectable range of port numbers, see section 6.1.

### Reading/Writing the DX Data on Another Device

Another device (client device) sends commands to the DX to read the DX data or write data to the DX.

For the function codes that the DX supports and the DX registers that the client device can access, see “Modbus Server Function” in section 6.3.

## 1.10 Using the Modbus Client Function

The DX is used as a Modbus client.

For the Modbus specifications, see section 6.3.

### Setting the Modbus Client

Carry out the steps below to enable the DX to read the data of another device or write data to another device using Modbus.

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **Modbus client**

#### Basic settings

**Basic Setting Mode** Ethernet Link

Modbus client basic settings

Read cycle

Retry interval

125ms 250ms 500ms 1s Next 1/2

#### Destination server settings

**Basic Setting Mode** Ethernet Link

Server number

|   | Port | Modbus server name    | Unit  | No. |
|---|------|-----------------------|-------|-----|
| 1 | 502  | modbus.daqstation.com | Auto  |     |
| 2 | 502  | 192.168.1.80          | Fixed | 3   |
| 3 | 502  |                       | Auto  |     |
| 4 | 502  |                       | Auto  |     |
| 5 | 502  |                       | Auto  |     |
| 6 | 502  |                       | Auto  |     |
| 7 | 502  |                       | Auto  |     |
| 8 | 502  |                       | Auto  |     |

1-8 9-16

#### Transmitted command settings

**Basic Setting Mode** Ethernet Link

Client command number

|   | First | Last      | Server | Regi. | Type    |
|---|-------|-----------|--------|-------|---------|
| 1 | R-M   | C01 - C08 | ← 1    | 30001 | INT16   |
| 2 | W     | 01 - 04   | → 1    | 40001 | INT16   |
| 3 | W-M   | 101 - 105 | → 2    | 40010 | INT32_B |
| 4 | Off   |           |        |       |         |
| 5 | Off   |           |        |       |         |
| 6 | Off   |           |        |       |         |
| 7 | Off   |           |        |       |         |
| 8 | Off   |           |        |       |         |

1-8 9-16

#### Basic settings

- **Read cycle**  
Set the read cycle to 125m, 250m, 500m, 1, 2, 5, or 10s.
- **Retry interval**  
Set the interval for retrying the connection when the connection is interrupted for some reason. Select Off, 10, 20, or 30 s, 1, 2, 5, 10, 20, or 30 min, or 1 h. When Off is selected, the connection is not retried. The communication stops if the communication fails.

### Destination server settings


- **Server number**  
Select 1 to 16 for the server registration numbers to be configured.
- **Port**  
Enter the port number in the range of 0 to 65535 for the selected server. The default value is 502.
- **Modbus server name**  
Set the destination Modbus server name using up to 64 alphanumeric characters.
  - If the DNS is used, you can set the host name as a server name.
  - You can also set the IP address. In this case, the DNS is not required.
- **Unit**  
Select **Auto** if the unit number of the destination server is not required; Otherwise, select **Fixed**. If you select **Fixed**, the unit number item is displayed.
- **No.**  
Enter a fixed unit number in the range of 0 to 255.

### Setting the transmitted commands

- **Client command number**  
Select 1 to 16 for the transmitted command numbers to be configured.
- **Command type**  
Set the command type to Off, R, R-M, W, or W-M. If you select a command type other than **Off**, the client channel, server number, register, and data type items are displayed.
  - R: Read to the external input channel (16-bit signed integer type) from the server.
  - R-M: Read to the communication input data (32-bit floating point type) from the server.
  - W: Write the measurement channel (16-bit signed integer type) to the server.
  - W-M: Write the measurement channel (32-bit signed integer type) to the server.
    - R can be selected on DX2000s with the external input channel (/MC1 option) installed.
    - R-M and W-M can be selected on models with the computation function (/M1 option) installed.
- **First/Last (client channels)**  
Enter the first and last channel numbers of input/output. The range of channels that you can enter varies depending on the command type as follows:
  - R: 201 to 440, R-M: C01 to C60, W: 1 to 48, W-M: 101 to 160
- **Server (server number)**  
Select the server number from 1 to 16.
- **Regi. (registers on the server)**  
Set the register number of the server.  
For an input register, select in the range of 30001 to 39999 and 300001 to 365536.  
For a hold register, select in the range of 40001 to 49999 and 400001 to 465536.  
The register numbers you can specify vary depending on the command type. See section 6.3.
- **Type**  
Data type.  
Select INT16, UINT16, INT32\_B, INT32\_L, UINT32\_B, UINT32\_L, FLOAT\_B, or FLOAT\_L.  
The data type you can specify vary depending on the command type. See section 6.3.

### Examples of Setting Commands

The following are examples of setting commands for the Modbus Client function. For the Modbus Master function, substitute “master” for “client,” and “slave” for “server.”

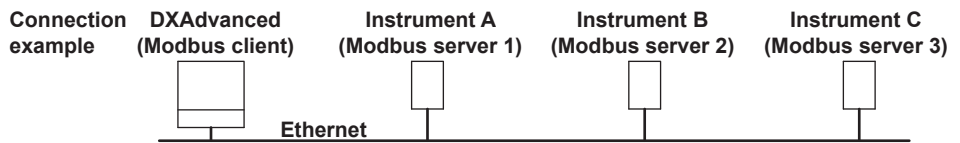

### Loading to Communication Input Data

The DX inputs data loaded from the server to communication input data as floating point type data.

- Example 1**

Load the value of the 16-bit signed integer assigned to register 30001 of instrument A to C01.




Command setting



- Example 2**

Load the value of the 32-bit signed integer assigned to registers 30003 and 30004 of instrument B to C03. Only the smallest register number need be specified in commands.



Command setting



- Example 3**

Load the values of the 16-bit signed integers assigned to registers 30001 and 30002 of instrument B to C01 and C02. Only the smallest register number need be specified in commands.




Command setting



- Example 4**

Load the values of the 32-bit floating point assigned to registers 30005 and 30006 of instrument B to C04. Only the smallest register number need be specified in commands.



Command setting



## 1.10 Using the Modbus Client Function

### Loading to External Input Channels (DX2000 Only)

The DX inputs the data loaded from the server to the external input channel as a 16-bit signed integer type.

- **Example 1**

Load the values of the 16-bit unsigned integers assigned to register 30001 of instrument C to external input channel 201.




Command setting



- **Example 2**

Load the values of the 32-bit unsigned integers assigned to registers 32001 and 32002 of instrument C to external input channel 202. Only the smallest register number need be specified in commands.



Command setting



### Writing Measured Values to the Server

- **Example**

Write the measured value (16-bit signed integer) from channel 1 to register 40001 of instrument A.




Command setting



### Writing Computed Values to the Server

- **Example**

Write the computed values (32-bit signed integers) from channel 101 to registers 40001 and 40002 of instrument A, in the order lower 16 bits/higher 16 bits. Only the smallest register number need be specified in commands.



Command setting



## Checking the Modbus Operating Status

### Displaying the Modbus Operating Status

- ◇ Press **DISP/ENTER** and select **INFORMATION > MODBUS CLIENT**

#### Note

To display **MODBUS CLIENT** on the screen selection menu, you need to change the setting using the menu customize function. The operation is as follows:

- ◇ Press **MENU** (to switch to setting mode), and select the **Menu** tab > **Menu customize > Display menu**
  1. Select **INFORMATION > MODBUS CLIENT**
  2. Press the **View** soft key.

**Communication condition**

| No. | Status | Detail code | Status lamp | COMM. Data | Server name  | Registers |
|-----|--------|-------------|-------------|------------|--------------|-----------|
|     |        |             |             | First      | Last         |           |
| 1   | Good   | C01 - C08   | Green       |            |              | 30001     |
| 2   | None   | 1 - 4       | Yellow      |            | 192.168.1.80 | 40001     |
| 3   | None   | 101 - 105   | Yellow      |            | 192.168.1.80 | 40010     |

**Register number**  
**Host name or IP address of the server device**  
**DX channels**  
**Detail code**  
**Status lamp**  
**Cursor to select a command**  
 (Used when resuming command transmission to a server device using the front panel keys)

- **Communication Conditions**

The Read cycle and Connect.retry settings are displayed.

- **Communication Status**

The communication status is displayed using the status lamp and the detail code.

| Status Lamp                       | Detail Code | Meaning   |
|-----------------------------------|-------------|---|
| Green                             | Good        | Communication is operating normally.  |
| Yellow                            |             | Command is readying.  |
| Orange                            |             | Trying to establish a TCP connection.   |
| Red                               |             | Communication is stopped.   |
| Common to yellow, orange, and red | None        | No response from the server device.   |
|                                   | Func        | The server device cannot execute the command from the DX.                                     |
|                                   | Regi        | The server device does not have the specified register.                                       |
|                                   | Err         | There is an error in the response data from the server device.                                |
|                                   | Link        | Ethernet cable is disconnected.   |
|                                   | Host        | Unable to resolve the IP address from the host name.  |
|                                   | Cnct        | Failed to connect to the server.  |
|                                   | Send        | Failed to transmit the command.   |
|                                   | BRKN        | Failed to received the response data or detected a disconnection.                             |
|                                   | (Space)     | The detail code is not displayed until the status is confirmed when communication is started. |

### Resuming Command Transmission

You can use the front panel keys to resume command transmission to a server device to which communication is stopped (red status) lamp

1. Using the up and down arrow keys, select the command corresponding to the server device to which transmission will be resumed. The message "Push [right arrow] key to refresh" appears.
2. Press the right arrow key. The DX starts command transmission to the specified server.

### Data When Communication Is Stopped and during Connection Retrials

If the command transmission stops such as due to a connection drop, the status turns orange or red, and the communication input data and external input channel data are error data. On communication channels, "+OVER" or -OVER is displayed according to the DX settings. "\*\*\*\*\*" is displayed on external input channels.

### Data Dropout

Data drop occurs when the commands from 1 to 16 do not complete within the read cycle (see appendix 1). When a data dropout occurs, the communication input data is held at the previous value. A message indicating the data dropout is also displayed on the Modbus operating status display. If this happens, take measures such as making the read cycle longer or reducing the number of commands. Confirm that no data dropout occurs on the modbus status log screen.






## 1.10 Using the Modbus Client Function

### Setup Items

The MW100 channels are assigned to the external input channels of the DX as follows:

- Channel Number

The channels of the MW100 selected first are assigned consecutively from external input channel 201. The channels of the MW100 selected next are assigned to the available external input channels from the smallest number. You cannot select the external input channels to be assigned.

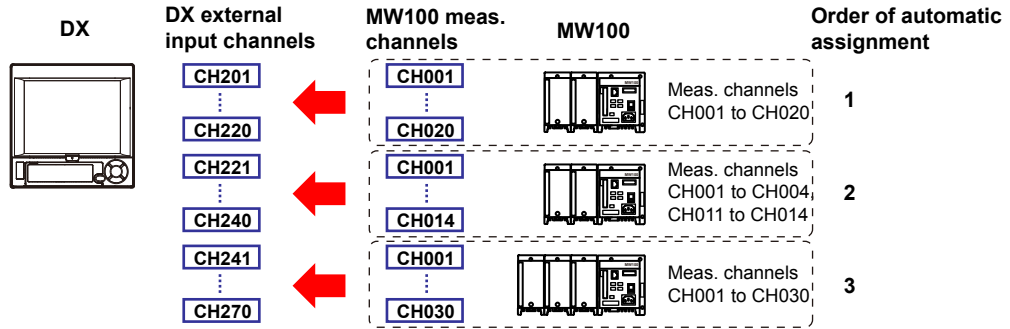

- Range Settings

The range settings of the MW100 (including the span and unit) are set automatically to the external input channels.

If the span setting of the MW100 range exceeds the span setting range of the DX external input channel (−30000 to 30000), it is set to the span upper limit (30000) or lower limit (−30000).

Specify the settings such as the alarm, tag, and the area display of the color scale band of each channel after the auto setting is complete.

### Note

#### Precautions When Assigning Channels to the External Input Channels


- The MW100 channels are assigned in unit of 10 channels to the external input channels. If the MW100 measurement module consists of less than 10 channels, “OFF” is assigned to the external input channels for the section without channels.
- An error occurs if the number of MW100 channels to be automatically set is greater than the number of available external input channels.
- If the range setting of a MW100 channel is set to “SKIP,” the external input channel of the DX is set to “OFF.”
- If a MW100 unit contains a module that cannot be set automatically, only the channels that can be assigned are assigned to the external input channels of the DX.
- If a new MW100 is added, auto setting is executed again. At this point, all the settings are cleared. Therefore, you must execute the auto setting again for all MW100s.
- If you are connecting MW100s that can be automatically set and MW100s that cannot be automatically set or other Modbus devices, automatically set the MW100s that can be automatically set first and then manually set the connection of the remaining devices.

**Note**


**About the MW100**

- MW100s that support auto setting are those with firmware version R2.22 or later.
- MW100 modules that can be automatically set are the following input modules. The installable input modules vary depending on the MW100 firmware version.
  - 4-CH, High-Speed Universal Input Module
  - 10-CH, Medium-Speed Universal Input Module
  - 6-CH, Medium-Speed Four-Wire RTD Resistance Input Module
  - 10-CH, High-speed Input Module
  - 30-CH, Medium-Speed DCV/TC/DI Input Module
  - 10-CH, Medium-Speed Pulse Input Module
- If there are no channels to be assigned or the Modbus server setting is OFF, auto setting fails with an error. Check the settings.
- MW100s that are connected through auto setting automatically switches to the measurement mode.
- Port number 34324 of the MW100 is used to perform auto setting.
- For details on the MW100 settings, see the user's manual of the MW100.

The first channel information of the MW100 that is automatically set to the external input channel can be displayed when the cursor is on the first or last channel.

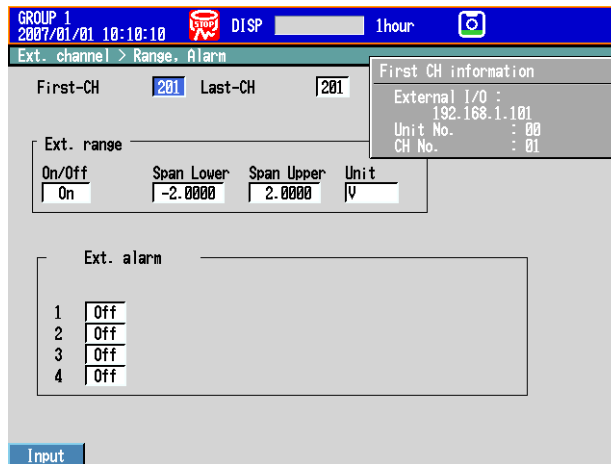

In addition, the status of the connected MW100 can be confirmed on the Modbus status display screen.

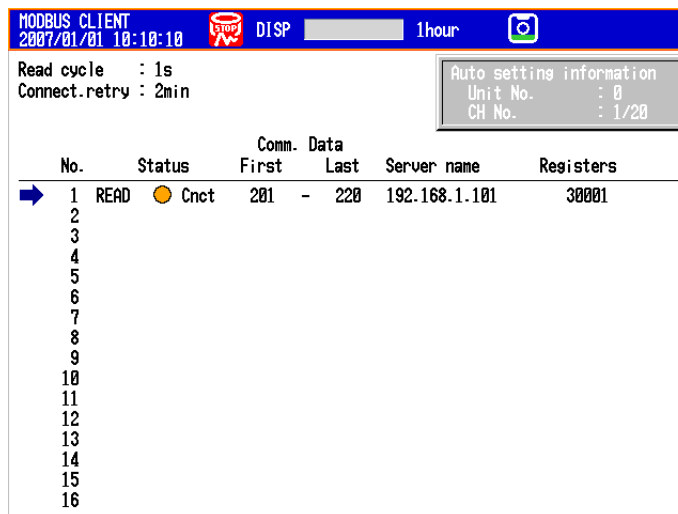


## 1.11 Usage Example of the Modbus Function

Explains the setting example for both Modbus client and server on DX1000s connected via the Ethernet. This section refers to the DX1000 set to be a Modbus server as DX1000 server and the DX1000 set to be a Modbus client as DX1000 client.

### System Configuration and Actions

Uses the measurement channel, computation channel, and communication input data as described in the figure below. Assumes other conditions are set properly.

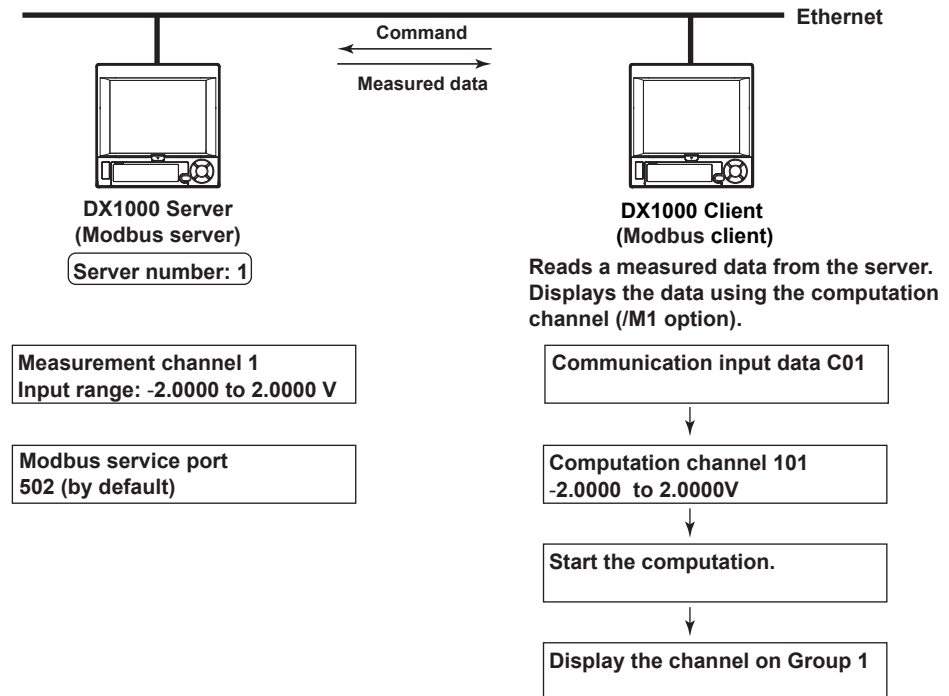

#### Action

- The DX1000 client reads the measured value of channel 1 on the DX1000 server into the communication input data C01. C01 is displayed on a computation channel 101 by including the data in the equation. The computation channel 101 is assigned to Group1.
- The measured value of channel 1 on the DX1000 server is transferred to the DX1000 client as an integer in the range of -20000 to 20000.
- The DX1000 client displays the read data as -2.0000 to 2.0000 V using the computation channel 101. The following conversion is applied.


**Value on the computation channel 101 of the DX1000 client**

$$= \text{Communication input data C01} \times 0.0001$$

## Settings on the DX1000 Server (Modbus Server)

### Setting the Modbus Server Function

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **Server** > **Server modes**

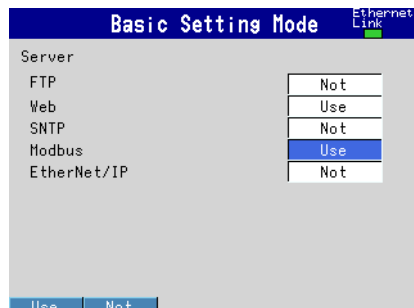


| Item   | Settings |
|--------|----------|
| Modbus | Use      |

### About the Port Number

The port number is 502 by default.

### Setting the Measurement Channel

- ◇ Press **MENU** (to switch to setting mode), and select the **Menu** tab > **Meas channel** > **Range, Alarm**

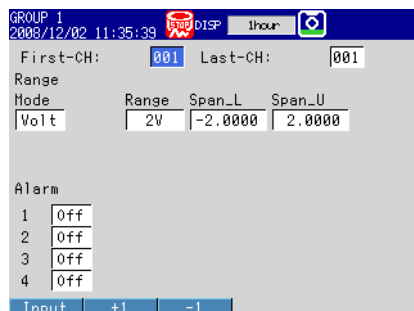

| Item              | Settings |
|-------------------|----------|
| First-CH, Last-CH | 1        |
| Mode              | Volt     |
| Range             | 2V       |
| Span_L            | -2.0000  |
| Span_U            | 2.0000   |

### Setting the DX1000 Client (Modbus Client)


Assumes the settings other than that for the server and the command are left to default values.

#### Registering the Destination Server

Register the DX1000 server to number 1.

The IP address of the DX1000 server is “190.168.1.101” as an example.


- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **Modbus client** > **Modbus server settings**

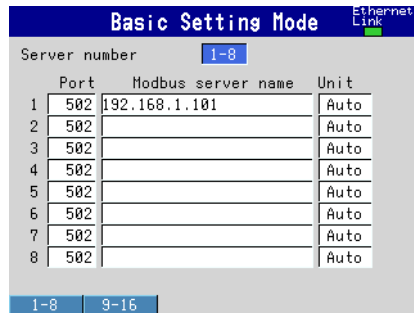

| Item               | Settings      |
|--------------------|---------------|
| Port               | 502           |
| Modbus server name | 192.168.1.101 |
| Unit               | Auto          |

#### Setting Command

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Ethernet)** > **Modbus client** > **Command settings**

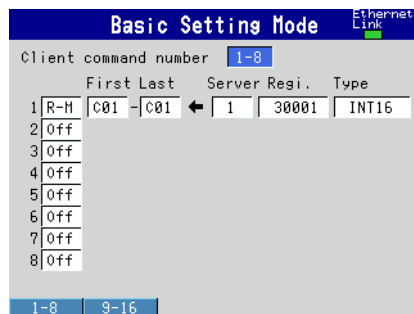

| Item           | Settings |
|----------------|----------|
| Command type   | R-M      |
| First and Last | C01      |
| Server         | 1        |
| Regi.          | 30001    |
| Type           | INT16    |

### Setting the Computation Channel

- ◇ Press **MENU** (to switch to setting mode), and select the **Menu** tab > **Math channel** > **Expression, Alarm**

| Item                   | Settings |
|------------------------|----------|
| First-CH, Last-CH      | 101      |
| Math                   | On       |
| Calculation expression | C01*K01  |
| Span_L                 | -2.0000  |
| Span_U                 | 2.0000   |
| Unit                   | V        |

- ◇ Press **MENU** (to switch to setting mode), and select the **Menu** tab > **Math channel** > **Constant**

| Item               | Settings |
|--------------------|----------|
| Number of constant | K01      |
| Value              | 0.0001   |

### Assigning the channel to a Group


- ◇ Press **MENU** (to switch to setting mode), and select the **Menu** tab > **Group set, Trip line**

| Item         | Settings |
|--------------|----------|
| Group number | 1        |
| On/Off       | On       |
| Group name   | GROUP 1  |
| CH set       | 101      |

### Starting the Computation (DX1000 Client)

- ◇ Press **FUNC** and select **Math start**

The computation starts. A computation icon is displayed on the status display section. The value of the computation channel 101 in the GROUP 1 of the DX1000 client varies in conjunction with the measured value of the measurement channel 1 on the DX1000 server.

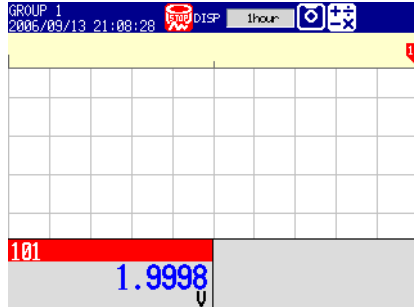

### Confirming the Communication Status (DX1000 Client)


#### Showing a Menu to Switch to the Modbus Client Screen

This is the operation to show INFORMATION > MODBUS CLIENT on the display selection menu.

- ◇ Press **MENU** (to switch to setting mode), and select the **Menu** tab > **Menu customize** > **Display menu**

1. Select **INFORMATION > MODBUS CLIENT** using the arrow keys.
  - \* Select **INFORMATION > MODBUS MASTER** when you use the Modbus master via the serial communication.
2. Press the **View** soft key.
 

The selected item displays in white.

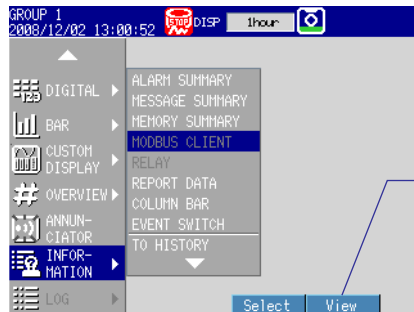


**View/Hide soft key**  
Toggles **View** and **Hide** each time you press the soft key.

3. Press the **ESC** key to return to the operation screen.

#### Displaying the Modbus Client Screen

Press **DISP/ENTER** and select **INFORMATION > MODBUS CLIENT**

- \* Select **INFORMATION > MODBUS MASTER** when you use the Modbus master via the serial communication.

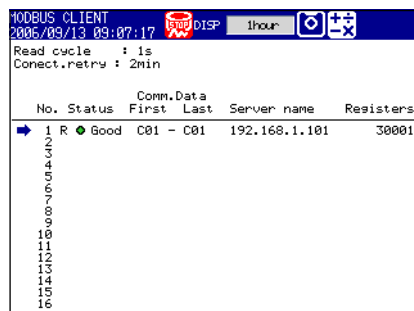



## 2.1 DX1000/DX2000 Features

Serial communication can be performed using RS-232 or RS-422/485. Explains the serial communication functions.

### Modbus Master


- The DX can connect to a Modbus slave device and read or write to the internal register. The read data can be used as communication input data of the computation function\* on a computation channel. The data can also be handled on the external input channel.\*\* The data that can be written to the internal register is measured data and computed data.

\* /M1 option

\*\* DX2000 with /MC1 option


- For a description of the settings required to use this function, see section 2.4. For details on the Modbus function codes that the DX supports, see section 6.3.
- For the setting procedure, see sections 2.4, 2.6, and 2.7.

DX (master)

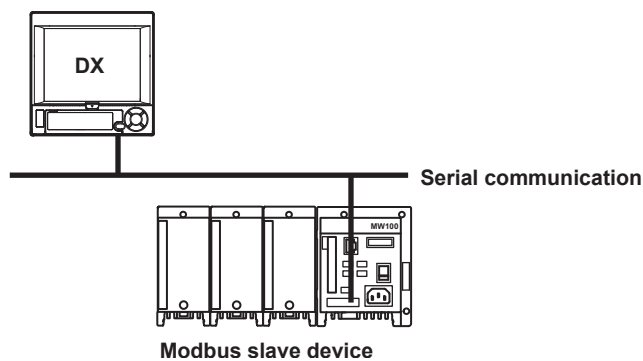

## Modbus Slave

- A Modbus master device can carry out the following operations on the DX that is operating as a Modbus slave device.
  - Load data from measurement, computed,\* and external input channels\*\* (using the input register)
  - Load communication input data\* (using the hold register)
  - Write communication input data\* (using the hold register)
  - Write to external input channels\* (using the hold register)
  - Start and stop recording, write messages, and perform other similar operations (using the hold register; models with release number 3 or later)
  - Load the recording start/stop condition, message strings, and other types of data (using the hold register; models with release number 3 or later)
- \* /M1 and /PM1 options
- \*\* DX2000 with /MC1 option
- For details on the settings required to use this function and the Modbus function codes that the DX supports, see section 6.3.
- For the setting procedure, see sections 2.4, 2.5, and 2.7.

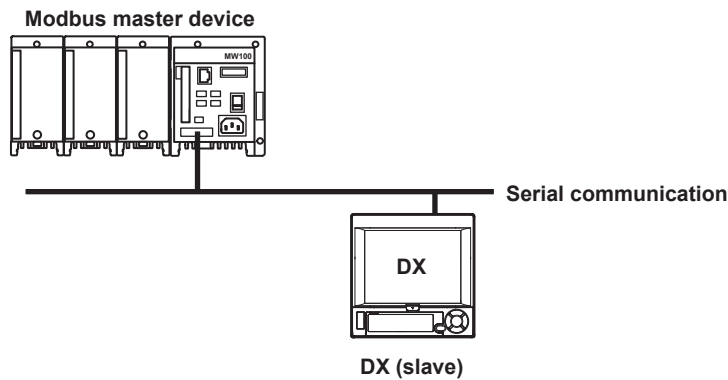

## Setting/Measurement Server

- This function can be used to set almost all of the settings that can be configured using the front panel keys. For details, see section 1.1.
- For a description of the settings required to use this function, see section 2.4.

## PROFIBUS-DP (/CP1 option; release number 3 or later)

As a PROFIBUS-DP slave device, the DX can:


- Output measured values of measurement channels.
- Output a portion of the computed values of computation channels.
- Enter data to a portion of the communication input data.

For operating instructions, see the PROFIBUS-DP Communication Interface User's Manual (IM04L41B01-19E).

## 2.2 Flow of Operation When Using the Serial Interface

The flow chart below shows the procedure to set the communication using RS-232 or RS-422/RS-485.

The procedure varies for RS-232 and RS-422/RS-485.

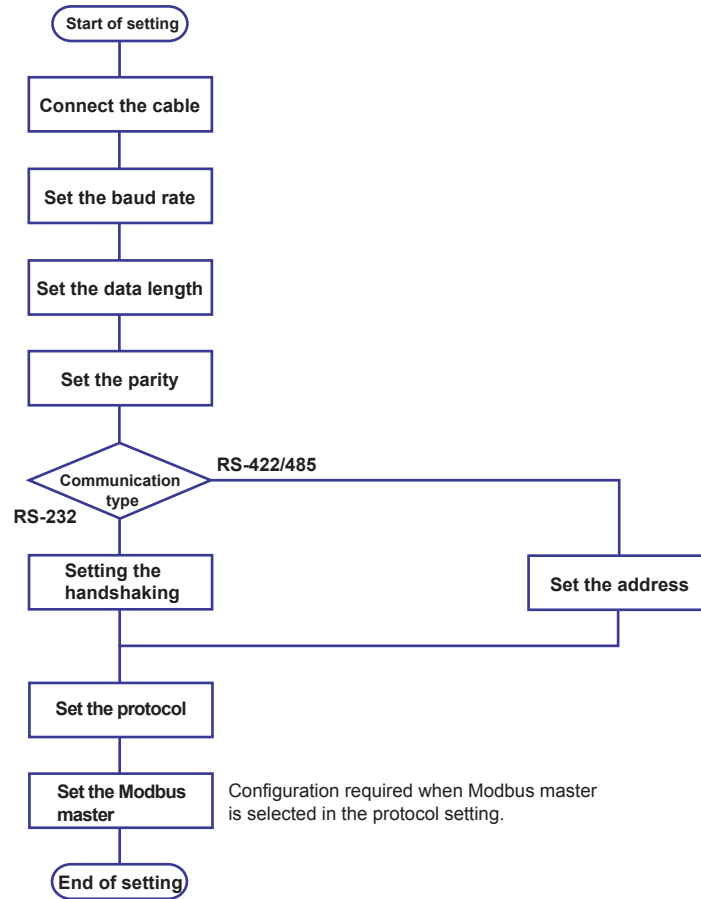

## 2.3 Connecting the DX


### Connecting the cable

Connect a cable to the serial port on the DX rear panel.

### RS-232 Connection Procedure

Connect a cable to the 9-pin D-sub RS-232 connector.

### Connector pin arrangement and signal names

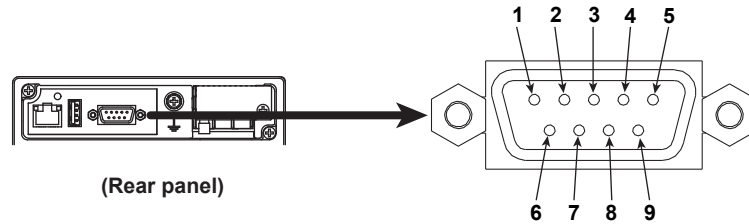

Each pin corresponds to the signal indicated below.


The following table shows the signal name, RS-232 standard, JIS, and ITU-T standard signals.

| Pin | Signal Name |       |         | Name             | Meaning   |
|-----|-------------|-------|---------|------------------|---|
|     | JIS         | ITU-T | RS-232  |                  |   |
| 2   | RD          | 104   | BB(RXD) | Received data    | Input signal to the DX.   |
| 3   | SD          | 103   | BA(TXD) | Transmitted data | Output signal from the DX.  |
| 5   | SG          | 102   | AB(GND) | Signal ground    | Signal ground.  |
| 7   | RS          | 105   | CA(RTS) | Request to send  | Handshaking signal when receiving data from the PC.<br>Output signal from the DX. |
| 8   | CS          | 106   | CB(CTS) | Clear to send    | Handshaking signal when receiving data from the PC.<br>Input signal to the DX.    |

\* Pins 1, 4, 6, and 9 are not used.


### Connection

- Signal direction

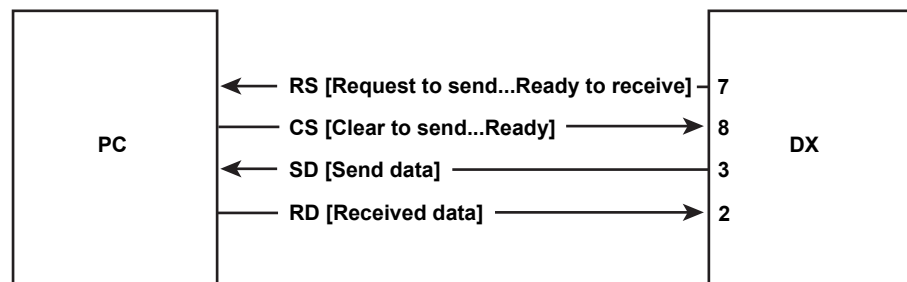


- Connection example


• **OFF-OFF/XON-XON**

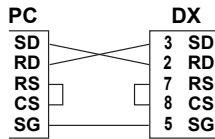

• **CS-RS(CTS-RTS)**

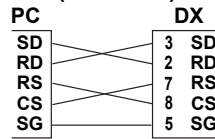

• **XON-RS(XON-RTS)**

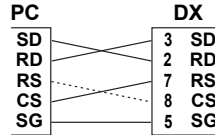

The connection of RS on the PC and CS on the DX is not necessary. However, we recommend that you wire them so that the cable can be used in either direction.

**Handshaking**

When using the RS-232 interface for transferring data, it is necessary for equipment on both sides to agree on a set of rules to ensure the proper transfer of data. The set of rules is called handshaking. Because there are various handshaking methods that can be used between the DX and the PC, you must make sure that the same method is chosen by both the DX and the PC.

You can choose any of the four methods on the DX in the table below.

Table of Handshaking Methods (Yes indicates that it is supported)

| Handshaking | Data transmission control<br>(Control used when sending data to a computer) |  |                | Data Reception Control<br>(Control used when receiving data from a computer)                                 |   |                |
|-------------|---|--|----------------|--|---|----------------|
|             | Software Handshaking  | Hardware Handshaking   | No handshaking | Software Handshaking   | Hardware Handshaking  | No handshaking |
|             | Stops transmission when X-OFF is received. Resume when X-ON is received.    | Stops sending when CS (CTS) is false. Resumes when it is true. |                | Sends X-OFF when the receive data buffer is 3/4 full. Sends X-ON when the receive data buffer is 1/4th full. | Sets RS (RTS) to False when the receive data buffer is 3/4 full. Sets RS (RTS) to True when the receive data buffer becomes 1/4 full. |                |
| OFF-OFF     |   |  | Yes            |  |   | Yes            |
| XON-XON     | Yes   |  |                | Yes  |   |                |
| XON-RS      | Yes   |  |                |  | Yes   |                |
| CS-RS       |   | Yes  |                |  | Yes   |                |

• **OFF-OFF**

- Data transmission control

There is no handshaking between the DX and the PC. The “X-OFF” and “X-ON” signals received from the PC are treated as data, and the CS signal is ignored.

- Data reception control

There is no handshaking between the DX and the PC. When the received buffer becomes full, all of the data that overflows are discarded.

RS = True (fixed).

- **XON-XON**

- Data transmission control

Software handshaking is performed between the DX and the PC. When an “X-OFF” code is received while sending data to the PC, the DX stops the data transmission. When the DX receives the next “X-ON” code, the DX resumes the data transmission. The CS signal received from the PC is ignored.

- Data reception control

Software handshaking is performed between the DX and the PC. When the free area of the received buffer decreases to 1537 bytes, the DX sends an “X-OFF” code. When the free area increases to 511 bytes, the DX sends an “X-ON” code. RS = True (fixed).

- **XON-RS**

- Data transmission control

The operation is the same as with XON-XON.

- Data reception control

Hardware handshaking is performed between the DX and the PC. When the free area of the received buffer decreases to 1537 bytes, the DX sets “RS=False.” When the free area increases to 511 bytes, the DX sets “RS=True.”

- **CS-RS**

- Data transmission control

Hardware handshaking is performed between the DX and the PC. When the CS signal becomes False while sending data to the PC, the DX stops the data transmission. When the CS signal becomes True, the DX resumes the data transmission. The “X-OFF” and “X-ON” signals are treated as data.

- Data reception control

The operation is the same as with XON-RS.

### **Note**


---

- The PC program must be designed so that the received buffers of both the DX and the PC do not become full.
  - If you select XON-XON, send the data in ASCII format.
-

## RS-422/485 Connection Procedure

### Terminal arrangement and signal names

Connect a cable to the clamp terminal.

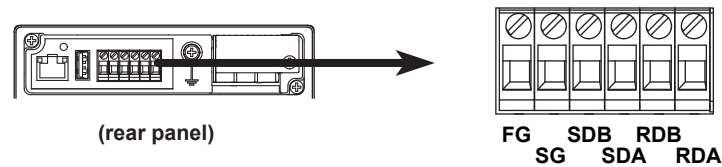

Each terminal corresponds to the signal indicated below.


| Signal Name | Meaning                 |
|-------------|-------------------------|
| FG          | Frame ground of the DX. |
| SG          | Signal ground.          |
| SDB         | Send data B (+).        |
| SDA         | Send data A (-).        |
| RDB         | Receive data B (+).     |
| RDA         | Receive data A (-).     |

### Connection

- Connecting the Cable


As shown in the figure below, remove approximately 5 mm of the covering from the end of the cable to expose the conductor. Keep the exposed section from the end of the shield within 5 cm.

- Connection of a four-wire system

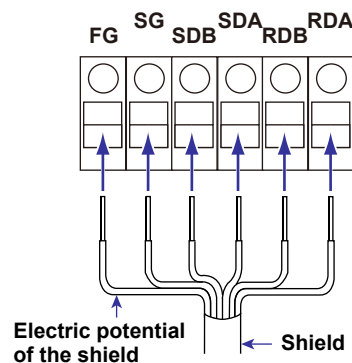

### Connecting to the host device

The figure below illustrates the connection of the DX to a host device. If the port on the host device is an RS-232 interface, connect a converter.

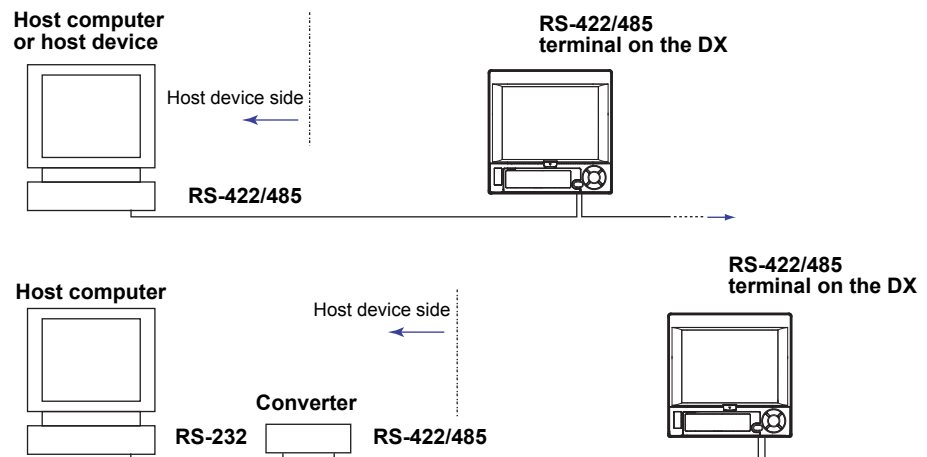

## 2.3 Connecting the DX

### Connection example to the host device


A connection can be made with a host device having a RS-232, RS422, or RS-485 port. In the case of RS-232, a converter is used. See the connection examples below for a typical converter terminal. For details, see the manual that comes with the converter.

| RS-422/485 Port | Converter |
|-----------------|-----------|
| SDA(-)          | TD(-)     |
| SDB(+)          | TD(+)     |
| RDA(-)          | RD(-)     |
| RDB(+)          | RD(+)     |
| SG              | SHIELD    |
| FG              | EARTH     |

There is no problem of connecting a 220-Ω terminator at either end if YOKOGAWA's PLCs or temperature controllers are also connected to the communication line.

#### • Four-wire system


Generally, a four-wire system is used to connect to a host device. In the case of a four-wire system, the transmission and reception lines need to be crossed over.

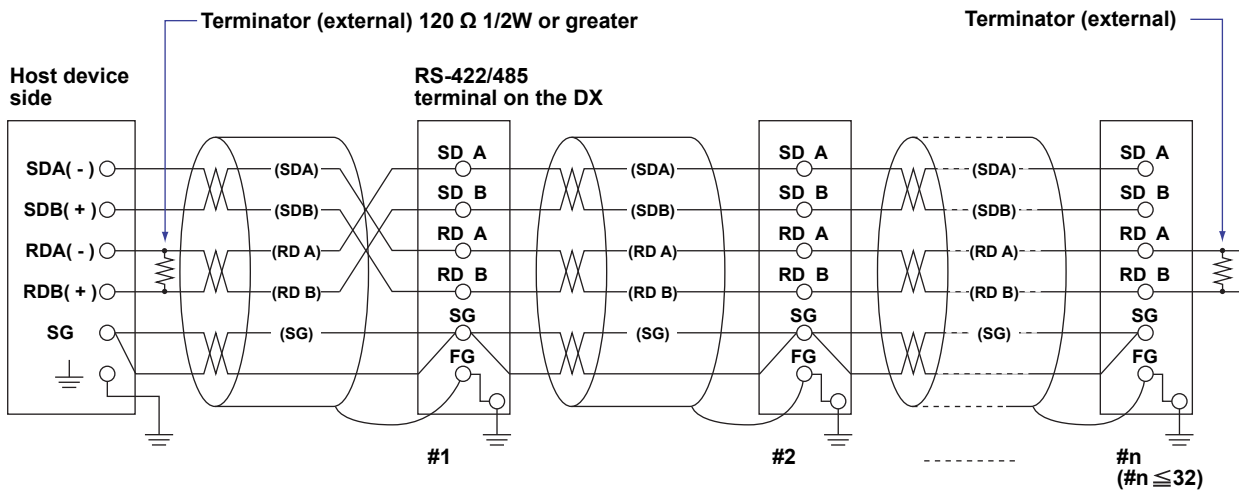

Do not connect terminators to #1 through #n-1.

#### • Two-wire system

Connect the transmission and reception signals with the same polarity on the RS-422/485 terminal block. Only two wires are used to connect to the external device.

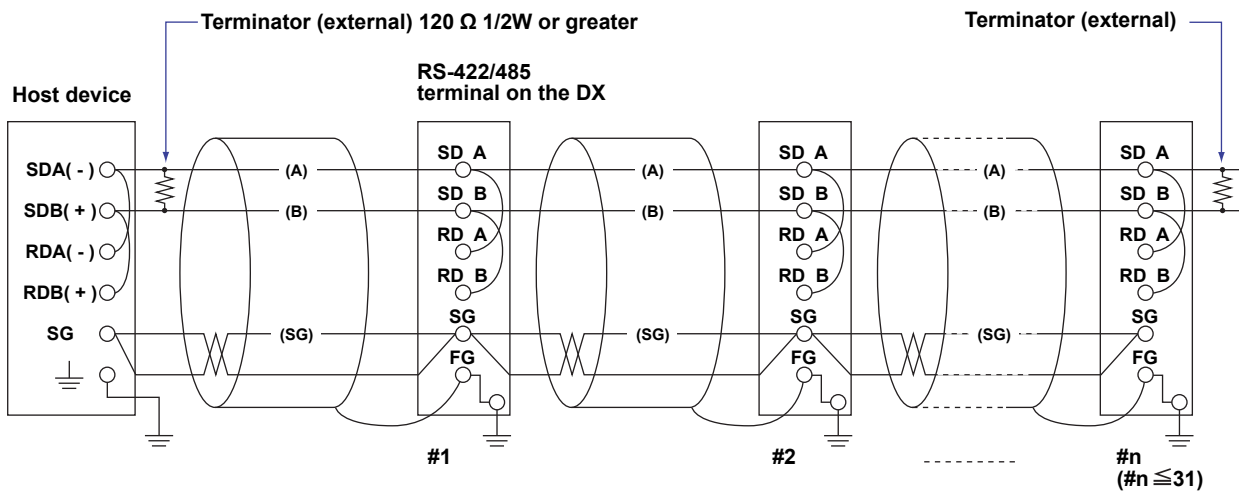

Do not connect terminators to #1 through #n-1.



**Note**

- The method used to eliminate noise varies depending on the situation. In the connection example, the shield of the cable is connected only to the DX's ground (one-sided grounding). This is effective when there is a difference in the electric potential between the computer's ground and the DX's ground. This may be the case for long distance communications. If there is no difference in the electric potential between the computer's ground and the DX's ground, the method of connecting the shield also to the computer's ground may be effective (two-sided grounding). In addition, in some cases, using two-sided grounding with a capacitor connected in series on one side is effective. Consider these possibilities to eliminate noise.
- When using the two-wire interface (Modbus protocol), the 485 driver must be set to high impedance within 3.5 characters after the last data byte is sent by the host computer.

**Serial interface converter**

The recommended converter is given below.

SYSMEX RA CO.,LTD./MODEL RC-770X, LINE EYE/SI-30FA, YOKOGAWA/ML2

**CAUTION**

Some converters not recommended by Yokogawa have FG and SG pins that are not isolated. In this case, do not follow the diagram on the previous page (do not connect anything to the FG and SG pins). Especially in the case of long distance communications, the potential difference that appears may damage the DX or cause communication errors. For converters that do not have the SG pin, they can be used without using the signal ground. For details, see the manual that comes with the converter.

On some non-recommended converters, the signal polarity may be reversed (A/B or +/- indication). In this case, reverse the connection.

For a two-wire system, the host device must control the transmission driver of the converter in order to prevent collisions of transmit and received data. When using the recommended converter, the driver is controlled using the RS (RTS) signal on the RS-232.

**When instruments that support only the RS-422 interface exist in the system**

When using the four-wire system, up to 32 DXs can be connected to a single host device. However, this may not be true if instruments that support only the RS-422 interface exist in the system.

**When YOKOGAWA's recorders that support only the RS-422 interface exist in the system**

The maximum number of connection is 16. Some of YOKOGAWA's conventional recorders (HR2400 and  $\mu$ R, for example) only support the RS-422 driver. In this case, only up to 16 units can be connected.

**Note**


In the RS-422 standard, 10 is the maximum number of connections that are allowed on one port (for a four-wire system).

**Terminator**

When using a multidrop connection (including a point-to-point connection), connect a terminator to the DX if the DX is connected to the end of the chain. Do not connect a terminator to a DX in the middle of the chain. In addition, turn ON the terminator on the host device (see the manual of the host device). If a converter is being used, turn ON its terminator. The recommended converter is a type that has a built-in terminator. Select the appropriate terminator (120  $\Omega$ ), indicated in the figure, according to the characteristic impedance of the line, the installation conditions of the instruments, and so on.

## 2.4 Setting the Serial Communication

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Serial)** > **Basic settings**

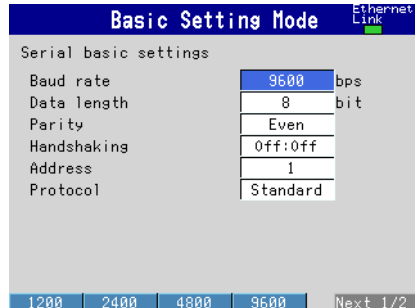

### For RS-232

- **Baud rate**  
Select 0, 1200, 2400, 4800, 9600, 19200, or 38400 (bps).
- **Data length**  
Select 7 or 8 (bits). To output the data in binary format, select 8.
- **Parity**  
Set the parity check method to Odd, Even, or None.
- **Handshaking**  
Select Off:Off, XON:XON, XON:RS, or CS:RS.
- **Address**  
For Modbus protocol, enter a value in the range of 1 to 99. For a general purpose communication protocol, this value is not set.
- **Protocol**  
Select [Standard] for a general purpose communication protocol, [Modbus] for Modbus slave, and [Master-M] for Modbus master.  
If Modbus master is selected, Modbus master settings must be entered.

### For RS-422/485

- **Baud rate**  
Select 0, 1200, 2400, 4800, 9600, 19200, or 38400 (bps).
- **Data length**  
Select 7 or 8 (bits). To output the data in binary format, select 8.
- **Parity**  
Set the parity check method to Odd, Even, or None.
- **Handshaking**  
Not specified.
- **Address**  
Select a number from 1 to 99.
- **Protocol**  
This is the same as with the RS-232.

---

## 2.5 Using the Modbus Slave Function

The DX is used as a Modbus slave.  
For the Modbus specifications, see section 6.3.

### Setting the Serial Communication

Select **Modbus** as a protocol on the **Basic settings**. For detail, see section 2.4, "Setting the Serial Communication."

### Reading/Writing the DX Data on Another Device

Another device (master device) sends commands to the DX to read the DX data or write data to the DX.

For the function codes that the DX supports and the DX registers that the master device can access, see "Modbus Server Function" in section 6.3.

## 2.6 Using the Modbus Master Function

The DX is used as a Modbus master.

For the Modbus specifications, see section 6.3.

### Setting the Serial Communication

Select **Modbus-M** as a protocol on the **Basic settings**. For detail, see section 2.4, "Setting the Serial Communication."

### Setting the Modbus Master

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Serial)** > **Modbus master** > **Basic settings** or **Command settings**

#### Basic settings

| Basic Setting Mode           |       |
|------------------------------|-------|
| Modbus master basic settings |       |
| Read cycle                   | 1s    |
| Timeout                      | 1s    |
| Retrials                     | 1     |
| Inter-block delay            | Off   |
| Auto recovery                | 10min |

#### Command settings

| Basic Setting Mode        |      |       |       |                   |
|---------------------------|------|-------|-------|-------------------|
| Master command number 1-8 |      |       |       |                   |
| First                     | Last | Addr. | Regi. | Type              |
| 1                         | R-M  | C01   | -C08  | ← 1 30001 INT16   |
| 2                         | W    | 001   | -004  | → 1 40001 INT16   |
| 3                         | W-M  | 101   | -105  | → 2 40010 INT32_B |
| 4                         | Off  |       |       |                   |
| 5                         | Off  |       |       |                   |
| 6                         | Off  |       |       |                   |
| 7                         | Off  |       |       |                   |
| 8                         | Off  |       |       |                   |

#### Basic settings

- **Read cycle**  
Set the read cycle to 125ms, 250ms, 500ms, 1s, 2s, 5s, or 10s.
- **Timeout**  
Set the timeout value to 125 ms, 250 ms, 500 ms, 1 s, 2 s, 5 s, 10 s, or 1 min. The timeout value is the maximum amount of time the DX waits for a response from the specified slave after the DX sends a command.
- **Retrials**  
Set the number of retrials when there is no response from the slave. Select Off, 1, 2, 3, 4, 5, 10, or 20.
- **Inter-block delay**  
Set the amount of time the DX waits after receiving a response to send the next command. Set the amount of time to Off, 5 ms, 10 ms, 15 ms, 45 ms, or 100 ms.
- **Auto recovery**  
Set the auto recovery time from communication halt. Select Off, 1min, 2min, 5min, 10min, 20min, 30min, or 1h.

#### Command settings

- **Master command number**  
Select 1-8 or 9-16 for the command numbers to be configured.
- **Command type**  
Set the transmitted command type to Off, R, R-M, W, or W-M.
  - R: Read to the external input channel (16-bit signed integer type) from the slave.
  - R-M: Read to the communication input data (32-bit floating point type) from the slave.
  - W: Write the measurement channel (16-bit signed integer type) to the slave.
  - W-M: Write the measurement channel (32-bit signed integer type) to the slave.

**R** can be selected on DX2000s with the external input channel (/MC1) installed.  
**R-M** and **W-M** can be selected on models with the computation function (/M1) option installed.

- **First/Last (DX's channel numbers)**  
Enter the first and last channel numbers of input/output. The range of channels that you can enter varies depending on the command type as follows:  
R: 201 to 440, R-M: C01 to C60, W: 1 to 48, W-M: 101 to 160
- **Address**  
Enter the address of the slave device in the range of 1 to 247.
- **Regi.**  
Set the register number of the slave.  
For an input register, select in the range of 30001 to 39999 and 300001 to 365536.  
For a hold register, select in the range of 40001 to 49999 and 400001 to 465536.  
The register numbers you can specify vary depending on the command type. See section 6.3.
- **Type**  
Select INT16, UINT16, INT32\_B, INT32\_L, UINT32\_B, UINT\_L, FLOAT\_B, or FLOAT\_L.  
The register numbers you can specify vary depending on the command type. See section 6.3.

## Examples of Setting Commands

See page 1-36.

## Checking the Modbus Operating Status

### Displaying the Modbus Operating Status

- ◇ Press **DISP/ENTER** and select **INFORMATION > MODBUS MASTER**

#### Note

To display the **MODBUS MASTER** on the screen selection menu, you need to change the setting using the menu customize function. Operate as follows:

- ◇ Press **MENU** (to switch to setting mode), and select the **Menu** tab > **Menu customize >**

#### Display menu

1. Select **INFORMATION > MODBUS MASTER**
2. Press the **View** soft key.

The screenshot displays the Modbus Master status screen. At the top, it shows the device ID 'AAA-1234-000573', the date and time '2006/01/17 17:28:26', and the 'DISP' button. Below this, communication parameters are listed: Read cycle (5s), Inter-block delay (Off), Time out (1s), Auto recovery (2min), and Retrials (1). A table follows with columns for No., Status, Comm. Data (First, Last), Slave Address, and Registers. The table contains three rows of data. A blue cursor is positioned on the first row. Annotations on the right side of the screen identify: 'Communication condition' (top right), 'Register number' (middle right), 'Address for a slave device' (middle right), 'DX channels' (middle right), 'Detail code' (bottom left), 'Status lamp' (bottom left), and 'Cursor to select a command (Used when resuming command transmission to a slave device using the front panel keys)' (bottom left).

| No. | Status   | Comm. Data | Slave Address | Registers |
|-----|----------|------------|---------------|-----------|
|     |          | First Last |               |           |
| 1   | R ● Good | C01 - C01  | 1             | 30001     |
| 2   | W ● None | 1 - 1      | 1             | 40001     |
| 3   | W ● None | 101 - 101  | 1             | 40003     |
| 4   |          |            |               |           |
| 5   |          |            |               |           |
| 6   |          |            |               |           |
| 7   |          |            |               |           |
| 8   |          |            |               |           |
| 9   |          |            |               |           |
| 10  |          |            |               |           |
| 11  |          |            |               |           |
| 12  |          |            |               |           |
| 13  |          |            |               |           |
| 14  |          |            |               |           |
| 15  |          |            |               |           |
| 16  |          |            |               |           |

## 2.6 Using the Modbus Master Function

---

- **Communication conditions**

The read cycle, Inter-block delay, Time out, Auto recovery, and Retrials settings are displayed.

- **Communication Status**

The communication status is displayed using the status lamp and the detail code.

| Status Lamp              | Detail Code | Meaning   |
|--------------------------|-------------|---|
| Green                    | Good        | Communication is operating normally.  |
| Yellow                   |             | Command is readying.  |
| Red                      |             | Communication is stopped.   |
| Common to yellow and red | None        | No response from the slave device.  |
|                          | Func        | The slave device cannot execute the command from the DX.                                      |
|                          | Regi        | The slave device does not have the specified register.  |
|                          | Err         | The response data from the slave device is broken (communication error).                      |
|                          | (Space)     | The detail code is not displayed until the status is confirmed when communication is started. |

### Resuming Command Transmission

You can use the front panel keys to resume command transmission to a slave device to which communication is stopped (red status lamp).

1. Using the up and down arrow keys, select the command corresponding to the slave device to which transmission will be resumed. The message "Push [right arrow] key to refresh" appears.
2. Press the right arrow key. The DX starts command transmission to the specified slave.

### Data When Communication Is Stopped and during Connection Retrials

For Modbus master, the communication input data and external input channel data are held at the previous values while the command is being retried.

If the command transmission stops such as due to a connection drop, the status turns red, and the communication input data and external input channel data are error data. On communication channels, "+OVER" or -OVER is displayed according to the DX settings. "\*\*\*\*\*" is displayed on external input channels.

### Data Dropout


Data drop occurs when the commands from 1 to 16 do not complete within the read cycle (see appendix 1). When a data dropout occurs, the communication input data is held at the previous value. A message indicating the data dropout is also displayed on the Modbus status display. If this happens, take measures such as making the read cycle longer or reducing the number of commands. Confirm that no data dropout occurs on the modbus status log screen.

## 2.7 Usage Example of the Modbus Function

Explains the setting example for both Modbus master and slave on DX1000s connected via the serial communication. This section refers to the DX1000 set to be a Modbus master as DX1000 master and the DX1000 set to be a Modbus slave as DX1000 slave.

### System Configuration and Actions

Uses the measurement channel, computation channel, and communication input data as described in the figure below. Assumes other conditions are set properly.

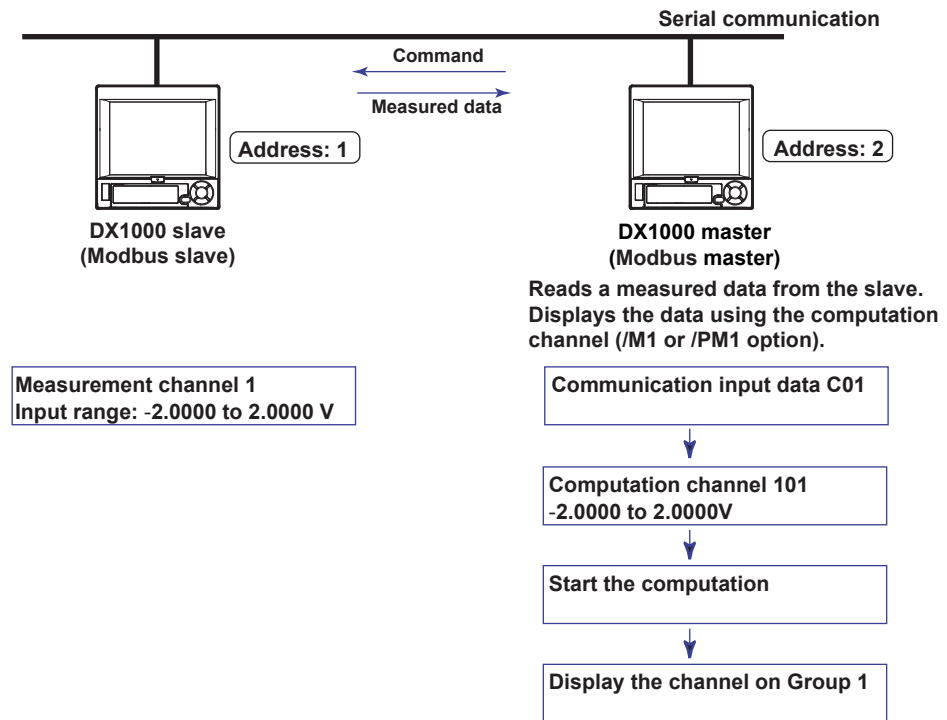

#### Action


- The DX1000 master reads the measured value of channel 1 on the DX1000 slave into the communication input data C01. C01 is displayed on a computation channel 101 by including the data in the equation. The computation channel 101 is assigned to Group1.
- The measured value of channel 1 on the DX1000 slave is transferred to the DX1000 master as an integer in the range of -20000 to 20000.
- The DX1000 master displays the read data as -2.0000 to 2.0000 V on the computation channel 101. The following conversion is applied.

**Value on the computation channel 101 of the DX master**  
**= Communication input data C01 x 0.0001**

### Settings on the DX1000 Slave (Modbus Slave)

#### Setting the Modbus Slave Function


- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Serial)** > **Basic settings**

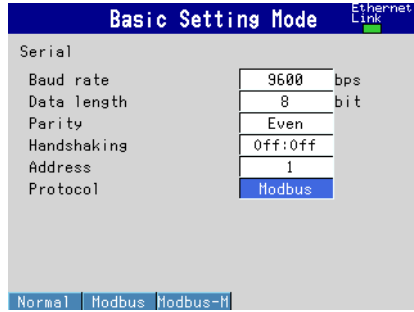

| Item     | Settings |
|----------|----------|
| Address  | 1        |
| Protocol | Modbus   |

#### Setting the Measurement Channel

- ◇ Press **MENU** (to switch to setting mode), and select the **Menu** tab > **Meas channel** > **Range, Alarm**

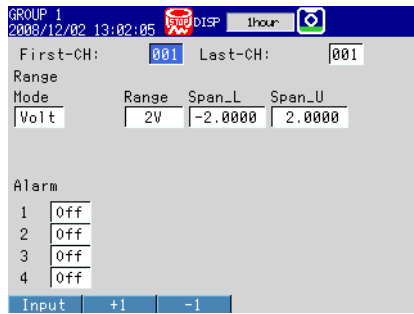

| Item              | Settings |
|-------------------|----------|
| First-CH, Last-CH | 1        |
| Mode              | Volt     |
| Range             | 2V       |
| Span_L            | -2.0000  |
| Span_U            | 2.0000   |




## Setting the DX1000 Master (Modbus Master)

Assumes the settings other than those below are left to default values.

### Setting the Modbus Master Function


- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Serial)** > **Basic settings**

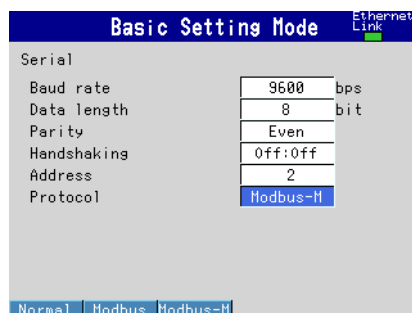

| Item     | Settings |
|----------|----------|
| Address  | 2        |
| Protocol | Modbus-M |

### Setting Command

- ◇ Press **MENU** (to switch to setting mode), hold down **FUNC** for 3 s (to switch to basic setting mode), and select the **Menu** tab > **Communication (Serial)** > **Modbus master** > **Command settings**

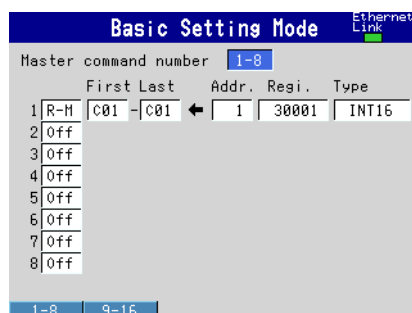

| Item           | Settings |
|----------------|----------|
| Command type   | R-M      |
| First and Last | C01      |
| Addr.          | 1        |
| Regi.          | 30001    |
| Type           | INT16    |

### Setting the Computation Channel

See "Usage Example of the Modbus Function" in section 1.11.

### Assigning the channel to a Group

See "Usage Example of the Modbus Function" in section 1.11.

### Starting the Computation

See "Usage Example of the Modbus Function" in section 1.11.


### Confirming the Communication Status

See "Usage Example of the Modbus Function" in section 1.11.


## 3.1 Command Syntax

### Command Syntax

The syntax of the setting/basic setting/output commands (see sections 3.4 to 3.9) of the DX is given below. ASCII codes (see appendix 1) are used for the character codes. For the syntax of the maintenance/test commands (see section 3.10) and instrument information output commands (see section 3.11), see the corresponding sections or the examples for each command.

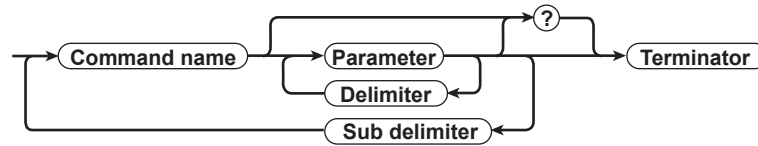

#### Command example

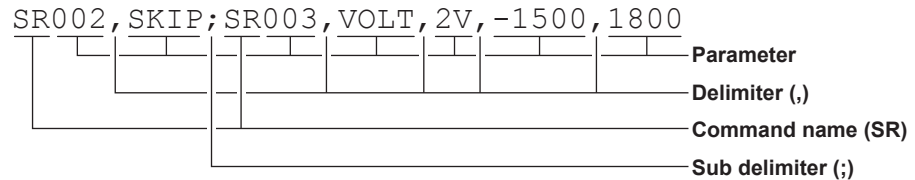

#### Command Name

Defined using two alphabet characters.

#### Parameters

- Command parameters.
- Set using alphabet characters or numeric values.
- Parameters are separated by delimiters (commas).
- All numeric values are specified using integers.
- When the parameter is a numeric value, the valid range of the value varies depending on the command.
- Spaces around the parameter are discarded. (However, spaces are valid for parameters (units) specified using an ASCII character string.) In the examples given in this manual, spaces are not used.
- You can omit the parameters that do not need to be changed from their current settings. However, delimiters cannot be omitted.

**Example** SR001,,2V<terminator>

- If multiple parameters are omitted and delimiters occur at the end of the command, those delimiters can be omitted.

**Example** SR001,VOLT,,, <terminator> → SR001,VOLT<terminator>

- The number of digits of the parameters below is fixed. If the number is exceeded when entering the command, a syntax error results.

- Date YY/MM/DD (8 characters)
  - YY: Enter the lower two digits of the year.
  - MM: Month
  - DD: Day
- Time HH:MM:SS (8 characters)
  - HH: Hour
  - MM: Minute
  - SS: Second
- Channel number: 3 characters
- Relay number: 3 characters

### Query

- A question mark is used to specify a query.
- By placing a query after a command or parameter, the setting information of the corresponding command can be queried. Some commands cannot execute queries. For the query syntax of each command, see sections 3.4 to 3.7.

**Example 1** SR[ p1]? SR? or SRp1? can be executed.

**Example 2** SA[ p1[,p2]]? SA?, SAp1?, and SAp1,p2? can be executed.

### Delimiter

- A comma is used as a delimiter.
- Parameters are separated by delimiters.

### Sub Delimiter

- A semicolon is used as a sub delimiter.
- By separating each command with a sub delimiter, up to 10 commands can be specified one after another. However, the following commands and queries cannot be specified one after another. Use them independently.
  - Output commands other than BO, CS, IF, or CB
  - YO command
  - Query

\* If there are consecutive sub delimiters, they are considered to be single. In addition, sub delimiters at the front and at the end are ignored.

**Example** ;SR001,VOLT;;;SR002,VOLT;<terminator> is taken to be  
SR001,VOLT;SR002,VOLT<terminator>.

### Terminator

Use either of the following two characters for the terminator.

- CR+LF (0DH 0AH in ASCII code)
- LF (0AH in ASCII code)

### Note

---

- Do not specify a channel or relay number that is not available on the DX. If you do, an error will occur.
  - The total data length from the first character to the terminator must be less than 2047 bytes.
  - Commands are not case sensitive (with the exception of user-specified character strings).
  - All the commands that are listed using sub delimiters are executed even if one of the commands is erroneous.
  - Spaces that are inserted before and after a parameter are ignored. However, if spaces are inserted before a command, after a sub delimiter, or after a query, an error occurs.
-

## Response

The DX returns a response (affirmative/negative response) to a command that is delimited by a single terminator.\* The controller should follow the one command to one response format. When the command-response rule is not followed, the operation is not guaranteed. For the response syntax, see section 4.1.

\* Commands dedicated to RS-422/485 (see section 3.9) and instrument information output commands (section 3.11) are exceptions.

## 3.2 A List of Commands

### DX Execution Modes

There are two execution modes on the DX. If you attempt to execute a command in a mode that is different from the specification, a syntax error occurs. Use the DS command to switch to the appropriate execution mode, and then execute the command. Query commands can be executed in either mode.

- **Basic setting mode**

Measurement and computation are stopped, and settings are changed in this mode.

- **Operation mode**

As a general rule, commands other than those for the basic setting mode described above are used in this mode.

### Administrator and User

The administrator and user specifications in the table indicate the user level that is specified using the login function for Ethernet communications. For details, see section 1.2.

"Yes" and "No" in the table indicate the following:

Yes: Command usable

No: Command not usable

## Setting Commands

### Note

If the multi batch function (/BT2 option) is enabled, you cannot use the SR, SO, SK, TJ, SW, TE, SJ, and ER commands unless all batch recording operations are stopped.

| Group   | Command Name | Function  | Execution Mode | Administrator | User | Page |
|---------|--------------|---|----------------|---------------|------|------|
| Setting | SR           | Sets an input range   | Operation mode | Yes           | No   | 3-12 |
|         | SO           | Sets a computing equation   | Operation mode | Yes           | No   | 3-13 |
|         | ER           | Sets the range of an external input channel                           | Operation mode | Yes           | No   | 3-13 |
|         | TJ           | Sets memory sampling  | Operation mode | Yes           | No   | 3-14 |
|         | SA           | Sets an alarm   | Operation mode | Yes           | No   | 3-14 |
|         | SW           | Sets the trend interval and auto save interval                        | Operation mode | Yes           | No   | 3-15 |
|         | TI           | Sets the circular display offset time                                 | Operation mode | Yes           | No   | 3-15 |
|         | TO           | Sets how the DX operates after one circular display cycle             | Operation mode | Yes           | No   | 3-15 |
|         | TW           | Sets the secondary trend interval                                     | Operation mode | Yes           | No   | 3-16 |
|         | TM           | Sets manual sampling  | Operation mode | Yes           | No   | 3-16 |
|         | TE           | Sets sampling conditions for event data                               | Operation mode | Yes           | No   | 3-16 |
|         | SZ           | Sets a zone   | Operation mode | Yes           | No   | 3-16 |
|         | SP           | Sets a partial expanded display                                       | Operation mode | Yes           | No   | 3-16 |
|         | ST           | Sets a tag  | Operation mode | Yes           | No   | 3-17 |
|         | SX           | Sets a display group (release number 2 or earlier)                    | Operation mode | Yes           | No   | 3-17 |
|         | SL           | Sets a trip line (release number 2 or earlier)                        | Operation mode | Yes           | No   | 3-17 |
|         | NX           | Sets a display group (release number 3 or later)                      | Operation mode | Yes           | No   | 3-18 |
|         | NL           | Sets a trip line (release number 3 or later)                          | Operation mode | Yes           | No   | 3-18 |
|         | SG           | Sets a message  | Operation mode | Yes           | No   | 3-18 |
|         | TH           | Sets the directory on the external storage medium for saving data     | Operation mode | Yes           | No   | 3-18 |
|         | TZ           | Sets a file header  | Operation mode | Yes           | No   | 3-18 |
|         | TF           | Sets a data file name   | Operation mode | Yes           | No   | 3-18 |
|         | SD           | Sets the date and time  | Operation mode | Yes           | No   | 3-19 |
|         | TD           | Sets daylight saving time   | Operation mode | Yes           | No   | 3-19 |
|         | TT           | Sets the trend display  | Operation mode | Yes           | No   | 3-19 |
|         | SE           | Sets the line width and the number of grids to use on the trend graph | Operation mode | Yes           | No   | 3-19 |
|         | TB           | Sets the bar graph display  | Operation mode | Yes           | No   | 3-19 |
|         | SB           | Sets the bar graph for a channel                                      | Operation mode | Yes           | No   | 3-19 |
|         | TN           | Sets a scale  | Operation mode | Yes           | No   | 3-20 |
|         | SV           | Sets a measurement channel's moving average                           | Operation mode | Yes           | No   | 3-20 |

### 3.2 A List of Commands

| Group | Command Name | Function   | Execution Mode | Administrator | User | Page |
|-------|--------------|--|----------------|---------------|------|------|
|       | SC           | Sets a channel display color                               | Operation mode | Yes           | No   | 3-20 |
|       | TA           | Sets an alarm point mark                                   | Operation mode | Yes           | No   | 3-20 |
|       | TG           | Sets a color scale band                                    | Operation mode | Yes           | No   | 3-20 |
|       | SQ           | Sets the LCD brightness and the screen backlight saver     | Operation mode | Yes           | No   | 3-20 |
|       | TC           | Sets the background color                                  | Operation mode | Yes           | No   | 3-21 |
|       | TP           | Sets automatic display group switching                     | Operation mode | Yes           | No   | 3-21 |
|       | NF           | Sets the favorite key operation                            | Operation mode | Yes           | No   | 3-21 |
|       | TR           | Sets the automatic monitor return function                 | Operation mode | Yes           | No   | 3-21 |
|       | TQ           | Sets a timer   | Operation mode | Yes           | No   | 3-21 |
|       | TK           | Sets a match time timer                                    | Operation mode | Yes           | No   | 3-21 |
|       | TU           | Sets an event action                                       | Operation mode | Yes           | No   | 3-22 |
|       | SK           | Sets a constant  | Operation mode | Yes           | No   | 3-23 |
|       | SI           | Sets the rolling average function of a computation channel | Operation mode | Yes           | No   | 3-23 |
|       | SJ           | Sets a TLOG timer  | Operation mode | Yes           | No   | 3-24 |
|       | TX           | Sets the ancillary operation of the start key              | Operation mode | Yes           | No   | 3-24 |
|       | BH           | Sets a batch text field                                    | Operation mode | Yes           | No   | 3-24 |
|       | EH           | Sets calibration correction                                | Operation mode | Yes           | No   | 3-24 |
|       | BD           | Sets an alarm delay  | Operation mode | Yes           | No   | 3-25 |
|       | NC           | Sets a comment text field                                  | Operation mode | Yes           | No   | 3-25 |
|       | NB           | Sets a comment text block                                  | Operation mode | Yes           | No   | 3-25 |
|       | NW           | Sets an annunciator display                                | Operation mode | Yes           | No   | 3-25 |
|       | NG           | Sets a Web report layout                                   | Operation mode | Yes           | No   | 3-25 |
|       | NH           | Sets Web report layout details                             | Operation mode | Yes           | No   | 3-25 |
|       | FR           | Sets the interval for acquiring data to the FIFO buffer    | Operation mode | Yes           | No   | 3-26 |
|       | SM           | Sets the custom menu                                       | Operation mode | Yes           | No   | 3-26 |
|       | SY           | Sets a four panel display                                  | Operation mode | Yes           | No   | 3-28 |

| Group   | Command Name | Function  | Execution Mode | Administrator | User | Page |
|---------|--------------|---|----------------|---------------|------|------|
| Control |              |   |                |               |      |      |
|         | BT           | Sets a batch name   | Operation mode | Yes           | No   | 3-29 |
|         | BU           | Sets a batch comment  | Operation mode | Yes           | No   | 3-29 |
|         | UD           | Switches the screen   | Operation mode | Yes           | No   | 3-29 |
|         | PS           | Starts or stops measurement   | Operation mode | Yes           | No   | 3-31 |
|         | AK           | Clears alarm output (acknowledge alarms)  | Operation mode | Yes           | No   | 3-31 |
|         | EV           | Executes manual sample, generates a manual trigger, takes a snapshot, or causes a timeout | Operation mode | Yes           | No   | 3-31 |
|         | CL           | Executes manual SNTP  | Operation mode | Yes           | No   | 3-31 |
|         | CV           | Switches between normal and secondary trend interval                                      | Operation mode | Yes           | No   | 3-31 |
|         | MS           | Writes a message (display and write)  | Operation mode | Yes           | No   | 3-31 |
|         | BJ           | Writes a free message   | Operation mode | Yes           | No   | 3-32 |
|         | EJ           | Changes the login password  | Operation mode | Yes           | Yes  | 3-32 |
|         | TL           | Starts, stops, resets computation (MATH) or clears the computation dropout status display | Operation mode | Yes           | No   | 3-32 |
|         | DS           | Switches the execution mode between operation and setting                                 | All modes      | Yes           | No   | 3-32 |
|         | LO           | Loads setup data for setting mode   | Operation mode | Yes           | No   | 3-32 |
|         | LI           | Saves setup data  | Operation mode | Yes           | No   | 3-33 |
|         | CM           | Sets communication input data   | Operation mode | Yes           | No   | 3-33 |
|         | CE           | Sets communication input of an external input channel                                     | Operation mode | Yes           | No   | 3-33 |
|         | EM           | Starts or stops the e-mail transmission function  | Operation mode | Yes           | No   | 3-33 |
|         | CU           | Recovers Modbus manually  | Operation mode | Yes           | No   | 3-33 |
|         | BV           | Enters a string (can only be used during serial communications)                           | All modes      | Yes           | No   | 3-33 |
|         | KE           | Key operation command   | Operation mode | Yes           | No   | 3-33 |
|         | IR           | Resets a relative timer   | Operation mode | Yes           | No   | 3-34 |
|         | MA           | Resets a match time timer   | Operation mode | Yes           | No   | 3-34 |
|         | CW           | Sets an event switch  | Operation mode | Yes           | No   | 3-34 |
|         | LR           | Loads custom display screens  | Operation mode | Yes           | No   | 3-34 |
|         | LW           | Saves custom display screens  | Operation mode | Yes           | No   | 3-34 |

### Basic Setting Commands

- In order to activate the settings that are changed using the basic setting commands, the settings must be saved using the YE or XE command. Make sure to save the settings before changing from the basic setting mode to the operation mode. Otherwise, new settings will not be activated.
- The settings that are returned in response to a query in basic setting mode contain the new settings even if they are not saved. However, the new settings are not activated unless they are saved. If the settings are cleared or if you change from basic setting mode to operation mode before saving the settings, the settings that are returned in the response to a query contain the settings that were used before they were changed.

**Note**

- The settings that are changed using the YA, YK, RU, YQ, YS, YB, YD, WS, WW, and WQ commands are activated after saving the new settings using the XE command and restarting the DX.
- When you execute the YE or YO command, communication is disconnected. If you include YE or YO in a command sequence, the commands that come after it will be invalid.

| Group   | Command Name | Function  | Execution Mode     | Administrator | User | Page |
|---------|--------------|---|--------------------|---------------|------|------|
| Setting |              |   |                    |               |      |      |
|         | WU           | Sets the environment                                  | Basic setting mode | Yes           | No   | 3-35 |
|         | WO           | Sets alarm and DO settings                            | Basic setting mode | Yes           | No   | 3-37 |
|         | WH           | Sets alarm hysteresis                                 | Basic setting mode | Yes           | No   | 3-38 |
|         | XV           | Sets the scan interval and A/D integral time          | Basic setting mode | Yes           | No   | 3-38 |
|         | XB           | Sets burnout detection                                | Basic setting mode | Yes           | No   | 3-38 |
|         | XJ           | Sets RJC  | Basic setting mode | Yes           | No   | 3-38 |
|         | XM           | Sets memory sampling conditions                       | Basic setting mode | Yes           | No   | 3-39 |
|         | XT           | Sets the temperature unit                             | Basic setting mode | Yes           | No   | 3-39 |
|         | RF           | Sets key lock   | Basic setting mode | Yes           | No   | 3-39 |
|         | RN           | Sets basic key login                                  | Basic setting mode | Yes           | No   | 3-39 |
|         | RP           | Sets user limitations                                 | Basic setting mode | Yes           | No   | 3-39 |
|         | RO           | Sets the type of report and when to create reports    | Basic setting mode | Yes           | No   | 3-39 |
|         | RM           | Sets a report channel                                 | Basic setting mode | Yes           | No   | 3-40 |
|         | XG           | Sets the time zone                                    | Basic setting mode | Yes           | No   | 3-40 |
|         | XN           | Sets the date format                                  | Basic setting mode | Yes           | No   | 3-41 |
|         | YB           | Sets host information                                 | Basic setting mode | Yes           | No   | 3-41 |
|         | YD           | Sets network parameters                               | Basic setting mode | Yes           | No   | 3-41 |
|         | YA           | Sets the IP address, subnet mask, and default gateway | Basic setting mode | Yes           | No   | 3-41 |
|         | YK           | Sets keepalive  | Basic setting mode | Yes           | No   | 3-41 |
|         | RU           | Sets DNS parameters                                   | Basic setting mode | Yes           | No   | 3-41 |
|         | WS           | Sets a server   | Basic setting mode | Yes           | No   | 3-41 |
|         | WW           | Sets Webpage parameters                               | Basic setting mode | Yes           | No   | 3-42 |
|         | YQ           | Sets communication timeout                            | Basic setting mode | Yes           | No   | 3-42 |
|         | YT           | Sets FTP transfer timing                              | Basic setting mode | Yes           | No   | 3-42 |
|         | YU           | Sets what kind of information to send using e-mail    | Basic setting mode | Yes           | No   | 3-42 |
|         | YV           | Sets an e-mail recipient address                      | Basic setting mode | Yes           | No   | 3-43 |
|         | YW           | Sets the e-mail sender address                        | Basic setting mode | Yes           | No   | 3-43 |
|         | YX           | Sets the e-mail SNTP server name                      | Basic setting mode | Yes           | No   | 3-43 |
|         | YJ           | Sets the Modbus client's destination server           | Basic setting mode | Yes           | No   | 3-43 |
|         | YP           | Sets basic Modbus client settings                     | Basic setting mode | Yes           | No   | 3-43 |
|         | YR           | Sets the Modbus client's transmit command             | Basic setting mode | Yes           | No   | 3-44 |
|         | WB           | Sets SNTP client parameters                           | Basic setting mode | Yes           | No   | 3-44 |
|         | WC           | Sets the SNTP operation when memory start is executed | Basic setting mode | Yes           | No   | 3-45 |
|         | YS           | Sets the serial interface                             | Basic setting mode | Yes           | No   | 3-45 |

| Group               | Command Name | Function   | Execution Mode     | Administrator | User | Page |
|---------------------|--------------|--|--------------------|---------------|------|------|
| Setting (continued) |              |  |                    |               |      |      |
|                     | YL           | Sets the operation of the Modbus master function         | Basic setting mode | Yes           | No   | 3-45 |
|                     | YM           | Sets a transmit command of the Modbus master function    | Basic setting mode | Yes           | No   | 3-45 |
|                     | WR           | Sets the instrument information output                   | Basic setting mode | Yes           | No   | 3-46 |
|                     | WF           | Sets the Modbus connection limitation                    | Basic setting mode | Yes           | No   | 3-46 |
|                     | WG           | Sets an IP address that is allowed to connect via Modbus | Basic setting mode | Yes           | No   | 3-46 |
|                     | WJ           | Sets the FTP transfer wait time                          | Basic setting mode | Yes           | No   | 3-46 |
|                     | WQ           | Sets PROFIBUS-DP   | Basic setting mode | Yes           | No   | 3-47 |
|                     | XE           | Activates basic settings                                 | Basic setting mode | Yes           | No   | 3-47 |
|                     | YE           | Activates basic settings (cold reset)                    | Basic setting mode | Yes           | No   | 3-47 |

| Group   | Command Name | Function   | Execution Mode     | Administrator | User | Page |
|---------|--------------|--|--------------------|---------------|------|------|
| Control |              |  |                    |               |      |      |
|         | YO           | Loads a setup file for basic setting mode                    | Basic setting mode | Yes           | No   | 3-33 |
|         | YC           | Clears measured and computed data and initializes setup data | Basic setting mode | Yes           | No   | 3-34 |

## Output Commands

### Note

Output commands except BO, CS, and IF cannot be placed in a command sequence.

| Group                                       | Command Name | Function   | Execution Mode | Administrator | User | Page |
|---|--------------|--|----------------|---------------|------|------|
| Control                                     |              |  |                |               |      |      |
|   | BO           | Sets the byte output order   | All modes      | Yes           | Yes  | 3-47 |
|   | CS           | Sets the check sum (can only be used during serial communications)                 | All modes      | Yes           | Yes  | 3-47 |
|   | CB           | Sets the data output format  | All modes      | Yes           | Yes  | 3-47 |
|   | IF           | Sets status filters  | All modes      | Yes           | Yes  | 3-47 |
|   | CC           | Disconnects the Ethernet connection (can only be used for Ethernet communications) | All modes      | Yes           | Yes  | 3-48 |
| Setup, measurement, and control data output |              |  |                |               |      |      |
|   | FC           | Outputs screen image data  | All modes      | Yes           | Yes  | 3-48 |
|   | FE           | Outputs setup data   | All modes      | Yes           | Yes  | 3-48 |
|   | FD           | Outputs the most recent measured/computed data                                     | Operation mode | Yes           | Yes  | 3-48 |
|   | FF           | Outputs FIFO data  | Operation mode | Yes           | Yes  | 3-49 |
|   | FL           | Outputs a log, alarm summary, or message summary                                   | All modes      | Yes           | Yes  | 3-49 |
|   | IS           | Outputs status information   | All modes      | Yes           | Yes  | 3-50 |
|   | FU           | Outputs user levels  | All modes      | Yes           | Yes  | 3-50 |
|   | FA           | Outputs internal DX information  | All modes      | Yes           | Yes  | 3-50 |
|   | ME           | Outputs data stored on the external storage medium and internal memory             | Operation mode | Yes           | No   | 3-50 |
|   | MO           | Outputs the data stored in the internal memory.                                    | Operation mode | Yes           | No   | 3-51 |
| Dedicated commands for RS-422/485           |              |  |                |               |      |      |
|   | Esc O        | Opens an instrument  | All modes      | Yes           | Yes  | 3-51 |
|   | Esc C        | Closes an instrument   | All modes      | Yes           | Yes  | 3-51 |
| Common commands among instruments           |              |  |                |               |      |      |
|   | *I           | Outputs instrument information   | All modes      | Yes           | Yes  | 3-52 |



### 3.2 A List of Commands

---

#### Maintenance/Test Commands (Available when using the maintenance/test server function via Ethernet communications)

| Command Name | Function   | Administrator | User | Page |
|--------------|--|---------------|------|------|
| close        | Closes another device's connection                             | Yes           | No   | 3-52 |
| con          | Outputs connection information                                 | Yes           | Yes  | 3-52 |
| eth          | Outputs Ethernet statistics                                    | Yes           | Yes  | 3-52 |
| help         | Outputs help   | Yes           | Yes  | 3-53 |
| net          | Outputs network statistics                                     | Yes           | Yes  | 3-53 |
| quit         | Closes the connection to the instrument that you are operating | Yes           | Yes  | 3-53 |

#### Instrument Information Output Commands (Available when using the instrument information server function via Ethernet communications)

| Parameter Name | Function                  | Page |
|----------------|---------------------------|------|
| serial         | Outputs the serial number | 3-54 |
| host           | Outputs the host name     | 3-54 |
| ip             | Outputs the IP address    | 3-54 |

## 3.3 Setup Parameters

The measurement range and setup range of parameters used in a command vary depending on the combination of the command, range, and options.

### Parameter Input Example of Measurement Range

The span upper and lower limit parameters of the SR command (input range setting command) requires all digits including those to the right of the decimal to be entered. For example, if you want to set the upper limit to 1.0000 V when the measurement range is -2.0000 V to 2.0000 V, the value is 10000. If you want to set the limit to 0.5000 V, the value is 5000.

The table below gives configuration examples.

| Measurement Range | Input Type Parameter | Selectable Range of the Measurement Range | Specified Range       | Parameter       |
|-------------------|----------------------|---|-----------------------|-----------------|
| VOLT              | 20mV                 | -20.000mV to 20.000mV                     | -10.000mV to 20.000mV | -10000 to 20000 |
| /SQRT             | 2V                   | -2.0000V to 2.0000V                       | -2.0000V to 0.5000V   | -20000 to 5000  |
| TC                | R                    | 0.0 to 1760.0                             | 0.0 to 400.0          | 0 to 4000       |
|                   | K                    | -200.0 to 1370.0                          | -200.0 to 1370.0      | -2000 to 13700  |
| RTD               | Pt100                | -200.0 to 600.0                           | -10.0 to 500.0        | -100 to 5000    |
| DI                | LEVEL                | 0 to 1                                    | 0 to 1                | 0 to 1          |

### 3.3 Setup Parameters

#### Measurement Range Parameters

The table below shows the relationship between the input types and range parameters. For a description of the selectable range, see the *DX1000 or DX2000 User's Manual*.

| Input Type           | Input Type Parameter | Range             | Range Parameter | Required Option |
|----------------------|----------------------|-------------------|-----------------|-----------------|
| <b>DC Voltage</b>    | VOLT                 | 20 mV             | 20MV            |                 |
|                      |                      | 60 mV             | 60MV            |                 |
|                      |                      | 200 mV            | 200MV           |                 |
|                      |                      | 2 V               | 2V              |                 |
|                      |                      | 6 V               | 6V              |                 |
|                      |                      | 20 V              | 20V             |                 |
|                      |                      | 50 V              | 50V             |                 |
| <b>Thermocouple</b>  | TC                   | R                 | R               |                 |
|                      |                      | S                 | S               |                 |
|                      |                      | B                 | B               |                 |
|                      |                      | K                 | K               |                 |
|                      |                      | E                 | E               |                 |
|                      |                      | J                 | J               |                 |
|                      |                      | T                 | T               |                 |
|                      |                      | N                 | N               |                 |
|                      |                      | W                 | W               |                 |
|                      |                      | L                 | L               |                 |
|                      |                      | U                 | U               |                 |
|                      |                      | Kp vs Au7Fe       | KP              | /N3             |
|                      |                      | PLATINEL          | PLATI           | /N3             |
|                      |                      | PR40-20           | PR              | /N3             |
|                      |                      | NiNiMo            | NIMO            | /N3             |
|                      |                      | WRe               | WRE             |                 |
| W/WRe26              | W/WRE                | /N3               |                 |                 |
| TypeN (AWG14)        | N2                   | /N3               |                 |                 |
| XK GOST              | XK                   | /N3               |                 |                 |
| <b>RTD</b>           | RTD                  | Pt                | PT              |                 |
|                      |                      | JPt               | JPT             |                 |
|                      |                      | Pt50              | PT50            | /N3             |
|                      |                      | Ni100 (SAMA)      | NI1             | /N3             |
|                      |                      | Ni100 (DIN)       | NI2             | /N3             |
|                      |                      | Ni120             | NI3             | /N3             |
|                      |                      | J263*B            | J263            | /N3             |
|                      |                      | Cu53              | CU53            | /N3             |
|                      |                      | Cu100             | CU100           | /N3             |
|                      |                      | Cu10:GE           | CU1             | /N1             |
|                      |                      | Cu10:L&N          | CU2             | /N1             |
|                      |                      | Cu10:WEED         | CU3             | /N1             |
|                      |                      | Cu10:BAILEY       | CU4             | /N1             |
|                      |                      | Cu10:0.000392at20 | CU5             | /N1             |
|                      |                      | Cu10:0.000393at20 | CU6             | /N1             |
|                      |                      | Cu25:0.00425at0   | CU25            | /N1             |
|                      |                      | Pt25              | PT25            | /N3             |
|                      |                      | Pt100 GOST        | Pt100G          | /N3             |
|                      |                      | Cu100 GOST        | Cu100G          | /N3             |
|                      |                      | Cu50 GOST         | Cu50G           | /N3             |
| Cu10 GOST            | Cu10G                | /N3               |                 |                 |
| Pt46 GOST            | Pt46G                | /N3               |                 |                 |
| <b>Contact input</b> | DI                   | Level             | LEVEL           |                 |
|                      |                      | Cont              | CONT            |                 |
| <b>1-5V voltage</b>  | 1-5V                 | 1-5V              | 1-5V            |                 |

## Channel Number and Other Notations and Valid Ranges

| Type                               | Model         | Notation and Valid Range  | Notes                                    |
|------------------------------------|---------------|---|--|
| Measurement channels               | DX1000        | 001 to 012  | Varies depending on the number of inputs |
|                                    | DX2000        | 001 to 048  | Varies depending on the number of inputs |
| Computation channels               | DX1000        | 101 to 112  | High-speed input model, /M1, /PM1        |
|                                    |               | 101 to 124  | Medium-speed input model, /M1, /PM1      |
|                                    | DX2000        | 101 to 112  | High-speed input model, /M1, /PM1        |
|                                    |               | 101 to 160  | Medium-speed input model, /M1, /PM1      |
| External input channels            | DX1000        | ---   | No setting                               |
|                                    | DX2000        | 201 to 440  | /MC1                                     |
| Manual sample                      | DX1000        | ---   | No setting                               |
|                                    | DX2000        | 001 to 120  | /MC1                                     |
| Report channels                    | DX1000        | R01 to R12  | High-speed input model, /M1, /PM1        |
|                                    |               | R01 to R24  | Medium-speed input model, /M1, /PM1      |
|                                    | DX2000        | R01 to R12  | High-speed input model, /M1, /PM1        |
|                                    |               | R01 to R60  | Medium-speed input model, /M1, /PM1      |
| Internal switches                  | DX1000/DX2000 | S01 to S30  |  |
| Output relays                      | DX1000        | I01 to I06  | Varies depending on the /A# option       |
|                                    | DX2000        | I01 to I06, I11 to I16,<br>I21 to I26, I31 to I36   |  |
| Constants                          | DX1000/DX2000 | K01 to K60  | /M1, /PM1                                |
| Communication input data           | DX1000        | C01 to C24  | /M1, /PM1                                |
|                                    | DX2000        | C01 to C60  |  |
| Display groups                     | DX1000        | 1 to 10   |  |
|                                    |               | 1 to 6 when using multi batch (/BT2)  | /BT2                                     |
|                                    | DX2000        | 1 to 36   |  |
|                                    |               | 1 to 6 when using the multi batch function (/BT2 option) using standard memory (internal memory size code -1) | /BT2                                     |
|                                    |               | 1 to 12 when using the multi batch function (/BT2 option) using large memory (internal memory size code -2)   |  |
| Remote control terminals           | DX1000/DX2000 | D01 to D08  | /R1, /PM1                                |
| Pulse inputs                       | DX1000/DX2000 | P01 to P08,<br>Q01 to Q08   | /PM1                                     |
| Flags                              | DX1000/DX2000 | F01 to F08  | /M1, /PM1                                |
| Batch groups                       | DX1000/DX2000 | 1 to (the number of batch groups specified using the WU command)  | /BT2                                     |
| Timers                             | DX1000/DX2000 | 1 to 4  | /M1, /PM1                                |
|                                    |               | 1 to 12 Models with the /BT2 multi batch option   | /M1, /PM1, /BT2                          |
| Match time timers                  | DX1000/DX2000 | 1 to 4  | /M1, /PM1                                |
|                                    |               | 1 to 12 Models with the /BT2 multi batch option   | /M1, /PM1, /BT2                          |
| Comment text fields                | DX1000        | 1 to 100  |  |
|                                    | DX2000        | 1 to 200  |  |
| Comment text blocks                | DX1000        | 1 to 50   |  |
|                                    | DX2000        | 1 to 100  |  |
| Report groups (integral bar graph) | DX1000        | 1 to 4  | /M1, /PM1                                |
|                                    | DX2000        | 1 to 6  |  |
| Annunciator display windows        | DX1000        | 1 to 24   |  |
|                                    | DX2000        | 1 to 80   |  |

High-speed input models DX1002, DX1004, DX1002N, DX1004N, DX2004, DX2008  
 Medium-speed input models DX1006, DX1012, DX1006N, DX1012N  
 DX2010, DX2020, DX2030, DX2040, DX2048  
 Multi batch is an option (/BT2 option) for DXs with release number 3 or later.

## 3.4 Setting Commands (Setting)

### SR Sets an input range

#### When Setting Channels to Skip

**Syntax** SR p1,p2<terminator>  
 p1 Measurement channel number  
 p2 Setting type (SKIP)

**Query** SR[p1]?

**Example** Skip channel 001.  
 SR001,SKIP

**Description** • You cannot use this command while recording (memory sampling) or computation is in progress. When using the /BT2 multi batch option, you cannot use this command if any of the batch groups is recording (memory sampling).

- Channels set to SKIP are not measured.
- Set p1 by referring to the table in section 3.3.

#### When Setting the Channels to Voltage, TC, RTD, or ON/OFF Input

**Syntax** SR p1,p2,p3,p4,p5<terminator>  
 p1 Measurement channel number  
 p2 Input type  
     VOLT DC voltage  
     TC Thermocouple  
     RTD Resistance temperature detector  
     DI ON/OFF input  
 p3 Measurement range  
 p4 Span lower limit  
 p5 Span upper limit

**Query** SR[p1]?

**Example** Set the channel 001 input type to TC type R, the span lower limit to 0°C, and the span upper limit to 1760.0°C.  
 SR001,TC,R,0,17600

**Description** • You cannot use this command while recording (memory sampling) or computation is in progress. When using the /BT2 multi batch option, you cannot use this command if any of the batch groups is recording (memory sampling).

- Set p1 and p3 by referring to the table in section 3.3.
- For parameters p4 and p5, enter values with five digits or less excluding the decimal point.

#### When Computing the Difference between Channels

**Syntax** SR p1,p2,p3,p4,p5,p6,p7<terminator>  
 p1 Measurement channel number  
 p2 Setting type (DELTA)  
 p3 Input type  
     VOLT DC voltage  
     TC Thermocouple  
     RTD Resistance temperature detector  
     DI ON/OFF input

p4 Measurement range  
 p5 Span lower limit  
 p6 Span upper limit  
 p7 Reference channel number (measurement channel number)

**Query** SR[p1]?

**Example** Set the channel 010 setting type to differential computation between channels with the reference channel set to 001, and set the input type to TC. Set the measurement range to R. Set the span lower limit to 10.0°C and span upper limit to 100.0°C.  
 SR010,DELTA,TC,R,100,1000,001

**Description** • You cannot use this command while recording (memory sampling) or computation is in progress. When using the /BT2 multi batch option, you cannot use this command if any of the batch groups is recording (memory sampling).

- Set p1 and p4 by referring to the table in section 3.3.
- For parameters p5 and p6, enter values with five digits or less excluding the decimal point.

#### When Setting Channels to Scaling

**Syntax** SR p1,p2,p3,p4,p5,p6,p7,p8,p9,p10<terminator>  
 p1 Measurement channel number  
 p2 Setting type (SCALE)  
 p3 Input type  
     VOLT DC voltage  
     TC Thermocouple  
     RTD Resistance temperature detector  
     DI ON/OFF input  
 p4 Measurement range  
 p5 Span lower limit  
 p6 Span upper limit  
 p7 Scaling lower limit (-30000 to 30000)  
 p8 Scaling upper limit (-30000 to 30000)  
 p9 Scaling decimal place (0 to 4)  
 p10 Unit (up to 6 characters)

**Query** SR[p1]?

**Example** Convert the DC voltage measured on channel 002 to DC current. Set the measurement range to 6 V, the span lower limit to 1 V, the span upper limit to 5 V, the scaling lower limit to 1.00 A, and the scaling upper limit to 5.00 A.  
 SR002,SCALE,VOLT,6V,1000,5000,100,500,2,A

**Description** • You cannot use this command while recording (memory sampling) or computation is in progress. When using the /BT2 multi batch option, you cannot use this command if any of the batch groups is recording (memory sampling).

- Set p1 and p4 by referring to the table in section 3.3.
- For parameters p5 and p6, enter values with

- five digits or less excluding the decimal point.
- For parameters p7, p8, and p9, either set all three parameters or omit all three parameters.

### When Setting Channels to Square Root

#### Computation

**Syntax** SR p1,p2,p3,p4,p5,p6,p7,p8,p9,p10,p11<terminator>  
 p1 Measurement channel number  
 p2 Setting type (SQRT)  
 p3 Measurement range  
 p4 Span lower limit  
 p5 Span upper limit  
 p6 Scaling lower limit (-30000 to 30000)  
 p7 Scaling upper limit (-30000 to 30000)  
 p8 Scaling decimal place (0 to 4)  
 p9 Unit (up to 6 characters)  
 p10 Low-cut function (OFF, ON)  
 p11 Low-cut point (0 to 50)

**Query** SR[p1]?

**Example** Convert the DC voltage measured on channel 001 to an amount of flow using the square root computation. Set the measurement range to 6 V, the span lower limit to 1 V, the span upper limit to 5 V, the scaling lower limit to 10.0 m<sup>3</sup>/s, and the scaling upper limit to 100.0 m<sup>3</sup>/s.  
 SR001,SQRT,6V,1000,5000,100,1000,1,m3/s

- Description**
- You cannot use this command while recording (memory sampling) or computation is in progress. When using the /BT2 multi batch option, you cannot use this command if any of the batch groups is recording (memory sampling).
  - Set p1 and p3 by referring to the table in section 3.3.
  - For parameters p4 and p5, enter values with five digits or less excluding the decimal point.
  - For parameters p6, p7, and p8, either set all three parameters or omit all three parameters.

### For 1-5V DC Voltage Input

**Syntax** SR p1,p2,p3,p4,p5,p6,p7,p8,p9,p10<terminator>  
 p1 Measurement channel number  
 p2 Input type (1-5V)  
 p3 Measurement range (1-5V)  
 p4 Span lower limit (800 to 5200)  
 p5 Span upper limit (800 to 5200)  
 p6 Scaling lower limit (-30000 to 30000)  
 p7 Scaling upper limit (-30000 to 30000)  
 p8 Scaling decimal place (0 to 4)  
 p9 Unit (up to 6 characters)  
 p10 Low-cut function (ON, OFF)

**Query** SR[p1]?

**Example** Set the channel 005 input type to 1-5V, the span lower limit to 1 V, the span upper limit to 5 V, and turn the 1-5V low-cut function ON.  
 SR005,1-5V,1-5V,1000,5000,,,,,ON

- Description**
- You cannot use this command while recording (memory sampling) or computation is in progress. When using the /BT2 multi batch option, you cannot use this command if any of the batch groups is recording (memory sampling).
  - Set p1 by referring to the table in section 3.3.
  - For parameters p4 and p5, enter values with four digits or less excluding the decimal point.
  - For parameters p6, p7, and p8, either set all three parameters or omit all three parameters.

### SO Sets a computing equation

**Syntax** SO p1,p2,p3,p4,p5,p6,p7<terminator>  
 p1 Computation channel number  
 p2 Computation (ON, OFF)  
 p3 Computing equation (up to 120 characters)  
 p4 Span lower limit (-9999999 to 99999999)  
 p5 Span upper limit (-9999999 to 99999999)  
 p6 Span decimal place (0 to 4)  
 p7 Unit (up to 6 characters)

**Query** SO[p1]?

**Example** Compute the sum of channels 001 and 002 using channel 106. Set the span lower limit to -10.0000, the span upper limit to 15.0000, and the unit to V.  
 SO106,ON,001+002,-100000,150000,4,V

- Description**
- You can use this command on models with the /M1 or /PM1 math option.
  - You cannot use this command while recording (memory sampling) or computation is in progress. When using the /BT2 multi batch option, you cannot use this command if any of the batch groups is recording (memory sampling).
  - For details on computing equations, see the *DX1000/DX2000 User's Manual*.
  - Set p1 by referring to the table in section 3.3.
  - For parameters p4 and p5, enter values with seven digits or less, excluding the decimal, for negative numbers and with eight digits or less for positive numbers.
  - For parameters p4, p5, and p6, either set all three parameters or omit all three parameters.

### ER Sets the range of an external input channel

**Syntax** ER p1,p2,p3,p4,p5,p6<terminator>  
 p1 External input channel number  
 p2 External input channel (ON, OFF)  
 p3 Span lower limit (-30000 to 30000)  
 p4 Span upper limit (-30000 to 30000)  
 p5 Decimal place (0 to 4)  
 p6 Unit (up to 6 characters)

**Query** ER[p1]?

### 3.4 Setting Commands (Setting)

**Example** Set the external input channel 201 span to -150.00 to 150.00.  
`201, ON, -15000, 15000, 2`

**Description** • You can use this command on models with the /MC1 external input channel option.  
 • You cannot use this command while recording (memory sampling) in progress. When using the /BT2 multi batch option, you cannot use this command if any of the batch groups is recording (memory sampling).

#### **TJ** Sets memory sampling

**Syntax** `TJ p1, p2<terminator>`  
 p1 Measurement, computation, or external input channel number  
 p2 Memory sampling (OFF, ON)

**Query** `TJ[p1]?`

**Example** Perform memory sampling on channel 002.  
`TJ002, ON`

**Description** • You can specify computation channels on models with the /M1 or /PM1 math option. You can specify external input channels on models with the /MC1 external input channel option.  
 • You cannot use this command while recording (memory sampling) or computation is in progress. When using the /BT2 multi batch option, you cannot use this command if any of the batch groups is recording (memory sampling).

#### **SA** Sets an alarm

##### When Not Using Alarms

**Syntax** `SA p1, p2, p3<terminator>`  
 p1 Measurement, computation, or external input channel number  
 p2 Alarm number (1 to 4)  
 p3 Alarm on/off (OFF)

**Query** `SA[p1[, p2]]?`

**Example** Turn Off alarm number 1 of channel 010.  
`SA010, 1, OFF`

**Description** You can specify computation channels on models with the /M1 or /PM1 math option. You can specify external input channels on models with the /MC1 external input channel option.

##### When Using Alarms

**Syntax** `SA p1, p2, p3, p4, p5, p6, p7, p8 <terminator>`  
 p1 Measurement, computation, or external input channel number  
 p2 Alarm number (1 to 4)  
 p3 Alarm on/off (ON)  
 p4 Alarm type  
 H High limit alarm  
 L Low limit alarm  
 h Difference high limit alarm  
 l Difference low limit alarm

R High limit on rate-of-change alarm  
 r Low limit on rate-of-change alarm  
 T Delay high limit alarm  
 t Delay low limit alarm  
 (Characters are case-sensitive.)

p5 Alarm value

p6 Relay setting

ON Relay setting on  
 OFF Relay setting off

p7 Relay number when p6 is set to ON  
 Space when p6 is set to OFF

p8 Detection of alarm (ON, OFF)

**Query** `SA[p1[, p2]]?`

**Example** Set a high limit alarm (alarm value = 1000) on channel 002 alarm number 1, and activate relay I01 when an alarm occurs.  
`SA002, 1, ON, H, 1000, ON, I01`

**Description** • For a channel whose input range is set to SKIP (using the SR command), p3 cannot be set to ON.  
 • For a channel whose computation channel is set to OFF (using the SO command), p3 cannot be set to ON.  
 • For a channel whose external input channel is set to OFF (ER command), p3 cannot be set to ON.  
 • All alarm settings on a channel are set to OFF when:  
 • Its input type is changed (VOLT, TC, etc).  
 • Its measurement range is changed.  
 • Its span or scaling values are changed during scaling display (includes changing the decimal place).  
 • The channel is a computation channel, and the channel is turned on or off or an expression or a span value is changed.  
 • The h and l settings of p4 are valid only when the measurement range is set to differential computation between channels.  
 • If p4 is set to R or r, set the interval for the high/low limit on the rate-of-change using the XA command.  
 • If p4 is set to T or t, set the alarm delay for the delay high/low limit alarm using the BD command.  
 • Set the p5 alarm value in the following range based on the p4 alarm type or the target channel.  
 • Upper, Lower, Delay Upper and Delay Lower alarms  
 • DC voltage, thermocouple, or RTD input Within in the measurable range of the selected range  
 • Contact input  
 0 or 1  
 • Scaling input (1-5V, scaling, and square root)

–5 to 105% of span (except, within –30000 to 30000)

- Difference high limit and difference low limit alarms  
Within the measurable range
- High limit on rate-of-change and low limit on rate-of-change alarms  
A value that consists of at least one non-zero digit. For example, 0.0001 for the 2 V range.  
The maximum value is within the measurable range (except within –30000 to 30000).  
For example, 3.0000 for the 2 V range.  
For contact input, only the value of “1” can be specified.
- Computation channels  
For computation channels –9999999 to 99999999 (excluding the decimal point. Set using an integer.)
- External input channels  
–30000 to 30000
- An error occurs if p7 is set to a number of a relay that is not installed.
- You can specify computation channels on models with the /M1 or /PM1 math option.
- For computation channels and external input channels, the only alarm types that you can specify are H (high limit alarm), L (low limit alarm), T (delay high limit alarm), and t (delay low limit alarm).
- For computation channels, the alarm hysteresis is fixed at zero. Use the XA command to set the alarm hysteresis.

### **SW** Sets the trend interval and auto save interval

Syntax SW p1,p2,p3,p4<terminator>

#### **T-Y Display**

- p1 1
- p2 Waveform type (specify T-Y)
- p3 Trend interval (5S, 10S, 15S, 30S, 1MIN, 2MIN, 5MIN, 10MIN, 15MIN, 20MIN, 30MIN, 1H, 2H, 4H, 10H)
- p4 Auto save interval (10MIN, 20MIN, 30MIN, 1H, 2H, 3H, 4H, 6H, 8H, 12H, 1DAY, 2DAY, 3DAY, 5DAY, 7DAY, 10DAY, 14DAY, 31DAY)

Query SW?

- Description
- You cannot use this command while recording (memory sampling) in progress. When using the /BT2 multi batch option, you cannot use this command if any of the batch groups is recording (memory sampling).
  - The selectable auto save intervals (p4) vary depending on the trend interval (p3). For details, see the *DX1000/DX2000 User's Manual*.

- You can only set the trend interval (p3) to 5S and 10S for high-speed input models (DX1002, DX1002N, DX1004, DX1004N, DX2004, and DX2008).
- You can only set the trend interval (p3) on medium-speed models to 15S if fast sampling mode is enabled.
- Set the trend interval (p3) to a value less than the scan interval.
- The p4 setting is valid when the saving method to the external storage medium is set to auto (using the XM command with p1 set to AUTO).

#### **Circular Display**

- p1 1
- p2 Waveform type (CIRCULAR)
- p3 Time length of one cycle (20MIN, 30MIN, 1H, 2H, 6H, 8H, 12H, 16H, 1DAY, 2DAY, 1WEEK, 2WEEK, 4WEEK)
- p4 Auto save interval (10MIN, 20MIN, 30MIN, 1H, 2H, 3H, 4H, 6H, 8H, 12H, 1DAY, 2DAY, 3DAY, 5DAY, 7DAY, 10DAY, 14DAY, 31DAY)

Query SW?

Example Set the waveform type to CIRCULAR, the time length of one cycle to 20 minutes, and the auto save interval to 1 hour.

SW1,CIRCULAR,20MIN,1H

- Description
- You cannot use this command while recording (memory sampling) in progress.
  - The selectable auto save intervals (p4) vary depending on the time length of one cycle (p3). For details, see the *DX1000/DX2000 User's Manual*.
  - The p4 setting is valid when the saving method to the external storage medium is set to auto (using the XM command with p1 set to AUTO).
  - Set the time length of one cycle (p3) to a value less than the scan interval.

### **TI** Sets the circular display offset time

Syntax TI p1,p2<terminator>

- p1 1
- p2 Offset time (OFF, 1H, 2H, 3H, 4H, 5H, 6H, 7H, 8H, 9H, 10H, 11H, 12H, 13H, 14H, 15H, 16H, 17H, 18H, 19H, 20H, 21H, 22H, 23H)

Query TI[p1]?

Example Set the offset time to 1 hour.

TI1,1H

### **TO** Sets how the DX operates after one circular display cycle

Syntax TO p1<terminator>

- p1 Operation after one cycle



### 3.4 Setting Commands (Setting)

**ALLCLEAR** Clears the entire waveform display and starts drawing a new waveform.

**DIVCLEAR** Clears a section of the waveform display and starts drawing a new waveform.

Query **TO?**

Example Set the operation after one cycle to all clear.

**TOALLCLEAR**

#### **TW** Sets the secondary trend interval

Syntax **TW p1<terminator>**

**p1** Trend interval (5S, 10S, 15S, 30S, 1MIN, 2MIN, 5MIN, 10MIN, 15MIN, 20MIN, 30MIN, 1H, 2H, 4H, 10H)

Query **TW?**

Example Set the interval to 2 minutes.

**TW2MIN**

- Description
- Set the trend interval (p1) to a value less than the scan interval.
  - You can only set the trend interval (p3) to 5S and 10S for high-speed input models (DX1002, DX1002N, DX1004, DX1004N, DX2004, and DX2008).
  - You can only set the trend interval (p3) on medium-speed models to 15S if fast sampling mode is enabled.
  - You cannot use this command when multi batch (/BT2 option) is enabled.

#### **TM** Sets manual sampling

Syntax **TM p1,p2,p3<terminator>**

**p1** Manual sample number  
**p2** Enable or disable (ON or OFF)  
**p3** Measurement, computation, or external input channel number

Query **TM[p1]?**

Example Assign measurement channel 002 to manual sample number 001.

**TM001, ON, 002**

- Description
- You can use this command on models with the /MC1 external input channel option.
  - You can specify computation channels on models with the /M1 or /PM1 math option.

#### **TE** Sets the sampling conditions for event data

Syntax **TE p1,p2,p3,p4,p5,p6<terminator>**

**p1** 1  
**p2** Sample interval (25MS, 125MS, 250MS, 500MS, 1S, 2S, 5S, 10S, 30S, 1MIN, 2MIN, 5MIN, 10MIN, 15MIN, 20MIN, 30MIN)  
**p3** Sample mode

**FREE** Starts data acquisition at memory start and stops data acquisition at memory stop.

**SINGLETRIGGER** Acquires data once for a specified time length after the trigger occurs and then stops.

**REPEATTRIGGER** Acquires data for a specified time length after the trigger occurs and then enters the trigger wait condition.

**p4** Sample time length (10MIN, 20MIN, 30MIN, 1H, 2H, 3H, 4H, 6H, 8H, 12H, 1DAY, 2DAY, 3DAY, 5DAY, 7DAY, 10DAY, 14DAY, 31DAY)

**p5** Pretrigger length as percentage (0, 5, 25, 50, 75, 95, 100)

**p6** Key trigger source disable or enable (OFF or ON)

Parameters p5 to p6 are valid when p3 is set to SINGLETRIGGER or REPEATTRIGGER.

Query **TE[p1]?**

Example Acquire data at a sampling rate of 125 ms for 10 minutes using single trigger mode.

**TE1, 125MS, SINGLETRIGGER, 10MIN**

- Description
- You cannot choose a sample interval that is shorter than the scan interval.
  - You cannot use this command while recording (memory sampling) in progress.
  - You cannot set SINGLETRIGGER or REPEATTRIGGER as a sample mode when multi batch (/BT2 option) is enabled.

#### **SZ** Sets a zone

Syntax **SZ p1,p2,p3<terminator>**

**p1** Measurement, computation, or external input channel number  
**p2** Lower zone boundary position (0 to 95) [%]  
**p3** Upper zone boundary position (5 to 100) [%]

Query **SZ[p1]?**

Example Display channel 002 in a zone between 30% and 50%.

**SZ002, 30, 50**

- Description
- You can specify computation channels on models with the /M1 or /PM1 math option. You can specify external input channels on models with the /MC1 external input channel option.
  - Set the boundary positions as percentages of the entire amplitude axis in the waveform display area.
  - The zone size must be at least 5%.
  - Set the upper zone boundary position greater than the lower zone boundary position.

#### **SP** Sets a partial expanded display

Syntax **SP p1,p2,p3,p4<terminator>**

**p1** Measurement, computation, or external input channel number

**p2** Partial expanded display (ON, OFF)

**p3** Boundary position (1 to 99) [%]

**p4** Boundary value

Query **SP[p1]?**

**Example** Partially expand the display of channel 001. Set the boundary position to 25% and the boundary value to 1.00 V.

```
SE001,ON,25,100
```

- Description**
- You can specify computation channels on models with the /M1 or /PM1 math option. You can specify external input channels on models with the /MC1 external input channel option.
  - For a channel whose input range is set to SKIP (using the SR command), p2 cannot be set to ON.
  - For a channel whose computation channel is turned off (using the SO command), p2 cannot be set to ON.
  - For a channel whose external input channel is set to OFF (using the ER command), p2 cannot be set to ON.
  - Set p3 as a percentage of the range defined by the span upper and lower limits (scale upper and lower limits when scaling is enabled).
  - Set p4 to a value from (span upper limit – 1) to (span lower limit + 1). If scaling is enabled, set p4 to a value from (scaling lower limit – 1) to (scaling upper limit + 1).
  - The decimal place and the number of digits are the same as those for the span or scaling settings (see the SR command).
  - You can use this command (includes the query) when the partial expanded display function is set to USE (using the XU command).
  - You cannot use this command if the partial expanded display range does not exist (for example when the span range is 1).

### **ST** Sets a tag

**Syntax** ST p1,p2,p3<terminator>  
 p1 Measurement, computation, or external input channel number  
 p2 Tag comment (up to 32 characters)  
 p3 Tag number (up to 16 characters)

**Query** ST[p1]?

**Example** Set the channel 002 tag (tag comment) to TAG2.  
 ST002,TAG2

- Description**
- For the characters that you can use for tags, see appendix 3, “ASCII Character Codes.” Note that you cannot use semicolons or commas.
  - You can specify computation channels on models with the /M1 or /PM1 math option. You can specify external input channels on models with the /MC1 external input channel option.
  - Parameter p3 is invalid when you are not using the tag number. The DX returns the previous value in response to a query.

### **SX** Sets a display group (release number 2 or earlier)

**Syntax** SX p1,p2,p3,p4<terminator>  
 p1 Display group number  
 p2 Display group (ON, OFF)  
 p3 Display group name (up to 16 characters)  
 p4 Channel configuration

**Query** SX[p1]?

**Example** Assign channels 001, 003, 004 to 006 to group number 1 and name the group GROUP2.  
 SX1,ON,GROUP2,001.003.004-006

Assign channels by using periods to separate each channel or a hyphen to specify a range of channels.

- Description**
- For the characters that you can use for group names, see appendix 3, “ASCII Character Codes.” Note that you cannot use semicolons or commas.
  - If you are using the multi batch feature (/BT2 option), this command affects batch group 1.
  - If you are using the multi batch feature (/BT2 option) and batch group 1 is recording (memory sampling), you cannot use this command.
  - Set p1 by referring to the table in section 3.3.

### **SL** Sets a trip line (release number 2 or earlier)

**Syntax** SL p1,p2,p3,p4,p5,p6<terminator>  
 p1 Display group number  
 p2 Trip line number (1 to 4)  
 p3 Trip line display (ON, OFF)  
 p4 Display position (0 to 100) [%]  
 p5 Display color (RED, GREEN, BLUE, B.VIOLET, BROWN, ORANGE, Y.GREEN, LIGHTBLUE, VIOLET, GRAY, LIME, CYAN, DARKBLUE, YELLOW, LIGHTGRAY, PURPLE, BLACK, PINK, L.BROWN, L.GREEN, DARKGRAY, OLIVE, DARKCYAN, S.GREEN)

p6 Line width (1, 2, 3)

**Query** SL[p1[,p2]]?

**Example** Display trip line 1 in red at the 10% position of group 1. Set the line width to 1.  
 SL1,1,ON,10,RED,1

- Description**
- Set the position as percentages of the entire amplitude axis in the waveform display area.
  - If you are using the multi batch feature (/BT2 option), this command affects batch group 1.
  - If you are using the multi batch feature (/BT2 option) and batch group 1 is recording (memory sampling), you cannot use this command.
  - Set p1 by referring to the table in section 3.3.

### 3.4 Setting Commands (Setting)

#### **NX** Sets a display group (release number 3 or later)

**Syntax** NX p1,p2,p3,p4,p5<terminator>  
p1 Batch group number  
Set the number to 1 if multi batch (/BT2) is not in use.  
p2 Display group number  
p3 Enable or disable (ON or OFF)  
p4 Display group name (up to 16 characters)  
p5 Channel configuration

**Query** NX[p1, [p2]]?

**Example** Assign channels 001, 003, 004 to 006 to batch group 3's group number 1 and name the group GROUP2.

```
NX3,1,ON,GROUP2,001.003.004-006
```

Assign channels by using periods to separate each channel or a hyphen to specify a range of channels.

- Description**
- For the characters that you can use for group names, see appendix 3, "ASCII Character Codes." Note that you cannot use semicolons or commas.
  - If you are using the multi batch feature (/BT2 option), you cannot use this command on a batch group that is recording (memory sampling).
  - Set p1 and p2 by referring to the table in section 3.3.

#### **NL** Sets a trip line (release number 3 or later)

**Syntax** NL p1,p2,p3,p4,p5,p6,p7<terminator>  
p1 Batch group number  
Set the number to 1 if multi batch (/BT2) is not in use.  
p2 Display group number  
p3 Trip line number (1 to 4)  
p4 Trip line display (ON, OFF)  
p5 Display position (0 to 100) [%]  
p6 Display color (RED, GREEN, BLUE, B.VIOLET, BROWN, ORANGE, Y.GREEN, LIGHTBLUE, VIOLET, GRAY, LIME, CYAN, DARKBLUE, YELLOW, LIGHTGRAY, PURPLE, BLACK, PINK, L.BROWN, L.GREEN, DARKGRAY, OLIVE, DARKCYAN, S.GREEN)  
p7 Line width (1, 2, 3)

**Query** NL[p1, [p2, [, p3]]]?

**Example** Display trip line 2 in red at the 10% position of batch group 3's display group 1. Set the line width to 1.

```
NL3,1,2,ON,10,RED,1
```

- Description**
- Set the position as percentages of the entire amplitude axis in the waveform display area.
  - If you are using the multi batch feature (/BT2 option), this command affects batch group 1.

- If you are using the multi batch feature (/BT2 option), you cannot use this command on a batch group that is recording (memory sampling).
- Set p1 and p2 by referring to the table in section 3.3.

#### **SG** Sets a message

**Syntax** SG p1,p2<terminator>  
p1 Message number (1 to 100)  
p2 Message (up to 32 characters)

**Query** SG[p1]?

**Example** Assign character string "MESSAGE1" to message number 2.

```
SG2,MESSAGE1
```

**Description** For the characters that you can use for messages, see appendix 3, "ASCII Character Codes." Note that you cannot use semicolons or commas.

#### **TH** Sets the directory on the external storage medium for saving data

**Syntax** TH p1<terminator>  
p1 Directory name (up to 20 characters)

**Query** TH ?

**Example** Select the DATA1 folder on the external storage medium for saving data.

```
THDATA1
```

#### **TZ** Sets a file header

**Syntax** TZ p1,p2<terminator>  
p1 Batch group number  
Set the number to 1 if multi batch (/BT2) is not in use.  
p2 File header (up to 50 characters)

**Query** TZ[p1]?

**Example** Set the batch group 2's header to DX1000DATA.

```
TZ2,DX1000DATA
```

**Description** Set p1 by referring to the table in section 3.3.

#### **TF** Sets a data file name

**Syntax** TF p1,p2,p3<terminator>  
p1 Batch group number  
Set the number to 1 if multi batch (/BT2) is not in use.  
p2 Configuration  
BATCH File name based on the batch name  
DATE User-assigned character string + date  
SERIAL User-assigned character string + serial number  
p3 User-assigned name (up to 16 characters) (valid when p2 is set to DATE or SERIAL)

**Query** TF[p1]?

**Example** Set the batch group 2's file name configuration to BATCH and set the user-assigned string to DX1DATA.

TF2, BATCH, DX1DATA

**Description** Set p1 by referring to the table in section 3.3.

### **SD** Sets the date and time

**Syntax** SD p1,p2<terminator>

p1 Date in the YY/MM/DD format (fixed)

YY Year (00 to 79)

MM Month (01 to 12)

DD Day (01 to 31)

p2 Time in the HH:MM:SS format (fixed)

HH Hour (00 to 23)

MM Minute (00 to 59)

SS Second (00 to 59)

**Query** SD?

**Example** Set the internal clock to 13:00:00 on October 1, 2005.

SD05/10/01, 13:00:00

**Description** The p1 and p2 format is fixed at eight characters. Use the format below. Do not insert spaces. If you do, an error will occur.

p1 = YY/MM/DD (lower two digits of the year/ month/day)

p2 = HH:MM:SS (hour:minute:second)

### **TD** Sets daylight saving time

**Syntax** TD p1,p2,p3,p4,p5,p6,p7,p8,p9 <terminator>

p1 Enable or disable (USE or NOT)

p2 Daylight saving time start month (JAN, FEB, MAR, APR, MAY, JUN, JUL, AUG, SEP, OCT, NOV, DEC)

p3 Daylight saving time start week (1ST, 2ND, 3RD, 4TH, LAST)

p4 Daylight saving time start day (SUN, MON, TUE, WED, THU, FRI, SAT)

p5 Daylight saving time start hour (0 to 23)

p6 Daylight saving time end month (JAN, FEB, MAR, APR, MAY, JUN, JUL, AUG, SEP, OCT, NOV, DEC)

p7 Daylight saving time end week (1ST, 2ND, 3RD, 4TH, LAST)

p8 Daylight saving time end day (SUN, MON, TUE, WED, THU, FRI, SAT)

p9 Daylight saving time end hour (0 to 23)

**Query** TD?

**Example** Switch to daylight saving (summer) time on the first Sunday of June and switch out of it on the first Sunday in December.

TDUSE, JUN, 1ST, SUN, 0, DEC, 1ST, SUN, 0

### **TT** Sets the trend display

**Syntax** TT p1,p2,p3,p4,p5<terminator>

p1 Graph display direction

HORIZONTAL Horizontal display

VERTICAL Vertical display

WIDE Horizontal wide display

SPLIT Horizontal split display

p2 Clear waveform at start (ON or OFF)

p3 Message display direction

HORIZONTAL

VERTICAL

p4 Scale digits

NORMAL 3-digit display

FINE 4-digit display

p5 Current value display

MARK Displays using a mark

BARGRAPH Display using a bar graph

For the circular display, only p1=HORIZONTAL is valid.

**Query** TT?

**Example** Display waveform horizontally, set the message direction to vertical, and display waveforms by clearing the current waveforms at memory start.

TTHORIZONTAL, ON, VERTICAL

**Description** When using the /BT2 multi batch option, p2 is fixed at ON.

### **SE** Sets the line width and the number of grids to use on the trend graph

**Syntax** SE p1,p2<terminator>

p1 Trend line width (1 to 3) [dots]

p2 Number of grids (4 to 12, AUTO)

**Query** SE?

**Example** Set the trend waveform line width to 1 dot and the number of grids to 10.

SE1, 10

### **TB** Sets the bar graph display

**Syntax** TB p1<terminator>

p1 Bar graph display direction

HORIZONTAL

VERTICAL

**Query** TB?

**Example** Display the bar graph horizontally.

TBHORIZONTAL

### **SB** Sets the bar graph for a channel

**Syntax** SB p1,p2,p3<terminator>

p1 Measurement, computation, or external input channel number

### 3.4 Setting Commands (Setting)

- p2 Bar graph base position  
NORMAL Normal (lower limit)  
CENTER Center  
LOWER Lower limit  
UPPER Upper limit

p3 Number of scale divisions (4 to 12)

Query SB[p1]?

Example Set the number of scale divisions on the bar graph for channel 002 to five, and display the bar graph from the span lower limit (the scale lower limit if scale is enabled).

SB002,NORMAL,5

Description You can specify computation channels on models with the /M1 or /PM1 math option. You can specify external input channels on models with the /MC1 external input channel option.

#### **TN** Sets a scale

Syntax TN p1,p2,p3<terminator>

p1 Measurement, computation, or external input channel number

p2 Display position (OFF, 1 to 10)

p3 Number of divisions (4 to 12, C10)

Query TN[p1]?

Example Set the scale position for channel 003 to 2, and the number of divisions to 10.

TN003,2,10

#### **SV** Sets a measurement channel's moving average

Syntax SV p1,p2,p3<terminator>

p1 Measurement channel number

p2 Moving average (OFF, ON)

p3 Number of moving average samples (2 to 400)

Query SV[p1]?

Example Set the number of moving average samples for channel 002 to 12.

SV002,ON,12

#### **SC** Sets a channel display color

Syntax SC p1,p2<terminator>

p1 Measurement, computation, or external input channel number

p2 Display color (see SL (sets a trip line))

Query SC[p1]?

Example Set the channel 002 display color to blue.

SC002,BLUE

Description You can specify computation channels on models with the /M1 or /PM1 math option. You can specify external input channels on models with the /MC1 external input channel option.

#### **TA** Sets an alarm point mark

Syntax TA p1,p2,p3,p4,p5,p6,p7<terminator>

p1 Measurement, computation, or external input channel number

p2 Mark type

ALARM Alarm mark

FIXED Fixed mark

p3 Scale board (ON, OFF)

p4 Alarm level 1 color (AUTO or 24 colors (see NL; sets a trip line))

AUTO The same color as the alarm color

p5 Alarm level 2 color (AUTO or 24 colors (see NL; sets a trip line))

AUTO The same color as the alarm color

p6 Alarm level 3 color (AUTO or 24 colors (see NL; sets a trip line))

AUTO The same color as the alarm color

p7 Alarm level 4 color (AUTO or 24 colors (see NL; sets a trip line))

AUTO The same color as the alarm color

Query TA[p1]?

Example Display alarm marks on the channel 004 scale.

TA004,ALARM,ON

#### **TG** Sets a color scale band

Syntax TG p1,p2,p3,p4,p5<terminator>

p1 Measurement, computation, or external input channel number

p2 Area (OFF, IN, OUT)

p3 Color (AUTO or 24 colors (see NL; sets a trip line))

p4 Lower display position limit

p5 Upper display position limit

Query TG[p1]?

Example Set the channel 005 color scale band to the range from -1.0000 to 0.5000 V (2-V range), and set the color to green.

TG005,IN,GREEN,-10000,5000

#### **SQ** Sets the LCD brightness and the screen backlight saver

Syntax SQ p1,p2,p3,p4<terminator>

p1 LCD brightness

1 to 8 DX1000

1 to 6 DX2000

p2 Screen backlight saver type

OFF Disables the saver function.

DIMMER Dims the backlight

TIMEOFF Turns off the backlight

p3 Amount of time until the DX switches to saver mode

1MIN, 2MIN, 5MIN, 10MIN, 30MIN, 1H

|             |   |  |
|-------------|---|--|
|             | p4  | Event that causes the DX to return from saver mode |
|             | KEY   | Pressing of a key                                  |
|             | KEY+ALM   | Pressing of a key or an alarm occurrence           |
| Query       | SQ?   |  |
| Example     | Set the LCD brightness to 2 and the screen backlight saver type to dimmer. Set the amount time of until the DX switches to saver mode to 5 minutes and the event that causes the DX to return from saver mode to pressing of a key.<br>SQ2, DIMMER, 5MIN, KEY |  |
| Description | If p2 is set to OFF, do not set p3 or p4.   |  |

**TC Sets the background color**

|         |   |  |
|---------|---|--|
| Syntax  | TC p1,p2<terminator>  |  |
|         | p1  | Screen (WHITE, BLACK)                                    |
|         | p2  | Historical trend screen (WHITE, CREAM, LIGHTGRAY, BLACK) |
| Query   | TC?   |  |
| Example | Set the screen background to black and the historical trend screen background to cream.<br>TCBLACK, CREAM |  |

**TP Sets automatic display group switching**

|         |   |   |
|---------|---|---|
| Syntax  | TP p1<terminator>                                       |   |
|         | p1  | Auto switching interval (5S, 10S, 20S, 30S, 1MIN) |
| Query   | TP?   |   |
| Example | Switch between display groups at 5-s intervals.<br>TP5S |   |

**NF Sets the favorite key operation**

|         |  |   |
|---------|--|---|
| Syntax  | NF p1,p2,p3<terminator>  |   |
|         | p1   | Type of operation   |
|         | FAVORITE   | Operates as a favorite key.   |
|         | HISTORY  | Operates as a key for switching to the historical display.  |
|         | p2   | Display group   |
|         | SAVED  | Displays the display group that was selected when you registered the favorite key                                 |
|         | CURRENT  | Displays the current display group  |
|         | p3   | Historical trend time axis zoom   |
|         | SAVED  | Displays the historical trend using the time axis zoom setting that was used when you registered the favorite key |
|         | CURRENT  | Displays the historical trend using the current time axis zoom setting  |
| Query   | NF?  |   |
| Example | Set the favorite key as a key used to switch to the historical display.<br>NF, HISTORY |   |

Description Parameters p2 and p3 are valid when p1 is set to FAVORITE.

**TR Sets the automatic monitor return function**

|         |   |  |
|---------|---|--|
| Syntax  | TR p1<terminator>   |  |
|         | p1  | Automatic return time limit (OFF, 1MIN, 2MIN, 5MIN, 10MIN, 20MIN, 30MIN, 1H) |
| Query   | TR?   |  |
| Example | Set the automatic return time limit to 5 minutes.<br>TR5MIN |  |

**TQ Sets a timer****When p2 is set to OFF (no timer)**

|        |                      |                  |
|--------|----------------------|------------------|
| Syntax | TQ p1,p2<terminator> |                  |
|        | p1                   | Timer number     |
|        | p2                   | Timer type (OFF) |

**When p2 is set to ABSOLUTE (absolute timer)**

|        |                            |   |
|--------|----------------------------|---|
| Syntax | TQ p1,p2,p3,p4<terminator> |   |
|        | p1                         | Timer number  |
|        | p2                         | Timer type (ABSOLUTE)   |
|        | p3                         | Time interval (1MIN to 6MIN, 10MIN, 12MIN, 15MIN, 20MIN, 30MIN, 1H to 4H, 6H, 8H, 12H, 24H) |
|        | p4                         | Reference time (hh; fixed format)   |
|        | hh                         | Hour (00 to 23)   |

**When p2 is set to RELATIVE (relative timer)**

|        |                            |                                      |
|--------|----------------------------|--------------------------------------|
| Syntax | TQ p1,p2,p3,p4<terminator> |                                      |
|        | p1                         | Timer number                         |
|        | p2                         | Timer type (RELATIVE)                |
|        | p3                         | Time (hh:mm; fixed format)           |
|        | hh                         | Hour (00 to 24)                      |
|        | mm                         | Minute (00 to 59)                    |
|        | p4                         | Reset at computation start (OFF, ON) |

Query TQ[p1]?

Example Set the timeout value of timer number 1 to 10 hours 30 minutes. Do not reset the timer when computation is started.  
TQ1,RELATIVE,10:30,OFF

Description

- Set p1 by referring to the table in section 3.3.
- You cannot use this command while recording (memory sampling) in progress.
- You can set up to 24:00 time when using a relative timer.

**TK Sets a match time timer****When p2 is set to OFF (disable the match time timer)**

|        |                      |                  |
|--------|----------------------|------------------|
| Syntax | TK p1,p2<terminator> |                  |
|        | p1                   | Timer number     |
|        | p2                   | Timer type (OFF) |

**When p2 is set to DAY**

|        |                               |              |
|--------|-------------------------------|--------------|
| Syntax | TK p1,p2,p3,p4,p5<terminator> |              |
|        | p1                            | Timer number |



### 3.4 Setting Commands (Setting)

- p2 Timer type (DAY)
- p3 Day (1 to 28)
- p4 Hour (hh:mm; fixed format; 00:00 to 23:59)
- p5 Timer operation (SINGLE, REPEAT)
  - SINGLE Executes the action once when the condition is met.
  - REPEAT Executes the action at every specified time.

#### When p2 is set to WEEK

- Syntax TK p1,p2,p3,p4,p5<terminator>
- p1 Timer number
  - p2 Timer type (WEEK)
  - p3 Day of week (SUN, MON, TUE, WED, THU, FRI, SAT)
  - p4 Hour (hh:mm; fixed format; 00:00 to 23:59)
  - p5 Timer operation (SINGLE, REPEAT)

#### When p2 is set to MONTH

- Syntax TK p1,p2,p3,p4,p5<terminator>
- p1 Timer number
  - p2 Timer type (MONTH)
  - p3 Day (1 to 28)
  - p4 Hour (hh:mm; fixed format; 00:00 to 23:59)
  - p5 Timer operation (SINGLE, REPEAT)

#### When p2 is set to YEAR

- Syntax TK p1,p2,p3,p4,p5,p6<terminator>
- p1 Timer number
  - p2 Timer type (YEAR)
  - p3 Month (JAN, FEB, MAR, APR, MAY, JUN, JUL, AUG, SEP, OCT, NOV, DEC)
  - p4 Day (1 to 31; varies depending on the specified month)
  - p5 Hour (hh:mm; fixed format; 00:00 to 23:59)
  - p6 Timer operation (SINGLE, REPEAT)

Query TK[p1]?

Example Set timer number 2 to expire at hour 21 every Thursday.

TK2,WEEK,THU,21:00,REPEAT

- Description
- Set p1 by referring to the table in section 3.3.
  - You cannot use this command while recording (memory sampling) in progress.

### TU Sets an event action

#### When multi batch (/BT2) is not in use

- Syntax TU p1,p2,p3,p4,p5,p6,p7,p8<terminator>
- p1 Logic number (1 to 40)
  - p2 Event type
    - NONE
    - REMOTE
    - RELAY Alarm output relay
    - SWITCH Internal switch
    - ALARM Alarm occurrence
    - TIMER Timer expiry
    - MATCHTIMETIMER Match time expiry
    - USERKEY USER key

- EVENTLEVELSWITCH Event level switch
- EVENTEDGESWITCH Event edge switch

#### p3 Event details

- p2=REMOTE Remote number
- p2=RELAY Relay number
- p2=SWITCH Internal switch number
- p2=TIMER Timer number
- p2=MATCHTIMETIMER Match time timer number
- p2=EVENTLEVELSWITCH Event level switch number
- p2=EVENTEDGESWITCH Event edge switch number
- p2=Other Space

#### p4 Action type

- MEMORYSTART/STOP
- MEMORYSTART
- MEMORYSTOP
- TRIGGER Event trigger
- ALARMACK Alarm acknowledge
- MATHSTART/STOP
- MATHSTART
- MATHSTOP
- MATHRESET
- SAVEDISPLAY Saves display data to the external storage medium
- SAVEEVENT Saves event data to the external storage medium
- MESSAGE Writes a message
- SNAPSHOT
- MANUALSAMPLE
- TIMERRESET Resets the relative timer
- DISPLAYRATE1/2 Switches the trend interval
- DISPLAYGROUPCHANGE Switches the display group
- FLAG Raises a flag
- TIMEADJUST Adjusts the time
- PANELLOAD Loads settings
- ALARMDISPLAYRESET Resets the alarm display
- COMMENTDISPLAY Displays the comment screen
- FAVORITEDISPLAY Displays the favorite screen

#### p5 Action details 2

- p4=TIMERRESET Timer number
- p4=DISPLAYGROUPCHANGE Display group number
- p4=FLAG Flag number
- p4=MESSAGE Message number (1 to 100)
- p4=PANELLOAD Setup file number (1 to 3)
- p4=COMMENTDISPLAY Comment text block number
- p4=FAVORITEDISPLAY
  - KEY Presses the favorite key
  - SELECT Specifies a registered screen

|                                  |  |
|----------------------------------|--|
| p6                               | <b>Action details 3</b>                                      |
| p4=MESSAGE                       | Method of specifying the destination to write the message    |
| ALL                              | All display groups   |
| SELECT                           | A specific display group                                     |
| p4=FAVORITEDISPLAY and p5=SELECT | Number of the screen registered to the favorite key (1 to 8) |
| p7                               | <b>Action details 4</b>                                      |
| p4=MESSAGE and p6=SELECT         | Display group number   |

**When multi batch (/BT2) is in use**

Syntax TU p1,p2,p3,p4,p5,p6,p7,p8  
<terminator>

|   |  |
|---|--|
| p1  | Same as when multi batch is not in use   |
| p2  | Same as when multi batch is not in use   |
| p3  | Same as when multi batch is not in use   |
| p4  | Same as when multi batch is not in use   |
| p5  | <b>Action details 2</b><br>Same as when multi batch is not in use except the following:<br>p4=MEMORYSTART/STOP, MEMORYSTART, MEMORYSTOP, SAVEDISPLAY, SAVEEVENT, MATHRESET |
| ALL   | All batch groups   |
| SELECT  | A specific batch group   |
| p4=MATHRESET  | ALL All computation channels<br>SELECT A specific batch group  |
| p6  | <b>Action details 3</b>  |
| p4=MESSAGE  | Method of specifying the destination to write the message  |
| ALL   | All display groups in the batch group specified using p8   |
| SELECT  | A specific display group in the batch group specified by p8  |
| p4=DISPLAYGROUPCHANGE   | Batch group number   |
| p4=MEMORYSTART/STOP, MEMORYSTART, MEMORYSTOP, SAVEDISPLAY, SAVEEVENT, MATHRESET and p5=SELECT | Batch group number   |
| p4=MATHRESET and p5=SELECT  | Batch group number   |
| p7  | <b>Action details 4</b>  |
| p4=MESSAGE and p6=SELECT  | Display group number   |
| p4=MESSAGE and p6=ALL   | You can specify any value.<br>The DX returns 1 in response to this query.  |
| p8  | <b>Action details 5</b>  |
| p4=MESSAGE  | Batch group number   |

Query TU[p1]?

Example Execute memory start with the remote control input (terminal 1).

TUREMOTE, 1, MEMORYSTART

- Description
- Set various numbers (relay number, internal switch number, etc.) by referring to the table in section 3.3.
  - You cannot select some of the p4 (action type) settings depending on the p2 (event type) setting.
  - You cannot select some of the p4 (action type) settings depending on other DX settings or depending on the installed options.
  - The p4=ALARMDISPLAYRESET setting is valid when the annunciator function is enabled and the annunciator sequence is set to ISA-M.
  - Set the batch group number by referring to the table in section 3.3.
  - When multi batch (/BT2) is in use, p4 is set to MATHRESET, and p5 is set to ALL, the calculated values for all computation channels are reset.

**SK Sets a constant**

Syntax SK p1,p2<terminator>

p1 Constant number

p2 Constant (-9.9999E+29 to -1.0000E-30, 0, 1.0000E-30 to 9.9999E+29, 5 significant digits)

Query SK[p1]?

Example Set the constant in constant number K01 to 1.0000E-10.

SKK01, 1.0000E-10

- Description
- You can use this command on models with the /M1 or /PM1 math option.
  - You cannot use this command while recording (memory sampling) or computation is in progress. When using the /BT2 multi batch option, you cannot use this command if any of the batch groups is recording (memory sampling).
  - Set p1 by referring to the table in section 3.3.

**SI Sets the rolling average function of a computation channel**

Syntax SI p1,p2,p3,p4<terminator>

p1 Computation channel number

p2 Moving average (ON, OFF)

p3 Sampling interval (1S, 2S, 3S, 4S, 5S, 6S, 10S, 12S, 15S, 20S, 30S, 1MIN, 2MIN, 3MIN, 4MIN, 5MIN, 6MIN, 10MIN, 12MIN, 15MIN, 20MIN, 30MIN, 1H)

p4 Number of samples (1 to 1500)

Query SI[p1]?



### 3.4 Setting Commands (Setting)

**Example** Turn on the rolling average function of computation channel 107, set the sampling interval to 1 minute, and the number of samples to 20.

```
SI107, ON, 1MIN, 20
```

**Description** • You can use this command on models with the /M1 or /PM1 math option.

- Do not set p3 or p4 when p2 is set to OFF.
- Set the sampling interval to a value greater than the scan interval.

#### **SJ Sets a TLOG timer**

**Syntax** SJ p1, p2, p3, p4, p5 <terminator>

p1 Computation channel number  
 p2 Timer number  
 p3 Conversion of the unit of time for TLOG. SUM computation  
 OFF Do not convert.  
 /S Converts as though the physical values are integrated in units of seconds.  
 /MIN Converts as though the physical values are integrated in units of minutes.  
 /H Converts as though the physical values are integrated in units of hours.  
 p4 Reset (ON, OFF)  
 p5 Timer type  
 TIMER Timer  
 MATCHTIMETIMER Match time timer

**Query** SJ[p1]?

**Example** Assign timer 1 to computation channel number 110. Do not convert the unit of time and enable the reset setting.

```
SJ110, 1, OFF, ON, TIMER
```

**Description** • You can use this command on models with the /M1 or /PM1 math option.

- Set parameters p1 and p2 by referring to the table in section 3.3.
- You cannot use this command while computation is in progress.
- When using the /BT2 multi batch option, you cannot use this command if any of the batch groups is recording (memory sampling).
- About p3  
 Because the DX integrates sampled data over each scan interval, the physical value integrated over a given unit of time may be different from the actual integrated value. This occurs if the unit of time is different from the scan interval. If this occurs, set p3 to the same unit of time as that for the physical value that you are measuring. The DX calculates the integrated value using one of the following conversion formulas based on p3.

OFF  $\Sigma(\text{measured value})$   
 /S  $\Sigma(\text{measured value}) \times \text{scan interval}$   
 /MIN  $\Sigma(\text{measured value}) \times \text{scan interval}/60$   
 /HOUR  $\Sigma(\text{measured value}) \times \text{scan interval}/3600$

The scan interval unit is seconds.

#### **TX Sets the ancillary operation of the start key**

**Syntax** TX p1 <terminator>

p1 Computation operation (OFF, START, RESET+START)

**Query** TX?

**Example** Configure the start key so that computation also starts when the start key is pressed.

```
TXSTART
```

#### **BH Sets a batch text field**

**Syntax** BH p1, p2, p3, p4 <terminator>

p1 Batch group number  
 Set this parameter to 1 when multi batch (/BT2) is not in use  
 p2 Field number (1 to 24)  
 p3 Field title (up to 20 characters)  
 p4 Field string (up to 30 characters)

**Query** BH[p1, [p2]]?

**Example** Register the title "OPERATOR" and the string "DAQSTATION" to batch group 1's field number 2.

```
BH1, 2, OPERATOR, DAQSTATION
```

**Description** • For the characters that you can use, see appendix 3.

- Set p1 by referring to the table in section 3.3.

#### **EH Sets calibration correction**

**When p2 is set to BEGIN**

**Syntax** EH p1, p2, p3 <terminator>

p1 Measurement channel number  
 p2 Type of operation (BEGIN)  
 p3 Number of break points of the calibration segment (OFF, 2 to 16)  
 OFF Turns off calibration  
 2 to 16 Number of break points

**When p2 is set to SET**

**Syntax** EH p1, p2, p3, p4, p5 <terminator>

p1 Measurement channel number  
 p2 Type of operation (SET)  
 p3 A specific break point (1 to 16)  
 p4 Input value of the specific break point  
 p5 Output value of the specific break point

**Description** • Set p1 by referring to the table in section 3.3.

- The selectable range for p4 and p5 varies depending on the currently specified range.
- When the measurement range is set to scale, the selectable range for p4 and p5 is -30000 to 30000.

- Set input value p4 so that the value increases as break point p3 increases.

**When p2 is set to END**

**Syntax** EH p1,p2<terminator>  
 p1 Measurement channel number  
 p2 Type of operation (END)

**Example** Set three break points for CH2.

```
EH002,BEGIN,3
EH002,SET,1,0,1
EH002,SET,2,50,49
EH002,SET,3,100,101
EH002,END
```

- Description**
- First, use this command with p2 set to BEGIN to specify the number of break points.
  - Then, use this command with p2 set to SET to specify the value of each break point.
  - Finally, use this command with p2 set to END to finalize the settings.
  - The command “EH2?” causes the DX to return the CH2 settings.
  - The DX returns the settings in the format shown in the above example.
  - You cannot use this command when computation is in progress.

**BD Sets an alarm delay**

**Syntax** BD p1,p2<terminator>  
 p1 Measurement, computation, or external input channel number  
 p2 Alarm delay (1 to 3600) [s]

**Query** BD[p1]?

**Example** Set the channel 001 alarm delay to 120 s.  
 BD001,120

**Description** Set p1 by referring to the table in section 3.3.

**NC Sets a comment text field**

**Syntax** NC p1,p2<terminator>  
 p1 Comment text field number  
 p2 Comment string (up to 32 characters)

**Query** NC[p1]?

**Example** Set comment text field 30 to “P1 end.”  
 NC30,P1 end

**Description** Set parameter p2 by referring to the table in section 3.3.

**NB Sets a comment text block**

**Syntax** NB p1,p2,p3,p4,p5,p6<terminator>  
 p1 Comment text block number  
 p2 Comment text field number of line 1  
 p3 Comment text field number of line 2  
 p4 Comment text field number of line 3  
 p5 Comment text field number of line 4  
 p6 Comment text field number of line 5

**Query** NB[p1]?

**Example** Set comment text block 5's lines 1, 2, and 3 to comment text field 10, 11, and 14, respectively.

```
NB5,10,11,14
```

**Description** Set parameters p1 through p6 by referring to the table in section 3.3.

**NW Sets an annunciator display**

**Syntax** NW p1,p2,p3 p4,p5<terminator>  
 p1 Display window number  
 p2 On/Off (ON, OFF)  
 p3 Measurement, computation, or external input channel number  
 p4 Alarm level (1 to 4, ALL)  
 p5 Label (comment text block number)

**Query** NW[p1]?

**Example** Assign the channel 2's alarm level 1 alarm to display window 4 and display the comment text block 3 label.  
 NW4,ON,2,1,3

- Description**
- Set parameters p1 and p5 by referring to the table in section 3.3.
  - You cannot use this command when the annunciator mode is set to Off (using the WU command).

**NG Sets the Web report layout**

**Syntax** NG p1,p2,p3<terminator>  
 p1 Report page number (1 to 10)  
 p2 Creation (ON, OFF)  
 p3 Report title string (up to 64 characters)

**Query** NG[p1]?

**Example** Set the title of report page 2 to “Factory 3.”  
 NG2,ON,Factory 3

- Description**
- You can use this command on models with the /M1 or /PM1 math option.
  - You cannot use this command if:
    - The Web server function is set to Not (using the WS command).
    - The operator and monitor pages are both set to Off (using the WW command).

**NH Sets Web report layout details**

**Syntax** NH p1,p2,p3,p4,p5,p6<terminator>  
 p1 Report page number (1 to 10)  
 p2 Item number (1 to 10)  
 p3 Creation (ON, OFF)  
 p4 Report channel number (R01 to R60)  
 p5 Value (MIN, MAX, AVE, SUM, INST)  
 p6 Item name string (up to 16 characters)

**Query** NH[p1, [p2]]?

**Example** Assign the title “Average” to report page 2 item 6, and display the average of the measured values for the channel assigned to report channel R07.  
 NH2,6,R07,AVE,Average

### 3.4 Setting Commands (Setting)

- Description • You can use this command on models with the /M1 or /PM1 math option.
- The selectable values for p4 varies depending on the model.
  - You cannot use this command if:
    - The Web server function is set to Not (using the WS command).
    - The operator and monitor pages are both set to Off (using the WW command).

#### **FR** Sets the interval for acquiring data to the FIFO buffer

- Syntax `FR p1<terminator>`  
`p1 1 (fixed)`  
`p1 FIFO acquisition interval (25MS, 125MS, 250MS, 500MS, 1S, 2S, 5S)`
- Query `FR?`
- Example Set the FIFO acquisition interval to 1 s.  
`FR1,1S`
- Description • Set the acquisition interval to a value greater than the scan interval.
- If you set the scan interval to a value greater than the acquisition interval using the XV command or from the screen, the acquisition interval is automatically set equal to the scan interval.
  - The DX has a circular FIFO (First In First Out) buffer. The DX acquires measured/computed values to the internal memory at predetermined time intervals from the time the power is turned on. The DX outputs the data when you send an FF command. The DX remembers the previous output position for each connection and updates the position when the DX outputs the next set of data when you send another FF command. This scheme compensates for the differences in the processing power of the measurement PCs and the communication delay. It enables data to be retrieved without any dropouts if the measurement PC reads the data before the ring buffer is overwritten. For details on the FIFO data output process, see appendix 5.

#### **SM** Sets the custom menu

##### Setting the main menu

- Syntax `SM p1,p2,p3,p4,p5,p6,p7,p8,p9<terminator>`
- `p1` Type (DISP\_MAIN)  
`p2 to p9` Menu items to display
- The DX displays the menu items in the specified order.
- The DX does not display menu items that are not specified.
- TREND  
 DIGITAL

BAR  
 OVERVIEW  
 INFORMATION  
 TRENDHISTORY  
 LOG  
 4PANEL  
 ESC  
 EXPAND  
 CUSTOM\_PANEL  
 ANNUNCIATOR  
 SEPARATOR

Example Set the first menu item to TREND and the second menu item to TRENDHISTORY.  
`SMDISP_MAIN,TREND,TRENDHISTORY,`

- Description • If parameter p2 and subsequent parameters are omitted, all menus are hidden.
- A command error occurs if you specify the same menu item multiple times.
  - You can specify up to three separators. If you specify more than three, an error occurs.
  - You cannot omit parameters using delimiters (, .).
  - "4PANEL" is available only on the DX2000.
  - You cannot set the first menu item to "SEPARATOR."

##### Setting the submenu

- Syntax `SM p1,p2,p3,...<terminator>`
- `p1` Type (DISP\_SUB)  
`p2` Menu type (TREND, DIGITAL, BAR, TRENDHISTORY, OVERVIEW, INFORMATION, LOG, 4PANEL, CUSTOM\_PANEL, ANNUNCIATOR)  
`p3 ≥` Submenu items to display
- The DX displays the items in the specified order.
- The DX does not display menu items that are not specified.
- When p2 is set to TREND (select from the items below)
- |                                |                                     |
|--------------------------------|-------------------------------------|
| <code>GROUP1 to GROUP36</code> | Display group                       |
| <code>CIRCULAR_KIND</code>     | Circular type                       |
| <code>ALL_CHANNEL</code>       | All channel display                 |
| <code>SCALE</code>             | Scale display                       |
| <code>DIGITAL</code>           | Digital display                     |
| <code>MESSAGE_DISP</code>      | Message display                     |
| <code>TREND_SPACE</code>       | Trend space                         |
| <code>AUTO</code>              | Auto switching                      |
| <code>EXPAND</code>            | Expand                              |
| <code>FINE_GRID</code>         | Fine grid                           |
| <code>AUTO_ZONE</code>         | Auto zone display or normal display |
| <code>TAG_PRIORITY</code>      | Tag prioritized display             |
| <code>SEPARATOR</code>         |                                     |
- When p2 is set to DIGITAL (select from the items below)
- |                                |                |
|--------------------------------|----------------|
| <code>GROUP1 to GROUP36</code> | Display group  |
| <code>AUTO</code>              | Auto switching |

|              |                         |
|--------------|-------------------------|
| EXPAND       | Expand                  |
| TAG_PRIORITY | Tag prioritized display |
| SEPARATOR    |                         |

When p2 is set to BAR (select from the items below)

|                   |                         |
|-------------------|-------------------------|
| GROUP1 to GROUP36 | Display group           |
| AUTO              | Auto switching          |
| EXPAND            | Expand                  |
| TAG_PRIORITY      | Tag prioritized display |
| SEPARATOR         |                         |

When p2 is set to TRENDHISTORY (select from the items below)

|                   |               |
|-------------------|---------------|
| GROUP1 to GROUP36 | Display group |
| SEPARATOR         |               |

When p2 is set to OVERVIEW (select from the items below)

|              |                          |
|--------------|--------------------------|
| CURSOR       | Cursor display           |
| TO_ALARM     | Alarm summary            |
| TO_TREND     | To the trend display     |
| TO_DIGITAL   | To the digital display   |
| TO_BAR       | To the bar graph display |
| EXPAND       | Expand                   |
| TAG_PRIORITY | Tag prioritized display  |
| SEPARATOR    |                          |

When p2 is set to INFORMATION (select from the items below)

|                   |                                  |
|-------------------|----------------------------------|
| ALARM             | Alarm summary                    |
| MESSAGE           | Message summary                  |
| MEMORY            | Memory summary                   |
| MODBUS_CLIENT     | ModbusTCP status display         |
| MODBUS_MASTER     | ModbusRTU status display         |
| RELAY             | Relay status display             |
| EVENT_SWITCH      | Event switch status display      |
| REPORT            | Report display                   |
| TO_HISTORY        | To the historical display        |
| TO_HISTORY_D      | To historical (display data)     |
| TO_HISTORY_E      | To historical (event data)       |
| TO_OVERVIEW       | To the overview display          |
| SORT_KEY          | Sort key switching               |
| SORT_ORDER        | Sort order switching             |
| DISP_ITEM         | Date/user name switching         |
| DATA_KIND         | Data type switching              |
| DATE/FILE         | Date/file name switching         |
| SELECT_SAVE       | Select save                      |
| REPORT_CHANNEL    | Report channel display switching |
| ALL_SAVE          | All save                         |
| MANUAL_SAVE       | Save manual samples              |
| REPORT_SAVE       | Save reports                     |
| EXPAND            | Expand                           |
| DATA_SAVE_MODE    | Data save mode                   |
| COLUMN_BAR        | Stacked bar graph                |
| COLUMN_BAR_DISP   | Single graph or dual graph       |
| COLUMN_BAR_SELECT | Selects bar or group             |

|                                |                          |
|--------------------------------|--------------------------|
| REPORT_GROUP1 to REPORT_GROUP6 | Selects the report group |
| TAG_PRIORITY                   | Tag prioritized display  |
| SEPARATOR                      |                          |

When p2 is set to LOG (select from the items below)

|            |                   |
|------------|-------------------|
| LOGIN_LOG  | Login log         |
| ERROR_LOG  | Error log         |
| COMMU_LOG  | Communication log |
| FTP_LOG    | FTP log           |
| WEB_LOG    | Web log           |
| MAIL_LOG   | E-mail log        |
| SNTP_LOG   | SNTP log          |
| DHCP_LOG   | DHCP log          |
| MODBUS_LOG | Modbus log        |
| SEPARATOR  |                   |

When p2 is set to 4PANEL (select from the items below)

|                    |                 |
|--------------------|-----------------|
| 4PANEL1 to 4PANEL4 | Selects 4-panel |
| SEPARATOR          |                 |

When p2 is set to CUSTOM\_PANEL (select from the items below)

|                         |                                   |
|-------------------------|-----------------------------------|
| INTERNAL1 to INTERNAL3  | Selects one from internal 1 to 3  |
| EXTERNAL1 to EXTERNAL25 | Selects one from external 1 to 25 |
| NEW                     | New                               |

When p2 is set to ANNUNCIATOR (select from the items below)

|           |        |
|-----------|--------|
| EXPAND    | Expand |
| SEPARATOR |        |

**Example** Register the following items to the Trend main menu's sub menu: SCALE and DIGITAL.

```
SM DISP_SUB, TREND, SCALE, DIGITAL
```

- Description**
- Items that you can set for p3 and subsequent parameters vary depending on p2.
  - If parameter p3 and subsequent parameters are omitted, all menu items are hidden.
  - A command error occurs if you specify the same menu item multiple times.
  - You can specify up to three separators. If you specify more than three, an error occurs.
  - You cannot specify EXPAND for log and 4-panel.
  - You cannot omit parameters using delimiters (, ;).
  - The SM DISP\_SUB? command causes the DX to return sub menu items whose display is turned off.
  - You cannot set the first menu item to "SEPARATOR."
  - The display group parameter "GROUP1" to "GROUP36" and the auto switching parameter "AUTO" on/off setting apply to the trend, digital, bar graph, and historical trend menus. (For example, if you set AUTO to off for the trend menu, and then set AUTO to on for the

### 3.4 Setting Commands (Setting)

- digital menu, AUTO is turned on for the trend, digital, bar graph, and historical trend menus.)
- When p2 is set to ANNUNCIATOR, the DX1000 does not have submenus.

#### Setting the function menu

p1 Type (FUNC)

p2 ≥ Menu items to display

The DX displays the functions that you select from below in the menu in the specified order. The DX does not display menu items that are not specified.

|                  |                                   |
|------------------|-----------------------------------|
| ALARMACK         | Alarm acknowledge                 |
| ALARM_RESET      | Alarm display reset               |
| MESSAGE          |                                   |
| FREE_MESSAGE     |                                   |
| MEDIA_EJECT      |                                   |
| SNAPSHOT         |                                   |
| MANUAL_SAMPLE    |                                   |
| TRIGGER          | Event trigger                     |
| SAVE_DISPLAY     |                                   |
| SAVE_EVENT       |                                   |
| SAVE_STOP        |                                   |
| MATH_START/STOP  |                                   |
| MATH_RESET       |                                   |
| MATH_ACK         | Computed data dropout acknowledge |
| EDGE_SWITCH      | Presses event edge switch         |
| TIMER_RESET      |                                   |
| MATCH_T_RESET    | Resets single match time timer    |
| KEYLOCK          | Enables or disables key lock      |
| LOGOUT           |                                   |
| PASSWORD_CHANGE  |                                   |
| RATE_CHANGE      | Display rate 1 or display rate 2  |
| BATCH            |                                   |
| TEXT_FIELD       |                                   |
| FAVORITE_REGIST  | Registers as favorite             |
| 4PANEL           |                                   |
| JUMP_DISPLAY     | Registers the screen to return to |
| SYSTEM_INFO      |                                   |
| NETWORK_INFO     |                                   |
| SNTP             |                                   |
| EMAIL_START/STOP |                                   |
| EMAIL_TEST       |                                   |
| FTP_TEST         |                                   |
| BUILDER          | Custom display builder            |

**Example** Display FREE MESSAGE and SNAPSHOT in the function menu.

SMFUNC, FREE\_MESSAGE, SNAPSHOT

- Description**
- A command error occurs if you specify the same menu item multiple times.
  - You cannot specify "SEPARATOR."
  - You cannot omit parameters using delimiters (, .).
  - You cannot hide "LOGOUT." If you do not include it in the parameters, it is displayed as the last item.

**Query**

|                    |                                       |
|--------------------|---------------------------------------|
| SM ?               | When querying all menus               |
| SM DISP_MAIN?      | When querying all main menu items     |
| SM DISP_SUB?       | When querying all submenu items       |
| SM DISP_SUB,TREND? | When querying the trend submenu       |
| SM FUNC?           | When querying all function menu items |

#### SY Sets a four panel display

**Syntax** SY p1, p2, p3, p4, p5, p6, p7, p8, p9, p10, p11<terminator>

- p1 Batch group number  
Set this parameter to 1 when multi batch (/BT2) is not in use
- p2 Screen number (1 to 4)
- p3 Screen group name (up to 16 characters)
- p4 Screen 1 type
- |              |                              |
|--------------|------------------------------|
| TREND        |                              |
| DIGITAL      |                              |
| BAR          |                              |
| OVERVIEW     |                              |
| ALARM        |                              |
| MESSAGE      | Message summary              |
| MEMORY       | Memory summary               |
| MODBUS-M     | Modbus master status display |
| MODBUS-C     | Modbus client status display |
| RELAY        | Relay status display         |
| REPORT       | Report display               |
| COLUMN_BAR   |                              |
|              | Stacked bar graph            |
| ANNUNCIATOR  |                              |
|              | Annunciator display          |
| EVENT_SWITCH |                              |
|              | Event switch status display  |
- p5 Number of the group to display in screen 1
- p6 Screen 2 type (see p4)
- p7 Number of the group to display in screen 2
- p8 Screen 3 type (see p4)
- p9 Number of the group to display in screen 3
- p10 Screen 4 type (see p4)
- p11 Number of the group to display in screen 4
- Query** SY[p1, [p2]]?

Example Set screen number 1 as follows:

Four panel name: Temperature  
 Screen 1: Trend display, group 1  
 Screen 2: Digital display, group 3  
 Screen 3: Alarm summary  
 Screen 4: Overview

```
SY1,1, Temperature, TREND,1, DIGITAL, 3,
ALARM, 1, OVERVIEW
```

- Description
- Parameters p5, p7, p9, and p11 are invalid when the corresponding screen types (p4, p6, p8, and p10) are not set to TREND, DIGITAL, or BAR.
  - The setting p4=MODBUS-M is only valid if the serial interface protocol is set to MODBUS-M.
  - The setting p4=REPORT or COLUMN\_BAR is only valid on models with the math option.
  - When multi batch (/BT2) is in use, four panel display can only be displayed in batch single mode. Therefore, you cannot specify the following screens.  
 Modbus master status display, Modbus client status display, relay status display, report display, stacked bar graph, annunciator display, and event switch status display
  - Set p1 by referring to the table in section 3.3.

## 3.5 Setting Commands (Control)

### **BT** Sets a batch name

**Syntax** BT p1,p2,p3<terminator>  
 p1 Batch group number  
 Set this parameter to 1 when multi batch (/BT2) is not in use  
 p2 Batch number (up to 32 characters)  
 p3 Lot number (up to 8 digits)

**Query** BT[p1]?

**Example** Assign the batch number "PRESS5LINE" and lot number 007 to batch group 1.  
 BT1,PRESS5LINE,007

**Description** Set p1 by referring to the table in section 3.3.

### **BU** Sets a batch comment

**Syntax** BU p1,p2,p3<terminator>  
 p1 Batch group number  
 Set this parameter to 1 when multi batch (/BT2) is not in use  
 p2 Comment number (1 to 3)  
 p3 Comment string (up to 50 characters)

**Query** BU[p1,[p2]]?

**Example** Set comment number 2 to "THIS\_PRODUCT\_IS\_COMPLETED."  
 BU1,2,THIS\_PRODUCT\_IS\_COMPLETED

**Description** Set p1 by referring to the table in section 3.3.

### **UD** Switches the screen

**To return to the screen that was used before you started using communication commands**

**Syntax** UD p1<terminator>  
 p1 Screen type (0)

**Example** Return to the screen that was used before you started using communication commands.  
 UD0

**To switch to one panel display**

**Syntax** UD p1,p2,p3<terminator>  
 p1 Screen type (1)  
 p2 Display item

|          |                                       |
|----------|---------------------------------------|
| TREND    | Trend display                         |
| DIGITAL  | Digital display                       |
| BAR      | Bar graph display                     |
| OVERVIEW | Overview display<br>(alarm indicator) |
| ALARM    | Alarm summary display                 |
| MESSAGE  | Message summary display               |
| MEMORY   | Memory summary display                |
| MODBUS-M | Modbus master status display          |
| MODBUS-C | Modbus client status display          |
| RELAY    | Relay status display                  |
| REPORT   | Report display                        |



### 3.5 Setting Commands (Control)

HISTRICAL Historical trend display  
 COLUMN\_BAR Stacked bar graph  
 INTERNAL1 to INTERNAL3 Custom display,  
 internal 1 to 3  
 EXTERNAL1 to EXTERNAL25 Custom display,  
 external 1 to 25  
 ANNUNCIATOR Annunciator display  
 EVENT\_SWITCH Event switch status display

p3 Display group number

**Example** Set the display to one screen trend, and set the number of the group to display in the screen to 4.

UD1, TREND, 4

- Description**
- The setting p4=MODBUS-M is only valid if the serial interface protocol is set to MODBUS-M.
  - The setting p4=REPORT is only valid on models with the math option.
  - When multi batch (/BT2) is in use, there are limitations on the screens that the DX can switch to depending on the screen mode.

#### Batch overview mode

Overview display, Modbus master status display, Modbus client status display, relay status display, report display, stacked bar graph, annunciator display, and event switch status display

#### Batch single mode

Trend display, digital display, bar graph display, overview display, alarm summary display, message summary display, memory summary display, historical trend display, and custom display

- When multi batch (/BT2) is in use, you cannot specify a display group that does not belong to the currently displayed batch group.
- Set parameter p3 by referring to the table in section 3.3.

#### To switch to four panel display

**Syntax** UD p1, p2, p3, p4, p5, p6, p7, p8, p9  
 <terminator>

p1 Screen type (2)  
 p2 Screen 1 type (see SY; sets a screen group)  
 p3 Number of the group to display in screen 1  
 p4 Screen 2 type (see SY; sets a screen group)  
 p5 Number of the group to display in screen 2  
 p6 Screen 3 type (see SY; sets a screen group)  
 p7 Number of the group to display in screen 3  
 p8 Screen 4 type (see SY; sets a screen group)  
 p9 Number of the group to display in screen 4

**Example** Assign group 1 to screen 1, group 2 to screen 2, group 3 to screen 3, group 4 to screen 4, and set the screen type of all screens to trend.

UD2, TREND, 1, TREND, 2, TREND, 3, TREND, 4

- Description**
- You can use this command on the DX2000.
  - When multi batch (/BT2) is in use, you cannot specify a display group that does not belong to the currently displayed batch group. You cannot use this command in batch overview mode.

#### To display a specific four panel display

**Syntax** UD p1, p2<terminator>  
 p1 Display type (3)  
 p2 Four panel configuration number  
 0 Displays the four panel configuration that you specify directly.  
 1 to 4 Displays a four panel configuration that you set using SY (sets a screen group).

- Description**
- You can use this command on the DX2000.
  - When multi batch (/BT2) is in use, you cannot use this command in batch overview mode.

#### To switch the operation screen

**Syntax** UD p1, p2, p3, p4, p5, p6, p7, p8, p9, p10  
 <terminator>

p1 Screen type (4)  
 p2 Automatic display switching (ON, OFF)  
 p3 Switches between all channel display and group display (ALL, GROUP)  
 p4 Scale display (ON, OFF)  
 p5 Digital display (ON, OFF)  
 p6 Message display options  
 1 Normal display  
 2 List display  
 p7 Trend space (ON, OFF)  
 p8 Auto zone (ON, OFF)  
 p9 Fine grid (ON, OFF)  
 p10 Tag prioritized display (ON, OFF)

**Example** Enable automatic display switching, switch to the group display, turn on the scale display, and turn off the digital display.

UD4, ON, GROUP, ON, OFF

- Description**
- Parameter p2 is valid for the trend, digital, and bar graph displays. Use the SE command to set the switching interval.
  - Parameters p3 to p7 are valid for the trend display.
  - When multi batch (/BT2) is in use, you cannot use this command in batch overview mode.

#### To switch the operation screen mode

**Syntax** UD p1, p2, p3<terminator>  
 p1 Display type (5)  
 p2 Operation screen mode (COMMON, BATCH)  
 COMMON Batch overview mode  
 BATCH Batch single mode  
 p3 Batch group number

- Description**
- You can use this command when multi batch (/BT2) is in use.

- Parameter p3 is valid when p2 is set to BATCH.
- Set parameter p3 by referring to the table in section 3.3.

### **PS** Starts or stops measurement

**Syntax** PS p1,p2<terminator>

p1 Measurement start or stop

|   |       |
|---|-------|
| 0 | Start |
| 1 | Stop  |

p2 Batch group number

|           |                    |
|-----------|--------------------|
| 0         | All groups         |
| 1, 2, ... | Batch group number |

**Example** Start measurement.

PS0

- Description**
- When you start measurement, the DX records display, event, and report data to the internal memory.
  - Parameter p2 is valid when multi batch (/BT2) is in use. If you omit p2, it is the same as setting p2 to zero.
  - Set parameter p2 by referring to the table in section 3.3.

### **AK** Clears alarm output (acknowledge alarms)

**Syntax** AK p1<terminator>

p1 Executes alarm acknowledge (0)

|   |                      |
|---|----------------------|
| 0 | Alarm acknowledge    |
| 2 | Resets alarm display |

**Example** Clear alarm output (acknowledge alarms).

AK0

- Description**
- If you set p1 to 2 when annunciator mode is on and the sequence is not ISA-M, an error occurs.
  - If you send this command with p1 set to 2 before acknowledging the alarms, nothing happens.

### **EV** Executes manual sample, generates a manual trigger, takes a snapshot, or causes a timeout

**Syntax** EV p1,p2<terminator>

p1 Type of operation

|   |                                   |
|---|-----------------------------------|
| 0 | Executes manual sampling.         |
| 1 | Generates a manual trigger.       |
| 2 | Takes a snapshot.                 |
| 3 | Causes a timeout in display data. |
| 4 | Causes a timeout in event data.   |

p2 Batch group number

|           |                    |
|-----------|--------------------|
| 0         | All groups         |
| 1, 2, ... | Batch group number |

**Example** Execute manual sampling.

EV0

- Description**
- EV1 is only valid when the key trigger is set to ON using the event data sampling condition command (TE command). This command is equivalent to a key trigger.
  - When multi batch (/BT2) is in use, p2 is valid when p1 is set to 3 or 4. If you omit p2, it is the same as setting p2 to zero.
  - Set parameter p2 by referring to the table in section 3.3.

### **CL** Executes manual SNTP

**Syntax** CL p1<terminator>

p1 Executes manual SNTP(0)

**Example** Synchronize the clock.

CL0

### **CV** Switches between normal and secondary trend interval

**Syntax** CV p1<terminator>

p1 Trend interval (0, 1)

|   |  |
|---|--|
| 0 | Switches to the normal trend interval    |
| 1 | Switches to the secondary trend interval |

**Example** Set the trend interval to the secondary trend interval.

CV1

### **MS** Writes a message (display and write)

**Syntax** MS p1,p2,p3,p4<terminator>

p1 Message number (1 to 100)

p2 Message write destination

|       |                           |
|-------|---------------------------|
| GROUP | A specified display group |
| ALL   | All display groups        |

All display groups in the specified batch group number (p4) when multi batch (/BT2) is in use

p3 Display group number

The display group number when p2 is set to GROUP

Carries no meaning when p2 is set to ALL

p4 Message write destination batch group number

**Example** Write the message in message number 8 to display group 1.

MS8, GROUP, 1

**Description**

- If you omit p2, the message is written to all display groups.

- Parameter p4 is only valid when multi batch (/BT2) is in use. When multi batch (/BT2) is in use, you cannot omit p4.
- Set parameters p3 and p4 by referring to the table in section 3.3.



### 3.5 Setting Commands (Control)

#### **BJ** Write a free message

Syntax `BJ p1,p2,p3,p4,p5<terminator>`  
p1 Message number (1 to 10)  
p2 Message (up to 32 characters)  
p3 Message write destination  
GROUP A specified display group  
ALL All display groups  
All display groups in the specified batch group number (p5) when multi batch (/BT2) is in use  
p4 Display group number  
The display group number when p2 is set to GROUP  
Carries no meaning when p2 is set to ALL  
p5 Message write destination batch group number

Example Using message number 3, write the string "ALARM" to all groups.  
`BJ3,ALARM,ALL`

Description

- If you omit p3, the message is written to all display groups.
- Parameter p5 is only valid when multi batch (/BT2) is in use. When multi batch (/BT2) is in use, you cannot omit p5.
- Set parameters p3, p4, and p5 by referring to the table in section 3.3.

#### **EJ** Changes the login password

Syntax `EJ p1,p2,p3<terminator>`  
p1 Old password (up to 8 characters)  
p2 New password (up to 8 characters)  
p3 New password (up to 8 characters)

Example Change the password from "PASS001" to "WORD005."  
`EJPASS001,WORD005,WORD005`

#### **TL** Starts, stops, resets computation (MATH) or clears the computation dropout status display

Syntax `TL p1,p2<terminator>`  
p1 Type of operation  
0 Start computation  
1 Stop computation  
2 Reset computation  
3 Clear the computation data dropout display  
p2 Batch group number  
0 All computation channels  
1, 2, ... Batch group number

Example Start computation.  
`TL0`

Description

- You cannot use this command while the DX is saving or loading setup data.
- You can use this command on models with the /M1 or /PM1 option.

- When multi batch (/BT2) is in use, p2 is valid when p1 is set to 2 (reset computation). If you omit p2, it is the same as setting p2 to zero. If p2 is set to zero, the DX resets the values of all computation channels.
- Set parameter p2 by referring to the table in section 3.3.

#### **DS** Switches the execution mode between operation and setting

Syntax `DS p1<terminator>`  
p1 Mode  
0 Operation mode  
1 Basic setting mode

Example Set the mode to basic setting.  
`DS1`

Description

- You cannot set p1 to 1 when the DX is recording (memory sampling) or computing, is formatting an external storage medium, or is storing data to an external storage medium.
- You cannot set p1 to zero when the DX is formatting an external storage medium or is storing data to an external storage medium.
- To activate the settings you have changed using basic setting commands, you must use the XE command to save the settings. Be sure to use the XE command to save the settings before switching the execution mode back to operation. If you do not save the settings and change the execution mode back to operation, the DX returns to the previous settings.

#### **LO** Loads setup data for setting mode

Syntax `LO p1,p2<terminator>`  
p1 File name (up to 32 characters)  
p2 Medium  
0 CF slot  
1 USB

Example Load setup data for setting mode from the setup file named SETFILE1.PDL.  
`LOSETFILE1`

Description

- Do not specify the extension when specifying the file name.
- You can set p2 to 1 on models with the /USB1 USB interface option.
- If you omit parameter p2, the medium is set to CF slot.
- You cannot use this command to load setup data for basic setting mode. To load setup data for both setting and basic setting modes, use the YO command.
- You cannot use this command when there is no external storage medium inserted in the DX.

**LI** Saves setup data

Syntax LI p1<terminator>  
 p1 File name (up to 32 characters)  
 p2 Medium  
     0 CF slot  
     1 USB

Example Saves setup data for both setting and basic setting modes to a file named SETFILE2 on the CF card.

```
LISETFILE2
```

- Description
- Do not specify the extension when specifying the file name.
  - You can set p2 to 1 on models with the /USB1 USB interface option.
  - If you omit parameter p2, the medium is set to CF slot.
  - A .PDL extension is attached to the file that you save. This command is equivalent to the YI command.
  - You cannot use this command when there is no external storage medium inserted in the DX.

**CM** Sets communication input data

Syntax CM p1,p2<terminator>  
 p1 Communication input data number  
 p2 Communication input data  
     The selectable range is -9.9999E+29  
     to -1.0000E-30, 0, and 1.0000E-30 to  
     9.9999E+29.  
     Five significant digits

Query CM?

Example Enter 1.0000E-10 to communication input data C01.

```
CMC01,1.0000E-10
```

Description You can use this command on models with the /M1 or /PM1 option.

**CE** Sets communication input of an external input channel

Syntax CE p1,p2<terminator>  
 p1 External input channel number  
 p2 Data value (-30000 to 30000)

Query CE[p1]?

Example Set external input channel number 440 to 12345.

```
CE440,12345
```

Description You can use this command on models with the /MC1 external input channel option.

**EM** Starts or stops the e-mail transmission function

Syntax EM p1<terminator>  
 p1 Type of operation  
     0 Start  
     1 Stop

Example Start the e-mail transmission function.  
 EM0

Description To use the e-mail transmission function, you must configure the Ethernet interface, set e-mail addresses, and enter the contents you want to transmit.

**CU** Recovers Modbus manually

Syntax CU p1<terminator>  
 p1 Communication type  
     0 Modbus client (Ethernet)  
     1 Modbus master (serial)

**BV** Enters a string (can only be used during serial communications)

Syntax BV p1,p2<terminator>  
 p1 0  
 p2 String (up to 100 characters)

Example Enter the string "user123."

```
BV0,user123
```

Description You can enter a string when the DX displays a screen to enter a string.

**KE** Key operation command

Syntax KE p1<terminator>  
 p1 Key  
     F1 to F7 Soft keys 1 to 7  
     ESC ESC key  
     MENU MENU key  
     FUNC FUNC key  
     START START key  
     STOP STOP key  
     USER USER key  
     FAVORITE Favorite key  
     0 to 9 Number 0 to 9 keys  
     MINUS Numeric minus key  
     DOT Numeric decimal key  
     DISP DISP/ENTER key  
     UP Up arrow key  
     DOWN Down arrow key  
     RIGHT Right arrow key  
     LEFT Left arrow key

Example Press the DISP/ENTER key.

```
KEDISP
```

Description This command is analogous to operating the keys on the front panel. For a key sequence, send the appropriate key commands in the same order as you would when you press the keys on the front panel.

**YO** Loads a setup file for basic setting mode

Syntax YO p1,p2<terminator>  
 p1 Name of the file to load (up to 32 characters)  
 p2 Medium

### 3.5 Setting Commands (Control)

|   |         |
|---|---------|
| 0 | CF slot |
| 1 | USB     |

- Description
- Do not include the extension when specifying the file name.
  - You can set p2 to 1 on models with the /USB1 USB interface option.
  - If you omit parameter p2, the medium is set to CF slot.

#### **YC** Clears measured and computed data and initializes setup data

Syntax

YC p1<terminator>

p1 Types of data to clear

|   |  |
|---|--|
| 0 | Measured and computed data as well as setup data for setting and basic setting modes |
| 1 | Measured and computed data as well as setup data for setting mode                    |
| 2 | Measured and computed data   |

Example Clear the measured and computed data.  
YC2

#### **IR** Resets a relative timer

Syntax

IR p1<terminator>

p1 Number of the timer to reset

|           |              |
|-----------|--------------|
| 0         | All timers   |
| 1, 2, ... | Timer number |

Example Reset timer 2.  
IR2

Description Set p1 by referring to the table in section 3.3.

#### **MA** Resets a match time timer

Syntax

MA p1<terminator>

p1 Number of the timer to reset

|           |              |
|-----------|--------------|
| 1, 2, ... | Timer number |
|-----------|--------------|

Example Reset match time timer 2.  
MA2

Description

- Set p1 by referring to the table in section 3.3.
- This command is valid for expired match time timers whose operation is set to single.

#### **CW** Sets an event switch

Syntax

CW p1,p2,p3<terminator>

p1 Type of operation (LEVEL, EDGE)

p2 Event switch number (1 to 30)

p3 On/off (OFF, ON)

Parameter p3 is valid when p1 is set to LEVEL.

Example Set event level switch 2 to ON.  
CWLEVEL, 2, ON

#### **LR** Loads custom display screens

Syntax

LR p1,p2,p3,p4<terminator>

p1 Medium (fixed at 0)

|   |                  |
|---|------------------|
| 0 | External CF card |
|---|------------------|

p2 Screen range (ALL, SELECT)

|        |  |
|--------|--|
| ALL    | All screens<br>Loads all of the custom display screens that are stored in the specified directory. |
| SELECT | A specific screen<br>Loads a specific custom display setup file to the screen that you specify.    |

When p2 is set to ALL

p3 Name of the directory to load from (up to 20 characters)

When p2 is set to SELECT

p3 Custom display screen to load into (INTERNAL1 to INTERNAL3 or EXTERNAL 1 to EXTERNAL 25)

p4 Name of the file to load from (up to 32 characters)

- Do not specify the extension.
- The directory to load from is fixed to the root directory.

Example Load the custom display setup file named CD1 from the root directory to INTERNAL2.

LR0, SELECT, INTERNAL2, CD1

- Description
- You can only use this command on models with the /DC1 custom display option.
  - An error occurs when there is no external storage medium (CF) inserted in the DX or when there is an error in the external storage medium.
  - An error occurs if the external storage medium (CF) does not contain the directory or file name that you specify.

#### **LW** Saves custom display screens

Syntax

LW p1,p2,p3,p4<terminator>

p1 Medium (fixed at 0)

|   |                  |
|---|------------------|
| 0 | External CF card |
|---|------------------|

p2 Screen range (ALL, CLEAR+ALL, SELECT)

|           |   |
|-----------|---|
| ALL       | All screens<br>Saves all of the custom display screens that is currently in use to the specified directory.   |
| CLEAR+ALL | All screens<br>Clears all files in the save destination directory, and then saves all of the custom display screens that is currently in use to that directory. |

SELECT A specific screen

Saves a specific custom display screen to a file that you specify. If there is a file with the same name, it is overwritten.

When p2 is set to ALL

p3 Name of the directory to save to (up to 20)

When p2 is set to SELECT

p3 Custom display screen to save  
(INTERNAL1 to INTERNAL 3, EXTERNAL1 to EXTERNAL 25)

p4 Name of the file to save to (up to 32)

- Do not specify the extension.
- The directory to save to is fixed to the root directory.

**Example** Save the custom display setup file named INTERNAL3 to a file named CD3 in the root directory.

LR0, SELECT, INTERNAL3, CD3

**Description**

- You can only use this command on models with the /DC1 custom display option.
- An error occurs when there is no external storage medium (CF) inserted in the DX or when there is an error in the external storage medium.
- An error does not occur even if there is not enough free space on the external storage medium (CF).
- To check whether or not the save operation was successful, check the status byte. For details on the status byte, see section 5.2.

## 3.6 Basic Setting Commands

### WU Sets the environment

**Settings** GENERAL, BATCH, DISPLAY, MESSAGE, INPUT, ALARM, SECURITY, MEDIA, MATH, REPORT, SERVICEPORT, DECIMALPOINT, POP3, ALARM\_LEVEL, ALARM\_COLOR, TAG, MENU, REMOTE, and FTPSERVER

#### General environment settings

**Syntax** WU p1,p2,p3,p4<terminator>

p1 Setting type (GENERAL)

p2 Selects tag or channel number

|         |                |
|---------|----------------|
| TAG     | Tag            |
| CHANNEL | Channel number |

p3 Language

|          |
|----------|
| ENGLISH  |
| JAPANESE |
| CHINESE  |
| GERMAN   |
| FRENCH   |

p4 Remote control ID (OFF, 0 to 31)

#### Batch settings

**Syntax** WU p1,p2,p3,p4,p5<terminator>

p1 Setting type (BATCH)

p2 Batch function (OFF, ON, MULTIBATCH)

|            |                                  |
|------------|----------------------------------|
| OFF        | Disables the batch function      |
| ON         | Enables the batch function       |
| MULTIBATCH | Enables the multi batch function |

p3 Number of lot number digits (OFF, 4, 6, 8)

p4 Auto increment (ON, OFF)

p5 Number of batch groups (DX1000: 2 to 6, DX2000 with standard memory: 2 to 6, DX2000 with large memory: 2 to 12)

**Description**

- Parameters p3 and p4 are valid when p2 is set to ON.
- Parameters p3, p4, and p5 are valid when p2 is set to MULTIBATCH.

#### Display settings

**Syntax** WU p1,p2,p3,p4<terminator>

p1 Setting type (DISPLAY)

p2 Trend type

|          |                  |
|----------|------------------|
| T-Y      | T-Y display      |
| CIRCULAR | Circular display |

p3 Partial expansion(OFF, ON)

p4 Trend interval switching (OFF, ON)

**Description**

- Parameters p3 and p4 are valid when p2 is set to T-Y.
- When multi batch is in use, p4 is fixed at OFF.

### 3.6 Basic Setting Commands

#### Message settings

Syntax WU p1,p2,p3,p4<terminator>  
p1 Setting type (MESSAGE)  
p2 Where to write messages that you enter using keys  
COMMON All display groups  
SEPARATE Display group that you specify  
p3 Power failure message (OFF, ON)  
p4 Message change (OFF, ON)

#### Input settings

Syntax WU p1,p2<terminator>  
p1 Setting type (INPUT)  
p2 How to detect values that exceed the scale  
FREE When the measurement range is exceeded  
OVER When  $\pm 105\%$  of the scale is exceeded

#### Alarm settings

Syntax WU p1,p2,p3,p4,p5<terminator>  
p1 Setting type (ALARM)  
p2 Alarm suppression function (OFF, ON)  
p3 Annunciator mode (OFF, ON)  
p4 Sequence (ISA-A-4, ISA-A, ISA-M)  
ISA-A-4 No lock-in  
ISA-A Lock-in  
ISA-M Double lock-in  
p5 Color when no alarms are activated (GREEN, WHITE)  
Description Parameters p4 and p5 are valid when p3 is set to ON.

#### Security settings

Syntax WU p1,p2,p3<terminator>  
p1 Setting type (SECURITY)  
p2 Key  
OFF Disables security features  
KEYLOCK Locks the keys  
LOGIN Enables the login function  
p3 Communication  
OFF Disables security features  
LOGIN Enables the login function

#### Media settings

Syntax WU p1,p2,p3<terminator>  
p1 Setting type (MEDIA)  
p2 Automatic saving (OFF, ON)  
p3 Media FIFO (OFF, ON)  
Example Use media FIFO.  
WUMEDIA, ON, ON  
Description Parameter p3 is valid when p2 is set to ON.

#### Computation settings

Syntax WU p1,p2,p3,p4<terminator>  
p1 Setting type (MATH)  
p2 Display on error  
+OVER Positive overflow  
-OVER Negative overflow

p3 Data when the SUM or AVE value overflows  
ERROR Sets the computed result to computation error  
SKIP Discards the data that overflowed and continues the computation  
LIMIT Process the data as follows:  
• For measurement channels that do not have linear scaling specified, the DX sets the data to the upper or lower limit of the measurement range.  
• For measurement channels that have linear scaling specified, the DX sets the data to the specified scan upper or lower limit.  
• For computation channels, the DX sets the data to the specified span upper or lower limit.  
p4 Data when the MAX, MIN, or P-P value overflows  
OVER Computes using the overflow data  
SKIP Discards the data that overflowed and continues the computation

#### Report settings

Syntax WU p1,p2,p3,p4<terminator>  
p1 Setting type (REPORT)  
p2 Report computation type 1  
MAX Maximum value  
MIN Minimum value  
AVE Average value  
SUM Integrated value  
INST Instantaneous value  
p3 Report computation type 2  
OFF Disables report computation  
MAX Maximum value  
MIN Minimum value  
AVE Average value  
SUM Integrated value  
INST Instantaneous value  
p4 Report computation type 3  
Same as p3.  
p5 Report computation type 4  
Same as p3.  
p6 Creation of "hourly+daily," "daily+weekly," and "daily+monthly" files  
COMBINE Saves reports to one file.  
SEPARATE Saves reports to separate files.  
For parameters p2 to p5, you cannot specify the same computation type except OFF.

#### Service ports

Syntax WU p1,p2,p3,p4,p5<terminator>  
p1 Setting type (SERVICEPORT)  
p2 FTP service port (1 to 65535)  
p3 Web service port (1 to 65535)

- p4 SNTP service port (1 to 65535)
- p5 Modbus service port (1 to 65535)

**Decimal point type**

- Syntax WU p1,p2<terminator>
- p1 Setting type (DECIMALPOINT)
  - p2 Decimal type (POINT, COMMA)
    - POINT Uses a period for the decimal point.
    - COMMA Uses a comma for the decimal point.

**Detailed POP3 settings**

- Syntax WU p1,p2,p3<terminator>
- p1 Setting type (POP3)
  - p2 Delay after accessing POP3 until transmission (seconds; 0 to 10)
  - p3 POP3 login method (PLAIN, APOP)

**Alarm level settings**

- Syntax WU p1,p2<terminator>
- p1 Setting type (ALARM\_LEVEL)
  - p2 Levels (1-2-3-4, 1-4-2-3, 1-4-3-2)

**Alarm color settings**

- Syntax WU p1,p2,p3,p4,p5<terminator>
- p1 Setting type (ALARM\_COLOR)
  - p2 Alarm level 1 color (RED, ORANGE, YELLOW, PINK)
  - p3 Alarm level 2 color (RED, ORANGE, YELLOW, PINK)
  - p4 Alarm level 3 color (RED, ORANGE, YELLOW, PINK)
  - p5 Alarm level 4 color (RED, ORANGE, YELLOW, PINK)

**Tag basic setting**

- Syntax WU p1,p2<terminator>
- p1 Setting type (TAG)
  - p2 Tag number usage (USE, NOT)

**Basic setting mode menu display settings**

- Syntax WU p1,p2<terminator>
- p1 Setting type (MENU)
  - p2 Basic setting mode menu display (ON, OFF)

**Remote contact input operation**

- Syntax WU p1,p2,p3,p4,p5,p6,p7,p8,p9<terminator>
- p1 Setting type (REMOTE)
  - p2 Remote contact 1 input (N.O, N.C)
    - N.O Normally opened
    - N.C Normally closed
  - p3 Remote contact 2 input (N.O, N.C)
  - p4 Remote contact 3 input (N.O, N.C)
  - p5 Remote contact 4 input (N.O, N.C)
  - p6 Remote contact 5 input (N.O, N.C)
  - p7 Remote contact 6 input (N.O, N.C)
  - p8 Remote contact 7 input (N.O, N.C)
  - p9 Remote contact 8 input (N.O, N.C)

- Description • Use this command on models with the remote control option.
- On models with the pulse input option, if you use the remote control input terminal as a pulse input terminal, the DX counts the rising pulse edges, independent of the remote control input settings.

**Detailed FTP server settings**

- Syntax WU p1,p2<terminator>
- p1 Setting type (FTPSERVER)
  - p2 Directory output format (MS-DOS, UNIX)
    - MS-DOS
    - UNIX

Query WU [p1] ?

- Example This is an example for general environment settings. Display tags, display in English, and turn remote control off.
- WUGENERAL, TAG, ENGLISH, OFF

**WO Sets alarm and DO settings****Alarm and DO settings**

- Syntax WO p1,p2,p3,p4,p5<terminator>
- p1 Alarm setting (ALARM)
  - p2 Reflash operation (ON, OFF)
  - p3 Interval for the low limit on the rate-of-change (1 to 32)
  - p4 Interval for the high limit on the rate-of-change (1 to 32)
  - p5 Hold/Not hold the alarm status display
    - HOLD
    - NONHOLD

Description If annunciator is set to ON in the alarm environment settings (using WU ALARM), p2 and p5 are fixed to the following values based on the annunciator sequence.

| Sequence | p2  | p5      |
|----------|-----|---------|
| ISA-A-4  | OFF | NONHOLD |
| ISA-A    | OFF | HOLD    |
| ISA-M    | OFF | HOLD    |

**Internal switch settings**

- Syntax WO p1,p2<terminator>
- p1 DO type (SWITCH)
  - p2 AND switch number
    - NONE No AND setting
    - S01 Only specify S01
    - S01-Sxx Specify S01 to Sxx where xx = {02 to 30}

**Output relay settings**

- Syntax WO p1,p2,p3,p4,p5<terminator>
- p1 DO type (RLY)
  - p2 Relay number
    - NONE No AND setting
    - I01 Only specify I01
    - I01-Ixx Specify I01 to Ixx where xx = {02 to 36}



### 3.6 Basic Setting Commands

- p3 Energize/De-energize the relay  
DE\_ENERGIZE  
ENERGIZE
- p4 Hold/Not hold the relay  
NONHOLD  
HOLD
- p5 Relay Action on ACK  
NORMAL  
RESET

Description Set parameter p2 by referring to the table in section 3.3.

If annunciator is set to ON in the alarm environment settings (using WU ALARM), p4 and p5 are fixed to the following values based on the annunciator sequence.

| Sequence | p4      | p5    |
|----------|---------|-------|
| ISA-A-4  | NONHOLD | RESET |
| ISA-A    | HOLD    | RESET |
| ISA-M    | HOLD    | RESET |

Query WO[p1]?

Example Specify no AND operation of the output relays, set the relay action to energize, and release the relay output when the alarm ACK operation is performed regardless of the alarm status.  
WORLY, NONE, ENERGINE, HOLD, RESET

### WH Sets alarm hysteresis

#### Measurement channels

- Syntax WH p1,p2,p3<terminator>
- p1 Channel type (MEASURE)
- p2 Hysteresis on high and low limit alarms (0 to 50)
- p3 Hysteresis on difference high and low limit alarms (0 to 50)

#### Computation channels

- Syntax WH p1,p2<terminator>
- p1 Channel type (MATH)
- p2 Hysteresis on high and low limit alarms (0 to 50)

#### External input channels

- Syntax WH p1,p2<terminator>
- p1 Channel type (EXTERNAL)
- p2 Hysteresis on high and low limit alarms (0 to 50)

Query WH[p1]?

Example Set the high and low limit alarm hysteresis for measurement channels to 4.0%, and the difference high and low limit alarm hysteresis to 0.0%.  
WHMEASURE, 40, 0

Description You can specify computation channels on models with the /M1 or /PM1 math option. You can specify external input channels on models with the external input channel option.

### XV Sets the scan interval and A/D integral time

- Syntax XV p1,p2,p3,p4<terminator>
- p1 1 (fixed)
- p2 Scan interval mode  
NORMAL  
FAST Fast sampling
- p3 Scan interval (25MS, 125MS, 250MS, 1S, 2S, 5S)
- p4 A/D integration time (AUTO, 600Hz, 50Hz, 60Hz, 100ms)

Query XV?

Example Set the scan interval to 1 second in normal mode.  
XV1, NORMAL, 1S

- Description
  - The combinations of available scan interval modes and scan intervals vary depending on the model. For details, see the *DX1000/DX2000 User's Manual (IM04L41B01-01E or IM04L42B01-01E)*.
  - You can set p4 to 600 Hz for fast sampling mode. You can choose 100 ms when the scan interval is set to 2 s or 5 s.
  - On models with multi batch (/BT2), you can only set p2 to NORMAL and p3 to 1S, 2S, or 5S.

### XB Sets burnout detection

- Syntax XB p1,p2<terminator>
- p1 Measurement channel number
- p2 Burnout processing  
OFF No processing  
UP Sets the computed result to positive overflow.  
DOWN Sets the computed result to negative overflow.

Query XB[p1]?

Example Set the measured result to UP (positive overflow) when channel 001 burns out.  
XB001, UP

Description Set p1 by referring to the table in section 3.3.

### XJ Sets RJC

#### When using the internal compensation circuit

- Syntax XJ p1,p2<terminator>
- p1 Measurement channel number
- p2 RJC mode (INTERNAL)

Query XJ[p1]?

Example Set the channel 001 RJC to internal compensation circuit.  
XJ001, INTERNAL

#### When using an external RJC

- Syntax XJ p1,p2,p3<terminator>
- p1 Measurement channel number
- p2 RJC mode (EXTERNAL)

Query p3 External RJC value (-20000 to 20000)  
 XJ[p1]?

Example Set the channel 002 RJC to external, and set the compensation value to 0  $\mu$ V.  
 XJ002,EXTERNAL,0

Description

- Set p1 by referring to the table in section 3.3.
- The unit of p3 is the  $\mu$ V.

### **XM** Sets memory sampling conditions

Syntax XM p1<terminator>  
 p1 Data type

|         |                             |
|---------|-----------------------------|
| DISPLAY | Display data                |
| EVENT   | Event data                  |
| E+D     | Display data and event data |

Query XM?

Example Set the memory sampling condition to display data.  
 XMDISPLAY

Description You cannot specify E+D when:

- Multi batch (/BT2) is in use.
- Trend interval switching is on.

### **RF** Sets key lock

#### When p1 is set to KEY

Syntax RF p1,p2,p3,p4,p5,p6,p7<terminator>  
 p1 Type (KEY)  
 p2 START key (FREE, LOCK)  
 p3 STOP key (FREE, LOCK)  
 p4 MENU key (FREE, LOCK)  
 p5 USER key (FREE, LOCK)  
 p6 DISP/ENTER key (FREE, LOCK)  
 p7 FAVORITE key (FREE, LOCK)

#### When p1 set to FUNC (function key)

Syntax RF p1,p2,p3,p4,p5,p6,p7,p8  
 <terminator>  
 p1 Type (FUNC)  
 p2 Alarm ACK (FREE, LOCK)  
 p3 Message/batch key (FREE, LOCK)  
 p4 Math key (FREE, LOCK)  
 p5 Data save (FREE, LOCK)  
 p6 E-mail/FTP (FREE, LOCK)  
 p7 Time set (FREE, LOCK)  
 p8 Display Function (FREE, LOCK)

#### When p1 is set to MEDIA (external storage media)

Syntax RF p1,p2,p3<terminator>  
 p1 Type (MEDIA)  
 p2 External storage media operation (FREE, LOCK)  
 p3 Setup loading operation (FREE, LOCK)

Query RF[p1]?

Example Lock the MENU key (leave other keys unlocked).  
 RFKEY,FREE,FREE,LOCK,FREE,FREE,FREE

### **RN** Sets basic key login

Syntax RN p1,p2<terminator>  
 p1 Auto logout (OFF, 1MIN, 2MIN, 5MIN, 10MIN)  
 p2 Operation when logged out

|         |                                |
|---------|--------------------------------|
| OFF     | Disables DX operation          |
| DISPLAY | Only enables screen operations |

Query RN?

Example Set the auto logout time to 1 minute, and disable the DX operation when logged out.  
 RN1MIN,OFF

### **RP** Sets user limitations

Syntax RP p1,p2,...<terminator>  
 p1 User limitation number (1 to 10)  
 p2 User limitation item (KEY, FUNC, MEDIA)

Description Parameters p3 and subsequent parameters vary depending on the p2 setting as follows:

#### When p2 is set to KEY

p3 START key (FREE, LOCK)  
 p4 STOP key (FREE, LOCK)  
 p5 MENU key (FREE, LOCK)  
 p6 USER key (FREE, LOCK)  
 p7 DISP/ENTER key (FREE, LOCK)  
 p8 FAVORITE key (FREE, LOCK)

#### When p2 set to FUNC (function key)

p3 Alarm ACK (FREE, LOCK)  
 p4 Message/batch key (FREE, LOCK)  
 p5 Math key (FREE, LOCK)  
 p6 Data save (FREE, LOCK)  
 p7 E-mail/FTP (FREE, LOCK)  
 p8 Time set (FREE, LOCK)  
 p9 Display Function (FREE, LOCK)

#### When p2 is set to MEDIA (external storage media)

p3 External storage media operation (FREE, LOCK)  
 p4 Setup loading operation (FREE, LOCK)

Query RP[p1,[p2]]?

Example Lock the START, STOP, and DISP/ENTER keys.  
 RP1,KEY,LOCK,LOCK,,LOCK

### **RO** Sets the type of report and when to create reports

#### For creating no reports

Syntax RO p1<terminator>  
 p1 Report type (OFF)

Query RO?

Example Create no reports.  
 ROOFF

Description You can use this command on models with the /M1 or /PM1 math option.



### 3.6 Basic Setting Commands

#### For creating hourly, daily, hourly + daily and daily + monthly reports

**Syntax** RO p1,p2,p3<terminator>  
 p1 Report type  
     HOURLY Hourly report  
     DAY Daily report  
     HOURLY+DAY Hourly and daily reports  
     DAY+MONTH Daily and monthly reports  
 p2 Day to create reports (dd; fixed format)  
     dd Day (01 to 28)  
 p3 Hour to create reports (hh; fixed format)  
     hh Hour (00 to 23)

**Query** RO?

**Example** Create a daily report at 9 O'clock everyday (parameter p2 ("05" in this example) is invalid in this case).

RODAY,05,09

**Description**

- You can use this command on models with the /M1 or /PM1 math option.
- Parameter p2 is invalid even if it is specified for reports other than monthly and daily reports.

#### For creating daily + weekly reports

**Syntax** RO p1,p2,p3<terminator>  
 p1 Report type (DAY+WEEK)  
 p2 Day of week to create reports (SUN, MON, TUE, WED, THU, FRI, SAT)  
 p3 Hour to create reports (hh; fixed format)  
     hh Hour (00 to 23)

**Query** RO?

**Example** Create a daily report at 9 O'clock every day and a weekly report at 9 O'clock every Tuesday.

RODAY+WEEK,TUE,09

**Description** You can use this command on models with the /M1 or /PM1 math option.

### **RM** Sets a report channel

#### When not using report channels

**Syntax** RM p1,p2<terminator>  
 p1 Report channel number  
 p2 Report channel usage (OFF)

**Query** RM[p1]?

**Example** Disable the channel 001 report channel.

RM001,OFF

**Description**

- You can use this command on models with the /M1 or /PM1 math option.
- Set p1 by referring to the table in section 3.3.

#### When using a report channel

**Syntax** RM p1,p2,p3,p4<terminator>  
 p1 Report channel number  
 p2 Report channel usage (ON)  
 p3 Measurement, computation, or external input channel number on which to report  
 p4 Conversion of the unit of time for integration  
     OFF Do not convert.

/S Converts as though the physical values are integrated in units of seconds.

/MIN Converts as though the physical values are integrated in units of minutes.

/H Converts as though the physical values are integrated in units of hours.

/DAY Converts as though the physical values are integrated in units of days.

**Query** RM[p1]?

**Example** Use the report channel number R01. Set the channel number on which to report to 001 and convert the unit of time for integration to seconds.

RM001,ON,001,/S

**Description**

- You can use this command on models with the /M1 or /PM1 math option.

- Set parameters p1 and p3 by referring to the table in section 3.3.
- About p4

Because the DX integrates sampled data over each scan interval, the physical value integrated over a given unit of time may be different from the actual integrated value. This occurs if the unit of time is different from the scan interval. If this occurs, set p4 to the same unit of time as that for the physical value that you are measuring. The DX calculates the integrated value using one of the following conversion formulas based on p3.

|       |   |
|-------|---|
| OFF   | $\Sigma(\text{measured value})$                                   |
| /S    | $\Sigma(\text{measured value}) \times \text{scan interval}$       |
| /MIN  | $\Sigma(\text{measured value}) \times \text{scan interval}/60$    |
| /HOUR | $\Sigma(\text{measured value}) \times \text{scan interval}/3600$  |
| /DAY  | $\Sigma(\text{measured value}) \times \text{scan interval}/86400$ |

The scan interval unit is seconds.

### **XG** Sets the time zone

**Syntax** XG p1,p2<terminator>  
 p1 Offset time from GMT (-1300 to 1300)  
     Upper 2 digits: Hour (00 to 13)  
     Lower 2 digits: Minute (00 to 59)  
 p2 Time deviation limit (OFF, 10S, 20S, 30S, 1MIN, 2MIN, 3MIN, 4MIN, 5MIN)

**Example** Set the offset time from the GMT to 9 hours ahead and the deviation limit to 30 s.

XG0900,30S

**XN Sets the date format**

**Syntax** XN p1,p2<terminator>  
 p1 Date format (Y/M/D, M/D/Y, D/M/Y, D.M.Y)  
 p2 Starting day of the week on the calendar (SUN, MON)

**Query** XN?

**Example** Set the date format to Y/M/D. Set the starting day of the week on the calendar to Monday.  
 XNY/M/D,MON

**YB Sets host information**

**Syntax** YB p1,p2<terminator>  
 p1 Host name (up to 64 characters)  
 p2 Domain name (up to 64 characters)

**Query** YB?

**Example** Set the host name to dx1000 and the domain name to dxadv.daqstation.com.  
 YBdx1000,dxadv.daqstation.com

**Description** The settings that you change using this command take effect when you save the settings using the XE command and turn the DX off and then back on.

**YD Sets network parameters****When not obtaining network parameters automatically**

**Syntax** YD p1,p2,p3<terminator>  
 p1 Automatic retrieval (NOT)

**When obtaining network parameters automatically**

**Syntax** YD p1,p2,p3<terminator>  
 p1 Automatic retrieval (USE)  
 p2 DNS information retrieval (USE, NOT)  
 p3 Automatic host name registration (USE, NOT)

**Query** YD?

**Example** Automatically retrieve the IP address and DNS information and automatically register the host name.  
 YDUSE,USE,USE

**Description** The settings that you change using this command take effect when you save the settings using the XE command and turn the DX off and then back on.

**YA Sets the IP address, subnet mask, and default gateway**

**Syntax** YA p1,p2,p3<terminator>  
 p1 IP address (0.0.0.0 to 255.255.255.255)  
 p2 Subnet mask (0.0.0.0 to 255.255.255.255)  
 p3 Default gateway (0.0.0.0 to 255.255.255.255)

**Query** YA?

**Example** Set the IP address to 192.168.111.24, the subnet mask to 255.255.255.0, and the default gateway to 0.0.0.0.  
 YA192.168.111.24,255.255.255.0,0.0.0.0

**Description** The settings that you change using this command take effect when you save the settings using the XE command and turn the DX off and then back on.

**YK Sets keepalive**

**Syntax** YK p1<terminator>  
 p1 Keepalive (ON, OFF)

**Query** YK?

**Example** Disable keepalive.  
 YKOFF

**Description** The settings that you change using this command take effect when you save the settings using the XE command and turn the DX off and then back on.

**RU Sets DNS parameters****Server settings**

**Syntax** RU p1,p2,p3<terminator>  
 p1 Setting type (SERVER)  
 p2 Primary DNS server address (0.0.0.0 to 255.255.255.255)  
 p3 Secondary DNS server address (0.0.0.0 to 255.255.255.255)

**Suffix settings**

**Syntax** RU p1,p2,p3<terminator>  
 p1 Setting type (SUFFIX)  
 p2 Domain suffix 1 (up to 64 characters)  
 p3 Domain suffix 2 (up to 64 characters)

**Query** RU[p1]?

**Example** Set domain suffix 1 to rec1.daqstation.com and domain suffix 2 to rec2.daqstation.com.  
 RUSUFFIX,rec1.daqstation.com,rec2.daqstation.com

**Description** The settings that you change using this command take effect when you save the settings using the XE command and turn the DX off and then back on.

**WS Sets a server**

**Syntax** WS p1,p2<terminator>  
 p1 Server type (FTP, WEB, MODBUS, SNTP, ETHERNETIP)  
 p2 Server on/off (USE, NOT)

**Query** WS[p1]?

**Example** Enable the Web server.  
 WSWEB,USE

**Description** The settings that you change using this command take effect when you save the settings using the XE command and turn the DX off and then back on.

### 3.6 Basic Setting Commands

#### **WW** Sets Webpage parameters

**Syntax** WW p1,p2,p3,p4<terminator>

p1 Webpage type  
OPERATOR Operator page  
MONITOR Monitor page

p2 Webpage (ON, OFF)

p3 Authentication  
OFF No authentication  
ADMIN Administrator privileges  
USER User privileges

p4 Command input on/off (USE, NOT)

**Query** WW[p1]?

**Example** Enable the operator page, disable authentication, and enable command input.  
WVOPERATOR, USE, OFF, USE

**Description**

- Parameters p3 and p4 are valid when p2 is set to ON.
- Parameter p3 is OFF or ADMIN when p1 is set to OPERATOR.
- Parameter p4 is valid when p1 is set to OPERATOR.
- The settings that you change using this command take effect when you save the settings using the XE command and turn the DX off and then back on.

#### **YQ** Sets communication timeout

##### When using no timeouts

**Syntax** YQ p1<terminator>

p1 Communication timeout (OFF)

**Query** YQ?

**Example** Disable the communication timer.  
YQOFF

**Description** The settings that you change using this command take effect when you save the settings using the XE command and turn the DX off and then back on.

##### When using timeouts

**Syntax** YQ p1,p2<terminator>

p1 Communication timeout (ON)  
p2 Timeout value in minutes (1 to 120)

**Query** YQ?

**Example** Enable the communication timer and set the timeout value to 3 minutes.  
YQON, 3

**Description** The settings that you change using this command take effect when you save the settings using the XE command and turn the DX off and then back on.

#### **YT** Sets FTP transfer timing

**Syntax** YT p1,p2,p3<terminator>

p1 Automatically transfer data when display and event data files are created (ON, OFF)

p2 Automatically transfer data when report data files are created (ON, OFF)

p3 Automatically transfer data when snapshot data files are created (when snapshot is executed) (ON, OFF)

**Query** YT?

**Example** Automatically transfer display and event data files. Do not transfer report data files. Do not transfer screen image data files.  
YTON, OFF, OFF

**Description** When the method to save data to the external storage medium is set to "Auto," the DX automatically transfers relevant data files when they are created. For the procedure to save various data files to the storage medium, see the *DX1000/DX2000 User's Manual*.

#### **YU** Sets what kind of information to send using e-mail

##### To send changes in the alarm status

**Syntax** YU p1,p2,p3,p4,p5,p6,p7,p8,p9,p10,p11,p12,p13,p14<terminator>

p1 Information to send (ALARM)

p2 Recipient 1 (ON, OFF)

p3 Recipient 2 (ON, OFF)

p4 Whether to send the alarm number 1 status (ON, OFF)

p5 Whether to send the alarm number 2 status (ON, OFF)

p6 Whether to send the alarm number 3 status (ON, OFF)

p7 Whether to send the alarm number 4 status (ON, OFF)

p8 Whether to include instantaneous data (ON, OFF)

p9 Whether to include source URL (ON, OFF)

p10 Subject (up to 32 characters)

p11 Header 1 (up to 64 characters)

p12 Header 2 (up to 64 characters)

p13 Alarm transmission operation  
ON+OFF Send e-mail when alarms occur and when alarms clear  
ON Only send e-mail when alarms occur

p14 Whether to include tag number or channel number in the subject (ON, OFF)

**Query** YU[p1]?

**Example** Send the status of alarm numbers 1 to 4 to recipient 1. Include instantaneous data but not the source URL. Set the subject to "ALM," header 1 to "LP2" and header 2 to "DX." Only send e-mail when alarms occur. Include the tag or channel number in the subject.

```
YUALARM, ON, OFF, ON, ON, ON, ON, ON, OFF,
ALM, LP2, DX, ON, ON
```

### To send e-mail at scheduled times

**Syntax** YU p1,p2,p3,p4,p5,p6,p7,p8,p9,p10,  
p11,p12<terminator>  
p1 Information to send (TIME)  
p2 Recipient 1 (ON, OFF)  
p3 Interval for sending e-mail to recipient 1  
(1H, 2H, 3H, 4H, 6H, 8H, 12H, 24H)  
p4 Time for sending e-mail to recipient 1 (00:00  
to 23:59)  
p5 Recipient 2 (ON, OFF)  
p6 Interval for sending e-mail to recipient 2  
(1H, 2H, 3H, 4H, 6H, 8H, 12H, 24H)  
p7 Time for sending e-mail to recipient 2 (00:00  
to 23:59)  
p8 Whether to include instantaneous data (ON,  
OFF)  
p9 Whether to include source URL (ON, OFF)  
p10 Subject (up to 32 characters)  
p11 Header 1 (up to 64 characters)  
p12 Header 2 (up to 64 characters)

**Query** YU[p1]?

**Example** Send e-mail at 17 hours 15 minutes every day  
to recipient 1. Do not include instantaneous data  
but include the source URL. Set the subject to  
"GOOD" and header 1 to "LP2."  
YUTIME, ON, 24H, 17:15, OFF, , , OFF, ON,  
GOOD, LP2

### To send system notifications

**Syntax** YU p1,p2,p3,p4,p5,p6,p7<terminator>  
p1 Information to send (SYSTEM)  
p2 Recipient 1 (ON, OFF)  
p3 Recipient 2 (ON, OFF)  
p4 Whether to include source URL (ON, OFF)  
p5 Subject (up to 32 characters)  
p6 Header 1 (up to 64 characters)  
p7 Header 2 (up to 64 characters)

**Query** YU[p1]?

**Example** Send system notification e-mail that includes  
the source URL to recipient 1. Set the subject to  
"SystemAlert" and header 1 to "LP2."  
YUSYSTEM, ON, OFF, ON, SystemAlert, LP2

### To send report generation notifications

**Syntax** YU p1,p2,p3,p4,p5,p6,p7<terminator>  
p1 Information to send (REPORT)  
p2 Recipient 1 (ON, OFF)  
p3 Recipient 2 (ON, OFF)  
p4 Whether to include source URL (ON, OFF)  
p5 Subject (up to 32 characters)  
p6 Header 1 (up to 64 characters)  
p7 Header 2 (up to 64 characters)

**Query** YU[p1]?

**Example** Send report generation notification e-mail that  
includes the source URL to recipient 1. Set the  
subject to "Report" and header 1 to "LP2."

```
YUREPORT, ON, OFF, ON, Report, LP2
```

**Description**

- For details on system notifications, see section 1.4.
- You can use report generation notification on models with the /M1 or /PM1 math option.
- For details on e-mail settings, see section 1.4.

### YV Sets an e-mail recipient address

**Syntax** YV p1,p2<terminator>  
p1 Recipient  
1 Recipient 1  
2 Recipient 2  
p2 Recipient address (up to 150 alphanumeric  
characters)

**Query** YV[p1]?

**Example** Set recipient 1 to "dxuser1@daqstation.com" and  
"dxuser2@daqstation.com."  
YV1,dxuser1@daqstation.com dxuser2@  
daqstation.com

**Description**

- To specify multiple recipients, separate each recipient with a space.
- For details on e-mail settings, see section 1.4.

### YW Sets the e-mail sender address

**Syntax** YW p1<terminator>  
p1 Sender address (up to 64 alphanumeric  
characters)

**Query** YW?

**Example** Set the sender address to "dxadv."  
YWdxadv

**Description** For details on e-mail settings, see section 1.4.

### YX Sets the e-mail SMTP server name

**Syntax** YX p1,p2,p3<terminator>  
p1 SMTP server name (up to 64 characters)  
p2 Port number (0 to 65535)  
p3 Authentication (OFF, POPBEFORESMTP)

**Query** YX?

**Example** Set the SMTP server to "smtp.daqstation.  
com" and port number to "25." Use POP3  
authentication.  
YX smtp.daqstation.com, 25,  
POPBEFORESMTP

**Description** For details on e-mail settings, see section 1.4.

### YJ Sets the Modbus client's destination server

**Syntax** YJ p1,p2,p3,p4,p5<terminator>  
p1 Server number (1 to 16)  
p2 Port number (0 to 65535)  
p3 Host name (up to 64 characters)

### 3.6 Basic Setting Commands

- p4 Unit number registration  
AUTO Do not use the unit number  
FIXED Use a fixed unit number

- p5 Unit number (0 to 255)

Query YJ[p1]?

Example For server number 3, set the port number to 502, the host name to dx2000, the unit number registration to FIXED, and the unit number to 127.

YJ3,502,dx2000,FIXED,127

#### **YP** Sets basic Modbus client settings

Syntax YP p1,p2<terminator>

- p1 Read cycle (125MS, 250MS, 500MS, 1S, 2S, 5S, 10S)
- p2 Retry interval (OFF, 10S, 20S, 30S, 1MIN, 2MIN, 5MIN, 10MIN, 20MIN, 30MIN, 1H)

Query YP?

Example Set the read cycle to 500 ms and the retry (reconnection) interval to 10 min.

YP500MS,10MIN

#### **YR** Sets the Modbus client's transmit command

Syntax YR p1,p2,p3...<terminator>

- p1 Command number (1 to 16)
- p2 Command type (OFF, R, R-M, W, W-M)

Description Parameters p3 and subsequent parameters vary depending on the p2 setting as follows:

##### When p2 is set to OFF

There are no parameters after p2.

##### When p2 is set to R (read external input channels)

- p3 First channel (external input channel number)
- p4 Last channel (external input channel number)
- p5 Server number (1 to 16)
- p6 First register number (30001 to 39999, 40001 to 49999, 300001 to 365536, 400001 to 465536)
- p7 Register data type (INT16, UINT16, INT32\_B, INT32\_L, UINT32\_B, UINT32\_L)

##### When p2 is set to R-M (read communication input data)

- p3 First channel (communication input data number)
- p4 Last channel (communication input data number)
- p5 Server number (1 to 16)
- p6 First register number (30001 to 39999, 40001 to 49999, 300001 to 365536, 400001 to 465536)

- p7 Register data type (INT16, UINT16, INT32\_B, INT32\_L, UINT32\_B, UINT32\_L, FLOAT\_B, FLOAT\_L)

##### When p2 is set to W (write to measurement channels)

- p3 First channel (measurement channel number)
- p4 Last channel (measurement channel number)
- p5 Server number (1 to 16)
- p6 First register number (40001 to 49999, 400001 to 465536)
- p7 Register data type (INT16, FLOAT\_B, FLOAT\_L)

##### When p2 is set to W-M (write to computation channels)

- p3 First channel (computation channel number)
- p4 Last channel (computation channel number)
- p5 Server number (1 to 16)
- p6 First register number (40001 to 49999, 400001 to 465536)
- p7 Register data type (INT16, UINT16, INT32\_B, INT32\_L, FLOAT\_B, FLOAT\_L)

Query YR[p1]?

Example For command number 5, set the command type to W, the first channel to 01, the last channel to 04, the server number to 1, the first register number to 40001, and the register data type to INT16.

YR5,W,01,04,1,40001,INT16

##### **Note**

Parameter p3 must be less than or equal to p4. Parameters p3, p4, and p7 determine the number of registers to read or write. An error occurs if the valid range of registers of p6 is exceeded.

#### **WB** Sets SNTP client parameters

Syntax WB p1,p2,p3,p4,p5,p6<terminator>

- p1 SNTP client function (USE, NOT)
  - p2 SNTP server name (up to 64 alphanumeric characters)
  - p3 SNTP port number (0 to 65535)
  - p4 Access interval (OFF, 1H, 8H, 12H, 24H)
  - p5 Reference time for the access interval (00:00 to 23:59)
  - p6 Timeout value (10S, 30S, 90S)
- Parameters p2 to p6 are invalid when p1 is set to NOT.

Query WB?

Example Enable the SNTP client function, set the server name to sntp.daqstation.com, the port number to 123, the access interval to 24 hours, the

reference time to 12:00, and the timeout value to 30 seconds.

```
WBUSE,snntp.dagstation.com,123,24H,
12:00,30S
```

### **WC** Sets the SNTP operation when memory start is executed

- Syntax** WC p1<terminator>  
 p1 Time adjustment using SNTP at memory start (ON, OFF)
- Query** WC?
- Example** Set the DX so that time is adjusted using SNTP at memory start.  
 WCON
- Description** This command is valid when the SNTP client function is enabled (WB command).

### **YS** Sets the serial interface

- Syntax** YS p1,p2,p3,p4,p5,p6<terminator>  
 p1 Baud rate (1200, 2400, 4800, 9600, 19200, 38400)  
 p2 Data length (7, 8)  
 p3 Parity check (NONE, ODD, EVEN)  
 p4 Handshaking (OFF:OFF, XON:XON, XON:RS, CS:RS)  
 p5 RS-422/485 address (01 to 99)  
 p6 Protocol (NORMAL, MODBUS, MODBUS-M)
- Query** YS?
- Example** Set the baud rate to 9600, the data length to 8, the parity check to ODD, handshaking to OFF:OFF, the RS-422/485 address to 02, and the protocol to NORMAL.  
 YS9600,8,ODD,OFF:OFF,02,NORMAL
- Description**
- The settings that you change using this command take effect when you save the settings using the XE command and turn the DX off and then back on.
  - You can use this command on models with the /C2 or /C3 serial interface option.

### **YL** Sets the operation of the Modbus master function

- Syntax** YL p1,p2,p3,p4,p5<terminator>  
 p1 Read cycle (125MS, 250MS, 500MS, 1S, 2S, 5S, 10S)  
 p2 Timeout (125MS, 250MS, 500MS, 1S, 2S, 5S, 10S, 1MIN)  
 p3 Retrials (OFF, 1 to 5, 10, 20)  
 p4 Command wait time (OFF, 5MS, 10MS, 15MS, 45MS, 100MS)  
 p5 Auto recovery (OFF, 1MIN, 2MIN, 5MIN, 10MIN, 20MIN, 30MIN, 1H)
- Query** YL?

**Example** Set the read cycle to 500 ms, the timeout to 250 ms, the number of retrials to 2, the command wait time to 10 ms, and the automatic return time limit to 5 min.

```
YL500MS,250MS,2,10MS,5MIN
```

- Description**
- You can use this command on models with the /C2 or /C3 serial interface option.
  - You can use this command when the serial interface protocol is set to "Master." For information about the serial interface settings, see section 2.3.
  - The settings that you change using this command take effect when you save the settings using the XE command and turn the DX off and then back on.

### **YM** Sets a transmit command of the Modbus master function

#### To not set a command

- Syntax** YM p1,p2<terminator>  
 p1 Registration number (1 to 16)  
 p2 Computation usage (OFF)
- Query** YM[p1]?
- Example** Do not set command registration number 1.  
 YM1,OFF

#### To set a command that reads external input channels

- Syntax** YM p1,p2,p3,p4,p5,p6,p7<terminator>  
 p1 Registration number (1 to 16)  
 p2 Command type (R)  
 p3 First channel (external input channel number)  
 p4 Last channel (external input channel number)  
 p5 Slave device address (1 to 247)  
 p6 First register number (30001 to 39999, 40001 to 49999, 300001 to 365535, 400001 to 465535)  
 p7 Type of data assigned to the registers (INT16, UINT16, INT32\_B, INT32\_L, UINT32\_B, UINT32\_L)
- Query** YM[p1]?

- Example** Register the following command in command registration number 2: Read the 32-bit signed integer data that is assigned to registers 30002 (upper 16 bits) and 30004 (lower 16 bits) in the slave device at address 5 into the DX channels 201 to 203.  
 YM2,R,201,203,5,30002,INT32\_B

#### To set a command that reads communication input data

- Syntax** YM p1,p2,p3,p4,p5,p6,p7<terminator>  
 p1 Registration number (1 to 16)  
 p2 Command type (R-M)  
 p3 First channel (communication input data number)



### 3.6 Basic Setting Commands

- p4 Last channel (communication input data number)
- p5 Slave device address (1 to 247)
- p6 First register number (30001 to 39999, 40001 to 49999, 300001 to 365535, 400001 to 465535)
- p7 Type of data assigned to the registers (INT16, UINT16, INT32\_B, INT32\_L, UUINT32\_B, UUINT32\_L, FLOAT\_B, FLOAT\_L)

Query YM[p1]?

Example Register the following command in command registration number 2: Read the 32-bit signed integer data that is assigned to registers 30003 (upper 16 bits) and 30004 (lower 16 bits) in the slave device at address 5 into the DX channels C02 to C05.

YM2,R-M,C02,C05,5,30003,INT32\_B

#### To set a command that writes to measurement channels

Syntax YM p1,p2,p3,p4,p5,p6,p7<terminator>

- p1 Registration number (1 to 16)
- p2 Command type (W)
- p3 First channel (measurement channel number)
- p4 Last channel (measurement channel number)
- p5 Slave device address (1 to 247)
- p6 First register number (40001 to 49999, 400001 to 465535)
- p7 Type of data assigned to the registers (INT16, FLOAT\_B, FLOAT\_L)

Query YM[p1]?

Example Register the following command in command registration number 3: Write the measured data of channels 003 to 006 in registers 40003 to 40006 in the slave device at address 7.

YM3,W,003,006,7,40003,INT16

#### To set a command that writes to computation channels

Syntax YM p1,p2,p3,p4,p5,p6,p7<terminator>

- p1 Registration number (1 to 16)
- p2 Command type (W-M)
- p3 First channel (computation channel number)
- p4 Last channel (computation channel number)
- p5 Slave device address (1 to 247)
- p6 First register number (40001 to 49999, 400001 to 465535)
- p7 Type of data assigned to the registers (INT16, UUINT16, INT32\_B, INT32\_L, FLOAT\_B, FLOAT\_L)

Query YM[p1]?

Example Register the following command in command registration number 2: Write the computed 16-bit

signed integer data of channels 101 to 105 to the first register 40003 in the slave device at address 5.

YM2,W-M,101,105,5,40003,INT16

Description • You can use this command on models with the /C2 or /C3 serial interface option.

- You can use this command when the serial interface protocol is set to "Master." For information about the serial interface settings, see section 2.3.
- The settings that you change using this command take effect when you save the settings using the XE command and turn the DX off and then back on.

#### WR Sets the instrument information output

Syntax WR p1,p2,p3,p4,p5<terminator>

- p1 Memory and media status (OFF, ON)
- p2 Self diagnosis (OFF, ON)
- p3 Communication errors (OFF, ON)
- p4 Memory stop (OFF, ON)
- p5 Alarms (OFF, ON)

Query WR?

Example Set the DX to transmit various types of information.

WRON,ON,ON,ON,ON

#### WF Sets the Modbus connection limitation

Syntax WF p1<terminator>

- p1 Modbus connection limitation (USE, NOT)

Query WF?

Example Place limitations on Modbus connections.

WFUSE

#### WG Sets an IP address that is allowed to connect via Modbus

Syntax WG p1,p2<terminator>

- p1 Registration number (1 to 10)
- p2 Whether or not to register (ON, OFF)
- p3 IP address (0.0.0.0 to 255.255.255.255)

Query WG[p1]?

Example Allow connection from 192.168.111.24. Use registration number 1.

WG1,ON,192.168.111.24

Description This command is valid when the Modbus connection limitation is placed (WF command).

#### WJ Sets the FTP transfer wait time

Syntax WJ p1,p2<terminator>

- p1 Display data and event data [minutes] (0 to 120)
- p2 Reports [minutes] (0 to 120)

Query WJ?

**Example** Set the FTP transfer wait time for report data to 30 minutes. Do not set a wait time for display data and event data.  
WJ0,30

### **WQ** Sets PROFIBUS-DP

**Syntax** WQ p1<terminator>  
p1 Node address (0 to 125)

**Query** WQ ?

**Example** Set the node address to 121.  
WQ121

**Description**

- You can use this command on models with the /CP1 PROFIBUS-DP option.
- The settings that you change using this command take effect when you save the settings using the XE command and turn the DX off and then back on.

### **XE** Activates basic settings

**Syntax** XE p1<terminator>  
p1 Whether or not to save settings (STORE, ABORT)

**Example** Save basic settings.  
XESTORE

**Description** To activate the settings you have changed using basic setting commands, you must use the XE command to save the settings. Be sure to use the XE command to save the settings before switching the execution mode back to operation. If you do not save the settings and change the execution mode back to operation, the DX returns to the previous settings.

### **YE** Activates basic settings (cold reset)

**Syntax** YE p1<terminator>  
p1 Whether or not to activate settings  
STORE Save basic settings and restart  
ABORT Restart without saving basic settings

**Example** Saves basic settings and restart.  
YESTORE

## 3.7 Output Commands (Control)

### **BO** Sets the output byte order

**Syntax** BO p1<terminator>  
p1 Byte order  
0 Outputs data MSB first.  
1 Outputs data LSB first.

**Query** BO?

**Example** Output data MSB first.  
BO0

**Description** This command applies to the byte order of numeric data for BINARY output.

### **CS** Sets the check sum (can only be used during serial communications)

**Syntax** CS p1<terminator>  
p1 Checksum usage  
0 Do not calculate (value fixed at zero)  
1 Calculate

**Query** CS?

**Example** Enable (Calculate) the checksum.  
CS1

**Description** You can use this command only for serial communications.

### **CB** Sets the data output format

**Syntax** CB p1<terminator>  
p1 Output format  
0 Normal output (includes data from channels set to SKIP and OFF)  
1 Do not output data from channels set to SKIP or OFF

**Query** CB?

**Example** Set the output format to normal output.  
CB0

**Description**

- This setting is separate for each connection.
- This command only affects the communication section and does not affect the front panel settings.
- Effective range of commands

| Output information                    | Corresponding command |
|---------------------------------------|-----------------------|
| Instantaneous data output (binary)    | FD1, FF               |
| Instantaneous data output (ASCII)     | FD0                   |
| Decimal place information (ASCII)     | FE1                   |
| Setup channel information (binary)    | FE5                   |
| Configured alarm information (binary) | FE6                   |

### **IF** Sets status filters

**Syntax** IF p1,P2<terminator>  
p1 Filter value for status information 1 through 4



### 3.7 Output Commands (Control) / 3.8 Output Commands (Setting, Measured, and Computed Data Output)

(0.0.0.0 to 255.255.255.255)  
p2 Filter value for status information 5 through 8  
(0.0.0.0 to 255.255.255.255)

Query IF?

Example Set the status filter value to 1.0.4.0 and  
255.127.63.31.

IF 1.0.4.0,255.127.63.31

Description For details, see chapter 5.

#### **CC** Disconnects the Ethernet connection (can only be used for Ethernet communications)

Syntax CC p1<terminator>

p1 Disconnection (0)

Example Disconnect the connection.

CC0

#### **Note**

##### Initialization of settings specified using the BO, CS, IF, and CB commands

###### • Serial communications

Settings specified using the BO, CS, IF, and CB commands are reset to the following default values when you reset the DX (when you turn the DX off and then back on or when you exit from basic setting mode).

- Output byte order, checksum, output format: 0
- Status filter: 255.255.255.255

If you reset the DX, you must set these values again.

###### • Ethernet communications

Settings specified using the BO, IF, and CB commands are reset to their default values when you disconnect the connection to the DX. After reconnecting to the DX, set these values again.

## 3.8 Output Commands (Setting, Measured, and Computed Data Output)

### **FC** Outputs screen image data

Syntax FC p1<terminator>

p1 GET (Output screen image data)

Example Output screen image data from the DX.

FCGET

Description The DX captures the currently displayed screen and outputs the data in PNG format.

### **FE** Outputs setup data

Syntax FE p1,p2,p3,p4<terminator>

p1 Output data type

- |   |                                     |
|---|-------------------------------------|
| 0 | Setup data of setting mode          |
| 1 | Decimal place and unit information  |
| 2 | Setup data of basic setting mode    |
| 4 | Setup data file                     |
| 5 | Setup channel information output    |
| 6 | Configured alarm information output |

p2 First channel number (measurement, computation, or external input channel)

p3 Last channel number (measurement, computation, or external input channel)

p4 Format version (see "Setup Channel Information Output" in "Response Format.")

1 Format for release number 2 or Earlier (format version 1)

2 Format for release number 3 or later (format version 2)

Example Output the setup data of setting mode for channels 001 to 005 from the DX.

FE0,001,005

Description • Make sure that the last channel number is greater than or equal to the first channel number.

- Parameters p2 and p3 are valid when p1 is set to 0, 1, 2, 5, or 6. If you omit p2 or p3, all channels are specified.
- Set parameters p2 and p3 by referring to the table in section 3.3.
- Parameter p4 is valid when p1 is set to 5. If you omit p4 when it is valid, p4 is set to 1.

### **FD** Outputs the most recent measured/computed data

Syntax FD p1,p2,p3<terminator>

p1 Output data type

- |   |   |
|---|---|
| 0 | Most recent measured, computed, and external input data in ASCII format |
|---|---|

|    |  |
|----|--|
| 1  | Most recent measured, computed, and external input data in binary format   |
| 6  | Relay status and internal switch status                                    |
| 7  | Event level switch status  |
| p2 | First channel number (measurement, computation, or external input channel) |
| p3 | Last channel number (measurement, computation, or external input channel)  |

**Example** Output the most recent measured and computed data for channels 001 to 005 from the DX in ASCII format.  
FD0,001,005

**Description**

- The most recent measured and computed data correspond to the most recent measured and computed data in the internal memory when the DX receives the FD command.
- Make sure that the last channel number is greater than or equal to the first channel number.
- Parameters p2 and p3 are valid when p1 is set to 0 or 1. If you omit p2 or p3, all channels are specified.
- Set parameters p2 and p3 by referring to the table in section 3.3.

**FF** Outputs FIFO data

**Syntax** FF p1,p2,p3,p4<terminator>

p1 Type of operation

|        |  |
|--------|--|
| GET    | Output starting with the next block  |
| RESEND | Retransmit the previous output   |
| RESET  | Set the most recent data position (block) to the FIFO buffer read position (block) |

p2 First channel number (measurement, computation, or external input channel)

p3 Last channel number (measurement, computation, or external input channel)

p4 Maximum number of blocks to read out

|      |  |
|------|--|
| 1200 | DX1002/DX1004/DX2004/DX2008                          |
| 240  | DX1006/DX1012/DX2010/<br>DX2020/DX2030/DX2040/DX2048 |
| 60   | Models with the /MC1 external input channel option   |

If the amount of measured, computed, and external input data is less than the specified number of blocks, the DX sends all of the available data.

**Example** Output two blocks of FIFO data from channels 1 to 10.  
FFGET,001,010,2

**Description**

- The FIFO buffer is a cyclic buffer in which the oldest data is overwritten first. Use the FR command to set the acquisition interval.

- The DX sends the specified number of blocks (p4) of FIFO data starting with the next block. Be sure to read the data within the following buffer period to prevent data dropouts.
  - DX1004  
FIFO buffer size  
240 cycles (scan interval)  
Maximum buffer period  
240 × (acquisition interval)  
You cannot resend data if the buffer period elapses.
- Parameters p2 to p4 are valid when p1 is set to GET.
- If you omit p4, all blocks are specified.
- Make sure that the last channel number is greater than or equal to the first channel number.
- For details on the FIFO data output process, see appendix 5.
- Set parameters p2 and p3 by referring to the table in section 3.3.

**FL** Outputs a log, alarm summary, or message summary

**Syntax** FL p1,p2,p3<terminator>

p1 Log type

|        |                          |
|--------|--------------------------|
| COM    | Communication            |
| FTPC   | FTP client               |
| ERR    | Operation errors         |
| LOGIN  | Login log                |
| WEB    | Web operation            |
| EMAIL  | E-mail                   |
| SNTP   | SNTP access log          |
| DHCP   | DHCP access log          |
| ALARM  | Alarm summary            |
| MSG    | Message summary          |
| MODBUS | Modbus communication log |

p2 Maximum log readout length

|           |   |
|-----------|---|
| 1 to 200  | When p1 is set to COM or MODBUS                         |
| 1 to 1000 | when p1 is set to ALARM                                 |
| 1 to 450  | when p1 is set to MSG                                   |
| 1 to 50   | When p1 is set to a value other than those listed above |

p3 Batch group number

**Example** Output the 10 most recent operation error logs.  
FLERR,10

**Description**

- Outputs the log that is stored in the DX.
- If you omit p2, all written logs are output.
- Parameter p3 is valid when multi batch (/BT2) is in use and p1 is set to ALARM or MSG (all other parameters are don't care).
- If you omit p3, the DX sends the alarm summary or message summary of all batch groups.
- Set parameter p3 by referring to the table in section 3.3.

### 3.8 Output Commands (Setting, Measured, and Computed Data Output)

#### **IS** Outputs status information

**Syntax** IS p1<terminator>  
 p1 Status information output  
     0 Status information 1 and 4  
     1 Status information 1 and 8

**Example** Output status information 1 to 4.  
 IS0

**Description** You can mask the output status using status filters (see the IF command). For details on status information, see chapter 5.

#### **FU** Outputs user levels

**Syntax** FU p1<terminator>  
 p1 User information output  
     0 Information about the users currently logged in  
     1 Information about the users currently logged into a general-purpose service

**Example** Output information about the users logged into a general-purpose service.  
 FU1

**Description** This command sends information about users that are connected to the DX.

#### **FA** Outputs internal DX information

**Syntax** FA p1<terminator>  
 p1 Type of operation  
     IP Address information that includes the IP address, subnet mask, default gateway, DNS server as well as the host name and domain name

#### **ME** Outputs data stored on the external storage medium and internal memory

**Syntax** ME p1,p2,p3<terminator>  
 p1 Type of operation  
     DIR File list output  
     GET Output (first time)  
     NEXT Output (subsequent times). This parameter is used to output the remaining data when the first output operation is not enough to output all of the data.  
     RESEND Retransmit the previous output  
     DEL Delete

**DIRNEXT** Output the subsequent file list after the file list is output using the DIR or LIST command. The number of output lists is the p3 value specified using the DIR command. If you use this command after all lists have been output, the following data is output.

EACRLF  
 ENCRLF

**CHKDSK** Checks the disk. Outputs information about the free space on the external storage medium.

p2 Path name (up to 100 characters)  
 Set the path name using a full path.

p3 Maximum number of file lists to output (1 to 1000)  
 If you omit this parameter, the DX outputs the entire file list of the specified directory.

**Example**

- Output the entire file list of the DRV0 directory  
 MEDIR, /DRV0/
- Output the DRV0 directory file list for 10 files.  
 MEDIR, /DRV0/, 10
- Output the data in the file 72615100.DAD in the DRV0/DATA0 directory.  
 MEGET, /DRV0/DATA0/72615100.DAD

**Description**

- Parameter p2 is valid when p1 is set to DIR, GET, DEL, or CHKDSK.
- Parameter p3 is valid when p1 is set to DIR.
- If an error occurs during data transmission, you can set p1 to RESEND to retransmit data.

#### **Path name specifications**

- The first level directories point to the following locations.  
 Path that starts with /MEM0/DATA/Internal memory  
 Path that starts with /DRV0/External storage medium
- Path names are case-sensitive.
- You can access files whose name is less than or equal to 48 characters that are within three directory levels.
- Wild cards have the following limitations.
  - Asterisks can be used in p2 when p1 is set to DIR.
  - If a path ends with a slash, it is equivalent to specifying \* for the path.  
 Example) /DRV0/DATA0/ and /DRV0/DATA0/\* are equivalent.

- For the file name and for the extension, characters at the asterisk and subsequent characters can be any characters.
- Example) Let us assume that there are five files: ab001.ef1, ab002.ef1, ab001.ef2, ab002.ef2, and ab001.yyy.
- If you specify ab\*01.ef1, ab001.ef1 and ab002.ef1 are selected.
- If you specify ab001.e\*1, ab001.ef1 and ab001.ef2 are selected.

### **MO** Outputs the data stored in the internal memory

**Syntax** MO p1,p2,p3<terminator>

p1 Type of operation

DIR Data list output

GET Data output

SIZE Data size output

p2 Output data type

MANUAL Manual sampled data

REPORT Report

p3 Specified file name

**Example** Output report data, 000142\_080102\_004127H\_.DAR from the DX.

MOGET,REPORT,000142\_080102\_004127H\_.DAR

**Description** Parameter p3 is valid when p1 is set to GET or SIZE.

## 3.9 Output Commands (RS-422/485 Dedicated Commands)

### **ESC O** Opens an instrument

**ESC** in ASCII code is 1BH. For details, see appendix 3.

**Syntax** ESC O p1<terminator>

p1 Instrument address (01 to 99)

**Example** Open the instrument at address 99, and enable all commands.

ESC O99

**Description**

- Specifies the address of the instrument that you want to communicate with.
- You can only open one instrument at any given time.
- If you execute ESC O, any instrument that is already open is automatically closed.
- When the DX receives this command successfully, the DX returns "ESC O□□".
- Normally, the terminator can be CR+LF or LF for communication commands. However, you must terminate this command with CR+LF.

### **ESC C** Closes an instrument

**ESC** in ASCII code is 1BH. For details, see appendix 3.

**Syntax** ESC C p1<terminator>

p1 Instrument address (01 to 99)

**Example** Close the device whose address is 77.

ESC C77

**Description**

- This command closes the connection to the instrument you are communicating with.
- When the DX receives this command successfully, the DX returns "ESC C□□".
- Normally, the terminator can be CR+LF or LF for communication commands. However, you must terminate this command with CR+LF.

### 3.10 Output Commands (Special Response Commands)

#### **\*I** Outputs instrument information

Syntax \*I<terminator>

Description This command sends the maker, model, serial number, and firmware version in a comma-separated ASCII string with a terminator at the end.

Example YOKOGAWA,DX1000,99AA0123,F1.01

### 3.11 Maintenance and Test Commands (Available when using the maintenance/test server function via Ethernet)

#### **close** Closes another device's connection

Syntax close,p1,p2:p3<terminator>  
 p1 Port on the DX side (1 to 65535)  
 p2 IP address on the PC side (0.0.0.0 to 255.255.255.255)  
 p3 Port on the PC side (0 to 65535)

Example close,34159,192.168.111.24:1054  
 E0

Description You cannot use this command to disconnect a server port. You cannot use this command to disconnect from the DX that you are operating. Use the quit command instead.

#### **con** Outputs connection information

Syntax con<terminator>

Example

```
con
EA
00/00/00 12:34:56
```

Active connections

| Proto | Local Address        | Foreign Address     | State       |
|-------|----------------------|---------------------|-------------|
| TCP   | 192.168.111.24:34159 | 192.168.111.24:1053 | ESTABLISHED |
| TCP   | 0.0.0.0:34155        | 0.0.0.0:0           | LISTEN      |
| TCP   | 0.0.0.0:34159        | 0.0.0.0:0           | LISTEN      |
| TCP   | 0.0.0.0:34150        | 0.0.0.0:0           | LISTEN      |

EN

TCP

Protocol used.

Local Address

DX socket address.

Displays "IP address:port number."

Foreign Address

Destination socket address

Displays "IP address:port number."

State

Connection state.

ESTABLISHED

Connection established.

#### **eth** Outputs Ethernet statistics

Syntax eth<terminator>

Example

```
eth
EA
00/00/00 12:34:56
```

Ethernet Statistics

## 3.11 Maintenance and Test Commands

```
Name  In Pkt  In Err  Out Pkt  Out Err  16 Coll
lo0   0      0      0        0        0
mb0   74     0      64       0        0
EN
```

**help**    **Outputs help**

**Syntax**    help [,p1]<terminator>  
              p1    Command name  
                   (close, con, eth, help, net, quit)

**Example**

```
help
EA
con            - echo connection information
eth            - echo ethernet information
help           - echo help
net            - echo network status
quit           - close this connection
EN
```

**net**    **Outputs network statistics**

**Syntax**    net<terminator>

**Example**

```
net
EA
00/00/00 12:34:56
```

**Network Status**

```
APP: power on time = 00/00/00 12:34:56
APP: applalive        = disable
APP: genedrops        = 0
APP: diagdrops        = 0
APP: ftpsdrops        = 0
TCP: keepalive        = 30 s
TCP: connects         = 14
TCP: closed           = 0
TCP: timeoutdrop     = 0
TCP: keepdrops        = 0
TCP: sndtotal         = 53
TCP: sndbyte          = 0
TCP: sndrexmitpack   = 0
TCP: sndrexmitbyte   = 1
TCP: rcvtotal         = 0
TCP: rcvbyte          = 0
DLC: 16 collisions = 0
EN
```

TCP: keepalive

    Keepalive check cycle

TCP: connects

    Total number of connections established

TCP: closed

    Total number of closed connections

TCP: timeoutdrop

    Total number of closed connections due to TCP retransmission timeout. When the transmitted packet is not received, the DX retransmits the packet at a predetermined time interval. If the packet is not received after 14 retransmissions, a timeout occurs, and the connection is closed.

TCP: keepdrops

    Total number of closed connections due to

TCP: keepalive timeout

TCP: sndtotal

    Total number of transmitted packets

TCP: sndbyte

    Total number of transmitted bytes

TCP: sndrexmitpack

    Total number of retransmitted packets

TCP: sndrexmitbyte

    Total number of retransmitted bytes

TCP: rcvtotal

    Total number of received packets

TCP: rcvbyte

    Total number of received bytes

DLC: 16 collisions

    Number of collisions. A collision occurs when two or more instruments on the network attempt to transmit simultaneously. The tendency for collisions to occur increases when the network is congested. 16 collisions would mean 16 consecutive collisions.

**quit**    **Closes the connection to the instrument that you are operating**

**Syntax**    quit<terminator>

## 3.12 Instrument Information Output Commands (Available when using the instrument information server function via Ethernet)

The instrument information server function interprets one UDP packet to be one command and returns a single packet (containing DX information) in response to the command.

|                              |           |
|------------------------------|-----------|
| Port number                  | 34264/udp |
| Transfer data                | ASCII     |
| Receive buffer size          | 128       |
| Transmit buffer size         | 512       |
| Maximum number of parameters | 32        |

In the command packet, you arrange the parameters that correspond to information you want to receive.

| Parameter | Description  |
|-----------|--|
| serial    | Outputs the serial number.   |
| host      | Outputs the host name (host name that you specified in section 1.3).       |
| ip        | Outputs the IP address (the IP address that you specified in section 1.3). |

**Example** Query the IP address and host name. (The first frame below contains the command packet. The second frame contains the response packet.)

```
ip host
```

```
EA
ip = 192.168.111.24
host = DX1000-1
EN
```

- Description**
- Separate each parameter with one or more spaces (space, tab, carriage return, or line feed).
  - Parameters are not case sensitive.
  - Undefined parameters are ignored.
  - Parameters after the 32nd parameter are ignored.

## 4.1 Response Syntax

The following table shows the types of responses for various commands described in the previous chapter.

The DX returns a response (affirmative/negative response) to a command that is delimited by a single terminator. The controller should follow the one command to one response format. When the command-response rule is not followed, the operation is not guaranteed.

| Commands                  | Group                                       | Response             |   |
|---------------------------|---|----------------------|---|
|                           |   | Affirmation          | Negation  |
| Setting commands          | Setting                                     | Affirmative response | Single negative response or multiple negative responses |
|                           | Control                                     |                      |   |
| Basic Setting commands    |   |                      |   |
| Output commands           | Control                                     |                      |   |
|                           | Setup, measurement, and control data output | ASCII output         |   |
|                           |   | Binary output        |   |
|                           | RS-422/485 dedicated                        | Dedicated response   | No response   |
| Special response commands | Dedicated response                          |                      |   |

\* For the responses to the instrument information server function, see section 4.4.  
For the responses to special commands, see section 3.10.

### Note

The "CRLF" used in this section denotes carriage return line feed.

### Affirmative Response

When the command is processed correctly, an affirmative response is returned.

- **Syntax**  
E0CRLF
- **Example**  
E0

### Single Negative Response

When a command is not processed correctly, a single negative response is returned.

- **Syntax**  
E1\_nnn\_mmm...mCRLF  
nnn           Error number (001 to 999)  
mmm...m       Message (variable length, one line)  
\_               Space
- **Example**  
E1 001 "System error"

### Multiple Negative Responses

- If there is an error in any one of the multiple commands that are separated by sub delimiters, multiple negative responses are returned.
- The response is generated for each erroneous command.
- If there are multiple commands that have errors, the negative responses are separated by commas.
- The error position number is assigned to the series of commands in order starting with "1" assigned to the first command.



• **Syntax**

`E2_ee:nnnCRLF` (When there is only one error)  
`E2_ee:nnn,ee:nnn,...,ee:nnnCRLF` (When there are multiple errors)  
 ee Error position (01 to 10)  
 nnn Error number (001 to 999)  
 \_ Space

• **Example**

`E2 02:001`

**Text Output**


For details on the text data types and their formats, see section 4.2.

• **Syntax**

`EACRLF`  
 .....*CRLF*  
 :  
 .....*CRLF*  
 .....*CRLF*  
`ENCRLF`

**Binary Output**

**Conceptual Diagram**

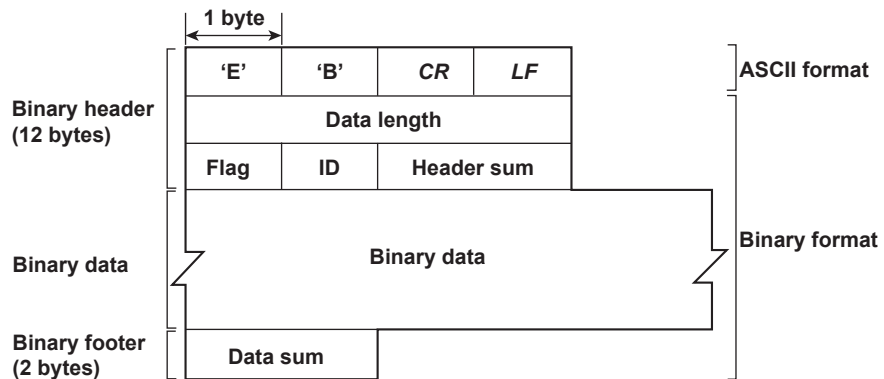

**EBCRLF**

Indicates that the data is binary.

**Data Length**

The byte value of “flag + identifier + header sum + binary data + data sum.”

**Header Sum**

The sum value of “data length + flag + identifier.”

**Binary Value**

For the output format of various data types, see section 4.3.

**Data Sum**

The sum value of the binary data.

**Note**

The data length of the binary header section is output according to the byte order specified with the BO command.

**Flag**

| Bit | Name (Abbreviation) | Flag   |     | Meaning of the Flag                                |
|-----|---------------------|--------|-----|--|
|     |                     | 0      | 1   |  |
| 7   | BO                  | MSB    | LSB | Output byte order                                  |
| 6   | CS                  | No     | Yes | Existence of a checksum                            |
| 5   | –                   | –      | –   |  |
| 4   | –                   | –      | –   |  |
| 3   | –                   | –      | –   |  |
| 2   | –                   | –      | –   |  |
| 1   | –                   | –      | –   |  |
| 0   | END                 | Middle | End | In the middle or at the end of the continuous data |

- When the BO flag is “0,” the high byte is output first. When the BO flag is “1,” the low byte is output first.
- If the check sum is enabled (parameter = 1) using the CS command parameter, each sum value is inserted in the header sum and data sum sections. If the check sum is disabled (parameter = 0), a zero is inserted in the header sum and data sum sections. For a sample program that calculates the sum value, see “Calculating the sum value” on the next page.
- If the amount of data output in response to a ME/MO command is large, not all the data may be returned in one output request (parameter GET). In this case the END flag becomes 0. You must send output requests (parameter NEXT) to receive the rest of the data until the END flag becomes 1.
- The bits that have “–” for the name and flag are not used. The value is undefined.

**ID**

An ID number indicating the binary data type. The table below indicates the data types and the corresponding output commands. Binary data that is not indicated in the above table is considered undefined files.

| ID Number | Binary Data Type                    | Type         | Format | Output Command |
|-----------|-------------------------------------|--------------|--------|----------------|
| 0         | Undefined file                      | file (*.*)   | –      | ME             |
| 1         | Instantaneous data                  | Data         | Yes    | FD             |
| 1         | FIFO data                           | Data         | Yes    | FF             |
| 13        | Screen data file                    | File (*.PNG) | –      | ME, FC         |
| 15        | Display data file                   | File (*.DAD) | No     | ME             |
| 16        | Event data file                     | File (*.DAE) | No     | ME             |
| 17        | Manual sample file                  | File (*.DAM) | Yes    | ME, MO         |
| 18        | Report file                         | File (*.DAR) | Yes    | ME, MO         |
| 19        | Setup data file                     | File (*.PDL) | No     | ME, FE4        |
| 25        | Setup channel information output    | Data         | Yes    | FE5            |
| 26        | Configured alarm information output | Data         | Yes    | FE6            |

Yes: Disclosed. No: Undisclosed. –: Common format.

- The table above shows the different types of binary data.
- Binary data comes in two types, data and file.
  - **Data**
    - Measured/computed data can be output using the FD command.
    - FIFO data can be output using the FF command.
    - The data format is disclosed. See section 4.3.

## 4.1 Response Syntax

- **File**
  - Display data, event data, and setup data files can be used on the DXA120 DAQSTANDARD Software that comes with the package. For details, see the *DXA120 DAQSTANDARD User's Manual IM04L41B01-61E*.
  - Files that are in common formats can be opened using software programs that are sold commercially.
  - Other formats are written in ASCII code. A text editor can be used to open these types of files.

### Calculating the Sum Value

If you set the parameter of the CS command to 1 (enabled), the checksum value is output only during serial communications. The check sum is the same as that used in the TCP/IP and is derived according to the following algorithm.

#### Buffer on Which the Sum Value Is Calculated

- For the header sum, it is calculated from "data length + flag + identifier" (fixed to 6 bytes).
- For the data sum, it is calculated from the binary data.



If the data length of the buffer is odd, a zero is padded so that it is even. (1) through (6) are summed as unsigned two-byte integers (unsigned short). If the digit overflows a 1 is added. Finally, the result is bit-wise inverted.

#### Sample Program

The sum value is determined using the following sample program, and the calculated result is returned. The sum determined by the sample program can be compared with the header sum of the output binary header section and the data sum of the output binary footer section.

```
/*
 * Sum Calculation Function (for a 32-bit CPU)
 *
 * Parameter buff: Pointer to the top of the data on which the sum is calculated
 *               len: Length of the data on which the sum is calculated
 * Returned value: Calculated sum
 */
int cksum(unsigned char *buff, int len)
{
    unsigned short *p; /* Pointer to the next two-byte data word in the buffer that is
                       * to be summed. */
    unsigned int csum; /* Checksum value */
    int i;
    int odd;
    csum = 0; /* Initialize. */
    odd = len%2; /* Check whether the number of data points is even. */
    len >>= 1; /* Determine the number of data points using a "short"
               * data type. */
    p = (unsigned short *)buff;
    for(i=0;i<len;i++) /* Sum using an unsigned short data type. */
        csum += *p++;
}
```

```

if(odd){          /* When the data length is odd */
    union tmp{    /* Pad with a 0, and add to the unsigned short data. */
        unsigned short s;
        unsigned char   c[2];
    }tmp;
    tmp.c[1] = 0;
    tmp.c[0] = *((unsigned char *)p);
    csum += tmp.s;
}

if((csum = (csum & 0xffff) + ((csum>>16) & 0xffff)) > 0xffff)
    /* Add the overflowed digits */
    csum = csum - 0xffff; /* If the digit overflows again, add a 1. */
return((~csum) & 0xffff); /* bit inversion */
}

```

## RS-422/485 Dedicated Responses

The following table shows dedicated commands for the RS-422/RS-485 interface and their responses.

| Command Syntax      | Meaning                | Response  |
|---------------------|------------------------|---|
| <i>ESC Oxx CRLF</i> | Opens the device.      | <ul style="list-style-type: none"> <li>Response from the device with the specified address<br/><i>ESC Oxx CRLF</i></li> <li>No response when the device with the specified address does not exist*</li> </ul> |
| <i>ESC Cxx CRLF</i> | Closes the instrument. | <ul style="list-style-type: none"> <li>Response from the device with the specified address<br/><i>ESC Cxx CRLF</i></li> <li>No response when the device with the specified address does not exist*</li> </ul> |

\* Some of the possible reasons that cause the condition in which the device with the specified address cannot be found are a command error, the address not matching that of the device, the device is not turned ON, and the device not being connected via the serial interface.

- The “xx” in the table indicates the device address. Specify the address that is assigned to the instrument from 01 to 99.
- Only one device can be opened at any given time.
- When a device is opened with the ESC O command, all commands on the device become active.
- When a device is opened with the ESC O command, any other device that is open is automatically closed.
- Normally, either CR+LF or LF can be used as a terminator for communication commands. However, the terminator for these commands must be set to CR+LF.

### Note

- The ASCII code of ESC is 1BH. See appendix 3.

## 4.2 Output Format of ASCII Data

The following types of ASCII data are available. The format for each type is described in this section. The table below indicates the data types and the corresponding output commands.

| Data Type   | Corresponding Output Command |
|---|------------------------------|
| Setting data/basic setting data                       | FE0, FE2                     |
| Decimal position/unit information                     | FE1                          |
| Measured, computed, and external input data           | FD0                          |
| Relay/internal switch status                          | FD6                          |
| Communication log                                     | FLCOM                        |
| FTP client log  | FLFTPC                       |
| Operation error log                                   | FLERR                        |
| Login log   | FLLOGIN                      |
| Web operation log                                     | FLWEB                        |
| E-mail log  | FLEMAIL                      |
| SNTP access log                                       | FLSNTP                       |
| DHCP access log                                       | FLDHCP                       |
| Modbus communication log                              | FLMODBUS                     |
| Alarm summary   | FLALARM                      |
| Message summary                                       | FLMSG                        |
| Status information                                    | ISO, IS1                     |
| Ethernet information                                  | FAIP                         |
| File list   | MEDIR                        |
| Check disk  | MECHKDSK                     |
| Manual sampled/report data information                | MODIR                        |
| User information                                      | FU0, FU1                     |
| Event level switch status (Release number 3 or later) | FD7                          |

### Note

The "CRLF" used in this section denotes carriage return line feed.

### Setting Data/Basic Setting Data

- The FE command is used to output the data.
- The setting/basic setting data is output in the order of the listed commands in the table in section 3.2, "A List of Commands." However, the setting information for the following commands is not output.
  - **Setting commands (setting)**  
SD/FR command
  - **Setting commands (control)**  
All commands from BT to IR
  - **Basic setting commands**  
XE, YO, YE, and YC commands
- The output format of the setting/basic setting data conforms to the syntax of each command.
- Some commands are output in multiple lines. (Example: Commands that are specified for each channel.)
- **Syntax**  
The two-character command name and the subsequent parameters are output in the following syntax.  

```
EACRLF
ttsss...sCRLF
.....
ENCRLF
```

tt Command name (SR, SA..., XA, XI...)  
 sss...s Setting/basic setting data (variable length, one line)

- **Example**

```
EA
SR001,VOLT,20mV,0,20
SR002,VOLT,20mV,0,20
.....
EN
```

## Decimal Point Position/Unit Information

- The FE command is used to output the data.
- You can use the CB command to specify whether to output the data of measurement channels set to skip and computation channels set to OFF.

- **Syntax**

The data is output for each channel in the following syntax.

```
EACRLF
s_ccuuuuuu,ppCRLF
.....
ENCRLF
```

s Data status (N, D, or S)  
 N: Normal  
 D: Differential input  
 S: Skip (When the measurement range is set to SKIP for a measurement channel or when the channel is turned OFF for a computation channel)

ccc Channel number (3 digits)  
 001 to 048: Measurement channel  
 101 to 160: Computation channel  
 201 to 440: External input channel

uuuuuu Unit information (6 characters, left-justified)  
 mV\_\_\_\_: mV  
 V\_\_\_\_: V  
 ^C\_\_\_\_: °C  
 xxxxxx: (User-defined character string)

pp Decimal point position (00 to 04)  
 No decimal (00000) for 00.  
 One digit to the right of the decimal (0000.0) for 01.  
 Two digits to the right of the decimal (000.00) for 02.  
 Three digits to the right of the decimal (00.000) for 03.  
 Four digits to the right of the decimal (0.0000) for 04.  
 \_ Space

- **Example**

```
EA
N 001mV ,01
N 002mV ,01
EN
```

### Measured, computed, and external input data

- The FD command is used to output the data.
- You can use the CB command to specify whether to output the data of measurement channels set to skip and computation channels set to OFF.

- **Syntax**

The measured/computed data is output in the following syntax along with the date and time information for each channel.

```
EACRLF
DATE_YY/mo/ddCRLF
TIME_hh:mm:ss.mmmtCRLF
s_ccca1a2a3a4uuuuuufdddddE-ppCRLF
.....
```

ENCRLF

|          |   |
|----------|---|
| YY       | Year (00 to 99)   |
| mo       | Month (01 to 12)  |
| dd       | Day (01 to 31)  |
| hh       | Hour (00 to 23)   |
| mm       | Minute (00 to 59)   |
| ss       | Second (00 to 59)   |
| mmm      | Millisecond (000 to 999. A period is placed between seconds and milliseconds.)  |
| t        | Reserved (Space.)   |
| s        | Data status (N, D, S, O, E, or B)<br>N: Normal<br>D: Differential input<br>S: Skip<br>O: Over<br>E: Error<br>B: Burnout   |
| ccc      | Channel number (3 digits)<br>001 to 048: Measurement channel<br>101 to 160: Computation channel<br>201 to 440: External input channel   |
| a1a2a3a4 | a1 Alarm status (level 1)<br>a2 Alarm status (level 2)<br>a3 Alarm status (level 3)<br>a4 Alarm status (level 4)<br>(Each status is set to H, L, h, l, R, r, T, t, or space.)<br>((H: high limit alarm, L: low limit alarm, h: difference high-limit alarm, l: difference low-limit alarm, R: high limit on rate-of-change alarm, r: low limit on rate-of-change alarm, T: delay high limit alarm, t: delay low limit alarm, space: no alarm) |
| uuuuuu   | Unit information (6 characters, left-justified)<br>mV____: mV<br>V____: V<br>^C____: °C<br>xxxxxx: (User-defined character string)  |
| f        | Sign (+, -)   |





## Communication Log

- The FL command is used to output the data.
- A log of setting/basic setting/output commands and responses is output. Up to 200 logs are retained. Logs that exceed 200 are cleared from the oldest data.

- **Syntax**

EACRLF

yy/mo/dd\_hh:mm:ss\_n\_uuu...ufd\_mmm...mCRLF

.....

ENCRLF

|         |  |
|---------|--|
| yy      | Year (00 to 99)  |
| mo      | Month (01 to 12)   |
| dd      | Day (01 to 31)   |
| hh      | Hour (00 to 23)  |
| mm      | Minute (00 to 59)  |
| ss      | Second (00 to 59)  |
| n       | Connection ID. A number used to identify the user that is connected.<br>0: Serial<br>1 to 3: Ethernet  |
| uuu...u | User name (up to 20 characters)  |
| f       | Multiple command flag<br>Space: Single<br>*: Multiple<br>(If multiple commands are separated by sub delimiters and output at once, "*" is displayed. The multiple commands are divided at each sub delimiter and stored as individual logs (1 log for 1 command and 1 log for 1 response.)   |
| d       | Input/Output<br>>: Input<br><: Output  |
| mmm...m | Message (up to 20 characters) <ul style="list-style-type: none"><li>• The communication log contains only the error number and not the error message section.</li><li>• Normally, the transfer data are transmitted as they are, but in some cases, a special message is output. The special messages are shown below.</li></ul> Reception<br>(Over length): Command length exceeded.<br>(Over number): Number of commands exceeded.<br>(Serial error): Received an error character through serial communications. |

**Transmission**

|                  |   |
|------------------|---|
| (ddd byte) :     | Data output (where ddd is the number of data values)  |
| (Login) :        | Login   |
| (Logout) :       | Logout  |
| (Disconnected) : | Forced disconnection (occurs when the connection was disconnected when transmitting data using Ethernet). |
| (Time out) :     | Timeout, keepalive, TCP retransmission, etc.  |
| E1 nnn:          | Single negative response (where nnn is the error number)  |
| E2 ee:nnn:       | Multiple negative response (where ee is the error position and nnn is the error number)                   |

**Space**

- **Example**

The following example shows the log when multiple commands separated by sub delimiters, "BO1; ???; PS0," are transmitted. The commands are separated and output in order with the multiple command flags "\*" .

```
EA
99/05/11 12:31:11 1 12345678901234567890*> BO1
99/05/11 12:31:11 1 12345678901234567890*< E0
99/05/11 12:31:11 1 12345678901234567890*> ???
99/05/11 12:31:11 1 12345678901234567890*< E2 01:124
99/05/11 12:31:11 1 12345678901234567890*> PS0
99/05/11 12:31:11 1 12345678901234567890*< E0
EN
```

## FTP Client Log

- The FL command is used to output the data.
- The FTP client log is output. Up to 50 file transfer logs are retained. Logs that exceed 50 are cleared from the oldest data.
- For the meanings of the error codes, see the *DX1000/DX2000 User's Manual (IM04L41B01-01E or IM04L42B01-01E)*.

- **Syntax**

EACRLF

yy/mo/dd\_hh:mm:ss\_nnn\_XXXXXXXXXX\_k\_ffffffffff\_...CRLF

.....

ENCRLF

|            |   |
|------------|---|
| YY         | Year (00 to 99)   |
| mo         | Month (01 to 12)  |
| dd         | Day (01 to 31)  |
| hh         | Hour (00 to 23)   |
| mm         | Minute (00 to 59)                                       |
| ss         | Second (00 to 59)                                       |
| nnn        | Error code (001 to 999)                                 |
| XXXXXXXXXX | Detailed code (9 characters)                            |
| k          | Server type (P, S)                                      |
|            | P: Primary  |
|            | S: Secondary  |
| fff...     | File name (up to 51 characters including the extension) |
| _          | Space   |

- **Example**

EA

99/07/26 10:00:00 P display.dsp

99/07/27 10:00:00 P setting.pnl

99/07/28 10:00:00 123 HOSTADDR P trend.png

EN

## Operation Error Log

- The FL command is used to output the data.
- The operation error log is output. Up to 50 operation error logs are retained. Logs that exceed 50 are cleared from the oldest data.
- Other communication messages (400 to 999) and status messages (500 to 599) are not output.
- For the meanings of the error codes, see the *DX1000/DX2000 User's Manual (IM04L41B01-01E or IM04L42B01-01E)*.

- **Syntax**

```
EACRLF
yy/mo/dd_hh:mm:ss_nnn_uuu...uCRLF
.....
ENCRLF
```

|         |                         |
|---------|-------------------------|
| yy      | Year (00 to 99)         |
| mo      | Month (01 to 12)        |
| dd      | Day (01 to 31)          |
| hh      | Hour (00 to 23)         |
| mm      | Minute (00 to 59)       |
| ss      | Second (00 to 59)       |
| nnn     | Error code (001 to 999) |
| uuu...u | Error message           |
| _       | Space                   |

- **Example**

```
EA
99/05/11 12:20:00 212 "Range setting error"
99/05/11 12:30:00 217 "Media access error"
EN
```

## Login Log

- The FL command is used to output the data.
- A log of users that have logged in and logged out is output. Up to 50 login/logout logs are retained. Logs that exceed 50 are cleared from the oldest data.
- If the power goes down while logged in, you will be logged out. In this case, however, it will not be recorded as a logout.

- **Syntax**

```
EACRLF
yy/mo/dd_hh:mm:ss_XXXXXXXXXX_nnn_uuu...uCRLF
.....
ENCRLF
```

|    |                   |
|----|-------------------|
| yy | Year (00 to 99)   |
| mo | Month (01 to 12)  |
| dd | Day (01 to 31)    |
| hh | Hour (00 to 23)   |
| mm | Minute (00 to 59) |
| ss | Second (00 to 59) |

## 4.2 Output Format of ASCII Data

---

```

xxxxxxxxx Login history is output left-justified.
          Login:          Login
          Logout:         Logout
          NewTime:        New time
          TimeChg:        Time change
          PowerOff:       Power Off
          PowerOn:        Power On
          TRevStart:      Start of gradual time adjustment
          TRevEnd:        End of gradual time adjustment
          TimeDST:        Switching of the daylight savings time
          SNTPtimset:     Time change by SNTP

nnn      Operation property
          KEY:            Key operation
          COM:            Communication
          REM:            Remote
          ACT:            Event action
          SYS:            System

uuu...u  User name (up to 20 characters)
_        Space

```

- **Example**

```

EA
99/05/11 12:20:00 Login      KEY administrator
99/05/11 12:30:00 Logout    KEY administrator
99/05/11 12:20:00 Login      COM user
99/05/11 12:30:00 Logout    COM user
EN

```

## Web Operation Log

- The FL command is used to output the data.
- The log of operations on the Web screen is output. Up to 50 operations are retained. Logs that exceed 50 are cleared from the oldest data.

- **Syntax**

```

EACRLF
yy/mo/dd_hh:mm:ss_ffffff_eee_???...?CRLF
.....
ENCRLF

```

```

yy      Year (00 to 99)
mo      Month (01 to 12)
dd      Day (01 to 31)
hh      Hour (00 to 23)
mm      Minute (00 to 59)
ss      Second (00 to 59)
ffffff  Requested operation
          SCREEN:        Screen change
          KEY:            Key operation
          MSG:            Message assignment/write
          SEARCH:         View data by searching
          BATCH:          Batch switch

```

```

eee      Error code when executing the requested operation
All spaces:      Success
001 to 999:      Failure (error code)
???...? Parameter for each event (see below)
  • When fffffff = SCREEN
yy/mo/dd_hh:mm:ss_ffffff_eee_ddddd_nnCRLF
dddd     Screen type
TREND:      Trend display
DIGIT:      Digital display
BAR:        Bar graph display
HIST:       Historical trend display
OV:         Overview display

nn        Group number (01 to 36)
  • When fffffff = KEY
yy/mo/dd_hh:mm:ss_ffffff_eee_kkkkkCRLF
kkkkk     Type of key that was operated
DISP:      DISP/ENTER key
UP:        Up key
DOWN:      Down key
LEFT:      Left key
RIGHT:     Right key
FAVOR:     Favorite key

  • When fffffff = MSG
yy/mo/dd_hh:mm:ss_ffffff_eee_mmm...mCRLF
mmm...m    Message (up to 32 characters)

  • When fffffff = SEARCH
yy/mo/dd_hh:mm:ss_ffffff_eee_dddddCRLF
dddd     Data search method
TIME:     Time designation

  • When fffffff = BATCH
yy/mo/dd_hh:mm:ss_ffffff_eee_nnCRLF
nn        Batch group number (00 to 12)
00        Batch overview mode screen
01 to 12  Batch group number
_         Space

```

- **Example**

```

EA
01/02/11 12:20:00 SCREEN 275 TREND 01
01/02/11 12:21:00 SCREEN      BAR
01/02/11 12:30:00 KEY         UP
01/02/11 12:31:00 KEY         RIGHT
01/02/11 12:40:00 MSG         Hello-Hello
EN

```

## E-mail Log

- The FL command is used to output the data.
- The e-mail transmission log is output. Up to 50 operations are retained. Logs that exceed 50 are cleared from the oldest data.

- **Syntax**

EACRLF

yy/mo/dd\_hh:mm:ss\_ffffff\_eee\_n\_uuu...uCRLF

.....

ENCRLF

|         |  |
|---------|--|
| yy      | Year (00 to 99)  |
| mo      | Month (01 to 12)   |
| dd      | Day (01 to 31)   |
| hh      | Hour (00 to 23)  |
| mm      | Minute (00 to 59)  |
| ss      | Second (00 to 59)  |
| ffffff  | E-mail type  |
|         | ALARM: Alarm mail  |
|         | TIME: Scheduled mail                                       |
|         | REPORT: Report timeout mail                                |
|         | FAIL: Power failure recovery mail                          |
|         | FULL: Memory full mail                                     |
|         | TEST: Test mail  |
|         | ERROR: Error message mail                                  |
| eee     | Error code   |
|         | All spaces: Success  |
|         | 001 to 999: Error code                                     |
| n       | Recipient list   |
|         | 1: List 1  |
|         | 2: List 2  |
|         | +: List 1 and list 2                                       |
| uuu...u | Series of recipient e-mail addresses (up to 30 characters) |
| _       | Space  |

- **Example**

When list 1 is "user1@daqstation.com user2@daqmaster.com" and list 2 is "adv1@daqmaster.com adv2@daqstation.com"

EA

01/05/11 12:20:00 ALARM + user1 user2 adv1 adv2

01/05/11 12:30:00 REPORT 375 1 user1 user2

EN

## SNTP Log

- The FL command is used to output the data.
- The SNTP log is output. Up to 50 accesses to the SNTP server are retained.

- **Syntax**

*EACRLF*

*yy/mo/dd\_hh:mm:ss\_nnn\_XXXXXXXXXXCRLF*

.....

*ENCRLF*

|                   |                                 |
|-------------------|---------------------------------|
| <i>yy</i>         | Year (00 to 99)                 |
| <i>mo</i>         | Month (01 to 12)                |
| <i>dd</i>         | Day (01 to 31)                  |
| <i>hh</i>         | Hour (00 to 23)                 |
| <i>mm</i>         | Minute (00 to 59)               |
| <i>ss</i>         | Second (00 to 59)               |
| <i>nnn</i>        | Error number (000 to 999)       |
| <i>XXXXXXXXXX</i> | Detailed code (9 characters)    |
| <i>SUCCESS:</i>   | Success                         |
| <i>OVER:</i>      | Over the limit                  |
| <i>DORMANT:</i>   | Internal processing error       |
| <i>HOSTNAME:</i>  | Failed to look up the host name |
| <i>TCPIP:</i>     | Internal processing error       |
| <i>SEND:</i>      | Failed to send the request      |
| <i>TIMEOUT:</i>   | A response timeout occurred     |
| <i>BROKEN:</i>    | Packet was corrupt              |
| <i>LINK:</i>      | The data link is disconnected   |
| <i>_</i>          | Space                           |

- **Example**

*EA*

*01/05/11 12:20:00 SUCCESS*

*01/05/11 12:21:00 SUCCESS*

*01/05/11 12:30:00 292 HOSTNAME*

*EN*



## DHCP Log

- The FL command is used to output the data.
- The DHCP log is output. Up to 50 accesses to the DHCP server are retained.

- **Syntax**

*EACRLF*

*yy/mo/dd\_hh:mm:ss\_nnn\_XXXXXXXXXXCRLF*

*.....*

*ENCRLF*

|                   |  |
|-------------------|--|
| <i>yy</i>         | <b>Year</b> (00 to 99)                 |
| <i>mo</i>         | <b>Month</b> (01 to 12)                |
| <i>dd</i>         | <b>Day</b> (01 to 31)                  |
| <i>hh</i>         | <b>Hour</b> (00 to 23)                 |
| <i>mm</i>         | <b>Minute</b> (00 to 59)               |
| <i>ss</i>         | <b>Second</b> (00 to 59)               |
| <i>nnn</i>        | <b>Error number</b> (000 to 999)       |
|                   | <b>Description</b> given in the table. |
| <i>XXXXXXXXXX</i> | <b>Detailed code</b> (9 characters)    |
|                   | <b>Description</b> given in the table. |
| <i>_</i>          | <b>Space</b>                           |

The table below shows the contents of the log during normal operation.

| <b>Error Number</b> | <b>Detail Code</b> | <b>Description</b>                                |
|---------------------|--------------------|---|
| 562                 | ON                 | Detected that an Ethernet cable was connected.    |
|                     | OFF                | Detected that an Ethernet cable was disconnected. |
| 563                 | RENEW              | Requesting address renewal to the DHCP server.    |
|                     | RELEASE            | Requesting address release to the DHCP server.    |
| 564                 | RENEWED            | Address renewal complete.                         |
|                     | EXTENDED           | Address release extension request complete.       |
|                     | RELEASED           | Address release complete.                         |
| 565                 | IPCONFIG           | IP address configured.                            |
| 566                 | NOREQUEST          | Configured not to register the host name.         |
| 567                 | UPDATE             | Registered the host name to the DNS server.       |
| 568                 | REMOVE             | Removed the host name from the DNS server.        |

The table below shows the contents of the log during erroneous operation.

| Error Number | Detail Code | Description  |
|--------------|-------------|--|
| 295          | REJECT      | Address obtained by DHCP is inappropriate.                                   |
| 296          | ESEND       | Failed to send to the DHCP server.   |
|              | ESERVER     | DHCP server not found  |
|              | ESERVFAIL   | No response from the DHCP server.  |
|              | ERENEWED    | Address renewal rejected by the DHCP server.                                 |
|              | EEXTENDED   | Address lease extension request rejected by the DHCP server.                 |
|              | EEXPIRED    | Address lease period expired by the DHCP server.                             |
| 297          | INTERNAL    | Host name registration failure (transmission error reception timeout, etc.)  |
|              | FORMERR     | Host name registration failure (format error: DNS message syntax error)      |
|              | SERVFAIL    | Host name registration failure (server failure: DNS server processing error) |
|              | NXDOMAIN    | Host name registration rejection (non existent domain)                       |
|              | NOTIMP      | Host name registration rejected (not implemented)                            |
|              | REFUSED     | Host name registration rejected (operation refused)                          |
|              | YXDOMAIN    | Host name registration rejected (name exists)                                |
|              | YXRRSET     | Host name registration rejected (RR set exists)                              |
|              | NXRRSET     | Host name registration rejected (RR set does not exist)                      |
|              | NOTAUTH     | Host name registration rejection (not authoritative for zone)                |
|              | NOTZONE     | Host name registration rejection (different from zon section)                |
|              | NONAME      | Host name not entered on the DX.   |
|              | 298         | INTERNAL   |
| FORMERR      |             | Host name removal failure (format error: DNS message syntax error)           |
| SERVFAIL     |             | Host name removal failure (server failure: DNS server processing error)      |
| NXDOMAIN     |             | Host name removal rejection (non existent domain)                            |
| NOTIMP       |             | Host name removal rejected (not implemented)                                 |
| REFUSED      |             | Host name removal rejected (operation refused)                               |
| YXDOMAIN     |             | Host name removal rejected (name exists)                                     |
| YXRRSET      |             | Host name removal rejected (RR set exists)                                   |
| NXRRSET      |             | Host name removal rejected (RR set does not exist)                           |
| NOTAUTH      |             | Host name removal rejection (not authoritative for zone)                     |
| NOTZONE      |             | Host name removal rejection (different from zone section)                    |
| NOTLINKED    |             | Physical layer was disconnected when removing the host name.                 |

- **Example**

```
EA
01/05/11 12:20:00 563 RENEW
01/05/11 12:20:01 564 RENEWED
01/05/11 12:20:01 565 IPCONFIG
01/05/11 12:21:02 567 UPDATE
EN
```

### Modbus Communication Log

- The FL command is used to output the data.
- The Modbus communication log is output. Up to 50 Modbus communication events are retained.

- **Syntax**

```
EACRLF
yy/mo/dd_hh:mm:ss_c_XXXXXXXX_kkkk_nn_dCRLF
.....
ENCRLF
```

|          |   |
|----------|---|
| yy       | Year (00 to 99)   |
| mo       | Month (01 to 12)  |
| dd       | Day (01 to 31)  |
| hh       | Hour (00 to 23)   |
| mm       | Minute (00 to 59)   |
| ss       | Second (00 to 59)   |
| c        | Communication type (C or M)<br>C: Modbus client (Ethernet)<br>M: Modbus master (serial) |
| XXXXXXXX | Even that occurred (7 characters)   |
|          | DROPOUT: Communication could not keep up and drop out occurred.                         |
|          | ACTIVE: Activated.  |
|          | READY: Command ready state.   |
|          | CLOSE: Disconnected.  |
|          | HALT: Command halted.   |
| kkkk     | Detail (4 characters)   |
|          | GOOD: Normal operation  |
|          | NONE: No response from the slave device.  |
|          | FUNC: Received a function error.  |
|          | REGI: Received a register error.  |
|          | ERR: Received a packet error.   |
|          | LINK: Ethernet cable disconnected (Modbus client).                                      |
|          | HOST: Unable to result the IP address from the host name (Modbus client).               |
|          | CNCT: Failed to connect to the server (Modbus client).                                  |
|          | SEND: Failed to send the command (Modbus client).                                       |
|          | BRKN: Failed to receive the command.  |
|          | Space At command start  |
| nn       | Command number (1 to 16, space)   |
| d        | Command type (R, W, space)  |
|          | R: Read   |
|          | W: Write  |
| _        | Space   |

- **Example**

```
EA
01/05/11 12:20:00 C DROPOUT
01/05/11 12:21:00 C READY NONE 01 R
01/05/11 12:25:00 C HALT NONE 01 R
EN
```

## Alarm Summary

- The FL command is used to output the data.
- The alarm summary is output. Up to 1000 alarm events are retained. Alarm events that exceed 1000 are cleared from the oldest data.

- **Syntax**

EACRLF

yy/mo/dd\_hh:mm:ss\_kkk\_ccc\_ls\_nnnnnnnnnCRLF

.....

ENCRLF

|                   |  |
|-------------------|--|
| yy/mo/dd hh:mm:ss | Time when the alarm occurred                               |
| yy                | Year (00 to 99)  |
| mo                | Month (01 to 12)   |
| dd                | Day (01 to 31)   |
| hh                | Hour (00 to 23)  |
| mm                | Minute (00 to 59)  |
| ss                | Second (00 to 59)  |
| kkk               | Alarm cause  |
|                   | OFF: Alarm release   |
|                   | ON: Alarm occurrence                                       |
|                   | ACK: Alarm acknowledge                                     |
| ccc               | Measurement, computation, or external input channel number |
| l                 | Alarm level (1 to 4)                                       |
| s                 | Alarm type (H, h, L, l, R, r, T, or t)                     |
| nnnnnnnnnn        | Alarm sequence   |
| -                 | Space  |

For all-channel alarms, the channel number, alarm level, and alarm status items are all set to asterisk.

- **Example**

EA

01/05/11 12:20:00 ON 001 1L 1

01/05/11 12:30:00 OFF 131 3t 2

01/05/11 12:31:00 OFF \*\*\* \*\* 2

01/05/11 12:32:00 ACK 4

EN

## Message Summary

- The FL command is used to output the data.
- The message summary is output. Up to 100 messages are retained. Messages that exceed 100 are cleared from the oldest log.

- **Syntax**

EACRLF

yy/mo/dd\_hh:mm:ss\_mmm...\_ggg...\_zzz\_uuu...\_nnn...CRLF  
 .....

ENCRLF

|                 |  |
|-----------------|--|
| yy              | Year (00 to 99)  |
| mo              | Month (01 to 12)   |
| dd              | Day (01 to 31)   |
| hh              | Hour (00 to 23)  |
| mm              | Minute (00 to 59)  |
| ss              | Second (00 to 59)  |
| mmm...          | Message (32 characters. Spaces are embedded when the number of characters is less than 32 characters.)   |
| ggg...          | Message write destination display group (11 characters)  |
| xx, xx, xx, xx: | The groups in which the message is written are delimited by commas and displayed. (Up to four groups)  |
| ALL:            | When the multi batch function is not in use:<br>All display groups.<br>When the multi batch function is in use:<br>All display groups in the specified batch group |
| zzz             | Operation property   |
| KEY:            | Key operation  |
| COM:            | Communication  |
| REM:            | Remote   |
| ACT:            | Event action   |
| SYS:            | System   |
| uuu...          | User name (up to 20 characters)  |
| nnn...          | Message sequence number (0 for add messages)   |
| _               | Space  |

- **Example**

```
EA
01/05/11 12:20:00 operation-start    01,02,03,04 KEY admin    11
01/05/11 12:20:00 operation-start    01,02          KEY admin    11
01/05/11 12:20:00*0123456789abcdefg 01,02,03,04 KEY admin    12
EN
```

## Status Information

- The IS command is used to output the data. The output format varies between IS0 and IS1.
- The operation status of the recorder is output.
- For details on the status information, see section 5.2, "The Bit Structure of the Status Information."

### Output for the IS0 command

- **Syntax**

```
EACRLF
aaa.bbb.ccc.dddCRLF
ENCRLF
```

```
aaa    Status information 1 (000 to 255)
bbb    Status information 2 (000 to 255)
ccc    Status information 3 (000 to 255)
ddd    Status information 4 (000 to 255)
```

- **Example**

```
EA
000.000.032.000
EN
```

### Output for the IS1 Command

- **Syntax**

```
EACRLF
aaa.bbb.ccc.ddd.eee.fff.ggg.hhhCRLF
ENCRLF
```

```
aaa    Status information 1 (000 to 255)
bbb    Status information 2 (000 to 255)
ccc    Status information 3 (000 to 255)
ddd    Status information 4 (000 to 255)
eee    Status information 5 (000 to 255)
fff    Status information 6 (000 to 255)
ggg    Status information 7 (000 to 255)
hhh    Status information 8 (000 to 255)
```

- **Example**

```
EA
000.000.032.000.000.000.000.000
EN
```

- Status information 3, 4, 7, and 8 are edge operation. They are cleared when read by the IS command.
- Status information 1, 2, 5, and 6 are level operation. They are not cleared when read. They are cleared when the event clears.
- The status information is made up of bits that correspond to each event. Each bit can be turned ON/OFF with a filter.
- If an event occurs for a bit set to OFF by the filter, status information 3, 4, 7, and 8 discard the event. Status information 1, 2, 5, and 6 hold the event.
- The default filter setting is all ON.



- **Example 1**

File list output of an external storage medium

```
EA
05/02/24 20:07:12      1204 setting.pn1
05/02/24 20:18:36      <DIR> DATA0
EN
```

- **Example 2**

Output of a file list in the DATA directory in the internal memory

```
EA
05/02/24 20:07:12  1204 006607_050101_000402.DAD  0      1ABCDE123
05/02/24 20:07:12  1204 006608_050101_000403.DAD  0 1234567890123456
EN
```

## Check Disk

The ME command is used to output the free space on the storage medium.

- **Syntax**

```
EACRLF
zzz..._Kbyte_freeCRLF
ENCRLF
```

```
zzz...  Free space on the storage medium (16 digits)
_       Space
```

- **Example**

```
EA
12345678 Kbyte free
EN
```



### Manual Sampled/Report Data Information

The MO command is used to output the data.

- **Syntax**

```
EACRLF
slll..._yy/mo/dd_hh:mm:ss_bbbb_fff...CRLF
.....
ENCRLF
```

|        |   |
|--------|---|
| s      | Data flag   |
| Space  | Confirmed data  |
| +:     | Data that was overwritten                               |
| *:     | Data being added  |
| lll... | File number (10 digits)                                 |
| yy     | Year (00 to 99)   |
| mo     | Month (01 to 12)  |
| dd     | Day (01 to 31)  |
| hh     | Hour (00 to 23)   |
| mm     | Minute (00 to 59)                                       |
| ss     | Second (00 to 59)                                       |
| bbbb   | Number of events (4 characters)                         |
| fff... | File name (up to 48 characters including the extension) |
| _      | Space   |

- **Example**

```
EA
+      6 05/03/04 00:00:00 20 aaaa30312345.DAR
      7 05/03/05 00:00:00 20 30400005.DAR
      8 05/03/06 00:00:00 20 30500005.DAR
*      9 05/03/06 13:00:00 20 uuuu0005.DAR
EN
```

## User Information

- The FU command is used to output the data.
- User name, user level, and other information are output.

- **Syntax**

```
EACRLF
```

```
p_l_uuu...CRLF
```

```
ENCRLF
```

```

p      Login method
      E:  Ethernet
      S:  RS-232 or RS-422/485
      K:  Login using keys

l      User level
      A:  Administrator
      U:  User

uuu... User name (up to 20 characters)
_      Space
```

- **Example 1**

When the FU0 command is used, information only on the user himself or herself that is logged in is output.

```
EA
E A admin
EN
```

- **Example 2**

When the FU1 command is used, information on all users logged in through a general-purpose service or using keys is output.

```
EA
K A admin_abc
E A admin_def
E U user0033
E U user0452
EN
```

## Event Level Switch Status (Release number 3 or later)

- The FD command is used to output the event level switch status.

- **Syntax**

```
EACRLF
```

```
aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaCRLF
```

```
ENCRLF
```

aaa...Event level switch status in ascending numerical order.

```
1: ON
```

```
0: OFF
```

- **Example**

```
EA
```

```
111111111100000000001111111111
```

```
EN
```

---

## 4.3 Output Format of Binary Data

This section describes the output format of the binary data that is disclosed. For information on other binary data, see section 4.1.

- Instantaneous data (measured/computed/external input) and FIFO data
- Configured channel information data
- Configured alarm information data
- Manual sample file
- Report sample file

The measured data and computed data are output using signed 16-bit integer and signed 32-bit integer, respectively. These integers can be understood as physical values by adding the decimal point and the unit. The decimal point position can be determined using the FE command.

### Typical Examples to Obtain Physical Values from Binary Data

| Binary Value | Decimal Position Code | Physical Value (Measured Value) |
|--------------|-----------------------|---------------------------------|
| 10000        | 0                     | 10000                           |
| 10000        | 1                     | 1000.0                          |
| 10000        | 2                     | 100.00                          |
| 10000        | 3                     | 10.000                          |
| 10000        | 4                     | 1.0000                          |


### **Note**

The "CRLF" used in this section denotes carriage return line feed.

---

### Measured/Computed Data and FIFO Data

- The FD command is used to output the measured/computed data.
- The FF command is used to output the FIFO data.
- You can use the CB command to specify whether to output the data of measurement channels set to skip and computation or external input channels set to OFF.
- The ID number of the output format is 1. See “ID” in section 4.1.

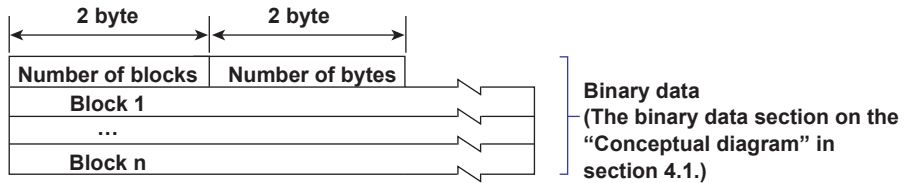

#### Number of Blocks

This is the number of blocks.

#### Number of Bytes

This is the size of one block in bytes.

#### Block

|        |         |        |        |                     |        |         |  |             |        |
|--------|---------|--------|--------|---------------------|--------|---------|--|-------------|--------|
| 1 byte | 1 byte  | 1 byte | 1 byte | 1 byte              | 1 byte | 2 bytes |  | 1 byte      | 1 byte |
| Year   | Month   | Day    | Hour   | Min                 | s      | ms      |  | (Reserved)* | Flag   |
| T**    | Channel | A2A1   | A4A3   | Measured data       |        |         |  |             |        |
| ...    | ...     | ...    | ...    | ...                 |        |         |  |             |        |
| ...    | ...     | ...    | ...    | ...                 |        |         |  |             |        |
| T**    | Channel | A2A1   | A4A3   | Computed data       |        |         |  |             |        |
| ...    | ...     | ...    | ...    | ...                 |        |         |  |             |        |
| ...    | ...     | ...    | ...    | ...                 |        |         |  |             |        |
| T**    | Channel | A2A1   | A4A3   | External input data |        |         |  |             |        |
| ...    | ...     | ...    | ...    | ...                 |        |         |  |             |        |
| ...    | ...     | ...    | ...    | ...                 |        |         |  |             |        |

4 bits      12 bits

\* The sections indicated as (Reserved) are not used. The value is undefined.

\*\* Abbreviation of “Type” for the purpose of this figure.

#### Flag

The meaning of the each flag is given in the table below. The flags are valid during FIFO data output. The flags are undefined for other cases.

| Bit | Flag |     | Meaning of the Flag  |
|-----|------|-----|--|
|     | 0    | 1   |  |
| 7   | No   | Yes | Indicates that the screen snapshot was executed.   |
| 6   | –    | –   |  |
| 5   | –    | –   |  |
| 4   | –    | –   |  |
| 3   | –    | –   |  |
| 2   | No   | Yes | Indicates that the decimal position or unit information was changed during measurement.  |
| 1   | No   | Yes | Indicates that the FIFO acquiring interval was changed with the FR command during measurement.   |
| 0   | No   | Yes | Indicates that the internal process took too much time (computation, for example) and that the measurement could not keep up at the specified scan interval. |

The bits that have “–” for the flag column are not used. The value is undefined.

### 4.3 Output Format of Binary Data

- **Block Member**

| Name                              | Binary Value  |
|-----------------------------------|---|
| Year                              | 0 to 99   |
| Month                             | 1 to 12   |
| Day                               | 1 to 31   |
| Hour                              | 0 to 23   |
| Minute                            | 0 to 59   |
| Second                            | 0 to 59   |
| Millisecond                       | 0 to 999  |
| (Reserved)                        | Undefined   |
| Type                              | 0x0: 16-bit integer (measurement channel/external input channel)<br>0x8: 32-bit integer (computation channel) |
| Channel                           | 1 to 48, 101 to 160, or 201 to 440  |
| Alarm status*                     |   |
| A1 (Bit 0 to 3)                   |   |
| A2 (Bit 4 to 7)                   | 0 to 8  |
| A3 (Bit 0 to 3)                   |   |
| A4 (Bit 4 to 7)                   |   |
| Measured data/external input data | 0 to 0xFFFF   |
| Computed data                     | 0 to 0xFFFFFFFF   |

\* A binary value 0 to 8 is entered in the upper and lower 4 bits of a byte (8 bits) for the alarm status. The binary values 0 to 8 correspond to H (high limit alarm), L (low limit alarm), h (difference high-limit alarm), l (difference low-limit alarm), R (high limit on rate-of-change alarm), r (low limit on rate-of-change alarm), T (delay high limit alarm), and t (delay low limit alarm) as follows:

0: no alarm, 1: H, 2: L, 3: h, 4: l, 5: R, 6: r, 7: T, and 8: t.

#### Special Data Values


The measured/computed data take on the following values under special conditions.

| Special Data Value     | Measured Data | Computed Data |
|------------------------|---------------|---------------|
| + Over                 | 7FFFH         | 7FFF7FFFH     |
| - Over                 | 8001H         | 80018001H     |
| Skip                   | 8002H         | 80028002H     |
| Error                  | 8004H         | 80048004H     |
| Undefined              | 8005H         | 80058005H     |
| Power failure data     | 7F7FH         | 7F7F7F7FH     |
| Burnout (up setting)   | 7FFAH         | 7FFF7FFFH     |
| Burnout (down setting) | 8006H         | 80018001H     |

The number of blocks, number of bytes, and measured/computed data are output according to the byte order specified with the BO command.

## Configured Channel Information Data

- The FE5 command is used to output the data.
- The ID number of the output format is 25.
- You can use the CB command to specify whether to output the data of measurement channels set to skip and computation channels set to OFF.
- The figure below indicates the format.

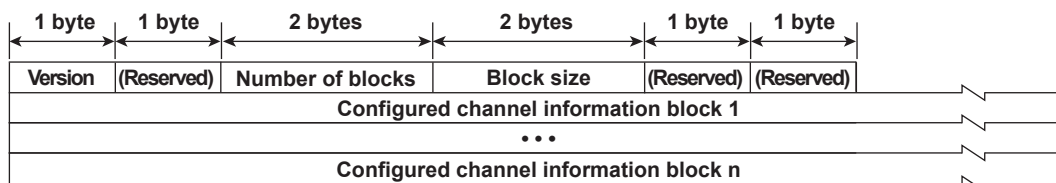

### Format for Release Number 2 or Earlier (Format version 1)

#### • Format Details

| Item              | Description                                     | Output Value                            |
|-------------------|---|---|
| Version           | Format version                                  | 1                                       |
| Number of blocks* | Number of configured channel information blocks | Up to 348                               |
| Block size*       | Configured channel information block size       | 72 (fixed)                              |
| Block 1 to n      | Configured channel information blocks           | Up to 25056 bytes<br>See Block Details. |

\* Output in the byte order specified by the BO command.

#### • Block Details

| Item                   | Number of Bytes | Description  |
|------------------------|-----------------|--|
| Channel number*        | 2               | 1 to 440   |
| Decimal place          | 1               | 0 to 4   |
| (Reserved)             | 1               | 0  |
| Channel type*          | 4               | 2H for measurement and external input channels and 4H for computation channels.<br>This value is ORed with 800H when the range mode is DI or 8000H when the range mode is skip.          |
| Unit information       | 8               | The terminator is '\0.'  |
| Tag information        | 24              | The terminator is '\0.'  |
| Minimum input value* 4 | 4               | Measurement channels: Allowable input range under the current setting  |
| Maximum input value* 4 | 4               | Computation channels: -9999999, +9999999 (fixed)<br>External input channels: -30000, +30000 (fixed)  |
| Span lower limit*      | 4               | Measurement channels (when scaling is not used): Same value as the DX span setting   |
| Span upper limit*      | 4               | Measurement channels (when scaling is used): Same value as the DX scale setting<br>Computation and external input channels (when scaling is not used): Same value as the DX span setting |
| Scale lower limit*     | 4               | Measurement channels: Same value as the span   |
| Scale upper limit*     | 4               | Computation and external input channels: Same value as the span  |
| FIFO type*             | 2               | 1  |
| Area in the FIFO*      | 2               | Indicates the position of its own channel in the FIFO block of one sample.<br>The value starts from zero.  |
| (Reserved)             | 4               | 0  |

\* Output in the byte order specified by the BO command.

### 4.3 Output Format of Binary Data

#### Format for Release Number 3 or Later (Format version 2)

##### • Format Details


| Item             | Description                                     | Output Value        |
|------------------|---|---------------------|
| Version          | Format version                                  | 2                   |
| Number of blocks | Number of configured channel information blocks | 348 maximum         |
| Block size       | Configured channel information block size       | 176 (fixed)         |
| Blocks 1 to n    | Configured channel information block            | 61248 bytes maximum |

##### • Block Details

| Description                      | Bytes | Description   |
|----------------------------------|-------|---|
| Channel number                   | 2     | Same as format version 1.   |
| Decimal place                    | 1     | Same as format version 1.   |
| (Reserved)                       | 1     | Same as format version 1.   |
| Channel type                     | 4     | Same as format version 1.   |
| Unit information                 | 8     | Same as format version 1.   |
| Tag information                  | 24    | You can enter up to 23 characters for the tag comment. The terminator is '\0.'          |
| Minimum input value              | 4     | Same as format version 1.   |
| Maximum input value              | 4     |   |
| Span lower limit                 | 4     | Same as format version 1.   |
| Span upper limit                 | 4     |   |
| Scale lower limit                | 4     | Same as format version 1.   |
| Scale upper limit                | 4     |   |
| FIFO type                        | 2     | Same as format version 1.   |
| Area in the FIFO                 | 2     | Same as format version 1.   |
| (Reserved)                       | 4     | Same as format version 1.   |
| Tag comment                      | 64    | The terminator is '\0.'   |
| Tag number usage, use or not use | 1     | 0: Do not use. 1: Use.  |
| (Reserved)                       | 7     | 0 (fixed)   |
| Tag No.                          | 32    | The terminator is '\0.'<br>If tag number usage is set to zero (do not use): All zeroes. |

## Configured Alarm Information Data

- The FE6 command is used to output the data.
- The ID number of the output format is 26.
- The figure below indicates the format.

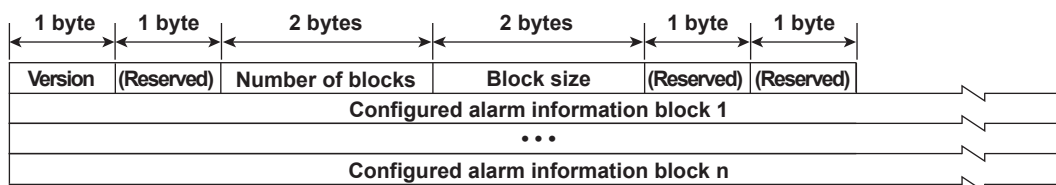

### Format Details

| Item              | Description  | Output Value                           |
|-------------------|--|--|
| Version           | Format version                                     | 1                                      |
| Number of blocks* | Number of configured alarm information blocks      | Up to 348                              |
| Block size*       | Size of the of configured alarm information blocks | 24                                     |
| Block 1 to n      | Configured alarm information blocks                | Up to 8352 bytes<br>See Block Details. |

\* Output in the byte order specified by the BO command.

### Block Details

| Item            | Number of Bytes | Notes  |
|-----------------|-----------------|--|
| Channel number* | 2               | 1 to 440   |
| Decimal place   | 1               | 0 to 4   |
| (Reserved)      | 1               | 0  |
| Alarm type      | 4               | The following settings are entered in order from level 1 to 4.<br>0: Setting off, 1: H (high limit), 2: L (low limit),<br>3: h (difference high limit), 4: l (difference low limit),<br>5: R (high limit on rate-of-change),<br>6: r (low limit on rate-of-change),<br>7: T (delay high limit), 8: t (delay low limit) |
| Alarm value*    | 4×4             | The alarm values are entered in order from level 1 to 4.   |

\* Output in the byte order specified by the BO command.

## Manual Sampled Data

- The ME or MO command is used to output the data.
- The ID number of the output format is 17. See section 4.1.
- For the data format, see the *DX1000/DX2000 User's Manual (IM04L41B01-01E or IM04L42B01-01E)*.

## Report Data

- The ME or MO command is used to output the data.
- The ID number of the output format is 18. See section 4.1.
- For the data format, see the *DX1000/DX2000 User's Manual (IM04L41B01-01E or IM04L42B01-01E)*.



## 4.4 Output Format of Instrument Information

This section describes the instrument information output format of the instrument information server.

### **Note**

The “*CRLF*” used in this section denotes carriage return line feed.

### Response

The parameters of the packet that are returned as a response are lined up according to the following format.

```
EACRLF
(Parameter 1)__(value of parameter 1)CRLF
(Parameter 2)__(value of parameter 2)CRLF
.....
ENCRLF
```

- The parameter values are output in the order specified by the command parameter.
- The output order of the parameters when `all` is specified is not constant.
- Even if the same parameters are specified numerous times, only the first occurrence is output.
- Lower-case characters are used for the parameters.
- An underscore (`_`) indicates a space.

The following table shows the parameter types.

| Parameter | Output Information |
|-----------|--------------------|
| serial    | Serial number      |
| host      | Host name          |
| ip        | IP address         |


### Output Example

Several output examples are indicated below.

| Packet Parameter Sent as Commands  | Response   |
|--|--|
| Parameters are not case sensitive.<br>ip HoSt  | EA<br>ip = 192.168.111.24<br>host = DX2000<br>EN |
| Even if the same parameters are specified numerous times, only the first occurrence is output.<br>host ip host ip host | EA<br>host = DX2000<br>ip = 192.168.111.24<br>EN |
| Undefined parameters will be ignored.<br>(Space)   | EA<br>EN   |

## 5.1 Status Information and Filter

The following figure illustrates the status information and filter on the DX.

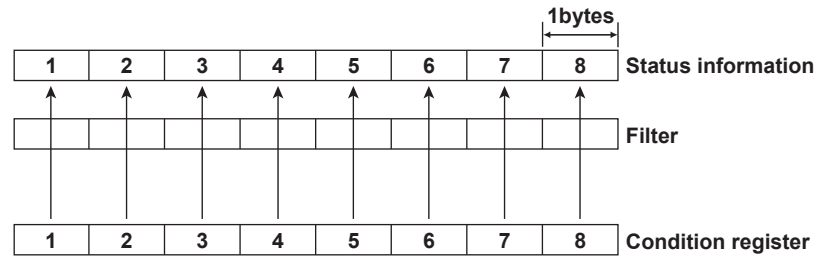

- The IF command can be used to set the filter.
- When a status indicated on the following page is entered, the corresponding bit in the condition register is set to 1. The logical AND of the condition register and the filter becomes the status information.
- The IS command is used to output the status information. Status information 3, 4, 7, and 8 are cleared when they are output. Status information 1, 2, 5, and 6 are not cleared when it is output, and remains at 1 while the event is occurring.
- When multiple connections are up, filters can be specified for the individual connection. Therefore, the status information can be held for each connection.
- Empty bits indicated as “-” are fixed to 0.

## 5.2 Bit Structure of the Status Information

The following four groups of status information are output in response to a status information output request using the IS command. For the output format, see “Status Information” in section 4.2, “Output Format of ASCII Data.”

### Status Information 1

| Bit | Name             | Description  |
|-----|------------------|--|
| 0   | Basic setting    | Set to 1 during basic setting mode.  |
| 1   | Memory sampling  | Set to 1 during recording (memory sample). On models with the multi batch (/BT2 option), this bit is set to 1 if any batch group is recording (memory sample). |
| 2   | Computing        | Set to 1 while computation is in progress.   |
| 3   | Alarm activated  | Set to 1 while the alarm is activated.   |
| 4   | Accessing medium | Set to 1 while the display, event, manual sampled, report, or screen image data file are being saved to the external storage medium.                           |
| 5   | E-mail started   | Set to 1 while the e-mail transmission is started.   |
| 6   | –                | –  |
| 7   | –                | –  |

### Status Information 2

| Bit | Name                          | Description   |
|-----|-------------------------------|---|
| 0   | –                             | –   |
| 1   | –                             | –   |
| 2   | Memory end                    | Set to 1 while the free space in the internal memory or external storage medium is low. This is the same as the internal memory and CF card status of the device information output (/F1 or /F2 options; see section 1.9 in the <i>DX1000/DX2000 User's Manual</i> ). |
| 3   | Logged in through keys        | Set to 1 while logged in through keys.  |
| 4   | –                             | –   |
| 5   | –                             | –   |
| 6   | Detecting measurement error   | Set to 1 while error is being detected in the A/D converter or a burnout is being detected.   |
| 7   | Detecting communication error | Set to 1 if any command is stopping the communication on the Modbus master or Modbus client.  |

### Status Information 3

| Bit | Name                                     | Description  |
|-----|--|--|
| 0   | Measurement dropout                      | Set to 1 when the measurement process could not keep up.                               |
| 1   | Decimal point/unit information change    | Set to 1 when the decimal point/unit information is changed.                           |
| 2   | Command error                            | Set to 1 when there is a command syntax error.   |
| 3   | Execution error                          | Set to 1 when an error occurs during command execution.                                |
| 4   | SNTP error when memory start is executed | Set to 1 when the time could not be adjusted using SNTP when memory start is executed. |
| 5   | Custom display setup error               | Set to 1 if an error occurs when a custom display setup file is saved or loaded.       |
| 6   | –  | –  |
| 7   | –  | –  |

**Status Information 4**

| Bit | Name                          | Description   |
|-----|-------------------------------|---|
| 0   | A/D conversion complete       | Set to 1 when the A/D conversion of the measurement is complete.  |
| 1   | Medium access complete        | Set to 1 when the display, event, manual sampled, report, or screen image data file are finished being saved to the external storage medium.<br>Set to 1 when setup data is successfully saved or loaded. |
| 2   | Report generation complete    | Set to 1 when report generation is complete.  |
| 3   | Timeout                       | Set to 1 when the timer expires.  |
| 4   | Custom display setup complete | Set to 1 when the custom display setup is successfully saved or loaded.   |
| 5   | —                             | —   |
| 6   | USER key detection            | Set to 1 when the USER key is pressed.  |
| 7   | —                             | —   |

**Status Information 5**

| Bit | Name                           | Description                      |
|-----|--------------------------------|----------------------------------|
| 0   | Batch group #1 memory sampling | Set to 1 during memory sampling. |
| 1   | Batch group #2 memory sampling | Same as above                    |
| 2   | Batch group #3 memory sampling | Same as above                    |
| 3   | Batch group #4 memory sampling | Same as above                    |
| 4   | Batch group #5 memory sampling | Same as above                    |
| 5   | Batch group #6 memory sampling | Same as above                    |
| 6   | Batch group #7 memory sampling | Same as above                    |
| 7   | Batch group #8 memory sampling | Same as above                    |

**Status Information 6**

| Bit | Name                            | Description                      |
|-----|---------------------------------|----------------------------------|
| 0   | Batch group #9 memory sampling  | Set to 1 during memory sampling. |
| 1   | Batch group #10 memory sampling | Same as above                    |
| 2   | Batch group #11 memory sampling | Same as above                    |
| 3   | Batch group #12 memory sampling | Same as above                    |
| 4   | —                               | —                                |
| 5   | —                               | —                                |
| 6   | —                               | —                                |
| 7   | —                               | —                                |

**Status Information 7 to 8**

All bits are zeroes.

## 6.1 Ethernet Interface Specifications

### Basic Specifications

|   |   |
|---|---|
| Electrical and mechanical specifications: | Conforms to IEEE 802.3 (Ethernet frames conform to the DIX specification) |
| Transmission medium type:                 | 10BASE-T  |
| Protocol:                                 | TCP, IP, UDP, ICMP, ARP, FTP, HTTP, SNTP, SMTP                            |

### Maximum Number of Connections and Number of Simultaneous Uses

The following table indicates the number of simultaneous uses (number of users that can use the function simultaneously), the maximum number of connections, and the port number for each function.

| Function                      | Maximum Number of Connections | Number of Simultaneous Uses |                 | Port Number <sup>*4</sup> |
|-------------------------------|-------------------------------|-----------------------------|-----------------|---------------------------|
|                               |                               | Administrator               | User            |                           |
| Setting/measurement server    | 3                             | 1                           | 2 <sup>*1</sup> | 34260/tcp <sup>*2</sup>   |
| Maintenance/test server       | 1                             | 1                           | 1 <sup>*1</sup> | 34261/tcp <sup>*2</sup>   |
| FTP server                    | 2                             | 2                           | 2 <sup>*1</sup> | 21/tcp <sup>*3</sup>      |
| Web server (HTTP)             | 1                             | –                           | –               | 80/tcp <sup>*3</sup>      |
| SNTP server                   | –                             | –                           | –               | 123/udp <sup>*3</sup>     |
| Modbus server                 | 2                             | –                           | –               | 502/tcp <sup>*3</sup>     |
| Instrument information server | –                             | –                           | –               | 34264/udp <sup>*2</sup>   |
| EthereNet/IP                  |                               |                             |                 |                           |
| Explicit message              | 10                            | –                           | –               | 44818/tcp                 |
| EthereNet/IP                  |                               |                             |                 |                           |
| Explicit message              | –                             | –                           | –               | 44818/udp                 |
| EthereNet/IP                  |                               |                             |                 |                           |
| Implicit message              | –                             | –                           | –               | 2222/udp                  |

\*1 There are user limitations. For details, see section 1.1.

\*2 The port numbers are fixed.

\*3 The default port number. You can set the value in the range of 1 to 65535. Use the default port number unless there is a special reason not to do so.

\*4 Make sure that port number settings are not duplicated.



## 6.3 Modbus Protocol Specifications

### Modbus Client Function

#### Basic Operation

- The DX, as a Modbus client device, communicates with Modbus servers periodically by sending commands at specified intervals.
- The Modbus client function operates independently from the Modbus master function via the serial communication.
- The supported functions are “reading data from the input registers and hold registers on the server” and “writing data into the hold registers on the server.”

#### Modbus Client Specifications

Communicate via ModbusTCP

Communication media: Ethernet 10Base-T

Read cycle: Select from the following:

125 ms, 250 ms, 500 ms, 1 s, 2 s, 5 s, and 10 s

Connection retry: Select the reconnection interval after disconnecting the connection after the connection wait time has elapsed from the following:

OFF, 10 s, 20 s, 30 s, 1 min, 2 min, 5 min, 10 min, 20 min, 30 min, and 1 h

Connection timeout value: 1 min

However, when the IP address is not established with DHCP, a communication error results immediately.

Command timeout value: 10 s

Server: Set up to 16 servers

Supported functions: Supported Modbus client functions are as follows:

The server device must support these functions.

| Function Code | Function                                      | Operation   |
|---------------|---|---|
| 3             | Read the hold register<br>(4XXXX, 4XXXXX)     | The DX reads the hold register of the server device into the communication input data or external input channel.  |
| 4             | Read the input register<br>(3XXXX, 3XXXXX)    | The DX reads the input register of the server device into the communication input data or external input channel. |
| 16            | Write to the hold register<br>(4XXXX, 4XXXXX) | The DX writes the measured or computed data to the hold register of the server device.                            |

### 6.3 Modbus Protocol Specifications


#### Command

Command type: R, R-M, W, W-M  
 Number of commands: Set up to 16 commands  
 Data type: See the table below.

| Symbol   | Description                                      |
|----------|--|
| INT16    | 16-bit signed integer                            |
| UINT16   | 16-bit unsigned integer                          |
| INT32_B  | 32-bit signed integer (higher and lower order)   |
| INT32_L  | 32-bit signed integer (lower and higher order)   |
| UINT32_B | 32-bit unsigned integer (higher and lower order) |
| UINT32_L | 32-bit unsigned integer (lower and higher order) |
| FLOAT_B  | 32-bit floating point (higher and lower order)   |
| FLOAT_L  | 32-bit floating point (lower and higher order)   |

- **Reading Values into the External Input Channels (DX2000 Only)**

- External input channels are an option (/MC1).
- Reads values from the server register into the external input channels of the DX.
- The data type of external input channels is signed 16-bit integer.
- The measurement range and unit are set using the external input channels. The decimal point position is determined by the Span\_L settings.

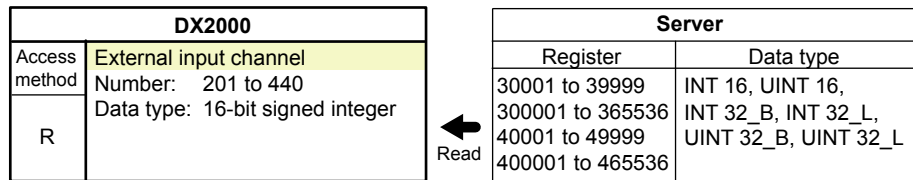


#### External Input Channel Values

The range of external input channel values is -30000 to 30000 excluding the decimal. If this range is exceeded, the value is set to +Over or -Over.

| Value in the register on the server | Value on the external input channel |
|-------------------------------------|-------------------------------------|
| More than 30000                     | + Over (7FFFH)                      |
| -30000 to 30000                     | -30000 to 30000                     |
| Less than -30000                    | - Over (8001H)                      |

- **Reading Values into Communication Input Data**

- Reads values from the server register into the communication input data of the DX.
- Communication input data is an option (/M1, /PM1 option).
- The data type of the communication input data is 32-bit floating point.
- Communication input data can be displayed on a computation channel by including the data in the equation of a DX computation channel (/M1, /PM1 option). The measurement range and unit are also set using the computation channel.

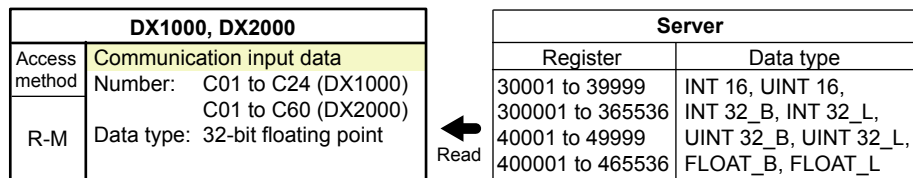


#### When the Data Type of the Read Source Server Is Not Floating Point Type


Because the data type of the communication input data is 32-bit floating point, the value never overflows. However, if the absolute value of the data is large for INT32\_B, INT32\_L, UINT32\_B, or UINT32\_L, a rounding error may appear. This is because the mantissa of the floating point type is 24 bits.



- **Writing the Measured Values of the Measurement Channels**
  - Writes the measured values of the measurement channels to the server registers.
  - The data type of measured values is signed 16-bit integer.
  - The values can be written directly including special data (See “Special Data Values” in section 4.3). Perform data processing on the slave device.

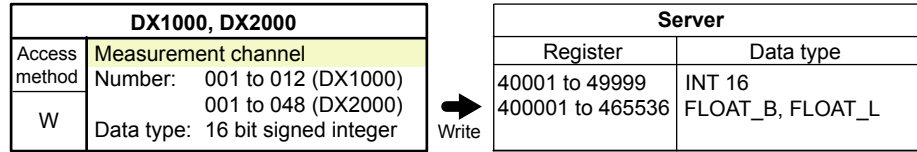

- **Writing the Computed Values of the Computation Channels**
  - Writes the computed values of the computation channels to the server registers.
  - The computation function is an option (/M1, /PM1 option).
  - The data type of computed values is signed 32-bit integer.

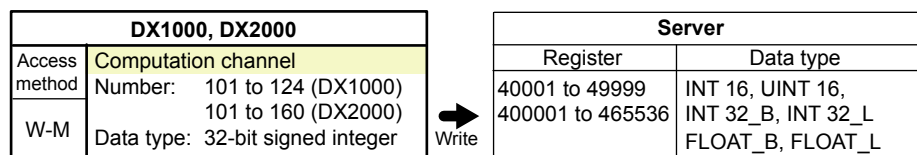

**When the Data Type of the Write Destination Server Is Identical (INT32\_B or INT32\_L)**

The values can be written directly including special data (See “Special Data Values” in section 4.3). Perform data processing on the slave device.

**When the Data Type of the Write Destination Server Is Different (INT16 or UINT16)**

INT16: A value in the range of -32768 to 32767 (excluding the decimal point) can be written. If lower than -32768 the value reverts to -32768, and if higher than 32767 it reverts to 32767.

UINT16: A value in the range of 0 to 65535 (excluding the decimal point) can be written. If lower than 0 the value reverts to 0, and if higher than 65535 it reverts to 65535.

| Computed value   | Data type of the write destination |            |
|------------------|------------------------------------|------------|
|                  | INT16                              | UINT16     |
| More than 32767  | 32767                              |            |
| -32768 to 32767  | -32768 to 32767                    |            |
| Less than -32767 | -32768                             |            |
| More than 65535  |                                    | 65535      |
| 0 to 65535       |                                    | 0 to 65535 |
| Less than 0      |                                    | 0          |

**Special values**

| Computed value     | Data type of the write destination |        |
|--------------------|------------------------------------|--------|
|                    | INT16                              | UINT16 |
| + Over             | 32767                              | 65535  |
| Burnout (Up)       |                                    |        |
| - Over             |                                    |        |
| Burnout (Down)     |                                    |        |
| Skip               |                                    |        |
| Error              |                                    |        |
| Undefined          |                                    |        |
| Power failure data |                                    |        |

## Modbus Server Function

### Modbus Server Specifications

Communicate via ModbusTCP

Communication media: Ethernet 10Base-T

Port: 502/tcp (default value)

Command wait timeout: 1 minute. However, the timeout to receive the command after starting to receive the command is 10 seconds.


Maximum number of connections: 2

Supported functions: The functions that the DX supports are listed below.


| Function Code | Function                               | Operation   |
|---------------|--|---|
| 3             | Read the hold register (4XXXXX)        | The client device reads the communication input data.   |
| 4             | Read the input register (3XXXXX)       | The client device reads the computed, measured, alarm, and time data of the DX.               |
| 6             | Single write to hold register (4XXXXX) | The client device writes to the communication input data or external input channel of the DX. |
| 8             | Loopback test                          | The client device performs a loopback test of the DX.   |
| 16            | Write to the hold register (4XXXXX)    | The master device writes to the communication input data or external input channel of the DX. |

Register assignments (shared with the Modbus slave function)

| Data               |               | Input register   |                       |
|--------------------|---------------|------------------|-----------------------|
|                    |               | Number           | Data type             |
| Measurement ch.    | Measured data | 300001 to 300048 | 16-bit signed integer |
|                    | Alarm status  | 301001 to 301048 | Bit string            |
| Computation ch.    | Computed data | 302001 to 302120 | 32-bit signed integer |
|                    | Alarm status  | 303001 to 303060 | Bit string            |
| External input ch. | Measured data | 304001 to 304240 | 16-bit signed integer |
|                    | Alarm status  | 305001 to 305240 | Bit string            |
| Measurement ch.    | Alarm list    | 306001 to 306012 | Bit string            |
| Computation ch.    | Alarm list    | 306021 to 306035 | Bit string            |
| External input ch. | Alarm list    | 306041 to 306100 | Bit string            |
| Time               |               | 309001 to 309008 | 16-bit signed integer |



| Data                                | Hold register    |                       |
|-------------------------------------|------------------|-----------------------|
|                                     | Number           | Data type             |
| Communication input data            | 400001 to 400060 | 16-bit signed integer |
|                                     | 400301 to 400420 | 32-bit floating point |
| Measured data on external input ch. | 401001 to 401240 | 16-bit signed integer |




**Input Register (shared with the Modbus slave function)**

• **Common Items**

- The client device can only read the input registers.
- Decimal position and unit are not included. Specify them on the client device.
- External input channels are DX2000 option (/MC1).

• **Details**

| Input Register                               | Data                                     | Data Type             |
|--|--|-----------------------|
| 300001                                       | Measured data of measurement channel 001 | 16-bit signed integer |
| 300048                                       | Measured data of measurement channel 048 |                       |
| • There is no decimal position information.  |  |                       |
| 301001                                       | Alarm status of measurement channel 001  | Bit string            |
| 301048                                       | Alarm status of measurement channel 048  |                       |
| • Register structure and alarm status values |  |                       |




| 4-bits value | Meaning                            |
|--------------|------------------------------------|
| 0            | No alarm                           |
| 1            | High limit alarm                   |
| 2            | Low limit alarm                    |
| 3            | Difference high limit alarm        |
| 4            | Difference low limit alarm         |
| 5            | High limit on rate-of-change alarm |
| 6            | Low limit on rate-of-change alarm  |
| 7            | Delay high limit alarm             |
| 8            | Delay low limit alarm              |

|        |  |                       |
|--------|--|-----------------------|
| 302001 | Lower bytes of the computed data of computation channel 101  | 32-bit signed integer |
| 302002 | Higher bytes of the computed data of computation channel 101 |                       |
| 302119 | Lower bytes of the computed data of computation channel 160  |                       |
| 302120 | Higher bytes of the computed data of computation channel 160 |                       |

- Register structure

**Example: Channel 101**

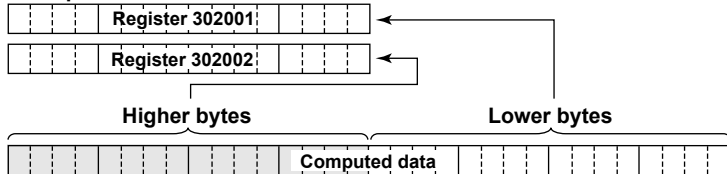


- There is no decimal position information.

|   |   |                       |
|---|---|-----------------------|
| 303001  | Alarm status of computation channel 101     | Bit string            |
| 303060  | Alarm status of computation channel 160     |                       |
| • Register structure and alarm status values: Same as the alarm status of the measurement channels. |   |                       |
| 304001  | Measured data of external input channel 201 | 16-bit signed integer |
| 304240  | Measured data of external input channel 440 |                       |
| • There is no decimal position information.   |   |                       |
| 305001  | Alarm status of external input channel 201  | Bit string            |
| 305240  | Alarm status of external input channel 440  |                       |
| • Register structure and alarm status values: Same as the alarm status of the measurement channels. |   |                       |

### 6.3 Modbus Protocol Specifications

| Input Register | Data  | Data Type  |
|----------------|---|------------|
| 306001         | List of alarms of measurement channels 001 to 004 | Bit string |
| 306012         | List of alarms of measurement channels 045 to 048 |            |

- Register structure



Indicates the alarm status of four channels in one register. Set to 1 when alarm is activated.

The figure is an example of register 306001 (measurement channels 001 to 004).

|        |  |            |
|--------|--|------------|
| 306021 | List of alarms of computation channels 101 to 104    | Bit string |
| 306035 | List of alarms of computation channels 157 to 160    |            |
| 306041 | List of alarms of external input channels 201 to 204 | Bit string |
| 306100 | List of alarms of external input channels 437 to 440 |            |

- Register structure: Same as the list of alarms of measurement channels.

- Register structure: Same as the list of alarms of measurement channels.

\* Input registers 306001 to 306100 can be accessed consecutively. All unassigned register bits are read as zeroes.

| Input Register | Data        | Data Type             |
|----------------|-------------|-----------------------|
| 309001         | Year        | 16-bit signed integer |
| 309002         | Month       |                       |
| 309003         | Day         |                       |
| 309004         | Hour        |                       |
| 309005         | Minute      |                       |
| 309006         | Second      |                       |
| 309007         | Millisecond |                       |
| 309008         | DST         |                       |

**Hold Register (shared with the Modbus slave function)**• **Common Items**

- The client device can read and write to the hold registers.
- Communication input data is an option (/M1, /PM1).
- External input channels are DX2000 option (/MC1).

**When Writing**

- Communication input data can be handled on a computation channel by including the data in the equation of a DX computation channel.
- External input channel data can be handled on an external input channel.
- Details

• **Details**

| Hold Register | Data  | Data Type             |
|---------------|---|-----------------------|
| 400001<br>    | Communication input data C01<br>  | 16-bit signed integer |
| 400060        | Communication input data C60  |                       |
|               | <ul style="list-style-type: none"> <li>• Precautions to be taken when the client device reads the data<br/>The communication input data of the DX is floating point type, but the data is converted to signed 16-bit integer when the data is read.</li> <li>• Precautions to be taken when the client device writes the data<br/>Only data in signed 16-bit integer type can be written. Floating point values cannot be written.</li> </ul> |                       |
| 400301        | Lower bytes of communication input data C01   | 32-bit floating point |
| 400302        | Higher bytes of communication input data C01  |                       |
|               |   |                       |
| 400419        | Lower bytes of communication input data C60   |                       |
| 400420        | Higher bytes of communication input data C60  |                       |
|               | <ul style="list-style-type: none"> <li>• Precautions to be taken when the client device writes the data<br/>Input range: <math>-9.9999E29</math> to <math>-1E-30</math>, 0, <math>1E-30</math> to <math>9.9999E29</math><br/>If values outside this range are used on a computation channel, a computation error occurs.</li> </ul>   |                       |
| 401001<br>    | External input channel write register 201<br>   | 16-bit signed integer |
| 401240        | External input channel write register 440   |                       |
|               | <ul style="list-style-type: none"> <li>• Precautions to be taken when the client device writes the data<br/>Only data in signed 16-bit integer type can be written.<br/>The measurement range and unit are set using the external input channels. The decimal point position is determined by the Span_L settings.</li> </ul>   |                       |

### 6.3 Modbus Protocol Specifications

#### Extended Hold Registers (Shared with the Modbus slave function; release number 3 or later)

The following hold registers have been added. You can perform a portion of the operations by writing in the registers.

- Internal switch
- Lot number or lot number for each batch group (when the multi batch function (/BT2 option) is in use)
- Batch number or batch group number for each batch group (when the multi batch function (/BT2 option) is in use)
- Recording (memory sample) start and stop or recording (memory sample) start and stop for each batch group (when the multi batch function (/BT2 option) is in use)
- Alarm ACK
- Alarm display reset
- Computation start, computation stop, computation reset, computation dropout ACK, and computation reset for each batch group (when the multi batch function (/BT2 option) is in use)
- Manual sampling, event data sampling start trigger, and snapshot
- Message and free message writing or message and free message writing for each batch group (when the multi batch function (/BT2 option) is in use)
- Event edge switch
- Event level switch

#### List of Registers

| Register | Description        | Supplementary Information | Type  | Access | Simultaneous Access |      |
|----------|--------------------|---------------------------|-------|--------|---------------------|------|
|          |                    |                           |       |        | Write               | Read |
| 406061   | Internal switch 1  | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406062   | Internal switch 2  | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406063   | Internal switch 3  | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406064   | Internal switch 4  | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406065   | Internal switch 5  | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406066   | Internal switch 6  | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406067   | Internal switch 7  | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406068   | Internal switch 8  | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406069   | Internal switch 9  | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406070   | Internal switch 10 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406071   | Internal switch 11 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406072   | Internal switch 12 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406073   | Internal switch 13 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406074   | Internal switch 14 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406075   | Internal switch 15 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406076   | Internal switch 16 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406077   | Internal switch 17 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406078   | Internal switch 18 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406079   | Internal switch 19 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406080   | Internal switch 20 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406081   | Internal switch 21 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406082   | Internal switch 22 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406083   | Internal switch 23 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406084   | Internal switch 24 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406085   | Internal switch 25 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406086   | Internal switch 26 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406087   | Internal switch 27 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406088   | Internal switch 28 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406089   | Internal switch 29 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |
| 406090   | Internal switch 30 | OFF: 0. ON: 1.            | INT16 | R      | –                   |      |

### 6.3 Modbus Protocol Specifications

| Register         | Description                           | Supplementary Information   | Type    | Access | Simultaneous Access |      |
|------------------|---------------------------------------|---|---------|--------|---------------------|------|
|                  |                                       |   |         |        | Write               | Read |
| 407833 to 407834 | Lot number                            | Valid range: 0 to 99999999<br>(When the multi batch function (/BT2 option) is in use, this is the lot number of batch group 1.)   | INT32_L | R/W    |                     |      |
| 407835 to 407851 | Batch number                          | Up to 17 registers (up to 33 characters with '0' termination). The batch number must be 32 characters or less.<br>(When the multi batch function (/BT2 option) is in use, this is the batch number of batch group 1.)   | STR34   | R/W    |                     |      |
| 409503           | Memory start or stop                  | Stop: 0. Start: 1.<br>(When the multi batch function (/BT2 option) is in use, this register controls memory start and stop of batch group 1.)   | INT16   | R/W    |                     |      |
| 409504           | Alarm acknowledge                     | Applies to all alarms.<br><When writing><br>Execute alarm ACK: 1 (fixed)<br><When reading (alarm summary)><br>Alarm off: 0. Alarm illuminated: 1. Alarm blinking (occurring): 2. Alarm blinking (not occurring): 3  | INT16   | R/W    |                     |      |
| 409505           | Alarm display reset                   | Execute alarm display reset: 1 (fixed)  | INT16   | W      |                     |      |
| 409506           | Computation operation                 | <When writing><br>Stop: 0. Start: 1. Reset: 2. Computation dropout ACK: 4.<br>(When the multi batch function (/BT2 option) is in use, this register performs computation reset of batch group 1.)<br><When reading><br>Stop: 0. Start: 1.<br>(You cannot read this register when the multi batch function (/BT2 option) is in use.) | INT16   | R/W    |                     |      |
| 409512           | Manual sampling start or other action | Manual sampling: 0. Manual trigger: 1. Snapshot: 2.   | INT16   | W      |                     |      |
| 410001 to 410002 | Batch 1 lot number                    | Valid range: 0 to 99999999  | INT32_L | R/W    |                     |      |
| 410003 to 410020 | Batch 1 batch number                  | Up to 18 registers (up to 35 characters with '0' termination).<br>The batch number must be 32 characters or less.   | STR36   | R/W    |                     |      |
| 410021 to 410050 | (Reserved) batch 1                    | -   | -       | -      |                     |      |
| 410051 to 410052 | Batch 2 lot number                    | Valid range: 0 to 99999999  | INT32_L | R/W    |                     |      |
| 410053 to 410070 | Batch 2 batch number                  | Up to 18 registers (up to 35 characters with '0' termination).<br>The batch number must be 32 characters or less.   | STR36   | R/W    |                     |      |
| 410071 to 410100 | (Reserved) batch 2                    | -   | -       | -      |                     |      |
| 410101 to 410102 | Batch 3 lot number                    | Valid range: 0 to 99999999  | INT32_L | R/W    |                     |      |
| 410103 to 410120 | Batch 3 batch number                  | Up to 18 registers (up to 35 characters with '0' termination).<br>The batch number must be 32 characters or less.   | STR36   | R/W    |                     |      |
| 410121 to 410150 | (Reserved) batch 3                    | -   | -       | -      |                     |      |
| 410151 to 410152 | Batch 4 lot number                    | Valid range: 0 to 99999999  | INT32_L | R/W    |                     |      |
| 410153 to 410170 | Batch 4 batch number                  | Up to 18 registers (up to 35 characters with '0' termination).<br>The batch number must be 32 characters or less.   | STR36   | R/W    |                     |      |
| 410171 to 410200 | (Reserved) batch 4                    | -   | -       | -      |                     |      |

### 6.3 Modbus Protocol Specifications

| Register         | Description           | Supplementary Information  | Type    | Access | Simultaneous Access |      |
|------------------|-----------------------|--|---------|--------|---------------------|------|
|                  |                       |  |         |        | Write               | Read |
| 410201 to 410202 | Batch 5 lot number    | Valid range: 0 to 99999999   | INT32_L | R/W    |                     |      |
| 410203 to 410220 | Batch 5 batch number  | Up to 18 registers (up to 35 characters with '\0' termination).<br>The batch number must be 32 characters or less. | STR36   | R/W    |                     |      |
| 410221 to 410250 | (Reserved) batch 5    | -  | -       | -      |                     |      |
| 410251 to 410252 | Batch 6 lot number    | Valid range: 0 to 99999999   | INT32_L | R/W    |                     |      |
| 410253 to 410270 | Batch 6 batch number  | Up to 18 registers (up to 35 characters with '\0' termination).<br>The batch number must be 32 characters or less. | STR36   | R/W    |                     |      |
| 410271 to 410300 | (Reserved) batch 6    | -  | -       | -      |                     |      |
| 410301 to 410302 | Batch 7 lot number    | Valid range: 0 to 99999999   | INT32_L | R/W    |                     |      |
| 410303 to 410320 | Batch 7 batch number  | Up to 18 registers (up to 35 characters with '\0' termination).<br>The batch number must be 32 characters or less. | STR36   | R/W    |                     |      |
| 410321 to 410350 | (Reserved) batch 7    | -  | -       | -      |                     |      |
| 410351 to 410352 | Batch 8 lot number    | Valid range: 0 to 99999999   | INT32_L | R/W    |                     |      |
| 410353 to 410370 | Batch 8 batch number  | Up to 18 registers (up to 35 characters with '\0' termination).<br>The batch number must be 32 characters or less. | STR36   | R/W    |                     |      |
| 410371 to 410400 | (Reserved) batch 8    | -  | -       | -      |                     |      |
| 410401 to 410402 | Batch 9 lot number    | Valid range: 0 to 99999999   | INT32_L | R/W    |                     |      |
| 410403 to 410420 | Batch 9 batch number  | Up to 18 registers (up to 35 characters with '\0' termination).<br>The batch number must be 32 characters or less. | STR36   | R/W    |                     |      |
| 410421 to 410450 | (Reserved) batch 9    | -  | -       | -      |                     |      |
| 410451 to 410452 | Batch 10 lot number   | Valid range: 0 to 99999999   | INT32_L | R/W    |                     |      |
| 410453 to 410470 | Batch 10 batch number | Up to 18 registers (up to 35 characters with '\0' termination).<br>The batch number must be 32 characters or less. | STR36   | R/W    |                     |      |
| 410471 to 410500 | (Reserved) batch 10   | -  | -       | -      |                     |      |
| 410501 to 410502 | Batch 11 lot number   | Valid range: 0 to 99999999   | INT32_L | R/W    |                     |      |
| 410503 to 410520 | Batch 11 batch number | Up to 18 registers (up to 35 characters with '\0' termination).<br>The batch number must be 32 characters or less. | STR36   | R/W    |                     |      |
| 410521 to 410550 | (Reserved) batch 11   | -  | -       | -      |                     |      |
| 410551 to 410552 | Batch 12 lot number   | Valid range: 0 to 99999999   | INT32_L | R/W    |                     |      |
| 410553 to 410570 | Batch 12 batch number | Up to 18 registers (up to 35 characters with '\0' termination).<br>The batch number must be 32 characters or less. | STR36   | R/W    |                     |      |
| 410571 to 410600 | (Reserved) batch 12   | -  | -       | -      |                     |      |



### 6.3 Modbus Protocol Specifications

| Register         | Description                    | Supplementary Information  | Type               | Access | Simultaneous Access |      |     |
|------------------|--------------------------------|--|--------------------|--------|---------------------|------|-----|
|                  |                                |  |                    |        | Write               | Read |     |
| 410601           | Preset message writing         | Message number (1 to 100)  | INT16              | W      |                     |      |     |
| 410602           |                                | Message write destination<br><ul style="list-style-type: none"> <li>When the multi batch function is not in use<br/>0: All groups. 1 to 36: Specified group number.</li> <li>When the multi batch function is in use<br/>0: All groups of a specified batch number (410603)<br/>1 to 12: Specified group number</li> </ul> | INT16              | W      |                     |      |     |
| 410603           |                                | Batch number designation for multi batch: 1 to 12 (Valid only when the multi batch function is available. Any value when the multi batch function is not available)  | INT16              | W      |                     |      |     |
| 410604 to 410610 | (Reserved) Preset message      | -  | -                  | -      |                     |      |     |
| 410611           | Free message writing           | Message number (1 to 10)   | INT16              | W      |                     |      |     |
| 410612           |                                | Message write destination<br><ul style="list-style-type: none"> <li>When the multi batch function is not in use<br/>0: All groups. 1 to 36: Specified group number.</li> <li>When the multi batch function is in use<br/>0: All groups of a specified batch number (410613)<br/>1 to 12: Specified group number</li> </ul> |                    |        |                     |      |     |
| 410613           |                                | Batch number designation for multi batch: 1 to 12 (Valid only when the multi batch function is available. Any value when the multi batch function is not available)  | INT16              | W      |                     |      |     |
| 410614 to 410631 |                                | Free message<br>Up to 18 registers (up to 35 characters with '0' termination).<br>The message must be 32 characters or less.   | STR36              | W      |                     |      |     |
| 410632 to 410680 |                                | (Reserved) Free message  | -                  | -      |                     |      | -   |
| 410681           |                                | Batch 1 memory start and stop  | Stop: 0. Start: 1. | INT16  |                     |      | R/W |
| 410682           | Batch 2 memory start and stop  | Stop: 0. Start: 1.   | INT16              | R/W    |                     |      |     |
| 410683           | Batch 3 memory start and stop  | Stop: 0. Start: 1.   | INT16              | R/W    |                     |      |     |
| 410684           | Batch 4 memory start and stop  | Stop: 0. Start: 1.   | INT16              | R/W    |                     |      |     |
| 410685           | Batch 5 memory start and stop  | Stop: 0. Start: 1.   | INT16              | R/W    |                     |      |     |
| 410686           | Batch 6 memory start and stop  | Stop: 0. Start: 1.   | INT16              | R/W    |                     |      |     |
| 410687           | Batch 7 memory start and stop  | Stop: 0. Start: 1.   | INT16              | R/W    |                     |      |     |
| 410688           | Batch 8 memory start and stop  | Stop: 0. Start: 1.   | INT16              | R/W    |                     |      |     |
| 410689           | Batch 9 memory start and stop  | Stop: 0. Start: 1.   | INT16              | R/W    |                     |      |     |
| 410690           | Batch 10 memory start and stop | Stop: 0. Start: 1.   | INT16              | R/W    |                     |      |     |
| 410691           | Batch 11 memory start and stop | Stop: 0. Start: 1.   | INT16              | R/W    |                     |      |     |
| 410692           | Batch 12 memory start and stop | Stop: 0. Start: 1.   | INT16              | R/W    |                     |      |     |

### 6.3 Modbus Protocol Specifications

| Register | Description                | Supplementary Information            | Type  | Access | Simultaneous Access |      |
|----------|----------------------------|--------------------------------------|-------|--------|---------------------|------|
|          |                            |                                      |       |        | Write               | Read |
| 410693   | Batch 1 computation reset  | Execute computation reset: 1 (fixed) | INT16 | W      |                     |      |
| 410694   | Batch 2 computation reset  | Execute computation reset: 1 (fixed) | INT16 | W      |                     |      |
| 410695   | Batch 3 computation reset  | Execute computation reset: 1 (fixed) | INT16 | W      |                     |      |
| 410696   | Batch 4 computation reset  | Execute computation reset: 1 (fixed) | INT16 | W      |                     |      |
| 410697   | Batch 5 computation reset  | Execute computation reset: 1 (fixed) | INT16 | W      |                     |      |
| 410698   | Batch 6 computation reset  | Execute computation reset: 1 (fixed) | INT16 | W      |                     |      |
| 410699   | Batch 7 computation reset  | Execute computation reset: 1 (fixed) | INT16 | W      |                     |      |
| 410700   | Batch 8 computation reset  | Execute computation reset: 1 (fixed) | INT16 | W      |                     |      |
| 410701   | Batch 9 computation reset  | Execute computation reset: 1 (fixed) | INT16 | W      |                     |      |
| 410702   | Batch 10 computation reset | Execute computation reset: 1 (fixed) | INT16 | W      |                     |      |
| 410703   | Batch 11 computation reset | Execute computation reset: 1 (fixed) | INT16 | W      |                     |      |
| 410704   | Batch 12 computation reset | Execute computation reset: 1 (fixed) | INT16 | W      |                     |      |
| 410705   | Event edge switch 1        | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410706   | Event edge switch 2        | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410707   | Event edge switch 3        | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410708   | Event edge switch 4        | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410709   | Event edge switch 5        | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410710   | Event edge switch 6        | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410711   | Event edge switch 7        | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410712   | Event edge switch 8        | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410713   | Event edge switch 9        | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410714   | Event edge switch 10       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410715   | Event edge switch 11       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410716   | Event edge switch 12       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410717   | Event edge switch 13       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410718   | Event edge switch 14       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410719   | Event edge switch 15       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410720   | Event edge switch 16       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410721   | Event edge switch 17       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410722   | Event edge switch 18       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410723   | Event edge switch 19       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410724   | Event edge switch 20       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410725   | Event edge switch 21       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410726   | Event edge switch 22       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410727   | Event edge switch 23       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410728   | Event edge switch 24       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410729   | Event edge switch 25       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410730   | Event edge switch 26       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410731   | Event edge switch 27       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410732   | Event edge switch 28       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410733   | Event edge switch 29       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |
| 410734   | Event edge switch 30       | Execute event edge switch: 1 (fixed) | INT16 | W      |                     |      |

| Register | Description           | Supplementary Information | Type  | Access | Simultaneous Access |      |
|----------|-----------------------|---------------------------|-------|--------|---------------------|------|
|          |                       |                           |       |        | Write               | Read |
| 410765   | Event level switch 1  | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410766   | Event level switch 2  | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410767   | Event level switch 3  | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410768   | Event level switch 4  | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410765   | Event level switch 5  | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410770   | Event level switch 6  | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410771   | Event level switch 7  | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410772   | Event level switch 8  | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410773   | Event level switch 9  | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410774   | Event level switch 10 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410775   | Event level switch 11 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410776   | Event level switch 12 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410777   | Event level switch 13 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410778   | Event level switch 14 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410779   | Event level switch 15 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410780   | Event level switch 16 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410781   | Event level switch 17 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410782   | Event level switch 18 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410783   | Event level switch 19 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410784   | Event level switch 20 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410785   | Event level switch 21 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410786   | Event level switch 22 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410787   | Event level switch 23 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410788   | Event level switch 24 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410789   | Event level switch 25 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410790   | Event level switch 26 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410791   | Event level switch 27 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410792   | Event level switch 28 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410793   | Event level switch 29 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |
| 410794   | Event level switch 30 | OFF: 0. ON: 1.            | INT16 | R/W    |                     |      |

Notation used in the Access column

W: Writable

R: Readable

If you read a write-only (W) register, zero is always read.

If you write to a read-only (R) register, an error occurs.

Notation used in the Simultaneous access column

Blank: Indicates a range of registers that can be written to or read from simultaneously.

You cannot simultaneously access across a solid line.

-: Not accessible.

### 6.3 Modbus Protocol Specifications

#### How to Use

| Item              | Description  |                      |                |                      |        |       |         |        |       |         |        |       |         |           |       |         |        |       |         |        |       |         |
|-------------------|--|----------------------|----------------|----------------------|--------|-------|---------|--------|-------|---------|--------|-------|---------|-----------|-------|---------|--------|-------|---------|--------|-------|---------|
| Data type STRnn   | <p>Registers in which ASCII codes are entered starting with the specified register. It is terminated with a NULL character (\0).<br/>The number of characters that can be entered that includes the NULL character is indicated in the nn section.</p> <p>Example of setting the batch number (STR36 type) of batch group 1 to "ABCD"<br/>*** denotes any value.</p> <table border="1"> <thead> <tr> <th>Register</th> <th>Value to Write</th> <th>Hexadecimal Notation</th> </tr> </thead> <tbody> <tr> <td>410003</td> <td>'A'B'</td> <td>(4142H)</td> </tr> <tr> <td>410004</td> <td>'C"D'</td> <td>(4344H)</td> </tr> <tr> <td>410005</td> <td>'\0**</td> <td>(00**H)</td> </tr> <tr> <td>410006 to</td> <td></td> <td></td> </tr> <tr> <td>410020</td> <td>**</td> <td>(****H)</td> </tr> </tbody> </table> <p>Write the entire character string using one command.<br/>In the above example, registers 410003 to 410005 must be written using one command.<br/>A zero is read when you read a write-only register.</p>   | Register             | Value to Write | Hexadecimal Notation | 410003 | 'A'B' | (4142H) | 410004 | 'C"D' | (4344H) | 410005 | '\0** | (00**H) | 410006 to |       |         | 410020 | **    | (****H) |        |       |         |
| Register          | Value to Write   | Hexadecimal Notation |                |                      |        |       |         |        |       |         |        |       |         |           |       |         |        |       |         |        |       |         |
| 410003            | 'A'B'  | (4142H)              |                |                      |        |       |         |        |       |         |        |       |         |           |       |         |        |       |         |        |       |         |
| 410004            | 'C"D'  | (4344H)              |                |                      |        |       |         |        |       |         |        |       |         |           |       |         |        |       |         |        |       |         |
| 410005            | '\0**  | (00**H)              |                |                      |        |       |         |        |       |         |        |       |         |           |       |         |        |       |         |        |       |         |
| 410006 to         |  |                      |                |                      |        |       |         |        |       |         |        |       |         |           |       |         |        |       |         |        |       |         |
| 410020            | **   | (****H)              |                |                      |        |       |         |        |       |         |        |       |         |           |       |         |        |       |         |        |       |         |
| Lot number        | <ul style="list-style-type: none"> <li>• Access the registers two registers at a time.</li> <li>• You can only access from the first register.</li> <li>• On models without the multi batch function (/BT2 option) or on models with the multi batch function (/BT2 option) but with the multi batch function disabled, if you access a lot number of a batch group, an error occurs.</li> </ul>   |                      |                |                      |        |       |         |        |       |         |        |       |         |           |       |         |        |       |         |        |       |         |
| Batch number      | <ul style="list-style-type: none"> <li>• You can only access from the first register.</li> <li>• On models without the multi batch function (/BT2 option) or on models with the multi batch function (/BT2 option) but with the multi batch function disabled, if you access a batch number of a batch group, an error occurs.</li> </ul>  |                      |                |                      |        |       |         |        |       |         |        |       |         |           |       |         |        |       |         |        |       |         |
| Message           | <ul style="list-style-type: none"> <li>• You can only write from the first register.</li> <li>• A message is written using one command. In other words, write to registers 410601 to 410603 using one command. On models without the multi batch function, you only have to write to registers 410601 and 410602 instead.</li> </ul> <p>On models without the multi batch function, the message write destination can be omitted (write only to 410601). If you omit it, the operation is the same as when all groups are specified.</p>   |                      |                |                      |        |       |         |        |       |         |        |       |         |           |       |         |        |       |         |        |       |         |
| Free message      | <ul style="list-style-type: none"> <li>• You can only write from the first register.</li> <li>• A free message is written using one command.</li> </ul> <p>If you omit the free message section, an all-space message is written.<br/>On models without the multi batch function, the message write destination and subsequent registers can be omitted (write only to 410611). If you omit them, an all-space message is written to every group.<br/>Example: To write the free message "ABCD" to all display groups in batch group number 4 using message number 10, write the values in the following table using one command. *** denotes any value.</p> <table border="1"> <thead> <tr> <th>Register</th> <th>Value to Write</th> <th>Hexadecimal Notation</th> </tr> </thead> <tbody> <tr> <td>410611</td> <td>10</td> <td>(000AH)</td> </tr> <tr> <td>410612</td> <td>0</td> <td>(0000H)</td> </tr> <tr> <td>410613</td> <td>4</td> <td>(0004H)</td> </tr> <tr> <td>410614</td> <td>'A"B'</td> <td>(4142H)</td> </tr> <tr> <td>410615</td> <td>'C"D'</td> <td>(4344H)</td> </tr> <tr> <td>410616</td> <td>'\0**</td> <td>(00**H)</td> </tr> </tbody> </table> | Register             | Value to Write | Hexadecimal Notation | 410611 | 10    | (000AH) | 410612 | 0     | (0000H) | 410613 | 4     | (0004H) | 410614    | 'A"B' | (4142H) | 410615 | 'C"D' | (4344H) | 410616 | '\0** | (00**H) |
| Register          | Value to Write   | Hexadecimal Notation |                |                      |        |       |         |        |       |         |        |       |         |           |       |         |        |       |         |        |       |         |
| 410611            | 10   | (000AH)              |                |                      |        |       |         |        |       |         |        |       |         |           |       |         |        |       |         |        |       |         |
| 410612            | 0  | (0000H)              |                |                      |        |       |         |        |       |         |        |       |         |           |       |         |        |       |         |        |       |         |
| 410613            | 4  | (0004H)              |                |                      |        |       |         |        |       |         |        |       |         |           |       |         |        |       |         |        |       |         |
| 410614            | 'A"B'  | (4142H)              |                |                      |        |       |         |        |       |         |        |       |         |           |       |         |        |       |         |        |       |         |
| 410615            | 'C"D'  | (4344H)              |                |                      |        |       |         |        |       |         |        |       |         |           |       |         |        |       |         |        |       |         |
| 410616            | '\0**  | (00**H)              |                |                      |        |       |         |        |       |         |        |       |         |           |       |         |        |       |         |        |       |         |
| Computation reset | <p>On models without the multi batch function (/BT2 option) or on models with the multi batch function (/BT2 option) but with the multi batch function disabled, if you access computation reset of a batch group, an error occurs.</p>  |                      |                |                      |        |       |         |        |       |         |        |       |         |           |       |         |        |       |         |        |       |         |

| Item                | Description   |
|---------------------|---|
| Simultaneous access | <ul style="list-style-type: none"> <li>Batch numbers and lot numbers can be written using one command for each batch.</li> </ul> <p>Example 1: On models without the multi batch function (/BT2 option), you can write to registers 407833 to 407851 using one command.</p> <p>Example 2: For batch group 1, you can write to registers 410001 to 410020 using one command.</p> <p>Example 3: To set the batch number of batch group 1 to "ABCD" (see the explanation for "Data type STRnn" for details), you can write registers 410001 to 410005 using one command.</p> <ul style="list-style-type: none"> <li>You cannot simultaneously access batch numbers or lot numbers across multiple batch groups.</li> <li>When reading, you can access the following registers simultaneously. <ul style="list-style-type: none"> <li>Internal switches 1 to 30</li> <li>Memory start/stop for batches 1 to 12</li> <li>Event level switches 1 to 30</li> </ul> </li> </ul> |

### When the Data Type in a Command Differs from the DX Data Type

Every DX data value has a set data type.

If you access the DX using the same data type, all of the data, including special data, are sent to the DX without any change. If you access the DX using a data type that is different from the DX data type, the data type is converted. For details on the conversion rules, see "Communication Considerations" in the *DX1000/DX1000N/DX2000 EtherNet/IP Communication Interface User's Manual (IM04L41B01-18E)*.

### Modbus Error Response (Common to Modbus server and Modbus slave)

The DX returns the following error codes to a client or master device.

| Code | Error   | Description   |
|------|---|---|
| 1    | ILLEGAL FUNCTION<br>Invalid function code           | An attempt was made to execute a function that is not supported.  |
| 2    | ILLEGAL DATA ADDRESS<br>Invalid register number     | Failed to access the register.  |
| 3    | ILLEGAL DATA VALUE<br>Invalid number of registers   | When reading, the specified number of registers was less than or equal to zero or greater than or equal to 126.<br>When writing, the specified number of registers was less than or equal to zero or greater than or equal to 124.  |
| 7    | NEGATIVE<br>ACKNOWLEDGE<br>Invalid contents written | <ul style="list-style-type: none"> <li>A lot number that is outside the valid range was entered.</li> <li>Invalid characters (such as '¥x1b') were written in batch number or free message registers.</li> <li>Failed to control the following operations. <ul style="list-style-type: none"> <li>Writing messages</li> <li>Writing free messages</li> <li>Writing batch numbers and lot numbers</li> </ul> </li> </ul> |

However, no response is returned for the following errors.

- CRC error
- Errors other than those shown above

### Modbus Master Function

#### Basic Operations

- The DX, as a Modbus master device, communicates with Modbus slaves periodically by sending commands at specified intervals.
- The Modbus master function operates independently from the Modbus client function via the Ethernet communication.
- The supported functions are “reading data from the input registers and hold registers on the slave” and “writing data into the hold registers on the slave.”

#### Serial Communication Specifications (Common to the Modbus Slave Function)

Communicate via ModbusRTU

Communication media: RS-232, RS-422, or RS-485

Control system: No flow control (none only)

Baud rate: Select from 1200, 2400, 4800, 9600, 19200, and 38400

Start bit: 1 bit (fixed)

Data length: 8 bit (fixed)

Parity: Select odd, even, or none

Stop bit: 1 bit (fixed)

Message termination determination:  
Time equivalent to 48 bits

#### Modbus Master Specifications

Read cycle: Select the cycle at which data is read from other devices from the following: 125, 250, 500 ms, 1, 2, 5, and 10 s

Timeout value: Select the timeout value when there is no response from the specified slave after sending a command from the DX from the following: 125, 250, 500ms, 1, 2, 5, 10 s, and 1 min

Retry count: Select the retry count when there is no response for a command sent from the DX to the specified slave.  
OFF, 1, 2, 3, 4, 5, 10, and 20

Auto recovery cycle: Select the cycle for automatically recovering from the following:  
OFF, 1, 2, 5, 10, 20, 30 min, and 1 h

Wait between commands: Select the wait time\* after receiving a response of a command until sending the next command from the following:  
OFF, 5, 10, 15, 45, and 100 ms

\* When communicating using an RS-485 two-wire system, the signals may collide, because the master and slave devices driving the communication switch in half-duplex mode. If the communication does not work, increase the wait time.

Command type: R, R-M, W, W-M

Command setting: Set up to 16 commands

Command items: Read channel 201 to 440, C01 to C60

Write channel 001 to 048, 101 to 160 (varies depending on the model)

Address: 1 to 247

Input register: 30001 to 39999, 300001 to 365535

Hold register: 40001 to 49999, 400001 to 465535

Access method: Same as the Modbus client.

Supported functions: Same as the Modbus client.

Data type: Same as the Modbus client.

## Modbus Slave Function

Serial Communication Specifications:


|                        |                                    |
|------------------------|------------------------------------|
|                        | Same as the Modbus Master Function |
| Slave address:         | 1 to 99.                           |
| Supported functions:   | Same as the Modbus server.         |
| Register assignments:  | Same as the Modbus server.         |
| Modbus error response: | Same as the Modbus server.         |

# Appendix 1 Data Dropout during Modbus Communication


## Data Dropout during Modbus Client

If the response to the previous command is not complete when the DX attempts to issue a command to a server device, the DX command cannot issue the command causing a data dropout. Take appropriate measures by referring to the following figures.


### 1. When the response from the server device takes a long time

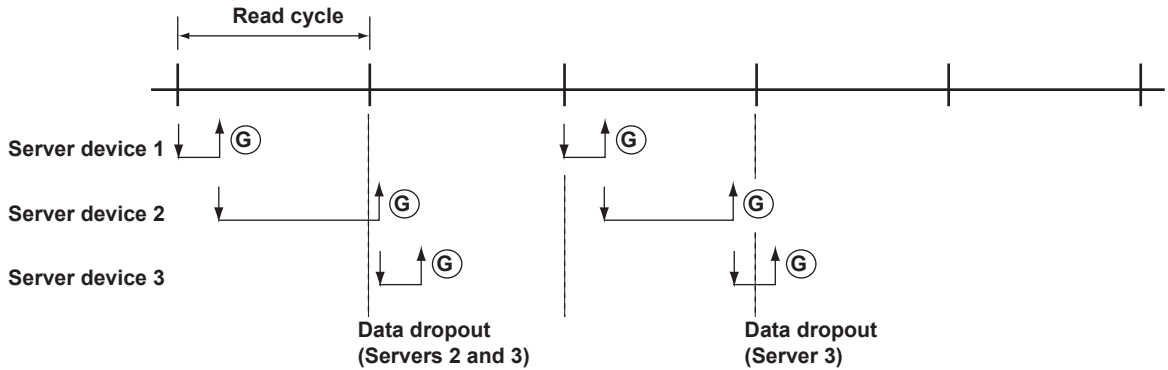

### 2. When the connection is dropped because there is no response from the server device

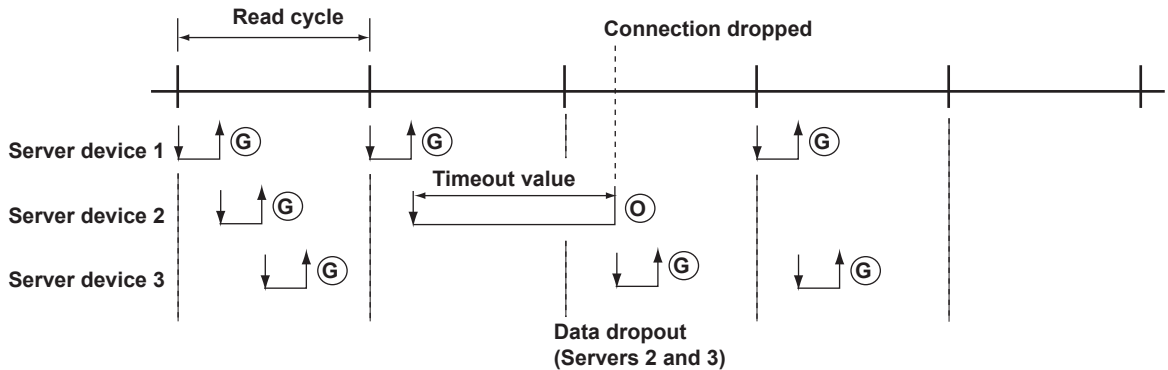

### 3. When the communication recovers by connection retry

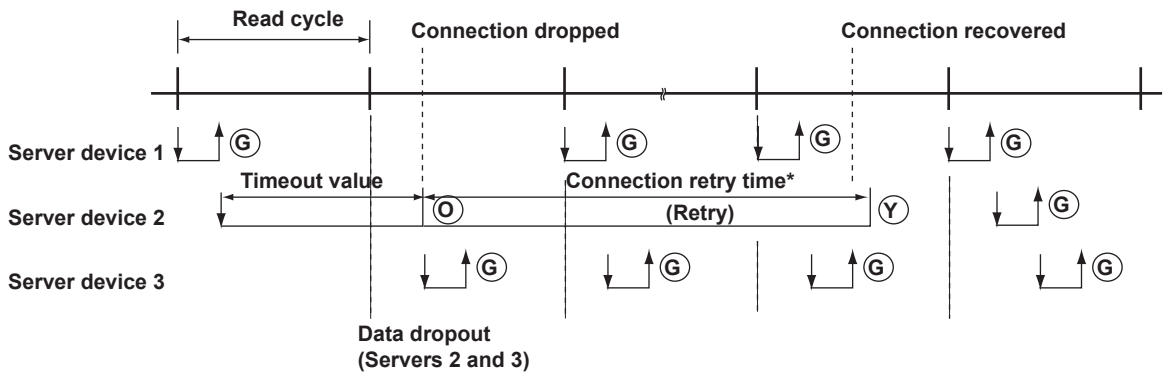

(G) (Y) (O) (R) : Status lamp  
 ↓ : Command from the DX  
 ↑ : Response from the server device


\* The first connection retry after the connection is dropped is shorter than the specified interval. The status lamp condition is an example when connection retry is configured.




### Data Dropout during Modbus Master

If the response to the previous command is not complete when the DX attempts to issue a command to a slave device, the DX command cannot issue the command causing a data dropout. Take appropriate measures by referring to the following figures.


**1. When the response from the slave device takes a long time**

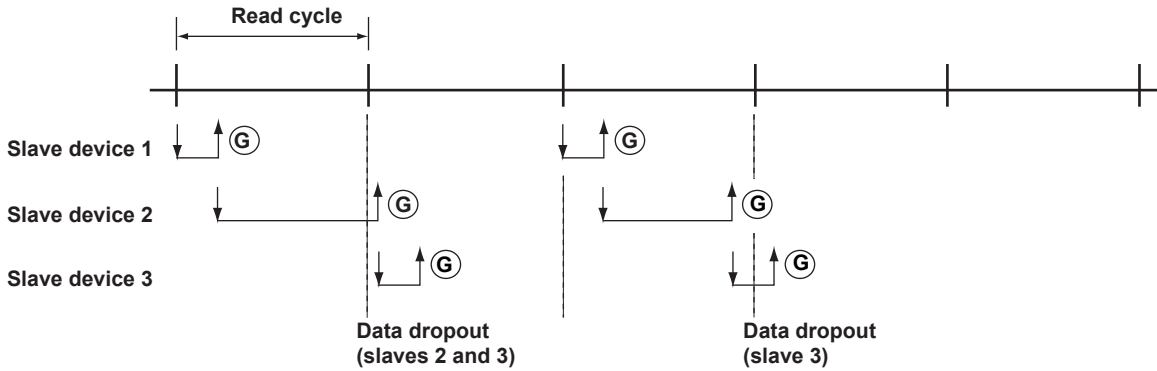

**2. When there is no response from the slave device**

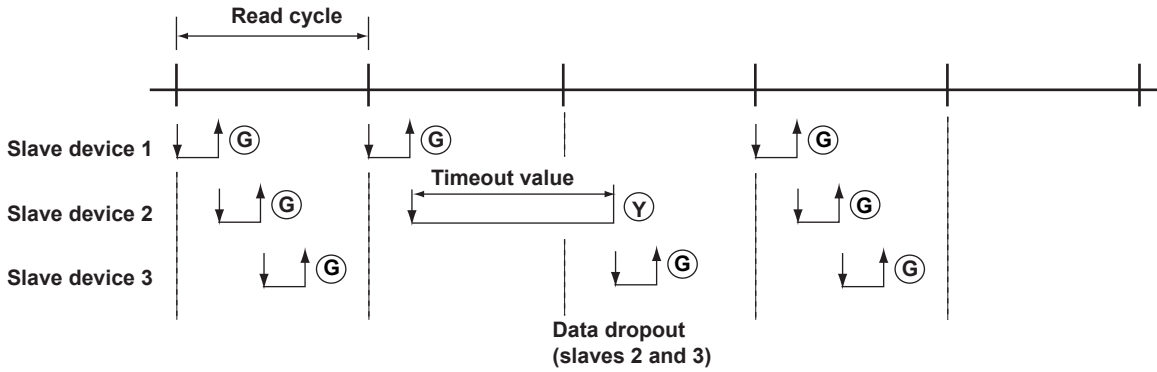

**3. When the slave device that is not responding is disconnected (retry count is set to 1)**

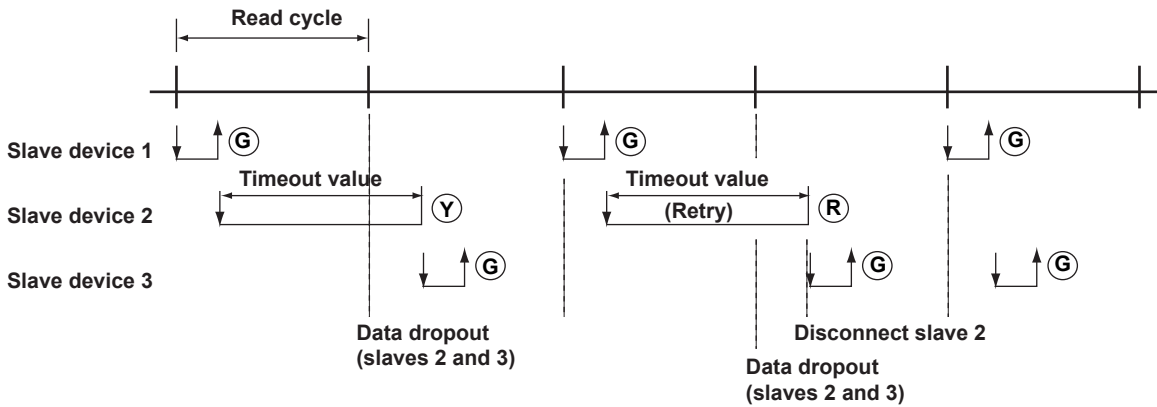

ⓐ ⓑ ⓒ Status lamp



↓ : Command from the DX

↑ : Response from the slave device

# Appendix 2 Login Procedure

You log into the DX from your PC to use the functionality of the setting/measurement server and the maintenance/test server via the Ethernet interface. If you complete the procedure successfully up to login complete in the following figure, the commands in chapter 3 become functional.

## When Using the Ethernet Login Function of the DX

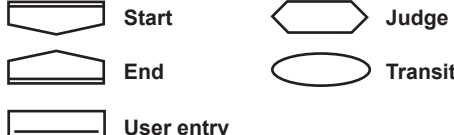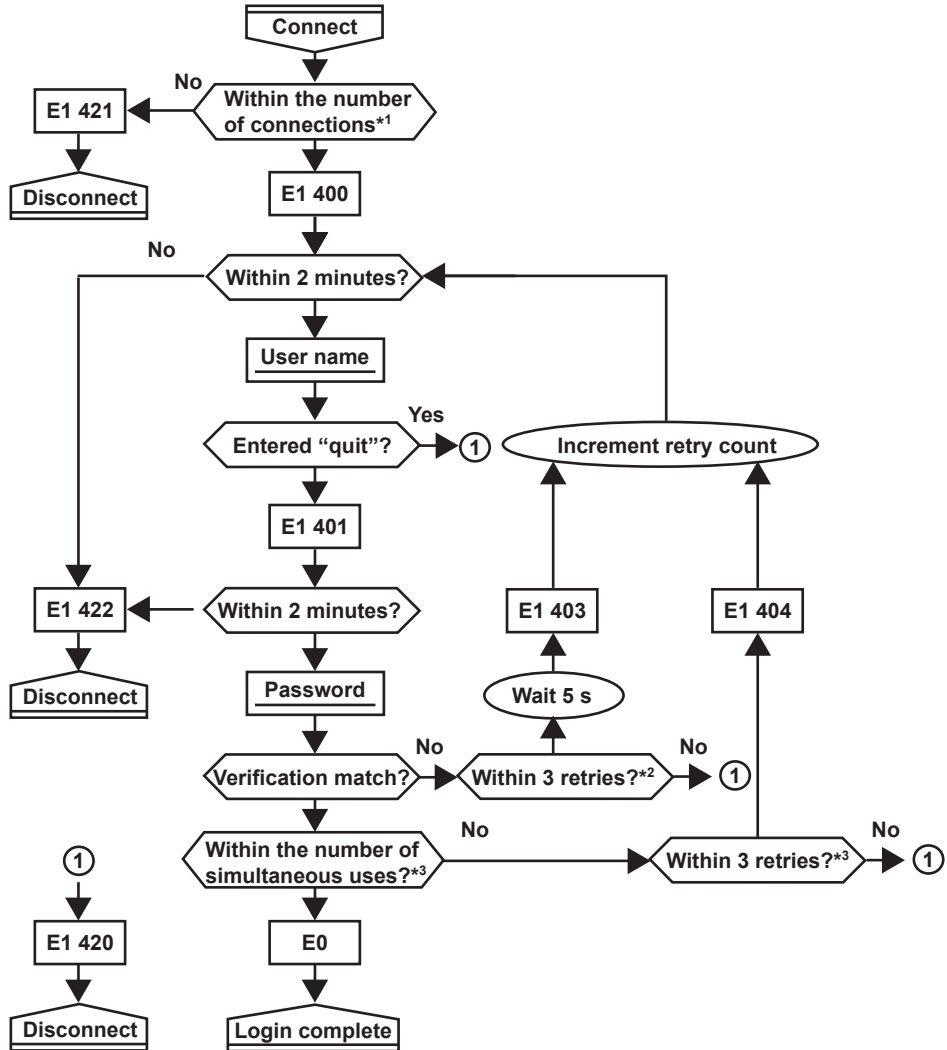


**E1 403** Response from the DX (message omitted)  
 For a description of the response format, see section 6.1.  
 Code (for a description of codes and messages, see page App-17)

\*1 Connections cannot exceed the maximum number of connections (see section 2.1).  
 \*2 If you try to log in using a wrong password four consecutive times, the communication is dropped (the number of retries for login is three).  
 \*3 If you try to log in causing the number of simultaneous uses at the administrator or user level to be exceeded (see section 2.1) four consecutive times, the communication is dropped (even if the password is correct).

**When Not Using the Login Function of the DX**

Login as "admin" or "user."

- The user name "admin" can be used to login to the DX as an administrator.
- The user name "user" can be used to access the DX as a user.

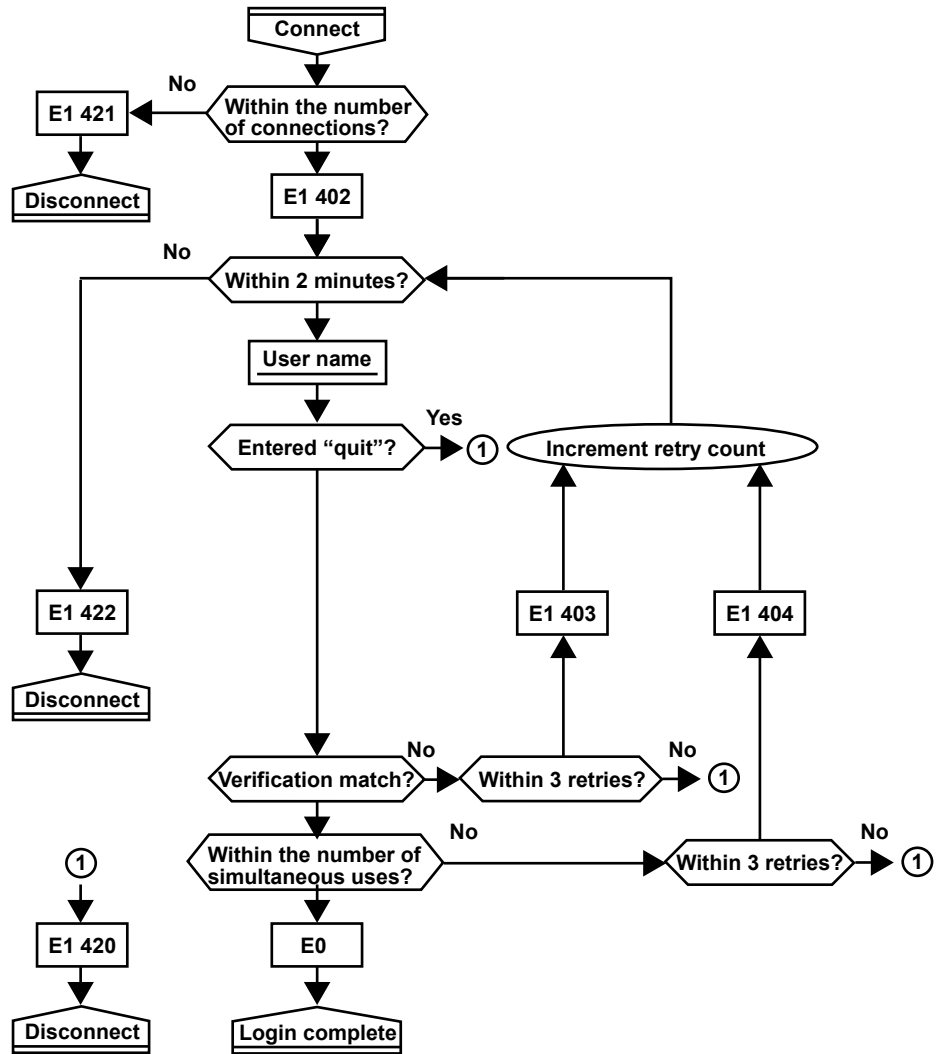

## Appendix 3 ASCII Character Codes

|              |   | Upper 4 bits |     |    |   |   |   |   |   |   |   |   |              |   |   |   |   |
|--------------|---|--------------|-----|----|---|---|---|---|---|---|---|---|--------------|---|---|---|---|
|              |   | 0            | 1   | 2  | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | B            | C | D | E | F |
| Lower 4 bits | 0 |              |     | SP | 0 | @ | P |   | p |   |   |   |              | À | Ð | à | ð |
|              | 1 |              |     |    | 1 | A | Q | a | q |   |   | i |              | Á | Ñ | á | ñ |
|              | 2 |              |     |    | 2 | B | R | b | r |   |   |   | <sup>2</sup> | Â | Ò | â | ò |
|              | 3 |              |     | #  | 3 | C | S | c | s |   |   |   | <sup>3</sup> | Ã | Ó | ã | ó |
|              | 4 |              |     |    | 4 | D | T | d | t |   |   |   |              | Ä | Ô | ä | ô |
|              | 5 |              |     | %  | 5 | E | U | e | u |   |   |   | μ            | Å | Õ | å | õ |
|              | 6 |              |     | &  | 6 | F | V | f | v |   |   |   |              | Æ | Ö | æ | ö |
|              | 7 |              |     |    | 7 | G | W | g | w |   |   |   |              | Ç | × | ç | ÷ |
|              | 8 |              |     | (  | 8 | H | X | h | x |   |   |   |              | È | Ø | è | ø |
|              | 9 |              |     | )  | 9 | I | Y | i | y |   |   |   |              | É | Ù | é | ù |
|              | A | LF           |     | *  | : | J | Z | j | z |   |   |   |              | Ê | Ú | ê | ú |
|              | B |              | ESC | +  | ; | K | [ | k |   |   |   |   |              | Ë | Û | ë | û |
|              | C |              |     | ,  |   | L | ] | l |   |   |   |   |              | Ì | Ü | ì | ü |
|              | D | CR           |     | -  |   | M | ] | m |   |   |   |   |              | Í | Ý | í | ý |
|              | E |              |     | .  |   | N | ° | n |   |   |   |   |              | Î | Þ | î | þ |
|              | F |              |     | /  | ? | O | _ | o |   |   |   |   |              | Ï | ß | ï |   |

- The delimiter (,), sub delimiter (;), query symbol (?), and terminator (CR+LF) characters are reserved. You cannot use them as parameter characters.


### German and French only

| Used for           |                                 | Command |
|--------------------|---------------------------------|---------|
| Tag                | Tag                             | ST      |
| Message            | Message                         | SG      |
| Arbitrary message  | Message                         | BJ      |
| Group              | Group name                      | SX      |
| File header        | File header                     | TZ      |
| Batch text field   | Field title<br>Field characters | BH      |
| Batch comment      | Comment character string        | BU      |
| Four panel display | Screen group name               | SY      |
| E-mail             | Header 1<br>Header 2            | YU      |

# Appendix 4 Output Flow of the File or the File List on the External Storage Medium and Internal Memory


## Example in Which the File 10101000.DAD Is Output

The figure below shows the output flow of the file 10101000.DAD in the DATA0 directory of the external storage medium.

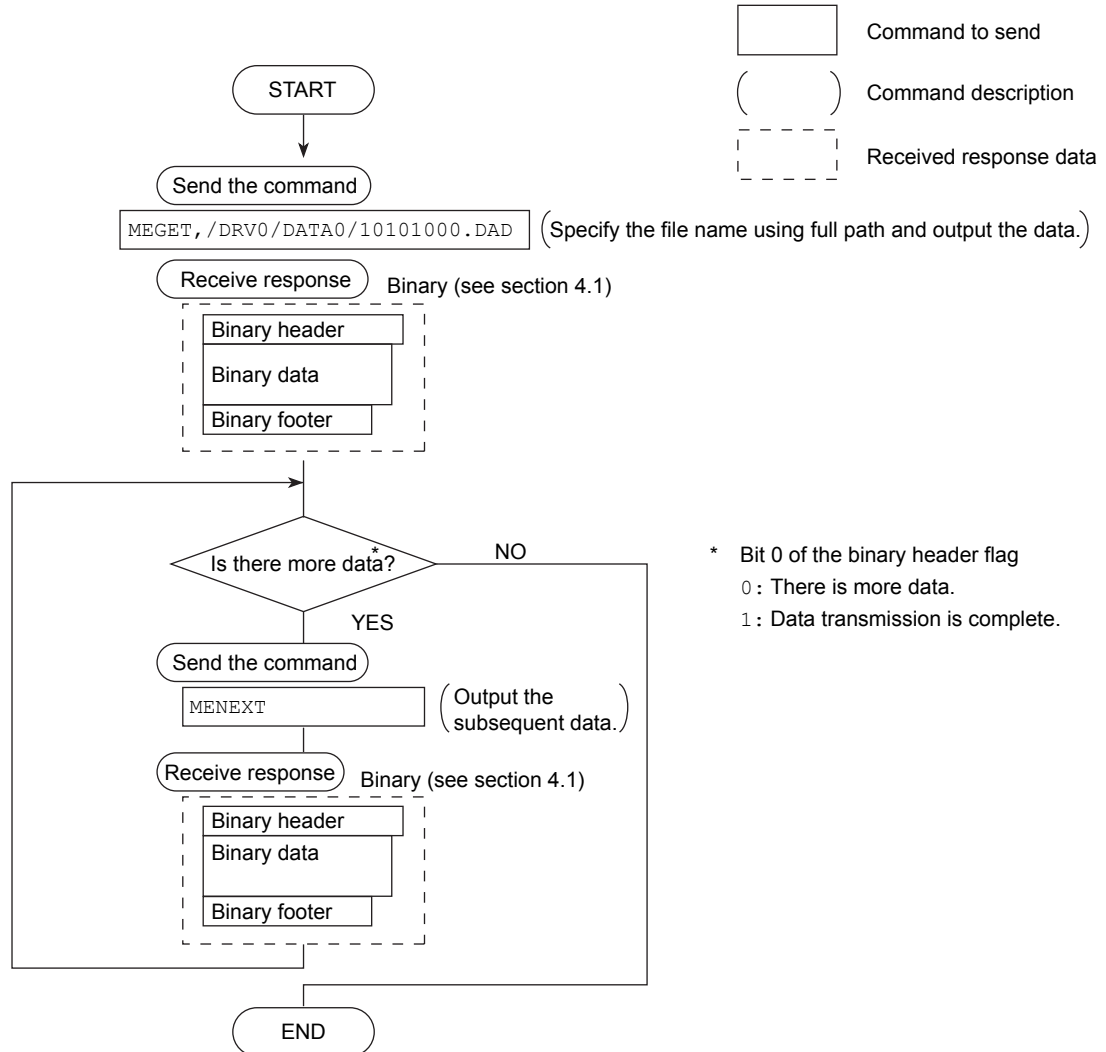

### Example in Which the File List Is Output 10 Files at a Time

The figure below shows the flow in which the file list in the DATA0 directory of the external storage medium is output 10 files at a time.

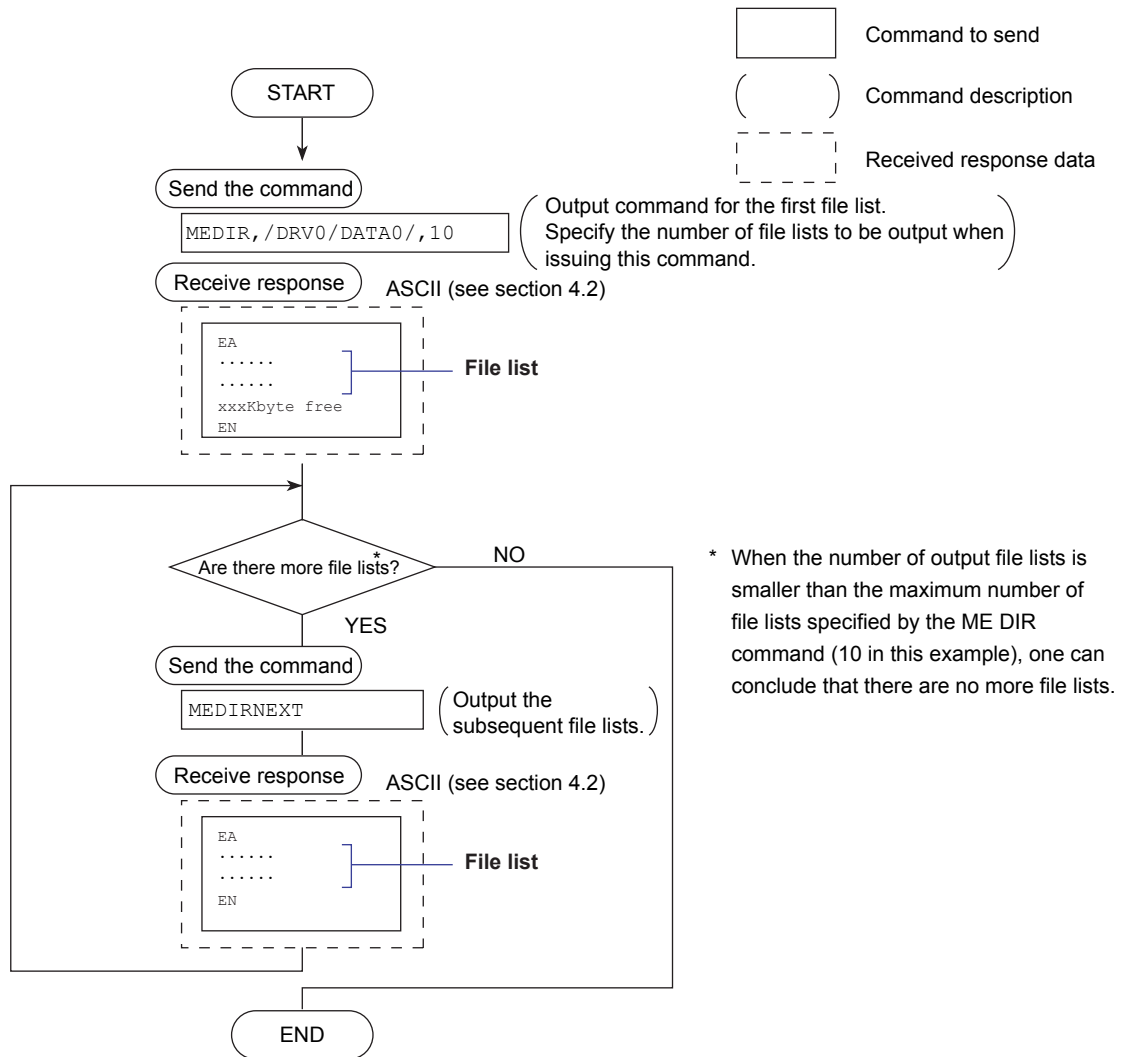


## Appendix 5 Flow Chart of the FIFO Data Output

### Overview of the FIFO Buffer

The DX has a dedicated internal memory for outputting measured/computed data. This memory is structured as a FIFO (First-In-First-Out). Measured/computed data are constantly acquired to the internal memory at the specified acquiring interval (FIFO acquiring interval, set with the FR command). By using this function, it is possible to read measured/computed data that have been saved at the specified intervals regardless of the frequency at which the PC periodically reads the measured/computed data.

The following example shows the case when the acquisition interval is 1 s and the capacity of the FIFO memory is for 8 intervals.

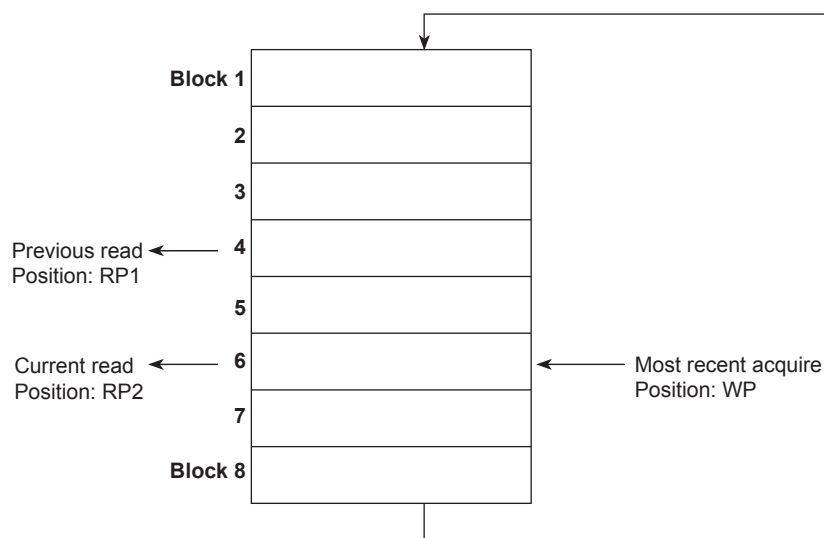

- **Acquiring of the Measured/Computed Data**
  - The measured/computed data are acquired to the internal memory at 1 s intervals.
  - Measured/computed data is acquired to positions 1 through 8 in order. After acquiring to position 8, the next data is acquired to position 1.
- **Reading the Measured/Computed Data (FF GET command is used)**

Outputs the data from the previous read position (RP1) to the most recent acquisition position (WP).

In this example, more than 2 s has elapsed from the previous read operation. Therefore, data in blocks 5 and 6 are output.

The size of the internal memory reserved for FIFO (FIFO buffer data size) varies depending on the model.

| Model  | Data size  |
|--|--|
| DX1002, DX1004, DX2004, and DX2008                         | 1200 intervals (30 s at the fastest acquisition interval of 25 ms) |
| DX1006, DX1012, DX2010, DX2020, DX2030, DX2040, and DX2048 | 240 intervals (30 s at the fastest acquisition interval of 125 ms) |
| Models with the external channel input option              | 60 intervals (60 s at the fastest acquisition interval of 1 s)     |

# Index

## Symbol

|                    |      |
|--------------------|------|
| 1-5V voltage ..... | 3-10 |
| 10Base-T .....     | 6-3  |

## A

|  |            |
|--|------------|
| accessing data files from the web browser..... | 1-41       |
| access timeout.....                            | 1-47       |
| active alarms .....                            | 1-17       |
| address.....                                   | 2-13       |
| administrator.....                             | 1-5        |
| affirmative response .....                     | 4-1        |
| alarm notification e-mail.....                 | 1-20       |
| alarm settings (e-mail).....                   | 1-17       |
| alarm summary.....                             | 1-32, 4-21 |
| all channel display .....                      | 1-32       |
| annunciator display windows.....               | 3-11       |
| application timeout.....                       | 1-5        |
| application timeout, setting of.....           | 1-15       |
| arrow keys .....                               | v          |
| ASCII character codes.....                     | App-5      |
| ASCII data .....                               | 4-6        |
| automatically assigning MW100.....             | 1-57       |
| automatic transferring of files .....          | 1-4        |
| auto recovery.....                             | 2-12       |
| auto refresh ON.....                           | 1-28       |

## B

|   |                  |
|---|------------------|
| basic setting commands .....                      | 3-6, 3-35        |
| basic setting mode.....                           | 3-4              |
| basic settings.....                               | 1-17             |
| basic settings (Modbus client).....               | 1-51             |
| basic settings (Modbus master).....               | 2-12             |
| basic specifications.....                         | 6-1              |
| batch groups.....                                 | 3-11             |
| baud rate .....                                   | 2-10             |
| binary data.....                                  | 4-2              |
| binary data type.....                             | 4-3              |
| binary footer.....                                | 4-2              |
| binary header.....                                | 4-2              |
| bit structure.....                                | 5-2              |
| block details.....                                | 4-31, 4-32, 4-33 |
| block number.....                                 | 4-30             |
| BO flag.....                                      | 4-3              |
| buffer on which the sum value is calculated ..... | 4-4              |

## C

|                                |      |
|--------------------------------|------|
| channel numbers.....           | 3-11 |
| check disk.....                | 4-25 |
| client command number .....    | 1-52 |
| command (setting example)..... | 1-53 |
| command-response.....          | 4-1  |
| command name.....              | 3-1  |
| commands                       |      |
| *1.....                        | 3-52 |
| AK .....                       | 3-31 |
| BD .....                       | 3-25 |
| BH .....                       | 3-24 |
| BJ .....                       | 3-32 |
| BO .....                       | 3-47 |
| BT.....                        | 3-29 |

|            |      |
|------------|------|
| BU.....    | 3-29 |
| BV.....    | 3-33 |
| CB.....    | 3-47 |
| CC.....    | 3-48 |
| CE.....    | 3-33 |
| CL.....    | 3-31 |
| close..... | 3-52 |
| CM.....    | 3-33 |
| con.....   | 3-52 |
| CS.....    | 3-47 |
| CU.....    | 3-33 |
| CV.....    | 3-31 |
| CW.....    | 3-34 |
| DS.....    | 3-32 |
| EH.....    | 3-24 |
| EJ.....    | 3-32 |
| EM.....    | 3-33 |
| ER.....    | 3-13 |
| ESC C..... | 3-51 |
| ESC O..... | 3-51 |
| eth.....   | 3-52 |
| EV.....    | 3-31 |
| FA.....    | 3-50 |
| FC.....    | 3-48 |
| FD.....    | 3-48 |
| FE.....    | 3-48 |
| FF.....    | 3-49 |
| FL.....    | 3-49 |
| FR.....    | 3-26 |
| FU.....    | 3-50 |
| help.....  | 3-53 |
| host.....  | 3-54 |
| IF.....    | 3-47 |
| ip.....    | 3-54 |
| IR.....    | 3-34 |
| IS.....    | 3-50 |
| KE.....    | 3-33 |
| LI.....    | 3-33 |
| LO.....    | 3-32 |
| LR.....    | 3-34 |
| LW.....    | 3-34 |
| MA.....    | 3-34 |
| ME.....    | 3-50 |
| MO.....    | 3-51 |
| MS.....    | 3-31 |
| NB.....    | 3-25 |
| NC.....    | 3-25 |
| net.....   | 3-53 |
| NF.....    | 3-21 |
| NG.....    | 3-25 |
| NH.....    | 3-25 |
| NL.....    | 3-18 |
| NW.....    | 3-25 |
| NX.....    | 3-18 |
| PS.....    | 3-31 |
| quit.....  | 3-53 |
| RF.....    | 3-39 |
| RM.....    | 3-40 |
| RN.....    | 3-39 |
| RO.....    | 3-39 |
| RP.....    | 3-39 |
| RU.....    | 3-41 |
| SA.....    | 3-14 |
| SB.....    | 3-19 |



## Index

|              |      |  |                          |
|--------------|------|--|--------------------------|
| SC .....     | 3-20 | YJ .....   | 3-43                     |
| SD .....     | 3-19 | YK .....   | 3-41                     |
| SE .....     | 3-19 | YL .....   | 3-45                     |
| serial ..... | 3-54 | YM .....   | 3-45                     |
| SG .....     | 3-18 | YO .....   | 3-33                     |
| SI .....     | 3-23 | YP .....   | 3-44                     |
| SJ .....     | 3-24 | YQ .....   | 3-42                     |
| SK .....     | 3-23 | YR .....   | 3-44                     |
| SL .....     | 3-17 | YS .....   | 3-45                     |
| SM .....     | 3-26 | YT .....   | 3-42                     |
| SO .....     | 3-13 | YU .....   | 3-42                     |
| SP .....     | 3-16 | YV .....   | 3-43                     |
| SQ .....     | 3-20 | YW .....   | 3-43                     |
| SR .....     | 3-12 | YX .....   | 3-43                     |
| ST .....     | 3-17 | commands, a list of .....  | 3-4                      |
| SV .....     | 3-20 | command settings .....   | 2-12                     |
| SW .....     | 3-15 | command syntax .....   | 3-1                      |
| SX .....     | 3-17 | command type .....   | 1-52, 2-12               |
| SY .....     | 3-28 | comment text block .....   | 3-11                     |
| SZ .....     | 3-16 | comment text field .....   | 3-11                     |
| TA .....     | 3-20 | communication conditions .....   | 1-55                     |
| TB .....     | 3-19 | communication distance .....   | 6-2                      |
| TC .....     | 3-21 | communication input data .....   | 3-11                     |
| TD .....     | 3-19 | communication log .....  | 4-10                     |
| TE .....     | 3-16 | communication status .....   | 1-55                     |
| TF .....     | 3-18 | communication status, checking of .....                                | 1-15                     |
| TG .....     | 3-20 | communication status, setting of .....                                 | 1-15                     |
| TH .....     | 3-18 | computation channels .....   | 3-11                     |
| TI .....     | 3-15 | computed data .....  | 4-8, 4-29                |
| TJ .....     | 3-14 | configured alarm information data .....                                | 4-33                     |
| TK .....     | 3-21 | configured channel information data .....                              | 4-31                     |
| TL .....     | 3-32 | connection .....   | 2-4                      |
| TM .....     | 3-16 | connection retrials, data during .....                                 | 1-56, 2-14               |
| TN .....     | 3-20 | constants .....  | 3-11                     |
| TO .....     | 3-15 | contact input .....  | 3-10                     |
| TP .....     | 3-21 | converter .....  | 2-9                      |
| TQ .....     | 3-21 | CR+LF .....  | 3-2                      |
| TR .....     | 3-21 | CS-RS .....  | 2-6                      |
| TT .....     | 3-19 |  |                          |
| TU .....     | 3-22 | <b>D</b>   |                          |
| TW .....     | 3-16 | data dropout .....   | 1-56, 2-14, App-1, App-2 |
| TX .....     | 3-24 | data length .....  | 2-10, 4-2                |
| TZ .....     | 3-18 | data list .....  | 1-37                     |
| UD .....     | 3-29 | data reception control .....   | 2-5, 2-6                 |
| WB .....     | 3-44 | data sum .....   | 4-3                      |
| WC .....     | 3-45 | data transmission control .....  | 2-5, 2-6                 |
| WF .....     | 3-46 | data type: .....   | 6-4                      |
| WG .....     | 3-46 | data type in a command differs from the DX data type .....             | 6-17                     |
| WH .....     | 3-38 | DC voltage .....   | 3-10                     |
| WJ .....     | 3-46 | decimal point position/unit information .....                          | 4-7                      |
| WO .....     | 3-37 | default gateway .....  | 1-12                     |
| WQ .....     | 3-47 | delimiter .....  | 3-2                      |
| WR .....     | 3-46 | destination server settings .....                                      | 1-52                     |
| WS .....     | 3-41 | DHCP .....   | 1-12, 1-13               |
| WU .....     | 3-35 | DHCP client .....  | 1-8                      |
| WW .....     | 3-42 | DHCP log .....   | 4-18                     |
| XB .....     | 3-38 | DISP/ENTER key .....   | v                        |
| XE .....     | 3-47 | display groups .....   | 3-11                     |
| XG .....     | 3-40 | displaying the measured data at the specified date and time...<br>1-40 |                          |
| XJ .....     | 3-38 | DNS accession .....  | 1-12                     |
| XM .....     | 3-39 | domain name .....  | 1-12                     |
| XN .....     | 3-41 | domain suffix search order .....                                       | 1-12                     |
| XV .....     | 3-38 | DX1000/DX2000 features (Ethernet interface) .....                      | 1-1                      |
| YA .....     | 3-41 | DX1000/DX2000 features (serial interface) .....                        | 2-1                      |
| YB .....     | 3-41 |  |                          |
| YC .....     | 3-34 |  |                          |
| YD .....     | 3-41 |  |                          |
| YE .....     | 3-47 |  |                          |

**E**

|  |           |
|--|-----------|
| e-mail format.....                     | 1-20      |
| e-mail log.....                        | 4-16      |
| e-mail retransmission.....             | 1-19      |
| e-mail test.....                       | 1-7, 1-19 |
| e-mail transmission.....               | 1-7       |
| e-mail transmission, starting of.....  | 1-19      |
| e-mail transmission, stopping of.....  | 1-19      |
| EBCRLF.....                            | 4-2       |
| END flag.....                          | 4-3       |
| ESC key.....                           | v         |
| EtherNet/IP.....                       | 6-1       |
| EtherNet/IP server.....                | 1-8       |
| Ethernet information.....              | 4-24      |
| Ethernet interface connector.....      | v         |
| Ethernet interface specifications..... | 6-1       |
| event level switch status.....         | 4-27      |
| externa input data.....                | 4-8       |
| external input channels.....           | 3-11      |

**F**

|   |                  |
|---|------------------|
| FIFO data.....                              | 4-29             |
| FIFO data output.....                       | App-8            |
| file list.....                              | 4-24, App-6      |
| filter.....                                 | 5-1              |
| first/last (client channels).....           | 1-52             |
| first/last (master channel numbers).....    | 2-13             |
| fixed IP address.....                       | 1-12             |
| flag.....                                   | 4-29             |
| flags.....                                  | 3-11             |
| flow chart (FIFO data).....                 | App-8            |
| flow of operation.....                      | 1-9              |
| format details.....                         | 4-31, 4-32, 4-33 |
| four-wire system.....                       | 2-8              |
| front panel.....                            | v                |
| FTP.....                                    | 1-42             |
| FTP client.....                             | 1-4              |
| FTP client, setting of.....                 | 1-44             |
| FTP client log.....                         | 4-12             |
| FTP connection destination, setting of..... | 1-45             |
| FTP server.....                             | 1-3, 6-1         |
| FTP server, setting of.....                 | 1-41             |
| FTP test.....                               | 1-4              |
| FTP transfer, testing of.....               | 1-46             |
| FTP transfer files, setting of.....         | 1-44             |
| FUNC keys.....                              | v                |

**H**

|   |            |
|---|------------|
| handshaking.....                          | 2-5, 2-10  |
| header.....                               | 1-17, 1-18 |
| header sum.....                           | 4-2        |
| hold Register.....                        | 6-9        |
| hold registers (extended).....            | 6-10       |
| host-name register.....                   | 1-12       |
| host device, connection to.....           | 2-7        |
| host information, setting of.....         | 1-11       |
| host name.....                            | 1-12       |
| how to use (extended hold registers)..... | 6-16       |

**I**

|   |            |
|---|------------|
| include instantaneous value.....            | 1-17, 1-18 |
| include source URL.....                     | 1-17, 1-18 |
| include tag/ch in subject.....              | 1-17       |
| initial path.....                           | 1-45       |
| input register.....                         | 6-7, 6-8   |
| instrument information output commands..... | 3-8, 3-54  |

|                                    |          |
|------------------------------------|----------|
| instrument information server..... | 1-4, 6-1 |
| inter-block delay.....             | 2-12     |
| internal switches.....             | 3-11     |
| internal switch status output..... | 4-9      |
| interval.....                      | 1-18     |
| IP address.....                    | 1-12     |
| IP address, setting of.....        | 1-11     |
| ITU-T standard.....                | 2-4      |

**K**

|                            |      |
|----------------------------|------|
| keepalive.....             | 1-8  |
| keepalive, setting of..... | 1-15 |

**L**

|                        |                   |
|------------------------|-------------------|
| LF.....                | 3-2               |
| list of registers..... | 6-10              |
| log.....               | 1-33              |
| log display.....       | 1-8               |
| login.....             | 1-5, 1-27         |
| login function.....    | 1-5, App-3, App-4 |
| login log.....         | 4-13              |
| login procedure.....   | App-3             |

**M**

|   |            |
|---|------------|
| maintenance/test commands.....                  | 3-8        |
| maintenance/test server.....                    | 1-3, 6-1   |
| maintenance and test commands.....              | 3-52       |
| manual.....                                     | 3-11       |
| manual sampled data.....                        | 4-33       |
| manual sampled data information.....            | 4-26       |
| master command number.....                      | 2-12       |
| match time timers.....                          | 3-11       |
| measured data.....                              | 4-8, 4-29  |
| measurement channels.....                       | 3-11       |
| MENU keys.....                                  | v          |
| message summary.....                            | 4-22       |
| Modbus, operating status of.....                | 1-55       |
| Modbus, setting example of.....                 | 1-60, 2-15 |
| Modbus client.....                              | 1-1        |
| MODBUS CLIENT (display selection menu).....     | 1-64       |
| Modbus client, setting example of.....          | 1-62       |
| Modbus client, setting of.....                  | 1-51       |
| Modbus client function.....                     | 6-3        |
| Modbus communication log.....                   | 4-20       |
| Modbus master.....                              | 2-1, 6-18  |
| Modbus master, setting of.....                  | 2-12       |
| Modbus master function, setting example of..... | 2-17       |
| Modbus operating status.....                    | 2-13       |
| Modbus protocol specifications.....             | 6-3        |
| Modbus server.....                              | 1-2, 6-1   |
| Modbus server, setting of.....                  | 1-49       |
| Modbus server function.....                     | 6-6        |
| Modbus server function, setting example of..... | 1-61       |
| modbus server name.....                         | 1-52       |
| Modbus slave.....                               | 2-2, 6-19  |
| Modbus slave function, setting example of.....  | 2-16       |
| ModbusTCP.....                                  | 6-3        |
| monitoring with a Web browser.....              | 1-27       |
| monitor page.....                               | 1-28       |
| monitor page, setting of.....                   | 1-26       |
| multiple negative responses.....                | 4-1        |
| MW100.....                                      | 1-57       |

**O**

|                         |     |
|-------------------------|-----|
| OFF-OFF.....            | 2-5 |
| operation, flow of..... | 1-9 |

## Index

operation error log ..... 4-13  
operation keys ..... v  
operation mode ..... 3-4  
operation when the data transfer fails ..... 1-45  
operator page ..... 1-29  
operator page, setting of ..... 1-26  
output commands ..... 3-7  
output commands (control) ..... 3-47  
output commands (RS-422/485 dedicated commands) ..... 3-51  
output commands (setting, measured, and computed data output) ..... 3-48  
output commands (special response commands) ..... 3-52  
output example ..... 4-34  
output flow of the file ..... App-6  
output format of ASCII data ..... 4-6  
output format of binary data ..... 4-28  
output format of instrument information ..... 4-34  
output relays ..... 3-11

## P

parameters ..... 3-1  
parity ..... 2-10  
parts, name and uses of ..... v  
PASV mode ..... 1-45  
POP3 server connection ..... 1-19  
POP3 settings ..... 1-17  
port ..... 1-52  
port, connection of ..... 1-10  
port number ..... 1-17, 1-25, 1-42, 1-48, 1-50, 6-1  
printing the screen ..... 1-38  
PROFIBUS-DP ..... 2-2  
protocol ..... 2-10  
pulse inputs ..... 3-11

## Q

query ..... 3-2

## R

read cycle ..... 1-51, 2-12  
reading/writing the DX data ..... 1-50, 2-11  
rear panel ..... v  
recipient ..... 1-17, 1-18  
ref. time ..... 1-18  
refreshing the page ..... 1-28  
regi. .... 1-52, 2-13  
register assignments ..... 6-6  
release number ..... iii  
releasing network information ..... 1-14  
remote control terminals ..... 3-11  
report channels ..... 3-11  
report data ..... 1-34, 4-33  
report data information ..... 4-26  
report group ..... 3-11  
report layout ..... 1-34, 1-35  
report mail ..... 1-23  
report settings (e-mail) ..... 1-18  
requesting network information ..... 1-13  
response ..... 3-3, 4-34  
response syntax ..... 4-1  
resuming command transmission ..... 1-56, 2-14  
retrials ..... 2-12  
retry interval ..... 1-51  
RS-232 connection procedure ..... 2-4  
RS-232 interface connector ..... v  
RS-232 settings ..... 2-10  
RS-232 specifications ..... 6-2

RS-422/485 connection procedure ..... 2-7  
RS-422/485 dedicated responses ..... 4-5  
RS-422/485 interface terminal ..... v  
RS-422/485 settings ..... 2-10  
RS-422/485 specifications ..... 6-2  
RTD ..... 3-10

## S

sample program ..... 4-4  
scheduled e-mail ..... 1-21  
scheduled settings (e-mail) ..... 1-18  
send alarm action ..... 1-17  
sender ..... 1-17  
serial communication, setting of ..... 2-10, 2-11  
serial interface specifications ..... 6-2  
server (server number) ..... 1-52  
server number ..... 1-52  
setting/measurement server ..... 1-3, 2-2, 6-1  
setting commands ..... 3-4  
setting commands (control) ..... 3-29  
setting commands (setting) ..... 3-12  
setting data/basic setting data ..... 4-6  
setup parameters ..... 3-9  
shifting the transfer time ..... 1-43  
simultaneous access ..... 6-15  
simultaneous users, number of ..... 6-1  
single negative response ..... 4-1  
SMTP server name ..... 1-17  
SNTP client ..... 1-8  
SNTP client, setting of ..... 1-47  
SNTP log ..... 4-17  
SNTP server ..... 1-8, 6-1  
SNTP server, setting of ..... 1-48  
soft keys ..... v  
special data values ..... 4-30  
status information ..... 4-23, 5-1, 5-2  
style number ..... iii  
sub delimiter ..... 3-2  
subject ..... 1-17, 1-18  
subnet mask ..... 1-12  
sum value, calculation of ..... 4-4  
supported functions ..... 6-3, 6-6  
switching the screen (operator page) ..... 1-31  
system mail (error) ..... 1-23  
system mail (memory full) ..... 1-22  
system mail (power failure) ..... 1-22  
system setting (e-mail) ..... 1-18

## T

terminator ..... 2-9, 3-2, 6-2  
test e-mail ..... 1-24  
thermocouple ..... 3-10  
time, manual synchronization of ..... 1-47  
time adjust on start action ..... 1-47  
time information ..... 1-24  
timeout ..... 2-12  
timers ..... 3-11  
transferring via FTP ..... 1-43  
transmitted commands, setting of ..... 1-52  
two-wire system ..... 2-8  
type ..... 1-52, 2-13

## U

unit ..... 1-52  
URL, setting of ..... 1-27  
user ..... 1-5

---

|                          |      |
|--------------------------|------|
| user information.....    | 4-27 |
| user registration.....   | 1-5  |
| users, simultaneous..... | 6-1  |

**W**

---

|                                       |      |
|---------------------------------------|------|
| web operation log .....               | 4-14 |
| Web page, setting of.....             | 1-25 |
| Web server .....                      | 1-6  |
| Web server, setting of.....           | 1-25 |
| Web server function.....              | 1-25 |
| writing messages (operator page)..... | 1-39 |

**X**

---

|              |     |
|--------------|-----|
| XON-RS.....  | 2-6 |
| XON-XON..... | 2-6 |