

# User's Manual

## Models UT550 / UT520

### Digital Indicating Controllers

#### User's Manual for Single-loop Control

IM 05D01C02-01E

## Installation

**YOKOGAWA**  
Yokogawa Electric Corporation

3rd Edition: Sep 30, 2004

This manual describes installation, wiring, and other tasks required to make the controller ready for operation.

## Contents

- Safety Precautions
- Model and Suffix Codes
- How to Install
- How to Connect Wires
- Hardware Specifications
- Terminal Wiring Diagrams

## Introduction

Thank you for purchasing the UT550/UT520 digital indicating controller. The controller is shipped from the factory with 5 hardcopy user's manuals (A2 size) and 1 user's manual on CD-ROM. The 5 user's manuals in hardcopy format describe the operating procedures required for basic use (factory-set to single-loop control mode). It is recommended that you refer to these user's manuals to understand [1] installation, [2] initial settings, and [3] operating procedures of the controller. The CD-ROM contains an User's Manual (Reference) with descriptions of various functions and setting ranges that can be set as necessary. The manual also contains information on operations used to carry out control other than single-loop control. Moreover, the use of an optional parameter setting tool (Model: LL100-E10) allows you to easily perform settings and adjustments with a PC.

## How to Use the Manuals

Purpose	Manual Title	Description	Media
Setup	Installation	Describes the tasks (installation, wiring, and others) required to make the controller ready for operations.	A2-size paper, back and front
Basic operation	Initial Settings	Describes examples of setting PV input types, control output types, and alarm types. Making settings described herein allows you to carry out basic control.	A2-size paper, back and front
Operating procedures and troubleshooting	Operations	Describes key operation sequences. For operation control through external contact inputs, see the back of User's Manual.	A2-size paper, back and front
Brief operation	Parameter Map	Contains the parameter map used as a guideline for setting parameters.	A2-size paper, back and front
Function description and setpoint recording	Parameters	Briefly describes the functions of parameters. In addition, each parameter table has a User Setting column, where you can record your setpoints when setting them in the controller.	A2-size paper, back and front
Detailed description of functions	User's Manual (Reference)	Explains more advanced applications than those found in the 5 hardcopy user's manuals (A2 size).	CD-ROM

## 1. Safety Precautions

The following symbol is indicated on the controller to ensure safe use.

### CAUTION

This symbol on the controller indicates that the operator must refer to an explanation in the user's manual in order to avoid the risk of injury or death of personnel or damage to the instrument. The manual describes how the operator should exercise special care to avoid electric shock or other dangers that may result in injury or loss of life.

The following symbols are used in the hardcopy user's manuals and in the user's manual supplied on the CD-ROM.

### NOTE

Indicates that operating the hardware or software in a particular manner may damage it or result in a system failure.

### IMPORTANT

Draws attention to information that is essential for understanding the operation and/or features of the controller.

## Exemption from Responsibility

Make sure that all of the precautions are strictly adhered to. Yokogawa Electric Corporation assumes no liability for any damage resulting from use of the instrument in contradiction to the precautions. Also, Yokogawa Electric Corporation assumes no liability to any party for any loss or damage, direct or indirect, caused by the use of or any unpredictable defect of the instrument.

## Regarding Protection, Safety, and Prohibition Against Unauthorized Modification

- In order to protect the product and the system controlled by it against damage and ensure its safe use, make certain that all of the instructions and precautions relating to safety contained in this document are strictly adhered to. Yokogawa does not guarantee safety if products are not handled according to these instructions.
- Modification of the product is strictly prohibited.

## 2. Model and Suffix Codes

Before using the controller, check that the model and suffix codes match your order.

Model	Suffix Code	Description
UT550		Digital indicating controller (provided with retransmission output and 15 VDC loop power supply as standard)
Type	-0	Standard type
	-1	Position proportional type
	-2	Heating/cooling type
	-3	Standard type (with 24 V DC loop power supply)
Optional functions	0	None
	1	With communication, auxiliary analog (remote) input, 6 additional DIs and 4 additional DOs
	2	With communication, auxiliary analog (remote) input, and 1 additional DI
	4	With 5 additional DIs and 4 additional DOs With auxiliary analog (remote) input and 1 additional DI

Model	Suffix Code	Description
UT520		Digital indicating controller (provided with retransmission output and 15 VDC loop power supply as standard)
Type	-0	Standard type
Optional functions	0	None
	8	With communication, auxiliary analog (remote) input, and 2 additional DIs With auxiliary analog (remote) input and 2 additional DIs

Check that the following items are provided:

- Digital indicating controller (of ordered model): 1
- Brackets (mounting hardware): 1 pair
- Unit label: 1
- User's Manuals for Single-Loop Control: 5 (A2 size)
- User's Manual (Reference) (CD-ROM Version): 1

## Correspondence between the Model and Suffix Codes, and the Contact Input/Output Terminals Provided

Check the model ordered and the presence/absence of contact inputs and outputs in the following table.

Model and Suffix Codes	Contact input terminals								Contact output terminals						
	DI1	DI2	DI3	DI4	DI5	DI6	DI7	DI8	DO1	DO2	DO3	DO4	DO5	DO6	DO7
UT550-□0	✓	✓							✓	✓	✓	✓	✓	✓	✓
UT550-□1	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
UT550-□2	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
UT550-□3	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
UT550-□4	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Note: For details on the functions of contact inputs/outputs, see "Terminal Wiring Diagrams" on the back of the manual.

✓ indicate that the contacts are available.

Model and Suffix Codes	Contact input terminals								Contact output terminals						
	DI1	DI2	DI3	DI4	DI5	DI6	DI7	DI8	DO1	DO2	DO3	DO4	DO5	DO6	DO7
UT520-00	✓	✓							✓	✓	✓	✓	✓	✓	✓
UT520-07	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
UT520-08	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓


Note: For details on the functions of contact inputs/outputs, see "Terminal Wiring Diagrams" on the back of the manual.

## 3. How to Install

### NOTE

To install the controller, select a location where:

- no one may accidentally touch the terminals,
- mechanical vibrations are minimal,
- corrosive gas is minimal,
- temperature can be maintained at about 23°C and the fluctuation is minimal,
- no direct radiant heat is present,
- no magnetic disturbances are caused,
- no wind blows against the terminal board (reference junction compensation element),
- no water is splashed,
- no flammable materials are around,

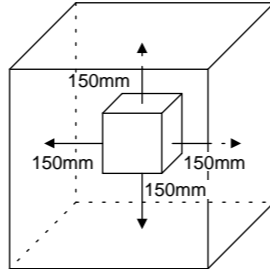


Never place the controller directly on flammable items or equipment.





If the controller has to be installed close to flammable items or equipment, be sure to provide shielding panels all around the controller, at least 150mm away from every side; the panels should be made of either 1.43mm-thick metal-plated steel plates or 1.6mm-thick uncoated steel plates.

## Installation Position

Install the controller at an angle within 30° from horizontal with the front panel facing upward. Do not install it facing downward. The position of right and left sides should be horizontal.

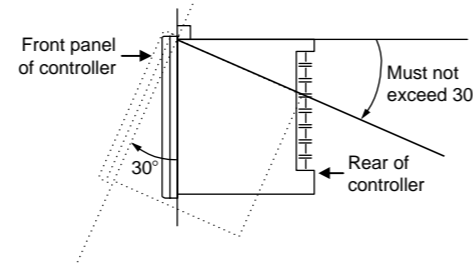


## External Dimensions and Panel Cutout Dimensions

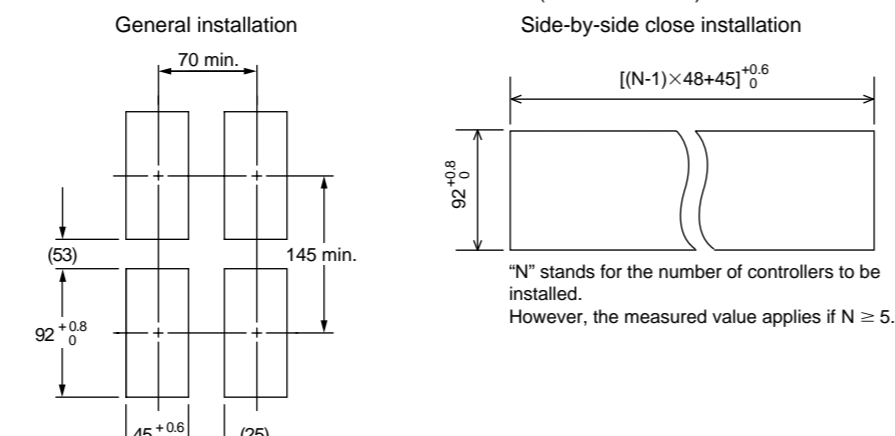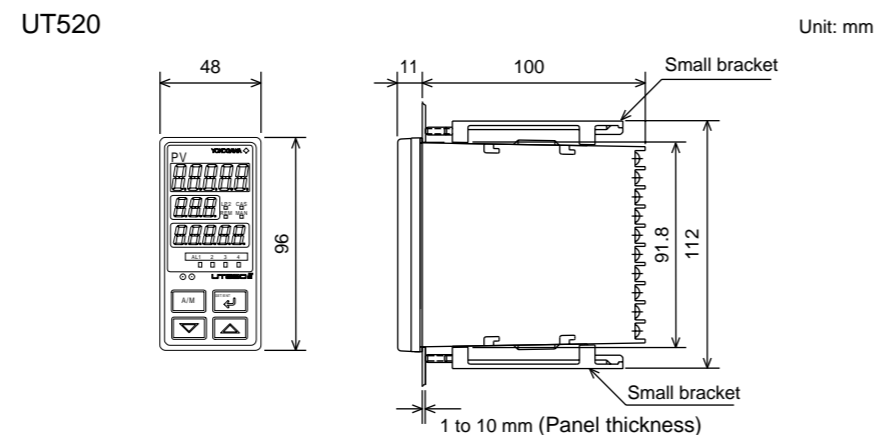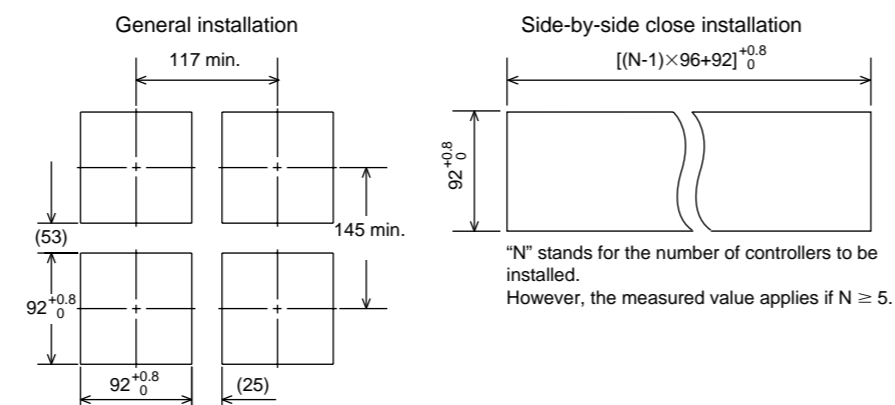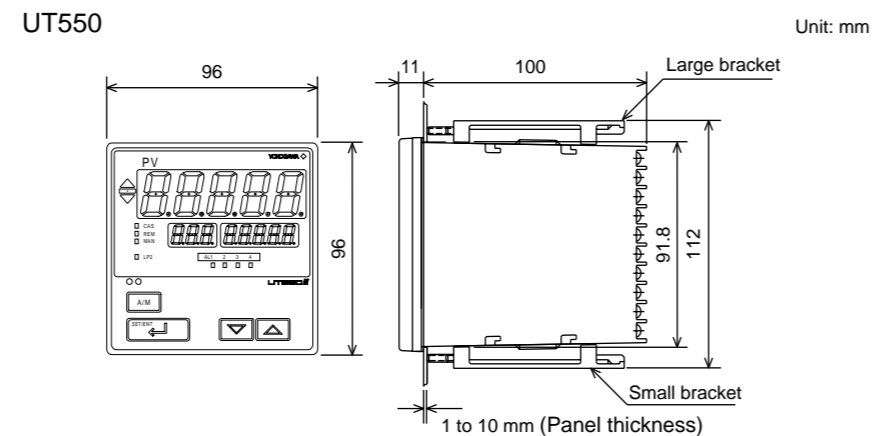

## How to Install

### CAUTION

Turn off the power to the controller before installing it on the panel because there is a possibility of electric shock.

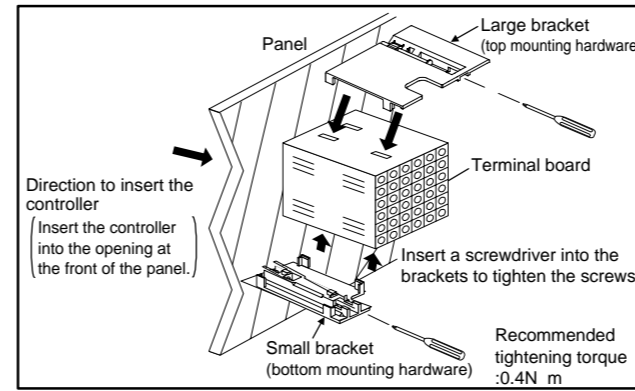

After opening the mounting hole on the panel, follow the procedures below to install the controller:

- Insert the controller into the opening from the front of the panel so that the terminal board on the rear is at the far side.
- Set the brackets in place on the top and bottom of the controller as shown in the figure on the left, then tighten the screws of the brackets. Take care not to over-tighten them.

## 4. How to Connect Wires


### CAUTION

- Before carrying out wiring, turn off the power to the controller and check that the cables to be connected are not alive with a tester or the like because there is a possibility of electric shock.
- For the protection and safe use of the controller, be sure to place a circuit breaker (conforms with IEC60947, 5A, 100V or 220V AC) near the controller where the breaker can easily be operated. In addition, be sure to install that it is the instrument to cut the power supply of the controller.
- Wiring must be carried out by personnel who have basic electrical knowledge and practical experience.


### NOTE

- Provide power from a single-phase instrument power supply. If there is a lot of noise in the power line, insert an insulating transformer into the primary side of the line and use a line filter (recommended part: ZAC2205-00U from TDK) on the secondary side. As a countermeasure against noise, do not place the primary and secondary power cables close to each other.
- For thermocouple input, use shielded compensating lead wires for wiring. For RTD input, use shielded wires that have low conductor resistance and cause no significant differences in resistance between the three wires. The cables to be used for wiring, terminal specifications, and recommended parts are as shown below.
- Control output relays may be replaced. However, because they have a life of 100,000 times that of the resistance load, use auxiliary relays to turn on/off a load.
- The use of inductance (L) loads such as auxiliary relays, motors and solenoid valves causes malfunction or relay failure; always insert a CR filter for use with alternating current or a diode for use with direct current, as a spark-removal surge suppression circuit, into the line in parallel with the load.
- When there is possibility of being struck by external lightning surge, use the arrester to protect the instrument.

## For DC Relay Wiring

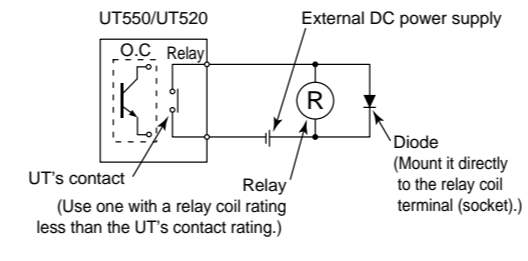

## For AC Relay Wiring

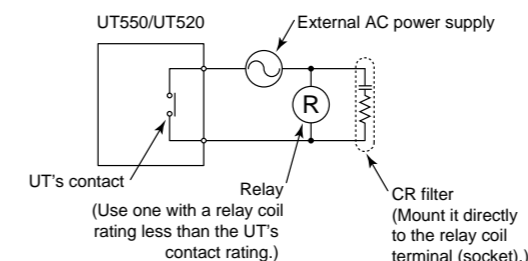


## Cable Specifications and Recommended Cables

Purpose	Name and Manufacturer
Power supply, grounding, relay contact outputs	600 V PVC insulated wires, JIS C 3307, 0.9 to 2.0 mm <sup>2</sup>
Thermocouple	Shielded compensating leadwires, JIS C 1610, □X-□-□ (See Yokogawa Electric's GS 6B1U1-E.)
RTD	Shielded wires (three conductors), UL2482 (Hitachi Cable)
Other signals	Shielded wires

## Recommended Terminal Lugs

Applicable wire size	Tightening torque
0.3 to 1.65 mm <sup>2</sup>	0.8 N·m or less

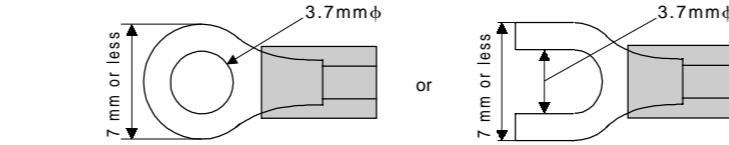

## Terminal Covers (Optional parts)

Target Model	Part Number	Sales Unit
For UT550	T9115YD	1
For UT520	T9115YE	1

## 5. Hardware Specifications

### PV Input Signals

- Number of inputs: 1 (terminals ①-③-⑤)
- Input type: Universal input system. The input type can be selected with the software.
- Sampling period: Can be selected from 50, 100, 200 and 500 ms.
- Burnout detection: TC, RTD, standard signal
  - Functions at 0.4 to 2 V or 1 to 5 V
  - Upscale, downscale, and off can be specified.
  - For standard signal, burnout is determined to have occurred if it is 0.1 V or less.
  - Input bias current: 0.05 μA (for TC or RTD b-terminal)
  - Measurement current (RTD): About 0.13 mA
  - Input resistance: 1 MΩ or more for thermocouple or mV input
    - About 1 MΩ for DC voltage input
  - Allowable signal source resistance: 250 Ω or less for thermocouple or mV input
    - Effects of signal source resistance: 0.1 μV/Ω or less 2 kΩ or less for DC voltage input
    - Effects of signal source resistance: About 0.01%/100 Ω
  - Allowable wiring resistance: for RTD input
    - Maximum 150 Ω/wire; Conductor resistance between three wires should be equal
    - However, 10 Ω/wire for a maximum range of -150.0 to 150.0°C.
    - Wire resistance effect: ±0.1°C /10 Ω
  - Allowable input voltage: ±10 V DC for thermocouple, mV, or RTD input
    - ±20 V DC for DC voltage input
  - Noise rejection ratio: 40 dB (50/60 Hz) or more in normal mode 120 dB (50/60 Hz) or more in common mode
  - Reference junction compensation error: ±1.0°C (15 to 35°C) ±1.5°C (0 to 15°C, 35 to 50°C)
  - Applicable standards: JIS, IEC, DIN (ITS-90) for thermocouples and RTD

### Remote Input Signals

- Available only for controllers with remote input terminals
- Number of inputs: 1 (terminals ⑥-⑧)
- Input type: Settable in a range of 0-2, 0-10, 0.4-2.0, or 1-5 V DC
- Sampling period: 100, 200 and 500 ms
- The sampling period of a remote input signal is associated with the PV input's sampling period. If the PV input's sampling period is 50 ms, however, the sampling period of a remote input signal lengthens to 100 ms.
- Input resistance: About 1 MΩ
- Input accuracy: ±0.3% ± 1 digit of input span for 0 to 2 V DC ±0.2% ± 1 digit of input span for 0 to 10 V DC ±0.375% ± 1 digit of input span for 0.4 to 2.0 V DC ±0.3% ± 1 digit of input span for 1 to 5 V DC
- Under standard operating conditions (23±2°C, 55±10% RH, power frequency of 50/60 Hz)

### Feedback Resistance Input

- Provided for position proportional type only (terminals ⑨-⑪-⑫)
- Slide resistance value: 100 Ω to 2.5 kΩ of overall resistance (burnout detection for sliding wire provided)
- Measuring resolution: ±0.1% of overall resistance

### Loop Power Supply

Power is supplied to a two-wire transmitter. (15 V DC: terminals ⑬-⑭; 24 V DC: terminals ⑮-⑯) A resistor (10 to 250 Ω) connected between the controller and transmitter converts a current signal into a voltage signal, which is then read via the PV input terminal. Supply voltage: 14.5 to 18.0 V DC, max. 21 mA (provided with a protection circuit against a field short-circuit); 21.6 to 28.0 V DC, max. 30 mA (only for models with 24 V DC loop power supply)

## Retransmission Output

Either PV, target setpoint, or control output is output. Either the retransmission output or the loop power supply can be used with terminals ⑰-⑱.

- Number of outputs: 1 or 2 (terminals ⑰-⑱, terminals ⑲-⑳)
- Output signal: 4-20, 0-20, 20-4, or 20-mA DC (where, outputting signal levels of less than 0 mA is not feasible)
- Load resistance: 600 Ω or less
- Output accuracy: ±0.1% of span (±5% of span for 1 mA or less.) under standard operating conditions (23±2°C, 55±10% RH, power frequency of 50/60 Hz)

## Control Output

Universal output system. The output type can be selected with the software.

Relay contact output(s) for the position proportional type

Current output (Standard type: terminals ⑳-㉑; heating-side output: terminals ㉒-㉓; cooling-side output: terminals ㉔-㉕)

Number of outputs	1 or 2 (two for heating/cooling type), switched between a voltage pulse output and current output.
Output signal	4-20, 0-20, 20-4, or 20-mA DC
Load resistance	600 Ω or less
Output accuracy	±0.1% of span (±5% of span for 1 mA or less) Under standard operating conditions (23±2°C, 55±10% RH, power frequency of 50/60 Hz)

Voltage pulse output (Standard type: terminals ㉖-㉗; heating-side output: terminals ㉘-㉙; cooling-side output: terminals ㉚-㉛)

Number of outputs	1 or 2 points (two for heating/cooling type)
Output signal	On-voltage = 12 V or more (load resistance: 600 Ω or more) Off-voltage = 0.1 V DC or less
Resolution	10 ms or 0.1% of output, whichever is larger

Relay contact output (Standard type: terminals ㉜-㉝; heating-side output: terminals ㉞-㉟; cooling-side output: terminals ㊱-㊲; position proportional type: terminals ㊳-㊴)

Number of outputs	1 or 2 points (two for heating/cooling type)
Output signal	Three terminals (NC, NO, and common)
Contact rating	250 V AC or 30 V DC, 3 A (resistance load)
Resolution	10 ms or 0.1% of output, whichever is larger

## Contact Inputs

- Purpose: Target setpoint selection, remote/local mode switching, and run/stop switching
- Number of inputs: Differs with model and suffix codes as shown in the table below.

Model and Suffix Codes	Number of Inputs
UT550-□0	2
UT550-□1	8
UT550-□2	3
UT550-□3	7
UT550-□4	3
UT520-00	2
UT520-07	4
UT520-08	4

- Input type: Non-voltage contact or transistor open collector input
- Input contact rating: 12 V DC, 10 mA or more
- On/off determination: For non-voltage contact input, contact resistance of 1 kΩ or less is determined as "on" and contact resistance of 20 kΩ or more as "off."
- For transistor open collector input, input voltage of 2 V or less is determined as "on" and leakage current must not exceed 100 μA when "off."
- Minimum status detection hold time: PV input's sampling period × 3

## Contact Outputs

- Purpose: Alarm output, FAIL output, and others
- Number of outputs: Differs with the model and suffix code as shown in the table below.

Model and Suffix Codes	Number of Outputs
UT550-□0	3
UT550-□1	3
UT550-□2	3
UT550-□3	3
UT550-□4	3
UT520-00	3
UT520-07	3
UT520-08	3

- Relay contact rating: 240 V AC, 1 A, or 30 V DC, 1 A
- Transistor contact rating: 24 V DC, 50 mA

## Display Specifications

- PV display: 5-digit, 7-segment, red LEDs, character height of 20 mm for UT550 and 12 mm for UT520
- Setpoint display: 3-digit and 5-digit, 7-segment, red LEDs, character height of 9.3 mm (for both UT520 and UT550)
- Status indicating lamps: LEDs

## Safety and EMC Standards


- Safety: Compliant with IEC/EN61010-1: 2001, approved by CSA1010, approved by UL508. Installation category : CAT. II (IEC/EN61010, CSA1010) Pollution degree : 2 (IEC/EN61010, CSA1010) Measurement category : I (CAT. I : IEC/EN61010) Rated measurement input voltage : 10V DC max.(across terminals), 300V AC max.(across ground) Rated transient overvoltage : 1500V (Note)

Note : It is a value on the safety standard which is assumed by IEC/EN61010-1 in measurement category


## 6. Terminal Wiring Diagrams NOTE

Do not use unassigned terminals as relay terminals.  
 \*Wiring can only be carried out for controllers with 24 V DC loop power supply.


### UT550 Standard Type (Model UT550-0□ or UT550-3□), or Heating/Cooling Type (Model UT550-2□), Single-loop Control

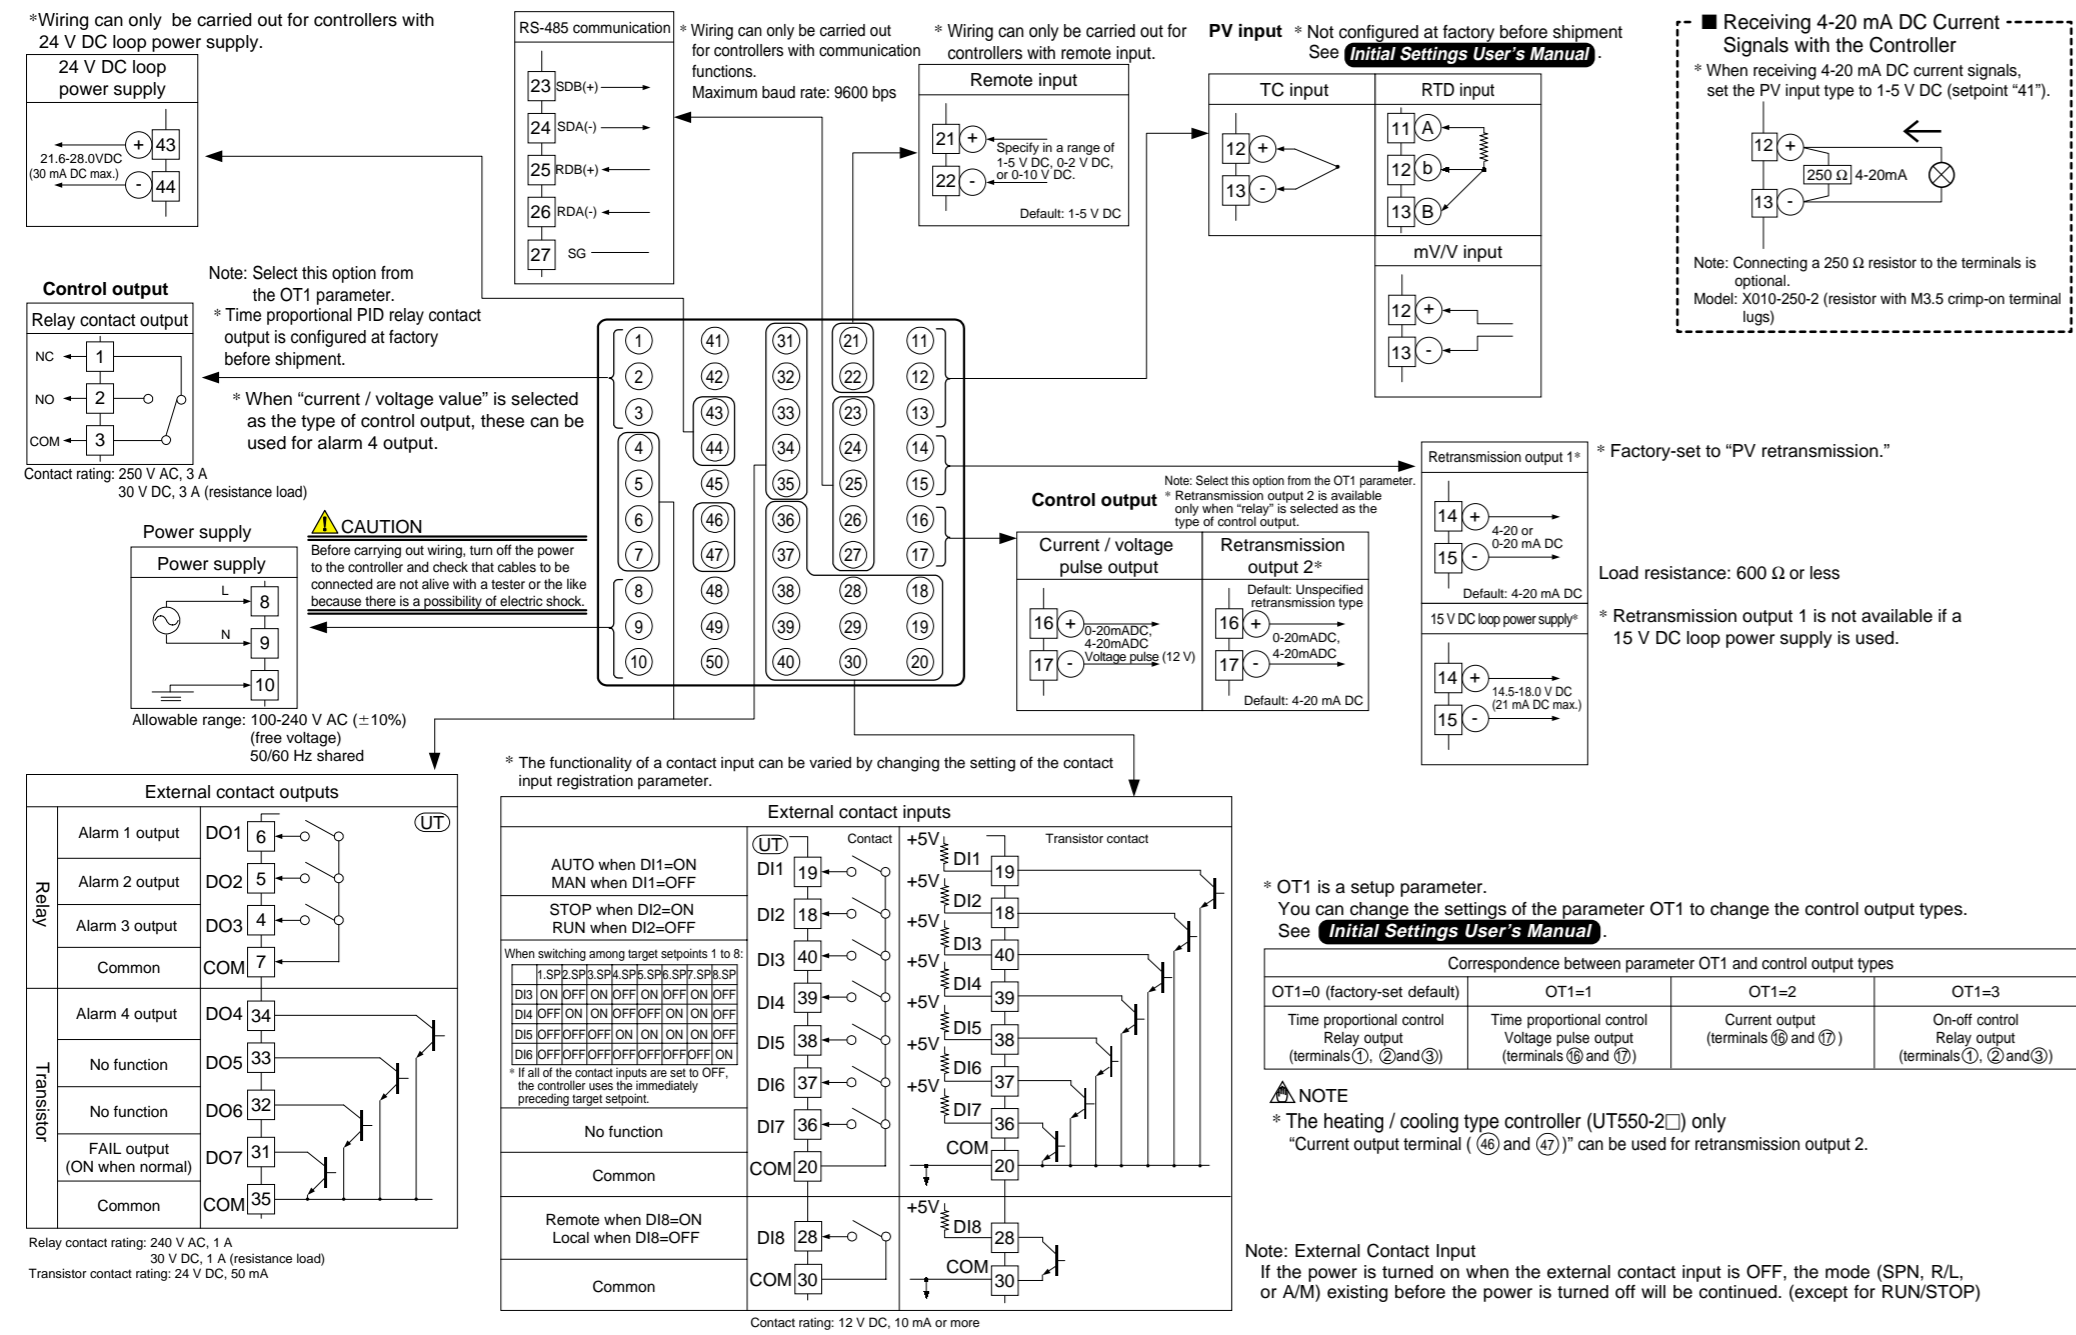


### UT550 Heating/Cooling Type (Model UT550-2□), Single-loop Heating/Cooling Control

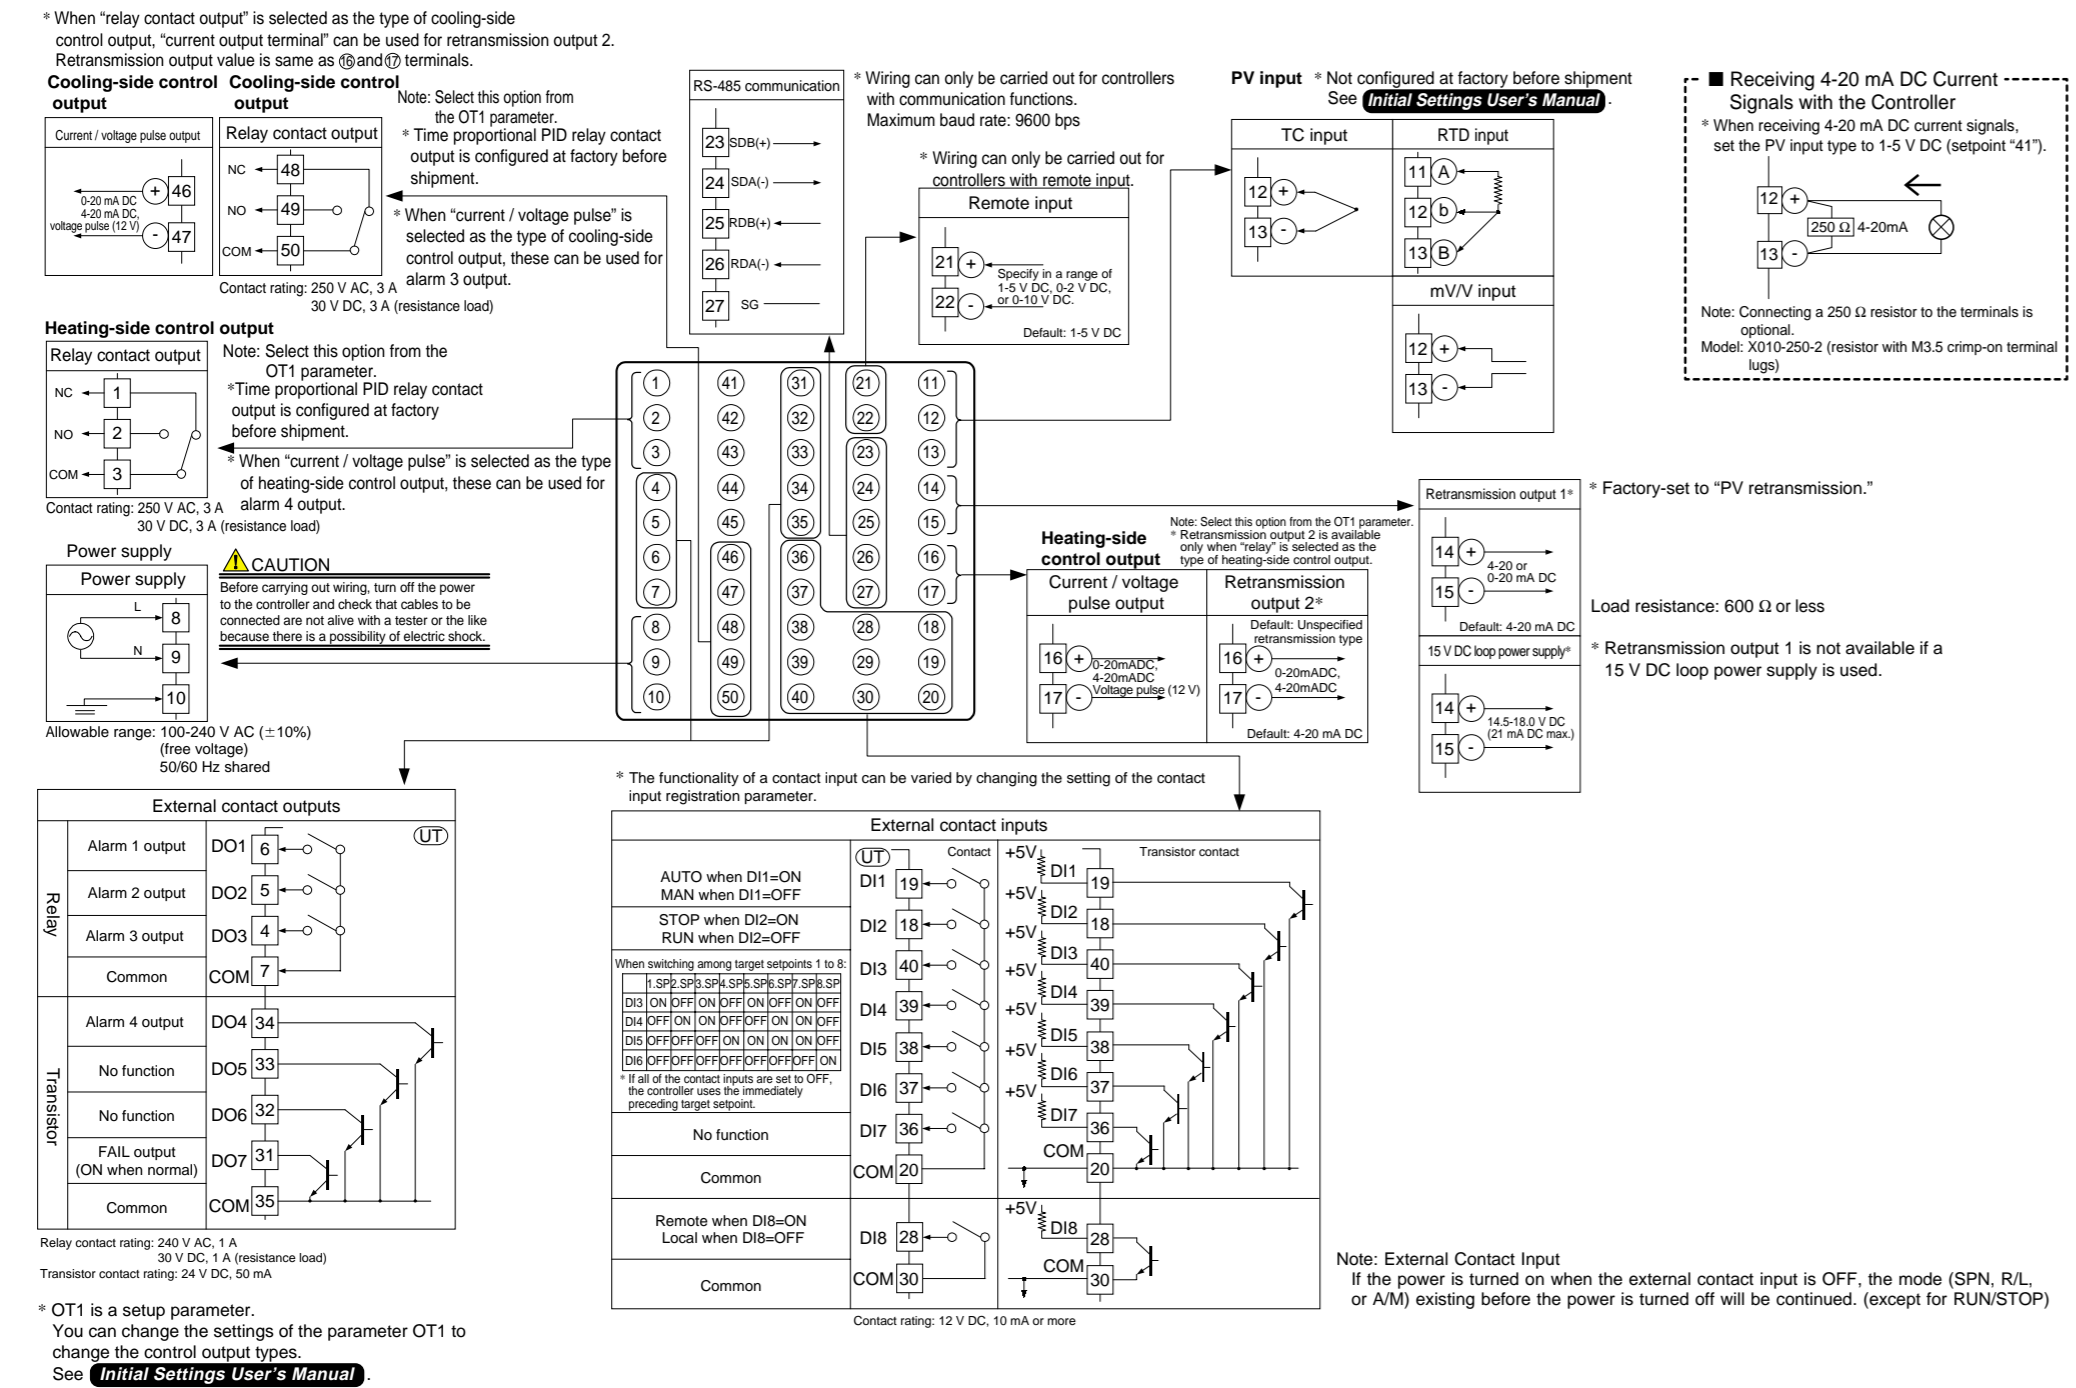

### UT550 Position Proportional Type (Model UT550-1□ or UT550-4□), Single-loop Position Proportional Control

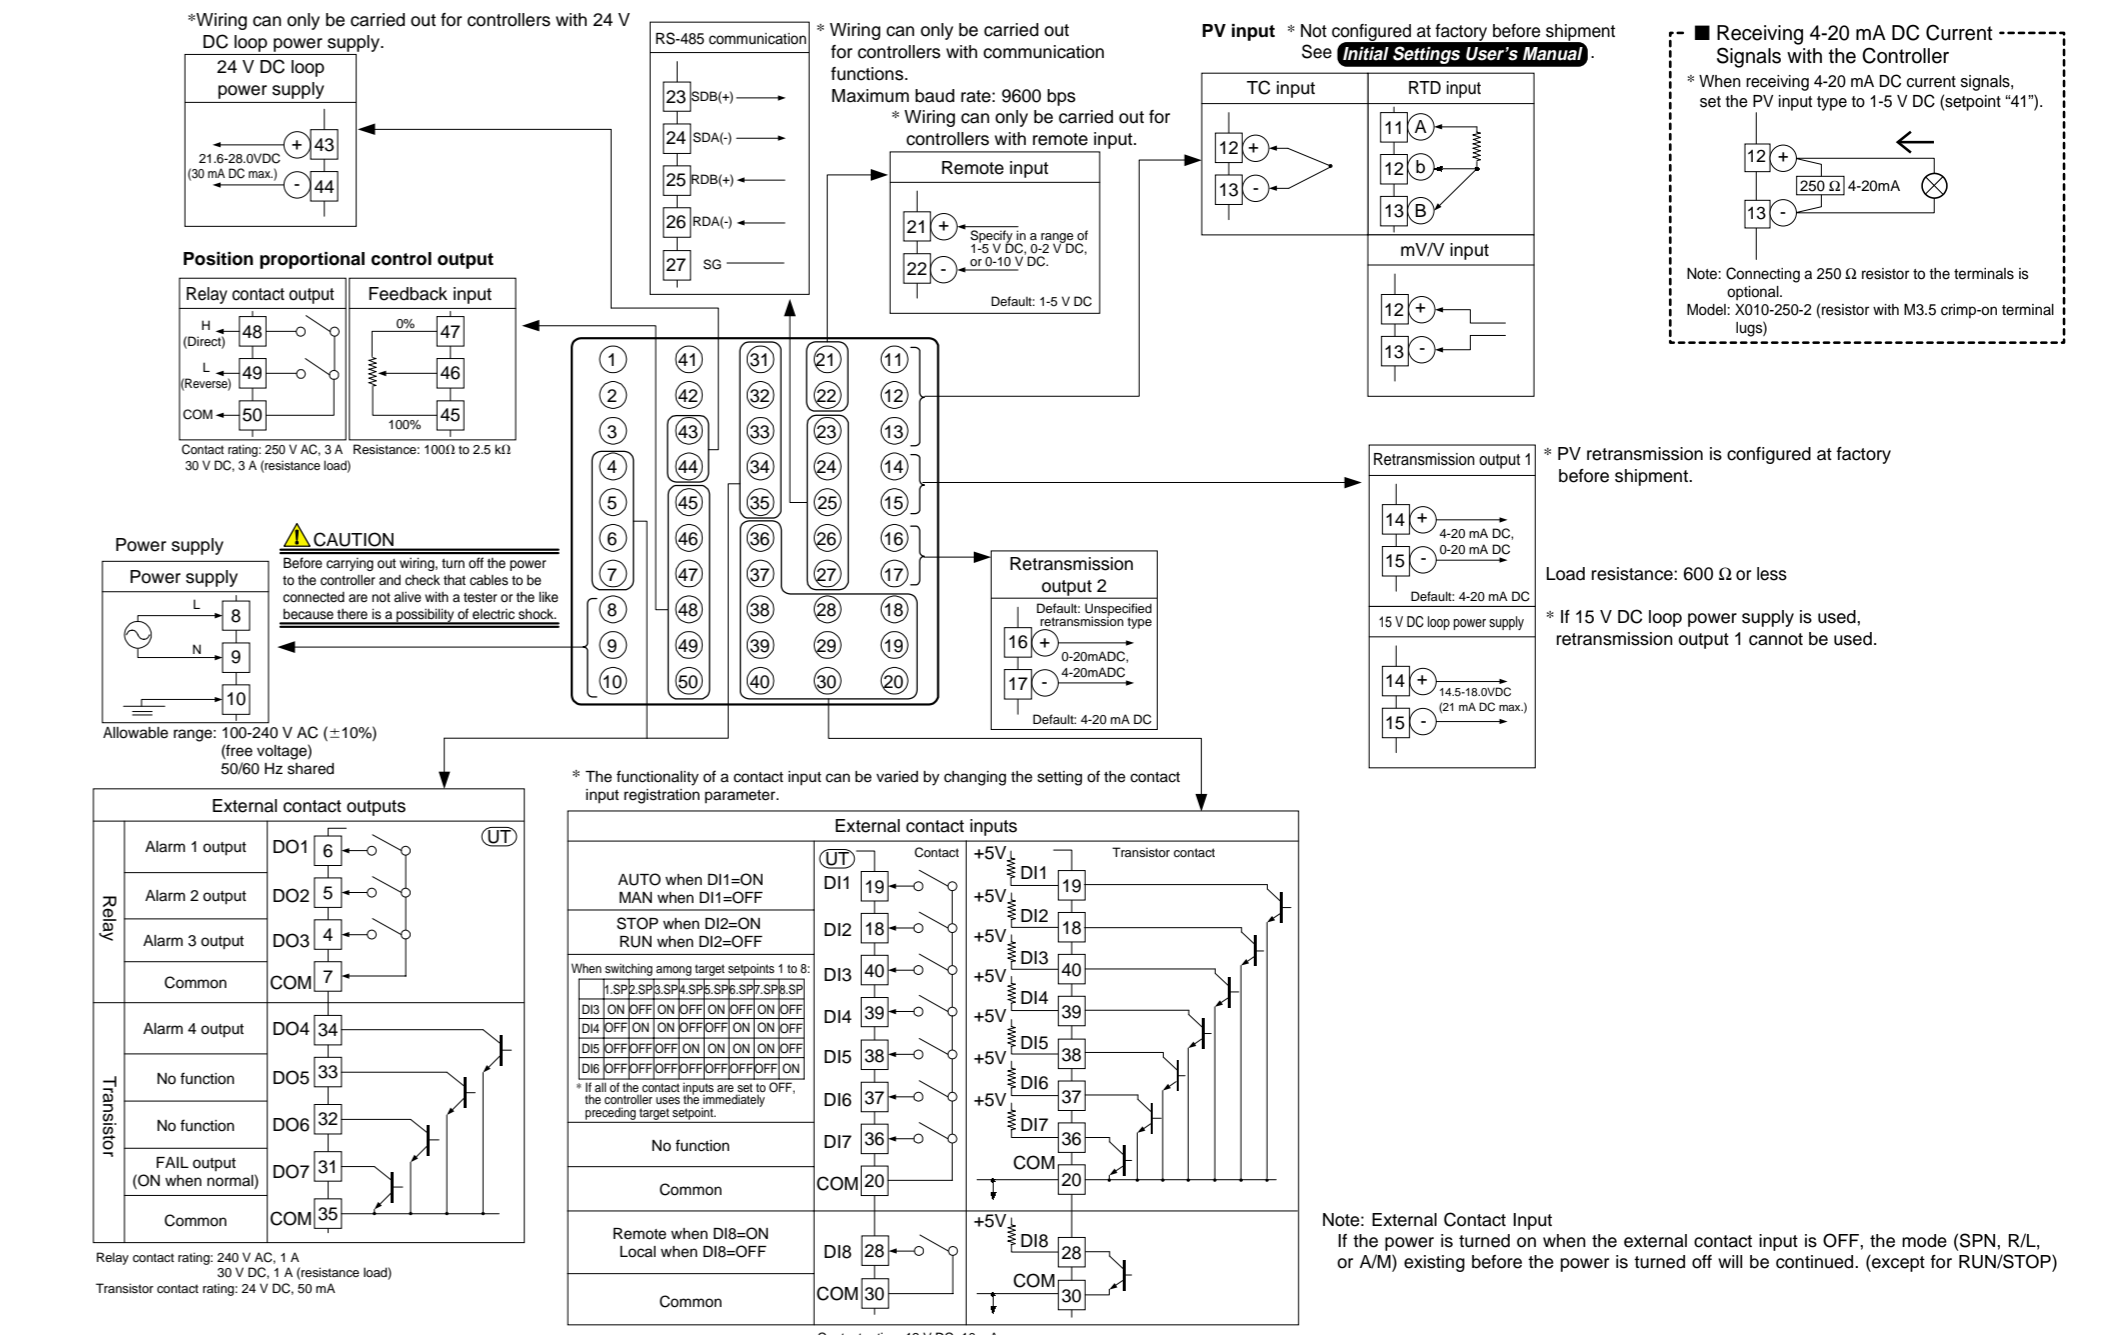

### UT520 Standard Type (Model UT520-0□), Single-loop Control

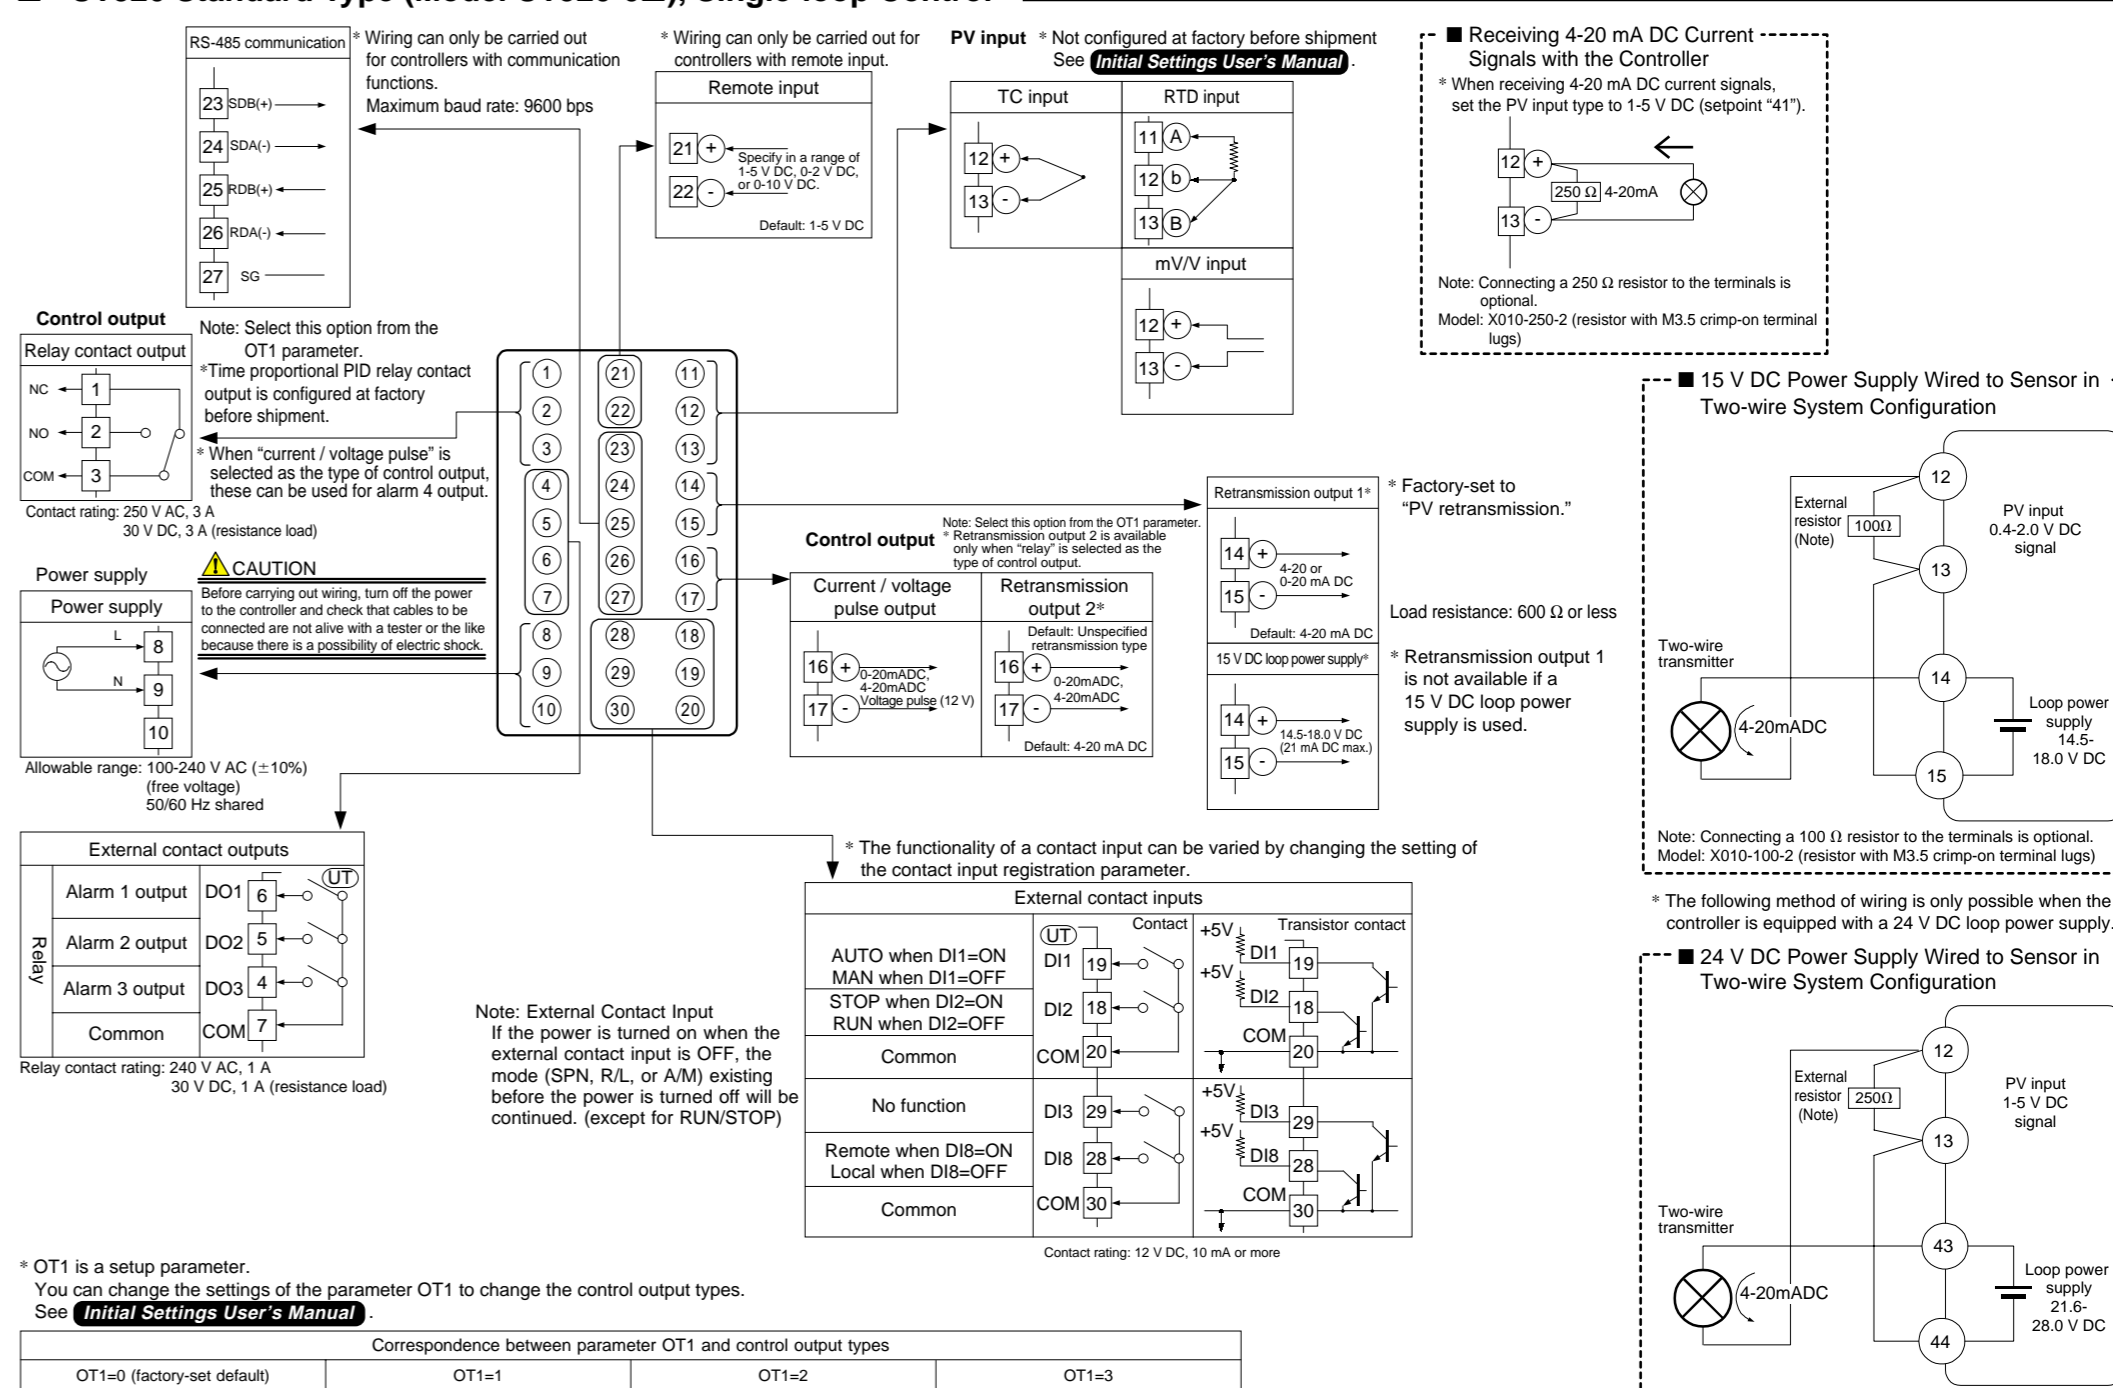




This manual describes examples of setting PV input types, control output types, and alarm types. Carrying out settings described herein allows you to perform basic control. Refer to examples of various settings to understand how to set parameters required. Refer to "1. Parameter Map" in **Parameters User's Manual** for an easy to understand explanation of setting various parameters. If you cannot remember how to carry out an operation during setting, press the key for more than 3 seconds. This brings you to the display (operating display) that appears at power-on.


**Contents**

- Names and Functions of Front Panel Parts
- Setting PV Input Type (Setting First at Power-on)
- Changing PV Input Type
- Setting Control Output Type (Except for a Position Proportional Controller)
- Calibrating Valve Position (for a Position Proportional Controller Only)
- Initializing Parameters
- Changing Alarm Type
- Description of Multiple Setpoints and PID

**1. Names and Functions of Front Panel Parts**

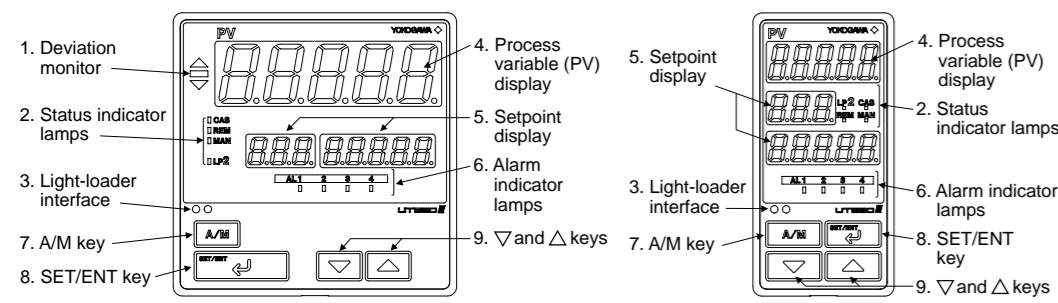

Name of Part	Function
1. Deviation monitor (for UT550 only)	When lit, indicates the status of a deviation (PV - SP). ▲ : Is lit (in orange) if a deviation exceeds the deviation display range. ▼ : Is lit (in green) when a deviation is within the deviation display range. ▽ : Is lit (in orange) if a deviation falls below the deviation display range. The deviation monitor goes off if any display other than the operating display or SELECT display is shown.
2. Status indicator lamps	Is lit (in green) to indicate the status of operation or control. CAS: Not used in single-loop control. REM: Is lit when in remote mode. MAN: Is lit when in manual mode. LP2: Not used in single-loop control.
3. Light-loader interface	Interface for an adapter cable used when setting and storing parameters from a PC. This requires an optional parameter setting tool.
4. Process variable (PV) display	Displays PV. Displays an error code (in red) if an error occurs.
5. Setpoint display	Displays a parameter symbol in 3-digit LED. Displays the setpoint of a parameter in 5-digit LED.
6. Alarm indicator lamps	If any of alarms 1 to 4 occurs, the respective alarm indicator lamp (AL1 to AL4) is lit (in orange).
7. A/M key	Used to switch between the AUTO and MAN modes. Each time you press the key, it switches to the AUTO or MAN mode alternately.
8. SET/ENT key	Used to switch or register a parameter. Pressing the key for more than 3 seconds allows you to switch between the operating display and the main menu for operating parameter setting display alternately.
9. ▽ and ▲ keys	Used to change numerical values. On setting displays for various parameters, you can change target setpoints, parameters, and output values (in manual operation). Pressing the ▽ key decreases a numerical value, while pressing the ▲ key causes it to increase. You can hold down a key to gradually increase the speed of change. To change from the parameter setting (operating or setup) display to the menu or from the setup parameter setting display menu to operating parameter setting display menu, press the ▽ and ▲ keys simultaneously.

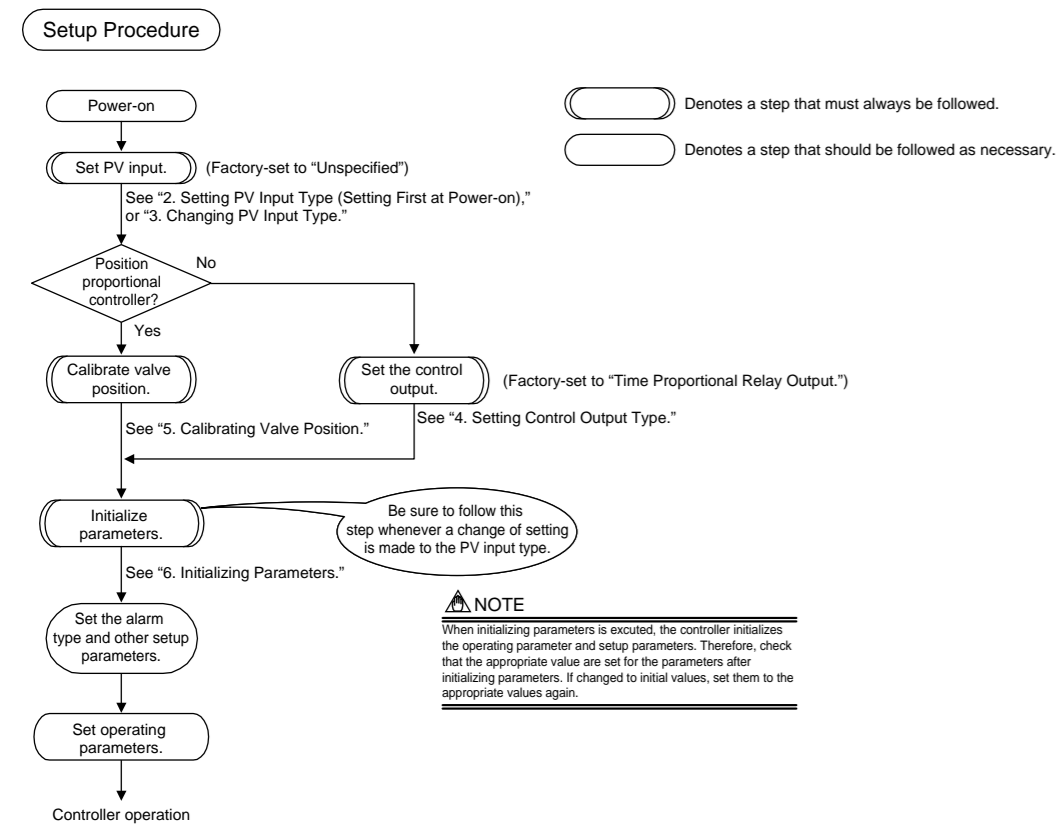

The following explanation of operation for the UT550's panel, shown in the figure, is the same as that of the UT520's panel.


**Setting of Main Parameters at the Factory before Shipment**

Item	Factory-shipped values for standard type controllers	Factory-shipped values for heating/cooling type controllers	Factory-shipped values for position proportional type controllers
Remote input signal (only for controllers with remote inputs)	1 to 5 V DC (variable)		
Control output	Time proportional PID relay output (variable)	Heating side: Time proportional PID relay output (variable) Cooling side: Time proportional PID relay output (variable)	Relay output (fixed)
Control action	Reverse action (variable)	Not specified	
PID parameter	P = 5.0%, I = 240 seconds, D = 60 seconds.		
Alarm output	Alarm-1: PV high limit, Alarm-2: PV low limit, Alarm-3: PV high limit, Alarm-4: PV low limit		

**2. Setting PV Input Type (Setting First at Power-on)**

**NOTE**

- The controller displays an operating display when the power is turned on. The submenu "IN" appears at this point if the type of PV input has not been defined yet. In this case, first press the key once to display the parameter "IN1" for the PV input type, and use the key to display the input range code to use, then press the key to register it. Then, set the maximum value (RH1) and minimum value (RL1) of the PV input range (for voltage input, set the maximum value (SH1) and minimum value (SL1) of the PV input scale). See the operating procedure below for more details.
- The controller is configured to the default of each parameter at the factory before shipment. First check these defaults listed in **Parameters User's Manual**, and change their values if necessary.

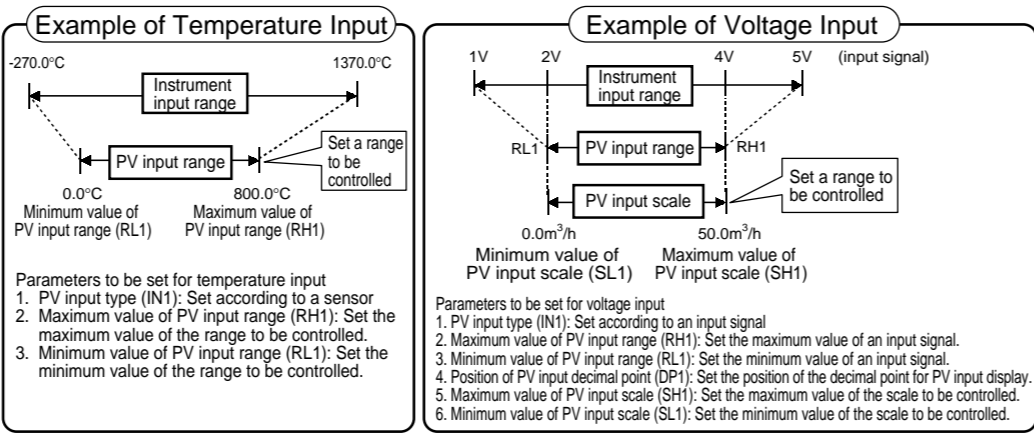

The following operating procedure describes an example of setting a K-type thermocouple (-200.0 to 500.0°C) and a measurement range of 0.0 to 200.0°C.

- Display view at power-on. Displays submenu "IN".
- Press the key once to display the parameter IN1 (PV input type). Blinks during change.
- Press the or key to display the required setpoint. The figure below shows an example of setting a K-type thermocouple (-200.0°C to 500.0°C). See "Instrument Input Range Codes." Blinks during change.
- Press the key once to register the setpoint. Displays parameter "RL1".
- Press the or key to display the required setpoint. The figure below shows an example of setting the minimum value of the PV input range to 0.0°C. Blinks during change.
- Press the key once to display the parameter "UN1" (PV input unit). Displays parameter "UN1".
- Press the key once to register the setpoint. Displays PV. If the type of input is voltage, also configure the PV Input Decimal Point Position (DP1), Maximum Value of PV Input Scale (SH1) and Minimum Value of PV Input Scale (SL1) parameters that follow this step.
- Press the key once to display the parameter "RH1" (maximum value of PV input range). Displays parameter "RH1".
- Press the key for more than 3 seconds. This returns you to the display shown at power-on (figure below). Displays target setpoint-1 "1.SP". The PV display in the figure above shows the error code for input burnout (b00t) if PV input wiring is not yet complete. The error code disappears when you wire the PV input terminals correctly.

**Instrument Input Range Codes**

Input	Type	Instrument Input Range Code	Instrument Input Range	Measurement Accuracy	
Unspecified		OFF	Set the data item PV Input Type "IN1" to the OFF option to leave the PV input type undefined.		
K		1	-270.0 to 1370.0°C -450.0 to 2500.0°F	±0.1% of instrument range ±1 digit at 0°C or more ±0.2% ±1 digit for temperatures below 0°C, where the accuracy is: ±2% of instrument range ±1 digit for temperatures below -200.0°C for a type-K thermocouple, or ±1% of instrument range ±1 digit for temperatures below -200.0°C for a type-T thermocouple.	
		2	-270.0 to 1000.0°C -450.0 to 2300.0°F		
		3	-200.0 to 500.0°C -300.0 to 1000.0°F		
		4	-200.0 to 1200.0°C -300.0 to 2300.0°F		
		5	-270.0 to 400.0°C -450.0 to 750.0°F		
		6	0.0 to 400.0°C -200.0 to 750.0°F		
Thermocouple		7	0.0 to 1800.0°C 32 to 3300°F	±0.15% of instrument range ±1 digit at 400°C or more ±5% of instrument range ±1 digit at less than 400°C	
		8	32 to 3100°F		
		9	0.0 to 1700.0°C 32 to 3100°F		
		10	-200.0 to 1300.0°C -300.0 to 2400.0°F		±0.1% of instrument range ±1 digit ±0.25% of instrument range ±1 digit for temperatures below 0°C
		11	-270.0 to 1000.0°C -450.0 to 1800.0°F		
		12	-200.0 to 900.0°C -300.0 to 1600.0°F		
RTD		13	-200.0 to 400.0°C -300.0 to 750.0°F	±0.1% of instrument range ±1 digit at 0°C or more ±0.2% ±1 digit for temperatures below 0°C, where the accuracy is: ±1.5% of instrument range ±1 digit for temperatures below -200.0°C for a type-E thermocouple.	
		14	0.0 to 400.0°C -200.0 to 1000.0°F		
		15	0.0 to 2300.0°C 32 to 4200°F		±0.2% of instrument range ±1 digit
		16	0.0 to 1390.0°C 32 to 2500.0°F		
		17	0.0 to 1800.0°C 32 to 3400°F		±0.1% of instrument range ±1 digit ±0.5% of instrument range ±1 digit at 800°C or more No accuracy is guaranteed at less than 800°C
		18	0.0 to 2000.0°C 32 to 3600°F		
Standard signal		30	-200.0 to 500.0°C -300.0 to 1000.0°F	±0.1% of instrument range ±1 digit (Note1) (Note2)	
		31	-150.00 to 150.00°C -200.0 to 300.0°F		
		35	-200.0 to 850.0°C -300.0 to 1560.0°F		
		36	-200.0 to 500.0°C -300.0 to 1000.0°F		
		37	-150.00 to 150.00°C -200.0 to 300.0°F		
		40	0.400 to 2.000 V		±0.1% of instrument range ±1 digit Display range is scalable in a range of -19999 to 30000. Display span is 30000 or less.
41	1.000 to 5.000 V				
42	0.000 to 2.000 V				
43	0.000 to 2.000 V				
44	0.000 to 10.00 V				
45	-10.00 to 20.00 mV				
DC voltage		56	0.0 to 100.0 mV	±0.2% of instrument range ±1 digit (Note1)	
		55	-10.00 to 20.00 mV		

\* Performance in the standard operating conditions (at 23±2°C, 55±10%RH, and 50/60 Hz power frequency)  
 Note1: The accuracy is ±0.3°C of instrument range ±1 digit for a temperature range from 0°C to 100°C.  
 Note2: The accuracy is ±0.5°C of instrument range ±1 digit for a temperature range from -100°C to 200°C.  
 \* To receive a 4-20 mA DC signal, select a standard signal of 1 to 5 V DC and connect it to a 250Ω resistor. This resistor is optional.  
 Model: X010-250-2 (resistor with M3.5 crimp-on terminal lugs)

**NOTE**

The controller may automatically initialize the registered operating parameter setpoints if any change is made to the data item PV Input Type (IN1), Maximum Value of PV Input Range (RH1), Minimum Value of PV Input Range (RL1), PV Input Decimal Point Position (DP1), Maximum Value of PV Input Scale (SH1) or Minimum Value of PV Input Scale (SL1). After a change has been made to any of these data items, be sure to verify the registered operating parameter setpoints to ensure that they are correct. If any data item has been changed to its default, set it to a required value.

**How to return to a menu**  
 Simultaneously press both the and keys once during parameter setting. This lets you return to the parameter menu.

**Ranges Selectable for PV Input**

Thermocouple	1 to 18
RTD	30, 31, 35 to 37
DC voltage(mV,V)	40, 41, 50, 51, 55, 56

**Ranges Selectable for Remote Input**

DC voltage(V)	40, 41, 50, 51
---------------	----------------

**3. Changing PV Input Type**

The following operating procedure describes an example of changing the setting of K-type thermocouple (-200.0 to 500.0°C) to RTD Pt100 (-200.0 to 500.0°C) and a measurement range of 0.0 to 200.0°C.

- Bring the operating display into view (display appears at power-on). Displays PV.
- Press the key for more than 3 seconds to call up the main menu "MODE". Displays main menu "MODE".
- Press the key once to display the main menu "STUP". Displays main menu "STUP".
- Press the key once to display the main menu "LOOP1". Displays main menu "LOOP1".
- Press the key once to display the main menu "UTMD". Displays main menu "UTMD".
- Press the key once to display the submenu "MD". Displays submenu "MD".
- Press the key once to display the parameter "IN1" (PV input type). Displays parameter "IN1".
- Press the or key to display the required setpoint. The figure below shows an example of setting the PV input type to a Pt100 resistance temperature detector (-200.0°C to 500.0°C). Blinks during change.
- Press the key once to register the setpoint. Displays PV.
- Press the key once to display the parameter "UN1". Displays parameter "UN1".
- Press the key for more than 3 seconds. This returns you to the display shown at power-on (figure below). Displays target setpoint-1 "1.SP".

If the type of Input is voltage, also configure the PV Input Decimal Point Position (DP1), Maximum Value of PV Input Scale (SH1) and Minimum Value of PV Input Scale (SL1) parameters that follow this step.

#### 4. Setting Control Output Type (Except for a Position Proportional Controller)

The following operating procedure describes an example of changing time proportional PID relay output (0: factory-shipped value) to current output (2).

Control output terminal Values in parentheses are setpoints  
 Time proportional PID relay (0)/on-off(3) output..... ①-②-③  
 Current PID (2)/time proportional PID voltage pulse (1) output..... ④-⑦  
 For details on the output terminals for heating/cooling control, see "6. Terminal Wiring Diagrams" in the **Installation User's Manual**.

- Bring the operating display into view (display appears at power-on).
- Press the **[ ]** key for more than 3 seconds to call up the main menu "MODE".
- Press the **[ ]** key once to display the main menu "STUP".
- Press the **[ ]** key once to display the main menu "LOOP1".
- Press the **[ ]** key once to display the main menu "UTMD".
- Press the **[ ]** key once to display the submenu "MD".
- Press the **[ ]** key twice to display the submenu "OUT".
- Press the **[ ]** key once to display the parameter "OT1" (control output type).
- Press the **[ ]** or **[ ]** key to display the required setpoint. The figure below shows an example of setting to current output (4 to 20 mA DC).
- Press the **[ ]** key for more than 3 seconds. This returns you to the display shown at power-on (figure below).

#### List of Control Output Types

Parameter Symbol	Name of Parameter	Setpoint	Control Output Types	
ot 1 (OT1)	Control output type	0	Time proportional PID relay contact output (terminals ①-②-③)	
		1	Time proportional PID voltage pulse output (terminals ④-⑦)	
		2	Current output (terminals ④-⑦)	
		3	On/off control relay contact output (terminals ①-②-③)	
		The following 4 to 12 are displayed only for heating/cooling type controllers.		
		4	Heating-side relay output (terminals ①-②-③), cooling-side relay output (terminals ④-⑤-⑥)	
		5	Heating-side pulse output (terminals ④-⑦), cooling-side relay output (terminals ④-⑤-⑥)	
		6	Heating-side current output (terminals ④-⑦), cooling-side relay output (terminals ④-⑤-⑥)	
		7	Heating-side relay output (terminals ①-②-③), cooling-side pulse output (terminals ④-⑦)	
		8	Heating-side pulse output (terminals ④-⑦), cooling-side pulse output (terminals ④-⑦)	
		9	Heating-side current output (terminals ④-⑦), cooling-side pulse output (terminals ④-⑦)	
		10	Heating-side relay output (terminals ①-②-③), cooling-side current output (terminals ④-⑦)	
		11	Heating-side pulse output (terminals ④-⑦), cooling-side current output (terminals ④-⑦)	
12	Heating-side current output (terminals ④-⑦), cooling-side current output (terminals ④-⑦)			

#### 5. Calibrating Valve Position (for a Position Proportional Controller Only)

The following operation describes a procedure of inputting a feedback signal from a control valve to calibrate the full closed and full open positions of the valve automatically. To calibrate the valve position, you need to carry out wire connections and bring the controller into manual mode. For connections, see "6. Terminal Wiring Diagrams" in the **Installation User's Manual** and for entering the manual mode, see "8. Switching between AUTO and MAN" in the **Operations User's Manual**.

- Bring the operating display into view (display appears at power-on).
- Press the **[ ]** key for more than 3 seconds to call up the main menu "MODE".
- Press the **[ ]** key once to display the main menu "STUP".
- Press the **[ ]** key once to display the main menu "LOOP1".
- Press the **[ ]** key once to display the main menu "UTMD".
- Press the **[ ]** key once to display the submenu "MD".
- Press the **[ ]** key three times to display the submenu "VALV".
- Press the **[ ]** key once to display the parameter "VAT".
- Press the **[ ]** key to display "ON".
- Press the **[ ]** key once. The controller automatically calibrates the valve position (fully open or closed).
- The controller is viewed as shown below when the valve position is being automatically calibrated.
- Calibration has ended successfully when the indication changes from "ON" to "OFF". Go to step [14].
- Calibration has ended unsuccessfully if the indication changes from "ON" to "ERR". Check the feedback input wiring and carry out automatic calibration again.
- Press the **[ ]** key for more than 3 seconds. This returns you to the display shown at power-on (figure below).

#### 6. Initializing Parameters

Be sure to follow the steps below after a change of setting has been made to the data item PV Input Type, PV Input Range or PV Input Scale.

#### CAUTION

Initializing the above parameter setpoints may initialize the registered operating/setup parameter setpoints. Check that they are correct. If any of them has been changed to its initial value, set it to a required value.

- Bring the operating display into view (display appears at power-on).
- Press the **[ ]** key for more than 3 seconds to call up the main menu "MODE".
- Press the **[ ]** key once to display the main menu "STUP".
- Press the **[ ]** key once to display the main menu "LOOP1".
- Press the **[ ]** key once to display the main menu "UTMD".
- Press the **[ ]** key once to display the submenu "MD".
- Press the **[ ]** key twice to display the submenu "INIT".
- Press the **[ ]** key once to display the parameter "INI".
- Press the **[ ]** key to display "ON".
- Press the **[ ]** key once. The display momentarily becomes blank (which is normal), indicating the parameters have been initialized.
- Press the **[ ]** key for more than 3 seconds. This returns you to the display shown at power-on (figure below).

#### 7. Changing Alarm Type

The following operating procedure describes an example of changing alarm 1 (factory-set to the PV high limit alarm) to the PV low limit alarm. When you have changed alarm type, the alarm setpoint will be initialized; set the alarm setpoint again.

- Bring the operating display into view (display appears at power-on).
- Press the **[ ]** key for more than 3 seconds to call up the main menu "MODE".
- Press the **[ ]** key once to display the main menu "STUP".
- Press the **[ ]** key once to display the main menu "LOOP1".
- Press the **[ ]** key once to display the submenu "SP".
- Press the **[ ]** key once to display the submenu "ALM".
- Press the **[ ]** key once to display the parameter "AL1" (alarm-1 type).
- Press the **[ ]** or **[ ]** key to display the required setpoint. The figure below shows an example of setting the PV low limit alarm.

- Press the **[ ]** key once to register the setpoint.
- When setting alarm setpoints, see "5. Setting Alarm Setpoints" in the **Operations User's Manual**.
- Press the **[ ]** key for more than 3 seconds. This returns you to the display shown at power-on (figure below).


#### List of Alarm Types

The table below shows the alarm types and alarm actions. In the table, codes 1 to 10 are not provided with stand-by actions, while codes 11 to 20 are provided with stand-by actions.

Alarm type	Alarm action	Alarm type code	Alarm type	Alarm action	Alarm type code
No alarm		OFF			
PV high limit	Hysteresis Open (unit) Alarm setpoint	1	De-energized on deviation low limit alarm	Hysteresis Open (unit) Closed (unit) Deviation setpoint Target SP	6
PV low limit	Hysteresis Closed (lit) Alarm setpoint	2	Deviation high and low limits	Hysteresis Closed (unit) Open (unit) Deviation setpoint Target SP	7
Deviation high limit	Hysteresis Open (unit) Closed (lit) PV Target SP	3	Deviation within high and low limits	Hysteresis Open (unit) Closed (unit) Deviation setpoint Target SP	8
Deviation low limit	Hysteresis Closed (lit) Open (unit) Deviation setpoint Target SP	4	De-energized on PV high limit	Hysteresis Closed (unit) Open (lit) PV Alarm setpoint	9
De-energized on deviation high limit alarm	Hysteresis Closed (unit) Open (lit) PV Target SP	5	De-energized on PV low limit	Hysteresis Open (lit) Closed (unit) Alarm setpoint PV	10
Timer function (control stability report event) (Alarm-1 only)	Upward (hour/minute) Downward (hour/minute) Upward (minute/second) Downward (minute/second)	21 22 23 24	Sensor grounding alarm	Sensor grounding alarm	25
SP high limit	Hysteresis Open (unit) Alarm setpoint	28	Fault diagnosis output (Note1)	Fault diagnosis output	26
SP low limit	Hysteresis Closed (lit) Alarm setpoint	29	FAIL output (Note2)	The controller stops when in a FAIL state. The control output is set to "OFF" or "0%" and the alarm output is set to "OFF".	27
			Output high limit	Hysteresis Open (unit) Closed (lit) Output value Alarm setpoint	30
			Output low limit	Hysteresis Closed (lit) Open (unit) Alarm setpoint Output value	31

Note 1: The fault diagnosis output turns on in case of input burnout, A/D converter failure, or reference junction compensation (RJC) failure. For input burnout or A/D converter failure, the control output is set to the setpoint of the Preset Output Value operating parameter (PO).

Note 2: The FAIL output is on during normal operation and turns off in case of failure.

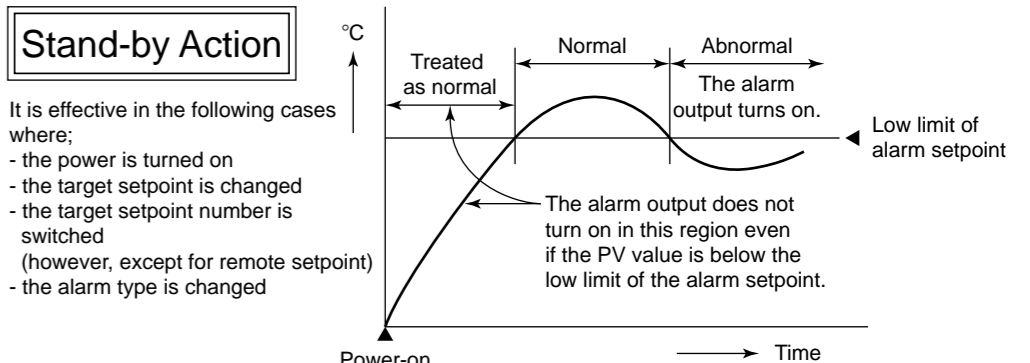

#### 8. Description of Multiple Setpoints and PID

The UT550/UT520 has a maximum of eight target setpoints, and has PID for each of these setpoints. The following shows the correspondence between the target setpoint numbers (SPN), target setpoints (SP), and PID parameters. For example, if you have set "2" to the target setpoint number (SPN), the control parameters available are target setpoint (2.SP), proportional band (heating-side proportional band) (2.P), integral time (heating-side integral time) (2.I), derivative time (heating-side derivative time) (2.D), cooling-side proportional band (2.Pc), cooling-side integral time (2.Ic), and cooling-side derivative time (2.Dc).

To use multiple target setpoints, see the table below to check the corresponding parameters.

Target setpoint number (SPN)	Target setpoint (SP)	PID parameter					
		Proportional band (heating-side proportional band)	Integral time (heating-side integral time)	Derivative time (heating-side derivative time)	Cooling-side proportional band	Cooling-side integral time	Cooling-side derivative time
SPN=1	1.SP	1.P	1.I	1.D	1.Pc	1.Ic	1.Dc
SPN=2	2.SP	2.P	2.I	2.D	2.Pc	2.Ic	2.Dc
SPN=3	3.SP	3.P	3.I	3.D	3.Pc	3.Ic	3.Dc
SPN=4	4.SP	4.P	4.I	4.D	4.Pc	4.Ic	4.Dc
SPN=5	5.SP	5.P	5.I	5.D	5.Pc	5.Ic	5.Dc
SPN=6	6.SP	6.P	6.I	6.D	6.Pc	6.Ic	6.Dc
SPN=7	7.SP	7.P	7.I	7.D	7.Pc	7.Ic	7.Dc
SPN=8	8.SP	8.P	8.I	8.D	8.Pc	8.Ic	8.Dc

This manual describes key entries for operating the controller. For operations using external contact inputs, see "6. Terminal Wiring Diagrams" in **Installation User's Manual**. If you cannot remember how to carry out an operation during setting, press the key for more than 3 seconds. This brings you to the display (operating display) that appears at power-on.

**Contents**


1. Monitoring-purpose Operating Displays Available during Operation
2. Setting Target Setpoint (SP)
3. Performing/Canceling Auto-tuning
4. Setting PID Manually
5. Setting Alarm Setpoints
6. Selecting Target Setpoint Numbers (SPN)
7. Switching between Run and Stop
8. Switching between AUTO and MAN
9. Manipulating Control Output during Manual Operation
10. Switching between Remote (REM) and Local (LCL)
11. Troubleshooting

**1. Monitoring-purpose Operating Displays Available during Operation**

The monitoring-purpose operating displays available during operation are roughly classified into two groups depending on the types of controller and control output. One group is operating displays for standard and position proportional controllers and the other group is operating displays for a heating/cooling controller.


**Operating Displays for Standard and Position Proportional Controllers**

- **SP Display**  
 The PV input value appears on the PV display.  
 The target setpoint (1.SP) appears on the Setpoint display. (can be changed)
- **OUT Display**  
 The PV input value appears on the PV display.  
 The control output value (OUT) appears on the Setpoint display. (can be changed in MAN mode)  
 When in position proportional control, the Setpoint display shows the valve opening (0% to 100%).
- **PID Number Display**  
 The PV input value appears on the PV display.  
 The PID number (PID) being used appears on the Setpoint display.

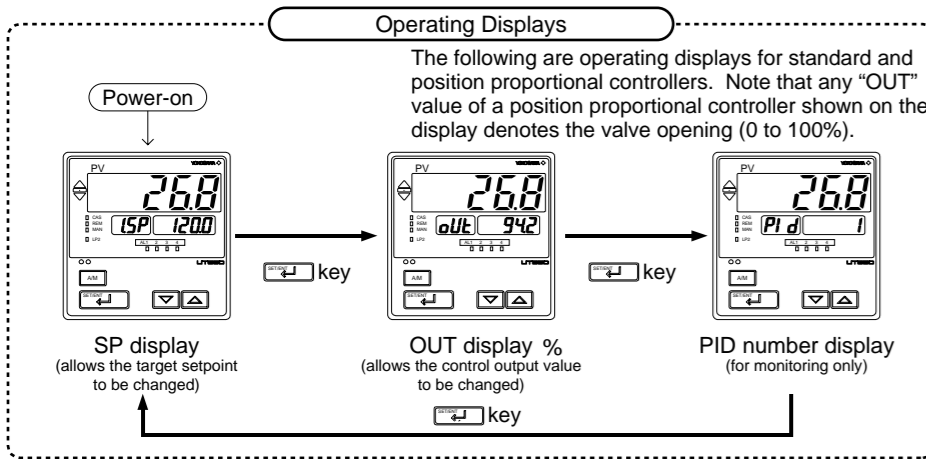


**Operating Displays for a Heating/Cooling Controller**

- **SP Display**  
 The PV input value appears on the PV display.  
 The target setpoint (1.SP) appears on the Setpoint display. (can be changed)
- **Heating/Cooling OUT Display**  
 The PV input value appears on the PV display.  
 The heating and cooling sides control output value (C.H) appears on the Setpoint display. (can be changed in MAN mode)
- **PID Number Display**  
 The PV input value appears on the PV display.  
 The PID number (PID) being used appears on the Setpoint display.

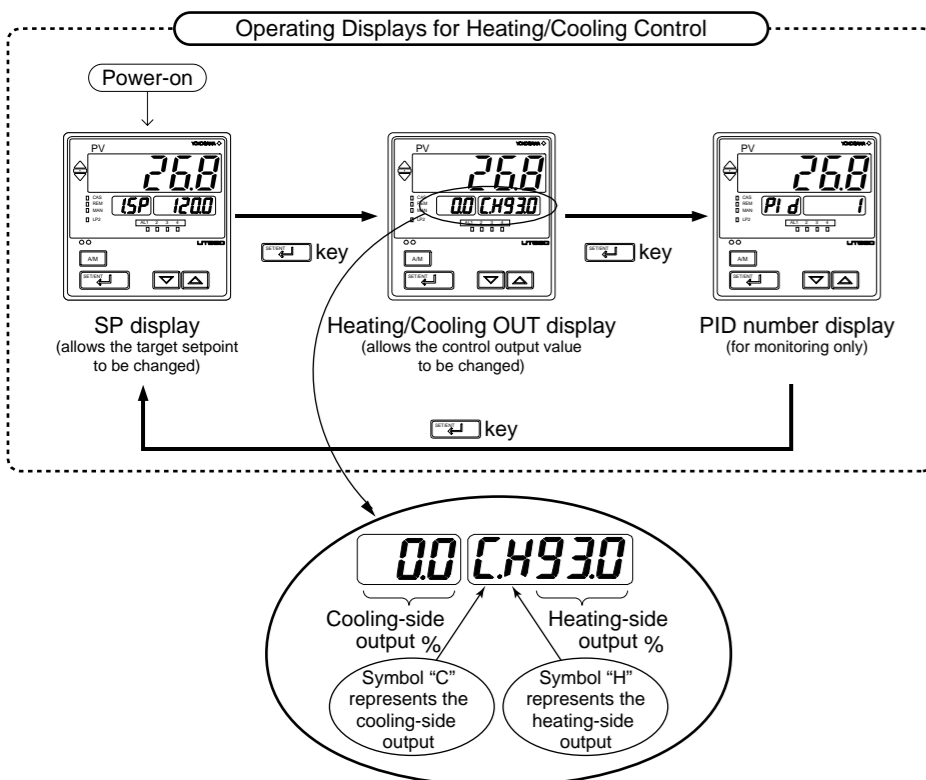

**2. Setting Target Setpoint (SP)**

The following operating procedure describes an example of setting 150.0 to a target setpoint. In automatic operation, the controller starts control using set target setpoints.

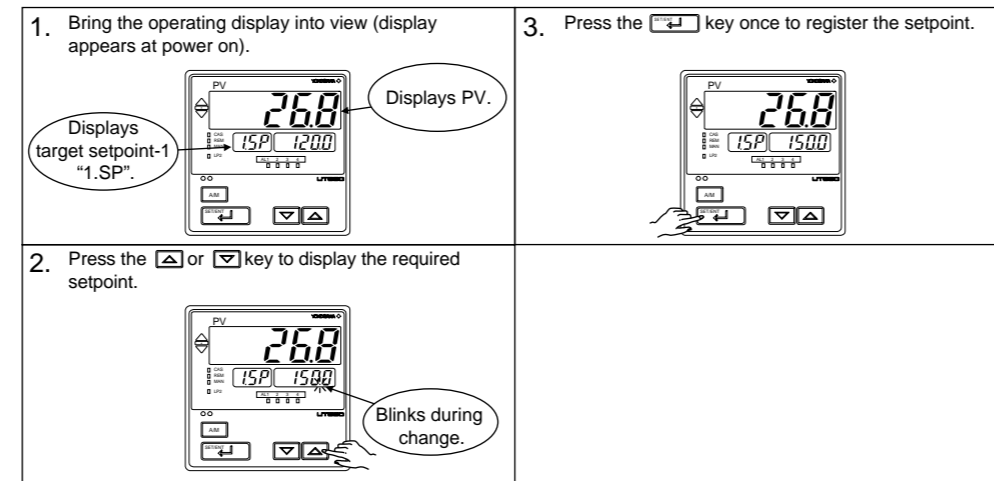


**3. Performing/Canceling Auto-tuning**

Auto-tuning should be carried out after setting a target setpoint (SP). Make sure the controller is in automatic operation mode (AUTO) and in running state (RUN) before carrying out auto-tuning. See "8. Switching between AUTO and MAN," to change to AUTO and "7. Switching between Run and Stop," to change to Run.

**NOTE**


When on-off control is being used, auto-tuning cannot be carried out. Moreover, do not perform auto-tuning when controlling any of the following processes.

- Control processes with quick response such as flow control or pressure control
- Processes where even temporary output on/off results in inconvenience
- Processes where a large output change at control element results in inconvenience
- Processes where variations in PV may exceed an allowable range, adversely affecting product quality

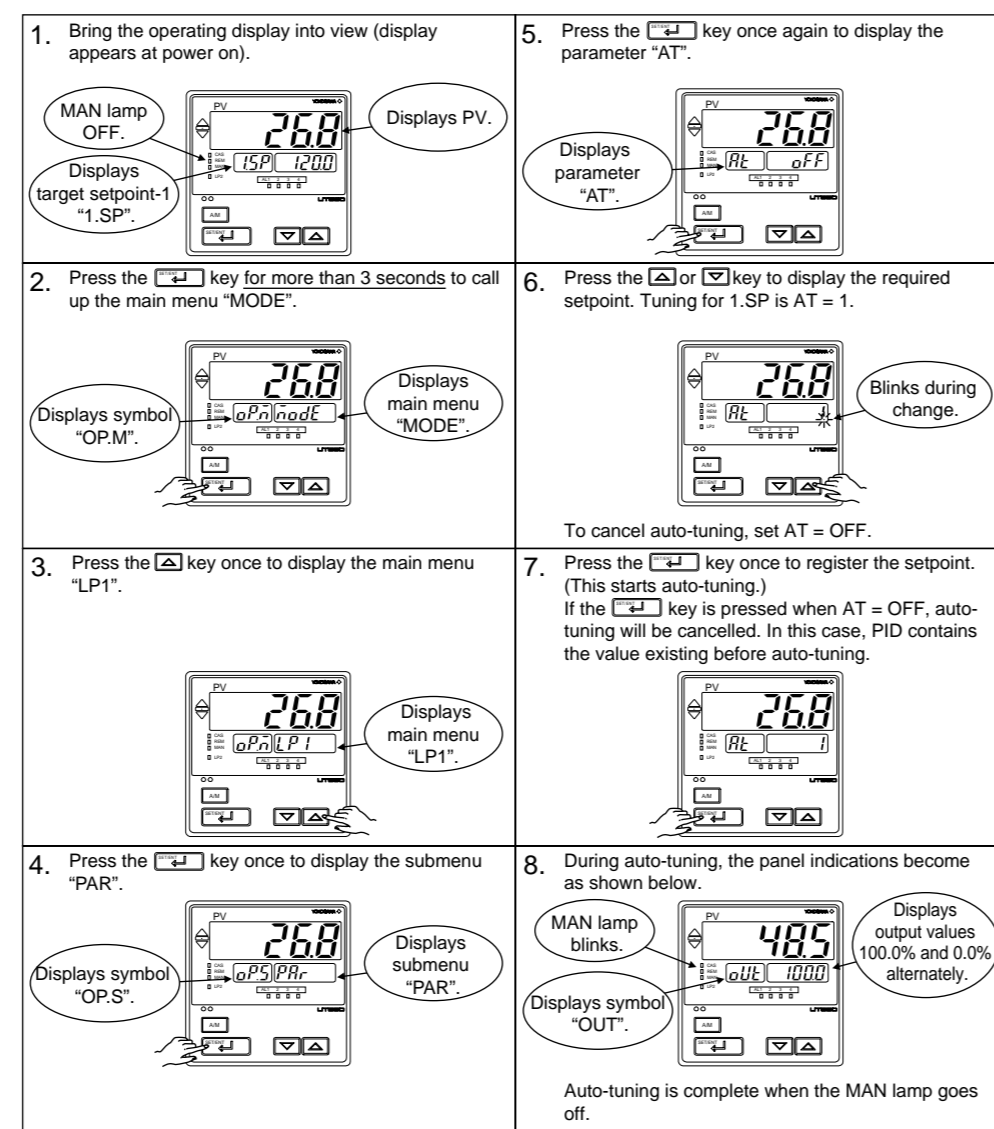

**4. Setting PID Manually**


If you know the values to be set or if suitable PID constants cannot be obtained by auto-tuning, follow the procedure below to set values.

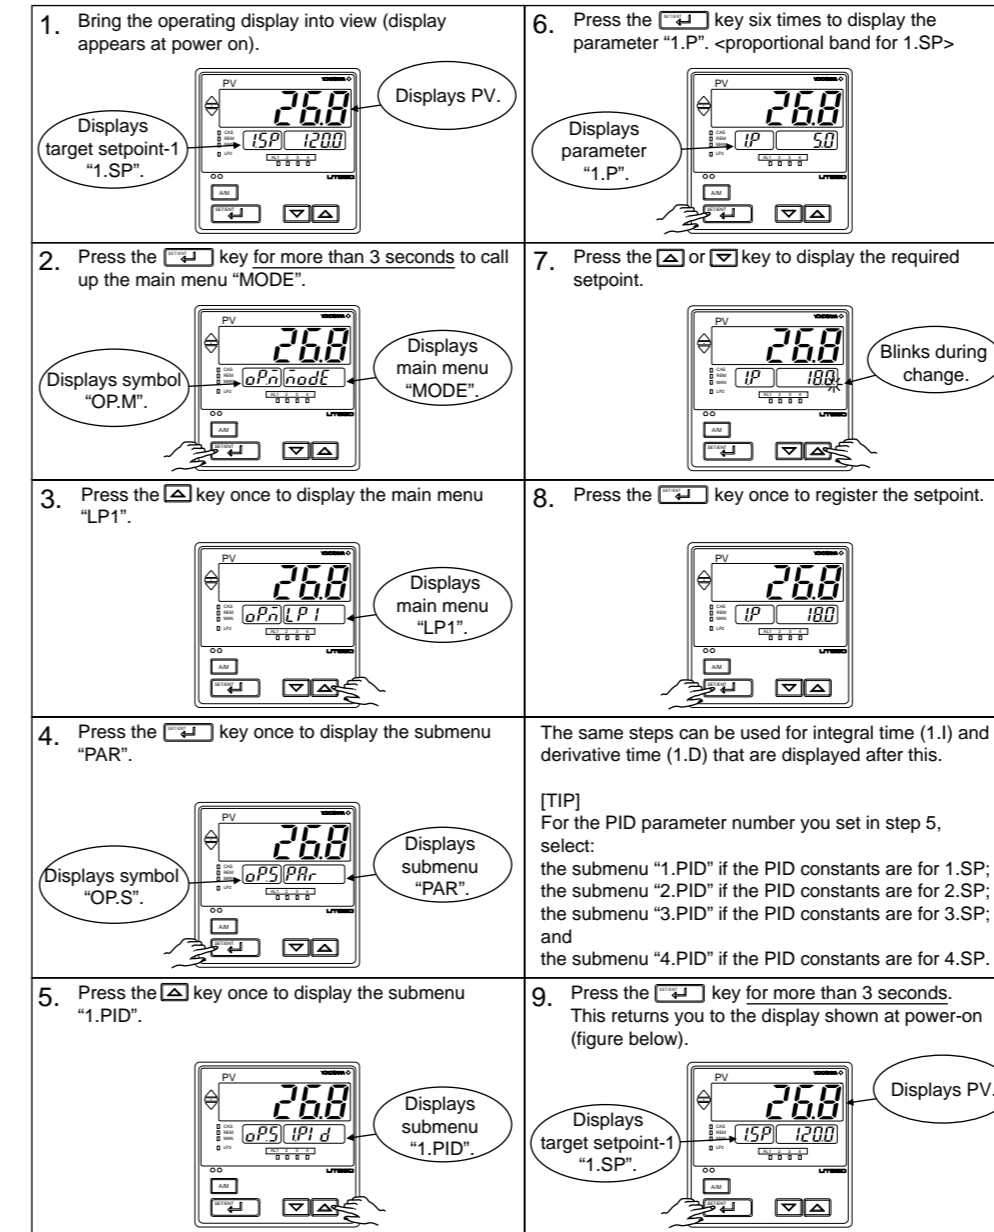

**5. Setting Alarm Setpoints**


The following operating procedure describes an example of setting 160.0 to alarm-1 setpoint. Check alarm type before setting the alarm setpoint.

When changing the alarm type, see "7. Changing Alarm Type," in **Initial Settings User's Manual**.

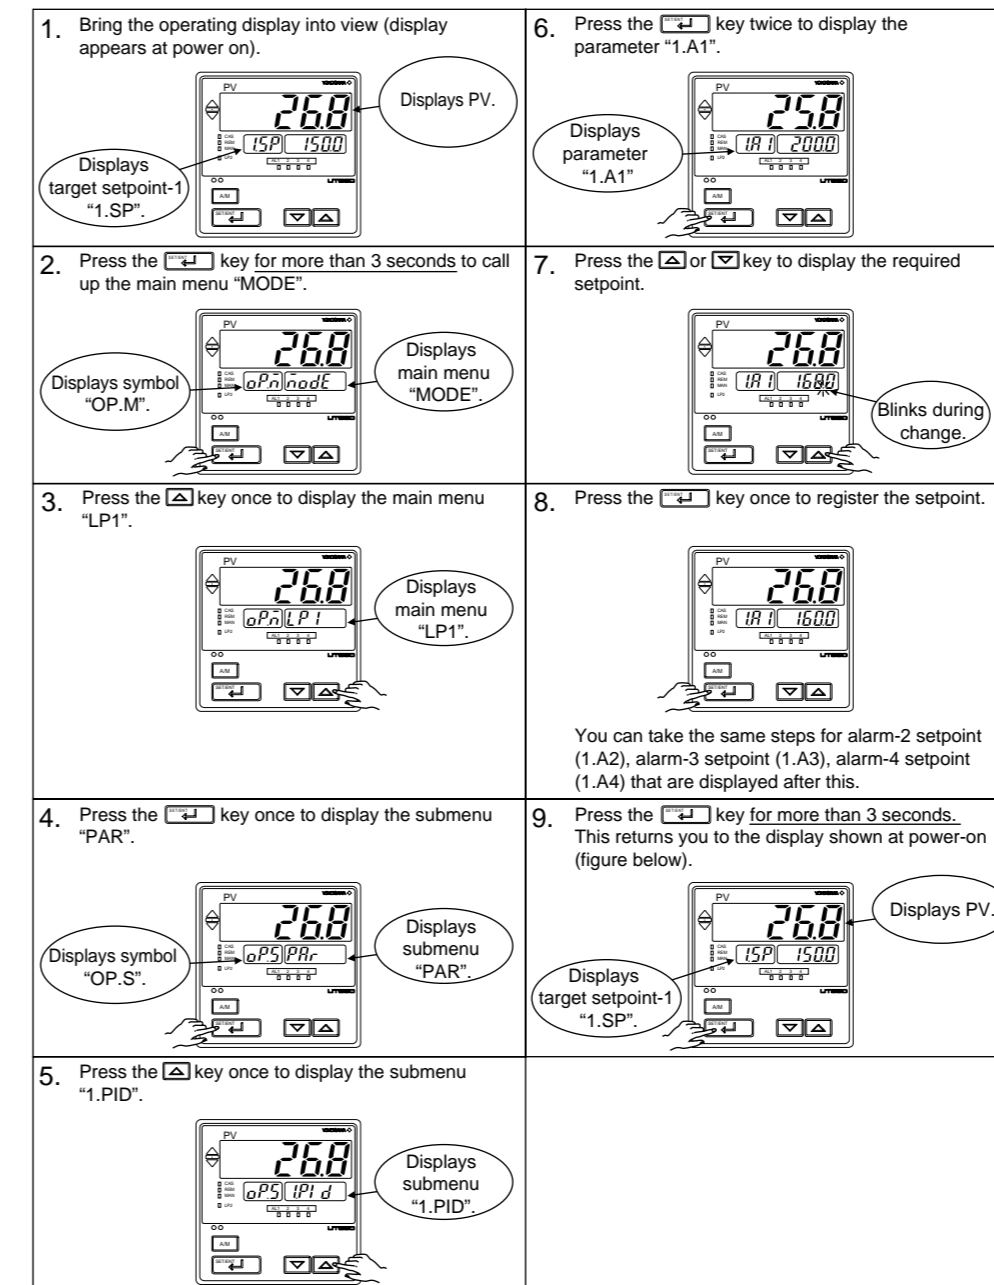


**6. Selecting Target Setpoint Numbers (SPN)**

The following operating procedure describes an example of changing a target setpoint number (SPN) from 1 to 2.

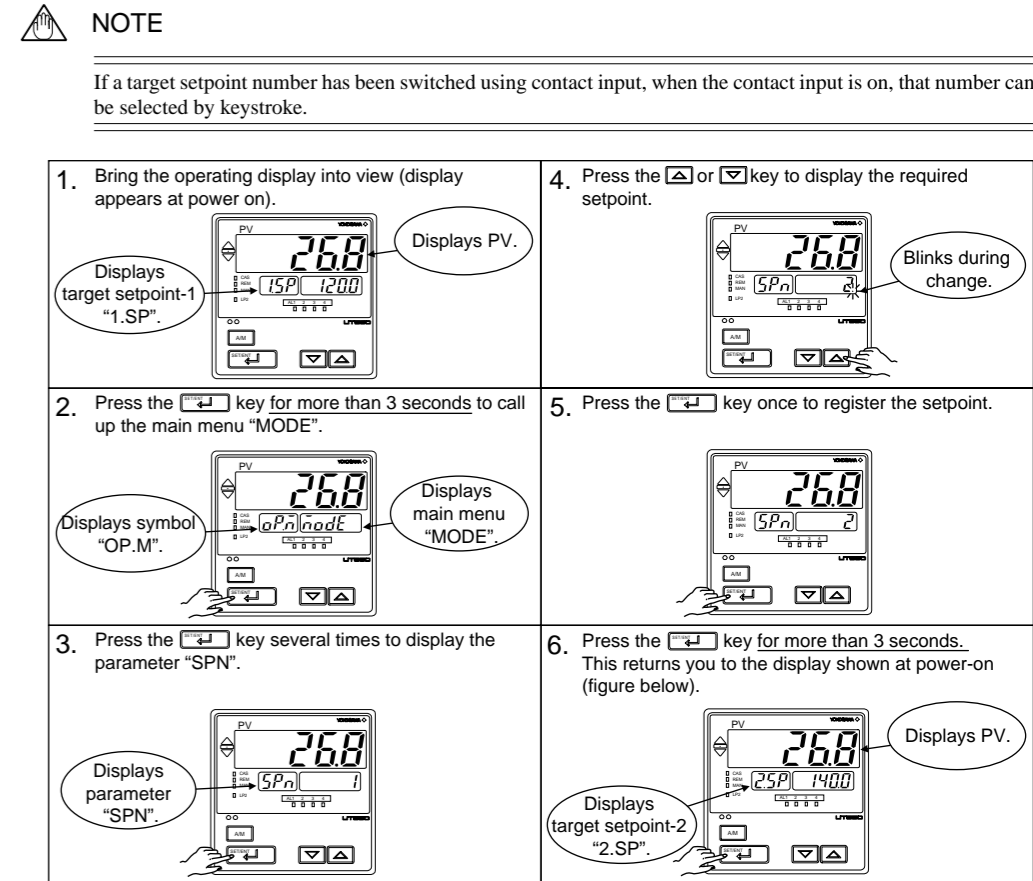


**7. Switching between Run and Stop**

Switching between the Run state (RUN) and Stop state (STOP) can be made with contact input 2 (DI2). (Factory-set default)

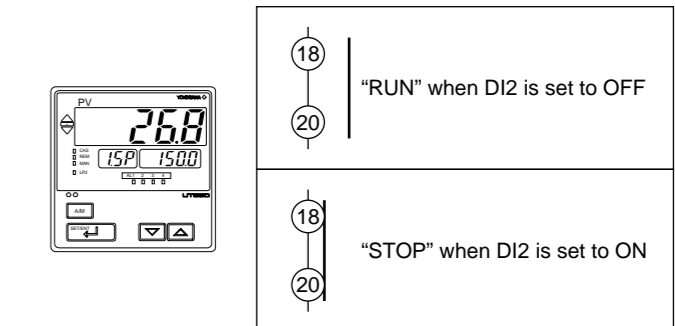

When the controller is stopped, input and outputs are as follows:

PV input	Displays the PV value.
Control output	Provides the preset output value (factory-set to 0%).
Alarm output	Turns the output on in case of an alarm.

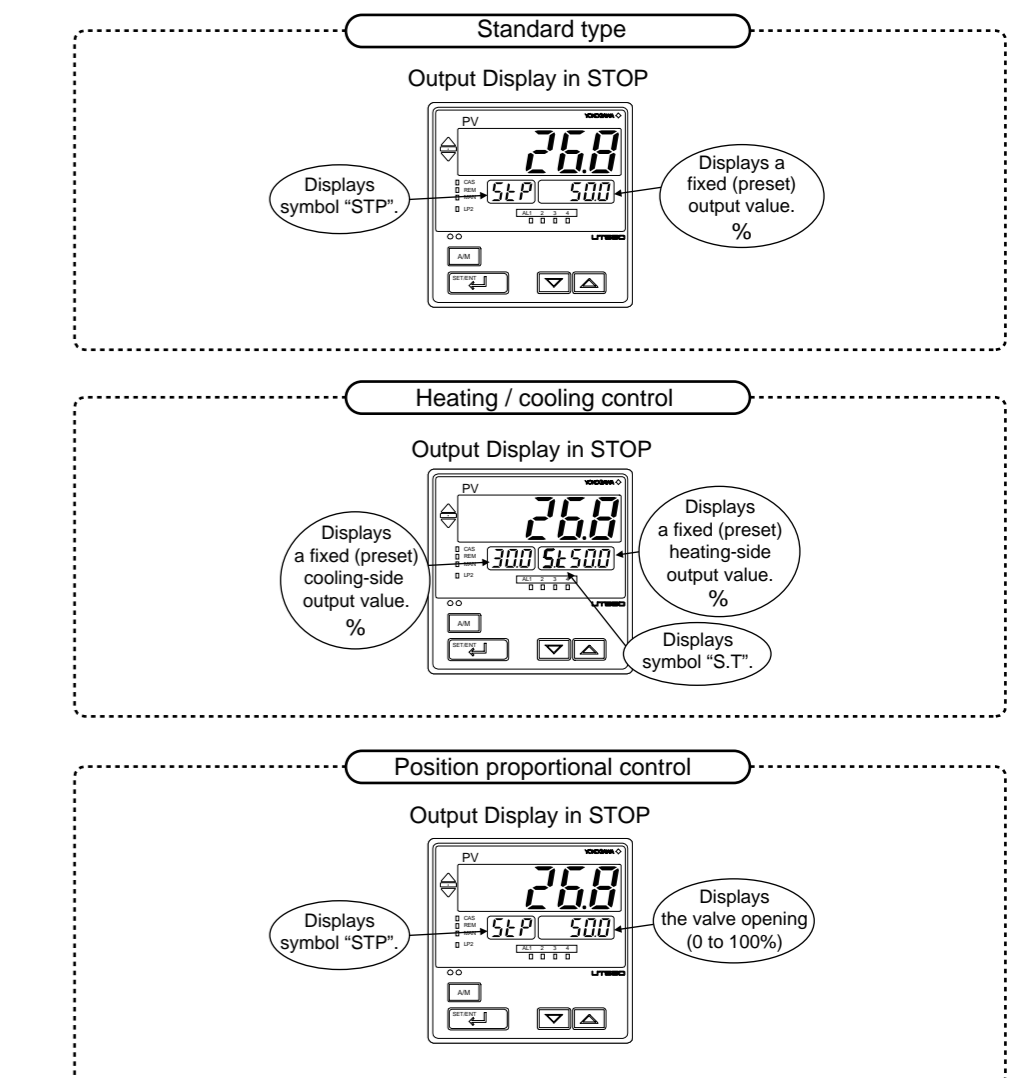


\* Switching the target setpoint number (SPN) in STOP allows any preset output value (n.PO) to be switched. The "n" is same as the target setpoint number.

## 8. Switching between AUTO and MAN



### NOTE

If AUTO and MAN have been switched using contact input, when the contact input is ON, switching between AUTO and MAN cannot be achieved by keystroke.

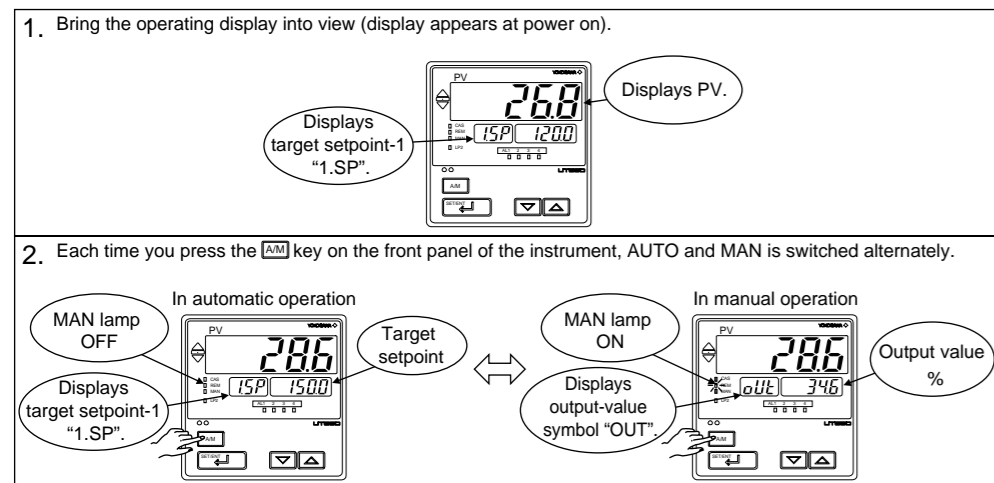


## 9. Manipulating Control Output during Manual Operation



### NOTE


Control output cannot be changed if the controller is stopped. In this case, the preset output value (operating parameter PO) will be output. In heating / cooling control, the heating-side preset output value (operating parameter PO) and cooling-side preset output value (operating parameter Oc) will be output.

A control output value is linked with a display value changed using the key. Note that the control output changes as displayed without requiring the key.

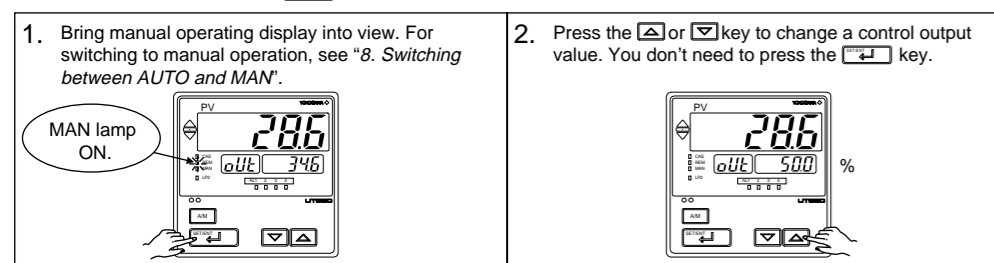

## Manipulating the Control Output during Heating/Cooling Control

Showing the Heating/Cooling OUT display.

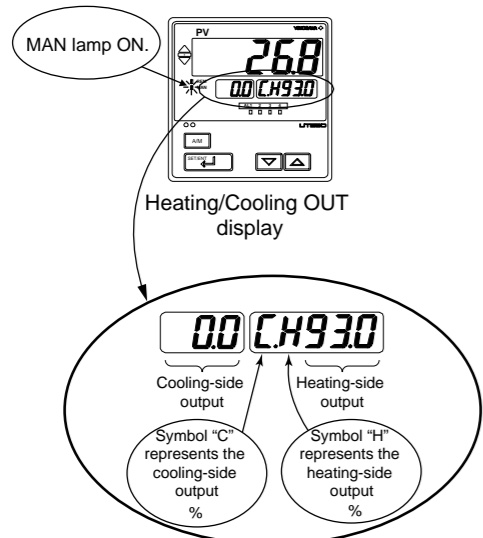


### Controller behavior and control output manipulation when the dead band is positive

The following is an example when the DB parameter is set at 12.4%. If you hold down the key with the heating-side output under manipulation (i.e., cooling-side output C = 0.0%), the heating-side output (H =) decreases.

Consequently, both the heating-side and cooling-side outputs change to 0.0%. If you keep the key held down longer, you enter the state of manipulating the cooling-side output, and its value begins to increase.


Inversely, if you hold down the key with the cooling-side output under manipulation (i.e., heating-side output H = 0.0%), the cooling-side output (C =) decreases. Consequently, both the heating-side and cooling-side outputs go to 0.0%. If you keep the key held down longer, you enter the state of manipulating the heating-side output, and its value begins to increase.

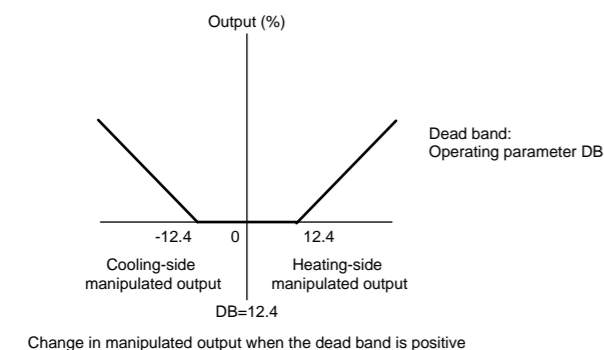

### Controller behavior and control output manipulation when the dead band is negative

The following is an example when the DB parameter is set at -12.4%.


If you hold down the key with the heating-side output under manipulation (i.e., cooling-side output C = 0.0%), the heating-side output (H =) decreases. If the output H falls below 24.8%, the cooling-side output C begins to increase from 0.0%. If you keep the key held down longer and the output C rises above 24.8%, the output H goes to 0.0% and you enter the state of manipulating the cooling-side output.

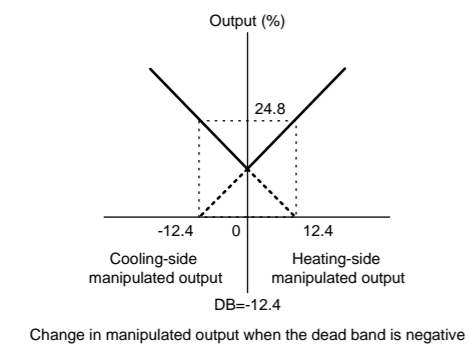

## Manipulating the Control Output during Position Proportional Control

The controller continues to provide control output as long as the key or key is being pressed.

- key: Closes the valve.
- key: Opens the valve.

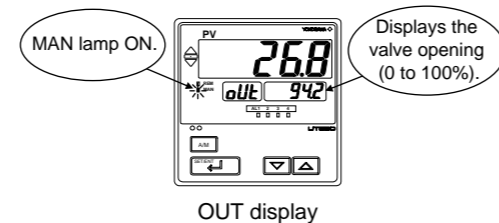



Note: Manual output is not limited to output high limit(OH) and output low limit(OL).

## 10. Switching between Remote (REM) and Local (LCL)

The following operating procedure describes an example of switching from Local (LCL) to Remote (REM). Switching between REM and LCL is possible for only controllers with remote input.


- Local: Performs control using target setpoints set in the controller.
- Remote: Performs control using external analog signals as target setpoints.

Note: The PID group number when the controller is in Remote operation is the same as the number set in the Target Setpoint Number (SPN) parameter.

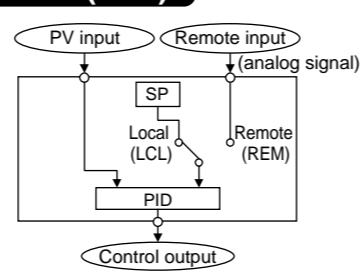

### NOTE


If Remote state is achieved by external contact input (contact input is ON), switching between REM and LCL cannot be achieved by keystroke.

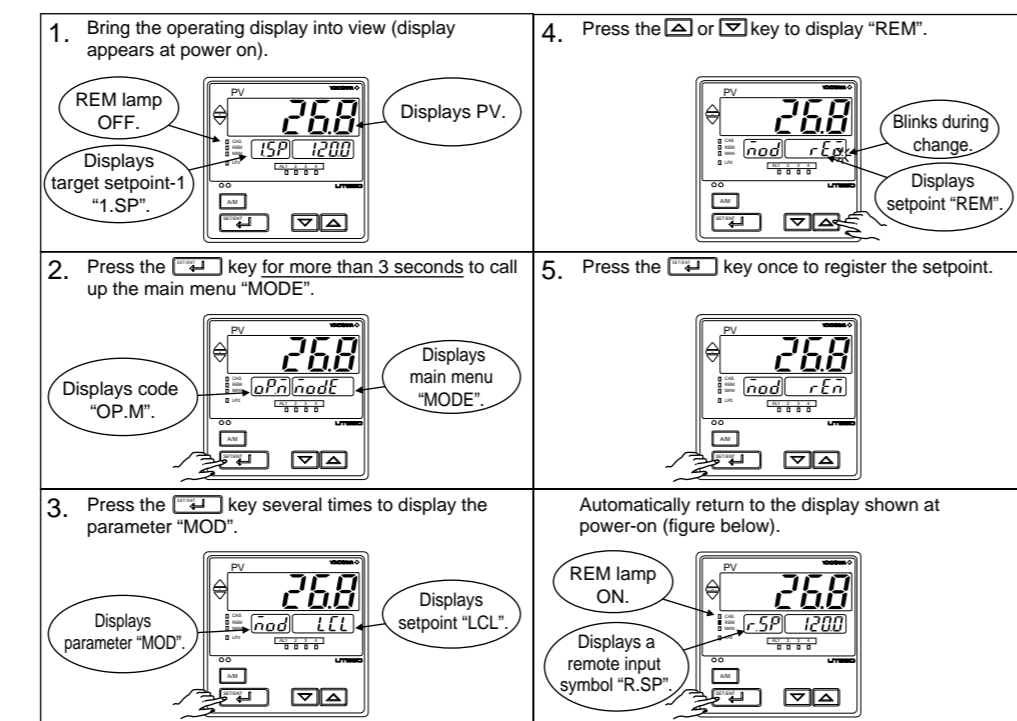

## 11. Troubleshooting

### Troubleshooting Flow

If the operating display does not appear after turning on the controller's power, follow the measures in the procedure below. If a problem appears complicated, contact our sales representative.

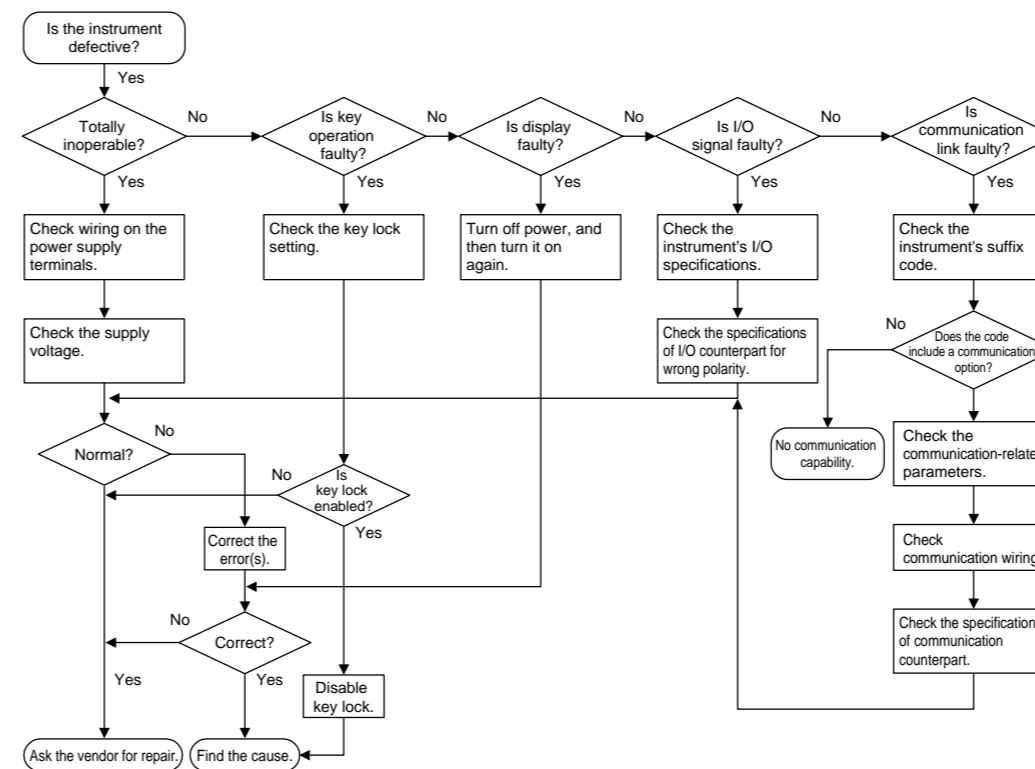

### IMPORTANT

Take note of the parameter settings when asking the vendor for repair.

### Errors at Power On

The following table shows errors that may be detected by the fault diagnosis function when the power is turned on.


Error indication (on PV display unit)	Description of error	PV	Control output	Alarm output	Retransmission output	Communication	Remedy
E000 (E000)	Faulty RAM	None	0% or less or OFF	OFF	0% or less	Stopped	Faulty Contact us for repair.
E001 (E001)	Faulty ROM	None	0% or less or OFF	OFF	0% or less	Stopped	
E002 (E002)	System data error	Undefined	Normal action (out of accuracy)	Undefined	Undefined	Normal action (out of accuracy)	
PV decimal point blinks	Faulty calibration value	Normal action (out of accuracy)	Normal action (out of accuracy)	Normal action (out of accuracy)	Normal action (out of accuracy)	Normal action (out of accuracy)	Check and set the initialized parameters.
Error code (Note) (See description below.)	Parameter error	Normal action	0% or less or OFF	Normal action	Normal action	Normal action	

Note: An error code is displayed on the setpoint display unit.

An error code is displayed in the event of an error, according to its type. An error code is a two-digit figure in which a combination of 6 bits of on and off is converted into a decimal number. The following shows the relationship between each bit and parameter to be checked for abnormality.

Bit No.	6	5	4	3	2	1	0
Parameter to be checked	Operation mode/output	Operating parameters	Setup parameters	Range data	UT mode	-	Calibration data

For example, if an error occurs with the operating parameter and calibration data, the error code will be as follows:

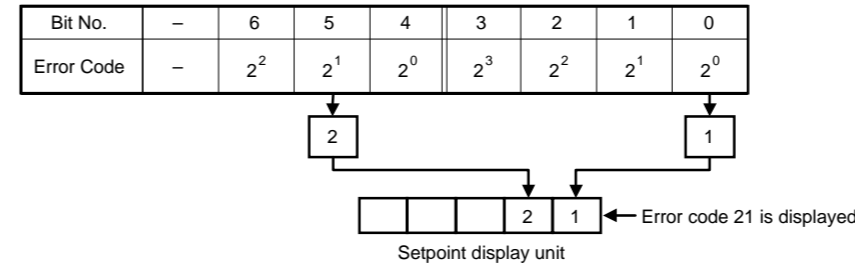

### Possible Errors during Operation

The following shows possible errors occurring during operations.

Error indication (on PV display unit)	Description of error	PV	Control output	Alarm output	Retransmission output	Communication	Remedy
Displays "RJC" and PV alternately	RJC error	Measured with RJC=OFF	Normal action				Faulty Contact us for repair.
Decimal point of item part in SP display unit blinks.	EEPROM error	Normal action					
E300 (E300)	ADC error	105%	In AUTO: Preset value output In MAN: Normal action				Check wires and sensor.
baUt (B.OUT)	PV burnout error	Dependent on the BSL parameter Up-scale: 105% Down-scale: -5%					
oHEr (OVER) or -aBEr (-OVER)	Excessive PV Out of -5 to 105%	-5% or 105%	Normal action	Normal action		Normal action	Check process.
E200 (E200)	Auto-tuning failure (Time-out)		Action with PID existing before auto-tuning				Check process. Press any key to erase error indication.
Setpoint display	Feedback resistor breakdown	Normal action	Stopped		Stopped		Check the feedback resistor.
Left end of SP display unit blinks.	Faulty communication line		Normal action		Normal action		Check wires and communication parameters, and make resetting. Recovery at normal receipt
Decimal point at right end lights.	Runaway (due to defective power or noise)	Undefined	0% or less or OFF	OFF	0% or less	Stopped	Faulty if power off/on does not reset start the unit. Contact us for repair.
All indications off	Power off	None					Check for abnormal power.

## Remedies if Power Failure Occurs during Operations

The operation status and remedies after a power failure differ with the length of power failure time:

- Instantaneous power failure of 20 ms or less: A power failure is not detected. Normal operation continues.
- Power failure of about 2 seconds or less: The following show effects caused in "settings" and "operation status."

Alarm action	Continues. Alarm with standby function will enter standby status.
Setting parameter	Set contents of each parameter are retained.
Auto-tuning	Cancelled.
Control action	Action before power failure continues.

- Power failure of more than about 2 seconds: The following show effects caused in "settings" and "operation status."

Alarm action	Continues. Alarm with standby function will enter standby status.
Setting parameter	Set contents of each parameter are retained.
Auto-tuning	Cancelled.
Control action	Differs with setting of setup parameter "R.MD" (restart mode).
R.MD setting	Control action after recovery from power failure
CONT	Continues action before power failure. (Factory-set default) For position-proportional type, when V.MD = Valve position estimating type, starts action from 0%.
MAN	Outputs preset output value (PO) as control output and continues action set before power failure in MAN mode. For position-proportional type, when V.MD = Valve position feedback type, starts action from feedback input condition at recovery from power failure. When V.MD = Valve position estimating type, starts action from 0%. For heating/cooling control, starts action from heating-side output value and cooling-side output value of 50% of control computation output.
AUTO	Outputs preset output value (PO) as control output and continues action set before power failure in AUTO mode. For position-proportional type, when V.MD = Valve position feedback type, starts action from feedback input condition at recovery from power failure. When V.MD = Valve position estimating type, starts action from 0%. For heating/cooling control, starts action from heating-side output value and cooling-side output value of 50% of control computation output.

## Troubleshooting When the Controller Fails to Operate Correctly

If your control tasks are not successful, check the preset parameters and controller wiring before concluding the controller to be defective. The following show some examples of troubleshooting you should refer to in order to avoid the possibility of other problems.

### The controller does not show the correct measured input (PV).

- The UT550/UT520 controllers have a universal input. The type of PV input can be set/changed using the parameter "INI1". At this point, the controller must be wired correctly according to the selected type of PV input. Check the wiring first if the controller fails to show the correct PV value. To do this, refer to **Initial Settings User's Manual**. With the parameters "RH1", "RL1", "DP1", "SH1" and "SL1", it is possible to scale the input signal and change its number of decimal places. Also check that these parameters are configured correctly.

### The controller does not provide any control output or the control output does not change at all.

- The UT550/UT520 controllers have a universal output. The type of control output can be set/changed using the parameter "OT1". At this point, the controller must be wired correctly according to the selected type of control output. Check the wiring first if the controller provides no control output. To do this, refer to "6. Terminal Wiring Diagrams," in **Installation User's Manual**. With the parameters "OH" and "OL", it is possible to set/change the high and low limits of control output. The control output may not change at all, however, because of restrictions on these parameters. Also check the restrictions on these parameters.

- The control output can only be changed when the controller is in the MAN mode. If the MAN lamp is off (i.e., the controller is in the AUTO mode), you cannot change the control output using key operation.


### The control output does not change soon after the target setpoint (SP) has been changed.

- If this happens, check the setpoint of the parameter "MOD". In cases where fixed-point control is selected as the PID control mode (MOD = 1), tracking based on the I-term works to prevent the control output from changing suddenly even if the target setpoint SP is varied. The control output therefore may appear to be working incorrectly at first; however it gradually adapts itself to the new target setpoint.





This manual contains a parameter map as a guideline for setting parameters.




If you are unsure of the key operation sequence, press the **key** (for more than 3 seconds). This displays a screen at power on (i.e., operating display).

Determine PV input type first. Settings herein are described in "2. Setting PV Input Type (Setting First at Power-on)", in **Initial Settings User's Manual**.

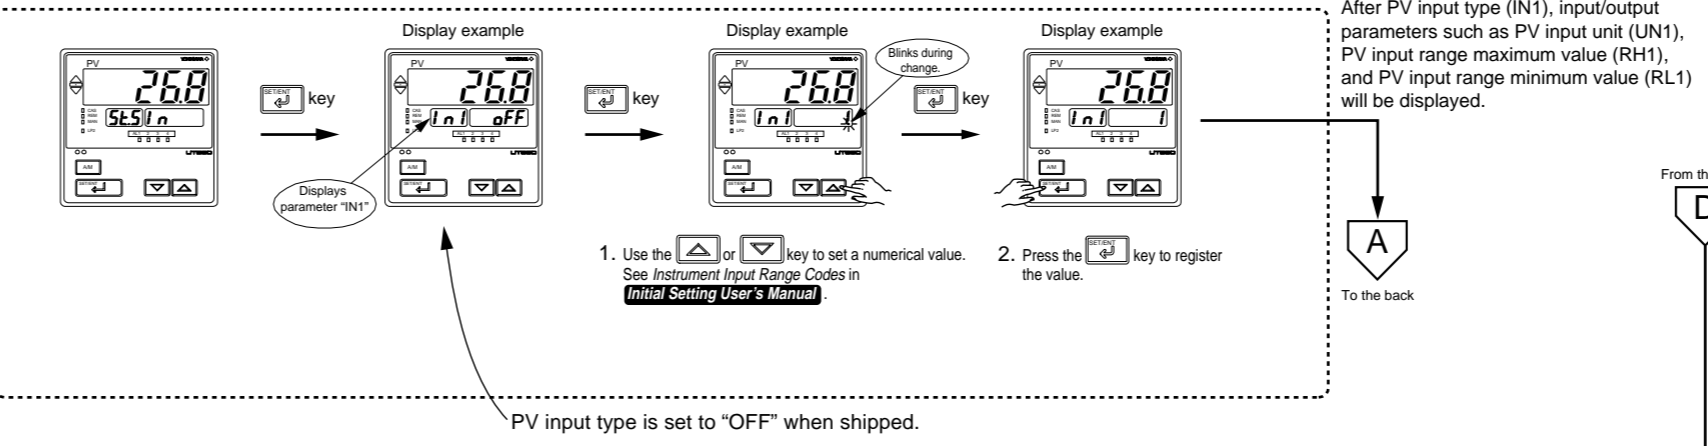

- Basic Key Operation Sequence**
- Setting display can be switched (moved) using the **key**.
  - A numerical value is changed by (1) Using the **key** or **key** to change a displayed value (decimal point blinking) and (2) Pressing the **key** to register it.
  - Pressing the **key** on an operating display (for more than 3 seconds) brings you to the operating parameter setting display.
  - Pressing the **key** on the operating parameter setting display (for more than 3 seconds) returns you to the operating display. To change from the operating parameter setting display to the operating parameter menu display, press the **key** and **key** simultaneously.
  - Pressing the **key** on the setup parameter setting display (for more than 3 seconds) returns you to the operating display. To change from the setup parameter setting display to the setup parameter menu display, press the **key** and **key** simultaneously.

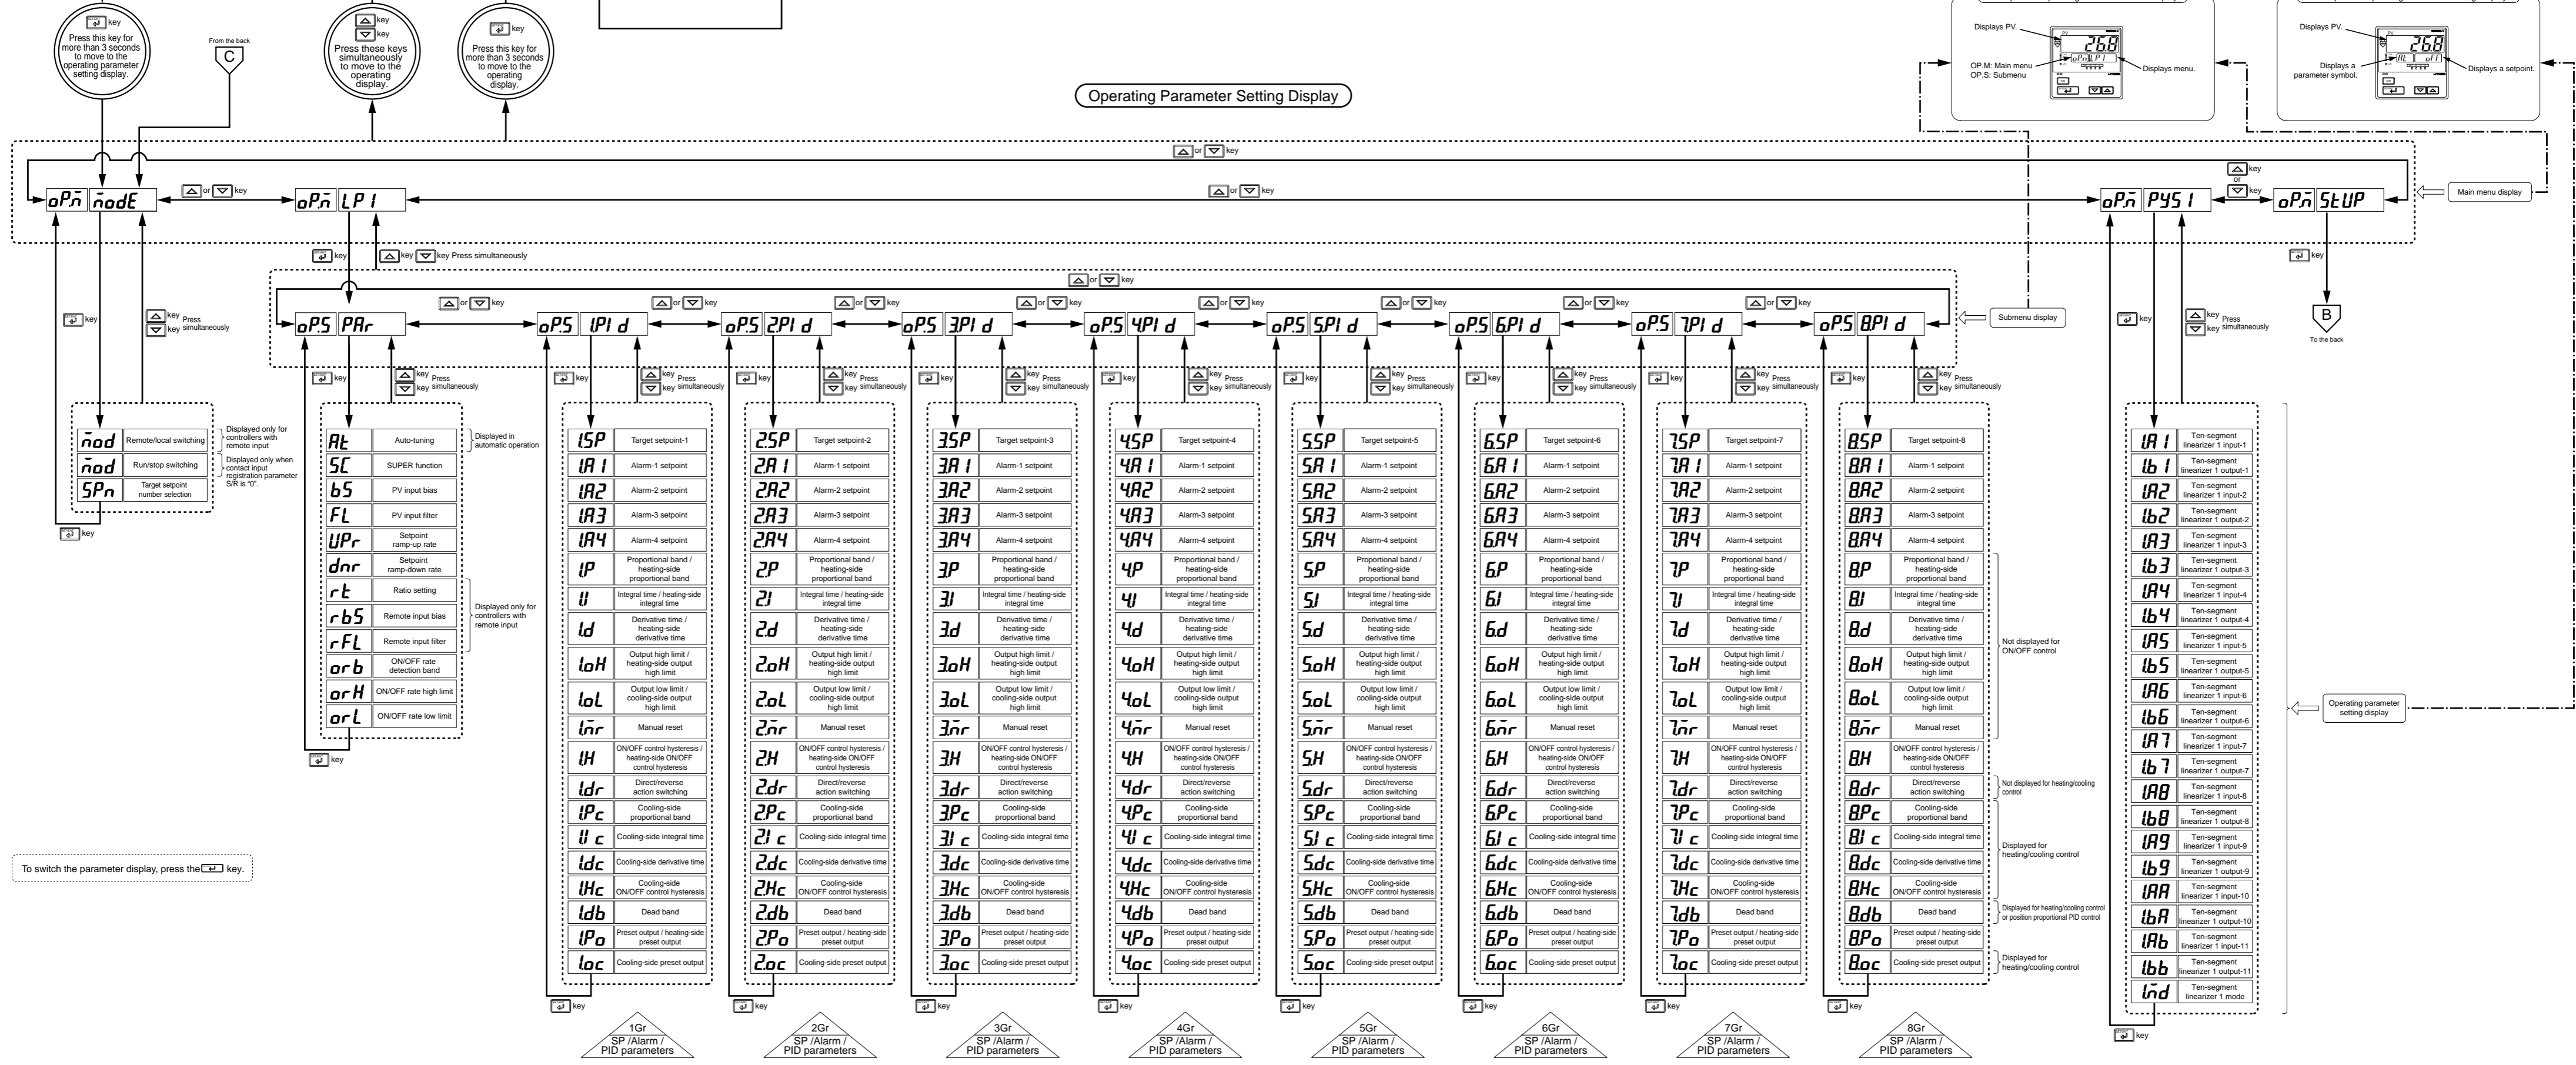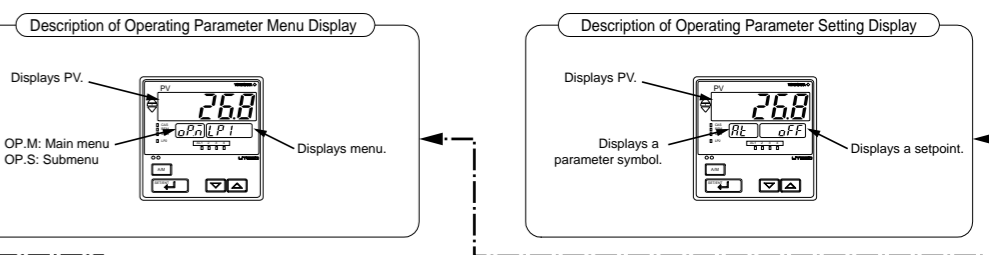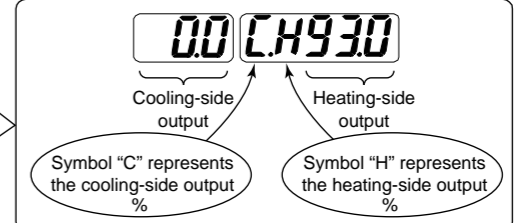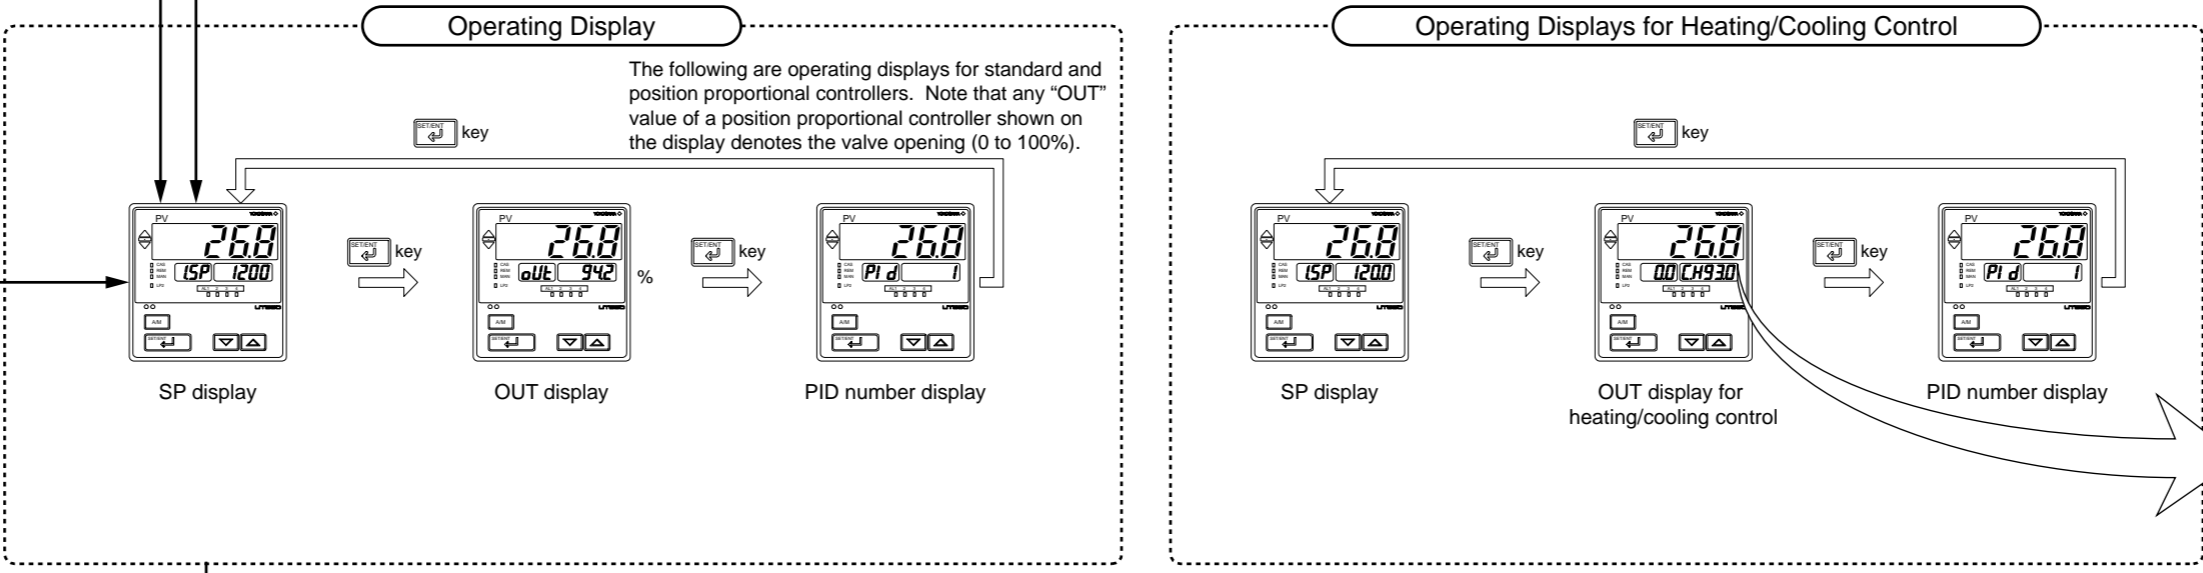

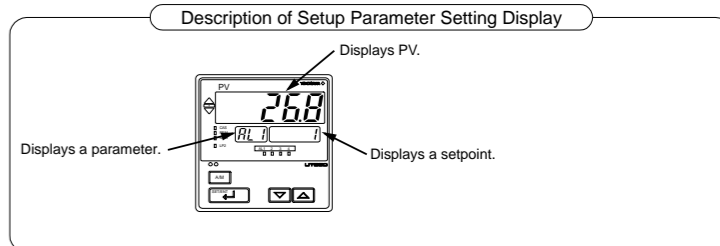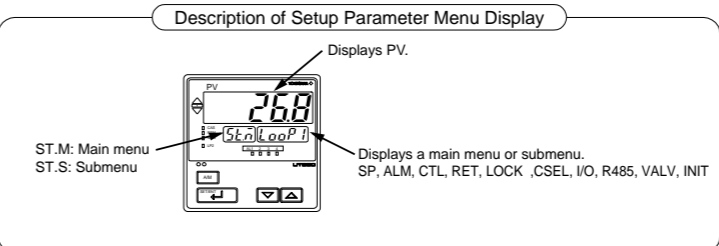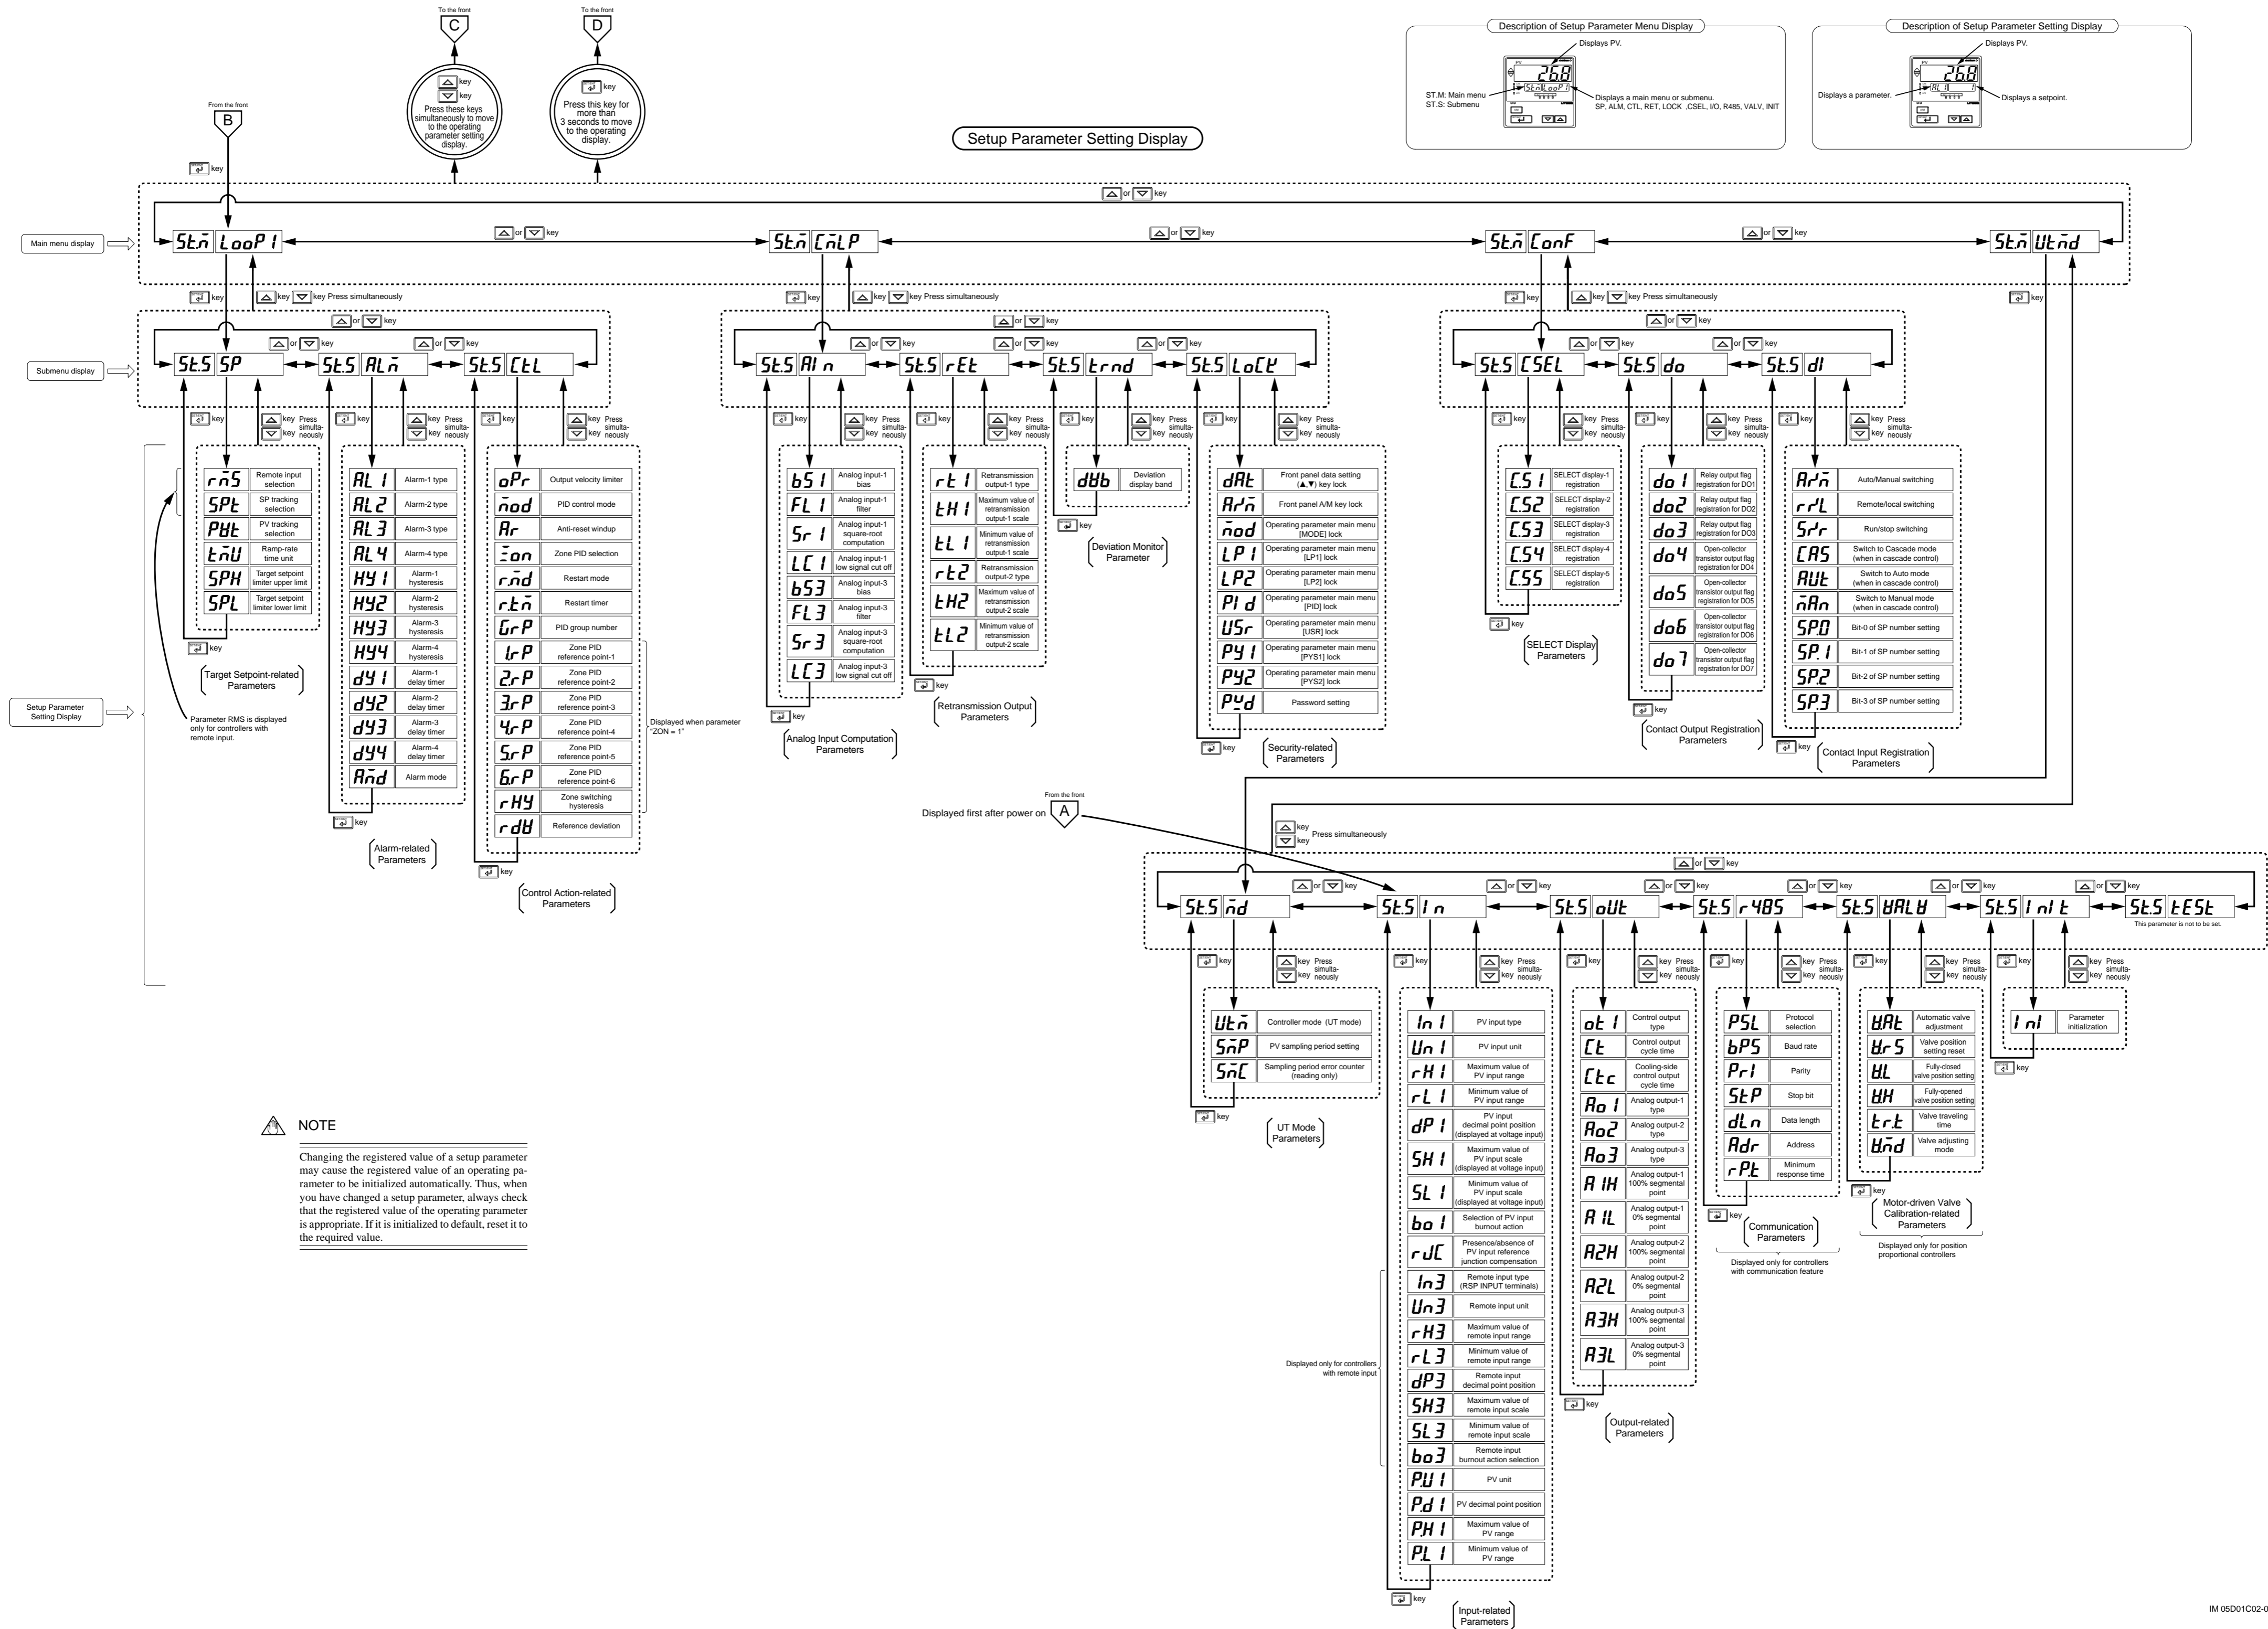

**NOTE**

Changing the registered value of a setup parameter may cause the registered value of an operating parameter to be initialized automatically. Thus, when you have changed a setup parameter, always check that the registered value of the operating parameter is appropriate. If it is initialized to default, reset it to the required value.





This manual describes the functions of parameters briefly. In addition, each parameter table has a "User Setting" column, where you can record your setpoints when setting them in the controller.

\* Parameters relating to PV or setpoints should all be set in real numbers. For example, use temperature values to define target setpoints and alarm setpoints for temperature input.

Operating Parameters

Operation Mode Parameters

Located in: Main menu = MODE (MODE)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Includes parameters like Remote/Local switching (LCL), Run/Stop switching (RUN), and Target setpoint number selection (SPn).

Operation-related Parameters

Located in: Main menu = LPI (LP1); Submenu = PAR (PAR)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Includes parameters like Auto-tuning (AT), SUPER function (SC), PV input bias (BS), PV input filter (FL), Setpoint ramp-up-rate (UPr), Setpoint ramp-down-rate (dnr), Ratio setting (RT), Remote input bias (RBS), Remote input filter (rFL), ON/OFF rate detection band (orb), ON/OFF rate high limit (orH), ON/OFF rate low limit (orL).

Setpoint-, Alarm- and PID-related Parameters



Located in: Main menu = LPI (LP1); Submenu = IPI d (1.PID)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Includes Target setpoint-1 (1.SP).

\* The "User Setting" column in the table below is provided for the customer to record setpoints.

\* The column "Target Item in CD-ROM" in the table below provides references from User's Manual (Reference) (CD-ROM Version) which describes items in more detail and items that are not contained in this manual.

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Includes parameters for Alarm-1 to Alarm-4 setpoints (1A1-1A4), Proportional band (1.P), Integral time (1.I), Derivative time (1.D), Output high limit (1.OH), Output low limit (1.OL), Manual reset (1.MR), ON/OFF control hysteresis (1.H), Direct/reverse action switching (1.DR), Cooling-side proportional band (1.Pc), Cooling-side integral time (1.Ic), Cooling-side derivative time (1.Dc), Cooling-side ON/OFF control hysteresis (1.Hc), Dead band (1.Db), Preset output/Heating-side preset output (1.Po), Cooling-side preset output (1.Oc).

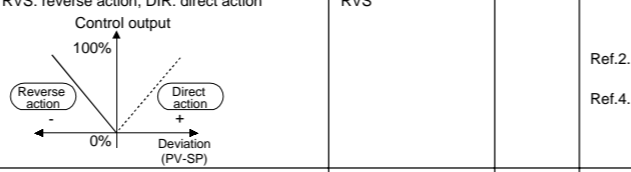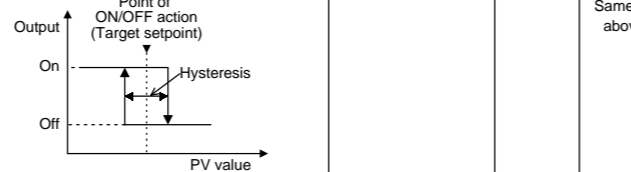

If you are using two or more groups of setpoint, alarm and PID parameters, use the following table to record their values.

Table with 8 columns: Parameter, n=2, n=3, n=4, n=5, n=6, n=7, n=8. Lists parameters for multiple setpoints, alarms, and PID groups.

Ten-segment Linearizer1 Parameters

Located in: Main menu = PYS1 (PYS1)

Ten-segment linearizer biasing (factory-set default) Ten-segment linearizer approximation

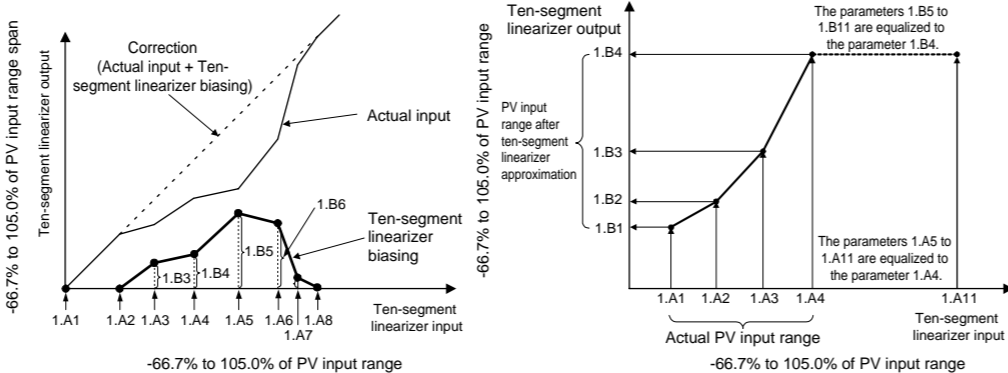


Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Lists ten-segment linearizer parameters from 1A1 to 1A11 and 1B1 to 1B11.

Setup Parameters

Target Setpoint-related Parameters

Located in: Main menu = LOOP1 (LOOP1); Submenu = SP (SP)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Includes Remote input selection (RSP), SP tracking selection (SPt), PV tracking selection (Pvt), Ramp-rate time unit setting (TNU), Target setpoint limiter upper limit (SPH), Target setpoint limiter lower limit (SPL).

Alarm-related Parameters

Located in: Main menu = ALn (ALM)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Lists alarm parameters AL1 to AL4 and HY1 to HY4.

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Lists alarm delay timer parameters DY1 to DY4 and Alarm mode (RnD).

Control Action-related Parameters

Located in: Main menu = LOOP1 (LOOP1); Submenu = CTL (CTL)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Includes Output velocity limiter (OPr), PID control mode (nod), Anti-reset windup (AR), Zone PID selection (zon), Restart mode (r.nD), Restart timer (r.tn), PID group number (GrP), Zone PID reference points (1.RP to 6.RP), Zone switching hysteresis (rHy), Reference deviation (rdB).

Analog Input Computation Parameters

Located in: Main menu = ANLP (CMLP); Submenu = AIn (AIN)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Lists analog input computation parameters like bias (BS1), filter (FL1, FL3), square-root computation (Sr1, Sr3), and signal cutoff (LC1, LC3).

Retransmission Output Parameters

Located in: Main menu = CnLP (CMLP) ; Submenu = rEt (RET)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Rows include retransmission output-1 type, TH1, TL1, retransmission output-2 type, TH2, TL2.

Deviation Monitor Parameters

Located in: Main menu = CnLP (CMLP) ; Submenu = tRNd (TRND)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Row includes deviation display band.

Security-related Parameters

Located in: Main menu = CnLP (CMLP) ; Submenu = LoLk (LOCK)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Rows include front panel data setting, A/M key lock, operating parameter main menu lock, LP1, LP2, PID lock, USR, PY1, PY2, PWD.

SELECT Display Parameters

Located in: Main menu = Conf (CONF) ; Submenu = CSEL (CSEL)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Rows include SELECT display-1 to 5 registration.

Contact Output Registration Parameters

Located in: Main menu = Conf (CONF) ; Submenu = do (DO)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Rows include relay output flag registration for DO1 to DO4.

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Rows include Open-collector transistor output flag registration for DO5 to DO7.

Contact Input Registration Parameters

Located in: Main menu = Conf (CONF) ; Submenu = di (DI)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Rows include Auto/Manual switching, Remote/Local switching, Run/Stop switching, CAS, AUT, MAN, SP0 to SP3.

UT Mode Parameters

Located in: Main menu = Utnd (UTMD) ; Submenu = nd (MD)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Rows include Controller mode (UTM), PV sampling period setting (SMP), Sampling period error counter (SMC).

Input-related Parameters

Located in: Main menu = Utnd (UTMD) ; Submenu = In (IN)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Rows include IN1, UN1, RH1, RL1, DP1, SH1, SL1, BO1, RJC, IN3, UN3, RH3, RL3, DP3, SH3, SL3, BO3.

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Rows include PV unit (PU1), PV decimal point position (PD1), PH1, PL1.

Output-related Parameters


Located in: Main menu = Utnd (UTMD) ; Submenu = OUT (OUT)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Rows include OT1, CT, Ctc, AO1 to AO3, AH, AL, A2H, A2L, A3H, A3L.

Performing Split Computations

V-mode Output


The following explains an example of letting "Analog OUTPUT-1 (terminals ④ and ⑤)" and "Analog OUTPUT-3 (terminals ② and ③)" present the V-mode characteristics of split computations. [1]Set the Control Output Type (OT1) parameter to "2". [2]Set the Retransmission Output 1 (RT1) parameter to "3". [3]Set the Analog Output-1 100% Segmental Point (A1H) parameter to "100%". [4]Set the Analog Output-1 0% Segmental Point (A1L) parameter to "25%". [5]Set the Analog Output-3 100% Segmental Point (A3H) parameter to "0%". [6]Set the Analog Output-3 0% Segmental Point (A3L) parameter to "75%".

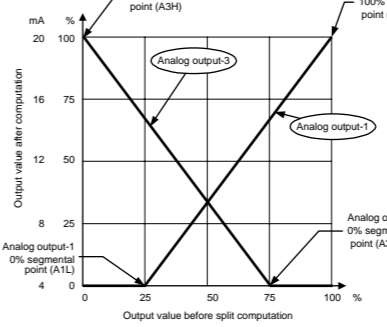

The figure on the right shows an example where both analog outputs-1 and 3 are set to the current signal of 4 to 20 mA DC. The type of output signal can be determined separately for each of the analog outputs listed above, using the following three parameters.

Parallel-mode Output

The following explains an example of letting "Analog OUTPUT-1 (terminals ④ and ⑤)" and "Analog OUTPUT-3 (terminals ② and ③)" present the parallel-mode characteristics of split computations. [1]Set the Control Output Type (OT1) parameter to "2". [2]Set the Retransmission Output 1 (RT1) parameter to "3". [3]Set the Analog Output-1 100% Segmental Point (A1H) parameter to "100%". [4]Set the Analog Output-1 0% Segmental Point (A1L) parameter to "25%". [5]Set the Analog Output-3 100% Segmental Point (A3H) parameter to "0%". [6]Set the Analog Output-3 0% Segmental Point (A3L) parameter to "0%".

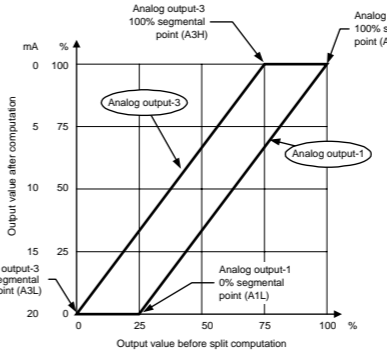

The figure on the right shows an example where both analog outputs-1 and 3 are set to the current signal of 20 to 0 mA DC. The type of output signal can be determined separately for each of the analog outputs listed above, using the following three parameters. Analog output-1: Analog output-1 type (AO1) Analog output-2: Analog output-2 type (AO2) Analog output-3: Analog output-3 type (AO3)

Communication Parameters

Located in: Main menu = Utnd (UTMD) ; Submenu = r485 (R485)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Rows include Protocol selection (PSL), Baud rate (BPS), Parity (PrI), Stop bit (StP), Data length (dLn), Address (Adr), Minimum response time (rPt).

Motor-driven Value Calibration-related Parameters (Displayed for Position Proportional Controllers)

Located in: Main menu = Utnd (UTMD) ; Submenu = VALV (VALV)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Rows include Valve auto tuning (VAL), Valve position setting reset (VR5), Fully-closed valve position setting (VL), Fully-opened valve position setting (VH), Valve traveling time (trt), Valve adjusting mode (VMD).

Parameter-initializing Parameters


Located in: Main menu = Utnd (UTMD) ; Submenu = InIt (INIT)

Table with 6 columns: Parameter Symbol, Name of Parameter, Setting Range and Description, Initial Value, User Setting, Target Item in CD-ROM. Row includes Parameter initialization (INI).

Tips about Heating/Cooling Control (for heating/cooling controllers only)

In heating/cooling control, the controller outputs the result of computation after splitting it into heating-purpose and cooling-purpose signals. In addition, the controller can perform PID control or ON/OFF control on the heating and cooling sides separately. When performing ON/OFF control, set the proportional band to "0". The controller splits the result of computation (0 to 100%) into heating-side and cooling-side signals, as described below. 0% to 50% of the computation result is presented as a 0% to 100% cooling-side output. 50% to 100% of the computation result is presented as a 0% to 100% heating-side output.

Heating/cooling control provides two methods in which either none of the heating- and cooling-side outputs are presented or both of the heating- and cooling-side outputs are presented, as shown in the following figures.

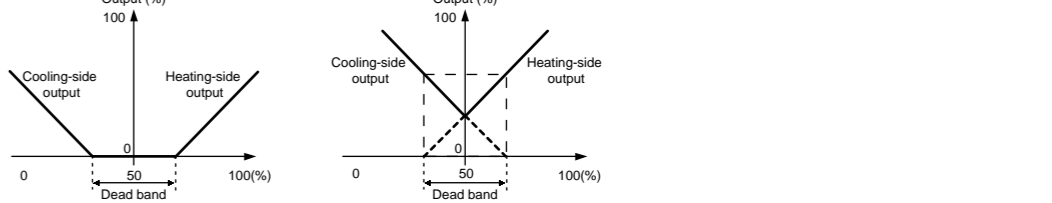

Precautions in Heating/Cooling Control

- Keep the ratio of the heating-side proportional band (Pc) to the cooling-side proportional band (Pc) equal to or below 5. If neither the heating-side nor the cooling-side is performing ON/OFF control, setting the integral time (I or Ic) of one side to "0" results in the Integral Time parameters of both sides being set to "OFF", irrespective of the integral time setting of the other side.

Tips about Position Proportional Control (for position proportional controllers only)

Position proportional control can be of either feedback type or estimating type. In feedback-type position proportional control, the controller obtains a valve position signal from a feedback slide-wire resistor attached to a valve. In estimating-type position proportional control, you set the operating time required for a valve to change from a fully-closed position to the fully-open position beforehand. With the preset operating time, the controller controls the valve by estimating its position. In the case of estimating-type position proportional control, there is no need for feedback input wiring. Feedback-type position proportional control is superior to the estimating type in terms of control performance. When in manual operation, you can directly manipulate the controller's output terminals. Pressing the [ ] key sends the valve into opening motion while pressing the [ ] key sends it into closing motion. The figure on the right shows a schematic representation of a loop configured for position proportional control.

