

**TM 55-1520-240-23-4**

---

**TECHNICAL MANUAL**

**AVIATION UNIT AND AVIATION  
INTERMEDIATE MAINTENANCE MANUAL**

**CH-47D HELICOPTER**

---

**HEADQUARTERS, DEPARTMENT OF THE ARMY**

**10 MAY 1983**

# URGENT

TM 55-1520-240-23-4  
C 48

CHANGE

NO. 48

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 15 FEBRUARY 2002

Aviation Unit and Aviation Intermediate  
Maintenance Manual

## CH-47D HELICOPTER

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TM 55-1520-240-23-4, 10 May 1983 is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

### Remove pages

A through F  
5-94.2.1/(5-94.2.2 blank)  
5-450.4.1 through 5-450.4.8

### Insert pages


A through F  
5-94.2.1 and 5-94.2.2  
5-450.4.1 through 5-450.4.8

2. Retain this sheet in front of the manual for reference purposes.

**By Order of the Secretary of the Army:**

**ERIC K. SHINSEKI**  
*General, United States Army*  
*Chief of Staff*

Official:

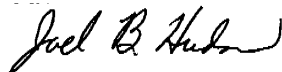

**JOEL B. HUDSON**  
*Administrative Assistant to the*  
*Secretary of the Army*  
0204205

DISTRIBUTION:

To be distributed in accordance with Initial Distribution Number (IDN) 311199, requirements for TM 55-1520-240-23-4.



# URGENT

TM 55-1520-240-23-4  
C 47

CHANGE

NO. 47

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 30 NOVEMBER 2001

Aviation Unit and Aviation Intermediate  
Maintenance Manual

## CH-47D HELICOPTER

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TM 55-1520-240-23-4, 10 May 1983 is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

### Remove pages

A through F  
5-94.2.1/(5-94.2.2 blank)  
5-154.3/(5-154.4 blank)  
5-155 through 158


### Insert pages

A through F  
5-94.2.1/(5-94.2.2 blank)  
5-154.3 and 5-154.4  
5-155 through 5-158

2. Retain this sheet in front of the manual for reference purposes.

**By Order of the Secretary of the Army:**

Official:

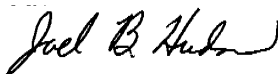  
**JOEL B. HUDSON**  
Administrative Assistant to the  
Secretary of the Army  
0133004

**ERIC K. SHINSEKI**  
General, United States Army  
Chief of Staff

DISTRIBUTION:

To be distributed in accordance with Initial Distribution Number (IDN) 311199, requirements for TM 55-1520-240-23-4.

# URGENT

TM 55-1520-240-23-4  
C 46

CHANGE

NO. 46

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 1 OCTOBER 2001

Aviation Unit and Aviation Intermediate  
Maintenance Manual

## CH-47D HELICOPTER

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TM 55-1520-240-23-4, 10 May 1983 is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

**Remove pages**

A through F  
5-375 through 5-378  
5-399 and 5-400


**Insert pages**

A through F  
5-375 through 5-378  
5-399 and 5-400

2. Retain this sheet in front of the manual for reference purposes.

By Order of the Secretary of the Army:

Official:

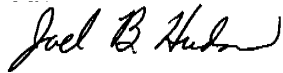

**JOEL B. HUDSON**  
Administrative Assistant to the  
Secretary of the Army  
0127002

**ERIC K. SHINSEKI**  
General, United States Army  
Chief of Staff

DISTRIBUTION:

To be distributed in accordance with Initial Distribution Number (IDN) 311199, requirements for TM 55-1520-240-23-4.

# URGENT

TM 55-1520-240-23-4  
C 45

CHANGE

NO. 45

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 15 MAY 2001

Aviation Unit and Aviation Intermediate  
Maintenance Manual

## CH-47D HELICOPTER

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TM 55-1520-240-23-4, 10 May 1983 is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

**Remove pages**

A through F  
5-167 and 5-168


**Insert pages**

A through F  
5-167 and 5-168

2. Retain this sheet in front of the manual for reference purposes.

**ERIC K. SHINSEKI**  
*General, United States Army*  
*Chief of Staff*

OFFICIAL:

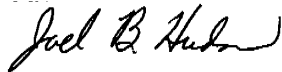

**JOEL B. HUDSON**  
*Administrative Assistant to the*  
*Secretary of the Army*

0112401

DISTRIBUTION

To be distributed in accordance with Initial Distribution Number (IDN) 311199, requirements for TM 55-1520-240-23-4.

# URGENT

TM 55-1520-240-23-4  
C 44

CHANGE

NO. 44

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 2 APRIL 2001

Aviation Unit and Aviation Intermediate  
Maintenance Manual

## CH-47D HELICOPTER

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TM 55-1520-240-23-4, 10 May 1983 is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

### Remove pages

A through F  
5-49 and 5-50  
5-50.1/(5-50.2 blank)  
5-167 through 5-170


### Insert pages

A through F  
5-49 and 5-50  
5-50.1 and 5-50.2  
5-167 through 5-170

2. Retain this sheet in front of the manual for reference purposes.

**ERIC K. SHINSEKI**  
*General, United States Army*  
*Chief of Staff*

OFFICIAL:

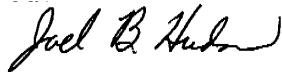

**JOEL B. HUDSON**  
*Administrative Assistant to the*  
*Secretary of the Army*

0109304

### DISTRIBUTION

To be distributed in accordance with Initial Distribution Number (IDN) 311199, requirements for TM 55-1520-240-23-4.

# URGENT

TM 55-1520-240-23-4  
C 43

CHANGE

NO. 43

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 1 MARCH 2001

Aviation Unit and Aviation Intermediate  
Maintenance Manual

## CH-47D HELICOPTER

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TM 55-1520-240-23-4, 10 May 1983 is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

**Remove pages**

A through F  
i and ii  
5-354.1 and 5-354.2

**Insert pages**


A through F  
i and ii  
5-354.1 and 5-354.2

2. Retain this sheet in front of the manual for reference purposes.

By Order of the Secretary of the Army:

**ERIC K. SHINSEKI**  
*General, United States Army*  
*Chief of Staff*

OFFICIAL:

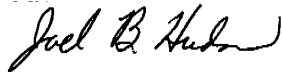

**JOEL B. HUDSON**  
*Administrative Assistant to the*  
*Secretary of the Army*

0105702

DISTRIBUTION

To be distributed in accordance with Initial Distribution Number (IDN) 311199, requirements for TM 55-1520-240-23-4.



# URGENT

TM 55-1520-240-23-4  
C42

CHANGE

NO. 42

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 1 February 2001

Aviation Unit and Aviation Intermediate  
Maintenance Manual

## CH-47D HELICOPTER

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TM 55-1520-240-23-4, 10 May 1983 is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

### Remove pages

A through F  
5-31 and 5-32  
5-47 and 5-48  
5-91 and 5-92  
5-167 and 5-168  
5-435 through 5-438  
- - -  
5-445 and 5-446  
5-449 and 5-450  
5-450.1 and 5-450.4  
- - -

### Insert pages


A through F  
5-31 and 5-32  
5-47 and 5-48  
5-91 and 5-92  
5-167 and 5-168  
5-435 through 5-438  
5-438.1 and 5-438.2  
5-445 and 5-446  
5-449 and 5-450  
5-450.1 through 5-450.4  
5-450.4.1 through 5-450.4.10

2. Retain this sheet in front of the manual for reference purposes.

By Order of the Secretary of the Army:

**ERIC K. SHINSEKI**  
*General, United States Army*  
*Chief of Staff*

OFFICIAL:

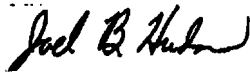

JOEL B. HUDSON  
*Administrative Assistant to the*  
*Secretary of the Army*  
0102208

DISTRIBUTION:

To be distributed in accordance with Initial Distribution Number (IDN) 311199, requirements for  
TM 55-1520-240-23-4

# URGENT

TM 55-1520-240-23-4  
C 41

CHANGE

NO. 41

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 1 NOVEMBER 2000

Aviation Unit and Aviation Intermediate  
Maintenance Manual

## CH-47D HELICOPTER

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TM 55-1520-240-23-4, 10 May 1983 is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

### Remove pages

A through F  
5-429 and 5-430  
5-471 and 5-472

### Insert pages

A through F  
5-429 and 5-430  
5-471 and 5-472


2. Retain this sheet in front of the manual for reference purposes.

TM 55-1520-240-23-4  
C 41

**By Order of the Secretary of the Army:**

**Official:**

ERIC K. SHINSEKI  
*General, United States Army*  
*Chief of Staff*

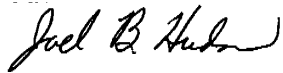

JOEL B. HUDSON  
*Administrative Assistant to the*  
*Secretary of the Army*  
0030502

**DISTRIBUTION:**

To be distributed in accordance with Initial Distribution Number (IDN) 311199, requirements for TM 55-1520-240-23-4.

# URGENT

TM 55-1520-240-23-4  
C 40

CHANGE

NO. 40

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 8 AUGUST 2000

## Aviation Unit and Aviation Intermediate Maintenance Manual

### CH-47D HELICOPTER

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TM 55-1520-240-23-4, 10 May 1983 is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

#### Remove pages

A through F  
5-29 and 5-30  
5-47 and 5-48  
5-154.3/(5-154.4 blank)  
5-159 and 5-160

#### Insert pages

A through F  
5-29 and 5-30  
5-47 and 5-48  
5-154.3/(5-154.4 blank)  
5-159 and 5-160

2. Retain this sheet in front of the manual for reference purposes.

**By Order of the Secretary of the Army:**

OFFICIAL:

JOEL B. HUDSON  
*Administrative Assistant to the  
Secretary of the Army*  
0021304

ERIC K. SHINSEKI  
*General, United States Army  
Chief of Staff*

DISTRIBUTION:

To be distributed in accordance with Initial Distribution Number (IDN) 311199, requirements for  
TM 55-1520-240-23-4.



# URGENT

TM 55-1520-240-23-4  
C 39

CHANGE

NO. 39

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 15 JUNE 2000

## Aviation Unit and Aviation Intermediate Maintenance Manual

### CH-47D HELICOPTER

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TM 55-1520-240-23-4, 10 May 1983 is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

#### Remove pages

A through F  
5-142.1 and 5-142.2  
5-159 and 5-160

#### Insert pages

A through F  
5-142.1 and 5-142.2  
5-159 and 5-160

2. Retain this sheet in front of the manual for reference purposes.

**By Order of the Secretary of the Army:**

Official:

JOEL B. HUDSON  
*Administrative Assistant to the  
Secretary of the Army*  
0015112

ERIC K. SHINSEKI  
*General, United States Army  
Chief of Staff*

DISTRIBUTION:

To be distributed in accordance with Initial Distribution Number (IDN) 311199, requirements for  
TM 55-1520-240-23-4.



# URGENT

TM 55-1520-240-23-4  
C 38

CHANGE

NO. 38

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 10 MARCH 1999

Aviation Unit and Aviation Intermediate  
Maintenance Manual

## CH-47D HELICOPTER

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TM 55-1520-240-23-4, 10 May 1983 is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

### Remove pages

—  
i and ii  
5-329 and 5-330  
5-333 and 5-334  
5-391/(5-392 blank)

### Insert pages

A through F  
i and ii  
5-329 and 5-330  
5-333 and 5-334  
5-391/(5-392 blank)

2. Retain this sheet in front of the manual for reference purposes.

By Order of the Secretary of the Army:

Official:

  
JOEL B. HUDSON

Administrative Assistant to the  
Secretary of the Army

05299

DENNIS J. REIMER  
General, United States Army  
Chief of Staff

DISTRIBUTION:

To be distributed in accordance with Initial Distribution Number (IDN) 311199, requirements for  
TM 55-1520-240-23-4.







CHANGE  
NO. 37

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 15 March 1997

Aviation Unit and Aviation Intermediate  
Maintenance Manual

**CH-47D HELICOPTER**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

i and ii  
5-236.6.1 and 5-236.6.2  
5-236.11 and 5-236.12  
5-237 and 5-238  
5-247 and 5-248  
5-257 and 5-258  
5-258.9/(5-258.10 blank)  
5-271 and 5-272  
5-282.7 and 5-282.8  
5-292.1 and 5-292.2  
5-292.7 and 5-292.8  
5-293 and 5-294  
5-306.4.5 and 5-306.4.6  
5-306.6.1 and 5-306.6.2  
5-309 and 5-310  
5-310.17 and 5-310.18  
5-311 and 5-312  
5-372.3 and 5-372.4  
5-372.5/(5-372.6 blank)  
---  
5-373 through 5-378  
---  
5-383 and 5-384  
5-385 and 5-386  
5-387 and 5-388

Insert pages

i and ii  
5-236.6.1 and 5-236.6.2  
5-236.11 and 5-236.12  
5-237 and 5-238  
5-247 and 5-248  
5-257 and 5-258  
5-258.9/(5-258.10 blank)  
5-271 and 5-272  
5-282.7 and 5-282.8  
5-292.1 and 5-292.2  
5-292.7 and 5-292.8  
5-293 and 5-294  
5-306.4.5 and 5-306.4.6  
5-306.6.1 and 5-306.6.2  
5-309 and 5-310  
5-310.17 and 5-310.18  
5-311 and 5-312  
5-372.3 and 5-372.4  
5-372.5 and 5-372.6  
5-372.7/(5-372.8 blank)  
5-373 through 5-378  
5-378.1/(5-378.2 blank)  
5-383/(5-384 blank)  
5-385 and 5-386  
---

Remove pages

5-389 and 5-390  
5-391 and 5-392  
5-393 and 5-394  
5-395 and 5-396  
5-397 through 5-404  
5-405 through 5-408  
5-408.1/(5-408.2 blank)  
5-417 through 5-422  
5-597 and 5-598


Insert pages

5-389 and 5-390  
5-391/(5-392 blank)  
---  
(5-395 blank)/5-396  
5-397 through 5-404  
---  
---  
5-417 through 5-422  
5-597 and 5-598

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

Official:

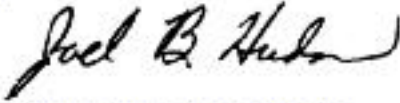

*Administrative Assistant to the  
Secretary of the Army*  
03249

DENNIS J. REIMER  
*General, United States Army*  
*Chief of Staff*

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31-E, block no. 1199, requirements for TM 55-1520-240-23-4.

CHANGE  
NO. 36

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 30 SEPTEMBER 1996

Aviation Unit and Intermediate Maintenance Manual

**CH-47D Helicopter**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages  
5-413 and 5-414  
5-445 through 5-448  
5-465 through 4-472  
---

Insert pages  
5-413 and 5-414  
5-445 through 5-448  
5-465 through 4-472  
Electronic 2028

2. Retain this sheet in front of manual for reference purposes.

**By Order of the Secretary of the Army:**

Official:

DENNIS J. REIMER  
*General, United States Army*  
*Chief of Staff*

JOEL B. HUDSON  
*Administrative Assistant to the*  
*Secretary of the Army*  
02572

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31-E, block no. 1199, requirements for TM 55-1520-240-23-4.



CHANGE  
NO. 35

HEADQUARTERS  
DEPARTMENTS OF THE ARMY  
WASHINGTON, D.C., 16 September 1996

Aviation Unit and Aviation Intermediate  
Maintenance Manual

**CH-47D HELICOPTER**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

i and ii  
5-45/(5-46 blank)  
5-329 and 5-330  
5-333 and 5-334  
5-354.1 and 5-354.2  
3-359 through 5-362  
5-362.4.1 and 5-362.4.2  
5-369 and 5-370  
5-371 and 5-372

Insert pages

i and ii  
5-45 and 546  
5-329 and 5-330  
5-333 and 5-334  
5-354.1 and 5-354.2  
3-359 through 5-362  
5-362.4.1 and 5-362.4.2  
5-369 and 5-370  
5-371 and 5-372

2. Retain this sheet in front of manual for reference purposes.



TM 55-1520-240-23-4  
C35

**By Order of the Secretary of the Army:**

Official:

DENNIS J. REIMER  
*General, United States Army*  
*Chief of Staff*

JOEL B. HUDSON  
*Administrative Assistant to the*  
*Secretary of the Army*  
02311

**DISTRIBUTION:**

To be distributed in accordance with DA Form 12-31-E, block no. 1199, requirements for TM 55-1520-240-23-4.

CHANGE  
NO. 34

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 24 June 1996

Aviation Unit and Aviation Intermediate  
Maintenance Manual

**CH-47D HELICOPTER**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert Pages
5-55 and 5-56	5-55 and 5-56
5-77 and 5-78	5-77 and 5-78
5-87 and 5-88	5-87 and 5-88
5-139 through 5-142	5-139 through 5-142
5-145 and 5-146	5-145 and 5-146
5-159 and 5-160	5-159 and 5-160
5-214.3 and 5-214.4	5-214.3 and 5-214.4
5-214.7 and 5-214.8	5-214.7 and 5-214.8
5-217 and 5-218	5-217 and 5-218
5-224.1/(5-224.2 blank)	5-224.1/(5-224.2 blank)
5-225 through 5-228	5-225 through 5-228
5-229 through 5-232	5-229 through 5-232
5-234.5 through 5-234.6.1/(5-234.6.2 blank)	5-234.5 through 5-234.6.1/(5-234.6.2 blank)
5-234.15 and 5-234.16	5-234.15 and 5-234.16
5-285 through 5-288	5-285 through 5-288
5-292.1 and 5-292.2	5-292.1 and 5-292.2
5-306.1 and 5-306.2	5-306.1 and 5-306.2
5-306.12.1 and 5-306.12.2	5-306.12.1 and 5-306.12.2
5-310.17 and 5-310.18	5-310.17 and 5-310.18
5-317 and 5-318	5-317 and 5-318
5-325 through 5-326.2	5-325 through 5-326.2
5-331 through 5-336	5-331 through 5-336
5-369 and 5-370	5-369 and 5-370
-----	5-370.1/(5-370.2 blank)
5-372.1 and 5-372.2	5-372.1 and 5-372.2

**TM 55-1520-240-23-4**  
**C34**

Remove pages

5-372.2.1/(5-372.2.2 blank)  
5-372.3 and 5-372.4  
5-377 and 5-378  
5401 and 5402  
5405 and 5406  
5-441 and 5-442  
5-447 and 5448  
5-450.3 and 5-450.4  
5-467 and 5-468  
5-473 and 5-474  
5-523 and 5-524  
5-597 and 5-598

Insert pages

-----  
5-372.3 and 5-372.4  
5-377 and 5-378  
5401 and 5402  
5-405 and 5406  
5-441 and 5-442  
5-447 and 5448  
5-450.3 and 5-450.4  
5-467 and 5-468  
5-473 and 5-474  
5-523 and 5-524  
5-597 and 5-598

2. Retain this sheet in front of manual for reference purposes.

**By Order of the Secretary of the Army:**

Official:

JOEL B. HUDSON  
*Administrative Assistant to the*  
*Secretary of the Army*  
01979

DENNIS J. REIMER  
*General, United States Army*  
*Chief of Staff*

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31-E, block no. 1199, requirements for TM 55-1520-240-23-4.

# URGENT

TM 55-1520-240-23-4  
C33

CHANGE  
NO. 33

HEADQUARTERS  
DEPARTMENTS OF THE ARMY  
WASHINGTON, D. C., 15 JUNE 1995

## Aviation Unit and Intermediate Maintenance Manual

### CH-47D HELICOPTER

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

**Remove pages**

5-405 through 5-408  
5-419 and 5-420

**Insert pages**

5-405 through 5-408  
5-419 and 5-420

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

Official:

  
JOEL B. HUDSON

Acting Administrative Assistant to the  
Secretary of the Army

00139

GORDON R. SULLIVAN  
General, United States Army  
Chief of Staff

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31-E, block no.1199, requirements for  
TM 55-1520-240-23-4.

# URGENT



CHANGE

NO. 32

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D. C., 31 JANUARY 1995

Aviation Unit and Aviation Intermediate  
Maintenance Manual

**CH-47D HELICOPTER**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

5-61 and 5-62  
5-71 and 5-72  
-----  
5-73 and 5-74  
5-81 through 5-84  
5-96.1 through 5-96.3/  
(5-96.4 blank)  
5-97 through 5-100  
5-137 and 5-138  
5-154.1/(5-154.2 blank)  
  
5-163 and 5-164  
5-177 and 5-178  
5-179 and 5-180  
5-180.1/(5-180.2 blank)  
5-193 and 5-194  
5-205 through 5-210  
5-214.1 and 5-214.2  
5-215 and 5-216  
-----  
5-225 through 5-228  
5-228.1/(5-228.2 blank)  
5-229 and 5-230  
5-232.1/(5-232.2 blank)  
5-233 and 5-234  
5-234.5 and 5-234.6

Insert pages

5-61 and 5-62  
5-71 and 5-72  
5-72.1/(5-72.2 blank)  
5-73 and 5-74  
5-81 through 5-84  
5-96.1 through 5-96.3/  
(5-96.4 blank)  
5-97 through 5-100  
5-137 and 5-138  
5-154.1 through 5-154.3/  
5-154.4 blank)  
5-163 and 5-164  
5-177 and 5-178  
5-179 and 5-180  
5-180.1/(5-180.2 blank)  
5-193 and 5-194  
5-205 through 5-210  
5-214.1 and 5-214.2  
5-215 and 5-216  
5-224.1/(5-224.2 blank)  
5-225 through 5-228  
5-228.1/(5-228.2 blank)  
5-229 and 5-230  
5-232.1/(5-232.2 blank)  
5-233 and 5-234  
5-234.5 and 5-234.6

Remove pages

5-234.6.1/(5-234.6.2 blank)  
5-234.11 through 5-234.14  
5-273 through 5-276  
5-287 through 5-290  
5-290.1 and 5-290.2  
5-296.1 through 5-296.3/  
(5-296.4 blank)  
5-306.1 through 5-306.4  
5-306.4.1 through 5-306.4.3/  
(5-306.4.4 blank)  
5-306.13 and 5-306.14  
5-307 through 5-310  
5-317 and 5-318  
5-329 and 5-330  
5-331 through 5-336  
5-353 and 5-354  
5-354.1 and 5-354.2  
5-359 through 5-362  
5-362.4.1 and 5-362.4.2  
5-369 through 5-372  
5-397 through 5-400  
5-433 and 5-434  
5-441 and 5-442  
5-445 through 5-450  
5-450.1 through 5-450.4  
5-451 through 5-456  
5-467 through 5-472


Insert pages

5-234.6.1/(5-234.6.2 blank)  
5-234.11 through 5-234.14  
5-273 through 5-276  
5-287 through 5-290  
5-290.1 and 5-290.2  
5-296.1 through 5-296.4  
5-306.1 through 5-306.4  
5-306.4.1 through 5-306.4.6  
5-306.13 and 5-306.14  
5-307 through 5-310  
5-317 and 5-318  
5-329 and 5-330  
5-331 through 5-336  
5-353 and 5-354  
5-354.1 and 5-354.2  
5-359 through 5-362  
5-362.4.1 and 5-362.4.2  
5-369 through 5-372  
5-397 through 5-400  
5-433 and 5-434  
5-441 and 5-442  
5-445 through 5-450  
5-450.1 through 5-450.4  
5-451 through 5-456  
5-467 through 5-472

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

Official:

  
MILTON H. HAMILTON

*Administrative Assistant to the  
Secretary of the Army*

07B24

GORDON R. SULLIVAN  
*General, United States Army  
Chief of Staff*

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31-E, block no. 1199, requirements for  
TM 55-1520-240-23-4.

# URGENT

TM 55-1520-240-23-4  
C 31

CHANGE

NO. 31

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 11 May 1994

Aviation Unit and Aviation Intermediate  
Maintenance Manual

CH-47D HELICOPTER

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

5-344.1 and 5-344.2  
5-345 and 5-346  
5-346.1 and 5-346.2


Insert pages

5-344.1 and 5-344.2  
5-345 and 5-346  
5-346.1 and 5-346.2

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

Official:

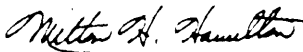  
MILTON H. HAMILTON  
Administrative Assistant to the  
Secretary of the Army

0621C

GORDON R. SULLIVAN  
General, United States Army  
Chief of Staff

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31-E, block no. 1199, requirements for TM 55-1520-240-23-4.





CHANGE

NO. 30

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 4 APRIL 1994

Aviation Unit and Aviation Intermediate  
Maintenance Manual

CH-47D HELICOPTER

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

## Remove pages

5-83 and 5-84  
5-154.1/(5-154.2 blank)  
5-189 and 5-190  
5-237 and 5-238  
5-241 and 5-242  
5-249 and 5-250  
5-253 and 5-254  
5-263 and 5-264  
5-310.1 through 5-310.6  
5-328.3 and 5-328.4  
5-419 and 5-420  
5-441 and 5-442  
5-447 and 5-448

## Insert pages


5-83 and 5-84  
5-154.1/(5-154.2 blank)  
5-189 and 5-190  
5-237 and 5-238  
5-241 and 5-242  
5-249 and 5-250  
5-253 and 5-254  
5-263 and 5-264  
5-310.1 through 5-310.6  
5-238.3 and 5-328.4  
5-419 and 5-420  
5-441 and 5-442  
5-447 and 5-448

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

GORDON R. SULLIVAN  
General, United States Army  
Chief of Staff

Official:

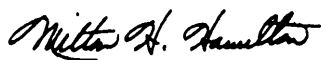  
MILTON H. HAMILTON  
Administrative Assistant to the  
Secretary of the Army  
06590

## DISTRIBUTION:

To be distributed in accordance with DA Form 12-31-E, block no. 1199, requirements for TM 55-1520-240-23-4.



# URGENT

TM 55-1520-240-23-4  
C 29

CHANGE

NO. 29

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 29 NOVEMBER 1993

Aviation Unit and Aviation Intermediate  
Maintenance Manual

CH-47D HELICOPTER

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. All illustration change is indicated by a miniature pointing hand.

Remove pages

5-210.1/(5-210.2 blank)

5-343 and 5-344

5-344.1 and 5-344.2

5-345 and 5-346

Insert pages

5-210.1 through 5-210.5/  
(5-210.6 blank)

5-343 and 5-344

5-344.1 and 5-344.2


5-345 and 5-346

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

GORDON R. SULLIVAN  
*General, United States Army*  
*Chief of Staff*

Official:

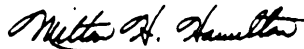

MILTON H. HAMILTON  
*Administrative Assistant to the*  
*Secretary of the Army*

05800

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31-E, block no. 1199, requirements for TM 55-1520-240-23-4.



CHANGE

NO. 28

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 30 July 1993

Aviation Unit and Aviation Intermediate  
Maintenance Manual

CH-47D HELICOPTER

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

5-214.3 and 5-214.4  
5-367 and 5-368  
5-405 through 5-408  
-----  
5-415 and 5-416

Insert pages


5-214.3 and 5-214.4  
5-367 and 5-368  
5-405 through 5-408  
5-408.1/(5-408.2 blank)  
5-415 and 5-416

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

GORDON R. SULLIVAN  
*General, United States Army*  
Chief of Staff

Official:

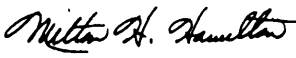  
MILTON H. HAMILTON  
*Administrative Assistant to the*  
*Secretary of the Army*

04816

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31-E, block no. 1199, requirements for TM 55-1520-240-23-4.



CHANGE }  
NO. 27 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 30 September 1992

Aviation Unit and Aviation Intermediate  
Maintenance Manual

CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

5-131 and 5-132  
5-142.1 and 5-142.2  
5-143 and 5-144  
5-214.3 and 5-214.4  
5-279 and 5-280  
5-313 and 5-314  
5-441 and 5-442  
5-447 and 5-448  
5-450.3 through 5-450.7/5-450.8


Insert pages

5-131 and 5-132  
5-142.1 and 5-142.2  
5-143 and 5-144  
5-214.3 and 5-214.4  
5-279 and 5-280  
5-313 and 5-314  
5-441 and 5-442  
5-447 and 5-448  
5-450.3 through 5-450.7/5-450.8

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

Official:

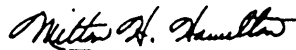

MILTON H. HAMILTON

*Administrative Assistant to the  
Secretary of the Army*

02665

GORDON R. SULLIVAN  
*General, United States Army  
Chief of Staff*

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31-E, block no. 1199, requirements for TM 55-1520-240-23-4.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.





# URGENT

NOTICE: THIS CHANGE HAS BEEN PRINTED AND DISTRIBUTED OUT OF SEQUENCE. IT SHOULD BE INSERTED IN THE MANUAL AND USED. UPON RECEIPT OF THE EARLIER SEQUENCED CHANGE ENSURE A MORE CURRENT CHANGE PAGE IS NOT REPLACED WITH A LESS CURRENT PAGE.

TM 55-1520-240-23-4  
C 26

CHANGE }  
NO. 26 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 24 April 1992

AVIATION UNIT AND AVIATION INTERMEDIATE  
MAINTENANCE MANUAL  
CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

5-214.3 and 5-214.4  
5-234.21 and 5-234.22

Insert pages


5-214.3 and 5-214-4  
5-234.21 through 5-234.24

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

GORDON R. SULLIVAN  
*General, United States Army*  
*Chief of Staff*

Official:

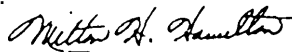

MILTON H. HAMILTON  
*Administrative Assistant to the*  
*Secretary of the Army*

00797

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31-E, block no. 1199, AVUM and AVIM maintenance requirements for TM 55-1520-240-23-4.

# URGENT



CHANGE }  
NO. 25 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 30 April 1992

Aviation Unit and Aviation Intermediate  
Maintenance Manual

CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
5-17 and 5-18	5-17 and 5-18
5-19 and 5-20	5-19 and 5-20
5-39 and 5-40	5-39 and 5-40
5-45/5-46	5-45/5-46
5-55 and 5-56	5-55 and 5-56
5-87 and 5-88	5-87 and 5-88
5-97 through 5-100	5-197 through 5-100
5-105 and 5-106	5-105 and 5-106
5-109 and 5-110	5-109 and 5-110
5-121 through 5-124	5-121 through 5-124
5-127 and 5-128	5-127 and 5-128
5-135 and 5-136	5-135 and 5-136
5-139 and 5-140	5-139 and 5-140
5-147 through 5-152	5-147 through 5-152
5-157 through 5-160	5-157 through 5-160
5-170.19/5-170.20	5-170.19/5-170.20
5-211 and 5-212	5-211 and 5-212
5-214.3 through 5-214.6	5-214.3 through 5-214.6
5-234.17/5-234.18	5-234.17/5-234.18
5-236.5 and 5-236.6	5-236.5 and 5-236.6
5-236.6.1 through 5-236.6.4	5-236.6.1 through 5-236.6.4
5-291 and 5-292	5-291 and 5-292
5-292.7 and 5-292.8	5-292.7 and 5-298.8
5-292.9/5-292.10	5-292.9/5-292.10
5-306.15 through 5.306.17/5.306.18	5-306.15 through 5.306.17/5.306.18
5-309 and 5-310	5-309 and 5-310
5-310.17 and 5-310.18	5-310.17 and 5-310.18
5-311 through 5-314	5-311 through 5-314
5-317 and 5-318	5-317 and 5-318
5-325 and 5-326	5-325 and 5-326
5-326.1 and 5-326.2	5-326.1 and 5-326.2
-----	5-326.5 through 5-326.8
5-328.1 and 5-328.2	5-328.1 and 5-328.2
5-330.3 through 5-330.6	5-330.3 through 5-330.6
5-331 through 5-334	5-331 through 5-334
5-343 and 5-344	5-343 and 5-344

Remove pages

insert pages


-----	5-344.1 and 5-344.2
5-345 and 5-346	5-345 and 5-346
5-346.1/5-346. 2	5-346.1 and 5-346.2
5-351 and 5-352	5-351 and 5-352
5-357 and 5-358	5-357 and 5-358
5-358.1 and 5-358.2	5-358.1 and 5-358.2
5-361 and 5-362	5-361 and 5-362
5-362.1 through 5-362.4	5-362.1 through 5-362.4
-----	5-362.4.1 and 5-362.4.2
5-367 and 5-368	5-367 and 5-368
5-371 and 5-372	5-371 and 5-372
5-372.3 through 5-372.5/5-372.6	5-372.3 through 5-372.5/5-372.6
5-373 through 5-378	5-373 through 5-378
5-401 through 5-408	5-401 through 5-408
5-416.5 and 5-416.6	5-416.5 and 5-416.6
5-432.1/5-432.2	5-432.1/5-432.2
5-435 and 5-436	5-435 and 4-36
5-447 and 5-448	5-447 and 5-448
-----	5-460.1/5-460. 2
5-465 through 5-472	5-465 through 5-472
5-499 and 5-500	5-499 and 5-500
5-500.1/5-500. 2	5-500.1/5-500. 2
5-501 through 5-508	5-501 through 5-508
5-508.1/5-5508.2	5-508.1/5-508. 2
5-509 through 5-526	5-509 through 5-526
5-526.1 through 5-526.30	-----
5-527 through 5-530	5-527 through 5-530
5-539 through 5-542	5-539 and 5-544
-----	5-545 through 5-603/5-604

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

GORDON R. SULLIVAN  
General, United States Army  
Chief of Staff

Official:

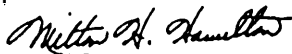

MILTON H. HAMILTON  
Administrative Assistant to the  
Secretary of the Army  
01454

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31-E, block no. 1199, AVUM and AVIM maintenance requirements for TM 55-1520-240-23-4.

# URGENT

\*TM 55-1520-240-23-4

C 24

CHANGE }  
NO. 24 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 1 October 1990

## Aviation Unit and Aviation Intermediate Maintenance Manual

### CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
5-145 and 5-146	5-145 and 5-146
5-234.13 and 5-234.14	5-234.13 and 5-234.14
5-234.19 through 5-234.22	5-234.19 through 5-234.22
5-236.1 and 5-236.2	5-236.1 and 5-236.2
5-236.6.1 and 5-236.6.2	5-236.6.1 and 5-236.6.2
5-236.7 and 5-236.8	5-236.7 and 5-236.8
5-236.15 and, 5-236.16	5-236.15 and 5-236.16
5-237 and 5-238	5-237 and 5-238
5-249 and 5-250	5-249 and 5-250
5-258.1 and 5-258.2	5-258.1 and 5-258.2
5-259 and 5-260	5-259 and 5-260
5-277 and 5-278	5-277 and 5-278
5-282.1 and 5-282.2	5-282.1 and 5-282.2
- - - -	5-282.2.1/5-282.2.2
5-354.1 and 5-354.2	5-354.1 and 5-354.2

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

Official:

**THOMAS F. SIKORA**  
*Brigadier General, United States Army*  
*The Adjutant General*

**CARL E. VUONO**  
*General, United States Army*  
*Chief of Staff*

#### DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for CH-47D Helicopter, Cargo Transport.

\*This TM Change 24 is a result of PCR #90A5131.

# URGENT



CHANGE }  
NO. 23 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 9 October 1990

Aviation Unit and Aviation Intermediate  
Maintenance Manual

CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
5-19 through 5-22	5-19 through 5-22
5-37 and 5-38	5-37 and 5-38
5-47 and 5-48	5-47 and 5-48
5-53 through 5-56	5-53 through 5-56
---	5-94.2.1/5-94.2.2
5-111 and 5-112	5-111 and 5-112
5-129 through 5-132	5-129 through 5-132
5-135 through 5-138	5-135 through 5-138
5-141 and 5-142	5-141 and 5-142
5-154.1/5-154.2	5-154.1/5-154.2
5-159 and 5-160	5-159 and 5-160
5-211 and 5-212	5-211 and 5-212
5-214.5 and 5-214.6	5-214.5 and 5-214.6
5-215 and 5-216	5-215 and 5-216
5-239 and 5-240	5-239 and 5-240
5-292.1 and 5-292.2	5-292.1 and 5-292.2
5-303 and 5-304	5-303 and 5-304
5-310.7 through 5-310.10	5-310.7 through 5-310.9/ 5-310.10
5-311 through 5-318	5-311 through 5-318
5-345 and 5-346	5-345 and 5-346
5-362.5/5-362.6	5-362.5/5-362.6
5-372.1 and 5-372.2	5-372.1 and 5-372.2
5-401 and 5-402	5-401 and 5-402
5-411 and 5-412	5-411 and 5-412
5-441 and 5-442	5-441 and 5-442
5-450.3 and 5-450.4	5-450.3 and 5-450.4
5-509 and 5-510	5-509 and 5-510
5-531 and 5-532	5-531 and 5-532

2. Retain this sheet in front of manual for reference purposes.



**By Order of the Secretary of the Army:**

**Official:**

**THOMAS F. SIKORA**  
***Brigadier General, United States Army***  
***The Adjutant General***

**CARL E. VUONO**  
***General, United States Army***  
***Chief of Staff***

**DISTRIBUTION:**

To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for CH-47D Helicopter, Cargo Transport.

# URGENT

\*TM 55-1520-240-23-4  
C 22

CHANGE }  
NO. 22 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 17 May 1990

Aviation Unit and Aviation Intermediate  
Maintenance Manual

CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration Change is indicated by a miniature pointing hand.

Remove pages

5-214.3 and 5-214.4  
5-354.1 and 5-354.2  
5-357 and 5-358  
5-371 and 5-372  
5-372.1 through 5-372.4

Insert pages

5-214.3 and 5-214.4  
5-354.1 and 5-354.2  
5-357 and 5-358  
5-371 and 5-372  
5-372.1 through 5-372.4

2. Retain this sheet in front of manual for reference purposes.

**By Order of the Secretary of the Army:**

**CARL E. VUONO**  
**General, United States Army**  
**Chief of Staff**

**Official:**

**WILLIAM J. MEEHAN II**  
**Brigadier General, United States Army**  
**The Adjutant General**

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for CH-47D Helicopter, Cargo Transport.

\*This TM Change 22 is a result of USAAVSCOM SOF Message 261900Z Apr 90.

# URGENT



CHANGE }  
 NO. 21 }

HEADQUARTERS  
 DEPARTMENT OF THE ARMY  
 WASHINGTON, D.C., 1 November 1989

Aviation Unit and Aviation Intermediate  
 Maintenance Manual

CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
- - - -	5-14.1/5-14.2
5-15 and 5-16	5-15 and 5-16
5-19 and 5-20	5-19 and 5-20
5-29 through 5-32	5-29 through 5-32
5-33 through 5-36	5-33 through 5-36
5-53 through 5-58	5-53 through 5-58
5-58.1 through 5-58.4	5-58.1 through 5-58.4
5-79 through 5-86	5-79 through 5-86
5-163 and 5-164	5-163 and 5-164
5-175 and 5-176	5-175 and 5-176
5-195 and 5-196	5-195 and 5-196
5-211 and 5-212	5-211 and 5-212
5-217 and 5-218	5-217 and 5-218
5-292.7 through 5-292.9/5-292.10	5-292.7 through 5-292.9/5-292.10
5-306.1 and 5-306.2	5-306.1 and 5-306.2
5-311 through 5-314	5-311 through 5-314
5-323 and 5-324	5-323 and 5-324
5-325 and 5-326	5-325 and 5-326
5-326.1 and 5-326.2	5-326.1 and 5-326.2
5-343 through 5-346	5-343 through 5-346
5-347/5-348	5-347/5-348
5-393 and 5-394	5-393 and 5-394
5-449 and 5-450	5-449 and 5-450
5-453 through 5-456	5-453 through 5-456
5-495 and 5-496	5-495 and 5-496
5-513 through 5-516	5-513 through 5-516

2. Retain this sheet in front of manual for reference purposes.

**By Order of the Secretary of the Army:**

**CARL E. VUONO**  
*General, United States Army*  
*Chief of Staff*

**Official:**

**WILLIAM J. MEEHAN II**  
*Brigadier General, United States Army*  
*The Adjutant General*

**DISTRIBUTION:**

To be distributed in accordance with DA Form 12-31, AVUM and AVUM Maintenance requirements for CH-47D Helicopter, Cargo Transport.

# URGENT

NOTICE: THIS CHANGE HAS BEEN PRINTED AND DISTRIBUTED OUT OF SEQUENCE. IT SHOULD BE INSERTED IN THE MANUAL AND USED, UPON RECEIPT OF THE EARLIER SEQUENCED CHANGE INSURE A MORE CURRENT CHANGE PAGE IS NOT REPLACED WITH A LESS CURRENT PAGE.

TM 55-1520-240-23-4  
C 20

CHANGE }  
NO. 20 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 5 May 1988

Aviation Unit and Aviation  
Intermediate Maintenance Manual  
CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

Insert pages

5-525 through 5-526.30

5-525 and 5-526

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

CARL E. VUONO,  
*General, United States Army*  
*Chief of Staff*

Official:

R. L. DILWORTH  
*Brigadier General, United States Army*  
*The Adjutant General*

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for CH-47D Helicopter, Cargo Transport.

# URGENT



CHANGE }  
No. 19 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 1 May 1988

Aviation Unit and Aviation  
Intermediate Maintenance Manual

CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
5-37 through 5-40	5-37 through 5-40
5-41 through 5-44	5-41 through 5-44
5-47 through 5-50	5-47 through 5-50
---	5-50.1/(5-50.2 blank)
5-51 and 5-52	5-51 and 5-52
---	5-52.1/(5-52.2 blank)
5-53 through 5-56	5-53 through 5-56
5-58.1 and 5-58.2	5-58.1 and 5-58.2
5-79 and 5-80	5-79 and 5-80
5-87 and 5-88	5-87 and 5-88
5-170.13/(5-170.14 blank)	5-170.13 through 5-170.18
---	5-170.19/(5-170.20 blank)
---	5-214.7 and 5-214.8
5-234.5 and 5-234.6	5-234.5 and 5-234.6
5-236.5 and 5-236.6	5.236.5 and 5-236.6
---	5-236.6.1 through 5.236.6.4
5-251 and 5-252	5-251 and 5-252
5-259 and 5-260	5-259 and 5-260
5-269 through 5-272	5-269 through 5-272
5-273 and 5-274	5-273 and 5-274
5-277 and 5-278	5-277 and 5-278
---	5-282.1 through 5-282.8
5-310.1 and 5-310.2	5-310.1 and 5-310.2
5-405 and 5-406	5-405 and 5-406
5-417 through 5-422	5-417 through 5-422
5-493 and 5-494	5-493 and 5-494
5-494.5 and 5-494.6	5-494.5 and 5-494.6
5-494.11 through 5-494.16	5-494.11 through 5-494.16
5-494.19 and 5-494.20	5-494.19 and 5-494.20



2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

CARL E. VUONO  
*General, United States Army*  
*Chief of Staff*

Official:

R. L. DILWORTH  
*Brigadier General, United States Army*  
*The Adjutant General*

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for CH-47D Helicopter, Cargo Transport.

CHANGE }  
NO. 18 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D. C., 2 December 1987

Aviation Unit and Aviation  
Intermediate Maintenance Manual  
CD-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

i through iv  
5-31 and 5-32  
5-35 and 5-36  
5-69 through 5-74  
5-86.1 through 5-86.4  
5-95 and 5-96  
5-97 through 5-100  
5-113 through 5-126  
5-139 through 5-142  
5-142.1 and 5-142.2  
5-143 and 5-144  
5-153 and 5-154  
5-170.3 through 5-170.8  
5-177 and 5-178  
---  
5-179 and 5-180  
5-211 and 5-212  
5-227 and 5-228  
5-293 and 5-294  
5-306.4.3/(5-306.4.4 Blank)  
---  
5-309 and 5-310  
5-315 through 5-318  
5-326.1 and 5-326.2  
5-343 and 5-344  
5-372.1 and 5-372.2  
5-375 and 5-376  
5-411 and 5-412

Insert pages

i through iv  
5-31 and 5-32  
5-35 and 5-36  
5-69 through 5-74  
5-86.1 through 5-86.4  
5-95 and 5-96  
5-97 through 5-100  
5-113 through 5-126  
5-139 through 5-142  
5-142.1 and 5-142.2  
5-143 and 5-144  
5-153 and 5-154  
5-170.3 through 5-170.8  
5-177 and 5-178  
5-178.1/(5-178.2 Blank)  
5-179 and 5-180  
5-211 and 5-212  
5-227 and 5-228  
5-293 and 5-294  
5-306.4.3/(5-306.4.4 Blank)  
5-306.17/(5-306.18 Blank)  
5-309 and 5-310  
5-315 through 5-318  
5-326.1 and 5-326.2  
5-343 and 5-344  
5-372.1 and 5-372.2  
5-375 and 5-376  
5-411 and 5-412

Remove pages

5-423 and 5-424  
---  
5-435 through 5-440  
---  
5-445 through 5-450  
---  
5-499 and 5-500  
---  
5-501 through 5-504  
5-507 and 5-508  
---  
5-509 and 5-510  
---

Insert pages

5-423 and 5-424  
5-432.1/(5-432.2 Blank)  
5-435 through 5-440  
5-440.1 through 5-440.4  
5-445 through 5-450  
5-450.1 through 5-450.4  
5-499 and 5-500  
5-500.1/(5-500.2 Blank)  
5-501 through 5-504  
5-507 and 5-508  
5-508.1/5-508.2 Blank)  
5-509 and 5-510  
5-526.1 through 5-526.30

2. Retain this sheet in front of manual for reference purposes.

**By Order of the Secretary of the Army:**

**CARL E. VUONO,**  
*General, United States Army*  
*Chief of Staff*

**Official:**

**R. L. DILWORTH**  
*Brigadier General, United States Army*  
*The Adjutant General*

**DISTRIBUTION:**

To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for CH-47D Helicopter, Cargo Transport.

# URGENT

TM 55-1520-240-23-4  
C 17

CHANGE }  
NO. 17 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 29 April 1987

Aviation Unit and Aviation  
Intermediate Maintenance Manual  
CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

5-215 and 5-216  
5-223 and 5-224  
5-343 through 5-346  
5-372.1 and 5-372.2  
---

Insert pages

5-215 and 5-216  
5-223 and 5-224  
5-343 through 5-346  
5-372.1 and 5-372.2  
5-372.2.1/5-372.2.2

2. Retain this sheet in front of manual for reference purposes.

**By Order of the Secretary of the Army:**

**Official:**

**R. L. DILWORTH**  
*Brigadier General, United States Army*  
*The Adjutant General*

**JOHN A. WICKHAM, JR.**  
*General, United States Army*  
*Chief of Staff*

**DISTRIBUTION:**

To be distributed in accordance with DA Form 12-31, AVLM and AVIM Maintenance requirements for CH-47D Helicopter, Cargo Transport.

# URGENT



# URGENT

NOTICE: THIS CHANGE HAS BEEN PRINTED AND DISTRIBUTED OUT OF SEQUENCE. IT SHOULD BE INSERTED IN THE MANUAL AND USED. UPON RECEIPT OF THE EARLIER SEQUENCED CHANGE INSURE A MORE CURRENT CHANGE PAGE IS NOT REPLACED WITH A LESS CURRENT PAGE.

TM 55-1520-240-23-4  
C 16

CHANGE }  
NO. 16 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D. C., 23 October 1986

Aviation Unit and Aviation  
Intermediate Maintenance Manual  
CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

Insert pages

5-55 and 5-56

5-55 and 5-56

2. Retain this sheet in front of manual for reference purposes.

**By Order of the Secretary of the Army:**

**JOHN A. WICKHAM, JR.**  
*General, United States Army*  
*Chief of Staff*

**Official:**

**R. L. DILWORTH**  
*Brigadier General, United States Army*  
*The Adjutant General*

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for CH-47D Helicopter, Cargo Transport.

# URGENT



# URGENT

NOTICE: THIS CHANGE HAS BEEN PRINTED AND DISTRIBUTED OUT OF SEQUENCE, IT SHOULD BE INSERTED IN THE MANUAL AND USED. UPON RECEIPT OF THE EARLIER SEQUENCED CHANGE INSURE A MORE CURRENT CHANGE PAGE IS NOT REPLACED WITH A LESS CURRENT PAGE.

TM 55-1520-240-23-4  
C 15

CHANGE }  
NO. 15 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 29 September 1986

Aviation Unit and Aviation  
Intermediate Maintenance Manual  
CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

5-55 and 5-56  
5-345 and 5-346  
- - -  
5-467 and 5-468  
5-471 and 5-472  
5-495 and 5-496

Insert pages

5-55 and 5-56  
5-345 and 5-346  
5-346.1/5-346.2  
5-467 and 5-468  
5-471 and 5-472  
5-495 and 5-496

2. Retain this sheet in front of manual for reference purposes.

**By Order of the Secretary of the Army:**

**JOHN A. WICKHAM, JR.**  
*General, United States Army*  
*Chief of Staff*

**Official:**

**R. L. DILWORTH**  
*Brigadier General, United States Army*  
*The Adjutant General*

**DISTRIBUTION:**

To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for CH-47D Helicopter, Cargo Transport.

# URGENT





CHANGE }  
 No. 14 }

HEADQUARTERS  
 DEPARTMENT OF THE ARMY  
 WASHINGTON, D.C., 15 June 1986

Aviation Unit and Aviation Intermediate  
 Maintenance Manual

CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

g/h  
 5-17 and 5-18  
 5-23 through 5-28  
 ---  
 5-37 through 5-40  
 ---  
 5-41 through 5-44  
 5-47 through 5-54  
 5-57 and 5-58  
 5-58.1 through 5-58.4  
 5-67 through 5-86  
 5-86.3 through 5-86.5/5-86.6  
 5-87 through 5-94  
 ---  
 5-95 and 5-96  
 ---  
 5-97 through 5-104  
 5-121 through 5-132  
 5-135 and 5-136  
 5-141 and 5-142  
 ---  
 5-151 and 5-152  
 ---  
 5-153 and 5-154  
 5-154.1/5-154.2  
 5-155 through 5-166  
 5-169 and 5-170  
 ---  
 5-171 through 5-174  
 ---  
 5-175 through 5-180

Insert pages

g/h  
 5-17 and 5-18  
 5-23 through 5-28  
 5-32.1 through 5-32.3/  
 5-32.4  
 5-37 through 5-40  
 5-40.1/5-40.2  
 5-41 through 5-44  
 5-47 through 5-54  
 5-57 and 5-58  
 5-58.1 through 5-58.5/  
 5-58.6  
 5-67 through 5-86  
 5-86.3 through 5-86.5/  
 5-86.6  
 5-87 through 5-94  
 5-94.1 through 5-94.7/  
 5-94.8  
 5-95 and 5-96  
 5-96.1 through 5-96.3/  
 5-96.4  
 5-97 through 5-104  
 5-121 through 5-132  
 5-135 and 5-136  
 5-141 and 5-142  
 5-142.1 and 5-142.2  
 5-151 and 5-152  
 5-152.1/5-152.2  
 5-153 and 5-154  
 5-154.1/5-154.2  
 5-155 through 5-166  
 5-169 and 5-170  
 5-170.1 through 5-170.13/  
 5-170.14  
 5-171 through 5-174  
 5-174.1/5-174.2  
 5-175 through 5-180

Remove pages

---  
5-181 through 5-198  
5-203 through 5-210  
---  
5-215 through 5-222  
5-225 through 5-228  
---  
5-229 through 5-232  
---  
5-233 and 5-234  
5-234.1 through 5-234.6  
---  
5-234.7 through 5-234.14  
---  
---  
5-235 and 5-236  
5-236.1 and 5-236.2  
---  
5-236.3 through 5-236.19/  
5-236.20  
5-237 through 5-258  
5-258.1 through 5-258.10  
  
5-259 through 5-290  
---  
  
5-291 and 5-292  
---  
  
5-293 through 5-296  
5-296.1 through 5-296.4  
  
5-297 through 5-306  
5-306.1 through 5-306.4  
---  
  
5-306.5 and 5-306.6  
5-306.6.1 and 5-306.6.2  
5-306.7 through 5-306.12  
---  
  
5-306.13 and 5-306.14  
---  
  
5-310.17 and 5-310.18  
5-311 through 5-320  
5-325 and 5-326  
5-326.1 through 5-326.4  
5-327 and 5-328  
5-328.1 through 5-328.4  
5-329 and 5-330  
---  
  
5-343 and 5-344  
5-347/5-348  
5-353 and 5-354

Insert pages

5-180.1/5-180.2  
5-181 through 5-198  
5-203 through 5-210  
5-214.1 through 5-214.6  
5-215 through 5-222  
5-225 through 5-228  
5-228.1/5-228.2  
5-229 through 5-232  
5-232.1/5-232.2  
5-233 and 5-234  
5-234.1 through 5-234.6  
5-234.6.1/5-234.6.2  
5-234.7 through 5-234.14  
5-234.15 through 5-234.17/  
5-234.18  
5-234.19 through 5-234.22  
5-235 and 5-236  
5-236.1 and 5-236.2  
5-236.2.1/5-236.2.2  
5-236.3 through 5-236.19/  
5-236.20  
5-237 through 5-258  
5-258.1 through 5-258.9/  
5-258.10  
5-259 through 5-290  
5-290.1 through 5-290.3/  
5-290.4  
5-291 and 5-292  
5-292.1 through 5-292.9/  
5-292.10  
5-293 through 5-296  
5-296.1 through 5-296.3/  
5-296.4  
5-297 through 5-306  
5-306.1 through 5-306.4  
5-306.4.1 through 5-306.4.3/  
5-306.4.4  
5-306.5 and 5-306.6  
5-306.6.1 and 5-306.6.2  
5-306.7 through 5-306.12  
5-306.12.1 through  
5-306.12.7/5-306.12.8  
5-306.13 and 5-306.14  
5-306.15 and 5-306.16  
5-310.17 and 5-310.18  
5-311 through 5-319/5-320  
5-325 and 5-326  
5-326.1 through 5-326.4  
5-327 and 5-328  
5-328.1 through 5-328.4  
5-329 and 5-330  
5-330.1 through 5-330.6  
5-343 and 5-344  
5-347/5-348  
5-353 and 5-354

## Remove pages

---  
 5-355 through 5-358  
 ---  
 5-359 and 5-360  
 5-362. 1 and 5-362. 2  
 5-363 and 5-364  
 5-371 and 5-372  
 ---  
 5-383 and 5-384  
 5-387 through 5-398  
 5-405 through 5-408  
 5-411 through 5-416  
 ---  
 5-433 and 5-434  
 5-453 and 5-454  
 5-483 through 5-488  
 5-494. 21/5-494. 22  
 5-501 and 5-502  
 5-507 through 5-510  
 5-513 through 5-516  
 5-521 through 5-526  
 5-531 through 5-540

## Insert pages

5-354. 1 through 5-354. 3/  
 5-354. 4  
 5-355 through 5-358  
 5-358. 1 through 5-358. 5/  
 5-358. 6  
 5-359 and 5-360  
 5-362. 1 and 5-362. 2  
 5-363 and 5-364  
 5-371 and 5-372  
 5-372. 3 through 5-372. 5/  
 5-372. 6  
 5-383 and 5-384  
 5-387 through 5-398  
 5-405 through 5-408  
 5-411 through 5-416  
 5-416. 1 through 5-416. 6  
 5-433 and 5-434  
 5-453 and 5-454  
 5-483 through 5-488  
 5-494. 21/5-494. 22  
 5-501 and 5-502  
 5-507 through 5-510  
 5-513 through 5-516  
 5-521 through 5-526  
 5-531 through 5-540

2. Retain these sheets In front of manual for reference purposes.

**By Order of the Secretary of the Army:**

**JOHN A. WICKHAM, JR.**  
*General, United States Army*  
*Chief of Staff*

**Official:**

**R. L. DILWORTH**  
*Brigadier General, United States Army*  
*The Adjutant General*

**DI STRI BUTI ON:**

To be distributed in accordance with DA Form 12-31, AVUM and AVIM requirements for CH-47D Helicopter, Cargo Transport.



# URGENT

TM 55-1520-240-23-4  
C 13

CHANGE }  
NO. 13 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D. C., 30 May 1986

Aviation Unit and Aviation  
Intermediate Maintenance Manual

CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

Insert pages

5-372.1 and 5-372.2

5-372.1 and 5-372.2

2. Retain this sheet in front of manual for reference purposes.

**By Order of the Secretary of the Army:**

**JOHN A. WICKHAM, JR.**  
*General, United States Army*  
*Chief of Staff*

**Official:**

**R. L. DILWORTH**  
*Brigadier General, United States Army*  
*The Adjutant General*

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for CH-47D Helicopter, Cargo Transport.

# URGENT



# URGENT

TM 55-1520-240-23-4  
C 12

CHANGE }  
NO. 12 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 3 March 1986

Aviation Unit and Aviation  
Intermediate Maintenance Manual

CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

5-37 and 5-38  
5-317 and 5-318

Insert pages

5-37 and 5-38  
5-317 and 5-318

2. Retain this sheet in front of manual for reference purposes.

**By Order of the Secretary of the Army:**

**JOHN A. WICKHAM, JR.**  
*General, United States Army*  
*Chief of Staff*

**Official:**

**R.L. DILWORTH**  
*Brigadier General, United States Army*  
*The Adjutant General*

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, AVUM and AVIM requirements for CH-47D Helicopter, Cargo Transport.

# URGENT





# URGENT

TM 55-1520-240-23-4  
C 11

CHANGE }  
NO. 11 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 18 February 1986

Aviation Unit and Aviation Intermediate  
Maintenance Manual

CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical var in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

5-493 and 5-494  
----

Insert pages

5-493 and 5-494  
5-494.1 through 5-494.21/5-494.22

2. Retain this sheet in front of manual for reference purposes.

**By Order of the Secretary of the Army:**

**Official:**

**JOHN A. WICKHAM, JR.**  
**General, United States Army**  
**Chief of Staff**

**MILDRED E. HEDBERG**  
**Brigadier General, United States Army**  
**The Adjutant General**

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, AVUM and AVIM requirements for CH-47D Helicopter, Cargo Transport.

# URGENT



# URGENT

TM 55-1520-240-23-4  
C10

CHANGE }  
NO. 10 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 17 January 1986

## AVIATION UNIT AND AVIATION INTERMEDIATE MAINTENANCE MANUAL

### CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

#### Remove pages

5-306.6.1 through 5-306.6.4  
5-311 and 5-312  
5-317 and 5-318

#### Insert pages

5-306.6.1 through 5-306.6.4  
5-311 and 5-312  
5-317 and 5-318

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

JOHN A. WICKHAM, JR.  
*General, United States Army*  
*Chief of Staff*

Official:

MILDRED E. HEDBERG  
*Brigadier General, United States Army*  
*The Adjutant General*

#### DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for CH-47D Helicopter, Cargo Transport.

# URGENT



# URGENT

TM 55-1520-240-23-4  
C 9

CHANGE }  
NO. 9 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D. C. , 13 November 1985

Aviation Unit and Aviation Intermediate  
Maintenance Manual

CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

Insert pages

5-55 through 5-58

5-55 through 5-58

- - -  
- - -

5-58.1 through 5-58.4  
5-372.1 and 5-372.2

2. Retain this sheet in front of manual for reference purposes.

**By Order of the Secretary of the Army:**

**JOHN A. WICKHAM, JR.**  
*General, United States Army*  
*Chief of Staff*

**Official:**

**MILDRED E. HEDBERG**  
*Brigadier General, United States Army*  
*The Adjutant General*

**DISTRIBUTION:**

To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for CH-47D Helicopter, Cargo Transport.

# URGENT



# URGENT

TM 55-1520-240-23-4

C 8

CHANGE }  
NO. 8 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 22 October 1985

Aviation Unit and Aviation Intermediate  
Maintenance Manual

CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

Insert pages

---  
5-306.7 and 5-306.8

5-306.6.1 through 5-306.6.4  
5-306.7 and 5-306.8

2. Retain this sheet in front of manual for reference purposes.

**By Order of the Secretary of the Army:**

**Official:**

**MILDRED E. HEDBERG**  
***Brigadier General, United States Army***  
***The Adjutant General***

**JOHN A. WICKHAM, JR.**  
***General, United States Army***  
***Chief of Staff***

**DISTRIBUTION:**

To be distributed in accordance with DA Form 12-31, AVUM and avIM Maintenance Requirements for CH-47D Helicopter, Cargo Transport.

# URGENT





# URGENT

TM 55-1520-240-23-4  
C 7

CHANGE }  
NO. 7 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 19 August 1985

Aviation Unit and Aviation Intermediate  
Maintenance Manual

CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

5-154.1/5-154.2  
5-157 and 5-158  
5-317 and 5-318

Insert pages

5-154.1/5-154.2  
5-157 and 5-158  
5-317 and 5-318

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

Official:

**JOHN A. WICKHAM, JR.**  
*General, United States Army*  
*Chief of Staff*

**DONALD J. DELANDRO**  
*Brigadier General, United States Army*  
*The Adjutant General*

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance Requirements for CH-47D Helicopter, Cargo Transport.

# URGENT



# URGENT

TM 55-1520-240-23-4  
C 6

CHANGE }  
NO. 6 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 5 June 1985

## Aviation Unit and Aviation Intermediate Maintenance Manual

CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

5-154.1/5-154.2  
5-157 and 5-158

Insert pages

5-154.1/5-154.2  
5-157 and 5-158

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

Official:

**JOHN A. WICKHAM, JR.**  
*General, United States Army*  
*Chief of Staff*

**DONALD J. DELANDRO**  
*Bripdier General, United States Army*  
*The Adjutant General*

DISTRIBUTION :

To be distributed in accordance with DA Form 12-31, Organizational, Direct Support and General Support Maintenance Requirements for CH-47D Helicopter, Cargo Transport Aircraft.

# URGENT



# URGENT

TM 55-1520-240-23-4  
C 5

CHANGE }  
NO. 5 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 10 May 1985

## Aviation Unit and Aviation Intermediate Maintenance Manual

### CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

Insert pages

5-349 and 5-350

5-349 and 5-350

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

**JOHN A. WICKHAM, JR.**  
*General, United States Army*  
*Chief of Staff*

Official:

**DONALD J. DELANDRO**  
*Brigadier General, United States Army*  
*The Adjutant General*

#### DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, Organizational, Direct Support and General Support Maintenance Requirements for CH-47D Helicopter, Cargo Transport Aircraft.

# URGENT



# URGENT

TM 55-1520-240-23-4  
C 4

CHANGE }  
NO. 4 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 26 March 1985

Aviation Unit and Aviation Intermediate  
Maintenance Manual

CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

Insert pages

5-157 and 5-158

5-157 and 5-158

2. Retain this sheet in front of manual for reference purposes.

**By Order of the Secretary of the Army:**

**JOHN A. WICKHAM, JR.**  
**General, United States Army**  
**Chief of Staff**

**Official:**

**DONALD J. DELANDRO**  
**Brigadier General, United States Army**  
**The Adjutant General**

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, Organizational, Direct Support and General Support Maintenance Requirements for CH-47D Aircraft.

# URGENT





# URGENT

TM 55-1520-240-23-4  
C 3

CHANGE }  
NO. 3 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 8 March 1985

Aviation Unit and Aviation Intermediate  
Maintenance Manual

CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin, An illustration change is indicated by a miniature pointing hand.

Remove pages

Insert pages

5-67 and 5-68  
5-77 and 5-78

5-67 and 5-68  
5-77 and 5-78

2. Retain this sheet in front of manual for reference purposes.

**By Order of the Secretary of the Army:**

**Official:**

**JOHN A. WICKHAM, JR.**  
**General, United States Army**  
**Chief of Staff**

**DONALD J. DELANDRO**  
**Brigadier General, United States Army**  
**The Adjutant General**

**DISTRIBUTION:**

To be distributed in accordance with DA Form 12-31, Organizational, Direct Support and General Support Maintenance requirements for CH-47D aircraft.

# URGENT



CHANGE }  
 NO. 2 }

HEADQUARTERS  
 DEPARTMENT OF THE ARMY  
 WASHINGTON, D. C., 25 FEBRUARY 1985

Aviation Unit and Aviation Intermediate  
 Maintenance Manual

CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
5-6.1/5-6.2	5-6.1 and 5-6.2
5-11 through 5-14	5-11 through 5-14
5-17 through 5-22	5-17 through 5-22
5-37 and 5-38	5-37 and 5-38
5-41 through 5-46	5-41 through 5-45/5-46
5-47 through 5-56	5-47 through 5-56
5-57 and 5-58	5-57 and 5-58
5-61 and 5-62	5-61 and 5-62
5-65 and 5-66	5-65 and 5-66
---	5-66.1 through 5-66.3/5-66.4
5-71 through 5-74	5-71 through 5-74
5-77 and 5-78	5-77 and 5-78
5-81 through 5-86	5-81 through 5-86
5-93 and 5-94	5-93 and 5-94
5-117 and 5-118	5-117 and 5-118
---	5-154.1/5-154.2
5-155 through 5-158	5-155 through 5-158
5-175 and 5-176	5-175 and 5-176
5-189 through 5-192	5-189 through 5-192
5-199 through 5-202	5-199 through 5-202
5-205 and 5-206	5-205 and 5-206
5-209 and 5-210	5-209 and 5-210
5-211 and 5-212	5-211 and 5-212
5-225 and 5-226	5-225 and 5-226
5-229 and 5-230	5-229 and 5-230
5-233 and 5-234	5-233 and 5-234
---	5-234.1 through 5-234.14
5-235 and 5-236	5-235 and 5-236
---	5-236.1 through 5-236.19/5-236.20
---	5-258.1 through 5-258.10
5-261 and 5-262	5-261 and 5-262
5-265 and 5-266	5-265 and 5-266
5-271 through 5-274	5-271 through 5-274
5-277 and 5-278	5-277 and 5-278
5-281 and 5-282	5-281 and 5-282
5-285 through 5-290	5-285 through 5-290

Remove pages

---  
5-299 through 5-302  
5-305 and 5-306  
---  
5-307 through 5-310  
---  
5-323 through 5-326  
---  
5-329 and 5-330  
5-339 through 5-344  
5-353 and 5-354  
5-361 and 5-362  
---  
5-363 and 5-364  
5-383 and 5-384  
5-387 through 5-390  
5-403 through 5-408  
5-415 and 5-416  
5-451 through 5-456  
5-511 and 5-512  
5-523 and 5-524  
5-539 and 5-540  
Index 1 through Index 18

Insert pages

5-296.1 through 5-296.4  
5-299 through 5-302  
5-305 and 5-306  
5-306.1 through 5-306.14  
5-307 through 5-310  
5-310.1 through 5-310.18  
5-323 through 5-326  
5-326.1 through 5-326.4  
5-328.1 through 5-328.4  
5-329 and 5-330  
5-339 through 5-344  
5-353 and 5-354  
5-361 and 5-362  
5-362.1 through 5-362.5/5-362.6  
5-363 and 5-364  
5-383 and 5-384  
5-387 through 5-390  
5-403 through 5-408  
5-415 and 5-416  
5-451 through 5-456  
5-511 and 5-512  
5-523 and 5-524  
5-539 and 5-540  
---

2. Retain this sheet in front of manual for reference purposes.

**By Order of the Secretary of the Army:**

**JOHN A. WICKHAM, JR.**  
***General, United States Army***  
***Chief of Staff***

**Official:**

**DONALD J. DELANDRO**  
***Brigadier General, United States Army***  
***The Adjutant General***

**DISTRIBUTION:**

To be distributed in accordance with DA Form 12-31, Organizational, Direct Support, and General Support Maintenance requirements for CH-47D aircraft.

# URGENT

TM 55-1520-240-23-4  
C 1

CHANGE }  
NO. 1 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 19 April 1984

## Aviation Unit and Aviation Intermediate Maintenance Manual

### CH-47D HELICOPTER

TM 55-1520-240-23-4, 10 May 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

#### Remove pages

---  
5-237 and 5-238  
5-241 and 5-242  
5-249 and 5-250  
5-253 through 5-256  
5-259 and 5-260  
5-263 through 5-266  
5-277 through 5-282  
---  
Index 73 and Index 74  
Index 85 and Index 86

#### Insert pages

5-86.1 through 5-86.5/5-86.6  
5-237 and 5-238  
5-241 and 5-242  
5-249 and 5-250  
5-253 through 5-256  
5-259 and 5-260  
5-263 through 5-266  
5-271 through 5-282  
Index 72.1/Index 72.2  
Index 73 and Index 74  
Index 85 and Index 86

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

**JOHN A. WICKHAM, JR.**  
*General, United States Army*  
*Chief of Staff*

Official:

**ROBERT M. JOYCE**  
*Major General, United States Army*  
*The Adjutant General*

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, Organizational Maintenance Requirements for CH-47B/C & D aircraft.

# URGENT



## WARNING AND FIRST AID DATA.

For artificial respiration and other first aid data, refer to FM 21-11.

Personnel performing instructions involving operations, procedures, and practices which are included or implied in this technical manual shall observe the following instructions. Disregard of these warnings and precautionary information can cause serious injury, illness, death, or an aborted mission.

### **WARNING**

An operating procedure, practice, etc., which if not correctly followed, could result in personal injury or loss of life.

### **CAUTION**

An operation procedure, practice, etc., which if not strictly observed, could result in damage to or destruction of equipment.

### **NOTE**

An operating procedure, condition, etc., which is essential to highlight.

### **WARNING**

#### **Cleaning Solvents**

- Those areas of skin and clothing that come in contact with cleaning solvents should be thoroughly washed immediately.
- Saturated clothing should be removed immediately.
- Areas in which cleaning solvents are used should be adequately ventilated to keep vapors to a minimum.
- If cleaning solvents contact the eyes, nose, or ears, flush them with generous quantities of water, and then seek medical attention immediately.

### **WARNING**

#### **Electrical and Electronic Equipment Maintenance**

- Do not wear rings, watches, or metal jewelry when working around electrical equipment. Serious burns can result.
- Be careful when working on 150- and 300-volt dc circuits and on ac generator 115- and 200-volt ac outputs. Serious burns can result.



**WARNING**

**Dangerous Static Charges**

Ground the helicopter during parking, fueling, or defueling. Sparks can cause fuel vapor to ignite.

**WARNING**

**Dangerous Voltages at Antenna Terminals**

Be careful when working near antenna or antenna terminals. Radio frequency (rf) voltages exist at these points when transmitters are operating. Contact with radiating antennas can cause serious rf burns.

**WARNING**

**Poisonous Carbon Monoxide Fumes**

Toxic carbon monoxide fumes may be present inside the helicopter whenever engines or apu are operating with cargo ramp open. Ventilate the cockpit.

**WARNING**

**Corrosive Battery Electrolyte  
(Potassium Hydroxide)**

- The electrolyte used in nickel-cadmium batteries contains potassium hydroxide which is a caustic substance.
- Contact with skin or eyes will cause burns.
- Use rubber gloves, rubber apron, and protective eye covering or face shield when handling battery.
- If personal contact with electrolyte occurs, flush immediately with large amounts of only clean water. Get medical attention immediately.

**WARNING**

**Explosive Battery Hazard**

- Before removing or installing battery, make sure battery switch is OFF and battery has cooled down if overheated.
- Connecting or disconnecting battery connector while battery is under load may cause explosion or electrical arcing resulting in injury to personnel.

**WARNING****Electrolyte Contamination**

- Separate nickel-cadmium batteries and lead-acid type batteries as far as possible from each other.
- Do not let anything associated with a lead-acid battery, including air, come in contact with a nickel-cadmium battery or its electrolyte. Sulfuric acid fumes from a lead-acid battery could result in damage to a nickel-cadmium battery leading to battery failure and a hazard to personnel.
- Do not use same tools or protective clothing for both types of batteries.
- If sulfuric acid has been somehow mixed with electrolyte in the battery, the upper areas of the battery cells will appear green in color indicating battery failure or damage and potential danger to personnel unless replaced.

**WARNING****Acids and Alkalines**

- Do not add water to acid. A violent action will result. Add acid to water in small quantities.
- Rust stripper is an alkaline solution.
- Avoid skin contact. Wear protective clothing. Wash thoroughly after using.

**WARNING****Windshield Rain Repellent**

- Do not let windshield rain repellent contact open flame. Deadly hydrogen fluoride gas could be generated.
- Wash hands with soap and water after handling repellent.

**WARNING****Antiseize Compounds**

- Some antiseize compounds are irritants. Avoid inhaling fumes and contact with skin.
- Wear protective clothing. Wash thoroughly after using.

**WARNING**

**Paints, Varnishes, Dopes, Thinners, and Lubricants**

- These materials are generally highly flammable and may be irritants. Work in a well-ventilated area away from open flames.
- Avoid inhaling fumes and prolonged contact with skin. Wash thoroughly after using.

**WARNING**

**Epoxy Resins, Cements, and Adhesives**

- These materials may contain toxic or irritating substances. They may also be flammable. Work in a well-ventilated area away from open flames.
- Wear protective clothing. Avoid contact with skin. Wash thoroughly after using.

**WARNING**

**Radiation Hazard**

- Some instruments contain radioactive material. Do not try to disassemble these instruments. They present no radiation hazard unless seal is broken.
- If you think seal is broken, do not remove instrument from helicopter before consulting Base Radioactive Protection Officer (AR 40-15).
- Use a beta-gamma radiac meter AN/PDR -27 or equivalent to determine if instrument contains radioactive material (radium).

**WARNING**

**Firs Extinguishing Agents**

- Monobromotrifluoromethane ( $\text{CF}_3\text{Br}$ ) is highly volatile but is not easily detected by smell. It is not toxic, but reduces oxygen available for proper breathing.
- If liquid  $\text{CF}_3\text{Br}$  contacts skin, it can cause frostbite or low temperature burns.
- If agent touches eyes or skin, immediately flush affected area with running water. Get medical attention.

**WARNING****Noise**

- Sound pressure levels in this helicopter during some operating conditions exceed the Surgeon General's hearing conservation criteria (TB MED251 ).
- Hearing protection devices, such as aviator helmet or ear plugs, shall be worn by all personnel in and around the helicopter during operation.

**WARNING****FOD**

- Make sure area is clear of foreign objects before closing access doors, panels, and fairings.
- If area is not clear, damage to components or systems could result in personal injury or death.

**WARNING****JP-4/JP-5 Fuel  
MIL-T-5624**

- Fuel is flammable. Do not use near welding areas, open flames, or on very hot surfaces.
- Use only with adequate ventilation.
- Avoid prolonged or repeated contact with skin. Prolonged contact may cause drying and irritation of skin.
- Remove saturated clothing immediately.
- Do not smoke when handling fuel.
- Do not take internally.
- Store in approved, metal safety containers.

**WARNING****Lubricating Oils  
MIL-L-23699 or MIL-L-7808**

- If oil is decomposed by heat, toxic gases are released.
- Prolonged contact with liquid or mist may cause dermatitis and irritation.
- If there is prolonged contact with skin, wash affected area with soap and water. If oil contacts eyes, flush with water immediately. Remove saturated clothing.
- If swallowed, do not try to vomit. Seek immediate medical attention.
- When handling liquid oil, wear rubber gloves. If prolonged contact with mist is likely, wear approved respirator.

**WARNING**

**Lifting Components With Hoist**

- Lifting or hoisting of components shall only be done by designated personnel.
- The load capacity rating shall be clearly marked on hoist. Do not exceed load rating.
- Inspection and testing for cracks or defects in hoist system shall be performed on a regular basis.
- Before lifting, alert personnel in immediate areas.
- Before lifting, balance the load.
- Do not stand under load while it is being moved from one area to another on a hoist.
- Do not stand under load to do maintenance work.

**WARNING**

**Hydraulic Pressures**

- High pressures used in testing hydraulic components can cause line rupture or component failure.
- Only qualified personnel shall operate, service, and maintain hydraulic test equipment.
- Use heavy plastic shielding at least 1/2-inch thick when applying pressures over 250 psi to prevent injury to personnel.

**WARNING**

**Hydraulic Fluid**

- Hydraulic fluid is toxic. It can irritate skin and eyes and cause burns. When fluid is decomposed by heating, it releases toxic gases.
- Avoid inhaling. Use only with adequate ventilation. If prolonged contact with mist is likely, wear an appropriate respirator.
- Avoid contact with skin, eyes, or clothing. Wear rubber gloves if handling liquid.
- In case of contact with skin, immediately wash skin with soap and water. In-case of contact with eyes, flush them immediately with clear water and get medical attention.
- If liquid is swallowed, do not induce vomiting; get immediate medical attention.

**WARNING****Compressed Air**

- Do not use more than 30 psi compressed air for cleaning purposes. Debris propelled under pressure can cause injury to eyes.
- Use eye protection to prevent injury to personnel.

**WARNING****Flare Dispenser**

- Flares can accidentally fire, sometimes from stray voltage. Injury or death can result.
- Remove all electrical power from helicopter before installing loaded payload module on dispenser assembly.
- Keep hands and face away from end of payload module during installation.

**WARNING****Maintenance Platforms/Workstands**

- Use only appropriate maintenance platforms/workstands illustrated in TM 55-405-10, or other approved locally procured stands and restraint equipment, when working above 10 feet on helicopters in a nontactical environment. Otherwise, personnel injury could result from accidental falls.

**WARNING**

- Do not wear eyeglasses having light sensitive lenses while performing magnetic particle (black light) or fluorescent penetrant inspections.
- Such lenses have a 16 to 45 percent light transmission loss.
- Wearing them can result in failure to detect flaws and cracks under ultraviolet light.

**WARNING****Cadmium-Plated Tools**

- Use only chrome-plated or unplated steel tools when working on the helicopter.
- Cadmium or zinc-plated tools are not permitted, since these platings are prone to chipping and flaking. The chips and flakes could cause corrosion or fluid contamination.
- All tools, regardless of plating type, shall be serviceable and free of chipping.



# LIST OF EFFECTIVE PAGES

Insert latest changed pages; dispose of superseded pages in accordance with regulations.

NOTE: On a changed page, the portion of the text affected by the latest change is indicated by a vertical line, or other change symbol, in the outer margin of the page. Changes to illustrations are indicated by miniature pointing hands. Changes to wiring diagrams are indicated by shaded areas.

Dates of issue for original and changed pages are:

Original	10 May 1983	Change 25	30 April 1992
Change 1	19 April 1984	Change 26	24 April 1992
Change 2	25 February 1985	Change 27	30 September 1992
Change 3	8 March 1985	Change 28	30 July 1993
Change 4	26 March 1985	Change 29	29 November 1993
Change 5	10 May 1985	Change 30	4 April 1994
Change 6	5 June 1985	Change 31	11 May 1994
Change 7	19 August 1985	Change 32	31 January 1995
Change 8	22 October 1985	Change 33	15 June 1995
Change 9	13 November 1985	Change 34	24 June 1996
Change 10	17 January 1986	Change 35	16 September 1996
Change 11	18 February 1986	Change 36	30 September 1996
Change 12	3 March 1986	Change 37	15 March 1997
Change 13	30 May 1986	Change 38	10 March 1999
Change 14	15 June 1986	Change 39	15 June 2000
Change 15	29 September 1986	Change 40	8 August 2000
Change 16	23 October 1986	Change 41	1 November 2000
Change 17	29 April 1987	Change 42	1 February 2001
Change 18	2 December 1987	Change 43	1 March 2001
Change 19	1 May 1988	Change 44	2 April 2001
Change 20	5 May 1988	Change 45	15 May 2001
Change 21	1 November 1989	Change 46	1 October 2001
Change 22	17 May 1990	Change 47	30 November 2001
Change 23	9 October 1990	Change 48	15 February 2002
Change 24	1 October 1990		

Page No.	*Change No.	Page No.	*Change No.
Title .....	0	5-3 - 5-6 .....	0
A - F .....	48	5-6.1 and 5-6.2 .....	2
a - f .....	0	5-7 - 5-11 .....	0
g/(h blank) .....	14	5-12 .....	2
i .....	43	5-13 .....	0
ii - iv .....	18	5-14 .....	2
v/(vi blank) .....	0	5-14.1/(5-14.2 blank) ....	21
5-1/(5-2 blank) .....	0	5-15 .....	21
5-2.1 and 5-2.2 .....	0	5-16 and 5-17 .....	0

\*Zero in this column indicates an original page.



TM 55-1520-240-23-4

Page No.	*Change No.	Page No.	*Change No.
5-18 and 5-19	25	5-86.1	1
5-20 and 5-21	23	5-86.2 and 5-86.3	18
5-22	0	5-86.4 - (5.86.6 blank)	14
5-23- 5-27	14	5-87	34
5-28	0	5-88	19
5-29	40	5-89 - 5-94	14
5-30	21	5-94.1 - 5-94.2	14
5-31 and 5-32	42	5-94.2.1 and 5-94.2.2	48
5-32.1 and 5-32.2	14	5-94.3 - 5-94.6	14
5-32.3/(5-32.4 blank)	14	5-94.7/(5-94.8 blank)	14
5-33	21	5-95	18
5-34 and 5-35	0	5-96	14
5-36	21	5-96.1 and 5-96.2	32
5-37	23	5-96.3/(5-96.4 blank)	32
5-38	19	5-97 - 5-99	32
5-39	25	5-100	14
5-40	14	5-101 - 5-103	14
5-40.1/(5-40.2 blank)	14	5-104	0
5-41 - 5-44	19	5-105 and 5-106	25
5-45 and 5-46	35	5-107- 5-109	0
5-47	23	5-110	25
5-48	40	5-111	23
5-49 and 5-50	44	5-112	0
5-50.1 and 5-50.2	44	5-113 -5-119	18
5-51 and 5-52	19	5-120 and 5-121	0
5-52.1/(5-52.2 blank)	19	5-122	25
5-53	23	5-123	18
5-54	21	5-124	25
5-55	23	5-125	18
5-56	34	5-126	14
5-57 and 5-58	21	5-127	25
5-58.1	19	5-128	14
5-58.2 - 5-58.4	21	5-129	23
5-58.5/(5-58.6 blank)	14	5-130	0
5-59 and 5-60	0	5-131	23
5-61	32	5-132	27
5-62	2	5-133 and 5-134	0
5-63 - 5-65	0	5-135	25
5-66	2	5-136	23
5-66.1 - 5-66.4 blank	2	5-137	32
5-67 - 5-69	14	5-138	0
5-70	18	5-139	34
5-71	0	5-140	18
5-72	32	5-141	34
5-72.1/(5-72.2 blank)	32	5-142	14
5-73	32	5-142.1	14
5-74	14	5-142.2	39
5-75	0	5-143	27
5-76	14	5-144	18
5-77	34	5-145	34
5-78	3	5-146	24
5-79	21	5-147	0
5-80	19	5-148 - 5-150	25
5-81 - 5-83	32	5-151	14
5-84 - 5-86	21	5-152	25

\*Zero in this column indicates an original page.

Page No.	*Change No.	Page No.	*Change No.
5-152.1/(5-152.2 blank) ..	14	5-212.1/(5-212.2 blank) ..	0
5-153 .....	14	5-213 and 5-214 .....	0
5-154 .....	18	5-214.1 .....	14
5-154.1 – 5-154.2 .....	32	5-214.2 .....	32
5-154.3 .....	47	5-214.3 .....	28
5-154.4 .....	47	5-214.4 .....	34
5-155 – 5-157 .....	47	5-214.5 and 5-214.6 .....	25
5-158 .....	14	5-214.7 .....	19
5-159 .....	40	5-214.8 .....	34
5-160 .....	39	5-215 .....	23
5-161 and 5-162 .....	14	5-216 .....	32
5-163 .....	31	5-217 .....	34
5-164 – 5-166 .....	14	5-218 – 5-222 .....	14
5-167 .....	0	5-223 .....	17
5-168 .....	45	5-224 .....	0
5-169 .....	44	5-224.1/(5-224.2 blank) ..	34
5-170 .....	14	5-225 .....	34
5-170.1 – 5-170.3 .....	14	5-226 .....	0
5-170.4 .....	18	5-227 .....	18
5-170.5 .....	14	5-228 .....	34
5-170.6 and 5-170.7 .....	18	5-228.1/(5-228.2 blank) ..	32
5-170.8 – 5-170.12 .....	14	5-229 – 5-231 .....	34
5-170.13 – 5-170.18 .....	19	5-232 .....	14
5-170.19/(5-170.20 blank) ..	25	5-232.1/(5-232.2 blank) ..	32
5-171 .....	0	5-233 .....	32
5-172 – 5-174 .....	14	5-234 .....	2
5-174.1/(5-174.2 blank) ..	14	5-234.1 – 5-234.3 .....	14
5-175 .....	21	5-234.4 .....	2
5-176 and 5-177 .....	14	5-234.5 – 5-234.5 .....	34
5-178 .....	32	5-234.6 .....	32
5-178.1/(5-178.2 blank) ..	18	5-234.6.1/5-234.6.2 blank ..	34
5-179 .....	14	5-234.7 .....	14
5-180 .....	32	5-234.8 and 5-234.9 .....	2
5-180.1/(5-180.2 blank) ..	32	5-234.10 and 5-234.11 ..	14
5-181 – 5-188 .....	14	5-234.12 and 5-234.13 ..	32
5-189 .....	30	5-234.14 .....	24
5-190 – 5-192 .....	14	5-234.15 .....	14
5-193 and 5-194 .....	32	5-234.16 .....	34
5-195 and 5-196 .....	21	5-234.17/(5-234.18 blank) ..	25
5-197 .....	14	5-234.19 .....	24
5-198 .....	0	5-234.20 and 5-234.21 ..	14
5-199 .....	2	5-234.22 – 5-234.24 .....	26
5-200 .....	0	5-235 and 5-236 .....	14
5-201 .....	2	5-236.1 .....	24
5-202 .....	0	5-236.2 – 5-236.5 .....	14
5-203 – 5-205 .....	14	5-236.6 and 5-236.6.1 ..	25
5-206 .....	32	5-236.6.2 .....	37
5-207 .....	0	5-236.6.3 .....	25
5-208 and 5-209 .....	32	5-236.6.4 .....	19
5-210 .....	14	5-236.7 .....	24
5-210.1 – 5-210.6 blank ..	29	5-236.8 .....	14
5-211 and 5-212 .....	25	5-236.9 .....	2

\*Zero in this column indicates an original page.

TM 55-1520-240-23-4

Page No.	*Change No.	Page No.	*Change No.
5-236.10	10	5-292.1	37
5-236.11	2	5-292.2	34
5-236.12	37	5-292.3 – 5-292.6	14
5-236.13	2	5-292.7	37
5-236.14	14	5-292.8 – 5-292.10 blank	25
5-236.15	24	5-293	37
5-236.16	2	5-294	18
5-236.17 – 5-236.20 Blank	14	5-295 and 5-296	14
5-237	37	5-296.1 – 5-296.4	32
5-238	30	5-297 – 5-299	14
5-239 and 5-240	23	5-300	2
5-241	30	5-301 and 5-302	14
5-242 – 5-246	14	5-303 and 5-304	23
5-247	37	5-305 and 5-306	14
5-248	14	5-306.1	14
5-249	24	5-306.2	34
5-250	30	5-306.3 – 5-306.4	32
5-251	14	5-306.4.1 – 5-306.4.5	32
5-252	19	5-306.4.6	37
5-253	30	5-306.5 and 5-306.6	14
5-254 – 5-256	14	5-306.6.1	14
5-257	37	5-306.6.2	37
5-258	14	5-306.6.3	10
5-258.1	14	5-306.6.4	8
5-258.2	24	5-306.7	8
5-258.3 – 5-258.8	14	5-306.8 – 5-306.12	14
5-258.9/(5-258.10 blank)	37	5-306.12.1	34
5-259	19	5-306.12.2 – 5-306.12.6	14
5-260	24	5-306.12.7	14
5-261 – 5-263	14	5-306.12.8 blank	14
5-264	30	5-306.13 and 5-306.14	32
5-265 – 5-269	14	5-306.15	14
5-270	19	5-306.16 – 5-306.17	25
5-271	37	5-306.18 blank	25
5-272	14	5-307 and 5-308	32
5-273 and 5-274	32	5-309	37
5-275	14	5-310	25
5-276	32	5-310.1	19
5-277	14	5-310.2 – 5-310.5	30
5-278	24	5-310.6	2
5-279	27	5-310.7 and 5-310-8	23
5-280 – 5-282	14	5-310.9/5-310.10 blank	23
5-282.1	19	5-310.11 – 5-310.16	2
5-282.2 – 5-282.2.2 blank	24	5-310.17	37
5-282.3 – 5-282.7	19	5-310.18	14
5-282.8	37	5-311	25
5-283 – 5-285	14	5-312	37
5-286 and 5-287	34	5-313	27
5-288 and 5-289	32	5-314	25
5-290	14	5-315	18
5-290.1	14	5-316	23
5-290.2	32	5-317	25
5-290.3/(5-290.4 blank)	14	5-318	34
5-291	14	5-319/(5-320 blank)	14
5-292	25	5-321 – 5-323	0

\*Zero in this column indicates an original page.

Page No.	*Change No.	Page No.	*Change No.
5-324 and 5-325	21	5-362.5/(5-362.6 blank)	23
5-326	34	5-363	2
5-326.1	25	5-364	14
5-326.2	34	5-365 and 5-366	0
5-326.3 and 5-326.4	14	5-367	25
5-326.5 – 5-326.8	25	5-368	28
5-327 and 5-328	14	5-369	0
5-328.1 and 5-328.2	25	5-370	35
5-328.3	30	5-370.1/(5-370.2 blank)	34
5-328.4	14	5-371	35
5-329 and 5-330	38	5-372	32
5-330.1 and 5-330.2	14	5-372.1	18
5-330.3	25	5-372.2	34
5-330.4	14	5-372.3 – 5-372.8 blank	37
5-330.5 and 5-330.6	25	5-373 – 5-375	37
5-331 – 5-333	34	5-376 and 5-377	46
5-334	38	5-378	37
5-335 and 5-336	34	5-378.1/(5-378.2 blank)	37
5-337 and 5-338	0	5-379 – 5-382	0
5-339	2	5-383/(5-384 blank)	37
5-340	0	5-385 and 5-386	37
5-341	2	5-387 and 5-388, deleted	37
5-342	0	5-389 and 5-390	37
5-343	2	5-391/(5-392 blank)	38
5-344	29	5-393 and 5-394, deleted	38
5-344.1 and 5-344.2	31	(5-395 blank)/5-396	37
5-345	31	5-397 and 5-399	37
5-346	29	5-400	46
5-346.1	31	5-401 – 5-404	37
5-346.2	25	5-405 – 5-408, deleted	37
5-347/(5-348 blank)	21	5-408.1, deleted	37
5-348.1/(5-348.2 blank)	0	5-408.2 blank, deleted	37
5-349	0	5-409 and 5-410	0
5-350	5	5-411	23
5-351 and 5-352	25	5-412 and 5-413	14
5-353	2	5-414	36
5-354.1	43	5-415	14
5-354.2	35	5-416	28
5-354.3/(5-354.4 blank)	14	5-416.1 – 5-416.4	14
5-355	0	5-416.5	25
5-356	14	5-416.6	14
5-357	25	5-417 – 5-422	37
5-358	14	5-423	18
5-358.1	25	5-424 – 5-428	0
5-358.2 – 5-358.6 blank	14	5-429	41
5-359	0	5-430 – 5-432	0
5-360	35	5-432.1/(5-432.2 blank)	25
5-361	0	5-433 and 5-434	32
5-362	35	5-435	25
5-362.1 – 5-362.4	25	5-436	42
5-362.4.1	35	5-437	18
5-362.4.2	25	5-438	42

\*Zero in this column indicates an original page.

TM 55-1520-240-23-4

Page No.	*Change No.	Page No.	*Change No.
5-438.1 and 5-438.2	42	5-494.19	19
5-439	0	5-494.20	11
5-440	18	5-494.21/(5-494.22 blank)	14
5-440.1 – 5-440.4	18	5-495	21
5-441	0	5-496 – 5-498	0
5-442	34	5-498.1/(5-498.2 blank)	0
5-443 and 5-444	0	5-499 and 5-500	25
5-445	42	5-500.1/(5-500.2 blank)	25
5-446 and 5-447	36	5-501 – 5-508	25
5-448	34	5-508.1/(5-508.2 blank)	25
5-449	32	5-509 – 5-522	25
5-450	42	5-523	34
5-450.1 – 5-450.4	42	5-524 – 5-526	25
5-450.4.1	42	5-526.1 – 5-526.30, del.	25
5-450.4.2	48	5-527 – 5-529	25
5-450.4.3	42	5-530	0
5-450.4.4	48	5-531	23
5-450.4.5	42	5-532	0
5-450.4.6	48	5-533	14
5-450.4.7	42	5-534 and 5-535	0
5-450.4.8	48	5-536 and 5-537	14
5-450.4.9 and 5.450.4.10	42	5-538	0
5-450.5 – (5-450.8 blank)	27	5-539	14
5-451 and 5-452	32	5-540 – 5-597	25
5-453	21	5-598	37
5-454 and 5-455	32	5-599 – 5-602	25
5-456	2	5-603/(5-604 blank)	25
5-457 – 5-460	0		
5-460.1/(5-460.2 blank)	25		
5-461 and 5-465	0		
5-466 and 5-467	36		
5-468 and 5-469	32		
5-470	36		
5-471	41		
5-472	32		
5-473	34		
5-474 – 5-482	0		
5-483	14		
5-484 and 5-485	0		
5-486	14		
5-487	0		
5-488	14		
5-489 – 5-493	0		
5-494	19		
5-494.1 – 5-494.4	11		
5-494.5 and 5-494.6	19		
5-494.7 – 5-494.10	11		
5-494.11	19		
5-494.12 and 5-494.13	11		
5-494.14 and 5-494.15	19		
5-494.16 – 5-494.18	11		

\*Zero in this column indicates an original page.

TECHNICAL MANUAL

NO. 55-1520-240-23

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, DC., 10 May 1983

Aviation Unit and Aviation Intermediate  
Maintenance Manual  
**CH-47D HELICOPTER**

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to Commander, US Army Aviation and Missile Command, ATTN: AMSAM-MMC-MA-NP, Redstone Arsenal, AI 35898-5230. A reply will be furnished to you.

You may also send in your comments electrically to our e-mail address: ls-lp@redstone.army.mil or by fax 205-842-6546/DSN 788-6546. Electronic DA Form 2028 instructions are shown in the back of this manual.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

**TABLE OF CONTENTS**

		PAGE NO.
<b>VOLUME I</b>		
	HOW TO USE THIS MANUAL .....	vii
CHAPTER 1	INTRODUCTICON AND HELICOPTER GENERAL .....	1-1
Section I	General Information .....	1-1
	Scope .....	1-1
	Maintenance Forms, Records, and Reports .....	1-1
	Destruction of Army Material to Prevent Enemy Use .....	1-1
	Preparation Storage or Shipment .....	1-1
	Quality Assurance/Quality Control .....	1-1
	Reporting Equipment Improvement Recommendations (EIR) .....	1-1
	Authority for Substitution .....	1-2
	Calibration .....	1-2
	Explanation of Change Symbols .....	1-2
Section II	Equipment Description and Data .....	1-3
	Equipment Characteristics, Capabilities, and Features .....	1-3
	Location and Description of Major Components .....	1-4
	Helicopter Dimensions and Details .....	1-5
Section III	Maintenance Data .....	1-6.1
	Standard Torque Limit Application .....	1-7
	Self-Retaining Bolts Installation .....	1-12
	Replace Locked-In Stud (AVIM) .....	1-16
	Replace Screw-Thread Insert (AVIM) .....	1-22
Section IV	Tools and Materials .....	1-26.1
	Special Tools and Equipment .....	1-27
	Expendable Materials .....	1-31
Section V	Ground Handling .....	1-44.1
Section VI	Servicing and Lubrication .....	1-164.1
Section VII	Overhaul and Retirement Schedule .....	1-262.1

Section VIII	Special Inspection/Maintenance Actions .....	1-286.1
Section IX	Storage of Aircraft .....	1-312.1
Section X	Aircraft Inventory Master Guide .....	1-344.1

INDEX See Volume X

**VOLUME II**

CHAPTER 2	AIRFRAME.....	2-1
Section I	Airframe Structural Repair Description and Operation .....	2-1
Section II	General Structural Repair .....	2-6
Section III	Fuselage.....	2-152.1
Section IV	Pylon .....	2-718.1
Section V	General Repair Information Using Adhesives .....	2-832.1
Section VI	General Information for Miscellaneous Data .....	2-870.1

INDEX See Volume X

**VOLUME III**

CHAPTER 3	ALIGHTING GEAR .....	3-1
Section I	Landing Gear Description and Operation .....	3-1
Section II	Landing Gear .....	3-6
Section III	Brake Description and Operation .....	3-160.1
Section IV	Brakes .....	3-162.1
CHAPTER 4	POWERPLANT .....	4-1
Section I	Powerplant Description and Operation .....	4-1
Section II	Powerplant .....	4-6
Section III	Cooling System .....	4-140.1
Section IV	Air Induction System .....	4-164.1
Section V	Exhaust System .....	4-220.1
Section VI	Oil System.....	4-224.1
Section VII	Ignition System .....	4-242.1
Section VIII	Power Controls .....	4-246.1

INDEX See Volume X

**VOLUME IV**

CHAPTER 5	ROTOR SYSTEM .....	5-1
Section I	Rotary-Wing Head and Controls Description and Operation .....	5-1
Section II	Rotary-Wing Head and Controls.....	5-6
Section III	Rotary-Wing Blades Description and Operation .....	5-210.1
Section IV	Rotary-Wing Blades .....	5-212.1
Section V	Main Rotor Controls .....	5-348.1
Section VI	Blade Tracking .....	5-498.1

INDEX See Volume X

**VOLUME V**

CHAPTER 6	DRIVE SYSTEM . . . . .	6-1
Section I	Drive System Description and Operation . . . . .	6-1
Section II	Drive Shafting . . . . .	6-10.1
Section III	Forward Rotary-Wing Drive Transmission . . . . .	6-84.1
Section IV	Aft Rotary-Wing Drive Shaft. . . . .	6-152.1
Section V	Engine Combining Transmission . . . . .	6-188.1
Section VI	Aft Rotary-Wing Drive Transmission . . . . .	6-232.1
Section VII	Engine Transmission . . . . .	6-294.1
Section VIII	Oil Systems . . . . .	6-322.1

INDEX See Volume X

**VOLUME VI**

CHAPTER 7	HYDRAULIC SYSTEMS . . . . .	7-1
Section I	Flight Control Hydraulic System Description and Operation. . . . .	7-1
Section II	Flight Control Hydraulic System. . . . .	7-6.1
Section III	Utility Hydraulic System Description and Operation . . . . .	7-506.1
Section IV	Utility Hydraulic System . . . . .	7-512

INDEX See Volume X

**VOLUME VII**

CHAPTER 8	INSTRUMENTS . . . . .	8-1
Section I	Engine Instruments Description and Operation . . . . .	8-1
Section II	Engine Instruments . . . . .	8-8.1
Section III	Flight Instruments Description and Operation . . . . .	8-50.1
Section IV	Flight Instruments . . . . .	8-54.1
Section V	Miscellaneous Instruments Description and Operation. . . . .	8-114.1
Section VI	Miscellaneous Instruments. . . . .	8-124.1

CHAPTER 9	ELECTRICAL SYSTEMS . . . . .	9-1
Section I	Direct Current (DC) Power Distribution System Description and Operation . . . . .	9-1
Section II	Direct Current (DC) Power Distribution System . . . . .	9-10.1
Section III	Alternating Current (AC) Power Distribution System Description and Operation . . . . .	9-68.1
Section IV	Alternating Current (AC) Power Distribution System . . . . .	9-76.1
Section V	Lighting Systems Description and Operation . . . . .	9-148.1
Section VI	Lighting Systems . . . . .	9-172
Section VII	Miscellaneous Equipment Description and Operation. . . . .	9-336.1
Section VIII	Miscellaneous Equipment . . . . .	9-344

INDEX See Volume X



**VOLUME VIII**

CHAPTER 10	FUEL SYSTEM . . . . .	10-1
Section I	Fuel System Description and Operation . . . . .	10-1
Section II	Fuel Tanks . . . . .	10-10.1
Section III	Fuel Systems . . . . .	10-120.1

**I** INDEX See Volume X

**VOLUME IX**

CHAPTER II	FLIGHT CONTROLS SYSTEM . . . . .	11-1
Section I	Flight Controls System Description and Operation . . . . .	11-1
Section II	Flight Controls . . . . .	11-6
Section III	Cockpit Controls . . . . .	11-236.1
<b>I</b> Section IV	Closet Controls . . . . .	11-408.1
Section V	Mixing Controls . . . . .	11-642.1
Section VI	Upper Controls . . . . .	11-690.1
Section VII	Tunnel Controls . . . . .	11-808.1
Section VIII	Aft Fuselage and Pylon Controls . . . . .	11-840.1
Section IX	Advanced Flight Control System Description and Operation . . . . .	11-894.1
Section X	Advanced Flight Control System . . . . .	11-900.1

**I** INDEX See Volume X

**VOLUME X**

CHAPTER 12	UTILITY SYSTEMS . . . . .	12-1
Section I	Windshield Anti-Icing System Description and Operation. . . . .	12-1
Section II	Windshield Anti-Icing System . . . . .	12-2.2
Section III	Fire Detection and Extinguishing Systems Description and Operation . . . . .	12-16
Section IV	Fire Detection and Extinguishing Systems . . . . .	12-18
Section V	Windshield Wiper System Description and Operation. . . . .	12-74.1
Section VI	Windshield Wiper System. . . . .	12-76
CHAPTER 13	ENVIRONMENTAL CONTROLS . . . . .	13-1
Section I	Environmental System Description and Operation . . . . .	13-1
Section II	Environmental System . . . . .	13-4
CHAPTER 14	HOISTS AND WINCHES . . . . .	14-1
Section I	Cargo Handling System Description and Operation. . . . .	14-1
Section II	Cargo Handling System . . . . .	14-2.3

CHAPTER 15	AUXILIARY POWER UNIT .....	15-1
Section I	Auxiliary Power Unit Description and Operation.....	15-1
Section II	Auxiliary Power Unit .....	15-2.3
CHAPTER 16	MISSION EQUIPMENT .....	16-1
Section I	Cargo Carrying Hook System Description and Operation .....	16-1
Section II	Cargo Carrying Hook System .....	16-2.3
Section III	Paratroop and Cargo Drop Equipment Description and Operation .....	16-142.1
Section IV	Paratroop and Cargo Drop Equipment .....	16-144
Section V	Flare Dispenser System Description and Operation.....	16-154.1
Section VI	Flare Dispenser System .....	16-156.1
Section VII	Litter Provisions Description and Operation .....	16-176.1
Section VIII	Litter Provisions .....	16-178
CHAPTER 17	EMERGENCY EQUIPMENT.....	17-1
Section I	Emergency Equipment Description and Operation .....	17-1
Section II	Emergency Equipment .....	17-2.3
APPENDIX A	References .....	A-1
APPENDIX B	Maintenance Allocation Chart .....	B-1
APPENDIX C	Repair Parts and Special Tools List (Nonapplicable) .....	C-1
APPENDIX D	Expendable Supplies and Materials List (Not Applicable) .....	D-1
APPENDIX E	Illustrated Field Manufactured Items List .....	E-1
GLOSSARY	.....	Glossary-1
INDEX	.....	Index-1

**CHAPTER 5**

**ROTOR SYSTEM**

**SECTION I**

**ROTARY-WING HEAD AND CONTROLS**

**DESCRIPTION AND OPERATION**

## 5-1 ROTARY-WING HEAD AND CONTROLS

5-1

This rotary-wing head transmits torque from the forward or aft transmission rotor shafts to the rotary-wing blades. The rotary-wing controls transmit cockpit control movements to the blades. Three rotary-wing blades are attached to both the forward and aft rotary-wing heads. The aft blades turn clockwise and the forward blades turn counterclockwise, when viewed from above. Each rotary-wing head and controls consists of a rotor hub, three pitch-varying housings, three pitch-varying shafts with droop stops, three shock absorbers, a swashplate, three pitch links, a drive collar and drive arms, and a weather-protective cover.


**ROTOR HUB**

The rotor hub contains splines that mate with splines on the transmission rotor shaft. Pitch shafts are connected to the hub through the three horizontal pins. These pins ride in bearings supported by the hub lugs. Caps retaining the pins

and bearings are secured by locking beams. The beams connect the leading cap of one pin with the trailing cap of the next pin.

**PITCH-VARYING HOUSINGS**

The pitch-varying housings are connected internally to pitch-varying shafts by flexible, laminated steel tie bars. The laminated tie bar allows the pitch housing to rotate on the pitch shaft to change blade pitch. The tie bar is connected to the inboard end of the pitch shaft. The pitch arm on each housing is connected by a pitch link to a lug on the swashplate. The pitch link raises or lowers the pitch arm to rotate the housing on two roller bearings on the shaft. Outboard lugs on the housing contain bearings for the vertical hinge pin.

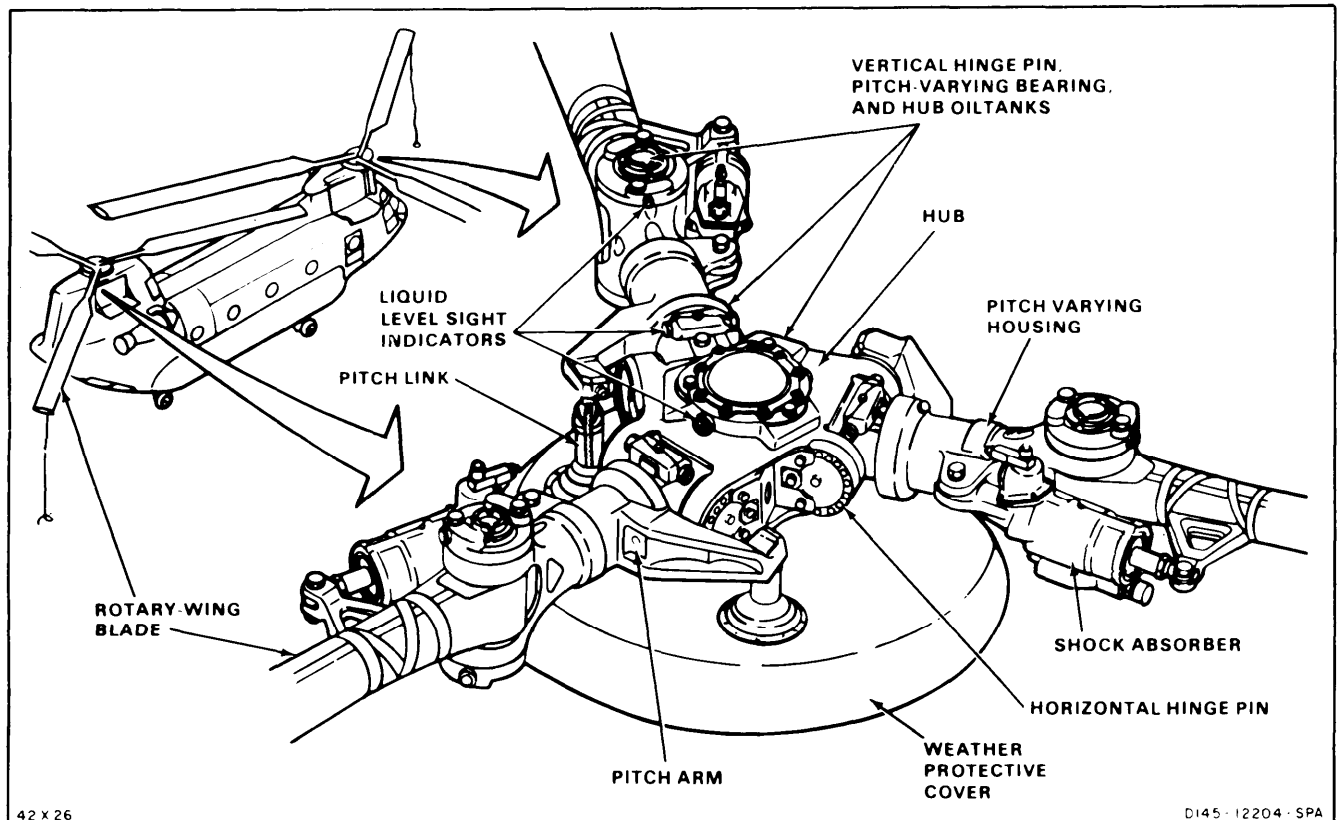

**GO TO NEXT PAGE**


**DROOP STOPS**

The droop stops limit blade droop. Each pitch-varying housing is supported by a droop stop. Forward and aft heads have fixed droop stops. These are installed on the bottom of the pitch shaft to limit droop at zero rotor speed. These fixed droop stops rest directly against the hub. The centrifugal droop stop assembly is mounted on a splined plate under the aft rotor head. The droop stop contains three balancing arms. These are connected by springs to lugs on the hub oil tank. Interposer blocks on the balancing arms are positioned between fixed blocks and the hub. As rotor speed increases, the centrifugal droop stops swing out. This moves interposer blocks clear of the pitch shafts and

allows more freedom for blade droop. As rotor speed decreases, the springs pull the arms in toward the hub. This positions the blocks between the hub and pitch shafts to reduce droop angle.

**SHOCK ABSORBERS**

Each head has three shock absorbers. They are connected between lugs on the pitch-varying housing and brackets on the blades. The shock absorbers limit lead and lag motion of the blades. Each shock absorber has a vent valve. The valve is opened for extreme cold weather operation. Changing the vent valve position allows the shock absorber to be used on forward or aft head.

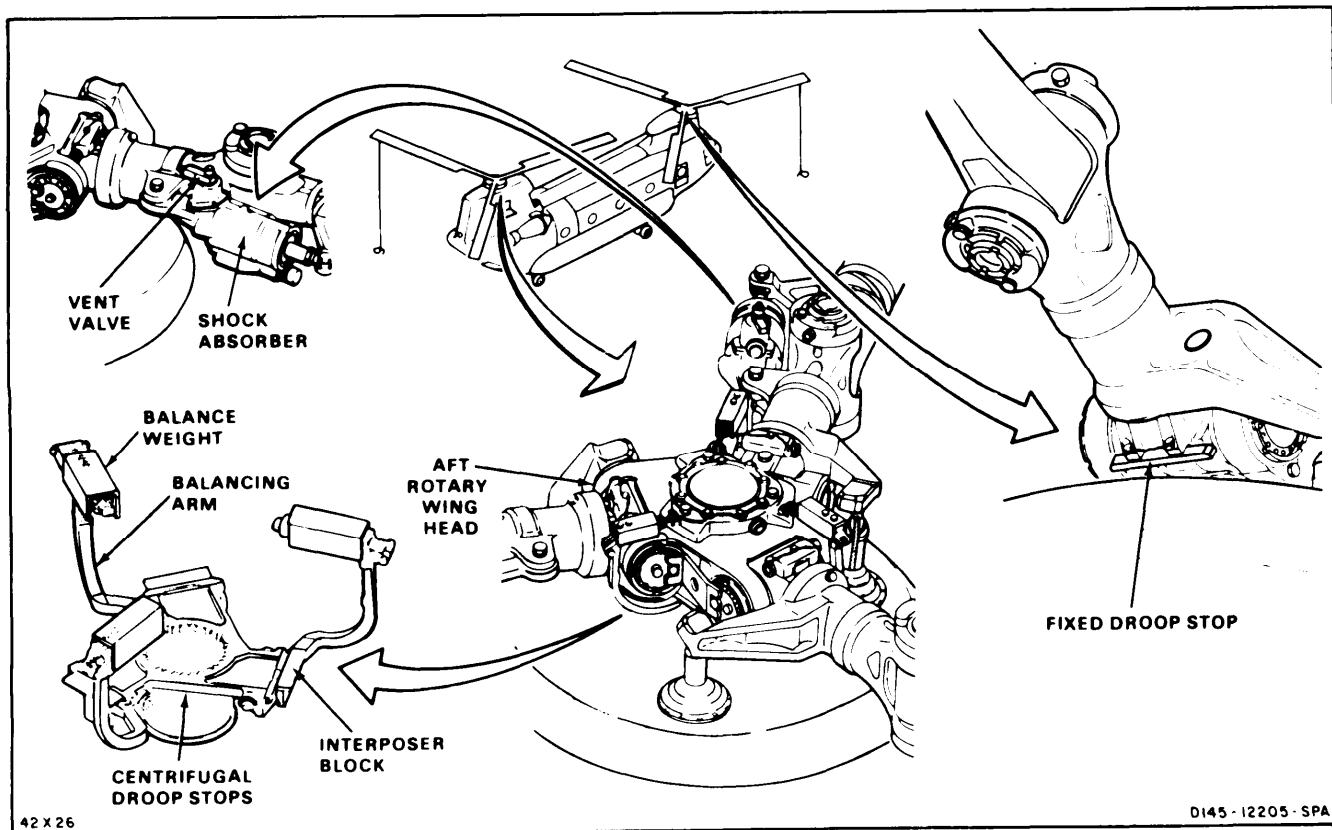**GO TO NEXT PAGE**

## 5-1 ROTARY-WING HEAD AND CONTROLS (Continued)

5-1


**SWASHPLATES**

The forward and aft swashplates transmit manual or automatic cockpit control movements to the rotary-wing blades. The swashplates can be tilted and moved vertically. This movement is transferred to the blades through the pitch links and pitch-varying housings. Forward and aft swashplates have aluminum rotating rings. The stationary ring on the aft swashplate is steel. On the forward swashplate this ring is aluminum. The stationary ring of each swashplate is mounted on a spherical bearing. This allows the swashplate to tilt in any direction. A ball bearing connects rotating and stationary rings. The swashplate is free to slide up or down on a slider shaft to change blade pitch angle. Lugs are provided on the rotating ring for connecting three pitch links and an upper drive arm. Drive arm lugs are located in two positions so

the rotating ring can be used on forward or aft swashplate. Lugs on the stationary ring provide for connection of two servocylinders, fixed link, and longitudinal cyclic trim actuator. Two single interrupters and a double interrupter on the rotating ring, and a magnetic pickup on the stationary ring, are used for rotor balancing.

**PITCH LINKS**

The six pitch links are connected between the swashplates and pitch-varying housings. Tilting a swashplate up or down moves the pitch link and pitch arm in the same direction. This increases or decreases the blade pitch angle. Raising or lowering the swashplate on the slider shaft changes pitch on all three blades.

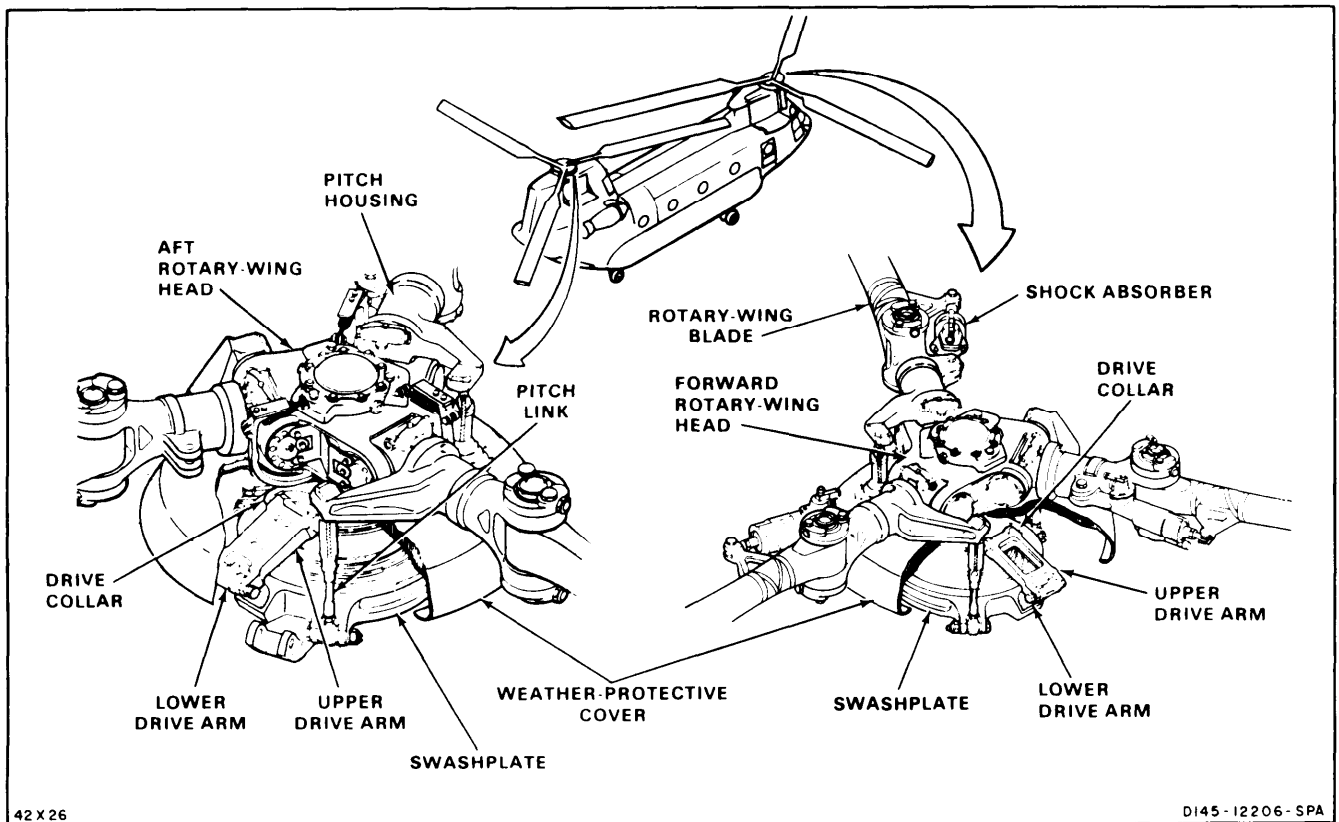**GO TO NEXT PAGE**

Three pitch links are installed on each rotary-wing head. Forward and aft pitch links are similar except for the angle between rod ends. Each pitch link is adjustable to change the pitch of an individual blade. Moving the turnbuckle toward the + mark makes the pitch link longer and increases blade pitch. A turn in the - direction shortens the pitch link and decreases blade pitch.


**DRIVE COLLAR AND DRIVE ARMS**

The drive collar transmits torque to the swashplate through the upper and lower drive arms. The drive arms are hinged to allow the swashplate to slide up and down on the slider shaft. The splined drive collars mate with splines on the transmission rotor shafts. A flange is located on the drive collar

for installation of the weather-protective cover. Drive collar lugs are provided for connecting the upper drive arm. The upper drive arm is connected at the other end to the lower drive arm. Both connections are hinged. A ball spherical bearing on the lower drive arm is connected to the swashplate. This arrangement allows swashplate to tilt.

**WEATHER-PROTECTIVE COVER**

The weather-protective cover is bolted to the drive collar flange and turns with the collar and shaft. The cover provides weather-protection for the upper controls. Flexible boots protect the upper portion of the pitch links where they pass through the cover.

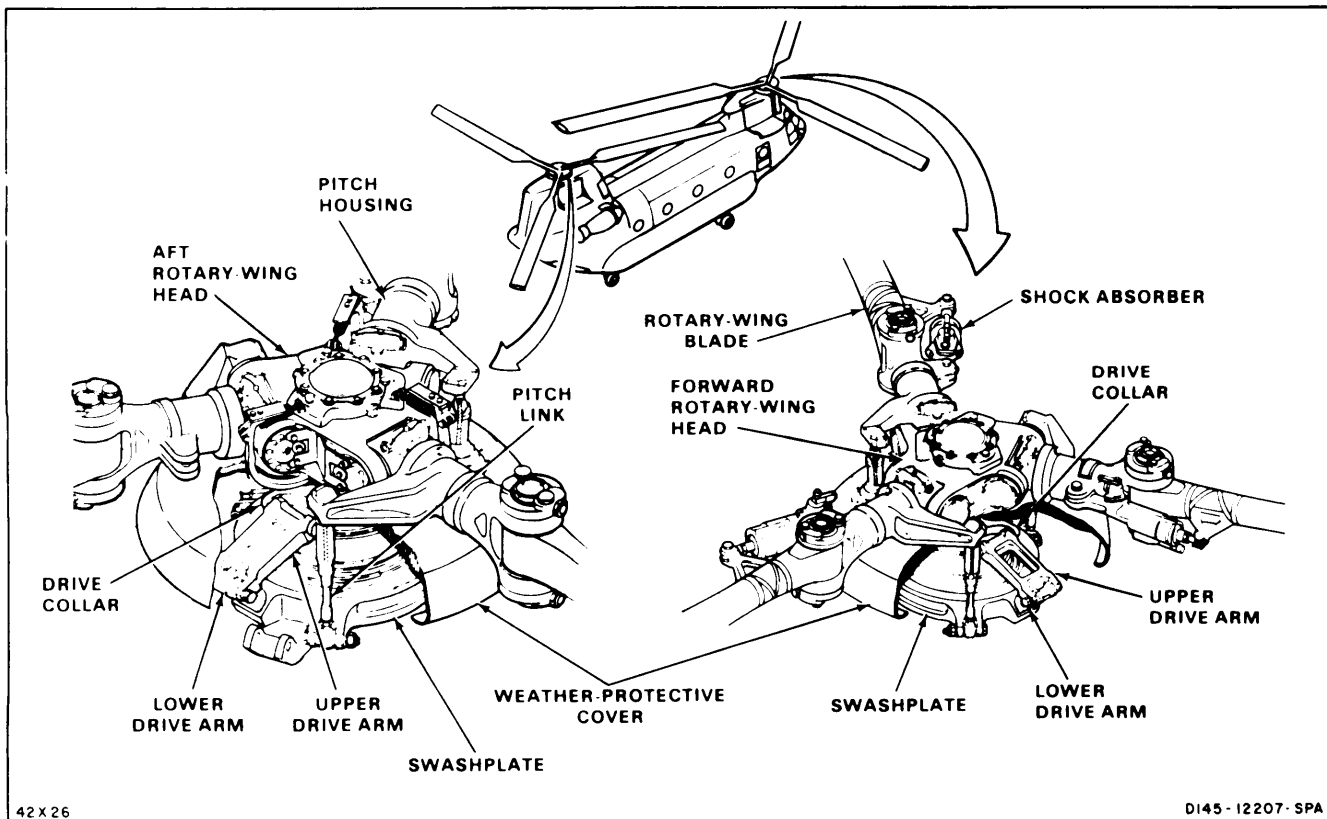

42 X 26

DI45-12207-SPA

**GO TO NEXT PAGE**

## 5-1 ROTARY-WING HEAD AND CONTROLS (Continued)


5-1

**LUBRICATION SYSTEM**

A single hub oil tank lubricates the horizontal pin bearings. Each pitch-varying housing has a pitch bearing oil tank and two vertical pin bearing oil tanks. The vertical pin tanks are connected to each other by an oil manifold tube. Sight indicators are provided for each tank, to check oil level. The swashplate is lubricated with grease.

**SELF-RETAINING BOLTS**

Bolts connecting upper controls and shock absorbers are the positive-retention or impedance types. These bolts have a pawl or lock ring to keep the bolt in place, even with the nut removed. Bolts are installed with bolt heads facing the direction of rotation (Task 1-14).

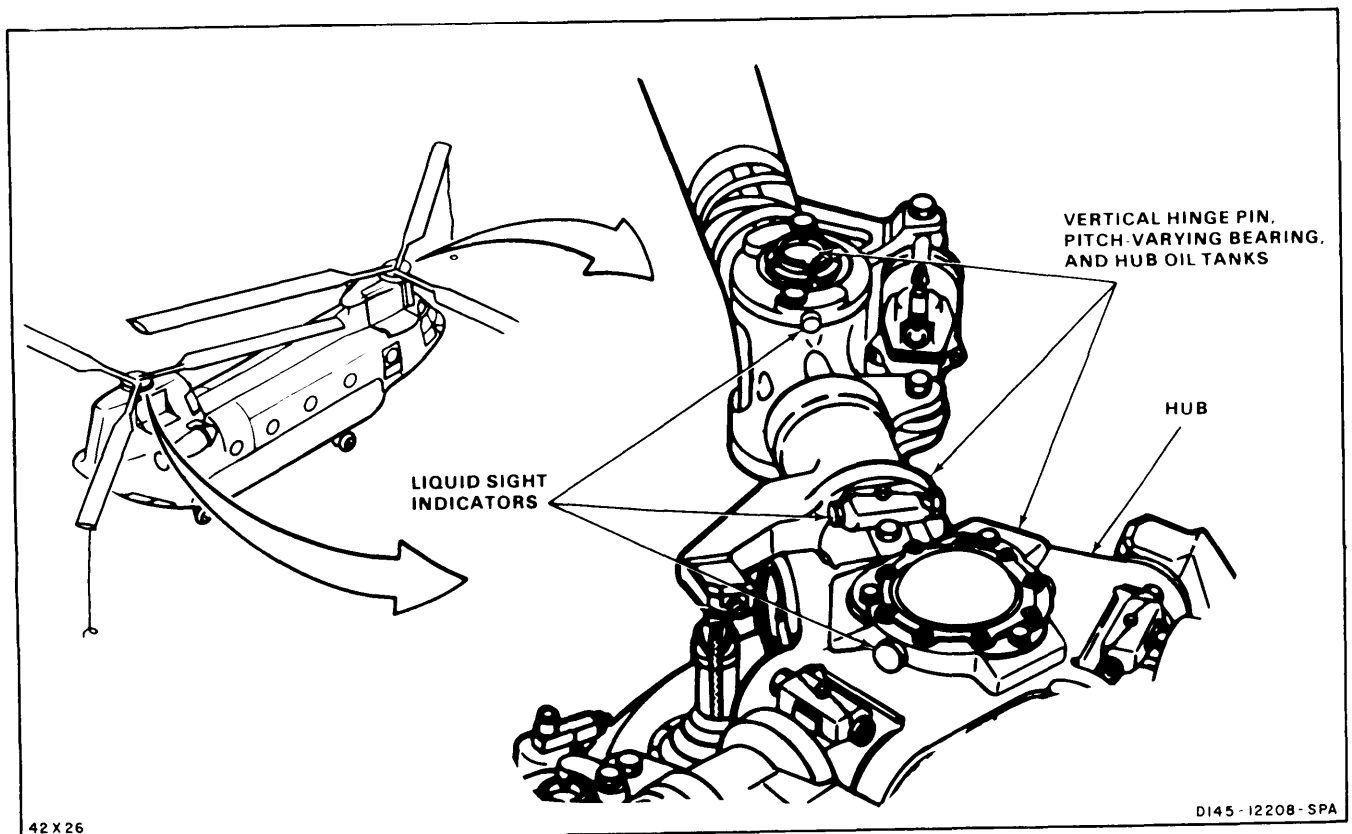**END OF TASK**

5-5



**SECTION II**  
**ROTARY-WING HEAD AND CONTROLS**

**5-2 PREPARE ROTARY-WING HEADS FOR SHIPMENT OR STORAGE 5-2**

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

- Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692
- Rotor Head Lifting Device (T30)
- Rotary-Wing Head Shipping Container (T73)
- Hoist
- Low Pressure Air Supply

**Materials:**

- Lubricating Oil (E254)
- Solvent (E162)
- Cloths (E120)
- Corrosion-Preventive Compound (E153)
- Desiccant (E160) (Six 16 Unit Bags)
- Barrier Material (E80)
- Foam (E181)
- Tape (E395)
- Boxes (E82)
- Gloves (E186)

**Personnel Required:**

- Medium Helicopter Repairer (2)

**Equipment Condition:**

- Rotary-Wing Head Mounted on Handling Adapter (T13) (Task 5-3)
- Vertical Hinge Pin and Nuts Removed from Head (Task 5-64)


**General Safety Instructions:**

**WARNING**

Solvent (E162) and corrosion-preventive compound (E153) are flammable and toxic. They can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**

Be careful when releasing air under pressure; wear goggles. Personal injury can result.

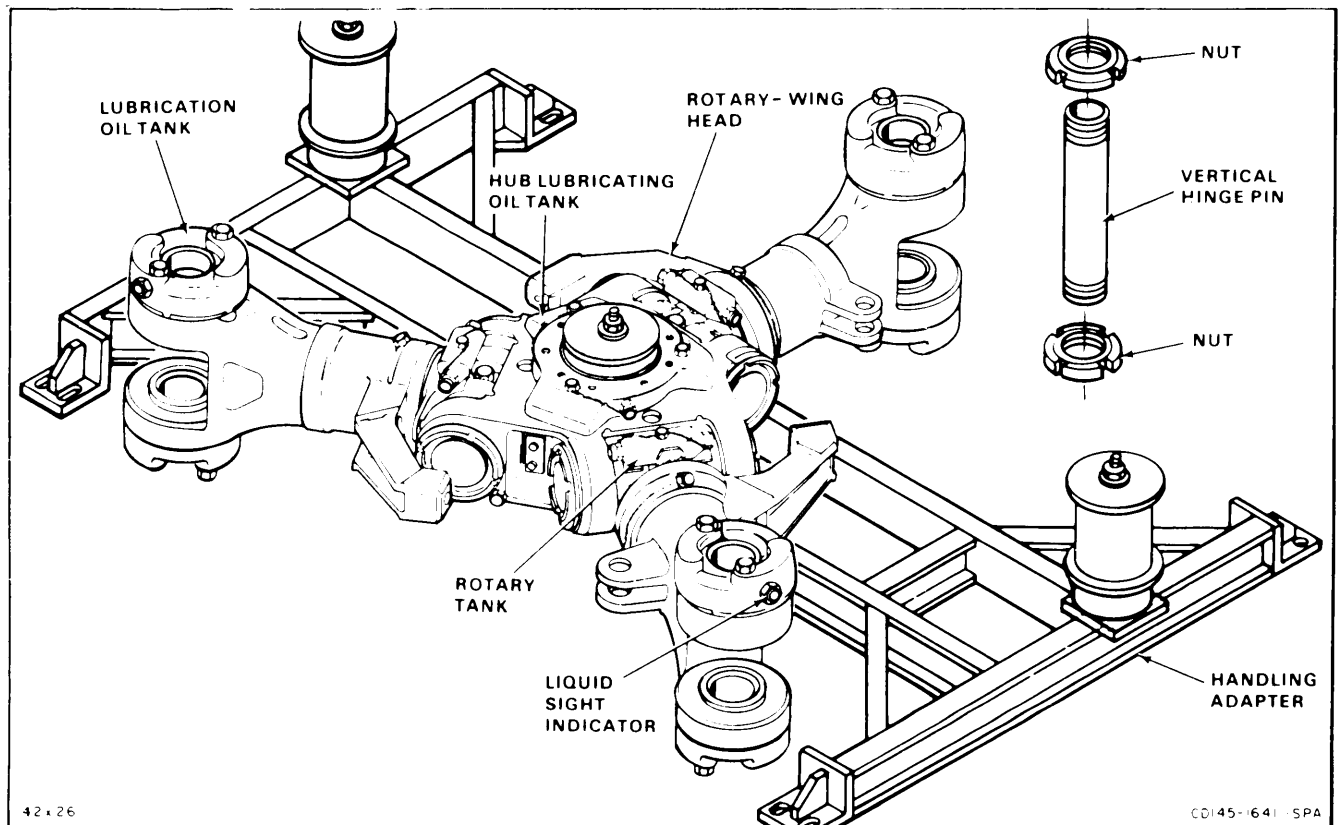

**5-2 PREPARE ROTARY-WING HEADS FOR SHIPMENT OR STORAGE 5-2  
(Continued)**

---


**WARNING**

- Oil (E254) is a skin irritant. If oil gets on skin, wash thoroughly. If oil soaks into cloths, change clothes immediately.
- Oil (E254) gives off fumes that can cause injury to personnel. Use oil in a well-ventilated area.


**GO TO NEXT PAGE**

**5-2 PREPARE ROTARY-WING HEADS FOR SHIPMENT OR STORAGE (Continued)**


1. Check that head (1) is level.
2. **Check oil level** in any of three indicators (2) **on tank (3)**. Oil level shall be up to center of indicator.

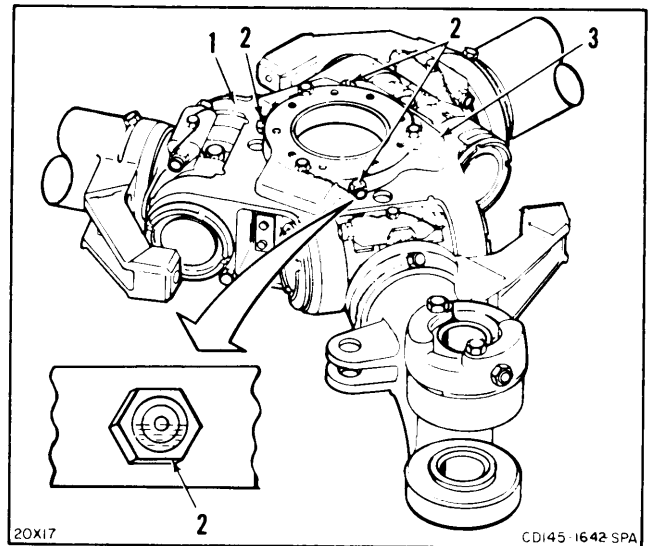

3. **Check oil level** in indicators (4) of three **tanks (5)**. Oil level shall be up to center of indicator.

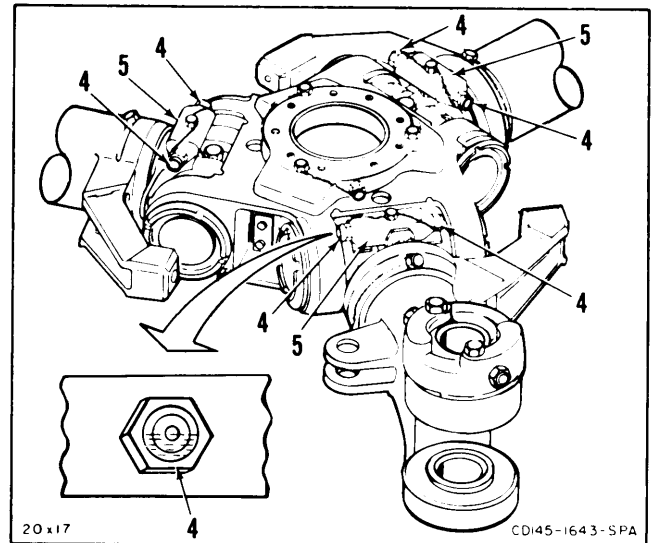

4. Check that housings (6) are level,
5. **Check oil level** in indicators (7) of three **tanks (8)**. Oil level shall be up to center of indicator.

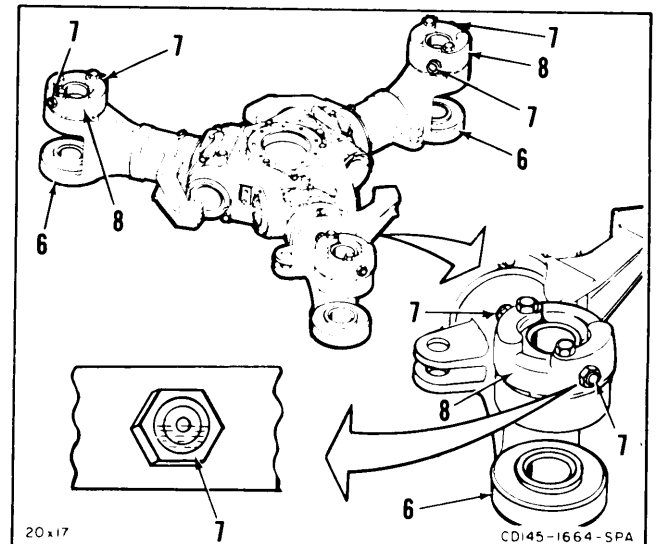

**GO TO NEXT PAGE**


**5-2 PREPARE ROTARY-WING HEADS FOR SHIPMENT OR STORAGE (Continued)**

6. Clean three vertical hinge pins (9) and six nuts (10). Use cloth (E120) damp with solvent (E162). Wear gloves (E186).
7. Apply thin coat of corrosion-preventive compound (E153) to pins (9) and nuts (10). Wear gloves (E186).


**CAUTION**

**Wrap each pin and each nut separately to prevent scratching of pins.**


8. Wrap three pins (9) and six nuts (10) in barrier material (E80).

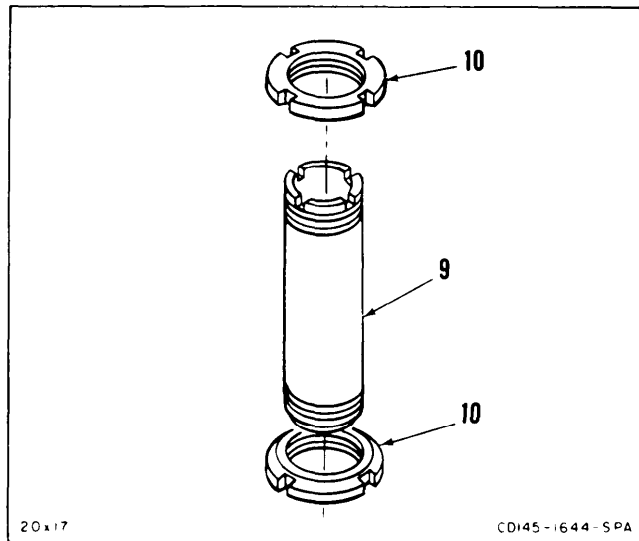

9. Clean outside parts of head (1) and inner bearing races (11 and 12). Use cloth (E120) damp with solvent (E162). Wear gloves (E186).
10. Apply coat of corrosion-preventive compound (E162) to races (11 and 12). Wear gloves (E186).
11. Remove nut (13), washer (14), and plate (15).

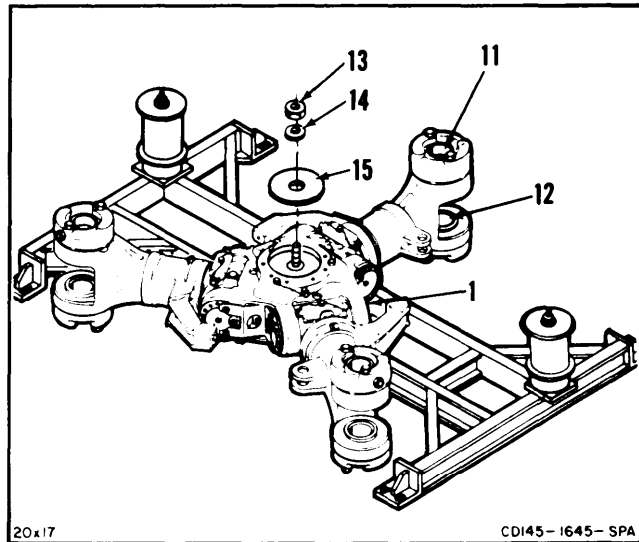

12. **Install lifting device (T30) (16) on head (1) as follows:**
  - a. Remove three pins (17) and turn support arms (18) outward.
  - b. Position lifting device (16) on head (1).
  - c. Turn arms (18) inward under head (1). install pins (17).

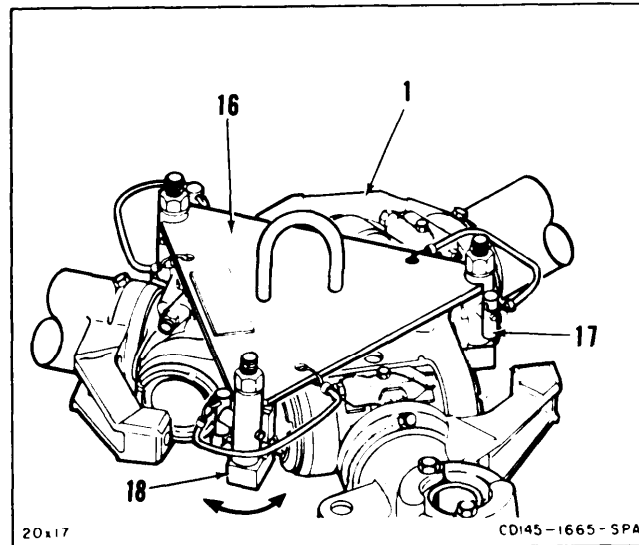

**GO TO NEXT PAGE**




## 5-2 PREPARE ROTARY-WING HEADS FOR SHIPMENT OR STORAGE (Continued)

5-2

### WARNING

Head is heavy and can injure personnel if it drops. Head must be supported by hoist and moved carefully to prevent injury to personnel.

13. Lift head (1). Use mobile hoist device (19). Clean splines (20). Use cloth (E120) damp with solvent (E162). Wear gloves (E186).
14. Coat splines (20) with corrosion-preventive compound (E153).
15. Remove 24 bolts (21), washers (22), lockwashers (23), and nuts (24). **Remove cover (25).**
16. Check that container (26) is clean and dry. Remove any dirt or moisture.
17. Remove nut (27), washer (28), clamp plate (29), and upper hub cushion (30).
18. Remove six nuts (31) and washers (32) from three clamp angles (33). Remove angles and upper lug cushions (34).
19. Check that lower hub cushion (35) and three lug cushions (36) are in place.

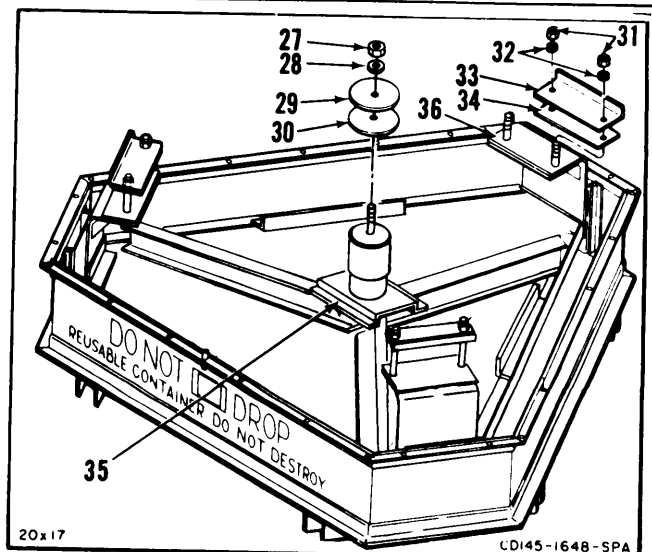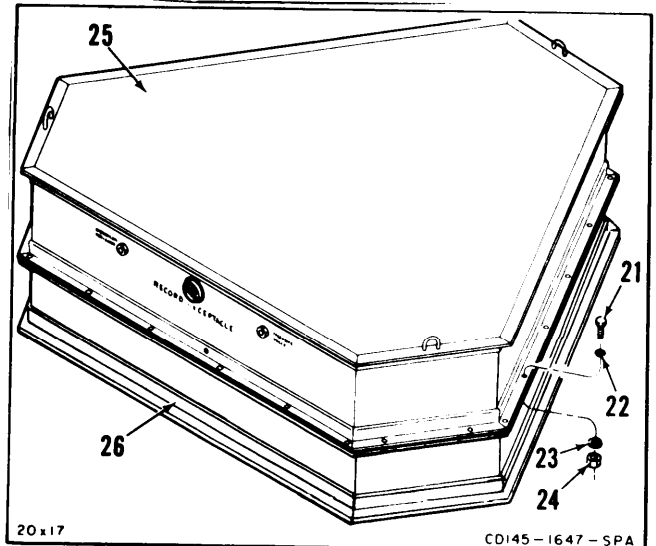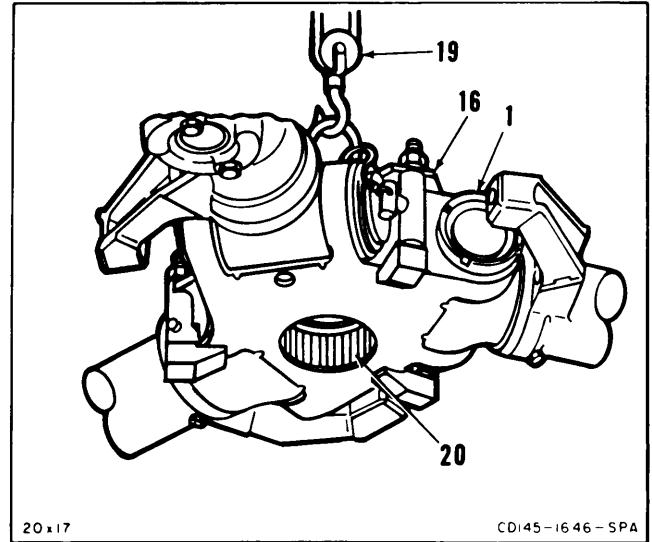


**GO TO NEXT PAGE**

**5-2 PREPARE ROTARY-WING HEADS FOR SHIPMENT OR STORAGE (Continued)**


**CAUTION**

Head can be easily damaged.  
Move head slowly and carefully to prevent it from hitting container.

- 20. Position head (1) in container (T73) (26). Use lifting device (T30) (16) and hoist (19). Have helper guide head.
- 21. Remove three pins (17). Turn three SUPPORT arms (18) outward. Remove lifting device (16).

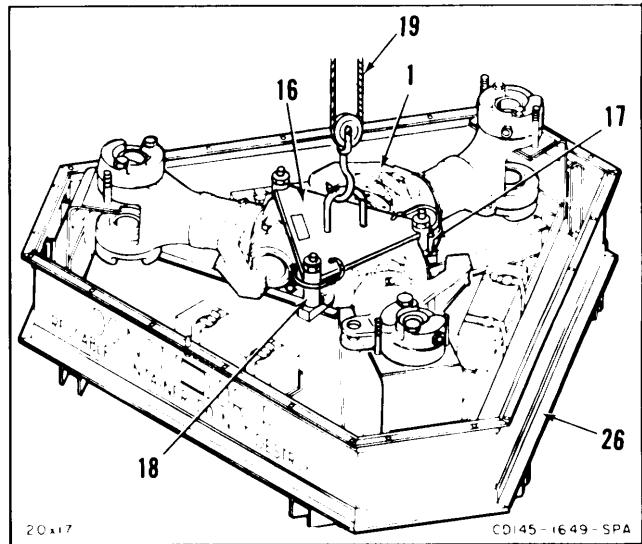

- 22. Install cushion (30), plate (29), washer (28), and nut (27).
- 23. Install three cushions (34) and clamp angles (33). Secure with six washers (32) and nuts (31). Tighten nuts just enough to compress cushions.

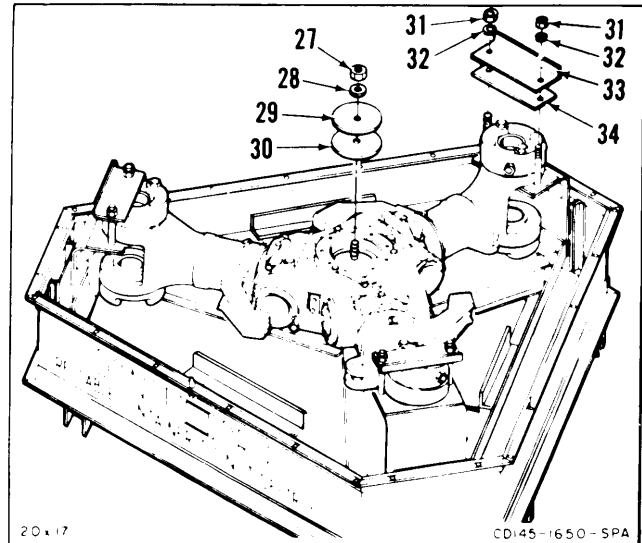


- 24. Wrap each of three pins (9) with foam (E181) (37).

**NOTE**

Pack only one pin in each box

- 25. Pack three pins (9) in three boxes (E82) (38). Seal boxes with tape. Tape two nuts (10) on top of each box. Use tape (E395).
- 26. position three boxes (38) in container (T73) (26). Secure boxes with straps (39).

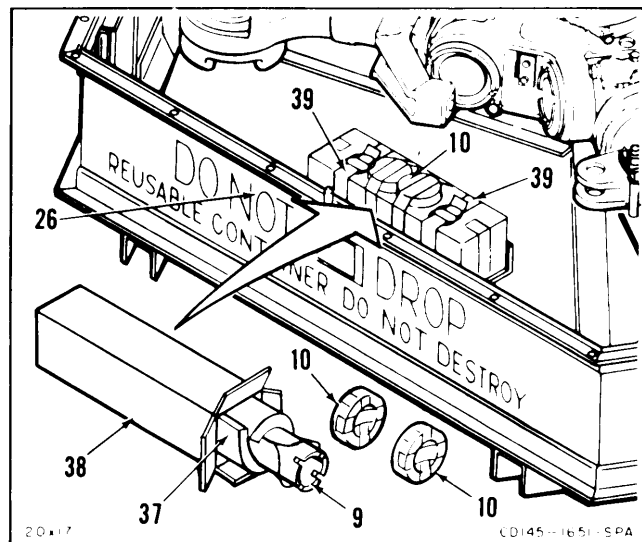


**GO TO NEXT PAGE**


## 5-2 PREPARE ROTARY-WING HEADS FOR SHIPMENT OR STORAGE (Continued)

5-2


27. Install packing (40), cover (41), and retainer (42) on tank (3). Secure with nine screws (43), and washers (44).

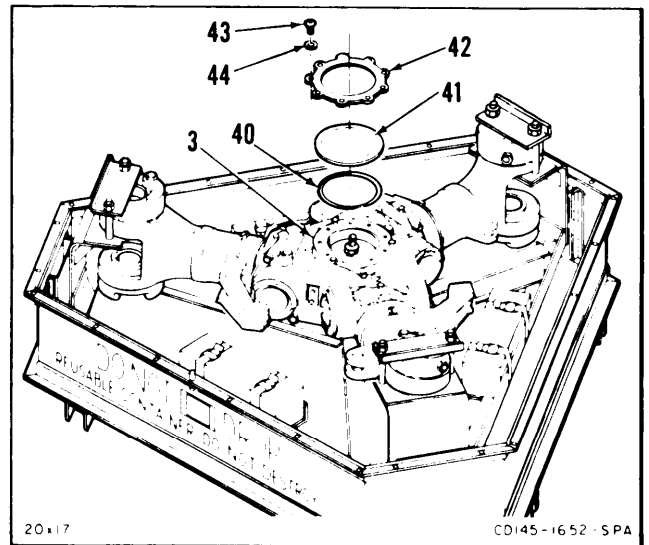

28. Put six 16 unit bags of desiccant (E160) in basket (45) inside container (26).

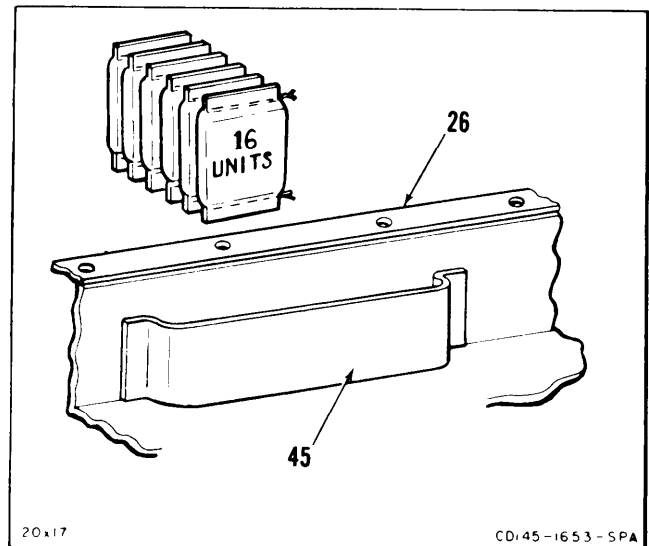

29. On container (114G1017-70), check that gasket (46) is seated on flange of container (26). On container (114G1017-50), check that gasket (43) is seated on flange of cover (25). Check gasket for cracks, nicks, or tears.

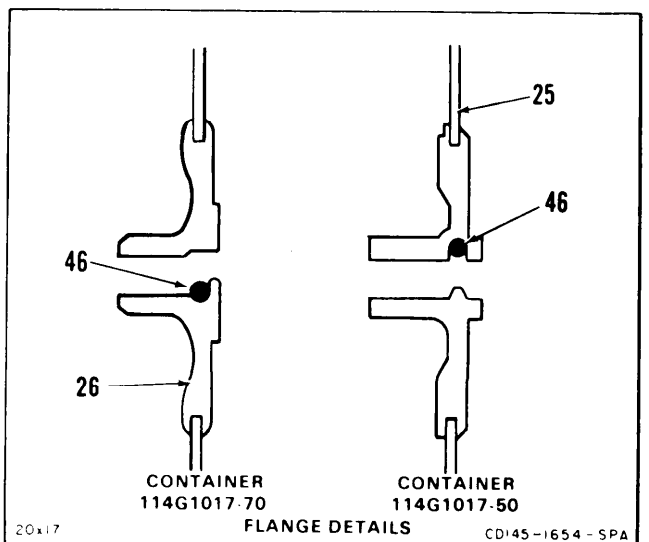


**GO TO NEXT PAGE**



**5-2 PREPARE ROTARY-WING HEADS FOR SHIPMENT OR STORAGE 5-2**  
**(Continued)**

30. Align record receptacle (47) with locator pin (48). **Install cover (25)** on container (26). Install 24 bolts (21), washers (22), lockwashers (23), and nuts (24). Tighten every fifth bolt until all are tight.

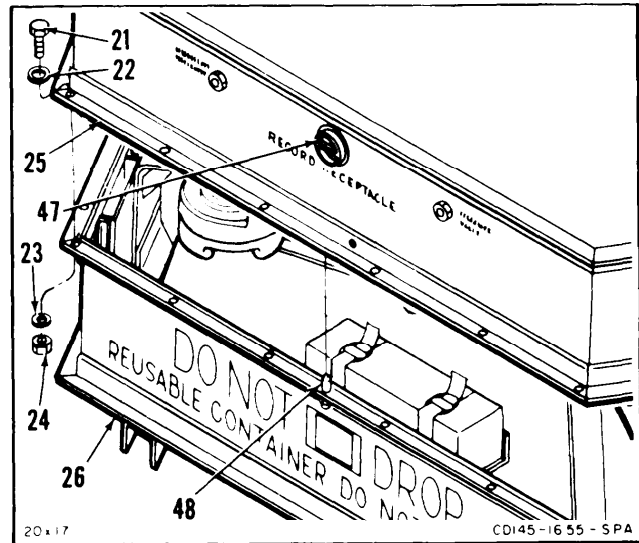

31. **Remove plug (49)** from cover (25).  
 32. **Connect air test line (50)** to cover (25).

**CAUTION**


Low pressure air supply must be used. Exceeding test pressure can damage container.

33. Pressurize container (26) to **3 psi max.** Check container for leaks. Container must hold **3 psi** for **1 hour.**

**WARNING**

Be careful when releasing air under pressure; wear goggles. Personal injury can result.

34. **Push pressure relief valve (51)** until pressure in container (26) is **0 psi.**  
 35. **Disconnect air line (50)** from cover (25).  
 36. **Install plug (49)** in cover (25).

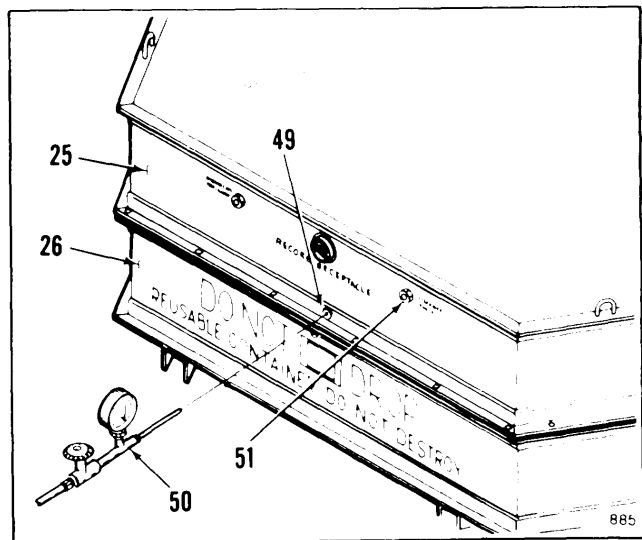

**FOLLOW-ON MAINTENANCE:**

None

**END OF TASK**

## 5-3 REMOVE ROTARY-WING HEAD FROM SHIPPING CONTAINER

5-3

### INITIAL SETUP

#### **Applicable Configurations:**

All

#### **Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Rotor Head Lifting Device (T30)  
Handling Adapter (T13)

#### **Materials:**


None

#### **Personnel Required:**

67U10 Medium Helicopter Repairer  
67U20 Medium Helicopter Repairer

#### **Equipment Condition:**

Rotary-Wing Head Installed in Container (T73)  
(Task 5-2)

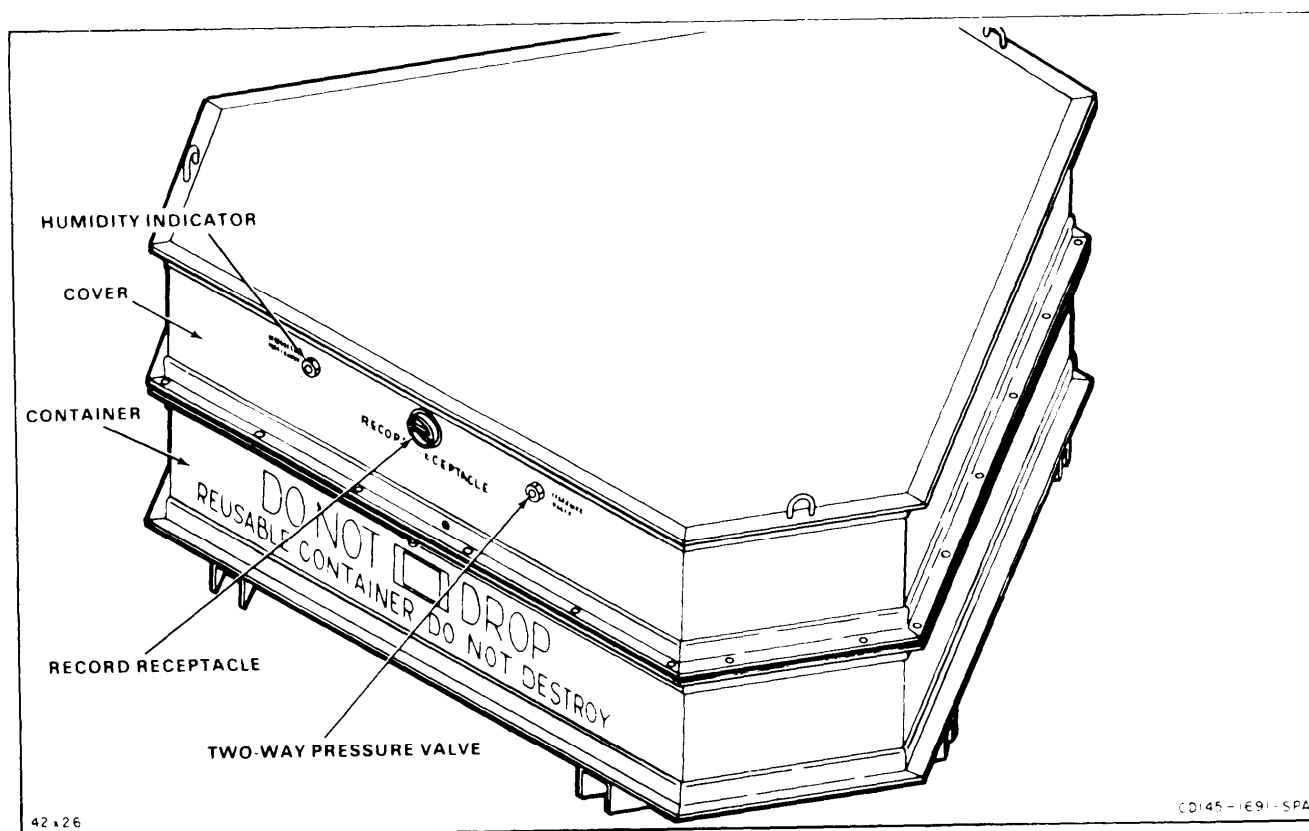


**GO TO NEXT PAGE**

**5-3 REMOVE ROTARY-WING HEAD FROM SHIPPING CONTAINER**  
**(Continued)**


**WARNING**

Be careful when releasing air under pressure; wear goggles. Personal injury can result.


1. Press air valve (1) in cover (2) of container (3).
2. Turn cap (4) counterclockwise. Remove rotary-wing head log from receptacle (5).

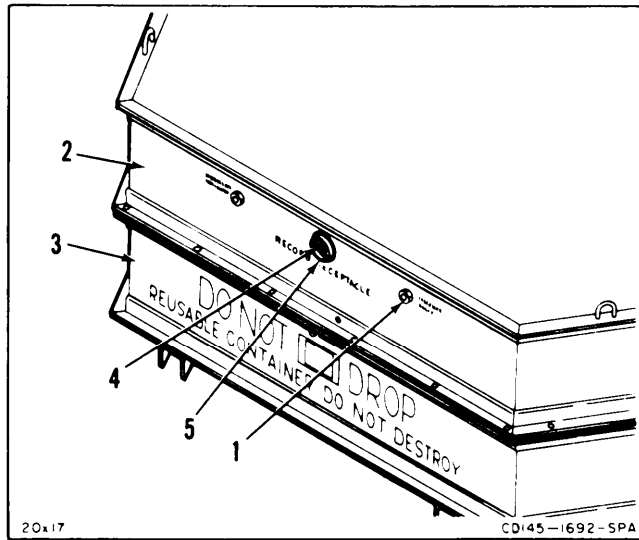

3. Remove 24 nuts (6), lockwashers (7), bolts (8), and washers (9) from flanges of container (3). Remove cover (2).

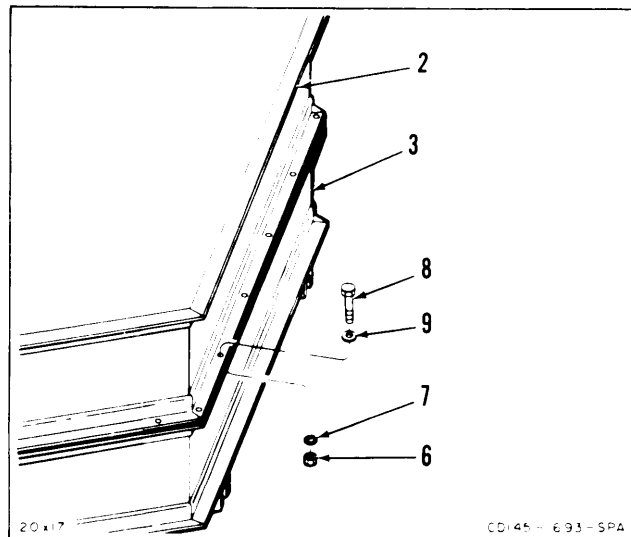


4. Remove desiccant (10) from basket (11).

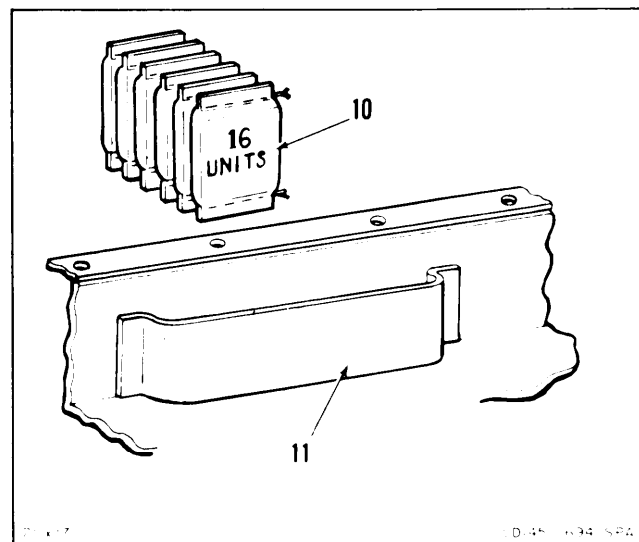

**GO TO NEXT PAGE**

**5-3 REMOVE ROTARY-WING HEAD FROM SHIPPING CONTAINER  
(Continued)****5-3**


5. Open straps (12). Remove box (13). Remove nuts (14). Open box. Remove pin (15) and foam (16).

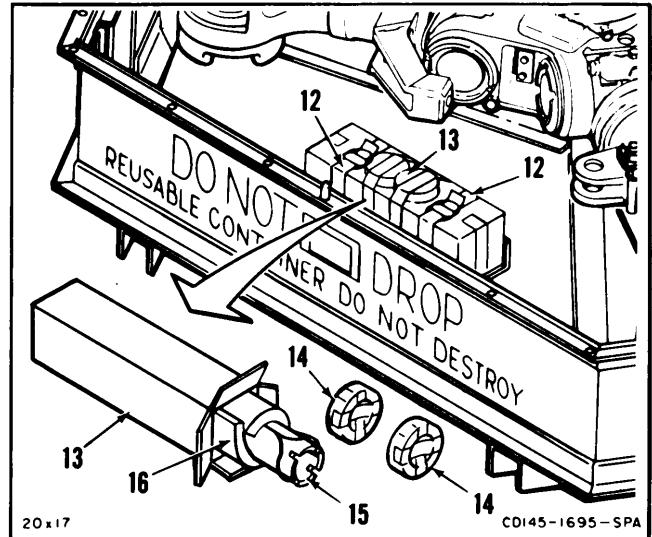**GO TO NEXT PAGE**



**5-3 REMOVE ROTARY-WING HEAD FROM SHIPPING CONTAINER**  
**(Continued)**

6. Remove nine screws (17) and washers (18) from retainer (19). **Remove retainer (19), cover (20), and packing (21).**
7. Remove six nuts (22) and washers (23) from three clamp angles (24). **Remove clamp angles and cushions (25).**
8. Remove nut (26) and washer (27) from clamp plate (28). **Remove clamp plate and cushion (29).**

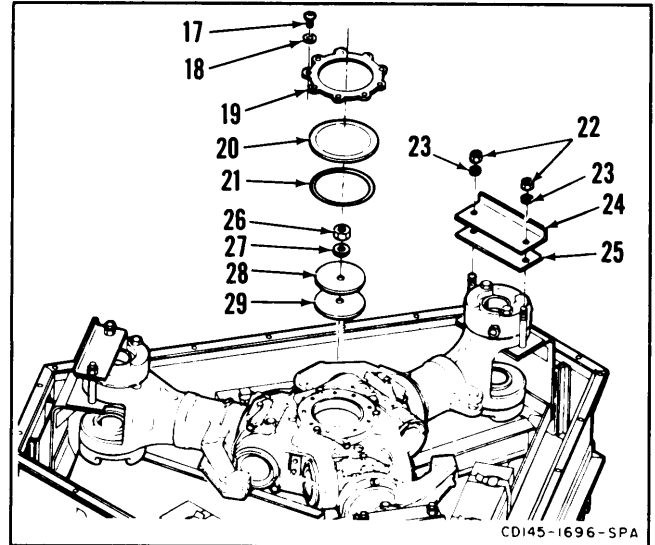

9. **Install lifting device (T30) (30) on rotor head (31) as follows:**
  - a. Remove three pins (32). Rotate three arms (33) outward.
  - b. Position lifting device (30) on head (31).
  - c. Turn three arms (33) inward under top flange (33.1) of head (31). Make sure each arm points to the center of device (30) within **20 degrees**. Make sure each arm engages flange at least **1/4 inch**.
  - d. Install three pins (32).

**CAUTION**



**Do not use wrench to tighten nuts. Lifting device (T30) can be damaged.**

- e. Hand-tighten three nuts (33.2).

**WARNING**

**Head is heavy and can injure personnel if it drops. Head must be supported by hoist and moved carefully to prevent injury to personnel.**


10. **Remove head (31) from container (3).** Use lifting device (T30) (30) and mobile hoist device (34).

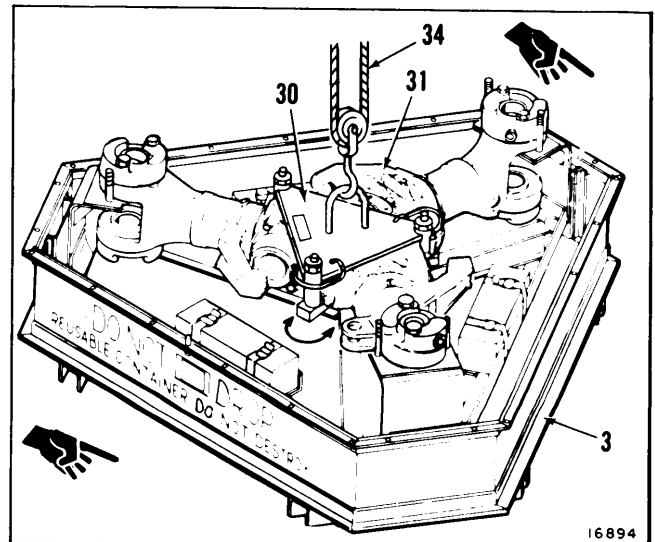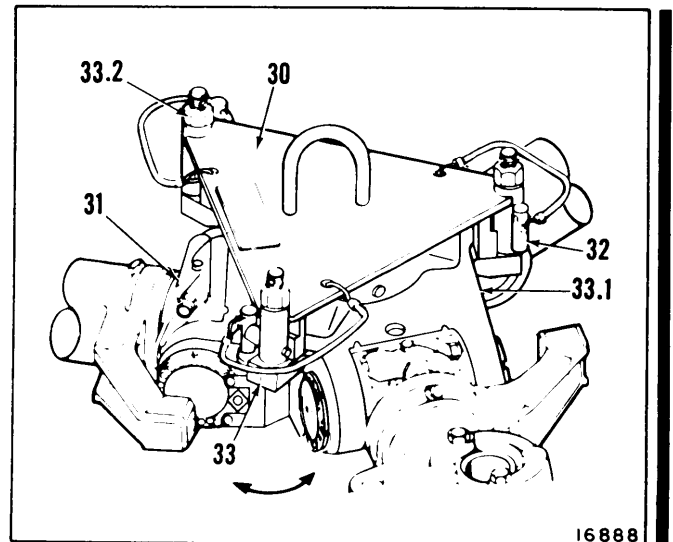

**GO TO NEXT PAGE**

**5-3 REMOVE ROTARY-WING HEAD FROM SHIPPING CONTAINER (Continued)**


11. Remove nut (35), washer (36), and plate (37) from shaft (38) of handling adapter (T13) (39).

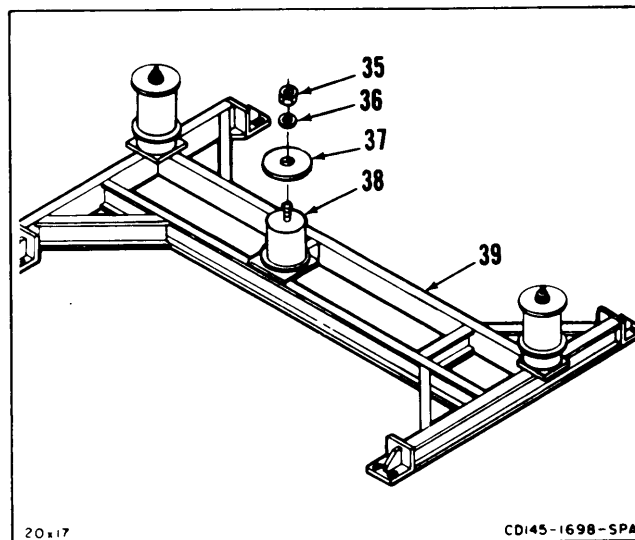


**CAUTION**

Head can be easily damaged. Move head slowly and carefully to prevent it from hitting handling adapter.

12. Position head (31) on any one of three shafts (38). Have helper guide head.
13. Remove three pins (32). Turn three arms (33) outward. Remove lifting device (30).

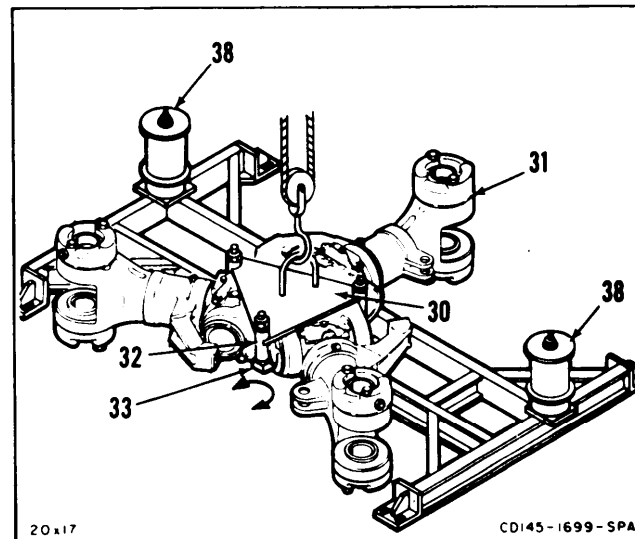

14. Secure head (31) to handling adapter (T13) (39) with plate (40), washer (41), and locknut (42).

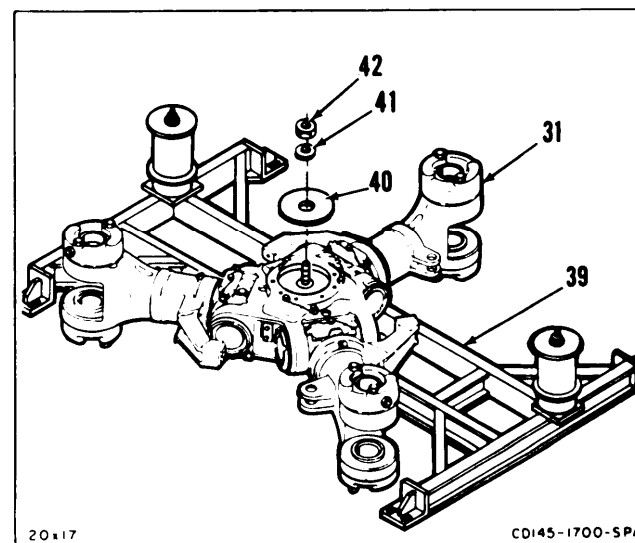


**GO TO NEXT PAGE**


**5-3 REMOVE ROTARY-WING HEAD FROM SHIPPING CONTAINER (Continued)**

5-3

- 15. Install three pins (15) in lugs (43 and 44), Install six nuts (14) on pins and hand tighten.
- 16. Install packing (21), cover (20), and retainer (19).
- 17. Install nine screws (17) and washers (18).

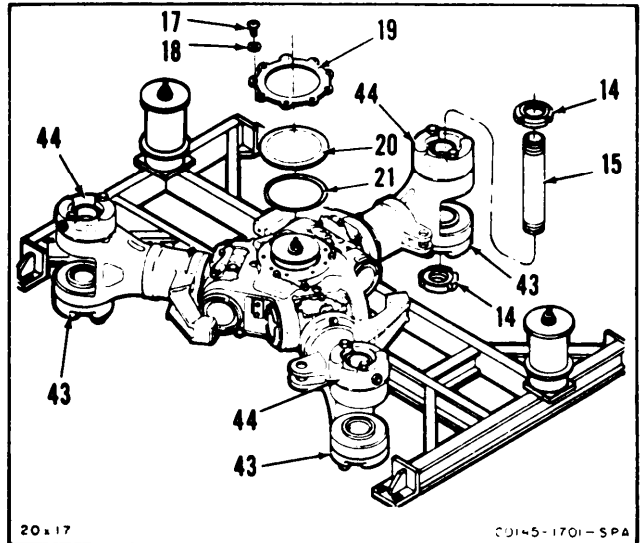


- 18. Install cushion (29), clamp plate (28), washer (27), and nut (26) on stud (45). Hand-tighten nut.
- 19. Install three cushions (25) and clamp angles (24), on studs (46). Install six washers (23) and nuts (22). Hand-tighten nuts.

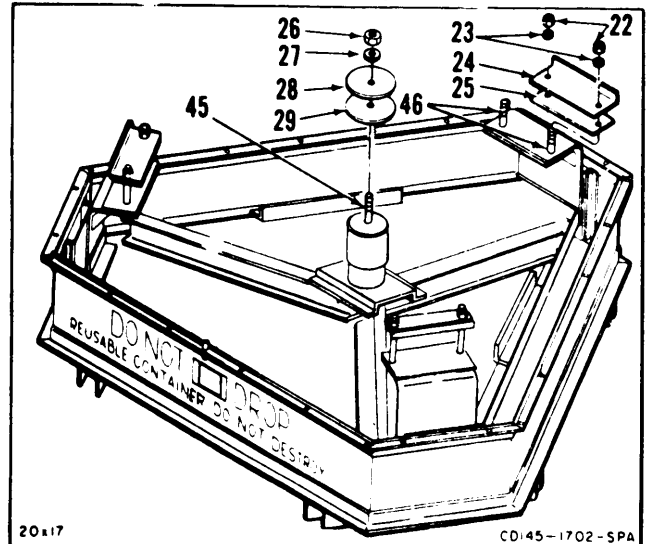

- 20. Position cover (2) on container (3). Secure with 24 washers (9), bolts (8), lockwashers (7), and nuts (6). Hand-tighten nuts.

**FOLLOW-ON MAINTENANCE:**

None

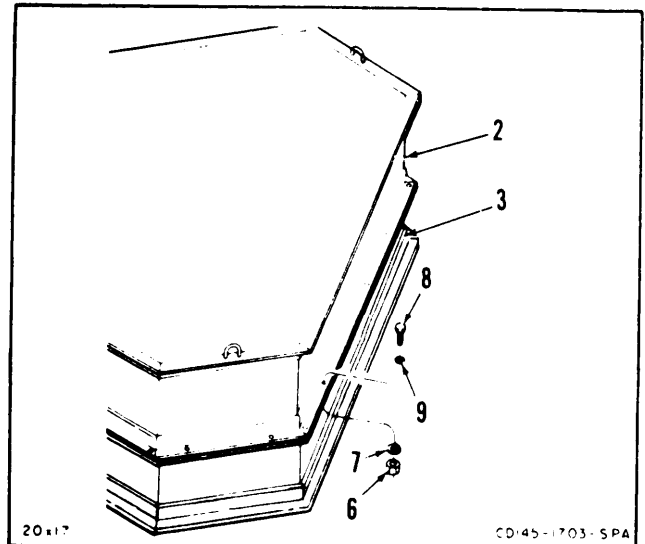

**END OF TASK**



INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692
- Rotor Head Lifting Device (T30)
- Hoist
- Rotary Head Assembly Adapter (T13)

**Materials:**

- Dry Cleaning Solvent (E162)
- Cloths (E120)
- Lockwire (E231)
- Gloves (E186)

**Personnel Required:**

- Medium Helicopter Repairer (2)
- Inspector

**References:**

- Task 5-9
- Task 1-55
- Task 1-56
- Task 1-57


**Equipment Condition:**

Off Helicopter Task

**General Safety Instructions:**

**WARNING**

Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

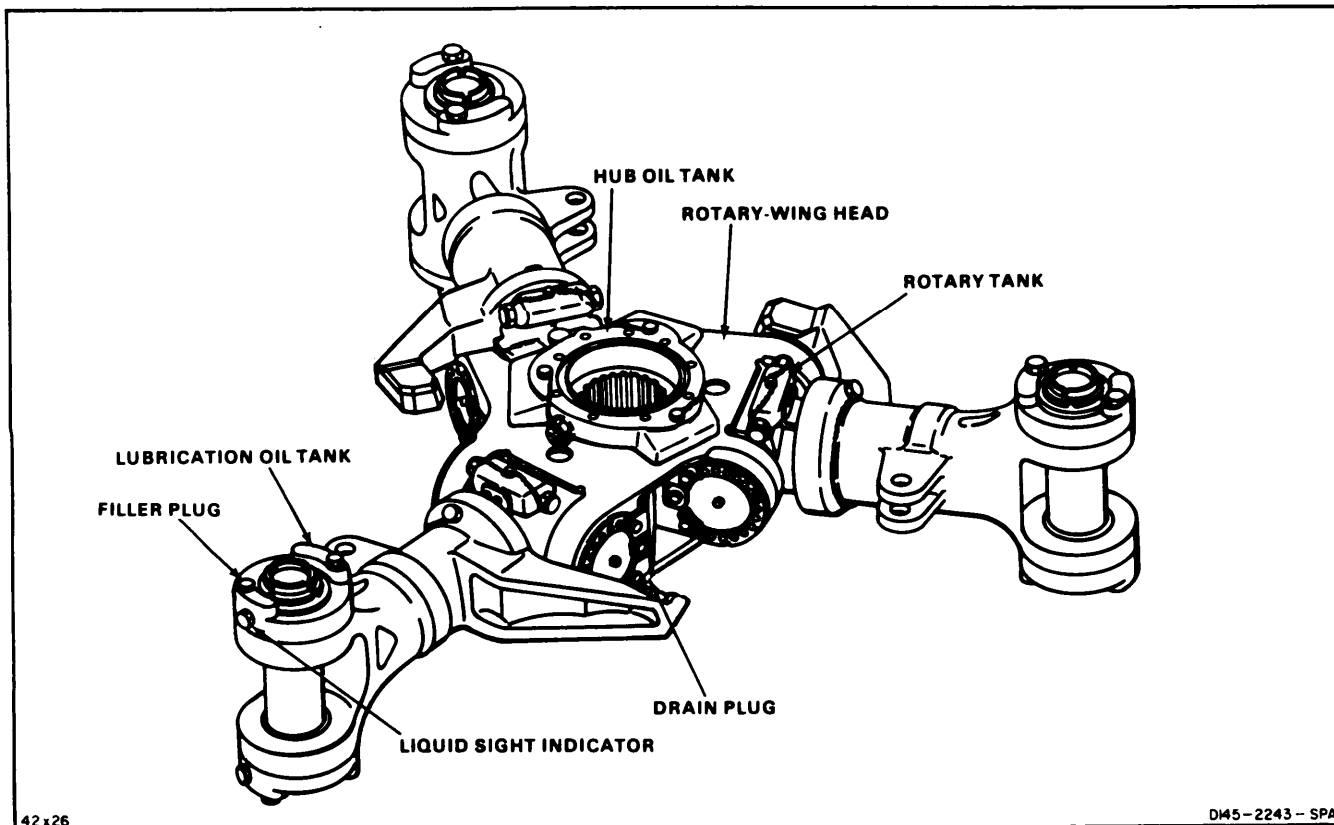

42x26

DM5-2243-SPA

**GO TO NEXT PAGE**

## 5-4 PLACE ROTARY-WING HEAD IN SERVICE (Continued)

5-4

**NOTE**

Procedure is same for forward and aft rotor heads.

1. **Install lifting device (T30) (1)** on rotor head (2) as follows:
  - a. Remove three pins (3). Turn support arms (4) outward.
  - b. Position lifting device (1) on rotor head (2).
  - c. Turn three arms (4) inward under top flange (4.1) of head (2). Make sure each arm points to the center of device (1) within 20 degrees. Make sure each arm engages flange at least 1/4 inch.
  - d. Install three pins (3).

**CAUTION**

Do not use wrench to tighten nuts. Lifting device (T30) can be damaged.

- e. Hand-tighten three nuts (4.2).

**WARNING**




Rotor head is heavy and can injure personnel if it drops. Rotor head must be supported by hoist and moved carefully to prevent injury.

2. Attach work hoist (5) to lifting device (T30) (1). **Lift rotor head (2) and clean splines (6).** Use cloth (E120) damp with solvent (E162). Wear gloves (E186).

**CAUTION**

Move rotor head slowly and carefully to prevent damage caused by rotor head hitting handling adapter.


3. **Position rotor head assembly (2) on handling adapter (T13) (7).** Have helper guide rotor head.
4. Check that rotor head (2) is level,
5. **Remove lifting device (T30) (1)** as follows:
  - a. Remove three pins (3) and turn arms (4) outward.
  - b. Remove lifting device (T30) (1).

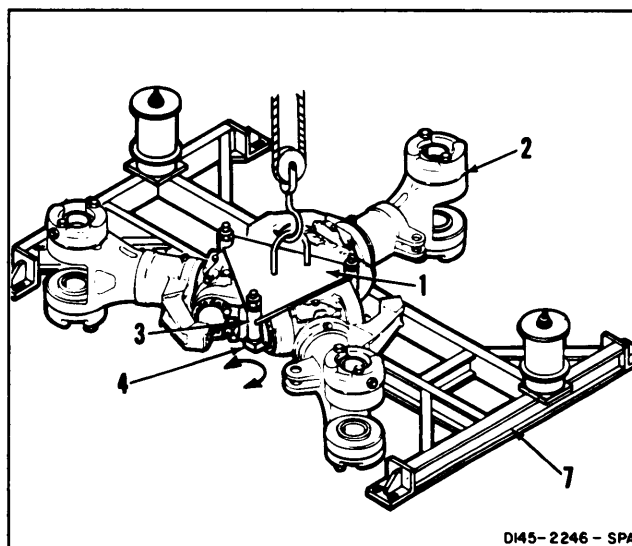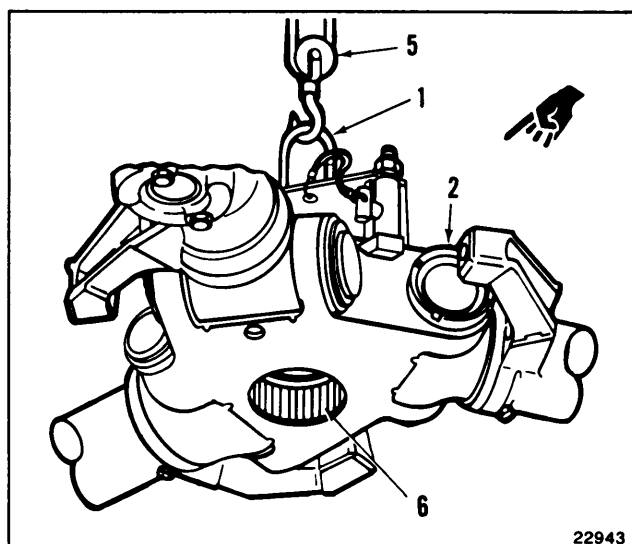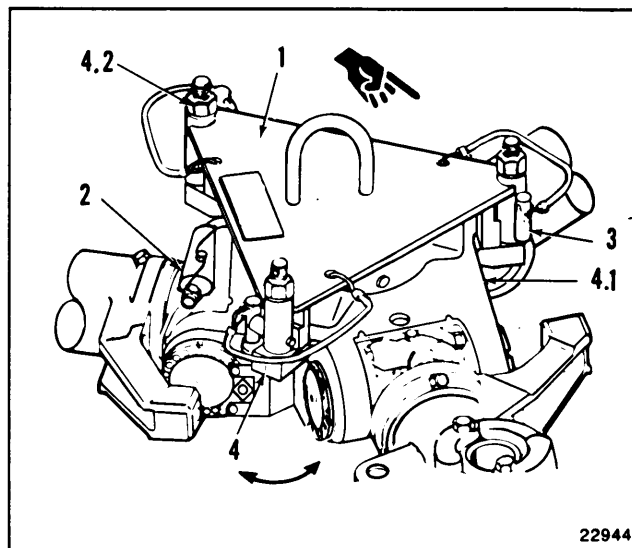

**GO TO NEXT PAGE**

**5-4 PLACE ROTARY-WING HEAD IN SERVICE (Continued)**


6. **Install plate (8), washer (9), and locknut (10) on handling adapter (T13) (7).**

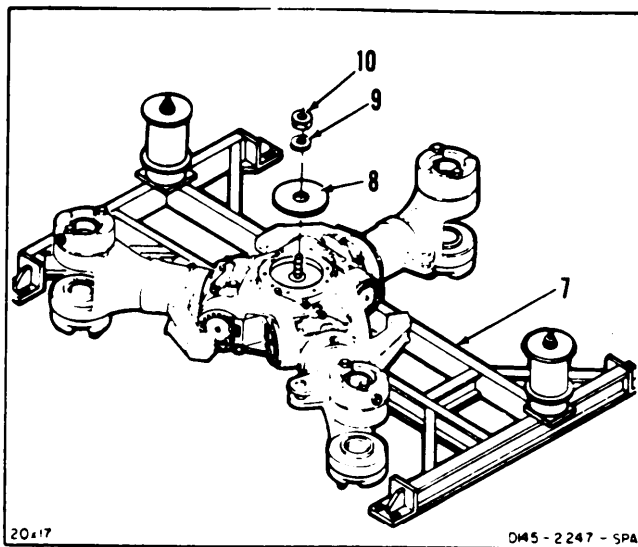

7. Clean outside parts of head (2) and inner bearing races (11 and 12). Use cloth (E120) damp with solvent (E162). Wear gloves (E186).

8. Clean three pins (13) and six nuts (14). Use cloth (E120) damp with solvent (E162). Wear gloves (E186).


9. **Install three pins (13) in lugs (15 and 16). Install six nuts (14) on pins and hand tighten.**

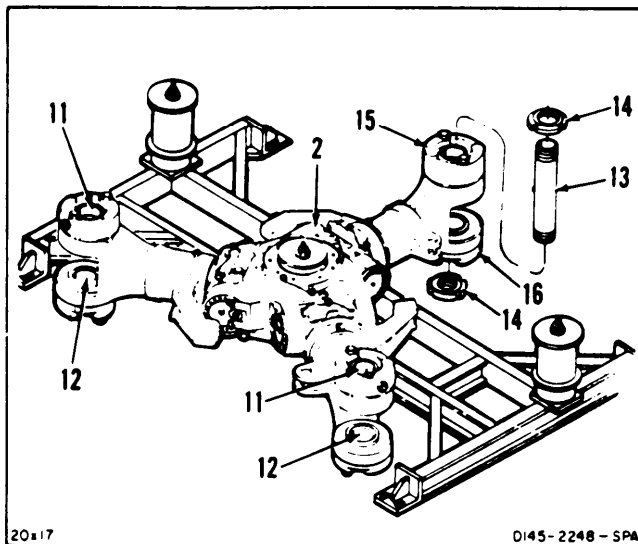

10. Check that head (2) is level.

11. **Check oil level in any of three indicators (17) on tank (18).** If oil level is not up to center of indicator, service tank (Task 1-55).

12. **Check that three plugs (19) and three indicators (17) are lockwired.**

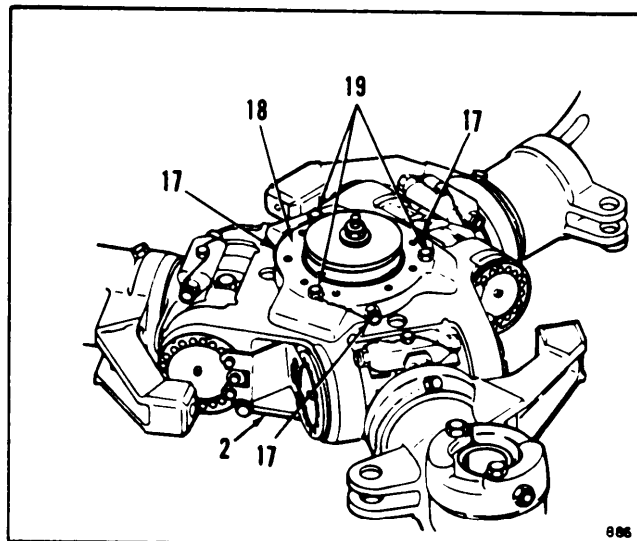


**GO TO NEXT PAGE**

**5-4 PLACE ROTARY-WING HEAD IN SERVICE (Continued)**


**5-4**

- 13. Check oil level in indicators (20) on three tanks (21). If oil level is not up to center of indicator, service tank (Task 1-56).
- 14. Check that six plugs (22), three plugs (23), and six indicators (20) are lockwired.

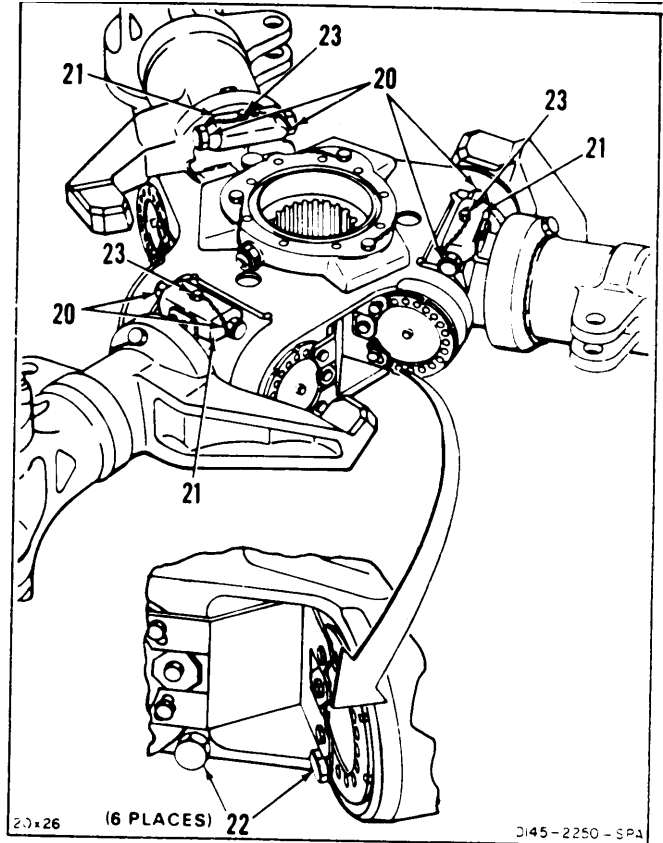

- 15. Check that three housings (24) are level.
- 16. Check oil level in six indicators (25) on three tanks (26). If oil level is not up to center of indicator, service tank (Task 1-57).
- 17. Check that 12 indicators (25), six plugs (27), and 12 plugs (28) are lockwired.


**INSPECT**

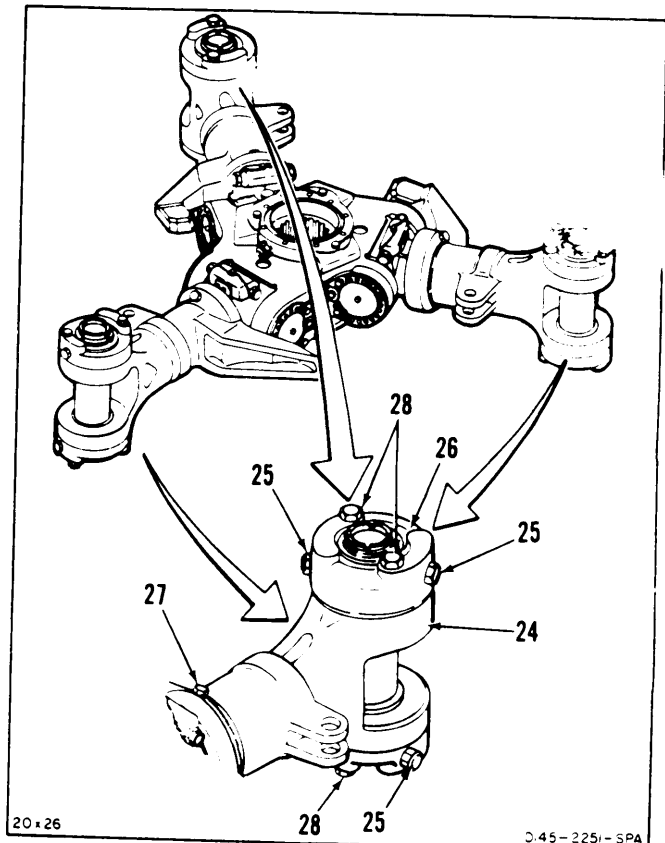


**GO TO NEXT PAGE**

### 5-4 PLACE ROTARY-WING HEAD IN SERVICE (Continued)

- 18. Remove nut (10), washer (9), and plate (8) from handling adapter (T13) (7).
- 19. Install head (2) on helicopter (Task 5-9).

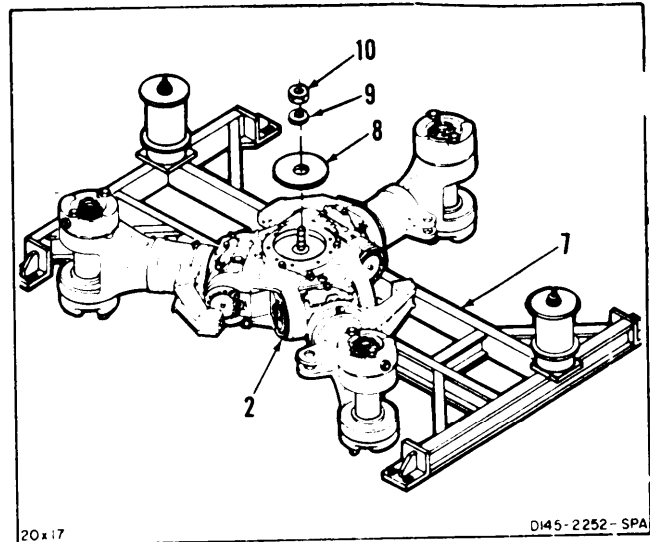


- 20. Install plate (8), washer (9), and nut (10) on handling adapter (T13) (7).

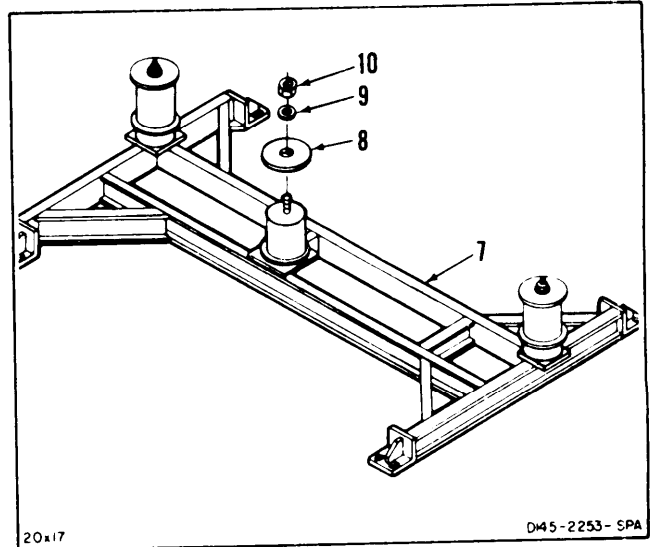

#### FOLLOW-ON MAINTENANCE:

None

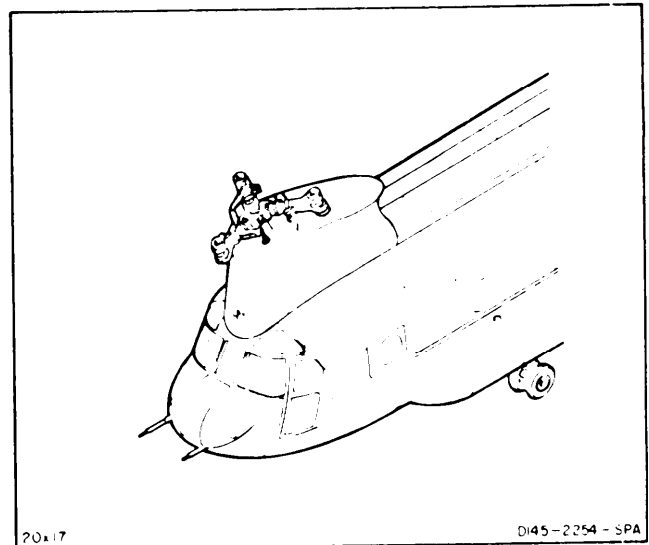

**END OF TASK**

**5-5 PRESSURE TEST ROTARY-WING HEAD SEALS AND PACKINGS 5-5****INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Pump, Manual Inflating  
Dial Indicating Pressure Gage, 0 to 30 Psi  
Air Hose, 4 Feet Long (Appx E-4)  
Stopwatch  
Torque Wrench, 5 to 50 Inch-Pounds  
Torque Wrench, 30 to 150 Inch-Pounds  
Pressurizing Fitting (Appx E-4)  
Pressurizing Fitting (Appx E-4)  
Pressurizing Fitting (Appx E-4)

**Materials:**

Lockwire (E231)

**Parts:**

Packings

**Personnel Required:**

Aircraft Powertrain Repairer (2)  
Inspector

**References:**


TM 55-1520-240-23P  
Appendix E

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
One Forward and One Aft Rotary-Wing Blade  
Tied-Down (Task 1-26)  
Work Platform Open (Task 2-2)  
Pressure Test Setup

**General Safety Instructions:****WARNING**

Release pressure at fittings carefully. Otherwise lubricating oil can spray out. Lubricating oil can be harmful to nose, eyes, or mouth.

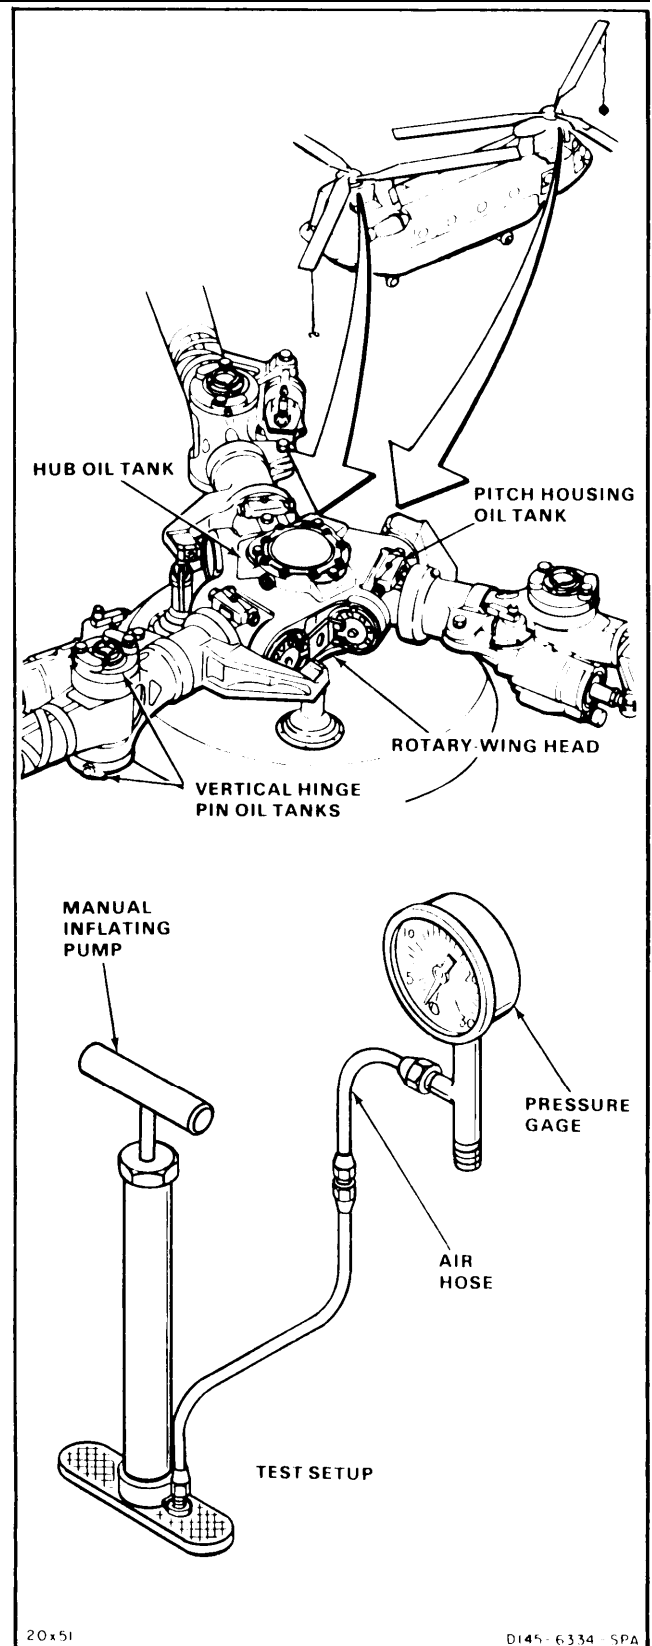**GO TO NEXT PAGE**

## 5-5 PRESSURE TEST ROTARY-WING HEAD SEALS AND PACKINGS 5-5 (Continued)

### NOTE

Test setup and procedure are same for testing all rotary-wing head seals and packings, except for size of pressurizing fitting and location of test connection.


### TEST ROTARY-WING HUB OIL SEALS AND PACKINGS

1. Check oil level in sight indicator (1). Service oil tank (2) if needed (Task 1-56).
2. Remove one filler plug (3) and packing (4). Install pressurizing fitting (5) and packing in tank (2). Connect test setup (6) to pressurizing fitting.

### CAUTION

Do not exceed 20 psi when testing seals. High-pressure air will damage seals.

3. Pressurize tank (2) to 3 to 5 psi. Maintain pressure for 10 minutes. Check hub (7) for oil leaks. Check around pitch shaft (8) and end covers (9). There shall be no leaks.
4. Increase pressure in tank (2) to 15 to 20 psi. Maintain pressure for 5 minutes. Check hub (7) for oil leaks. Check around pitch shaft (8) and end covers (9). There shall be no oil leaks.

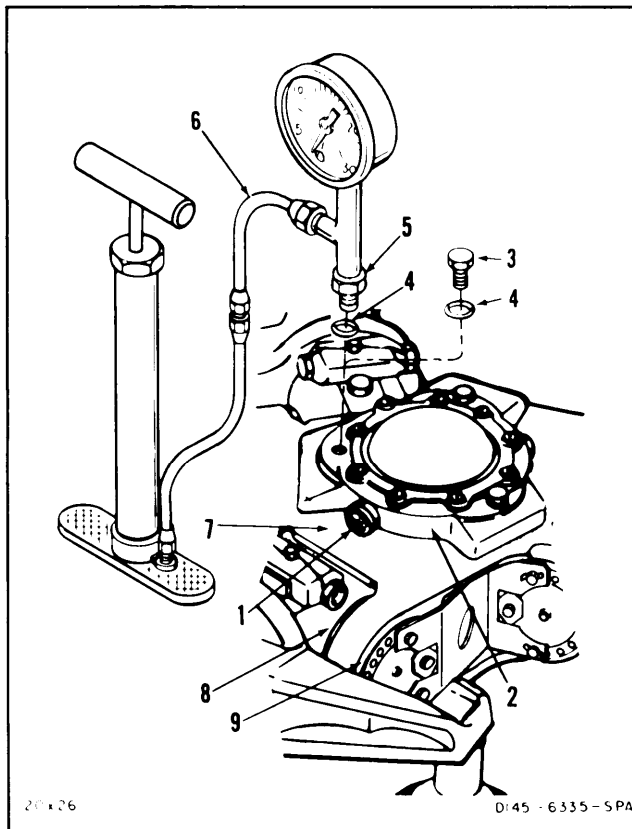


**GO TO NEXT PAGE**

**5-5 PRESSURE TEST ROTARY-WING HEAD SEALS AND PACKINGS**  
(Continued)


5. Loosen pressurizing fitting (5) just enough to bleed pressure. When gage pressure reads 0 psi, remove fitting and packing (4).
6. Install packing (4) and **plug (3)**. Torque **plug to 85 inch-pounds**. Lockwire plug. Use lockwire (E231).

**INSPECT**

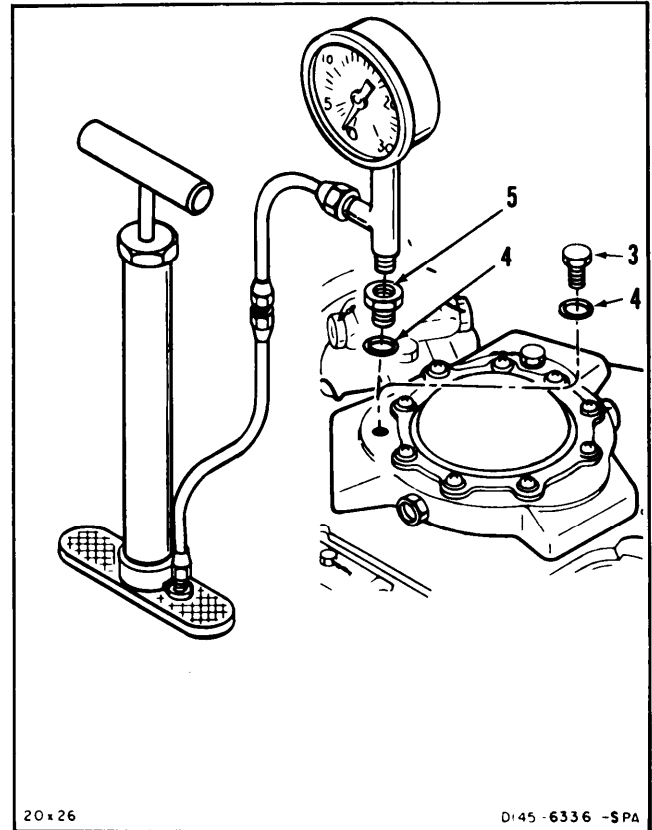

**TEST PITCH-VARYING HOUSING OIL SEALS AND PACKINGS**

7. Check oil level in sight indicator (10). Service oil tank (11) if needed (Task 1-57).
8. Remove filler plug (12) and packing (13). **install pressurizing fitting (14) and packing** in tank (11). **Connect test setup (6)** to pressurizing fitting.

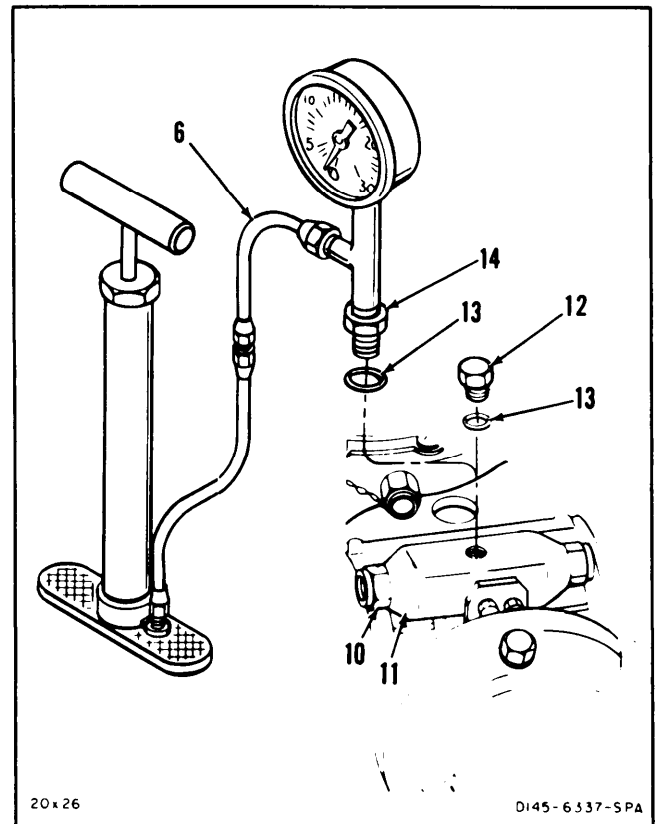

**GO TO NEXT PAGE**




**5-5 PRESSURE TEST ROTARY-WING HEAD SEALS AND PACKINGS 5-5**  
(Continued)

**CAUTION**

Do not exceed 20 psi when testing seals. High-pressure air will damage seals.

9. Pressurize tank (11) to 3 to 5 psi. Maintain pressure for 10 minutes. Check inboard end of pitch housing (15) for oil leaks. Check oil hole (16) at tie bar hole area under pitch housing. There shall be no leaks.
10. Increase pressure in tank (11) to 15 to 20 psi. Maintain pressure for 5 minutes. Check inboard end of pitch housing (15) for oil leaks. Check oil hole (16) at tie bar hole area under pitch housing. There shall be no leaks.
11. Loosen pressurizing fitting (14) just enough to bleed pressure. When gage pressure is 0 psi, remove fitting and packing (13).
12. Install packing (13) and plug (12). Torque plug to 25 inch-pounds. Lockwire plug. Use lockwire (E231).

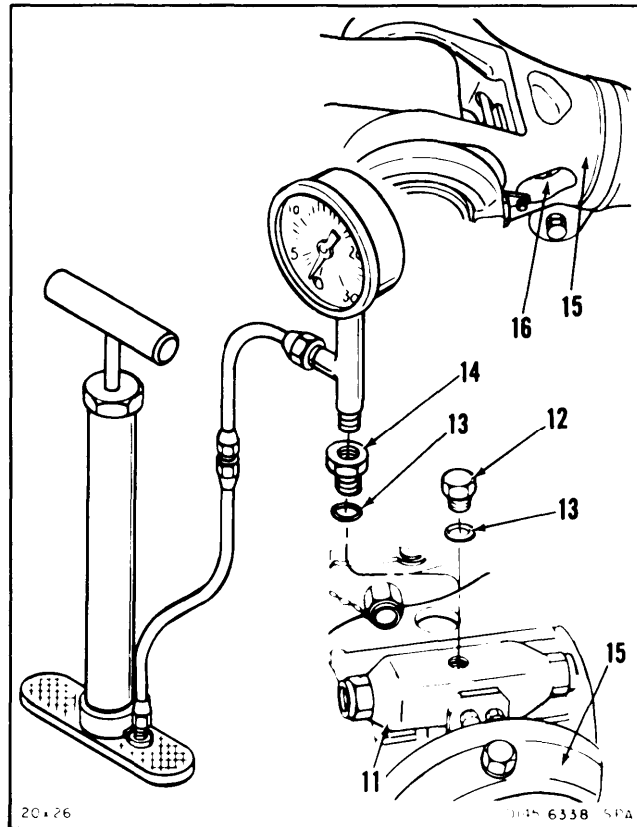

**INSPECT**


**TEST VERTICAL HINGE PIN OIL TANK SEALS AND PACKINGS**

13. Check oil level in sight indicator (17). Service oil tank (18) if needed (Task 1-59).
14. Remove one filler plug (19) and packing (20). Install pressurizing fitting (21) and packing in tank (18). Connect test setup (6) to pressurizing fitting.

**CAUTION**

Do not exceed 20 psi when testing seals. High pressure air can damage seals.

15. Pressurize tank (18) to 3 to 5 psi. Maintain pressure for 10 minutes. Check tanks (18 and 22), oil manifold (23), and lugs (24), for oil leaks. There shall be no leaks.
16. Increase pressure in tanks (18 and 22) to 15 to 20 psi. Maintain pressure for 5 minutes. Check tanks, oil manifold (23), and lugs (24), for oil leaks. There shall be no leaks.

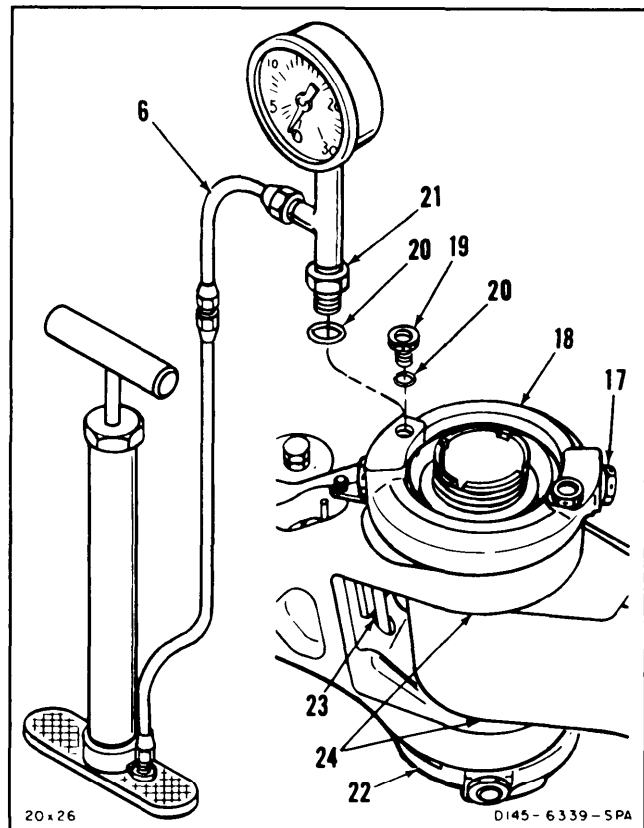


**GO TO NEXT PAGE**

## 5-5 PRESSURE TEST ROTARY-WING HEAD SEALS AND PACKINGS 5-5 (Continued)


17. Loosen pressurizing fitting (21) just enough to bleed pressure. When gage pressure is 0 psi, remove fitting and packing (20).
18. Install packing (20) and plug (19). Torque plug to 85 inch-pounds. Lockwire plug. Use lockwire (E231).

### INSPECT

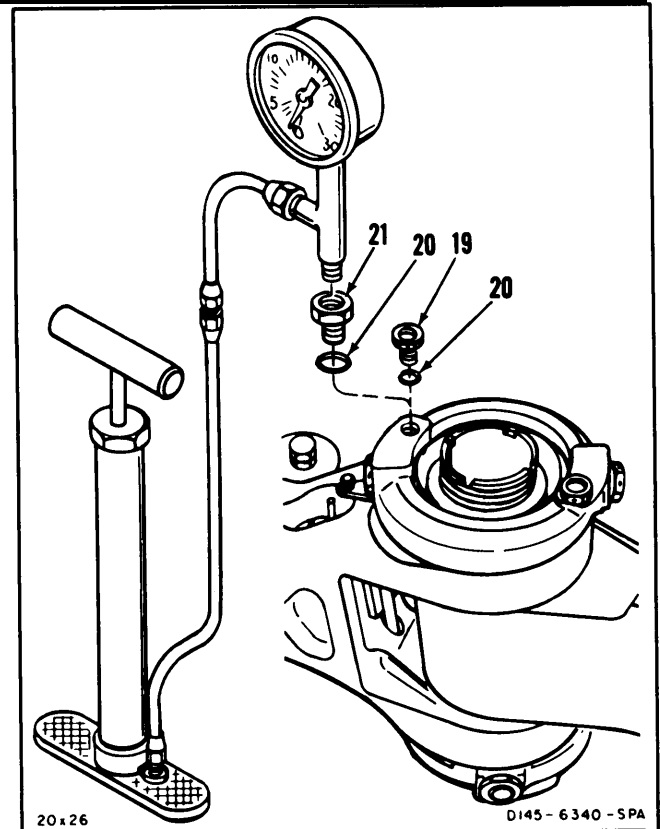

### FOLLOW-ON MAINTENANCE:

Close work platform (Task 2-2).

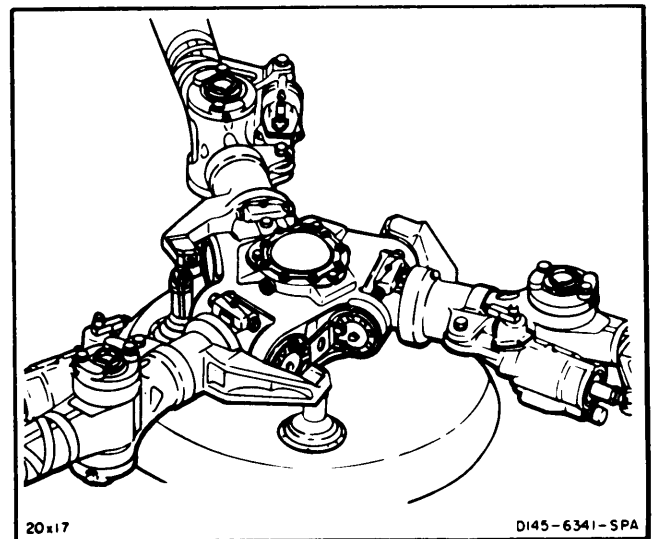

END OF TASK

5-6 INSPECT ROTARY-WING HEADS

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114

**Materials:**


None

**Personnel Required:**

67U30 Inspector

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Forward or Aft Work Platform Open (Task 2-2)  
Tiedown Line Installed on One Forward and  
One Aft Blade (Task 1-26)

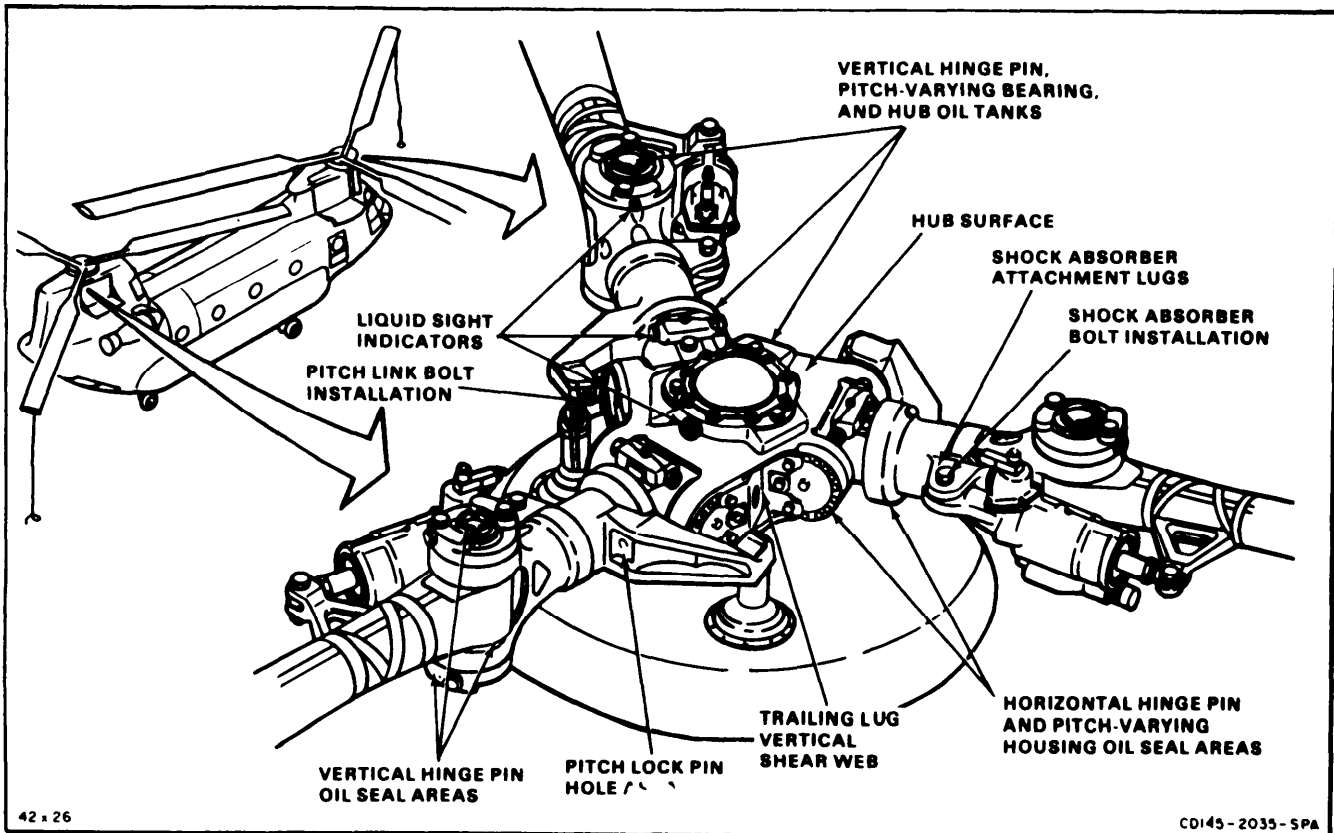

GO TO NEXT PAGE

5-6 INSPECT ROTARY-WING HEADS (Continued)

**NOTE**

- Paint removal is not required for rotary-wing head inspection. Use flashlight and mirror for hidden areas.
- Procedures can be used to inspect forward and aft rotary-wing heads.

**CAUTION**




Horizontal hinge pins with serial numbers of UW2407 and prior that do not have a suffix "A" vibro engraved after the serial number and with total time since new of 4800 flight hours or more must be replaced.

1. Check all surfaces of rotary-wing head (1), including webs (2), lugs (3), and holes (4). There shall be no cracks, burns, or pits.

**NOTE**

Burns and pits indicate lightning strikes.


2. Check rotary-wing head (1) for scores, nicks, or gouges that have gone through paint. Check that damage is within rework limits as follows.
  - a. Damage to top hub face (5) and bottom hub face (6) shall not exceed 0.005-inch in depth by 2.5-inches in length or 0.010-inch in depth by 1.0-inch in length.
  - b. Damage to six lugs (7), webs (8), and side surfaces (9) shall not exceed 0.005-inch in depth by 0.625-inch in length.

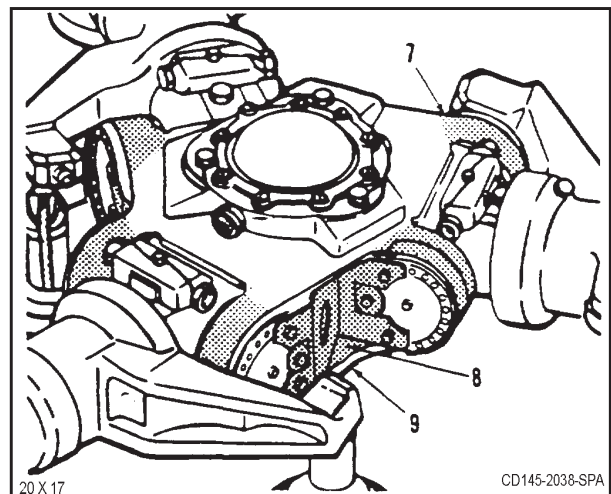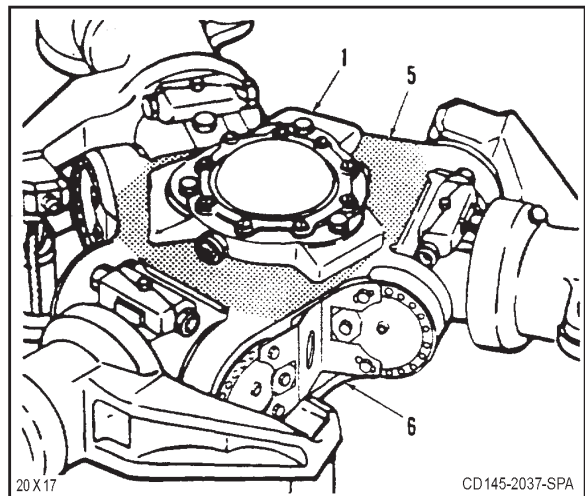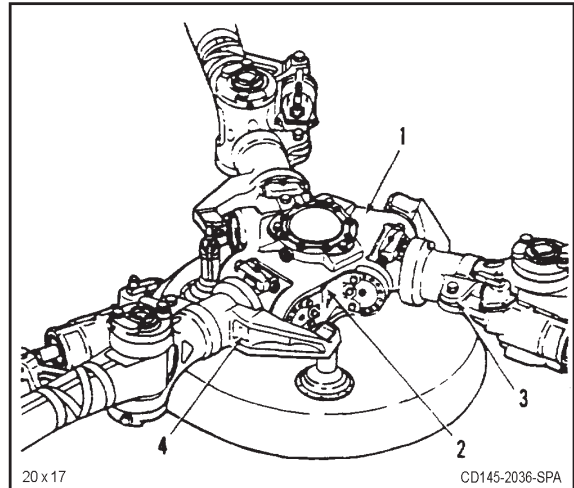


**GO TO NEXT PAGE**

**5-6 INSPECT ROTARY-WING HEADS (Continued)**


- c. Damage to hub oil tank (10) and three pitch housing oil tanks (11) shall not exceed 0.020 inch in depth by 2.5 inches in length.

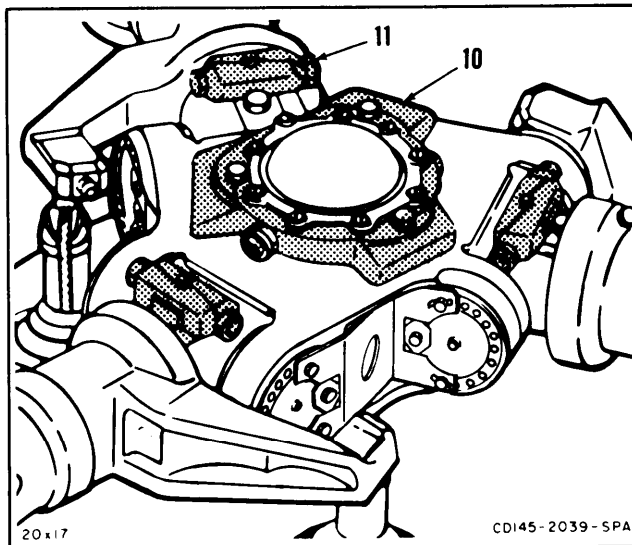

- d. Damage around aft droop stop lugs (12) within 1 inch of lugs shall not exceed 0.005 inch in depth by 1.0 inch in length.

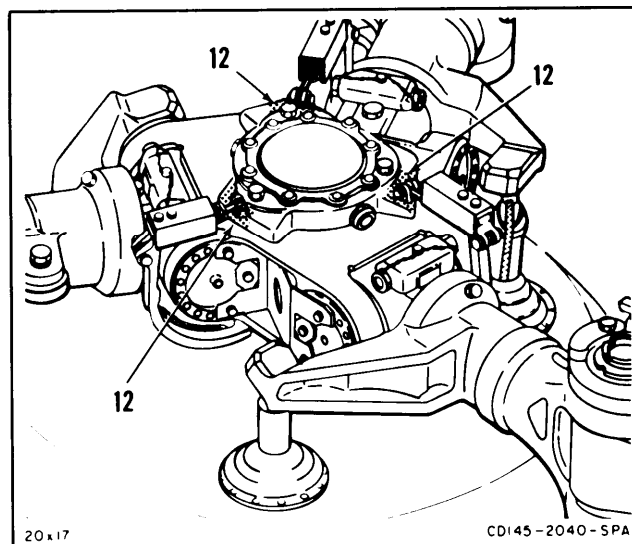


- e. Damage to horizontal pin caps (13) shall not exceed 0.010 inch in depth by 2.5 inches in length.
- f. Damage to pitch shafts (14) shall not exceed 0.005 inch in depth by 2.5 inches in length.
- g. Damage to edges of three pitch arms (15) shall not exceed 0.050 inch in depth.

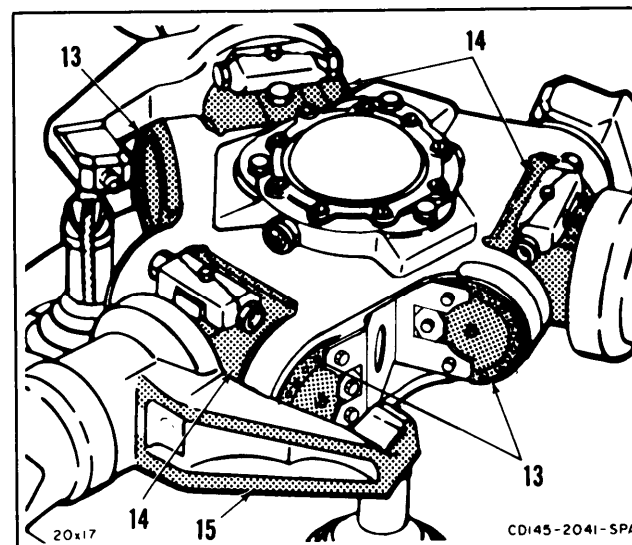

**GO TO NEXT PAGE**

6-6 INSPECT ROTARY-WING HEADS (Continued)

- h. Damage to edge of pitch arm (16) where washer contacts arm when pitch link bolt is installed shall not exceed 0.060 inch in depth.
- i. Damage to arm faces (17) around bolt hole shall not exceed 0.040 inch in depth.
- j. Damage to remaining areas (16) of pitch arm (16) shall not exceed 0.050 inch in depth.
- j.1. Damage to fillet areas (16.1) where pitch arm blends into housing shall not exceed 0.010 inch in depth.
- k. Damage to six lugs (19), pockets (20), and center housing areas (21) shall not exceed 0.005 inch in depth.

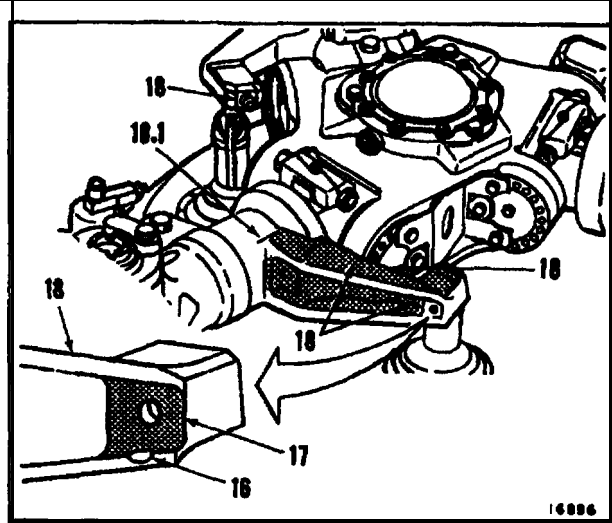

**NOTE**


There may be two different five-digit codes marked on the part. The five digit code 81996 is not the manufacturer's CAGE code. If found, the number 81996 identifies the part as having been manufactured IAW government technical data package (TDP). Use the five-digit IAW tasks k.3. and k.6. to determine the manufacturer's CAGE code.

- k.1. Locate the inboard tie bar pin assemblies, three (3) per rotor head, TM 55-1520-240-23P.
- k.2. Remove the pin for inspection. Refer to task 5-23.1.
- k.3. identify the five manufacturers CAGE code or manufacturers name on the end of the pin. If the inboard tie bar pin is marked with one of the following CAGE codes, the pin is serviceable:
  - (A) CAGE code 63259 (Boniface Tool and Die)
  - (B) CAGE code 56811 (Olympic Tool and Machine)
  - (C) CAGE code 77272 (Boeing)

**NOTE**

If the pin contains only one CAGE code (81205) along with the part number, the pin is considered serviceable. If the pin contains two CAGE codes (81205 and 81966) along with the part number, the part is considered unserviceable. The pin with the two CAGES could reflect an army procurement which has been improperly identified.

- (D) CAGE code 81205 (Boeing Seattle)

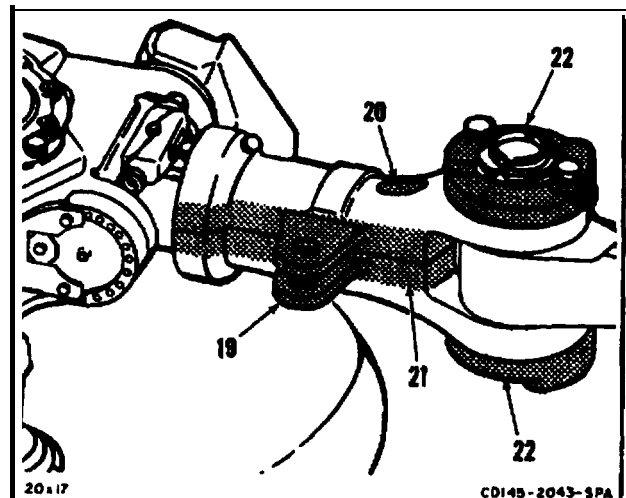


- k.4. If pin is serviceable, re-install IAW task 5-23.2.
- k.5. If pin is unserviceable, or if CAGE code or manufacturers name cannot be identified, replace with serviceable part from the supply system as defined above.
- k.6. Locate the outboard tie bar pin assemblies, three (3) per rotor head, TM 55-1520-240-23P.
- k.7. Remove the pin for inspection. Refer to task 5-23.1 Repeat tasks k.2 thru k.5.
- l. Damage to tanks (22) shall not exceed 0.020 inch in depth by 2.5 inches in length.


**GO TO NEXT PAGE**

**5-6 INSPECT ROTARY-WING HEADS (Continued)**


- m. Damage to lugs (23) and outboard housing areas (24) shall not exceed 0.030 inch in depth. There is no restriction on damage area. Rework within this depth does not require shotpeening.
- n. Damage to housing areas (25 and 26) shall not exceed 0.005 inch in depth by 2.5 inches in length.

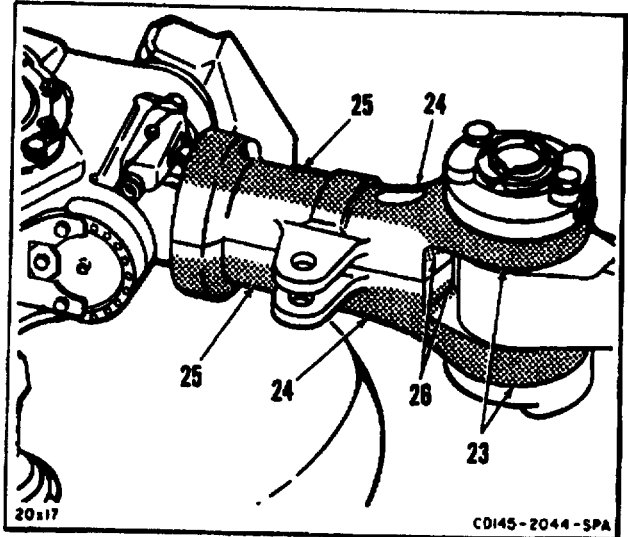

- 3. **Check outboard hub areas (27) for scores.** Scores shall not be greater than 0.005-inch by 2.5-inches or 0.010-inch by 1.0-inch. Scores in outboard hub areas shall run parallel to caps (13) within 10 degrees.

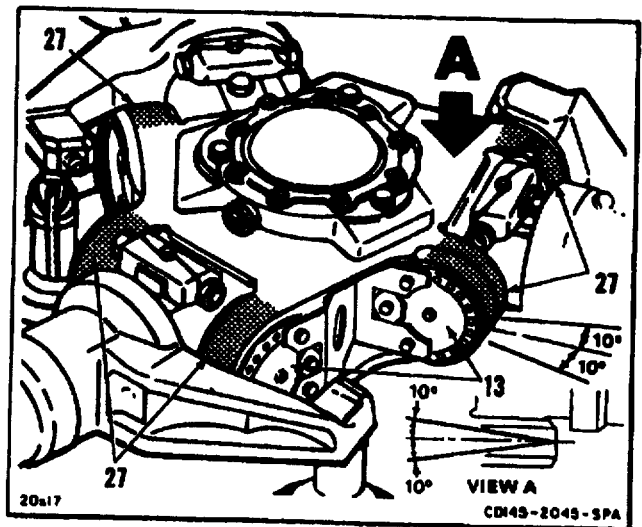

- 4. **Check outboard side of lugs (23) for scores.** Scores shall not exceed 0.005-inch in depth by 1.0-inch in length. Scores in outboard side of lugs shall run parallel to tanks (22) within 10 degrees.

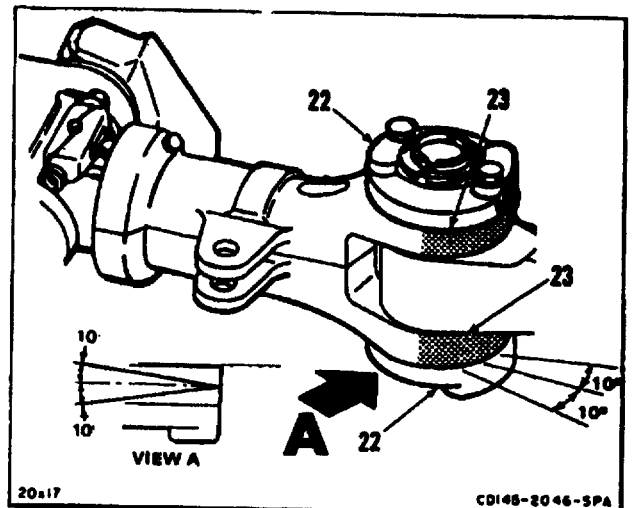

**FOLLOW-ON MAINTENANCE:**

Close work platform (Task 2-2).

**END OF TASK**

**5-6.1 INSPECT ROTARY-WING HEAD OIL TANKS FOR ALLOWABLE OIL LEAKAGE 5-6.1**

**INITIAL SETUP**

**Applicable Configurations:**

All

**To ols:**

None

**Materials:**

None

**Personnel Required:**

Medium Helicopter Repairer  
Rotary-Wing Aviator (2)

**References:**

- Task 1-39      Task 5-32
- Task 1-55      Task 5-33
- Task 1-56      Task 5-34
- Task 1-57      Task 5-35
- Task 5-24      Task 5-42
- Task 5-25      Task 5-43
- TM 55-1520-240-10

**Equipment Condition:**

Helicopter Parked on Level Ground (Preferred)  
Battery Disconnected (Task 1-39)  
Electrical Power Off

Tiedown Line Installed on One Forward Blade (Task 1-26)  
Aft Pylon Work Platforms Open (Task 2-2)  
Forward Transmission Fairing Work Platforms Open (Task 2-2)


**General Safety Instructions:**

**WARNING**

Prolonged oil leakage can damage finish and create a work hazard by making the fuselage slippery. It can also affect other systems in the helicopter. Therefore, good judgment must be used when determining allowable leakage.

**WARNING**

Rotor blades can seriously injure personnel. Make sure area around helicopter is clear of personnel before moving rotor blades.

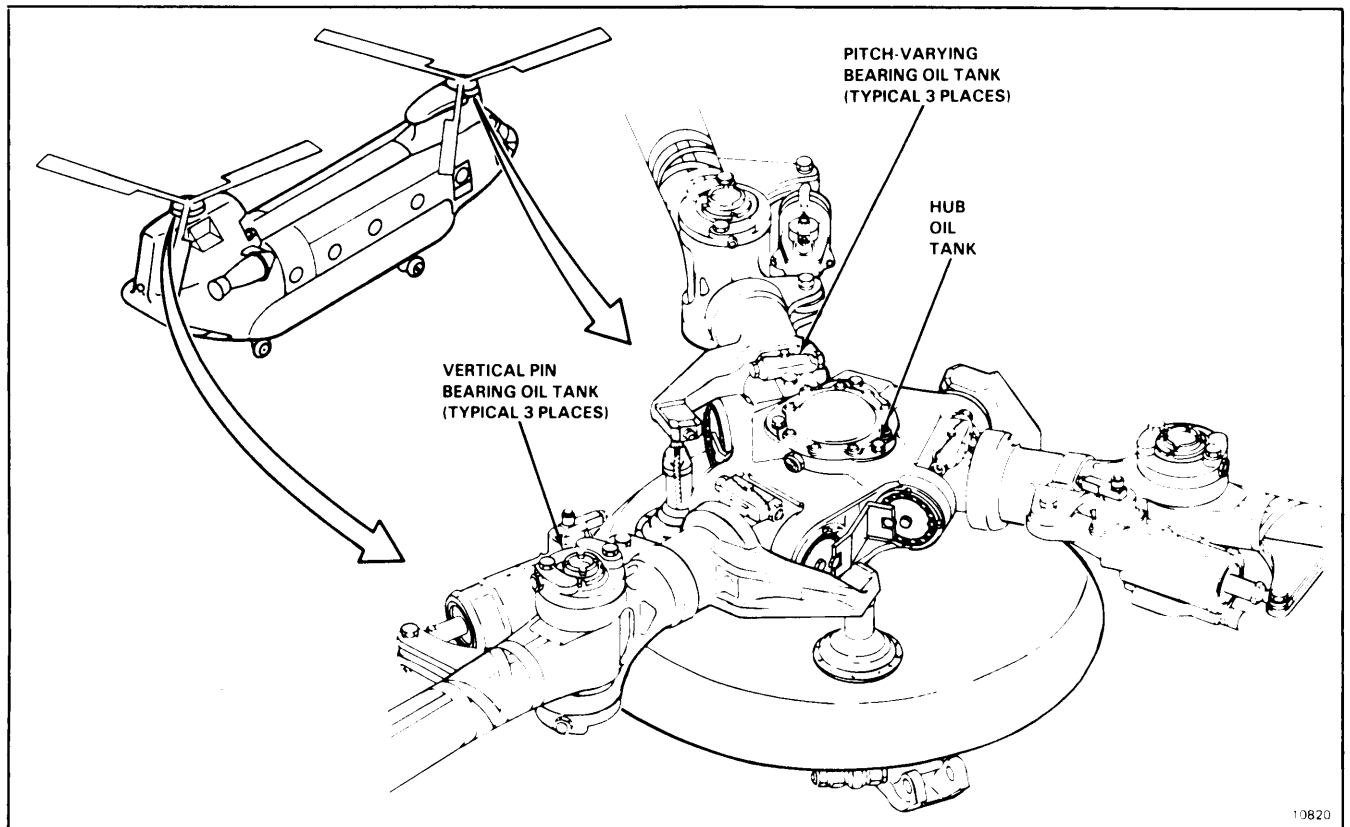



5-6.1 INSPECT ROTARY-WING HEAD OIL TANKS FOR ALLOWABLE OIL LEAKAGE (Continued) 5-6.1

**NOTE**

Due to time required, it is best to perform this inspection during a scheduled flight of at least two hours.


**HUB OIL TANK**

1. **Service hub oil tank (1)** (Task 1-55).
2. **Connect battery** (Task 1-39).
3. Have pilot perform a 30-minute ground run (TM 55-1520-240-10).
4. **Disconnect battery** (Task 1-39).
5. **Install tiedown line (2)** on one forward blade (3) (Task 1-26).

**NOTE**

Blades must be in proper position to get a correct reading of oil level.

6. Using tiedown line (2), **turn blades (3)** so that one is positioned at a 90 degree angle to left or right side of helicopter.
7. **Check oil level** in sight gage (4) next to blade (3) that is at 90 degree angle. If oil is at bottom of gage, leakage is excessive.
8. **If leakage is excessive, horizontal hinge pin seals are defective.** Replace seals (Tasks 5-42 and 5-43).

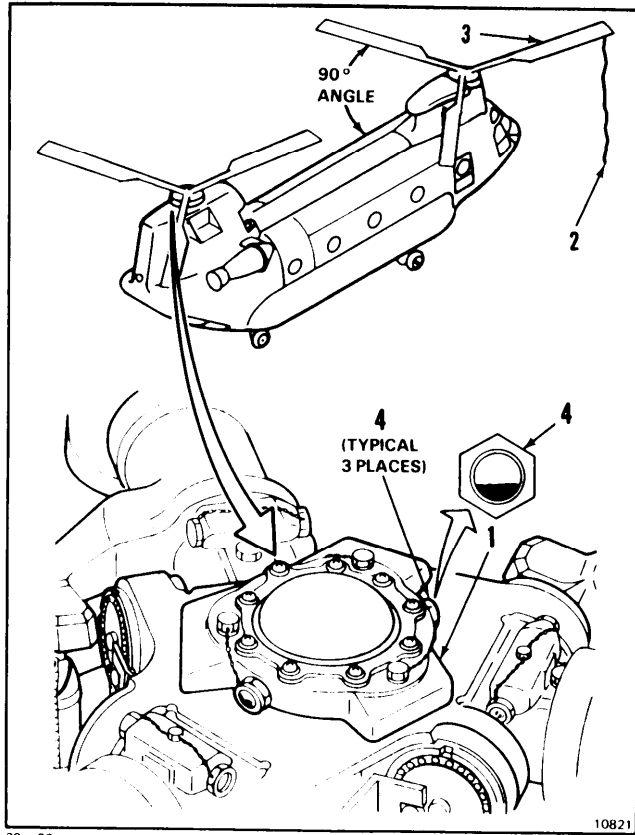


**PITCH BEARING OIL TANK**

9. **Service pitch bearing oil tank (5)** (Task 1-56),
10. **Connect battery** (Task 1-39).
11. Have pilot perform a 30-minute ground run (TM 55-1520-240-10).
12. **Disconnect battery** (Task 1-39).
13. **Install tiedown line (2)** on one forward blade (3) (Task 1-26).

**NOTE**

Blades must be in proper position to get a correct reading of oil level.

14. Using tiedown line (2), **turn blades (3)** so that blade of tank (5) to be checked is over drive shaft tunnel (6).
15. **Check oil level** in sight gage (7) on each side of oil tank (5) of blade (3) over tunnel (6). If average level at two gages is at bottom of sight gage, leakage is excessive.
16. **If leakage is excessive, pitch-varying housing oil seals are defective.** Replace seals (Tasks 5-24 and 5-25).

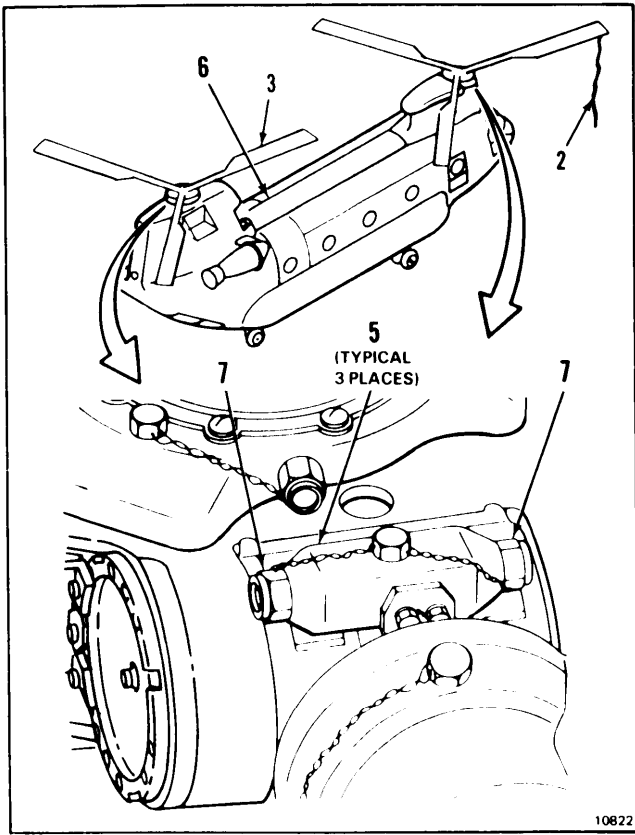

**GO TO NEXT PAGE**

## 5-6.1 INSPECT ROTARY-WING HEAD OIL TANKS FOR ALLOWABLE OIL LEAKAGE (Continued) 5-6.1


### VERTICAL HINGE PIN OIL TANKS

17. **Service vertical hinge pin oil tanks (8)** (Task 1-57).
18. **Connect battery** (Task 1-39)
19. Have pilot perform a 30-minute ground run (TM 55-1520-240-10).
20. **Disconnect battery** (Task 1-39).
21. **Install tiedown line (2)** on one aft blade (3) (Task 1-26).

#### NOTE

Tank must be horizontal to get a correct reading of oil level.

22. Using tiedown line (3), **turn rotor blades (2)** so that oil tank (8) to be checked is horizontal.
23. **Check oil level** in sight gage (9) on each side of oil tank (8). If average level at two gages is at bottom of sight gage, leakage is excessive.
24. **If leakage is excessive, vertical hinge pin oil tank seals are defective.** Replace seals (Tasks 5-32 thru 5-35).

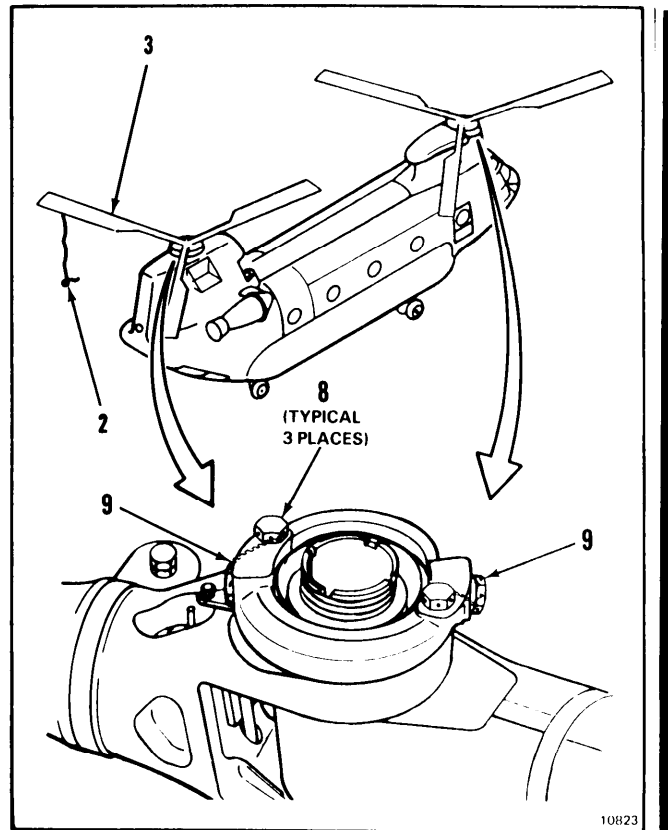

#### FOLLOW-ON MAINTENANCE:

- Close forward transmission fairing work platforms (Task 2-2).
- Close aft pylon work platforms (Task 2-2).
- Remove tiedown line from blade (Task 1-26).

END OF TASK



**5-7 REPAIR ROTARY-WING HEADS**

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

- Technical Inspection Tool Kit,  
NSN 5180-00-323-5114
- Powertrain Repairer Tool Kit,  
NSN 5180-00-003-5267
- Protractor

**Materials:**

Crocus Cloth (E122)

**Personnel Required:**

- Aircraft Powertrain Repairer
- Inspector

**References:**

- TM 55-1520-240-23P
- Task 2-348
- Task 2-347
- Task 2-346
- Task 2-353


**Equipment Condition:**

- Battery Disconnected (Task 1-39)
- Electrical Power Off
- Hydraulic Power Off
- Forward or Aft Work Platform Open (Task 2-2)
- Tiedown Line Installed on One Forward and One Aft Blade (Task 1-26)

**General Safety Instructions:**

**WARNING**

Do not repair cracks, burns, or pits in rotary-wing head. Part failure could occur with possible loss of helicopter and loss of personnel.

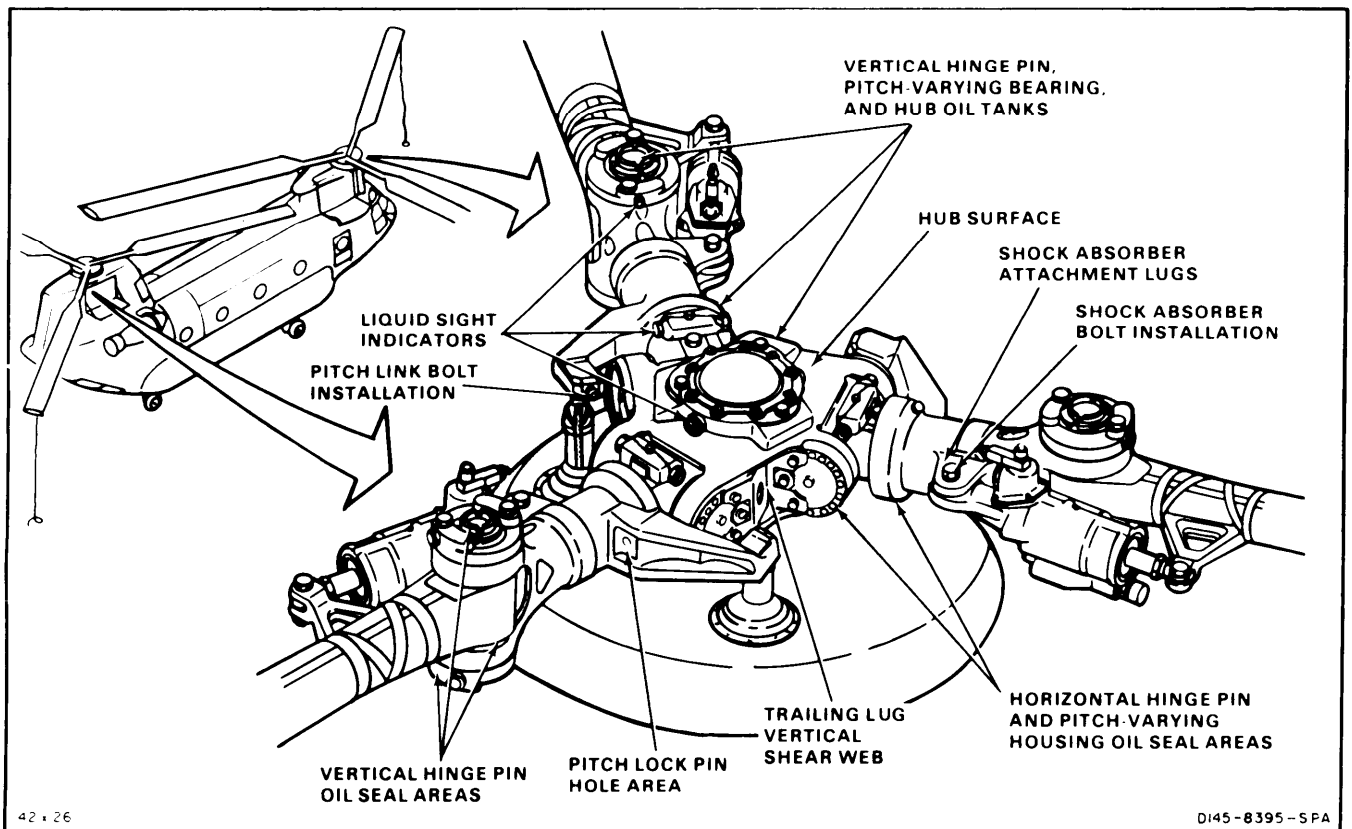

## 5-7 REPAIR ROTARY-WING HEADS (Continued)


5-7

## NOTE

- Procedure is similar to repair forward or aft rotary-wing head. Differences are noted in text.
- Damage limits and refinishing differ for each area of rotary-wing head.


## 1. Repair rotary-wing head (1) as follows:

- Blend repair scores, nicks, or gouges so no sign of damage remains. Rework no deeper than damage.
- Use only crocus cloth (E122) applied with finger pressure.
- Blend with smooth radius at least 10 times as wide as depth of damage.
- Refinish reworked areas as soon as possible.

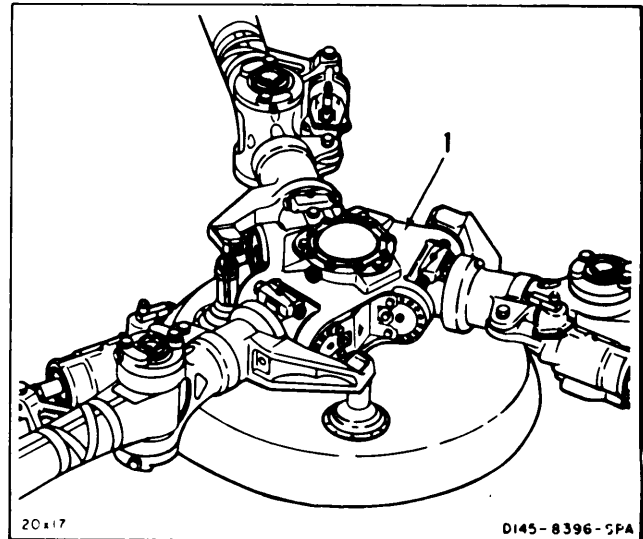

## 2. Follow damage limits and refinishing procedures for specific areas of rotary-wing head (1) as described:


- Damage to top hub face (2) and bottom hub face (3) shall not exceed 0.005-inch in depth by 2.5-inches in length or 0.010-inch in depth by 1.0-inch in length. Refinish (Task 2-348).

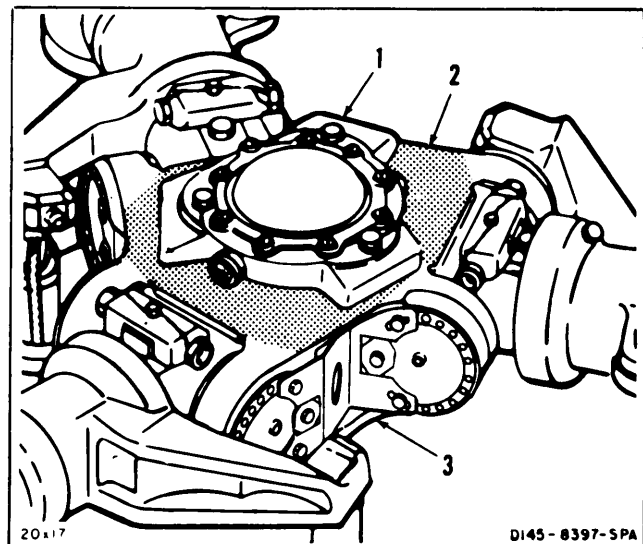


GO TO NEXT PAGE

**5-7 REPAIR ROTARY-WING HEADS (Continued)****5-7**


- b. Damage to six lugs (4), webs (5), and side surfaces (6) shall not exceed 0.005-inch in depth by 0.625-inch in length. Refinish (Task 2-348).
- c. Damage to locking beam (7) is not limited, but must be refinished (Task 2-346).

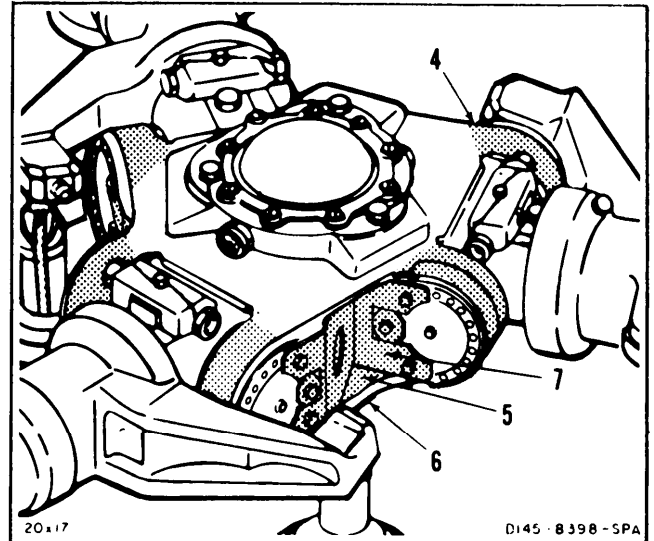


- d. Damage to hub oil tank (8) and three pitch housing oil tanks (9) shall not exceed 0.020-inch in depth by 2.5-inches in length. Refinish (Task 2-347).

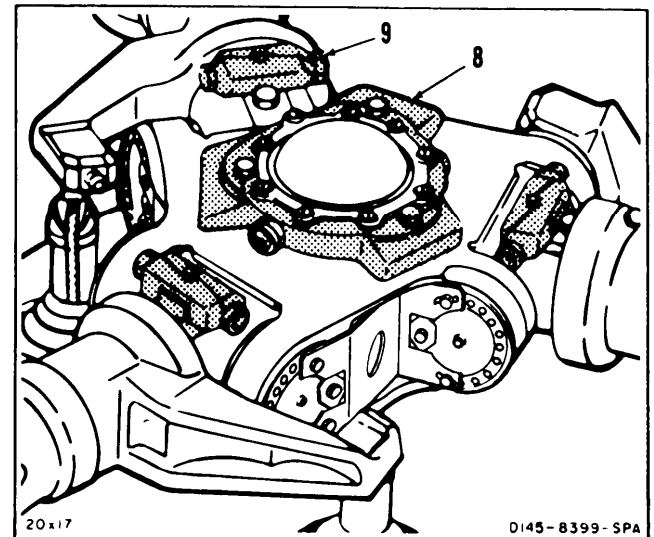


- e. Damage around aft droop stop lugs (11) within 1-inch of lugs shall not exceed 0.005-inch in depth by 1.0-inch in length. Refinish (Task 2-347).

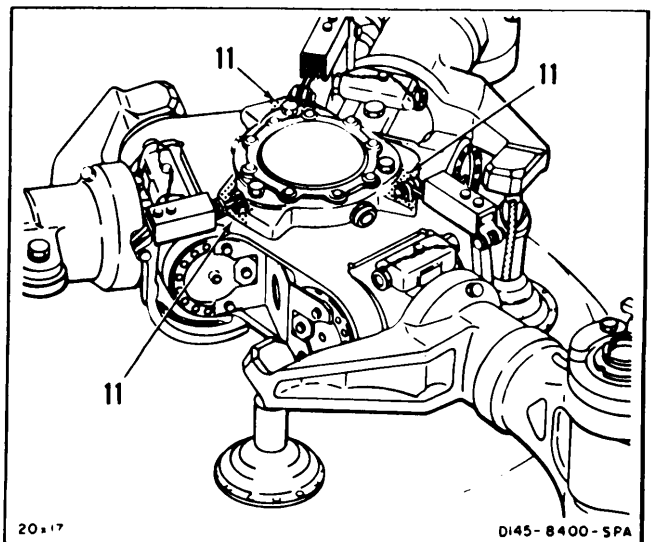**GO TO NEXT PAGE**


- f. Damage to horizontal pin caps (12) shall not exceed 0.010 inch in depth by 2.5 inches in length. Refinish (Task 2-343).
- g. Damage to pitch shafts (13) shall not exceed 0.005 inch in depth by 2.5 inches in length. Rework area shall not exceed 1.0 square inch. Refinish (Task 2-346).
- h. Damage to edges of three pitch arms (14) shall not exceed 0.050 inch in depth. Refinish (Task 2-346).

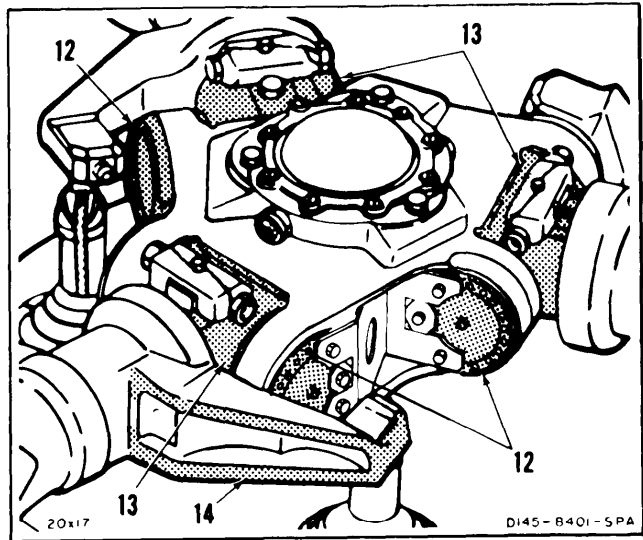


- i. Damage to edge of pitch arm (15) where washer contacts arm when pitch link bolt is installed shall not exceed 0.060 inch in depth. Refinish (Task 2-346).
- j. Damage to arm faces (16) around bolt hole shall not exceed 0.040 inch in depth. Refinish (Task 2-346).
- k. Damage to remaining areas (17) of pitch arm (15) shall not exceed 0.050 inch in depth. Rework area shall not exceed 1.2 square inches. Refinish (Task 2-346).
- k.1. Damage to fillet areas (17.1) where pitch arm blends into housing shall not exceed 0.010 inch in depth. Repairs more than 0.005 inch deep require shotpeening. Refinish (Task 2-346).

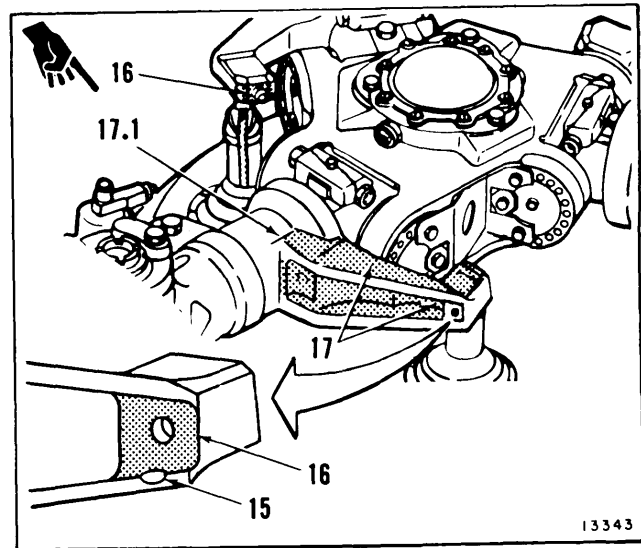


- l. Damage to six lugs (18), pockets (19), and center housing areas (20) shall not exceed 0.003 inch in depth. Rework area shall not exceed 1.2 square inches. Refinish (Task 2-346).
- m. Damage to tanks (21) shall not exceed 0.020-inch in depth by 2.5 inches in length. Refinish (Task 2-353).

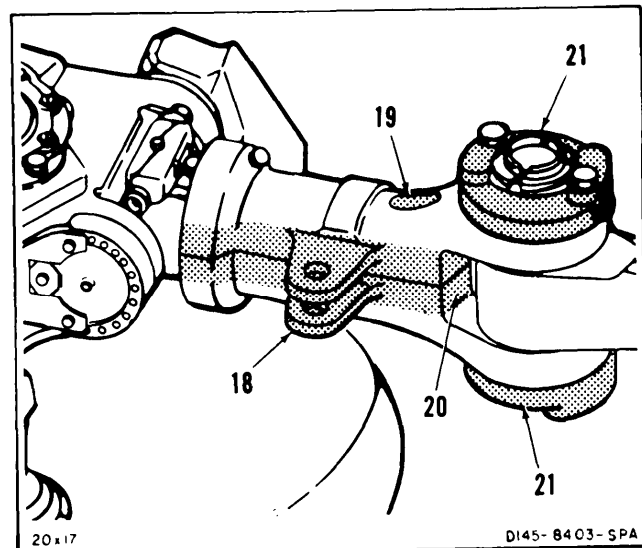

- n. Damage to lugs (22) and outboard housing areas (23) shall not exceed 0.030 inch in depth. Rework within this depth does not require shotpeening. Refinish (Task 2-346).
- o. Damage to housing areas (24 and 25) shall not exceed 0.005 inch in depth by 2.5 inches in length. Rework area shall exceed 1.2 square inches. Refinish (Task 2-346).

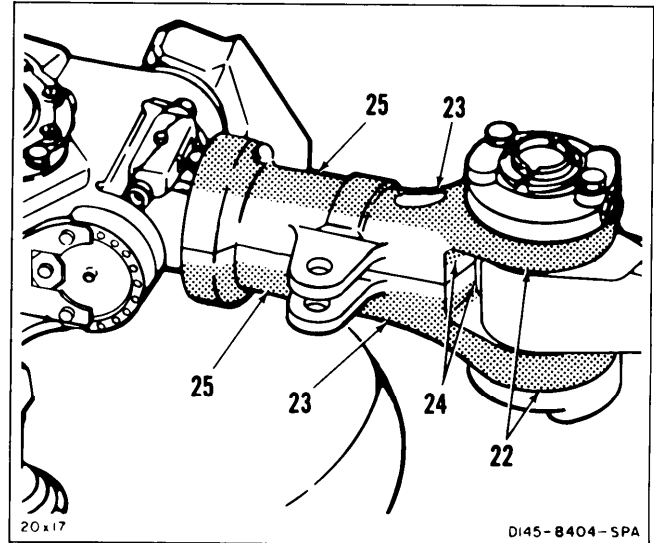


- p. Scores in outboard hub areas (26) shall not be greater than 0.005 inch by 0.625 inch. Scores in outboard hub areas shall run parallel to end caps (12) within 10 degrees. Refinish (Task 2-348).

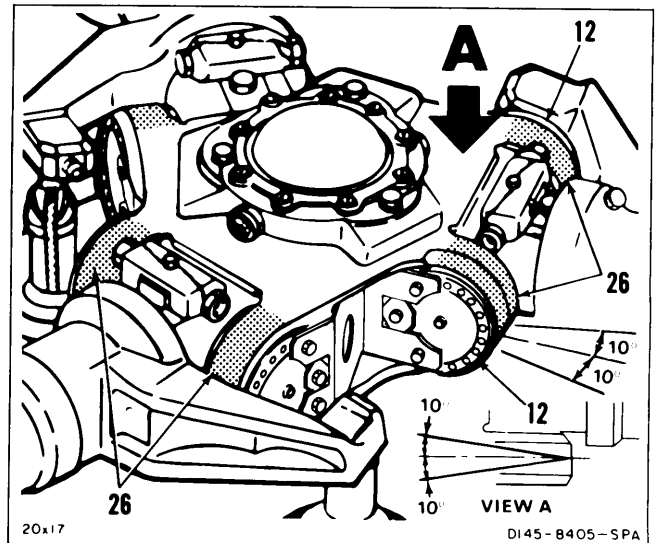

- q. Scores in outboard side of lugs (22) shall not exceed 0.005 inch in depth by 1.0 inch in length. Scores in outboard side of lugs shall run parallel to tanks (21) within 10 degrees. Refinish (Task 2-346).

FOLLOW-ON MAINTENANCE:

Close work platform (Task 2-2).

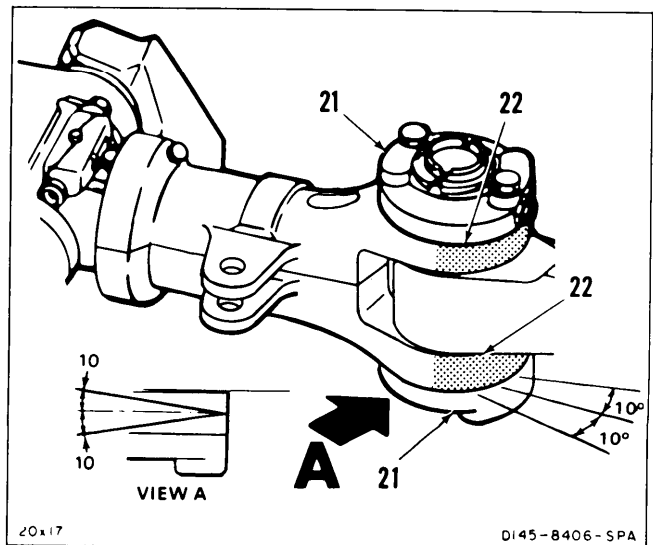

END OF TASK



## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic Tool Kit,  
NSN 5180-00-323-4692  
Rotor Head Lifting Device (T30)  
Handling Adapter (T13)  
Torque Applicator (T2)  
Reaction Adapter (T28)  
Tee Handle (T161)  
Socket (T29)  
Rope Guide Lines  
Hoist

**Materials:**


Barrier Material (E80)  
Tape (E388)  
Cloth (E120)

**Personnel Required:**

■ Medium Helicopter Repairer (6)

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Rotary-Wing Blades Removed, if Required (Task 5-64)  
Tiedown Lines Installed on All Three Blades, if Installed, of Applicable Rotary-Wing Head (Task 1-26).  
Lead-Lag Rigging Tools (T22) Installed on Blades of Applicable Rotary-Wing Head (Task 11-30)  
Forward or Pylon Work Platform Open (Task 2-2)  
Pitch Lock Pins (T22) Installed on Applicable Rotary-Wing Head (Task 5-96.1)  
Droop Stop Shroud Assemblies Removed from Aft Rotary-Wing Head, if Applicable (Task 5-48.1)

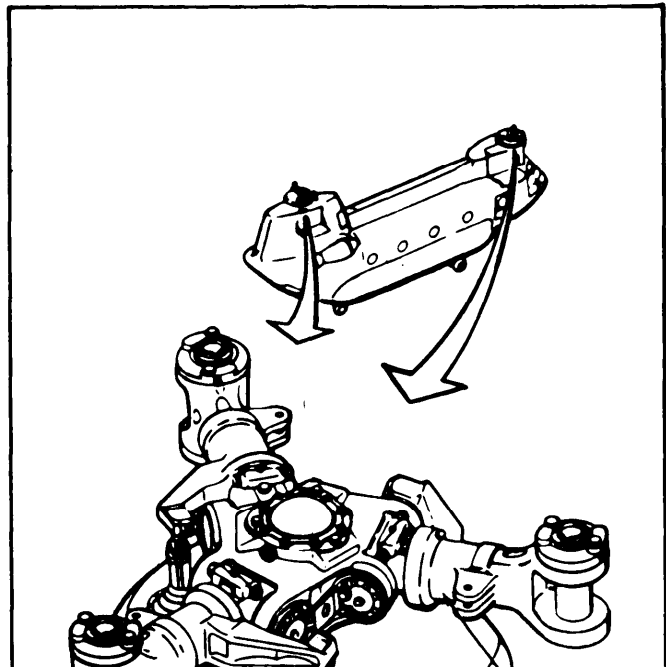**GO TO NEXT PAGE**

5-38 Change 19

**5-8 REMOVE ROTARY-WING HEAD (Continued)**

**NOTE**


- Procedure is similar to remove rotary-wing head with or without blades attached. Removal of rotary-wing head with blades removed is shown.
- Task is similar for forward and aft rotary-wing heads. Differences are noted in text. With blades off, forward rotary-wing head can be removed with forward transmission package installed in workstand.

**PREPARE HEAD WITHOUT 50**


1. If head (1) will be replaced, remove one sliding bushing (2) from each lower lug (3).

**PREPARE HEAD WITH 50**

- 1.1. If head (1) will be replaced, do not remove bushings (2 and 2.1) from each lower lug (3). Bushing are part of rotor head.

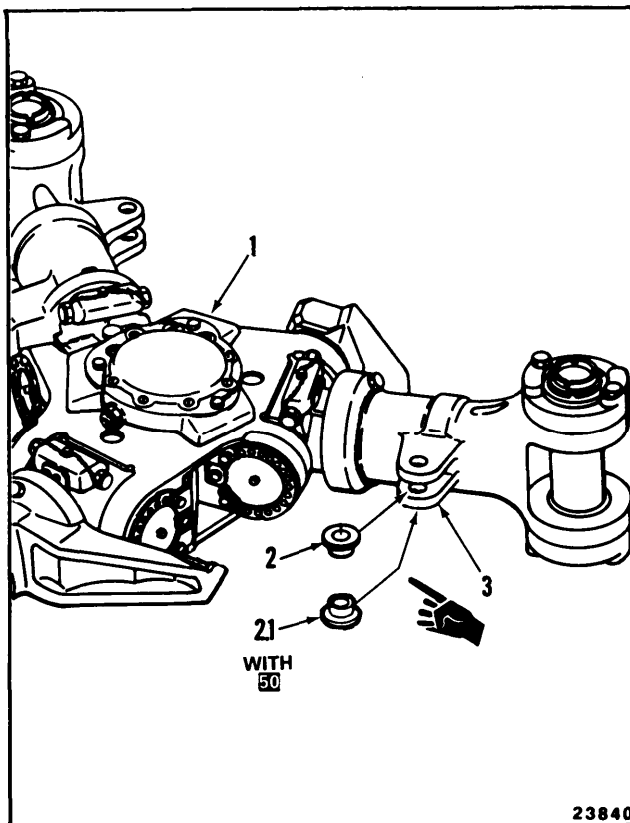

2. Disconnect three pitch links (4) from pitch housings (5) as follows:
  - a. Remove cotter pin (6).
  - b. Remove nut (7), washer (8), and bolt (9).
  - c. Disconnect pitch link (4).
  - d. Install bolt (9), washer (8), and nut (7) in housing (5).

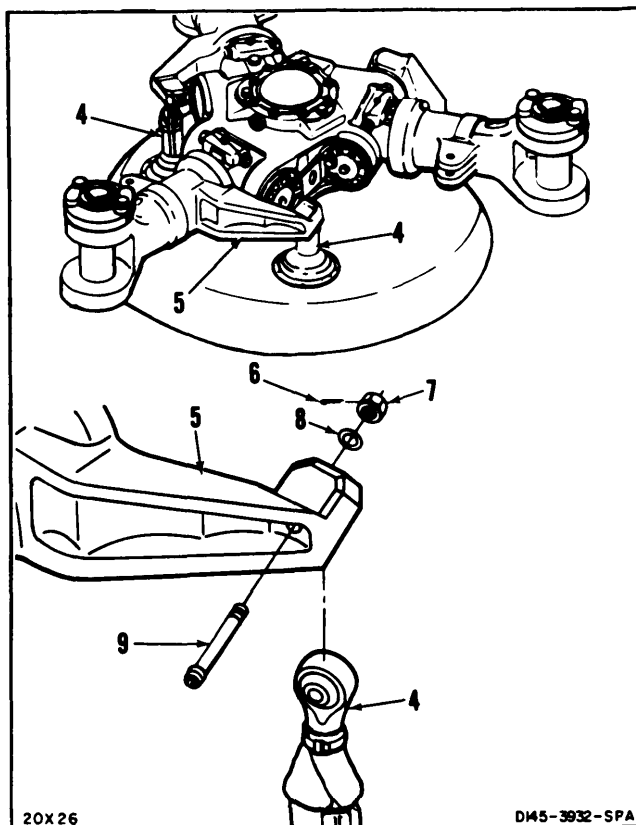


**GO TO NEXT PAGE**

**NOTE**


Support spring load before removing bolt. Sudden release of spring will cause small parts to fly out of lugs.

3. On aft head only, **disconnect centrifugal droop stop springs (10) and limiter springs (11)** as follows:
  - a. Remove cotter pin (12), nut (13), and washers (14 and 15).
  - b. Support spring load and remove bolt (16). Remove spring (10), two washers (17), bearing (18), and inboard limiter spring (11) from lugs (19).
  - c. Assemble bearing (18), two washers (17), spring (10) and limiter spring (11). Use bolt (16), washers (14 and 15), and nut (13).

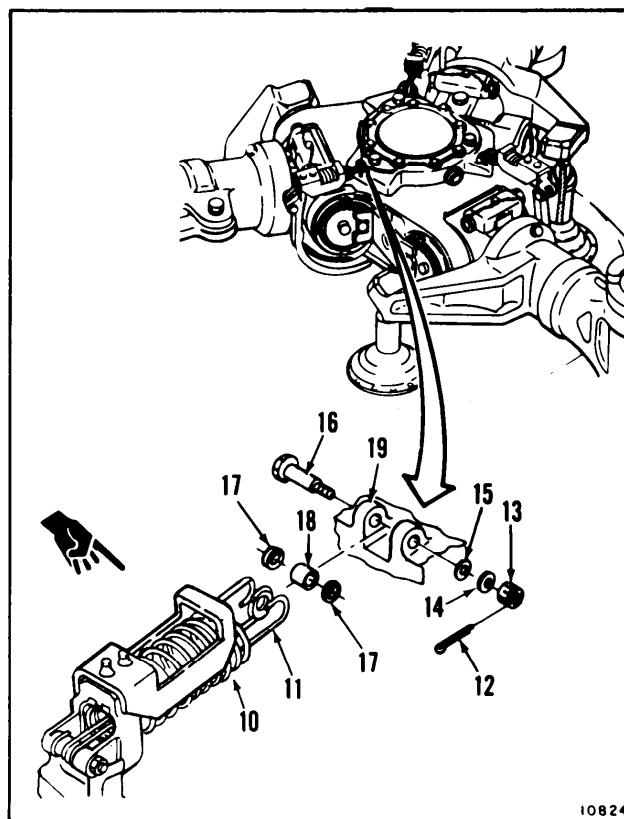**CAUTION**

Do not lift pitch housing when removing aft head without supporting balancing arm. Lifting housing will allow arm to fall against other parts when springs and limiters are not connected. Damage to equipment can occur.


4. Lower three balancing arms (20) as follows:
  - a. Hold balancing arm (20) in place.
  - b. Lift housing (21),
  - c. Lower arm (20) slowly until it rests on weather protective cover (22).

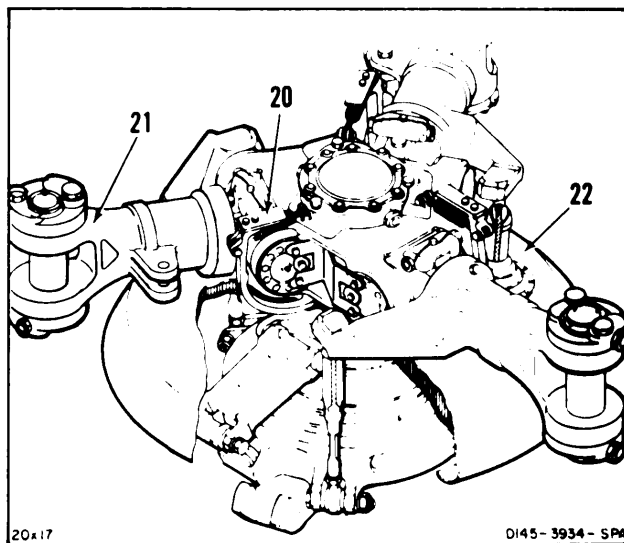**GO TO NEXT PAGE**

5-40 Change 14

**5-8 REMOVE ROTARY-WING HEAD (Continued)****5-8**

5. Remove nine screws (23) and washers (24).
6. **Remove** retainer (25), **cover** (26), and packing (27).
7. Remove retaining ring (28) and tang washer (29).

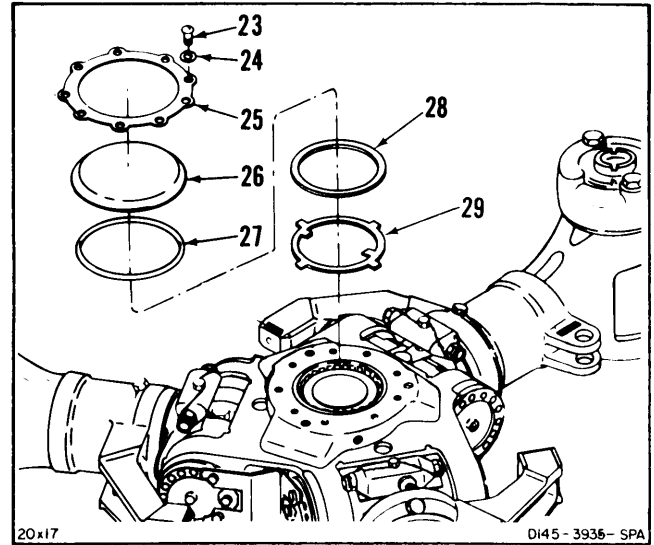**GO TO NEXT PAGE**




**5-8 REMOVE ROTARY-WING HEAD (Continued)**

5-8

**REMOVE RETAINING NUT**


8. Position socket (T29) (30) on hub retaining nut (31).

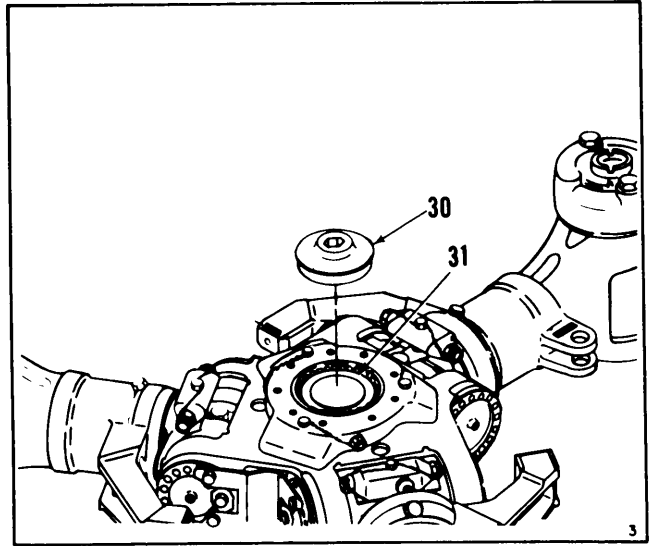**NOTE**

For forward head, install adapter with marking FWD ROTOR THIS SIDE UP on top. For aft head, install adapter with marking AFT ROTOR THIS SIDE UP on top.

9. Install reaction adapter (T28) (32) as follows:

- a. Secure three reaction hooks (33) to adapter (T28) (32), with REMOVAL side out. Use bolts (34).
- b. Position adapter (T28) (32) on top of head (1) with reaction hooks (33) against caps (35) and with handwheels (36) on top.

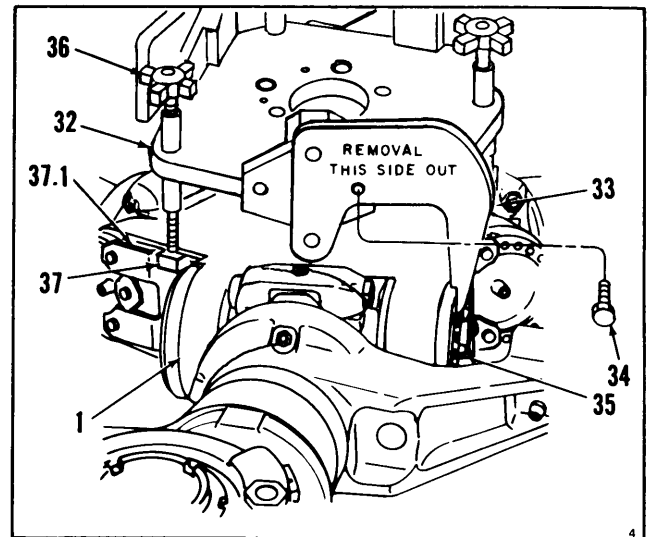**CAUTION**

**Do not overtighten handwheels; otherwise, damage to rotor head or adapter can occur.**

- c. Position three clamps (37) under top flange (37.1) of head (1). Tighten handwheels (36).

**GO TO NEXT PAGE**

10. Install torque applicator (T2) (38) and tee handle (T161) (39) on reaction adapter (T28) (32). Turn handle, if required, to rotate applicator to engage reaction pins (39.1) in adapter.


**CAUTION**

Do not use power tools to turn torque applicator. Applicator could be severely damaged.

**NOTE**

Pins under torque applicator must be fully seated in reaction adapter (T28) to prevent applicator ride-up when torque is first applied.

11. Turn handle (39) counterclockwise until nut (31) is loose.
12. Continue to loosen nut (31) until torque drops to near 0 foot-pounds. Use speed handle if available.
13. Try to rock applicator (T2) (38). If applicator rocks, go to step 14. If applicator cannot be moved, continue to turn handle (39) until torque forces are relieved. Remove handle.

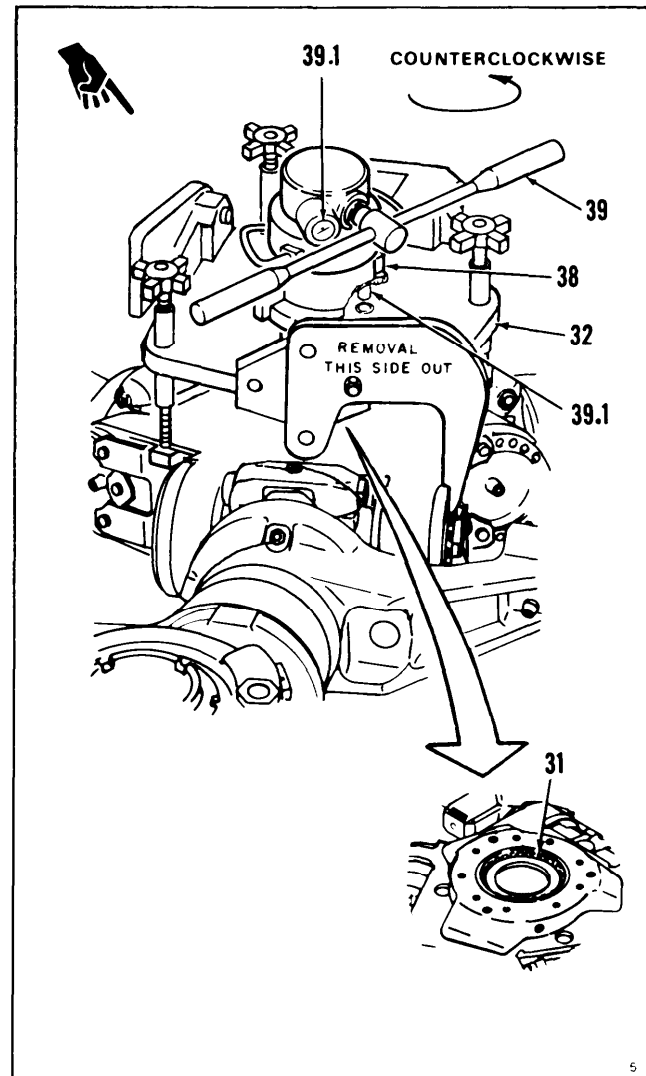


**5-8 REMOVE ROTARY-WING HEAD (Continued)****5-8**

14. Remove torque applicator (T2) (38).
- 14.1. Remove reaction adapter (T28) (32) as follows:
  - a. Loosen three handwheels (36).
  - b. Turn clamps (37) outward.
  - c. Lift reaction adapter (32) from head (1).
- 14.2. Turn socket (30) and nut (31) counter-clockwise by hand.


**NOTE**

The socket can be turned using a suitable tool in the drive hole if it cannot be turned by hand.

15. Remove socket (T29) (30).
16. Remove hub retaining nut (31) and washer (40).

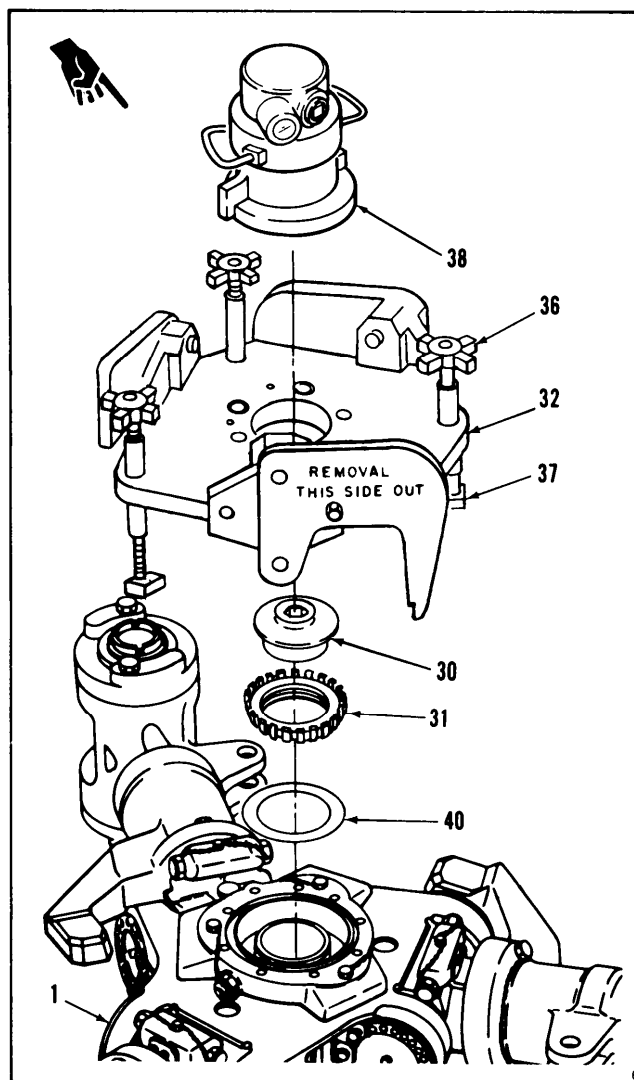**LIFT HEAD**

17. Prepare rotor-head lifting device (T30) (41) as follows:
  - a. Remove three pins (42).
  - b. Turn support arms (43) outward.
  - c. Check that there is a phenolic pad (43.1) on the shoulder of each support arm (43) and on the underside of each block (43.2).
  - d. Check that the distance between centers of the threaded shaft (43.3) of each support arm (43) is not more than 15.25 inches.
  - e. Check that shoulder and threaded shaft of each support arm (43) is an integral assembly, not welded together.
  - f. Check that handle (43.4) is welded to both surfaces of plate (41).

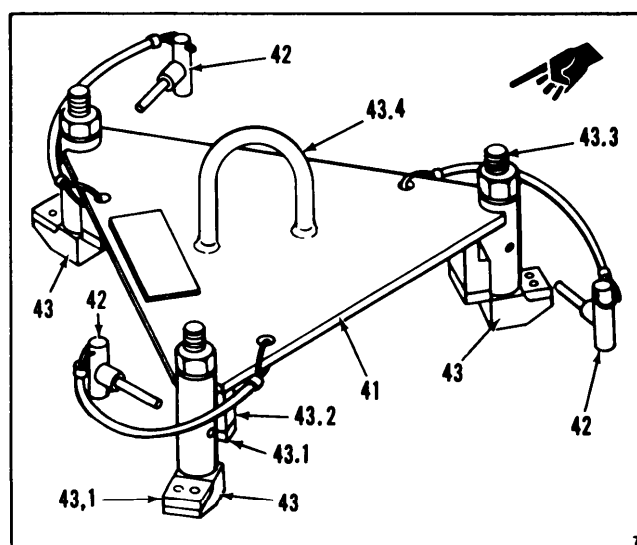**GO TO NEXT PAGE**



17.1. Install lifting device (T30) (41) as follows:

- a. Position lifting device (T30) (41) on head (1).
- b. Turn three arms (43) inward under top flange (43.5) of head (1). Make sure each arm points to the center of device (41) within 20 degrees. Make sure each arm engages flange (43.5) at least 1/4 inch.
- c. Install three pins (42).

**CAUTION**

Do not use wrench to tighten nuts. Lifting device (T28) can be damaged.

- d. Hand-tighten three nuts (44).

18. Attach two rope guide lines (45) around pitch housing (5). Attach hoist (46) to lifting device (T30) (41).

**WARNING**

Head weighs 700 pounds (1,750 pounds with blades attached) and can injure personnel if it drops. Head must be supported by hoist and moved carefully to prevent injury.


**WARNING**

If rotor blades are installed, use special care to prevent blades from uncontrolled swinging. Station personnel at tiedown lines of all blades. Attempting to remove head without securing blades can result in injury to personnel and damage to helicopter.

**CAUTION**

Lift and lower head slowly and carefully to prevent damage to splines, thread, and surfaces.

19. Lift head (1). Use hoist (46).
20. If rotor blades are not installed, position head (1) on handling adapter (T13) (47). Have helper guide head.
21. Remove three pins (42). Loosen three nuts (44) and turn three arms (43) outward. Remove lifting device (T30) (41).

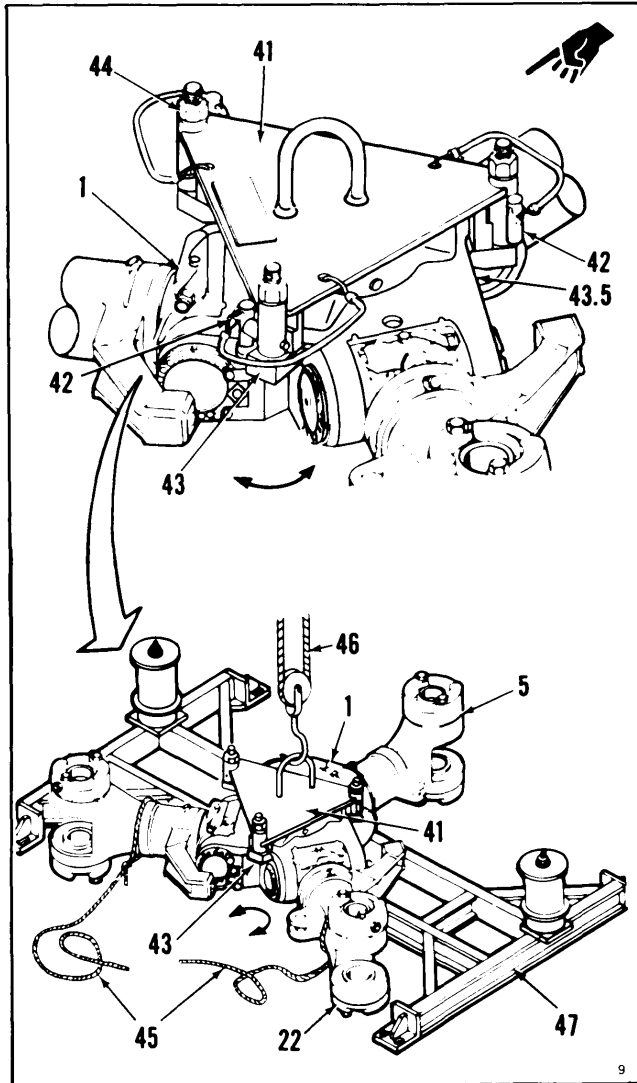


**GO TO NEXT PAGE**


58 REMOVE ROTARY-WING HEAD (Continued)

5-8

- 22. Remove rope guide lines (45).
- 23. Install plate (48), washer (49) and locknut (50) on handling adapter (T13) (47).

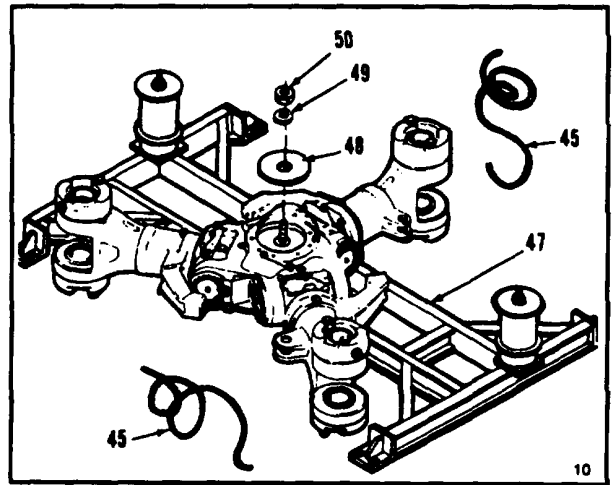


- 24. Cover splines (51) of vertical shaft (52). Use barrier material (EO8) and tape (E388).

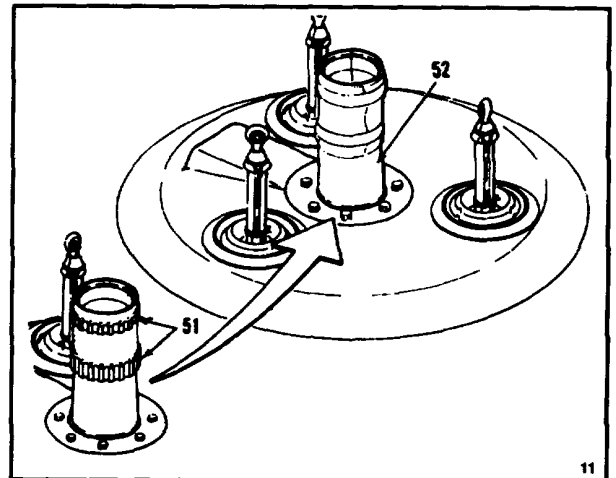

FOLLOW-ON MAINTENANCE:

Inspection of Installation Hardware. Inspect retainer (25), cover (26), retaining ring (28), tang washer (29), retaining nut (31) and washer (40) for cracks, distortion, nicks and scratches and for damaged threads on the retaining nut (31).

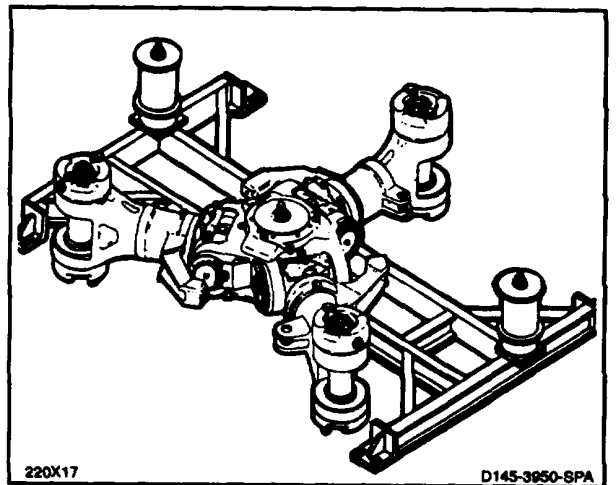

END OF TASK

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit

NSN 5180-00-323-4692

**Materials:**

Lockwire (E231)

Cloth (E120)

Lubricated Oil (E254)

Torque Wrench

**Personnel Required:**

Medium Helicopter Repairer (1)

Inspector

**References:**

Task 1-55

TM 55-1520-240-23-1

**General Safety Instructions:****CAUTION**

A complete or partial restrictions of lubricating oil to the horizontal hinge pin bearings causes premature wear and results in damage to the bearings and related components.



**NOTE**

Six oil lube ports on the upper surface of the rotor hub. These ports are located on both the forward and aft rotor head.

1. Remove lockwire from drain plug (6) located below each horizontal hinge bearing on the rotor head.
2. Remove lockwire from one of the three filler plugs (4) located on the top of (main) oil tank mounted on the top of the rotor head.
3. Remove filler plugs. One from each tank.
4. Remove plug (6). Observe oil flow. If oil flow is present, one oz. minimum, inspection is complete for that drain.
5. If oil flow is not observed, probe the drain hole with a piece of safety wire to free any obstruction.
6. Reinstall drain plug (6) and torque to 16-32 lb-in. Lockwire plug (6) to bolt (7). Use lockwire (E231).
7. Repeat inspection of each drain.
8. Fill the tank with lubricating oil (E254). Refer to (Task 1-55).
9. Reinstall filler plugs (4). Torque 60-108 lb-in. Lockwire plug (4) to sight indicator (2). Use lockwire (E231).

**FOLLOW-ON MAINTENANCE:**

None

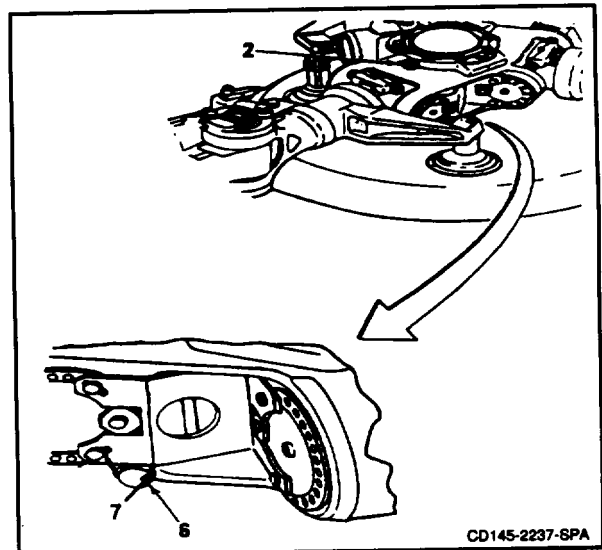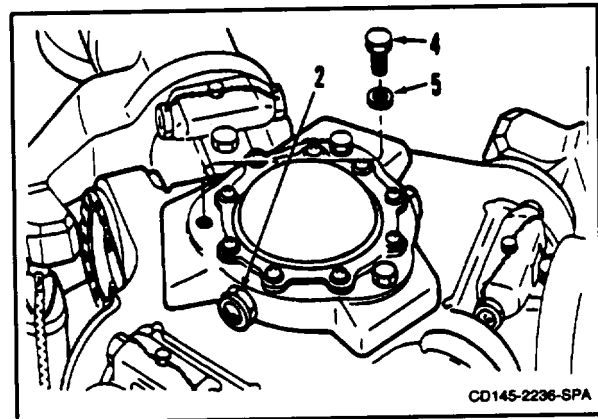

**5-9 INSTALL ROTARY-WING HEAD**

5-9

**INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic Tool Kit,  
NSN 5180-00-323-4692  
Rotor Head Lifting Device (T30)  
Torque Applicator (T2)  
Reaction Adapter (T28)  
Socket (T29)  
Tee Handle (T161)  
Torque Wrench, 0 to 150 Inch-Pounds  
Hoist  
Rope Guide Lines  
Depth Micrometer, 1 to 12 inches  
Rawhide Mallet  
**1-Inch Brush**

**Materials:**

Grease (E190)  
Cloth (E120)  
Dry Cleaning Solvent (E162)  
Gloves (E186)

**Parts:**

Packing  
Cotter Pins

**Personnel Required:**


Medium Helicopter Repairer (6)  
Inspector

**References:**

Task 5-8  
Task 5-9  
TM 55-1520-240-23P

**General Safety Instructions:****CAUTION**

Head, splines, and hub nut thread require a thick brush coat of grease. Seating surfaces of droop stop plate, spacer, and head must be clean and grease free. Dirty seating surfaces can cause decrease in hub nut torque. This could result in damage to head, nut, or rotor shaft.

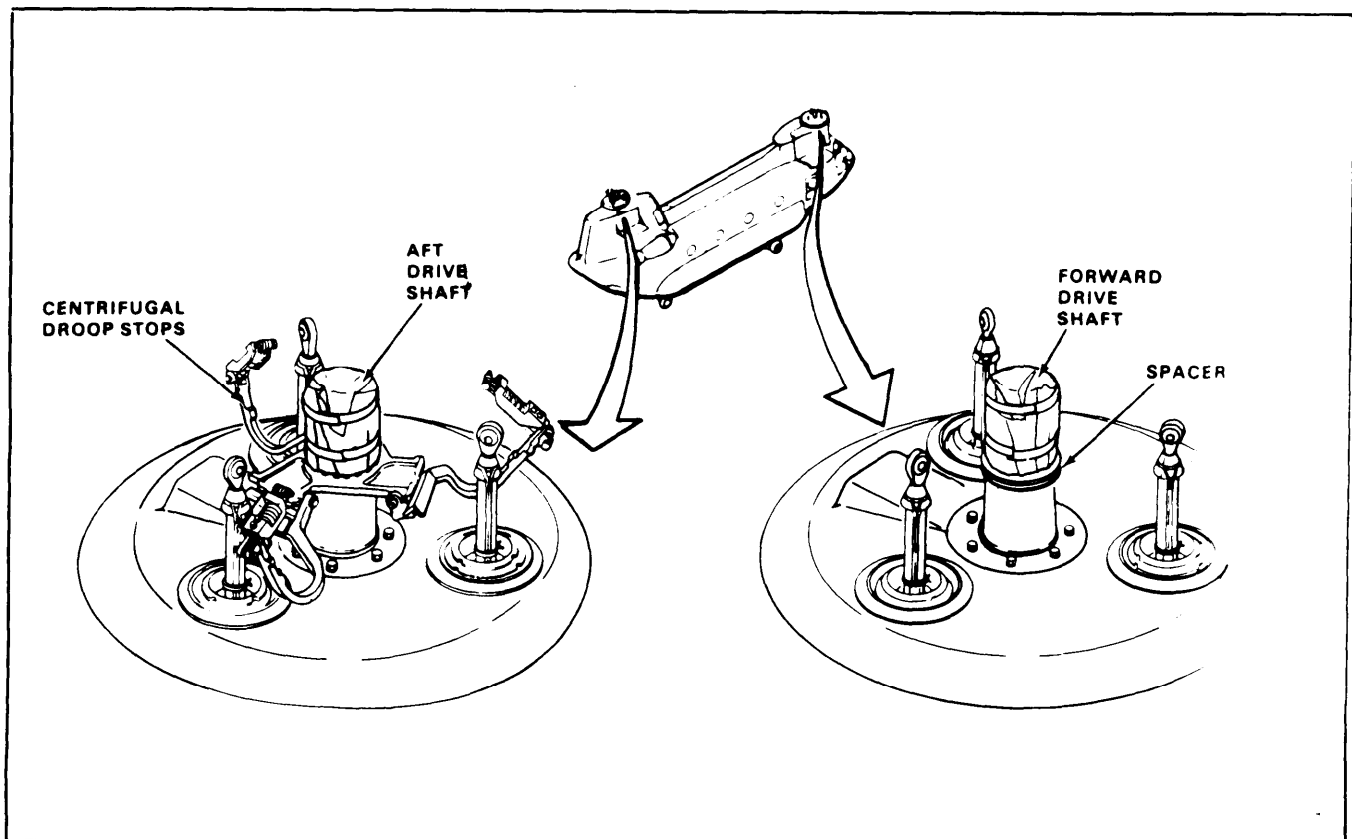**GO TO NEXT PAGE**

Change 23


5-47

**WARNING**

Drycleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**NOTE**

- Procedure is similar to install rotary-wing head with or without blades attached. Installation of rotary wing-head with blades removed is shown.
- Task is similar for forward and aft rotary-wing heads. Differences are noted in ext. Forward rotary-wing head can be installed with forward transmission package in workstand.

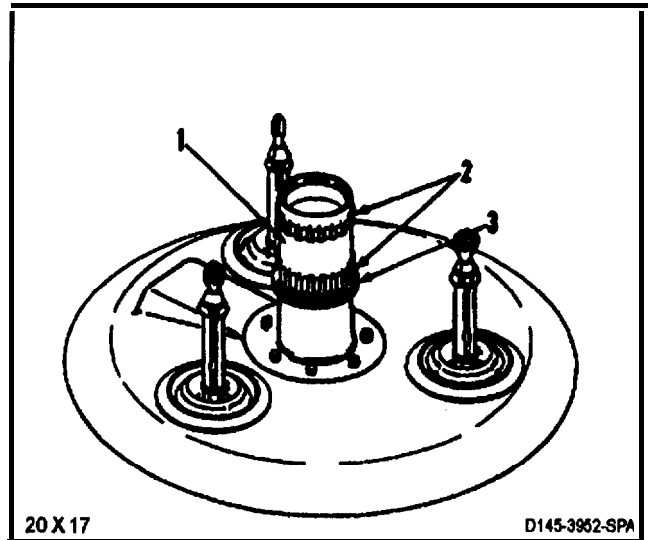


**WARNING**

Check rotor hub data plate serial number to ensure that it does not read UW3018. If rotor hub (S/N UW3018) is found, do not install. Immediately contact the technical point of contact in TB 1-1520-240-20-134.

**CAUTION**

Horizontal hinge pins with serial numbers of UW2407 and prior that do not have a suffix "A" vibro engraved after the serial number and with total time since new of 4800 flight hours or more must be replaced.

1. Remove barrier material from driveshaft (1). Clean splines (2). Use cloth (E120) damp with dry cleaning solvent (E162). Wear gloves (E186). Wipe splines dry. Use clean cloth (E120). Apply thick coat of grease (E190) evenly to splines. Use brush (E86)
2. Check that spacer (3) is installed on shaft (1) of forward transmission.

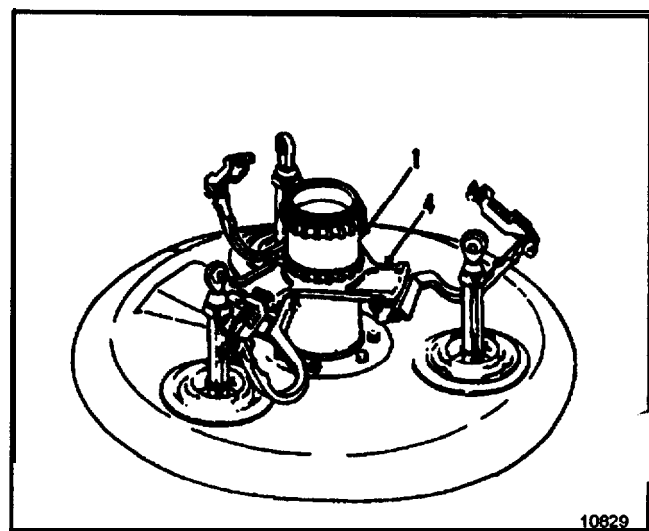

3. Check that centrifugal droop stop (4) is installed on shaft (1) of aft transmission.


**GO TO NEXT PAGE**

**5-9 INSTALL ROTARY-WING HEAD (Continued)**

**PREPARE HEAD**

4. Remove plate (5), washer (6), and locknut (7) from handling adapter (T13) (8).

4.1. Prepare lifting device (T30) (9) for installation (Task 5-8, step 17).

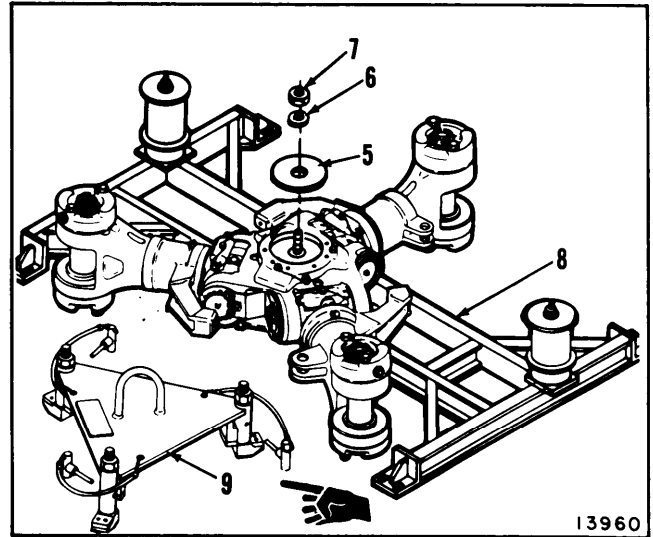


5. Install lifting device (T30) (9) on hub (10) as follows:

- a. Position lifting device (9) on hub (10).
- b. Turn three arms (11) inward under top flange (11.1) of hub (10). Make sure each arm points to the center of device (9) within 20 degrees. Make sure each arm engages flange at least 1/4 inch.
- c. Install three pins (12).

**CAUTION**

Do not use wrench to tighten nuts. Lifting device (T30) can be damaged.


d. Hand-tighten three nuts (13).

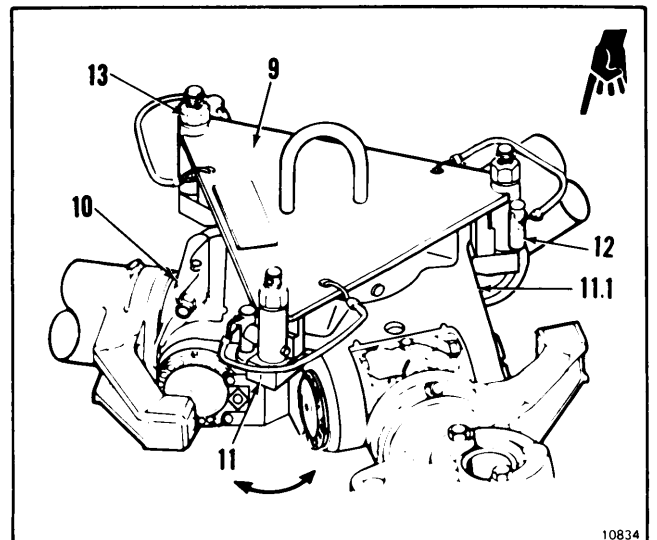

**NOTE**

Fixed droop stops are marked FWD ROTOR BOTTOM or AFT ROTOR BOTTOM.

6. Check that correct fixed droop stops (14) are installed on pitch shaft (10.1) in three places. Check that droop stops are installed with bottom side down as marked.

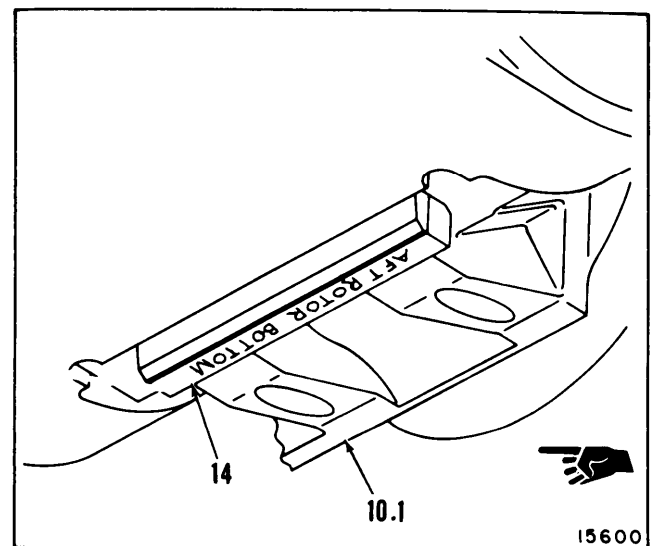

**GO TO NEXT PAGE**

7. Attach two rope guidelines (15) to rotary-wing head (16). Attach hoist (17) to lifting device (T30) (9).

**WARNING**

Head weighs 700 pounds (1,750 pounds) with blades attached and can injure personnel if it drops. Head must be supported by hoist and moved carefully to prevent injury.

**WARNING**


If rotor blades are installed, use special care to prevent blades from uncontrolled swinging. Station personnel at tiedown lines of all blades. Attempting to install head without securing blades can result in injury to personnel and damage to helicopter.

**CAUTION**

Lift and lower head slowly and carefully to prevent damage to splines, thread, and surfaces.

**NOTE**

Grease on shaft splines will be pushed down by head onto seating surfaces.

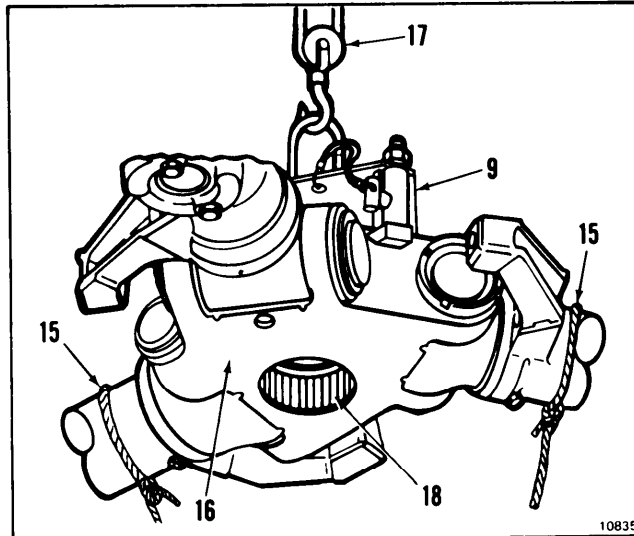**INSTALL HEAD**

8. **Lift head (16).** Use hoist (17). Clean splines (18). Use cloth (E120) damp with solvent (E162). Wipe dry. Use clean cloth (E120). Reach under head and **apply thick coat of grease (E190) evenly to splines (18).** Use a 1-inch brush. Make sure lower surface of head is free of grease. Wear gloves (E186).

**GO TO NEXT PAGE**

5-9 INSTALL ROTARY-WING HEAD (Continued)

- Attach two rope guidelines (15) to rotary wing head (16). Attach hoist (17) to lifting device (T30) (9).

**WARNING**

Head weighs 700 pounds (1,750 pounds with blades attached) and can injure personnel if it drops. Head must be supported by hoist and moved carefully to prevent injury.

**WARNING**

If rotor blades are installed, use special care to prevent blades from uncontrolled swinging. Station personnel at tiedown lines of all blades. Attempting to install head without securing blades can result in injury to personnel and damage to helicopter.

**CAUTION**


Lift and lower head slowly and carefully to prevent damage to splines, thread, and surfaces.

**NOTE**

Grease on shaft splines will be pushed down by head onto seating surfaces.

**INSTALL HEAD**

- Lift head (16).** Use hoist (17). Clean splines (18). Use cloth (E120) damp with solvent (E162). Wipe dry. Use clean cloth (E120). Reach under head and **apply thick coat of grease (E190) evenly to splines (18).** Use a 1-inch brush. Make sure lower surface of head is free of grease. Wear gloves (E186).

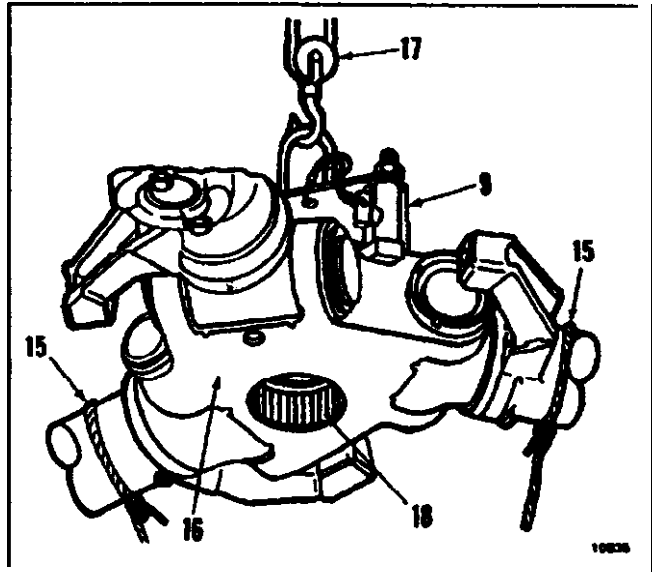




**CAUTION**

Move head slowly when positioning head on shaft. Misalignment can damage head or shaft. Use care to avoid pitch links.

9. **Have helper position head (16)** over drive shaft (1). Align master spline (19) of head with master spline (20) of shaft.
10. **Lower head (16) onto shaft (1)** until hub (10) is seated. Remove excess grease from top and bottom of hub. Use cloths (E120).
11. Remove lifting device (T30) (9) as follows:
  - a. Loosen three nuts (13) and remove three pins (12).
  - b. Turn three arms (11) outward.
  - c. Remove lifting device (T30) (9).
- 11.1. Remove ropes (15).

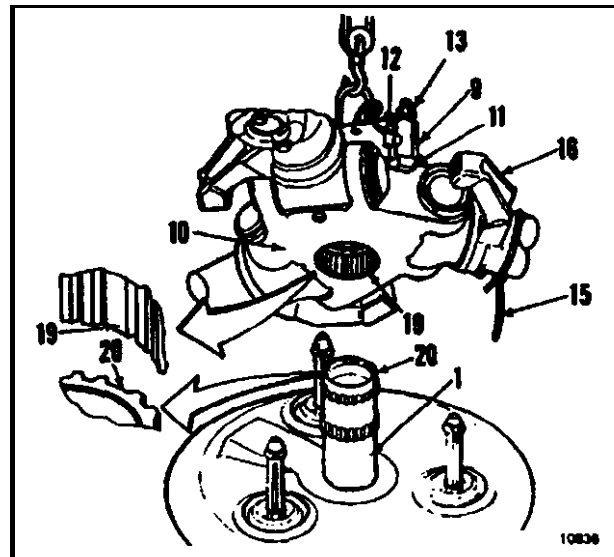

**GO TO NEXT PAGE**

**5-9 INSTALL ROTARY-WING HEAD (Continued)****5-9**

12. Deleted.
13. Deleted.


**INSTALL RETAINING NUT**

14. Install washer (22) on shaft (1).
15. Check thread of hub nut (23) for damaged thread.
16. Apply thinnest possible coat of grease (E190) evenly to thread of nut (23) and exposed thread of shaft (1). Use a 1-inch brush. Wipe excess grease from thread. Use cloth and hand pressure.

**CAUTION**

Use of tools to seat nut may cross threads.


17. Install nut (23) on shaft (1). Use hand pressure only.

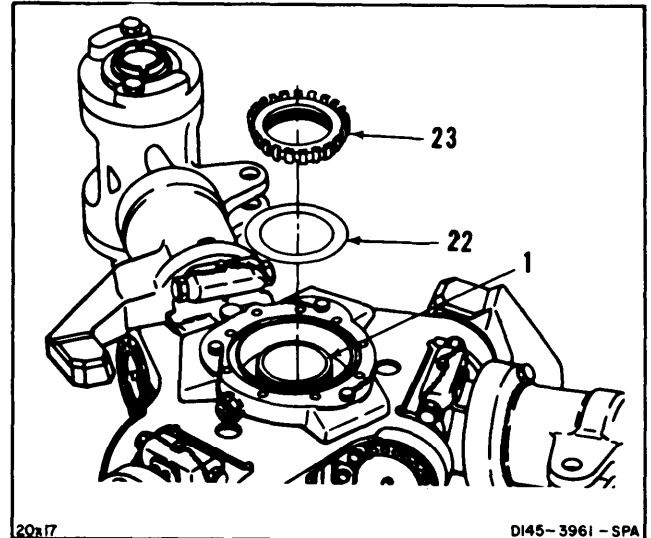**GO TO NEXT PAGE**

18. When nut (23) is fully seated, install socket (T29) (24) on nut (23). Turn nut clockwise hand-tight.

**NOTE**


Speed handle may be used to tighten nut until torque begins to increase.

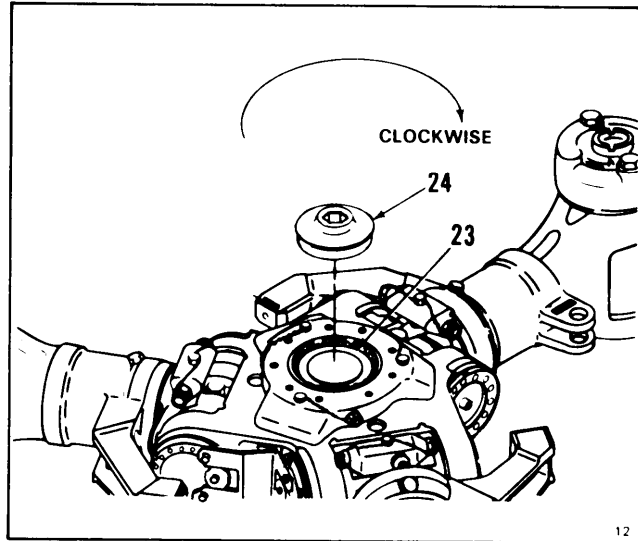

**NOTE**

For forward head, install adapter with marking FWD ROTOR THIS SIDE UP on top. For aft head, install adapter with marking AFT ROTOR THIS SIDE UP on top.

19. Install reaction adapter (T28) (25) as follows:
- a. Secure three reaction hooks (26) to adapter (T28) (25) with INSTALLATION side out. Use bolts (27).
  - b. Position adapter (T28) (25) on top of hub (10), with reaction hooks (26) against caps (28) and with handwheels (29) on top.

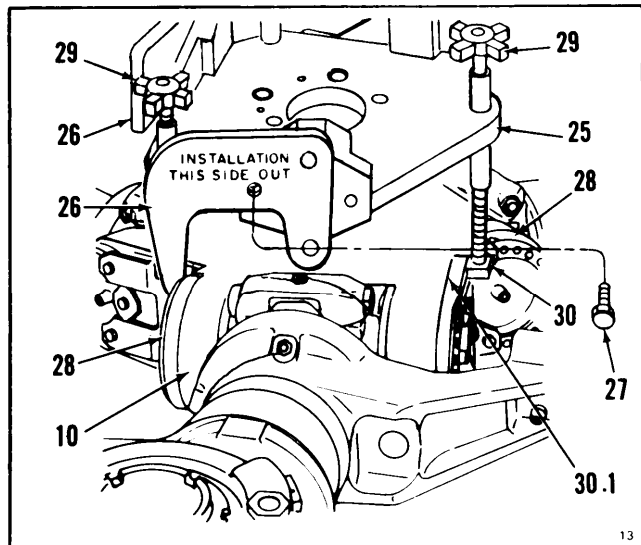

**CAUTION**

Do not overtighten handwheels; otherwise, damage to rotor hub or adapter can occur.

- c. Position three clamps (30) under top flange (30.1) of hub (10). Tighten handwheels (29).

**GO TO NEXT PAGE**


## 5-9 INSTALL ROTARY-WING HEAD (Continued)

5-9

**NOTE**

Pins under torque applicator must be fully seated in reaction adapter (T28) to prevent applicator ride-up when torque is first applied.

20. **Position torque applicator (T2) (31) on reaction adapter (T28) (25).** Turn tee handle (T161) (32) to rotate applicator to engage reaction pins (32.1) in adapter.

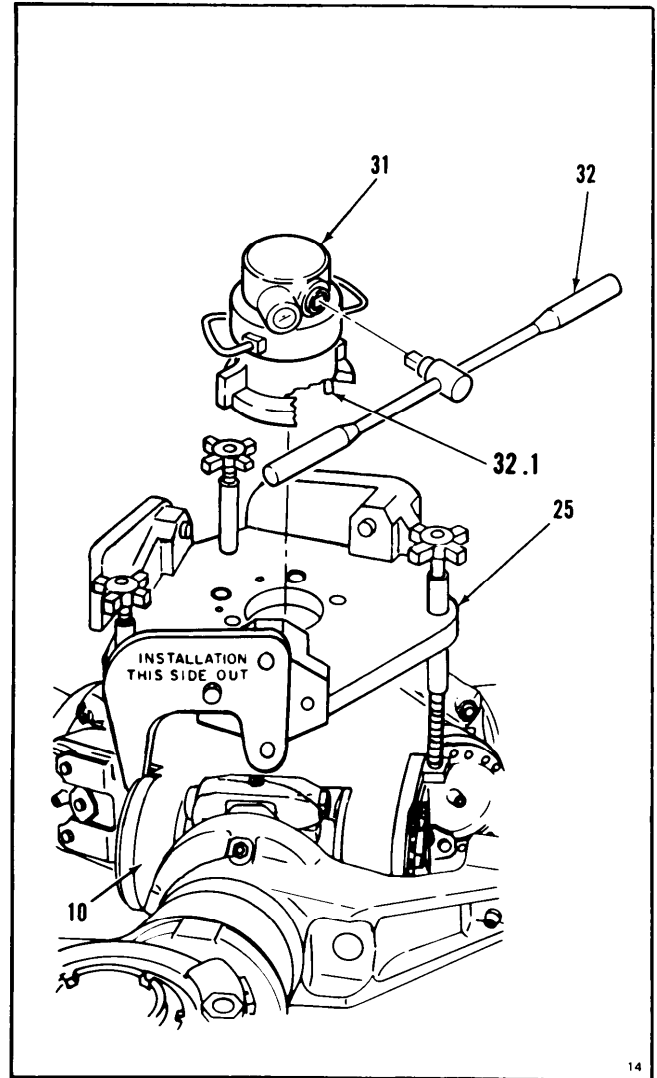**GO TO NEXT PAGE**



**WARNING**

Torque must be applied to hub nut as described. Wrong torque can result in loss of helicopter and loss of life.


**CAUTION**

Do not use power tools to turn torque applicator. Applicator could be severely damaged.

**NOTE**

Gage on torque applicator (T2) is direct reading and shows actual torque applied to nut. Allowable torque range for tang washer alignment is **5500 to 6000 foot-pounds.**



21. Have helper turn handle (T161) (32) **clockwise**. Observe gage (33) on torque applicator (T2) (31). Turn handle until gage indicates **5500 foot-pounds.** Apply torque slowly as gage reading approaches **5500 foot-pounds.**

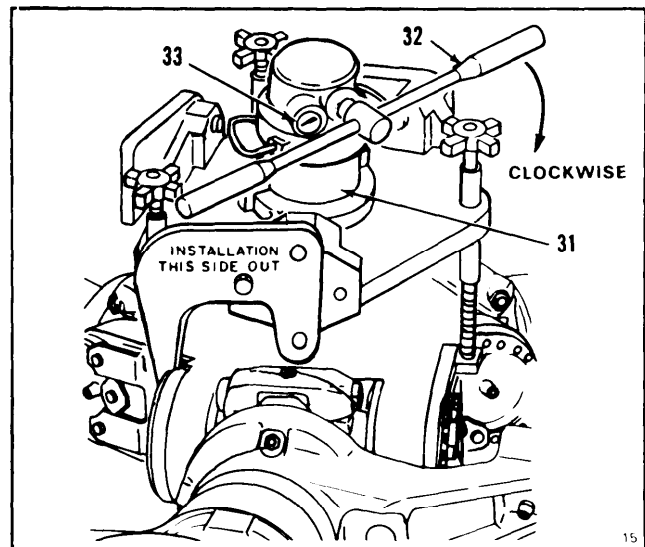

**WARNING**

If handle is turned past an indication of 0 foot-pounds, torque on hub nut may be reduced. of helicopter and loss of life may result.

22. Have helper turn handle (T161) (32) counterclockwise until gage (33) on torque applicator (T2) (31) indicates 0 foot-pounds.
23. Try to rock applicator (T2) (31). If applicator rocks, go to step 24. If applicator cannot be moved, continue to turn handle (32) until torque is relieved.
24. Remove handle (T161) (32) and torque applicator (T2) (31).
25. Remove reaction adapter (T28) (25) as follows:
  - a. Loosen three handwheels (30).
  - b. Turn clamps (29) outward.
  - c. Lift reaction adapter (25) from hub (10).
26. Remove socket (T29) (24).

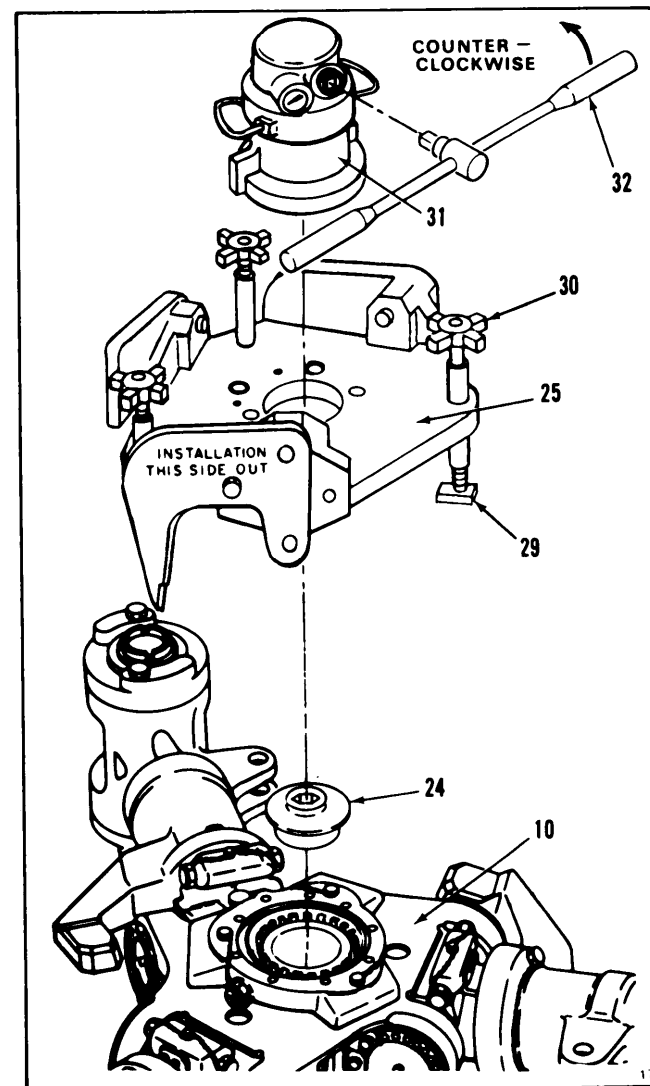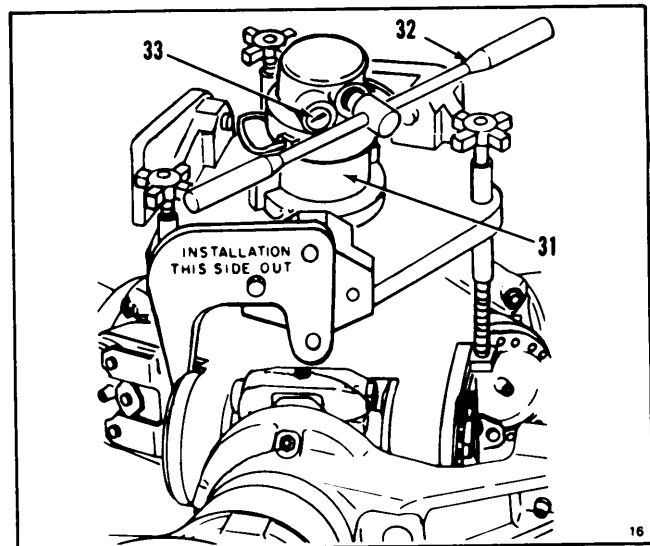

**GO TO NEXT PAGE**

5-54 Change 21

27. Install tang washer (34) on nut (23).

**WARNING**

Do not file tang washer to make it fit. Filing can cause tangs to break causing loss of helicopter and loss of life.

28. If tang washer (34) cannot be seated in any position, repeat steps 12 through 27. **Increase torque** of step 21 to **5750 foot-pounds** to permit washer to be seated.
29. If tang washer (34) cannot be seated in any position, repeat steps 18 through 27, increasing torque to **6000 foot-pounds**.



**WARNING**

Before backing off torque, the three reaction hooks must be reversed so that the REMOVAL side faces out, as in task 5-8. Otherwise, injury to personnel and damage to equipment may occur.

30. If tang washer (34) still will not seat, back off nut (23), (Refer to task 5-8.) Repeat steps 18 through 27, torquing nut to **5600 foot-pounds** and other in-between torques as needed for washer alignment.
31. Install retaining ring (35) in groove of nut (23).

**INSPECT**


32. Install packing (36) on hub oil tank (21).
33. Position cover (37) on hub oil tank (21).
34. Position retainer (38) on cover (37). Install nine screws (39) and washers (40). Torque screws to **23 inch-pounds**.

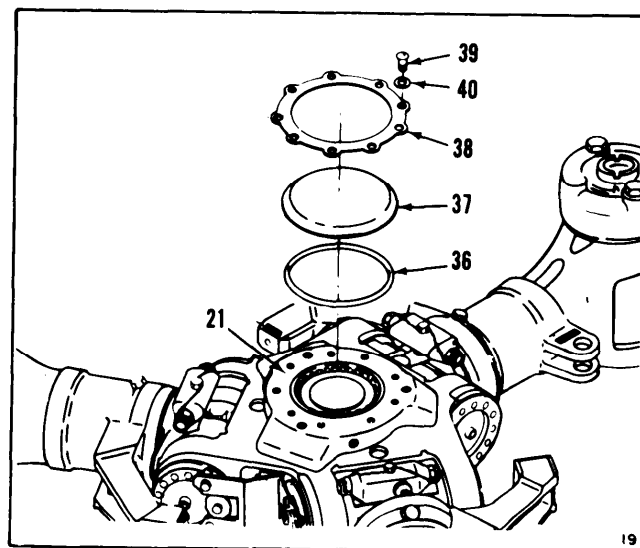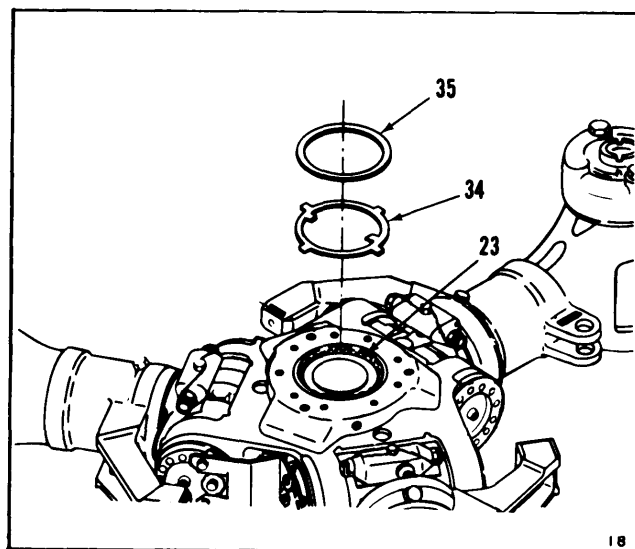

GO TO NEXT PAGE



35. On aft hub oil tank (21) only, connect each of three droop atop springs (41) and limiter springs (42). Refer to Task 5-57.

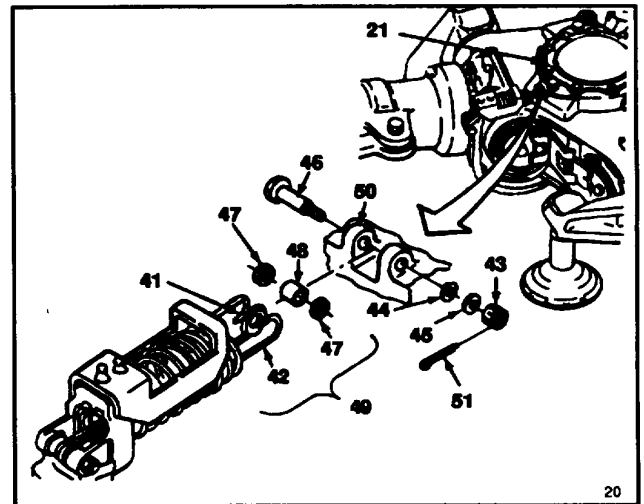

36. Check that there is no gap between flange of bushing (52) and lower surface of lower lug (53).

**CAUTION**


Have qualified Inspector verify that bushings (52) are installed. Damage to rotor head/pitch varying housing will result bushings are left out of lower lugs.

**INSTALL HEAD WITHOUT 50**

37. Install one sliding bushing (54) in each of the three lower lugs (53).

**INSTALL HEAD WITH 50**

38. **Do not install** bushings (54 and 54.1) in each of the three lower lugs (53). Bushings are part of rotor head.

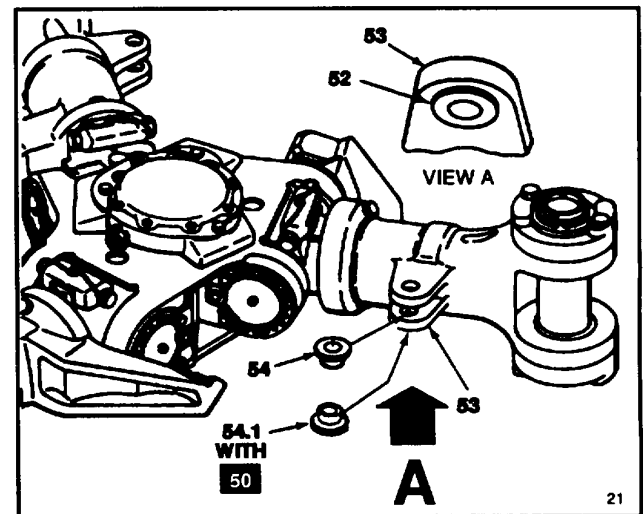

**INSPECT**

**FOLLOW-ON MAINTENANCE:**

- Attach pitch links to pitch housings (Task 5-99).
- Remove pitch lockpins (-22) if blades were attached (Task 5-96.2)
- Check vertical pin angles (Task 11-55).
- Install rotary-wing blades if blades were not attached (Task 5-84).
- Install droop stop shrouds on aft head, if required (Task 5-48.5).

**END OF TASK**

**5-9.1 ROTARY-WING HEAD RETAINING NUT TORQUE CHECK****5-9.1****INITIAL SETUP****Applicable Configurations:**

ALL

**Tools:**

Aircraft Mechanic Tool Kit,  
 NSN 5180-00-323-4692  
 Torque Applicator (T2)  
 Reaction Adapter (T28)  
 Socket (T29)  
 Tee Handle (T161)  
 Torque Wrench, 5 to 50 Inch-Pounds

**Materials:**


None

**Personnel Required:**

Medium Helicopter Repairer (3)  
 Inspector

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
 Electrical Power Off  
 Hydraulic Power Off  
 Forward and Aft Work Platforms Open (Task 2-2)  
 Tiedown Lines Installed on One Forward and One Aft Blade (Task 1-26)

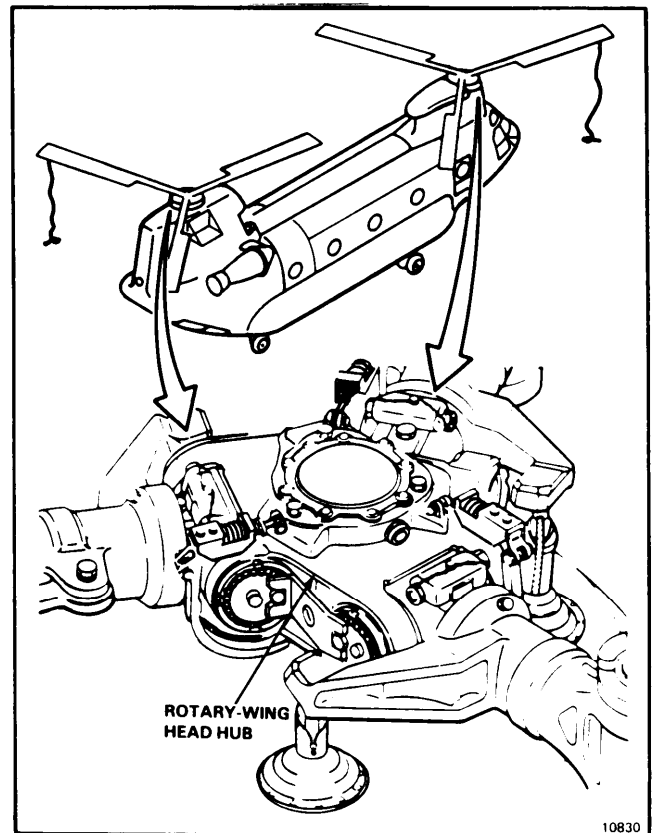**GO TO NEXT PAGE**

## 5-9.1 ROTARY-WING HEAD RETAINING NUT TORQUE CHECK (Continued)

5-9.1

### WARNING

Rotary wing blades can seriously injure personnel. Make sure area around helicopter is clear of personnel before moving blades.

### CAUTION

To prevent dropping and damaging rotor head, use two men when installing reaction adapter.

### NOTE

- The retaining nut torque must be checked following the first flight after rotary-wing head installation.
- Procedure is same for forward or aft rotary-wing heads.

1. Check cockpit controls to ensure thrust control is in the 3° detent position.
2. Remove nine screws (1) and washers (2).
3. **Remove** retainer (3), **cover** (4) and packing (5).
4. Remove retaining ring (6) and tang washer (7).



### NOTE

Use grease pencil to mark a line on nut (9) and socket (8).

5. **Position socket (T29) (8) on hub retaining nut (9).**

### NOTE

For forward head, install adapter with marking FWD ROTOR THIS SIDE UP on top. For aft head, install adapter with marking AFT ROTOR THIS SIDE UP on top.

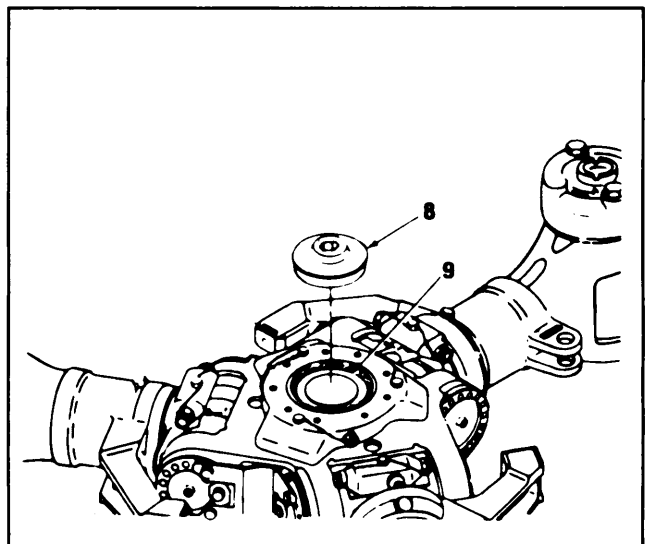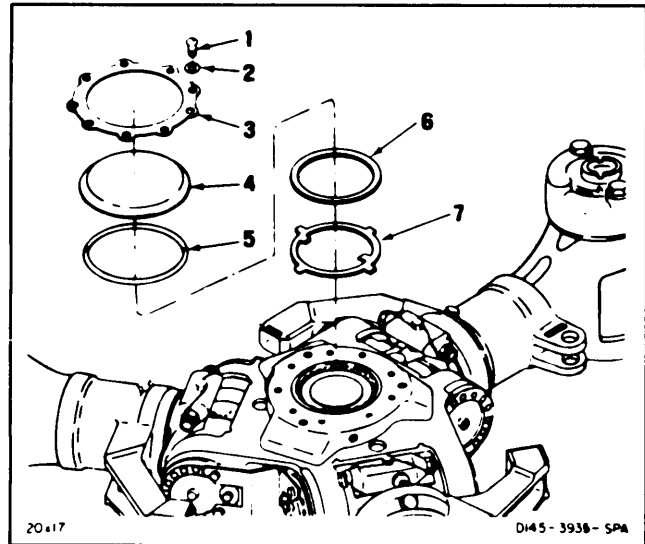

## 5-9.1 ROTARY-WING HEAD RETAINING NUT TORQUE CHECK (Continued)

5-9.1

6. Install reaction adapter (128) (10) as follows:



- a. Secure three reaction hooks (11) to adapter (T28) (10) with INSTALLATION side out. Use bolts (12).
- b. Position adapter (T28) (10) on top of hub (13), with reaction hooks (11) against caps (14).

**CAUTION**

Do not overtighten handwheels; otherwise, damage to component can occur.

- c. Position three clamps (15) under top flange of hub (13). Tighten handwheels (16).

7. Position torque applicator (T2) (17) on reaction adapter (T28) (10). Rotate applicator until it is seated against adapter. Turn tee handle (T161) (18) to rotate applicator until it is fully seated.

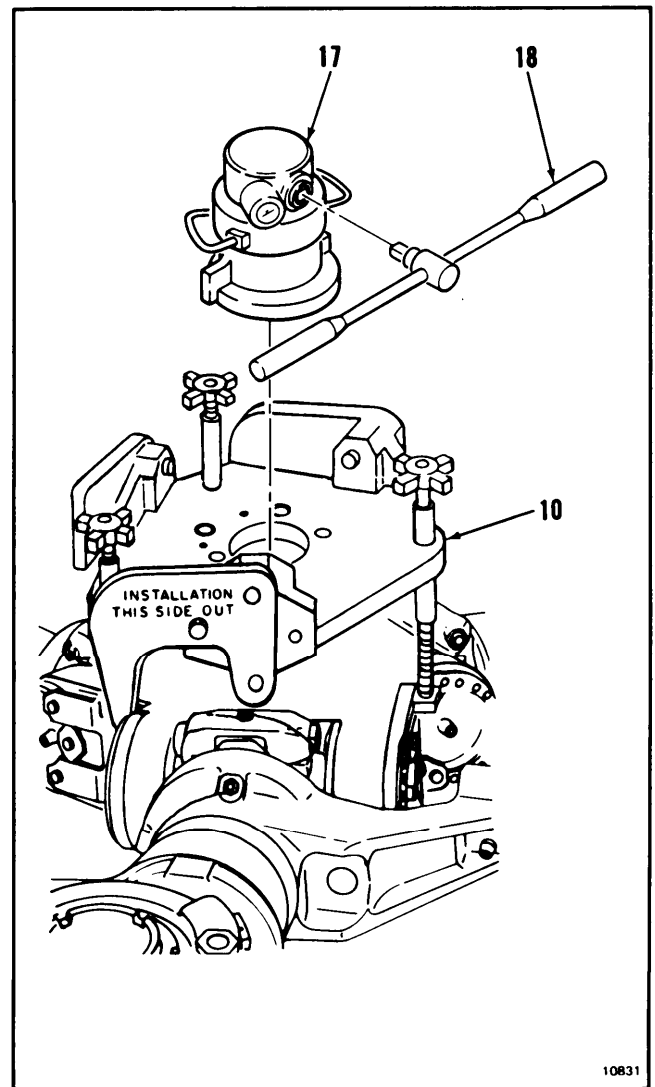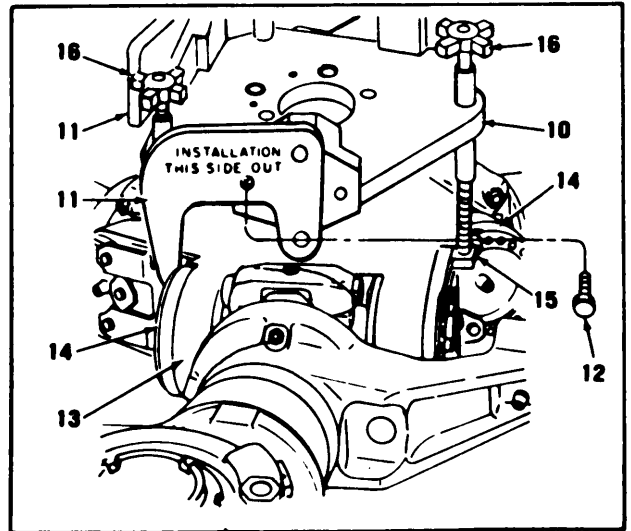

GO TO NEXT PAGE

## 5-9.1 ROTARY-WING HEAD RETAINING NUT TORQUE CHECK (Continued)

5-9.1

### WARNING

Torque must be applied to hub nut as described. Wrong torque can result in loss of helicopter and loss of life.


### CAUTION

Do not use power tools to turn torque applicator. Applicator could be severely damaged.

### NOTE

Gage on torque applicator (T2) is direct reading and shows actual torque applied to nut. Allowable torque range for tang washer alignment is 5500 to 6000 foot-pounds.


8. Have helper turn handle (T161) (18) **clockwise**. Observe gage (20) on torque applicator (T2) (19). Turn handle until gage indicates 5500 to 6000 foot-pounds. Apply torque slowly as gage reading approaches 5500 foot-pounds.

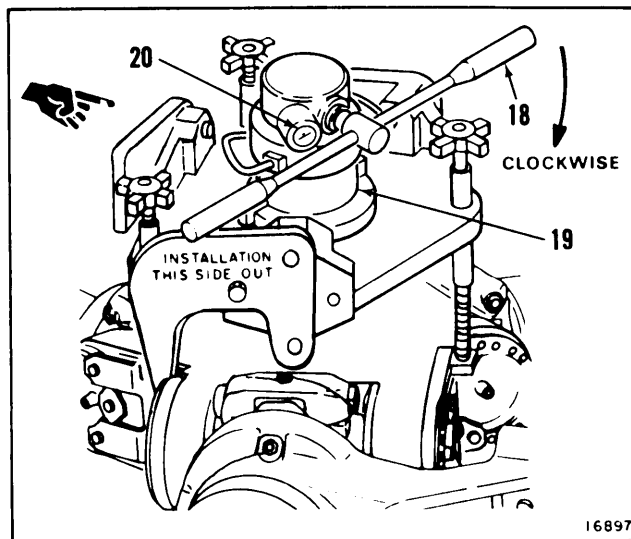

### WARNING

If handle is turned past indication of 0 foot-pounds. torque on hub nut may be reduced. Loss of helicopter and loss of life can result.

9. Have helper turn handle (18) **counterclockwise** until gage (20) on torque applicator (T2) (19) indicates 0 foot-pounds. Do not continue turning handle.
10. Try to rock applicator (T2) (19). If applicator rocks, go to step 11. If applicator cannot be moved, continue to turn handle (T161) (18) until torque forces are relieved.

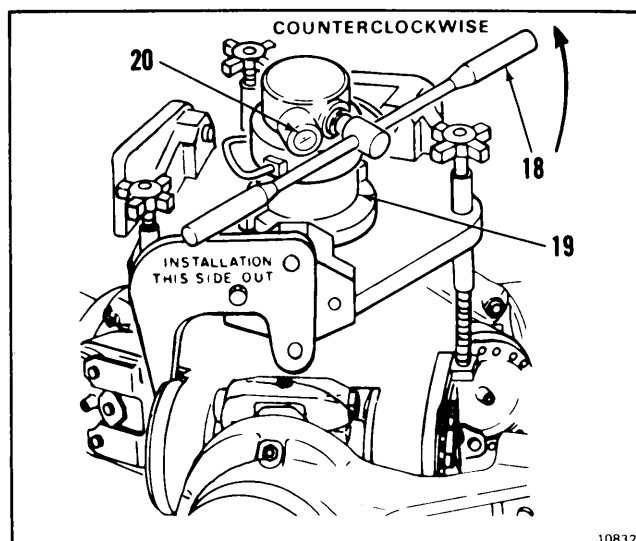


## 5-9.1 ROTARY-WING HEAD RETAINING NUT TORQUE CHECK (Continued)

5-9.1

11. Remove handle (T161) (18) and torque applicator (T2) (19).
12. Remove reaction adapter (T28) (10) as follows:
  - a. Loosen three handwheels (16).
  - b. Turn clamps (15) outward.
  - c. Lift reaction adapter (10) from hub (13).
13. Remove socket (T29) (8).
14. Check nut (9) for movement. If nut did not move during torque check, go to step 15. If nut (9) moved, make an entry in the helicopter log book that nut (9) must be checked following the next flight.

### NOTE

If at the subsequent recheck, the nut again turns at the minimum torque, remove the rotary-wing head and inspect for contamination, incorrect installation, or defective components.

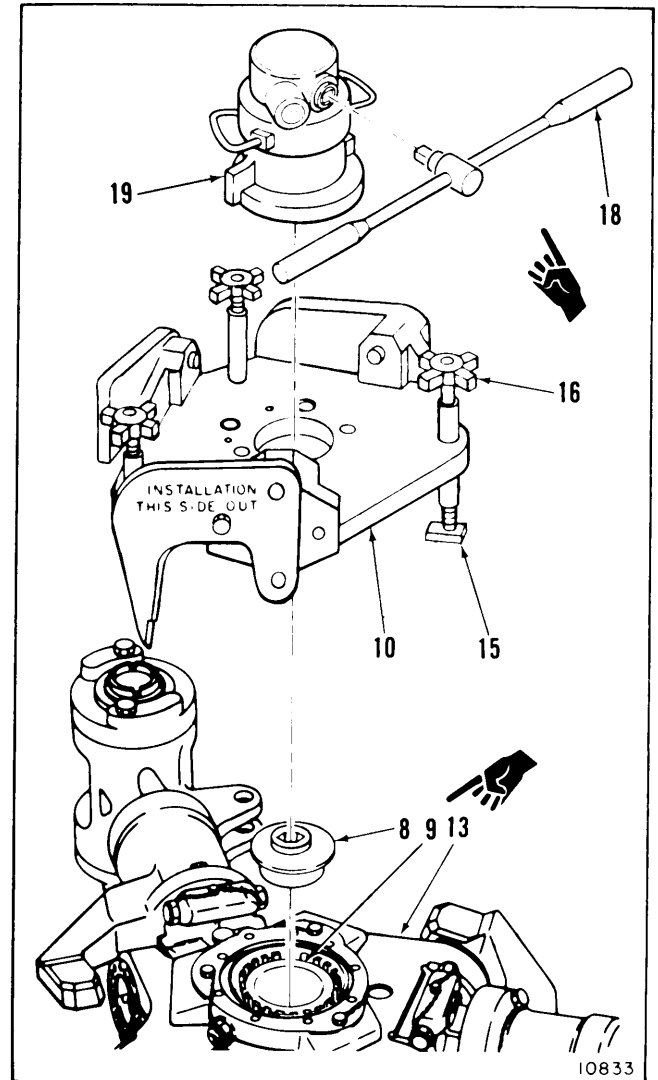

**GO TO NEXT PAGE**

## 5-9.1 ROTARY-WING HEAD RETAINING NUT TORQUE CHECK (Continued)


5-9.1

15. Install tang washer (7) on nut (9).

**WARNING**

Do not file tang washer to make it fit. Filing can cause tangs to break causing loss of helicopter and loss of life.


16. If nut (9) moved during torque check and tang washer (7) cannot be seated in any position, repeat steps 6 through 15. Increase/vary torque upward accordingly, not to exceed 6000 foot-pounds to seat tang washer (7).
17. Install retaining ring (6) in groove of nut (9).

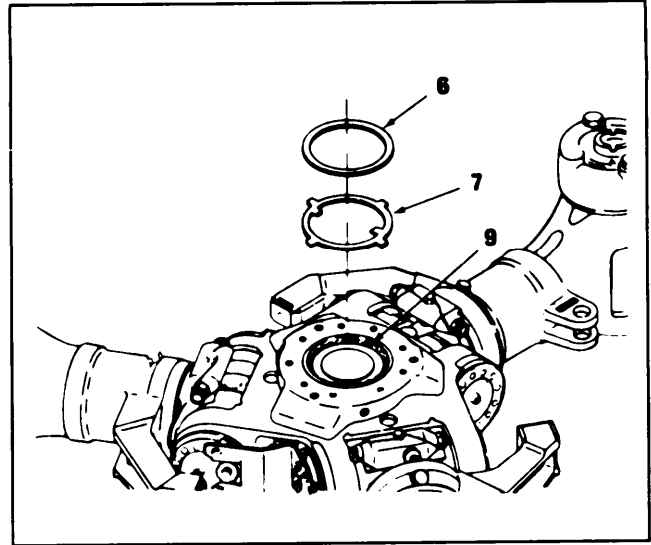

**INSPECT**

18. Install packing (5) on hub oil tank (13).
19. Position cover (4) on hub oil tank (13).
20. Position retainer (3) on cover (4). Install nine screws (1) and washers (2). Torque screws to 23 inch-pounds.

**INSPECT**

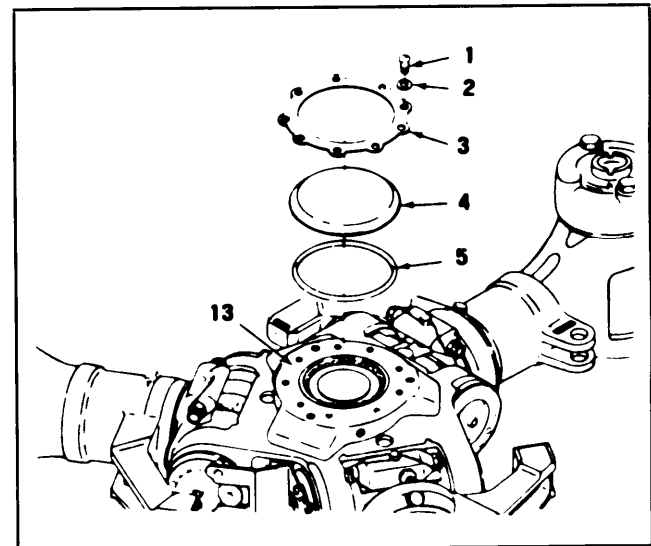

**FOLLOW-ON MAINTENANCE:**

- Close forward or aft work platforms (Task 2-2).
- Remove tiedown lines from forward and aft blades.

**END OF TASK**

5-58.4 Change 21

**5-10 REMOVE HUB OIL TANK SIGHT INDICATOR**

5-10

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Container, Two Quart

**Materials:**

Lockwire (E231)

**Parts:**


Packing

**Personnel Required:**

Medium Helicopter Repairer

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Tiedown Line Installed on One Forward and One  
Aft Blade (Task 1-26)  
Forward or Aft Work Platform Open (Task 2-2)

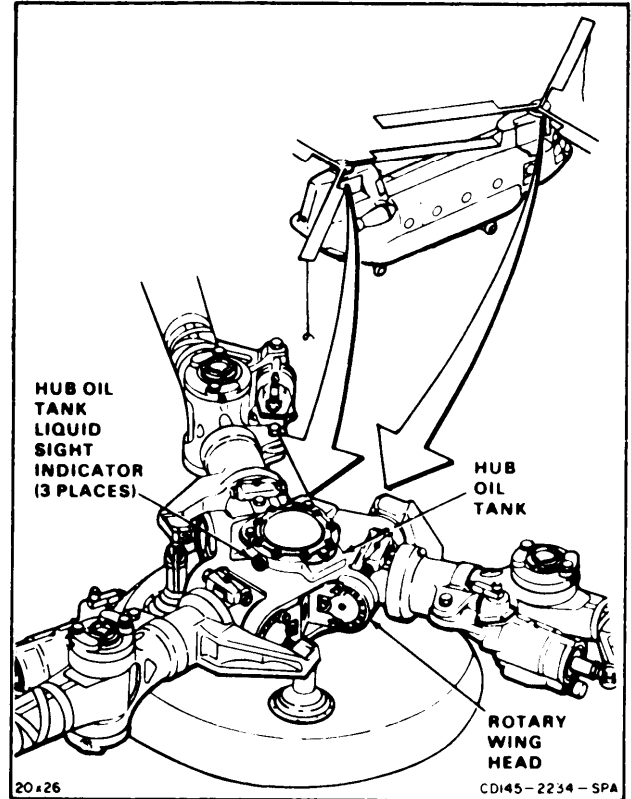


**WARNING**

Rotor blades can seriously injure personnel. Make sure area around helicopter is clear of personnel before moving rotor blades.

**NOTE**

Procedures are same for removing any hub oil tank sight indicator.

1. Turn rotor blades (1) until sight indicator (2) to be removed faces aft. Use tiedown line (3) to turn blades.

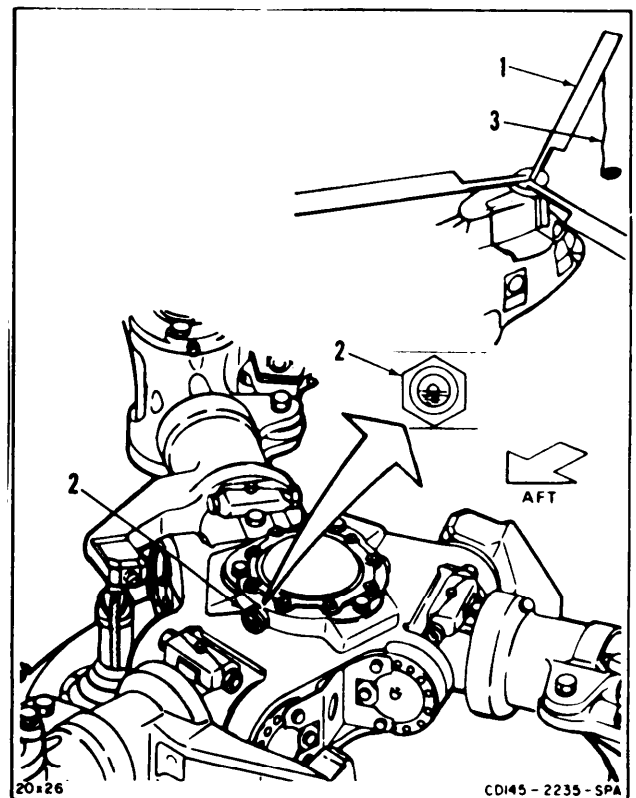

**GO TO NEXT PAGE**







## 5-10 REMOVE HUB OIL TANK SIGHT INDICATOR (Continued)

5-10

2. Remove lockwire between filler plug (4) and sight indicator (2). Remove filler plug and packing (5).

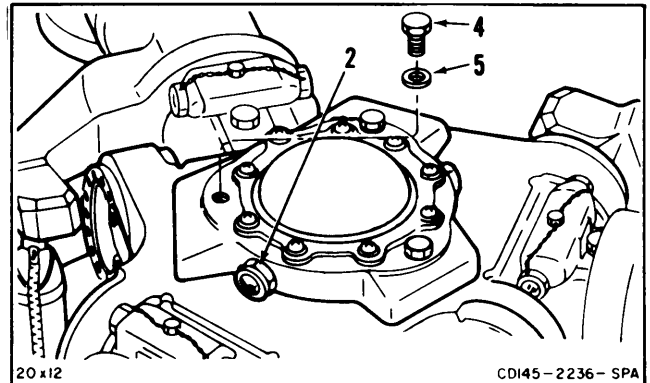


3. Remove lockwire from aft drain plug (6). Loosen plug and **drain oil until oil level below sight indicator (2)**. Use container for oil.
4. Tighten and lockwire drain plug (6). Use lockwire (E231).

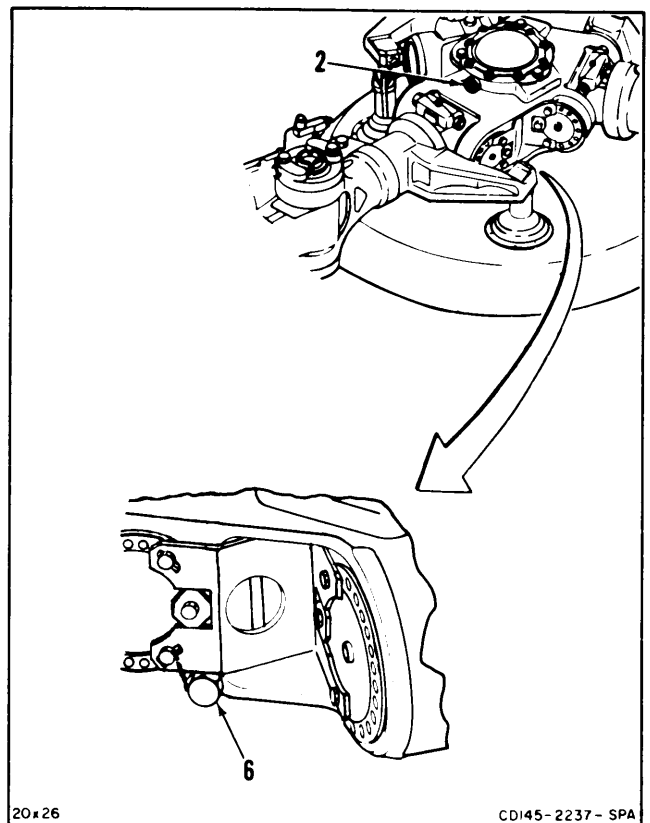

### CAUTION

Do not turn rotors with sight indicator removed. Turning rotors will cause oil to spill from open port.


5. Remove sight indicator (2) and packing (7).

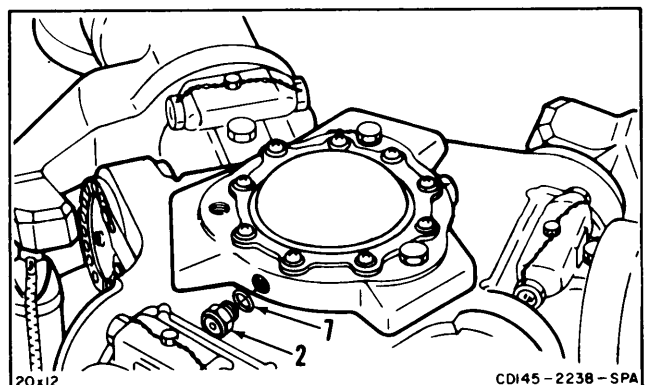

**GO TO NEXT PAGE**

**5-10 REMOVE HUB OIL TANK SIGHT INDICATOR  
(Continued)**

6. Install filler plug (4) and packing (5). Do not torque plug at this time.

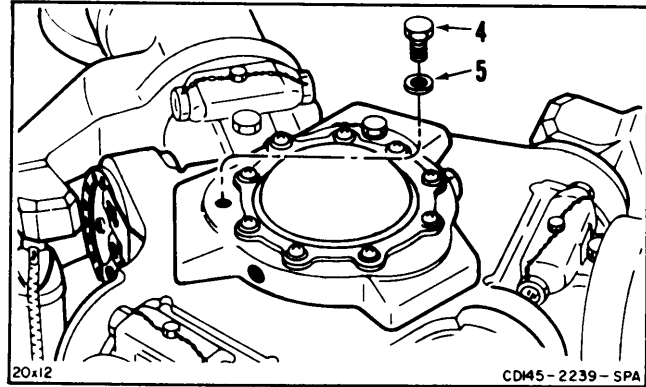

**FOLLOW-ON MAINTENANCE:**

None

**END OF TASK**

## 5-11 INSTALL HUB OIL TANK SIGHT INDICATOR

5-11

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Torque Wrench, 30 to 150 Inch-Pounds

**Materials:**

Lubricating Oil (E254)

**Parts:**


Packing

**Personnel Required:**

Medium Helicopter Repairer  
Inspector

**References:**

TM 55-1520-240-23P

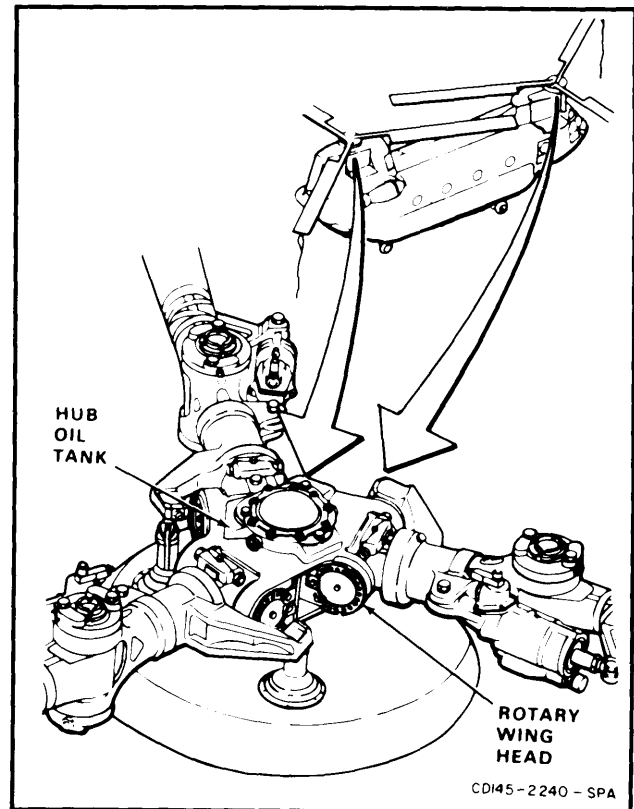
**WARNING**

Oil (E254) is toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes for at least 15 minutes. Get medical attention for eyes.

**NOTE**

Procedures are same for installing any hub oil tank sight indicator.


1. Lubricate packing (1). Use lubricating oil (E254). Install packing (1) on sight indicator (2).
2. Install indicator (2) in hub oil tank (3). Torque indicator to 115 inch-pounds. Do not lockwire at this time.

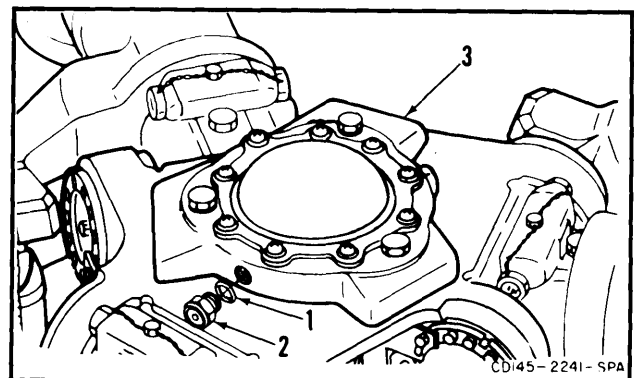

GO TO NEXT PAGE

**5-11 INSTALL HUB OIL TANK SIGHT INDICATOR**  
**(Continued)**

**INSPECT**

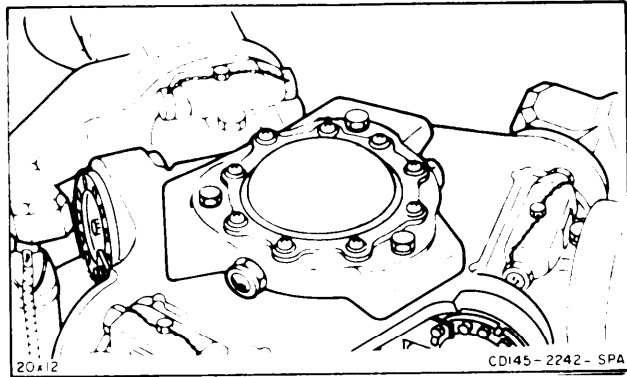

FOLLOW-ON MAINTENANCE:

- Service hub oil tank (Task 1-55).

**END OF TASK**

5-12 REMOVE PITCH HOUSING OIL TANK SIGHT INDICATOR

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Container, Two Quart

**Materials:**

Lockwire (E231)

**Parts:**


Packing

**Personnel Required:**

67U10 Medium Helicopter Repairer

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Tiedown Line Installed on One Forward and  
One Aft Blade (Task 1-26)  
Forward or Aft Work Platform Open (Task 2-2)

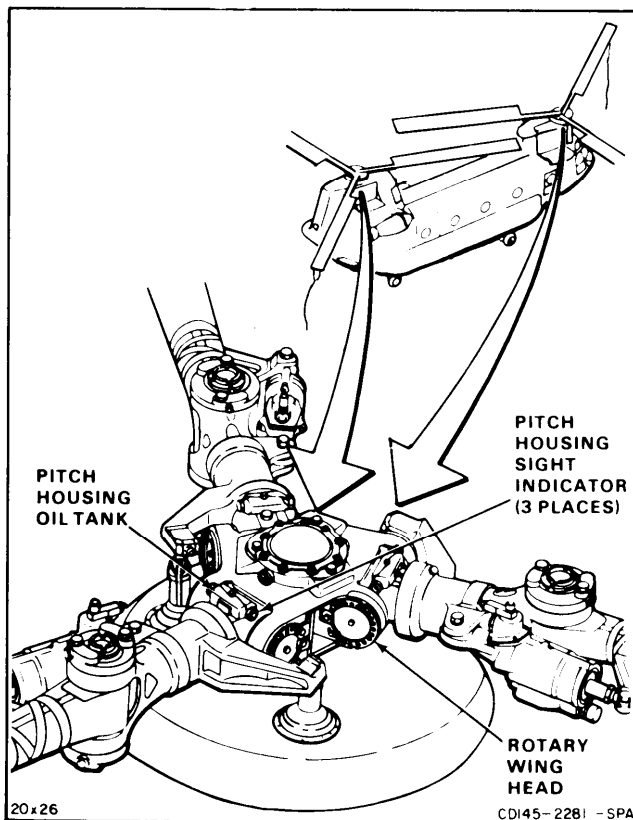


**WARNING**

Rotor blades can seriously injure personnel. Make sure area around helicopter is clear of personnel before moving rotor blades.

**NOTE**

Procedures are same for removing any pitch housing oil tank sight indicator.


1. Turn rotor blades (1) until tank (2) with sight indicator (3) to be removed, is within reach. Use tiedown line (4) to turn blades.

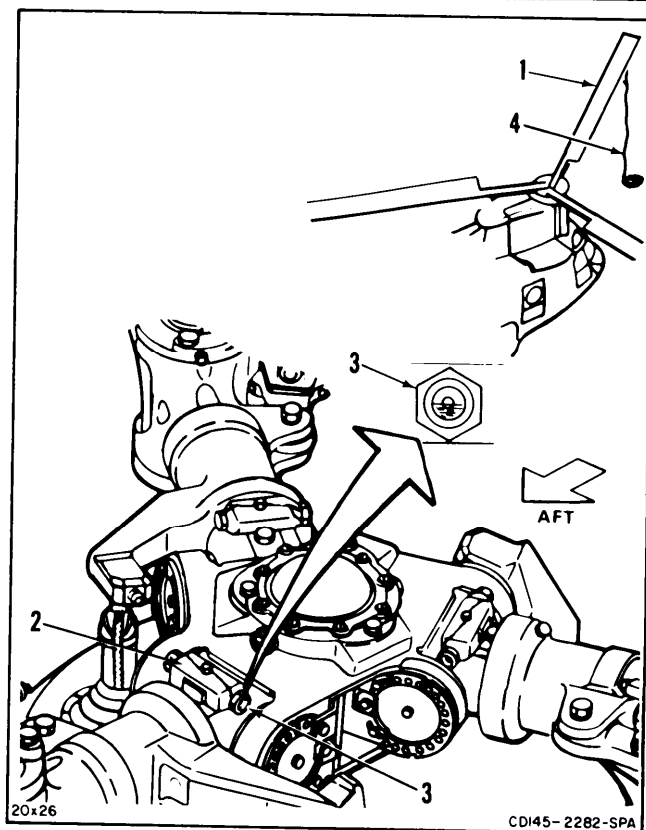


GO TO NEXT PAGE

## 5-12 REMOVE PITCH HOUSING OIL TANK SIGHT INDICATOR (Continued)

- Remove lockwire between filler plug (5) and sight indicators (3). Remove filler plug and packing (7).

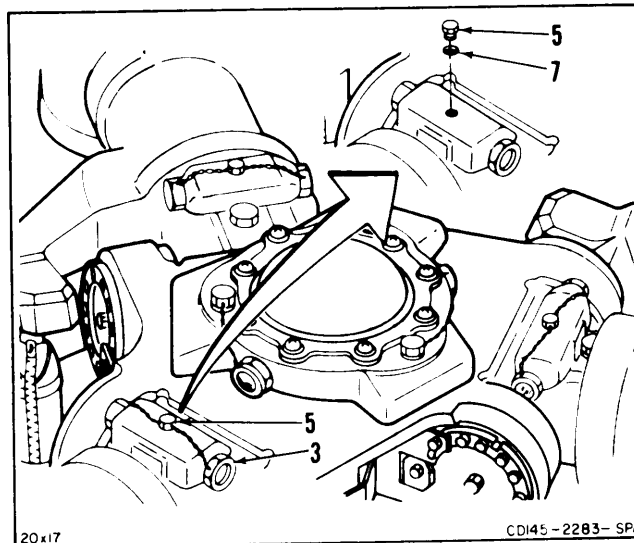


- Remove lockwire from two plugs (8). Loosen plugs and drain oil until oil level is below sight indicator (3). Tighten plugs. Lockwire plugs together. Use lockwire (E231).

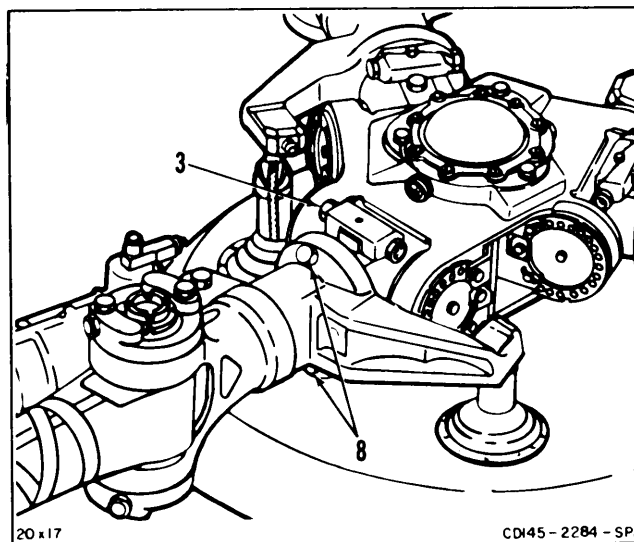

### CAUTION

Do not turn rotors with sight indicator removed. Turning rotors with cause oil to spill from open port.

- Remove sight indicator (3) and packing (9).

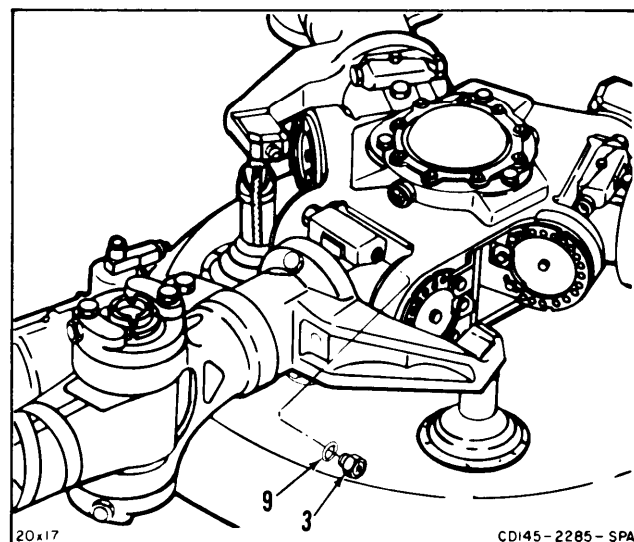

**GO TO NEXT PAGE**


**5-12 REMOVE PITCH HOUSING OIL TANK SIGHT  
INDICATOR (Continued)**

5-12

5. Install filler plug (5) and packing (7). Do not lockwire plug at this time.

FOLLOW-ON MAINTENANCE:

None

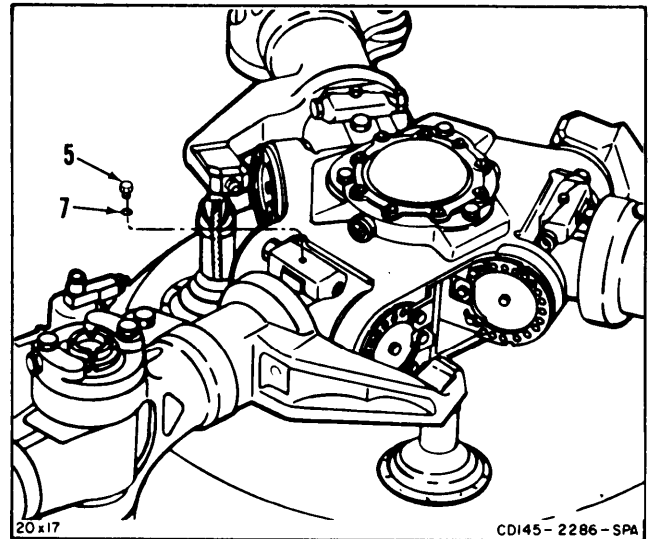

**END OF TASK**



INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692
- Torque Wrench, 30 to 150 Inch-Pounds

**Materials:**

Lubricating Oil (E254)

**Parts:**


Packing

**Personnel Required:**

Medium Helicopter Repairer  
Inspector

**References:**


TM 55-1520-240-23P

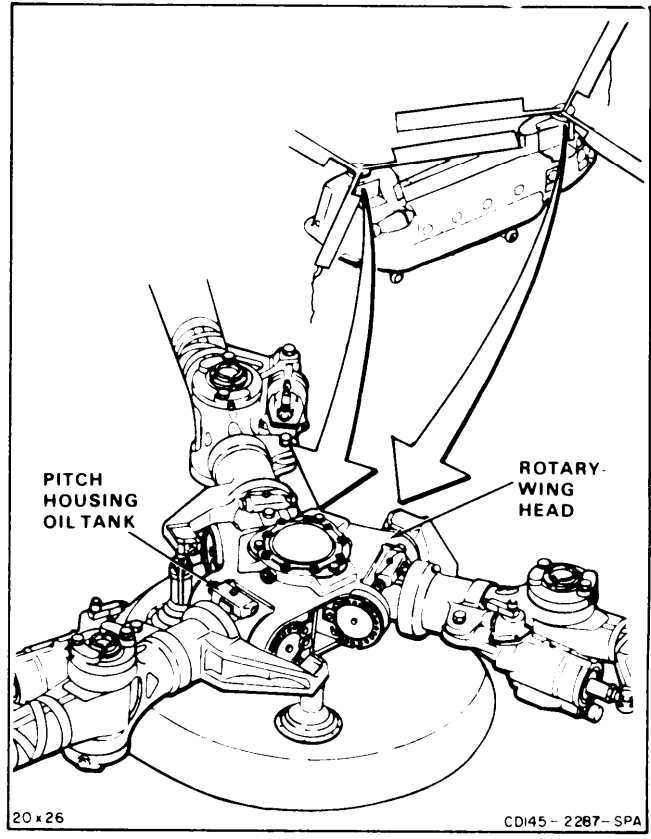

**NOTE**

Procedures are same for installing any pitch housing oil tank sight indicator.


1. Lubricate packing (1). Use lubricating oil (E254). Install packing (1), on sight indicator (2).
2. Install indicator (2) in pitch housing oil tank (3). **Torque indicator to 115 inch-pounds. Do not lockwire at this time.**

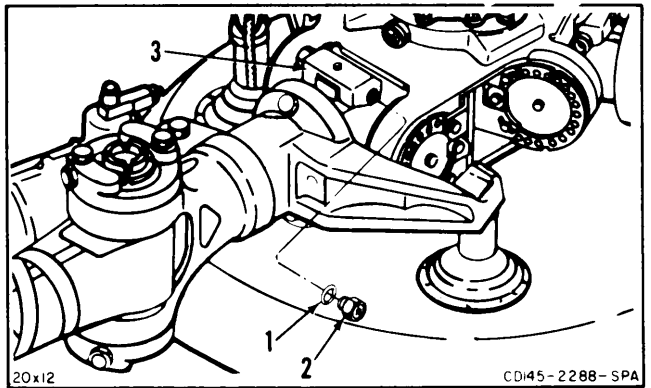

**INSPECT**

FOLLOW-ON MAINTENANCE:

Service pitch housing oil tank (Task 1-56).

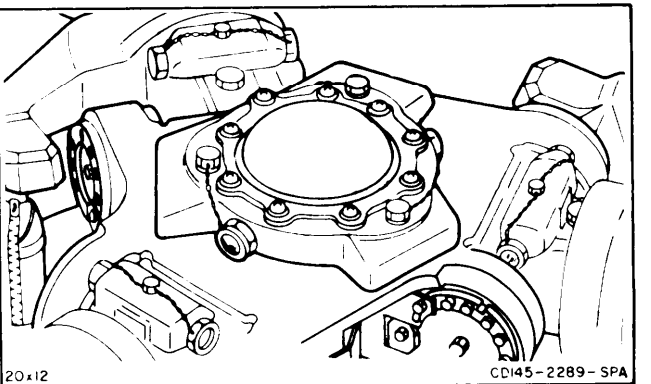

**END OF TASK**

## 5-13.1 REMOVE VERTICAL HINGE PIN OIL TANK SIGHT INDICATOR

5-13.1

### INITIAL SETUP

#### Applicable Configurations:

All

#### Tools:

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Container, Two-Quart  
Torque Wrench, 30 to 150 Inch-Pounds

#### Materials:

Cloth (E120)  
Lockwire (E231)  
Gloves (E186)

#### Parts:


Packings

#### Personnel Required:

Aircraft Powertrain Repairer (2)

#### Equipment Condition:

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Forward Rotor Blade Tied-Down (Task 1-26)  
Work Platform Open (Task 2-2)

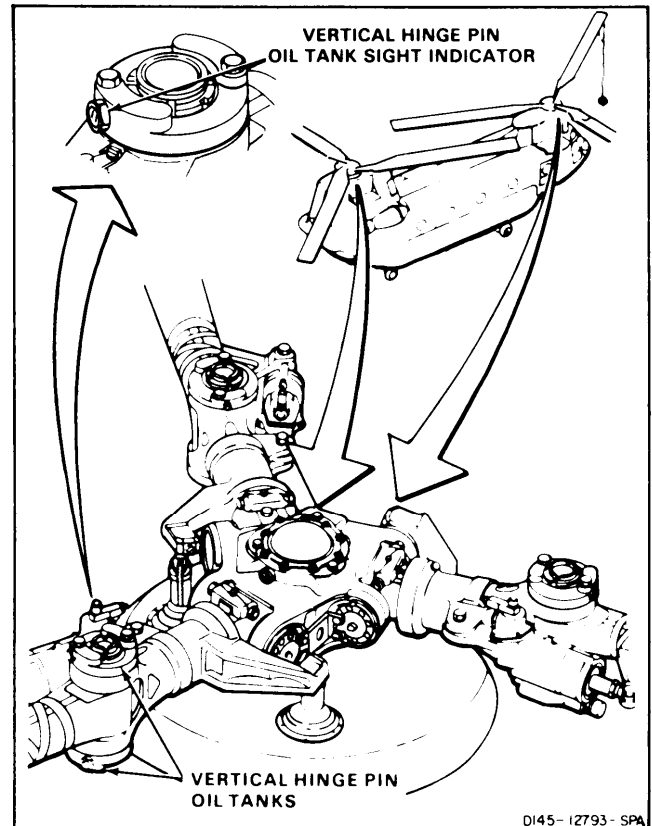

### NOTE


There are 12 vertical hinge pin oil tanks. Two sight indicators are on each oil tank. Procedure is similar to remove any sight indicator. Differences are noted in text.

1. Remove lockwire from one filler/drain plug (1) on upper tank (2). **Remove plug** and packing (3).

### NOTE

One cup of oil must be drained when removing upper tank sight indicator. All oil must be drained when removing lower tank sight indicator.

2. Remove lockwire from one filler/drain plug (4) on lower tank (5). Remove plug and packing (6). **Drain oil.** Use container and cloth (E 120) for spilled oil. Wear gloves (E186).

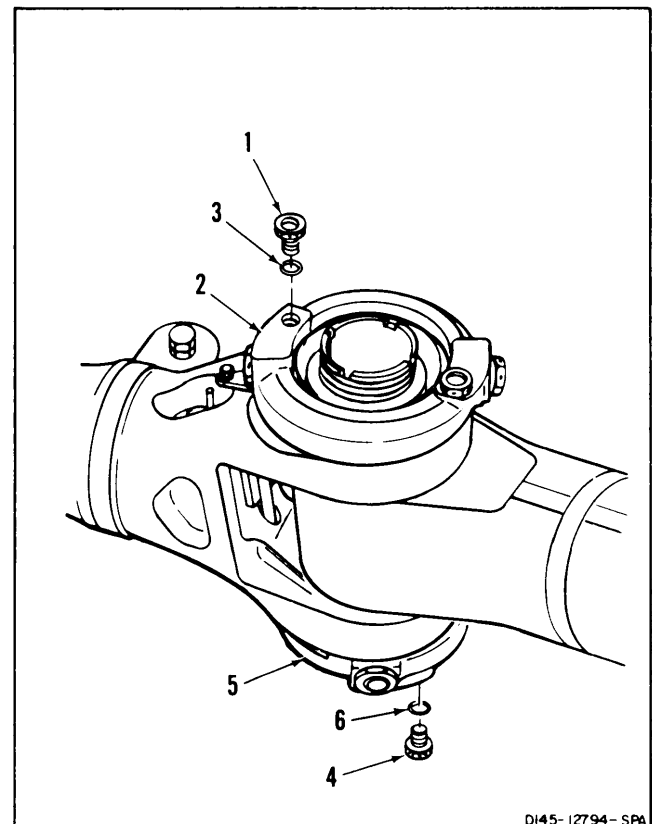

**GO TO NEXT PAGE**

Change 2


5-66.1

**5-13.1 REMOVE VERTICAL HINGE PIN OIL TANK SIGHT INDICATOR (Continued)**

5-13.1


3. Remove lockwire from sight indicator (7).  
**Remove sight indicator and packing (8).**
4. Install lower plug (4) and packing (6).  
**Torque plug to 85 inch-pounds.**
5. Lockwire plug (4) to sight indicator (9). Use lockwire (E231).

**INSPECT**

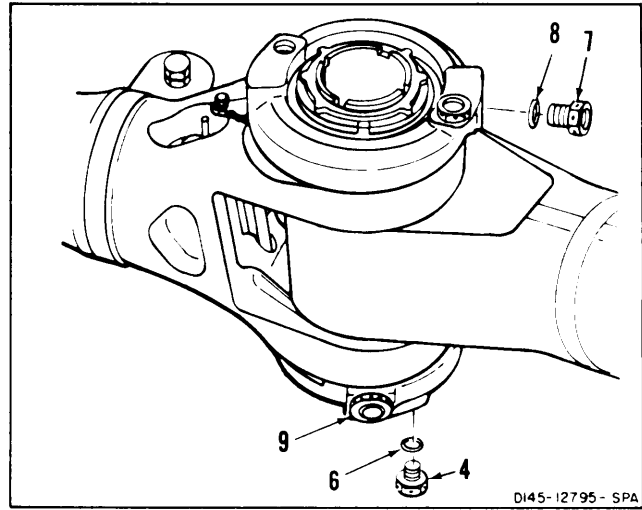

**FOLLOW-ON MAINTENANCE:**

None

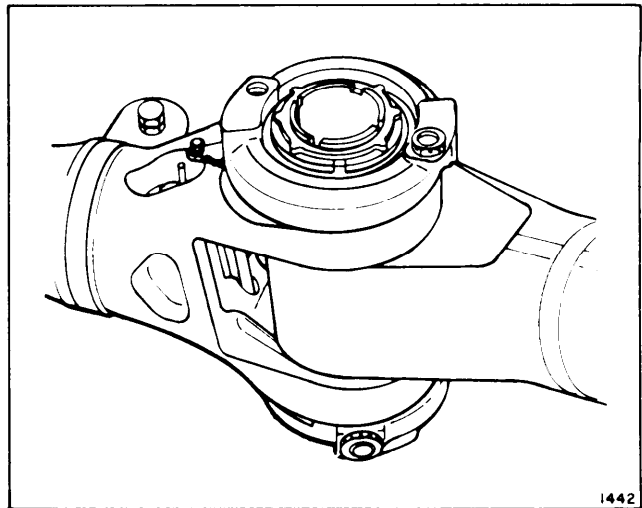

**END OF TASK**

## 5-13.2 INSTALL VERTICAL HINGE PIN OIL TANK SIGHT INDICATOR

5-13.2

### INITIAL SETUP

#### **Applicable Configurations:**

All

#### **Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Torque Wrench, 30 to 150 Inch-Pounds

#### **Materials:**

None

#### **Parts:**


Packings

#### **Personnel Required:**

Aircraft Powertrain Repairer  
Inspector

#### **References:**

TM 55-1520-240-23P

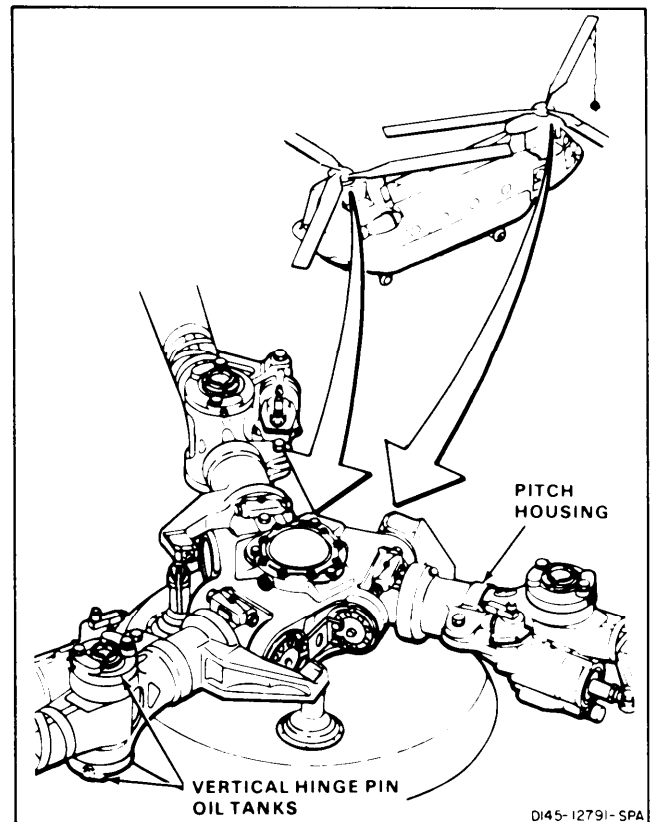

D145-12791-SPA

### NOTE


There are 12 vertical hinge pin oil tanks. Two sight indicators are on each oil tank. Procedure is similar to install any sight indicator.

1. Install packing (1) and sight indicator (2). Torque sight indicator to 125 inch-pounds. Do not lockwire at this time.

### INSPECT

### FOLLOW-ON MAINTENANCE:

Service vertical hinge pin oil tank (Task 1-57).

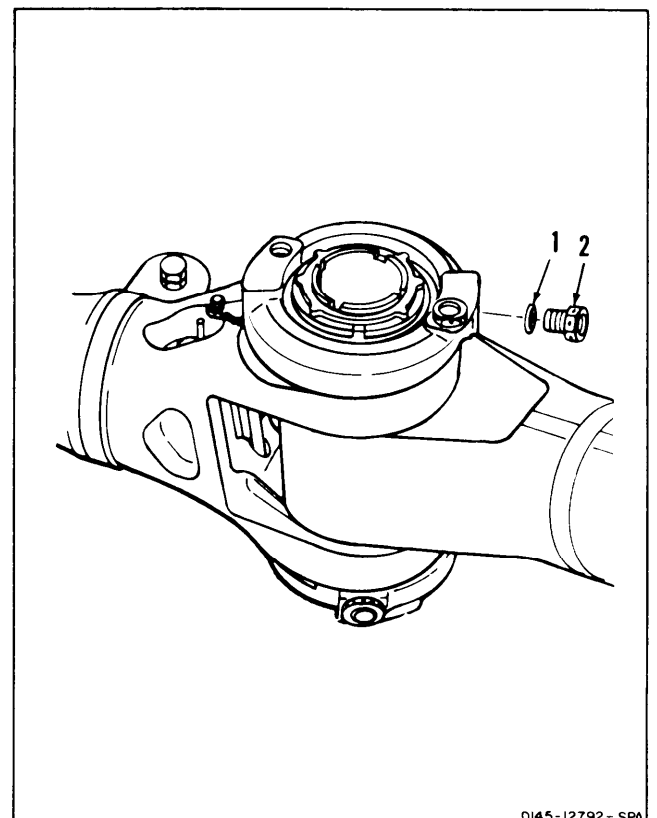

D145-12792-SPA

### END OF TASK



5-14 INSPECT HUB OIL TANK

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114

**Materials:**


- Crocus Cloth (E122)

**Personnel Required:**

- Inspector

**Equipment Condition:**



- Battery Disconnected (Task 1-39)
- Electrical Power Off
- Hydraulic Power Off
- Forward or Aft Work Platform Open (Task 2-2)
- Tiedown Line Installed on One Forward and One Aft Blade (Task 1-26)

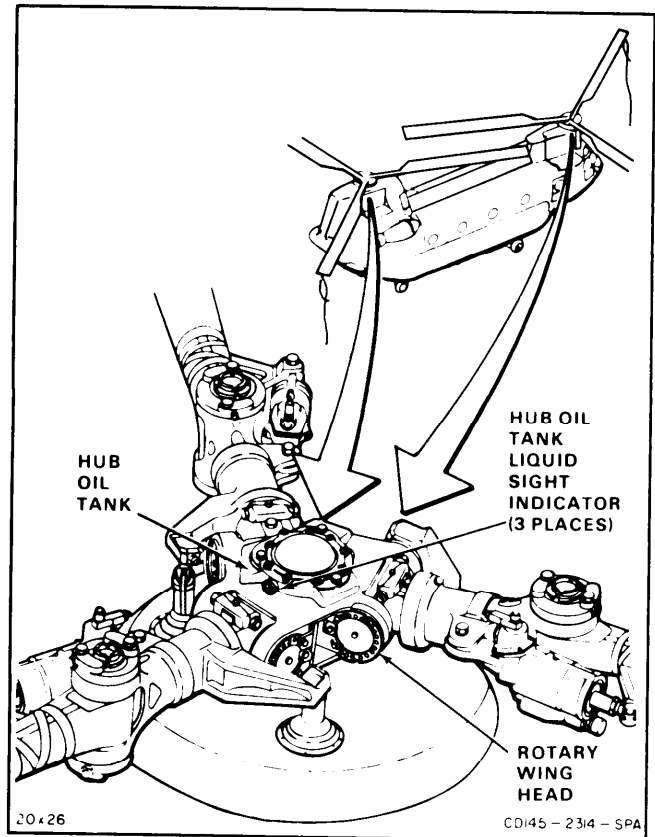

**NOTE**

Procedure is same to inspect forward or aft hub oil tanks.

1. **Check three liquid sight indicators (1).** There shall be no leaks or cracks.
  - a. There shall be no leaks or cracks.
  - b. If oil sight glass cannot be seen through, clean or replace sight glass.
2. **Check seating of hub oil tank (2).** There shall be no oil leaks at joint of tank and hub (3).
3. **Check hub oil tank (2).** There shall be no cracks, dents or distortion.

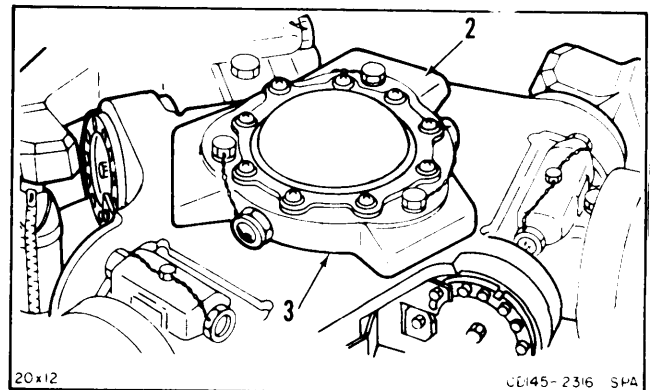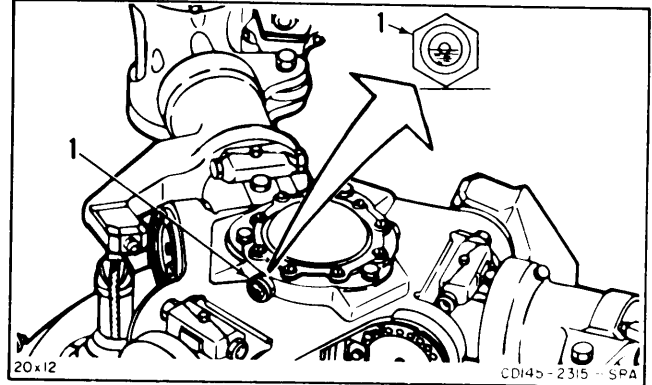


**GO TO NEXT PAGE**


**5-14 INSPECT HUB OIL TANK (Continued)**

5-14

4. Check hub oil tank (2) for scores, nicks, or gouges. Damage shall not exceed 0.020 inch in depth by 2.5 inches in length.

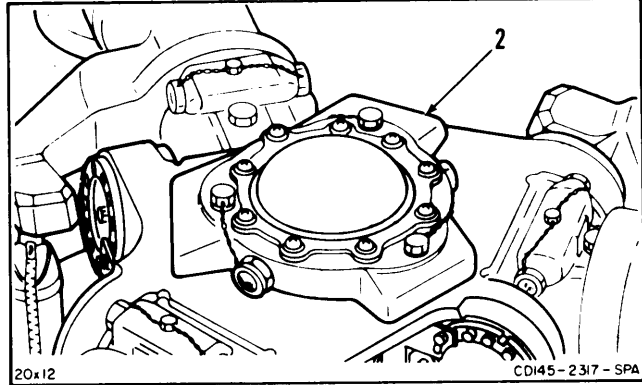

5. On oil tank of aft hub only, check machined surfaces of lugs (4) for scores, nicks, or gouges. Blend damage with crocus cloth (E 122). Damage shall not exceed 0.005 inch deep by 1.0 inch long.

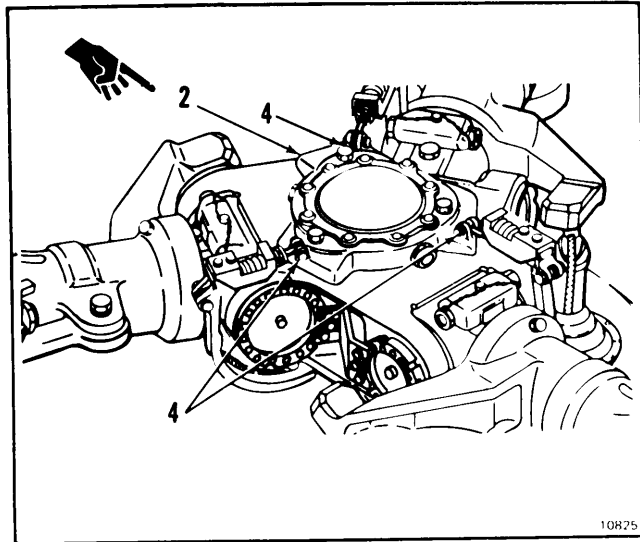**FOLLOW-ON MAINTENANCE:**

Close work platform (Task 2-2).

**5-15 REMOVE HUB OIL TANK****5-15****INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-323-5267  
Two-Quart Container

**Materials:**

None

**Personnel Required:**


Powertrain Repairer (2)

**References:**

Task 5-10

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Forward or Aft Work Platform Open (Task 2-2)  
Tiedown Line Installed on One Forward and One  
Aft Blade (Task 1-26)  
Droop Stop Shrouds Removed (Aft Rotary-Wing  
Head Only) (Task 5-48.3)

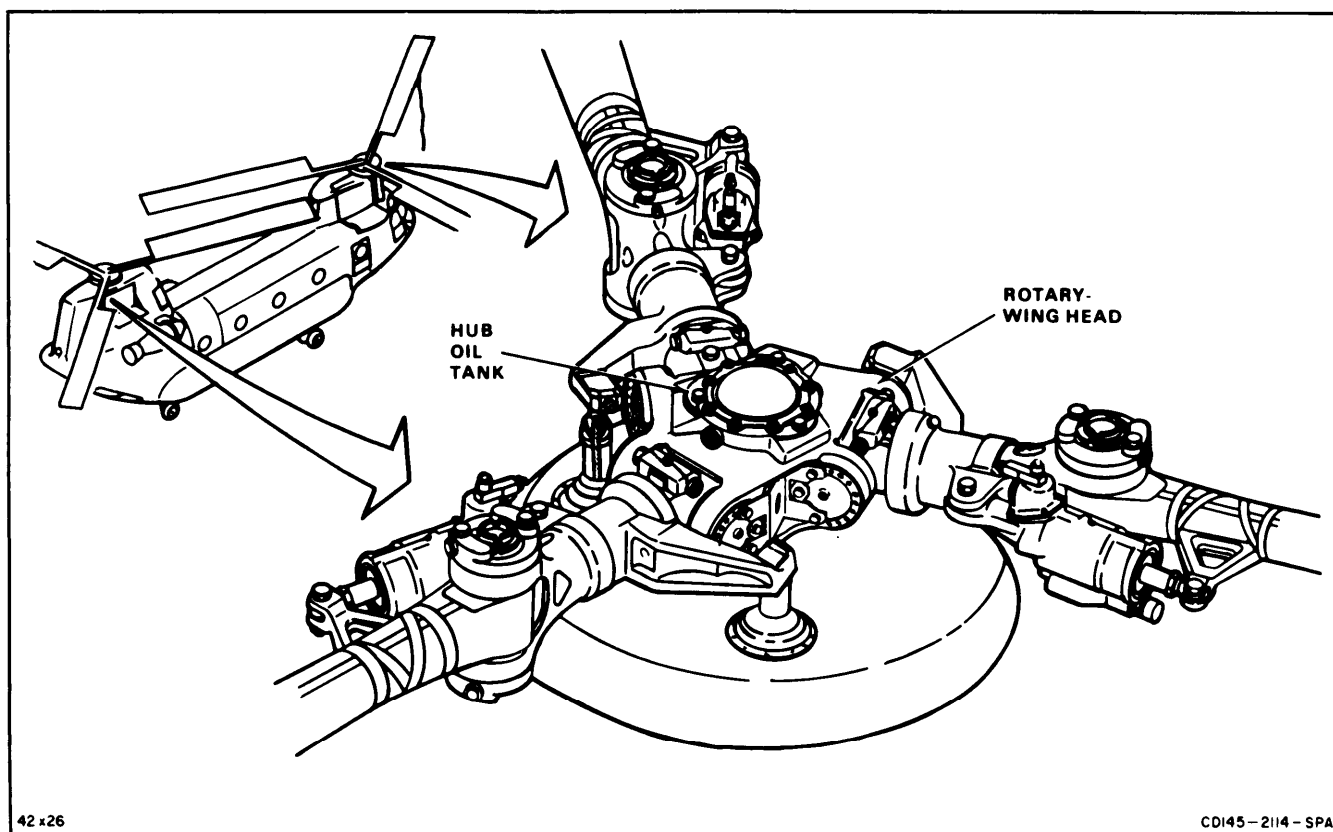





**NOTE**

Procedures to remove forward and aft magnesium and aluminum hub oil tanks are same except for differences noted in text.

1. Remove lockwire from three filler plugs (1) and sight indicators (2) on oil tank (3). **Remove three filler plugs and packings (4).**

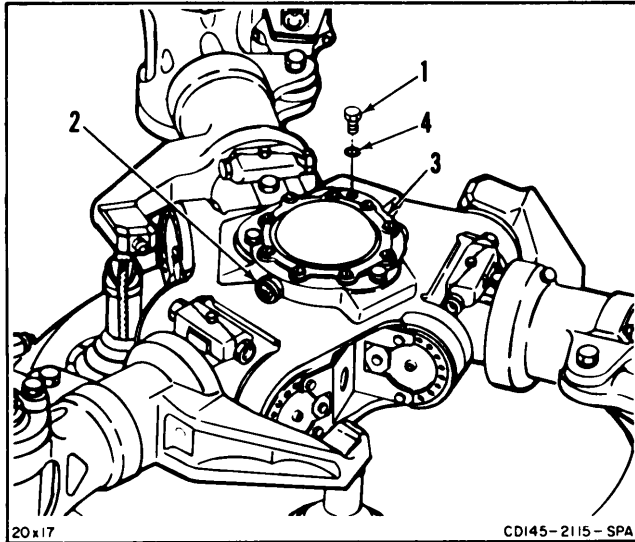


2. Remove lockwire from two lowest drain plugs (5). **Remove two drain plugs and packings (6)** at each of three places. Allow oil to drain until oil level is below lowest of sight indicators (2). Use container for oil.

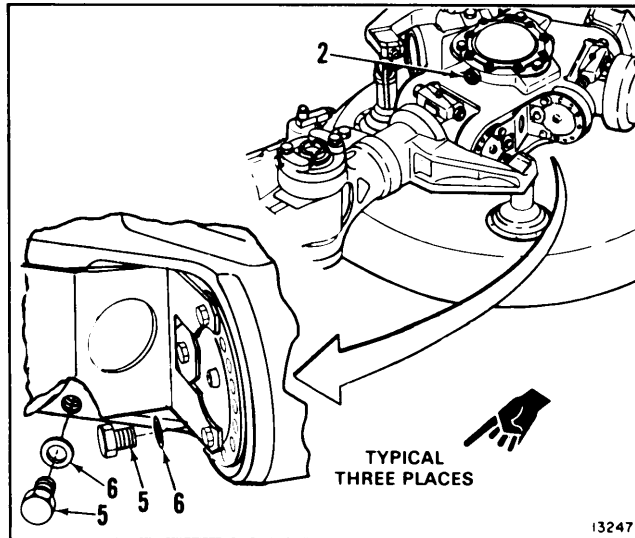

3. On aft hub oil tank (3) only, disconnect each of three droop stop springs (7) and limiter springs (8) as follows:

- a. Remove cotter pin (9), nut (10), and washers (11 and 12).
- b. Support load of spring (7) and remove bolt (13).
- c. Remove spring (7), two washers (14), bearing (15), and inboard limiter spring (8) from lugs (16).
- d. Assemble bearing (15), two washers (14), spring (7), and limiter spring (8) with bolt (13), washers (11 and 12), and nut (10).

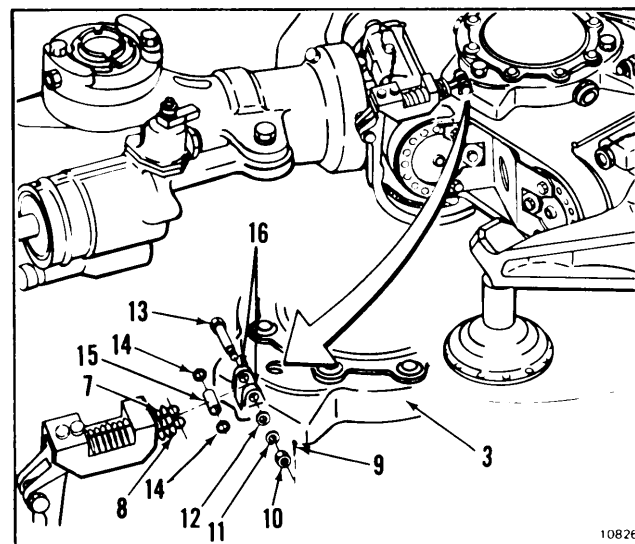

**GO TO NEXT PAGE**


5-15 REMOVE HUB OIL TANK (Continued)

5-15


4. If oil tank (3) is being replaced, remove three sight indicators (2) (Task 5-10).
5. Remove six or nine screws (17) and washers (18). Remove retainer (19), cover (20), and packing (21).

**NOTE**


Three screws are removed when balancing arm shroud is removed from aft head.

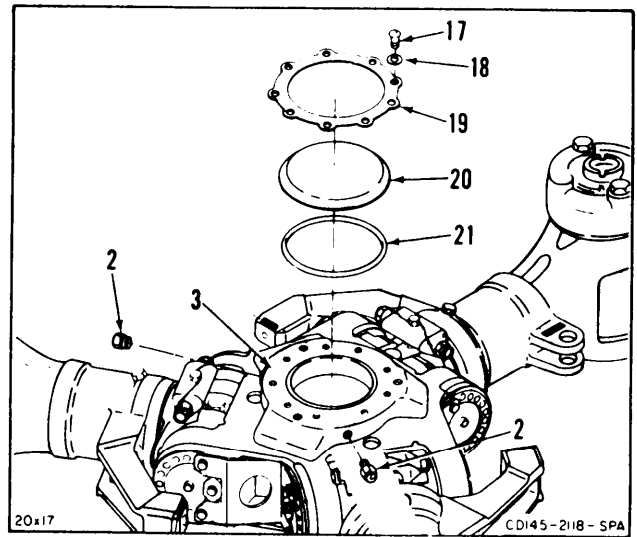

6. Remove three nuts (22), washers (23), and shouldered washers (24). Remove oil tank (3).

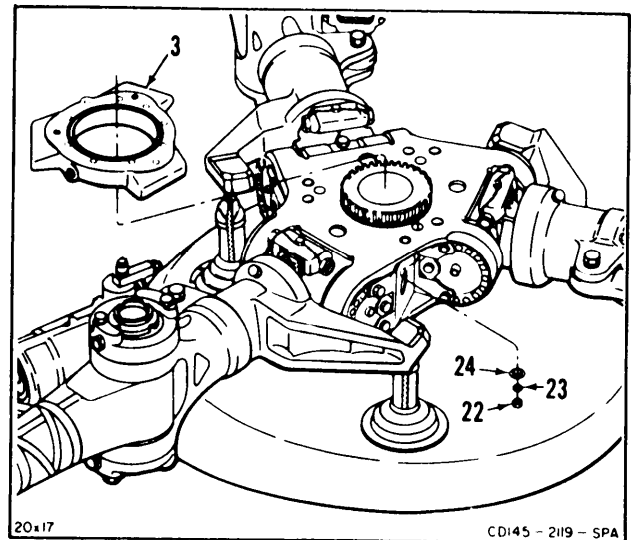

7. Remove packing (25) and six packings (26) from oil tank (3).

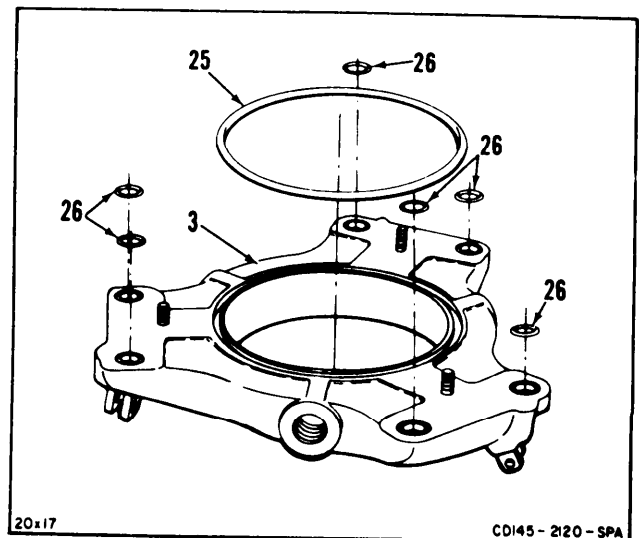

FOLLOW-ON MAINTENANCE:

None

**END OF TASK**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114

**Materials:**

Alodine Powder (E65)  
Crocus Cloth (E122)  
Epoxy Primer (E292.1)  
Black Polyurethane Paint (E285.1)  
Masking Tape (E388)  
Gauze Sponges (E184)  
Gloves (E184.1)  
Chromic Acid (E114)  
Naphtha (E245)

**Personnel Required:**

Aircraft Powertrain Repairer

Inspector

**References:**

TM 55-1500-335-23  
MIL-M-3171  
Task 2-350.1

**Equipment Condition:**

Off Helicopter Task

**General Safety Instructions:****WARNING**

Epoxy primer (E292.1) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**CAUTION**

Metallic dust and paint chips can block oil passages and damage rotary wing head. Tank openings must be plugged before reworking or refinishing tank.

**NOTE**


Procedure is same to repair forward and aft hub oil tanks except for differences noted in text.

1. Plug any filler plug hole (1), screw hole (1.1), sight indicator hole (2), or oil hole (3) near rework and refinish area. Cover studs (3.1). Use cap/plugs.
2. **On aft hub oil tank (4) only, check** machined surfaces of lugs (5) for scores, nicks, or gouges. **Blend damage with crocus cloth (E122).** Damage shall not exceed 0.005 inch deep by 1.0 inch long.
3. **Blend damage on all other areas of tanks (4) and (6) with crocus cloth (E122).** Damage limit is 0.02 inch deep by 2.5 inches long.
4. Fluorescent inspect damage over 0.010 inch deep before rework (TM 55-1500-335-23).

**WARNING**

Naphtha (E245) is combustible and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

5. Clean area with naphtha (E245) and cloths (E120). Wear gloves (E184.1). Let area air dry.

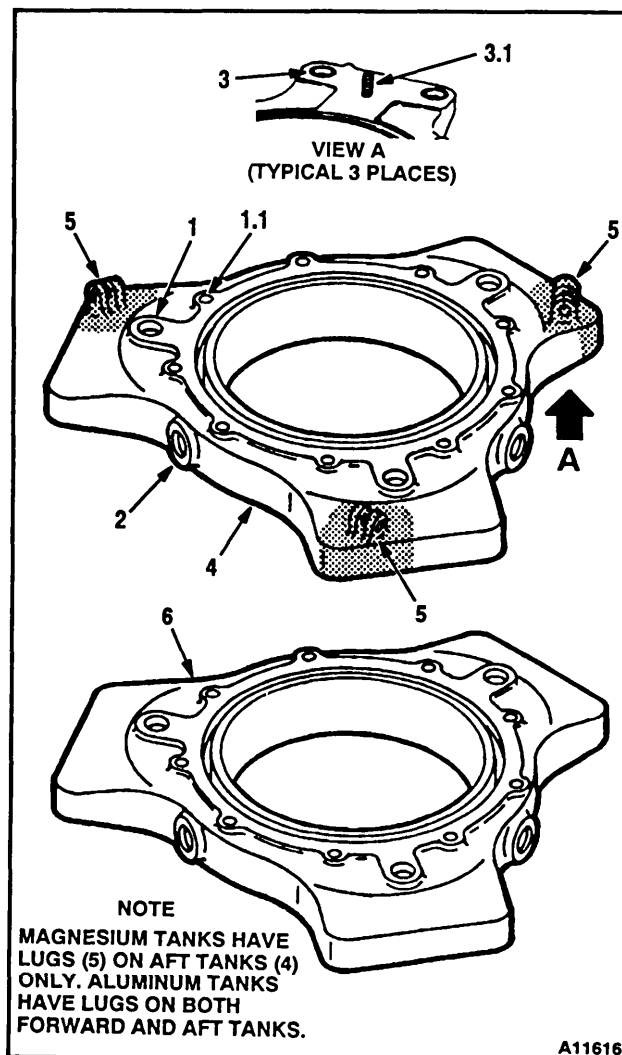

GO TO NEXT PAGE



## 5-16 REPAIR HUB OIL TANK (AVIM) (Continued)

5-16

6. Finish reworked areas of magnesium hub oil tank (4 or 6) as follows:

**WARNING**

Chromic acid (E114) is extremely toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**NOTE**

Do not wash surface with hot water.

- Prepare a type VI solution of chromic acid (E114) (MIL-M-3171).
- Brush solution on blended areas of hub oil tanks (4 or 6). Wear gloves (E184.1),
- Keep surface wet for 1 to 3 minutes, then wash surface with cold water and dry with hot air.


7. Finish reworked areas of aluminum hub oil tank (4 or 6) as follows:

**WARNING**

Alodine powder (E65) is an oxidizer. Discard cloths which contain this material in a separate container. If discarded with cloths contaminated with acetone, MEK or other organic solvents, combustion can result. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- Mix three ounces of alodine powder (E65) with one-half ounce of concentrated nitric acid (E22). Add mixture to one gallon of water.
- Swab alodine solution on area for 2 to 5 minutes.** Wear gloves (E184.1). Use gauze sponges (E184).
- Rinse surface with cold water and let air dry.

8. Apply one coat of epoxy primer (E292.1). Wear gloves (E184.1). Let air dry for 1 hour.

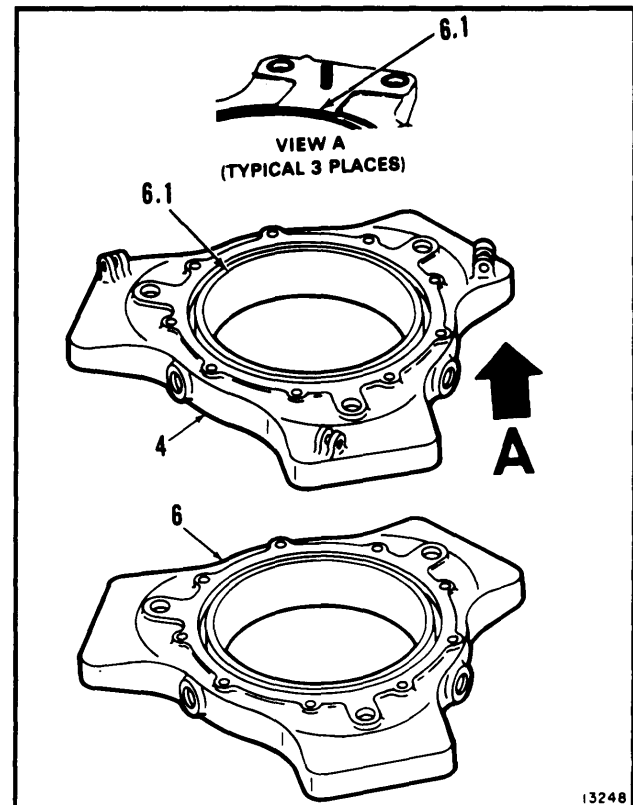

9. Cover packing grooves (6.1) in refinish area. Use tape (E388). Apply two more coats of epoxy primer (E292.1). Wear gloves (E184.1). Allow 1 hour between coats.

**WARNING**

Polyurethane paint (E285.1) is flammable and toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flames. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- Apply two coats of black polyurethane paint (E285.1) per Task 2-350.1. Wear gloves (E184.1). Allow one hour between coats.
- Remove cap/plugs from hub oil tank (4 or 6). Remove covering from packing groove (6.1).

**INSPECT**

FOLLOW-ON MAINTENANCE:

None

**END OF TASK**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-323-5267  
Torque Wrench, 30 to 150 Inch-Pounds  
Torque Wrench, 5 to 55 Inch-Pounds

**Materials:**

Lockwire (E231)  
Cloths (E120)  
Dry Cleaning Solvent (E162)  
Gloves (E186)

**Parts:**


Packings

**Personnel Required:**

Powertrain Repairer (2)  
Inspector

**References:**

TM 55-1520-240-23P  
Task 5-11  
Task 5-57

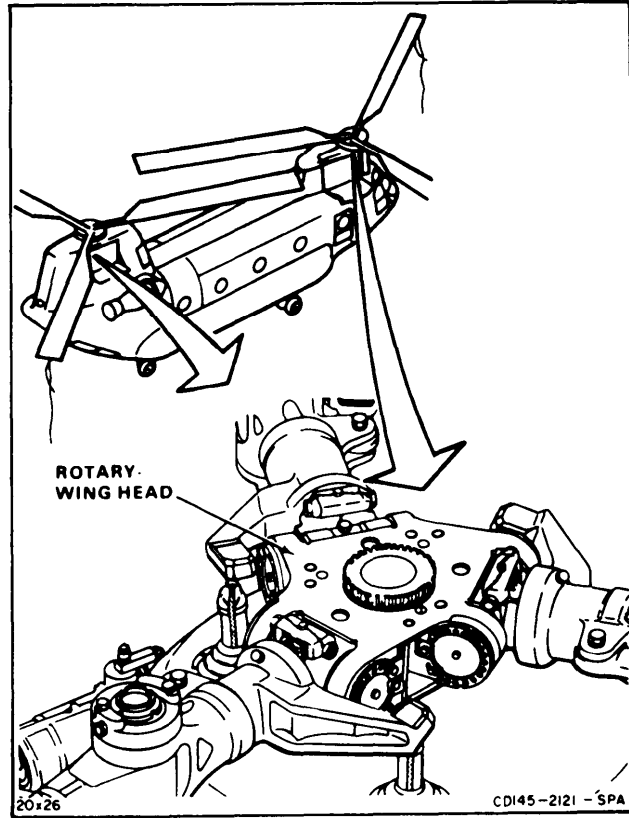**WARNING**

Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**CAUTION**

Dirty hub and oil tank surfaces can cause oil leaks.

**NOTE**

Procedures to install forward and aft magnesium and aluminum hub oil tanks are same except for differences noted in text.


**GO TO NEXT PAGE**

5-74 Change 14


## 5-17 INSTALL HUB OIL TANK (Continued)

5-17

1. Clean mating surfaces of oil tank(1) and hub (2). Use cloths (E120) damp with solvent (E162). Wear gloves (E186).
2. Install packing (3) and six packings (4) in grooves on bottom of oil tank (1).
3. **Install tank (1) on hub (2).** Install three shouldered washers (5), washers (6), and nuts (7). **Torque nuts to 60 inch-pounds.**

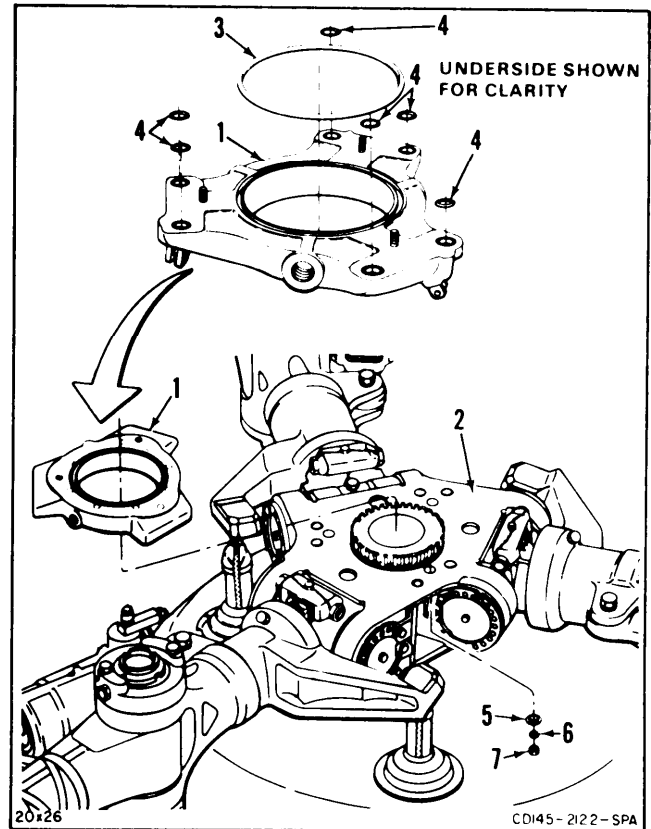


4. **Install three filler plugs (8)** and packings (9) in tank (1). **Torque plugs to 85 inch-pounds.** Lockwire plugs with lockwire (E231).
5. **Install two drain plugs (10)** and packings (11) in hub (2). **Torque plugs to 25 inch-pounds.** Lockwire plugs with lockwire (E231).

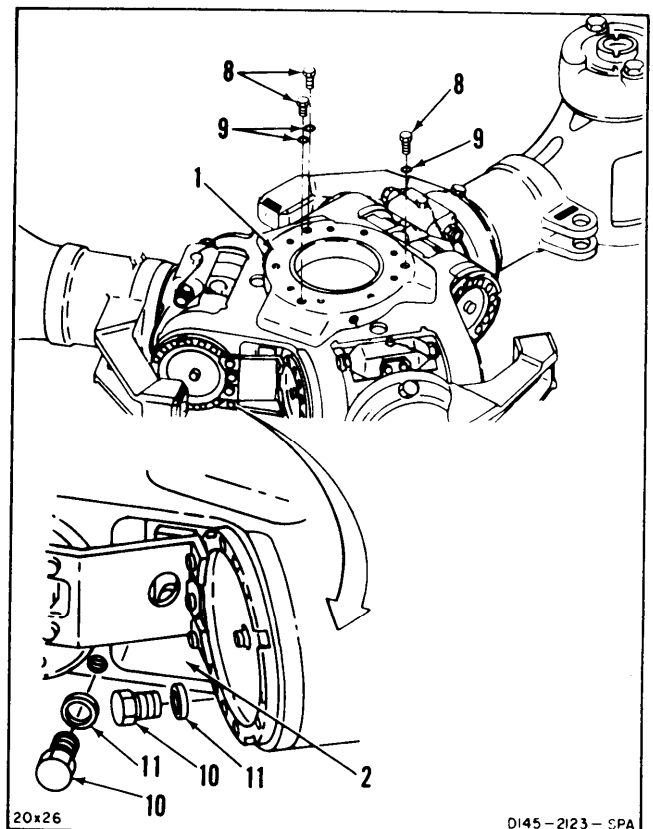

GO TO NEXT PAGE



6. If tank (1) is being replaced, install three sight indicators (12) (Task 5-11).

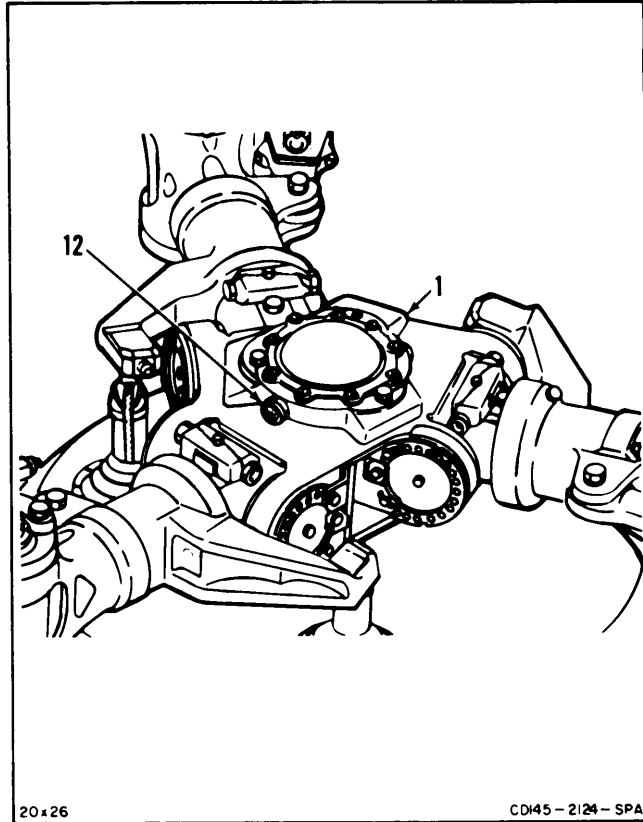


**CAUTION**

Mounting screws are different for magnesium or aluminum tanks. Use correct screws. Otherwise, component malfunction can occur.

**NOTE**

Only three screws are installed on aft head. Remaining six screws are installed when balancing arm shrouds are installed.


7. Install packing (13), cover (14), and retainer (15). Install three or nine screws (16) and washers (17). Torque screws to 23 inch-pounds.

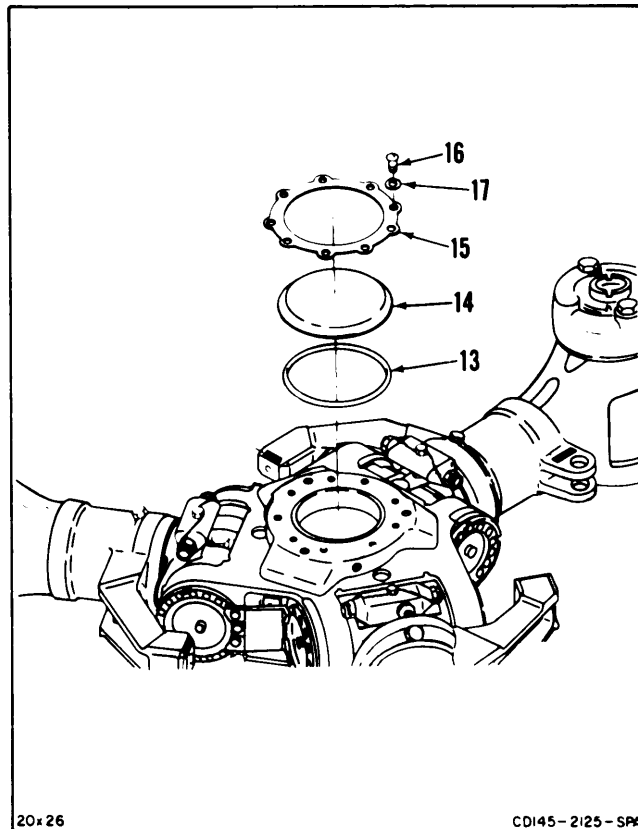

## 5-17 INSTALL HUB OIL TANK (Continued)

5-17

8. On aft hub oil tank (1) only, connect each of three droop stop springs (18) and limiter springs (19) as follows:
- Remove nut (20), washers (21 and 22), and bolt (23).
  - Check that spring (18), limiter spring (19), two special washers (24), and bearing (25) are assembled as shown. (Task 5-57).
  - Install assembly (26) between lugs (27).
  - Install bolt (23) and nut (20). Torque to 12-15 inch-pounds. Install cotter pin (28). Install washers (21 and 22) if required, to align cotter pin.

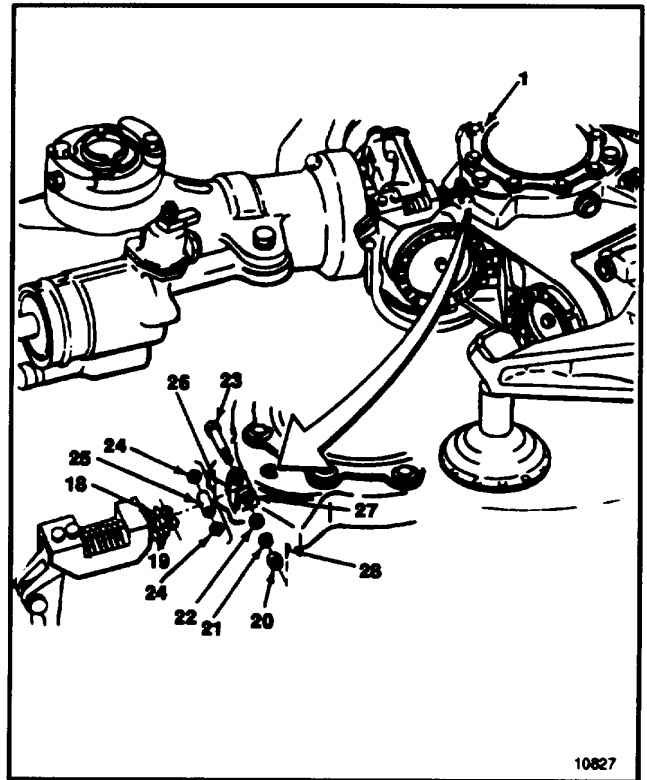

## FOLLOW-ON MAINTENANCE:

Service hub oil tank (Task 1-55).

Install droop stop shrouds on aft rotor head (Task 5-48.5).

END OF TASK

5-18 INSPECT PITCH BEARING OIL TANKS

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114

**Materials:**


None

**Personnel Required:**

67U30 Inspector

**Equipment Condition:**

- Battery Disconnected (Task 1-39)
- Electrical Power Off
- Hydraulic Power Off
- Tiedown Line Installed on One Forward and One Aft Blade (Task 1-26)
- Forward or Aft Work Platforms Open (Task 2-2)

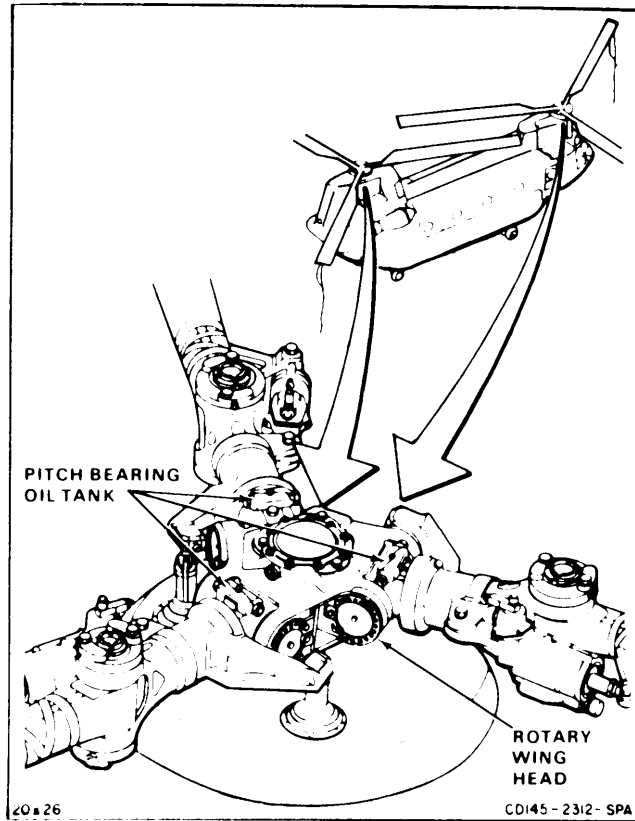


**NOTE**

There are six pitch bearing oil tanks.  
Procedure is same to install all tanks.

1. Check six sight indicators (1).
  - a. There shall be no leaks or cracks.
  - b. If oil sight glass cannot be seen through, clean or replace sight glass.
2. Check joint between three tanks (2) and pitch shafts (3). There shall be no oil leaks.
3. Check tanks (2) for scores, nicks, or gouges. Damage shall not exceed 0.020-inch in depth by 2.5 inches in length.

**FOLLOW-ON MAINTENANCE:**

Close work platform (Task 2-2).

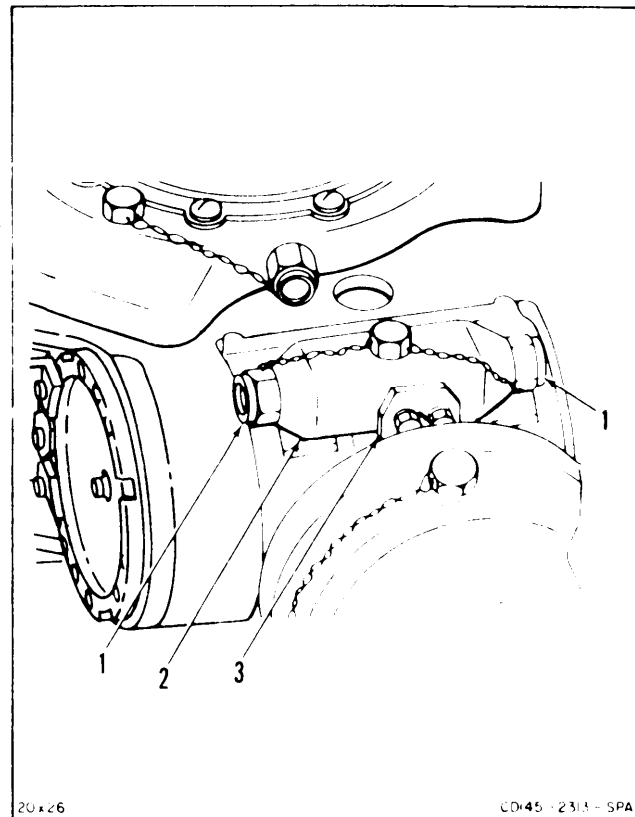

**END OF TASK**

## 5-19 REMOVE PITCH BEARING OIL TANK

5-19

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Powertrain Repairer Tool Kit,  
NSN 5180-00-003-5267  
2-Quart Container

**Materials:**

Cloth (E120)

**Personnel Required:**


Powertrain Repairer (2)

**References:**

Task 5-22


**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Forward or Aft Work Platform Open (Task 2-2)  
Tiedown Line Installed on One Forward and One  
Aft Blade (Task 1-26)

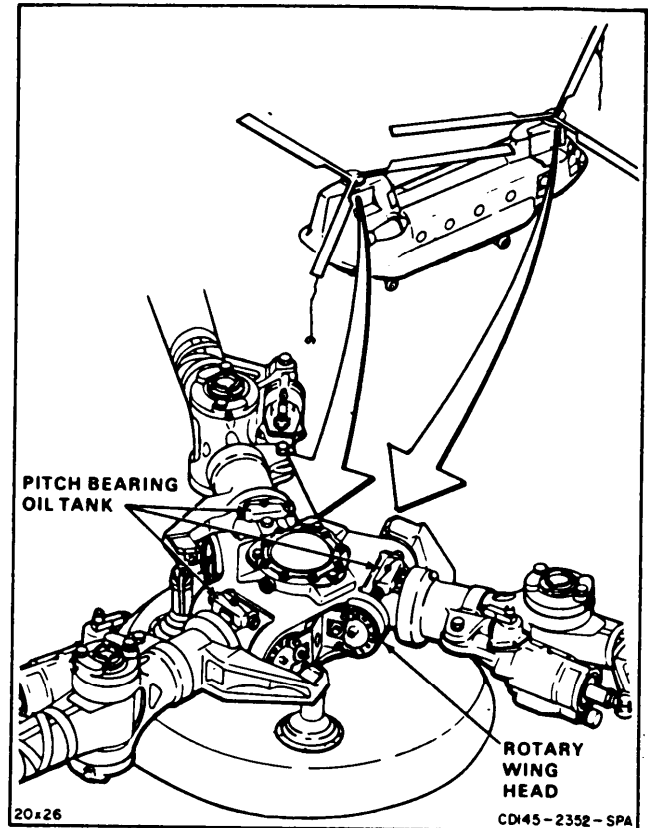**NOTE**

There are six pitch bearing oil tanks.  
Procedure is same to remove all  
tanks.


1. If magnesium oil tank assembly 114R2179-5 is being replaced with aluminum assembly 145R2 179-1, remove pitch varying housing (1) (Task 5-22).
  - 1.1. If housing (1) was not removed, remove lockwire from two plugs (2). Remove lockwire from two sight indicators (3) and filler plug (4) on pitch bearing oil tank (5).
  2. **Remove filler plug (4) and packing (6) from tank (5).**
  3. Remove two plugs (2) and packings (7) from housing (1). Drain oil from tank (5). Use container for oil. Use cloth (E104) for spilled oil.
  - 3.1. If tank (5) will be replaced, remove two sight indicators (3) and packings (7.1).
  4. Remove lockwire from two bolts (8) and lug (9) on tank (5).

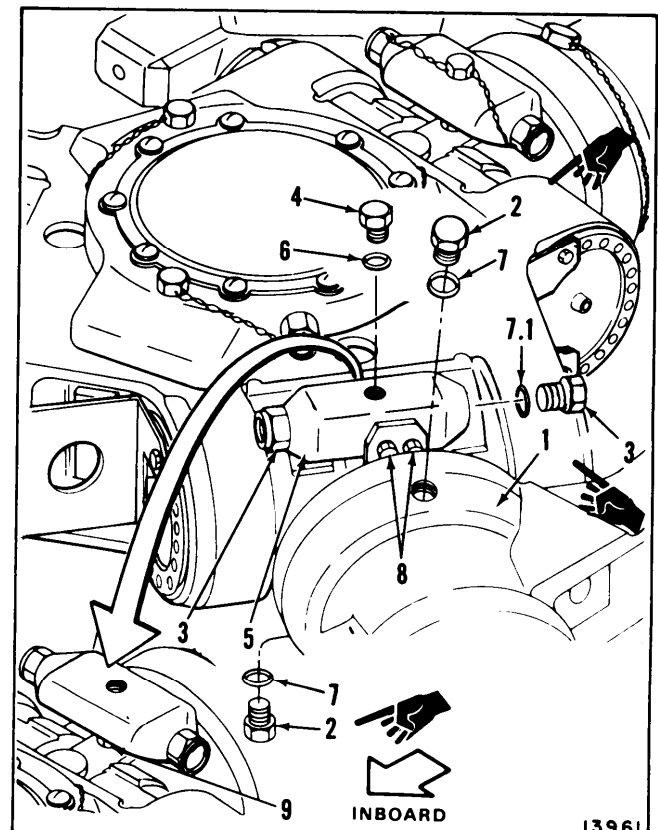**GO TO NEXT PAGE**

**NOTE**

Tank can be removed when bolts are loosened. Bolts need not be removed.

5. Loosen two bolts (8) until they are free of tank (5). **Remove tank** and packing (10).

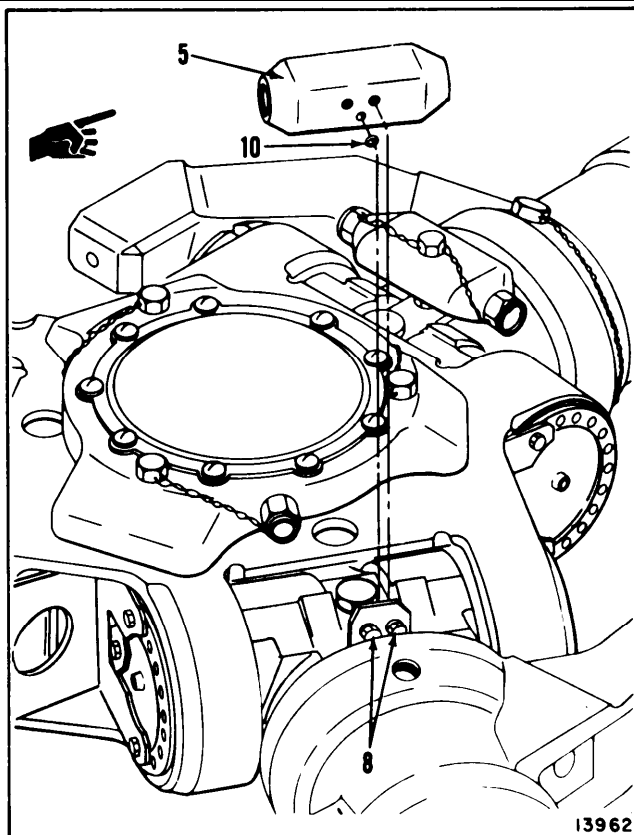

**FOLLOW-ON MAINTENANCE:**

None

**END OF TASK**

**5-20 REPAIR PITCH BEARING OIL TANK (AVIM)**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114  
Plastic or Aluminum Scraper

**Materials:**

Alodine Powder (E65)  
Crocus Cloth (E122)  
Epoxy Primer (E292.1)  
Black Polyurethane Paint (E285.1)  
Cloths (E120)  
Dry Cleaning Solvent (E162)  
Masking Tape (E388)  
Gauze Sponges (E184)  
Gloves (E184.1)  
Chromic Acid (E114)  
Nitric Acid (E22)

**Personnel Required:**

Aircraft Powertrain Repairer  
Inspector

**References:**


TM 55-1500-335-23  
MIL-C-5541  
MIL-M-3171  
Task 2-350.1

**Equipment Condition:**

Off Helicopter Task

**General Safety Instructions:****WARNING**

Epoxy primer (E292.1) and Black polyurethane paint (E285.1) are flammable and toxic. They can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

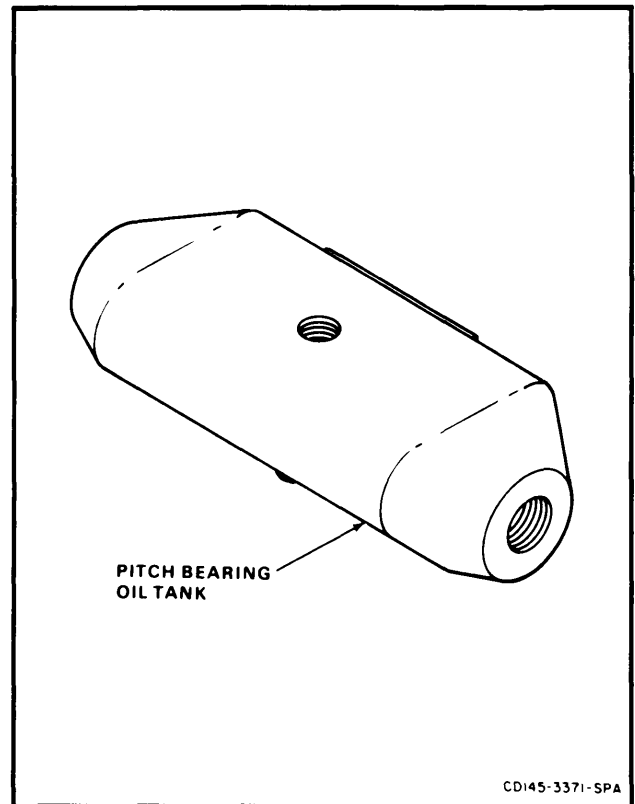**WARNING**

Nitric acid (E22) is extremely toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

GO TO NEXT PAGE

**WARNING**

Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.


**CAUTION**

Metallic dust and paint chips can block oil passages and damage rotary wing head. Tank openings must be plugged before reworking or refinishing tank.

**NOTE**

Procedure is same to repair all six pitch bearing oil tanks.

1. Plug filler plug hole (1) and both sight indicator holes (2). Use caps or plugs. Mask mounting surface (3) near rework and refinish area. Use masking tape (E388).
2. Clean mounting surface of tank (4). Use plastic or aluminum scraper and cloths (E120) damp with solvent (E162). Wear gloves (E184.1).
3. **Blend scores, nicks, or gouges** on tank (4). Damage limit is 0.020 inch in depth by 2.5 inches in length. Blend to width at least 10 times depth of damage. Use crocus cloth (E122).

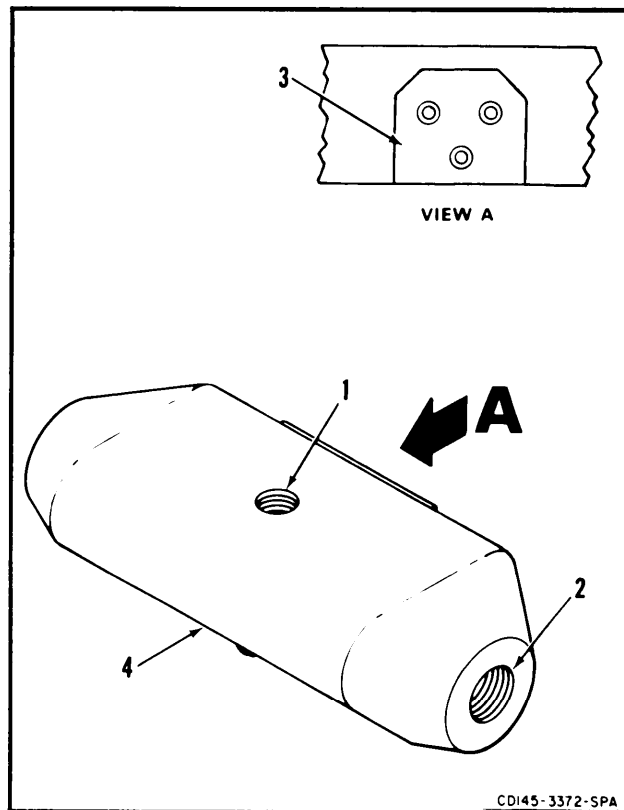

CDI45-3372-SPA

**GO TO NEXT PAGE**

## 5-20 REPAIR PITCH BEARING OIL TANK (AVIM) (Continued)

5-20

4. Fluorescent inspect damage that exceeded 0.010 inch in depth before rework (TM 55-1500-335-23).
5. Finish reworked areas of magnesium pitch bearing oil tank (4) as follows:

**WARNING**

Chromic acid (E114) is extremely toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**NOTE**


Do not wash surface with hot water.

- a. Prepare a type VI solution of chromic acid (E114) (MIL-M-3171).
  - b. Brush solution (E114) on blended areas (MIL-L-3171). Wear gloves (E184.1).
  - c. Keep surface wet for 1 to 3 minutes, then wash surface with cold water and dry with hot air.
6. Finish reworked areas of aluminum pitch bearing oil tank (4) as follows:

**WARNING**

Alodine powder (E65) is an oxidizer. Discard cloths which contain this material in a separate container. If discarded with cloths contaminated with acetone, MEK or other organic solvents, combustion can result. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- a. Mix 3 ounces of alodine powder (E65) with 1/2 ounce of concentrated nitric acid (E22). Add mixture to 1 gallon of water.

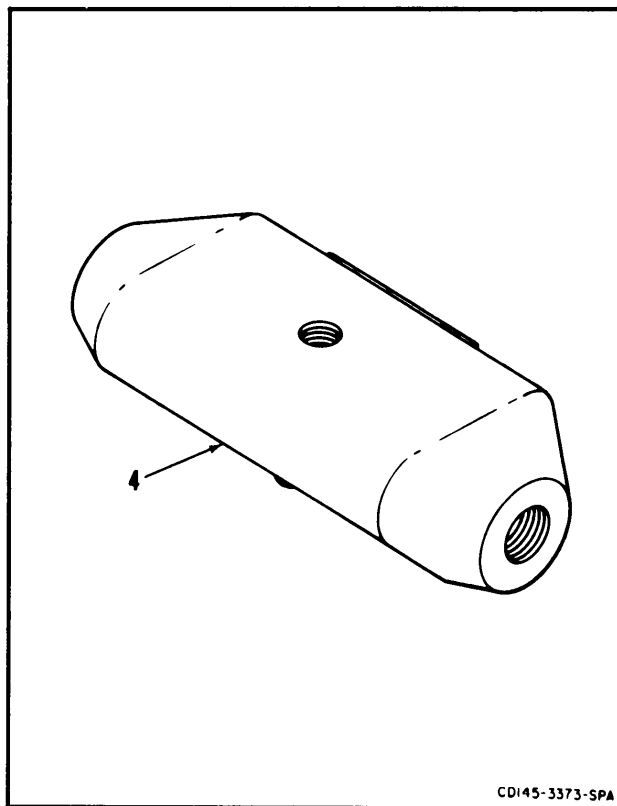

- b. Swab alodine solution on area (MIL-C-5541 ). Swab for 2 to 5 minutes. Wear gloves (E184.1). Use gauze sponges (E184).
  - c. Rinse surface with cold water and let air dry.
7. Apply one coat of epoxy primer (E292.1). Wear gloves (E184.1). Let air dry for 1 hour.
  8. Apply two more coats of epoxy primer (E292.1). Wear gloves (E184.1). Allow 1 hour between coats.
  9. Apply two coats of black polyurethane paint (E285.1) per Task 2-350.1. Wear gloves (E184.1). Allow 1 hour between coats.
  10. Remove cap/plugs and masking tape (E388) from pitch bearing oil tank (4).

## FOLLOW-ON MAINTENANCE:

None

END OF TASK



## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Powertrain Repairer Tool Kit,  
NSN 5180-00-003-5267  
Torque Wrench, 0 to 30 Inch-Pounds  
Torque Wrench, 30 to 150 Inch-Pounds  
Plastic or Aluminum Scraper

**Materials:**

- Adhesive (E63.1)
- Cloth (E120)
- Dry Cleaning Solvent (E162)
- Lockwire (E231)
- Gloves (E186)

**Parts:**

Packings

**Personnel Required:**

Aircraft Powertrain Repairer (2)  
Inspector

**References:**

Task 1-56  
Task 5-22  
Task 5-23  
TM 55-1520-240-23P

**General Safety Instructions:****WARNING**


Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**

Adhesive (E63.1) can form toxic vapors if material burns or if cured product is heated above 288°C (550°F). In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**NOTE**

There are six pitch bearing oil tanks. Procedure is the same to install all tanks. Both magnesium and aluminum tanks are used. Do not mix tanks on same rotary-wing head.

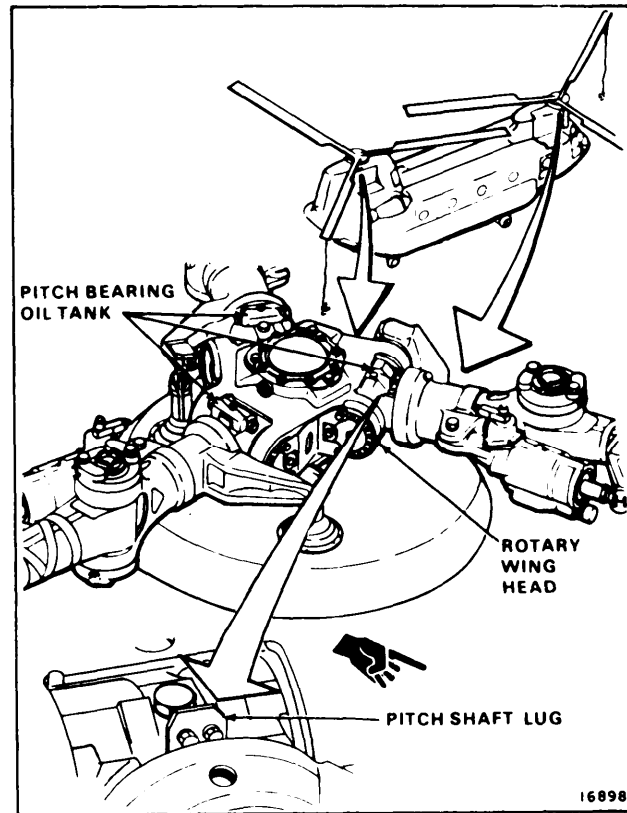**GO TO NEXT PAGE**

5-84 Change 21

5-21 INSTALL PITCH BEARING OIL TANK (Continued)

1. Clean mounting surfaces of tank (1) and shaft lug (2). Use plastic or aluminum scraper and cloths (E120) damp with solvent (E162). Wear gloves (E186).
2. If replacing a magnesium tank (1) with an aluminum tank, remove pitch-varying housing (3) (Task 5-22).
3. Apply bead of adhesive (E63.1) (3) to edge of tank area which will attach to shaft lug (2). Wear gloves (E186).
4. Install packing (4) in groove on face of tank (1).

**CAUTION**



Mounting bolts for aluminum tanks are shorter than those for magnesium tanks. Use correct bolts. Otherwise, tank can be damaged.

5. Position tank (1) against shaft lug (2). Screw two bolts (6) into tank.

**CAUTION**


Do not overtorque tank mounting bolts. Overtorque can damage tank or bolts.

6. Torque bolts (6) to 15 inch-pounds. Use 3/8-inch crowfoot and socket extension.
7. Wipe excess adhesive (E63.1) from shaft lug (2). Use cloth (E120) damp with solvent (E162). Wear gloves (E186).
8. Lockwire bolts (6) together. Lockwire bolt (7) to lug (8). Use lockwire (E231).
9. If tank (1) is new, install packings (9) and two sight indicators (10). Torque to 115 inch-pounds.

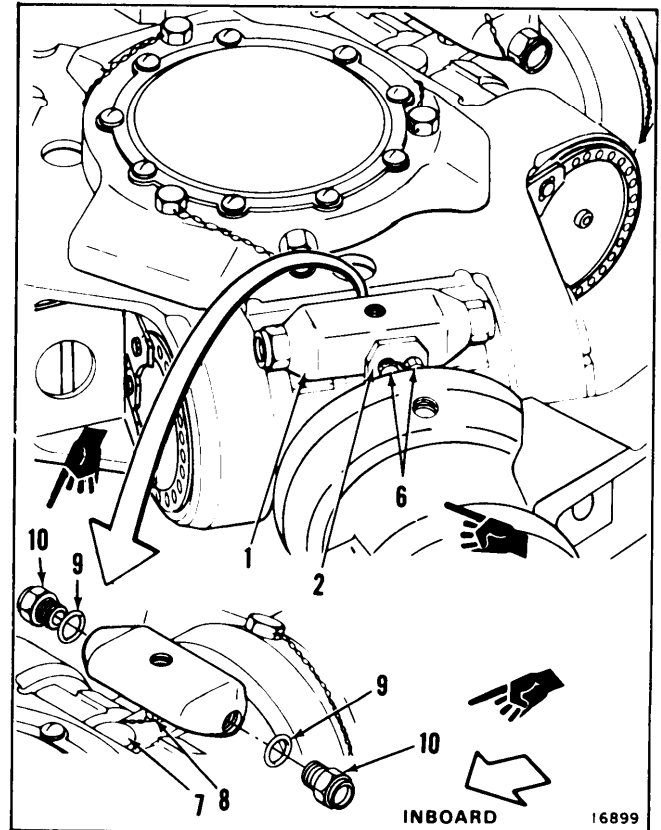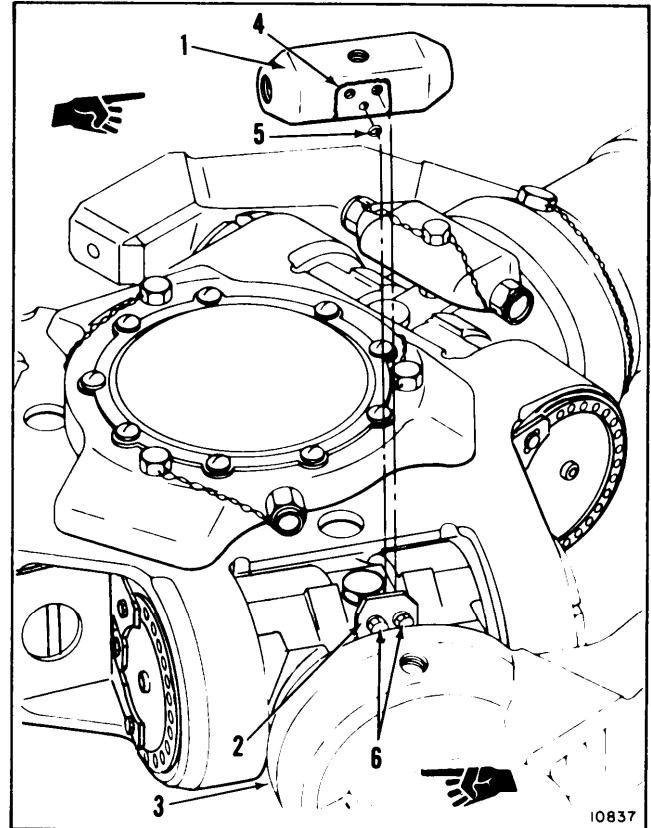


GO TO NEXT PAGE

10. Install packing (11) and lower plug (12) on housing (3). Torque plug to 24 inch-pounds.
11. If required, install pitch-varying housing (3) (Task 5-23).
12. Service pitch bearing oil tank (1) until oil reaches top of housing (3) (Task 1-56).
13. Install packing (13) and upper plug (14). Torque to 24 inch-pounds. Lockwire plug to lower plug (12). Use lockwire (E231).
14. Continue servicing pitch bearing oil tank (1) until oil reaches center of sight indicators (10) (Task 1-56).
15. Install packing (15) and filler plug (16). Torque to 24 inch-pounds. Lockwire filler plug to two sight indicators (10).
16. If removed, install pitch housing (3) (Task 5-23).

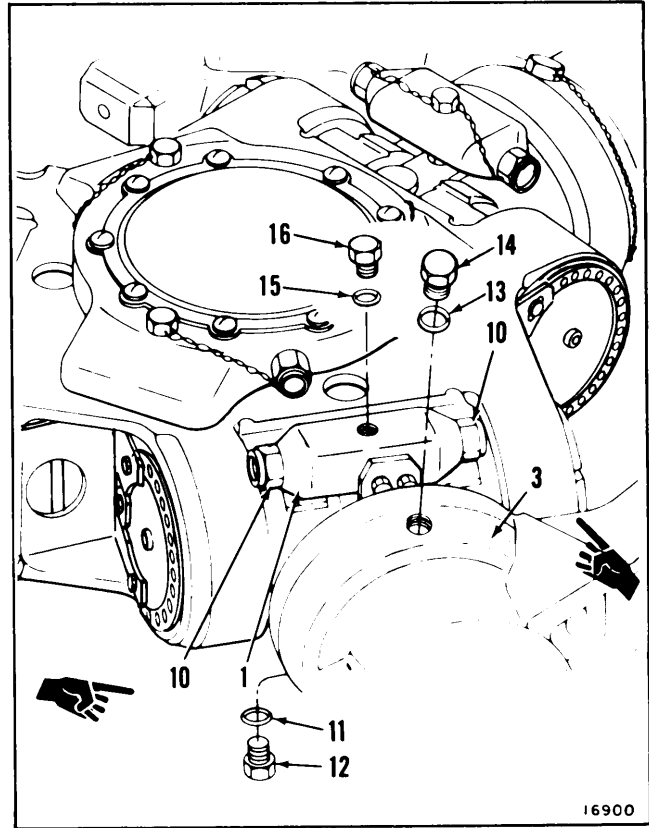

FOLLOW-ON MAINTENANCE:

None

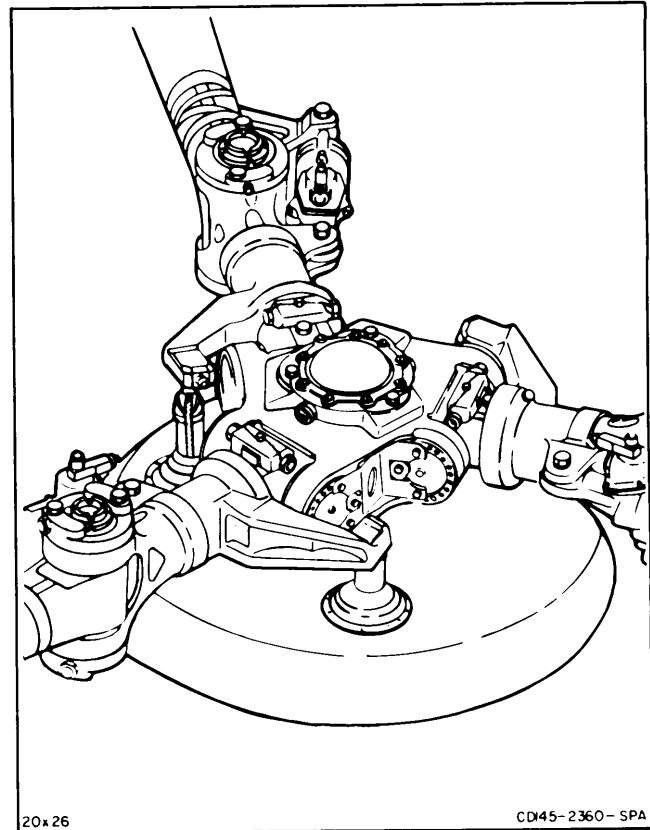

5-21.1 INSPECT PITCH-VARYING SHAFTS

5-21.1

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**


None

**Personnel Required:**

Inspector

**Equipment Condition:**

- Battery Disconnected (Task 1-39)
- Electrical Power Off
- Hydraulic Power Off
- Forward or Aft Work Platforms Open (Task 2-2)

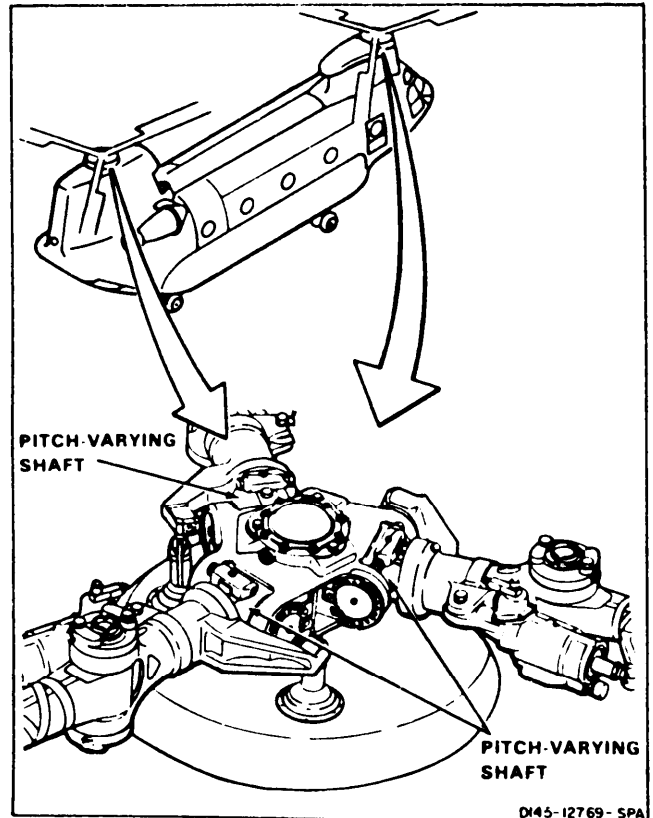


**NOTE**

- Paint removal is not required for shaft inspection.
- Inspect shafts on forward and aft heads in same manner.
- Rotary-wing blades shall be installed during inspection and resting on droop stops.

1. Check entire visible portion of pitch-varying shaft (1) for cracks. Pay special attention to leading edge side of shaft between flange (2) and horizontal hinge pin barrel (3) from oil tank (4) to droop stop mounting boss (5). **There shall be no cracks.**
2. If a crack is suspected, perform fluorescent-penetrant inspection (Task 5-21.2).

**FOLLOW-ON MAINTENANCE:**

Close work platforms (Task 2-2).

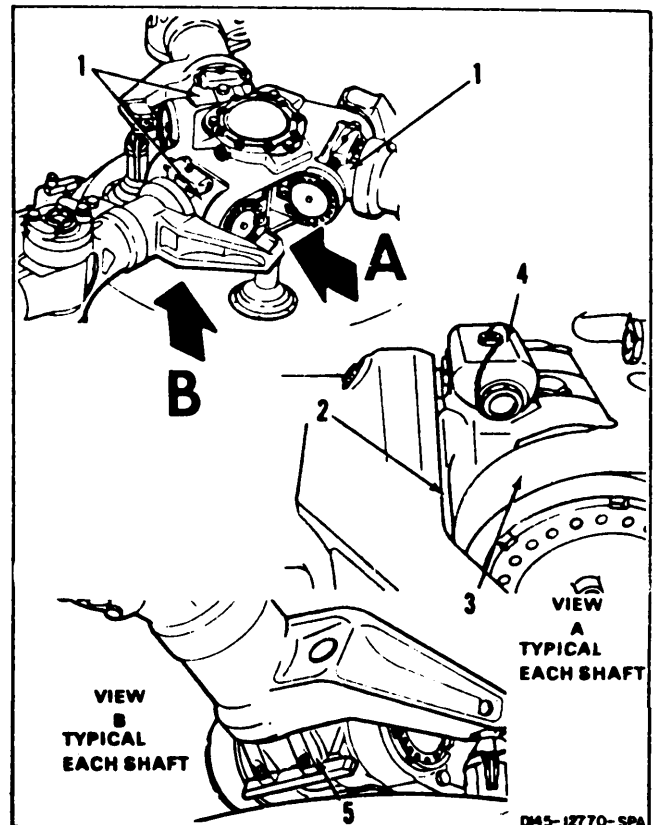

**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**

- Cloths (E120)
- Acetone (E20)
- Lacquer (E213)
- Gloves (E186)

**Personnel Required:**


- Aircraft Powertrain Repairer
- Inspector

**References:**

- TM 55-1500-335-23

**Equipment Condition:**

- Off Helicopter Task
- Pitch-Varying Housing Removed (Task 5-22)

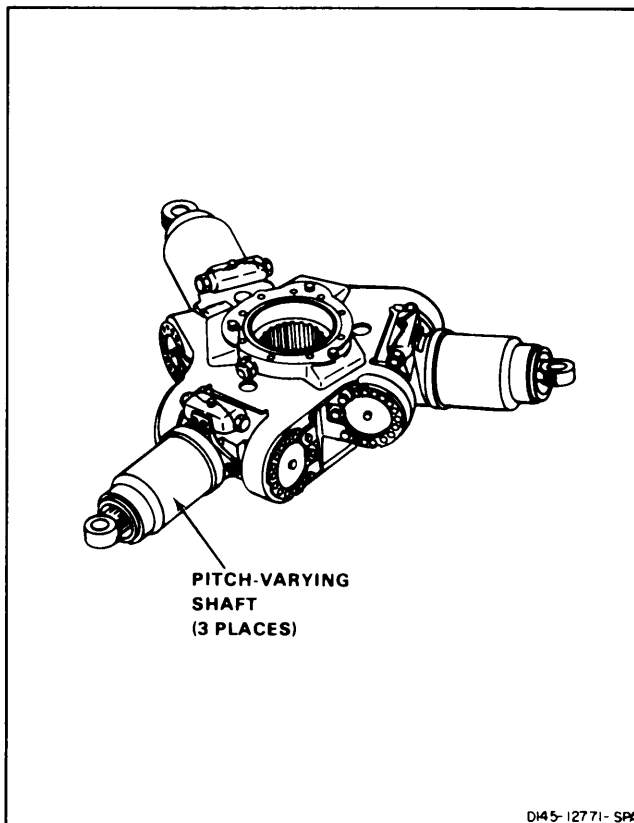

**NOTE**


Procedure is same to inspect any pitch-varying shaft on forward or aft head.

**REMOVE FINISH**

**WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

1. Remove finish from shaft (1) from area between flange (2) and horizontal hinge pin barrel (3) around both sides of shaft from oil tank (4) to droop stop mounting bosses (5). Use acetone (E20) and clean cloths (E120).

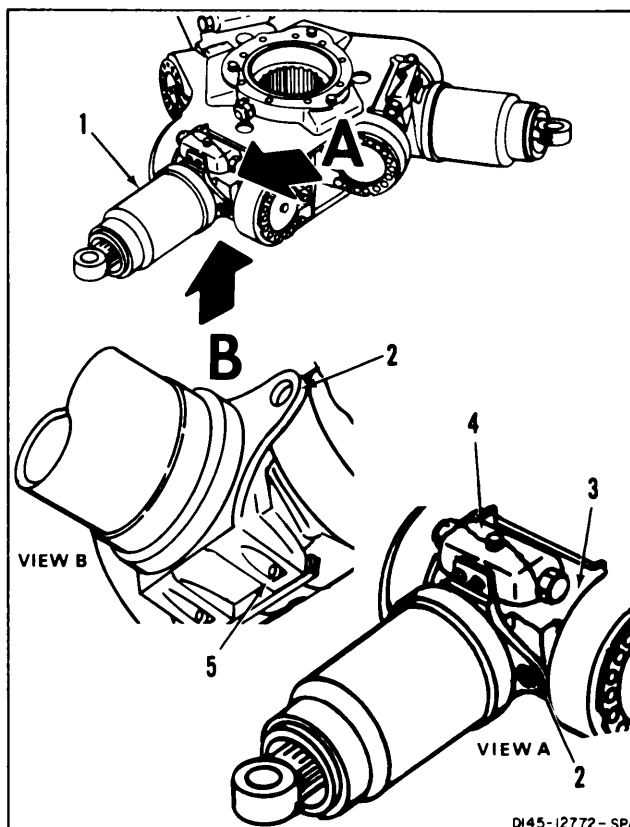

**GO TO NEXT PAGE**


**5-21.2 INSPECT PITCH-VARYING SHAFTS (AVIM) (Continued)****5-21.2****INSPECT SHAFT**

2. **Fluorescent inspect** cleaned area to check for cracks. (Refer to TM 55-1500-335-23.)  
There shall be no cracks.

**WARNING**

Lacquer (E213) is extremely flammable. It can be toxic. Keep away from heat, sparks, or open flames. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

3. If no cracks are found, remove inspection coating. (Refer to TM 55-1500-335-23.)  
**Apply clear lacquer (E213) to cleaned area.**
4. Check shaft (1) for scores, nicks, or gouges. Damage shall not be over 0.005 inch deep or 2.5 inches long. Direction of scores shall not be more than a 20 degree angle from shaft centerline.

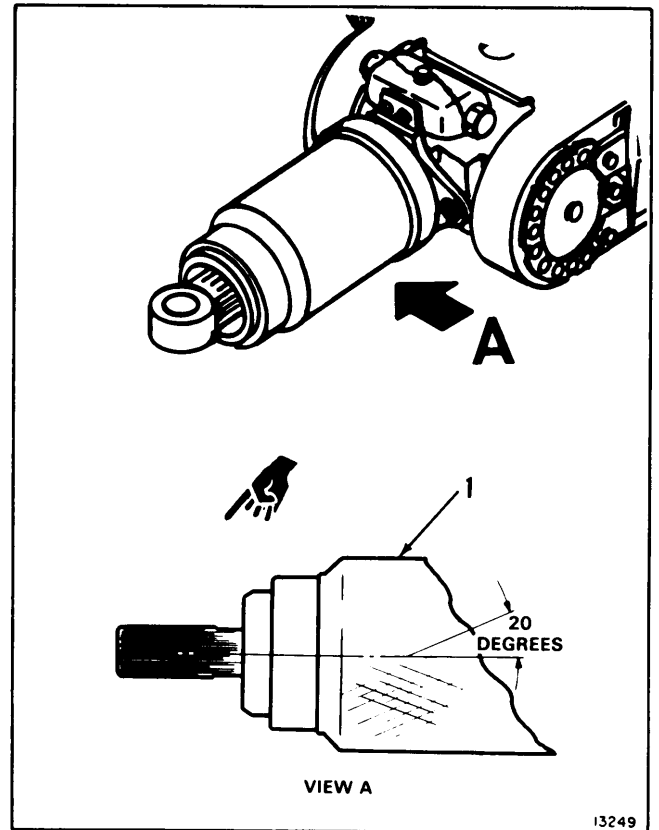**FOLLOW-ON MAINTENANCE:**

Install pitch-varying housing (Task 5-23).

**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**

- Cloths (E120)
- Acetone (E20)
- Abrasive Pad (E2)
- Gloves (E186)

**Personnel Required:**

- Aircraft Powertrain Repairer
- Inspector

**Equipment Condition:**

- Off Helicopter Task

**General Safety Instructions:**

**WARNING**


Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**

Primers (E294 and E302) are flammable and toxic. They can irritate skin and cause burns. Use only with adequate ventilation, away from heat or open flame. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**CAUTION**

Power tools shall not be used to remove finish. Damage to head can result.

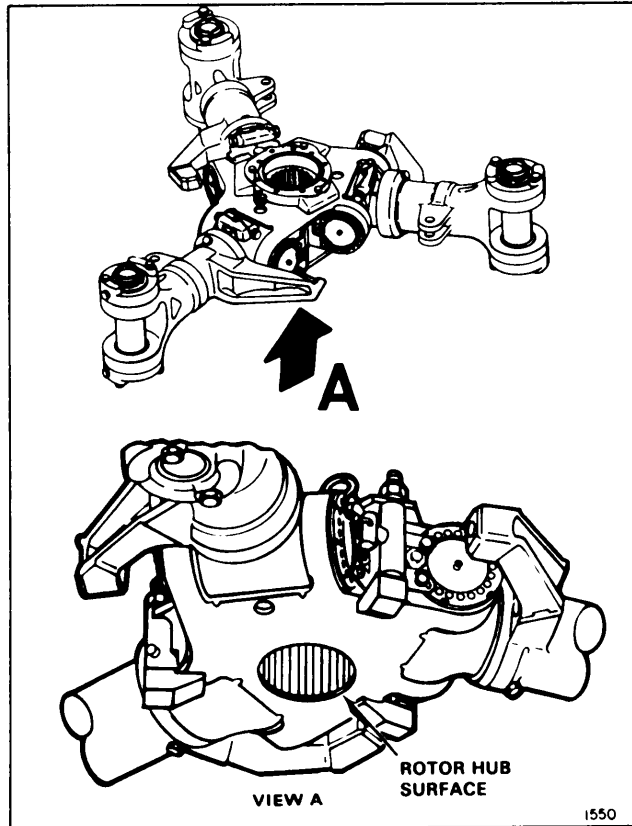

**GO TO NEXT PAGE**

5-86.4 Change 14

**5-21.3 INSPECT ROTOR HUB SURFACE (Continued)****5-21.3****NOTE**

Procedure is same for forward and aft heads.

1. Position head (1) so that splines (2) on underside are accessible.
2. **Remove lacquer finish from a 1-inch wide strip (3) around splines (2).** Use acetone (E20) and clean cloths (E120).
3. **Remove primer coat** to bare metal from strip (3). Use abrasive pads (E2) and acetone (E20). Wear gloves (E186).
4. **Rinse finish removal area** with a clean cloth (E120) soaked in water. **Dry area** with a clean dry cloth.
5. **Perform fluorescent-penetrant inspection of strip (3) around splines (2).** (Refer to TM 43-0103.) There shall be no **cracks**.
6. If no cracks are found, remove inspection coating. (Refer to TM 43-0103.)
7. Refinish strip (3) as follows:
  - a. **Apply one coat of wash primer (E302).** Wear gloves (E 186). Let air dry for 1 hour. Do not let dry more than 4 hours.
  - b. **Apply one coat of fast drying primer (E294).** Wear gloves (E 186). Let air dry for 1 hour. Do not let dry more than 2 hours.


**WARNING**

Lacquer (E213) is extremely flammable. It can be toxic. Keep away from heat, sparks, or open flames. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- c. **Apply two coats of black lacquer (E215).** Wear gloves (E186). Let air dry 1 hour between coats.

**FOLLOW-ON MAINTENANCE:**

None

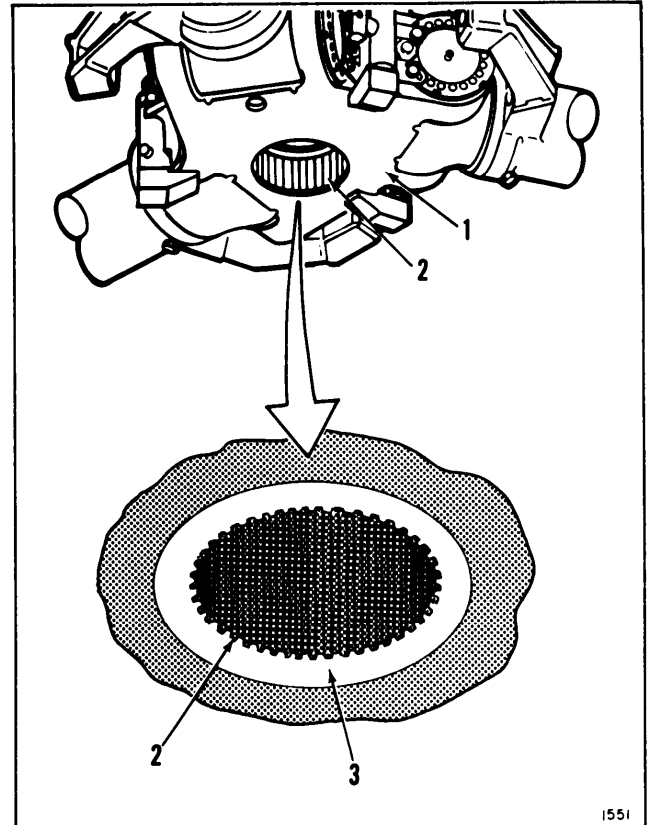**END OF TASK**





**5-22 REMOVE PITCH VARYING HOUSING**

5-22

**INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Two-Quart Container  
Phenolic Drift, 3/4-Inch X 12-Inches  
Crow's Foot, 7/16-Inch

**Materials:**


Cloth (E120) Grease (E190)  
Paper Tag (E264) Barrier Material (E80)  
Tape (E404 through E409, As Required)

**Personnel Required:**

Aircraft Powertrain Repairer (2)

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
One Forward and One Aft Rotary-Wing Blade  
Tied Down (Task 1-26)  
Work Platform Open (Task 2-2)  
Rotary-Wing Blade Removed (Task 5-64)  
Remove Pitch Link (Task 5-97)

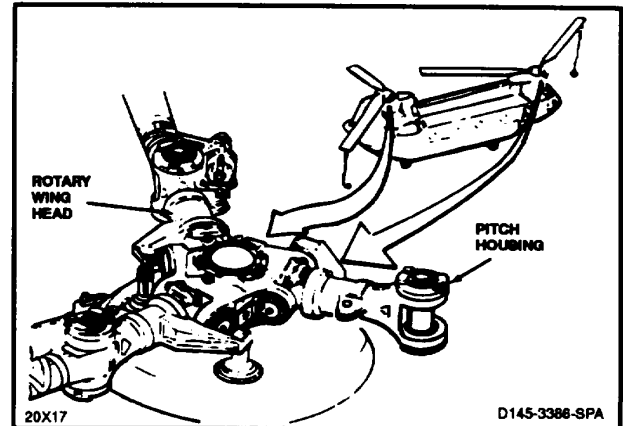**NOTE**


- Remove pitch-varying housing only if the same housing will be installed. Installation of a replacement housing is not permitted at this level.
- Procedure is same to remove any pitch-varying housing on forward or aft rotary-wing head except as noted. Forward head is shown here. Procedure may be done with head on or off helicopter.

- Remove lockwire from filler plug (1). Remove plug and packing (2).
- Remove lockwire from lower plug (3). Remove plug and packing (4).
- Drain oil.** Use container and cloth (E120). Raise pitch housing (5).

**NOTE**


**Balance weights are not installed on red housing.**

- Remove nut (6), washer (7), and balance weights (8, 9, 10) from pitch housing (5).

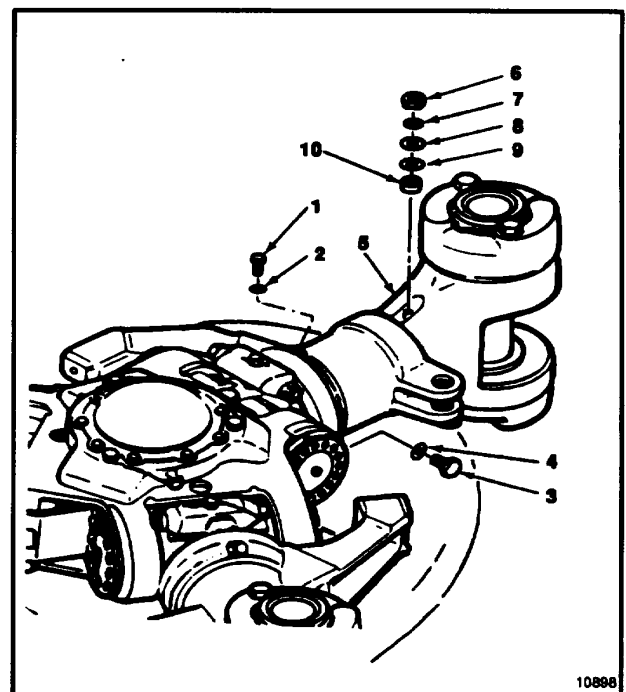**GO TO NEXT PAGE**

Change 34 5-87

5. Tie weights (8, 9, and 10) together with tag (E264) (11). Mark tag with color of tape (12) (E404) on housing (5).
6. Remove nut (13), bolt (14), and washer (15).
7. Remove two washers (16). Pry washers loose from sealant.

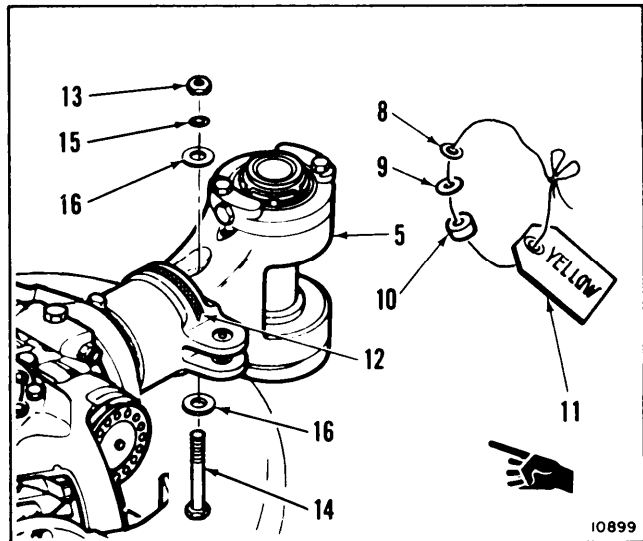


**CAUTION**

Do not try to tap tie-bar pin out through bottom of housing. Damage to pin and tie-bar will result.


8. Tap tie-bar pin (17) upward out of housing (5). Use phenolic drift.

**CAUTION**

Do not allow dirt or abrasive materials to contact bearing races. Avoid handling pitch-varying shaft. Fingerprints can cause corrosion on bearing surfaces.

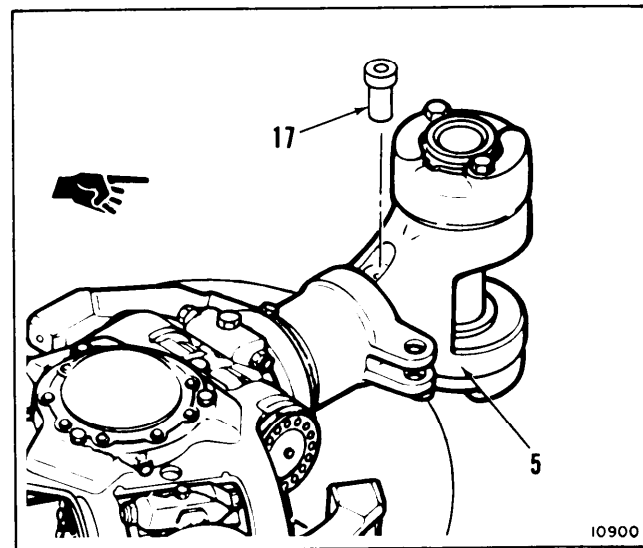

9. Pull housing (5) from shaft (18). Tap housing with soft mallet if needed.

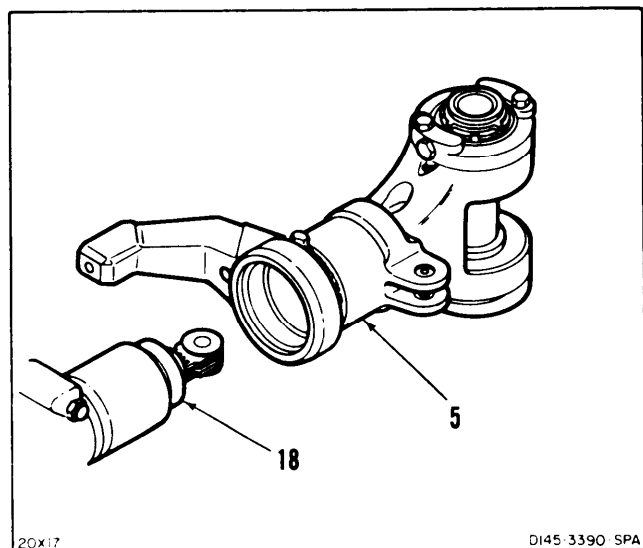


**GO TO NEXT PAGE**


**5-22 REMOVE PITCH VARYING HOUSING (Continued)****5-22****NOTE**

Worn bearing cage, which permits rollers to be loose or to fall out, is not cause for replacement.

10. If bearing rollers (19) fall from cage (20), clean and **place rollers back in cage**. Apply thin coat of grease (E190) over rollers to hold them in cage.

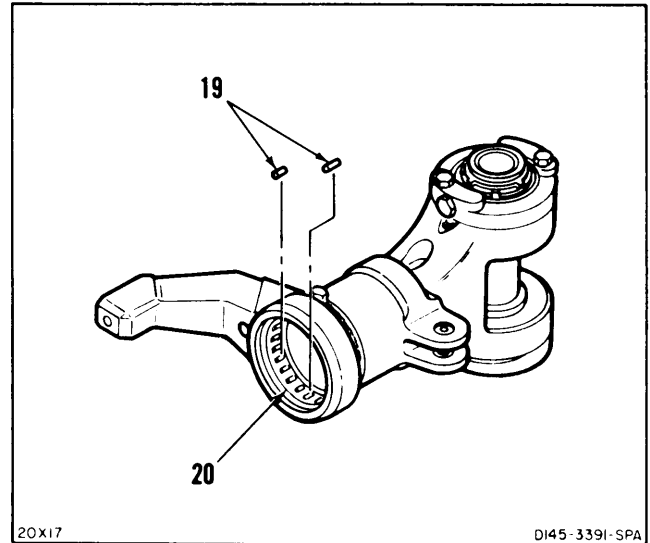

11. Cover pitch shaft (18). Use barrier material (E80) and tape (E388).

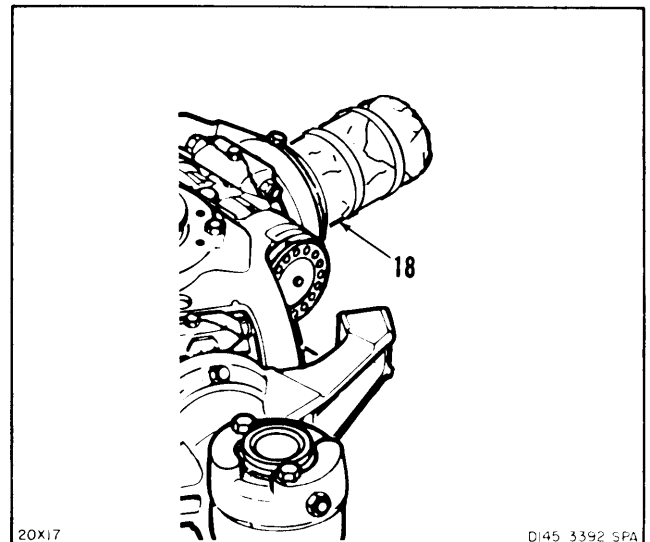**FOLLOW-ON MAINTENANCE:**

None

**END OF TASK**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Torque Wrench, 5 to 50 Inch-Pounds  
Crowfoot, 7/16-inch

**Materials:**

Grease (E190)  
Oil (E254)  
Antiseize Compound (E75)  
Methyl-Ethyl-Ketone (E244)  
Sealant (E336)  
Cloth (E120)  
Dry Cleaning Solvent (E 162)  
Lockwire (E231)  
Gloves (E186)

**Parts:**

Packings

**Personnel Required:**

Aircraft Powertrain Repairer (2)  
Inspector

**References:**


TM 55-1520-240-23P  
Task 1-57

**General Safety Instructions:****WARNING**

Dry cleaning solvent (E162) and methyl-ethyl-ketone (E244) are flammable and toxic. They can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**

Sealant (E336) can irritate skin and cause burns. Avoid contact with skin, eyes, and clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

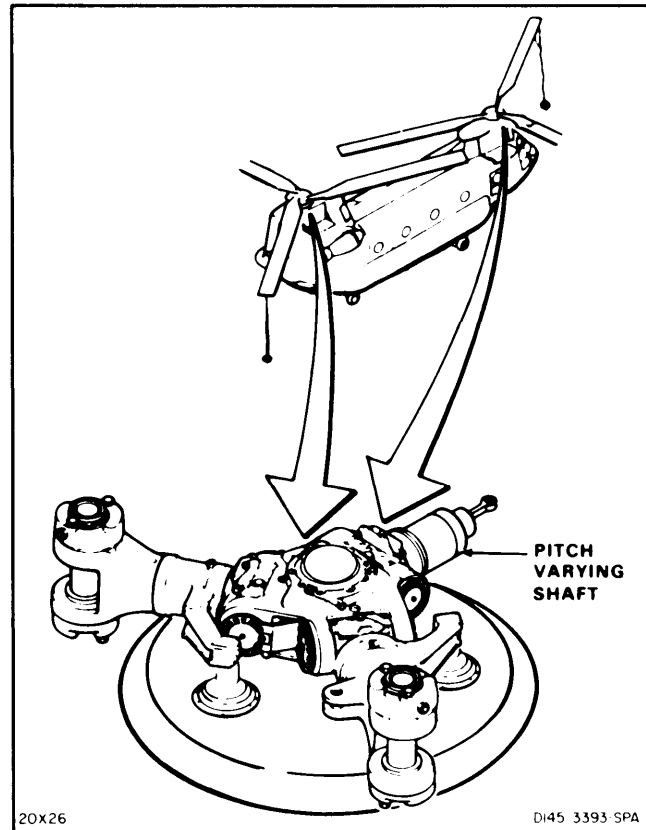**GO TO NEXT PAGE**

5-90 Change 14

**NOTE**

**Install pitch varying housing only if it is the same housing that was removed. Installation of a replacement housing is not permitted at this level.**

- Procedure is same to install any pitch varying housing on forward or aft head. Yellow housing on forward head is shown here.

1. Remove barrier, material, and tape from pitch shaft (1). Clean pitch shaft. Use cloth (E120) damp with solvent (E162). Wear gloves (E186).
2. **Check shaft (1) for scores, nicks, or gouges.** Damage shall not exceed 0.005 inch in depth by 2.5 inches in length. Damage direction in View A shall not exceed 20 degrees from shaft centerline.

**CAUTION**

**Do not allow dirt or abrasive materials to contact bearing races. Avoid handling pitch varying shaft. Fingerprints can cause corrosion on bearing surfaces.**

3. Check that rollers (2) are in cages (3). Apply thin coat of grease (E190) to hold rollers in place, if needed.
4. Apply light coat of lubricating oil (E254) to shaft (1).
5. Clean sealant from two holes (4) in pitch housing (5). Use methyl-ethyl-ketone (E244). Wear gloves (E186).



**CAUTION**

**Do not allow seals to contact tie-bar during pitch housing installation. Sharp edges of tie-bar can damage seals.**

**CAUTION**

**Inspect all Inboard and outboard tie bar pin assemblies IAW task 5-6.k.1 thru k.7 for serviceability prior to installation.**


6. **Install housing (5) over tie-bar (6) and shaft (1).**

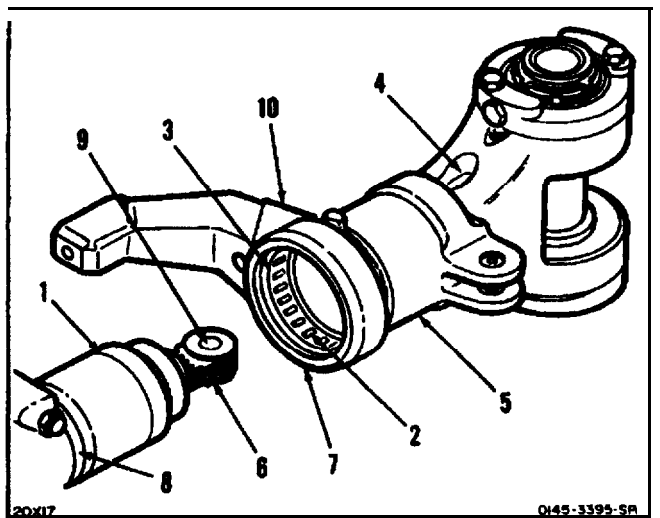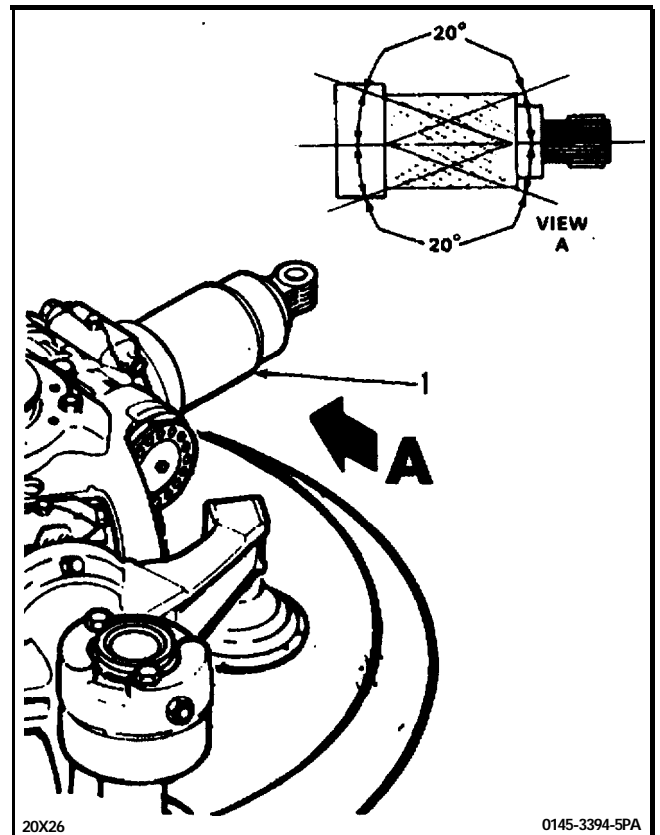


7. Guide seal (7) onto wear sleeve (8). Seal shall not be folded.
8. Align hole (9) in tie-bar (6) with hole (4) in housing (5). Use pitch arm (10) to guide housing.

**GO TO NEXT PAGE**

9. Apply light coat of anti-seize (E75) to tie-bar pin (11). Wear gloves (E186).
10. **Install pin (11)** in hole (4). Tap pin to seat it.

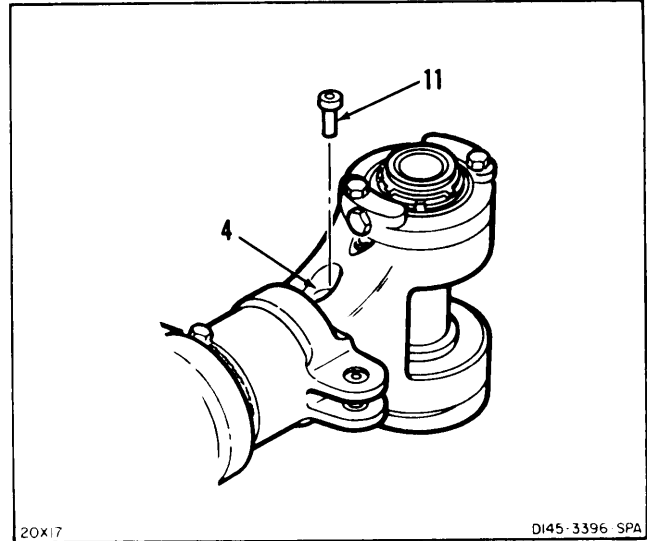


11. Install bolt (12), washers (13, 14, and 15), and nut (16). **Torque nut to 35 inch-pounds**.
12. Apply sealant (E336) around washers (13 and 14). Wear gloves (E186).

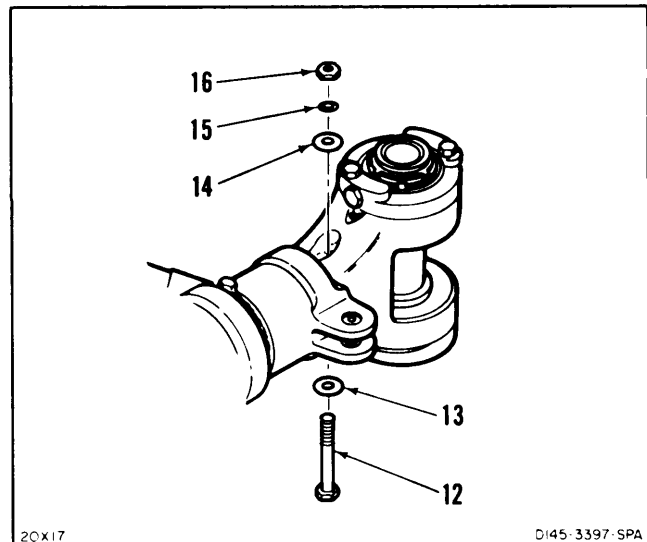

**CAUTION**

**Do not install wrong balance weights on a pitch housing. Use of wrong balance weights will cause head to be unbalanced.**


13. Remove tag (17). **Install weights (18, 19, and 20), washer (21) and nut (22). Torque nut to 35 inch-pounds**.

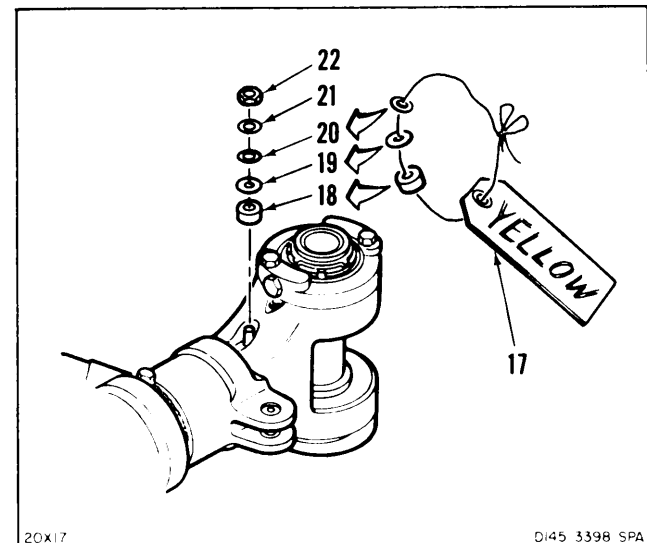


**GO TO NEXT PAGE**

**5-23 INSTALL PITCH VARYING HOUSING (Continued)****5-23**

14. **Install packing (23) and lower plug (24) on housing (5). Torque plug to 24 inch-pounds.**
15. **Service pitch bearing oil tank (25) until oil reaches top of housing (5) (Task 1-57).**
16. **Install packing (26) and upper plug (27). Torque plug to 24 inch-pounds.**  
Lockwire plug to lower plug (24). Use lockwire (E231).
17. Continue servicing pitch bearing oil tank (25) until oil reaches center of sight indicators (28) (Task 1-56).

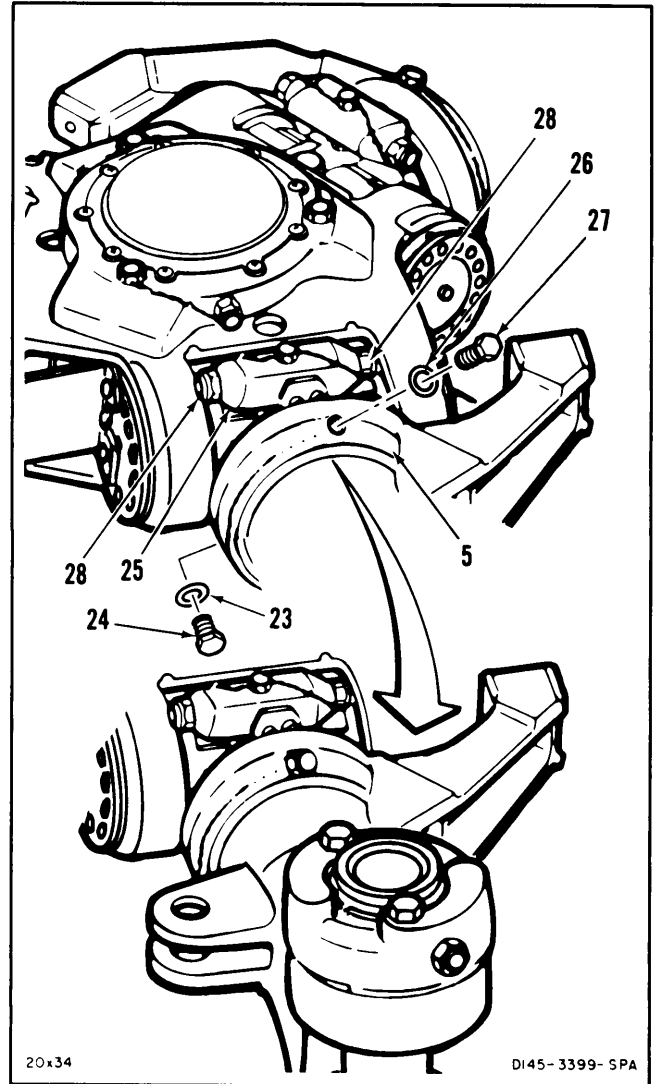**INSPECT****FOLLOW-ON MAINTENANCE:**

- Pressure test rotary-wing head (Task 5-5).
- Install rotary-wing blade (Task 5-84).
- Close work platform (Task 2-2).

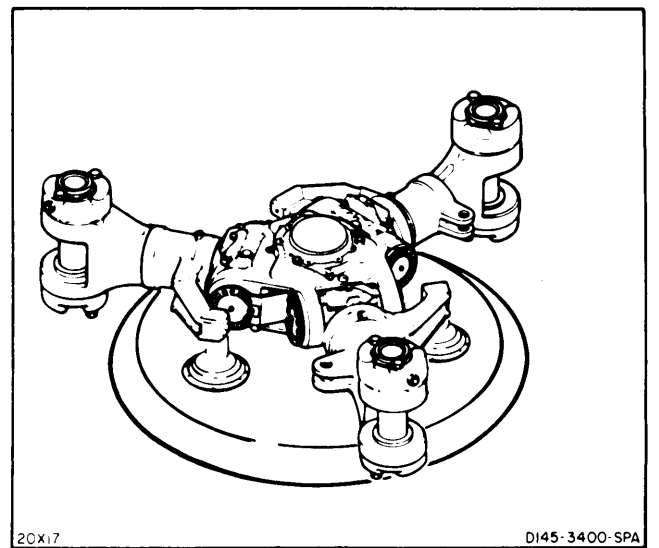**END OF TASK**



INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Powertrain Repairer's Tool Kit,  
NSN 5180-00-323-5267
- Two-Quart Container
- Bolt, 3/8-24 X 5 Inches
- Drift, Phenolic, 3/8-inch Dia.

**Materials:**


Tags (E264)

**Personnel Required:**

Aircraft Powertrain Repairer (2)

**Equipment Condition:**

- Battery Disconnected (Task 1-39)
- Electrical Power Off
- Hydraulic Power Off
- One Forward and One Aft Rotary-Wing Blade Tied Down (Task 1-26)
- Work Platform Open (Task 2-2)
- Rotary-Wing Blade Removed (Task 5-64)
- Hub Oil Tank Removed (Task 5-15)

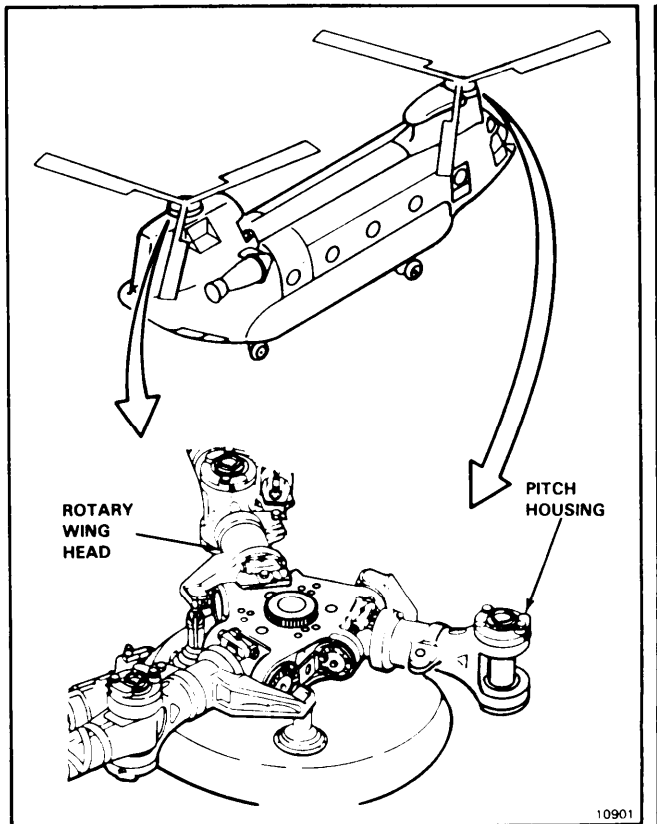

10901

**NOTE**


Procedure is same to remove any tie bar assembly. Removal of tie bar assembly from forward rotary-wing head is shown here.

1. Remove lockwire from filler plug (1). Remove plug and packing (2).
2. Remove lockwire from lower plug (3). Remove plug and packing (4).
3. **Drain oil.** Use container and cloth (E120). Raise pitch housing (5).

**NOTE**

Red pitch housing does not have weights.

4. **Remove** nut (6), washer (7), and **balance weights (8, 9, and 10)** from pitch housing (5).
5. Tie weights (8, 9, and 10) together and tag (E264). Mark tag with color of tape (11) on housing (5).
6. **Remove** nut (12), washer (13), and **bolt (14)** from housing (5). Pry washer loose from sealant.

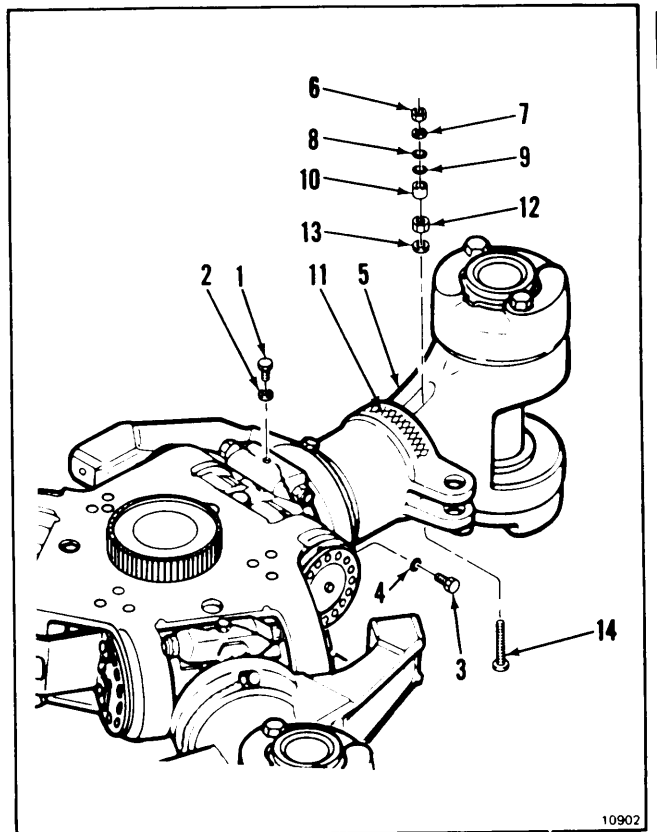

10902

**GO TO NEXT PAGE**

## 5-23.1 REMOVE ROTARY-WING HEAD TIE BAR ASSEMBLY (Continued)

5-23.1

### CAUTION



Do not try to tap tie-bar pin out through bottom of housing. Damage to pin and tie-bar will result.

- Tap tie-bar pin (15) upward out of housing (5). Use phenolic drift.

### CAUTION

Do not allow dirt or abrasive materials to contact bearing races. Avoid handling pitch-varying shaft. Fingerprints can cause corrosion on bearing surfaces.

- Pull housing (5) from shaft (16). Tap housing with soft mallet if needed.

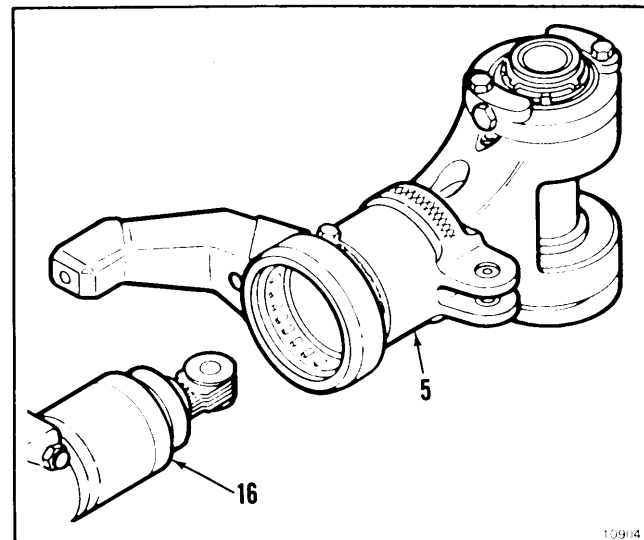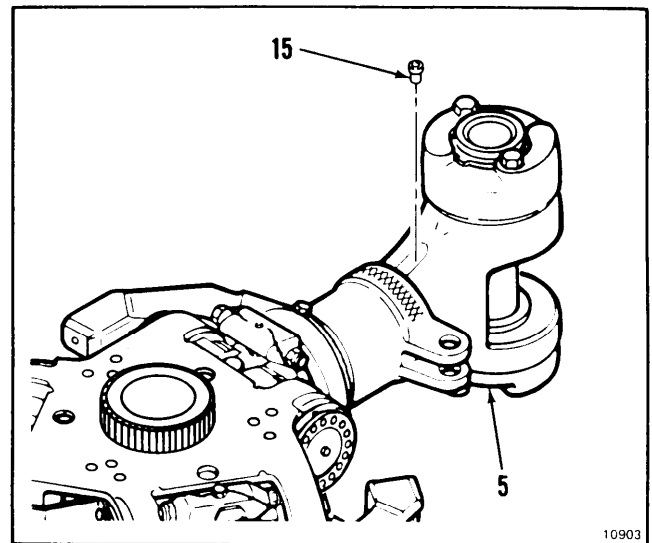


- Remove lockwire from tie-bar pin (17). Remove bolt (18), washer (19), and retaining washer (20).

### CAUTION

Do not tap pin down to remove. Retaining bolt nut plate will be damaged.

- Install  $\frac{3}{8}$  inch-24 thread x 5 inch bolt (21) in pin (17) and pull pin from shaft (16).
- Remove bolt (21) from pin (17).

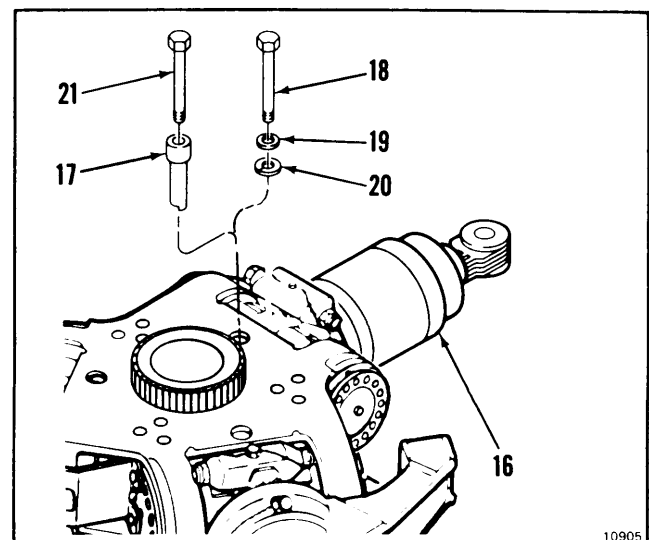


**GO TO NEXT PAGE**

**5-23.1 REMOVE ROTARY-WING HEAD TIE BAR ASSEMBLY**  
**(Continued)**

5-23.1

12. Pull tie bar (22) from shaft (16).

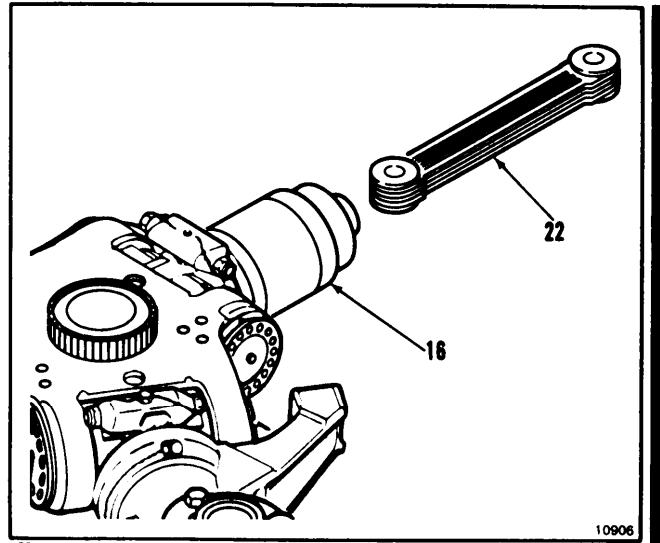

**FOLLOW-ON MAINTENANCE:**

None

## 5-23.1.1 INSPECT TIE BAR AND PIN ASSEMBLIES

5-23.1.1

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Technical Inspector's Tool Kit,  
NSN 5180-00-323-5114  
Borescope

**Materials:**

Solvent (E162)  
Cloths (E120)  
Gloves (E186)

**Personnel Required:**

Aircraft Powertrain Repairer  
Inspector


**Equipment Condition:**

Off-Helicopter Task


**WARNING**

Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

1. **Clean tie bar assembly (1).** Use cloths (E120) damp with solvent (E162). Wear gloves (E186) and goggles.
2. **Visually inspect** the entire assembly:
  - a. Using 10X magnification, visually inspect tie bar plates for cracks. **No cracks allowed.**
  - b. There shall be **no scores or scratches in bores (2).**
  - c. There shall be **no buckling, separation of plates, or scratches across lug areas (3).**
  - d. There shall be **no more than 15 scratches in plates along span (4).** No scratch shall have a **depth over 0.001 inch.** No scratch shall extend to the radius at the end of the slots.
  - e. Separation of plates along span (4) is permitted.
  - f. There shall be **no sharp edges** on plates.
  - g. There shall be no distortion, cracks, or deformation (dishing) of washers.

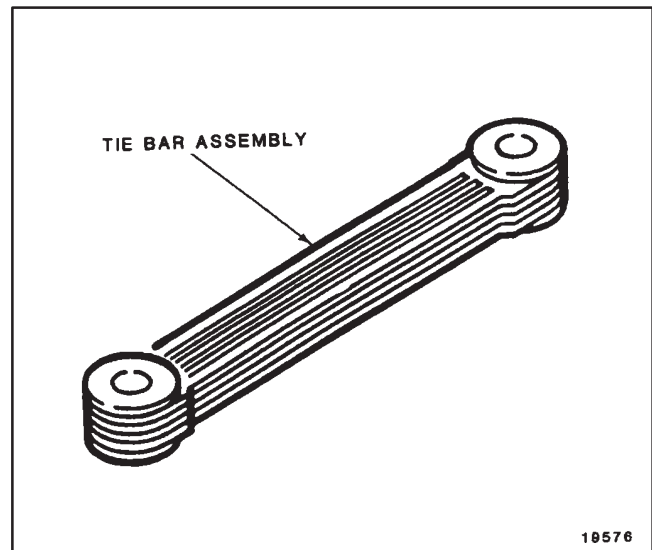

19576

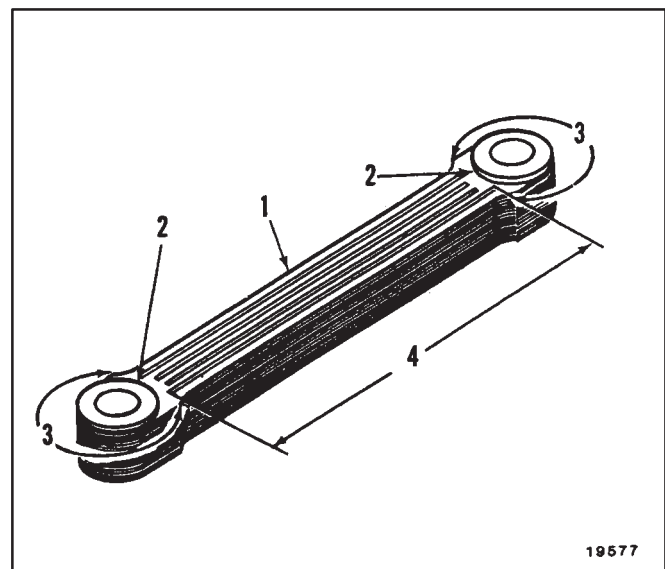

19577

3. Visually inspect tie bar pins for nicks, cracks, scratches, distortion and corrosion. **None allowed.**
4. Inspect the four slots in the tie bar assembly as follows:
  - a. Using a borescope with a rigid right angle probe, insert the borescope probe in each slot. Examine the slots for cracks along the full depth and span.

**GO TO NEXT PAGE**

**NOTE**

Recommend the probe not exceed  
0.110 each diameter.

- b. If a suitable borescope and probe are not available, visually inspect each slot using a light source.
- c. Reject tie bar assembly if any cracks are detected.

FOLLOW-ON MAINTENANCE:

None

**END OF TASK**

**Change 48 5-94.2.2**

**5-23.2 INSTALL ROTARY-WING HEAD TIE BAR ASSEMBLY****5-23.2****INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-323-5267  
Torque Wrench, 5 to 50 Inch-Pounds  
Bolt, 3/8-inch-24 Thread X 5 Inches  
Drift, Phenolic, 3/8-inch Dia.

**Materials:**

Cloths (E120)  
Antiseize Compound (E75)  
Lockwire (E231)  
Gloves (E186)  
Sealant (E336)  
Solvent (E244)  
Grease (E190)  
Oil (E254)

**Parts:**

Packings

**Personnel Required:**


Aircraft Powertrain Repairer (2)  
Inspector

**References:**

TM 55-1520-240-23P  
Task 1-56

**General Safety Instructions:****WARNING**

Methyl-ethyl-ketone (E244) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

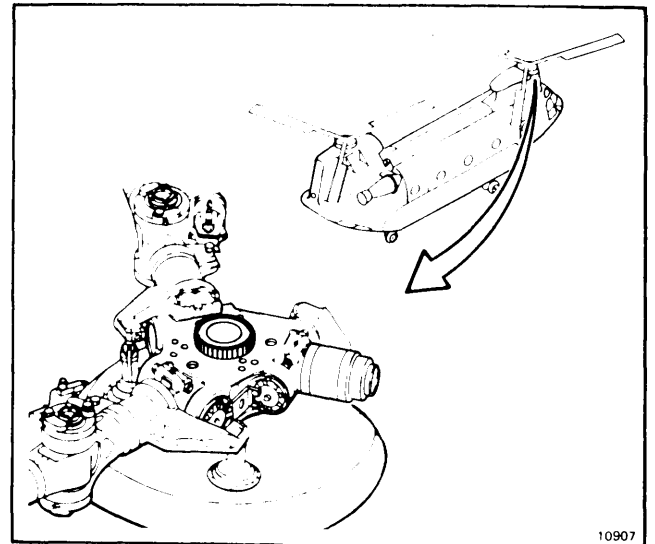**WARNING**

Sealant (E336) can irritate skin and cause burns. Avoid contact with skin, eyes, and clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**


Antiseize compound (E75) can form toxic vapors if exposed to flame. Use in well-ventilated area, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**5-23.2 INSTALL ROTARY-WING HEAD TIE BAR ASSEMBLY  
(Continued)**

**NOTE**

Procedure is same to install any tie bar assembly. Installation of tie bar assembly in forward rotary-wing head is shown here.

1. Slide tie bar (1) into shaft (2). Align hole (3) in tie bar with hole (4) in shaft.

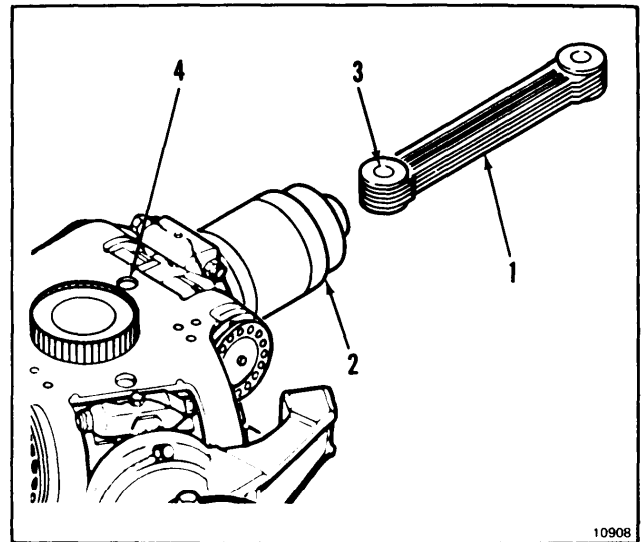

20 x 17

2. Install 3/8 inch-24 thread x 5 inch bolt (5) in pin (6).
3. Apply light coat of compound (E75) to pin (6). Wear gloves (E186).

**CAUTION**


**Do not misalign tie bar pin during installation. Rotary-wing head will be damaged at maximum flap angle. Nut plate at pitch shaft will also be damaged.**

4. Position pin (6) with slot (7) in pin aligned with slot (8) in shaft (2). Install pin.
5. Remove bolt (5) from pin (6).
6. Align pins (9) of retaining washer (10) with slots (11) of pin (6). Install washer.

**CAUTION**

**Do not use substitute bolt or washer. Damage to hub can result.**

7. Install washer (12) and bolt (13) in shaft (2). Torque bolt to 40 inch-pounds. Lockwire bolt to washer (10).
8. Apply sealant (E336) to washer (10) and shaft (2).

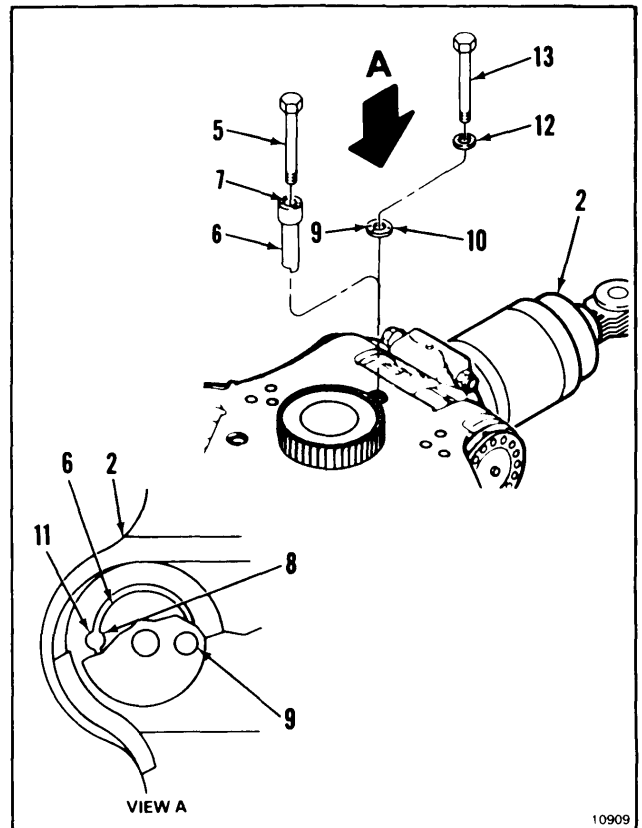

20 x 26

10909

**INSPECT**

## 5-23.2 INSTALL ROTARY-WING HEAD TIE BAR ASSEMBLY (Continued)

5-23.2

**CAUTION**

Avoid handling pitch varying shaft. Fingerprints can cause corrosion on bearing surfaces.

9. Check rollers (14) are in position in housing (15). Apply thin coat of grease (E190) to hold rollers in place, if needed. Use gloves (E186).
10. Apply light coat of oil (E254) to outer surface of shaft (2). Wear gloves (E186).
11. Clean sealant from two holes (16) of housing (15). Use solvent (E244) and cloths (E120). Wear gloves (E186).

**CAUTION**



Do not allow seals to contact tie bar during pitch housing installation. Sharp edges of tie bar can damage seals.

12. Slide housing (15) onto shaft (2) and tie bar (1), pitch arm (17) to right looking inboard. Guide seal (18) onto wear sleeve (19). Seal shall not be folded.

**INSPECT**

13. Align hole (20) in tie bar (1) with hole (16) in housing (15).

14. Apply light coat of compound (E75) to pin (21). Wear gloves (E186).
15. Install pin (21) in housing (15). Tap to seat pin. Use phenolic drift.
16. Install washer (22), bolt (23), and nut (24) in housing (15). Torque nut to 35 inch-pounds.
17. Apply sealant (E336) to washer (22) and housing (15). Wear gloves (E186).

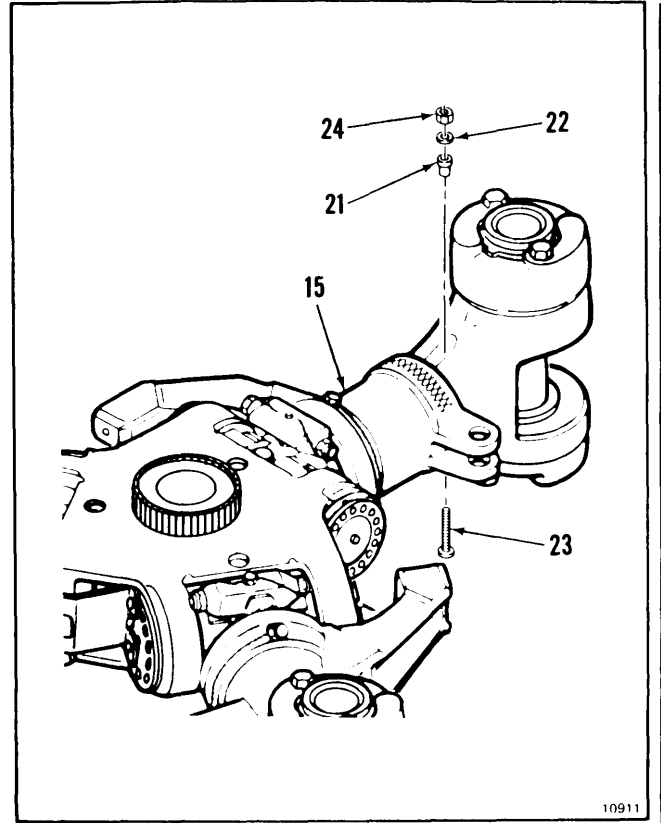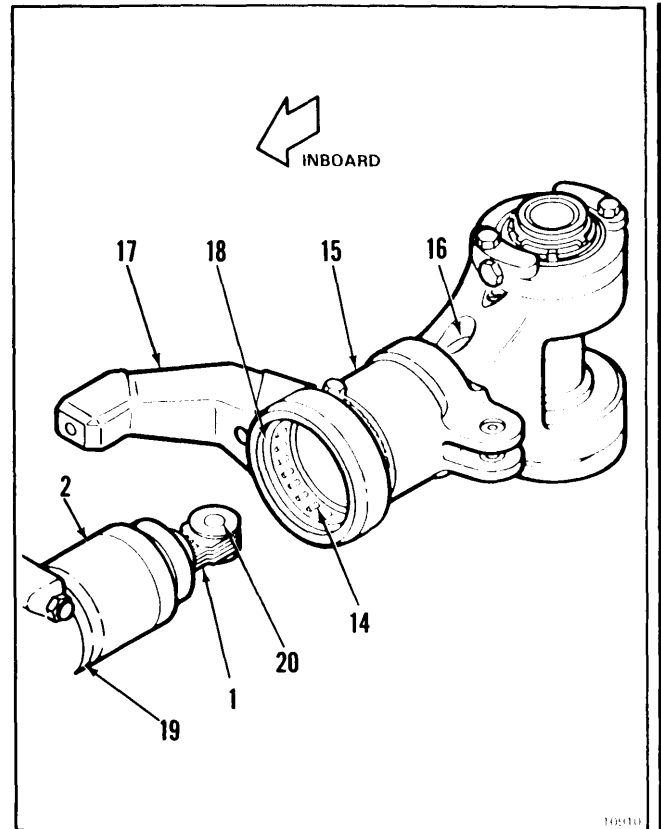

**GO TO NEXT PAGE**



## 5-23.2 INSTALL ROTARY-WING HEAD TIE BAR ASSEMBLY (Continued)

5-23.2

### CAUTION


Do not install wrong balance weights on a pitch housing. Use of wrong balance weights will cause head to be unbalanced.

18. Remove tag from three weights (25, 26, and 27). Install weights, washer (28), and nut (29) on bolt (23). Torque nut to 35 inch-pounds.

### NOTE

Color of tape on housing must be same as color marked on tag.

19. Install packing (30) on plug (31).  
 20. Install plug (31) in housing (15). Torque plug to 24 inch-pounds. Lockwire (E231) plug to housing.  
 21. Service pitch bearing oil tank (32) (Task 1-56).  
 22. Install packing (33) on plug (34).  
 23. Install plug (34) in tank (32). Torque plug to 24 inch-pounds. Lockwire plug to tank. Use lockwire (E231).

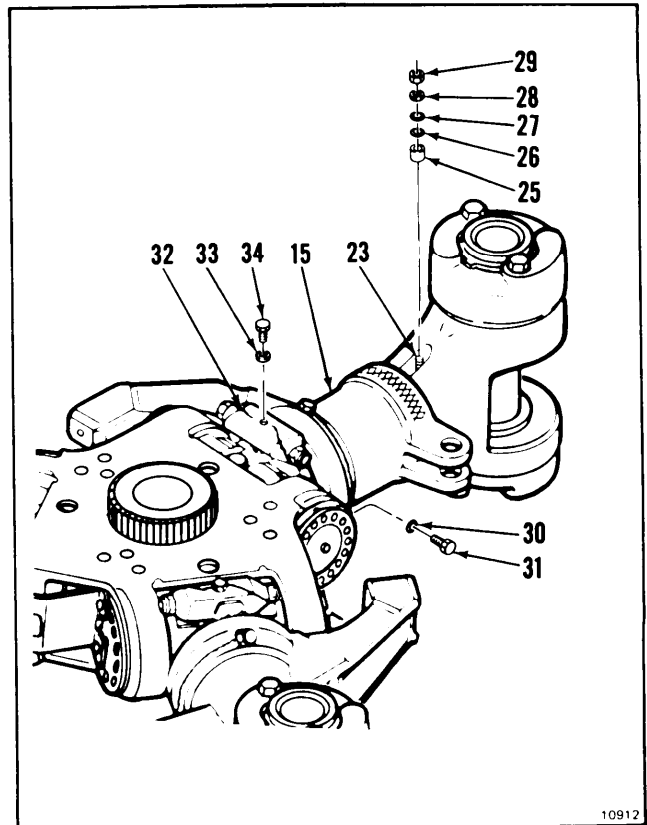

20 - 26

10912

### INSPECT

#### FOLLOW-ON MAINTENANCE:

- Pressure test rotary-wing head (Task 5-5).
- Install rotary-wing blade (Task 5-84).
- Close work platform (Task 2-2).
- Remove tiedown lines from aft and forward blades (Task 1-26).
- Install Hub Oil Tank (Task 5-17).

### END OF TASK

5-94.6 Change 14

**5-24 REMOVE PITCH HOUSING SEALS**

5-24

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Outboard Seal Puller (T8)  
Seal Removal Tool (Appx E-2)

**Materials:**

Grease (E190)  
Dry Cleaning Solvent (E162)  
Gloves (E186)  
Cloths (E120)

**Personnel Required:**


■ Aircraft Powertrain Repairer (2)

**References:**

Appendix E

**Equipment Condition:**

Off Helicopter Task  
Pitch Varying Housing Removed from Rotary-  
Wing Head (Task 5-22)

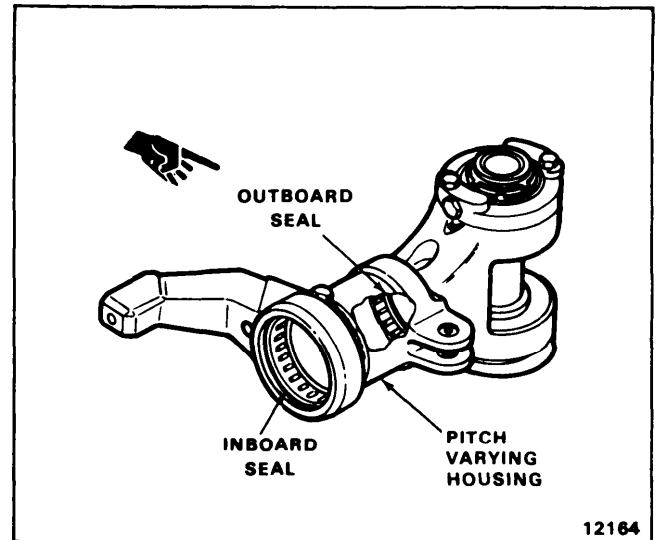
**WARNING**

Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**NOTE**

- Procedure is same to remove seals from all six pitch varying housings.
- Bearing cage wear which permits roller bearings to be loose or to fall out, is not cause for cage replacement.

1. Clean roller bearings (1) that fall from cage (2). Use cloth (E120) damp with solvent (E162). Use gloves (E186).

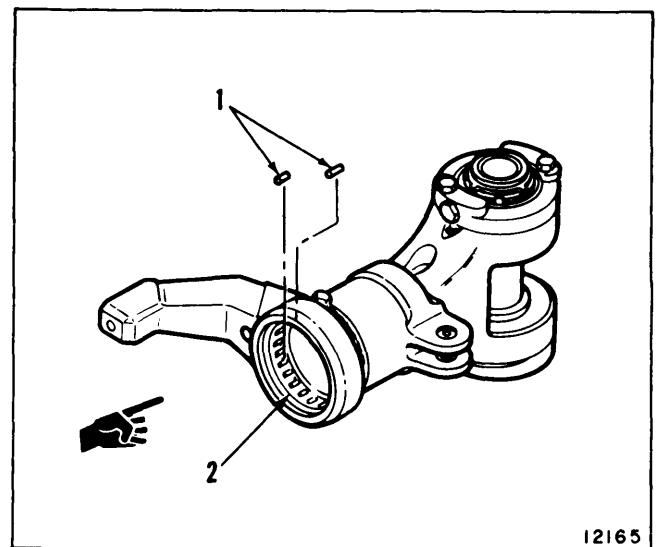**GO TO NEXT PAGE**




**5-24 REMOVE PITCH HOUSING SEALS (Continued)**

5-24


2. Apply thin coat of grease (E 190) to bearings (1) to hold them in cage (2). **Position bearings in cage.**

**CAUTION**


Seal Puller (T-8) utilizes a set of fingers/jaws P/N 114E5809-3 for seal removal and a set of finger jaws P/N 114E5809-15 for bearing removal. Ensure fingers/jaws P/N 114E5809-3 are installed in puller to preclude damaging the outboard bearing.

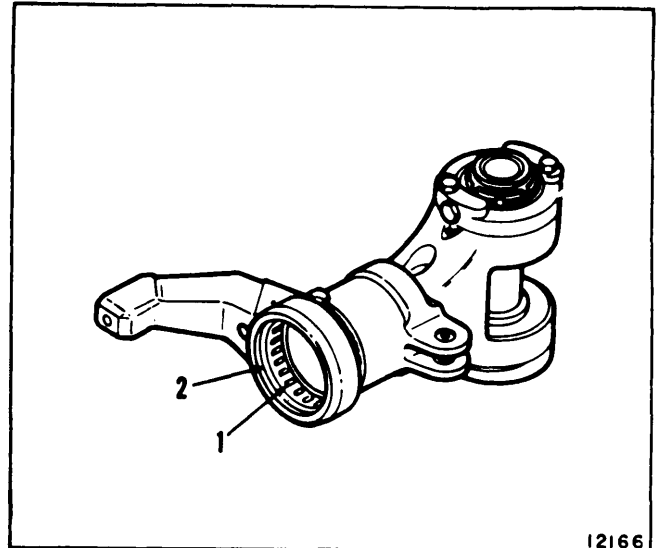**REMOVE OUTBOARD SEAL**

3. **Position seal puller (18) (3) in housing (4) deep enough to allow fingers (5) to grasp seal (6).**
4. Hold nut (7) and turn shaft (8) counterclockwise until fingers (5) **unseat seal (6)**. Use wrench to prevent nut from turning.

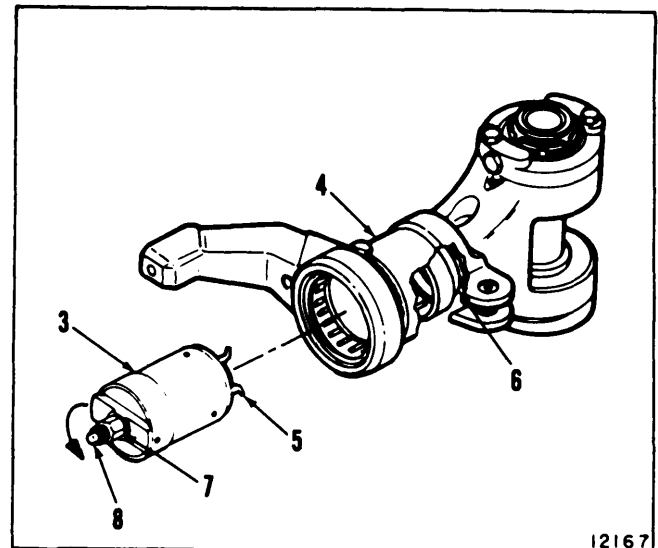


5. **Remove puller (T8) (3) and seal (6).**

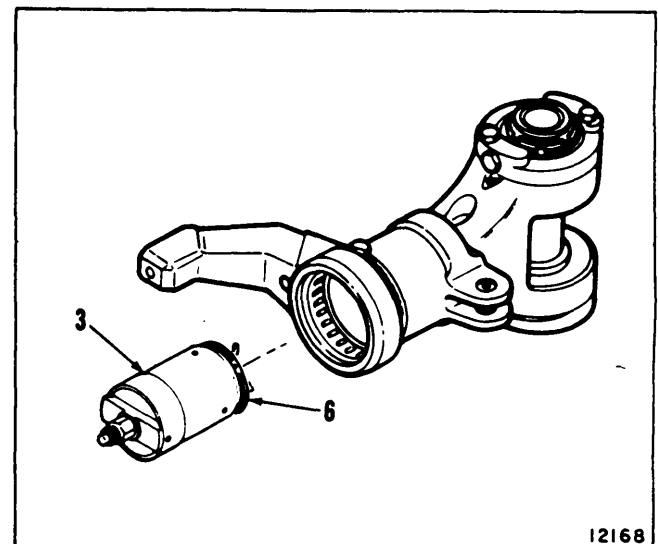**GO TO NEXT PAGE**

**REMOVE INBOARD SEAL****CAUTION**

Do not pry seal from housing with screwdriver or other hard tool. Damage to housing will result.

- Hook seal removal tool (9) behind inboard seal (10). Exert steady pressure against end of tool to loosen seal. Remove seal.

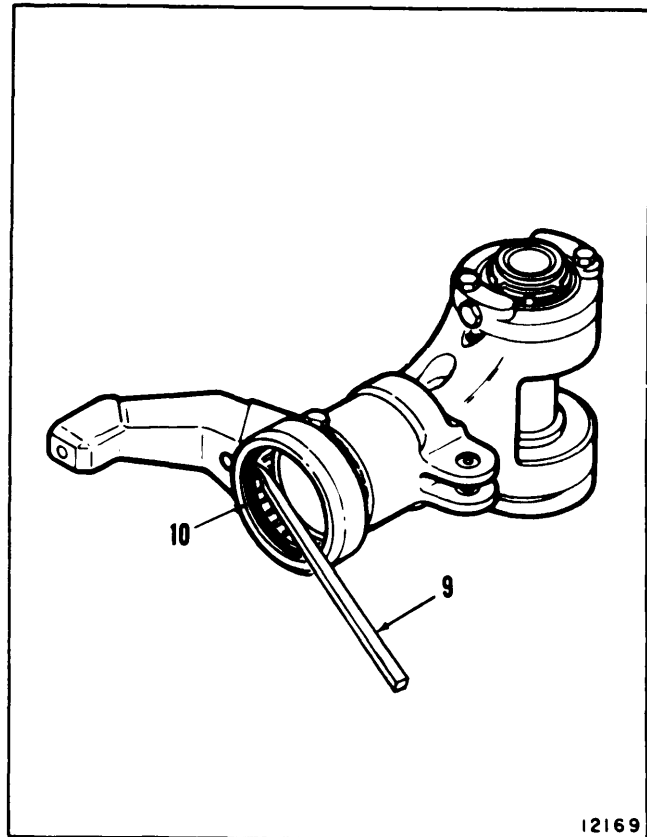**FOLLOW-ON MAINTENANCE:**

None

**5-24.1 INSPECT PITCH VARYING HOUSING SEAL SURFACES**

5-24.1

**INITIAL SETUP****Applicable Configurations:**


All

**Tools:**Technical Inspection Tool Kit,  
NSN 5180-00-323-5114**Materials:**

- Alodine (E65)
- Gloves (E184.1)
- Wash Primer (E302)
- Epoxy Primer (E292.1)
- Abrasive Paper (E10)
- Tape (E388)
- Solvent (E162)
- Cloths (E120)

**Personnel Required:**Aircraft Powertrain Repairer  
Inspector**Equipment Condition:**

Off Helicopter Task

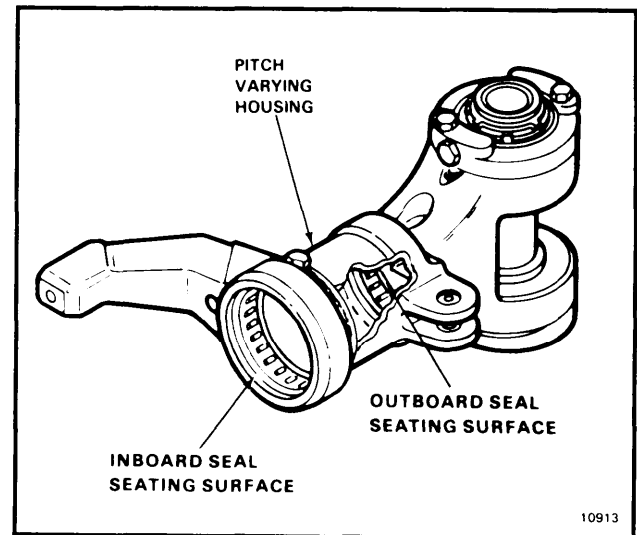**GO TO NEXT PAGE**

1. Inspect pitch-varying housing (1) at seal seating surfaces (2). Nicks, gouges and scratches shall not exceed 0.010 inch in depth.
2. Blend out surface defects as follows:
  - a. Protect surfaces around area to be repaired. Use tape (E388).

**CAUTION**


Do not contaminate bearings. Dirt can damage bearing surfaces.

- b. Blend out damage to surface, at least 10 times as wide as damage. Do not blend deeper than damage. Use abrasive paper (E10).

**WARNING**

Solvent (E162) is flammable toxic and can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- c. Clean reworked area. Use cloth (E120) moist with solvent (E162). Wear gloves (E184.1).

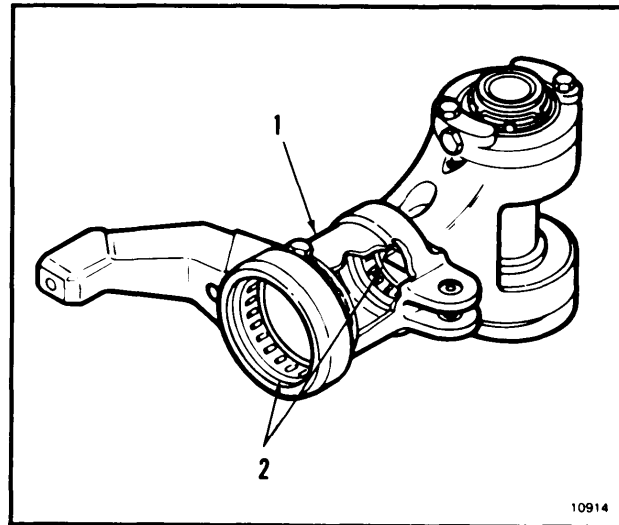**INSPECT**

## 5-24.1 INSPECT PITCH VARYING HOUSING SEAL SURFACES (Continued)

5-24.1

**WARNING**

Alodine (E65) is an oxidizer. Discard cloths which contain this material in a separate container. If discarded with cloths contaminated with acetone, reek, or other organic solvents, combustion can result. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- d. Apply alodine (E65) to repaired area.  
Wear gloves (E184.1).

**WARNING**


Wash primer (E302) and epoxy primer (E292.1) are flammable and toxic. They can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- e. Apply one coat of wash primer (E302) to repaired area. Allow primer to dry for 30 minutes. Wear gloves (E184.1).
- f. Apply one coat of epoxy primer (E292.1) to repaired area. Allow primer to dry for 1 hour. Wear gloves (E184.1).
- g. Remove tape (E388).

**INSPECT**

FOLLOW-ON MAINTENANCE:

None

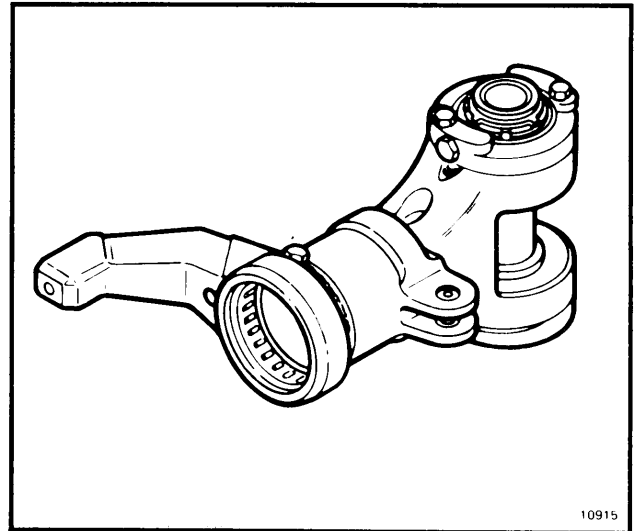

END OF TASK





**5-25 INSTALL PITCH HOUSING SEALS****5-25****INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Outboard Seal Installation Drift (T11)  
Inboard Seal Installation Drift E56)  
Rawhide Mallet

**Materials:**

Dry Cleaning Solvent (E161)  
Dry Cleaning Solvent (E162)  
Gloves (E184.1)  
Cloth (E120)  
Methyl-Ethyl-Ketone (E244)  
Epoxy Primer (292.1 )  
Adhesive (E63.1) Or Sealant (E340.3)  
Grease (E190)

**Personnel Required:**

Aircraft Powertrain Repairer (2)  
Inspector

**References:**


TM 55-1520-240-23P  
Task 5-24.1

**General Safety Instructions:****WARNING**

Methyl-ethyl-ketone (E244), epoxy primer (E292.1), and dry cleaning solvents (E162) and (E161) are flammable and toxic. They can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**

Adhesive (E63.1) and Sealant (E340.3) can irritate skin and cause burns. Avoid contact with skin, eyes, and clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

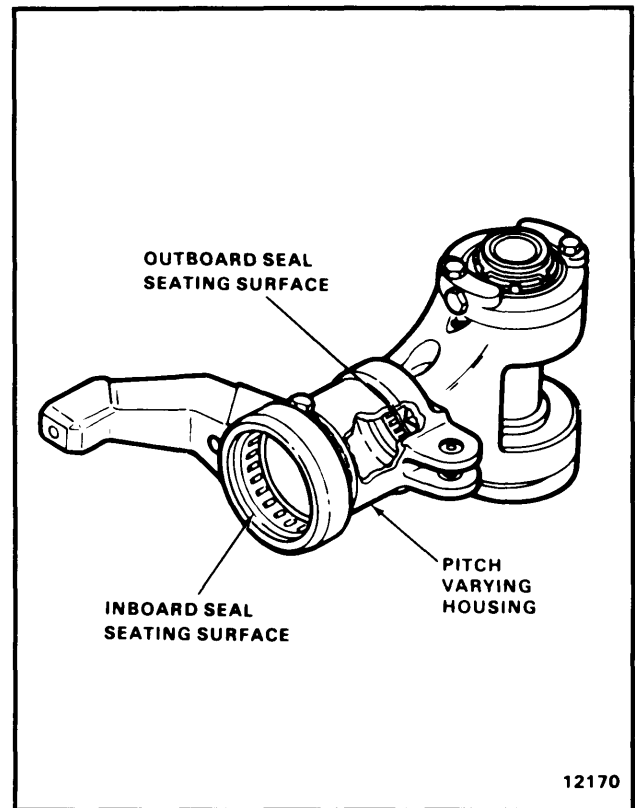

12170

**GO TO NEXT PAGE**

**NOTE**

- Task is same to install seals in all six pitch-varying housings.
- Adhesive (E63.1) or sealant (E340.3) is authorized specifically for the installation of pitch housing seal.

1. **Clean inside of housing (1)**, outboard of seal seat (2). Use cloth (E120) moist with solvent (E161). Wear gloves (E184.1).

**CAUTION**

**Do not contaminate bearings. Dirt can damage bearing surfaces.**

2. **Clean oil or dirt from seal seats (2 and 3)**. Use cloth (E120) damp with methyl-ethyl-ketone (E244). Wear gloves (E184.1).

**CAUTION**

**Do not block drain hole. Oil can not drain freely if hole is blocked.**


- 2.1. Inspect seats (2 and 3). (Task 5-24.1.)
3. Prime inside of housing (1), outboard of seal seat (2). Use epoxy primer (E292.1). Wear gloves (E184.1).

**INSTALL OUTBOARD SEAL**


**CAUTION**

**Do not allow adhesive to contact bearing. Adhesive can adhere to bearing.**

4. Apply adhesive (E63.1) or sealant (E340.3) to outboard seal seat (2).
5. Position outboard seal (4) on drift (T11) (5).
6. **Install outboard seal (4)** in seal seat (2). Remove drift (T11) (5).
7. Wipe off excess adhesive around outboard seal (4). Use cloth (E120) damp with solvent (E162). Wear gloves (E184.1).

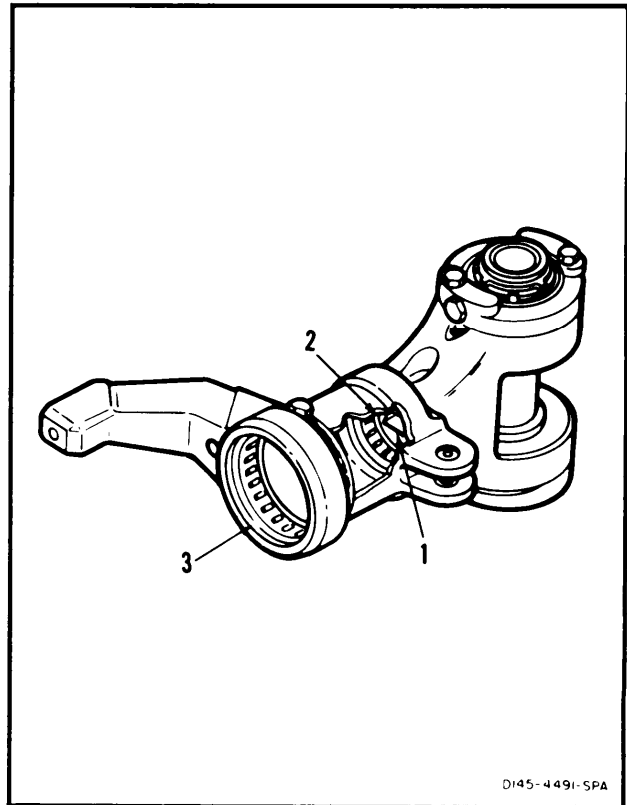

D145-4491-SPA

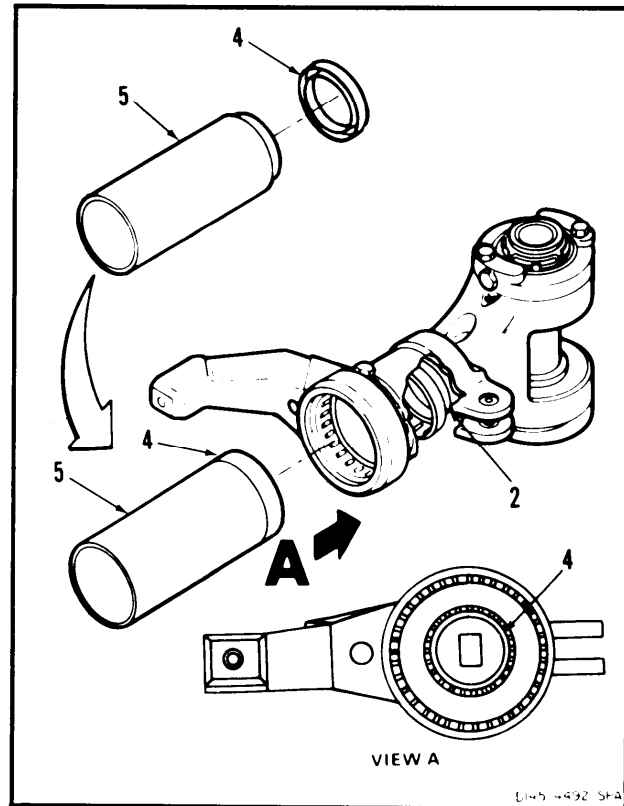

E145-4492-SPA


**GO TO NEXT PAGE**

## 5-25 INSTALL PITCH HOUSING SEALS (Continued)

5-25

**INSTALL INBOARD SEAL**

8. Position inboard seal (6) on drift (E56) (7) with seal lips (8) toward drift.
9. Apply adhesive (E63.1) or sealant (E340.3) all around seal seat (9). Apply thin coat of adhesive (E63.1) or sealant (E340.3) around outside of inboard seal (6). Wear gloves (E184.1).
10. **Press inboard seal (6) into housing (1).** Tap lightly with rawhide mallet if necessary. Remove drift (7).

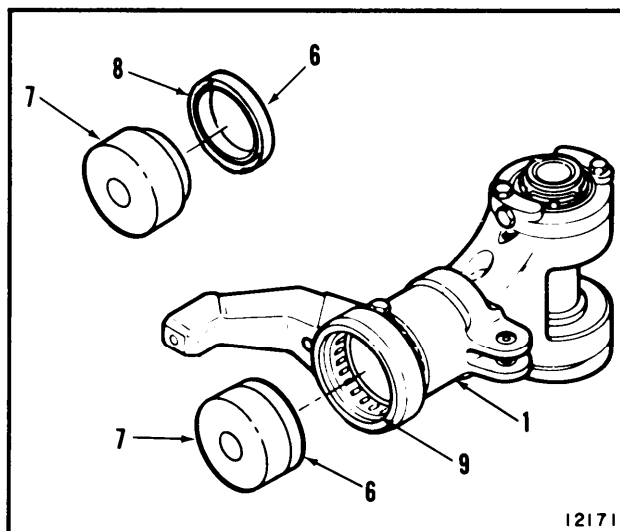


11. Apply bead of adhesive (E63.1) or sealant (E340.3) between inboard seal (6) and housing (1). Wear gloves (E184.1). Allow adhesive to cure for 6 hours.


**CAUTION**

Do not allow excess grease to remain on seals. Grease can plug oil holes and contaminate bearing oil.

12. **Apply grease (E190) to seal lips (10).** Wipe off excess grease.

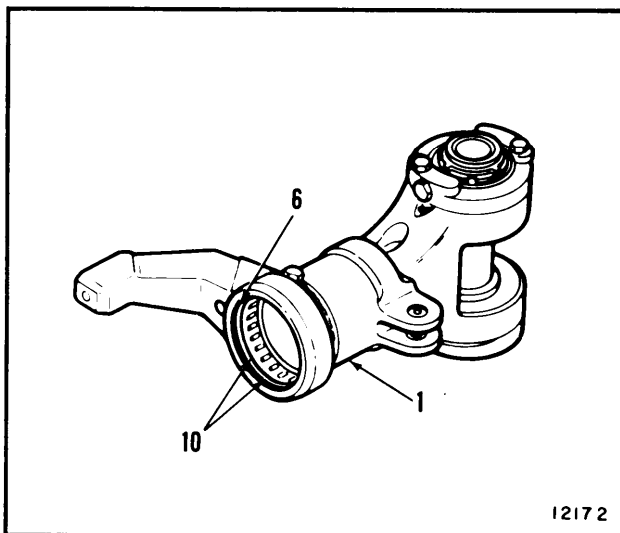**INSPECT****FOLLOW-ON MAINTENANCE:**

Install pitch varying housing (Task 5-23).

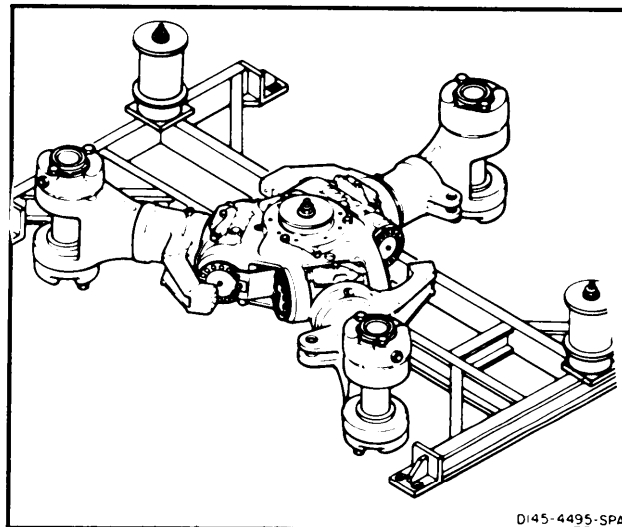**END OF TASK**

**5-26 REMOVE WEAR SLEEVE**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Phenolic Drift

**Materials:**


None

**Personnel Required:**

Aircraft Powertrain Repairer (2)

**Equipment Condition:**


Rotary Wing Blade Removed (Task 5-64)  
Pitch Varying Housing Removed (Task 5-22)

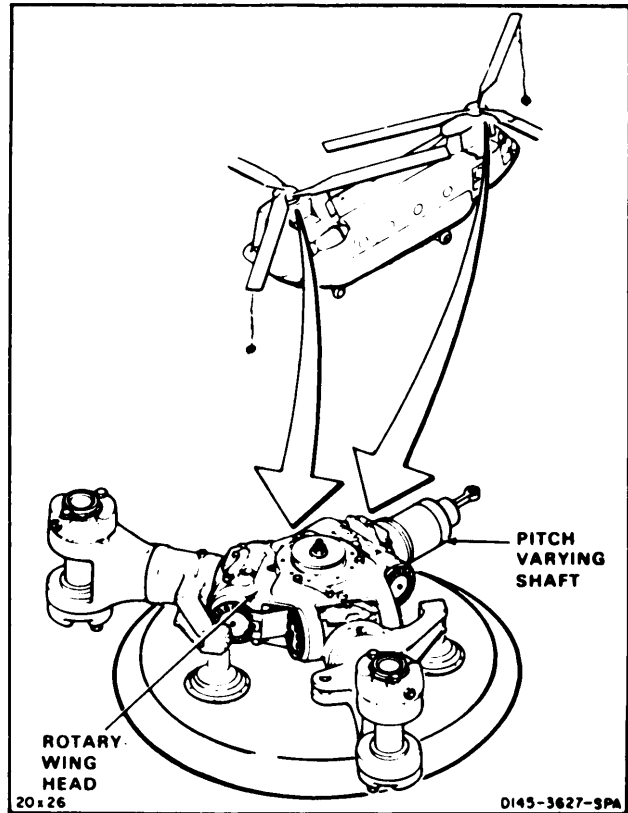

**NOTE**

Procedure is same to remove wear sleeve from any housing of forward or aft head. Forward head is shown here.

1. Remove wear sleeve (1) from pitch shaft (2).
2. Use phenolic drift.

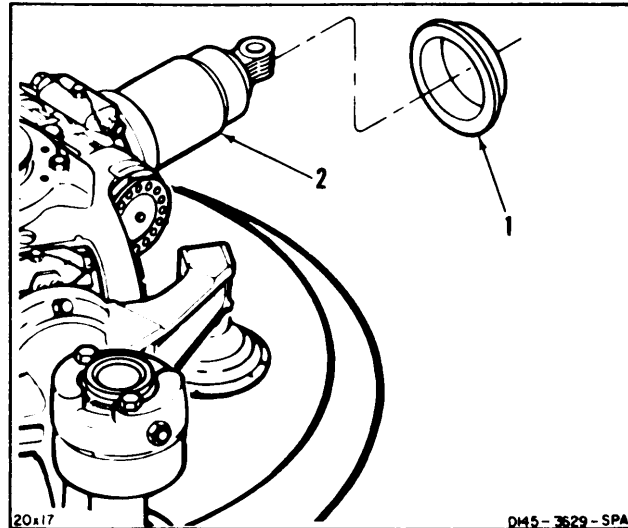

FOLLOW-ON MAINTENANCE:

None

**END OF TASK**

**5-27 INSTALL WEAR SLEEVE****5-27****INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Electric Heater, Gun Type  
Pyrometer  
Kevlar Gloves  
Goggles  
Rawhide Mallet

**Materials:**

Methyl-Ethyl-Ketone (E244)  
Sealant (E336)  
Cloths (E120)  
Dry Cleaning Solvent (E162)  
Gloves (E186)

**Personnel Required:**

Aircraft Powertrain Repairer (2)  
Inspector

**References:**


TM 55-1520-240-23P

**General Safety Instructions:****WARNING**

Dry cleaning solvent (E162) and methyl-ethyl-ketone (E244) are flammable and toxic. They can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**


Sealant (E336) can irritate skin and cause burns. Avoid contact with skin, eyes, and clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

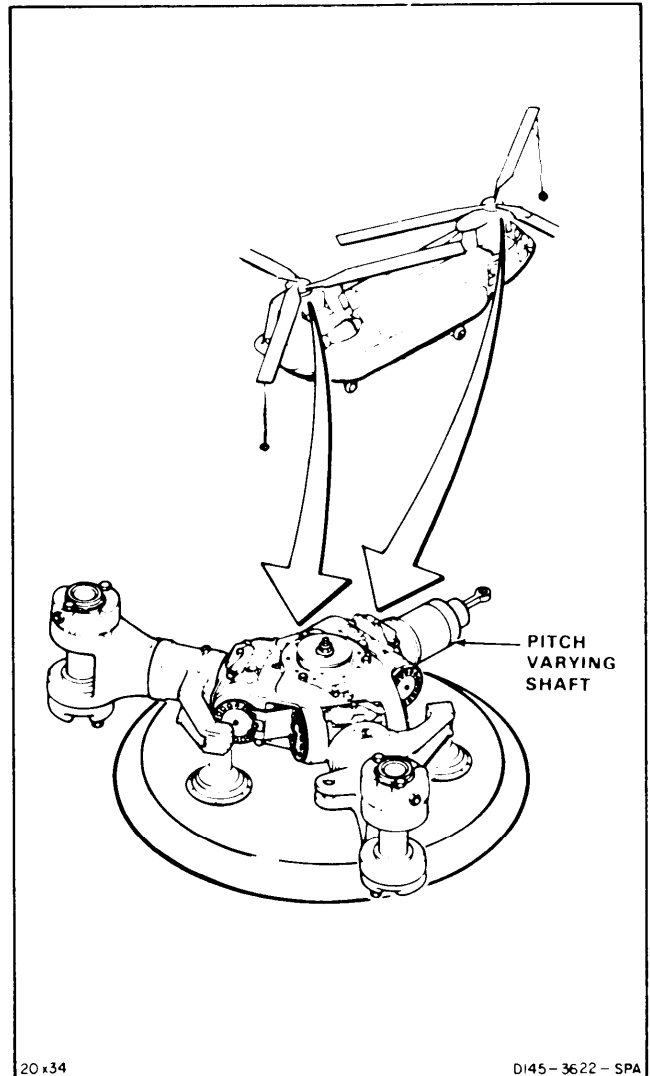**GO TO NEXT PAGE**

**NOTE**


Procedure is same to install wear sleeve on any housing on forward or aft head. Forward head is shown here.

1. Remove old sealant from pitch shaft (1). Use methyl-ethyl-ketone (E244). Wear gloves (E186).
2. **Check shaft (1) for scores, nicks, or gouges.** Damage shall not exceed 0.005 inch in depth by 2.5 inches in length.

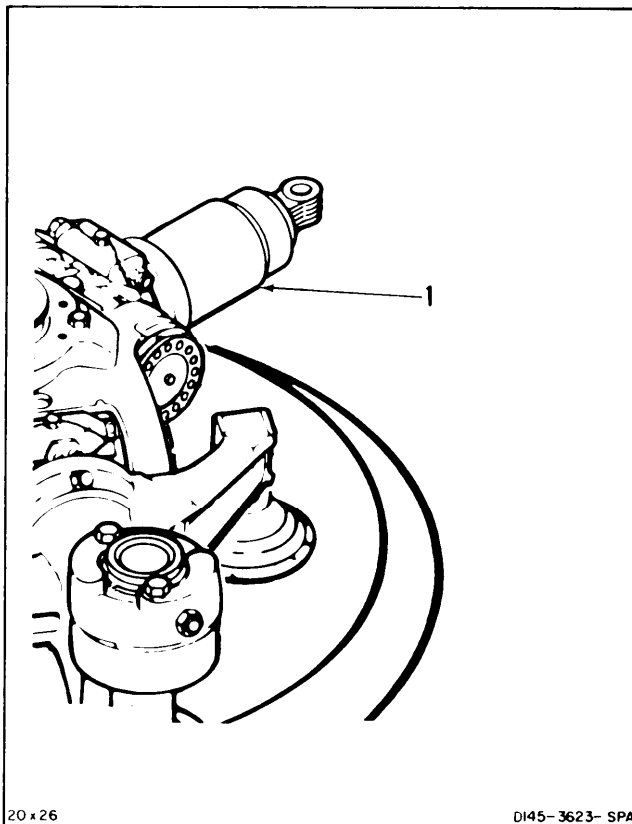**CAUTION**

Do not block oil hole in pitch shaft. Sealant in oil hole will restrict oil flow to pitch housing.

3. Apply sealant (E336) around pitch shaft shoulder (2). Check oil hole (3). Oil hole shall not be blocked by sealant. Wear gloves (E186).

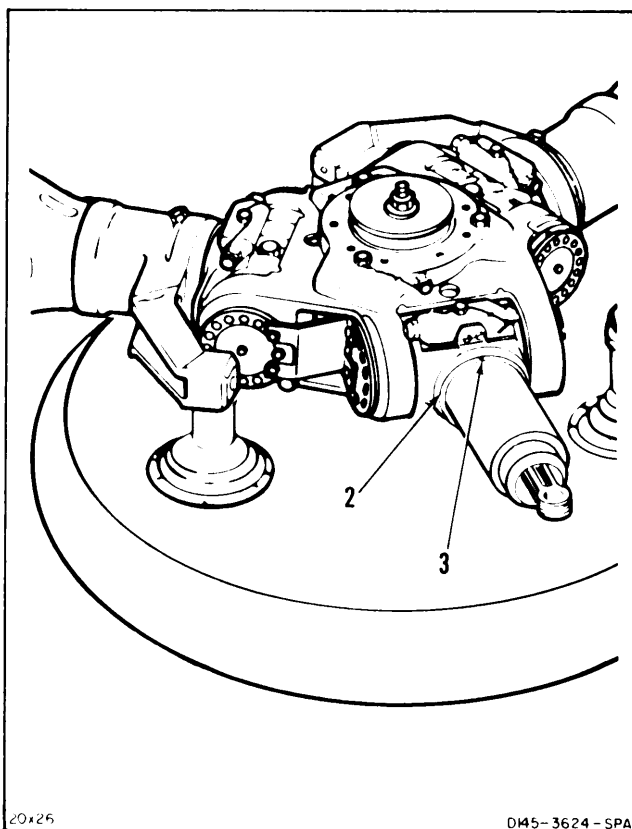

**GO TO NEXT PAGE**


**5-27 INSTALL WEAR SLEEVE (Continued)**

4. Remove protective coating from wear sleeve (4). Use cloth (E120) damp with dry cleaning solvent (E162). Use goggles for eyes. Wear gloves (E186).

**WARNING**

Wear Kevlar gloves when handling heated parts.


5. Heat wear sleeve (4) to 250°F (121°C). Use heat gun and pyrometer.
6. Install sleeve (4) on shaft (1). Sleeve shall be seated all around shaft. Use rawhide mallet if needed.

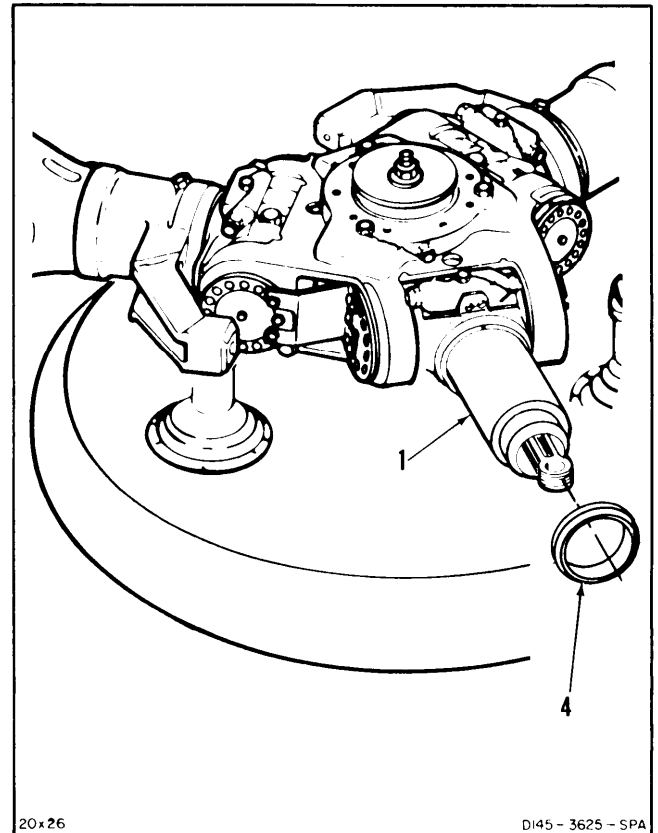

7. Wipe excess sealant from shaft (1) and sleeve (4). Use cloth (E120) damp with solvent (E162). Use goggles for eyes. Make sure oil hole (3) is clear of sealant. Wear gloves (E186).

**INSPECT****FOLLOW-ON MAINTENANCE:**

- Install pitch varying housing (Task 5-23).  
Install rotary wing blade (Task 5-84).

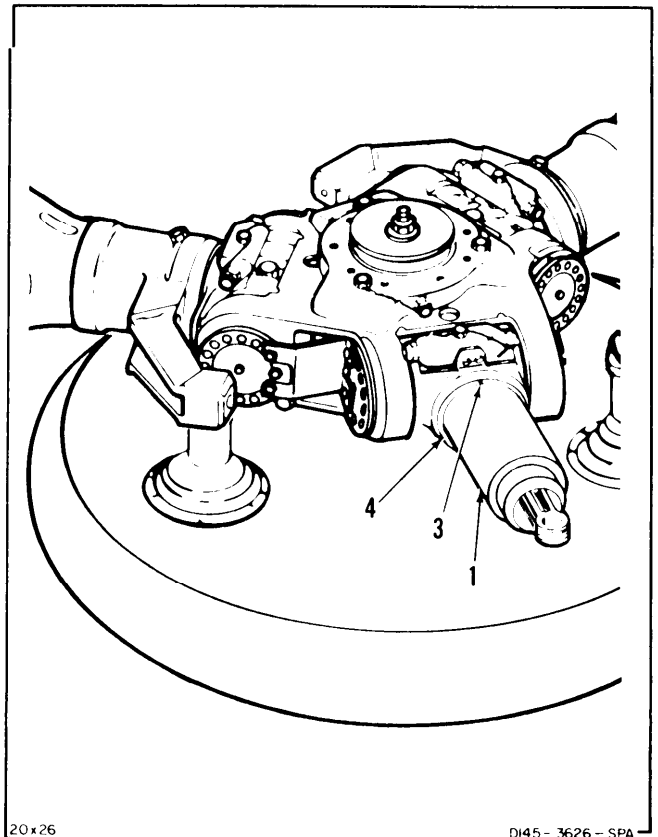

**END OF TASK**



5-28 REMOVE VERTICAL HINGE PIN OIL TANKS

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267
- Container, Two-Quart
- Wood Block, 2 x 3 x 24 Inches

**Materials:**

Cloth (E120)

**Parts:**


Packings

**Personnel Required:**

- 68D10 Aircraft Powertrain Repairer
- 68D20 Aircraft Powertrain Repairer

**Equipment Condition:**

- Battery Disconnected (Task 1-39)
- Electrical Power Off
- Hydraulic Power Off
- Forward Rotor Blade Tied-Down (Task 1-26)
- Work Platform Open (Task 2-2)
- Vertical Hinge Pin Nuts Removed (Task 5-64)

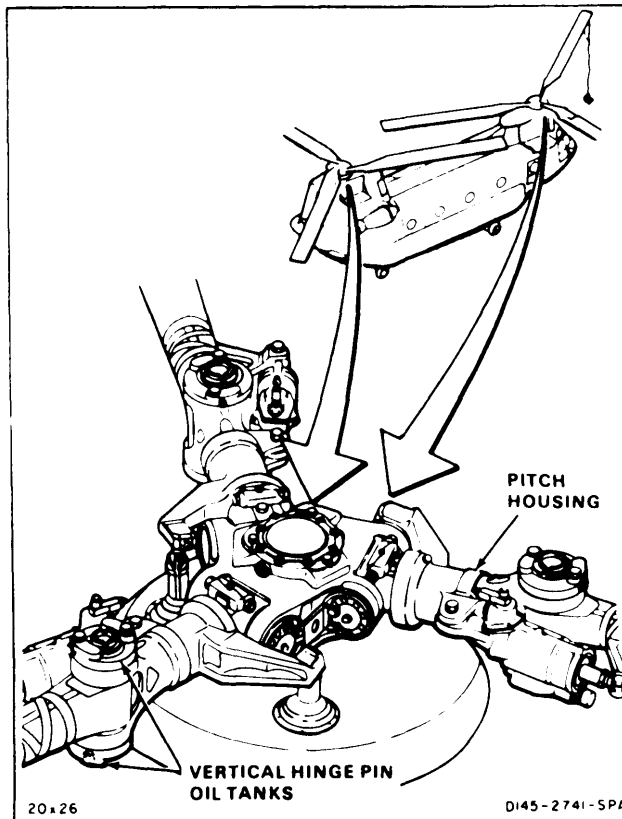

**NOTE**


There are 12 vertical hinge pin oil tanks, two on each pitch housing. Procedure is similar to remove any oil tanks. Differences are noted in text.

1. Remove lockwire from one filler/drain plug (1) on upper tank (2). **Remove plug** and packing (3).

**NOTE**

One cup of oil must be drained when removing upper tank. All oil must be drained when removing lower tank.

2. Remove lockwire from one filter/drain plug (4) on lower tank (5). Remove plug and packing (6). **Drain oil.** Use container and cloth (E120) for spilled oil.

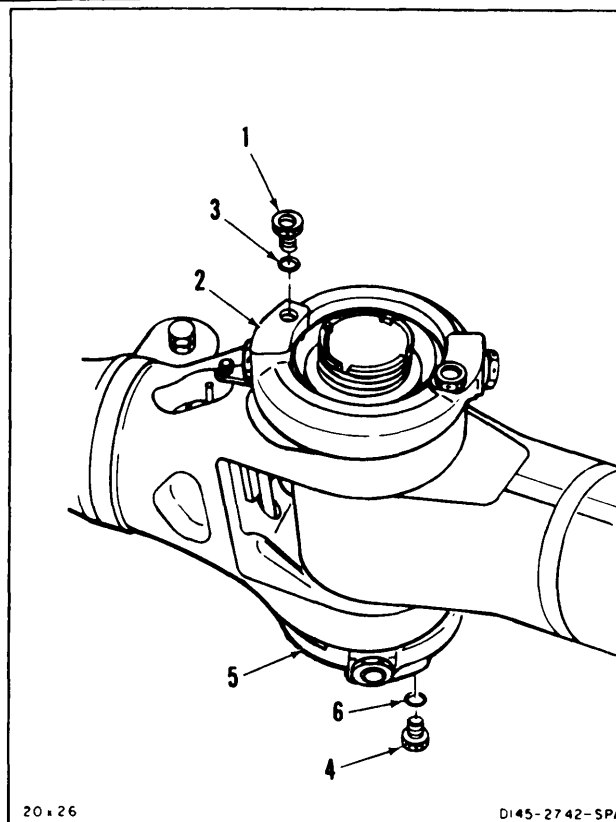

**GO TO NEXT PAGE**

**5-28 REMOVE VERTICAL HINGE PIN OIL TANKS  
(Continued)**

3. If tank (2 or 5) will be replaced, do the following:
  - a. Remove lockwire from remaining plug (1 or 4), and two sight indicators (7 or 8).
  - b. Remove remaining plug (1 or 4), and packing (3 or 6).
  - c. Remove two sight indicators (7 or 8) and two packings (9).
4. If tank will be reinstalled, install plugs (1 and 4) and two packings (3 and 6) in tank (2 or 5).
5. Remove lockwire between tank (2 or 5) and manifold tube (10).

**NOTE**



Use care when removing lower oil tank. Bearing inner race may fall from bearing. Support race during tank removal.

6. Turn tank (2 or 5) counterclockwise. Use wood block as lever between filler lugs of tank. **Remove tank** and packing (11).

**FOLLOW-ON MAINTENANCE:**

None

**END OF TASK**

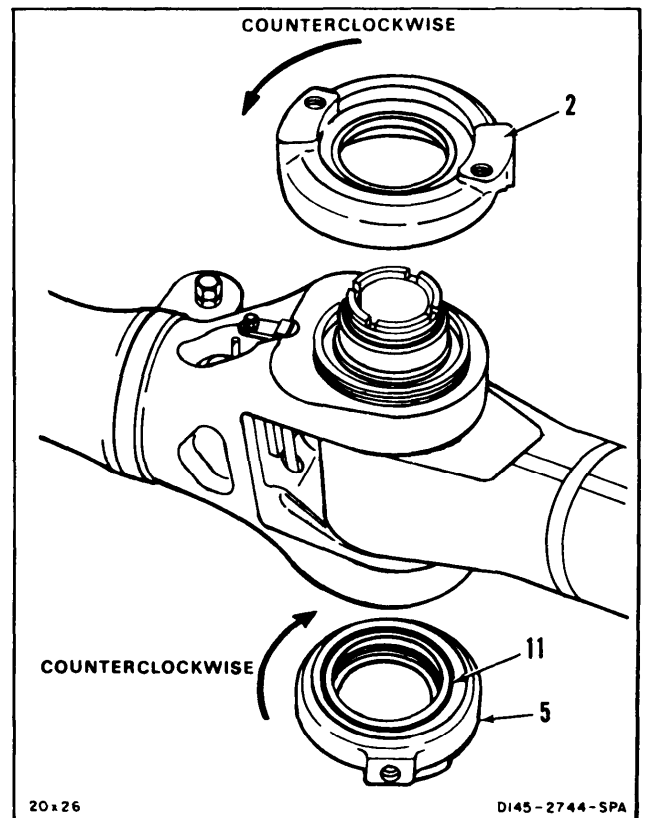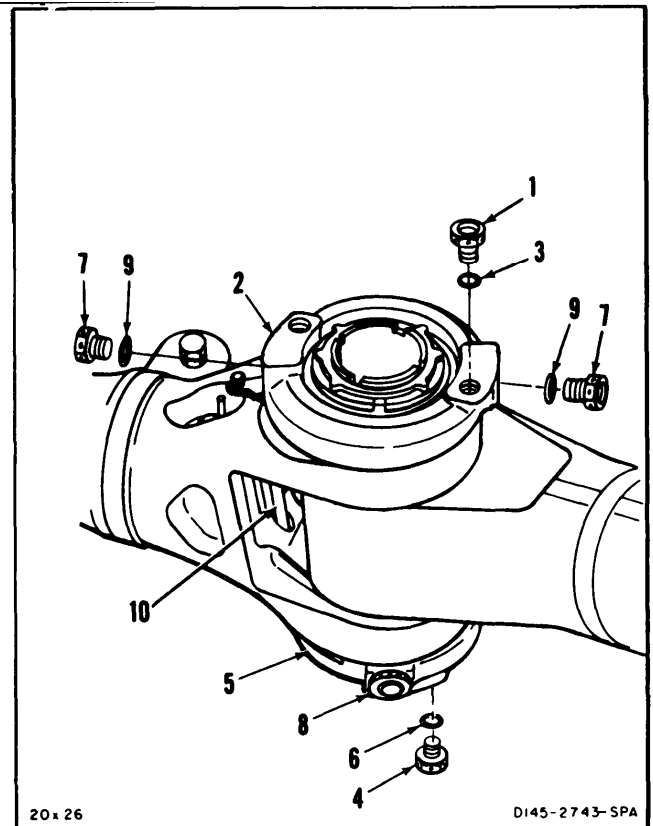

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

- Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267
- Guide (T33)
- Torque Wrench, 30 to 150 Inch-Pounds

**Materials:**

- Lockwire (E231)
- Dry Cleaning Solvent (E162)
- Emery Cloth (E123)
- Grease (E190)
- Cloth (E120)
- Gloves (E186)

**Parts:**


Packings

**Personnel Required:**

- Aircraft Powertrain Repairer (2)
- Inspector

**References:**

- TM 55-1520-240-23P
- Task 1-58

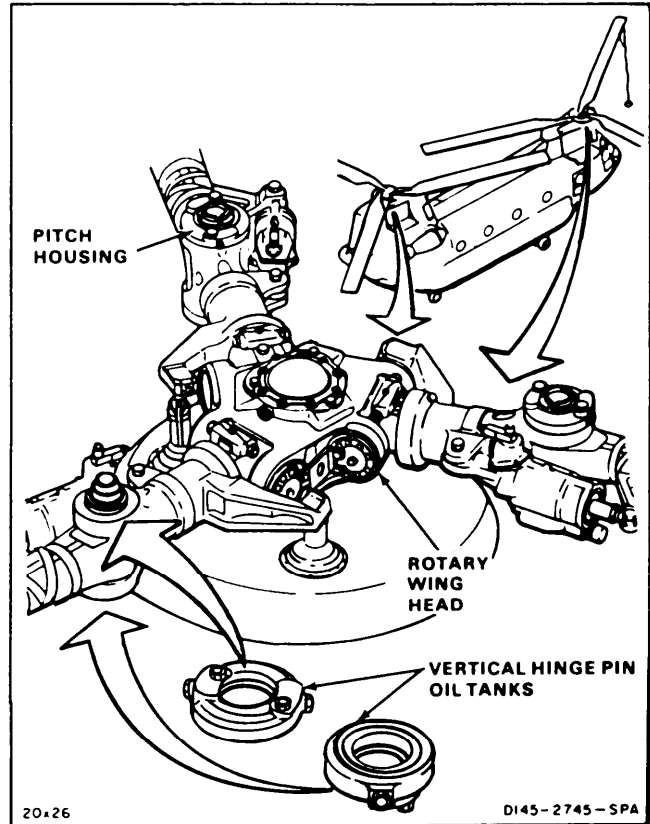


**NOTE**

There are 12 vertical hinge pin oil tanks, two on each pitch housing. Procedure is similar to install any oil tank. Differences are noted in text.

1. Remove any burrs or sharp edges from guide (T33) (1). Use emery cloth (E123).

**GO TO NEXT PAGE**

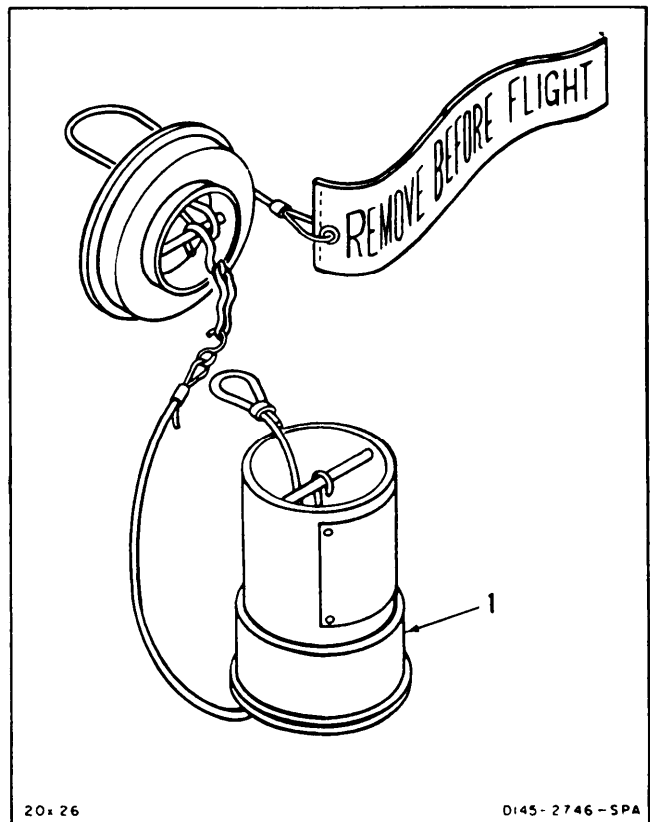


## 5-29 INSTALL VERTICAL HINGE PIN OIL TANK (Continued)

5-29


### NOTE

Do not apply grease to vertical pin thread.

2. Apply grease (E190) to lips of seal (2), and to surfaces of inner bearing race (3) and guide (T33) (1) that will contact seal. Wear gloves (E186).

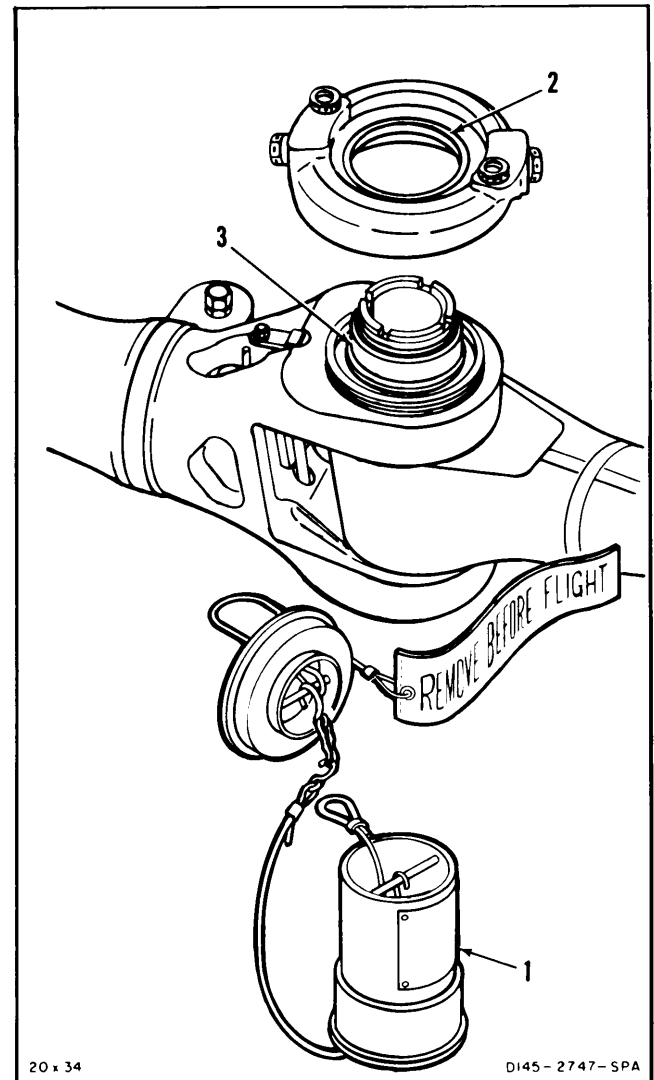

3. Apply grease (E190) to packing groove (4) on joint surface of tank (5). Use just enough grease to hold packing groove. Wear gloves (E186).
4. Install packing (6) in groove (4).

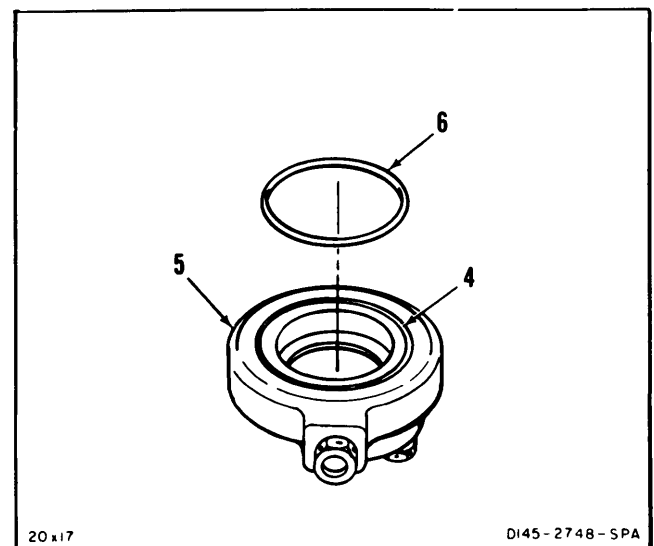


**GO TO NEXT PAGE**


**5-29 INSTALL VERTICAL HINGE PIN OIL TANK  
(Continued)**

**TO INSTALL UPPER TANK**

5. Remove cable (2) and cap (3) from guide (1).

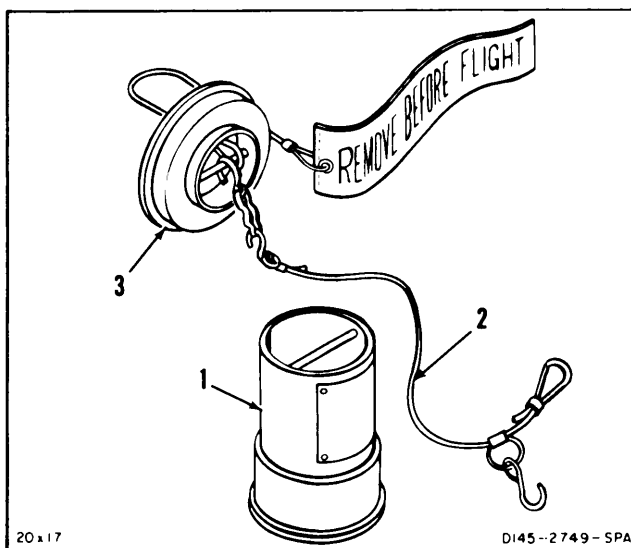

6. Position guide (T33) (1) over vertical pin (7).

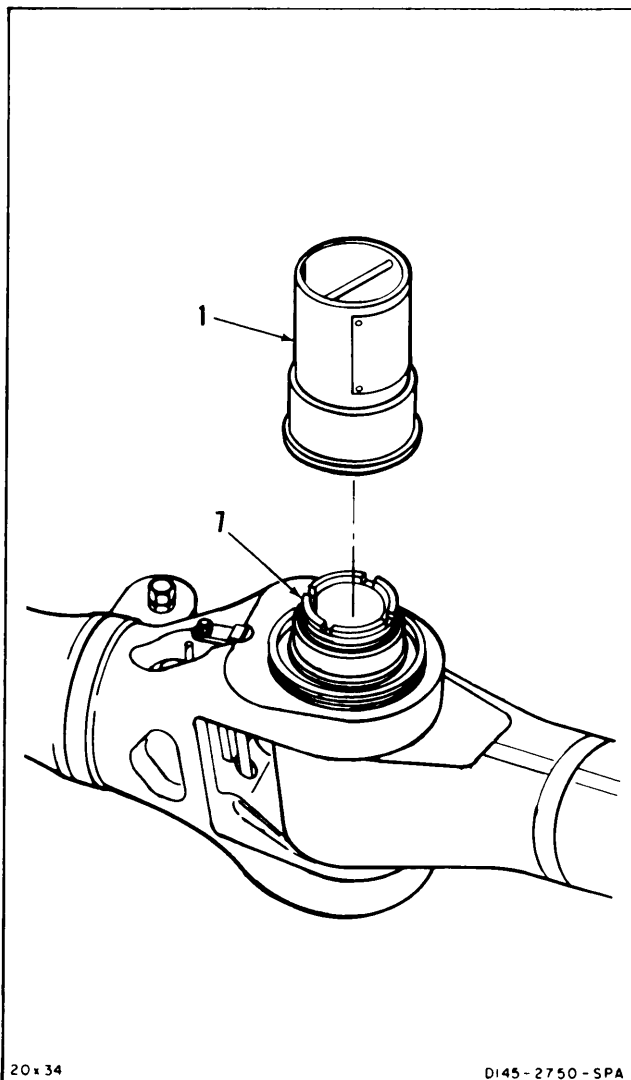


**GO TO NEXT PAGE**


## 5-29 INSTALL VERTICAL HINGE PIN OIL TANK (Continued)

5-29

7. Install tank (5) over guide (T33) (1) and engage thread of tank with thread of liner (8).

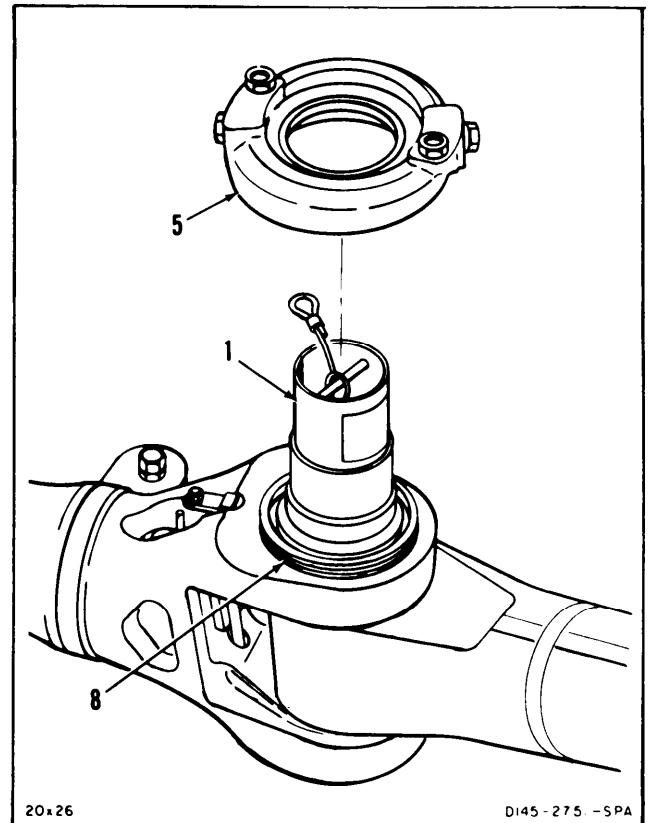

8. Turn tank (5) clockwise by hand until tank contacts lug (9).
9. Remove guide (T33) (1).

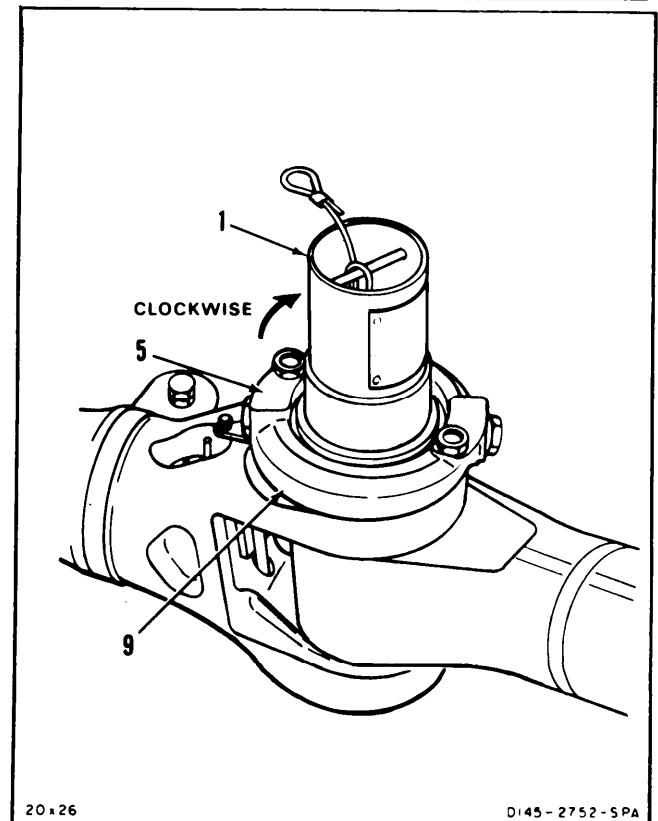

**GO TO NEXT PAGE**

**5-29 INSTALL VERTICAL HINGE PIN OIL TANK  
(Continued)**



**TO INSTALL LOWER TANK**

10. Remove cable (2) and cap (3) from guide (1).

**NOTE**

Insure inner bearing is in place prior to oil tank installation.

11. **Position cap (3) over vertical pin (7).** Pass cable (2) through pin.
12. Hold guide (T33) (1) in place under lower lug (9). Grasp loop of cable (2) and pull. **Hook cable on guide.**
13. **Install tank (5) over guide (T33) (1) and mate thread of tank with thread of liner (8).**

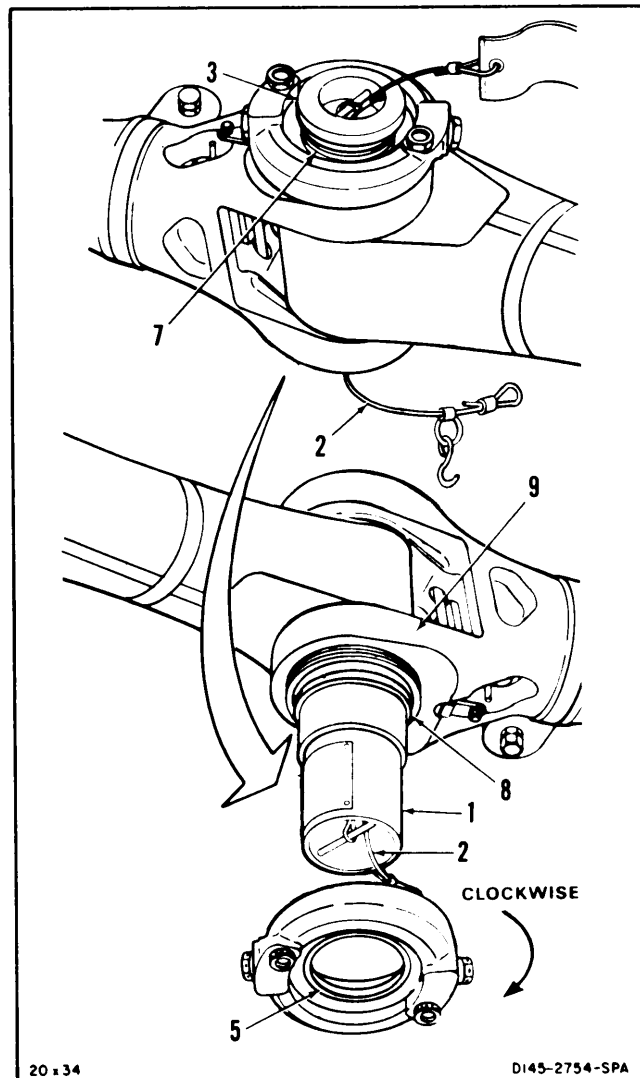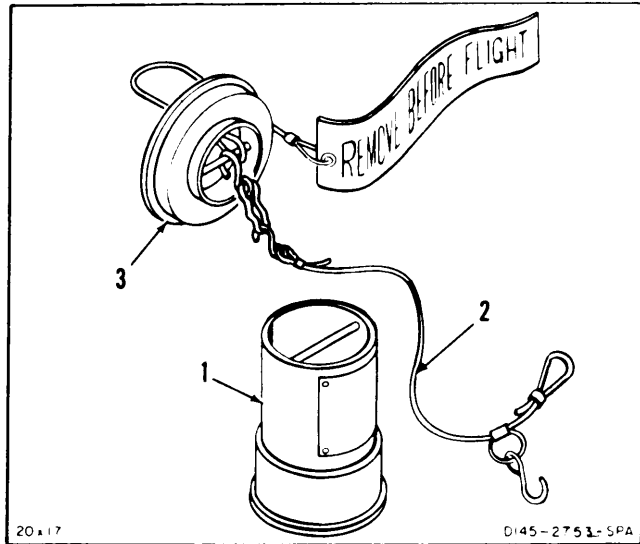


**GO TO NEXT PAGE**


## 5-29 INSTALL VERTICAL HINGE PIN OIL TANK (Continued)

5-29

14. Turn tank (5) clockwise by hand until tank contacts lug (9). Tighten tank handtight.
15. Remove guide (T33) (1).

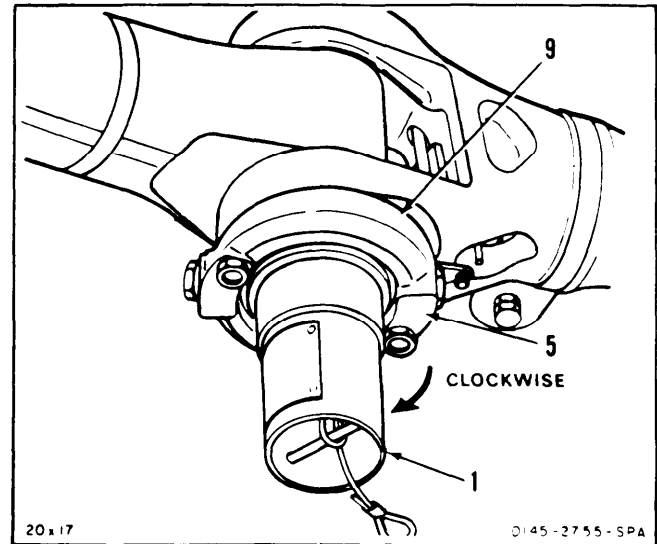

16. If tank (5) is a replacement, install two sight indicators (10) and packings (11). Torque sight indicators to 125 inch-pounds.
17. Service oil tank (5) (Task 1-57).
18. Install filler/drain plugs (12) and packings (13). Torque plugs to 85 inch-pounds.
19. Lockwire plugs (12) to sight indicators (10). Lockwire tank (5) to manifold (14). Use lockwire (E231).

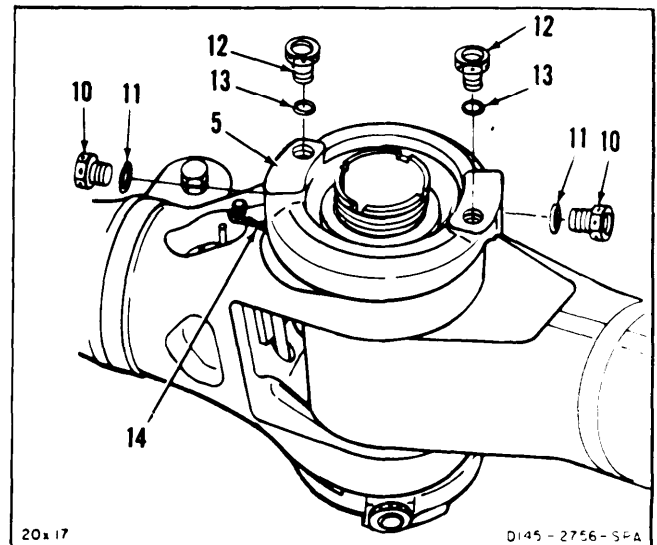


### WARNING

Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

20. Wipe excess grease from tank (5), seal (2), and thread (15). Use cloth (E120) damp with solvent (E162). Wear gloves (E186).

**INSPECT**  
**GO TO NEXT PAGE**

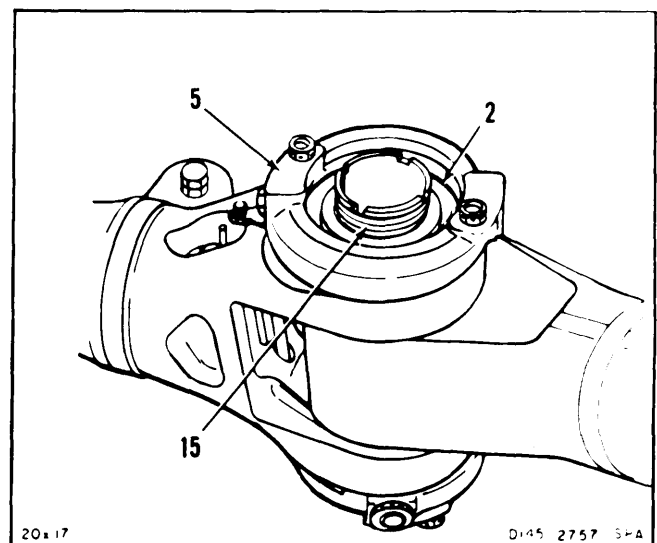

Change 23

5-111



## 5-29 INSTALL VERTICAL HINGE PIN OIL TANK (Continued)

---


5-29

### FOLLOW-ON MAINTENANCE:

Install vertical hinge pin nuts (Task 5-84).

Close work platform (Task 2-2).

Pressure test (Task 5-5).

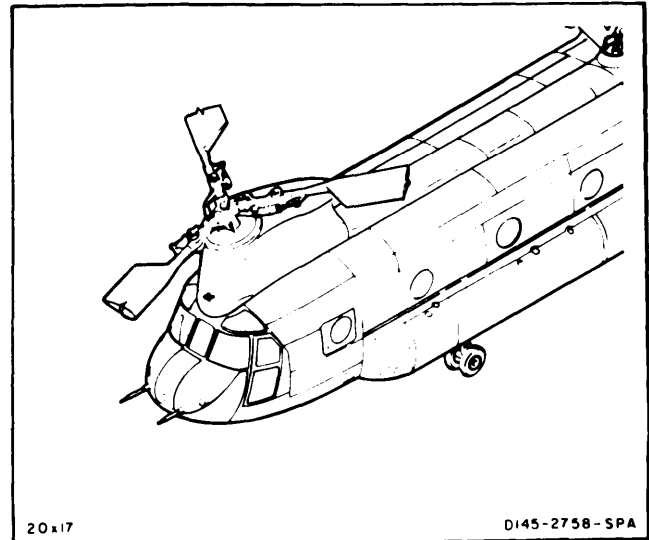

**END OF TASK**

5-112

**5-30 REMOVE VERTICAL HINGE PIN OIL MANIFOLD TUBE****5-30****INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Rawhide Mallet

**Materials:**


None

**Personnel Required:**

■ Aircraft Powertrain Repairer (2)

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
One Forward and One Aft Rotary-Wing Blade  
Tied Down (Task 1-26)  
Work Platform Open (Task 2-2)  
Upper Vertical Hinge Pin Oil Tank Removed  
(Task 5-28)

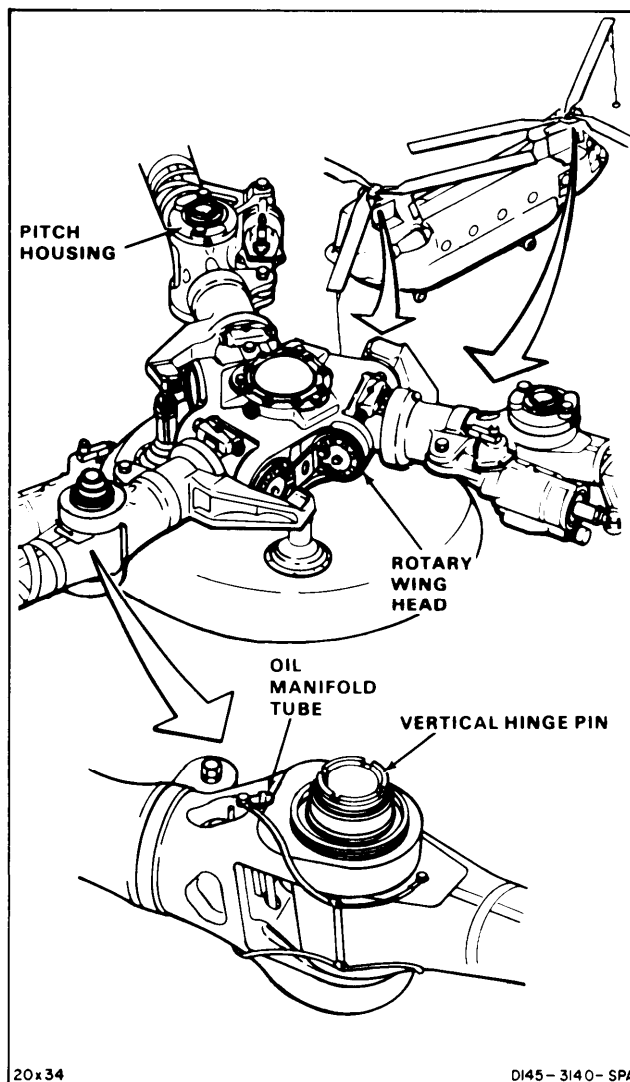
**GO TO NEXT PAGE**

**5-30 REMOVE VERTICAL HINGE PIN OIL MANIFOLD TUBE (Continued) 5-30**

**NOTE**

Procedure is same to remove any vertical hinge pin oil manifold tube.

1. **Remove two bolts (1), washers (2), and lightning protection cables (3) from oil manifold tube (4).**

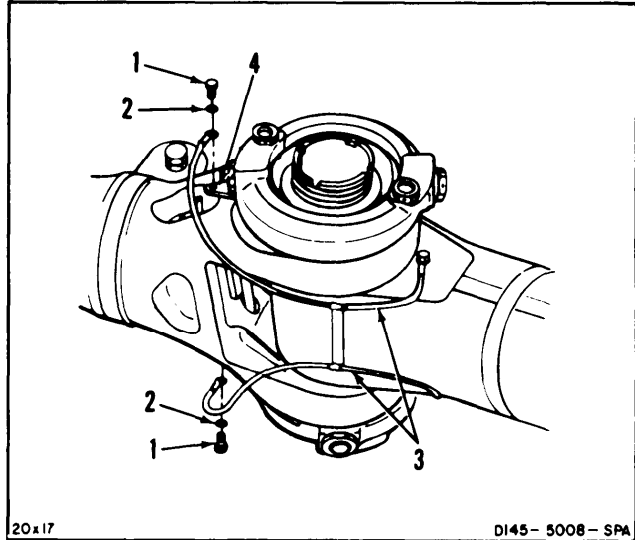

2. Remove lockwire from lower end of oil manifold tube (4). **Remove nut (5) and bracket (6).**

**CAUTION**


Do not damage bore of pitch housing when removing oil manifold tube. This can cause damage to packings during tube installation.

3. **Remove tube (4) and four packings (7) as follows:**

- a. Push tube (4) straight up until bracket (8) is clear of housing (9). Use rawhide mallet if needed.
- b. Pull bracket (8) and tube (4) straight up out of housing (9).

**FOLLOW-ON MAINTENANCE:**

None

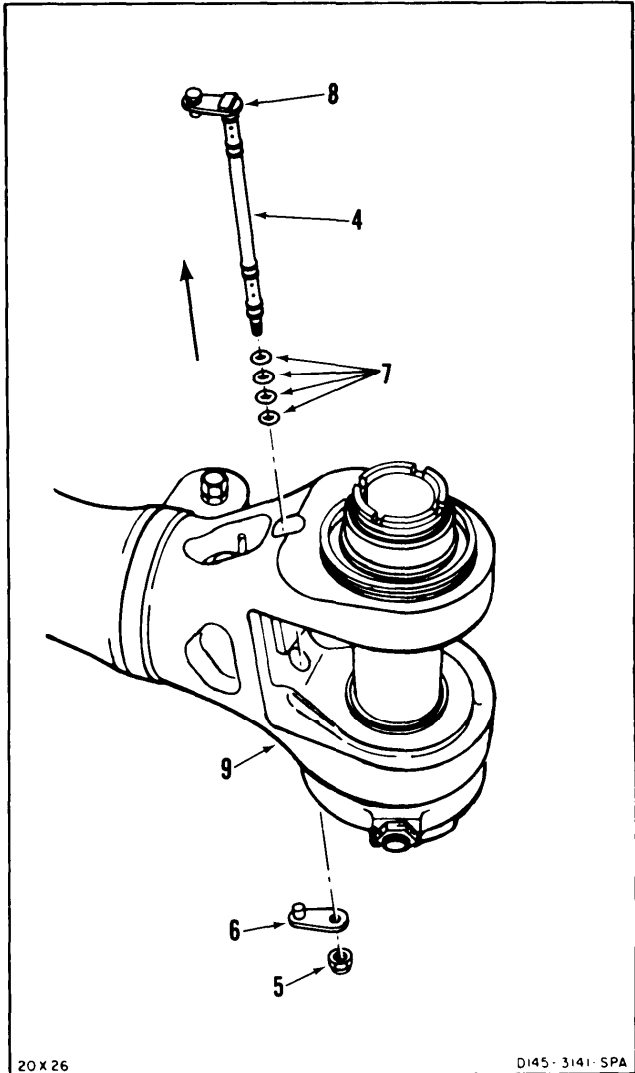

**END OF TASK**

**5-31 INSTALL VERTICAL HINGE PIN OIL MANIFOLD TUBE**

5-31

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,

NSN 5180-00-003-5267

■ Torque Wrench, 0 to 150 Inch-Pounds

Rawhide Mallet

**Materials:**

Lockwire (E231)

Oil (E254)

**Parts:**

Packings

**Personnel Required:**

■ Aircraft Powertrain Repairer (2)


Inspector

**References:**

TM 55-1520-240-23P

Task 5-29


Task 1-58

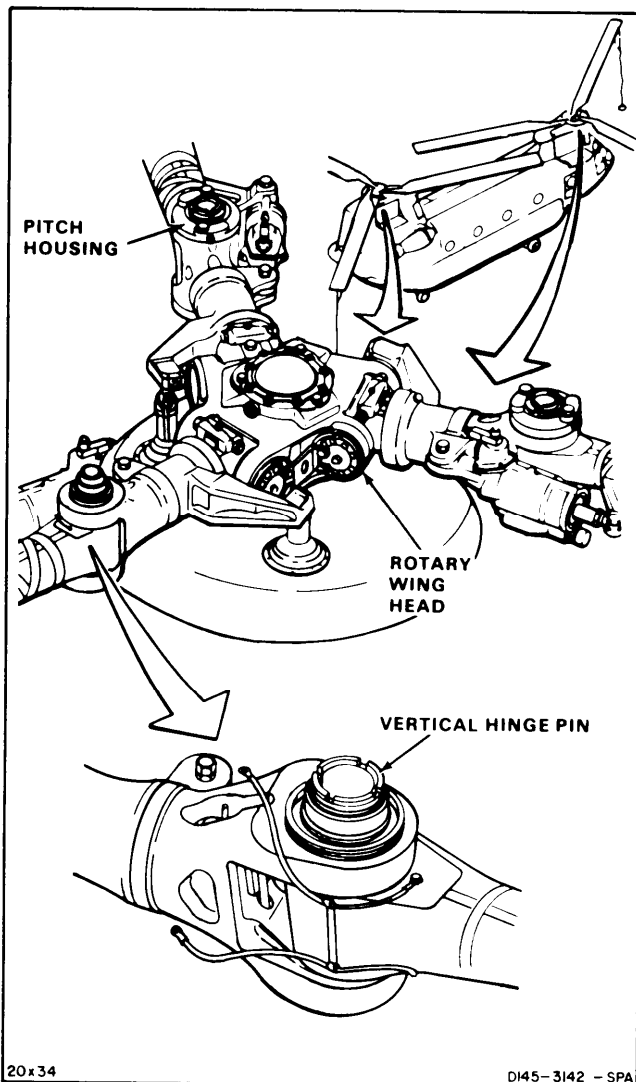

**NOTE**

Procedure is same to install any vertical hinge pin oil manifold tube.

1. Lubricate oil manifold tube (1) and four packings (2). Use oil (E254). Position packings in grooves (3) on tube.

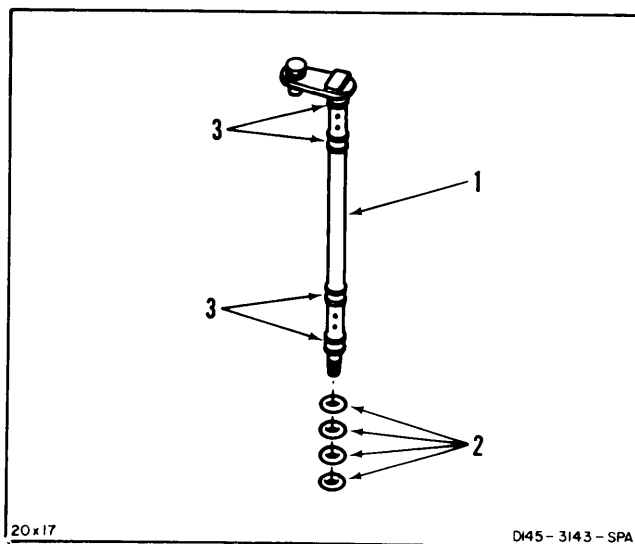

**GO TO NEXT PAGE**

**5-31 INSTALL VERTICAL HINGE PIN OIL MANIFOLD TUBE (Continued) 5-31**

**CAUTION**


Do not install tube in tube bore if bore is burred or dry. Damage to packings can occur.

2. Check that tube bore (4) in pitch varying housing (5) is clean and free of any burrs.
3. Lubricate bore (4). Use oil (E254).
4. **Install tube (1)** through bore (4). Be careful not to pinch or cut packings (3). Tap lightly with rawhide mallet if needed.


**CAUTION**

Do not overtorque retaining nut. Overtorque of nut will damage tube.

5. **Install bracket (6)** and nut (7) on tube (1). Torque nut to 15 inch-pounds.

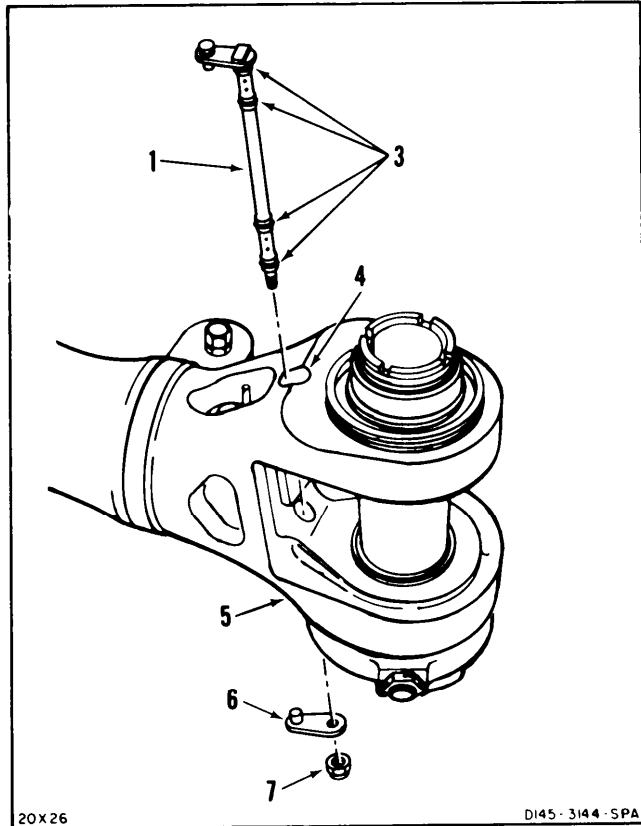


6. **Install upper vertical hinge pin oil tank (8)** (Task 5-29).

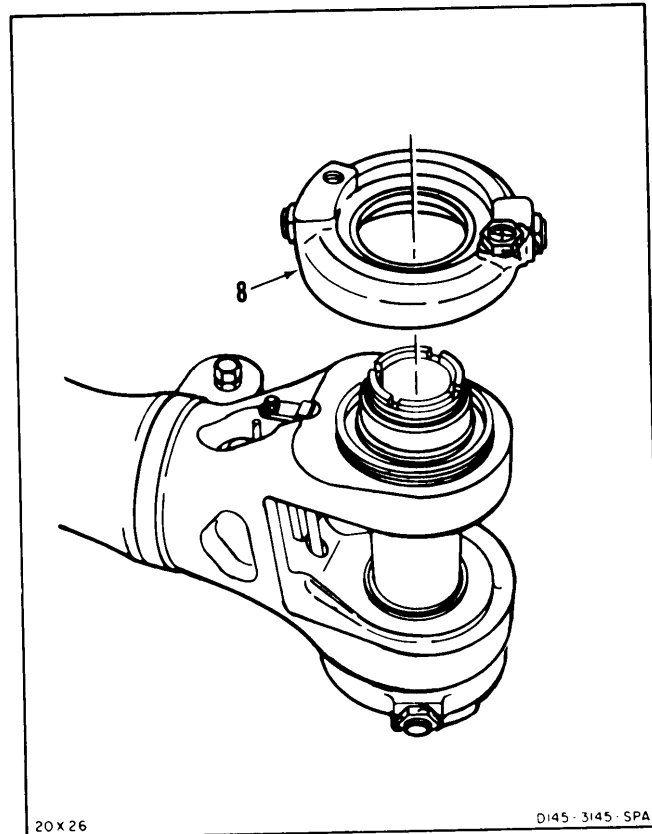


**5-31 INSTALL VERTICAL HINGE PIN OIL MANIFOLD TUBE (Continued) 5-31**

7. **Install drain plug (9) and packing (10) in lower oil tank (11). Torque plug to 85 inch-pounds.**
8. Lockwire oil manifold tube (1) to upper and lower oil tanks (8 and 11). Use lockwire (E231).
9. **Service vertical hinge pin oil tanks (8 and 11) (Task 1-58). Use oil (E254).**

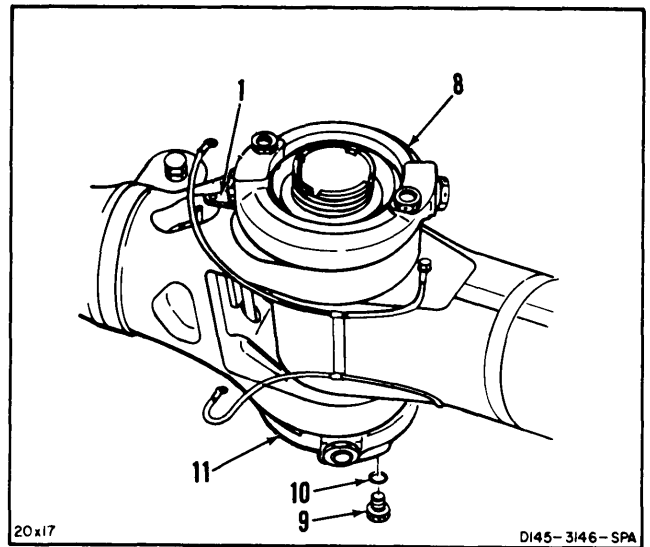

10. **Install two lightning protection cables (12), washers (13), and bolts (14) on manifold tubes (1). Torque bolts to 35 inch-pounds.**

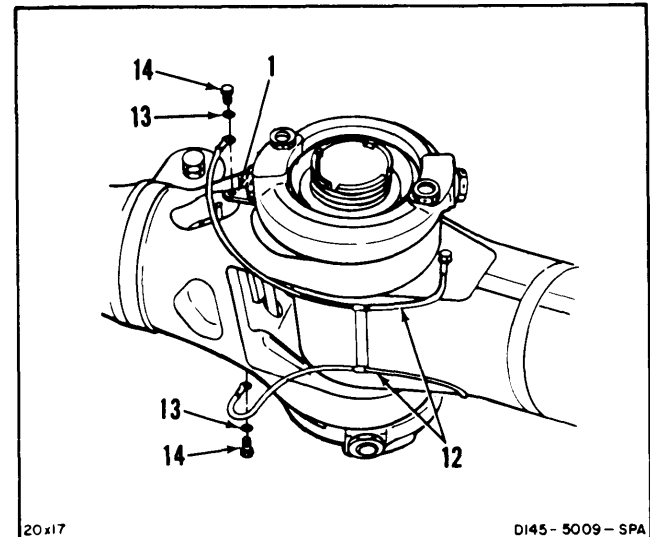


**GO TO NEXT PAGE**

**5-31 INSTALL VERTICAL HINGE PIN OIL MANIFOLD TUBE (Continued) 5-31**

FOLLOW-ON MAINTENANCE:

Pressure test vertical hinge pin oil tanks  
(Task 5-5).

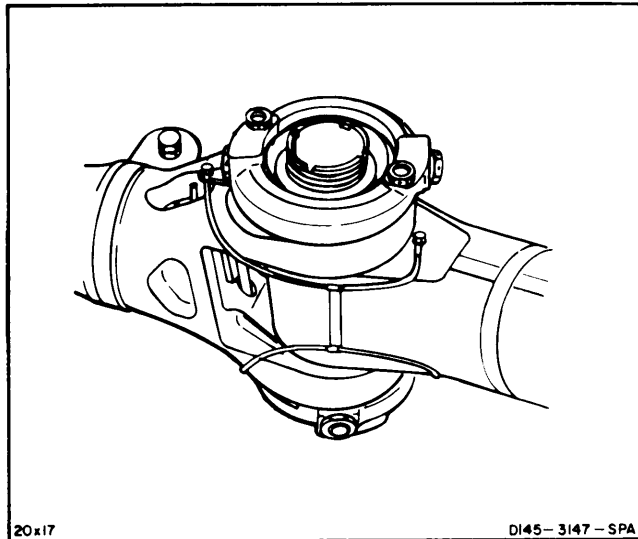

**END OF TASK**

5-118

Change 18

## 5-32 REMOVE VERTICAL HINGE PIN OUTER SEAL

5-32

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Drift, Soft Aluminum, 1/2-Inch Diameter

**Materials:**


None

**Personnel Required:**

■ Aircraft Powertrain Repairer (2)


**Equipment Condition:**

Off Helicopter Task  
Vertical Hinge Pin Oil Tank Removed (Task 5-28)

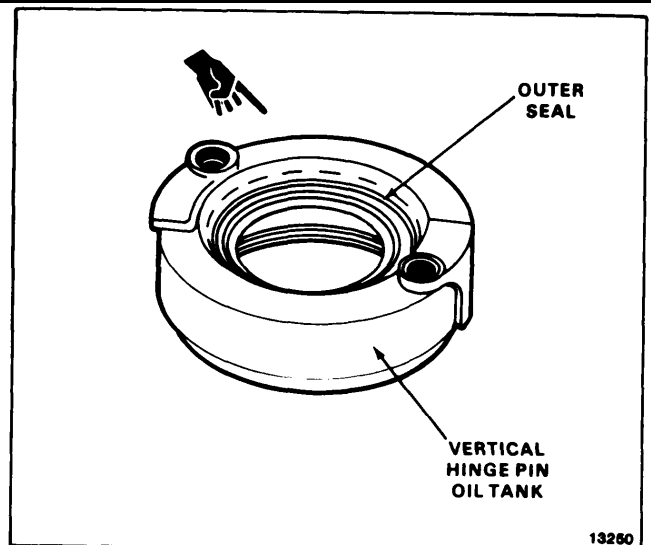**NOTE**

Procedure is same to remove outer seal from all 12 vertical hinge pin oil tanks.


1. Position tank (1), packing groove (2) up, on flat work surface.
2. **Remove retaining ring (3)** from seal (4). Use small screwdriver.

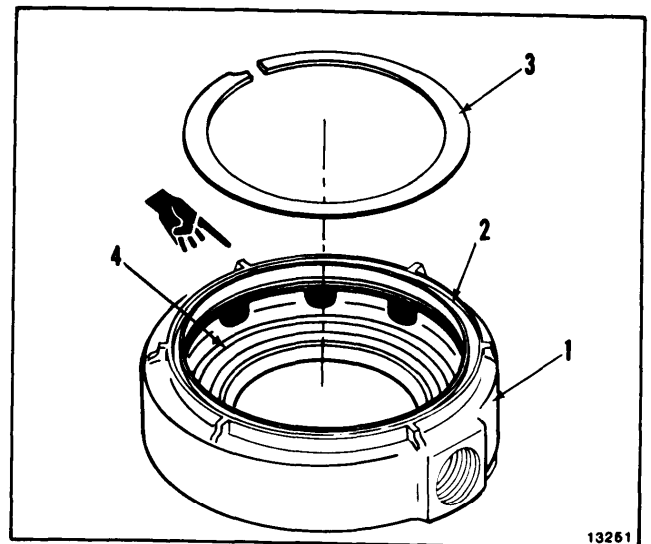

3. Position tank (1) with filler ports (5) up.
4. **Tap seal (4) out of tank (1)**. Use hammer and soft aluminum drift.

**FOLLOW-ON MAINTENANCE:**

None

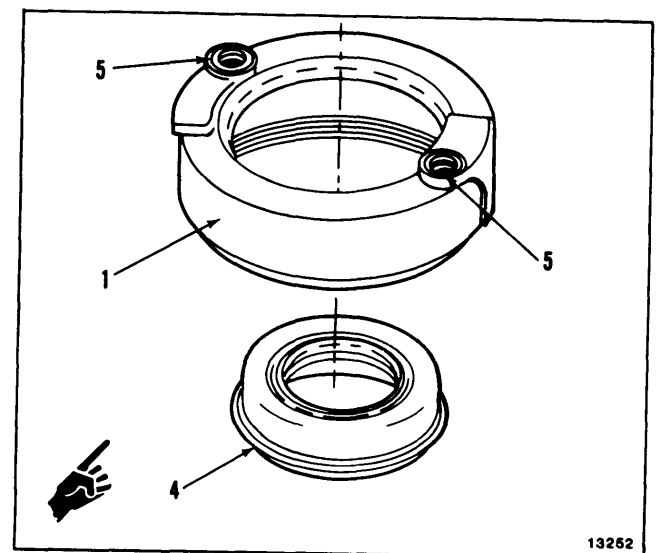**END OF TASK**



**5-33 REMOVE VERTICAL HINGE PIN INNER SEAL**

INITIAL SETUP


**Applicable Configurations:**  
All

**Tools:**  
Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Drift, Soft Aluminum, 1/2-inch X 12 Inches

**Materials:**  
Gloves (E186)

**Personnel Required:**  
68D10 Aircraft Powertrain Repairer  
68D20 Aircraft Powertrain Repairer


**Equipment Condition:**  
Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
One Forward and One Aft Rotary-Wing Blade  
Tied-Down (Task 1-26)  
Vertical Hinge Pin and Rotary-Wing Blade Re-  
moval as required (Task 5-64)  
Vertical Hinge Pin Oil Tank Removed (Task 5-  
28)  
Pylon Work Platform Open (Task 2-2)

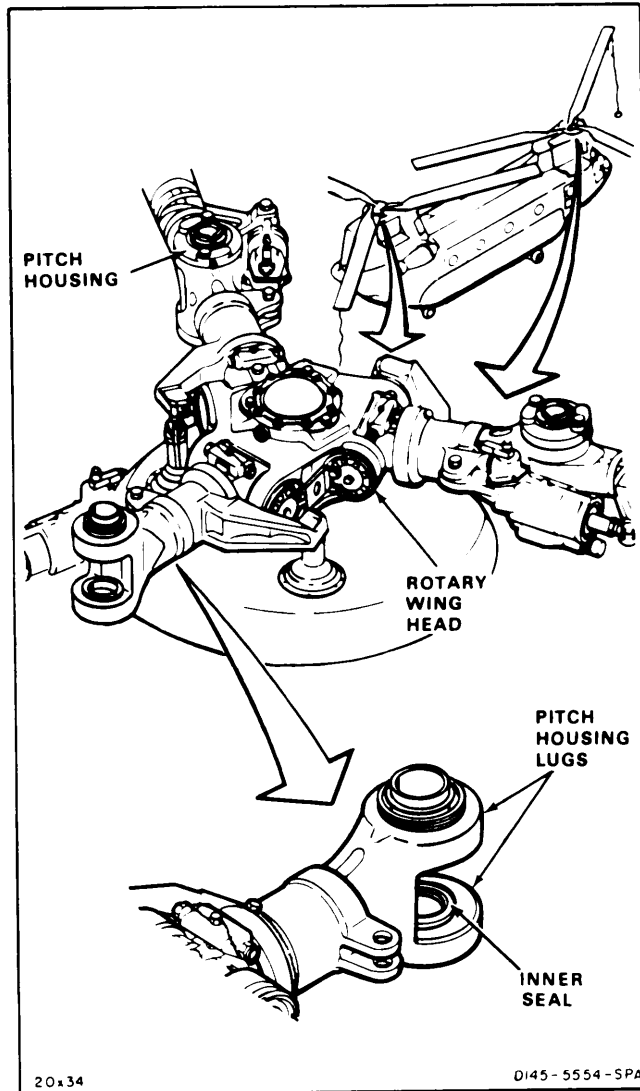

**NOTE**

Procedure is same to remove vertical hinge pin inner seal from any pitch housing lug.

1. Push inner bearing race (1 or 2) out of lug (3 or 4). Use gloves (EI 86). Remove thrust washer (5 or 6).

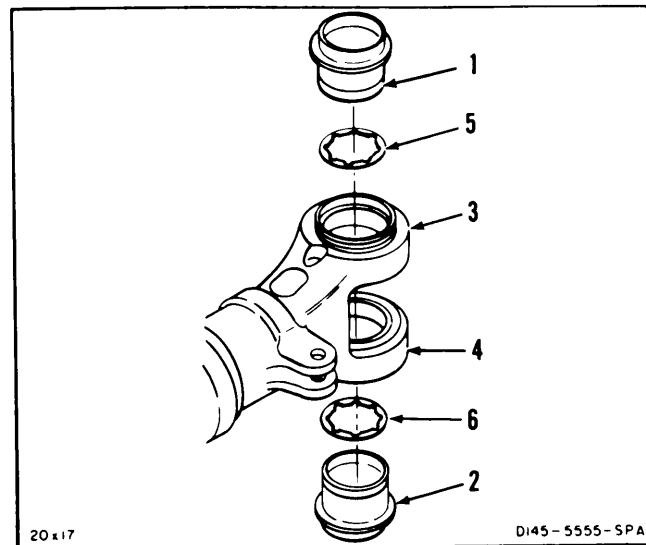

**GO TO NEXT PAGE**

## 5-33 REMOVE VERTICAL HINGE PIN INNER SEAL (Continued)

5-33


**CAUTION**

Do not use screwdriver or other sharp tool to remove seal. Sharp tools can scratch lugs and cause lug failure. Seal seating surfaces and bearings can also be damaged.

2. Tap inner seal (7 or 8) from lug (3 or 4).  
Use soft aluminum drift.

**FOLLOW-ON MAINTENANCE:**

None

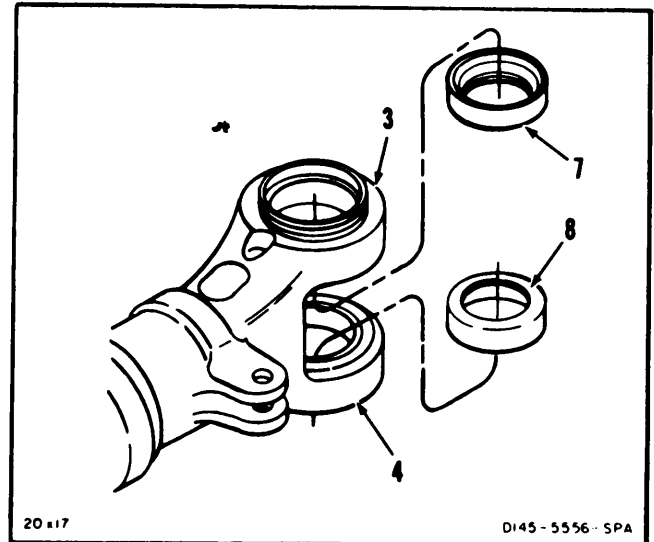**END OF TASK**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Aircraft Inspector's Tool Kit,  
NSN 5180-00-323-5114  
Wood Block, 5-Inch Diameter x 4 Inches

**Materials:**

Cloths (E120)  
Dry Cleaning Solvent (E162)  
Gloves (E186)  
Adhesive (E63.1) or Sealant (E340.3)  
Methyl-Ethyl-Ketone (E244)

**Personnel Required:**

Aircraft Powertrain Repairer (2)  
Inspector

**References:**


TM 55-1520-240-23P

**General Safety Instructions:****WARNING**

Methyl-ethyl-ketone (E244) and dry cleaning solvent (E162) are flammable and toxic. They can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes. Use gloves (E186).

**WARNING**

Adhesive (E63.1) and sealant (E340.3) can irritate skin and cause burns. Avoid contact with skin, eyes and clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

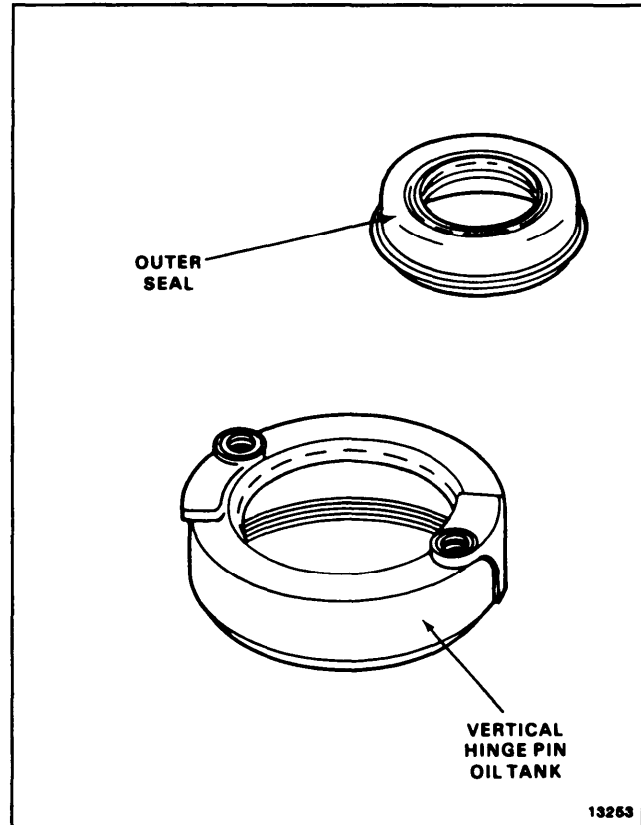
**GO TO NEXT PAGE**

5-122 Change 25


**NOTE**

Procedure is same to install outer seal in all 12 vertical hinge pin oil tanks.

1. Clean tank (1). Use cloth (E120) damp with dry cleaning solvent (E162). Wear gloves (E186).
2. Clean sealant from seal recess (2) in tank (1). Use methyl-ethyl-ketone (E244). Wear gloves (E186).
3. **Check tank (1) for cracks.** There shall be no cracks.

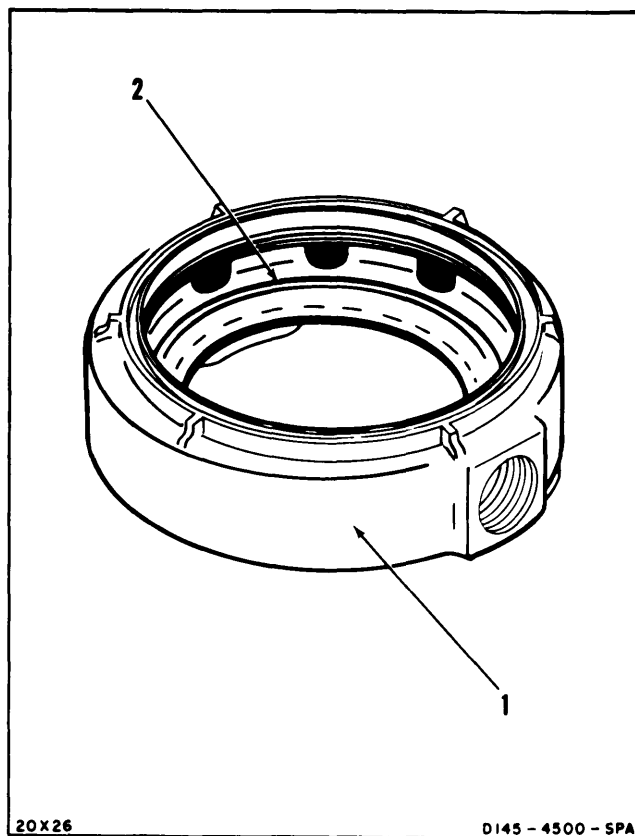

4. Remove protective coating from seal (3). Use cloth (E120) damp with dry cleaning solvent (E162). Wear gloves (E186).
5. **Check seal lips (4) for nicks or scratches.** Use magnifier. There shall be no nicks or scratches.

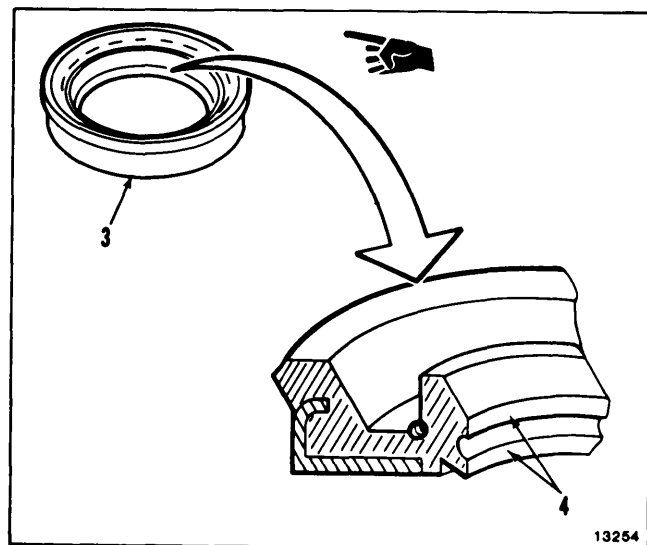


**GO TO NEXT PAGE**


**NOTE**

Adhesive (E63.1) or sealant (E340.3) is authorized specifically for the installation of vertical hinge pin seals.

- 6. Apply light bead of adhesive (E63.1) or sealant (E340.3) to wall of seal recess (2) and outside wall of seal (3). Wear gloves (E186).

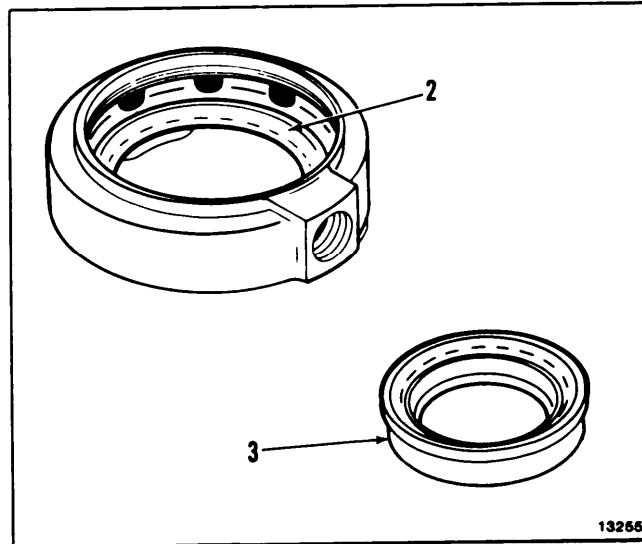


- 7. Position tank (1) with packing groove (5) up.
- 8. Position seal (3) open side up, over recess (2) in tank (1).
- 9. **Tap seal (3) into recess (2).** Use hammer and wood block.

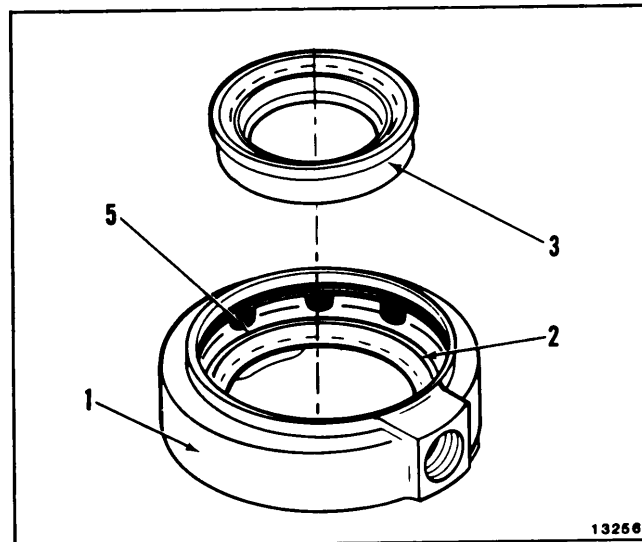

- 10. **Wipe adhesive squeezeout from tank (1).** Use cloth (E120) damp with dry cleaning solvent (E162). Wear gloves (E186).
- 11. Install retaining ring (6).

**NOTE**

Let adhesive cure 1 hour before installing tank.

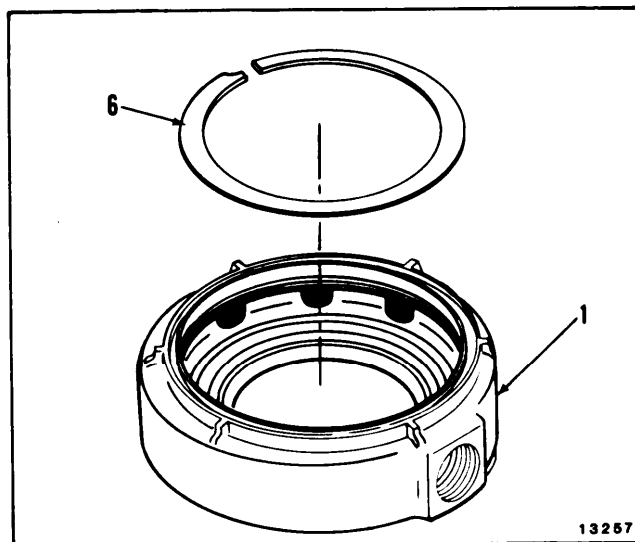


**5-34 INSTALL VERTICAL HINGE PIN OUTER SEAL (Continued)**

**5-34**

FOLLOW-ON MAINTENANCE:

None

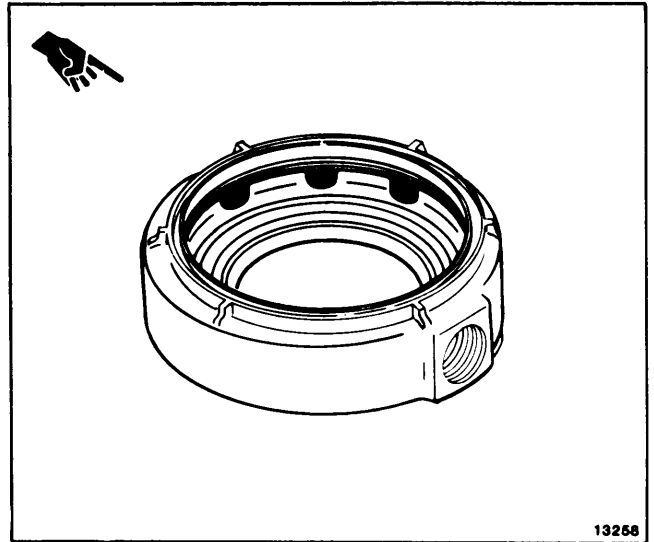

**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267
- Seal Puller (T10)
- Guide Plug Set (T12)

**Materials:**

- Dry Cleaning Solvent (E 162)
- Adhesive (E63.1)
- Cloth (E120)
- Grease (E190)
- Oil (E254)
- Gloves (E186)

**Personnel Required:**

- Aircraft Powertrain Repairer (2)
- Inspector


**References:**

TM 55-1520-240-23P

**General Safety Instructions:**

**WARNING**


Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only on well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes. Use gloves (E186).

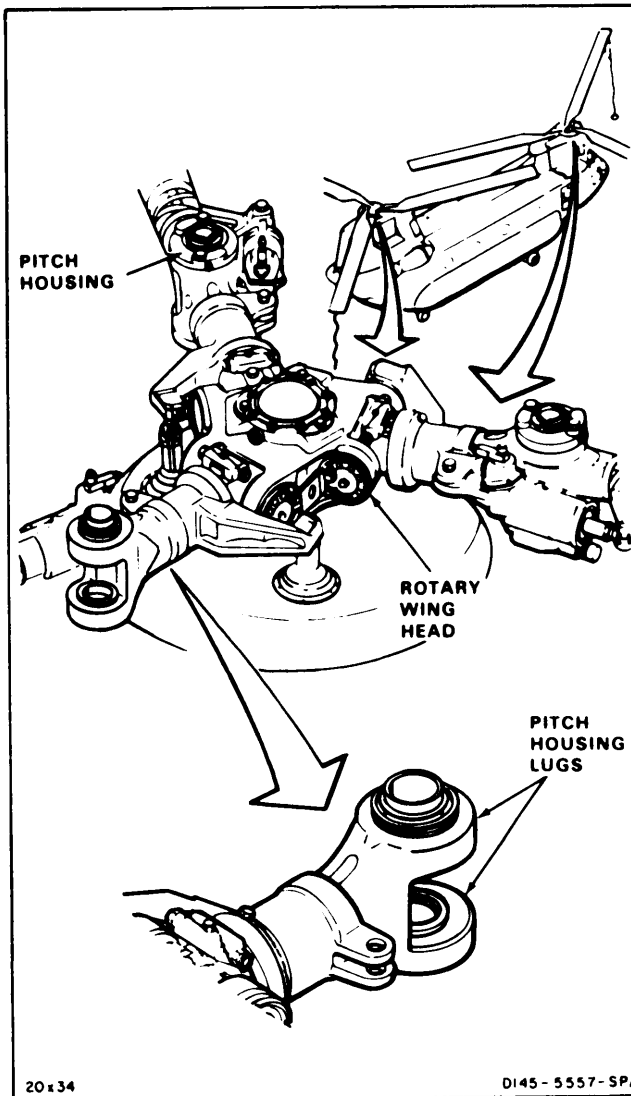

**NOTE**

Procedure is similar to install vertical hinge pin inner seal in any pitch housing lug.

1. Remove preservative from seal (1). Use cloth (E120) damp with solvent (E162). Wear gloves (E186).
2. **Check seal lips (2)** for nicks or scratches. Use magnifier. There shall be no nicks or scratches.

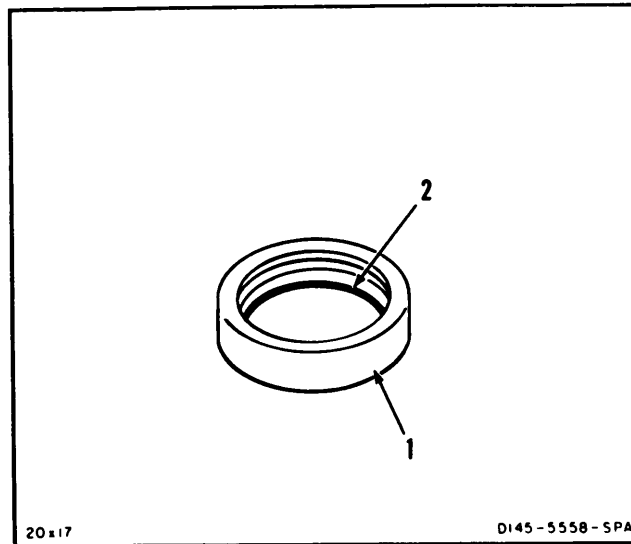


**GO TO NEXT PAGE**

5-126 Change 14

**NOTE**

Adhesive (E63.1) or sealant (E340.3) is authorized specifically for the installation of vertical hinge pin seals.

3. Apply adhesive (E63.1) or sealant (E340.3) to seal recess (3) and outer wall of seal (1). Wear gloves (E186).
4. **Position seal (1)** on lug (4 or 5), open side toward recess (3).

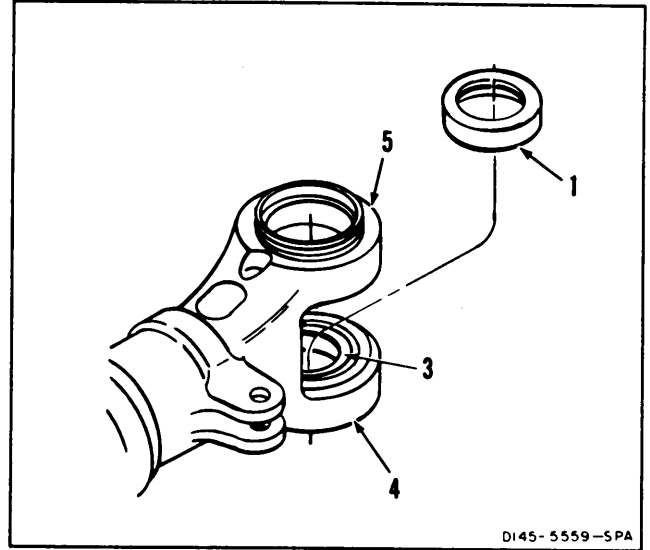


5. Position base of seal puller (T10) (6) on seal (1). Position driver (7) on lug (4 or 5). Install bolt (8) and washer (9) through driver and base.


**CAUTION**

Do not press seal past lug surface. Too much pressure can damage seal and cause leaks.

6. Turn bolt (8) clockwise until base of seal puller (T10) (6) pulls seal (1) flush with lug (4 or 5).

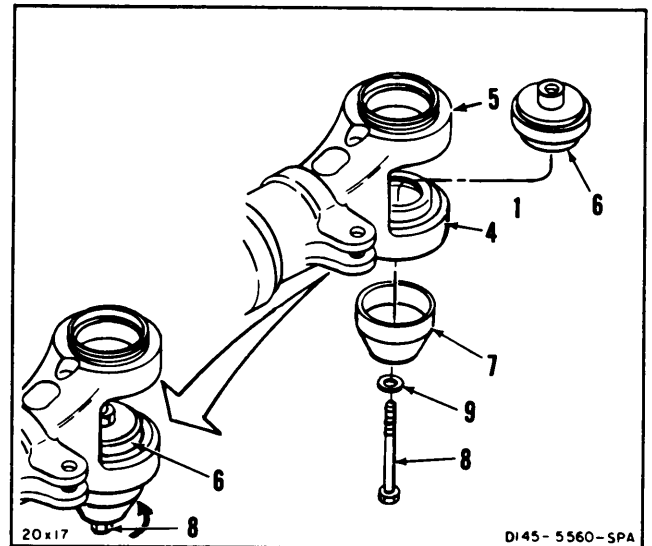

7. Turn bolt (8) counterclockwise. Remove bolt, washer (9), driver (7), and base of seal puller (T10) (6).

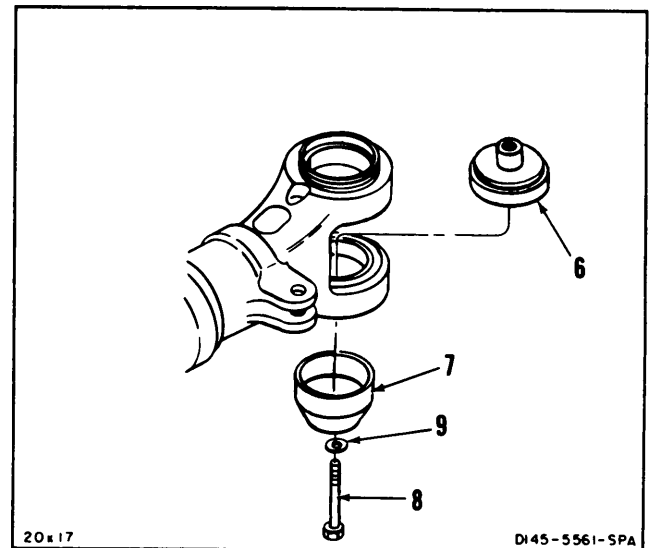

**GO TO NEXT PAGE**




8. **Wipe squeezeout** from seal (1) and lug (4 or 5). Use cloth (E120) damp with solvent (E162). Wear gloves (E186).
9. Cure adhesive on seal for 1 hour.

**CAUTION**

Wipe off excess grease. Grease can foul passages and restrict oil flow.


10. Apply grease (E190) between lips (2) of seal (1). Remove excess grease. Wear gloves (E186).

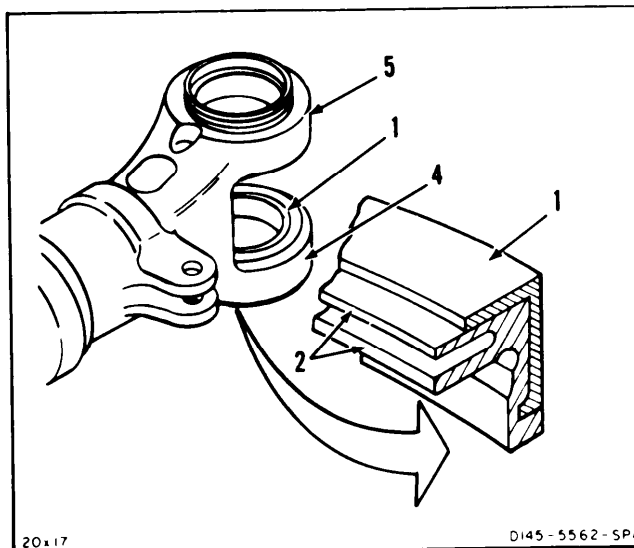

**NOTE**

Lower inner bearing race and guide plug are smaller in diameter than upper race and guide plug. Lower race is also longer than upper race.

11. **Select inner race (10 or 11) and guide plug (T12) (12 or 13)** for upper lug (5) or lower lug (4). Insert plug in inner race.
12. Apply film of oil (E254) to outside of inner race (10 or 11) and guide plug (T12) (12 or 13).

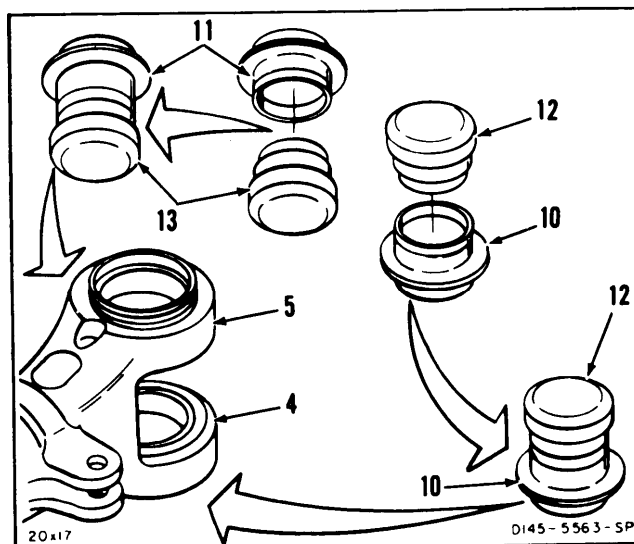


13. **Position thrust washer (14)** on inner race (10).
14. **Push plug (T12) (12) and inner race (10) into lug (4 or 5)** until race is seated. Use gloves (E186). Remove plug (T12).

**INSPECT**

**FOLLOW-ON MAINTENANCE:**

- Install vertical hinge pin tank (Task 5-29).
- Install rotary-wing blade (Task 5-84).
- Close work platform (Task 2-2).

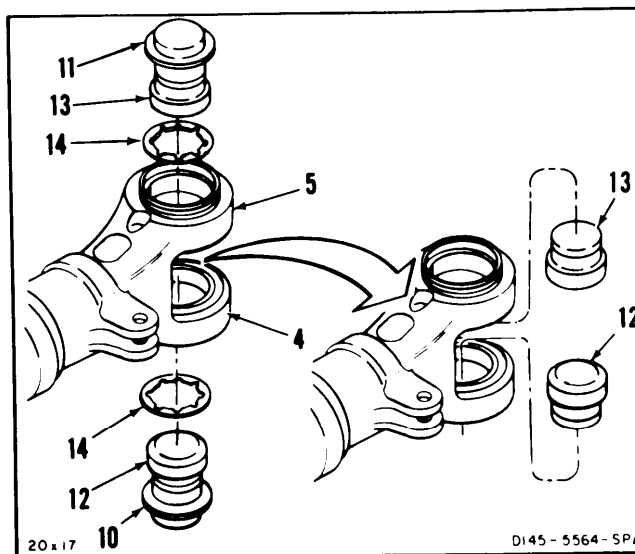

**END OF TASK**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Bearing Puller (T102)  
Drift, Soft Aluminum, 1/2 X 1/2 X 12 Inches  
Heater Gun

**Materials:**


Temperature Indicating Strips (E413)  
Pencil, Marking (E271)  
Paper Tag (E264)  
Gloves (E186)  
Kevlar Gloves (E187)

**Personnel Required:**

Aircraft Powertrain Repairer (2)


**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
One Forward and One Aft Rotary-Wing Blade  
Tied Down (Task 1-26)  
Pylon or Forward Work Platform Open (Task 2-2)  
Rotary-Wing Blade Removed As Required (Task 5-64)  
Vertical Hinge Pin Oil Tank Removed As Required (Task 5-28)

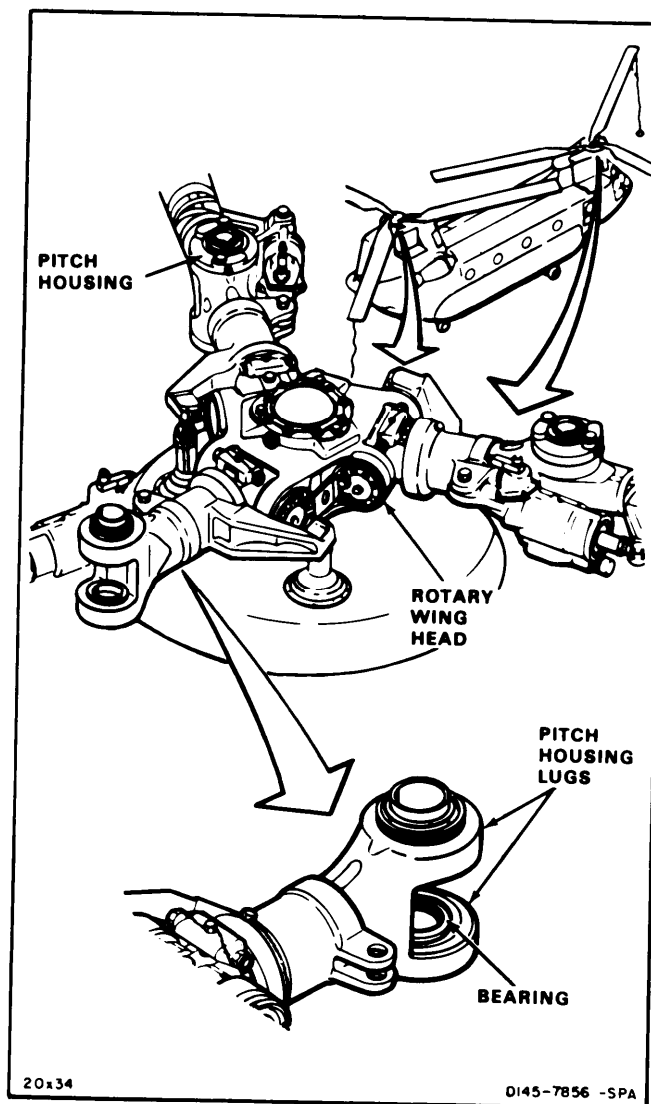**NOTE**

Procedure is same to remove vertical hinge pin bearing from any pitch housing lug. Lower lug is shown.

1. Matchmark inner bearing race (1) to lug liner (2). Use marking pencil (E271).
2. **Push inner bearing race (1) out of lug liner (2).** Use gloves (E186). Remove thrust washer (3).
3. Tag race (1) with rotary-wing head, color of pitch housing, and lug from which race was removed.

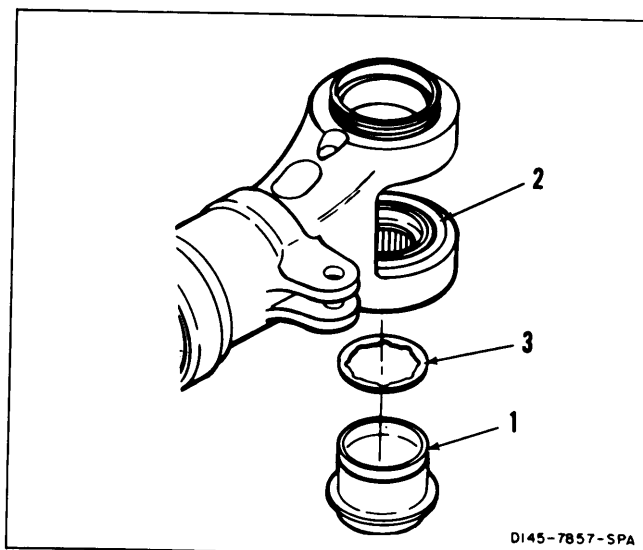


GO TO NEXT PAGE

**CAUTION**

Do not use screwdriver or other sharp tool to remove seal. Sharp tools can scratch lugs and cause lug failure. Seal seating surfaces and bearings can also be damaged.

4. Tap inner seal (4) from lug (2). Use soft aluminum drift

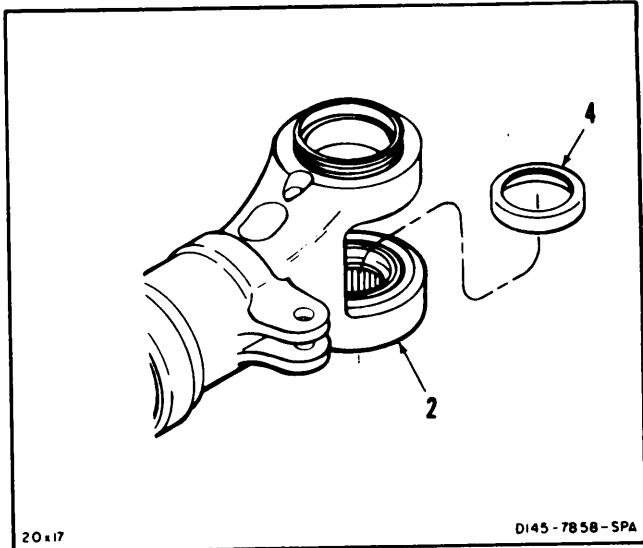


5. Matchmark outer race (5) to lug liner (6). Use marking pencil (E271).


**CAUTION**

Do not exceed 250°F (121°C) when heating lug. Lug will be damaged.

6. Heat lug (2) to 240°F (116°C). Use heater gun. Use temperature indicating strips (E413) to monitor temperature. Wear gloves (E187).

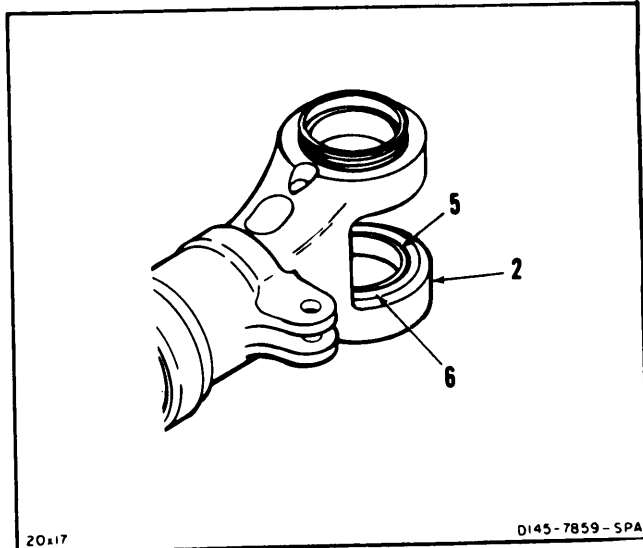

7. Install bearing puller (T102) (7) as follows:
  - a. Position cap (8) on lug liner (6) outside of lug (2).
  - b. Position base (9) against bearing outer race (5) inside of lug (2).
  - c. Install washer (10) and nut (11) on bolt (12).

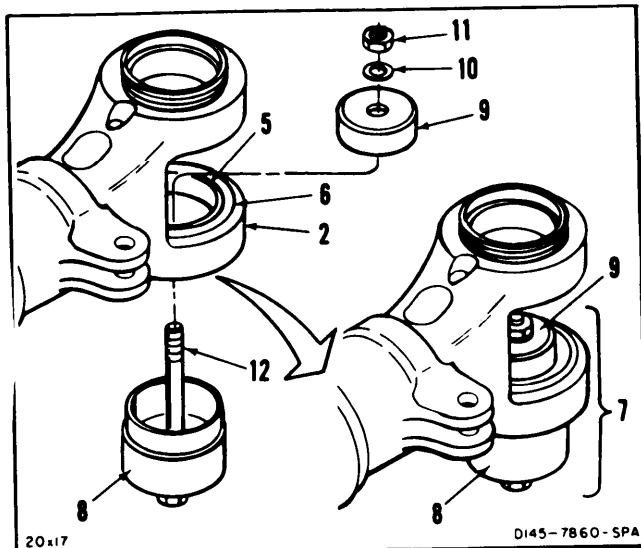

**GO TO NEXT PAGE**

## 5-36 REMOVE VERTICAL HINGE PIN BEARING (Continued)


5-36

8. Tighten bolt (12) until bearing (13) is drawn out of lug (2).
9. **Remove** nut (11), washer (10), base (8), bolt (12), cap (9), and **bearing (13)**.

**CAUTION**

The bearing and the inner race are a matched set and must be kept together as a unit. Otherwise, excessive wear will occur.

10. Tag bearing (13) with rotary-wing head, color of pitch housing, and lug from which bearing was removed.

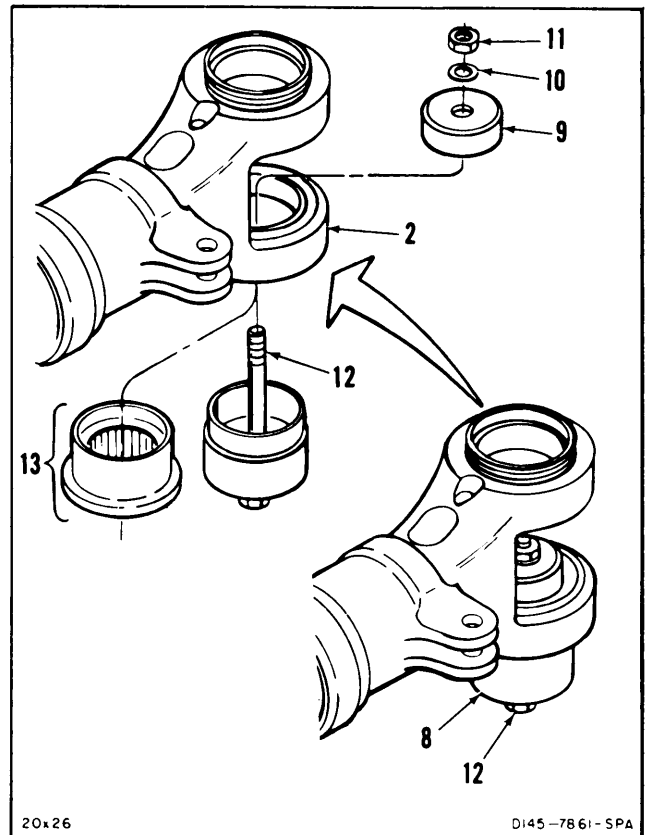

## FOLLOW-ON MAINTENANCE:

None

END OF TASK

**5-37 INSPECT VERTICAL HINGE PIN AND BEARINGS****5-37****INITIAL SETUP****Materials:**

None

**Applicable Configurations:**

All

**Personnel Required:**

Inspector


**Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114  
Drift, Aluminum 0.0625 x 6 Inches

**Equipment Condition:**

Off Helicopter Task

1. **Check the surface of vertical pin (1), upper bearing (2), and lower bearing (3)** for damage. Damage can be removed by polishing. Use abrasive paper (E8). It is not necessary to remove the entire score or mark. Vertical scores, circumferential marks, and corrosion pits less than 0.005 inch depth are acceptable after polishing provided all protruding edges have been removed and the surface is smooth to the touch. Light scratches are acceptable regardless of direction. Definitions of a scratch and a score as applicable to the vertical pin are as follows:
  - a. Scratches are defined as equal to or less than the depth and severity of scratches inflicted by hand rubbing the part with abrasive paper (E5).
  - b. Scratches of greater depth or severity than those described in step a above, are considered scores.
2. **Check wear surfaces (4) of inner races (5)** for spalling, corrosion, or other damage. There shall be no spalling or corrosion. There shall be no scores or other marks deeper than 0.005 inch. Scores and circumferential marks not deeper than 0.005 inch may be blended out. Use abrasive paper (E8). Any scratches not deeper than those caused by abrasive paper (E5) are acceptable without rework.
3. **Check upper and lower surfaces of flanges (6)** for cracks. There shall be no cracks.

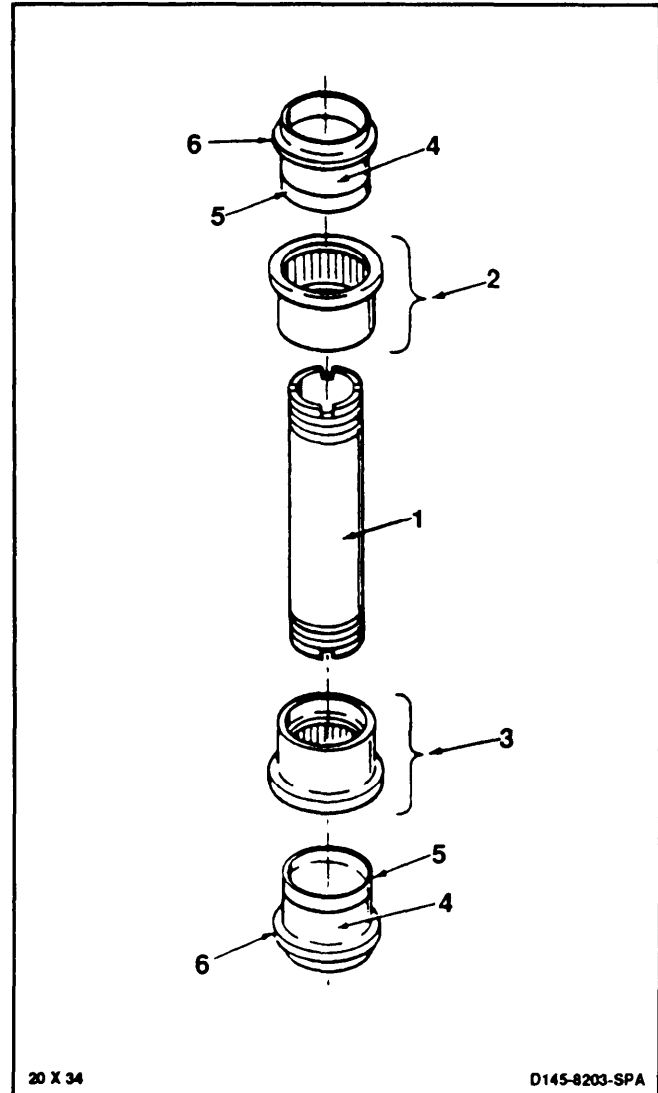**GO TO NEXT PAGE**

## 5-37 INSPECT VERTICAL HINGE PIN AND BEARINGS (Continued)

5-37

### 4. Check rollers (7) and outer races (8) of bearings (2 or 3) as follows:

- a. Insert drift through oil hole (9). Push rollers (7) out of cage (10) as necessary to check wear surface (11).

#### NOTE


A worn cage that allows rollers to be loose or fall out is not cause for bearing replacement.

- b. Check wear surface (11) and rollers (7) for spalling, corrosion, or other damage. There shall be no damage.

### 5. Install rollers (7) in cage (10).

#### FOLLOW-ON MAINTENANCE:

None

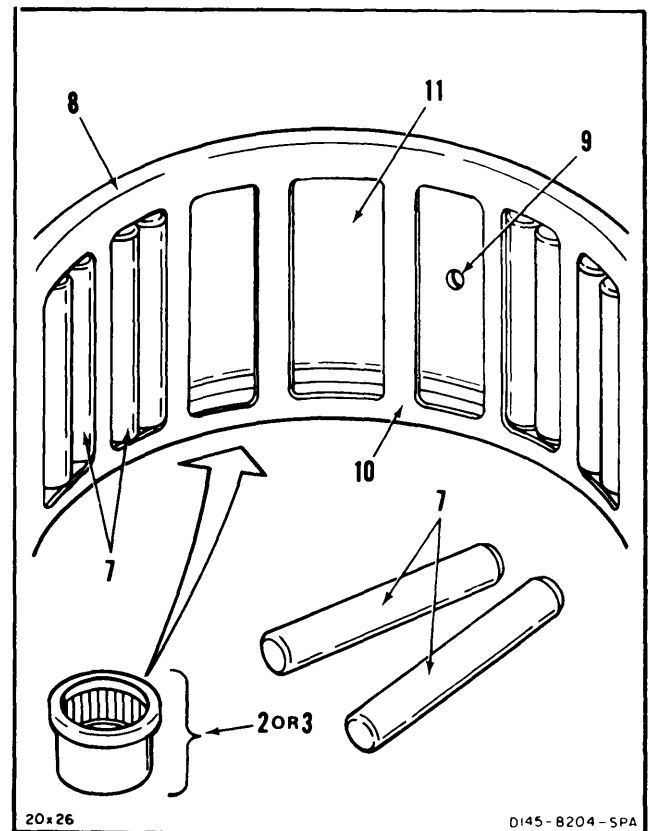

END OF TASK

**5-38 ROTATE VERTICAL HINGE PIN BEARING**

5-38

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267

**Materials:**

Pencil, Marking (E271)  
Paper Tag (E264)

**Personnel Required:**


68D10 Aircraft Powertrain Repairer  
68D20 Aircraft Powertrain Repairer

**References:**

Task 5-36  
Task 5-39

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
One Forward and One Aft Rotary-Wing Blade  
Tied Down (Task 1-26)  
Pylon or Forward Work Platform Open (Task 2-2)  
Rotary-wing Blade Removed As Required (Task 5-64)  
One Vertical Hinge Pin Oil Tank Removed (Task 5-28)

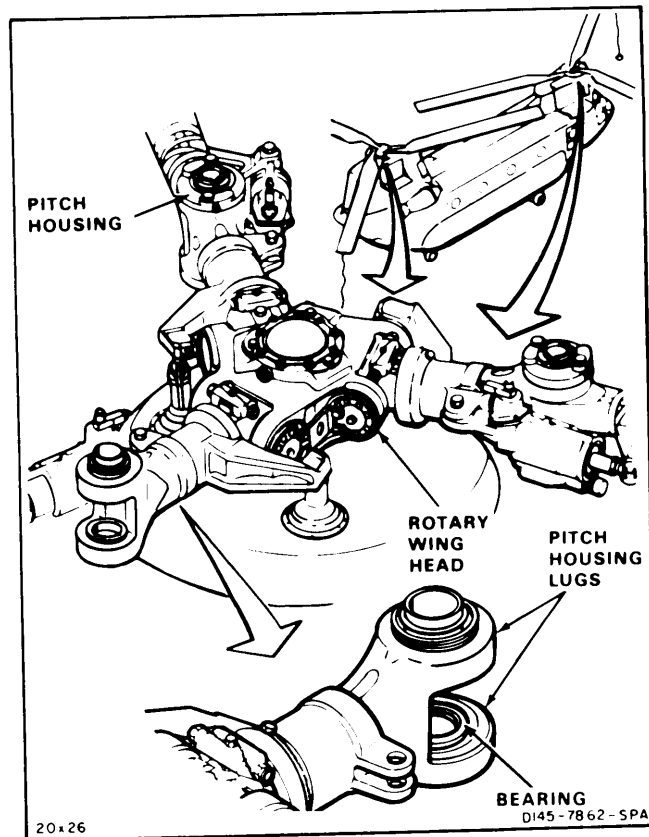**GO TO NEXT PAGE**


## 5-38 ROTATE VERTICAL HINGE PIN BEARING (Continued)

5-38

### NOTE

Procedure is same to rotate any vertical hinge pin bearing. Lower bearing is shown in task.


1. Matchmark inner race (1), outer race (2), and lug liner (3). Use marking pencil (E271).

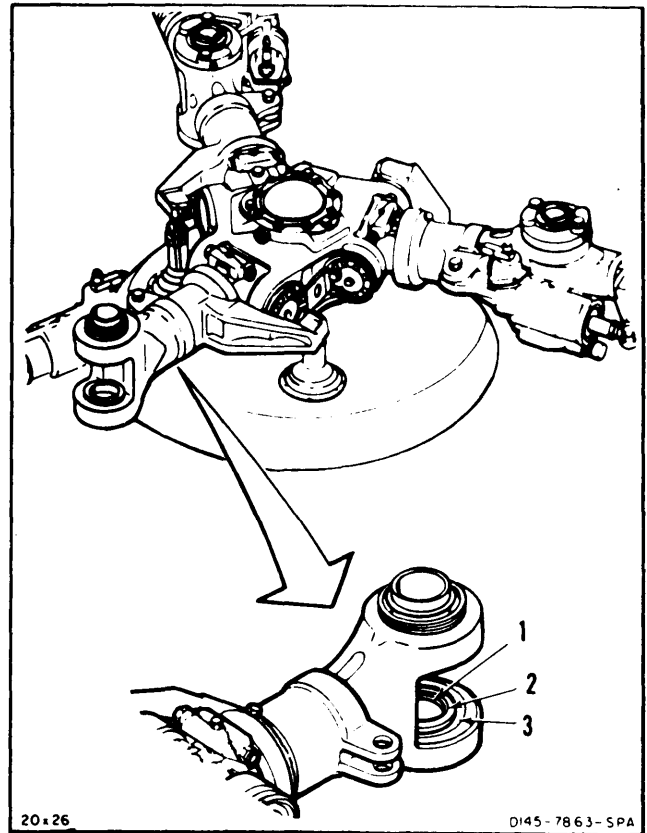

2. Remove bearing (4) (Task 5-36).
3. If more than one bearing (4) is removed, tag bearings. Use paper tag (E264) (5) and marking pencil (E271). Mark as follows:
  - a. Rotary-wing head serial number.
  - b. Pitch housing color.
  - c. Upper or lower bearing.
4. Inspect bearing (4) (Task 5-37).
5. Remove tag (5), and install bearing (4) with matchmarks rotated 180 degrees from original position (Task 5-39).

### FOLLOW-ON MAINTENANCE:

None

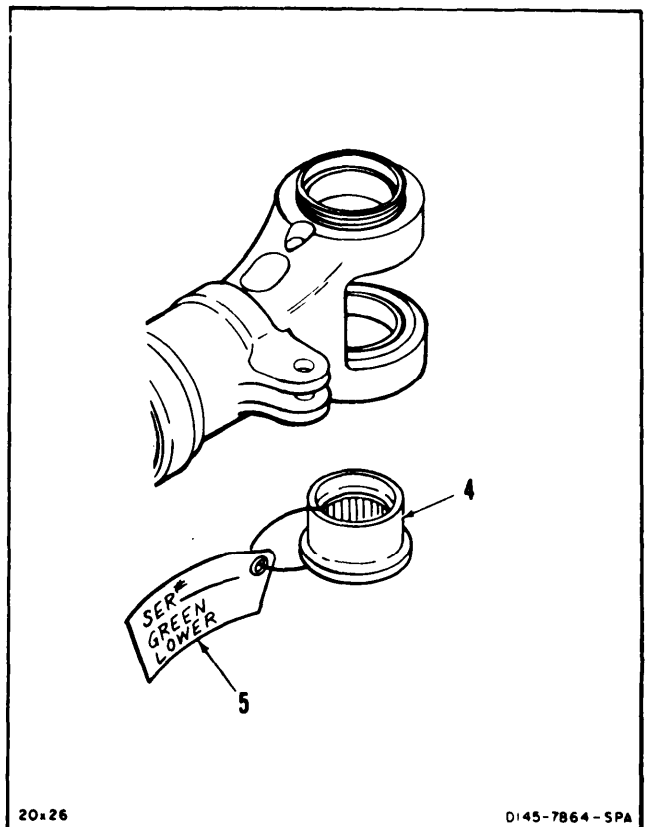

**END OF TASK**



## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Bearing and Seal Puller (T10)  
Heater Gun

**Materials:**

Cloth (E120)  
Dry Cleaning Solvent (E162)  
Gloves (E186)  
Kevlar Gloves (E187)  
Lubricating Oil (E254)  
Temperature Indicating Strips (E413)

**Personnel Required:**

Aircraft Powertrain Repairer (2)  
Inspector

**References:**

TM 55-1520-240-23P

**WARNING**


Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with plenty of water for at least 15 minutes. Get medical attention for eyes.

**CAUTION**

The bearing and the inner race are a matched set and must be kept together as a unit. Otherwise, excessive wear will occur.

**NOTE**

- Procedure is same to install vertical hinge pin bearing in any pitch housing lug. Lower lug is shown in task.
- Install bearing in same lug from which removed.

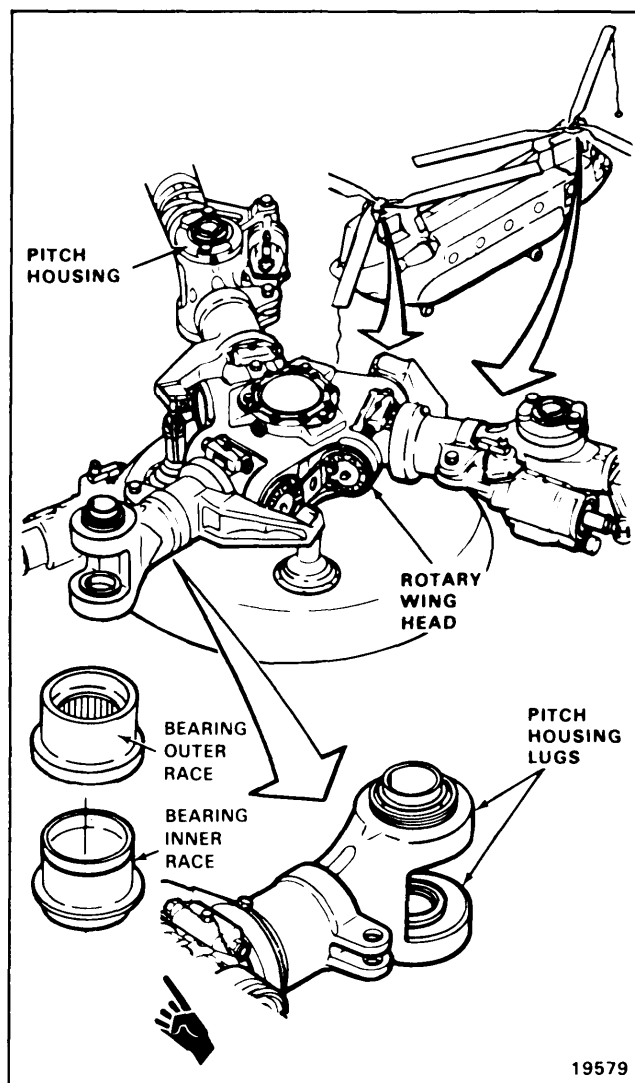

GO TO NEXT PAGE


5-136

Change 23

## 5-39 INSTALL VERTICAL HINGE PIN BEARING (Continued)


5-39

1. Clean lug (1), bearing outer race (2), and bearing inner race (3). Use cloth (E120) damp with solvent (E162). Remove tag, if tied to bearing. Use gloves (E186).

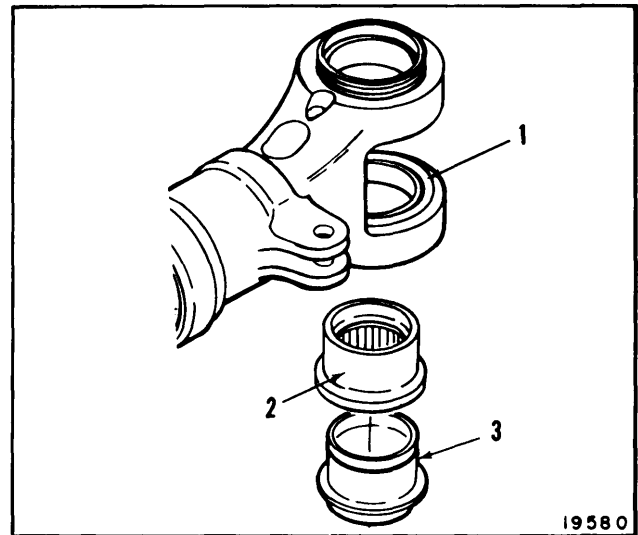**CAUTION**

Do not exceed 250°F (121°C) when heating lug. Lug will be damaged.

2. Heat lug (1) to 240°F (116°C). Use heater gun. Use temperature indicating strips (E413) to monitor temperature. Wear gloves (E187).
3. Install bearing and seal puller (T10) (4) as follows:
  - a. Position base (5) on lug (1) with boss (6) down.
  - b. Lubricate outside of outer race (2). Use lubricating oil (E254).
  - c. Inspect thrust washer (7) for cracks, distortion, gouges, scoring, nicks and scratches. If cracks, scoring or distortion are found, reject the washer. Gouges, nicks, or scratches less than 0.002 inches deep may be polished out, provided a minimum thickness of 0.1755 inches is not exceeded.
  - d. Position thrust washer (7) on inner race (3). Position outer race (2) on inner race. Position bearing assembly on driver (8).
  - e. Position bolt (9) through lug (1). If bearing (3) is not being rotated, align matchmaker on outer race (2) and lug.
  - f. Install bolt (9) through base (5).
4. Install bearing assembly by tightening bolt (9) until shoulder (10) is seated.
5. Remove bolt (9), base (5), and driver (8).

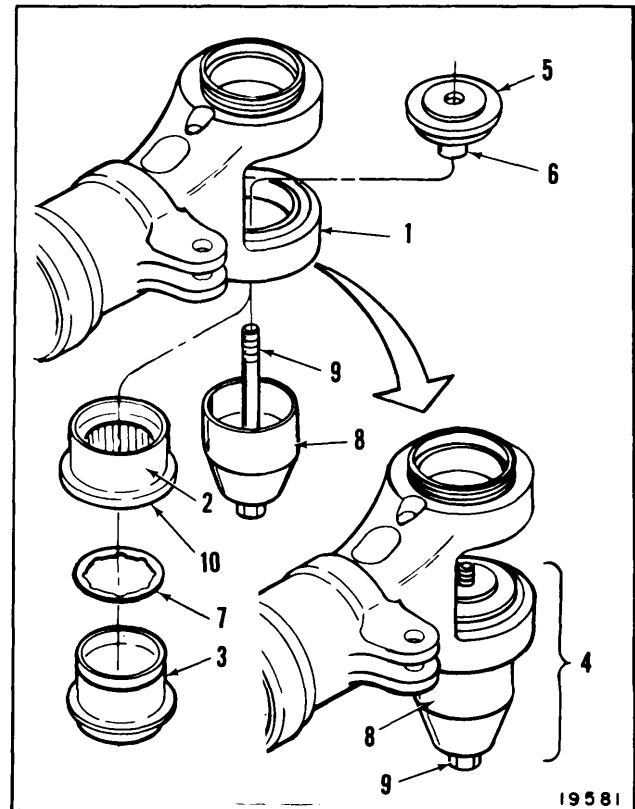**INSPECT****GO TO NEXT PAGE**


**5-39 INSTALL VERTICAL HINGE PIN BEARING**  
**(Continued)**

FOLLOW-ON MAINTENANCE:

Install vertical hinge pin oil tank

Install rotary-wing blade (Task 5-84.

Close work platforms (Task 2-2).

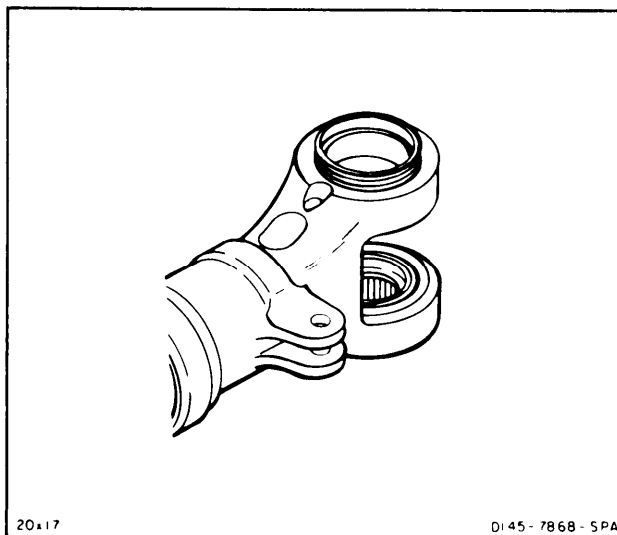

**END OF TASK**

**5-40 REMOVE HORIZONTAL HINGE PIN BEARING CAP**

5-40

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
 NSN 5180-00-003-5267  
 Torque Wrench Socket (T5)  
 Drive Handle, 3/4-Inch  
 Bolt, 3/8-24 UNF, 1 13/16-Inches Long  
 Washer, 3/8-Inch ID, 1/16-Inch Thick  
 Socket, 2-Inch, 3/4-Inch Drive

**Materials:**


None

**Personnel Required:**

Aircraft Powertrain Repairer

**Equipment Condition:**

Pitch Link Lockpin Installed

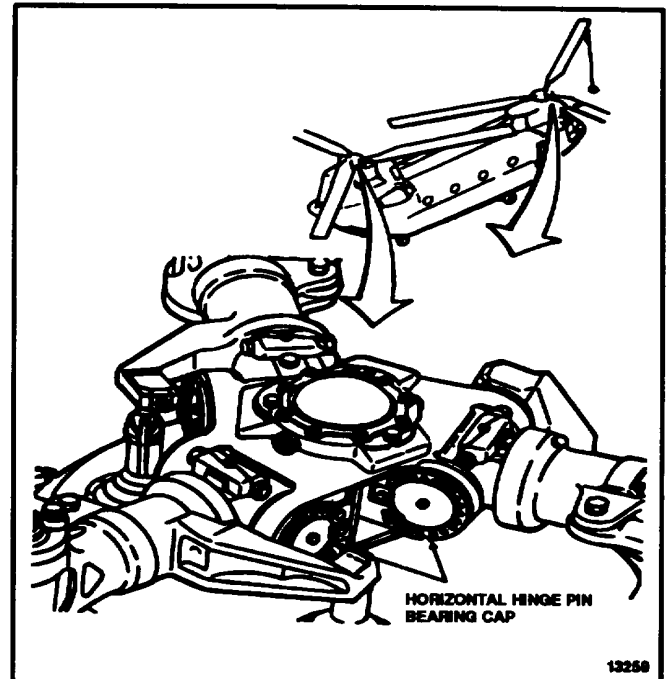
**NOTE**

Although removal of rotor blades and rotor head is not a requirement to perform this task, that option rest with the operating unit.


**NOTE**

- Procedure is same to remove any horizontal hinge pin bearing cap. There are six caps on a rotary-wing head.
- Remove key only from cap being removed. Locking beam can be removed with one key installed.

1. Remove lockwire from six bolts (1).
2. Remove five bolts (1) from horizontal hinge pin bearing caps (2). Remove key (3).

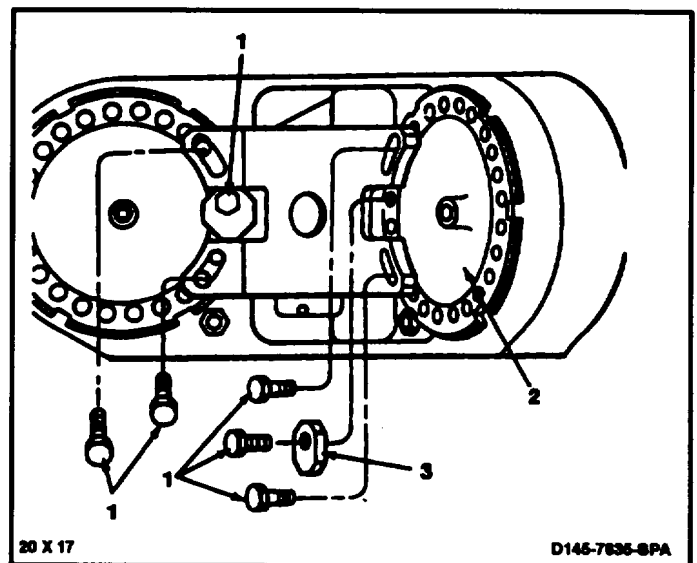
**GO TO NEXT PAGE**

3. Remove locking beam (4) and laminated shim (5), if installed.

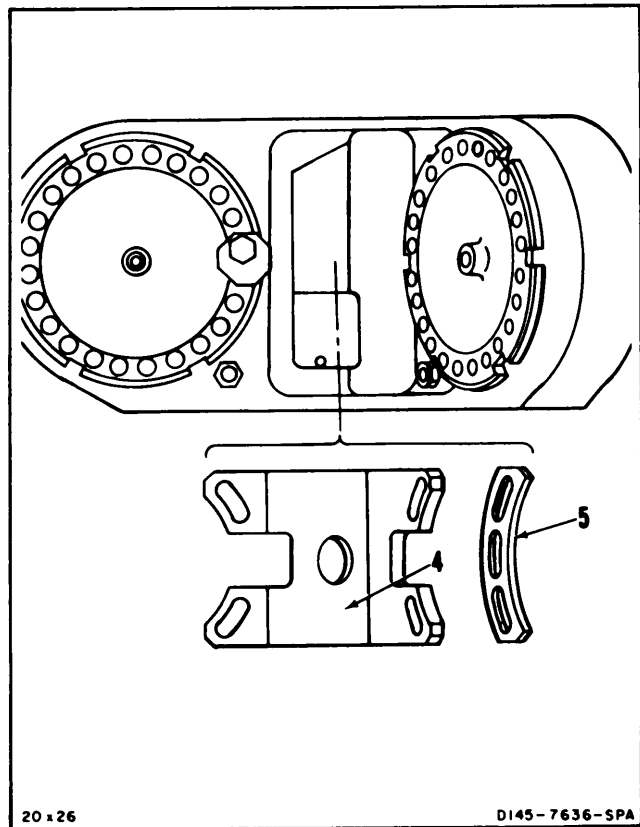


4. Install torque wrench socket (T5) (6) on bearing cap (2).

- 4.1. Install bolt (7), with washer (8) in wrench socket (6). Hand-tighten bolt.
- 4.2. Install socket (9) over hex of wrench socket (6).
5. Remove bearing cap (2). Use 3/4-inch drive handle.

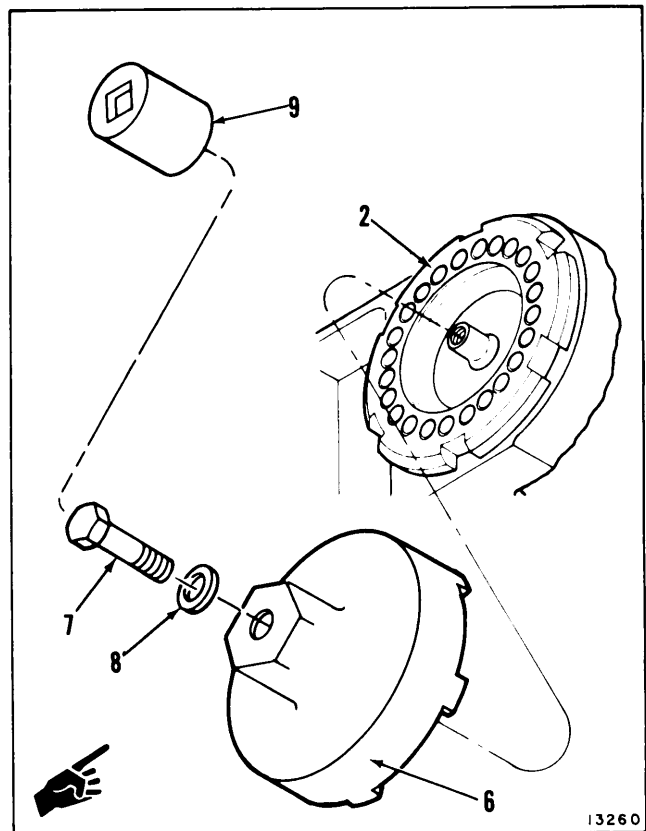


**5-40 REMOVE HORIZONTAL HINGE PIN BEARING CAP (Continued)****5-40**

6. Remove bolt (7) and washer (8). Remove torque wrench socket (T5) (6).

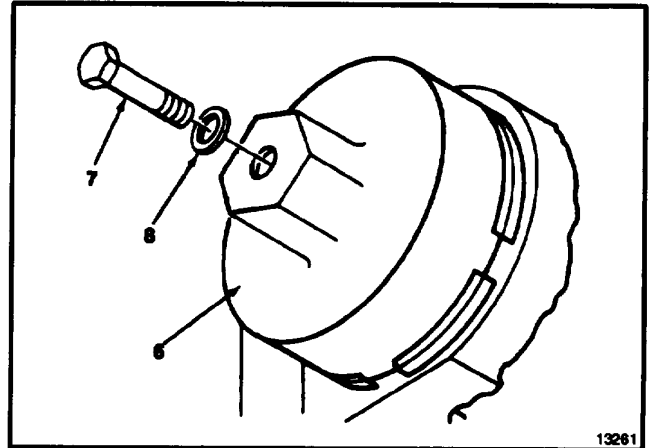**NOTE**

**Shim installed on trailing cap only.**

7. Remove packing (10), laminated shim (11), and washer (12) from cap (2).

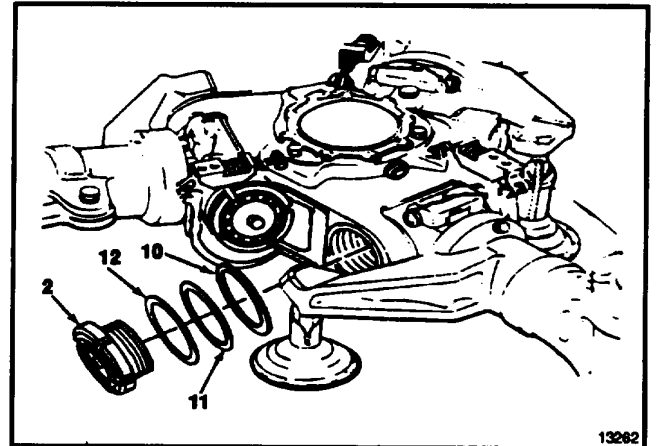**FOLLOW-ON MAINTENANCE:**

Inspect laminated shims and thrust washers per Task 5-46.

**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114

**Materials:**

None

**Personnel Required:**


Inspector

**References:**

TM 55-1520-240-23P

**Equipment Condition:**


Horizontal Hinge Pin Bearing Cap  
Removed (Task 5-40)

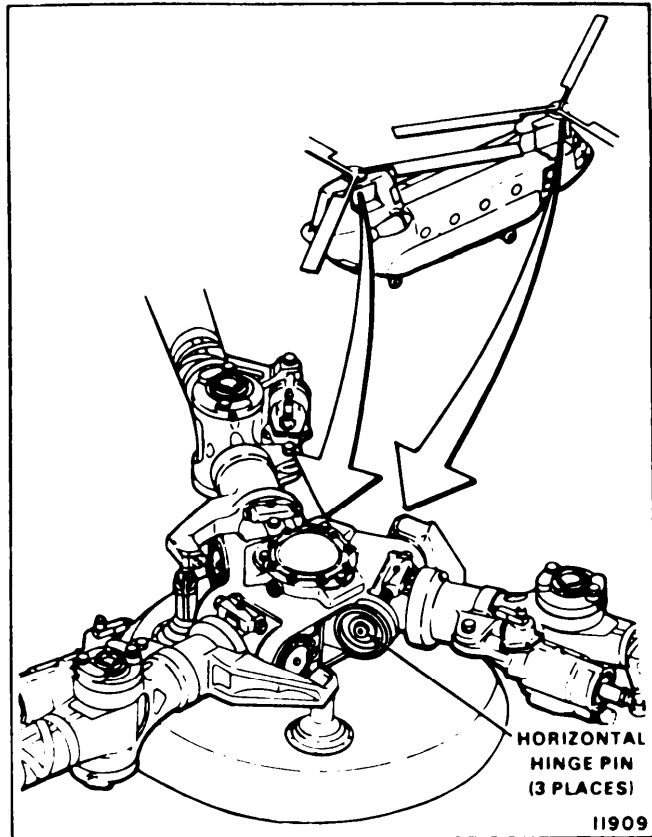

1. Inspect area around lower part of bearing (1) at each end of hinge pin (2). Check for debris, indicating that a bearing has failed.

**NOTE**


Extremely fine copper or steel residue is normal.

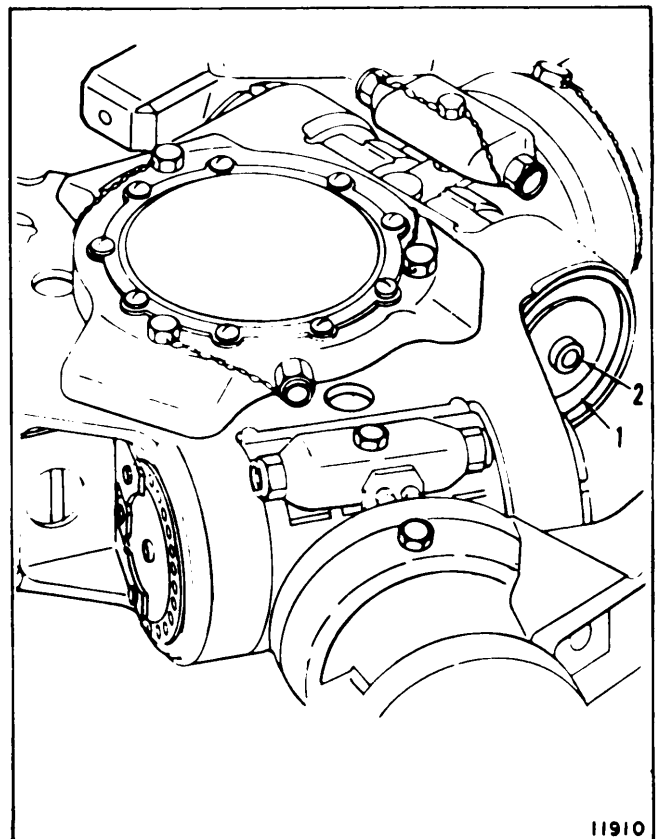

**GO TO NEXT PAGE**

**5-40.1 INSPECT INSTALLED HORIZONTAL HINGE PIN BEARINGS**  
**(Continued)****5-40.1**

2. If bearing debris is found, remove hinge pin (2) and bearings (1) (Task 5-44). Inspect pin and bearings for spalling, corrosion, and other damage (Task 5-45).
3. Replace components that show signs of damage (Task 5-46).

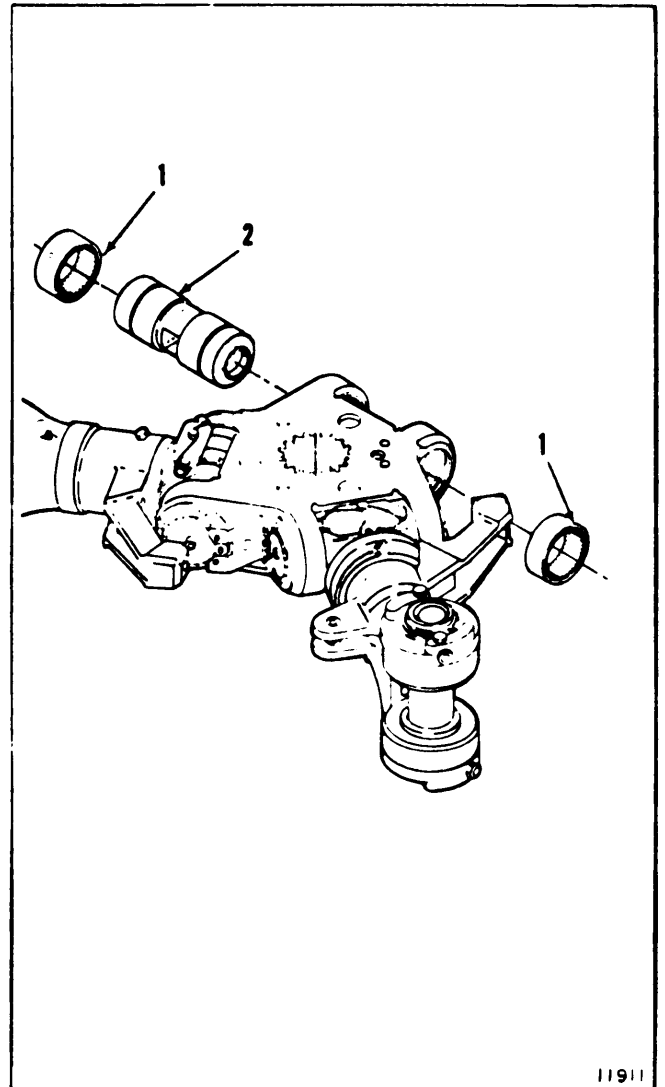**FOLLOW-ON MAINTENANCE:**

None

**END OF TASK**



INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Technical Inspection Tool Kit.  
NSN 5180-00-323-5114
- Powertrain Repairer's Tool Kit.  
NSN 5180-00-003-5267
- Dial Indicator, 0 to 0.030 inch
- Torque Wrench Socket (T5)
- Torque Wrench, 0-600 Foot-Pounds
- Torque Wrench, 100-750 Inch-Pounds
- Bolt, 3/8-24 UNF, 1 13/16-Inches Long
- Washer, 3/8-Inch ID, 1/16-Inch Thick
- Socket, 2-Inch, 3/4-Inch Drive
- Brush

**Materials:**

- Lockwire (E231)
- Anti-Seize Compound (E75)

**Parts:**


Packing

**Personnel Required:**

- Aircraft Powertrain Repairer
- Inspector

**References:**

TM 55-1520-240-23P

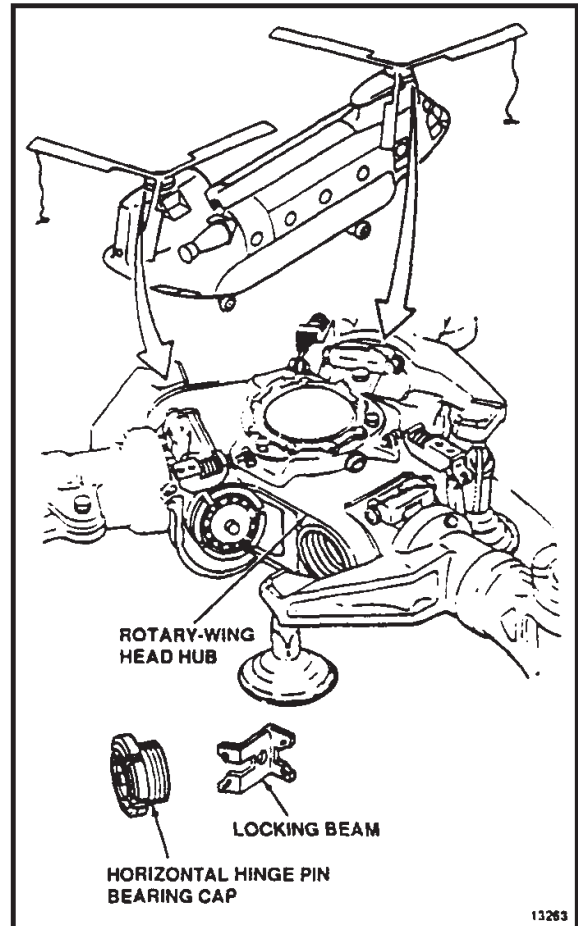


**NOTE**

- Procedure is same to install any horizontal hinge pin bearing cap
- Washer and shim are installed on trailing cap only.

**WARNING**

Prior to installing bearing cap, ensure horizontal hinge thrust washers are installed with inside diameter chamfer toward horizontal hinge pin.

1. Install washer (1), shim (2), and packing (3) on horizontal hinge pin bearing cap (4). **Install cap.**

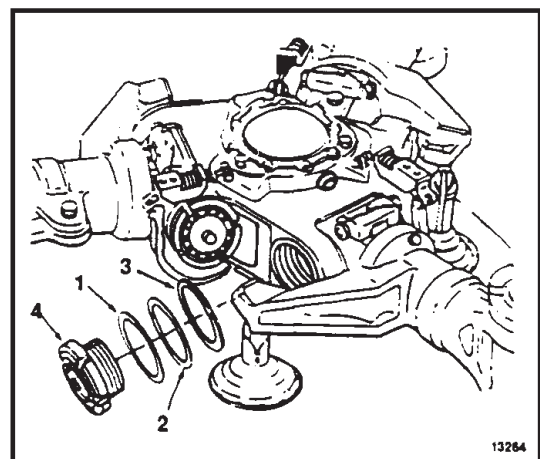


**GO TO NEXT PAGE**


**5-41 INSTALL HORIZONTAL HINGE PIN BEARING CAP (Continued)**

5-41


2. **Install Torque wrench socket (T5) (5)** on bearing cap (4).
  3. **Install bolt (6)** with washer (6.1) in wrench socket (5). Hand-tighten bolt.
  4. **Install socket (6.2)** over hex of wrench socket (5).
- 4.1. Apply anti-seize compound (E75) to horizontal hinge pin bearing cap (4) threads.
  - 4.2. **Torque bearing cap (4) to 590 foot-pounds.**

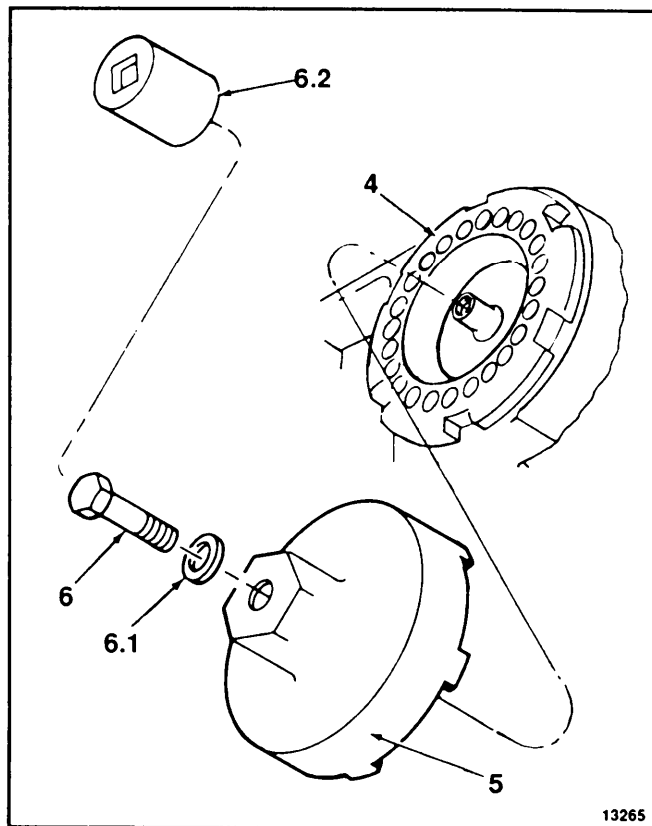

- 4.3. Wipe excess lubricant off, leaving only a thin film. **Remove bolt (6)** and washer (6.1). **Remove torque wrench socket (5).**

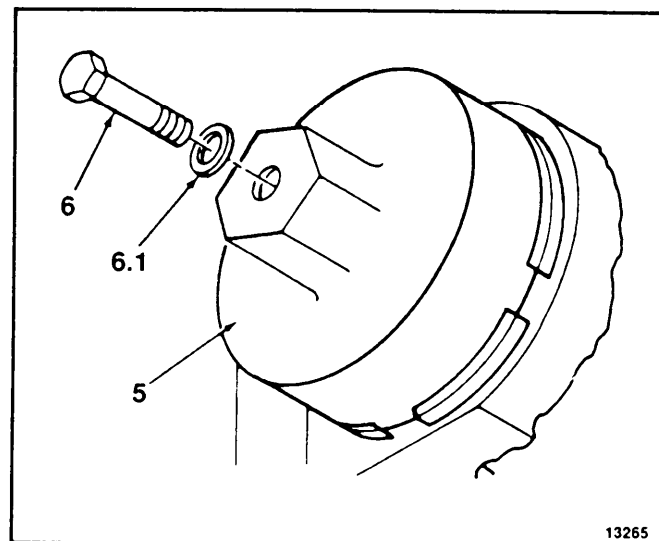**GO TO NEXT PAGE**

5. With leading and trailing caps (4) installed, **check horizontal pin clearance** as follows:
  - a. Attach dial indicator (7) to rotor hub (8).
  - b. Position point of indicator (7) against vertical hinge pin oil tank sight indicator (9).
  - c. Push pitch housing (10) away from dial indicator (7) as far as possible.
  - d. Hold housing (10) in position, and set dial indicator (7) to 0.
  - e. Pull housing (10) toward dial indicator (7) as far as possible.
  - f. Hold housing (10) in position and read dial indicator (7). Remove indicator. If reading is between 0.004 and 0.008 inch. go to step 6. If reading is not within these limits, remove trailing cap (4) and change thickness of shim (2) as required.
  - g. Replace cap (4). Repeat steps 1 through 4.

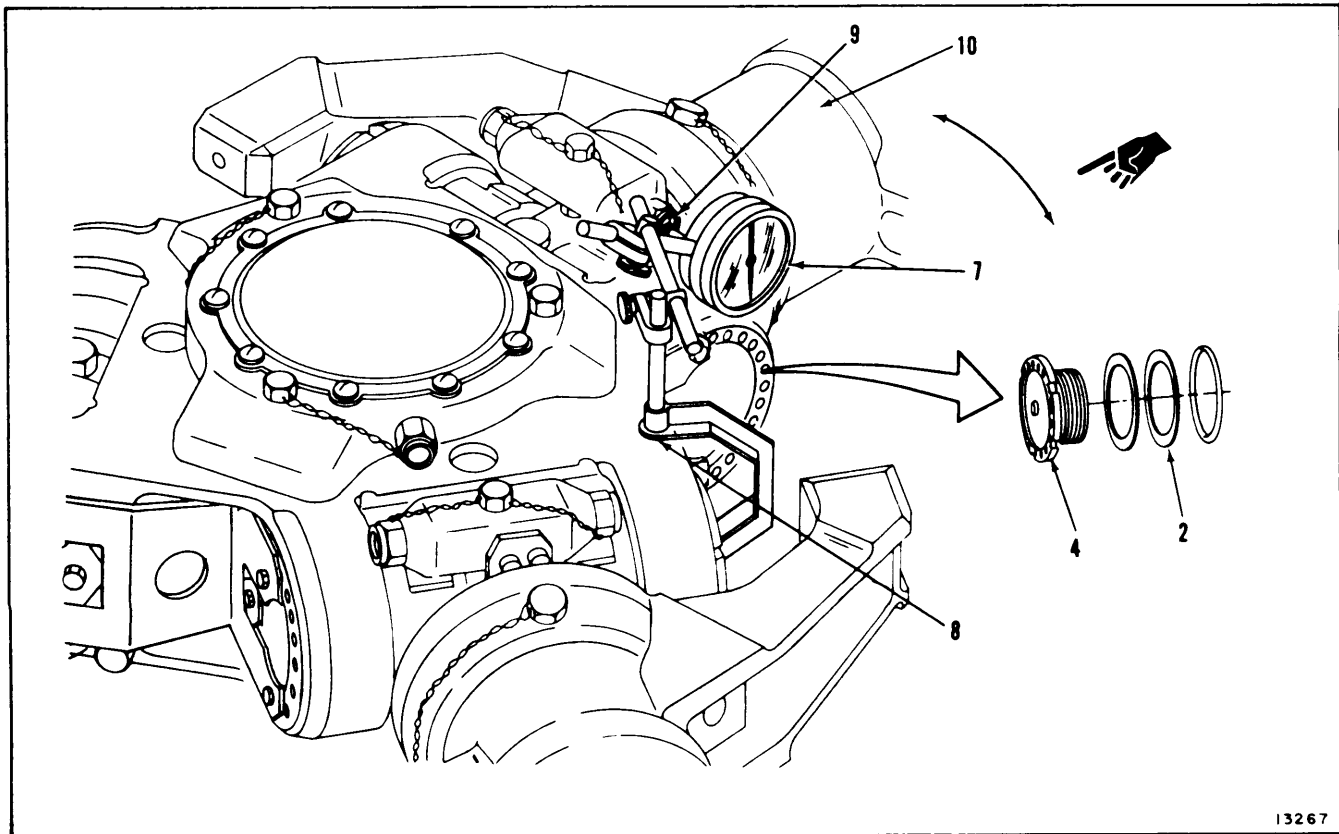


13267

5-41 INSTALL HORIZONTAL HINGE PIN BEARING CAP (Continued)

- 6. On trailing cap (4) only, position laminated shim (11).
- 7. Position locking beam (12) on bearing cap (4).


**NOTE**

Key on leading cap may have to be removed to align locking beam.

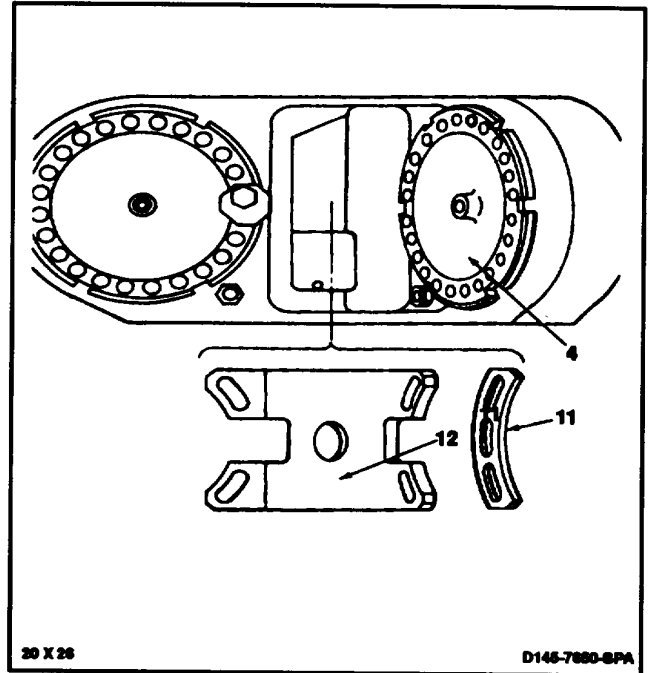

- 8. Install four bolts (13) and handtighten. Position key (14) and install remaining bolt (15). Torque five bolts to 140 Inch-pounds.
- 9. Lockwire bolts (9 and 11) and filler cap (16). Use lockwire (E231).


**INSPECT**

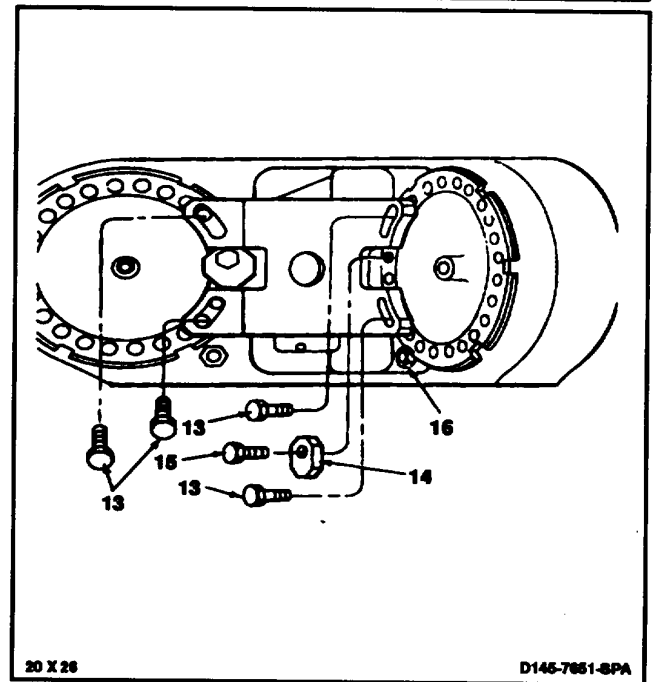

**GO TO NEXT PAGE**

**5-41 INSTALL HORIZONTAL HINGE PIN BEARING  
CAP (Continued)**

FOLLOW-ON MAINTENANCE

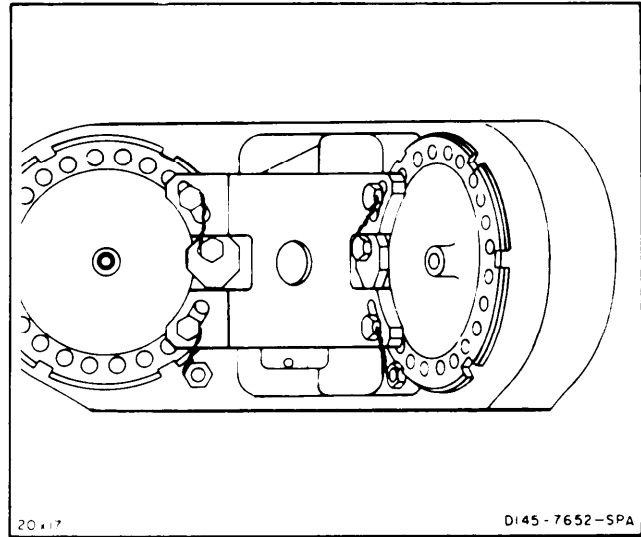

**END OF TASK**

## 5-42 REMOVE HORIZONTAL HINGE PIN OIL SEALS

5-42

### INITIAL SETUP

#### **Applicable Configurations:**

All

#### **Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Phenolic Drift, 1/2-inch X 1/2-inch x 10-Inches

#### **Materials:**


None

#### **Personnel Required:**

68D10 Aircraft Powertrain Repairer

#### **Equipment Condition:**

Off Helicopter Task  
Pitch Varying Housing Removed (Task 5-22)  
Horizontal Hinge Pin Bearing Caps Removed  
(Task 5-40)  
Horizontal Hinge Pin Removed (Task 5-44)

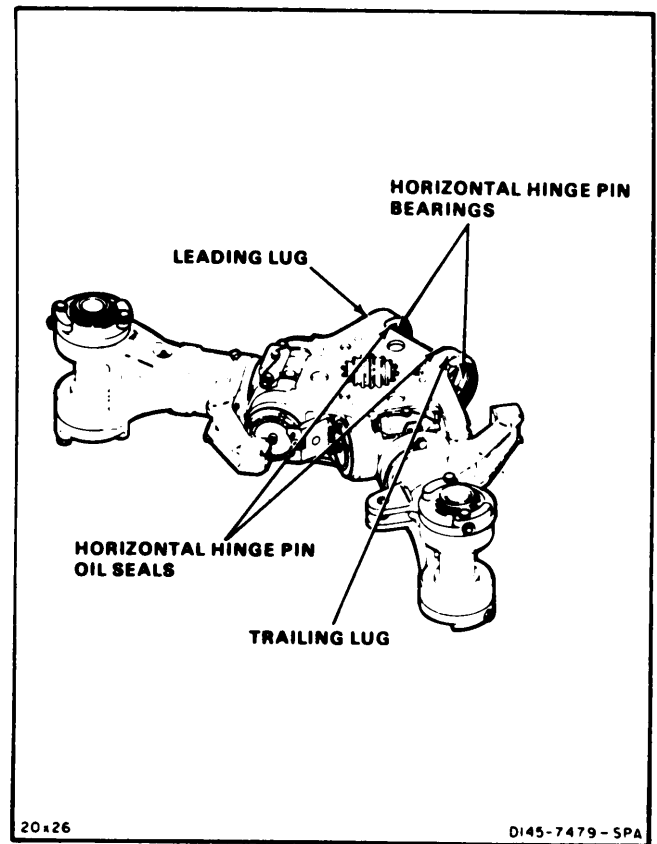

### CAUTION

Do not strike bearings with hard  
ted. Bearings can be damaged.

### NOTE


Procedure is same to remove any horizontal hinge pin, oil seal. There are six horizontal hinge pin oil seals in each rotary-wing head. Forward rotary-wing head is shown here.

1. Tap seal (1) from leading lug (2). Use phenolic drift. Do not strike bearing (3).
2. Tap seal (4) from trailing lug (5). Use phenolic drift. Do not strike bearing (3).

#### FOLLOW-ON MAINTENANCE:

None

### END OF TASK

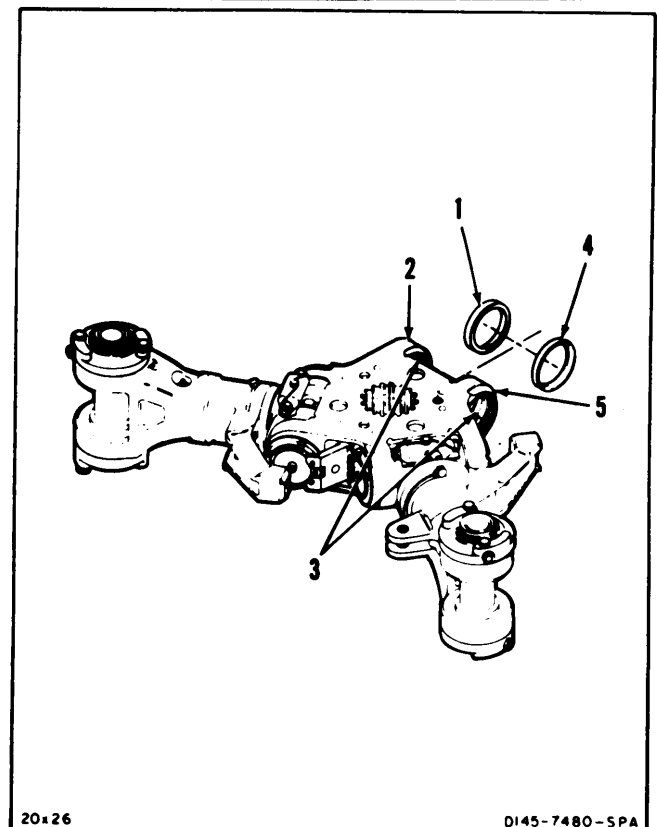

5-147

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,

NSN 5180-00-003-5267

Bearing and Seal Pusher (T6)

**Materials:**

Dry Cleaning Solvent (E162)

Cloth (E120)

Sealant (E340.3)

Gloves (E186)

Adhesive (E63.1)

**Personnel Required:**

Aircraft Powertrain Repairer (2)

Inspector

**References:**


TM 55-1520-240-23P

**General Safety Instructions:****WARNING**

Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes. Use gloves (E186).

**WARNING**

Adhesive (E63.1) and Sealant (E340.3) can irritate skin and cause burns. Avoid contact with skin, eyes and clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

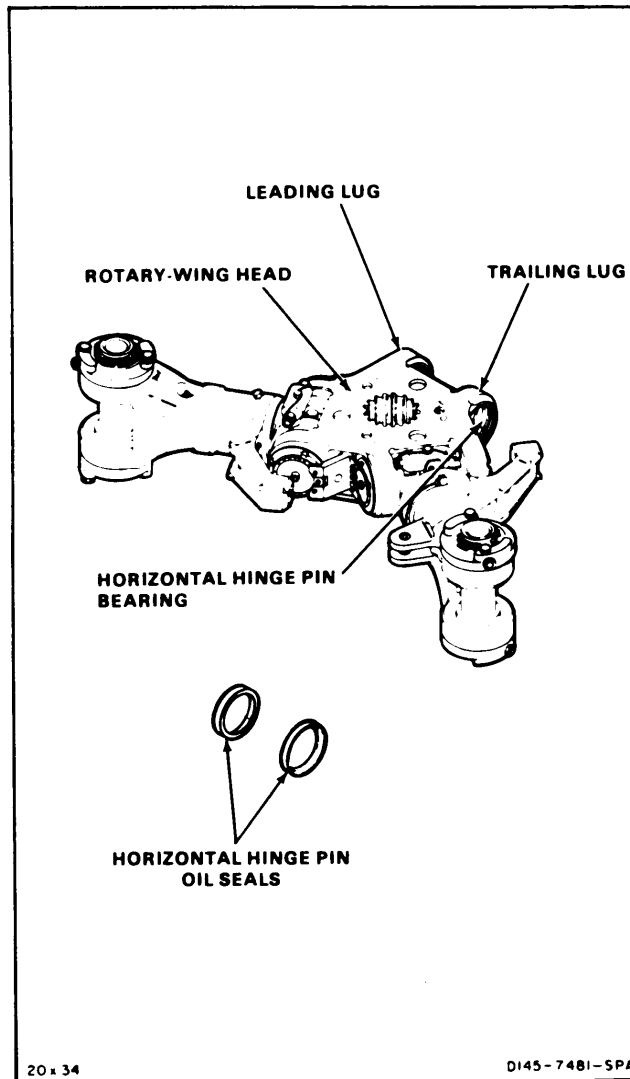**GO TO NEXT PAGE**




5-148 Change 25

**CAUTION**

Do not contaminate horizontal hinge pin bearings. Bearings can be damaged.

**NOTE**

- Procedure is same to install any horizontal hinge pin oil seal. There are six horizontal hinge pin seals on rotary-wing head. Installation of seals on forward head is shown here.
  - Adhesive (E63.1) or sealant (E340.3) authorized specifically for the installation of the horizontal hinge pin seals.
1. Clean seal seat areas (1) on leading and trailing lugs (2 and 3). Use cloth (E120) damp with dry cleaning solvent (E162). Do not wash contaminants into bearings (4). Wear gloves (E186).
  2. Clean seals (5). Use cloth (E120) damp with solvent (E162). Wear gloves (E186).
  3. **Check seal lips (6)** for nicks or scratches.
  4. **Apply** thin, even coat of **adhesive (E63.1) or sealant (E340.3)** to seal seats (1) and metal outside diameter of seals (5). Wear gloves (E186).
  5. **Install bearing and seal pusher (T6) (7)** on trailing lug (3) as follows:
    - a. install seal pilot (8) on bolt (9).
    - b. Position seal (5) on bearing and seal pilot (10) with seal lips (6) facing away from pilot.
    - c. Position bearing and seal pilot (10), and seal (5), on inboard side of lug (3).
    - d. Install bolt (9) in bearing and seal pilot (10).

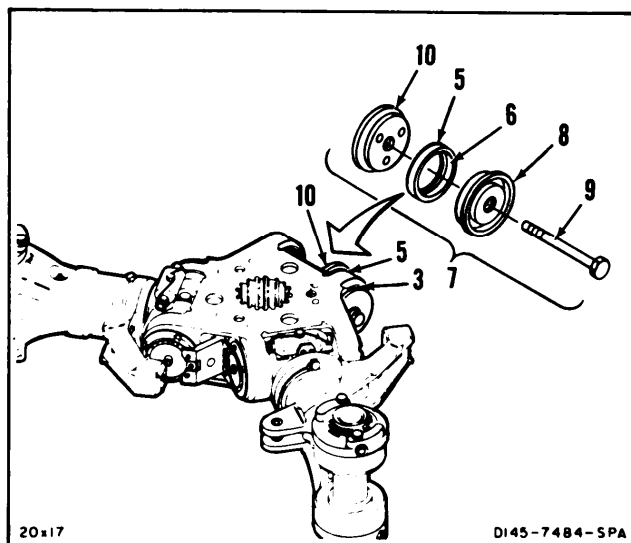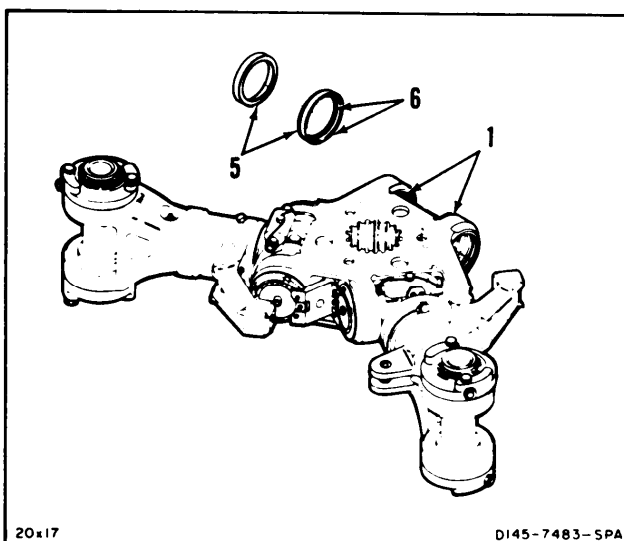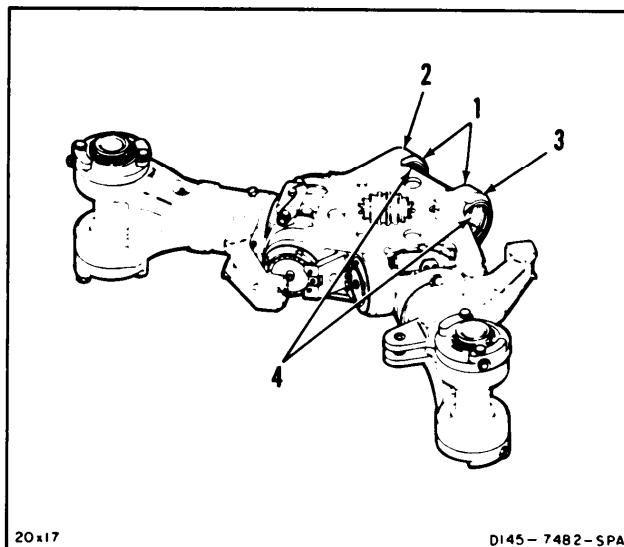


GO TO NEXT PAGE



**CAUTION**

Do not nick, cut, or twist seal.  
Damaged seals can result in oil leakage.

6. Turn bolt (9) to install seal (5).

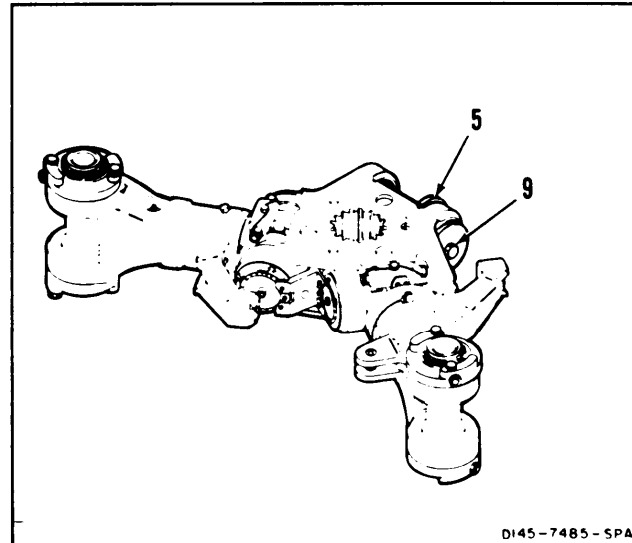

7. Remove bolt (9), seal pilot (8), and bearing and seal pilot (10).


**NOTE**

Seal can extend up to 0.015 inch past lug face if seated all around.

8. Check that seal (5) is flush with lug (3), or extends from lug no more than 0.015 inch.
9. Repeat steps 5 through 8 for seal (5) on leading lug (2).
10. Wipe sealant squeezeout from lug (2 or 3). Use cloth (E120) damp with solvent (E162). Wear gloves (E186).
11. Allow sealant (E340.3) or adhesive (63.1) to cure for 6 hour at 72°F (22°C).

**INSPECT****FOLLOW-ON MAINTENANCE:**

- Install horizontal hinge pin (Task 5-46).  
Install horizontal hinge pin bearing caps (Task 5-41).  
Install pitch varying housing (Task 5-23).

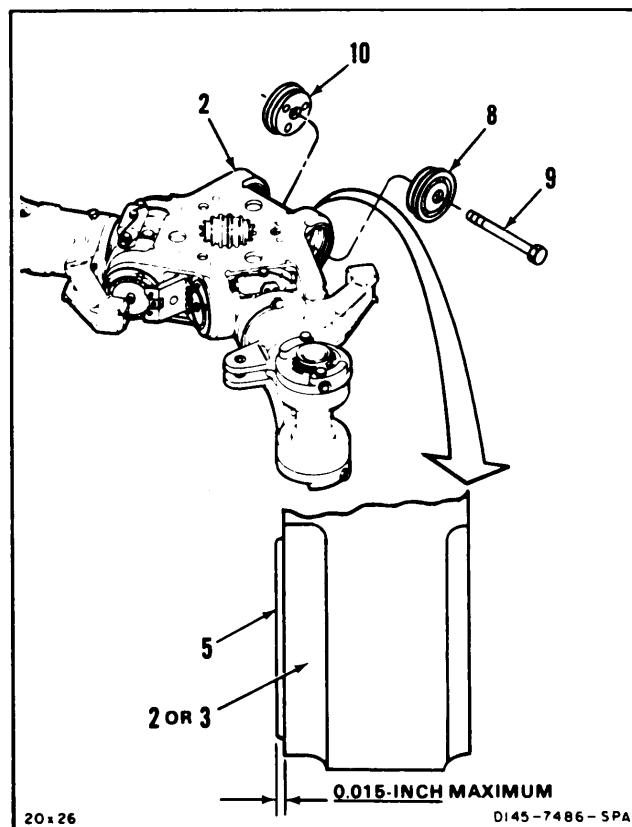**END OF TASK**

## 5-44 REMOVE HORIZONTAL HINGE PIN, PITCH-VARYING HOUSING AND PIN BEARINGS

### INITIAL SETUP

#### Applicable Configurations:

All

#### Tools:

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Horizontal Hinge Pin Pusher (T87)  
Bolt, 3/8-24 X 5-Inches  
Drift (2), Brass, 1/2-Inch Diameter Flattened At  
One End  
Horizontal Hinge Pin Bearing Puller (T9)  
Two Quart Container

#### Materials:

Grease (E190)  
Pencil, Marking (E271)  
Gloves (E186)

#### Personnel Required:


Aircraft Powertrain Repairer (2)

#### References:

Task 5-42

#### Equipment Condition:

Off Helicopter Task  
Horizontal Hinge Pin Bearing Caps Removed  
(Task 5-40)  
Hub Oil Tank Removed (Task 5-15)

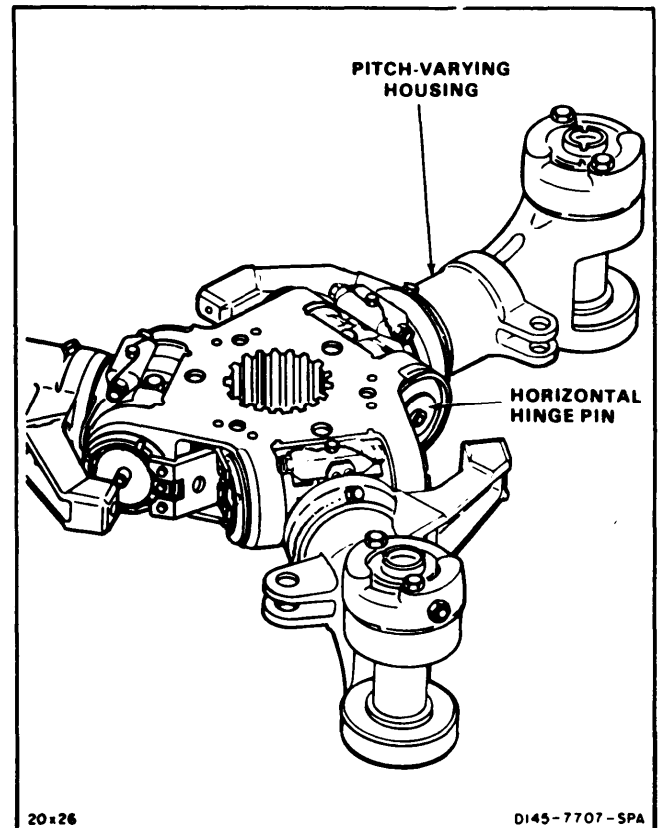

20x26

D145-7707-SPA

### NOTE

Procedure is same to remove any horizontal hinge pin, pitch-varying housing, and pin bearing assembly. There are three horizontal hinge pins, six pin bearings, and three pitch-varying housings on a rotary-wing head. Forward head is shown here.


### REMOVE PITCH-VARYING HOUSING

1. Remove lockwire. Remove plug (1) and packing (2).
2. Remove lockwire. Remove plug (3) and packing (4). **Drain oil** into container.
3. Remove lockwire from tie-bar pin (6). Remove bolt (7), washers (8), and retaining washer (9).

### CAUTION

Do not tap pin down to remove. Retaining bolt nut plate will be damaged.

4. Install 3/8-inch x 24 thread x 5-inch bolt (10) in pin (6) and pull pin from pitch-varying shaft (11). Remove bolt.

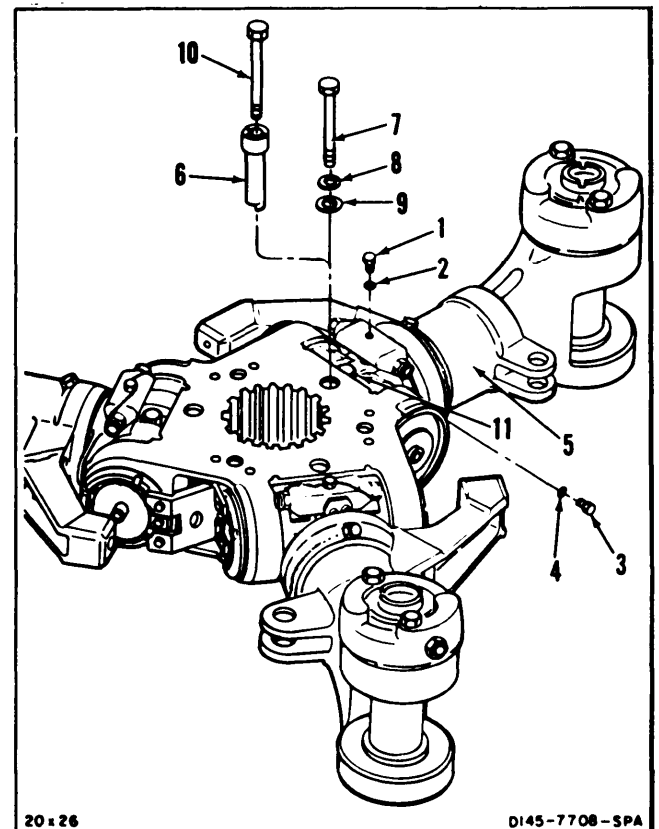

20x26

D145-7708-SPA

**GO TO NEXT PAGE**

## 5-44 REMOVE HORIZONTAL HINGE PIN, PITCH-VARYING HOUSING AND PIN BEARINGS (Continued)

5-44

### CAUTION


Pitch housing and other parts must be installed in same location. Parts must be tagged.

5. Pull pitch-varying housing (5) from pitch-varying shaft (11).

### WARNING

Solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with plenty of water for at least 15 minutes. Get medical attention for eyes.

6. Check that rollers (12) are in cage (13). Clean and position rollers if needed. Use cloth (E120) damp with solvent (E162). Apply grease (E190) to prevent rollers from falling.

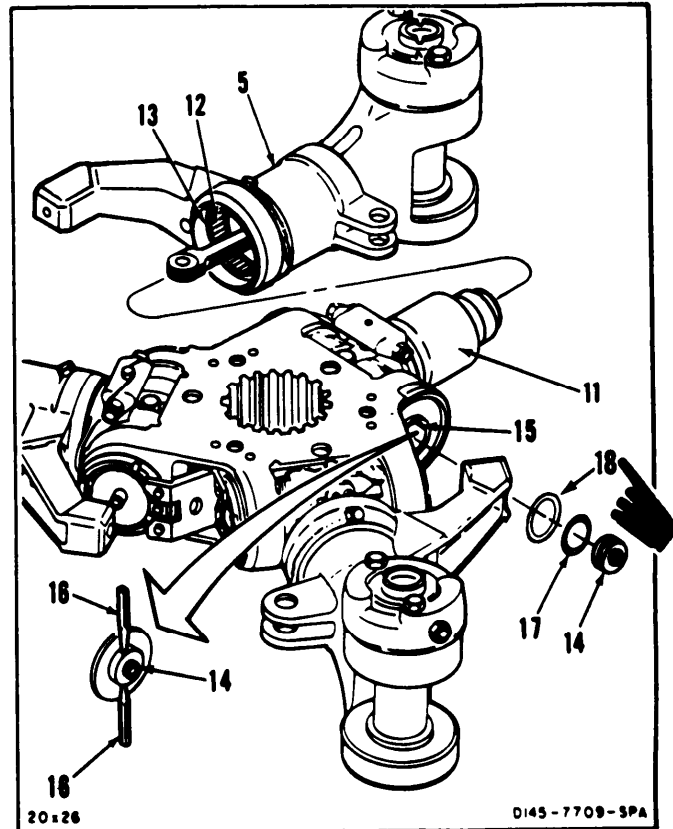

### **REMOVE PITCH-VARYING SHAFT AND HORIZONTAL HINGE PIN**


- 6.1 Remove thrust washer (18) from housing.
7. Pry two end seal plugs (14) from horizontal hinge pin (15). Use two drifts (16). Remove packings (17).

**GO TO NEXT PAGE**

**5-44 REMOVE HORIZONTAL HINGE PIN, PITCH-VARYING HOUSING AND PIN BEARINGS (Continued)****5-44****CAUTION**

Do not install horizontal hinge pins, thrust washers, or bearings in wrong lugs. Binding or excessive play can occur if parts are not installed as removed. Store parts together with caps, shim, and trailing washers.

8. Matchmark horizontal hinge pin (15) so it can be replaced in original position or rotated 180 degrees. Use marking pencil (E271).
9. Remove lockwire from shoulder bolt (17). Remove bolt, washer (18), and special nut (19).

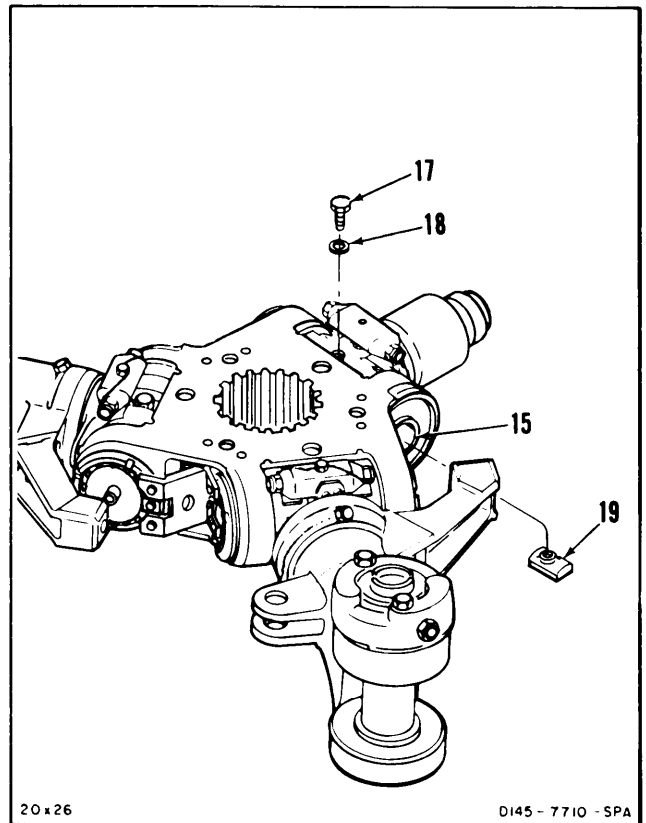**GO TO NEXT PAGE**



## 5-44 REMOVE HORIZONTAL HINGE PIN, PITCH-VARYING HOUSING 5-44 AND PIN BEARINGS (Continued)

### CAUTION


Do not handle horizontal hinge pin. Do not allow dirt or abrasives to contact pin. Dirt or abrasives can contaminate pin. Fingerprints can cause corrosion.

10. Turn jack (20) on horizontal pin pusher (T87) (21) all the way out.
11. **Install pin pusher (T87) (21) over lugs (22 and 23) as follows:**
  - a. Position pin pusher (T87) (21) on lugs (22 and 23), with jack (20), on side of leading lug (22).

### NOTE

On aft rotary-wing head, leading lug faces opposite direction.

- b. Turn jack (20) clockwise until washer (24) is positioned in pin (15), and pad (25) is centered on pin.
12. Turn jack (20) to **remove pin (15)** from lugs (22 and 23).

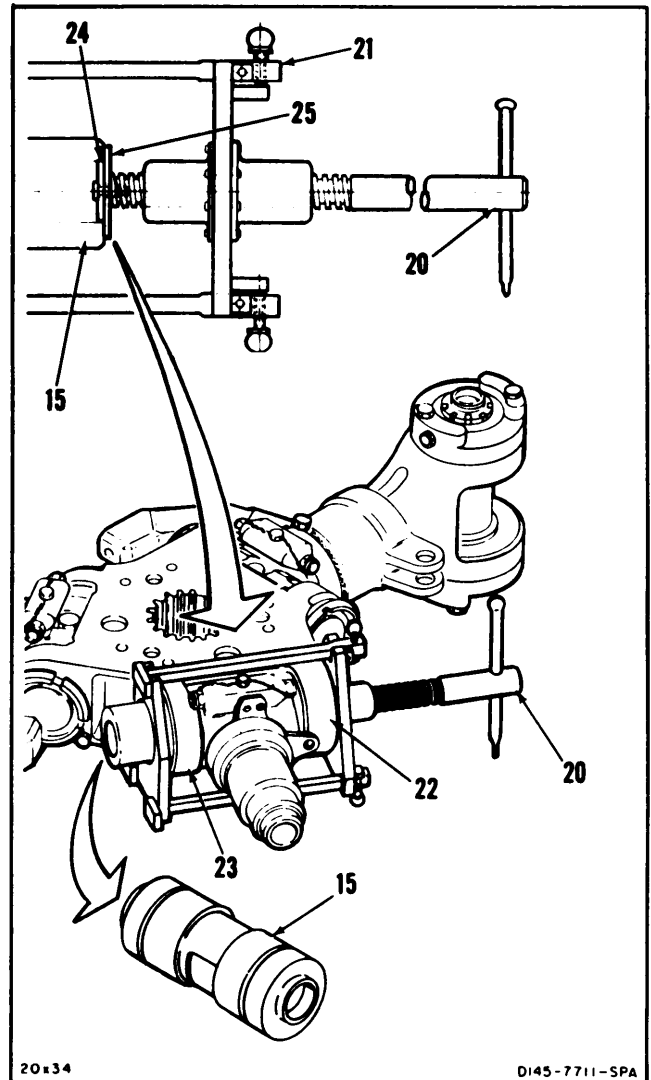

20x34

D145-7711-SPA


**GO TO NEXT PAGE**

**5-44 REMOVE HORIZONTAL HINGE PIN, PITCH-VARYING HOUSING 5-44 AND PIN BEARINGS (Continued)**

**CAUTION**


Do not handle shaft or bearings without gloves. Fingerprints will cause corrosion.

13. Remove pitch-varying shaft (11) from lugs (22 and 23). Wear gloves (E186).
14. Remove seals (26) from lug (22). Remove seals (26) from lug (23) (Task 5-42).

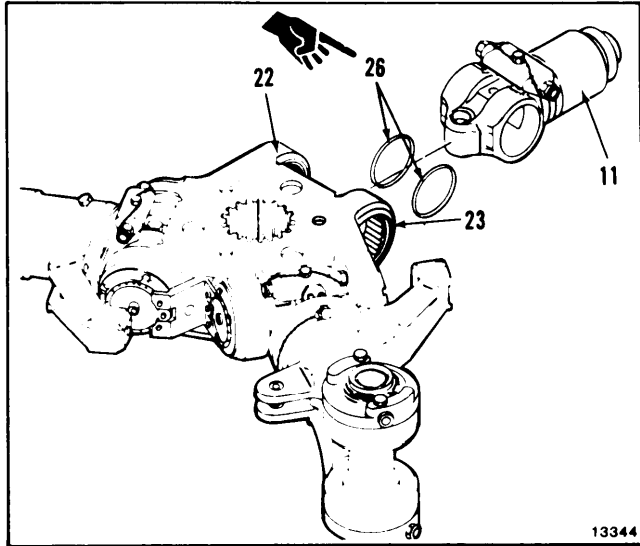

**REMOVE HORIZONTAL HINGE PIN BEARINGS**


15. Install horizontal hinge pin bearing puller (T9) (27) as follows:
  - a. Install bolt (28), washer (29), and pilot (30) at inside of lug (22 or 23).
  - b. Install sleeve (31), washer (32), and nut (33).
16. Tighten bolt (28) to remove bearing (34) from lug (22 or 23).

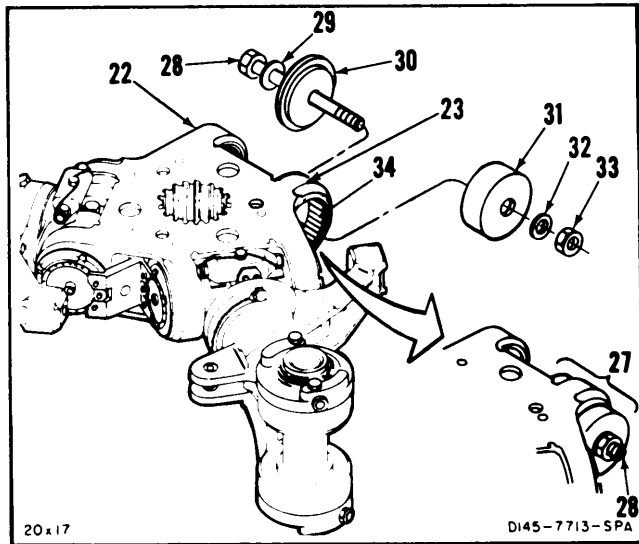

17. Remove nut (33), washer (32), sleeve (31), bearing (34), bolt (28), washer (29), and pilot (30). **Remove bearing** from sleeve. Wear gloves (E186).

**FOLLOW-ON MAINTENANCE:**

None

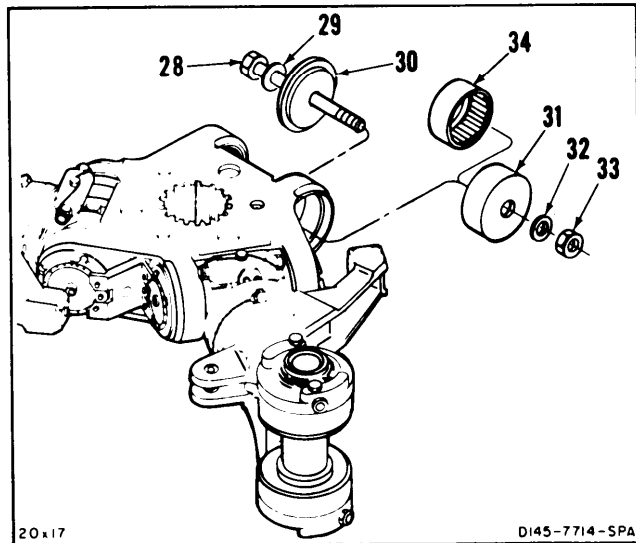

**END OF TASK**

## 5-44.1 INSPECT AND REPAIR PITCH-VARYING SHAFT BORE

5-44.1

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114  
Machinist Scriber, 0.020 Inch Diameter Point

**Materials:**

Gloves (E186)  
Crocus Cloth (E122)  
Abrasive Pads (E2)

**Personnel Required:**


Aircraft Powertrain Repairer

**References:**

TM 55-1520-240-23P  
TM 43-0103


**Equipment Condition:**

Off Helicopter Task

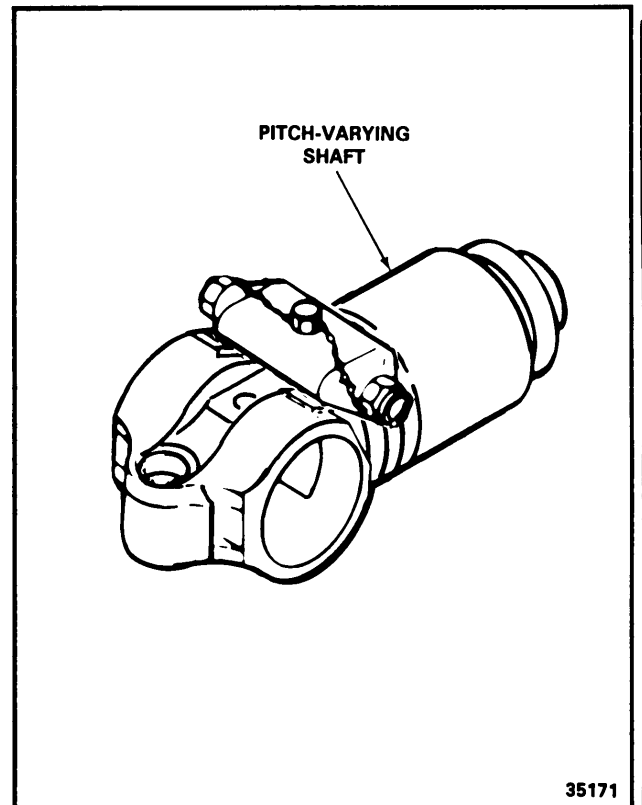**CAUTION**

Do not touch parts with bare hands. Wear gloves (E186). Fingerprints can cause corrosion.

1. Inspect bore liner (1) of pitch-varying shaft (2) as follows:
  - a. Check for rust or corrosion. There shall be no rust or corrosion.
  - b. Check for stains. Stains shall be removable using solvent or light polishing.
  - c. Check for pits with a scribe. Pits shall not be felt as the scribe slides over them. Reject a shaft with pits deeper than 0.012 inch.
2. Repair pits up to 0.012 inch deep as follows:
  - a. Blend out pit into surrounding area with crocus cloth (E122). Remove minimum material from liner (1). Do not leave any sharp edges.
  - b. Polish reworked area. Use abrasive pads (E2).

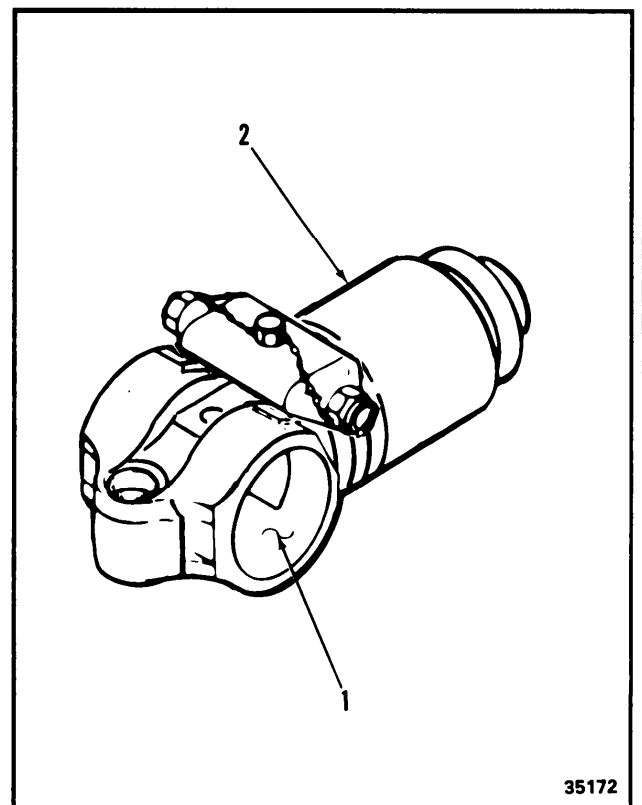

GO TO NEXT PAGE



c. Perform a fluorescent-penetrant inspection of liner (1) (TM 43-0103).

FOLLOW ON MAINTENANCE:

None

**END OF TASK**

5-154.2 Change 32

5-45 INSPECT HORIZONTAL HINGE PIN AND BEARINGS

5-45

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Technical Inspection Tool Kit,  
NSN 5180-00-323-5114
- Drift, 1/8-Inch Diameter.
- Machinist's Scribe, 0.020 Inch Diameter Point

**Materials:**

- Gloves (E186)
- Alcohol (E64)
- Dry Cleaning Solvent (E162)
- Naphtha (E245)
- Oil (E254)
- Primer (E292)
- Abrasive Paper (E13)
- Cloth (E120)

**Personnel Required:**

- Aircraft Powertrain Repairer
- Inspector

**References:**


- TM 55-1520-240-23P
- TM 55-1500-335-23

TM 1-1520-253-23

MIL-STD-865

**Equipment Condition:**

Off Helicopter Task

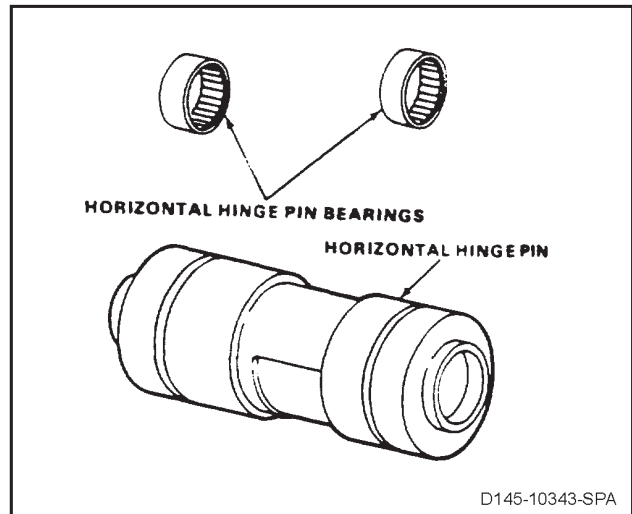

**CAUTION**

Do not touch parts with bare hands. Wear gloves (E186). Fingerprints can cause corrosion.

**NOTE**


Only shotpeened hinge pins (with **41**) shall be installed. Look for the letters SP following the serial number or for part number 114R2196-6 or 114R2197-5 or 114R2197-7.

**CAUTION**

Horizontal hinge pins with serial numbers of UW2407 and prior that do not have a suffix "A" vibro engraved after the serial number with total time since new of 4800 flight hours or more must be replaced.

1. Inspect shaded areas of horizontal hinge pin (1) as follows:


- a. Check for rust or corrosion. There shall be no rust or corrosion.

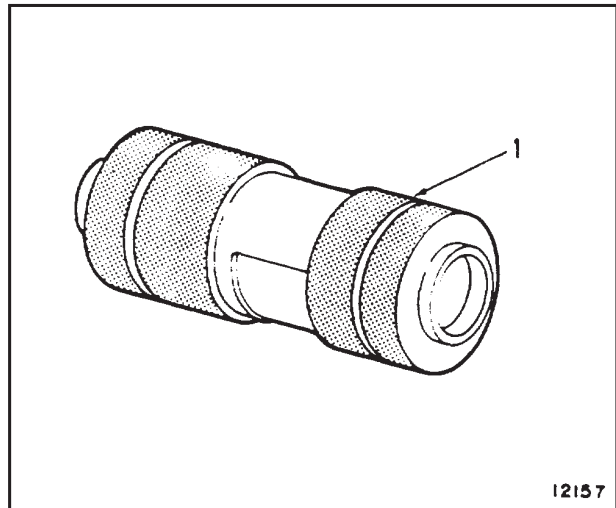

- b. Check for stains. Stains shall be removable using solvent or light polishing.
- c. Check for grinding, honing, or polishing marks. Use scribe. Marks shall not be felt as scribe slides over them.

**GO TO NEXT PAGE**


- 2. Check critical chromium-plated areas (2) of horizontal hinge pin (1) for pits, dents, nicks, scratches, scuffs, rust, or corrosion. Critical chromium-plated areas (2) shall have none of these defects.

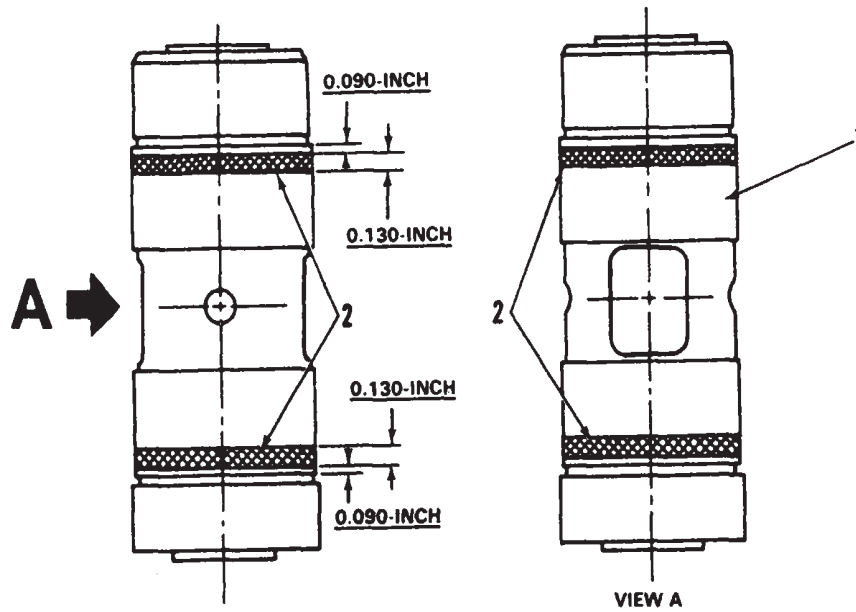

D145-10345-SPA

GO TO NEXT PAGE

3. Check critical carburized areas (3) of horizontal hinge pin (1) for pits, dents, nicks, scratches, scuffs, rust, or corrosion. Critical carburized areas (3) shall have none of these defects.
4. Fluorescent inspect entire carburized areas of pin (1) (TM 43-0103). Replace any pin with cracks.
5. Inspect all areas of pin (1), except critical areas (steps 2 and 3) as follows:
  - a. Check for pits. Pits shall not be greater than 0.030-inch wide, or 0.030-inch deep. There shall be no more than three pits in a 0.25-inch circle.
  - b. Check for dents or nicks. Dents or nicks shall not be more than 0.060-inch wide nor 0.010-inch deep.
  - c. Check for scratches or scuffs. Scratches or scuffs in direction around pin (1) shall not be more than 0.50-inch long. Scratches or scuffs in direction of length of pin shall not be more than 1.0 inch long. Scratches may not be more than 0.003-inch deep, nor 0.006-inch wide.

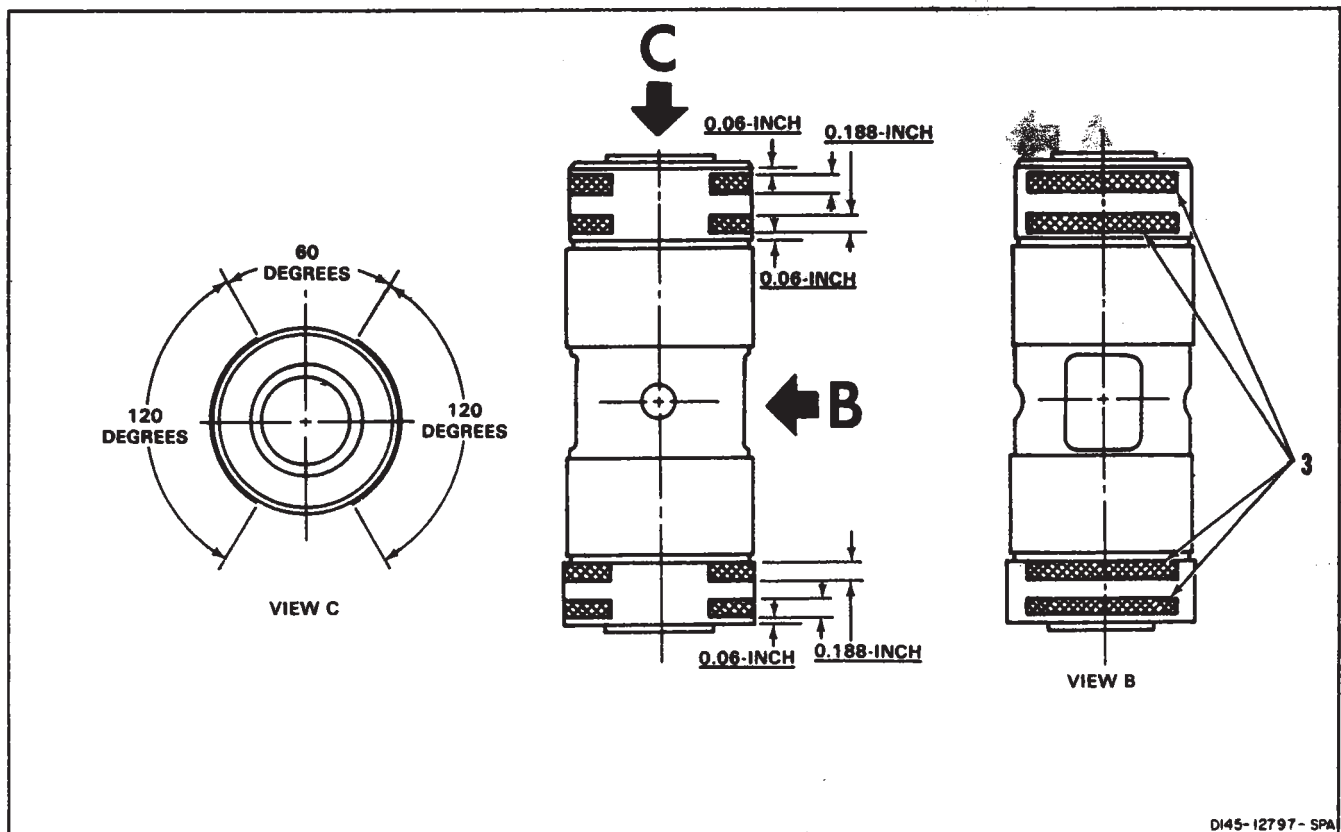

DI45-12797-SPA

GO TO NEXT PAGE

**NOTE**

A worn cage which permits rollers to be loose or fall out is not cause for bearing rejection.


6. Inspect bearings (4) as follows:

- a. Check bearings (4). There shall be no cracks, steel debris, spalling, damage or corrosion.

**NOTE**

Nicks, scratches, pitting, and discoloration on non-working surfaces are allowed. Fine copper or steel residue from the thrust washer is considered normal.


- b. Check that bearings (4) turn freely without roughness.
- c. Check for damaged cages (5). These are not permitted.
- d. Tap out several rollers (6). Use drift through oil hole in bearing (4).
- e. Check for smearing, indentations, or corrosion in raceways (7) or on rollers (6). These are not permitted.
- f. Check for flaked or spalled load-carrying surfaces. These are not permitted.
- g. Install rollers (6).

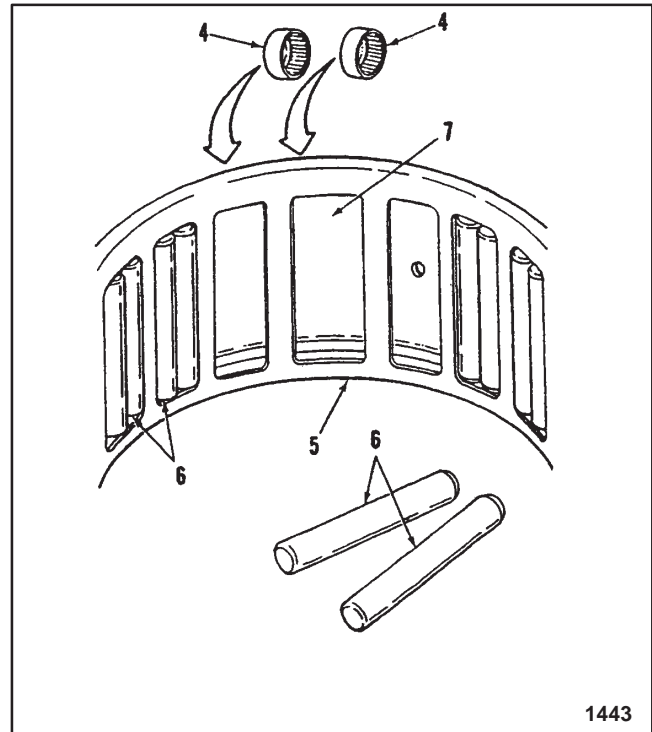

1443

7. Inspect horizontal hinge pin tie bar slot and chamfer around slot as follows:

- a. Using 10X magnification, examine the horizontal hinge pin tie bar slot 0.18 inch radii and 0.10 inch width areas adjacent to radii (8 places per pin) for gouges, nicks, scratches, dents, scuffs, and cracks.
- b. Using 10X magnification, examine the 0.045 inch x 45 degree chamfer around slot (2 places per pin) for gouges, nicks, scratches, dents, scuffs, and cracks.
- c. Gouges, nicks, scratches, dents, or scuffs in excess of 0.010 inch in depth are not allowed.
- d. If gouges, nicks, scratches, dents, or scuffs that are less than 0.010 inch in depth are found, the following rework procedure shall be followed:

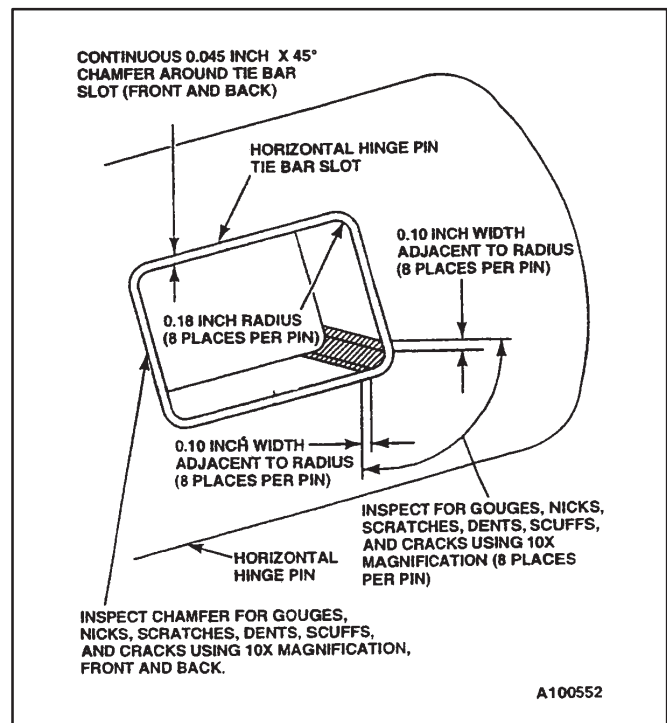

A100552

**GO TO NEXT PAGE**

**WARNING**

Oil (E254) is toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

1. Blend and polish the discrepant areas to remove gouges, nicks, scratches, dents, and scuffs using 400 grit abrasive paper (E13) moistened with lubricating oil (E254). The blending and polishing shall be performed by hand. No power tools allowed. Provide a smooth transition to the adjacent undamaged surfaces. Do not increase the present depth in the damaged areas.
2. Nondestructively inspect the reworked area(s) per TM 1-1520-253-23, paragraph 2.8, horizontal hinge pin (MT).

**WARNING**

Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

3. Clean the horizontal hinge pin using a clean cloth, moistened with dry cleaning solvent (E162).

**WARNING**

Isopropyl alcohol (E64) is combustible and poisonous. Do not breathe the fumes. Put on a respirator. Use it only with sufficient external airflow. Keep it away from heat, sparks, or an open flame. If it touches your skin or eyes, immediately flush them with water for at least 15 minutes. Get medical attention for your eyes.

Aliphatic naphtha (E245) is combustible and poisonous. It can cause skin irritation and burns. Use it only with sufficient external airflow. Do not let it touch your skin, eyes, or clothes. If it gets on your clothes, clean them before they are used again. If it touches your skin or eyes, immediately flush them with water for at least 15 minutes. Get medical attention for your eyes.

Epoxy primer (E292) is flammable and very toxic. It can irritate skin and cause burns. Protective clothing or body suit with respirator and eye protection is required if material is to be applied by spraying. Use only in well-ventilated area, away from open flame and excessive heat. In case of contact, immediately flush skin or eyes with plenty of water for at least 15 minutes. Get medical attention for your eyes.

4. Touch-up cadmium plate in the reworked areas in accordance with MIL-STD-865. If brush cadmium plating is not available, clean using isopropyl alcohol (E64) or aliphatic naphtha (E245). Apply primer (E292). Allow to dry.

**NOTE**

Ensure that the replacement horizontal hinge pin assembly is inspected prior to installation.

**FOLLOW-ON MAINTENANCE:**

None

**GO TO NEXT PAGE**

## 5-46 INSTALL HORIZONTAL HINGE PIN, PITCH-VARYING HOUSING, 5-46 AND PIN BEARINGS

### INITIAL SETUP

#### **Applicable Configurations:**

All

#### **Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Bearing and Seal Pusher (T6)  
Torque Wrench, 0 to 600 Inch-Pounds  
Torque Wrench, 5 to 50 Inch-Pounds  
Bolt, 3/8-inch x 24 Thread x 5-inches  
Technical Inspection Tool Kit,  
NSN 5180-00-323-5114  
Electric Heat Gun  
Kevlar Gloves (E187)

#### **Materials:**

Solvent (E162)  
Cloth (E120)  
Lubricating Oil (E254)  
Lockwire (E231)  
Grease (E190)  
Antiseize Compound (E75)  
Gloves (E186)  
Temperature Indicating Strips (E413)  
Adhesive (E63.1)

#### **Parts:**

Packings

#### **Personnel Required:**

Aircraft Powertrain Repairer (2)  
Inspector


#### **References:**

TM 55-1520-240-23P

#### **General Safety Instructions:**

#### **WARNING**

Oil (E254) is a skin irritant. If oil gets on skin, wash thoroughly. If oil soaks into clothes, change clothes immediately. Oil gives off fumes that can cause injury to personnel. Use in a well-ventilated area.

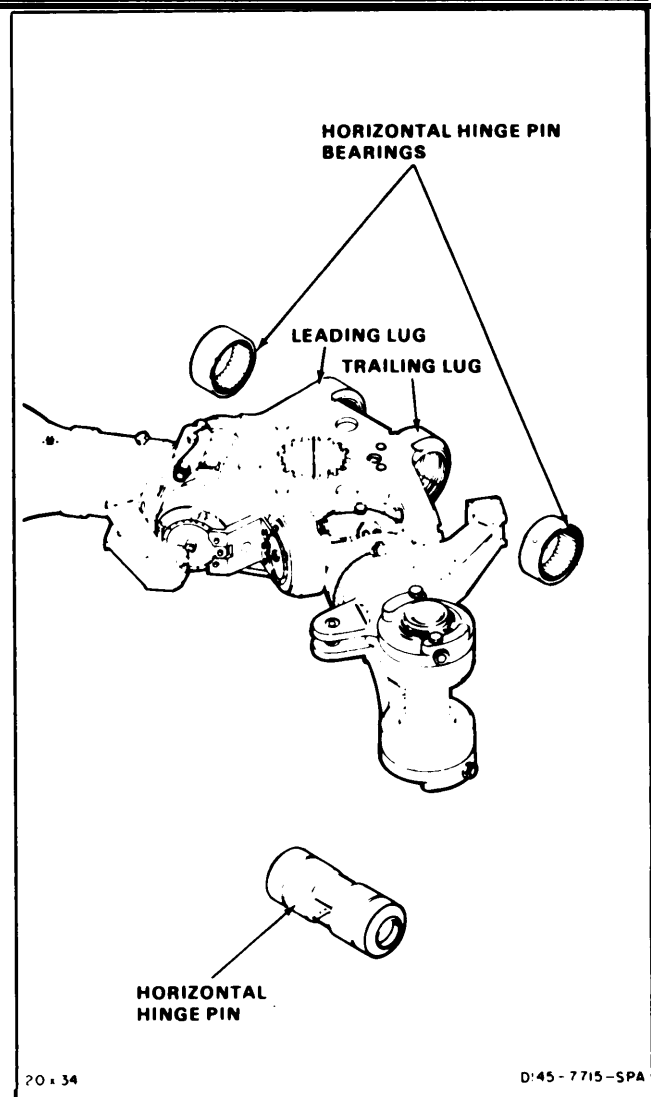

**5-46 INSTALL HORIZONTAL HINGE PIN, PITCH-VARYING HOUSING, AND PIN BEARINGS (Continued)**

**NOTE**

- Procedure is similar to install any horizontal hinge pin, pitch-varying housing, and bearing assembly. There are three horizontal hinge pins, six pin bearings, and three pitch-varying housings on a rotary-wing head. Forward head is shown here.
- When installing new lead and lag horizontal hinge pin bearings, use the preferred bearings 114RS225-1 (lead) and 114RS226-1 (lag).

bearing with matchmarks on lug unless bearing is to be rotated for longer service.

**INSTALL HORIZONTAL HINGE PIN BEARINGS**

**CAUTION**

Horizontal hinge pins with serial numbers of UW2407 and prior that do not have a suffix "A" vibro engraved after the serial number with total time since new of 4800 flight hours or more must be replaced.

1. Heat lugs (1 and 2) to **250°F (121°C)**. Use heat gun. Monitor temperature. Use temperature indicating strips (E413). Wear gloves (E187).
2. Install bearing and seal pusher (T6) (3) as follows:

**NOTE**


Correct bearing must be installed in lug. Leading lug bearing is wider and has smaller inside diameter. Bearing markings must be next to threads on lug after installation.

- a. Coat bearing (4) and inside of lug (1 or 2). Use lubricating oil (E254).
- b. Position identification side of bearing (2) against bearing installation pilot (5).

**NOTE**

If bearing is new, without matchmarks, go to step d.

- c. Position bearing installation pilot (5) so bearing (2) is against outboard, threaded side of lug (3 or 4). Align matchmarks on

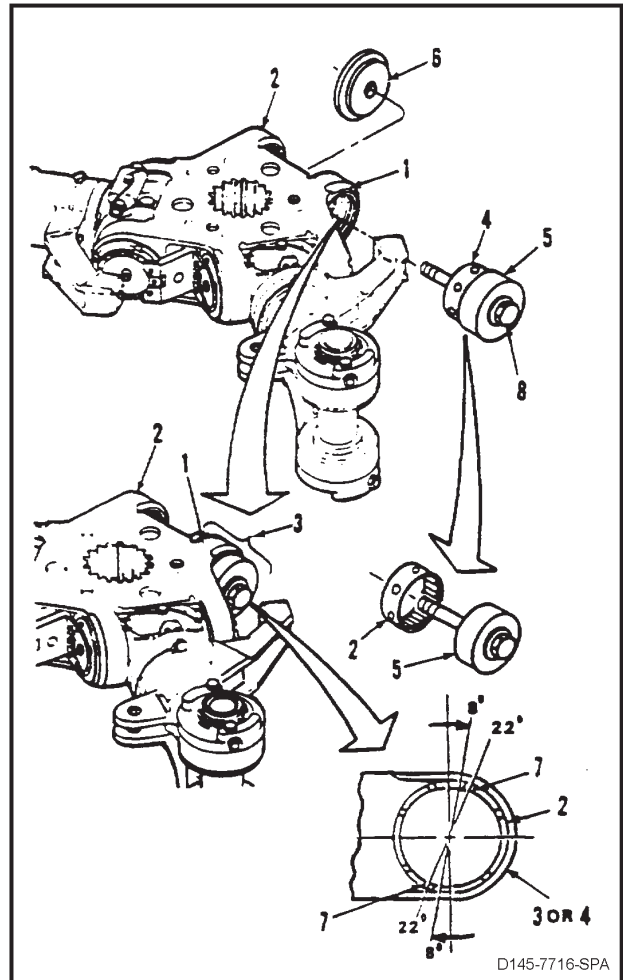

- d. Align bearing (2) without matchmarks so highest and lowest holes (7) are rotated 8 to 22 degrees clockwise from vertical.
- e. Install bearing and seal pilot (6) with wider-diameter bearing side toward lug.
- f. Tighten bolt (8) to install bearing (2).

**GO TO NEXT PAGE**



**5-46 INSTALL HORIZONTAL HINGE PIN, PITCH-VARYING HOUSING, AND PIN BEARINGS (Continued)**

3. Remove bolt (8), bearing installation pilot (5), and seal and bearing pilot (6) from lug (1 or 2).
4. Follow steps 1 and 2 for other lug (1 or 2).
5. Wait until lugs (1 or 2) cool to 150°F (66°C). Install seals (9) (Task 5-43).

**INSTALL PITCH-VARYING SHAFT AND HORIZONTAL HINGE PIN**

6. Pack lips of seals (9). Use grease (E190).

**NOTE**

Only shotpeened hinge pins (with **41**) shall be installed. Look for the letters SP following the serial number or for part number 114R2196-6 or 114R2197-6.

7. Coat outside of horizontal hinge pin (10). Use oil (E254). Wear gloves (E186)
8. Position pitch-varying shaft (11) between lugs (1 and 2). Insert chamfered end of pin (10) into trailing lug (1).
9. Align matchmarks on pin (10) with lugs (1 and 2). Push pin into lugs by hand. Wear gloves (E186).

**NOTE**




Horizontal hinge pin bolt (12) P/N 114R2201-1 must be replaced with a new one (P/N 114R2201-1 or 114R2201-2) anytime the horizontal hinge pin is removed for unscheduled maintenance.

10. Install shoulder bolt (12), washer (13), and special nut (14). Torque bolt to 800-900 Inch-pounds.

**NOTE**

Seal shoulder bolt and washer with adhesive (E63.1). This is to prevent moisture from entering horizontal hinge pin.

11. Lockwire bolt (12) to pitch-varying oil tank (15).

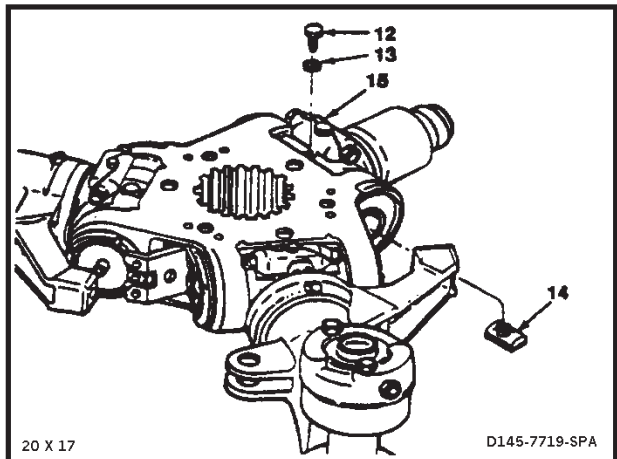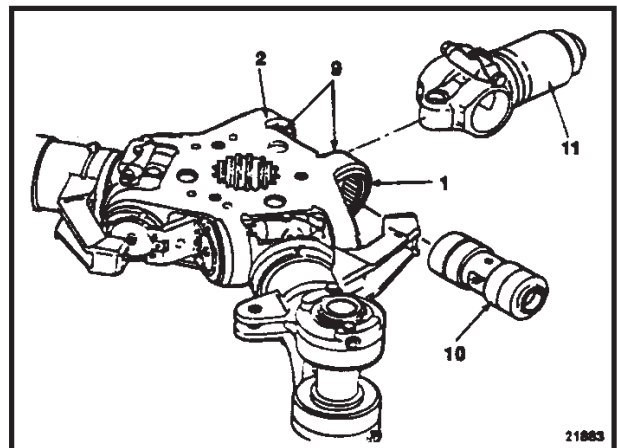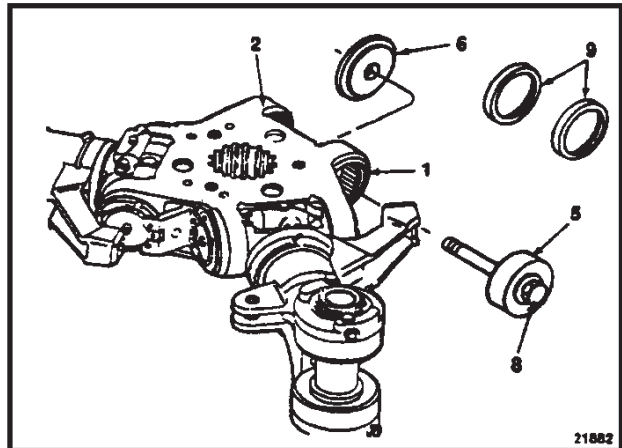

**GO TO NEXT PAGE**

## 5-46 INSTALL HORIZONTAL HINGE PIN, PITCH-VARYING HOUSING, AND PIN BEARINGS (Continued) 5-46

### INSTALL PITCH-VARYING HOUSING

#### CAUTION

Do not apply excess grease (E190) to oil seals. Oil passages can be clogged.

12. Pack space between lips of seal (16). Use grease (E190).
13. Check that bearing surfaces (17) and seal-running surfaces (18) are clean. Coat remaining surfaces. Use lubricating oil (E254).

#### WARNING


Solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with plenty of water for at least 15 minutes. Get medical attention for eyes.

14. Check that bearing rollers (19) are in cage (20). Clean and position rollers, if needed. Use cloth (E120) damp with solvent (E162). Apply grease (E190) to prevent rollers from falling. Use gloves (E186).

#### CAUTION

Do not fold or damage seals during pitch housing installation. Oil leakage can occur if seal is damaged.

15. Install housing (21) and align.

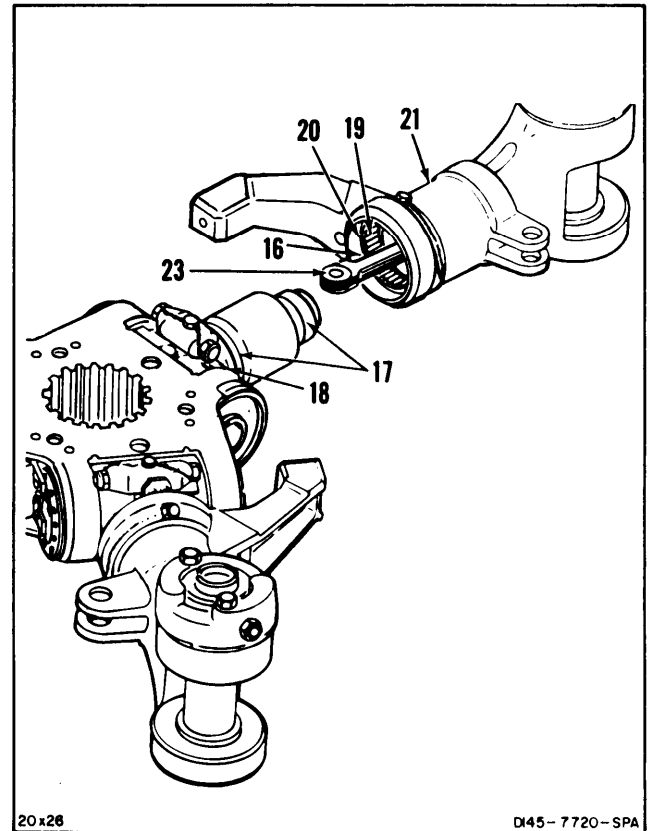

**GO TO NEXT PAGE**

**5-46 INSTALL HORIZONTAL HINGE PIN, PITCH-VARYING HOUSING, AND PIN BEARINGS (Continued) 5-46****WARNING**


Antiseize compound (E75) can form toxic vapors if exposed to flame. Use in well-ventilated area, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

16. Coat tie bar pin (22). Use antiseize compound (E75). Install pin on 3/8-inch x 24 thread x 5-inch bolt (23). Wear gloves (E186).

**CAUTION**

Do not misalign tie bar pin during installation. Rotary-wing head will be damaged at maximum flap angle. Nut plate at pitch shaft will also be damaged.

17. Align pin (22) so slot (24) in pin is aligned with slot (25) in pitch-varying shaft (11). Install pin. Remove bolt (23).
18. Position retaining washer pin (26) over slots (24 and 25). Install retaining washer (27).

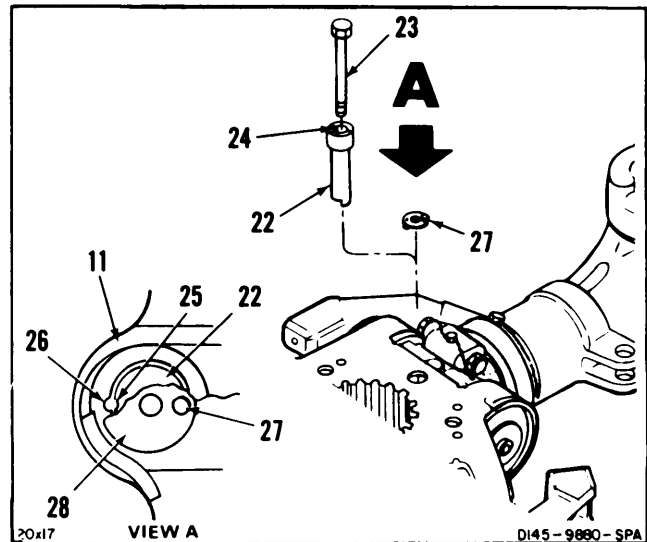

## 5-46 INSTALL HORIZONTAL HINGE PIN, PITCH-VARYING HOUSING, AND PIN BEARINGS (Continued)

### CAUTION

Do not use substitute bolt or washer. Damage to hub can result.

19. Install bolt (28) and washer (29). Torque bolt to **40 inch-pounds**. Lockwire bolt to retaining washer pin (30).

### WARNING

Adhesive (E63.1) can irritate skin and cause burns. Avoid contact with skin, eyes, and clothing. In case of contact, immediately flush skin or eyes with water for at least **15 minutes**. Get medical attention for eyes.

20. Seal retaining washer (27) to shaft (11). Use adhesive (E63.1)

### INSPECT

21. Coat packings (31) and grooves (32) of end seal plugs (33). Use lubricating oil (E254). install plugs in horizontal hinge pin (10).
22. Inspect two thrust washer (34) for cracks, distortion, gouges, scoring, nicks and scratches. If cracks, scoring or distortion are found, reject the washer. Gouges, nicks, or scratches less than 0.002 inches deep may be polished out, provided a minimum thickness of 0.123 inches is not exceeded.


### NOTE

Washers shall have at least four equally spaced radial grooves on each face. Washers with eight grooves on one face and four grooves on the opposite face are acceptable.


23. Position thrust washers (34) with inside diameter chamfer (35) toward pin (10).

### FOLLOW-ON MAINTENANCE:

Install horizontal hinge pin caps (Task 5-41).

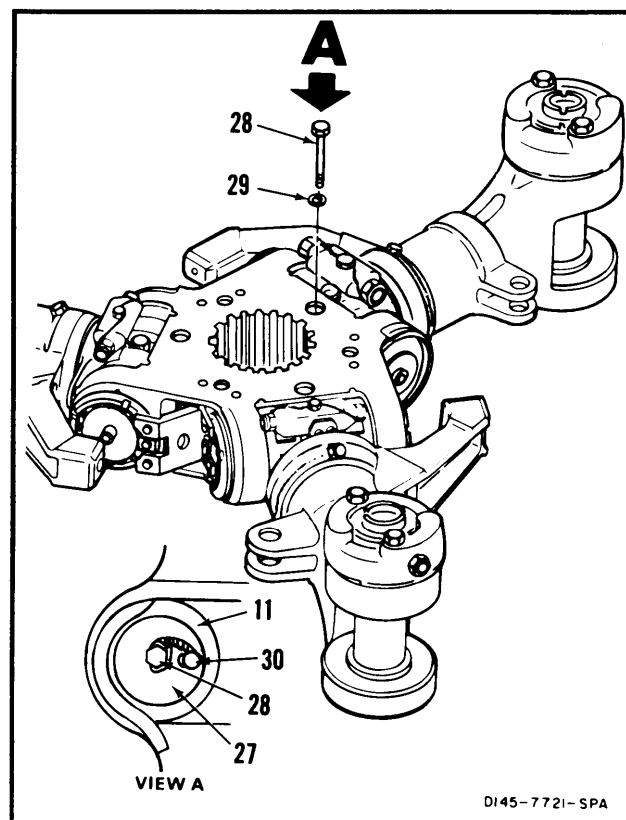

DI45-7721-SPA

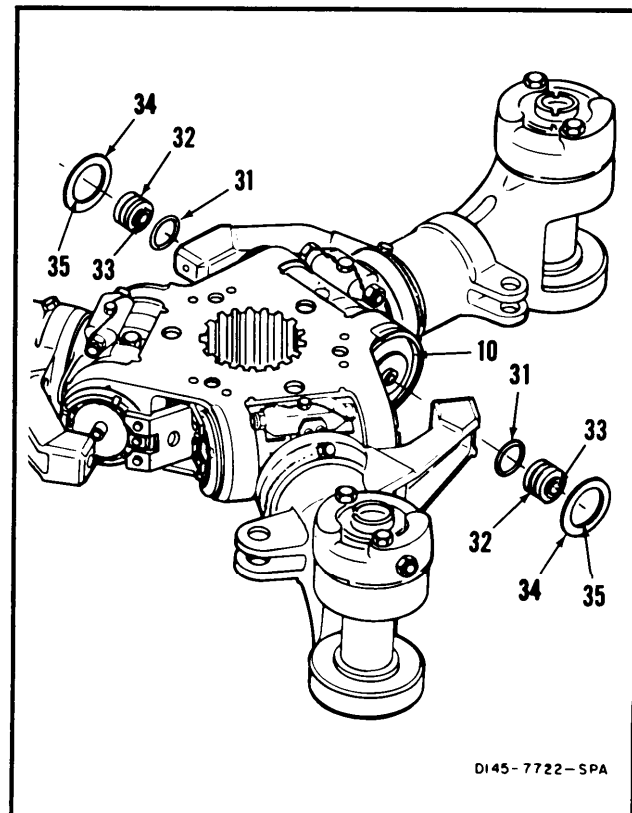

DI45-7722-SPA

**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Technical Inspection Tool Kit,  
NSN 5180-00-323-5114
- Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692
- Torque Wrench, 30 to 150 Inch-Pounds

**Materials:**


- Lockwire (E229)

**Personnel Required:**

- Medium Helicopter Repairer (5)  
Inspector

**Equipment Condition:**

- Battery Disconnected (Task 1-39)
- Electrical Power Off
- Hydraulic Power Off
- Tiedown Line on One Forward and One Aft  
Blade (Task 1-26)
- Pylon or Forward Work Platform Open (Task 2-  
2)
- Aft Droop Stop Shroud Removed (Task 5-48.3)

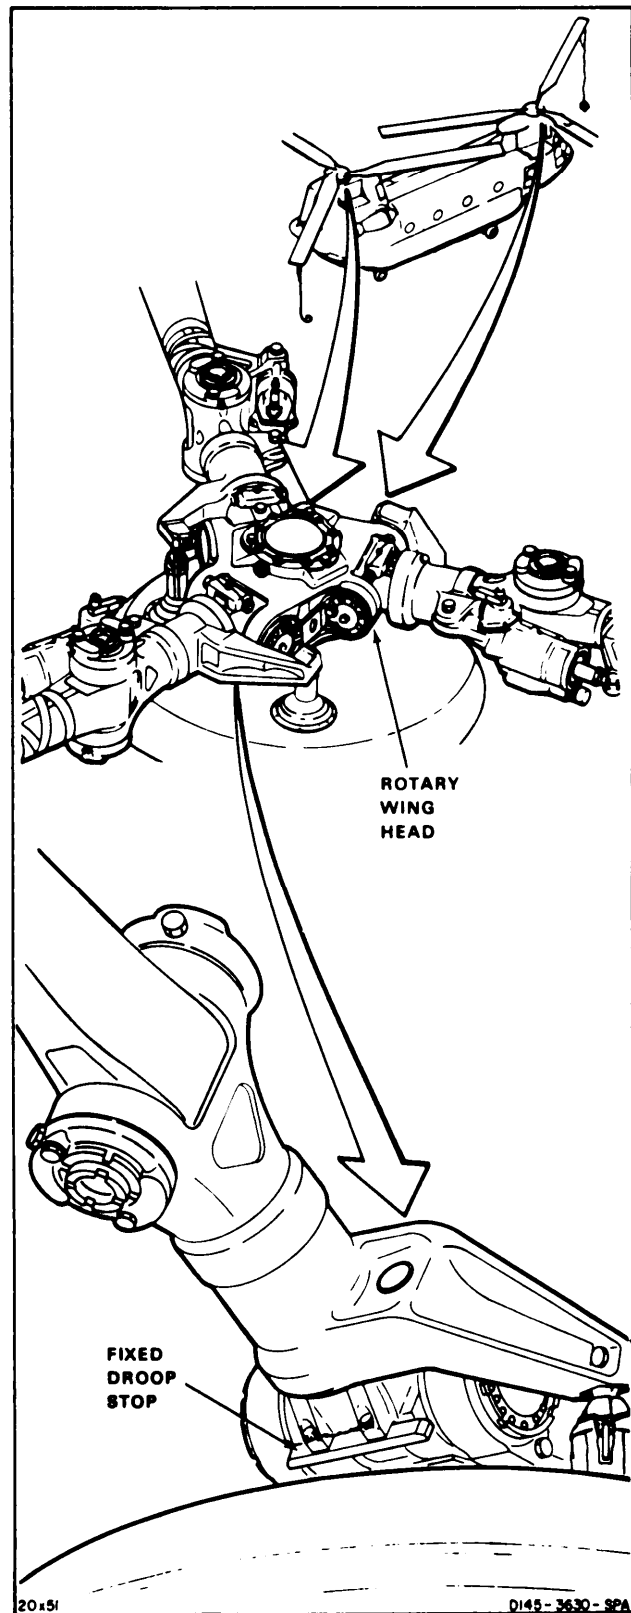

**GO TO NEXT PAGE**

5-164 Change 14

**5-47 INSPECT ROTOR HEAD FIXED DROOP STOPS (Continued)****5-47****NOTE**

Procedure is same to inspect all six fixed droop stops. Forward fixed droop stop is shown here.

1. Turn rotor blades (1) until blade is centered over tunnel (2). Use two tiedown lines (3) to turn and tie down blades.


**WARNING**

**Do not lower blades without warning. Injury to personnel can occur if blade is lowered while inspection is in progress.**

2. Have helpers lift blade (1) until fixed droop stop (4) is clear of hub (5).
3. **Check fixed droop stop (4) for dents where droop stop contacts hub (5).** Dents shall not exceed 0.012 inch in depth.
4. **Remove lockwire from bolts (6). Torque bolts to 70 inch-pounds.**
5. Lockwire bolts (6). Use lockwire (E229).
6. Have helpers lower blade (1).

**FOLLOW-ON MAINTENANCE:**

Close work platform (Task 2-2).

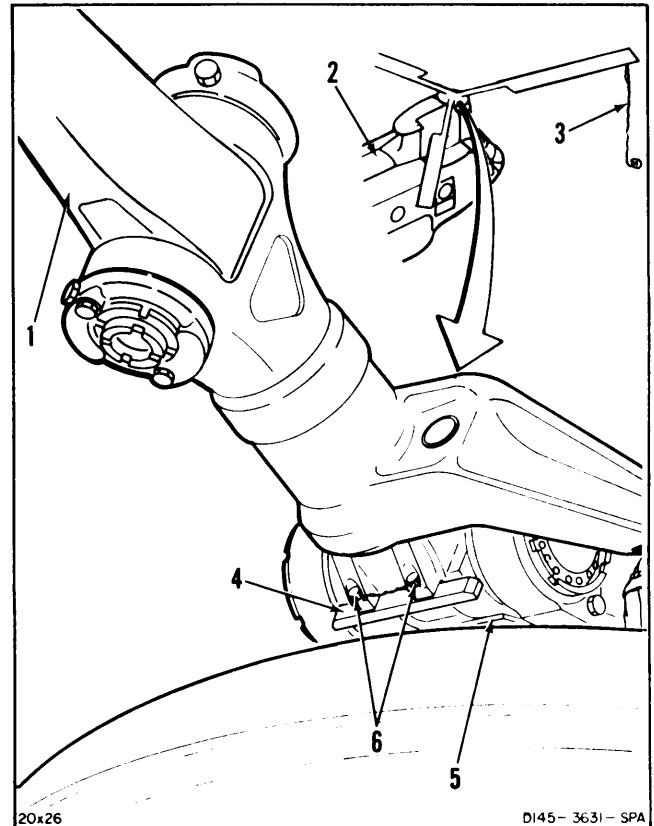**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692
- Torque Wrench, 30 to 150 Inch-Pounds

**Materials:**

- Lockwire (E229)
- Dry Cleaning Solvent (E162)
- Gloves (E186)
- Cloth (E120)

**Personnel Required:**

- Medium Helicopter Repairer (5)
- Inspector

**References:**

TM 55-1520-240-23P


**Equipment Condition:**

- Battery Disconnected (Task 1-39)
- Electrical Power Off
- Hydraulic Power Off
- Tiedown Line Installed on One Forward and One Aft Blade (Task 1-26)
- Forward or Pylon Work Platform Open (Task 2-2)
- Aft Droop Stop Shroud Removed (Task 5-48.3)

**General Safety Instructions:**

**WARNING**

Do not lower blade suddenly. Personnel can be injured if blade is lowered suddenly while droop stop work is in progress.

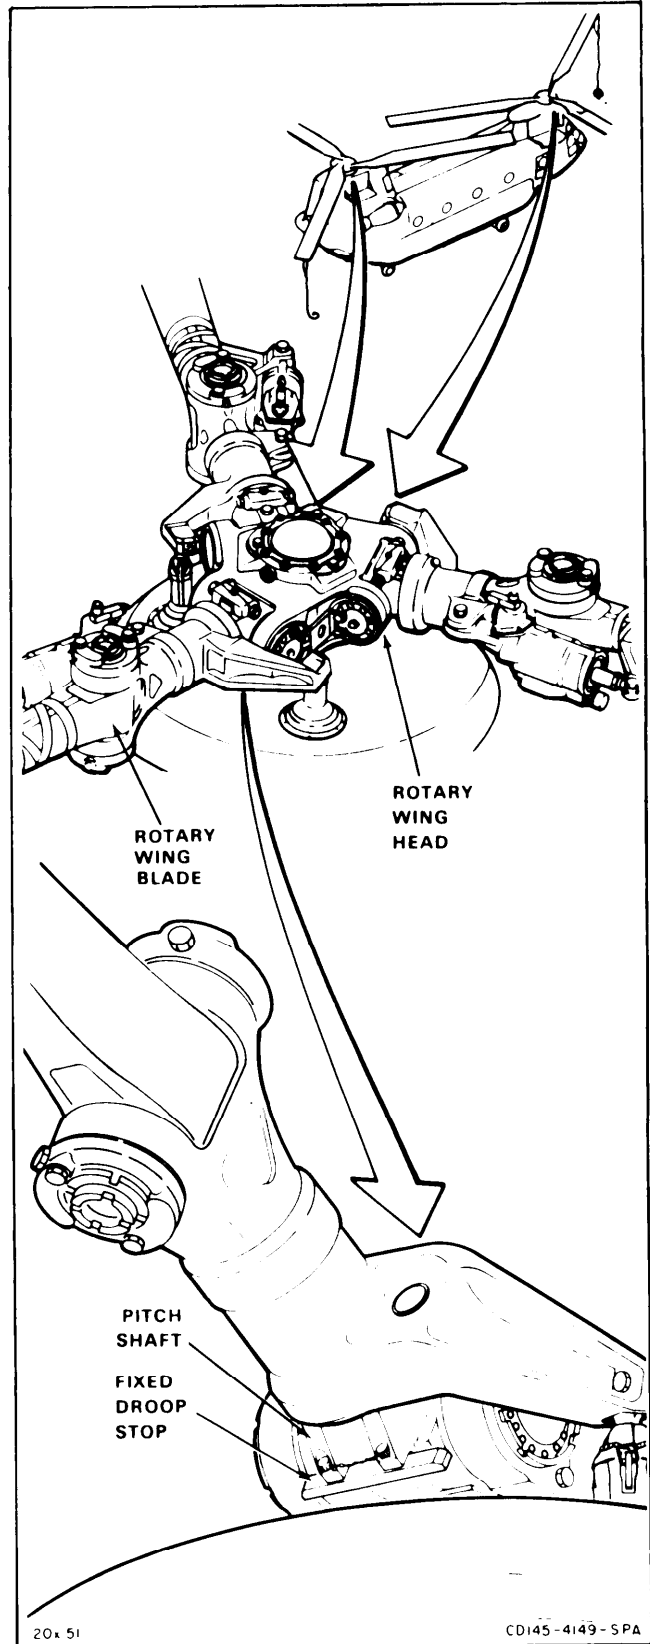

**GO TO NEXT PAGE**

5-166 Change 14

## 5-48 REPLACE FIXED DROOP STOP (Continued)

5-48



**CAUTION**

Forward and aft fixed droop stops are not interchangeable. Helicopter can be damaged if droop stop is installed on wrong head.

**NOTE**

Replacement procedure is similar for forward or aft fixed droop stops. Differences are noted in steps. Replacement of droop stop on forward rotary wing head is shown here.

1. Center blade (1) over fuselage (2). Use tie-down line (3). Tie down one forward and one aft blade.
2. Remove lockwire from two bolts (4). Remove bolts and washers (5). **Hold droop stop (6).**
3. Have helpers lift and support blade (1).
4. **Remove droop stop (6)** from pitch shaft (7).
5. Have helpers lower blade (1).

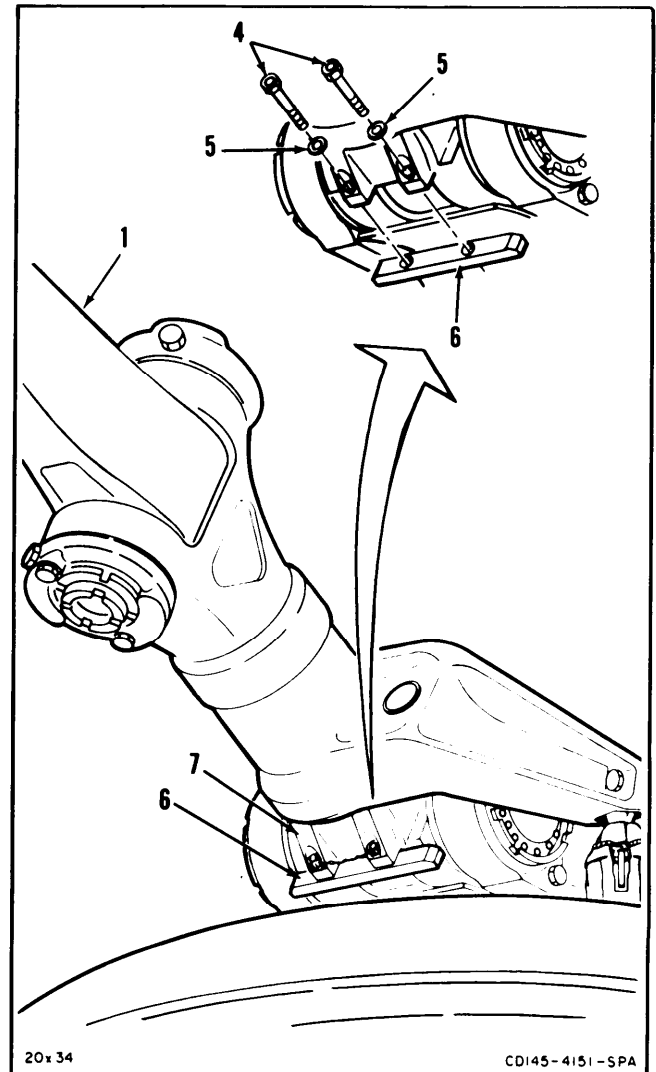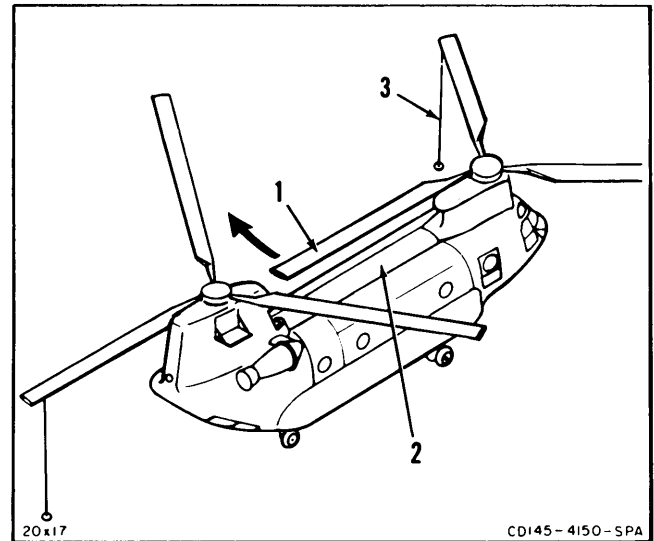

**GO TO NEXT PAGE**



**WARNING**

Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least **15 minutes**. Get medical attention for eyes.

6. Clean droop stop (6) and lugs (8). Use cloth (E120) damp with dry cleaning solvent (E162). Use goggles and gloves (E186).
7. Have helpers lift and support blade (1).


**WARNING**

- The droop stops are installed with "BOTTOM" marking down. The marking may or may not be legible. However, correct installation is determined by proper positioning of chamfers.
- Ensure forward droop stop is installed on fwd head, and aft droop stop is installed on aft head. Forward and aft droop stops are not interchangeable.


**WARNING**

Incorrectly installed droop stops, or droop stops installed on the wrong head, can cause damage to the helicopter and injury to personnel.


8. Position droop stop (6) on lugs (8) with BOTTOM marking (9) down. Ensure droop stop (6) chamfer is upward in the radius of the pitch shaft droop stop boss.

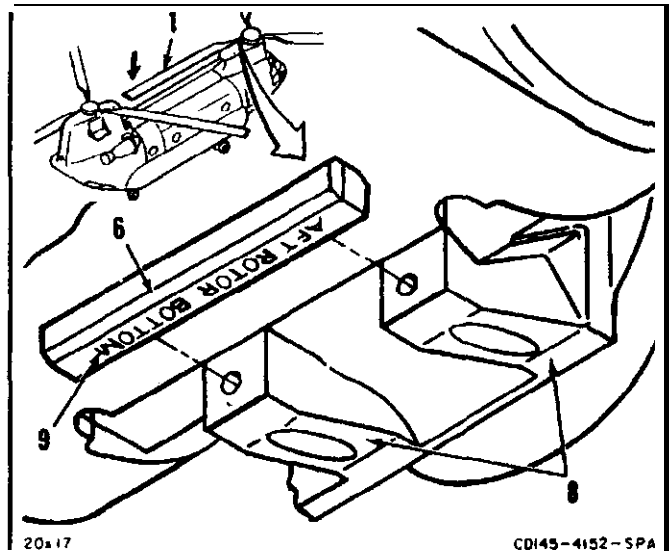

**FWD DROOP STOP INSTALLATION**

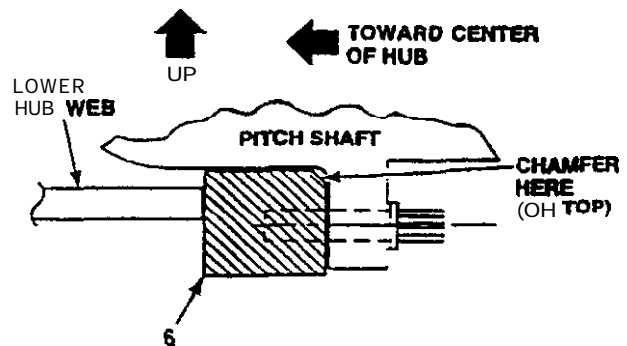


**AFT DROOP STOP INSTALLATION**

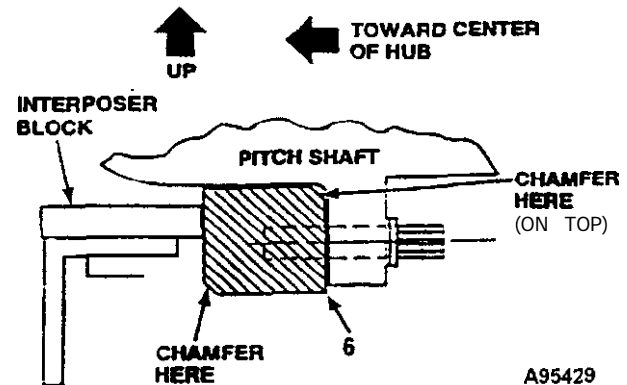


**GO TO NEXT PAGE**

**5-48 REPLACE FIXED DROOP STOP (Continued)****5-48**

11. Have helpers lower blade (1).

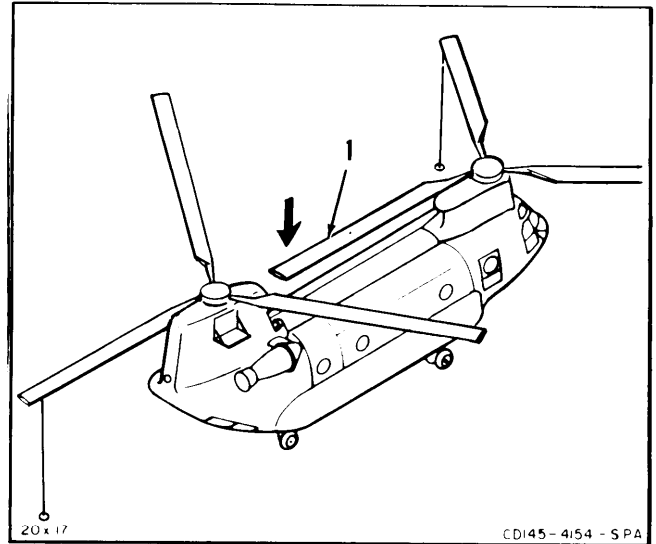

12. Lockwire two bolts (4). Use lockwire (E229).

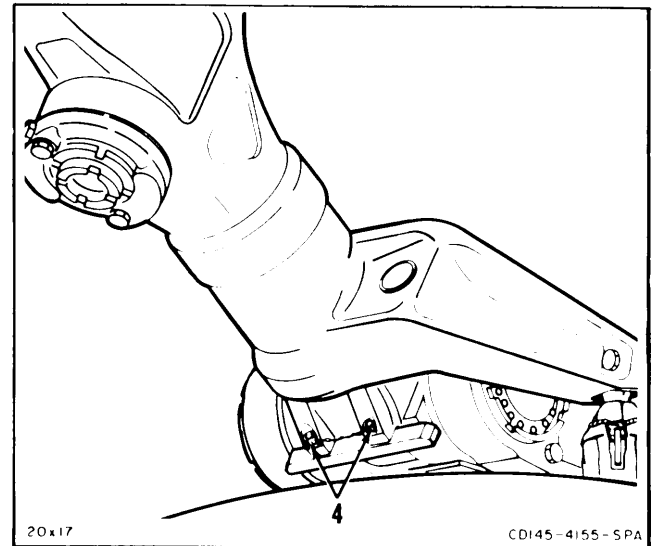**INSPECT****FOLLOW-ON MAINTENANCE:**

- Install aft droop stop shroud (Task 5-48.5)
- Close work platform (Task 2-2).

**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692

**Materials:**


None

**Personnel Required:**

Medium Helicopter Repairer

**Equipment Condition:**


- Battery Disconnected (Task 1-39)
- Electrical Power Off
- Hydraulic Power Off
- Tiedown Line Installed on One Forward and One Aft Blade (Task 1-26)
- Aft Pylon Work Platform Open (Task 2-2)

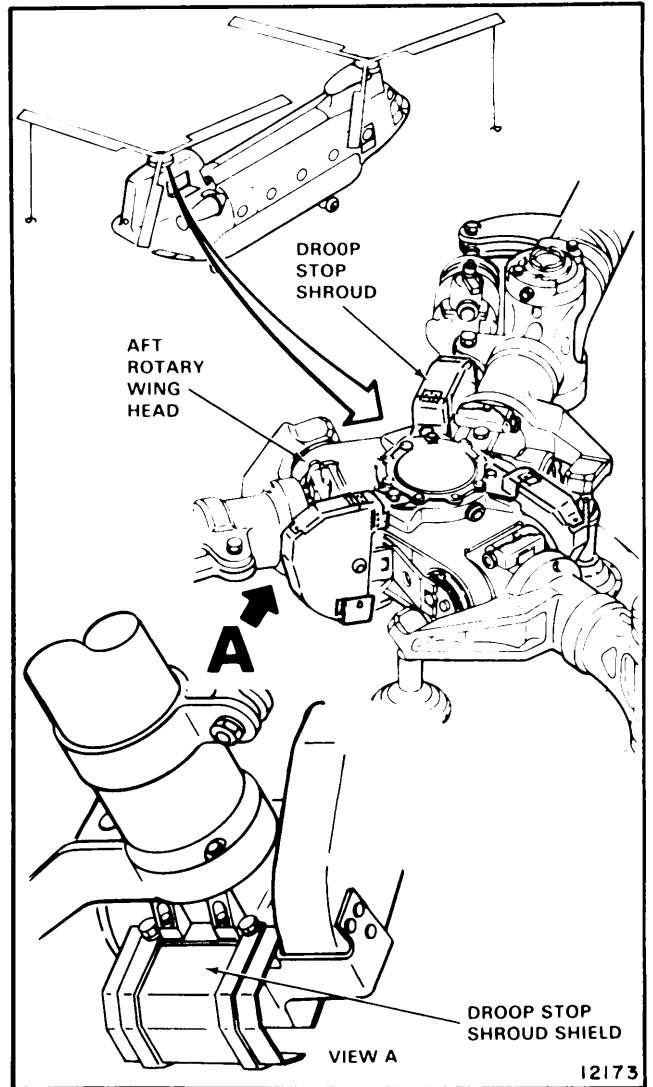

**NOTE**

There are three droop stop shroud shields. Procedure is same to remove any droop stop shroud shield.

1. Remove lockwire. Remove two bolts (1) and washers (2).
2. Remove shield (3) from droop stop

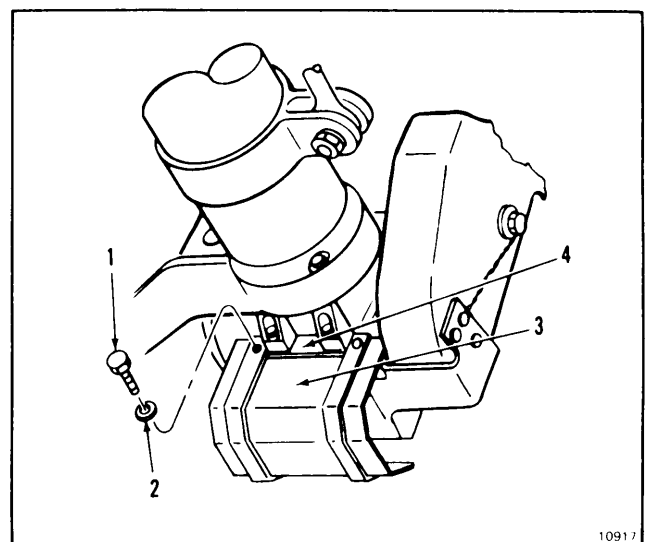


**5-48.1 REMOVE DROOP STOP SHROUD SHIELD (Continued)**

**5-48.1**

FOLLOW-ON MAINTENANCE:

None

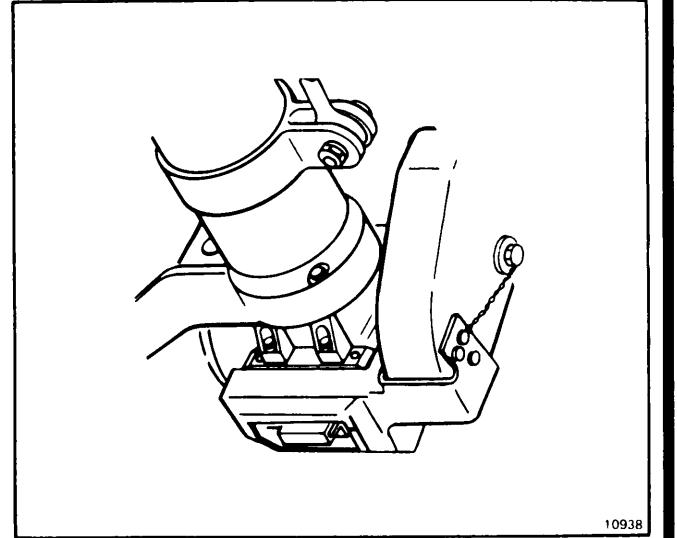

**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692

**Materials:**


None

**Personnel Required:**

Medium Helicopter Repairer

**Equipment Condition:**

- Battery Disconnected (Task 1-39)
- Electrical Power Off
- Hydraulic Power Off
- Aft Work Platform Open (Task 2-2)
- Tiedown Line Installed on One Forward and One Aft Blade (Task 1-26)
- Droop Stop Shroud Shield Removed (Task 5-48.1)

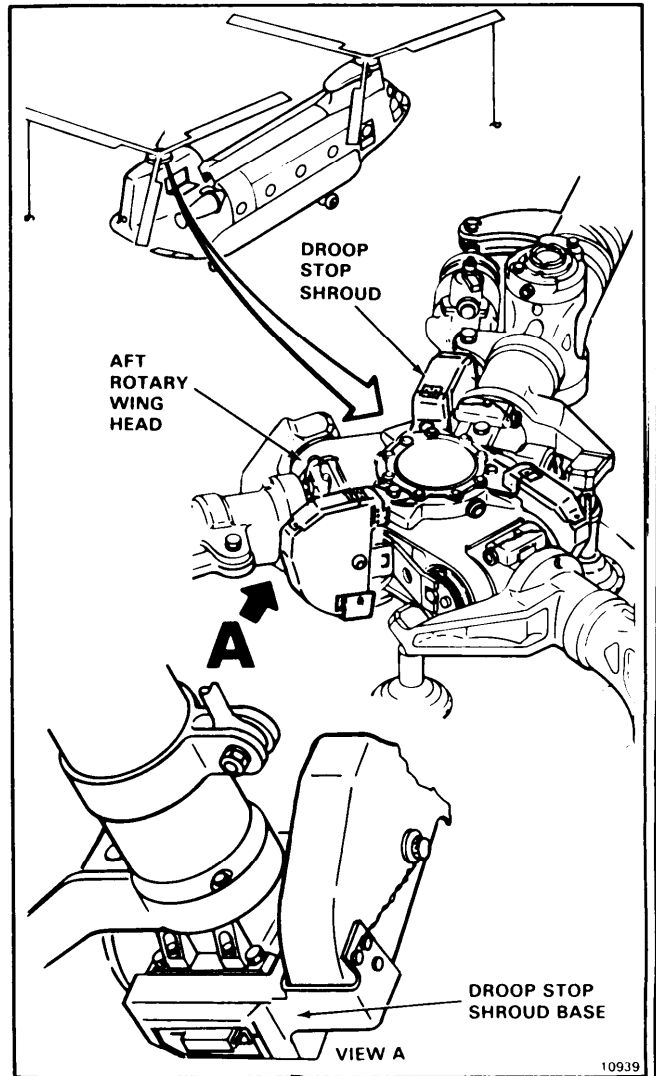

**GO TO NEXT PAGE**

5-170.2 Change 14


## 5-48.2 REMOVE DROOP STOP SHROUD BASE (Continued)

5-48.2

**NOTE**

There are three droop stop shroud bases. Procedure is same to remove any base.


1. Remove four bolts (1) and washers (2) from shroud base (3).
2. Remove lockwire from bolts (4 and 5). Remove bolt (5) and washer (6).

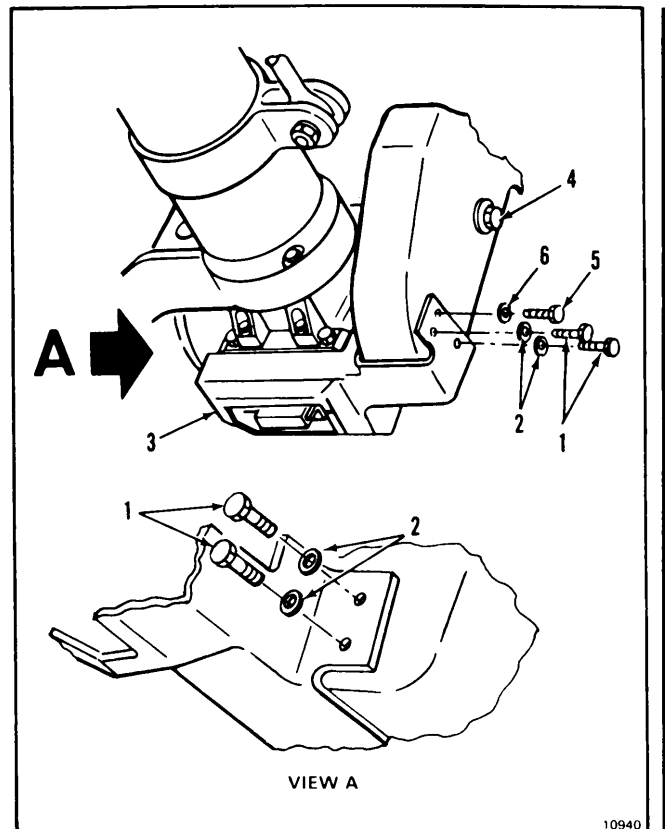

3. Remove two cotter pins (7), nuts (8) washers (9), and bushings (10) from shaft (11).
4. Slide droop stop shroud base (12) from shaft (11) through slots (13). Remove base.

**FOLLOW-ON MAINTENANCE:**

None

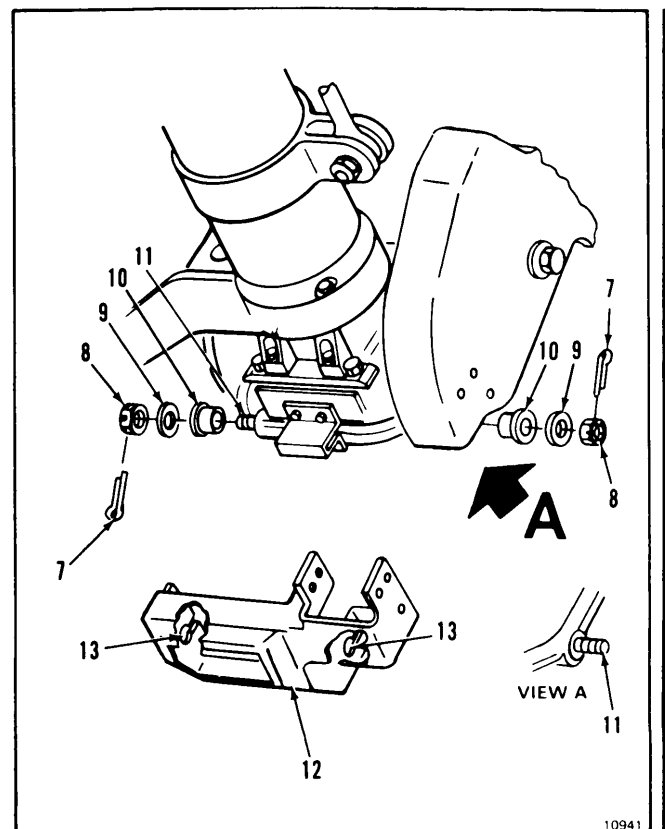**END OF TASK**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692**Materials:**

None

**Personnel Required:**

Medium Helicopter Repairer

**Equipment Condition:**

Battery Disconnected (Task 1-39)


Electrical Power Off

Hydraulic Power Off

Aft Work Platform Open (Task 2-2)


Tiedown Line on One Forward and One Aft  
Blade (Task 1-26)Droop Stop Shroud Shield Removed (Task 5-  
48.1)

Drop Stop Shroud Base Removed (Task 5-48.2)

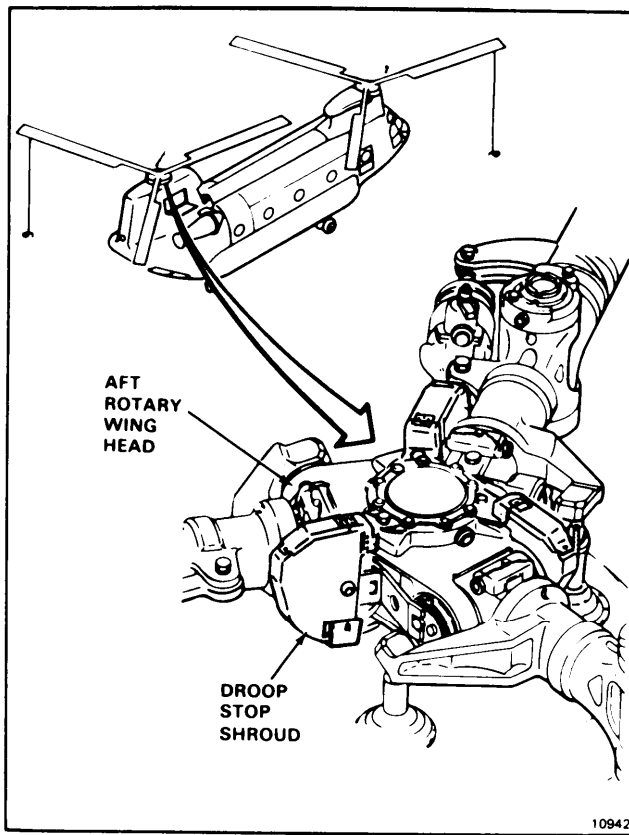**NOTE**

There are three drop stop shrouds.  
Procedure is same to remove any  
shroud.

1. **Remove bolt (1)** and washers (2) and (3) from droop stop shroud (4).
2. **Remove two screws (5)** and washers (6) and (7) from shroud (4).
3. **Remove shroud (4)** from rotor head (8).

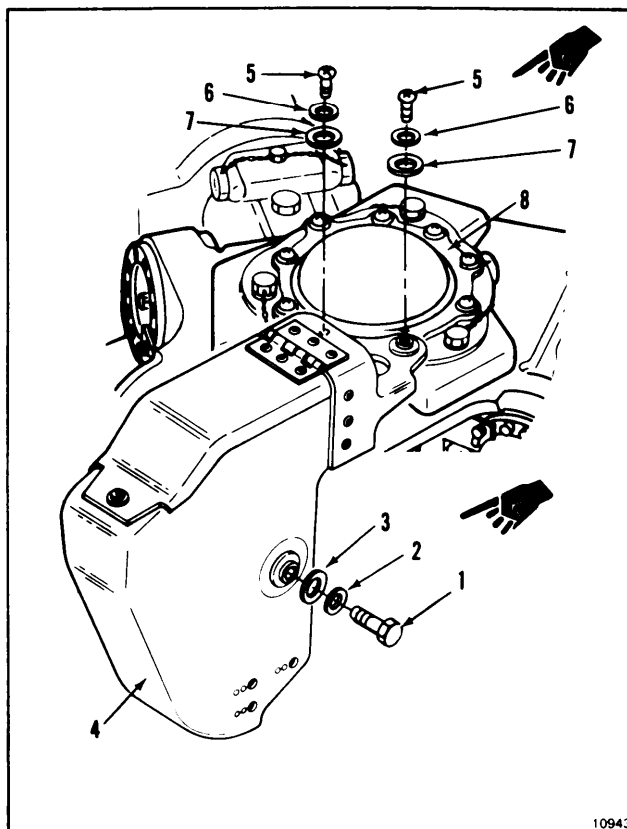
**GO TO NEXT PAGE**

5-170.4 Change 18

**5-48.3 REMOVE DROOP STOP SHROUD (Continued)****5-48.3**

FOLLOW-ON MAINTENANCE:

None

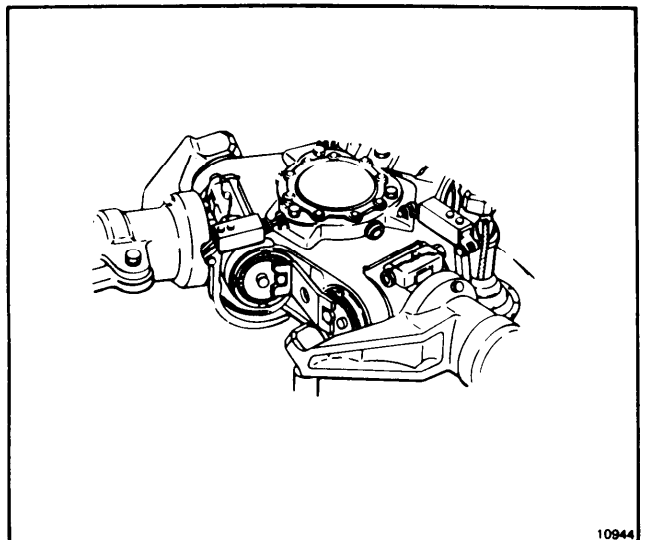

10944

**END OF TASK**



INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

As Required

**Materials:**

As Required

**Personnel Required:**

Aircraft Structural Repairer  
Inspector

**References:**

- TM 55-1520-240-23P
- TM 55-1500-204-25/1
- Task 2-325
- Task 2-326

**Equipment Condition:**

As Required


**General Safety Instructions:**

As Required

**NOTE**

Procedure is same to repair droop stop shroud, base, or shield.

Three droop stop shrouds are located on the aft rotor head. They are manufactured from 10 ply BMS 8-79 glass fabric, pre-pregnated type 1581 or 7781.

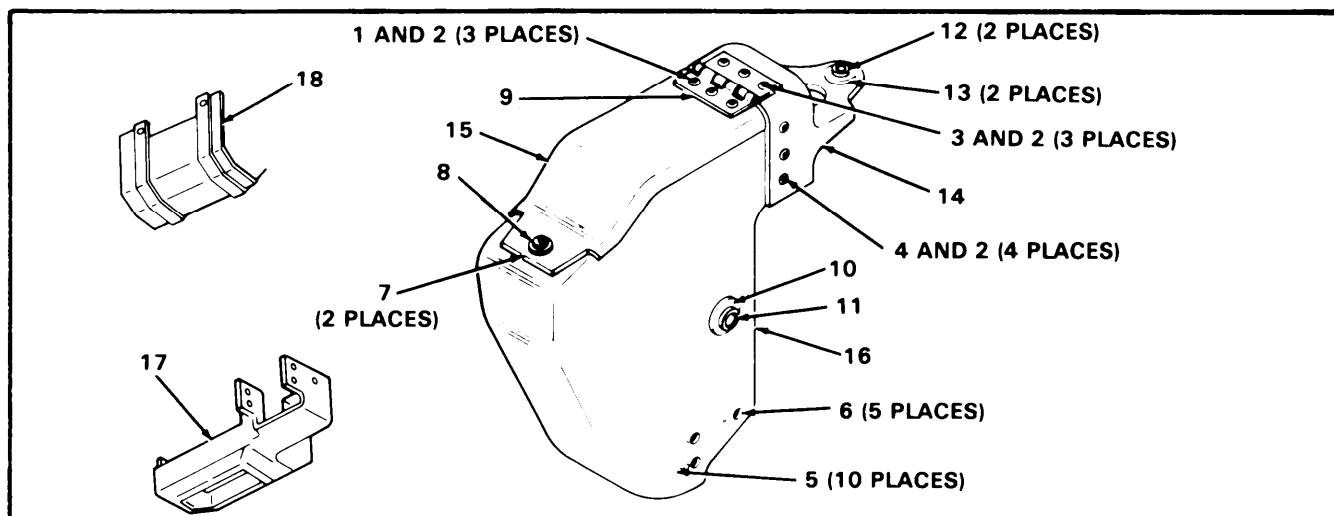

INDEX NO.	NOMENCLATURE	ORIGINAL MATERIAL	REPAIR MATERIAL	REPAIR TASK
1	RIVET	M7885-2-5-4		2-326 AND NOTE B.
2	WASHER	MS27183-6		2-326 AND NOTE B.
3	RIVET	M885-2-5-7		2-326 AND NOTE B.
4	RIVET	M885-2-5-5		2-326 AND NOTE B.
5	RIVET	MS20426A3		2-326 AND NOTE B.
6	NUTPLATE	MS21071-4		NOTE B.
7	RIVET	M7885-3-4-4		2-326 AND NOTE B.
8	RECEPTACLE	BACR11X3		NOTE B.
9	HINGE	MS20001CH6		2-325 AND NOTE B.
10	GROMMET	MS35489-43		—
11	BUSHING	145R3132-1		—
12	BUSHING	145R3132-2		—
13	GROMMET	MS35489-38		—
14	CAP	NOTE C.	NOTE A.	NOTE B.
15	COVER	NOTE C.	NOTE A.	NOTE B.
16	SHROUD	NOTE C.	NOTE A.	NOTE B.
17	BASE	NOTE C.	NOTE A.	NOTE B.
18	SHIELD	NOTE C.	NOTE A.	NOTE B.

- NOTES: A. USE GLASS CLOTH (E130)  
 B. REFER TO TM 55-1500-204-25/1  
 C. 10 PLY BMS8-79 GLASS FABRIC, PRE-PREGNATED TYPE 1581 OR 7781

10945

FOLLOW-ON MAINTENANCE:

Refinish (Task 2-353).

**END OF TASK**

5-170.6 Change 18

## 5-48.5 INSTALL DROOP STOP SHROUD

5-48.5

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,

NSN 5180-00-323-4692

- Torque Wrench, 0 to 150 Inch-Pounds

**Materials:**

None


**Personnel Required:**

Medium Helicopter Repairer

Inspector


**References:**

TM 55-1520-240-23P

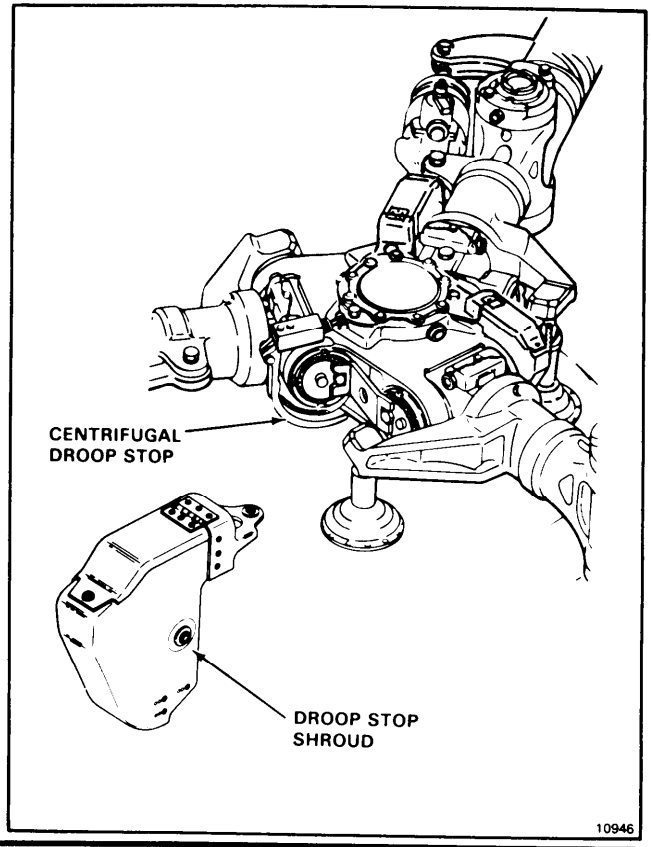**NOTE**

There are three droop stop shrouds. Procedure is same to install any shroud.

1. Position droop stop shroud (1), hinged cover (2) up, on rotor head (3).
- 2. Install screws (4) and washers (5) and (6) in shroud (1). Torque screws to 22 inch-pounds.
- 3. Install bolt (7) and washers (8) and (9) in shroud (1). Torque bolt to 110 inch-pounds.

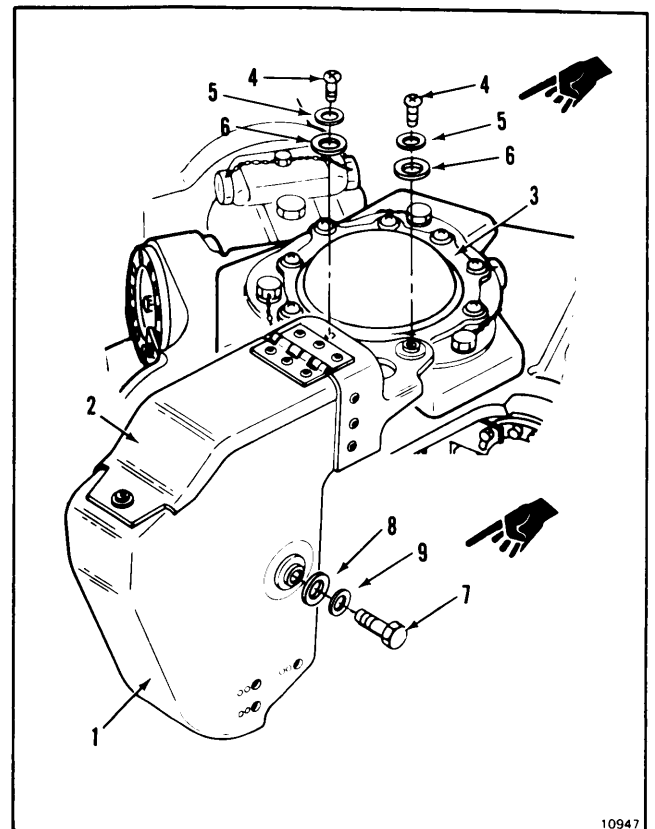**GO TO NEXT PAGE**


FOLLOW-ON MAINTENANCE:

Install droop stop shroud base (Task 5-48.6).

Install droop stop shroud shield (Task 5-48.7).

Close aft work platforms (Task 2-2).

Remove tiedown lines from blades.

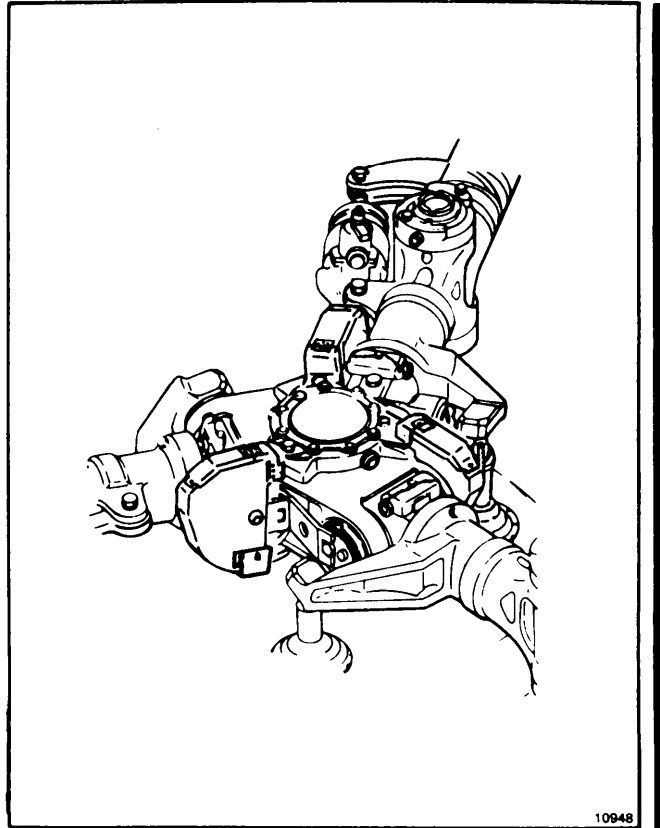

**5-48.6 INSTALL DROOP STOP SHROUD BASE**

**5-48.6**

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Torque Wrench, 5 to 150 Inch-Pounds

**Materials:**

Lockwire (E231)

**Parts:**


Cotter Pins

**Personnel Required:**

Medium Helicopter Repairer  
Inspector

**References:**


TM 55-1520-240-23P

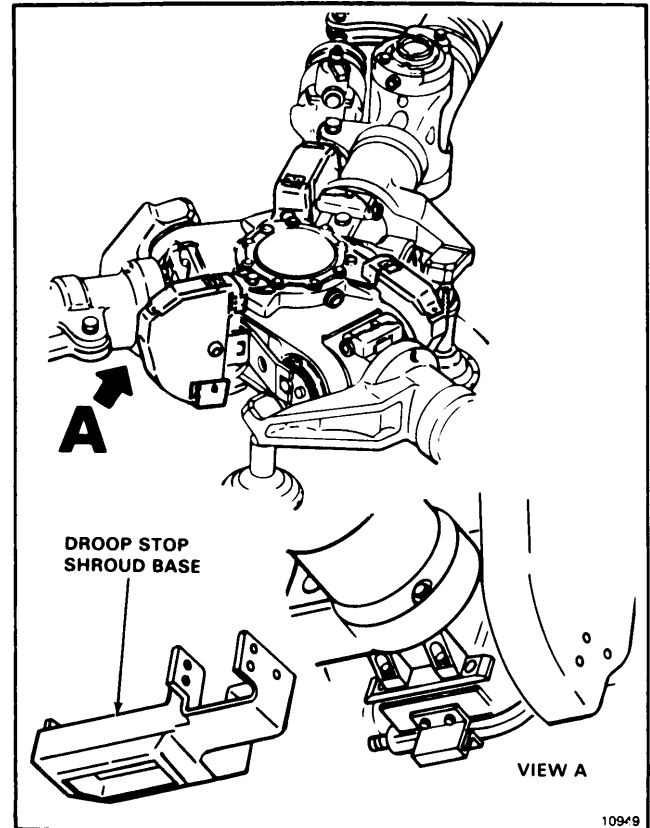

**NOTE**

There are three droop stop shroud bases. Procedure is same to install any base.

1. Align slots (1) of droop stop shroud base (2) with shaft (3). **Slide base on shaft.**
2. **Install bushings (4), flange outboard, on shaft (3).**
3. **Install washers (5) and nuts (6).** Do not tighten nuts at this time.

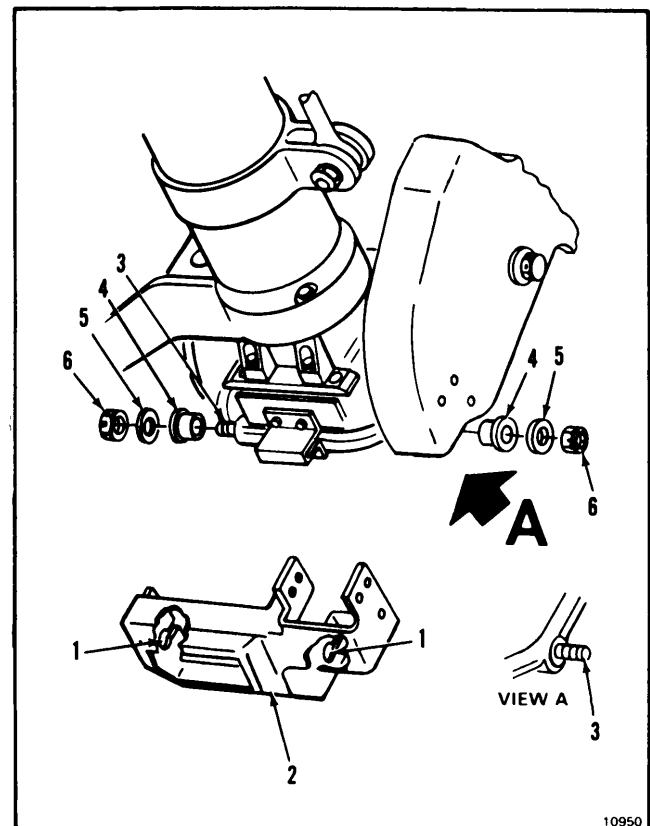


**GO TO NEXT PAGE**


**5-48.6 INSTALL DROOP STOP SHROUD BASE (Continued)**

5-48.6

4. Install four washers (7) and bolts (8) in base (2). Torque bolts to 70 inch-pounds.
5. Install washer (9) and bolt (10) in base (2). Torque bolt to 70 inch-pounds.
6. Tighten two nuts (6) until rubber of bushings (4) is compressed 0.010 to 0.030 inch and cotter pin (11) holes are aligned with nut slots. Use additional washers (5) if required. Install cotter pins.

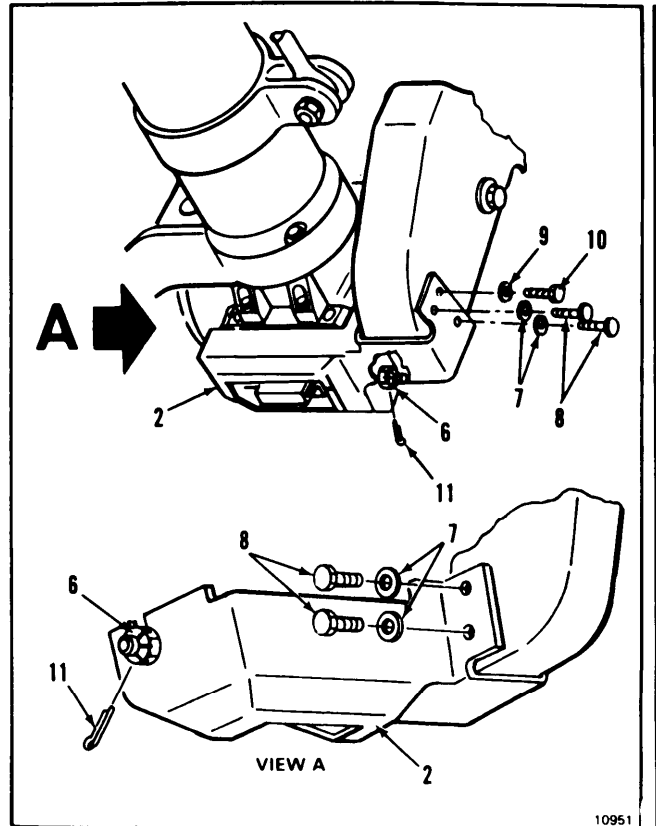

7. Install lockwire between bolts (10 and 12). Use lockwire (E231).

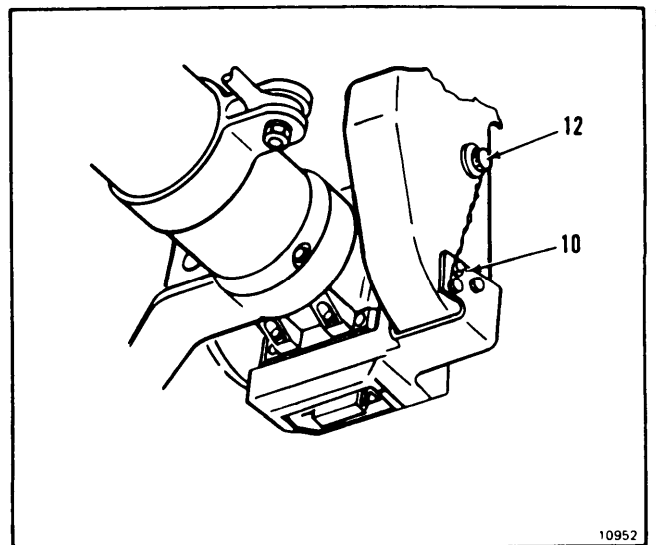**FOLLOW-ON MAINTENANCE:**

Install droop stop shroud shield (Task 5-48.7).

**5-48.7 INSTALL DROOP STOP SHROUD SHIELD**

**5-48.7**

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Torque Wrench, 5 to 50 Inch-Pounds

**Materials:**


Lockwire (E231)

**Personnel Required:**

Medium Helicopter Repairer  
Inspector

**References:**

TM 55-1520-240-23P

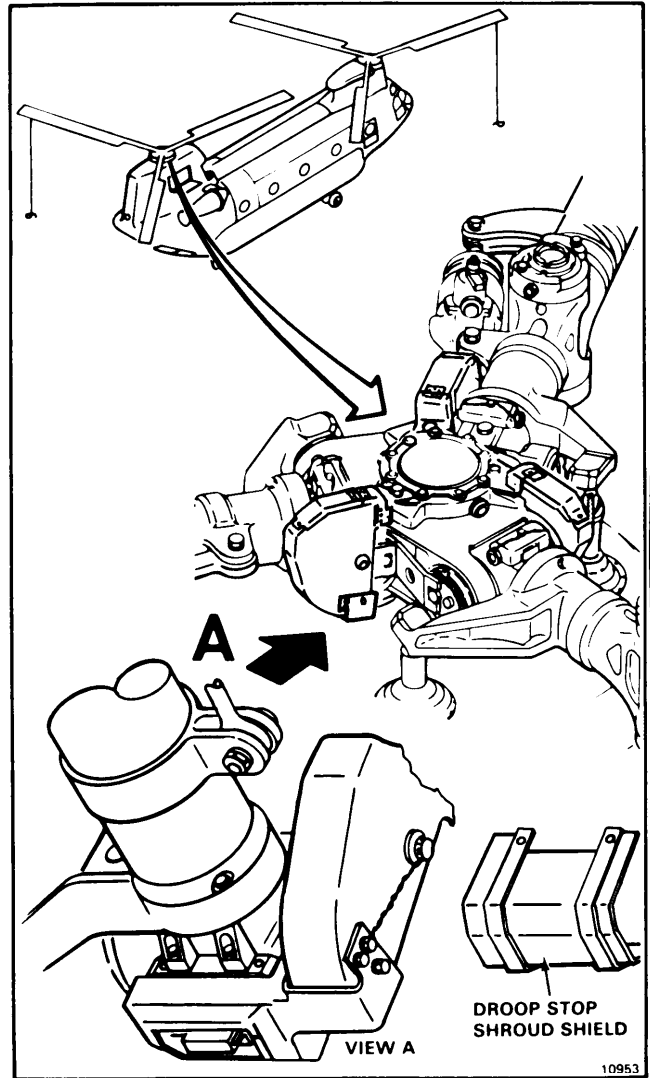


10953

**NOTE**

There are three droop stop shroud shields. Procedure is same to install any droop stop shroud shield.

1. **Position droop stop shroud shield (1) on droop stop (2). Install two washers (3) and two bolts (4). Torque bolts to 22 inch-pounds.**
2. **Lockwire bolts (4). Use lockwire (E231).**

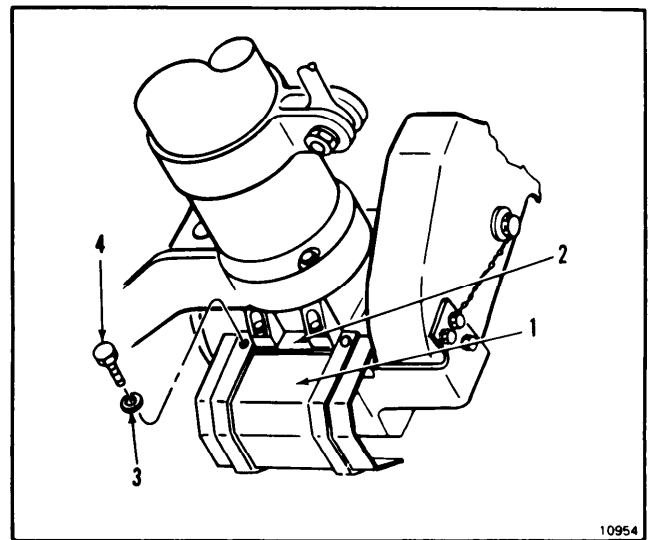


10954

**GO TO NEXT PAGE**

FOLLOW-ON MAINTENANCE:

- Close aft pylon work platforms (Task 2-2).
- Remove tiedown lines from blades.

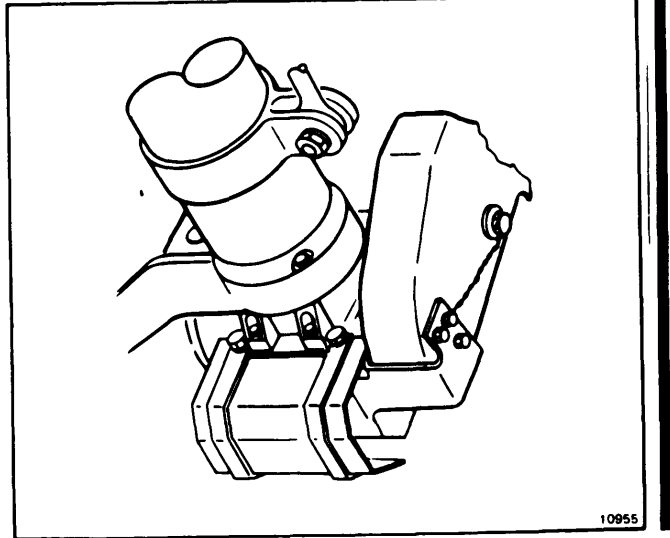

**5-48.8 REMOVE DROOP STOP SHROUD ASSEMBLIES****5-48.8****INITIAL SETUP****Applicable Configurations:**


All

**Tools:**Aircraft Mechanic Tool Kit,  
NSN 5180-00-323-4692**Materials:**

None

**Personnel Required:**

Medium Helicopter Repairer

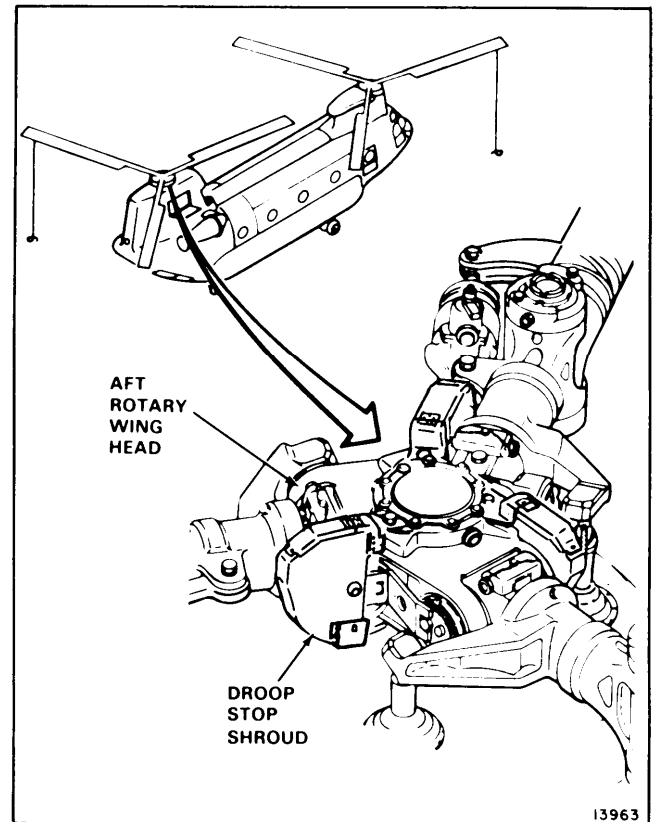**Equipment Condition:**Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Tiedown Line Installed on One Forward and One  
Aft Blade (Task 1-26)  
Aft Pylon Work Platform Open (Task 2-2)


13963

**NOTE**

There are three droop stop shroud assemblies on aft rotor head. Procedure is same to remove any assembly.

**REMOVE SHIELD**

1. Remove lockwire. Remove two bolts (1) and washers (2).
2. Remove shield (3) from droop stop (4).

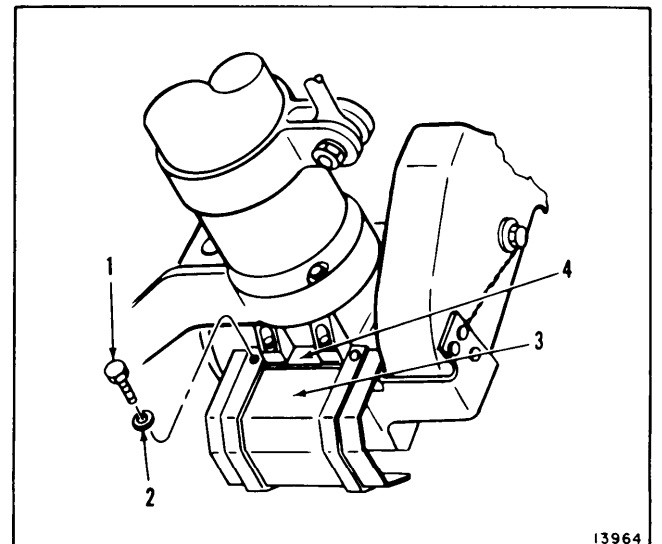


13964

**GO TO NEXT PAGE**



**REMOVE BASE**


3. Remove four bolts (5) and washers (6) from shroud base (7).
4. Remove lockwire from bolts (8 and 9). Remove bolt (9) and washer (10).

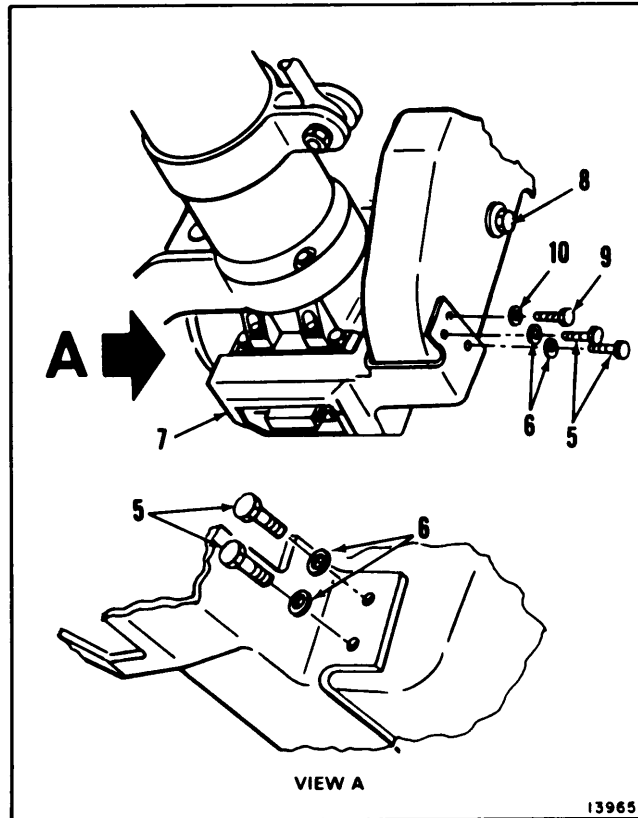

**NOTE**


Make sure bushings (14) have molded rubber liner installed.

5. Remove two cotter pins (11), nuts (12), washers (13), and bushings (14) from shaft (15).
6. Slide droop stop shroud base (16) from shaft (15) through slots (17). Remove base.

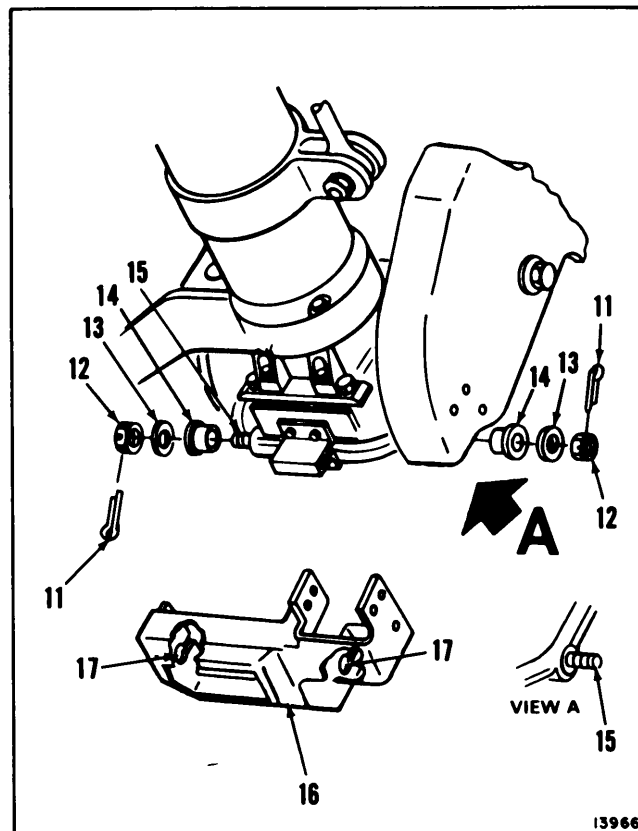

**5-48.8 REMOVE DROOP STOP SHROUD ASSEMBLIES (Continued) 5-48.8****REMOVE SHROUD**

7. Remove bolt (18) and washers (19 and 20) from droop stop shroud (21).
8. Remove two screws (22) and washers (23 and 24) from shroud (21).
9. Remove shroud (21) from rotor head (25).

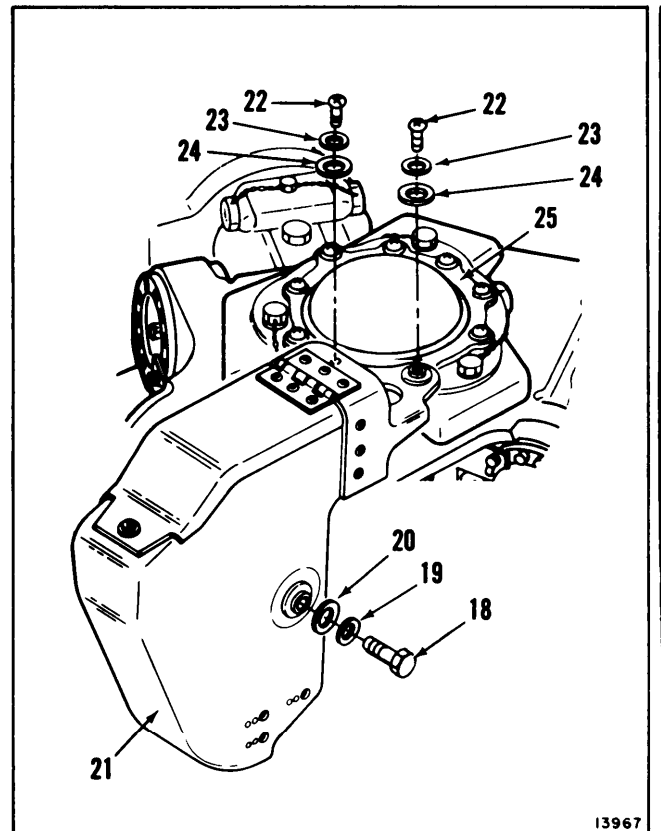
**INSTALL HARDWARE****NOTE**

Do not use screws removed with shroud.

10. Install two screws (26) and washers (27) from stowage bag in hub oil tank cover (28).  
**Torque screws to 23 inch-pounds.**

**FOLLOW-ON MAINTENANCE:**

None

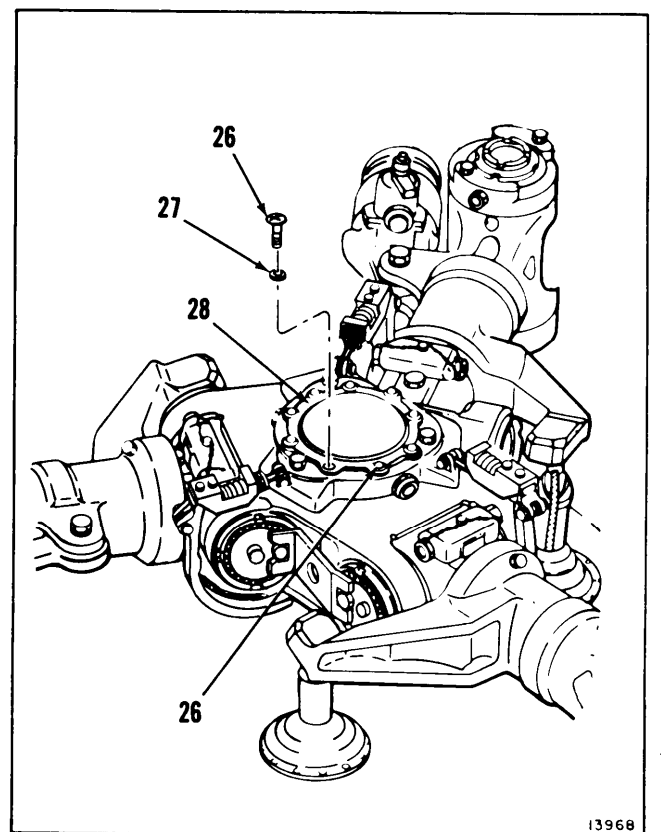

**END OF TASK**

**5-48.9 INSTALL DROOP STOP SHROUD ASSEMBLIES**

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic Tool Kit,  
NSN 5180-00-323-4692  
Torque Wrench, 0 to 150 Inch-Pounds

**Materials:**

Lockwire (E231)

**Parts:**


Cotter Pins

**Personnel Required:**

Medium Helicopter Repairer  
Inspector

**References:**

TM 55-1520-240-23P

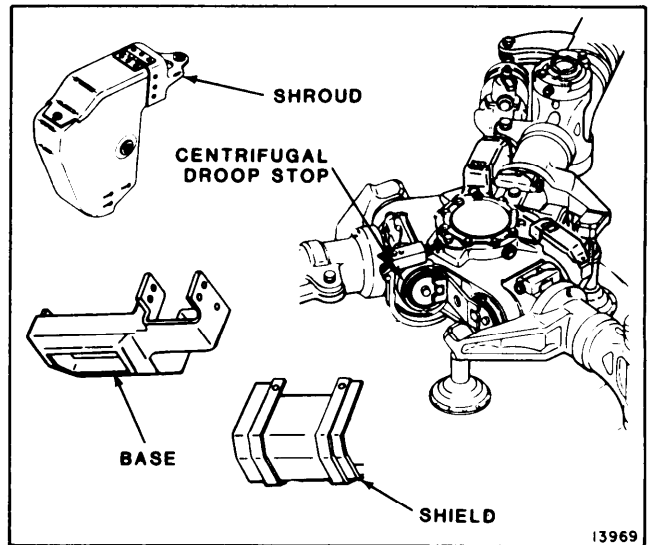


**NOTE**

There are three droop stop shroud assemblies on the aft rotor head. Procedure is same to install any assembly.


**REMOVE HARDWARE**

1. Remove two screws (1) and washers (2) from hub oil tank cover (3).

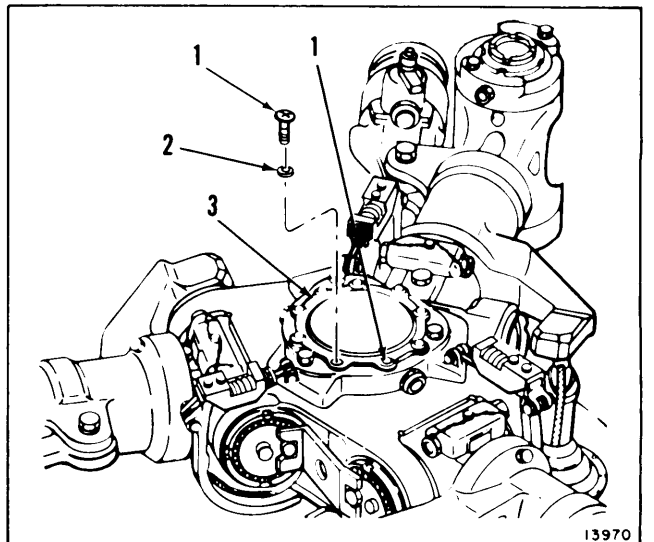

**INSTALL SHROUD**

2. Position droop stop shroud (4), hinged cover (5) up, on rotor head (6).
3. Install screws (7) and washers (8 and 9) in shroud (4). Torque screws to 23 inch-pounds.
4. Install bolt (10) and washers (11 and 12) in shroud (4). Torque bolt to 110 inch-pounds.

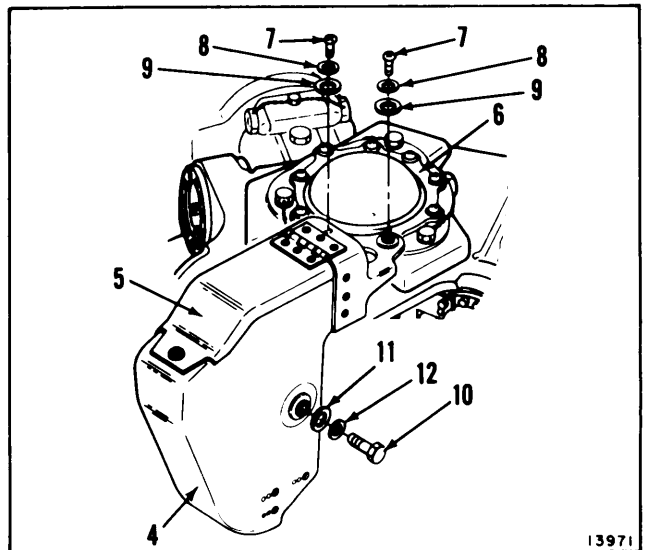


**GO TO NEXT PAGE**

5-48.9 INSTALL DROOP STOP SHROUD ASSEMBLIES (Continued)


5-48.9

**INSTALL BASE**

5. Align slots (13) of droop stop shroud base (14) with shaft (15). **Slide base on shaft.**
6. **Install bushings (16),** flange outboard, on shaft (15).
7. **Install washers (17) and nuts (18).** Do not tighten nuts at this time.

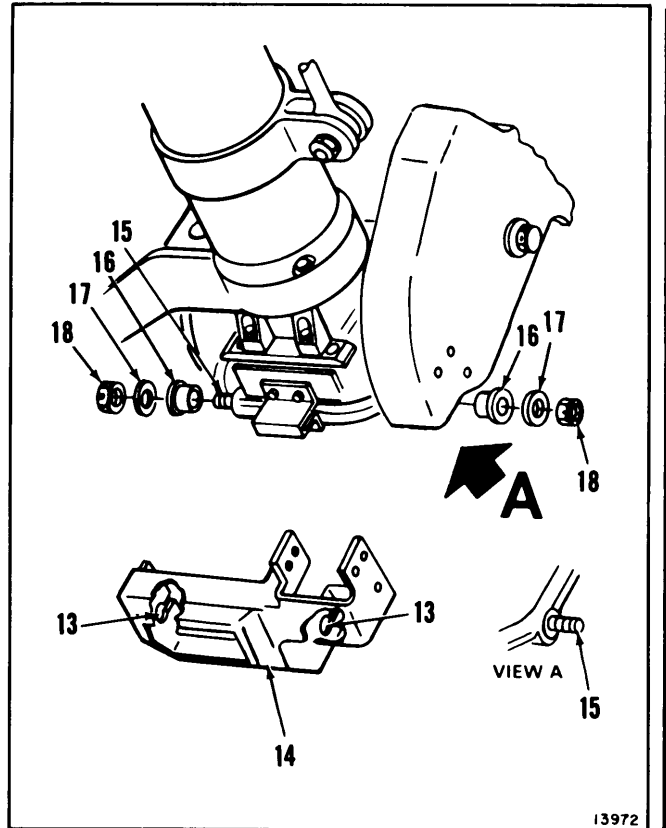


8. **Install four washers (19) and bolts (20)** in base (14). **Torque bolts to 70 inch-pounds.**
9. **Install washer (21) and bolt (22)** in base (14). **Torque bolt to 70 inch-pounds.**
10. **Tighten two nuts (18)** until rubber of bushings (16) is compressed 0.010 to 0.030 inch and cotter pin holes are aligned with nut slots. Use additional washers (17) if required. Install cotter pins (23).

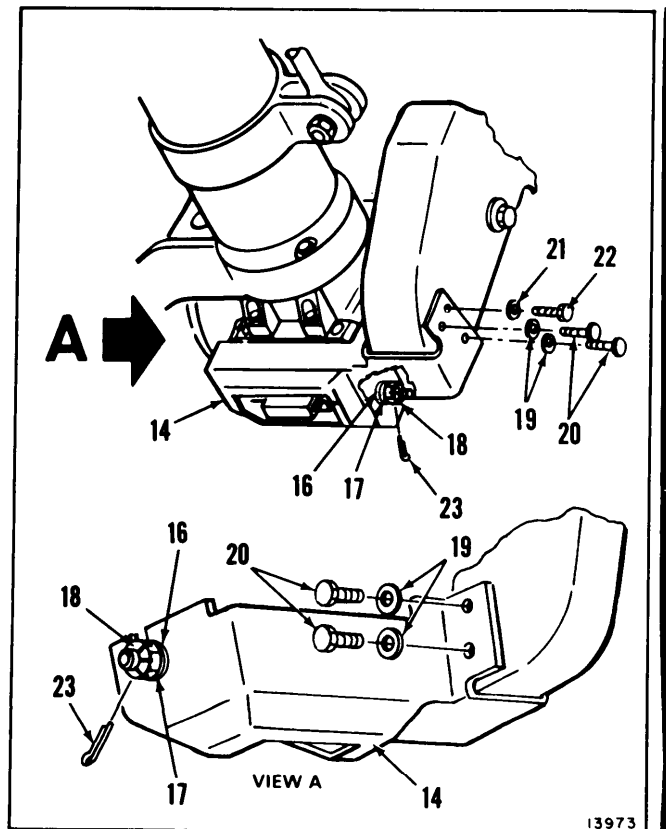

**GO TO NEXT PAGE**


**5-48.9 INSTALL DROOP STOP SHROUD ASSEMBLIES [Continued] 5-48.9**

11. Install lockwire between bolts (22 and 24). Use lockwire (E231).

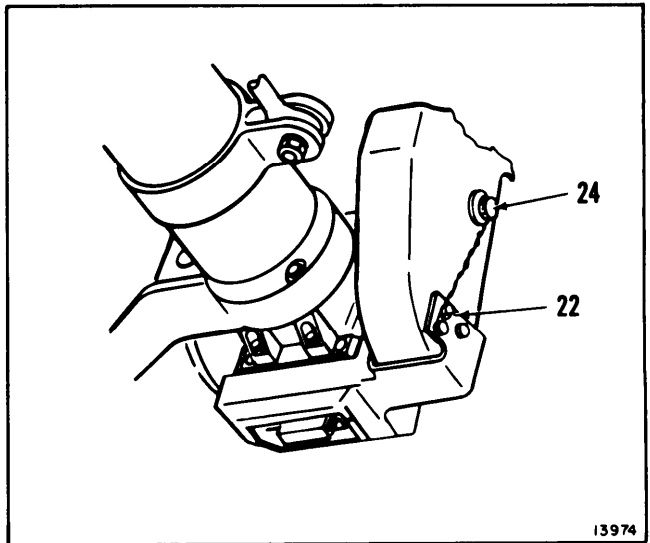


**INSTALL SHIELD**

12. Position droop stop shroud shield (25) on droop stop (26). Install two washers (27) and two bolts (28). Torque bolts to 23 inch-pounds.
13. Lockwire bolts (28). Use lockwire (E231).

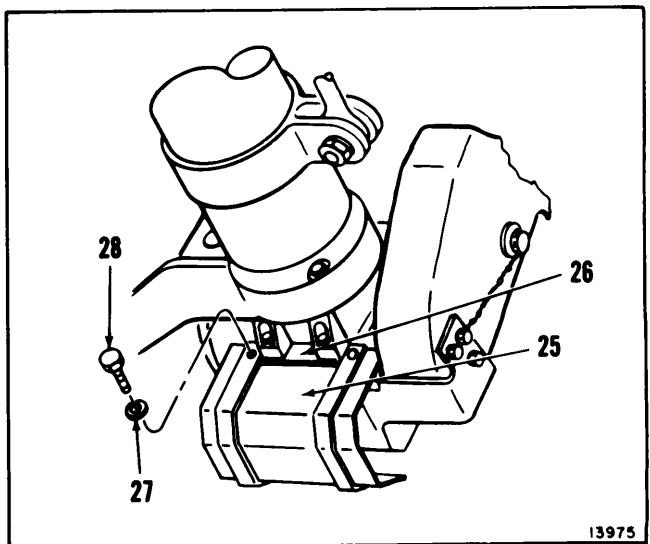

**FOLLOW-ON MAINTENANCE:**

- Close aft pylon work platforms (Task 2-2).
- Remove tiedown ropes from blades.

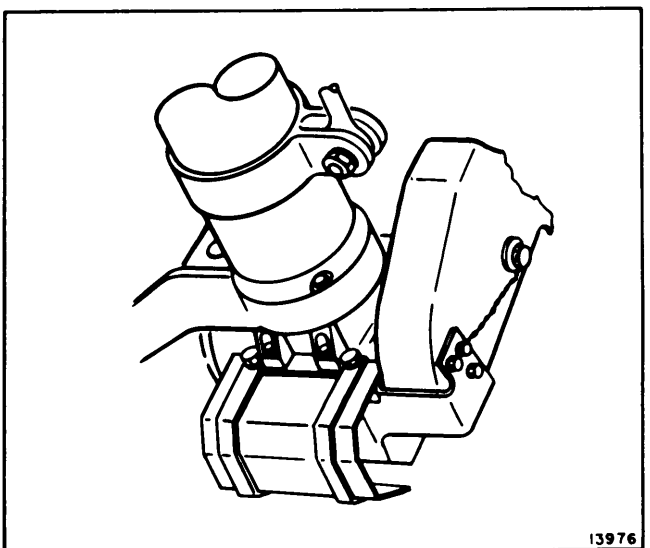

## INITIAL SETUP

**Applicable Configurations:**With **24****Tools:**

Aircraft Mechanic Tool Kit,  
NSN 5180-00-323-4692

**Materials:**

None

**Personnel Required:**


Medium Helicopter Repairer (5)  
Inspector

**Equipment Condition:**


Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Tiedown Line Installed On One Forward and  
One Aft Blade (Task 1-26)  
Aft Pylon Work Platforms Open (Task 2-2)  
Droop Stop Shrouds Removed (Task 5-48.3)

**General Safety Instructions:****WARNING**

Do not lower blade suddenly. Personnel can be injured if blade is lowered suddenly while droop stop work is in progress.

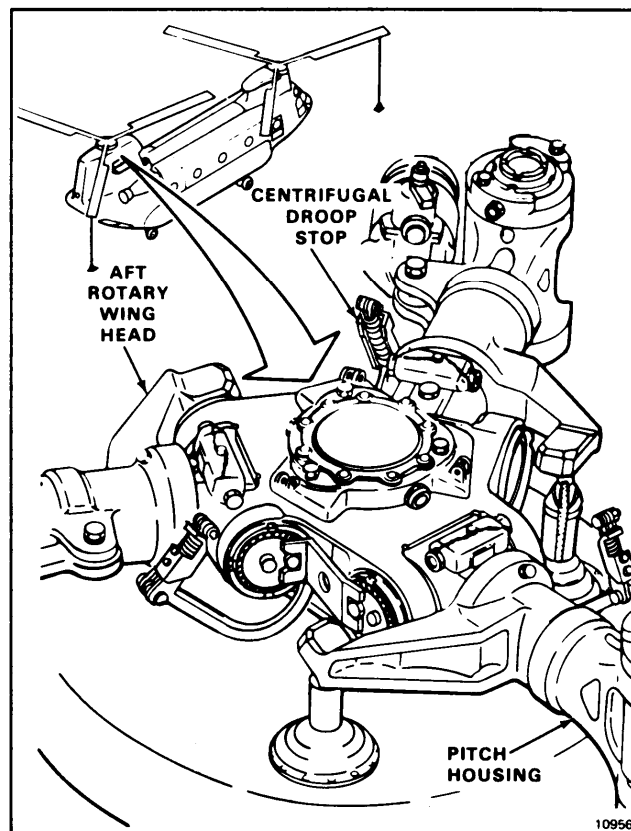**NOTE**

- Procedure is same to adjust spring-back of any centrifugal droop stop interposer support.
  - There is a centrifugal droop stop support for each aft rotor blade.
  - Blade at the support to be adjusted must be positioned over fuselage.
1. Position blade (1) over fuselage (2). Use tiedown line (3). Tie down one forward blade.

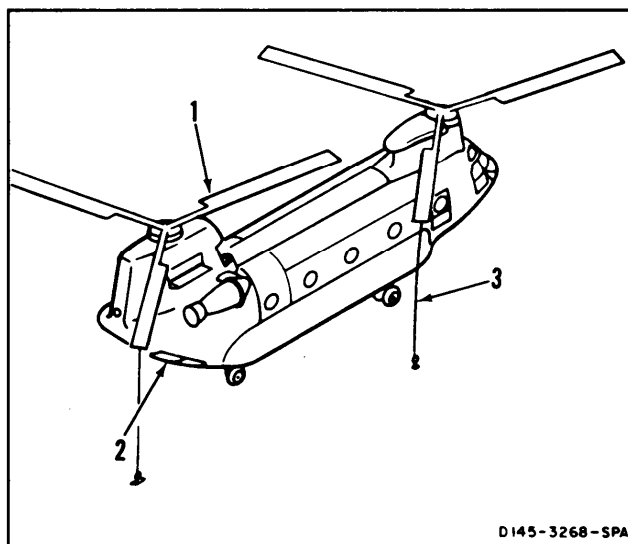


GO TO NEXT PAGE



## 5-49 INSPECT AND ADJUST INTERPOSER SUPPORT SPRING-BACK (Continued)

5-49

2. Have helpers lift and support blade (1) until task is complete.
3. **Measure distance between fixed droop stop (4), on pitch shaft (5), and interposer block (6).** Distance shall be at least 0.032-inch. Use feeler gage.

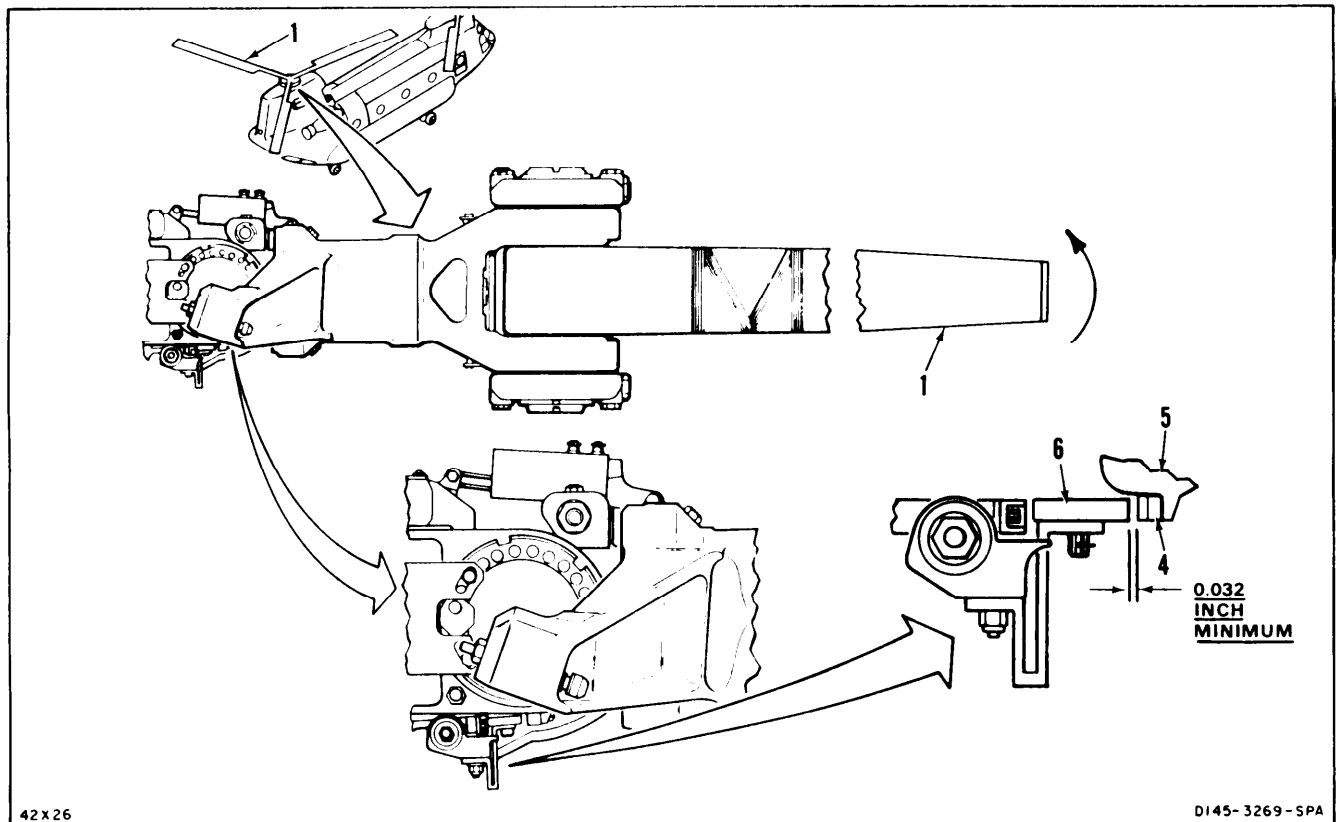**GO TO NEXT PAGE**


5-171



4. Check that balancing arm stop (7) rests against trailing lug (8).
5. Measure distance between interposer block (6) and hub (9). Distance shall be 0.000 inch to 0.070 inch. Use feeler gage.
6. Measure distance between interposer block (6) and striker block (10). Distance shall be 0.005 to 0.010 inch measured at both ends of interposer block. Use feeler gage.


**NOTE**

- If distance between interposer block and striker block is between 0.005 and 0.010 inch, go to Step 8.
- If distance between interposer block and striker block is not between 0.005 and 0.010 inch, go to Step 7.

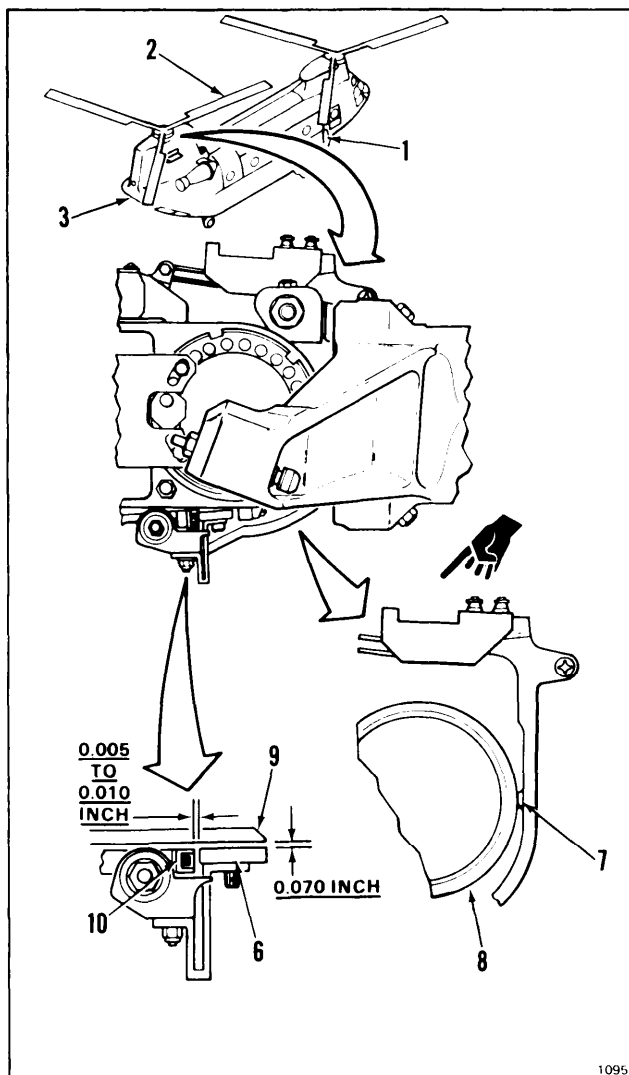

7. Adjust interposer support (15) as follows:

- a. Insert socket-head screw key (11) in two blind bolts (12). Loosen two lock-nuts (13). Use open-end wrench (14).
- b. Slide slotted interposer support (15) until distance between interposer block (6) and striker block (10) is between 0.005 and 0.010-inch. Distance must be equal at both ends.
- c. Insert socket-head screw key (11) in two blind bolts (12). Tighten two lock-nuts (13). Use open-end wrench (14).

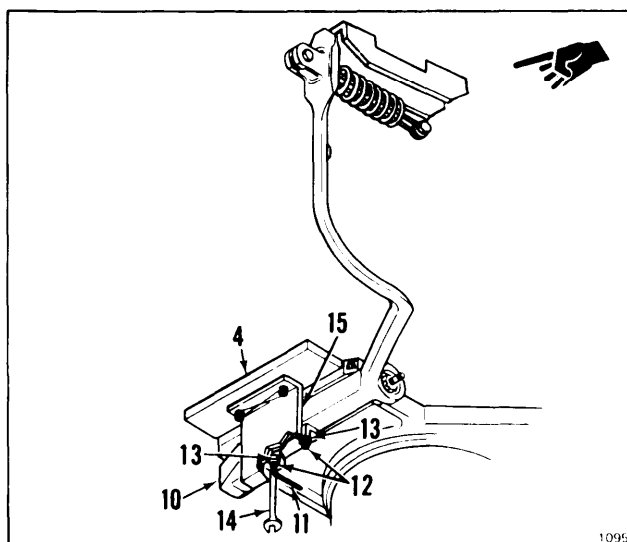


**5-49 INSPECT AND ADJUST INTERPOSER SUPPORT SPRING-BACK 5-49**  
**(Continued)**

8. Have helpers lower blade (1).

**FOLLOW-ON MAINTENANCE:**

- Install aft droop stop shroud (Task 5-48.5),  
Close aft pylon work platforms (Task 2-2).

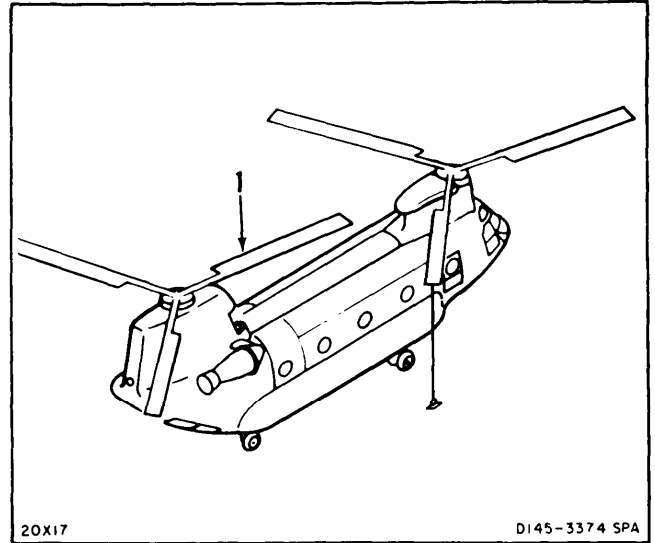

**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**

None

**Personnel Required:**

Inspector

**References:**

Task 5-52

Task 5-53

**Equipment Condition:**

Battery Disconnected (Task 1-39)


Electrical Power Off

Hydraulic Power Off

One Forward and One Aft Blade Tied Down  
(Task 1-26)

Aft Pylon Work Platforms Open (Task 2-2)


Droop Stop Shrouds Removed (Task 5-48.3)

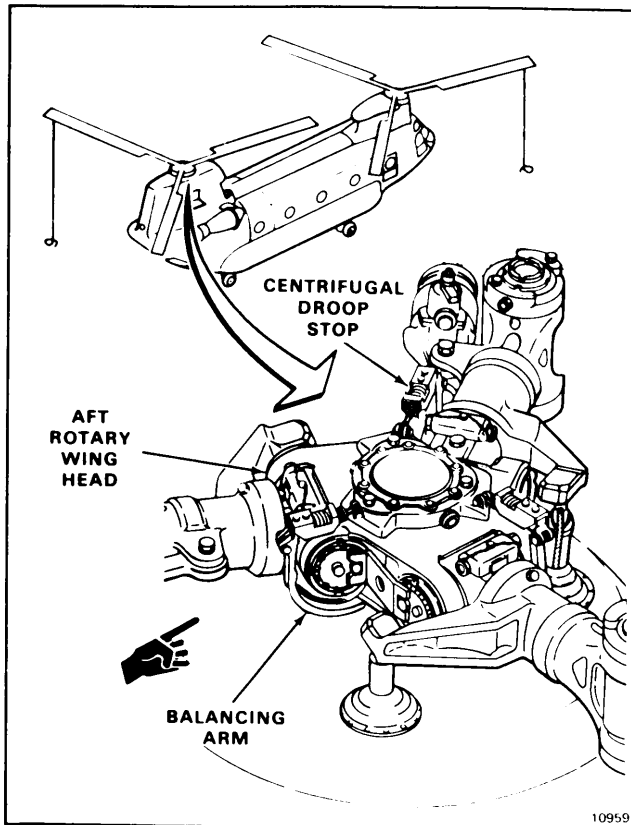

**NOTE**

Procedure is same to inspect any centrifugal droop stop spring and balancing arm.

1. Check lugs (1) for cracks, damage, and visible wear (Task 5-53).
2. Check balancing arms (2) and weights (3). Arms shall be installed securely. There shall be no twists, bends or dents.

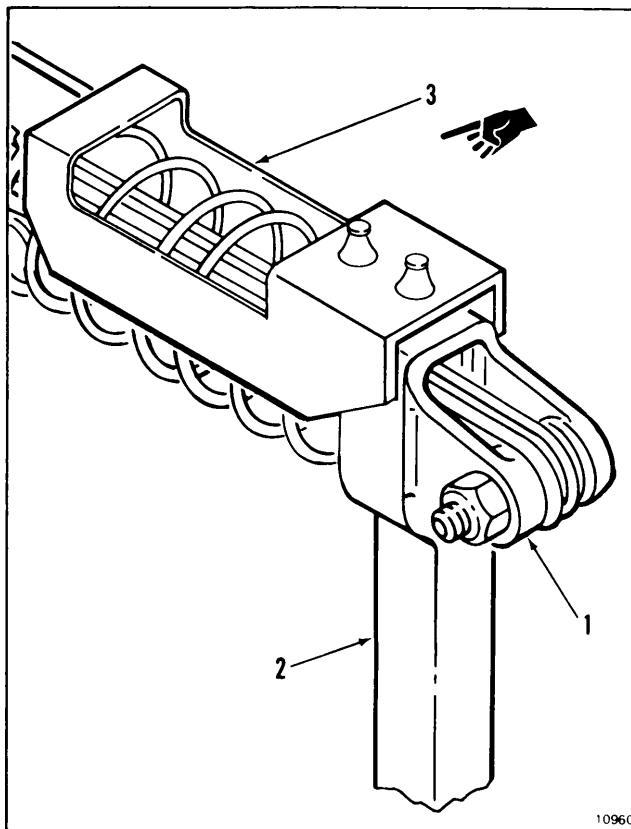


**GO TO NEXT PAGE**

**5-50 INSPECT CENTRIFUGAL DROOP STOP SPRINGS AND  
BALANCING ARMS (Continued)**

5-50

3. Check for clearance between lugs (4)  
and hub (5) (Task 5-52).

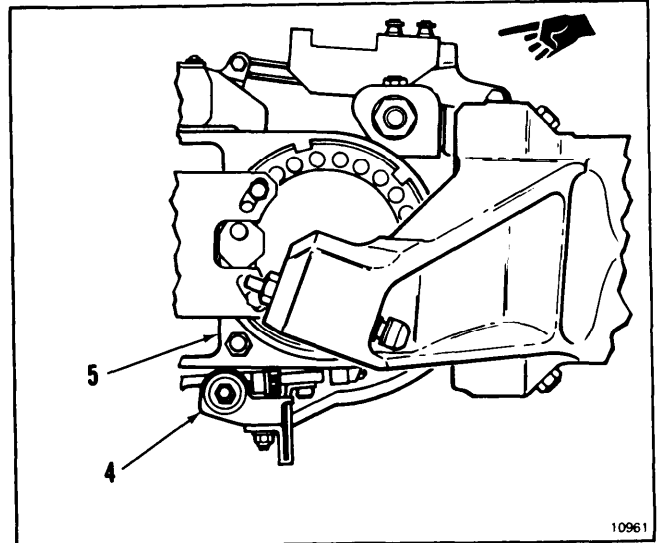**GO TO NEXT PAGE**



## 5-50 INSPECT CENTRIFUGAL DROOP STOP SPRINGS AND BALANCING ARMS (Continued)

5-50

4. Check springs (6). Coils (7) shall align and spacing shall be uniform.
5. Check sleeves (8) on limiter springs (9). Sleeves may be worn through if wire diameter is not less than 0.090 inch.


### CAUTION

Do not spread individual spring coils more than 1/4 inch. Over-spreading will weaken spring.

### NOTE


If necessary, remove springs and limiters for inspection.

6. Inspect springs (6) for wear as follows:
  - a. Spread spring coils (7). Raise limiters (9) from inside bottom diameter of spring (6). Inspect limiters and inside diameter of spring for wear.
  - b. Reject spring if wire diameter is less than 0.050 inch. Reject limiter if wire diameter is less than 0.090 inch.
  - c. Pull spring inward toward hub center so spring loops within the yoke opening can be seen. Inspect sides of spring (6) for wear where it passes around grommet (10). Refer to step b. for rejection data.
  - d. Inspect spring (6) for wear where it passes around bolts at each end. Refer to step b. for rejection data.

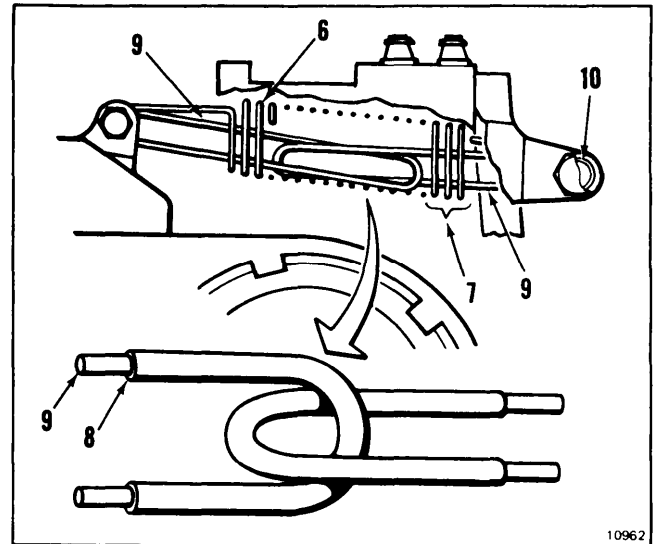

### FOLLOW-ON MAINTENANCE:

- Install droop stop shrouds (Task 5-48.5)
- Close aft pylon work platform (Task 2-2).

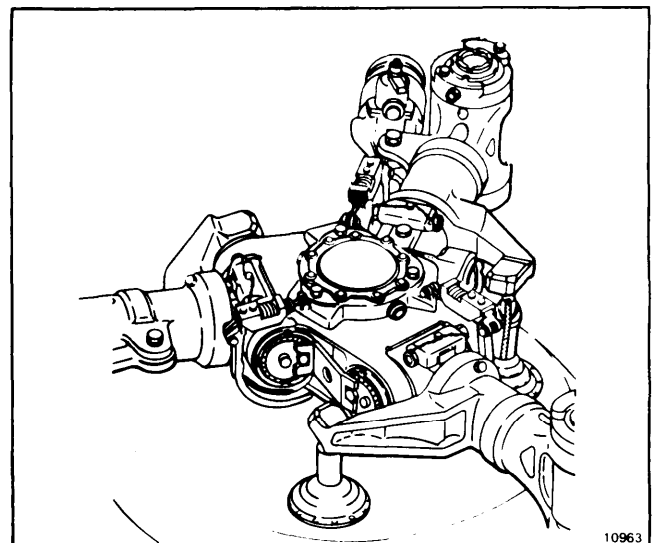

END OF TASK

Change 21

5-175

**5-51 INSPECT CENTRIFUGAL DROOP STOP INTERPOSER BLOCK AND SUPPORT, STRIKER BLOCK, AND FIXED DROOP STOP**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692

**Materials:**

None

**Personnel Required:**

Medium Helicopter Repairer (4)  
Inspector


**Equipment Condition:**

- Battery Disconnected (Task 1-39)
- Electrical Power Off
- Hydraulic Power Off
- Tiedown Line on One Forward and One Aft Blade (Task 1-26)
- Aft Pylon Work Platforms Open (Task 2-2)
- Droop Stop Shrouds Removed (Task 5-48.3)

**General Safety Instructions:**

**WARNING**


Do not lower blade suddenly. Personnel can be injured if blade is lowered suddenly while droop stop work is in progress.

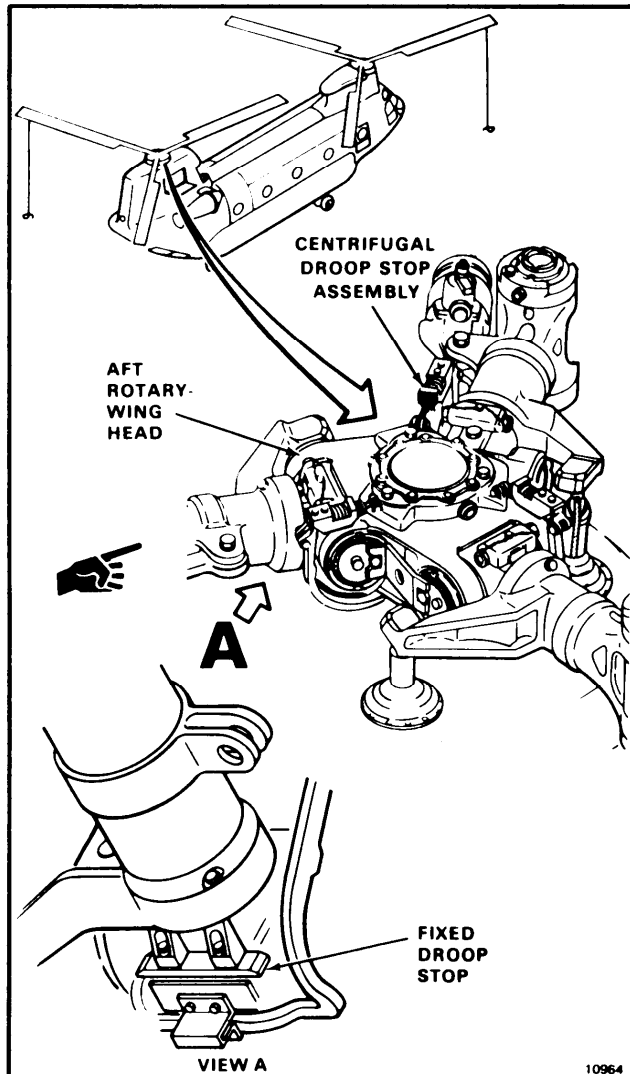

**NOTE**

- There are three fixed droop stops, and three centrifugal droop stops with support and blocks. Procedure is same to inspect any fixed droop stop, and centrifugal droop stop support and blocks.
- Blade for fixed droop stop, support and blocks to be inspected, must be positioned over fuselage.

1. Position blade (1) over fuselage (2). Use tiedown line (3). Tie down one forward and one aft blade.

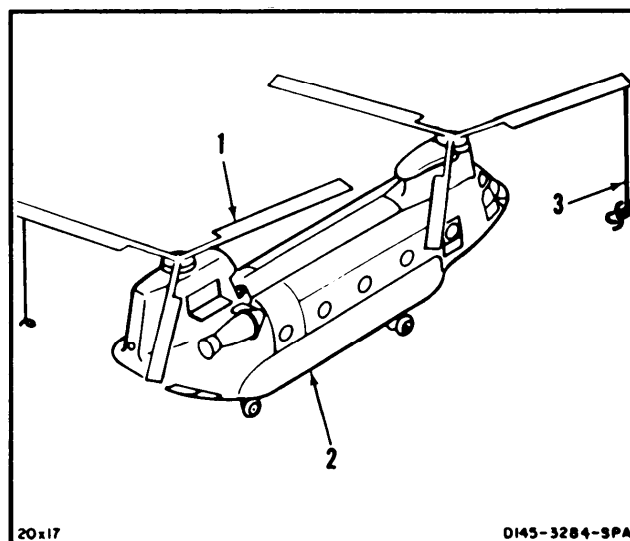


**GO TO NEXT PAGE**

## 5-51 INSPECT CENTRIFUGAL DROOP STOP INTERPOSER BLOCK AND SUPPORT, STRIKER BLOCK, AND FIXED DROOP STOP (Continued)

5-51

2. Have helpers lift blade (1) until fixed droop stop (4) on shaft (5) is clear of interposer block (6). Support blade.
3. **Pull balancing arm (7) away from hub (8)** until interposer block (6) clears striker block (9) and fixed droop stop (4).
4. **Check interposer block (6), striker block (9), and fixed droop stop (4)** for damage that changes shape of a block or stop. There shall be no damage that changes shape of a block or stop.
5. **Check six screws (10).** There shall be no loose or sheared screws.
6. Return balancing arm (7) until it rests against hub (8).
7. Have helpers lower blade (1).

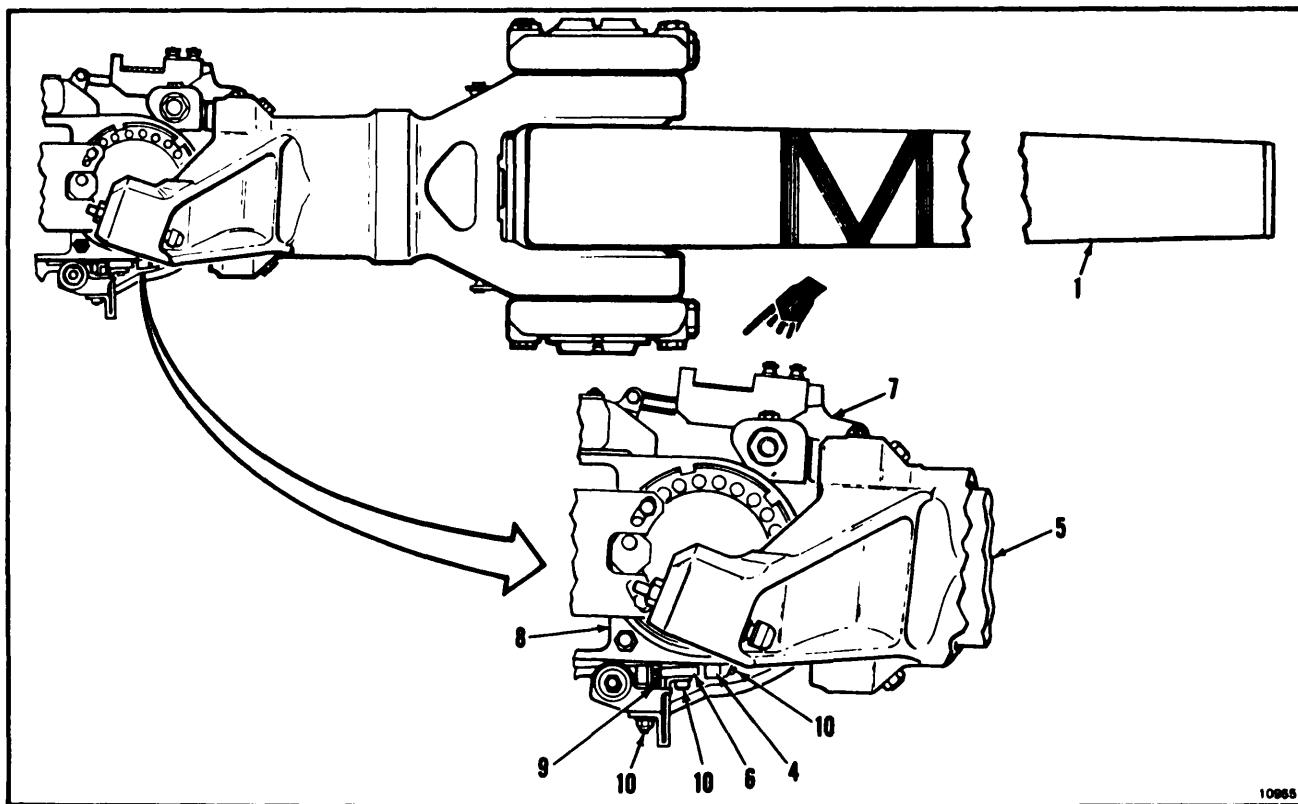

### FOLLOW-ON MAINTENANCE:

- Install droop stop shrouds (Task 5-48.5).
- Close aft pylon work platforms (Task 2-2).

**END OF TASK**



## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692

**Materials:**

Epoxy Primer (E292.1)  
Black Polyurethane Paint (E285.1)  
Cloths (E120)  
Gloves (E184.1)  
Masking Tape (E388)  
Nitric Acid (E22)

**Personnel Required:**

Medium Helicopter Repairer (5)  
Inspector

**References:**

Task 2-350.1  
Task 5-54  
Task 5-55

**Equipment Condition:**


Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Tiedown Line Installed on One Forward and  
One Aft Blade (Task 1-26)  
Aft Pylon Work Platform Open (Task 2-2)  
Droop Stop Shroud Removed (Task 5-48.3)

**General Safety Instructions:****WARNING**

Do not lower blade suddenly. Personnel can be injured if blade is lowered suddenly while droop stop work is in progress.

**WARNING**

Nitric acid (E22) is extremely toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

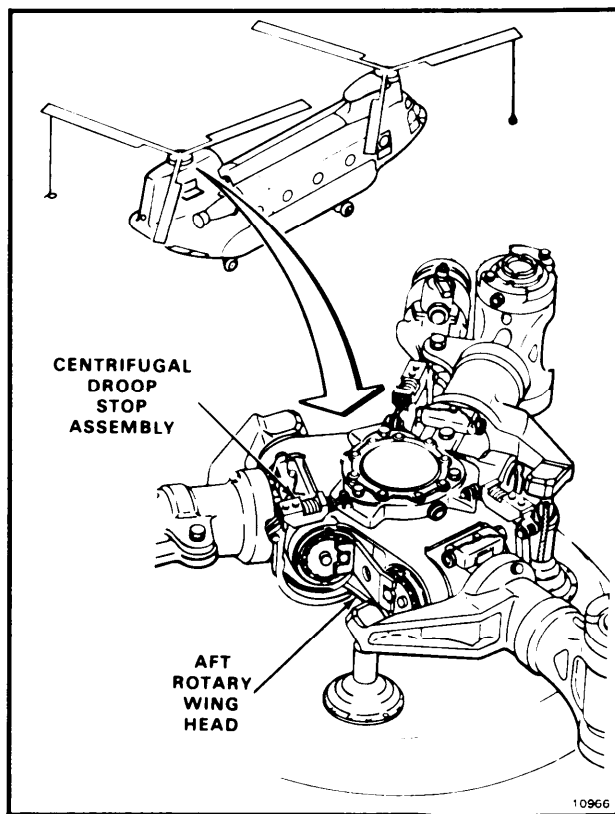


GO TO NEXT PAGE

5-178 Change 32

**NOTE**


- Procedure is same for functional check of any centrifugal droop stop.
  - One rotor blade is connected to each centrifugal droop stop. Centrifugal droop stops are installed only on aft rotary wing head.
  - Blade for centrifugal droop stop to be checked must be positioned over fuselage.
1. Position blade (1) over fuselage (2). Use tiedown line (3). Tie down one forward blade.

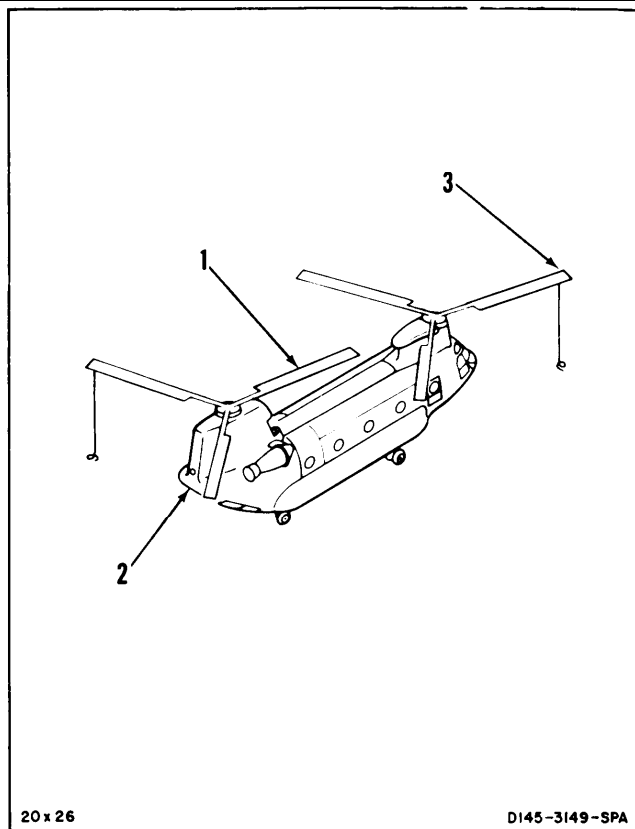**GO TO NEXT PAGE**



**5-52 CENTRIFUGAL DROOP STOP FUNCTIONAL CHECK (Continued) 5-52**

2. Have helpers lift blade (1) until fixed droop stop (4) on pitch shaft (5) is clear of interposer block (6). Support blade.

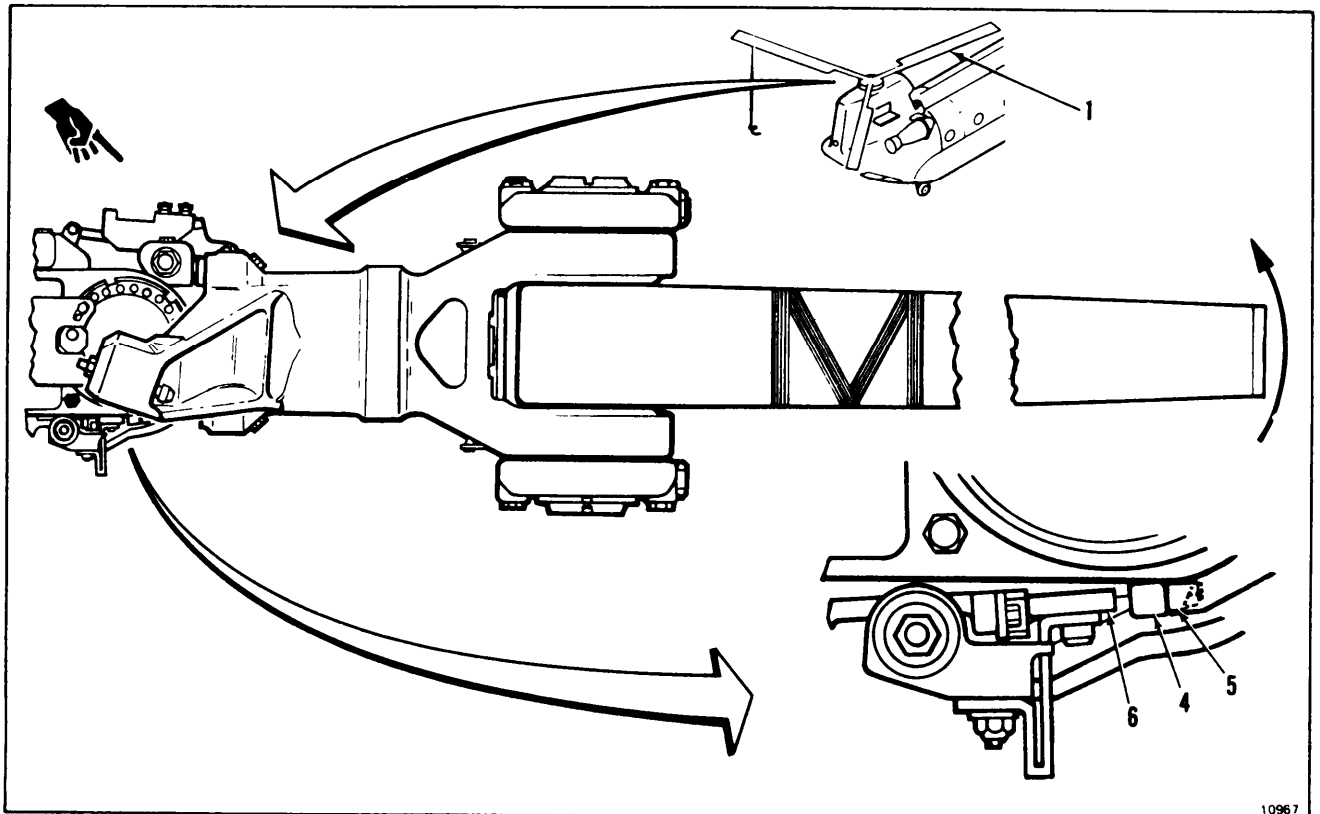

10967

**GO TO NEXT PAGE**

**CAUTION**


Balancing arms must move freely when blade is raised. Fuselage can be damaged if there is interference with balancing arm operation.

3. Move balancing arm (7) outward as far as it will go. Check that spring (8) is clear of other parts. There shall be no interference with spring operation.
4. Check pivot bearing (9) for binding. There shall be no binding.
5. Check for interference at interposer block (6). There shall be no interference.
6. Check that there is clearance between balancing arm pivot lugs (10) and bottom of hub (11). If there is clearance, go to step 9. If there is no clearance, do steps 7 thru 8.
7. Remove centrifugal droop stop assembly (Task 5-54).
- 7.1. Remove enough metal from top of lugs (10) to provide clearance. Use smooth file.
- 7.2. Finish reworked area of lugs (10) as follows:

**WARNING**

Alodine (E65) is an oxidizer. Discard cloths which contain this material in a separate container. If discarded with cloths contaminated with acetone, reek, or other organic solvents, combustion can result. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- a. Mix 3 ounces of alodine powder (E65) with 1/2 ounce of concentrated nitric acid (E22). Add mixture to 1 gallon of water.
- b. Apply alodine solution to reworked area of lugs. Wear gloves (E184.1).
- c. Rinse surface with cold water and let air dry.

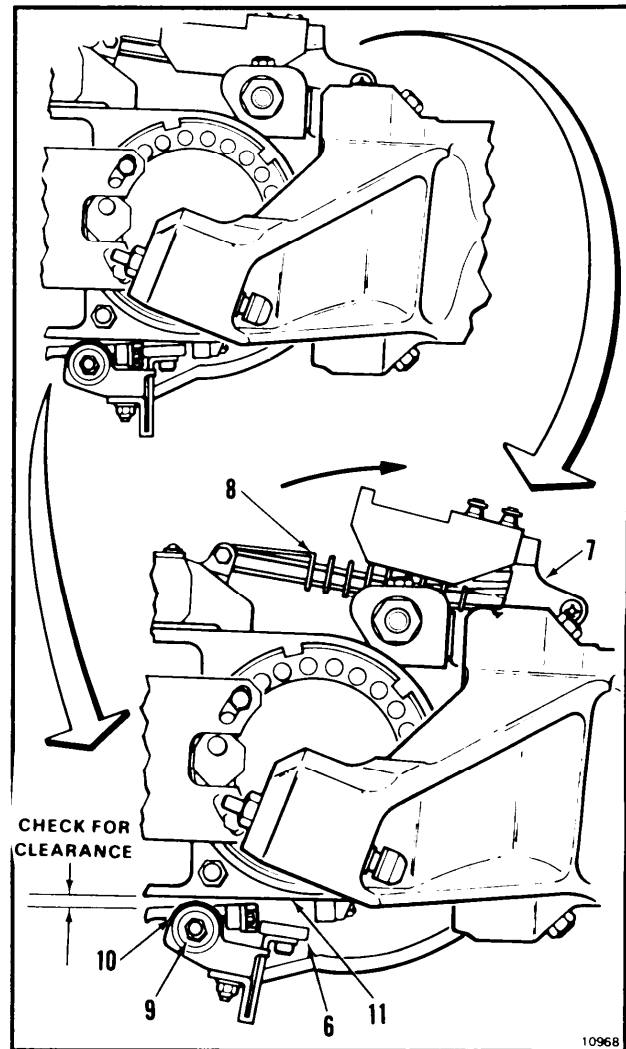

**WARNING**

Epoxy primer (E292.1) and polyurethane paint (E285.1) are flammable and toxic. They can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- d. Apply one coat of epoxy primer (E292.1). Wear gloves (E184.1). Use tape (E388) to protect other components.
  - e. Apply two more coats of epoxy primer (E292.1). Allow 1 hour between coats. Wear gloves (E184.1).
  - f. Apply two coats of black polyurethane paint (E285.1) per Task 2-350.1. Allow 1 hour between coats. Wear gloves (E184.1).
- 7.3. Install centrifugal droop stop assembly (Task 5-55).
8. Check for clearance as in step 6.


**WARNING**

**Do not lower rotary wing blade without warning personnel working on droop stops. Personnel can be injured if blade is lowered suddenly.**

9. Return balancing arm (7) slowly until it rests against hub (11). Have helpers lower blade (1) slowly until fixed droop stop (4) rests against interposer block (6).

## FOLLOW-ON MAINTENANCE:

- Install droop stop shroud (Task 5-48.5).
- Close aft pylon work platforms (Task 2-2).

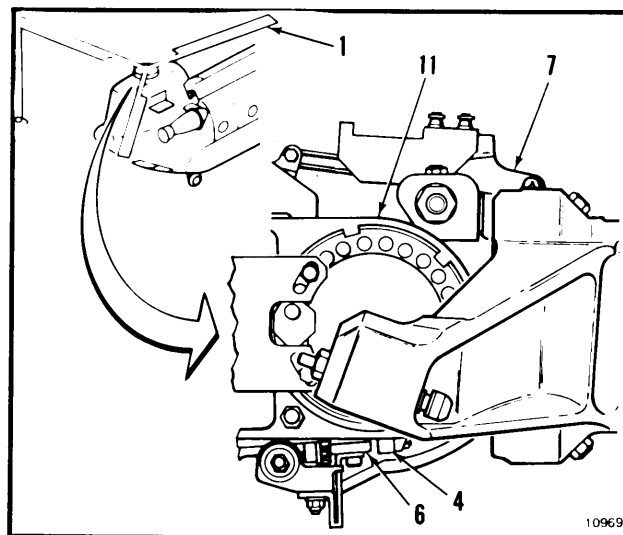

**END OF TASK**



## 5-53 INSPECT ROTOR HEAD CENTRIFUGAL DROOP STOP BOLTS AND LUGS

5-53

### INITIAL SETUP

#### Applicable Configurations:

All

#### Tools:

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Technical Inspection Tool Kit,  
NSN 5180-00-323-5114

#### Materials:

None

#### Personnel Required:

Medium Helicopter Repairer (4)  
Inspector

#### References:

Task 5-50  
Task 5-57


#### Equipment Condition:

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Tiedown Line Installed on One Forward and One  
Aft Blade (Task 1-26)  
Aft Pylon Work Platforms Open (Task 2-2)  
Droop Stop Shrouds Removed (Task 5-48.3)

#### General Safety Instructions:

#### WARNING


Do not lower blade suddenly.  
Personnel can be injured if blade  
is lowered suddenly while droop  
stop work is in Progress.

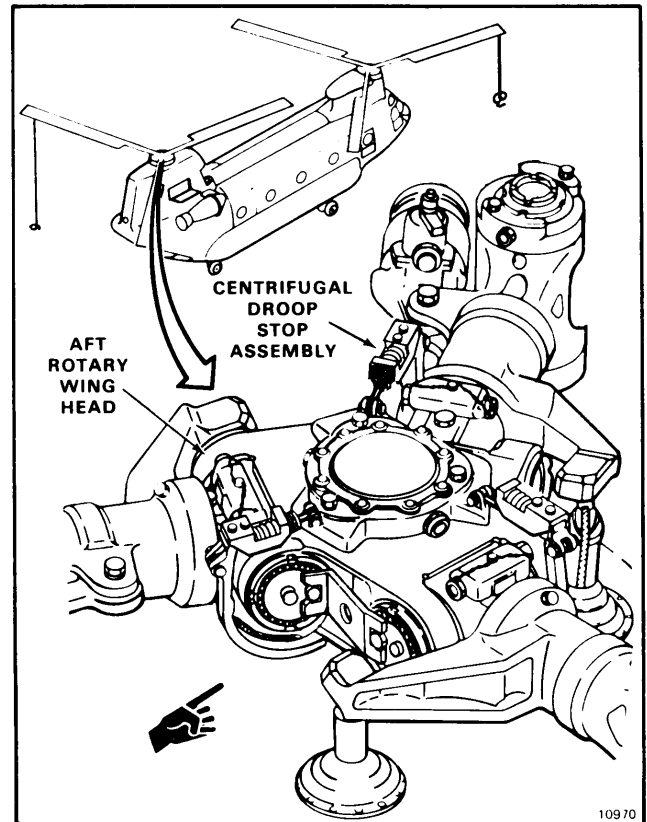

#### NOTE

- There are three centrifugal droop stops. Procedure is same for removal of any centrifugal droop stop.
- One rotor blade is connected to each centrifugal droop stop. Blade for centrifugal droop stop to be inspected must be positioned over fuselage.

1. Position blade (1) over fuselage (2). Use tiedown line (3). Tie down one forward and one aft blade.

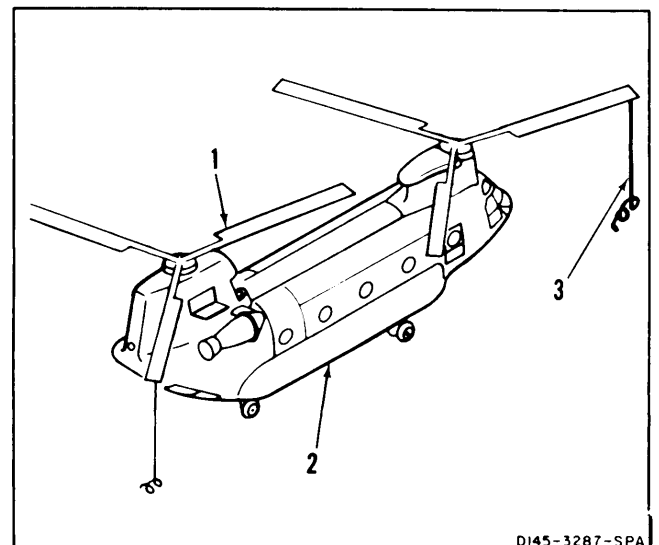

**GO TO NEXT PAGE**



## 5-53 INSPECT ROTOR HEAD CENTRIFUGAL DROOP STOP BOLTS AND LUGS (Continued)

2. Have helpers lift and support blade (1) at tip.
3. Remove cotter pin (4), nut (5), and two washers (6) from bolt (7) through hub oil tank lugs (8).

### NOTE


Support spring load before removing bolt. Sudden release of spring will cause small parts to fly out of lugs.

4. Support extension spring (9) and remove bolt (7). **Remove extension spring, limiter spring (10), two washers (11) and bearing (12) from hub oil tank lugs (8).**
5. Lower balancing arm (13) slowly.

### NOTE

Blade may have to be lifted higher if balancing arm is not free to be lowered.


6. Have helpers lower blade ( 1 ) until it is at rest about 6 inches above fuselage (2).

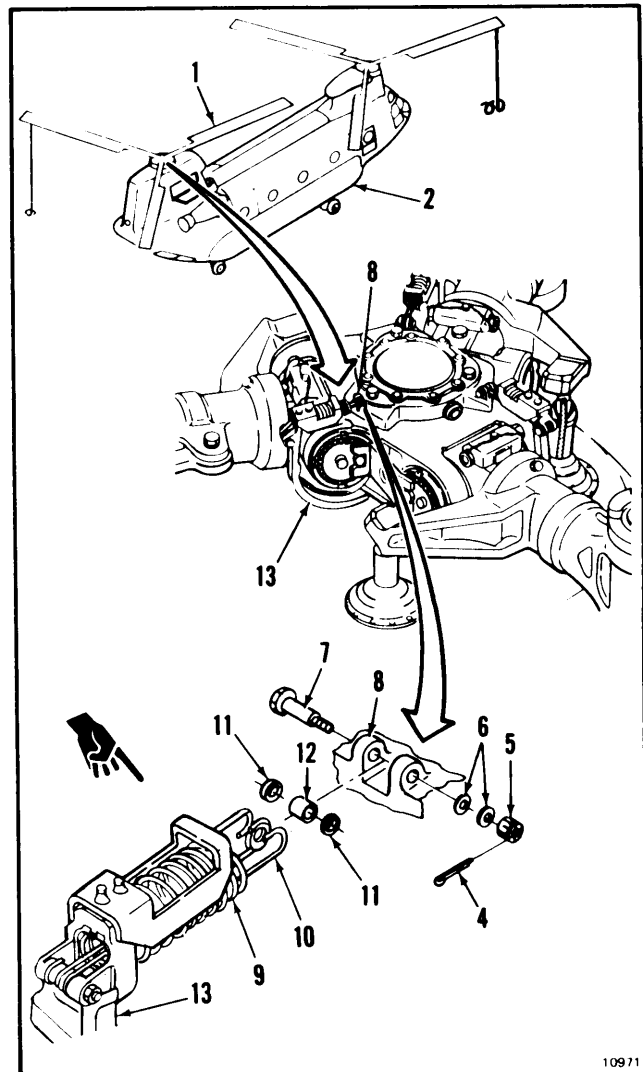


**GO TO NEXT PAGE**

**5-53 INSPECT ROTOR HEAD CENTRIFUGAL DROOP STOP BOLTS AND LUGS (Continued)**

7. **Check bearing (12) for grooves.** Depth of grooves shall not exceed 0.031 inch.
8. **Check bolt (7) for wear or thread damage.** There shall be no wear or thread damage.
9. Temporarily install bolt (7) through two washers (11), bearing (12), limiter spring (10), and extension spring (9). Install two washers (6) and nut (5) loosely on bolt.

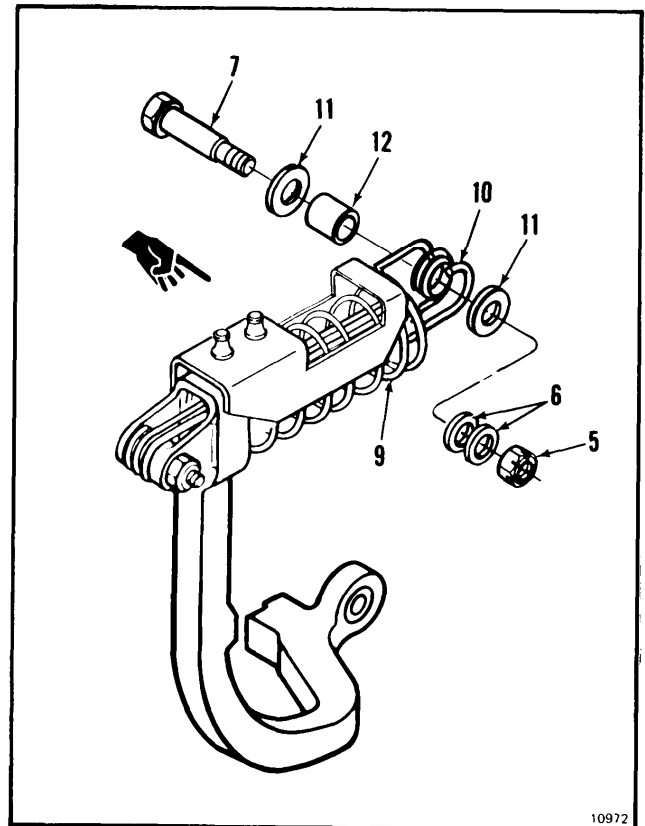


10. Remove cotter pin (13), nut (14), and two washers (15) from bolt (16) through balancing arm lugs (17).
11. **Remove bolt (16), extension spring (9), limiter spring (10), two washers (18), and bearing (19) from balancing arm lugs (17).**
12. **Check bearing (19) for grooves** caused by limiter spring (10). Depth of grooves shall not exceed 0.031 inch.
13. Temporarily install bolt (16) through two washers (18), extension spring (9), limiter spring (10), and bearing (19). Install two washers (15) and nut (14) loosely on bolt.

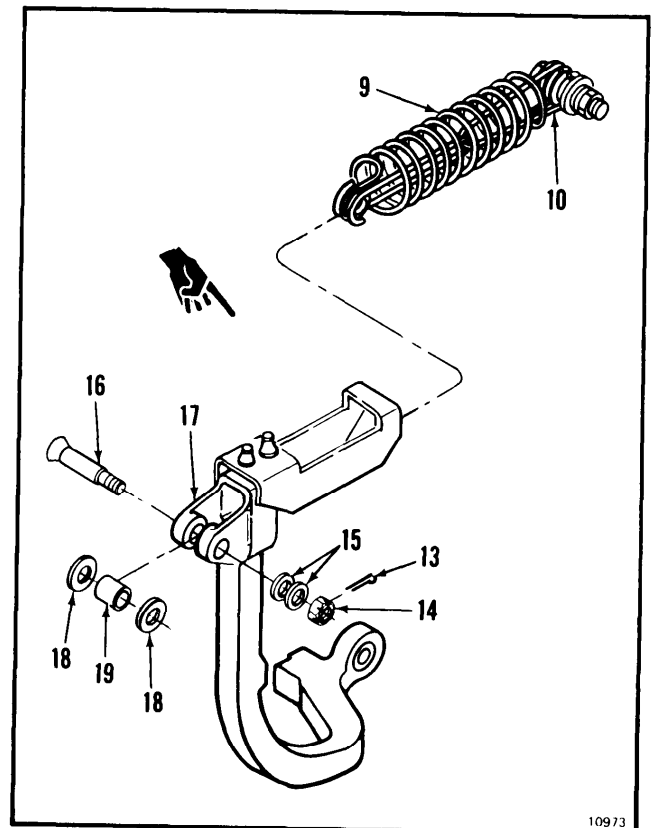

**GO TO NEXT PAGE**


- 14. Check inside faces of oil tank lugs (8). There shall be no cracks or wear.
- 15. Check inside faces of balancing arm lugs (17). There shall be no cracks or wear.

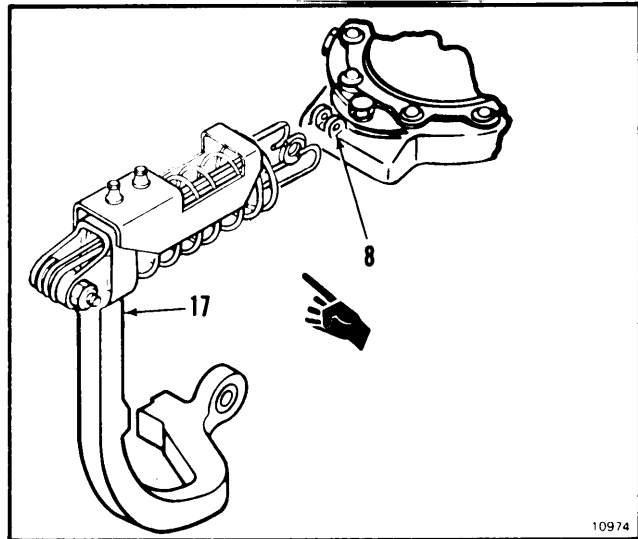

- 16. Check extension spring (9), limiter springs (10), and balancing arm (13) (Task 5-50).
- 17. Have helpers lift and support blade (1) at tip.
- 18. Lift balancing arm (13). Install extension spring (9) and limiter springs (10) (Task 5-57).
- 19. Have helpers lower blade (1).

**FOLLOW-ON MAINTENANCE:**

- Install droop stop shrouds (Task 5-48.5).
- Close aft pylon work platforms (Task 2-2).

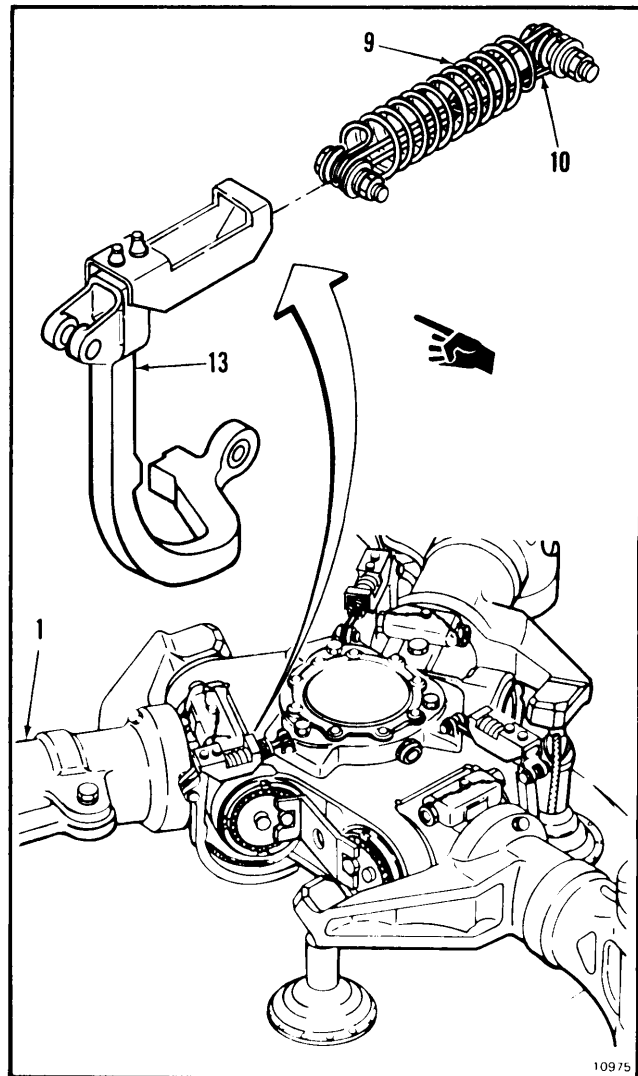

**5-54 REMOVE CENTRIFUGAL DROOP STOPS****5-54**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692**Materials:**


Twine (E433)

**Personnel Required:**

Medium Helicopter Repairer (2)

**Equipment Condition:**


Battery Disconnected (Task 1-39)  
 Electrical Power Off  
 Hydraulic Power Off  
 One Forward Blade Tied-Down (Task 1-26)  
 Aft Rotary-Wing Blades Removed (Task 5-64)  
 Pylon Workstands Open (Task 2-2)  
 Aft Rotary-Wing Head Removed (Task 5-8)

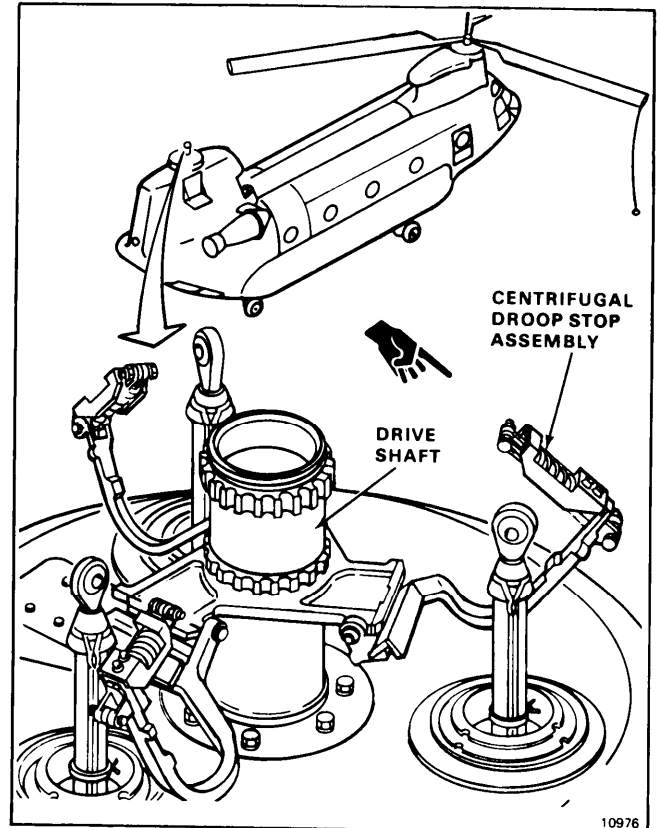

1. Tie three balancing arms (1) together. Use twine (E433).
2. Remove centrifugal droop stop assembly (2) from drive shaft (3).

## FOLLOW-ON MAINTENANCE:

None

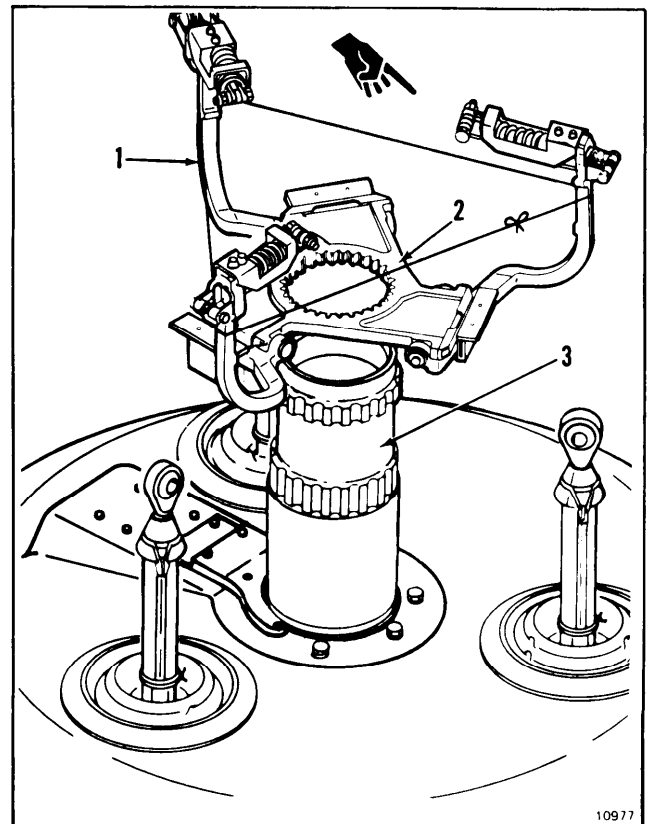**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Torque Wrench, 5 to 55 Inch-Pounds

**Materials:**

Grease (E190)  
Twine (E433)  
Cloth (E120)  
Gloves (E186)

**Parts:**


Cotter Pins

**Personnel Required:**


Medium Helicopter Repairer (2)  
Inspector

**References:**

TM 55-1520-240-23P  
Task 5-9

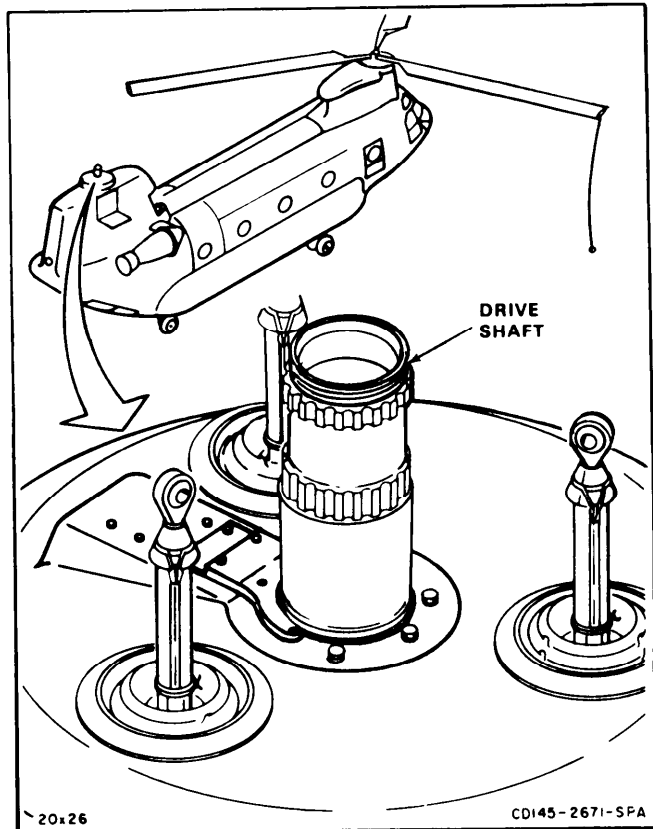


1. Tie three balancing arms (1) together. Use twine (E433) (2).
2. Apply grease (E190) to splines (3) of mounting plate (4). Wipe excess grease from top and bottom of plate. Use cloth (E120). Wear gloves (E186).

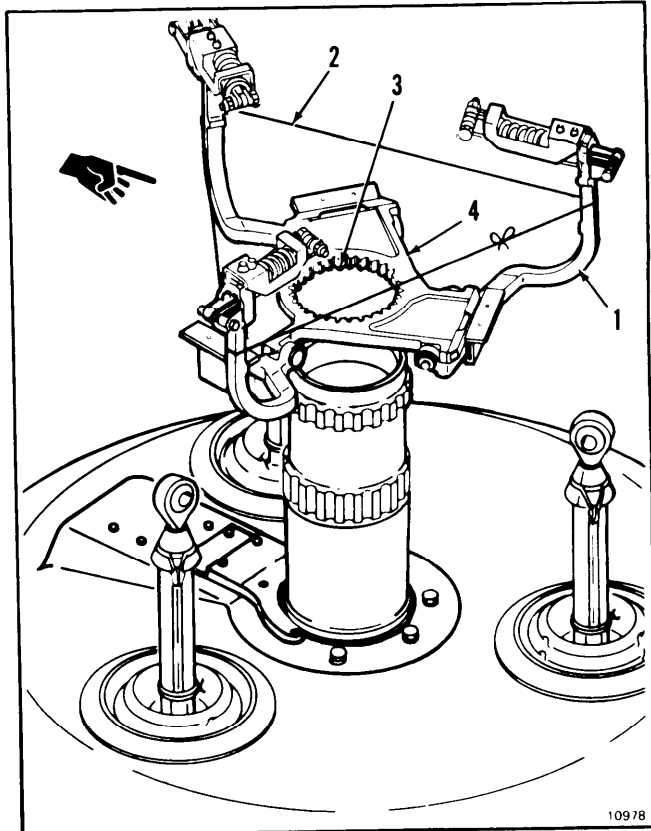

5-55 INSTALL CENTRIFUGAL DROOP STOPS (Continued)


3. Align master spline (5) on mounting plate (4) with master spline (6) on drive shaft (7).
4. Install centrifugal droop stop (8) on drive shaft (7).

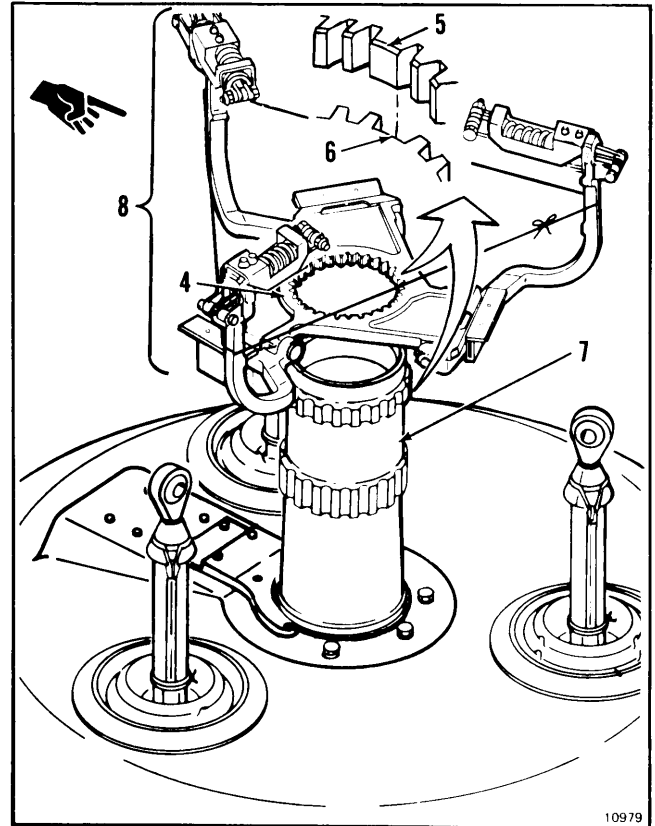

**CAUTION**


Do not allow balancing arms to fall against weather protective cover. Damage to cover can occur.

5. Untie balancing arms (1). Carefully lower arms until arms rest against cover (9).

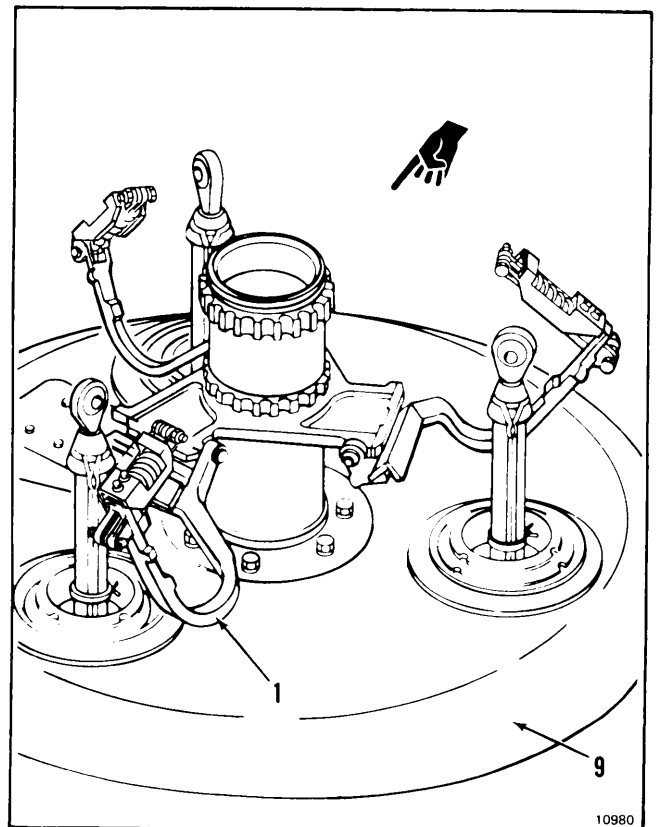


GO TO NEXT PAGE

6. Install rotary-wing head (10) (Task 5-9).

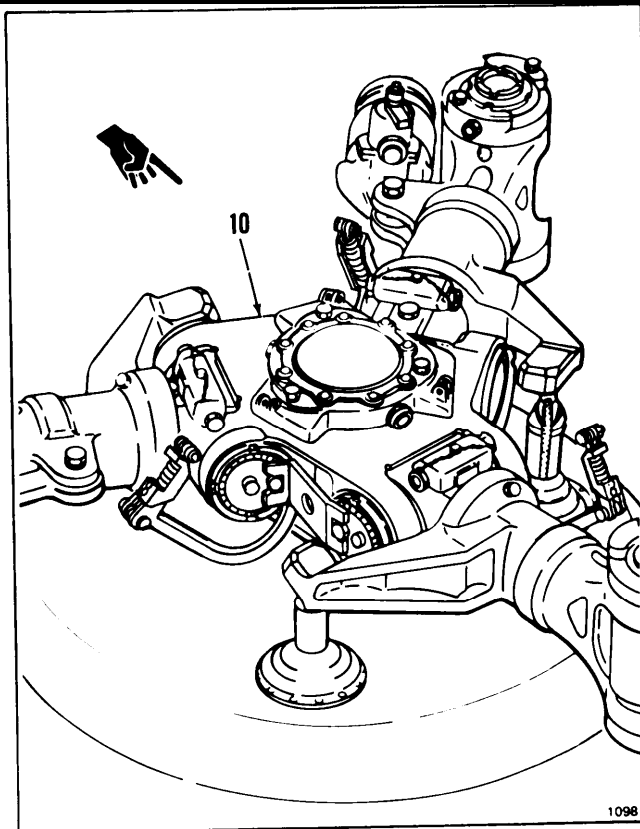


7. Remove bolt (11) from extension spring (12), limiter spring (13), two washers (14), bearing (15), two washers (16), and nut (17).
8. Check that grommet (18) is in spring (12).

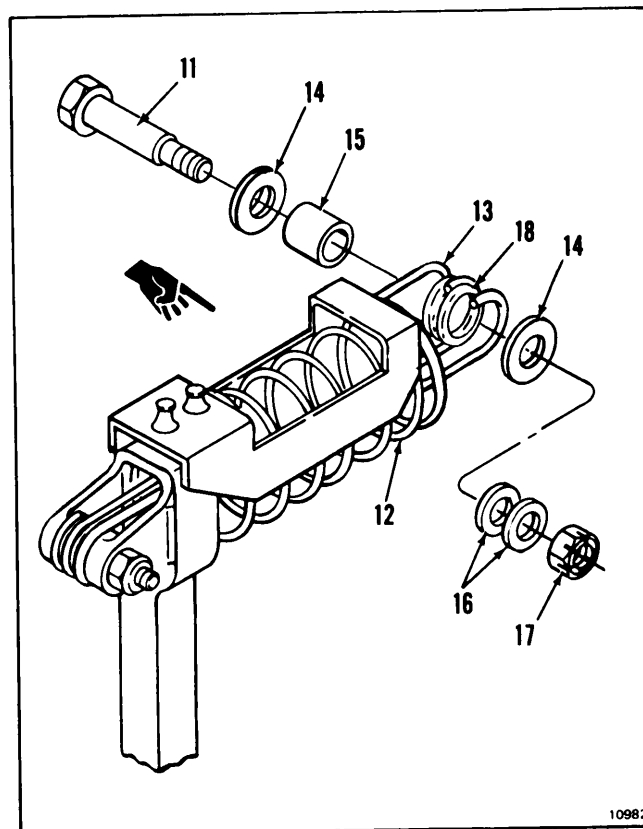


## 5-55 INSTALL CENTRIFUGAL DROOP STOPS (Continued)

5-55

9. Align bearing (15), extension spring (12) two washers (14), and limiter spring (13). Maintain alignment of these parts, lift balancing arm (1), and extend spring to **position parts between lugs (19)**.
10. Install bolt (11) with bolt head toward rotary-wing head (10). Install washers (16), nut (17), and cotter pin (20). **Torque nut to 12 to 15 inch-pounds.** Add washers as required to align cotter pin.
11. Repeat steps 8 thru 10 to connect remaining two balancing arms (1).

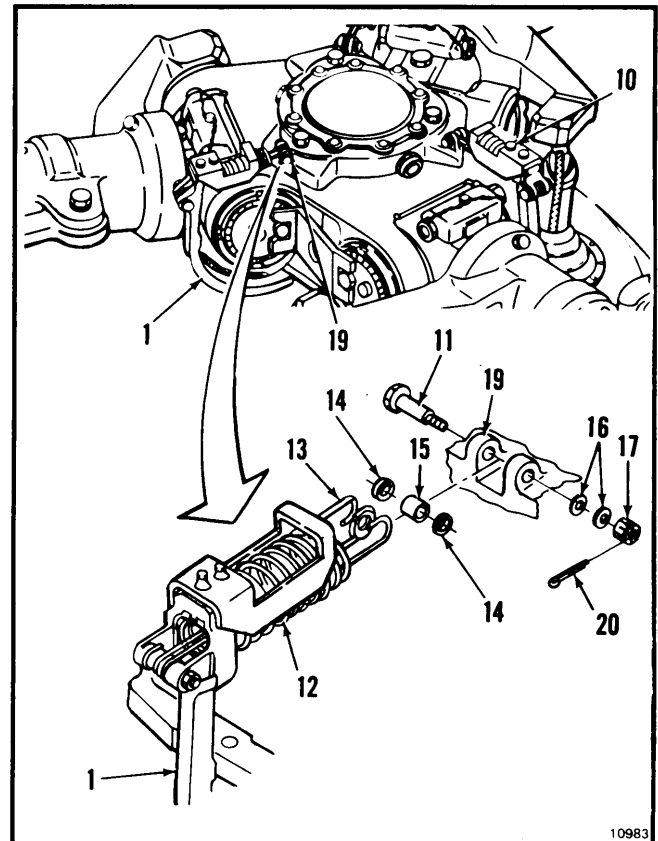**INSPECT****FOLLOW-ON MAINTENANCE:**

- Check spring-back adjustment (Task 5-49).
- Install droop stop shrouds (Task 5-48.5).
- Install rotary-wing blades (Task 5-84).
- Install rotary-wing shock absorbers (Task 5-93).
- Close work platforms (Task 2-2).

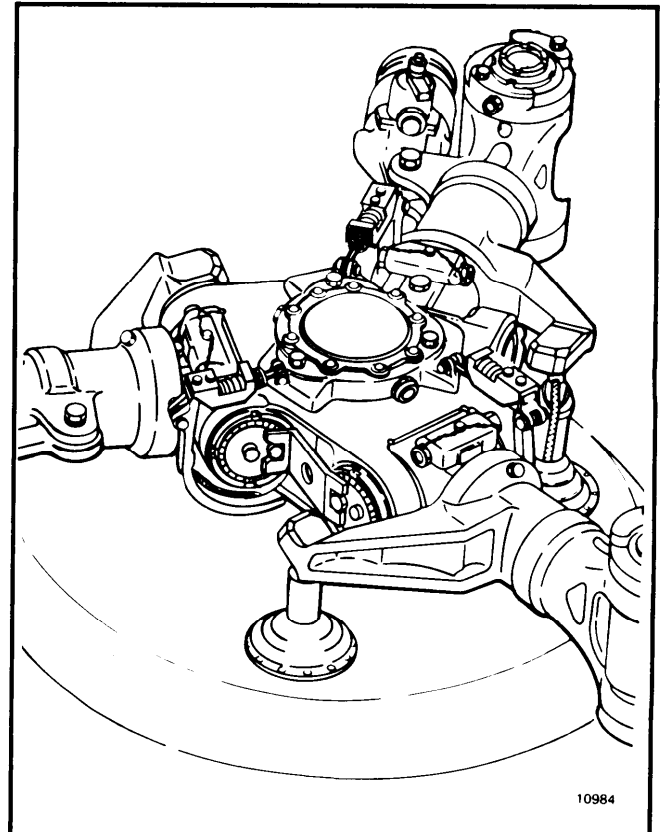**END OF TASK**



**5-56 REMOVE CENTRIFUGAL DROOP STOP SPRINGS AND WEIGHTS 5-56**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Plier Wrench

**Materials:**

None

**Personnel Required:**

- Medium Helicopter Repairer (5)

**Equipment Condition:**


Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Pylon Workstand Open (Task 2-2)  
Tiedown Line Installed on One Forward and One  
Aft Blade (Task 1-26)

- Droop Stop Shroud Removed (Task 5-48.3)

**General Safety Instructions:**



Do not lower blade suddenly.  
Personnel can be injured if blade  
is lowered suddenly while droop  
stop work is in progress.

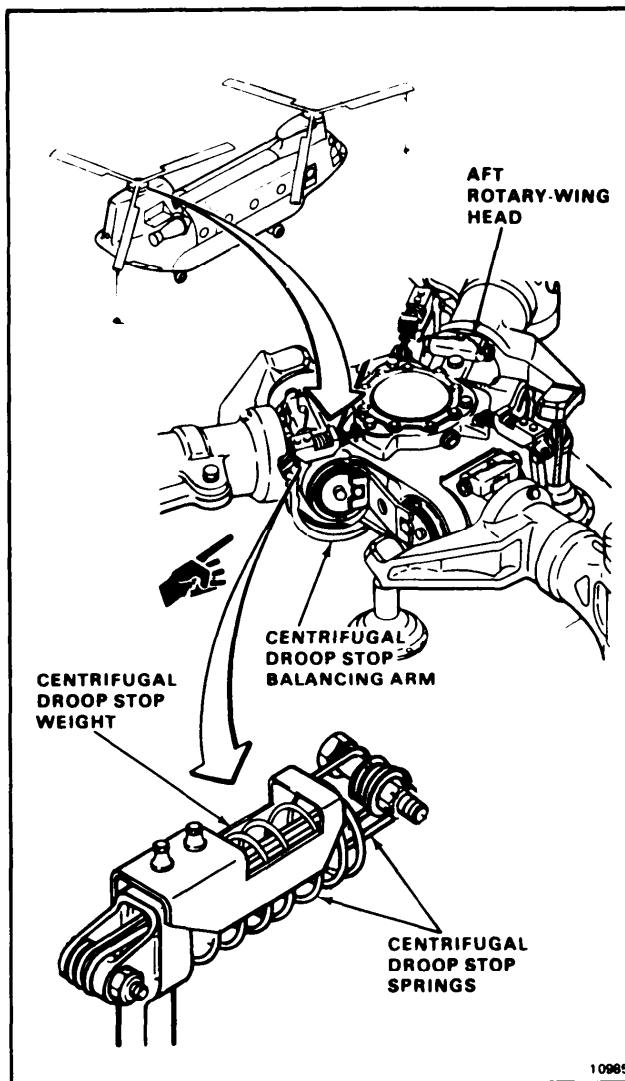


10965

**NOTE**

There are three centrifugal droop  
stops. Procedure is same to remove  
springs and weights from any  
centrifugal droop stop.

1. Position blade (1) over fuselage (2). Use tiedown line (3). Tie down one forward and one aft blade.

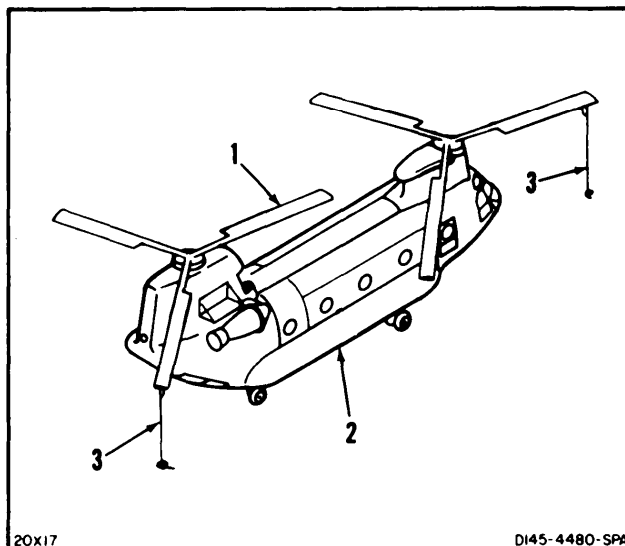

20x17

DI45-4480-SPA

## 5-56 REMOVE CENTRIFUGAL DROOP STOP SPRINGS AND WEIGHTS 5-56 (Continued)

2. Remove cotter pin (4), nut (5), and two washers (6) from bolt (7) through lugs (8).

### NOTE


Support spring load before removing bolt. Sudden release of spring will cause small parts to fly out of lugs.

3. Support extension spring (9) and remove bolt (7). **Remove extension spring, limiter spring (10), two washers (11), and bearing (12) from lugs (8).**
4. Have helpers lift and support blade (1) at tip.
5. Lower arm (13) slowly.

### NOTE


Blade may have to be lifted higher to free balancing arm.

6. Have helpers lower blade (1) until it is at rest about 6 inches above fuselage (2).

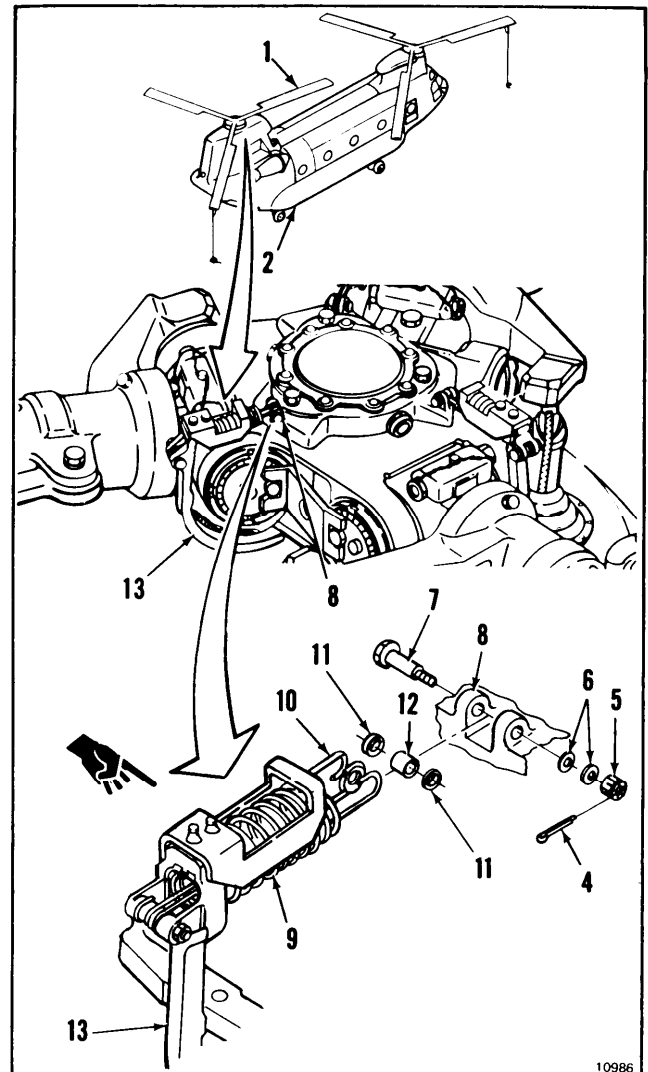

10986

7. Remove cotter pin (14), nut (15), and washers (16) from bolt (17) through lugs (18).
8. **Remove bolt (17), extension spring (9), limiter spring (10), two washers (19), and bearing (20) from lugs (18).**
9. **Remove limiter springs (10) from extension spring (9).**
10. **Remove two grommets (21) from extension spring (9).**

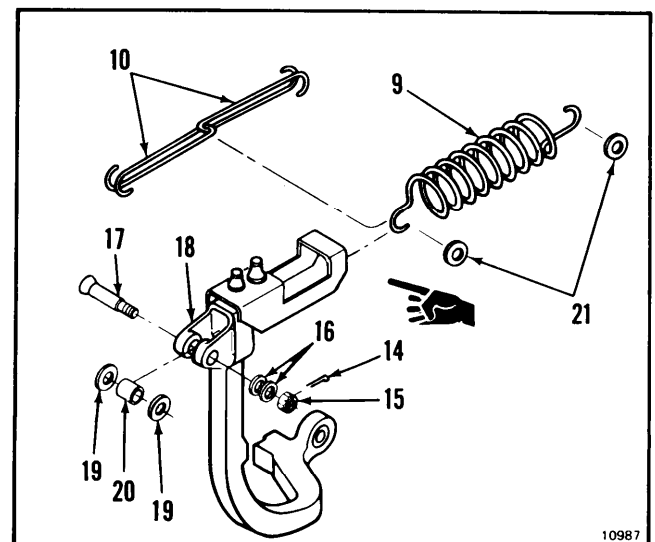

10987

**GO TO NEXT PAGE**

### 5-56 REMOVE CENTRIFUGAL DROOP STOP SPRINGS AND WEIGHTS 5-56


[Continued]

11. Remove two torque collars (22) and washers (23). Use plier wrench to hold collars. Turn screws (24) with socket key.

**NOTE**

Droop stops may have locknuts instead of torque collars.

12. **Remove** screws (24) and **weight (25)**.

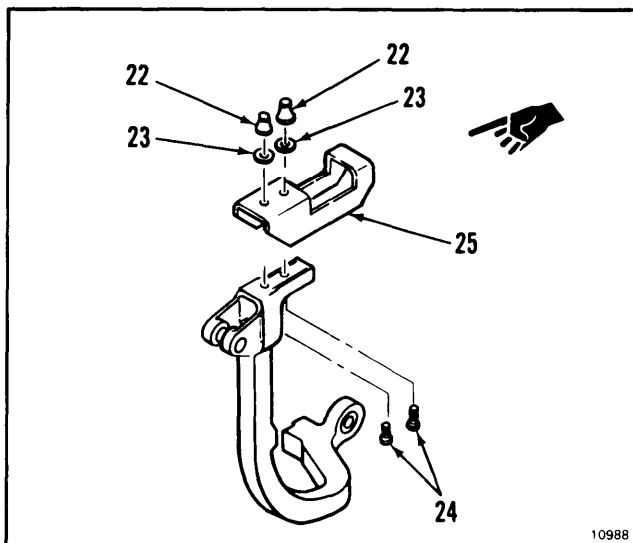

**FOLLOW-ON MAINTENANCE:**

None

**END OF TASK**

5-192 Change 14

**5-57 INSTALL CENTRIFUGAL DROOP STOP SPRINGS AND WEIGHTS****5-57**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Torque Wrench, 5 to 50 Inch-Pounds

**Materials:**

Epoxy Primer (E292)  
Gloves (E184.1)

**Parts:**

Cotter Pins

**Personnel Required:**

Medium Helicopter Repairer (5)  
Inspector

**References:**


TM 55-1520-240-23P

**General Safety Instructions:****WARNING**

Do not lower blade suddenly. Personnel can be injured if blade is lowered suddenly while droop stop work is in progress.

**WARNING**

Epoxy primer (E292) is flammable and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

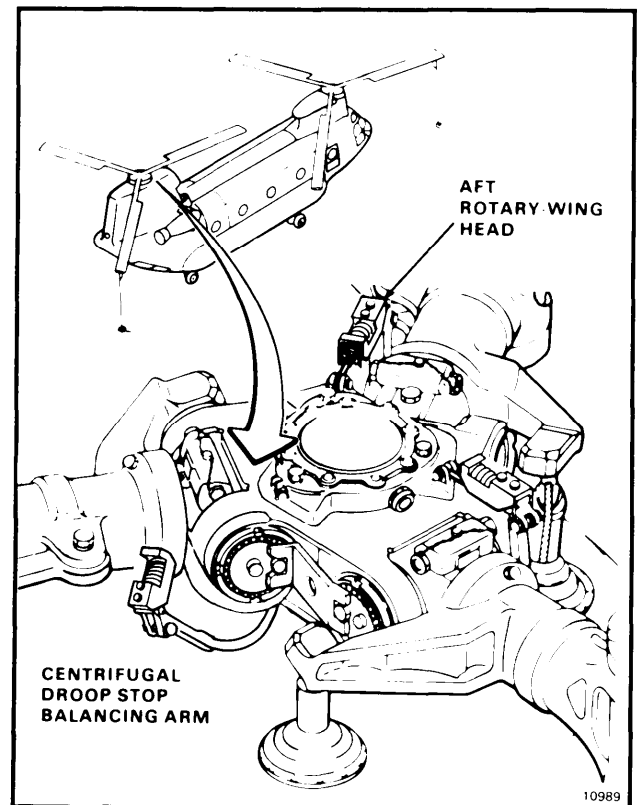**GO TO NEXT PAGE**


**CAUTION**

- Do not apply epoxy primer (E292) to screw thread. Torque will be incorrect.

**NOTE**

There are three centrifugal droop stops. Procedure is same to install springs and weights on any centrifugal droop stop.


- 1. Prime mating surfaces of balancing arm (1) and weight (2). Prime grip of screws (3). Use epoxy primer (E292). Wear gloves (E184.1).
- 2. **Position weight (2) on arm (1).** While primer is wet, install screws (3), washers (4), and torque collars (5). Turn torque collars until tops (6) break off. Use screw key to prevent screws from turning.

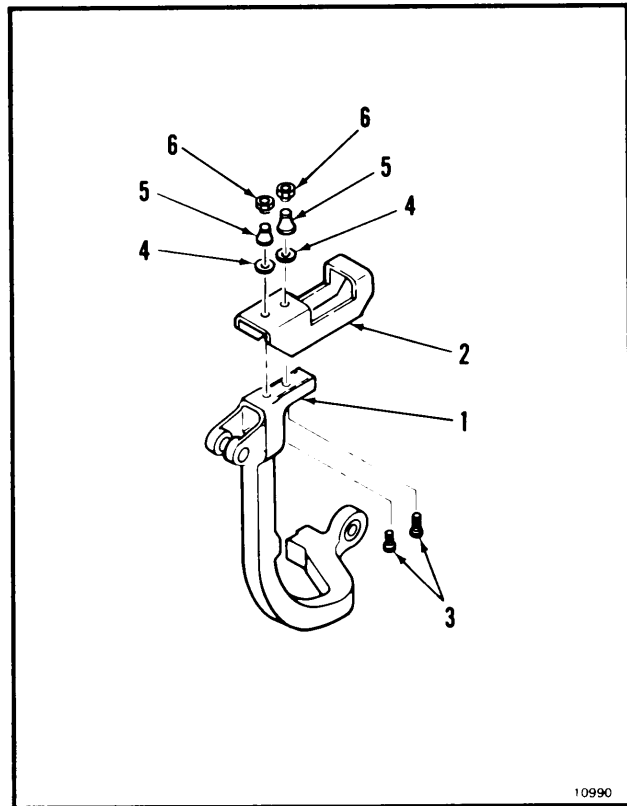

10990

## 5-57 INSTALL CENTRIFUGAL DROOP STOP SPRINGS AND WEIGHTS 5-57 (Continued)

3. Install two grommets (7) in ends of extension spring (8).
4. Hook limiter springs (9) together and **position limiter springs** in extension spring (8).
5. **Install extension spring (8) and out-board limiter spring (9)** on lugs (10) as follows:
  - a. Position bearing (11) in grommet (7) and ends of limiter spring (9).
  - b. Position two washers (12) over ends of bearing (11).
  - c. Position bearing (11) between lugs (10).
  - d. Install bolt (13), head toward pitch varying housing (14), through lugs (10) and bearing (11).
  - e. Install nut (15). **Torque nut to 12 to 15 inch-pounds**. Install cotter pin (16). Use washers (17) if needed to align cotter pin.

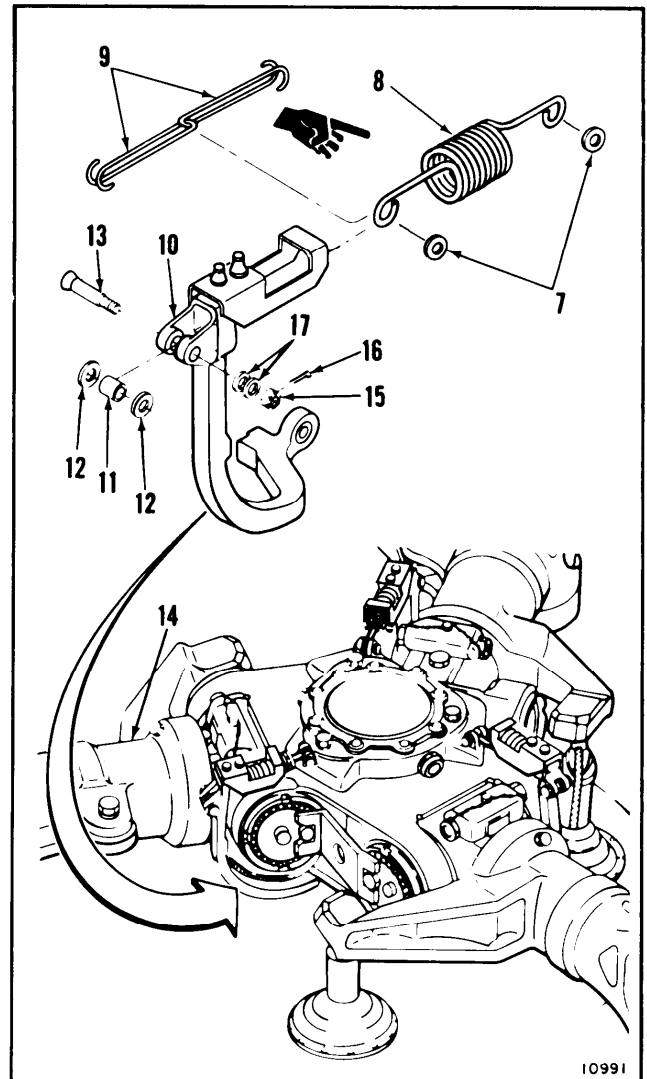


**GO TO NEXT PAGE**

**5-57 INSTALL CENTRIFUGAL DROOP STOP SPRINGS AND WEIGHTS 5-57**  
**(Continued)**

6. Install extension spring (8) and inboard limiter spring (9) on hub oil tank lugs (18) as follows:

- a. Position bearing (19) in grommet (7) and ends of limiter spring (9).
- b. Position two washers (20) over ends of bearing (19).
- c. Have helpers lift and support blade (21) at tip.
- d. Lift balancing arm (22).
- e. Extend spring (8) to position bearing (19) between lugs (18).
- f. Install bolt (23), head toward pitch varying housing (14), through lugs (18) and bearing (19).
- g. Install nut (24). **Torque nut to 12 to 15 inch-pounds.** Install cotter pin (25). Use washers (26) if needed to align cotter pin.
- h. Have helpers lower blade (21).

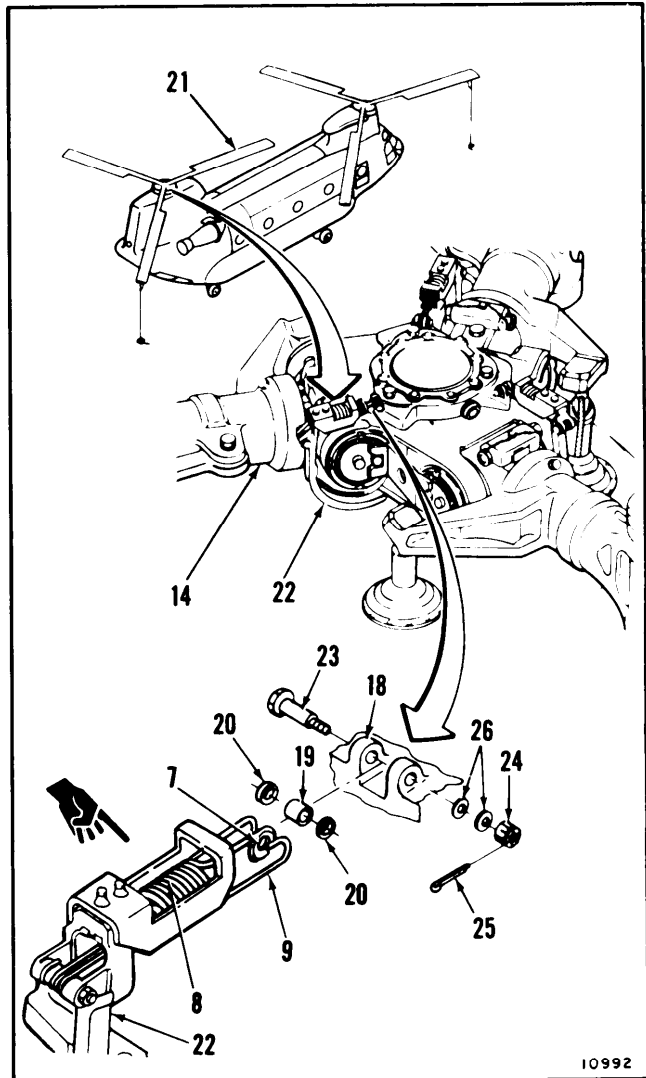


10992

**INSPECT**

**5-57 INSTALL CENTRIFUGAL DROOP STOP SPRINGS AND WEIGHTS 5-57  
(Continued)****FOLLOW-ON MAINTENANCE:**

- Install droop stop shrouds (Task 5-48.5).
- Close work platform (Task 2-2).

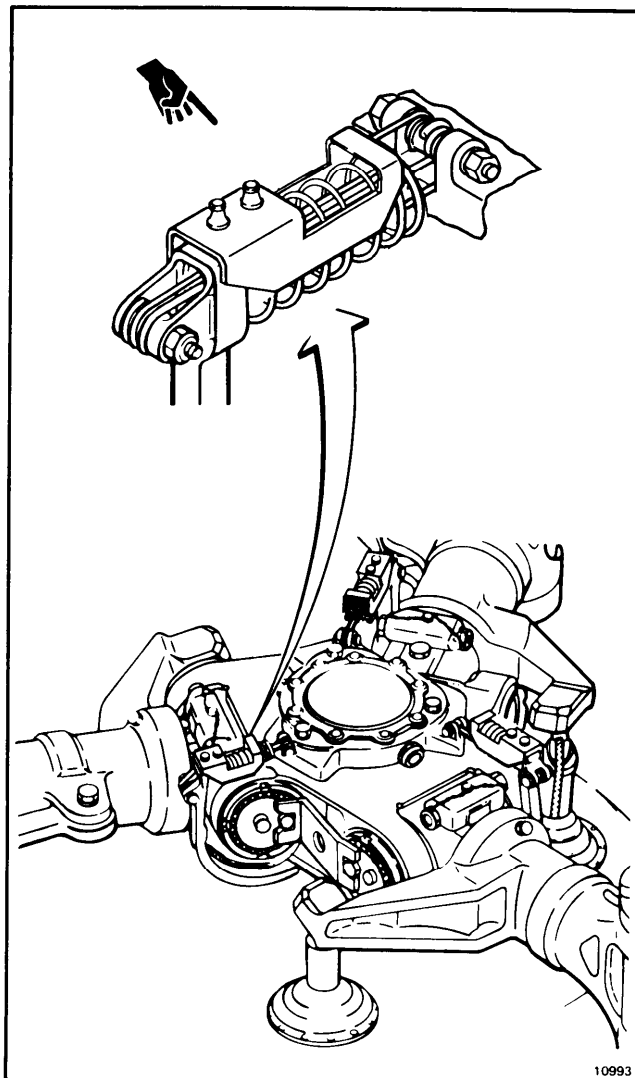**END OF TASK**



**5-58 REMOVE CENTRIFUGAL DROOP STOP BALANCING ARM**

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Drift, Soft Aluminum 3/4-inch Diameter,

**Materials:**


None

**Personnel Required:**

67U10 Medium Helicopter Repairer  
67U20 Medium Helicopter Repairer

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Pylon Work Platform Open (Task 2-2)  
Springs and Weights Removed (Task 5-56)  
Tiedown Line Installed on One Forward and Two Aft Blades (Task 1-26)

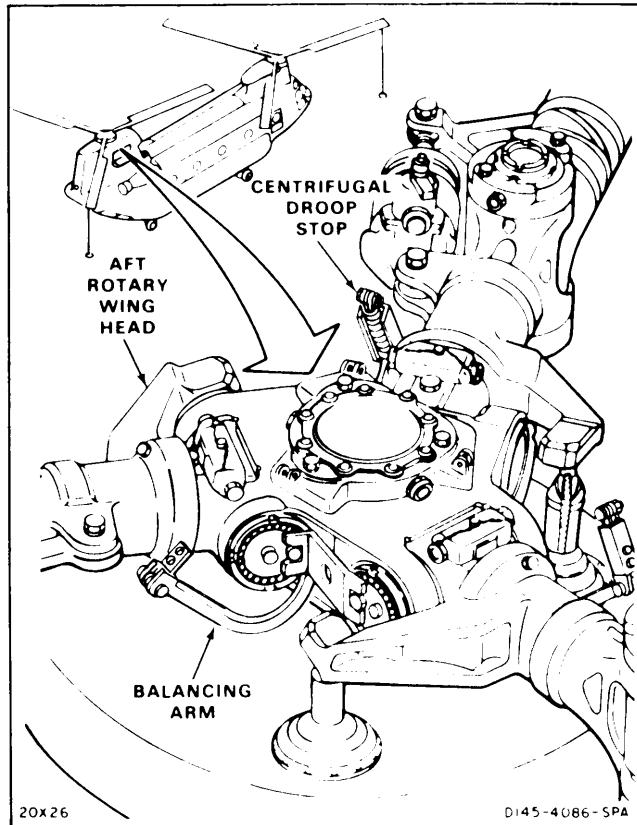


20X26

D145-4086-SPA

**NOTE**

There are three balancing arms.  
Procedure is same to remove any  
balancing arm.

1. Position balancing arm (1) over work platform
- (2). Tie down two blades (3). Tie blade (4) to forward towing shackle (5). Use tiedown lines (6).

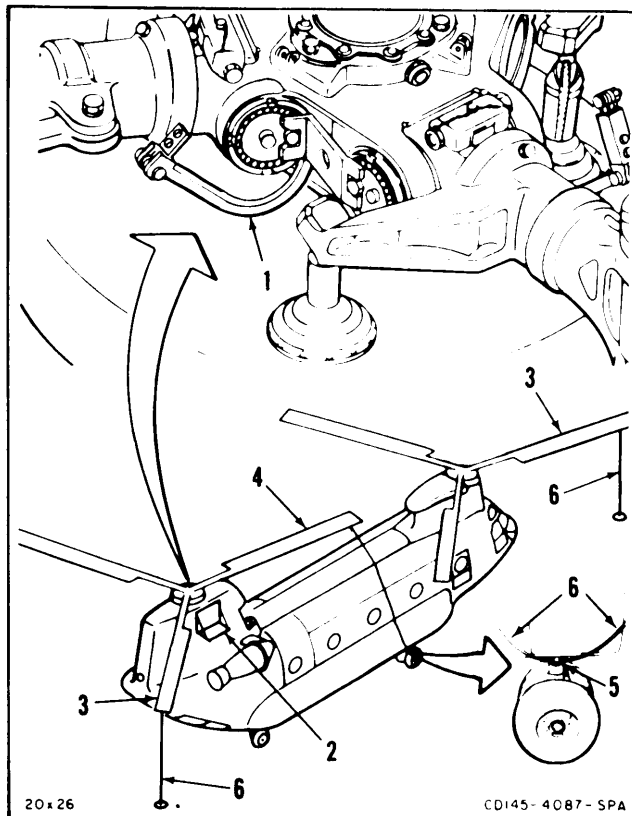

20x26


CD145-4087-SPA

**GO TO NEXT PAGE**


**5-58 REMOVE CENTRIFUGAL DROOP STOP BALANCING ARM  
(Continued)**

**5-58**

2. Remove cotter pin (7), nut (8), and washer (9)
3. Remove shaft (10) and four spacers (11).  
Remove balancing arm (1).

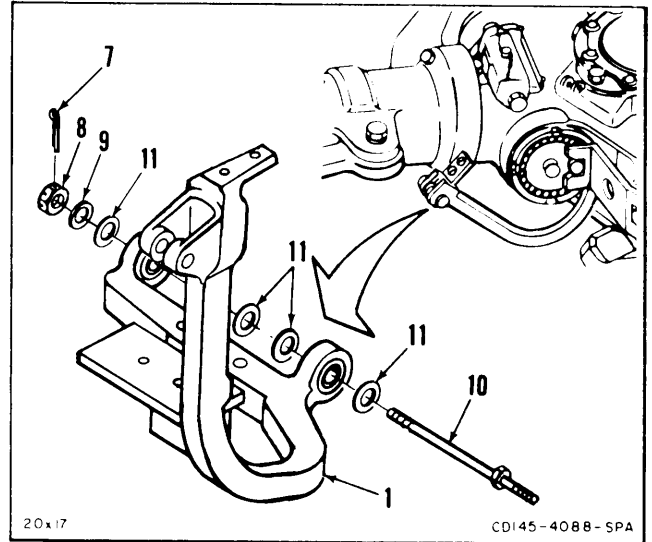


4. Deleted.
5. Remove two nuts (14) and washers (15). Remove bolt (13).
6. Deleted.
7. Remove interposer support (17) and interposer block (18).

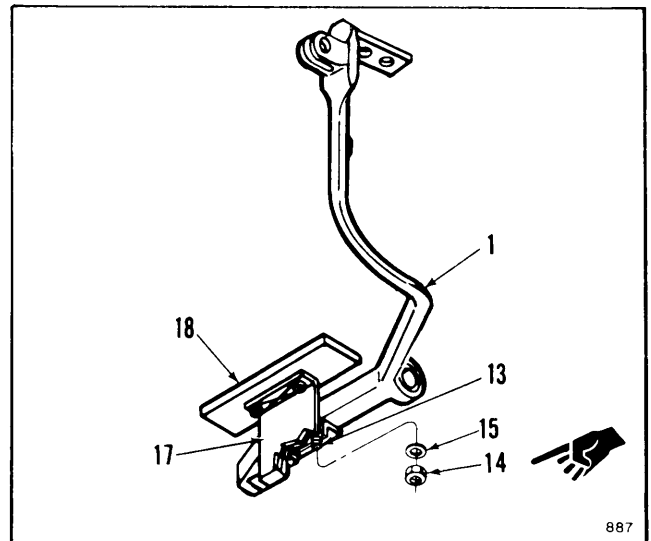

8. Remove two bearings (19) and bushings (20). Use drift.

**FOLLOW-ON MAINTENANCE:**

None

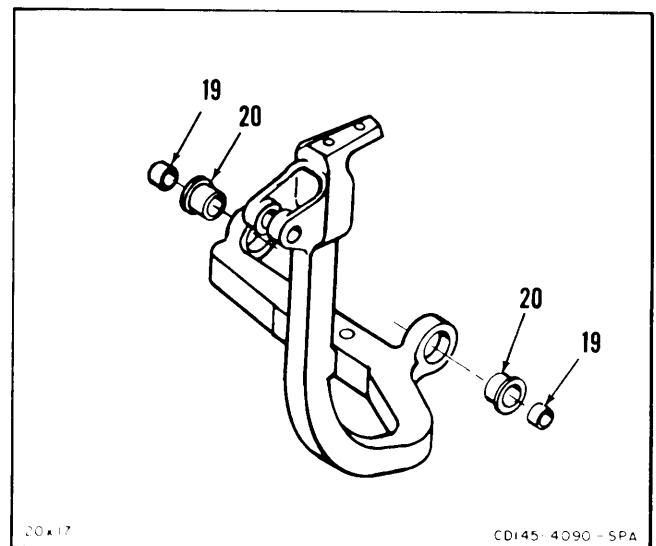

**END OF TASK**

**5-59 INSTALL CENTRIFUGAL DROOP STOP BALANCING ARM**

INITIAL SETUP

**Applicable Configuration:**

All

**Tools:**

- Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692
- Torque Wrench, 30 to 150 Inch-Pounds
- Drift, Brass

**Materials:**

Grease (E190)

**Parts:**


Cotter Pin

**Personnel Required:**

- 67U10 Medium Helicopter Repairer
- 67U20 Medium Helicopter Repairer
- 67U30 Inspector

**References:**


TM 55-1520-240-23P

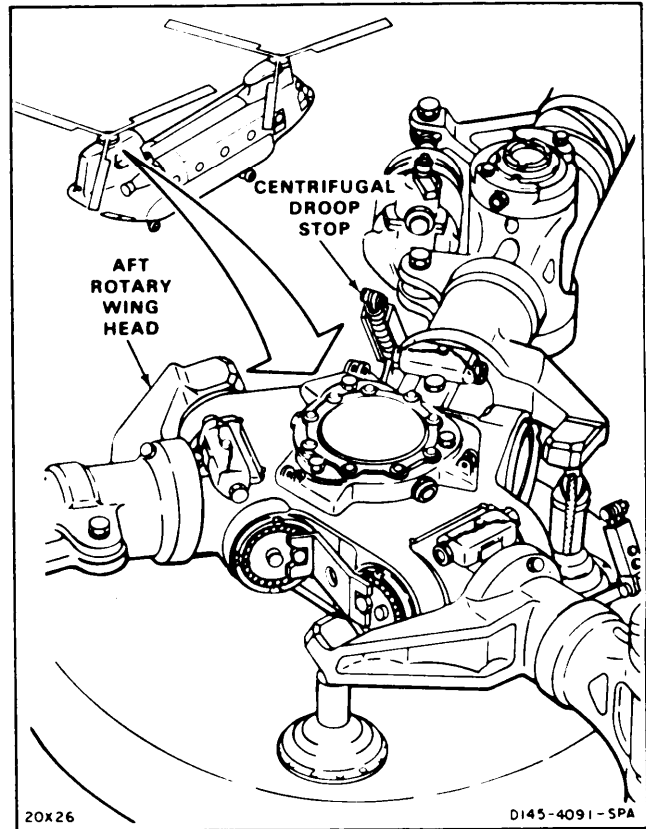

**NOTE**

Procedure is same to install any balancing arm.


1. Install two bushings (1) and bearings (2) in balancing arm (3). Use drift.

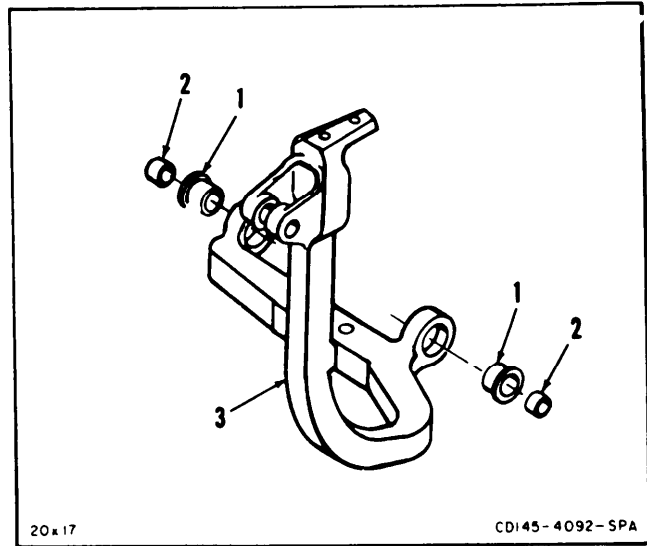

**GO TO NEXT PAGE**

**5-59 INSTALL CENTRIFUGAL DROOP STOP BALANCING ARM**  
**(Continued)**

2. Position support (4) and interposer block (5) on bolts (6) in balancing arm (3).
3. Install two washers (7) and nuts (8) on bolts (6).
4. Deleted.
5. Deleted.

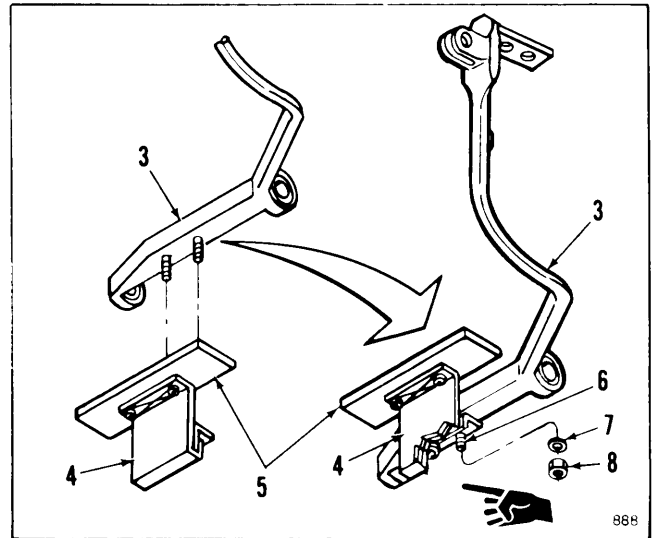


6. Apply grease (E190) to two spacers (11). Position spacers against inside surfaces of bearings (12).
7. Position balancing arm (3) on mounting plate (13). Move bearings (12) and spacers (11) outboard if needed.

**NOTE**

Hex head on shaft must face away from pitch housing.

8. Position spacer (14) on shaft (15). Install shaft through two bearings (12), two spacers (11), and mounting plate (13).
9. Install spacer (16) and nut (17) on shaft (15). Torque nut to **60 inch-pounds**. Install washers (18) if needed to install cotter pin (19).
10. Install cotter pin (19).

**INSPECT**

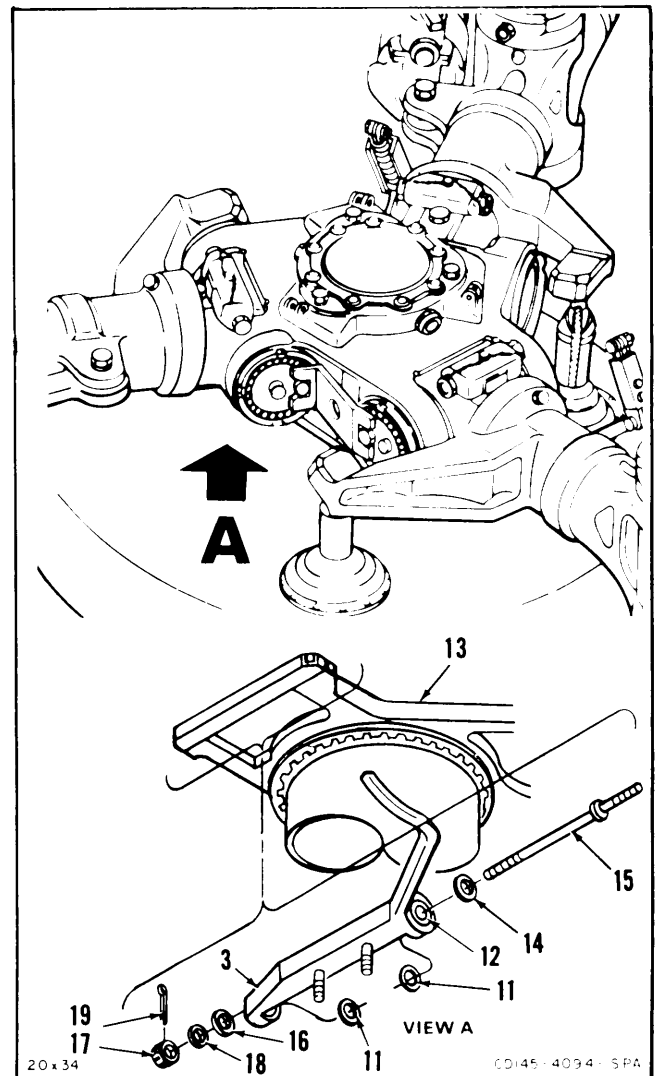

**GO TO NEXT PAGE**

**5-59 INSTALL CENTRIFUGAL DROOP STOP BALANCING ARM**  
**(Continued)**

---

5-59


**FOLLOW-ON MAINTENANCE:**

Install droop stop springs and weights (Task 5-57).

Perform functional check of centrifugal droop stop (Task 5-52).

Adjust interposer support spring back (Task 5-49).

Close pylon work platform (Task 2-2),

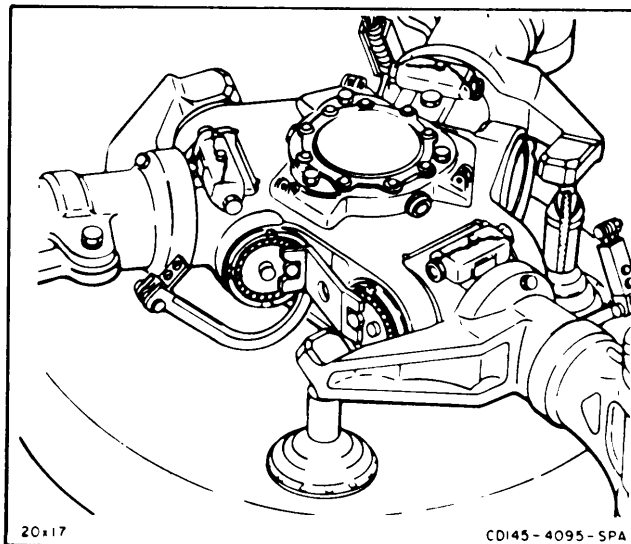

**END OF TASK**

**5-60 REMOVE CENTRIFUGAL DROOP STOP SUPPORT AND BLOCKS 5-60**

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Drift, Aluminum or Phenolic

**Materials:**

None

**Personnel Required:**

- Medium Helicopter Repairer (5)

**Equipment Condition:**


Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Aft Pylon Work Platforms Open (Task 2-2)  
Tiedown Line Installed on One Forward and One  
Aft Blade (Task 1-26)

- Droop Stop Shrouds Removed (Task 5-48.3).

**General Safety Instructions:**

**WARNING**


**Do not lower blade suddenly. Personnel can be injured if blade is lowered suddenly while droop stop work is in progress.**

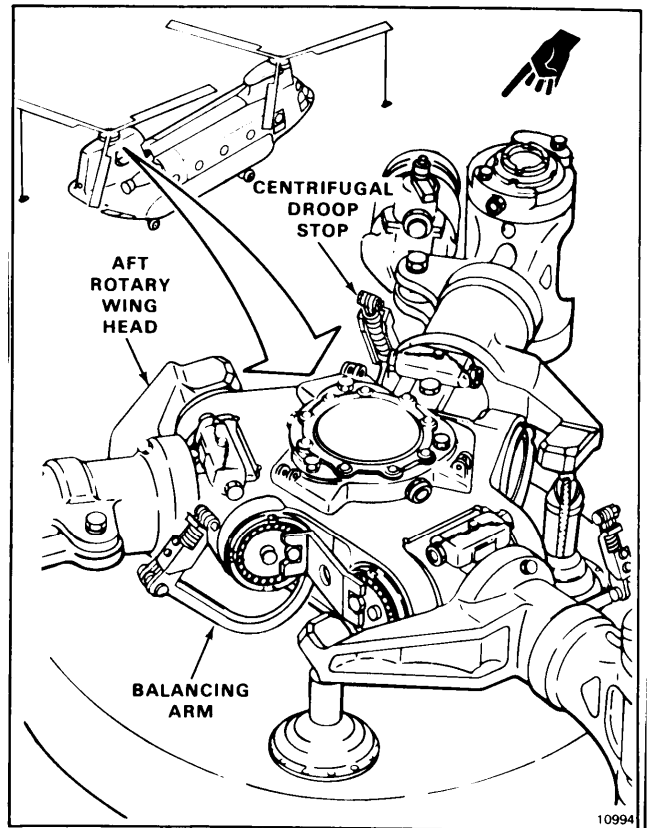

**NOTE**

- There are three centrifugal droop stop supports and blocks.
- Procedure is same to remove any centrifugal droop stop support and blocks.
- One rotor blade is connected to support and blocks of each centrifugal droop stop.
- Blade for support and blocks to be removed must be positioned over fuselage.


1. **Position blade (1) over fuselage (2).** Use tiedown line (3). Tie down one forward and one aft blade.

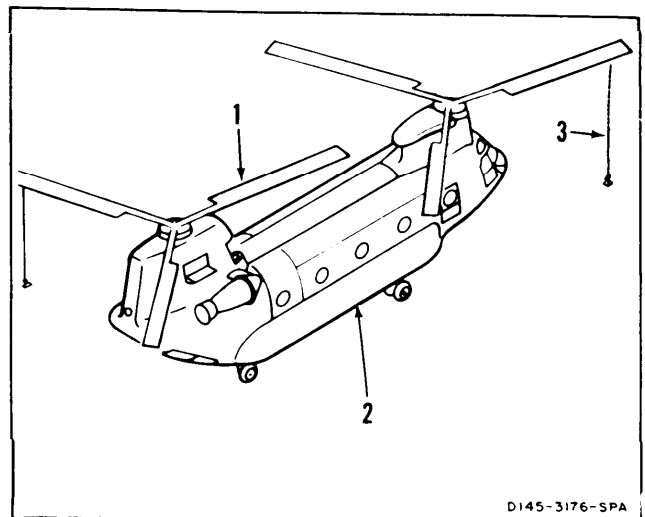

**GO TO NEXT PAGE**

**5-60 REMOVE CENTRIFUGAL DROOP STOP SUPPORT AND BLOCKS 5-60**  
**(Continued)**

2. Have helpers lift blade (1) until fixed droop stop (4) on shaft (5) is clear of interposer block (6). Support blade.
3. **Pull balancing arm (7) out to clear interposer block (6).** Have helpers lower blade (1) until fixed droop stop (4) rests against flight stop (8).

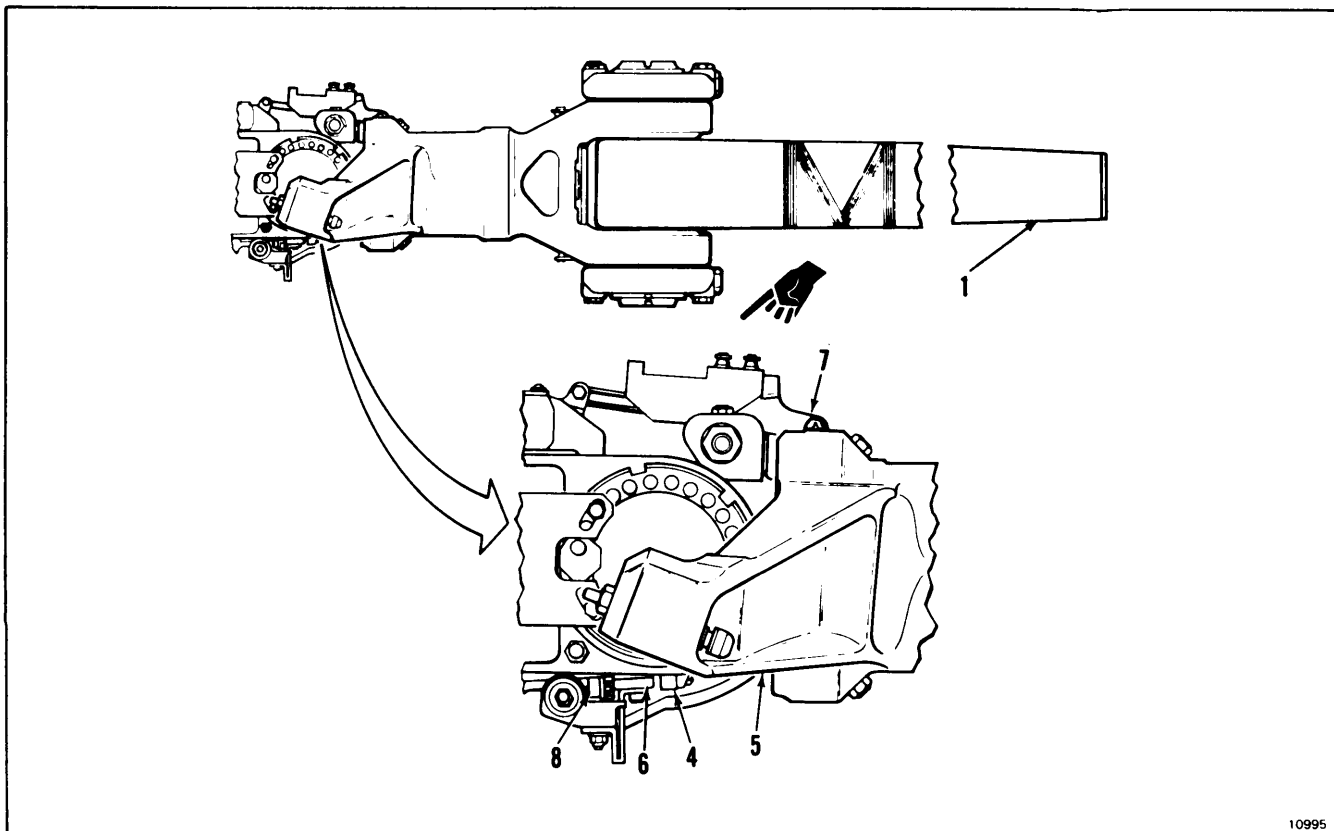

10995

## 5-60 REMOVE CENTRIFUGAL DROOP STOP SUPPORT AND BLOCKS (Continued)

5-60

4. Remove lockwire and two screws (9) from interposer block (6). **Remove interposer block.**
5. **Remove interposer support (10)** as follows:
  - a. Deleted.
  - b. Remove two locking nuts (13) and washers (14).
  - c. Deleted.
  - d. Remove interposer support (10).
6. Remove lockwire and two screws (16).


**CAUTION**

**Striker block must be removed straight out, away from mounting plate. Striker block key can be damaged by removal in any other direction.**

7. **Remove striker block (17)** straight out from keyway (18) in mounting plate (19). Tap edge of striker block from mounting-plate side. Use aluminum or phenolic drift.

**FOLLOW-ON MAINTENANCE:**

None

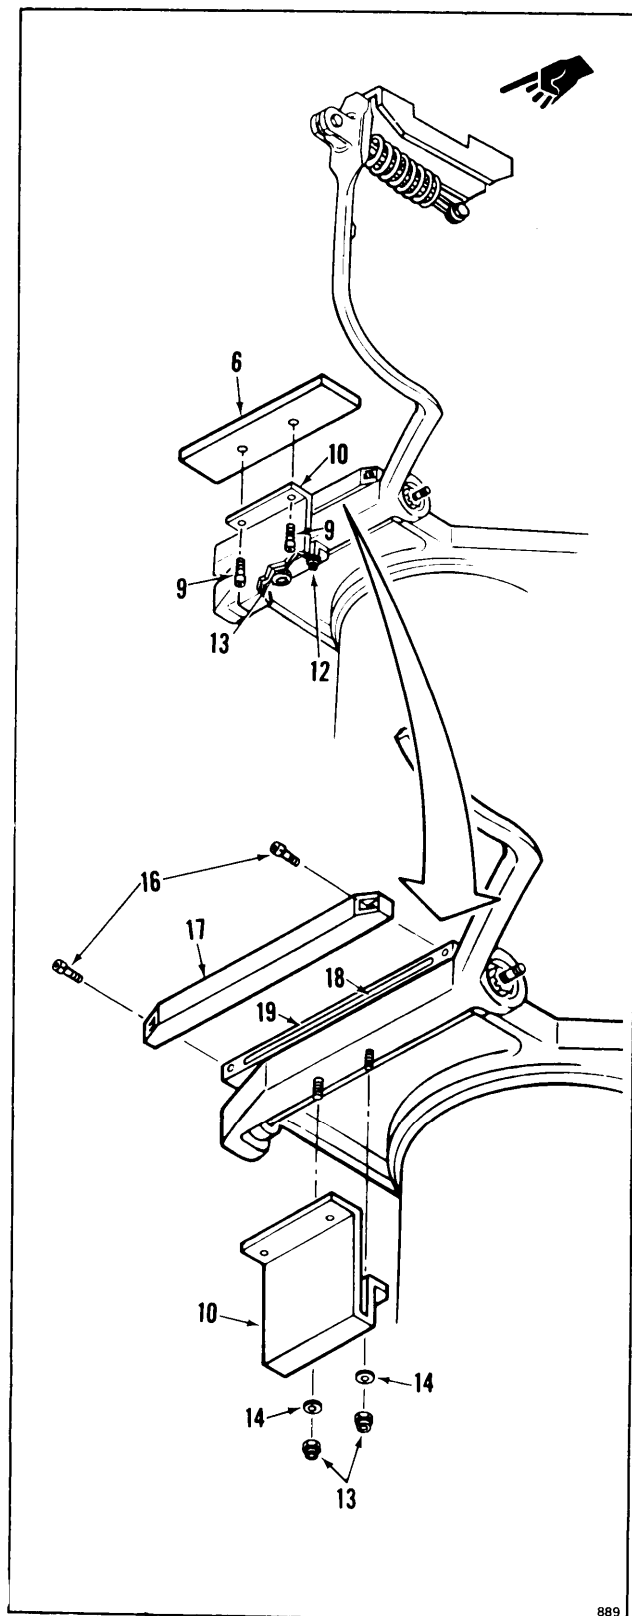

**END OF TASK**



## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Torque Wrench, 30 to 150 Inch-Pounds

**Materials:**

Cloth (E120)  
Lockwire (E229)  
Epoxy Primer (E292)  
Epoxy Primer (E292.1)  
Gloves (E184.1)

**Personnel Required:**

Medium Helicopter Repairer (5)  
Inspector

**References:**


TM 55-1 520-240-23P  
Task 5-49

**General Safety Instructions:****WARNING**

Do not lower blade suddenly. Personnel can be injured if blade is lowered suddenly while droop stop work is in progress.

**WARNING**

Epoxy primers (E292) and (E292.1) are flammable and toxic. They can irritate skin and cause burns. Use only with adequate ventilation, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

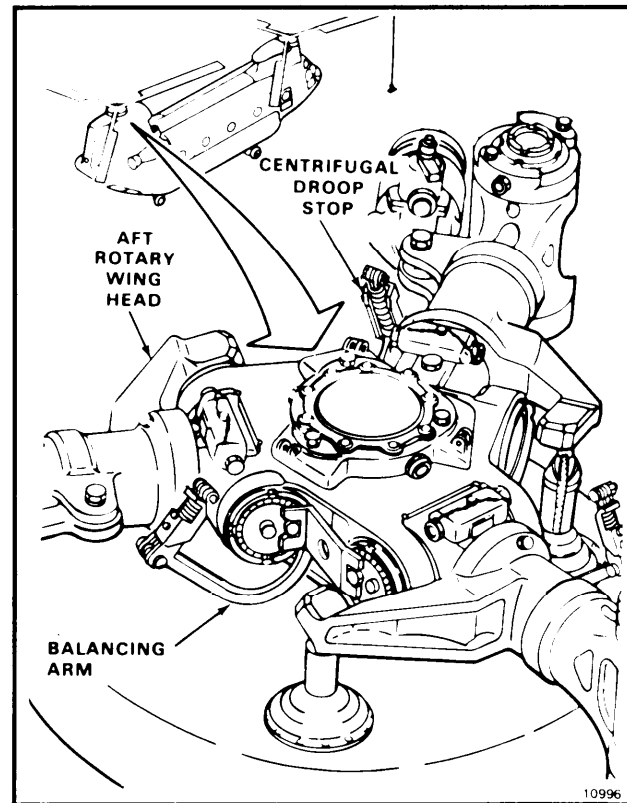


10996

GO TO NEXT PAGE

5-206 Change 32

**5-61 INSTALL CENTRIFUGAL DROOP STOP SUPPORT  
AND BLOCKS (Continued)****5-61****NOTE**

- There are three centrifugal droop stop supports and blocks.
  - Procedure is same to install any centrifugal droop stop support and blocks.
  - One rotor blade is connected to support and blocks of each centrifugal droop stop.
  - Blade for support and blocks to be installed must be positioned over fuselage.
1. Check that blade (1) is centered over fuselage (2).

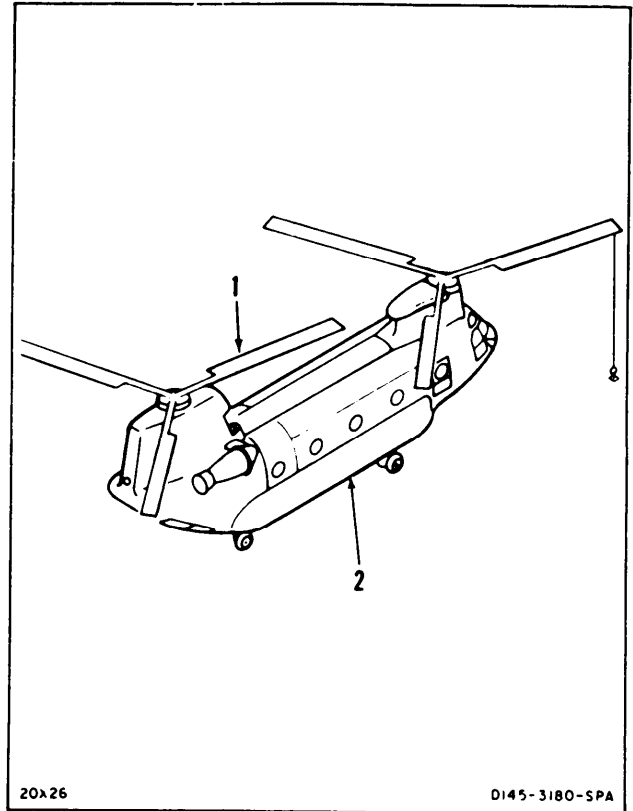
**GO TO NEXT PAGE****5-207**

2. Have helpers lift and support blade (1).
3. Prime contact surfaces of mounting plate (3) and striker block (4). Use epoxy primer (E292). Wear gloves (E184.1).

**NOTE**


Install screws before primer dries.

4. **Position block (4)**, with cutout (5) up, in key-way (6) of plate (3). **Install two screws (7)**. **Torque screws to 70 inch-pounds.** Lock-wire screws. Use lockwire (E229).

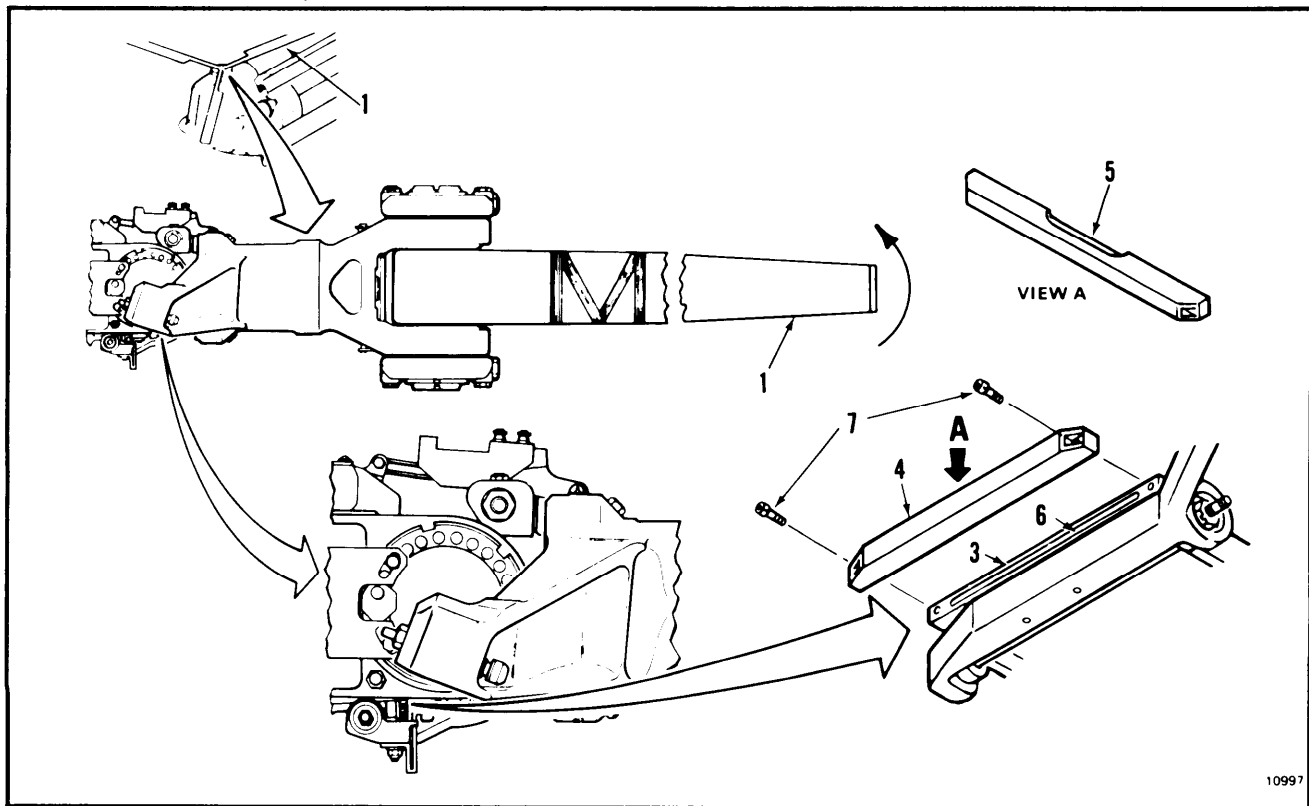

**5-61 INSTALL CENTRIFUGAL DROOP STOP SUPPORT AND BLOCKS**  
**(Continued)**


5. **Position interposer block (8) on support (9). Install two screws (10). Lockwire screws together. Use lockwire (E229).**

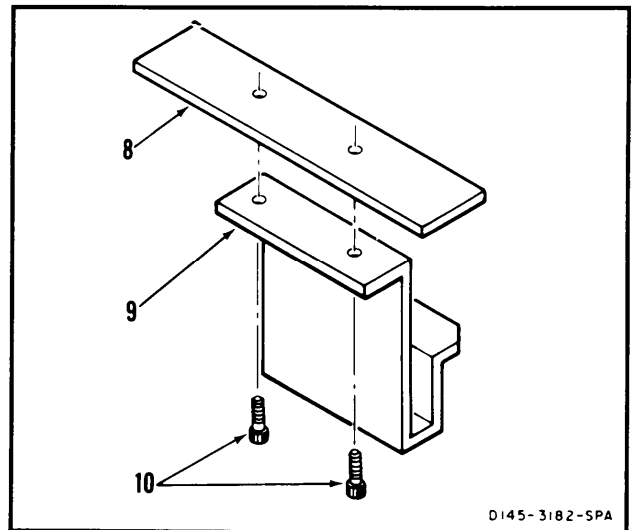


**NOTE**

If support is attached to arm before primer is completely dry, interposer will not spring back.

6. **Prime contact surfaces of support (9) and balancing arm (11). Use two even coats of epoxy primer (E29.1). Allow to dry completely. Wear gloves (E184.1).**

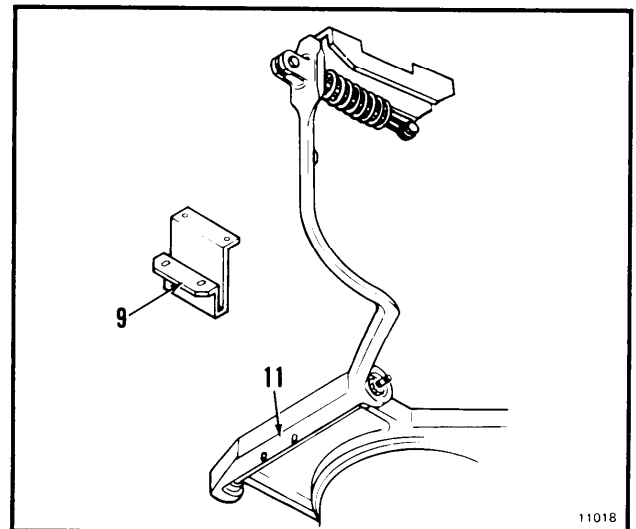


7. Install interposer support (9) as follows:
  - a. Position support (9) on arm (11) over two bolts (12).
  - b. Install washers (13) and nuts (14). Do not tighten nuts completely.
  - c. Deleted.
  - d. Deleted.
  - e. Deleted.

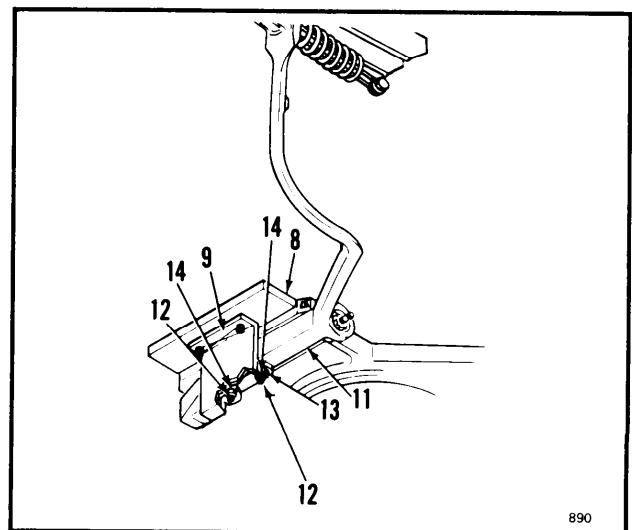

**GO TO NEXT PAGE**

8. Have helpers lift blade until droop stop seats, then lower blade (1).

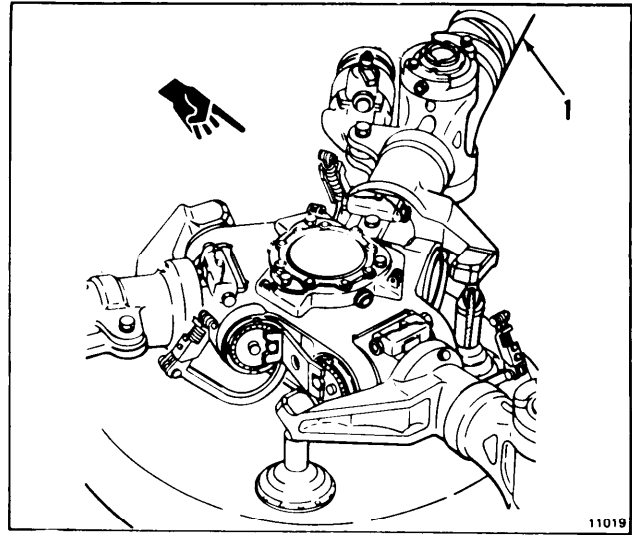

**FOLLOW-ON MAINTENANCE:**

Adjust interposer support spring-back (Task 5-49).

Install droop stop shrouds (Task 5-48.5).

Close aft pylon work platforms (Task 2-2).

**5-61.1 REPLACE INBOARD DAMPNER UPPER LUG BUSHING**

5-61.1

**INITIAL SETUP****Applicable Configurations:**

With 50

**Tools:**

Powertrain Repairer's Tool Kit  
 Technical Inspection Tool Kit  
 Puller Kit A57QB, NSN 5180-00-089-3660  
 Go-No-Go Gage B39584  
 Electrical Heat Gun

**Materials:**

Cloth (E120)  
 Locquic Primer T (E295.1)  
 Loc-Tite Number 635 (E345.2)  
 Acetone O-A-51 (E20)  
 Chemical Film Coating (E113)  
 Antiseize Compound (E75)  
 Scotch Brite (E2)  
 Gloves (E187)

**Personnel Required:**

Medium Helicopter Repairer (1)  
 Aircraft Powertrain Repairer (1)  
 Inspector

**Equipment Condition**

Battery Disconnected (Task 1-39)  
 Electrical Power Off  
 Hydraulic Power Off  
 Forward and Aft Work Platforms  
 Open (Task 2-2)  
 Rotary Wing Blade Removed  
 as required (Task 5-64)

**References:**


TM 55-1 520-240-23P  
 Task 5-9

**General Safety Instructions****CAUTION**

Wear protective gloves when handling frozen or heated parts.

**CAUTION**

DO NOT compressor spread upper and lower pitch housing dampner lugs.

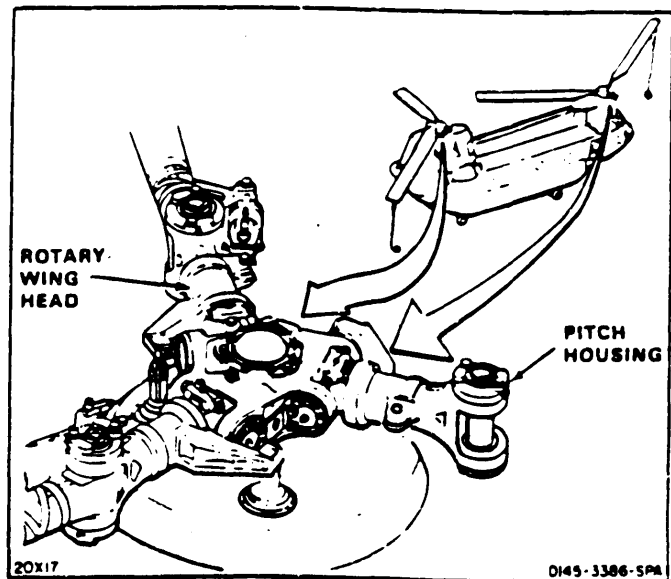**GO TO NEXT PAGE**

5-61.1 REPLACE INBOARD DAMPNER UPPER LUG BUSHING (Continued)

5-61.1

1. Using heat gun heat the upper lug (2) on the pitch housing assembly (1) for a maximum of 30 minutes.
2. Remove bushing (3) from lug (2) discard bushing.

**NOTE**

Do not use petroleum based cleaning solvent.

3. Use a dean cloth (E120) wet with acetone (E20), dean upper lug bushing bore (4).
4. Inspect the upper lug bore (4) for fretting and cleanliness.

**NOTE**

Do not use petroleum based cleaning solvent.

5. Using scotch-brite (E2) wet with acetone (E20) lightly polish upper lug bushing bore (4) to remove debris or fretting.
6. Touch-up reworked area with brush alodize (Chemical Film Coating) (E113).
7. Measure the upper lug bushing bore (4) at two 2 points 90 degrees apart. One reading shall be taken parallel to blade. Maximum dimension for bore (4) is 0.9362 inch maximum.

**NOTE**

Do not use petroleum based cleaning solvent.




8. Clean bushing (5) outside diameter and bolt/ bushing (6) using a clean cloth (E120) wet with acetone (E20).

**CAUTION**

Wear protective gloves when handling frozen or heated parts.

**NOTE**

Air dry primer/activator for 5 minutes prior to application of locking compound.

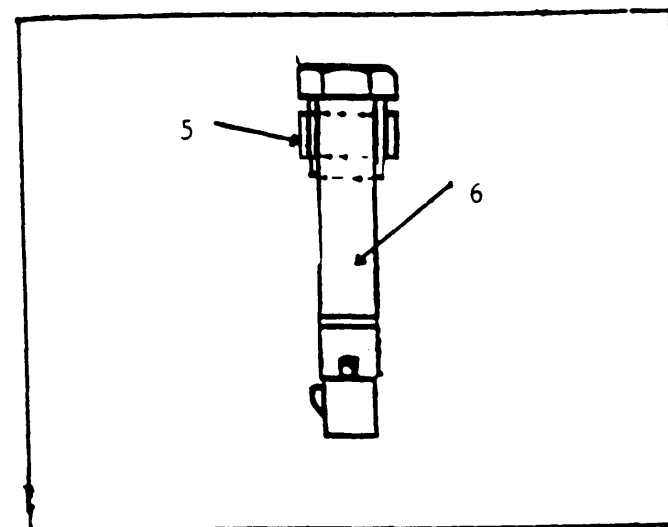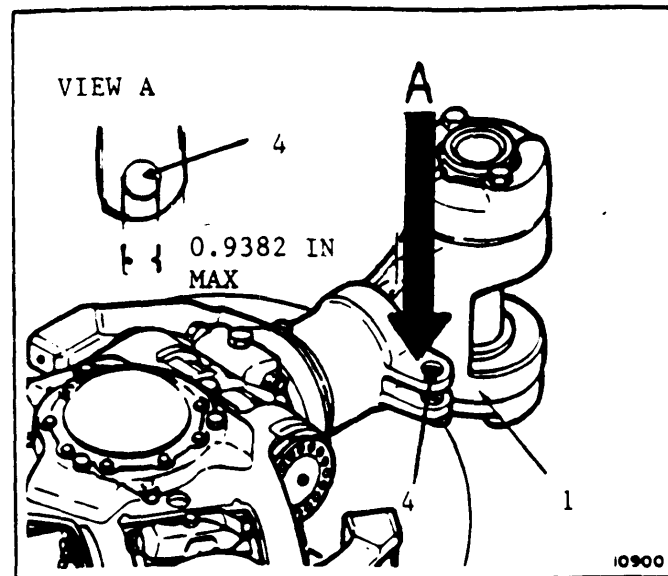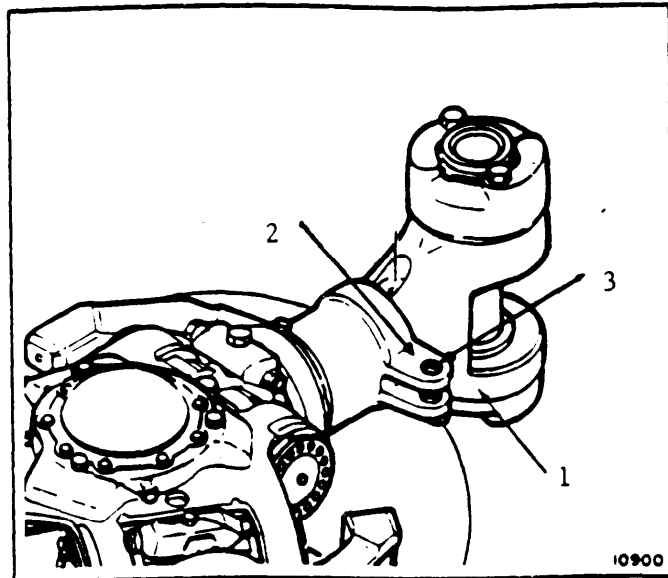

GO TO NEXT PAGE

## 5-61.1 REPLACE INBOARD DAMPNER UPPER LUG BUSHING (Continued)

5-61.

9. Using M/bushing (6), (with the pawl in a dosed position) install the bushing (5) on the bolt/bushing (6).

10. Reclean outer surface of bushing (5) using a dean cloth (E120) wet with acetone (E20).

**NOTE**

Air dry primer/activator for 5 minutes prior to application of locking compound.

11. Coat the outer surface of bushing (5) with Locquic Primer T (E295.1), and allow to air dry.

**NOTE**

Air dry primer/activator for 5 minutes prior to application of locking compound.

12. Coat the upper lug bore (4) with primer/activator, Locquic Primer T (E295.1) and allow to air dry.

**NOTE**



The upper lug must beat room temperature when Loc-Tite No. 635 is applied.

13. Coat the upper lug bore (4) with Loc-Tite No. 635 (E345.2) retaining compound.


**NOTE**

If bushing does not seat with hand force, lightly tap the head of the bolt with a plastic mallet until bushing is seated. Ensure bushing is not protruding beyond the upper or lower surface of the pitch housing lug.

14. Install bushing bolt (6) into upper lug (2). When installing the bolt/bushing into lug use caution to ensure that the bushing (5) does not separate from bolt/bushing (6).

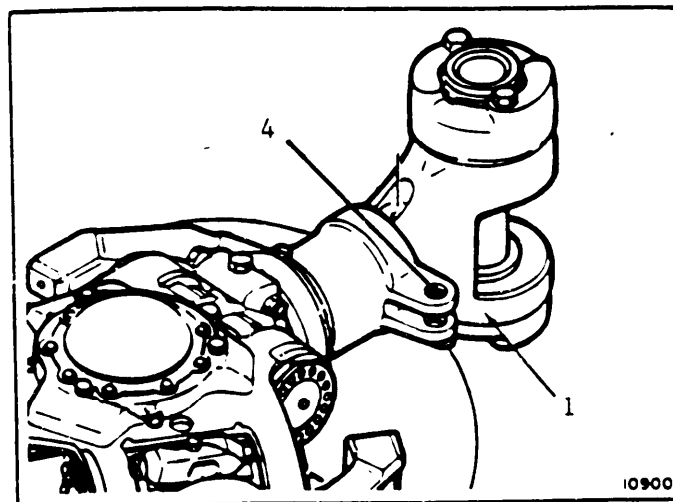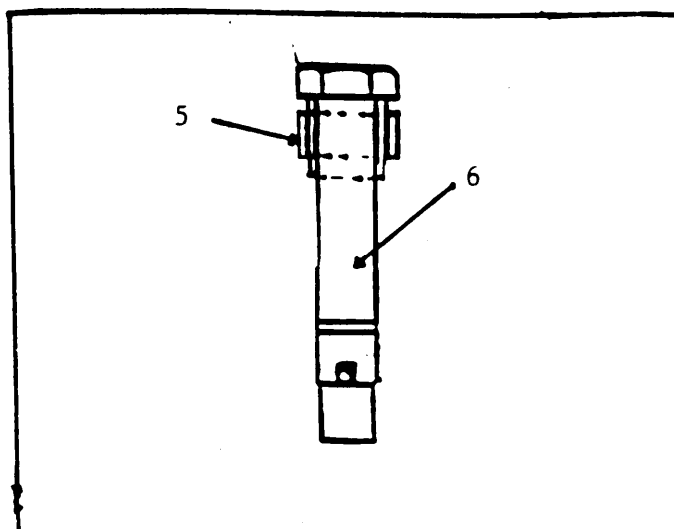

10900

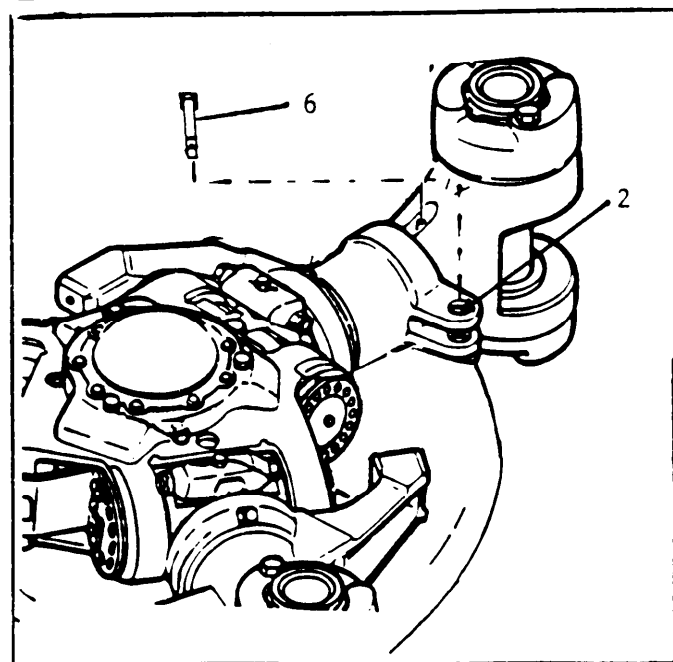

GO TO NEXT PAGE



5-61.1 REPLACE INBOARD DAMPNER UPPER LUG BUSHING (Continued)

5-61.1

15. Allow temperature of bushing (5) and lug.(2) to stabilize (minimum 10 minutes) before removing bolt/bushing (6).
16. Place a six inch scale or straight edge across the top face of the upper lug bore on the pitch housing assembly (1) to ensure that the bushing (5) is not protruding above the surface. Repeat for bottom lug surface. If either top or bottom is found protruding beyond the surface, remove bushing and repeat steps 1 through 18.



**NOTE**

Loc-Tite material does not cure sufficiently at temperature below 40 degrees F.

17. Do not subject joined parts to handling, vibration or shock until fully cured. Allow bushing (5) installation to cure for a minimum of 72 hours at 40 degree to 69 degrees For a minimum of 24 hours at 70 degrees F and above.
18. Clean inside diameter of bushing (5) upper and lower faces of lug (2), and bolt/bushing with a dean cloth wet with acetone (E20).

**Follow-On Maintenance**

None

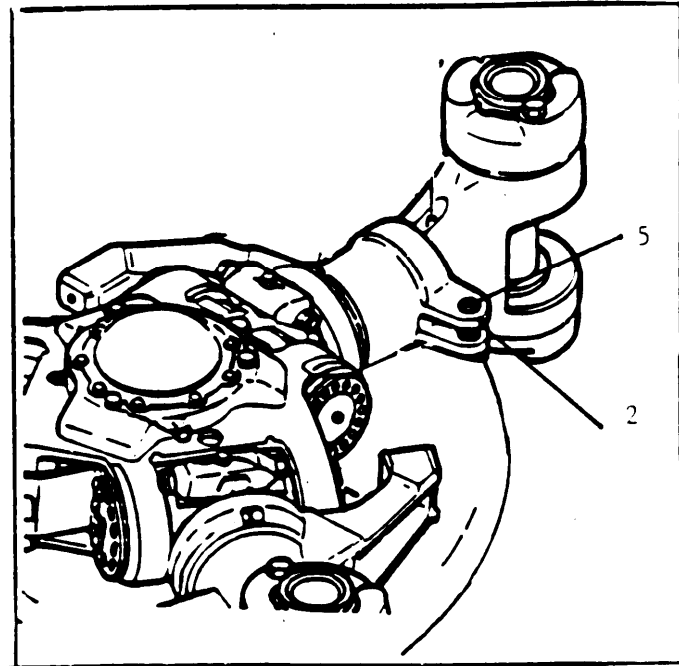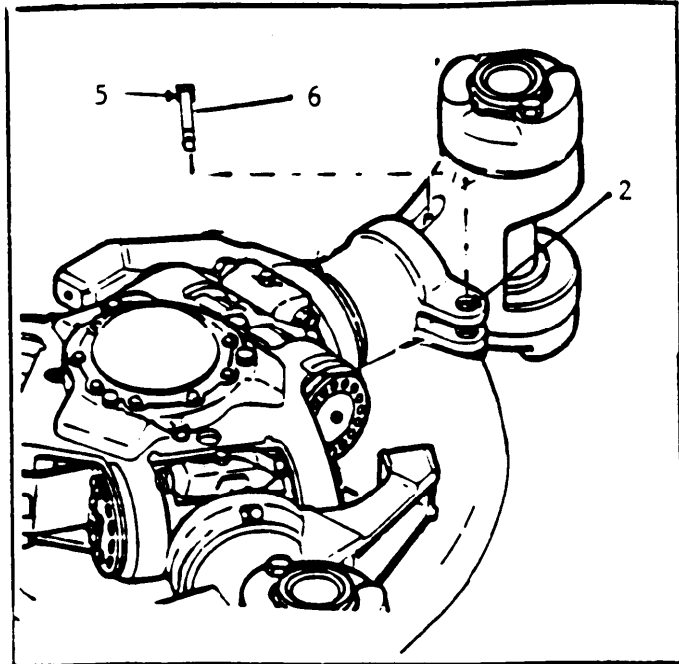

**END OF TASK**

**SECTION III**  
**ROTARY-WING BLADES**  
**DESCRIPTION AND OPERATION**

The rotary-wing blades are composite structures. They consist mainly of a D-shaped fiberglass spar, a titanium nose cap, and Nomex honeycomb fairing bonded to the spar. The blades are tracked and balanced using the Strobex-Vibrex system. Tracking and balancing adjustments are made by adjusting pitch links, bending the trim tab, or adding or removing tracking or balancing weights.

**SPAR**

The spar is made up mainly of center and wrap-around unidirectional straps. The wrap-around straps are continuous elements. They start at the blade tip, wrap around the vertical pin bore, and return to the tip. The straps are covered by several layers of cross-ply fiberglass. These help to prevent twisting. Kevlar filament windings secure the shock absorber bracket to the spar. A replacement composite sleeve lines the vertical pin bore. The


nose of the spar is formed around a permanent balance weight. Tubes are provided at the tip end of the spar for tracking weights.

**LEADING EDGE**

The titanium leading edge is bonded to the spar. A nickel erosion cap is bonded over the outboard 54 inches of the spar leading edge. The replaceable erosion cap protects that part of the blade most easily damaged by the elements.

**FAIRING**

The fairing is a Nomex honeycomb core covered by laminated cross-ply fiberglass skin. Core and skin are bonded to the spar at the leading edge of the core. A wedge of fiberglass reinforces the core along its entire trailing edge. Lightning protection is provided by wire mesh positioned at intervals within the skin. The fairing is closed by a rubber rib at the inboard end and sealant at the tip end.

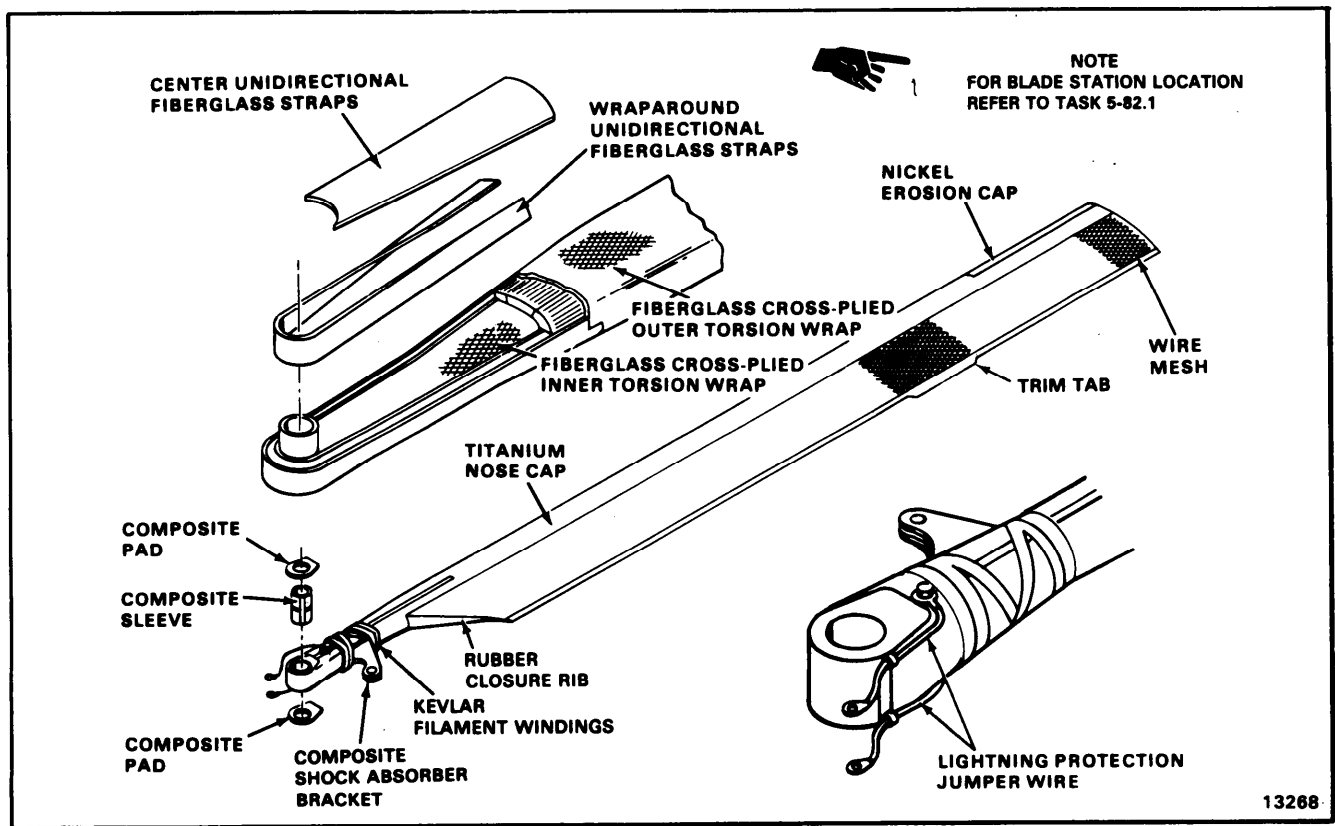

**TRACKING AND BALANCE WEIGHTS**


Each blade has tracking and balance weights installed in its tip. The weights are reached by removal of the cover plate. A maximum of 10 balance weights are attached to the inside of each cover plate. These weights are added or removed for Vibrex/Rotortuner balancing requirements. The tracking weights are located in capped tubes behind the cover plate. Three tubes are in the leading edge section of the spar, Two tubes are positioned at the aft end of the spar. Weights are moved to compensate for the weight of blade repairs. Targets are installed on the cover plate before blade tracking.

**LIGHTNING PROTECTION**

Wire mesh is installed near the surface of the skin for lightning protection. The mesh reaches to the trailing edge of the blade at the trim tab and at the tip. The mesh goes to the nosecap which provides a path to the jumper wires at the top and bottom of the blade spar at the inboard end. These jumper wires are connected to the oil manifold tube on the pitch housing.

**TRIM TAB**

The rotor blade trim tab is bent at the factory to the correct angle for the blade. The tab is bent to a position where it remains to keep the blade in the desired trim. Adjustment of the trim tab on the rotor blade changes the blade to a corrected angle to maintain a given track or plane of motion.

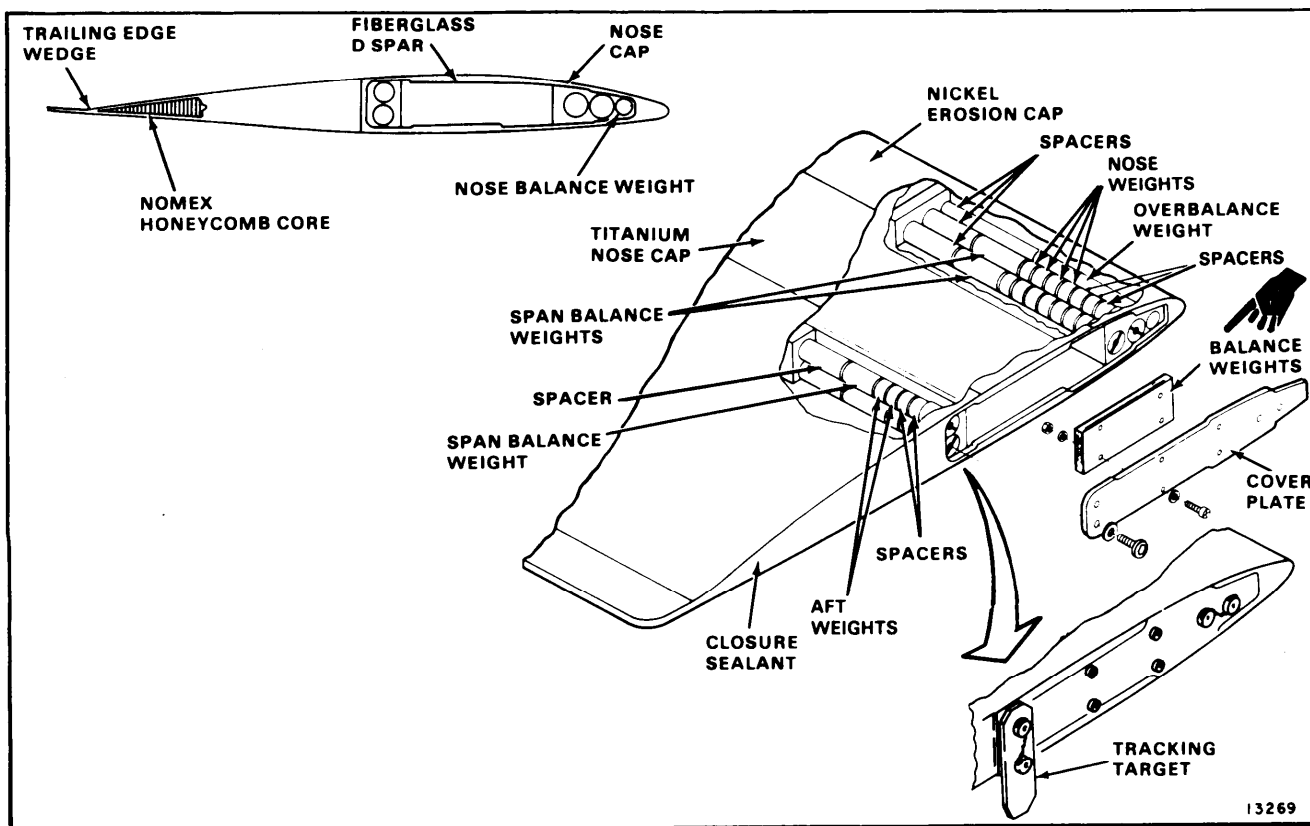

**END OF TASK**

**SECTION IV**  
**ROTARY-WING BLADES**

## 5-63 CLEAN ROTARY-WING BLADE

5-63

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**


Soap (E352)  
 Cloth (E120)  
 Cloth (E128)  
 Solvent (E162)  
 Gloves (E186)

**Personnel Required:**

67U10 Medium Helicopter Repairer

**Equipment Condition:**

Off Helicopter Task

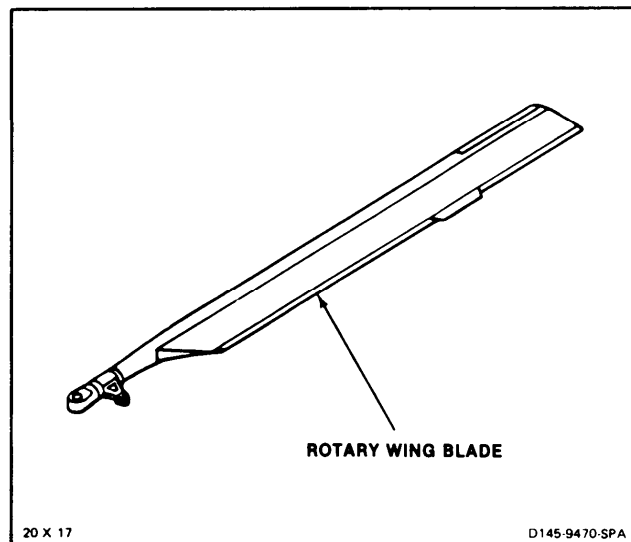**NOTE**


Rotary-wing blade must be cleaned before any inspection or repair. Cleaning may be done on or off helicopter.

1. Mix soap (E352) and water in mild solution.

**CAUTION**

Use only approved cleaning materials. Sores solutions can damage bonded or sealed areas of blade. Dirty or gritty cloths, or compounds, can damage surfaces.

2. Wipe surfaces of blade (1). Use cloth (E120) soaked in soap and water solution.
3. Rinse surfaces of blade (1). Use clean cloth (E128) soaked in water.

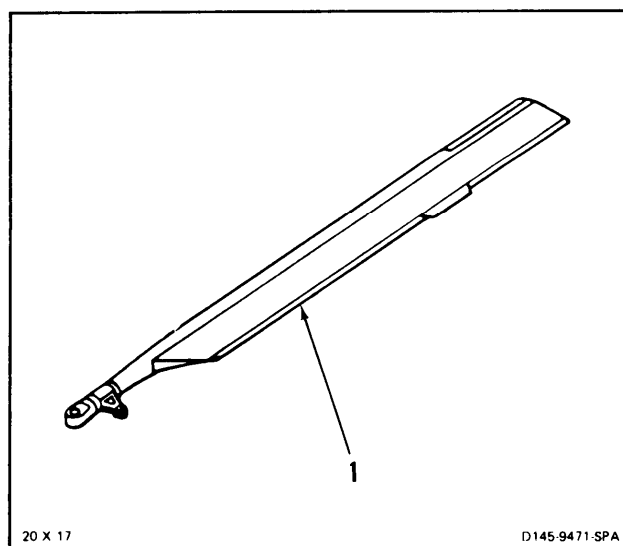**GO TO NEXT PAGE**

## 5-63 CLEAN ROTARY-WING BLADE (Continued)


5-63

4. Dry surfaces of blade (1). Use clean, dry cloth (E128).

**WARNING**

Dry cleaning solvent (E162) is combustible and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

5. If soap and water solution will not clean surfaces of blade (1), use cloth (E120) damp with solvent (E162). Wear gloves (E186).

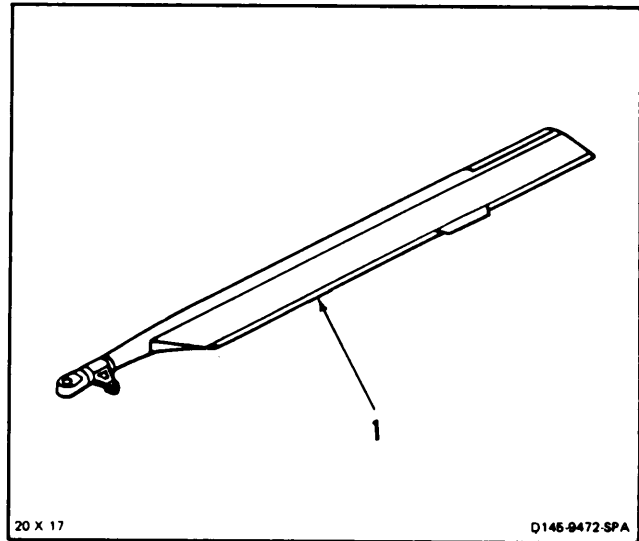

## FOLLOW-ON MAINTENANCE:

None

END OF TASK

5-214

**5-63.1 ROTARY-WING BLADE SERVICEABILITY INSPECTION**

5-63.1

**INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

None

**Materials:**

Acetone (E20)

Cloth (E120)

Barrier Material (E80)

Masking Tape (E388)

**Personnel Required:**

Medium Helicopter Repairer (2)

Inspector

**References:**

Task 5-63

(As Required):

Task 5-64

Task 5-66

Task 5-66.1

Task 5-66.4

Task 5-67.1

Task 5-67.2

Task 5-67.3

Task 5-68

Task 5-69

Task 5-69.1

Task 5-70

Task 5-71

Task 5-72

Task 5-74

Task 5-75

Task 5-82

Task 5-84

**Equipment Condition:**


Battery Disconnected (Task 1-39)

Electrical Power Off

Hydraulic Power Off

Tiedown Line Installed as Required (Task 1-26)

Work Platform Open as Required (Task 2-2)

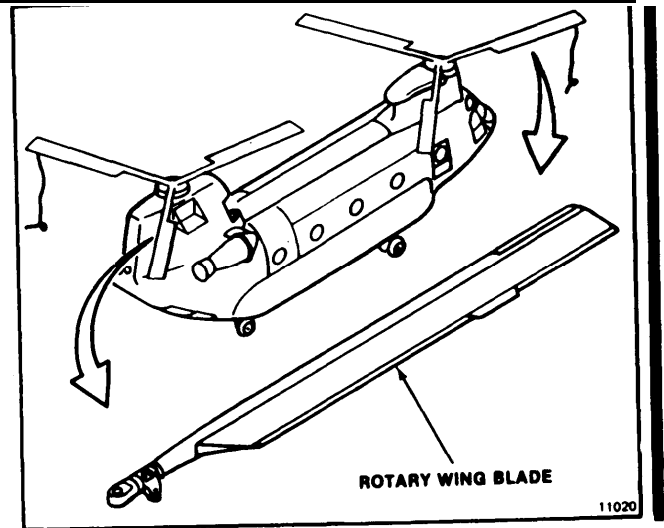**NOTE**

Rotary-wing blades shall be cleaned prior to inspection (Task 5-63). Inspection can be performed on or off helicopter.

**GO TO NEXT PAGE**

Change 14

5-214.1



1. The following terms and definitions are used in determining serviceability of rotary-wing blades:
  - a. *Bond Voids* – Open areas in which one or more layers of material are not bonded together by adhesive. Obvious bond voids appear as slightly raised surfaces, shallow air bubbles, or free edges. Other bond voids are only detectable by coin tapping.
  - b. *Ply Separations* – Openings between adjacent layers of fiberglass skin. Ply separations resemble bond voids.
  - c. *Score*– A blemish more severe than a scratch.
  - d. *Sharp Dent* – A depression in which a definite vee can be seen or felt.
  - e. *Coin Tapping* - An inspection method in which a coin or metal disk is used to detect bond voids. When tapped, a bonded area will have a sharp solid sound. Unbonded areas will give a dull thud.
  - f. *Minor Damage* – Damage which does not require repair as described in step 6.
  - g. *Repairable Damage* – Damage which requires repair as described in step 6.
  - h. *Non-Repairable Damage* – Damage which requires repair beyond the scope of this manual. Requires replacement of rotary-wing blade.
2. **Protect the blade** around the suspected damaged area. Mask surrounding area with barrier material (E80). Secure barrier material with masking tape (E388).
 

**WARNING**

**Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes for at least 15 minutes. Get medical attention for eyes.**

  3. **Remove finish** from suspected damaged area. Use cloth (E120) damp with acetone (E20). Wipe with clean dry cloth (E120). Repeat as required.
  4. **Examine** areas having a contrasting lighter color. Lighter color indicates unbending or ply separation.
  5. If damage is found, repair blade as directed in step 6. If no damage is found, go to step (7),

**NOTE**

When operating aircraft in geographical areas where excessive rotor blade erosion will occur, refer to TB 1-1615-351-23 for anti-erosion tape application instructions.

## 5-63.1 ROTARY-WING BLADE SERVICEABILITY INSPECTION (Continued)

5-63.1

6. Determine damage limits and repair procedure from the following table:

COMPONENT	DAMAGE	REPAIR
Spar Root End	Resin cracks	Fill with adhesive (Task 5-67)
	Holes	Replace blade (Task 5-64 and 5-84)
	Slot sealant	Replace seal (Task 5-66.4)
	Gouges, other damage. Refer to (Task 5- 67.1) for limits	Fill with glass cloth and adhesive (Task 5- 67.1)
Titanium Leading Edge (Nose Cap)	Indentations	No repair required in absence of unbending
	Unbending (edge bond intact)	No repair required
	Unbending of edge	Bond with adhesive (Task 5-66.1)
	Cracks	Repair cracks (Task 5-66.1)
	Nicks and scratches	No repair required
	Holes	Replace blade (Task 5-64 and 5-84)
	Inspection	Inspection of Titanium Cap (Task 5-66.5)
Nickel Erosion Cap	Dents, erosion, nicks, scratches	No repair required
	Unbending (edge bond intact)	No repair required
	Unbending of edge	Bond with adhesive (Task 5-66.1)
	Erosion of aerodynamic filler	No repair required
	Cracks with <u>1/16 inch</u> or less separation or unbending	No action required
	Cracks greater than <u>1/16 inch</u> separation or unbending	Replace cap (Task 5-66)
Fairing Skins	Bond Voids	Any bond void one square inch or less is acceptable to fly helicopter. Any bond void larger than one square inch in area must be repaired (Task 5-67.2 and 5-67.3)
	All other categories	Reparable full-span from trailing edge of titanium nose cap to blade trailing edge—no limit size (Task 5-67.2 and 5-67.3).
Core—Nomex Honeycomb	All categories	Reparable—no limits on size. (Task 5-685-69, 5-69.1 and 5-70)

*Blade Damage and Repair Criteria (Sheet 1 of 2)*

GO TO NEXT PAGE

Change 28

5-214.3

**5-63.1 ROTARY-WING BLADE SERVICEABILITY INSPECTION**  
**(Continued)**

**5-63.1**

<b>COMPONENT</b>	<b>DAMAGE</b>	<b>REPAIR</b>
Trailing Edge	Minor nicks, dents, and scratches Major damage	Blend out or fill with adhesive (Task 5-74)  Reparable. No limit on cross ply and 900 material (Task 5-72). Beyond that, replace blade (Task 5-64 and 5-84)
Tiedown Receiver	All categories	Replace receiver (Task 5-80 and 5-81)
Tip Cover	All categories	Replace tip cover (Task 5-73 and 5-74)
Trim Tab	Scratches, nicks, damaged comers, unbonding	Repair blade trim tab (Task 5-75)
Root End Attachment	Damaged fiberglass sleeves Worn or damaged protective pads	Blend out small nicks and scratches Fill with fiberglass and adhesive
Blade Shock Absorber Brackets	Minor nicks or scratches	Blend out (Task 5-81.5)
Blade Shock Absorber Brackets (Bushing)	Gap between top of bracket and flange of bushing. Bushing contacts bolt head. Bushing spins in blade lag bracket.	The upper damper bracket bushing may slide upward contacting the wrench flats of the mounting bolt. This is allowable. If bushing spins, replace with oversize bushing. Refer to Table 1, page 5-306.4.1.
Shock Absorber Bracket Windings	All categories	Repair - limited to depth of 0.005 inch (Task 5-81.2)
Lightning Jumper Strips	Unbonding cracks	Reparable (Task 5-81.3) Replace (Task 5-81.3.1)
Wire Mesh	Corrosion	Refinish (Task 5-81.4)
Rib Closure	All categories	Repair (Task 5-76 and 5-77)

**Blade Damage and Repair Criteria**  
**(Sheet 2 of 2)**

- If finish was removed for inspection and repair is not required, refinish rotor blade (Task 5-82).

**FOLLOW-ON MAINTENANCE:**

None

**END OF TASK**

**Change 34 5-214.4**

**5-63.2 ROTARY-WING BLADE LIGHTNING STRIKE INSPECTION****5-63.2****INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Magnifying Glass, 10 Power Minimum

**Materials:**

Tape (E395)

**Personnel Required:**

Medium Helicopter Repairer (2)

Inspector

**References:**

Task 5-63.1

Task 5-73

Task 5-81.3.1

Task 5-82.1

Task 5-82.4

**Equipment Condition:**

Battery Disconnected (Task 1-39)


Electrical Power Off

Hydraulic Power Off

Blade Tiedown Ropes Installed (Task 1-26)

Work Platform Open as Required (Task 2-2)

1. If helicopter is struck by lightning, inspect rotary-wing blades before next flight. **Inspect blades as follows:**
  - a. Visually inspect entire rotor blade upper and lower surfaces for obvious extensive damage which would prevent further flight.
  - b. Using a coin, tap around burned or discolored areas for voids that exceed permissible limits (Task 5-63.1).
  - c. To prevent further damage, voids or delamination open to the airstream (forward edge) can be filled with adhesive or wrapped with fabric tape (E395). If voids or cracks are present on lightning jumper strip (1), the strip can be removed (Task 5-81.3.1).
  - d. Visually inspect pitch housings (2) for burns in the area of the lightning cable connections (3). Use a magnifying glass of at least 10 power magnification.
2. Within next 20 flight hours after lightning strike, inspect rotary-wing blades as follows:
  - a. Visually inspect entire blade for delamination(s), voids, and other defect(s), which may have been caused by the strike.
  - b. Coin tap inspect the following areas for bond voids (Task 5-63.1):
    - (1) Entire area of cap nose (4).
    - (2) Entire lightning strip (1), upper and lower surfaces, from inboard end of

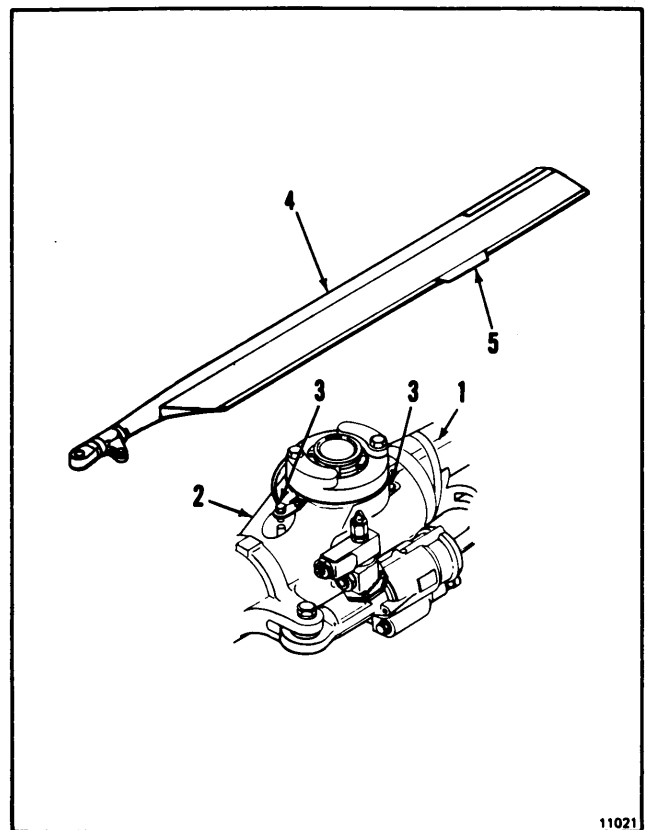

nose cap (4) at sta 77 to lightning cable connection (3) at sta 33.8.

(3) Entire trim tab (5).


- c. Visually inspect trailing edge of nose cap (4) in areas of visual damage for cracking, pitting, etc. Use a magnifying glass of at least 10 power magnification.

**GO TO NEXT PAGE**

**CAUTION**

All hardware to be replaced in the exact reverse order as removed.

- d. Remove tip cover (6) and visually inspect (Task 5-73). Remove tip hardware from aft weight fitting and visually inspect tubes (7) (Task 5-82.4). If any damage was noted on tip cover, remove tip hardware from forward weight fitting and visually inspect tubes (Task 5-82.1).
- e. Visually inspect pitch housings (2) for arc burns in the areas of lightning cable connection (3) (both ends). Use a magnifying glass of at least 10 power magnification.

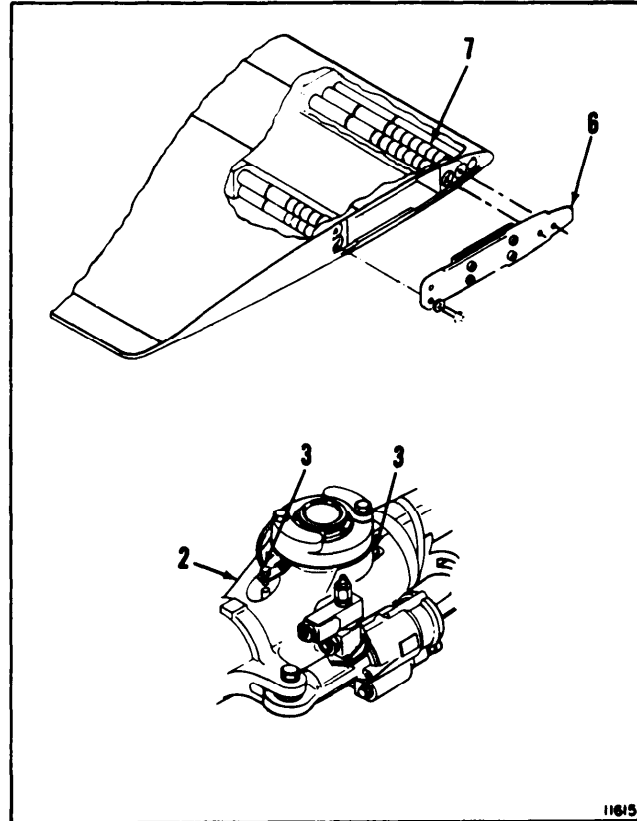**FOLLOW-ON MAINTENANCE:**

. None

**END OF TASK**

5-214.6 Change 25

**5-63.3 INSPECT ROTOR SYSTEM AFTER EXTREME BLADE FLAPPING (SAILING)**

**5-63.3**

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic Tool Kit,  
NSN 5180-00-323-4692

**Materials:**

None

**Personnel Required:**


Medium Helicopter Repairer

**References:**

- Task 5-8
- Task 5-9
- Task 5-64
- Task 5-84
- TM 55-1500-335-23


**Equipment Condition:**

- Battery Disconnected (Task 1-39)
- Electrical Power Off
- Hydraulic Power Off
- Work Platforms Open as Required (Task 2-2)

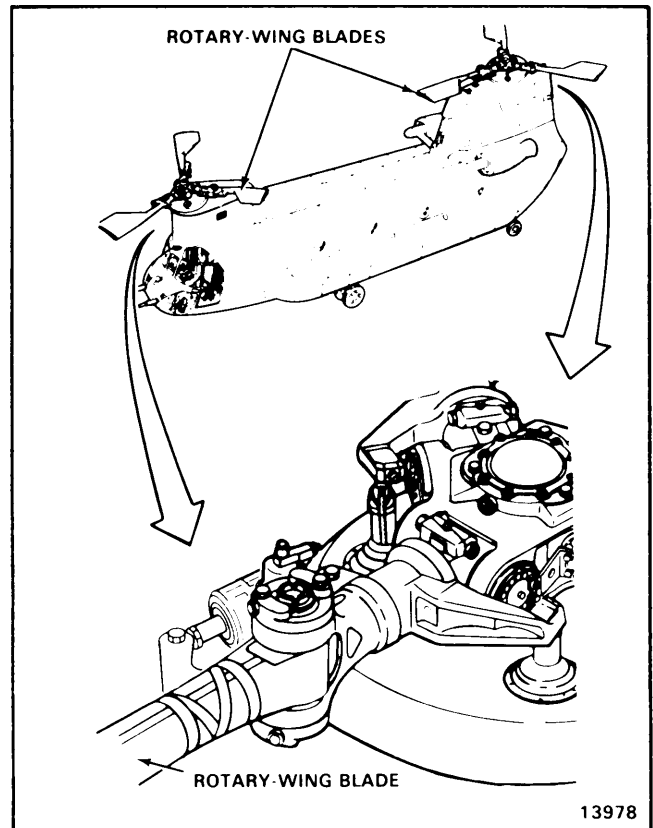

1. Visually inspect entire blade (1) for obvious damage. Make a special check of the following areas:

- a. Check jumper strip (2) for unbending.
- b. Check trailing edge of nose cap (3) along the inboard end for unbending.
- c. Check root end area of spar (4) for delamination.

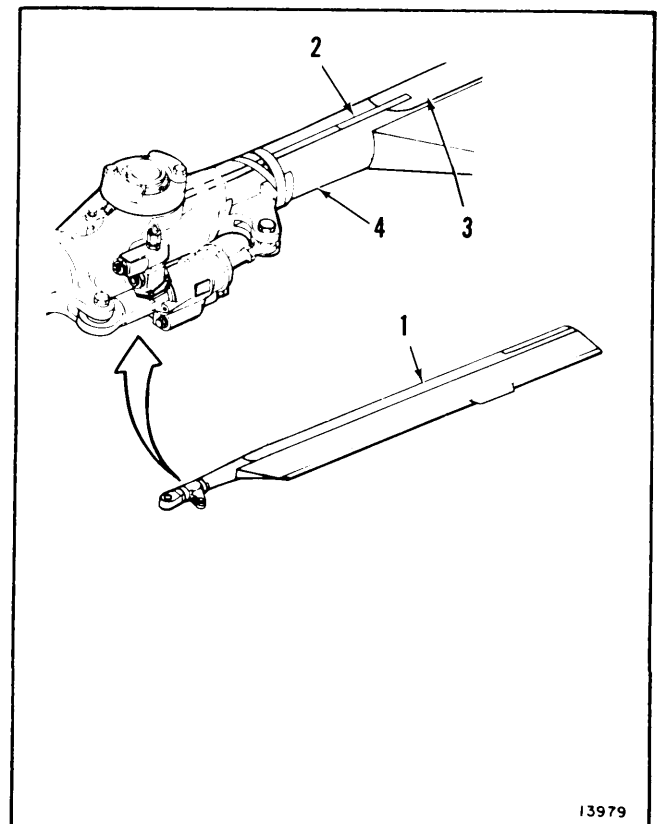


**GO TO NEXT PAGE**

**5-63.3 INSPECT ROTOR SYSTEM AFTER EXTREME BLADE  
FLAPPING (SAILING)**

5-63.3

2. **Check contact surfaces of pitch housing (5) and rotor head (6) as follows:**
  - a. Check lugs (7) and surface (8) at each pitch housing (5) for damage.
  - b. Have helpers support blade (1). Check fixed droop stop (9) and contact surface (10) at each pitch housing (5) for damage.
3. If any contact surface is broken, cracked, or deformed more than 0.050 inch, replace blade (1) (Task 5-64 and 5-84). Replace rotor head (Task 5-8 and 5-9).

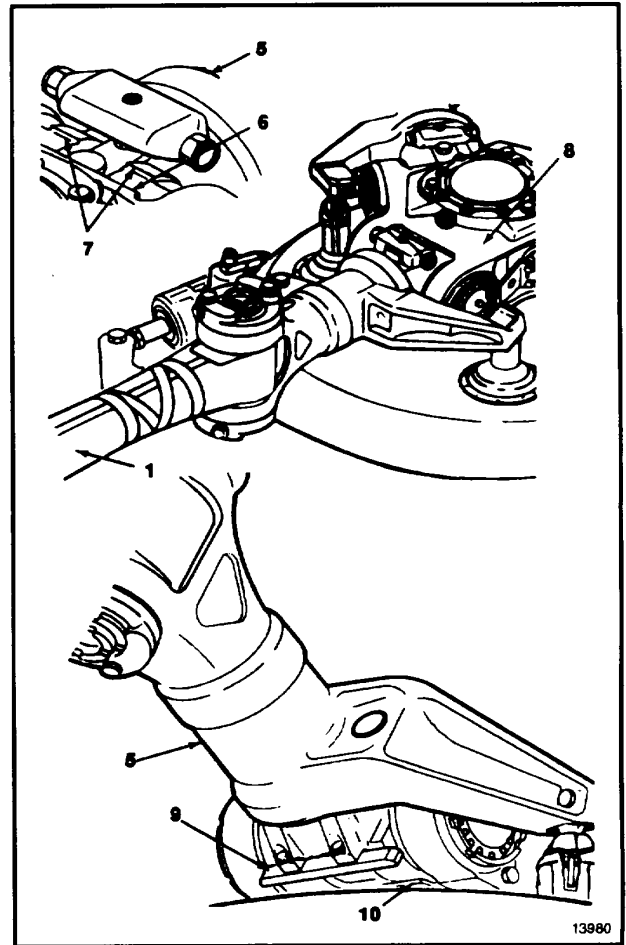

4.Deleted.

**FOLLOW-ON MAINTENANCE:**

None

**END OF TASK**

Change 34 5.214.8

**5-64 REMOVE ROTARY-WING BLADE****INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
 NSN 5180-00-323-4692  
 Rotary-Wing Blade Sling (T35)  
 Vertical Pin Puller (T79)  
 Vertical Pin Reaction Adapter Set (T47)  
 Torque Wrench (T48)  
 Hoist  
 Rope Guidelines

**Materials:**

Barrier Material (E80)  
 Tape (E388)  
 Paper Tag (E264)

**Personnel Required:**

Medium Helicopter Repairer (6)

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
 Electric Power Off  
 Hydraulic Power Off  
 One Forward and One Aft Blade Tied-Down  
 (Task 1-26)  
 Tiedown Lines Installed as Required (Task 1-26)  
 Work Platforms Open as Required (Task 2-2)

**General Safety Instructions:****WARNING**


Do not allow rotor head to move when blade is removed. Moving rotors can cause injury to personnel or damage to equipment.

**CAUTION**

The shock absorber bracket is not to be used as a handle to carry, lift, or position the blade. Equipment will be damaged.

**NOTE**

Before returning any unserviceable rotor blade to depot, contact the local AVSCOM Logistic Assistance Representative for assistance. The blade may be a candidate for repair on site at your location.

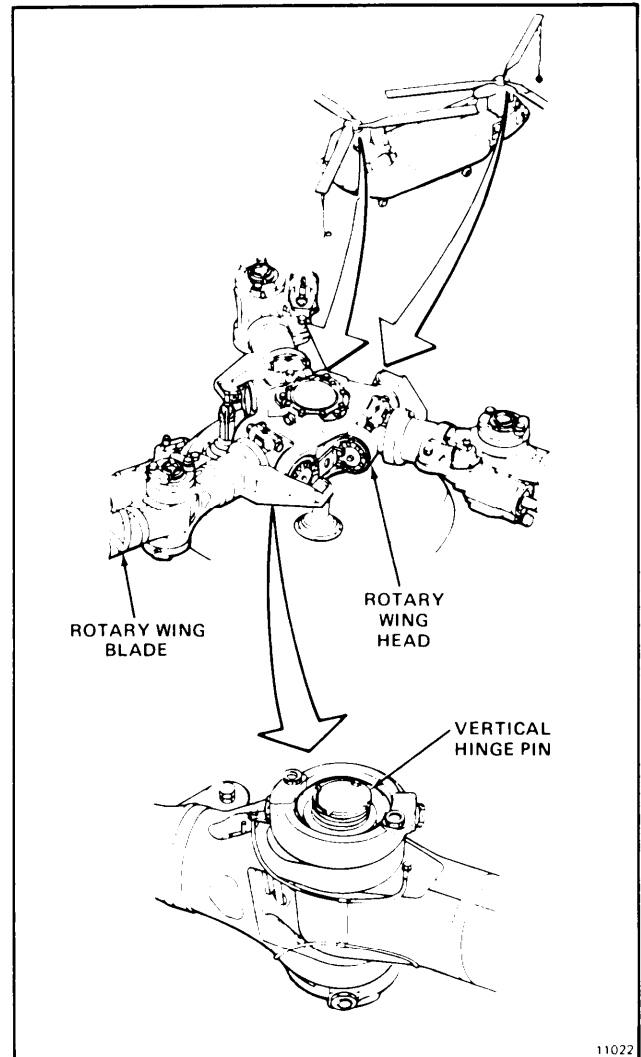**GO TO NEXT PAGE**



**NOTE**


- Positive retention bolts are installed in shock absorber connections. They have a pawl which prevents nut or bolt removal unless pawl is depressed.
  - Procedure is similar to remove any rotary-wing blade. Differences are noted in task. Forward blade is shown here.
1. On blade sling (T35) (1), pull release rope (2) forward until lever (3) seats in notch (4). Clamp (5) is now locked in aft position.

**NOTE**

- Release rope should not be used as guide when lifting and positioning sling (T35). Tension may release clamp be-

fore a sling is positioned.

- When sling is lifted without blade, clamp will be low.
2. Attach hoist (6). Lift sling (T35) (1). Use two guide lines (7) and tiedown line (8) to guide sling.
  3. Deleted.
  4. **Position eye (10) at balance point.**
  5. Use outboard guideline (7) to lower one side of sling (T35) (1) for blade alignment. **Pull sling onto blade (9)** until blade rests against two bumpers (12). Use two guide ropes.
  6. Hold sling (T35) (1) against blade (9). Pull release rope (2) away from sling to **release clamp (5)** against blade trailing edge (13).

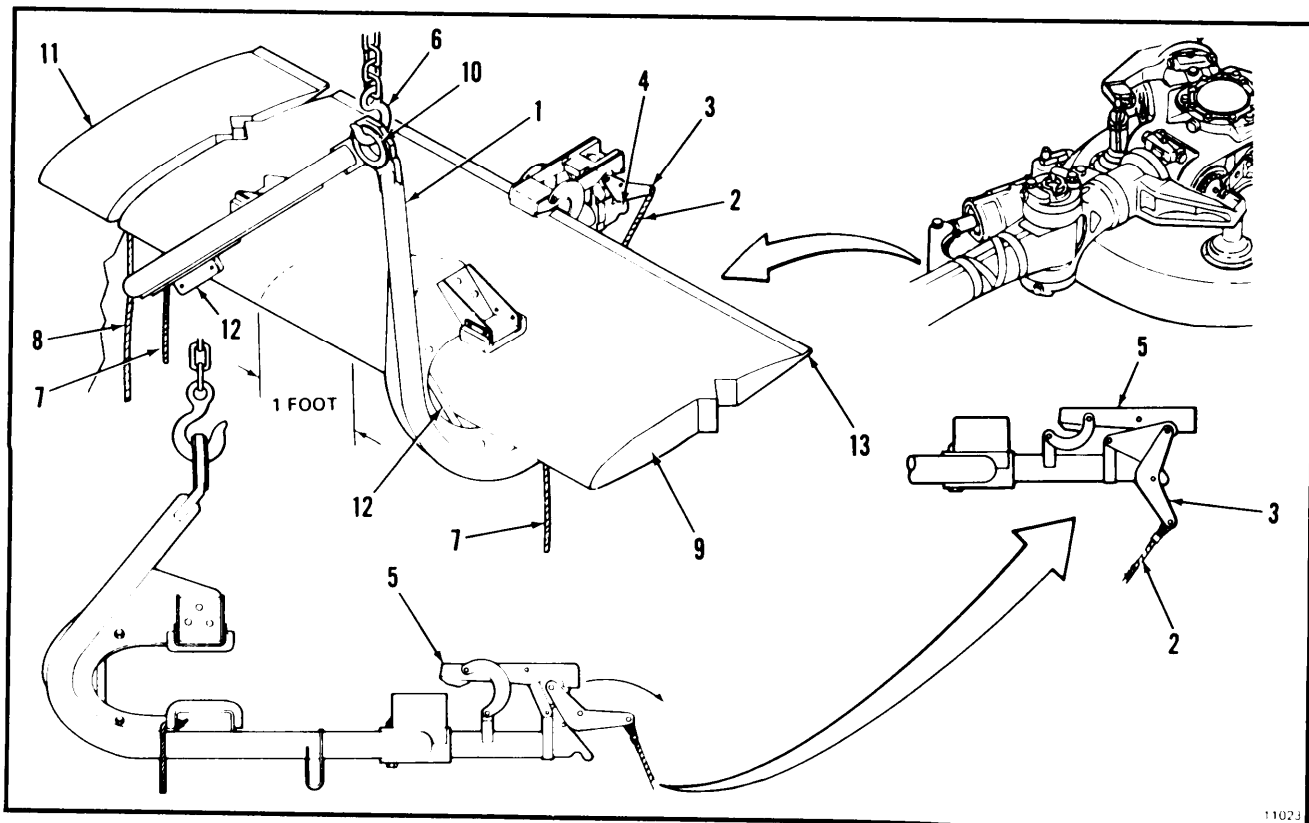

11023


**GO TO NEXT PAGE**

5-216 Change 32

**5-64 REMOVE ROTARY-WING BLADE (Continued)**


5-64

7. Remove two bolts (14), washers (15), and Jumper wires (16) from oil manifold tube (17).

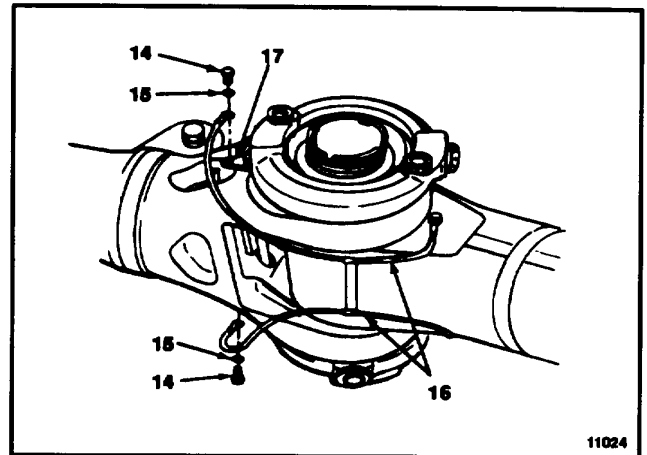**CAUTION**

Do not leave shock absorber attached to blade. Damage to attaching bracket can occur.

8. Disconnect shock absorber (18) from blade (9) as follows:
- Remove cotter pin (19). Remove nut (20).
  - Remove bolt (21).
  - Remove two washers (22).

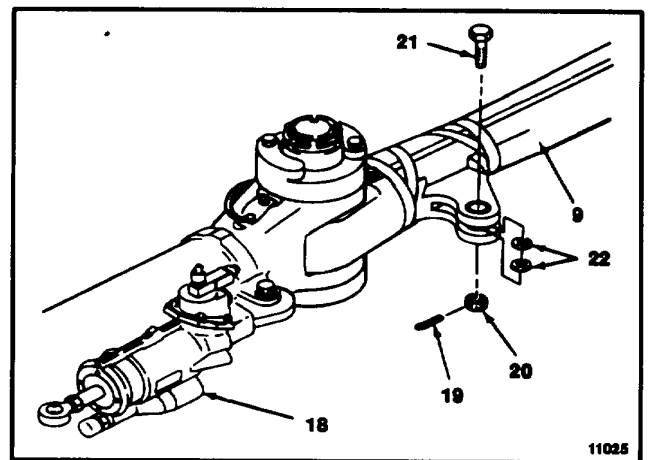**NOTE**

To prevent debonding of the elastomeric bearing material, the nut that attaches the shock absorber to the pitch varying housing must be loosened. The same applies to bolt 21, when the shock absorber is to remain with the rotary-wing blade.

- Swing shock absorber (18) out and inboard.

**GO TO NEXT PAGE**

Change 34 5-217

**CAUTION**

Lower vertical pin nut must be removed before upper nut. Removing upper nut first can damage pin or inner liners.


9. Remove lower vertical pin nut (23) as follows:

- a. Position pilot socket (24) on drive bar (25). Position drive bar through vertical pin (26). Have helper support drive bar.
- b. Install torque wrench (T48) (27) on drive bar (25). Turn handle (28) in either direction until wrench is seated on pilot socket (24).
- c. Install upper washer (29) and nut (30) on drive bar (25). Have helper release bar.
- d. Install spanner socket (31) on drive bar (25) and engage with lower pin nut (23). Install lower washer (29) and nut (30).
- e. Adjust upper and lower nuts (30) until drive bar (25) is seated in spanner socket (31).

**CAUTION**

Torque wrench must not turn during removal of lower nut. Equipment can be damaged.

- f. Turn handle (28) clockwise to remove lower nut (23).
- g. Remove lower nut (30), washer (29), spanner socket (31), and lower pin nut (23).

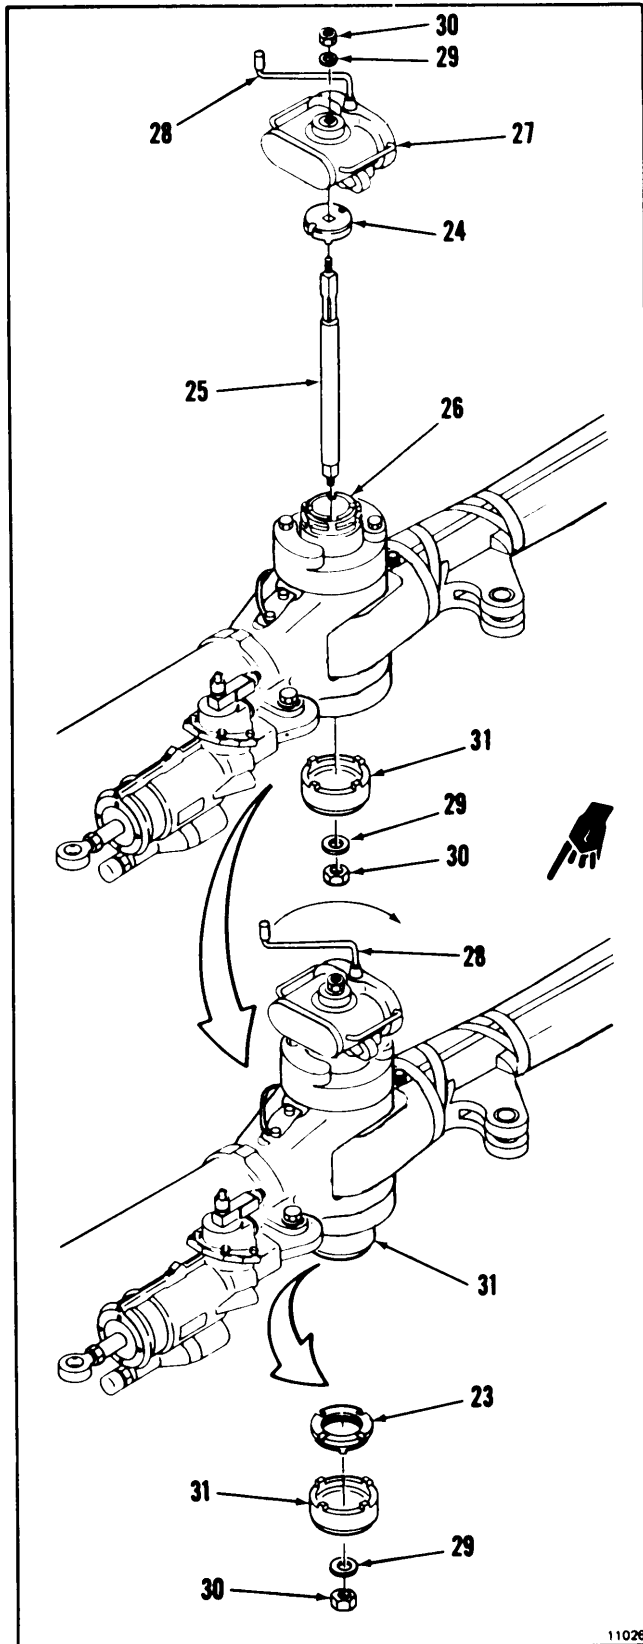

11026

## 5-64 REMOVE ROTARY-WING BLADE (Continued)

5-64

10. Remove upper vertical pin nut (32) as follows:
- Have helper support drive bar (25). Remove nut (30) and washer (29).
  - Remove torque wrench (T48) (27).
  - Install spanner socket (31) on drive bar (25), over pilot socket (24). Seat spanner socket on upper nut (32).

**NOTE**


Pilot socket can be pushed out of vertical pin notches.

- Have helper raise drive bar (25) slightly. Have him rotate bar until flats on bar seat in pilot socket (24). Continue to support bar.
- Install torque wrench (T48) (27) on drive bar (25). Turn handle (28), in either direction, until wrench is seated on spanner socket (31).
- Install washer (29) and nut (30) on drive bar (25). Have helper release bar.

**CAUTION**

Do not restrain torque wrench from turning as upper pin nut is removed. Holding wrench will cause pin to turn and score pin or inner liners.

- Turn handle (28) clockwise to remove upper nut (32).
- Have helper support drive bar (25).
- Remove nut (30), washer (29), torque wrench (T48) (27), spanner socket (31), pilot socket (24), drive bar (25), and upper pin nut (32).

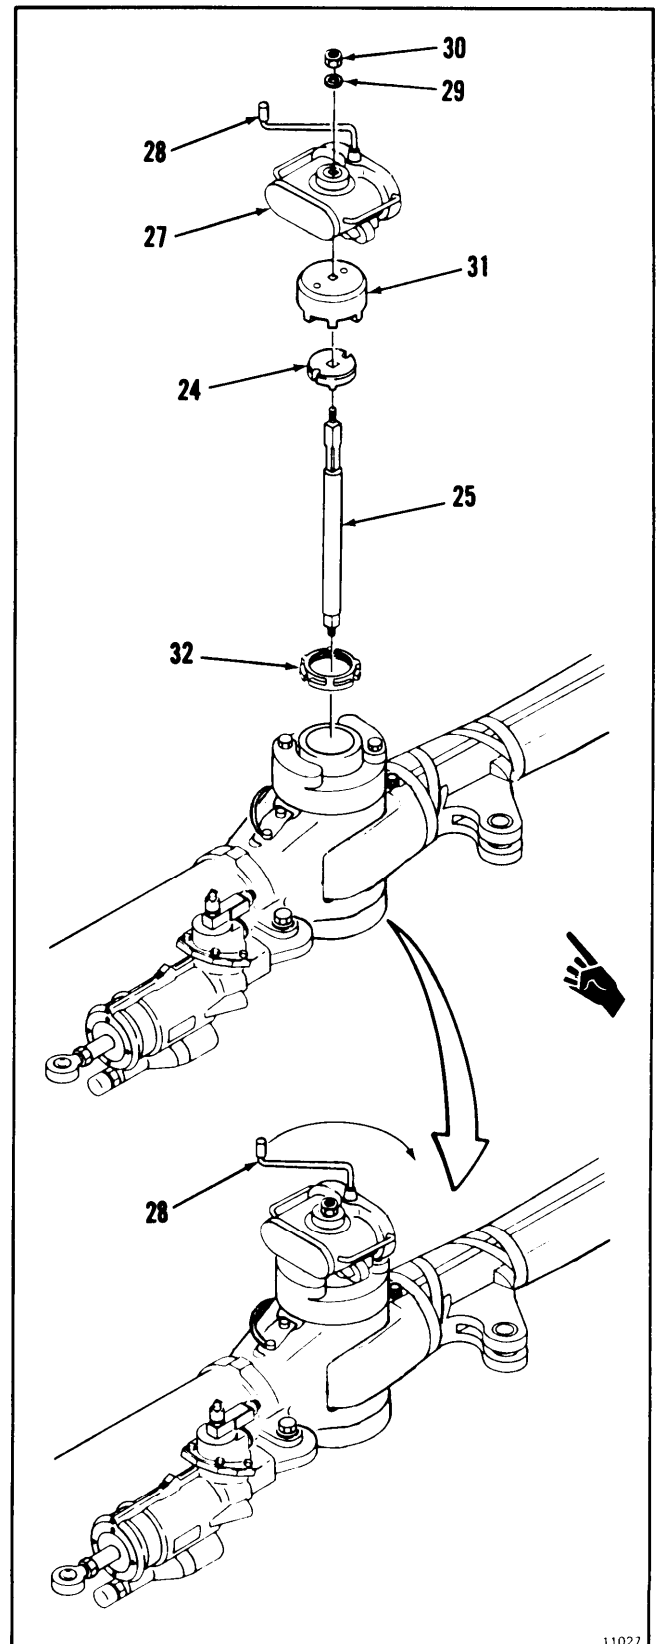

GO TO NEXT PAGE

11. Install hydraulic vertical hinge pin puller (T79) (33) as follows:

**CAUTION**

Cap must be screwed onto vertical pin completely. Incomplete thread engagement can result in damaged pin and pin puller.

- a. Screw cap (34) with bolt (35) all the way onto pin (26).
- b. Install body (36) over bolt (35) and onto inner race (37).
- c. Install hydraulic cylinder (38) over bolt (35) and into clamp (39) on body (38).
- d. Install puller nut (40) on bolt (35) finger-tight.
- e. Check that cylinder (38) is seated completely. Tighten two clamp bolts (41).

**CAUTION**


Do not remove pin with lower nut in place. Pressure applied to pin puller (T79) will cause damage to both inner races.

- f. Check that lower nut (23) is removed.


**CAUTION**

Do not remove pin without supporting blade. If blade is not supported as pin is removed, pin and blade socket can be damaged.

12. Raise blade (9) just enough to clear droop stop (42). Aft droop stop is shown here.

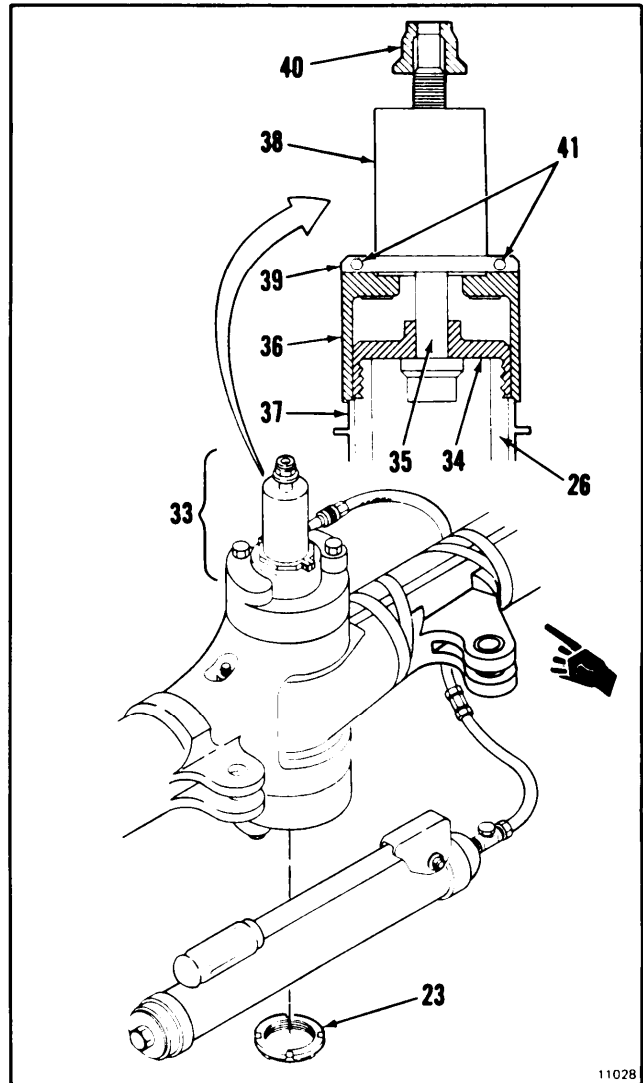

11028

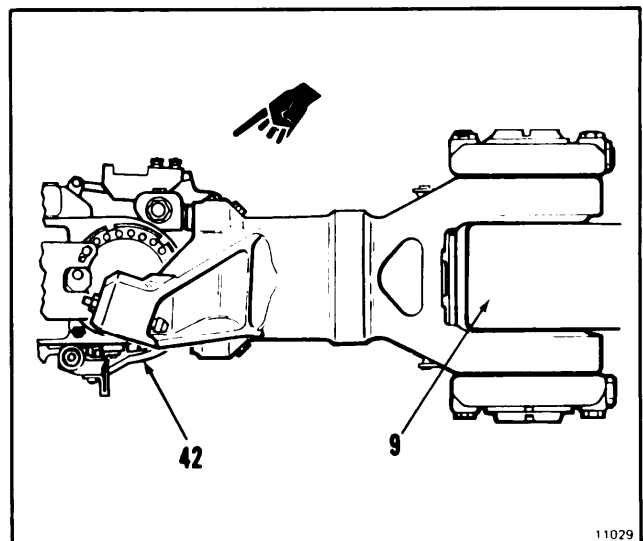

11029

**GO TO NEXT PAGE**

## 5-64 REMOVE ROTARY-WING BLADE (Continued)

5-64

**WARNING**

Keep personnel clear of direct line above puller nut and bolt when puller is under pressure. Personnel can be seriously injured if these parts break.

13. Operate hand pump (43) to pull vertical pin (26) loose.
14. Remove hydraulic pin puller (T79) (33) as follows:
  - a. Remove nut (40).
  - b. Loosen clamp bolts (41). Remove cylinder (38).
  - c. Remove body (36).
  - d. Remove cap (34).
15. Install rope guideline (44) at root of blade (9).
16. Hold blade (9) against pitch housing (19). Use guideline (44).


**WARNING**

Do not allow blade to move suddenly when pin is removed. Sudden movement can cause personal injury or equipment damage.

**CAUTION**

Use care in removing pin. Blade bore sleeve is easily damaged by pin or metal tools.

17. Remove vertical hinge pin (26).

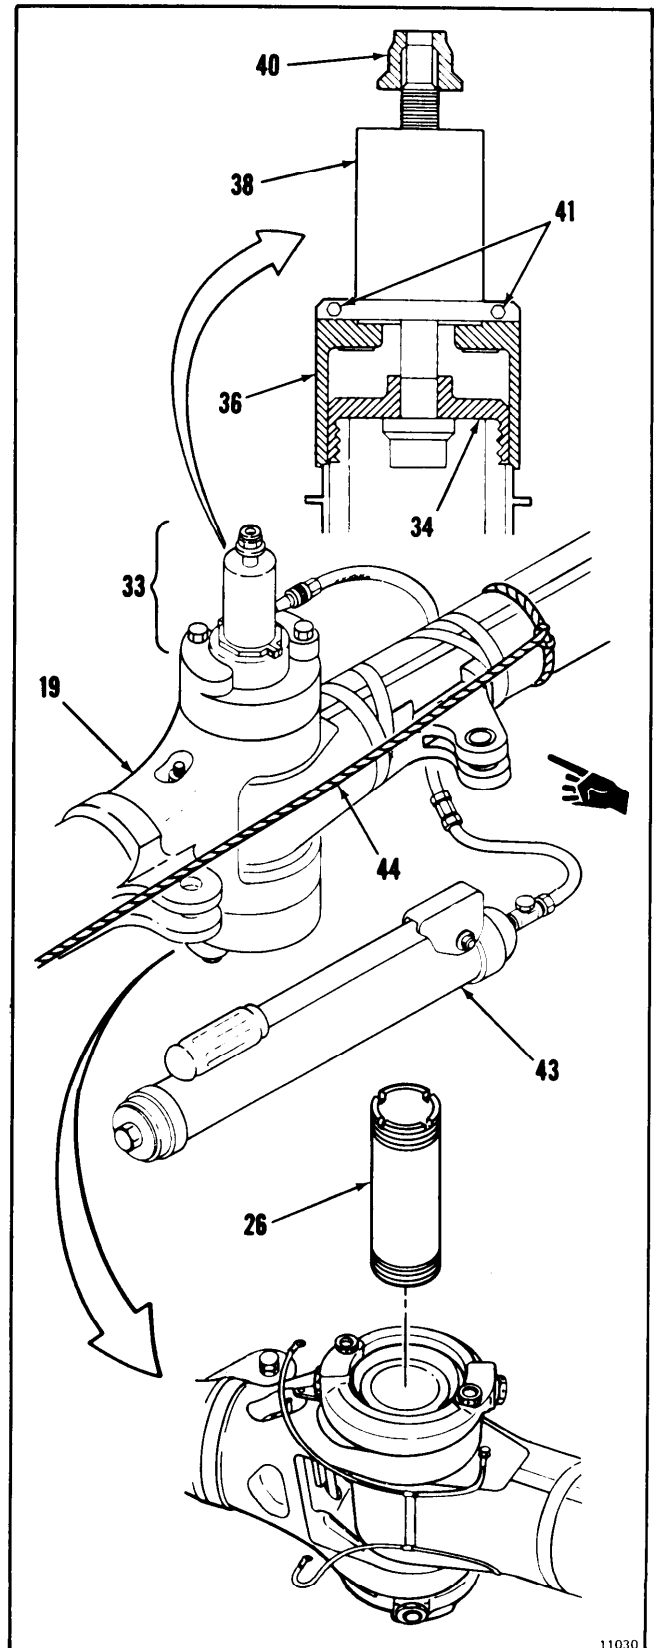

GO TO NEXT PAGE


**WARNING**

Blade is heavy and can injure personnel if it drops. Blade must be supported by hoist and moved carefully. Do not use release rope on sling (T35) to guide blade. Clamp can be opened to release blade which can result in injury or equipment damage.

**NOTE**

If more than one blade is removed, tag blade with pitch housing color.

18. Pull blade (9) clear of pitch housing (19). Use tiedown line (8), guideline (44), and two guidelines (7) on sling (T35) (1). Use four guidelines on sling in high winds.
19. Lower blade (9) onto suitable supports.
20. Identify blade (9) with pitch housing color. Use paper tag (E264) (45).
21. Pull release rope (2) under blade (9) to open clamps (5).
22. Have helpers pull sling (T35) (1) clear of blade (9).
23. Remove sling (T35) (1). Remove hoist (6).

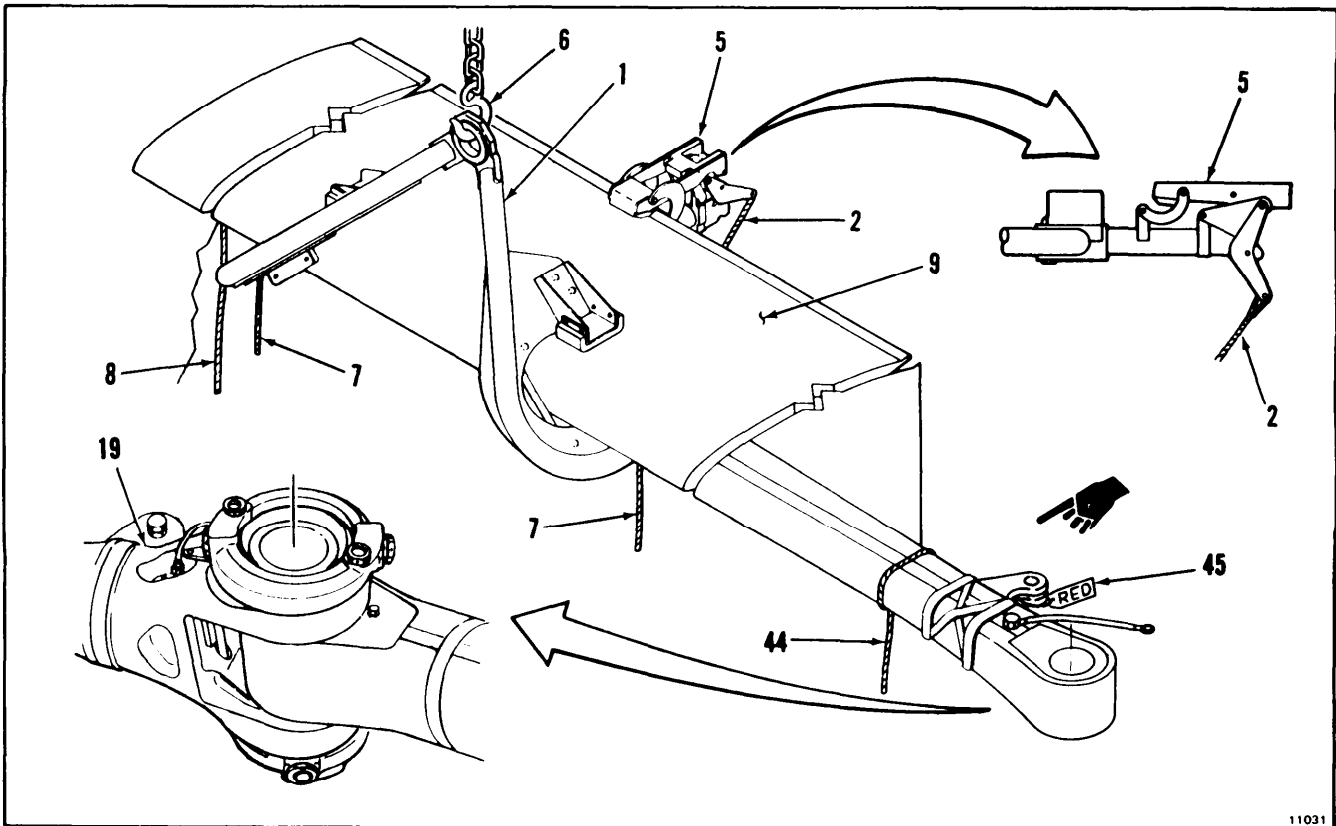

## FOLLOW-ON MAINTENANCE:

None

**END OF TASK**

5-222 Change 14

**5-65 PREPARE ROTARY-WING BLADE FOR STORAGE**

**5-65**

**INITIAL SETUP**

**Applicable Configurations:**  
All

**Tools:**  
Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Shipping Container (T86)

**Materials:**  
Dry Cleaning Solvent (E162)  
Barrier Material (E80)  
Tape (E388)  
Gloves (E186)

**Personnel Required:**  
67U10 Medium Helicopter Repairer (7)  
67U20 Medium Helicopter Repairer

**References:**  
TM 55-1520-240-23P

**Equipment Condition:**  
Off Helicopter Task


**WARNING**

Dry cleaning solvent (E162) is combustible and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**NOTE**

Prior to returning any "unserviceable" fiberglass rotor blade to depot, contact local AVSOM Logistic Assistance Representative for assistance. The blade may be a candidate for repair on site at your location.

1. Clean blade bore (1). Clean surfaces of blade (2). Use cloth (E120) damp with solvent (E162). Wear gloves (E186).
2. Line blade bore (1) and wrap lag damper bracket (3). Use barrier material (E80) (4). Secure barrier material. Use tape (E388) (5).

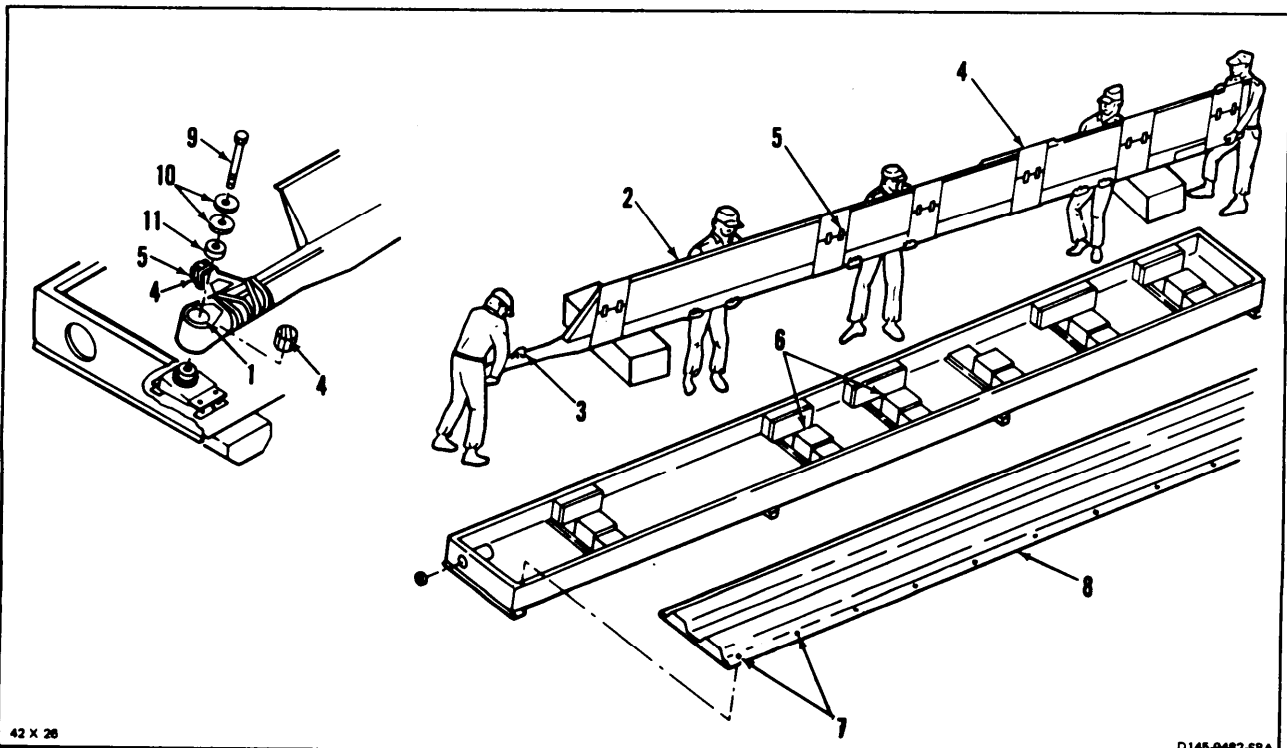

42 X 26

D145-9482-SPA

**GO TO NEXT PAGE**




**5-65 PREPARE ROTARY-WING BLADE FOR STORAGE**  
**(Continued)**

3. **Wrap blade (2)** where blade will rest on six support points (6). **Use barrier material (E80) (4)** and tape (E388) (5).
4. Open 22 turnlock fasteners (7). **Remove cover (8)**.
5. Remove bolt (9), washers (10), and spacer (11).
6. **Check** that **hub mount (12)** is installed leaning away from record receptacle (13) for aft blade (2). Hub mount leans toward receptacle for forward blade.
7. **If necessary**, remove four bolts (14) and **position mount (12)** in opposite direction. Install bolts.
8. Have helpers **lift blade (2)** and **position in shipping container (T86) (15)**. Place front blade top side down.
9. Install spacer (11), washers (10), and **bolt (9)**.
10. **Install cover (8)**. Close 22 fasteners (7).
11. Remove record receptacle cap (16). **Insert records in receptacle (13)**. Install cap.

**FOLLOW-ON MAINTENANCE:**

None

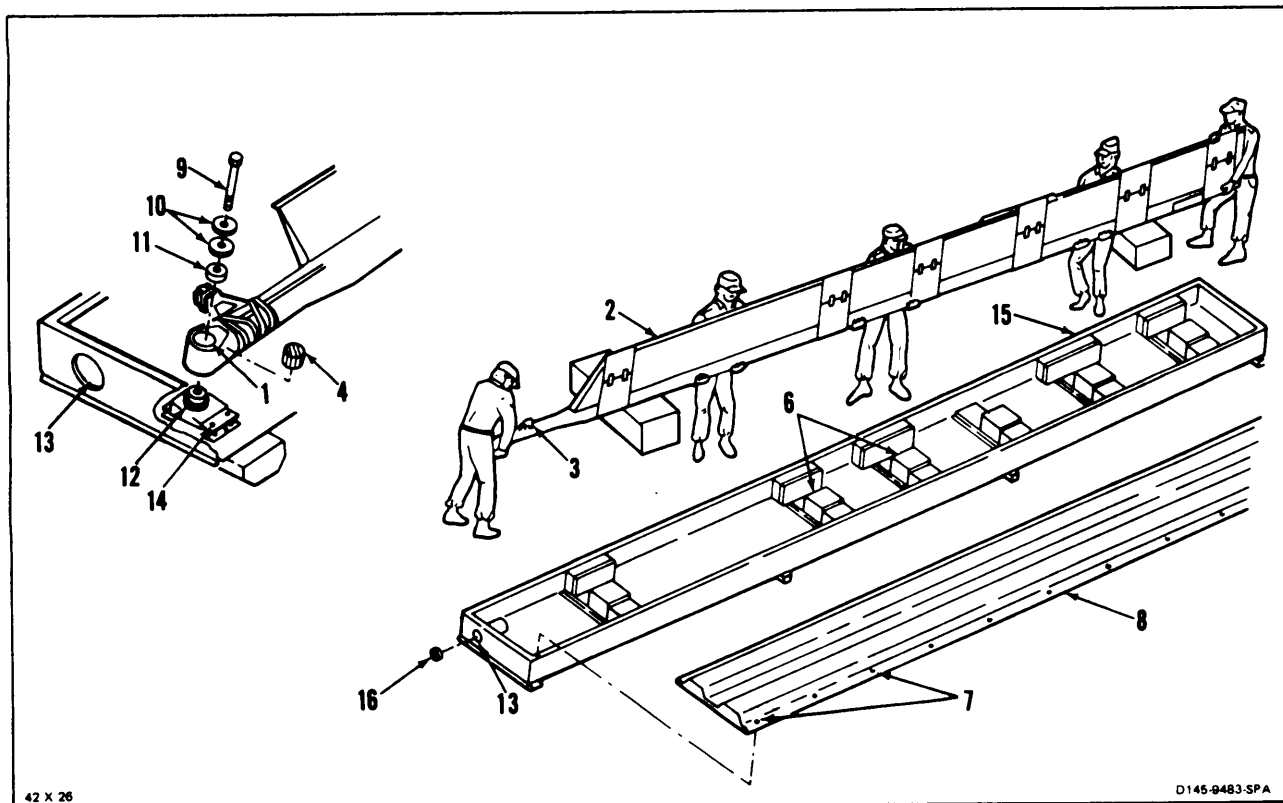

**END OF TASK**

**5-66 ROTARY-WING BLADE SERVICEABILITY INSPECTION**

5-66

**INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Airframe Repairer's Tool Kit,  
 NSN 5180-00-323-4876  
 Aluminum Starter Chisel  
 Aluminum Final Removal Chisel  
 Trip Balance, NSN 6670-00-401-7195  
 Nickel Erosion Cap Replacement Fixture (T69)  
 Scale  
 Aluminum Scraper  
 Torque Wrench, 5 to 50 Inch-Pounds  
 Brush, Stiff Bristles  
 Kevlar Gloves (EI 87)  
 Heat Lamps (optional)

**Materials:**

Styrofoam Blocks  
 Dry Ice (E92)  
 Abrasive Paper (E9)  
 Gloves (E184. 1)  
 Masking Tape (E388)  
 Teflon Tape (E399)  
 Cloth (E1 20)  
 Acetone (E20)  
 Adhesive (E41 or E43)  
 Wood Spatula (E424)  
 Polyethylene Cup (E157)  
 Scrim Cloth (E325)  
 Tape (E387)  
 Teflon-Impregnated Fabric (E170)  
 Rubber Sheet (E321)  
 Sealant (E336)  
 Epoxy Primer (E293)  
 Black Lacquer (E215)  
 Thinner (E41 5)  
 Metal Conditioner (E242)  
 Temperature Indicating Strips (E413)

**Personnel Required:**


Medium Helicopter Repairer (5)  
 Aircraft Structural Repairer (2)

**References:**

Task 5-67  
 TM 55-1500-344-23

**Equipment Condition:**

Off Helicopter Task

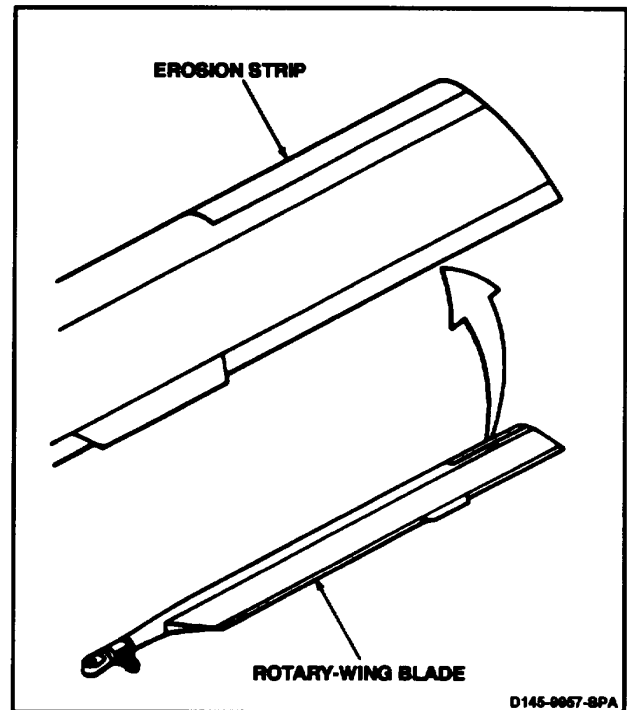**GO TO NEXT PAGE**

Change 34 5-224.1 /(5-2242 blank)



**General Safety Instructions:****WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**

Adhesive (E41 or E43) is toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**CAUTION**

Do not use cadmium plated tools or chlorinated solvents on the titanium nose cap. Contamination of titanium by these materials will result in failure. Use only the tools and materials referenced in the repair procedure.

**GO TO NEXT PAGE**

**NOTE**

Styrofoam is preferable material for dry ice container. If styrofoam is not available, use wood.

1. **Make container (1)** With inside dimensions 55 x 9 x 5-inches. Leave top and one end open.
2. Lift corners of nickel erosion cap (2). Use aluminum starter chisel


**WARNING**

Dry ice (E92) is toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**CAUTION**

Do not allow dry ice (E92) to contact the titanium nose cap.

3. **Pack dry ice (E92) (3)** 1-inch deep in bottom of container (1). Wear gloves (E187).
4. Have helpers lift blade (4) and position **erosion cap (2)** in container (1) 1-inch from closed end.
5. **Pack dry ice (E92) (3)** in end and sides of container (1). Use only enough dry ice to cover erosion cap (2).
6. **Chill erosion cap (2)** 1 hour
7. Have helpers **remove blade (4)** and place on supports with erosion cap (2) clear.

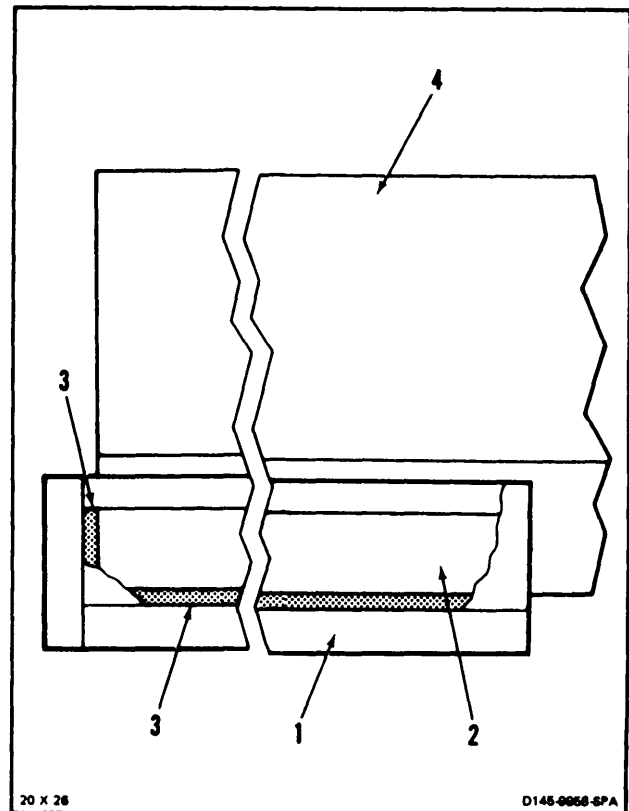


**GO TO NEXT PAGE**

**5-66 REPLACE NICKEL EROSION CAP (AVIM) (Continued)**

8. **Remove erosion cap (2).** Use aluminum chisels. Begin with starter chisel at out-board trailing edge of cap. Work inboard and forward. Use final removal chisel.

8.1. **Weigh erosion cap (2).** Record weight.

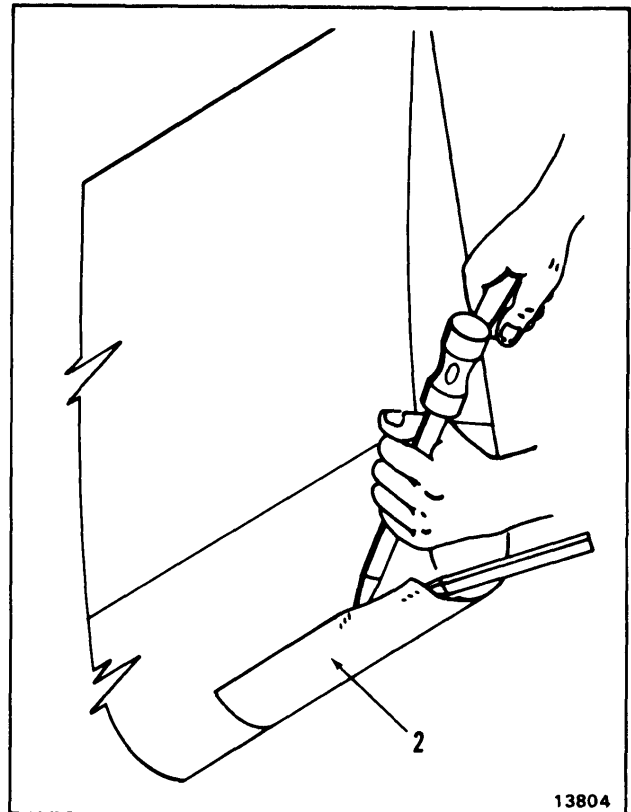

13804

9. Have helpers **position and support blade (4) with leading edge (5) up.** Do not bend trim tab (6).

**CAUTION**


**Adhesive removal is time consuming and must be done with care. Damage to the fiberglass can result in reduced fatigue strength and an altered airfoil shape.**

10. **Scrape off adhesive** from leading edge (5) of blade (4). Use aluminum scraper.

11. **Allow blade (4) to warm** several hours to room temperature.

12. Sand fiberglass surface lightly to **remove adhesive.** Leave thin film of adhesive. Use care not to change airfoil shape.

12.1. Check titanium nose cap (6.1) in bond area for voids that extend to trailing edge. Repair voids (Task 5-66.1).

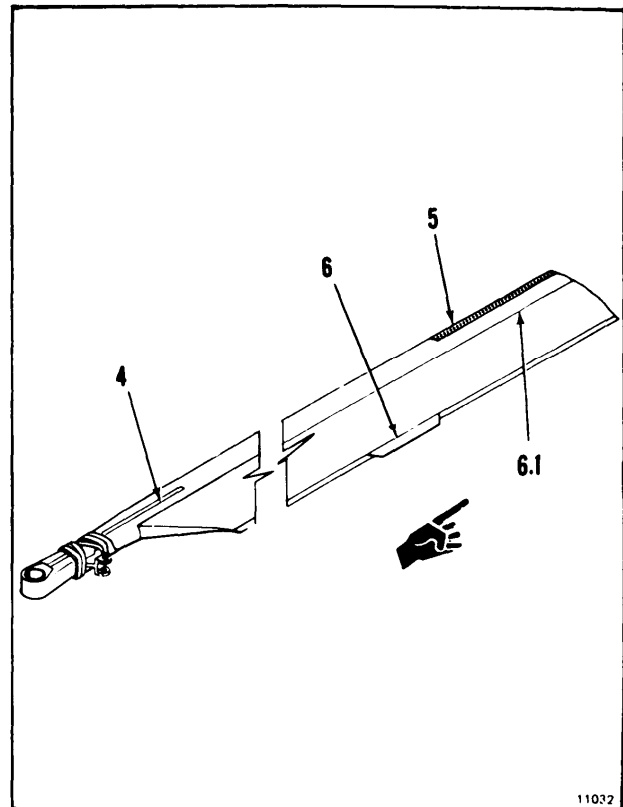

11032

**GO TO NEXT PAGE**

13. Inspect for loose fibers, delaminations, and depressions. Repair loose fibers and delaminations (Task 5-67).
14. Repair depressions as follows:
- Prepare the low area(s) by lightly sanding with abrasive paper (E9). Using a clean cloth wet with acetone, wipe the area clean of sanding particles and residue. Allow to air dry.

**NOTE**

Adhesive (E41) is preferred. Use (E43) only if (E41) is not available.

- Mix adhesive (E41). Follow instructions below.

**CAUTION**

**Weigh and mix adhesive and resin accurately to produce acceptable bond.**

- If adhesive (E41) is used, weigh 100 parts of resin, and 23 parts of hardener. Mix in polyethylene cup (E157) until color is uniform. Use wood spatula (E424). Wear gloves (E184.1).

- If adhesive (E43) is used, weigh 7 parts of gray hardener and 5 parts of white base. Mix in polyethylene cup (E157) until color is uniform. Use wood spatula (E424). Wear gloves (E184.1).
- Fill low area(s) with the adhesive. Blend into adjacent areas.

**CAUTION**

**Blade temperature must not exceed 160°F (71 °C). Damage to the fiberglass can occur.**

**NOTE**

**If heat is not available, a serviceable cure will be achieved at 70° F (21 °C) in 36 hours.**

- Cure the mixture at 110°F to 130°F (43°C to 54°C) for 16 hours. Monitor with temperature indicating strips (E413).
- After cure is complete, lightly sand the repair to match the adjacent areas.

**GO TO NEXT PAGE**

**Change 34 5-228**

## 5-66 REPLACE NICKEL EROSION CAP (AVIM) (Continued)

5-66

- e. Weigh replacement erosion cap (3). Record weight.
- f. Mask titanium nose cap (9) around bonding surface (7), and replacement erosion cap (3). Use teflon tape (E399) 9-inches wide.
16. Cut piece of scrim cloth (E325) (10) to fit bonding surface (7).


**NOTE**

- Adhesive (E41) is preferred. Use (E43) only if (E41) is not available.
  - Working life of all adhesives is about 30 minutes at 70° F to 80° F (21 °C to 27°C). Working life decreases as temperature goes up.
17. Mix adhesive (E41). Follow instructions below.

**CAUTION**

**Weigh and mix adhesive and resin accurately to produce acceptable bond.**

- a. If adhesive (E41) is used, weigh 300 grams of resin, and 69 grams of hardener. Mix in polyethylene cup (EI 57) until color is uniform. Use wood spatula (E424). Wear gloves (EI 84.1).
- b. If adhesive (E43) is used, weigh 198 grams of gray hardener and 142 grams of white base. Mix hardener and base in polyethylene cup (EI 57). Use wood spatula (E434). Wear gloves (E184.1).

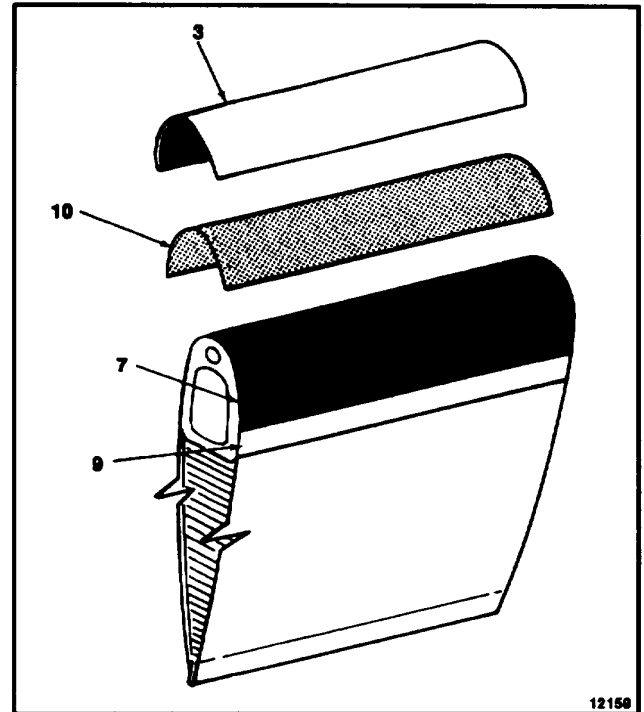

GO TO NEXT PAGE

Change 34 5-229




**NOTE**

Working life of adhesive (E41 or E43) is about 30 minutes.

18. Apply adhesive (E43) as follows:
  - a. Coat bonding surface (7) with adhesive. Using stiff-bristle brush. Wear gloves (E184.1).
  - b. Position scrim cloth (E325) (10) on bonding surface. (7). Work scrim cloth into adhesive (E43) until completely coated.
  - c. Apply heavy coat of adhesive (E43) to inside of erosion cap (3). Be sure inside leading edge is well covered.
19. Position erosion cap (3) on bonding surface (7). Seat cap firmly. Apply tape (E387) 2-inches wide across cap to hold cap on blade. Start at tip end. Position tape strips about 6-inches apart.

**NOTE**

Place tape so that some strips fall about halfway between dampers when fixture (T69) is installed.

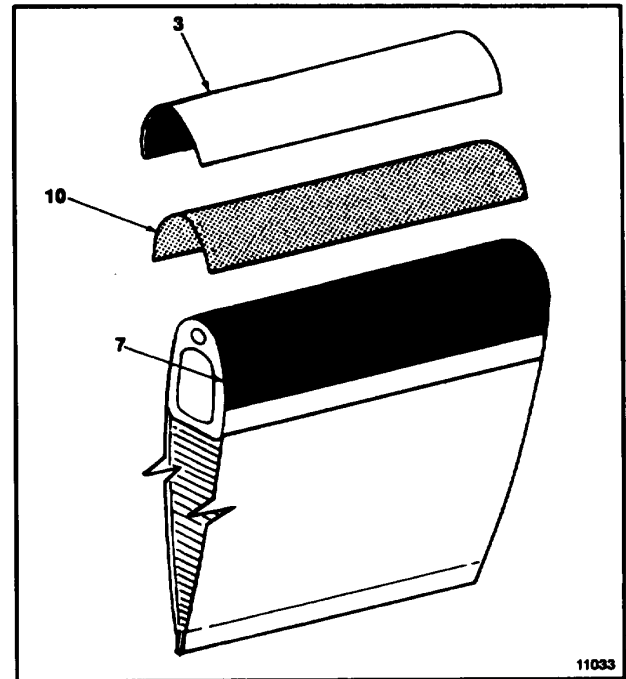

11033

**GO TO NEXT PAGE**


Change 34 5-230

20. Cut sheet of teflon-impregnated fabric (E170) (11) and sheet of rubber (E320) (12). Position teflon-impregnated fabric over repair. Position rubber over teflon-impregnated fabric.
21. Install erosion cap replacement fixture (T69) (13) as follows:
- Position tool collar (14) over rubber sheet (E320) (12).
  - Remove retaining pin (15) from each of five damping tools (16).
  - Position trailing edge bar (17) over trailing edge of blade (4). Hold in place.
  - Position damping tool (16) over tool collar (14) and trailing edge bar (17), 3-inches from inboard end of bar. Position remaining four damping tools 16-inches apart. Install retaining pins (15).

**CAUTION**

**Overtightening leading and trailing edge jackscrews can damage blade.**

22. Tighten damping tool jackscrews (18) as follows:
- Tighten trailing edge jackscrews (18) on end damps (16). Tighten leading edge jackscrews on end damps.

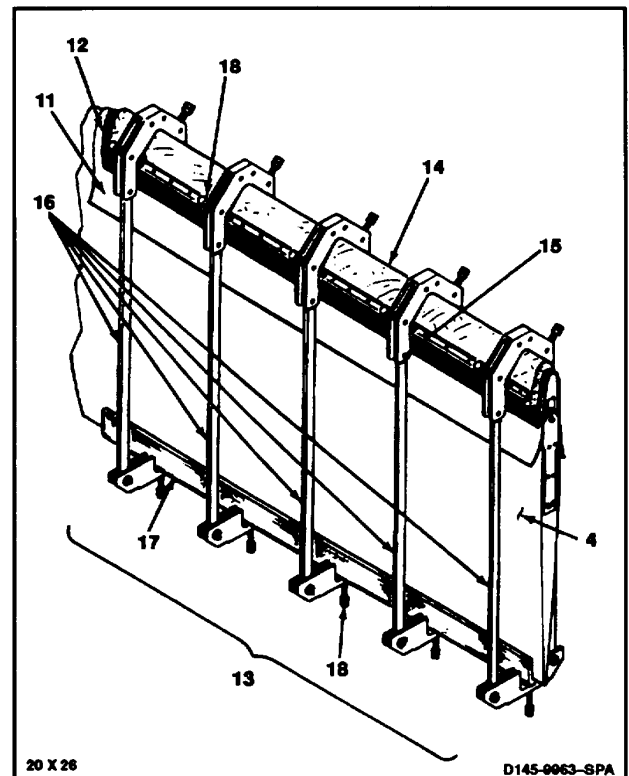

**GO TO NEXT PAGE**


**Change 34 5-231**

- b. Tighten trailing edge jackscrew (18), then leading edge jackscrews on center clamp (16).
- c. Tighten trailing edge jackscrews (18), then leading edge jackscrews on clamps (16) between center and end clamps.
- d. **Torque all trailing edge jackscrews to 40 inch-pounds.**
- e. **Torque all leading edge jackscrews (18) to 20 inch-pounds.**

**WARNING**

Adhesive will not cure at temperatures less than 60°F (16°C). Faulty curing can result in bond failure causing injury to personnel and damage to equipment. Do not count curing time periods at temperatures less than 70°F (21°C) into curing time total.

23. **Cure adhesive (E43) 24 hours.**
24. Loosen 15 jackscrews (18). **Remove** five retaining pins (15) and **clamping tools** (16). Remove trailing edge bar (17), leading edge collar (14), rubber sheet (E321) (12) and teflon-impregnated fabric (E168) (11).

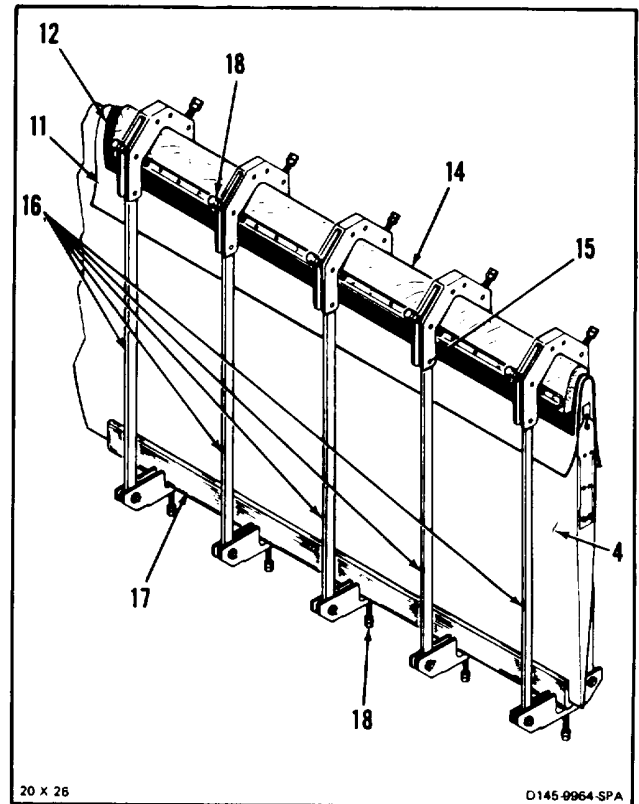

**GO TO NEXT PAGE**


Change 14 5-232

25. Check that erosion cap (3) is flush with titanium cap. Check that cap (3) is flush with tip cover (19). Blend if necessary. Use file.

**WARNING**

Sealant (E336) can irritate skin and cause burns. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

26. Fair adhesive squeezeout. Use abrasive paper (E9). If necessary, fair with sealant (E336).  
 ■ Wear gloves (E184.1).

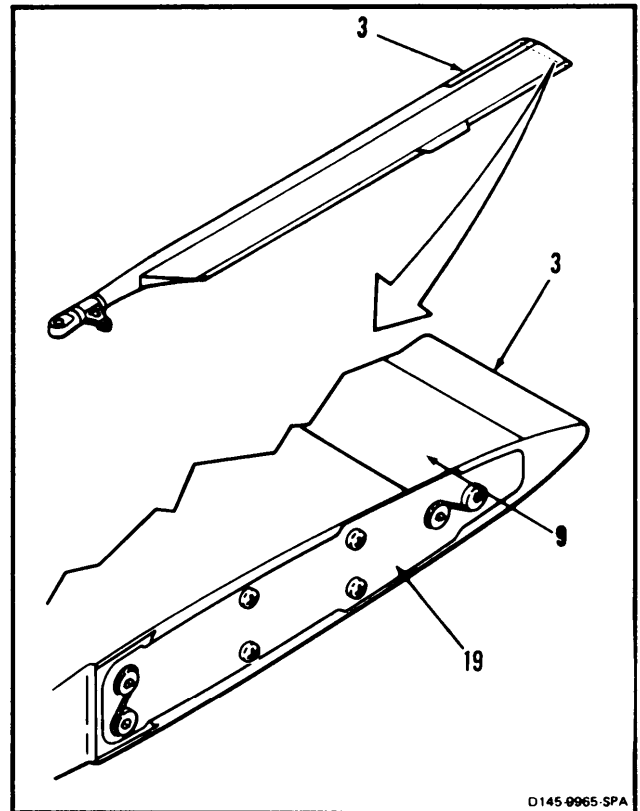



**5-66 REPLACE NICKEL EROSION CAP (AVIM) (Continued)**

5-66

27. Clean erosion cap (3) as follows:

- a. Clean erosion cap (3). Use metal conditioner (E242) mixed with three parts of water. Wipe mixture on cap. Use cloth (E120).
- b. Wipe mixture with cloth (E120) damp with water.
- c. Dry cap (3). Use cloth (E120).

27.1. Determine the finish system used on the rotor blade (TM 55-1500-344-23).

- a. For rotor blades **without** **57** proceed to step 28.
- b. For rotor blades **with** **57** proceed to Task 2-350.1.

**WARNING**


Epoxy primer (E293) is flammable and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from heat or open flame. Avoid contact with skin, eye, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

28. Apply thin mist coat of epoxy primer (E293) to cap (3). Wear gloves (E184.1). Air dry 1 hour.

**WARNING**

Lacquer (E215) is extremely flammable. It can be toxic. Keep away from heat, sparks, or open flames. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

Thinner (E415) is combustible and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from open frame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

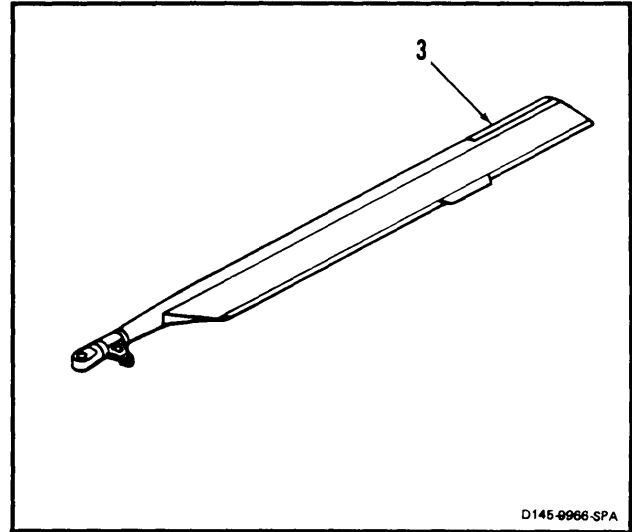

D145-0966-SPA

29. Thin flat black lacquer (E215). Use thinner (E415). Follow manufacturers instructions. Wear gloves (E184.1). **Apply two coats.** Allow to dry 45 minutes between coats.

**NOTE**

Apply lacquer (E215) within 2 hours after primer (E293) is applied.

**INSPECT****FOLLOW-ON MAINTENANCE:**

Track and balance blades (Task 5-139, 5-140, 5-141, and 5-142).

**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876
- Shim, 0.005-inch Thick
- Aluminum Scraper (Appx E-29)
- Shot Bags
- Heat Lamps (Optional)
- Trip Balance NSN 6670-00-401-7195

**Materials:**

- Teflon Tape (E399)
- Aluminum Foil (E66)
- Gloves (E186)
- Squeeze Bottle (E366)
- Acetone (E20)


- Adhesive (E43)
- Polyethylene Cup (E157)
- Tongue Depressor (E424)
- Cloth (E120)
- Peel Ply (E270)
- Rubber Sheet (E321)
- Abrasive Paper (E9)
- Aliphatic Naphtha (E245)
- Temperature Indicating Strips (E413)

**Personnel Required:**

- Aircraft Structural Repairer
- Inspector

**Equipment Condition:**

- Off Helicopter Task

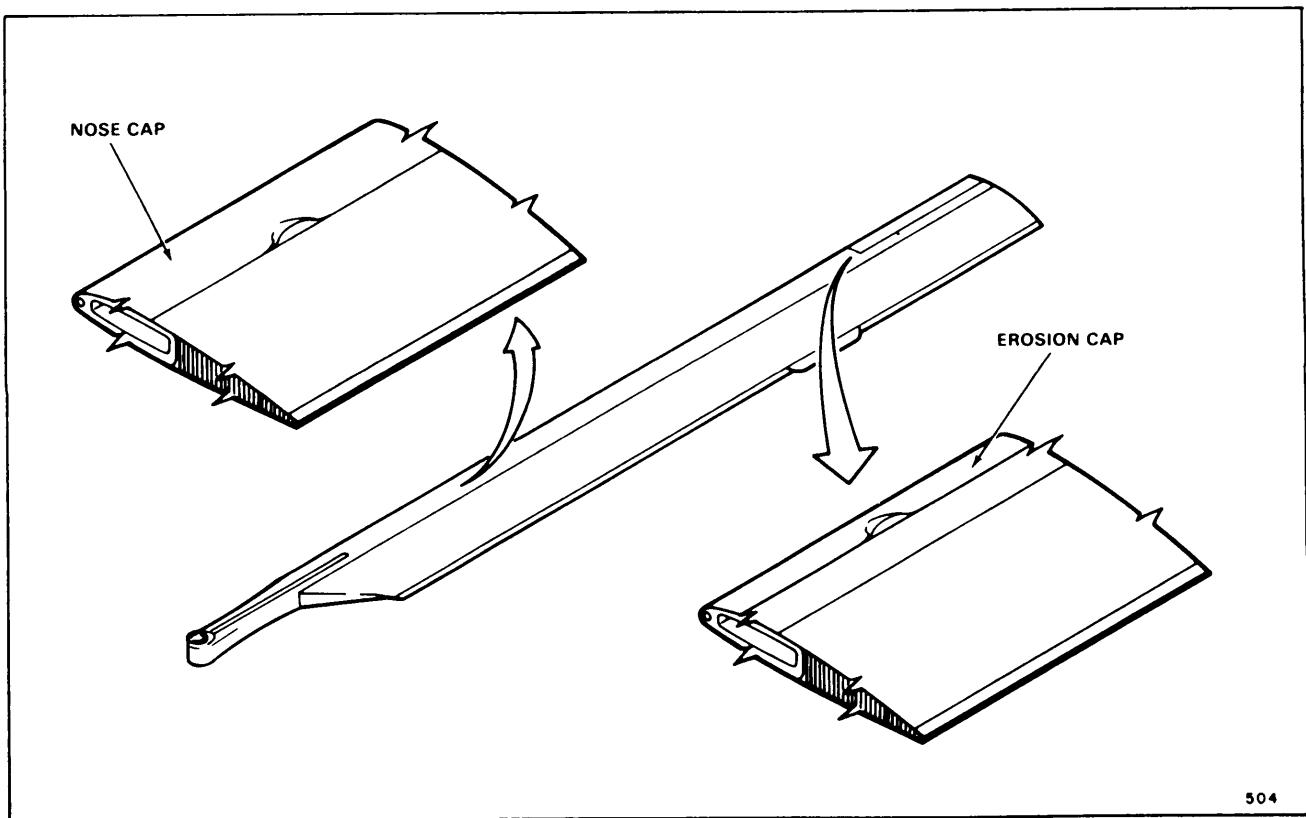

## 5-66.1 REPAIR OF NOSE CAP OR EROSION CAP UNBONDING (Continued)

5-66.1

### NOTE

Procedure for repair of titanium nose cap and nickel erosion cap are similar. Differences are noted in text. Repair bond voids only if they reach to edge of cap.



1. **Find size of void (1).** Use 0.005-inch thick shim as a probe. Mark outline of void with pencil or chalk.

### CAUTION

**Do not damage fiberglass when removing adhesive aft of nose cap.**

2. **Remove adhesive squeezeout (2)** at trailing edge (3) of cap (4). Remove adhesive along full width of void. Use aluminum scraper (Appx E-29).

3. **Mask area around void (1).** Use teflon tape (E399) (5) forward of cap trailing edge (3). Use aluminum foil (E66) (6) and teflon tape (5) aft of cap trailing edge.
4. **Open void (1)** at edge of cap (4). Use clean 0.005-inch thick shim stock.
5. **Position blade (7)** so leading edge is higher than trailing edge.

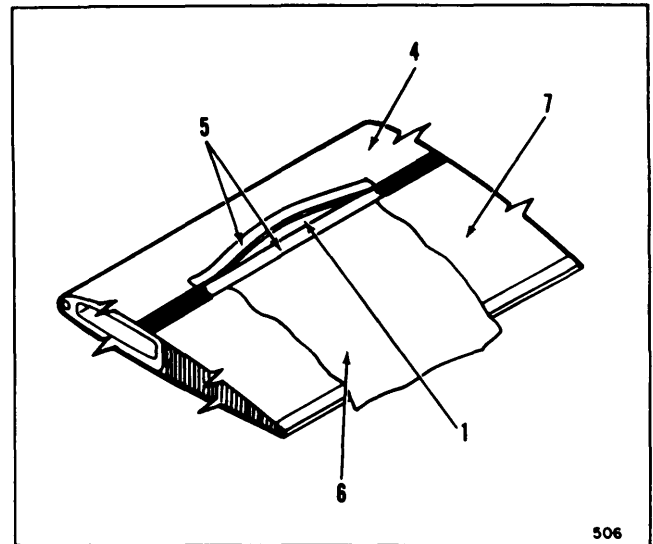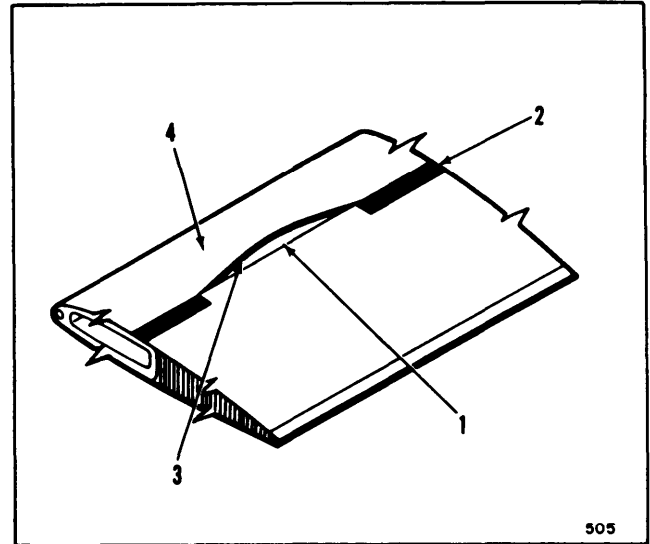

**GO TO NEXT PAGE**



**WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

6. **Clean void (1).** Fill plastic squeeze bottle (E366) with acetone (E20). Flush void with acetone until acetone runs clear. Allow to dry for 15 minutes.

**WARNING**


Adhesive (E43) is toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

7. **Mix adhesive (E43)** as follows:

- a. Mix 5 parts by weight of white base with 7 parts by weight of grey hardener. Use clean polyethylene cup (E157) and trip balance.
- b. Stir mixture until color is uniform. Use wooden spatula (E424).

**NOTE**

Adhesive has working life of about 30 minutes.

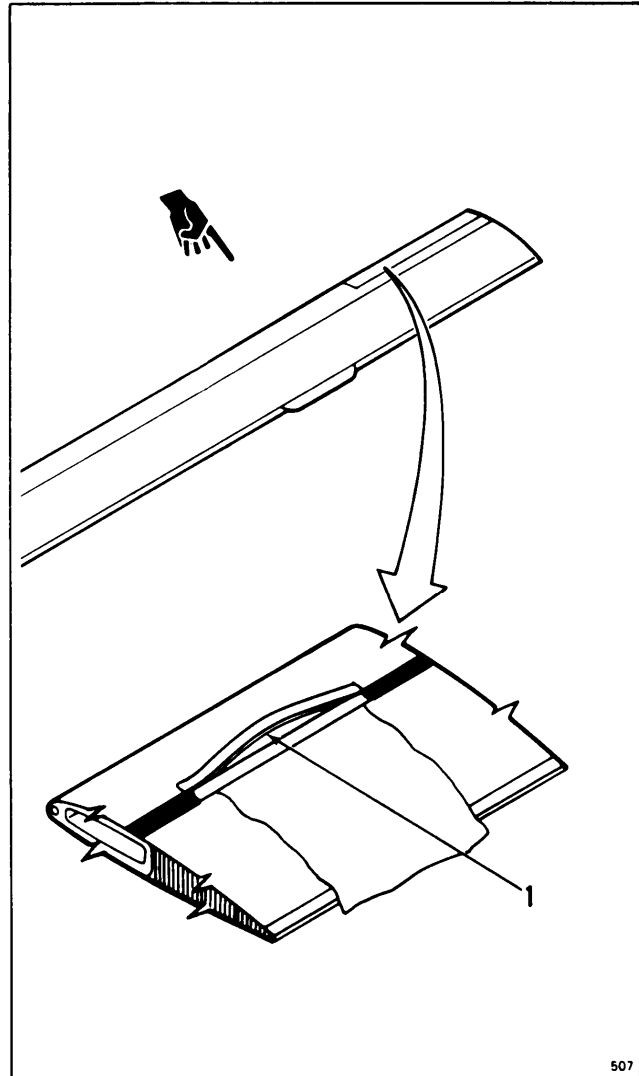


507

## 5-66.1 REPAIR OF NOSE CAP OR EROSION CAP UNBONDING (Continued)

5-66.1

8. **Position blade (7)** so void (1) is level.
9. **Fill void (1) with adhesive (E43).** Use clean 0.005-inch shim stock to work adhesive into void. Fill deepest part of void first to prevent trapping of air.
10. **Close void (1).** Press cap (4) against blade by hand. Remove excess adhesive. Use cloth (E120).
11. **Remove tape (5) and aluminum foil (6).**

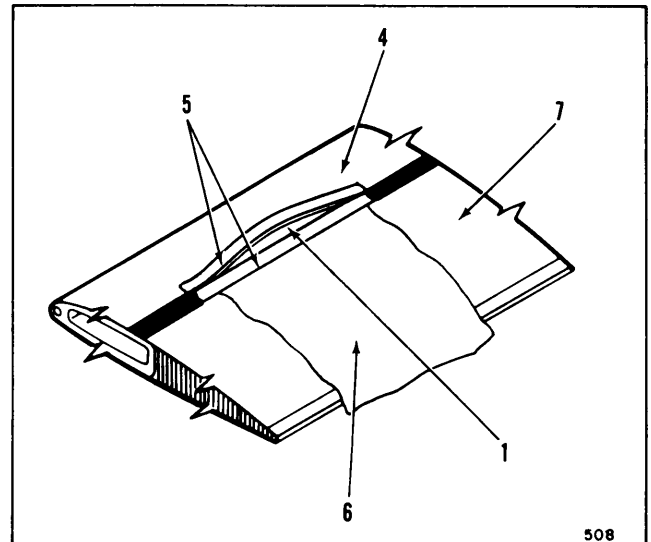

12. **Cure repair** as follows:
  - a. Cover the repair with peel ply (E270) (8).
  - b. Cut piece of 1/4-inch thick rubber sheet (E321) to cover repair. Position rubber sheet (9) over peel ply (8).
  - c. Apply pressure of 2 to 3 pounds for each square inch of repair; Apply pressure evenly over repair. Use shot bags (10).

**CAUTION**


**Blade temperature must not exceed 160°F (71°C). Overheating will damage fiberglass.**

- d. Cure repair at 140°F (60°C) to 160°F (71°C) for 2 hours. Use heat lamps. Monitor blade temperature. Use temperature indicating strips (E413).

**NOTE**

If heat lamps are not available, cure at 70°F (21°C) for 24 hours. Shot bags can be removed after 12 hours.

13. **Remove shot bags (10), rubber sheet (9), and peel ply (8).**

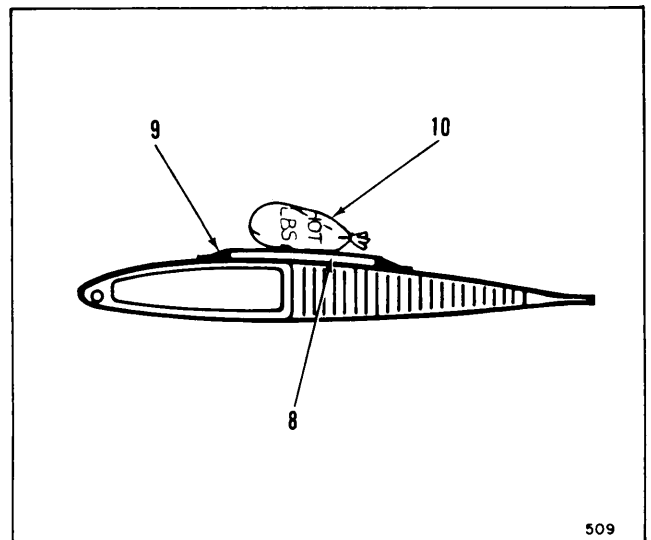

**GO TO NEXT PAGE**

**5-66.1 REPAIR OF NOSE CAP OR EROSION CAP UNBONDING**  
(Continued)


5-66.1

14. Remove excess adhesive. Use abrasive paper (E9).

**WARNING**

Naphtha (E245) is combustible and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

15. Clean repair area. Use cloth (E120) damp with naphtha (E245). Wipe dry with clean cloth before naphtha dries.

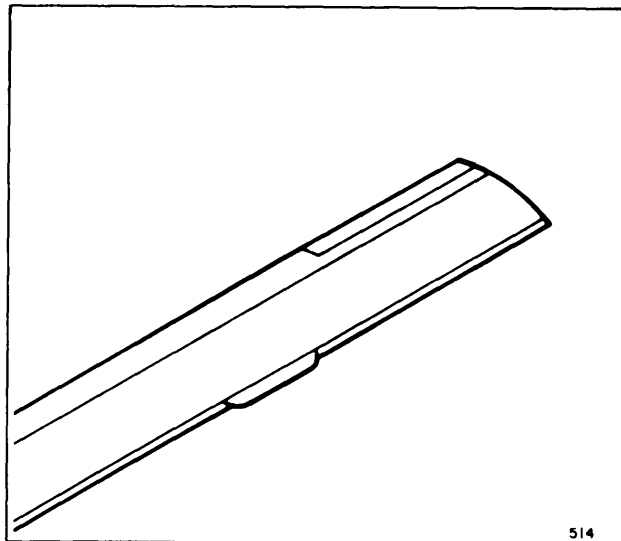**INSPECT****FOLLOW-ON MAINTENANCE:**

**Refinish** repaired area as required (Task 5-82).

**END OF TASK**

5-234.4 Change 2

## 5-66.2 REPAIR TITANIUM NOSE CAP CRACKS (AVIM)

5-66.2

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876  
Rotor Blade Adapter (T164)  
Trip Balance NSN 66700- 401-7195  
Vacuum Source  
Aluminum Tube, 8 Inches Long, Diameter to Fit  
Vacuum Hose  
Wooden Blocks  
Cargo Strap, 72 Inches Long  
Heat Lamps

**Materials:**


Polyvinyl Sheet (E284)  
Masking Tape (E388)  
Abrasive Paper (E9)  
Teflon Tape (E399)  
Repair Doubler (E160.4)  
Gloves (E184.1)  
Cloth (E120)  
Acetone (E20)  
DeSoto Primer (E291.1)  
Cheesecloth (E112)  
Scrim Cloth (E325)  
Adhesive (E41 or E43)  
Polyethylene Cup (EI 57)  
Tongue Depressor (E424)  
Sealant (E336)  
Teflon-Impregnated Fabric (EI 70)  
Fiberglass Cloth (E132)  
Sealing Tape (E396)  
Rubber Sheet (E319)  
Temperature Indicating Strips (E413)  
Epoxy Primer (E292.1)  
Aliphatic Naphtha (E245)  
Lusterless Black Lacquer (E215)  
Thinner (E415)

**NOTE**

If adhesive (E41) is used scrim cloth is not required. Adhesive (E41) contains beads which prevent it from being squeezed below the thickness of the beads.

**Personnel required:**

Aircraft Structural Repairer  
Inspector

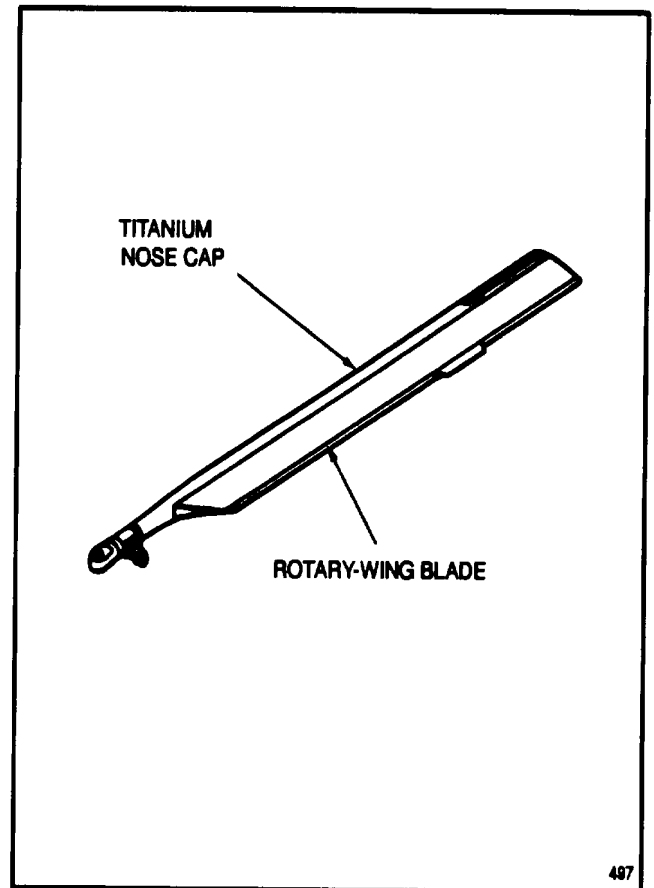**References:**

Task 5-566.1  
Task 2-350.1  
TM 55-1500-344-23

**Equipment Condition:**

Off Helicopter Task

**General Safety Instructions:****WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

GO TO NEXT PAGE

Change 34 5-234.5

**WARNING**

The preparation and bonding of the titanium nose cap doubler is a critical repair. It must be performed exactly as described. If possible, surface preparation and bonding shall be done in a controlled environment to avoid contamination and to obtain proper adhesive cure. Failure to follow these instructions can result in unbending of the doubler and subsequent injury to personnel.

**CAUTION**

Do not repair titanium nose cap cracks outboard of sta 303.


**NOTE**

There is no limit to the number of repairs that can be done on a nose cap. The minimum distance between repairs, measured between centerlines, shall be 12 inches. If cracks occur closer than 12 inches, blade is not repairable at this level.

1. Position blade (1) in adapter (T164) (2) with nose cap (3) up.
2. Tape polyvinyl sheets (E284) (4) over top and bottom of blade (5) aft of crack (6). Use masking tape (E388) (7).

**WARNING**

Remove only black lacquer or polyurethane paint finish. Green primer must remain to provide satisfactory bond. If bare titanium is exposed, DeSoto primer (E291.1) must be applied.

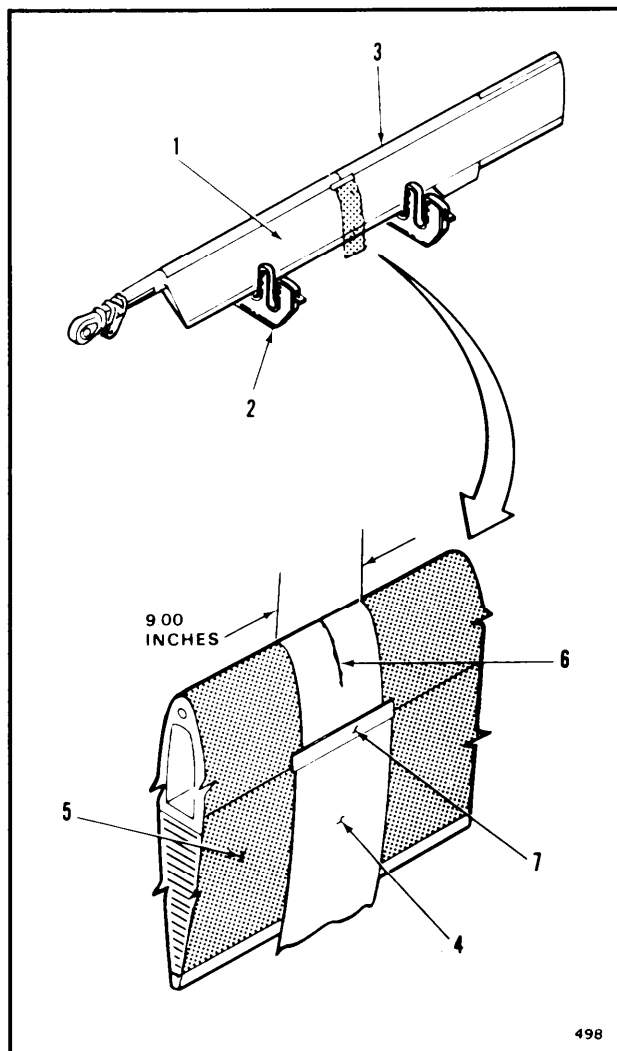**CAUTION**

Do not use chlorinated solvents on titanium nose cap or doubler. These solvents cause material failure.

- 2.1. Determine the finish system used on the rotor blade (TM 55-1 500-344-23).
3. Remove black lacquer or polyurethane paint from strip 4-1/2 inches wide on each side of crack (6) on both sides of cap (3). Use abrasive paper (E9). Use very light pressure. Sand only as required to remove lacquer.

## 5-66.2 REPAIR TITANIUM NOSE CAP CRACKS (AVIM) (Continued)


5-66.2

4. **Position repair doubler (E160.4) (8)** centered over crack. **Mask cap (3) 1/4-inch outside doubler.** Use teflon tape (E399) (9). Remove doubler.

**CAUTION**

**Do not apply acetone to teflon tape. Acetone will dissolve tape adhesive and contaminate repair area.**

5. **Clean repair area.** Use cloth (E1 20) damp with acetone (E20). Wipe immediately with dean dry cloth. Clean as required to remove black lacquer or polyurethane paint. Wear gloves (E184.1). Excess acetone will remove primer.

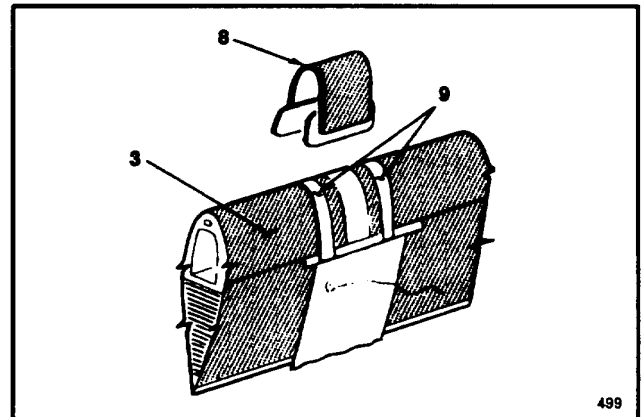

GO TO NEXT PAGE

Change 34 5-234.6.1/(5-234.6.2 bank)



**5-66.2 REPAIR TITANIUM NOSE CAP CRACKS (AVIM) (Continued) 5-66.2**

6. Inspect cap (3) for unbonding along edge of crack. If bond void is found, flush with acetone and rebond (Task 5-66.1).
7. Inspect repair area (10). If more than 5 percent of titanium is bare, prime area as follows:

**WARNING**


Primer (E291.1) is toxic. Avoid inhaling. Use only with adequate ventilation. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- a. Mix primer (E291.1). Mix 4 parts by volume of primer base with 1 part by volume of curing solution.
- b. Apply a thin film of primer (E291.1) to the repair area. Use cheesecloth (E112).

**CAUTION**

Do not exceed 160°F (71°C). Higher temperature can damage fiberglass.

- c. Cure repair at 140°F to 160°F (60°C to 71°C) for 2 hours. Use heat lamps. Monitor temperature. Use temperature indicating stripes (E413). If heat lamps are not available, cure for 12 hours at 70°F (21°C).
8. Cut piece of scrim cloth (E325) (11) 1/8 inch larger than doubler (8) on each edge.

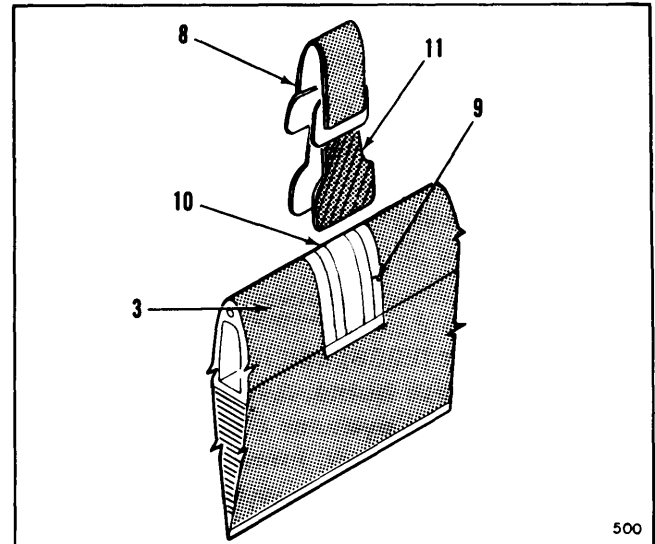**WARNING**

Adhesive (E43) is toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

9. Mix 3 ounces of prepackaged adhesive (E43). Follow manufacturer's instructions. Mix until color is uniform light grey. Go to step 11.
10. If prepackaged adhesive is not available, mix adhesive (E43) as follows:
  - a. Mix 5 parts by weight of base (white) with 7 parts by weight of hardener (gray).



**5-66.2 REPAIR TITANIUM NOSE CAP CRACKS (AVIM) (Continued) 5-66.2**


b. Mix adhesive in polyethylene cup (E157) until color is uniform. Use tongue depressor (E424).

11. **Apply adhesive (E43) to a 1 1/2-inch wide strip (12) on both sides of crack. Adhesive should extend to full chordwise depth of nose cap (3).**

**WARNING**

**Sealant (E336) can irritate skin and cause burns. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.**

12. **Apply sealant (E336) to a 1-inch wide strip (13) on either side of adhesive (E43) (12). Total width of adhesive and sealant should be 5 inches.**
13. Position scrim cloth (E325) (11) centered over crack. **Tamp scrim cloth into adhesive** and sealant until cloth is completely saturated. More adhesive can be added to obtain heavy coat.
14. **Remove peel ply from repair doubler (8).**
15. Spread ends of repair doubler (8) slightly and position over repair area. **Press doubler (8) firmly against leading edge of cap (3).**

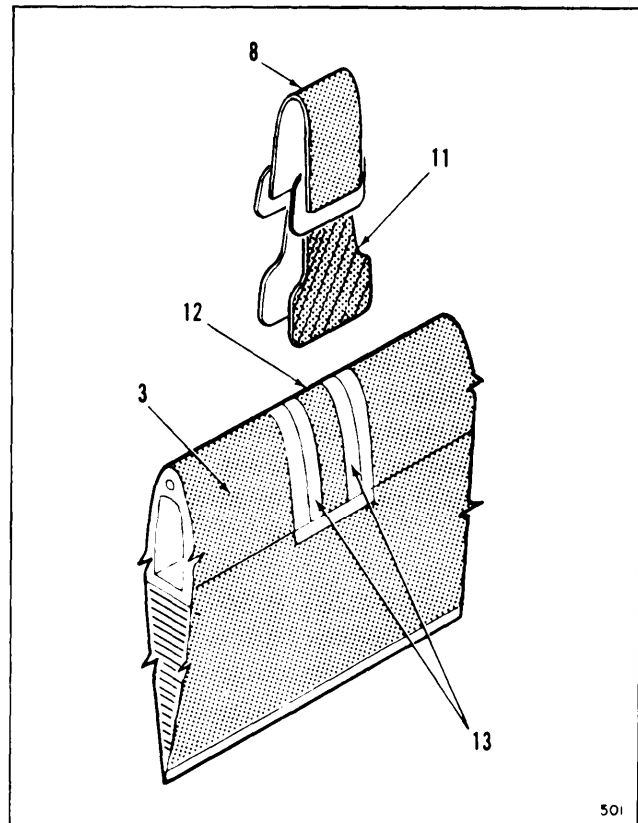

501

**GO TO NEXT PAGE**


5-234.8 Change 2

**5-66.2 REPAIR TITANIUM NOSE CAP CRACKS (AVIM) (Continued) 5-66.2****16. Prepare area for bonding as follows:**

- a. Cover repair with teflon impregnated fabric (E170) (14). Fabric should overlap repair 3 inches on each edge.
- b. Cover teflon impregnated fabric (14) with fiberglass cloth (E132) (15). Secure fiberglass cloth with masking tape (E388) (16).
- c. Apply sealing tape (E396) (17) around repair area.
- d. Wrap two layers of fiberglass cloth (E132) (18) around end of aluminum tube (19). Secure cloth to tube with masking tape (E388) (20).
- e. Connect tube (19) to vacuum source.
- f. Position tube (19) on fiberglass cloth (15) near the blade trailing edge. Wrap two layers of sealing tape (E396) (21) around tube (19) where it crosses sealing tape (17).
- g. Press tube (19) into surrounding sealing tape (17) to form air tight seal. Secure tube to blade. Use masking tape (E388) (22).
- h. Cover repair area with polyvinyl sheet (E284) (23). Press sheeting onto sealing tape (17) to form air tight seal.

**NOTE**


Spread polyvinyl sheeting smoothly,  
Keep wrinkles at a minimum to avoid  
air leaks.

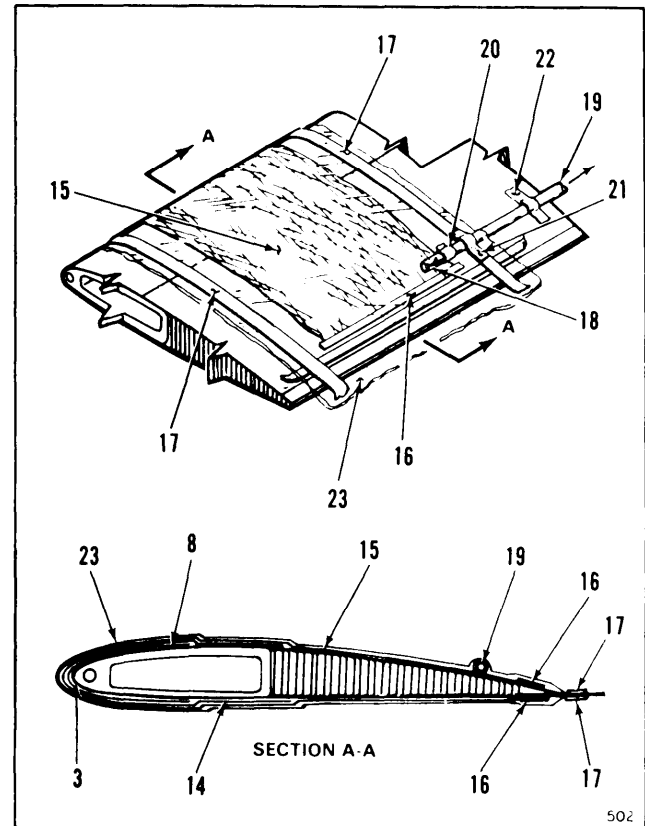**GO TO NEXT PAGE**

- i. Operate vacuum pump. Smooth wrinkles in polyvinyl sheet (23).
- j. Check for air leaks. Adjust sheeting (23) or add sealing tape (E396) if needed.
- k. Clamp wooden blocks (24) on both sides of blade trailing edge.
- l. Place cargo strap (25) around blade to secure nose cap doubler. Position rubber pads (26) to protect polyvinyl sheet (23) from cargo strap buckle. Make pads (26) from rubber sheet (E319).
- m. Tighten cargo strap (25) to fully seat repair doubler on nose cap.
- n. Maintain 20 inches Hg minimum vacuum during cure.

**CAUTION**

Do not exceed 160°F (71°C) .  
Higher temperature can damage fiberglass.

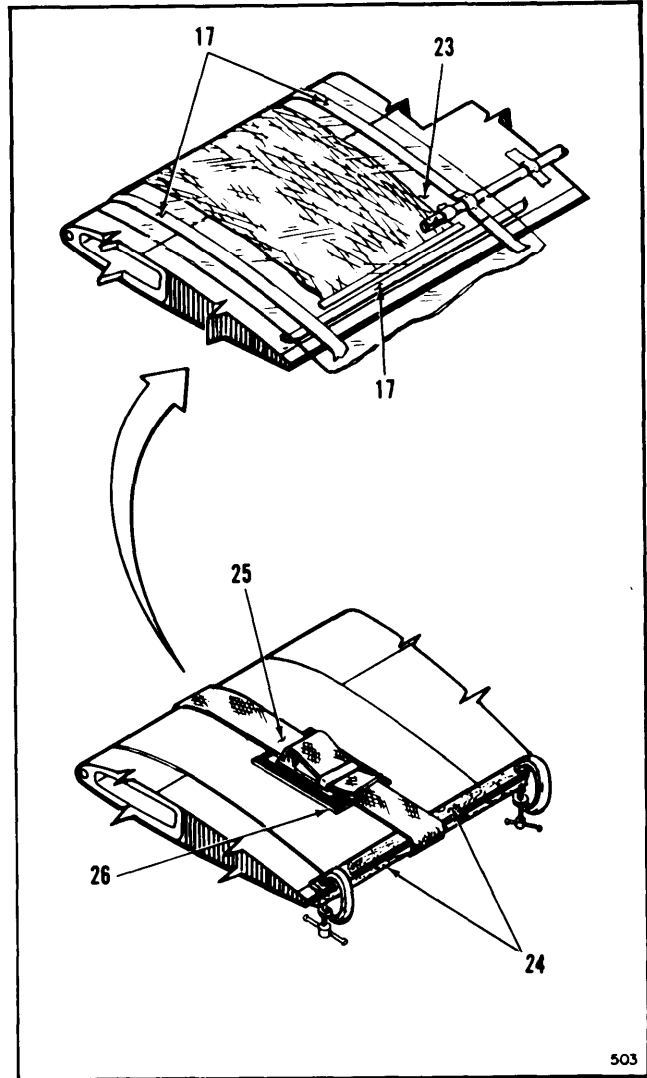

**5-66.2 REPAIR TITANIUM NOSE CAP CRACKS (AVIM) (Continued) 5-66.2**

17. **Cure repair at 140°F to 160°F (60°C to 71°C) for 2 hours.** Use heat lamps. Monitor temperature. Use temperature indicating strips (E413). If heat lamps are not available, go to step 18.

**WARNING**


Adhesive will not cure at temperature below 60°F (15°C). Improper cure can cause bond failure and injury to personnel. Do not count time at temperature below 70°F (21°C) as cure time.

18. Cure repair without heat lamps at 70°F (21°C) for 24 hours.

**NOTE**


Vacuum source can be removed after 12 hours when repair is cured for 24 hours.

19. **Remove vacuum source.** Remove cargo strap (25), pads (26), wood blocks (24), and polyvinyl sheet (23). Remove masking tape (22), tube (19), sealing tape (21 and 17), masking tape (16), glass cloth (15), and teflon impregnated fabric (14).

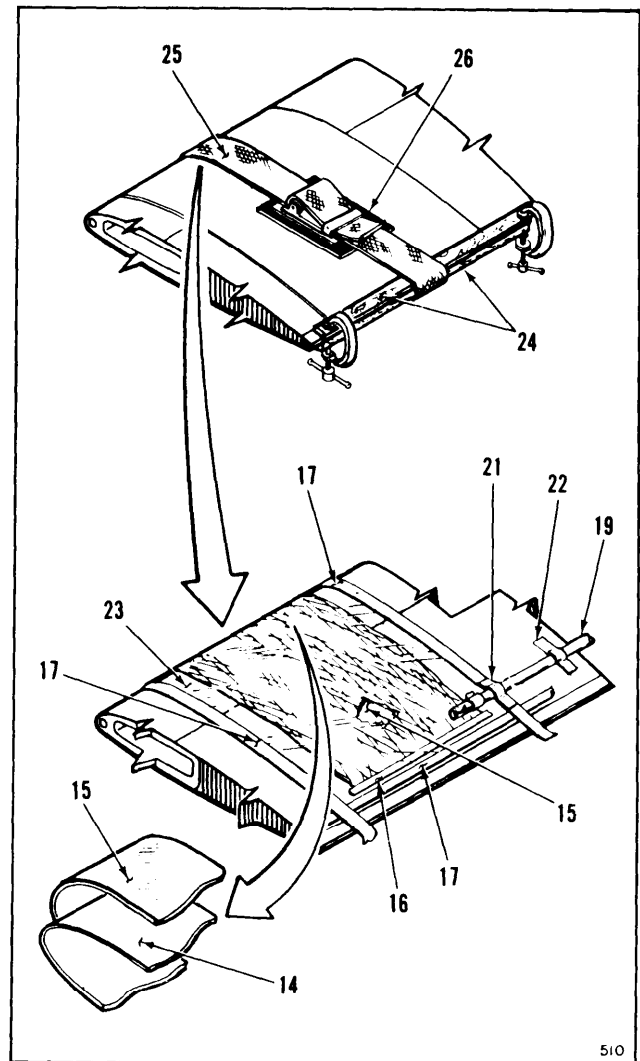

20. **Check repair area (27) for adhesive squeezeout.** Check for voids at areas where there is no squeezeout.

21. **Apply bead of sealant (E336) (28)** around doubler (8). Blend sealant to form a smooth gradual fairing from doubler to surface of blade (5). Cure sealant for 24 hours.

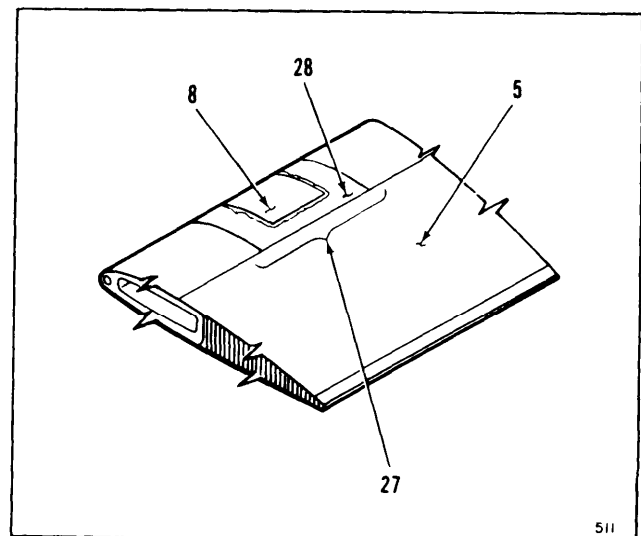

**GO TO NEXT PAGE**

- 21.1. Determine the finish system used on the rotor blade (TM 55-1 500-344-23).
  - a. For rotor blades without 58 proceed to step 22.
  - b. For rotor blades with 58 proceed to Task 2-350.1.

**22. Refinish repair area (27) as follows:**

- a. Solvent wipe repair area (27). Use cloth (E120) damp with acetone (E20). Wipe dry. Use clean cloth (E120). Wear gloves (E184.1).

**WARNING**

Epoxy primer (E292.1) is flammable and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from heat or open flame. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- b. Apply a thin mist coat of epoxy primer (E292.1). Wear gloves (E184.1). Allow to air dry for 1 hour.

**WARNING**


Naphtha (E245) is combustible and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from heat. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**CAUTION**

Use only aliphatic naphtha IT-N-95 (E245). Other types can contaminate blade surface.

**NOTE**

If lacquer finish is applied within 2 hours after epoxy primer, cleaning with aliphatic naphtha is not required.

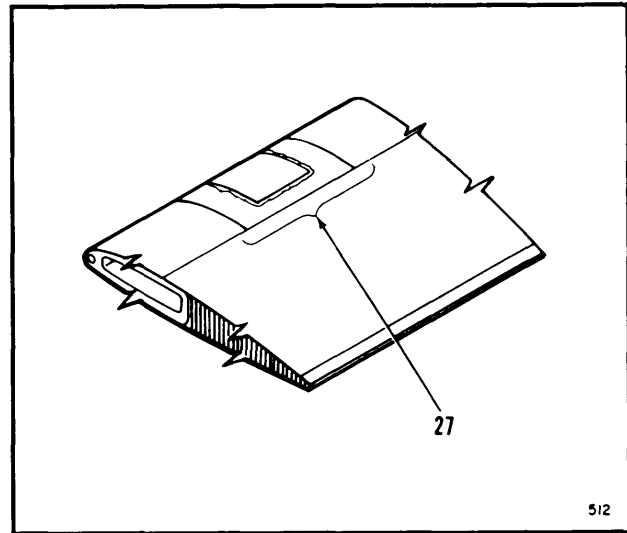

**5-66.2 REPAIR TITANIUM NOSE CAP CRACKS (AVIM) (Continued) 5-66.2**

- c. Within 24 hours after priming, wipe repair area (27). Use clean cloth (E120) damp with aliphatic naphtha (E245). Wear gloves (E184.1). Wipe dry before naphtha evaporates. Use clean cloth (E120).

**WARNING**

Lacquer (E215) is extremely flammable. It can be toxic. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.


**WARNING**

Thinner (E415) is flammable and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from heat or open flame. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- d. Thin lusterless black lacquer (E215). Use thinner (E415). Follow manufacturer's instructions.
- e. Apply two coats of thinned lacquer (E215) to repair area. Wear gloves (E184.1). Allow to dry 45 minutes between coats.

**INSPECT****FOLLOW-ON MAINTENANCE:**

Adjust tracking weights (Task 5-82.1).

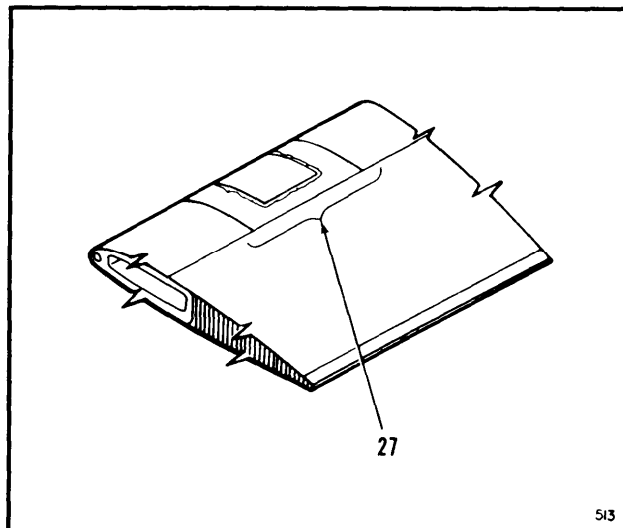

513

**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876
- Heat Lamp
- Trip Balance NSN 6670-00-401-7195

**Materials:**

- Abrasive Paper (E8 or E9)
- Acetone (E20)
- Cloths (E120)
- Masking Tape (E388)
- Adhesive (E40, E41, E43 or E47.1)
- Curing Agent (E158.1) or Hardener (E194.1)
- Temperature Indicating Strips (E413)
- Polyethylene Cup (E157)
- Wood Spatula (E424)

**Personnel Required:**


- Aircraft Structural Repairer
- Inspector

**References:**

- Task 5-63.1
- Task 5-632
- Task 5-82

**Equipment Condition:**

- Off Helicopter Task

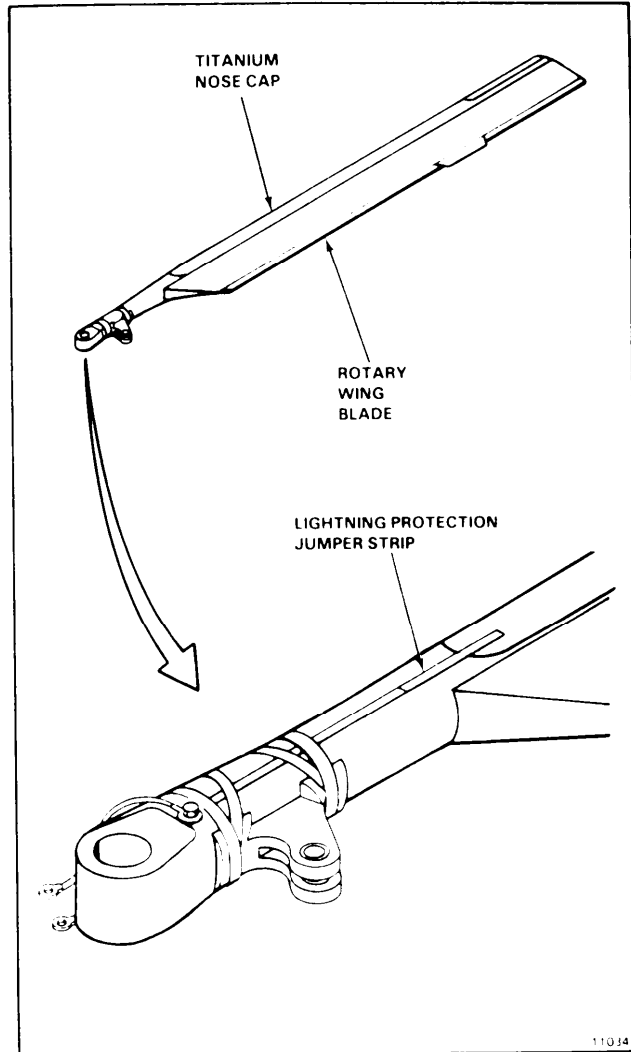

**General Safety Instructions:**

**WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**

Adhesive (E40, E41, E43 or E47.1) is extremely flammable. It is volatile. It forms harmful vapors and explosive peroxides. Keep away from heat, sparks, or open flame. Avoid inhaling. Use only with adequate ventilation.

**WARNING**

Adhesive used in the manufacturing of some fiberglass rotor blades contain asbestos. During blade repair, strict adherence to all safety procedures when working with asbestos must be complied with (applies to blade serial number A-1-0001 to 0424 and A-2-0001 to 0429 only).

**GO TO NEXT PAGE**

## 5-66.3 TITANIUM NOSE CAP LIGHTNING STRIKE REPAIR [Continued]

5-66.3

### CAUTION

Do not use chlorinated solvents on the titanium nose cap or doubler. Contamination of titanium will result in material failure

### NOTE


In general, lightning strikes are accompanied by arc burns, delamination, and fragmented fiberglass in the area of the strike. The lightning protection strip, jumper strips, wire mesh, and jumper wires usually receive the most severe damage.

1. Wipe blade (1) with cloths damp with acetone (E20). Dry with lint-free clean cloth (E120). Inspect and define areas of damage. (Task 63.1 and 63.2).
2. Remove fragments (if any) of fiberglass skin, loose doublers, and other damaged parts.
3. Repair lightning strike damage on titanium nose cap (2) as follows:
  - a. **Remove adhesive** where discolored or loose. Use aluminum chisel.
  - b. **Inspect wire mesh (3)** and surrounding area.
  - c. **Blend out damage (4)** on nose cap (2). Remove all signs of burns or discoloration. Make gradual blend over area at least 10 times depth of damage.

### CAUTION

Do not break fibers of blade skin or damage wire mesh.

- d. **Remove all wire edges and grind marks.** Use abrasive paper (E8 or E9). Sand with spanwise strokes only.
- e. Inspect. There shall be no check marks or chordwise cracks at nose cap trailing edge (5).

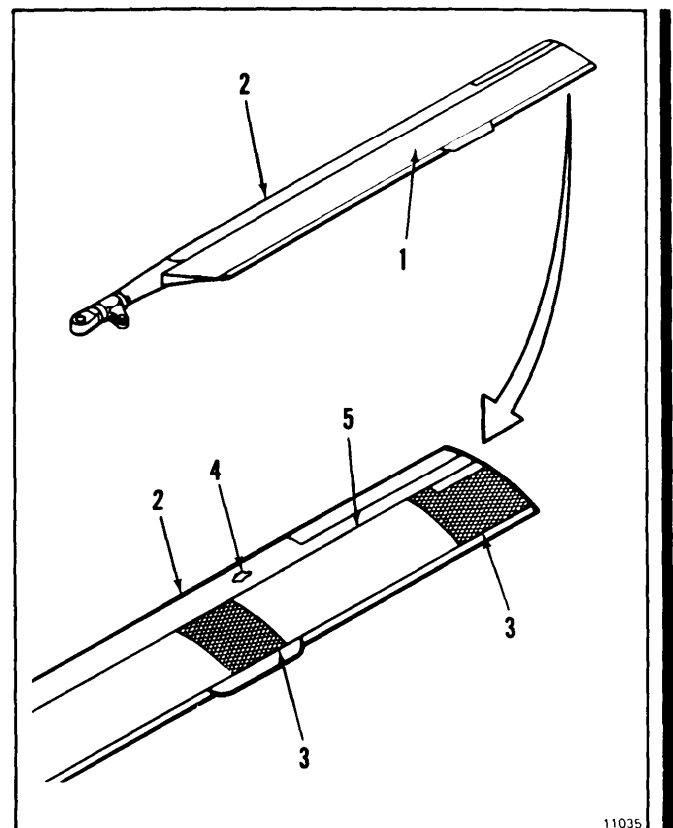

11035

GO TO NEXT PAGE



- f. **Remove loose particles.** Wipe repair area with cloth (E120) damp with acetone (E20). Wipe dry with dean cloth before acetone evaporates.
- g. **Mask blade fairing (6)** at repair area (4). Use masking tape (E388) (7).
- h. Prepare adhesive (E40, E41 or E47.1) as follows:

**NOTE**

**Adhesive (E41) is preferred. Use adhesive (E40) only if (E41) is not available.**

- (1) **Mix tube of adhesive (E40).**  
Follow instructions on kit.
  - (2) If adhesive (E40) is not available, prepare adhesive (E41) as follows:
    - (a) Weigh 100 parts of resin and 23 parts of hardener. Use trip balance.
    - (b) Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E24).
  - (3) If adhesive (E47.1) is used, prepare as follows:
    - (a) Weigh equal parts of adhesive (E47.1) and curing agent (E158.1 or E199.1) use trip balance.
    - (b) Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).
- i. Fill repair area (4) with adhesive. Fair adhesive to surrounding surface of nose cap (2).

**CAUTION**


**Do not exceed 160°F (71°C) at blade surface. Damage to fiberglass can occur.**

- j. Cure adhesive at 150° to 160°F(660 to 710C) hours. Use heat lamp. Monitor temperature. Use temperature indicating strips (E413).

**NOTE**

**Serviceable cure can be achieved without heat at 70° to 80°F (21° to 27°C) in 24 hours.**

- k. Refinish repair area (4) (Task 5-82).

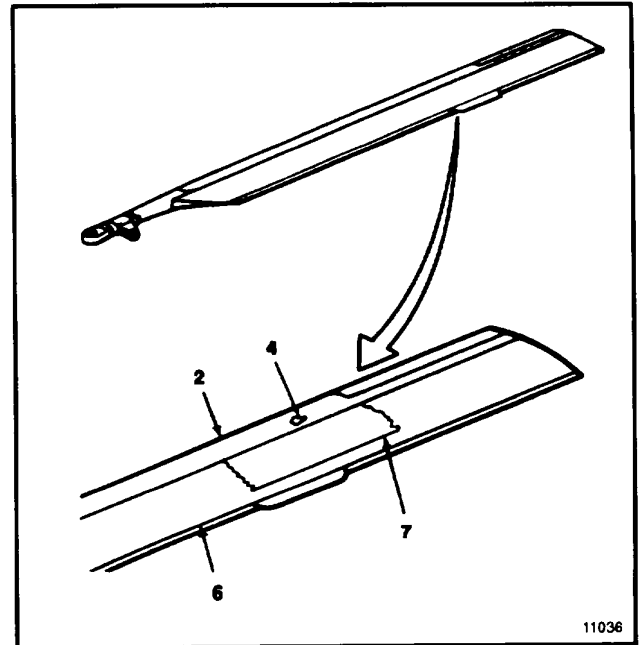

**GO TO NEXT PAGE**

**Change 34 5-234.16**

## 5-66.3 TITANIUM NOSE CAP LIGHTNING STRIKE REPAIR (Continued)

5-66.3

4. Repair damage to nose cap (2) under jumper strip (8) as follows:
- Remove jumper strip (8). Use aluminum chisel.

**CAUTION**


Do not break fibers of the fairing skin.

- Remove damage on nose cap (2). Use a grinder. Edge of nose cap can be scalloped to full depth if required. Use a 1 inch diameter grinder.
- Smooth edge of repair.** Use abrasive paper (E8 or E9). Sand in spanwise direction only.
- Wipe repair area.** Use cloth (E20) damp with acetone (E120). Wipe dry with clean cloth before acetone evaporates.
- Mix adhesive** as follows:
  - Weigh 7 parts of gray hardener and 5 parts of white base. Use tip balance.
  - Mix in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).
- Fill blended area with adhesive (E43).**

**INSPECT**

**FOLLOW-ON MAINTENANCE:**

- Replace Jumper Strip (Task 5-81.3.1)
- Refinish repair area (Task 5-82)

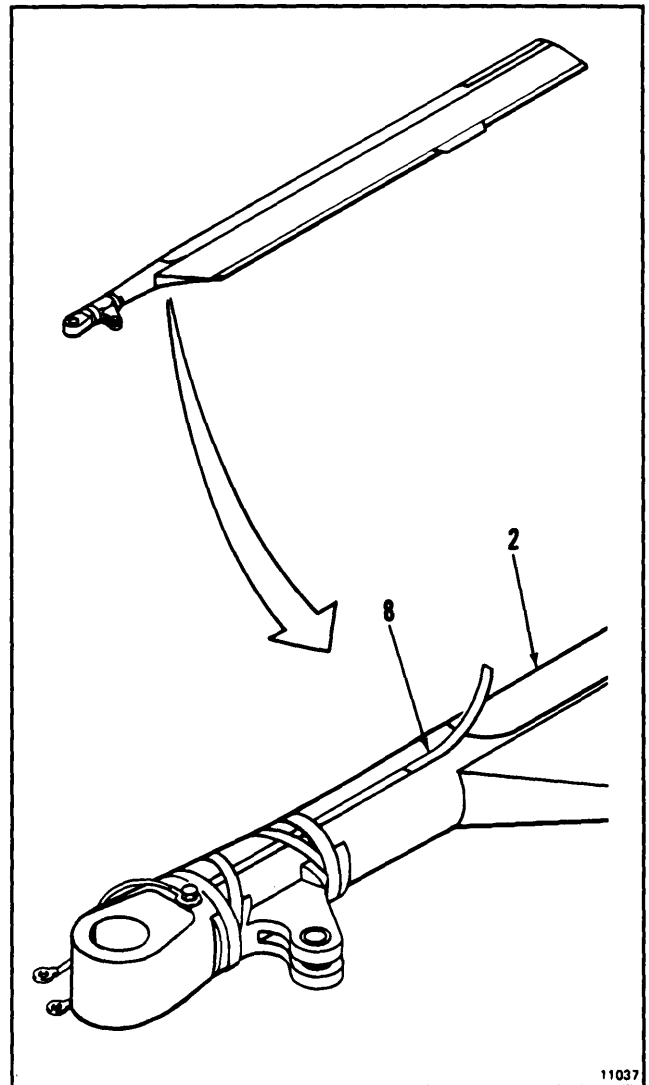

**END OF TASK**



## 5-66.4 REPAIR ROOT END SLOT SEAL

5-66.4

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876  
Heat Lamp

**Materials:**

Abrasive Paper (E7 and E9)  
Acetone (E20)  
Cloth (E120)  
Sealant (E336)  
Teflon Tape (E399)  
Temperature Indicating Strips (E413)

**Parts:**


Root End Slot Seal 114R1779-1

**Personnel Required:**

Aircraft Structural Repairer  
Inspector

**Equipment Condition:**

Off Helicopter Task

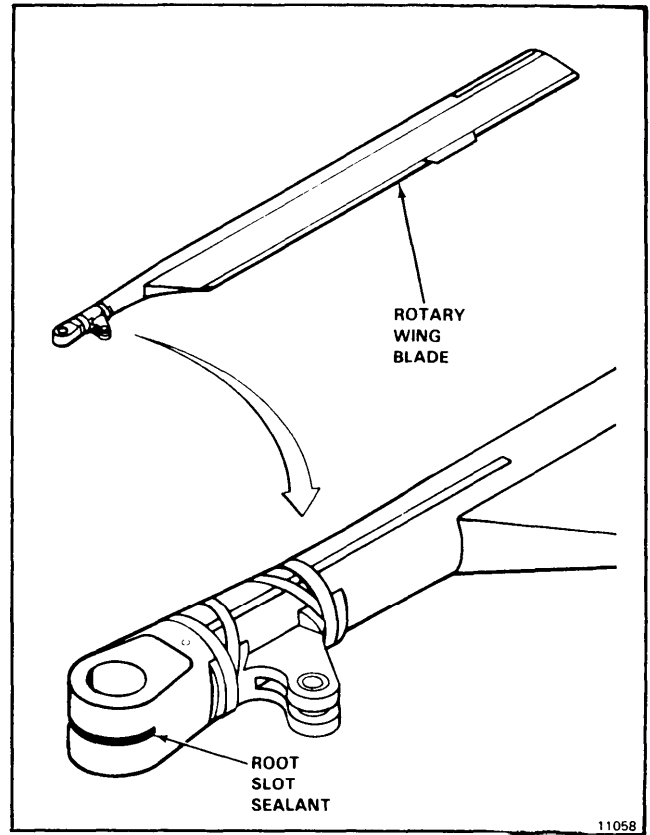

11058


**WARNING**

Adhesive used in the manufacturing of some fiberglass rotor blades contain asbestos. During blade repair, strict adherence to all safety procedures when working with asbestos must be complied with (applies to blade serial number A-1-0001 to 0424 and A-2-0001 to 0429 only).

1. **Remove finish** from root end to a distance of 1 inch all around root slot sealant (1). Use abrasive paper (E7).
2. **Remove root slot sealant (1)**. Use utility knife and chisel.

**WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep

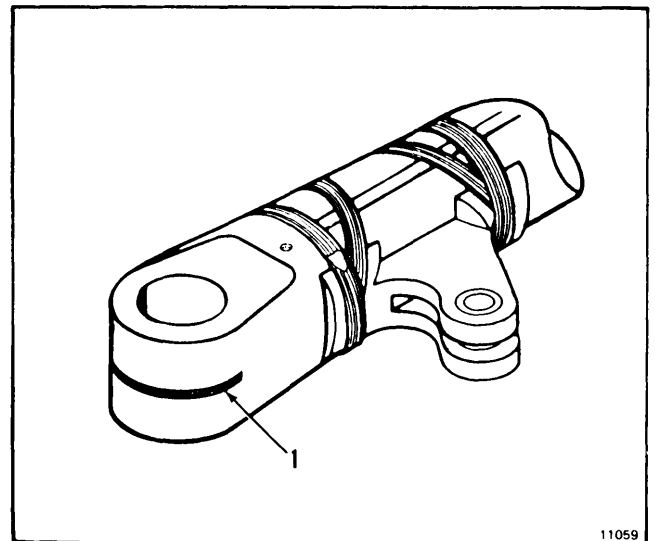

11059

away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

3. **Clean repair area**. Use clean cloth (E120) damp with acetone (E20). Wipe dry before acetone evaporates. Use clean dry cloth.

GO TO NEXT PAGE

Change 24 5-234.19

**WARNING**


Sealant (E336) can irritate skin and cause burns. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

4. **Mix sealant (E336)** in accordance with the manufacturer's instructions.


**NOTE**

Working life of sealant (E336) is about 30 minutes.

5. Temporarily fit root slot seal (2) in open root slot (3). Note amount of gap between ends of slot filler (4) and ends of root slot. Draw outline (5) of slot seal (2) on blade root. Remove seal (2).

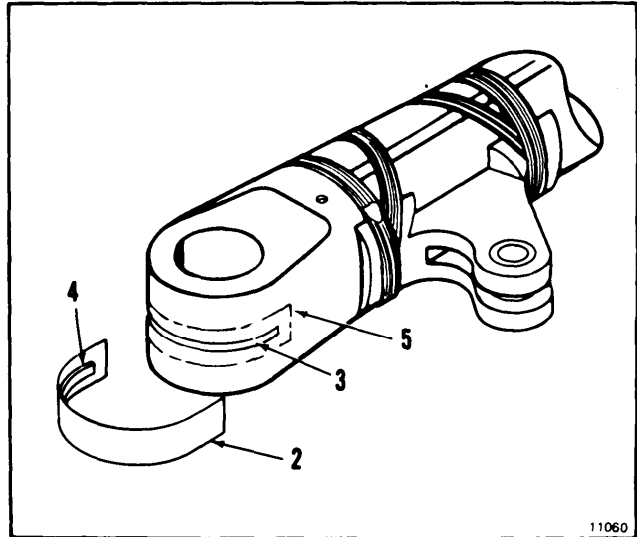


6. **Apply sealant** to area within outline (5). Apply sealant at ends of root end slot (3) to completely fill gap between slot and end of filler (4).

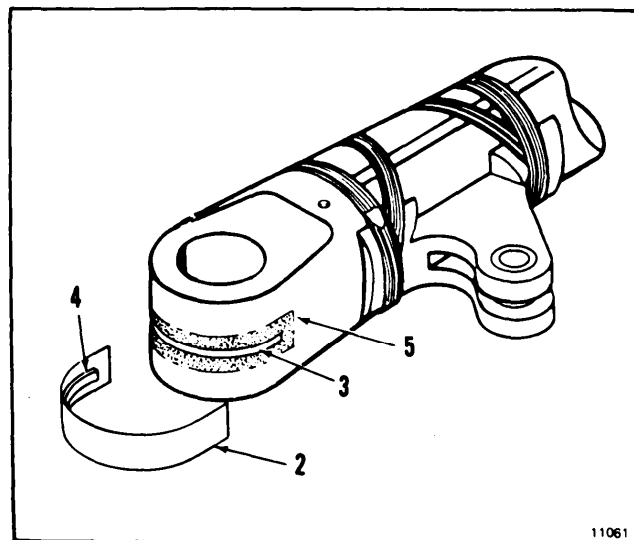

**5-66.4 REPAIR ROOT END SLOT SEAL (Continued)****5-66.4**

7. **Install end slot seal (2).** Press edges of seal firmly onto sealant. Use additional sealant (E336) to fair end slot seal to surrounding surface.

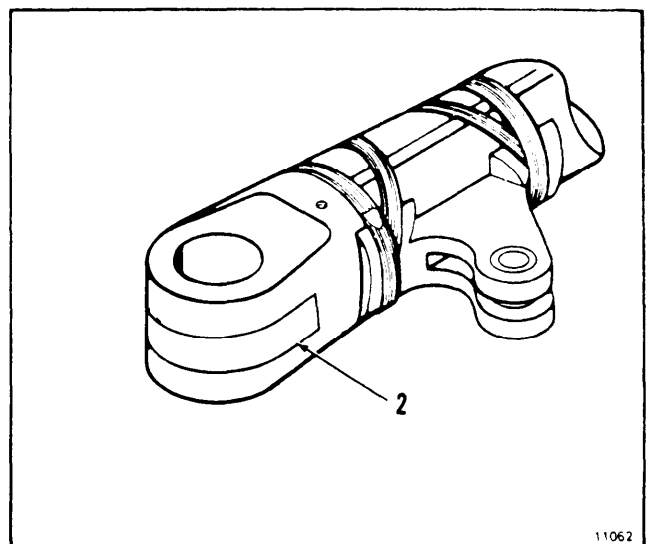

8. **Cover repair area with teflon tape (E399) (6).**

**CAUTION**

Do not exceed 160°F (71°C) at blade surface. Damage to fiberglass blade can occur.

9. **Cure adhesive at 120°F to 130°F (49°C to 55°C)** for 1 hour. Use heat lamp. Monitor temperature. Use temperature indicating strips (E413).


**NOTE**

Serviceable cure can be achieved at 70°F to 80°F (21°C to 27°C) in 6 hours.

10. Remove teflon tape (6) when cure is completed.

**INSPECT****FOLLOW-ON MAINTENANCE:**

Refinish repair area (Task 5-82).

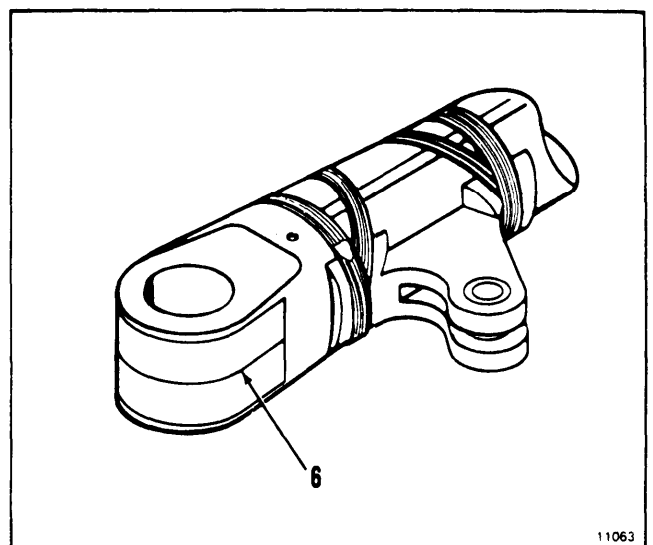**END OF TASK**

**5-66.5 INSPECT TITANIUM NOSE CAP FOR UNBONDING**

5-66.5

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Coin

**Materials:**

None

**Personnel Required:**

Inspector

**Equipment Condition:**


Battery Disconnect (Task 1-39)

Electrical Power Off

Hydraulic Power Off

**NOTE**

- Position blade to be serviced over fuselage. Tiedown one forward and aft head to assure no rotation.
  - Procedure is to inspect the inner 10 inches and outer 54 inches of the titanium cap for unbending. Corresponding stations are 77 to 87 and 306 to 360.
1. Coin tap inspect titanium cap in area (1), both top and bottom, from station 77 to station 87. Total void area of both top and bottom is not to exceed 90 square inches and should be replaced if it exceeds this requirement.
  2. Coin tap inspect titanium cap in areas (2) and (3) from station 306.0 to 360.0.
    - a. Voids shall not exceed 2 inches chordwise nor 12 inches spanwise.
    - b. Minimum Distance between voids shall be 1.0 inch chordwise, 6 inches spanwise.
    - c. Voids within minimum distance of each other shall be considered one void.

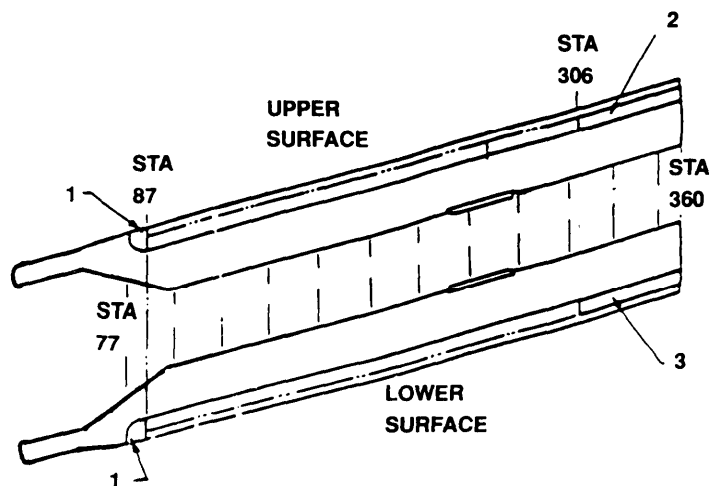**GO TO NEXT PAGE**


**5-66.5 INSPECT TITANIUM NOSE CAP FOR UNBONDING**  
**(Continued)**

5-66.5

3. Any void within 0.25 inch of the leading edge or to the outboard or trailing edge shall be repaired per TM 55-1520-240-23-4, Task 5-66.1.
4. Coin tap inspect shaded area (1) between 0.25 inch and 1.0 inch of leading edge and within 1.0 inch of the outer and trailing edges. Void area shall not exceed 10 square inches. Replace blade if void exceeds 10 square inches.
5. Coin tap inspect area (2) beyond 1.0 inch from any edge of blade. Void area shall not exceed 20 square inches. Replace blade if void exceeds this requirement.

**NOTE**

Any void whose location exists within 0.25 inch of the leading, outboard or trailing edge and extends in the center area (2) shall meet the criteria of steps 4 and 5.

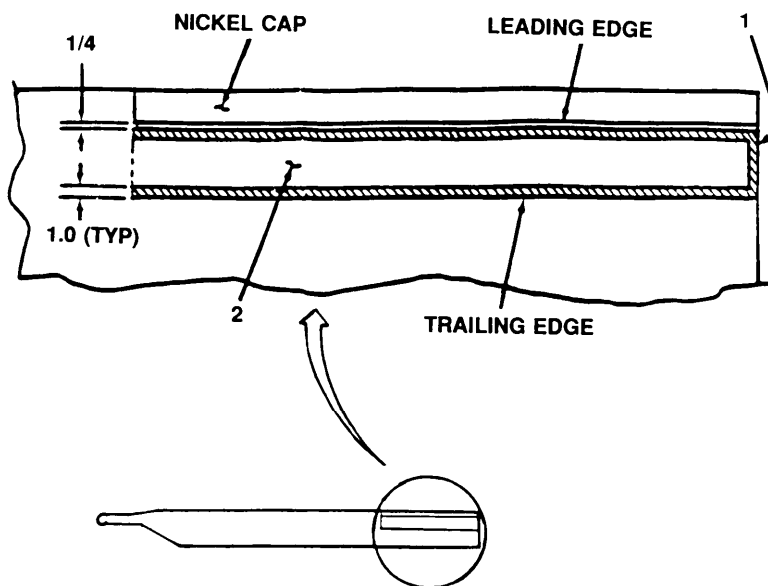

**FOLLOW ON MAINTENANCE:**

TM 55-1520-240-23-2  
 Task 5-66.1

**END OF TASK**



## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876  
Trip Balance, NSN 6670-00-401-7195  
Shot Bag  
Heat Lamp

**Materials:**


Abrasive Paper (E7 and E9)  
Gloves (E186)  
Cloth (E120)  
Acetone (E20)  
Adhesive (E40) or (E41)  
Polyethylene Cup (E157)  
Wood Spatula (E424)  
Peel Ply (E270)  
Teflon-impregnated Fabric (E170)  
Tape (E388)  
Silicone Rubber (E318)  
Temperature Indicating Strips (E413)

**Personnel Required:**

Aircraft Structure Repairer  
Inspector


**Equipment Condition:**

Off Helicopter Task

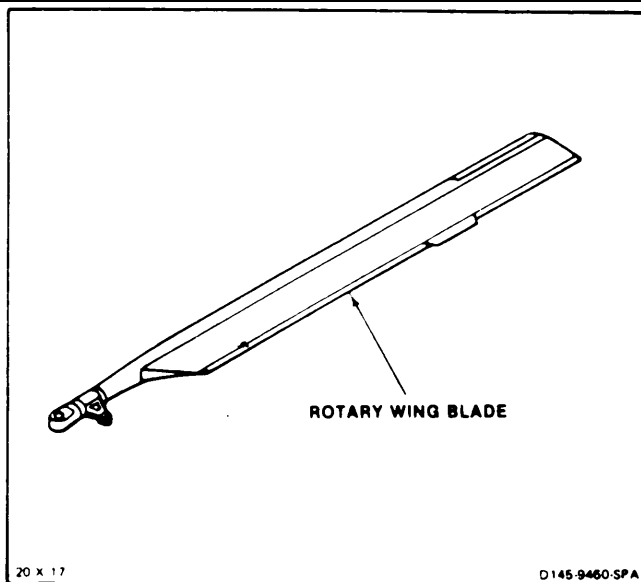

1. Prepare damaged area (1) of spar (2) as follows:

- a. Remove damaged fiberglass Use file.  
Do not exceed depth of damage. Taper edges 10 times depth of damage.
- b Check damaged area. Damaged area shall not exceed four piles (0.072 inch) in depth.

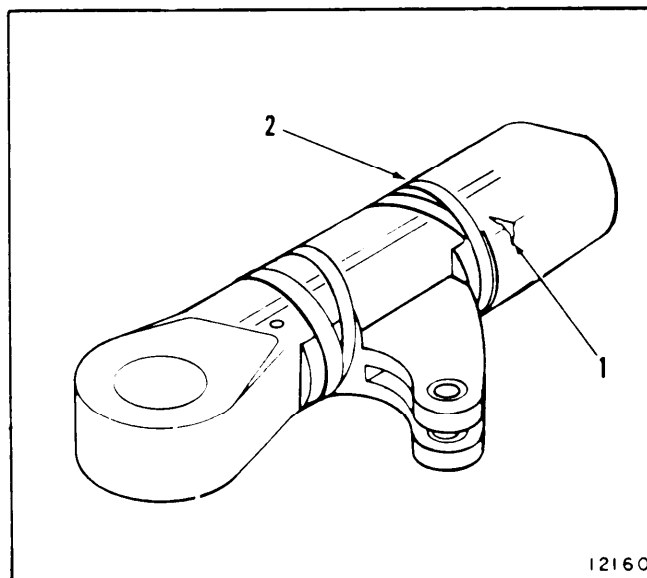


**5-67 REPAIR BLADE SPAR ROOT END MINOR DAMAGE (Continued) 5-67**

- c. Remove finish to a distance of 1 inch all around damaged area (1). Use abrasive paper (E7).

**WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- d. Clean area (3) where finish was removed. Use cloth (E120) damp with acetone (E20). Wear gloves (E186). Wipe acetone dry immediately. Use dry cloth (E120).

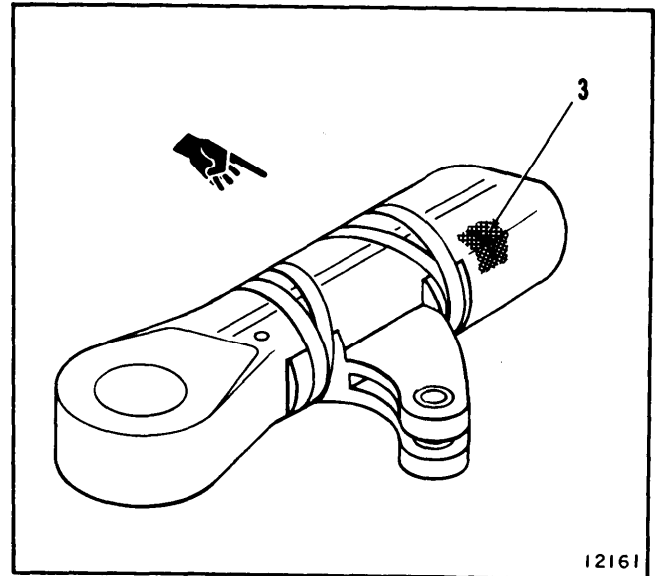

2. Mix adhesive (E40) or (E41) as follows:

**WARNING**

Adhesives (E40) and (E41) are flammable and toxic. Avoid inhaling. Use only with adequate ventilation. Keep away from heat, sparks, or open flame. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**NOTE**

Adhesive (E40) is preferred. Use adhesive (E41) only if adhesive (E40) is not available.

- a. Mix a tube of prepackaged adhesive (E40). Follow instructions on kit. Wear gloves (E186).
- b. If prepackaged adhesive (E40) is not available, prepare adhesive (E41). Mix 100 parts of resin and 23 parts of hardener by weight. Use trip balance and polyethylene cup (E157). Stir until color is uniform. Use tongue depressor (E424).

**GO TO NEXT PAGE**

**5-67 REPAIR BLADE SPAR ROOT END MINOR DAMAGE (Continued)**

3. Repair damaged area (1) as follows:

**NOTE**

Working life of adhesive mixture is 30 minutes.

- Fill damaged area (1). Use adhesive (E40) or (E41).
- Fair adhesive flush with area (3) around damaged area (1). Use tongue depressor (E424).
- Cut silicone rubber (E318) (4), peel ply (E270) (5), and Teflon-impregnated fabric (E170) (6) 1 inch larger, on all sides, than area (3).
- Cover area (3). Use peel ply (E270.1) (5) and Teflon-impregnated fabric (E 170) (6).
- Place silicone rubber (E318) (4) over Teflon-impregnated fabric (E170) (6). Bend rubber to blade spar contour.
- Press silicone rubber (E318) (4) down. Wrap tape (E388) (7) around blade spar (2) over rubber. Position shot bag (8) over tape.

**CAUTION**

Blade temperature must not exceed 160°F (71°C). Overheating will damage fiberglass.

- Cure repair at 140°F (60°C) to 160°F (71°C) for 2 hours. Use heat lamp. Monitor blade temperature. Use temperature indicating strips (E413).

**NOTE**

If heat lamp is not available, cure at 70° to 80°F (21° to 27°C) for 24 hours. Shot bag can be removed after 12 hours.


- Remove shot bag (8), tape (7), rubber (E318) (4), and Teflon-impregnated fabric (E 170) (6).
- Blend repaired area.** Use abrasive paper (E9).

**INSPECT****FOLLOW-ON MAINTENANCE:**

Refinish blade (Task 5-82)

**END OF TASK**

5-236 Change 14

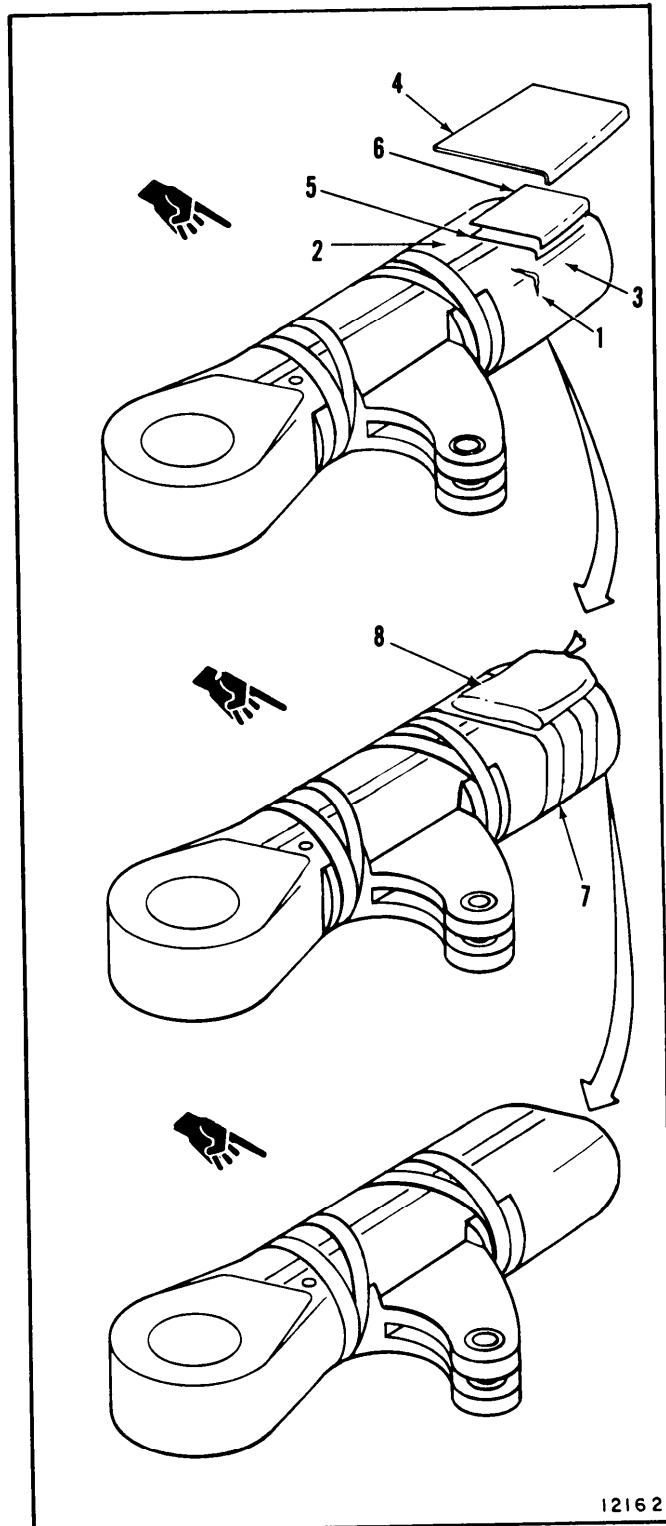

12162

**5-67.1 REPAIR BLADE SPAR ROOT END — MAJOR DAMAGE****5-67.1****INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876  
Scissors  
Vacuum Pump  
Trip Balance, NSN 6670-00-401-7195  
Heat Lamp  
Respirator

**Materials:**

Acetone (E20)  
Gloves (E186)  
Abrasive Paper (E7 and E9)  
Masking Tape (E388)  
Cloth (E120)  
Adhesive (E40, E41, E43 or E47.1)  
Polyethylene Cup (E157)  
Wood Spatula (E424)  
Peel Ply (E270)  
Teflon Impregnated Fabric (E170)  
Rubber Pad (E318)  
Glass Cloth (E132)  
Sealing Tape (E396)  
Polyvinyl Sheet (E284)  
Temperature Indicating Strips (E413)  
Fiberglass Laminate (E168)  
Curing Agent (E158.1)

**Personnel Required:**


Aircraft Structural Repairer  
Inspector

**Equipment Condition:**

Off Helicopter Task

**General Safety Instructions:****WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

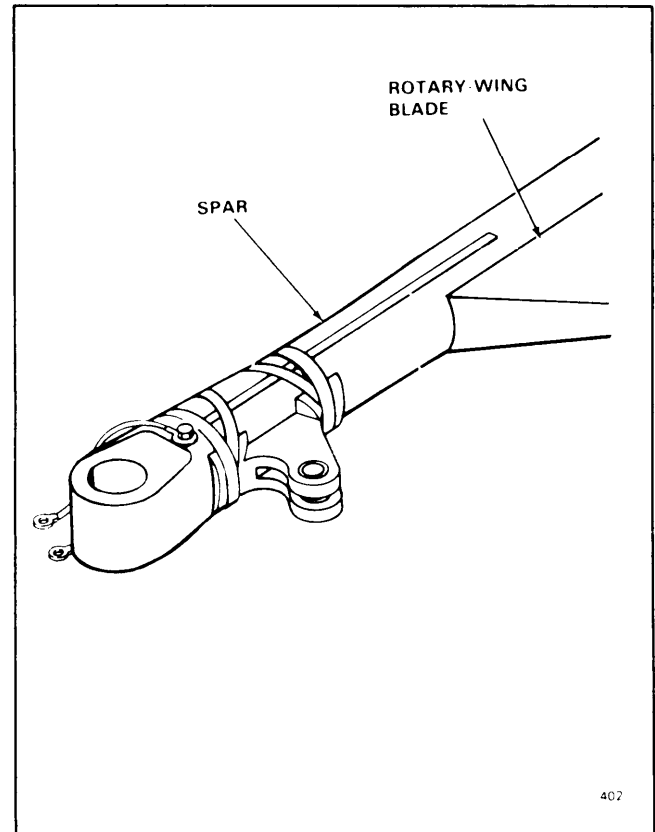**WARNING**

Adhesives (E40, E41, E43, and E47.1) are toxic. They can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**

Adhesive used in the manufacturing of some fiberglass rotor blades contain asbestos. During blade repair, strict adherence to all safety procedures when working with asbestos must be complied with (applies to blade serial number A-1-0001 to 0424 and A-2-0001 to 0429 only).


**GO TO NEXT PAGE**

1. Measure distance from root end (1) of blade (2) to outboard edge of damage area (3). Note distance.
2. Measure size and depth of damage area (3), and proceed as follows:

**WARNING**

If damage is as described in steps a, b, d, or f, repair is not authorized at this maintenance level. Unauthorized repairs can cause loss of helicopter and loss of life.

- a. If distance A is greater than 51 inches, or damage area (3) is greater than 1 square inch, the blade is not reparable at this level of maintenance.
- b. If damage area (3) is within distance B, and is greater than 0.108 inch deep, the blade is not reparable at this level of maintenance.
- c. If damage area (3) is within distance B, and is less than 0.108 inch deep, go to step 3.
- d. If damage area (3) is within distance C, and is greater than 0.090 inch deep, the blade is not reparable at this level of maintenance.
- e. If damage area (3) is within distance C, and is less than 0.090 inch deep, go to step 3.
- f. If damage area (3) is within distance D, and is greater than 0.072 inch, the blade is not reparable at this maintenance level.
- g. If damage area (3) is within distance D, and is less than 0.072 inch, go to step 3.

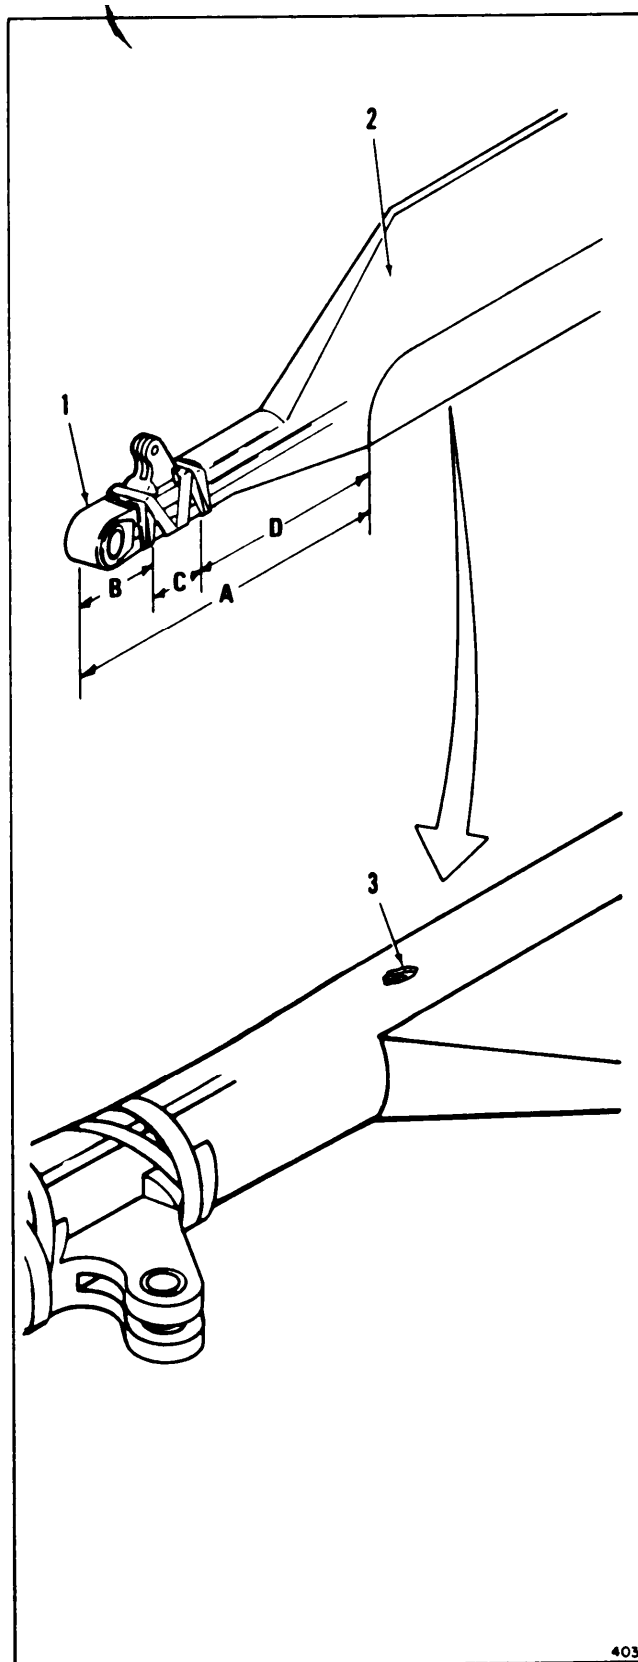


403

**GO TO NEXT PAGE**

## 5-67.1 REPAIR BLADE SPAR ROOT END — MAJOR DAMAGE (Continued)

5-67.1

3. **Remove glass fibers from damage area (3).** Use file. Do not file deeper than damage. Taper sides of damage to 10 times depth.
4. **Check damage area (3)** after loose fibers are removed. If damage is less than 5 plies, and the area does not exceed 10 square inches, go to Task 5-67. If damage is 5 or more plies, check that it does not exceed the limits in step 2.
5. **Remove finish 1 inch around all sides of damage area (3).** Use abrasive paper (E7). If needed, soften finish. Use clean cloth (E120) damp with acetone (E20). Wear gloves (E186).
6. **Clean blade (2) 7 inches around all sides of damage area (3).** Use cloth (E120) damp with acetone (E20). Wipe dry immediately. Use dry cloth (E120).

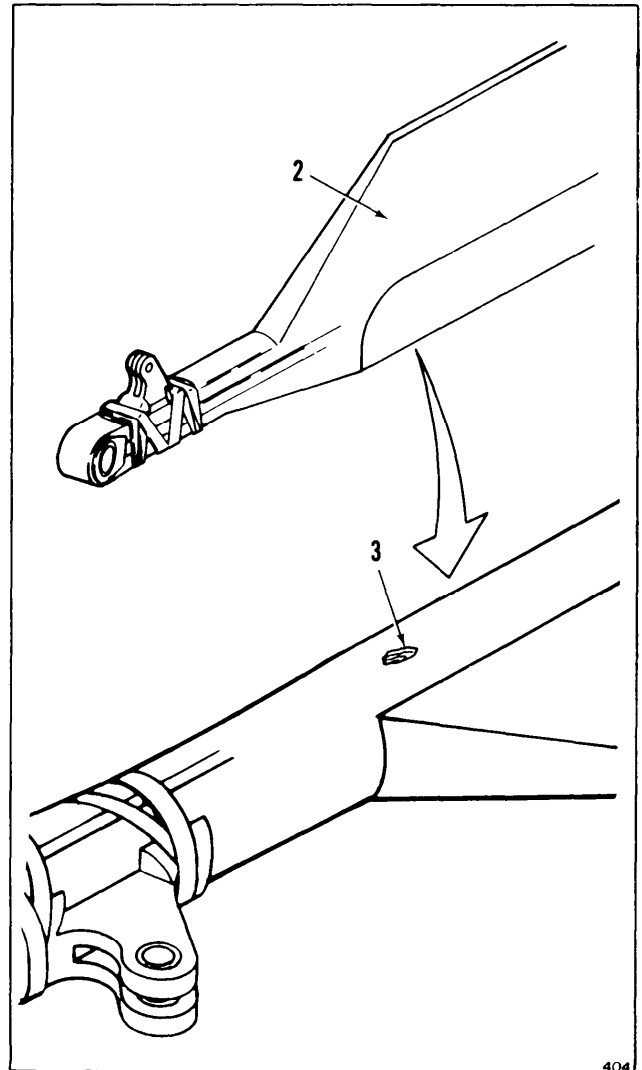

404

**GO TO NEXT PAGE**



## 5-67.1 REPAIR BLADE SPAR ROOT END — MAJOR DAMAGE (Continued)

5-67.1

7. **Cut patches (4)** from glass cloth (E132) to fit inside damage area (3). Size patches to overlap.

### NOTE


Prepackaged adhesive (E40) is preferred. Use adhesive (E41, E43 or E47.1) only if prepackaged kit is not available.

8. **Mix tube of adhesive (E40).** Follow instructions on kit.
9. If adhesive (E40) is not available, prepare adhesive (E41) as follows:
- Weigh 100 parts of resin and 23 parts of hardener. Use trip balance.
  - Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).

### NOTE

Working life of adhesive is 30 minutes.

- 9.1 If adhesive (E43) is used, prepare as follows:
- Weigh 7 parts of gray hardener and 5 parts of white base. Use trip balance.
  - Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).
- 9.2 If adhesive (E47.1) is used, prepare as follows:
- Weigh equal parts of adhesive (E47.1) and hardener (E194.1). Use trip balance.
  - Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).

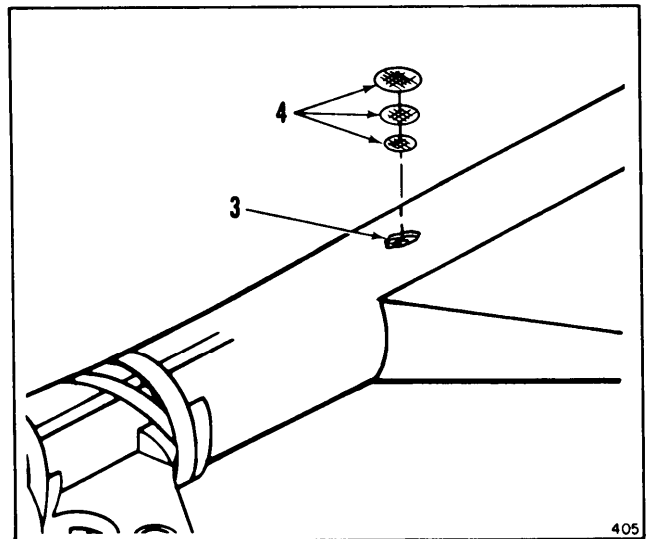

**GO TO NEXT PAGE**




**5-67.1 REPAIR BLADE SPAR ROOT END — MAJOR DAMAGE**  
(Continued)

5-67.1


10. **Apply** a layer of **adhesive** (E40, E41, E43 or E47.1) to damage area (3). **Position smallest patch (4)** at bottom of damage area.

11. **Continue to apply layers of adhesive and patches (4)**. Overlap each patch with larger patch. Be sure patches are soaked with adhesive. Cover the top patch with adhesive.

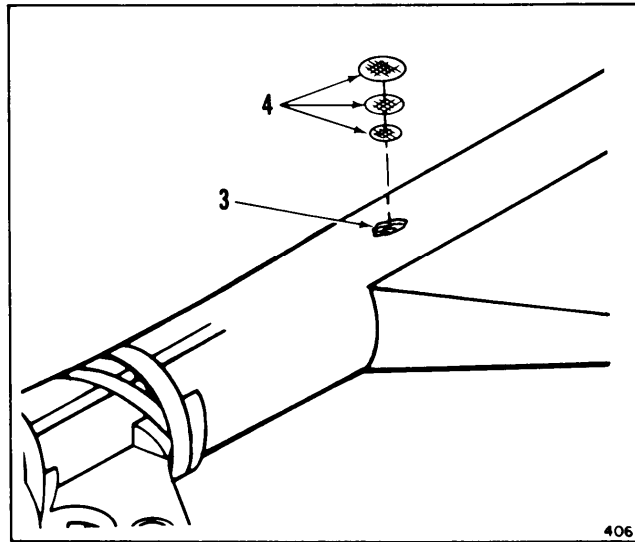

12. **Bond repair area (3)** as follows:

- a. Cover repair with layer of peel ply (E270) (5) and layer of teflon-impregnated fabric (E170) (6). Make layers large enough to overlap patch (3) 1 inch.
- b. Cover teflon-impregnated fabric (E170) (6). Use thick rubber pad (E318) (7).
- c. Cover repair area. Use fiberglass cloth (E132) (8). Cut cloth large enough to cover rubber pad (E318) (7).
- d. Surround cloth (E132) (8) with sealing tape (E396) (9). Keep tape clear of cloth.
- e. Attach tube (10) to vacuum pump hose.
- f. Wrap tube (10). Use two layers of fiberglass cloth (E132) (8). Apply masking tape (E388) (11) over cloth.
- g. Position tube (10) on cloth (E132) (8) covering repair. Wrap tube with sealing tape (E396) (9) where tube crosses sealing tape (9) already applied.
- h. Press tube (10) onto tape (9) to make airtight seal.
- i. Press polyvinyl sheet (E284) (12) smoothly onto tape (9) to make airtight seal.
- j. Start vacuum pump. Check for leaks. Reposition polyvinyl sheet (E284) (12) or add tape (E396) (9) as needed.
- k. Maintain 20 inches Hg vacuum through adhesive cure.

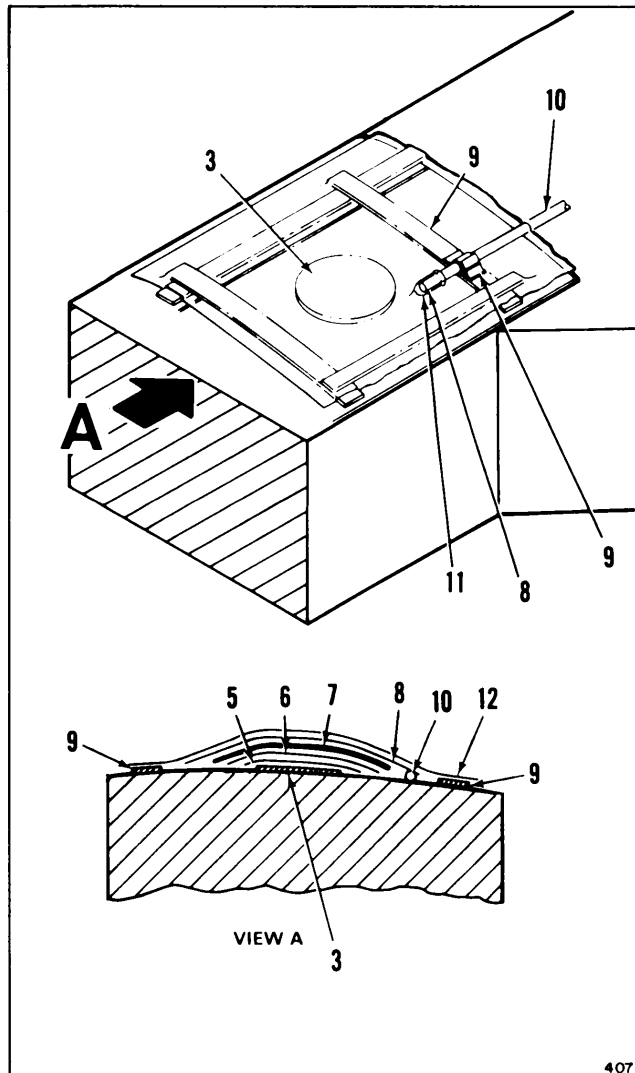

**5-67.1 REPAIR BLADE SPAR ROOT END — MAJOR DAMAGE**  
**(Continued)**

5-67.1

**CAUTION**

Do not exceed 160°F (71°C) at blade surface. Damage to fiberglass can occur.

Cure adhesive at 140° to 160°F (60° to 71°C) 2 hours. Use heat lamp. Monitor temperature. Use temperature indicating strips (E413).

**NOTE**

Serviceable cure can be achieved without heat at 70° to 80°F (21° to 27°C) in 24 hours. Vacuum may be removed after 12 hours.

- m. Turn off vacuum pump.
- n. Remove peel ply (5), fabric (6), rubber (7), fiberglass (8), tape (9), tube (10), and sheet (12).
- o. If squeezeout fairing is not satisfactory, fair patch. Use adhesive (E40, E41, E43 or E47.1). Follow steps 8 or 9 to mix adhesive.

**WARNING**


Harmful adhesive particles can be inhaled if respirator is not worn during sanding.

- 13. Sand the repair as necessary to blend with the surrounding area. Use abrasive paper (E9), Wear a respirator.


**INSPECT**

**FOLLOW-ON MAINTENANCE:**

Refinish repaired area (Task 5-82).

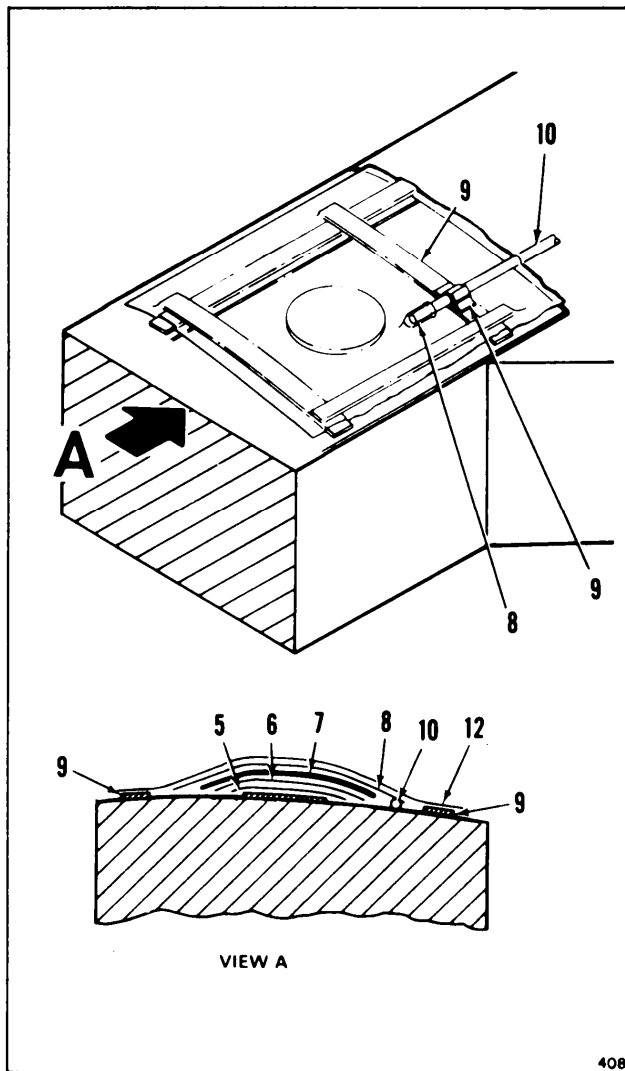

408

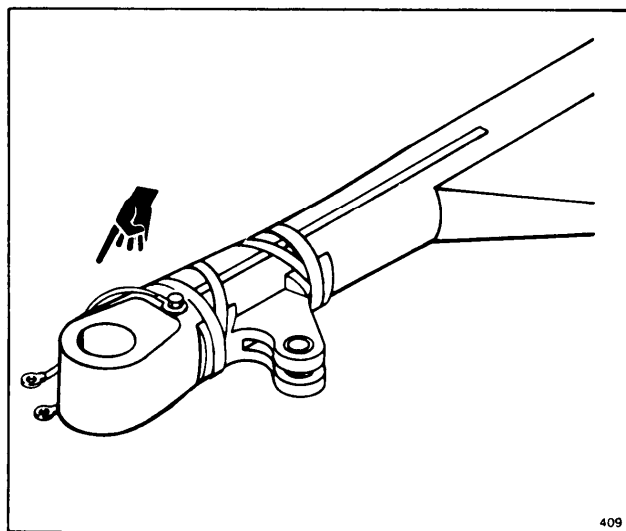

409

**END OF TASK**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Source of Compressed Air  
Trip Balance, NSN 6670-00-401-7195  
Hand Drill

**Materials:**


Marking Pencil (E271)  
Acetone (E20)  
Adhesive (E47.1)  
Curing Agent (E158.1)  
Gloves (E186)  
Hypodermic Syringe (E380)  
Polyethylene Cup (E157)  
Teflon Tape (E399)

**Personnel Required:**

Aircraft Structural Repairer  
Inspector

**Equipment Condition:**

Off Helicopter Task

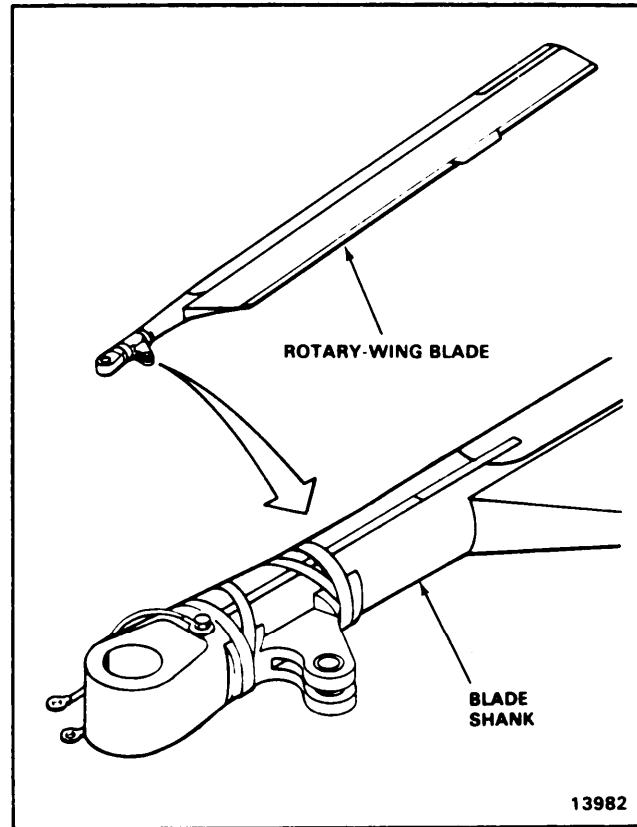

## 5-67.1.1 REPAIR BLADE SHANK VOIDS (Continued)

5-67.1.1

1. **Determine size of void (1).** Use coin tapping (Task 5-63.). Outline void area with a marking pencil (E271).
2. **Drill a hole (2)** through unbonded material at each end of void (1). Do not drill past void. Use a No. 40 drill bit and a hand drill. Set drill depth so that the dimensions noted in the illustration will not be exceeded in the areas shown.
3. Blow air at no more than 20 psig into one hole (2). **Check that air escapes** from the other hole. If not, drill more holes so that air will pass through void (1).
4. **Clean void (1).** Use acetone (E20) from a plastic squeeze bottle (E366). Flush void until acetone runs clear.


**CAUTION**

Exceeding 20 psig may damage blade.

5. Blow clean dry air through void (1) to clear it of acetone. Do not exceed 20 psig.
6. Prepare an adhesive mixture as follows:
  - a. Weigh 2 parts of adhesive (E47.1) and 1 part curing agent (E158.). Use a trip balance.
  - b. Mix in polyethylene cup (EI 57). Use wood spatula (E424).
7. Inject adhesive into void (1) through one hole (2). Use a hypodermic syringe (E380). When void is full, shown by adhesive coming out the other hole, cover all holes. Use tape (E399) (3).
8. Let adhesive cure for 36 hours at 70° to 80°F (21° to 27°C).
9. Remove tape (3).

**FOLLOW-ON MAINTENANCE:**

None

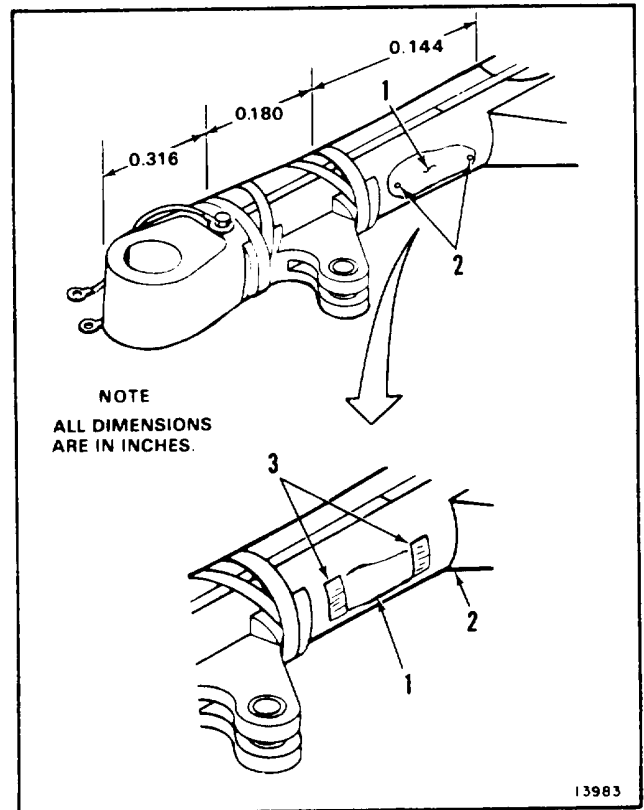

END OF TASK

## 5-67.1.2 ROTARY-WING BLADE SERVICEABILITY INSPECTION

5-67.1.2

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Trip Balance, NSN 6670-00-401-7195  
 Vertical Hinge Pin 114R2172-1  
 Source of Compressed Air

**Materials:**


Acetone (E20)  
 Adhesive (E47.1)  
 Curing Agent (E158.1)  
 Gloves (EI 86)  
 Hypodermic Syringe (E380)  
 Polyethylene Cup (EI 57)  
 Teflon Tape (E399)

**Personnel Required:**

Aircraft Structural Repairer  
 Inspector

**Equipment Condition:**

Off Helicopter Task

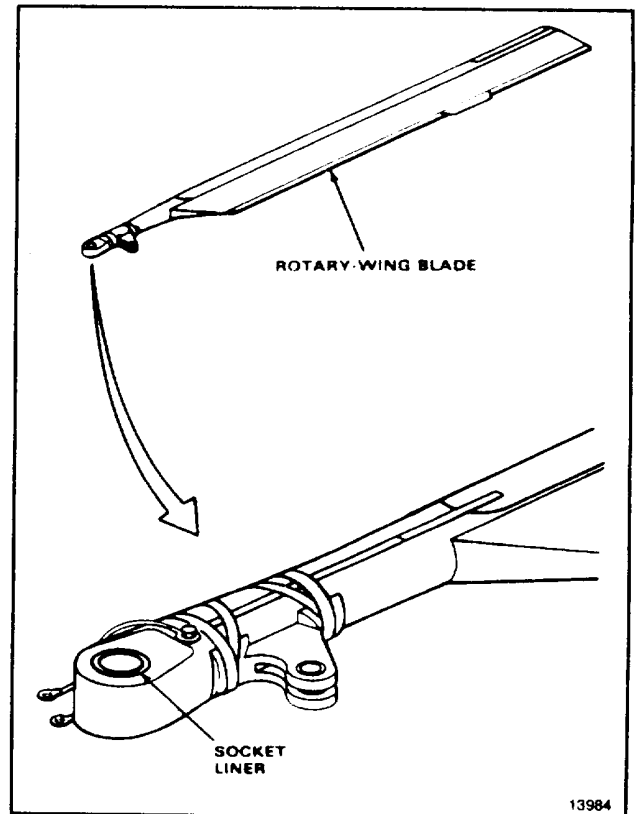
**WARNING**

Asbestos particles will irritate the eyes, lungs, and skin. It can cause cancer and lung disease. Wear goggles, respirator, and protective clothing when working in this area of the blade. Asbestos is present in blade series numbers A-1-0001 to 0424 and A-2-0001 to 0429.

**NOTE**

Repair bond voids only if they extend to edge of liner.

1. Open void (1) at edge of liner (2). Use clean 0.005 inch thick shim stock.
2. Position blade (3) so that open end of void (1) is lower than closed end.

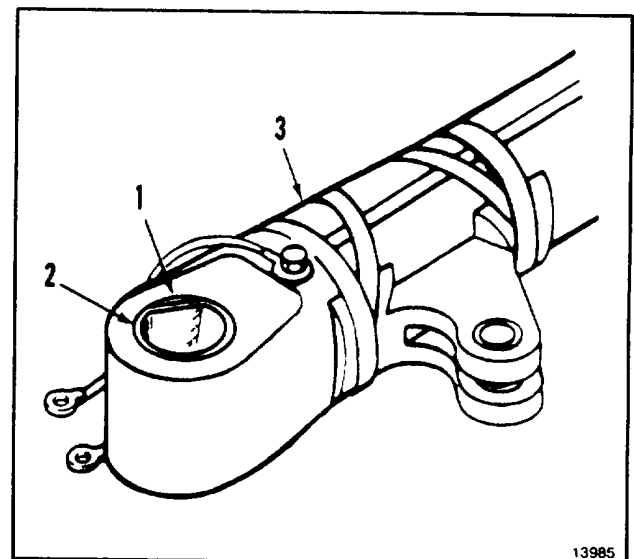

GO TO NEXT PAGE

Change 37 5-236.6.2

**WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

3. **Clean void (1).** Use acetone (E20) from a plastic squeeze bottle (E366). Flush void until acetone runs clear.


**CAUTION**

Exceeding 20 psig may damage blade.

4. **Blow out excessive acetone** with compressed air. Do not exceed 20 psig. Allow to dry for 15 minutes.
5. **Prepare an adhesive mixture as follows:**
  - a. Weigh 2 parts of adhesive (E47.1) and 1 part curing agent (E158.1). Use a trip balance.
  - b. Mix in polyethylene cup (E157). Use wood spatula (E424).
6. **Inject adhesive mixture** into void (1). Use a hypodermic syringe (E380). Fill deepest part of void first to avoid trapping air.
7. **Close void (1).** Press liner (2) against bore of blade (3) by hand. Remove excess adhesive with cloth (E120).
8. Cover area of adhesive squeezeout with Teflon tape (E399). Install vertical pin.
9. Let adhesive cure for 36 hours at 70° to 80°F (21° to 27°C).
10. Remove vertical pin. Remove Teflon tape.

## FOLLOW-ON MAINTENANCE:

None

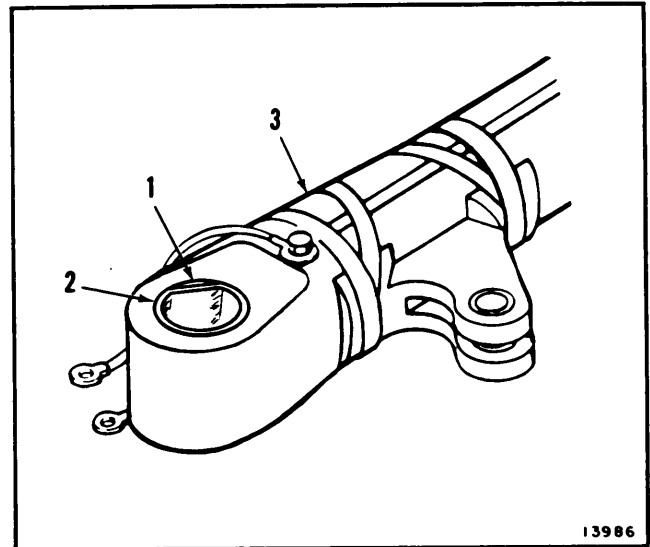

**END OF TASK**

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

- Airframe Repairer Tool Kit,  
NSN 5180-00-323-4876
- Scissors
- Sanding Block
- Pencil Compass
- Vacuum Pump
- Protective Clothing
- Respirator
- Trip Balance, NSN 6670-00-401-7195
- Heat Lamp

**Materials:**


- Wire Mesh (E453)
- Acetone (E20)
- Gloves (E186)
- Abrasive Paper (E6), (E7), (E9)
- Masking Tape (E388)
- Cloth (E120)
- Adhesive (E40 or E41)
- Polyethylene Cup (E157)
- Tongue Depressor (E424)
- Peel Ply (E270)
- Teflon Impregnated Fabric (E170)
- Rubber Pad (E318)
- Glass Cloth (E132)
- Sealing Tape (E396)
- Polyvinyl Sheet (E284)
- Temperature Indicating Strips (E413)
- Fiberglass Laminate (E168 or E168.1)

**Personnel Required:**

- Aircraft Structural Repairer
- Inspector

**Equipment Condition:**

- Off Helicopter Task

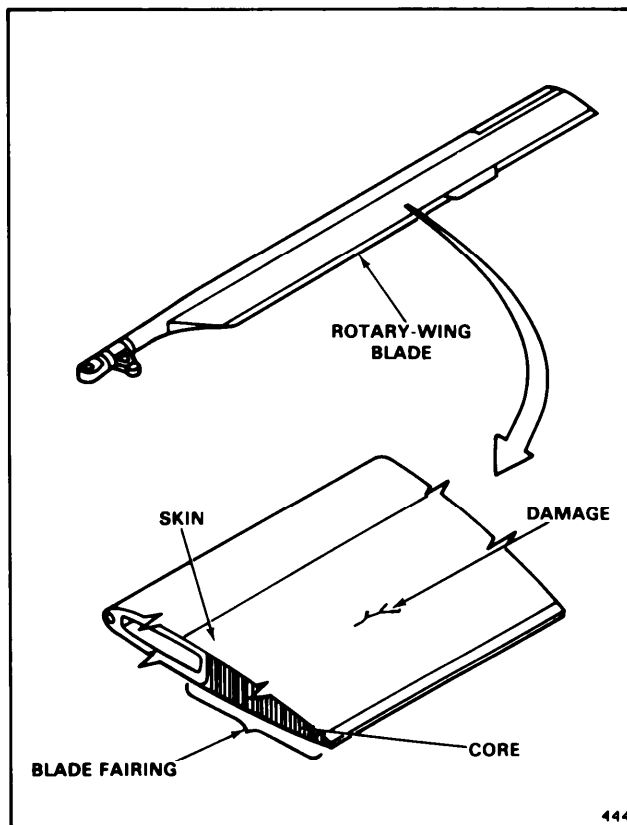

**General Safety Instructions:**

**WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**

Adhesive (E40 or E41) is extremely flammable. It is volatile. It forms harmful vapors and explosive peroxides. Keep away from heat, sparks, or open flame. Avoid inhaling. Use only with adequate ventilation.

**GO TO NEXT PAGE**

**WARNING**


Adhesive used in the manufacturing of some fiberglass rotor blades contain asbestos. During blade repair, strict adherence to all safety procedures when working with asbestos must be complied with (applies to blade serial number A-1-0001 to 1465 and A-2-0001 to 1473 only).

**PREPARE DAMAGE AREA**

1. Check location and extent of damage to skin. Refer to **Fiberglass Skin Damage Repair Limits** figure. Skin must be patched where repairs are allowed. If damage extends into honeycomb core, repair fairing (Tasks 5-68, 5-69, or 5-70)

**NOTE**

Skin patch can overlap blade spar aft of titanium nose cap.

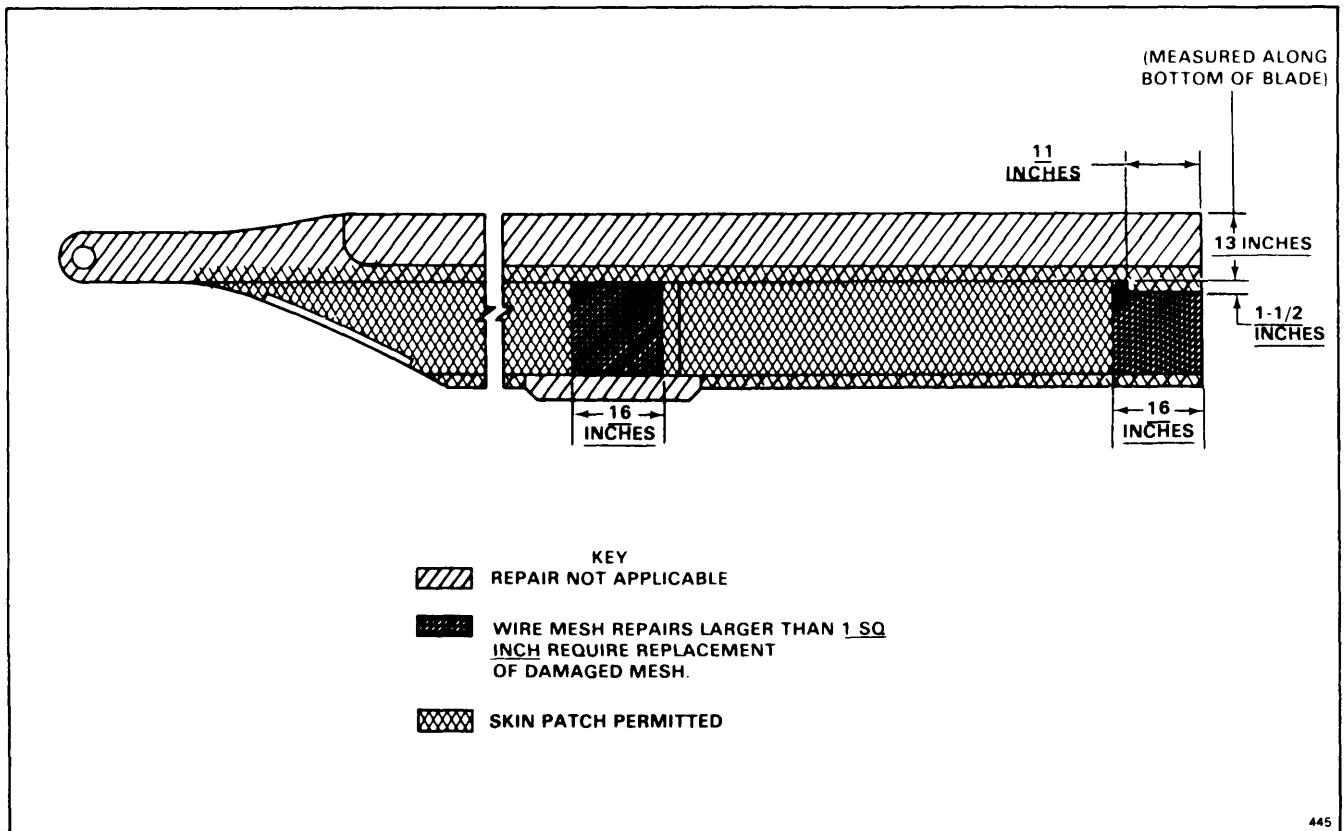




2. Outline damage area (1). Make circle or oblong outline (2).

**CAUTION**


Do not wash contaminants into damage area if acetone (E20) is used to soften finish. Contaminants can prevent satisfactory repair.

3. Remove finish 1 1/2-inches outside of outline (2) around damage. Use sanding block and abrasive paper (E6). Use acetone (E20), if needed, to soften finish. Complete finish removal. Use abrasive paper (E7). Do not sand through wire mesh.
4. If wire mesh diverter (3) must be replaced, expose wire mesh 1 1/2-inches outside of outline (2).

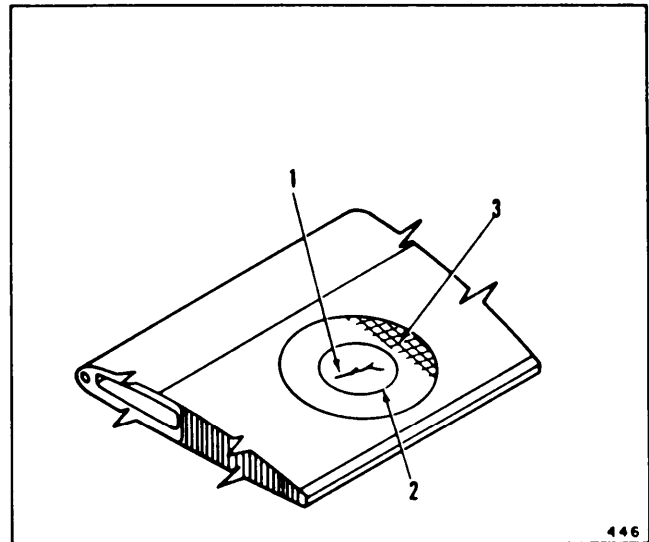

5. Prepare skin patch (4) as follows:

- a. Position piece of fiberglass laminate (E168 or 168.1) over repair area with fibers at 45 degrees to chord.
- b. Draw outline on fiberglass laminate (E168 or 168.1) 1 inch larger than damaged area outline (2). Use pencil compass and straightedge.
- c. Cut skin patch (4). Smooth rough edges. Use abrasive paper (E7).

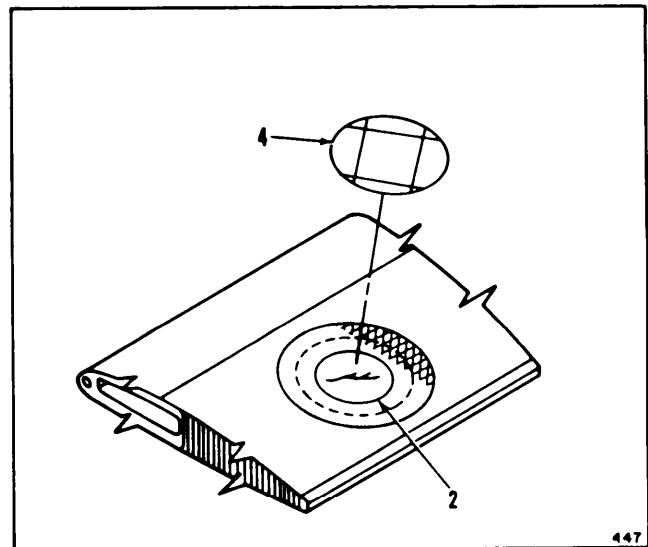


**5-67.2 REPAIR BLADE FAIRING SKIN DAMAGE (Continued)****5-67.2**

- d. Check that patch (4) is 1-inch larger than damaged area outline (2) on all sides. Check that blade surface finish is removed 1/2-inch around patch.
- e. Trace patch outline (5) onto blade skin (6).
- f. Sand both sides of patch (4) to remove surface glaze. Remove peel ply if necessary. Use abrasive paper (E9).

**NOTE**

Patch will not adhere if surface glaze is not removed.

6. Wear gloves (E186). **Clean skin (6) where finish was removed.** Use cloth (E120) damp with acetone (E20). Wipe dry immediately. Use dry cloth (E120). Do not remove gloves.

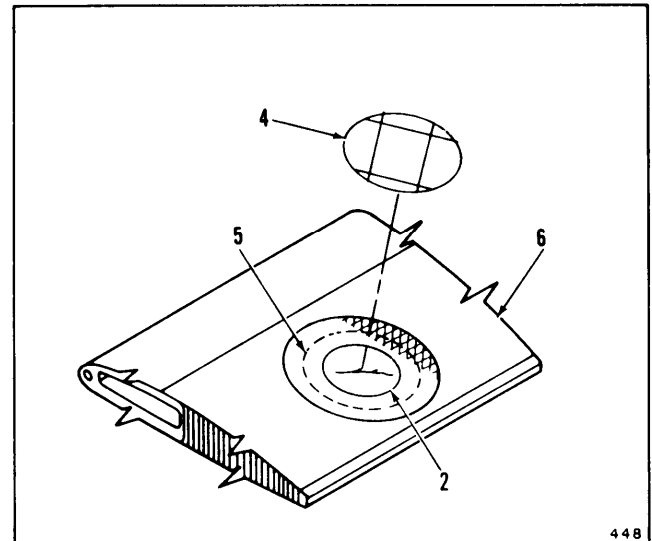**INSPECT****APPLY ADHESIVE****NOTE**

Prepackaged adhesive (E40) is preferred. Use adhesive (E41) only if prepackaged kit is not available.


7. **Mix tube of adhesive (E40).** Follow instructions on kit.
8. If adhesive (E40) is not available, prepare adhesive (E41) as follows:
  - a. Weigh 100 parts of resin and 23 parts of hardener. Use trip balance.
  - b. Mix parts in polyethylene cup (E157) until color is uniform. Use tongue depressor (E424).

**NOTE**


Working life of adhesive is 30 minutes.

**GO TO NEXT PAGE**

9. Apply adhesive (E40 or E41) to outlined area (5) of blade skin (6) and one side of patch (4). If fiberglass laminate (E168.1) is used, apply adhesive so edges of patch curl towards blade. Use stiff brush.
10. Center patch (4) over damage (1), within outline (5). Position patch with fibers at 45 degrees to blade chord. Press onto skin (6). If wire mesh diverter damage is less than 1 square-inch, go to step 12.

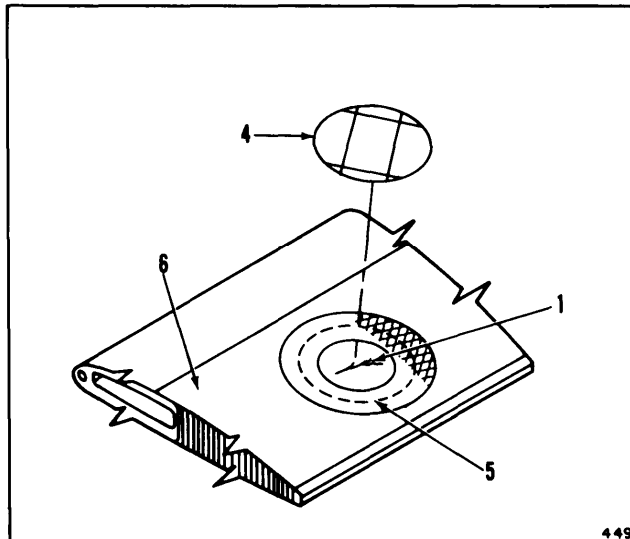


11. If wire mesh diverter damage is more than 1 square-inch, replace mesh (7) as follows:
  - a. Cut piece of mesh (E453) (8) to cover patch (4) and exposed mesh (7).
  - b. Position mesh (E453) (8) over patch (4) and mesh (7). Seat firmly. Brush a thin coat of adhesive over mesh.

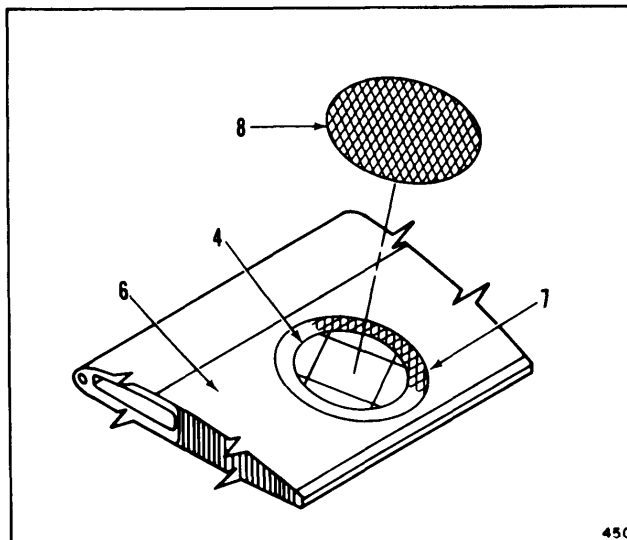

**5-67.2 REPAIR BLADE FAIRING SKIN DAMAGE (Continued)****5-67.2****BOND FAIRING REPAIR**

12. Cover repair with layer of peel ply (E270) (9) and layer of teflon-impregnated fabric (E170) (10). Make layers large enough to overlap patch (4) 1-inch.
13. Cover teflon-impregnated fabric (E170) (10). Use thick rubber pad (E318) (11).
14. Cover repair area. Use fiberglass cloth (E132) (12). Cut cloth large enough to cover rubber pad (E318) (11).
15. Surround cloth (E132) (12) with sealing tape (E396) (13). Keep tape clear of cloth.
16. Attach tube (14) to vacuum pump hose.
17. Wrap tube (14). Use two layers of fiberglass cloth (E132) (15). Apply masking tape (E388) over cloth.
18. Position tube (14) on cloth (E132) (12) covering repair. Wrap tube with sealing tape (E396) (16) where tube crosses sealing tape (13) already applied.
19. Press tube (14) onto tape (16) to make airtight seal.
20. Press polyvinyl sheet (E284) (17) smoothly onto tape (13) to make airtight seal.

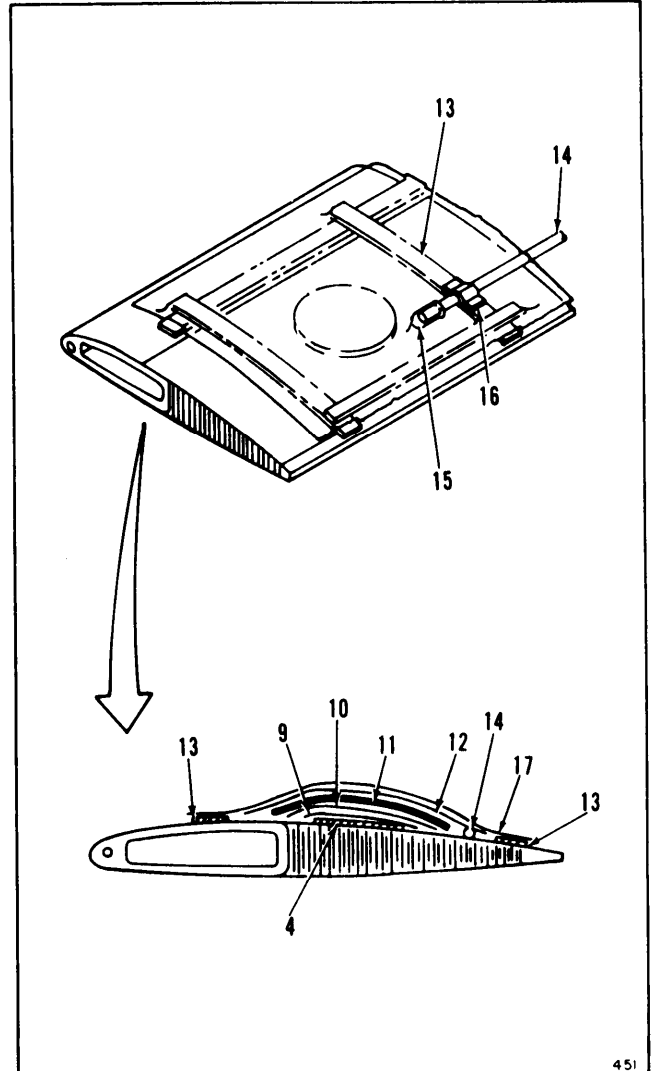**GO TO NEXT PAGE**

**5-67.2 REPAIR BLADE FAIRING SKIN DAMAGE (Continued)**

5-67.2

21. Start vacuum pump Check for leaks. Reposition polyvinyl sheet (E284) (17) or add tape (E396) (13) as needed.
22. Maintain .20 inches Hg Vacuum during adhesive cure.


**CAUTION**

**Do not exceed 160°F (71°C) at blade surface. Damage to fiberglass can occur.**

23. Cure adhesive at 140° to 160°F (60°-to 71°C) 2 hours. Use heat lamp. Monitor temperature. Use temperature Indicating strips (E413).

**NOTE**

Serviceable cure can be achieved without heat at 70° to 80°F (21° to 27°C) In 24 hours. Vacuum may be removed after 12 hours.

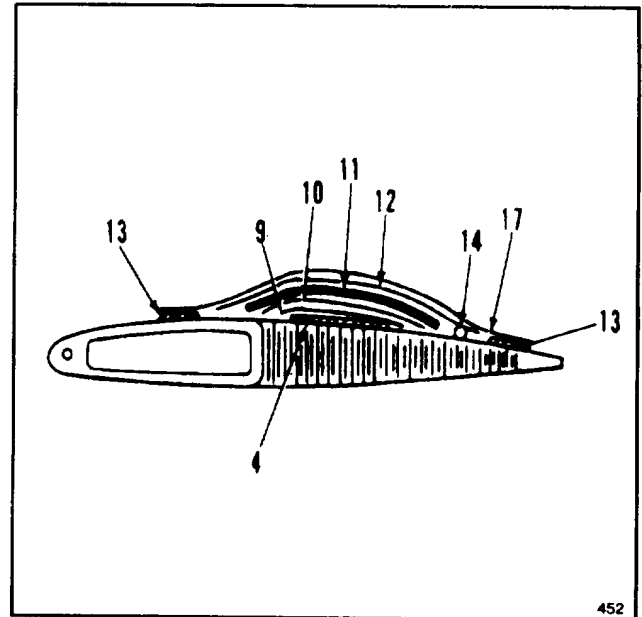

24. Turn off vacuum pump.
25. Remove peel ply (9), fabric (10), rubber (11), fiberglass (12), tape (13), tube (14), and sheet (17).
26. If squeeze out fairing is not satisfactory, fair patch. Use adhesive (E40 or E41) Follow steps 7 or 8 to mix adhesive.

**INSPECT**

27. Find weight of repair Use Adhesive Weight for Single Skin Repairs table Record weight for blade tracking weight adjustment.

**NOTE**

All blade repairs, weight adjustment, painting, or balancing will be recorded on rotor blade DA Form 2408-16, each blade requires a separate form If the rotor blade does not have a DA Form 2408-16, one must be prepared and all actions recorded as example, location of repair, size of repair, weight of repair, and required weight adjustments for track and balance.

**GO TO NEXT PAGE**

Change 37 5-236.12


5-67.2 REPAIR BLADE FAIRING SKIN DAMAGE (Continued)

5-67.2

		ADHESIVE WEIGHT FOR SINGLE SKIN REPAIRS												
		LENGTH (INCHES)												
A	B	2	4	6	8	10	12	14	16	18	20	22	24	26
	WIDTH (INCHES)	2	5 1 .03	8 2 .05	11 3 .06	15 3 .07	18 4 .09	21 5 .10	24 6 .12	28 6 .13	31 7 .15	34 8 .16	37 9 .17	41 9 .19
3			10 2 .06	14 3 .07	18 4 .09	22 5 .10	26 6 .12	30 7 .12	34 8 .15	38 9 .17	42 10 .19	46 11 .20	50 12 .22	54 13 .23
4			11 3 .06	16 4 .08	21 5 .10	26 6 .12	31 7 .14	36 8 .16	41 9 .17	46 10 .19	50 12 .21	55 13 .23	60 14 .25	65 15 .26
5				18 4 .09	24 6 .11	30 7 .13	36 8 .15	41 10 .17	47 11 .20	53 12 .22	59 13 .24	64 15 .26	70 16 .28	76 17 .30
6				20 5 .10	27 6 .13	33 8 .15	40 9 .17	46 11 .19	53 12 .21	59 14 .24	66 15 .26	73 17 .28	79 18 .30	85 20 .33
7					29 7 .14	37 8 .16	44 10 .19	51 12 .21	59 13 .24	66 15 .26	73 17 .28	80 19 .31	88 20 .33	95 22 .36
8					32 7 .15	40 9 .17	48 11 .20	56 13 .22	64 15 .25	72 17 .28	80 19 .31	89 20 .33	97 22 .36	105 24 .39
9						43 10 .19	52 12 .21	61 14 .24	70 16 .27	79 18 .30	88 20 .33	97 22 .36	106 24 .39	115 26 .42
10						46 11 .20	56 13 .23	66 15 .29	76 16 .34	85 20 .32	95 22 .35	105 24 .39	115 26 .42	124 29 .45
11							59 14 .24	70 16 .28	80 19 .31	91 21 .34	102 23 .38	112 26 .41	123 28 .44	133 31 .48
12							63 14 .26	74 17 .29	85 20 .33	97 22 .36	108 25 .40	120 27 .43	131 30 .47	142 33 .51
13								78 18 .31	90 21 .34	102 24 .38	115 26 .42	127 29 .46	139 32 .50	151 35 .53
14								82 18 .31	95 22 .36	108 25 .40	121 28 .44	134 31 .48	147 34 .52	160 37 .56
15									99 23 .38	113 26 .42	127 29 .46	141 32 .50	154 36 .54	168 39 .59

**EXAMPLE:**

78 - WEIGHT OF BASE IN GRAMS  
 18 - WEIGHT OF HARDENER IN GRAMS  
 31 - TOTAL WEIGHT OF REPAIR IN POUNDS

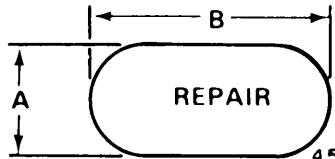

FOLLOW-ON MAINTENANCE:

Refinish repaired area (Task 5-82).

Adjust blade balance weights (Task 5-82.1).

END OF TASK

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Airframe Repairer's Tool Kit,

NSN 5180-00-323-4876

Scissors

Sanding Block

Vacuum Pump

Protective Clothing

Respirator

Trip Balance, NSN 6670-00-410-7195

Heat Lamp

**Materials:**

Acetone (E20)

Gloves (E186)

Abrasive Paper (E6), (E7), (E9)

Template Paper (E263)

Masking Tape (E388)

Teflon Tape (E399)

Aluminum (E70)

Cloth (E120)

Adhesive (E40, E41, E43 or E47.1)

Polyethylene Cup (E157)

Wood Spatula (E424)

Peel Ply (E270)

Teflon Impregnated Fabric (E170)

Rubber Pad (E318)

Glass Cloth (E132)

Sealing Tape (E396)

Polyvinyl Sheet (E284)

Temperature Indicating Strips (E413)

Curing Agent E158.1 (used with adhesive (E47.1))


**Personnel Required:**

Aircraft Structural Repairer

Inspector

**Equipment Condition:**

Off Helicopter Task

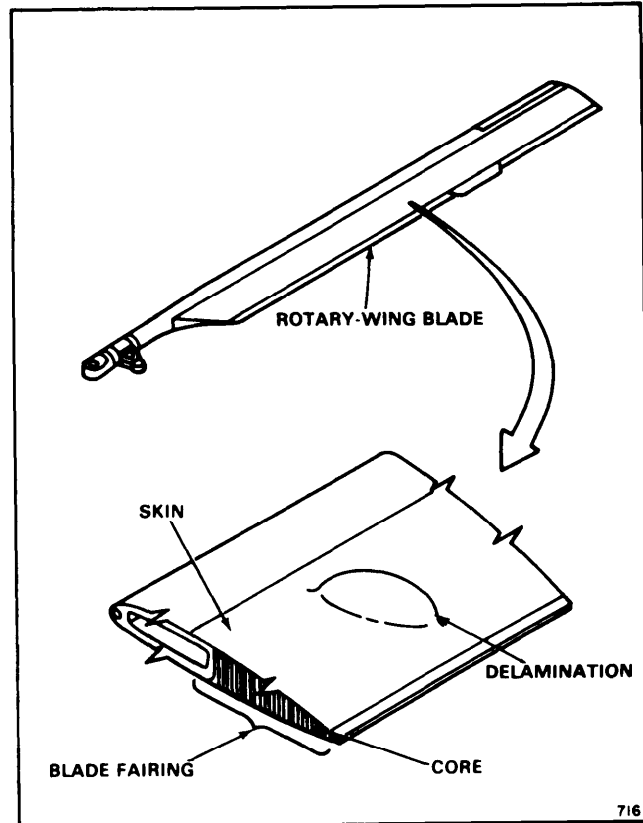


716

**WARNING**

Adhesive used in the manufacturing of some fiberglass rotor blades contain asbestos. During blade repair, strict adherence to all safety procedures when working with asbestos must be complied with (applies to blade serial number A-1-0001 to 1465 and A-241001 to 1473 only).

**PREPARE DAMAGE AREA**

1. Check location and extent of delamination of skin. Refer to **Fiberglass Skin Damage Repair Limits** figure. Skin must be repaired where repairs are allowed.

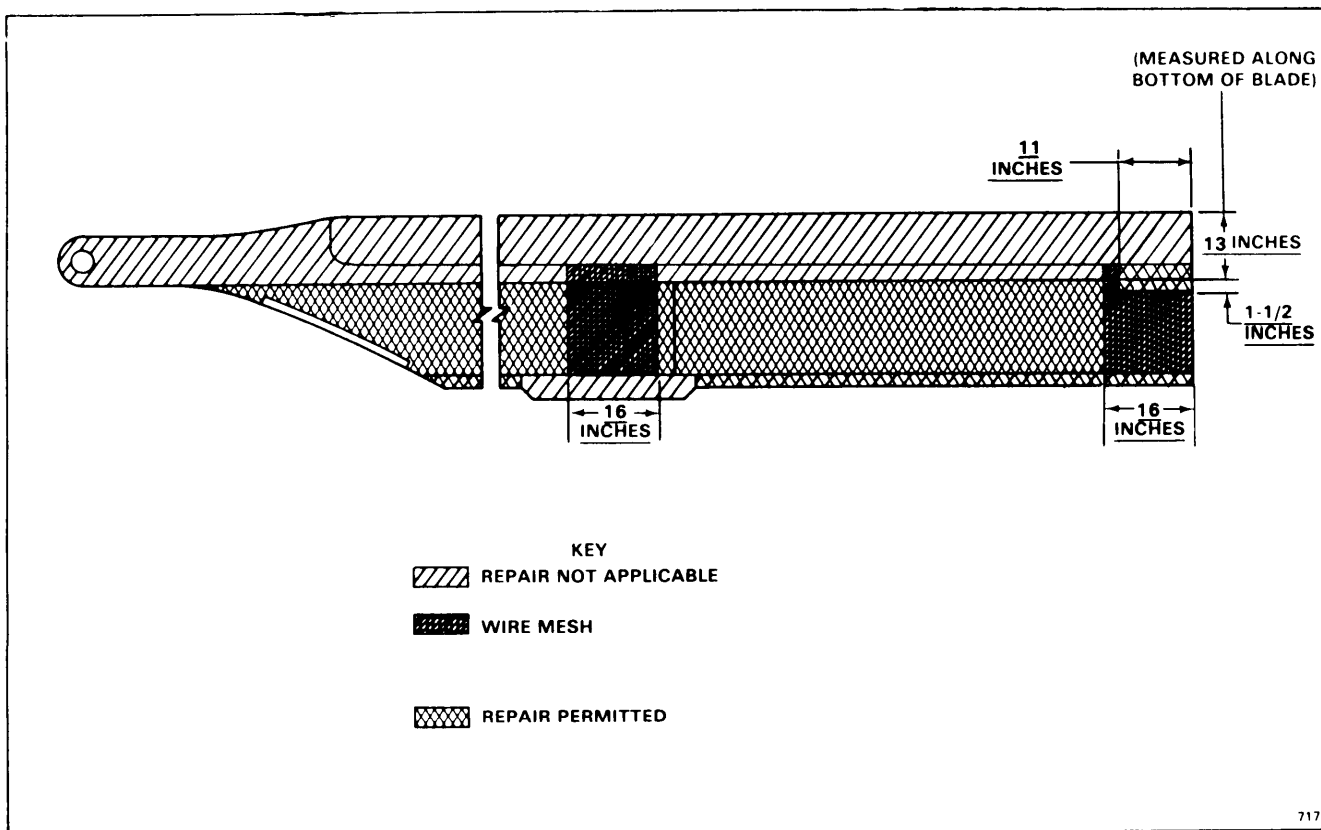




**5-67.3 REPAIR BLADE FAIRING SKIN DELAMINATION (Continued) 5-67.3****WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**NOTE**

Do not soak blade with acetone.

2. Wear gloves (E186). Clean delaminated area (1). Use cloth (E120) damp with acetone (E20). Wipe dry immediately. Use dry cloth (E120). Do not remove gloves.
3. Carefully make cut (2) through delaminated layers of skin (1) so that plies can be separated. Make cut parallel to outer ply fibers.
4. Separate plies enough to allow adhesive to be worked between them.

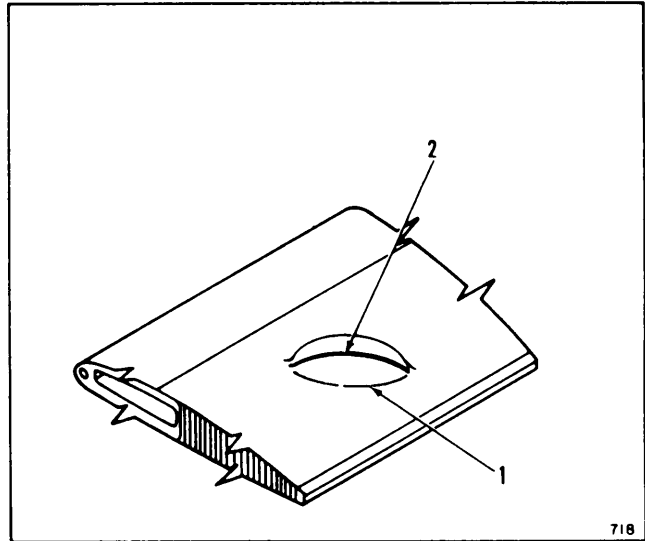

**GO TO NEXT PAGE**


5-236.16 Change 2

**5-67.3 REPAIR BLADE FAIRING SKIN DELAMINATION (Continued) 5-67.3****APPLY ADHESIVE****WARNING**

Adhesive (E40 or E41) is extremely flammable. It is volatile. It forms harmful vapors and explosive peroxides. Keep away from heat, sparks, or open flame. Avoid inhaling. Use only with adequate ventilation.

**NOTE**

Prepackaged adhesive (E40) is preferred. Use adhesives (E41, E43 or E47.1) only if prepackaged kit is not available.

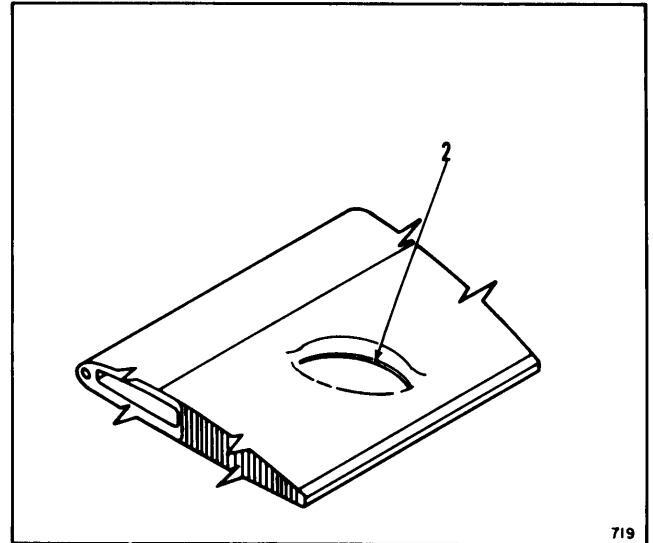

719

5. **Mix tube of adhesive (E40).** Follow instructions on kit.
6. If adhesive (E40) is not available, prepare adhesive (E41) as follows:
  - a. Weigh 100 parts of resin and 23 parts of hardener. Use trip balance.
  - b. Mix parts in polyethylene cup (E157) until color is uniform. Use tongue depressor (E424).
7. If adhesive (E43) is used, prepare as follows:
  - a. Weigh 7 parts of gray hardener and 5 parts of white base. Use trip balance:
  - b. Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424)
8. If adhesive (E47.1) is used, prepare as follows:
  - a. Weigh equal parts of adhesive (E47.1) and curing agent (E 158.1). Use trip balance.
  - b. Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).

**NOTE**


Working life of adhesive is 30 minutes.

9. Work adhesive (E40, E41, E43 or E47.1) into separated plies on each side of cut (2). Use a length of clean shim stock.

**GO TO NEXT PAGE**

**BOND DELAMINATION REPAIR**

10. Cover repair with layer of peel ply (E270) (3) and layer of teflon-impregnated fabric (E170) (4). Make layers large enough to overlap delaminated area (1) 1-inch.
11. Cover teflon-impregnated fabric (E170) (4). Use thick rubber pad (E318) (5).
12. Cover repair area. Use fiberglass cloth (E132) (6). Cut cloth large enough to cover rubber pad (E318) (5).
13. Surround cloth (E132) (6) with sealing tape (E396) (7). Keep tape clear of cloth.
14. Attach tube (8) to vacuum pump hose.
15. Wrap tube (8). Use two layers of fiberglass cloth (E132) (9). Apply masking tape (E388) over cloth.
16. Position tube (8) on cloth (E132) (6) covering repair. Wrap tube with sealing tape (E396) (10) where tube crosses sealing tape (7) already applied.
17. Press tube (8) onto tape (10) to make airtight seal.
18. Press polyvinyl sheet (E284) (11) smoothly onto tape (7) to make airtight seal.

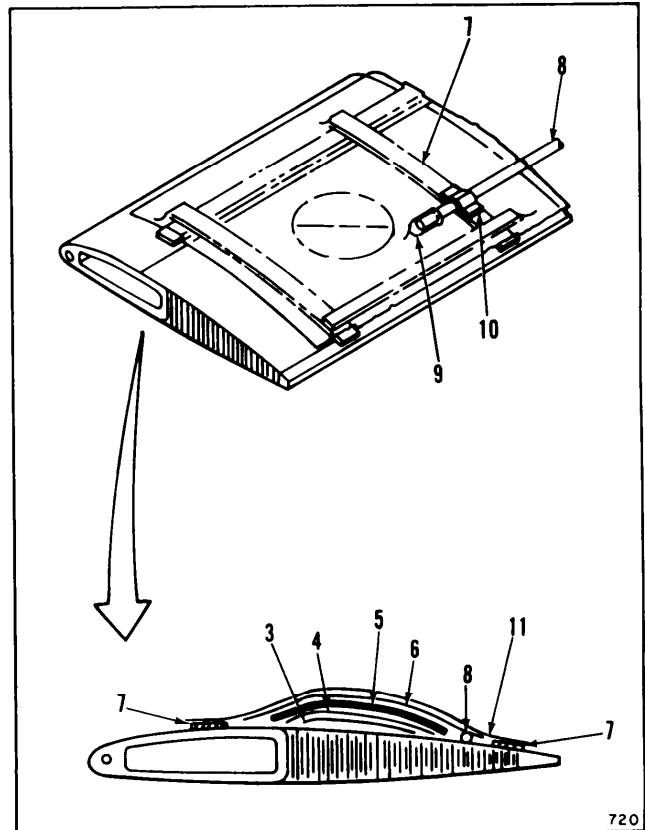

720

**5-67.3 REPAIR BLADE FAIRING SKIN DELAMINATION (Continued) 5-67.3**

- 19. Start vacuum pump. Check for leaks. Reposition polyvinyl sheet (E284) (11) or add tape (E396) (7) as needed.
- 20. Maintain 20 inches Hg. vacuum through adhesive cure.

**CAUTION**

Do not exceed 160°F (71°C) at blade surface. Damage to fiberglass can occur.

- 21. Cure adhesive at 150° to 160°F (66° to 71°C) 2 hours. Use heat lamp. Monitor temperature. Use temperature indicating strips (E413).

**NOTE**

Serviceable cure can be achieved without heat at 70° to 80°F (21 to 27°C) in 24 hours. Vacuum may be removed after 12 hours.

- 22. Turn off vacuum pump.
- 23. Remove peel ply (3), fabric (4), rubber (5), fiberglass (6), tape (7), tube (8), and sheet (11).

**WARNING**


Harmful particles can be inhaled if respirator is not worn while sanding.

- 24. Sand adhesive squeeze out from cut (2) to blend with surrounding area. Use abrasive paper (E9). Wear a respirator.


**INSPECT**

**FOLLOW-ON MAINTENANCE:**

Refinish repaired area (Task 5-82).

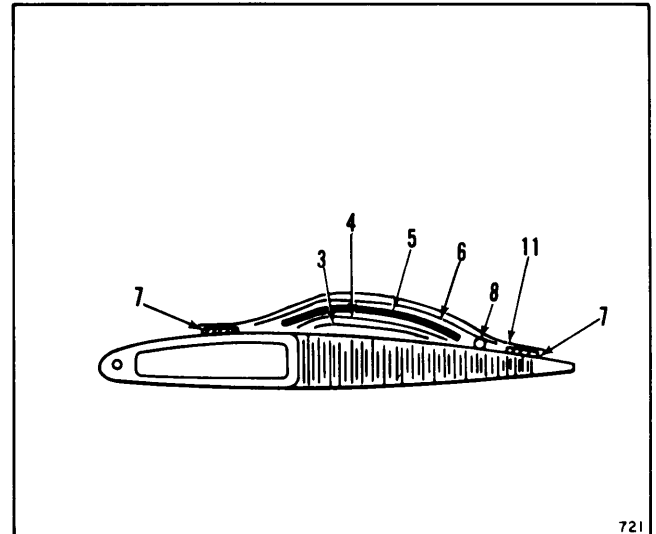

721

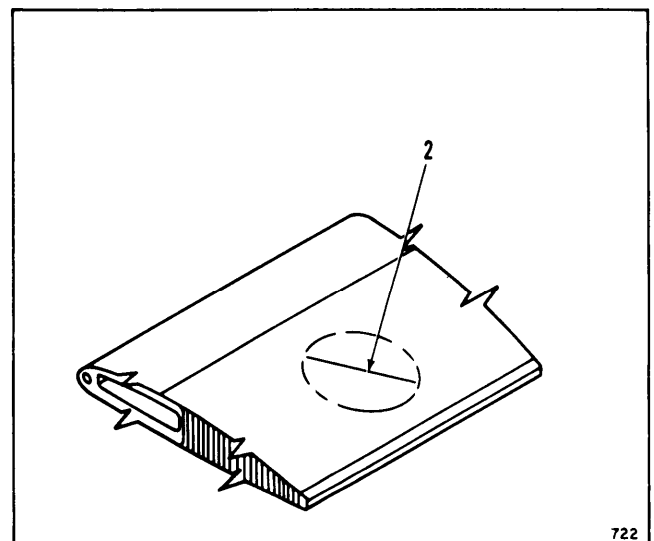

722

**END OF TASK**



**5-68 REPAIR BLADE FAIRING - SINGLE SKIN FULL DEPTH**

5-68

**INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Airframe Repairer's Tool Kit,  
 NSN 5180-00-323-4876  
 Scissors  
 Sanding Block  
 Pencil Compass  
 Router  
 Router Bit, 4-Flutes, A2154108  
 Vacuum Cleaner  
 Hole Saw  
 Vacuum Pump  
 Protective Clothing  
 Respirator  
 Trip Balance, NSN 6670-00-401-7195  
 Heat Lamp

**Materials:**

Wire Mesh (E453)  
 Acetone (E20)  
 Gloves (EI 86)  
 Abrasive Paper (E6, E7, E9)  
 Template Paper (E263)  
 Masking Tape (E388)  
 Teflon Tape (E399)  
 Aluminum (E70)  
 Cloth (EI 20)  
 Adhesive (E40, E41, or E43)  
 Core Material (E145 or E146)  
 Polyethylene Cup (E157)  
 Wood Spatula (E424)  
 Peel Ply (E270)  
 Teflon Impregnated Fabric (E170)  
 Rubber Pad (E318)  
 Glass Cloth (E132)  
 Sealing Tape (E396)  
 Polyvinyl Sheet (E284)  
 Temperature Indicating Strips (E413)  
 Fiberglass Laminate (EI 68 or E168.1)

**Personnel Required:**


Aircraft Structural Repairer  
 Inspector

**Reference:**

Task 5-70

**Equipment Condition:**

Off Helicopter Task

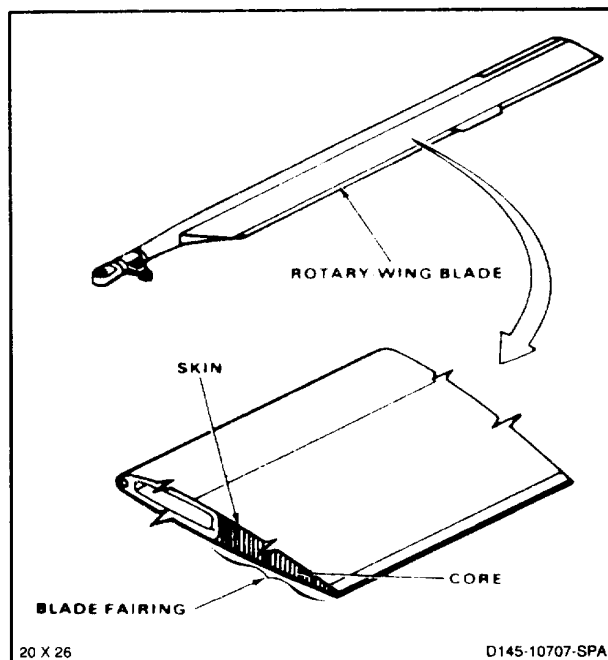**General Safety Instructions:****WARNING**


- Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.
- Adhesive (E40 or E41) is extremely flammable. It is volatile. It forms harmful vapors and explosive peroxides. Keep away from heat, sparks, or open flame. Avoid inhaling. Use only with adequate ventilation.
- Adhesive used in the manufacturing of some fiberglass rotor blades contain asbestos. During blade repair, strict adherence to all safety procedures when working with asbestos must be complied with (applies to blade serial numbers A-1-0001 to 1465 and A-2-001 to 1473 only).

**GO TO NEXT PAGE**

5-237 Change 37

**PREPARE DAMAGE AREA**


1. Check location and extent of damage to one skin and full depth of core. Refer to **Fiberglass Skin Damage Repair Limits figure**. Skin and core below skin must be replaced where repairs are allowed.

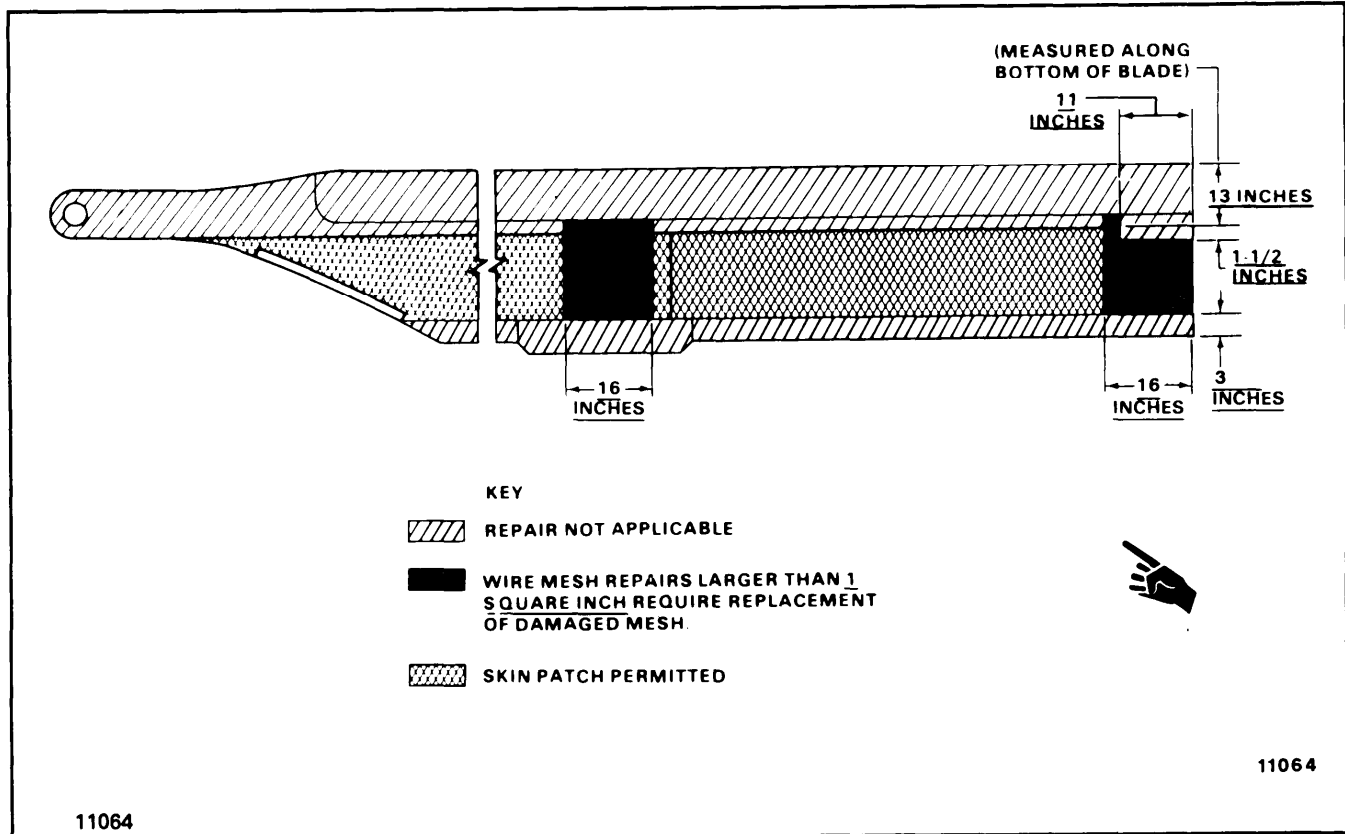

2. Outline damage area (1). Make circle or oblong outline (2). Damage removal area shall have no corners.

**CAUTION**

Do not wash contaminants into damage area if acetone (E20) is used to soften finish. Contaminants can prevent satisfaction repair.

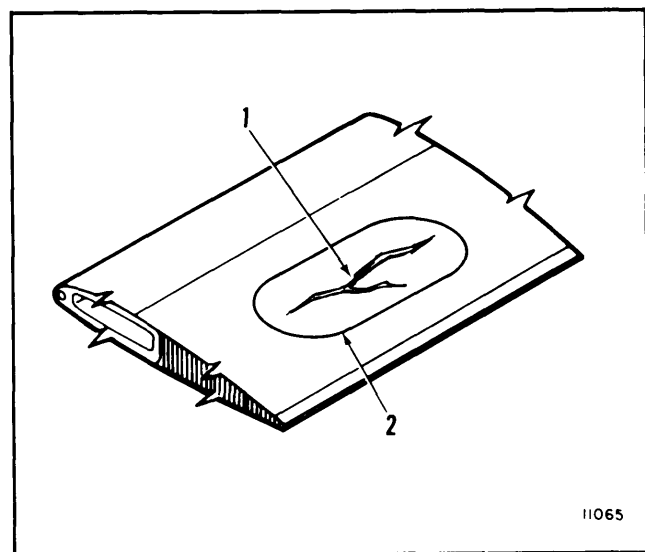

## 5-68 REPAIR BLADE FAIRING—SINGLE SKIN FULL DEPTH (Continued)

3. Remove finish around damage area for a distance of at least 1-1/2 inches. Use sanding block and abrasive paper (E6). Use acetone (E20), if needed to soften finish. Complete finish removal with abrasive paper (E7). Do not sand through wire mesh (3).
4. If wire mesh diverter (3) must be replaced, expose wire mesh 1-1/2 inches outside of damage area.
5. Draw outline (4) around area to be removed. Use pencil compass and straightedge. If damage area (1) will not support compass point, cover area. Use template paper (E263) and masking tape (E388).
6. If router is used to remove damaged skin, proceed as follows:

### NOTE

If router is not available, go to step 7 or 8 for alternate methods.

- a. Draw line (5) around outline (4).

Space the outer line so router base (6) will follow it while router bit (7) follows outline (4). Use pencil compass and straightedge. If damage area (1) will not support compass point, cover area. Use template paper (E263) and masking tape (E388). Remove paper and tape.

### NOTE


If router base diameter is 6 inches, outer line (5) should be 2-3/4 inches outside outline (4) when 1/2 inch router bit is used.

- b. Install router bit (7). Set depth to about 0.020 inch.

### WARNING

**Wear goggles, respirator, and protective clothing when using router. Fiberglass particles will irritate eyes, lungs, and skin.**

- c. Start router (8). Keep router under control. Use both hands.

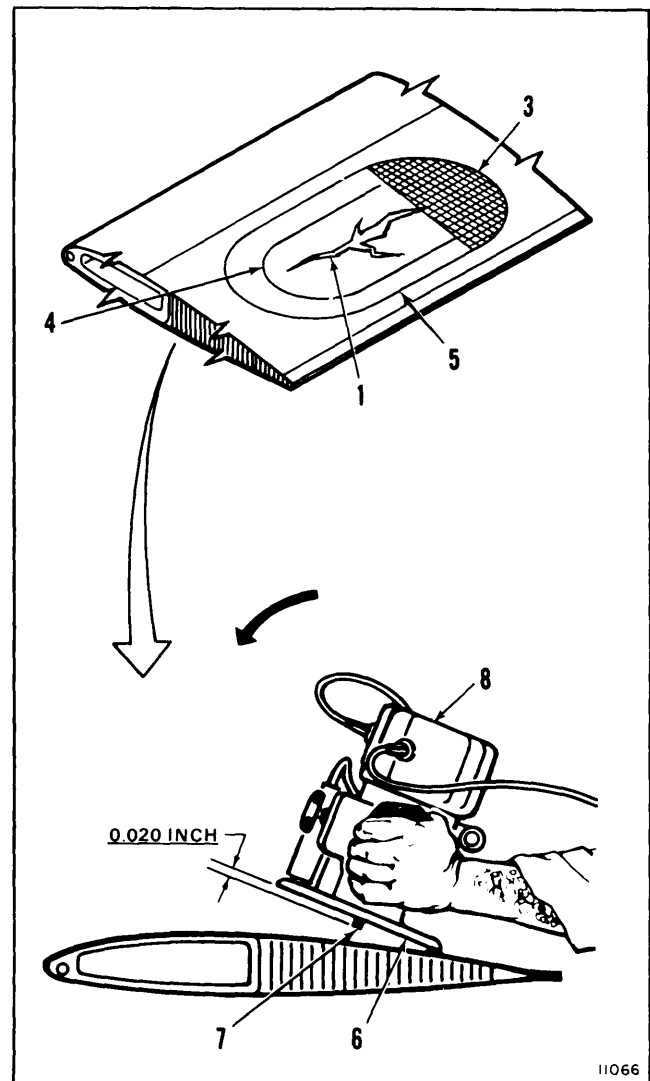

GO TO NEXT PAGE



- d. Rest edge of router base (6) on router guide line (5). Keep bit (7) above blade skin (9).
- e. Slowly lower bit (7) onto blade skin (9). Keep edge of router base (6) on guide line (5). Move router (8) counterclockwise.
- f. Complete cut and move router (8) to center of damage area (1). Turn router off and remove it.

**7. If hole saw is used to remove damaged skin, proceed as follows:**

- a. Use hole saw with center drill that does not extend more than 1/4 inch beyond saw. Position hole saw on guide line (4). Cut only deep enough to go through skin (9). Hold saw lightly against skin and turn slowly. Use wrench.



**8. If knife is used to remove damaged skin, make a series of punctures along guide line until damaged skin is separated.**

- 9. **Peel off cut-out section of skin (9).** Use pliers and chisel. Peel from center outward. Do not pry against undamaged skin.

**CAUTION**


Do not cut or score opposite skin when removing damaged core. If opposite skin is damaged, a double skin repair must be done (Task 5-70).

- 10. **Cut through core (10) to opposite skin (9).** Use pen knife with blunt point. Cut only deep enough to separate damaged core. If opposite skin is damaged, make a double skin repair (Task 5-70).
- 11. **Remove damaged core (10).** Use pliers and chisel. Avoid damage to skin.
- 12. **Sand bottom skin (9)** where core (10) was removed. Use abrasive paper (E7).

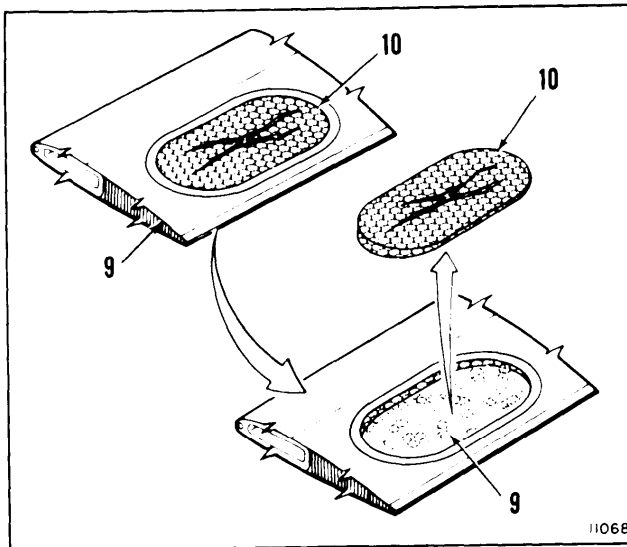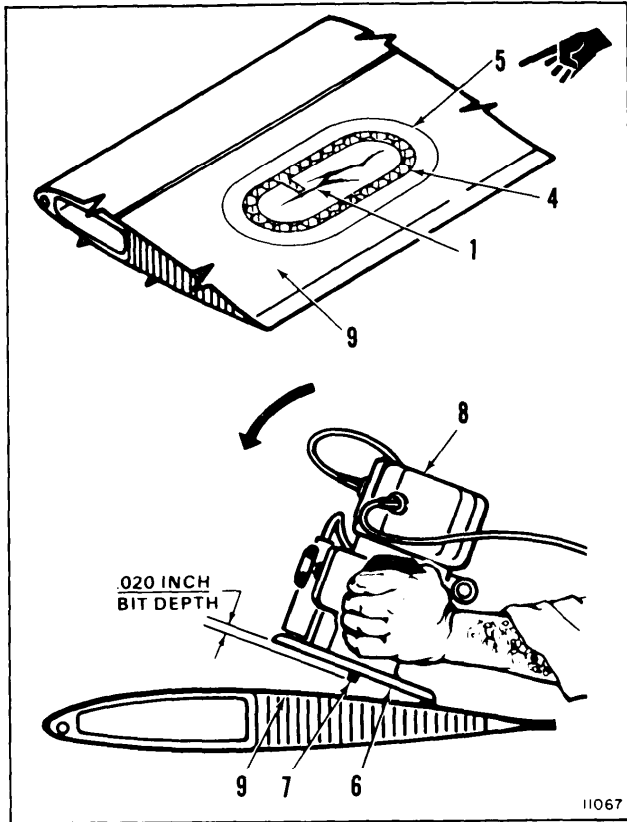

**PREPARE REPAIR MATERIALS**

13. Use core material (E145) in 3 pound density repair area. Use core material (E146) in 2 pound density repair area. Refer to **Fiberglass Blade Skin and Core Damage Repair Limits** figure.

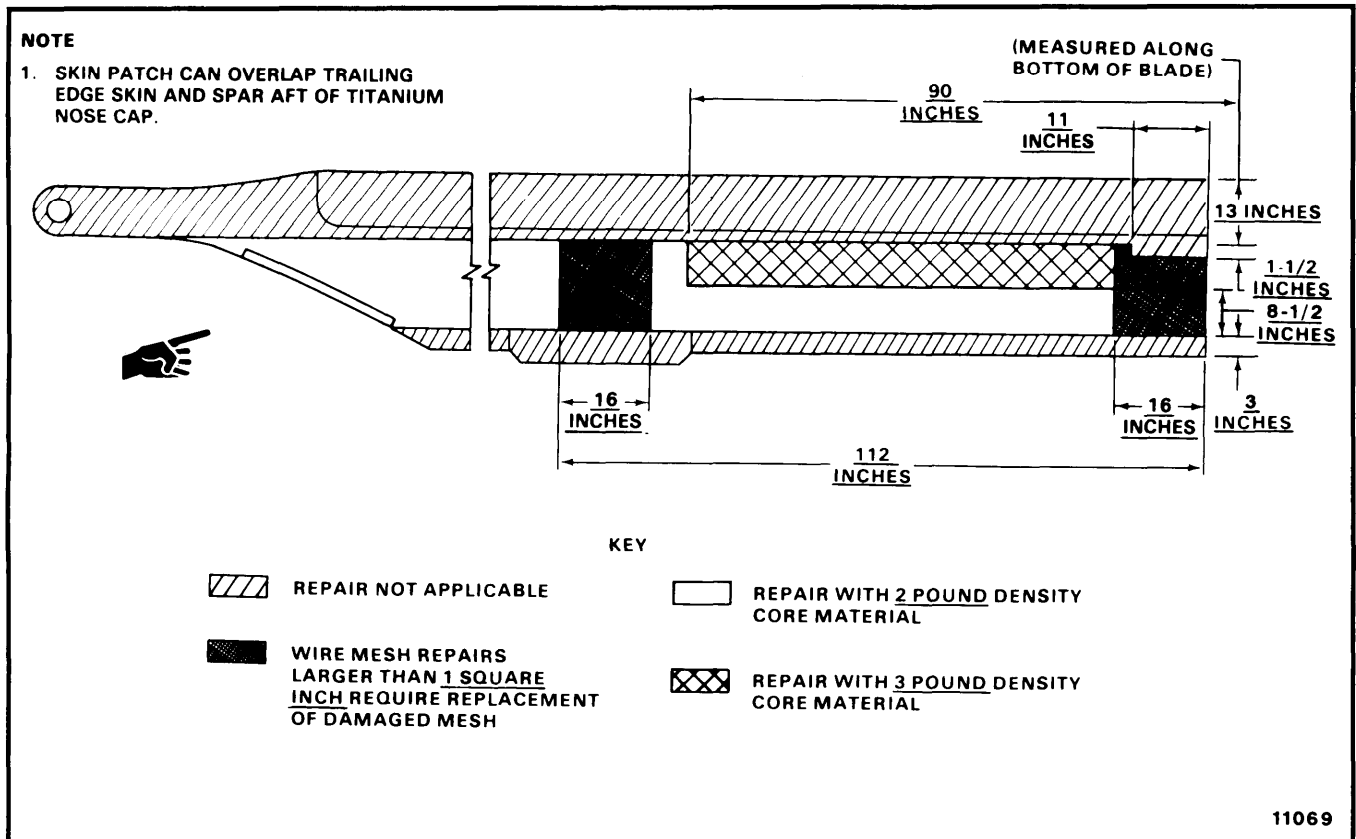


(Continued)

14. position core material (E145 or E146) (11) on blade (12) next to cutout (13). Locate trailing edge (14) of core material 3 inches forward of blade trailing edge (15).
15. Apply masking tape (E388) (16) to cover area on core material (E145 or E146) (11) slightly larger than cutout area.
16. Draw outline (17) on tape (E388) (16) in shape of cutout (13) and 1/8 inch larger.


**NOTE**

Repair plug must have same contour as blade and be slightly larger than cutout.

17. Cut core material (E145 or E146) (11) on tape outline (17). Use knife. Remove tape (E388) (16).
18. Position core (11) in cutout (13). Check that core projects above skin (9) at all points.
19. Apply teflon tape (E399) (18) around cutout (13).
20. Sand core (11) flush with tape (E399) (18). Use sanding block about 2 inches wide and long enough to span length of repair, and abrasive paper (E6). Use spanwise strokes. Remove tape.
21. Matchmark core (11) and skin (9). Remove core.

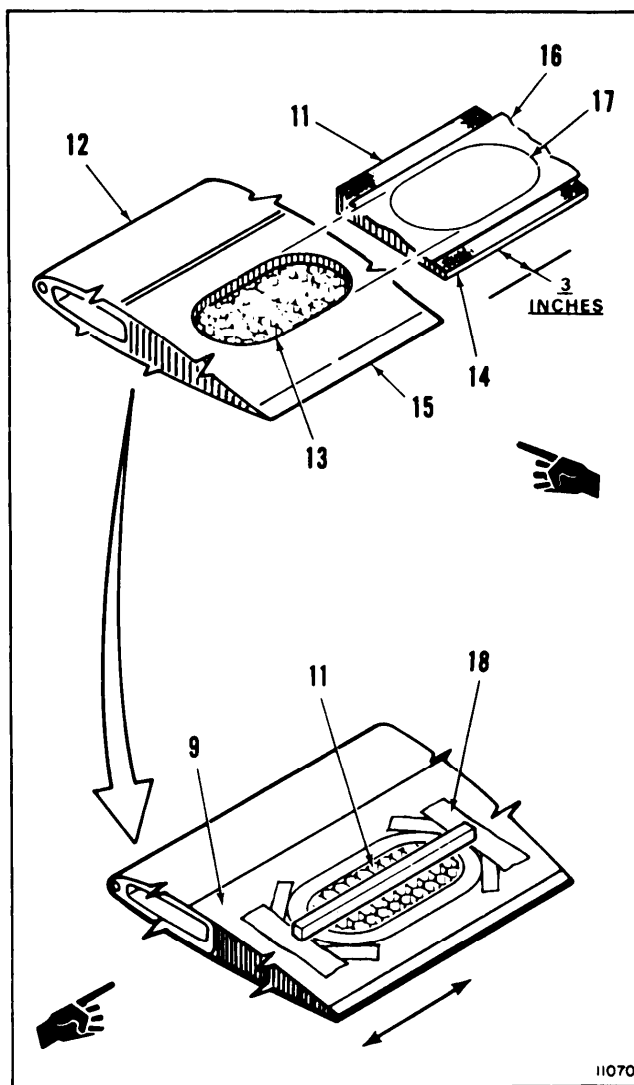

22. Prepare skin patch (19) as follows:
  - a. Position core (11) on piece of fiberglass laminate (E168 or E168.1) (21) with fibers at 45 degrees to chord.
  - b. Draw outline (20) of core (11) on fiberglass laminate (E168 or E168.1) (21). Draw outline 1 inch larger than core. Use pencil compass and straightedge.
  - c. Cut skin patch (19). Smooth rough edges. Use abrasive paper (E7).

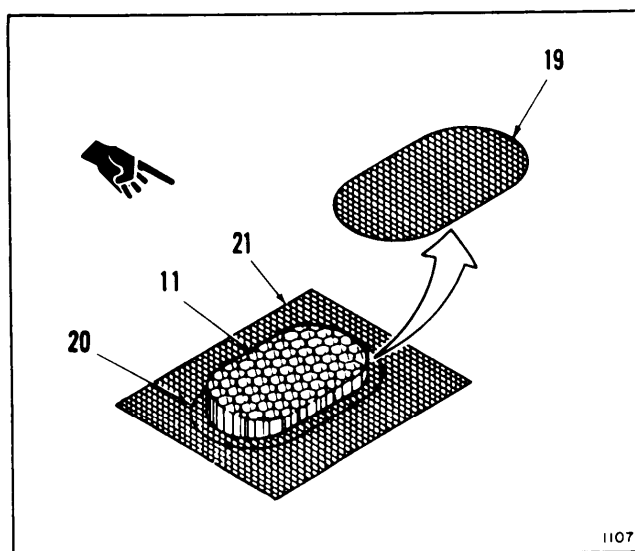

**GO TO NEXT PAGE**

5-242 Change 14


## 5-68 REPAIR BLADE FAIRING — SINGLE SKIN FULL DEPTH (Continued)

5-68

- d. Check that patch (19) is 1 inch larger than core (11) on all sides. Check that blade surface finish is removed 1/2 inch around patch.
- e. Trace patch outline (22) onto blade skin (9).
- f. If fiberglass laminate (E168.1) is used, remove peel ply from surfaces of patch. Clean patch with acetone (E20) and wipe dry.
- g. Sand both sides of patch (22) to remove surface glaze. Use abrasive paper (E9).

### NOTE

Patch will not adhere if surface glaze is not removed.

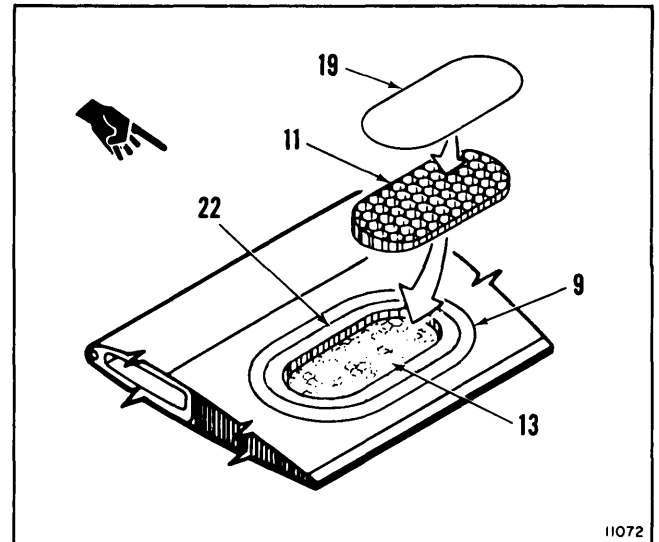

23. **Clean core (11) and cutout (13).** Use vacuum cleaner.
24. Wear gloves (E186). **Clean core (11) and skin (8) where finish was removed.** Use cloth (E 120) damp with acetone (E20). Wipe dry with clean cloth. Do not remove gloves.


### INSPECT

### APPLY ADHESIVE

### NOTE

Prepackaged adhesive (E40) is preferred. Use adhesive (E41 or E43) only if prepackaged kit is not available,

25. **Mix tube of adhesive (E40).** Follow instructions on kit.
26. If adhesive (E40) is not available, prepare adhesive (E41) as follows:
  - a. Weigh 100 parts of resin and 23 parts of hardener, Use trip balance.
  - b. Mix parts in polyethylene cup (E 157) until color is uniform. Use wood spatula (E424).
27. If adhesive (E43) is used, prepare as follows:
  - a. Weigh 7 parts of gray hardener and 5 parts of white base. Use trip balance.
  - b. Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).

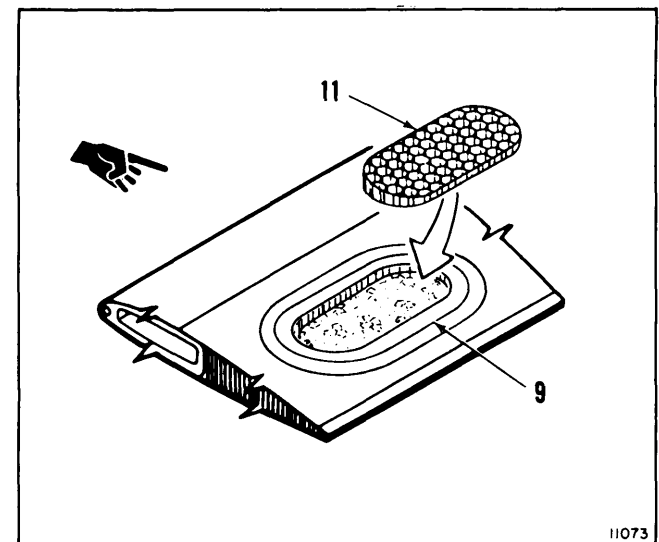

### NOTE


Working life of adhesive is 30 minutes.

**GO TO NEXT PAGE**


Change 14

5-243

- 28. Apply adhesive (E40, E41, or E43) to bottom and sides of cutout (13) and core (11). Use stiff brush.
- 29. Align match marks on core (11) and cutout (13). Insert core until seated on bottom. Check that core is flush with skin.
- 30. Apply adhesive to core (11), area (24) where finish was removed, and one side of patch (22). If fiberglass laminate (E168.1) is used, apply adhesive so outer edges of patch curl towards the blade.

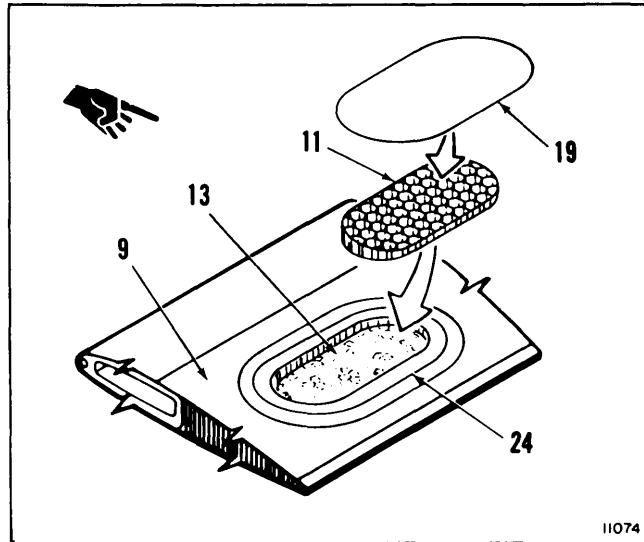

- 31. Center patch over insert, within outline. Position patch with fibers at 45 degrees to blade chord. Press onto skin (9). If wire mesh diverter damage is less than 1 square-inch, go to step 33.
- 32. If wire mesh diverter damage is more than 1 square-inch, replace mesh (25) as follows:
  - a. Cut piece of mesh (E453) (25) to cover patch (22) and exposed mesh (26).
  - b. Brush thin coat of adhesive (E40 or E41) over patch (22) and damaged mesh (26).
  - c. Position mesh (E453) (25) over patch (22). Seat firmly. Brush excess adhesive over mesh. Fair adhesive to blade skin (8).

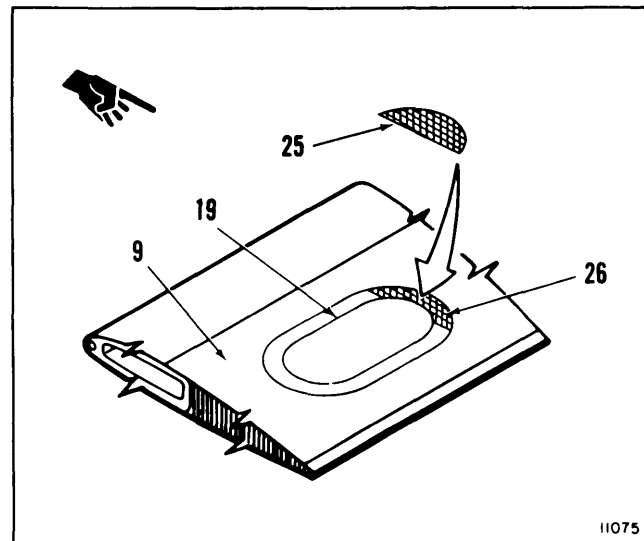


## 5-68 REPAIR BLADE FAIRING — SINGLE SKIN FULL DEPTH (Continued)

5-68

### BOND FAIRING REPAIR

33. Bond fairing repair with larger dimension less than 5 inches as follows. If dimension is greater than 5 inches, go to step 34.

- a. Cover repair with layer of peel ply (E270) (27) and layer of teflon-impregnated fabric (E170) (28). Make layers large enough to overlap patch (22) 1 inch.
- b. Cover teflon-impregnated fabric (E170) (28). Use thick rubber pad (E318) (29).
- c. Cover repair area. Use fiberglass cloth (E132) (30). Cut cloth large enough to cover rubber pad (E318) (29).
- d. Surround cloth (E132) (30) with sealing tape (E396) (31). Keep tape clear of cloth.
- e. Attach tube (32) to vacuum pump hose.
- f. Wrap tube (32). Use two layers of fiberglass cloth (E132) (33). Apply masking tape (E388) over cloth.
- g. Position tube (32) on cloth (E132) (30) covering repair. Wrap tube with sealing tape (E396) (34) where tube crosses sealing tape (31) already applied.
- h. Press tube (32) onto tape (34) to make airtight seal.
- i. Press polyvinyl sheet (E284) (35) smoothly onto tape (31) to make airtight seal.

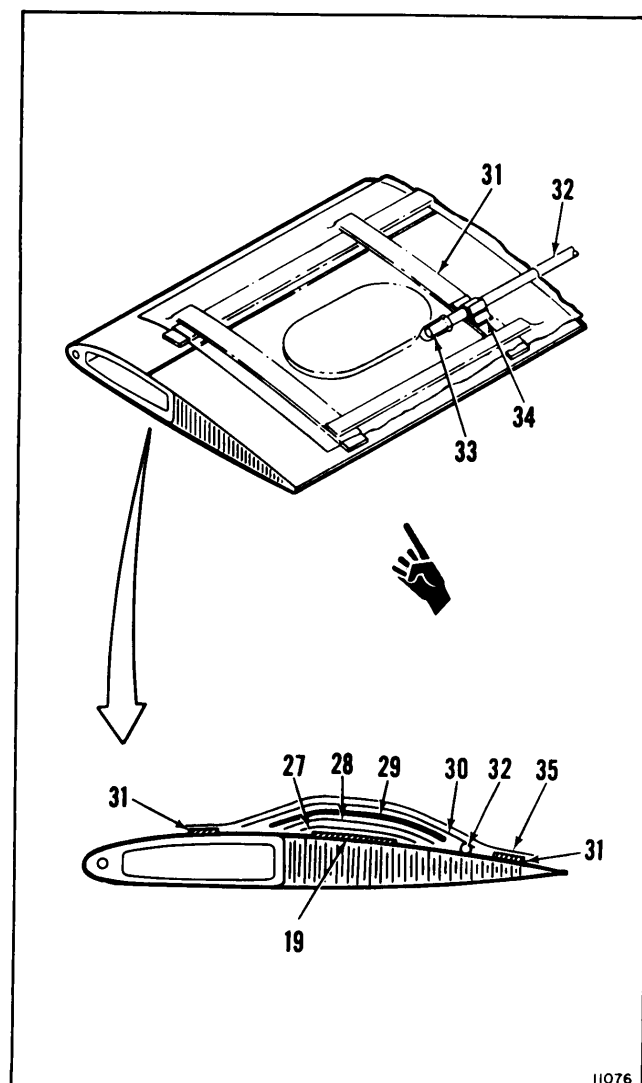

**GO TO NEXT PAGE**

## 5-68 REPAIR BLADE FAIRING — SINGLE SKIN FULL DEPTH (Continued)

- j. Start vacuum pump. Check for leaks. Reposition polyvinyl sheet (E284) (35) or add tape (E396) (31) as needed.
- k. Maintain 20 inches Hg vacuum through adhesive cure.

**CAUTION**

**Do not exceed 160°F (71°C) at blade surface. Damage to fiberglass can occur.**

- l. Cure adhesive at 150-160°F (66-71°C) 2 hours. Use heat lamp. Monitor temperature. Use temperature indicating strips (E413).


**NOTE**

Serviceable cure can be achieved without heat at 70-80°F (21-27°C) in 24 hours. Vacuum may be removed after 12 hours.

- m. Turn off vacuum pump.
- n. Remove peel ply (27, fabric (28), rubber (29), fiberglass (30), tape (31), tube (32), and sheet (35).
- o. If squeezeout fairing is not satisfactory, fair patch. Use adhesive (E40, E41, or E43). Follow steps 25, 26 or 27 to mix adhesive.

**INSPECT**

- p. Go to step 35.

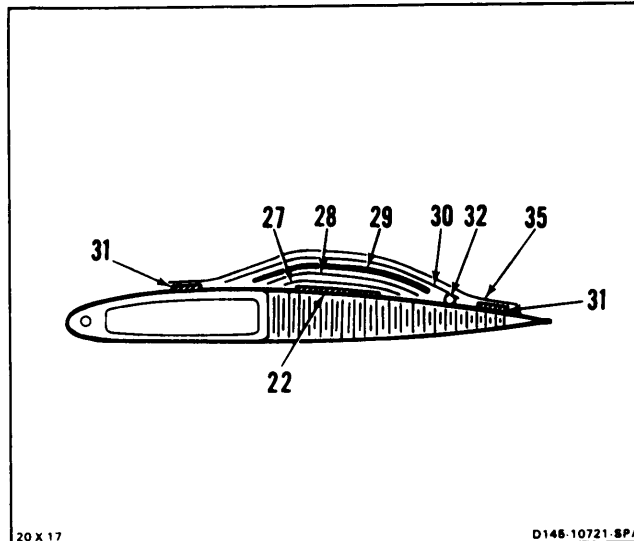

**5-68 REPAIR BLADE FAIRING - SINGLE SKIN FULL DEPTH  
(Continued)**

5-68


34. Bond fairing repair with larger dimension more than 5 inches as follows:
- Cut piece of aluminum (E70) (36) large enough to overlap repair 2 inches in all directions.
  - Position aluminum sheet (E70) (36) directly under repair. Tape aluminum sheet to bottom of blade (12). Use masking tape (E388) (37).
  - Bond repair to blade as directed in step 33.
  - Remove aluminum sheet (36).

**INSPECT**

35. Find weight of repair. Use Adhesive Weight for Single Skin and Core Repairs table. Record weight for blade tracking weight adjustment.

**NOTE**

- If repair is larger than shown in table, use column and row for 1/2 repair size and double the weight shown
- All blade repairs, weight adjustment, painting, or balancing will be recorded on rotor blade DA Form 2408-16, each blade requires a separate form. If the rotor blade does not have a DA Form 2408-16, one must be prepared and all actions recorded, as example; location of repair, size of repair, weight of repair, and required weight adjustments for track and balance.

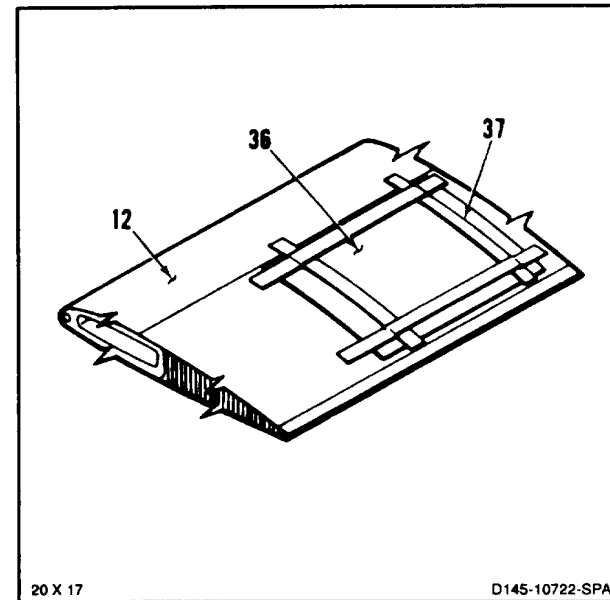

20 X 17

D145-10722-SPA

**GO TO NEXT PAGE****Change 37 5-247**




5-68 REPAIR BLADE FAIRING — SINGLE SKIN FULL DEPTH  
(Continued)

		Adhesive Weight for Single Skin and Core Repairs												
		Length (inches)												
A \ B		2	4	6	8	10	12	14	16	18	20	22	24	26
Width (inches)	2	12 3 .05	16 4 .07	21 5 .09	26 6 .11	30 7 .12	35 8 .14	40 9 .16	44 10 .18	49 11 .19	54 12 .21	58 13 .23	63 14 .24	67 16 .26
	3		20 5 .08	26 6 .11	32 7 .13	37 9 .15	43 10 .17	49 11 .19	54 13 .21	60 14 .23	66 15 .25	72 17 .27	78 18 .29	84 19 .31
	4		24 5 .10	30 7 .12	37 9 .15	44 10 .17	51 12 .19	58 13 .22	65 15 .24	72 16 .26	79 18 .29	85 20 .31	93 21 .33	99 23 .36
	5			34 8 .14	42 10 .16	50 12 .19	59 13 .22	67 15 .24	75 17 .27	83 19 .30	91 21 .32	99 23 .35	107 25 .38	115 27 .41
	6			38 9 .15	47 11 .18	57 13 .21	66 15 .24	76 17 .27	85 19 .30	93 22 .33	103 24 .36	112 26 .39	121 28 .42	131 30 .45
	7				52 12 .20	63 14 .23	73 17 .26	84 19 .30	93 22 .33	104 24 .36	115 26 .40	125 29 .43	136 31 .46	146 33 .50
	8				57 13 .21	68 16 .25	80 18 .29	92 21 .32	102 25 .36	115 26 .39	126 29 .43	137 32 .47	150 34 .50	161 37 .54
	9					74 17 .27	87 20 .31	99 23 .35	112 26 .39	124 29 .43	137 32 .46	150 35 .48	163 37 .54	176 40 .58
	10					79 18 .29	93 21 .33	107 24 .37	120 28 .41	135 31 .46	149 34 .50	163 37 .54	176 41 .58	190 44 .63
	11						99 23 .35	114 26 .39	129 30 .44	144 33 .49	159 37 .53	174 40 .58	189 44 .62	204 47 .67
	12						105 24 .37	121 28 .42	137 32 .47	154 35 .52	170 39 .56	186 43 .61	202 46 .66	218 50 .71
	13							128 29 .44	146 33 .49	163 38 .54	180 41 .60	198 45 .65	215 49 .70	232 53 .75
	14							135 31 .46	153 35 .52	172 39 .57	190 44 .63	215 49 .70	227 52 .74	246 56 .79
	15								160 37 .54	180 42 .60	200 46 .66	220 50 .72	239 55 .77	259 59 .83

Example:

135 - Weight of Base in Grams  
 31 - Weight of Hardener in Grams  
 .46 - Total Weight of Repair in Pounds

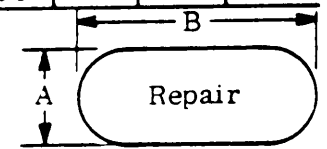

42 X 51

D145-10723-SPA

FOLLOW-ON MAINTENANCE

- Refinish repaired area (Task 5-82).
- Adjust balance weights (Task 5-82.1).

END OF TASK

5-248 Change 14

**INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876  
Wood Block, 1 X 1 X 48 Inches  
Scissors  
Sanding Block  
Pencil Compass  
Straightedge  
Router  
Router Bit, 4-Fluted, A2154108  
Vacuum Cleaner  
Hole Saw  
Vacuum Pump  
Protective Clothing  
Respirator  
Trip Balance, NSN 6670-00-401-7195  
Heat Lamp  
Wood Support Platform

**Materials:**

Wire Mesh (E453)  
Acetone (E20)  
Gloves (E186)  
Abrasive Paper (E6, E7, E9)  
Template Paper (E263)  
Masking Tape (E388)  
Teflon Tape (E399)  
Cloth (E120)  
Adhesive (E40, E41, E43, or E47.1)  
Polyethylene Cup (E157)  
Wood Spatula (E424)  
Peel Ply ((E270)  
Teflon-Impregnated Fabric (E170)  
Rubber Pad (E318)  
Glass Cloth (E132)  
Sealing Tape (E396)  
Polyvinyl Sheet (E284)  
Temperature Indicating Strips (E413)  
Fiberglass Laminate (E168 or E168.1)  
Scrim Cloth (E325)  
Core Material (E145 or E146)  
Curing Agent (E158.1)

**Personnel Required:**

Aircraft Structural Repairer  
Inspector

**References:**

Task 5-68  
Task 5-70

**Equipment Condition:**

Off Helicopter Task

**General Safety Instructions:****WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**

Adhesives (E40, E41, E43 or E47.1) are toxic. They can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**


Adhesive used in the manufacturing of some fiberglass rotor blades contain asbestos. During blade repair, strict adherence to all safety procedures when working with asbestos must be complied with (applies to blade serial number A-1-0001 to 1465 and A-24001 to 1473 only).

**GO TO NEXT PAGE**

Change 24 5-249

**PREPARE DAMAGE AREA**

1. Check location and extent of damage to one skin and up to half-depth of core. Refer to **Fiberglass Skin Damage Repair Limits figure**. If damage extends more than half-depth of core, or if router is not available, make a full depth repair (Task 5-68). Skin and partial core must be replaced where repairs are allowed.

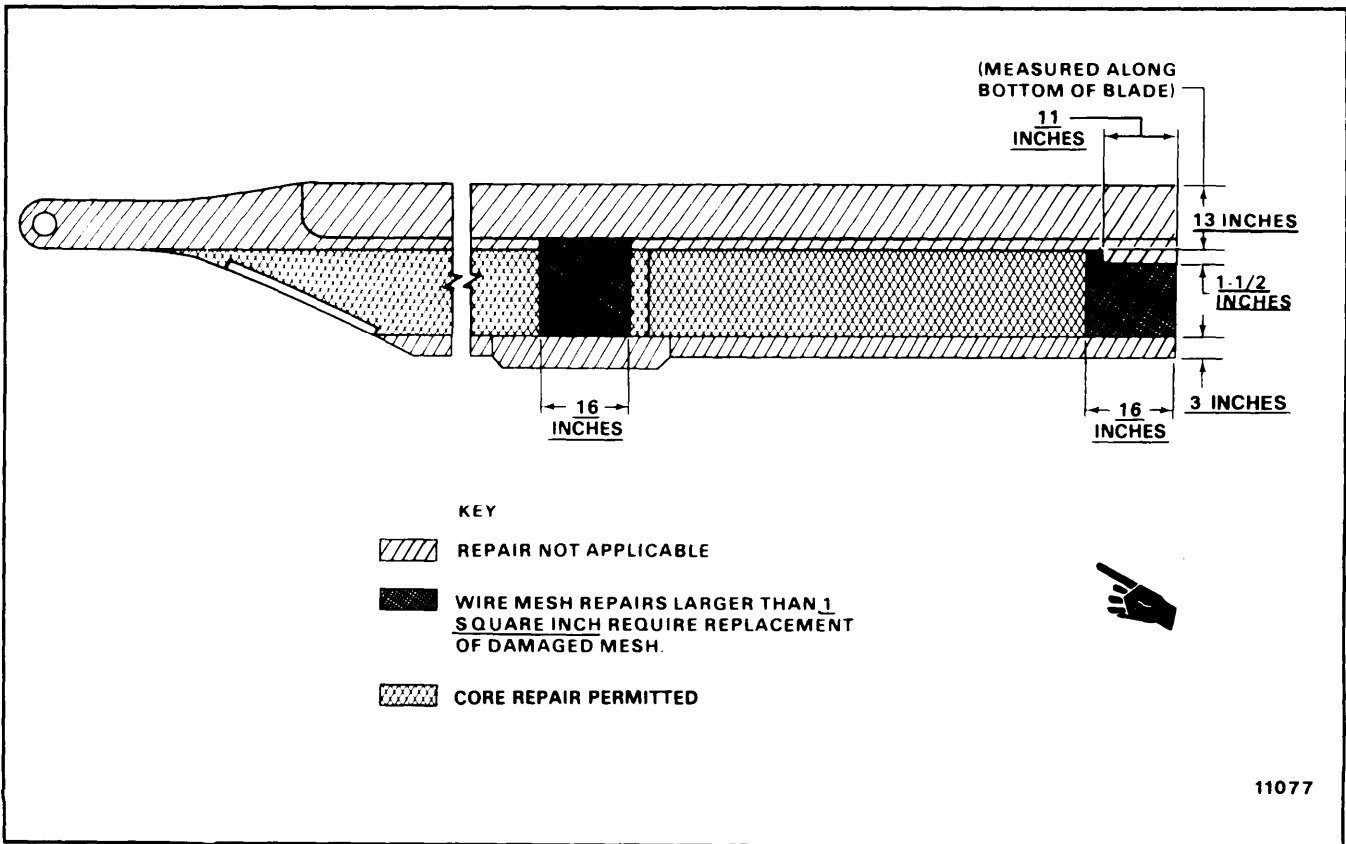

**GO TO NEXT PAGE**


5-250 Change 30

5-69 REPAIR BLADE FAIRING — PARTIAL DEPTH (Continued)

2. **Outline damage area (1).** Mark circle or oblong outline (2). Damaged removal area shall have no corners.

**CAUTION**

Do not wash contaminants into damaged area if acetone (E20) is used to soften finish. Contaminants can prevent satisfactory repair.

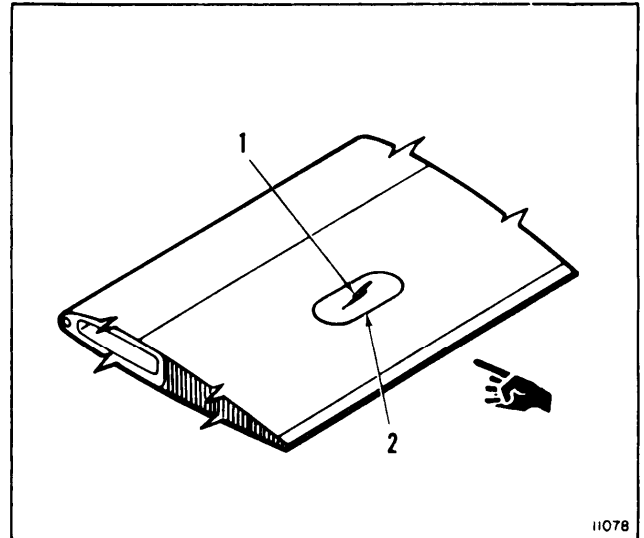

3. **Remove finish 1 1/2-inches outside of outline (2)** around damage. Use sanding block and abrasive paper (E6). Use acetone (E20) if needed to soften finish. Complete finish removal. Use abrasive paper (E7). Do not sand through wire mesh. Use gloves (E186).
4. If wire mesh diverter (3) must be replaced, expose wire mesh 1 1/2-inches outside of damage area (1).
5. **Draw line (4) around outline (2)** spaced at distance equal to radius of router base (5) away from outline. Use pencil compass and straightedge. If damaged area (1) will not support compass point, cover area. Use template paper (E263) and masking tape (E388).
6. **Use router (6) to remove damaged skin, proceed as follows:**

- a. Position blade (7) on table. Clamp 1 inch square wood strip (8) under trailing edge (9).


**NOTE**

Support at trailing edge puts honeycomb core cells 90 degrees to table surface.

- b. Make a support platform (10) on blade (7) to support router base (5) parallel to table surface.

**CAUTION**

Router bit must not extend more than 3/4 inch. It must not cut deep enough to damage opposite skin. If opposite skin is damaged, a double skin repair must be done (Task 5-70).

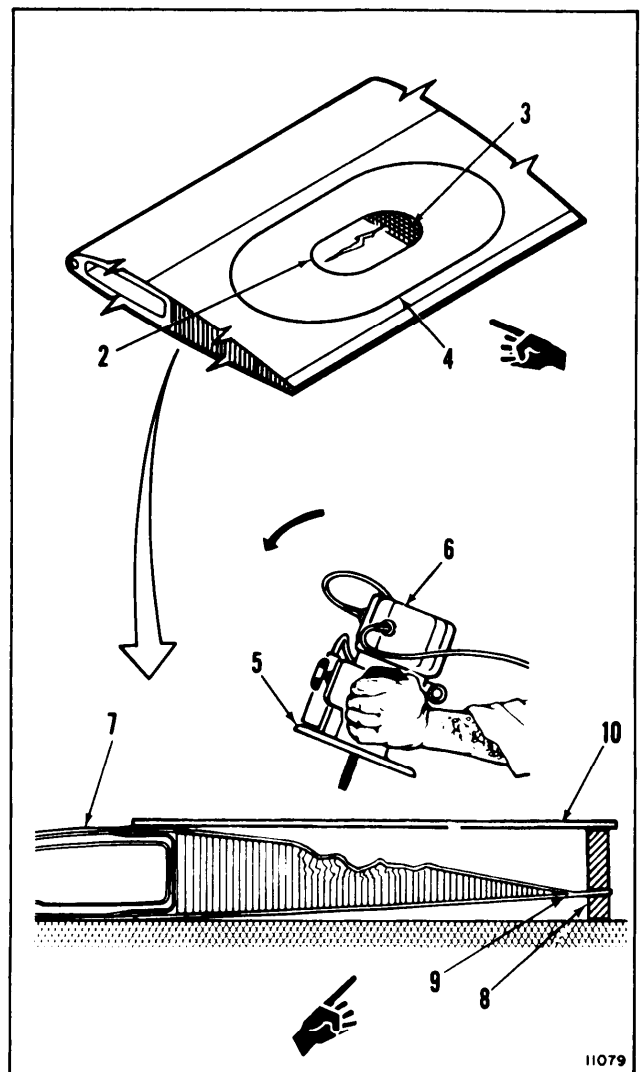

GO TO NEXT PAGE

- c. Set router bit (11) to extend only enough to remove damaged core (12). If opposite skin is damaged, make double skin repair (Task 5-70).

**WARNING**


Wear goggles, respirator, and protective clothing when using router. Fiberglass particles will irritate eyes, lungs, and skin.

**WARNING**

Do not cut into spar. Spar damage shall cause rejection of rotor blade.


- d. Start router (6). Grasp handles with both hands, Use wood platform (10) for support. Move router around using outer line (4) as guide for router base (5). Cut outline around damaged area.
- e. Complete removal of damaged skin and core (12).
- f. Turn router (6) off and remove it.
- g. Check that all damaged core (12) has been removed. If necessary, increase depth of cut and repeat steps c. thru f. If depth of damage exceeds 3/4 inch or half the core depth, make a full depth repair (Task 5-68).

- 7. Clean cutout (13). Use vacuum cleaner.

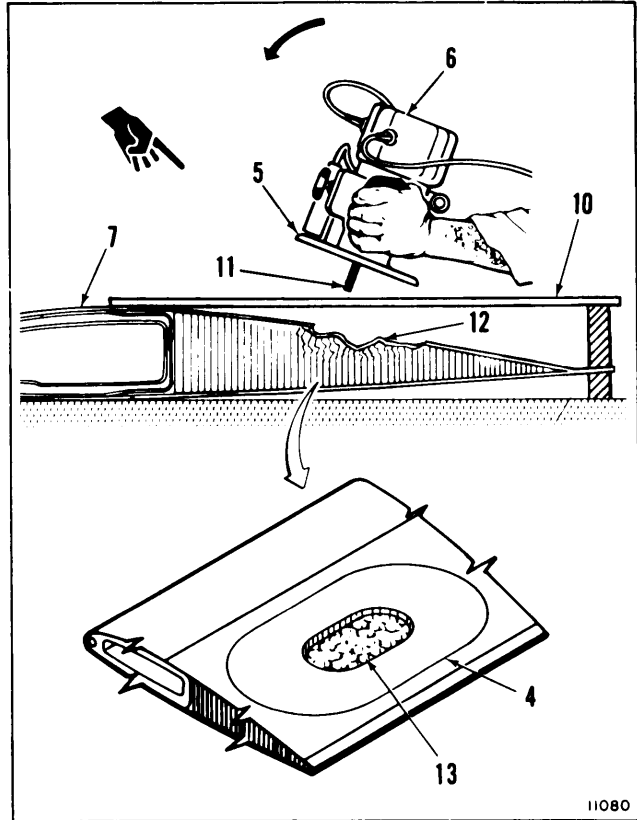

**PREPARE REPAIR MATERIALS**

- Use core material (E145) in 3 pound density repair area. Use core material (E146) in 2 pound density repair area. Refer to **Fiberglass Blade Skin and Core Damage Repair Limits** figure.

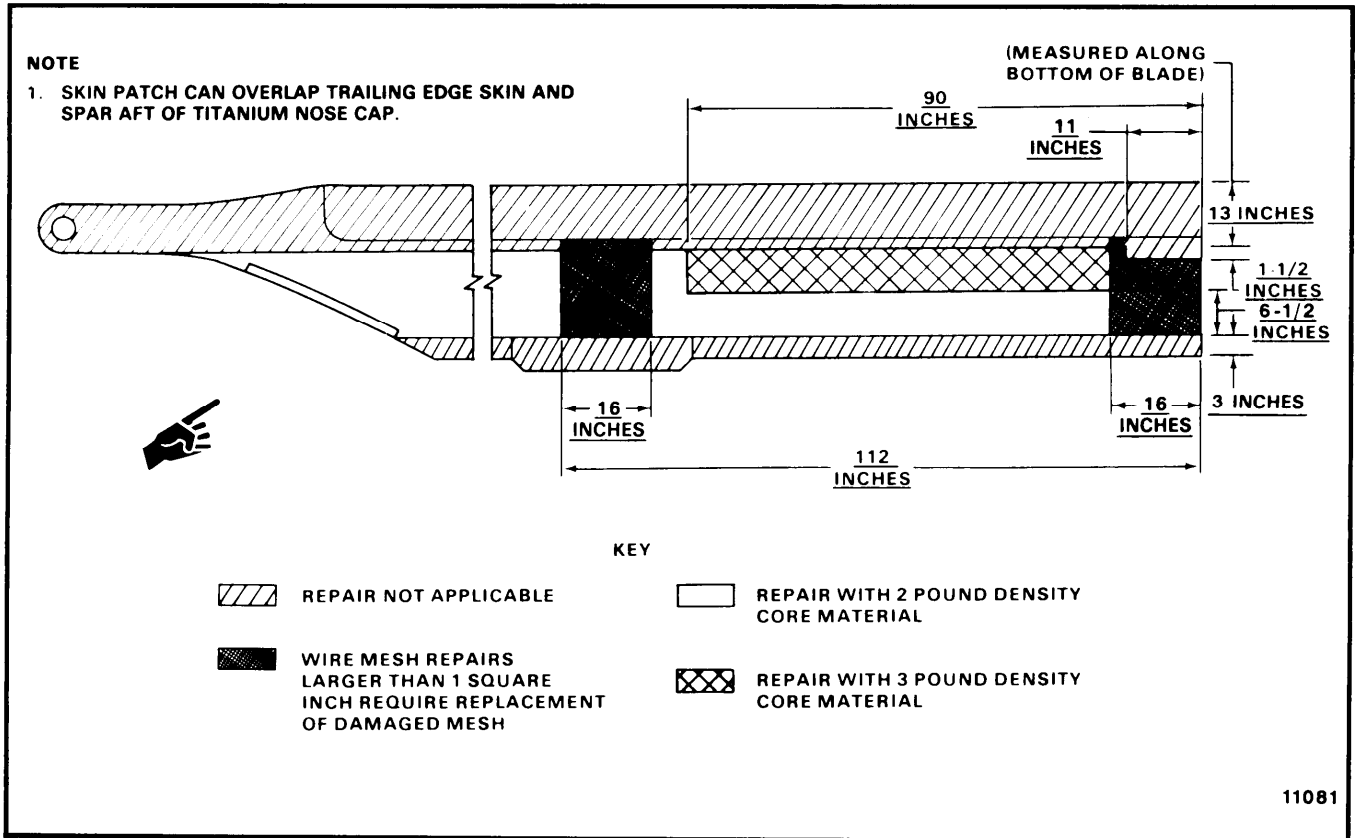


9. Position core material (E145 or E146) (14) on blade (7) next to cutout (13). Locate trailing edge (15) of core material 3-inches forward of blade trailing edge (16).
10. Apply masking tape (E388) (17) to cover area on core material (E145 or E146) (14) slightly larger than cutout (13).
11. Draw outline (18) on tape (E388) (17) in shape of cutout (13) and 1/8 inch larger.

**NOTE**


Repair plug must have same contour as blade and be slightly larger than cutout .

12. **Cut core material (E145 or E146) (14)** on tape outline (18). Use knife. Remove tape (E388) (17).
13. Position piece of scrim cloth (E325) (19) over cutout (13). Draw outline on scrim cloth.
14. Cut scrim cloth (19). Use scissors.
15. Position scrim cloth (19) and core (20) in cutout (13). Make sure cloth and plug are seated. Check that plug fits tightly and extends above skin (21).
16. Apply teflon tape (E399) (22) around cutout (13) to protect blade skin (21).

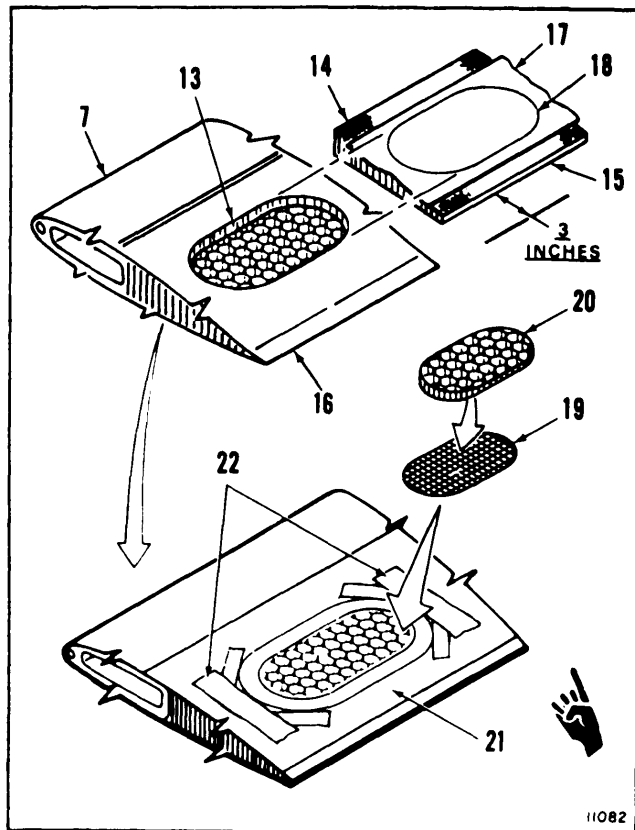

**5-69 REPAIR BLADE FAIRING — PARTIAL DEPTH (Continued)****5-69**

17. **Sand core (20)** flush with tape (E399) (22). Use sanding block about 2 inches wide and long enough to span length of repair, and abrasive paper (E6). Use spanwise strokes. Remove tape.
18. Matchmark core (20) and skin (21). Remove tape (22), core (20), and scrim cloth (19).
19. **Clean cutout (13)**. Use vacuum cleaner.
20. **Prepare skin patch (22)** as follows:
  - a. Position core (20) on piece of fiberglass laminate (E168 or E168.1) (23) with fibers at 45 degrees to chord.
  - b. Draw outline (24) of core (20) on fiberglass laminate (E168 or E168.1) (23) 1 inch larger than core outline. Use pencil compass and straightedge as required. Remove core.
  - c. Cut skin patch (23). Use scissors. Smooth rough edges. Use abrasive paper (E7).
  - d. Check that patch (22) is 1 inch larger than core (20) on all sides. Check that blade surface finish is removed 1/2 inch around patch.
  - e. Trace patch outline (25) onto skin (21).
  - f. If fiberglass laminate (E168.1) is used for patch (23), remove peel ply from patch surfaces. Clean with acetone (E20). Wipe dry with clean cloth (E120).

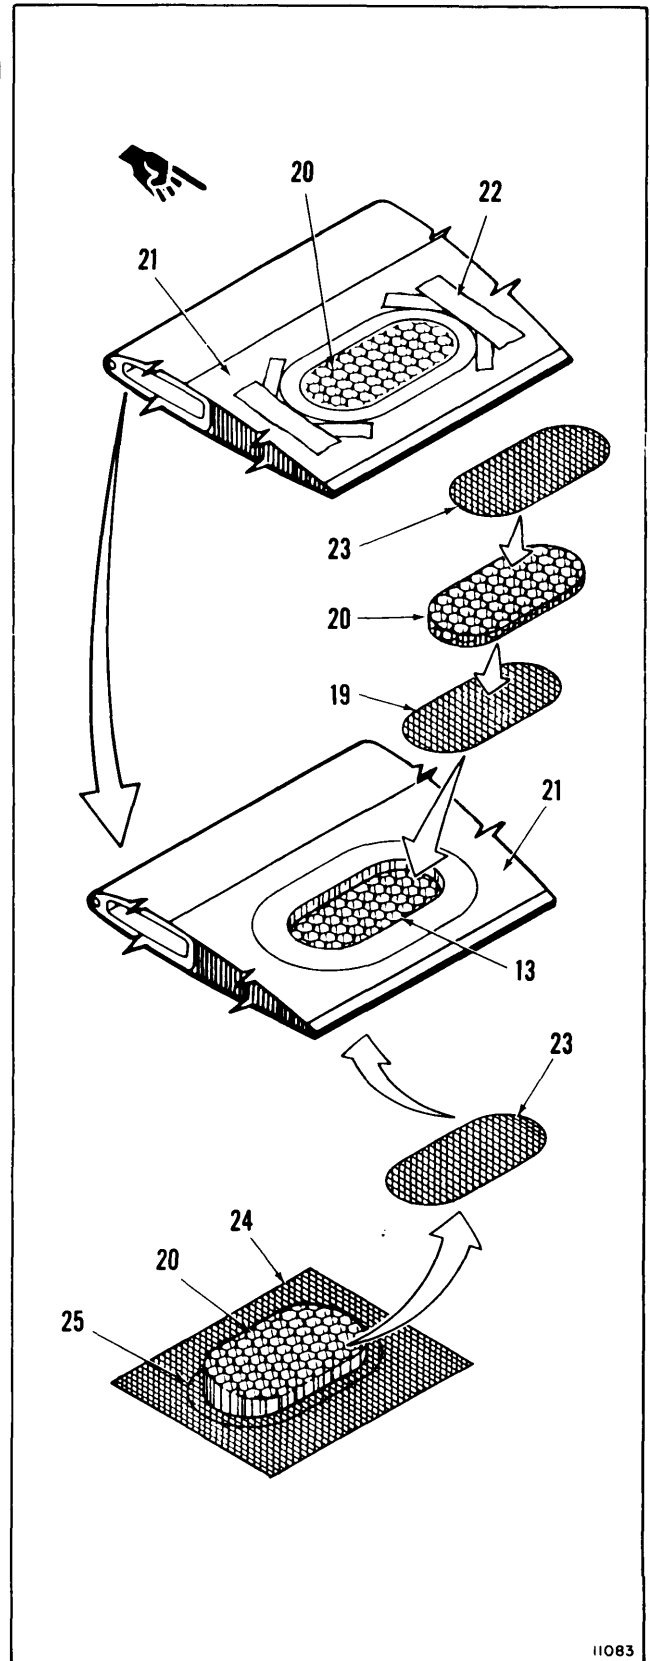**GO TO NEXT PAGE**



- g. **Sand both sides of patch (22)** to remove surface glaze. Use abrasive paper (E9).

**NOTE**

Patch will not adhere if surface glaze is not removed.

21. **Clean core (20) and cutout (13).** Use vacuum cleaner.
22. Wear gloves (E186). Clean core (20), cutout (13), scrim cloth (19) and skin (21) where finish was removed, Use cloth (E120) damp with acetone (E20). Wipe dry with a clean cloth. Do not remove gloves.

**INSPECT****APPLY ADHESIVE****NOTE**


Prepackaged adhesive (E40) is preferred. Use adhesive (E41, E43 or E47.1) only if prepackaged kit is not available.

23. **Mix tube of adhesive (E40).** Follow instructions on kit.

**CAUTION**

**Weigh and mix adhesive and resin accurately to produce acceptable bond.**

24. If adhesive (E40) is not available, prepare adhesive (E41) as follows:
- Weigh 100 parts of resin and 23 parts of hardener.
  - Mix in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).
25. If adhesive (E43) is used, prepare as follows:
- Weigh 7 parts of gray hardener and 5 parts of base. Use trip balance.
  - Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).
26. If adhesive (E47.1) is used, prepare as follows:
- Weigh equal parts of adhesive (E47.1) and curing agent (E158.1). Use trip balance.
  - Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).

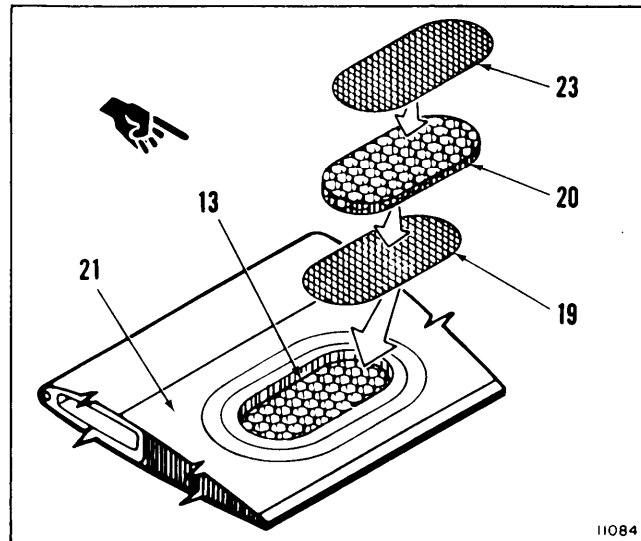



**NOTE**

Working life of adhesive is 30 minutes.

27. **Apply adhesive (E40, E41, E43, or E47.1) to one side of scrim cloth (E325) (19).** Use stiff brush.
28. **Position scrim cloth (E325) (19) in cutout (13) with adhesive down.**
29. **Coat top of scrim cloth (E325) (19) and walls of cutout (13).** Use adhesive (E40, E41, E43, or E47.1).
30. Align matchmarks on core (20) and skin (21). Press core until it seats completely.
31. **Apply adhesive (E40, E41, E43, or E47.1) to one side of patch (22) and 1 inch outside of cutout (13).** If fiberglass laminate (E168.1) is used, apply adhesive so outer edges of patch curl towards the blade.
32. Center patch (23) over core (20). Position patch with fibers at 45 degrees to chord. Press firmly onto skin (20).
33. If wire mesh diverter damage is more than 1 square-inch, replace mesh (23) as follows:
  - a. Cut piece of mesh (E453) (27) to cover patch (23) and exposed mesh (3).
  - b. Brush thin coat of adhesive (E40 or E41) over patch (23) and damaged mesh (3).
  - c. Position mesh (E453) (27) over patch (23). Seat firmly.

**NOTE**

All blade repairs, weight adjustment, painting, or balancing will be recorded on rotor blade DA Form 2408-16, each blade requires a separate form. If the rotor blade does not have a DA Form 2408-16, one must be prepared and all actions recorded, as example; location of repair, size of repair, weight of repair, and required weight adjustments for track and balance.

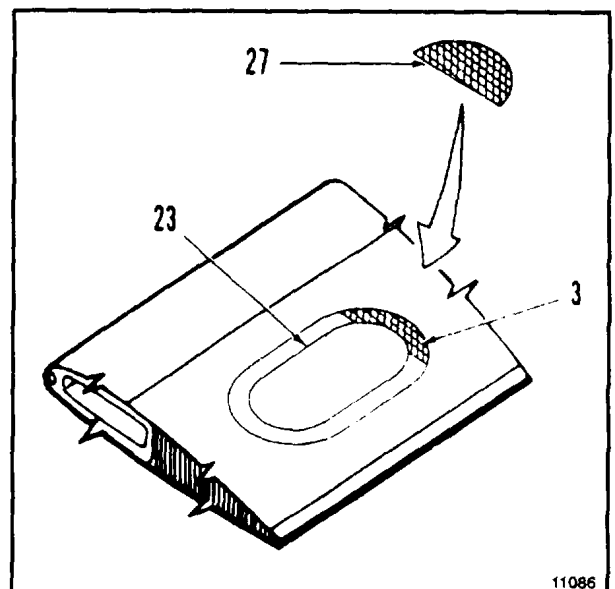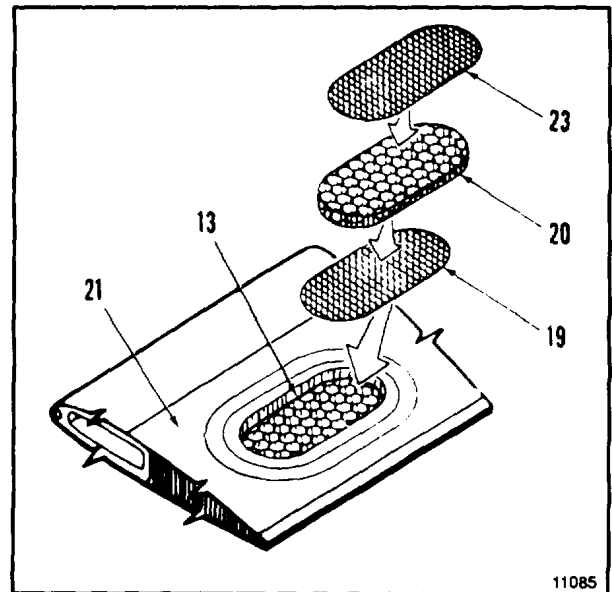

GO TO NEXT PAGE

Change 37 5-257

34. Bond fairing repair (Task 5-68).

**NOTE**

Partial depth repairs with larger dimension less than 5 inches does not require aluminum sheet backing.

**INSPECT**

35. Find weight of repair. Use Adhesive Weight for Single Skin and Core Repair table. Record weight for blade tracking weight adjustment.


		Adhesive Weight for Single Skin and Core Repairs													
		Length (inches)													
A \ B		2	4	6	8	10	12	14	16	18	20	22	24	26	
Width (inches)	2	12	16	21	26	30	35	40	44	49	54	58	63	67	
		3	4	5	6	7	8	9	10	11	12	13	14	16	
			.05	.07	.09	.11	.12	.14	.16	.18	.19	.21	.23	.24	.26
	3	20	26	32	37	43	49	54	60	66	72	78	84		
		5	6	7	9	10	11	13	14	15	17	18	19		
			.08	.11	.13	.15	.17	.19	.21	.23	.25	.27	.29	.31	
	4	24	30	37	44	51	58	65	72	79	85	93	99		
		5	7	9	10	12	13	15	16	18	20	21	23		
			.10	.12	.15	.17	.19	.22	.24	.26	.29	.31	.33	.36	
	5	34	42	50	59	67	75	83	91	99	107	115			
		8	10	12	13	15	17	19	21	23	25	27			
			.14	.16	.19	.22	.24	.27	.30	.32	.35	.38	.41		
	6	38	47	57	66	76	85	93	103	112	121	131			
		9	11	13	15	17	19	22	24	26	28	30			
			.15	.18	.21	.24	.27	.30	.33	.36	.39	.42	.45		
7	52	63	73	84	93	104	115	125	136	146					
	12	14	17	19	22	24	26	29	31	33					
		.20	.23	.26	.30	.33	.36	.40	.43	.46	.50				
8	57	68	80	92	102	115	126	137	150	161					
	13	16	18	21	25	26	29	32	34	37					
		.21	.25	.29	.32	.36	.39	.43	.47	.50	.54				
9	74	87	99	112	124	137	150	163	176						
	17	20	23	26	29	32	35	37	40						
		.27	.31	.35	.39	.43	.46	.48	.54	.58					
10	79	93	107	120	135	149	163	176	190						
	18	21	24	28	31	34	37	41	44						
		.29	.33	.37	.41	.46	.50	.54	.58	.63					
11	99	114	129	144	159	174	189	204							
	23	26	30	33	37	40	44	47							
		.35	.39	.44	.49	.53	.58	.62	.67						
12	105	121	137	154	170	186	202	218							
	24	28	32	35	39	43	46	50							
		.37	.42	.47	.52	.56	.61	.66	.71						
13	128	146	163	180	198	215	232								
	29	33	38	41	45	49	53								
		.44	.49	.54	.60	.65	.70	.75							
14	135	153	172	190	215	227	246								
	31	35	39	44	49	52	56								
		.46	.52	.57	.63	.70	.74	.79							
15	160	180	200	220	239	259									
	37	42	46	50	55	59									
		.54	.60	.66	.72	.77	.83								

Example:

135 - Weight of Base in Grams

31 - Weight of Hardener in Grams

.46 - Total Weight of Repair in Pounds

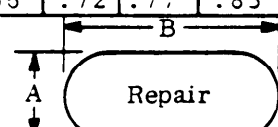

42 X 51

D145-10734-SPA

**FOLLOW-ON MAINTENANCE:**

- Refinish repaired area (Task 5-82).
- Adjust balance weights (Task 5-82. 1).

**END OF TASK**

**5-69.1 REPAIR BLADE FAIRING — FOAM FILLER****INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Airframe Repairer's Tool Kit,

NSN 5180-00-323-4876

Scissors

Sanding Block

Pencil Compass

Router

Vacuum Cleaner

Hole Saw

Hacksaw Blade

Vacuum Pump

Protective Clothing

Respirator

Trip Balance,

NSN 6670-00-401-7195

Heat Lamp

**Materials:**

Wire Mesh (E453)

Acetone (E20)

Gloves (E186)

Abrasive Paper (E6), (E7), (E9)

Template Paper (E263)

Masking Tape (E388)

Teflon Tape (E399)

Cloth (E120)

Adhesive (E40, E41, E43 or E47.1)

Foam Filler (E172.1)

Polyethylene Cup (E157)

Wood Spatula (E424)

Peel Ply (E270)

Teflon Impregnated Fabric (E170)

Rubber Pad (E318)

Glass Cloth (E132)

Sealing Tape (E396)

Polyvinyl Sheet (E284)

Temperature Indicating Strips (E413)

Fiberglass Laminate (E168 or E168.1)

Curing Agent (E158.1)

**Personnel Required:**

Aircraft Structural Repairer


Inspector

**References:**

Task 5-68

**Equipment Condition:**

Off Helicopter Task

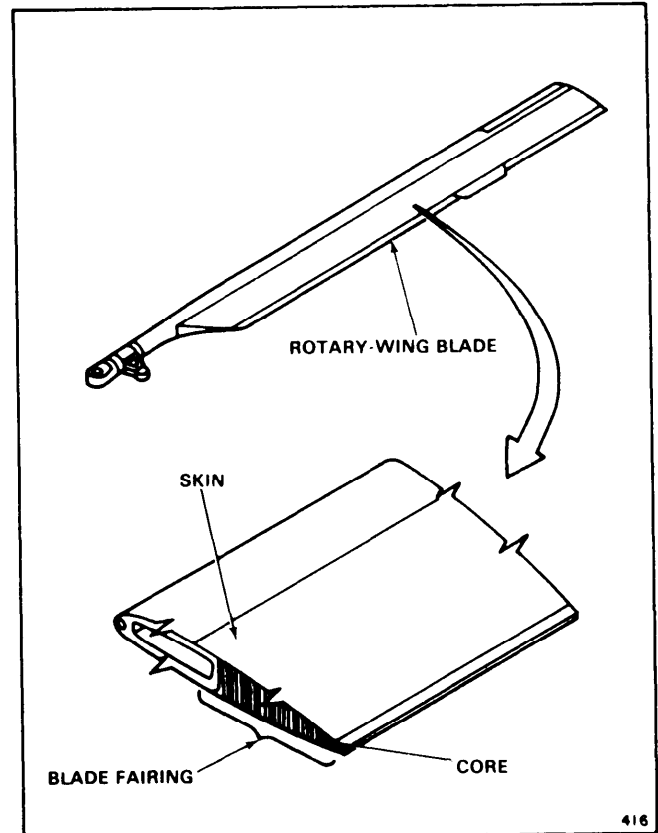**General Safety Instructions:****WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**

Adhesives (E40, E41, E43 or E47.1) are toxic. They can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**


Adhesive used in the manufacturing of some fiberglass rotor blades contain asbestos. During blade repair, strict adherence to all safety procedures when working with asbestos must be complied with (applies to blade serial number A-1-0001 to 1465 and A-2-0001 to 1473 only).

**PREPARE DAMAGE AREA**

1. Check location and extent of damage to one skin and full depth of core Refer to **Fiberglass Skin Damage Repair Limits figure**. Skin and core below skin must be replaced where repairs are allowed.

**NOTE**

Foam repairs are limited to a maximum dimension of 4 inches. If damage exceeds 4 inches in diameter, make a single skin repair (Task 5-68).

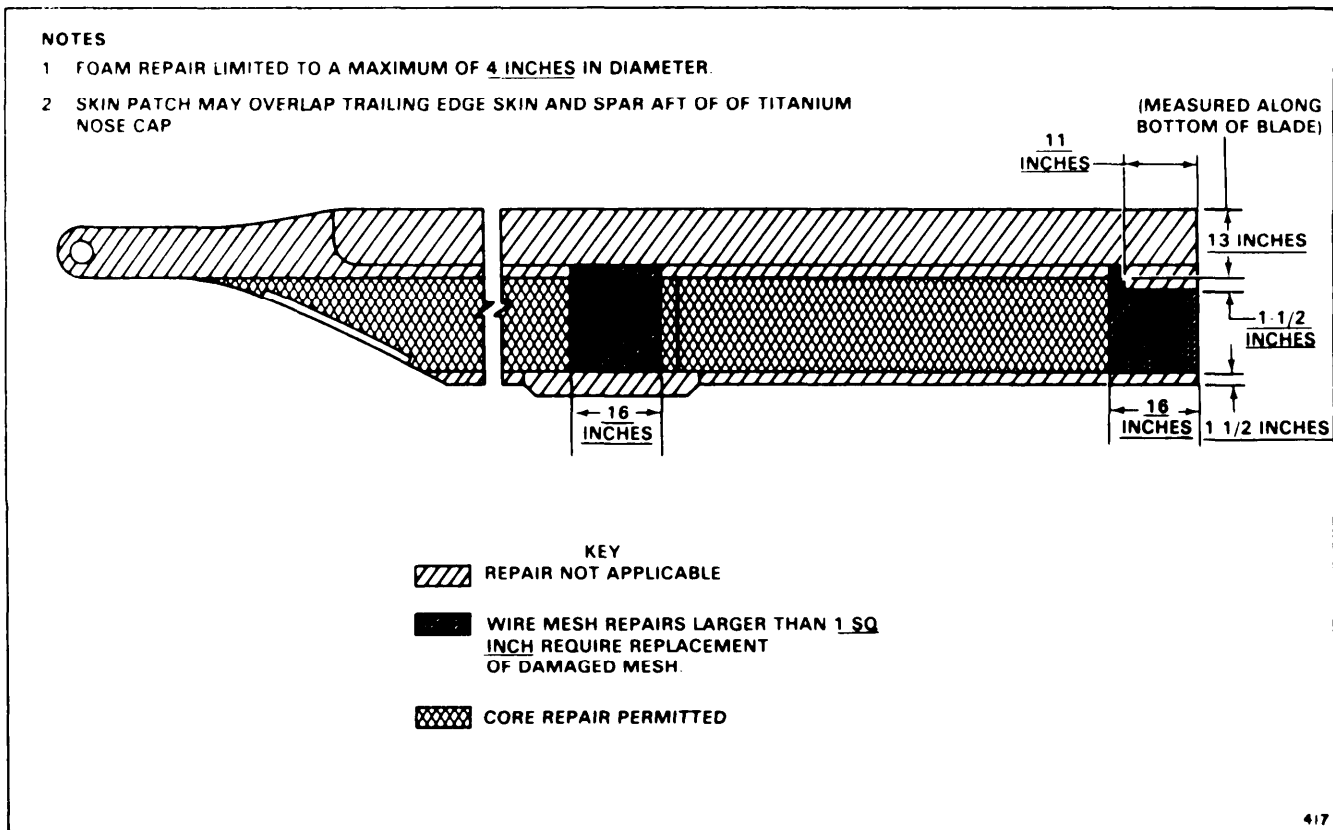

GO TO NEXT PAGE

## 5-69.1 REPAIR BLADE FAIRING — FOAM FILLER (Continued)

5-69.1

2. **Outline damage area (1).** Make circle or oblong outline (2). Damage removal area shall have no corners.

**CAUTION**


Do not wash contaminants into damage area if acetone (E20) is used to soften finish. Contaminants can prevent satisfactory repair.

3. **Remove finish 1 1/2-inches outside of outline (2)** around damage. Use sanding block and abrasive paper (E6). Use acetone (E20), if needed to soften finish. Complete finish removal. Use abrasive paper (E7). Do not sand through wire mesh.
4. If wire mesh diverter (3) must be replaced, expose wire mesh 1 1/2-inches outside of damage area.
5. **If router is not available, go to step 6 or 7.** If router is used to remove damaged skin, proceed as follows:
- Draw line (5) around outline (2).** Space outer line (5) so outer edge of router base (6) will follow it while router bit (7) follows outline (2). Use pencil compass and straightedge. If damage area (1) will not support compass point, cover area. Use template paper (E263) and masking tape (E388). Remove paper and tape.
  - Install router bit (7). Set depth to 0.020 inch.


**WARNING**

Wear goggles, respirator, and protective clothing when using router. Fiberglass particles will irritate eyes, lungs, and skin.

- Start router (4). Keep router under control. Use both hands.

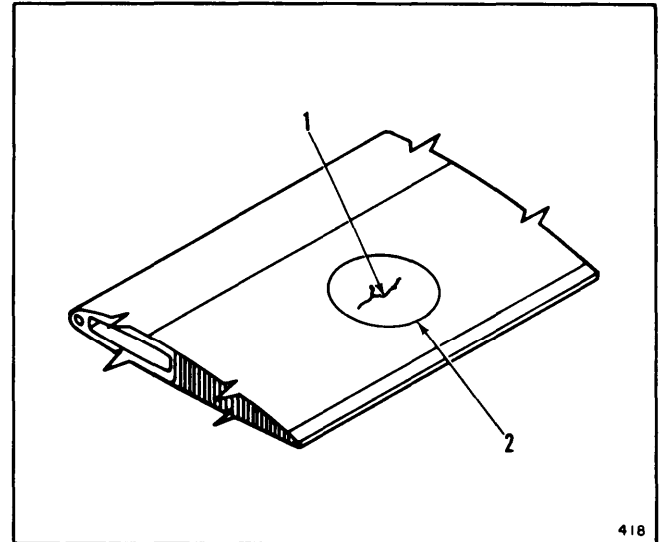

418

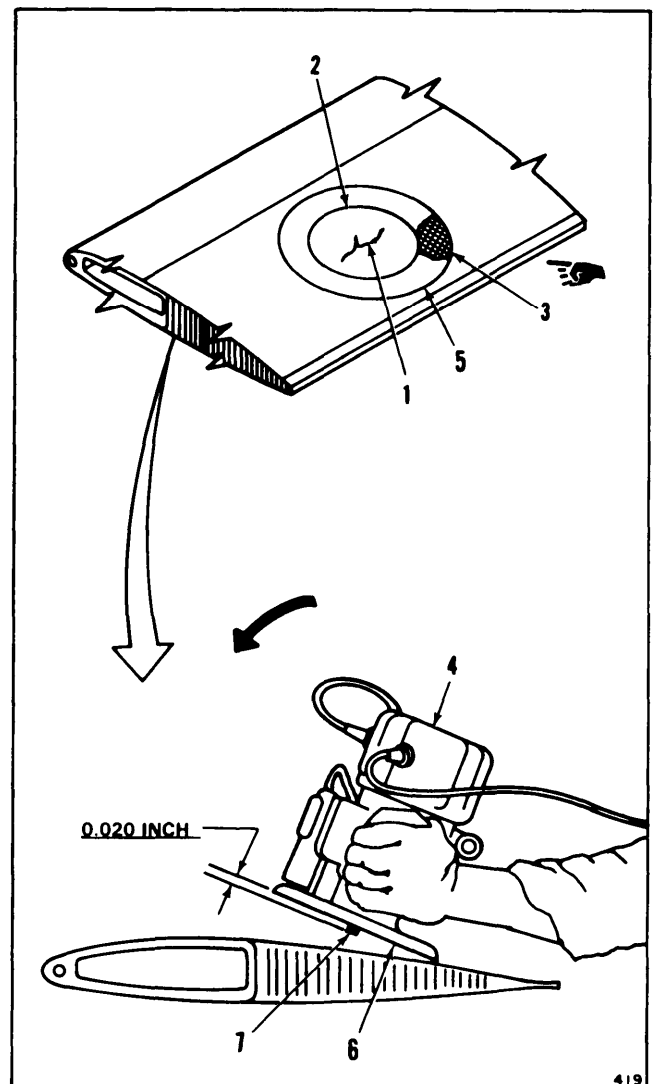

419

**GO TO NEXT PAGE**


- d. Rest edge of router base (6) on router guide line (5). Keep bit (7) above blade skin.
- e. Slowly lower bit (7) onto blade skin (8). Keep edge of router base (6) on guide line. Move router (4) counterclockwise.
- f. Complete cut and move router (4) to center of damage area (1). Turn router off and remove it.

6. **If hole saw is used to remove damaged skin (1), proceed as follows:**

- a. Use hole saw with center drill that does not extend more than 1/4-inch beyond saw.
- b. Position hole saw on guide line (5). Cut only deep enough to go through skin (8). Hold saw lightly against skin and turn slowly. Use wrench.

7. **If knife is used to remove damaged skin (1), make a series of punctures along guide line (2) until damaged skin is separated.**


8. **Peel off cut-out section of skin (8). Use pliers and chisel. Work from center outward. Prying against skin around repair will cause additional damage.**

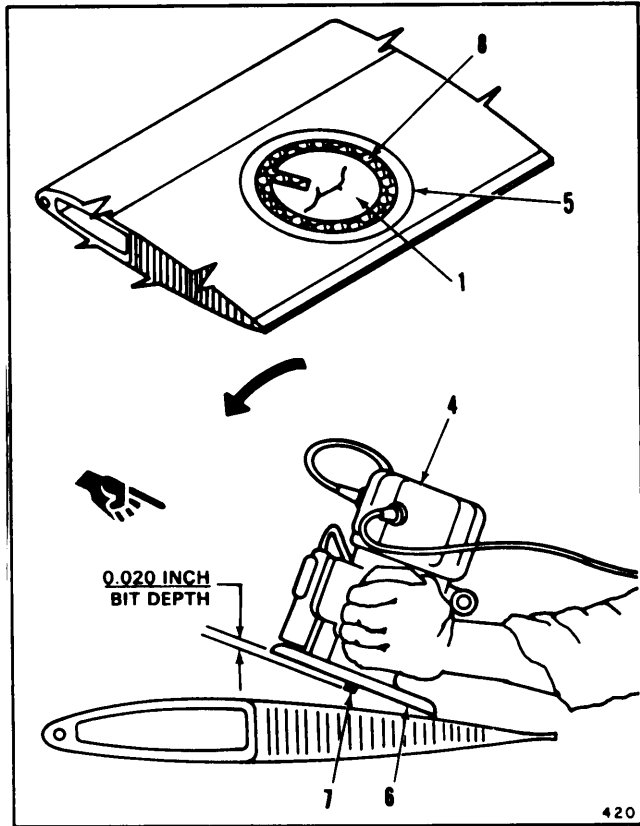

**CAUTION**

**Do not cut or score opposite skin when removing damaged core.**

- 9. **Cut through core (9) to opposite skin (10).** Use pen knife with blunt point. Cut only deep enough to separate damaged core.
- 10. **Remove damaged core (9).** Use pliers and chisel. Avoid damage to skin.
- 11. Clean cutout (10). Use vacuum cleaner.
- 12. Apply teflon tape (E399) (11) around cutout (10).

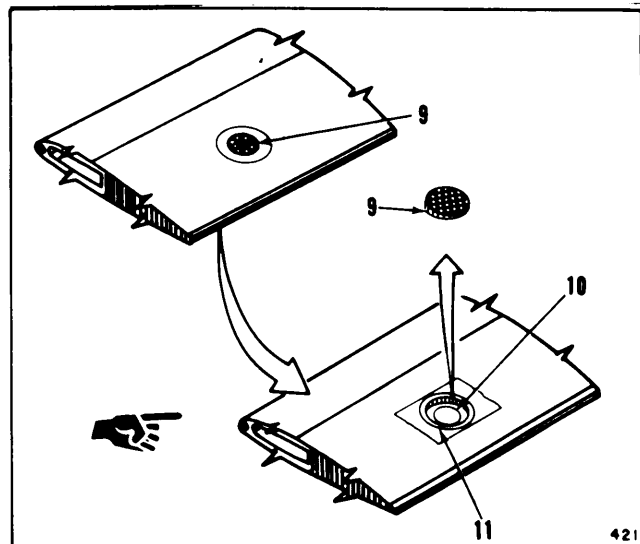

**5-69.1 REPAIR BLADE FAIRING — FOAM FILLER (Continued)****5-69.1**

13. Prepare and use a mixture of foam filler (E172.1) as follows:

**WARNING**

Foam ingredients give off toxic fumes. Skin contact can cause irritation. Work in a well-ventilated area. Wear goggles and protective gloves. In case of skin contact, wash immediately with soap and water.

**NOTE**


A total poured weight of 20 grams (0.75 ounce) will fill a 2-inch hole at the maximum blade thickness. The foam will expand to 8 times its original liquid volume.

- a. **Prepare a mixture of foam filler (E172.1).** Mix equal parts by volume of resin PEW and activator PEA in a polyethylene cup (E157). Stir vigorously for 15 seconds maximum. Use a wooden spatula (E24).

**NOTE**


Working life of the mixture is about 1 minute.

- b. **Pour mixture into cutout (10).** Allow it to expand and overflow.
- c. **Let expanded foam harden** for at least 30 minutes. When hard, cut off overflow (12) slightly above blade surface. Use a hacksaw blade.

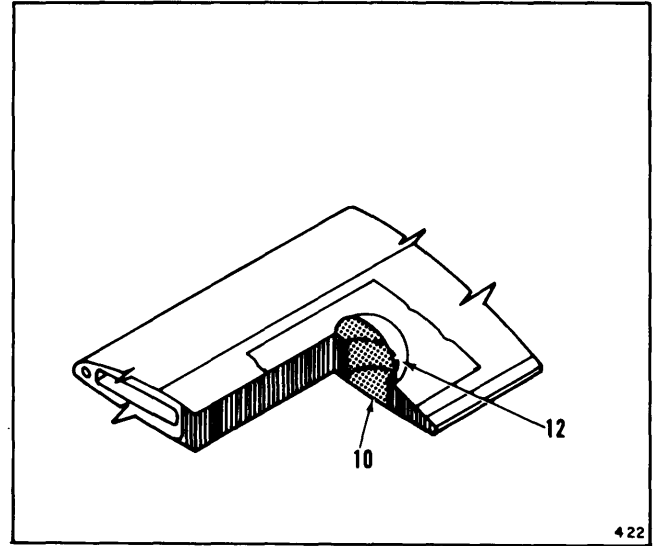**GO TO NEXT PAGE**



14. Bond a piece of 120 or 240-grit abrasive paper (E7 or E9) to a sanding block (13). Make the block about 2 inches wide and long enough to span the repair.
15. **Sand foam plug (14) flush** with blade surface to match blade contour. Use very light spanwise strokes.
16. Remove tape (11) from around repair.

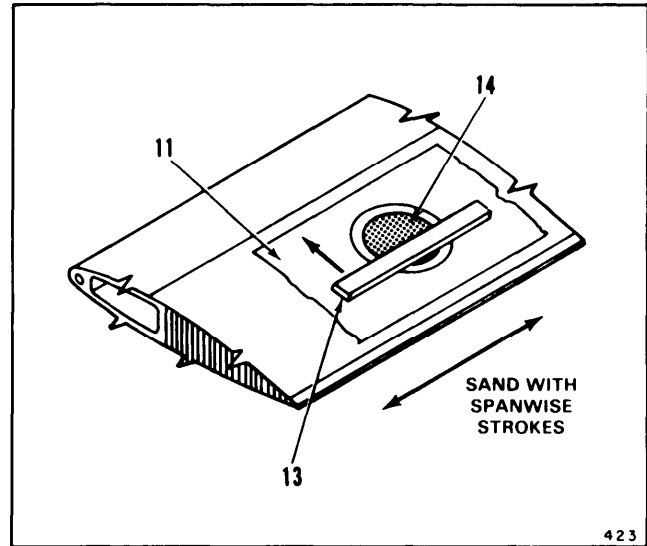

17. Prepare fiberglass skin patch (15) as follows:
  - a. **Cut patch (14) of fiberglass laminate (E168 or 168.1) 2 inches** larger than foam plug (14). Use scissors. Smooth rough edges by sanding.
  - b. Center patch (15) over foam plug (14). Check that finish has been removed at least 1/2-inch beyond patch.
  - c. Draw outline of patch (15) on blade surface.
  - d. **Lightly sand patch (15)** to remove surface glaze. Use 240-grit abrasive paper (E9). Remove peel ply from patch if necessary.

**NOTE**


Patch will not adhere if surface glaze is not removed.

- e. Put on protective gloves (E186). Gloves shall be worn during the remaining steps of this procedure.

**NOTE**

Do not soak blade with acetone. Use damp cloths only.

- f. **Clean patch (15) and bonding surface (16)** of blade. Use cloths (E120) damp with acetone (E20). Wipe acetone dry immediately. Use dry cloth (E120). Check patch and bonding surface to ensure that they are properly prepared.

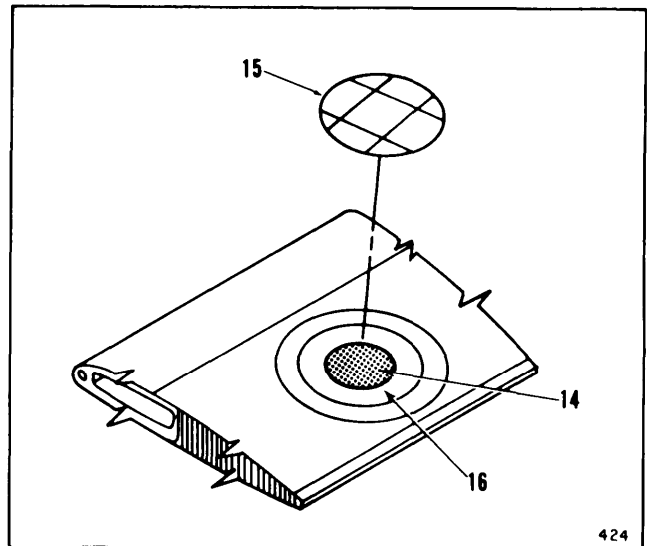

**INSPECT**

## 5-69.1 REPAIR BLADE FAIRING — FOAM FILLER (Continued)

5-69.1

**APPLY ADHESIVE****NOTE**


Prepackaged adhesive (E40) is preferred. Use adhesive (E41, E43 or E47.1) only if prepackaged kit is not available.

18. **Mix tube of adhesive (E40).** Follow instructions on kit.
19. If adhesive (E40) is not available, prepare adhesive (E41) as follows:
  - a. Weigh 100 parts of resin and 23 parts of hardener. Use trip balance.
  - b. Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).
20. If adhesive (E43) is used, prepare as follows:
  - a. Weight 7 parts of gray hardener and 5 parts of white base. Use trip balance.
  - b. Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).
21. If adhesive (E47.1) is used, prepare as follows:
  - a. Weigh equal parts of adhesive (E47.1) and curing agent (E158.1). Use trip balance.
  - b. Mix parts in polyethylene cup (E 157) until color is uniform. Use wood spatula (E424).

**NOTE**


Working life of adhesive is 30 minutes.

22. If fiberglass laminate (E 168.1) is used, place patch ( 15) so that the outer edges curl toward the blade.
23. **Apply adhesive (E40, E41, E43 or E47.1)** to bottom of patch (15). Use stiff brush.
24. **Apply adhesive to foam plug (14) and bonding surface (16).** Center patch over plug, within outline. Position patch with fibers at 45° to blade. Press onto skin (8). If wire mesh diverter damage is less than 1 square-inch, go to step 26.

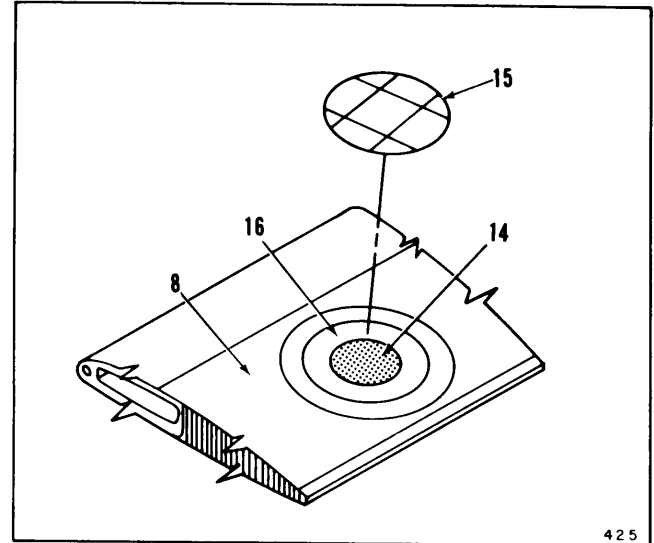**GO TO NEXT PAGE**

25. If wire mesh diverter damage is more than 1 square-inch, replace mesh (17) as follows:

- a. Cut a piece of mesh (E453) (17) to cover patch (15) and exposed mesh (18).
- b. Brush thin coat of adhesive (E40, E41, E43 or E47.1) over patch (15) and damaged mesh (18).
- c. Position mesh (E453) (17) over patch (15). Seat firmly.

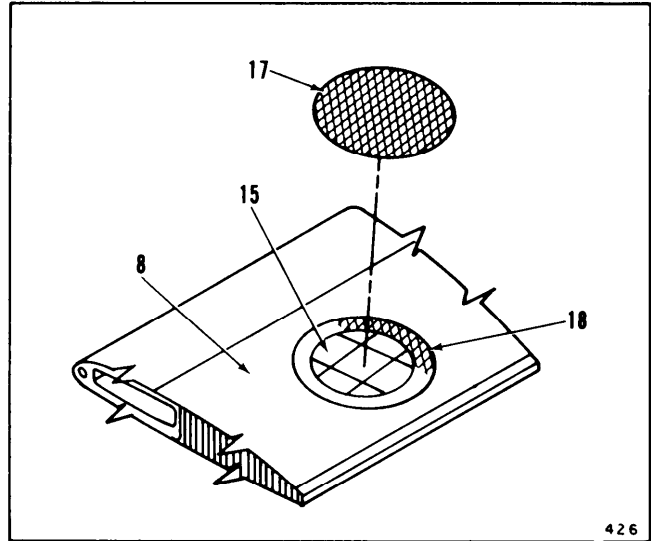


426

**BOND FAIRING REPAIR**

26. Bond fairing repair as follows:

- a. Cover repair with layer of peel ply (E270) (19) and layer of teflon-impregnated fabric (E170) (20). Make layers large enough to overlap patch (15) 1 inch.
- b. Cover teflon-impregnated fabric (20) with thick rubber pad (E318) (21).
- c. Cover repair area with fiberglass cloth (E132) (22). Cut cloth large enough to cover rubber pad (E318) (21).
- d. Surround cloth (E132) (22) with sealing tape (E396) (23). Keep tape clear of cloth.
- e. Attach tube (24) to vacuum pump hose.
- f. Wrap tube (24). Use two layers of fiberglass cloth (E132) (25). Apply masking tape (E388) over cloth.
- g. Position tube (24) on cloth (E132) (22) covering repair. Wrap tube with sealing tape (E396) (26) where tube crosses sealing tape (23) already applied.
- h. Press tube (24) onto tape (26) to make airtight seal.
- i. Press polyvinyl sheet (E284) (27) smoothly onto tape (23) to make airtight seal.

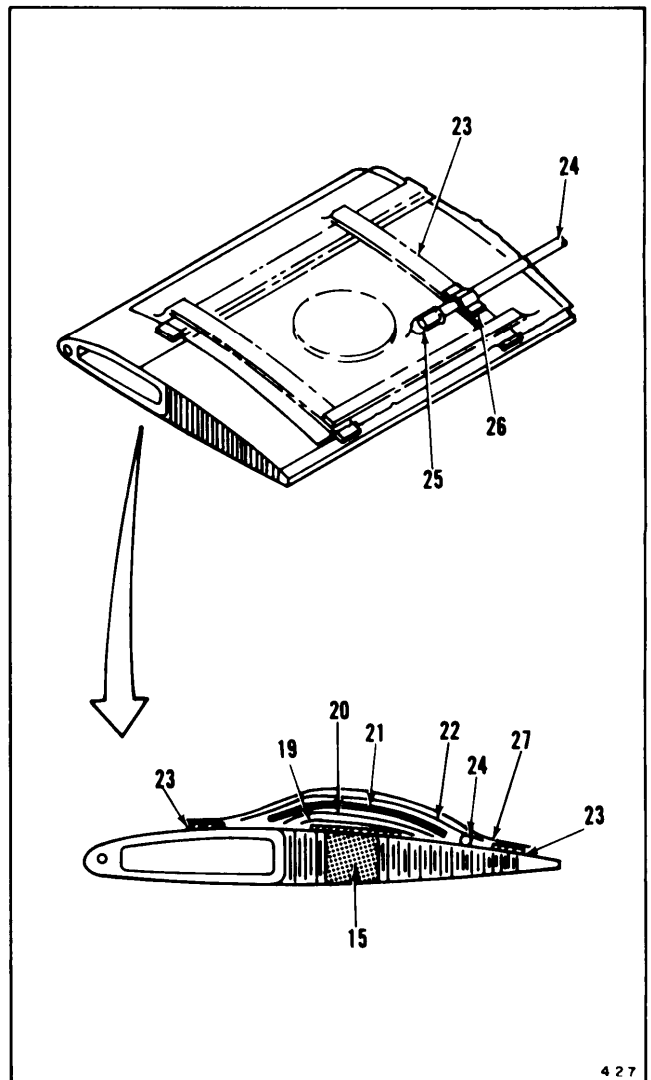

427

- j. Start vacuum pump. Check for leaks. Reposition polyvinyl sheet (E284) (27) or add tape (E396) (23) as needed.
- k. Maintain 20-inches Hg vacuum through adhesive cure.

**CAUTION**


**Do not exceed 160°F (71 C) at blade surface. Damage to fiberglass can occur.**

- l. Cure adhesive a 140° - 160°F (60° - 71 °C) 2 hours. Use heat lamp. Monitor temperature. Use temperature indicating strips (E413).

**NOTE**

Serviceable cure can be achieved without heat at 70° - 80°F (21° - 27°C) in 24 hours. Vacuum may be removed after 12 hours.

- m. Turn off vacuum pump.
- n. Remove peel ply (19), fabric (20), rubber (21), fiberglass (22), tape (23), tube (24), and sheet (27).
- o. If squeeze out fairing is not satisfactory, fair patch (15). Use adhesive (E40, E41, E43, or E47.1). Follow steps 18, 19, 20, or 21 to mix adhesive.

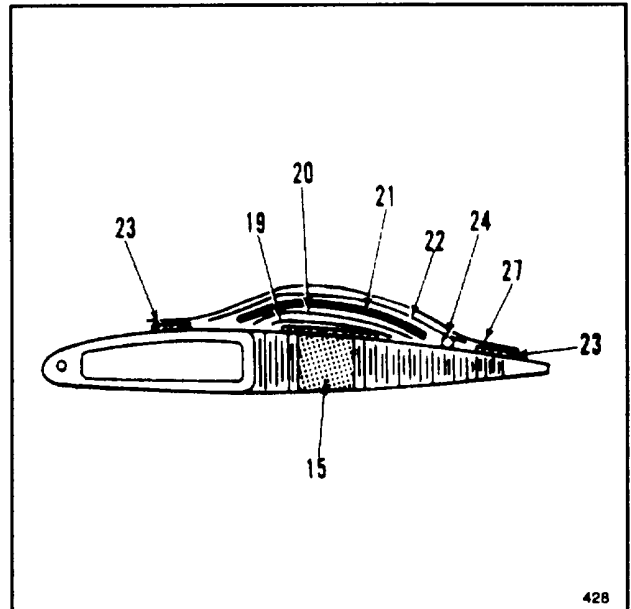

**INSPECT**

- 27. Find weight of repair in table. Record weight for blade tracking weight adjustment.

**NOTE**

All blade, weight adjustment, painting, or balancing will be recorded on rotor blade DA Form 2408-16, each blade requires a separate form. If the rotor blade does not have a DA Form 2408-16, one must be prepared and all actions recorded, as example; location of repair, size of repair, weight of repair, and required weight adjustments for track and balance.

**FOLLOW-ON MAINTENANCE:**

- Refinish repaired area (Task 5-82).
- Adjust blade tracking weights (Task 5-82.1).

		LENGTH (INCHES)		
		2	3	4
WIDTH (INCHES)	2	12 3 05	14 3.5 06	16 4 07
	3		17 4.5 05	20 5 08
	4			24 5 10

**EXAMPLE**

17 · WEIGHT OF BASE IN GRAMS  
 4.5 · WEIGHT OF HARDNER IN GRAMS  
 .05 · TOTAL WEIGHT OF REPAIR IN POUNDS

**END OF TASK**



**5-70 REPAIR BLADE FAIRING — DOUBLE SKIN**

5-70

**INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Airframe Repairer Tool Kit,  
NSN 5180-00-323-4876  
Sanding Block  
Pencil Compass  
Straightedge  
Router  
Router Bit, Four-Fluted, A2154108  
Vacuum Cleaner  
Hole Saw  
Vacuum Pump  
Protective Clothing  
Respirator  
Trip Balance,  
NSN 6670-00-401-7195  
Heat Lamp

**Materials:**


Wire Mesh (E453)  
Acetone (E20)  
Gloves (E186)  
Abrasive Paper (E6, E7, E9)  
Template Paper (E263)  
Masking Tape (E388)  
Teflon Tape (E399)  
Aluminum (E70)  
Cloth (E120)  
Adhesive (E40), or  
Adhesive (E41).  
Polyethylene Cup (E157)  
Wood Spatula (E424)  
Peel Ply (E270)  
Teflon-Impregnated Fabric (E170)  
Rubber Pad (E318)  
Glass Cloth (E130)  
Sealing Tape (E396)  
Polyvinyl Sheet (E284)  
Temperature Indicating Strips (E413)  
Fiberglass Laminate (E168 or E168.1)

**Personnel Required:**

Aircraft Structural Repairer  
Inspector

**Equipment Condition:**

Off Helicopter Task

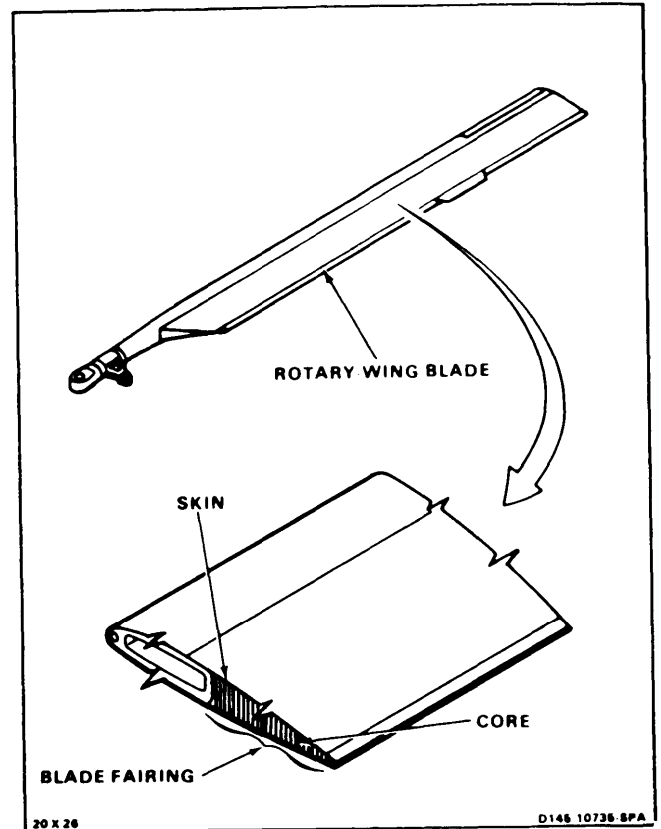**General Safety Instructions:****WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**

Adhesive (E40 or E41) is extremely flammable. It is volatile. It forms harmful vapors and explosive peroxides. Keep away from heat, sparks, or open flame. Avoid inhaling. Use only with adequate ventilation.

**WARNING**


Adhesive used in the manufacturing of some fiberglass rotor blades contain asbestos. During blade repair, strict adherence to all safety procedures when working with asbestos must be complied with (applies to blade serial number A-1-0001 to 1465 and A-241001 to 1473 only).

**NOTE**

Skin patch can overlap trailing edge skin and spar aft of titanium nose cap.


**PREPARE DAMAGED AREA**

1. Check location and extent of damage to one skin and full depth of core. Refer to **Fiberglass Skin Damage Repair Limits figure**. Skin and core below skin must be replaced where repairs are allowed.

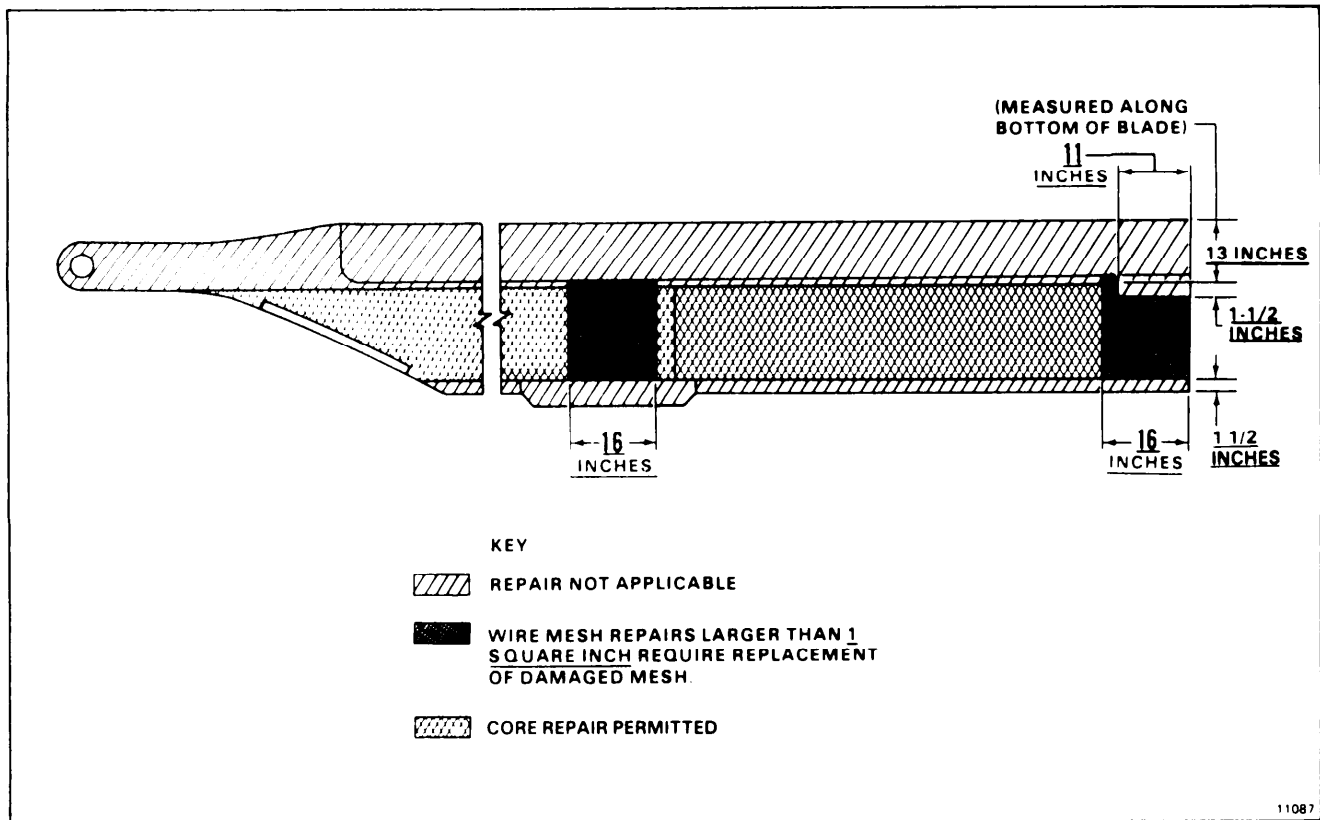

**5-70 REPAIR BLADE FAIRING — DOUBLE SKIN (Continued)****5-70**


2. Mark damage areas (1) on fairing (2). If damage areas vary in size, or are offset, proceed as follows:
  - a. Cover fairing (2) on side with greatest damage. Use template paper (E263) (3). Align one edge with trailing edge (4). Apply tape (E388) (5) as hinge.
  - b. Draw outline (6) of damaged area (1) on paper (E263) (3). Use pencil compass and straightedge, if needed.
  - c. Cut-out paper (E263) (3) on outline (6).
  - d. Flip paper (E263) (3) around to other side of fairing (2).
  - e. Check that cutout (6) covers damage area on other side of fairing (2). If not, enlarge cutout (6) as required.
  - f. Draw outline (7) of cutout (6) on both sides of fairing.

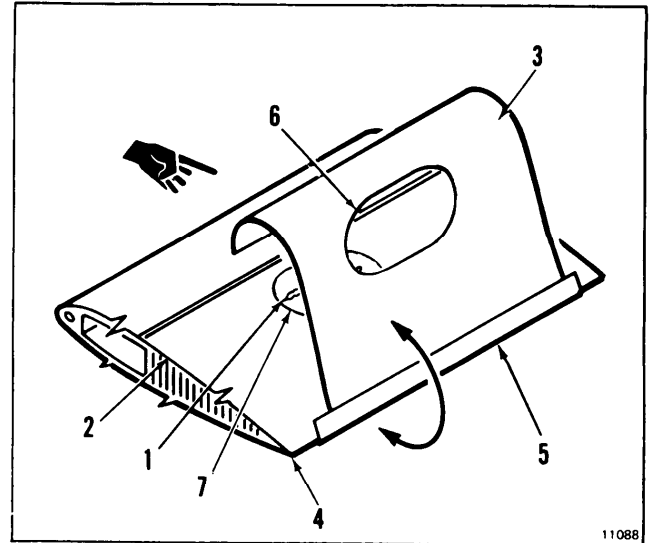

3. **Remove finish 1 1/2-inches outside of outline (7) around damage.** Use sanding block and abrasive paper (E6). Use acetone (E20), if needed to soften finish. Complete finish removal with abrasive paper (E7). Do not sand through wire mesh. Wear gloves (E186).
4. If wire mesh diverter must be replaced, expose wire mesh 1 1/2-inches outside of damaged area.
5. **If router (9) is used to remove damaged skin, proceed as follows:**
  - a. **Draw line (8) around outline (7).** Space outer line (8) so router base (10) will follow it while router bit (11) cuts along outline (7). Use pencil compass and straightedge. If damaged area (1) will not support compass point, cover area. Use template paper (E263) and masking tape (E388). Remove paper and tape.

**NOTE**

Using a 6 inch diameter router base and 1/2 inch bit, line (8) should be 2 3/4 inches outside of outline (7).

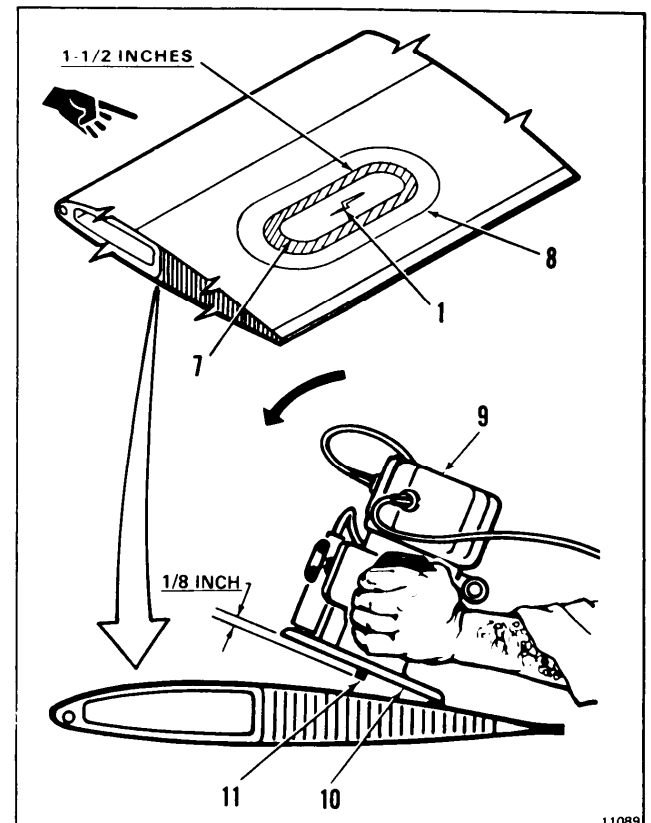**GO TO NEXT PAGE**




- b. Install router bit (11). Set depth to about 0.020 inch.

**WARNING**

**Wear goggles, respirator, and protective clothing when using router. Fiberglass particles will irritate eyes, lungs, and skin.**

- c. Start router (9). Keep router under complete control. Grasp handles using both hands.
- d. Rest edge of router base (10) on router guide line (8). Keep bit (11) above blade skin (12).
- e. Slowly lower bit (11) onto blade skin (12). Keep edge of router base (10) on guide line. Move router (9) counterclockwise.
- f. Complete cut and move router (9) to center of damaged area (1). Turn router off and remove it.

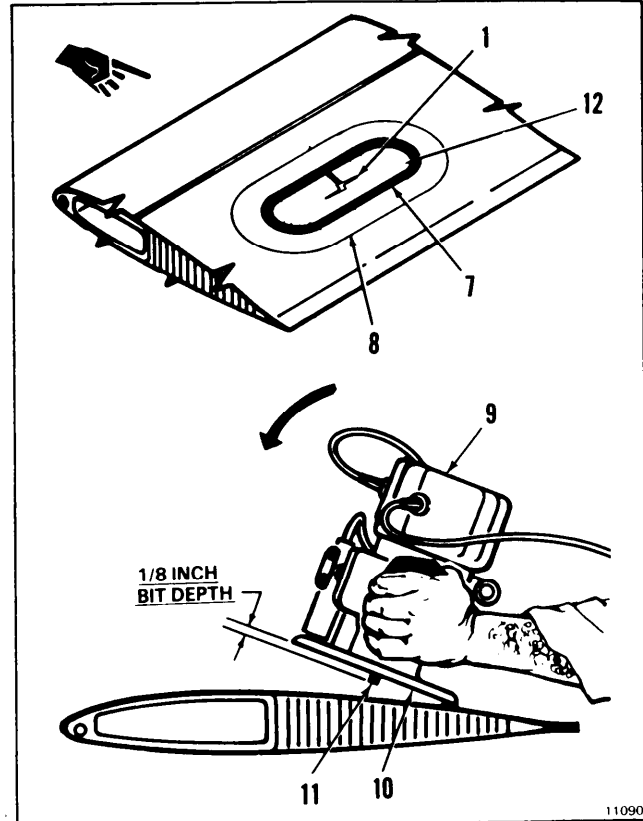


6. **If hole saw is used to remove damaged skin**, proceed as follows:
- Use hole saw with center drill that does not extend more than 1/4-inch beyond saw.
  - Position hole saw on guide line (7). Cut only deep enough to go through skin (12). Hold saw lightly against skin and turn slowly. Use wrench.
7. **If knife is used to remove damaged skin (12)**, make a series of punches through skin along guide line (7) until damaged skin is separated.
8. **Peel off cut-out section of skin (12)**. Peel from center of damage area (1). Do not pry against undamaged fairing skin. Use pliers and chisel.
9. Repeat steps 5, 6, or 7 for skin (12) on opposite side of blade.

**GO TO NEXT PAGE**

**5-70 REPAIR BLADE FAIRING — DOUBLE SKIN (Continued)****5-70**

10. Cut through core (13). Use pocket knife.
11. Remove core (13).

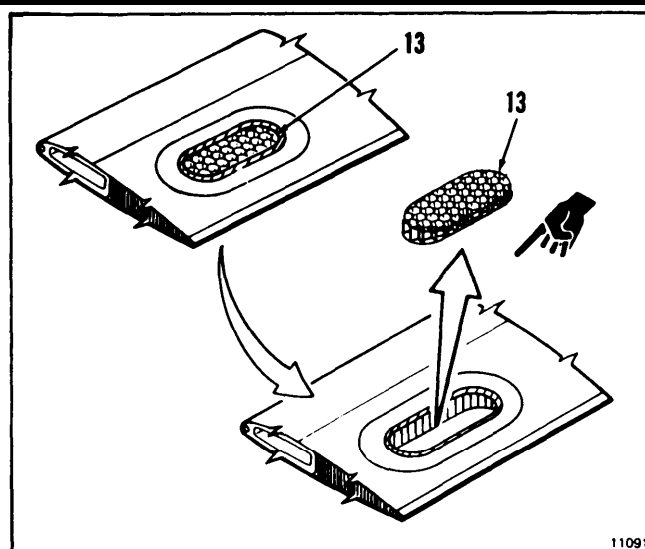
**GO TO NEXT PAGE**

Change 14

5-263

**PREPARE REPAIR MATERIALS**

12. Use core material (E145) in 3 pound density repair area. Use core material (E146) in 2 pound density repair area. Refer to **Fiberglass Blade Skin and Core Damage Repair Limits** figure.

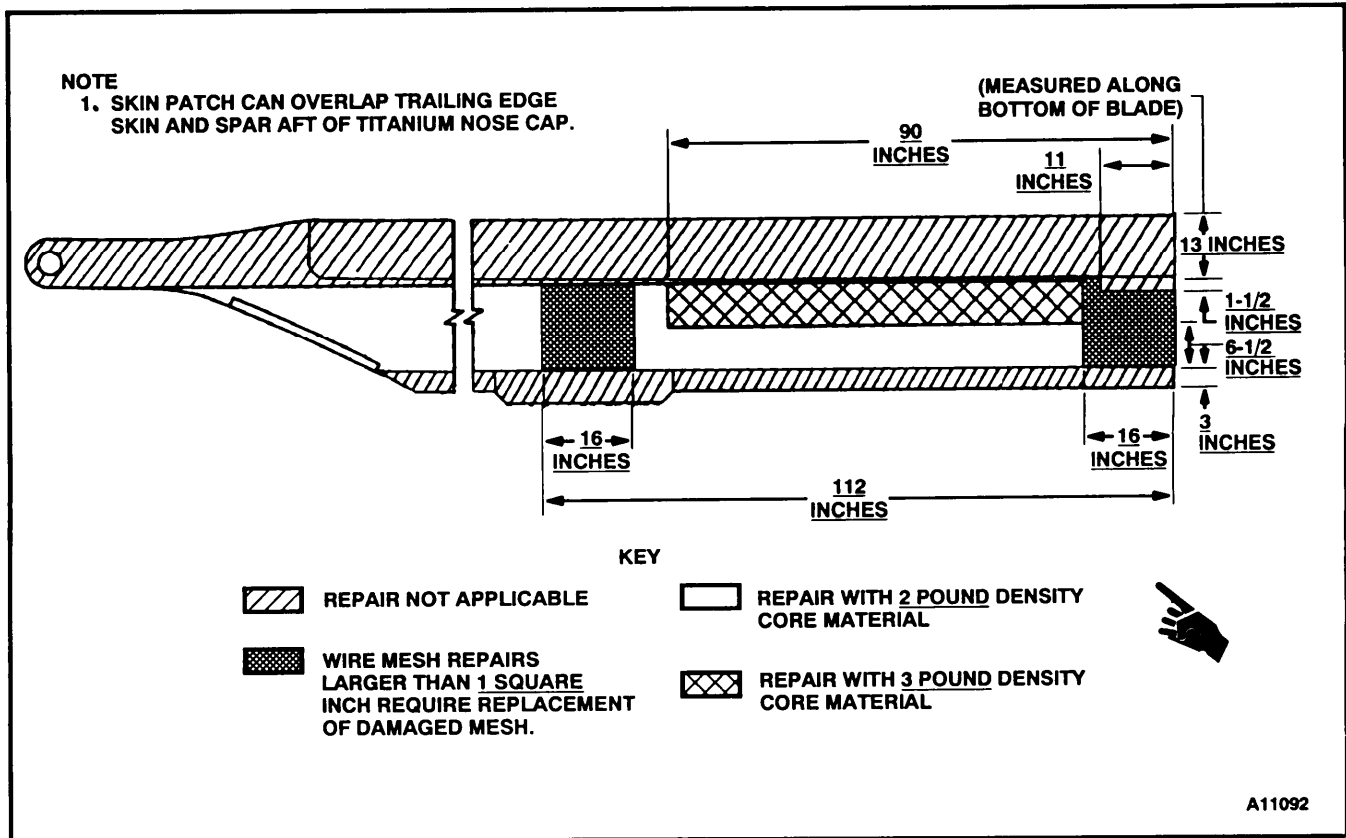


**5-70 REPAIR BLADE FAIRING — DOUBLE SKIN (Continued)****5-70**

13. **Position core material (E145 or E146) (14) on fairing (2) next to cutout (15).** Locate trailing edge (16) of core material 3-inches forward of blade trailing edge (4).
14. **Apply masking tape (E388) (17) to cover area of core material (E145 or E146) (14) slightly larger than cutout area.**
15. **Draw outline (18) on tape (E388) (17) in shape of cutout (15) and 1/8-inch larger.**

**NOTE**

Repair plug must have same contour as blade and be slightly larger than cutout .

16. **Cut core material (E145 or E146) (14) on tape outline (18) with knife.** Remove tape (E388) (17).
17. **Position core (19) in cutout (15).** Check that core fits tight and projects above and below skin (12) at all points.
18. **Remove core (19) from cutout (15).**

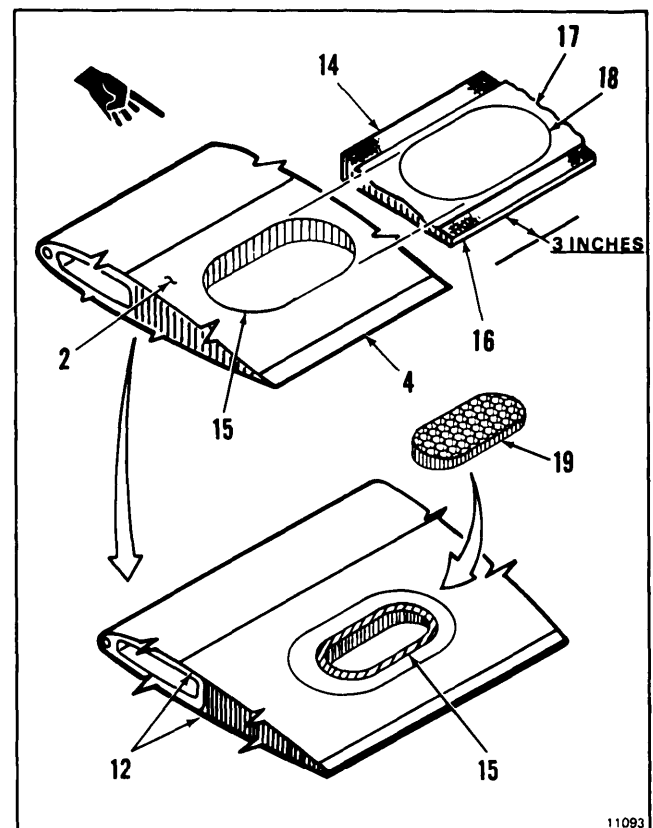**GO TO NEXT PAGE**

19. Prepare two skin patches (20) as follows:

- Position fiberglass laminate (E168) or (E168.1) (21) over cutout (15) with fibers at 45 degrees to chord.
- Draw outline of cutout (15) on fiberglass laminate (E168) (21). Remove laminate. Draw outline (22) 1-inch larger than cutout outline on fiberglass laminate. Use pencil compass and straightedge.
- Cut skin patches (20) with scissors. Smooth rough edges with abrasive paper (E7).
- If fiberglass laminate (E168.1) is used, remove peel ply from surfaces of patches (20). Clean with acetone (E20). Wipe dry with clean cloth (E120).
- Sand patches (20) lightly. Use abrasive paper (E9).

**NOTE**


Patch will not adhere if surface glaze is not removed.

- Check that patches (20) are 1-inch larger than cutout (15) on all sides. Check that blade surface finish is removed 1/2-inch around patches.
- Trace patch outline (23) onto blade skin (12).

**NOTE**


These outlines will be used when applying adhesive and for positioning patches for bonding.

- Tape patch (20) on bottom of fairing (2). Use masking tape (E388) (24).

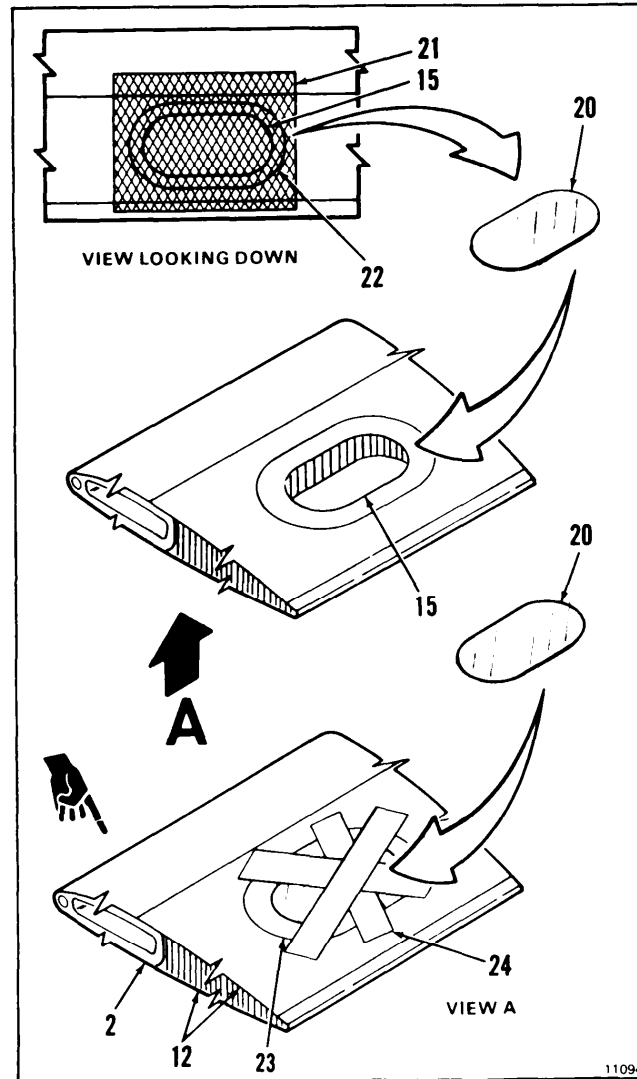

**5-70 REPAIR BLADE FAIRING — DOUBLE SKIN (Continued)****5-70**

20. Insert core (19) in cutout (15). Seat it firmly on bottom patch (20). Be careful not to push patch away from lower skin (12).
21. Bond a piece of abrasive paper (E7) to a sanding block about 2 inches wide and long enough to span the repair in a spanwise direction,
22. Apply teflon tape (E399) (25) around area of finish removal.
23. Using spanwise strokes, sand core (19) to height of tape (E399) (25). Do not push down too hard. If necessary, support lower patch (20) with hand.
24. Remove tape (E399) (25) and lower patch (20).
25. Index core (19) and skin (12). Remove core.

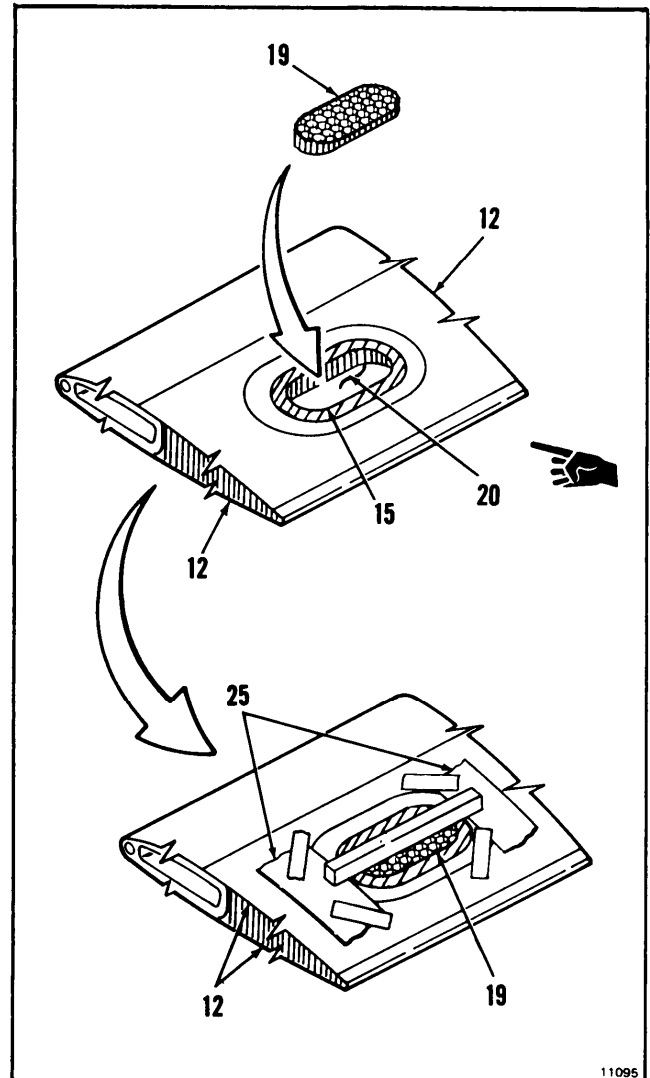

11095

**GO TO NEXT PAGE**

26. Wear gloves (E186). Clean cutout (15), patches (20) and skin (12) where finish was removed. Use cloth (E120) damp with acetone (E20). Wipe dry with clean cloth (E120). Do not remove gloves.

**INSPECT****APPLY ADHESIVE****NOTE**

Prepackaged adhesive (E40) is preferred. Use adhesive (E41) only if prepackaged kit is not available,

27. **Mix tube of adhesive (E40).** Follow instructions on kit.

**CAUTION**


**Weigh and mix adhesive and resin accurately to produce acceptable bond.**

28. If adhesive (E40) is not available, prepare adhesive (E41) as follows:
- Weigh 100 parts of resin, and 23 parts of hardener. Mix in polyethylene cup (E157) until color is uniform. Use wood spatula (E424). Wear gloves (E186).

**NOTE**


Working life of adhesive is 30 minutes.

29. Apply adhesive (E40 or E41) to one patch (20) and 1-inch wide area (26) around cutout (15). Use stiff brush, Wear gloves (E186). If fiberglass laminate (E168.1) is used, apply adhesive so edges of patch curl toward blade.

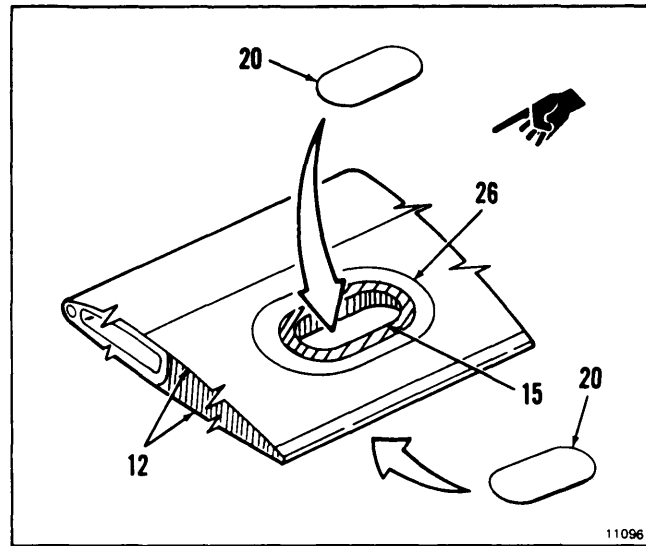


**5-70 REPAIR BLADE FAIRING — DOUBLE SKIN (Continued)****5-70**


30. Position patch (20) over cutout. Center patch on adhesive coat. Position patch with fibers at 45 degrees to blade chord. Press firmly onto skin (12).
31. Tape patch (20) in place. Use teflon tape (E424) (27).

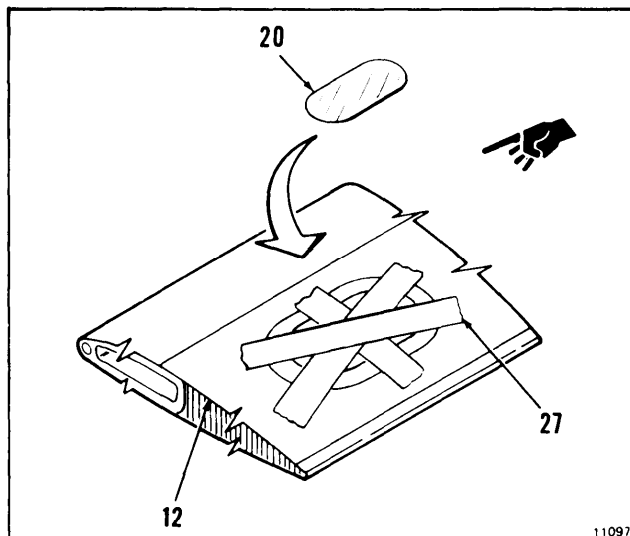

32. **Apply adhesive (E40 or E411)** to honey-comb sides of cutout (15). Use stiff brush. Wear gloves (E186).
33. **Align match marks on core (19) and skin (12).** Insert core until seated on bottom patch. Check that core is flush with skin.
34. **Put on gloves (E186). Apply adhesive to core (19), blade skin area (26), where finish was removed, and one side of patch (20).** Center patch over insert, within outline. Position patch with fibers at 45 degrees to blade chord. Press onto skin (12).

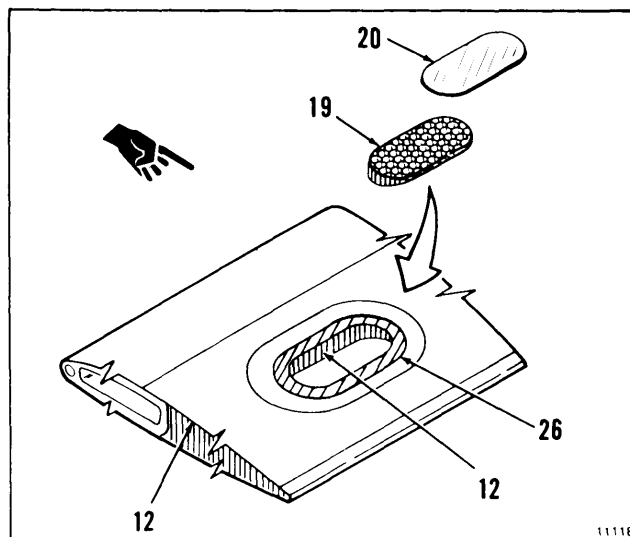

35. If wire mesh diverter damage is less than 1 square-inch, go to step 36. If wire mesh diverter damage is more than 1 square-inch, replace mesh as follows:
  - a. Cut piece of mesh (E453) (28) to cover patch (20) and exposed mesh (29).
  - b. Brush thin coat of adhesive (E40 or E41) over patch (20) and damaged mesh (29). Wear gloves (E186).
  - c. Position mesh (E453) (28) over patch (20). Seat firmly. Brush more adhesive over mesh. Fair adhesive to blade skin (12).

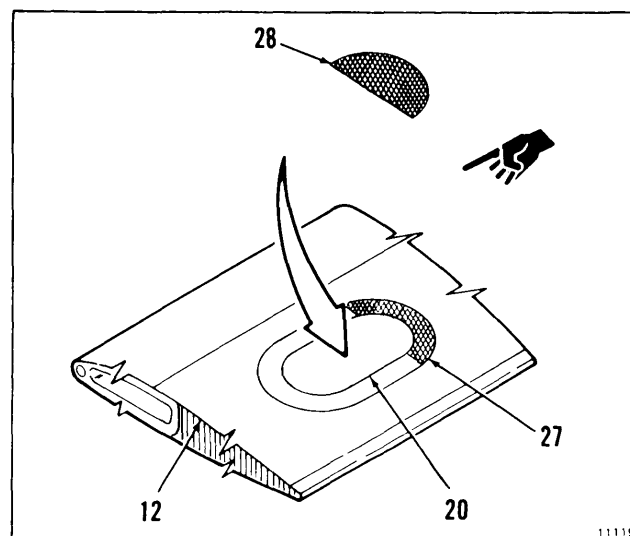**GO TO NEXT PAGE**




**BOND FAIRING REPAIR**

36. Bond fairing repair as follows:

**NOTE**

Wear gloves (E 186) for all steps.

- a. Cover repairs with layers of peel ply (E270) (30) and layers of teflon-impregnated fabric (E170) (31). Make layers large enough to overlap patch 1 inch.
- b. Cover teflon-impregnated fabric (E170). Use thick rubber pad (E318) (32).
- c. Cover repair areas. Use fiberglass cloth (E130) (33). Cut cloth large enough to cover rubber pad (E318) (32). Overlap cloth over trailing edge onto opposite patch.
- d. Border cloth (E130) (33) on three sides with sealing tape (E396) (34). Keep tape clear of cloth. Apply tape around trailing edge to other side.
- e. Attach two tubes (35) to vacuum pump hose.
- f. Wrap each tube (35). Use two layers of fiberglass cloth (E130) (36). Secure cloth to tube with masking tape (E388).
- g. Position one tube (35) on cloth (E170) (33) covering repair on top and bottom of blade. Wrap each tube with sealing tape (E388) (37) where tube crosses sealing tape already applied.
- h. Press tubes (35) onto tape (34) to make airtight seal.
- i. Press polyvinyl sheet (E284) (38) smoothly onto tape (34) to make airtight seal.

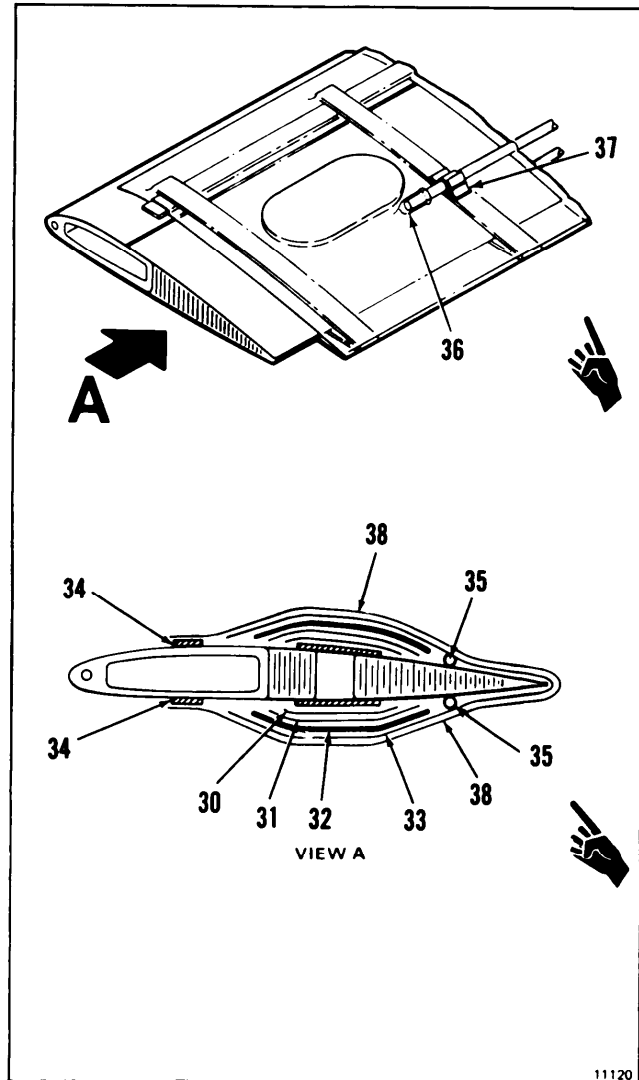

11120

- j. Start vacuum pump. Check for leaks. Reposition polyvinyl sheet (E284) (38) or add tape (E396) (34) as needed.
- k. Maintain 20-inches Hg vacuum through adhesive cure.

**CAUTION**

**Do not exceed 160°F (71°C) at blade surface. Damage to fiberglass can occur.**

- l. Cure adhesive a 140°F - 160°F (60°C = 71°C) 2 hours. Use heat lamp. Monitor temperature. Use temperature indicating strips (E413).


**NOTE**

Serviceable cure can be achieved without heat at 70°F - 80°F (21°C - 27°C) in 24 hours. Vacuum may be removed after 12 hours.

- m. Turn off vacuum pump.
- n. Remove sheet (38), tubes (35), tape (34), fiberglass (33), rubber (32), fabric (31), and peel ply (30).
- o. If squeezeout fairing is not satisfactory, fair patch (15). Use adhesive (E40, E41, E43, or E47.1). Follow steps 18, 19, 20, or 21 to mix adhesive.

**NOTE**

All blade repairs, weight adjustment, painting, or balancing will be recorded on rotor blade DA Form 2408-16, each blade requires a separate form. If the rotor blade does not have a DA Form 2408-16, one must be prepared and all actions recorded, as example; location of repair, size of repair, weight of repair, and required weight adjustments for track and balance.

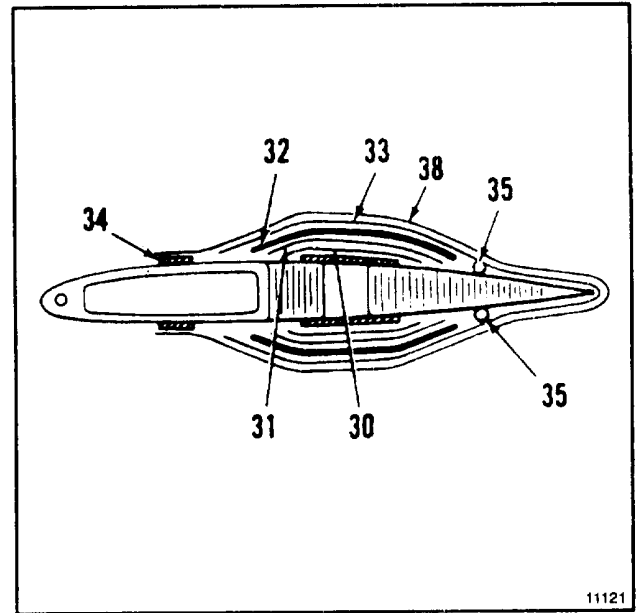

**GO TO NEXT PAGE**

5-70 REPAIR BLADE FAIRING — DOUBLE SKIN (Continued)


37. Find weight of repair. Use adhesive weight for double skin core repairs.

Record weight for blade tracking weight adjustment.

Table 13.4. Adhesive Weight for Double Skin Core Repairs

		Length (inches)												
A \ B	2	4	6	8	10	12	14	16	18	20	22	24	26	
Width (inches)	2	17 4 .08	24 6 .12	32 8 .15	41 9 .18	48 11 .21	56 13 .24	64 15 .28	72 16 .31	80 18 .34	88 20 .37	95 22 .40	104 23 .43	111 26 .46
	3		30 7 .14	40 9 .18	50 11 .22	59 14 .25	69 16 .29	79 18 .33	88 21 .36	98 23 .40	108 25 .44	118 28 .49	128 30 .51	138 32 .54
	4		35 8 .16	46 11 .20	58 14 .25	70 16 .29	82 19 .33	94 21 .38	106 24 .41	118 26 .45	129 30 .50	140 33 .54	153 35 .58	164 38 .62
	5			52 12 .23	66 16 .27	80 19 .32	95 21 .37	108 23 .40	122 28 .47	136 31 .53	150 34 .56	163 38 .61	177 41 .66	191 44 .71
	6			58 14 .25	74 17 .31	90 21 .36	104 24 .41	122 28 .46	138 31 .51	152 36 .57	169 39 .62	176 42 .67	200 46 .72	216 50 .78
	7				81 19 .34	110 22 .39	117 27 .48	135 31 .51	153 35 .57	170 39 .62	188 43 .66	205 45 .71	224 51 .79	241 55 .81
	8				89 20 .36	108 25 .46	128 29 .49	148 34 .54	166 40 .61	187 43 .64	206 48 .74	226 52 .80	247 56 .86	266 61 .93
	9					117 27 .46	139 32 .52	160 37 .59	182 42 .66	203 47 .73	225 52 .79	247 57 .84	269 61 .93	291 66 1.00
	10					125 29 .49	149 34 .56	173 39 .63	196 45 .70	220 51 .78	244 56 .85	278 61 .93	291 67 1.00	314 73 1.08
	11						158 37 .59	184 42 .67	209 49 .75	235 54 .83	261 60 .97	286 66 .99	312 72 1.06	337 78 1.15
	12						168 38 .63	195 45 .71	222 52 .80	251 57 .88	278 64 .96	306 70 1.04	333 76 1.13	360 83 1.22
	13							206 47 .75	236 54 .83	265 62 .92	295 67 1.02	325 74 1.11	354 81 1.20	383 88 1.28
	14							217 50 .77	248 57 .88	280 64 .97	311 72 1.07	349 80 1.18	374 86 1.26	406 93 1.35
	15								259 60 .92	293 68 1.02	327 75 1.12	361 82 1.22	393 91 1.31	427 99 1.42

Example:  
 217 - Weight of Base in Grams  
 50 - Weight of Hardner in Grams  
 .77 - Total Weight of Repair in Pounds

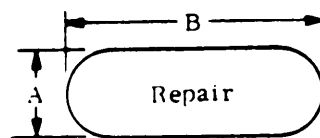

42 X 51

D145-10751-SPA

FOLLOW-ON MAINTENANCE:

Refinish repaired area (Task 5-82).

Adjust balance weights (Task 5-82.1)

END OF TASK

5-272 Change 14

**5-71 REPAIR TRAILING EDGE-MINOR DAMAGE****5-71****INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876  
Heat Lamps  
Trip Balance, NSN 6170-00-401-7195

**Materials:**

Abrasive Paper (E7 and E9)  
Cloth (E120)  
Acetone (E20)  
Polyethylene Cup (E157)  
Wood Spatula (E424)  
Peel Ply (E270)  
Teflon-Impregnated Fabric (E170)  
Aluminum (E70)  
Masking Tape (E388)  
Adhesive (E43 or E47.1)  
Curing Agent (E158.1)  
Temperature Indicating Strips (E413)  
Naphtha (E245)  
Deleted  
Plastic Squeeze Bottle (E366)  
Gloves (E184.1)

**Parts:**

Shim Stock, 0.005-Inch

**Personnel Required:**


Aircraft Structural Repairer  
Inspector

**References:**

TM 55-1520-240-23P  
Task 5-67.2  
Task 5-82

**Equipment Condition:**

Off Helicopter Task

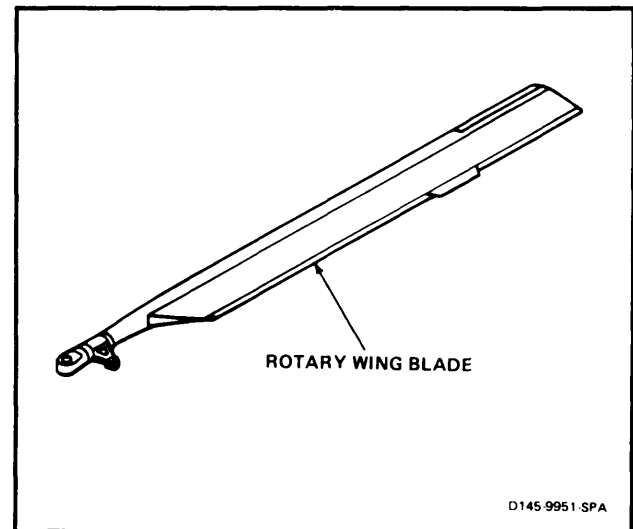
**GO TO NEXT PAGE**

**NOTE**

- Procedure is same to repair trailing edge minor damage on any rotary-wing blade.
- There is no limit to spanwise length of repair.

**BLEND REPAIRS**

1. Blend cracks, nicks, or gouges less than 0.010 inch deep. Use abrasive paper (E7).
2. Repair cracks, nicks, or gouges greater than 0.010 inch deep as fairing skin (Task 5-67.2).
3. Touch up finish on repaired area (1) (Task 5-82). Wear gloves (E184.1).

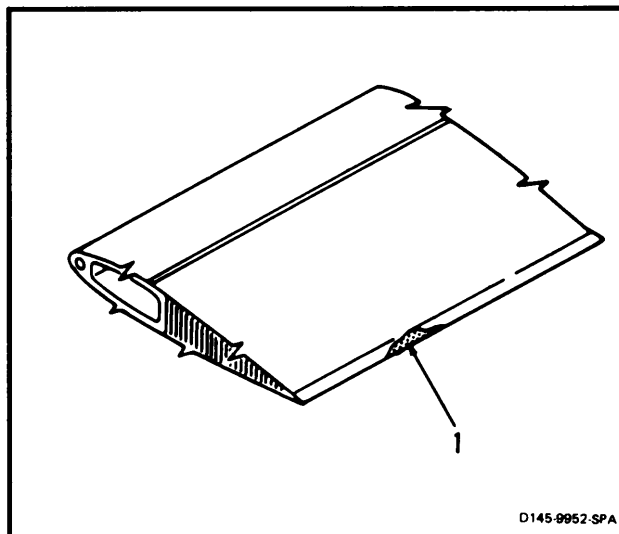

D145-9952-SPA

**REPAIR DELAMINATIONS**

4. Position blade with trailing edge (2) lower than leading edge (3).

**WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

5. Fill plastic squeeze bottle (E366) with acetone (E20).
6. **Flush delaminated area (4)** to wash out dirt. Use acetone (E20) Flush until acetone is free of contamination Check that area is clean.

**WARNING**

Adhesive (E47.1 or E43) is toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

7. **Prepare** small quantity of adhesive (E47.1 or E43) as follows
  - a. For adhesive (E47.1), weigh equal parts of adhesive (E47.1) and curing agent (E158.1). Use trip balance.
  - b. For adhesive (E43), weigh 7 parts of gray hardener and 5 parts of white base. Use trip balance.
  - c. Mix in polyethylene cup (E157). Use wood spatula (E424).

**NOTE**

Working life of adhesive (E47.1 or E43) is about 30 minutes.

8. **Work adhesive mix into delaminated area (4)**. Use 0.005 inch shim stock.
9. **Bond repair area** as follows:
  - a. Cover repair area. Use layer of peel ply (E270) (5) followed by layer of teflon-impregnated fabric (E170) (6). Cut both large enough to wrap around trailing edge and overlap repair 1 inch.

**GO TO NEXT PAGE**

- b. Cut two pieces of wood or aluminum sheet (E70) (7). Position sheet on each side of repair. Clamp in place using moderate pressure.

**CAUTION**

Do not heat blade surface over **160°F (71°C)**. Higher temperature can damage blade surface.

- c. Cure adhesive 2 hours at 140°F to 160°F (60°C to 71°C). Use heat lamp. Monitor blade temperature. Use temperature indicating strips (E413).

**NOTE**

Adhesive may be cured for 24 hours at 70°F to 80°F (21°C to 27°C).

10. After repair is cured, remove wood or aluminum sheets (7), and teflon-impregnated fabric (5).
11. **Blend repaired area** into blade surface. Use abrasive paper (E9).


**WARNING**

**Naphtha (E245) is combustible and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.**

12. **Clean repaired area.** Use cloth (E120) damp with naphtha (E245). Wear gloves (E184.1). Wipe dry before naphtha evaporates.
13. **Touch up finish on repaired area (Task 5-82).**

FOLLOW-ON MAINTENANCE:

None

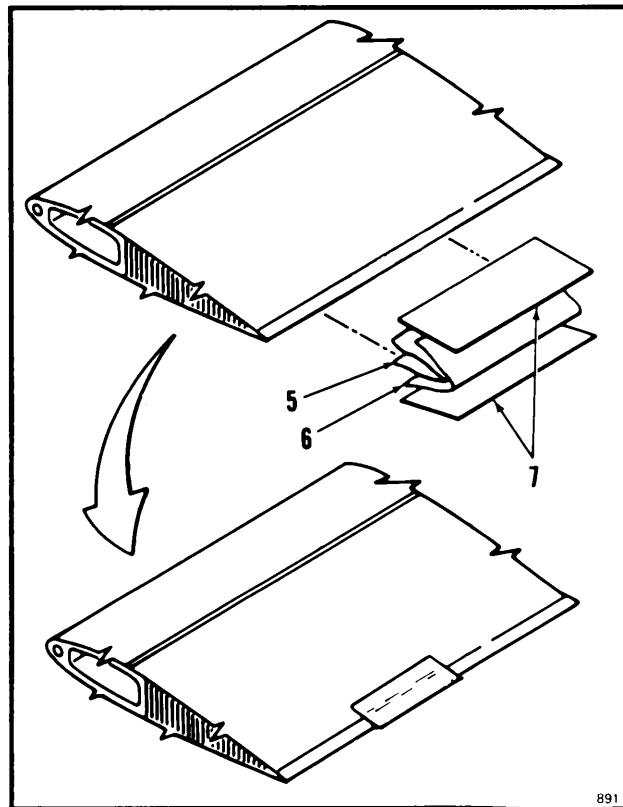

891

END OF TASK

5-276 Change 32

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876  
Trailing Edge Bonding Fixture (T116)  
Saber Saw  
Sanding Block

■ Trip Balance NSN 6670-00-401-7195

**Materials:**

Masking Tape (E388)  
Abrasive Paper (E7 and E9)  
Acetone (E20)  
Trailing Edge Material (E284)  
(Part of Blade Repair Kit 114RK651)  
Fiberglass Laminate (E168) or (E168.1)  
Gloves (E186)

■ Teflon Tape (E399)  
■ Adhesive (E40, E41, E43, or E47.1)  
Polyethylene Cup (E157)

■ Wood Spatula (E424)  
Temperature Indicating Strips (E413)  
Sealant (E336)  
Polyvinyl Sheet (E284)

■ Curing Agent (E158.1)

**Personnel Required:**

Medium Helicopter Repairer (6)  
Aircraft Structural Repairer  
Inspector

**Equipment Condition:**


Off Helicopter Task

**General Safety Instructions:****WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**

Adhesive (E40) is toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

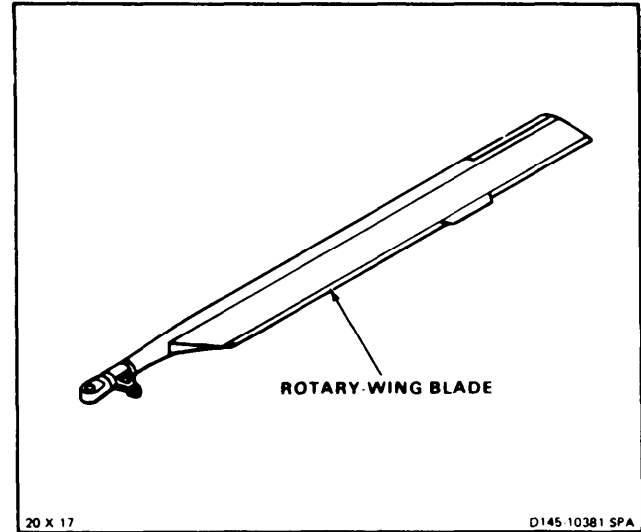**GO TO NEXT PAGE**



**WARNING**

Adhesive used in the manufacturing of some fiberglass rotor blades contain asbestos. During blade repair, strict adherence to all safety procedures when working with asbestos must be complied with (applies to blade serial number A-1-0001 to 1465 and A-2-0001 to 1473 only).

**NOTE**

There is no limit to the number of repairs that can be made. Minimum edge-to-edge distance between repairs shall be 6 inches.

**1. Check location and size of major damage to trailing edge (1).**

- a. Repairable damage of trailing edge (1) shall not exceed 1-1/4 inches chordwise. Spanwise damage is not limited.
- b. Damage greater than 1-1/4 inches chordwise requires rejection of the rotor blade.

**2. Mask damaged area (2) as follows:**

- a. Apply tape (E388) (3) spanwise 3 inches from trailing edge (1).
- b. Apply tape (E388) (4) chordwise 2 inches from edges of damaged area (2).




3. Remove finish from area inside tapes (E388) (3 and 4). Use abrasive paper (E7) and sanding block. Soften finish, if needed. Use acetone (E20). Remove tapes (3 and 4). Wear gloves (E186).

4. Have helpers turn blade (5) upside down.

5. **Draw rectangle outline around damaged area (2).** Do not exceed dimensions in step 1.

**CAUTION**

Do not cut forward of guide line around damaged area. Cutting chordwise farther than line will damage blade structure and require rejection of the blade.

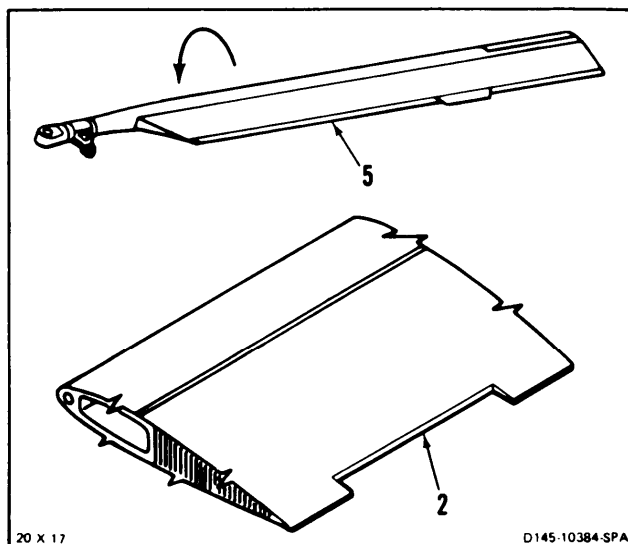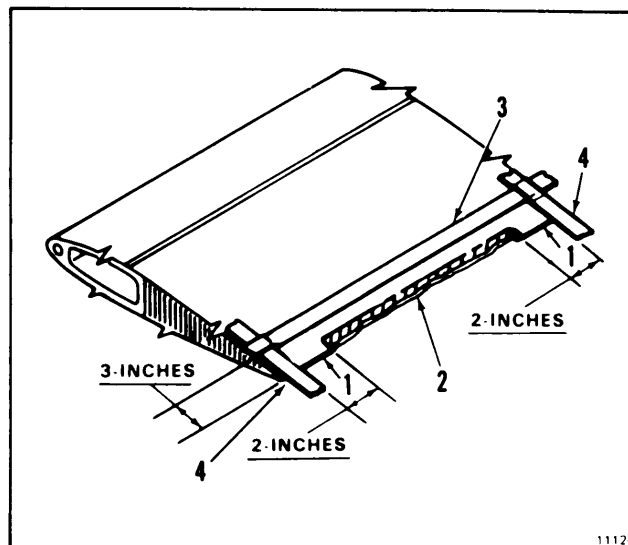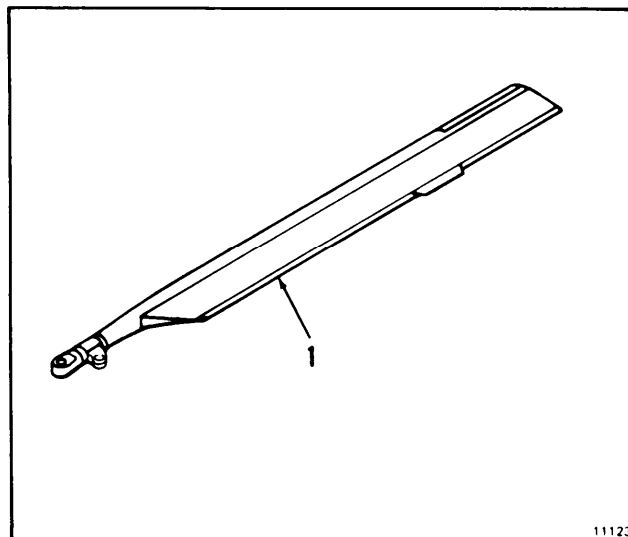

6. Cut inside guide line to **remove damaged area (2)**. Use a saber saw or hacksaw.

**GO TO NEXT PAGE**

5-278 Change 24

## 5-72 TRAILING EDGE REPAIR — MAJOR DAMAGE (Continued)


5-72

**CAUTION**

Do not cut bevel in upper surface of trailing edge. Strength of repair will be reduced.


## 7. Bevel trailing edge (1) as follows:

- a. Apply guide strips (6) of masking tape (E388) to blade underside (7) 1/2-inch outside ends of cutout (8).
- b. Bevel edge 1/2-inch toward tape (E388). Use file.
- c. Remove guide strips (6).

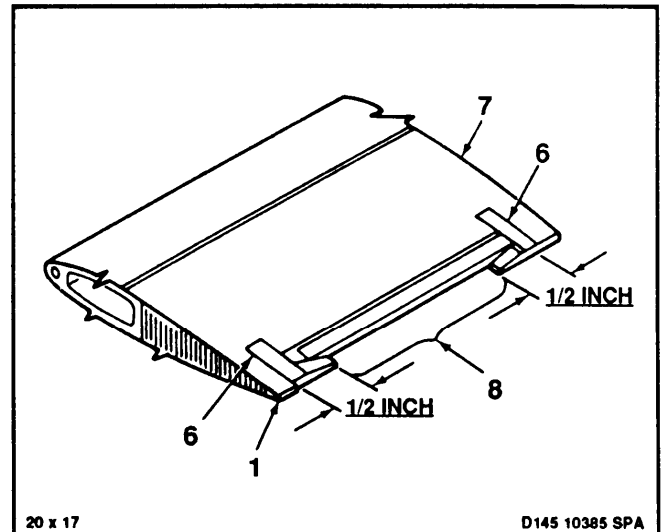

## 8. Prepare insert (9) and doublers (10) as follows:

- a. Cut insert (9) from trailing edge material (E425.1). Make insert long enough to cover bevels (11).
- b. Tape guide strips (12) on insert (9) 1/2-inch from ends. Use masking tape (E388). Bevel insert to guide strips. Use file.
- c. Remove guide strips (12).
- d. Cut two doublers of fiberglass laminate (E168) or (E168.1) (10) 1/2-inch wider chordwise, and 2 inches longer spanwise than insert (9).
- e. Check fit of insert (9). Check that doublers (10) overlap insert by 1/2 inch chordwise and 2 inches spanwise.
- f. If fiberglass laminate (E168.1) is used, remove peel ply covering from surfaces of doublers (10).

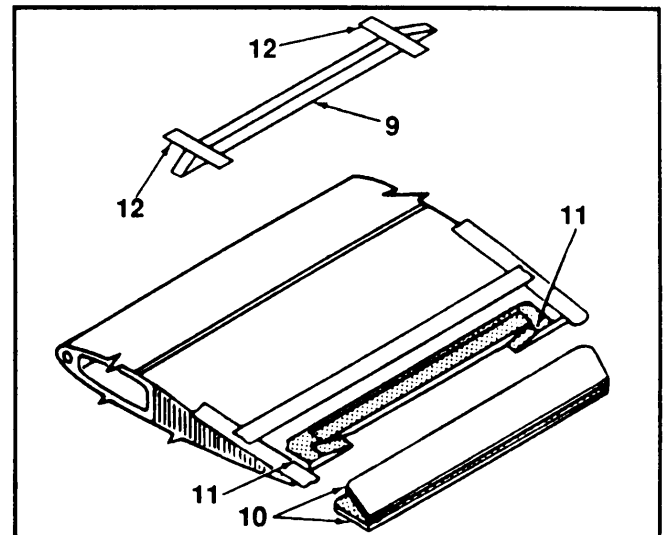


**GO TO NEXT PAGE**

9. Prepare surfaces for bonding as follows:

**CAUTION**

Surface glaze must be removed from insert and doublers. Poor bond will result if glaze is not removed.

- a. Sand both sides of doublers (10) and insert (9) lightly to remove surface glaze. Use abrasive paper (E9).
- b. Wear gloves (E186). Clean bonding surfaces of doublers (10), insert (9), and trailing edge (1). Use cloth (E120) damp with acetone (E20). Wipe dry with clean cloth before acetone evaporates.

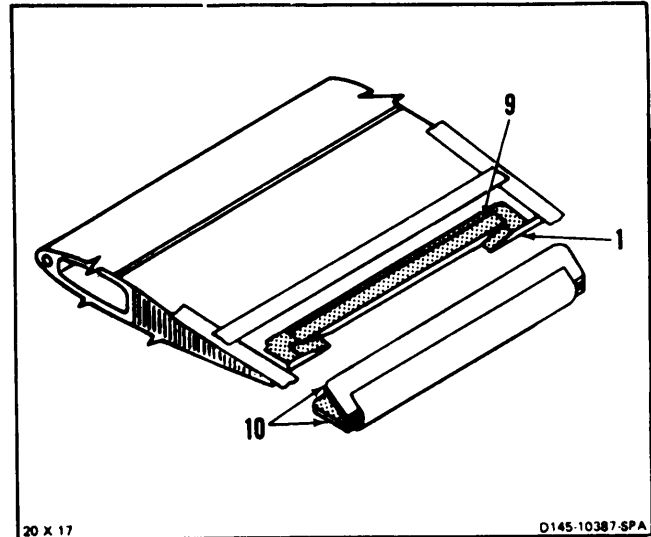

10. **Position doublers (10)** on clean surface with lower doubler extending past upper doublers by 1/8-inch at trailing edges.

10.1. If fiberglass laminate (E 168.1) is used, ensure that outer edges of doublers (10) are curled towards the blade.

11. **Hinge doublers (10)** at trailing edges. Use teflon tape (E399).

**NOTE**

Prepackaged adhesive (E40) is preferred. Use adhesive (E41), (E43), or (E47.1) only when adhesive (E40) is not available.

12. **Mix prepackaged adhesive (E40)**. Follow instructions in kit.

**NOTE**

Correct adhesive weight is required to obtain good bond.

13. If adhesive (E40) is not available, prepare alternate adhesive as follows:

- a. For adhesive (E41), weigh 100 parts of resin and 23 parts of hardener. Mix until color is uniform. Use polyethylene cup (E157) and wood spatula (E424).
- b. For adhesive (E43), weigh 7 parts of gray hardener and 5 parts of white base. Mix until color is uniform. Use polyethylene cup (E157) and wood spatula (E424).

**GO TO NEXT PAGE**

5-280 Change 14


- c. For adhesive (E47.1), weigh equal parts of adhesive (E47.1) and curing agent (E158.1). Mix until color is uniform. Use polyethylene cup (E157) and wood spatula (E424).

14. **Apply adhesive (E40), (E41), (E43), or (E47.1) as follows:**

**NOTE**


Working life of adhesive is about 30 minutes.

- Coat insert (9). Use a short-bristle brush. Position insert in cutout (8).
- Coat bonding surfaces of doublers (10).
- Position hinged doublers (10) over insert (9). Center doublers over repair and align with trailing edge (1).
- Secure doublers (10). Use teflon tape (E399). Cover entire surface of doublers. Overlap skin of blade underside (7) at least 3 inches in all directions.

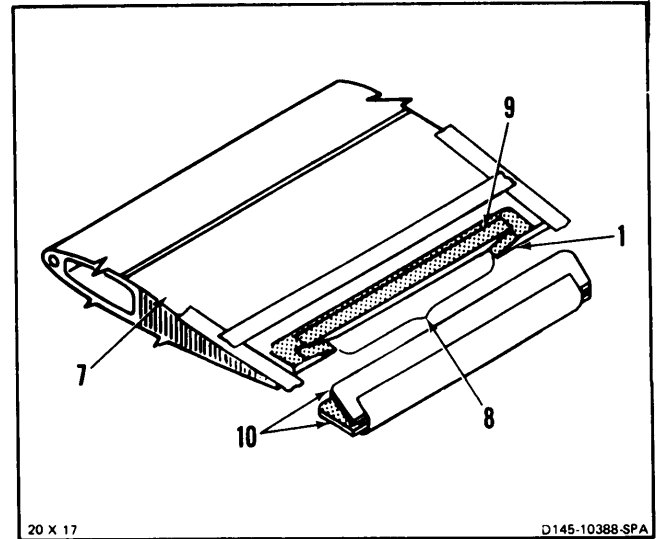

15. **Install trailing edge bonding fixture (T116) (13) as follows:**

- Cover facing surfaces of fixture (T116) (13). Use teflon tape (E399).
- Install fixture (T116) (13) over trailing edge (1). Center fixture over repair, and seat firmly against trailing edge.
- Tighten wing nuts (14) on fixture (T116) (13). Be sure fixture or repair have not moved.

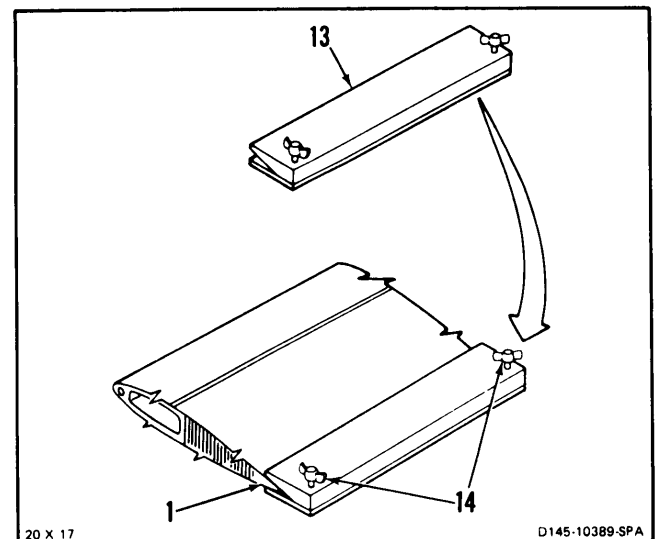

**GO TO NEXT PAGE**

- j. Start vacuum pump. Check for leaks. Reposition bag (22) or add tape (E396) (19) as needed.
- k. Maintain 20-inches Hg vacuum through adhesive cure.

**CAUTION**

**Do not exceed 160°F (71°C) at blade surface. Damage to fiberglass can occur.**


- l. Cure adhesive a 140° - 160°F (60° - 71°C) 2 hours Use heat lamp. Monitor temperature. Use temperature indicating strips (E413)

**NOTE**

Serviceable cure can be achieved without heat at 70° -80°F (21° - 27°C) in 24 hours.

Vacuum may be removed after 12 hours.

- m. Turnoff vacuum pump.
- n. Remove bag (22), tube (14), tape (19), fiberglass (18), rubber (17), fabric (16), and peel ply (15)

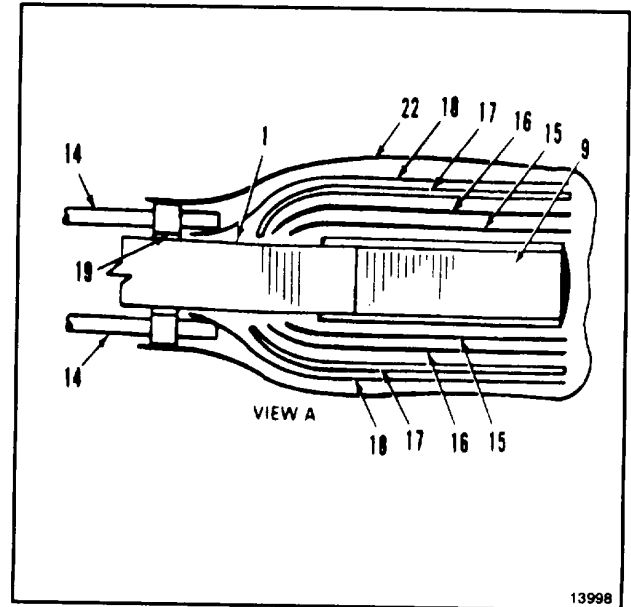

13998

25. If squeezeout fairing (23) is not satisfactory, fair doubler (4) and mesh (5) to surface of blade (1) with adhesive (E40 or E41). Prepare adhesive mixture as in steps 9 and 10.


- 26. Refinish tip seal area (24) (Task 5-76 or 5-77).
- 27. Add recorded weights of doublers (4), mesh (5) and adhesive used.

**NOTE**

All blade repairs, weight adjustment, painting, or balancing will be recorded on rotor blade DA Form 2408-16, each blade requires a separate form. If the rotor blade does not have a DA Form 2408-16, one must be prepared and all actions recorded, as example; location of repair, size of repair, weight of repair, and required weight adjustments for track and balance.

**FOLLOW-ON MAINTENANCE:**

- Refinish repaired area (Task 5-82).
- Adjust balance weights (Task 5-82.1).

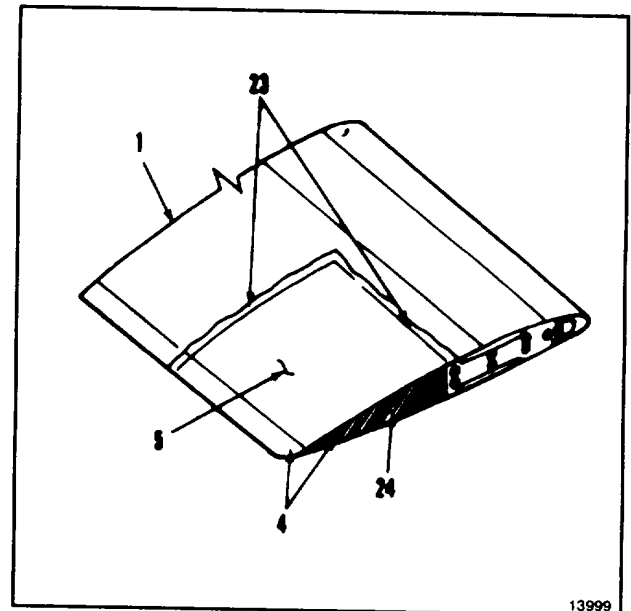

13999

**END OF TASK**

Change 37 5-282.8

**5-72.1 REPLACE BLADE FAIRING TIP SECTION**

5-72.1

**INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Airframe Repairer Tool Kit,  
NSN 5180-00-323-4876  
Sanding Block  
Pencil Compass  
Straightedge  
Hacksaw or  
Power Coping Saw  
Vacuum Cleaner  
Vacuum Pump  
Protective Clothing  
Respirator  
Trip Balance, NSN 6670-00-401-7195  
Heat Lamp

**Materials:**

Wire Mesh (E453)  
Acetone (E20)  
Gloves (E 186)  
Abrasive Paper (E6, E7, E9)  
Teflon Tape (E399)  
Cloth (E120)  
Adhesive (E40), or  
Adhesive (E41)  
Polyethylene Cup (E157)  
Wood Spatula (E424)  
Peel Ply (E270)  
Teflon-Impregnated Fabric (E170)  
Rubber Pad (E318)  
Glass Cloth (E132)  
Sealing Tape (E396)  
Polyvinyl Sheet (E284)  
Temperature Indicating Strips (E413)  
Fiberglass Laminate (E168 or E168.1)

**Personnel Required:**


Aircraft Structural Repairer  
Inspector

**References:**

Task 5-76  
Task 5-77

**Equipment Condition:**

Off Helicopter Task

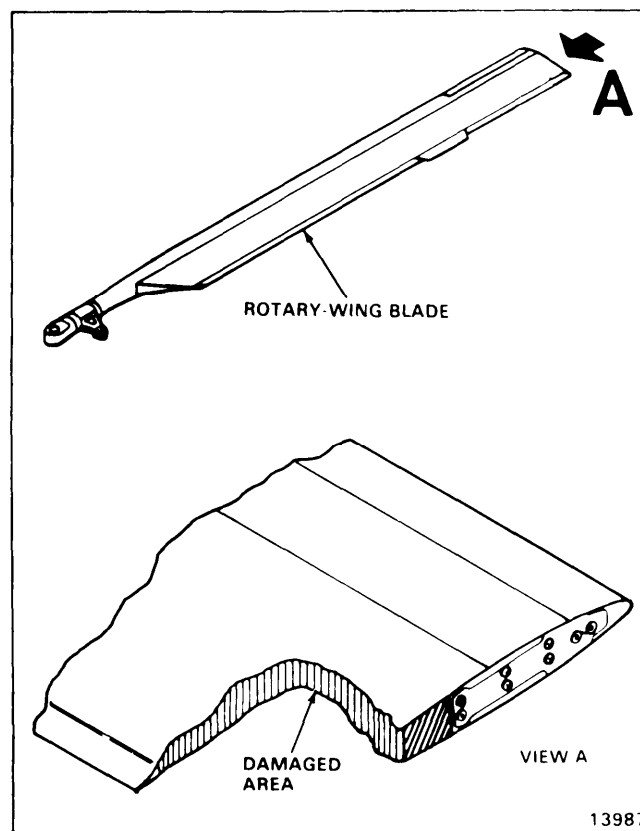**General Safety Instructions:****WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**


Adhesive (E40 or E41) is extremely flammable. It is volatile. It forms harmful vapors and explosive peroxides. Keep away from heat, sparks, or open flame. Avoid inhaling. Use only with adequate ventilation.

**WARNING**

Adhesive used in the manufacturing of some fiberglass rotor blades contain asbestos. During blade repair, strict adherence to all safety procedures when working with asbestos must be complied with (applies to blade serial number A-1-0001 to 1465 and A-24-0001 to 1473 only).

**NOTE**

Section outline can be square, rectangular, or triangular to suit shape of damage.

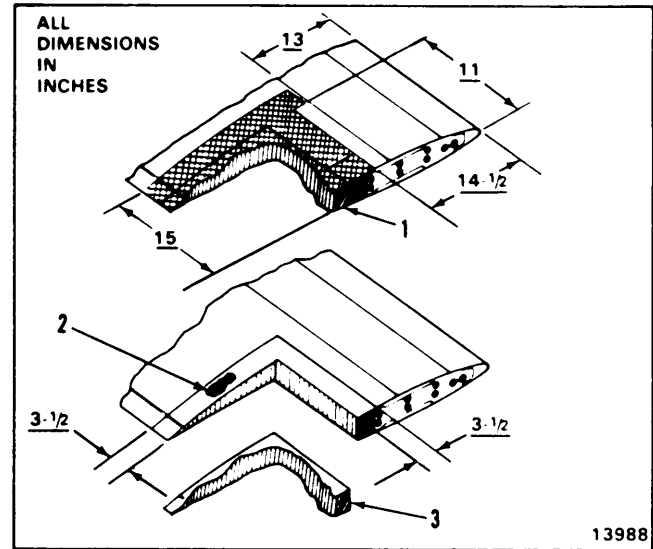

1. **Mark outline** of damaged section of blade (1) to be cut away on both sides of blade. Observe limits shown.
2. **Remove finish** 3-1/2 inches outside of marked-off area on both sides of blade. Use sanding block and abrasive paper (E6). Use acetone (E20) if needed to soften finish. Complete finish removal with abrasive paper (E7). Wear gloves (E186). Do not sand through wire mesh (2).
3. **Remove marked-off section (3)** of blade. Use a hacksaw or power coping saw.

GO TO NEXT PAGE


**5-72.1 REPLACE BLADE FAIRING TIP SECTION (Continued)****5-72.1**

4. **Cut two doublers (4)** of fiberglass laminate (E168 or E168.1), each piece 1-1/2 inches larger than the cutout section. Record weight.
5. **Cut two pieces (5)** of wire mesh (E453), each 1 inch larger than doublers (4). Record weight
6. **Cut a section of blade fairing (6)** equal to the removed section.
7. If doublers (4) were cut from laminate (E168.1), **remove peel ply** from both surfaces of each piece. **Lightly sand both sides of doublers, replacement section (6), and wire mesh (5).** Use abrasive paper (E9).

**NOTE**

Adhesive will not adhere to fiberglass unless glaze has been removed.

8. **Clean doublers (4), wire mesh (5), and replacement section (6)** with acetone (E20). Wear gloves (E186). Wipe dry with clean cloth (E120).

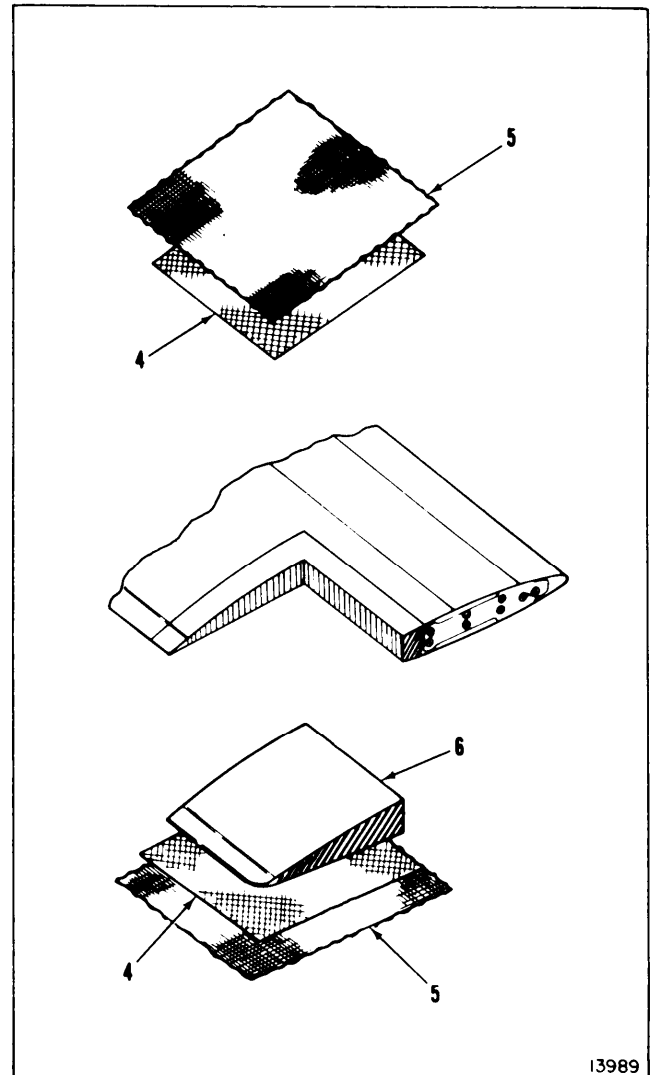**INSPECT**

13989

**GO TO NEXT PAGE**





## 5-72.1 REPLACE BLADE FAIRING TIP SECTION (Continued)

5-72.1

## APPLY ADHESIVE

## NOTE

Prepackaged adhesive (E40) is preferred. Use adhesive (E41) only if prepackaged kit is not available.

9. **Mix tube of adhesive (E40).** Follow instructions on kit.

## CAUTION



**Weigh and mix adhesive and resin accurately to produce acceptable bond.**

10. If adhesive (E40) is not available, prepare adhesive (E41). Weigh 100 parts of resin, and 23 parts of hardener. Mix in polyethylene cup (E157) until color is uniform. Use wood spatula (E424). Wear gloves (E186).

## NOTE

Working life of adhesive is 30 minutes.

11. **Align** trailing edge (7) and tip (8) of **replacement section (6)** with **outside edges of doublers (4)**. Check that doublers overlap section 1-1/2 inches in each direction. Mark outline of section on each doubler.
12. **Apply adhesive (E40 or E41)** to bottom of replacement section (6) and marked side of doublers (4) within marked outline. Record weight of adhesive used.
13. **Position section (6)** within outline on **one doubler (4)**. Press firmly together.
14. **Position top doubler (4)** on **replacement section (6)**. Press firmly together.
15. **Apply a thin coat of adhesive to outside surface of both doublers (4).**
16. Align mesh (5) with trailing edge (7) and tip (8) of section (6) over doublers (4). **Set mesh in adhesive** on doublers.

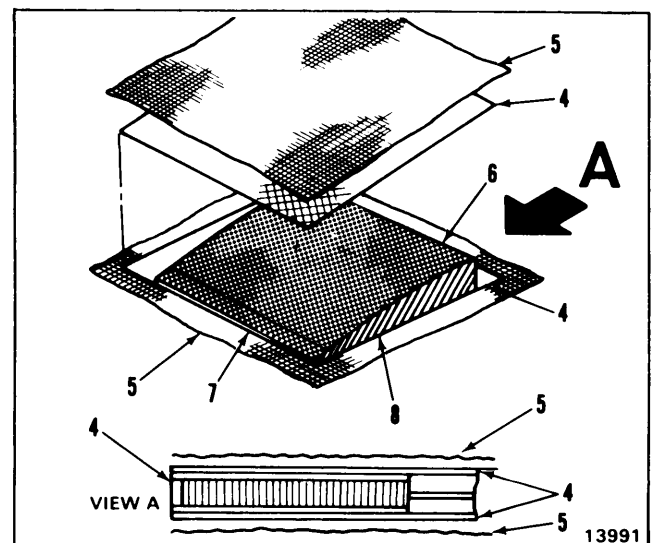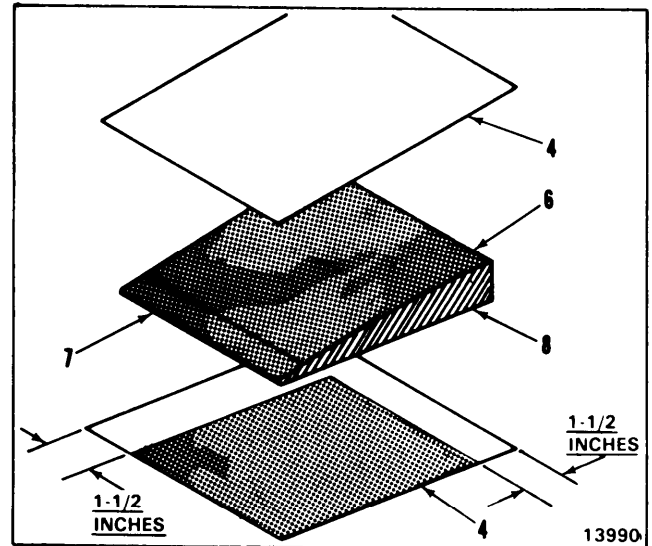

GO TO NEXT PAGE


**BOND REPLACEMENT ASSEMBLY**

17. Bond assembly (9) as follows:


**NOTE**

Wear gloves (E186) for all steps.


- a. **Cover mesh (5)** on both sides of assembly with a layer of **peel ply (E270) (10)** and a layer of **fiberglass cloth (E130) (11)**. Make layers large enough to overlap mesh 1 inch.

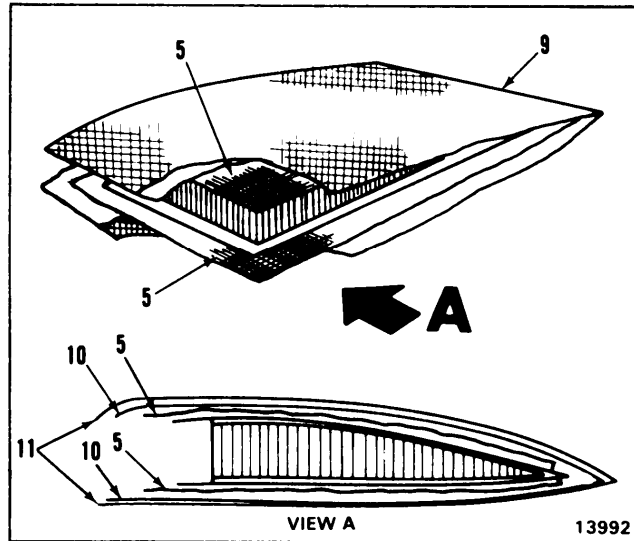

- b. **Make an airtight bag (12)** large enough to hold assembly (9). Use polyvinyl sheet (E284) and tape (E396). **Place a border (13)** of tape (E396) around the inside surface of the open end of the bag.
- c. **Slide bag (12) over assembly (9)**. Be careful not to dislodge layers (10 and 11).

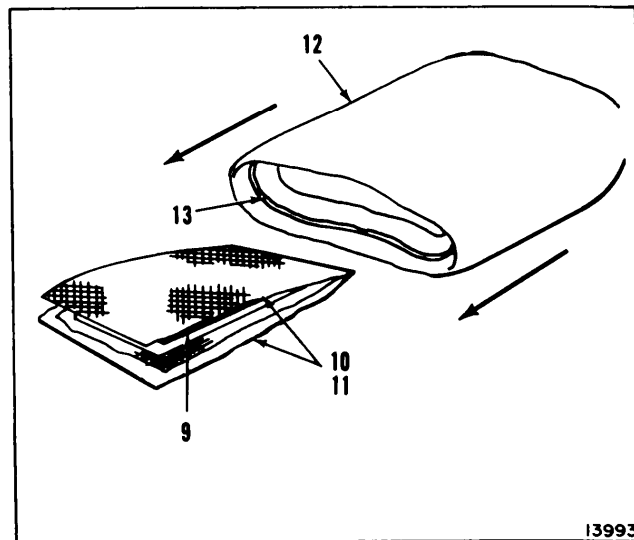

- d. Attach tube (14) to vacuum pump hose. **Position tube** on bottom doubler (4) inside open end of bag (12).
- e. **Wrap tube (14) in tape (E396) (15)** where it crosses tape border (13). Press tube onto border to make an airtight seal.

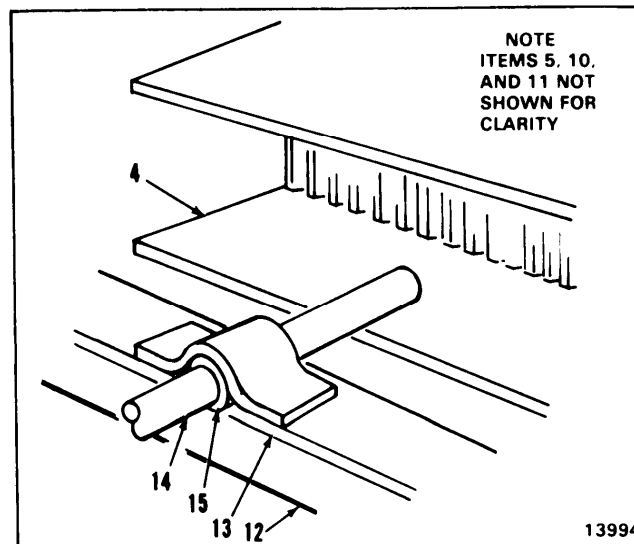

**GO TO NEXT PAGE**

## 5-72.1 REPLACE BLADE FAIRING TIP SECTION (Continued)

5-72.1

- f. Press open end of bag (12) closed over tube (14). Use extra tape (E396) as needed to obtain an airtight seal.

**NOTE**

Distortion of wire mesh (5) by force of vacuum is acceptable.

- g. Start vacuum pump. Check for leaks. Reposition bag (12) or add tape (E396) as needed.
- h. Maintain 20 inches Hg vacuum through adhesive cure.

**CAUTION**


**Do not exceed 160°F (71°C) at blade surface. Damage to fiberglass blade can occur.**

- i. Cure adhesive at 150° to 160°F (66° to 71°C) 2 hours. Use heat lamp. Monitor temperature. Use temperature indicating strips (E413).

**NOTE**

Serviceable cure can be achieved without heat at 70° to 80°F (21° to 27°C) in 24 hours. Vacuum may be removed after 12 hours.

- j. Turn off vacuum pump.
- k. Remove bag (12) and hose (14). Remove fiberglass cloth (11) and peel ply (10).

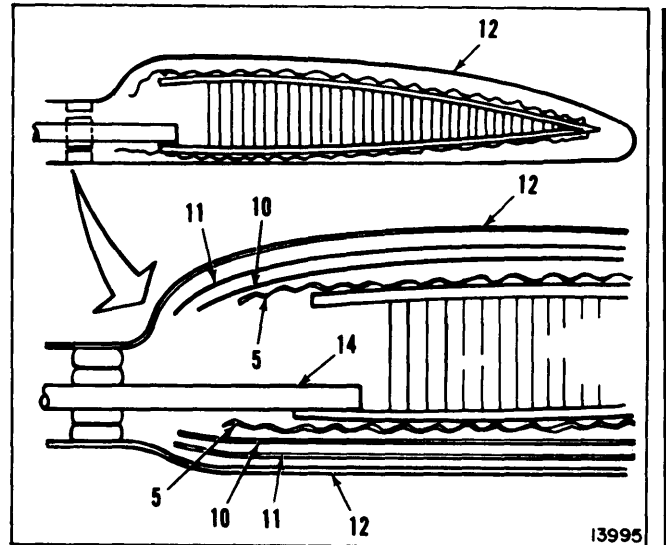**INSPECT****GO TO NEXT PAGE**


**INSTALL FAIRING REPLACEMENT ASSEMBLY**

18. **Clean bonded assembly (9) and mating surfaces** of blade (1). Use a vacuum cleaner in core areas.
19. Wear gloves (E186). **Wipe assembly (9) and blade (1) with clean cloths (E120) damp with acetone (E20)**. Wipe dry with clean cloths before acetone dries. Do not remove gloves.

**NOTE**

Wear gloves for remainder of task.

20. **Fit assembly (9)** in position on blade (1). Mark outline of wire mesh (5) on both sides of blade (1). Remove assembly.
21. Prepare adhesive mixture as in steps 9 and 10.
22. **Coat mating surfaces**, including exposed core, of blade (1) and assembly (9) with adhesive. Record weight of adhesive used.
23. **Fit assembly (9)** firmly into blade (1). Align surfaces at trailing edge (7) and tip (8).

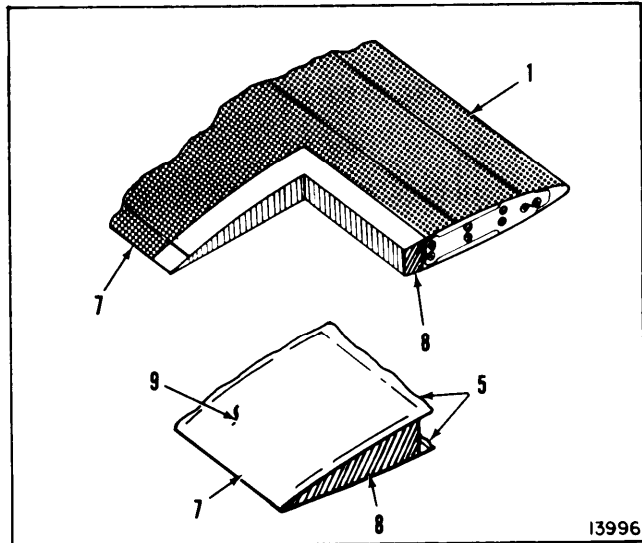


## 5-72.1 REPLACE BLADE FAIRING TIP SECTION (Continued)

5-72.1

**BOND REPLACEMENT ASSEMBLY**

24. Bond assembly (9) to blade (1) as follows:

- a. Cover assembly (9) on each side of blade (1) with layer of peel ply (E270) (15) and layer of teflon-impregnated fabric (E170) (16). Make layers large enough to overlap mesh (5) 1 inch.
- b. Cover fabric (16). Use thick rubber pad (E318) (17).
- c. Cover repair areas. Use fiberglass cloth (E130) (18). Cut cloth large enough to cover rubber pad (E318) (17). Overlap cloth over trailing edge onto opposite patch.
- d. Apply a band of tape (E396) (19) around blade (1), inboard of layer of fiberglass cloth (18). Keep tape clear of cloth.
- e. Attach two tubes (14) to vacuum pump hose.
- f. Wrap end of tubes (14) in two layers of fiberglass cloth (E130) (20). Hold cloth to tubes with tape (E388).
- g. Position tubes (14) on cloth (18) on top and bottom of blade (1). Wrap tubes with tape (E396) (21) where they cross tape band (19). Press tubes onto tape band to make airtight seal.
- h. Make an airtight bag (22) large enough to cover tip of blade (1) past tape band (19). Use polyvinyl sheet (E284) and tape (E396).
- i. Slip bag (22) over tip of blade (1). Press bag smoothly onto tape (19) to make an airtight seal.

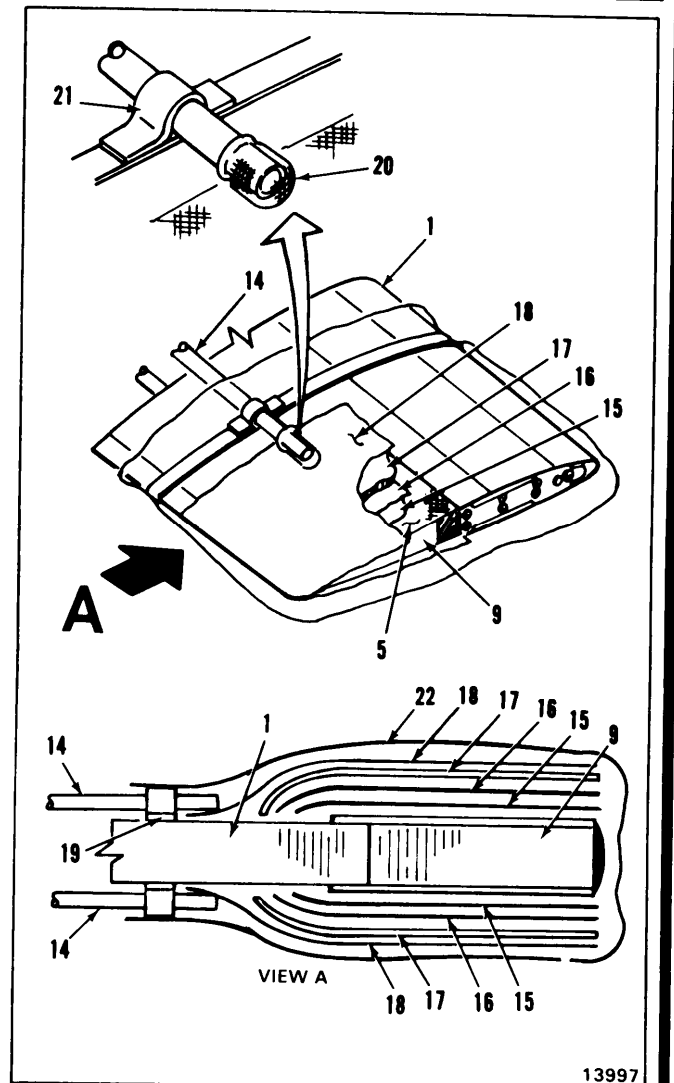

**GO TO NEXT PAGE**

5-72.1 REPLACE BLADE FAIRING TIP SECTION (Continued)

5-72.1

- j. Start vacuum pump. Check for leaks. Reposition bag (22) or add tape (E396) (19) as needed.
- k. Maintain 20 inches Hg vacuum through adhesive cure.

**CAUTION**


Do not exceed 160°F (71°C) at blade surface. Damage to fiberglass blade can occur.

- l. Cure adhesive at 140° to 160°F (60° to 71°C) for 2 hours. Use heat lamp. Monitor temperature. Use temperature indicating strips (E413).


**NOTE**

Serviceable cure can be achieved without heat at 70° to 80°F (21 to 27°C) in 24 hours. Vacuum may be removed after 12 hours.

- m. Turn off vacuum pump.
- n. Remove bag (22), tubes (14), tape (19), fiberglass (18), rubber (17), fabric (16), and peel ply (15).
- 25. If squeezeout fairing (23) is not satisfactory, **fair doubler (4) and mesh (5) to surface of blade (1)** with adhesive (E40 or E41). Prepare adhesive mixture as in steps 9 and 10.
- 26. **Refinish** tip seal area (24) (Task 5-76 or 5-77).
- 27. **Add recorded weights** of doublers (4), mesh (5) and adhesive used.

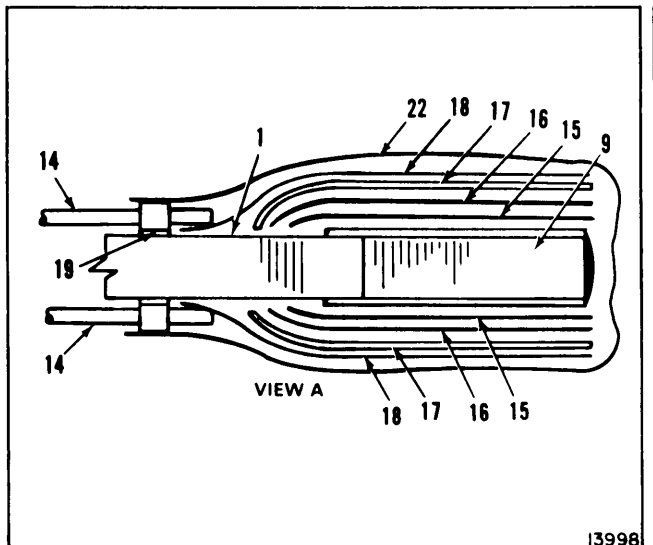

13998

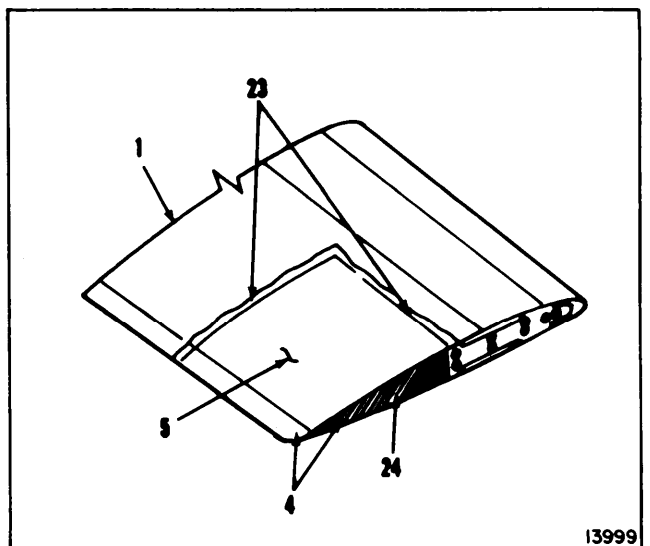

13999

**FOLLOW-ON MAINTENANCE:**

- Refinish repaired area (Task 5-82).
- Adjust balance weights (Task 5-82. 1).

**END OF TASK**

**5-73 REMOVE BLADE TIP COVER****5-73****INITIAL SETUP****Applicable Configurations:**

All

**Tools:**Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692**Materials:**

Paper Tags (E264)

**Personnel Required:**

Medium Helicopter Repairer

**References:**

Task 5-82.1

**Equipment Condition:**


Battery Disconnected (Task 1-39)

Electrical Power Off

Hydraulic Power Off


Blade Positioned Over Tunnel, One Forward and  
One Aft Blade Tied Down (Task 1-26)

Work Platforms Open as Required (Task 2-2)

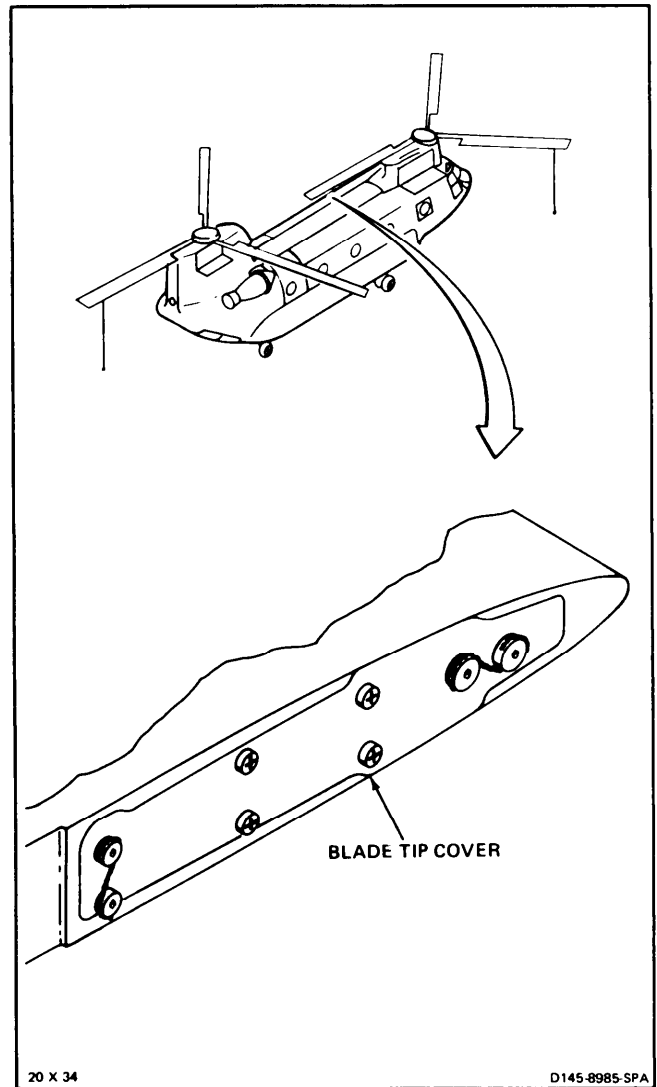**NOTE**

Procedure is same to remove any blade tip cover. Forward blade tip cover is shown here.

1. Remove lockwire. Remove four screws (1) and washers (2). **Remove tip cover (3).**

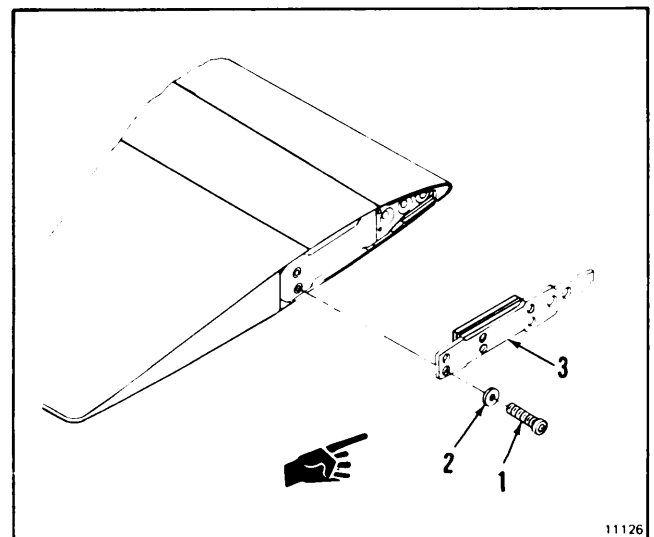**GO TO NEXT PAGE**



2. If tip cover (3) will be replaced, remove four nuts (4), washers (5), and bolts (6).

**WARNING**

Do not lose weights. Same number of weights must be installed on replacement cover. Wrong number of weights can increase vibration levels resulting in damage to equipment and injury to personnel.

3. Remove weights (7) from cover (3). Tag weights with blade serial number. Use paper tags (E264).
4. If a wedge-shaped rubber insert is found laying against the tip cover, proceed as follows:


**NOTE**

The wedge is a tooling insert installed on the inboard side of the forward weight tube during blade manufacture.

- a. Remove insert and weigh it. It weighs about 14 ounces.
- b. Add weight equal to insert weight to center tube of forward weight fitting (Task 5-82.1).

**FOLLOW-ON MAINTENANCE:**

None

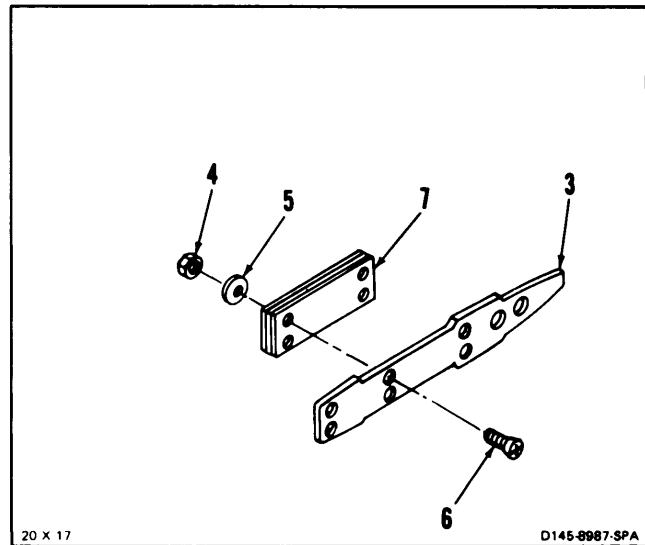

**5-74 INSTALL BLADE TIP COVER**

**5-74**

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

- Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692
- Torque Wrench, 30 to 150 Inch-Pounds
- Torque Wrench, 100 to 750 Inch-Pounds

**Materials:**


Lockwire (E233)

**Personnel Required:**

- Medium Helicopter Repairer
- Inspector

**References:**

- TM 55-1520-240-23P
- Task 5-82.1

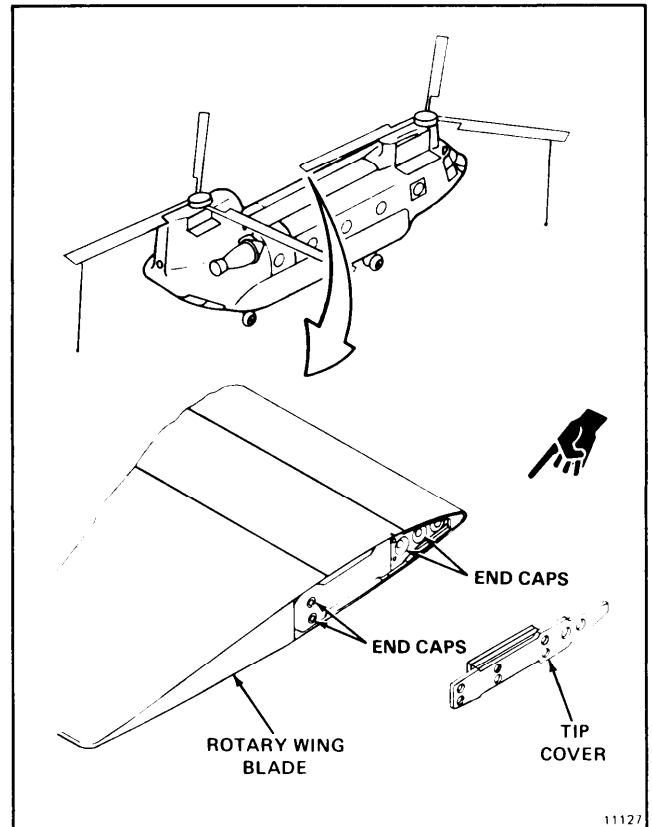

**WARNING**


Do not install wrong number of weights on tip cover. Vibration levels can be increased, resulting in damage to equipment and injury to personnel.

**CAUTION**

Do not use power tools to install tip covers. Damage can result.

**NOTE**

Procedure is same to install any blade tip cover. Forward blade tip cover is shown here.

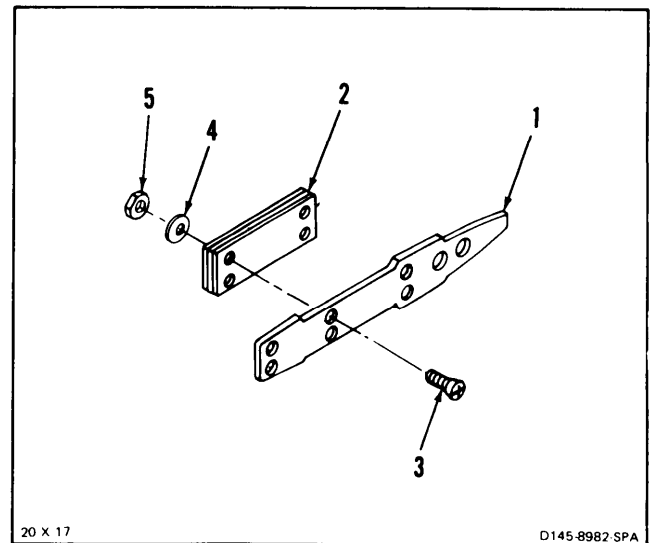

1. If tip cover (1) is a replacement, remove tag from weights (2). **Position weights on cover. Install four bolts (3), washers (4), and nuts (5). Torque nuts to 60 inch-pounds above run-on torque.**



**INSPECT**

**GO TO NEXT PAGE**

**CAUTION**

If end caps (6) are recessed more than 0.06 Inch, tip cover (1) will not be properly retained.

2. Check end caps (6) are flush with end of weight tubes. If any end cap is recessed more than 0.06 inch. replace blade balance weight spacers. (Task 582.1, steps 6 through 9).
3. Position tip cover (1) on blade (7). Install four screws (8) and washers (9). Torque screws to 175 Inch-pounds.
4. Lockwire screws (8). Use lockwire (E233).

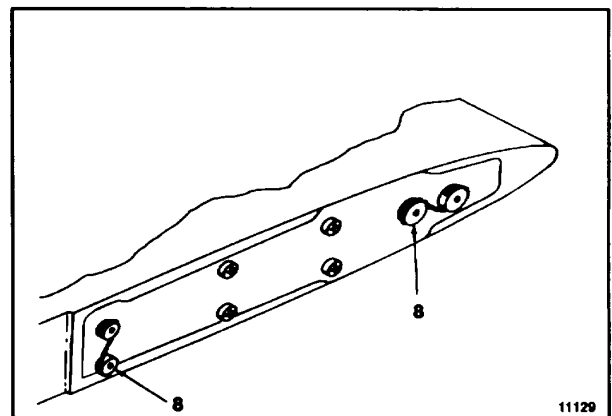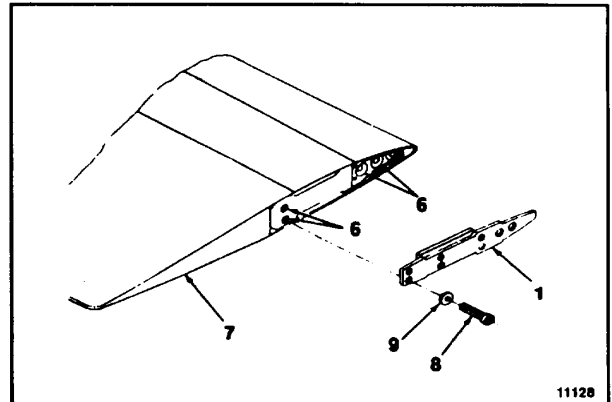**INSPECT****FOLLOW-ON MAINTENANCE:**

Close work platforms (Task 2-2).

**END OF TASK**

Change 34 5-286

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876  
Stencils, 1/2-Inch  
Scissors  
Trip Balance NSN 6670)-4-1-7195  
Heat Lamps

**Materials:**

Glass Cloth (E130)  
Adhesive (E41, E43 or E47.1)  
Abrasive Paper (E6 and E9)  
Cloth (E120)  
Aliphatic Naphtha (E245)  
Acetone (E20)  
Fiberglass Laminate (E168 or E168.1)  
Masking Tape (E388)  
Scrim Cloth (E325)  
Peel Ply (E270)  
Teflon Impregnated Fabric (EI 70)  
Aluminum Sheet (E70 or E71)  
Temperature Indicating Strips (E413)  
Hypodermic Syringe (E380)  
Squeeze Bottle (E366)  
Epoxy Primer (E292.1)  
Polyethylene Cup (E157)  
Thinner (E418)  
Yellow lacquer (E225)  
Wood Spatula (E424)  
Gloves (E184.1)  
Curing Agent (E158.1)

**NOTE**

If adhesive (E41) is used scrim cloth is not required. Adhesive (E41) contains beads which prevent it from being squeezed below the thickness of the beads.

**Parts:**


Shim, 0.005 Inch

**Personnel Required:**

Aircraft Structural Repairer  
Inspector

**References:**

TM 55-1520-240-23P  
TM 55-1500-344-23

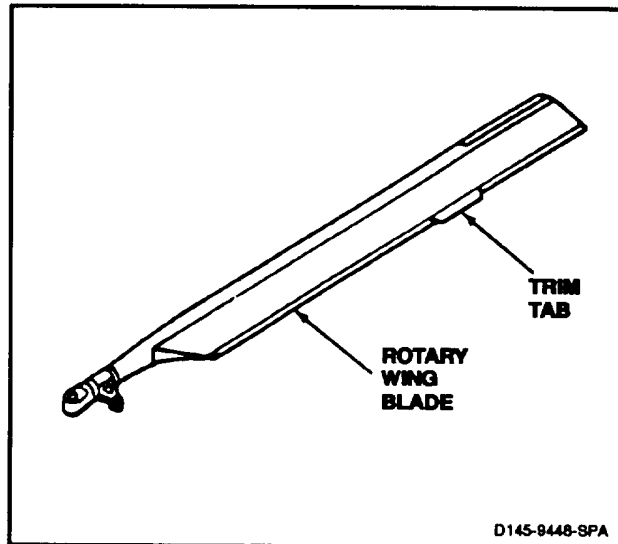**Equipment Condition:**

Off Helicopter Task

**General Safety Instructions:****WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**


Curing agent (E158.1) can irritate skin and cause burns. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

GO TO NEXT PAGE

Change 34 5-287


1. **Blend out nicks and scratches on trim tab (1)** as follows:

- a. Blend nicks on edge (2) of trim tab (1). Use file parallel to edge. Radius at corners (2) must be at least 1/2 inch.
- b. Blend nicks or scratches on surface of trim tab (1). Blend to width 20 times depth of damage. Use abrasive paper (E9). Maximum depth of rework shall not exceed 0.005 inch.

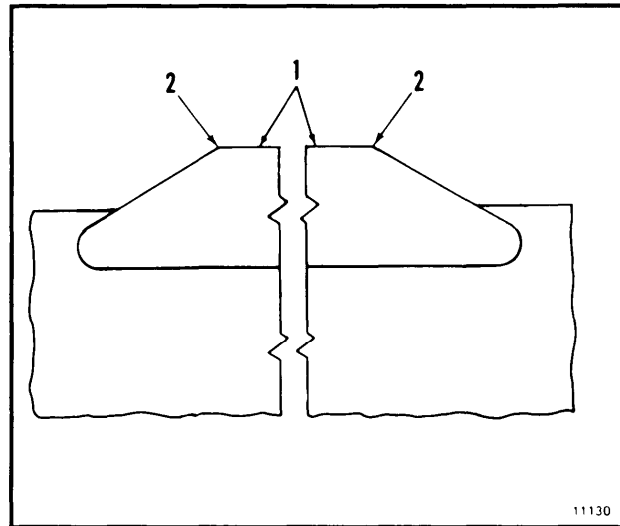

2. **Repair bond voids** as follows:

- a. Tap suspect void areas with edge of coin to find inboard void line.
- b. **Remove finish from surface of blade (3)** 1 1/2 inches around void area (4). Use abrasive paper (E6).
- c. **Remove finish from trim tab (1)** where it overlaps blade surface 1 1/2 inches beyond bond void (4). Use abrasive paper (E9).
- d. **Mask around sanded area.** Use tape (E388) (5).
- e. **Flush bond void (4)** with acetone (E20) until only clear acetone flows. Use a hypodermic syringe (E380) or squeeze bottle (E366). Wear gloves (E184.1).
- f. **Wipe sanded area** with cloth (E120) damp with acetone (E20). Wear gloves (E184.1). Wipe dry with a clean cloth before acetone evaporates.
- g. **Cut a doubler (6)** of fiberglass laminate (E168 or E168.1) 2 inches by 3 inches. Radius corners 1/4 inch. Remove protective film from both sides of doubler. Lightly sand both sides of doubler to remove glaze.
- h. **Cut a piece of scrim cloth (E325) (7)** 1 3/4 inches by 2 3/4 inches.

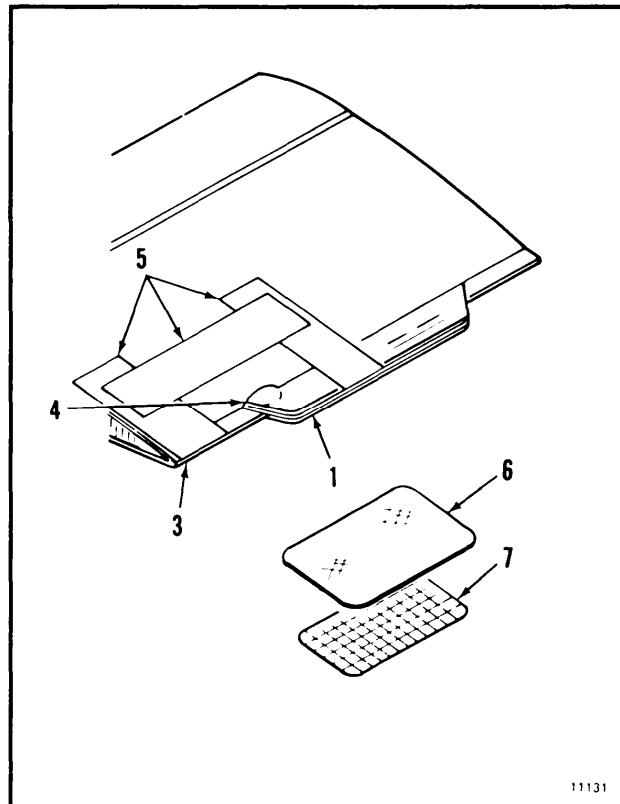

- i. Center doubler (6) over trim tab (1) at bonded void (4). Mark outline on blade surface. Use a pencil.
- j. **Wipe surfaces of doubler (6)** with cloth (E120) damp with acetone (E20). Wipe dry before acetone evaporates. Wear gloves (E184.1). Set doubler (6) and scrim cloth (7) aside for bonding.
- k. **Mix a small amount of adhesive (E43 or E47.1)** as follows:

**WARNING**



**Adhesive (E43 or E47.1) is toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.**

- (1) If adhesive (E43) is used, mix 5 parts of white base and 7 parts of gray hardener. Use trip balance. Stir in polyethylene cup (E157) with wood spatula (E424) until color is uniform. Wear gloves (E184.1).
- (2) If adhesive (E47.1) is used, mix equal parts of adhesive (E47.1) and curing agent (E158.1). Use trip balance. Stir in polyethylene cup (E157) with wood spatula (E424) until color is uniform. Wear gloves (E184.1).


**NOTE**

Working life of adhesive (E43 or E47.1) is about 30 minutes.


- l. Work adhesive (E43 or E47.1) into the bond void. Use a piece of clean 0.005 inch shim stock. Apply a coat of adhesive to the outlined area.
- m. Position scrim cloth (7) on the adhesive. Coat doubler (6) with adhesive (E43 or E47.1) and position it on the outlined area. When properly positioned, press doubler onto scrim cloth.

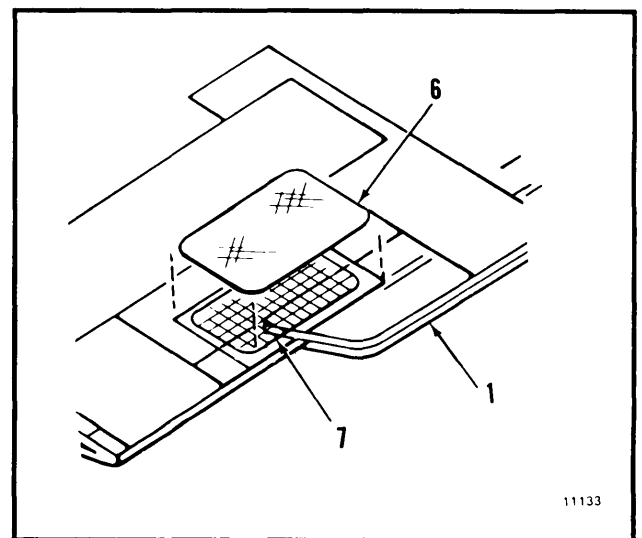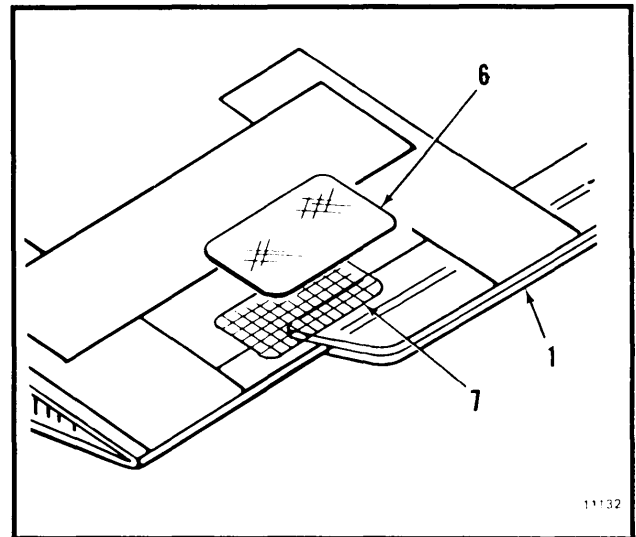

- n. Cover the repair with a layer of peel ply (8) and teflon impregnated fabric (9). Make each layer large enough to overlap the doubler (6) and bond void about 1 inch.

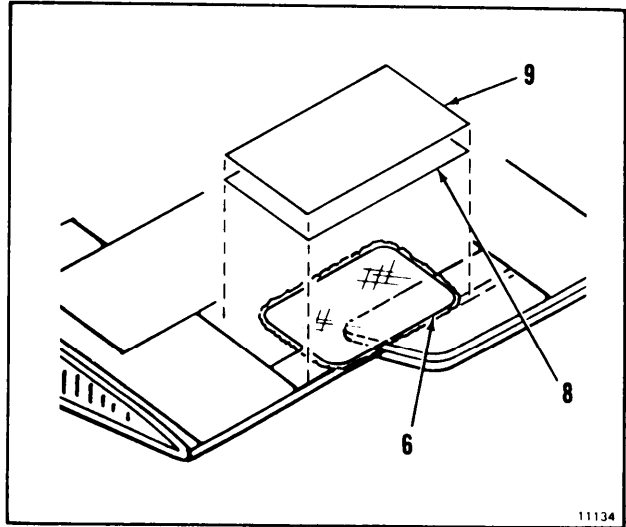

- o. Place a block of wood or aluminum sheet (10) over the repair. Apply moderate pressure. Use C-clamps (11).

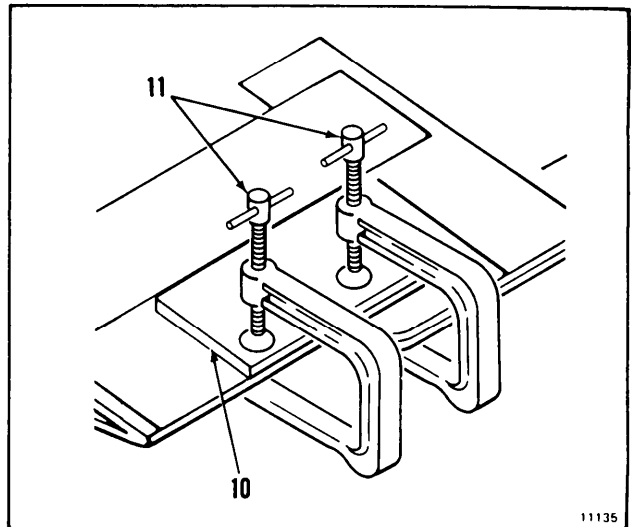

**CAUTION**

Do not exceed 160°F (71°C) at blade surface. Damage to fiberglass can occur.

- p. Cure adhesive at 150°F to 160°F (66°C to 71°C) for 2 hours. Use heat lamp. Monitor temperature. Use temperature indicating strips (E413).


**CAUTION**

Curing time increases rapidly as temperature decreases. Adhesive (E43 or E47.1) will not cure below 60°F (15°C). Do not count as cure time any period when temperature is below 70°F (21°C).

**NOTE**

If heat lamp is not available, a serviceable cure can be achieved at 70°F to 80°F (21°C to 27°C) in 24 hour.

- q. When cure is complete remove clamps (11), aluminum sheet (10), teflon impregnated fabric (9), and peel ply (8). Fair the repair as required. Use abrasive paper (E9).

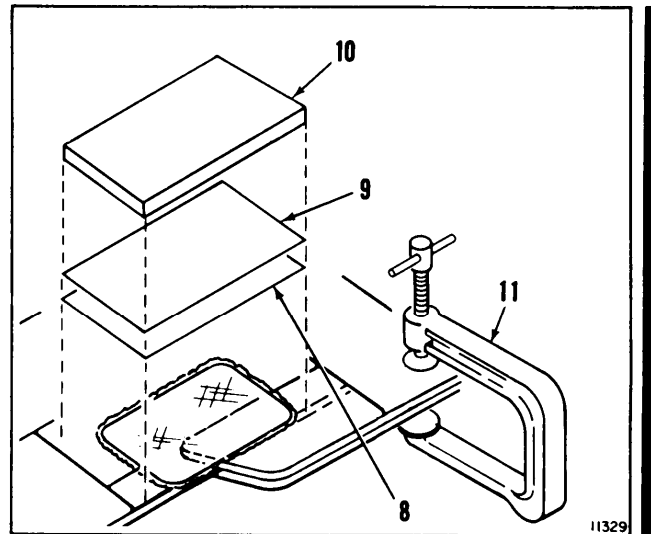

**INSPECT**

**GO TO NEXT PAGE**



**NOTE**

Refinishing is required only when existing finish has been marred by the repair.

- 2.1. Determine the finish system used on the rotor blade (TM 55-1 500-344-23).
  - a. For rotor blades **without** **58** proceed to step 3.
  - b. For rotor blades **with** **58** proceed to Task 2-350.1.
3. Refinish the repair area as follows:
  - a. If finish was marred during repair, lightly sand the area. Use abrasive paper (E9). Remove sanding residue. Use a clean dry cloth (E120).

**WARNING**

**Naphtha (E245) is combustible and toxic. It can irritate skin and cause burns. Use only with adequate ventilation away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.**

**CAUTION**

**Do not soak blade with solvent. Use damp cloths only. Use only aliphatic naphtha TT-N-95 (E245).**

- b. Wipe the surface. Use clean cloths (E120) damp with naphtha (E245). Wipe dry before naphtha evaporates. Use clean dry cloth (E120). Wear gloves (E184.1)

**WARNING**

**Epoxy primer (E292.1) is flammable and toxic. It can irritate skin and cause burns. Use only with adequate ventilation away from heat or open flame. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.**

- c. If bare metal is exposed, mix epoxy primer (E292.1) according to manufacturer's instructions.
- d. Apply primer (E292.1) in a thin mist coat. Allow to dry at least 1 hour.

**WARNING**

**Lacquer (E225) is extremely flammable. It can be toxic. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.**

**WARNING**

**Thinner (E418) is flammable and toxic. It can irritate skin and cause burns. Use only with adequate ventilation away from heat or open flame. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.**

- e. Thin lacquer (E215) with thinner (E418) in accordance with manufacturer's instructions.
- f. Apply 2 coats of lacquer (E215) to the repair area. Allow at least 45 minutes between coats.
- g. If necessary restencil trim tab angle (X°UP or X°DOWN) and DO NOT BEND. Use 1/2 inch high letters. Use lacquer (E225) thinned with thinner (E418).

**FOLLOW-ON MAINTENANCE:**

Check trim tab angle (Task 5-75.1).

**5-75.1 CHECK AND ADJUST ROTOR BLADE TRIM TAB ANGLE**

5-75.1


## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**Trim Tab Bending and Indicating,  
Fixture 145G1019-29**Materials:**


None

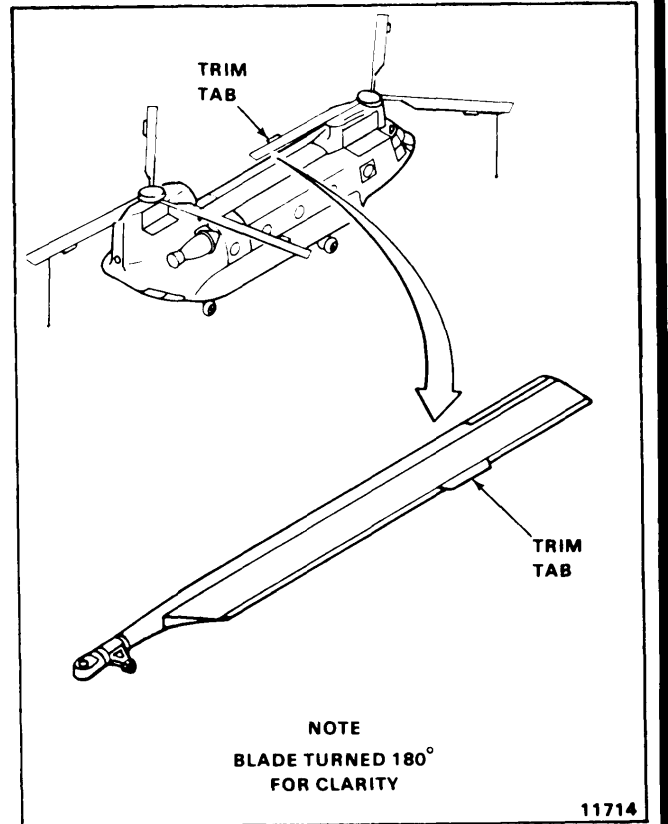**Personnel Required:**Medium Helicopter Repairer  
Inspector**Equipment Condition:**Battery Disconnected (Task 1-39)  
Electric Power Off  
Hydraulic Power Off  
Blade Positioned Over Tunnel,  
One Forward and One Aft Blade  
Tied Down (Task 1-26)**NOTE**

Trim tab bending and indicating fixture 145G1019-29 contains the following assemblies:

- 145G1019-32 Angle Indicator Assy
- 145G1019-30 Cusp Clamp Assy
- 145G1019-31 Trim Tab Clamp Assy

1. Install **angle indicator** assembly (1) on blade fairing about four inches inboard of the outboard end of trim tab (2).
2. Loosen thumb screw (3), clamping trim tab checking assembly (4) on angle indicator (1).

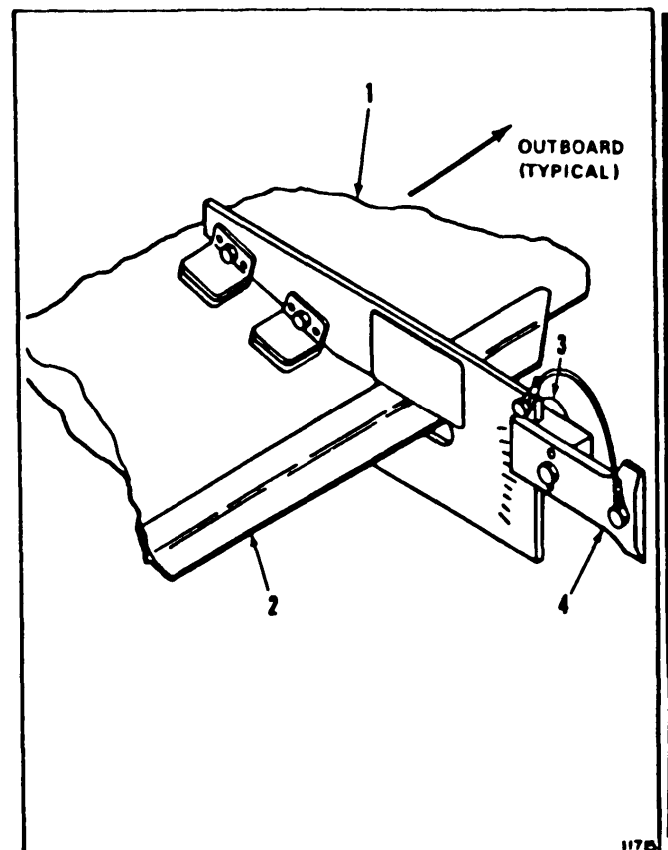**GO TO NEXT PAGE**




## 5-75.1 CHECK AND ADJUST ROTOR TRIM TAB ANGLE (Continued)

3. **Install checking assembly (4)** on trim tab (2). Check that UPPER AIRFOIL marking is facing up. Make sure checking assembly is fully seated on trim tab. Tighten thumb screw (3).
4. **Read the angle** indicated by checking assembly (4) at scale on angle indicator (1). Compare angle with the angle value stenciled on trim tab (2).


### NOTE

Measurement of trim tab angle shall always be made at the inboard end of trim tab.

5. If measured angle is the same as angle stenciled on trim tab (2), go to step 7.

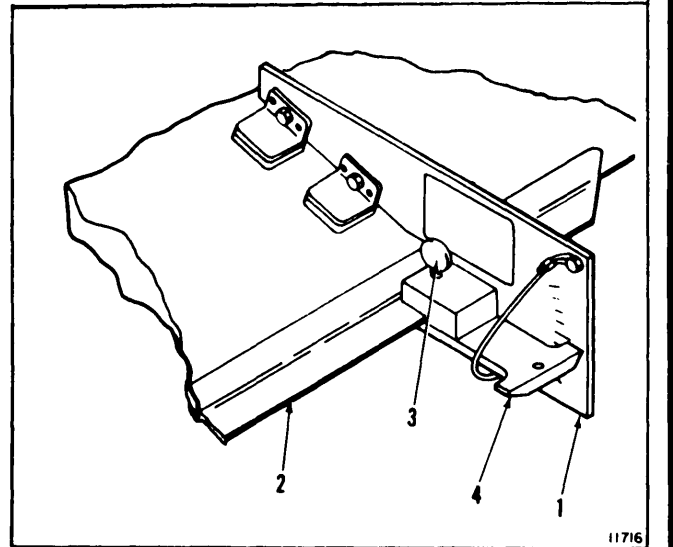

6. If measured angle is not the same as angle stenciled on trim tab (2), proceed as follows:
  - a. Loosen thumb screw (3) and remove checking assembly (4) from trim tab (2). Stow checking assembly on angle indicator (1). Tighten thumb screw.
  - b. Remove angle indicator assembly (1) from blade.

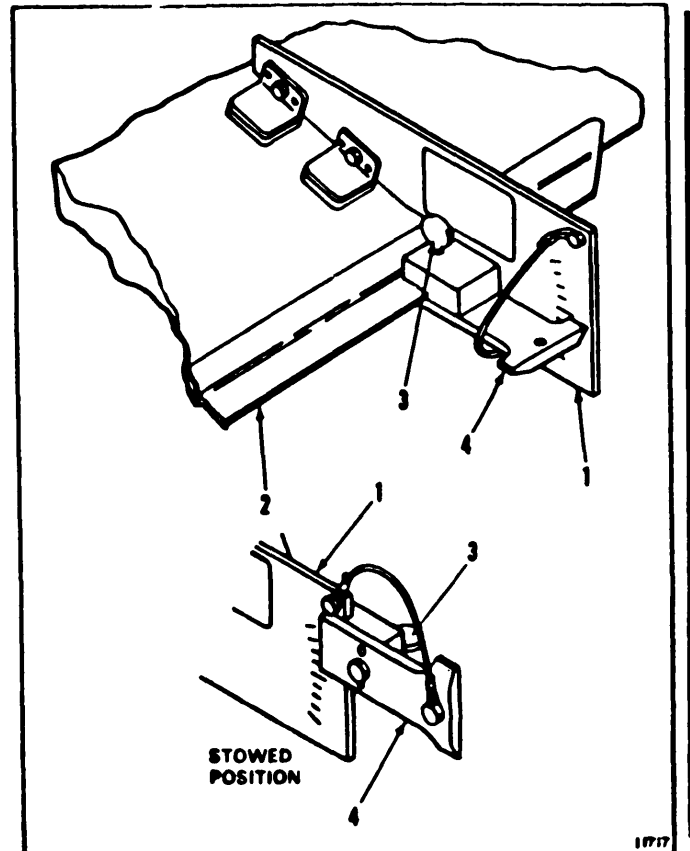

**GO TO NEXT PAGE**

**NOTE**

Cusp clamp and trim tab clamp must be installed as a unit.

- c. If trim tab clamp (6) is not nested in cusp clamp (5), open C-clamps (7) and position trim tab clamp inside jaws of C-clamps.
- d. **Install cusp clamp (5) and trim tab clamp (6)** over trim tab (2). Check that UPPER AIRFOIL markings are facing up.
- e. Ensure that cusp clamp (5) is firmly seated against blade trailing edge. Tighten C-clamps (7).
- f. Ensure that trim tab clamp (6) is centered and fully seated against trim tab trailing edge (8). Tighten hand wheels (9).
- g. Install angle indicator assembly (1) on out-board end of trim tab clamp (6). Scale of angle indicator shall be next to pointer (10).

**NOTE**

Maximum trim tab bend angle up or down is 15 degrees from zero.


- h. **Using handles on trim tab clamp (6), bend trim tab (2)** slightly past then desired angle. Release the handles and allow the tab to spring back. Read the new bend angle on pointer (10) at the scale of angle indicator (1).
  - i. Repeat step h. until you get the required angle.
  - j. Loosen clamps (7) and (8). Remove cusp clamp (5) and trim tab clamp (6) from rotor blade.
7. Remove angle indicator assembly (1).

**NOTE**

Any adjustment made on the trim tab, different from the stenciled angle on the blade shall be logged on the DA Form 2408-16 Component Historical Record.

**FOLLOW-ON MAINTENANCE:**

Remove tiedown lines from blades (Task 1-26).

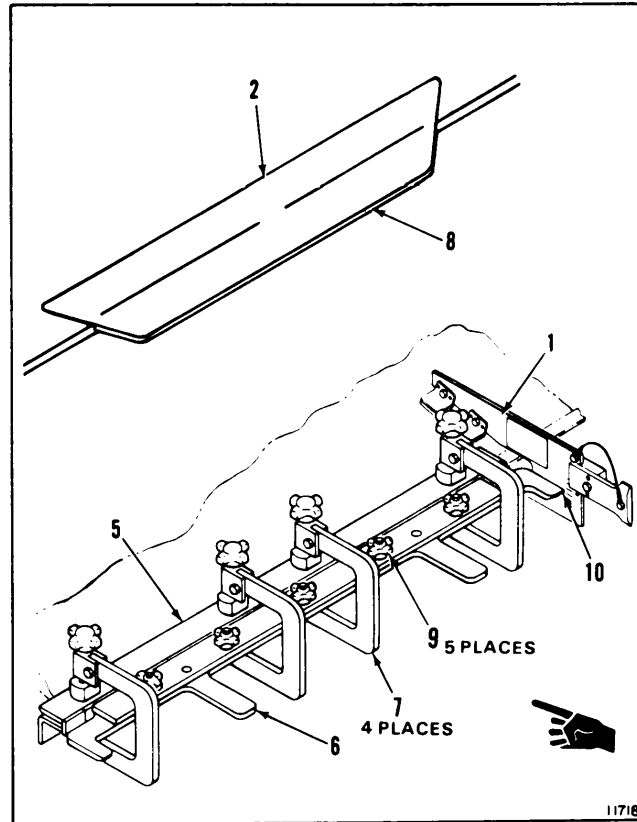

**END OF TASK**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876  
Rubber Spatula  
Scissors  
Sanding Block  
Trip Balance, NSN 6670-00-401-7195  
Vacuum Pump  
Heat Lamp

**Materials:**

Acetone (E20)  
Gloves (E1 86)  
Sealant (E336)  
Teflon Tape (E399)  
Glass Cloth (E130)  
Abrasive Paper (E7 and E9)  
Adhesive (E43)  
Fiberglass Cloth (E132)  
Polyethylene Cup (E157)  
Teflon Impregnated Fabric (E170)  
Methyl-Ethyl-Ketone (E244)  
Peel Ply (E270)  
Polyvinyl Sheet (E284)  
Tape, Masking (E388)  
Sealing Tape (E396)  
Wood Spatula (E424)  
Temperature Indicating Strips (E413)

**Personnel Required:**

Aircraft Structural Repairer  
Inspector

**Reference:**


Task 5-73  
Task 5-74

**Equipment Condition:**

Off Helicopter Task

**General Safety Instructions:****WARNING**

- Sealant (E336) can irritate skin and cause burns. Avoid contact with skin

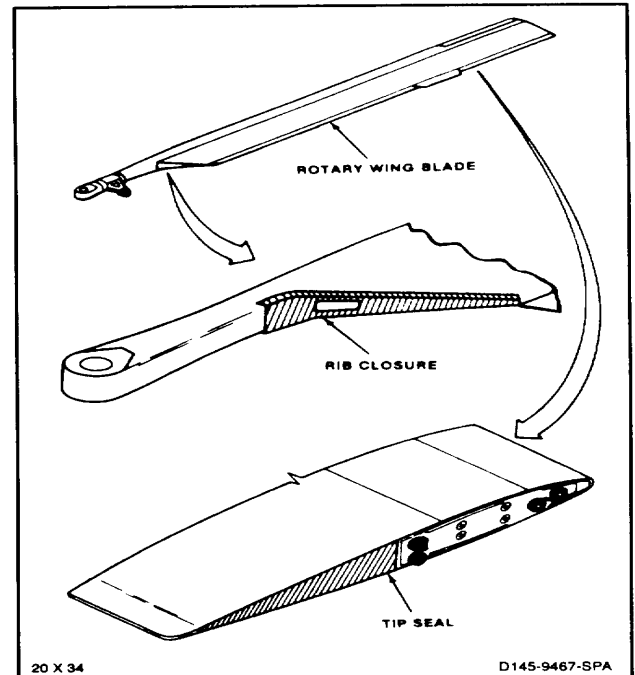

skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.
- Adhesive used in the manufacturing of some fiberglass rotor blades contain asbestos. During blade repair, strict adherence to all safety procedures when working with asbestos must be complied with (applies to blade serial numbers A-1-0001 to 1465 and A-2-001 to 1473 only).


GO TO NEXT PAGE

Change 37 5-292.1

**NOTE**

- If more than half of material is missing or damaged, go to task 5-77.
- Procedure is similar for inboard rib closure and tip seal minor repair on any rotary-wing blade. Differences are noted in text.

1. **Prepare rib closure (1) or tip seal (2) for repairs** as follows:
  - a. Remove loose material from damaged area. Use pocket knife.
  - b. On tip seal (2) only, remove fiberglass from around damaged area. Use pocket knife.
  - c. On rib closure (1) only, trim rubber to feather edge. Use pocket knife.
2. **Clean damaged area of rib closure (1) or tip seal (2).** Use cloth (E120) damp with acetone (E20). Wear gloves (E186).
3. **Fill damaged area.** Use sealant (E336). Fair sealant to shape of surfaces around repair area. Use rubber spatula.
4. **On tip seal (2) only, cover repair.** Use glass cloth (E130) wetted with sealant (E336).
5. **Cover repaired area. Use Teflon tape (E346).** Pull tape tightly over repair. Secure tape firmly to blade (3). Be sure tape overlaps repair no less than 1-inch.
6. **Cure sealant 6 hours at 70°F to 80°F (21°C to 27°C).**
7. Remove tape. Check that repair is secure, and there are no voids.

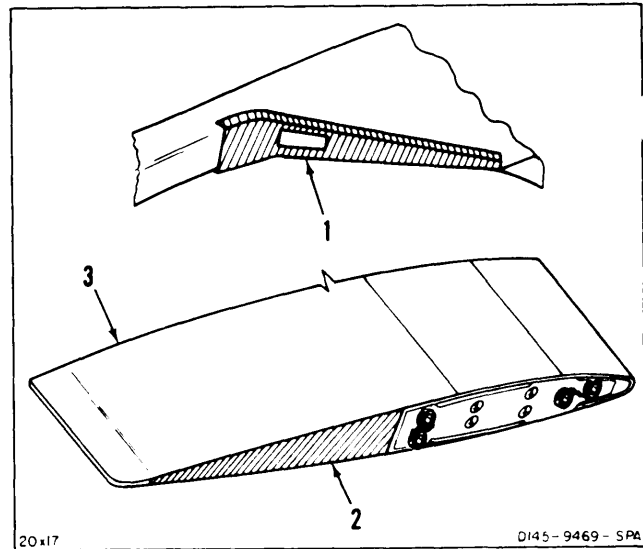**INSPECT**

## 5-76 INBOARD RIB CLOSURE AND TIP SEAL MINOR REPAIR (Continued)

5-76


8. If inboard rib closure (1) or tip seal (2) are not covered with fiberglass, prepare the area as follows:

- a. On tip seal (2), remove the tip cover (Task 5-73).
- b. Remove finish from rib closure (1) or tip seal (2) and from surface of blade (3) for 1 inch in all directions. Use cloth (E 120) damp with acetone (E20). Wear gloves (E 186).
- c. Remove surface glaze from rib closure (1) or tip seal (2) and exposed blade skin (3). Use abrasive paper (E7).

### WARNING

Methyl-ethyl-ketone (E244) is flammable. It can irritate skin and cause burns. Use only with adequate ventilation, away from heat or open flame. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- d. Wipe exposed area with clean cloth damp with methyl-ethyl-ketone (E244). Wear gloves (E186).

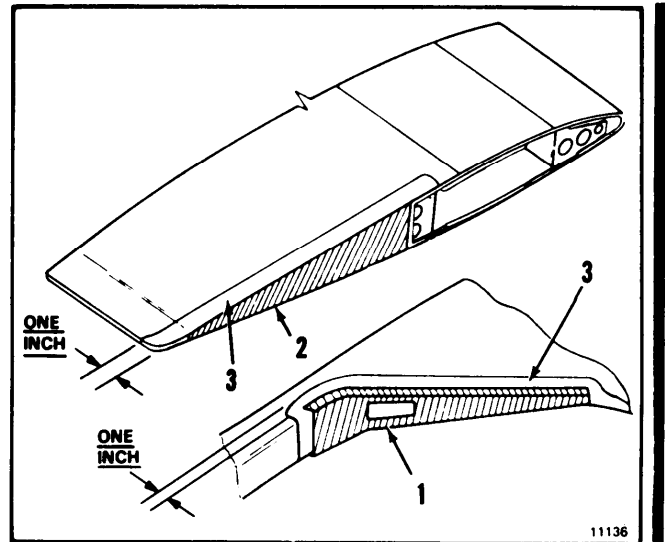

GO TO NEXT PAGE






## 5-76 INBOARD RIB CLOSURE AND TIP SEAL MINOR REPAIR (Continued)

5-76


12. **Apply a coat of adhesive** to rib closure (1) or tip seal (2) and the surrounding blade surface. Use a stiff brush with bristles cut short. Wear gloves (E 186).
13. **Position glass cloth cover (4) or (5)** over closure rib (1) or tip seal (2). Dab with brush to remove wrinkles.
14. Apply additional adhesive to saturate cloth.
15. For tip seal (2) only, apply teflon tape (E399) to aft end of tip cover (6).
16. Temporarily install tip cover (6) (Task 5-74).

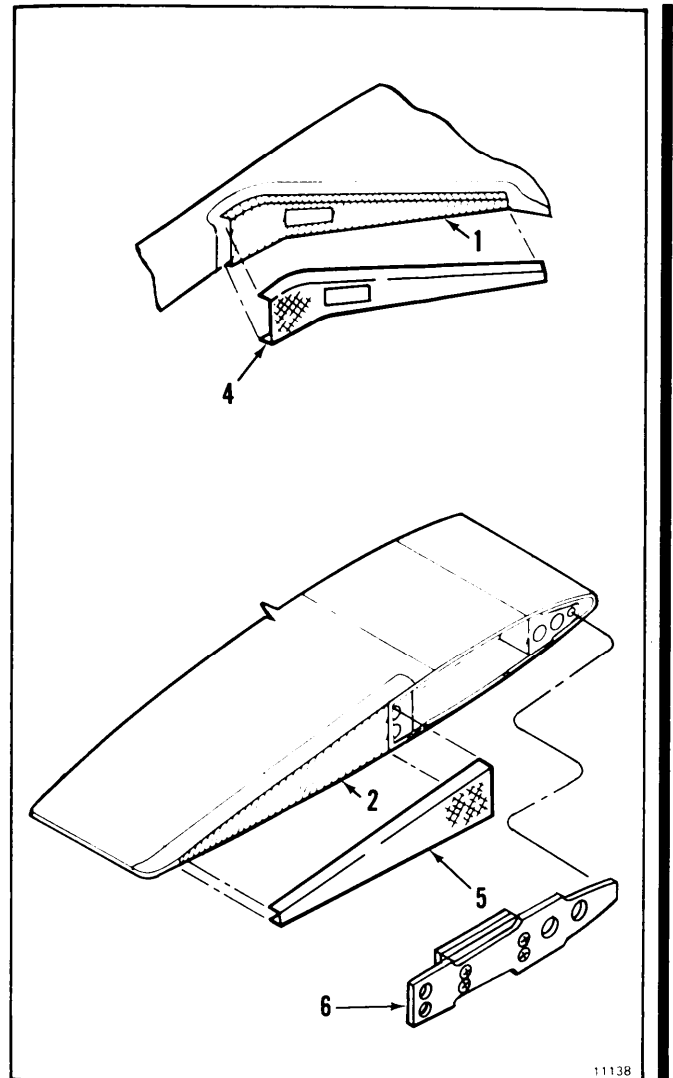

**GO TO NEXT PAGE**

## 17. Vacuum bag the repair as follows:

- a. Cover repair with a sheet of peel ply (E270) (6) and a sheet of teflon impregnated fabric (E170) (7). Cut material large enough to overlap repair 1 inch in all directions. Hold in place with masking tape (E388).
- b. Cover repair with fiberglass cloth (E132) (8).
- c. Surround cloth (8) with sealing tape (E396) (9). Keep tape clear of cloth.
- d. Attach tube (10) to vacuum pump hose. Wrap two layers of cloth (E132) around tube. Secure cloth to tube with masking tape (E388).
- e. Position tube (10) on cloth (E132). Wrap tube with sealing tape (E396) (11) where tube crosses sealing tape (9) already applied.
- f. Press tube (10) onto tape (9) to make airtight seal.

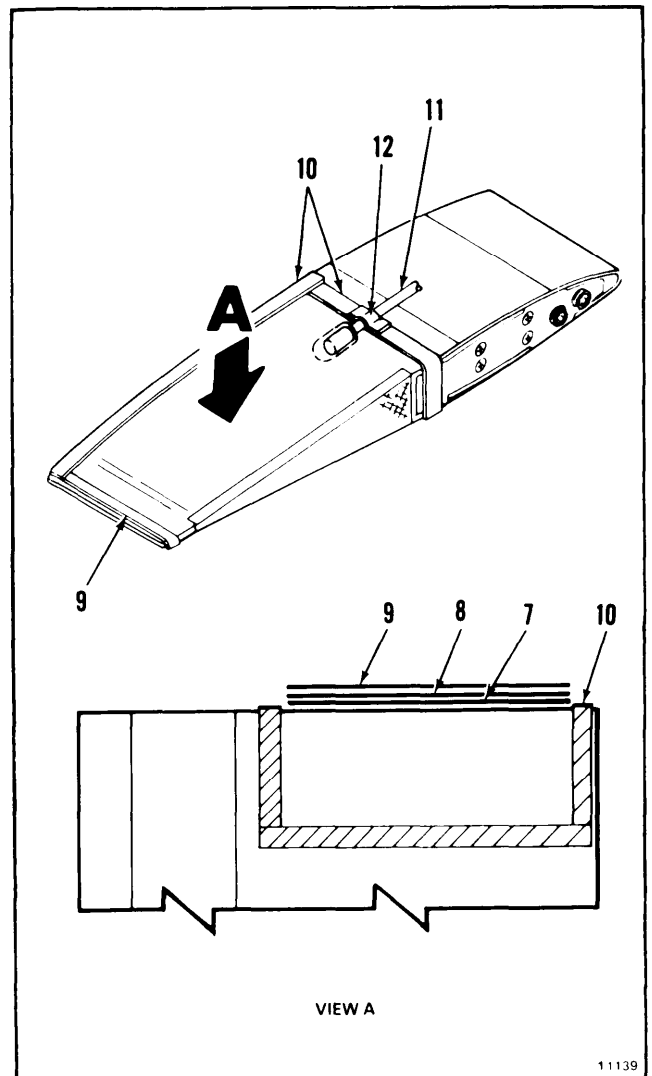

GO TO NEXT PAGE

5-292.6 Change 14

**5-76 INBOARD RIB COSURE AND TIP SEAL MINOR REPAIR**  
**(Continued)**

5-76

- g. Cut a piece of polyvinyl sheet (E284) large enough to overlap sealing tape (9) in all directions.
- h. Press polyvinyl sheet (12) onto sealing tape (9) to make airtight seal. Smooth out wrinkles.
- i. Start vacuum pump. Check for leaks. Reposition polyvinyl sheet or add sealing tape (E396) as needed.

18. Maintain 20 inches Hg during adhesive cure time.

**CAUTION**

**Do not exceed 180°F (82°C) at blade surface. Damage to fiberglass can occur.**

19. Cure adhesive at 140° to 160°F (60°C to 71 °C) for 2 hours. Use heat lamp. Monitor temperature. Use temperature indicating strips (E413).

**NOTE**

Serviceable cure can be achieved without heat at 70° to 80°F (21°C to 27°C in 24 hours. Vacuum may be removed after 2 hours.

20. Turn off vacuum pump. Remove polyvinyl sheet (12), tube (10), tape (9), fiberglass cloth (8), fabric (7), and peel ply (6).

21. Fair adhesive squeezeout to blade surface. Use abrasive paper (E9)

**INSPECT**



22. Weigh unused adhesive in mixing cup. Subtract weight recorded in step 11. The result is the weight of the repair for balance weight adjustment.

**NOTE**

All blade repairs, weight adjustment, painting, or balancing will be recorded on rotor blade DA Form 2408-16, each blade requires a separate form. If the rotor blade does not have a DA Form 2408-16, one must be prepared and all actions recorded, as example; location of repair, size of repair, weight of repair, and required weight adjustments for track and balance.

**FOLLOW-ON MAINTENANCE:**

- Refinish repaired area (Task 5-82).
- Adjust balance weights (Task 5-82.1).

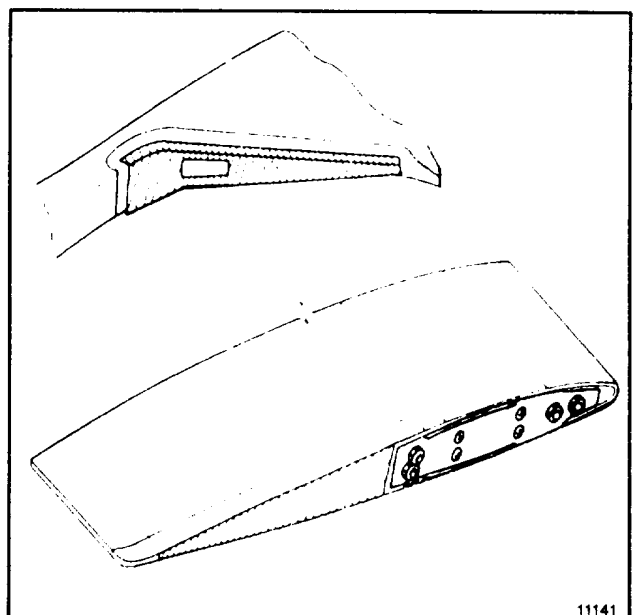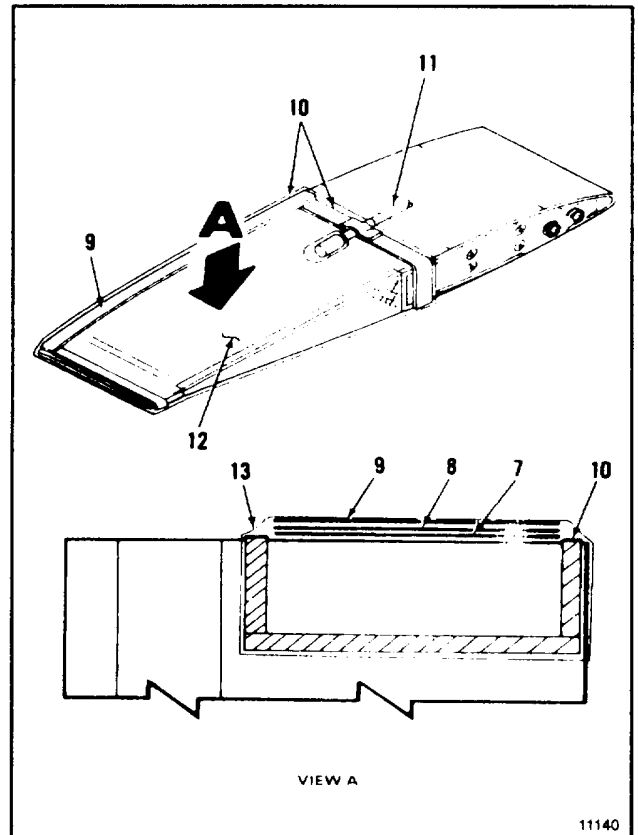

**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic Tool Kit,  
NSN 5180-00-323-4692

Torque Wrench, 150 to 750 inch-pounds

**Materials:**


Cloth (E120)  
Gloves (E186)  
Naphtha (E245)  
Antiseize Compound (E76)  
Tape (E388) or equivalent

**Personnel Required:**

Medium Helicopter Repairer  
Inspector

**Equipment Condition:**


Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Blade positioned Over Tunnel, One Forward and  
One Aft Blade Tied Down (Task 1-26)  
Work Platforms Open as Required (Task 2-2)  
Blade Tip Cover Removed (Task 5-73)

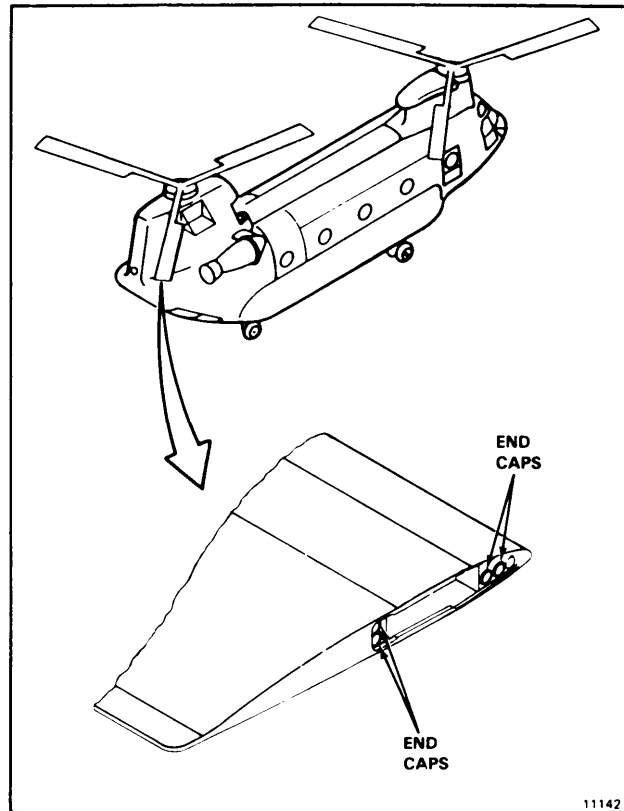

**NOTE**

Procedure is same to replace any weight tube end cap. Forward blade tip end cap is shown here.

1. Remove slotted end caps (1) and (2) from weight tube (3).
2. Apply tape (E388) (4) over end of each set of weight tubes (3) to retain weights.

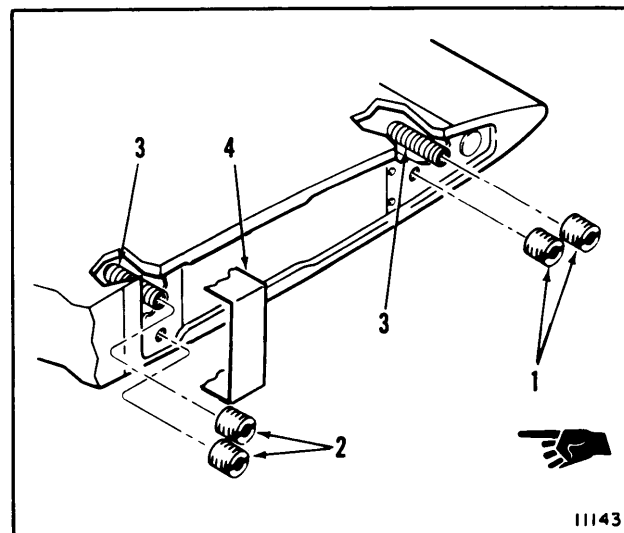

## 5-76.1 REPLACE TIP END CAP (Continued)

5-76. 1



**WARNING**

Naphtha (E245) is combustible and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from open flame. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

3. Clean thread of replacement end caps (1 and 2). Use clean cloth (E120) saturated with naphtha (E245). Wipe dry with clean cloth.
4. Remove tape (4) from weight tube (3).
5. Apply antiseize compound (E76) to thread of tip end caps (1 and 2). Screw caps into each set of weight tubes (3). Torque to 200 to 250 inch-pounds.

**FOLLOW-ON MAINTENANCE:**

- Install tip cover (Task 5-74).
- Close work platforms (Task 2-2).
- Remove blade tiedown lines (Task 1-26).

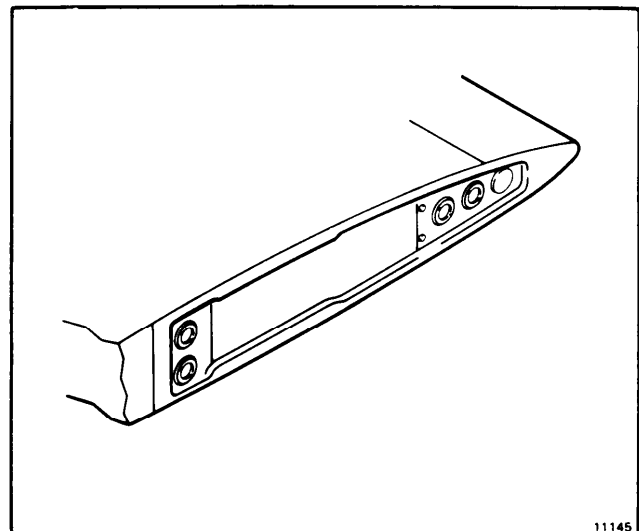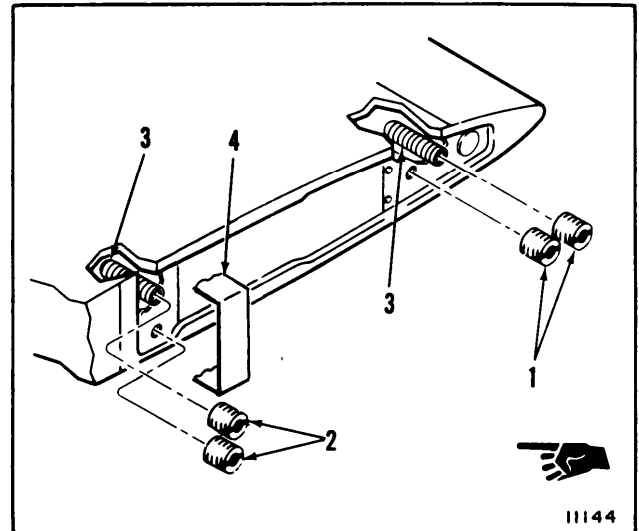**END OF TASK**



## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876  
Vacuum Cleaner

**Materials:**

Abrasive Paper (E7)  
Gloves (EI 86)  
Cloth (EI 20)  
Acetone (E20)  
Teflon Tape (E399)  
Aluminum (E70)  
Sealant (E336)  
Masking Tape (E388)  
Wood Spatula (E424)

**Personnel Required:**

Aircraft Structural Repairer  
Inspector

**Reference:**


TM 55-1520-240-23P

**Equipment Condition:**

Off Helicopter Task  
General Safety Instructions:

**WARNING**

- Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation.
- Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.
- Adhesive used in the manufacturing of some fiberglass rotor blades contain asbestos. During blade repair, strict adherence to all safety procedures when working with asbestos must be complied with (applies to blade serial numbers A-1-0001 to 1465 and A-2-001 to 1473 only)

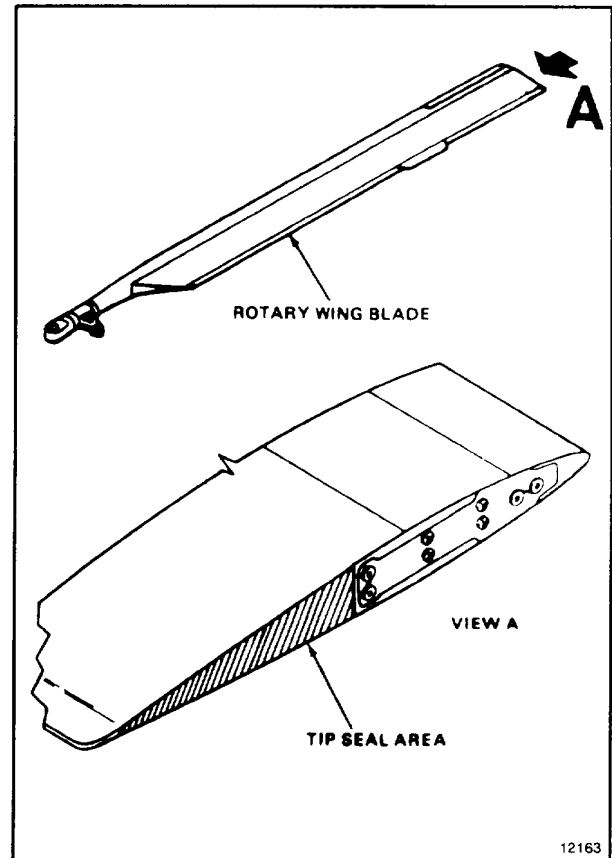

12163

GO TO NEXT PAGE



Change 37 5-293



**NOTE**

This repair not applicable to blades with tip sealant covered by fiberglass doubler.

1. **Remove loose or damaged material (1) from tip sealant (2).** Use pocket or utility knife.
  2. Check for bond voids in sealant (2). Voids are indicated by soft spots. Remove sealant to expose voids.
  3. Trim material around damage (1) to a feather edge.
- 
4. Clean damaged area (1). Use cloth (E120) damp with acetone (E20). Wear gloves (E186).
  5. Wipe area dry. Use cloth (E120).
  6. Mask fairing skin, and trailing edge of tip cover, if necessary. Use teflon tape (E399).

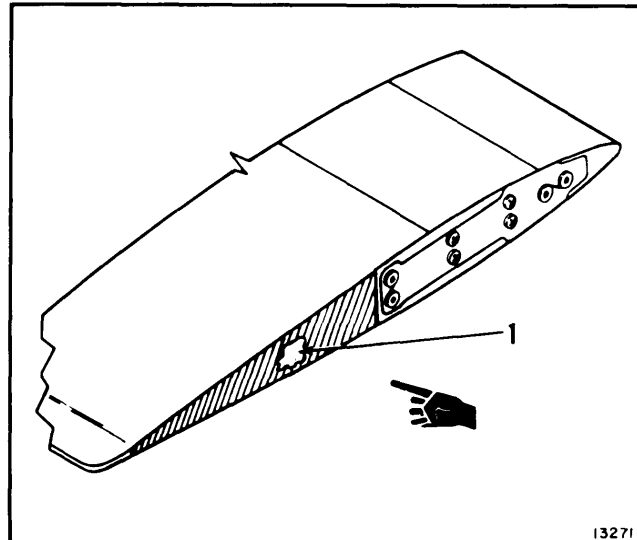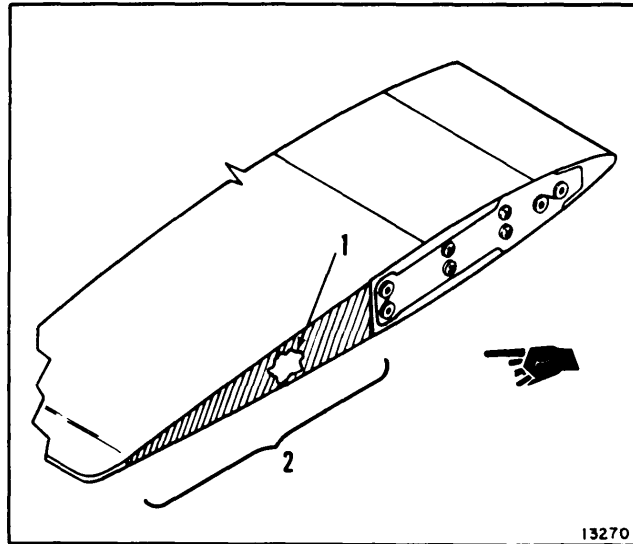


**GO TO NEXT PAGE**

5-294 Change 18

**5-77 TIP SEAL — MAJOR REPAIR (AVIM) (Continued)****5-77**

7. Cut piece of aluminum (E70) (3) to 4-inch x 18-inch size.
8. Position piece of teflon tape (E399) (4) adhesive, side up, on aluminum sheet (E70) (3). Hold tape (4) in place. Apply tape (E399) (5) over entire plate (3) and tape (4).

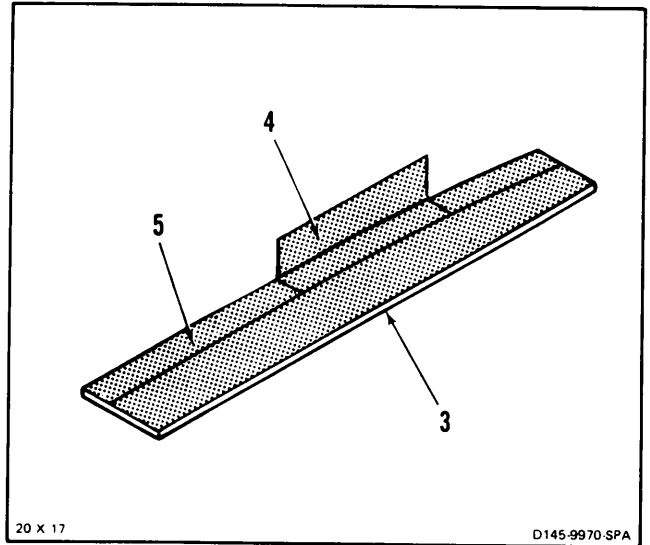
**GO TO NEXT PAGE**

9. **Attach end mold (6) to blade (7).** Use tape (4) as hinge. Secure tape to blade. Use masking tape (E38).

**WARNING**

Sealant (E336) can irritate skin and cause burns. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

10. **Mix sealant (E336).** Follow instructions on container. Blend until color is uniform.
11. **Fill fairing void slowly.** Use sealant (E336). As void is filled, raise end mold (6) toward vertical. Avoid air bubbles.
12. Let sealant (E336) stand several minutes. Break any bubbles that surface. Add sealant to fill any voids that remain. **Fair sealant.** Use wood spatula (E424).
13. Apply teflon tape (E399) to hold end mold (6) against blade (7).
14. **Allow sealant (E336) to cure 6 hours at 70°F to 80°F (21°C to 27°C).**
15. **Remove** masking tape (E388) and **end mold (6).**
16. Check for absence of voids, and smooth fairing.
17. (Deleted).
18. **Trim and sand repaired area.** Use pocket knife and abrasive paper (E7).

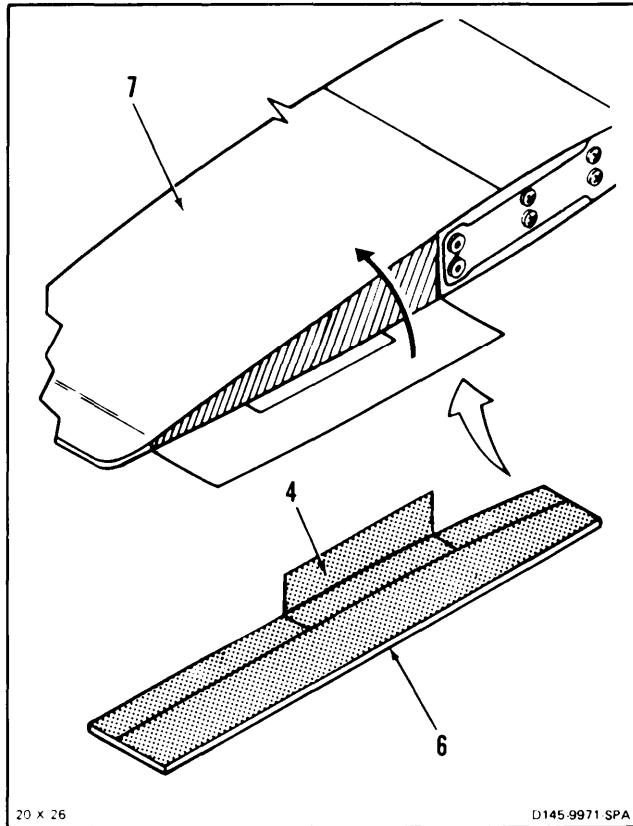

20 X 26

D145-9971 SPA

**INSPECT**

## FOLLOW-ON MAINTENANCE:

- Cover tip seal with fiberglass cloth (Task 5-76, steps 8 thru 21).
- Refinish blade repair (Task 5-82).

**END OF TASK**

**5-77.1 REPLACE LIGHTNING PROTECTION JUMPER WIRE**

**5-77.1**

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

- Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876
- Torque Wrench, 5 to 50 Inch-Pounds

**Materials:**

- Sealant (E336)
- Acetone (E20)
- Cloth (E120)
- Abrasive Paper (E9)
- Naphtha (E245)
- Lacquer, Black, Lusterless (E215)
- Lacquer Thinner (E415)
- Gloves (E184.1)

**Personnel Required:**


- Aircraft Structural Repairer
- Inspector

**References**

- TM 55-1500-344-23

**Equipment Condition:**

- Battery Disconnected (Task 1-39)
- Electrical Power Off
- Hydraulic Power Off
- One Forward and One Aft Rotary-wing Blade  
Tied Down (Task 1-26)
- Work Platform Open (Task 2-2)

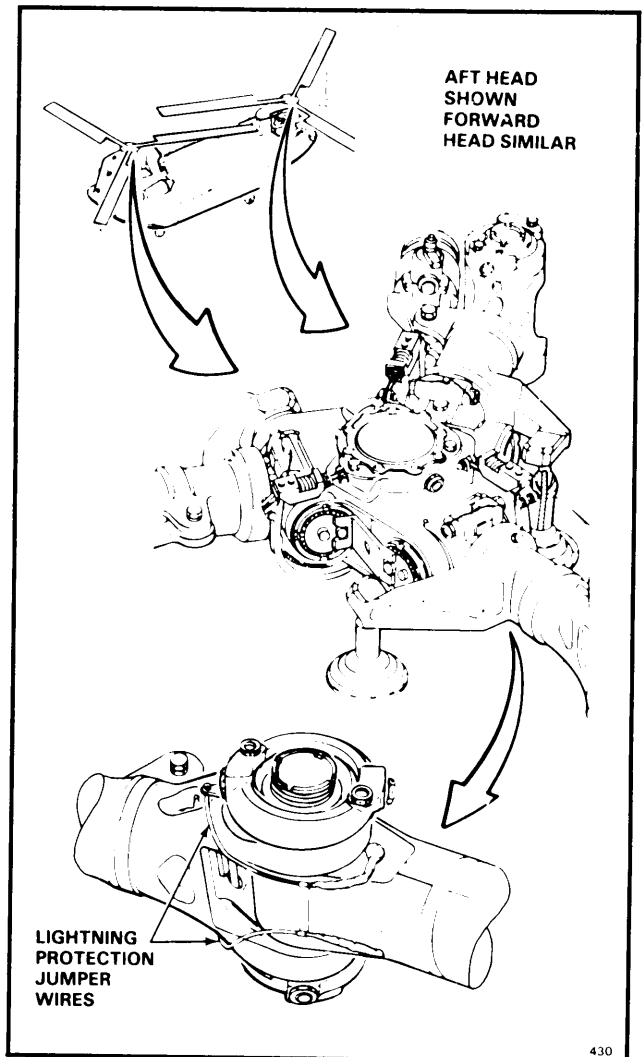

**CAUTION**


Ensure that blade surface is not damaged during sealant removal.

**NOTE**

Procedure is same to remove any of 12 lightning protection jumper wires.

**REMOVE JUMPER WIRE**

1. Remove sealant from bolt (1) and jumper wire (2). Use utility knife and chisel.

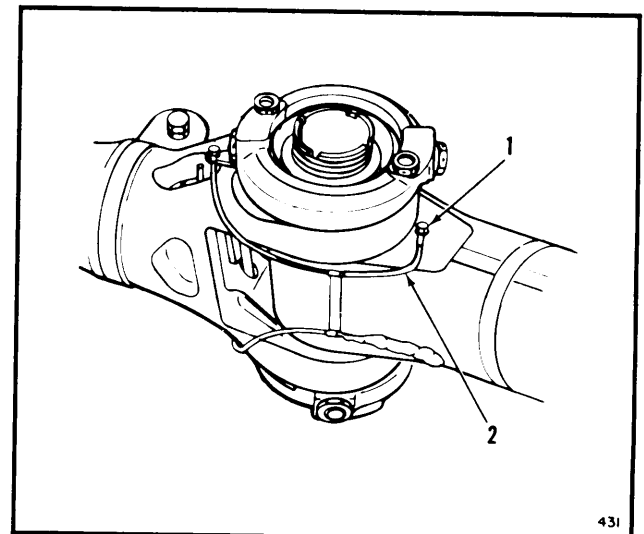


**GO TO NEXT PAGE**

## 5-77.1 REPLACE LIGHTNING PROTECTION JUMPER WIRE (Continued)


5-77.1

2. Remove bolt (1) and three washers (3) to **disconnect jumper wire (2) from blade (4).**
3. Remove bolt (5) and washer (6) to **disconnect jumper wire (2) from oil manifold tube (7).**
4. **Remove jumper wire (2) from clamp (8).**

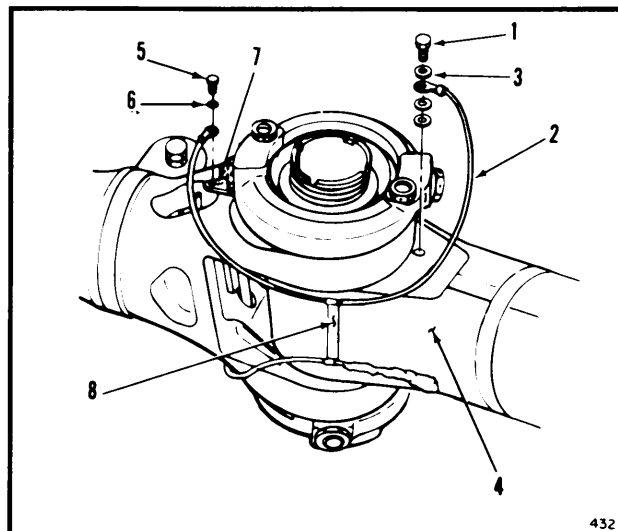


### INSTALL JUMPER WIRE

5. **Remove paint and sealant from strip (9) 2 inches wide along jumper wire path and around insert (10).** Expose fiberglass/epoxy surface. Use abrasive paper (E9).
6. **Wipe the prepared area.** Use cloth (E120) damp with acetone (E20). Wear gloves (E184.1). Wipe with a clean dry cloth before acetone evaporates. Make sure insert (10) is free of foreign matter.

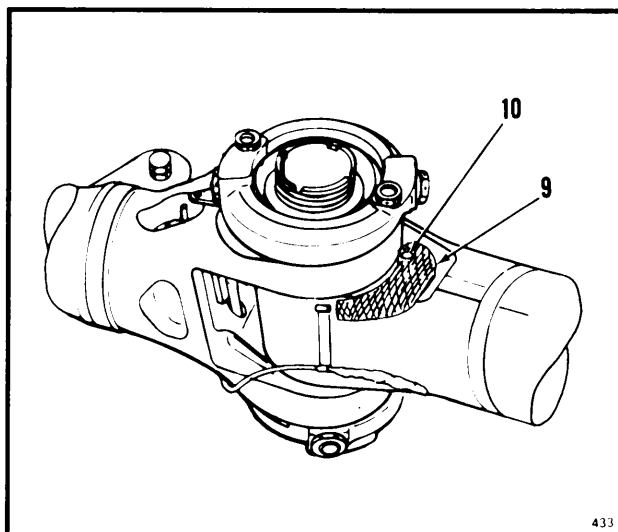

7. **Position one end of jumper wire (2) on oil manifold tube (7).** Install washer (6) and bolt (5). **Torque bolt to 35 inch-pounds.**
8. **Position two washers (3) and other end of jumper wire (2) on insert (10).** Install third washer (3) and bolt (1). **Torque bolt to 30 inch-pounds.**
9. **Install jumper wire (2) in clamp (8).**

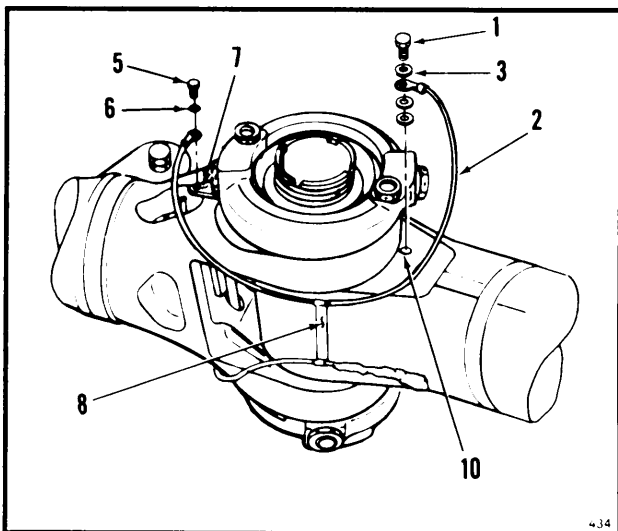

## 5-77.1 REPLACE LIGHTNING PROTECTION JUMPER WIRE (Continued)

5-77.1

**WARNING**

Sealant (E336) can irritate skin and cause burns. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

10. Apply sealant (E336) over bolt (1). Use enough sealant to cover 2 inch diameter area. Wear gloves (E184.1). Apply sealant over jumper wire (2) between bolt and clamp (8). Minimum sealant thickness shall be 0.6 inch. Wear gloves (E184.1).
11. Allow sealant to cure 6 hours at 70°F (21°C).



**INSPECT****WARNING**

Naphtha (E245) is combustible and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

12. Wipe area around sealed wire (2). Use cloths (E120) damp with naphtha (E245). Wear gloves (E184.1). Wipe naphtha dry before it evaporates. Wipe until cloths stay clean.
- 12.1. Determine the finish system used on the rotor blade (TM 55-1500:344-23).
  - a. For rotor blades without **58** proceed to step 13.
  - b. For rotor blades with **58** proceed to Task 2-350.1.

**WARNING**

Lacquer (E215) is extremely flammable. It can be toxic. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

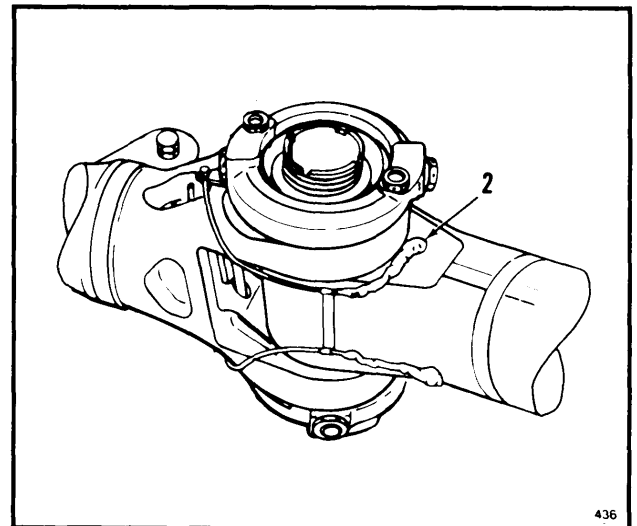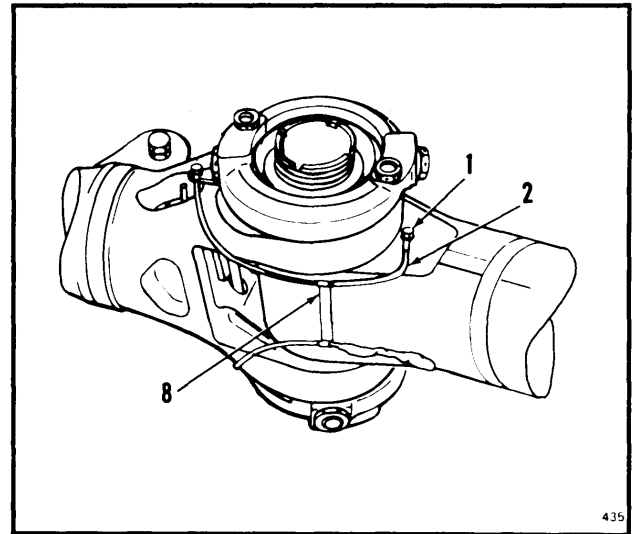**WARNING**

Thinner (E415) is flammable and toxic. It can irritate skin and cause burns. Use only with adequate ventilation away from heat or open flame. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

13. Thin black lacquer (E215), Use thinner (E415). Follow manufacturer's instructions.
14. Apply two coats of thinned lacquer (E215) to sealed wire (3). Wear gloves (E184.1). Allow to dry 45 minutes between coats.

GO TO NEXT PAGE

## **5-77.1 REPLACE LIGHTNING PROTECTION JUMPER WIRE (Continued) 5-77.1**

---

### **FOLLOW-ON MAINTENANCE:**

Close work platform (Task 2-2).

Remove tiedown lines from blades (Task 1-26).

**END OF TASK**

**5-296.4**

**Change 32**

**5-78 REMOVE LIGHTNING PROTECTION JUMPER WIRE INSERT****5-78**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876  
Twist Drill, 11/32-inch  
Screw Extractor, 5/16-inch

■ Heat Gun

**Materials:**


Temperature Indicating Strips (E413)

**Personnel Required:**

■ Aircraft Structural Repairer


**Equipment Condition:**

Off Helicopter Task

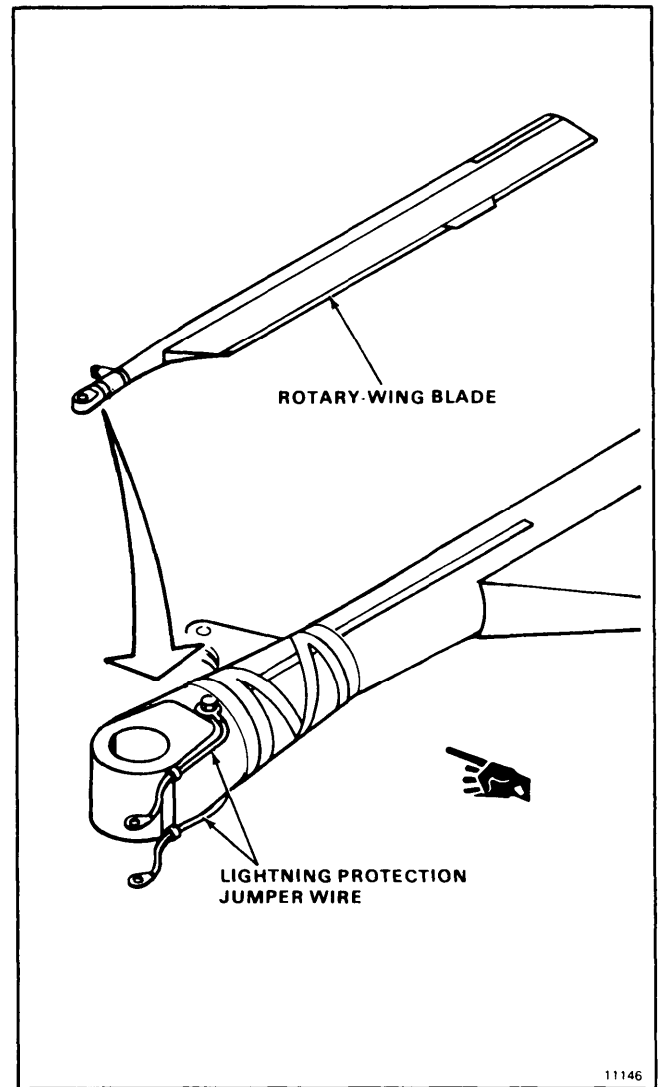**NOTE**

Procedure is same to remove any lightning protection ground cable insert. There are two ground cable inserts in each rotary-wing blade.

1. Remove sealant from bolt (1) and jumper wire (2). Use knife and file.
2. Remove bolt (1) and three washers (3). **Disconnect jumper wire (2).**

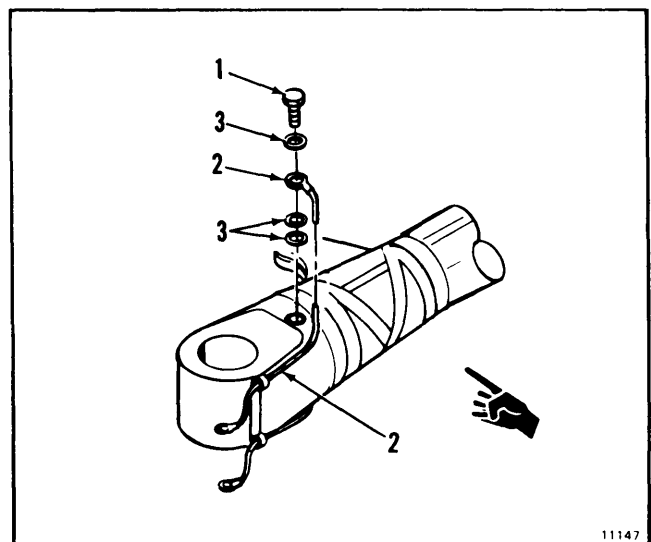
**GO TO NEXT PAGE**



**CAUTION**

Do not enlarge hole when drilling out insert. Blade will be damaged.


- 3. Drill out inside diameter of insert (4).  
Use 11/32-inch drill and mechanical stop set to 3/16-inch.
- 4. Bend locking keys (5) toward center of hole (6) until keys break off. Use small chisel.

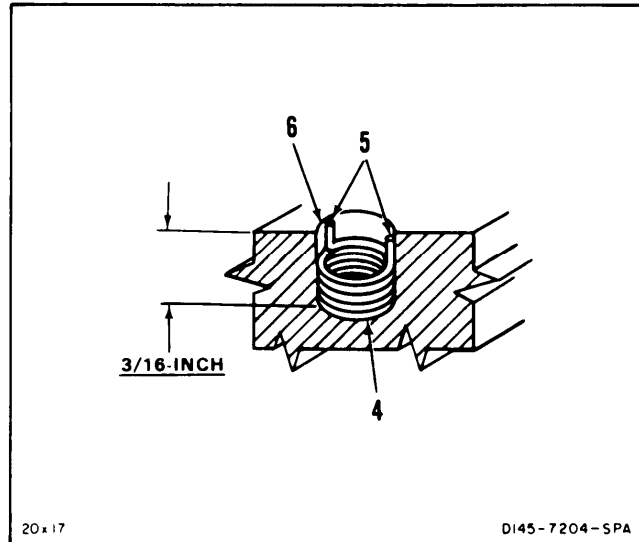

**CAUTION**

Do not allow blade temperature to exceed 160°F (71°C). Higher temperature can damage fiberglass.


- 5. Heat blade (7) around insert hole (6) to 140°F to 160°F (60°C to 71°C). Use heat gun. Use temperature indicating strips (E413) to monitor temperature.

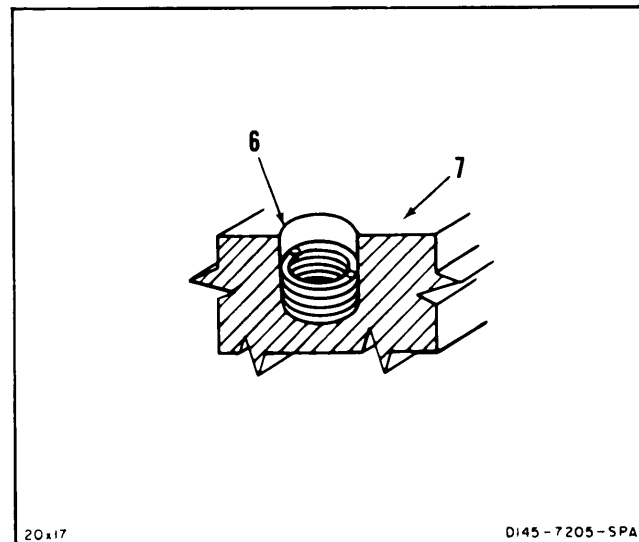

- 6. Remove remaining part of insert (4).  
Use screw extractor.

FOLLOW-ON MAINTENANCE:

None

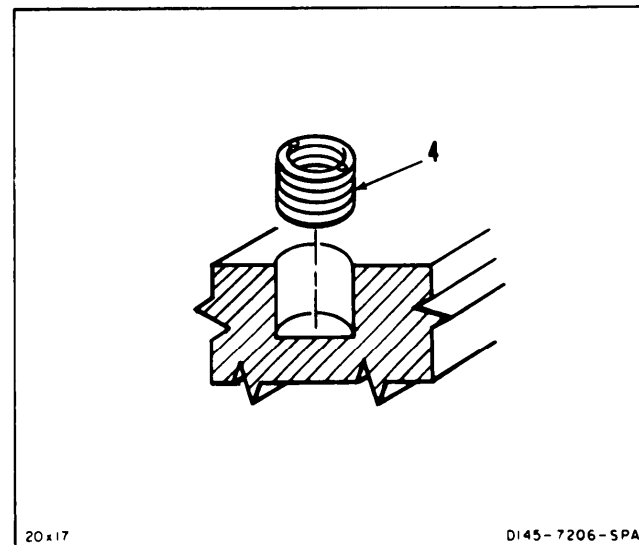

**5-79 INSTALL LIGHTNING PROTECTION JUMPER WIRE INSERT****5-79****INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876  
Installation Tool (T25)  
Heat Lamp  
Torque Wrench, 5 to 50 Inch-Pounds  
Compressed Air Source

**Materials:**

Temperature Indicating Strips (E413)  
Adhesive (E40) or (43)  
Sealant (E336)  
Acetone (E20)  
Cloth (E120)  
Gloves (E186)

**Parts:**

Insert

**Personnel Required:**


Aircraft Structural Repairer  
Inspector

**References:**

TM 55-1520-240-23P

**General Safety Instructions:****WARNING**

Adhesive (E40) is toxic and can irritate skin. Use in well-ventilated area. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

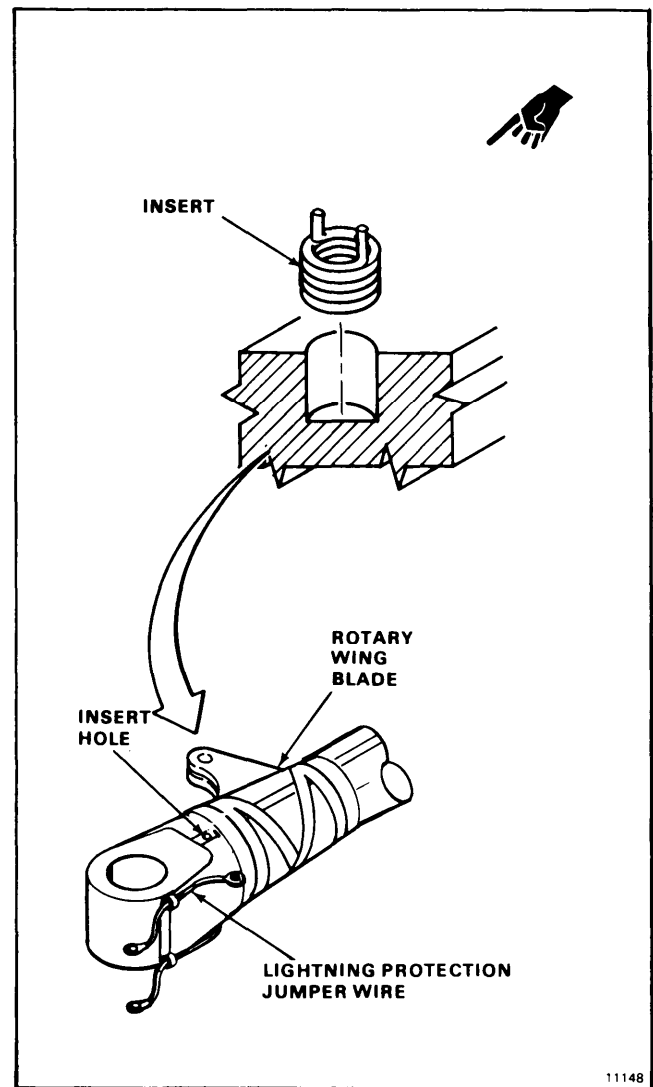

20 x 34

11148

**GO TO NEXT PAGE**

**WARNING**

Do not use more than 30 psi compressed air for cleaning purposes. Debris propelled under pressure can cause injury to eyes. Use source of compressed air under 30 psi and eye protection to prevent injury to personnel.


**WARNING**

Acetone (E20) can form toxic vapors if exposed to flame. Use in well-ventilated area, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**NOTE**

Procedure is same to Install any lightning protection ground cable insert. There are two ground cable inserts in each rotary-wing blade.

1. Clean insert hole (1). Use compressed air. Wipe out hole. Use cloth (E120) damp with acetone (E20). **Wear goggles to protect eyes.** Wear gloves (E186).

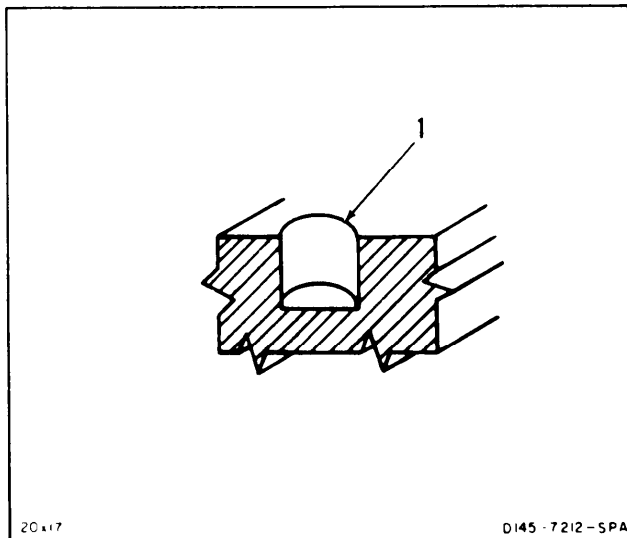**GO TO NEXT PAGE**


**5-79 INSTALL LIGHTNING PROTECTION JUMPER WIRE INSERT  
(Continued)**

2. Mix tube of prepackaged adhesive (E40) or (E43). Follow instructions in adhesive kit. Wear gloves (E186).

**NOTE**

Working life of adhesive is 30 minutes.

3. **Apply thin coat of adhesive (E40) or (43) to outside surface of insert (2).** Wear gloves (E186).

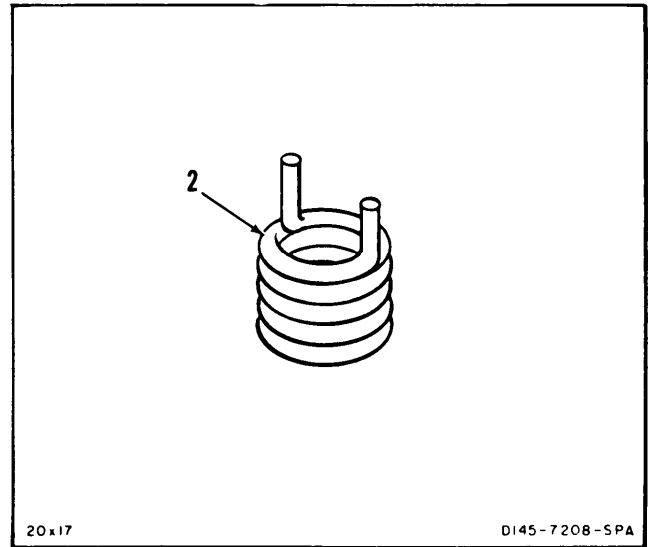

4. **Install insert (2) into blade (3).** Use installation tool (T25) (4). Tap tool to drive locking keys (5) into position. Remove tool.


**CAUTION**

Do not allow blade temperature to exceed 160°F (71°C). High temperature can damage fiberglass.

5. **Heat insert (2) to 140°F to 160°F (60°C to 71°C) for 2 hours to cure adhesive.** Use heat lamp. Use temperature indicating strips (E413) to monitor temperature.

**NOTE**


If heat lamp is not available, adhesive may be cured at 70°F to 80°F (21°C to 27°C) for 24 hours.

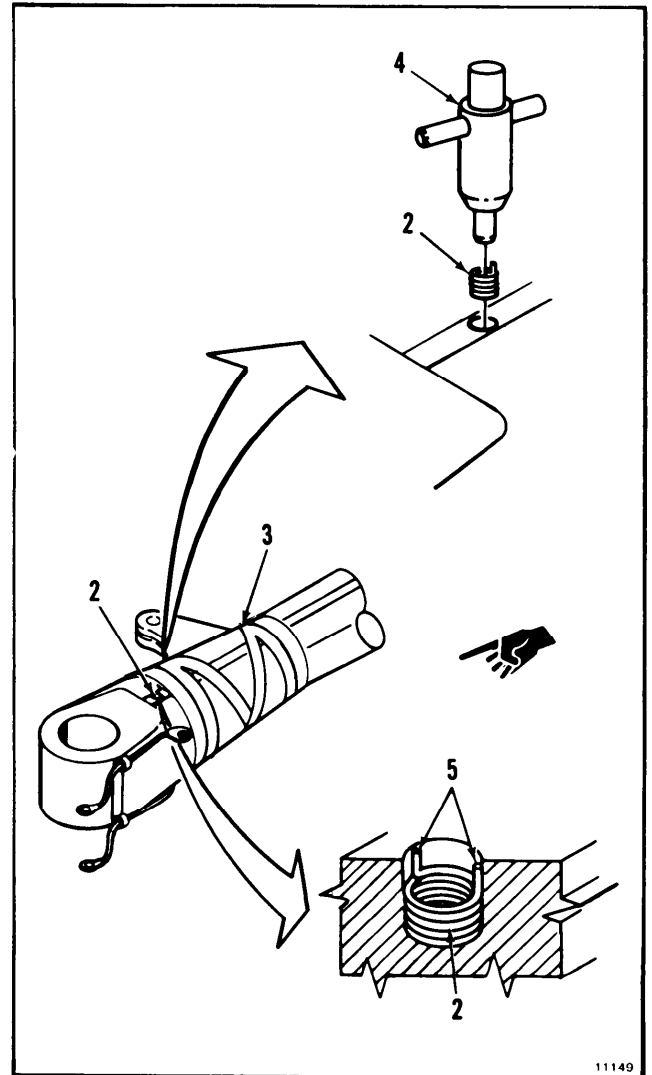

## 5-79 INSTALL LIGHTNING PROTECTION JUMPER WIRE INSERT (Continued)

5-79


6. **Position** two washers (6) and **wire (7)** over insert (2). **Install bolt (8)** and washer (9). **Torque bolt to 30 inch-pounds.**

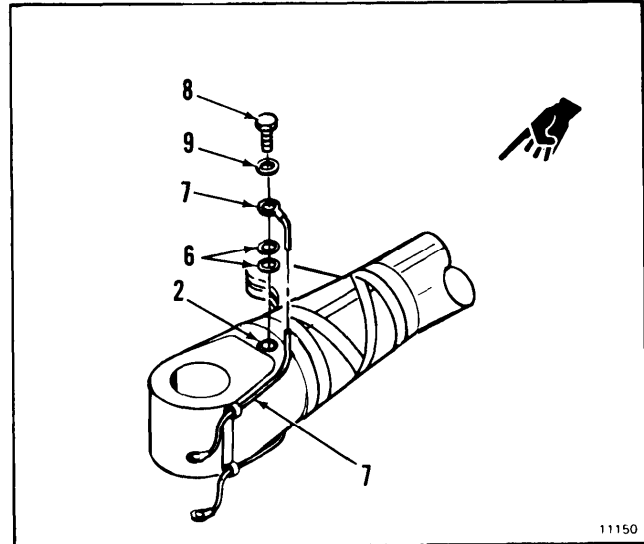

### WARNING

Sealant (E336) can irritate skin and cause burns. Avoid contact with skin, eyes, and clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

7. Apply sealant (E336) over wire terminal (10) and wire (7) to clamp (11). Wear gloves (E186). Allow sealant to cure at 70°F to 80°F (21°C to 27°C) for 6 hours.

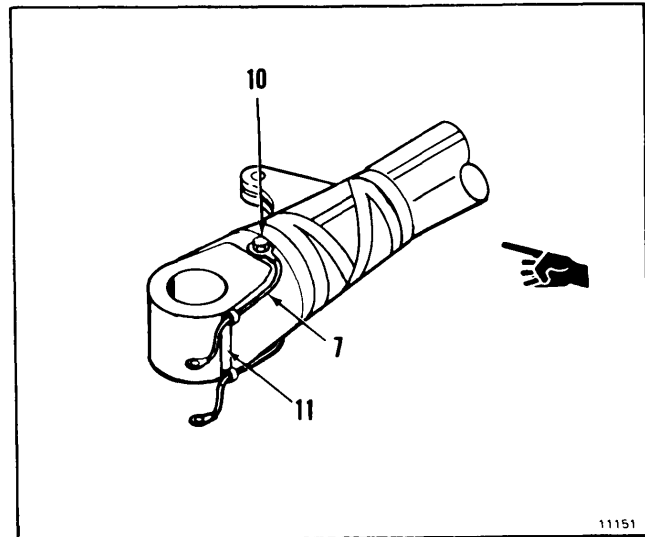

### FOLLOW-ON MAINTENANCE:

None

**END OF TASK**  
5-302 Change 14

**5-80 REMOVE TIEDOWN RECEIVER****5-80**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876  
Tiedown Receiver Tool (T25)  
Electric Heater, Gun-Type  
Aluminum Chisel (Appx D)  
Tap Wrench

**Materials:**


Temperature Indicating Strips (E413)

**Personnel Required:**

Aircraft Structural Repairer  
Inspector

**Equipment Condition:**

Off Helicopter Task

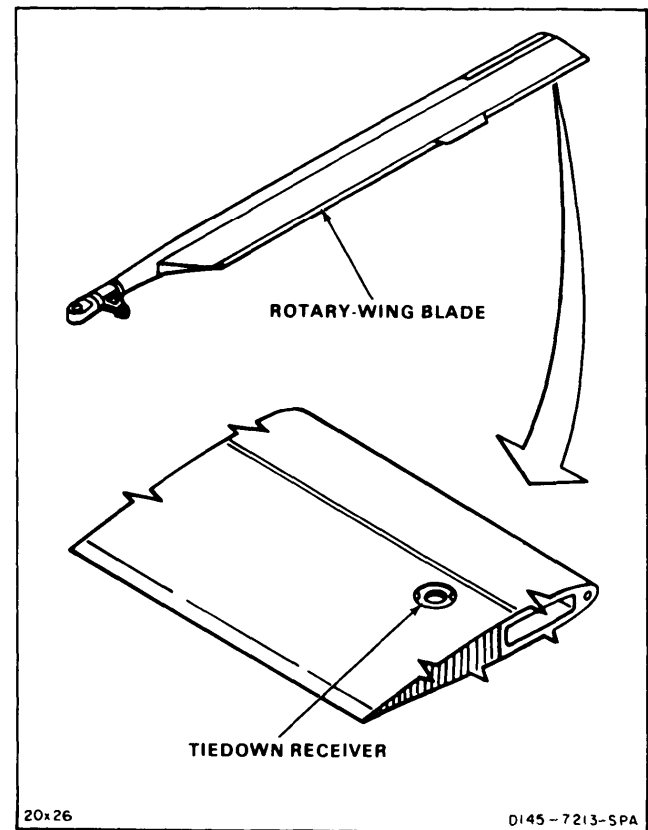


Do not heat blade over 160°F (71°C).  
Fiberglass can be damaged.

**NOTE**

Procedure is same to remove the tiedown receiver from any rotary-wing blade. There is one tiedown receiver on the underside of each blade.

1. Heat area around tiedown receiver (1) to 140°F to 160°F (60°C to 71°C) to soften adhesive. Use gun-type electric heater. Use temperature indicating strips (E413) to monitor temperature.
2. Remove sealant from around receiver (1). Use aluminum chisel.

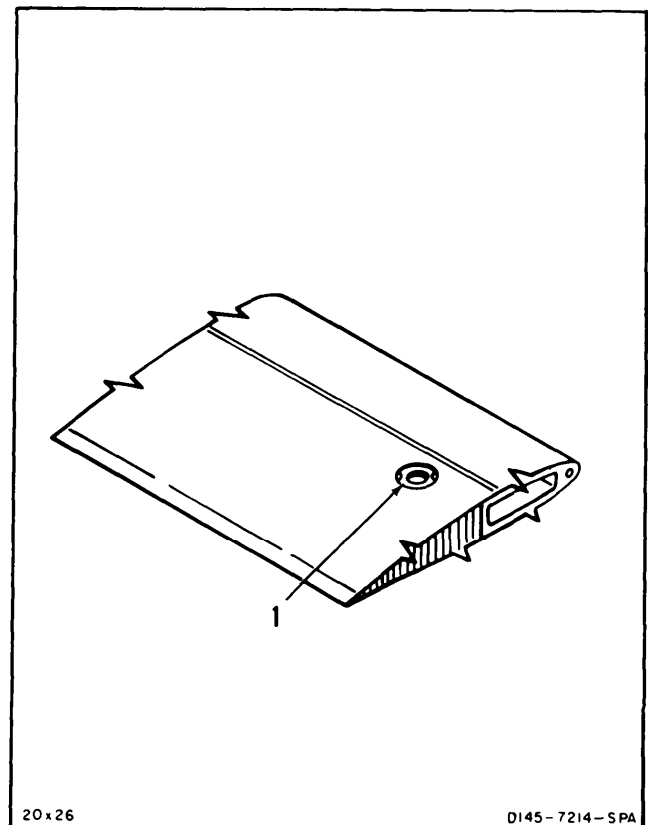**GO TO NEXT PAGE**

Change 23


5-303

3. Remove receiver (1) from blade (2) as follows:
  - a. Remove cap plug (3) from tool (T25) (4).
  - b. Remove extractor (5) from tool (T25) (4).
  - c. Install extractor (5) in tap wrench (6).
  - d. Remove receiver (1). Use tap wrench (6) and extractor (5).
4. Remove sealant from countersink (7) on blade (2). Use aluminum chisel.

**INSPECT**

FOLLOW-ON MAINTENANCE:

None

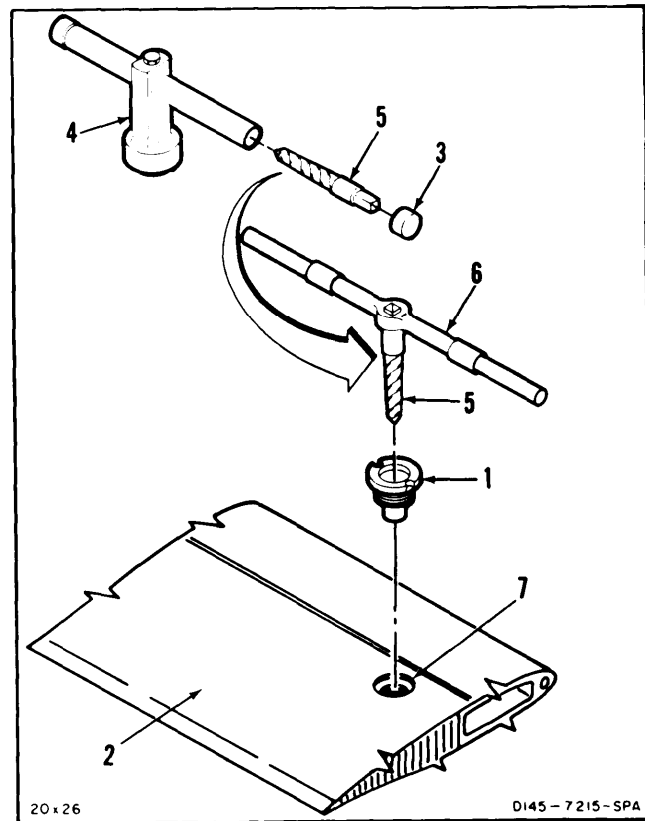**END OF TASK**

5-304

Change 23

**5-81 INSTALL TIEDOWN RECEIVER**

5-81

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

- Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876
- Tiedown Receiver Tool (T25)
- Drive Handle, 1/2-inch
- Source of Compressed Air
- Heat Lamp
- Trip Balance, NSN 6670-00-401-7195

**Materials:**

- Adhesive (E40, E41 or E43)
- Gloves (E186)
- Temperature Indicating Strips (E413)
- Wood Spatula (E424)
- Polyethylene Cup (E157)

**Personnel Required:**

- Aircraft Structural Repairer
- Inspector


**References:**

- TM 55-1520-240-23P

**General Safety Instructions:**

**WARNING**

Sealant may irritate skin and cause burns. Avoid contact with skin, eyes and clothing. In case of contact, immediately flush skin or eyes with plenty of water for at least 15 minutes. Get medical attention for eyes.

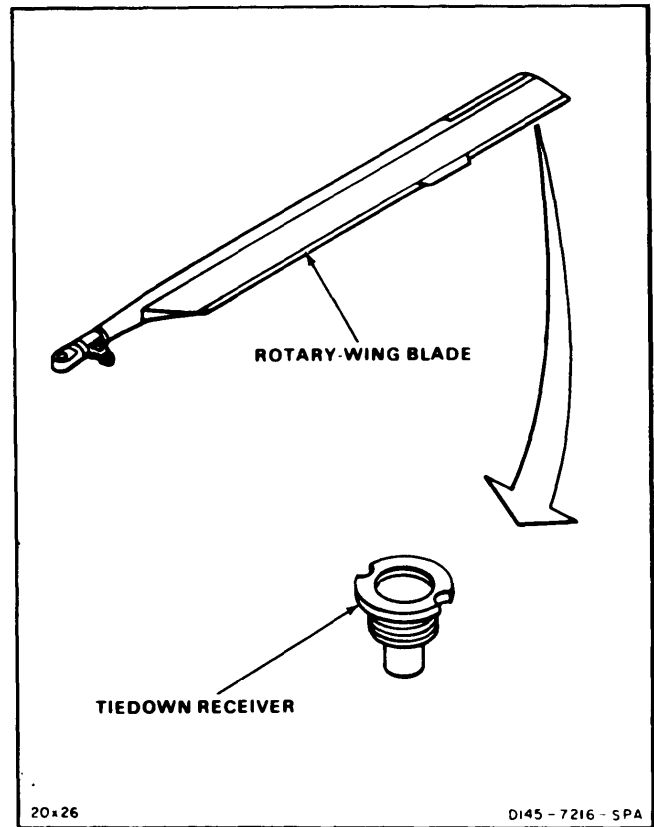


**WARNING**

Do not use more than 30 psi compressed air for cleaning purposes. Debris propelled under pressure can cause injury to eyes. Use source of compressed air under 30 psi and eye protection to prevent injury to personnel.

**NOTE**

Procedure is same to install any tiedown receiver. There is one tiedown receiver on the underside of each rotary-wing blade.

1. Clean receptacle (1). Use compressed air. Wear goggles to protect eyes.

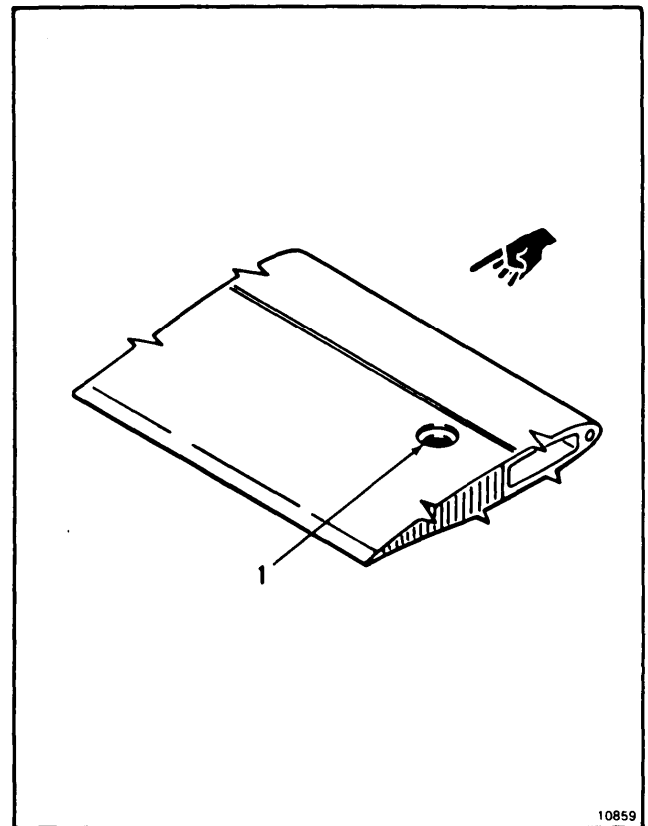

**GO TO NEXT PAGE**




2. Mix a small amount of adhesive (E40, E41, or E43) as follows:
  - a. For adhesive (E40), follow directions on the kit.

**NOTE**

Prepackaged adhesive (E40) is preferred. Use adhesive (E41) or (E43) only if prepackaged kit is not available.

- b. For adhesive (E41), weigh 100 parts of resin and 23 parts of hardener. Use trip balance. Mix in polyethylene cup (E157) until color is uniform. Use wood spatula (E424). Wear gloves (E186).
- c. For adhesive (E43), weigh 7 parts of gray hardener and 5 parts of white base. Use trip balance. Mix in polyethylene cup (E157) until color is uniform. Use wood spatula (E424). Wear gloves (E186).

3. **Apply adhesive to countersink (1) and flange of receiver (2).** Wear gloves (E186).
4. **Install receiver (2) into blade (3).** Use tool (T25) (4).

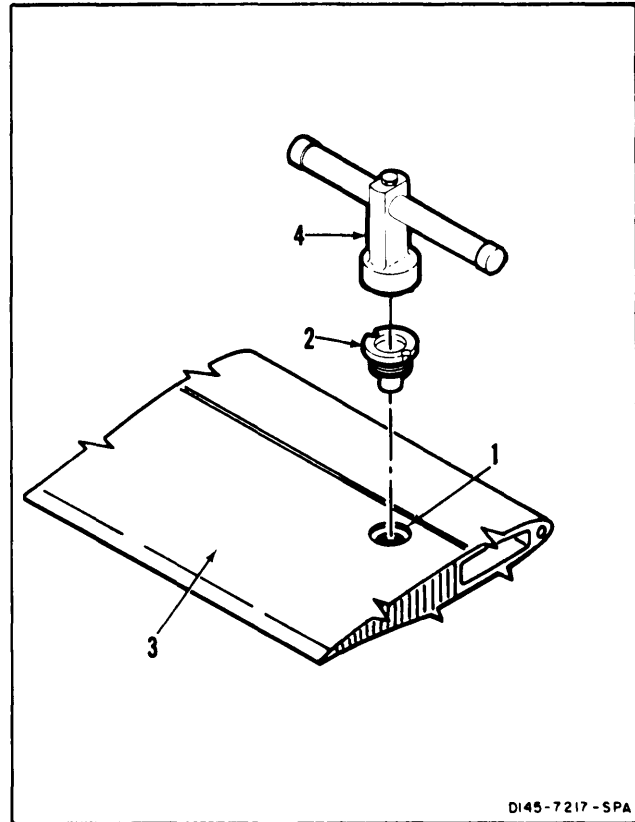

D145-7217-SPA

**GO TO NEXT PAGE**

5-306 Change 14

**5-81 INSTALL TIEDOWN RECEIVER (Continued)****6-81**

5. **Taper adhesive (5) around receiver (2).** Spread adhesive until it extends 1/4-inch from receiver. Use additional adhesive, if necessary.

**CAUTION**

**Blade temperature must not exceed 160°F (71°C). Overheating will damage fiberglass.**


6. Cure repair at 140°F (60°C) to 160°F (71°C) for 2 hours. Use heat lamp. Monitor blade temperature. Use temperature indicating strips (E413).

**NOTE**

If heat lamp is not available, cure at 70°F to 80°F (21°C to 27°C) for 24 hours.

**INSPECT****FOLLOW-ON MAINTENANCE:**

None

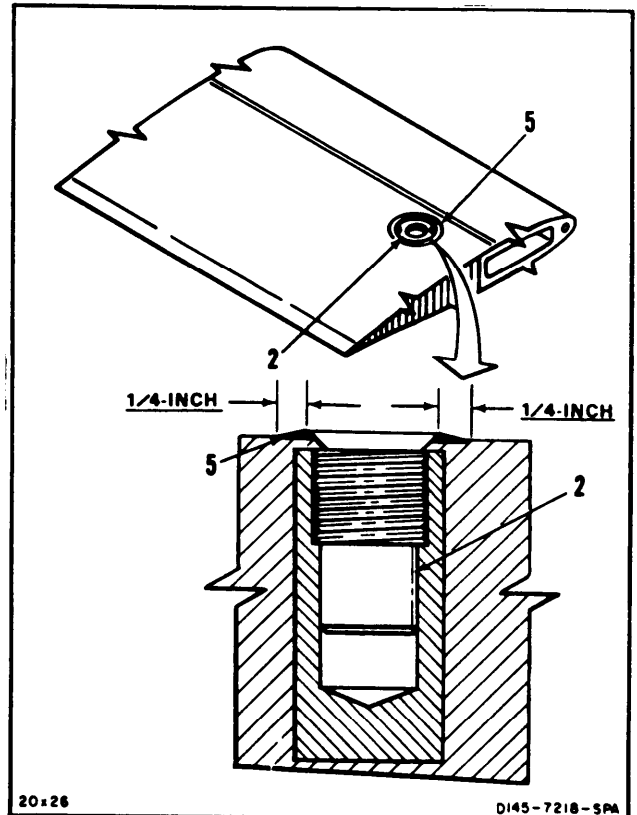**END OF TASK**

## 5-81.1 REPAIR ROTARY-WING BLADE TRIM TAB

5-81.1

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Shock Absorber Bracket Bushing Puller/Pusher  
(T98)  
Reamers (Appx E-23)

**Materials:**

Acetone (E20)  
Cloth (E120)  
Epoxy Primer (E292.1)  
Gloves (EI 84.1)  
Kevlar Gloves (E187)  
Dry Ice (E92)  
Methanol (E243)

**Personnel Required:**


Aircraft Powertrain Repairer  
Inspector

**References:**

TM 55-1520-240-23  
Task 5-82

**Equipment Condition:**

Off Helicopter Task  
General Safety Precautions:

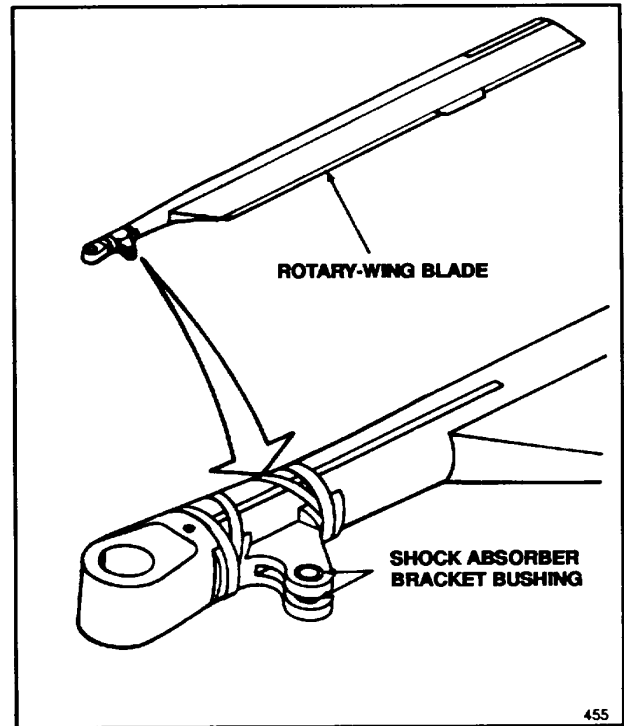**WARNING**

Acetone (E20) and epoxy primer (E292.1) are flammable and toxic. Good general ventilation is normally adequate. Skin and eye protection is required. Avoid all sources of ignition.

**WARNING**

Dry Ice (E92) in methanol (E243) has a temperature of -120°F (-84°C). Observe all safety measures when working with dry ice and methanol and when handling chilled parts. Avoid breathing carbon dioxide vapor.


GO TO NEXT PAGE

Change 34 5-306.2


## 5-81.1 REPLACE SHOCK ABSORBER BRACKET BUSHINGS (Continued)

5-81.1

1. **Inspect bushings** (1 and 2) for wear, nicks, and scratches.
  - a. On the top surface of bushings (1 and 2), nicks or scratches 0.025 inch or less deep can be blended out. On all other surfaces of both bushings, wear and damage is limited to a depth of 0.005 inch.
  - b. Damage greater than that specified in step a. requires replacement of the bushing.

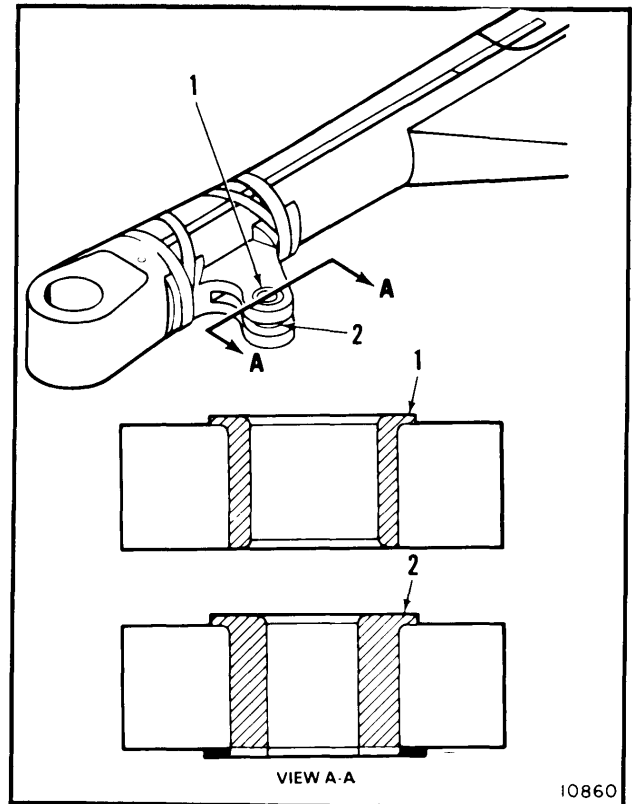

2. **Prepare pusher/puller** (T98) for use:
  - a. Remove pusher/puller (3) and pusher/guide (4) from threaded rod (5).
  - b. Remove rod (5) and nut (6) from yoke (7).

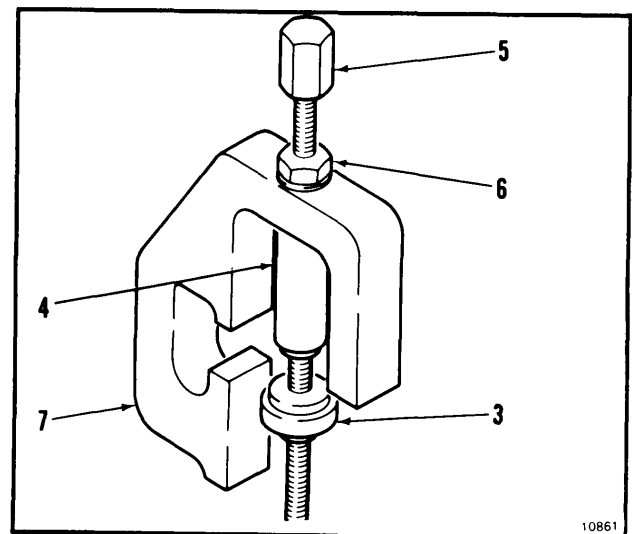

GO TO NEXT PAGE

**NOTE**

- Removal and installation of bushings is same for forward or aft rotor blades.
- Remove only one bushing at a time. An installed bushing is required to align the reamer when enlarging the bore for the removed bushing.


**REMOVE LOWER BUSHING**

3. **Position yoke (7)** over upper plate (8) of lag damper bracket.

**NOTE**

The flange side of both bushings is on the upper surface of the bracket plates.

4. Align hole in yoke (7) with bushings (1) and (2). **Install rod (5), with nut (6)** installed, through hole in yoke and bushings.
5. **Thread pusher/puller (3) on rod (5)** with the small diameter pilot (9) facing bushing (2). Seat pilot in bushing (2).
6. **Hold nut (6) and turn rod (5) counter-clockwise.** Use two wrenches. Turn rod (5) until bushing (2) is out of lower bracket plate (10).
7. Remove pusher/puller (3), bushing (2), rod (5) with nut (6), and yoke (7).

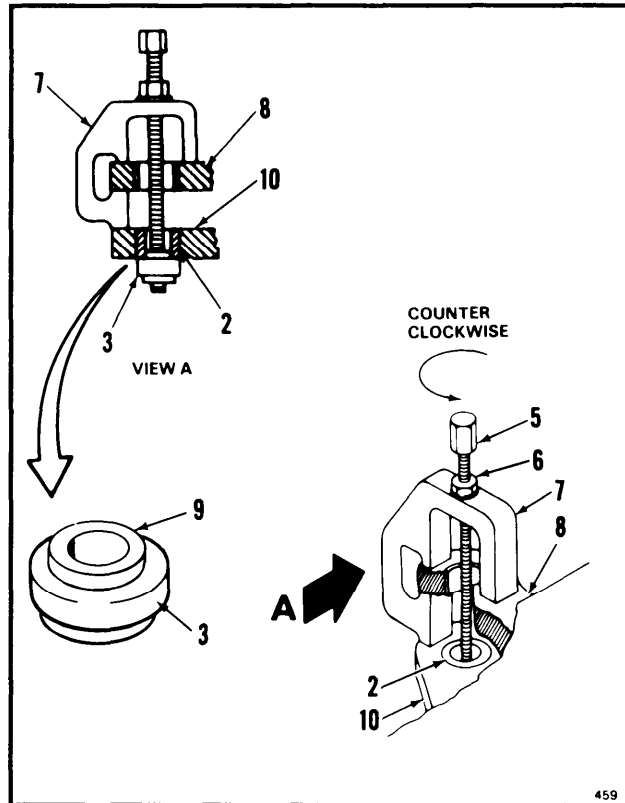

**5-81.1 REPLACE SHOCK ABSORBER BRACKET BUSHINGS  
(Continued)**

8. Remove finish from plate (10) for 1 inch around bushing bore (12). Use cloth (E120) damp with acetone (E20). Wear gloves (E184.1).
9. Inspect lower plate (10) in the area of finish removal for condition as follows:
  - a. If any damage in that area extends more than 0.030 inch from bushing hole (12), or hole is elongated, reject the rotor blade.
  - b. Measure bore (12) in two places; one parallel to blade and one at right angle to blade. If the bore is out of round by more than 0.002 inch or exceeds the dimension for any bushing listed in Table 1 below, it must be reamed to the next largest size shown in Table 1 below.
  - c. If bore (12) matches any size shown in Table 1, proceed to step 11. Install the proper bushing.

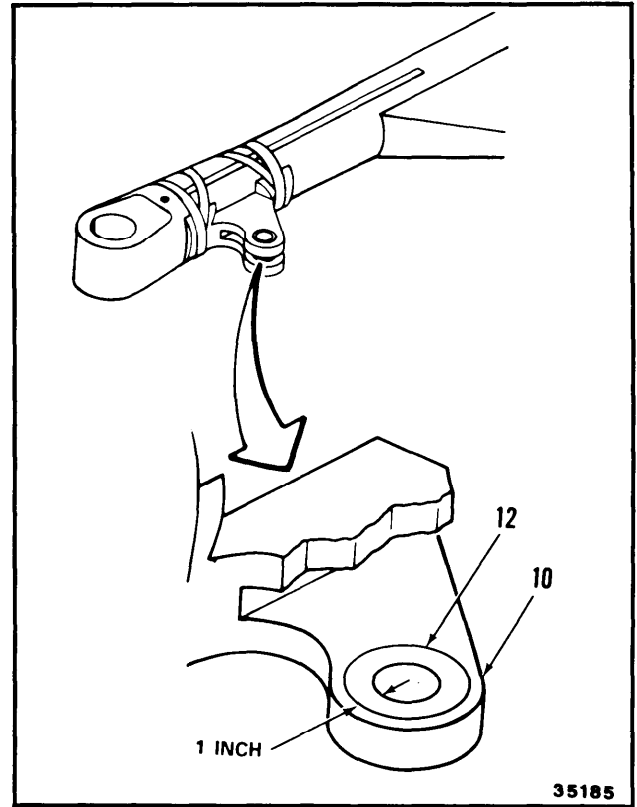



TABLE 1

BUSHING		BORE	
UPPER	LOWER	DIAMETER (INCHES)	REAMER
114R1774-4	114R1774-2	1.375 (+0.002 -0.00)	—
114R1774-6	114R1774-5	1.385 (+0.002 -0.00)	1X
114R1774-8	114R1774-7	1.395 (+0.002 -0.00)	2X
114R1774-10	114R1774-9	1.405 (+0.002 -0.00)	3X
114R1774-12	114R1774-11	1.415 (+0.002 -0.00)	4X
114R1774-14	114R1774-13	1.425 (+0.002 -0.00)	5X
114R1774-16	114R1774-15	1.435 (+0.002 -0.00)	6X

GO TO NEXT PAGE

**REAM LOWER BORE**


10. Ream the lower bore for oversize bushing as follows:
  - a. Select proper reamer (13) from Table 1.
  - b. Place sleeve (14) over reamer guide pin (15).
  - c. Position blade so that shavings and debris from reamer will not fall on the reamer guide pin. Binding may result.
  - d. Insert reamer guide pin (15) through bore in lower plate (10) and engage it in upper bushing (1). Hand ream the bore to size. Do not attempt to remove more than 0.010 inch of material with one cut of the reamer.
  - e. Remove equipment from the blade. Clean the bore and surrounding area. Use clean cloths (E120) damp with acetone (E20). Wear gloves (E184.1).

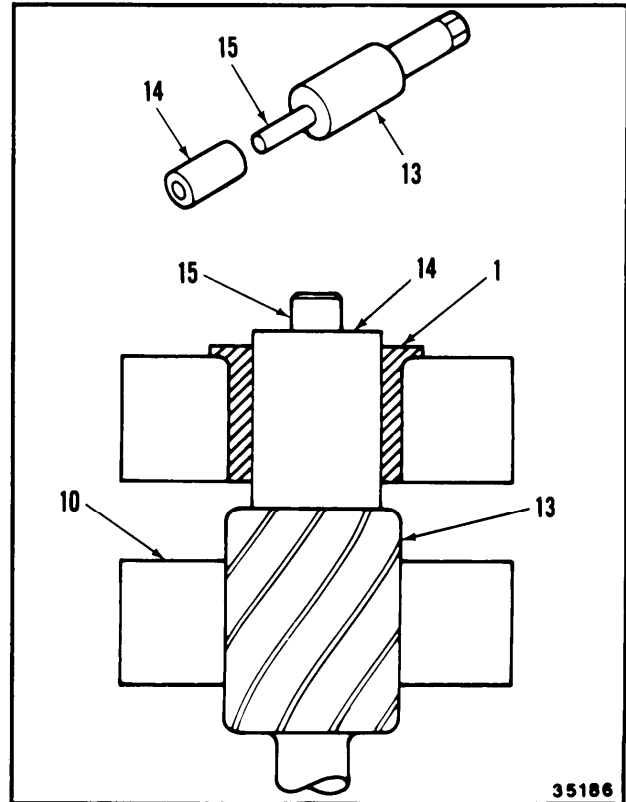

**INSPECT**

**INSTALL LOWER BUSHING**

11. Coat the outer surface of new bushing (2) with epoxy primer (E292.1). Allow to air dry for 24 hours. Wear gloves (E184.1).
12. Chill bushing (2) to -40°F. Use a mixture of dry ice (E92) in methanol (243). Wear Kevlar gloves (E187).
13. **Position pusher/puller** yoke (7) on lower bracket plate (10). Align hole in yoke with holes in bracket plates.
14. **Place replacement bushing (2) between bracket plates (8) and (10)**. Install rod (5), with nut (6), through yoke (7), bushing (2) and upper plate (8).
15. **Thread pusher/guide (4) and rod (5)** with small pilot end toward bushing (2). Seat pusher/guide in bushing.

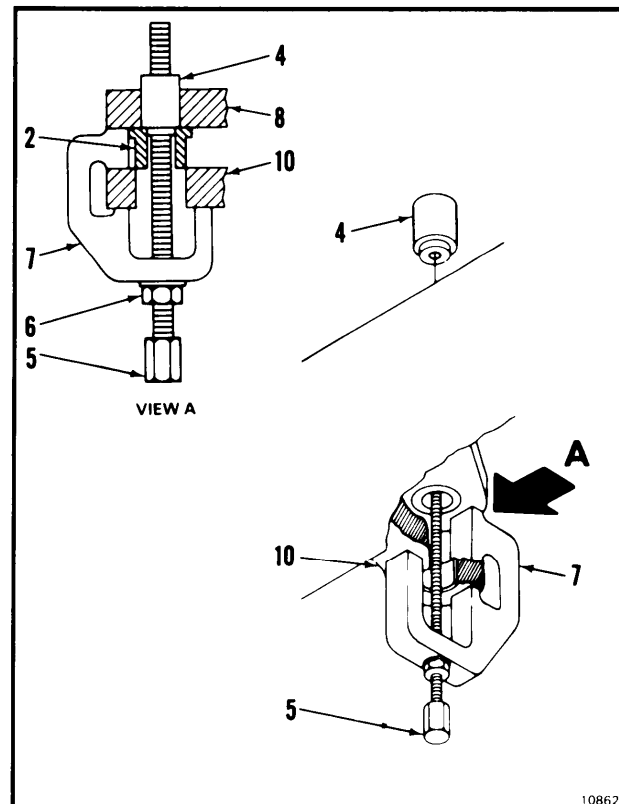


**5-81.1 REPLACE SHOCK ABSORBER BRACKET BUSHINGS  
(Continued)**

5-81.1

- 16. Hold nut (6) and turn rod (5) counter-clockwise. Use two wrenches. Turn rod until bushing (2) is fully seated in lower plate (10).
- 17. Remove rod (5) with nut (6) pusher/guide (4) and yoke (7).

**INSPECT**

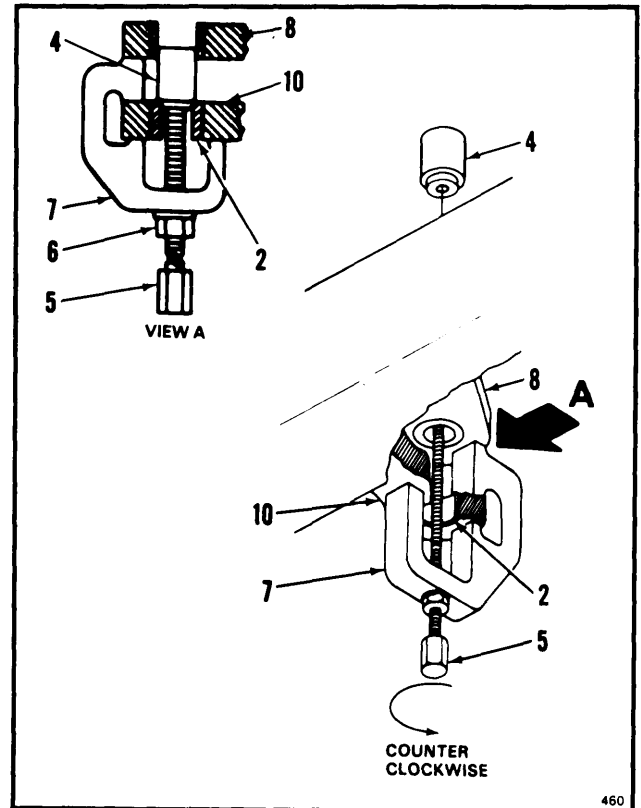


**REMOVE UPPER BUSHING**

- 18. Place pusher/puller yoke (7) over upper plate (8) of lag damper bracket. Align hole in yoke with hole in upper bushing (1).

**NOTE**

The flanged side of both bushings is on the upper surface of the bracket plates.


- 19. Install rod (5), with nut (6), through yoke (7) and bushing (1). Thread pusher/puller (3) on rod (5) until large pilot (11) is seated in bushing.
- 20. Hold nut (6) and turn rod (5) counter-clockwise. Use two wrenches. Turn rod (5) until bushing (1) is out of plate (8).
- 21. Remove pusher/puller (3). Remove rod (5) with nut (6), bushing (1) and yoke (7).

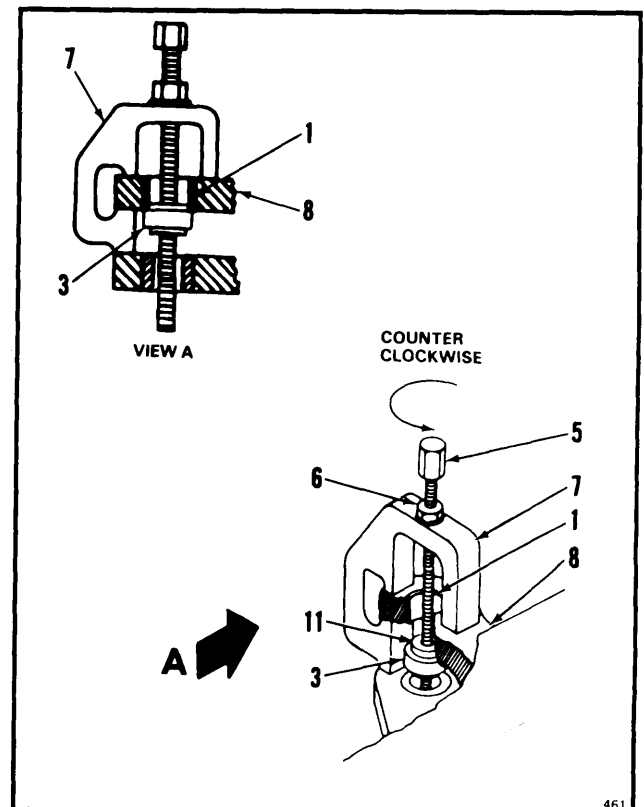

**GO TO NEXT PAGE**




22. Remove finish from upper plate (8) for 1 inch around bushing bore (12). Use cloth (E120) damp with acetone (E20). Wear gloves (E184.1).
23. **Inspect plate (8)** in the area of finish removal for condition as follows:
- If any damage in that area extends more than 0.030 inch from bushing bore (12), or bore is elongated, reject the rotor blade.
  - Measure bore (12) in two places; one parallel to the blade and one at right angle to the blade. If the bore is out of round by more than 0.002 inch or exceeds the dimension for any bushing listed in Table 1, it must be to the next largest size shown in Table 1.
  - If bore (12) matches any size shown in Table 1, proceed to step 24. Install the proper bushing.

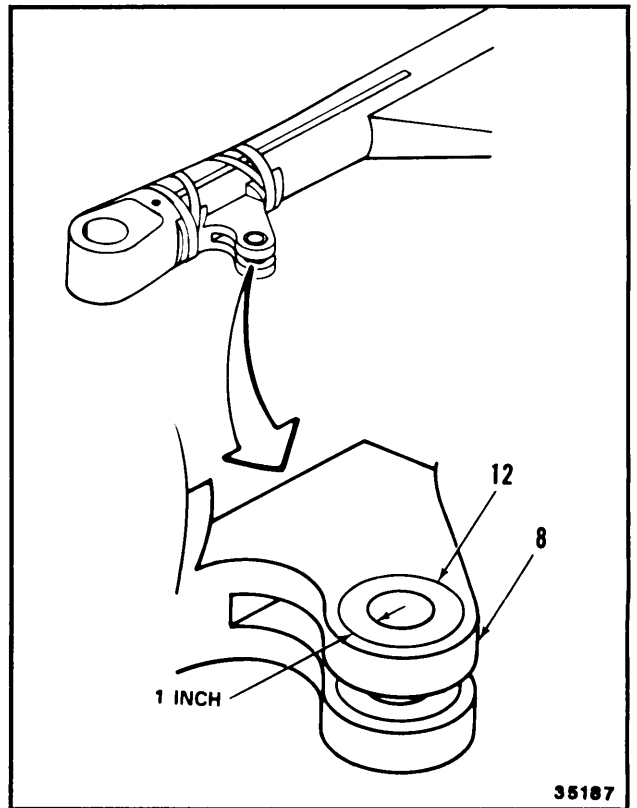

**REAM UPPER BORE**

24. Ream the upper bore for an oversize bushing as follows:
- Select the proper reamer (13) from Table 1.
  - Place sleeve (14) over reamer guide pin (15).
  - Turn the blade over so that shavings and debris from reamer (13) will not fall on reamer guide pin (15). Binding may result.
  - Insert reamer guide pin (15) through the bore in upper plate (8) and engage it in lower bushing (2). Hand ream the bore to size. Do not attempt to remove more than 0.010 inch of material with one cut of the reamer.
  - Remove equipment from the blade. Clean the bore and surrounding area. Use clean cloths (E120) damp with acetone (E20). Wear gloves (E184.1).

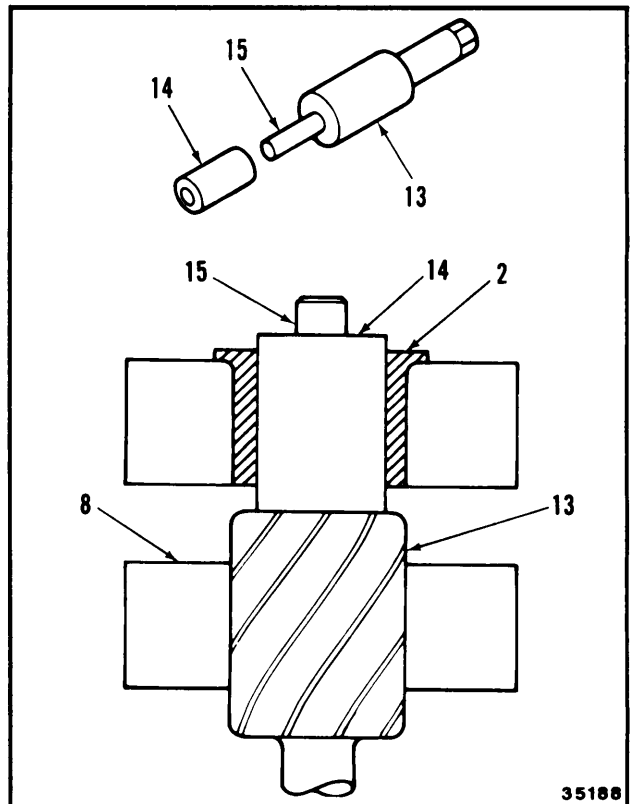


**INSPECT**

## 5-81.1 REPLACE SHOCK ABSORBER BRACKET BUSHINGS (Continued)

5-81.1

### INSTALL UPPER BUSHING


25. Coat the outer surface of new bushing (1) with epoxy primer (E292.1). Wear protective gloves (E184.1). Allow to air dry for 24 hours.
26. Chill bushing (1) to  $-40^{\circ}\text{F}$ . Use a mixture of dry ice (E92) in methanol (E243). Wear Kevlar gloves (E187).
27. **Position yoke (7) on lower plate (10).** Align the hole in the yoke with the holes in bracket plates (8 and 10).
28. **Install rod (5), with nut (6), through yoke (7) and bracket plates (8 and 10). Align replacement bushing (1) with the hole in upper plate (8). Thread pusher/puller (3) on rod (5) until large diameter pilot (11) is seated in bushing (1).**
29. Using two wrenches, hold rod (5) and **turn nut (6) clockwise** until bushing (1) is seated in the upper plate,
30. **Remove pusher/puller (3), rod (5) with nut (6), and yoke (7).**

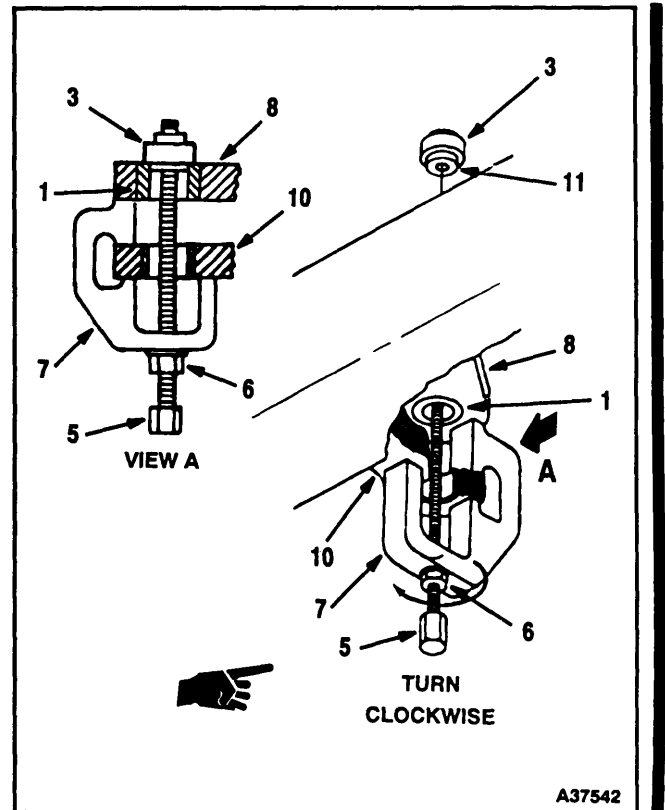

### INSPECT

31. **Prepare pusher/puller (T98) for storage** as follows:
  - a. Insert rod (5) with nut (6) through the top of the hole in yoke (7).
  - b. Thread pusher/guide (4) on rod (5) to retain the rod in yoke (7).
  - c. Thread pusher/puller (3) on rod (5).

FOLLOW-ON MAINTENANCE:  
Refinish bracket (Task 5-82).

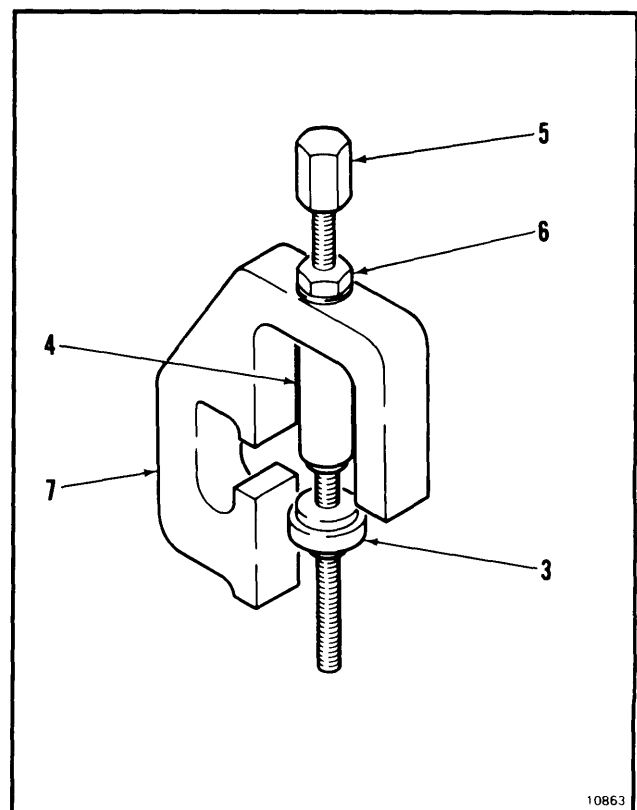

END OF TASK

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Heat Lamp  
Respirator  
Trip Balance, NSN 6670-00-401-7195

**Materials:**

Abrasive Paper (E7 and E9)  
Acetone (E20)  
Adhesive (E40, E41, E43, or E47.1)  
Cloth (E1 20)  
Gloves (E186)  
Peel Ply (E270)  
Polyethylene Cup (E157)  
Tape, Glass Cloth (E387)  
Teflon Impregnated Fabric (E170)  
Temperature Indicating Strips (E413)  
Wood Spatula (E424)  
Curing Agent (E1 58.1)

**Personnel Required:**

Aircraft Structural Repairer  
Inspector

**Equipment Condition:**

Off Helicopter Task

**General Safety Instructions:****WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.



Adhesive used in the manufacturing of some fiberglass rotor blades contain asbestos. During blade repair, strict adherence to all safety procedures when working with asbestos must be complied with (applies to blade serial numbers A-1-0001 to 1465 and A-2-001 to 1473 only).

1. Check depth of damage area (1). Depth shall not exceed 0.005 inch. If damage is deeper than 0.005 inch, return blade for disposition. If damage is less than 0.005 inch deep, go to step 2.

**CAUTION**

**Do not sand into filament windings.**

2. Remove finish 1 inch around all sides of damage area (1). Use abrasive paper (E7).

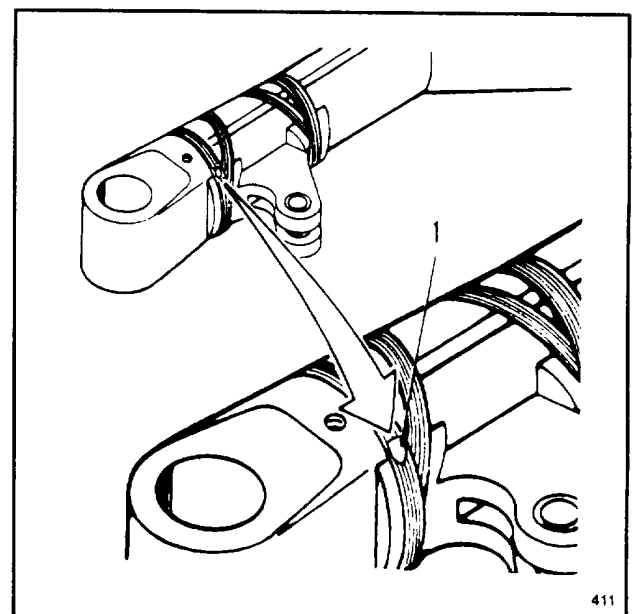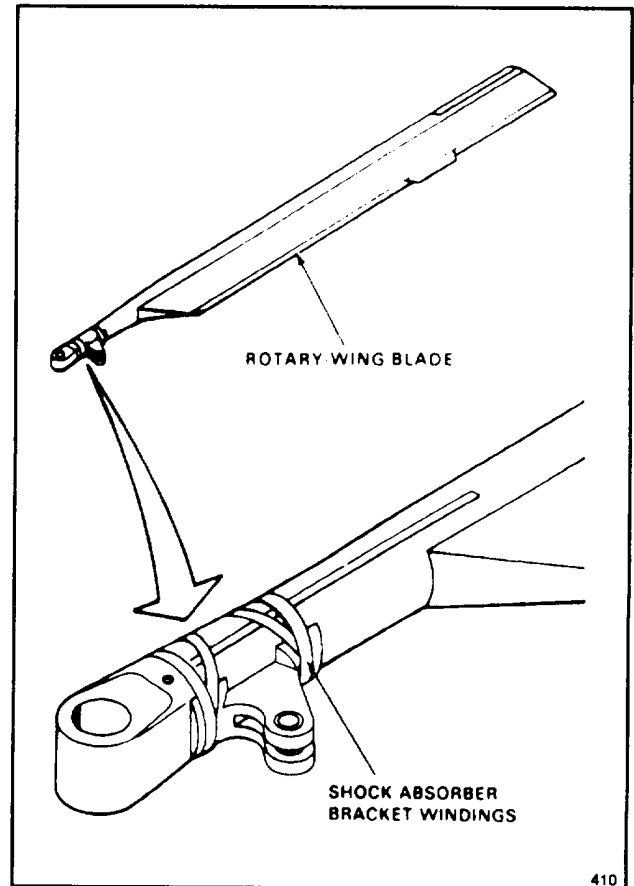


## 5-81.2 REPAIR KEVLAR SHOCK ABSORBER BRACKET WINDINGS — MINOR DAMAGE (Continued)

5-81.2

### WARNING

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

3. **Wipe damage area (1) clean.** Use cloth (E120) damp with acetone (E20). Wear gloves (E186). Wipe dry with clean cloth before acetone evaporates.

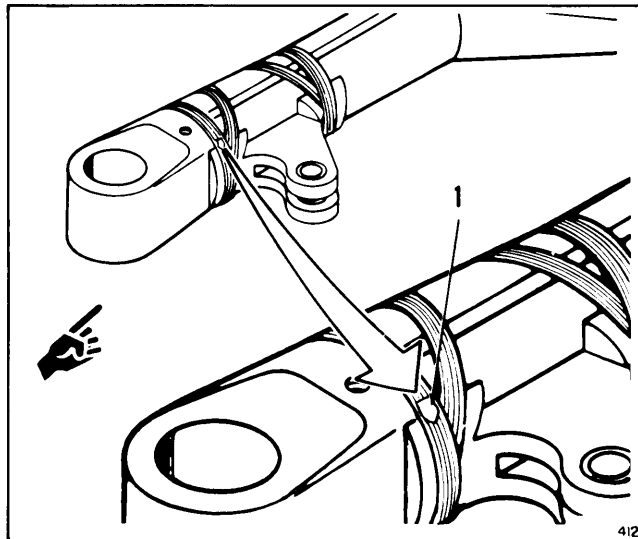

### INSPECT

### WARNING

Adhesive (E40 or E41) is toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

### NOTE

Prepackaged adhesive (E40) is preferred. Use adhesive (E41, E43, or E47.1) only if prepackaged kit is not available.

4. **Mix tube of adhesive (E40).** Follow instructions on kit.
5. If adhesive (E40) is not available, prepare adhesive (E41) as follows:
  - a. Weigh 100 parts of resin and 23 parts of hardener. Use trip balance.
  - b. Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).

### NOTE


Working life of adhesive is 30 minutes.

**GO TO NEXT PAGE**

## 5-81.2 REPAIR KEVLAR SHOCK ABSORBER BRACKET WINDINGS — MINOR DAMAGE (Continued)

5-81.2

- 5.1 If adhesive (E43) is used, prepare as follows:
- Weigh 7 parts of gray hardener and 5 parts of white base. Use trip balance.
  - Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).
- 5.2 If adhesive (E47.1) is used, prepare as follows:
- Weight equal parts of adhesive (E47.1) and curing agent (E158.1). Use trip balance.
  - Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).
6. **Fill damage area (1) with adhesive (E40, E41, E43 or E47.1).** Smooth adhesive until it is level with surface. Make sure all loose fibers are turned into repair area.
7. **Cover damage area (1) with peel ply (E270) (2) 1 inch larger, on all sides, than damage area.**
8. **Cover peel ply (E270) (2) with teflon impregnated fabric (E170) (3) of the same size.**
9. **Secure peel ply (E270) (2) and teflon impregnated fabric (E170) (3).** Use tape (E387) (4).

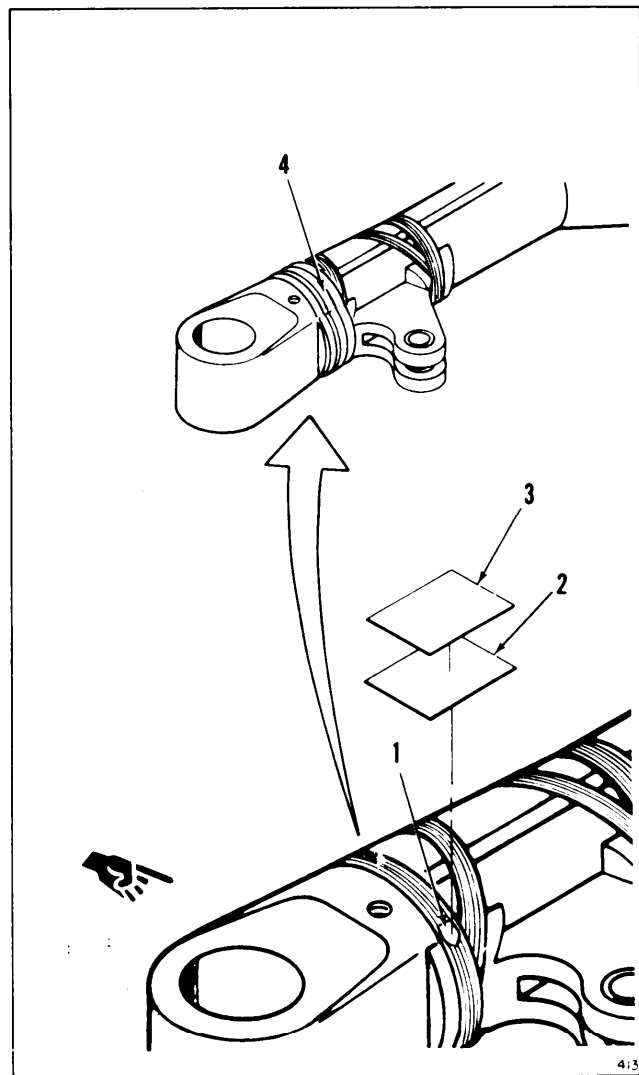

## 5-81.2 REPAIR KEVLAR SHOCK ABSORBER BRACKET WINDINGS — MINOR DAMAGE (Continued)

5-81.2

### CAUTION

Do not exceed 160°F (71°C) at blade surface. Damage to fiberglass can occur.

- Cure adhesive at 150 - 160°F (66 - 71°C) 2 hours. Use heat lamp. Monitor temperature. Use temperature indicating strips (E413).

### NOTE

Serviceable cure can be achieved without heat at 70 - 80°F (21 - 27°C) in 24 hours. Pressure may be removed after 12 hours.

- Remove tape (4), teflon impregnated fabric (3), and peel ply (2).

### WARNING



Do not sand adhesive without wearing respirator. Harmful particles can be inhaled.

- Blend repair (1) into area around it. Use abrasive paper (E9). Wear respirator.

### INSPECT

### FOLLOW-ON MAINTENANCE:

Refinish repaired area (Task 5-82).

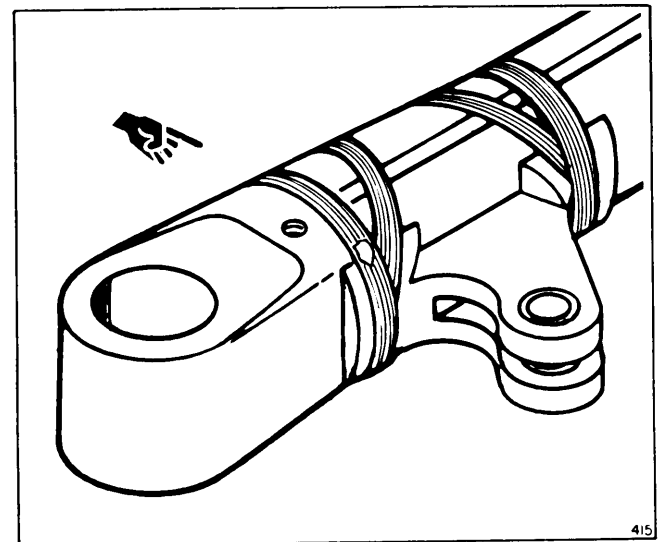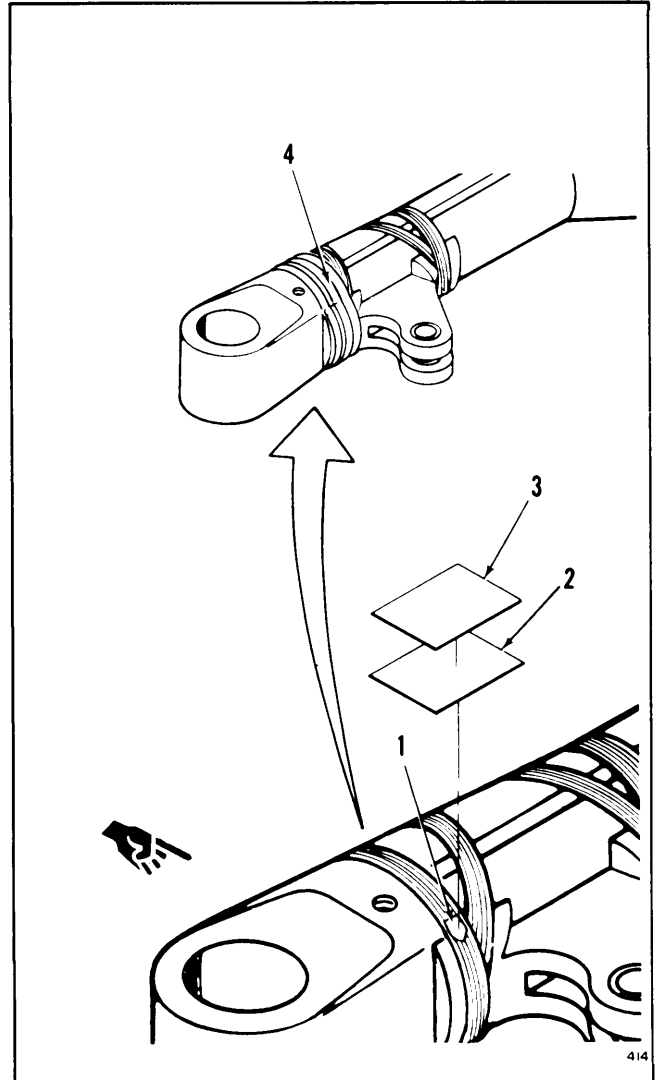

**INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Heat Lamp  
Respirator  
Trip Balance

**Materials:**

Abrasive Paper (E7)  
Acetone (E20)  
Adhesive (E40 or E41)  
Curing Agent (E158.1)  
Gloves (EI 84.1)  
Hypodermic Syringe (E380)  
Polyethylene Cup (E157)  
Resin (E313.1)  
Sealant (E342.1)  
Teflon Tape (E399)  
Temperature Indicating Strips (E413)  
Tongue Depressor (E424)

**Personnel Required:**

Aircraft Structural Repairer  
Inspector

**Equipment Condition:**



Off Helicopter Task  
General Safety Instructions :

**WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid Inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least **15 minutes**. Get medical attention for eyes.

Adhesive used in the manufacturing of some fiberglass rotor blades contain asbestos.

During blade repair, strict adherence to all safety procedures when working with asbestos must be complied with (applies to blade serial numbers A-1-0001 to 1465 and A-2-001 to 1473 only).

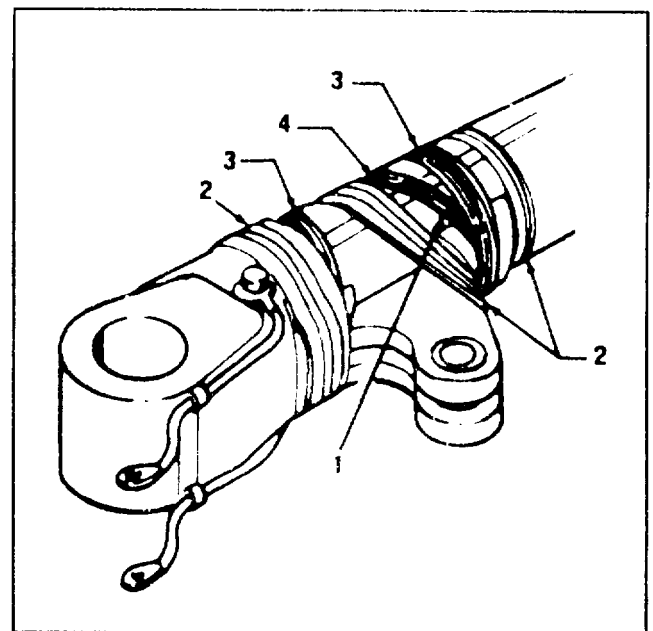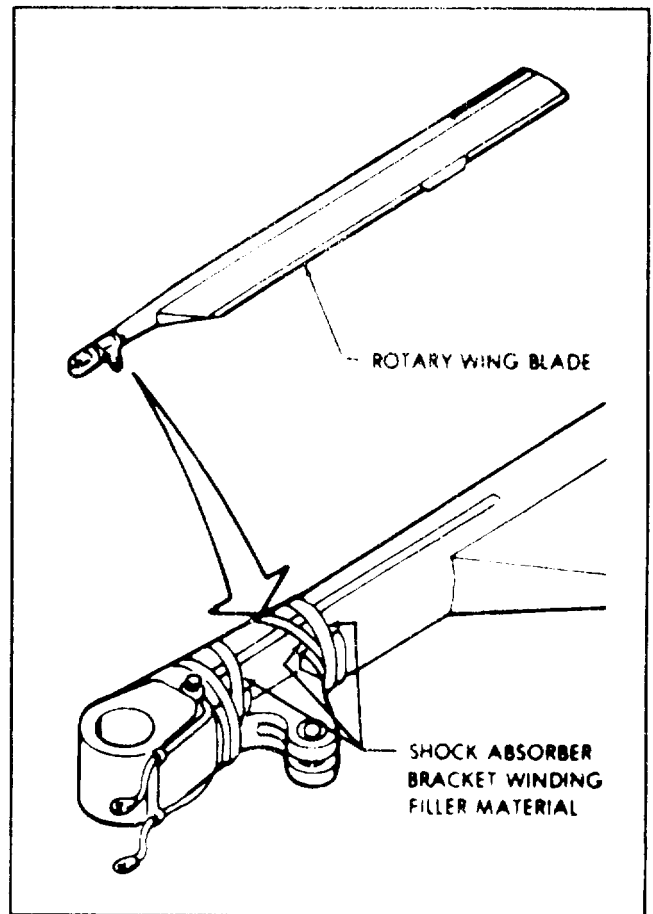

1. **Mask bracket** to within 0.50 inch of cracks or voids (1). Use teflon tape (E399) (2).
2. **Mask over windings** (3). Use teflon tape (E399) (2).

**CAUTION**

**Do not sand into filament windings.**

3. **Remove paint from filler material** (4) in damaged area. Use abrasive paper (E7).

**GO TO NEXT PAGE**

5-306.6.2 Change 37

## S-81.2.1 REPAIR KEVLAR SHOCK ABSORBER BRACKET WINDING FILLER MATERIAL-CRACKS/VOIDS (continued)

### WARNING

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

4. Flush cracks or voids (1) with acetone (E20). Use squeeze bottle (E366). Wear gloves (E186). Dry with compressed air.


### WARNING

Sealant (E342.1) is toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

5. If width of crack precludes insertion of a hypodermic syringe, apply 1/8 to 3/16 inch layer of sealant (E342.1) to exposed filler material. Fair sealant into surrounding surface.
6. Cure sealant at 70°F(21°C) for 6 hours.

Resin (E313.1) or Curing agent (E158.1) is toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

7. If a crack (1) will accept a hypodermic syringe (E380) **prepare the following mixture.**
  - a. Weight 100 parts of resin (E313.1) and 50 parts of curing agent (E158.1).

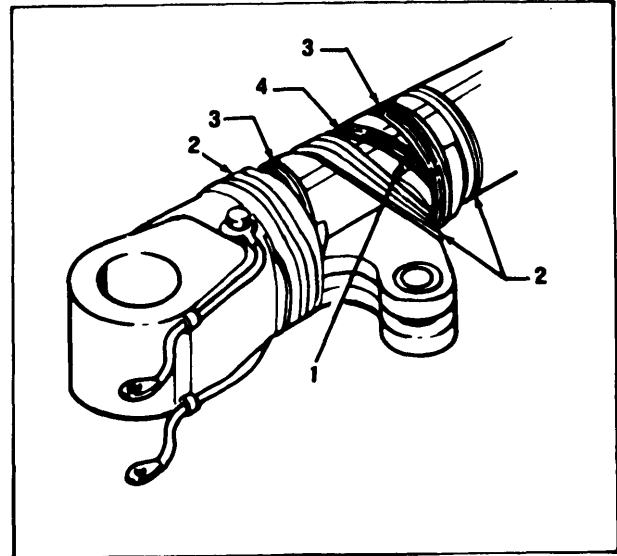

**GO TO NEXT PAGE**



**5-81.2.1 REPAIR KEVLAR SHOCK ABSORBER BRACKET  
WINDING-FILLER MATERIAL-CRACKS/VOIDS (Continued)**

5-81.2.1

- b. Mix parts in polyethylene cup (E157) until color is uniform. Use tongue depressor (E424).
- c. **Inject mixture into crack.** Use hypodermic syringe (E380).
- d. Cure mixture at 110-130°F (43-54°C) for 8 hours. Use heat lamp. Monitor temperature. Use temperature indicating strips (E413).

**NOTE**

Serviceable cure can be achieved without heat at 70 - 80°F (2) - 27°C in 24 hours.

- e. **Apply sealant (E342.1)** over crack area as in step 5.



**Adhesive (E40 or E41) is toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, in eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.**

- 8. If a portion of the filler material is missing, **fill the void with adhesive (E40) or (E41).**

**NOTE**

Prepackaged adhesive (E40) is preferred. Use adhesive (E41) only if prepackaged kit is not available.

- a. **Mix tube of adhesive (E40).** Follow instructions on kit.
- b. If adhesive (E40) is not available, prepare adhesive (E41) as follows:
  - (1) Weigh 100 parts of resin and 23 parts of hardener. Use trip balance.
  - (2) Mix parts in polyethylene cup (E157) until color is uniform. Use tongue depressor (E424).

**GO TO NEXT PAGE**

## 5-81.2.1 REPAIR KEVLAR SHOCK ABSORBER BRACKET WINDING FILLER MATERIAL-CRACKS/VOIDS (Continued)

5-81.2.1

### NOTE

Working life of adhesive is 30 minutes.




Do not exceed 180° F (82° C) at blade surface. Damage to fiberglass can occur.

- c. Cure adhesive at 150 - 160°F (66 -71°C) 2 hours. Use heat lamp. Monitor temperature. Use temperature indicating strips (E413).

### NOTE

Serviceable cure can be achieved without heat at 70 - 80°F (21 - 27°C) in 24 hours.

- d. **Apply sealant (E342.1)** over void filled area as in step 5.
- g. Remove teflon tape (E399) from around repair and filament windings.

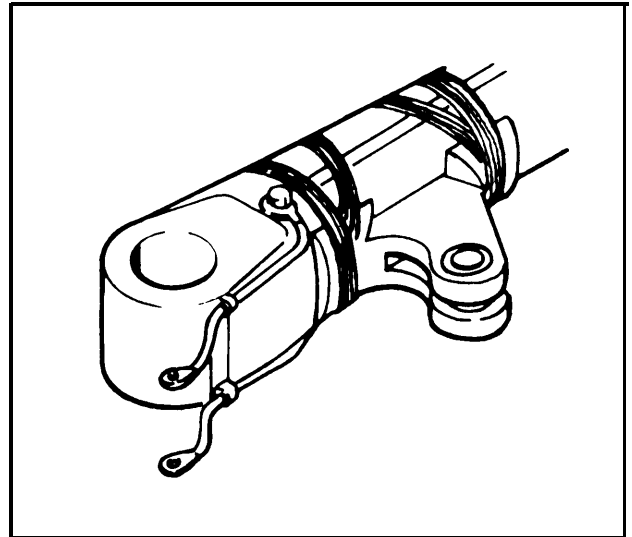

### FOLLOW-ON MAINTENANCE:

Refinish repaired area (Task 5-82).

**END OF TASK**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876  
Heat Lamp  
Scissors  
Shim, 0.005-inch Thick  
Shot Bags  
Trip Balance, NSN 6670-00-401-7195

**Materials:**

Abrasive Paper (E9)  
Acetone (E20)  
Adhesive (E40, E41 or E47.1)  
Aluminum Foil (E66)  
Chalk (E111)  
Cloth (E120)  
Gloves (E186)  
Naphtha, Aliphatic (E245)  
Peel Ply (E270)  
Polyethylene Cup (E 157)  
Rubber, 1/4-Inch Thick (E321)  
Squeeze Bottle (E366)  
Teflon Tape (E399)  
Temperature Indicating Strips (E413)  
Wood Spatula (E424)  
Curing Agent (E158.1)

**Personnel Required:**


Aircraft Structural Repairer  
Medium Helicopter Repairer (3)  
Inspector

**Equipment Condition:**

Off Helicopter Task

**General Safety Instructions:****WARNING**

Adhesive (E40, E41, E47.1) is toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

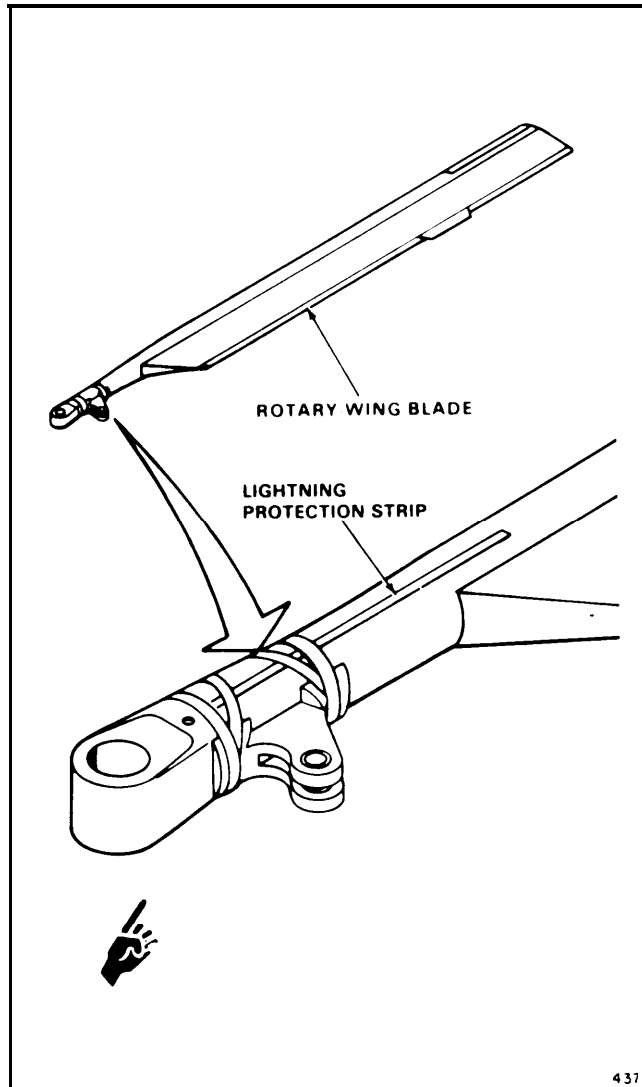

4.37

**GO TO NEXT PAGE**

5-306.8 Change 14

## 5-81.3 REPAIR LIGHTNING PROTECTION STRIP UNBONDING (Continued)

5-81.3

1. Find size of unbonded area (1). Use shim 0.005-inch thick. Outline unbonded area. Use chalk (E111). Voids that do not reach edge require no repair.
2. Remove adhesive fairing (6) next to unbonded area (1). Use utility knife.
3. Apply teflon tape (E399) (2) to lightning protection strip (3) in unbonded area (1).
4. Cut aluminum foil (E366) (4) to outline shape of unbonded area (1). Secure foil with teflon tape (E399) (5).
5. Open unbonded area (1). Use shim 0.005-inch thick.
6. Have helpers position blade (7) so unbonded area (1) is lower than lightning protection strip (3).

### WARNING

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

7. Flush unbonded area (1) with acetone (E20) until acetone runs clear. Use squeeze bottle (E366). Wear gloves (E186). Allow to dry for 15 minutes.


### NOTE

Prepackaged adhesive (E40) is preferred. Use adhesive (E41 or E47.1) only if prepackaged kit is not available.

8. Mix tube of adhesive (E40). Follow instructions on kit.
9. If adhesive (E40) is not available, prepare adhesive (E41) as follows:
  - a. Weigh 100 parts of resin and 23 parts of hardener. Use trip balance.
  - b. Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).

### NOTE

Working life of adhesive is 30 minutes.

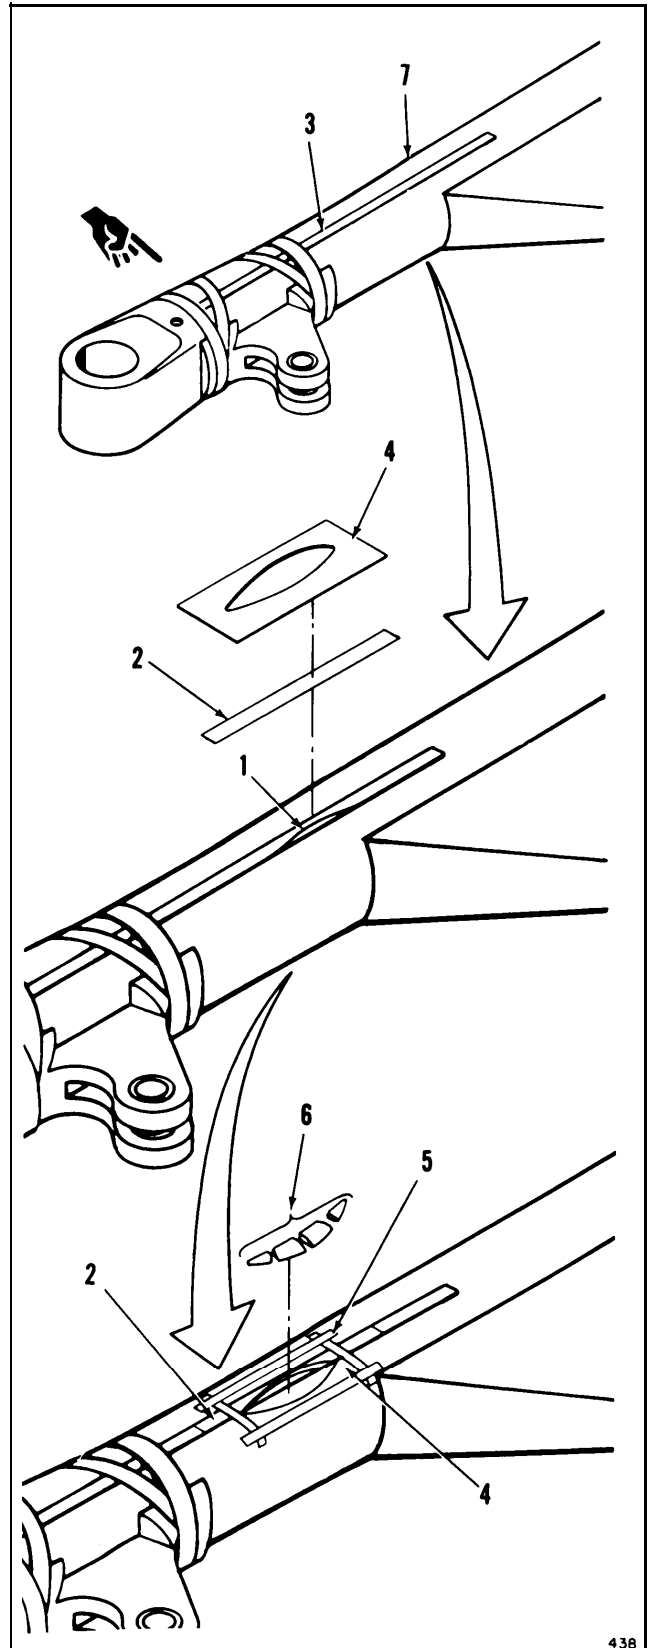


438

**GO TO NEXT PAGE**


### 5-81.3 REPAIR LIGHTNING PROTECTION STRIP UNBONDING (Continued)

5-81.3

- 9.1 If adhesive (E47.1) is used, weigh equal amounts of adhesive (E47.1) and curing agent (E158.1). Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).
10. **Apply adhesive (E40 or E41)** to unbonded area (1). Use shim 0.005-inch thick to push adhesive until unbonded area is completely filled.
11. **Close unbonded area (1) by hand pressure.** Wipe off excess adhesive (E40 or E41). Use cloth (E120).

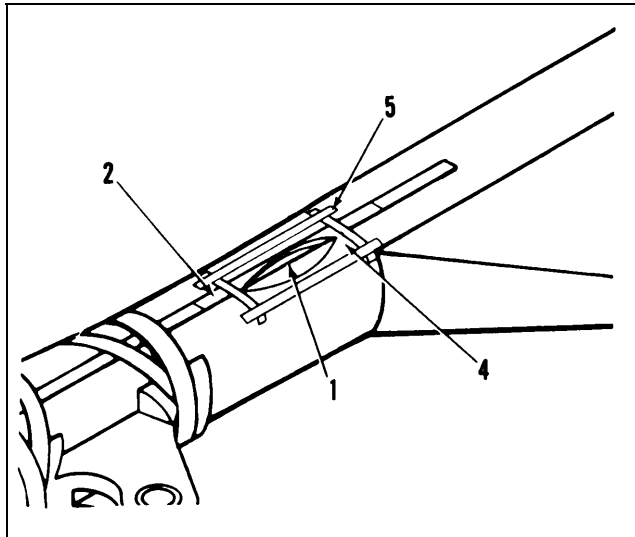

12. **Remove foil (E66) (4) and tape (E399) (2 and 5).**
13. **Position peel ply (E270) (8) over repair area (9).**
14. **Position teflon-impregnated fabric (E170) (10) over peel ply (E270) (8).**
15. **Position rubber pad (E321) (11) over teflon-impregnated fabric (E170) (10).**

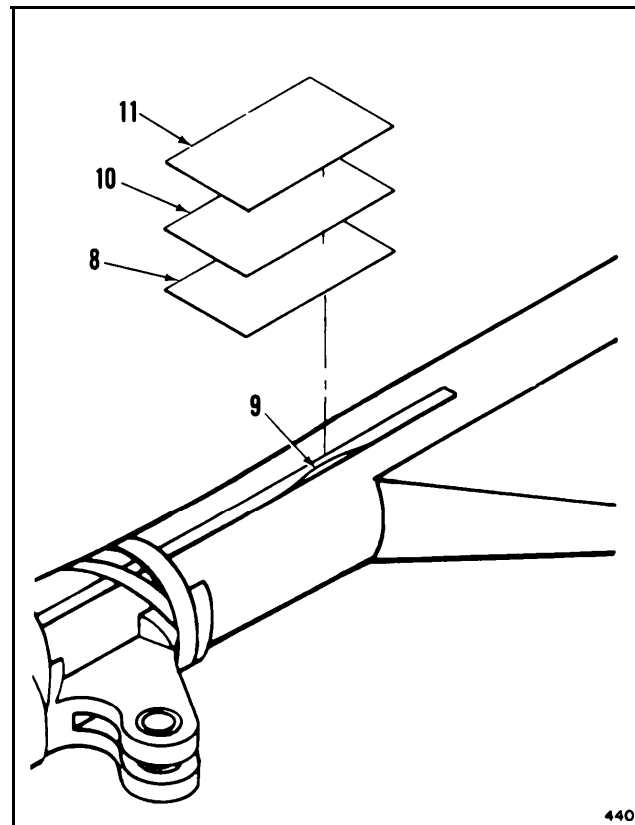

440

**5-81.3 REPAIR LIGHTNING PROTECTION STRIP UNBONDING**  
**(Continued)**

- 16. Position shot bag, or bags (12) as required, over rubber pad (E321) (11).


**CAUTION**

Do not exceed 160°F (71°C) at blade surface. Damage to fiberglass can occur.

- 17. Cure adhesive at 140-160°F (60-71°C) for 2 hours. Use heat lamp. Monitor temperature. Use temperature indicating strips (E413).

**NOTE**

Serviceable cure can be achieved without heat at 70-80°F (21-27°C) in 24 hours. Pressure may be removed after 12 hours.

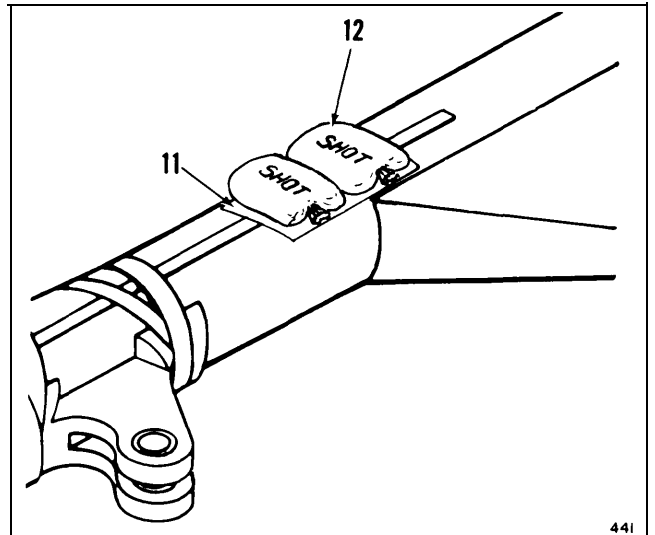


- 18. Remove shot bags (12), rubber pad (11), teflon-impregnated fabric (10), and peel ply (8).
- 19. Remove excess adhesive from repair area (9). Use abrasive paper (E9).

**WARNING**

Naphtha (E245) is combustible and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- 20. Wipe repaired area (9). Use cloth (E 120) damp with naphtha (E245). Wipe dry with clean cloth before naphtha evaporates.


**INSPECT**

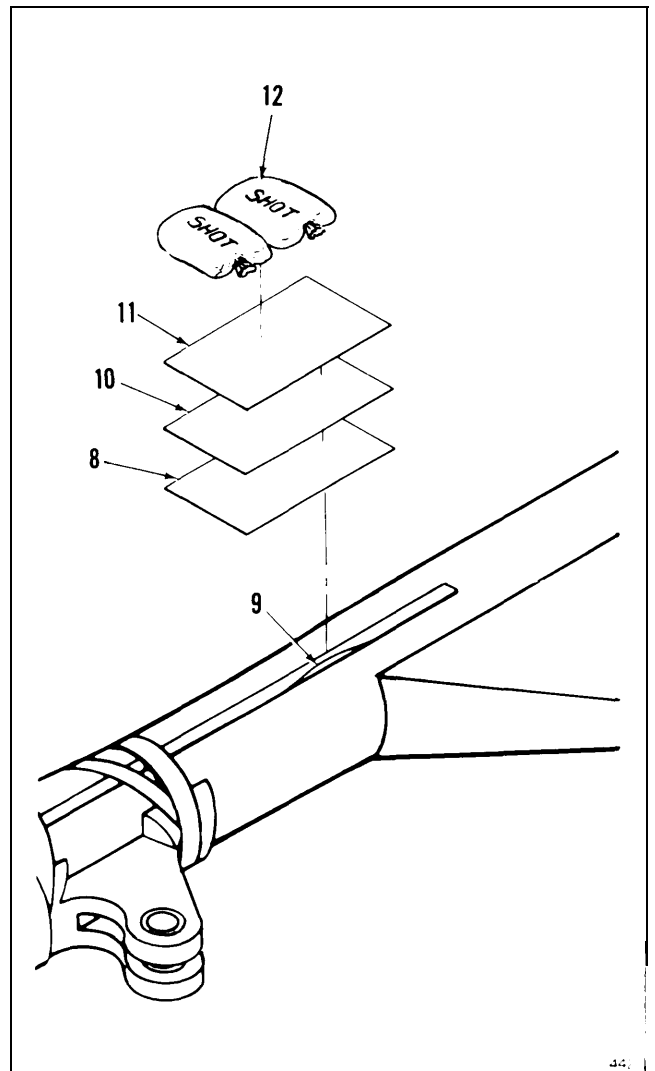

**GO TO NEXT PAGE**

FOLLOW-ON MAINTENANCE:

Refinish repaired area (Task 5-82).

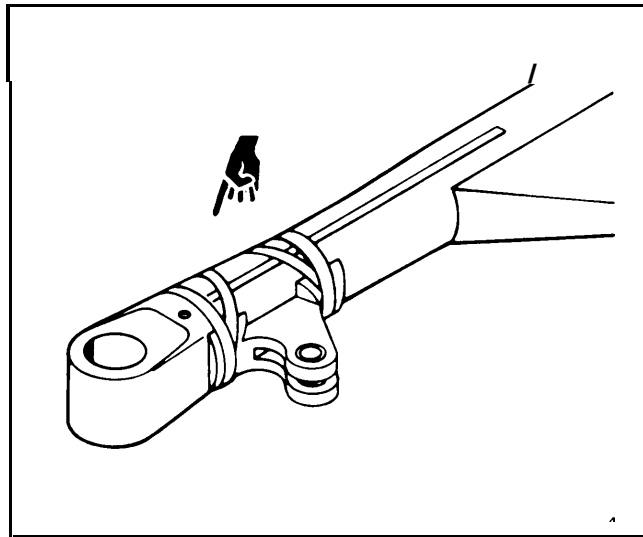

**5-81.3.1 REPLACE LIGHTNING PROTECTION JUMPER STRIP**

5 81.3.1

**INITIAL SETUP****Applicable Configurations:**


All

**Tools:**

Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876  
Heat Lamp  
Vacuum Pump

**Materials:**

Abrasive Paper (E9)  
Acetone (E20)  
Cloth (E1 20)  
Fiberglass Laminate (E168 or E168.1)  
Scrim Cloth (E325)  
Adhesive (E40, E41, E43 or E47.1)  
Polyethylene Cup (E157)  
Wood Spatula (E424)  
Peel Ply (E270)  
Teflon Impregnated Fabric (E170)  
Rubber Sheet (E318)  
Fiberglass Cloth (E130)  
Masking Tape (E388)  
Sealing Tape (E396)  
Teflon Tape (E399)  
Polyvinyl Sheet (E284)  
Temperature Indicating Strips (E413)  
Gloves (E186)  
Curing Agent (E158.1)

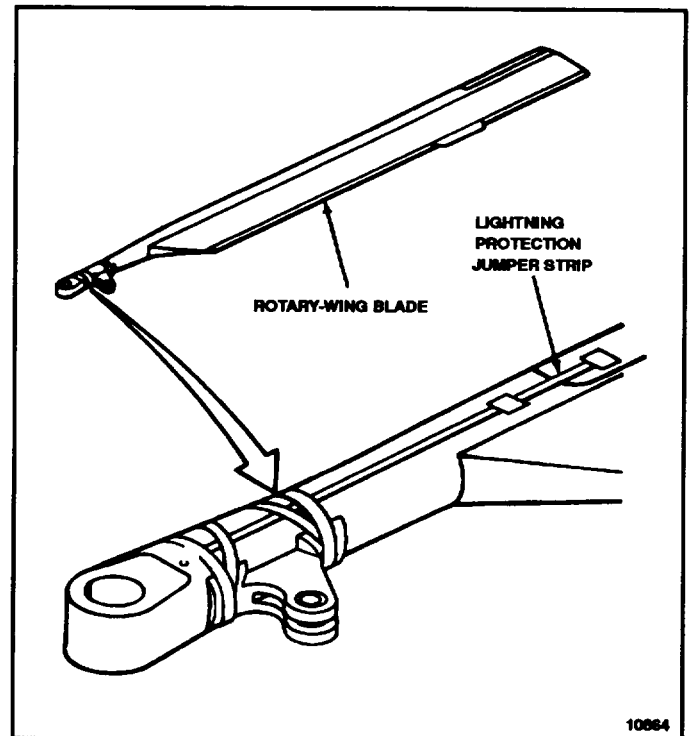**NOTE**

Scrim cloth is not required if adhesive (E41) is used. Adhesive (E41) contains beads which prevent it from being squeezed below the thickness of the beads.

**Parts:**

Jumper Strip 114R1750-12  
Doubler 114R1702-24

**Personnel Required:**

Aircraft Structural Repairer  
Inspector

**Equipment Condition:**

Off Helicopter Task

**GO TO NEXT PAGE**

Change 34 5-306.12.1



**5-81.3.1 REPLACE LIGHTNING PROTECTION JUMPER STRIP  
(Continued)**

5-81.3.1

**REMOVE JUMPER STRIP**


1. Remove jumper strip (1) and doublers (2).  
Use a pocket knife to lift a corner and pliers to peel off strip and doublers.

**CAUTION**

To ensure proper adhesion of replacement jumper strip do not remove all adhesive residue and primer.

**NOTE**

A heat lamp can be used to soften adhesive bond.

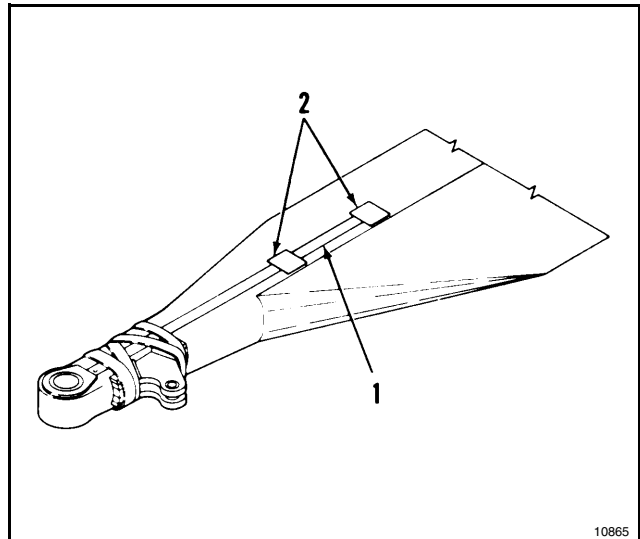

10865

### 5-81.3.1 REPLACE LIGHTNING PROTECTION JUMPER STRIP (Continued)

5-81.3.1

2. Remove loose scrim cloth and adhesive from jumper strip bond area (3). Use abrasive paper (E9). Finish removal shall extend 1/2 inch forward and aft of bond area.
3. Remove finish from an area (4) 5 inches by 5 inches centered over both ends of jumper strip location (3). Use abrasive paper (E9).

#### PREPARE FOR INSTALLATION

4. If new doublers (2) are not available, cut two pieces of fiberglass laminate (E168 or E168.1) 4 inches by 4 inches square. Round corners to a 1/4 inch radius.

#### NOTE

Jumper replacement requires installation of doublers at each end.

5. Sand both sides of doublers (2) to remove surface glaze. If fiberglass laminate (E168.1) or replacement doublers are used, remove peel ply protective covering from each side before sanding.


#### NOTE

Do not sand jumper strip. It is pre-primed for bonding.

#### WARNING

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

6. Wipe bonding surfaces of blade, jumper strip (1), and doublers (2). Use clean cloth (E120) damp with acetone (E20). Wipe dry with clean cloth (E120) before acetone evaporates.

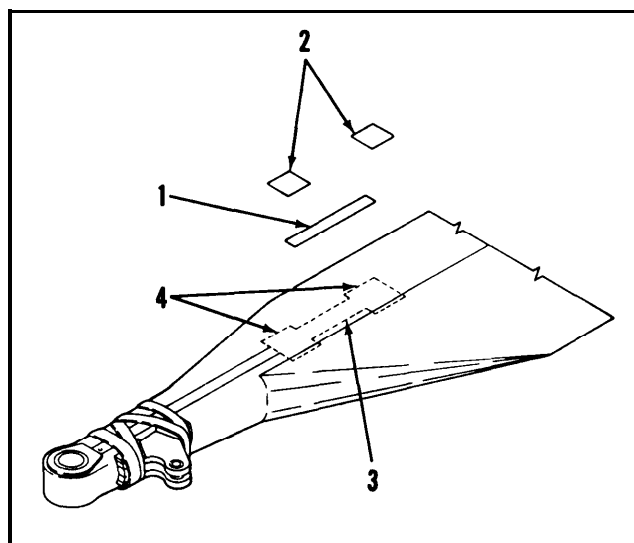

**GO TO NEXT PAGE**

## 5-81.3.1 REPLACE LIGHTNING PROTECTION JUMPER STRIP (Continued)

5-81.3.1

### NOTE

If adhesive (E40 or E41) is available, scrim cloth is not required, but can be used if desired.

7. If adhesive (E43 or E47.1) is to be used, cut three pieces of scrim cloth (E325) (5 and 6) 1/4 inch shorter and narrower than jumper strip (1) and doublers (2).

### PREPARE ADHESIVE


#### WARNING

Adhesive (E40, E41, E43 or E47.1) is flammable and toxic. Avoid inhaling. Use only with adequate ventilation. Keep away from heat, sparks, or open flame. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

### NOTE

Prepackaged adhesive (E40) is preferred. Use adhesive (E41) only if prepackaged kit is not available.

8. **Mix tube of adhesive (E40).** Follow instructions on kit.
9. If adhesive (E40) is not available, prepare adhesive (E41) as follows:
- Weigh 100 parts of resin and 23 parts of hardener. Use trip balance.
  - Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).
10. If adhesive (E43) is used, prepare as follows:
- Weigh 7 parts of gray hardener and 5 parts of white base. Use trip balance.
  - Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).
11. If adhesive (E47.1) is used, prepare as follows:
- Weigh equal parts of adhesive (E47.1) and curing agent (E158.1). Use trip balance.
  - Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).

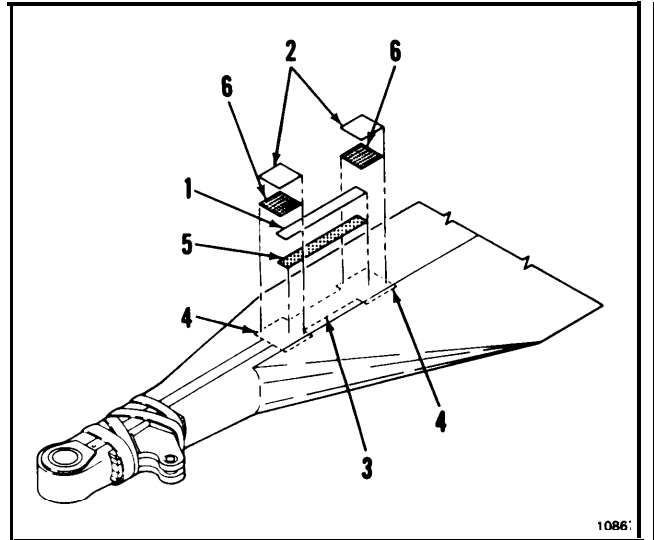

**GO TO NEXT PAGE**

## 5-81.3.1 REPLACE LIGHTNING PROTECTION JUMPER STRIP (Continued)



5-81.3.1

### INSTALL JUMPER STRIP

#### NOTE

Working life of adhesive (E40, E41, E43 or E47.1) is about 30 minutes.

12. **Apply adhesive** (E40, E41, E43 or E47.1) to the jumper strip bond area (3) and jumper strip (1).
13. If needed, place scrim cloth (E325) (5) on adhesive coated jumper strip (1). Tamp cloth in place to remove air bubbles and wrinkles.
14. **Place jumper strip (1) on jumper strip bond area (3).** Hold in place with two pieces of teflon tape (E399) (7). Apply adhesive to ends of jumper strip where doublers (2) will overlap.
15. **Apply adhesive to doublers (2).** If needed, place scrim cloth (6) on doublers (2). Tamp in place to remove air bubbles and wrinkles.
16. **Center doublers (2) over ends of jumper strip (1).** Secure with teflon tape (E399) (8).

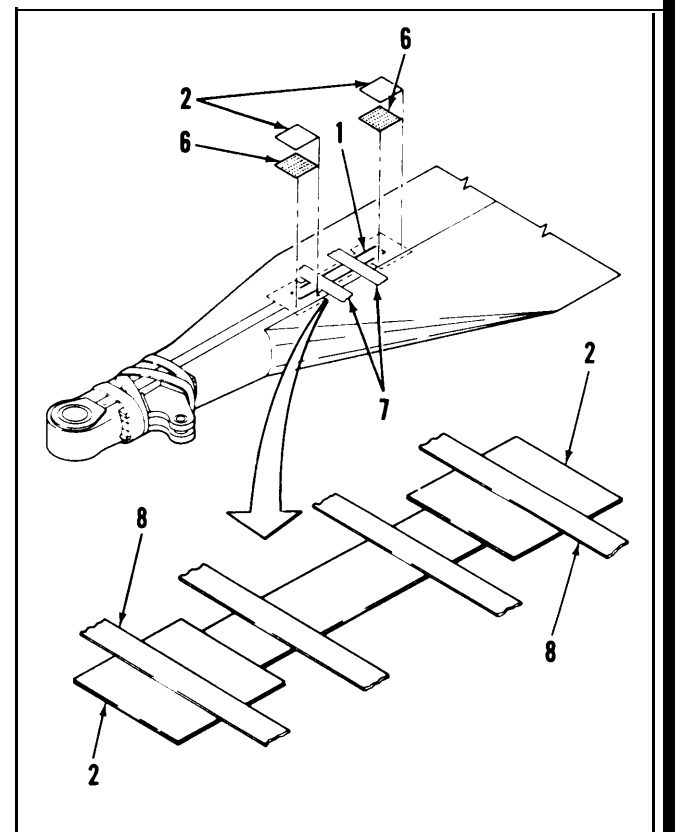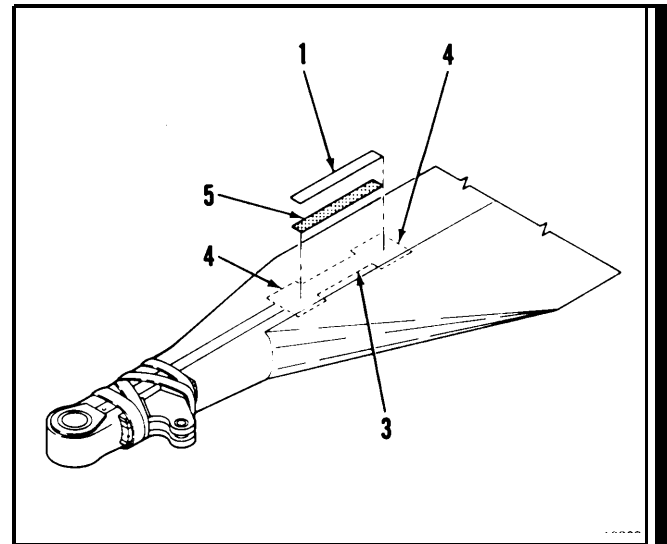

**GO TO NEXT PAGE**


17. Bond repair as follows:

- a. Cover repair with layer of peel ply (E270) (9) and layer of teflon-impregnated fabric (E170) (10). Make layers large enough to overlap patch (22) 1-inch.
- b. Cover teflon-impregnated fabric (E170) (10). Use thick rubber pad (E318) (11).
- c. Cover repair area with fiberglass cloth (E132) (12). Cut cloth large enough to cover rubber pad (318) (11).
- d. Surround cloth (E132) (12) with sealing tape (E396) (13). Keep tape clear of cloth.
- e. Attach tube (14) to vacuum pump hose.
- f. Wrap tube (14) with two layers of fiberglass cloth (E132) (15). Apply masking tape (E388) over cloth.
- g. Position tube (14) on cloth (E132) (12) covering repair. Wrap tube with sealing tape (E396) (16) where tube crosses sealing tape (13) already applied.
- h. Press tube (14) onto tape (13) to make airtight seal.
- i. Press polyvinyl sheet (E284) (17) smoothly onto tape (13) to make airtight seal.
- j. Start vacuum pump. Check for leaks. Reposition polyvinyl sheet (E284) (17) or add tape (E396) (13) as needed.
- k. Maintain 20-inches Hg vacuum through adhesive cure.

**CAUTION**

Do not exceed 160°F (71°C) at blade surface. Damage to fiberglass can occur.

1. Cure adhesive at 150-160°F (66 - 71°C) for 2 hours. Use heat lamp. Monitor temperature. Use temperature indicating strips (E413).

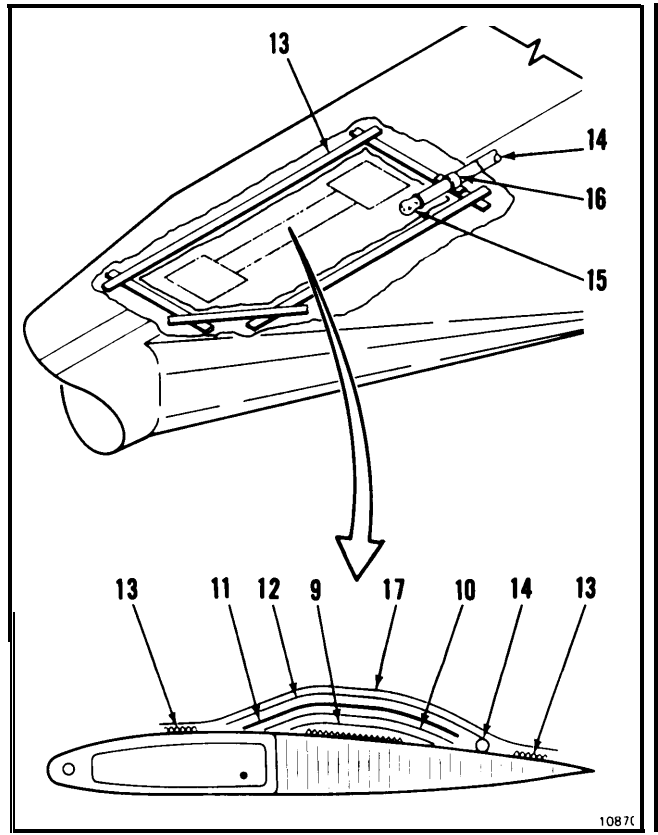


**NOTE**

Serviceable cure can be achieved without heat at 70-80°F (21 - 27°C) in 24 hours. Vacuum may be removed after 12 hours.

- m. Turn off vacuum pump.
- n. Remove peel ply (9) fabric (10), rubber (11), fiberglass (12), tape (13), tube (14), and sheet (17).

**5-81.3.1 REPLACE LIGHTNING PROTECTION JUMPER STRIP  
(Continued)****5-81.3.1**

18. **Fair adhesive squeezeout** to surrounding blade surface. Use abrasive paper (E9). If fairing was not achieved by squeezeout, mix additional adhesive (E40, E41, E43 or E47.1) as directed in steps 8, 9, 10, or 11.

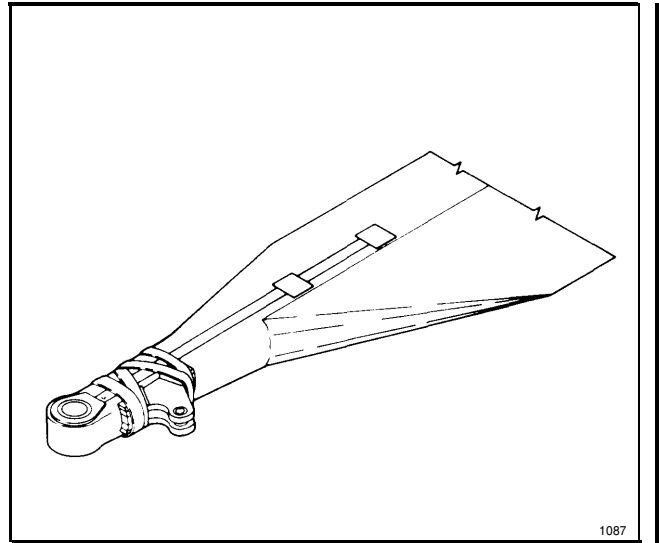**FOLLOW-ON MAINTENANCE:**

Refinish repair area (Task 5-82).

**END OF TASK**



INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Brush

**Materials:**

Abrasive Mats (E3)

Acetone (E20)

■ Antistatic Coating (E135.5)

Cloth (E120)

■ Gloves (E184.1)

Epoxy Primer (E292.1)


**Personnel Required:**

Aircraft Structural Repairer

Inspector

**Equipment Condition:**

Off Helicopter Task

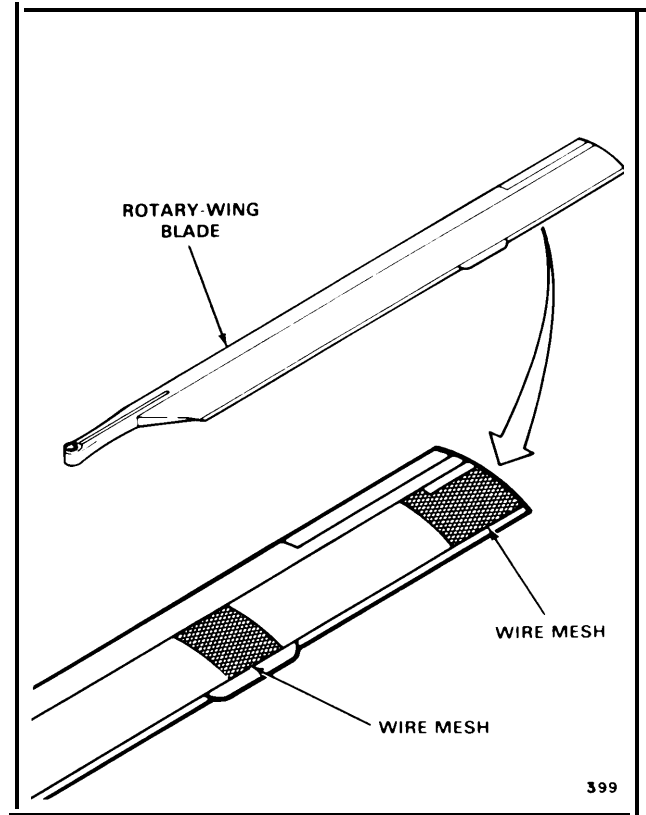

GO TO NEXT PAGE



1. Remove corrosion from mesh (1). Use abrasive mats (E3).
2. Brush loose material from mesh (1). Use dry cloth (E120).

**WARNING**


Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

3. Clean mesh (1) where corrosion was removed. Use cloth damp with acetone (E20). Wear gloves (E184.1). Wipe until cloth remains clean. Wipe dry immediately. Use dry cloth (E120). Allow to dry for 15 minutes.

**WARNING**

Epoxy primer (E292.1) is flammable and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from heat or open flame. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

4. Apply mist coat of epoxy primer (E292.1). Wear gloves (E184.1). Air dry 1 hour.
5. (Deleted)

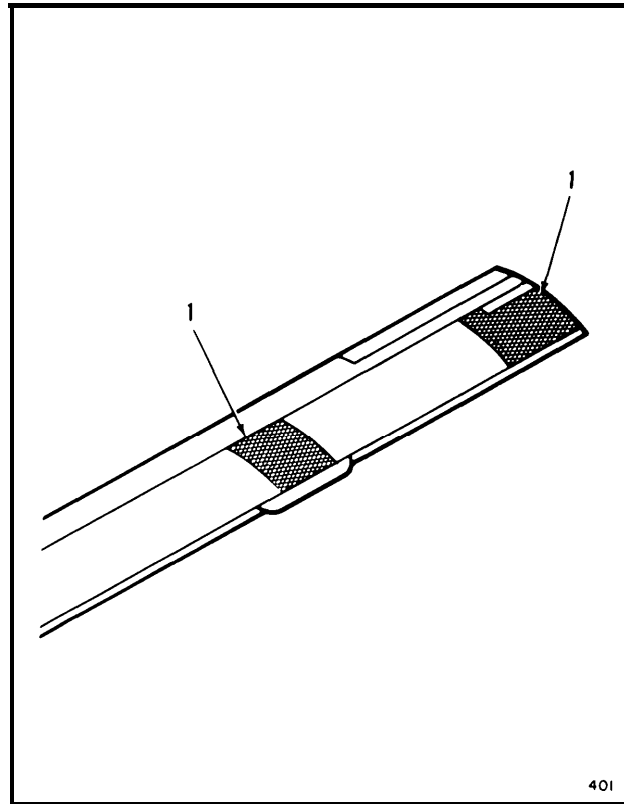**WARNING**

Antistatic coating (E135.5) is flammable and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from heat or open flame. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

6. Apply antistatic coating (E135.5) as follows:
  - a. Mix coating. Follow instructions on container.
  - b. Apply heavy layer of coating to repaired mesh (1). Use brush. Wear gloves (E184.1).
  - c. Allow coating to dry for 2 hours.

**INSPECT****FOLLOW-ON MAINTENANCE:**

Refinish repaired area (Task 5-82).

**END OF TASK**

**5-81.5 REPAIR SHOCK ABSORBER BRACKET MINOR DAMAGE****5-81.5**


## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**Aircraft Repairer's Tool Kit,  
NSN 5180-00-323-4876**Materials:**Acetone (E20)  
Abrasive Paper (E7 and E9)  
Cloth (E120)  
Gloves (E186)**Personnel Required:**Aircraft Structure Repairer  
Inspector**Equipment Condition:**

Off Helicopter Task

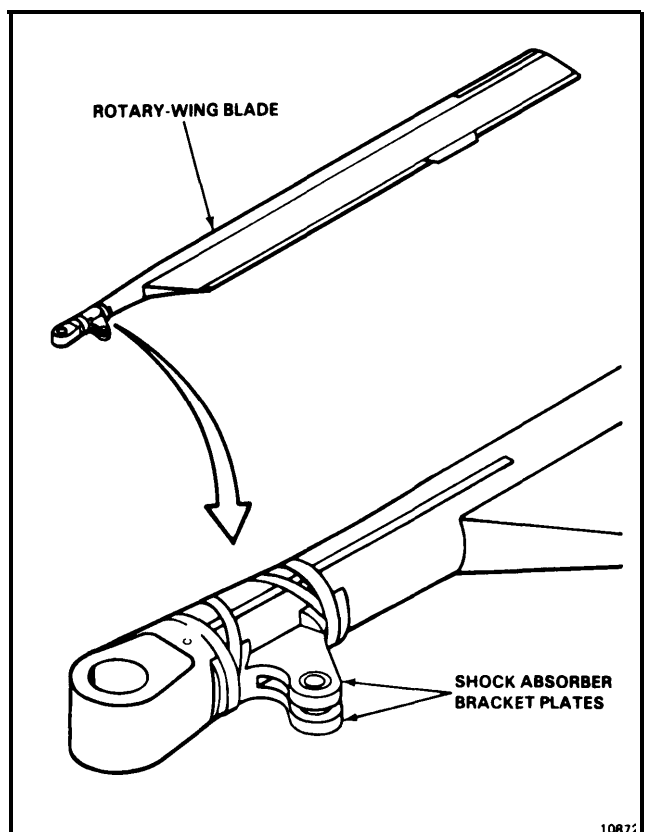


10872

**WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

1. **Remove finish** from damaged area. Use cloths damp with acetone (E20).
2. **Check depth of damage** and identify repair area (A thru E). Reject the blade if damage exceeds the following limits:

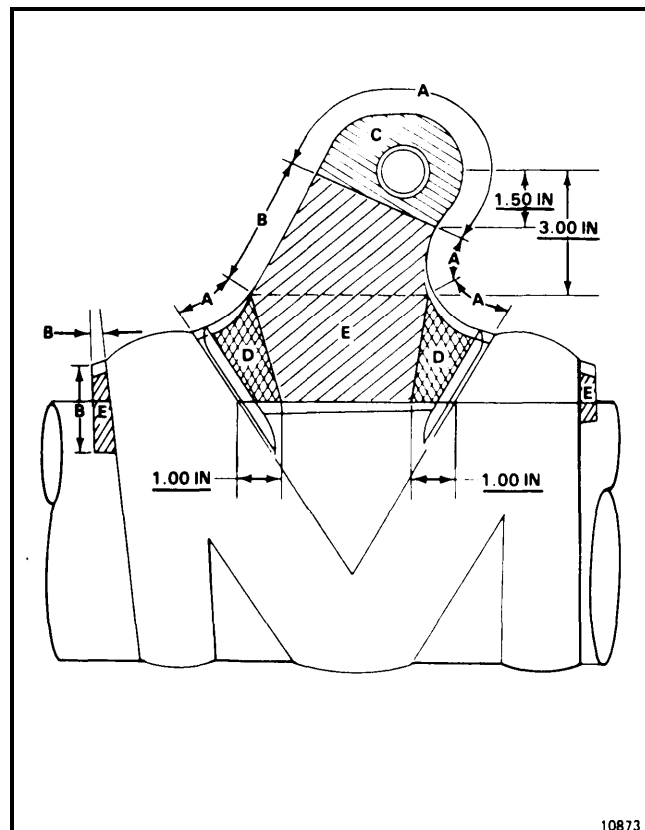

10873


**GO TO NEXT PAGE**

- a. **Edge Damage (1).** Depth (d) of dents or scores shall not exceed:  
 Area A 0.02 inch  
 Area B 0.04 inch
- b. **Corner Damage (2).** Maximum chamfer (X) required to remove corner dents or delamination shall not exceed:  
 Area A, Zone D and E 0.10 inch  
 Area A, Zone C 0.15 inch wide x 45 degrees chamfer.  
 Area B 0.15 inch
- c. **Face Damage (3).** Maximum depth (Z) and rework area of dents, scores or delamination of top or bottom surface must not exceed the following:  
 Area C 0.02 inch, 0.25 sq. in.  
 Area D 0.02 inch, 0.50 sq. in.  
 Area E 0.04 inch, 2.00 sq. in.

**NOTE**

The maximum depth and area is for the total of both faces of each plate.

- 3. **Remove edge damage (1)** by sanding or grinding. Blend reworked area over a length 20 times depth (d).
- 4. **Remove corner damage (2)** by sanding or grinding. Blend chamfer to a length 10 times depth (X).
- 5. **Remove face damage (3)** by sanding or grinding. Blend reworked area over a length 20 times depth of damage (Z).

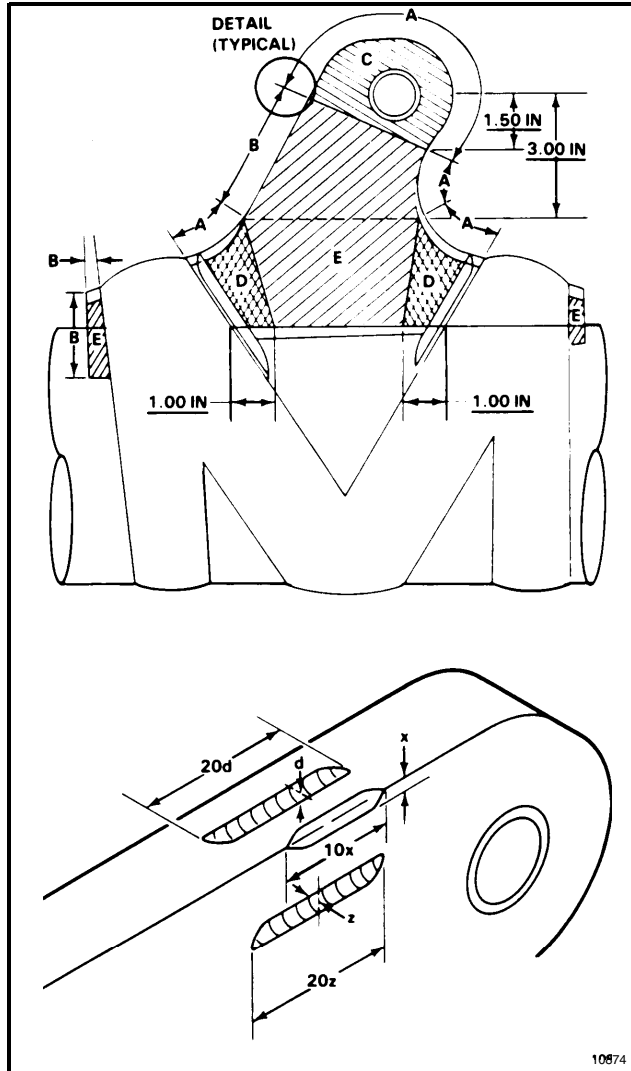

10874

**FOLLOW-ON MAINTENANCE:**

Refinish repair area (Task 5-82).

**END OF TASK**

**5-81.6 PREPARE ADHESIVES****5-81.6**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Trip Balance, NSN 6670-00-401-7195

**Materials:**

Gloves (E186)

Polyethylene Cup (E157)

Wood Spatula (E424)

**Personnel Required:**

Aircraft Structure Repairer

**General Safety Instructions:****WARNING**

Adhesives (E27, E40, E41, and E47.1) are flammable and toxic. They can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**ADHESIVE EA9309.3NA (E40 OR 41)****NOTE**

Prepackaged adhesive (E40) is preferred. Use adhesive (E41) only if prepackaged kit is not available.

1. Mix tube of adhesive (E40) according to instructions on kit.
2. Prepare adhesive (E41) as follows:
  - a. Weigh **100 parts** of resin part A (pink paste) and **23 parts** of hardener part B (blue liquid). Use trip balance.
  - b. Mix parts in polyethylene cup (E157) until color is uniform dark pink. Use wood spatula (E454).

**NOTE**

Working life of adhesive (E40 or E41) is 30 minutes. Adhesive cures in 2 hours at 150°F to 160°F (66°C to 71°C). A serviceable cure can be achieved at 70°F to 80°F (21°C to 27°C) in 24 hours. Pressure may be removed after 12 hours.

**ADHESIVE EC-2216 (E27)**

3. Weigh 7 parts of part A hardener (gray paste) and 5 parts of part B base (cream paste). Use trip balance.
4. Mix parts in polyethylene cup (E157) until color is uniform medium gray. Use wood spatula (E454).

**NOTE**

Working life of adhesive (E27) is 1 to 2 hours. Adhesive cures in 2 hours at 150°F to 160°F (66°C to 71°C). A serviceable cure can be achieved at 70°F to 80°F (21°C to 27°C) in 24 hours. Pressure may be removed after 12 hours.

**ADHESIVE EPON 828 (E47.1) AND HARDENER VERSAMID 125 (E194.1)**

5. Weigh equal parts of adhesive (light amber resin) and hardener (dark amber resin). Use trip balance.
6. Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E454).

**NOTE**

Working life of adhesive mix (E47.1 and E194.1) is 1 hour. Adhesive cures in 2 hours at 150°F to 160°F (66°C to 71°C). A serviceable cure can be achieved at 70°F to 80°F (21°C to 27°C) in 24 hours. Pressure may be removed after 12 hours.

**FOLLOW-ON MAINTENANCE:**

As required

**END OF TASK**



## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Sanding Block

**Materials:**

Gloves (E184.1)

Abrasive Paper (E7)

Acetone (E20)

Abrasive Paper (E9)

Aliphatic Naphtha (E245)

Cloth (E120)

Antistatic Coating (E135.5)

Black Lacquer (E215)

Thinner (E415)

**Personnel Required:**

Aircraft Structural Repairer

Inspector


**Equipment Condition:**

Off Helicopter Task

**References**

TM 55-1500-344-23


Task 2-350.1

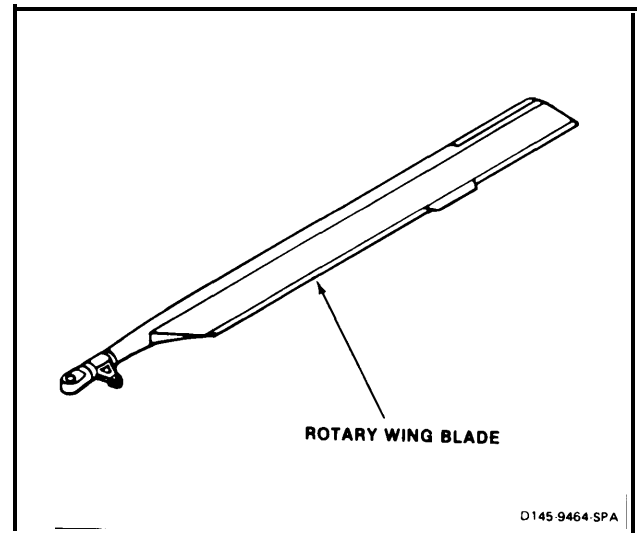

1. Determine the finish system used on the rotor blade (TM 55-1500-344-23).
  - a. For rotor blades **without** 57 proceed to step 1.1.
  - b. For rotor blades **with** 57 proceed to Task 2-350.1.
- 1.1. **Remove finish around repaired area of blade (1) as follows:**
  - a. Remove finish. Use sanding block and abrasive paper (E7).

**WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

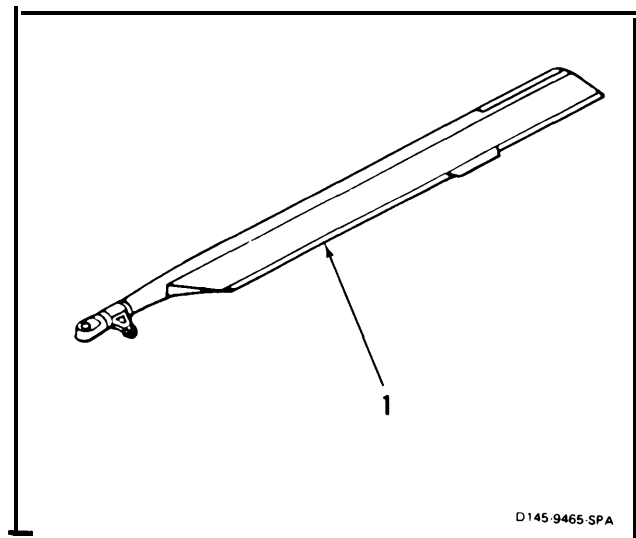

- b. If finish requires softening, use acetone (E20). Wear gloves (E184.1).
- c. Complete finish removal. Use abrasive paper (E9).

GO TO NEXT PAGE

**WARNING**

Aliphatic naphtha (E245) is combustible and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**CAUTION**

Use only aliphatic naphtha (E245). Other grades can contaminate blade surface. Do not soak surface. Use only damp cloth (E120).

2. Wipe area of blade (1) to be refinished. Use cloths (E120) damp with naphtha (E245). Continue wiping until cloths remain clean. Wipe naphtha dry before it evaporates. Wear gloves (E184.1).

3. Refinish repaired area as follows:


**WARNING**

Antistatic coating (E135.5) is flammable and toxic. It can irritate skin and cause burns. Use only with adequate ventilation away from heat or open flame. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- a. Mix antistatic coating (E135.5). Follow instructions on container.
- b. Brush heavy coat of antistatic coating (E135.5) on repaired area. Wear gloves (E184.1).

**WARNING**

Lacquer (E215) is extremely flammable. It can be toxic. Keep away from heat, sparks, or open flames. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

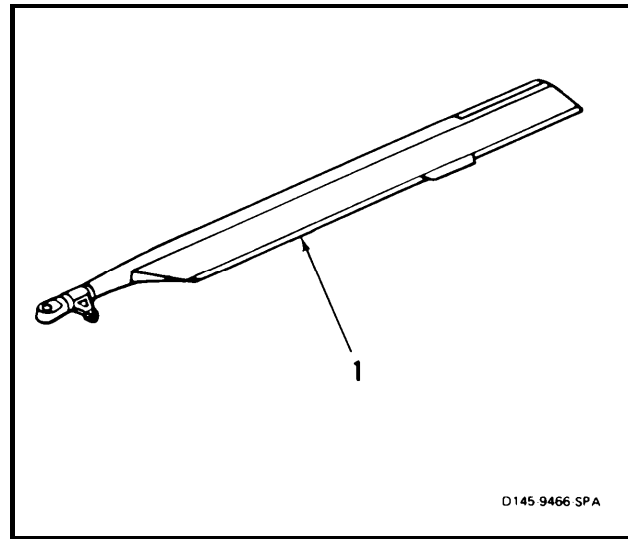

D145 9466 SPA

**WARNING**

Thinner (E415) is combustible and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- c. Thin black lacquer (E215). Use thinner (E415). Follow Instructions on container.
- d. Apply coat of thinned lacquer. Wear glove (E184.1).
- e. Allow lacquer to dry 45 minutes.
- f. Apply second coat of thinned lacquer. Wear gloves (E184.1).
- g. Allow lacquer to dry 45 minutes

**NOTE**

All blade repairs, weight adjustment, painting, or balancing will be recorded on rotor blade DA Form 2408-16, each blade requires a separate form. If the rotor blade does not have a DA Form 2408-16, one must be prepared and all actions recorded, as example; location of repair, size of repair, weight of repair, and required weight adjustments for track and balance.

**INSPECT****FOLLOW-ON MAINTENANCE:**

None

**END OF TASK**



INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692
- Ruler, 24-inch

■ Torque Wrench, 150 to 750 Inch-Pounds

**Materials:**

- Hardwood Dowel (Appx E-44)
- Lockwire (E233)

**Parts:**


Overbalance Weight 114R1737

**Personnel Required:**

- Medium Helicopter Repairer
- Inspector

**Equipment Condition:**

Off Helicopter Task

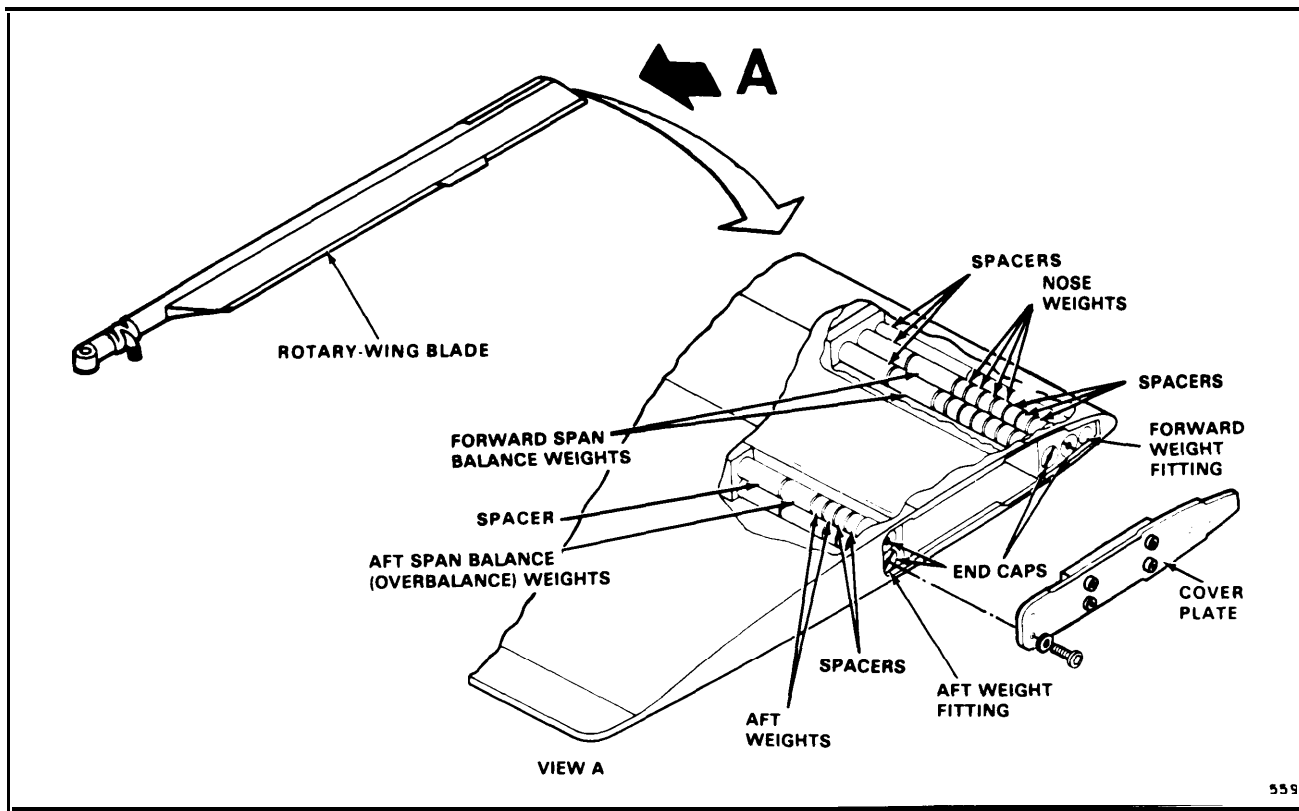

**GO TO NEXT PAGE**

**5-82.1 ADJUST BLADE BALANCE WEIGHTS (Continued)**

**5-82.1**

1. Find the tracking weight adjustment required for the blade repair as follows:

**NOTE**


Tracking weight adjustment is required following fairing skin and core repair, trailing edge major repair, nickel erosion cap replacement, and titanium nose cap crack repair.

- a. For fairing skin and core repair (Task 5-68, 5-69, 5-70, and 5-72.1), go to step 2.
- b. For trailing edge major repair (Task 5-72), go to step 3.

- c. For nickel erosion cap replacement (Task 5-66), go to step 4.
- d. For titanium nose cap crack repair (Task 5-66.2), go to step 5.

2. Find balance and tracking weight adjustment for fairing skin and core repairs as follows:

- a. Measure in inches distance "X" from tip of blade to center of repair. Record dimension "X".
- b. Subtract dimension "X" from 360 to find blade station. Record blade station.

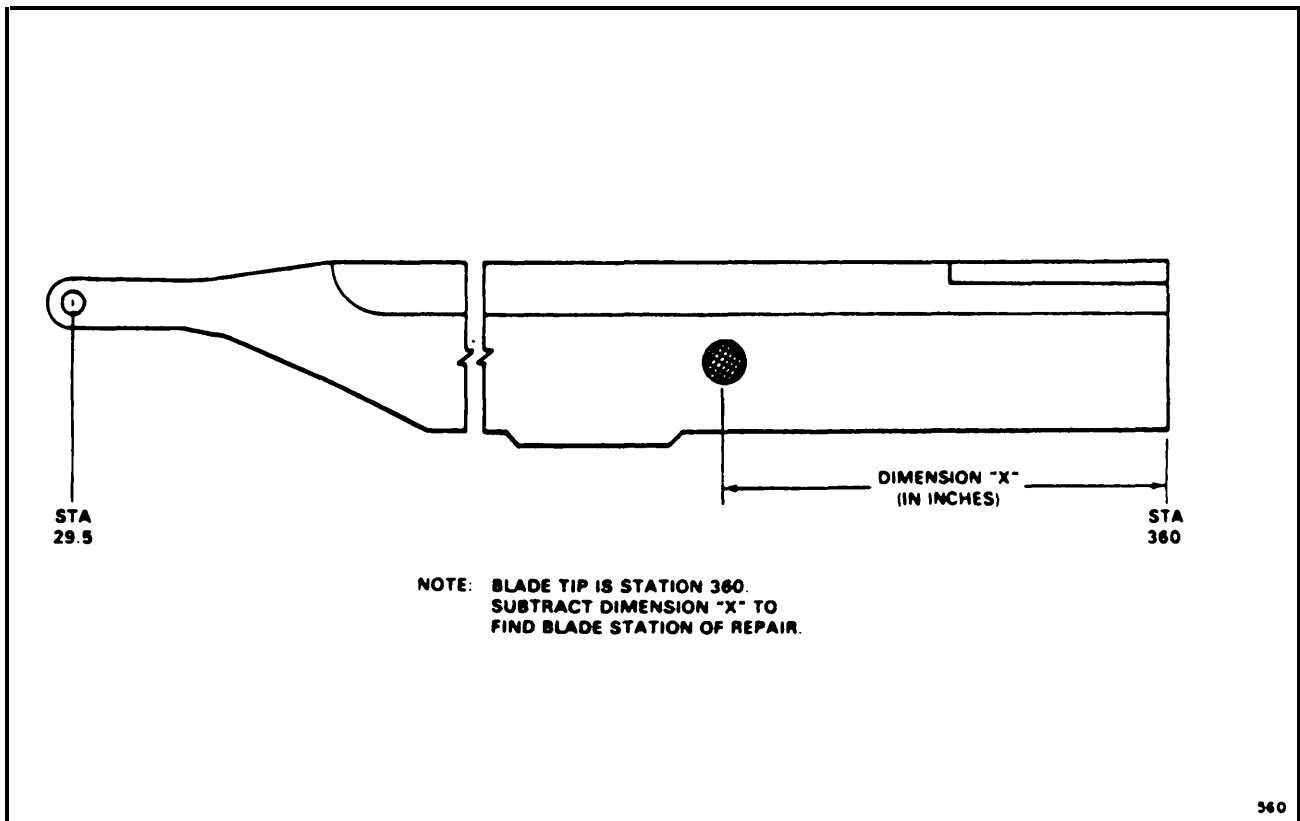


560

c. Find the span weight correction from chart 1 as follows:

- (1) Find blade station (step b) along bottom of chart.
- (2) Move upward to weight recorded for repair (Task 5-68, 5-69, or 5-70).
- (3) From intersection of blade station and repair weight, move across to left and right sides of chart 1.
  - (a) On left side, record weight in pounds to remove from aft weight fitting.
  - (b) On right side, read the length in inches to remove from aft weight fitting.

**NOTE**

Example 1 shows a 0.44 pound repair at blade station 190 (170 inches inboard of blade tip). This repair requires 0.23 pound or 19/32-inch of weight to be removed. Example 2 shows a 0.53 pound repair at blade station 300. This repair requires 0.45 pound or 1 1/8-inch be removed from the aft weight fitting.

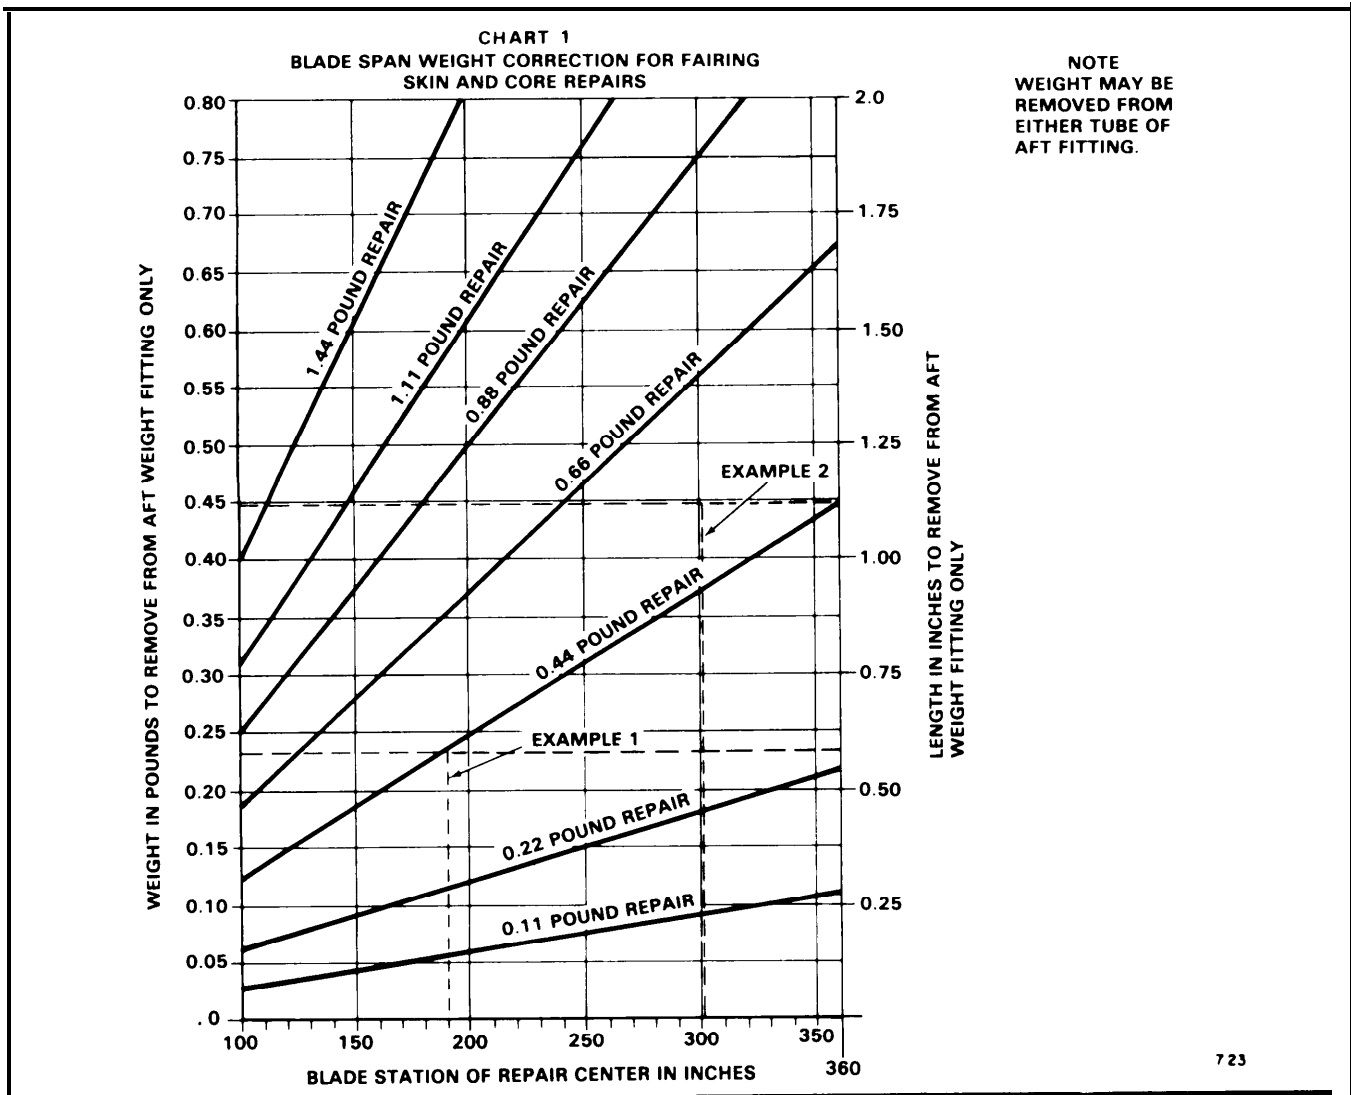

**5-82.1 ADJUST BLADE BALANCE WEIGHTS (Continued)**

**5-82.1**


d. Find number of tracking weights to move from aft to forward weight fitting as follows:

- (1) Measure the distance in inches from the blade leading edge to the center of the repair. Record the measurement.
- (2) Using the weight recorded for repair, (Task 5-68, 5-69 or 5-70), go to appropriate chart 2.

**NOTE**

Chart 2 consists of six graphs. Each graph covers a range of repair weights between 0.11 and 1.44 pounds. The weight range is shown at top of each chart.


- (3) Find blade station of repair from step b at bottom of chart. Move up to intersection of chordwise dimension from step d (1). Record number of tracking weights to be shifted.

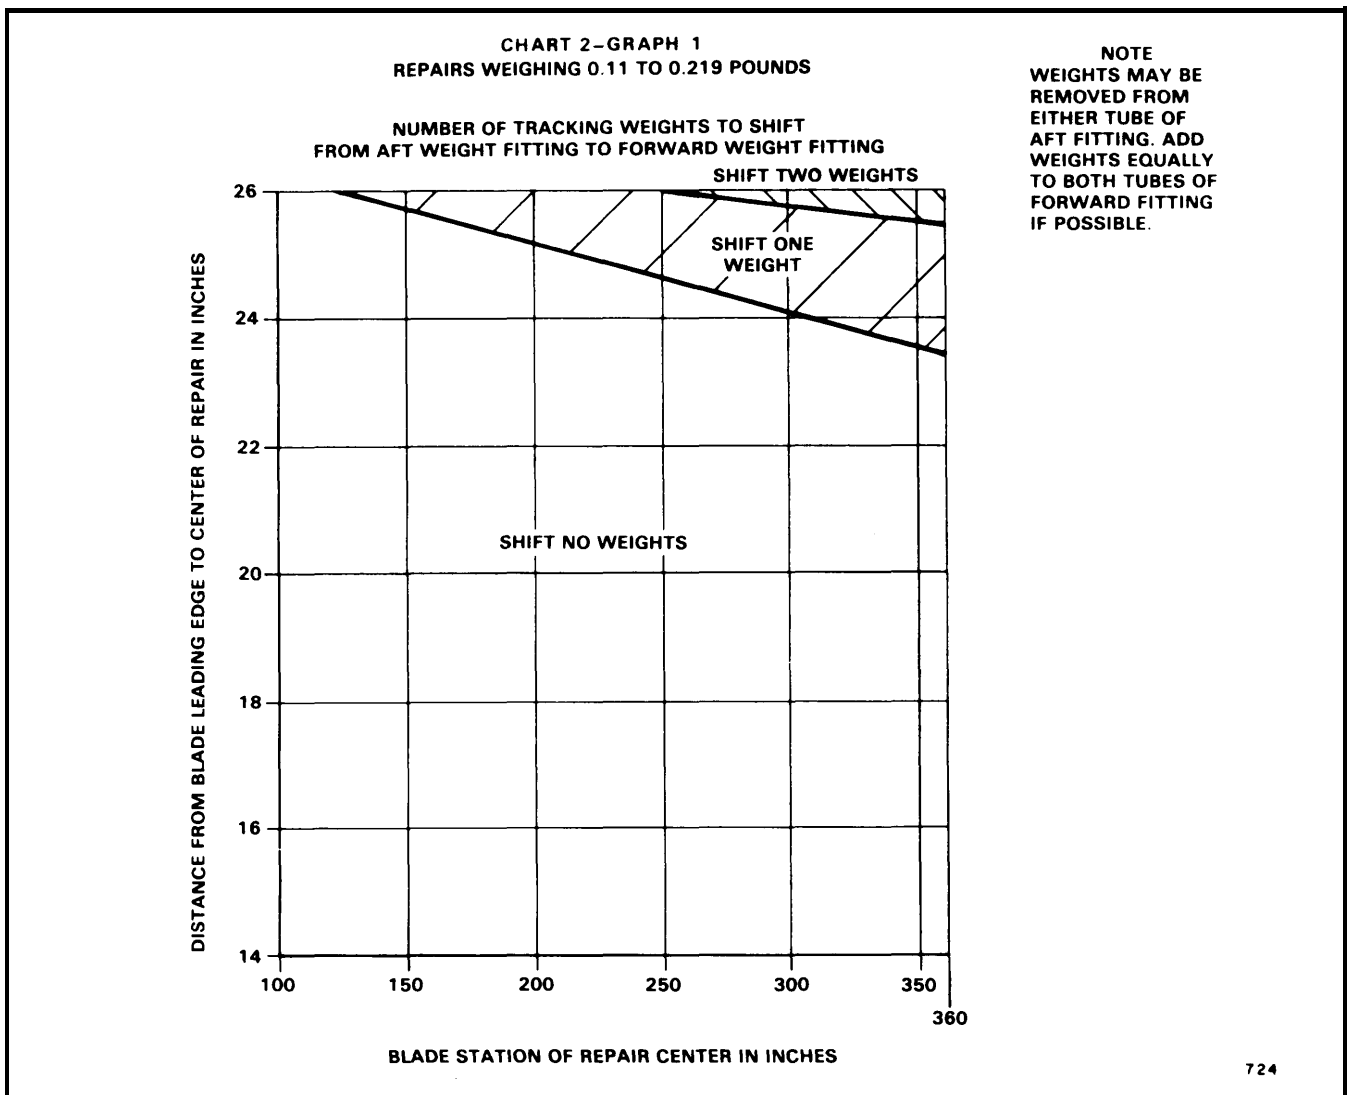

**GO TO NEXT PAGE**

(4) Example 1 shows a repair at blade station 190, 22 inches aft of the leading edge. The repair weight was between

0.22 and 0.44 pounds. This repair requires shifting 1 tracking weight from aft to forward fitting.

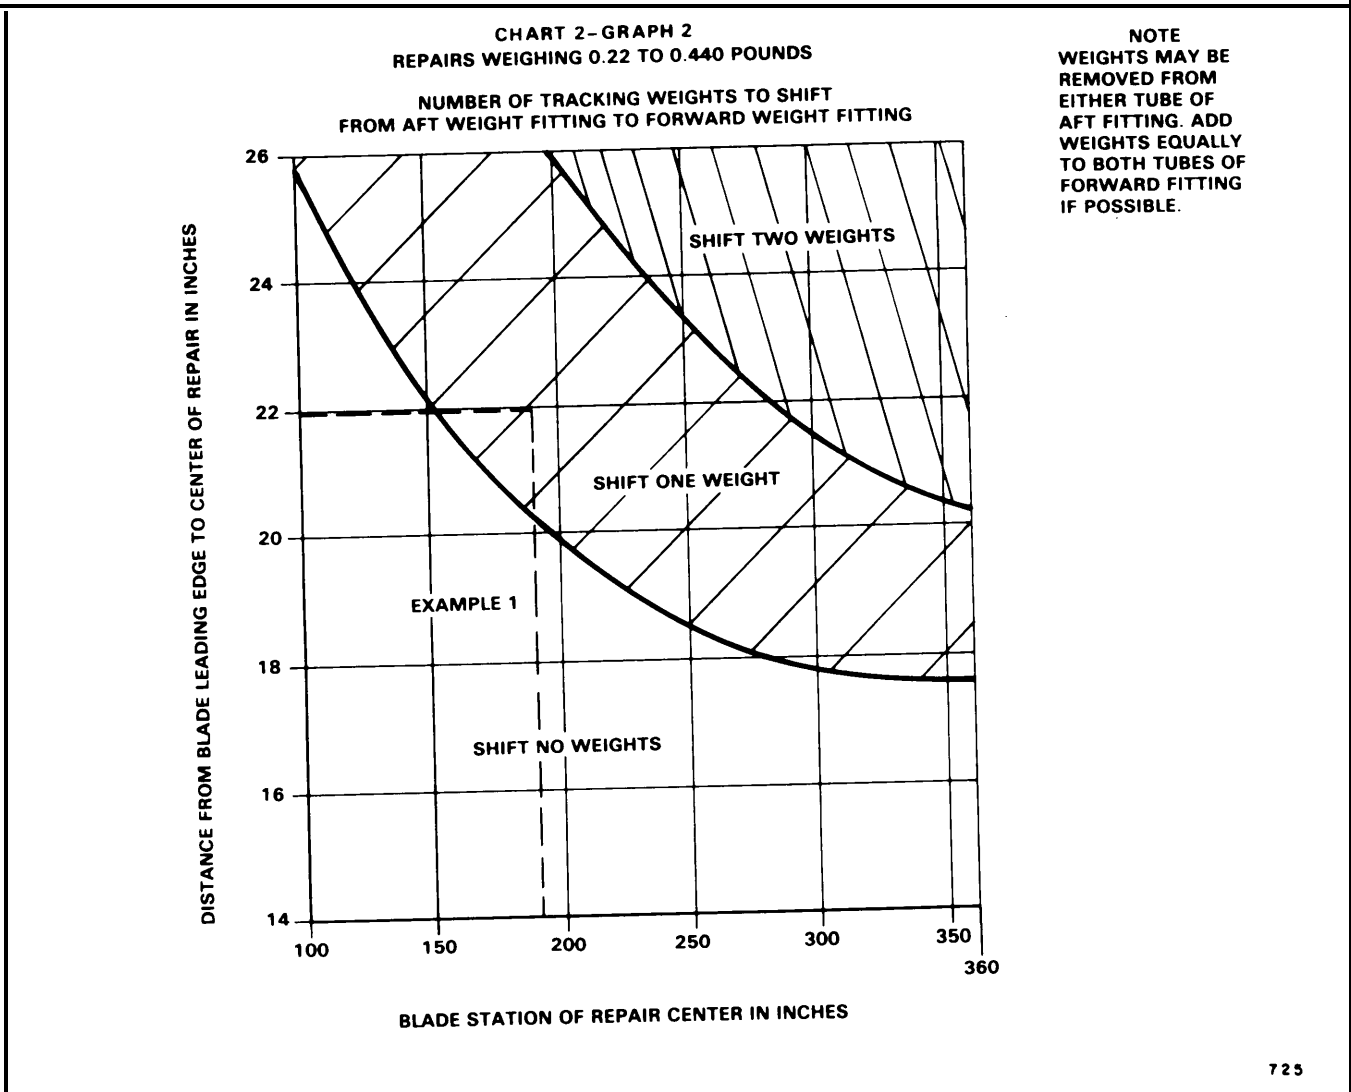


5-82.1 ADJUST BLADE BALANCE WEIGHTS (Continued)


(5) Example 2 shows a repair at blade station 300, 23 inches aft of the leading edge. Weight of repair is between 0.44 and 0.659 pounds. This repair requires

3 tracking weights be shifted from aft to forward fitting.



e. Record span weight correction (step c) and tracking weight correction (step d). Go to step 6.

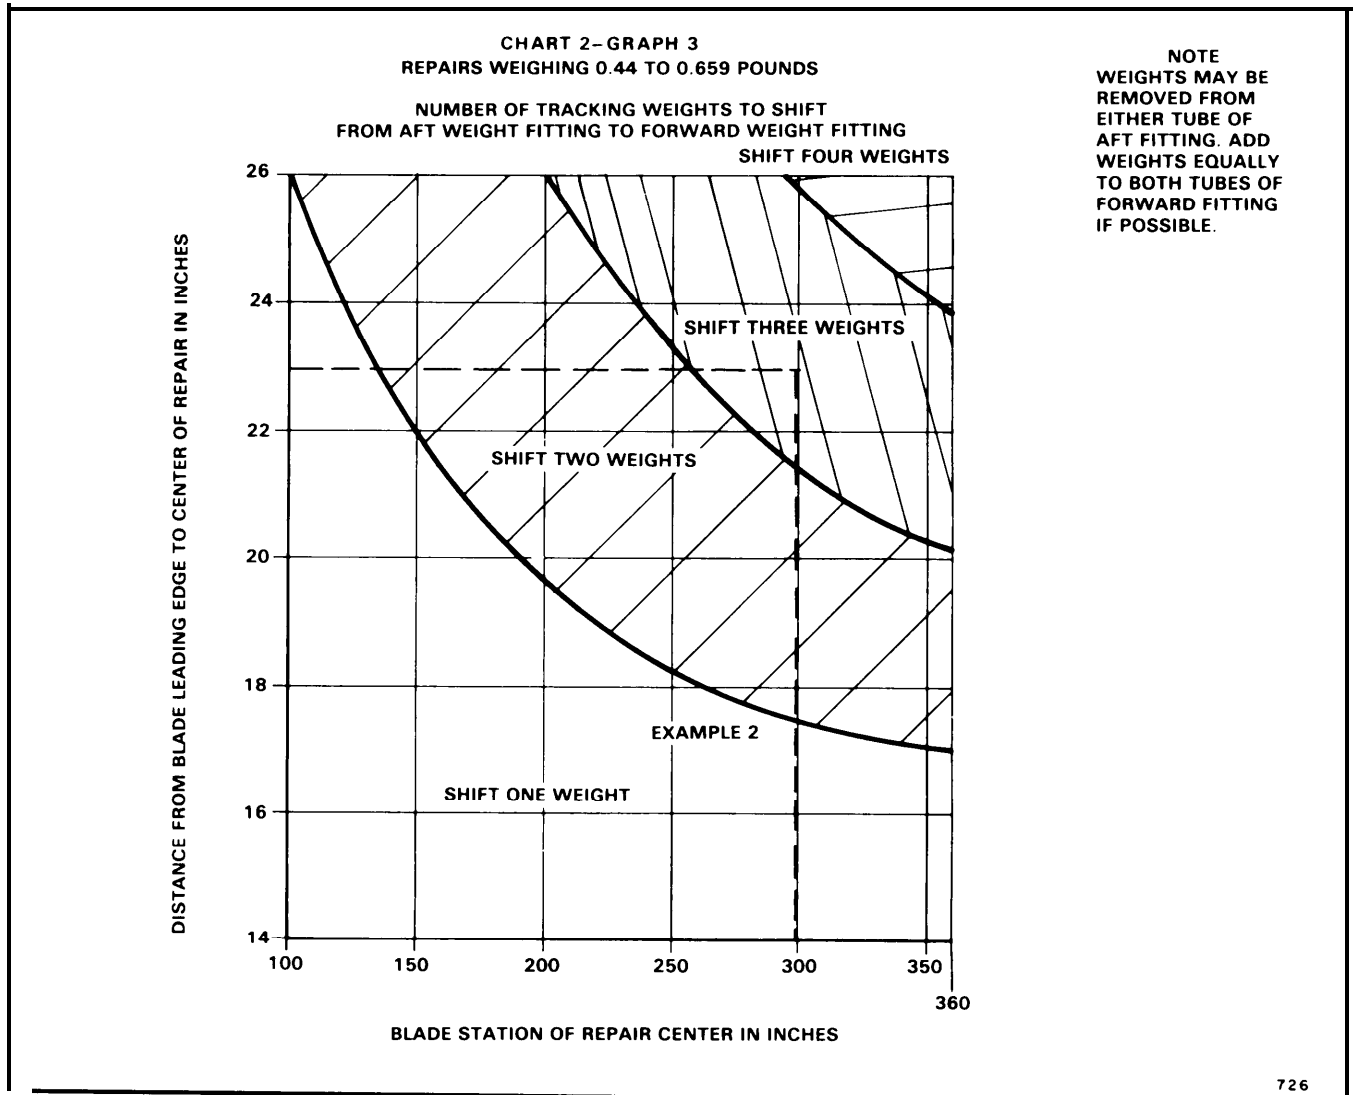

**NOTE**  
**WEIGHTS MAY BE**  
**REMOVED FROM**  
**EITHER TUBE OF**  
**AFT FITTING. ADD**  
**WEIGHTS EQUALLY**  
**TO BOTH TUBES OF**  
**FORWARD FITTING**  
**IF POSSIBLE.**

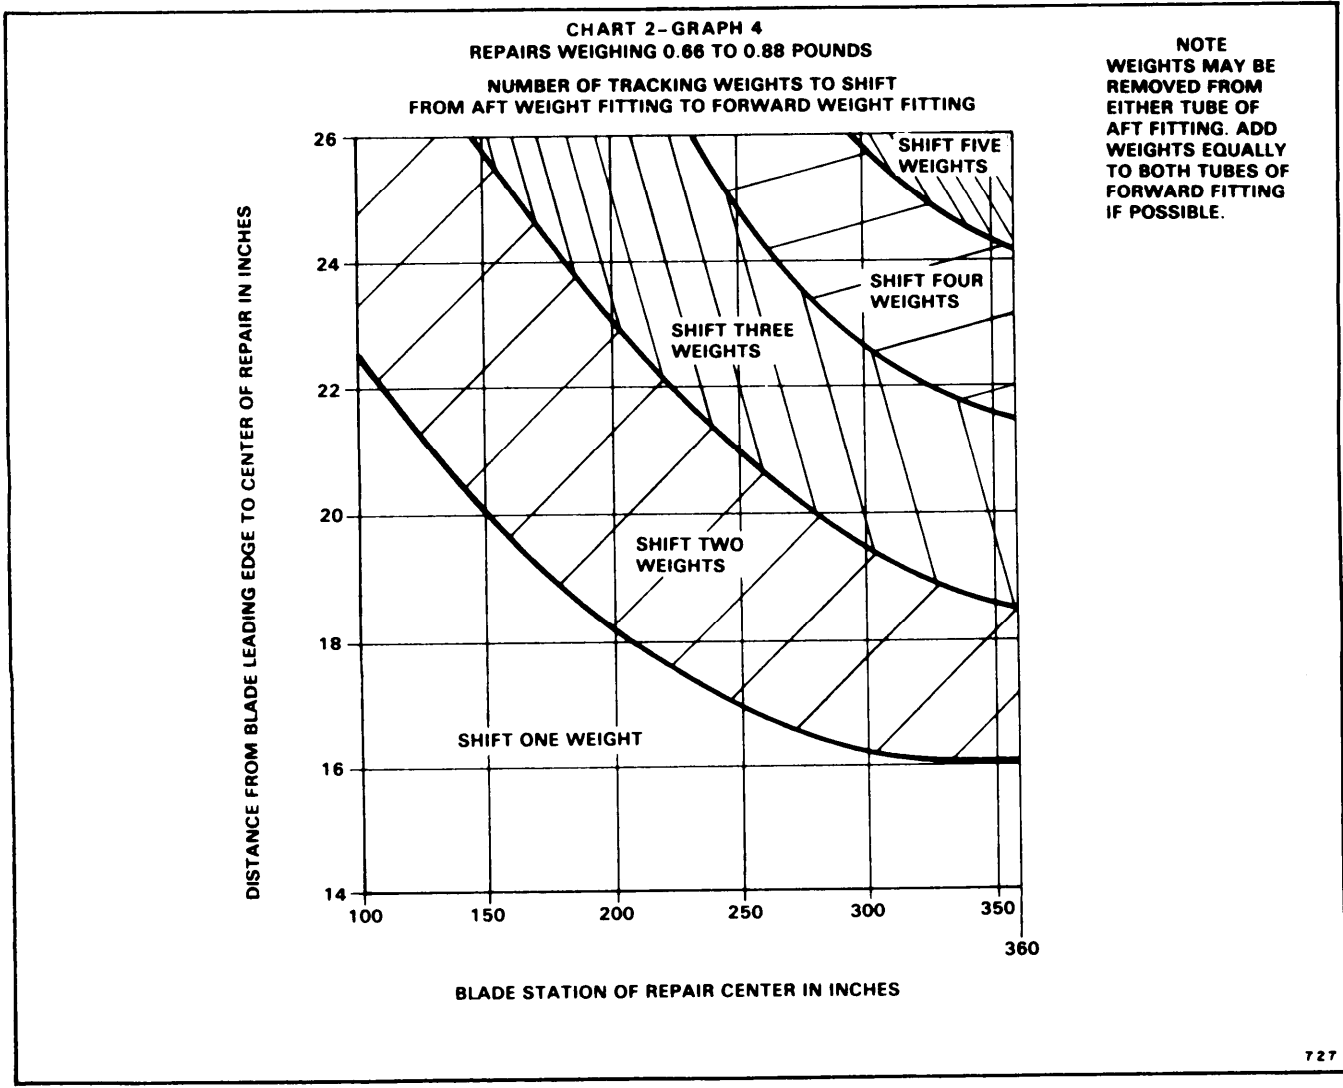

**GO TO NEXT PAGE**  
 5-310.6 Change 2

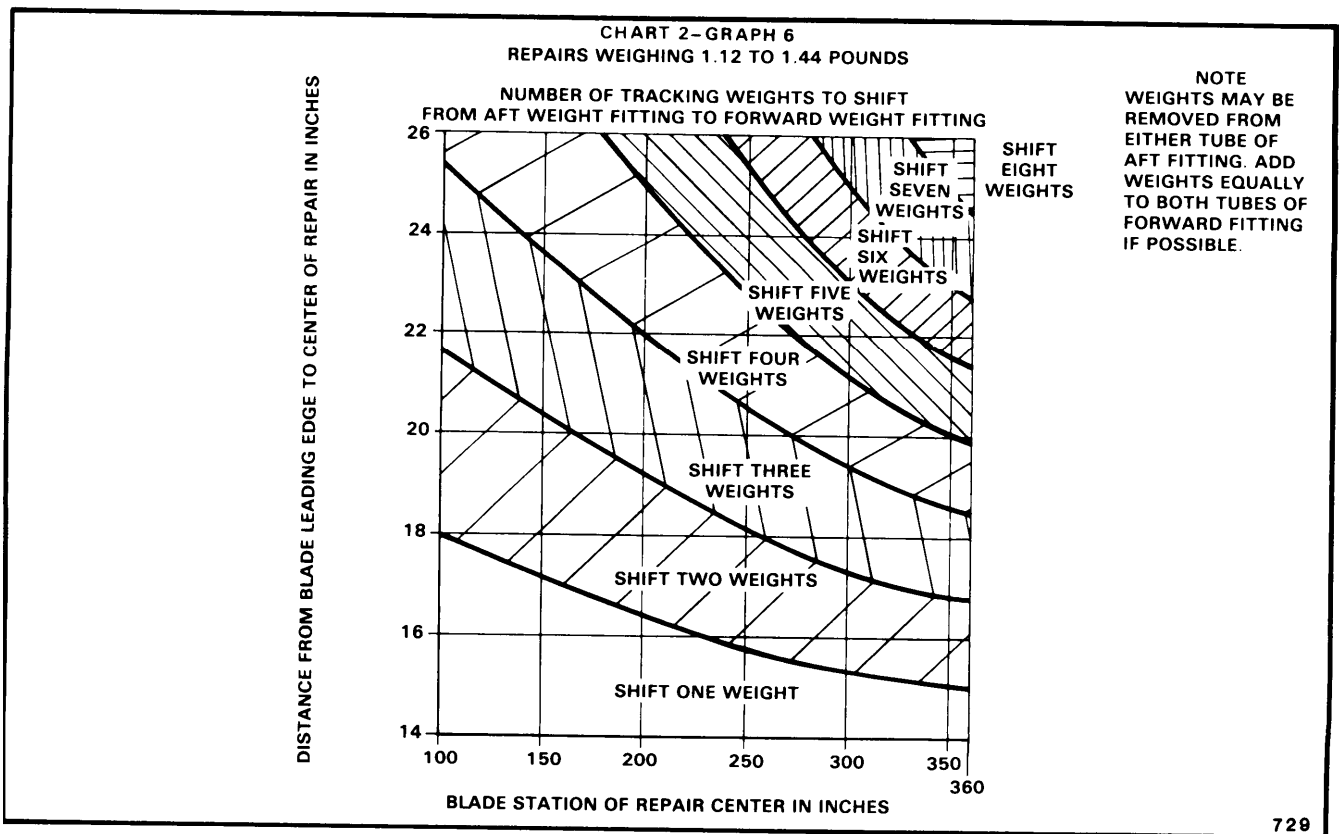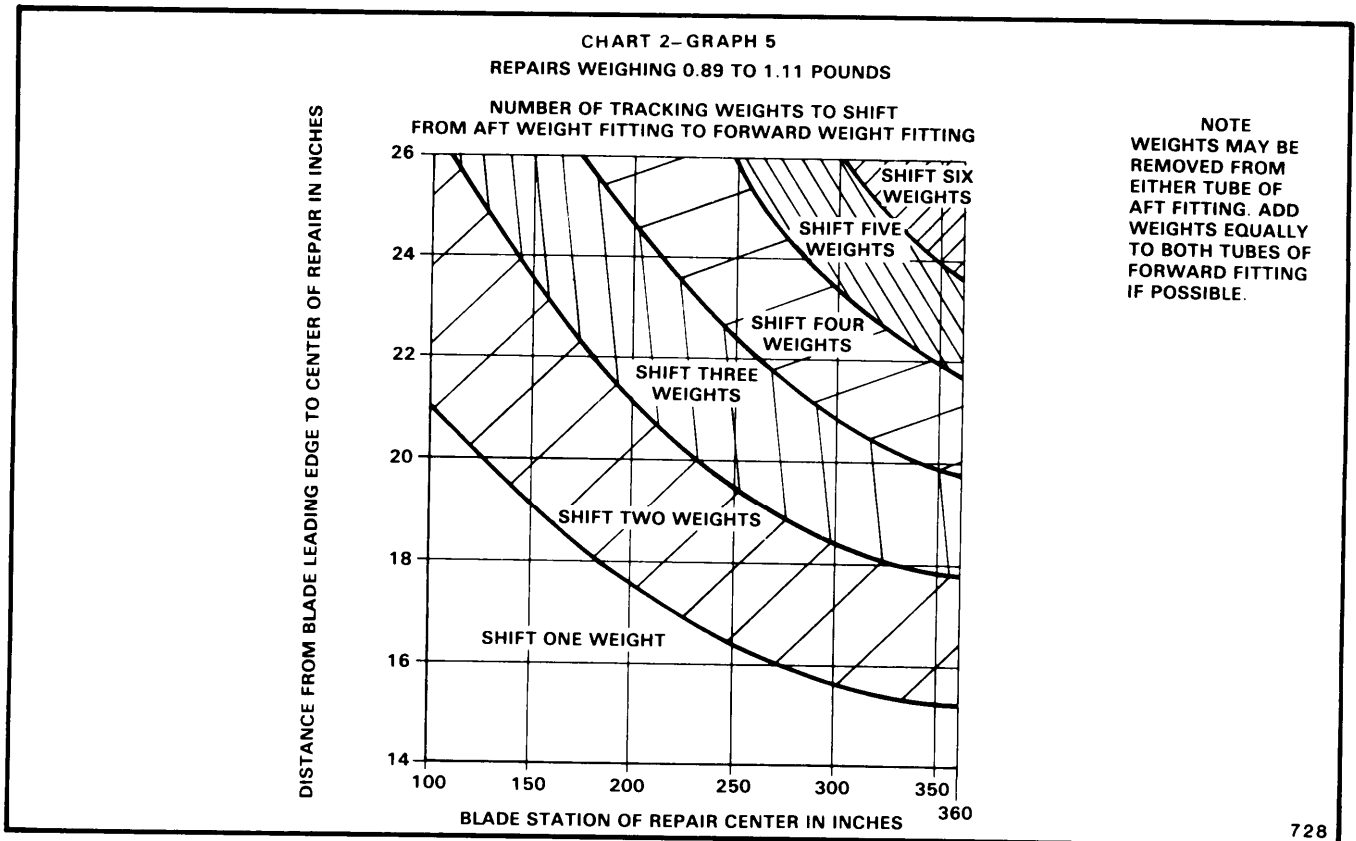

GO TO NEXT PAGE



**5-82.1 ADJUST BLADE BALANCE WEIGHTS (Continued)**

---

**3. Find span balance weight correction for major trailing edge repair (Task 5-72) as follows:**

- a. Measure distance in inches from blade tip to center of trailing edge repair.
- b. Subtract the distance in step a from 360. The difference is the blade station. Record blade station.
- c. Measure the length of the repair in inches. Record repair length.
- d. Determine balance weight adjustment from chart 3 as follows:
  - (1) At bottom of chart 3, find blade station recorded in step b.
  - (2) Go up blade station line to intersection with repair length recorded in step c.
  - (3) From intersection of blade station and repair length lines, move across to left edge of chart. Find inches of weight to

shift from aft to forward fitting. Record weight adjustment required.

- (4) From intersection of blade station and repair length lines, move across to right edge of chart. Find inches of weight to remove from aft fitting. Record weight adjustment required.

**NOTE**

Example shows a 12-inch trailing edge repair centered at blade station 225.


This repair would require weight adjustments as follows:

- (a) From left edge of chart, shift 0.325 - inch of weight from aft tube to forward fitting.
  - (b) From right edge of chart, remove 0.174-inch of weight from aft fitting.
- e. Adjust balance weights. Go to step 7.

CHART 3  
BLADE SPAN WEIGHT CORRECTION  
FOR TRAILING EDGE REPAIRS

NOTE

WEIGHTS MAY BE REMOVED FROM EITHER TUBE OF AFT FITTING. ADD WEIGHTS EQUALLY TO BOTH TUBES OF FORWARD FITTING IF POSSIBLE.

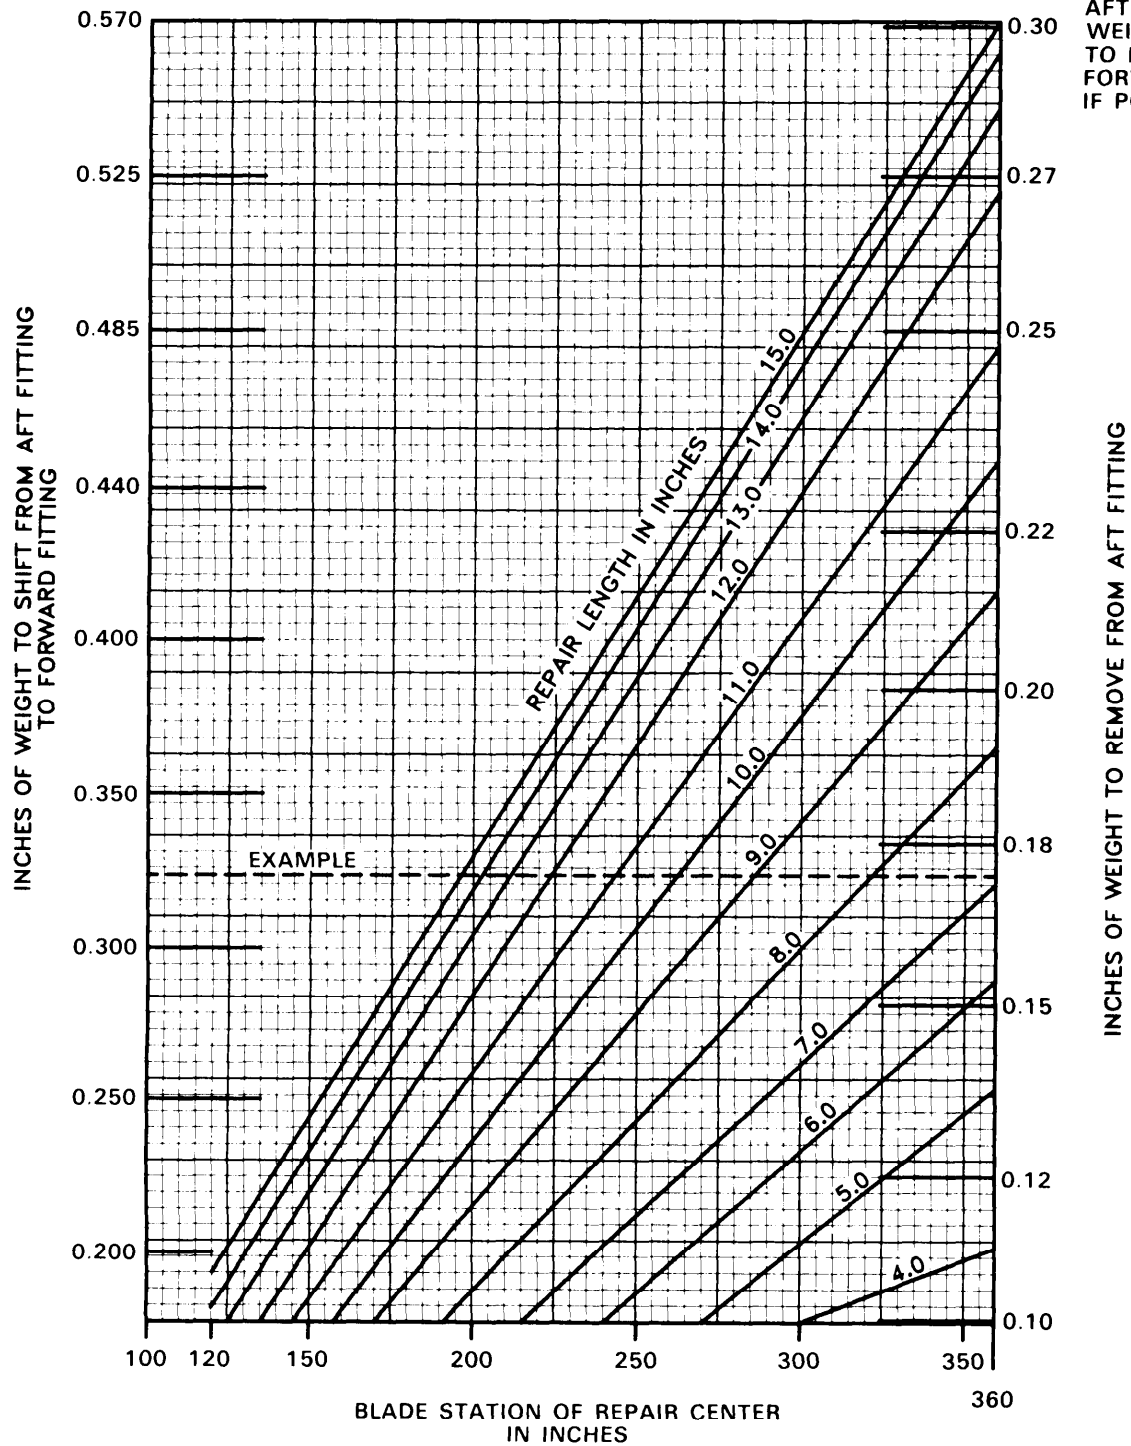

A731

GO TO NEXT PAGE




5-82.1 ADJUST BLADE BALANCE WEIGHTS (Continued)

5-82.1

4. Find span balance weight adjustment for nickel erosion cap replacement (Task 5-66) as follows:


- a. Find erosion cap weight difference (Task 5-66) at bottom of chart 4.
- b. Move up along weight difference line to intersect diagonal line on chart 4. Example shows weight difference of 0.40 pound.
- c. Move across to left edge of chart 4 to find tracking weight adjustment. Example shows weight difference of 0.40 pound requires-tracking weight adjustment of 1.6 inches. If new cap is heavier than removed cap, weight must be removed from forward fitting. If new cap is lighter than removed cap, weight must be added to forward fitting. Record tracking weight adjustment.

- d. Move across to right edge of chart 4 to find span balance weight adjustment. Example shows weight difference of 0.40 pound requires balance weight adjustment of 0.80 inch (0.33 pound). If new cap is heavier than removed cap, weight must be shifted from forward fitting to aft fitting. If new cap is lighter, weight must be shifted from aft fitting to forward fitting. Record balance weight shift. Go to step 6.

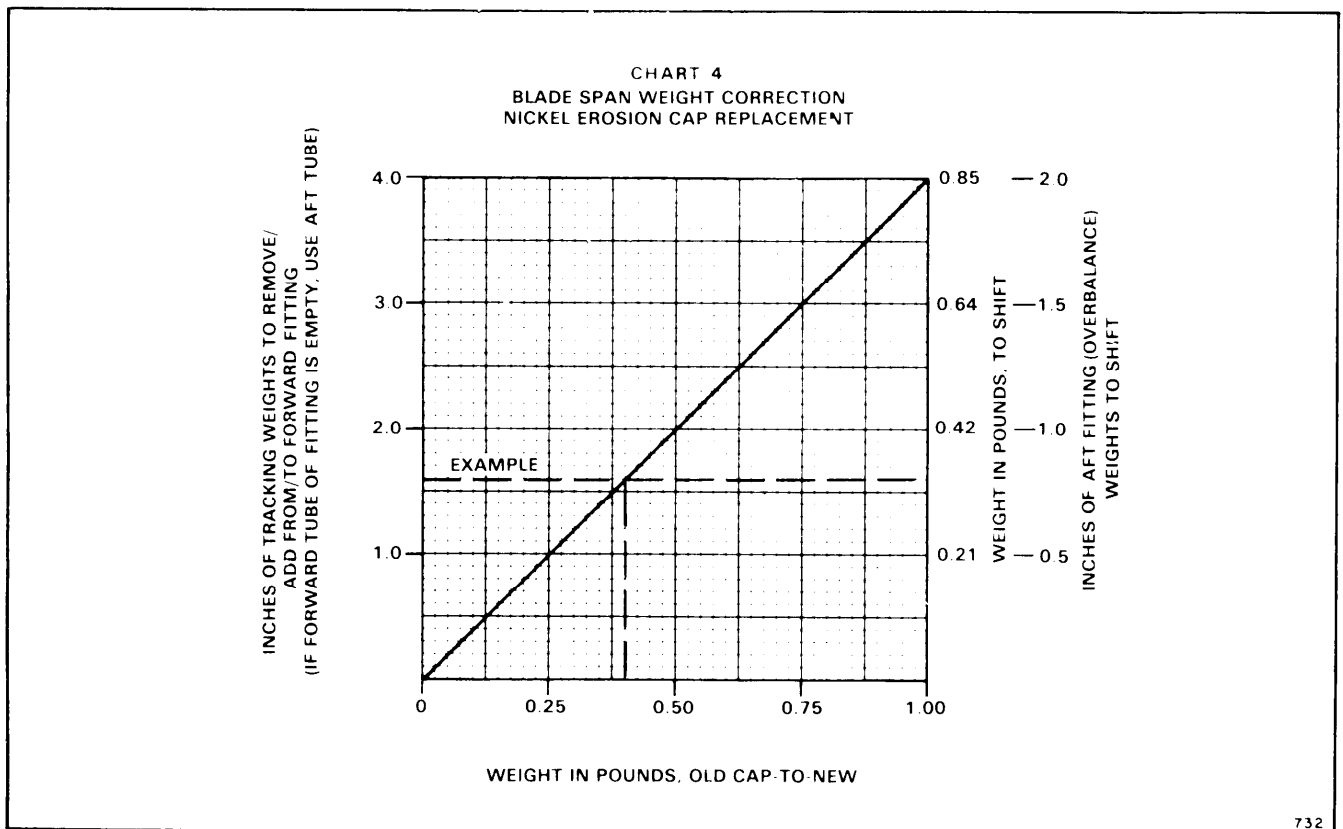

5. Find span balance weight correction for titanium nose cap crack repair (Task 5-66.2) as follows:
  - a. Measure distance in inches from tip of blade to center of repair doubler. Record measurement.
  - b. Subtract measurement obtained in step a from 360. The difference is the blade station of repair. Record blade station.
  - c. At bottom of chart 5, find blade station of repair.

- d. Move up blade station line to intersect diagonal line on chart 5.
- e. Move across chart to left edge to find amount of weight to remove from forward fitting. Example shows repair centered at blade station 235. Repair requires 1.15 inches of span weight to be removed from forward fitting.
- f. Record span weight correction from chart 5. Go to step 6.

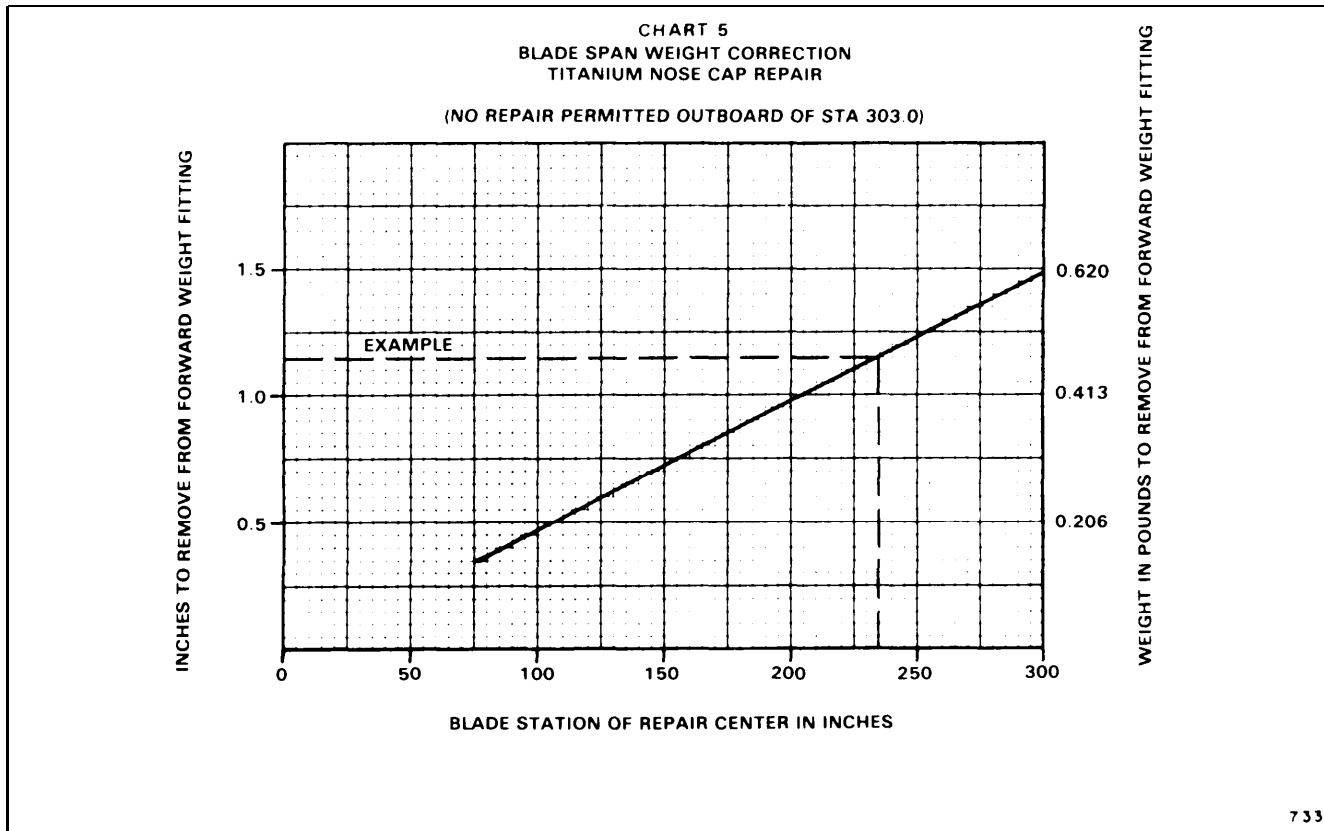


**GO TO NEXT PAGE**

**5-82.1 ADJUST BLADE BALANCE WEIGHTS (Continued)****5-82.1**

6. Remove tracking weights and span balance weights as follows:

- a. Remove lockwire from screws (1). **Remove four screws (1) and washers (2) from tip cover (3). Remove tip cover.**
- b. **Review balance weight adjustment required** (steps 2 thru 5). Recheck calculations for accuracy.

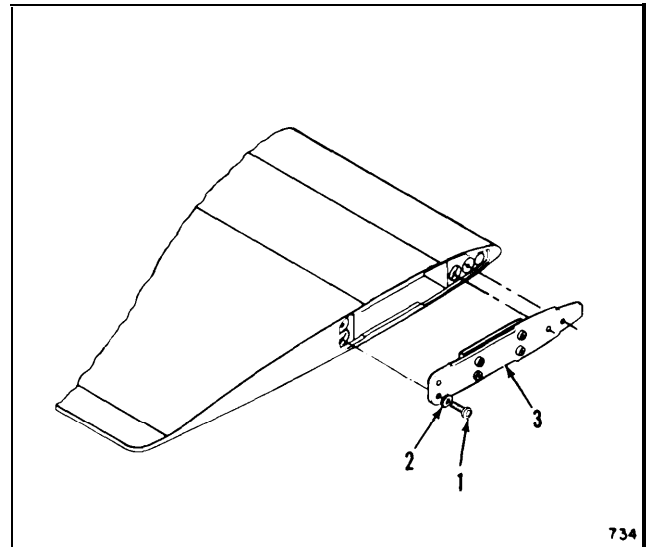
**CAUTION**

Make sure that blade is level or tip slightly higher than root end. If weights slide out of tubes and become mixed, weight reference will be lost.

- c. Remove forward tube end caps (4) and aft tube end cap (5) as required.

**NOTE**

If aft tube weight adjustment is required, add or remove weight from upper tube first. If upper tube is full or empty, use lower tube.

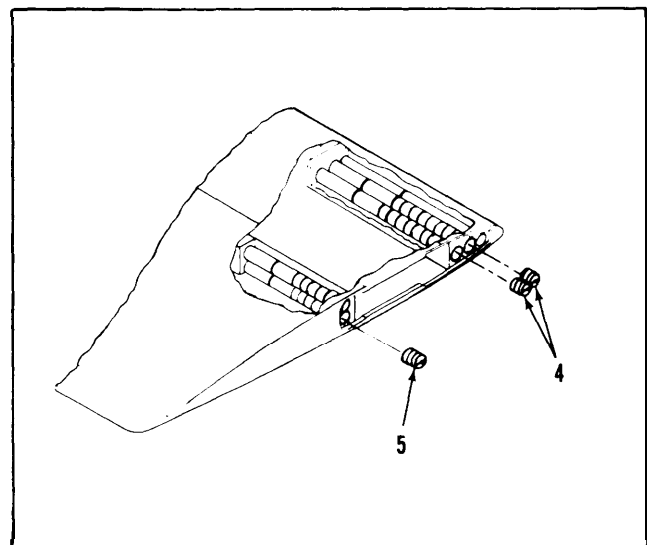**GO TO NEXT PAGE**


**CAUTION**

Weights and spacers must be removed from one tube at a time. Each weight and spacer should be marked to identify the tube it came from. Keep weights from each tube separated. Improper adjustment can make blade tracking impossible.

- d. Remove tracking spacers (6), tracking weights (7), span balance weights (8) and wooden spacer (9) from tube. Keep weights and spacers from each tube separated.

**NOTE**

A stiff wire, bent 90 degrees at the end to form a hook, can be used to remove spacers and weights.

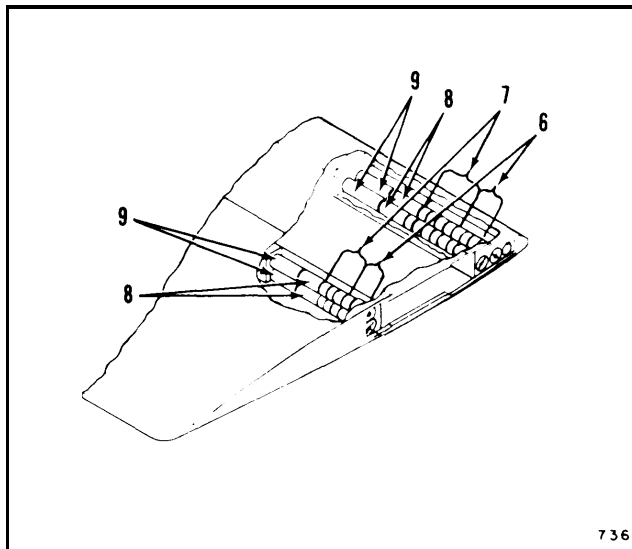

**5-82.1 ADJUST BLADE BALANCE WEIGHTS (Continued)****5-82.1**

7. Make span balance weight (8) adjustments as follows:


**NOTE**

If both span balance weight and tracking weight adjustments are required, make span weight adjustment first.

- a. Measure length of span balance weight (8) removed from tube. Record measurement.
- b. Measure length of wooden spacer (9) removed from tube. Record measurement.
- c. Add or subtract weight adjustment required (charts 1, 3, 4 and 5) to find balance weight length required.
- d. To remove weight, measure and mark existing weight at length required. Measure from end of weight with threaded hole. Cut or machine to length.
- e. To add weight, cut required length from new span balance weight 114R1737-1.

**NOTE**

The span balance weight removed may have been shortened by a previous repair. A new balance weight 114R1737-1 is 5 inches long. If required length is 5 inches or less, a new one-piece weight can be made.

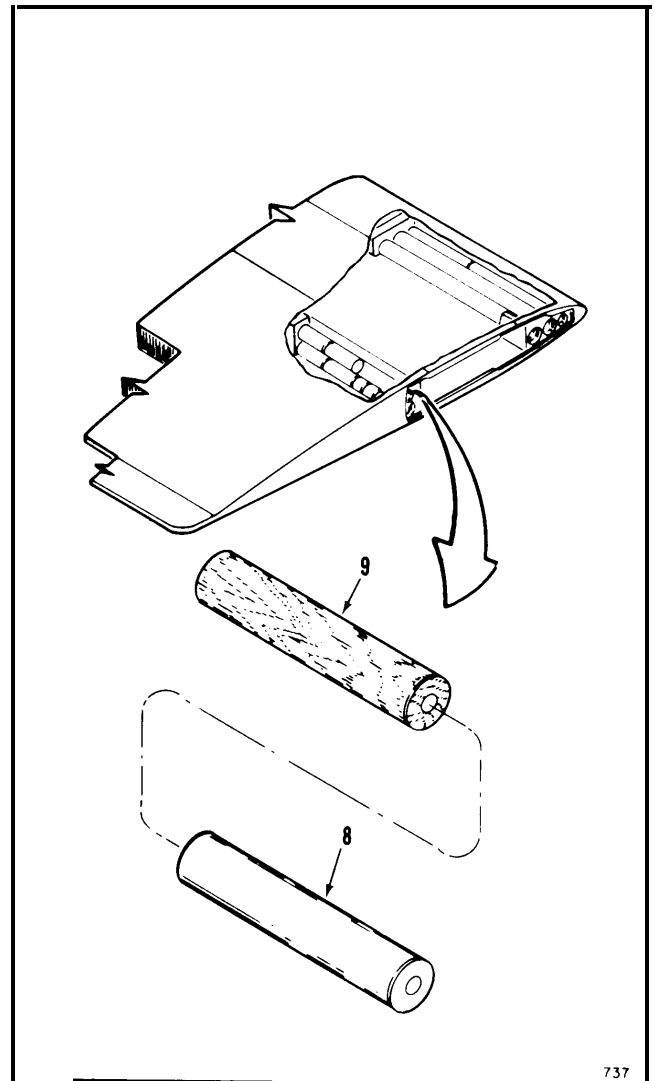

737

**GO TO NEXT PAGE**




8. Shift tracking weights (7) as follows:

- a. Find number of tracking weights (7) to be shifted from aft weight fitting (10) to forward weight fitting (11). Use chart 2.
- b. Move required number of tracking weights (7) from aft fitting to forward fitting.

**NOTE**

Remove weight from upper tube of aft fitting first. If additional weight must be shifted, remove weights from lower tube.

- c. Move an equal number of spacers (6) from the forward tube fitting to the aft tube fitting.

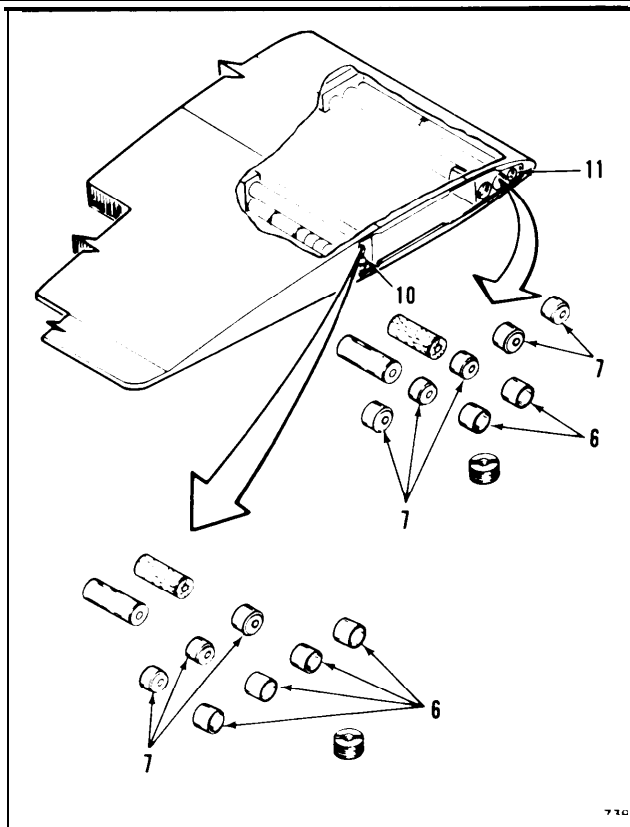


9. Install span balance weights and tracking weights as follows:

- a. Measure depth of aft tube(s) (10) and forward tubes (11). Record dimension.
- b. Measure total length of weights (7 and 8), spacers (6 and 9), and end cap (4 and 5).
- c. Compare dimensions from steps a and b. Length of assembled weights, spacers, and end cap must be same as depth of tube. If not, cut new wooden spacer (Appx E-44) (9) to required length.

**NOTE**

When weights, spacers and end caps are installed, end cap must be flush with or recessed no more than 0.06-inch from end of tube.

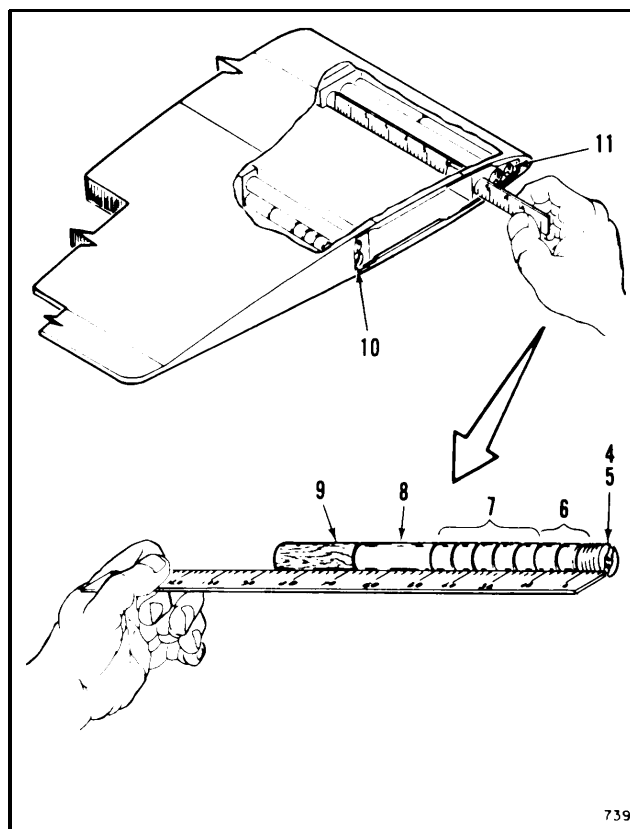

**GO TO NEXT PAGE**

## 5-82.1 ADJUST BLADE BALANCE WEIGHTS (Continued)

5-82.1

**CAUTION**

Make sure weights are installed in their proper tubes. Incorrect installation will make blade tracking impossible.

d. Install spacers and weights in the following order:

- (1) Wooden spacer (9).
- (2) Span balance weight (8).
- (3) Tracking weights (7).
- (4) Tracking spacer (6).
- (5) Slotted end cap (4 and 5).

**NOTE**

End cap must thread into tube without binding. If not, remove end cap, clean threads and reinstall.



- e. Apply antiseize compound (E76) to thread of end cap (4 and 5). Screw caps into each set of weight tubes (10 and 11). Torque to 200 to 250 inch-pound.
- f. Check that end cap (4 and 5) is flush or recessed no more than 0.06-inch from end of tracking weight fittings (10 and 11). If not, remove end cap, weights and spacers. Make new wooden spacers (9) or shorten existing spacer (9) as required to obtain correct length. Repeat steps d and e.
- g. Position tip cover (3). Install 4 screws (1) and washers (2). Torque screws (1) to 160 to 190 inch-pounds.
- h. Lockwire screws (1). Use lockwire (E233).

**NOTE**

All blade repairs, weight adjustment, painting, or balancing will be recorded on rotor blade DA Form 2408-16, each blade requires a separate form. If the rotor blade does not have a DA Form 2408-16, one must be prepared and all actions recorded, as example; location of repair, size of repair, weight of repair, and required weight adjustments for track and balance.

**INSPECT****FOLLOW-ON MAINTENANCE:**

Track and balance rotor blades (task 5-139, 5-140, 5-141, 5-142, and 5-143).

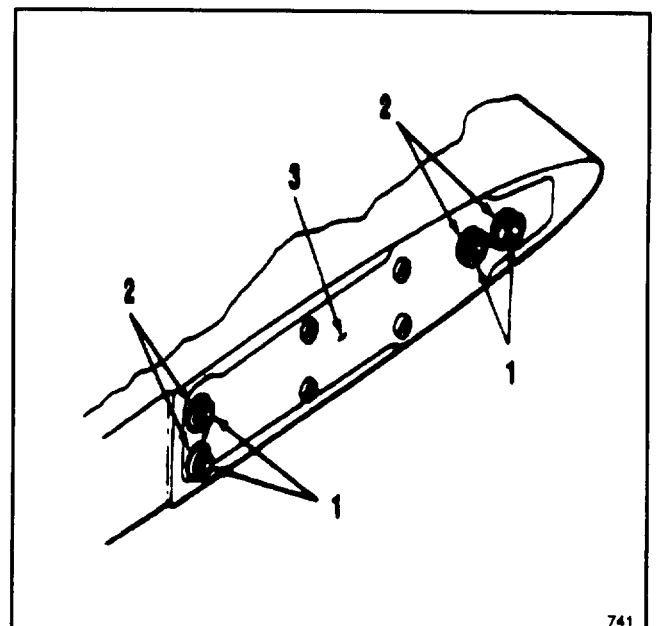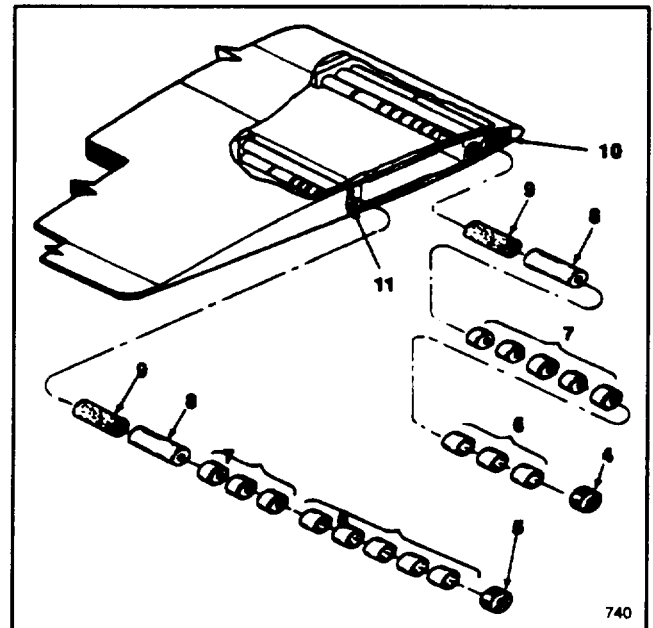**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Wood Blocks

**Materials:**

Dry Cleaning Solvent (E162)

Cloth (E120)  
Gloves (E186)

**Personnel Required:**

Medium Helicopter Repairer (8)

**References:**

TM 55-1520-240-23P

**Equipment Condition:**

Off Helicopter Task

1. Remove record receptacle cap (1). Remove records and install cap.
2. Loosen 22 turnlocks (2). Have helpers remove cover (3).
3. Remove bolt (4), washers (5), and spacer (6).

**NOTE**

Forward blade is top side down in container (T86).

4. Have helpers remove blade (7) and place on wood blocks (8).
5. Remove tape (9) and barrier material (10).


**WARNING**

Dry cleaning solvent (E162) is combustibile and toxic. It can irritate skin and cause bums. Use only with adequate ventilation, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

6. Clean socket (11). Use cloth (E120) damp with dry cleaning solvent (E162). Wear gloves (E186).
7. Check blade (7) for damage. There shall be no damage.

**FOLLOW-ON MAINTENANCE:**

Install rotary-wing blade (Task 5-84).

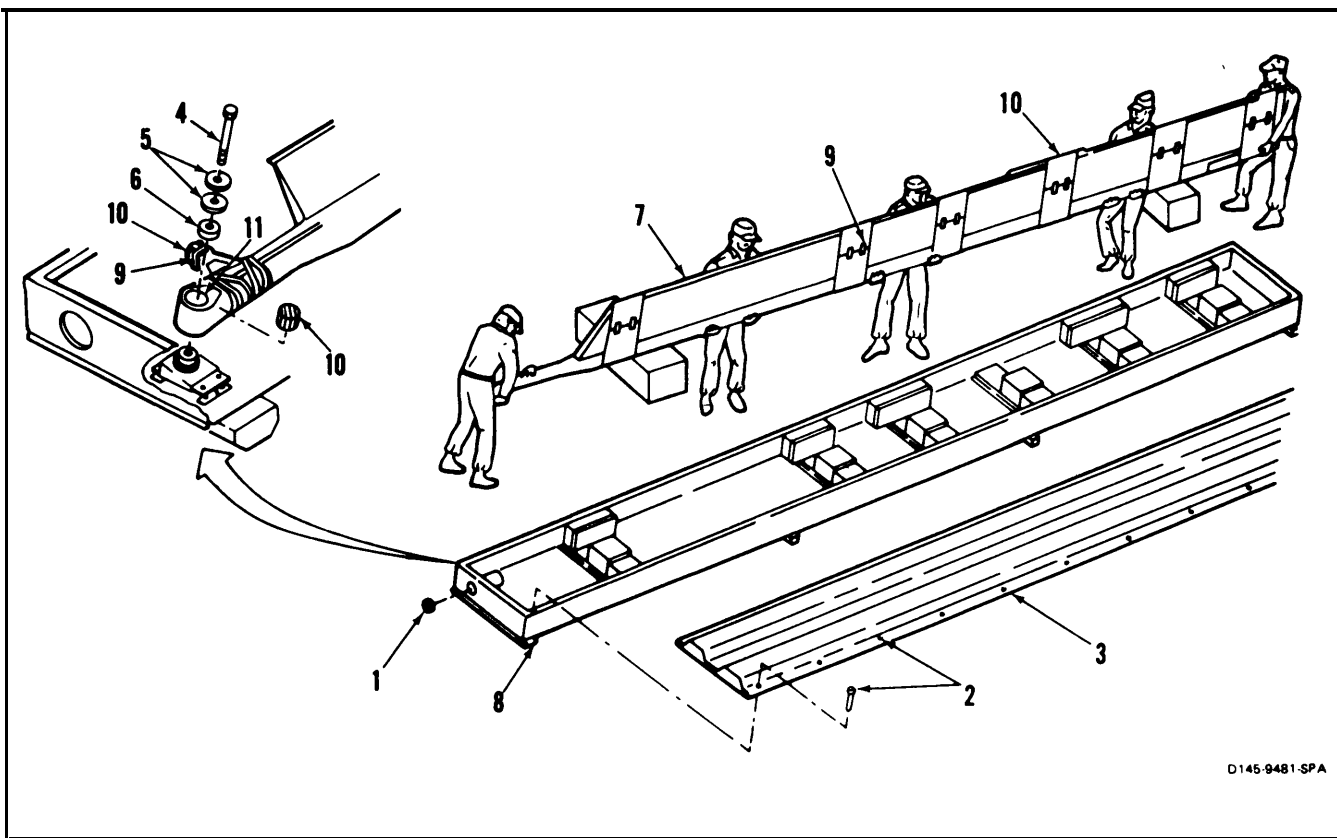

**END OF TASK**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic Tool Kit,  
NSN 5180-00-323-4692  
Rotary-Wing Blade Sling (T35)  
Vertical Pin Reaction Adapter Set (T47)  
Vertical Pin Protective Cap (T70)  
Torque Wrench (T48)  
Hoist  
Rope Guideline  
Torque Wrench, 5 to 50 Inch-Pounds  
Torque Wrench, 0 to 600 Foot-Pounds  
Rawhide Mallet

**Materials:**

Antiseize Compound (E75) or (E76)  
Dry Cleaning Solvent (E162)  
Cloth (E120)  
Lockwire (E231)  
Gloves (E186)  
Tape (E395)

**Personnel Required:**

Medium Helicopter Repairer (6)  
Inspector

**References:**


TM 55-1520-240-23P  
Task 5-64  
Task 5-84  
Task 5-37

**General Safety Instructions:****WARNING**

Dry cleaning solvent (E162) is combustible and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**NOTE**

- Positive retention bolts are installed in shock absorber connections. They have a pawl which prevents nut or bolt removal unless pawl is depressed.
- Procedure is similar to install any rotary-wing blade.

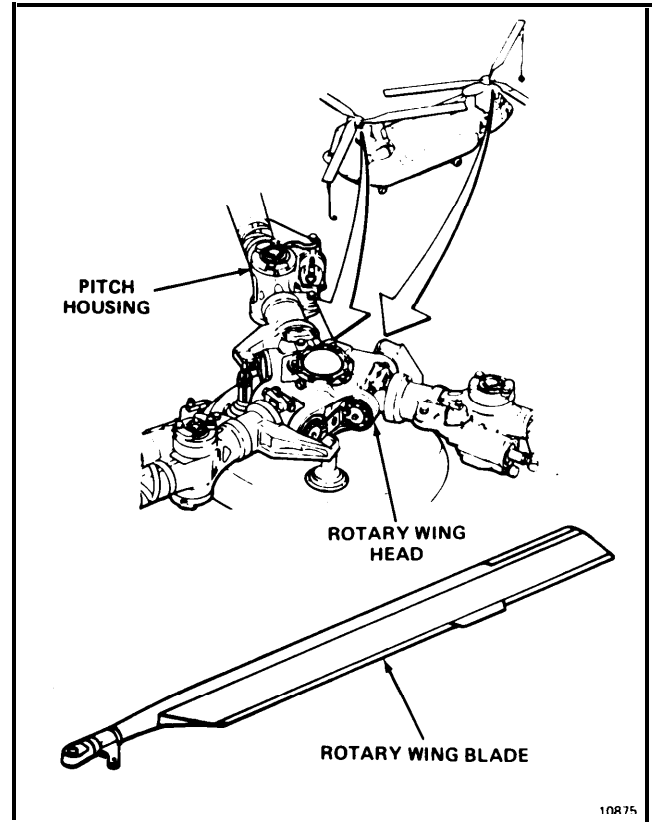**GO TO NEXT PAGE**

**WARNING**

Vertical hinge pins shall have letters EC next to serial number.


**CAUTION**

- Do not install blade with shock absorber attached to bracket. Damage to bracket can occur.
- The shock absorber bracket is not to be used as a handle to carry, lift, or position the rotor blade. Equipment will be damaged.

**NOTE**

All blade repairs, weight adjustment, painting, or balancing will be recorded on rotor blade DA Form 2408-16, each blade requires a separate form. If the rotor blade does not have a DA Form 2408-16, one must be prepared and all actions recorded, as example, location of repair, size of repair, weight of repair, and required weight adjustments for track and balance.

1. Clean vertical pin (1) and blade bore (2). Use cloth (E120) damp with solvent (E162). Wipe pin and bore dry. Wear gloves (E186)
2. Check that bore (2) is undamaged.

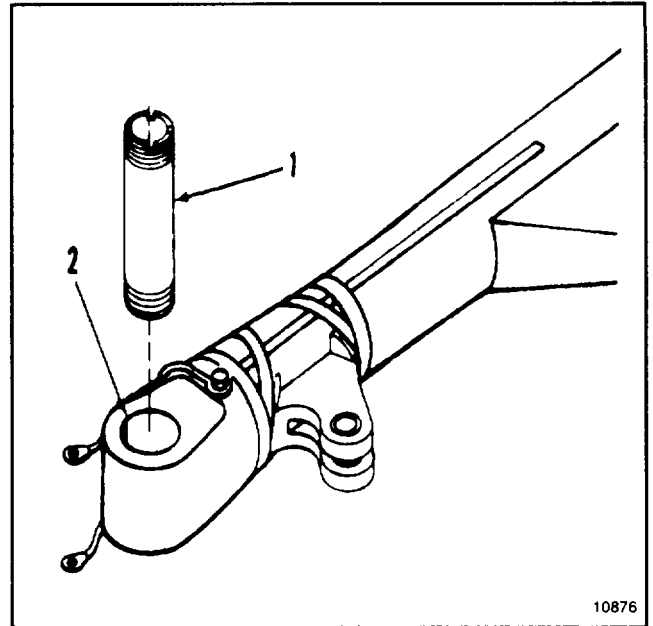

**GO TO NEXT PAGE**

**5-312 Change 37**


**5-84 INSTALL ROTARY-WING BLADE (Continued)****5-84**

3. Lift blade sling (T35) (3) up to blade (4). Use hoist (5). Align eye (6) of sling with marked balance point.
4. Have helpers **guide sling (T35) (3) until two bumpers (7) contact blade (4)**. Pull release rope (8) away from blade to **lock clamp (9)** on trailing edge (10).
5. Attach rope guideline (11) to root end of blade (4).
6. Attach tiedown line (12) to blade (4).

**WARNING**

Blade is heavy and can injure personnel if it drops. Blade must be supported by hoist and moved carefully. Do not use release rope on sling (T35) to guide blade. Clamp can be opened to release blade which can result in injury or equipment damage.

7. **Lift blade (4)**. Use tiedown line (12), guideline (11), and guide ropes (13) to align blade (4).

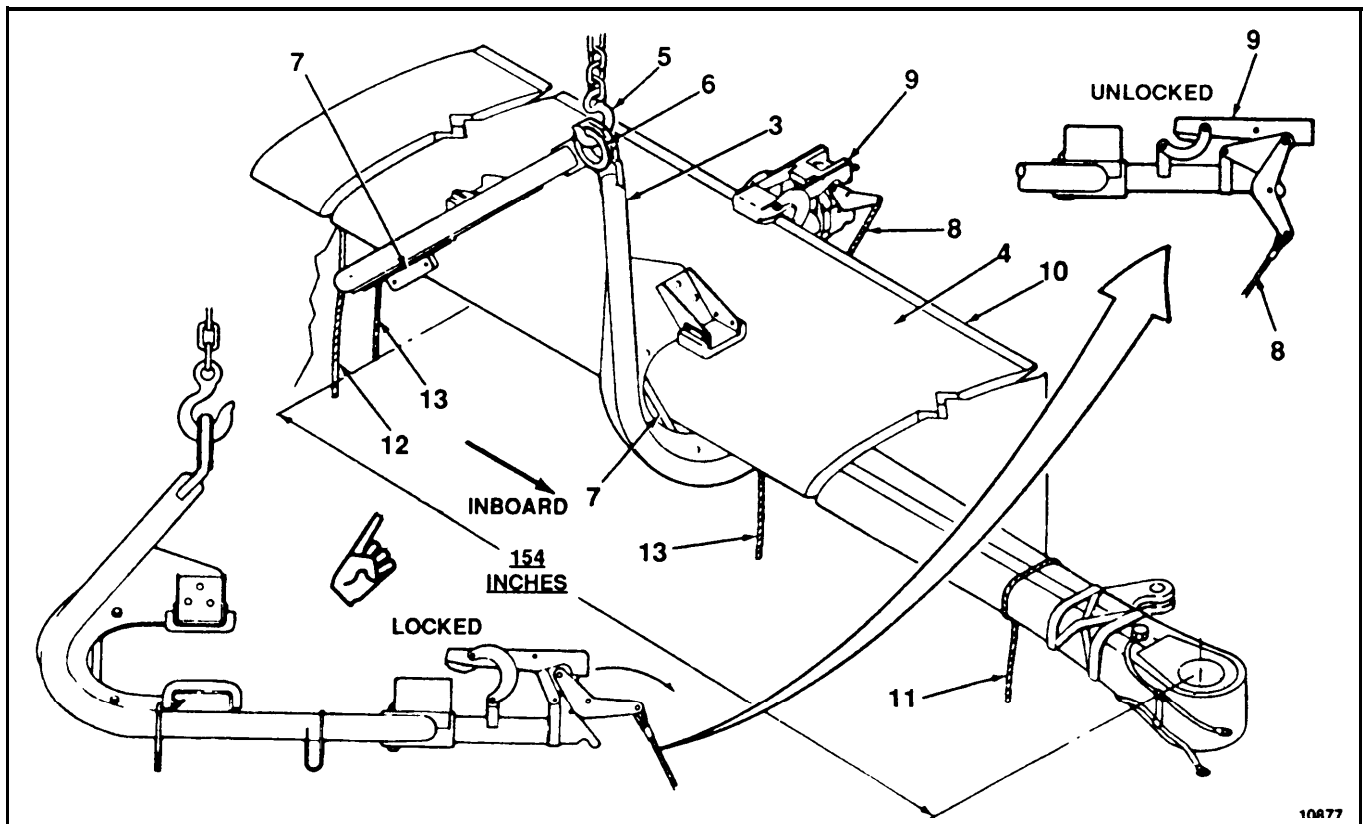**GO TO NEXT PAGE**

Change 27 5-313

8. Wipe inner bearing races (14 and 15) clean. Use cloth (E120). Check that races are into lugs (16) as far as possible.

**CAUTION**

Do not bump blade into housing or races. Equipment can be damaged.

9. Guide blade (4) carefully into lugs (16). Align blade bore (2) with inner races (14 and 15). Use guide rope (11) at root of blade (4).

- 9.1. Apply antiseize compound (E75) or (E76) to thread of pin (18).

**CAUTION**


Use extreme care during pin installation. Vertical pin thread, inner bearing races, and blade pin bore lines are easily damaged.

10. Install protective cap (T70) (17) on end of pin (18) that does not have identification. Install shaft (19) in cap (T70). Install pin through upper bearing race (14). Push pin in until pin has started into lower race (15).
11. **Seat pin (18)** by tapping. Use rawhide mallet. Remove cap (T-70) (17).

**CAUTION**

Using vertical pin nuts with damaged thread will damage thread on the vertical pin, causing rejection of pin.

- 11.1. **Inspect lower and upper vertical pin nuts (20 and 20.1)** for damaged, distorted, or poorly machined thread.

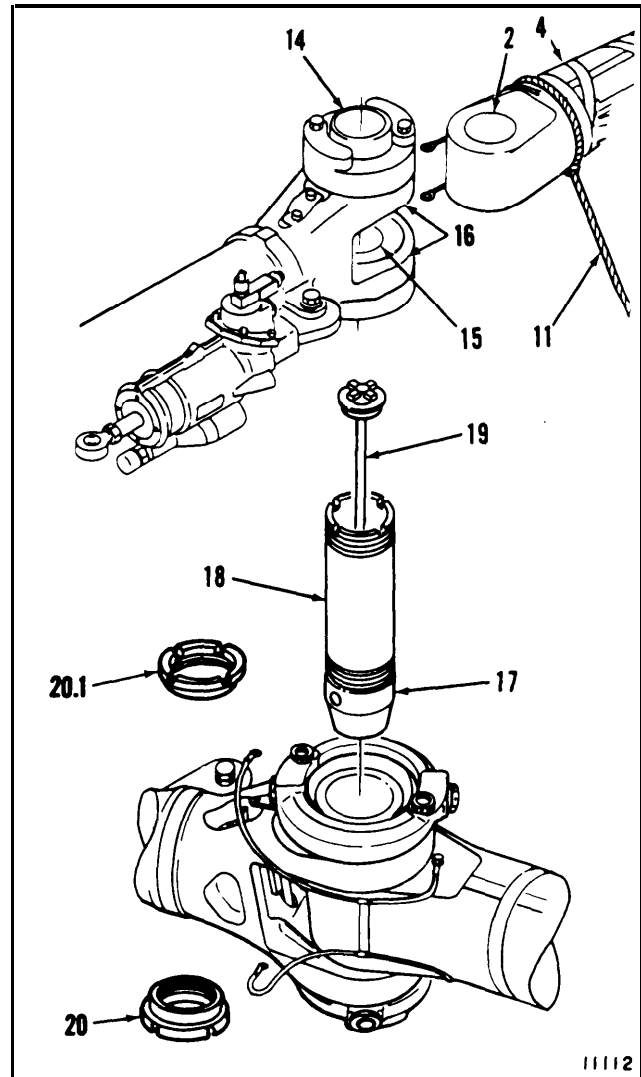

11112

**GO TO NEXT PAGE**

**CAUTION**

Lower vertical pin nut must be installed and torqued before upper nut is installed. Installing upper nut first can cause damage to pin.

12. Install lower vertical pin nut (20) as follows:

- a. Position pilot socket (21) on drive bar (22). Position drive bar through vertical pin (18). Have helper support drive bar (22).
- b. Install torque wrench (T48) (23) on drive bar (22). Turn handle (24) in either direction until wrench is seated on pilot socket (21).
- c. Install washer (25) and nut (26) on drive bar (22). Have helper release bar.
- d. Install lower nut (20) on pin (18) and hand tighten.
- e. Install spanner socket (27), on drive bar (22), and engage with lower pin nut (20). Install washer (25) and nut (26).
- f. Adjust upper and lower nuts (26) until drive bar (22) is seated in spanner socket (27).

**CAUTION**

Torque wrench (T48) must not turn during installation of lower nut. Equipment can be damaged.


- g. Turn handle (24) counterclockwise. **Torque lower nut (20) to 275 foot-pounds.** Check gap between inner bearing race (15) and liner (27.1) of blade (4). Gap shall not extend more than 50 percent of contact surface.

**NOTE**

No limit on gap depth.

**INSPECT**

- h. Remove nut (26), washer (25), and spanner socket (27).

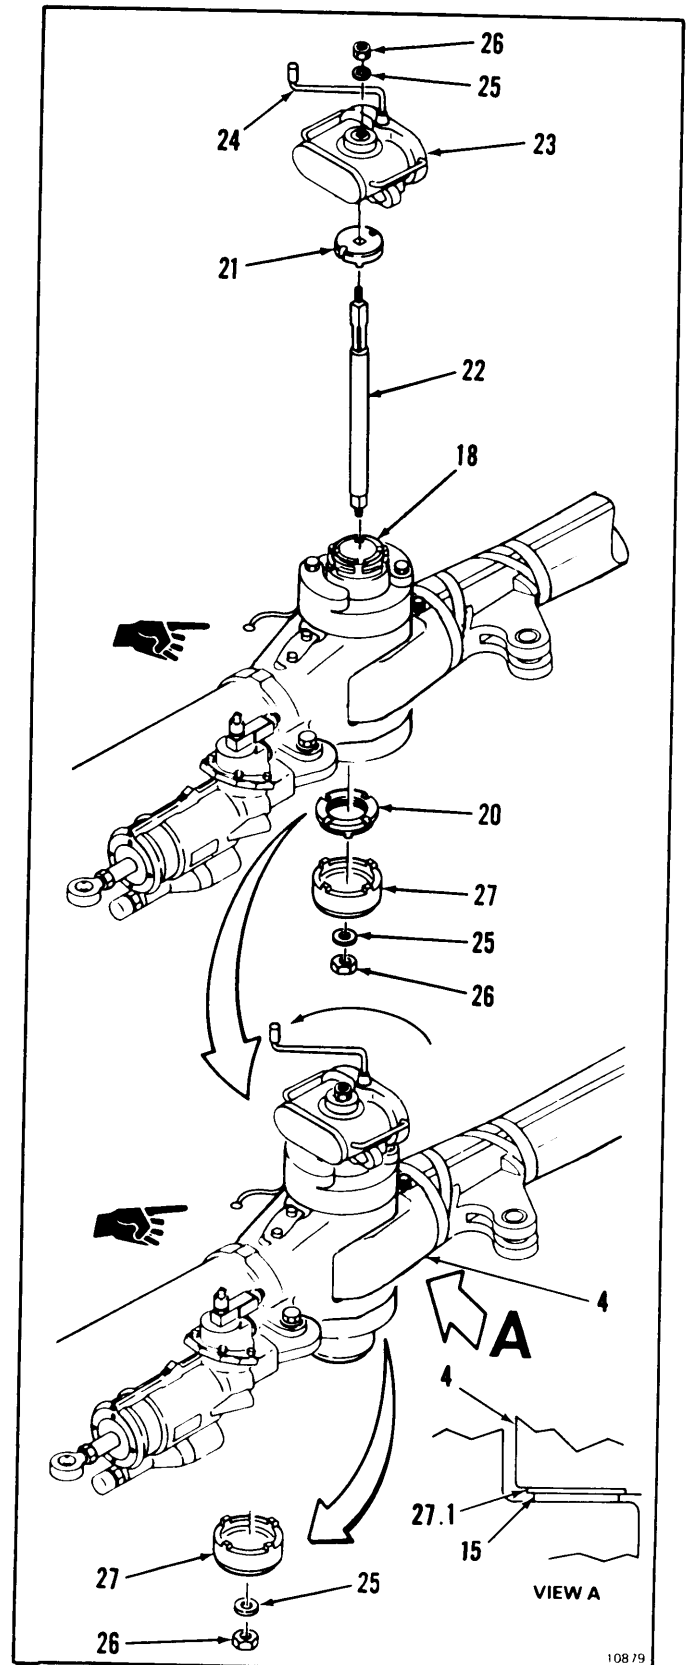

**GO TO NEXT PAGE**



**5-84 INSTALL ROTARY-WING BLADE (Continued)**

**13. Install upper vertical pin nut (20.1) as follows:**

- a. Have helper support drive bar (22). Remove nut (26) and washer (25).
- b. Remove torque wrench (T48) (23).
- c. Install upper nut (20.1) on pin (18) and hand-tighten.
- d. Install spanner socket (27) on drive bar (22) over pilot socket (21). Seat spanner socket on upper nut (20.1).

**NOTE**

Pilot socket can be pushed out of vertical pin notches.


- e. Have helper raise drive bar (22) slightly. Have him rotate bar until flats on bar seat in pilot socket (21). Continue to support bar.
- f. Install torque wrench (T48) (23) on drive bar (22). Turn handle (24), in either direction, until wrench is seated on spanner socket (27).
- g. Install washer (25) and nut (26) on drive bar (22). Have helper release bar.
- h. Turn handle (24) counterclockwise to install upper nut (20.1). Torque nut to 145 foot-pounds. Check gap between inner bearing race (14) and liner (28) of blade (4). There shall be no gap over more than half of contact surfaces.

**NOTE**

No limit on gap depth.

**INSPECT**


- i. Remove nut (26), washer (25), torque wrench (T48) (23), spanner socket (27), pilot socket (21), and drive bar (22).

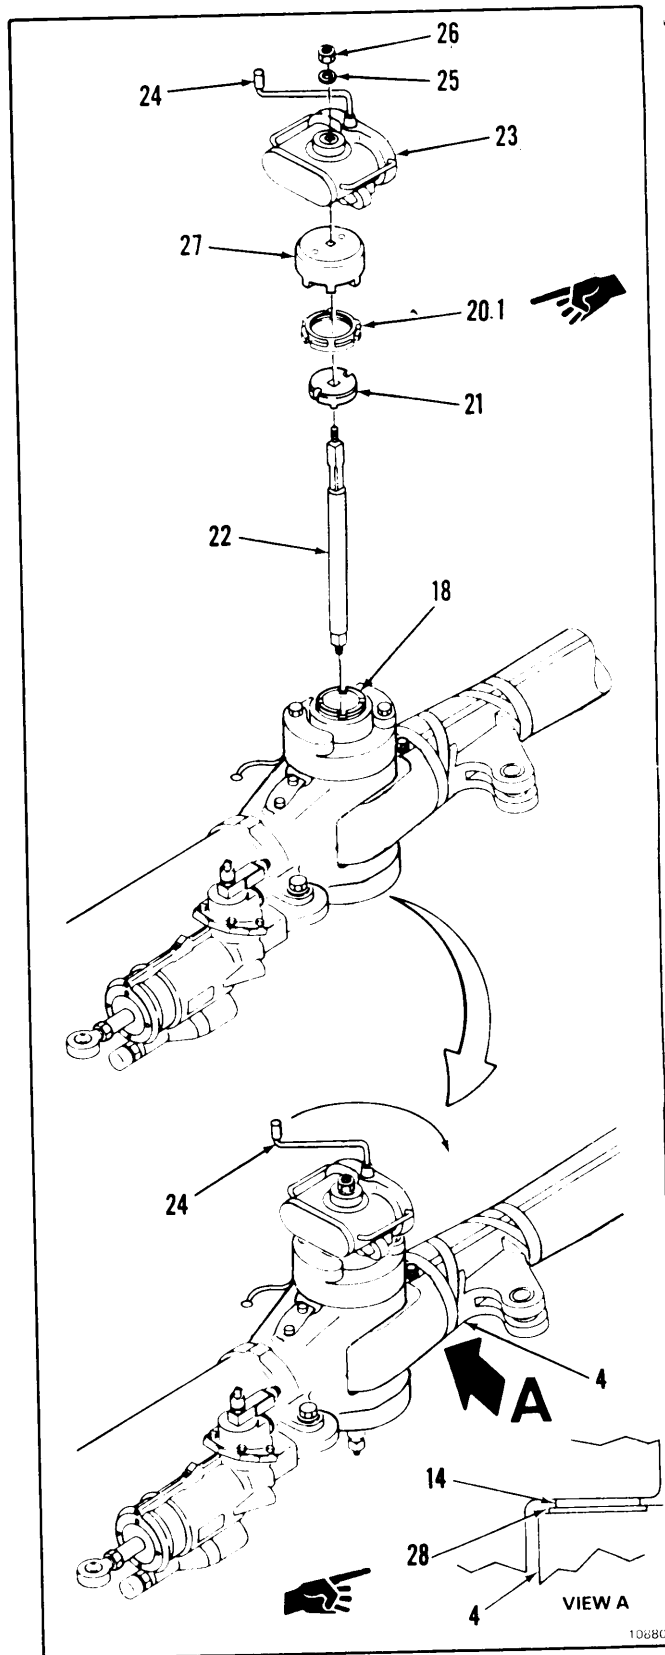

**5-84 INSTALL ROTARY-WING BLADE (Continued)****5-84**

14. Check nuts (20 and 20.1) for correct engagement with pin (18) as follows:
- Check that the end of the pin (18) protrudes a minimum of 0.05 inch beyond the face of the upper nut (20.1). This permits two threads submerged below the face of upper nut.
  - Check that the lower end of pin (18) protrudes a minimum of 0.22 inch beyond the face of the lower nut (20). This permits the first thread on the pin to be flush with the face of the lower nut.
  - If nut engagement in steps a. and b. is not within limits, replace pins or blades as required.

15. (Text Deleted)

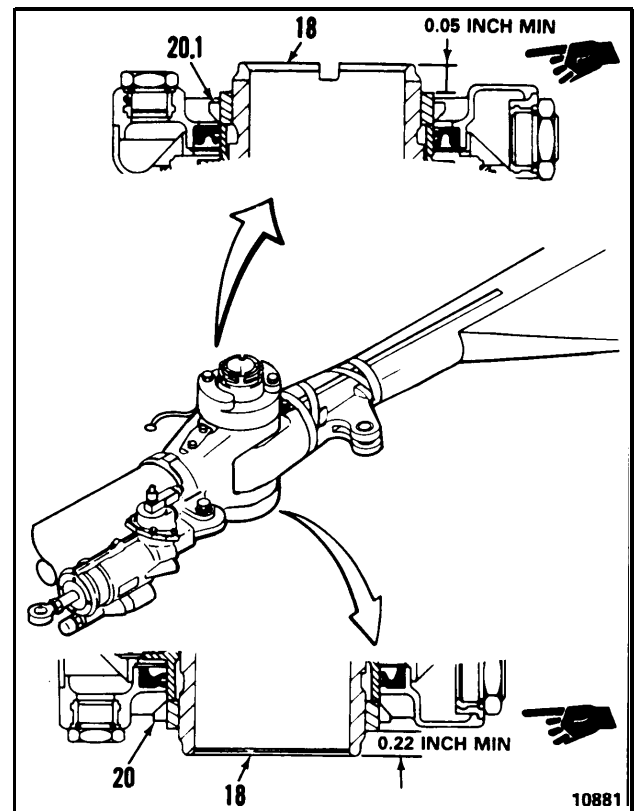


**GO TO NEXT PAGE**

**5-84 INSTALL ROTARY-WING BLADE (Continued)**

- 16. Lockwire two vertical pin nuts (20). Use lockwire (E231).
- 16.1. Check that there is a strip of tape (29.1) on each pitch housing lug (16) under jumper wire (30). If not, apply a 5-inch strip of tape (E395) on upper and lower lugs (16). Apply tape so that it will protect lugs from jumper wires when installed.
- 17. **Position two Jumper wires (30) on oil manifold tube (31). Install washers (32), and bolts (33). Torque bolts to 35 inch-pounds.**

**WARNING**


**Do not allow blade to swing. Blade can cause injury or damage to components.**

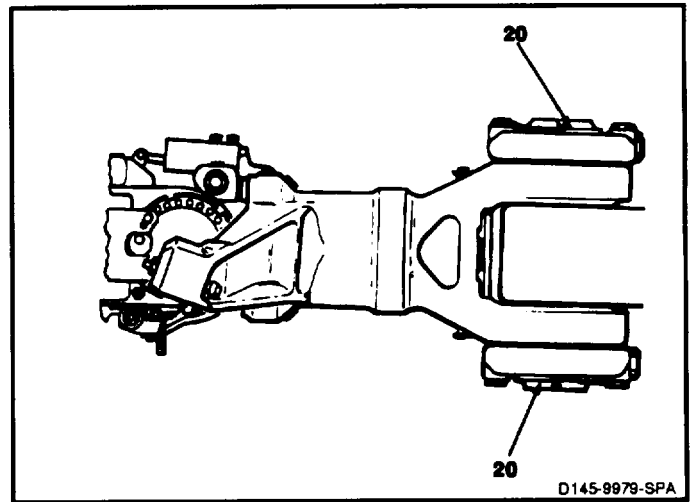


- 18. Connect shock absorber (34) as follows:
  - a. Position rod-end bearing (36) between blade lugs (35).
  - b. Deleted.
  - c. Install bolt (38).

**WARNING**

**If the bolt that attaches the shock absorber to the pitch varying housing was loosened during rotary wing removal, torque and safety the bolt in accordance with paragraph 5-93.**

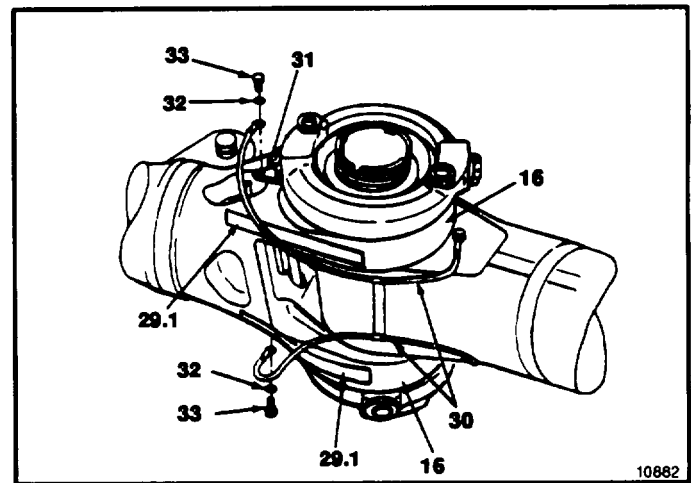

- d. Install nut (39). Torque nut to 60 to 100 foot-pounds. Install cotter pin (40).

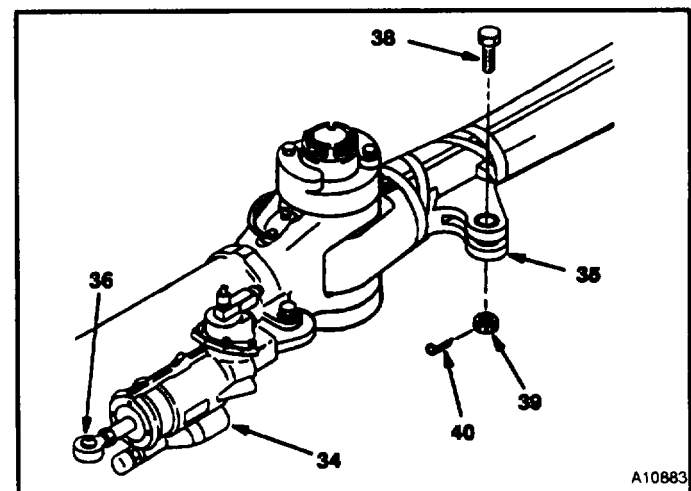

**GO TO NEXT PAGE**


**5-84 INSTALL ROTARY-WING BLADE (Continued)**

5-84


19. Pull release rope (8) under blade (4) to open clamp (9).
20. Pull two guide ropes (13) on sling (T35) (3) away from blade (4).
21. **Remove sling (T35) (3).** Remove hoist (5).

**INSPECT**

22. **Remove tiedown line (14)** from blade (4).

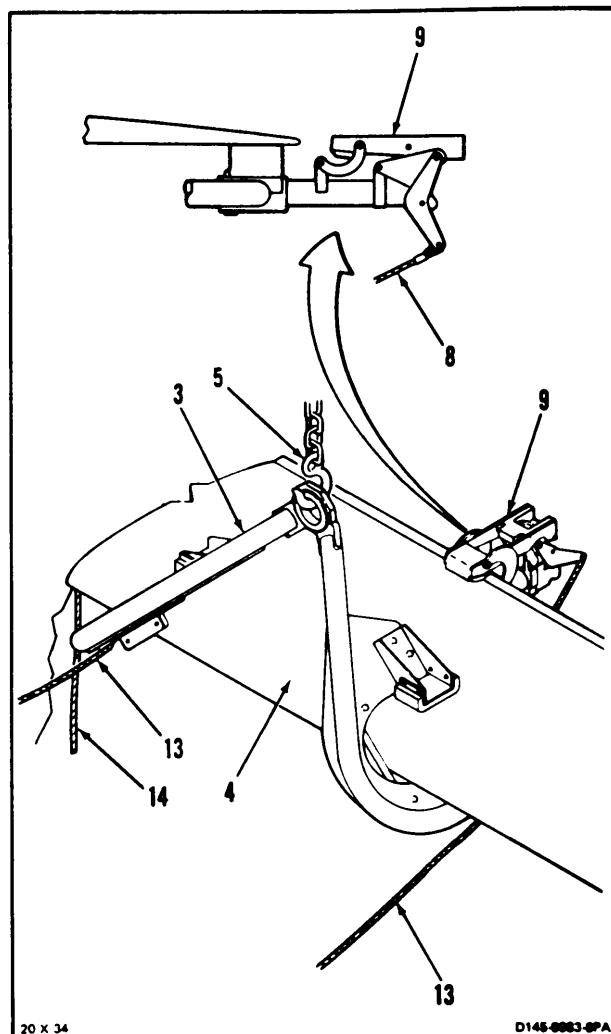**FOLLOW-ON MAINTENANCE:**

- Close work platforms (Task 2-2).
- Track rotor system (Task 5-140).
- Balance rotor system (Task 5-142).

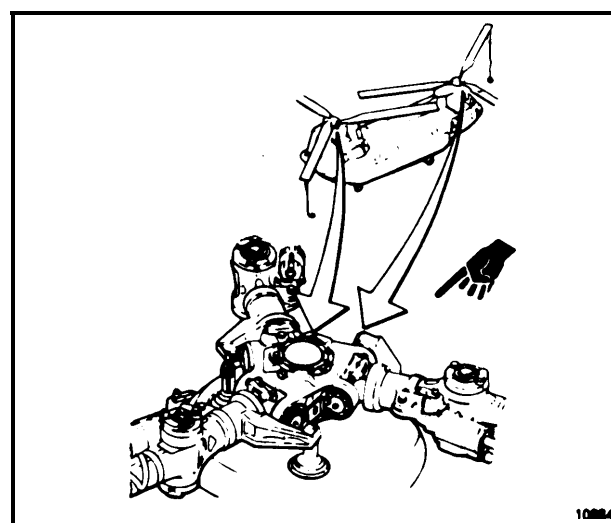**END OF TASK**



**5-85 CLEAN SHOCK ABSORBER PISTON**

5-85

**INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

None

**Materials:**

Hydraulic Fluid (E197)

Cloth (E120)

**Personnel Required:**

67U10 Medium Helicopter Repairer

**References:**


TM 55-1520-240-23P

**Equipment Condition:**

Battery Disconnected (Task 1-39)

Electrical Power Off

Hydraulic Power Off

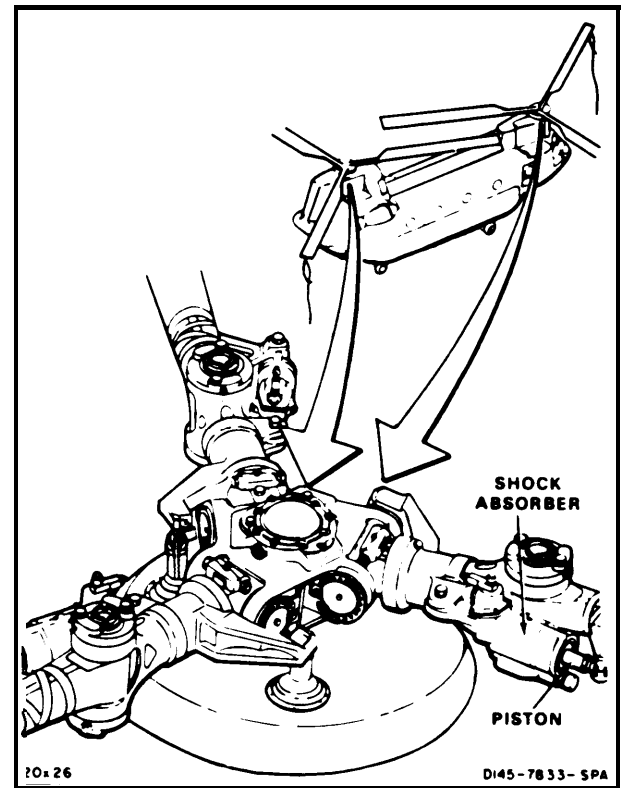One Forward and One Aft Blade Tied Down  
(Task 1-26)Pylon and Forward Work Platforms Open (Task  
2-2)**CAUTION**

Do not spill hydraulic fluid (E197) on paint or rubber parts. Paint or parts can be damaged.


**NOTE**

Procedure is same to clean any shock absorber piston. There are six shock absorber pistons.

1. Hold blade (1) in full lead position to extend shock absorber piston (2).
2. **Wipe shock absorber piston (2) clean.** Use cloth (E120) damp with hydraulic fluid (E197).

**FOLLOW-ON MAINTENANCE:**

None

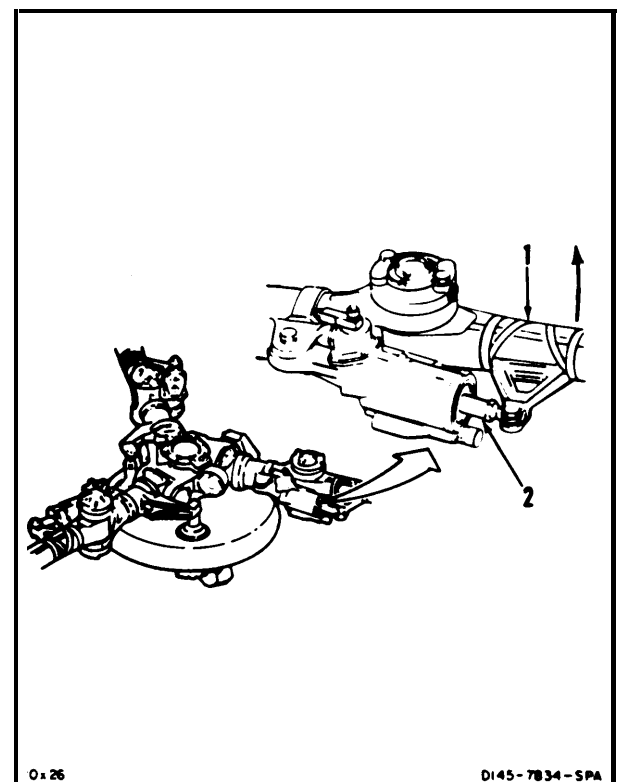**END OF TASK**

5-86 CLEAN SHOCK ABSORBER VENT VALVE FILTER

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692
- Torque Wrench, 5 to 50 Inch-Pounds
- Retaining Ring Pliers

**Materials:**

Lockwire (E231)

**Parts:**

Filter Disk

**Personnel Required:**


- 67U10 Medium Helicopter Repairer
- 67U30 Inspector

**References:**

TM 55-1520-240-23P

**Equipment Condition:**


- Battery Disconnected (Task 1-39)
- Electrical Power Off
- Hydraulic Power Off
- One Forward and One Aft Blade Tied Down  
(Task 1-26)
- Pylon and Forward Work Platforms Open (Task  
2-2)

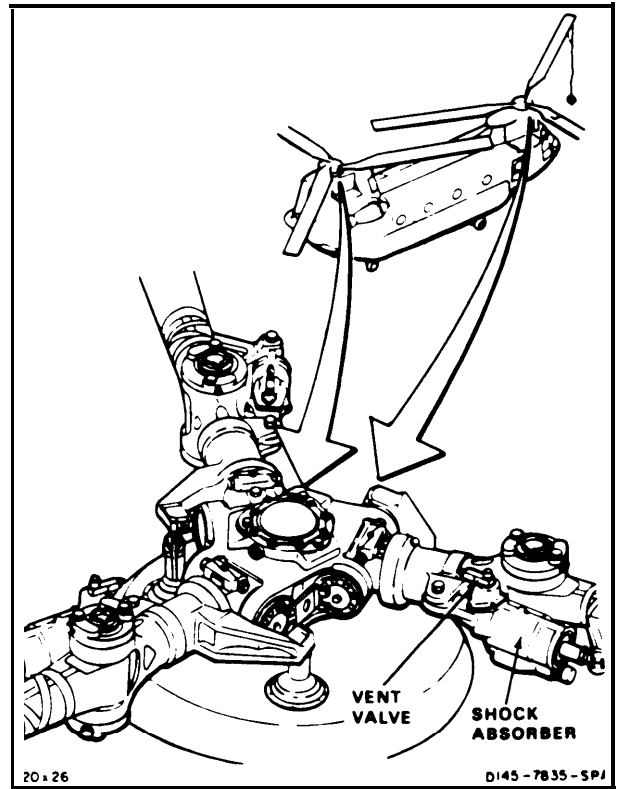

**NOTE**

Procedure is same to check any shock absorber vent valve filter. There are six shock absorber vent valve filters.

1. Remove lockwire from nut (1) on vent valve body (2). Prevent adjustment screw (3) from turning. Use screwdriver. **Remove nut.**
2. Remove cover bracket (4).

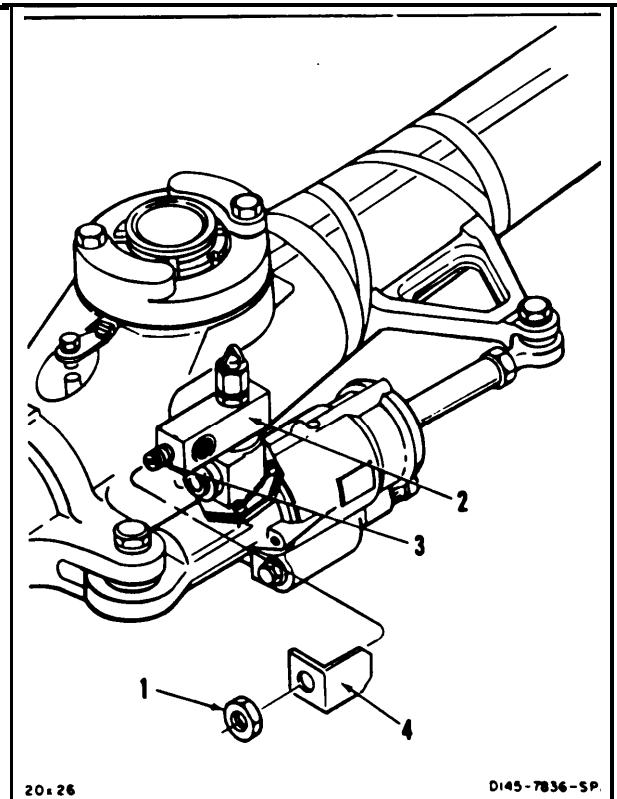

**GO TO NEXT PAGE**

## 5-86 CLEAN SHOCK ABSORBER VENT VALVE FILTER (Continued)


5-86

3. Remove retaining ring (5). Use retaining ring pliers. Remove spacer (6) and filter element (7).
4. Have filter element (7) cleaned ultrasonically.


### NOTE

If ultrasonic equipment is not available, filter element must be replaced

5. Check element (7) for damage. There shall be no damage.

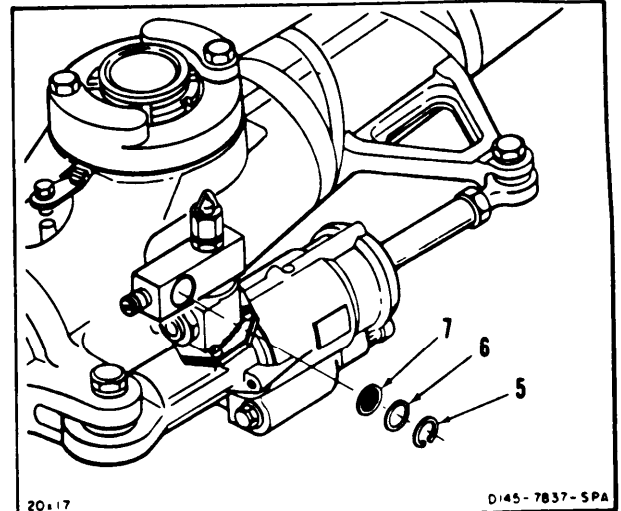

6. Install element (7) and washer (6). Install retaining ring (5). Use retaining ring pliers.
7. Install cover bracket (4). Start nut (1) on adjustment screw (3) by hand. Prevent adjustment screw from turning. Use screwdriver. Torque nut to 25 inch-pounds.

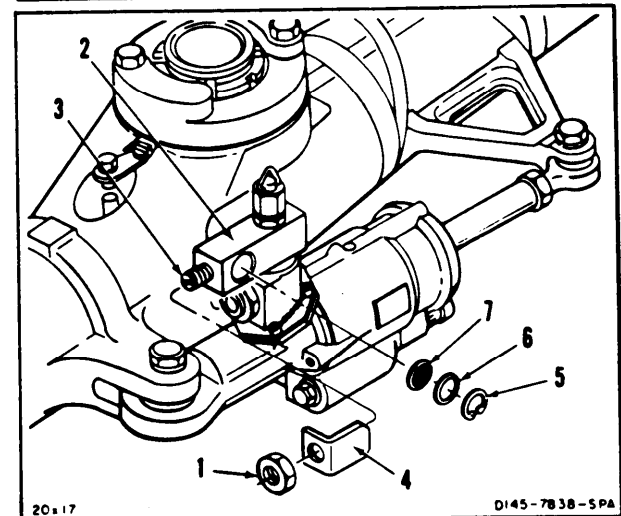


8. Install lockwire (E231) from screw (3) to nut (1) and body (2).

### INSPECT

#### FOLLOW-ON MAINTENANCE:

Close work platforms (Task 2-2).

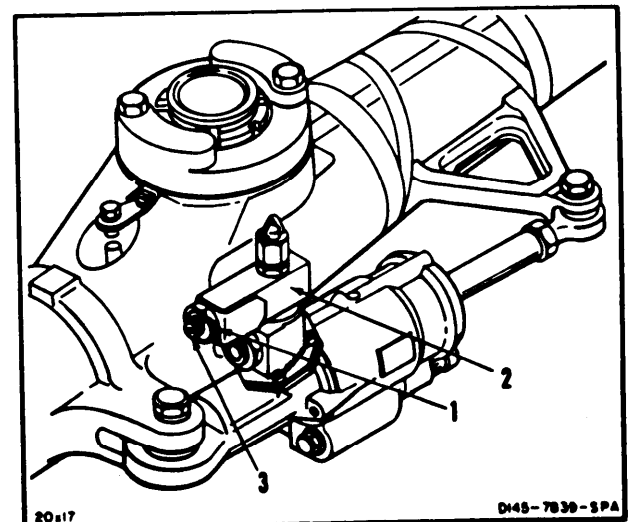

END OF TASK

5-323



INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Aircraft Mechanic Tool Kit,  
NSN 5180-00-323-4692
- Hoist
- Rope Guidelines
- Torque Wrench, 5 to 50 Inch-Pounds
- Rotary-Wing Blade Sling (T35)

**Materials:**


None

**Personnel Required:**

- Medium Helicopter Repairer (2)

**Equipment Condition:**

- Battery Disconnected (Task 1-39)
- Electrical Power Off
- Hydraulic Power Off
- Tiedown Lines Attached to Three Rotary-Wing Blades (Task 1-26)
- Work Platforms Open (Task 2-2)

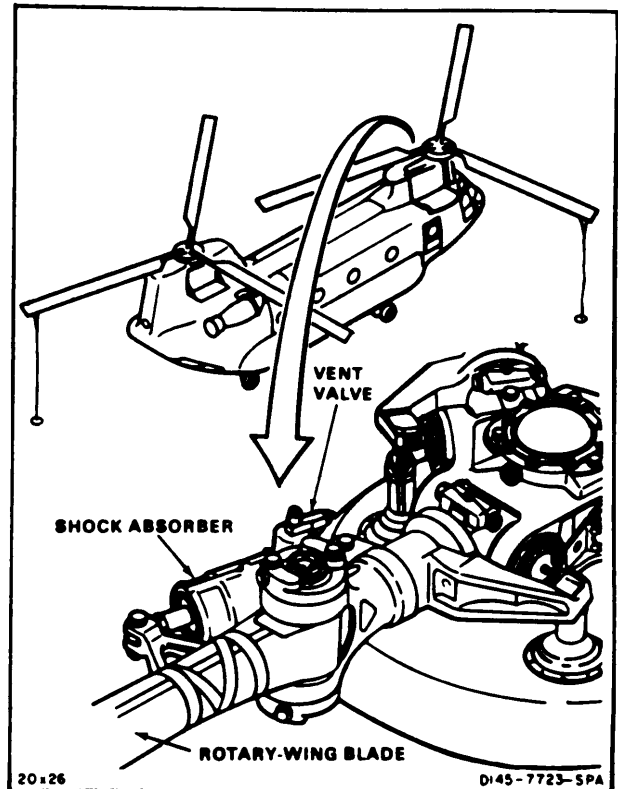


**WARNING**

Do not allow blade to swing. Blade can cause injury or damage to components.

**NOTE**

- Positive retention bolts are installed in shock absorber bearings. They have a pawl which prevents nut or bolt removal unless the pawl is depressed.
- Procedure is same to remove any shock absorber. There are six shock absorbers.


1. Position rotary-wing blade (1) to allow easy access from forward or aft work platform (2). Tie down one forward blade (3) and one aft blade (4).
2. Tie blade (1) to two landing gear shackles (5).

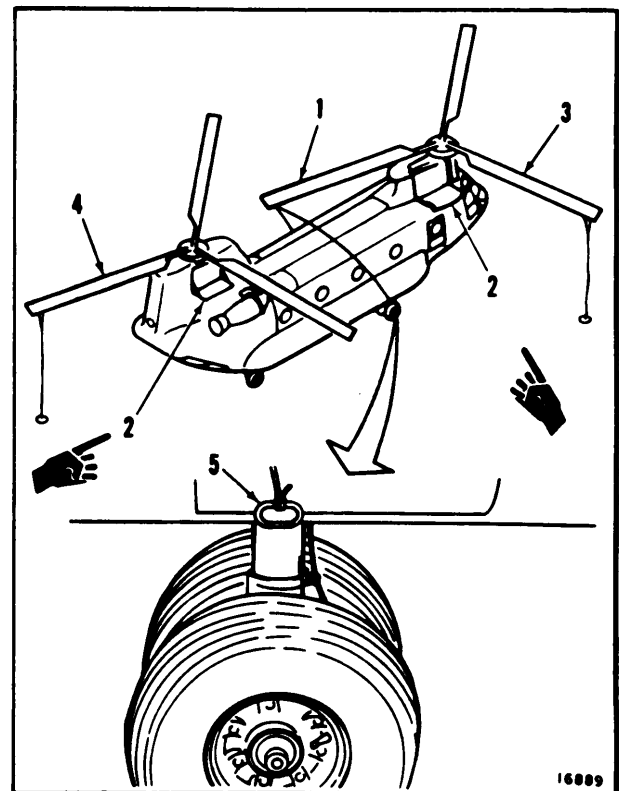

**5-87 REMOVE SHOCK ABSORBER (Continued)****NOTE**

Vent valve is opened for operation at temperatures of 0°F (-18°C) or lower.

3. Check vent valve (6) is closed as follows:
  - a. Remove lockwire. Loosen nut (7) on adjustment screw (8).
  - b. Tighten screw (8) clockwise. **Torque screw to 30 inch-pounds.**
  - c. **Torque nut (7) to 25 inch-pounds.** Lockwire nut to screw (8). Use lockwire (E231).

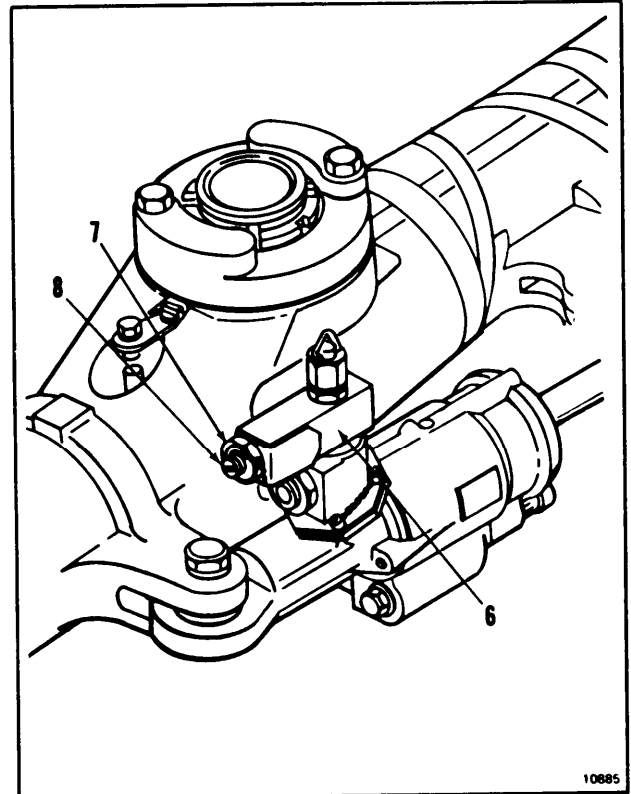**DISCONNECT SHOCK ABSORBER FROM BLADE**


4. Remove cotter pin (9) and nut (10) from self-retaining bolt (11) at outboard lugs (12).

**CAUTION**

Do not remove bolt without supporting blade. Damage to blade can occur.

**CAUTION**

Do not use excessive force on bolt that is binding. Damage to bolt, lugs, or rod-end bearing can occur.

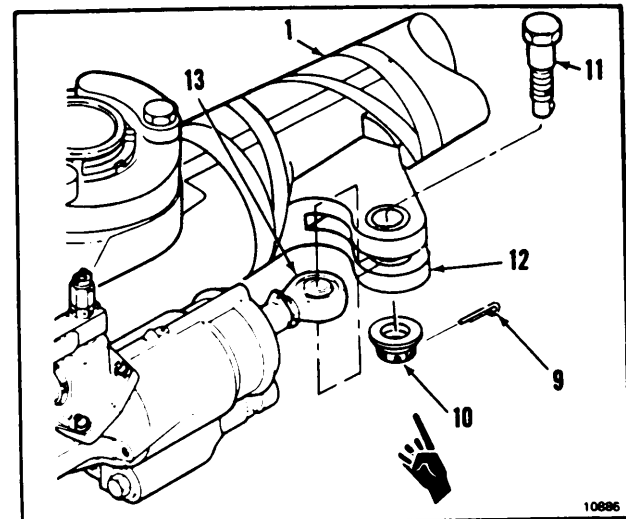

- 4.1. **Support blade (1).** Use sling (T35).
5. Have helper hold blade (1). **Remove bolt (11)** from lugs (12). If bolt binds, have helper move blade slightly in lead or lag direction.
6. **Remove rod-end bearing (13) from lugs (12).**
7. Install bolt (11) and nut (10) in lugs (12). Do not torque at this time.

**GO TO NEXT PAGE**

## 5-87 REMOVE SHOCK ABSORBER (Continued)

5-87

**REMOVE ABSORBER WITHOUT 50**  
NOTE

Keep blade supported in sling while shock absorber is removed.

8. Have helper support shock absorber (15). Remove cotter pin (16), nut (17), washer (18), washer (19), and bolt (20). **Remove shock absorber** and two Teflon washers (21).
9. Install bolt (20), washer (19), washer (18), and nut (17) in pitch housing lugs (22). Do not torque at this time.

**REMOVE ABSORBER WITH NOTE 50**

## NOTE

- Keep blade supported in sling while shock absorber is removed.
- Use care when removing shock absorber from inboard lugs, bushings may be loose and fall from lugs.

10. Have helper support shock absorber (15). Remove cotter pin (16), nut (17), washer (18) and bolt (20). **Remove shock absorber.**



## NOTE

Verify that bushings are in place before bolts are installed.

11. Install bolt (20), washer (18) and nut (17) in pitch housing lugs (22). Do not torque at this time.

**INSPECT****FOLLOW-ON MAINTENANCE:**

None

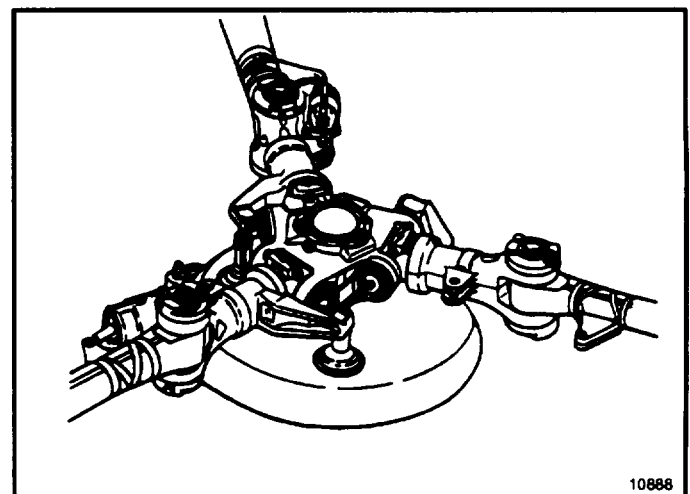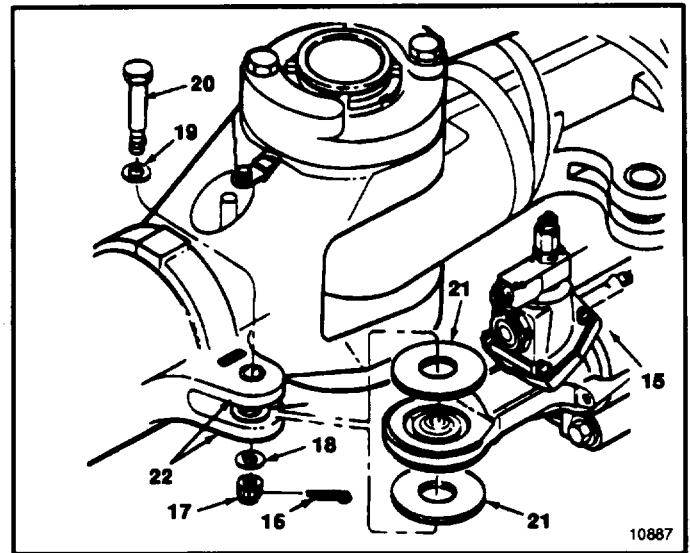

END OF TASK

5-326 Change 34

**5-87.1 INSPECT SHOCK ABSORBER WITH TEFLON BEARINGS**

5-87.1

## INITIAL SETUP

**Applicable Configurations:**Without **45****Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Rope Guidelines  
Dial Indicator, 0 to 0.030 Inch, NSN 5210-00-  
277-8840  
C-Clamp  
Micrometer

**Materials:**

None

**Personnel Required:**

Medium Helicopter Repairer  
Inspector

**References:**

Task 5-87 Task 5-93  
Task 1-58 Task 5-89  
Task 5-88 Task 5-90

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Tiedown Lines Attached to Three Rotary-Wing  
Blades (Task 1-26)  
Work Platforms Open (Task 2-2)



**WARNING**

**Do not allow blade to swing. Blade can cause injury or damage to components.**

**NOTE**

- Positive retention bolts are installed in shock absorber bearings. They have a pawl which prevents nut or bolt removal unless the pawl is depressed.
- Procedure is same to inspect any shock absorber. There are six shock absorbers.

1. **Position rotary-wing blade (1) over fuselage (2).** Have helper hold blade in position.
  - 1.1. Check for oil leakage. Static leakage at any location shall not exceed a slight wetting. Leakage shall be less than one drop. If more, replace shock absorber (Tasks 5-87 and 5-93). Perform operational leakage inspection (Task 1-58).

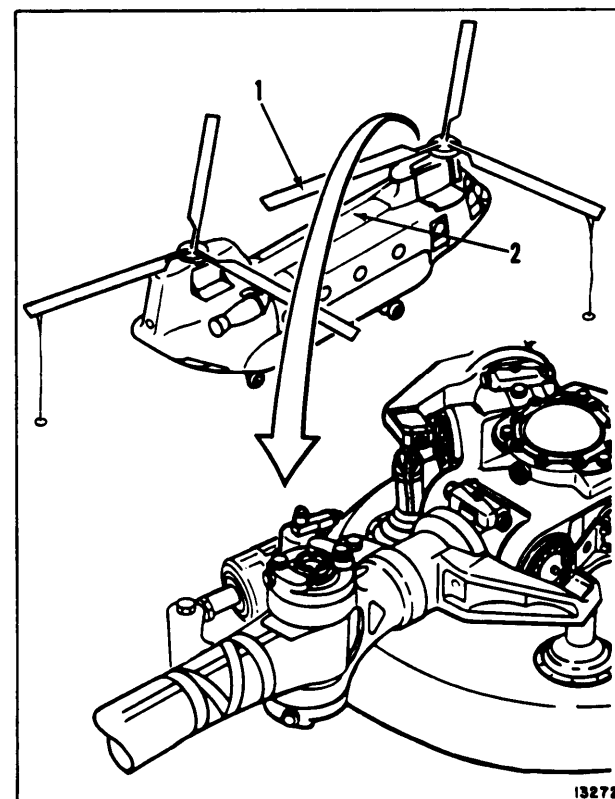
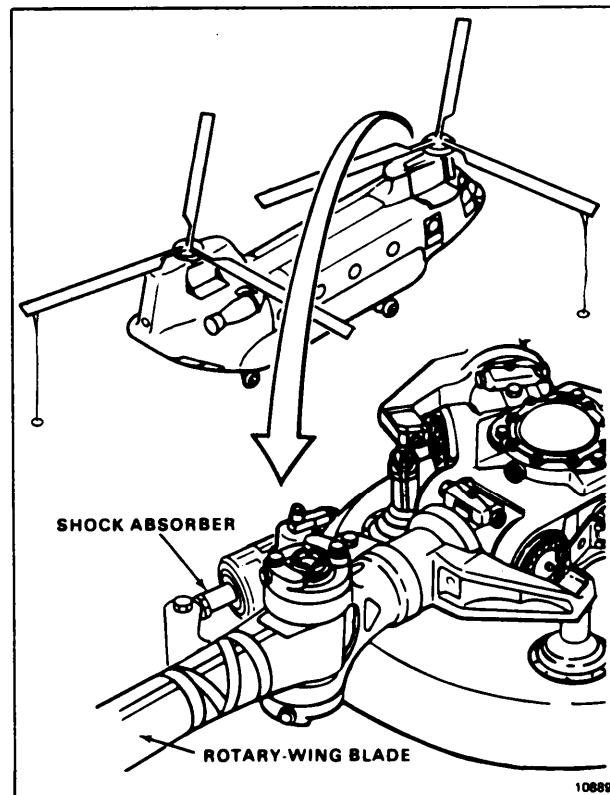
**GO TO NEXT PAGE**

2. Mount dial indicator (3) on outboard bracket (4). Position Indicator plunger (5) against outboard end of rod end (6), at mid-stroke of plunger. Align with rod end axis.
3. Record Indicator (3) reading.
4. Have helper apply force to tip of blade (1) at leading edge (7). Blade should just move. Record Indicator (3) reading A.
5. Have helper apply force to tip of blade (1) at trailing edge (8). Blade should just move. Record indicator (3) reading B.
6. Subtract reading B of step 5, from reading A of step 4. Result must not be more than 0.010 Inch. If not more, go to step 12. If more, do steps 7 thru 11 then go to step 12.

**NOTE**

A gap between top of bracket (4) and flange of bushing (8.1) is allowed. Bushing may contact bolt head. If inspection steps 2 through 6 are within limits bushing may rotate during operations.

7. Disconnect shock absorber (9) at outboard bracket (4) (Task 587).
8. Check bolt (10) for wear. Bolt bushing (11) shall be smooth with no radial wear marks. Measure diameter of bushing at several places. Use a micrometer. Minimum diameter of bushing shall be 1.090 inch.
9. Install bolt (10) in bracket (4). Position Indicator plunger (5) against shank of bolt (10). Align with bolt axis. Use plunger with flat end (12).
10. Check bolt (10) movement Attempt to move bolt toward, then away from plunger (5). Movement shall not be more than 0.0015 Inch.
11. If results from steps 9 and 10 are not cause of excess movement, replace rod end (6) (Task 5-88).

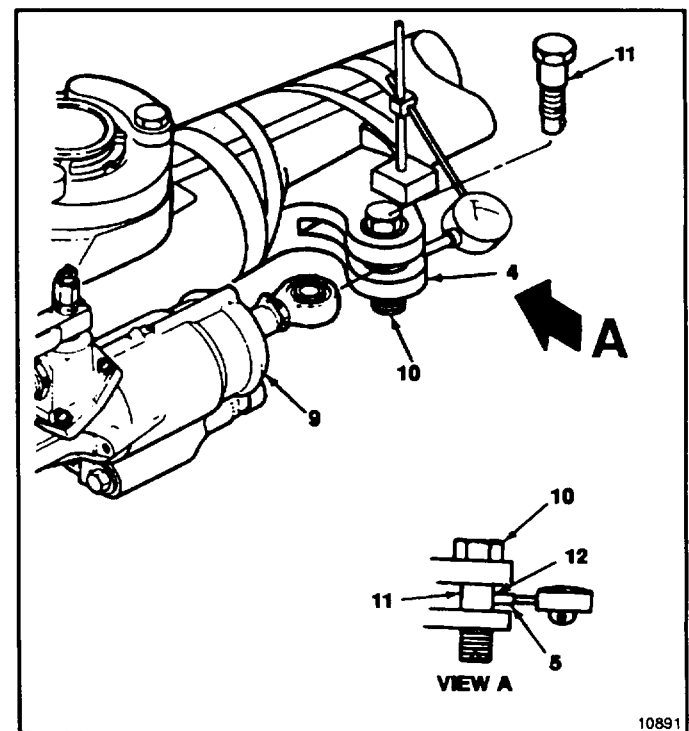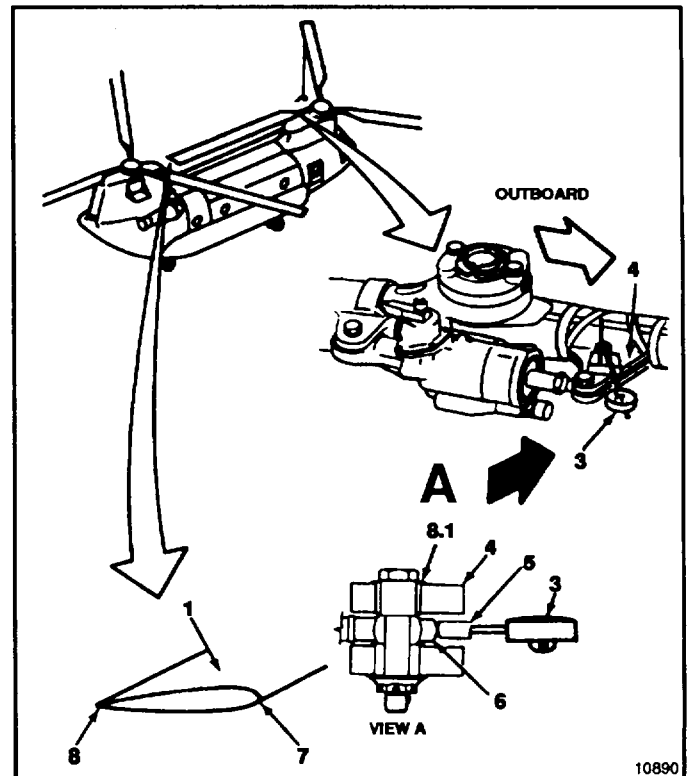


GO TO NEXT PAGE

5-326.2 Change 34


## 5-87.1 INSPECT SHOCK ABSORBER (Continued)

5-87.1

12. Connect shock absorber (9) at bracket (4) (Task 5-93).
13. Mount indicator (3) on inboard lug (10). Position indicator plunger (5) against inboard end (13) of absorber (9), at mid-stroke of plunger. Align with absorber axis.
14. Record indicator (3) reading.
15. Have helper apply force to tip of blade (1) at leading edge (7). Blade should just move. Record indicator (3) reading C.
16. Have helper apply force to tip of blade (1) at trailing edge (8). Blade should just move. Record indicator reading D.
17. Subtract reading D of step 16 from reading C of step 15. Result must not be more than 0.010 inch. If not more, go to step 23. If more, do steps 18 thru 22, then go to step 23.

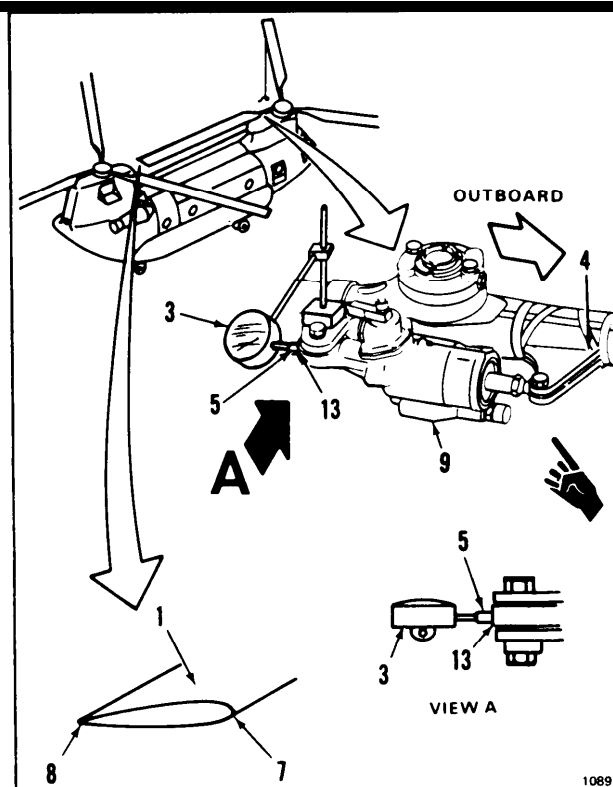

18. Disconnect absorber (9) at unboard lug (10) (Task 5-87).
19. Check bolt (14) for wear. Bolt shank (15) shall be smooth, with no radial wear marks.
20. Install bolt (14) in lug (10). Position indicator plunger (5) against bolt shank (15). Align with bolt axis. Use plunger with flat end (12).
21. Check bolt (14) movement. Attempt to move bolt toward, then away from plunger (5). Movement shall not be more than 0.0015 inch.
22. If results from steps 19 and 21 are not cause of excess movement, replace absorber inboard bearing (16) (Tasks 5-89.2).
23. Connect shock absorber (9) at inboard lug (10) (Task 5-93).

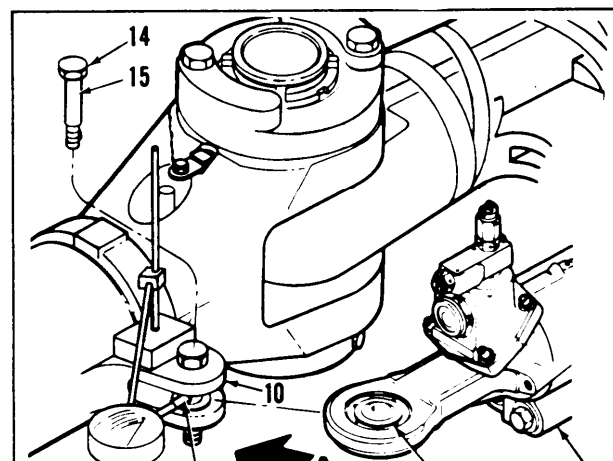


GO TO NEXT PAGE

FOLLOW-ON MAINTENANCE:

Remove tiedown lines from blades (Task 1-26).

Close work platforms (Task 2-2).

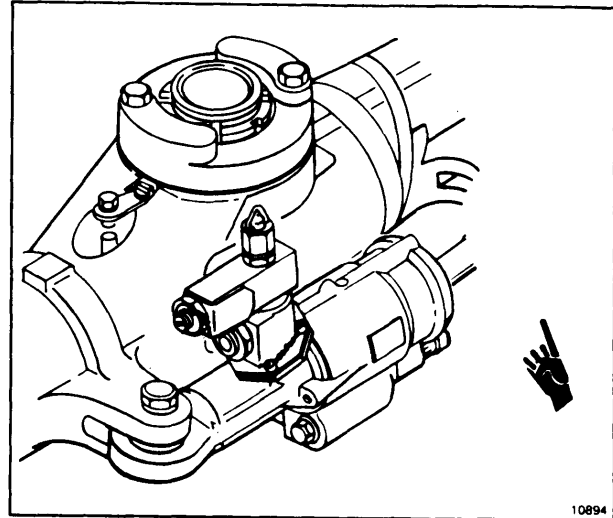

**5-87.2 INSPECT SHOCK ABSORBER WITH ELASTOMERIC BEARINGS****5-87.2****INITIAL SETUP****Applicable Configurations:**With **45****Tools:**

Aircraft Mechanic Tool Kit,  
NSN 5180-00-323-4692  
Rope Guidelines  
Dial Indicator, 0 to 0.030 Inch,  
NSN 5210-00-277-8840  
C-Clamp  
Micrometer, 0 to 1 Inch

**Materials:**

None

**Personnel Required:**


Medium Helicopter Repairer  
Inspector

**References:**

Task 1-58	Task 1-92
Task 5-87	Task 5-88
Task 5-89	Task 5-9
Task 5-90	

**Equipment Condition:**


Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Tiedown Lines Attached to Three Rotor Blades  
(Task 1-26)  
Work Platforms Open (Task 2-2)

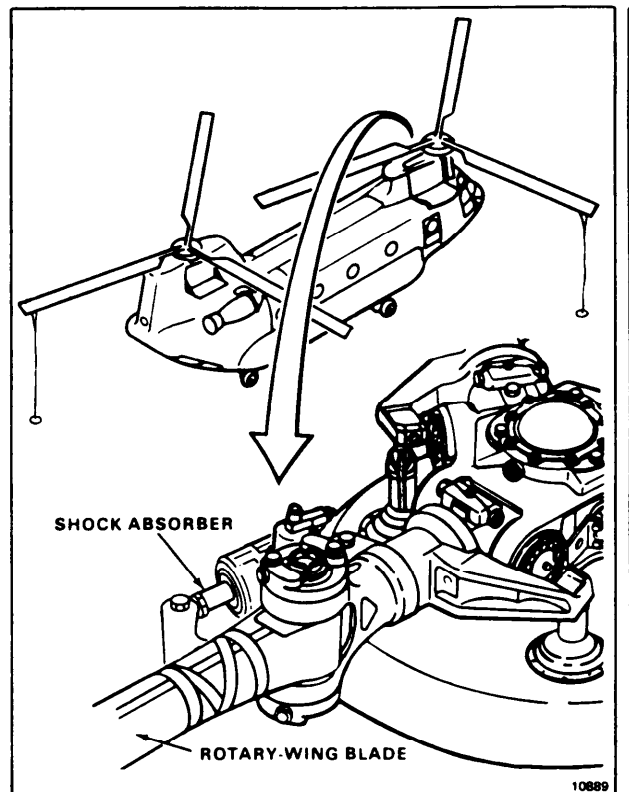**WARNING**

**Do not allow blade to swing. Blade can cause injury or damage to components.**

**NOTE**

- Positive retention bolts are installed in shock absorber bearings. They have a pawl which prevents nut or bolt removal unless the pawl is depressed.
  - Procedure is same to inspect any shock absorber. There are six shock absorbers.
1. **Position rotor blade (1) over fuselage (2).** Have helper hold blade in position.
  2. Check for oil leakage. Static leakage at any location shall not exceed a slight wetting. Leakage shall be less than one drop. If more, replace shock absorber (Tasks 5-87 and 5-93). Perform operational leakage inspection (Task 1-58).

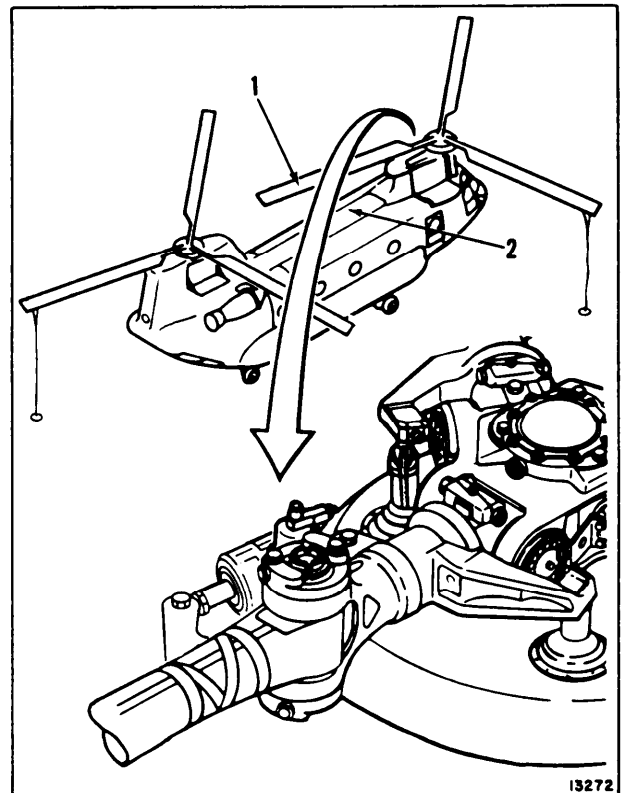**GO TO NEXT PAGE**



3. Remove nut (2) and bolt (3) securing shock absorber (5) to bracket (6) (Task 5-87).
4. Remove shock absorber rod end bearing (4) from bracket (6). It may be helpful to have helper push on trailing edge of the affected blade to extract rod end from bracket (6).

**NOTE**

The elastomeric bearing is bonded to the shock absorber outboard rod end. If the bearing is found to be unacceptable, replace the entire rod end.

5. Inspect the elastomeric rod end bearing (4) as follows:
  - a. Try to rotate ball (7) by hand. **If the ball rotates**, it indicates complete unbending. **Reject the bearing.**

**NOTE**


- If shim is covered by elastomeric material, the bearing is acceptable.
  - Evidence of dust-like particles of elastomeric material or evidence of small particles breaking away from the surface of the elastomeric material are **not** causes for rejection.
- b. Check if shim (8) is visible. If it protrudes above elastomeric material (9), reject the bearing if any of the following conditions exist:
    - (1) **Protrusion** of shim above plane of bearing housing (10).
    - (2) **Unbonding of shim** from elastomeric material.

**NOTE**

On certain bearings, shims are installed in two pieces. A split between the shim halves is normal.


- (3) **Broken shim.** Check with a feeler gauge or similar tool.

6. Replace rod end if found unacceptable (Tasks 5-88 and 5-89) and **adjust rod end length** (Task 5-90). Go to step 8.
7. If bearing is acceptable, reconnect rod end to blade. Go to step 12.

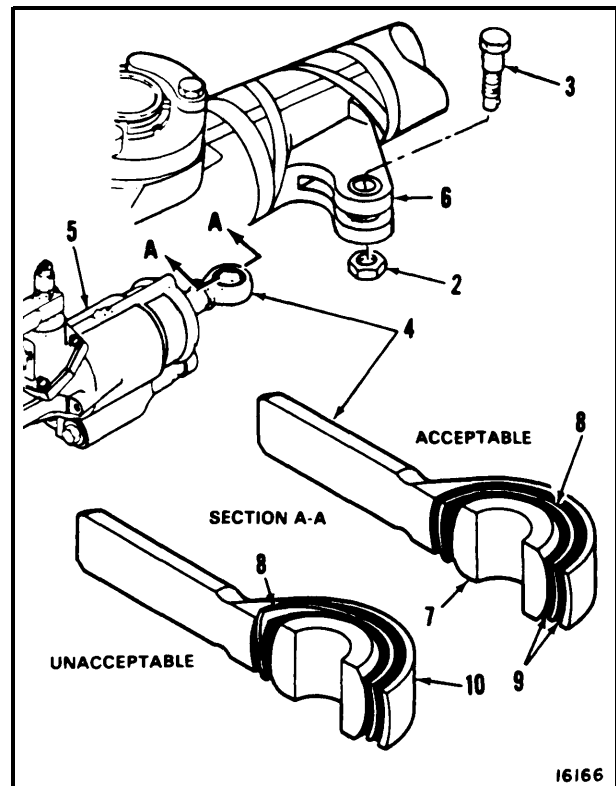

**5-87.2 INSPECT SHOCK ABSORBER WITH ELASTOMERIC BEARINGS**  
**(Continued)**

8. With shock absorber rod end (4) free of bracket (6), **check bolt (3) for wear**. Bolt shank (7) shall be smooth with no wear. Measure diameter of bushing at several places. Use a micrometer. Minimum diameter of bushing shall be 1.090 inch.
9. **Install bolt (3) in bracket (6)**. Position indicator plunger (13) against bolt shank (7). Align with bolt axis. Use plunger with flat end (14).
10. **Check bolt (3) movement**. Attempt to move bolt toward, then away from plunger (13). **Movement shall not be more than 0.0015 inch**.
11. **Replace bolt (3) and/or bushings in bracket (6) if excessive play is detected, and reinstall shock absorber**.

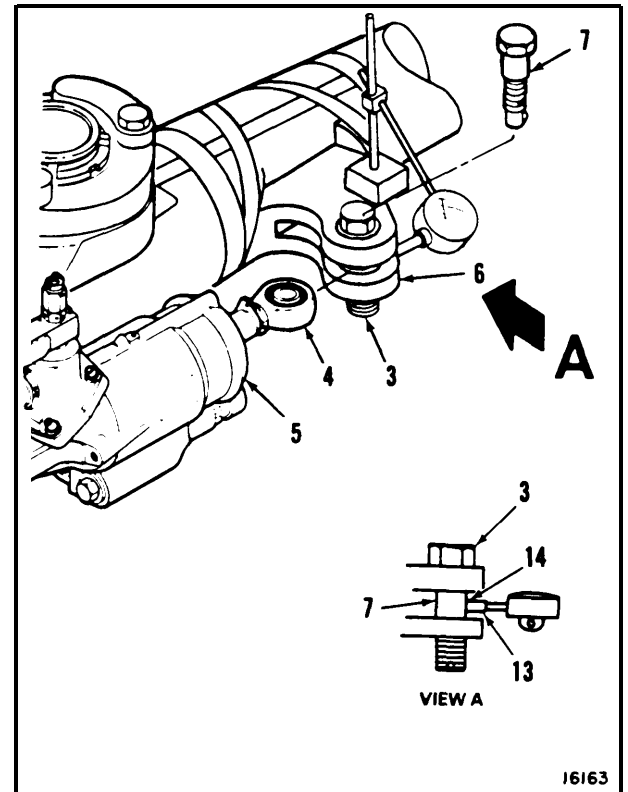


12. **Disconnect shock absorber (5) at in-board bracket (16)** (Task 5-87). It may be helpful to have helper push on trailing edge of blade to help extract shock absorber (5) from bracket (16).

**NOTE**

The elastomeric bearing (18) in the in-board arm of the shock absorber (17) is a shrink fit and is replaceable with the shock absorber off the aircraft.

13. Inspect the elastomeric bearing (18) and reject it if any of the following conditions exist:
  - a. Evidence of shim displacement on distortion (19) with raising of elastomer (20).
  - b. Permanent offset (21) of inner bushing.
  - c. Loss of elastomer material exceeding 20 percent of the bearing thickness.
  - d. Separation of inner race and elastomeric (inner race turns by hand with elastomeric).

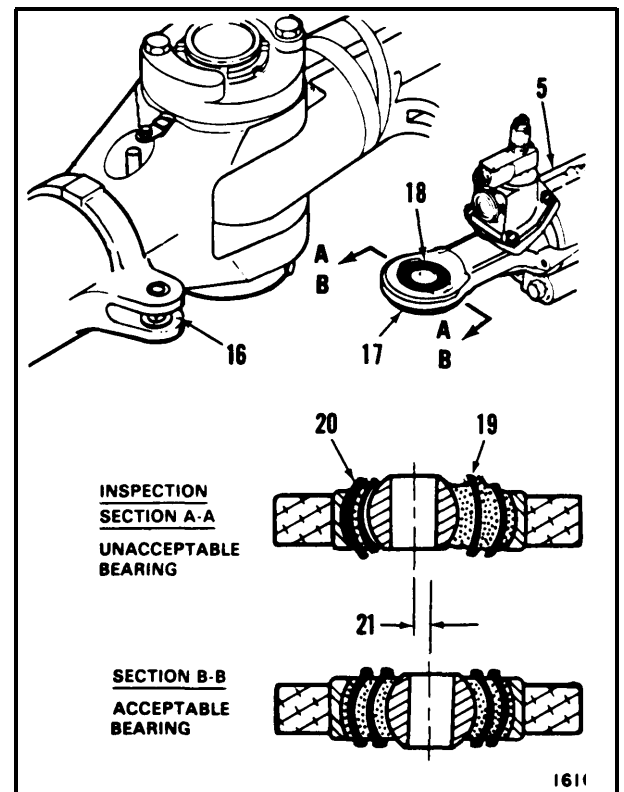

**GO TO NEXT PAGE**



**NOTE**

Evidence of small or dust-like elastomer particles breaking away from the surfaces of the bearing are not cause for rejection.

14. If bearing fails inspection, replace shock absorber (Task 5-93). Go to step 16.
15. If bearing is acceptable, reconnect shock absorber to bracket (16) (Task 5-93).
16. If the inboard bearing fails inspection, check bolt (15) for wear. Bolt shank (22) shall be smooth with no radial wear marks.
17. Install bolt (15) in bracket (16). Position dial indicator plunger (23) against bolt shank (22). Align with bolt axis and use plunger with flat end (24).
18. Check bolt (15) movement. Attempt to move bolt toward, then away from plunger (23). Movement shall not be more than 0.0015 inch.
19. Replace bolt if movement is more than 0.0015 inch.
20. Replace rotor head if after replacing bolt movement is more than 0.0015 inch (Task 5-9).
21. Replace rotor head if bushing is loose (Task 5-9).

**FOLLOW-ON MAINTENANCE**

Remove tiedown lines from blades (Task 1-26).  
Close work platforms (Task 2-2).

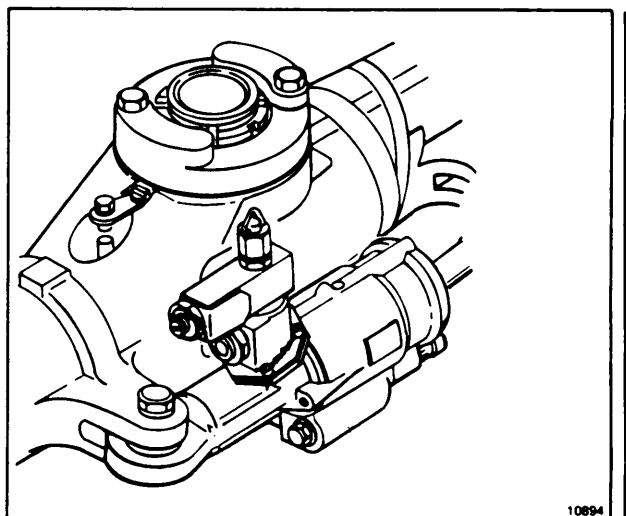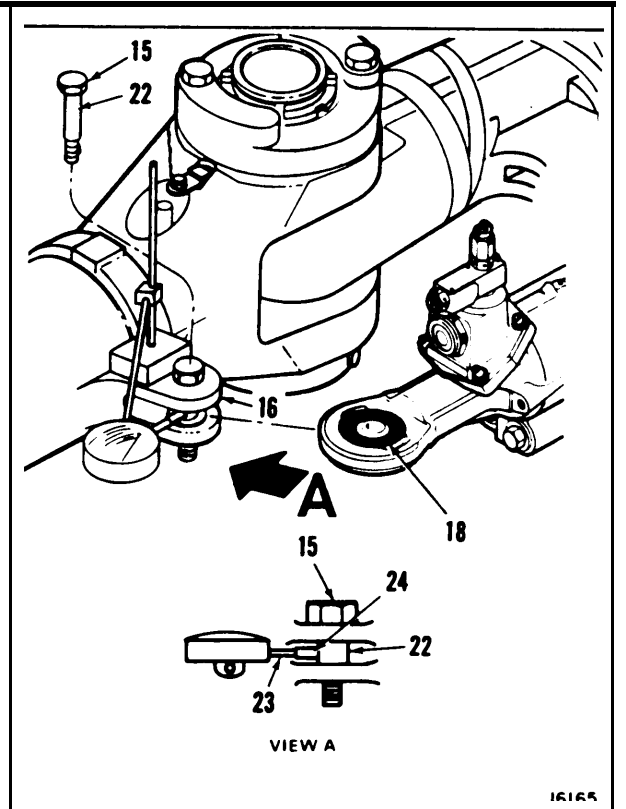**END OF TASK**

5-326.8 Change 25

**5-88 REMOVE SHOCK ABSORBER ROD-END****5-88**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Wrench 1 5/16-inch

**Materials:**


None

**Personnel Required:**

■ Medium Helicopter Repairer

**Equipment Condition:**


Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Forward or Aft Work Platform Open (Task 2-2)  
Shock Absorber Disconnected (Task 5-87)

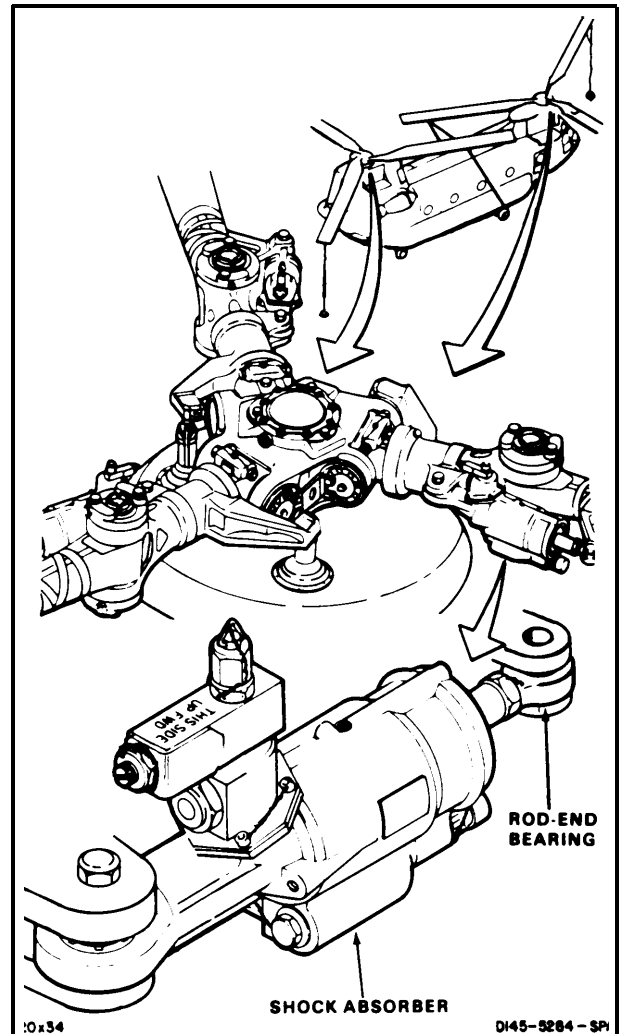**GO TO NEXT PAGE**


**NOTE**

Procedure is same to remove rod end from any shock absorber. Forward rotary-wing head shock absorber is shown here.

- 1 Remove lockwire from rod end nut (1). **Loosen nut. Move locking washer (2) away from notch (3) in piston (4).**

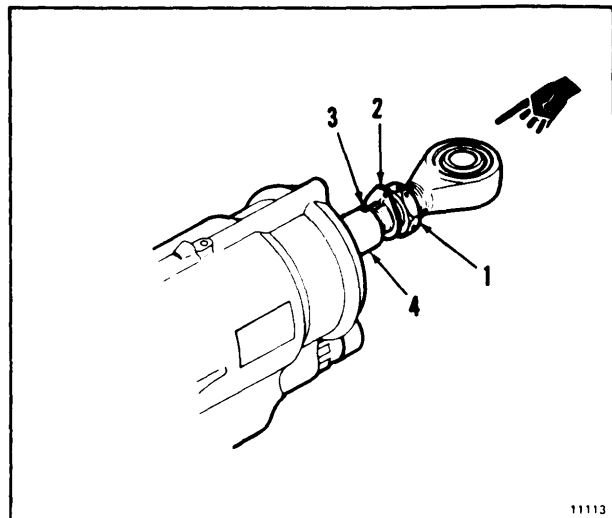

2. Remove rod end (5).
3. Remove locking washer (2) and nut (1).

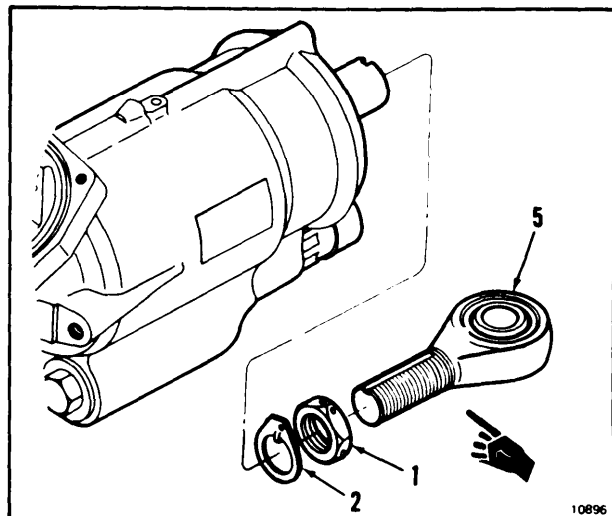**FOLLOW-ON MAINTENANCE:**

None

**5-88.1 REMOVE SHOCK ABSORBER ROD END BEARING (AVIM)**

5-88.1

INITIAL SETUP

**Applicable Configurations:**

Without 45

**Tools:**

Arbor Press  
Pusher (Appx E-41)

**Materials:**

None

**Personnel Required:**


Medium Helicopter Repairer

**References:**

Appendix E  
TM 55-1500-322-24

**Equipment Condition:**

Off Helicopter Task

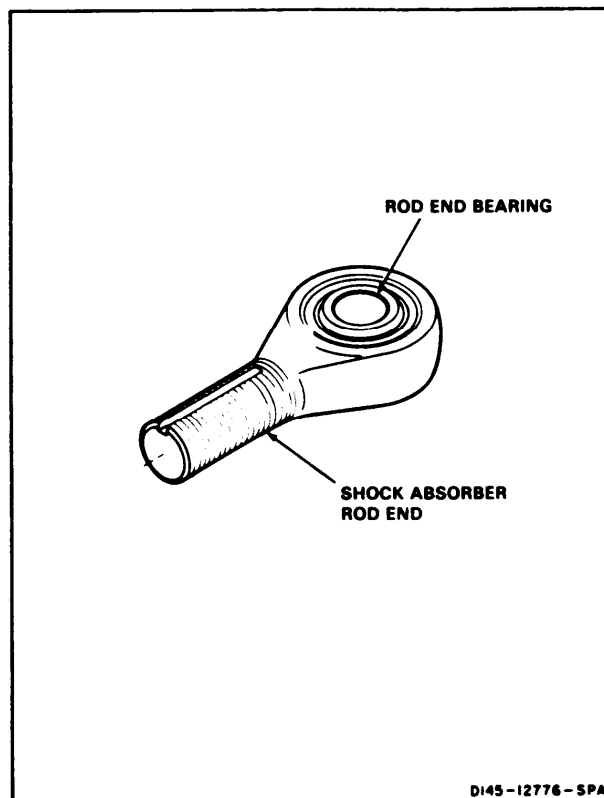


D145-12776-SPA

**Remove bearing (1)** from rod end (2). Use arbor press and adapter (Appx E-41) (TM 55-1500-322-24).

**FOLLOW-ON MAINTENANCE:**

None

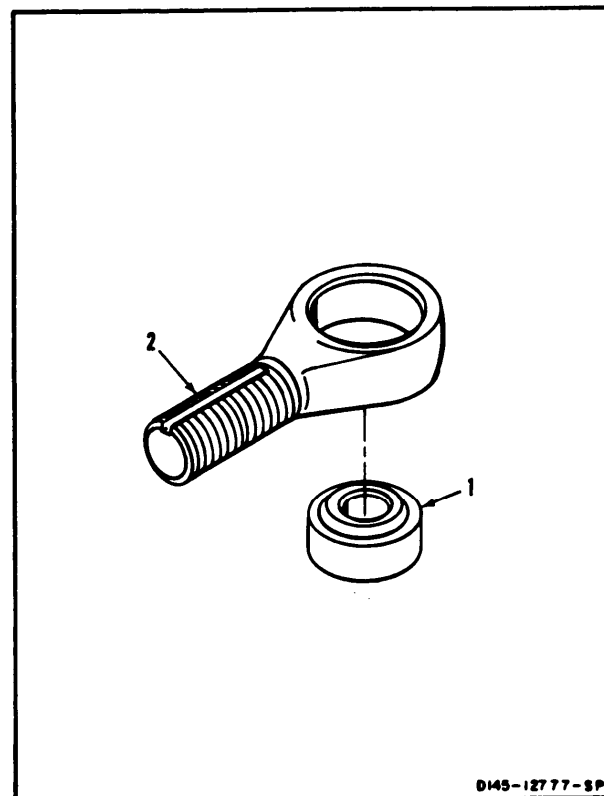

D145-12777-SPA

**END OF TASK**

## INITIAL SETUP

**Applicable Configurations:**Without **45****Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114  
Arbor Press  
Pusher (Appx E-41)  
Styrofoam Container or Equivalent  
Vise, Soft Jaws  
Dial Indicating Scale, 0 to 100 Pounds  
Torque Wrench, 0 to 150 Inch-Pounds

**Materials:**

Gloves (E187)  
Solvent (E162)  
Cloths (E120)  
Kevlar Gloves (E186)  
Dry Ice (E92)  
Methanol (E243)  
Liquid Nitrogen (E247) (Alternate Coolant)

**Personnel Required:**

Medium Helicopter Repairer  
Inspector

**References:**


TM 55-1500-322-24  
TM 55-1520-240-23P

**General Safety Instructions:****WARNING**

Carbon dioxide (dry ice) (E92) in methanol (E243) is flammable, causes severe burns (frost bite), and gives off toxic fumes. Use only in well-ventilated area, away from heat and open flame. Do not get in eyes, on skin, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**

Liquid nitrogen (E247) causes severe burns (frost bite). Do not get

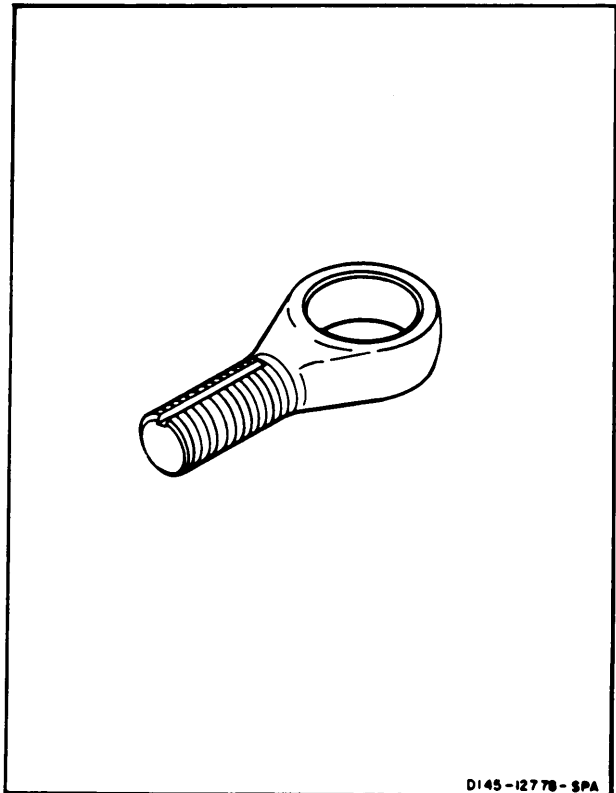

in eyes, on skin, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**

Wear kevlar gloves when handling chilled parts. Chilled parts can injure unprotected skin.

**WARNING**

Dry cleaning solvent (E162) is combustible and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**GO TO NEXT PAGE**

5-328.2 Change 25

**5-88.2 INSTALL SHOCK ABSORBER ROD END BEARING (AVIM)  
(Continued)**

1. Wipe rod end (1) clean. Use cloth (E120) damp with solvent (E162). Wear gloves (E186).
2. Check rod end bore (2). Diameter shall be 1.7485 to 1.7489 inches.
3. **Cool bearing (3) completely** in mixture of dry ice (E92) and methanol (E243). Wear gloves. (E187)
4. Position rod end (1) with groove (4) down.



**CAUTION**

Do not press bearing on any surface but outer race. Bearing damage will result.


5. **Press bearing (3) into rod end (1).** Use arbor press and pusher (Appx E41) (TM 55-1500-322-24).
6. **Check that bearing (3) is flush with rod end (1),** within 0.005 inch, on same side as groove (4).

**WARNING**

Do not stake bearing. Staking marks cause failure of rod end. This results in injury to personnel and damage to equipment.

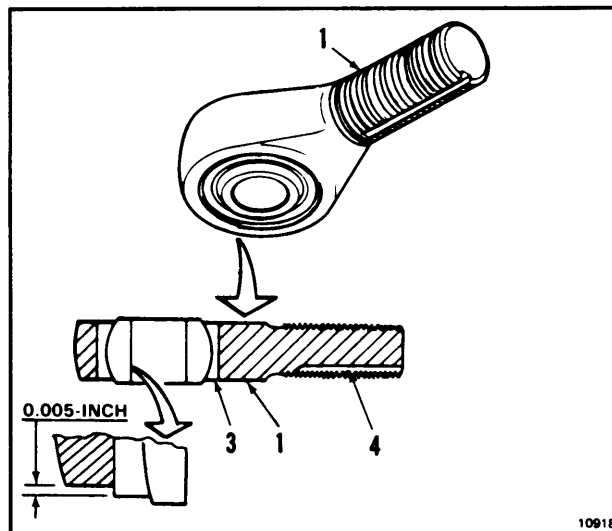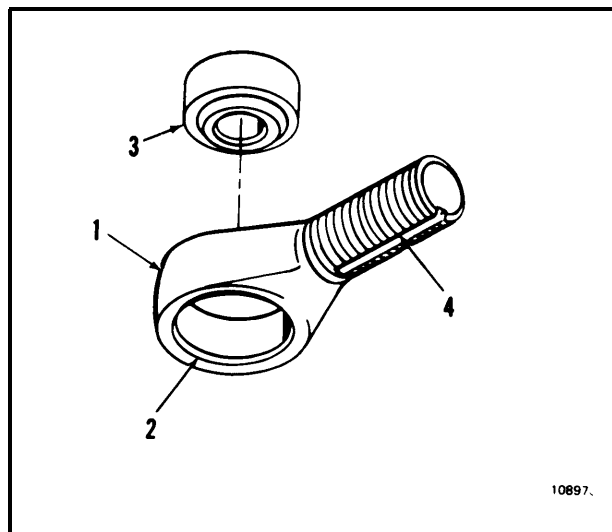

7. **Check torque needed to rotate bearing (3) as follows:**
  - a. Clamp rod end (1) in soft jaw vise (5).
  - b. Install torque wrench (6) on bearing (3). Use bolt (7), washers (8), and nut (9). Use enough washers to keep wrench away from rod end (1) so wrench can be pulled.
  - c. Rotate torque wrench (6). Check torque. Torque shall be 10 to 60 inch-pounds.
8. Remove rod end (1) from vise (5).

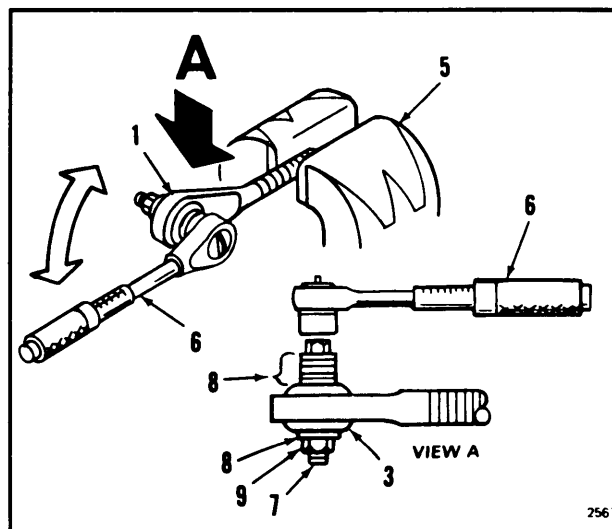


**GO TO NEXT PAGE**



FOLLOW-ON MAINTENANCE:

None

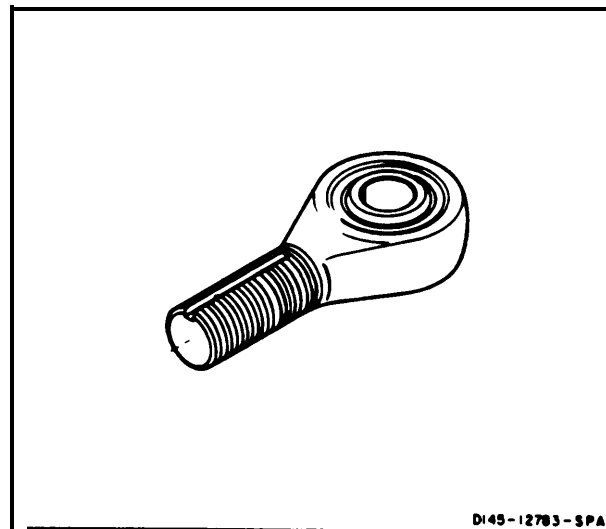

**END OF TASK**  
5-328.4 Change 14

**5-89 INSTALL SHOCK ABSORBER ROD-END**

**5 - 8 9**

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

- Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692
- Torque Wrench, 0 to 600 Foot-Pounds
- Vernier Caliper
- Crow's Foot, 1 5/16-inch

**Materials:**


Lockwire (E230)

**Personnel Required:**

- Medium Helicopter Repairer
- Inspector

**References:**

TM 55-1520-240-23P

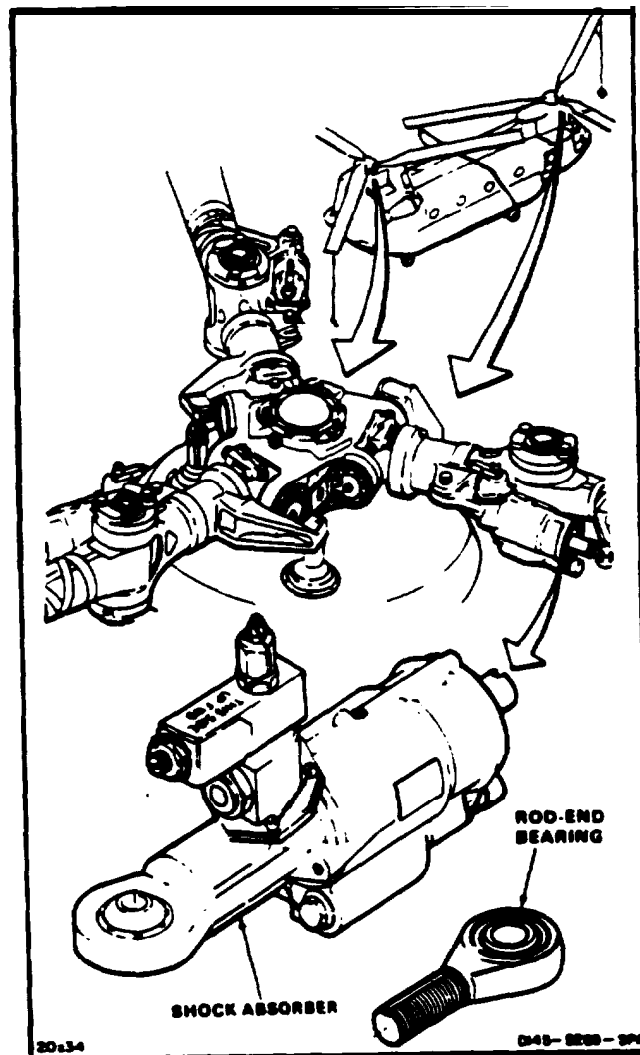

**WARNING**

Do not allow blade to swing. Blade can injure personnel if not tied.


**WARNING**

Do not force nut past last full thread. Rod end can be scored and cause failure of rod end with possible loss of helicopter and loss of life.

**NOTE**

Procedure is same to install rod end on any shock absorber.

1. Install nut (1) and kicking washer (2) on rod end (3).

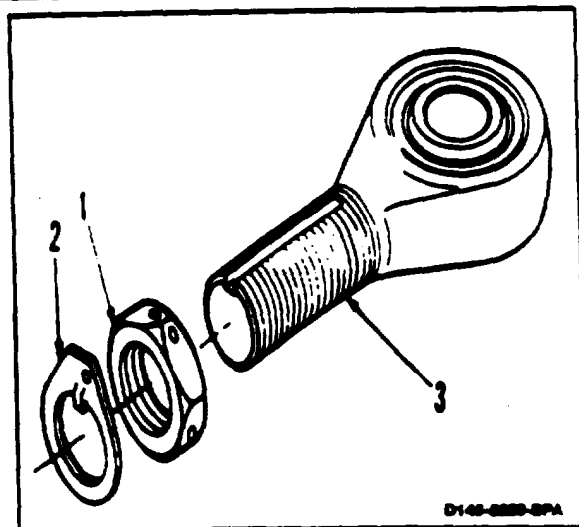

**GO TO NEXT PAGE**

2. Install rod end (3) in piston (4) until dimension A from end of rod to notched end if the piston is as follows:
  - a. On shock absorbers 114H6800-5 (teflon rod end bearings outboard), dimension "A" shall be 3.345 inch to 3.435 inch.
  - b. On shock absorbers 114H6800-11 (elastomeric rod end bearings outboard), dimension "A" shall be 3.095 inch to 3.185 inch.

**NOTE**

All 114H6800-9 shock absorbers must be modified to 114H6800-11 configuration. To ensure this modification, a thin jam nut (0.25) is installed on the lag dampener rod end.

**INSPECT**

3. Align groove (5) in rod end (3) with notch (6) in piston (4).



**WARNING**

**Tang of locking washer must be positioned in piston notch, otherwise tang can be. This can result in rod end separation with loss of helicopter and loss of personnel.**

4. Position locking washer (2) in notch (6). Torque nut (1) to 140 foot-pounds. Lockwire nut and washer. Use lockwire (E230).

**FOLLOW-ON MAINTENANCE:**

Install shock absorber (Task 5-93).

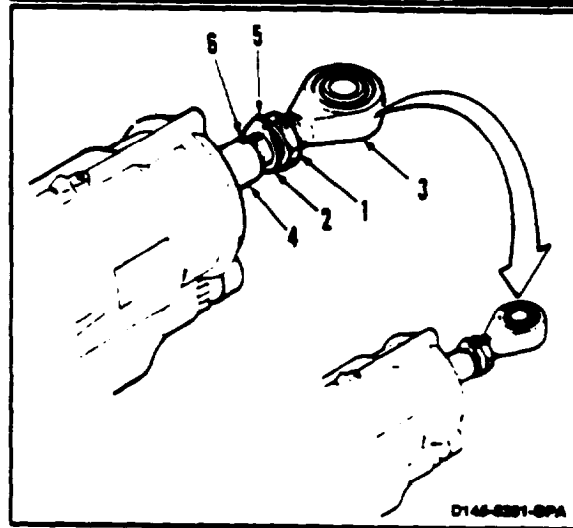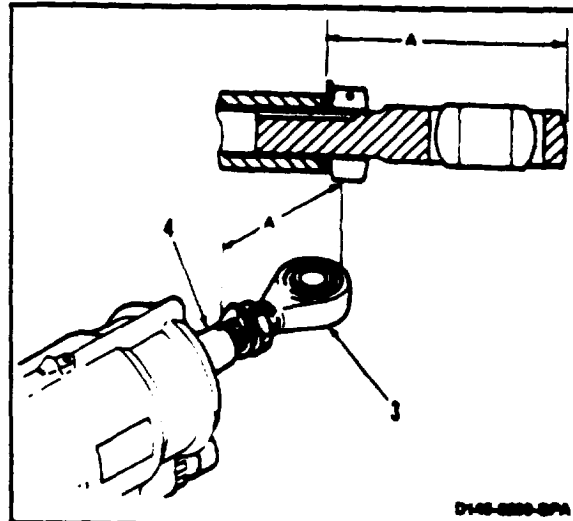

**END OF TASK**

**5-89.1 REPLACE LAG DAMPER LIQUID SIGHT INDICATOR****5-89.1****INITIAL SETUP****Applicable Configurations:**

All

**Tools:**Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692**Materials:**

Lockwire (E231)

**Parts:**

Packing

**Personnel Required:**

Medium Helicopter Repairer

**Equipment Condition:**


Off Helicopter Task

**General Safety Instructions:****WARNING**

Hydraulic fluid (E197) is moderately flammable. It is toxic if taken internally. It can irritate the skin. In case of contact, immediately flush skin or eyes with water. Get medical attention for eyes.

**CAUTION**


Do not handle shock absorber with vent valve open. Fluid can leak from open valve.

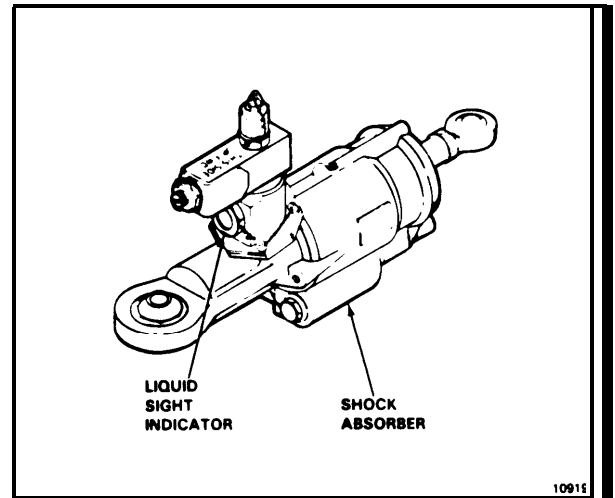**GO TO NEXT PAGE**

## 5-89.1 REPLACE LAG DAMPER LIQUID SIGHT INDICATOR (Continued)

5-89.1

1. **Check liquid level (1) in sight glass of indicator (2).** If liquid level is below the bottom of the indicator, do the following:
  - a. Remove lockwire (3). Loosen cap (4).
  - b. **Loosen nut (5). Turn vent valve (6) 90 degrees counterclockwise.**
  - c. Remove lockwire (7). Remove indicator (2) and packing (8) from tank (9).
  - d. Discard packing (8).
  - e. Go to step 3.
2. **If liquid level is visible in sight glass (1),** do the following:
  - a. Remove lockwire (3) and cap (4).
  - b. Drain tank (9).
  - c. **Loosen nut (5). Turn vent valve (6) 90 degrees counterclockwise.**
  - d. Remove lockwire (7). Remove indicator (2) and packing (8) from tank (9).
  - e. Discard packing (8).
3. Install replacement indicator (2) and new packing (8) in tank (9).
4. Lockwire indicator (2) to tank (9). Use lockwire (E231).
5. Rotate vent valve (6) over sight indicator (2). Tighten nut (5).
6. Tighten or install cap (4), as applicable. Lockwire cap to nut (5). Use lockwire (E231).

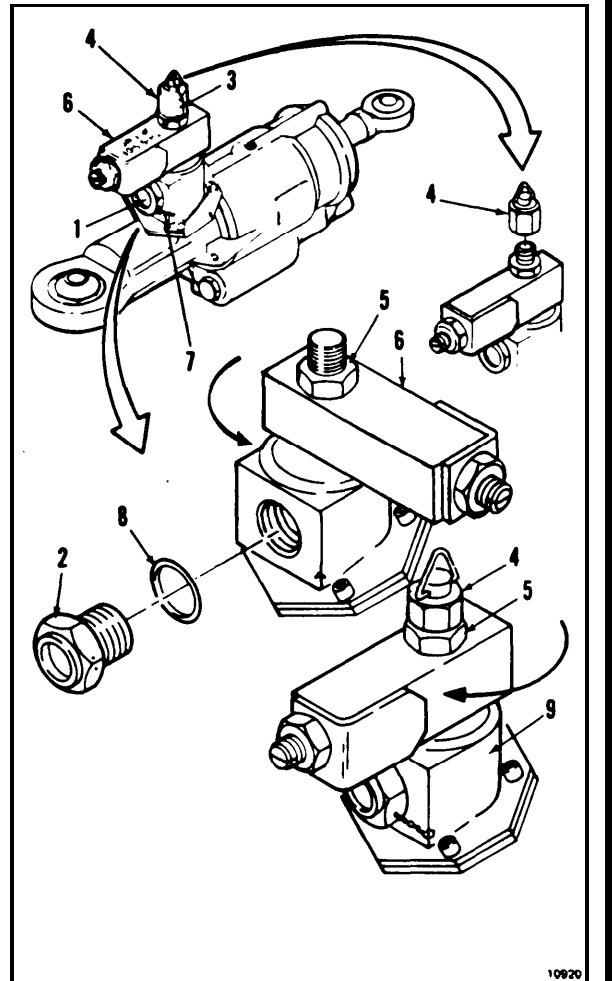

### FOLLOW-ON MAINTENANCE:

Service lag damper (Task 5-92).

## 5-89.2 REMOVE ROTARY-WING BLADE SHOCK ABSORBER INBOARD BEARING AND BUSHING (AVIM)

5-89.2

### INITIAL SETUP

#### Applicable Configurations:

Without **45**

#### Tools:

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-3234692  
Arbor Press

#### Materials:

None

#### Personnel Required:


Medium Helicopter Repairer (2)

#### References:

TM 55-1500-322-24

#### Equipment Condition:



Off Helicopter Task

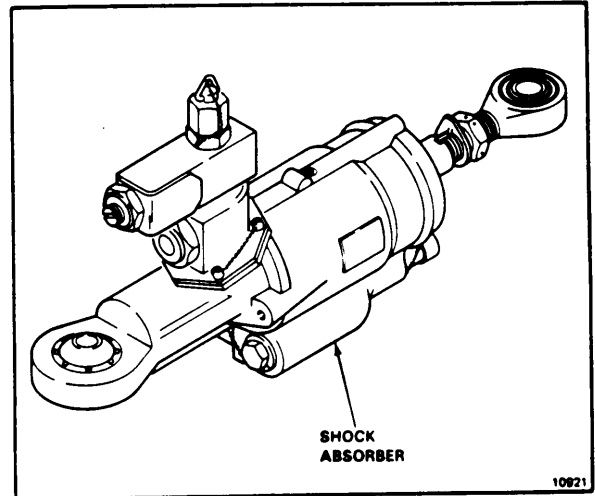

### CAUTION

**Do not heat housing for bearing or bushing removal.**

1. Position inboard bearing (1) of shock absorber (2) in arbor press with flange of bushing (4) up.
2. **Press out bearing (1)** from housing (5). Use arbor press (TM 55-1500-322-24).
3. Position housing (5) in arbor press with flange of bushing (4) down.
4. **Press out bushing (4)** from housing (5). Use arbor press (TM 55-1500-322-24).
5. Remove absorber (2) from arbor press.

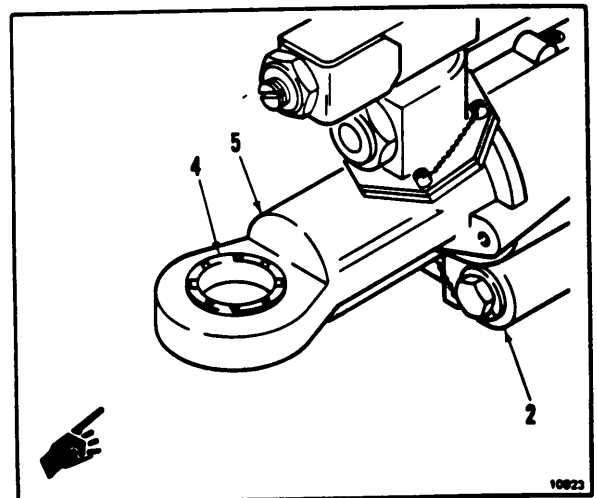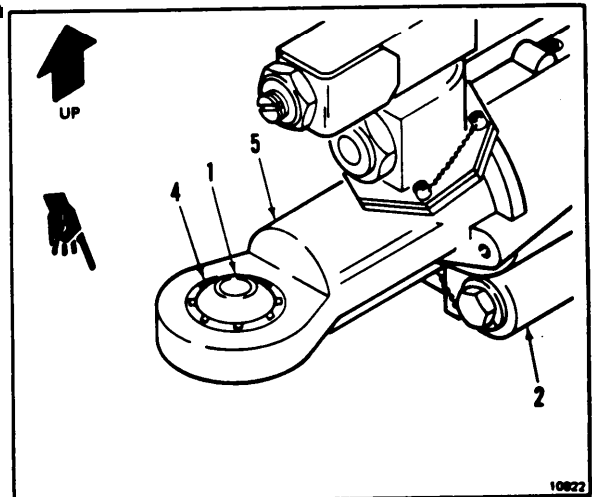


GO TO NEXT PAGE

5-330.3

**5-89.2 REMOVE ROTARY-WING BLADE SHOCK ABSORBER  
INBOARD BEARING AND BUSHING (AVIM) (Continued)**

FOLLOW-ON MAINTENANCE:

None

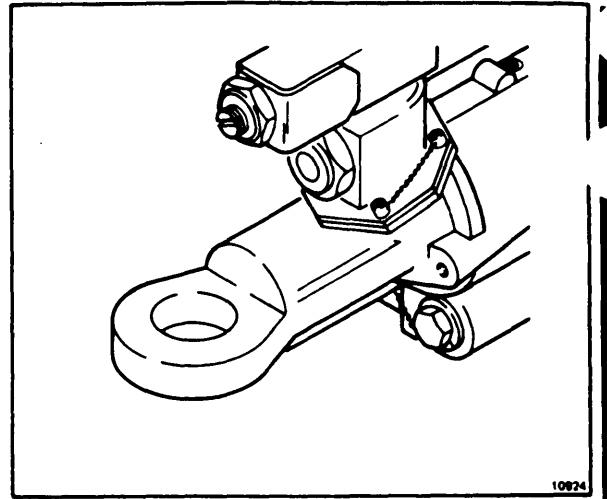

**END OF TASK**  
5-330.4 Change 14

**5-89.3 INSTALL ROTARY-WING BLADE SHOCK ABSORBER INBOARD BEARING AND BUSHING (AVIM) 5-89.3**

INITIAL SETUP

**Applicable Configurations:**

Without **45**

**Tools:**

- Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692
- Arbor Press
- Staking Die (T108)
- Heat Gun  
NSN 4940-00-785-1162

**Materials:**


- Corrosion Preventive Compound (E153)
- Cleaning Cloths (E120)
- Gloves (E186)
- Gloves (E187)
- Solvent (E162)

**Personnel Required:**

- Medium Helicopter Repairer (2)
- Inspector

**References:**

- TM 55-1500-322-24
- TM 55-1520-240-23P

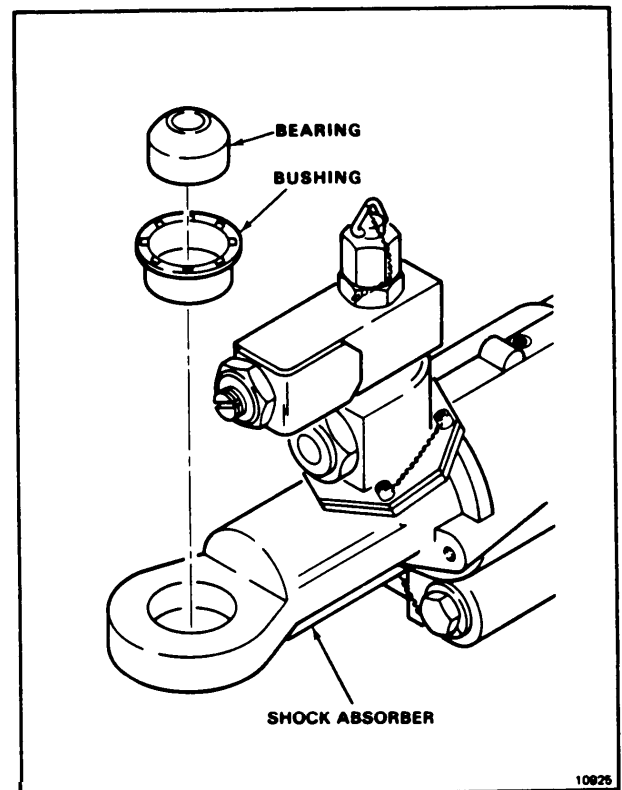


1. If bushing (1) is not being replaced, remove burrs and stake marks from inside and outside diameter of bushing.

**WARNING**

Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes. Use gloves (E186).

2. Wipe bore (2) of shock absorber housing (3) and outer diameter of bushing (1) and bearing (4). Use cloth (E120) damp with solvent (E162). Wipe surface with dry cloth before solvent dries. Use gloves (E186).

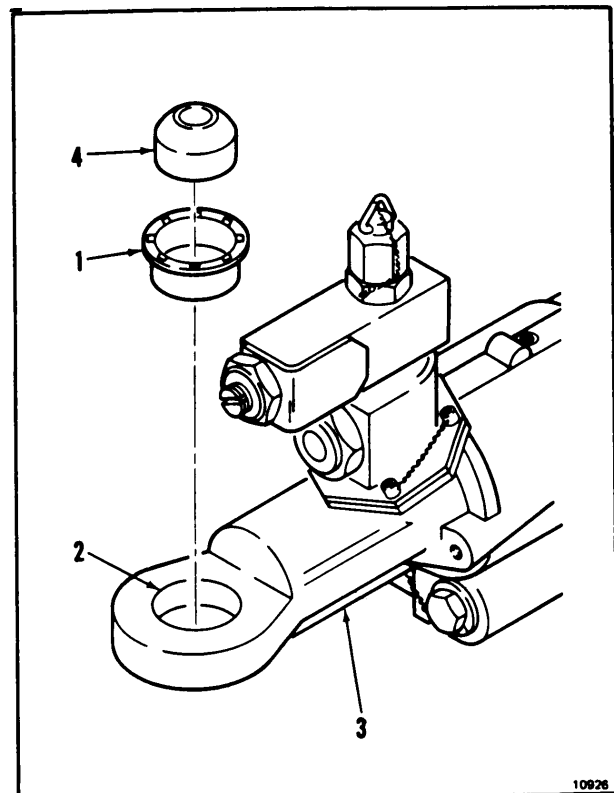

**GO TO NEXT PAGE**



**5-89.3 INSTALL ROTARY-WING BLADE SHOCK ABSORBER INBOARD 5-89.3 BEARING AND BUSHING (AVIM) (Continued)**

**WARNING**

Corrosion preventive compound (E153) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

3. Apply compound (E153) to bore (2) and outer diameter of bushing (1). Wear gloves (E186).
4. Position housing (3) in arbor press with sight indicator (6) up.
5. **Press bushing (1) into housing (3)** until bushing flange seats on housing. Wear gloves (E186) (TM 55-1500-322-23).
6. **Heat housing lug to 250° to 300° F (70° to 86° C) using heat gun. Press bearing (4) into bushing (1)** until bottom outer race of bearing is flush with bottom surface of bushing (TM 55-1500-322-24). Wear protective gloves (E186).

**NOTE**

Inner ball of bearing extends beyond bearing outer diameter.

7. Remove excess compound (E153) from bushing (1) and housing (3). Use cloths (E120). Wear gloves (E186).
8. **Stake bushing (1) to bearing (4)** on flanged side of bushing, at six evenly spaced positions. Use staking die (T108).
9. **Stake bushing (1) to flange on opposite side** at six evenly spaced positions. Stake next to previous stake marks. Use staking die (T108).



**INSPECT**

FOLLOW-ON MAINTENANCE:

None

**END OF TASK**

5-330.6 Change 25

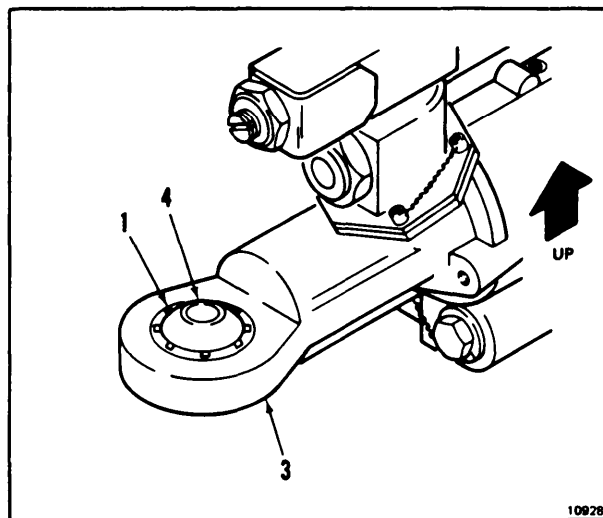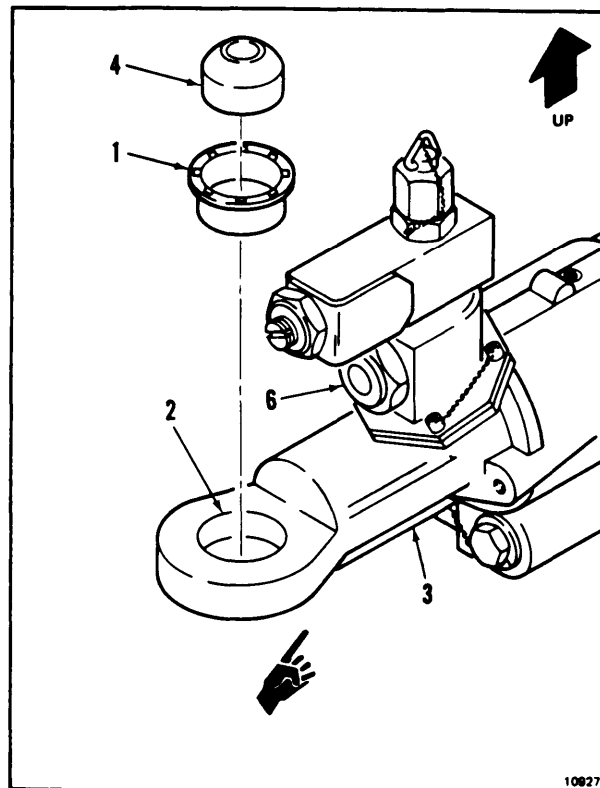

**5-90 ADJUST SHOCK ABSORBER LENGTH**

5-90

**INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Setting Fixture (T106)  
Torque Wrench, 0 to 600 Foot-Pounds  
Open End Wrench, 1-5/16 Inch  
Crow'sfoot, 1-5/16 Inch

**Materials:**

Lockwire (E231)

**Personnel Required:**


Medium Helicopter Repairer (2)  
Inspector

**References:**

TM 55-1520-240-23P

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electric Power Off  
Hydraulic Power Off  
Rotor Blade Positioned Over Fuselage  
One Forward and One Aft Rotor Blade Tied  
Down (Task 1-26)  
Forward or Pylon Work Platform Open (Task  
2-2)  
Shock Absorber Removed (Task 5-87)

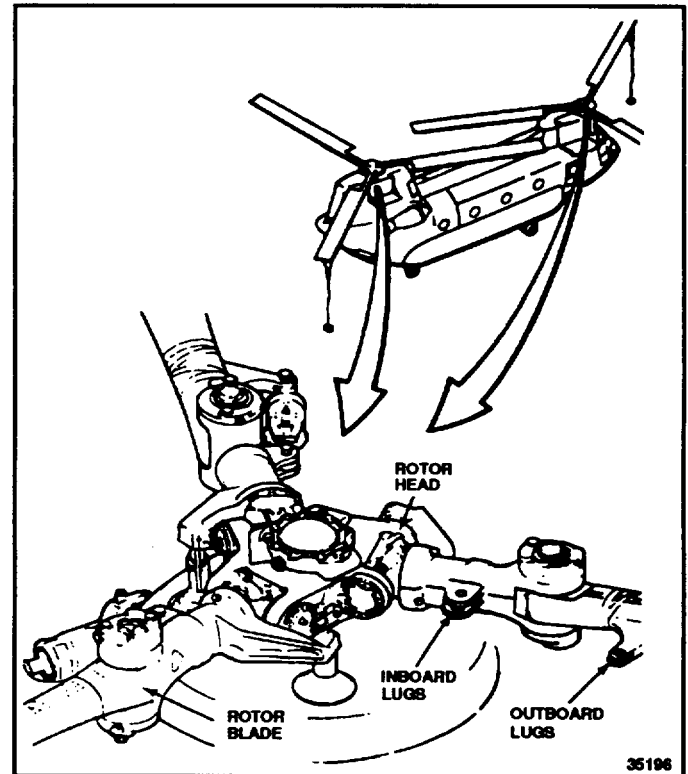
**NOTE**

The procedure is the same to adjust any shock absorber.

1. On helicopters without **50** Install sliding bushing (1) inside the bushing in lower inboard lug (2).

**NOTE**

On helicopters with **50** bushings are part of the rotor head.

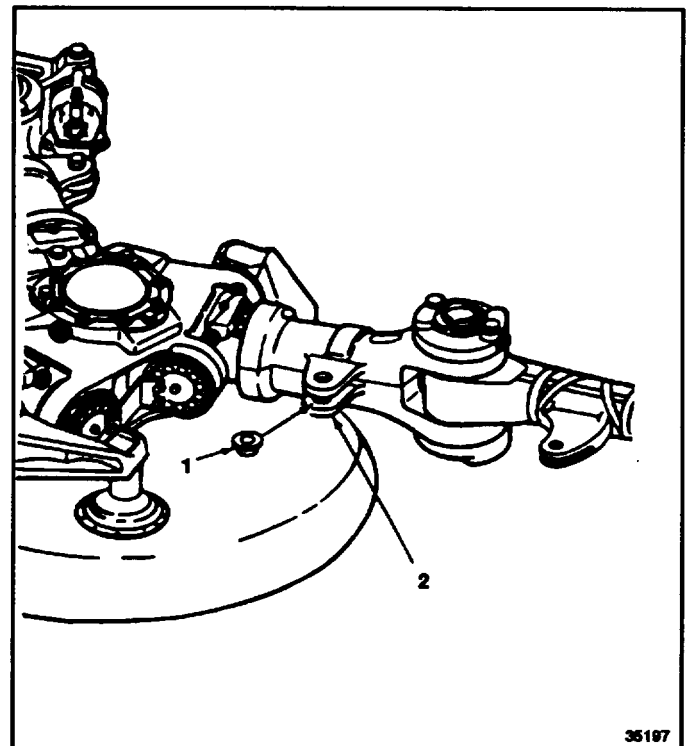
**GO TO NEXT PAGE**

Change 34 5-331


2. Have helper position Inboard bearing (3) between inboard lugs (2).
  - a. On helicopters with ID, install bolt (4) and countersunk washer (5), with countersink against bolt head.
  - b. On helicopters without I-, install bolt (4).

**NOTE**

Helicopters without **50** use a plain bolt.  
 Helicopters with **50** use a bolt/bushing assembly. A plain bolt is shown.

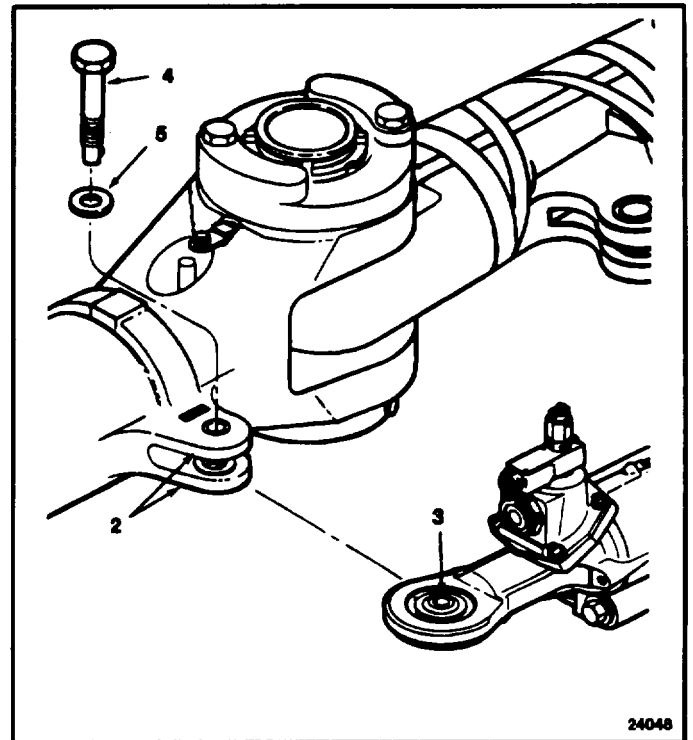

3. Position rodend bearing (6) between outboard lugs (7). Install bolt (8).

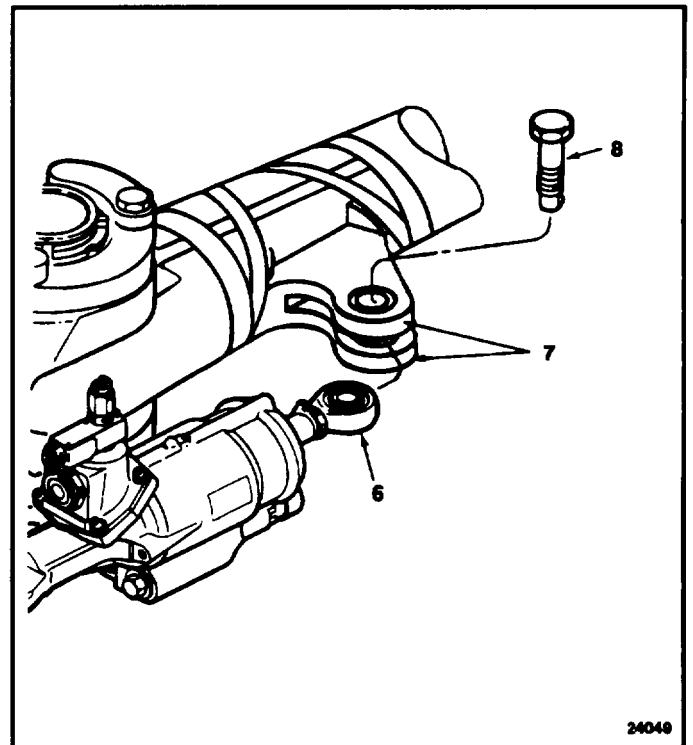


**5-90 ADJUST SHOCK ABSORBER LENGTH (Continued)****5-90**

4. Move blade (9) in the direction of shock absorber (10) until absorber is fully compressed. Hold the blade until it remains in place with no pressure applied.


**WARNING**

**Do not allow blade to swing. Blade can injure personnel if not tied.**

5. Tie blade (9) to the fuselage.

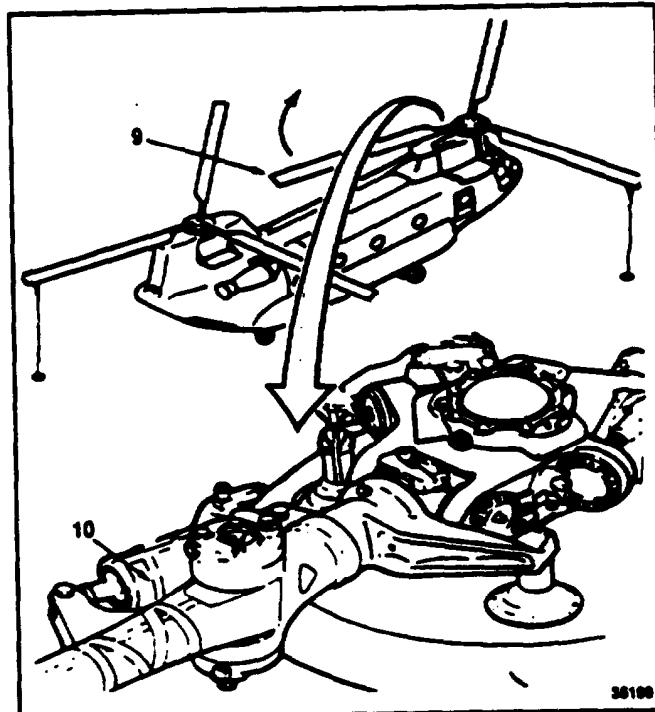

6. Have helper support shock absorber (10). Remove bolt (8).

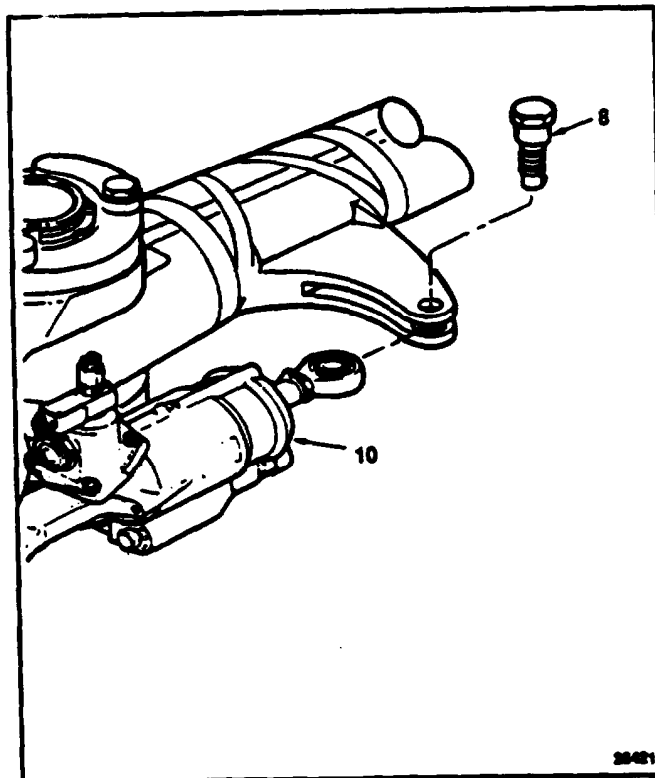

**GO TO NEXT PAGE**

**5-90 ADJUST SHOCK ABSORBER LENGTH (Continued)**

**NOTE**

Dimension 'A' of Task 5-89 cannot be altered to obtain dimension required by Task 5-90.

7. Remove inboard bolt (4) as follows
  - a. On helicopters without **50** remove bolt (4) and countersunk washer (5)
  - b. On helicopters with **50**, remove bolt (4). Remove shock absorber (10).

**NOTE**

Helicopters without **50** use a plain bolt. Helicopters with **50** use a bolt bushing assembly. A plain bolt is shown.

**NOTE**



If fixture 114G1306-1 or 114G1306-7 is not available, shock absorbers may be adjusted by measuring from center holes of bearings. With elastomeric bearings, the measurement should be 18.390 inch. +/- 0.005 inch. Without elastomeric bearings, the measurement should be 18.642 inch +/- 0.005 inch. Make adjustments in accordance with Step 8.

8. Adjust length of shock absorber (10) as follows:

**NOTE**

Shock absorbers 114H6800-5, -6, and -9 (helicopters without **133**) require setting fixture 114G1306-1. Shock absorbers 114H6800-11 (helicopters with **133**) require setting fixture 114G1306-7. Fixture 114G1306-1 is shown.

- a. At setting fixture (T106) (12), position inboard bearing (3) over inboard support (11). Insert inboard pin (13) into inboard support.

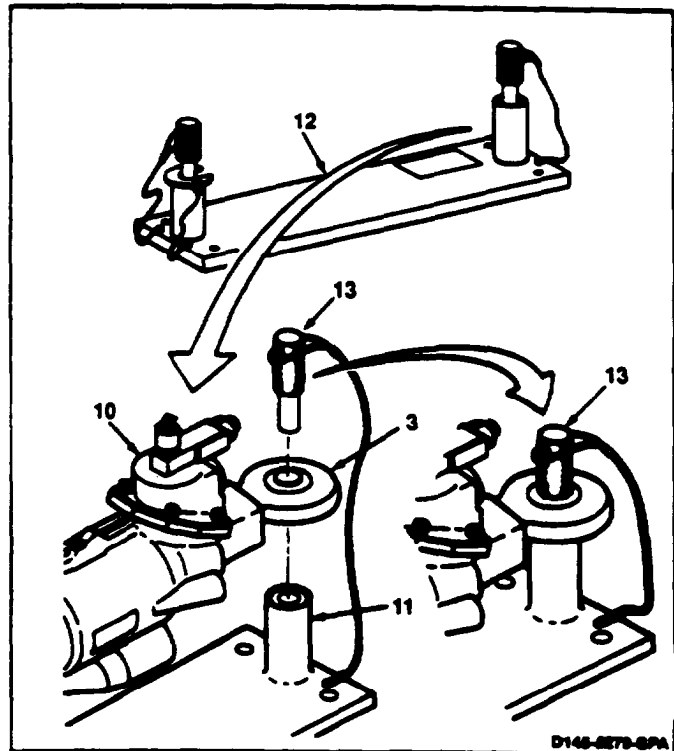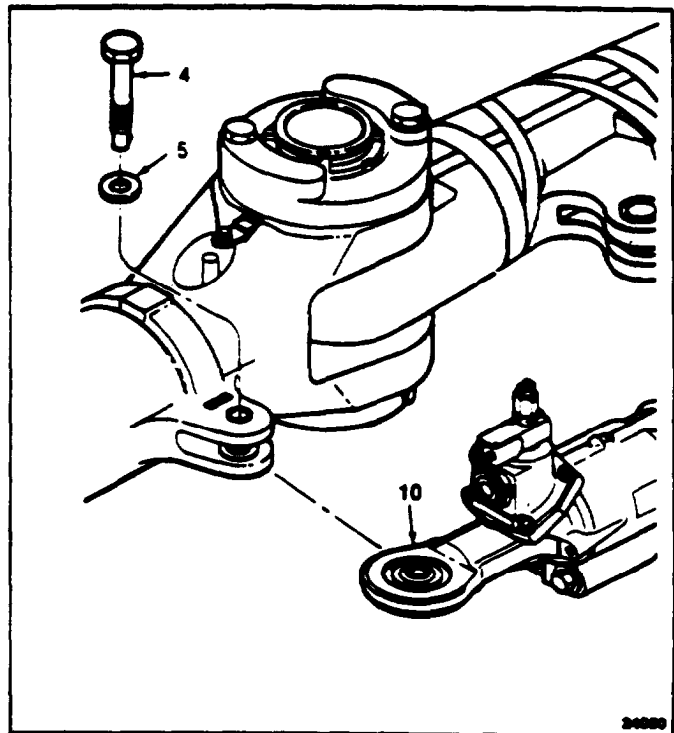

**GO TO NEXT PAGE**

- b. Position bearing (6) over support (14).
- c. Remove spacer (15) from support (14). Position bearing (6) on the support.

**NOTE**

The spacer is not used to adjust this shock absorber.

**CAUTION**


Do not lift bearing to align rod-end pin. Do not force pin into support. Do not adjust rod-end on fixture. Damage to fixture can result

- d. Insert rod-end pin (16) into rod-end support (14). Check that pin fits freely at least 3/4-inch into the support


**NOTE**

Setting fixture 1144G1306-1 is set to a nominal shock absorber length of 18.642 inches. Setting fixture 114G1306-7 is set to 18.390 inches. If the pin does not fit freely, the shock absorber is not the correct length.


- e. Remove pins (13) and (16). Remove shock absorber (10) from fixture (12).
9. If the length of shock absorber (10) is not correct, adjust it as follows: a. Loosen nut (17). Move locking washer (18) rear of notch (19) in piston (20).

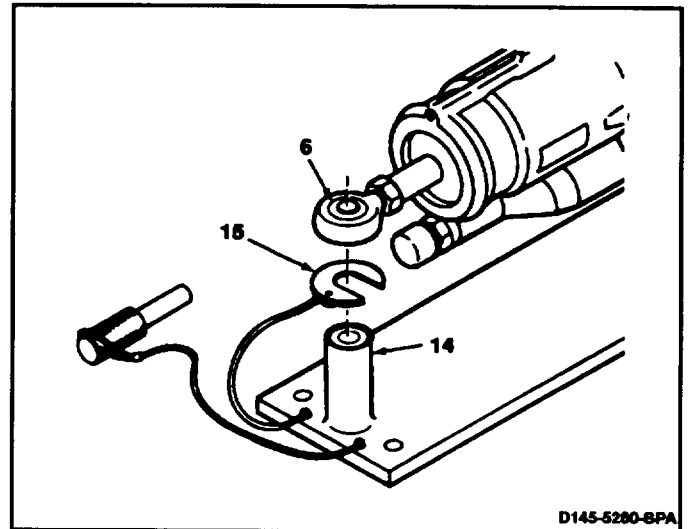

D145-5280-SPA

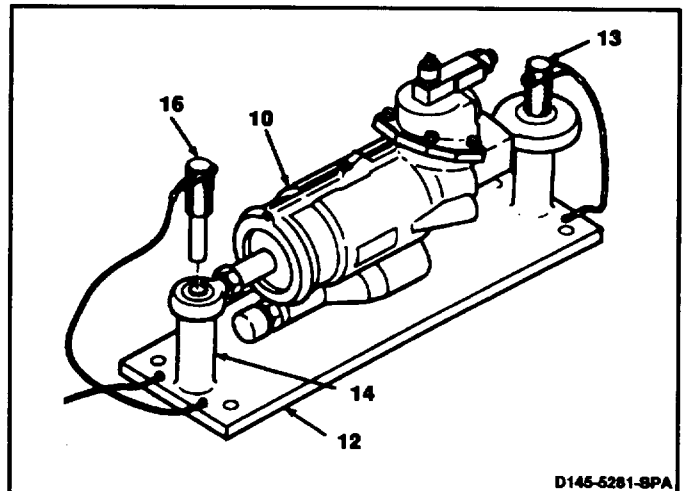

D145-5281-SPA

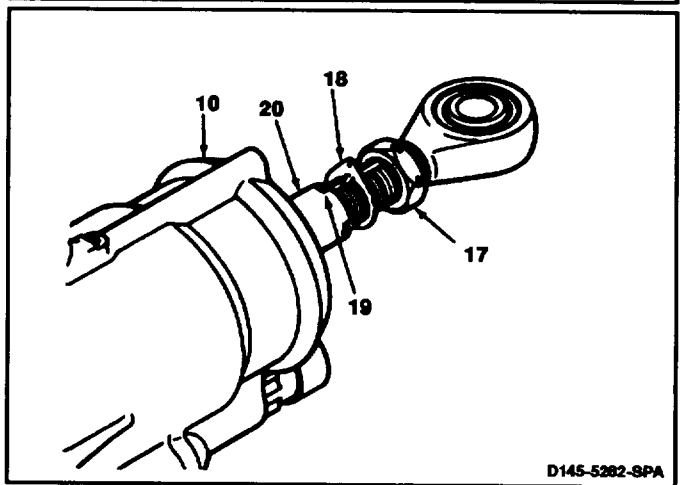

D145-5282-SPA

GO TO NEXT PAGE

**NOTE**

Turning rod-end bearing 1/4 turn to next piston notch changes shock absorber length 0.018-inch.

- b. Turn bearing (6) clockwise to shorten shock absorber. Turn it counterclockwise to lengthen shock absorber.
- c. Repeat step 8 to check length of shock absorber (10).


**CAUTION**

Hold piston flats with wrench when tightening nut. Movement between piston and rod & id will damage locking washer.

10. Position locking washer (18) in notch (19). **Torque nut (17) to 140 foot-pounds.** Lockwire nut. Use lockwire (E231).

**INSPECT**

FOLLOW-ON MAINTENANCE:  
None

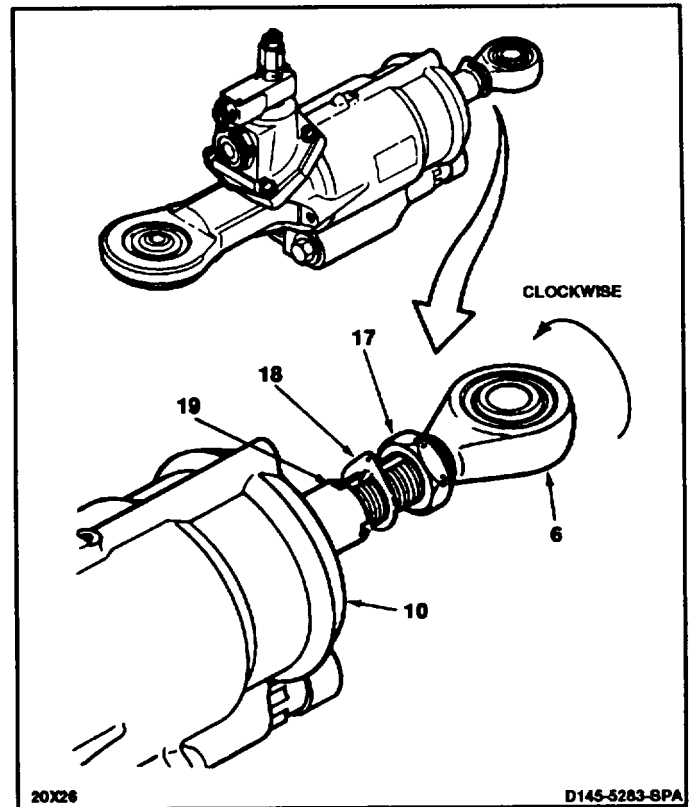

**END OF TASK**

5336 Change 34

## 5-91 PREPARE SHOCK ABSORBER FOR STORAGE OR SHIPMENT

5-91

### INITIAL SETUP

#### Applicable Configurations:

All

#### Tools:

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Container (T107)

#### Materials:

Hydraulic Fluid (E197)  
Cloth (E120)  
Barrier Material (E80)  
Waterproof Tape (E395)  
Lockwire (E231)

#### Personnel Required:

67U10 Medium Helicopter Repairer

#### Equipment Condition:

Off Helicopter Task


#### General Safety Instructions:

#### WARNING

Hydraulic fluid (E197) is moderately flammable. It is toxic if taken internally. It can irritate the skin. In case of contact, immediately flush skin or eyes with water. Get medical attention for eyes.

#### CAUTION


Do not handle shock absorber with vent valve open. Fluid can leak from open valve.

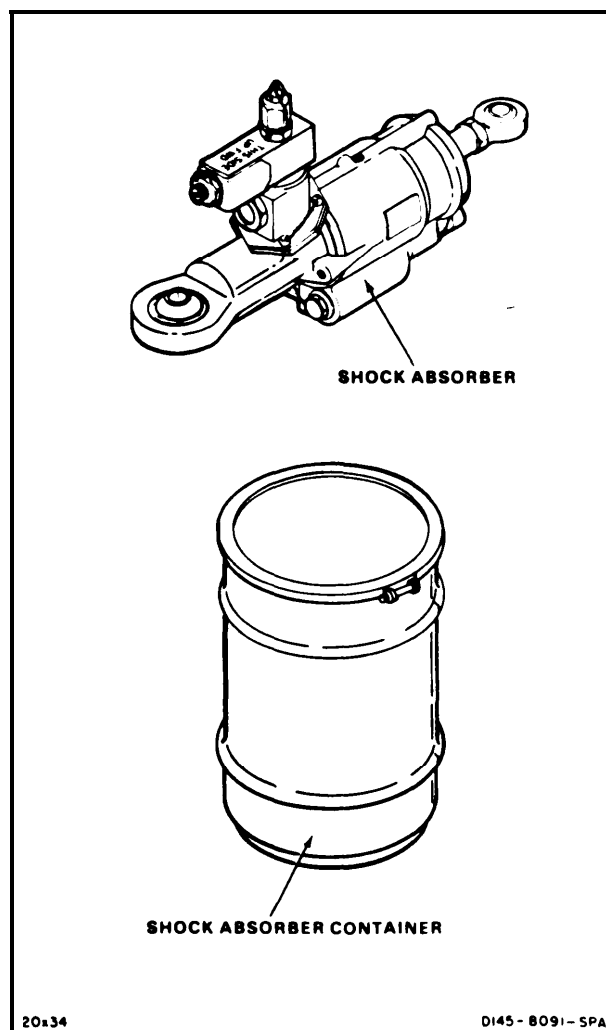

20x34

DI45-8091-SPA

1. **Check fluid level in shock absorber (1).** If fluid level is not within midpoint of sight indicator (2), service shock absorber as follows:
  - a. Remove lockwire from cap (3). Remove cap.
  - b. Add hydraulic fluid (E197) to tank (4). Check that fluid level is within midpoint of indicator (2).
  - c. Install cap (3). Lockwire cap. Use lockwire (E231).

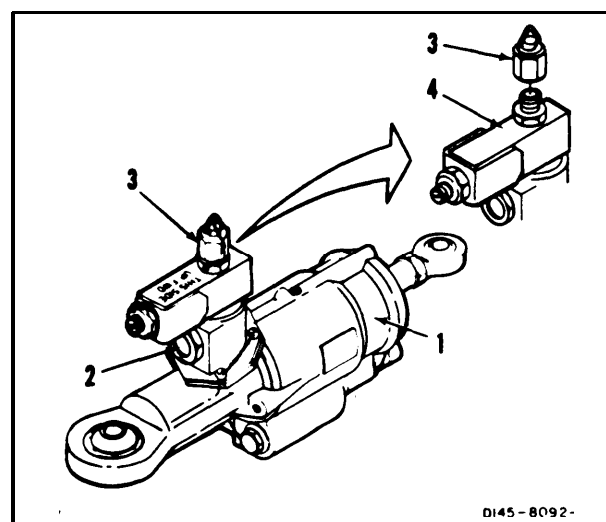

DI45-8092-

**GO TO NEXT PAGE**




**5-91 PREPARE SHOCK ABSORBER FOR STORAGE OR SHIPMENT (Continued)**

2. Wipe shock absorber (1) clean, including unpainted surfaces. Use cloth (E120) damp with hydraulic fluid (E197).

**CAUTION**

Do not apply preserving compounds as grease to shock absorber. Removal requires solvent which can damage dry-type bearings.

3. **Wrap shock absorber (1).** Use barrier material (E80) (5). Secure barrier material with tape (E395) (6).
4. Remove nut (7), bolt (8), and washer (9). Remove lockring (10). Remove cover (11). Remove upper cushion (12).
5. **Position shock absorber (1) in lower cushion (13)** of container (T107) (14) with tank (4) up.

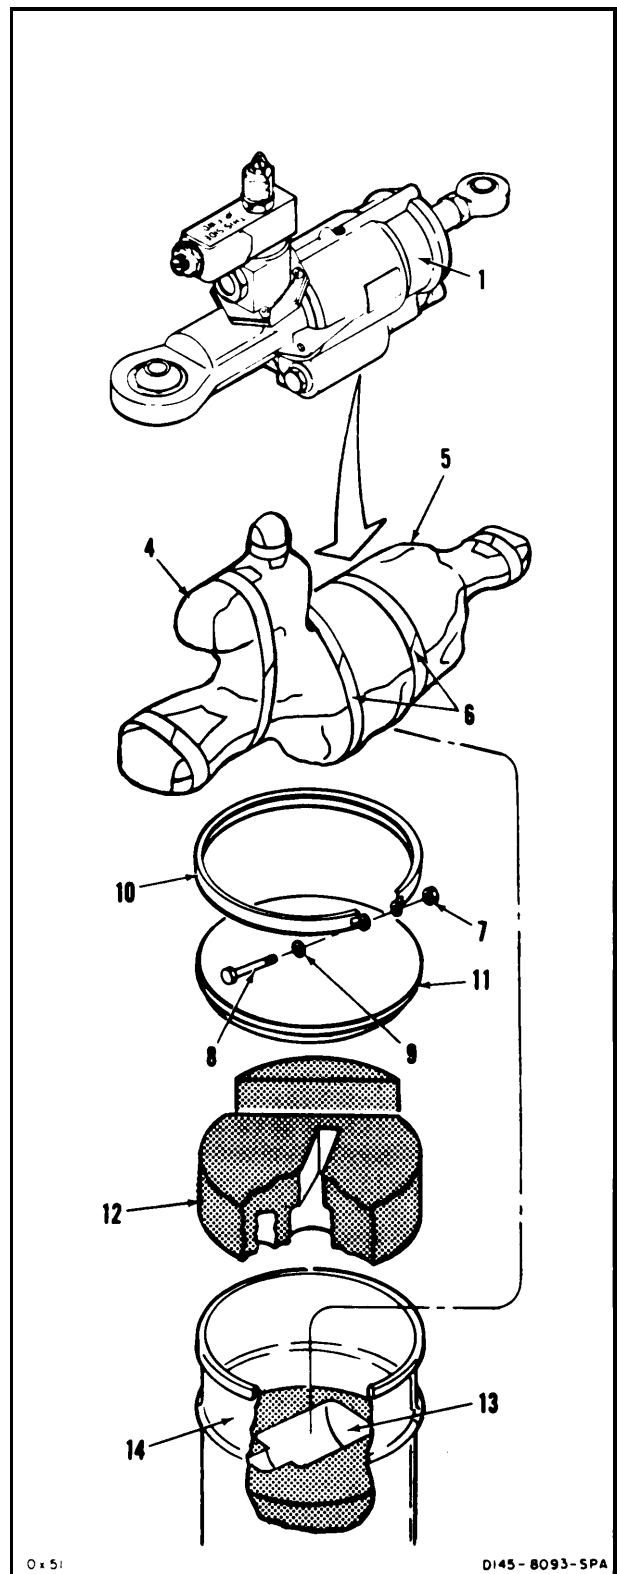


**GO TO NEXT PAGE**

**5-91 PREPARE SHOCK ABSORBER FOR STORAGE OR SHIPMENT**  
**(Continued)**


5-91

- 6. **Position upper cushion (12)** on lower cushion (13).
- 7. **Position cover (11)** on container (T107) (14). Install lockring (10), bolt (8), washers (9), and nut (7).
- 8. Label container (107) (14) with part number and reason for removal, if required.

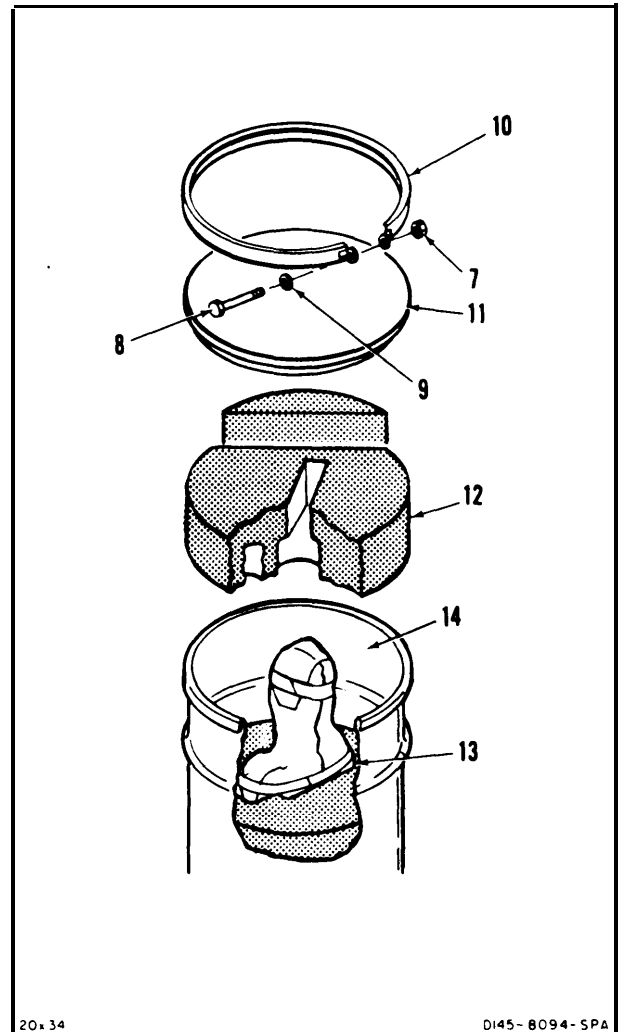

FOLLOW-ON MAINTENANCE:

None

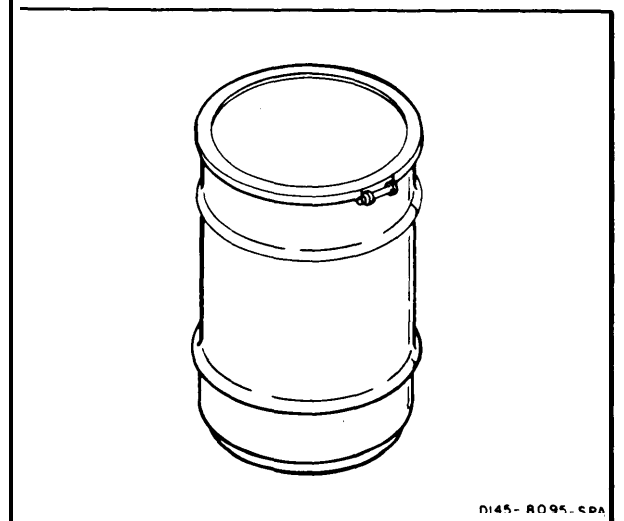

**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692

**Materials:**

None

**Personnel Required:**


67U10 Medium Helicopter Repairer (4)  
67U20 Medium Helicopter Repairer  
67U30 Inspector

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
One Forward and One Aft Rotary-Wing Blade  
Tied Down, Blade Without Shock Absorber  
Tied To Two Landing Gear Shackles (Task 1-  
26)  
Work Platforms Open (Task 2-2)

**References:**

TM 55-1520-240-23P  
Task 5-93

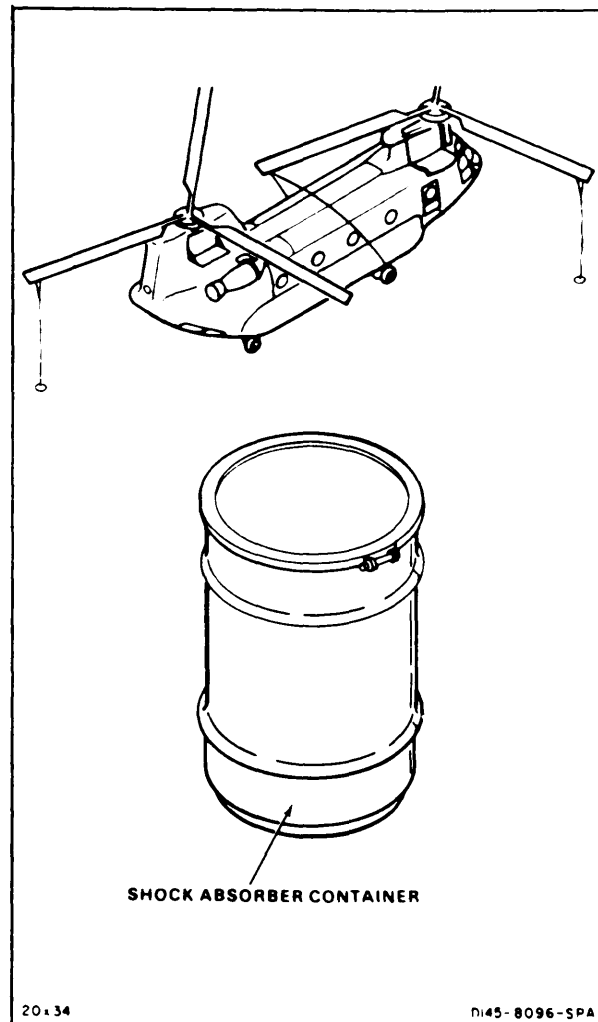

**CAUTION**


Do not clean shock absorber with any kind of advent. Damage to dry-type bearings can result.

GO TO NEXT PAGE


**5-92 PLACE SHOCK ABSORBER IN SERVICE (Continued)****5-92****NOTE**

Procedure is same to place any shock absorber in service. There are six shock absorbers.

1. Remove nut (1), bolt (2), and washer (3). Remove lockring (4).
2. Remove lid (5). Remove upper cushion (6).  
**Remove shock absorber (7).**

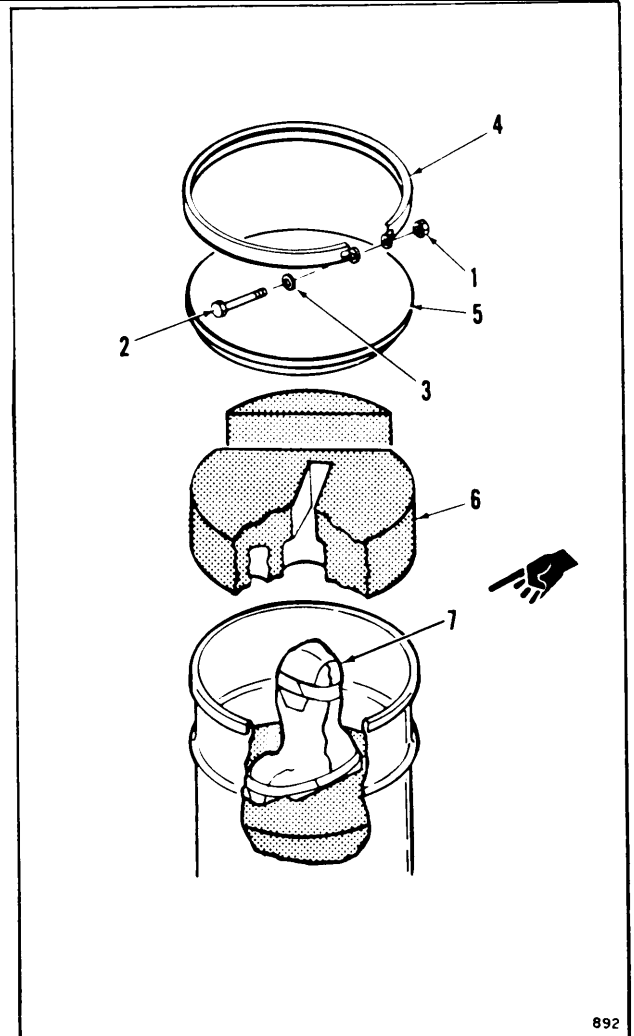


3. Remove tape (E395) (8) and barrier material (E80) (9) from shock absorber (7) (Task 5-93).

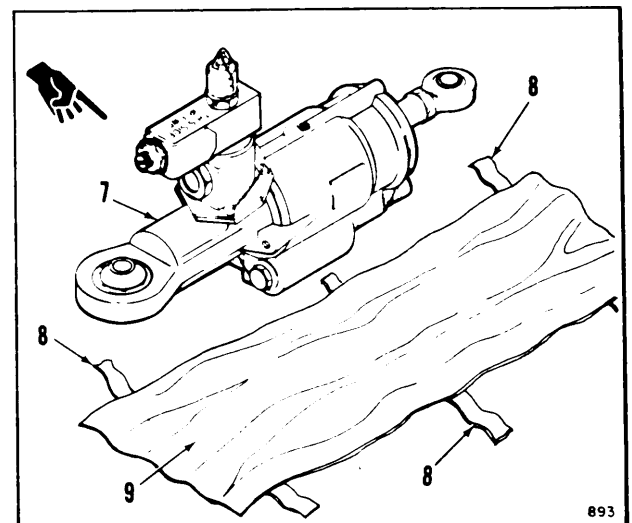**GO TO NEXT PAGE**

**5-92 PLACE SHOCK ABSORBER IN SERVICE  
(Continued)**

**4. Install shock absorber (7) (Task 5-93)**

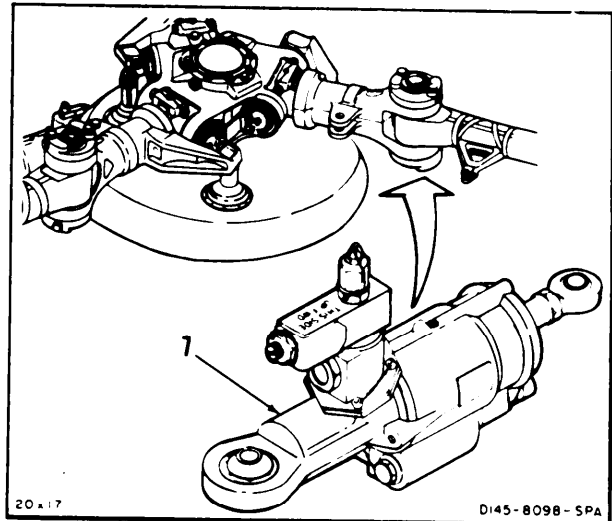


**5. Bleed air from shock absorber as follows:**

- a. Remove ties (8) from blade (9) to landing gear shackles (10).


**NOTE**

Blade is used as lever to move shock absorber.

- b. Have helpers lift and move blade (9). Move to full lead and full lag positions. Repeat cycle five times. Have helpers lower blade.

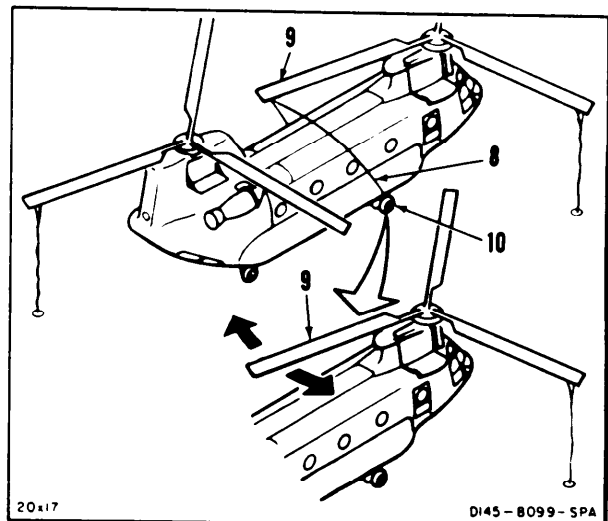

- c. Check that fluid level is within center of sight indicator (11). If fluid is within center, go to Follow-On Maintenance.
- d. If fluid is not visible in center of indicator (11), remove lockwire and cap (12).
- e. Add hydraulic fluid (E197) to tank (13) until level is at center of indicator (11). Install cap (12). Lockwire cap. Use lockwire (E231).

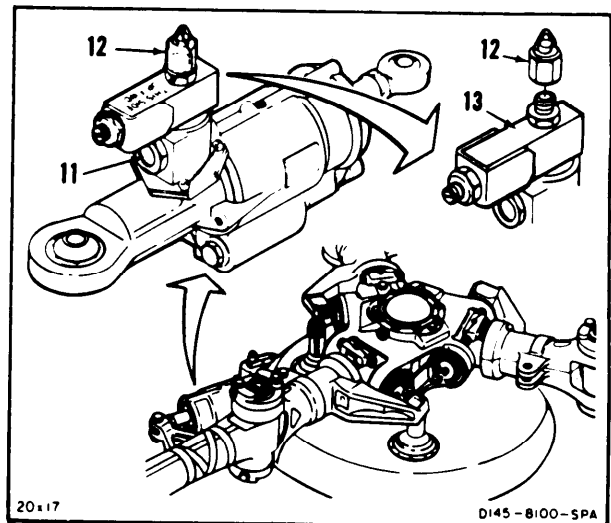

**GO TO NEXT PAGE**

**5-92 PLACE SHOCK ABSORBER IN SERVICE (Continued)****5-92**

f. Repeat step b.


**NOTE**

Fluid level must remain in center of indicator after five shock absorber cycles.

g. Check that fluid has not dropped below indicator (11).

**FOLLOW-ON MAINTENANCE:**

None

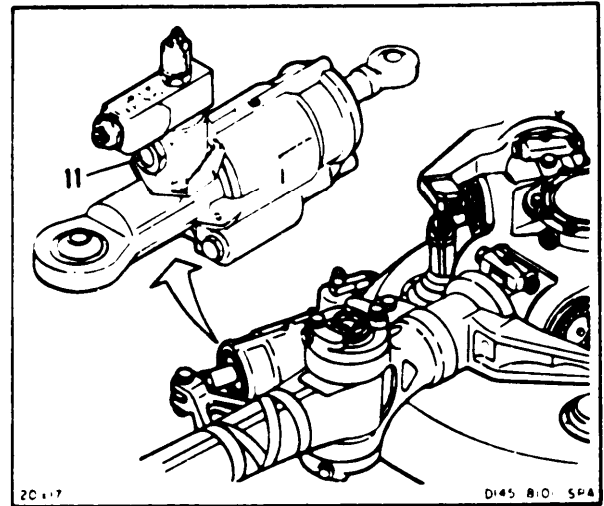

5-93 INSTALL SHOCK ABSORBER

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Aircraft Mechanic Tool Kit,  
NSN 5180-00-323-4692
- Torque Wrench, 0 to 600 Foot-Pounds
- Torque Wrench, 0 to 150 Inch-Pounds
- Micrometer
- Rotary-Wing Blade Sling (T35)
- Rigging Tool, Lead-Lag Damper (T72)

**Materials:**

- Antiseize Compound (E75)
- Cloth (E120)
- Acetone (O-A-51) (E20)
- Hydraulic Fluid (E197)
- Lockwire (E231)
- Gloves (E186)

**Parts:**

- Cotter Pins

**Personnel Required:**


- Medium Helicopter Repairer (6)
- Inspector

**References:**

- TM 55-1520-240-23P

**Equipment Condition:**

- Shock absorber set a nominal length (Task 5-90)

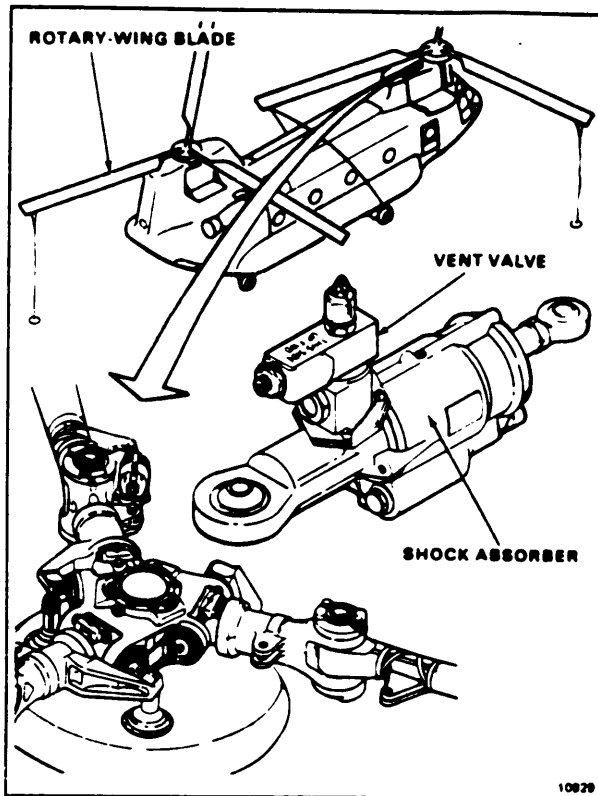

GO TO NEXT PAGE

5-93. INSTALL SHOCK ABSORBER (Continued)

5-93

**NOTE**

Procedure is same to install any shock absorber. There are six shock absorbers.


1. Clean bearing bores (1) of shock absorber (2). Use cloth (E120).

**INSTALL ABSORBER WITHOUT 50 OR WITH 58**

**WARNING**

Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

2. Clean bolts (3 and 4), bushing (5), and washers (6, 7, and 8). Use cloth (E120) damp with solvent (E162). Wear gloves (E186).

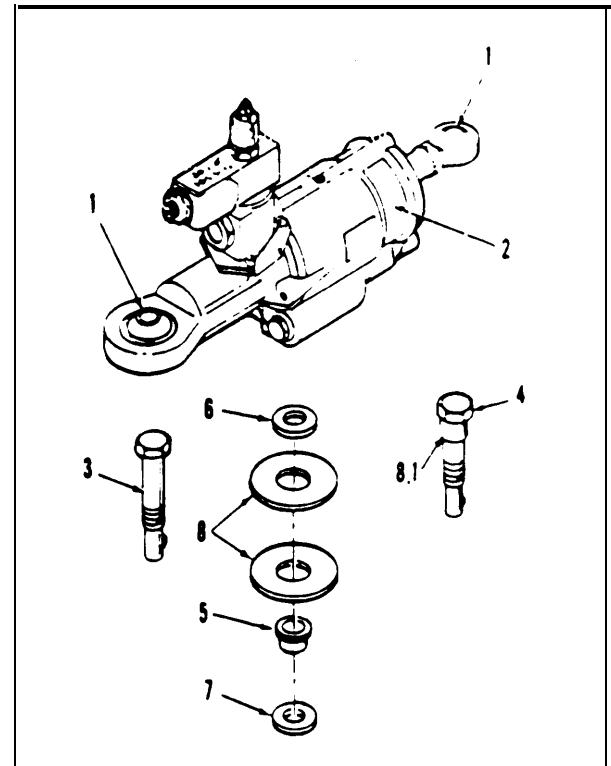


**INSTALL ABSORBER WITH 50**

- 2.1 Measure bushing (8.1) of bolt (4) at several places. Use a micrometer. Minimum diameter of bushing shall be 1.090 inch.

**WARNING**

Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- 2.2 Clean bolts (3 and 4) and washer (7). Use cloth (E120) damp with acetone (E20). Wear gloves (E186).

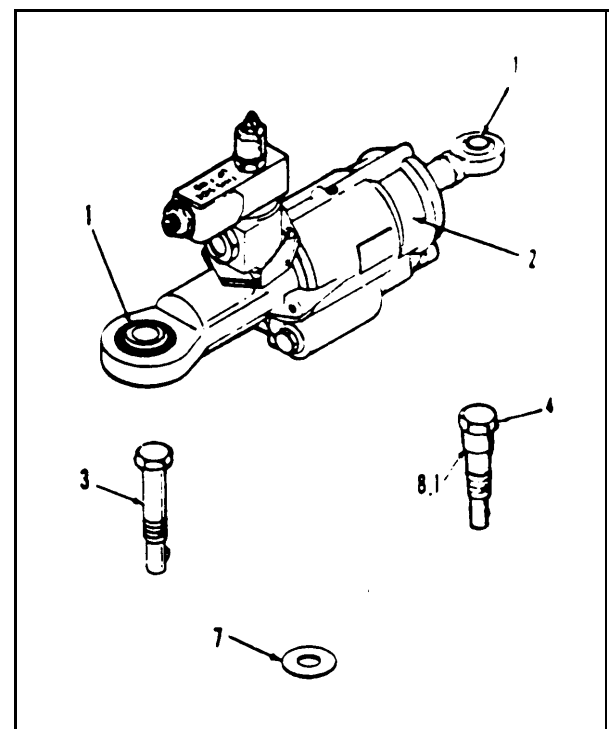

GO TO NEXT PAGE



**INSTALL ABSORBER WITHOUT 50 OR WITH 58**



**WARNING**

Antiseize compound (E75) can form toxic vapors if exposed to flame. Use in well-ventilated area, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

3. Coat inside diameter of two bushings (9 and 9.1), the shank of bolts (3 and 4), and sliding bushing (5). Use a very light coat of antiseize compound (E75). Wear gloves (E186).
4. Have inspector verify that sliding bushing (5) is correctly installed in lower inboard lug (10). Install if necessary.

**INSTALL ABSORBER WITH 50**

- 4.1 Coat inside diameter of two bushings (5 and 5.1), the shank of bolts (3 and 4), and bushings (9 and 9.1). With a very light coat of anti-seize compound (E75). Wear gloves (E186).
- 4.2 Have inspector verify that bushings (5 and 5.1) are installed in lower inboard lug (10).
- 4.3 Have inspector verify that bushing (9) does not protrude above or below and is tight in upper lug (10). Use straight across surfaces of lug.

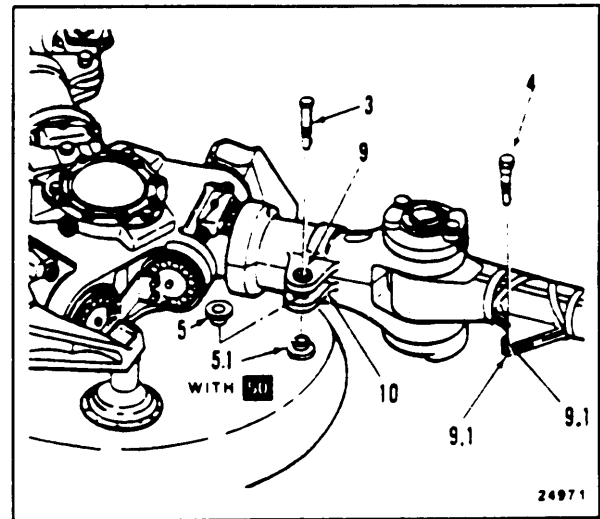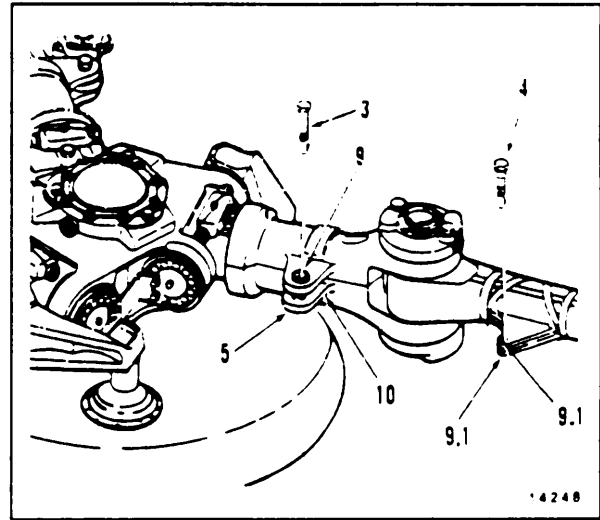

GO TO NEXT PAGE

5-93. INSTALL SHOCK ABSORBER (Continued)

5-93

**CONNECT SHOCK ABSORBER AT INBOARD LUGS WITHOUT 50 AND WITH 58**

**WARNING**


Make sure blade is supported by sling during installation. Otherwise, damage to helicopter or injury to personnel could result.

**CAUTION**

Do not mix elastomeric bearings with Teflon bearings on inboard end of shock absorbers with 45. If elastomeric bearings are installed in inboard end of shock absorber, bushings 114H6803-5 must be installed in shock absorbers.

**NOTE**

Aircraft/rotor heads with 58 installed or "SK" behind the part number can have either elastomeric or Teflon bearing shock absorber/lag dampers installed. Bolt (3) can either be part number BACB30ST12-39, or 145R3119-3, or bolt 145R3650-4 with the bushing removed from the bolt.

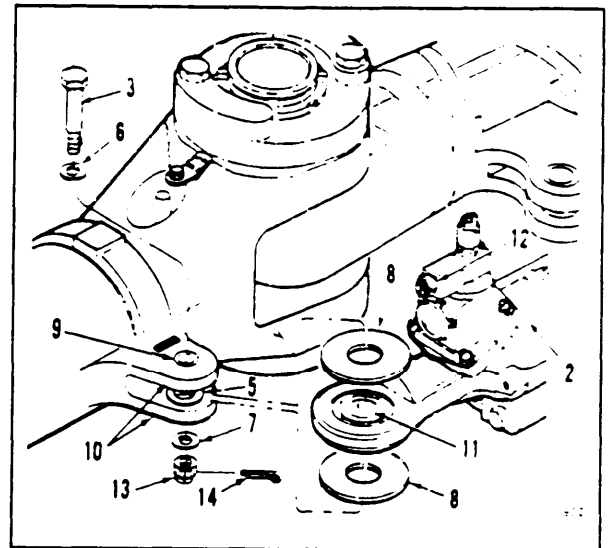


**CAUTION**

- 5. **Install shock absorber (2) with bearing (11) and two Teflon washers (8) between inboard lugs (10). Face sight indicator (12) up and inboard.**
- 6. Install countersunk washer (6) on bolt (3), with countersink toward bolthead.
- 6.1 Before torquing bolts for shock absorbers with 45 position the blade over the tunnel cover and install the lead lag tool (T72). This removes the load of the blade and prevents uneven torquing with elastomeric bearings.
- 7. Align holes in lugs (10) and bearing (11). install bolt (3) and washer (7).
- 7.1 Check that there is no antiseize compound on thread of nut (13). Install nut on bolt (3). **Torque nut to 110 to 250 foot-pounds.** Install cotter pin (14). Washer (7) may be added to align cotter pin.
- 7.2 Check that Teflon washers (8) are not caught between bearing (11) and bushings (5 or 9). After torque application, the Teflon washers must be free to turn.


5-93 INSTALL SHOCK ABSORBER (Continued)

- 7.3. Check that there is a gap between washer (7) and lower bushing (9).

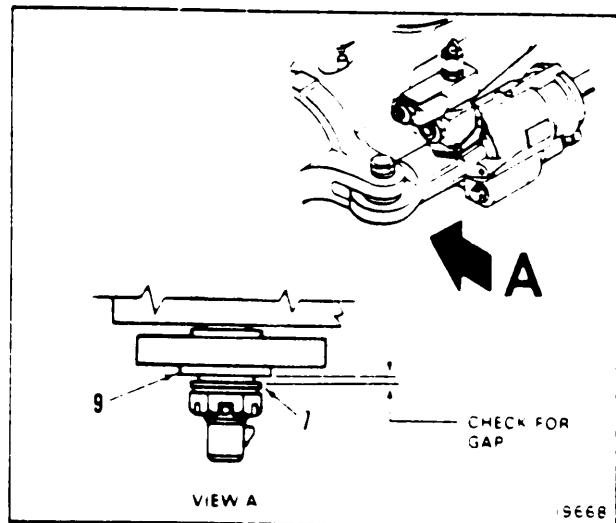

**CONNECT SHOCK ABSORBER AT INBOARD LUGS WITH 50**

- 7.4 Install shock absorber (2) with bearing (11) between reboard lugs (10). Face sight indicator (12) up and inboard.
- 7.5. Align holes in lug (10) and bearing (11). Install bolt (3), washer (7) and nut (13). **Torque nut to 100 to 135 foot-pounds.** Install cotter pin (14). Washer (7) may be added to align cotter pin.

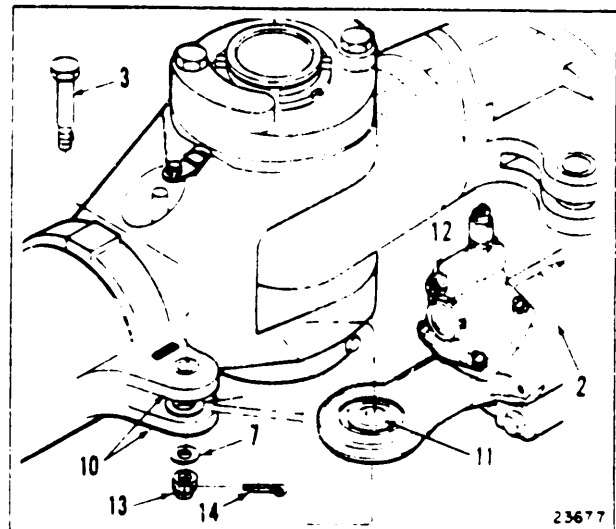

GO TO NEXT PAGE

**5-93. INSTALL SHOCK ABSORBER (Continued)**

5-93

**CONNECT SHOCK ABSORBER AT OUTBOARD LUGS**

8. Check that bushing (15) is installed in lower lug (16).

**NOTE**

Positive retention bolts are installed in shock absorber bearings. These bolts require special torque (Task 1-14).

- 8.1. Coat bushings (15 and 15.1) with a very light coat of antiseize compound (E75).

**CAUTION**


**Antiseize compound on thread of bolt or nut may result on over-torquing.**

9. **Install rod-end bearing (17) between outboard lugs (16 and 18).** Align holes in lugs and bearing. Install bolt (4).

**NOTE**

A gap between top of bracket (18) and flange of bushing (15.1) is allowed. Bushing may contact bolt head.

- 9.1. Check that there is no antiseize compound on thread of nut (19).
10. **Install nut (19). Torque nut to 60 to 100 foot-pounds.** Install cotter pin (20).

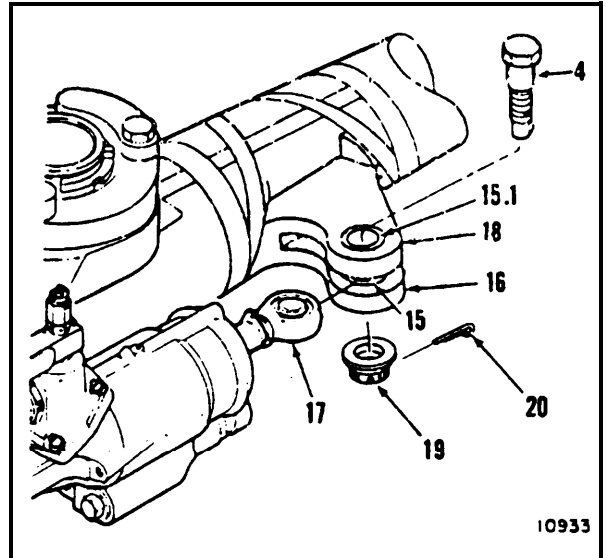

**GO TO NEXT PAGE**

11. If required, position vent valve (21) for forward or aft installation as follows:

**NOTE**


On forward head, vent valve marking THIS SIDE UP FWD must face up. On aft head, vent valve marking THIS SIDE UP AFT must face up.

- a. Remove lockwire. Remove bolt fitting (22) and valve body (23). Allow body to lift from tank (24) and turn with fitting.
- b. Remove packing (25). Remove fitting (22) and packing (26).
- c. Coat fitting (22), hole (27), and packings (25 and 26). Use hydraulic fluid (E197).

**CAUTION**

Do not install packings in wrong places. Packing at head of fitting is thicker and smaller in diameter than packing under body. Leakage can occur if packings are installed in wrong places.

- d. Install packing (26) on fitting (22).
- e. Position body (23) with markings up for head where shock absorber (28) is installed.
- f. Install fitting (22) in body (23). Seat packing.
- g. Install packing (25) on fitting (22).
- h. Screw fitting (22) and body (23) halfway into tank (24). Let body turn.
- i. Position body (23) so index lug (29) on tank (24) is between lugs (30). Screw (31) will face inboard. Hold body. Screw fitting (22) all the way into tank.
- j. Lockwire cap (32) and fitting (22) to lugs (33). Use lockwire (E231).

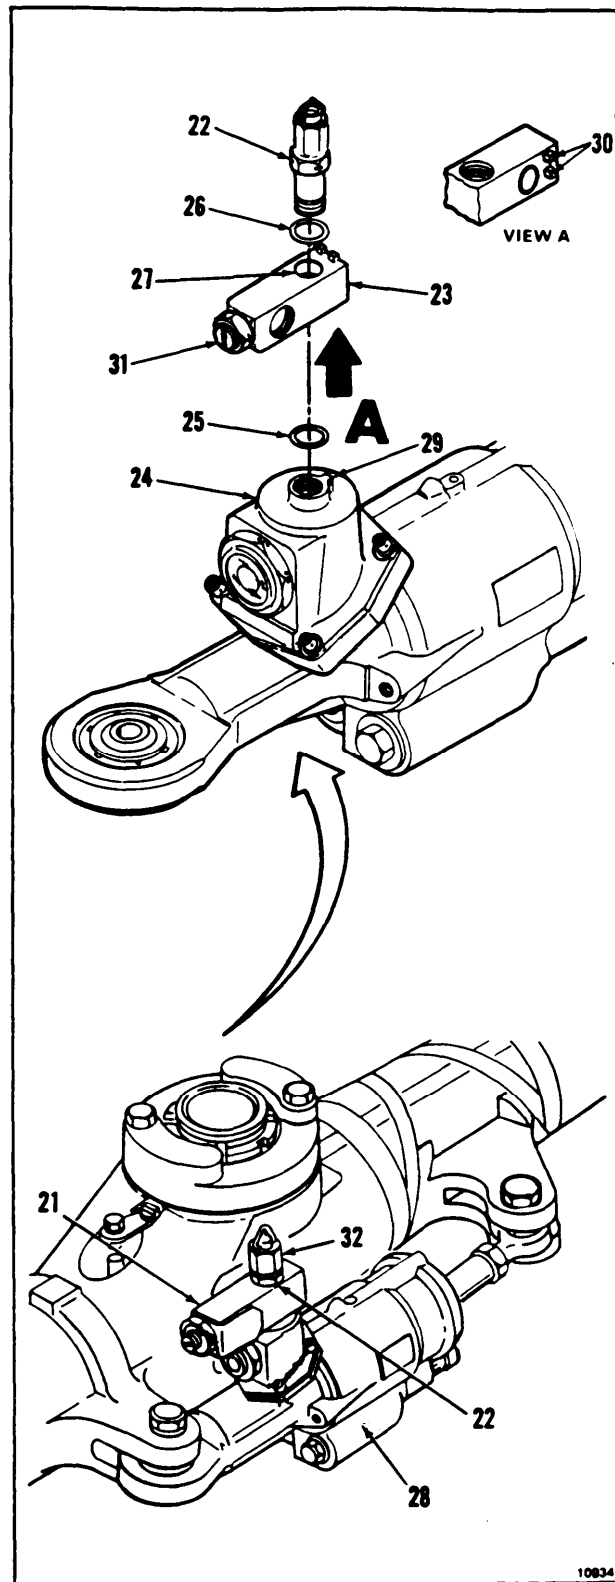

10834


## 5-93 INSTALL SHOCK ABSORBER (Continued)

5-93

**WARNING**


Vent valve must be open for operation below 0°F (-18°C). Valve must be closed for operation above 30°F (-1°C). Dangerous ground and flight conditions can result if valve is in wrong position. At 0°F (-18°C) to 30°F (-1°C) valve may be open or closed.

12. If operational temperatures are 0°F (-18°C) or lower, open vent valve (21) as follows:
  - a. Remove lockwire. Loosen nut (22) on adjustment screw (23).
  - b. Turn screw (23) clockwise to close valve (21) completely. Turn screw counterclockwise 1/2-turn to open valve.
  - c. Torque nut (22) to 25 inch-pounds. Lockwire nut to screw (23). Use lockwire (E231).
  
13. If operational temperatures are 30°F (-1°C) or higher, close vent valve (21) as follows:
  - a. Repeat step 12a.
  - b. Turn screw (23) clockwise to close valve completely.
  - c. Repeat step 12c.

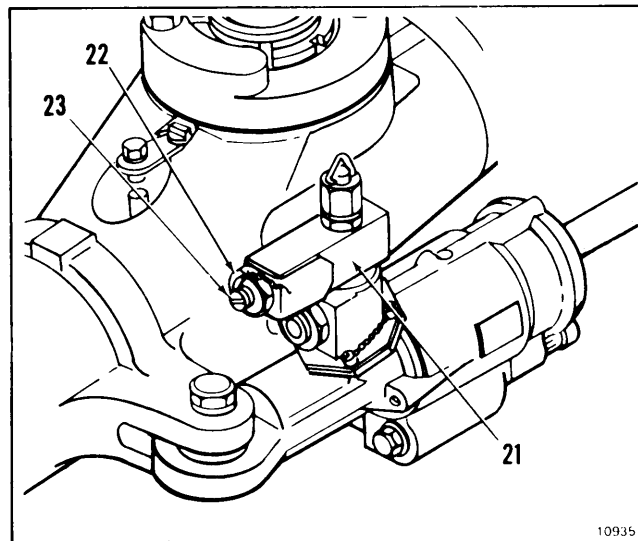

## FOLLOW-ON MAINTENANCE:

- Remove sling from blade.
- Remove tiedown lines from blade over fuselage (Task 1-26).
- Close work platforms (Task 2-2).

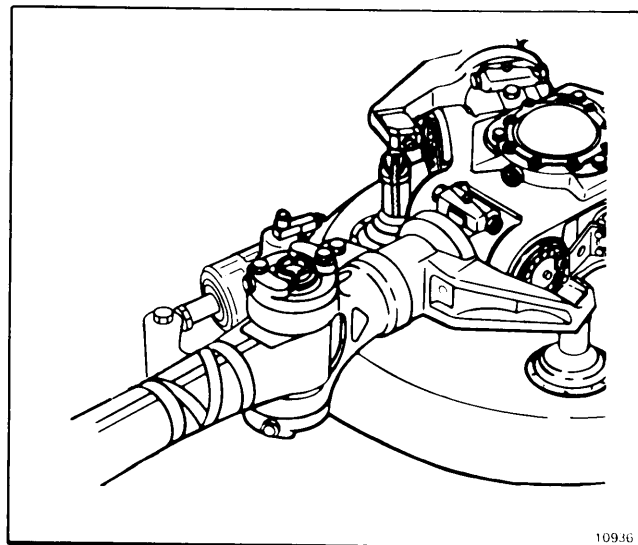

END OF TASK

**SECTION V**  
**MAIN ROTOR CONTROLS**

## 5-94 ADJUST PITCH LINK

5-94

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Torque Wrench, 700 to 1600 Inch-Pounds  
Crow-Foot Wrench

**Materials:**

Lockwire (E231)

**Parts:**

Cotter Pin

**Personnel Required:**


67U10 Medium Helicopter Repairer (4)  
67U20 Medium Helicopter Repairer  
67U30 Inspector

**Equipment Condition:**

Electrical Power On  
Hydraulic Power On  
Battery Connected (Task 1-39)  
AFCS System Select Switch Off  
Tiedown Lines Installed on One Forward and  
One Aft Blade (Task 1-26)  
Work Platforms Open as Required (Task 2-2)


**General Safety Instructions:****WARNING**

Do not move controls when  
adjusting pitch links, Serious  
injury to personnel can result.

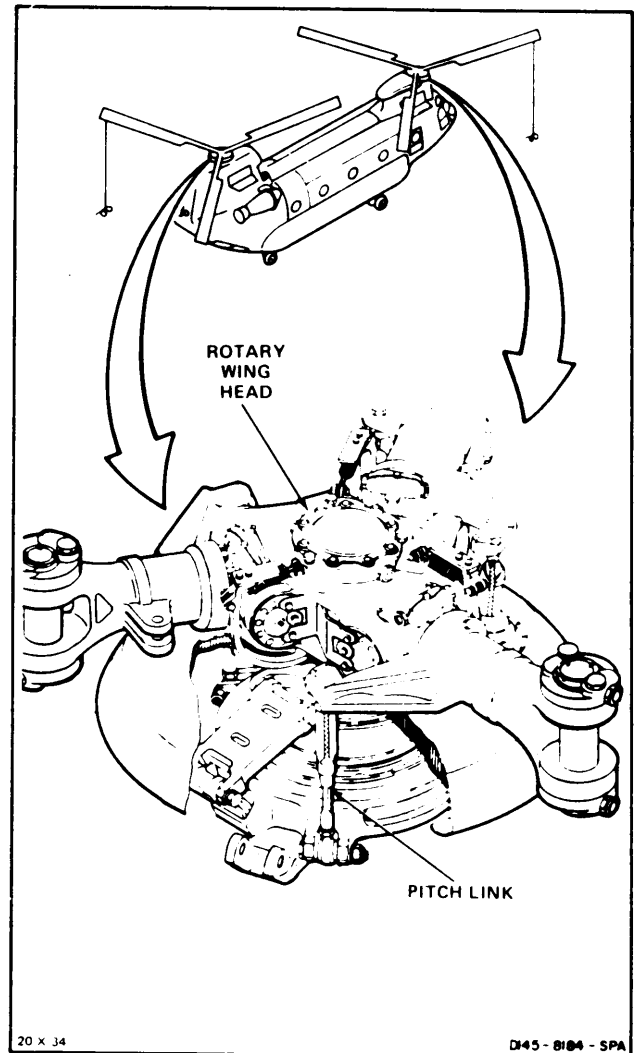**NOTE**

Procedure is same to adjust forward  
or aft pitch links. Aft pitch link is  
shown in task.

1. Center blade (1) over tunnel (2). Tie down one forward and one aft blade (3).

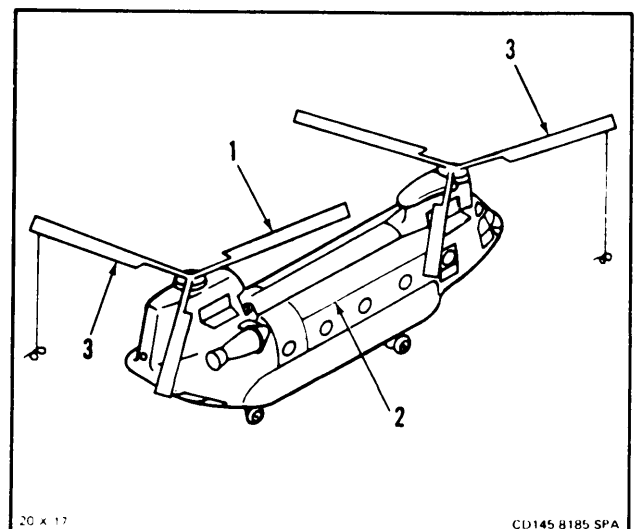
**GO TO NEXT PAGE**




**WARNING**

Restrain blades when thrust control is raised or lowered to prevent injury to personnel and damage to the aircraft. Aft blade can hit the strobe light when thrust control is full up.

2. Raise thrust control (4) all the way up.

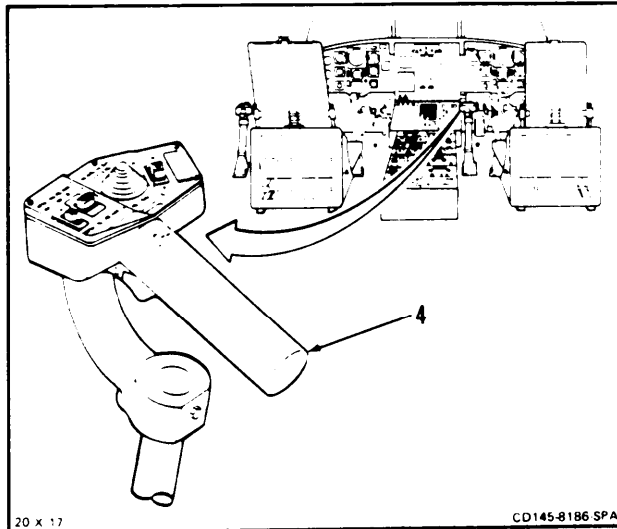

3 Cut ties (5) on pitch link boot (6). Pull zipper (7) down.

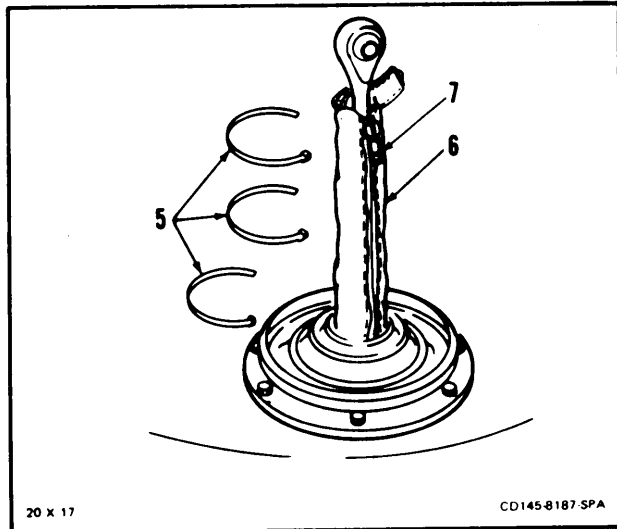

**GO TO NEXT PAGE**


**5-94 ADJUST PITCH LINK (Continued)****5-94**

4. Adjust pitch link (8) as follows:
- Remove lockwire and two cotter pins (9).

**CAUTION**

In order to keep from shearing pin in center of pitch link hold rod end closest to the nut and loosen.

- Hold rod end (10) closest to the nut and turn upper checknut (11) to loosen.
- Hold rod end (12) closest to the nut and turn lower checknut (13) to loosen.

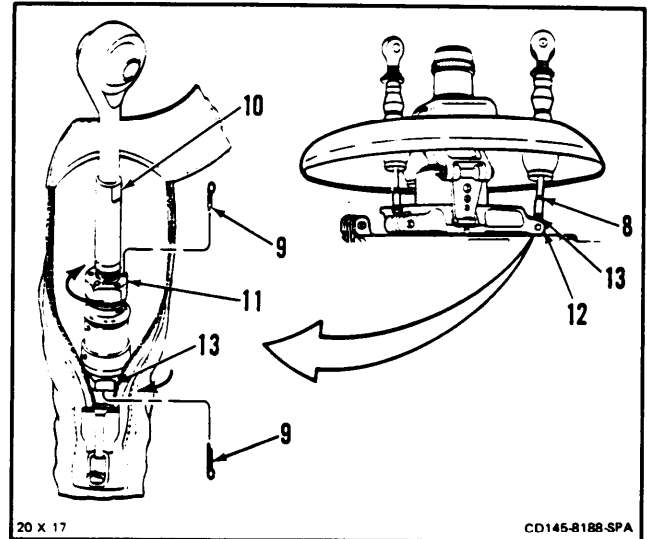**GO TO NEXT PAGE**

- d. Have helpers raise blade (1).
- e. Turn turnbuckle (14) toward (-) symbol to shorten pitch link (8). Turn turnbuckle toward (+) symbol to lengthen pitch link.
- f. Check that rod ends (10 and 12) are installed deep enough to close inspection holes (15).

**CAUTION**

In order to keep from shearing pin in center of pitch link hold rod end closest to the nut and loosen.


- g. Hold rod end (10) closest to the nut and torque checknut (11). Hold rod end (12) closest to the nut and torque checknut (13). **Torque checknuts to 1050 to 1300 inch-pounds.**

- h. Have helpers lower blade (1).

**CAUTION**


Do not bend cotter pin ends outside of indicator sleeves. Pitch link boot can be damaged.

- i. Install two cotter pins (9) through checknuts (11 and 13) and indicator sleeves (16).
- j. Install lockwire (E231) from sleeve (16) through hollow pin (17) to prevent movement of turnbuckle (14) in (+) direction. Cut lockwire at pin.

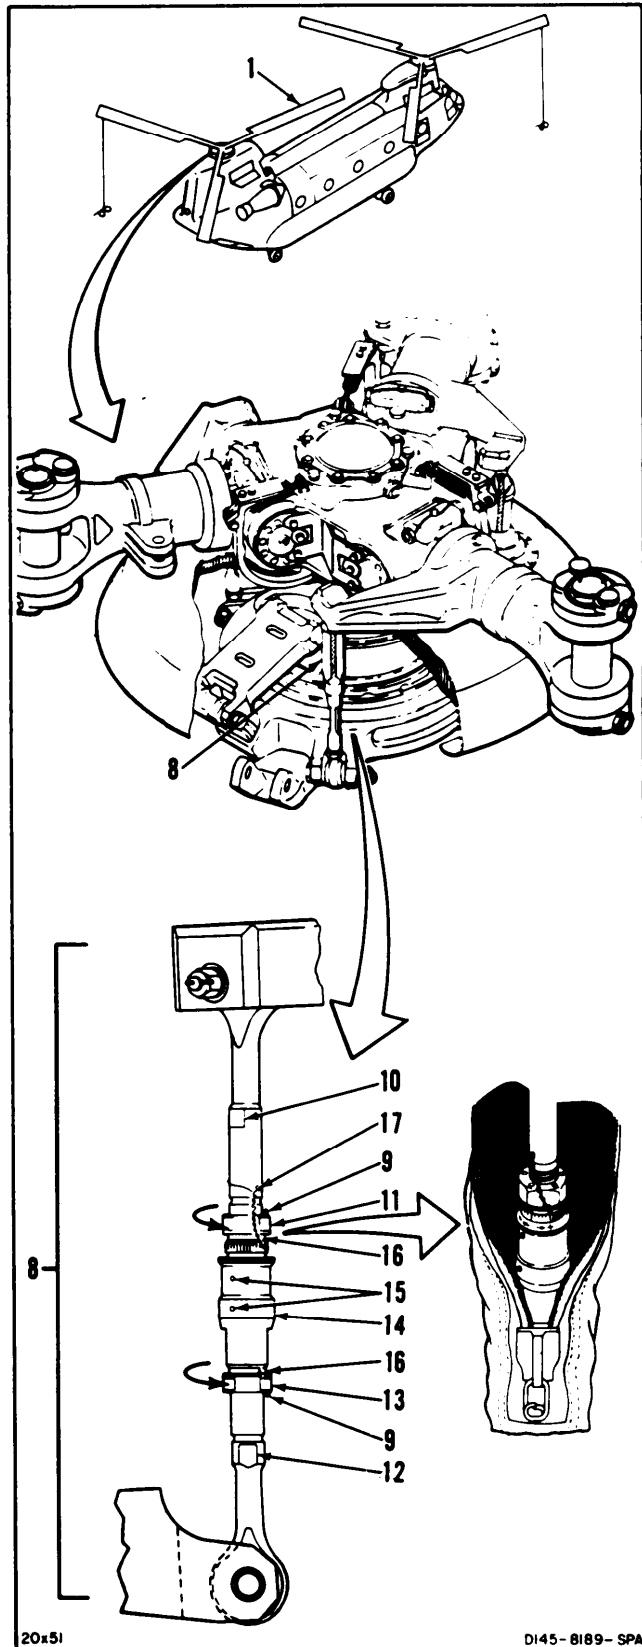**INSPECT**

**GO TO NEXT PAGE**

5-352 Change 25

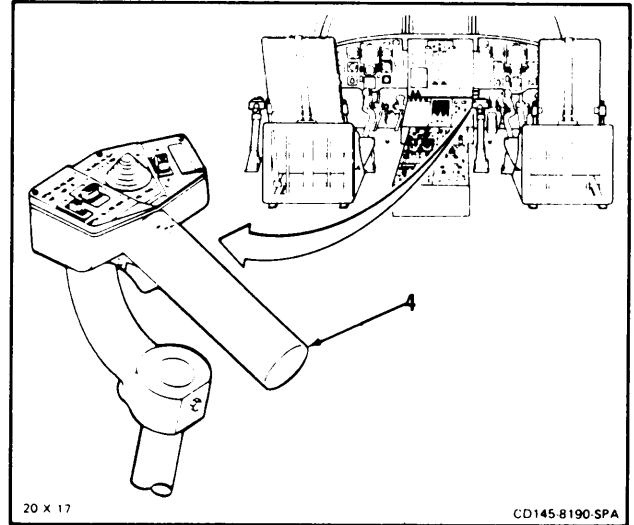**5-94 ADJUST PITCH LINK (Continued)****5-94****5. Lower thrust control (4).****FOLLOW-ON MAINTENANCE:**

- Install pitch link boot (Task 5-135).
- Close work platforms (Task 2-2).
- Electrical power off.
- Hydraulic power off.
- Ground track blades (Task 5-140).
- Check autorotation % rpm (Task 5-144)

**END OF TASK**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Torque Wrench, 100 to 750 Inch-Pounds

**Materials:**

Antiseize Compound (E75)  
Protective Gloves (E186.1)

**Parts:**

Cotter Pins  
Bolts

**Personnel Required:**

Medium Helicopter Repairer (5)  
Inspector

**References:**


TM 55-1520-240-23P  
Task 1-14

**Equipment Condition:**

Electrical Power On  
Hydraulic Power On  
Battery Connected (Task 1-39)  
Afcs System Select Switch Off  
Tiedown Lines Installed on One Forward and  
One Aft Blade (Task 1-26)  
Work Platforms Open as Required (Task 2-2)  
Cockpit Flight Controls in Neutral Position (Task  
11-33)  
Safety Blocks (T31) Installed at Dual Actuating  
Cylinders (Task 11-28)

**General Safety Instructions:****WARNING**

Antiseize compound (E75) can form toxic vapors if exposed to flame. Use in well-ventilated area, away

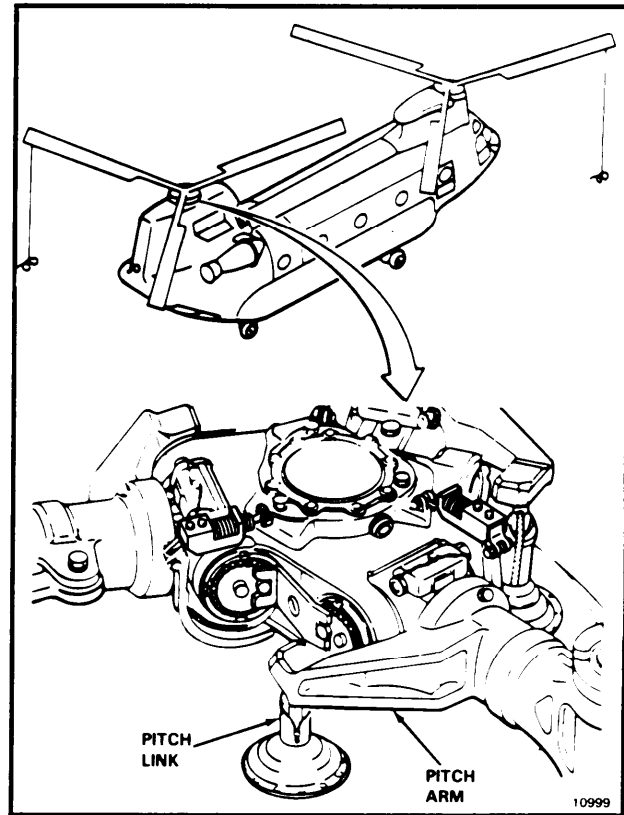

from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**

Do not disconnect either end of a pitch link unless the blade load is removed from the pitch link. Injury to personnel and damage to equipment can occur if a pitch link is disconnected without the blade load being supported by other means.

## 5-94.1 REPLACE PITCH LINK BOLTS (Continued)

5-94.1


## NOTE

- Procedure is same to install forward or aft pitch links. Aft pitch links are shown in task.
- Positive retention bolts are installed in pitch links. They have a pawl which prevents nut or bolt removal unless the pawl is depressed (Task 1-1 4).

Position **blade (1)** with bolt to be replaced **over tunnel (2)**. Tie down one forward and one aft blade **(3)**.

## NOTE

- There may be two different five digit codes marked on the part. The five digit code 81996 is not the manufacturers CAGE Code. If found the number 81996 identifies the part as having been manufactured in accordance with government technical data package (TDP).
- If any bolts part number is 114R3650-13, identify the five digit manufacturers code or manufacturers name on the bolt head. If the bolt head is marked with one of the following CAGE Codes or manufacturers name listed below, the 114R3650-13 bolt is serviceable.
  - (A) CAGE Code 84256 (Avibank Manufacturing Co.)
  - (B) CAGE Code 77272 (Boeing)
- If any bolts part number is 114R3650-15, identify the five digit manufacturers code or manufacturers name on the bolt head. If the bolt head is marked with one of the following CAGE Codes or manufacturers name listed below, the 114R3650-15 bolt is serviceable.
  - (A) CAGE Code 56878 (SPS Technologies Inc.)
  - (B) CAGE Code 84256 (Avibank Manufacturing Co.)
  - (C) CAGE Code 77272 (Boeing)
- If any 114R3650-13 or 114R3650-15 bolt is unserviceable, or if the CAGE Code or manufacturers name cannot be identified, remove and replace the unserviceable 114R3650-13 or 114R3650-15 bolt with a serviceable 114R3650-16 or 114R3650-17 bolt.

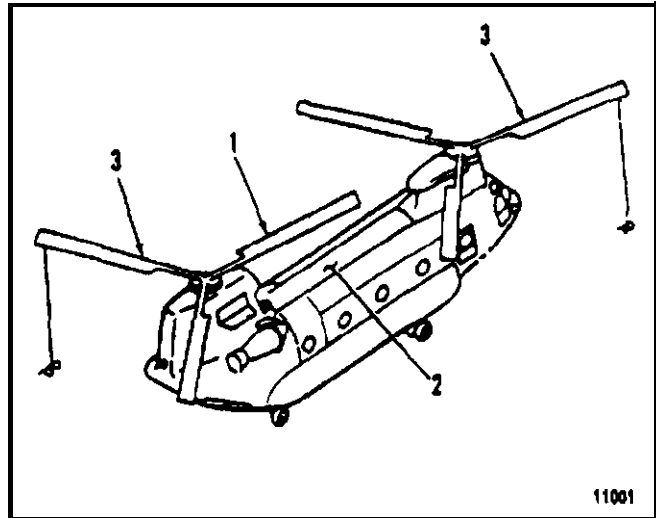

GO TO NEXT PAGE

**REPLACE LOWER BOLT**

2. **Remove** cotter pin (4), nut (5), and washer (6) from bolt (7) in swashplate (8). Do not remove the bolt at this time.

**NOTE**

Do not lubricate thread.

3. Apply antiseize (E75) to sleeve (9) and shank (10) of new bolt (7). Wear gloves (E186.1)
4. Have helpers lift blade (1) to permit removal of bolt (7). Remove bolt and limiter (11)
5. Check that bushings (12) and (13) remain installed. Install new bolts (7), head toward direction of rotation, and limiter (11).
6. On helicopters with **46** and without **63** check that serrations on bearing (14) engage serrations on bushing (13).
7. Install washer (6) and nut (5) on bolt (7). Torque nut to 400 to 600 inch-pounds. Install cotter pin (4). Lower blade (1).

**REPLACE UPPER BOLT**

8. Remove cotter pin (15), nut (16), and washer (17) from bolt (18) in the pocket of pitch arm (19). Do not remove the bolt at this time.

**NOTE**


Do not lubricate thread.

9. **Apply antiseize compound** (E75) to sleeve (20) and shank (21) of new bolt (18). Wear gloves (E186.1).
10. Have helpers **lift blade** (1) to permit removal of bolt (18). **Remove the bolt.**
11. **Install new bolt (18), with head outboard, and limiter (22).** Check that bushings (23) and (24) remain installed.
12. Install washer (17) and **nut (16)** on bolt (18). **Torque the nut to 400 to 660** inch-pounds. Lower blade (1). Install cotter pin (15).

**INSPECT**

**FOLLOW-ON MAINTENANCE:**

- Remove safety blocks at servocylinders (Task 11-29)
- Remove electrical power.
- Remove hydraulic power.
- Close work platforms (Task 2-2).
- Remove tiedown lines from blades (Task 1-26).

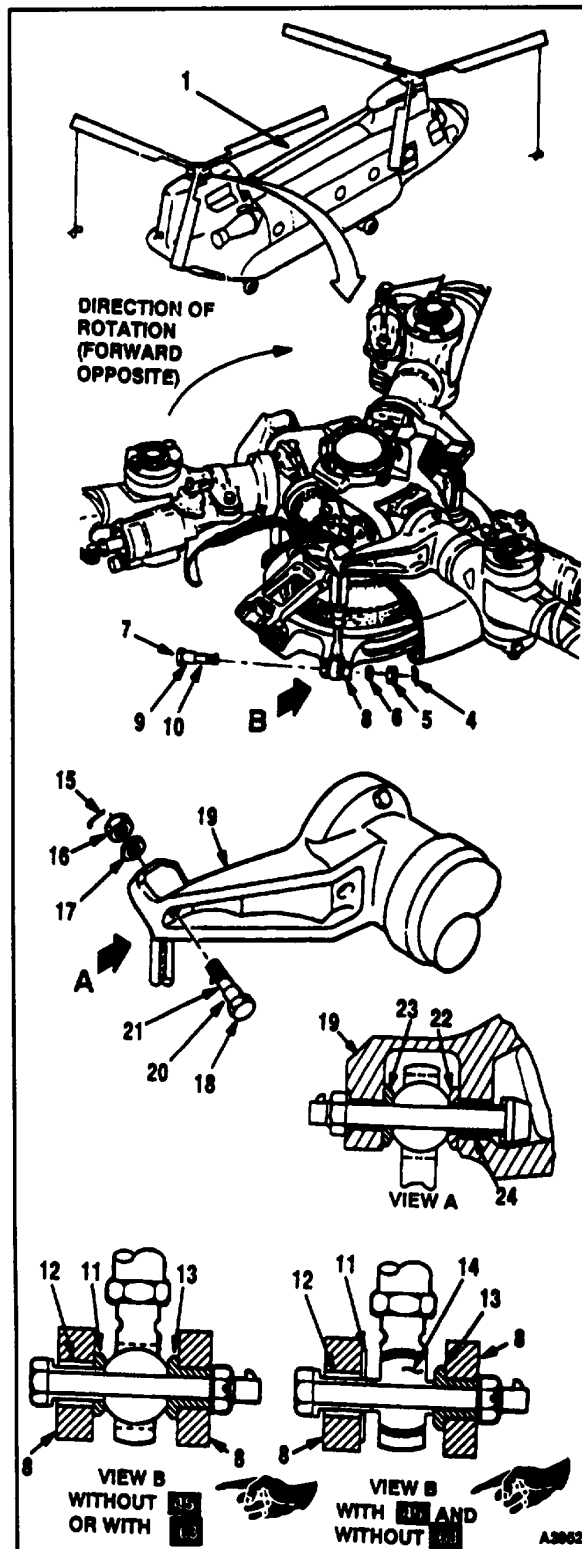

**END OF TASK**

**5-95 PREPARE PITCH LINK FOR STORAGE OR SHIPMENT****5-95**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**

Dry Cleaning Solvent (E162)

Cloth (E120)

Barrier Material (E80)

Waterproof Tape (E395)

Gloves (E186)

**Personnel Required:**

■ Medium Helicopter Repairer

**Equipment Condition:**


Off Helicopter Task

**WARNING**

Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with plenty of water for at least 15 minutes. Get medical attention for eyes.

**CAUTION**

Do not apply excess solvent (E162) to pitch link. Contaminants can wash into dry-type bearings.

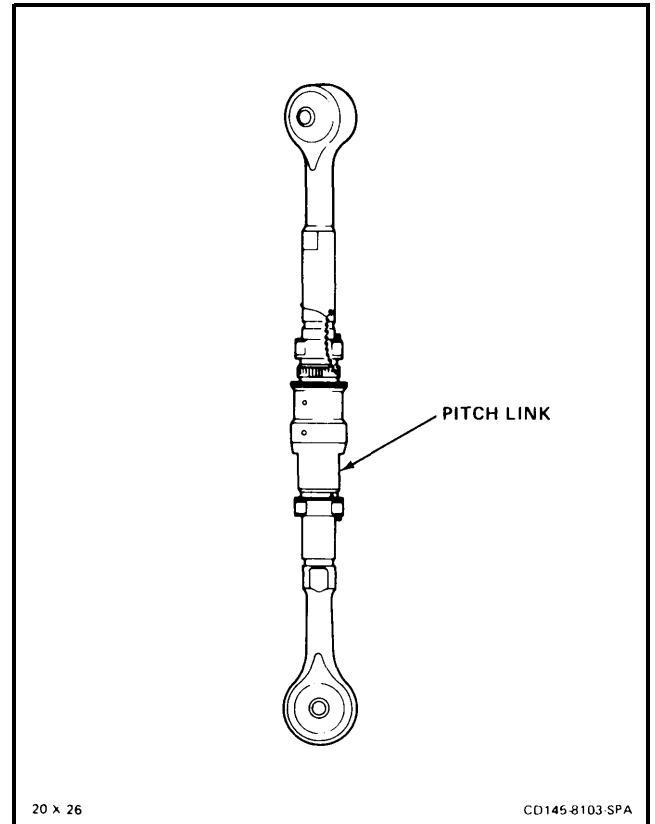**GO TO NEXT PAGE**






**5-95 PREPARE PITCH LINK FOR STORAGE  
OR SHIPMENT (Continued)****5-95****NOTE**

Procedure is same to prepare any pitch link for storage or shipment.

1. **Clean pitch link (1).** Use cloth (E120) damp with solvent (E162). Wear gloves (E186).
2. **Wrap pitch link (1)** tightly in barrier material (E80) (2). Seal with waterproof tape (E395) (3).

**FOLLOW-ON MAINTENANCE:**

None

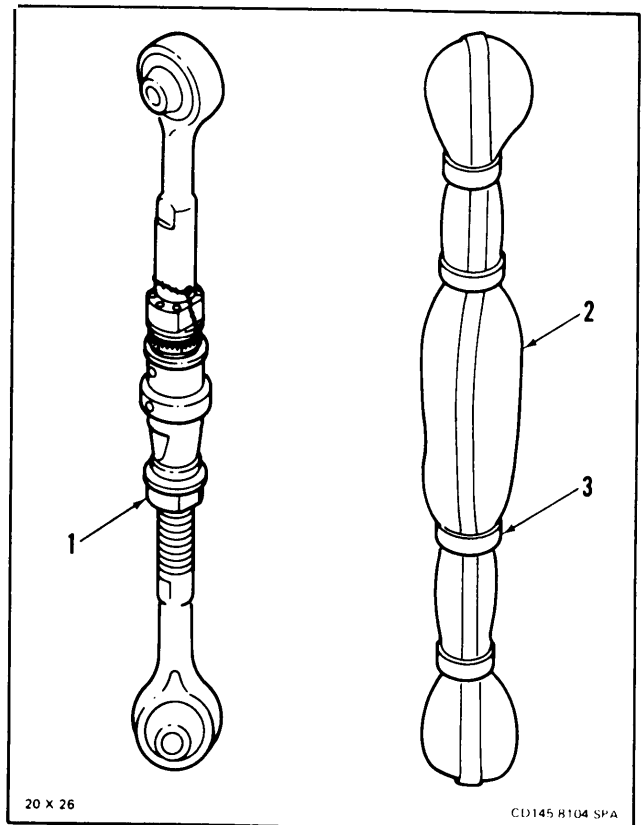**END OF TASK**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Vernier Caliper, 24-inch  
Assembly Fixture (T18)

**Materials:**

Lockwire (E231)

**Parts:**

Cotter Pins

**Personnel Required:**

Medium Helicopter Repairer  
Inspector

**Equipment Condition:**


Off Helicopter Task

**References:**

TM 55-1520-240-23P

**General Safety Instructions:****WARNING**

Do not stake either rod end. Do not place bearing in service with staked rod end. Staking can cause pitch link failure resulting in damage to helicopter and injury to personnel.

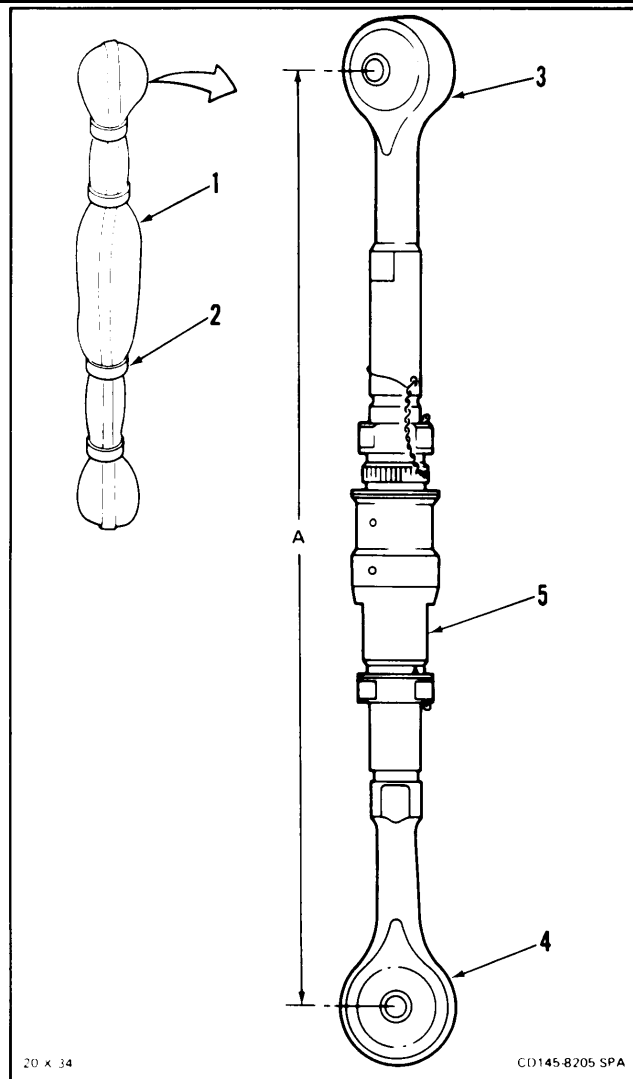

1. Remove barrier material (1) and tape (2).
2. **Measure distance A** between centers of holes in rod ends (3 and 4) on pitch link (5) to be replaced.

**NOTE**

If pitch link to be replaced is damaged and original length is changed, replacement link should be adjusted to 18.750 inches (aft) or 18.250 inches (forward) between rod end centers.

**GO TO NEXT PAGE**

5-356 Change 14

**5-96 PREPARE PITCH LINK FOR SERVICE (Continued)****5-96**


3. **Adjust replacement link (5)** so distance between centers of rod ends (3 and 4) is same as Distance A. Adjust as follows:

- a. Remove lockwire and two cotter pins (6) from checknuts (7 and 8).

**CAUTION**


**In order to keep from shearing pin in center of pitch link hold rod end closest to the nut and loosen.**

- b. Hold rod end (3) and turn upper checknut (7) to loosen.
- c. Hold rod end (4) and turn lower checknut (8) to loosen.
- d. Turn turnbuckle (9) toward - symbol to shorten pitch link (5). Turn turnbuckle toward + symbol to lengthen pitch link.
- e. Check that rod ends (3 and 4) are installed deep enough to close inspection holes (10). Do not torque checknuts (7 and 8) at this time.

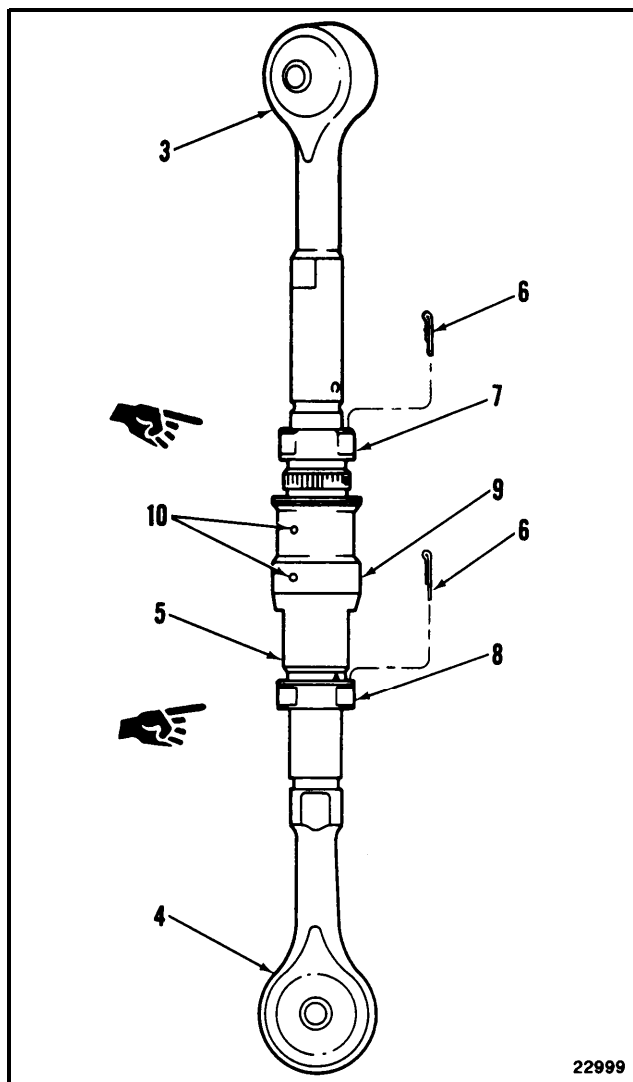**INSPECT****GO TO NEXT PAGE**

4. Position pitch link (5) on assembly fixture (T78) (11) as follows:

- a. Position block (12) for forward or aft link (5).
- b. Loosen hand knob (13). Move sliding angle (14) clear of fixed angle (15).
- c. Position pitch link (5) on fixture (11). Close sliding angle (14). Tighten hand knob (13).
- d. Install locating pins (16 and 17).

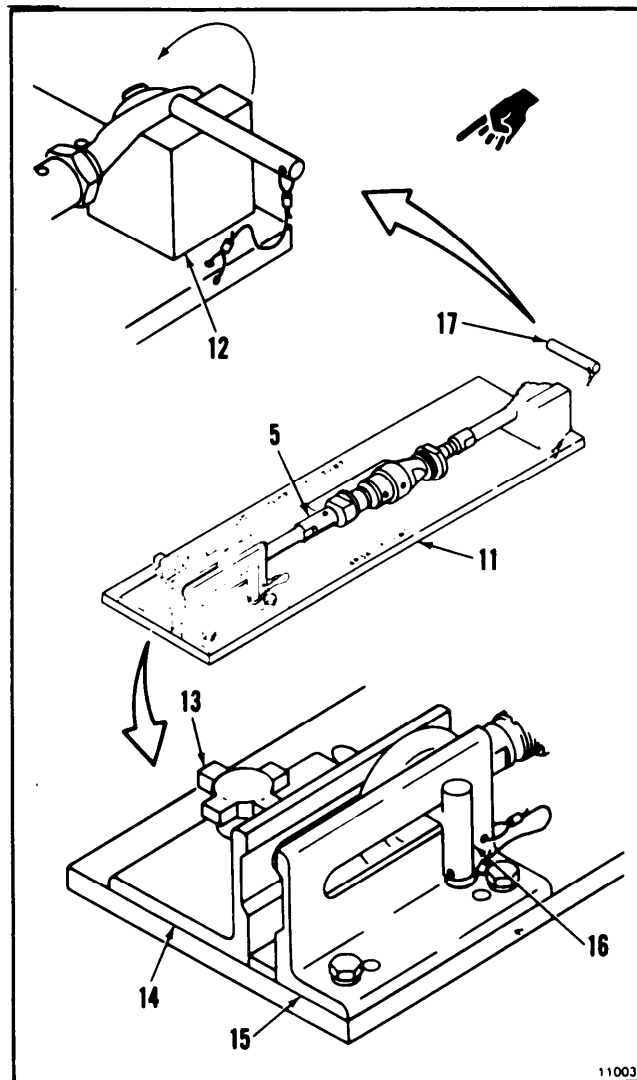

**GO TO NEXT PAGE**

5-358 Change 14

**CAUTION**


In order to keep from shearing pin in center of pitch link hold rod end closest to the nut and loosen.

5. Hold rod end (3) closest to the nut and turn upper checknut (7) to tighten. **Torque checknut to 1050 to 1300 inch-pounds.**
- 5.1. Hold rod end (4) closest to the nut and turn lower checknut (8) to tighten. **Torque checknut to 1050 to 1300 inch-pounds.**
6. Install cotter pins (6). Keep split ends within outside of indicator sleeves (18) to avoid boot damage.
7. Lockwire turnbuckle (9) to hole in pin (19). Use lockwire (E231).
8. **Remove pitch link (5) from assembly fixture (T78) (11) as follows:**
  - a. Remove pins (16 and 17).
  - b. Loosen hand knob (13). Move sliding angle (14) clear.
  - c. Remove pitch link (5).

**INSPECT**

FOLLOW-ON MAINTENANCE:

None

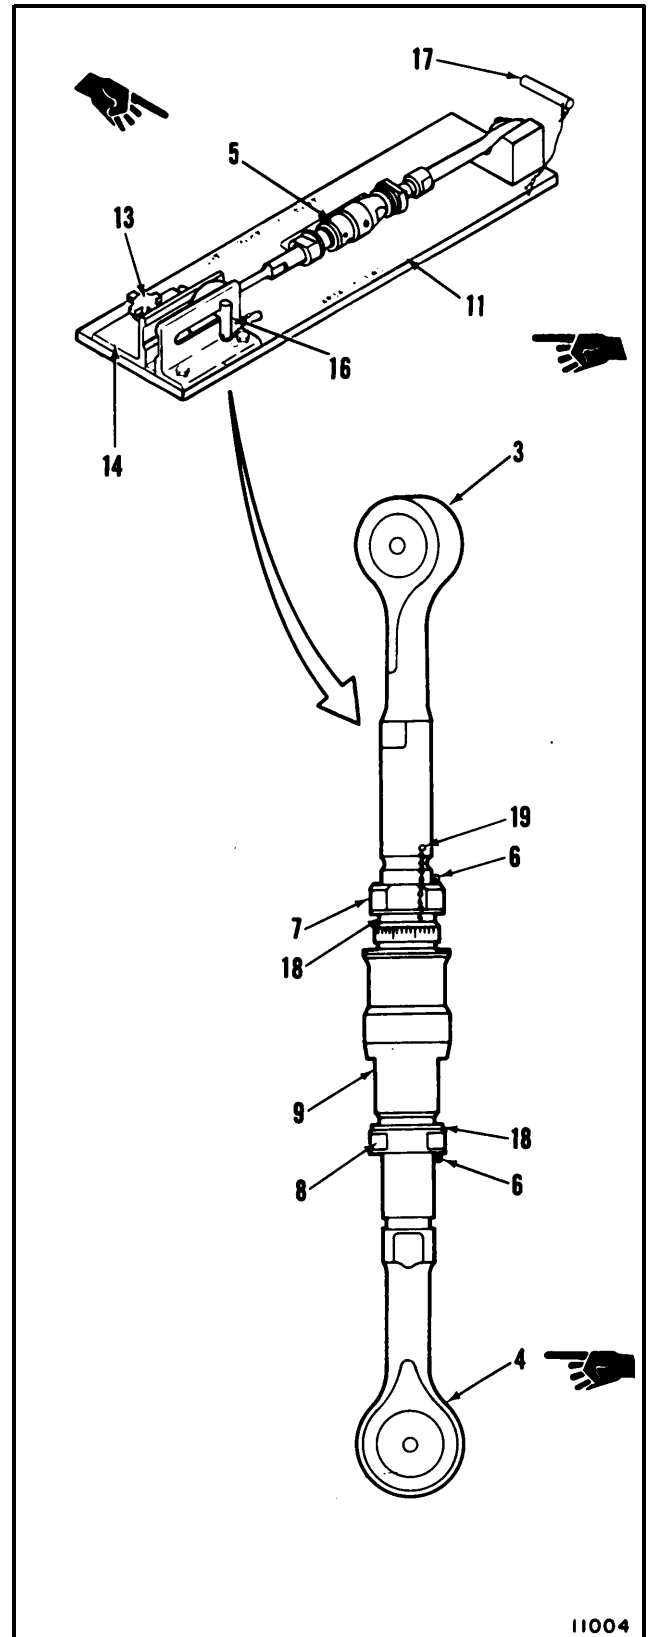

END OF TASK

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,

NSN 5180-00-323-4692

Lockpin (T22)

**Materials:**

None

**Personnel Required:**

Medium Helicopter Repairer (5)

**References:**

Task 5-97

**Equipment Condition:**

Battery Disconnected (Task 1-39)

Electrical Power Off


Hydraulic Power Off

Tiedown Line on One Forward and One Aft

Blade (Task 1-26)


Forward or Aft Work-Platform Open (Task 2-2)

Pitch Links Disconnected (Task 5-97)

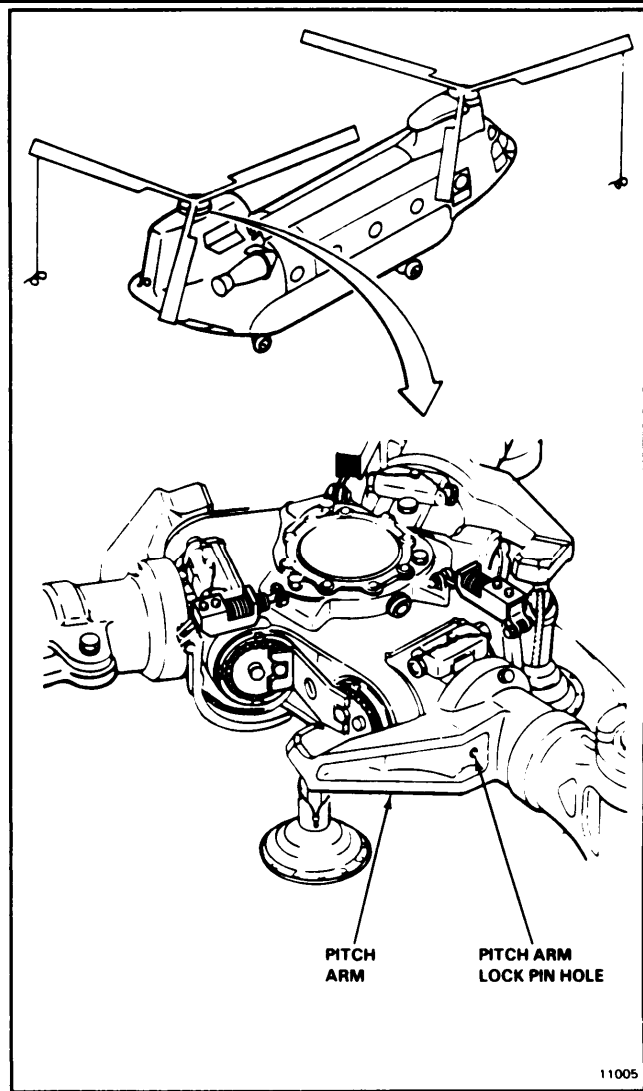**NOTE**

Procedure is same to install pitch lock pins in any pitch arm on either forward or aft rotary wing head. Installation of pitch lock pin on pitch arm of aft rotary wing head is shown.

1. **Position blade to be locked (1) over tunnel (2).** Tie down one forward and one aft blade (3).

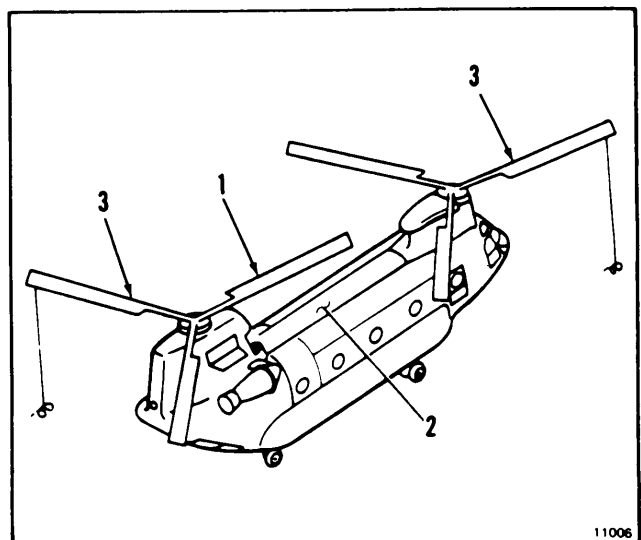


**5-96.1 INSTALL PITCH LINK LOCKPINS — POWER OFF (Continued) 5-96.1**


2. Have helpers lift and twist blade (1) as required to align holes in pitch arm (4) and pitch shaft (5).
3. Install pitch link lockpin (6).
4. Carefully lower blade (1).

**CAUTION**

Do not let the pitch lockpin stay in the pitch arm with the pitch link installed. If the rotary-wing head is turned or the apu started when both a pitch lockpin and pitch link are installed at the same pitch arm, damage to components will occur.

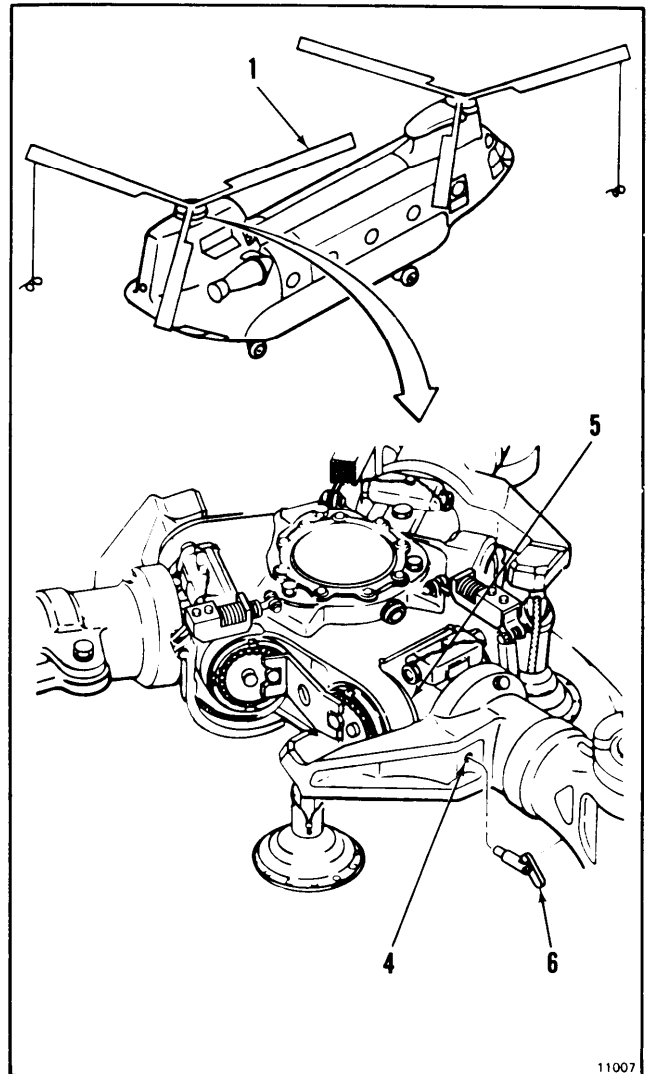**FOLLOW-ON MAINTENANCE:**

None

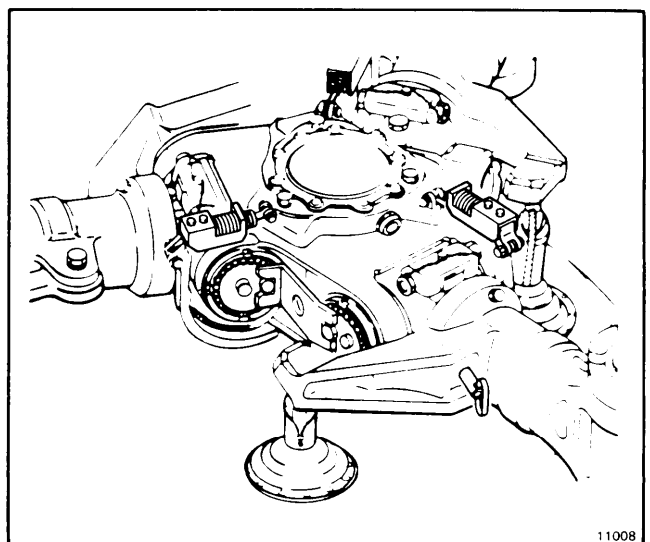**END OF TASK**



## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Lockpin (T22)

**Materials:**

None

**Personnel Required:**


Medium Helicopter Repairer (5)

**References:**

Task 5-99


**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Tiedown Line on One Forward and One Aft  
Blade (Task 1-26)  
Forward or Aft Work Platform Open (Task 2-2)

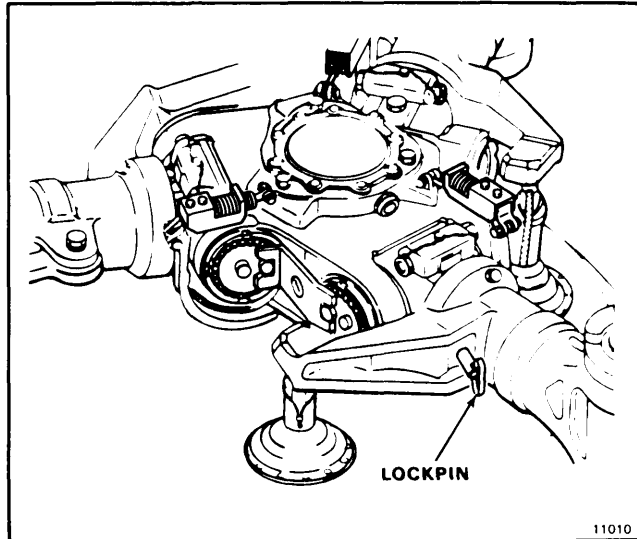**NOTE**


Procedure is same to remove pitch link lockpins in any pitch arm on either forward or aft rotary wing head. Removal of pitch lockpins on pitch arm of aft rotary wing head is shown.

1. Position locked blade (1) over tunnel
- (2). Tie down one forward and one aft blade
- (3).

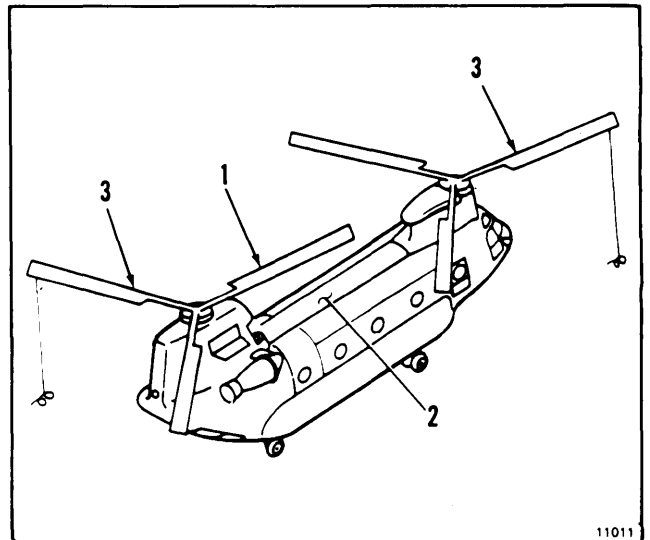

**5-96.2 REMOVE PITCH LINK LOCKPIN - POWER OFF (Continued) 5-96.2**

2. Have helpers lift and twist blade (1) as required to remove pitch link lockpin (4).
3. Remove pitch link lockpin (4).
4. Carefully lower blade (1).

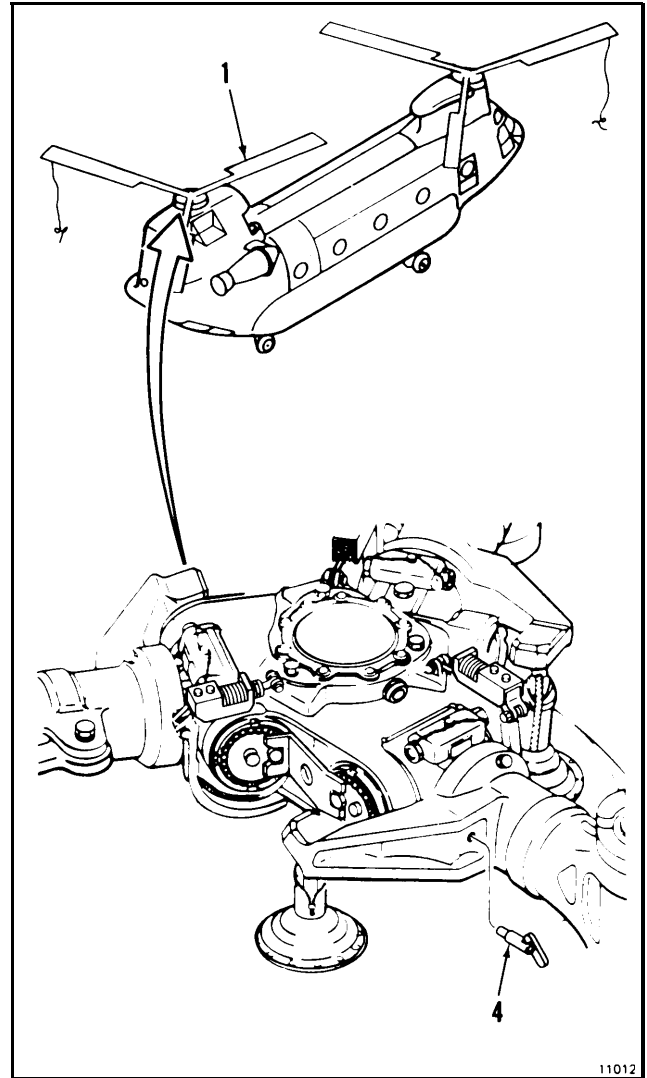**FOLLOW-ON MAINTENANCE:**

Connect pitch links (Task 5-99).

**END OF TASK**



## 5-97 REMOVE PITCH LINK

5-97

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Lockpin (T22)

**Materials:**


None

**Personnel Required:**

67U10 Medium Helicopter Repairer (4)  
67U20 Medium Helicopter Repairer


**Equipment Condition:**

Electrical Power On  
Hydraulic Power On  
Battery Connected (Task 1-39)  
AFCS System Select Switch Off  
Tiedown Lines Installed on One Forward and  
One Aft Blade (Task 1-26)  
Work Platforms Open as Required (Task 2-2)  
Cockpit Flight Controls in Neutral Position (Task  
11-33)  
Safety Blocks (T31) Installed at Dual Actuating  
Cylinders (Task 11-28)  
Pitch Link Boot Open as Required (Task 5-134)

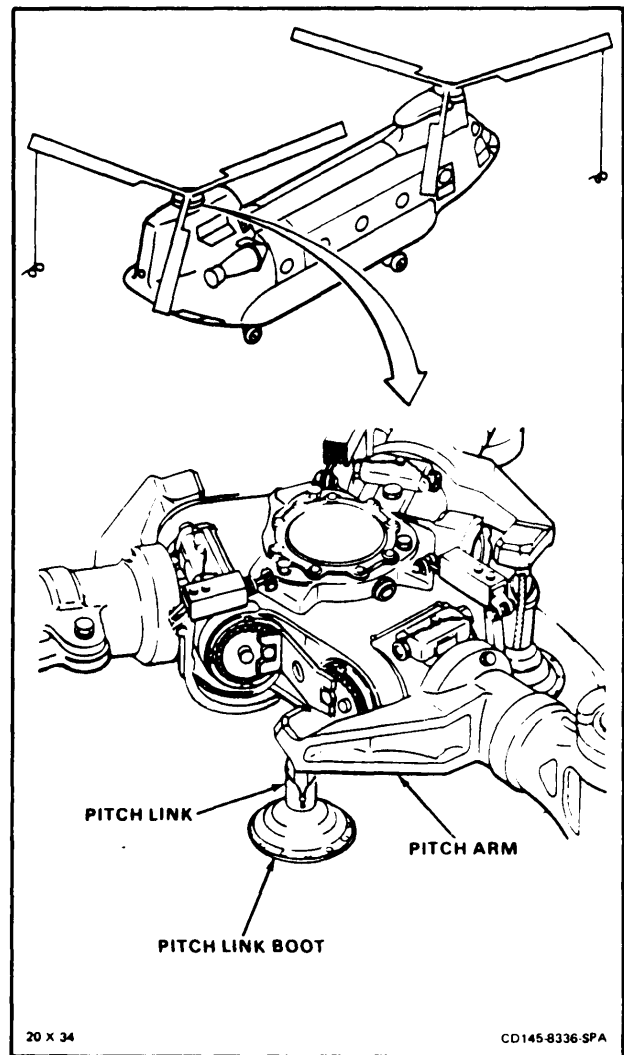**NOTE**

- Procedure is same to remove forward or aft pitch links. Aft pitch links are shown in task.
- Positive retention bolts are installed in pitch links. They have a pawl which prevents nut or bolt removal unless the pawl is depressed (Task 1-14).

1. Position blade (1) over tunnel (2). Tie down one forward and one aft blade (3).

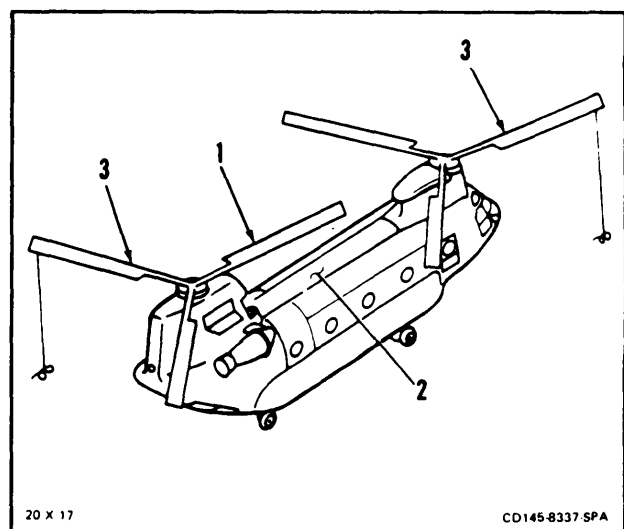**GO TO NEXT PAGE**

**WARNING**

Do not disconnect either end of a pitch link unless the blade load is removed from the pitch link. Injury to personnel and damage to equipment can occur if a pitch link is disconnected without the blade load being supported by other means.

**CAUTION**


On helicopters with **45** and without **63** the lower end of the pitch link must be disconnected first or damage to equipment may occur.

**DISCONNECT PITCH LINK LOWER END**

2. Remove cotter pin (4), nut (5), and washer (6) from bolt (7) in swashplate lugs (8). Do not remove the bolt.
3. Position blade (1) at center of lead-lag travel. Have helpers lift and support the blade. Remove bolt (7) and limiter (9).
4. Have helpers twist blade (1) as required to align holes in pitch arm (10) and pitch shaft (11). Install lockpin (12).
5. Remove the lower end of pitch link (13) from swashplate lugs (8). Lower blade (1).
6. Check that bushings (14) and (15) remain installed. Install bolt (7), with limiter (9), through swashplate lugs (8). Loosely install washer (6) and nut (5) on the bolt.

**DISCONNECT PITCH LINK UPPER END**

7. Remove cotter pin (16), nut (17), and washer (18), from bolt (19). Remove the bolt and limiter (20) from the pocket in pitch arm (10). Remove pitch link (13) from the pitch arm pocket.
8. Check that bushings (21) and (22) remain installed. Install bolt (19), with limiter (20) through the pocket of pitch arm (9). Loosely install washer (18) and nut (17) in the pocket of pitch arm (9).

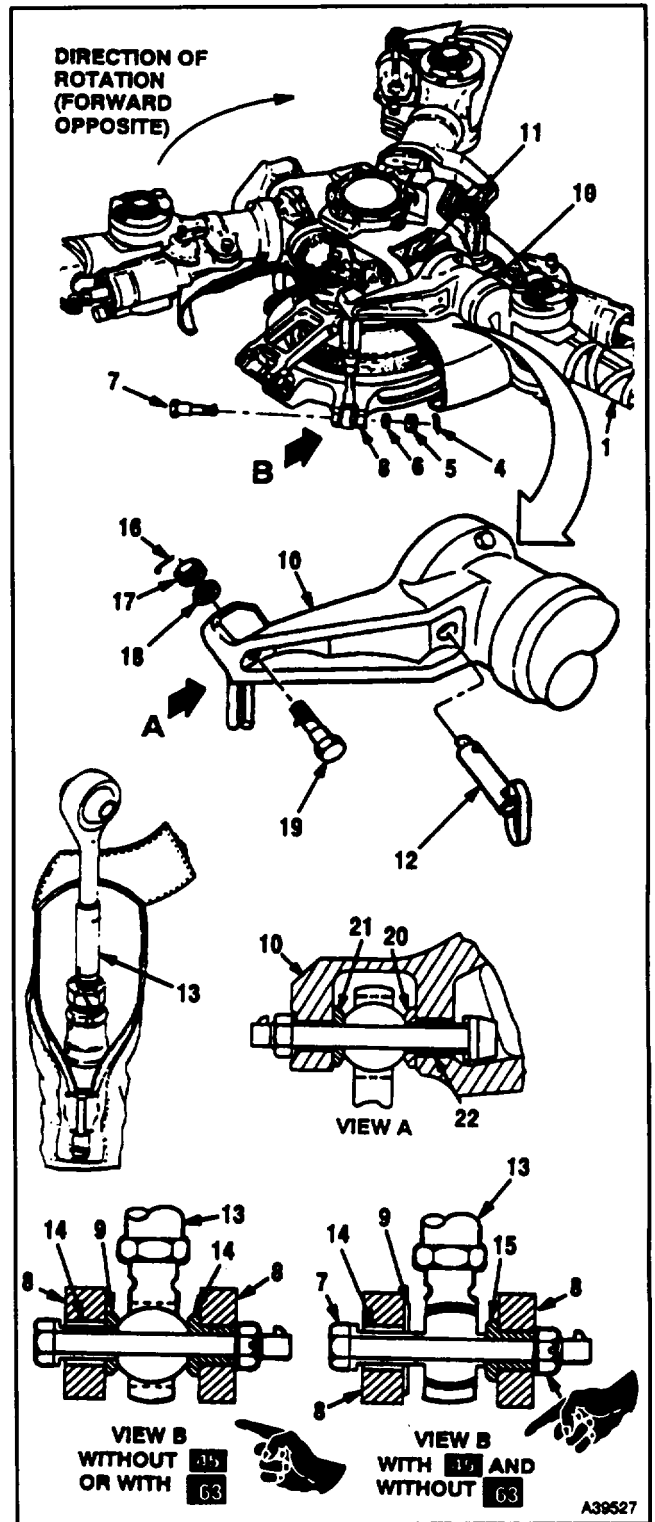


GO TO NEXT PAGE

**5-97 REMOVE PITCH LINK (Continued)**

**5-97**

**FOLLOW-ON MAINTENANCE:**

None

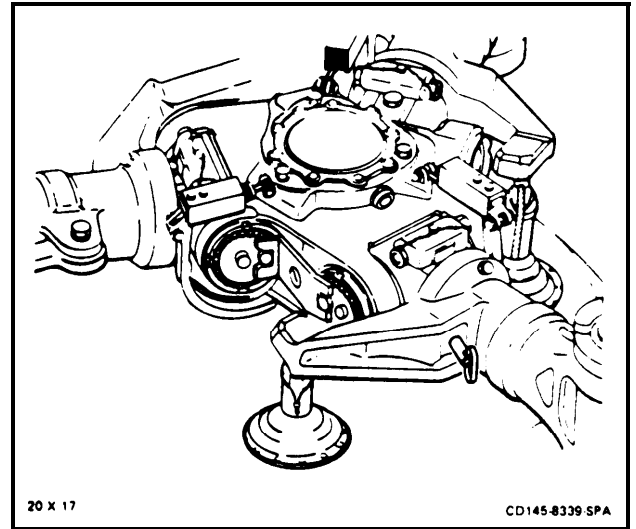

**END OF TASK**

**INITIAL SETUP**

**Applicable Configurations:**

Without 45 and With '

**Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114

**Materials:**

None

**Parts:**

Tie

**Personnel Required:**



Medium Helicopter Repairer (4)  
Inspector

**References:**

Task 5-97  
Task 5-98

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Forward or Aft Work Platform Open (Task 2-2)  
Tiedown Line Installed on One Forward and One  
Aft Blade (Task 1-26)

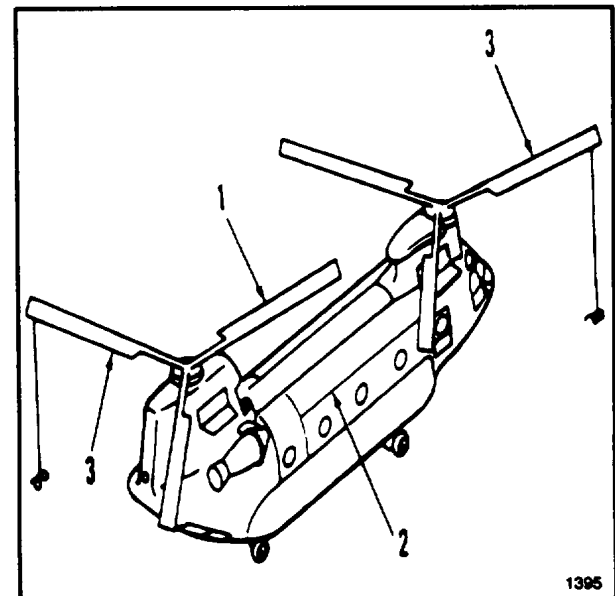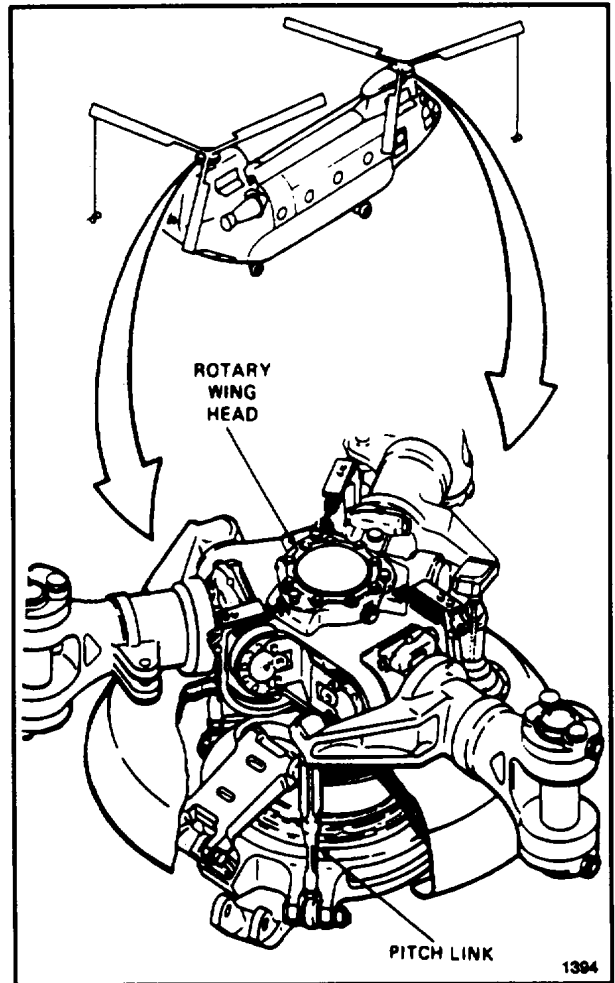

**NOTE**

- The procedure is same to inspect forward or aft pitch links. Aft pitch link is shown in task.
- This task will determine the total lost motion of a bearing, bolt, and bushings. If the check shows excessive lost motion, the bolt and bushings must be replaced and pitch link must be removed and checked (Task 5-98).

1. Position blade (1) over fuselage (2) centered in its lead/lag range. Tie down one forward and one aft blade (3).


GO TO NEXT PAGE

## 5-97.1 INSPECT PITCH LINK WITH TEFLON BEARINGS ON HELICOPTER (Continued)

5-97.1

### 2. Check for bond looseness in upper bearing (4) and lower bearing (5) as follows:


- a. Check that teflon liner (7) has not been squeezed out around bearing ball (6). If some cloth threads show, this is not always a sign of bond failure. If strings of fabric are coming out from around bearings (4 and 5), or if liner shows 1/32-inch or more, replace bearing (4 or 5) (Task 5-98) and go to FOLLOW-ON MAINTENANCE. If less than 1/32-inch of liner shows, go to step b.
- b. Have helpers support blade (1). Check pitch link rod end (8). If rod end is not centered on bearing ball (6), replace bearing (4 or 5) (Task 5-98). Shake rod end from side-to-side. Movement shows that the teflon liner (7) is worn or missing. Have helpers lower blade (1). Replace bearing (4 or 5) (Task 5-98). If rod end is centered and will not shake from side-to-side, go to FOLLOW-ON MAINTENANCE.

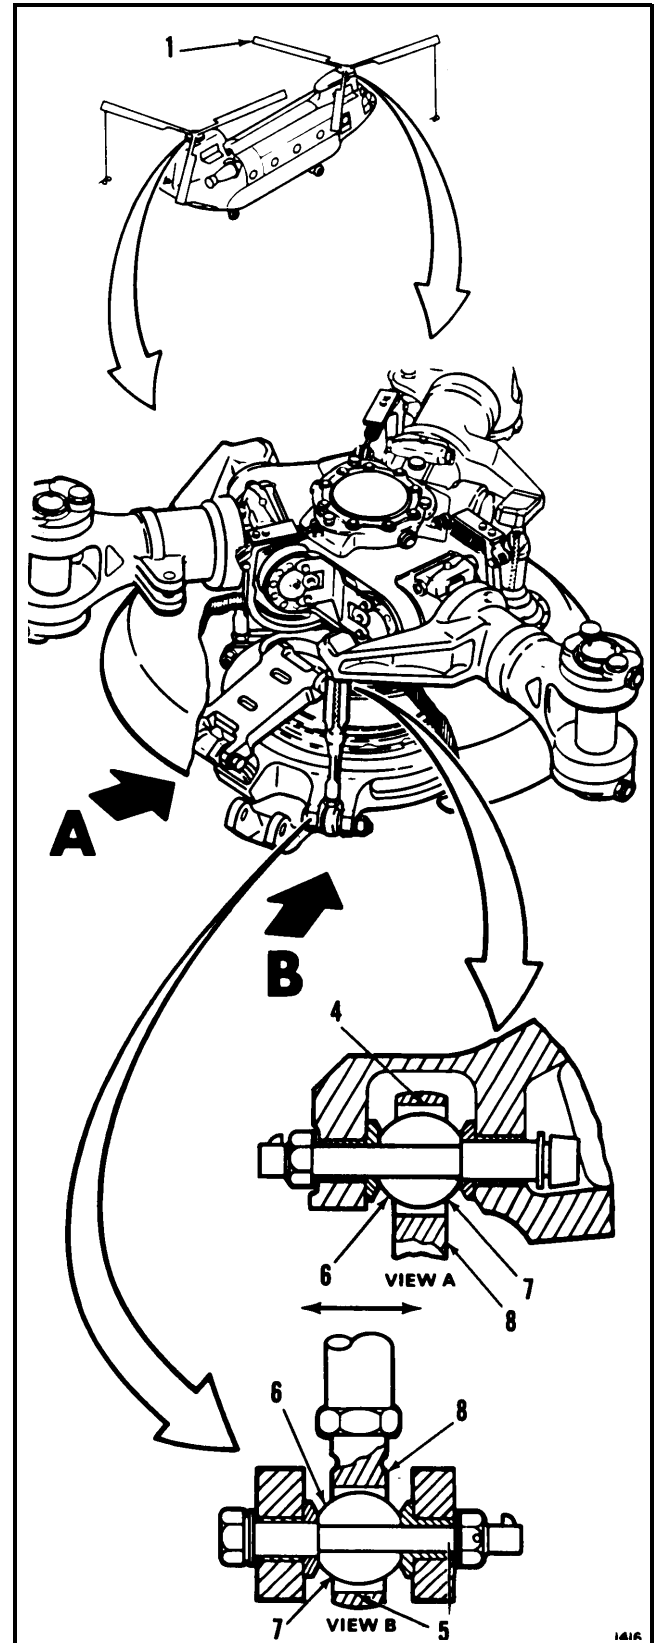

GO TO NEXT PAGE




3. Cut tie (9) on pitch link boot (10). Pull zipper (11) down.

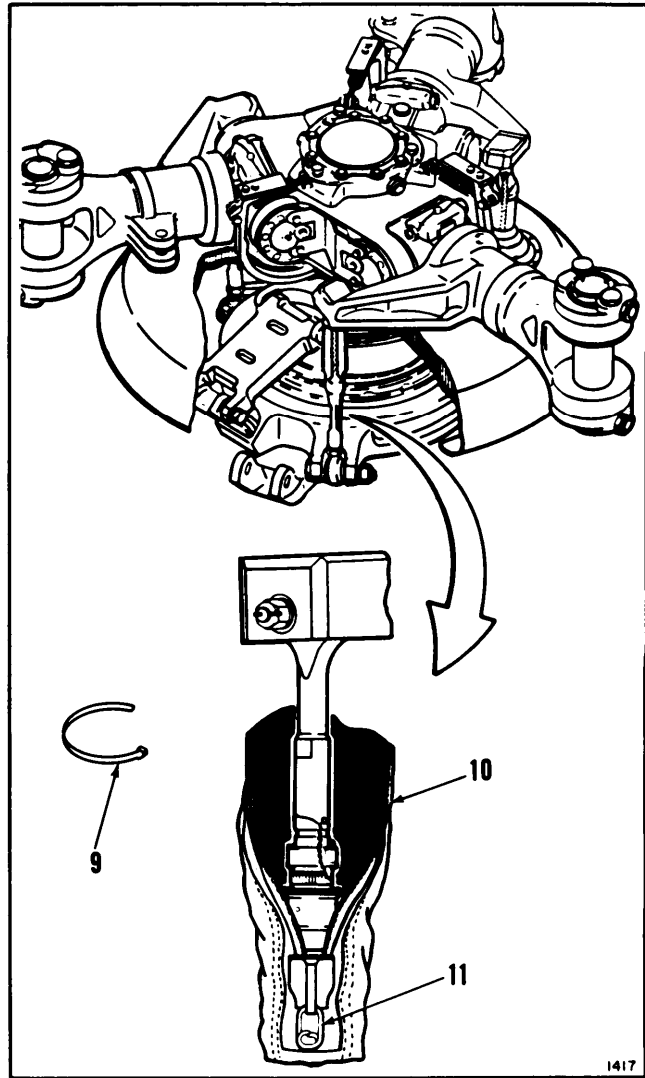

## 5-97.1 INSPECT PITCH LINK WITH TEFLON BEARINGS ON HELICOPTER (Continued)

5-97.1

4. To check upper bearing wear, clamp dial indicator (12) at upper end of pitch link (13) as shown.
5. Have helpers support and twist rotary wing blade (1) to raise pitch arm (14). Note dial indication. Have helpers twist blade to lower pitch arm. Note dial indication. Difference is total looseness.
6. Repeat step 5 two more times. Add total of three indications. Divide by 3.
7. Repeat steps 4, 5, and 6 for lower bearing (5). Remove dial indicator (12).
8. If dial indicator average in step 6 or step 7 is more than 0.010 inch, go to step 9. If dial indicator (12) shows 0.010 inch or less, go to FOLLOW-ON MAINTENANCE.

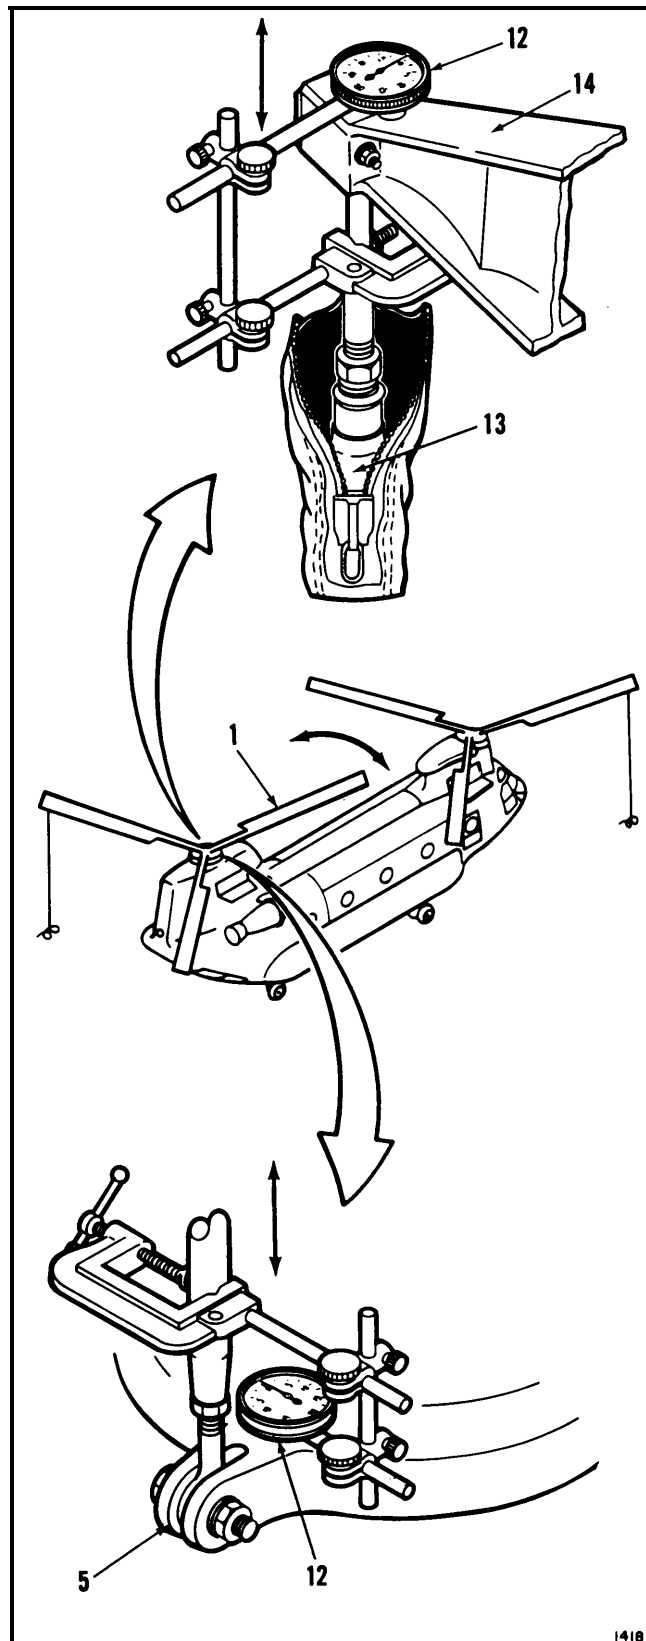

GO TO NEXT PAGE


**5-97.1 INSPECT PITCH LINK WITH TEFLON BEARINGS ON  
HELICOPTER (Continued)**

5-97.1

9. If dial indicator average in step 8 is more than 0.010 inch, remove pitch link (13) (Task 5-97) and **check bearing clearance (Task 5-98)**.
10. Pull zipper (11) up. Install tie (9) on pitch link boot (10).

**FOLLOW-ON MAINTENANCE:**

Close forward or aft work platform (Task 2-2).

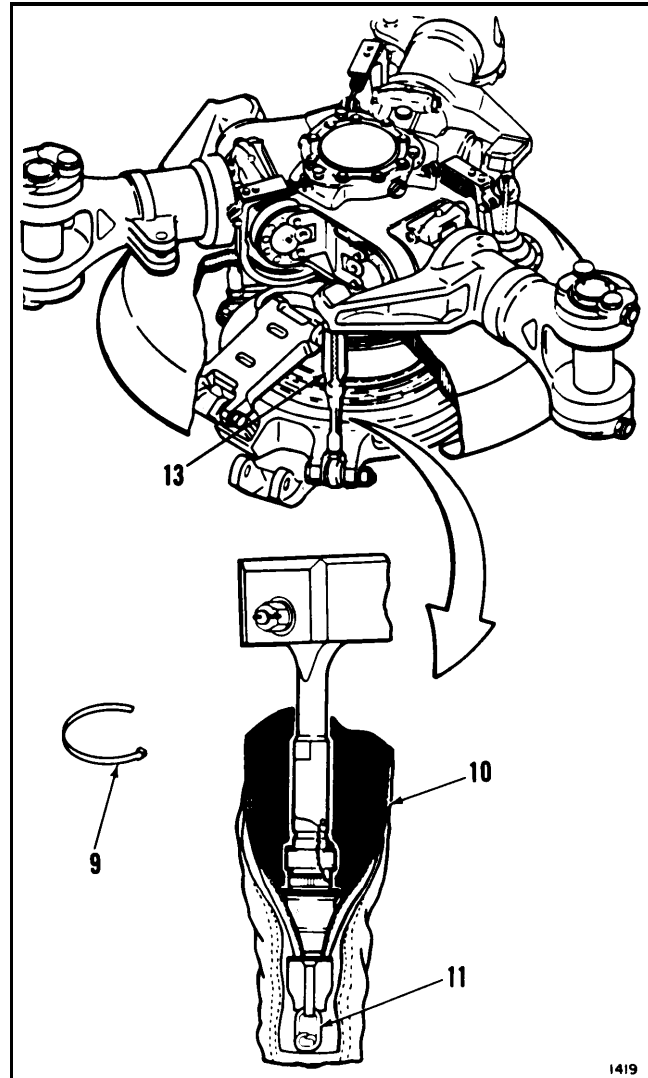**END OF TASK**

5-362.4 Change 25

## 5-97.2 INSPECT PITCH LINK WITH ELASTOMERIC BEARINGS ON HELICOPTER

5-97.2

### INITIAL SETUP

#### Applicable Configurations:

With **45** and Without **63**

#### Tools:

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114

#### Materials:

None

#### Parts:

Tie

#### Personnel Required:

Medium Helicopter Repairer (4)  
Inspector

#### References:

Task 5-97  
Task 5-98  
Task 5-99



#### Equipment Condition:

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Forward or Aft Work Platform Open (Task 2-2)  
Tiedown Line Installed on One Forward and  
One Aft Blade (Task 1-26)

### NOTE

- is same to inspect forward or aft pitch links with elastomeric lower bearings.
- procedure is only for pitch links with elastomeric lower bearings.

1. Position blade (1) over fuselage (2) centered in its lead/lag range. Tie down one forward and one aft blade (3).

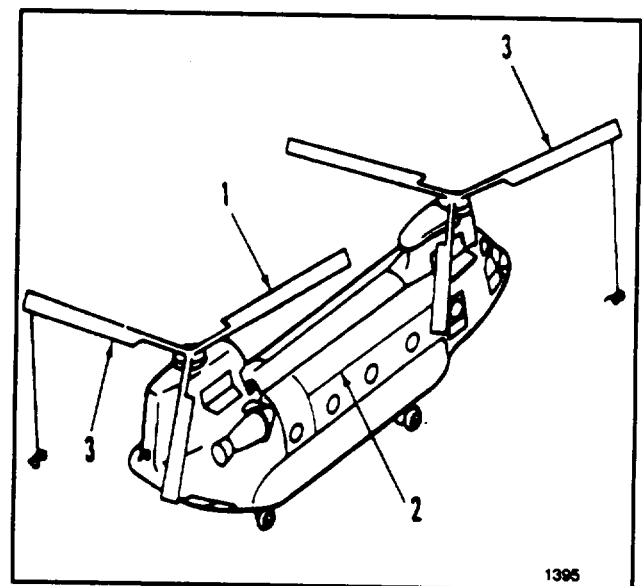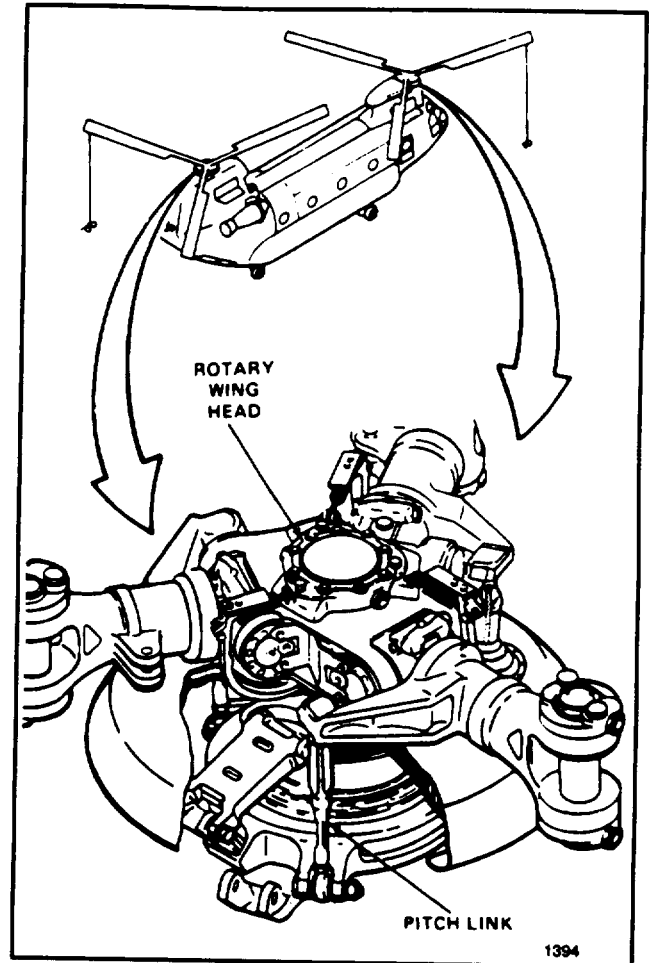

GO TO NEXT PAGE

2. Check for bond looseness in lower bearing (4).
3. Remove bolt (5) securing pitch link to swashplate (6). (Task 5-97)
4. Remove pitch link rod end bearing (4) from swashplate (6).

**NOTE**

The elastomeric bearing is bonded to the pitch link lower end. If the bearing is found to be unacceptable, replace the entire rod end.

**5. Inspect the elastomeric rod end bearing (4) as follows:**

- a. Try to rotate ball (7) by hand. **If the ball rotates, it indicates complete unbonding. Reject the bearing.**

**NOTE**

- If shim is covered by elastomeric material, the bearing is acceptable.
  - Evidence of dust-like particles of elastomeric material or evidence of small particles breaking away from the surface of the elastomeric material are **not** causes for rejection.
- b. **Check if shim (8) is visible. If it protrudes above elastomeric material (9), reject the bearing if any of the following conditions exist:**
    - (1) **Protrusion** of shim above plane of bearing housing (10).
    - (2) **Unbonding** of shim from elastomeric material.

**NOTE**


On certain bearings, shims are installed in two pieces. A split between the shim halves is normal.

- (3) **Broken shim.** Check with a feeler gauge or similar tool.

6. **Replace rod end if found unacceptable, and adjust rod end length. (Task 5-98)**
7. **If bearing is acceptable, reconnect pitch link rod end to swashplate. (Task 5-99)**

**FOLLOW-ON MAINTENANCE:**

None

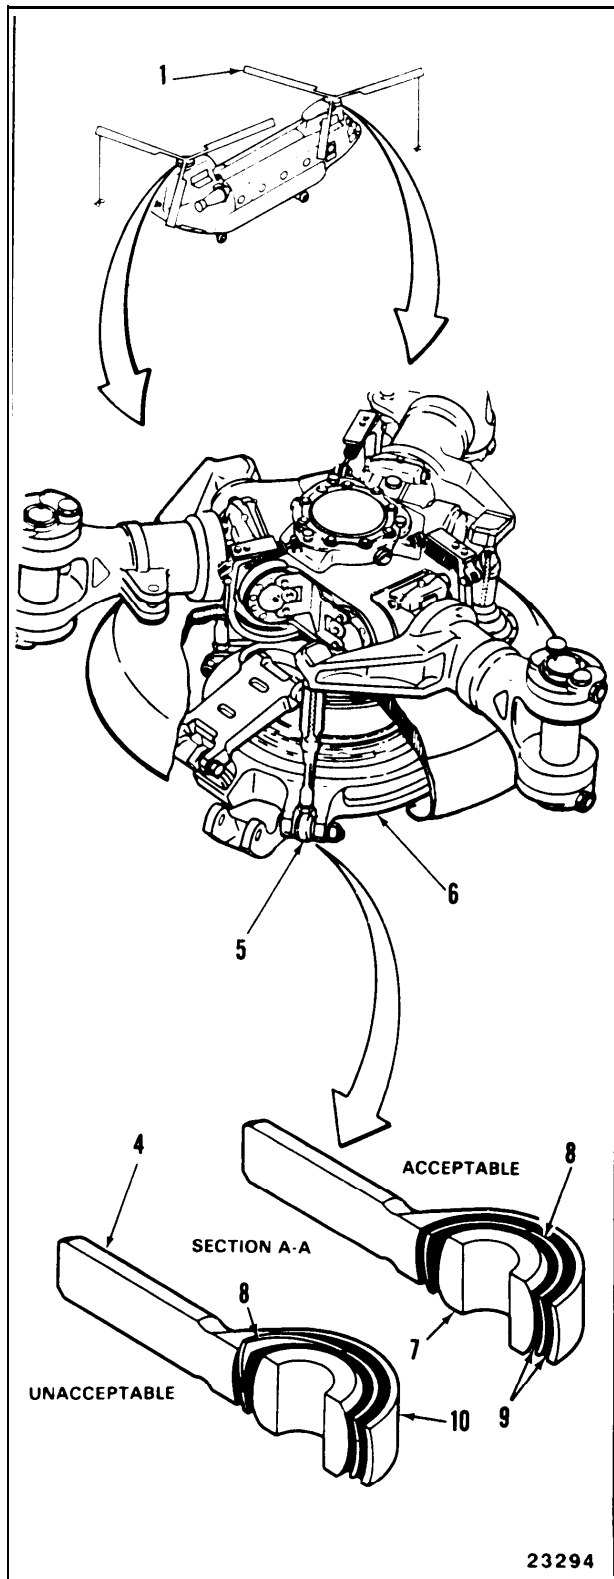

23294

**END OF TASK**

**INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114  
Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Bench Vise  
Arbor Press  
Assembly Fixture (T78)  
Swaging Tool (T105)  
Pneumatic Drill  
Twist Drill Set  
Torque Wrench, 700 to 1600 Inch-Pounds  
Metal Flaw Detector Kit  
Drift, 1/8-inch Diameter  
Dial Indicating Scale, 0 to 50 Pounds

**Materials:**

Cloth (E 120)  
Dry Cleaning Solvent (E162)  
Antiseize Compound (E75)  
Lockwire (E231)  
Gloves (E186)

**Parts:**

Cotter Pins

**Personnel Required:**

Aircraft Powertrain Repairer (2)  
Inspector

**References:**


TM 55-1500-322-24  
TM 55-1520-240-23P

**Equipment Condition:**

Off Helicopter Task

**NOTE**

Procedure is same to repair any pitch link.

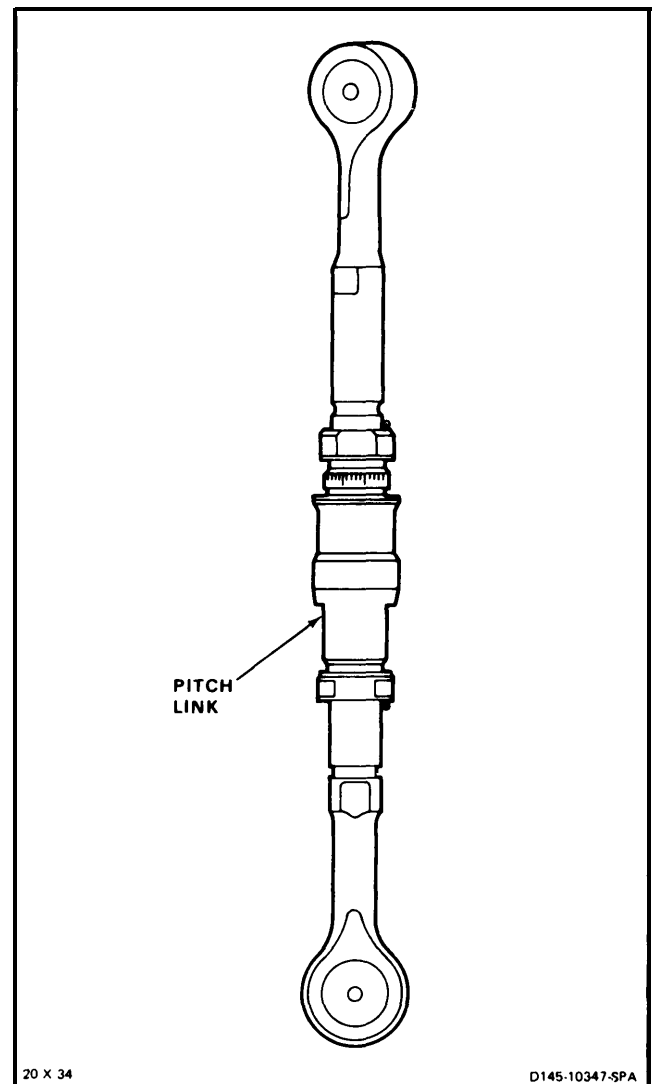**GO TO NEXT PAGE**



**5-98 REPAIR PITCH LINK (Continued)****5-98**

1. Check the pitch link bearings (1) as follows:
  - a. Clamp inner race (2) in bench vise (3). Use bolt (4), washers (5), and nut (6).
  - b. Attach dial indicator (7) to pitch link (8).
  - c. Place contact point (9) against vise (3).
  - d. Have helper apply load of 50 pounds in horizontal direction. Use dial indicating scale. Set dial indicator (7) to 0.
  - e. Apply load in opposite direction. Read bearing clearance on indicator (7).
  - f. Remove pitch link (8) from vise (3).
2. If bearing clearance is less than 0.010-inch, go to step 5.



**REPLACE BEARING**

3. If bearing clearance is greater than 0.010-inch, remove and check bearing (1) as follows:
  - a. Press bearing (1) out of rod-end (10 or 11). Use arbor press and adapter (TM 55-1500-322-24).

**WARNING**


Dry cleaning solvent (E162) is combustible and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- b. Wipe rod-end clean. Use cloth (E120) damp with solvent. Wear gloves (E186).
- c. Check rod-end (10 or 11) for cracks or other defects. Use metal flow detector kit to confirm presence of cracks (MIL-I-6866). There shall be no cracks or staking marks.

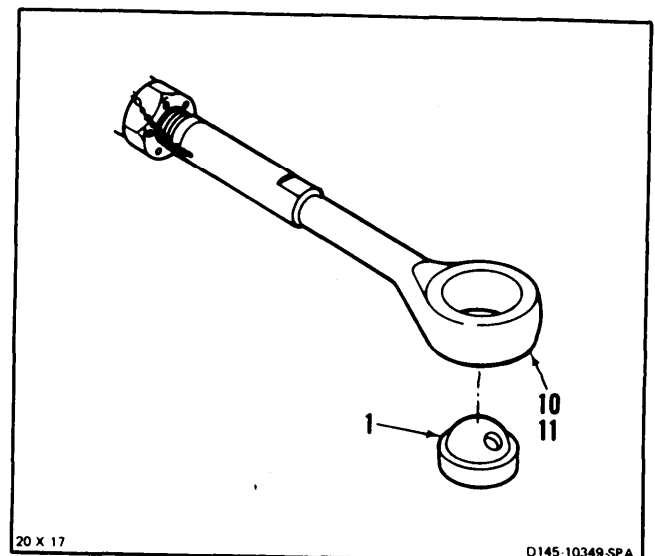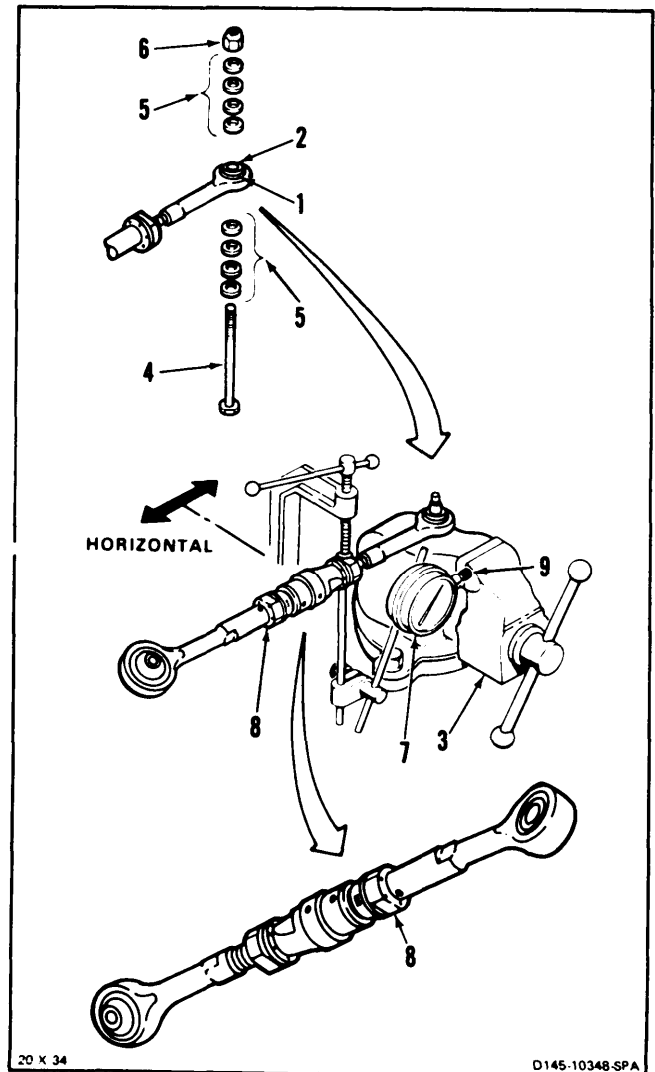**GO TO NEXT PAGE**



- d. Check bearing (1). Outside diameter shall be 1.7495 to 1.7500-inches. Check rod-end bore (12). Diameter shall be 1.7482 to 1.7487-inches.

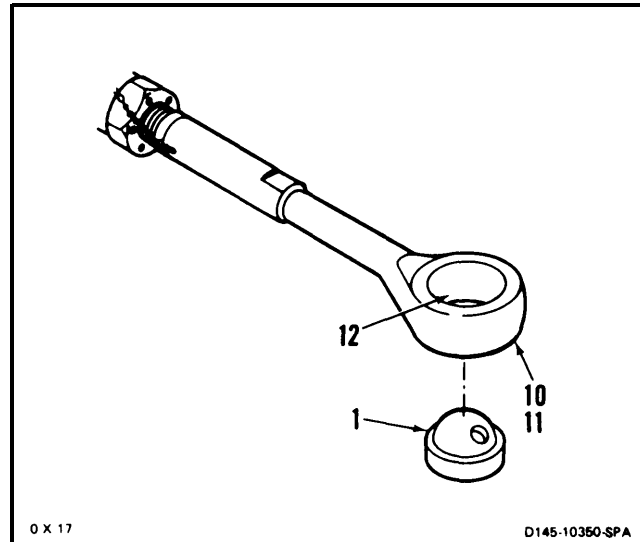
**WARNING**

Do not stake bearing. Staking marks cause failure of rod-end. This results in injury to personnel and damage to equipment.

**CAUTION**

Do not press bearing on any surface but outer race. Bearing damage will result.

4. Press replacement bearing (1) into rod-end (10 or 11). Install outer race (13) flush with, or below, face of rod-end. Use arbor press and adapter (TM 55-1500-322-24).

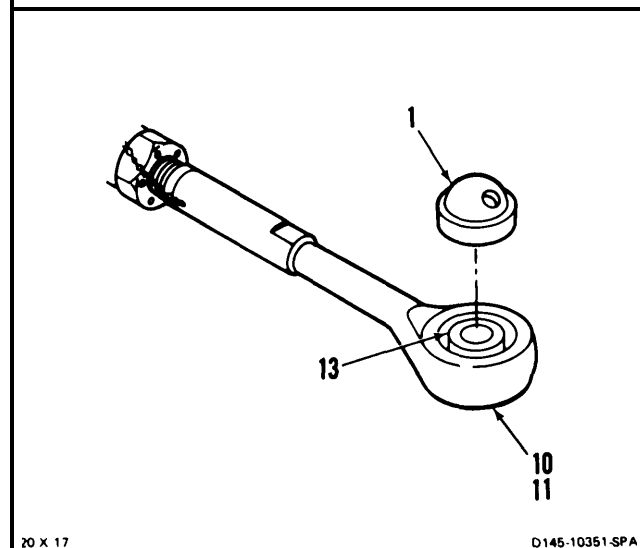

**INSPECT**

## 5-98 REPAIR PITCH LINK (Continued)

5-98

5. Measure pitch link length from center-to-center of rod-end bearings (1). Record length,


**DISASSEMBLE PITCH LINK**

6. Disassemble pitch-link (8) as follows:

**CAUTION**

Do not hold rod-end at opposite end of pitch link when checknut is being loosened. Do not turn upper checknut clockwise, or lower checknut counterclockwise to loosen. Damage to pitch link can occur if opposite rod-end is held or nut is overtorqued.

- a. Remove lockwire and two cotter pins (14).
- b. Hold flats of upper rod-end (10). Turn checknut (15) counterclockwise to loosen.
- c. Hold flats of lower rod-end (10). Turn checknut (16) clockwise to loosen.
- d. Hold rod-end (10). Turn turnbuckle (17) by hand until rod-ends (10 and 11) are removed.
- e. Remove indicator sleeves (18) and checknuts (15 and 16).

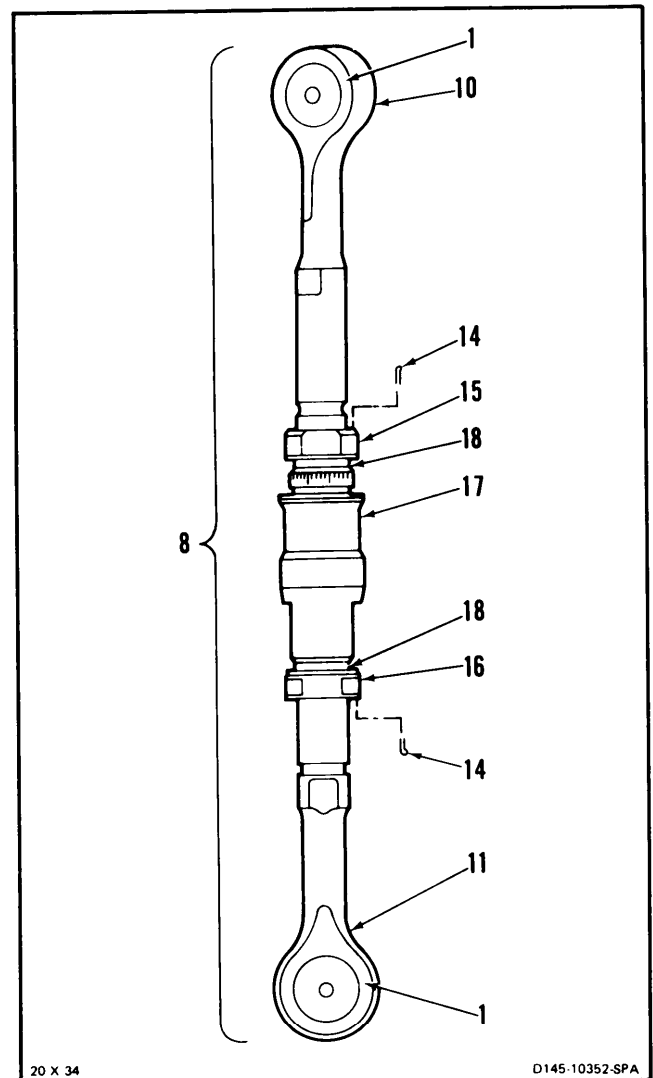

20 X 34

D145-10352-SPA

**GO TO NEXT PAGE**

5-365

**CAUTION**

Do not allow solvents or particles to enter dry-type bearings. Bearings will be damaged.


7. Check turnbuckle (17) and rod-ends (10 and 11) for staking marks or cracks. There shall be no staking marks. If cracks are suspected, follow step 3 a, b, and c.

**REPLACE LOCATOR PIN**

8. If locator pin (19) is damaged, replace as follows:
  - a. Drill hole 1/8-inch deep at spread end of pin (19). Use No. 30 drill.
  - b. Drive out pin (19). Use 1/8-inch drift punch and hammer.
  - c. Remove any pieces of pin (19).

**INSPECT**

- d. Position replacement pin (19) in rod-end (10).
- e. Spread both ends of pin (19). Use swaging tool (T105) (20) and arbor press.

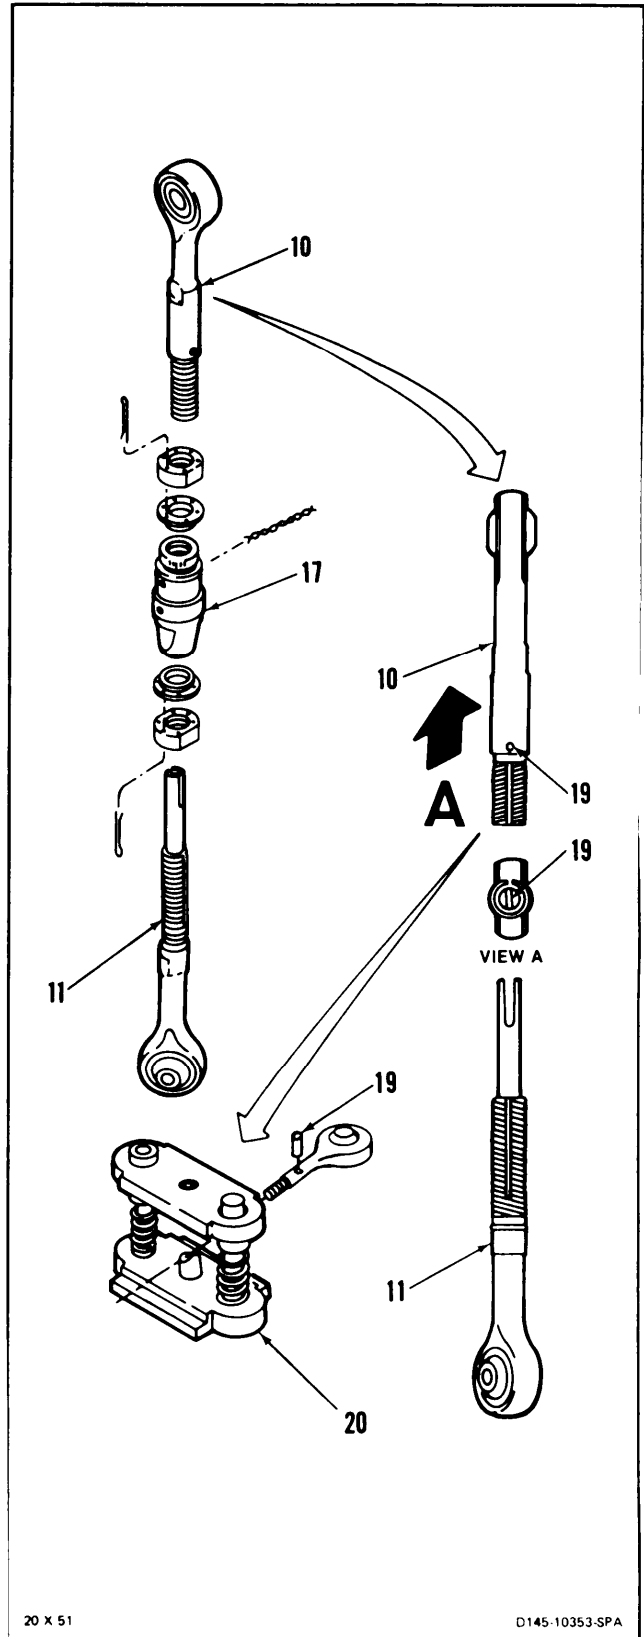

20 X 51

D145-10353-SPA

**GO TO NEXT PAGE**

**ASSEMBLE PITCH LINK****9. Assemble pitch link as follows:**

- a. Coat thread of rod-ends (10 and 11). Use antiseize compound (E75).

**WARNING**

Do not install rod-end that has bearing staking marks. Staking marks will cause rod-end failure.

**NOTE**


Pitch link 114R3611-1 has a turnbuckle with a lower threaded area longer than the upper threaded area. To assure both inspection holes are covered simultaneously, thread the lower rod end into the turnbuckle 12 turns before threading the upper rod end.

- b. Install left-hand thread checknut (15) onto upper rod-end (10). Install right-hand thread checknut (16) onto lower rod-end (11).
- c. Position indicator sleeves (18) on rod-ends (10 and 11) with flanges (21) toward checknuts (15 and 16).
- d. Fit lower rod-end (11) through tapered end of turnbuckle (17).
- e. Align fork on lower rod-end with locator pin in upper rod-end.

**NOTE**

Turnbuckle end with markings has left-hand thread. This screws onto upper rod-end with left-hand thread.

- f. Have helper keep rod-ends (10 and 11) aligned. Screw turnbuckle (17) onto upper rod-end (10). Turnbuckle will also screw onto lower rod-end (11). Fork (22) must be positioned on pin (19).
- g. Check inspection holes (23). Turn turnbuckle (17) until shoulders (24) appear in both holes.

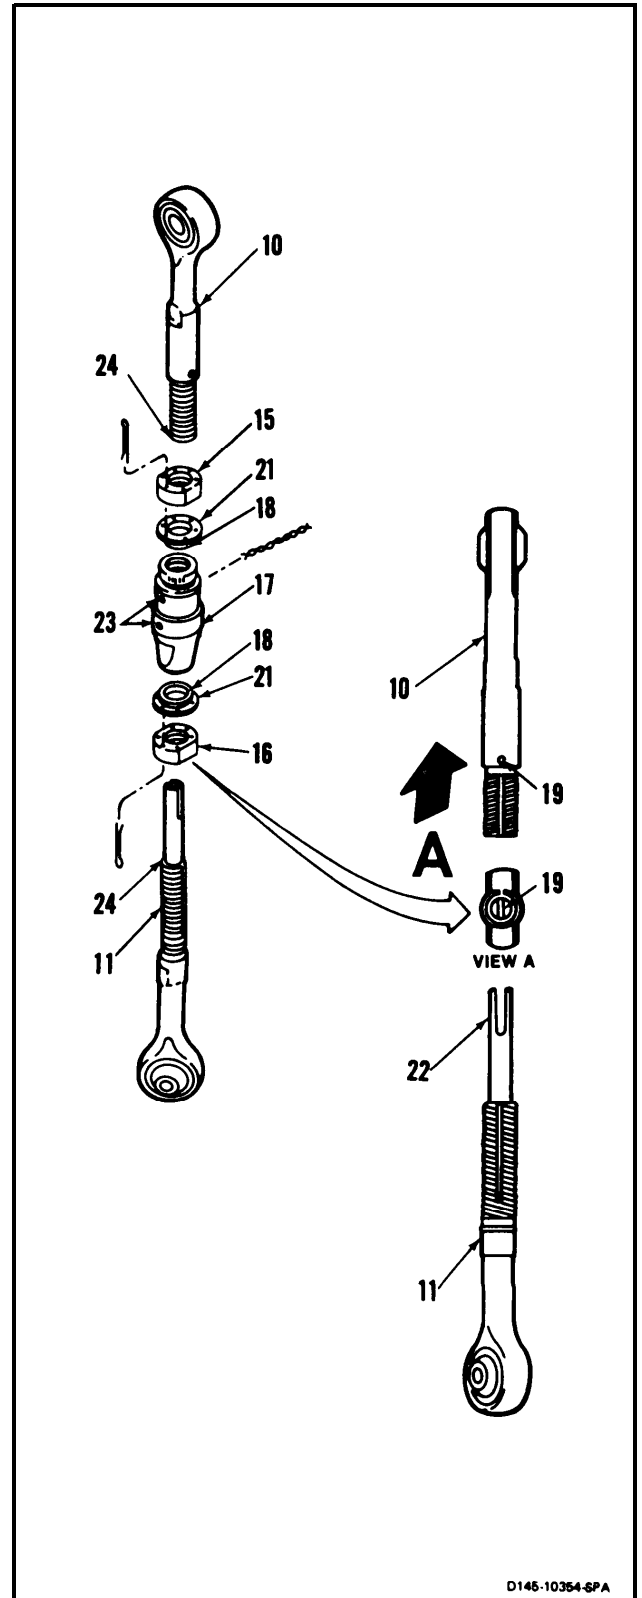


**GO TO NEXT PAGE**

**NOTE**


Rod-end shoulders visible in both inspection holes indicates that thread engagement is about equal.

- h. Adjust length of pitch link (8) from center-to-center of rod-end bearings (1) to length of pitch link removed.
- i. If length is unknown, adjust pitch link (8) in accordance with Task 5-96.
- j. Check that angle between rod-ends (10 and 11) is within 34 and 39 degrees. If angle is not within limits, check for pin or fork damage. Follow steps 7, 8, and 9.

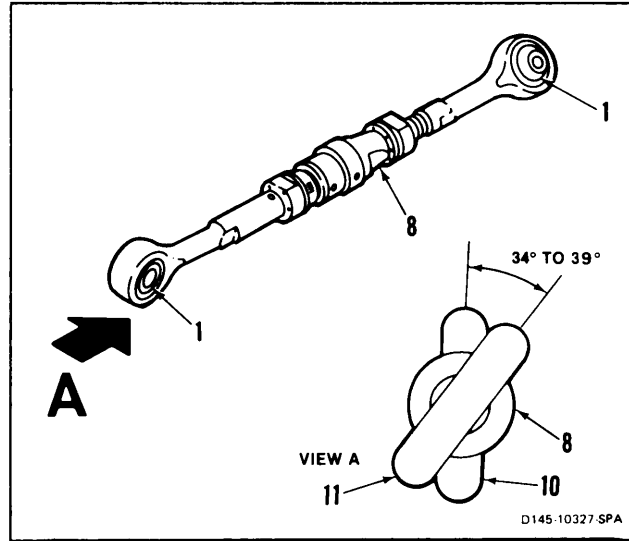

**10. Position pitch link (8) on assembly fixture (T78) (25) as follows:**

- a. Position block (26) for forward or aft link (8).
- b. Loosen hand knob (27). Move sliding angle (28) clear of fixed angle (29).
- c. Position pitch link (8) on fixture (25). Close sliding angle (28). Tighten handknob (27).
- d. Install locating pins (30 and 31).

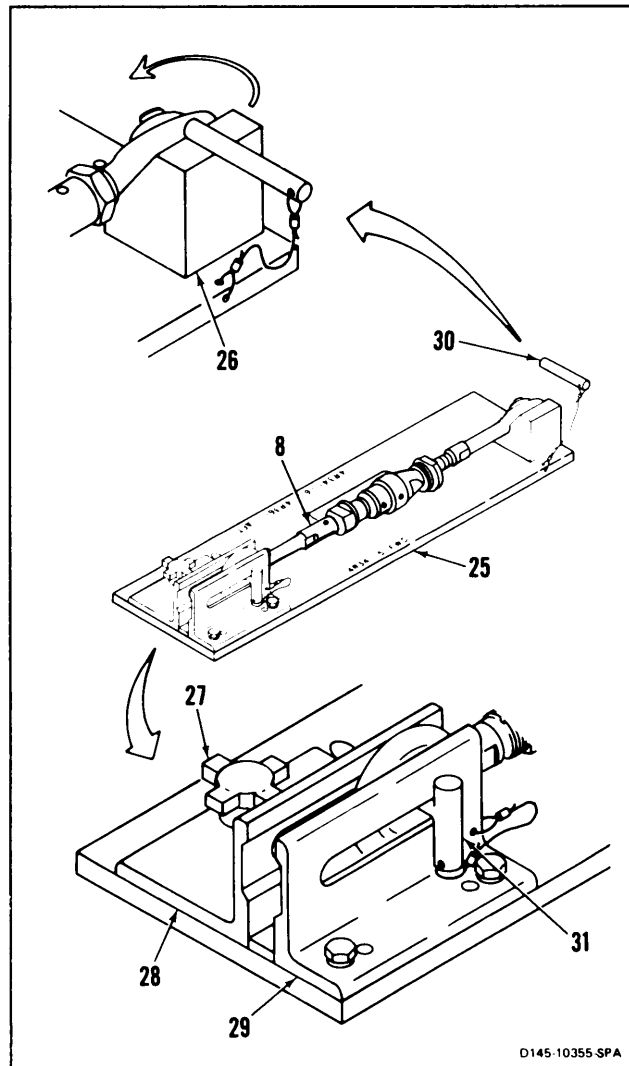

## 5-98 REPAIR PITCH LINK (Continued)

5-98

**CAUTION**


Do not hold rod-end at opposite end of pitch link when checknut is tightened. Do not turn upper checknut clockwise or lower checknut counterclockwise to tighten. Damage to pitch link can occur.

11. Torque upper and lower checknuts (15 and 16) to 1050 to 1300 inch-pounds.
12. Install cotter pins (14). Keep split ends within outside of indicator sleeves (18) to avoid boot damage.
13. Lockwire turnbuckle (17) to hole in pin (19). Use lockwire (E231).
14. Remove pitch link (8) from assembly fixture (T78) (25) as follows:
  - a. Remove pins (30 and 31).
  - b. Loosen handknob (27). Move sliding angle (28) clear.
  - c. Remove pitch link (8).

**INSPECT**

## FOLLOW-ON MAINTENANCE:

None

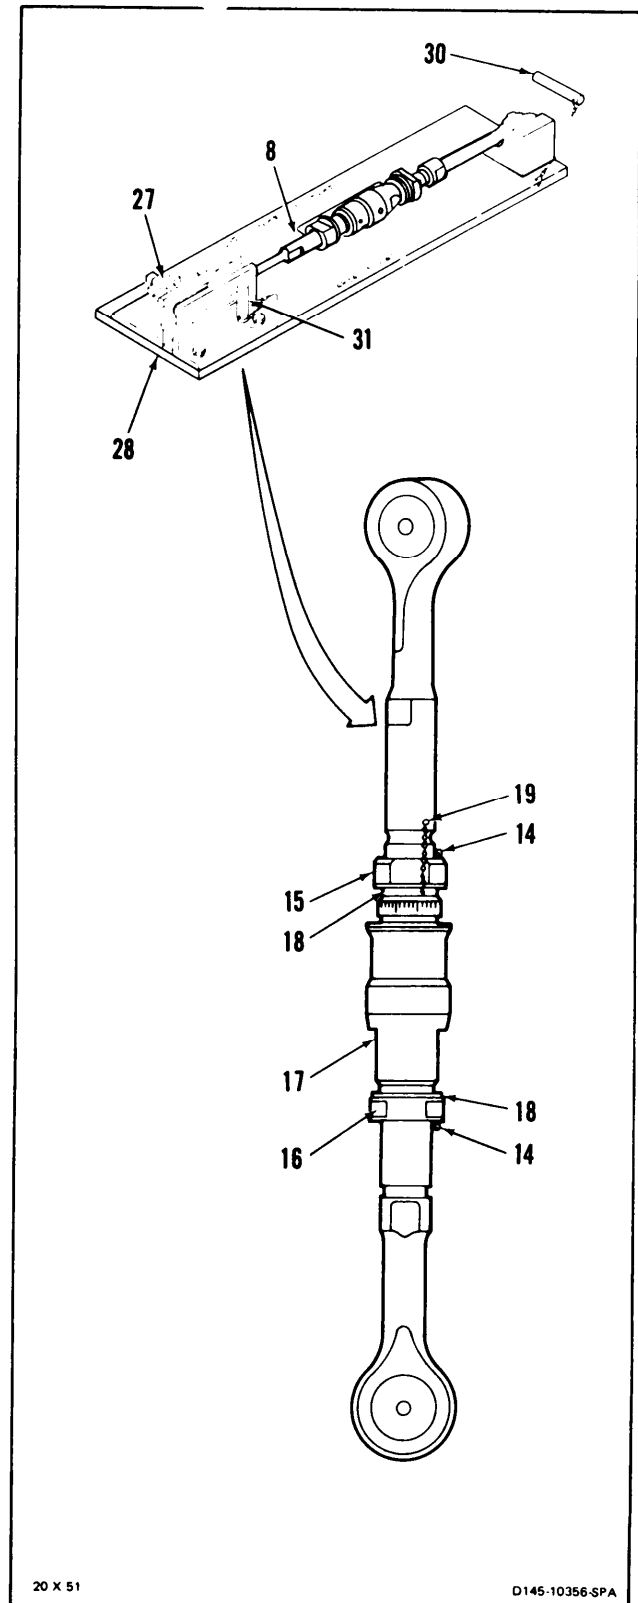

20 X 51

D145-10356-SPA

**END OF TASK**

5-369

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

- Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692
- Torque Wrench, 100 to 750 Inch-Pounds

**Materials:**

- Antiseize Compound (E75)
- Protective Gloves (EI 86.1)

**Parts:**

Cotter Pins

**Personnel Required:**

- Medium Helicopter Repairer (5)
- Inspector

**References:**

TM 55-1520-240-23P

**General Safety Instructions:**

**WARNING**



Antiseize compound (E75) can form toxic vapors if exposed to flame. Use in well-ventilated area, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**CAUTION**

Pitch links 114R3611-1 and -2 can be installed only on helicopters without **45** or with **63**. Pitch links 114R3611-3 and -4 can be installed only on helicopters with **45** without **63**.

**NOTE**

- Procedure is same to install forward or aft pitch links. Aft pitch links are shown in task.
- forward rotor lower pitch link bolts are installed with the head of bolt going in the opposite direction of the rotation.
- retention bolts are installed in pitch links. They have a pawl which prevents nut or bolt removal unless the pawl is depressed (Task 1-14).
- link is positioned correctly when markings are above turnbuckle.

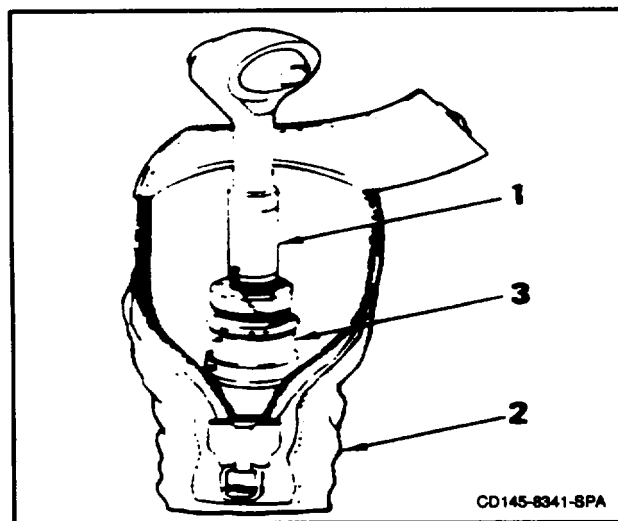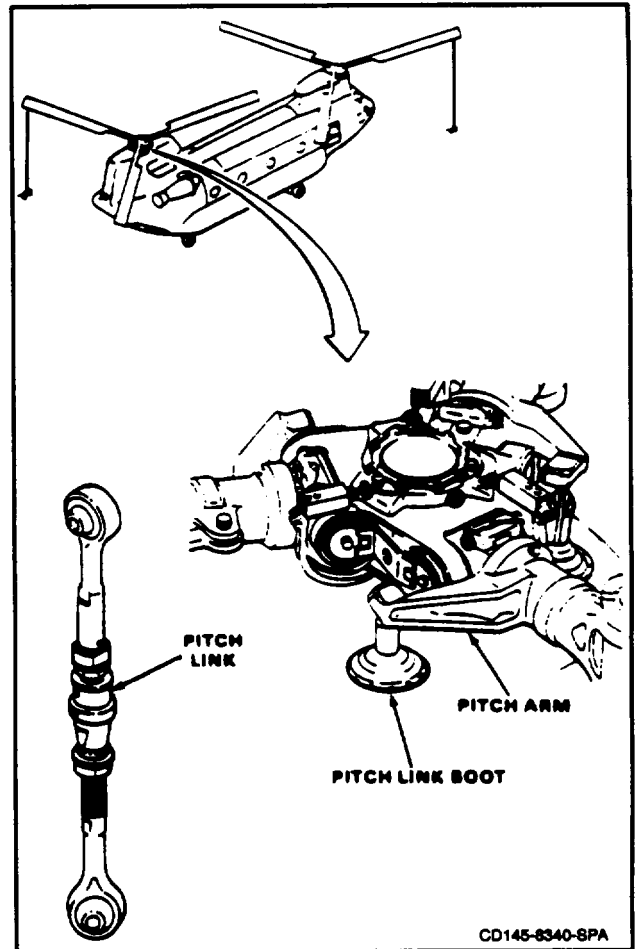

1. **Push pitch link (1) up through pitch link boot (2) until turnbuckle (3) is within narrow part of boot**

**NOTE**

During this task, have helpers lift the rotor blade as required to permit bolt removal and installation.

**GO TO NEXT PAGE**




5-99 INSTALL PITCH LINK (Continued)

2. Remove nut (4), washer (5), bolt (6), and limiter (7) from the pocket of pitch arm (8). Check that correct bushings (9) and (10) are installed in the pocket.
3. Lubricate the sleeve and shank of bolt (6) with antiseize compound (E75). Do not lubricate thread. Wear gloves (E186.1).
4. Install upper rod-end bearing (11) in the pocket of pitch arm (8). Install bolt (6) (head outboard), with limiter (7), through the pocket and bearing. Install washer (5) and nut (4) on the bolt.
5. Remove nut (12), washer (13), bolt (14) and limiter (15) from swashplate lugs (16). Check that correct bushings (17) and (18) are installed in the lugs.
6. Lubricate the sleeve and shank of bolt (14) with antiseize compound (E75). Do not lubricate thread. Wear gloves (E186.1).
7. Position lower rod-end bearing (19) in swashplate lugs (16). Install bolt (14) (head toward direction of rotation), with limiter (15), through the lugs and ball.
8. On helicopters with **45** and without **63** check that serrations on bearing (19) engage serrations on bushing (18). If required, remove upper bolt (6) and rotate pitch link (1) just enough to engage serrations. Repeat step 4.
9. Install washer (13) and nut (12) on bolt (14).
10. Have helpers lift blade. Torque nuts (4 and 12) to 400 to 660 inch-pounds. Lower blade. Install cotter pins (20 and 21).
11. Have helpers lift and twist the rotor blade as required to remove lockpin (T22) (22). Keep the blade supported.

**CAUTION**

Do not let lockpin stay in pitch arm with pitch link installed. If the rotor head is turned or apu started when both lockpin and pitch link are installed at the same pitch arm, damage to components will occur.

12. Remove lockpin (22) from pitch arm (8).

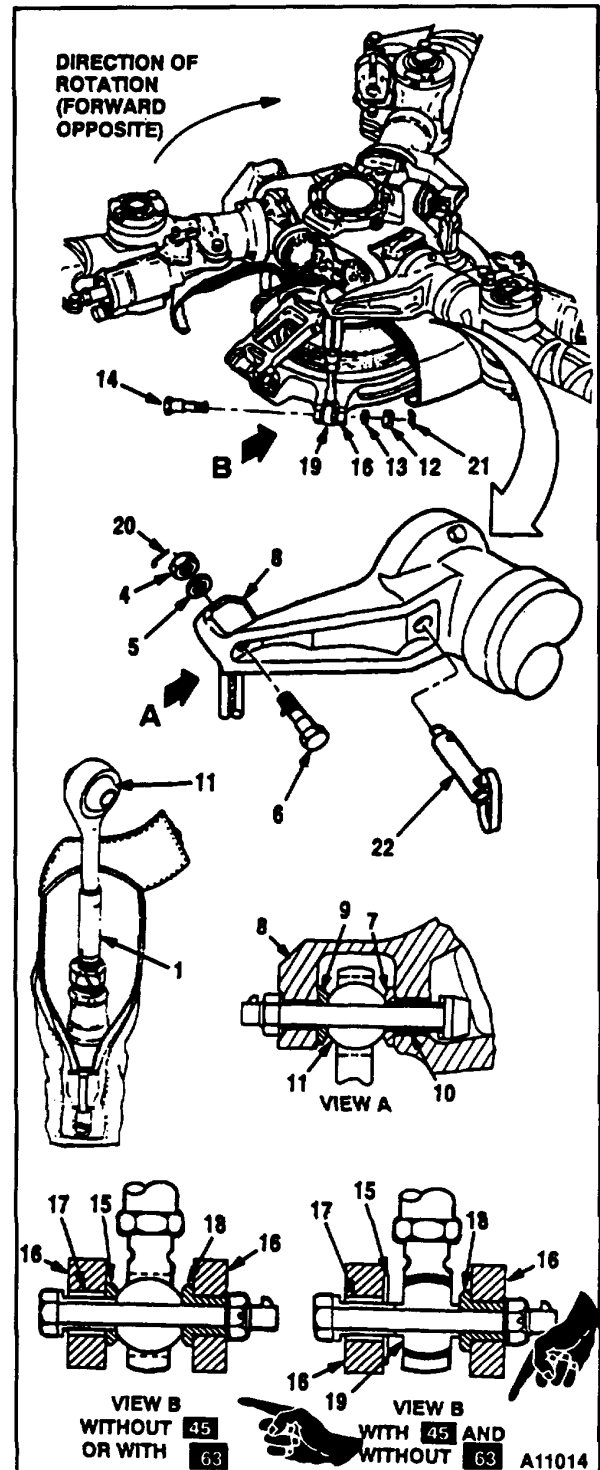


GO TO NEXT PAGE

- 13. Have helpers lower the rotary-wing blade.

**INSPECT**

**FOLLOW-ON MAINTENANCE:**

- Close pitch link boot (Task 5-135).
- Remove safety blocks at dual actuating cylinders (Task 11-29).
- Close work platforms (Task 2-2).
- Track rotary-wing blades (Task 5-140 and 5-141).

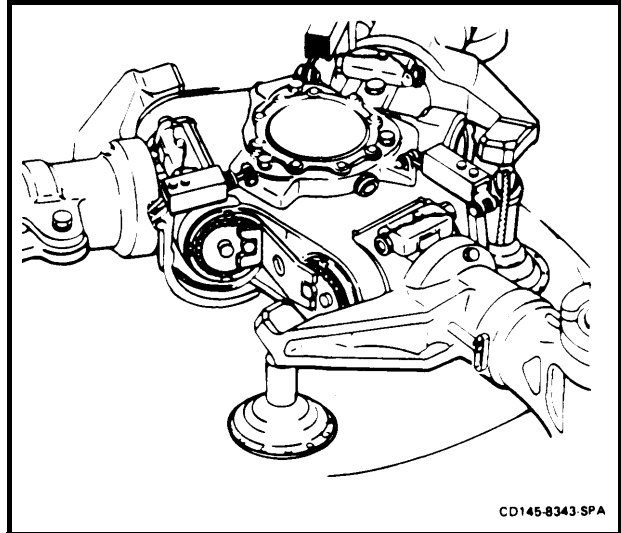

**END OF TASK**

5-372 Change 32

**5-99.1 PITCH LINK BOLT TORQUE CHECK****5-99.1****INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Torque Wrench, 100 to 750 Inch-Pounds

**Materials:**

None

**Parts:**

Cotter Pins

**Personnel Required:**


Medium Helicopter Repairer (5)

**References:**

Task 5-94.1  
TM 55-1520-240-23P

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Forward and Aft Work Platforms Open  
(Task 2-2)  
Cockpit Flight Controls at Neutral (Task 11-33)  
Tiedown Line Installed on One Forward and One  
Aft Blade

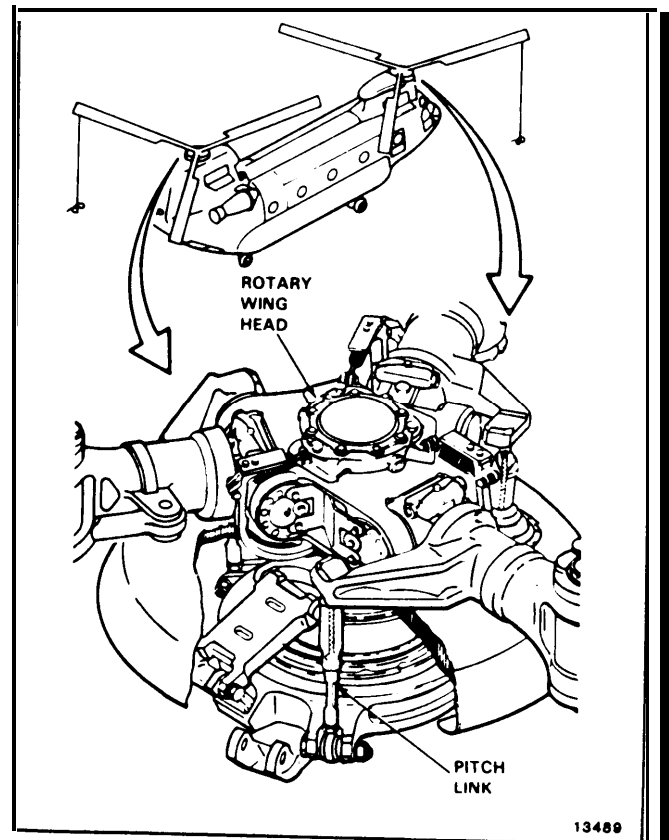**GO TO NEXT PAGE**

**NOTE**

Torque on nuts at upper and lower bolts is checked in the same way for all pitch links.

1. Inspect pitch link (1) for looseness or damage caused by chafing. Inspect bearing (2) at each end of link for liner unbonding and signs of seizing.
2. Remove cotter pin (3) at each end of link (1).
3. Apply 400 Inch-pounds torque to nuts (4 and 5) in the tightening direction.


**NOTE**

The nuts should not move.

4. If nuts (4 and 5) did not move during torque check, install a new cotter pin (3). Go to FOLLOW-ON MAINTENANCE.
5. **If nuts (4 or 5) moved during torque check, remove nut, washer (6 or 7), and bolt (8 or 9) (Task 5-94-1).**
6. **Inspect bolt (8 or 9) for obvious wear.** If bushing has damage, it may be reworked (Task 1-14). If shank of bolt has scratches or other damage 0.005 inch deep or more, or has a wear step of 0.005 inch or more, replace bolt (Task 5-94.1).
  - a. Have helpers lift and twist blade (10) as required to install bolt (8 or 9). Keep blade supported.
  - b. **Install new bolt (8 or 9), washer (6 or 7), and new nut (4 or 5).** Check that limiter is installed. Torque nut to **400 to 660 inch rounds**. Install cotter pin (3).
7. Have helpers lower rotary-wing blade (10).

**INSPECT****FOLLOW-ON MAINTENANCE:**

None

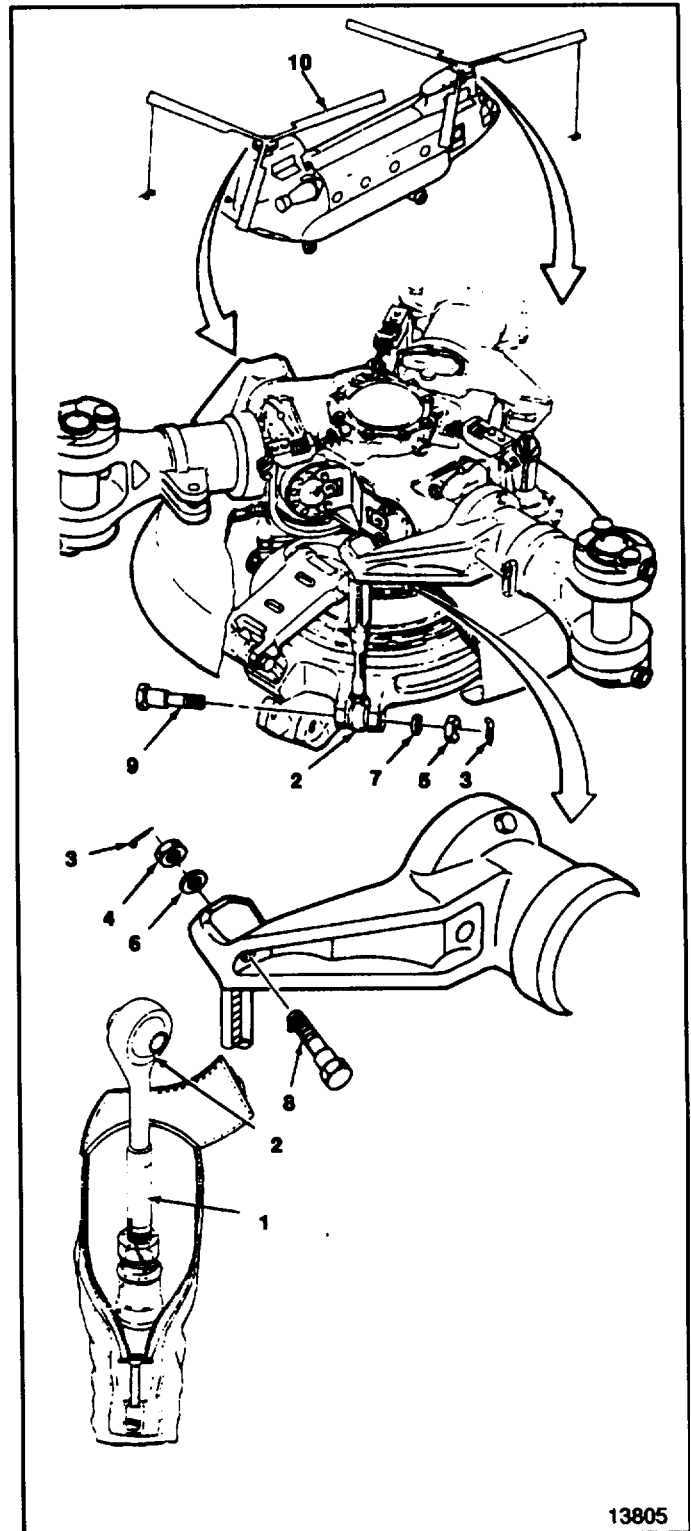

13805

**END OF TASK**

5-372.2 Change 34

**5-99.2 CHECK DRIVE COLLAR AND DRIVE ARM RADIAL PLAY**

5-99.2

**INITIAL SETUP****Applicable Configurations:**

ALL

**Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114  
Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Dial Indicating Scale, 0 to 50 Pounds  
Dial Indicator, 0 to 0.002 Inch  
Torque Wrench, 100 to 750 Inch-Pounds  
Torque Wrench, 700 to 1600 Inch-Pounds  
Removal Tool (Appx E-24)

**Materials:**

Antiseize Compound (E75)  
Gloves (E184.1)

**Parts:**

Cotter Pin

**Personnel Required:**


Aircraft Powertrain Repairer  
Inspector

**References:**

Task 5-96.1  
Task 5-97

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Hydraulic Power Off  
Electrical Power Off  
Cockpit Controls at Neutral (Task 1142)  
Forward or Aft Work Platforms Open (Task 2-2)


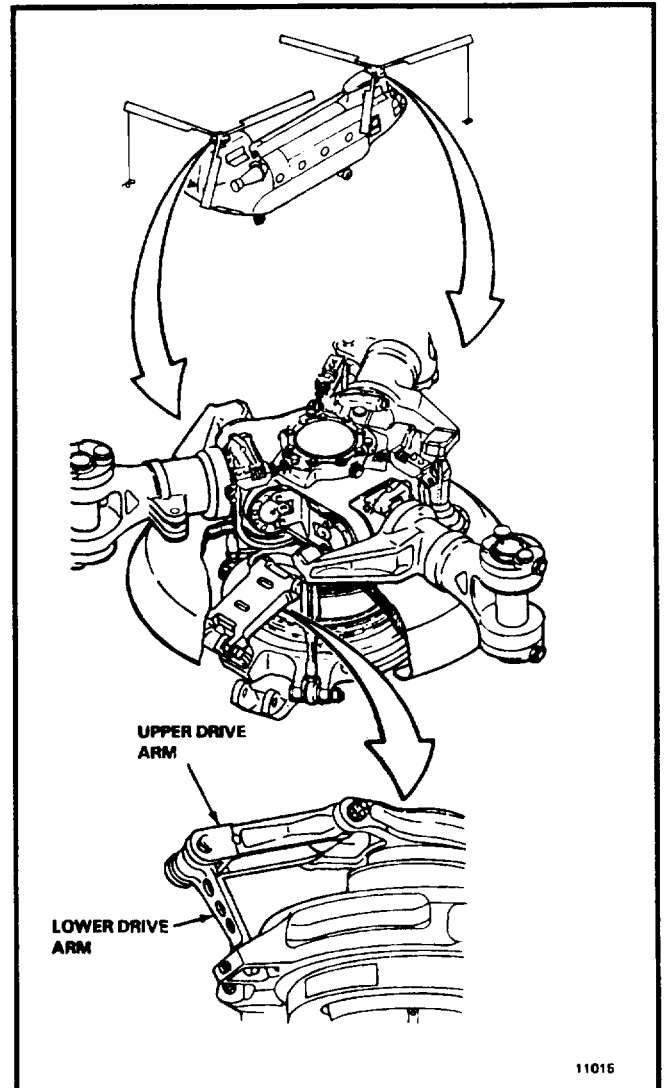


GO TO NEXT PAGE

**NOTE**

Procedure is same to check forward or aft drive collar and drive arm for radial play.

1. Clamp dial indicator (1) to drive arm collar (2).
2. **Position indicator (1) on lug (3) of upper drive arm (4), aligned with bolt (4.1). Preload indicator against lug.**
3. **Pull upper drive arm (4) and collar (2) toward indicator (1). Record indicator reading X.**
4. **Hold collar (2) down and push upper drive arm (4) away from indicator (1). Record indicator reading Y.**
5. Subtract reading Y from reading X. Result shall not be more than 0.010 inch.
6. Remove indicator (1) from drive arm collar (2).
7. Clamp indicator (1) to upper drive arm (4).
8. **Position Indicator on lower drive arm (5), aligned with bolt (6). Preload indicator against lower drive arm.**
9. **Pull upper drive arm (4) and lower drive arm (5) away from indicator (1). Record indicator reading A.**
10. **Hold upper drive arm (4) down and push upper drive arm (5) toward indicator (1). Record reading B.**
11. Subtract reading A from reading B. Result shall not be more than 0.010 inch.
12. Remove indicator (1) from upper drive arm (4).

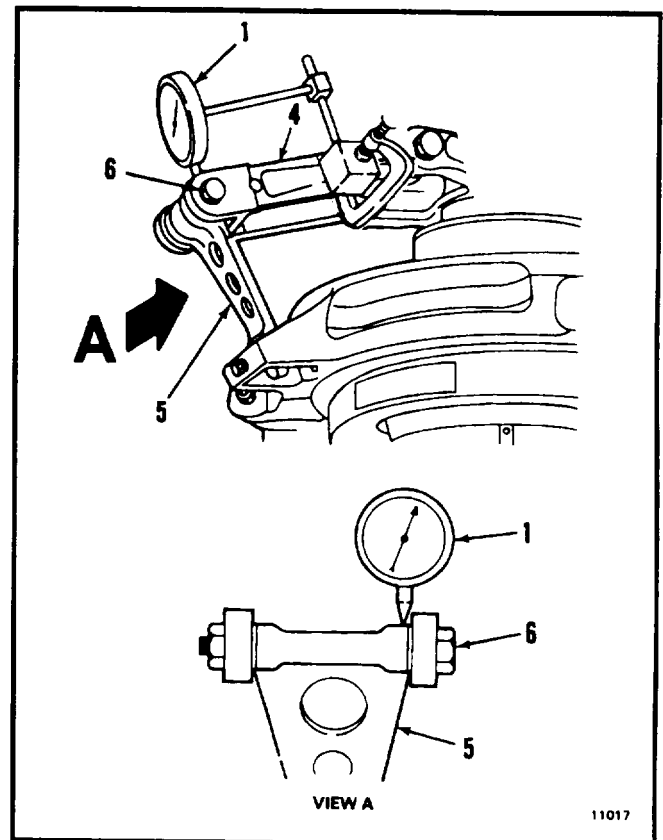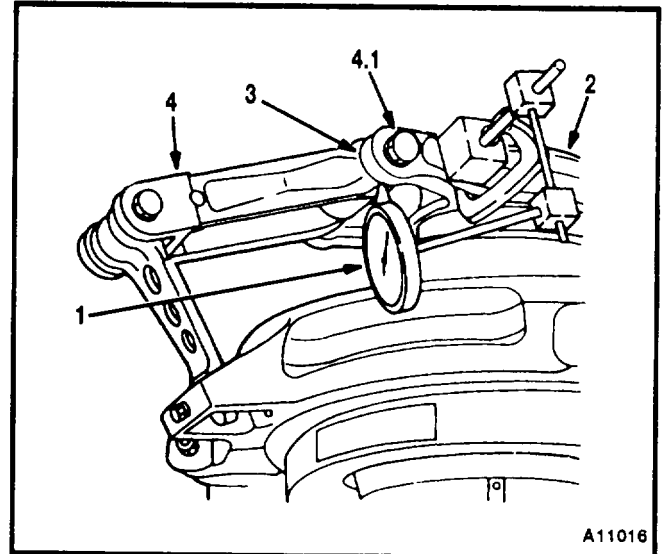

**CHECK LOWER DRIVE ARM RADIAL PLAY  
WITHOUT 46**

- 12.1. Disconnect lower end of pitch link from swashplate (Task 5-97).
- 12.2. Install pitch link lockpins (Task 5-96.1).
13. **Remove** cotter pin (7), washer (7.1), and nut (8) from bolt (9). Remove bolt.

**CAUTION**

**Do not allow swashplate to rotate. Rotor head, pitch links, and swashplate will be damaged.**

14. Clamp indicator (1) to swashplate (10).
15. **Position indicator (1) on lower end of lower drive arm (5)**, align with lower drive arm. Reload indicator against lower drive arm.
16. **Push lower drive arm (5) toward indicator (1)**. Record indicator reading C.
17. **Hold swashplate (10) down and pull lower drive arm (5) away from indicator (1)**. Record indicator reading D.
18. Subtract reading D from reading C. Result shall not be more than 0.006 inch.
19. **Remove indicator (1) from swashplate (10)**.
20. **Position lower drive arm (5) in upper drive arm 20 (4)**.


**WARNING**

**Antiseize compound (E75) can form toxic vapors if exposed to flame. Use only with adequate ventilation, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.**

21. Apply antiseize compound (E75) to shank of bolt (9). Wear gloves (E184.1). Do not apply to thread or bushing on bolt.
22. Install bolt (9), washer (7.1), and nut (8) in lower drive arm (5). Torque nut to 500 to 700 inch-pounds.
23. Install cotter pin (7) in nut (8). Go to FOLLOW-ON MAINTENANCE.


**INSPECT**

**GO TO NEXT PAGE**

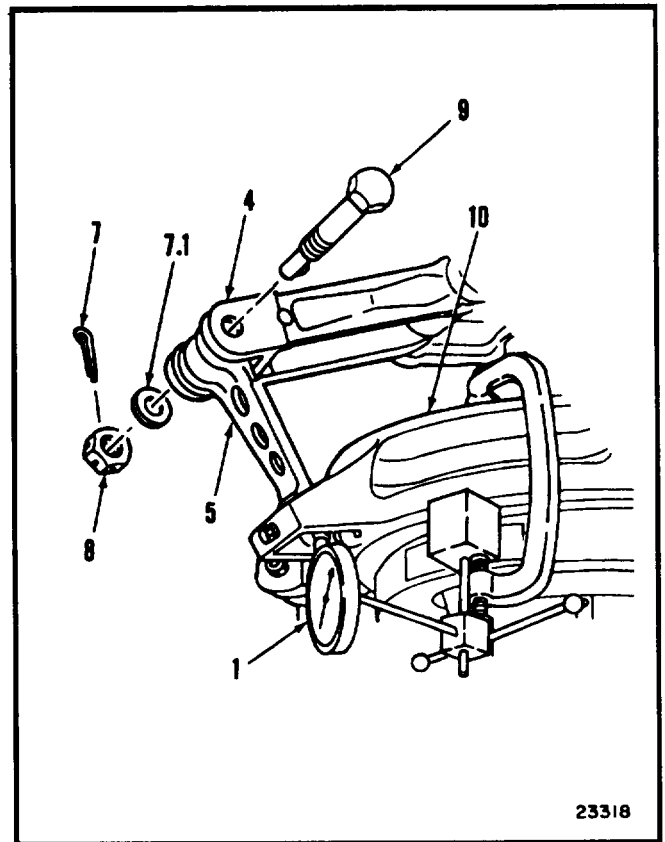

**CHECK LOWER DRIVE ARM RADIAL PLAY  
WITH 46**

- 23.1. Disconnect lower end of pitch link from swashplate (Task 5-97).
- 23.2. Install pitch link lockpins (Task 5-96.1).
24. **Remove** cotter pin (7), washer (7.1), and nut (8) from bolt (9).
25. **Install bolt removal tool (E-24) (7.2)** on bolt (9) so pawl (7.3) is depressed.
26. **Tap bolt (9)** through upper drive arm (4) and lower drive arm (5) with a rubber mallet until pawl clears bushing. Remove bolt removal tool (E-24) (7.2).

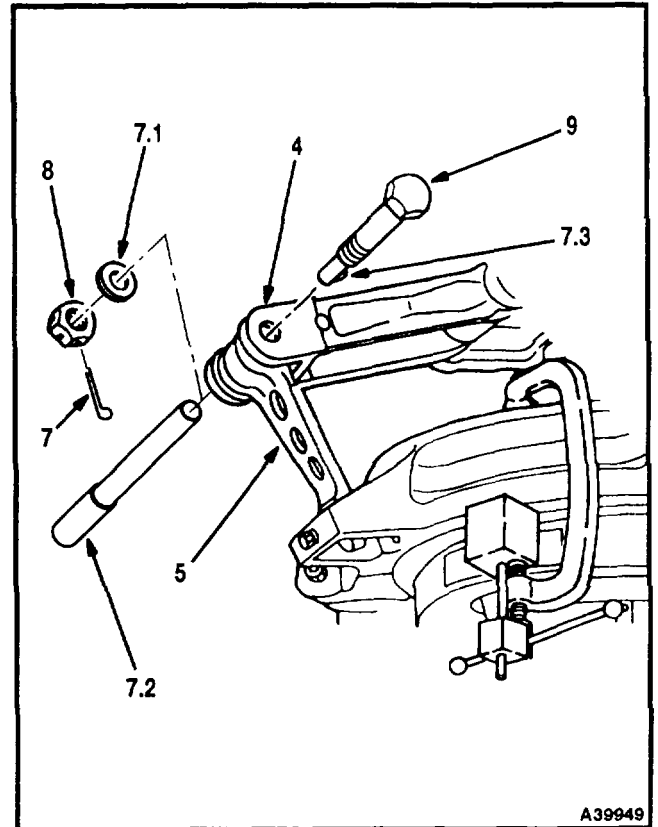



**CAUTION**

Do not allow swashplate to rotate. Rotor head, pitch links, and swashplate will be damaged.

27. Clamp indicator (1) to swashplate (10).
28. Position indicator (1) on lower end of lower drive arm (5), align with lower drive arm. Reload indicator against lower drive arm.
29. Push lower drive arm (5) toward indicator (1). Record indicator reading C.
30. Hold swashplate (10) down and pull lower drive arm (5) away from indicator (1). Record indicator reading D.
31. Subtract reading D from reading C. Result shall not be more than 0.006 inch.
32. Remove indicator (1) from swashplate (10).
33. Position lower drive arm (5) in upper drive arm (4).
34. Check that flanged sleeve bushing is installed under drive arm lug on nut side. Refer to Task 5-112.

**WARNING**

Antiseize compound (E75) can form toxic vapors if exposed to flame. Use only with adequate ventilation, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.


**CAUTION**

Do not apply antiseize compound to thread of bolt.

35. Apply antiseize compound (E75) to bushing and shank of bolt (9). Wear gloves (E184.1).
36. Install bolt (9), washer (7.1), and nut (8) in lower drive arm (5). **Torque nut to 480 to 900 inch-pounds.** Use additional washers as required for cotter pin hole alignment.
37. Install cotter pin (7) in nut (8).

**INSPECT****FOLLOW-ON MAINTENANCE:**

Remove pitch link lockpins (Task 5-96.2).  
Connect pitch links to swashplate (Task 5-99).  
Close forward or aft work platforms (Task 2-2).

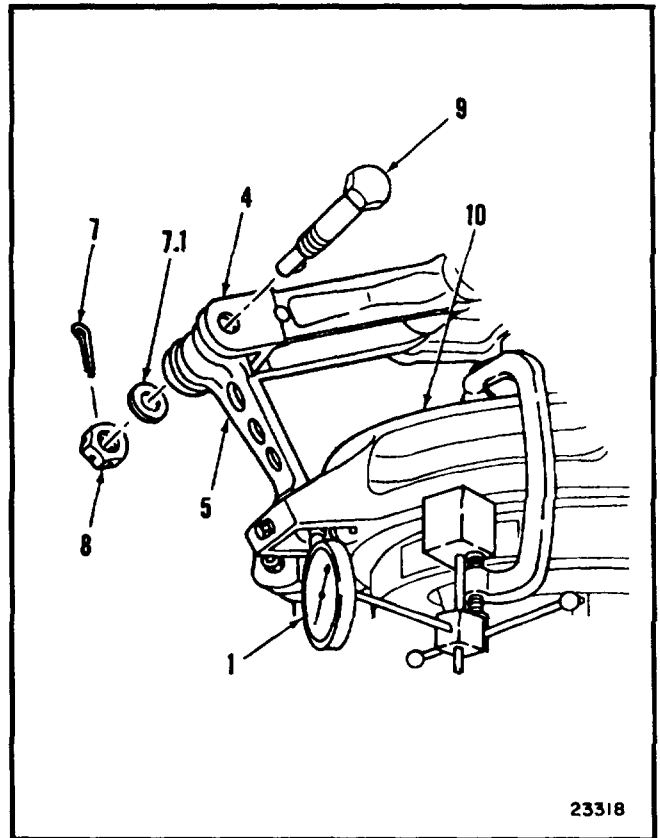**END OF TASK**

**5-100 REMOVE DRIVE COLLAR**

**5-100**

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692

**Materials:**

None

**Personnel Required:**

Medium Helicopter Repairer (2)

**References:**

Task 5-101

**Equipment Condition:**

Battery Disconnected (Task 1-39)

Electrical Power Off

Hydraulic Power Off


Two Rotary-Wing Blades Tied Down (Task 1-26)

Forward or Pylon Work Platforms Open (Task 2-2)

Rotary-Wing Blades Removed (Task 5-64)

Rotary-Wing Head Removed (Task 5-8)

Pitch Links Disconnected From Swashplate (Task 5-97)

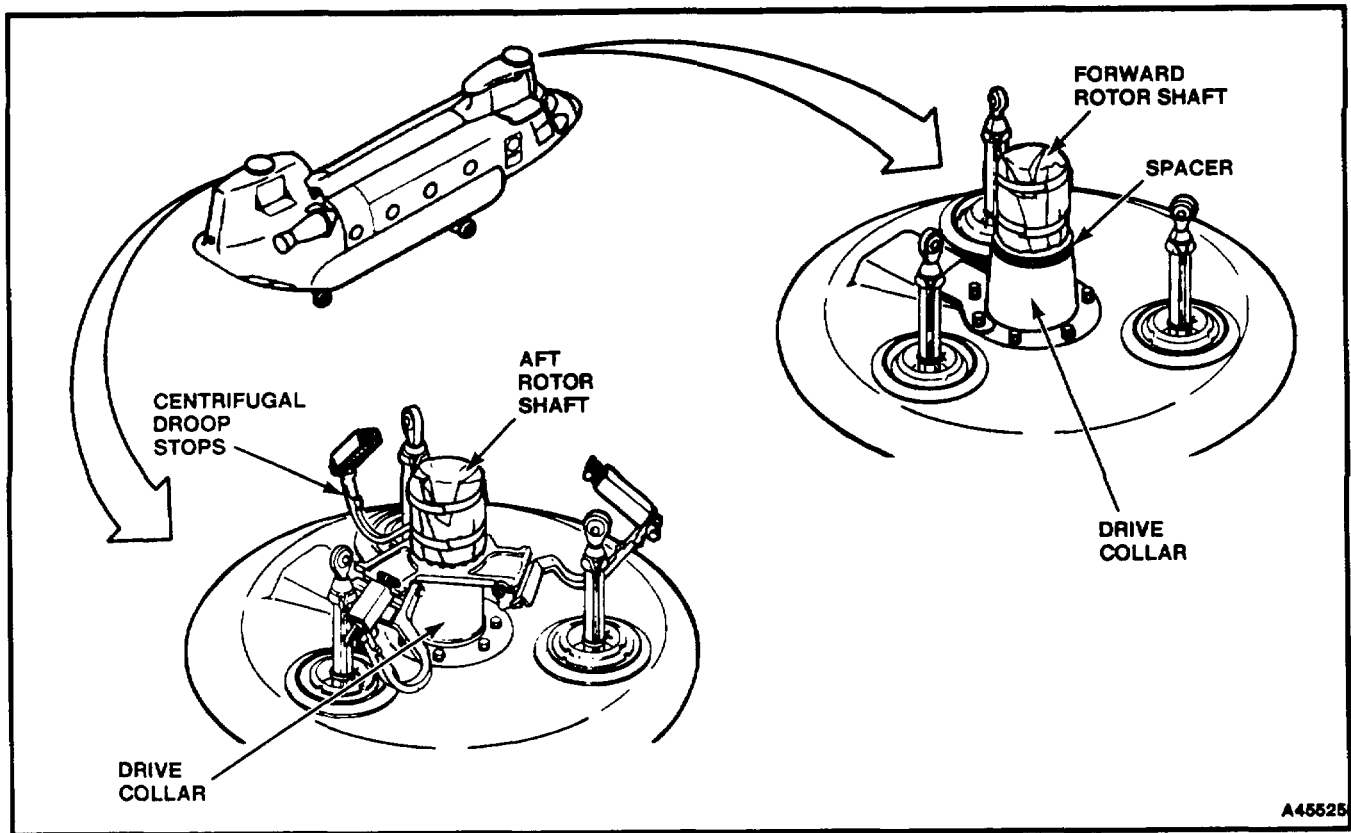



GO TO NEXT PAGE

**NOTE**

Procedure is similar to remove a drive collar at the forward or aft rotor head. Differences are noted in the text.

1. If installed, remove barrier material (1) and tape (2) from drive shaft (3).
2. At forward rotor shaft (3) only, **remove spacer (5)** from drive collar (4). Then go to step 4.

3. At aft drive shaft (3) only, remove centrifugal droop stop assembly (6) from drive collar (4).

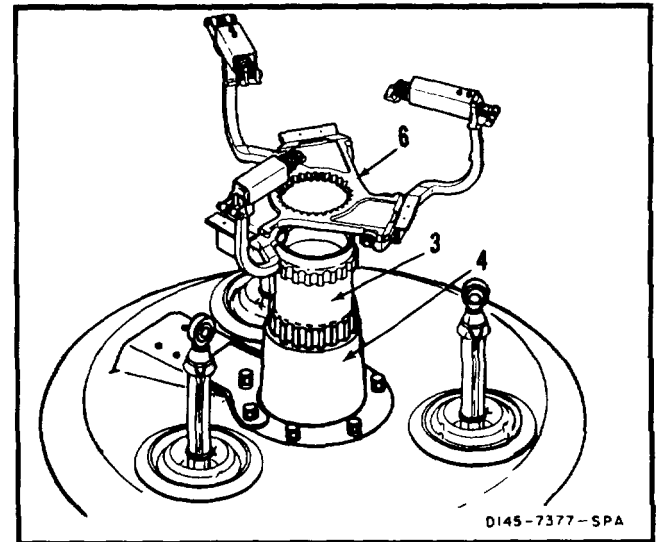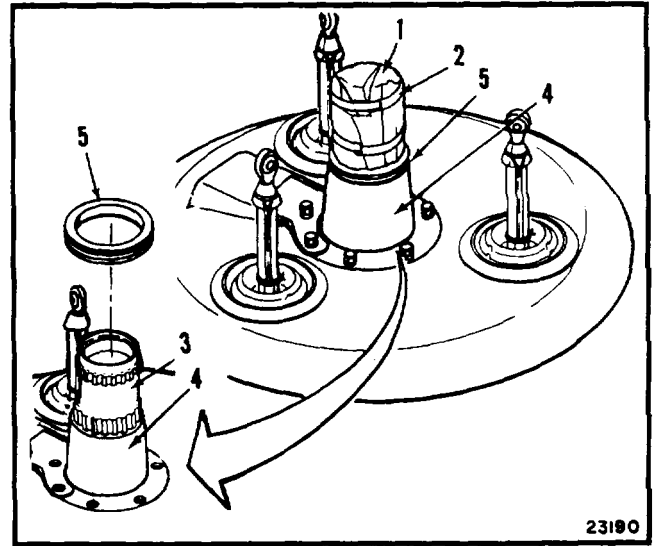


## 5-100 REMOVE DRIVE COLLAR (Continued)

5-100

## NOTE


If weather-protective cover (7) has a stiffener (8), go to step 5.

4. Remove nut (9), washer (10), and bolt (12) with washer (11) at each of eight places around weather-protective cover (7). Go to step 6.
5. At stiffener (8), remove nut (9), two washers (10 and 11) (under nut), and bolt (12) at each of four places. At each of the remaining four places, remove nut (9), washer (10), and bolt (12) with washer (11).
6. Rotate cover (7) slightly in each direction as required to free it from drive collar (4).
7. With helper, remove cover (7) by lifting it, with three pitch links (13), carefully over drive shaft (3).

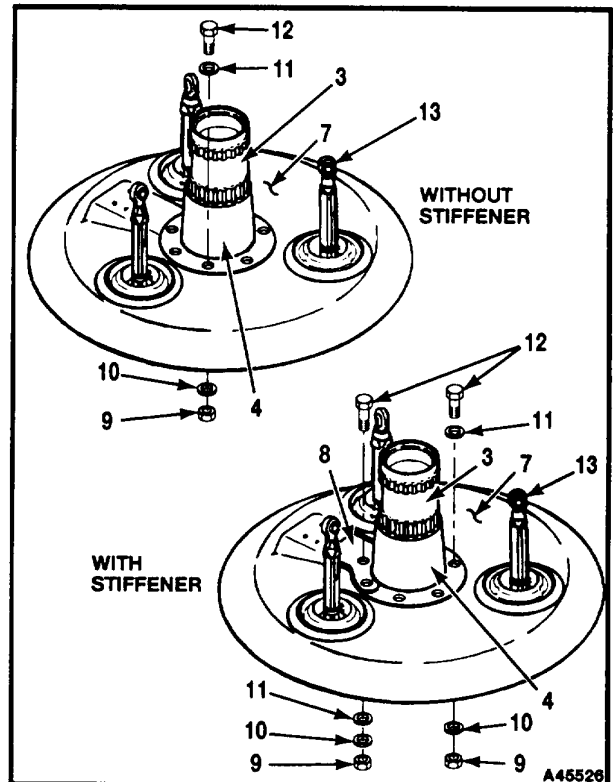

8. Remove upper drive arm (14) from drive collar (4) (Task 5-101).
9. **Remove drive collar (4) from drive shaft (3).**

FOLLOW-ON MAINTENANCE:  
None

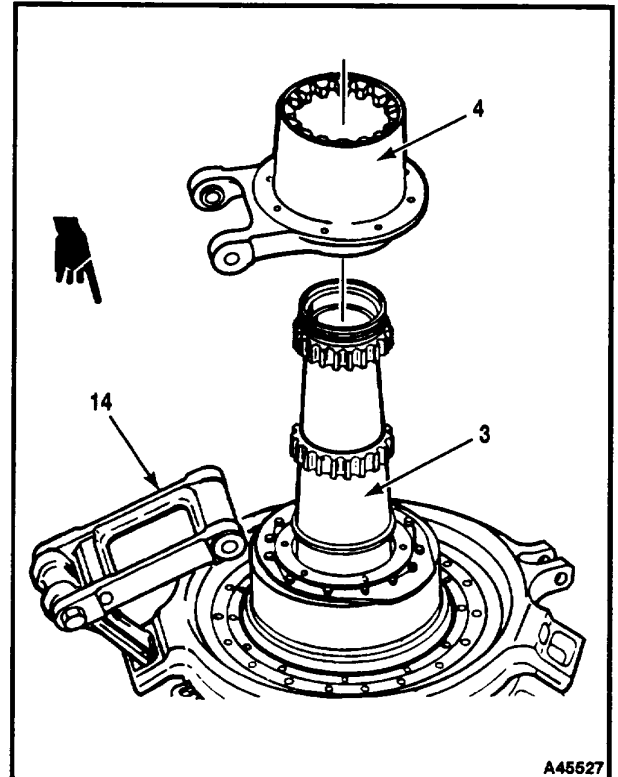

END OF TASK

INITIAL SETUP

**Applicable Configurations:**  
All

**Tools:**  
Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Metal Rod, 1/8-Inch Diameter x 6 Inches Long

**Materials:**  
Plastic Straps (E374)

**Personnel Required:**  
Medium Helicopter Repairer

**Equipment Condition:**  
Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Pitch Links Disconnected From Swashplate (Task 5-97)  
One Forward and One Aft Blade Tied Down (Task 1-26)  
Pylon or Forward Work Platforms Open (Task 2-2)


**General Safety Instructions:**

**CAUTION**

Do not try to pry bolts free. Swashplate, drive arm, or drive collar will be damaged.

**NOTE**


- There may be two different five digit codes marked on bolt P/N 114R3650-9. The five digit code 81996 is not the manufacturer's CAGE code. If so marked, the number 81996 identifies the part as having been manufactured in accordance with a government Technical Data Package (TDP).
- Identify the five digit manufacturer's code or manufacturer's name on the head of the bolt. If the bolt head is marked with one of the CAGE codes or manufacturer's name listed below, the 114R3650-9 bolt is serviceable.
  1. CAGE code 56878 (SPS Technologies Inc.)
  2. CAGE code 84256 (AVIBANK Manufacturing Co.)
  3. CAGE code 77272 (BOEING).

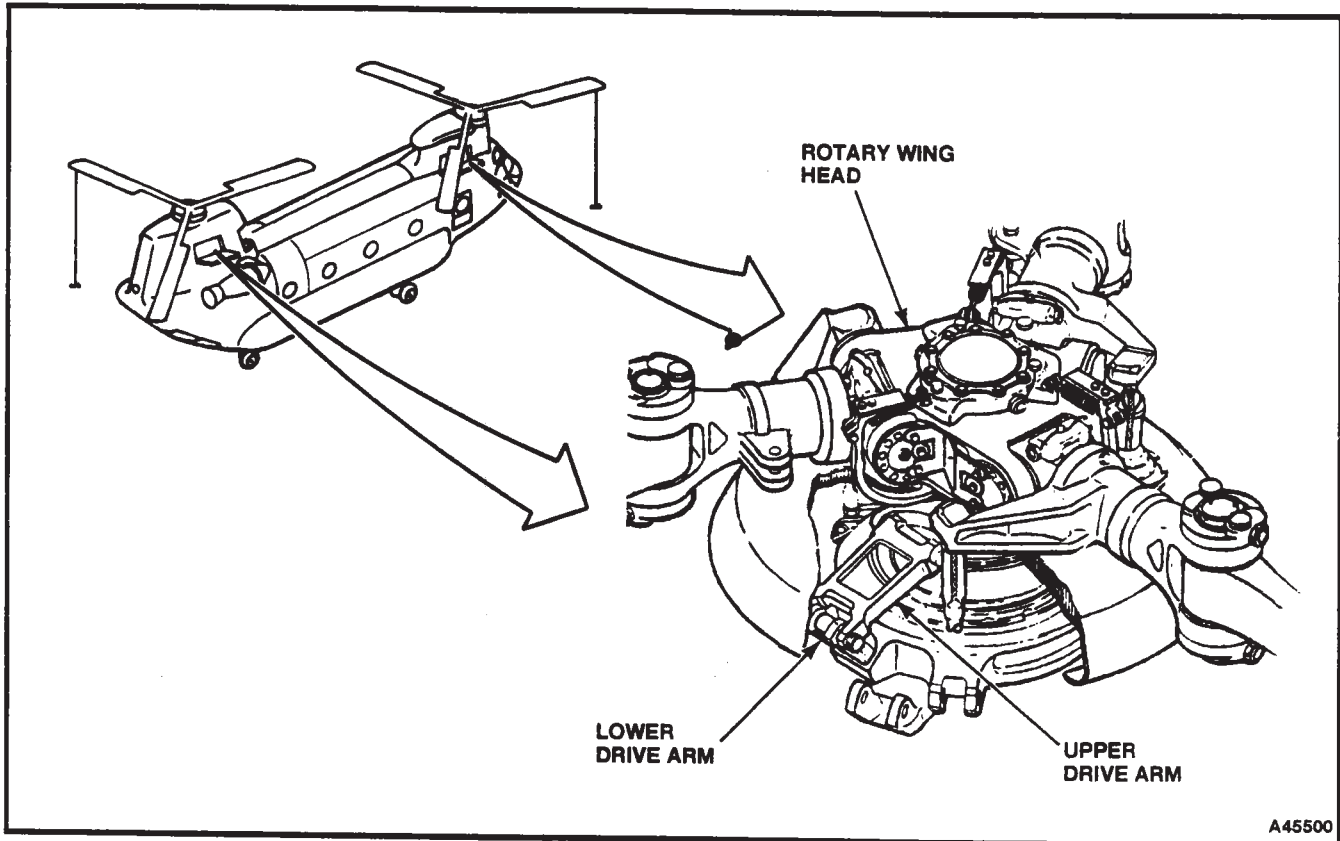

**5-101 REMOVE DRIVE ARMS (Continued)**

**NOTE**


- Remove and replace any unserviceable bolts with serviceable 114R3650-9 bolts from the supply system.
  - The procedure to remove forward or aft drive arms is similar. Removal of forward drive arms is shown here.
  - With **46**, a positive retention bolt is installed at each end of the upper drive arm. They have a pawl which prevents nut or bolt removal unless the pawl is depressed (Task 1-14).
  - Without **46**, impedance bolts are installed in upper and lower drive arm lugs. These bolts are self-retaining and require a special nut and torque (Task 1-14).
1. If not previously done, support and twist blade (1) as required to align holes in pitch arm (2) and pitch shaft (3). Install lockpin (4). Lower the blade.

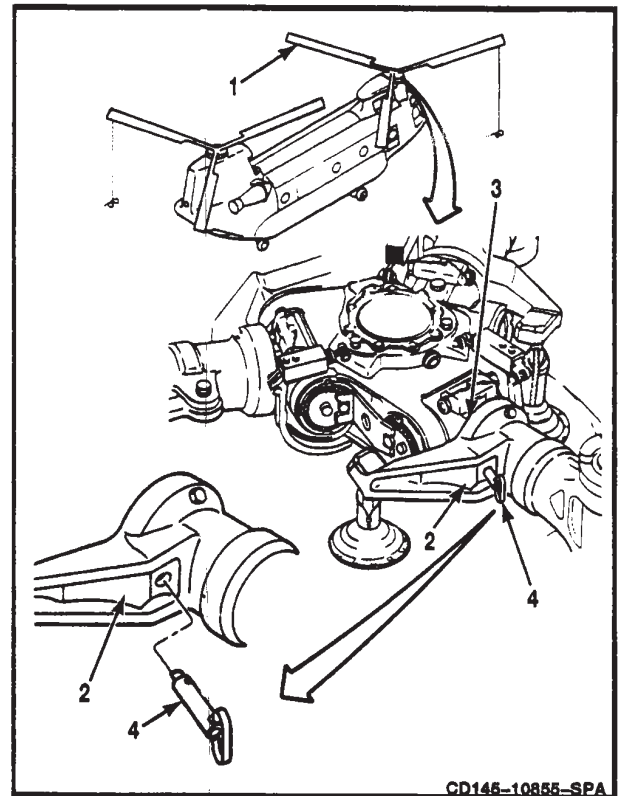

CD145-10855-SPA

**REMOVE LOWER DRIVE ARM FROM SWASHPLATE**

2. Remove lockwire from bolt (5). Remove cotter pin (6). While holding nut (7) with a wrench, remove the bolt, with washers (8) and (9), from swashplate lug (10). If needed, insert a rod through the head of the bolt and pull.
3. Partially withdraw bushing (11) from swashplate lug (10). Remove lower drive arm (12) from the lug.
4. Retain bushing (11) in lug (10) with plastic strap (E374).

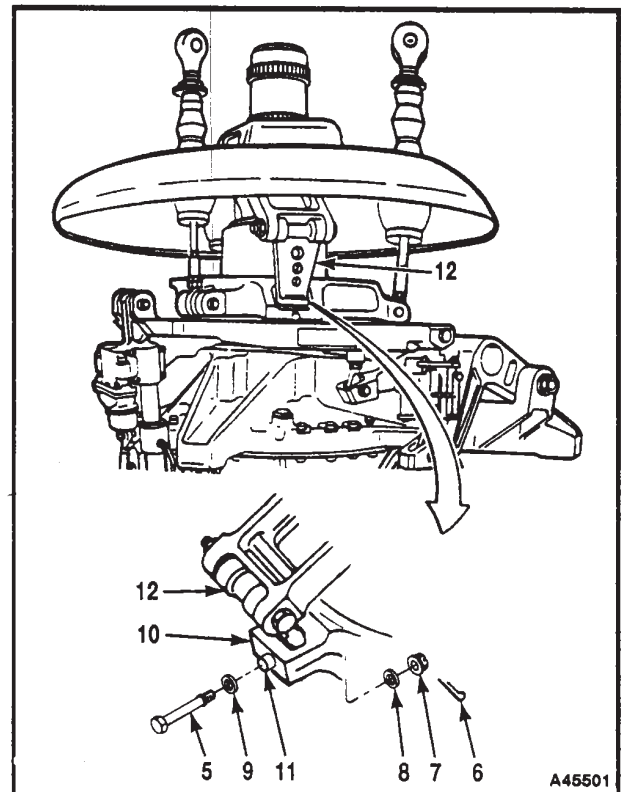

A45501


**GO TO NEXT PAGE**

**REMOVE UPPER DRIVE ARM FROM DRIVE COLLAR (WITH 46)**

5. Remove cotter pin (13), nut (14), and washer (15) from bolt (16).
6. Install bolt removal tool (E-25) (17) on installed bolt (16). Tap the bolt through upper drive arm (18) until it can be removed. Remove the bolt.
7. Remove drive arms (12 and 18) as an assembly. Retain shouldered bushing (19) in the lug of drive collar (20) with plastic strap (E374).

**REMOVE UPPER DRIVE ARM FROM DRIVE COLLAR (WITHOUT 46)**

8. Remove cotter pin (13) and nut (14) from bolt (16).
9. Remove bolt (16). Do not pry the bolt free. If needed, tap it with a plastic mallet.
10. Remove drive arms (12 and 18) as an assembly. Retain shouldered bushing (19) in the lug of drive collar (20) with plastic strap (E374).

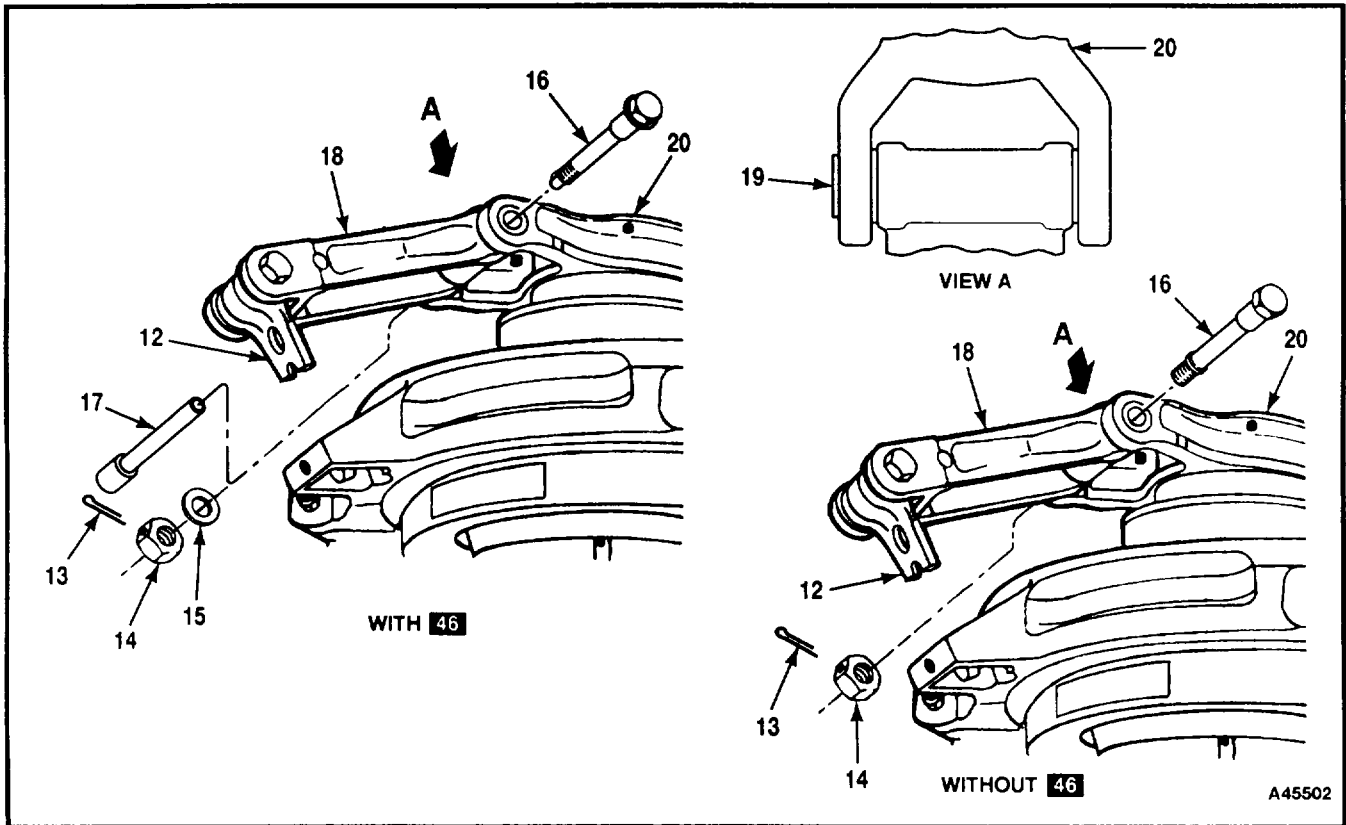

**DISASSEMBLE DRIVE ARMS (WITHOUT 46 )**


11. Remove cotter pin (21), nut (22), and washer (23) from bolt (24).
12. Install bolt removal tool (E-24) (25) on installed bolt (24). Tap the bolt through upper drive arm (18) until it can be removed. Remove the bolt.
13. Separate lower drive arm (12) from upper drive arm (18).
14. **Retain shouldered bushing (26) in the lug of upper drive arm (18) with plastic strap (E374).**

**DISASSEMBLE DRIVE ARMS (WITHOUT 46 )**

15. Remove cotter pin (21) and nut (22) from bolt (24).
16. Remove bolt (24). **Do not pry the bolt free.** If needed, tap it with a plastic mallet.
17. Separate lower drive arm (12) from upper drive arm (18).
18. **Retain shouldered bushing (26) in the lug of upper drive arm (18) with plastic strap (E374).**

## FOLLOW-ON MAINTENANCE:

None

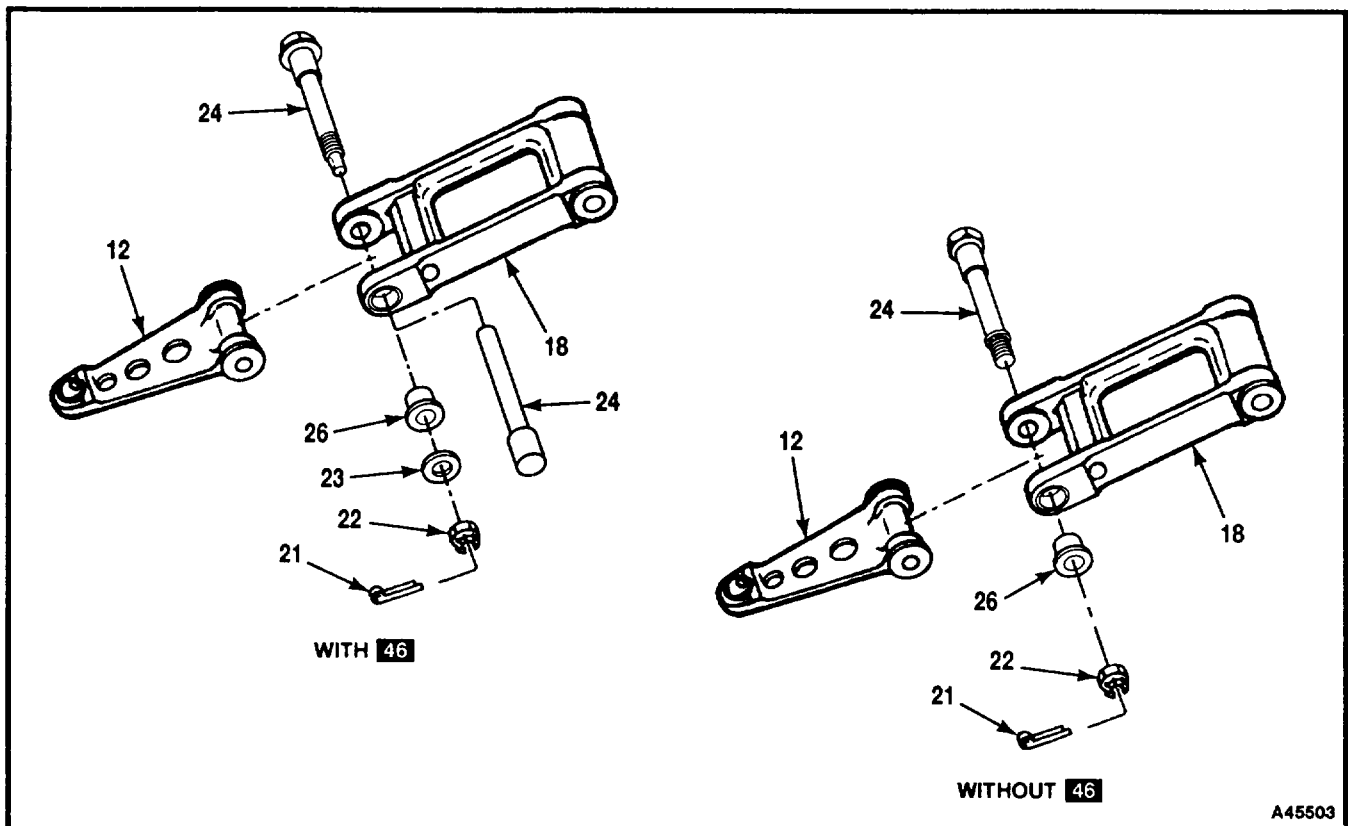

END OF TASK



## 5-102 DISASSEMBLE DRIVE COLLAR (AVIM)

5-102

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Arbor Press  
 Adapter (Appx E-8)

**Materials:**

None

**Personnel Required:**


68D10 Aircraft Powertrain Repairer  
 68D20 Aircraft Powertrain Repairer

**References:**

Appendix E  
 TM 55-1500-322-24

**Equipment Condition:**

Off Helicopter Task

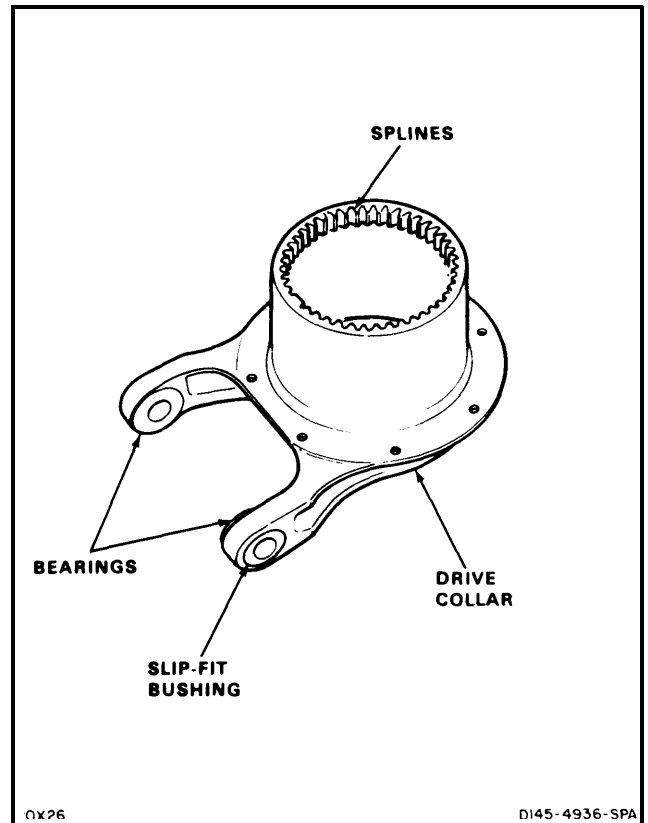
**NOTE**

Procedure is same to disassemble forward or aft drive collar.

1. If installed, **remove bushing (1)** from drive collar lug (2).
2. **Press two bearings (3)** from lugs (2). Use arbor press and adapter (TM 55-1500-322-24).

## FOLLOW-ON MAINTENANCE:

None

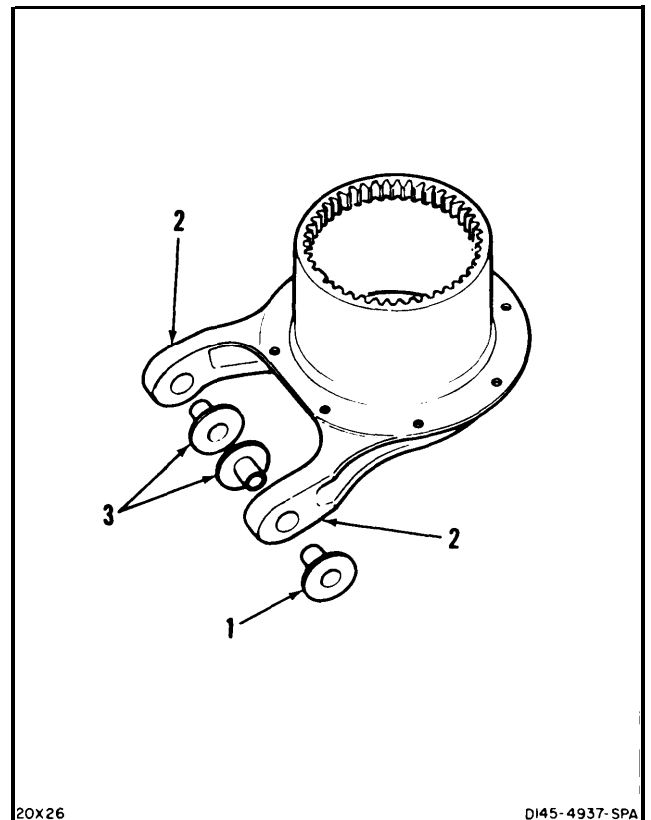**END OF TASK**

INITIAL SETUP


**Applicable Configurations:**  
All

**Tools:**  
Technical Inspection Tool Kit,  
NSN 5180-00-323-5114  
Vernier Caliper  
Pins, Two 0.180 Inch

**Materials:**  
None

**Personnel Required:**  
68D30 Inspector


**Equipment Condition:**  
Off Helicopter Task

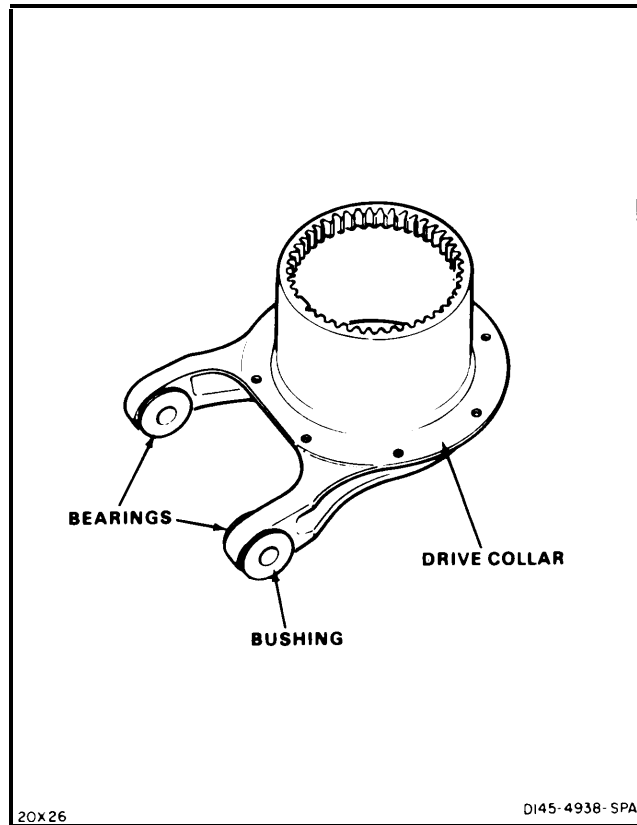

**NOTE**

Procedure is same to inspect forward or aft drive collar.

1. **Check all areas of drive collar (1) for cracks.** There shall be no cracks.

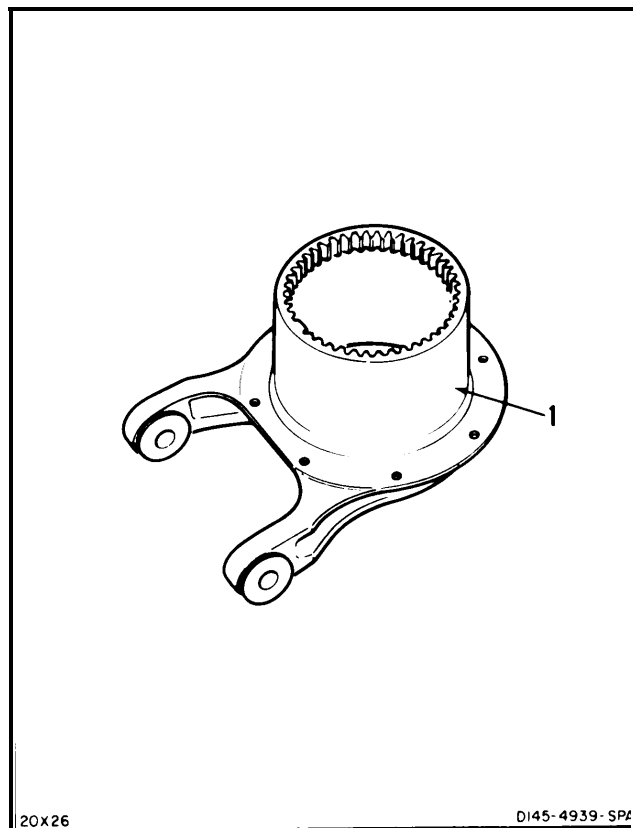


**GO TO NEXT PAGE**

## 5-103 INSPECT DRIVE COLLAR (AVIM) (Continued)


5-103

2. **Check all surfaces of collar (1) for other damage.** Damage which does not exceed 0.005-inch in depth shall be accepted without rework. Damage between 0.005-inch and 0.040-inch in depth shall be blend repaired. Depth of blend repair shall not exceed 10 percent of material thickness, or 0.040-inch, whichever is less. Blend radius must be 1 inch minimum

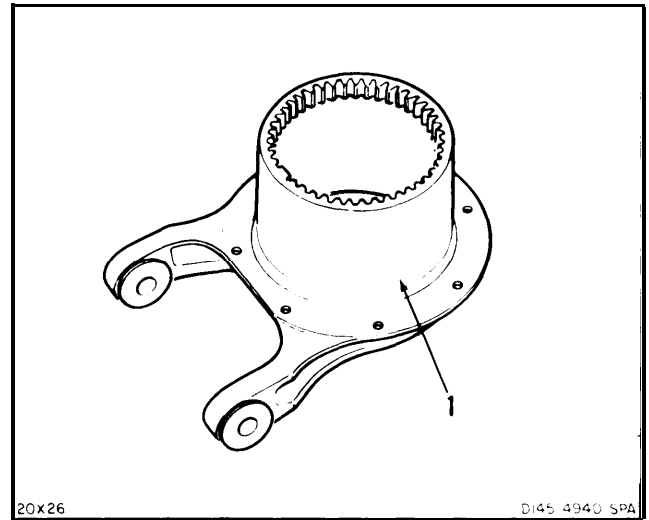

3. **Check inside dimensions of drive collar (1) as follows:**

- a. Apex (2) to apex (3) shall not exceed 5.380 inches.
- b. Pin (4) to pin (5) shall not exceed 5.465 inches using 0.180-inch diameter pins.

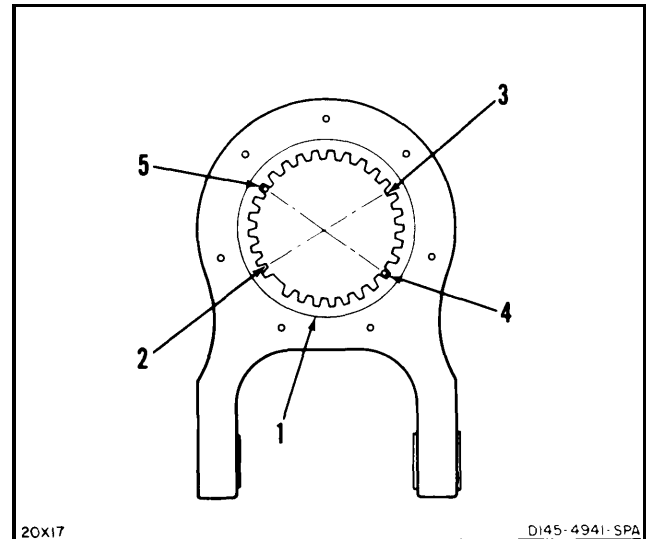


4. **Check teflon coating on bearings (6).**  
Coating shall not be scored, torn or frayed.

FOLLOW-ON MAINTENANCE:

None

END OF TASK

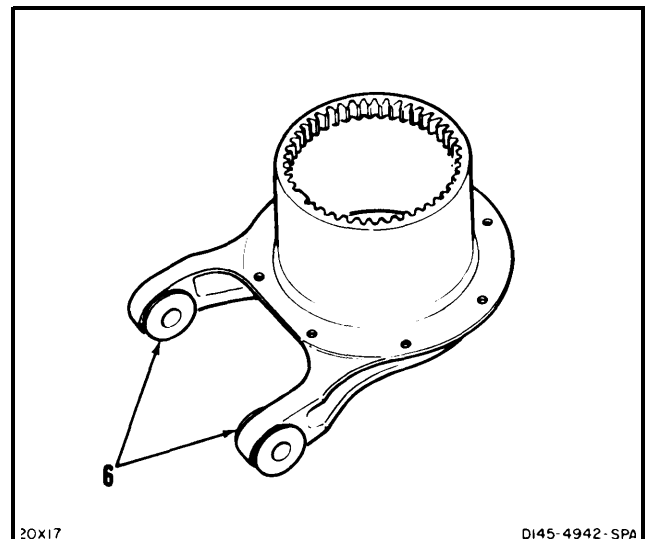

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114

Arbor Press  
Adapter (Appx E-9)

**Materials:**


Epoxy Primer (E293)  
Gloves (E186)

**Personnel Required:**

68D10 Aircraft Powertrain Repairer  
68D20 Aircraft Powertrain Repairer  
68D30 Inspector

**References:**

TM 55-1520-240-23P  
TM 55-1500-322-24  
Appendix E

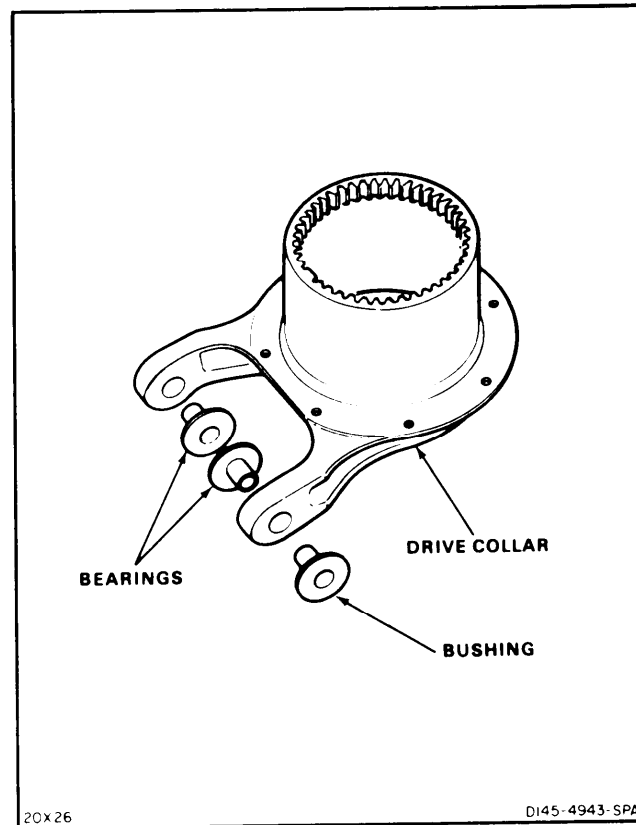**WARNING**

Epoxy primer (E293) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.


**CAUTION**

Do not lubricate bearings. Do not apply primer to inside diameter of bearings. Coating of bearing can be damaged.

**NOTE**

Procedure is same to assemble forward or aft drive collar.



1. Apply epoxy primer (E293) to outside diameter of bearings (1) and bore of lugs (2). Use gloves (E186).
2. **Press bearings (1) into lugs (2).** Use arbor press and adapter (TM 55-1500-322-24).

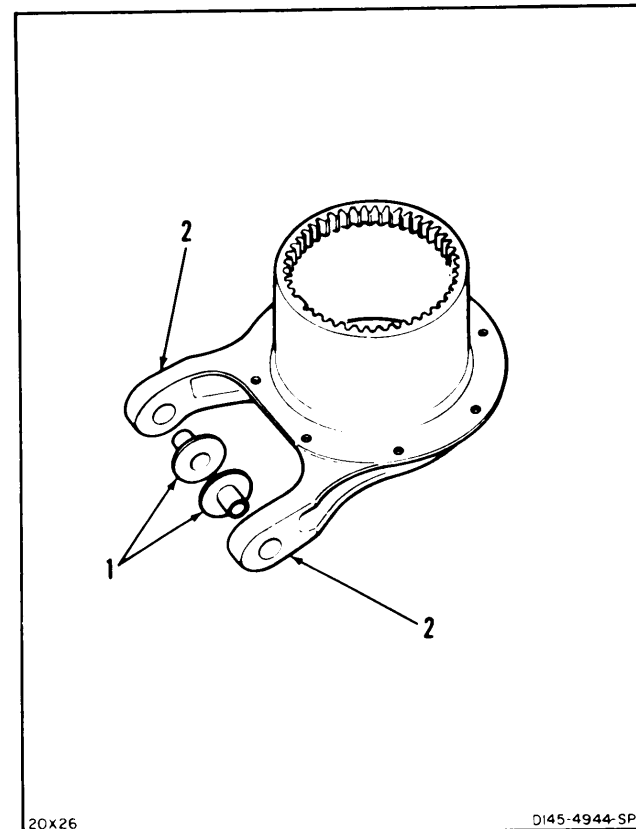**GO TO NEXT PAGE**

3. Install bushing (3).

*INSPECT*

FOLLOW-ON MAINTENANCE:  
None

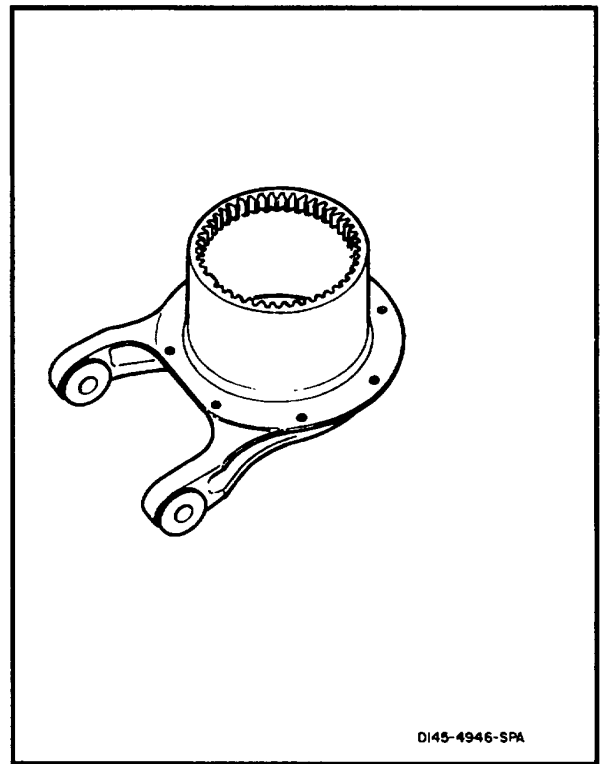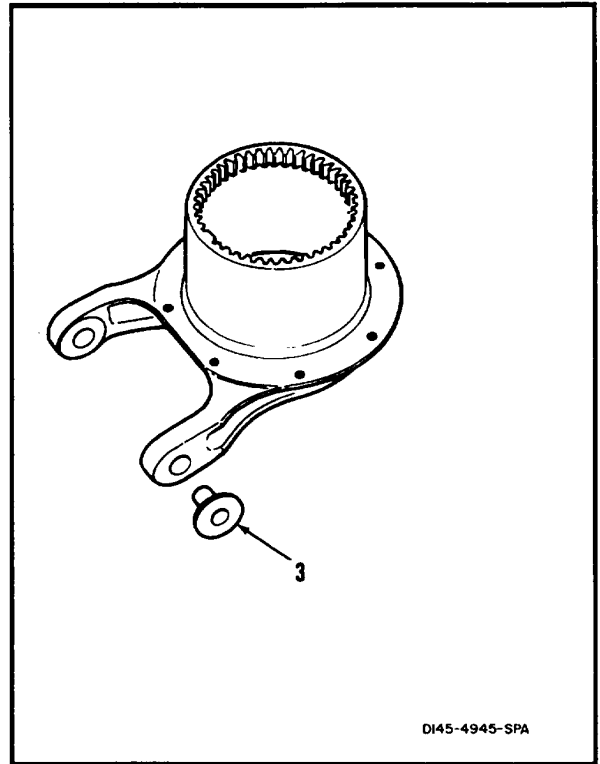

END OF TASK

Change 37 5-383/(5-384 blank)

## 5-106 INSPECT UPPER DRIVE ARM (AVIM)

5-106

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**Technical Inspection Tool Kit,  
NSN 5180-00-323-5114**Materials:**


Crocus Cloth (E122)

**Personnel Required:**

Inspector

**References:**TM 55-1520-240-23P  
TM 55-1500-322-24**Equipment Condition:**

Off Helicopter Task

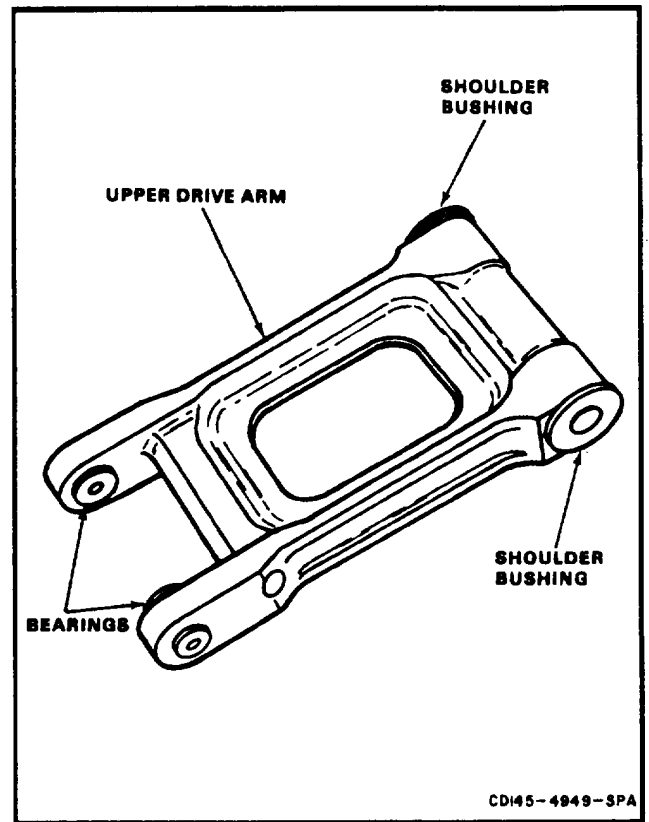


GO TO NEXT PAGE

Change 37 5-385

**NOTE**

Procedure is the same to inspect a forward or aft upper drive arm.

1. **Check teflon coating on two bearings (1).** Coating shall not be torn, scored, or frayed.
2. **Check two shoulder bushings (2) in upper arm (3).** Bushings shall not be loose.
3. **Check the bearing surface of each bushing (2) for damage.** Blend out minor surface damage with crocus cloth (E122). If damage cannot be blended smooth, reject the drive arm.
4. **Measure inside diameter of bearings (1) and bushings (2).** Inside diameter shall not exceed 0.7537 inch on bearings and 0.7517 inch on bushings.
5. **Check all surfaces of drive arm (3) for scratches, pits, or other damage.** Damage which does not exceed 0.005 inch in depth shall be accepted without rework. Damage between 0.005 inch in depth and 0.040 inch in depth shall be blend repaired. Depth of blend repair shall not exceed 0.040 inch or 10 percent of material thickness, whichever is less. Blend radius must be 1 inch minimum.

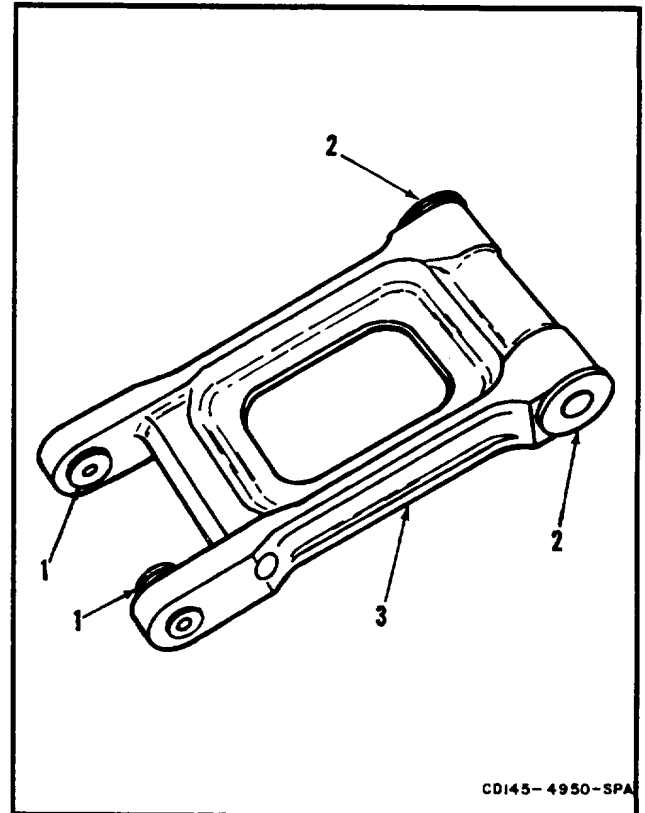

CD145-4950-SPA

**FOLLOW-ON MAINTENANCE:**

None

**END OF TASK**

5-386 Change 37

Tasks 5-107 and 5-108, Including pages 5-387 and 5-388, deleted.



## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114  
Bench Vise  
Goggles  
Vernier Caliper, 3-inch

**Materials:**


Crocus Cloth (E122)

**Personnel Required:**

Aircraft Powertrain Repairer  
Inspector


**Equipment Condition:**

Off Helicopter Task

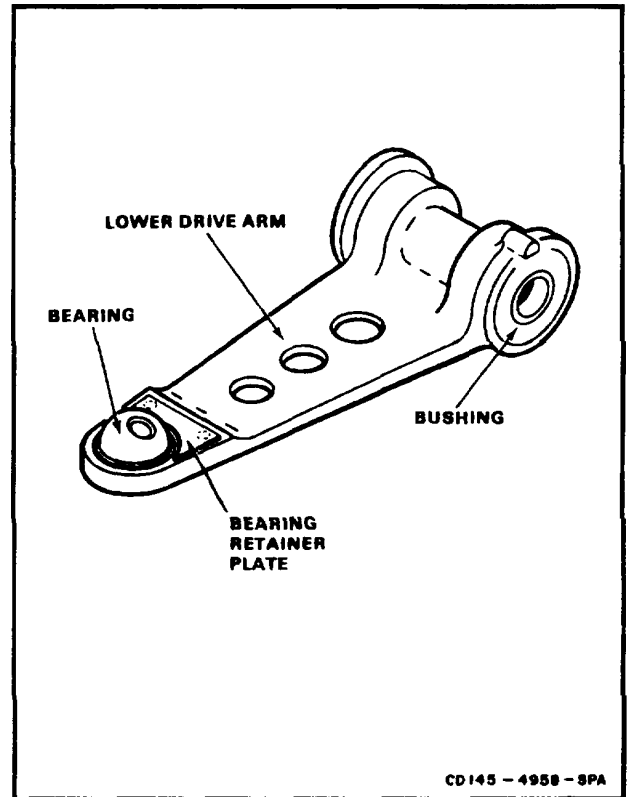**NOTE**

Procedure is the same to inspect a forward or aft lower drive arm.

1. **Check teflon coating on bearing (1).** Coating shall not be torn, scored, or frayed.
2. **Check two shoulder bushings (2) in lower drive arm (3).** Bushings shall not be loose.
3. **Measure inside diameter of bearing (1).** Diameter shall not exceed 0.3755 inch.
4. **Measure inside diameter of bushings (2).** Diameter shall not exceed 0.5647 inch.
5. Check the bearing surface of each bushing (2) for damage. Blend out minor surface damage with crocus cloth (E122). If damage cannot be blended smooth, reject the drive arm.
6. **Check all surfaces of drive arm (3)** for scratches, pits, or other damage. Damage not exceeding 0.005 inch deep shall be accepted without rework. Damage between 0.005 inch and 0.040 inch deep shall be blend repaired. Depth of blend repair shall not exceed 0.040 inch or 10 percent of material thickness, whichever is less. Blend radius must be at least 1 inch.

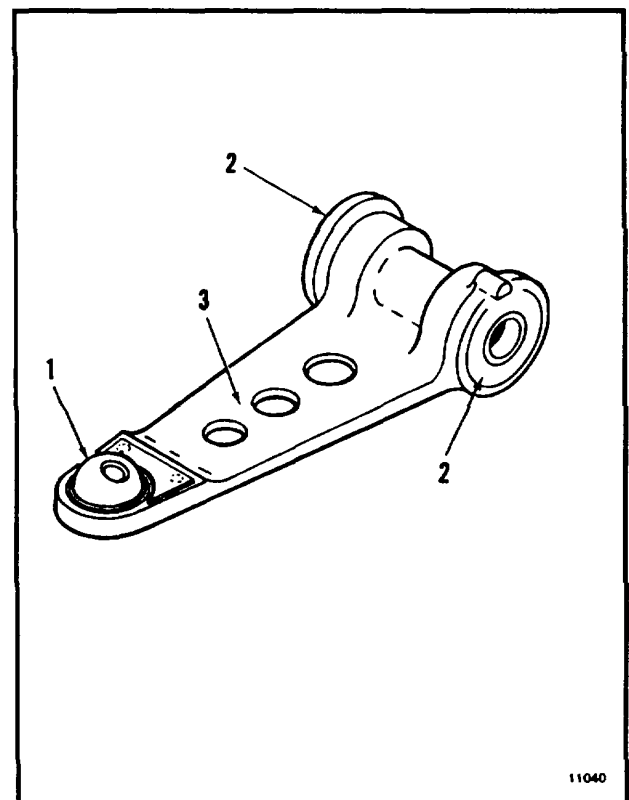


**GO TO NEXT PAGE**  
5-390 Change 37

7. Check axial and radial play in lower drive an bearing (3) as follows:
- Install bolt (4), eight washers (5), and nut (6) in bearing (3).
  - Clamp bolt (4) in bench vise (7).
  - Clamp dial indicator (8) on drive arm (2). Position contact point (9) against vise (7).
  - Try to move arm (2) in horizontal direction. Check dial indicator (8) for movement. Movement shall not exceed 0.006 inch. Make sure bolt (4) does not move in vise (7).
  - Try to move arm (2) in vertical direction. Use feeler gage between arm and jaws of vise (7) to measure movement, Movement shall not exceed 0.003 inch.
  - Remove arm (2) and bolt (4) from vise (7).
  - Remove bolt (4), washers (5), and nut (6) from arm (2).

FOLLOW-ON MAINTENANCE:

- None

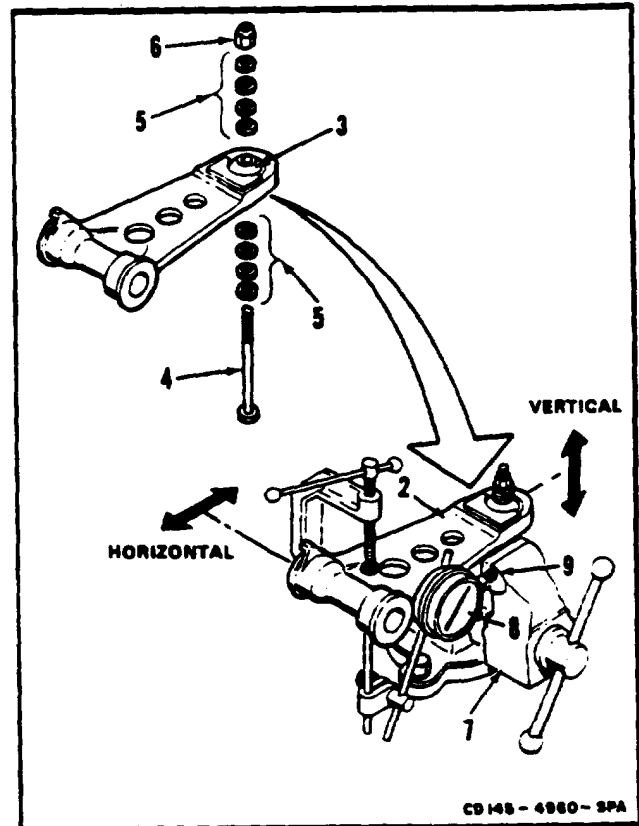

Task 110, pages 5-393 and 5-394 deleted.

**END OF TASK**

Change 38

5-391/(5-392 blank)



## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Technical Inspection Tool Kit,  
NSN 5180-00-323-5114  
Torque Wrench, 30 to 150 Inch-Pounds

**Materials:**

Brush (E86)  
Grease (E190)  
Twine (E433)  
Cloth (E120)  
Toluene (E423)  
Sealant (E336)  
Gloves (E184.1)

**Personnel Required:**


Medium Helicopter Repairer (2)  
Inspector

**References:**

Task 5-112U  
TM 55-1520-240-23P

**General Safety Instructions:****WARNING**

Toluene (E423) can form toxic vapors if exposed to flame. Use in well-ventilated area, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

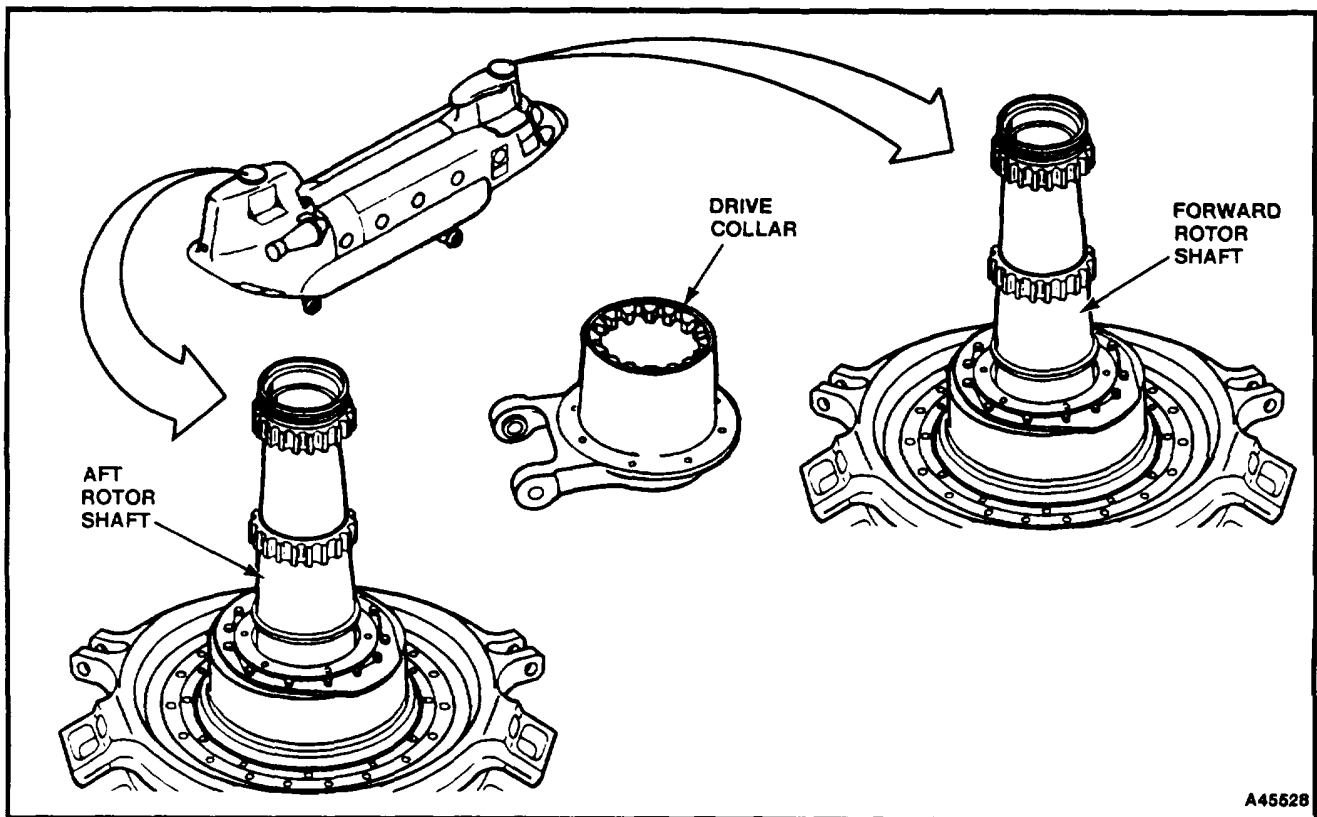


A45628


**NOTE**

Procedure is similar to install a drive collar at the forward or aft head.

1. **Clean splines (1) of drive collar (2) and splines (3) of drive shaft (4).** Use cloth (E120) damp with toluene (E423). Wear gloves (E184.1).
2. **Apply a thick coat of grease (E190) to splines (1 and 3).** Use brush (E86). Make sure spline grooves are full of grease.
3. **Align master splines (5 and 6) of drive collar (2) and drive shaft (4).** **Slide the collar onto the shaft.** Wipe off excess grease with cloth (E120).

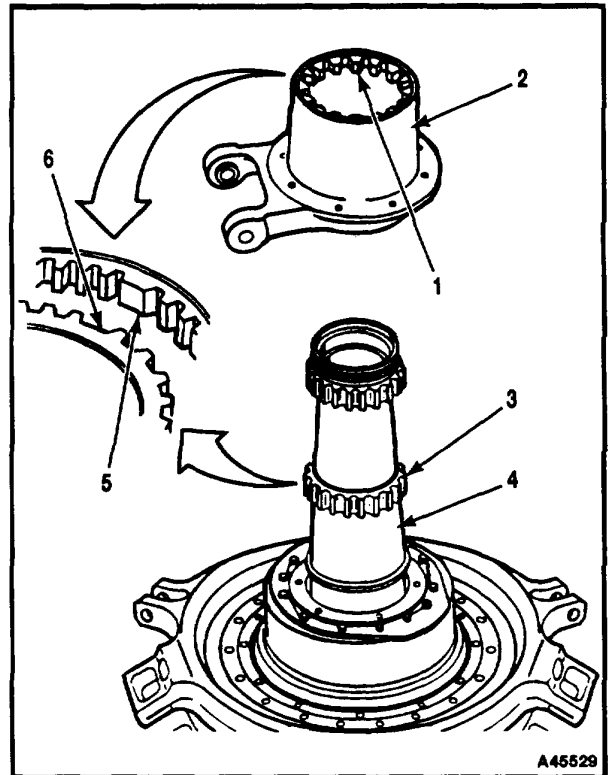

4. **Connect upper drive arm (7) to drive collar (2).** Check clearance at drive arm lugs (Task 5-112).

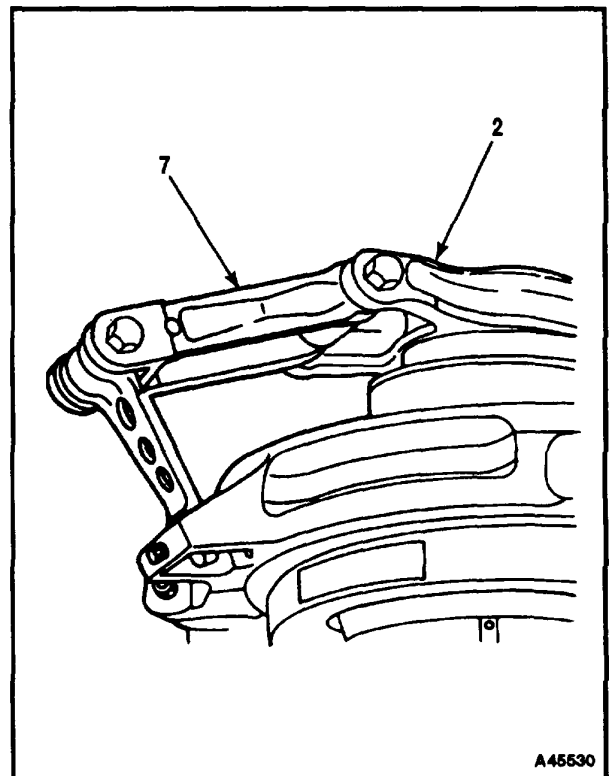

GO TO NEXT PAGE

**WARNING**

Toluene (E423) can form toxic vapors if exposed to flame. Use in well-ventilated area, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- Clean the mating surfaces of drive collar (2) and weather-protective cover (8). Use cloth (E120) damp with toluene (E423). Wear gloves (E184.1).

**NOTE**

Holes are not equally spaced.

- Carefully lower cover (8), with pitch links (9), over drive collar (3). Align holes (10) in the drive collar and cover.

**NOTE**



If weather-protective cover (8) has a stiffener (11), go to step 8.

- Install bolt (12), with washer (13) (under head) washer (14), and nut (15) at each of eight places around cover (8). Torque the bolts to 100 inch-pounds. Go to step 9.
- At stiffener (11), install bolt (12), washers (13 and 14) (under nut), and nut (15) at four places. Install bolt (12), with washer (13) (under head), washer (14), and nut (15) at the remaining four places. Torque all bolts to 100 inch-pounds.

**WARNING**

Sealant (E336) can irritate skin and cause burns. Avoid contact with skin, eyes, and clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.


- Apply sealant (E336) at the junction of drive collar (2) and cover (8). Wear gloves (E184.1).

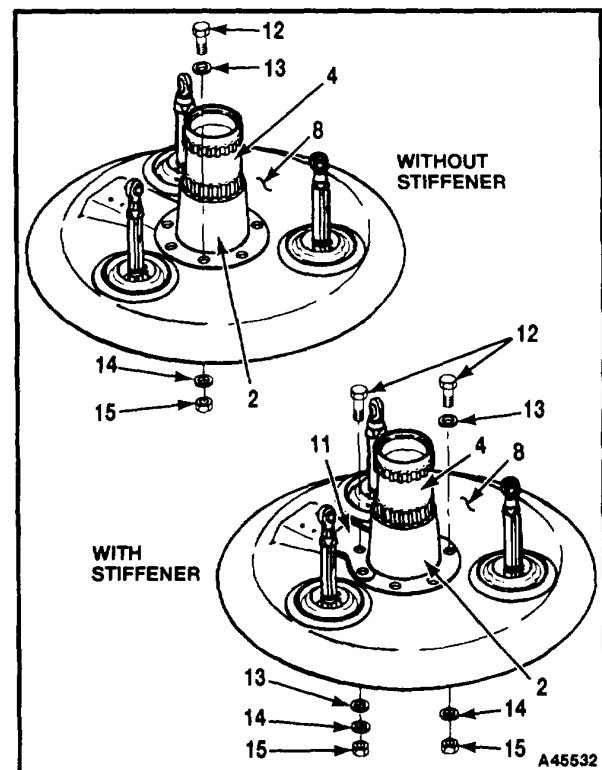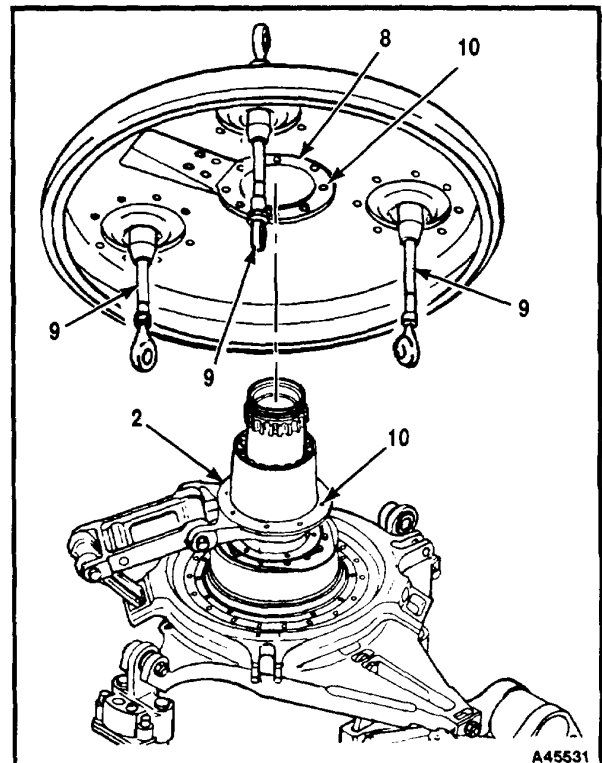

**NOTE**

If installing an aft drive collar, do steps 10 thru 12. If installing a forward drive collar, go to step 13.


10. At aft rotor shaft (4) only, tie three balancing arms (16) together as shown. Use twine (E433).
11. Apply grease (E190) to splines (17) of centrifugal droop stop plate (18). Wipe excess grease from the top and bottom of the plate.
12. Align master splines (19 and 20) of drive shaft(4) and droop stop plate (18). **Install the droop stop plate.**

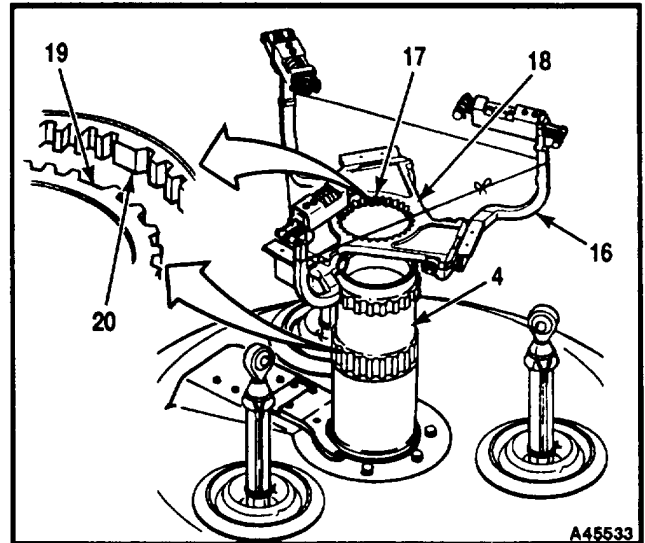

13. At forward rotor shaft (4) only, **install spacer (21)** on drive collar (2).

**INSPECT****FOLLOW-ON MAINTENANCE:**

- Connect pitch link upper end (Task 5-99).
- Install rotary-wing head (Task 5-9).
- Install rotary-wing blades (Task 5-84).
- Close forward or pylon work platforms (Task 2-2).

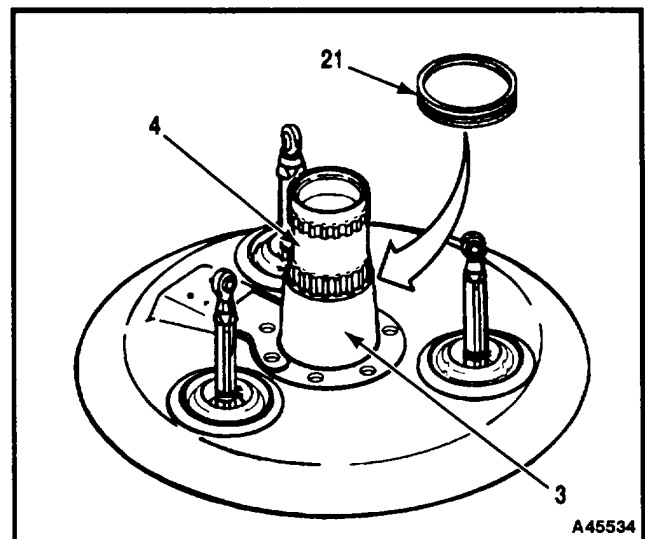**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692
- Torque Wrench, 30 to 150 Inch-Pounds
- Torque Wrench, 100 to 750 Inch-Pounds
- Torque Wrench, 700 to 1600 Inch-Pounds
- Torque Wrench, 100 to 500 Foot-Pounds
- Depth Gage, Dial Indicating, 0 to 0.125 Inch

**Materials:**

- Lockwire (E231)
- Antiseize compound (E75)
- Gloves (E184.1)

**Parts:**

Cotter Pins

**Personnel Required:**

- Medium Helicopter Repairer
- Inspector

**References:**

- Task 1-14
- TM 55-1520-240-23P


**General Safety Instructions:**

**WARNING**

Antiseize compound (E75) can irritate skin and cause burns. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least **15 minutes**. Get medical attention for eyes.

**NOTE**

- There may be two different five digit codes marked on bolt P/N 114R3650-9. The five digit code 81996 is not the manufacturer's CAGE code. If so marked the number 81996 identifies the part as having been manufactured in accordance with a government Technical Data Package (TDP).
- Identify the five digit manufacturer's code or manufacturer's name on the head of the bolt. If the bolt head is marked with one of the CAGE codes or manufacturer's name listed below, the 114R3650-9 bolt is serviceable.
  1. CAGE code 56878 (SPS Technologies Inc.).

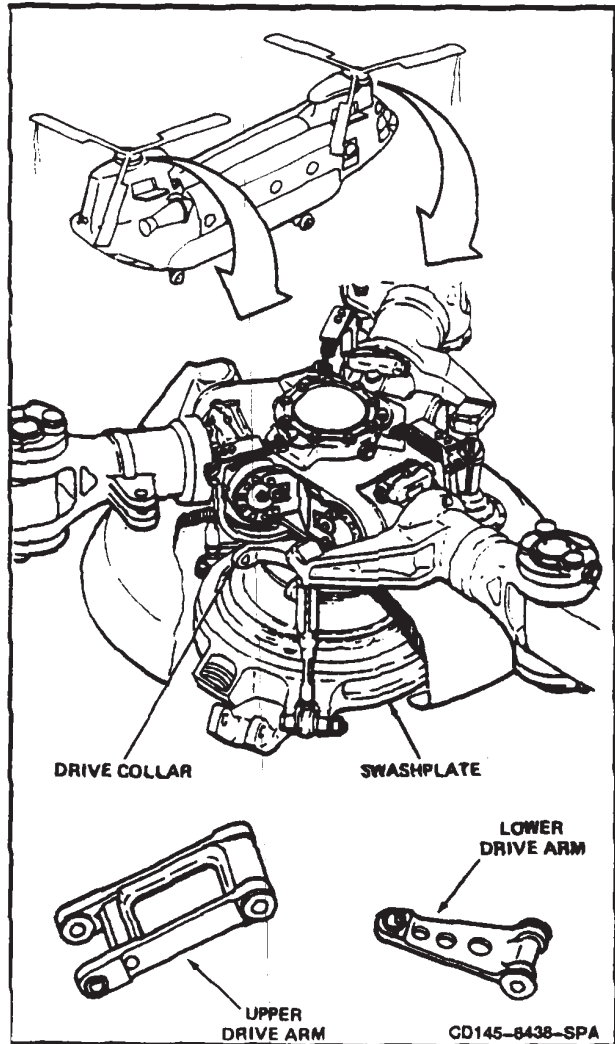

2. CAGE code 84256 (AVIBANK Manufacturing Co.)
  3. CAGE code 77272 (BOEING).
- Remove and replace any unserviceable bolts with serviceable 114R3650-9 bolts from the supply system.
  - The procedure to install forward or aft drive arms is similar. Differences are noted in the text.
  - With **46**, a positive retention bolt is installed at each end of the upper drive arm. They have a pawl which prevents nut or bolt removal unless the pawl is depressed (Task 1-14).
  - Without **46**, impedance bolts are installed in upper and lower drive arm lugs. These bolts are self-retaining and require a special nut and torque (Task 1-14).

**GO TO NEXT PAGE**



1. Check that shouldered bushing (1) is installed in each drive collar lug (2).
2. Remove retaining strap from shouldered bushing (3). Position upper drive arm (4) between drive collar lugs (2).

**NOTE**

- The heads of the two attaching bolts in the upper drive arm shall face the direction of rotation. A forward head is shown. Bolt direction is reversed on the aft head, since rotation is opposite.
- Do not lubricate thread of bolt.


**CONNECT UPPER DRIVE ARM TO DRIVE COLLAR (WITH 46)**

3. Apply a light coat of antiseize compound (E75) to the bushing and shank of bolt (5). Wear gloves (E184.1).
4. Check that bushing (3) is in place. Install bolt (5), washer (6), and nut (7). Torque the nut to

**108 foot-pounds.** Continue tightening the nut as needed to align cotter pin holes in the nut and bolt. **Do not exceed 250 foot-pounds.** Install cotter pin (8).

**CONNECT UPPER DRIVE ARM TO DRIVE COLLAR (WITHOUT 46)**

5. Apply a light coat of antiseize compound (E75) to only the shank of bolt (5). Wear gloves (E184.1).
6. Check that bushing (3) is in place. Install bolt (5). Check that retaining ring (6) is clear of shouldered bushing (3) and is free to turn.
7. Install nut (7). Torque the nut to **500 inch-pounds.** Continue tightening the nut as needed to align cotter pin holes in the nut and bolt (5). **Do not exceed 700 inch-pounds.** Install cotter pin (8).
8. Apply torque of **165 inch-pounds** to the head of bolt (5). The bolt shall not turn.

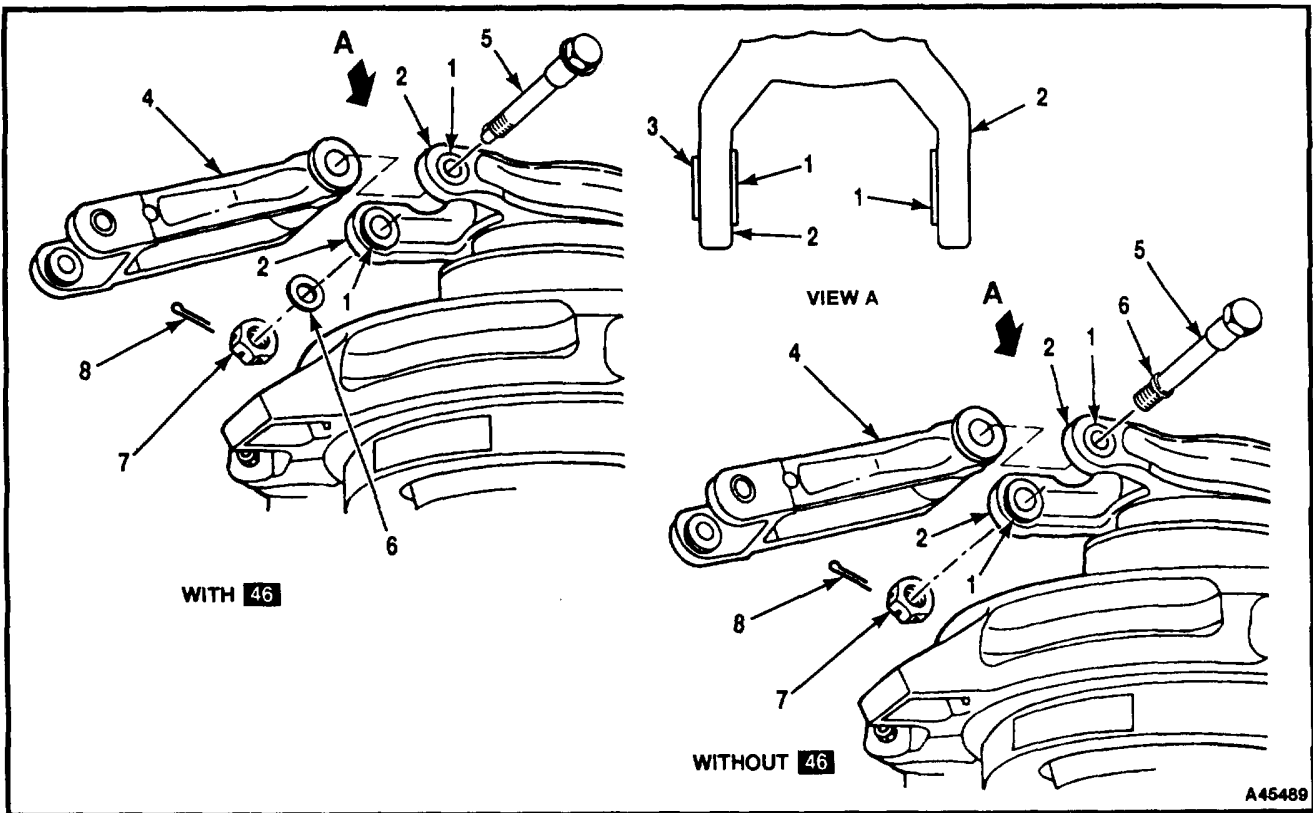


**CONNECT LOWER DRIVE ARM TO SWASHPLATE****WARNING**

If bushing (9) is not installed in swashplate lug (10), personal injury or loss of life could occur.

**NOTE**

At the forward swashplate, make sure lower drive arm is installed in lug marked FWD. At the aft swashplate, make sure lower drive arm is installed in lug marked AFT. Installation at a forward swashplate is shown here.

9. Remove the retaining strap from bushing (9) in swashplate lug (10). If a new swashplate has been installed, check that a bushing (9) is in lug (10). Check for the presence of shouldered bushing (11). Position lower drive arm (12), with mechanical stop (13) outboard, in the swashplate lug. Align bearing (14) with bushings (9) and (11).
10. Install bolt (15), with thin, smaller-inside diameter washer (16) under the head, and larger-inside diameter washer (17) over retaining ring (18). With the bolt fully inserted, check that the retaining ring protrudes past washer (17) and is free to turn.
11. Install nut (19). While holding the nut, torque bolt (15) to **190 inch-pounds**. Continue tightening the bolt as needed to align cotter pin holes in the nut and bolt. **Do not exceed 270 inch-pounds.**
12. Check for clearance between the threaded end of bolt (15) and the inside face of the swashplate, as shown. Clearance shall be at least 0.005 inch. Add a thin or thick washer under the bolt head if needed. Install cotter pin (20).
13. Check that there is a gap between washer (16) and lug (10) as shown.
14. Apply a torque of **65 inch-pounds** to the head of bolt (15). The bolt shall not turn.
15. Lockwire bolt (15) to hole (21) in lug (10). Use lockwire (E231).

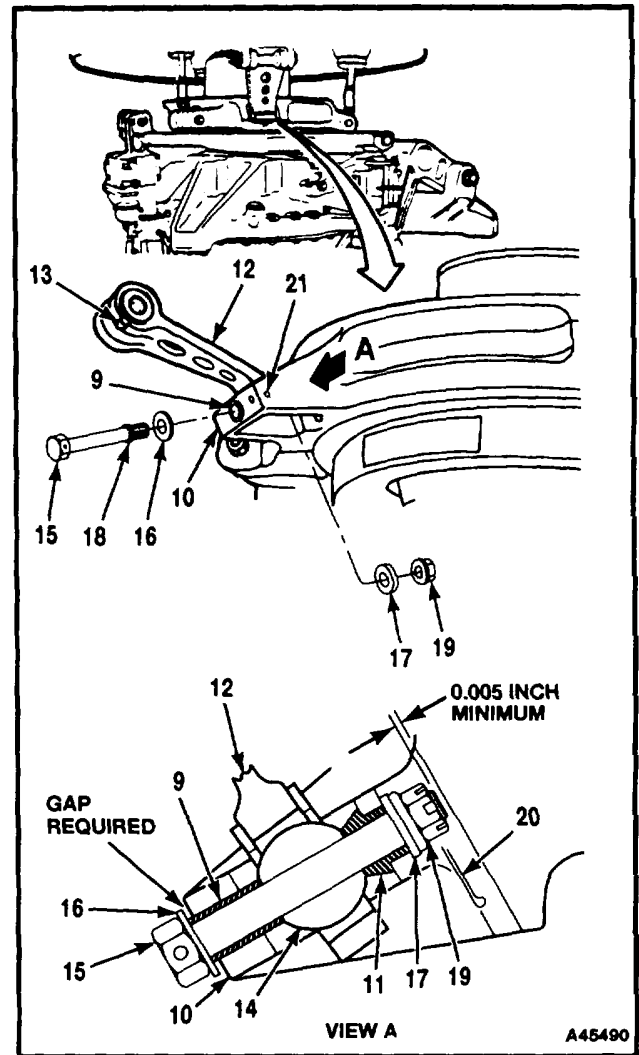**INSPECT**

**GO TO NEXT PAGE**  
5-402 Change 37

- 16. Check that shouldered bushing (22) is in place in each upper drive arm lug (23). Check that a shouldered bushing is in place at each side of lower drive arm (12).
- 17. Remove the retaining strap from shouldered bushing (24). Position lower drive arm (12) between upper drive arm lugs (23).

**CONNECT UPPER AND LOWER DRIVE ARMS (WITH 46)**

**CAUTION**

Do not lubricate thread of bolt.


- 18. Apply a light coat of antiseize compound (E75) to the shank and bushing of bolt (25). Wear gloves (E184.1).
- 19. Check that bushing (24) is in place. Install bolt (25), washer (26), and nut (27). Torque the nut to 480 inch-pounds. Continue tightening the nut as needed to align cotter pin holes in the nut and bolt (25). **Do not exceed 900 inch-pounds**. Install cotter pin (28). Check that there is a gap between the flange of bushing (24) and the surface of lug (23).

**CONNECT UPPER AND LOWER DRIVE ARMS (WITHOUT 46)**

**CAUTION**

Do not lubricate thread of bolt.


- 20. Apply a light coat of antiseize compound (E75) to the shank of bolt (25). Wear gloves (E184.1).
- 21. Check that bushing (24) is in place. Install bolt (25). Check that retaining ring (26) on the bolt is clear of shouldered bushing (24) and is free to turn.
- 22. Install nut (27). Torque the nut to 500 inch-pounds. Continue tightening the nut as needed to align cotter pin holes in the nut and bolt (25). **Do not exceed 700 inch-pounds**.
- 23. Install cotter pin (28).
- 24. Apply torque of 165 inch-pounds to the head of bolt (25). The bolt shall not turn.

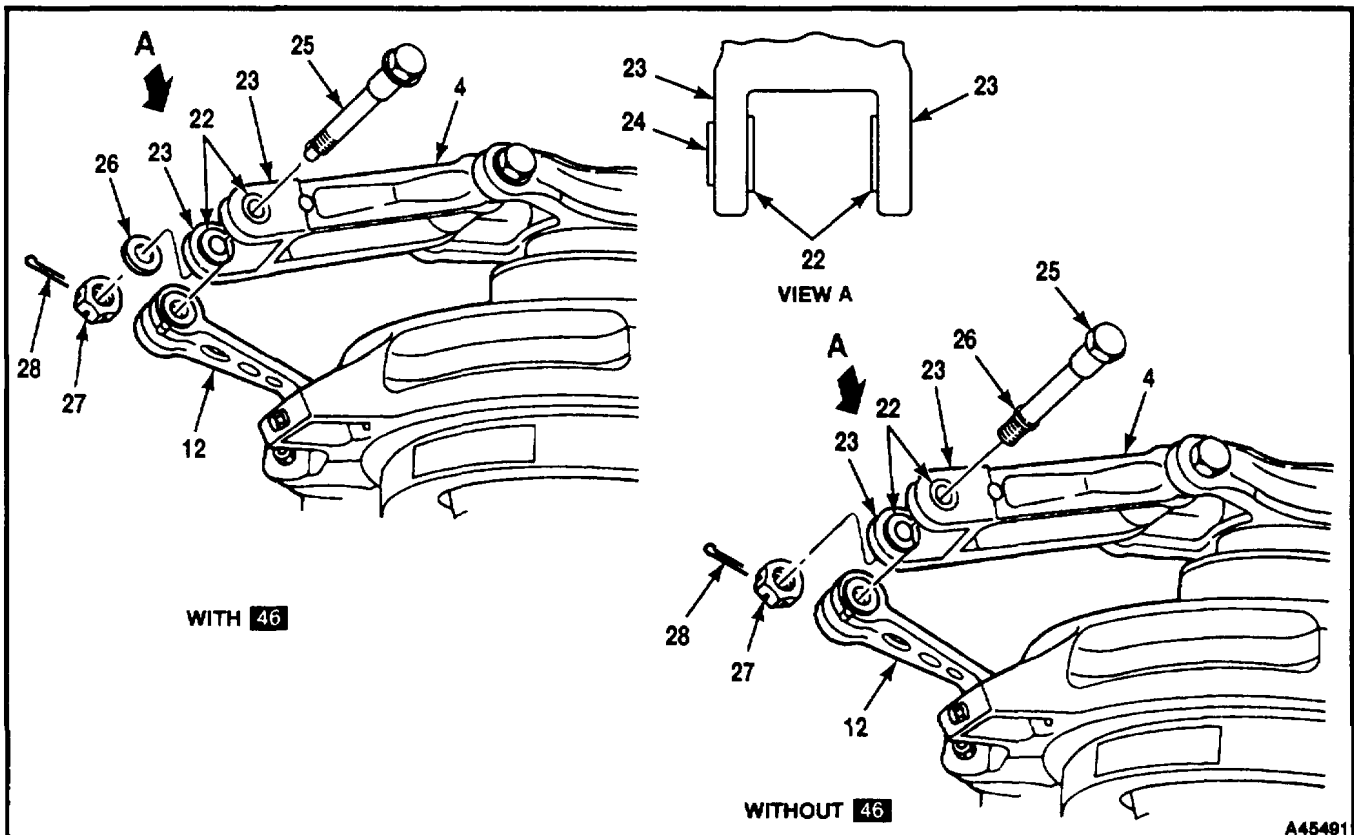

GO TO NEXT PAGE


**CHECK CLEARANCE AT DRIVE ARM LUGS (WITH 46)**

25. Check clearance between upper drive arm (4) and drive collar lugs (2) as follows:
  - a. Press drive arm (4) all the way to one side.
  - b. Measure the gap between drive arm bushing (29) and drive collar lug bushing (1). The gap shall not be greater than 0.010 inch.
26. Check clearance between upper drive arm lugs (23) and lower drive arm (12) as follows:
  - a. Press drive arm (4) all the way to one side.
  - b. Measure distance between upper drive arm bushing (22) and lower drive arm bushing (30). The gap shall not be greater than 0.010 inch.

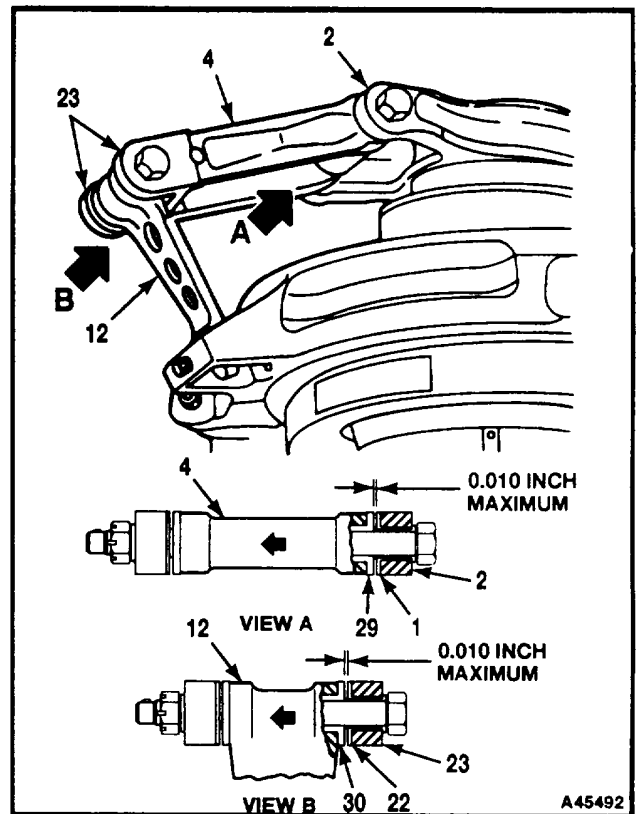

**CHECK CLEARANCE AT DRIVE ARM LUGS (WITHOUT 46)**

27. Check clearance between upper drive arm (4) and drive collar lugs (2) as follows:
  - a. Press drive arm (4) all the way to one side.
  - b. Measure the gap between drive arm bushing (29) and drive collar lug bushing (1). The gap shall not be greater than 0.015 inch.
28. Check clearance between upper drive arm lugs (23) and lower drive arm (12) as follows:
  - a. Press drive arm (4) all the way to one side.
  - b. Measure the gap between upper drive arm bushing (22) and lower drive arm bushing (30). The gap shall not be greater than 0.010 inch.

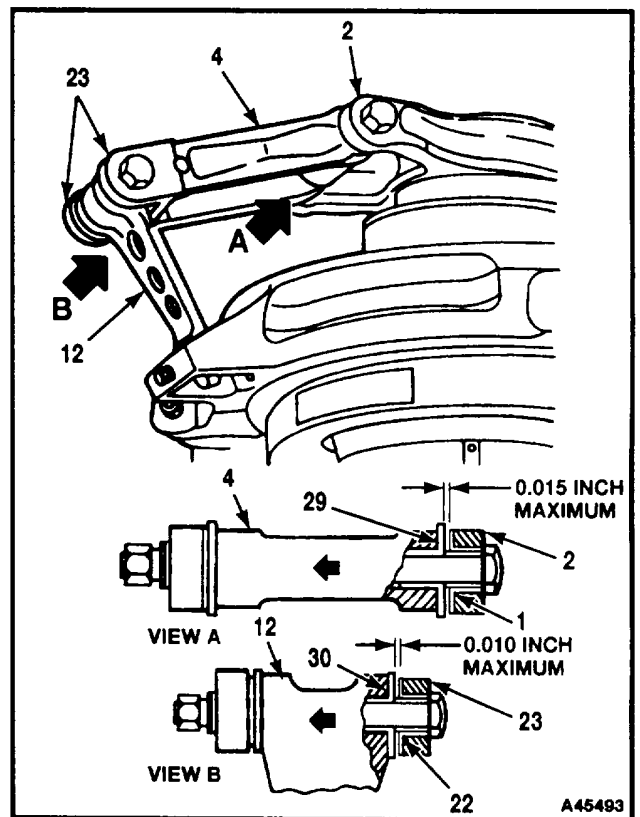

**INSPECT**

**FOLLOW-ON MAINTENANCE:**

- Connect pitch links to swashplate (Task 5-99).
- Close work platforms (Task 2-2).

**CAUTION**

With **46** positive retention bolts are installed in upper and middle drive arm lugs. They have a pawl which prevents nut or bolt removal unless pawl is depressed (Task 1-14).

**NOTE**

Procedure is same to install forward or aft drive arms.

1. Check that flanged sleeve bushing (1) is installed in drive collar lug (2), on the nut side.

**NOTE**

- Forward head shown. Bolt head is positioned in direction of rotation. Bolts are reversed on aft head.
- Do not lubricate thread of bolt.

2. Position upper drive arm (3) between lugs (2). Apply light coat antiseize compound (E75) to bushing and shank of bolt (4). Wear gloves (E186).

**NOTE**




Washer (4.1) is to be used only with plain castellated nut PIN AN302-12.

3. Install bolt (4), washer (4.1) and nut (5). Torque nut to 1300 to 1500 Inch-pounds. Continue tightening only as needed to align cotter pin hole. Do not exceed 3000 inch-pounds. A positive gap is required between flanged sleeve bushing (1) and drive collar lug (2). Install cotter pin (6).

**CAUTION**

Without **46** impedance bolts are installed in all three drive arm lugs. These bolts have special removal and installation requirements (Task 1-14).

4. Position upper drive arm (3) between lugs (2). Apply antiseize compound (E75) only to grip portion of bolt (4). Wear gloves (E186).
5. Install bolt (4). Check that retaining ring (4.2) is clear of sleeve bushing (1) and turns freely. Install nut (5). Torque nut to 500 to 700 Inch-pounds. Install cotter pin (6).
6. Apply 165 Inch-pounds torque to head of bolt (4). Bolt shall not turn.

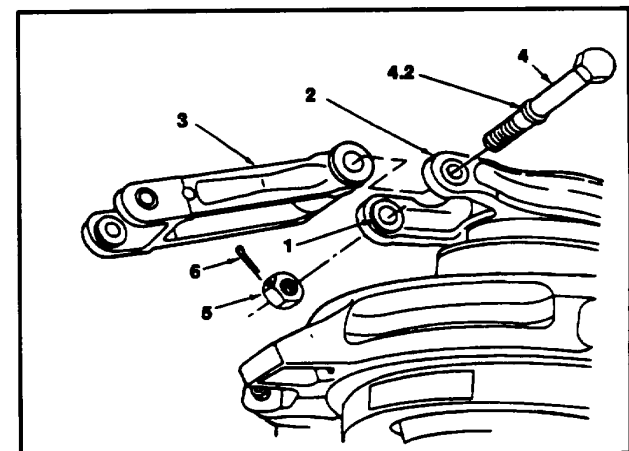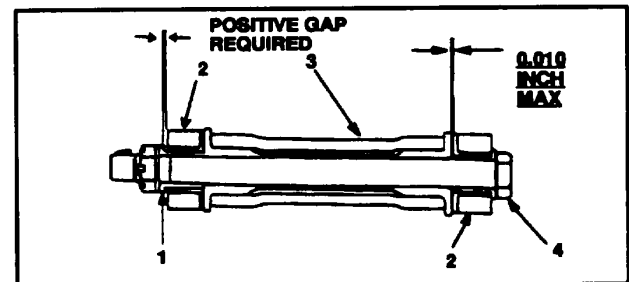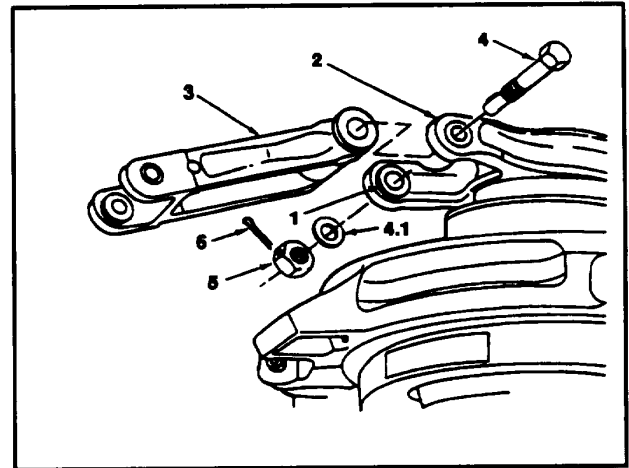

GO TO NEXT PAGE

5-112 INSTALL DRIVE ARMS (Continued)

5-112

**NOTE**

At forward swashplate, make sure lower drive arm is installed in lug marked FWD. At aft swashplate, make sure lower drive arm is installed in lug marked AFT. Installation at forward swashplate is shown here.

- 7. Position lower drive arm (7) with mechanical stop outboard in correct swashplate drive arm lug (8).

**CAUTION**

Slip bushing (9) **Does Not** come with swash-plate assembly. Ensure bushing (9) is installed.

- 8. Check that bushing (9) is installed.

**CAUTION**

An impedance bolt is installed in lower drive arm lug. This bolt has special removal and installation requirements. Refer (Task 1-14).

- 9. Install bolt (10), thin washer (11), washer (12), and nut (13). Torque bolt to 190 to 270 inch-pounds as needed for cotter pin hole alignment.

- a. Apply 65 inch-pounds torque to head of bolt of (10). Bolt shall not turn.



- 10. Check clearance between threaded end of bolt (10) and inside of lug (8). Clearance shall be at least 0.005 inch. Add washer under bolt head if needed; (one thick, or one thin, or one thick and one thin). Check for at least 0.001 inch gap, between washer (11) under the head of bolt (10) and the face of lug (8).

- 11. Install cotter pin (14). Lockwire bolt (10) to hole (15) in lug (8). Use lockwire (E231).

- 12. Deleted.

**INSPECT**

**GO TO NEXT PAGE**

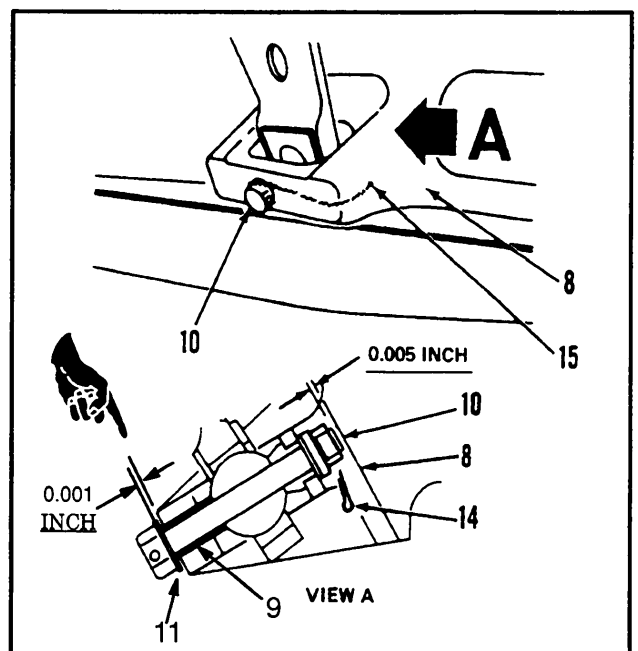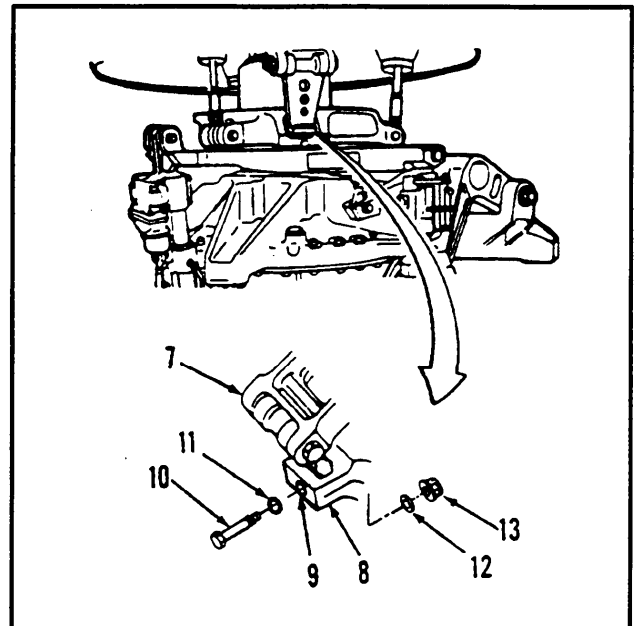



## 5-113 CLEAN INSTALLED SWASHPLATE

5-113

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**

Cloth (E120)

Dry Cleaning Solvent (E162)

Gloves (E186)

**Personnel Required:**

67U10 Medium Helicopter Repairer

**Equipment Condition:**


Battery Disconnected (Task 1-39)

Electrical Power Off

Hydraulic Power Off

One Forward and One Aft Rotary-Wing Blade  
Tied Down (Task 1-26)

Work Platform Open As Required (Task 2-2)

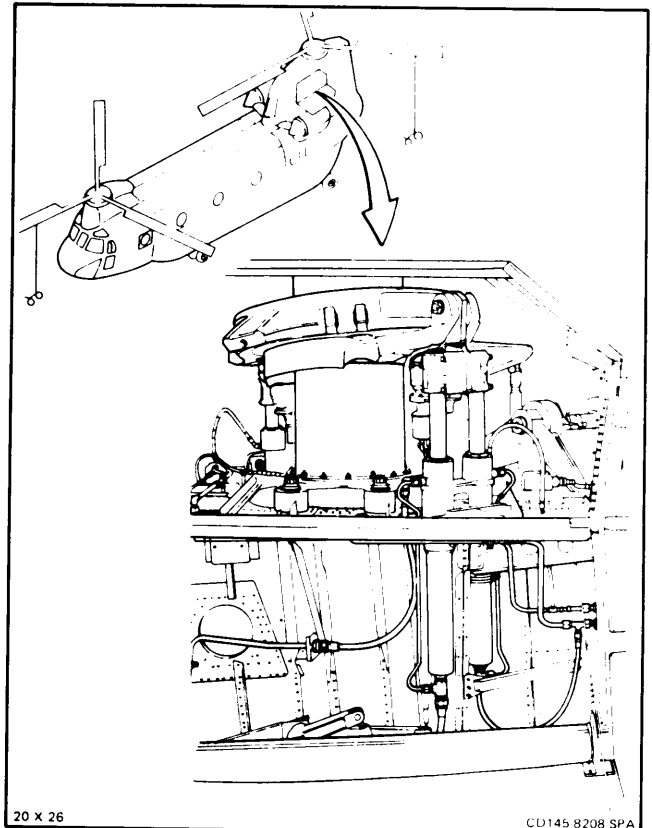

20 x 26

CD145-8208 SPA

**WARNING**

Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**CAUTION**

Do not use excessive solvent (E162). Too much solvent can wash foreign material into bearing and seal area.


**NOTE**

Procedure is same to clean forward or aft swashplate. Aft swashplate is shown in task.

1. Clean swashplate (1). Use cloth (E120) damp with solvent (E162). Wear gloves (E186).

## FOLLOW-ON MAINTENANCE:

None

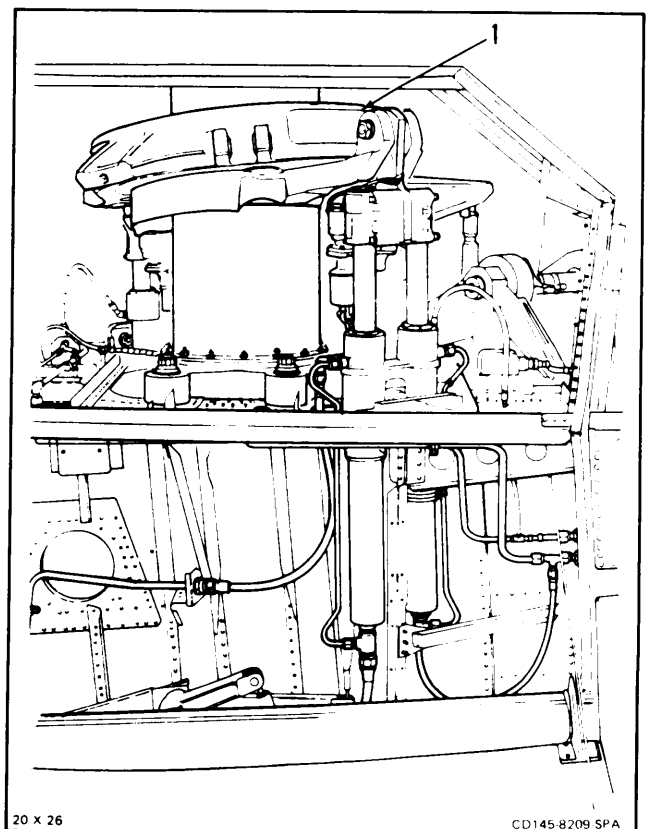**END OF TASK**

20 x 26

CD145-8209 SPA



## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Technical Inspection Tool Kit,  
NSN 5180-00-323-5114  
Dial Indicating Scale, 0 to 100 Pounds  
Torque Wrench, 100 to 750 Inch-Pounds  
Wood Blocks (2), 5 x 2 x 3/4 Inches  
Web Strap

**Materials:**

Twine (E433)

**Parts:**

Cotter Pins

**Personnel Required:**

67U20 Medium Helicopter Repairer (2)  
67U30 Inspector

**References:**


Task 5-97  
Task 5-99  
Task 5-115  
Task 5-116  
Task 5-132  
Task 5-133

**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
One Forward and One Aft Rotary-Wing Blade  
Tied-Down (Task 1-26)  
Work Platform Open (Task 2-2)  
Safety Blocks Removed (Task 11-29)

**NOTE**


- Ball spherical friction check may be performed off helicopter with swashplate temporarily installed on slider shaft.
- Spherical bearing friction check is same for forward and aft swashplates. Aft swashplate is shown here.

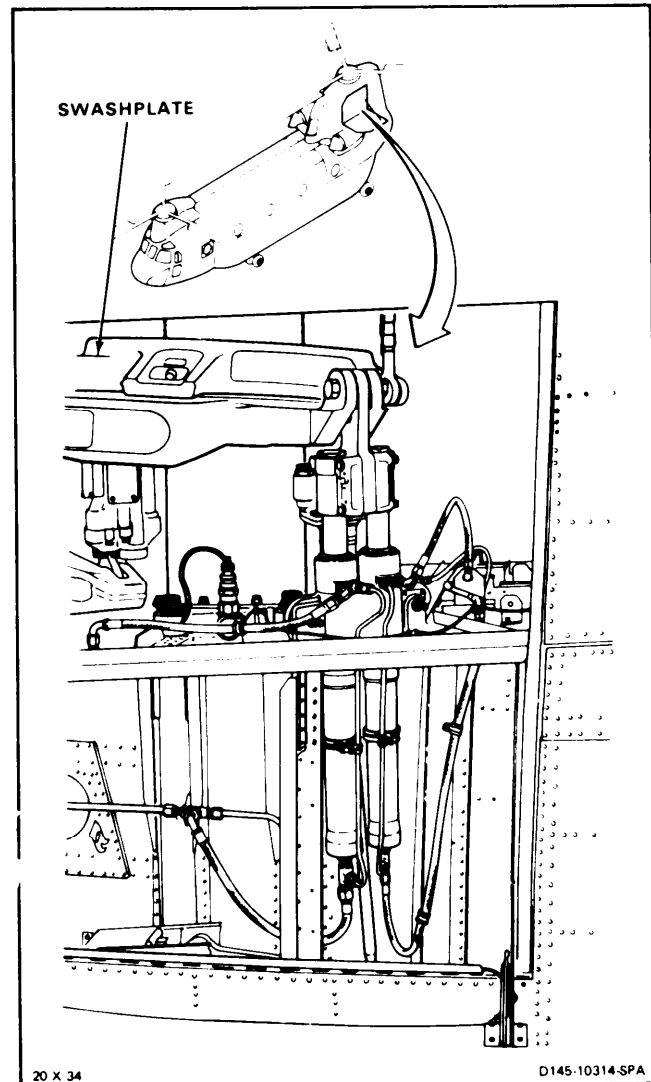**GO TO NEXT PAGE**


**5-114 BALL SPHERICAL BEARING FRICTION CHECK (Continued)****5-114****NOTE**

Rotary-wing head removed for clarity.

1. **Check ball spherical bearing (1).** Refer to Task 5-123.1 for repair criteria of bearing.

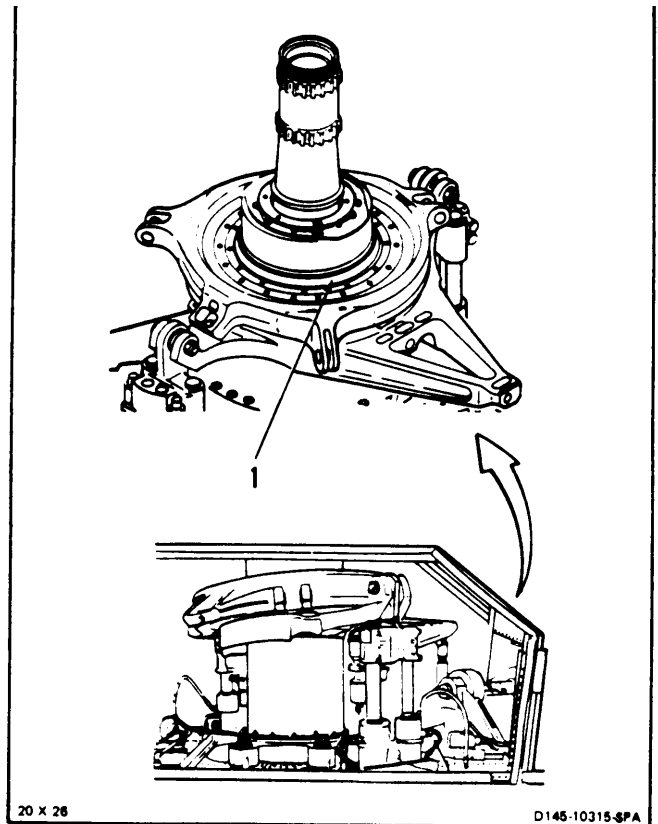

2. **Disconnect three pitch links (2).** Have helper guide pitch links. Do not remove pitch link boots (3) (Task 5-97).
3. Pull pitch links (2) up as far as they will go without damage to boots (3) and covers (4). Tie links together. Use twine (E433).

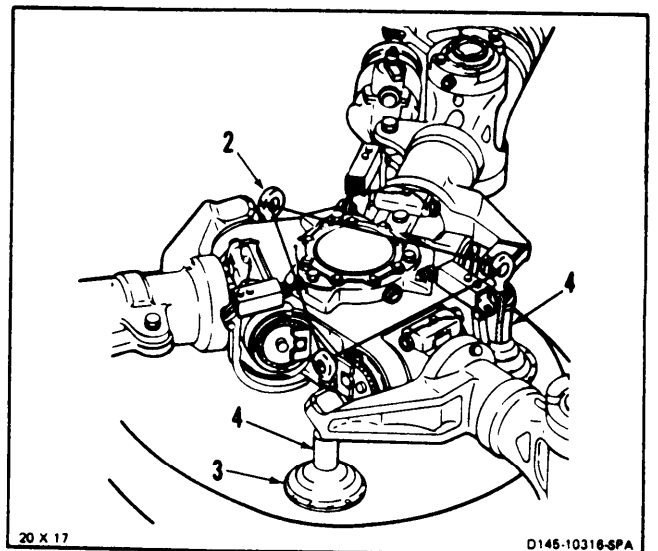

**GO TO NEXT PAGE**

4. Apply electrical power to helicopter.

**CAUTION**


Have helper guide pitch links. Components can be damaged if forced together under pressure.

5. Apply hydraulic power to flight control system.


**CAUTION**

Do not move thrust control quickly. Thrust control must be raised very slowly when pitch links are disconnected, or controls can be damaged.

6. Press THRUST CONT BRAKE TRIGGER switch (5). Raise thrust control (6) slowly to full up position. Release switch.

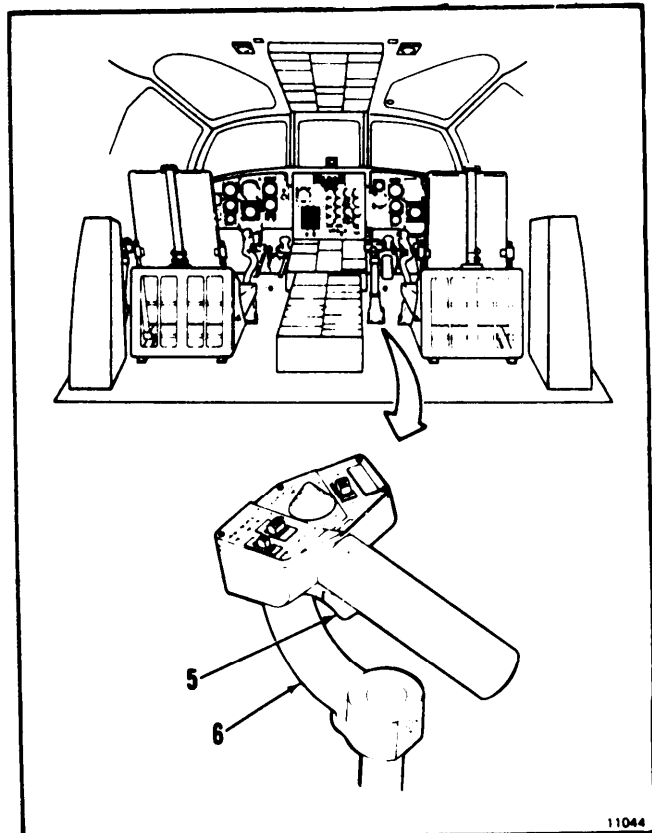

7. Position two support blocks (9) on slider shaft (10). Secure blocks. Use web strap.
8. Remove cotter pin (11), nut (12), washer (13), and bolt (14) from upper end of two actuating cylinders (7 and 8).

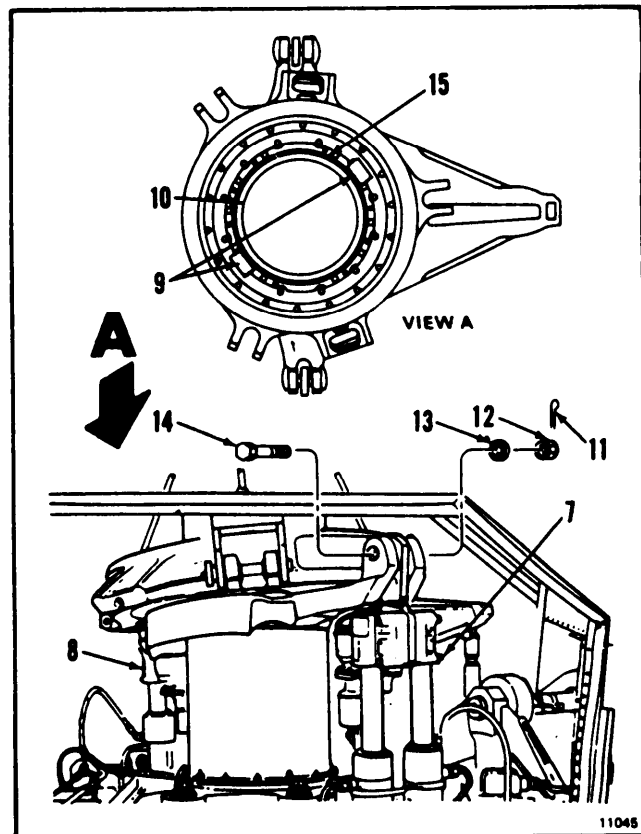


**GO TO NEXT PAGE**

**NOTE**

Moving thrust control down lowers actuating cylinders to simplify friction check.

9. Press THRUST CONT BRAKE TRIGGER switch (5). **Move thrust control (6)** slowly to **full down** position. Release switch.
10. **Remove hydraulic and electrical power** from helicopter.

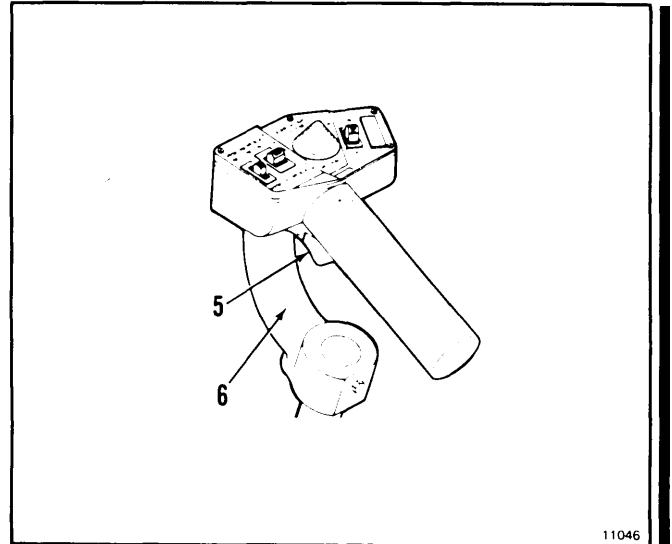


11046

**WARNING**

**Do not apply hydraulic boost pressure to move actuating cylinders when personnel are making swashplate friction check. Injury to personnel can result.**

11. Move swashplate (16) so rotating ring (17) is clear of actuating cylinders (7 and 8).
12. Install two bolts (18) through actuating cylinder lugs (19) on stationary ring (20).
13. **Lift lugs (19) all the way up.** Use bolt (18).

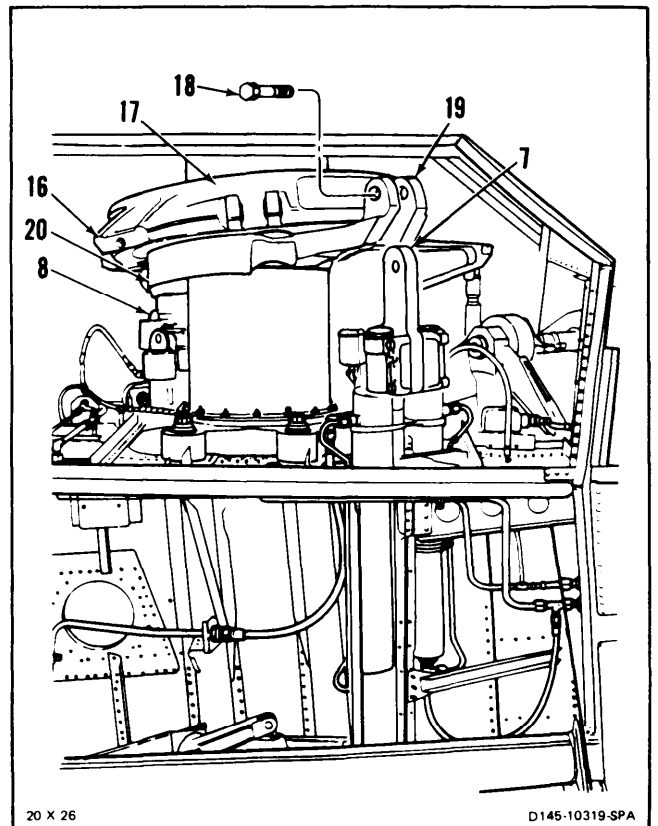

20 X 26

D145-10319-SPA

**GO TO NEXT PAGE**

14. Attach dial indicating scale (21) to bolt (18).
15. Pull scale (21) down in curved motion following path of swashplate (16) as it tilts. Read scale after ring begins to move. Force needed to keep swashplate moving shall be between 1.25 and 63.5 pounds.

**NOTE**


Do not read force needed to start swashplate tilt. This includes added force needed to overcome inertia.

16. If force in step 15 is 1.25 pounds or less, check axial movement of swashplate stationary ring (20). If movement is more than 1/8-inch, replace swashplate (16) (Task 5-115 and 5-132, or 5-166 and 5-133).
17. If force in step 15 is more than 63.5 pounds, replace spherical bearing (Task 5-125).

**NOTE**

If bearing replacement does not reduce force to move swashplate to within limits, replacement of the swashplate (16) may be necessary. (There is no limit to the number of bearing replacements that can be accomplished; however, good judgment should be used).


18. Remove scale (21). Remove bolts (18).
19. Position lugs (19) over actuating cylinders (7 and 8).

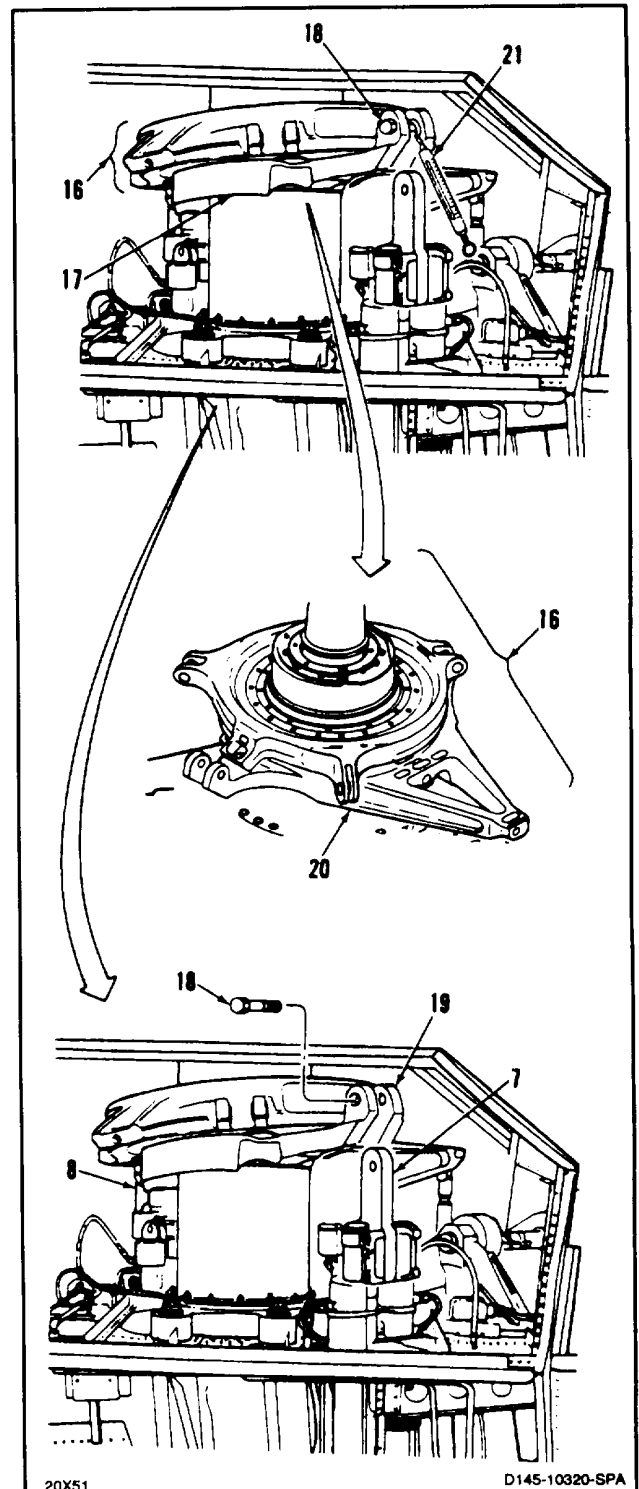


GO TO NEXT PAGE

**5-114 BALL SPHERICAL BEARING FRICTION CHECK (Continued)****5-114**


20. **Apply electrical power** to helicopter.
21. **Apply hydraulic power** to helicopter.
22. Press THRUST CONT BRAKE TRIGGER switch (5). **Raise thrust control (6)** slowly.

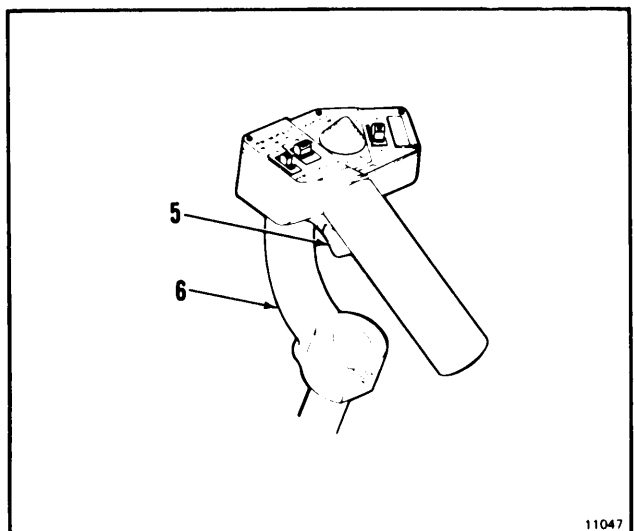

23. Align actuating cylinders (7 and 8) with swashplate lugs (19).

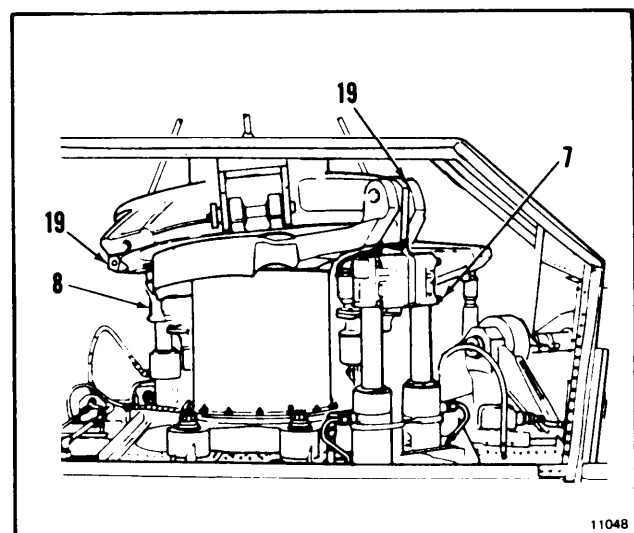


24. Release THRUST CONT BRAKE TRIGGER switch (5) of thrust control (6).

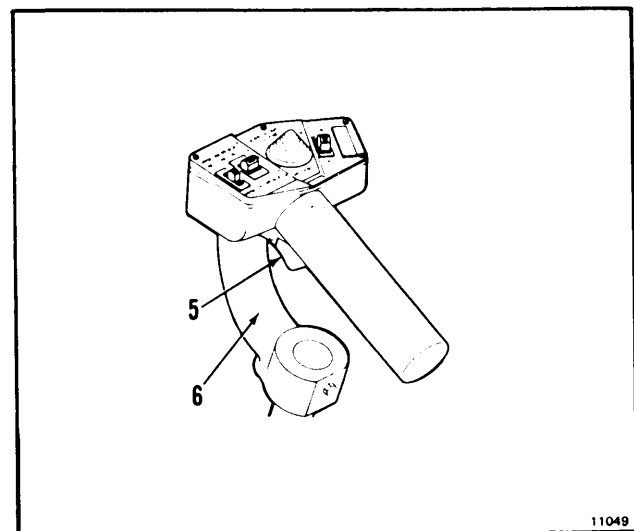
**GO TO NEXT PAGE**

25. Install bolts (14), washers (13), and nuts (12) in actuating cylinders (7 and 8). **Torque nuts in aft swashplate to 660-780 inch-pounds. (1400 inch-pounds maximum for cotter pin alignment).** Install cotter pins (11).


25.1. **Torque nuts in forward swashplate to 400 to 660 inch-pounds.** A third washer, AN960-816L, may be required for cotter pin alignment. Install cotter pins.

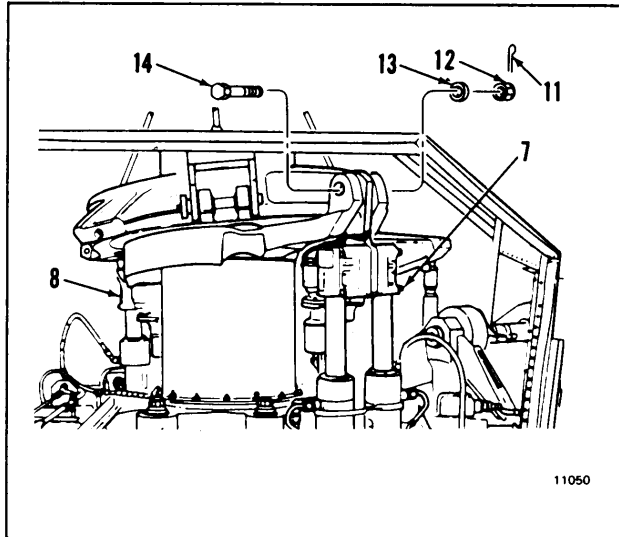

26. Press THRUST CONT BRAKE TRIGGER switch (5). Raise thrust control (6) slowly,

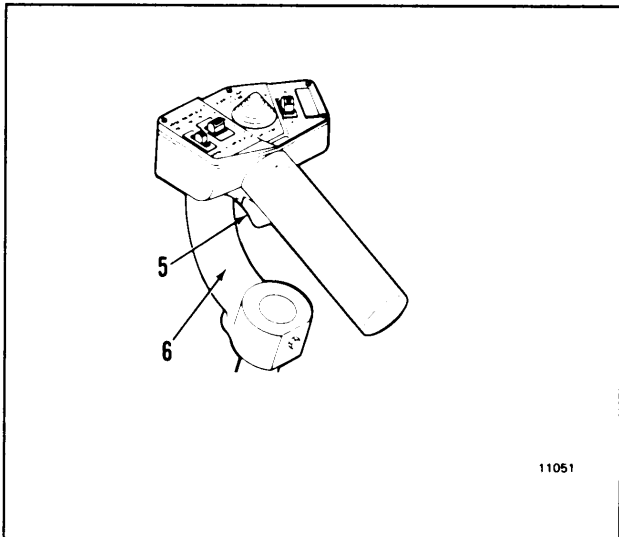


27. Remove two support blocks (9),  
 28. Position swashplate (16) for pitch link (2) installation.

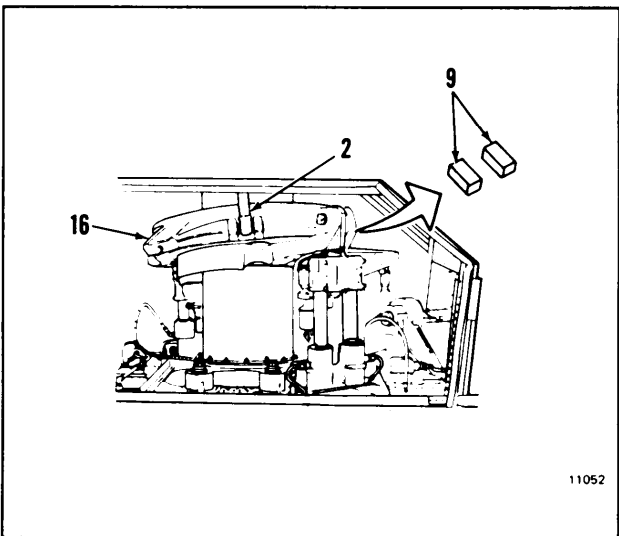


**5-114 BALL SPHERICAL BEARING FRICTION CHECK (Continued)****5-114**

29. Release THRUST CONT BRAKE TRIGGER switch (5).
30. Remove electrical and hydraulic power from helicopter.

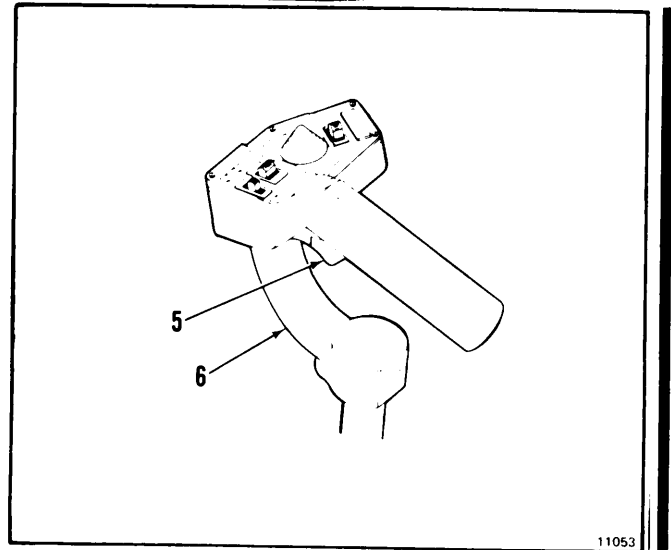

31. Remove twine (E433) (4). Lower three pitch links (2).

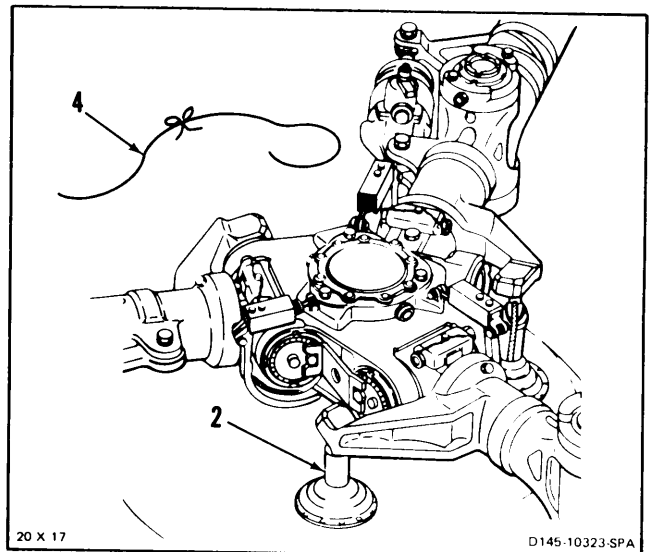**FOLLOW-ON MAINTENANCE:**

- Connect pitch link upper end (Task 5-99).
- Close work platforms (Task 2-2).
- Remove tiedown lines from forward and aft blades (Task 1-26).

**END OF TASK**



**5-114.1 SPHERICAL BALL/SPHERICAL BALL BEARING AXIAL PLAY CHECK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692
- Pencil

**Materials:**


Cardboard

**Personnel Required:**

- Medium Helicopter Repairer (2)
- Inspector

**Equipment Condition:**

- Battery Connected (Task 1-39)
- Electrical Power On
- Hydraulic Power On
- Work Platform Open, as Required  
(Task 2-2)
- Tiedown Lines Installed on One Forward and  
One Aft Blade (Task 1-26)

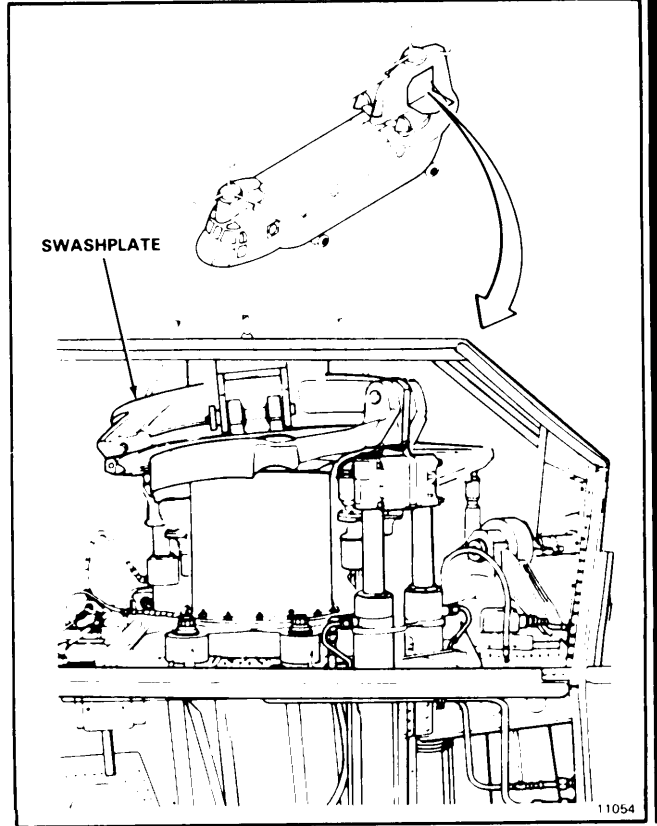


**NOTE**

Spherical ball/spherical ball bearing axial play check is same for forward or aft swashplate. Aft is shown here.

**WARNING**

Restrain blades when thrust control is raised or lowered to prevent injury to personnel and damage to the aircraft. Aft blade can hit the strobe light when thrust control is full up.

1. Keep the control stick (1) and directional pedals (2) at neutral position.
2. Press the thrust control brake trigger (3). Raise the thrust control (4) to full up.

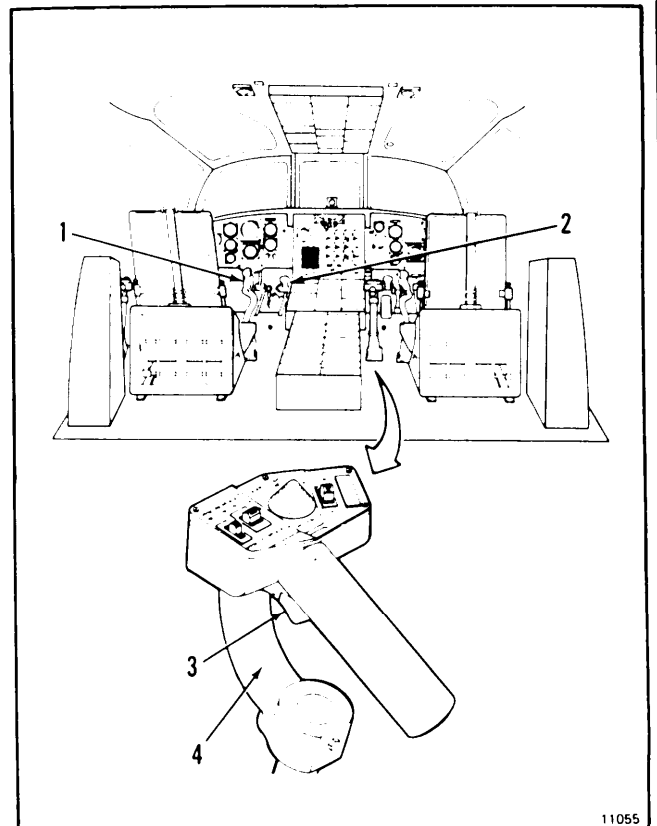


**5-114.1 SPHERICAL BALL/SPHERICAL BALL BEARING AXIAL  
PLAY CHECK (Continued)**

5-114.1

3. With the swashplate stationary inner ring (5) full up, **measure the height (X) of the exposed spherical ball (6)** below the swashplate stationary inner ring (5) at two places 180 degrees apart. Record height.

**NOTE**


Small cardboard strips can be used to measure the height.

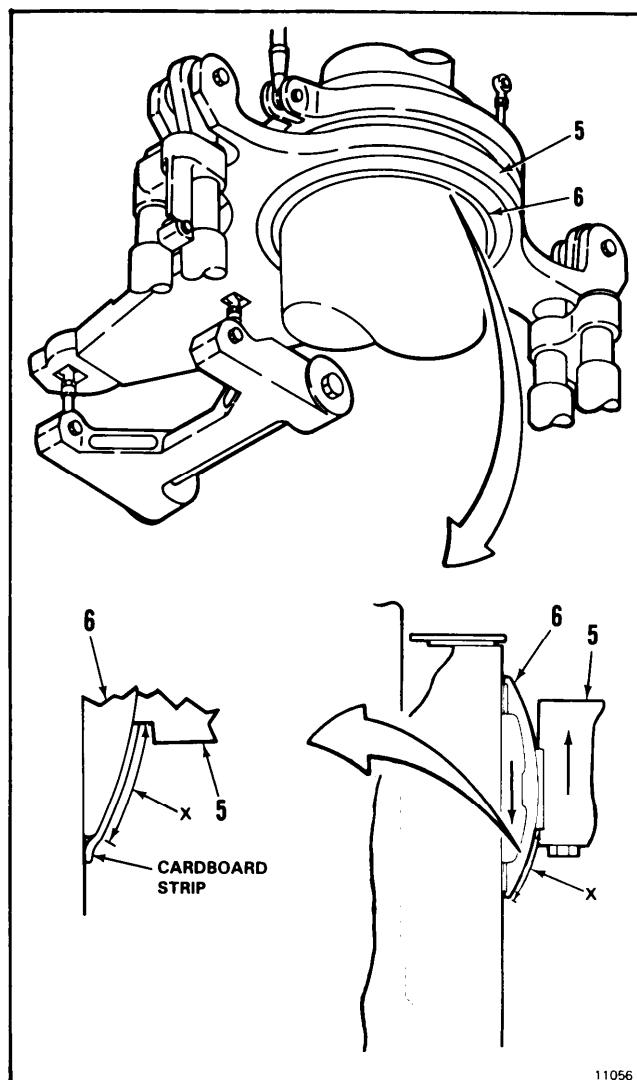**GO TO NEXT PAGE**

**5-114.1 SPHERICAL BALL/SPHERICAL BALL BEARING AXIAL  
PLAY CHECK (Continued)**


5-114.1

4. **Keep the control stick (1)** and directional control pedals (2) at neutral position.
5. **Press the thrust control brake trigger (3).** Lower the thrust control (4) to mid-travel position.

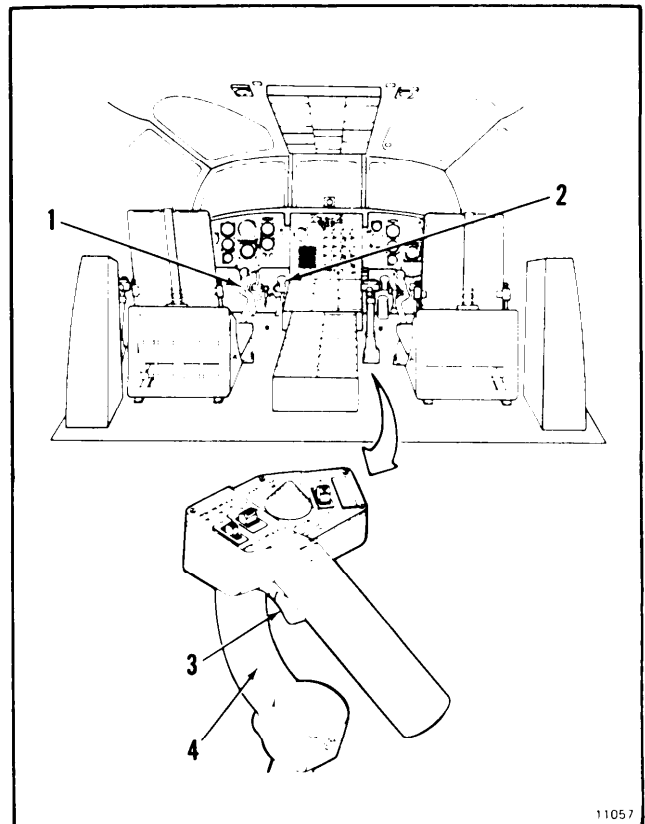

## 5-114.1 SPHERICAL BALL/SPHERICAL BALL BEARING AXIAL PLAY CHECK (Continued) 5-114.1

6. With the swashplate stationary inner ring (5) at mid-travel position, **measure the height (Y) of the exposed spherical ball (6)** below the swashplate stationary inner ring (5) at two places 180 degrees apart. Use cardboard. Record height. If the spherical ball (6) moves down after the swashplate movement has stopped, support the ball in its uppermost position before making the measurement.
7. **Subtract Y** in step 6. **from X** in step 3. to determine axial play. If the dimension indicates that axial play is more than 1/8 inch, replace the dry-type bearings (Task 5-122).
8. If the axial play is greater than 0.050 inch, following replacement of the bearing, check for correct bearing installation (Task 5-125).
9. If the bearings are installed correctly, check the swashplate for excessively worn spherical ball bearing ring (Task 5-123.1).

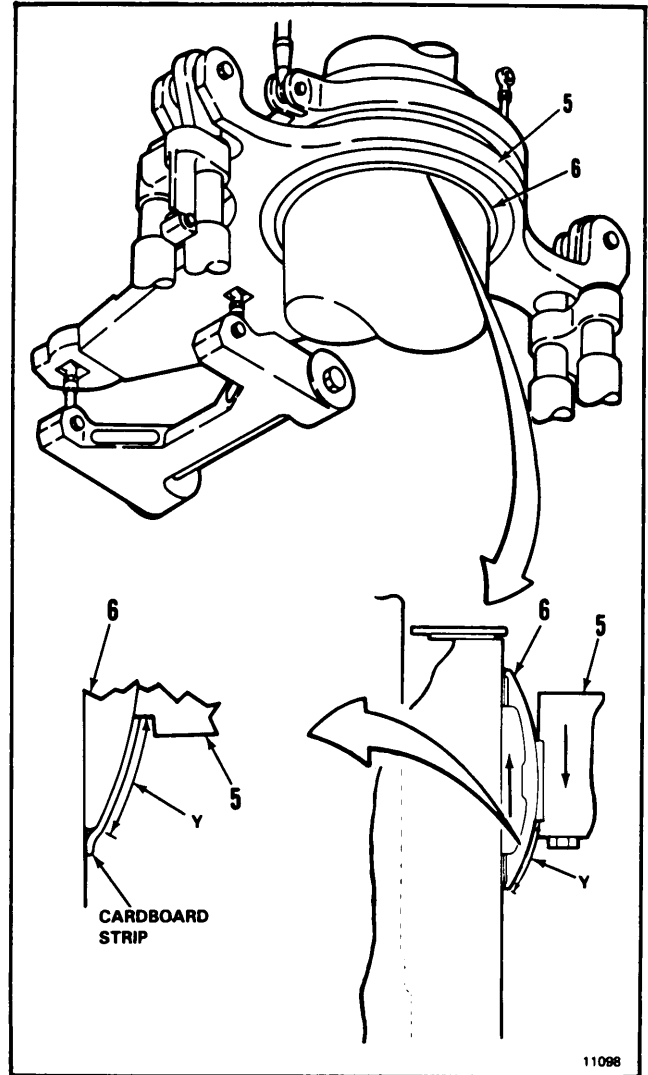


GO TO NEXT PAGE

**5-114.1 SPHERICAL BALL/ SPHERICAL BALL BEARING AXIAL  
PLAY CHECK (Continued)**

5-114.1

8. Press thrust control brake trigger (3) and move thrust control (4) down.

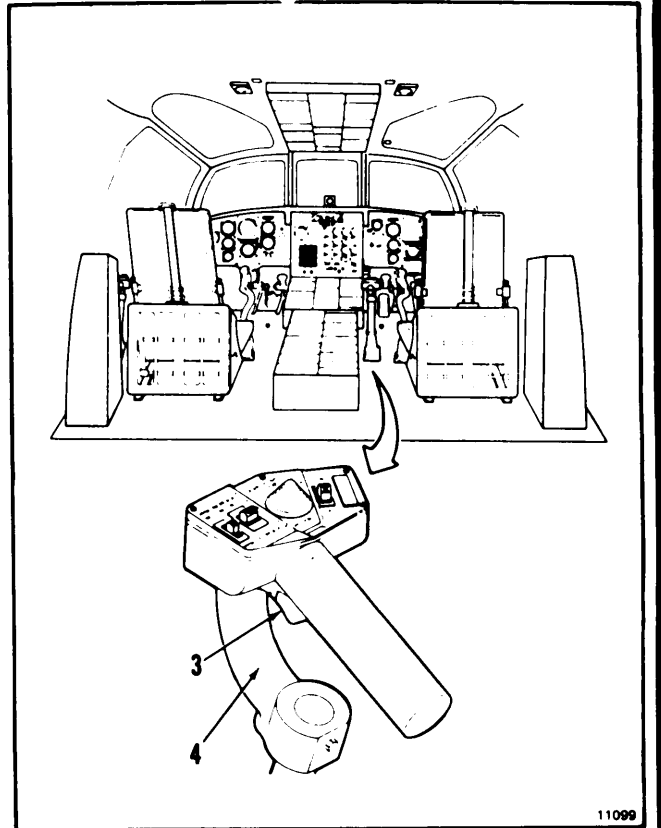**FOLLOW-ON MAINTENANCE:**

- Remove electrical power.
- Remove hydraulic power.
- Close work platforms (Task 2-2).

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692
- Drift Punch, 1/8 Inch
- Dial Indicating Scale, 0 to 50 Pounds
- Torque Wrench, 30 to 150 Inch-Pounds
- Torque Wrench, 100 to 750 Inch-Pounds

**Materials:**

Grease (E190)

**Parts:**

Cotter Pin

**Personnel Required:**

- Medium Helicopter Repairer
- Rotary-Wing Aviator (2)
- Inspector

**References:**

- TM 55-1520-240-23P
- TM 1-1500-204-23
- TM 55-1520-240-10

Task 1-26

Task 1-39

Task 1-90

Task 2-2

Task 5-97

Task 5-99

Task 5-101

Task 5-112

Task 5-116

Task 5-117

Task 5-132

Task 5-133

**Equipment Condition:**

Battery Disconnected (Task 1-39)


Electrical Power Off

Hydraulic Power Off

One Forward and One Aft Blade Tied Down (Task 1-26)

Work Platforms Open as Required (Task 2-2)

Forward and Aft Pitch Links Disconnected at  
Lower End, as Required (Task 5-97)

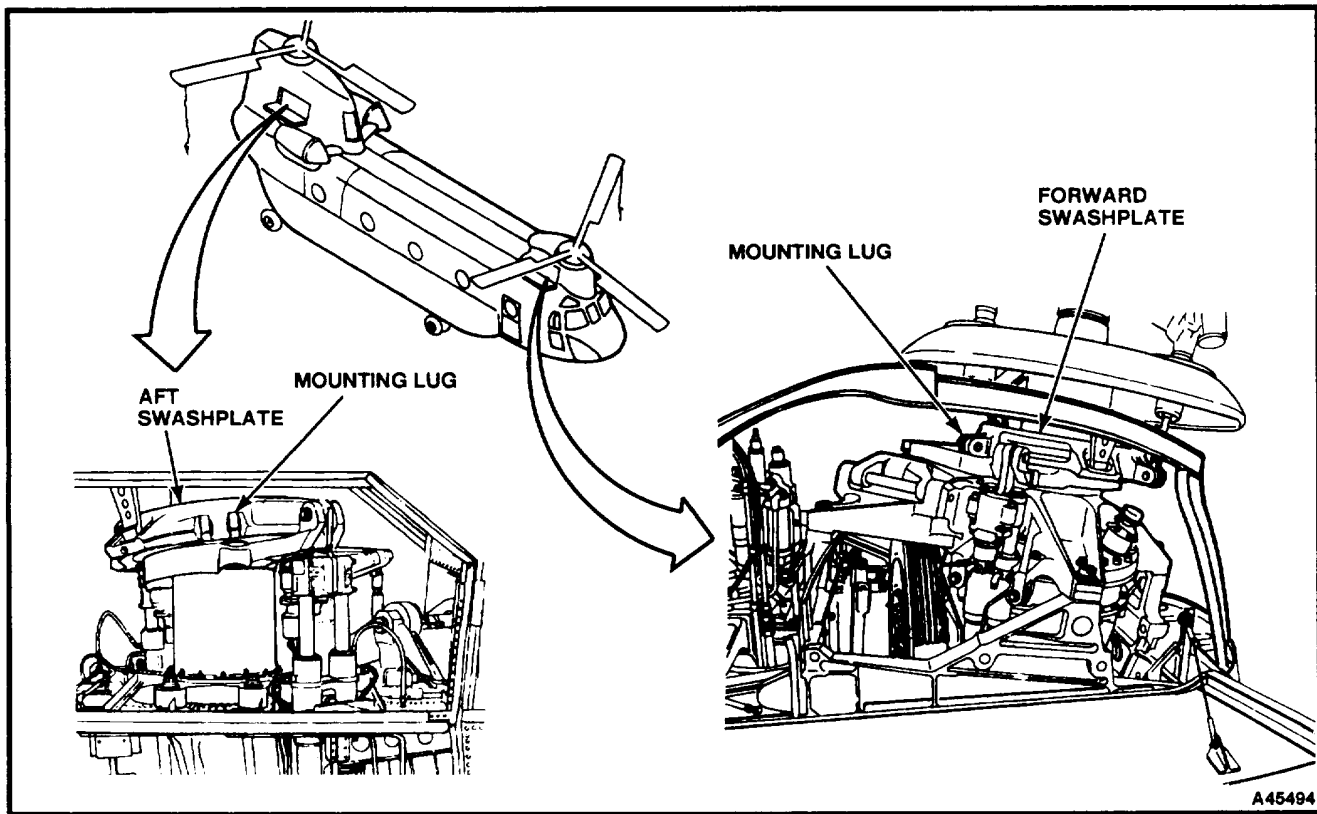


GO TO NEXT PAGE

**NOTE**

Forward and aft swashplates are checked in the same manner. Differences are noted in the text. An aft swashplate is shown.

**CHECK SWASHPLATE BEARING FRICTION**

1. Remove lower drive arm (1) from swashplate lug (2) (Task 5-101).

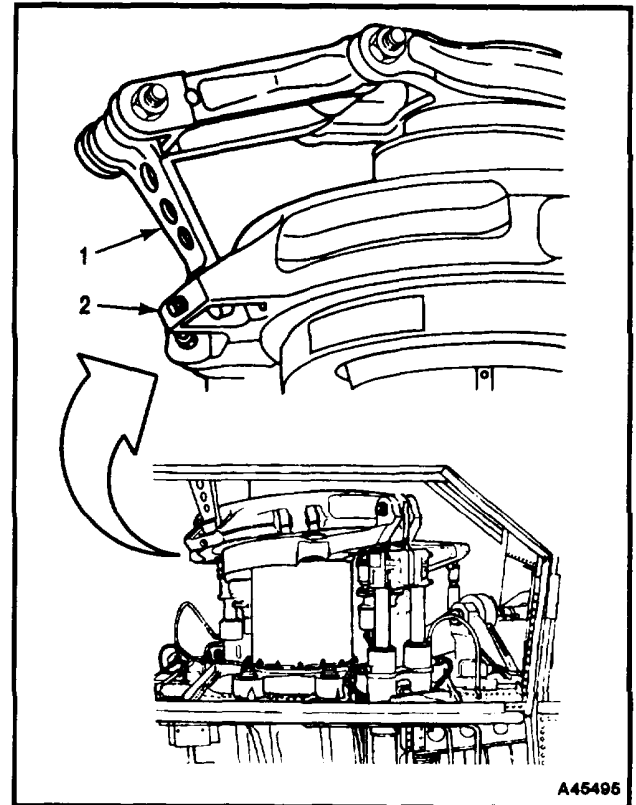

## 5-115 CHECK SWASHPLATE BEARING FRICTION (Continued)


5-115

2. On the aft swashplate only, check that bolts (3) and bolts (4) are lockwired.
3. Check that grease appears in a continuous bead all around overlap between stationary seal (5) and rotating seal (6).
4. **Hook dial scale (7) to a pitch link lug (8).** Position the scale at 90 degrees to the lug.

**NOTE**

Do not use the reading indicated as the swashplate starts to move. Starting friction force is greater than rotating friction force.

5. **Pull scale (7) to move rotating ring (9).** Read the scale while the ring is moving. While the ring is moving, **keep the scale at 90 degrees to lug (8)**. If the indicated force is less than 30 pounds, continue with step 6. If the force is more than 30 pounds, go to step 7.

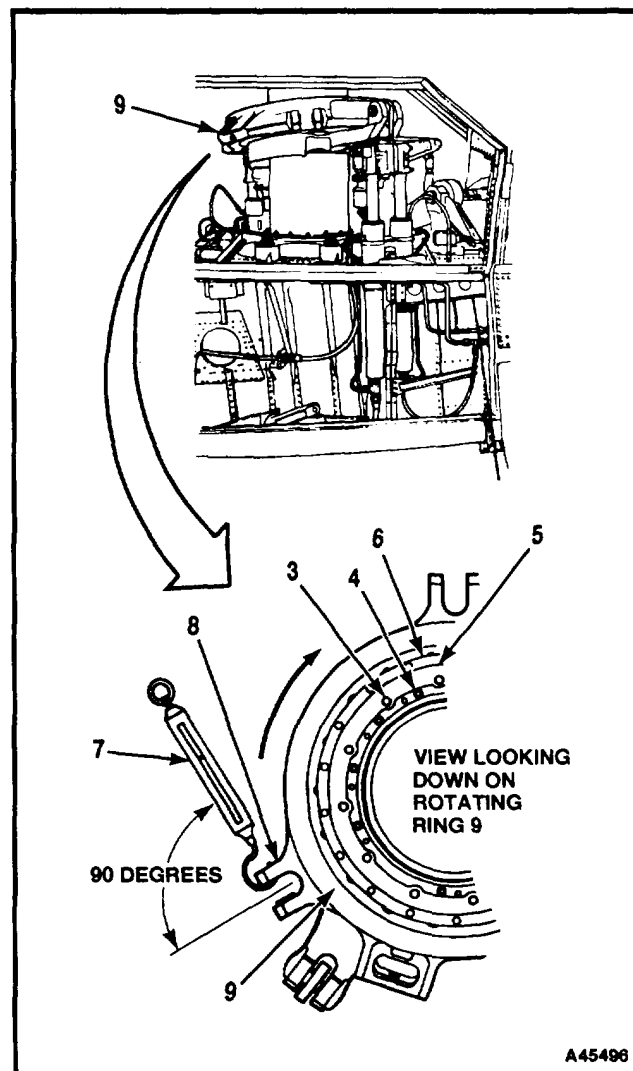**INSPECT**


GO TO NEXT PAGE

Change 37 5-419



6. Connect lower drive arm (1) to swashplate lug (2) (Task 5-112). Go to FOLLOW-ON MAINTENANCE.

**INSPECT**


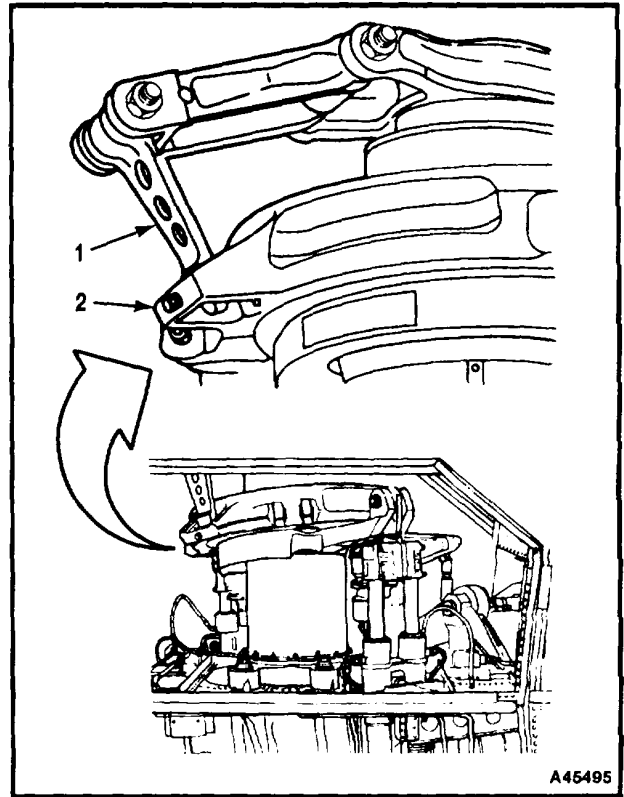


**RECHECK SWASHPLATE BEARING FRICTION**


**NOTE**

The force needed to move the swashplate may not exceed 30 pounds. Step 7 may not be performed more than once.

7. **If the force required to move swashplate ring (9) in step 5 exceeded 30 pounds, proceed as follows:**
  - a. Pump grease (E190) into swashplate stationary ring (10) to purge old grease (Task 1-90). Rotate ring (9) 360 degrees as grease is pumped. Fill until clean grease appears at least 3/4 of the distance around seals (5 and 6).
  - b. Check purged grease for metal particles. There shall be no metal particles. If metal particles are found, replace the swashplate (Tasks 5-116 and 5-132 (forward) or 5-117 and 5-133 (aft)).
  - c. Repeat steps 4 and 5. If required force does not exceed 30 pounds, go to step d. If it exceeds 30 pounds, replace the swashplate.
  - d. Connect lower drive arm (1) to swashplate lug (2) (Task 5-112). Connect pitch links at the lower end (Task 5-99).
  - e. **Check that 18 nuts (11) at the bottom of rotating ring (9) are torqued to 365 inch-pounds (TM 1-1500-204-23).**

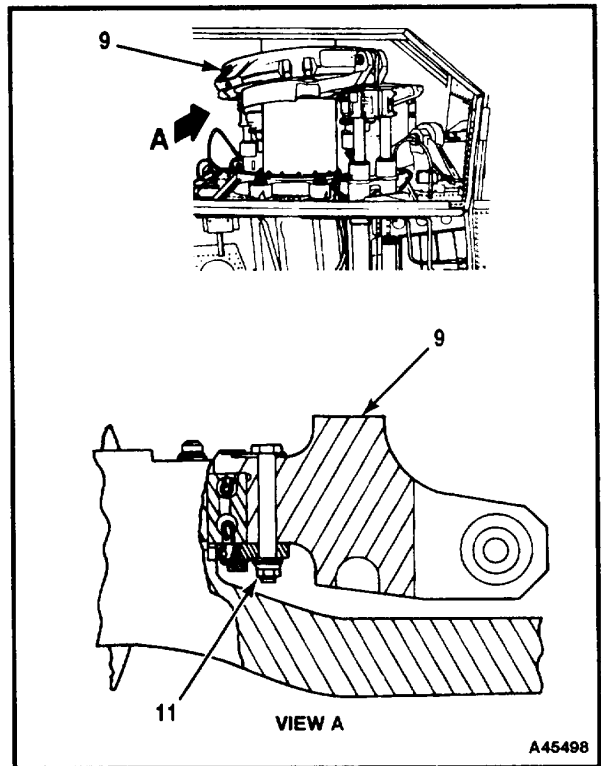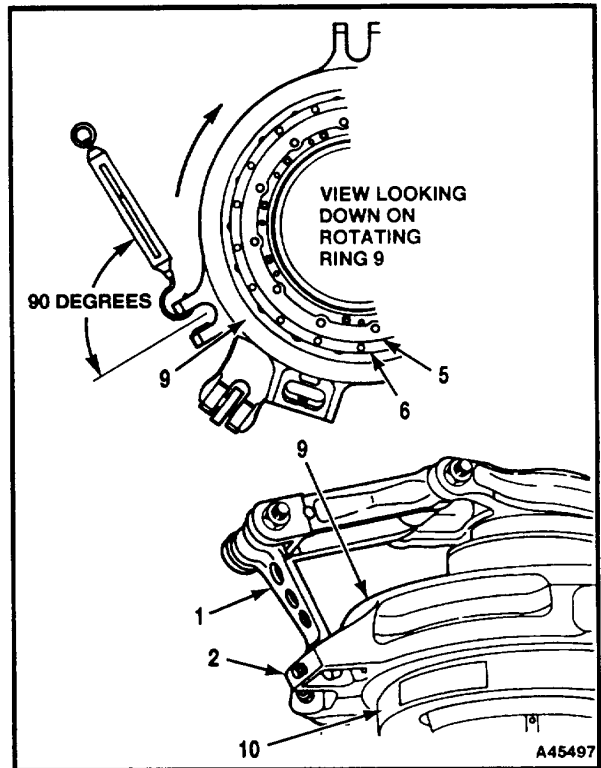

- f. **Close work platforms (12)** (Task 2-2).
- g. Pull lanyard (13) on each of two blades (14) and **release two tiedown lines (15)**.
- h. **Apply electrical power** to the helicopter.
- i. **Have pilot start engines and operate at ground idle for 5 minutes** (TM 55-1520-240-10).
- j. **Shut down electrical and hydraulic power. Disconnect the battery** (Task 1-39).
- k. **Open work platforms (12)** as required (Task 2-2).
- l. **Tie down one forward and one aft blade (14)** (Task 1-26). **Disconnect pitch links** from the lower end of the affected swashplate (Task 597).
- m. Repeat steps 1 thru 5. If the force required is less than 30 pounds, go to FOLLOW-ON MAINTENANCE. If the force is more than 30 pounds, replace the swashplate (Task 5-116 and 5-132 or 5-117 and 5-133).

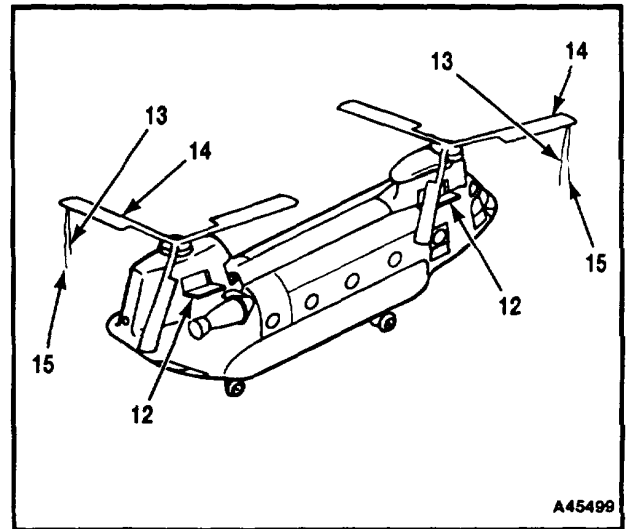

### **INSPECT**

#### **FOLLOW-ON MAINTENANCE:**

- Connect lower drive arm to swashplate lug (Task 5-112).
- Connect forward or aft pitch links at lower end, as required (Task 5-99).
- Remove blade tiedown lines (Task 1-26).
- Close work platforms (Task 2-2).

**END OF TASK**  
**5-422 Change 37**

**5-116 REMOVE FORWARD SWASHPLATE****5-116****INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Controls Sling (T14)  
Hoist

**Materials:**


None

**Personnel Required:**

■ Medium Helicopter Repairer (2)

**Equipment Condition:**


Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Two Aft Rotary-Wing Blades Tied Down (Task 1-26)  
Forward Work Platforms Open (Task 2-2)  
Forward Rotary-Wing Blades Removed (Task 5-64)  
Forward Rotary-Wing Head Removed (Task 5-8)  
Forward Drive Arms Removed (Task 5-101)  
Forward Weather Protective Cover, Drive Collar, and Pitch Links Removed (Task 5-100)  
Servocylinder Safety Blocks Installed (Task 11-28)

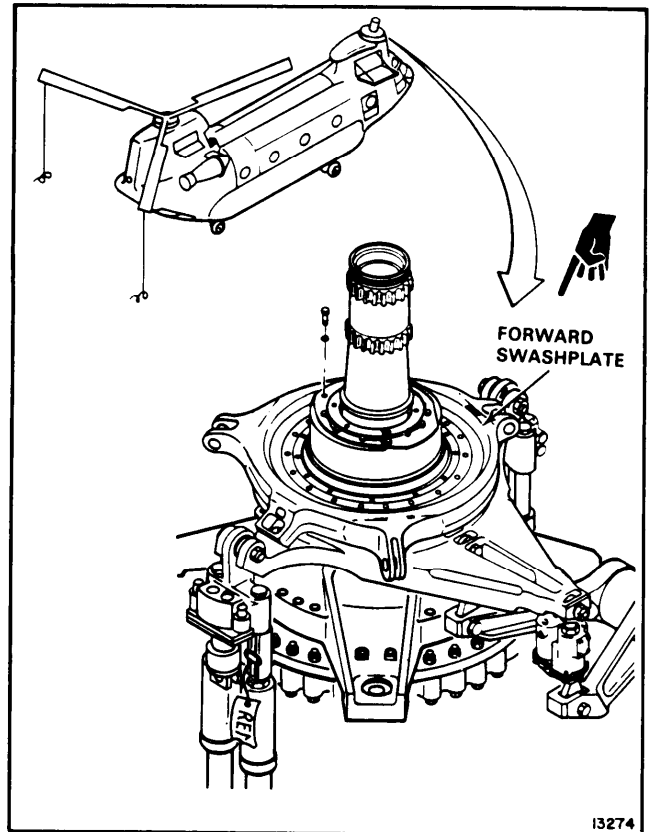**GO TO NEXT PAGE**

**NOTE**

- Positive retention bolts are installed in the upper controls. They have a pawl which prevents nut or bolt removal unless the pawl is depressed (Task 1-14).
- Swashplate is also removed as part of forward transmission package (Task 6-47).


1. Remove lockwire. Remove 12 bolts (1) and washers (2). Remove slider shaft seal (3).

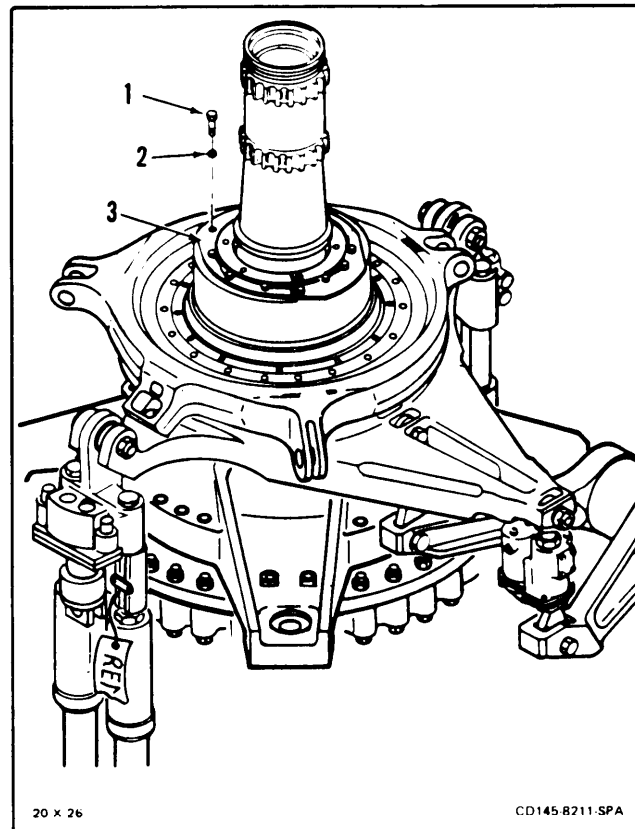

2. Attach sling (T14) (4) to three lugs (5) as follows:

- a. Remove three quick-release pins (6).
- b. Position links (7) on lugs (5).
- c. Install pins (6).


3. Attach hoist chain (8) to sling (T14) (4). Raise hoist to take-up slack from sling cables (9).

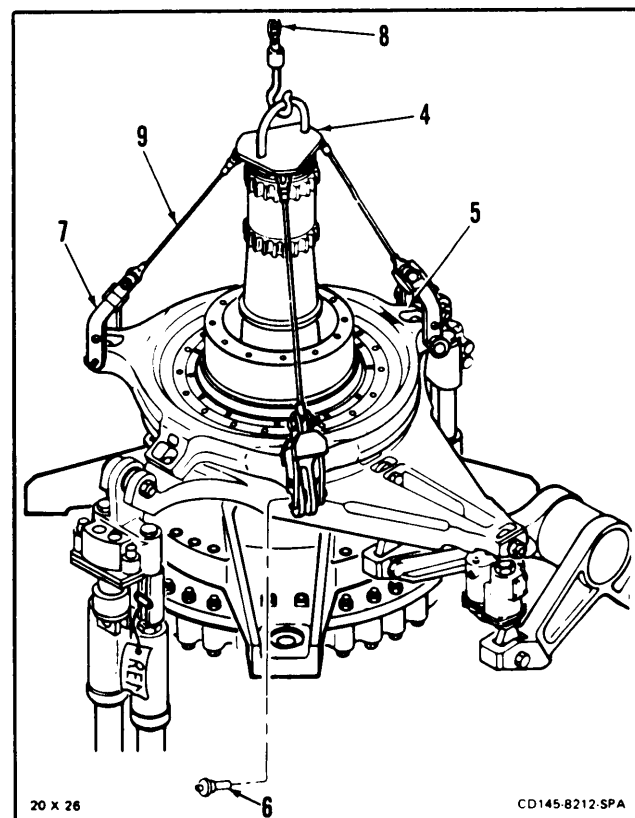**GO TO NEXT PAGE**

## 5-116 REMOVE FORWARD SWASHPLATE (Continued)


5-116

4. Remove connector (10) from magnetic phase detector (11).
5. Remove cotter pin (12), nut (13), washer (14), and bolt (15) from upper end of both servocylinders (16 and 17).

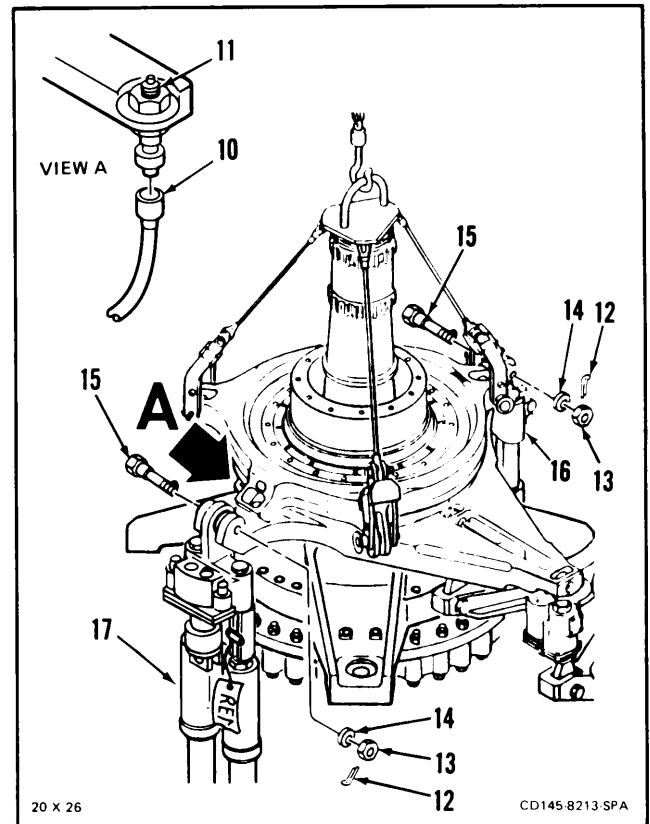**CAUTION**

If actuator or link drop, they can be damaged or cause damage to other components.

6. Remove cotter pins (18), nuts (19), washers (20), and bolts (21) from actuator (22) and link (23). Have helper support actuator and link and lower slowly.

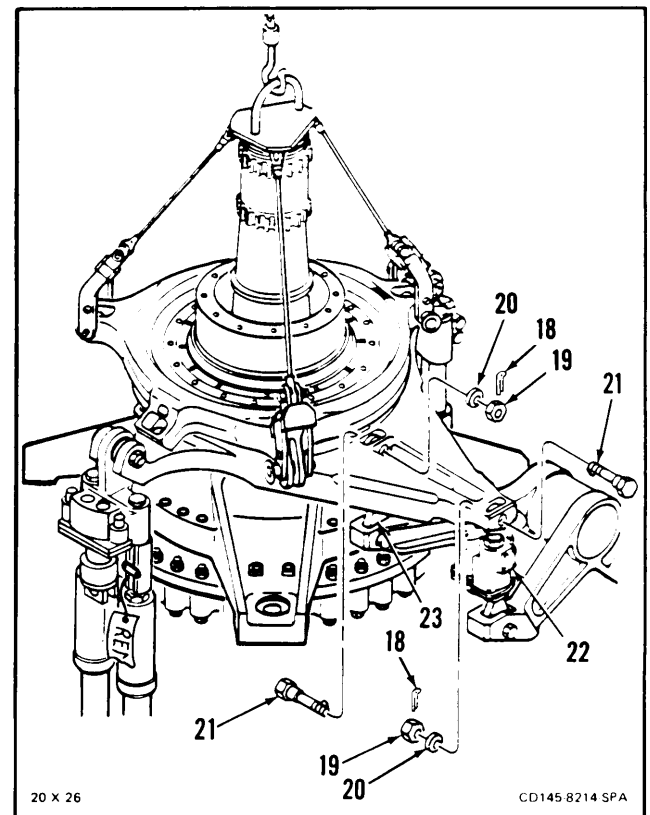

**GO TO NEXT PAGE**

5-425

7. Install guide rope (24).


**WARNING**

Swashplate is heavy and can injure personnel if it drops. Swashplate must be supported by hoist and moved carefully to prevent injury to personnel.

**CAUTION**

If bearing hits or binds on slider shaft, bearing surfaces can be damaged.

8. Lift swashplate (25) from shaft (26). Do not let actuator (22) or link (23) fall. Have helper lower yoke end of swashplate to clear fairing (27). Do not let swashplate hit or bind on shaft.

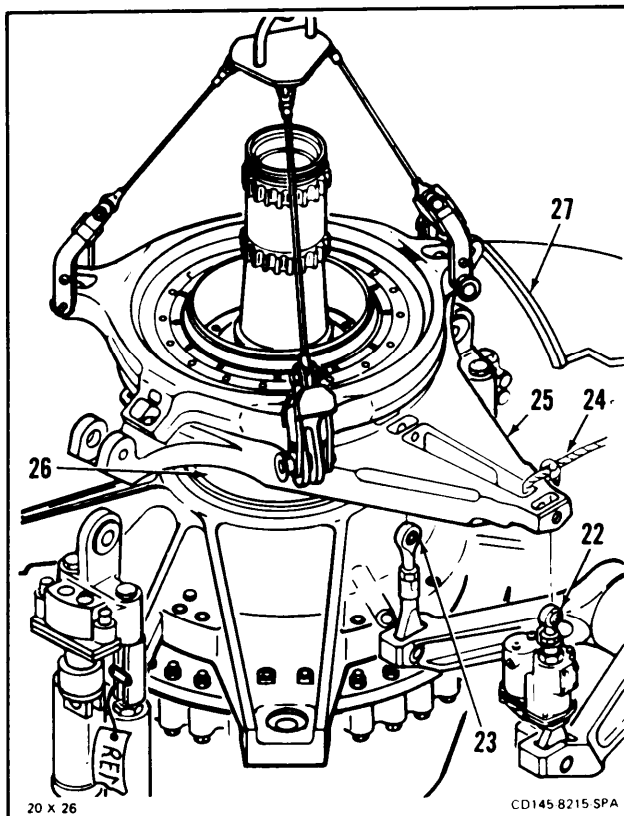


9. Lower swashplate (25) onto wood or other soft surface. Remove guide line (24).

10. Remove pins (6). Remove controls sling (T14) (4).

FOLLOW-ON MAINTENANCE:

None

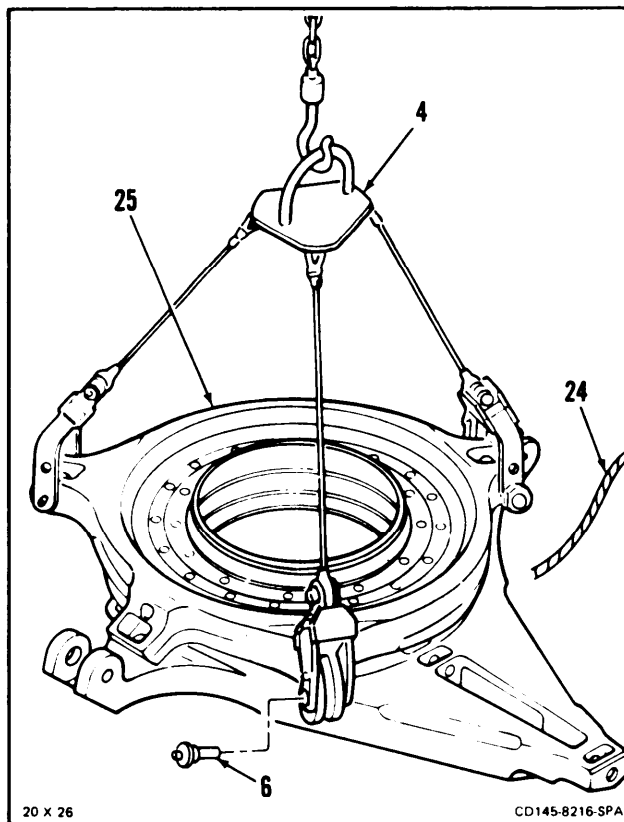

END OF TASK

## 5-117 REMOVE AFT SWASHPLATE

5-117

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,

NSN 5180-00-323-4692

Controls Sling (T14)

Hoist

**Materials:**

None

**Personnel Required:**

67U10 Medium Helicopter Repairer (2)

67U20 Medium Helicopter Repairer

**Equipment Condition:**

Battery Disconnected (Task 1-39)

Electrical Power Off

Hydraulic Power Off

Two Forward Rotary-Wing Blades Tied Down


(Task 1-26)

Pylon Work Platforms Open (Task 2-2)

Aft Rotary-Wing Blades Removed (Task 5-64)


Aft Rotary-Wing Head Removed (Task 5-8)

Aft Drive Arms Removed (Task 5-101)

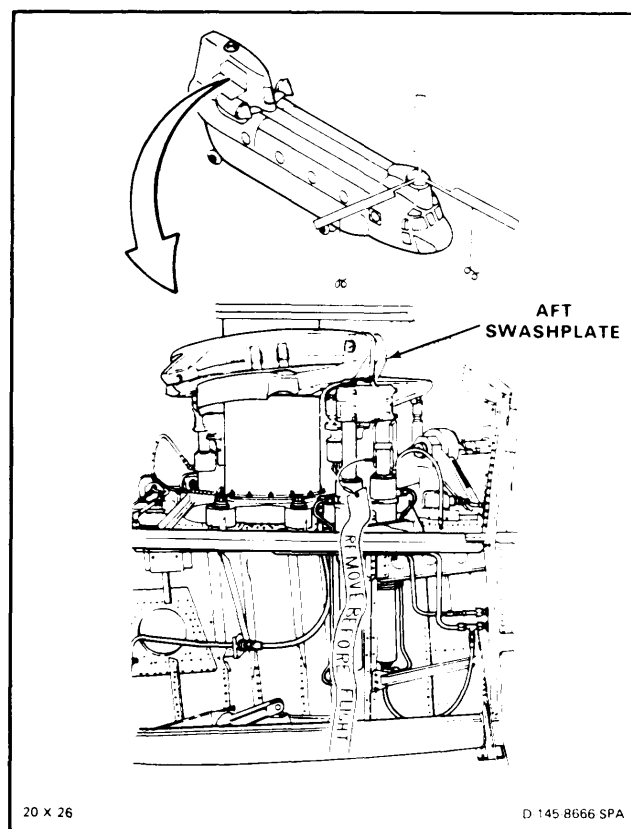Aft Weather Protective Cover, Drive Collar, and  
Pitch Links Removed (Task 5-100)Servocylinder Safety Blocks Installed (Task 11-  
28)**NOTE**

Positive retention bolts are installed in upper controls. They have a pawl which prevents nut or bolt removal unless pawl is depressed (Task 1-14).

1. Remove lockwire. Remove 12 bolts (1) and washers (2). **Remove shaft seal (3).**

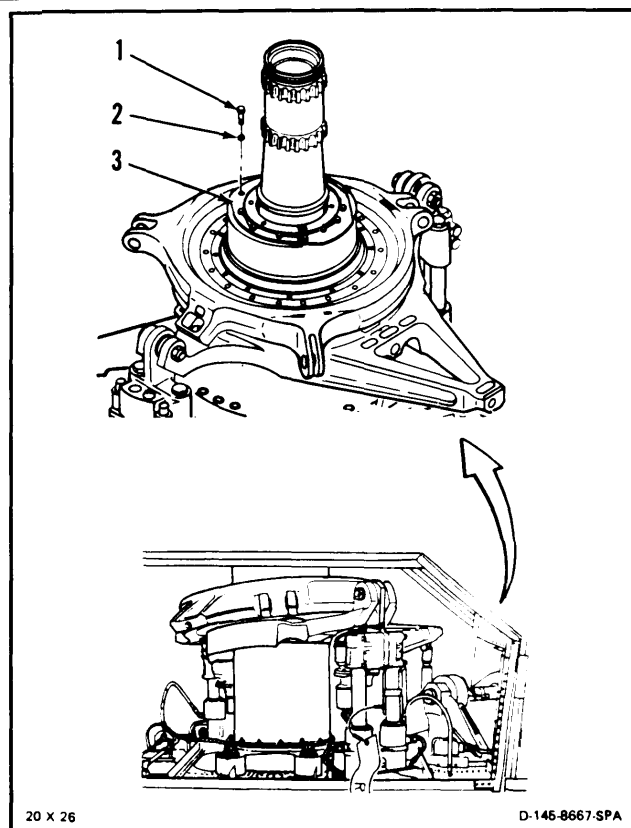**GO TO NEXT PAGE**


5-427




## 5-117 REMOVE AFT SWASHPLATE (Continued)

5-117

2. **Attach controls sling (T14) (4)** to three lugs (5) as follows:
  - a. Remove three quick-release pins (6).
  - b. Position links (7) on lugs (5).
  - c. Install pins (6).
3. Attach hoist chain (8) to sling (T14) (4). Raise hoist to **take up slack from sling cables (9)**.

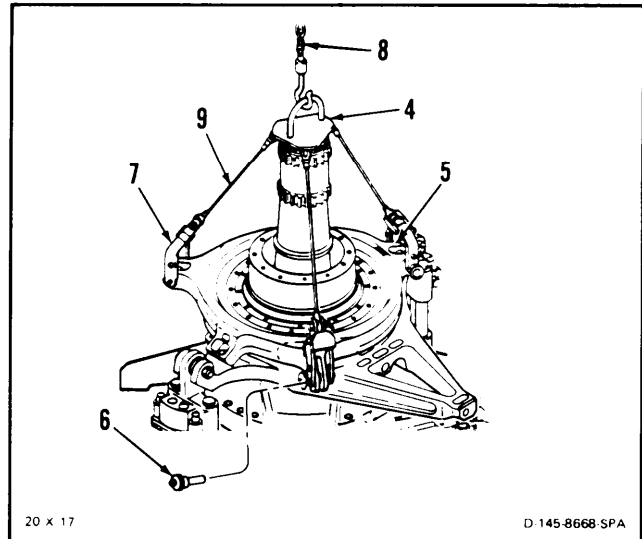

4. **Remove** cotter pin (10), nut (11), washer (12), and bolt (13) from upper end of two servocylinders (14 and 15).

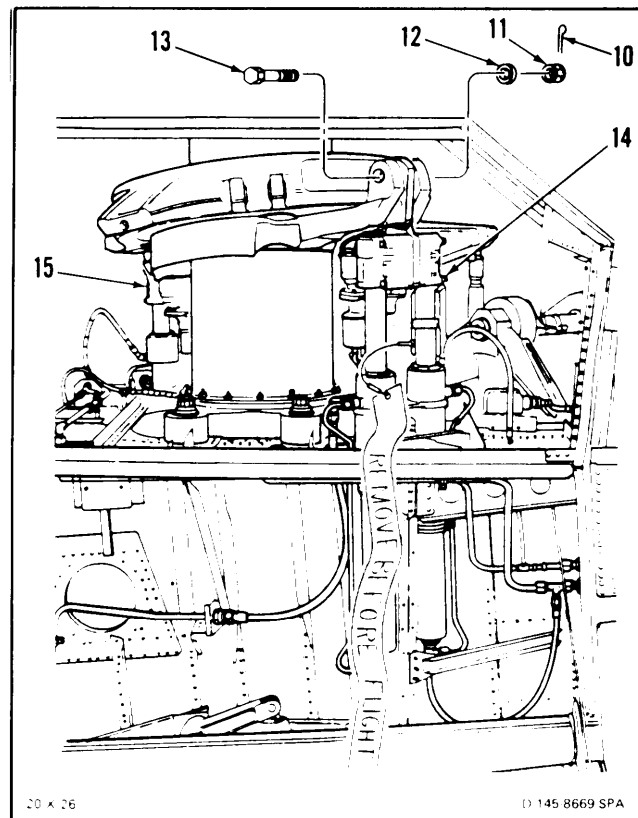

GO TO NEXT PAGE

**CAUTION**

Check bolt (19) for the 5 digit manufacturer's code on the bolt head. If manufacturer's code is 56878 (SPS Technologies) or 84256 (AVIBANK Manufacturing Inc.), the bolt is serviceable. If manufacturer's code is anything other than the 56878 or 84256 or the manufacturer's code cannot be determined, replace bolt. The five digit code 81996 is not a manufacturer's code.

5. Remove cotter pins (16), nuts (17), washers (18), and bolts (19) from actuator (20) and link (21). Have helper support actuator and link and lower slowly.
6. Install guide rope (22).



**WARNING**

Swashplate is heavy and can injure personnel if it drops. Swashplate must be supported by hoist and moved carefully to prevent injury to personnel.

**CAUTION**

If bearing hits or binds on slider shaft, bearing surfaces can be damaged.

7. Lift swashplate (23) from shaft (24). Have helper lower yoke end of swashplate to clear pylon (25). Do not let swashplate hit or bind on shaft.

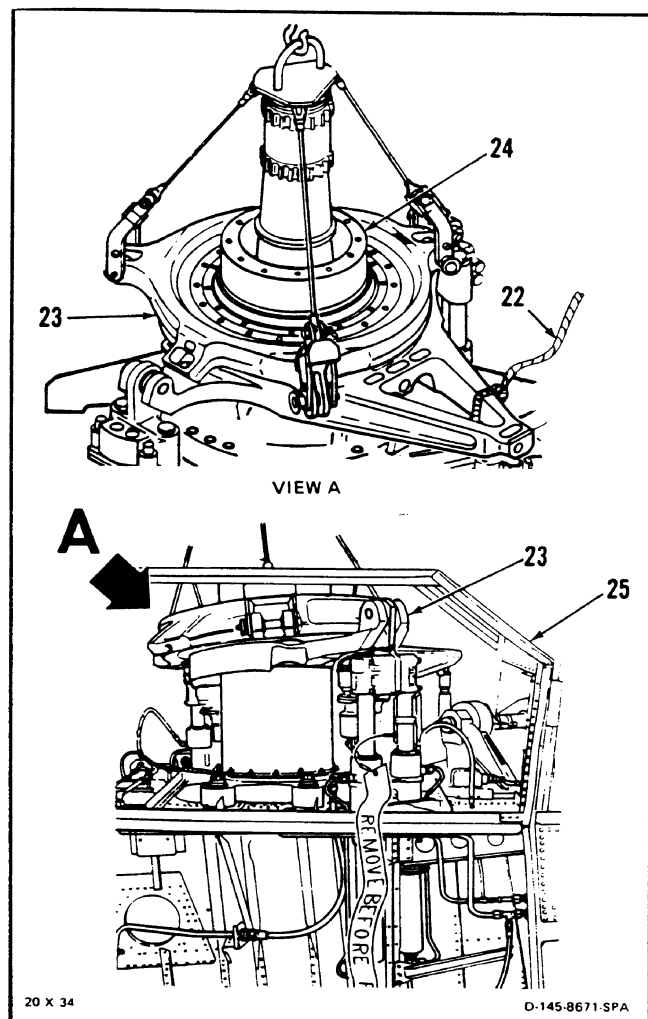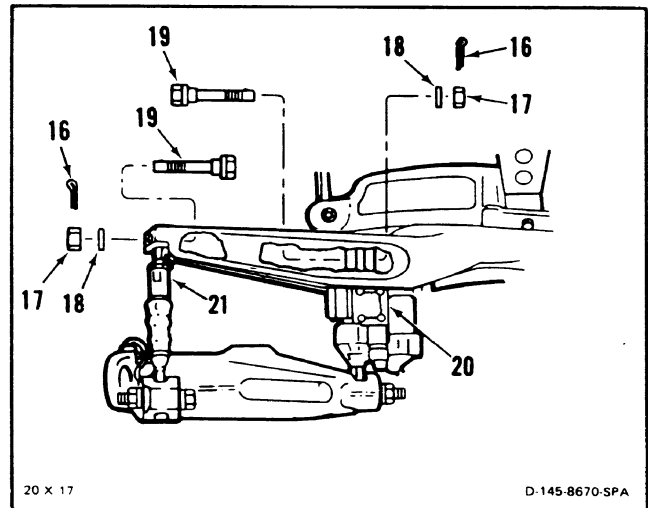


**GO TO NEXT PAGE**

**5-117 REMOVE AFT SWASHPLATE (Continued)**

5-117

8. **Lower swashplate (23)** onto wood or other soft surface. Remove guide line (22).
9. Remove pins (6). Remove controls sling (T14) (4).

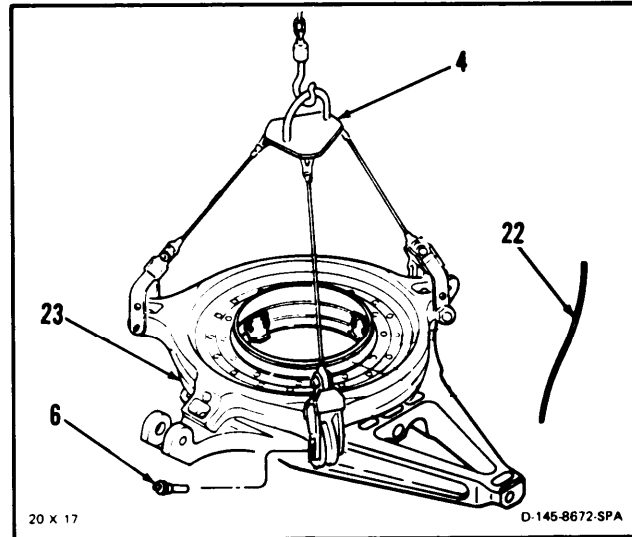**FOLLOW-ON MAINTENANCE:**

None

**END OF TASK**

5-430

**5-118 CLEAN REMOVED SWASHPLATE**

5-118

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Fiber Brush

Goggles

**Materials:**

Cloth (E120)

Dry Cleaning Solvent (E162)

Gloves (E186)

**Personnel Required:**

67U10 Medium Helicopter Repairer

**Equipment Condition:**

Off Helicopter Task

**WARNING**

Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.


**CAUTION**

Do not use excessive solvent (E162). Too much solvent can wash foreign material into bearing and seal areas.

1. **Clean swashplate (1).** Use cloth (E120) fiber brush, and solvent (E162). Wear goggles. Wear gloves (E186).

## FOLLOW-ON MAINTENANCE:

None

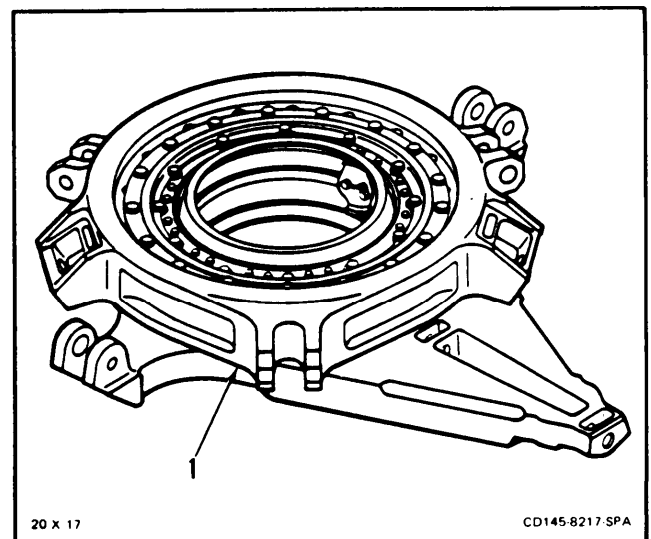

20 x 17

CD145-8217-SPA

**END OF TASK**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114

**Materials:**


None

**Personnel Required:**

67U30 Inspector

**Equipment Condition:**

Off Helicopter Task

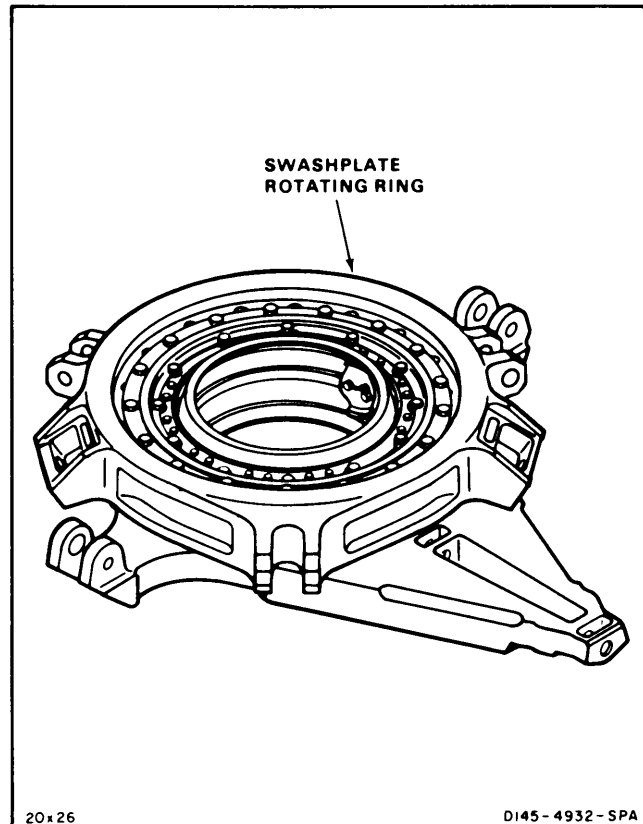
**NOTE**

Procedure is same to inspect forward or aft swashplate rotating rings.

1. Check for nicks or scratches within 2-inches of center of holes (1) in six lugs (2) of rotating ring (3). Damage less than 0.005-inch in depth shall be accepted without rework. Repair damage 0.005-inch to 0.020-inch in depth (Task 5-120).
2. Check for nicks or scratches in all other surface areas of rotating ring (3). Damage less than 0.010-inch in depth shall be accepted without rework. Repair damage 0.010-inch to 0.020-inch in depth (Task 5-120).

## FOLLOW-ON MAINTENANCE:

None

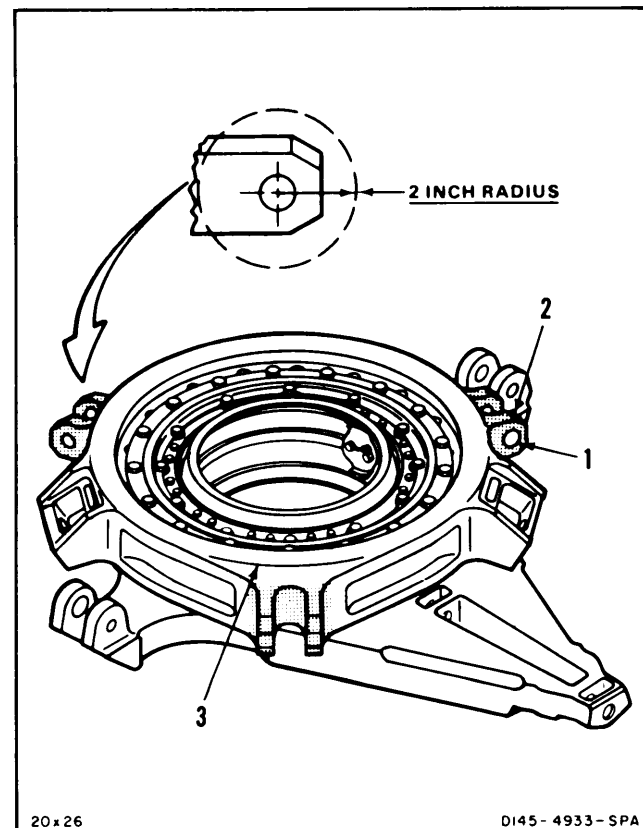**END OF TASK**

**5-119.1 INSPECT SWASHPLATE SLIDING SLEEVE BEARINGS**

5-119.1

**INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114

**Materials:**

Cloth (E120)

**Personnel Required:**

Inspector


**References:**

Task 5-123

Task 5-124

**Equipment Condition:**

Off Helicopter Task

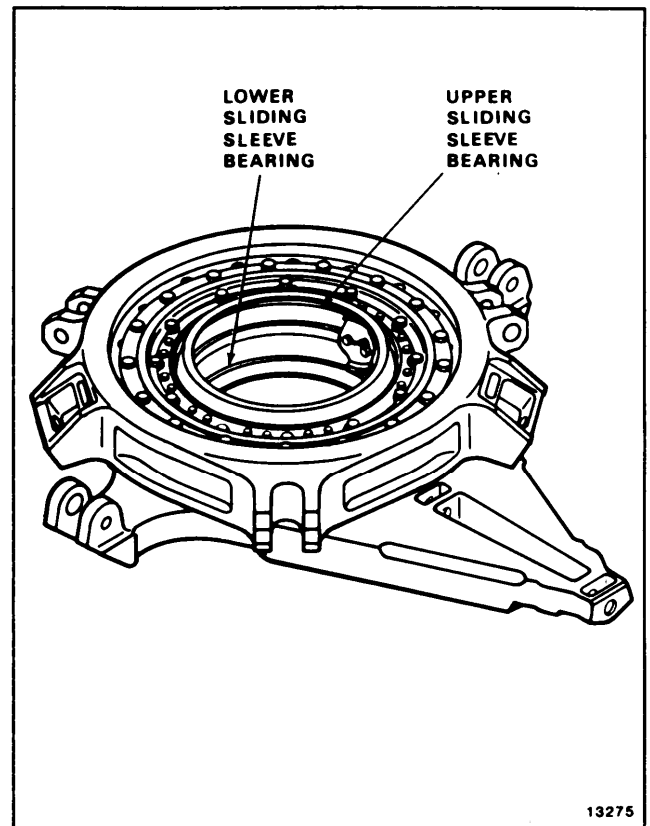

13275


**NOTE**

Procedure is same to inspect forward or aft swashplate rotating rings.

1. Inspect bonded surface of upper and lower bearings (1 and 2) for the following:
  - a. Unbending.
  - b. Nicks, scratches, or cracks.
  - c. Abrasions or material worn to metal backing.
  - d. Grease, oil, or solvent contamination that can not be removed with a dry cloth (E120).
- 1.1. Teflon liner (1.1) on upper and lower bearing (1 and 2) must not be frayed more than 0.10 inch long.
2. If any of the above conditions are found, have the bearing replaced (Tasks 5-123 and 5-124).
3. Check screws and lockwire at each of three retainers (3) for security. Tighten if needed (Task 5-124).

**FOLLOW-ON MAINTENANCE:**

None

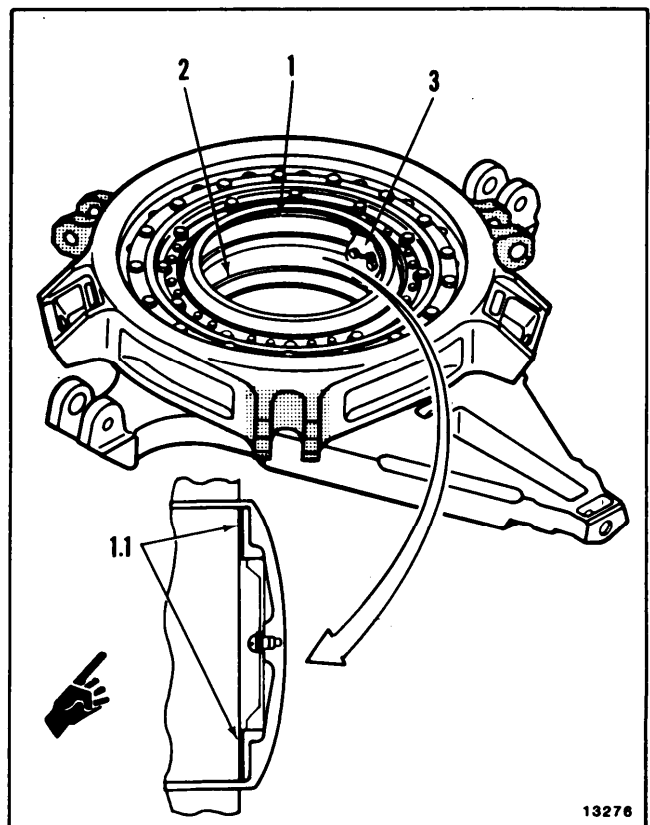

13276

**END OF TASK**



**5-120 REPAIR SWASHPLATE ROTATING RING (AVIM)****5-120****INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114

**Materials:**

Abrasive Paper (E10)  
Alodine (E65)  
Wash Primer (E302)  
Epoxy Primer (E292.1)  
Gloves (E184.1)

**Personnel Required:**

Aircraft Powertrain Repairer (2)  
Inspector

**References:**


TM 55-1520-240-23P

**Equipment Condition:**

Off Helicopter Task

**General Safety Instructions:****WARNING**

Wash primer (E302) and epoxy primer (E292.1) are flammable and toxic. They can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

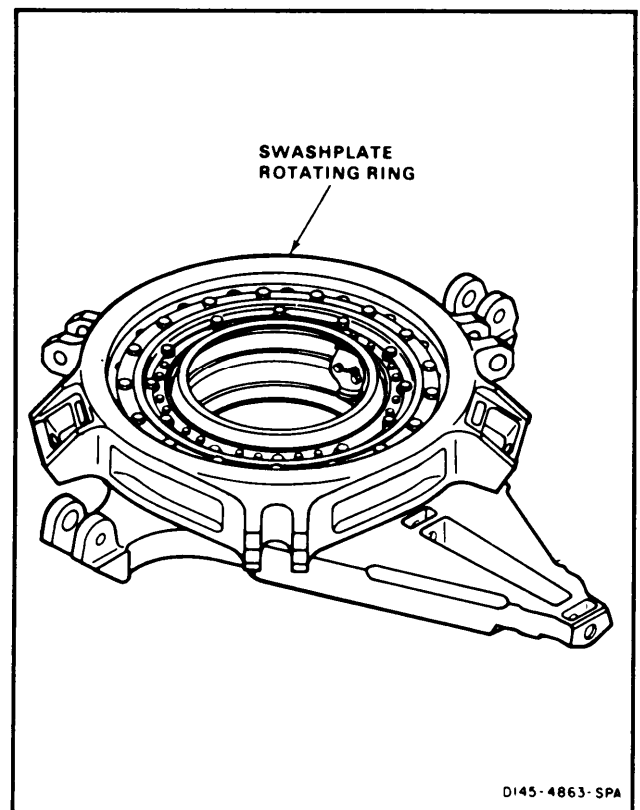**GO TO NEXT PAGE**




**NOTE**

Procedure is same to repair forward or aft swashplate rotating rings.

1. Blend repair damage 0.005 inch to 0.020 inch in depth within 2 inches of hole center (1) in lugs (2). Blend smooth. Use abrasive paper (E10). Rework shall not exceed 0.020 inch in depth.
2. Check thickness of lugs (2) after rework. Lug thickness shall not be less than 0.750 inch.
3. Blend repair damage 0.010 inch to 0.020 inch in depth in all other areas of rotating ring (3). Blend smooth. Use abrasive paper (E10). Rework shall not exceed 0.020 inch in depth.

**INSPECT**

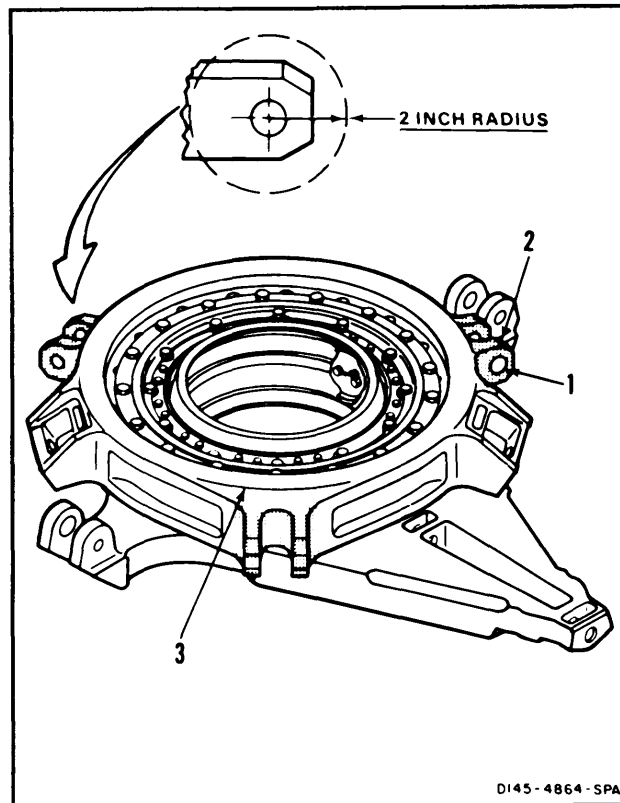


**WARNING**

Alodine (E65) is an oxidizer. Discard cloths which contain this material in a separate container. If discarded with cloths contaminated with acetone, mek, or other organic solvents, combustion can result. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

4. Apply alodine (E65) to repaired area of ring (3). Wear gloves (E184.1).
5. Apply one coat of wash primer (E302) to repaired area of ring (3). Allow primer to dry for 30 minutes. Wear gloves (E184.1).
6. Apply one coat of epoxy primer (E292.1) to repaired area of ring (3). Allow primer to dry for 1 hour. Wear gloves (E184.1).

**FOLLOW-ON MAINTENANCE:**

None

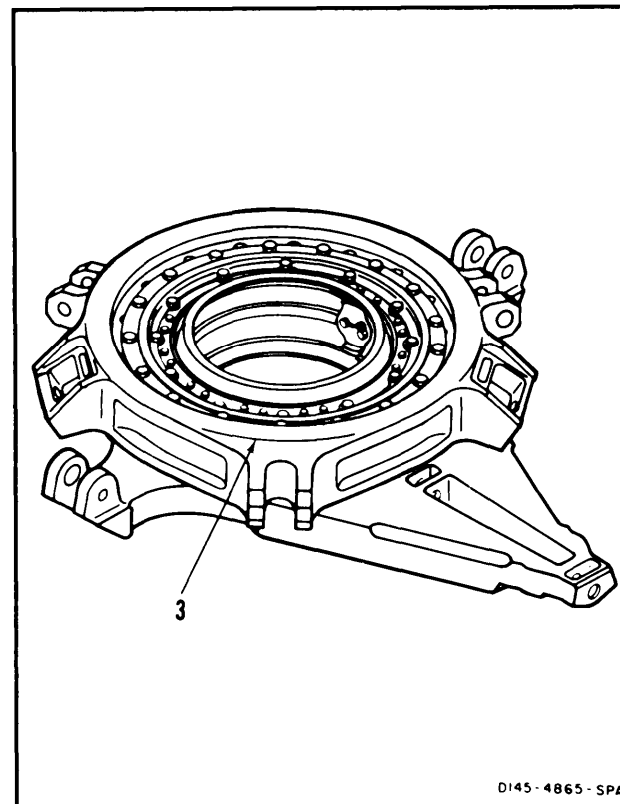

**END OF TASK**

## 5-121 CHECK BALL SPHERICAL BEARING AXIAL PLAY

5-121

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Technical Inspection Tool Kit,

NSN 5180-00-323-5114

Pencil

Wood Blocks (3), 6 x 6 x 10 Inches

**Materials:**

None

**Personnel Required:**

Medium Helicopter Repairer

Inspector

**Equipment Condition:**

Off Helicopter Task

Task 5-117

**References:**

TM 55-1520-240-23P



**NOTE**

Procedure is same to check axial play in ball spherical bearing on forward or aft swashplate.

1. Place swashplate (1) on three wood blocks (2).
2. **Measure distance A** from bottom of ball spherical bearing (3) and flat work surface (4). Measure at three places. Record average measurement.
3. Have helper lift and support ball spherical bearing (3) as high as possible. **Measure distance B** at three places. Record average measurement.
4. **Subtract average distance A in step 2 from average distance B measured in step 3.** If the dimension indicates that axial play is more than 1/8 inch, replace the dry-type bearings (Task 5-122).
5. If the axial play is more than 0.050 inch, following replacement of the bearing, check for correct bearing installation (Task 5-125).
6. If the bearings are installed correctly and axial play is more than 0.050 inch, check the swashplate for excessively worn spherical ball bearing ring (Task 5-123.1).

**FOLLOW-ON MAINTENANCE:**

None

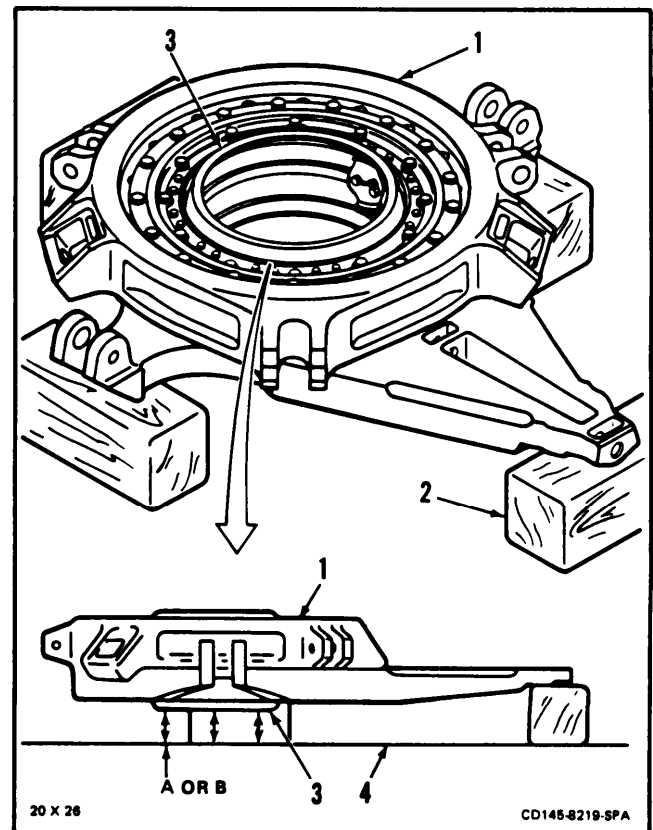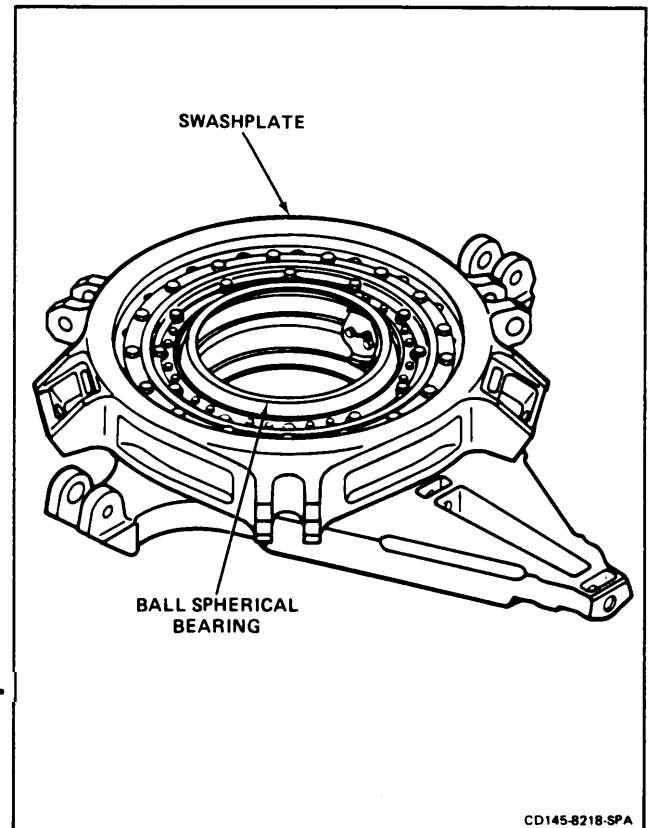**END OF TASK**

## INITIAL SETUP

**Applicable Configurations:**

Without 83

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267

Mallet

Phenolic Drift, 1/2 Inch x 2 Inches x 10 Inches

Wood Blocks (9), 2 Inches x 4 Inches x 10 Inches

**Materials:**


Marking Pencil (E271)

**Personnel Required:**

Aircraft Powertrain Repairer (2)

**Equipment Condition:**

Off Helicopter Task

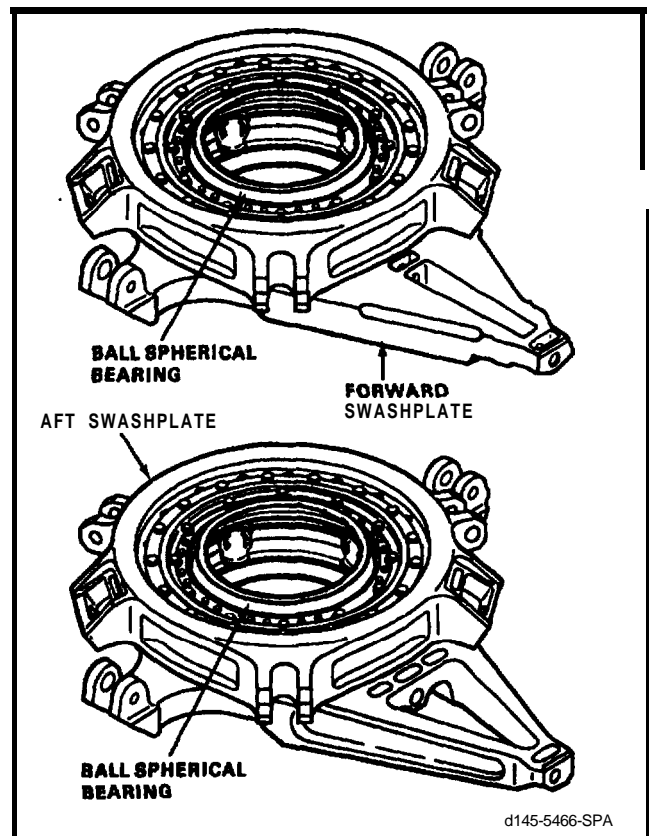


d145-5466-SPA

**NOTE**

Procedure is similar to remove forward or aft swashplate ball spherical bearing. Differences are noted in text.

1. For forward swashplate (1) only, remove seal (2) and upper retainer (3) as follows:
  - a. Remove 12 nuts (4) and washers (5).  
Remove seal (2).
  - b. Remove 10 nuts (6) and washers (7).  
Remove upper retainer (3). Go to step 3.

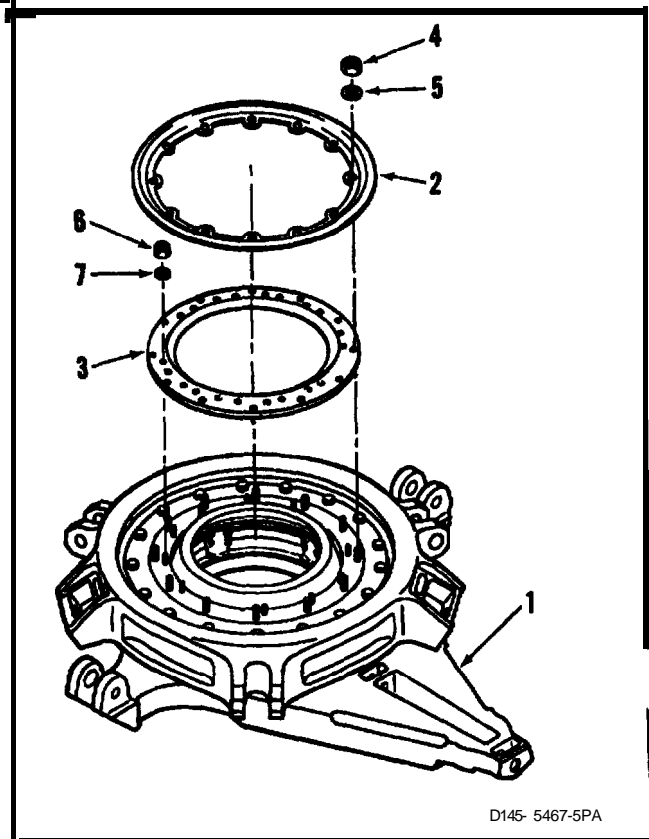


D145- 5467-5PA

**5-122 REMOVE SWASHPLATE BALL SPHERICAL BEARING**  
**(Continued)**

2. For aft swashplate (8) only, remove seal (9) and upper retainer (10) as follows:

- a. Remove lockwire. Remove 12 bolts (11) and washers (12). Remove seal (9).
- b. Remove lockwire. Remove 10 bolts (13) and washers (14). Remove upper retainer (10). Go to step 3.

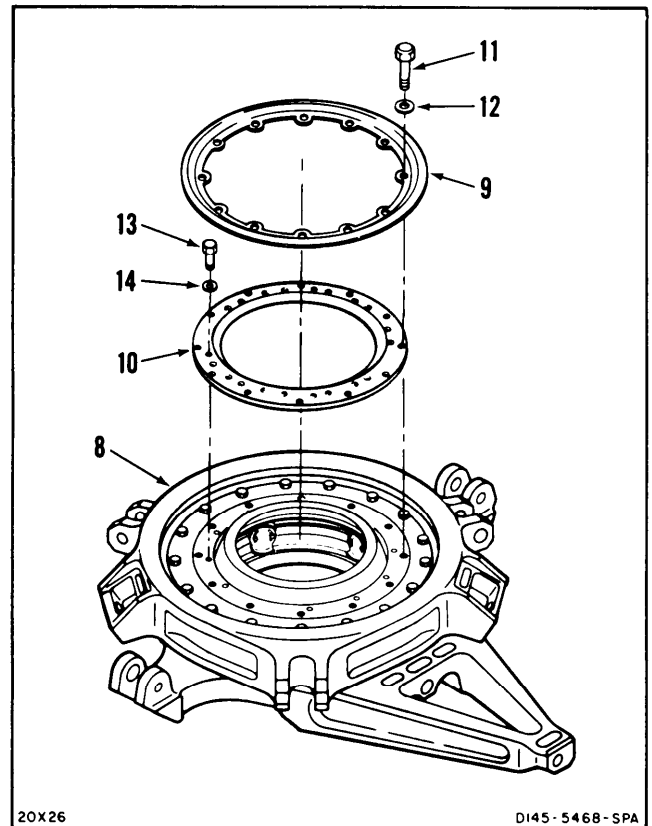

3. Turn swashplate (1 or 8) over. Rest swashplate on blocks (15).

4. Matchmark spherical bearing (16), upper bearing (17), and retaining spacer (18) to stationary ring (19). Use marking pencil (E271). Remove bearings and spacer from stationary ring by hand.


**NOTE**

If hand pressure will not remove bearing parts, use mallet against wood block across spherical bearing.

5. Matchmark lower bearing (20) and bearing spacer (21) to stationary ring (19). Use marking pencil (E271). Tap out bearing and spacer from stationary ring. Use phenolic drift.

FOLLOW-ON MAINTENANCE:

None

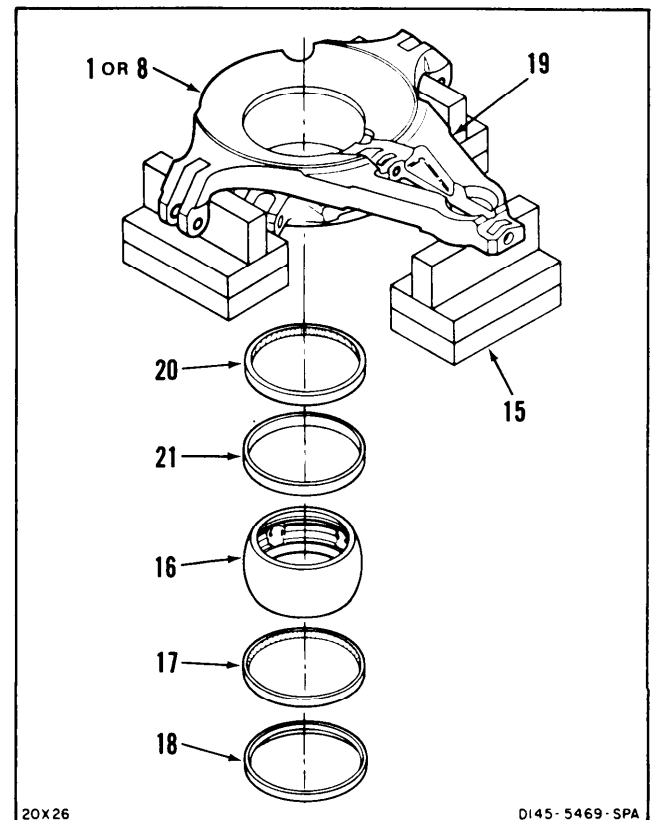

**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

With 83

**Tools:**

- Powertrain Repairer's Tool Kit,  
NSN 5180-00-0036267
- Mallet
- Phenolic Drift, 1/2 Inch x 2 Inches x 10 Inches
- Wood Blocks (9), 2 Inches x 4 Inches x 10 Inches

**Materials:**


Marking Pencil (E271)

**Personnel Required:**

Aircraft Powertrain Repairer (2)

**Equipment Condition:**

Off Helicopter Task

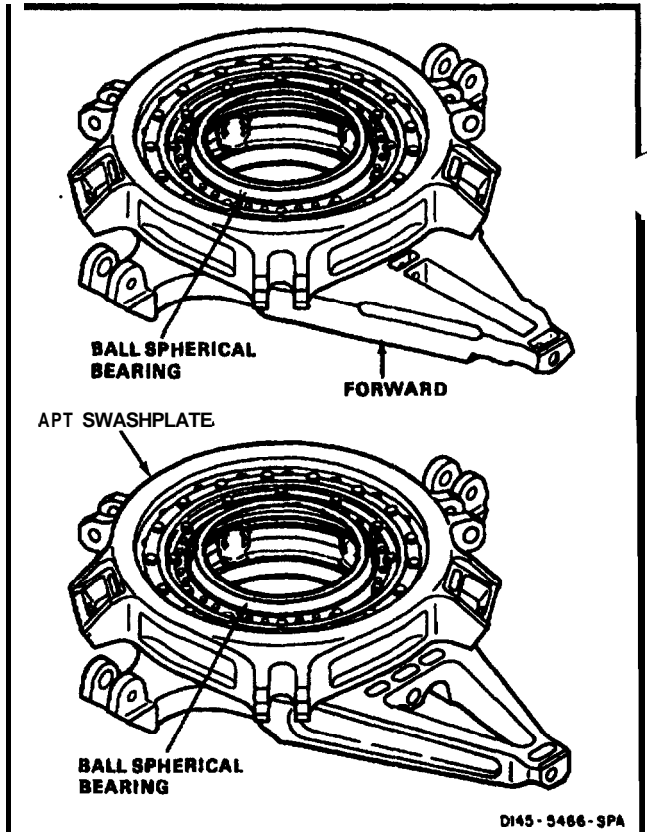


D145-5486-3PA

**NOTE**

Procedure is similar to remove forward or aft swashplate ball spherical bearing. Differences are noted in text.


1. For forward swashplate (1) only, remove seal (2) and upper retainer (3) as follows:
  - a. Remove 12 nuts (4) and washers (5). Remove seal (2).
  - b. Remove 10 nuts (6) and washers (7). Remove ring assembly (2C), seal (2A), retainer (2B), and upper retainer (3).

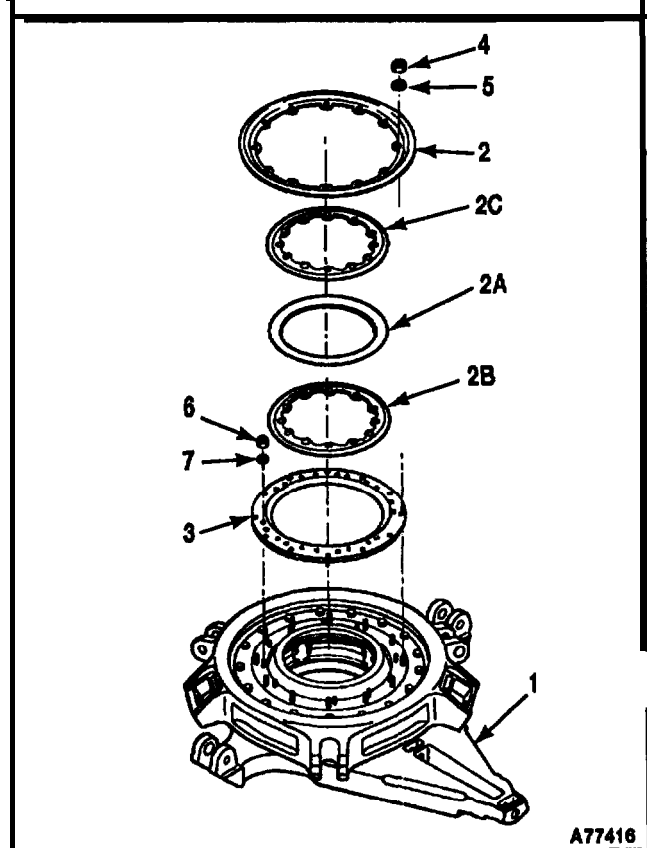

A77416

2. For aft swashplate (8) only, remove seal (9) and upper retainer (10) as follows:

- a. Remove lockwire. Remove 12 bolts (11) and washers (12). Remove seal (9).
- b. Remove lockwire. Remove 10 bolts (13) and washers (14). Remove ring assembly (9C), seal (9A), retainer (9B), and upper retainer (10).

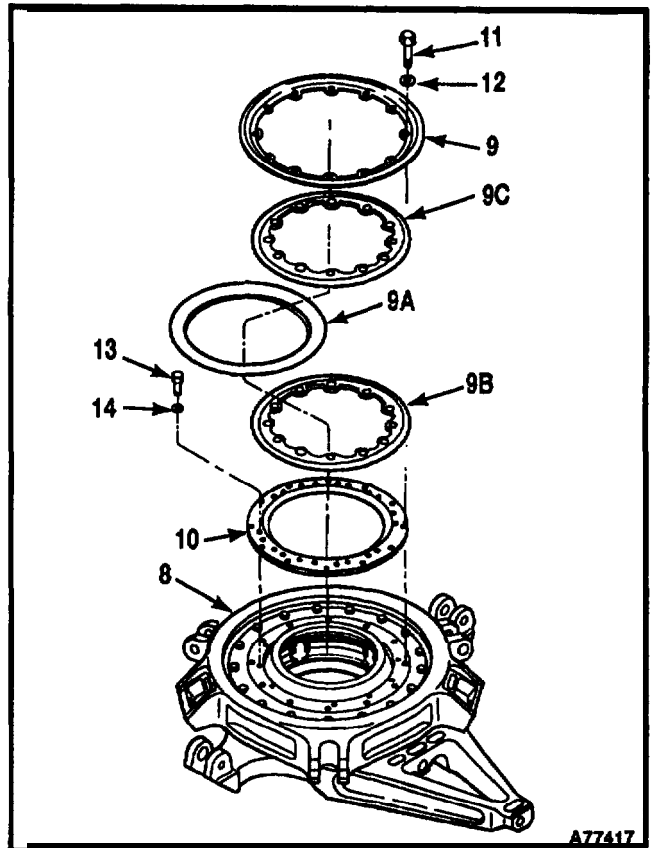


3. Turn swashplate (1 or 8) over. Rest swashplate on blocks (15).
4. Matchmark spherical bearing (16), upper bearing (17), and retaining spacer (18) to stationary ring (19). Use marking pencil (E271). Remove bearings and spacer from stationary ring by hand.

**NOTE**

If hand pressure will not remove bearing parts, use mallet against wood block across spherical bearing.

5. Matchmark lower bearing (20) and bearing spacer (21) to stationary ring (19). Use marking pencil (E271). Tap out bearing and spacer from stationary ring. Use phenolic drift.

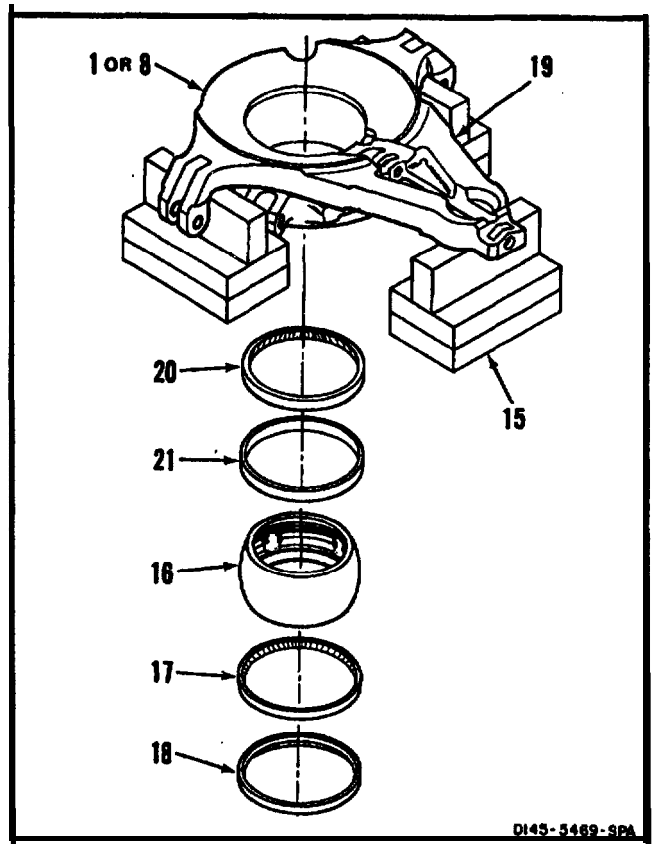

FOLLOW-ON MAINTENANCE:

None

END OF TASK

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Powertrain Repairer's Tool Kit,  
NSN 5180-00-0036267
- Arbor Press
- Adapter (Appx E)

**Personnel Required:**


Aircraft Powertrain Repairer (2)

**References:**

Appendix E

**Equipment Condition:**

- Off Helicopter Task
- Swashplate Ball Spherical Bearing Removed (Task 5-122)

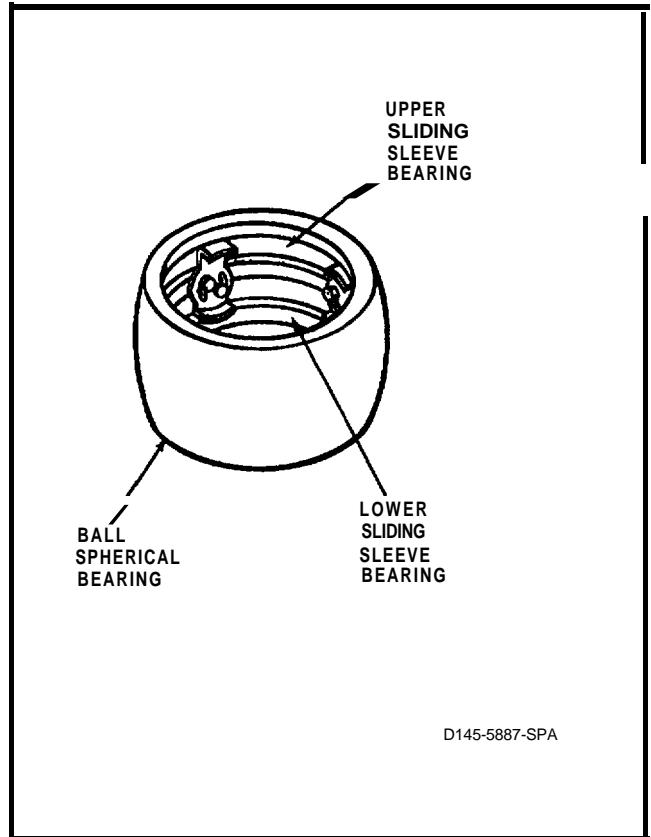


D145-5887-SPA

**NOTE**

Procedure is same to remove forward and aft swashplate sliding sleeve bearings.

1. Remove lockwire from six screws (1). Remove screws and washers (2) from ball spherical bearing (3). **Remove three retainers (4).**
2. **Press out three upper sliding sleeve bearing segments (5)** from spherical bearing (3). Use arbor press and adapter (Appx E).

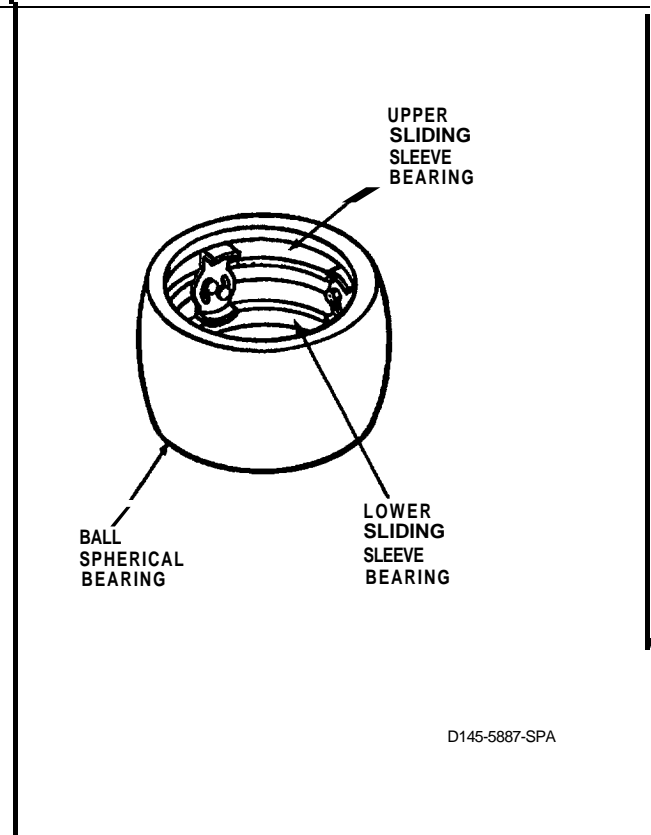


D145-5887-SPA

**5-123 REMOVE SWASHPLATE SLIDING SLEEVE  
BEARINGS (AVIM) (Continued)**


5-123

3. Turn ball spherical bearing (3) over and **press out three lower sleeve bearing segments (6)**. Use arbor press and adapter.

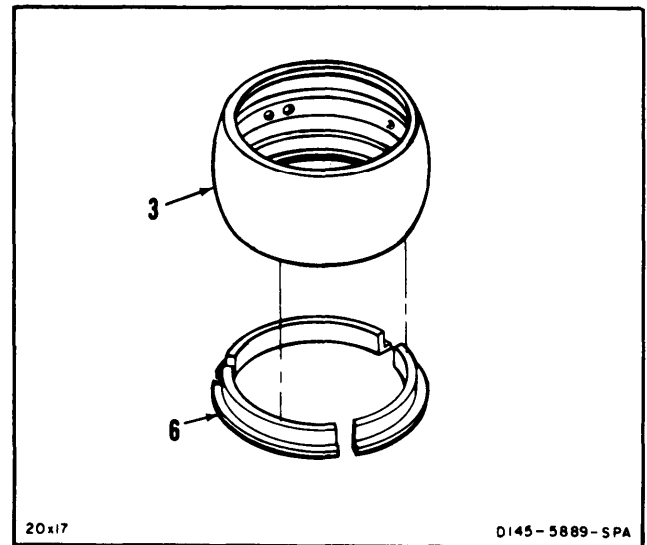

## FOLLOW-ON MAINTENANCE:

None

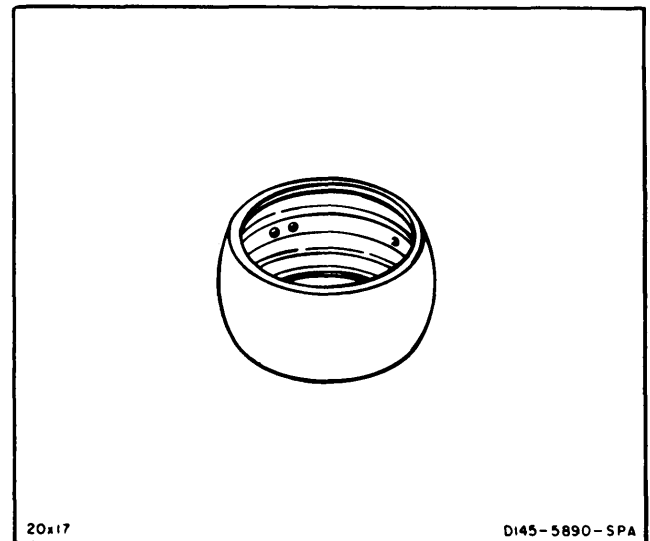**END OF TASK**



## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Dial Indicating Gage 643J

**Materials:**

Naphtha (E245)

Emery Cloth (E123) or

Abrasive Paper (E13)

Crocus Cloth (E122)

Cloths (E120)

Gauze Sponges (E184)

Gloves (E186)

Acetic Acid (E21)

Alodine Powder (E65)

**Personnel Required:**

Aircraft Powertrain Repairer

Inspector

**References:**

TM 55-1500-335-23

MIL-C-5541

**Equipment Condition:**


Off Helicopter Task

**General Safety Instructions:****WARNING**

Naphtha (E245) is combustible and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**CAUTION**

Do not wear photogray glasses when fluorescent inspecting. They reduce ability to see cracks.

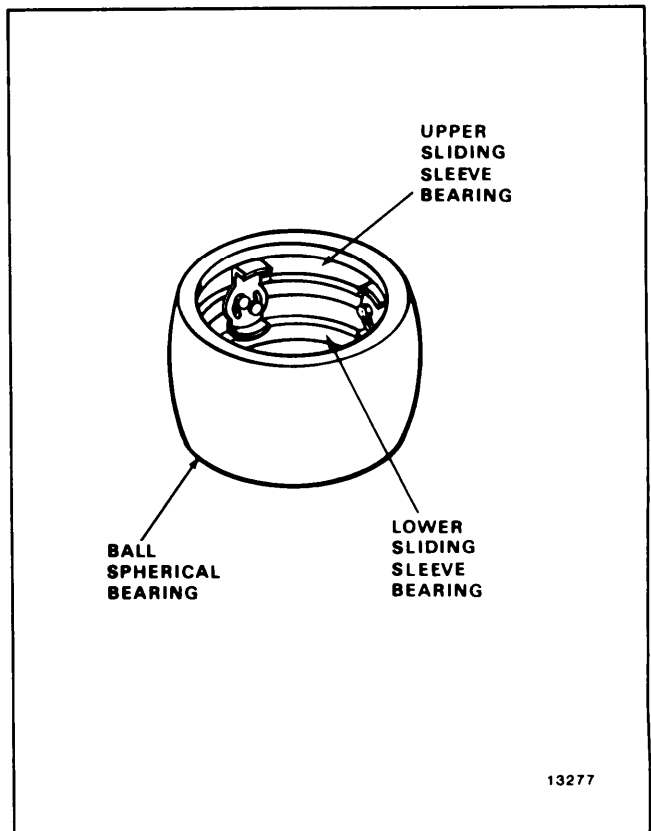**GO TO NEXT PAGE**

5-440 Change 18

## 5-123.1 INSPECT AND REPAIR BALL SPHERICAL BEARING (Continued)


5-123.1

1. **Clean** oil and grease from **surface of bearing (1)**. Use naphtha (E245) and clean cloths (E120). Wear gloves (E186).
2. **Inspect surface of bearing (1)** for nicks, scratches, and minor pitting or corrosion of coating. Observe the following definitions:
  - a. *Nick* — A surface indentation with a sharp crease at the bottom. Surface finish is not broken. Caused by pressure or impact from a hard object with a sharp edge.
  - b. *Scratch* — A light, narrow mark on the surface. Surface finish is broken, but not removed. Caused by a hard, sharp particle moving across the surface.
  - c. *Pit* — A small irregular cavity where material is removed from the surface. Usually caused by corrosion. Pits are usually dark in appearance.
  - d. *Corrosion* — A broken or pitted surface, discolored around the edge. Corrosion is caused by chemical action.
3. Note extent and location of damage:

### NOTE

Limits in this step refer to depth of damage after rework.

- a. **Depth of damage on bearing surface (1) shall not be more than 0.020 inch.**
- b. **Damage shall not extend to edge of bearing surface.**
- c. **Sum of length plus width of any one damaged area shall not be more than 1-1/4 inches.**
- d. **Distance between two damaged areas shall not be less than half the length of the larger area.**

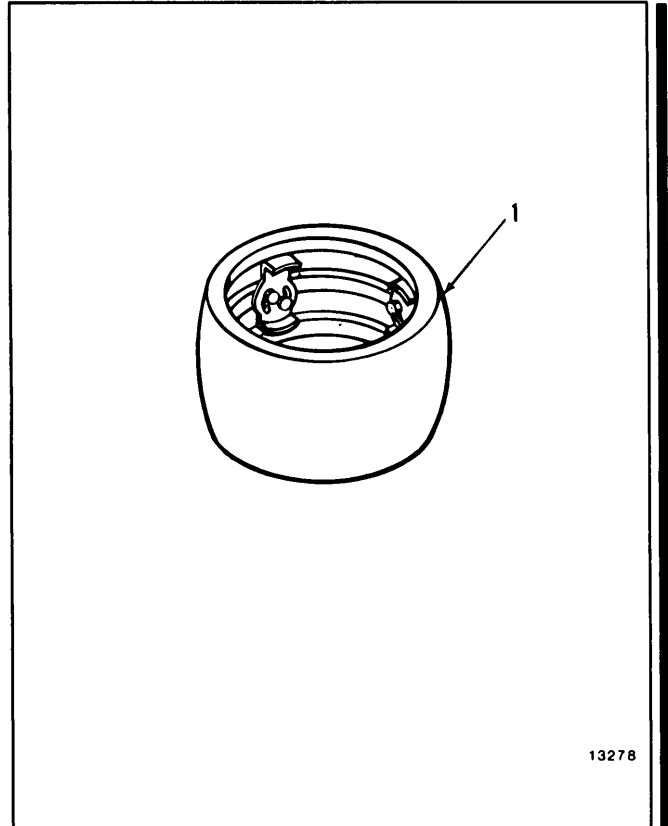

**GO TO NEXT PAGE**

## 5-123.1 INSPECT AND REPAIR BALL SPHERICAL BEARING (Continued)


5-123.1

- e. There shall be no more than 20 damaged areas in any 3/4-inch wide band (2) around surface of bearing (1). There shall be no more than five damaged areas in any quarter-section of the band. The total of length plus width of all five areas shall not be more than 5-1/2 inches.
- f. There shall be no more than 75 damaged areas over entire surface.
4. **Fluorescent inspect** damaged area to check for cracks. (Refer to TM 55-1500-335-23.) **There shall be no cracks.**
  5. **Blend out damage** with emery cloth (E123) or abrasive paper (E13). Observe limits of step 3.
  6. **Smooth blended area** with crocus cloth (E122). Do not leave any sharp edges.
  7. **Acid-etch reworked area** as follows:

### WARNING

Acetic acid (E21) is combustible and toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation, away from open flame. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- a. **Prepare solution of 3 parts acetic acid (E21) to 7 parts water.** Wear gloves (E186) and goggles.
- b. **Swab area with solution for 2 minutes.** Use gauze sponges (E184).
- c. **Rinse** area with cold water.

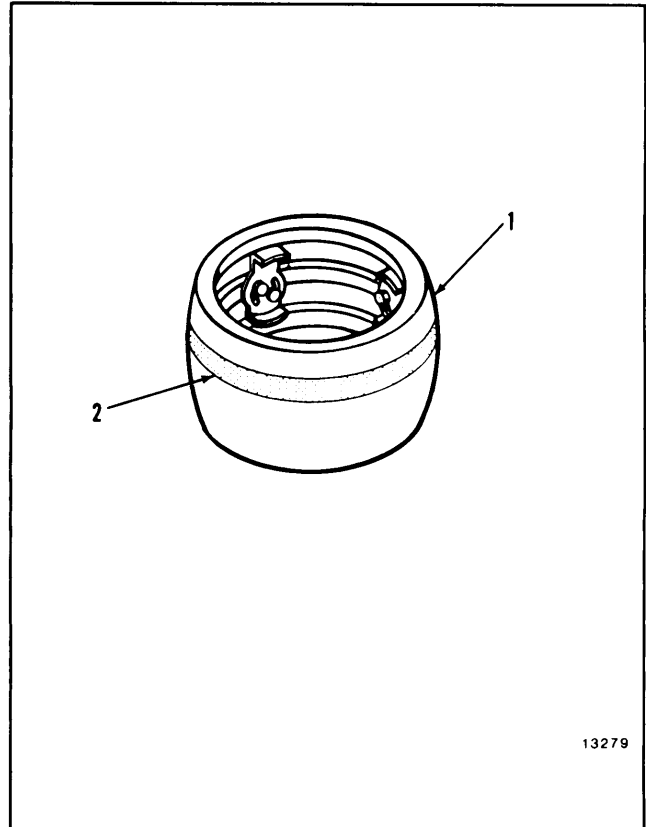

13279

**GO TO NEXT PAGE**

5-440.2 Change 18

**5-123.1 INSPECT AND REPAIR BALL SPHERICAL BEARING  
(Continued)**

5-123.1

8. **Fluorescent inspect reworked area** to check for cracks (TM 55-1500-335-23).  
**There shall be no cracks.**
9. Apply surface treatment to reworked area as follows:
  - a. Clean area with naphtha (E245) and clean cloths (E120). Let area air dry. Wear gloves (E186).

**WARNING**

Alodine powder (E65) is an oxidizer. Discard cloths which contain this material in a separate container. If discarded with cloths contaminated with acetone, MEK, or other organic solvents, combustion can result. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- b. **Swab solution of alodine powder (E65) in water (MIL-C-5541) on area. Swab for 2 to 5 minutes.** Use gauze sponges (E184). Wear gloves (E186).
  - c. **Rinse** area with cold water. Let air dry.

**INSPECT**

FOLLOW-ON MAINTENANCE:

None

**END OF TASK**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Sliding Bearing Locating Fixture (T110)  
Torque Wrench, 5 to 50 Inch-Pounds  
Vernier Calipers  
Soft Aluminum Scraper

**Materials:**

Dry Cleaning Solvent (E162)  
Methyl-Ethyl-Ketone (E244)  
Scrim Cloth (E326)  
Adhesive (E43)  
Cloth (E120)  
Lockwire (E231)  
Gloves (E186)

**Personnel Required:**


Aircraft Powertrain Repairer (2)  
Inspector

**References:**

TM 55-1520-240-23P

**General Safety Instructions:****WARNING**

Methyl-ethyl-ketone (E244) and dry cleaning solvent (E162) are flammable and toxic. They can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

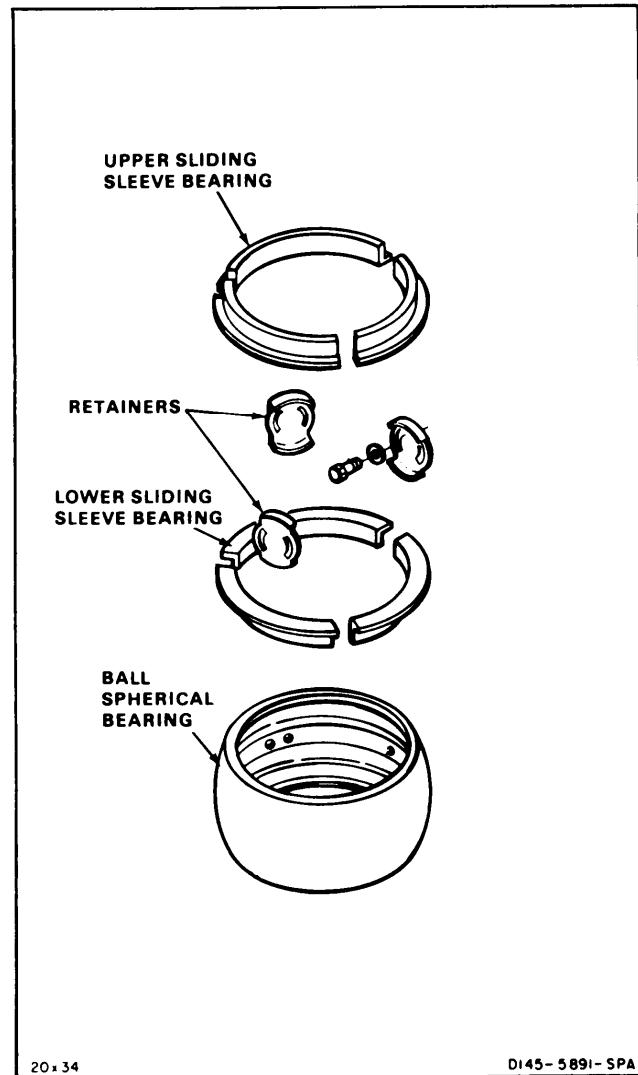**GO TO NEXT PAGE**


5-440.4 Change 18

**5-124 INSTALL SWASHPLATE SLIDING SLEEVE BEARING  
(AVIM) (Continued)**

**NOTE**

Procedure is same to install forward and aft swashplate sliding sleeve bearings.

1. Clean inside of ball spherical bearing (1). Use cloth (E120) damp with dry cleaning solvent (E162). Wear gloves (E186).
2. Clean mating surfaces of six sliding sleeve bearing segments (2 and 3) and spherical bearing (1). Use cloth (E120) damp with methyl-ethyl-ketone (E244).
3. **Scrape** any **scrim cloth** from inside of spherical bearing (1). Use soft aluminum scraper.

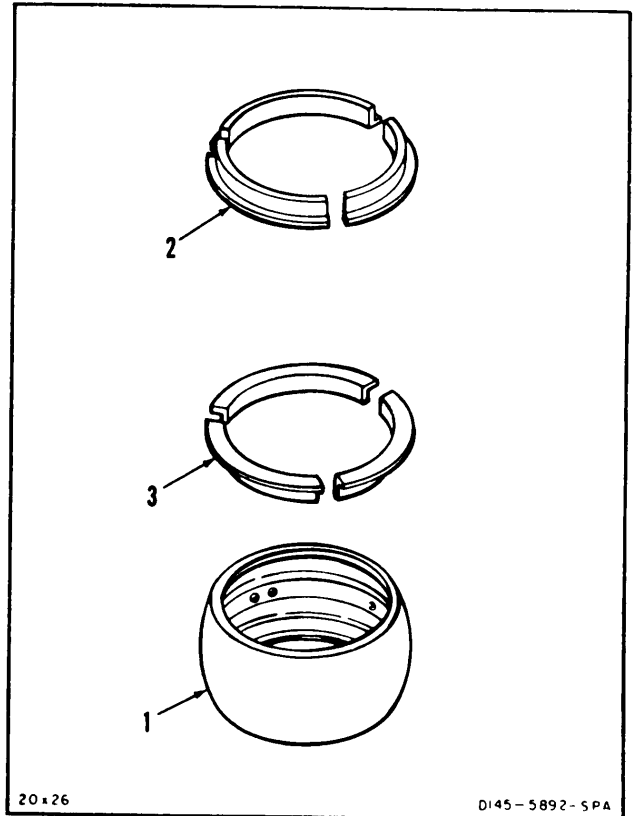


4. **Cut six strips of scrim cloth (E326) (4)** to size of curved mating surfaces of sleeve bearing segments (2 and 3).

**NOTE**

Pot life of mixed adhesive (E43) is 2 hours at 72°F (22°C).

5. **Apply** even coat of **adhesive (E43)** to mating surfaces of spherical bearing (1) and sleeve bearing segments (2 and 3). Wear gloves (E186).
6. **Press scrim cloth (E326) (4) into adhesive** on curved outside surfaces (5) of sleeve bearing segments (2 and 3) by hand.

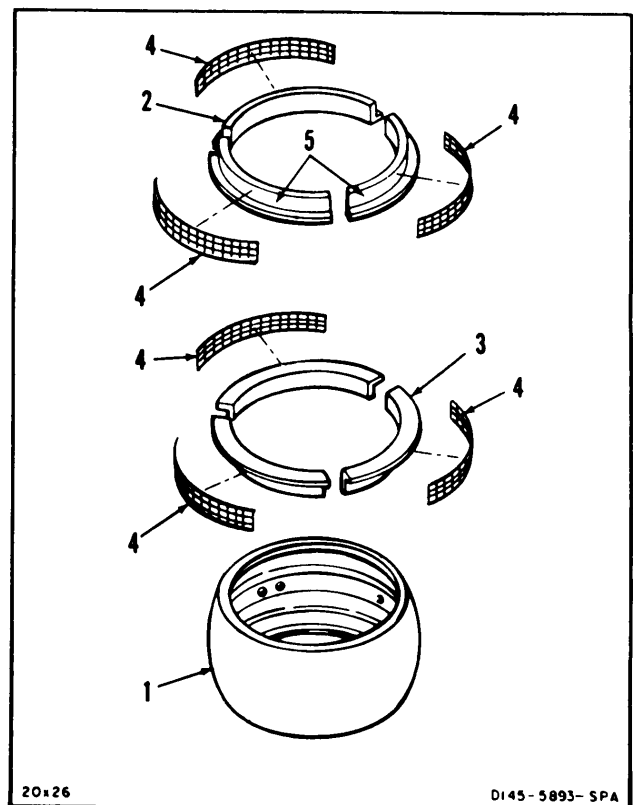

**GO TO NEXT PAGE**



7. **Apply** even coat of adhesive (E43) over scrim cloth (E326) (4). Do not allow bubbles or lumps to form. Wear gloves (E186).

**NOTE**

Bearing segments are issued as a set of three, all with the same serial number. If one segment is damaged, all three must be replaced.

8. **Install sleeve bearing segments (2 and 3)** as follows:

- a. Position three upper segments (2) and three lower segments (3) in ball spherical bearing (1). Align center of each segment between holes (6). The gaps (7) between segments do not have to be equal but the deviation between the size of the gaps must be within 0.050 inch tolerance.
- b. Apply pressure to seat each segment (2 and 3). Squeeze out excess adhesive. Make sure segments do not move.
- c. Wipe excess adhesive from bearing (1). Use cloth (E120) damp with methyl-ethyl-ketone (E244). Wear gloves (E186).
- d. Position three retainers (8) in bearing (1). Install two screws (9) and washers (10) loosely. Turn retainers clockwise until retainers hold segments (2 and 3) securely in position.
- e. **Torque screws (9) to 15 Inch-pounds.** Do not lockwire screws at this time.

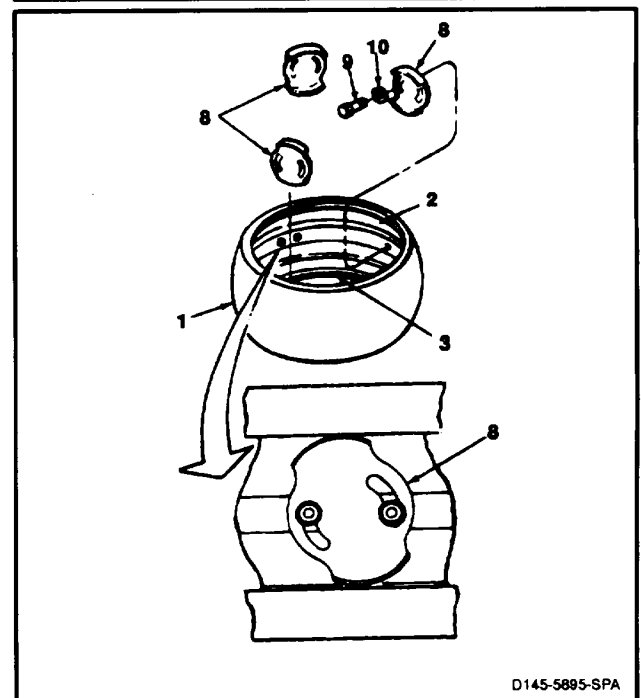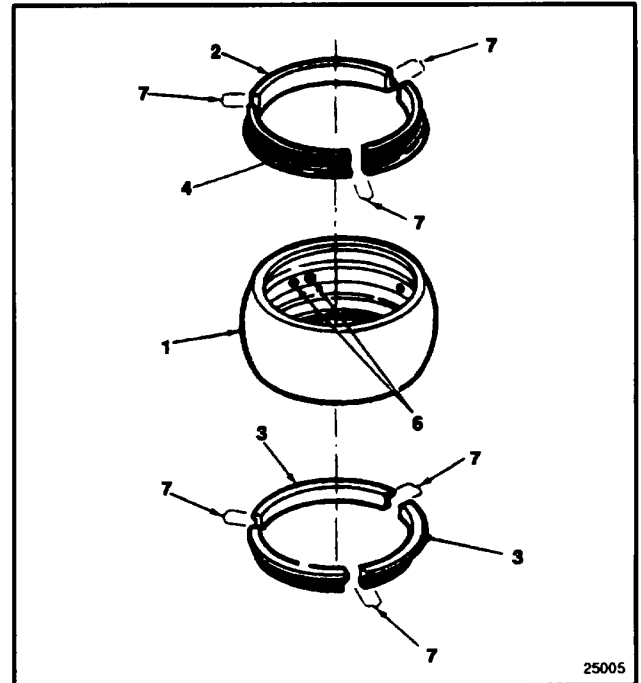


## 5-124 INSTALL SWASHPLATE SLIDING SLEEVE BEARING (AVIM) (Continued)


5-124

### 9. Install bearing (1) on locating fixture (T110) (11) as follows:

- a. Rest fixture (T110) (11) on flat surface.
- b. Pull three clamps (12) and three supports (13) toward center.
- c. Align spherical bearing (1) so three gaps (7) center on three handknobs (14). Rest bearing on three feet (15) of fixture (T110) (11).
- d. Push three supports (13) and three clamps (12) outboard under slots. Turn three handknobs (14) clockwise to tighten clamps.
- e. Remove adhesive squeeze out from spherical bearing (1). Use cloth (E120) damp with dry cleaning solvent (E162). Wear gloves (E186).
- f. Allow adhesive to cure 24 hours.
- g. Loosen handknobs (14). Pull clamps (12) and supports (13) inward until clear of bearing (1).
- h. Remove bearing (1) from fixture (T110) (11).

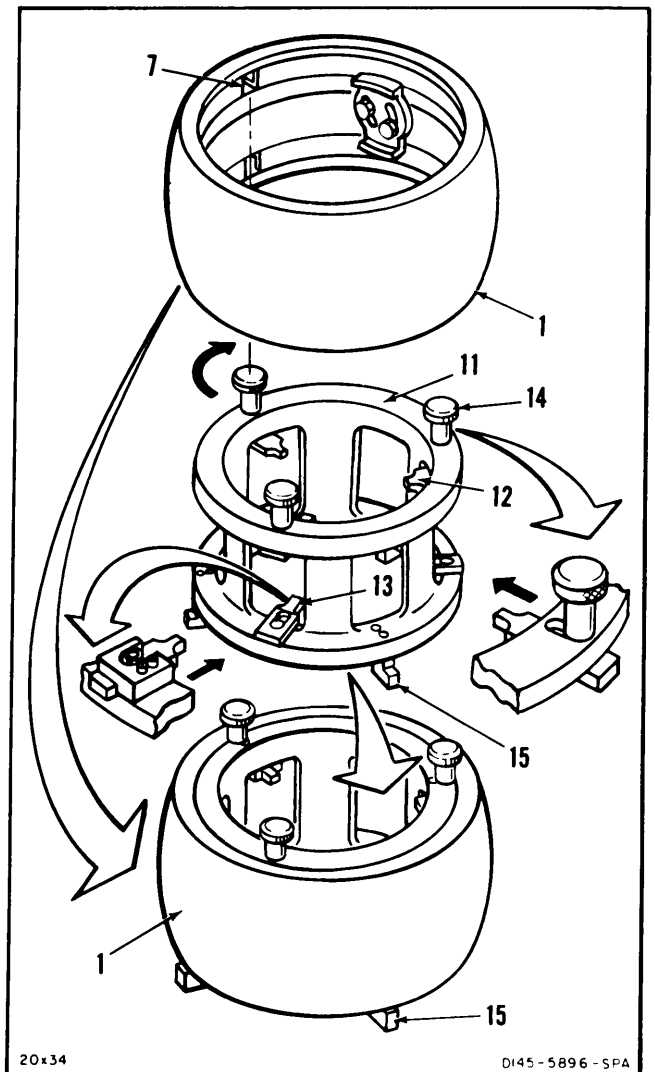

10. Check that location and spacing of six segments (2 and 3) is as described in step 8.a.
11. Check inside diameter across segments (2 and 3). Inside diameter shall be 10.745 to 10.755 inches.

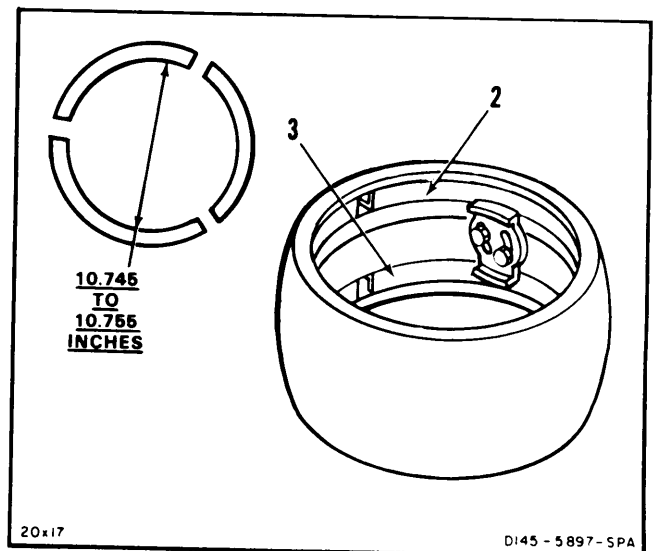

**GO TO NEXT PAGE**



## 5-124 INSTALL SWASHPLATE SLIDING SLEEVE BEARING (AVIM) (Continued)

5-124

12. Check installation of three retainers (8) as follows:


- a. Loosen six screws (9)
- b. Hold each retainer (8) firmly against segments (2 and 3).

**CAUTION**

Do not turn lockwire ends inboard of bolt heads. Make sure retainers are not inboard of sleeve bearing surface. Contact with lockwire or retainer will damage slider shaft.

- c. **Torque screws (9) to 15 inch-pounds.**  
Lockwire screws. Use lockwire (E231).  
Tuck end under crosswire.

13. Clean adhesive from bearing (1). Use cloth (E120) damp with methyl-ethyl-ketone (E244). Use soft aluminum scraper, if needed. Wear gloves (E186).

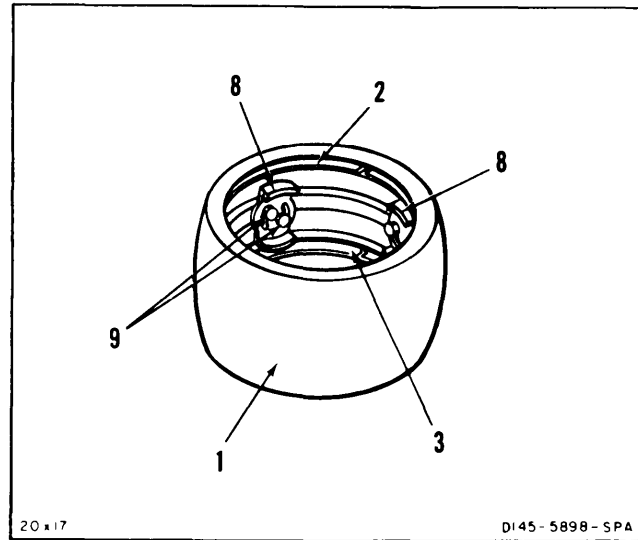

### INSPECT

FOLLOW-ON MAINTENANCE:

None

**END OF TASK**

## INITIAL SETUP

**Applicable Configurations:**

Without 83

**Tools:**

Powertrain Repairer's Tool Kit,

NSN 5180-00-003-5267

Mallet

Phenolic Drift, 1/2 Inch x 2 Inches x 10 Inches

Wood Blocks (9), 2 Inches x 4 Inches x 10 Inches

Each

Goggles

Torque Wrench, 0 to 150 Inch-Pounds

Torque Wrench, 100 to 750 Inch-Pounds

**Materials:**

Lockwire (E231)

Lockwire (E233)

Epoxy Primer (E292)

Gloves (E184.1)

**Personnel Required:**

Aircraft Powertrain Repairer (2)

Inspector

**References:**


TM 55-1520-240-23P

**General Safety Instructions:****WARNING****FLIGHT SAFETY PARTS**

This is an installation critical flight safety part. All aspects of its inspection, assembly, and installation must be adhered to.

**WARNING**




Epoxy primer (E292) is flammable and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

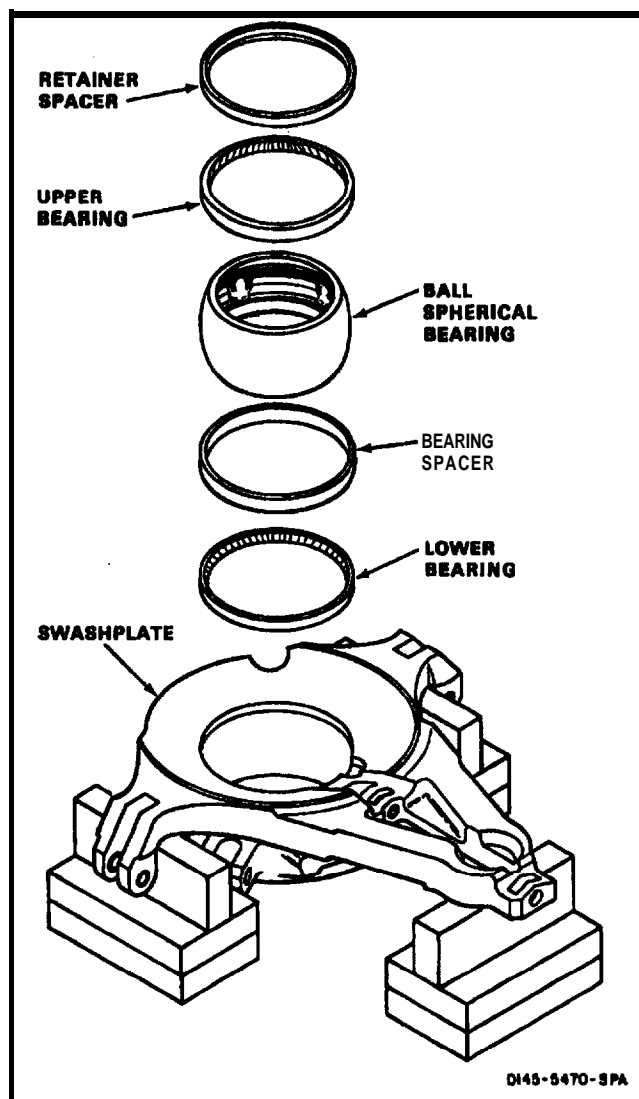

**NOTE**


- Procedure is similar to install forward or aft swashplate ball spherical bearing. Differences are noted in text.
- Lower bearing, bearing spacer, and upper bearing are matched set. Keep parts together.
- If removed bearings and spacers are being reinstalled, align matchmarks with matchmark on stationary ring.

1. Position swashplate (1 or 2) on blocks (3), rotating ring (4) up.
2. Lightly coat outside surfaces of lower spherical bearing (5) with epoxy primer (E292) and allow to dry before installation. **Tap lower bearing (5), thickest edge down, into stationary ring (6).** Use phenolic drift.
3. **Tap bearing spacer (7) into position** against lower bearing (5) if necessary. Use phenolic drift.

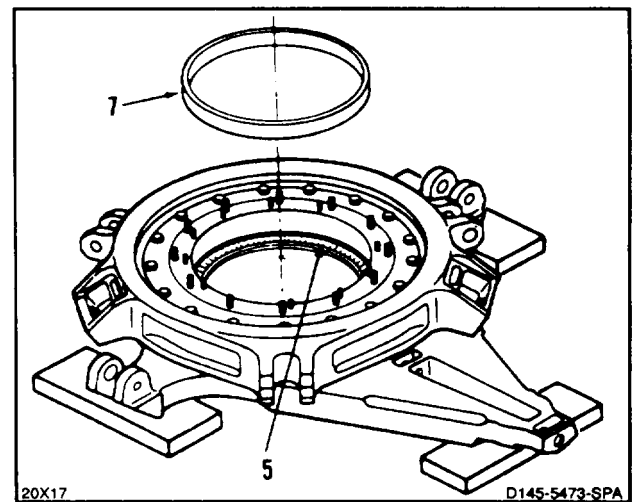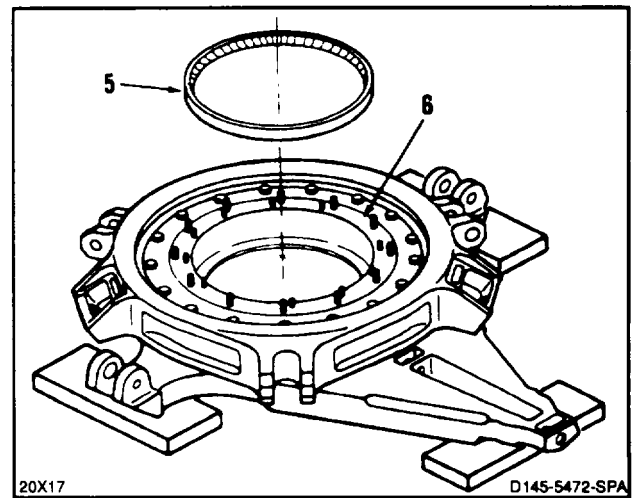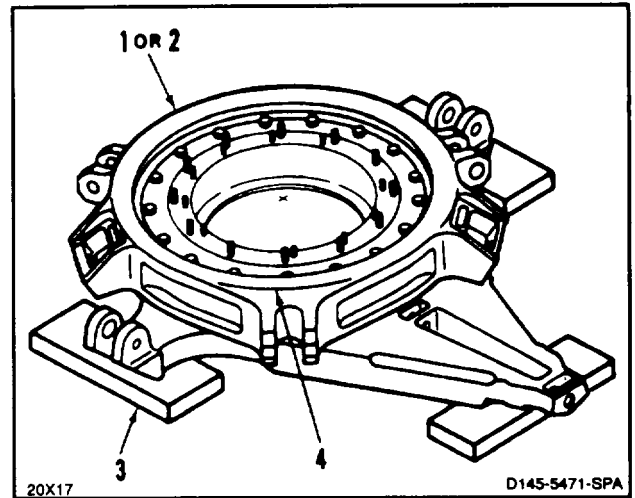


GO TO NEXT PAGE


4. Position spherical bearing (8) on lower bearing (5).

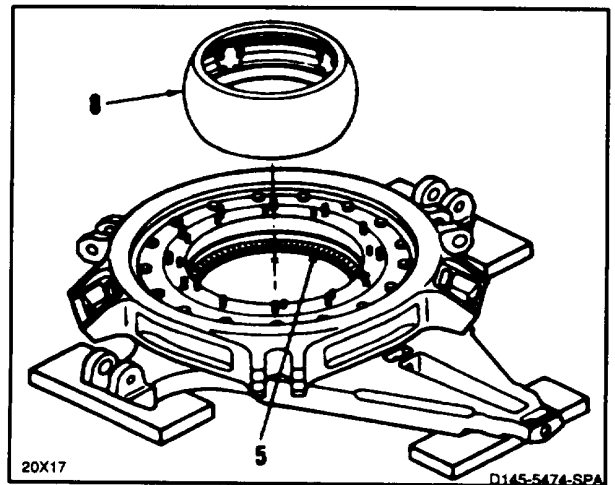

5. Lightly coat outside surfaces of upper spherical bearing (9) with epoxy primer (E292) and allow to dry before installation. Tap upper bearing (9), thickest edge up, into position over spherical bearing (8) if necessary. Use phenolic drift.

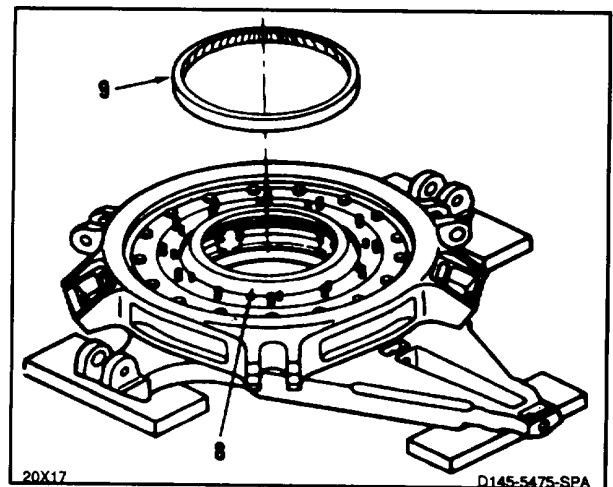


6. Tap retaining spacer (10) into stationary ring (6) if necessary. Use phenolic drift. Ensure that the thick edge of spacer (10) is at the top.

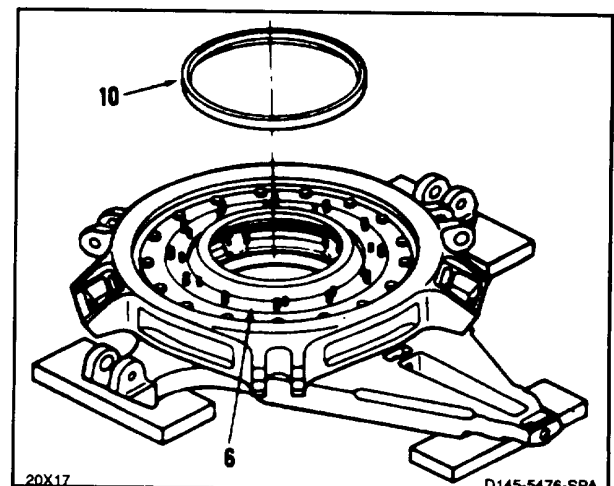


GO TO NEXT PAGE

7. For forward swashplate (1) only, install upper retainer (11) and seal (12) as follows:
  - a. Install upper retainer (11). Install 10 nuts (13) and washers (14). Torque 10 nuts to 117 inch-pounds.
  - b. Install seal (12). Install 12 nuts (15) and washers (16). Torque 12 nuts to 195 Inch-pounds.

**INSPECT**

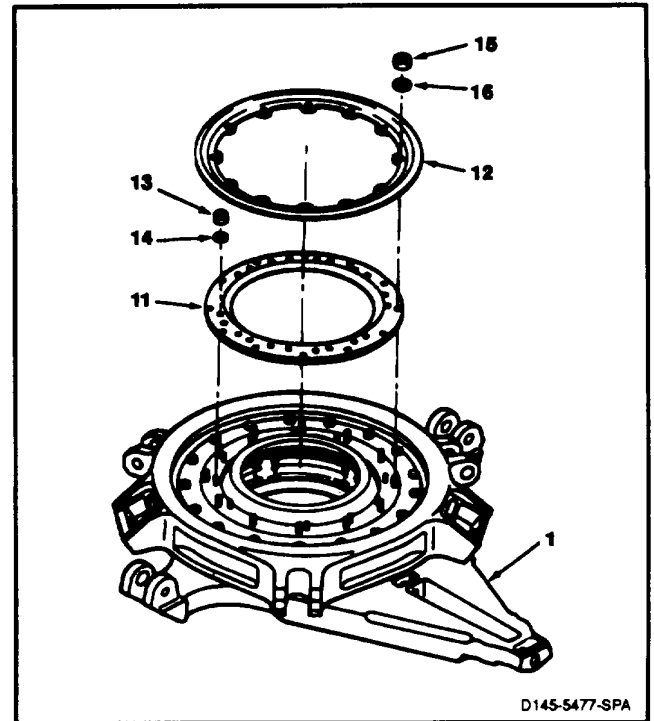


8. For aft swashplate (2) only, Install upper retainer (17) and seal (18) as follows:
  - a. Position upper retainer (17) on stationary ring (6).
  - b. Coat 10 bolts (19) with epoxy primer (E292). Wear gloves (E184.1).
  - c. **Install 10 bolts (19) and washers (20).**
  - d. **Torque 10 bolts (19) to 135 inch-pounds.** Lockwire bolts. Use lockwire (E231).
  - e. Position seal (18) on stationary ring (6).
  - f. Coat 12 bolts (21) with epoxy primer (E292). Wear gloves (E184.1).
  - g. **Install 12 bolts (21) and washers (22).**
  - h. **Torque 12 bolts (21) to 270 inch-pounds.** Lockwire bolts. Use lockwire (E233).

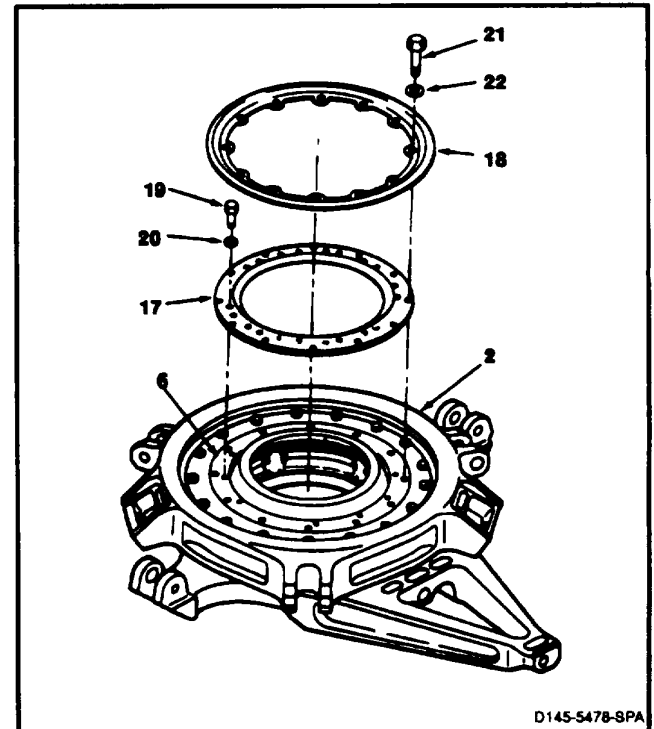


GO TO NEXT PAGE

**5-125 INSTALL SWASHPLATE BALL SPHERICAL BEARING  
(Continued)**

- 9. Check that clearance between seal (12 or 18) and seal (23) is 0.005 to 0.070 inch.

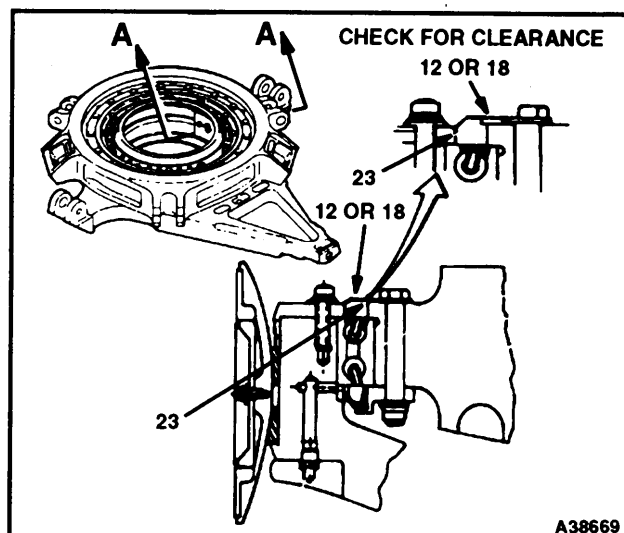

**INSPECT**

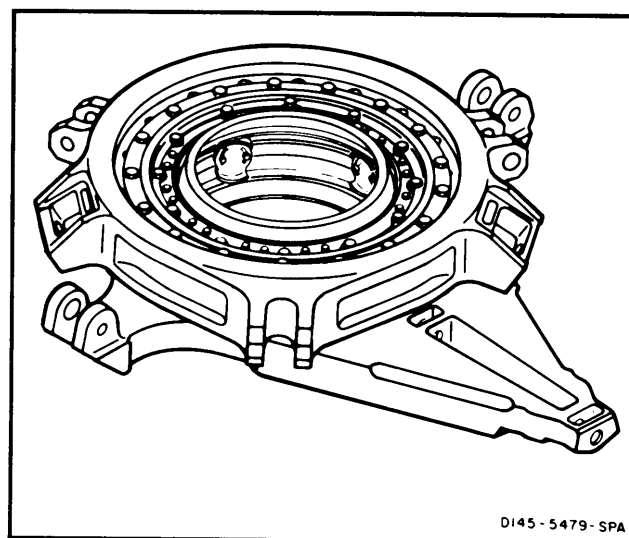

**FOLLOW-ON MAINTENANCE:**

Check friction of ball spherical bearing (Task 5-114).

**END OF TASK**

**INITIAL SETUP:**

**Applicable Configurations:**

With **83**

**Tools:**

- Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267
- Mallet
- Phenolic Drift, 1/2 Inch x 2 Inches x 10 Inches
- Wood Blocks (9), 2 Inches x 4 Inches x 10 Inches  
Each
- Goggles
- Torque Wrench, 0 to 150 Inch-Pounds
- Torque Wrench, 100 to 750 Inch-Pounds

**Materials:**

- Lockwire (E231)
- Lockwire (E233)
- Epoxy Primer (E292)
- Gloves (E184.1)

**Personnel Required:**

- Aircraft Powertrain Repairer (2)
- Inspector

**References:**

TM 55-I 520-240-23P

**General Safety Instructions:**


**WARNING**

**FLIGHT SAFETY PARTS**

This Is an Installation critical flight safety part. All aspects of Its Inspeo tion, assembly, and Installation must be adhered to.

**WARNING**


Epoxy primer (E292) Is flammable and very toxic. It can irritate skin and cause burns. Protective clothing or body sult with respirator and eye protection Is required if material Is to be applied by spraying. Use only In well ventilated area, away from open flame and exces- sive heat. In case of contact, immedi- ately flush skin or eyes with plenty of water for at least 15 minutes. Get medi- cal attention for eyes.

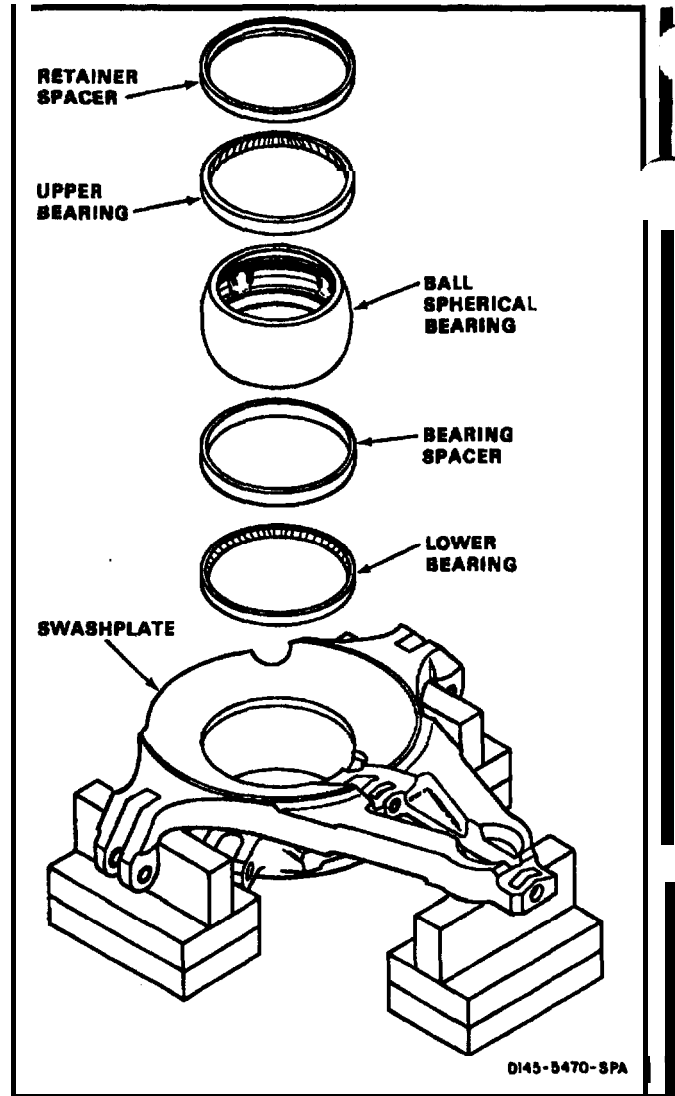


## 5-125.1 INSTALL SWASHPLATE BALL SPHERICAL BEARING (Continued) 5-125.1

## NOTE


- Procedure is similar to install forward or aft swashplate ball spherical bearing. Differences are noted in text.
  - Lower bearing, bearing spacer, and upper bearing are matched set. Keep parts together.
  - If removed bearings and spacers are being reinstalled, align matchmarks with matchmark on stationary ring.
1. Position swashplate (1 or 2) on blocks (3), rotating ring (4) up.

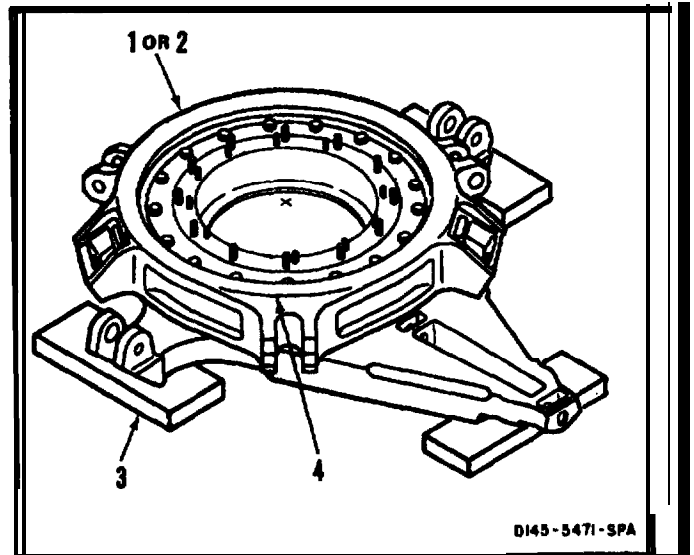

2. Lightly coat outside surfaces of lower spherical bearing (5) with epoxy primer (E292) and allow to dry before installation. **Tap lower bearing (5), thickest edge down, into stationary ring (6).** Use phenolic drift.

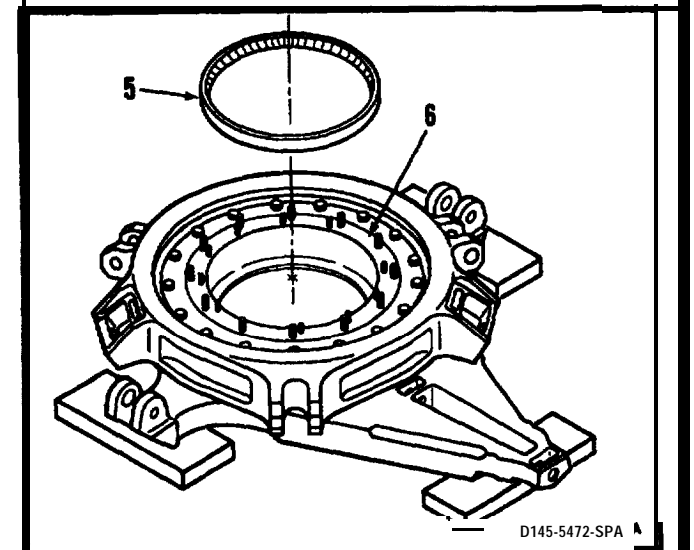


3. **Tap bearing spacer (7) into position** against lower bearing (5) if necessary. Use phenolic drift.

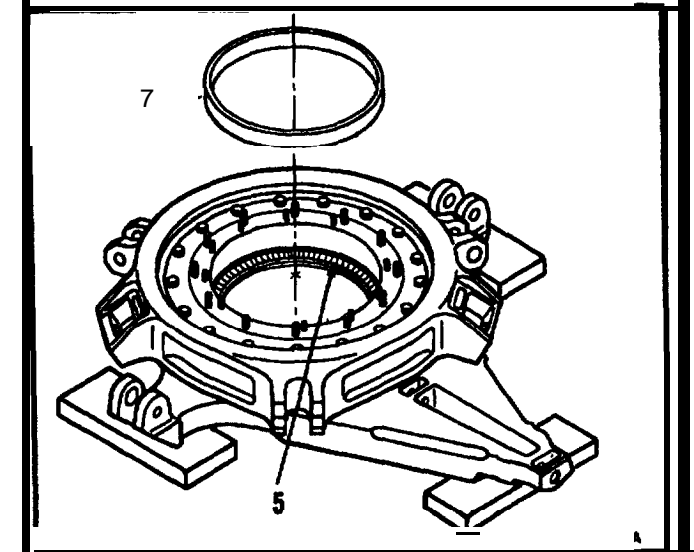





4. Position spherical bearing (8) on lower bearing (5).

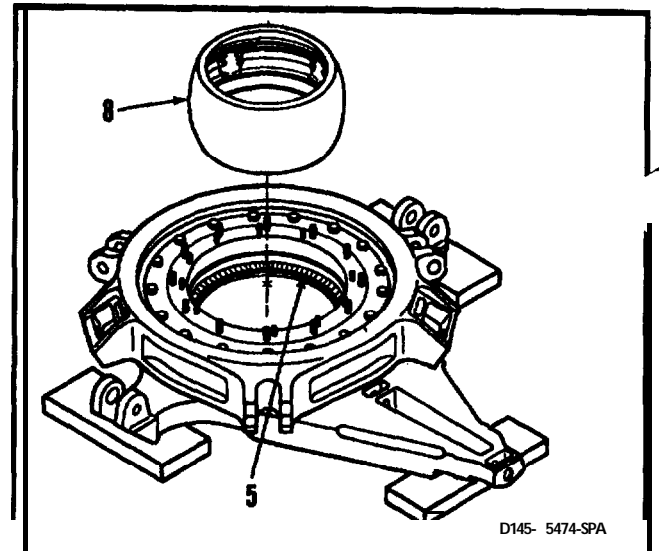

5. Lightly coat outside surfaces of upper spherical bearing (9) with epoxy primer (E292) and allow to dry before installation. **Tap upper bearing (9), thickest edge up, into position** over spherical bearing (8) if necessary. Use phenolic drift.

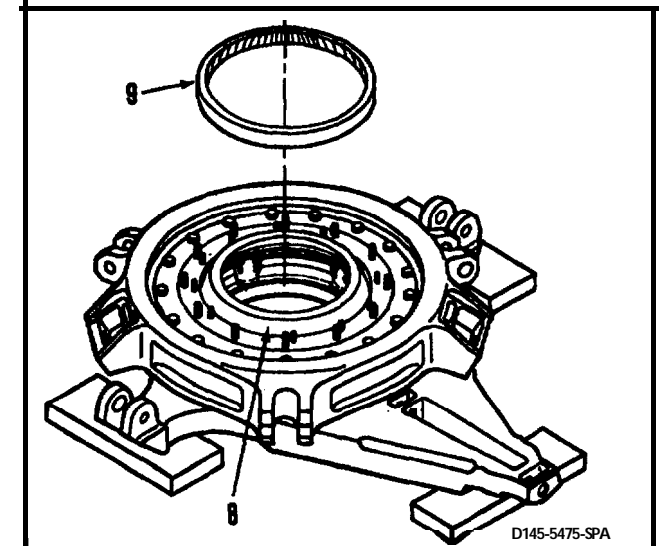

6. Tap retaining spacer (10) into stationary ring (6) if necessary. Use phenolic drift. Ensure that the thick edge of spacer (10) is at the top.

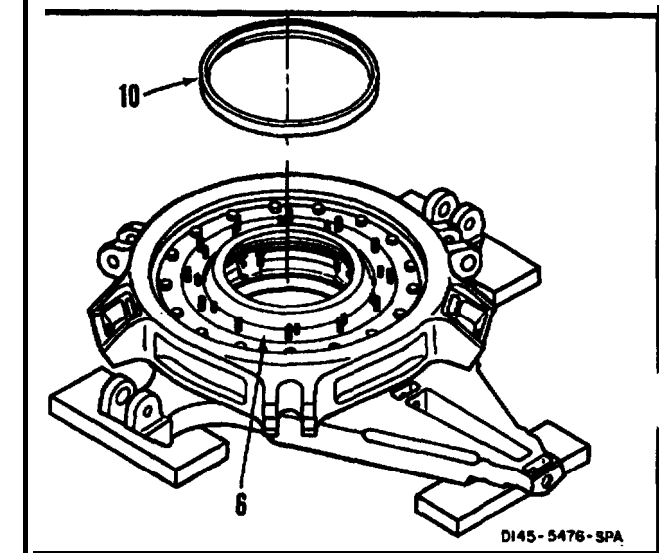

7. For forward swashplate (1) only, install upper retainer (11) and seal (12) as follows:

**WARNING**

Wear Kevlar gloves (E187) when handling heated parts.

- Heat retainer (12B) to 170 to 190°F (77 degrees to 88°C). Use an oven.
- Install seal (12A) in retainer (12C). Use a phenolic drift and mallet.
- Install ring (128) on stationary ring.
- Install retainer (12C) with seal (12A) on stationary ring.
- Install upper retainer (11). Install 10 nuts (13) and washers (14). **Torque 10 nuts to 117 Inch-pounds.**
- Install seal (12). Install 12 nuts (15) and washers (16). **Torque 12 nuts to 195 inch-pounds.**



**INSPECT**

8. For aft swashplate (2) only, install upper retainer (17) and seal (18) as follows: follows:


**WARNING**

Wear Kevlar gloves (E187) when handling heated parts.


- Heat retainer (18B) to 170 to 190°F (77 degrees to 88°C). Use an oven.
- Install seal (18A) in retainer (18C). Use a phenolic drift and mallet.
- Install ring (18B) on stationary ring.
- Install retainer (18C) with seal (18A) on stationary ring.
- Position upper retainer (17) on stationary ring (6).
- Coat 10 bolts (19) with epoxy primer (E292). Wear gloves (E184.1).
- Install 10 bolts (19) and washers (20). **Torque 10 bolts (19) to 135 Inch-pounds.** Lockwire bolts. Use lockwire (E231).
- Position seal (18) on stationary ring (6).
- Coat 12 bolts (21) with epoxy primer (E292). Wear gloves (E184.1).
- Install 12 bolts (21) and washers (22). **Torque 12 bolts (21) to 270 Inch-pounds.** Lockwire bolts. Use lockwire (E233).

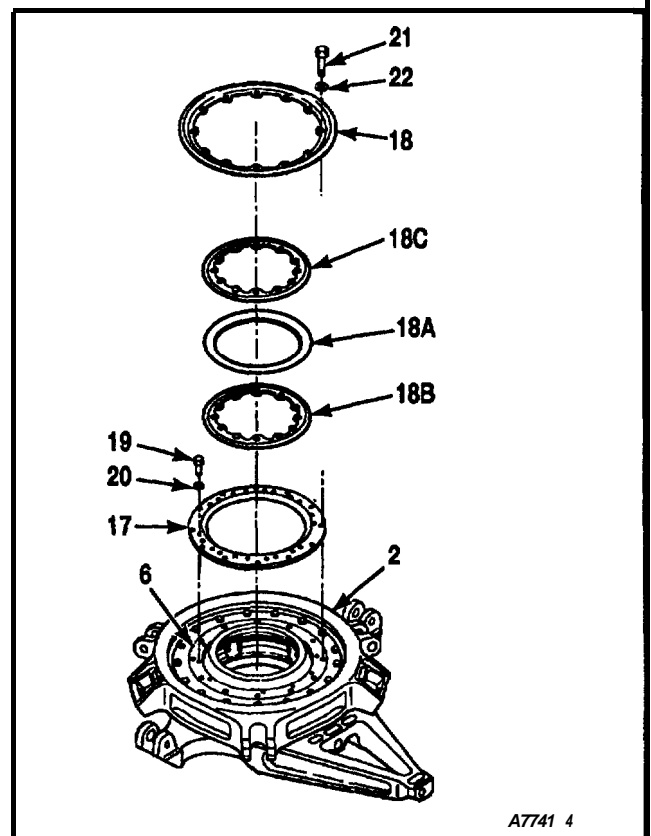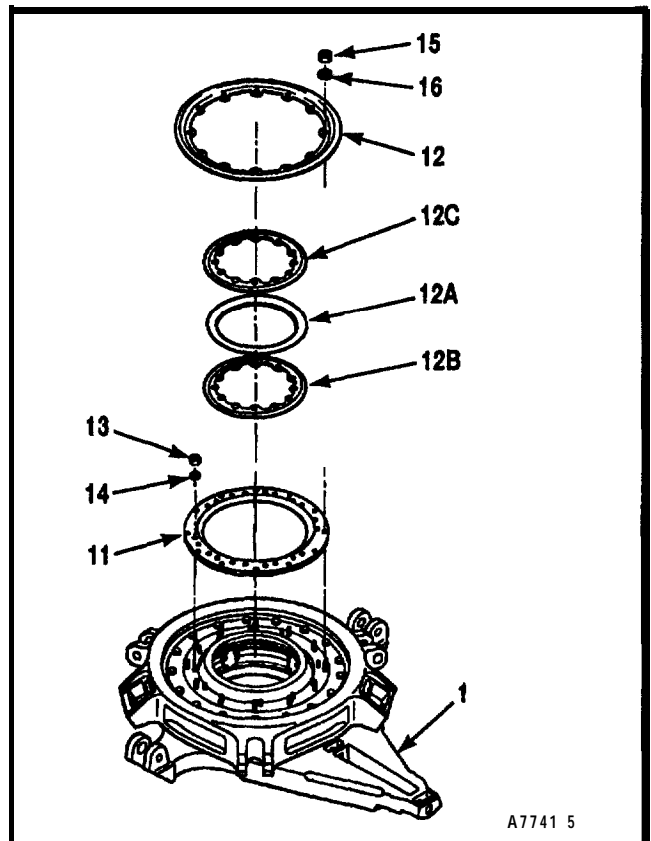

9. Check that clearance between seal (12 or 18) and seal (23) is 0.005 to 0.070 inch.

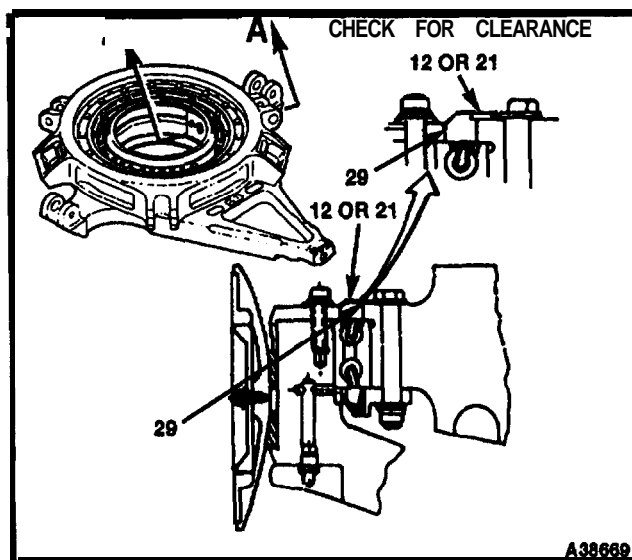

**INSPECT**

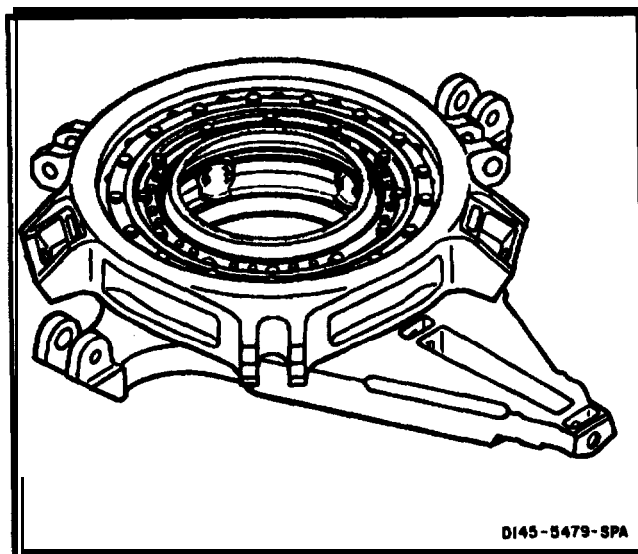

**FOLLOW-ON MAINTENANCE:**

Check friction of ball spherical bearing (Task 5-114).

## INITIAL SETUP

**Applicable Configurations:**

All

## Tools:

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114

**Materials:**


None

**Personnel Required:**

Inspector

**Equipment Condition:**


Off Helicopter Task

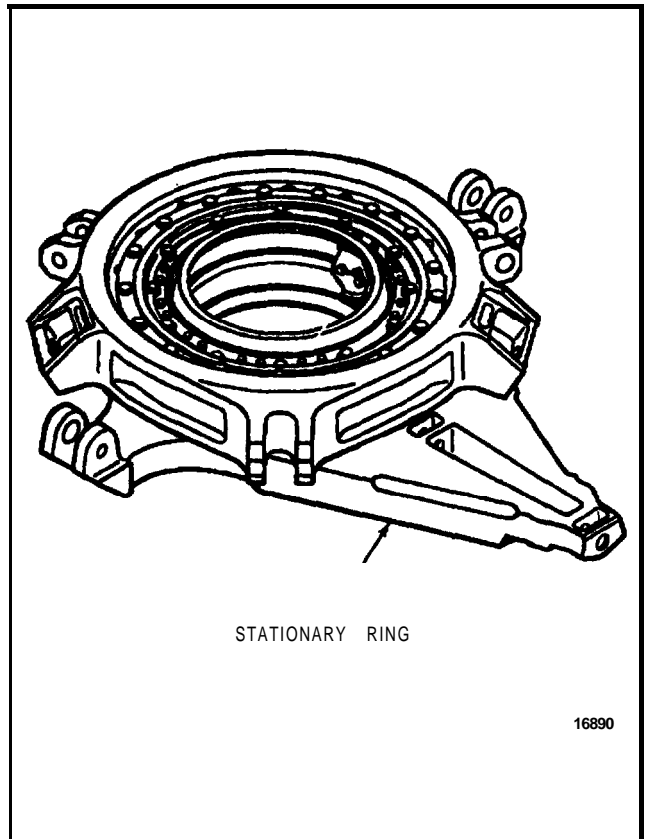

1. Check for nicks or scratches in critical areas (1) of stationary ring (2). Repair damage up to 0.020 inch in depth (Task 5-127).
2. Check for nicks or scratches in all other areas of stationary ring (2). Damage up to 0.005 Inch in depth shall be accepted without rework. Repair damage within 0.005 inch to 0.020 inch in depth (Task 5-127).

## FOLLOW-ON MAINTENANCE:

None

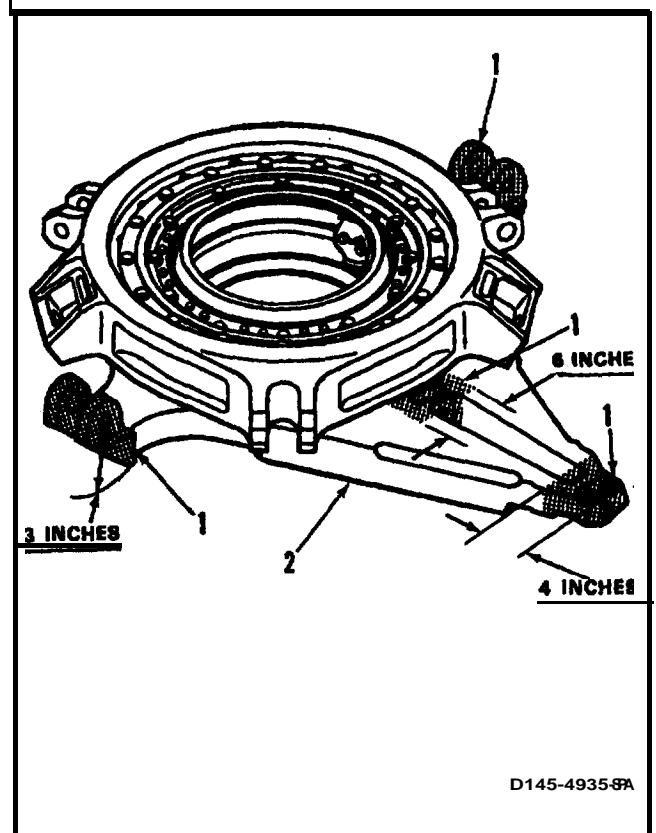

END OF TASK

INITIAL SETUP

**Applicable Configurations:**

Without **83**

**Tools:**

- Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267
- Phenolic Drift
- Oven

**Materials:**

- Dry Cleaning Solvent (E162)
- Cloths (E120)
- Grease (E190)
- Gloves (E184.1)

**Personnel Required:**


Aircraft Powertrain Repairer (2)

**References:**

- Task 5-122
- Task 5-125
- TM 55-1520-240-23P

**Equipment Condition:**

Off Helicopter Task

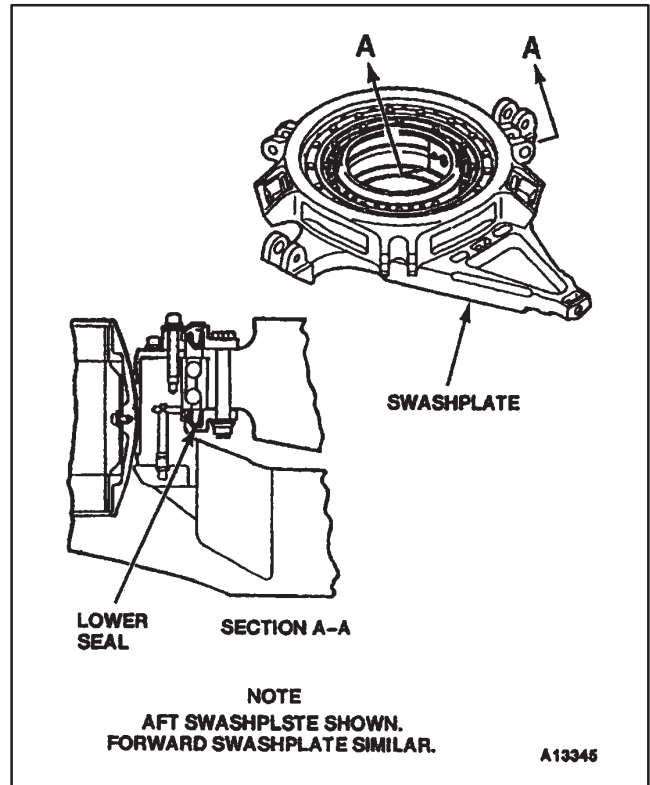


**NOTE**

Procedure is same to replace lower seal on forward or aft swashplate. Aft swashplate shown.


**REMOVAL SEAL**

1. Remove seal (1) and upper retainer (2) from stationary ring assembly (3) (Task 5-122).

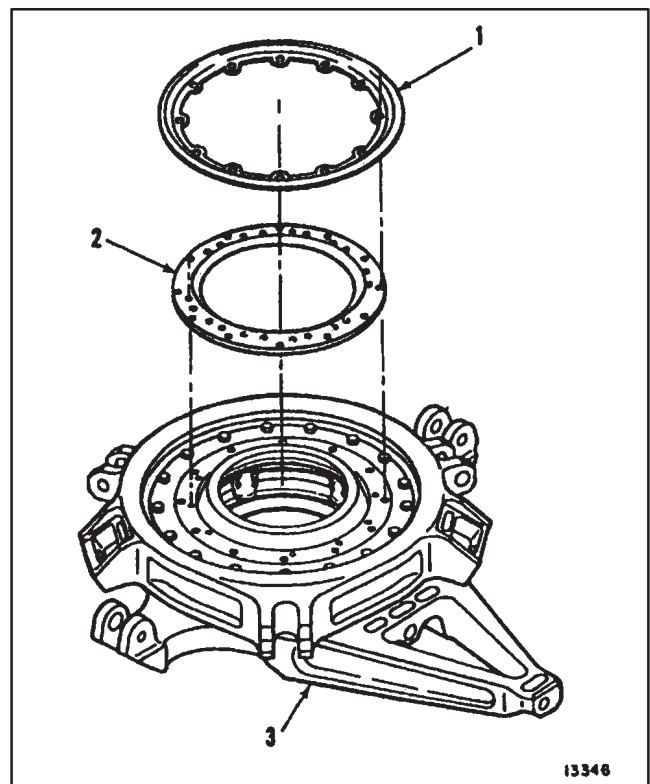

GO TO NEXT PAGE

- Carefully lift rotating ring assembly (4) from stationary ring (3). Use a mallet to separate the rings, if needed.

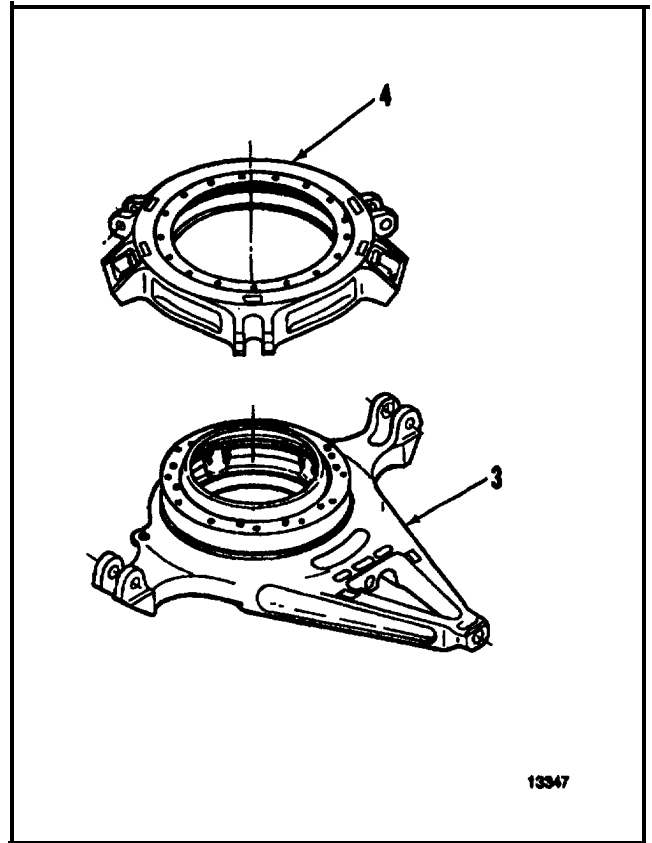


13347

- Remove nuts (5), washers (6 and 7), and bolts (8). Remove lower seal retainer (9) and rotating grease seal (10) from rotating ring (4).

**CAUTION**

Do not insert a screwdriver or other sharp tool between the seal and the retainer. Serious damage to the seal seating surface can result.

- Remove seal (11) from lower seal retainer (9). Use a mallet and phenolic drift.

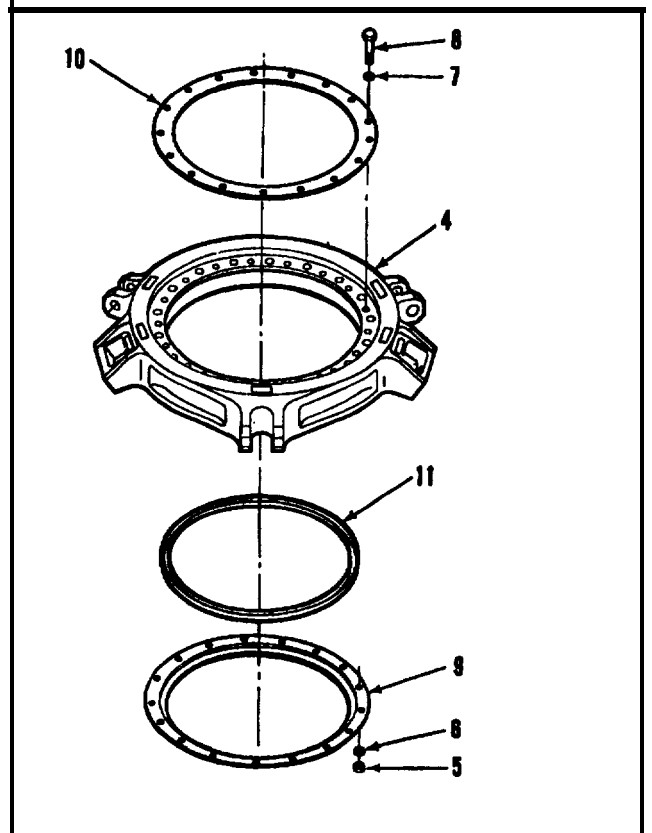

**INSTALL LOWER SEAL**

**WARNING**


Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

5. **Clean mating surfaces** of seal (11), retainer (9), grease seal (10) and rotating ring (4). Use dry cleaning solvent (E162) and clean cloths (E120). Wear gloves (E184.1). Allow solvent to dry.

**WARNING**

Wear Kevlar gloves (E187) when handling heated parts.

6. **Heat retainer (9)** to 170° to 190°F (77° to 88°C). Use an oven.
7. **Install seal (11) in retainer (9)**. Use a phenolic block and mallet.

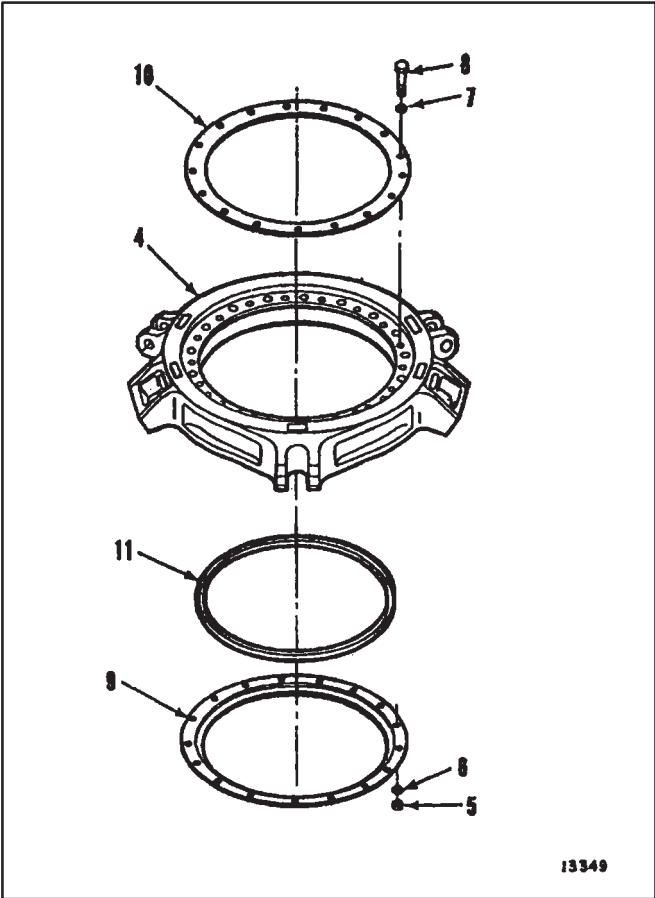

**NOTE**

If seal distorts while tightening, straighten the seal by tapping down using a phenolic block and hammer.

8. **Install grease seal (10)** on rotating ring (4). **Install bolts (8)**, and washers (7). Install washers (6) and nuts (5). Torque nuts evenly to 350-380 inch-pounds above friction torque. Remove nuts (5) and washers (6).


**NOTE**

Do not re-use any nut (5) after it has been installed once.


9. **Install retainer (9)**, with seal (11), over bolts (8). Install washers (6) and nuts (5).
10. **Tighten nuts (5) evenly to 350-380 inch-pounds** above friction torque.

**GO TO NEXT PAGE**

11. Coat lip of seal (11) and running surface (12) on stationary ring (3) with grease (E190).
12. Install rotating ring assembly (4) on stationary ring (3). Use a mallet, if needed.

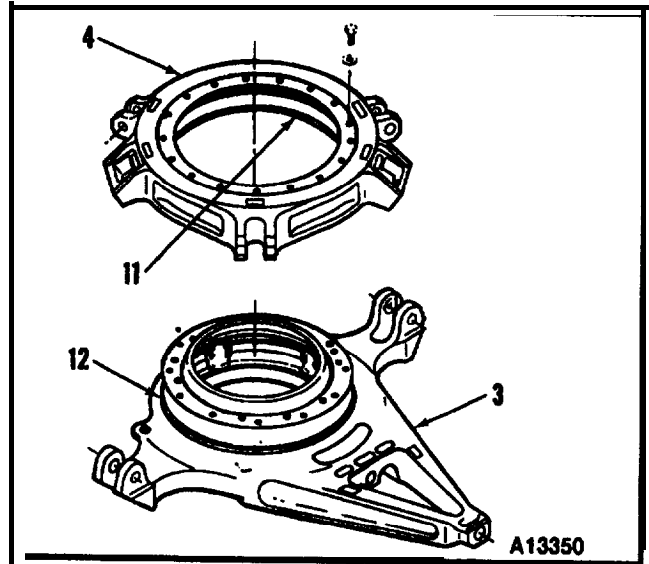


13. Install upper retainer (2) and seal (1) on stationary ring (3) (Task 5-125).

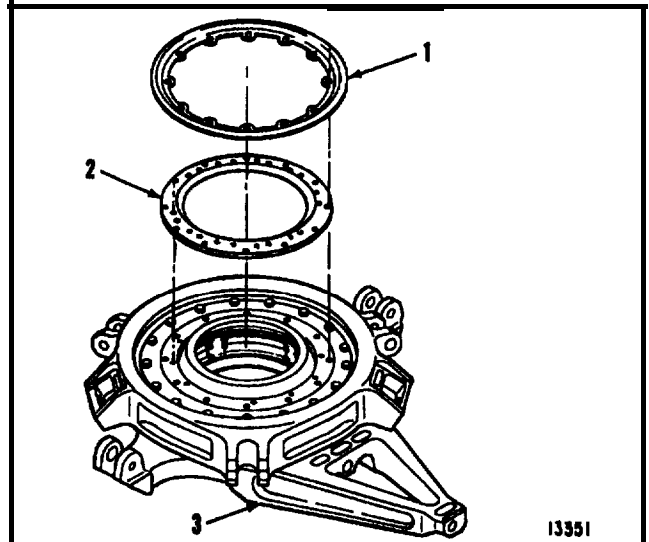

**CAUTION**

A bolt that is too long can damage the stationary ring.

14. Check that clearance between end of bolt (8) and stationary ring (3) is at least 0.180 inch. Check that clearance between seals (1 and 10) is 0.005 to 0.070 inch.
15. Lubricate bearing (13) through fitting (14). Use grease. Turn rotating ring (4) while greasing until a fillet of grease appears between grease seals (1 and 10).

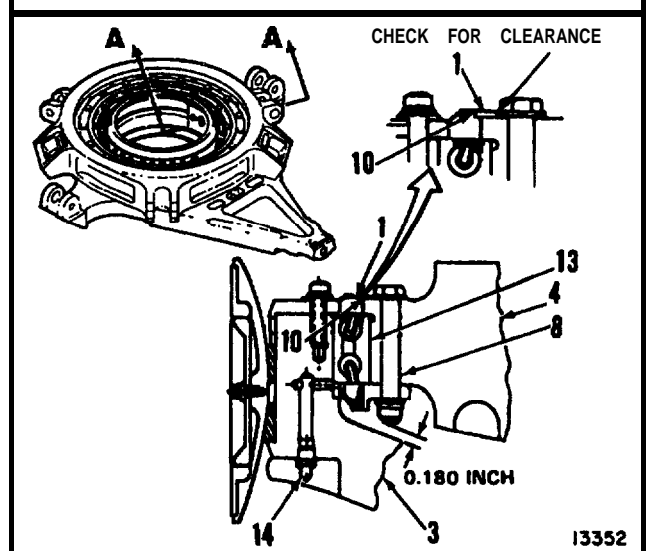

**FOLLOW-ON MAINTENANCE:**

None

**END OF TASK**



INITIAL SETUP

**Applicable Configurations:**

With **83**

**Tools:**

- Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267
- Phenolic Drift
- Oven
- Mallet

**Materials:**

- Dry Cleaning Solvent (E162)
- Cloths (E120)
- Grease (E190)
- Gloves (E184.1)

**Personnel Required:**


Aircraft Powertrain Repairer (2)

**References:**

- Task 5-122
- Task 5-125
- TM 55-1520-240-23P

**Equipment Condition:**

Off Helicopter Task

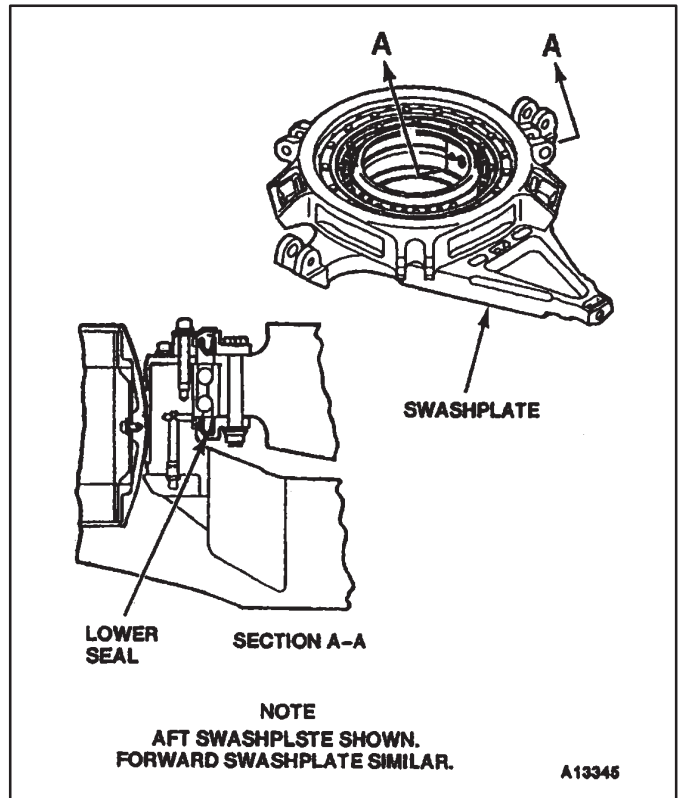

**NOTE**


Procedure is similar to replace lower seal on forward or aft swashplate. Aft swashplate shown.

**REMOVAL SEAL**

**CAUTION**


Do not insert a screwdriver or other sharp tool between the seal and the retainer. Serious damage to the seal seating surface can result.

1. Remove seal (1), retainer (1C), seal (1A), ring (1B), and upper retainer (2) from stationary ring assembly (3) (Task 5-122.1).

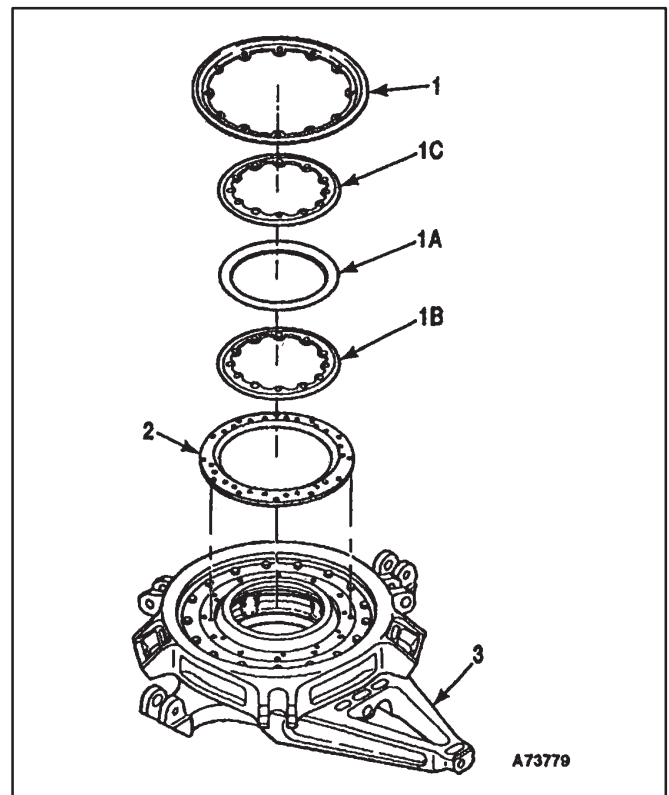

**GO TO NEXT PAGE**

2. Carefully **lift rotating ring assembly (4)** from stationary ring (3). Use a mallet to separate the rings. If needed.

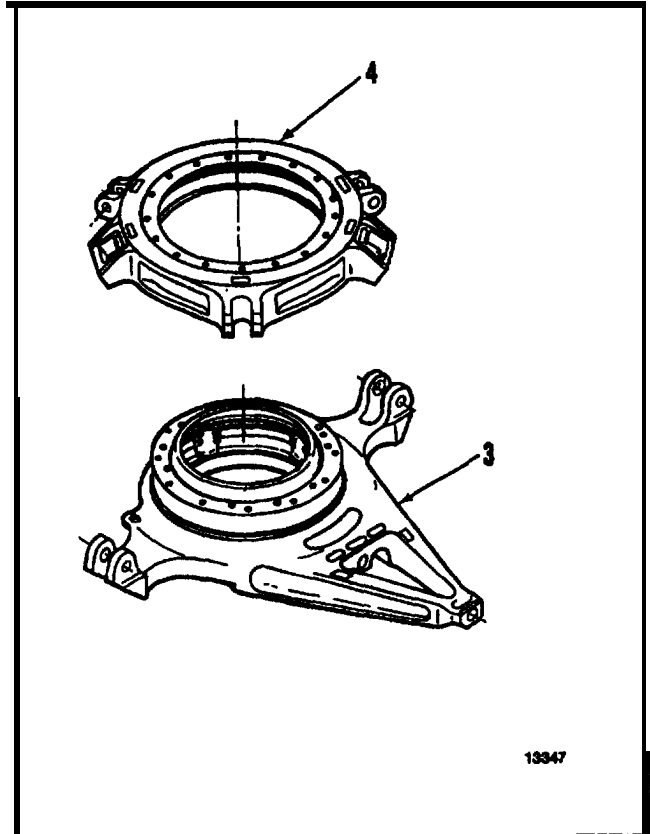


3. Remove nuts (5), washers (6 and 7), and bolts (8). **Remove lower seal retainer (9)** from rotating ring (4).

**CAUTION**

Do not insert a screwdriver or other sharp tool between the seal and the retainer. Serious damage to the seal seating surface can result.

4. **Remove seal (11)** from lower seal retainer (9). Use a mallet and phenolic drift.

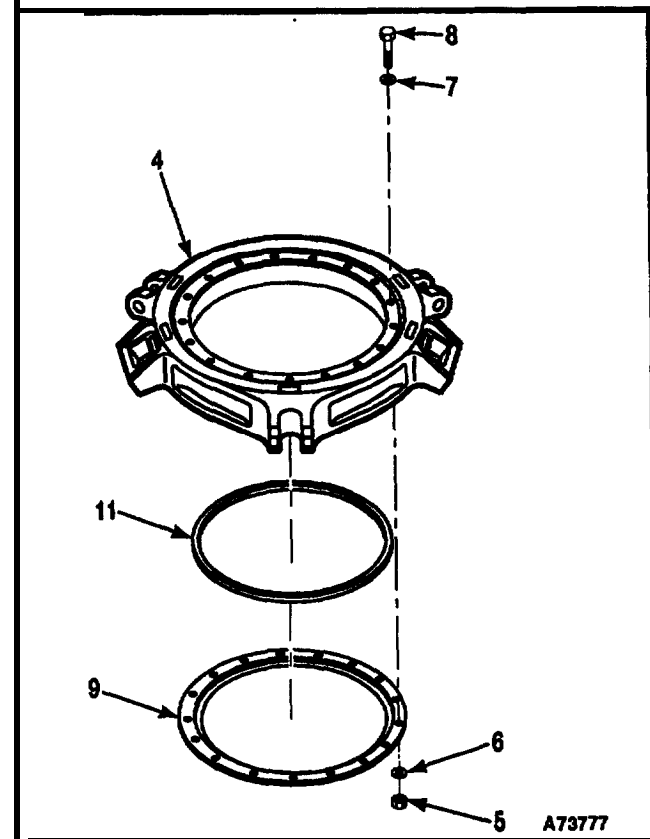

**INSTALL LOWER SEAL**

**WARNING**


Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

5. **Clean mating surfaces** of seal (11), retainer (9), and rotating ring (4). Use dry cleaning solvent (E162) and clean cloths (E120). Wear gloves (E184.1). Allow solvent to dry.

**WARNING**

Wear Kevlar gloves (E187) when handling heated parts.

6. **Heat retainer (9)** to 170° to 190°F (77° to 88°C). Use an oven.
7. **Install seal (11) in retainer (9)**. Use a phenolic drift and mallet.

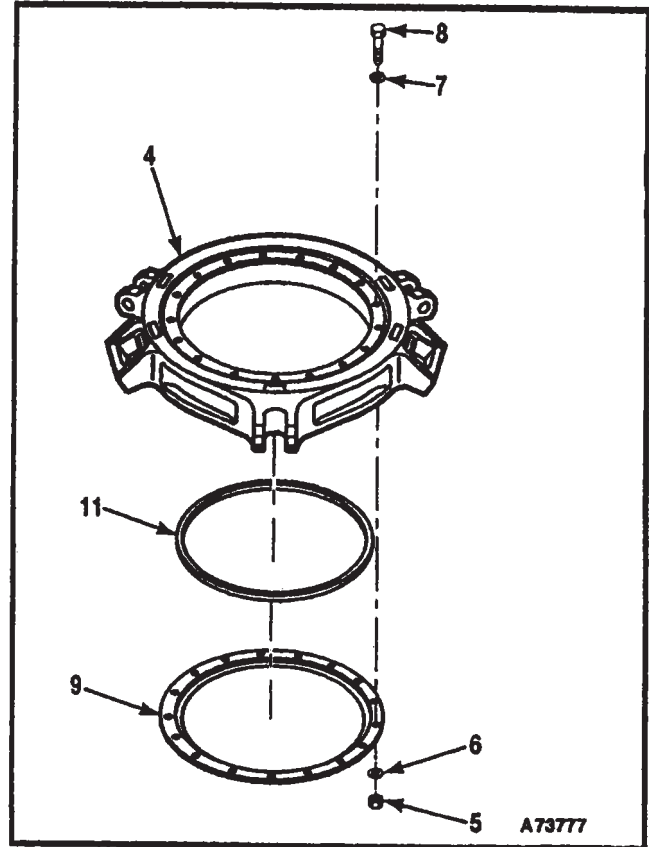

**NOTE**

If seal distorts while tightening, straighten the seal by tapping down using a phenolic drift and hammer.

8. **Install bolts (8)**, and washers (7). Install washers (6) and nuts (5). Torque nuts evenly to 350-380 inch-pounds above friction torque. Remove nuts (5) and washers (6).

**NOTE**

Do not re-use any nut (5) after it has been installed once.

9. **Install retainer (9)**, with seal (11), over bolts (8). Install washers (6) and nuts (5).
10. **Tighten nuts (5) evenly to 350-380 inch-pounds** above friction torque.


**GO TO NEXT PAGE**

11. Coat lip of seal (11) and running surface (12) on stationary ring (3) with grease (E190).
12. Install rotating ring assembly (4) on stationary ring (3). Use a mallet, if needed.


**WARNING**

**Wear Kevlar gloves (E187) when handling heated parts.**

13. Heat retainer (12) to 170° to 190°F (77° to 88°C). Use an oven.

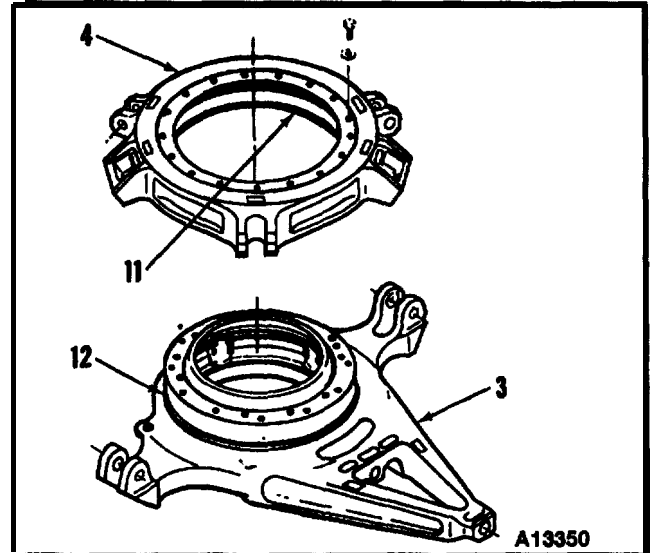

14. install seal (1A) in retainer (1C). Use a phenolic drift and mallet.
15. Install ring (1B) on stationary ring.
16. Install retainer (1C) with seal (1A) on stationary ring.
17. **Install upper retainer (2) and seal (1) on stationary ring (3)** (Task 5-125.1).

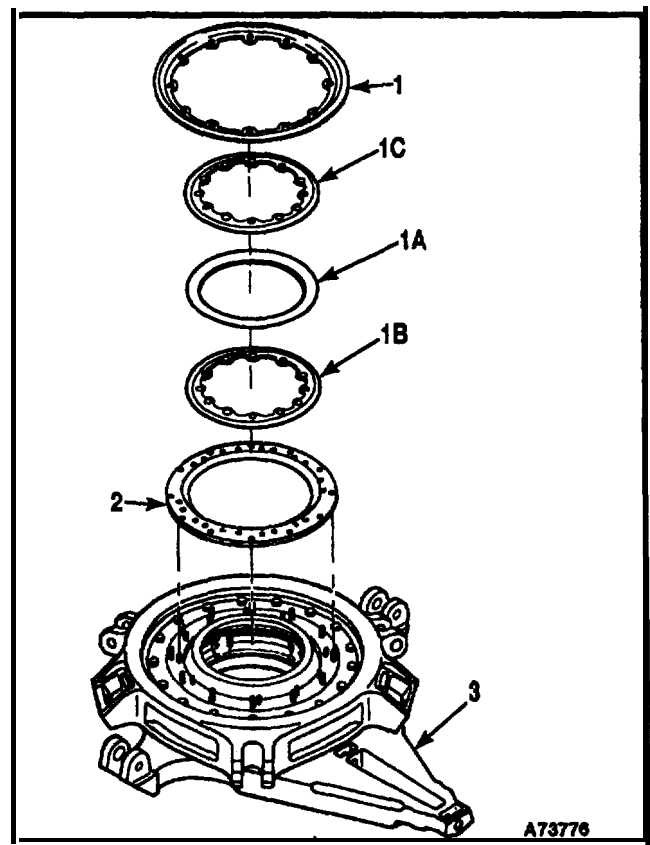


**CAUTION**

A bolt that is too long can damage the stationary ring.

18. Check that clearance between end of bolt (8) and stationary ring (3) is at least 0.180 inch. Check that clearance between seals (1 and 10) is 0.005 to 0.070 inch.
19. Lubricate bearing (13) through fitting (14). Use grease (E190). Turn rotating ring (4) while greasing until a fillet of grease appears between grease seals (1 and 10).

FOLLOW-ON MAINTENANCE:  
None

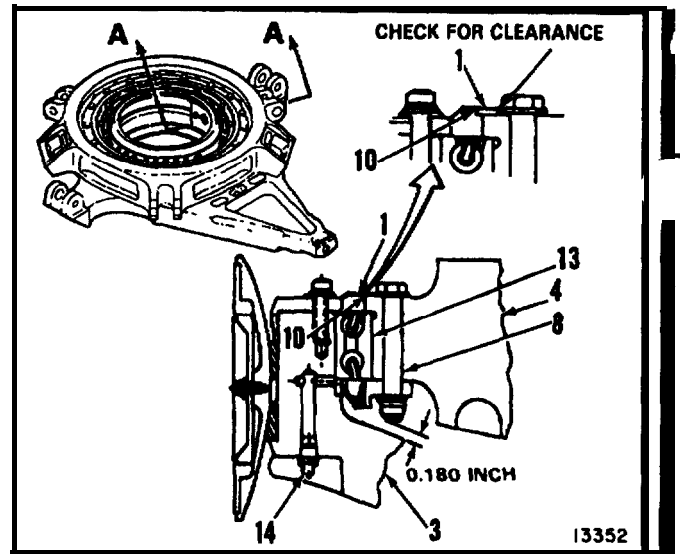

## 5-126.2 INSTALL SWASHPLATE ROTATING RING INTERRUPTER BRACKETS (AVIM)

5-126.2

### INITIAL SETUP

#### **Applicable Configurations:**

All

#### **Tools:**

Powertrain Repairer's Tool Kit,  
NSN 5180-00-003-5267  
Scissors  
Trip Balance, NSN 6670-00-401-7195

#### **Materials:**

Abrasive Paper (E6), (E7).  
Methyl-Ethyl-Ketone (E244)  
Scrim Cloth (E326)  
Adhesive (E43)  
Cloth (E120)  
Wood Spatula (E424)  
Gloves (E186)  
Polyethylene Cup (E157)  
Acetone (E20)  
Temperature Indicating Strips (E413)  
Grease (E190)

#### **Personnel Required:**

Aircraft Powertrain Repairer  
Inspector

#### **References:**

TM 55-1520-240-23P

#### **Equipment Condition:**

Off Helicopter Task


#### **General Safety Instructions:**

#### **WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

#### **WARNING**

Adhesive (E43) is toxic. it can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

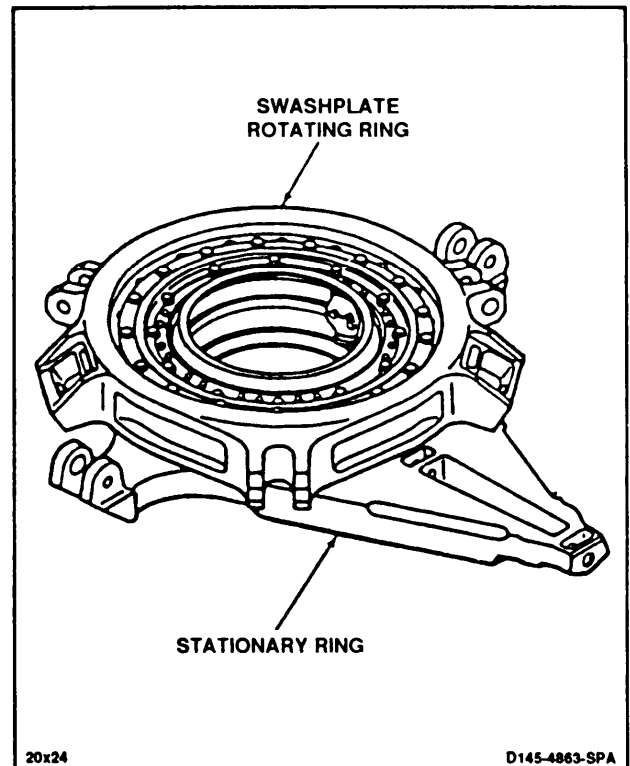

#### **WARNING**

Methyl-ethyl-ketone (E244) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated areas, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**GO TO NEXT PAGE**

## 5-126.2 INSTALL SWASHPLATE ROTATING RING INTERRUPTER BRACKETS (AVIM) (Continued)

5-126.2

1. Carefully **lift rotating ring assembly (4)** from stationary ring (3). Use a mallet to separate the rings, if needed.
2. Mark **bracket locations** on the bottom of rotating ring (4).

### NOTE

Three brackets are installed on forward swashplate only. One bracket has two interrupters.

3. Sand rotating ring surface lightly to **remove adhesive**. Use abrasive paper (E7).
4. Sand bracket surface lightly to **remove adhesive**. Use abrasive paper (E6).
5. **Wipe sanded area** with cloth (E120) damp with acetone (E20). Wipe dry with a clean cloth before acetone evaporates. Wear gloves (E186).
6. **Cut scrim cloth (E326)** to size of brackets.
7. **Mix a small amount of adhesive (E43)** as follows:

### WARNING



**Adhesive (E43) is toxic. It can irritate skin and cause burns. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.**

- a. If adhesive (E43) is used, mix 5 parts of white base and 7 parts of gray hardener. Use trip balance. Stir in polyethylene cup (E157) with wood spatula (E424) until color is uniform. Use gloves (E186).

### NOTE

Working life of adhesive (E43) is about 30 minutes.

8. **Apply** even coat of **adhesive (E42)** to mating surfaces of brackets (6) and rotating ring (4). Wear gloves (E186).
9. **Press scrim cloth (E326) (5) into adhesive** on rotating ring by hand.
10. **Apply** even coat of **adhesive over scrim cloth (E326) (5)**. Do not allow bubbles or lumps to form. Wear gloves (E186).

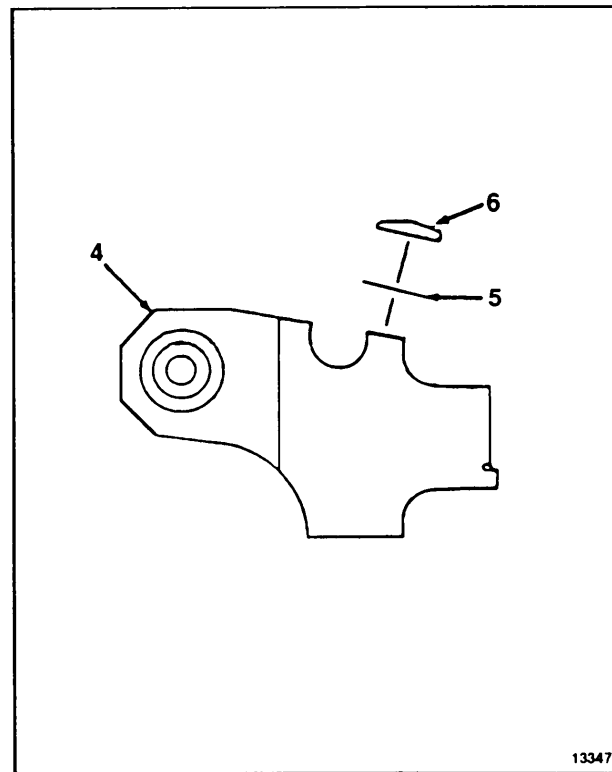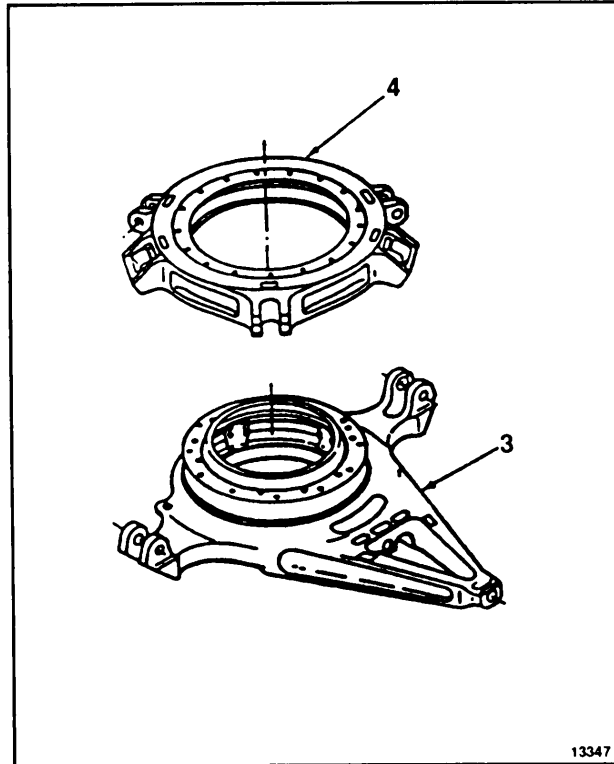

**GO TO NEXT PAGE**

## 5-126.2 INSTALL SWASHPLATE ROTATING RING INTERRUPTER BRACKETS (AVIM) (Continued)

5-126.2

11. Install brackets (6) on rotating ring (4) by hand.
12. Check that clearance between end of brackets (6) and rotating ring (4) is 0.150.
13. Apply pressure to seat each bracket and squeeze out excess adhesive. Make sure brackets do not move.
14. Wipe excess adhesive from brackets. Use cloth (E120) damp with methyl-ethyl-ketone (E244). Wear gloves (E186).
15. Cure adhesive at 150°F to 160°F (66°C to 71°C) for 2 hours. Use heat lamp. Monitor temperature. Use temperature indicating strips (E413).

### CAUTION

Curing time increases rapidly as temperature decreases. Adhesive (E43 or E47.1) will not cure below 60°F (15°C). Do not count as cure time any period when temperature is below 70°F (21°C).



### NOTE

If heat lamp is not available, a serviceable cure can be achieved at 70°F to 80°F (21°C to 27°C) in 24 hours.

16. Coat lip of seal (11) and running surface (12) on stationary ring (3) with grease (E190).
17. Install rotating ring assembly (4) on stationary ring (3). Use a mallet, if needed.

### INSPECT

FOLLOW-ON MAINTENANCE:  
None

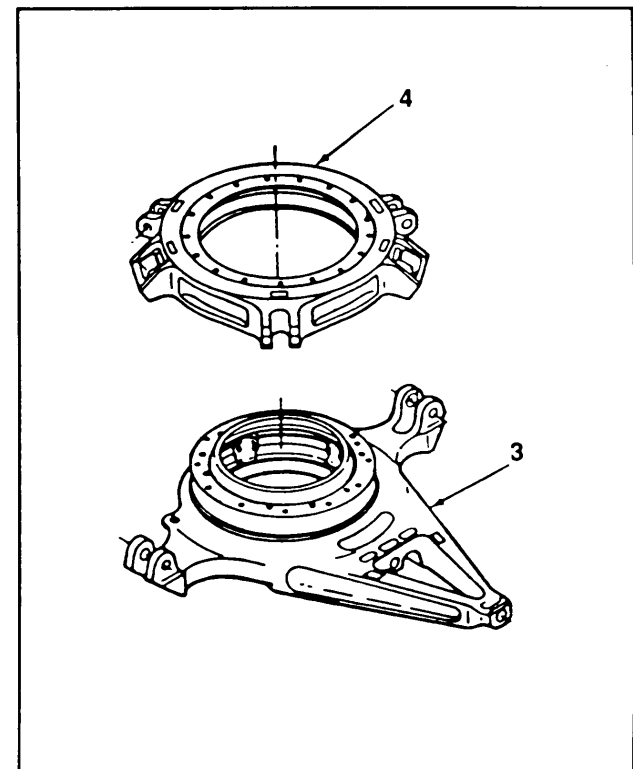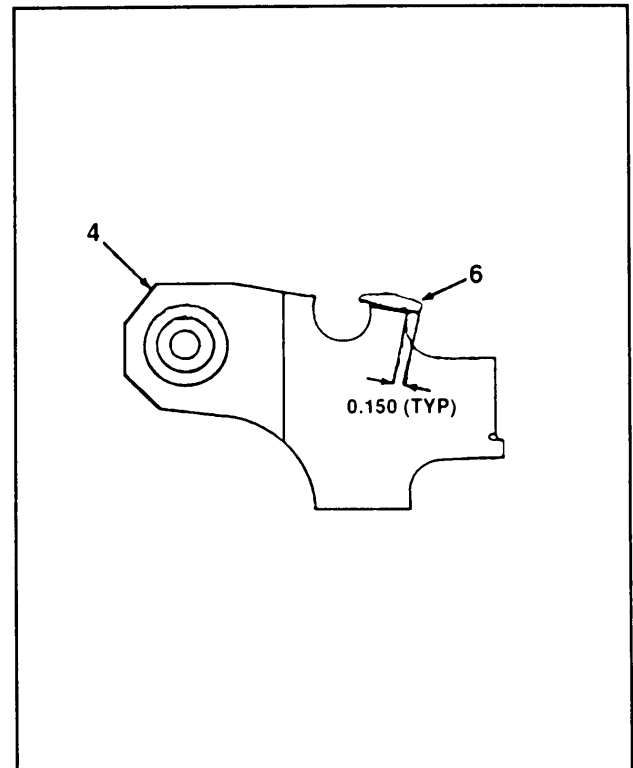

END OF TASK

Change 27

5-450.7/(5-450.8 blank)





INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114

**Materials:**

Abrasive Paper (E10)  
Alodine (E65)  
Wash Primer (E302)  
Epoxy Primer (E292.1)  
Gloves (E184.1)

**Personnel Required:**

Aircraft Powertrain Repairer (2)  
Inspector

**References:**

TM 55-1520-240-23P


**Equipment Condition:**

Off Helicopter Task

**General Safety Instructions:**

**WARNING**

Wash primer (E302) and epoxy primer (E292.1) are flammable and toxic. They can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

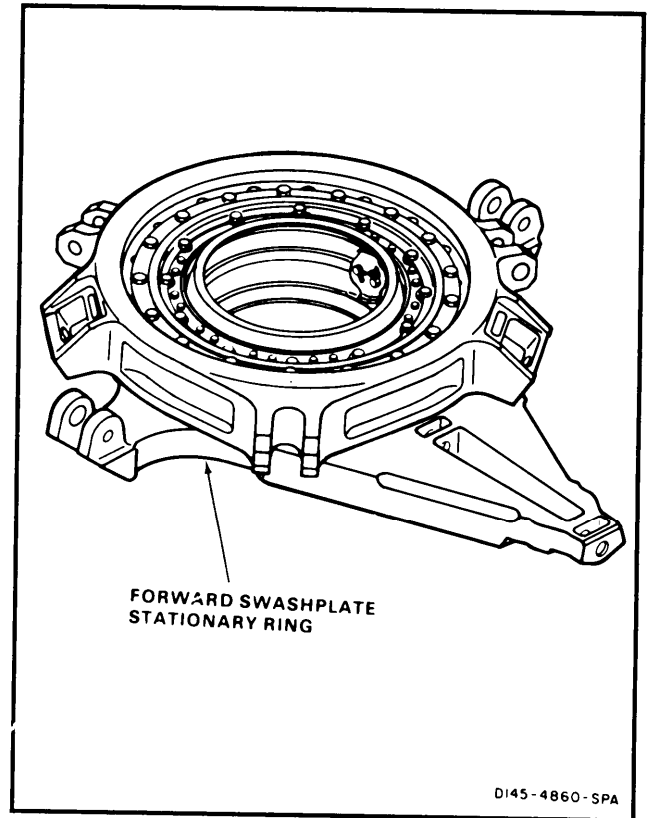

GO TO NEXT PAGE

1. Blend repair damage on stationary ring (1) 0.005 inch to 0.020 inch in depth. Blend smooth with minimum blend radius of 1-inch. Use abrasive paper (E10). Rework shall not exceed 0.020 inch in depth.

**INSPECT**

**WARNING**

Alodine (E65) is an oxidizer. Discard cloths which contain this material in separate container. If discarded with cloths contaminated with acetone, reek, or other organic solvents, combustion can result. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.



2. Apply alodine (E65) to repaired area of ring (1). Wear gloves (E184.1).

3. Apply one coat of wash primer (E302) to repaired area of ring (1). Wear gloves (184.1). Allow primer to dry for 30 minutes.

4. Apply one coat of epoxy primer (E292.1) to repaired area of ring (1). Wear gloves (184.1). Allow primer to dry for 1 hour.

**FOLLOW-ON MAINTENANCE:**

None

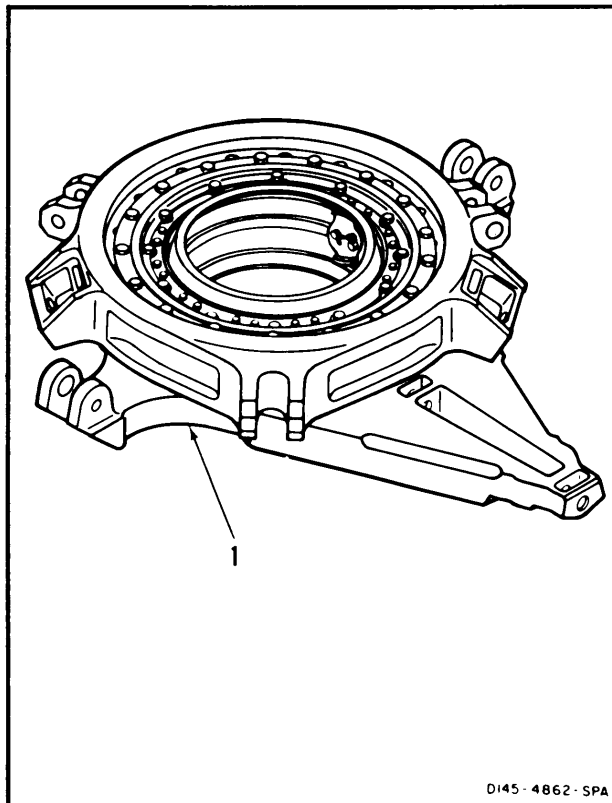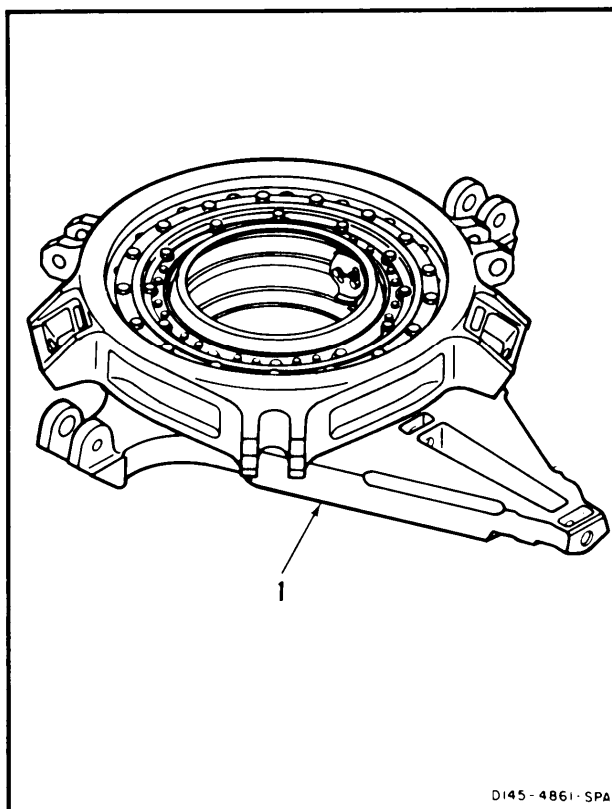

**END OF TASK**

5-128 INSPECT AFT SWASHPLATE STATIONARY RING

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Technical Inspection Tool Kit,  
NSN 5180-00-323-5114

**Materials:**


None

**Personnel Required:**

- Inspector

**Equipment Condition:**


Off Helicopter Task

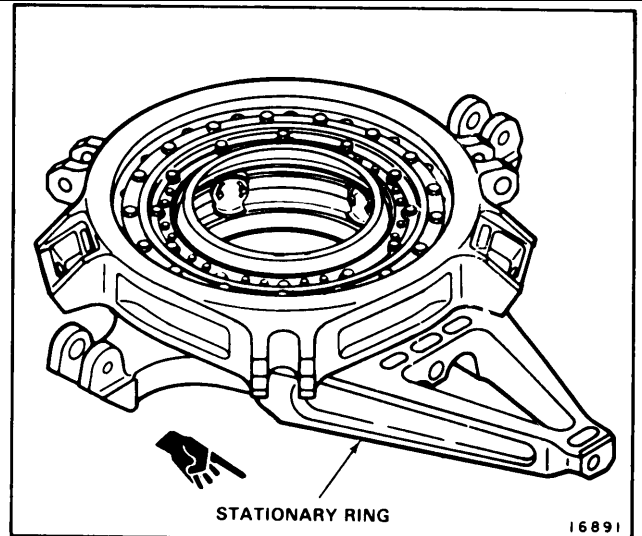

1. Check for nicks or scratches in critical areas (1) of stationary ring (2). Damage less than 0.005 inch in depth shall be accepted without rework. Blend repair damage 0.005 inch to 0.040 inch in depth without exceeding 10 percent of material thickness (Task 5-129).
2. Check for nicks or scratches in all other surfaces of stationary ring (2). Damage less than 0.015 inch in depth shall be accepted without rework. Blend repair damage, 0.015 inch to 0.040 inch in depth without exceeding 10 percent of material thickness (Task 5-129).

FOLLOW-ON MAINTENANCE:

None

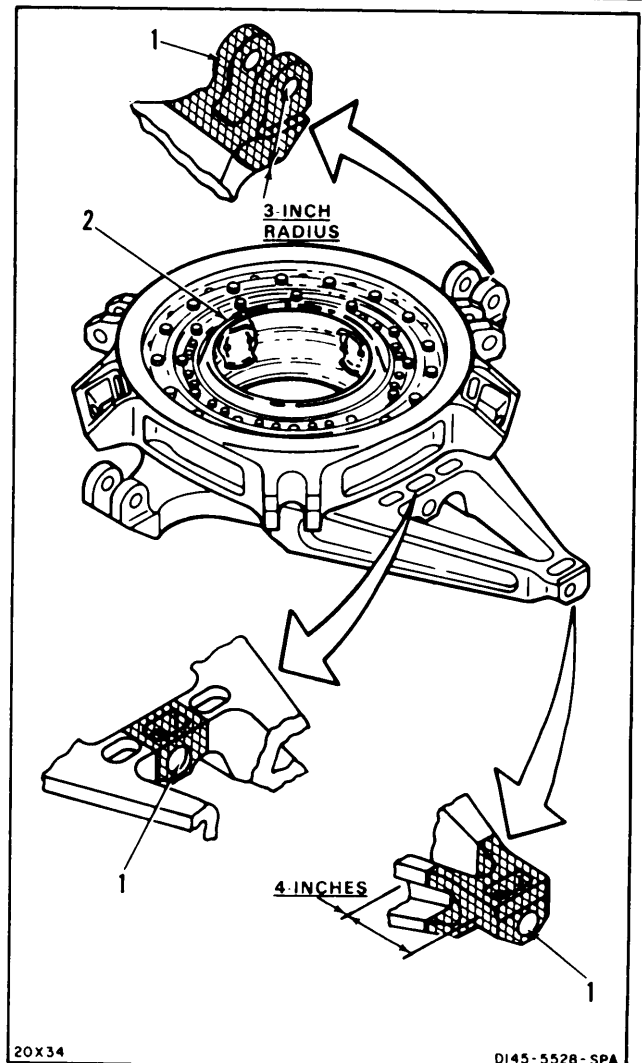

END OF TASK

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Powertrain Repairer Tool Kit,  
NSN 5180-00-003-5267

**Materials:**

Abrasive Paper (E10)  
Wash Primer (E302)  
Epoxy Primer (E292.1)  
Gloves (184.1)

**Personnel Required:**

Aircraft Powertrain Repairer (2)  
Inspector

**References:**

TM 55-1520-240-23P

**Equipment Condition:**

Off Helicopter Task

1. Blend-repair damage in critical areas (1) of stationary ring (2) 0.005 inch to 0.040 inch in depth. Use abrasive paper (E10). Make sure depth of repair does not exceed 10 percent of material thickness.

**INSPECT**



2. Blend-repair damage in all other surfaces of stationary ring (2) 0.015 inch to 0.040 inch in depth without exceeding 10 percent of material thickness. Use abrasive paper (E10).

**INSPECT**

**WARNING**

Wash primer (E302) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

3. Apply one coat of wash primer (E302) to repaired areas of stationary ring (2). Wear gloves (E184.1). Allow primer to dry for 30 minutes.

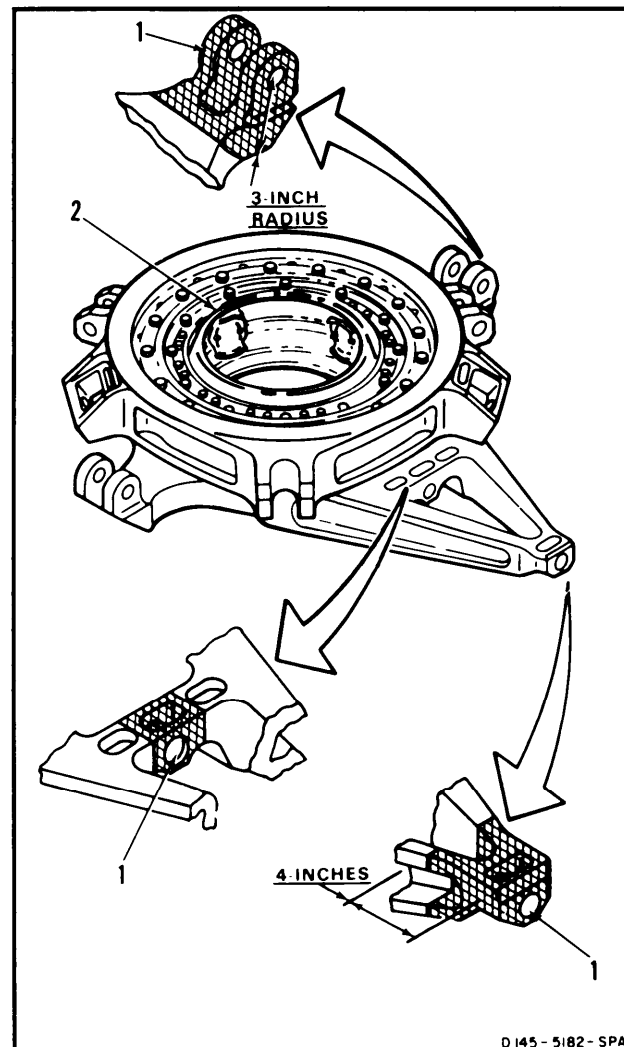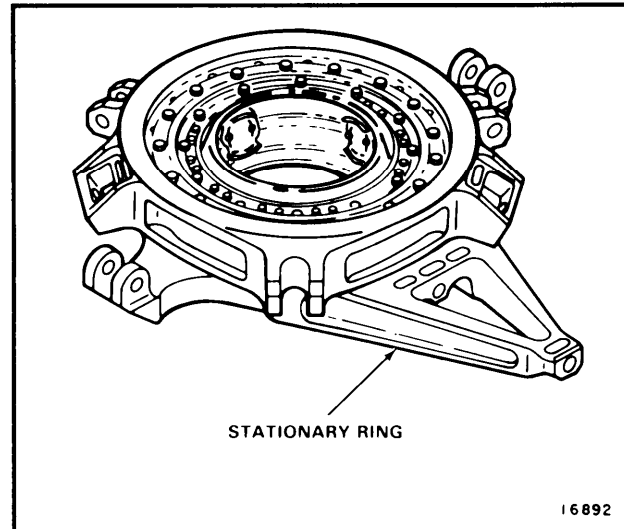

**5-129 REPAIR AFT SWASHPLATE STATIONARY RING (AVIM)**  
(Continued)

5-129


**WARNING**

Epoxy primer (E292.1) is flammable and toxic. It can irritate skin and cause burns. Use only with adequate ventilation, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

4. Apply three coats of epoxy primer (E292.1) to repaired areas of stationary ring (2). Wear gloves (184.1). Allow primer to dry for 1 hour after each coat.

FOLLOW-ON MAINTENANCE:

None

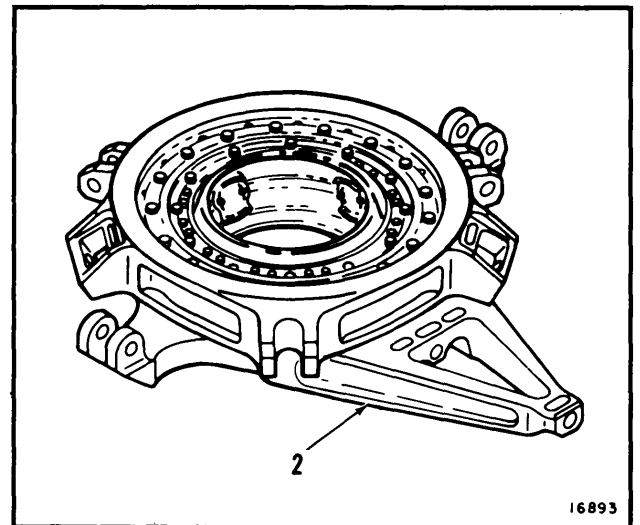

END OF TASK

**5-130 PREPARE SWASHPLATE FOR STORAGE AND SHIPMENT**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692
- Rotary-Wing Controls Sling (T14)
- Hoist
- Container (T107) or Wood Box

**Materials:**


- Corrosion Preventive Compound (E153)
- Barrier Material (E80)
- Cushioning Material (E241)
- Tape (E395)

**Personnel Required:**

- Medium Helicopter Repairer

**Equipment Condition:**

- Off Helicopter Task
- Swashplate Cleaned (Task 5-118)
- Swashplate Lubricated (Task 1-90)

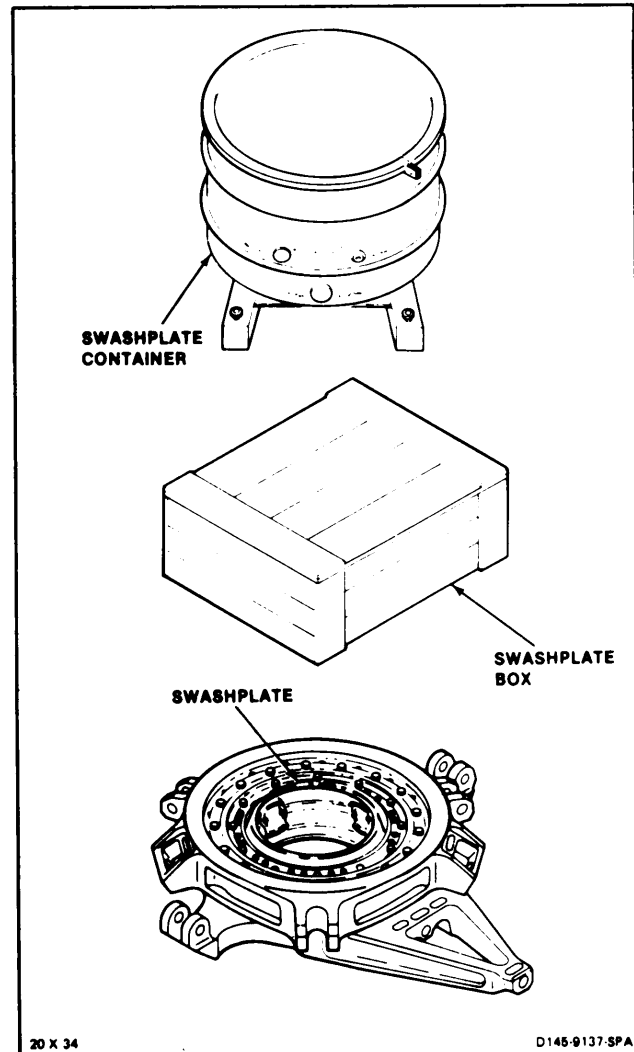

**GO TO NEXT PAGE**

**5-130 PREPARE SWASHPLATE FOR STORAGE AND SHIPMENT (Continued)**

5-130

**WARNING**

Corrosion preventive compound (E153) is flammable and toxic. Avoid inhaling. Use only with adequate ventilation. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.


**CAUTION**

Do not allow corrosion preventive compound (E153) to contact dry-type bearings. Bearings can be damaged.

**NOTE**

Procedure is same to prepare forward or aft swashplate for storage and shipment.

1. Apply corrosion preventive compound (E153) to unpainted surfaces of swashplate lugs (1).

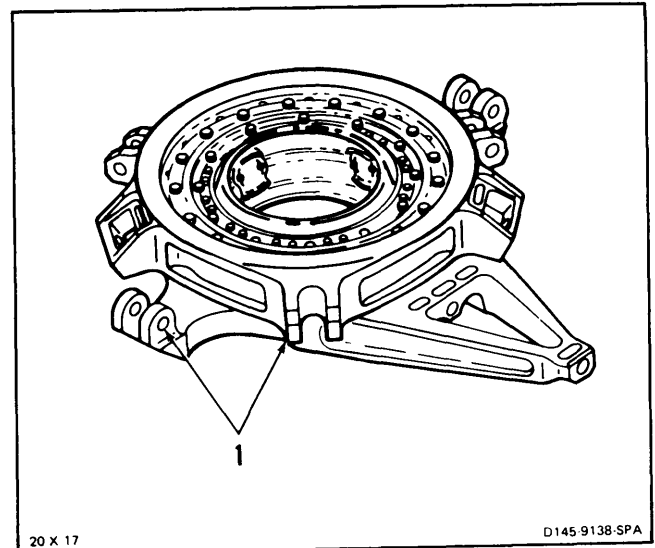
**GO TO NEXT PAGE**



**5-130 PREPARE SWASHPLATE FOR STORAGE AND SHIPMENT (Continued)**

***PACK SWASHPLATE IN CONTAINER (T107)***

2. Remove nut (2), washer (3), bolt (4), and clamp ring (5) from container (T107) (6).
3. **Remove cover (7).**
4. Remove cushion (8).
5. **Place barrier material (E80) (9) on lower cushion (10).**

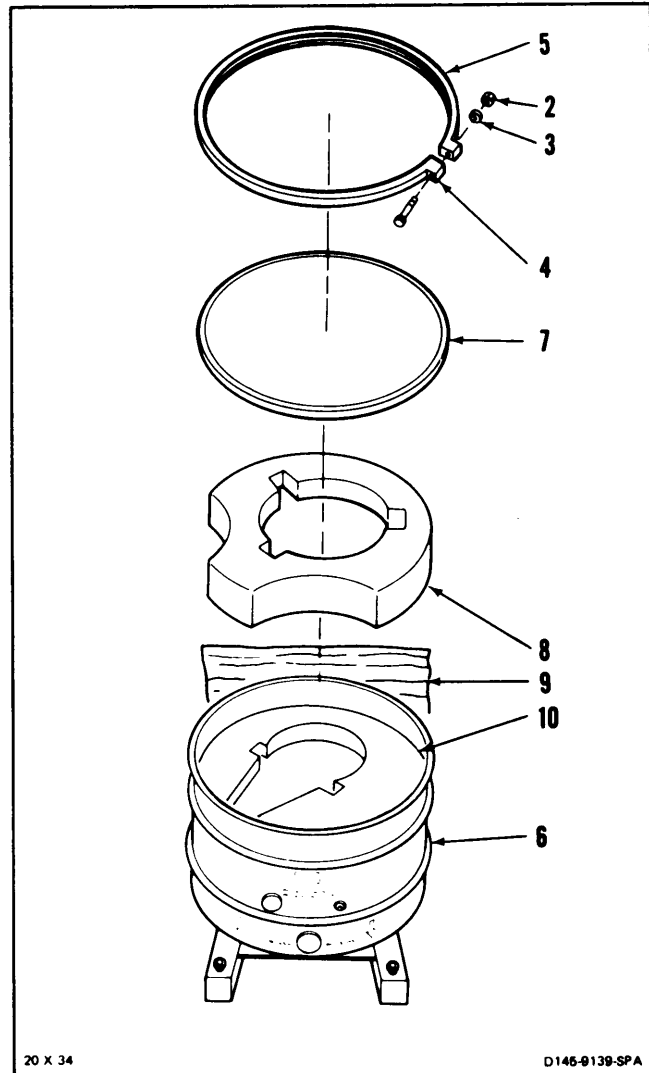

**GO TO NEXT PAGE**

## 5-130 PREPARE SWASHPLATE FOR STORAGE AND SHIPMENT (Continued)


5-130

6. Install sling (T14) (11) on swashplate (12) as follows:
  - a. Position lifting eye (13) over swashplate (12).
  - b. Remove three quick-release pins (14) from links (15).
  - c. Position three links (15) outside of swashplate lugs (1).
  - d. Install three quick-release pins (14).
7. Attach hoist (16) to sling (T14) (11).

### **WARNING**

Swashplate is heavy and can injure personnel if it drops. Swashplate must be supported by hoist and moved carefully to prevent injury.

8. Raise swashplate (12), align and lower into container (T107) (6).
9. Remove pins (14). Remove sling (T14) (11).

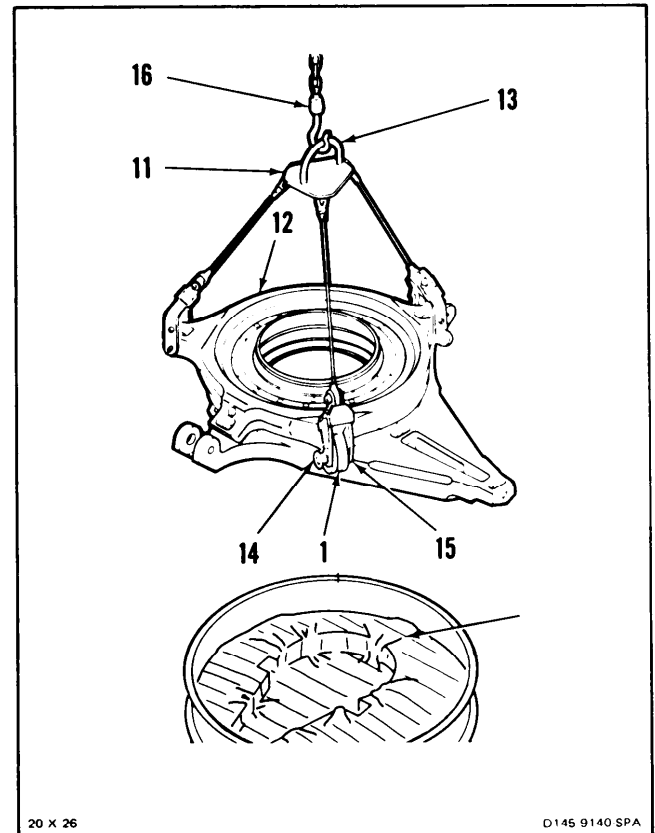


20 x 26

D145 9140 SPA

**5-130 PREPARE SWASHPLATE FOR STORAGE AND SHIPMENT (Continued)**

10. Place barrier material (E80) (9) over swashplate (12).
11. Position upper cushion (8).
12. Position cover (7) on container (T107) (6). Install ring (5). Use bolt (4), washer (3), and nut (2).
13. Place swashplate records in receptacle (17).

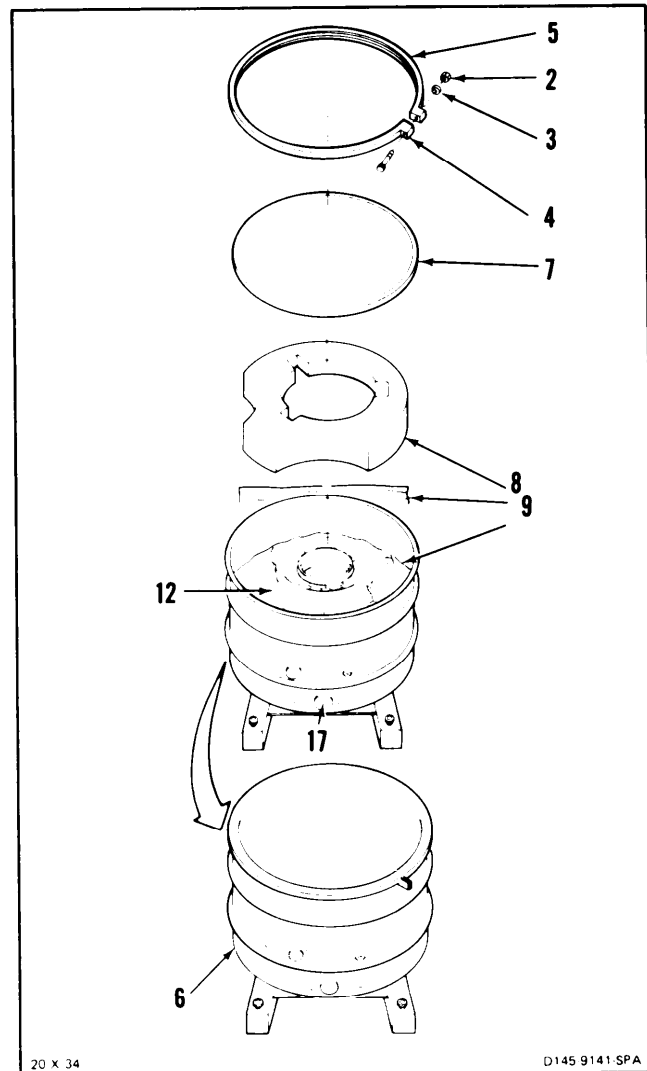

20 x 34

D145 9141 SPA

**GO TO NEXT PAGE**

## 5-130 PREPARE SWASHPLATE FOR STORAGE AND SHIPMENT (Continued)

5-130

13.1. Pressurize container (6) as follows:

- a. Remove plug (17.1) from container. Connect air test line (17.2) to container.

**CAUTION**


Low pressure air supply must be used. Exceeding test pressure can damage container.

- b. Pressurize container (6) to 3 psi max. Check container for leaks. Container must hold 3 psi for 1 hour.

**WARNING**

Be careful when releasing air under pressure. Personal injury can result. Wear goggles.

- c. Push pressure relief valve (17.3) until pressure in container is 0 psi.
- d. Disconnect air line (17.2) from container. Install plug (17.1).

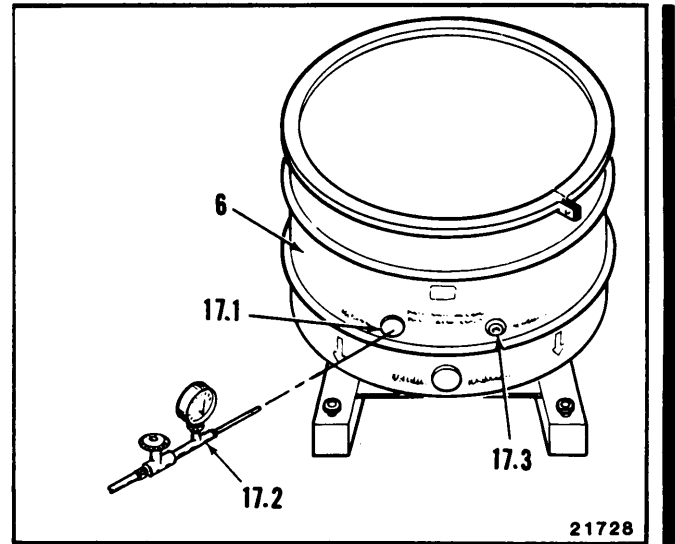

GO TO NEXT PAGE



## 5-130 PREPARE SWASHPLATE FOR STORAGE AND SHIPMENT (Continued)

5-130


### PACK SWASHPLATE IN WOOD BOX

14. If container (T107) (6) is not available, use wood box 32 x 30 x 12 inches (18).
15. Remove cover (19).
16. Place layer of cushioning material (E241) (20) in box (18).
17. Place barrier material (E80) (21) over cushioning material (E241) (20).
18. Place swashplate (12) in box (18) (steps 6 through 9).
19. Pack cushioning material (E241) (22) in and around dry bearing area of swashplate (12).
20. Cover bearing area of swashplate (12). Use barrier material (E80) (23).

**CAUTION**

Do not apply tape (E395) to dry bearings. Surface of bearings can be damaged.

21. Apply tape (E395) (24) to install barrier material (E80) (23).
22. Cover swashplate (12). Use cushioning material (E241) (25).
23. Cover cushioning material (E241) (25). Use barrier material (E80) (26).

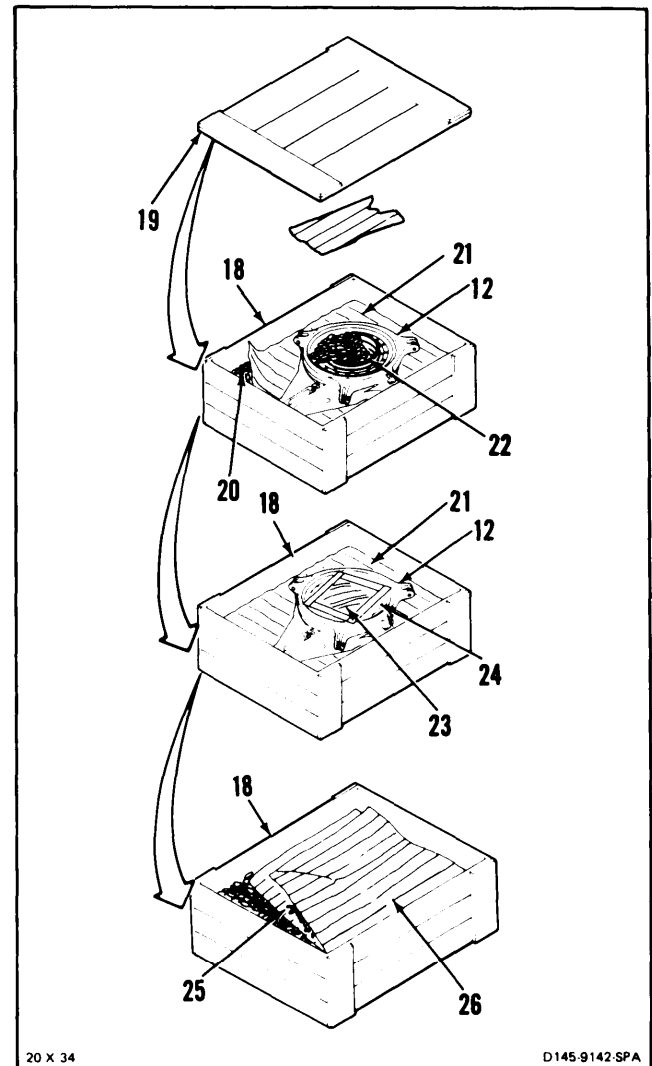


20 x 34

D145-9142-SPA


**GO TO NEXT PAGE**

**5-130 PREPARE SWASHPLATE FOR STORAGE AND SHIPMENT (Continued)**

- 24. Fold layers of barrier material (E80) (21 and 26) together, and seal with tape (E395) (27).
- 25. Install cover (19) on box (18).

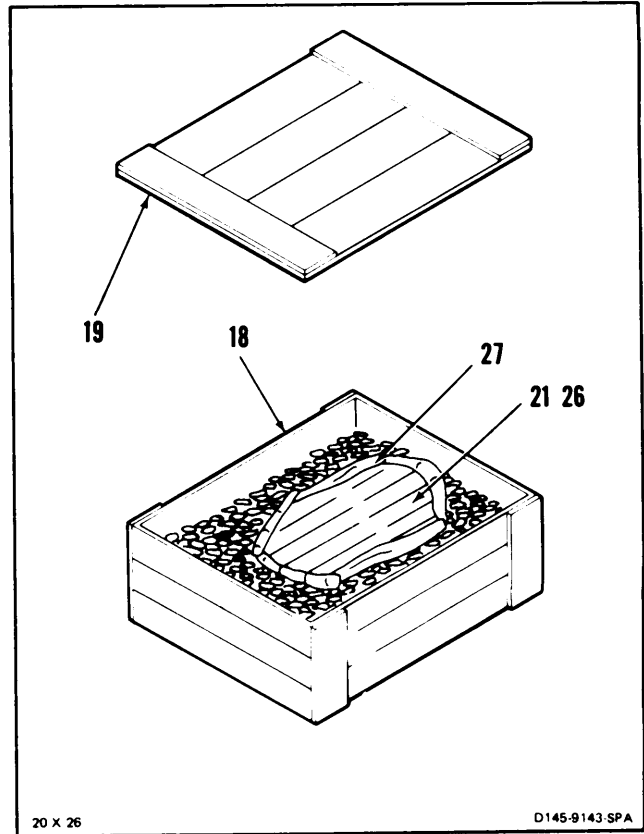

FOLLOW-ON MAINTENANCE:  
None

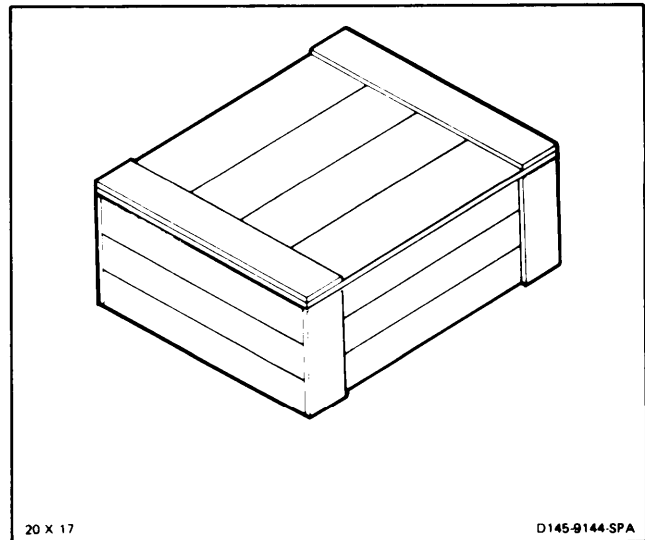

**END OF TASK**

**5-131 PLACE SWASHPLATE IN SERVICE****5-131**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Rotary-Wing Controls Sling (T14)  
Hoist  
Hand Lubricating Gun

**Materials:**


Cloth (E120)  
Grease (E189)

**Personnel Required:**

67U10 Medium Helicopter Repairer  
67U20 Medium Helicopter Repairer


**Equipment Condition:**

Off Helicopter Task

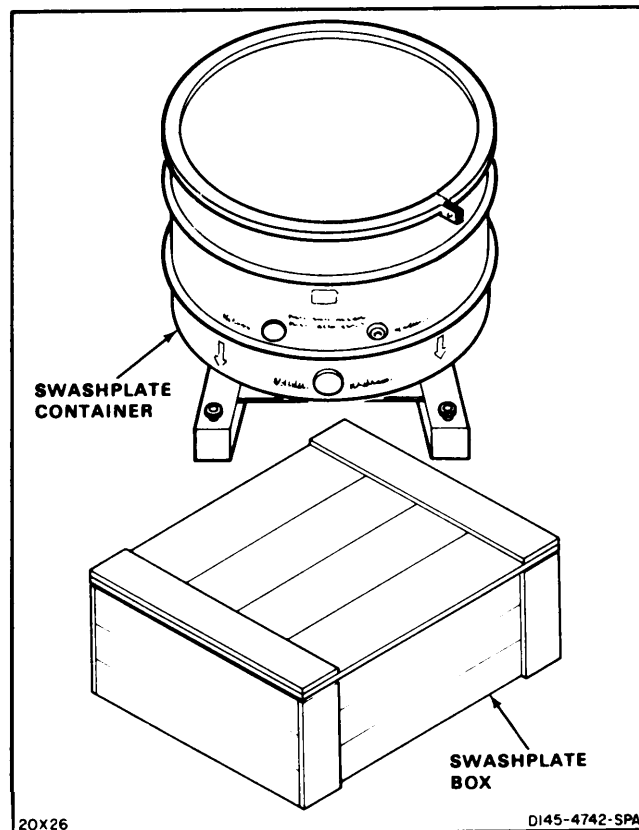**NOTE**


Procedure is same to place forward or aft swashplate in service.

1. If swashplate (1) is packed in shipping container (T107) (2), do the following:
  - a. Press relief valve plunger (3).
  - b. Remove nut (4), washer (5), bolt (6), and clamp ring (7).
  - c. Remove cover (8).

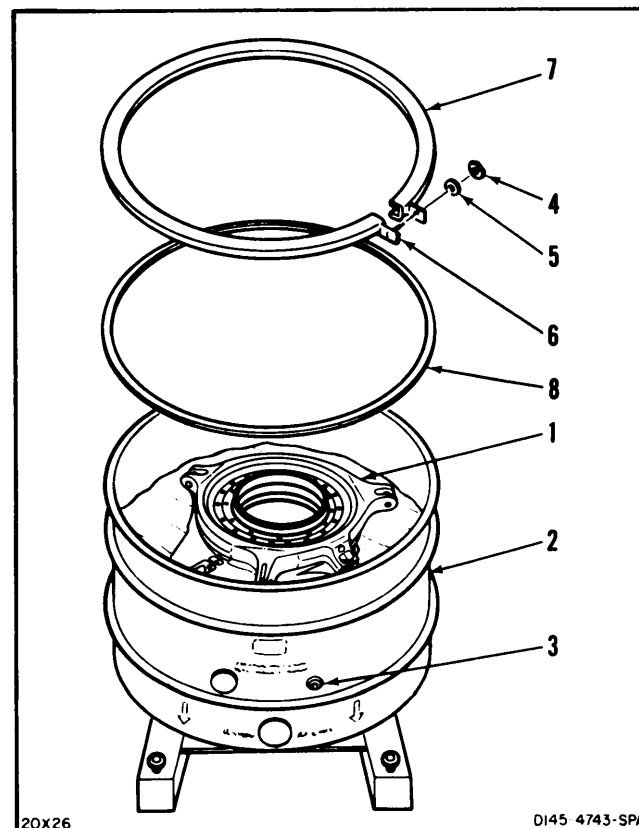**GO TO NEXT PAGE****5-463**




- d. Remove top cushion (9) and unwrap barrier material (10).
- e. Remove swashplate records from receptacle (11).

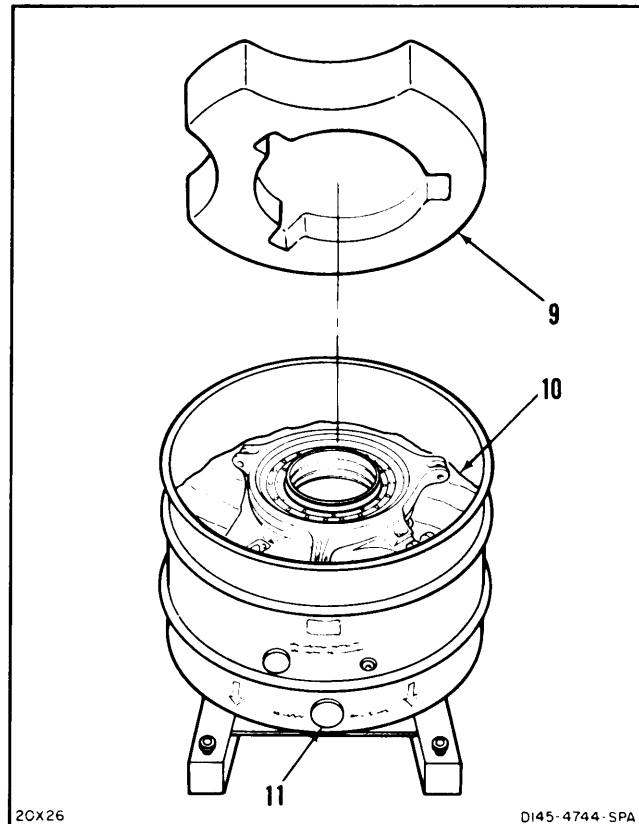

2. If swashplate (1) is packed in box (12), do the following:

- a. Remove cover (13) from box (12).
- b. Remove cushioning material (14) and unwrap barrier material (15).

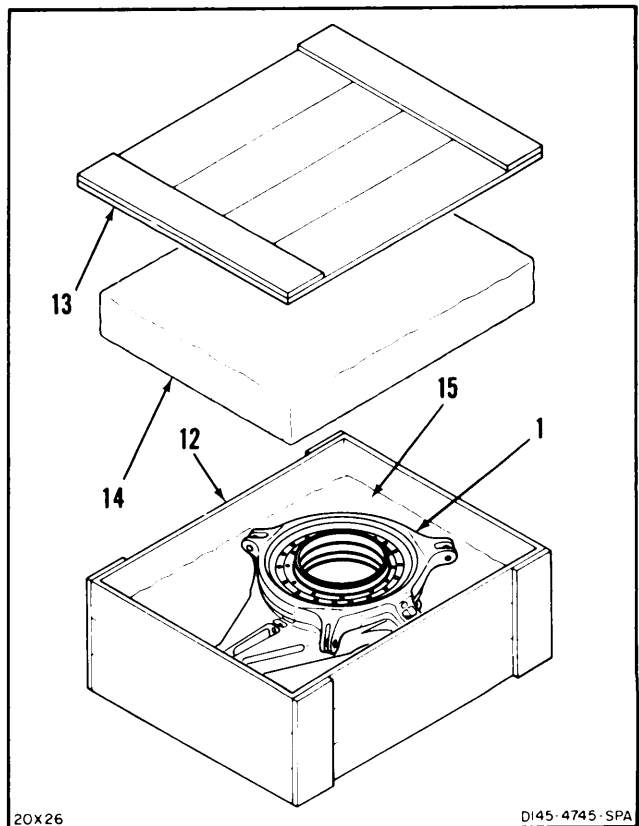

**GO TO NEXT PAGE**

## 5-131 PLACE SWASHPLATE IN SERVICE (Continued)


5-131

3. Install sling (T14) (16) on swashplate (1) as follows:
  - a. Position lifting eye (17) over swashplate (1).
  - b. Remove three-quick release pins (18) from links (19).
  - c. Position three links (19) outside of swashplate lugs (20).
  - d. Install three quick-release pins (18).
4. Attach hoist (21) to sling (T14) (16).

**WARNING**

Swashplate is heavy and can injure personnel if it drops. Swashplate must be supported by hoist and moved carefully to prevent injury.


5. Lift and support swashplate (1).

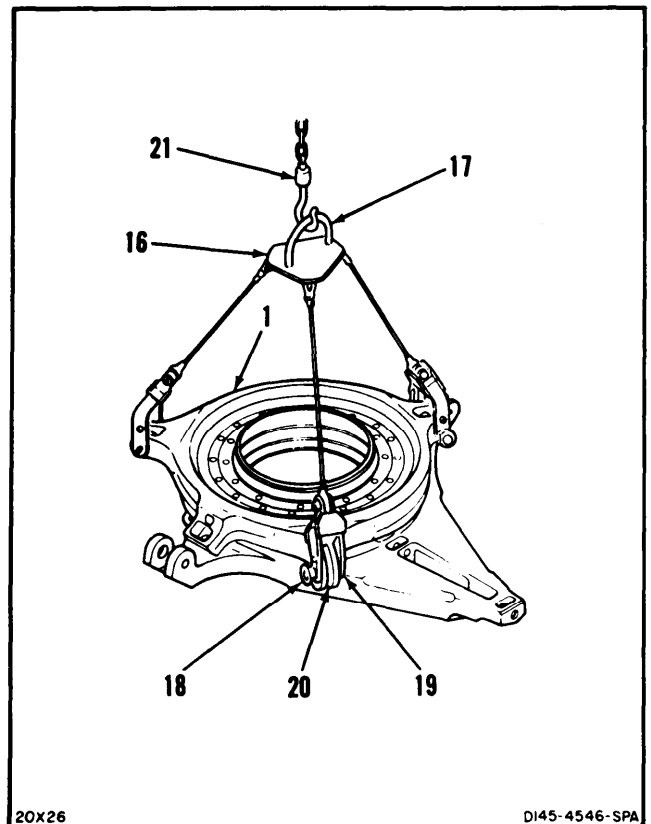

6. Fill swashplate (1) with grease (E190) while turning rotating ring (22) one full circle. Fill until grease appears all around stationary grease seal (23). Use hand lubricating gun.
7. Wipe off excess grease around stationary grease seal (23). Use cloth (E120).

## FOLLOW-ON MAINTENANCE:

Install swashplate (Task 5-132 or 5-133).

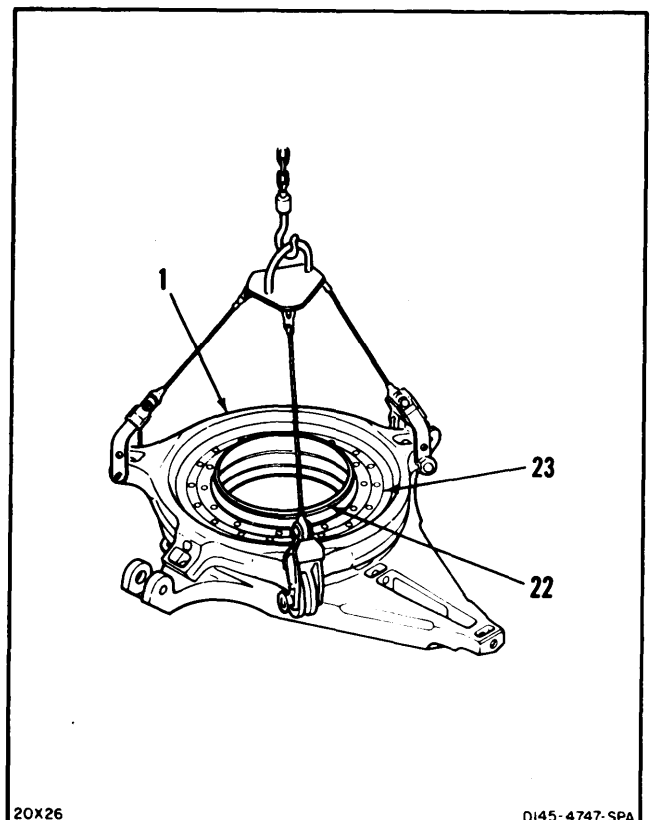

END OF TASK

5-465

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit  
 NSN 5180-00-323-4692  
 Controls Sling (T14)  
 Torque Wrench, 100 to 750 Inch-Pounds  
 Torque Wrench, 30 to 150 Inch-Pounds  
 Hoist  
 Guide Line

**Materials:**

Lockwire (E231)  
 Antiseize Compound (E75)

**Parts:**

Cotter Pins

**Personnel Required:**

Medium Helicopter Repairer (3)  
 Inspector



**References:**

TM 55-1520-240-23P  
 Task 5-114  
 Task 5-114.1  
 Task 5-115  
 Task 5-466

**NOTE**

Positive retention bolts are installed in the upper controls. They have a pawl which prevents nut or bolt removal unless the pawl is depressed (Task 1-14).

1. **Install control sling (T14) (1) on swashplate (2) as follows:**
  - a. Remove three quick-release pins (3).
  - b. Position three links (4) on lugs (5).
  - c. Install pins (3).
2. **Attach hoist chain (6) to sling (T14) (1).**
3. **Attach guide line (7) to swashplate (2).**

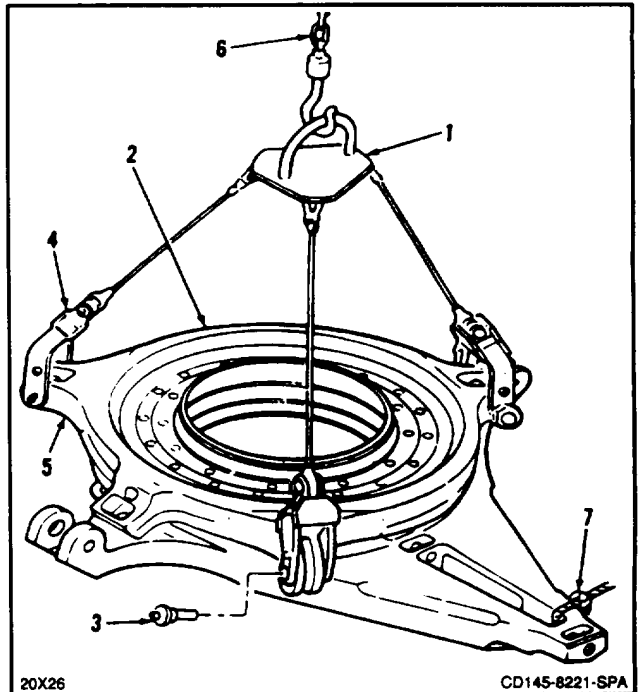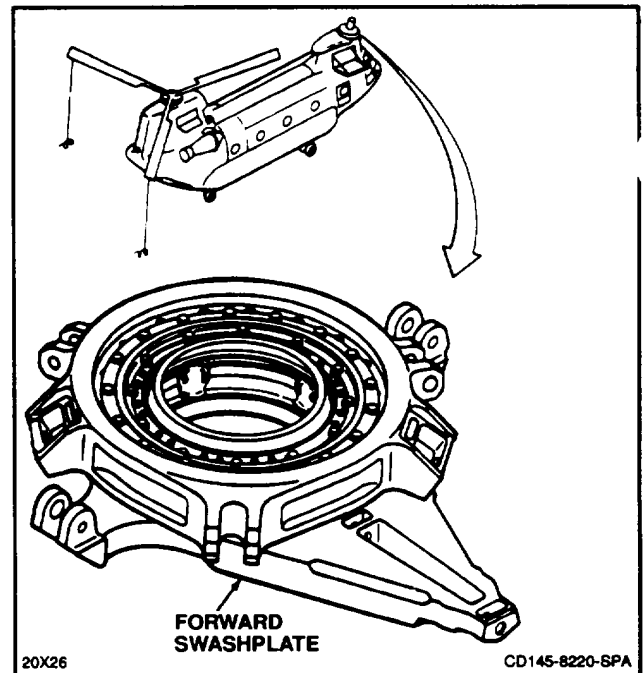



**WARNING**

Swashplate is heavy and can injure personnel if it drops. Swashplate must be supported by hoist and moved carefully to prevent injury to personnel.


**CAUTION**

If bearing hits or binds on slider shaft, bearing surfaces can be damaged.


4. **Lift swashplate (2)** and guide ball spherical bearing (8) onto slider shaft (9). Have helper lower yoke end of swashplate to clear fairing (10). **Guide lugs (11)** onto two **actuating cylinder lugs (12)**.
- 4.1. Perform ball spherical bearing friction check (Task 5-114), spherical ball/spherical ball bearing axial play check (Task 5-114.1) and swashplate bearing friction check (Task 5-115).
5. Have helper **lift actuator (13)** and link (14) and **position in swashplate stationary ring (15)**. Install two bolts (16) with heads apart. Install two washers (17) and nuts (18). **Torque nuts to 400 to 660 inch-pounds.** (Include cotter pin installation). A third washer AN960-816L may be required for cotter pin alignment.

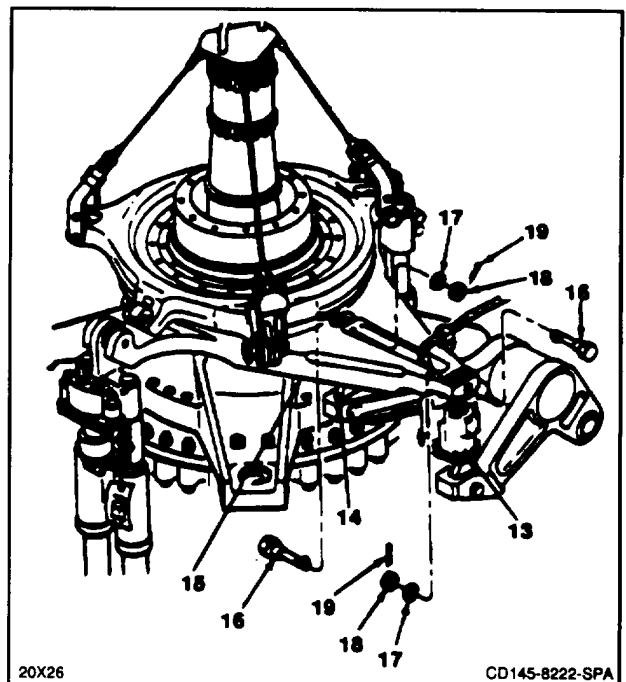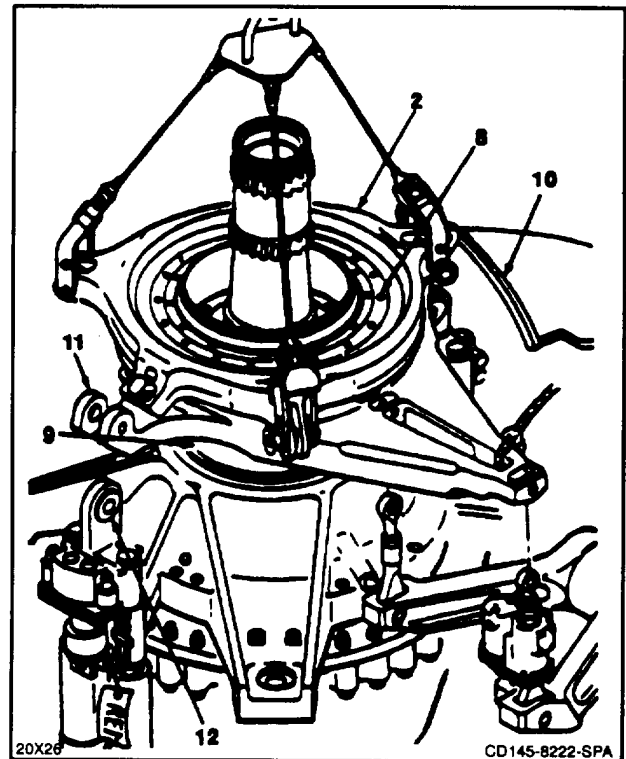

- 5.1. Coat bushing OD and bolt shank with antiseize compound (E75). Do not get antiseize compound on bolt thread.
6. Install bolts (19), washers (20), and nuts (21) in actuating cylinders (22 and 23). Torque nuts to 400 to 680 inch-pounds (including cotter pin installation). A third washer (AN960-816L) may be required for cotter pin alignment. Install cotter pins (24).
7. Connect connector (25) to magnetic phase detector (26).

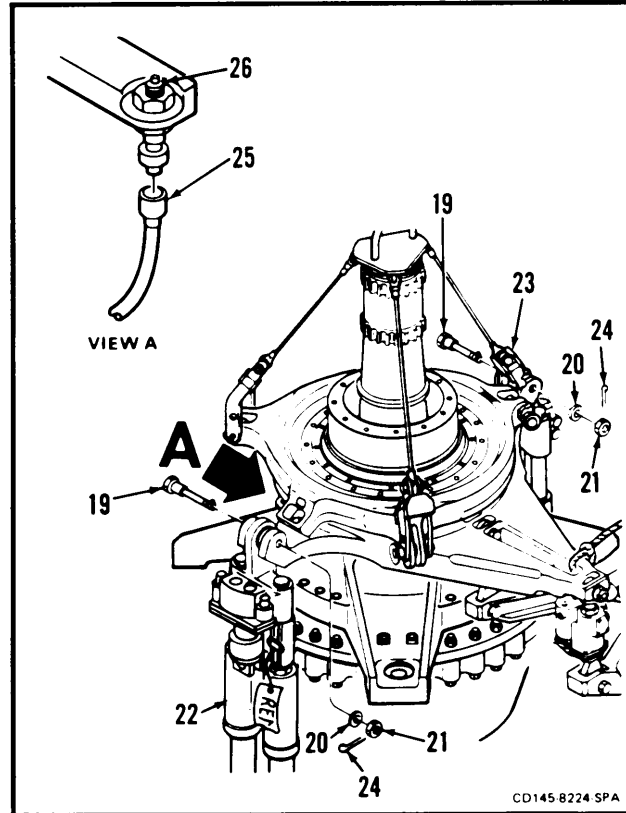


8. Lower hoist chain (6).
9. Remove guide line (7).
10. Remove three quick-release pins (3). Remove controls sling (T14) (1).

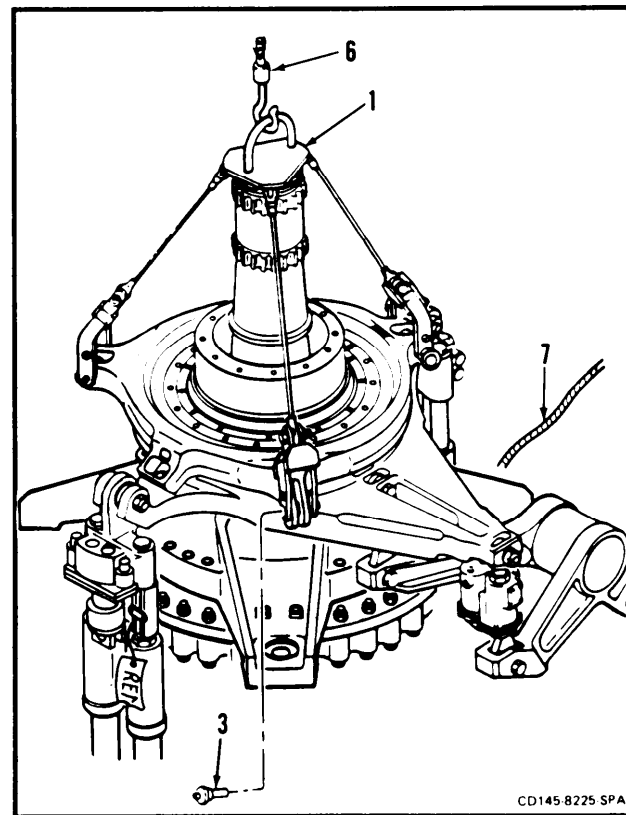

**5-132 INSTALL FORWARD SWASHPLATE (Continued)****NOTE**

Bolt holes for shaft seal are not evenly spaced. Holes must be aligned.

11. **Install two halves of shaft seal (27)** on slider shaft (8). Install 12 bolts (28) and washers (29). **Torque bolts to 60 inch-pounds.**
12. Lockwire bolts (28) on each half of seal (27) together in groups of three. Use lockwire (E231).

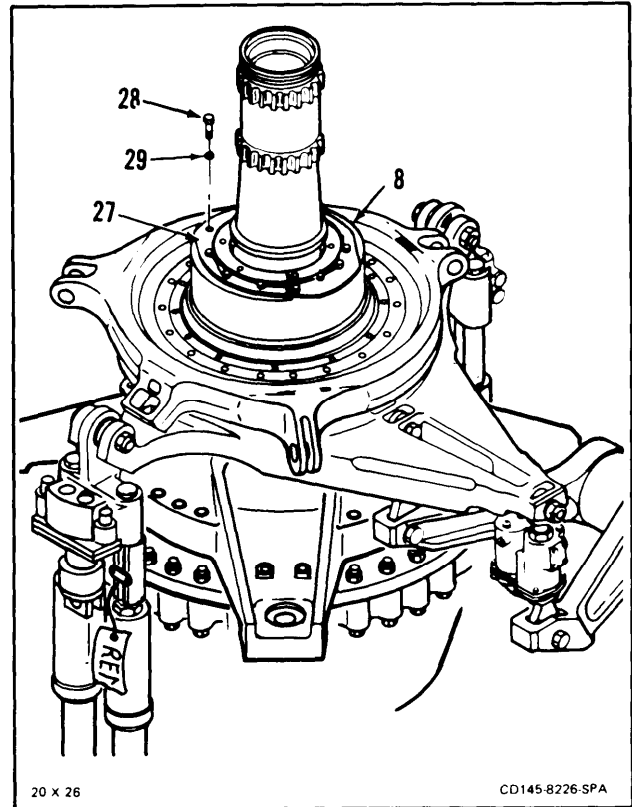**INSPECT****FOLLOW-ON MAINTENANCE:**

- Install weather protective cover, drive collar, and pitch links (Task 5-111).
- Install drive arms (Task 5-112).
- Install rotary-wing head (Task 5-9).
- Install forward rotary-wing blades (Task 5-84).
- Remove servocylinder safety blocks (Task 11-29).
- Close forward work platforms (Task 2-2).

**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Aircraft Mechanic's Tool Kit  
NSN 5180-00-323-4692
- Controls Sling (T14)
- Torque Wrench, 30 to 150 Inch-Pounds
- Torque Wrench, 100 to 750 Inch-Pounds
- Torque Wrench, 300 to 2500 Inch-Pounds

**Materials:**

- Lockwire (E231)
- Antiseize Compound (E75)
- Hoist
- Guide Line

**Parts:**



Cotter Pins

**Personnel Required:**

- Medium Helicopter Repairer (3)
- Inspector

**References:**

- TM 55-1520-240-23P
- Task 5-114
- Task 5-114.1
- Task 5-115
- Task 5-466

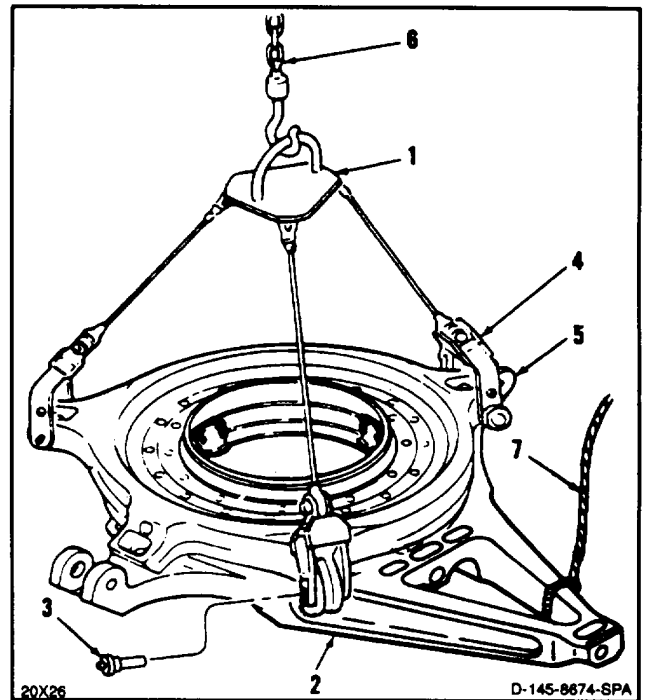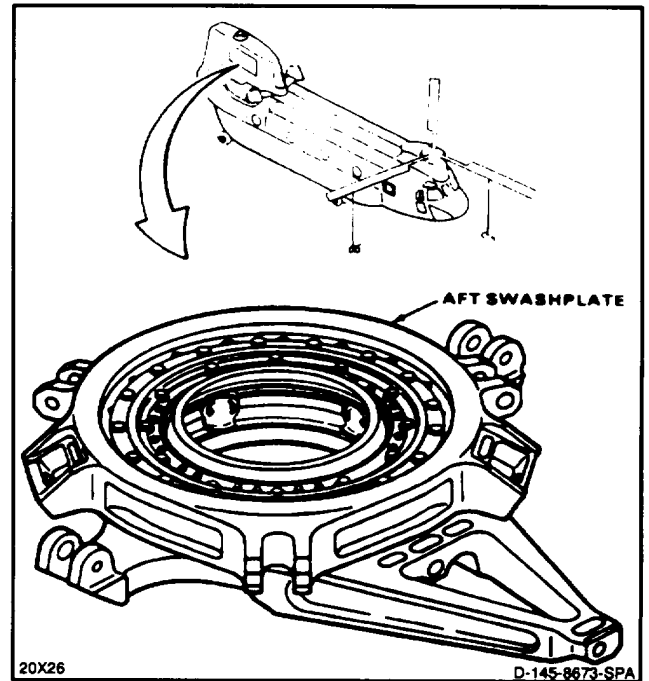

**NOTE**

Positive retention bolts are installed in the upper controls. They have a pawl which prevents nut or bolt removal unless the pawl is depressed (Task 1-14).

1. **Install control sling (T14) (1)** on swashplate (2) as follows:
  - a. Remove three quick-release pins (3).
  - b. Position three links (4) on lugs (5).
  - c. Install pins (3).
2. Attach hoist chain (6) to sling (T14) (1).
3. Attach guide line (7) to swashplate (2).


**WARNING**

Swashplate is heavy and can injure personnel if it drops. Swashplate must be supported by hoist and moved carefully to prevent injury to personnel.

**CAUTION**


If bearing hits or binds on slider shaft, bearing surfaces can be damaged.

4. Lift swashplate (2) and guide ball spherical bearing (8) onto slider shaft (9). Have helper lower yoke end of swashplate to clear pylon (10). Guide lugs (11) onto two actuating cylinder lugs (12).
- 4.1. Perform ball spherical bearing friction check (Task 5-114), spherical ball/spherical ball bearing axial play check (Task 5-114.1) and swashplate bearing friction check (Task 5-115).

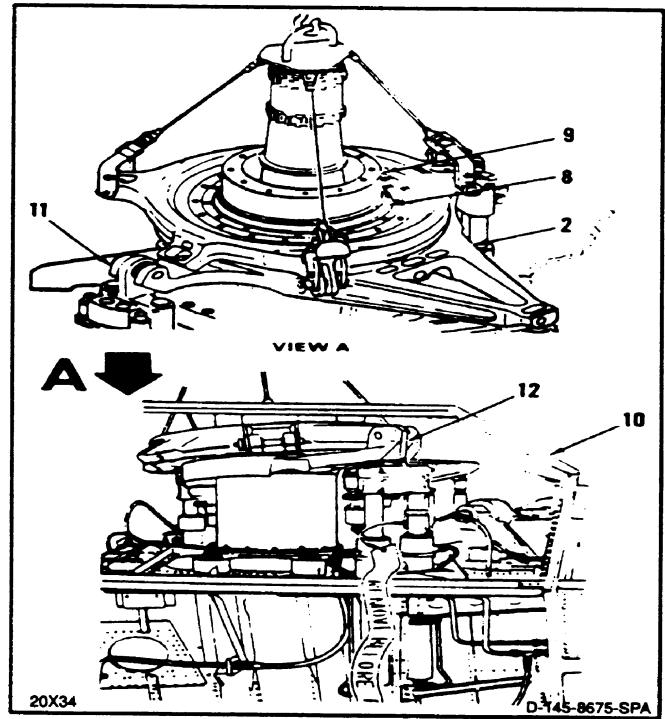**CAUTION**

Check bolt (16) for the 5 digit manufacturer's code on the bolt head. If manufacturer's code is 56878 (SPS Technologies) or 84256 (AVIBANK Manufacturing Inc.), the bolt is serviceable. If manufacturer's code is anything other than the 56878 or 84256 or the manufacturer's code cannot be determined, replace bolt. The five digit code 81996 is not a manufacturer's code.

5. Have helper lift actuator (13) and link (14) and position in swashplate stationary ring (15). Install two bolts (16) with head to head. Install two washers (17) and nuts (18). Torque nuts to **660 to 780 inch-pounds**. Do not exceed 1400 inch-pounds for cotter pin alignment. Install cotter pins (19).

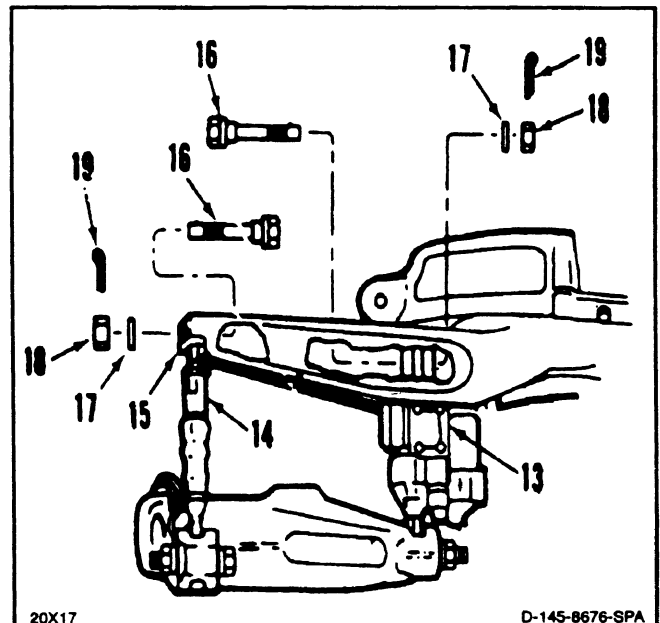


GO TO NEXT PAGE




- 5.1. Coat bushing OD and bolt shank with antiseize compound (E75). Do not get antiseize compound on bolt thread.
- 6. Install bolts (19), washers (20), and nuts (21) in actuating cylinders (22 and 23). Torque nuts to **660 to 780 inch-pounds**. Continue tightening only as needed to align cotter pin hole. **Do not exceed 1400 inch-pounds**. Install cotter pins (24).

**INSPECT**

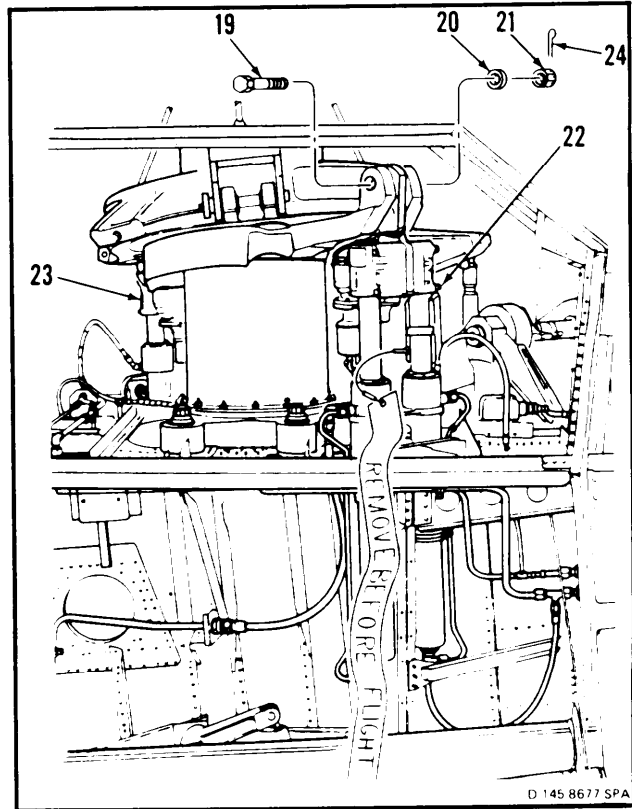


- 7. Lower hoist chain (6).
- 8. Remove guide line (7).
- 9. Remove three quick-release pins (3). **Remove controls sling (T14) (1).**

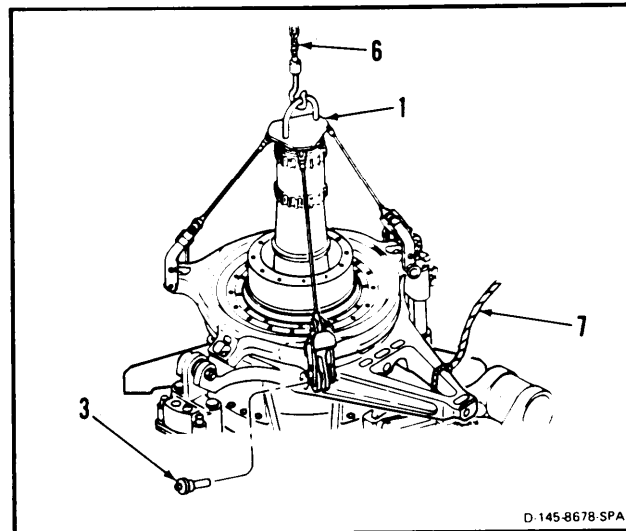

**5-133 INSTALL AFT SWASHPLATE (Continued)**

5-133

10. **Install slider shaft seal (25).** Use 12 bolts (26) and washers (27). **Torque bolts to 60 inch-pounds.**
11. Lockwire six bolts (26) on each half of seal (25) together in pairs of three. Use lockwire (E231).

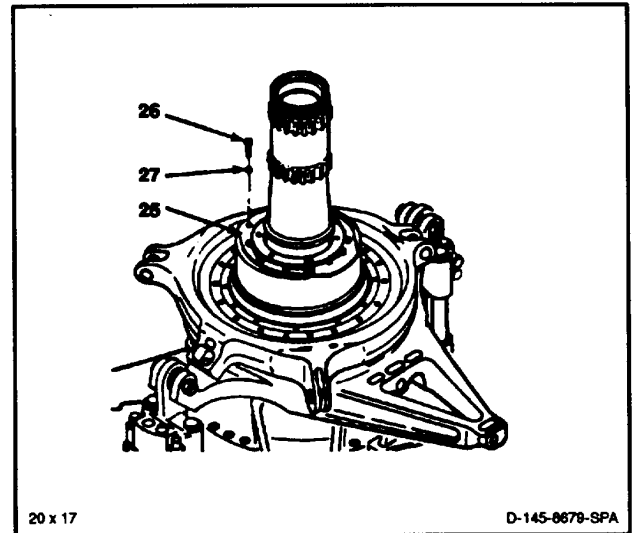**FOLLOW-ON MAINTENANCE:**

- Remove servocylinder safety blocks (Task 11-29).
- Install weather protective cover, drive collar, and pitch links (Task 5-111).
- Install aft drive arms (Task 5-112).
- Install aft rotary-wing head (Task 5-9).
- Install aft rotary-wing blades (Task 5-84).
- Close work platforms (Task 2-2).

**END OF TASK**

Change 34 5-473

**5-134 REMOVE PITCH LINK BOOT**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692

**Materials:**

None

**Personnel Required:**

67U10 Medium Helicopter Repairer


**Equipment Condition:**

- Battery Disconnected (Task 1-39)
- Electrical Power Off
- Hydraulic Power Off
- One Forward and One Aft Blade Tied Down (Task 1-26)
- Forward or Pylon Work Platform Open (Task 2-2)
- Pitch Link Disconnected From Swashplate (Task 5-97)

**General Safety Instructions:**

**WARNING**


Pitch link must be disconnected before performing this task.

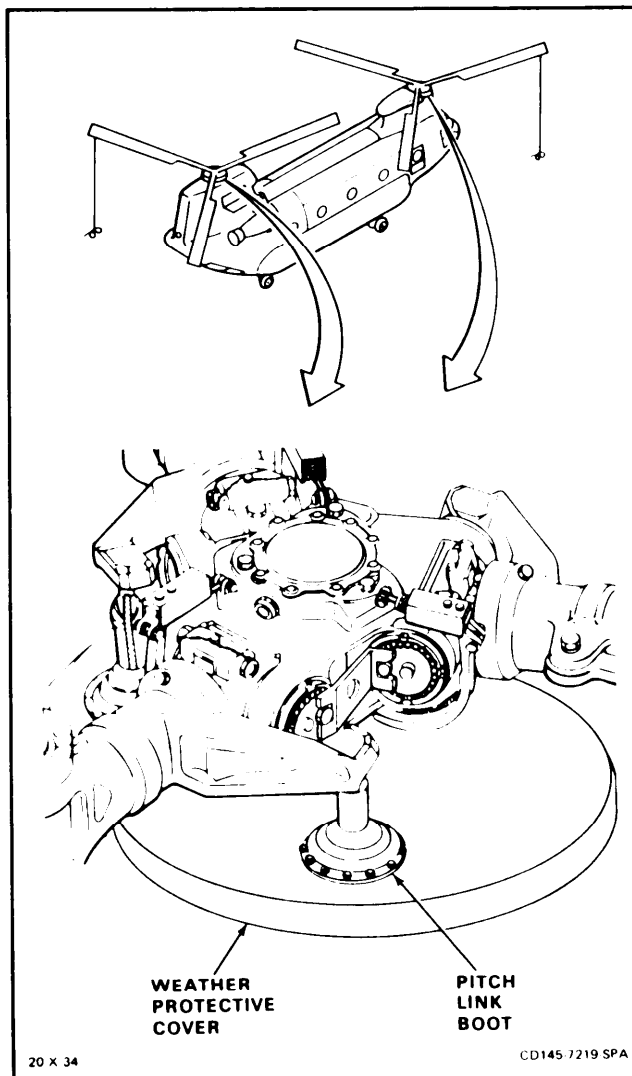

**NOTE**

Procedure is same to remove all six pitch link boots. Removal of pitch link boot on forward weather protective cover is shown here.

1. Remove ties (1) from pitch link boot (2).

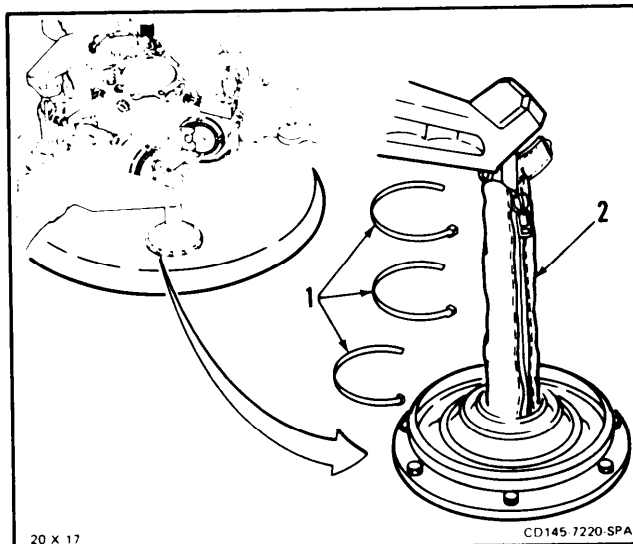


**GO TO NEXT PAGE**

## 5-134 REMOVE PITCH LINK BOOT (Continued)

5-134


2. Pull tab (3) on interlocking slide fasteners (zipper) (4) all the way down.

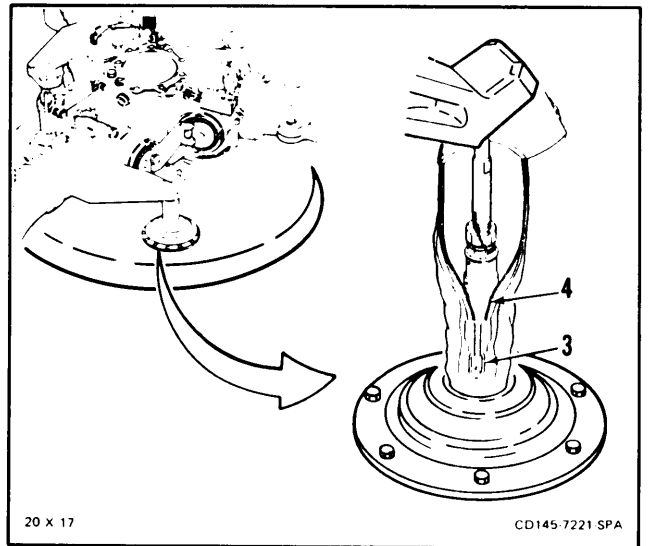

3. Remove eight screws (5) and washers (6).  
Lift retaining ring (7).
4. Pull boot (2) loose and down through weather protective cover (8). **Remove boot.**

## FOLLOW-ON MAINTENANCE:

None

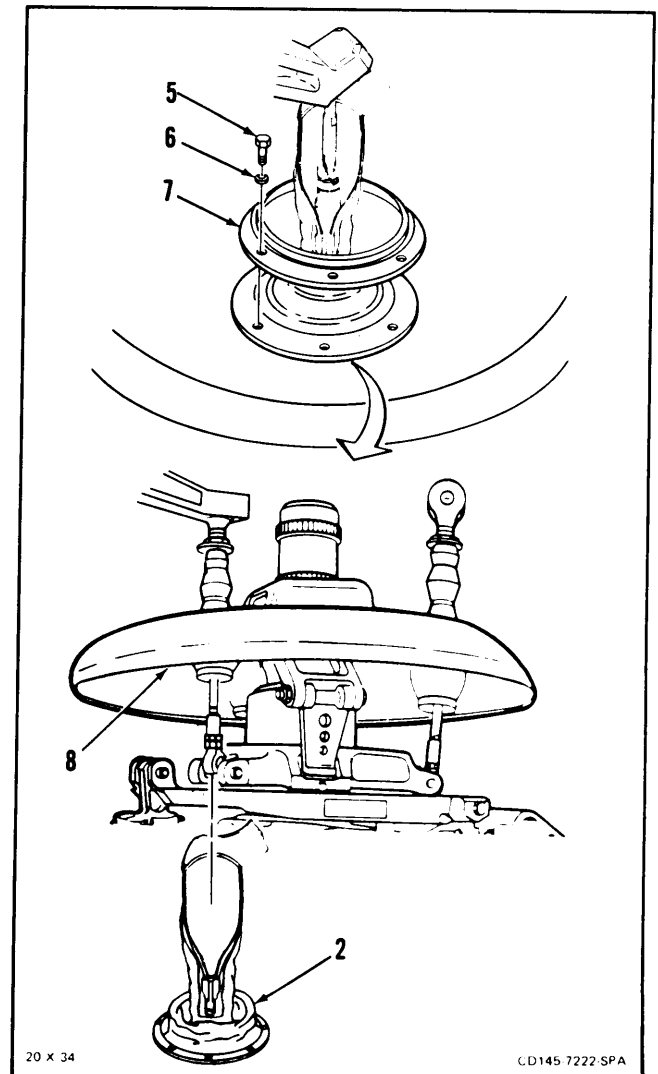

END OF TASK

5-475

**5-135 INSTALL PITCH LINK BOOT**

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692

**Materials:**

Straps (E374) or Twine (E433)  
Gloves (E186)  
Cloth (E120)  
Dry Cleaning Solvent (E162)

**Personnel Required:**

67U10 Medium Helicopter Repairer  
67U30 Inspector


**References:**

TM 55-1520-240-23P  
Task 5-99

**General Safety Instructions:**

**WARNING**


Dry cleaning solvent (E162) is flammable and toxic. It can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

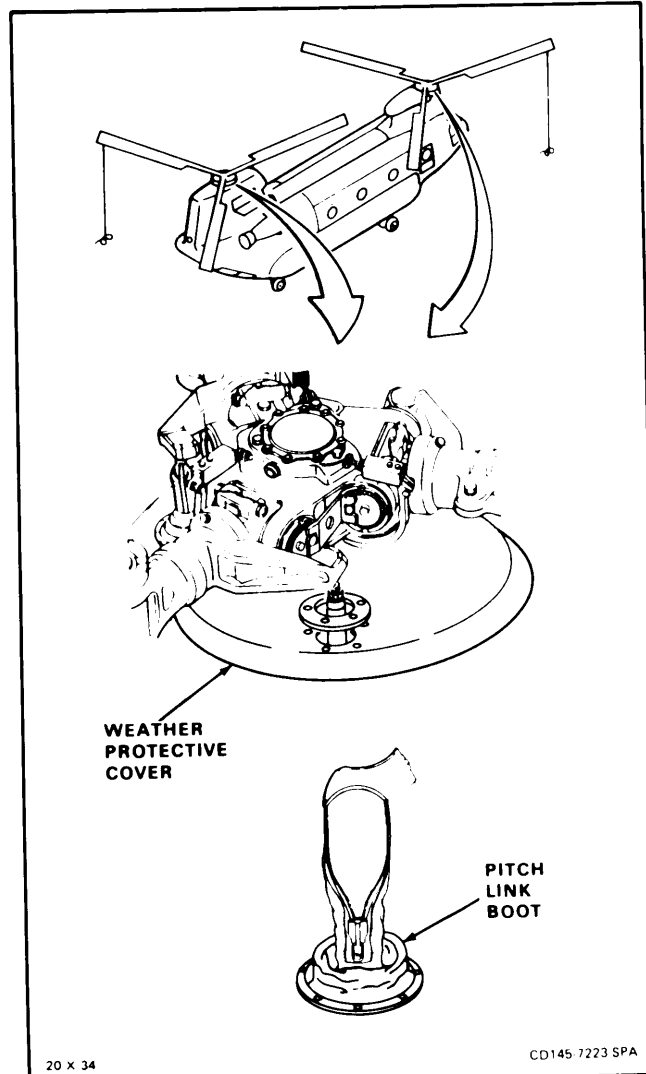

**NOTE**

Procedure is same to install all six pitch link boots. Installation of pitch link boot on forward weather protective cover is shown here.


1. Clean contact surfaces of retaining ring (1) and cover (2). Use cloth (E120) damp with solvent (E162). Wear gloves (E186).

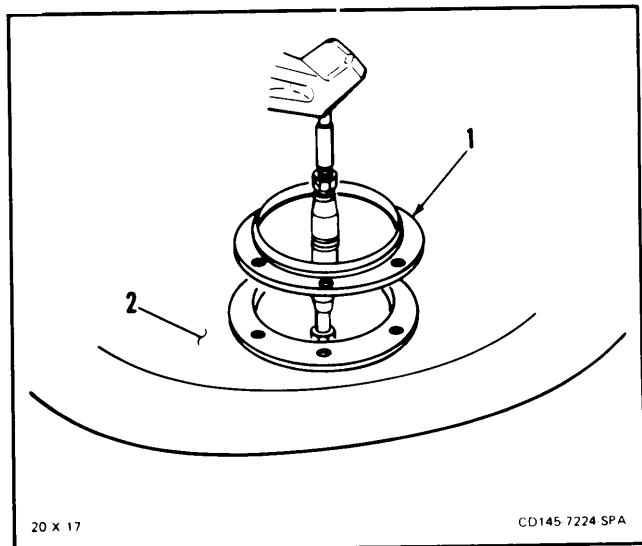

**GO TO NEXT PAGE**

5-135 INSTALL PITCH LINK BOOT (Continued)


2. Position pitch link boot (3) up over lower rod end (4) of pitch link (5). Pull boot over turnbuckle (6). Pull flange (7) of boot up through weather protective cover (8).
3. Connect pitch link (5) to swashplate (9) (Task 5-99).

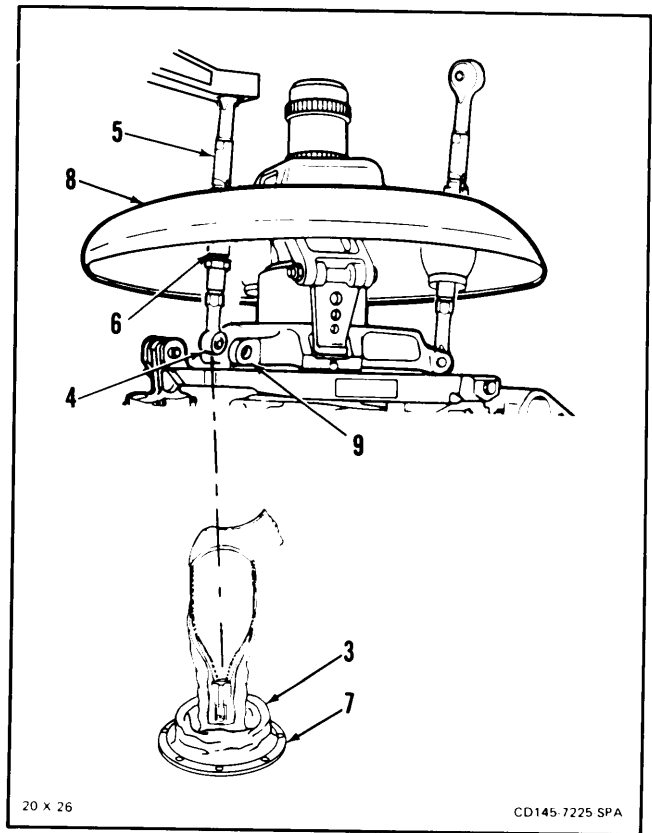

**NOTE**

Interlocking slide fasteners (zipper) must be positioned away from rotary-wing head. Pitch link adjustment will be difficult if zipper is not accessible.

4. Position boot (3) with zipper (10) facing away from rotary-wing head (11). Align boot holes (12) with holes (13) in cover (8).
5. Position retaining ring (1) on boot (3). Install eight screws (14) and washers (15).
6. Pull tab (16) of zipper (10) all the way up.
7. Close cone (17) around pitch link (5).

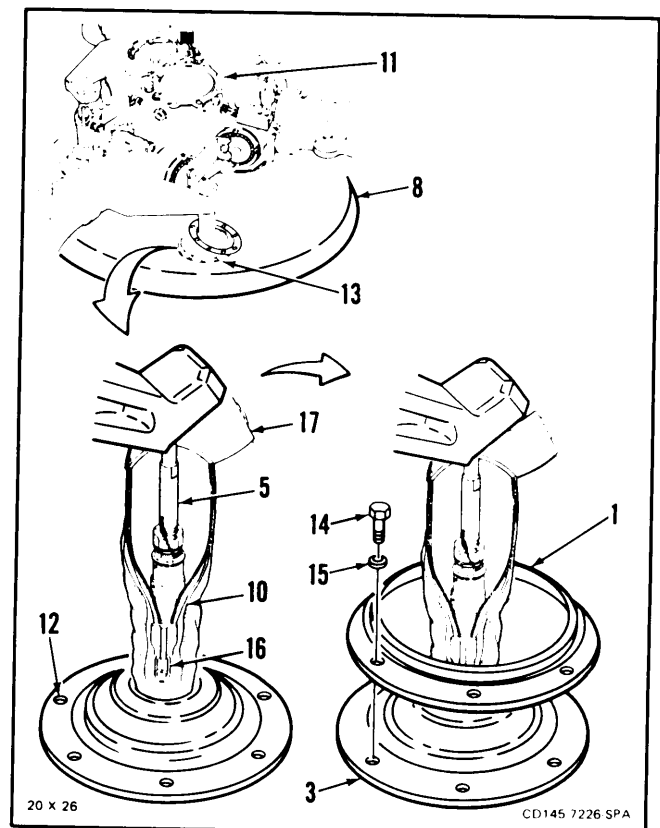


**GO TO NEXT PAGE**

**5-135 INSTALL PITCH LINK BOOT (Continued)****NOTE**

If straps (E374) are used to tie pitch link boot, do step 8. If twine (E433) is used to tie pitch link boot, do step 9.

8. If using straps (E374) (18) tie pitch link boot (3) as follows:
- Install upper strap (E374) (18) through loops (19) in cone (17).
  - Install middle strap (E374) (18) through zipper slider (21).
  - Install lower strap (E374) (18) at bottom of zipper (10) over zipper pull (22).
  - Cut off straps (E374) (18) 1/4-inch from locks (23).

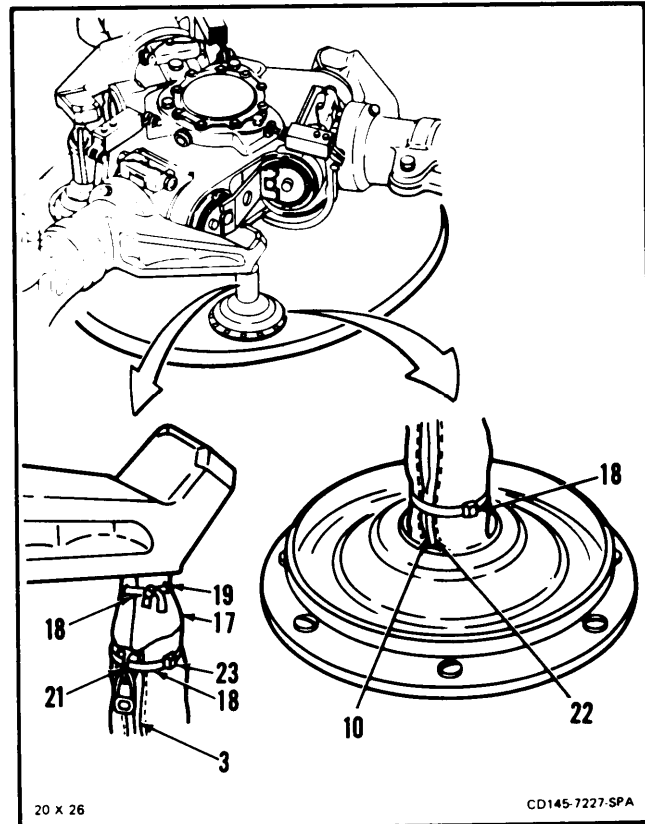


**GO TO NEXT PAGE**

## 5-135 INSTALL PITCH LINK BOOT (Continued)


5-135

9. If using twine (E433) (24) tie pitch link boot (3) as follows:
  - a. Cut two 24-inch lengths of twine (E433) (24).
  - b. Tie one 1-inch loop (25) 6 inches from one end of length of twine (E433) (24).
  - c. Pass long end of twine (E433) (24) around boot (3) at bottom of zipper (10), and through loop (25).
  - d. Pull twine (E433) (24) tight and wrap around boot (3) four to five times.
  - e. Tie ends of twine (E433) (24) together with double square knot (26).
  - f. Cut off ends of twine (E433) (24) 1/4-inch from knot (26).
  - g. Pass end of another length of twine (E433) (24) around cone (17) through loops (19) three times.
  - h. Tie ends of twine (E433) (24) together with square knot (27).
  - i. Pass long end of twine (E433) (24) through tab (16) of zipper (10), then through loops (19) around cone (17).
  - j. Pass twine (E433) (24) down through zipper slider (21) and back through loops (19) around cone (17).
  - k. Tie ends of twine (E433) (24) together with double square knot (28).
  - l. Cut off twine (E433) (24) 1/4-inch from knot (28).

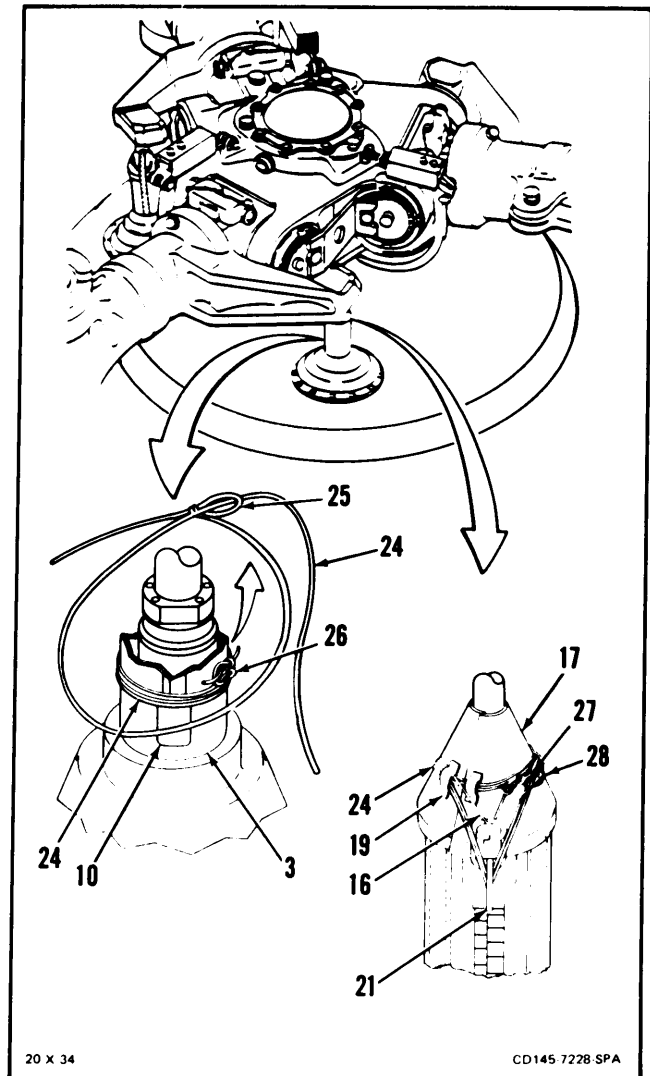**INSPECT**

FOLLOW-ON MAINTENANCE:

None

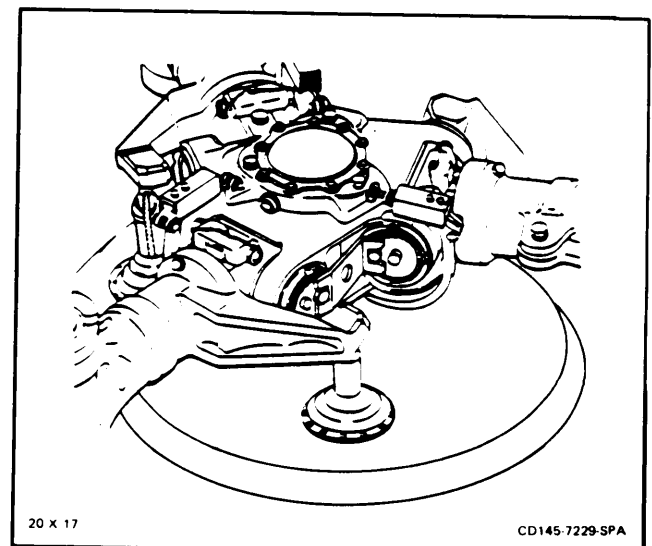**END OF TASK**

5-479



INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692

**Materials:**


None

**Personnel Required:**

67U10 Medium Helicopter Repairer  
67U20 Medium Helicopter Repairer

**Equipment Condition:**


- Battery Disconnected (Task 1-39)
- Electrical Power Off
- Hydraulic Power Off
- Two Forward or Two Aft Blades Tied Down (Task 1-26)
- Forward or Pylon Work Platforms Open (Task 2-2)
- Rotary-Wing Blades Removed (Task 5-64)
- Rotary-Wing Head Removed (Task 5-8)

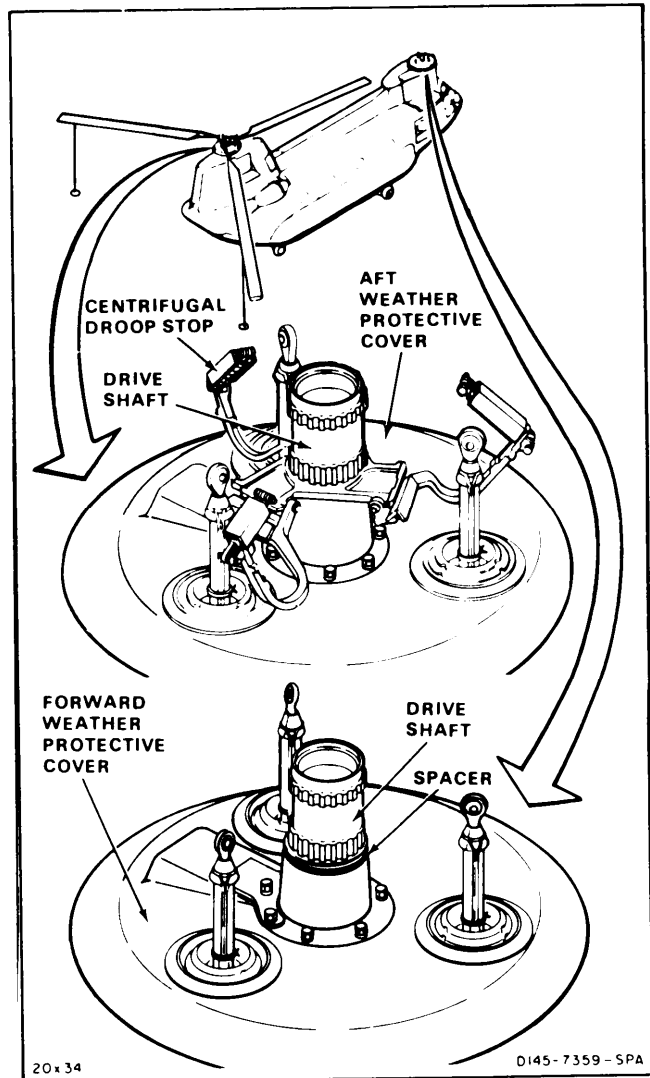

**NOTE**

Procedure is similar to remove forward or aft weather protective covers. Differences are noted in text.

1. Remove ties (1) from three pitch link boots (2).

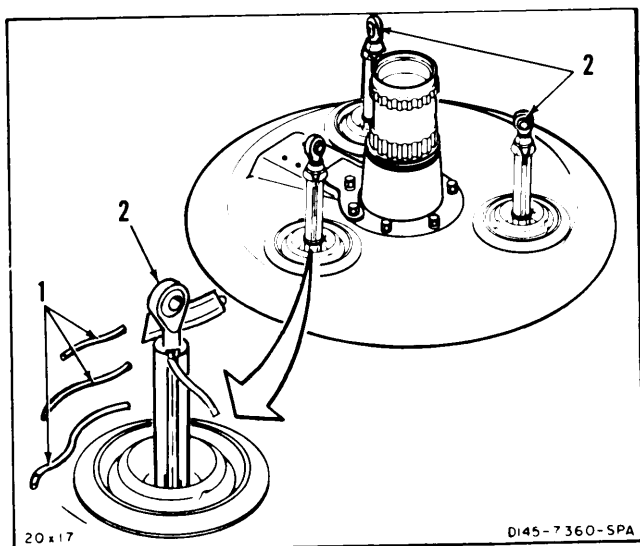


**GO TO NEXT PAGE**


## 5-136 REMOVE WEATHER PROTECTIVE COVER (Continued)

5-136


2. Pull tabs (3) down to **open** interlocking slide fasteners (zippers) (4).

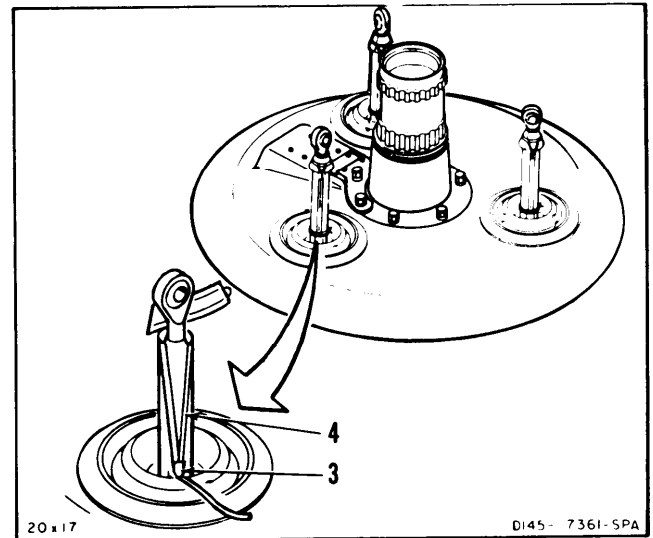

3. For forward weather protective cover (5) only, **remove spacers (6)** from drive shaft (7). Then go to step 5.

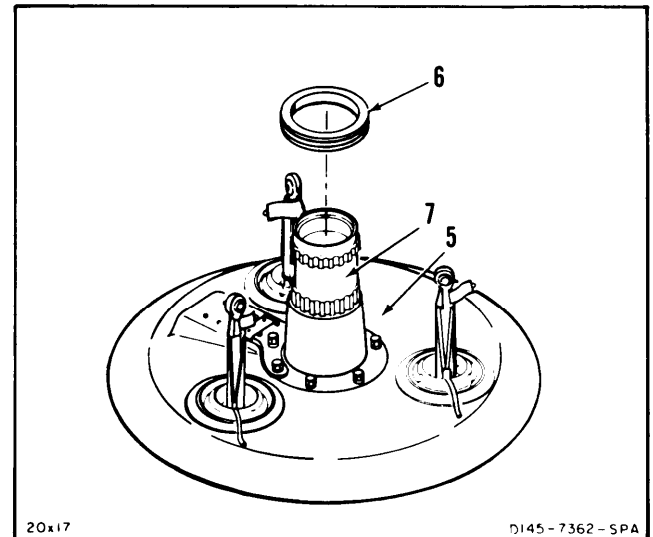

4. For aft weather protective cover (8) only, **remove centrifugal droop stop (9)** from drive shaft (7).

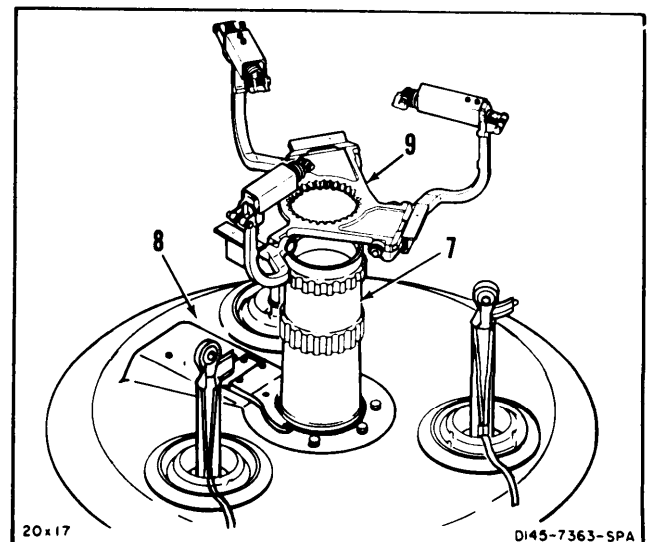


**GO TO NEXT PAGE**

5. Remove 8 bolts (10), 8 nuts (11), and 24 washers (12 and 13).

**CAUTION**


Do not damage pitch link or boots when removing cover.

6. With helper, lift cover (5) over drive shaft (7).  
Remove cover.

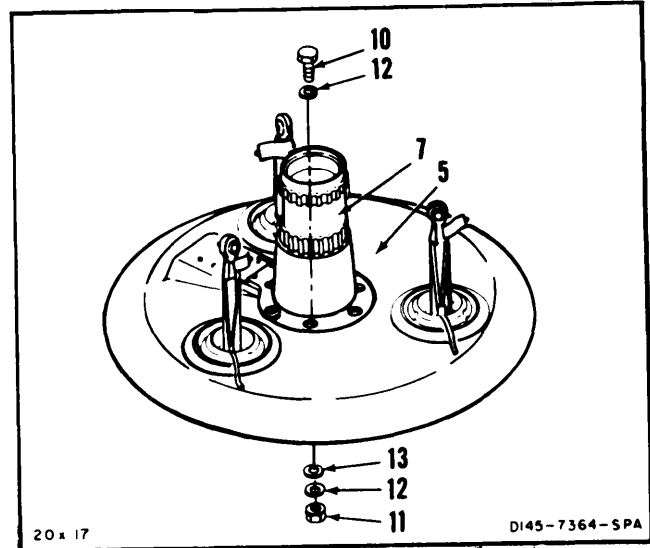

## FOLLOW-ON MAINTENANCE:

None

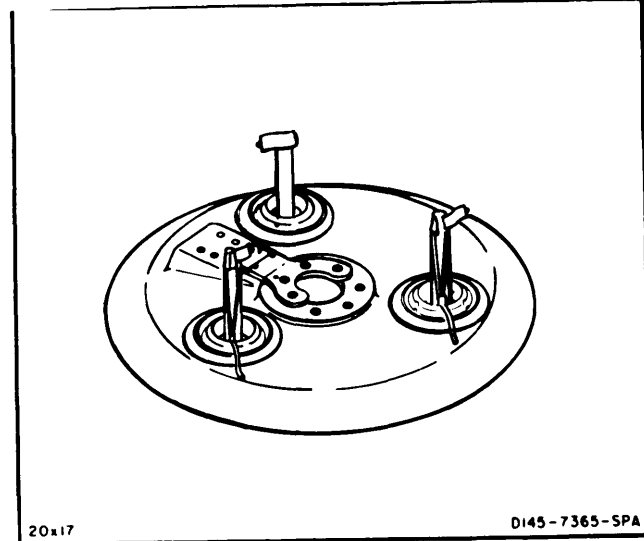

END OF TASK

**5-137 REPAIR WEATHER-PROTECTIVE COVER (AVIM)****5-137****INITIAL SETUP****Applicable Configurations:**


- Without **15**

**Tools:**

- Airframe Repairer's Tool Kit,  
NSN 5180-00-323-4876
- Hypodermic Syringe
- Heat Lamp
- Scissors
- Trip Balance, NSN 6670-00-401-7195
- Electric Drill
- Drill Bits
- Shot Bags
- Aluminum Wedges, 0.040-Inch Tapered to  
0.016-inch
- Aluminum Wedges, 0.125-Inch Tapered to  
0.016-inch
- Vacuum Supply and Vacuum Gage, 0 to 30  
Inches Hg
- Stopwatch
- Stiff-Bristle Brush
- Bolts AN3-4A (2)
- Nuts EWSN22-3 (2)
- Washers AN960-PD10 (2)
- C Clamps

**Materials:**

- Abrasive Paper (E6 and E7)
- Acetone (E20)
- Adhesive (E27)
- Adhesive (E40 and E41)
- Adhesive (E47)
- Adhesive Pack (E50)
- Cloth (E120)
- Filler (E171)
- Polyvinyl Sheet (E284)
- Glass Cloth (E130 and E132)
- Gauze (E183)
- Gloves (E 186)
- Hardener (E191)
- Hardener (E193)
- Hardener (E194)
- Teflon Fabric (E170)
- Rubber Sheet (E321)
- Sealing Tape (E396)
- Plastic Cups (E157)
- Toluene (E423)
- Tongue Depressors (E424)
- Temperature Indicating Strips (E413)
- Squeeze Bottle (E366)
- Resin (E312)

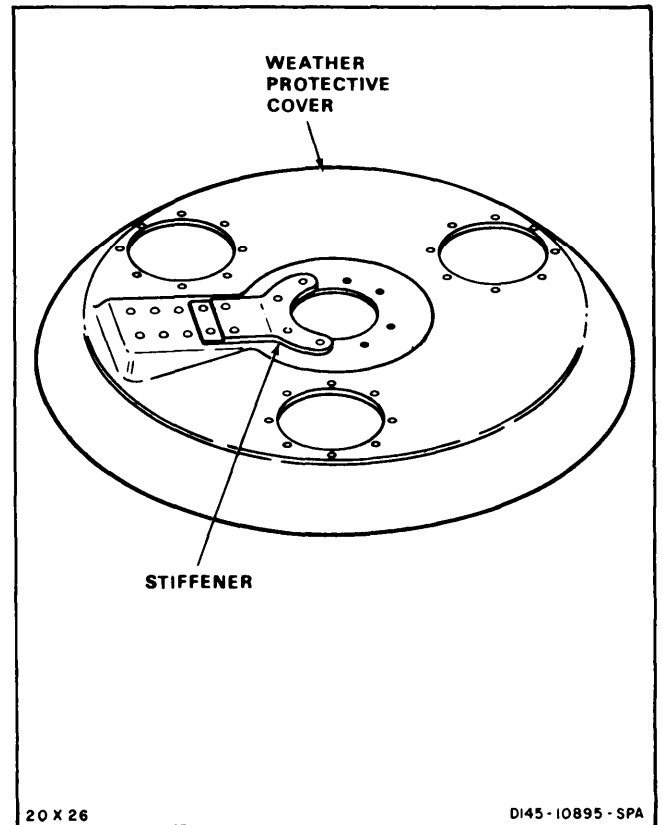**Personnel Required:**

- Aircraft Structure Repairer (2)
- Inspector

**References:**

- TM 55-1520-240-23P

**Equipment Condition:**

- Off Helicopter Task
- Pitch Link Boots Removed (Task 5-134)

**General Safety Instructions:****WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**GO TO NEXT PAGE**

# 5-137 REPAIR WEATHER-PROTECTIVE COVER (AVIM) (Continued)

**WARNING**

Adhesives (E27, E40, E41, E47, and E50) are flammable and toxic. They can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**NOTE**

Procedure is same to repair forward or aft weather-protective cover.


**REPAIR SKIN SURFACE DAMAGE**

1. **Check surface damage.** Damage is limited to surface scratches, cuts less than 3-inches long, and single-ply breaks less than 1/2-square-inch.

**CAUTION**

Do not sand into glass cloth.  
Cloth will be damaged.

2. **Sand damaged surface (1)** of cover (2). Remove finish and loose fibers. Use abrasive paper (E6).
3. **Clean surface (1).** Use cloth (E120) damp with acetone (E20). Wear gloves (E186).

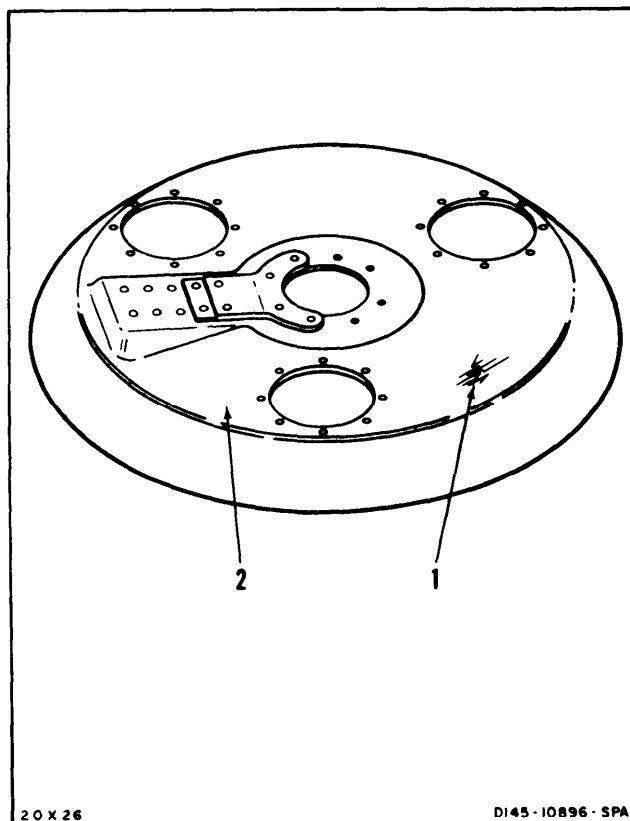

20 x 26

DI45-10896-SPA

**GO TO NEXT PAGE**

## 5-137 REPAIR WEATHER-PROTECTIVE COVER (AVIM) (Continued)

5-137


### 4. Mix adhesive as follows:

- a. Weigh 5 grams of filler (E171) and 100 grams of adhesive (E47). Mix filler with adhesive, slowly in cup (E157). Use tongue depressor (E424). Mix until color is uniform. Wear gloves (E186).
- b. Weigh 16 grams of hardener (E193). Mix hardener with mixture from step a until color is uniform. Use cup (E157) and tongue depressor (E424). Allow mixture to set for 12 hours.
- c. Weigh 7 grams of hardener (E194). Mix hardener thoroughly with mixture from step b. Use tongue depressor (E424).

### 5. Apply one coat of adhesive mix to damaged surface (1).

### 6. Cure adhesive mix as follows:

- a. Allow adhesive mix to gel at 80°F to 150°F (27°C to 66°C). Use heat lamp.
- b. Cure gelled adhesive at 120°F to 150°F (49°C to 66°C) for 30 minutes. Use heat lamp and temperature indicating strips (E356.1).
- c. Raise temperature to 200°F to 230°F (93°C to 110°C) for 30 minutes. Use heat lamp and temperature indicating strips (E413).

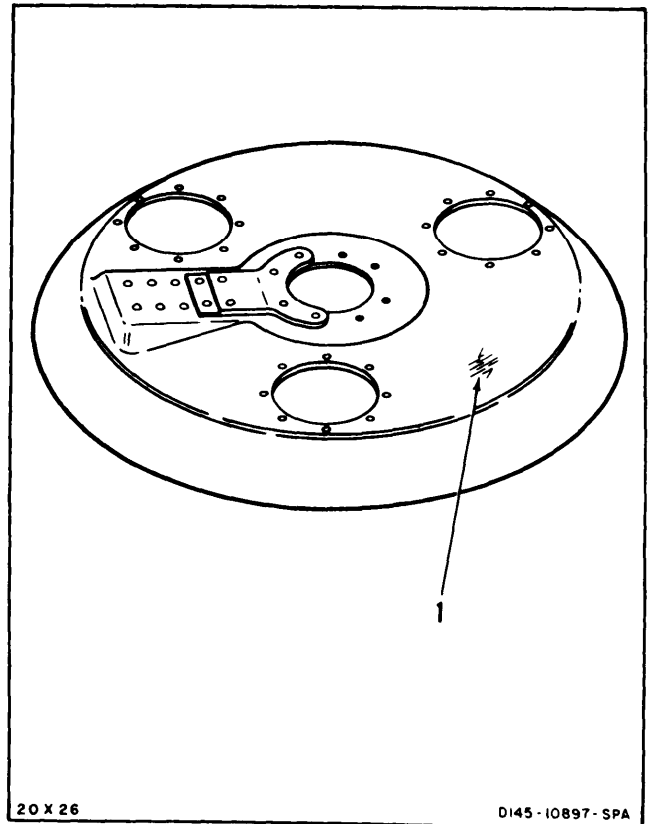

**INSPECT**

**GO TO NEXT PAGE**

**REPAIR SKIN DAMAGE EXTENDING INTO CORE**

7. Check for skin areas with lighter color and broken surface. This shows that damage reaches to core. Damage shall be less than 1/2-square-inch.
8. Sand damaged area (3). Remove finish and loose fibers. Use 80 grit abrasive paper (E6).
9. Drill 0.028-inch holes (4) through skin only. Space holes throughout damaged area (3).
10. Mix adhesive as follows:
  - a. Weigh 100 grams of adhesive (E47). Place in cup (E157). Weigh 50 grams of resin (E312) and 30 grams of hardener (E193). Mix resin and hardener in cup with adhesive. Use tongue depressor (E424). Wear gloves (E186).

**NOTE**


Mixture from step 10. has indefinite pot life without refrigeration.

- b. Weigh 12 grams of hardener (E194) and 100 grams of resin (E312). Mix in clean cup (E157). Use tongue depressor (E424). Wear gloves (E186).

**NOTE**

Mixture from step 10.b. has pot life of 3 months without refrigeration.

- c. Weigh 100 grams of mixture from step 10.a. and 25 grams of mixture from step 10.b. Mix thoroughly in cup (E157). Use tongue depressor (E424). Wear gloves (E186).

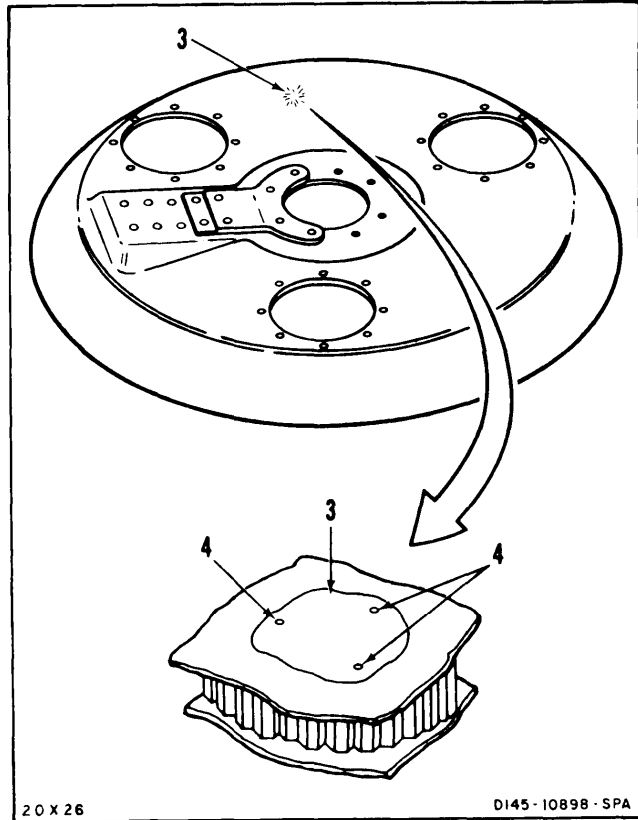

20 X 26

D145-10898-SPA

**GO TO NEXT PAGE**

## 5-137 REPAIR WEATHER-PROTECTIVE COVER (AVIM) (Continued)

5-137

### NOTE



- Mixture from step 10c has pot life of 10 hours.

11. **Inject** enough **adhesive** from step 8c **into holes (4)** to fill damaged core cells (5).
12. **Cure adhesive mixture** as follows:
  - a. Heat damaged area (3) at 180°F to 200°F (82°C to 93°C) for 4-hours minimum until mixture gels. Use heat lamp.
  - b. Raise temperature from 200°F to 230°F (93°C to 110°C) for 1 hour. Use heat lamp.
13. **Roughen damaged area (3)**. Use 80 grit abrasive paper (E6).
14. **Fill drilled holes (4)** and any remaining skin damage. Use adhesive from step 10.
15. **Cure adhesive mixture** at 70 to 80°F (21 to 27°C) for 24 hours.

### INSPECT

### REPAIR SKIN AND CORE DAMAGE

16. **Check for punctures or breaks in one skin and core.** Damage shall not exceed 1/2-square-inch. Check for damage through both skins and core. Damage shall not exceed 1/4 square-inch.
17. **Clean damaged area (3)**. Use cloth (E120) damp with acetone (E20). Remove any loose pieces of core (5) or skin (6).

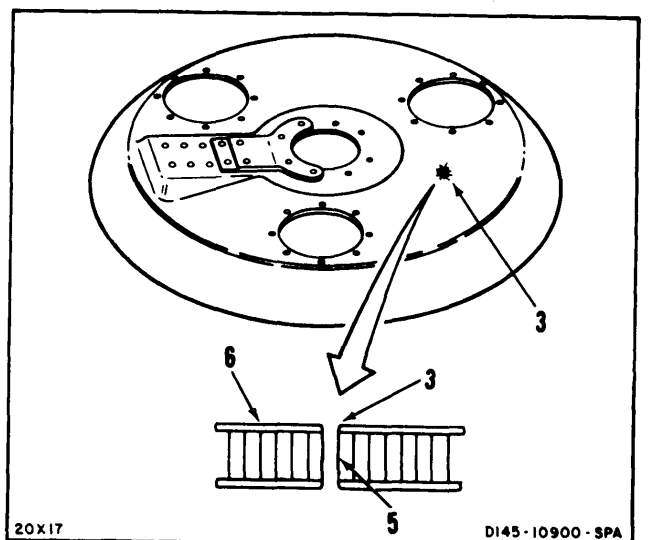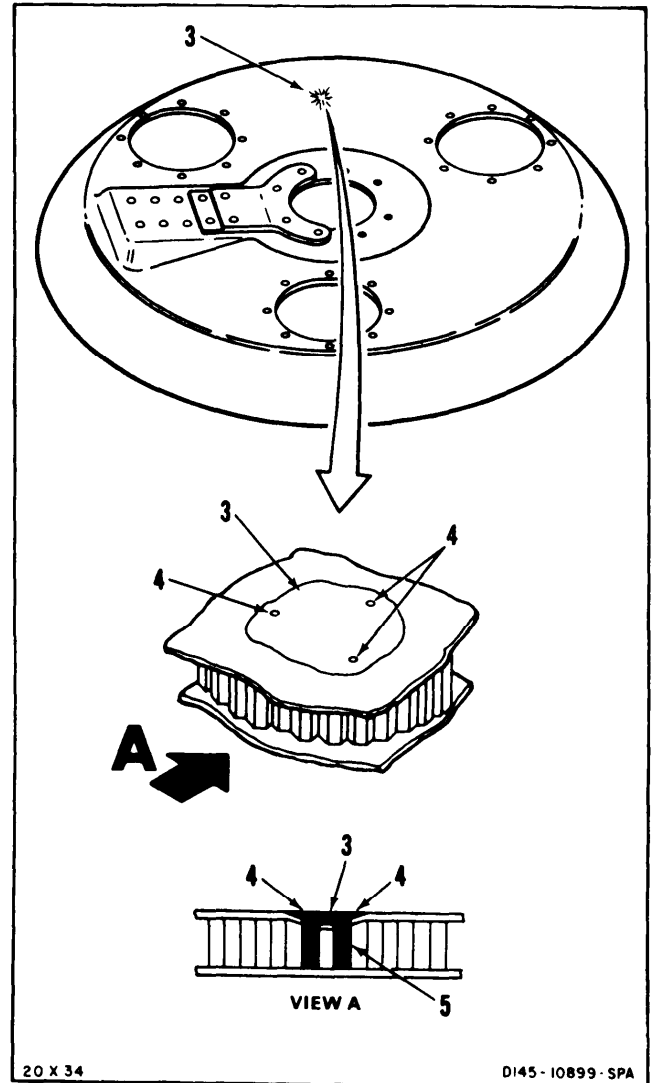


GO TO NEXT PAGE

5-487




18. Fill damaged area (3) with adhesive pack (E50). Use tongue depressor (E424).
19. Cure adhesive pack at 70 to 80°F (21 to 27°C) for 24 hours.
20. Sand adhesive pack to blend repaired area (3) into skin (6).

**INSPECT**

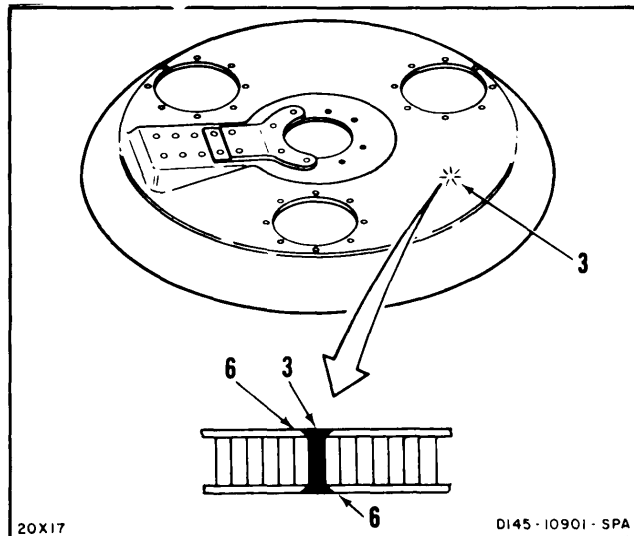

21. Repair delamination (7) around openings. Delaminations shall not exceed 1 square-inch. Find bond voids (8) by tapping suspect area with edge of coin. Bond voids shall not exceed 9 square-inches and there shall be no skin damage.
22. For voids only, drill 0.028-inch holes (4) 2-inches apart through skin (6) over void (8).
23. Mix adhesive as in step 10.
24. Fill delamination (7) or void (8) with adhesive. Use hypodermic syringe. For delamination, apply clamp and go to step 28. For void, go to step 25.
25. If void (8) does not fill completely, apply vacuum as follows:

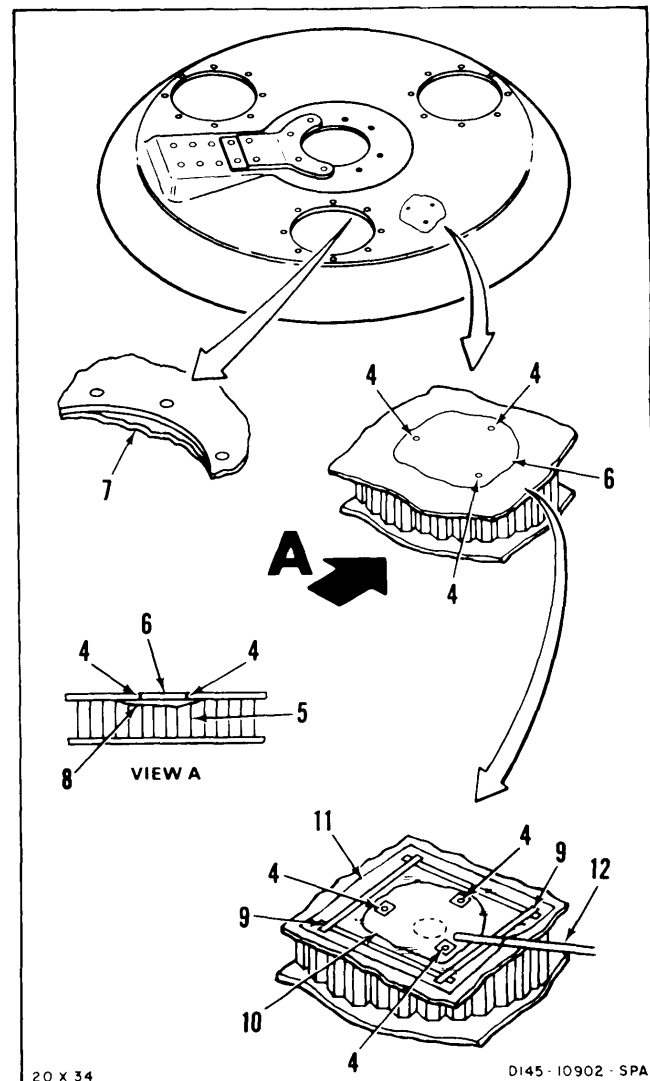

- a. Tape all holes (4). Use sealing tape (E396) (9). Drill hole in center of repair area that has not filled.
- b. Apply sealing tape (E396) (9) around repair area (10).
- c. Apply polyvinyl sheet (E284) (11) over repair area (10).
- d. Insert hose (12) of vacuum pump under polyvinyl sheet (E284) (11). Apply vacuum to draw adhesive mix into unfilled part of repair area (10).
- e. Remove hose (12), sheet (11), and tape (9).


**GO TO NEXT PAGE**

## 5-137 REPAIR WEATHER-PROTECTIVE COVER (AVIM) (Continued)

5-137

26. Remove adhesive from holes (4). Use hypodermic syringe.
27. Apply polyvinyl sheet (E284) (13) over repair area (10). Secure sheet with shot bags (14).
28. Cure adhesive as in step 12.
29. Mix adhesive as in step 10. Fill holes (4) with adhesive mix. Use hypodermic syringe.
30. Cure adhesive at 70 to 80°F (21 to 27°C) for 24 hours.

### INSPECT

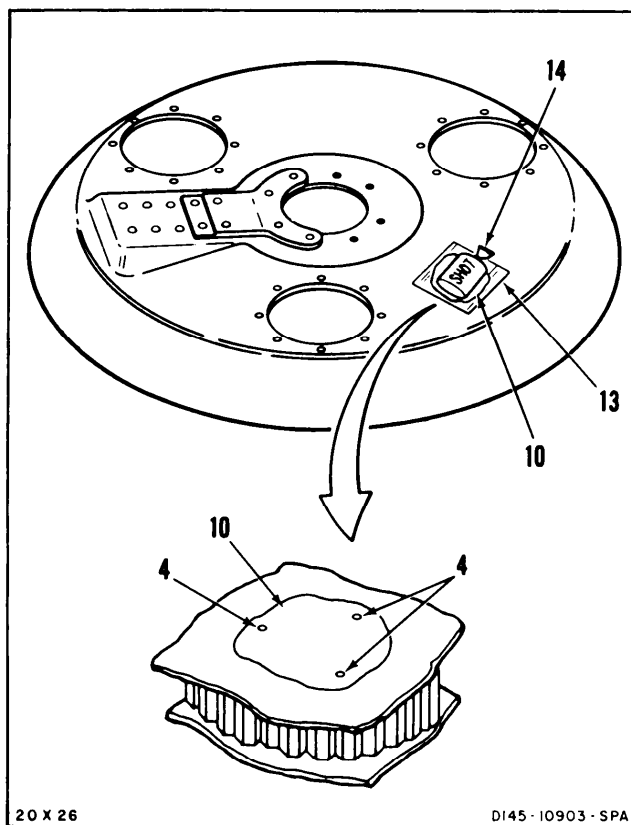


### REPAIR SKIN CRACKS

31. Repair cracks at edge of honeycomb. Cracks may appear under cover.
32. Cut two strips (15) of glass cloth (E130) 1-inch larger than crack on all sides.
33. Sand damaged area (3). Use 120 grit abrasive paper (E7). Remove dust. Use vacuum cleaner.

#### CAUTION

Do not wipe contaminants into damaged area.

34. Clean surface around damaged area (3). Use cloth (E120) damp with acetone (E20). Work away from damage, Wear gloves (E186).
35. Wipe damaged area (3) clean. Use dry cloth (E120). Turn cloth often. Wipe until no color is on cloth.
36. Mix adhesive (E40). Follow instructions on container. Wear gloves (E186).
37. Apply adhesive (E40) to damaged area (3).
38. Position one piece of glass cloth (E130) (15) on damaged area (3). Coat cloth with adhesive (E40). Tamp cloth. Use adhesive brush.

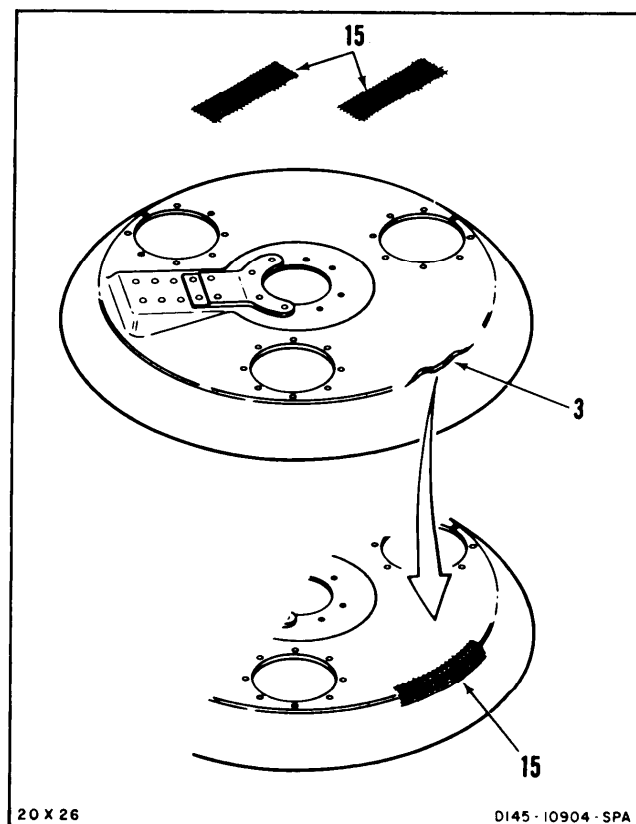


**GO TO NEXT PAGE**

## 5-137 REPAIR WEATHER-PROTECTIVE COVER (AVIM) (Continued)

39. **Position second glass cloth (E130) (15)** over cloth in place. Soak cloths with adhesive (E40). Tamp cloth. Use adhesive brush.
40. Apply pressure to glass cloth (15) as follows:
  - a. Apply piece of teflon fabric (E170) (19) over cloth (15).
  - b. Apply rubber sheet (E321) (20) over teflon fabric (19).
  - c. Wrap end of tube (21). Use glass cloth (E132) (22).
  - d. Apply glass cloth (E132) (22) over sheet (E321) (20).
  - e. Wrap tube (21) at point outside of repair area. Use sealing tape (E396) (23). Make border around repair. Use tape (E396). Press tape on tubes into border tape.
  - f. Press polyvinyl sheet (E284) (24) onto tape border (23).
  - g. Apply vacuum source of 3 inches Hg to repair.
41. **Cure adhesive 24 hours** at 70°F(21°C).

### INSPECT

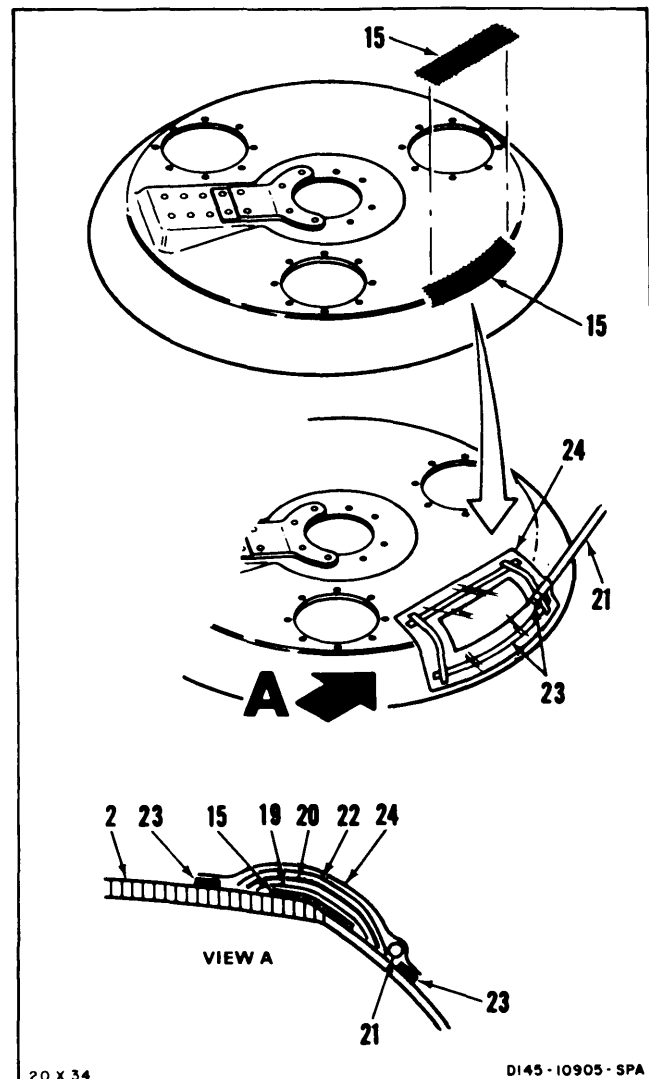

**GO TO NEXT PAGE**

## 5-137 REPAIR WEATHER-PROTECTIVE COVER (AVIM) (Continued)

5-137


### REPLACE STIFFENER

42. Replace cracked stiffener (16).
43. Remove two rivets (17) and two rivets (18).
44. Remove paint at edge of stiffener (16). Use acetone (E20). Wear gloves (E186).
- 45! Slowly drive 0.040-inch wedge (19) under edge of stiffener. Keep wedge close to stiffeners to prevent damage to skin. Open joint slightly.
46. Apply warm water at 130°F (55°C) into gap under stiffener (18). Use squeeze bottle (E366).

**CAUTION**

**Do not force wedges. Skin can become delaminated.**

47. Position 0.125-inch wedges in gap. Apply warm water in gap. Slowly insert wedges into gap. Do not force separation.

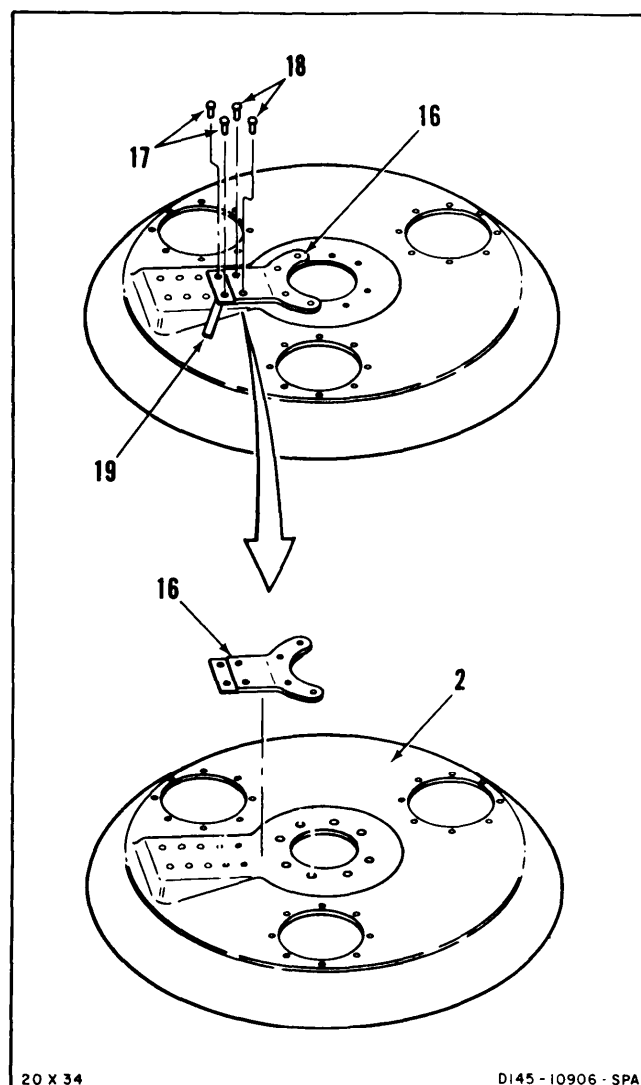


20 X 34

DI45-10906-SPA


**GO TO NEXT PAGE**

**5-137 REPAIR WEATHER-PROTECTIVE COVER (AVIM) (Continued)**

- 48. **Check cover (2) for damage** where stiffener was removed. Repair if required.
- 49. **Position stiffener (25)** on cover (2). Install two bolts (26), washers (27), and nuts (28).
- 50. Turn cover (2) over and **drill 4 holes (29) in stiffener (25)**. Use existing holes in cover as a guide.
- 51. **Remove nuts (28), bolts (26), and washers (27), and stiffener (25)**. Turn cover (2) right side up.
- 52. **Roughen mating surface** of cover (2). Use 80 grit abrasive paper (E6).
- 53. **Clean mating surface** of cover (2). Use cloth (E120) damp with acetone (E20). Wear gloves (E186).

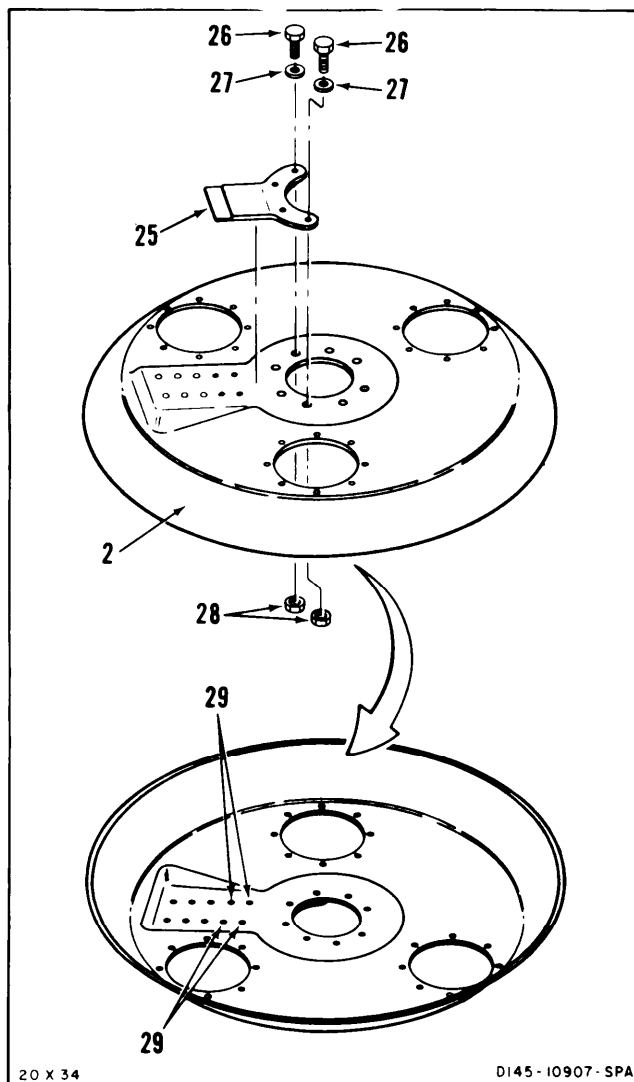

- 54. **Apply uniform coat of adhesive (E41)** to mating surfaces of stiffener (25) and cover (2).

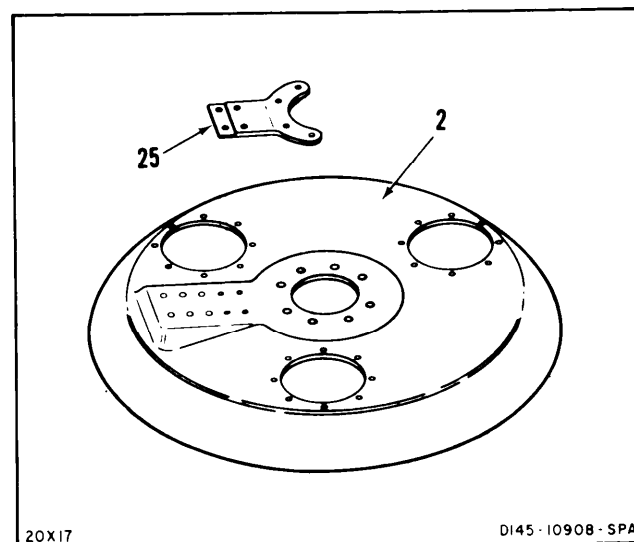


**GO TO NEXT PAGE**

## 5-137 REPAIR WEATHER-PROTECTIVE COVER (AVIM) (Continued)


5-137

55. Position stiffener (25) on cover (2). Align holes (29).

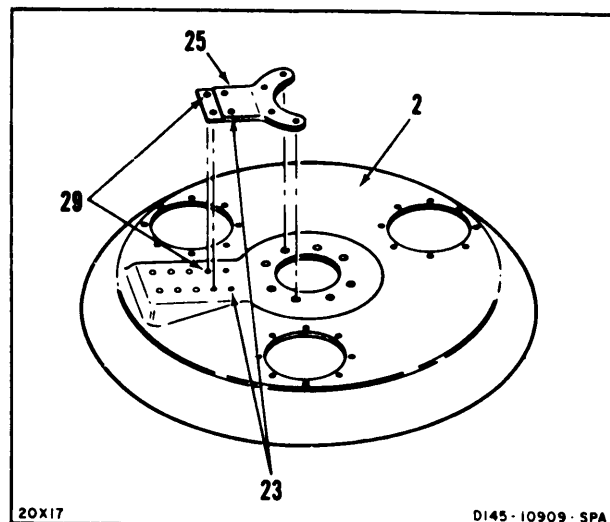

56. Apply pressure to stiffener (25). Use shot bags (14).

57. **Cure adhesive** for 24 hours at 70 to 80°F (21 to 27°C). Remove shot bags (14).

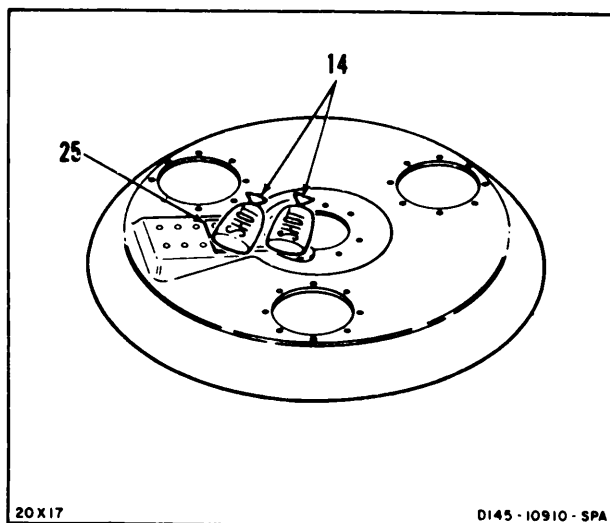


58. Install four rivets (17 and 18).

### **INSPECT**

#### FOLLOW-ON MAINTENANCE:

Refinish repaired area (Task 2-353).

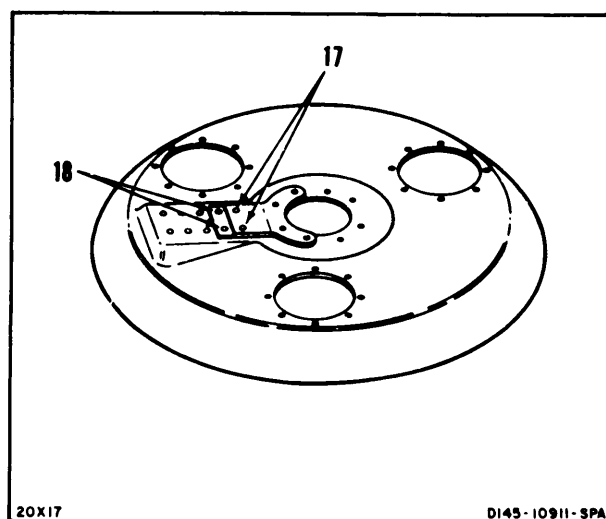

**END OF TASK**

## INITIAL SETUP

**Applicable Configurations:**

With 15

**Tools:**


Airframe Repairer Tool Kit,  
NSN 5180-00-323-4876  
Pencil Compass  
Straightedge  
Heat Lamp  
Scissors  
Trip Balance, NSN 6670-00-401-7195  
Electric Drill  
Drill Bits  
Shot Bags  
C-Clamps  
Plastic Squeeze Bottle (E366)  
Vacuum Cleaner  
Craftsman's Knife  
Chisel  
Vacuum Pump

**Materials:**

Abrasive Paper (E6 thru E9)  
Acetone (E20)  
Cloth (E120)  
Peel Ply (E270)  
Gloves (E186)  
Glass Cloth (E130 and E132)  
Teflon-impregnated Fabric (E170)  
Nomex Honeycomb Core (E150.3 or E150.1)  
Fiberglass Laminate (E168.1)  
Rubber Pad (E318)  
Masking Tape (E388)  
Sealing Tape (E396)  
Nylon Tape (E390.1)  
Aluminum Plate (E71)  
Hypodermic Syringe (E380)  
Adhesive (E27, E40, E41, or E47.1)  
Hardener (E194.1)  
Wood Spatula (E424)  
Temperature Indicating Strips (E413)  
Polyethylene Cup (E157)  
Polyvinyl Sheet (E284)

**Personnel Required:**

Aircraft Structure Repairer  
Inspector

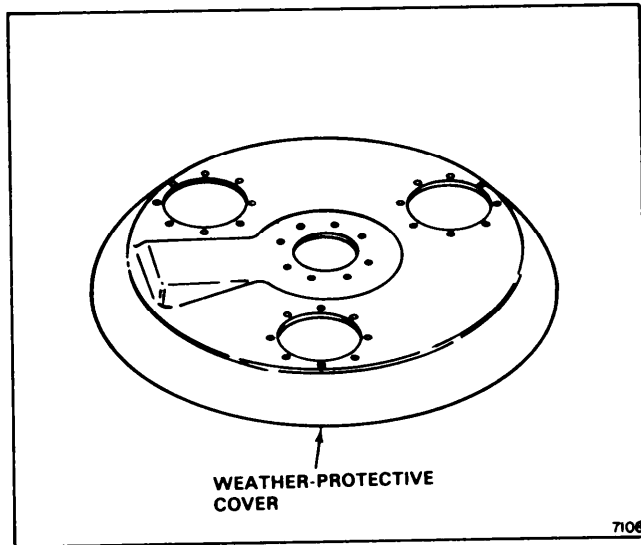**References:**

TM 55-1520-240-23P

**Equipment Condition:**

Off Helicopter Task  
Pitch Link Boots Removed (Task 5-134)

**General Safety Instructions:****WARNING**

Acetone (E20) is extremely flammable. It can be toxic. Avoid inhaling. Use only with adequate ventilation. Avoid contact with skin, eyes, or clothing. Keep away from heat, sparks, or open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**WARNING**

Adhesives (E27, E40, E41, and E47.1) are flammable and toxic. They can irritate skin and cause burns. Use only in well-ventilated area, away from heat and open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**GO TO NEXT PAGE**

5-494 Change 19

**5-137.1 REPAIR COMPOSITE WEATHER-PROTECTIVE COVER (AVIM) (Continued)**

5-137.1

1. Repair of composite weather-protective cover (1) includes the following procedures:


**NOTE**

Repair within 2 inches of center hole are not permitted.

Damage	Steps
Surface Abrasion	2-9
Edge Delamination	10-17
Bond Void (To 2 Square Inches)	18-28
Bond Void (Over 2 Square Inches)	29-58
Puncture Through One Skin and Core (To 1 Square Inch)	59-70
Puncture Through One Skin and Core (Over 1 Square Inch)	71-75
Puncture Through Both Skins and Core (To 1 Square Inch)	76-87
Puncture Through Both Skins and Core (Over 2 Square Inches)	88-105

**NOTE**

Procedure is same to repair forward or aft weather-protective cover.

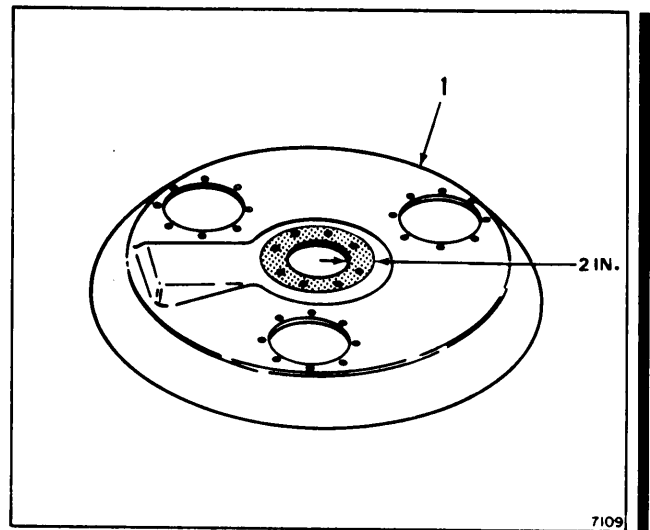



## 5-137.1 REPAIR COMPOSITE WEATHER-PROTECTIVE COVER (AVIM) (Continued)

5-137.1


### SURFACE ABRASION

2. **Outline area of damage (2)** with circle or oblong. Use pencil compass and straightedge.
3. Cut a piece of fiberglass laminate (E168.1) (3) large enough to overlap outline of damaged area (2) by 1.0 inch in all directions.

#### NOTE

Do not sand into glass fibers. Complete removal of primer is not necessary.

4. **Remove finish** down to primer from an area around damage (2) 1.5 inches larger in all directions than damage. Use abrasive paper (E8). Use cloths (E120) damp with acetone (E20) as needed to soften finish. Wear gloves (E186).
5. **Clean area of finish removal (4)**. Use clean cloth (E120) damp with acetone (E20). Wipe area dry with a clean cloth. Repeat until there is no residue on dry cloth.
6. **Prepare adhesive mixture.** (Refer to steps 106. through 109.) Apply coat of adhesive to area of finish removal (4).
7. **Remove protective film** from both sides of laminate piece (3). Carefully pull at right angle to direction of fibers.
8. Apply coat of adhesive to underside of laminate piece (3). Center piece over damage (2) and press down.
9. **Bond and cure repair.** (Refer to steps 110. through 122.)

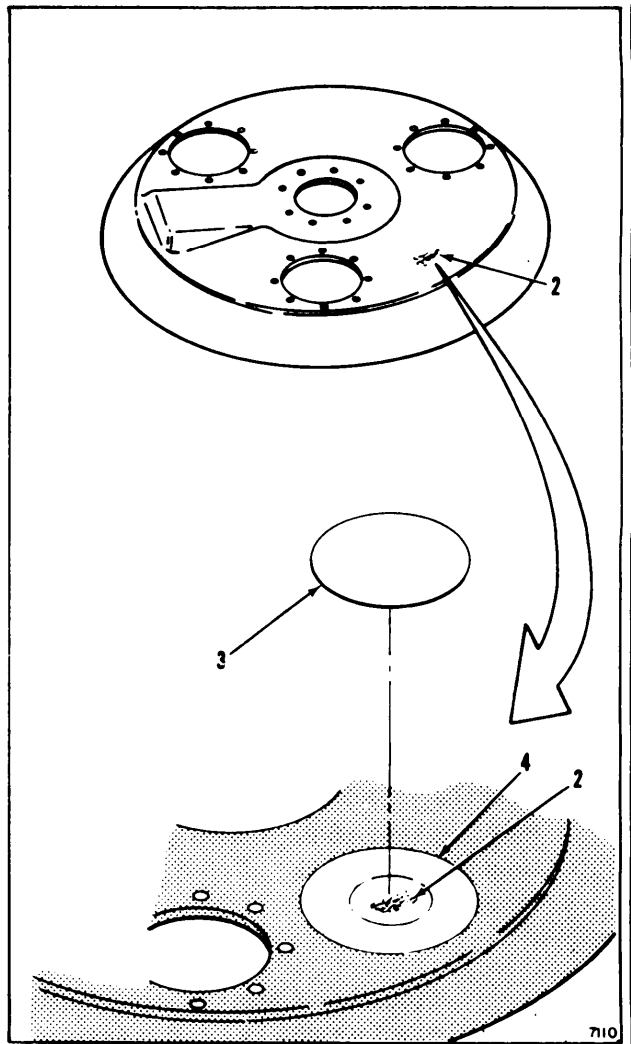

710

**GO TO NEXT PAGE**

5-494.2

Change 11

## 5-137.1 REPAIR COMPOSITE WEATHER-PROTECTIVE COVER (AVIM) (Continued)

5-137.1

### EDGE DELAMINATION

10. **Clean delamination (5).** Flush void (6) with acetone (E20) from plastic squeeze bottle (E366). Allow to dry for 15 minutes.
11. **Prepare adhesive mixture.** (Refer to steps 105 through 108.)
12. **Fill void (6) with adhesive.** Use a length of clean shim stock to work adhesive into void. Fill deepest part of void first to avoid trapping air.
13. **Close void (6) by hand.** Remove adhesive squeezeout. Use cloth (E120).
14. **Cover void (6) with peel ply (E270) (7).** Maintain pressure on closed void. Use clamps at light pressure.

#### CAUTION

Do not heat cover surface over 160°F (71°C). Higher temperatures can damage cover.

15. **Cure adhesive** at 150°F to 160°F (66°C to 71°C) for 2 hours. Use heat lamp. Monitor temperature with temperature indicating strips (E413).


#### NOTE

Serviceable cure can be achieved without heat at 70°F to 80°F (21°C to 27°C) in 24 hours. Pressure may be removed after 12 hours.

16. Remove clamps and peel ply (7).

### INSPECT

17. Go to FOLLOW-ON MAINTENANCE.

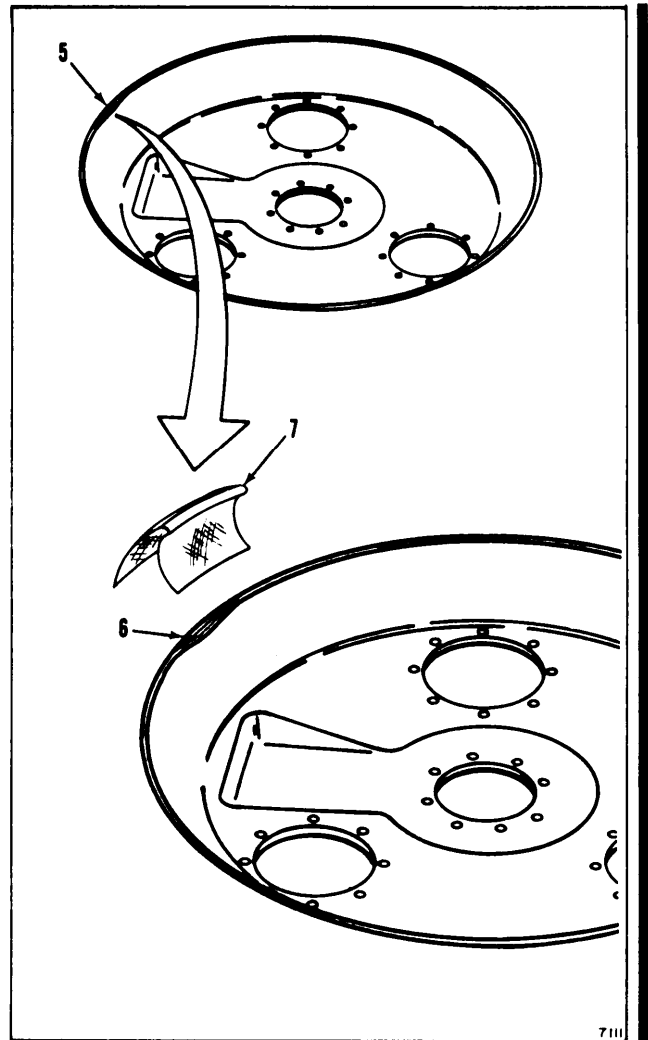

**GO TO NEXT PAGE**

**BOND VOID (TO 2 SQUARE INCHES)**

18. **Determine extent of void (8)** by tapping area with coin. Outline area of void with circle or oblong. Use pencil compass and straightedge.

**NOTE**


If area of void is greater than 2 square inches, go to step 40.

19. Cut a piece of fiberglass laminate (E168.1) (9) large enough to overlap outline of void (8) by 1.0 inch in all directions.

**NOTE**

Do not sand into glass fibers. Complete removal of primer is not necessary.

20. **Remove finish** down to primer from an area 1.5 inches larger in all directions than outline of void (8). Use abrasive paper (E8). Use cloths (E120) damp with acetone (E20) as needed to soften finish. Wear gloves (E186).
21. **Drill several small holes (10)** through void (8) near edge. Use a number 30 or 40 drill.
22. **Clean area** with a clean cloth (E120) damp with acetone (E20). Wipe area dry with clean dry cloth.
23. **Prepare mixture of adhesive.** (Refer to steps 106. through 109.) **Inject adhesive into void (8)** through holes (10) until void is full. Use hypodermic syringe (E380).
24. Cover holes (10) with tape (E390.1). Turn cover (1) over to prevent adhesive from running into core.
25. **Press down firmly on void (8).** Let excess adhesive squeeze out through holes (10).
26. **Remove protective film** from both sides of laminate piece (9). Carefully pull at right angle to direction of fibers.
27. Apply coat of adhesive to underside of laminate piece (9). Center piece over void (8) and press down.
28. **Bond and cure repair.** (Refer to steps 110. through 122.)

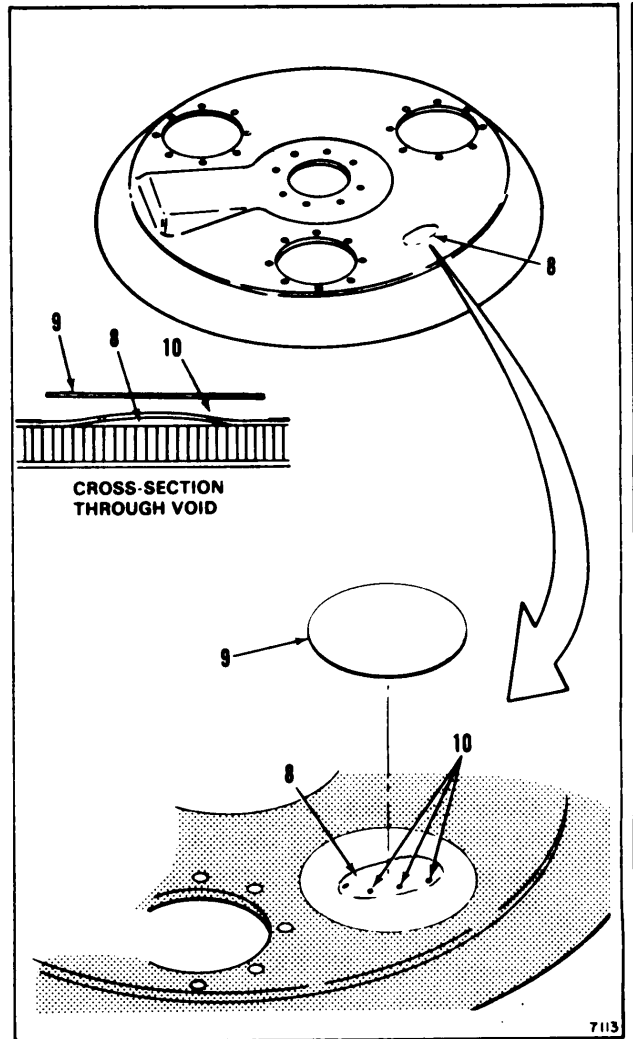

**5-137.1 REPAIR COMPOSITE WEATHER-PROTECTIVE COVER (AVIM) (Continued)**

5-137.1


**BOND VOID (OVER 2 SQUARE INCHES)**

- 29. **Determine extent of void (11)** by tapping area with coin. **Outline area (12)** of void with a circle or oblong. Use pencil compass or straightedge.


**NOTE**

Do not sand into glass fibers. Complete removal of primer is not necessary.

- 30. **Remove finish** to primer from an area 1.5 inches larger in all directions than outline (12). Use abrasive paper (E8). Use cloths (E120) damp with acetone (E20) as needed to soften finish. Wear gloves (E186).

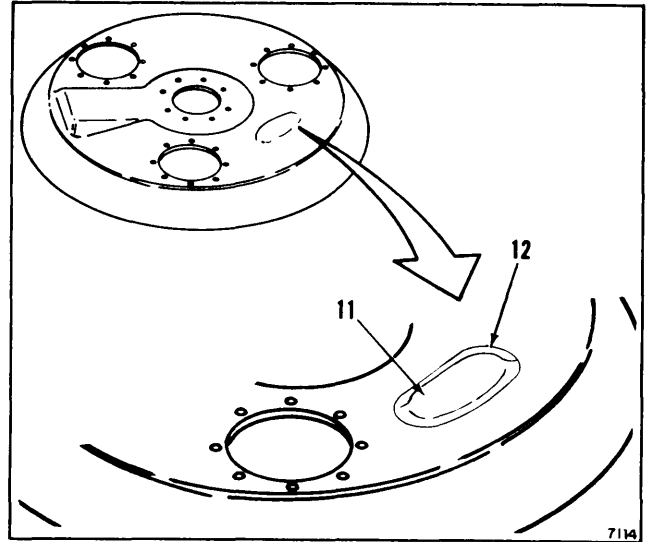


- 31. **Cut away unbonded skin.** Use craftsman's knife.
- 32. **Examine exposed core material (13).** If core is not damaged, clean the core and surrounding area with clean cloths (E120) damp with acetone (E20). Wipe dry with clean dry cloth. Go to step 47.
- 33. **If core (13) is damaged, cut out core to layer of adhesive on opposite skin (14).** Be careful not to damage skin. Use a chisel.
- 34. Roughen surface of adhesive on opposite skin (14) to remove gloss.

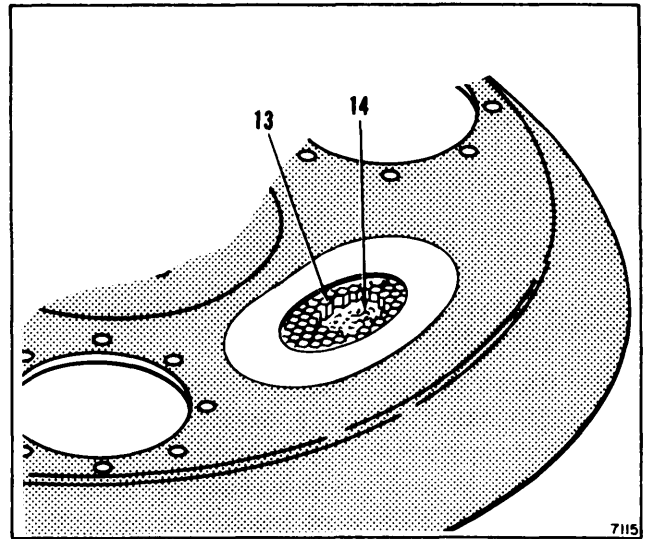

**NOTE**


Core material must be clean and dry for adhesive to hold.

- 35. **Cut core plug (15)** in shape of cavity (16) but 1/8 inch larger all around. Use core material (E150.3 or E150.1).
- 36. **Fit core plug (15)** into cavity (16). If plug does not protrude above level of existing core (13), go to step 43. If plug protrudes above level of core, go to step 37.

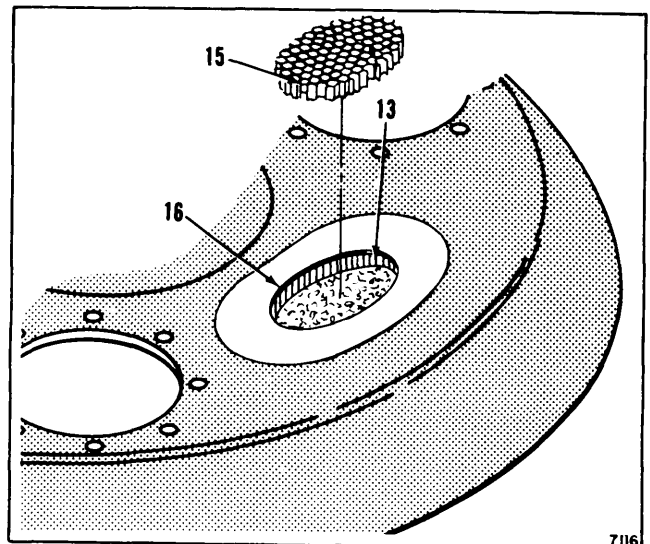


**GO TO NEXT PAGE**

37. Apply nylon tape (E390.1) (17) around cavity (16). Sand core plug (15) flush with tape. Use abrasive paper (E6) and sanding block long enough to span plug.
38. Remove tape (17). Matchmark core plug (15) to cover (1). Remove plug.
39. Clean cavity (16), surrounding area, and core plug (15). Use a vacuum cleaner and a clean cloth (E120) damp with acetone (E20). Wipe dry with a clean dry cloth. Repeat until there is no residue on dry cloth.
40. Prepare mixture of adhesive. (Refer to steps 106. through 109.) Apply coat of adhesive to sides and bottom of cavity (16).
41. Apply coat of adhesive to sides and bottom of core plug (15). Set plug in cavity (16). Align matchmarks if applicable.
42. Go to step 53.

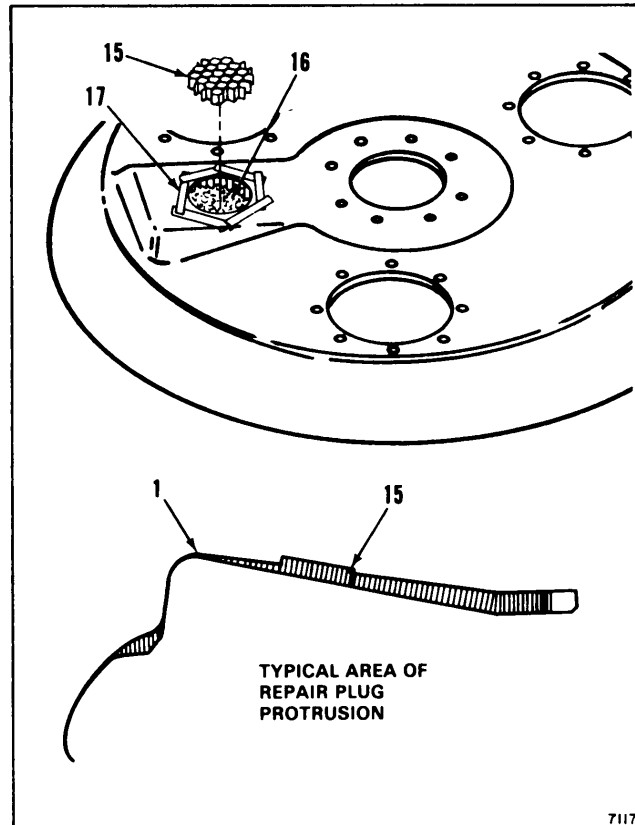

43. If core plug (15) is level with existing core (13), remove plug.
44. Clean cavity (16), surrounding area, and core plug (15). Use a vacuum cleaner and a clean cloth (E120) damp with acetone (E20). Wipe dry with a clean dry cloth. Repeat until there is no residue on dry cloth.
45. Prepare mixture of adhesive. (Refer to steps 106. through 109.) Apply coat of adhesive to sides and bottom of cavity (16).
46. Apply coat of adhesive to sides and bottom of core plug (15). Set plug in cavity. Align matchmarks if applicable.

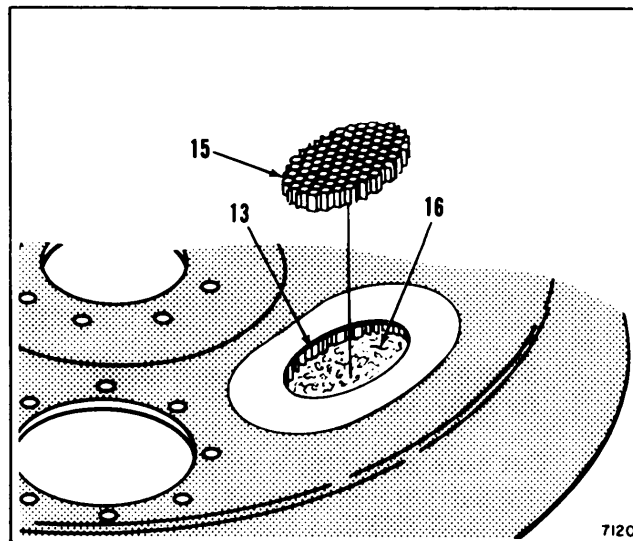


**GO TO NEXT PAGE**

**5-137.1 REPAIR COMPOSITE WEATHER-PROTECTIVE COVER  
(AVIM) (Continued)**

5-137.1

47. Cut two pieces of fiberglass laminate (E168.1) (18) to fit in cavity (16) over core (15).
48. Check that pieces (18) fit flush with cover (1). Remove pieces.
49. **Remove protective film** from both sides of two laminate pieces (18). Carefully pull at right angle to direction of fibers.
50. Prepare mixture of adhesive. (Refer to steps 106. thru 109.)
51. Coat underside of one piece (18) with adhesive. Press piece against plug (15) in cavity (16).
52. Apply coat of adhesive to top of installed piece (18) and underside of second piece. Install second piece in cavity over first piece. Press against piece to seat it flush with cover (1).

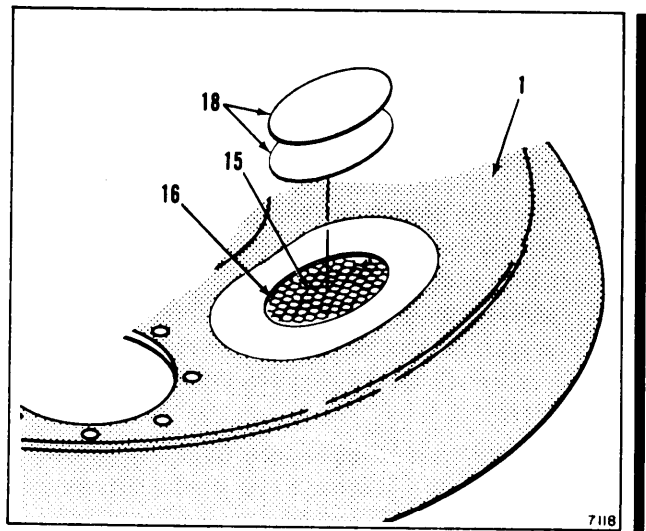**GO TO NEXT PAGE**

**NOTE**


At this point, repair surface may consist of flush core or fiberglass laminate. Laminate shown.

53. Cut two pieces of fiberglass laminate (E168.1) (19) large enough to overlap core (15) or laminate piece (18) 1.0 inch in all directions. If cutout is not circular, cut pieces so that fiber orientation between pieces will be 45 degrees when they are installed.
54. **Apply** coat of **adhesive** to top of **laminated piece (18)** or **core plug (15)**, as **applicable**, and to surrounding area of cover (1) to within 0.5 inch of finish removal line.
55. **Remove protective film** from each **side of two fiberglass laminate pieces (19)**. **Carefully pull at right angle to direction of fibers**.

**NOTE**

Laminate pieces must be installed so that fiber orientation between the two pieces will be 45 degrees when they are installed.

56. Coat underside of one laminate piece (19) with adhesive. Center piece over repair area and press in place.
57. Apply adhesive to top of installed piece (19) and underside of second piece. Position second piece on first and press in place.
58. Bond and cure repair. (Refer to steps 110 through 122.)

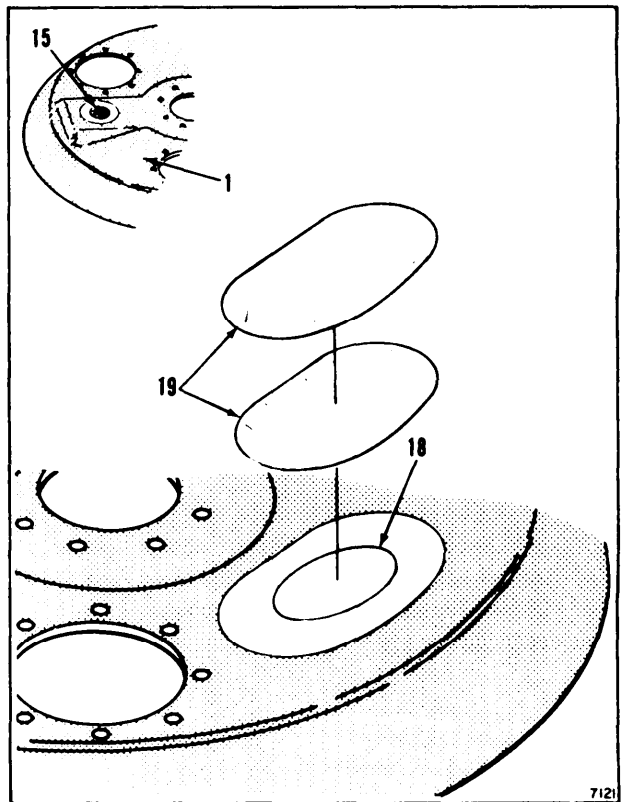

## 5-137.1 REPAIR COMPOSITE WEATHER-PROTECTIVE COVER (AVIM) (Continued)

5-137.1

### PUNCTURE THROUGH ONE SKIN AND CORE (TO 1 SQUARE INCH)

59. **Outline area of puncture (20)** with circle or oblong. Use pencil compass and straightedge.
60. **Remove finish** down to primer from an area 1.5 inches larger in all directions than outline around puncture (20). Use abrasive paper (E8). Use cloths (E120) damp with acetone (E20) as needed to soften finish. Wear gloves (E186).
61. **Prepare mixture of adhesive.** (Refer to steps 106. through 109.) **Fill puncture (20)** with adhesive mixture to surface of cover (1).

**CAUTION**


Do not heat cover surface over 160°F (71°C). Higher temperatures can damage cover.

62. **Cure adhesive** at 140°F to 160°F (60°C to 71°C) for 2 hours. Use heat lamp. Monitor temperature with temperature indicating strips (E413).

**NOTE**

Serviceable cure can be achieved without heat at 70°F to 80°F (21°C to 27°C) in 24 hours.

63. **Fair cured adhesive** to surface of cover (1), Use abrasive paper (E9).
64. **Clean area** of finish removal. Use clean cloth (E120) damp with acetone (E20). Wipe area dry with clean dry cloth. Repeat until there is no residue on dry cloth.

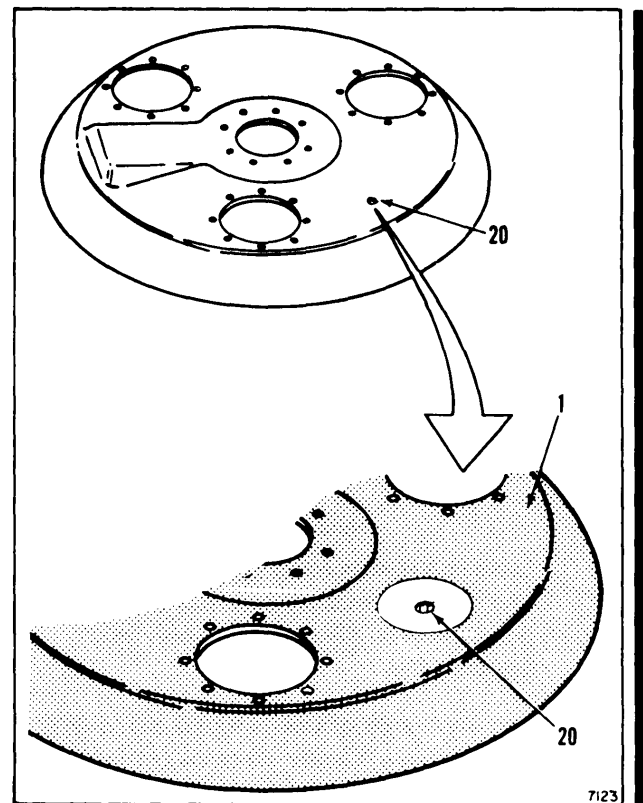

**GO TO NEXT PAGE**




65. Cut two pieces of fiberglass laminate (E168.1) (21) large enough to overlap puncture (20) 1.0 inch in all directions. If cutout is not circular, cut pieces so that fiber orientation between pieces will be 45 degrees when they are installed.
66. **Apply** coat of **adhesive** to top of **filled puncture (20)** and to surrounding area of cover (1) to within 0.5 inch of finish removal line.
67. **Remove protective film** from each side of two fiberglass laminate pieces (21). Carefully pull at right angle to direction of fibers.

**NOTE**

Laminate pieces must be installed so that fiber orientation between the two pieces will be 45 degrees when they are installed.

68. Coat underside of one laminate piece (21) with adhesive. Center piece over repair area and press in place.
69. Apply adhesive to top of installed piece (21) and underside of second piece. Position second piece on first and press in place.
70. Bond and cure repair. (Refer to steps 110. thru 122.)

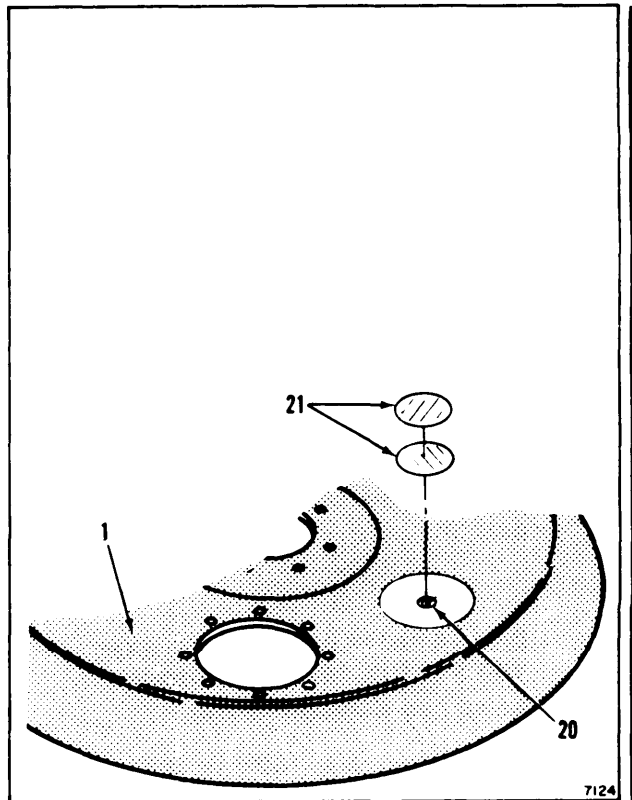**GO TO NEXT PAGE**

**5-137.1 REPAIR COMPOSITE WEATHER-PROTECTIVE COVER (AVIM) (Continued)**

**PUNCTURE THROUGH ONE SKIN AND CORE (OVER 2 SQUARE INCHES)**

71. **Outline area of puncture (22)** with a circle or oblong. Use pencil compass and straightedge.

**NOTE**



Do not sand into glass fibers. Complete removal of primer is not necessary.

72. **Remove finish** to primer from an area 1.5 inches larger in all directions than outline. Use abrasive paper (E8). Use cloths (E120) damp with acetone (E20) as needed to soften finish. Wear gloves (E186).

73. **Cut out punctured skin and core plug (23)** to layer of adhesive on opposite skin (24). Use craftsman's knife and chisel. Be careful not to damage skin.

74. Roughen surface of adhesive on opposite skin (24) to remove gloss.

75. **Complete repair with core plug (25) and fiberglass laminate (26 and 27).** (Refer to steps 35 thru 58.)

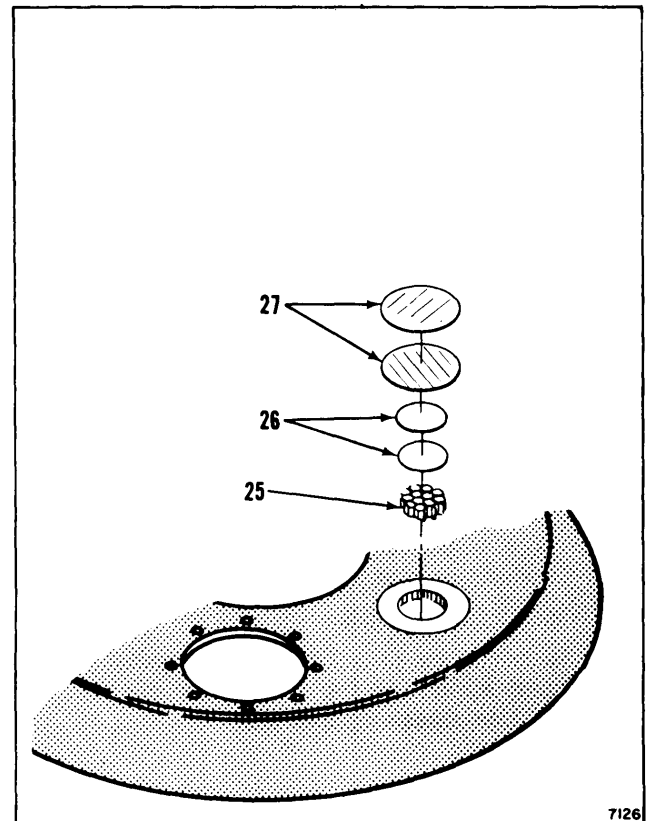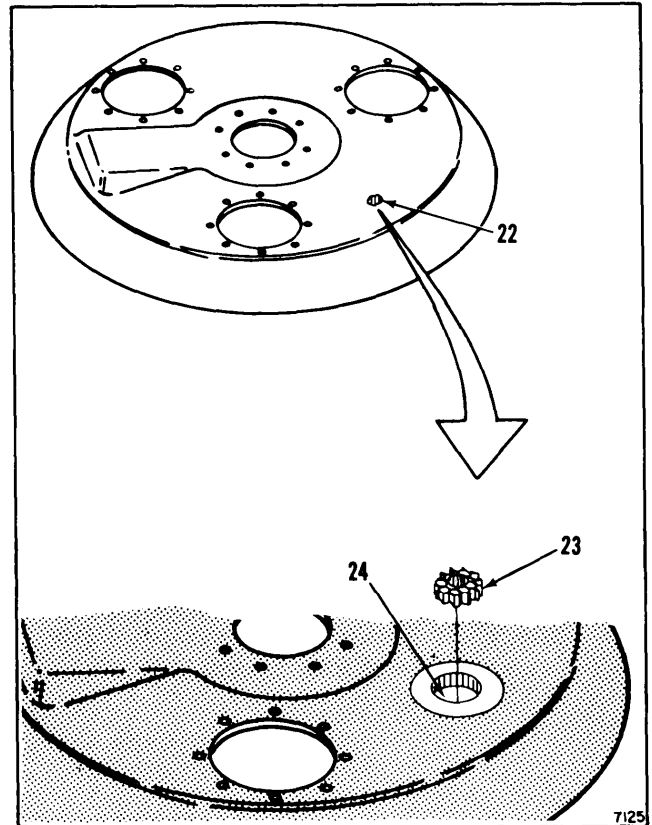


**PUNCTURE THROUGH BOTH SKINS AND CORE (UP TO 2 SQUARE INCHES)**

- 76. Outline area of puncture (28) on both sides of cover (1) with a circle or oblong. Use pencil compass and straightedge.

**NOTE**

Do not sand into glass fibers. Complete removal of primer is not necessary.

- 77. Remove finish down to primer from an area on both sides of cover (1) 1.5 inches larger in all directions than outline. Use abrasive paper (E8). Use cloths (E120) damp with acetone (E20) as needed to soften finish. Wear gloves (E186).
- 78. Cut out punctured skin and core plug (29). Work from both sides of cover (1) as needed. Use craftsman's knife.

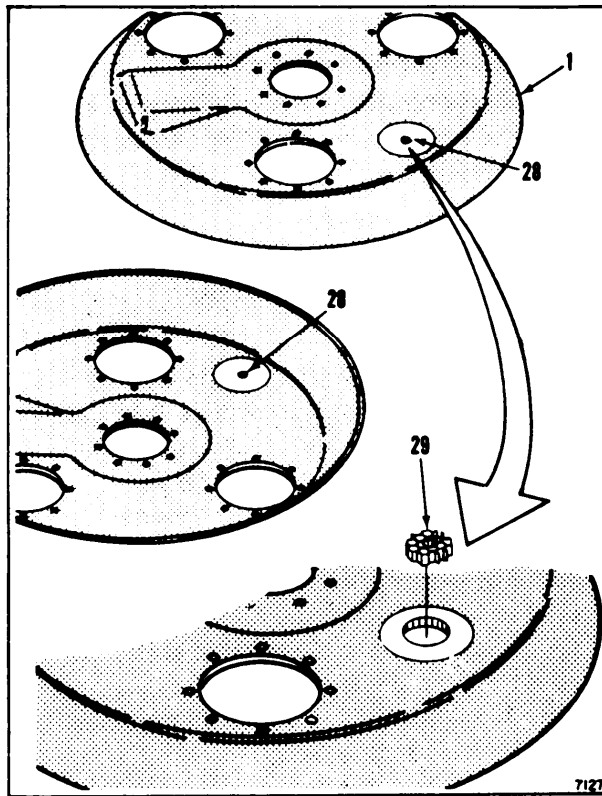

- 79. Cover cutout (30) on top of cover (1). Use nylon tape (E390.1) (31).
- 80. Prepare mixture of adhesive. (Refer to steps 105. through 108.) Fill cutout (30) from bottom of cover (1) to bottom surface (32) with adhesive (33).

**CAUTION**


Do not heat cover surface over 160°F (71°C). Higher temperatures can damage cover.

- 81. Cure adhesive at 140°F to 160°F (60°C to 71°C) for 2 hours. Use heat lamp. Monitor temperature with temperature indicating strips (E413).

**NOTE**

Serviceable cure can be achieved without heat at 70°F to 80°F (21°C to 27°C) in 24 hours.

- 82. Remove tape (31). Fair cured adhesive to cover surface on top and bottom of cover (1). Use abrasive paper (E9).

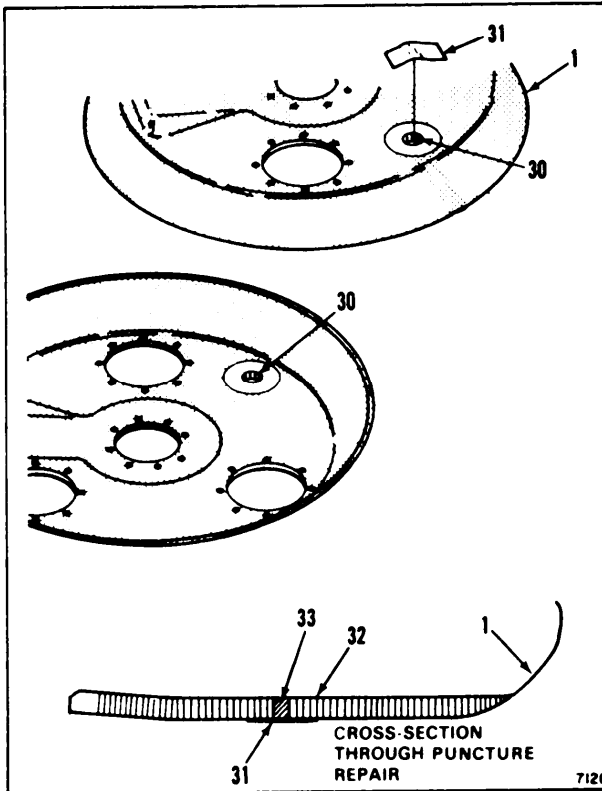


**GO TO NEXT PAGE**

## 5-137.1 REPAIR COMPOSITE WEATHER-PROTECTIVE COVER (AVIM) (Continued)

5-137.1

83. **Clean area of finish removal** on both sides of cover (1). Use clean cloths (E120) damp with acetone (E20). Wipe area dry with clean dry cloth. Repeat until there is no residue on dry cloth.
84. **Cut two pieces of fiberglass laminate (E168.1) (34)** for each side of cover (1) large enough to overlap adhesive (33) 1.0 inch in all directions.
85. **Prepare new mixture of adhesive.** (Refer to steps 106. through 109.)
86. **Cover each side of puncture repair** as follows:
  - a. Apply a coat of adhesive to cured adhesive (33) and area of finish removal.
  - b. **Remove protective film from each side of two fiberglass laminate pieces (34). Carefully pull at right angle to direction of fibers.**
  - c. Center one piece (34) over repair. Press down against cover (1).
  - d. Apply adhesive over installed piece (34). Position second piece on installed piece so that fiber orientation between pieces is 45 degrees. Press down against installed piece.
87. **Bond and cure repair.** (Refer to steps 110. through 122.)

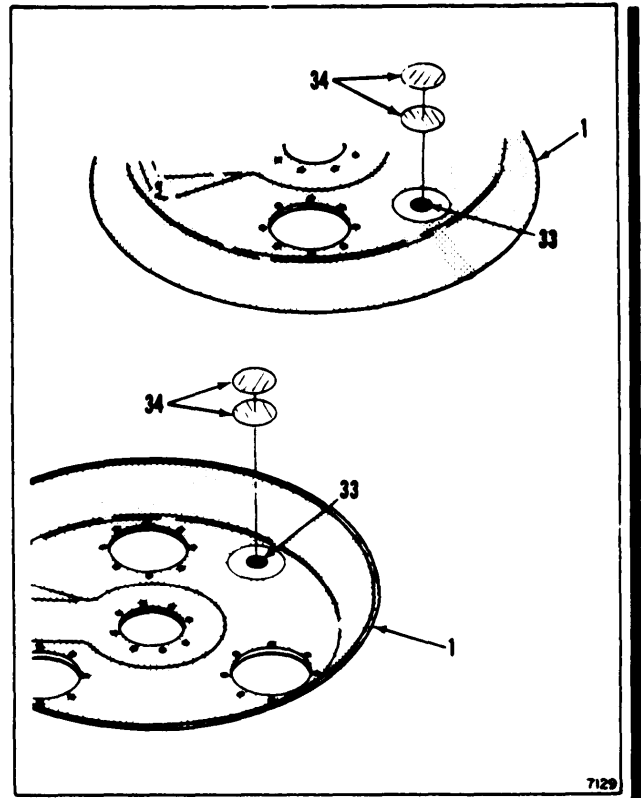


**GO TO NEXT PAGE**

## 5-137.1 REPAIR COMPOSITE WEATHER-PROTECTIVE COVER (AVIM) (Continued)


5-137.1

### PUNCTURE THROUGH BOTH SKINS AND CORE (OVER 2 SQUARE INCHES)

88. **Outline area of puncture (35)** on both sides of cover (1) with a circle or oblong. Use pencil compass and straightedge.
89. **Remove finish** from an area **on both sides** of cover (1) 1.5 inches larger in all directions than puncture (35). Use abrasive paper (E8). Use cloths (E120) damp with acetone (E20) as needed to soften finish. Wear gloves (E186).
90. **Remove punctured skin and core plug (36) from cutout (37)**. Work from both sides of cover (1) as needed. Use craftsman's knife.

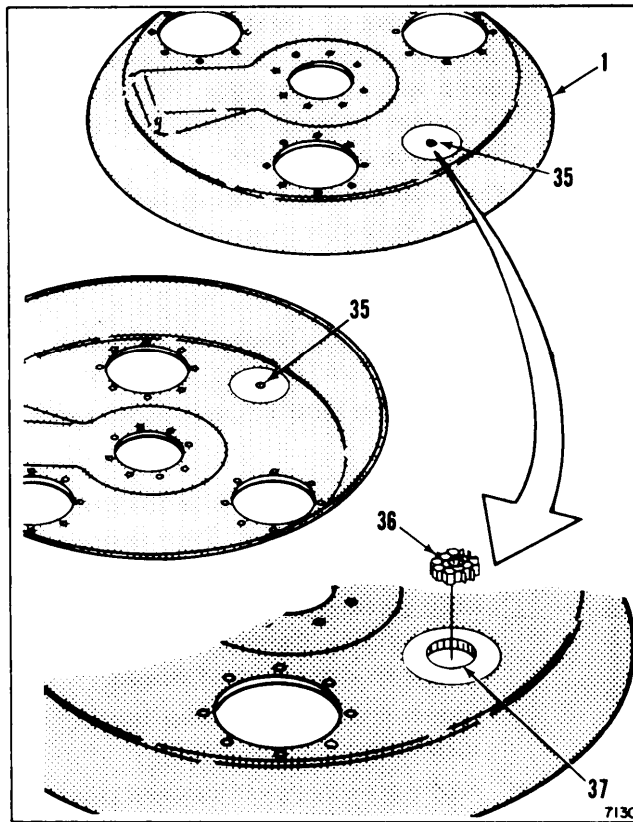

91. **Cut new core plug (38)** in shape of cut-out (37) but 1/8 inch larger all around. Use core material (E150.3).
92. **Fit core plug (38)** into cutout (37). **If plug is same height** as surrounding core (39), **go to step 97**. **If plug protrudes** beyond thickness of cover (1), **go to step 93**.

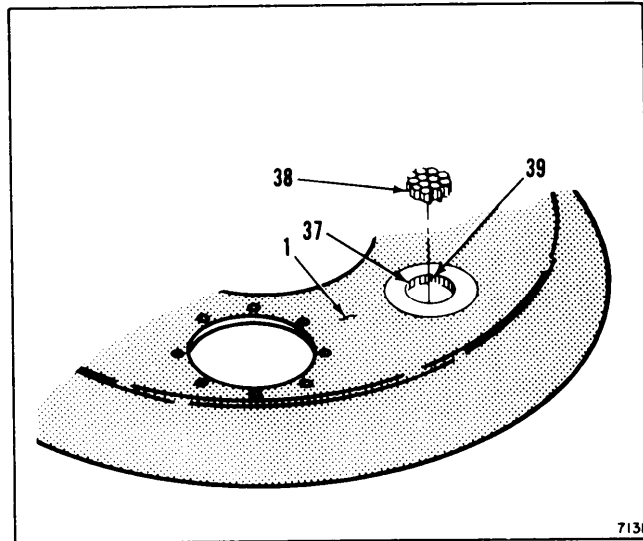


**GO TO NEXT PAGE**


## 5-137.1 REPAIR COMPOSITE WEATHER-PROTECTIVE COVER (AVIM) (Continued)

5-137.1

93. Remove plug (38) from cutout (37). Tape an aluminum plate (E71) (40) against cutout on underside of cover (1). Use nylon tape (E390.1).
94. Apply nylon tape (E390.1) (41) around cutout (37) on top side of cover (1). Install core plug (38) in cutout against aluminum plate (40). Sand plug flush with tape. Use abrasive paper (E6) and sanding block long enough to span plug.
95. Remove tape (41). Matchmark core plug (38) to cover (1). Remove plug.
96. Go to step 99.

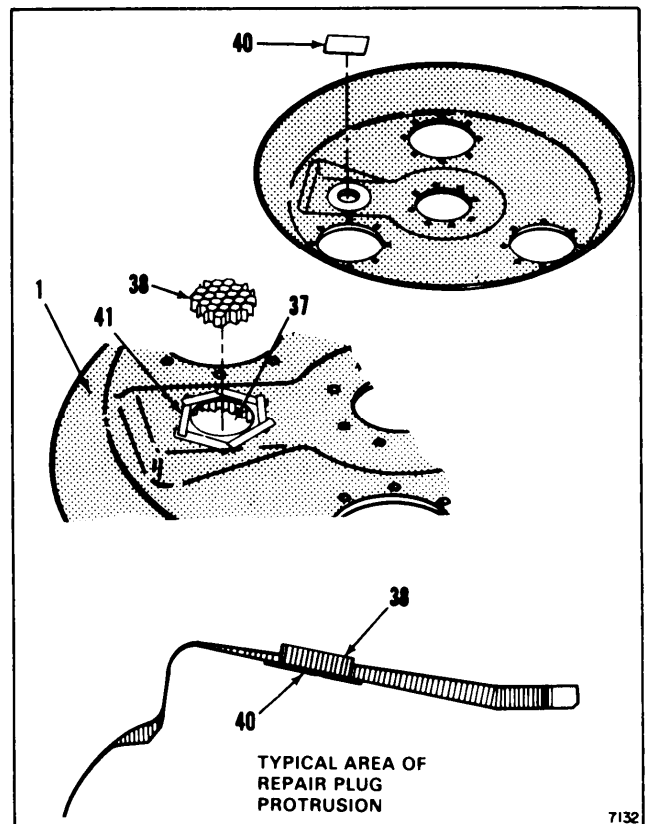


97. If core plug (38) is same height as surrounding core (39), cut two pieces of fiberglass laminate (E168.1) (42) to fit cutout (37) at top and bottom of cover (1).
98. Check that pieces of laminate (E168.1) (42) fit against installed core plug (38) flush with cover (1) on both sides. Remove laminate and plug.

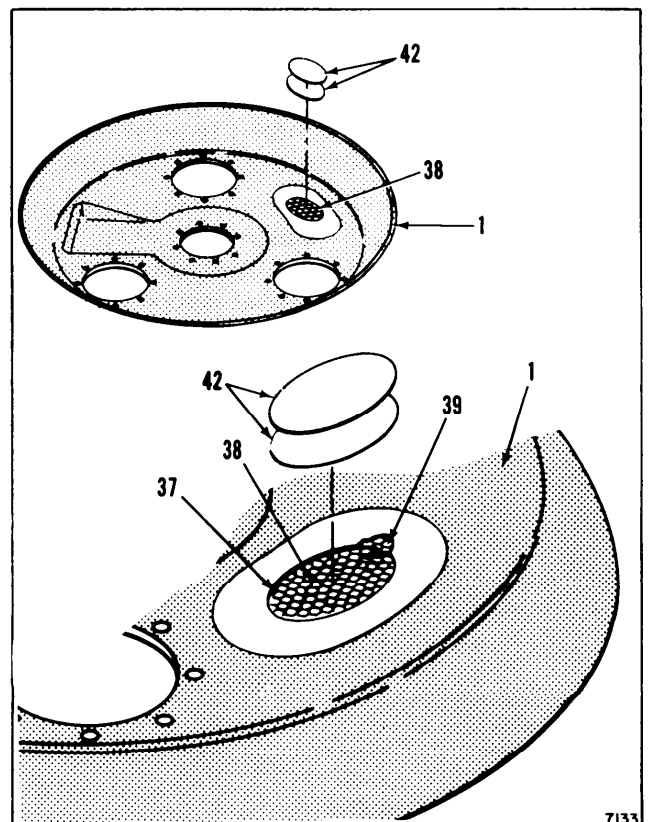

**GO TO NEXT PAGE**

99. Cut two pieces of fiberglass laminate (E168.1) (43) for each side of cover (1) large enough to overlap cutout (37) 1.0 inch in all directions. If cutout is not circular, cut pieces so that fiber orientation between pieces will be 45 degrees when they are in position.
100. Clean cutout (37) and surrounding area, core plug (38), and laminate (42) (if applicable). Use clean cloths (E120) damp with acetone (E20). Wipe dry with a clean dry cloth. Repeat until there is no residue on dry cloth.
101. Prepare mixture of adhesive. (Refer to steps 106. through 109.)
102. Apply coat of adhesive to sides of core plug (38). Set plug in cutout (37) flush with surrounding core (39) or top and bottom surfaces of cover (1), as applicable. **Align matchmarks, if applicable.**
103. If laminate pieces (42) are needed for filler, install over core (38) on each side of cover as follows:
- Remove protective film from each side of two fiberglass laminate pieces (42). Carefully pull at right angle to direction of fibers.
  - Apply a coat of adhesive to underside or one installed piece (42). Press piece against plug (38).
  - Apply coat of adhesive to top of installed piece (42) and underside of second piece. Press against second piece to firmly seat flush with surrounding skin of cover (1).

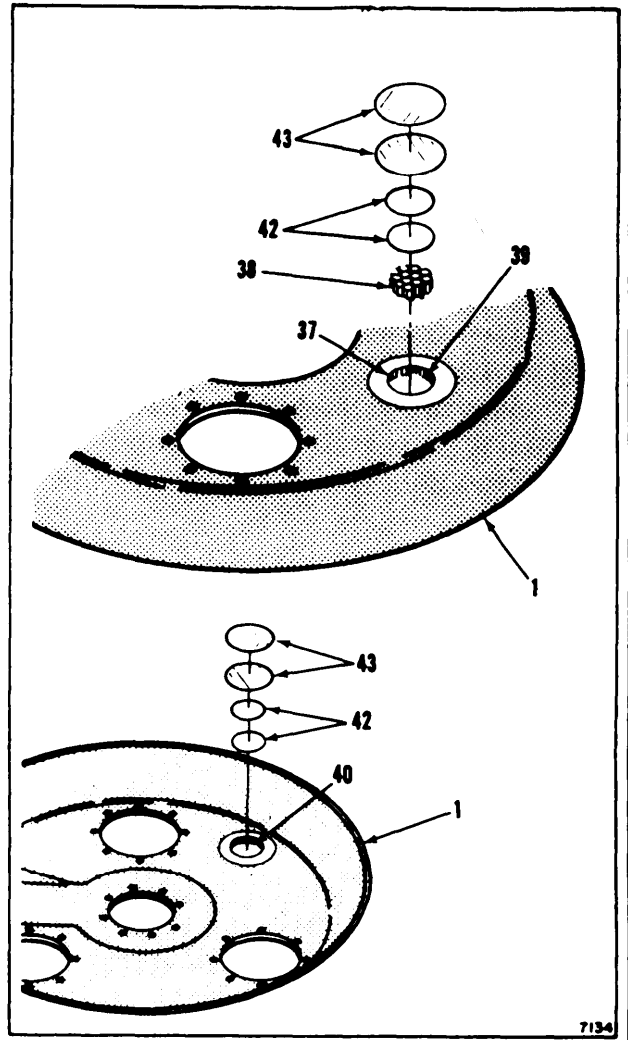

GO TO NEXT PAGE

5-494.16 Change 11

## 5-137.1 REPAIR COMPOSITE WEATHER-PROTECTIVE COVER (AVIM) (Continued)

5-137.1

104. **Cover each side of repair** as follows:


- a. Apply coat of adhesive to top of laminate piece (42) or core plug (38), as applicable, and to surrounding area of cover (1) within 0.5 inch of finish removal line.
- b. **Remove protective film** from each side of two fiberglass laminate pieces (43). Carefully pull at right angle to direction of fibers.

### NOTE

Laminate pieces must be installed so that fiber orientation between the two pieces will be at 45 degrees when the pieces are installed.

- c. **Coat underside** of one laminate piece (43) with adhesive. Center piece over repair area and **press in place**.
- d. Apply **coat of adhesive to top of installed piece (43) and underside of second piece**. Position second piece on first piece and **press it in place**.

105. **Bond and cure repair.** (Refer to steps 110. thru 122.)

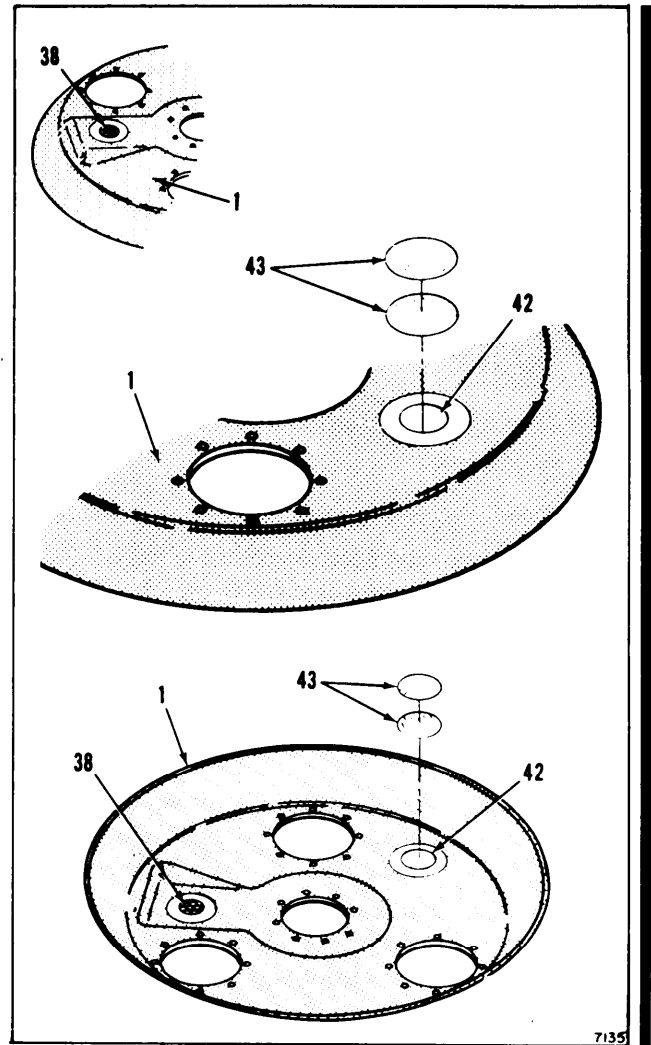

**GO TO NEXT PAGE**



**5-137.1 REPAIR COMPOSITE WEATHER-PROTECTIVE COVER  
(AVIM) (Continued)**

5-137.1

**ADHESIVE PREPARATION**

106. Use any of three adhesive mixtures for repair of weather-protective cover.

**NOTE**

All three adhesives cure in 2 hours at 150°F to 160°F (66°C to 71°C). A serviceable cure can be achieved at 70°F to 80°F (21°C to 27°C) in 24 hours. Pressure may be removed after 2 hours.

107. Mix adhesive EA9309.3NA (E40 or E41) as follows:

**NOTE**

Prepackaged adhesive (E40) is preferred. Use adhesive (E41) only if prepackaged kit is not available.

- a. Mix tube of adhesive (E40) according to instructions on kit.
- b. Prepare adhesive (E41) as follows:
  - (1) Weigh 100 parts of resin (pink paste) and 23 parts of hardener (blue liquid). Use trip balance.
  - (2) Mix parts in polyethylene cup (E157) until color is uniform dark pink. Use wood spatula (E424).

**NOTE**

Working life of adhesive (E41) is 30 minutes.

108. Mix adhesive EC-2216 (E27) as follows:

- a. Weigh 7 parts of Part A hardener (grey paste) and 5 parts of Part B base (cream paste). Use trip balance.
- b. Mix parts in polyethylene cup (E157) until color is uniform medium grey. Use wood spatula.

**NOTE**

Working life of adhesive (E43) is 1 to 2 hours.

109. Mix adhesive EPON 828 (E47.1) and hardener Versamid 125 (E194.1) as follows:

- a. Weigh equal parts of adhesive (light amber resin) and hardener (dark amber resin). Use trip balance.
- b. Mix parts in polyethylene cup (E157) until color is uniform. Use wood spatula (E424).

**NOTE**

Working life of adhesive is 1 hour.

**GO TO NEXT PAGE**


5-494.18 Change 11

## 5-137.1 REPAIR COMPOSITE WEATHER-PROTECTIVE COVER (AVIM) (Continued)

5-137.1

### BOND AND CURE REPAIR

110. Cover repair (44) with sheet of peel ply (E270) (45) and sheet of teflon-impregnated fabric (E170) (46). Each sheet shall be large enough to overlap repair 1 inch in all directions.
111. Cover teflon-impregnated fabric (E170) (46) with rubber pad (E318) (47). Cover rubber pad with glass cloth (E132) (48).
112. Surround cloth (E132) (48) with border (49) of sealing tape (E396). Keep tape clear of cloth.
113. Attach tube (50) to vacuum pump hose. Wrap end of tube with two layers of glass cloth (E132) (51). Secure cloth to tube with masking tape (E388) (52).
114. Place tube (50) on glass cloth (E132) (48). Wrap tube with sealing tape (E396) (52) where tube crosses border (49) of sealing tape (E396).
115. Press tube (50) against tape (49 and 52) to make an airtight seal. Check that glass cloth (51) on end of tube (50) is in direct contact with layer of glass cloth (48).
116. Cover area with polyvinyl sheet (E284) (53). Press sheet smoothly against tape (49) to make an airtight seal.
117. Start vacuum pump. Set pump for vacuum of about 30 inches Hg.
118. Shut off pump. Vacuum shall not drop more than 5 inches Hg in 5 minutes. Reposition polyvinyl sheet (53) or add tape (E396) (49 or 52) as needed.
119. Start pump again. Maintain vacuum of at least 20 inches Hg throughout adhesive cure.

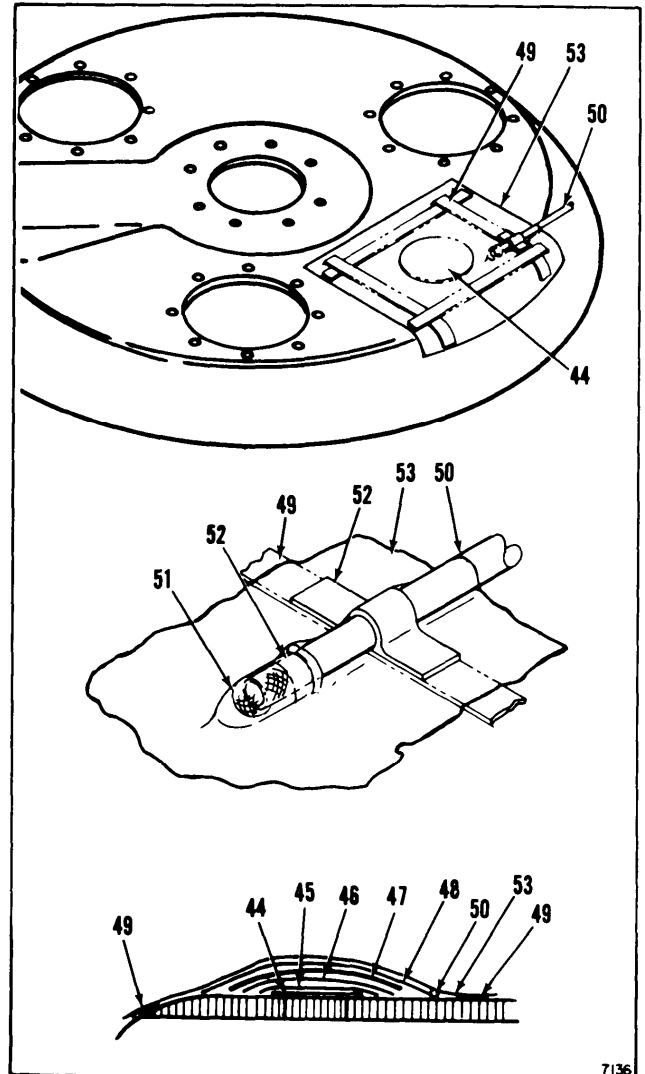

7136

**GO TO NEXT PAGE**

## 5-137.1 REPAIR COMPOSITE WEATHER-PROTECTIVE COVER (AVIM) (Continued)

5-137.1

### CAUTION


Do not exceed 160°F (71°C) at surface of cover. Damage to cover can occur.

120. Cure adhesive at 140°F to 160°F (60°C to 71°C) for 2 hours. Use heat lamp. Monitor temperature with temperature indicating strips (E413).

### NOTE

Serviceable cure can be achieved without heat at 70°F to 80°F (21°C to 27°C) in 24 hours. Vacuum may be removed after 2 hours.

121. Turn off vacuum pump. Remove vacuum bagging materials.
122. Chamfer circumference of fiberglass laminate patch (54). Fair adhesive squeezeout to cover (1) if needed. Use abrasive paper (E7).

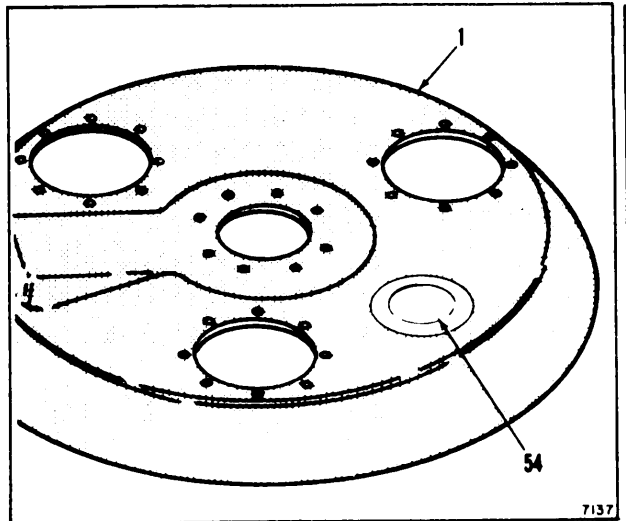

### INSPECT

### FOLLOW-ON MAINTENANCE:

Refinish repaired area (Task 5-82).

### END OF TASK

5-494.20

Change 11

5-138 INSTALL WEATHER PROTECTIVE COVER

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Torque Wrench, 30 to 150 Inch-Pounds

**Materials:**


Toluene (E423)  
Twine (E433) or Straps (E374)  
Sealant (E336)  
Cloth (E120)  
Gloves (E186)

**Personnel Required:**

Medium Helicopter Repairer (2)  
Inspector

**References:**

TM 55-1520-240-23P

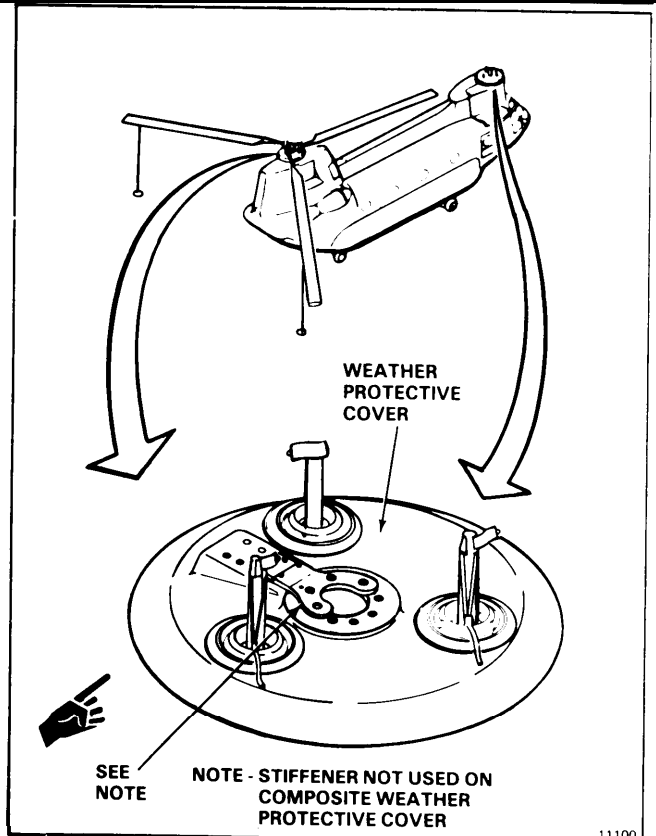


**WARNING**

Toluene (E423) can form toxic vapors if exposed to flame. Use in well-ventilated area, away from open flame. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

**NOTE**

Procedure is similar to install forward or aft weather protective cover. Differences are noted in text.

1. Clean mating surfaces of weather protective cover (1) and drive collar (2). Use cloth (E120) damp with toluene (E423). Wear gloves (E186).

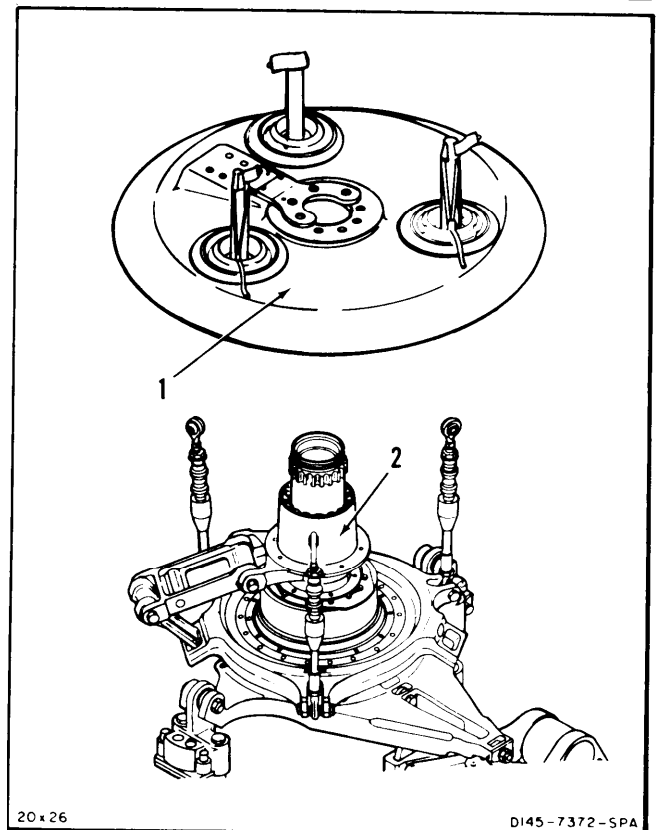

GO TO NEXT PAGE



**5-138 INSTALL WEATHER PROTECTIVE COVER (Continued)**

2. Install weather protective cover (1) as follows:

- a. Position raised section (3) of cover (1) over drive arms (4).
- b. Lower cover (1) slowly guiding three pitch links (5) through boots (6).


**NOTE**

Holes are not equally spaced.

- c. Align holes (7) in cover (1) with holes (8) in drive collar (2).
- d. Install 8 bolts (9), 8 nuts (10), and 24 washers (11 and 12). Install bolts with head (13) up and one washer (11) under head. **Torque bolts to 100 inch-pounds.**

**NOTE**

Three rivets (formerly used for phasing) are installed on the outer rim of the weather protective covers. If the word PHASING is stenciled on the cover, paint over with black lusterless paint (E215).

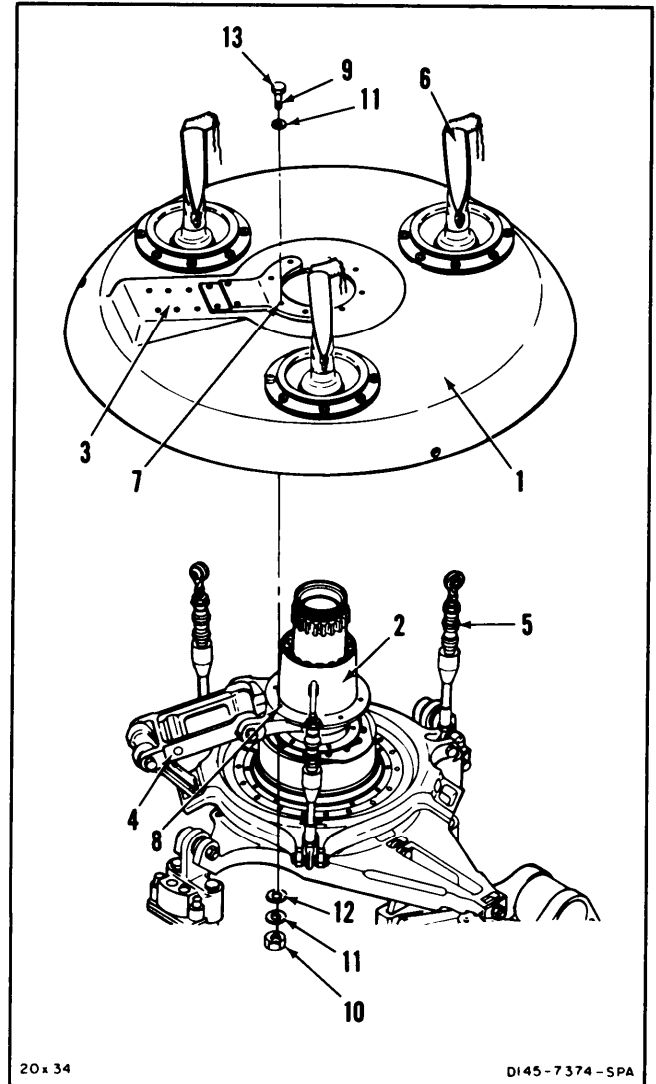


20x34

DI45-7374-SPA

**WARNING**

Sealant (E336) can irritate skin and cause burns. Avoid contact with skin, eyes, and clothing. In case of contact, immediately flush skin or eyes with water for at least 15 minutes. Get medical attention for eyes.

- 3. Apply sealant (E336) at junction of drive collar (2) and cover (1). Wear gloves (E186).
- 4. For forward cover (1) only, install spacer (14) on drive shaft (15). Then go to step 6.

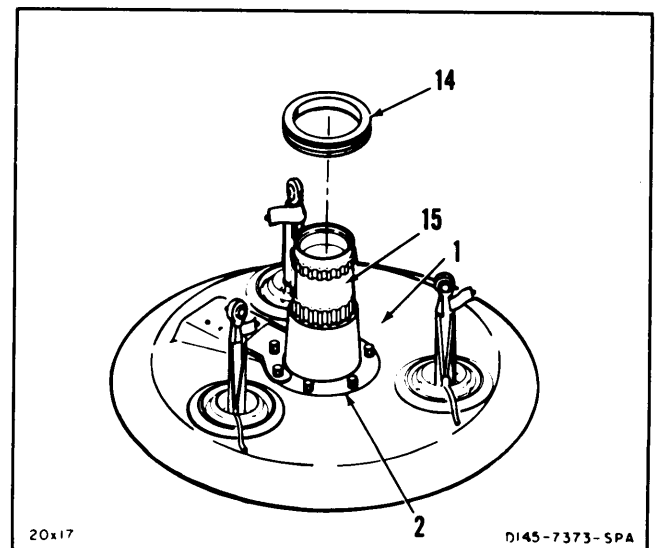


20x17

DI45-7373-SPA


**GO TO NEXT PAGE**

**5-138 INSTALL WEATHER PROTECTIVE COVER (Continued)**


5. For aft cover (1) only, install **centrifugal droop stop (16)** on drive shaft (15).

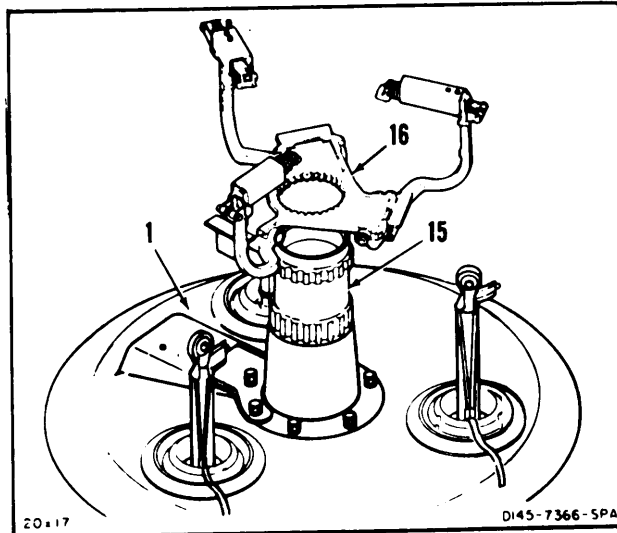

6. Pull tab (17) of interlocking slide fastener (zipper) (18) all the way up on three pitch link boots (6).
7. Close cones (19) around pitch links (5).

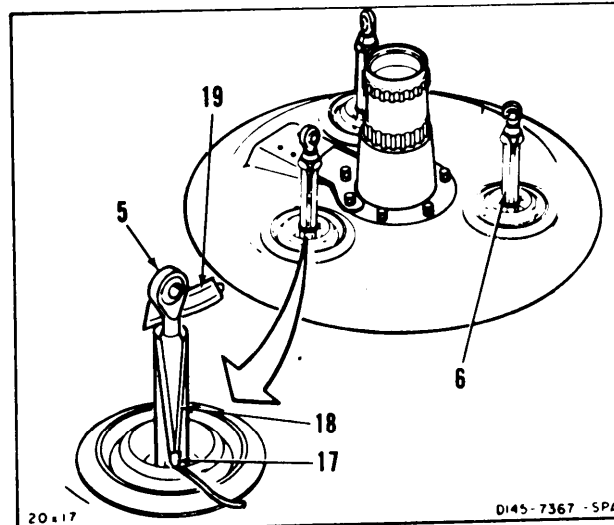

8. If using straps (E374) (20) secure three pitch link boots (6) as follows:
  - a. Install upper strap (E374) (20) through tabs on cones (19).
  - b. Install middle strap (E374) (20) through zipper slider (23).
  - c. Install lower strap (E374) (20) at bottom of zipper (18) over zipper pull (24).
  - d. Cut-off straps (20) 1/4-inch from locks (25).

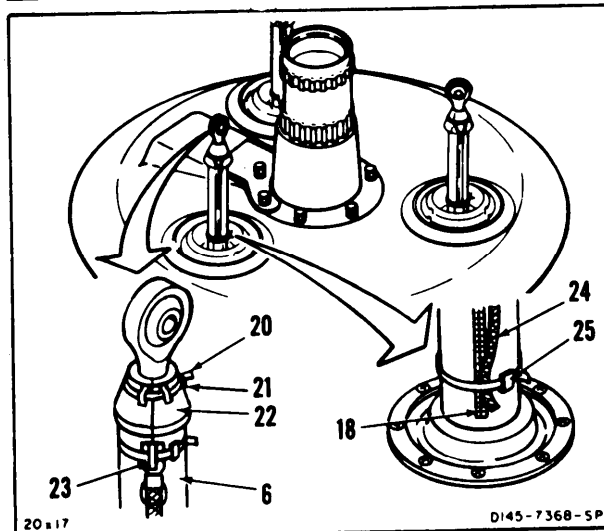


**GO TO NEXT PAGE**

## 5-138 INSTALL WEATHER PROTECTIVE COVER (Continued)

5-138

9. If using twine (E433) (26) **secure three pitch link boots (6)** as follows:
- Cut six 24-inch lengths of twine (E433) (26).
  - Tie a 1-inch loop (27) 6 inches from one end of twine (E433) (26) 24 inches in length.
  - Pass long end of twine (E433) (26) around boot (6) at bottom of zipper (18), and through loop (27).
  - Pull twine (E433) (26) tight and wrap around boot (6) four times. Apply enough tension to prevent boot (6) from sliding.
  - Tie ends of twine (E433) (26) together with double square knot (28).
  - Cut off ends of twine (E433) (26) 1/4-inch from knot (28).
  - Pass end of another 24-inch length of twine (E433) (26) around cone (22) through loops (21) three times.
  - Pull ends of twine tight (E433) (26) and tie together with square knot (29).
  - Pass long end of twine (E433) (26) through tab (30) of zipper (18), then through loops (21) around cone (22).
  - Pass twine (E433) (26) down through zipper slider (23) and back through loops (21) around cone (22).
  - Pull ends of twine tight (E433) (26) and tie together with double square knot (31).
  - Cut off twine (E433) (26) 1/4-inch from knot (31).
  - Repeat a. through l. for two remaining boots (6).

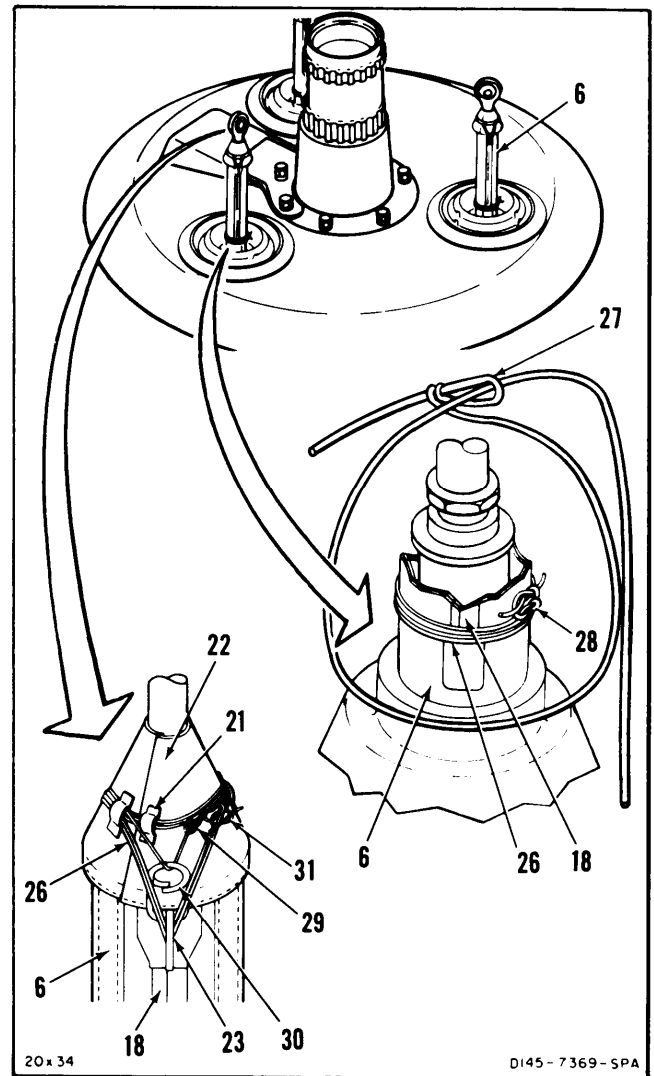

GO TO NEXT PAGE




**INSPECT**

## FOLLOW-ON MAINTENANCE:

Rotary-wing head installed (Task 5-9).

Rotary-wing blades installed (Task 5-84).

Work platforms closed (Task 2-2).

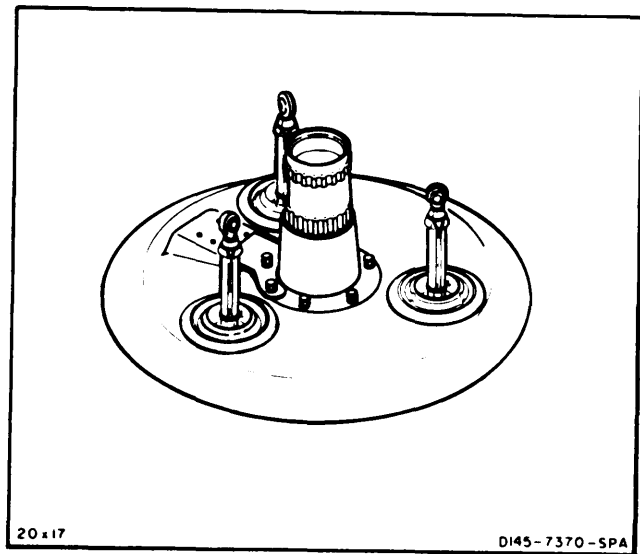**END OF TASK**

5-498

SECTION VI  
BLADE TRACKING

**5-139 PREPARE FOR TRACKING AND BALANCING  
(STROBEX/VIBREX)**

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

- Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692
- Strobex Blade Tracker 135M-11
- Vibrex Accessory Kit (T65)
- Vibrex Balancer 177M-6A

**Materials:**


- Lockwire (E233)
- Lockwire (E231)

**Personnel Required:**

- Medium Helicopter Repairer (2)
- Inspector

**Equipment Condition:**

- Battery Disconnected (Task 1-39)
- Electrical Power Off
- Hydraulic Power Off
- Tiedown Lines Connected to One Forward and One Aft Rotary-Wing Blade (Task 1-26)
- Forward and Pylon Work Platforms Open (Task 2-2)

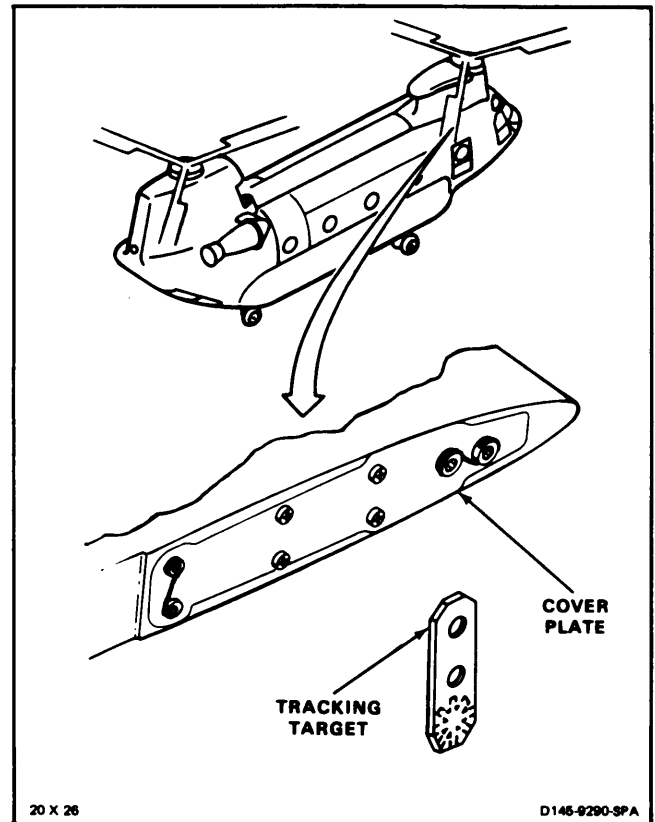

**NOTE**


Procedure is same to prepare forward or aft blades for ground tracking.

1. **Install serviceable reflective tape strips (1) on tracking targets (2, 3, and 4) as follows:**

**NOTE**


Green blade is on pitch housing with green band. Red blade is on pitch housing with red band. Yellow blade is on pitch housing with yellow band.

- a. For a red blade, peel off tape strip (1). Press into horizontal etched area of target (2).
- b. For a green blade, peel off tape strip (1). Press into vertical etched area of target (3).
- c. For a yellow blade, peel off tape strip (1). Press into diagonal etched area of target (4).

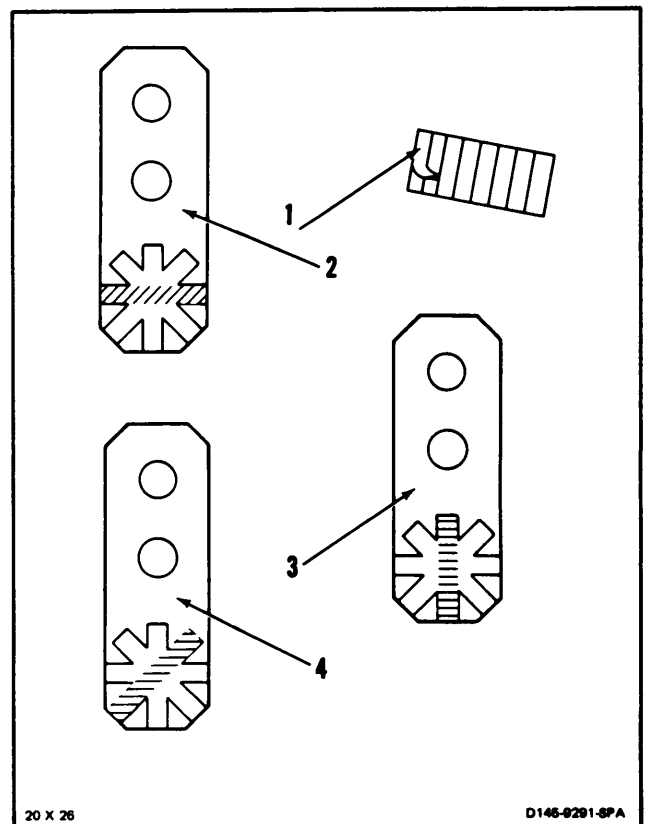

**GO TO NEXT PAGE**

2. Install target (2) with horizontal tape (5) on forward red blade (6) as follows:
  - a. Position blade (6) over tunnel (7). Use tiedown lines (8).
  - b. Remove lockwire from two screws (9). Remove screws and washers (9.1).
  - c. If computer-aided tracking and balancing will be performed, do the following:
    - (1) Remove lockwire from two screws (9.2). Remove screws and washers (9.3).
    - (2) Remove cover plate (10).
    - (3) Count the number of balance weights (10.1). Record the number for each blade color.
    - (4) Install tip cover (10). Install two screws (9.2) and washers (9.3).
  - d. Position target (2) on tip cover (10) with tape (5) toward cover.
  - e. Install target (2) using two screws (9) and washers (9.1). Torque screws (9) and, if applicable, (9.2) to 175 inch-pounds.
  - f. Lockwire screws (9), and, inapplicable, (9.2). Use lockwire (E233).
3. Install target (3) with vertical tape (11) on forward green blade (6). Follow procedure in step 2.
4. Install target (4) with diagonal tape (12) on forward yellow blade (6). Follow procedure in step 2.
5. Install targets (2, 3, and 4) on red, green, and yellow aft blades. Follow procedures in steps 2, 3, and 4.

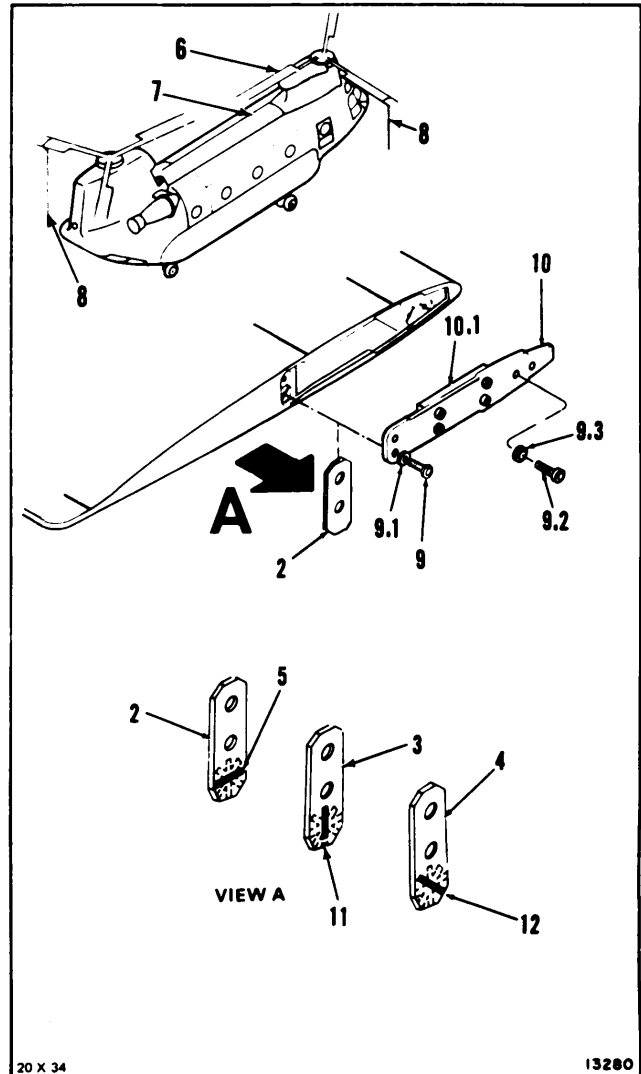


**5-139 PREPARE FOR TRACKING AND BALANCING (STROBEX/VIBREX) (Continued)**

6. Check that phase detector (13) and three interrupter brackets (14) are attached securely to forward swashplate (15).

**NOTE**

Phase detector and three brackets are installed on forward swashplate only. One bracket has two interrupters.

7. Position brackets (14) over detector by turning blades (6). **Check clearance between each of three interrupter brackets and phase detector (13).** Clearance shall be 0.015 to 0.025 inch.
- 7.1. Turn blades (6) to position double interrupter over phase detector (13).

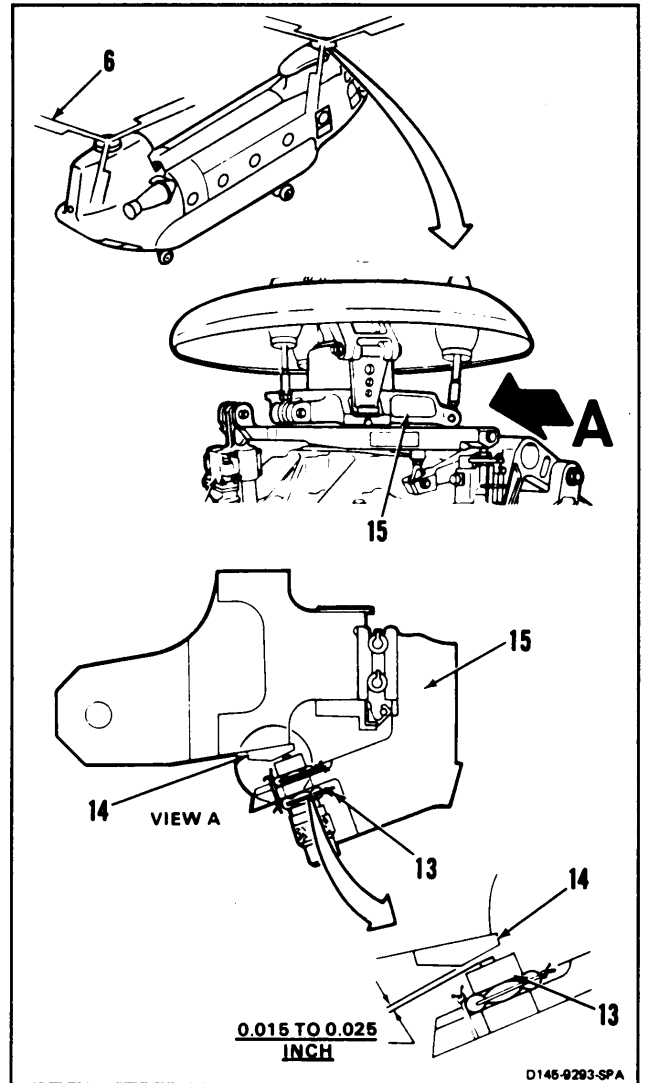

**NOTE**

Proper blade identification is necessary for correct blade tracking and balancing.

- 7.2. Record blade color (red, yellow, or green), tip target (—, | or /), and serial number for each blade (A, B, or Target) on each rotor head. If computer-aided, tracking and balancing will be performed, record number of balance weights on each blade. (Refer to step 2.c.)

CH-47 FIBREGLASS ROTOR BLADES  
CONFIGURATION RECORD

AIRCRAFT S/N \_\_\_\_\_

AIRCRAFT MODEL \_\_\_\_\_

DATE \_\_\_\_\_

NOTE: POSITION BLADES SO DOUBLE INTERRUPTER IS OVER MAGNETIC PICKUP

INITIAL CONFIGURATION		BLADE RECORD	BLADE COLOR	TIP TARGET CONFIGURATION	BLADE S/N	TIP WT (VIBREX)
		PWD TARGET				
		PWD A				
		PWD B				
		AFT TARGET				
		AFT A				
		AFT B				

POST FLIGHT CORRECTION		P/A		W/T		P/A		W/T		P/A		W/T	
PWD	BLADE												


11101

**GO TO NEXT PAGE**



5-139 PREPARE FOR TRACKING AND BALANCING  
(STROBEX/VIBREX) (Continued)

CH-47 FIBERGLASS ROTOR BLADES  
CONFIGURATION RECORD

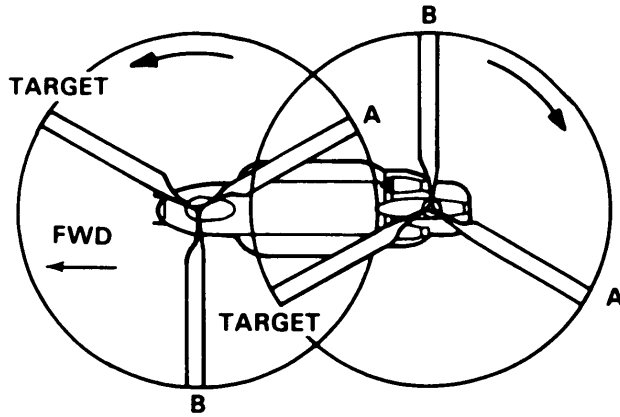

AIRCRAFT S/N \_\_\_\_\_

AIRCRAFT MODEL \_\_\_\_\_

DATE \_\_\_\_\_

NOTE: POSITION BLADES SO DOUBLE INTERRUPTER IS OVER MAGNETIC PICKUP

INITIAL  
CONFIGURATION

BLADE RECORD	BLADE COLOR	TIP TARGET CONFIGURATION	BLADE S/N	TIP WT VIBREX
FWD TARGET				
FWD A				
FWD B				
AFT TARGET				
AFT A				
AFT B				

POST FLIGHT CORRECTION

FWD BLADE	P/L	WT	P/L	WT	P/L	WT	P/L	WT	P/L	WT
AFT BLADE										


**CAUTION**

Accelerometer wires can be connected wrong to the accelerometer block, causing false balance readings.


**NOTE**

Ensure that accelerometer wires are correctly connected to accelerometer block. Accelerometer blocks and screws are part of Vibrex accessory kit.

8. Install forward accelerometer block (16) with opening facing center of aircraft. Use two screws (17). Remove plug (18) from dummy receptacle (19). Connect plug to accelerometer block (16).

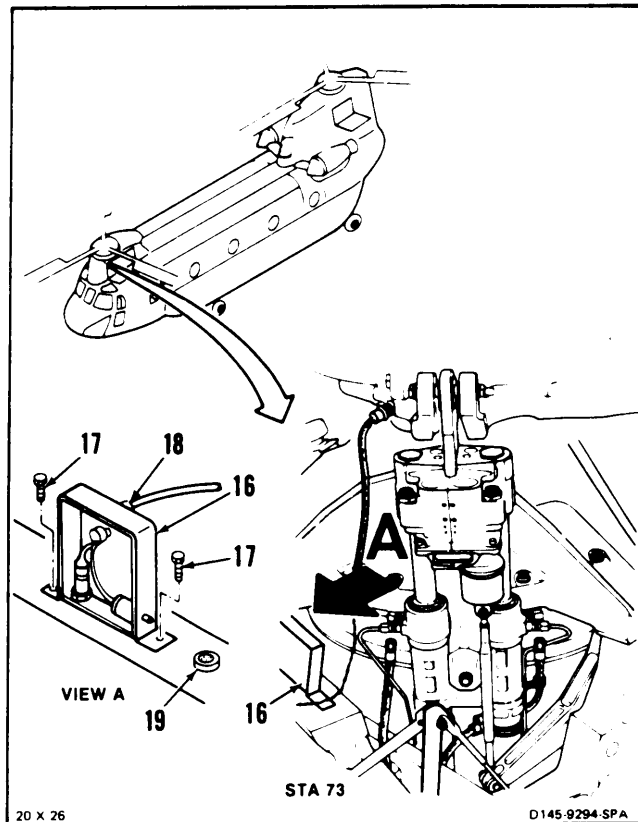


9. Install aft accelerometer block (16) with opening facing center of aircraft. Use two screws (17). Remove plug (18) from dummy receptacle (19). Connect plug to accelerometer block (16).

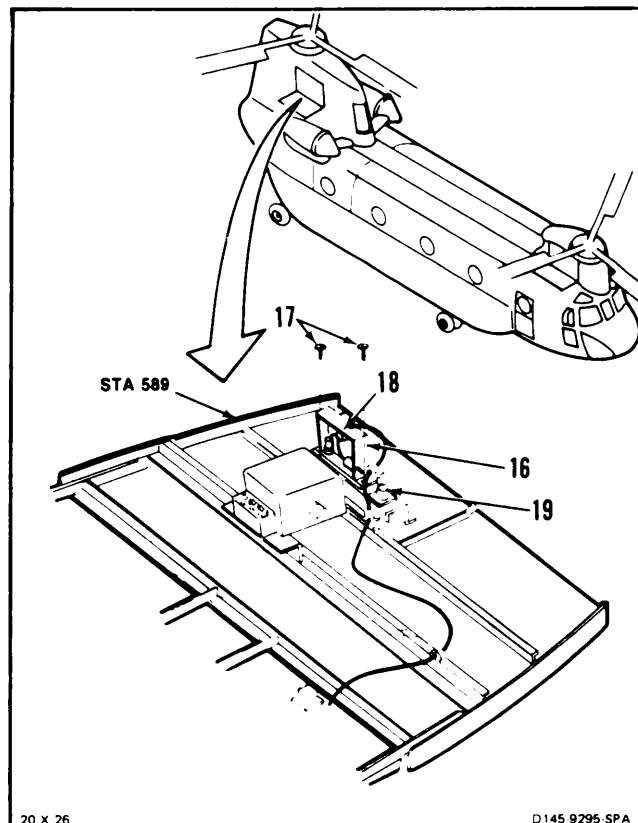



**5-139 PREPARE FOR TRACKING AND BALANCING  
(STROBEX/VIBREX) (Continued)**


10. **Connect rotary switch (20) to balancer (21) as follows:**
  - a. Install rotary switch (20) on balancer (21). Use two screw caps (22).
  - b. Connect short cable (23) to magnetic pickup CHANNEL A connector (24) on balancer (21).
  - c. Connect long-cable (25) to ACCELEROMETER A connector (26) on balancer (21).
  - d. Connect power cord (27) on balancer (21) to connector (28) on rotary switch (20).
11. Remove dust cap (29) from blade track receptacle (30). **Connect cable connectors (31)** to receptacle and to rotary switch (20) on balancer (21).
12. **Connect Strobex tracker cable (32)** to BLADE TRACK receptacle (33) on balancer (21).

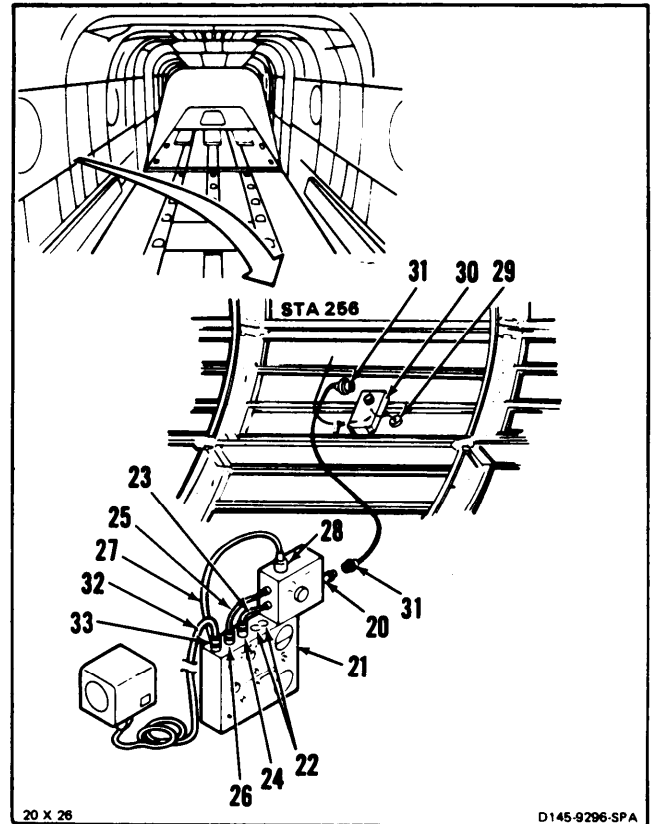

13. Check that BLADE TCK circuit breaker (34) on No. 2 power distribution panel (35) is closed.

**FOLLOW-ON MAINTENANCE:**

- Close work platforms (Task 2-2),
- Ground tracking (Task 5-140).

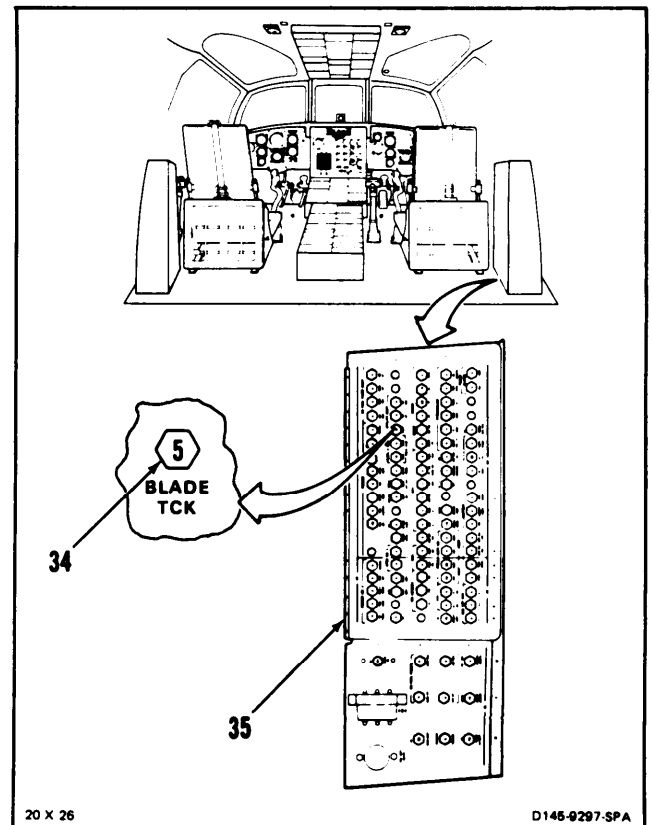

**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**

Strobex Tracking Cards

**Personnel Required:**

Medium Helicopter Repairer

Inspector

Army Rotary-Wing Aviator (2)

**References:**

TM 55-1520-240-10


Task 5-94

**Equipment Condition:**

Electrical Power On

Helicopter Prepared for Tracking and Balancing


(Task 5-139)

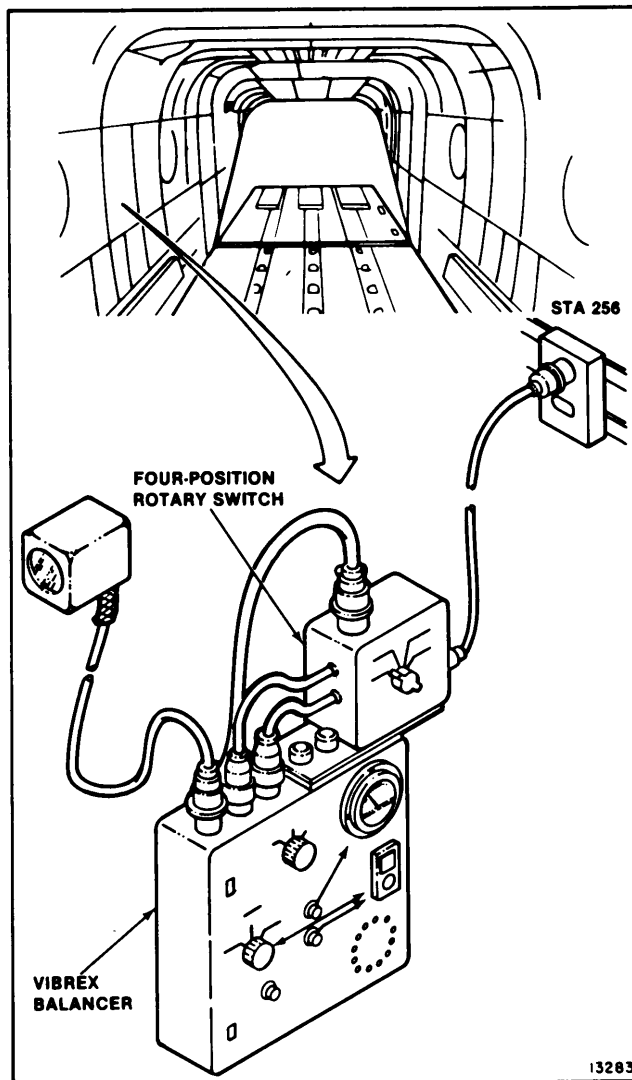

**WARNING**

When the rotors are turning, use care outside the helicopter. Stay outside of the rotor disk area in front of the helicopter. Do not climb on top of the helicopter until the blades come to a stop. Serious injury or loss of life can occur if personnel are struck by a moving blade.

1. Have pilot start engines and head helicopter into wind at 100 percent rotor rpm. Have pilot lock aft wheel swivels and apply parking brake (TM 55-1520-240-10).
2. Place chocks (1) against one aft wheel (2).

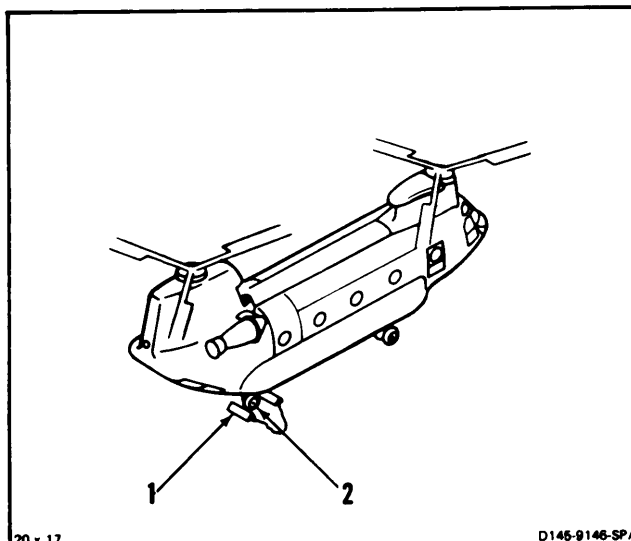


GO TO NEXT PAGE

**EQUIPMENT OPERATIONAL CHECK**

3. Perform equipment operational check as follows:

- a. Set MAGNETIC PICKUP switch (3) to COMMON.
- b. Set FUNCTION switch (4) to TRACK.
- c. Set RPM TUNE dial (5) to 225.
- d. Set RPM RANGE switch (6) to X1.

- e. Set INTERRUPTER LOGIC switch (7) to DOUBLE.
- f. Set selector switch (8) on tracker (9) to B.
- g. Set RPM dial (10) to 268.
- h. Point tracker (9) down and press trigger (11). Check that tracker flashes at steady 3-per-rev rate. Check that green 28 VDC power light (12) comes on.

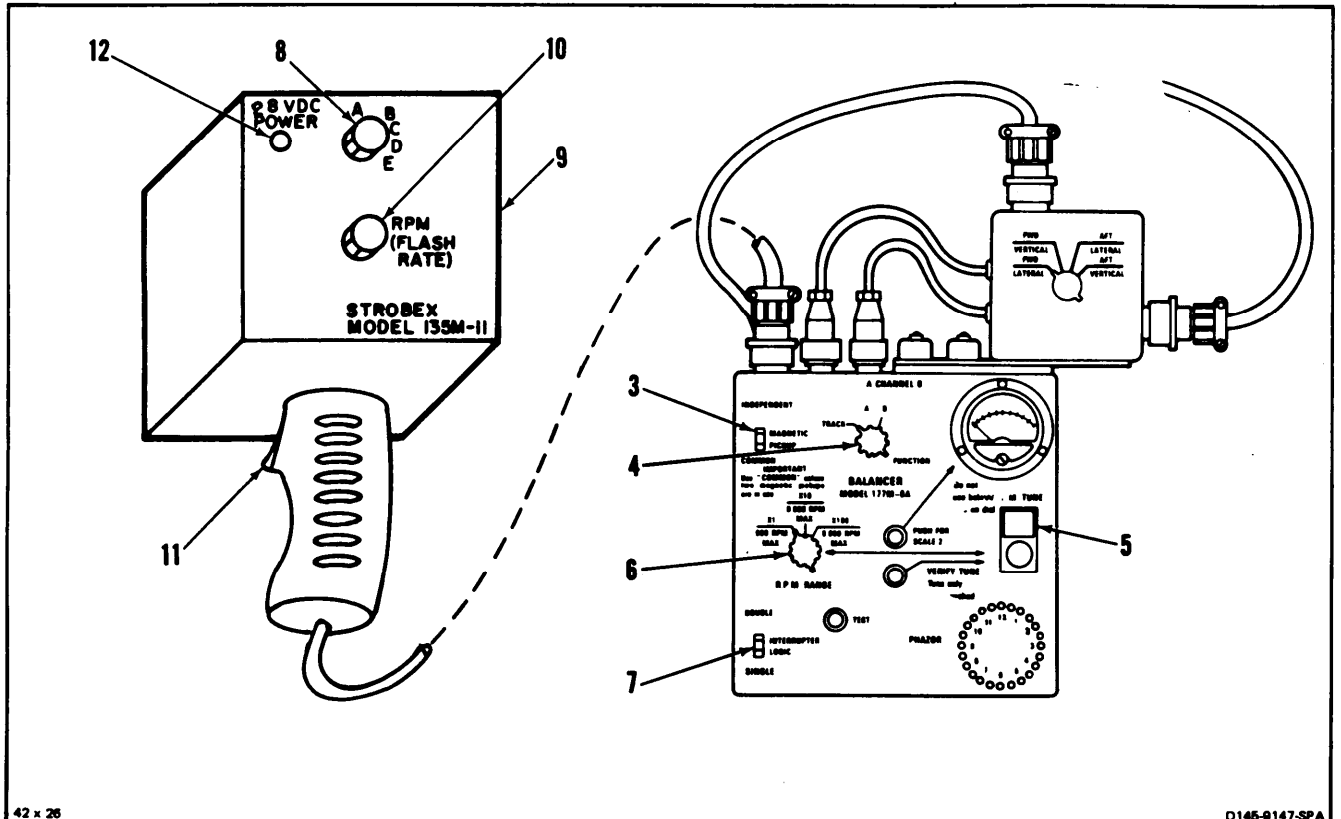

42 x 25


D145-9147-SPA

**FORWARD BLADE TRACKING**

**CAUTION**

Make sure cyclic trim actuators are not extended during tracking. Damage to droop stops and excess stress on the aft blades and rotor shaft will result.


4. Set SYSTEM SEL switch (13) on AFCS panel (14) to OFF. Check that CYCLIC TRIM switch (15) on AFCS panel is set to AUTO.

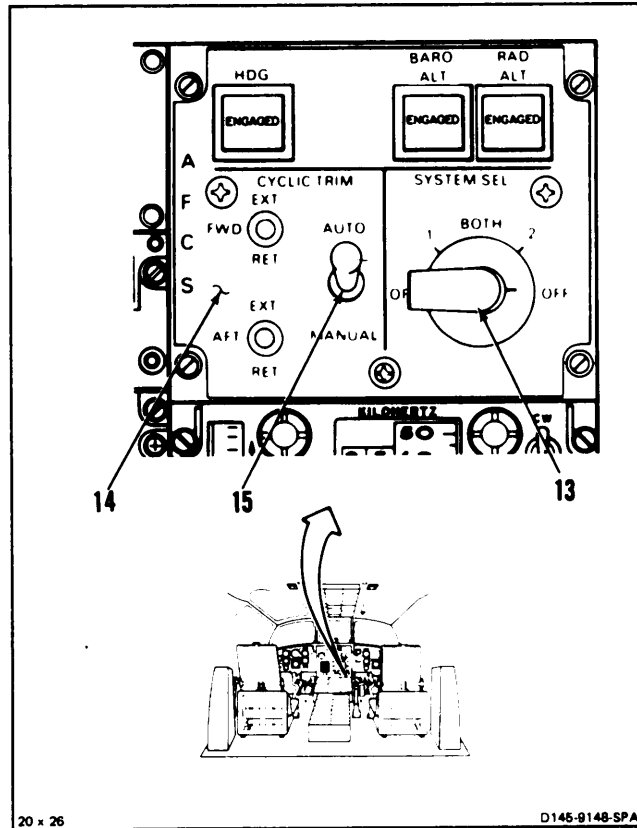

5. Point tracker (9) through pilot's windshield (16) at 1 o'clock.
6. Sight across top of tracker (9). Press trigger (11). Direct light flashes toward targets (17) on forward blades (18). Direct tracker from side-to-side in W pattern until tip targets are detected.

**NOTE**

Horizontal spread of tape strips as seen with tracker has no effect on track. Always use center blade as main focal point. Focus on pattern formed by center target and one other target at a time. Looking at pattern of all three targets at once is difficult.

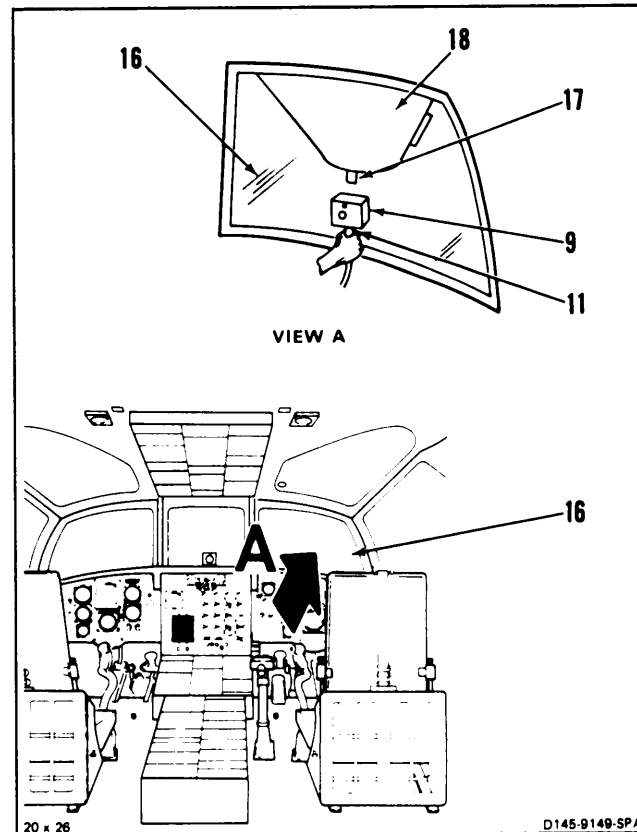

**NOTE**

- Green blade (vertical tape) is on pitch housing with green band. Red blade (horizontal tape) is on pitch housing with red band. Yellow blade (diagonal tape) is on pitch housing with yellow band.
  - If one or two blades have been replaced on the same rotor head, track to a blade that was not changed.
7. View pattern of tapes (19, 20, and 21) on targets (17). Note which tape is in center. Track to center blade (18), unless center blade is a replacement blade. Yellow blade is shown in center here.
  8. Observe the relative vertical positions of the top and center blades. Estimate the distance between center of tape markers (19) and (20).

**NOTE**

Tracking tape is 0.20 inch wide and 1.0 inch long. Five tape widths equal 1.0 inch.

9. Mark the top and center blade tape patterns on the Track and Balance Worksheet (22) in their relative positions. Record the estimated distance between tape centers.
10. Observe the relative vertical positions of the center and bottom blades. Estimate the distance between centers of tape markers (19) and (21).
11. Mark the bottom blade tape pattern on worksheet (22) in its position relative to the center blade. Record the estimated distance between tape centers.
12. Add the total distance between markers (20) and (21).

FLIGHT CONDITION	FWD ROTOR		
GROUND	TRACK 1 O'CLOCK		
	TRACK 1 O'CLOCK		
HOVER	BALANCE	IPS	CLOCK ANGLE
	VERTICAL		
	LATERAL		
	TRACK 1 O'CLOCK		
130 KTS	BALANCE	IPS	CLOCK ANGLE
	VERTICAL		
	LATERAL		
	TRACK 1 O'CLOCK		

11102

TRACK AND BALANCE WORK SHEET

FLIGHT NO: \_\_\_\_\_

AIRCRAFT S/N: \_\_\_\_\_

DATE: \_\_\_\_\_

AIRCRAFT MODEL: \_\_\_\_\_

FLIGHT CONDITION	FWD ROTOR			AFT ROTOR		
	GROUND	TRACK 1 O'CLOCK			TRACK 11 O'CLOCK	
HOVER	TRACK 1 O'CLOCK			TRACK 11 O'CLOCK		
	BALANCE	IPS	CLOCK ANGLE	BALANCE	IPS	CLOCK ANGLE
	VERTICAL			VERTICAL		
	LATERAL			LATERAL		
130 KTS	TRACK 1 O'CLOCK			TRACK 11 O'CLOCK		
	BALANCE	IPS	CLOCK ANGLE	BALANCE	IPS	CLOCK ANGLE
	VERTICAL			VERTICAL		
	LATERAL			LATERAL		

13282


**AFT BLADE TRACKING**

13. Point tracker (9) through aft right window (27) at 3 o'clock.
14. Sight across tracker (9). Press trigger (11). Direct light flashes toward targets (17) on aft blades (28). Sweep lamp from side-to-side in W pattern until targets are detected.
15. View pattern of tapes (19, 20, and 21) on targets (17). Track to center blade unless it is a replacement blade. Red blade shown in center here.
16. Observe the relative vertical positions of the top and center blades. Estimate the distance between centers of tape markers (19) and (21).

**NOTE**

Tracking tape is 0.20 inch wide and 1.0 inch long. Five tape widths equal 1.0 inch.

17. Mark the top and center blade tape patterns on the Track and Balance Worksheet (22) in their relative positions. Record the estimated distance between tape centers.
18. Observe the relative vertical positions of the center and bottom blades. Estimate the distance between centers of tape markers (21) and (20).
19. Mark the bottom blade tape pattern on worksheet (22) in its position relative to the center blade. Record the estimated distance between tape centers.
- 19.1. Add the total distance between markers (19) and (20).
20. Have pilot stop engines (TM 55-1520-240-10).
21. If total out-of-track distance in steps 12. and 19.1. was less than two tape widths (0.4 inch), go to FOLLOW-ON MAINTENANCE.

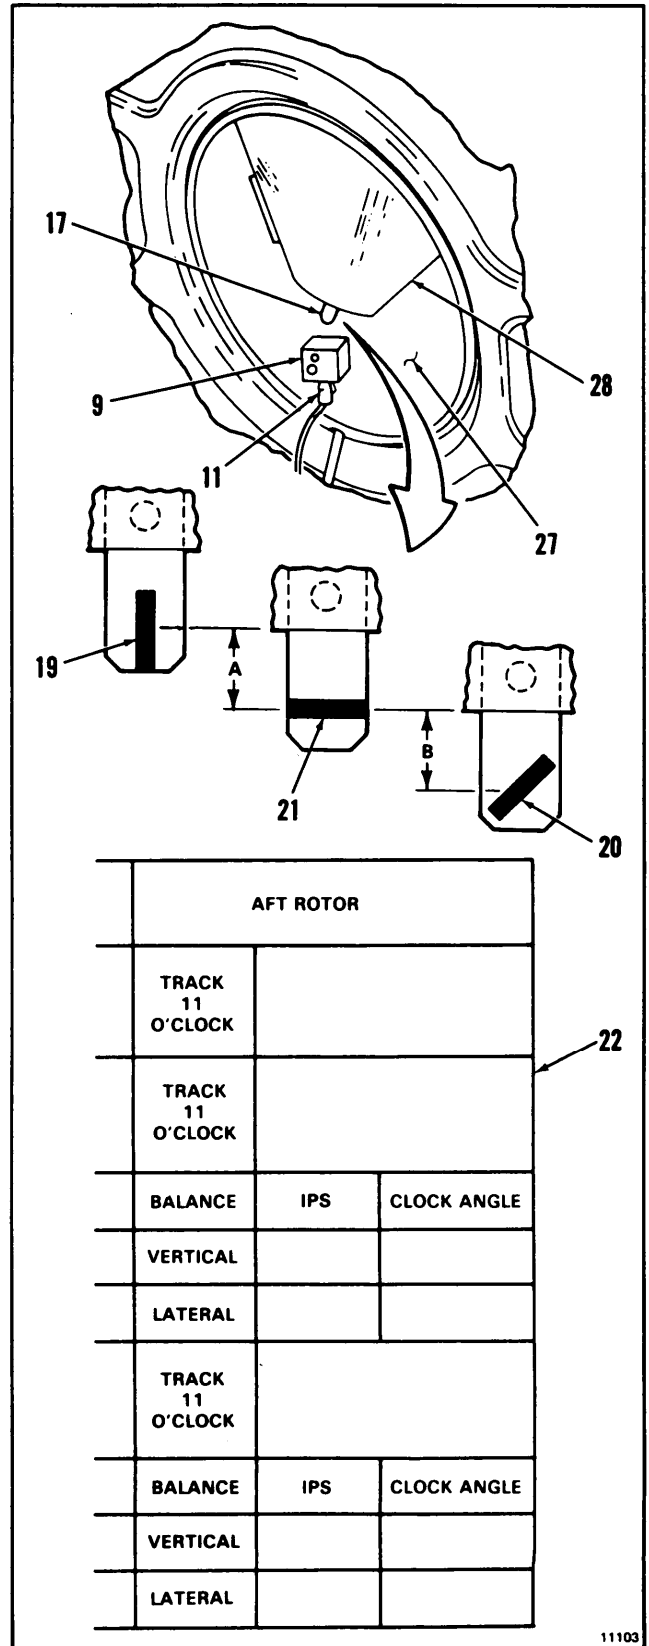






22. Use following guidelines to correct track:


**NOTE**

Horizontal spread of targets is normal and requires no correction.


- a. Targets must overlap vertically. Maximum center-to-center spread is two tape widths between top and bottom blades.
- b. Target patterns (32 and 33) are ideal and require no correction.

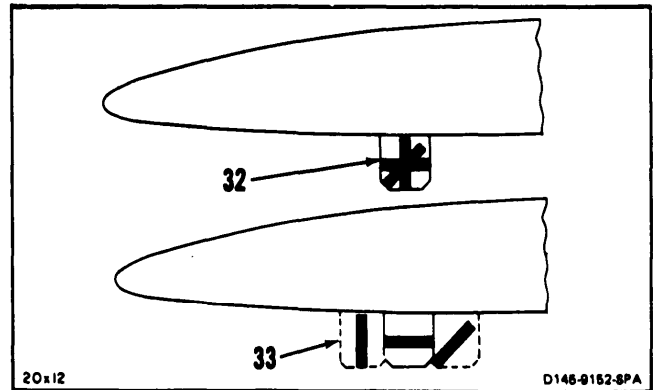


- c. Track patterns (34 and 35) require no correction.

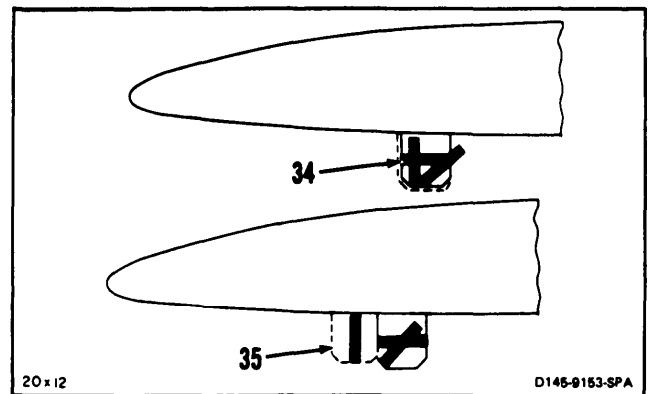

- d. Track pattern (36) shows green and red blades (18 or 28) out of track. Green blade must be lowered. Red blade must be raised.

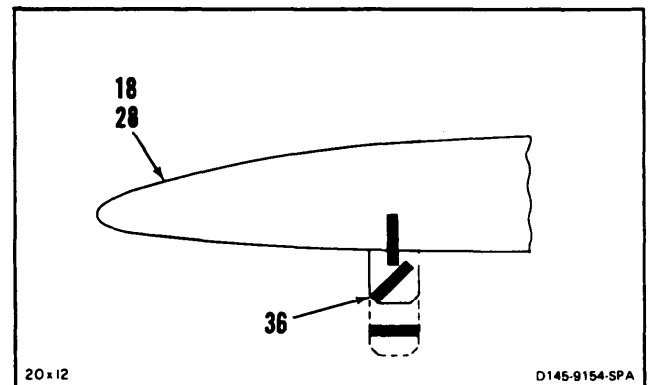

- e. Track pattern (37) shows green blade (18 or 28) out of track. Green blade must be raised.

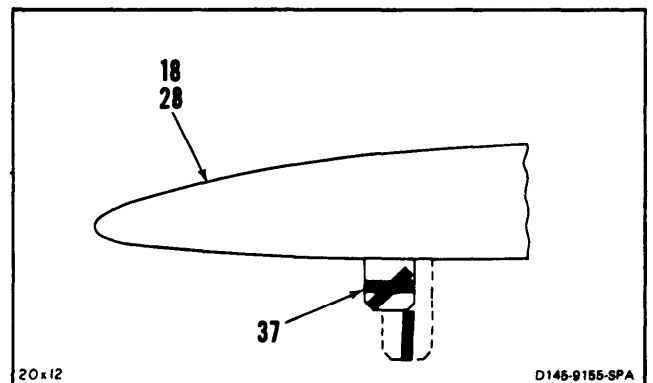

**NOTE**

One mark of pitch link adjustment will change ground blade track 0.125 inch.

23. **Figure number of marks and direction of pitch link adjustment** as follows:

- a. Multiply distance A by 5 for forward head. Answer is number of marks of pitch link adjustment to bring high blade down into track. Mark number in correction box (33) for high blade.

- b. Multiply distance B by 5 for forward head. Answer is number of marks of pitch-link adjustment to bring low blade up into track. Mark number in correction box (33) for low blade.


- c. Repeat steps a. and b. for aft head.

24. Adjust pitch links (Task 5-94).

25. Repeat ground track in steps 1. through 20.

**INSPECT**

**CH-47 FIBERGLASS ROTOR BLADES  
CONFIGURATION RECORD**

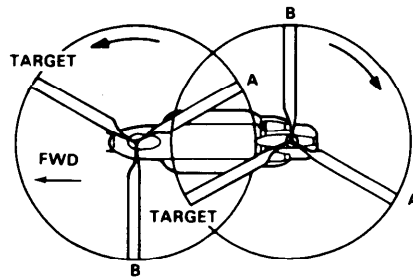

AIRCRAFT S/N \_\_\_\_\_  
AIRCRAFT MODEL \_\_\_\_\_  
DATE \_\_\_\_\_

NOTE: POSITION BLADES SO DOUBLE INTERRUPTER IS OVER MAGNETIC PICKUP

INITIAL  
CONFIGURATION

BLADE RECORD	BLADE COLOR	TIP TARGET CONFIGURATION	BLADE S/N	TIP WT VIBREX
FWD TARGET				
FWD A				
FWD B				
AFT TARGET				
AFT A				
AFT B				

33

POST FLIGHT CORRECTION

FWD BLADE	P/L	WT	P/L	WT	P/L	WT	P/L	WT	P/L	WT
TGT										
A										
B										
AFT BLADE										
TGT										
A										
B										

13284

FOLLOW-ON MAINTENANCE:  
In-flight tracking (Task 5-141).

**END OF TASK**

5-141 IN-FLIGHT TRACKING (STROBEX/VIBREX)

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**

Strobex Tracking Cards

**Personnel Required:**


Medium Helicopter Repairer  
Army Rotary-Wing Aviator (2)

**References:**


TM 55-1520-240-10  
Task 1-26  
Task 5-94

**Equipment Condition:**

Helicopter Prepared for Tracking and Balancing (Task 5-139)  
Helicopter Ground Tracked (Task 5-140)

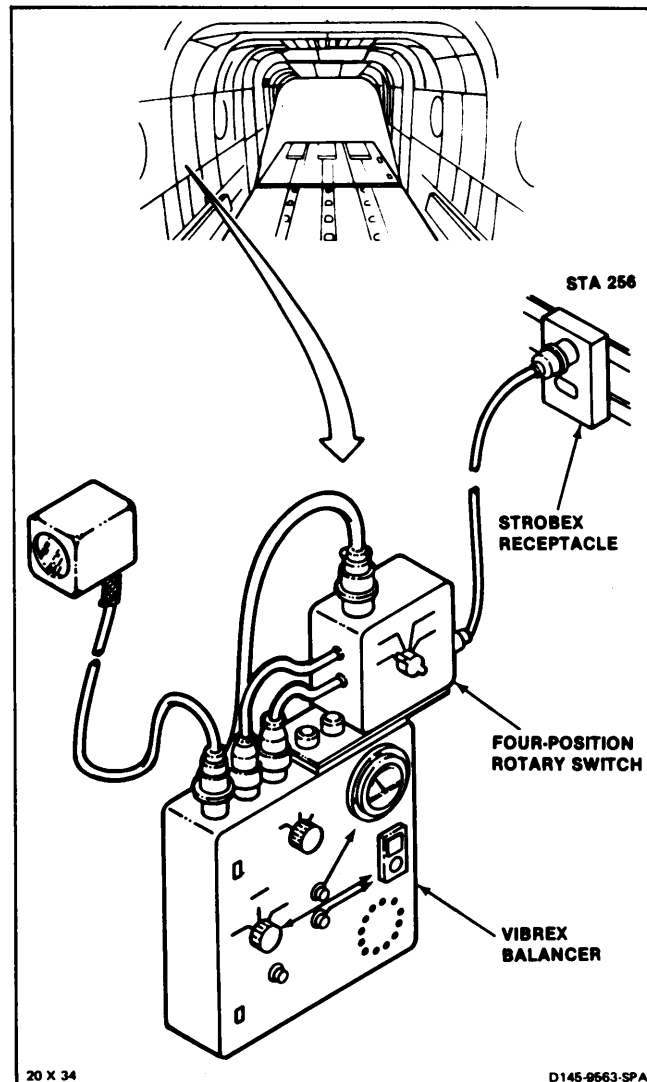

1. Have pilot start engines (TM 55-1520-240-10).
2. Press test switch (1). Check that phazor lights (2) come on at 12, 4, and 8 o'clock positions.

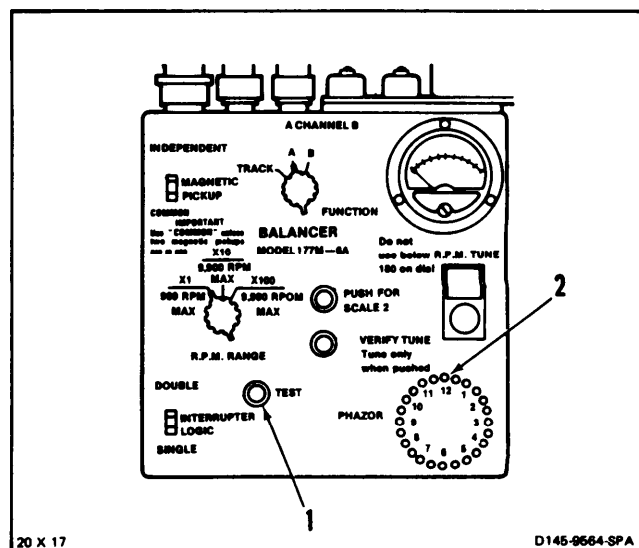


GO TO NEXT PAGE

3. Point tracker (3) down. Press trigger (4). Lamp shall flash at steady 3-per-rev rate. Release trigger.

**NOTE**

On bright or sunny days, pilot should head helicopter away from sun. If helicopter must be headed toward sun, wear polarized sunglasses for tracking.

4. Have pilot fly helicopter straight and level at 130 kias and 225 rpm (TM 55-1520-240-10).

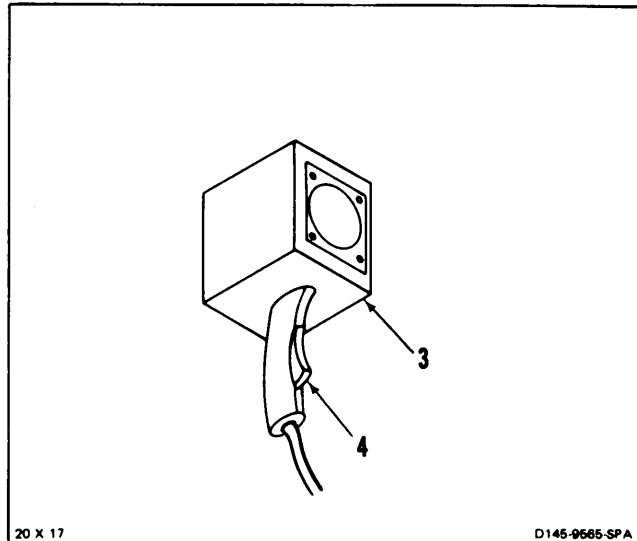


**FORWARD BLADE TRACKING**

5. Point tracker (3) through pilot's windshield (5) at 1 o'clock position.
6. Sight across top of tracker (3). Press trigger (4) and direct light flashes toward targets (7) on blades (6). Direct tracker from side-to-side in W pattern until tip targets are detected.

**NOTE**

Horizontal spread of tape strips as seen with tracker has no effect on track. Always use center blade as main focal point. Focus on pattern formed by center target and one other target at a time. Looking at pattern of all three targets at once is difficult. Once center blade has been identified, do not switch to another blade. Switching center blades can affect longitudinal stick position and autorotational rpm. This is caused by pitch link adjustments which result in thrust unbalance between forward and aft blades. In hover, unbalance can require holding control stick too far forward or aft to maintain correct attitude. To correct condition, all pitch links must be readjusted.

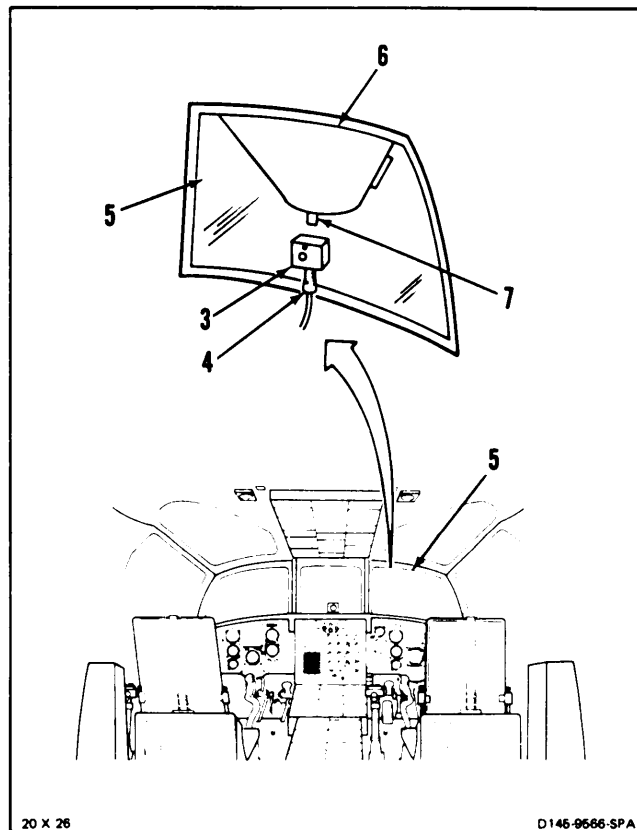

**NOTE**


If one or two blades have been replaced on the same rotor head, track to a blade that was not changed.

7. View pattern of tapes (8, 9, and 10) on targets (11). Note which tape is in center. Track to center blade (6), unless center blade is a replacement blade. Yellow blade is shown in center here.
8. Mark tape symbols (|, /, or -) (12) in blocks (13, 14, and 15) as follows:
  - a. Mark diagonal line (12) in center block (14) to show yellow blade in center on example pattern. Use forward side of tracking card (16).
  - b. Mark vertical line (12) in high block (13) to show green blade high on example pattern.
  - c. Mark horizontal line (12) in low block (15) to show red blade low on example pattern.


**NOTE**

Tracking tape is 0.20 inch wide and 1 inch long. Five tape widths equal 1 inch.

9. Estimate distance A in inches from center of tape (9) to center of high tape (8). Green blade is shown high here.
10. Mark distance between blocks (13 and 14).
11. Repeat step 6. Estimate distance B in inches from center of center tape (9) to center of low tape (10). Red blade is shown low here.
12. Mark distance between blocks (14 and 15) on tracking card (16).

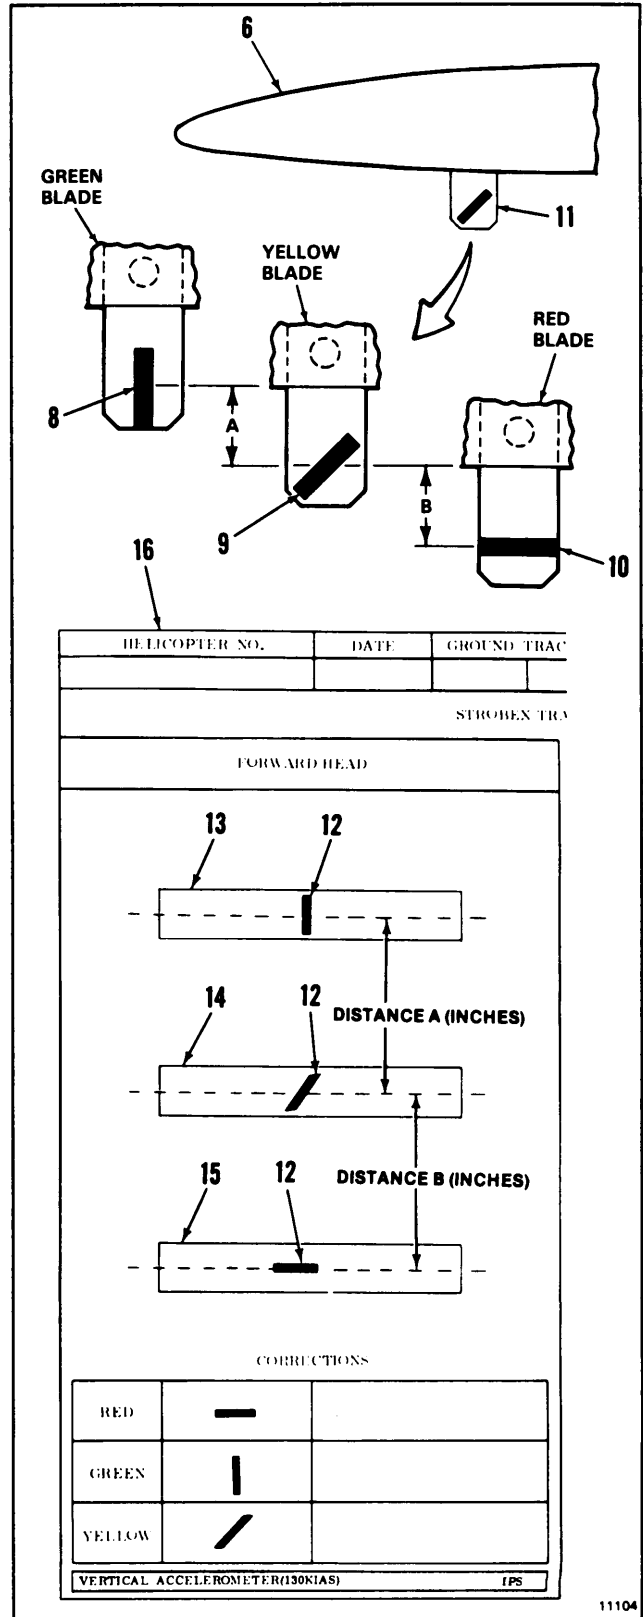



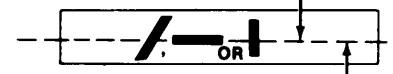


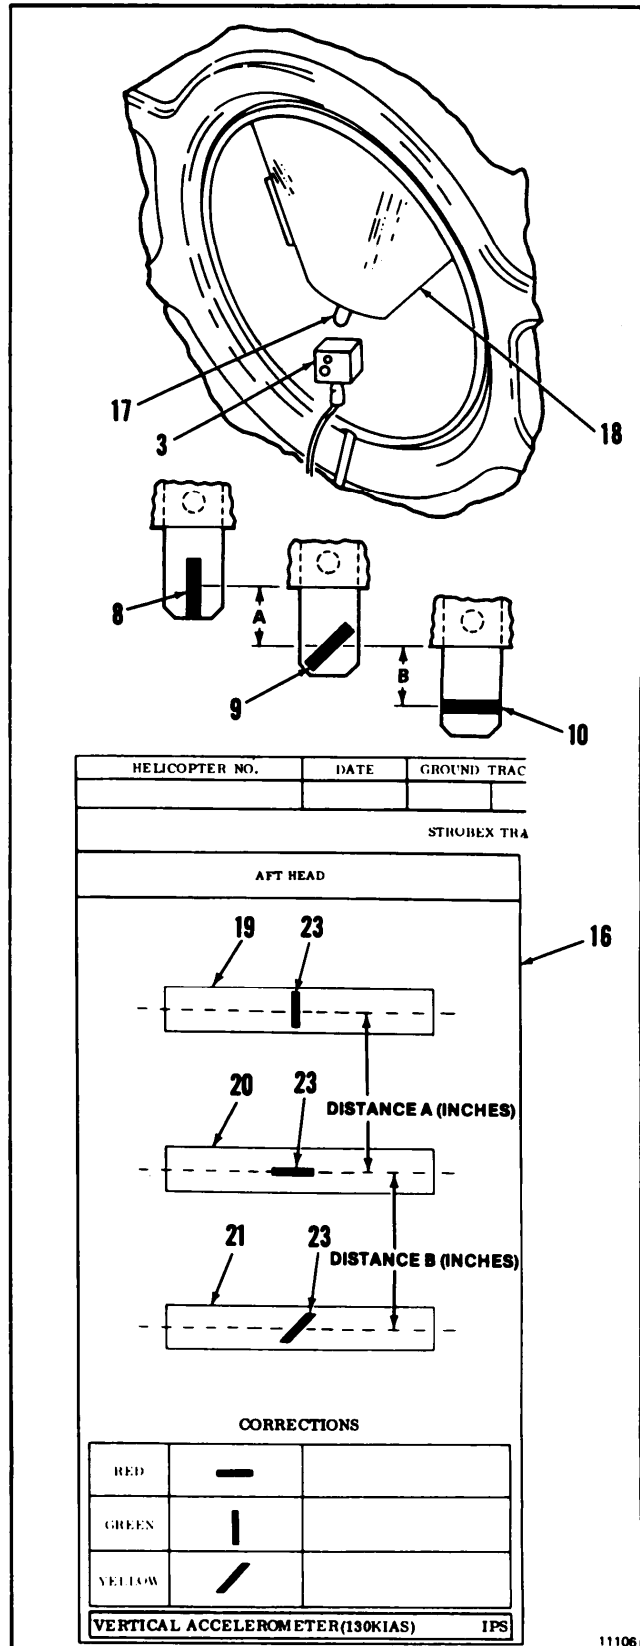
13. Point tracker (3) through aft left window (17) at 11 o'clock.
14. Sight across tracker (3). Press trigger (4). Direct light flashes toward targets (11) on aft blade (18). Direct lamp from side-to-side in W pattern until targets are detected.
15. Mark tape symbols (I, /, or -) (23) in blocks (19, 20, and 21) as follows:
  - a. Mark horizontal line (23) in center block (20) to show red blade in center on example pattern, Use aft side of card (16).
  - b. Mark vertical line (23) in high block (19) to show green blade high on example pattern.
  - c. Mark diagonal line (23) in low block (21) to show yellow blade low on example pattern.
16. Estimate distance A in inches from center of tape (19) to center of high tape (8). Mark distance A on card (16). Green blade is shown high here.
17. Mark distance between blocks (19 and 20) on tracking card (16).
18. Repeat step 14. Estimate distance B in inches from center of center tape (9) to center of low tape (10). Yellow blade is shown low here.
19. Mark distance between blocks (20 and 21) on tracking card (16).
20. Have pilot land helicopter (TM 55-1520-240-100).



21. Add distances A and B on card (16) for both heads.
- a. If distances A and B on both heads are less than 0.5 inch (2-1/2 tape widths), go to

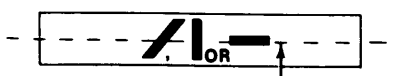- FOLLOW-ON MAINTENANCE.
- b. If distances A and B for either or both heads are more than 0.5 inch (2-1/2 tape widths), go to step 22.

HELICOPTER NO.	DATE	GROUND TRACK NO.	IN-FLIGHT NO.	TRACKED BY
STROBEX TRACKING CARD				
FORWARD HEAD			AFT HEAD	
 <p style="text-align: center;">DISTANCE A (INCHES)</p>  <p style="text-align: center;">DISTANCE B (INCHES)</p> 			 <p style="text-align: center;">DISTANCE A (INCHES)</p>  <p style="text-align: center;">DISTANCE B (INCHES)</p> 	
CORRECTIONS			CORRECTIONS	
RED	—		RED	—
GREEN			GREEN	
YELLOW	/		YELLOW	/
VERTICAL ACCELEROMETER (130KIAS)      IPS			VERTICAL ACCELEROMETER (130KIAS)      IPS	

16

42 X 34

D145-9569-SPA

**NOTE**

One mark of pitch link adjustment will change in-flight blade track 0.25 inch at 130 kias.

22. **Figure number of marks and direction of pitch link adjustment.** Begin with forward head and forward head side of card.

- a. Multiply distance A by 4. Result is number of marks of pitch link adjustment to lower high blade into track. Mark number in correction box (22) for high blade on card (16).

- b. Multiply distance B by 4. Result is number of marks of pitch link adjustment to raise low blade into track. Mark number in correction box (22) for low blade on card (16).

- c. Repeat steps a. and b. for aft head. Mark corrections on aft side of card (16).

23. Adjust pitch links (Task 5-94).

24. Repeat steps 1 through 21.

HELICOPTER NO.	DATE	GROUND TRACK NO.	IN-FLIGHT NO.	TRACKED BY
STROBEX TRACKING CARD				
FORWARD HEAD			AFT HEAD	
CORRECTIONS			CORRECTIONS	
RED	—		RED	—
GREEN			GREEN	
YELLOW	/		YELLOW	/
VERTICAL ACCELEROMETER (130KIAS)			VERTICAL ACCELEROMETER (130KIAS)	
IPS			IPS	

FOLLOW-ON MAINTENANCE:  
In-flight balancing (Task 5-142).



**5-142 IN-FLIGHT BALANCING (STROBEX/VIBREX)**

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**

None

**Personnel Required:**


Medium Helicopter Repairer (2)

Army Rotary-Wing Aviator (2)

**Equipment Condition:**


Helicopter in Straight and Level Forward Flight at 130 KIAS, IAS and 100% RPM (TM 55-1520-240-10)

Rotary-Wing Blades Tracked In Flight (Task 5-141)

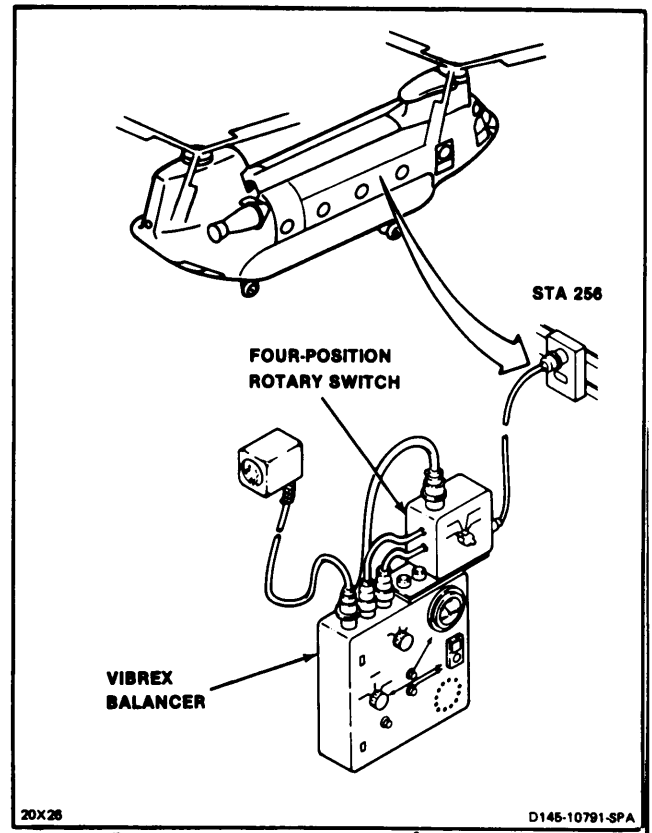

**EQUIPMENT OPERATIONAL CHECK**


1. Set balancer FUNCTION switch (1) to A.
2. Set balancer MAGNETIC PICKUP switch (2) to COMMON.
3. Set RPM RANGE switch (3) to X1.
4. Set RPM TUNE dial (4) to 225.
5. Set balancer INTERRUPTER LOGIC switch (5) to DOUBLE.
6. Press balancer TEST switch (6). Check that PHAZOR lights (7) come on at 12, 4, and 8 o'clock positions. Lights must come on to verify that balancer (8) works.

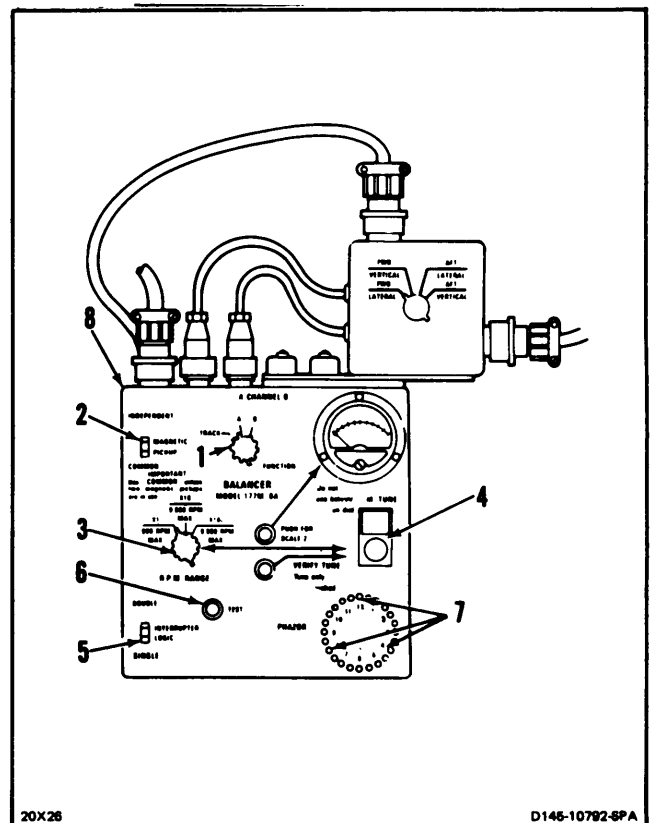


**GO TO NEXT PAGE**

**BALANCE ROTORS**


7. Set switch (9) to FWD VERTICAL.
8. Tune balancer (8) as follows:
  - a. Note clock angle of PHAZOR light (10) that is on.
  - b. Press VERIFY TUNE switch (11). Note clock position of PHAZOR light (10) that comes on. If same light is on as in step a, go to step 9. If same light is not on, go to step c.

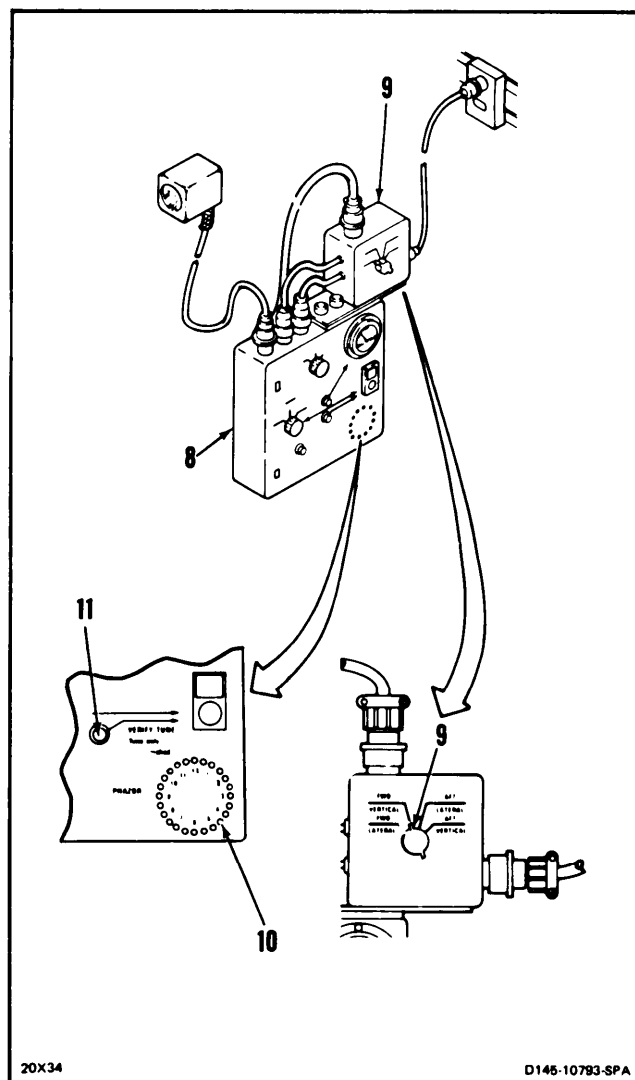

- c. Press and hold VERIFY TUNE switch (11) and adjust RPM TUNE dial (12). If PHAZOR light (10) moves clockwise when VERIFY TUNE switch (11) is pressed, adjust RPM TUNE dial (12) counterclockwise. If PHAZOR light moves counterclockwise when VERIFY TUNE switch is pressed, adjust RPM TUNE dial clockwise.
  - d. Repeat steps a thru c until PHAZOR light (10) comes on at same clock angle before and after VERIFY TUNE switch (11) is pressed.
9. **Read vertical vibration on IPS meter (13).** Record reading in forward head section of Tracking Card (14). If reading is less than 1.0 ips. go to step 11. If reading is more than 1.0 ips. go to step 10.
10. If vertical vibration exceeds 1.0 ips. recheck forward blade track (Task 5-141). If track is satisfactory, have pilot land helicopter (TM 55-1520-240-10). Troubleshoot rotor system (TM 55-1520-240-T). Repeat steps 1 through 9. If track is unsatisfactory, repeat steps 7 through 9.

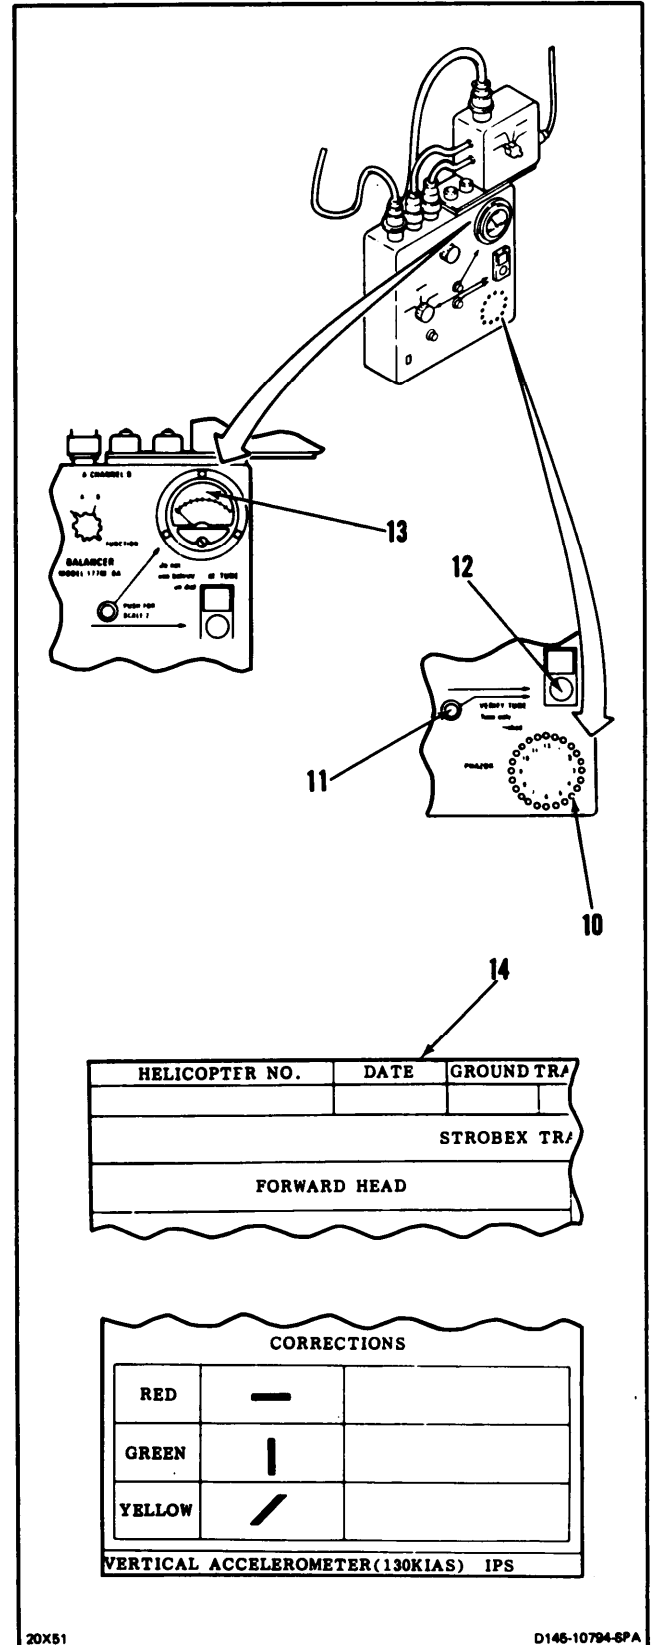

11. Set switch (9) to AFT VERTICAL.
12. Repeat steps 8 to tune balancer.
13. Read vertical vibration on IPS meter (13). Record reading in aft head section of Tracking Card (14). If reading is less than 1.0 ips, go to step 15. If reading is more than 1.0 ips, go to step 14.
14. If vertical vibration exceeds 1.0 ips, recheck aft blade track (Task 5-141). If track is satisfactory, have pilot land helicopter (TM 55-1520-240-10). Troubleshoot rotor system (TM 55-1520-240-T). Repeat steps 1 through 13. If track is unsatisfactory, repeat steps 11 through 13.

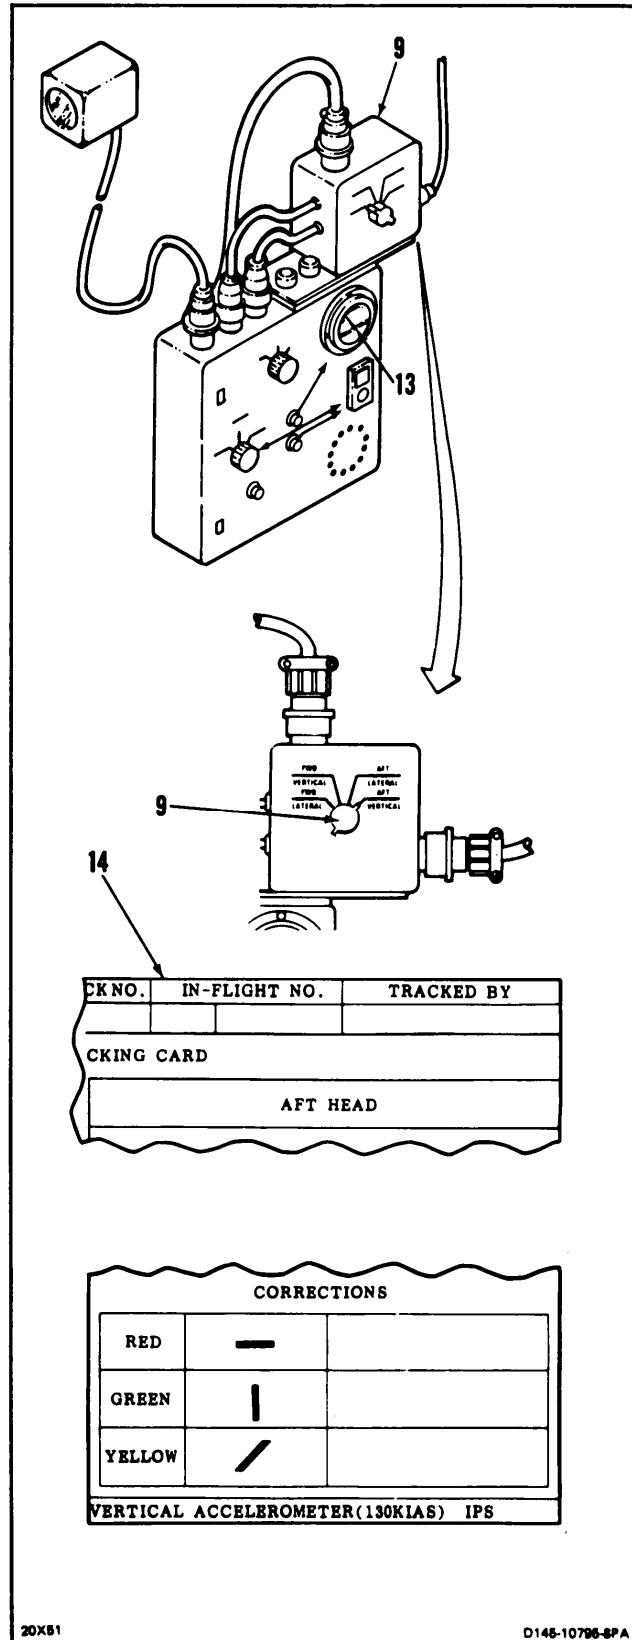


15. Have pilot hover helicopter at 100 per-cent (225 rpm).
16. Set switch (9) to FWD LATERAL.
17. Repeat step 8 to tune balancer (8).
18. On lateral balance chart (15), check FWD column of ROTOR box (16). Mark clock angle of PHAZOR light (10) that comes on in CLOCK ANGLE column of READINGS box (16.1).

**NOTE**

See blank balance chart on last page.

19. Record reading from IPS meter (13) in IPS column of READINGS box (16.1).
20. Plot ips at clock angle on chart (15) as follows:
  - a. Find clock angle of light (10) on outer circle of chart (15).
  - b. Follow line toward center circle to IPS meter reading.
  - c. Plot ips.
21. Set switch (9) to AFT LATERAL.
22. Repeat step (8) to tune balancer (8).
23. Check AFT column of ROTOR box (16). Mark clock angle of PHAZOR light (10) that comes on in CLOCK ANGLE column of READINGS box (16.1).
24. Record reading on IPS meter (13) in IPS column of READINGS box (16.1).
25. Plot IPS at clock angle on chart (15). Refer to step 20.
26. Have pilot land helicopter and stop engines (TM 55-1520-240-10).
27. Note IPS values in FWD and AFT READINGS boxes (16.1). If both values are 0.2 ips or less, go to FOLLOW-ON MAINTENANCE.
28. If either value in step 27 exceeds 0.2 ips, go to step 29.

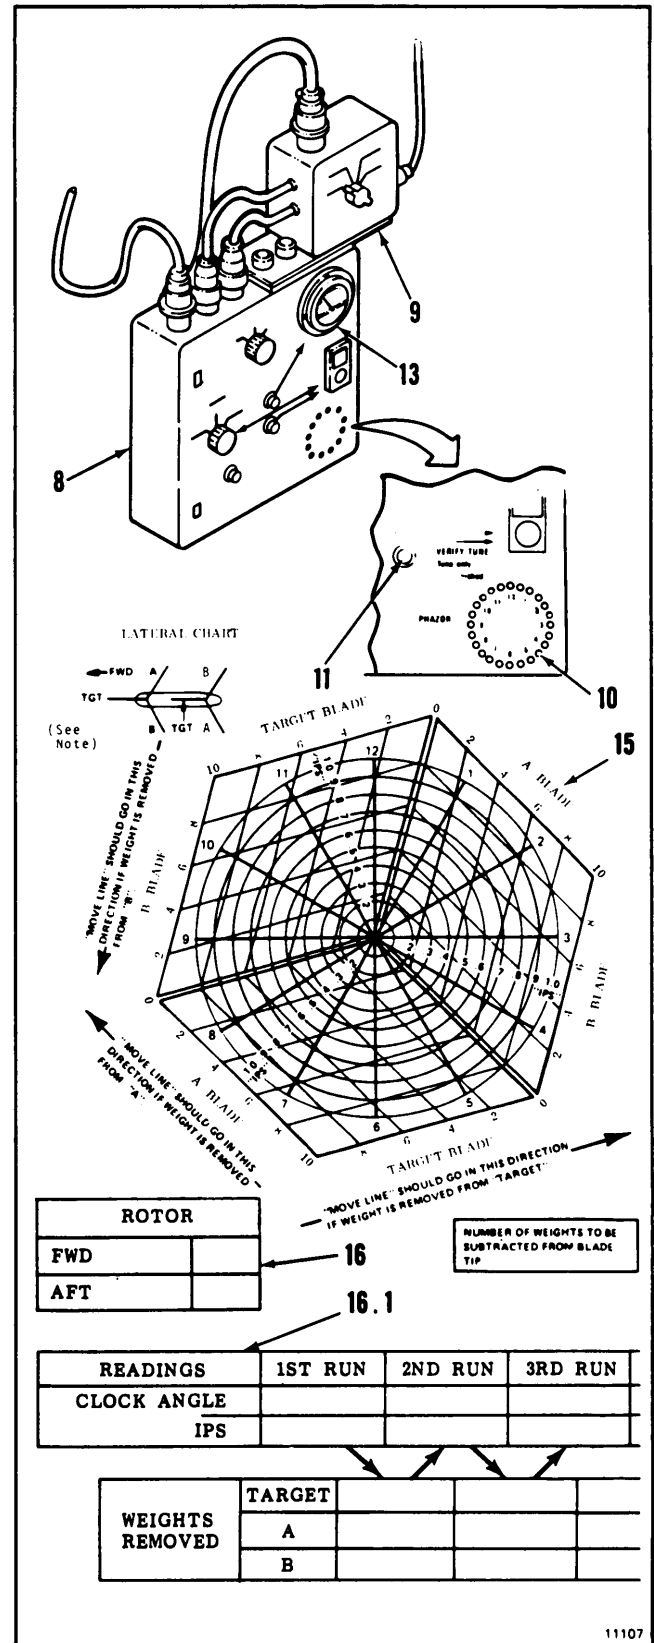

GO TO NEXT PAGE


- 29. Attach tiedown lines to one forward and one aft blade (17 and 18) (Task 1-26).
- 30. Open pylon and forward work platforms (Task 2-2).

**NOTE**

Magnetic phase detector and double impulse bracket are on forward swash-plate only.

- 31. Have helper turn blades (17, 19, and 20) until double interrupter (21) is over phase detector (22).
  - a. Forward blade (17) is forward target blade.
  - b. Blade (23) over fuselage (24) is aft target blade.
  - c. Blade (19) is forward A blade.
  - d. Blade (20) is forward B blade.
  - e. Blade (18) is aft A blade.
  - f. Blade (25) is aft B blade.

- 32. **Determine weight changes** as follows:
  - a. Mark where readings from ips box and clock angle columns of READINGS box (16.1) cross on FWD ROTOR chart (15). Refer to step 20.
  - b. Draw two lines from ips plot. Draw one in same direction as line (27). Draw one in same direction as line (28) for the sector. Don't cross double lines.
  - c. Note where lines meet outer edges of grid (29). At edges, read numbers of weights, and blades from which weights are to be removed. Go to nearest full number of weights.
  - d. Mark numbers from step c. in WEIGHTS REMOVED box (30) for blade.
  - e. Repeat steps a. thru d. on AFT ROTOR chart.

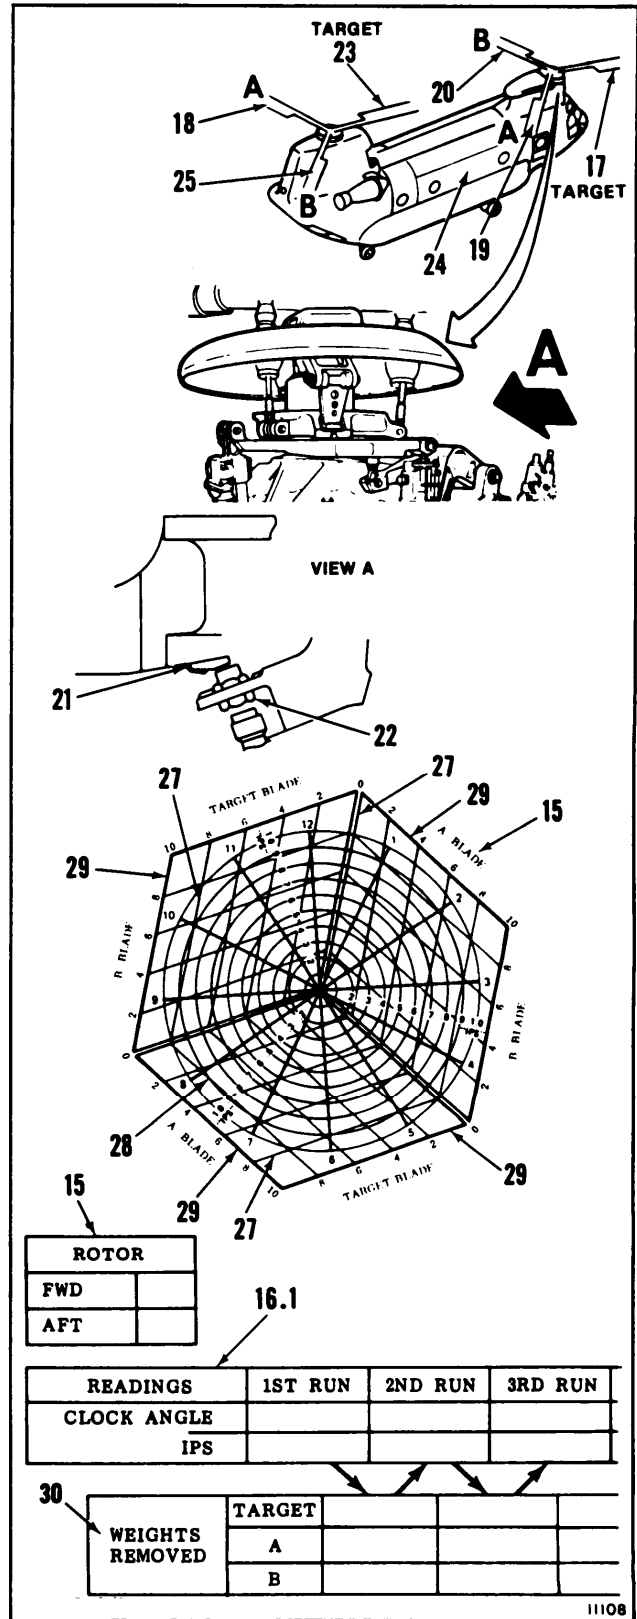

**ADJUST BALANCING WEIGHTS**

**WARNING**

Do not install more than 10 weights on a blade. Too many weights can cause damage to equipment and injury to personnel.

**WARNING**

Do not adjust weights on wrong blade. Vibration levels can be increased. Damage to equipment and injury to personnel could result.

33. **Adjust balancing weights (31) as follows:**

- a. Identify target, A, or B blade (17, 18, 19, 20, 23 or 25) on which weights are to be adjusted.
- b. Remove lockwire. Remove four sockethead screws (32) and washers (33) from tip cover (34).
- c. Remove target (35).
- d. Remove tip cover (34).
- e. Remove four nuts (36) and washers (37).

**NOTE**


If the number of weights to be removed from a blade is greater than the number of weights installed, add an equal number of weights to each blade.

- f. Install weights (31), if needed. Remove number of weights marked in Weights Removed box (30) of chart (15).

**NOTE**

Vibrex weights removed during balancing should be secured together and tagged for identification.

- g. Install washers (37) and nuts (36). **Torque nuts to 60 inch-pounds.** Inspect
- h. Install tip cover (34). Inspect.
- i. Install target (35).
- j. Install four socket head screws (32) and washers (33). **Torque screws to 175 inch-pounds.**
- k. Lockwire screws (32). Use lockwire (E233).

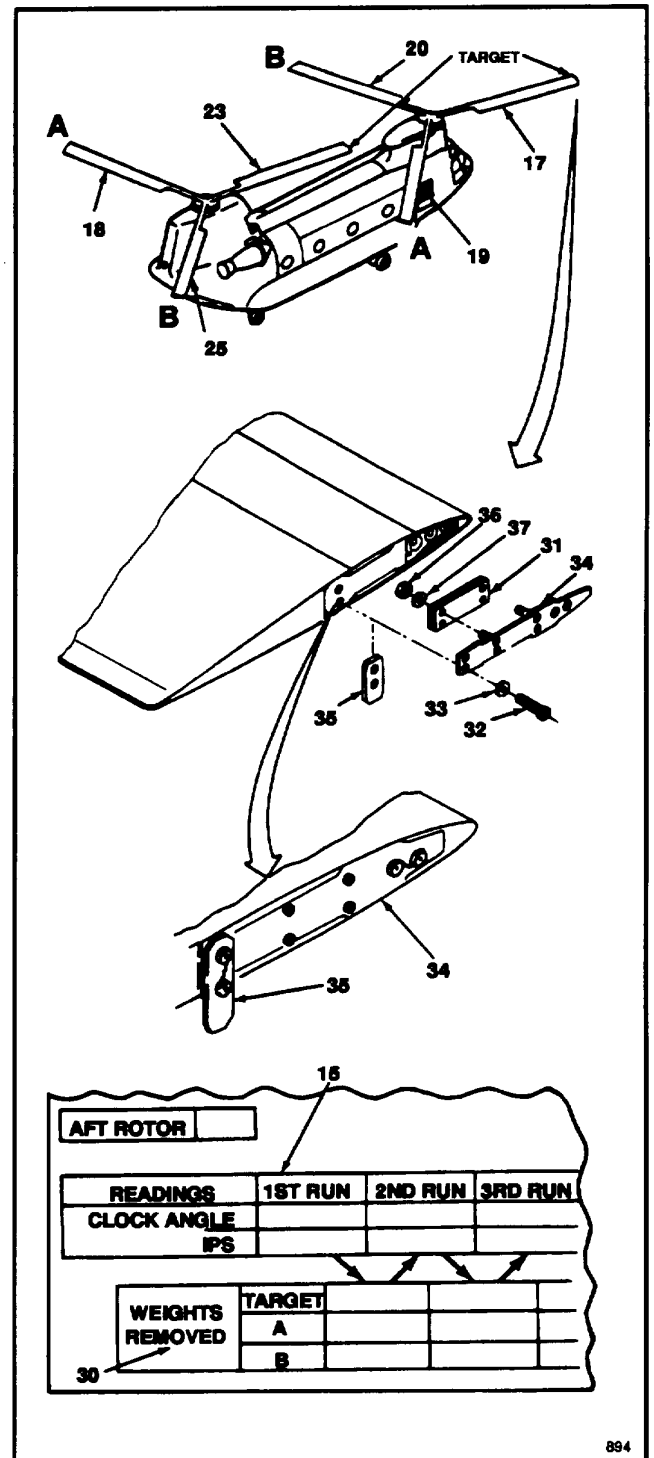

GO TO NEXT PAGE


34. Use following example as guide when more than one balancing run is required:

- a. On run 1, IPS meter reading of 0.7 at 6:30 o'clock angle is shown at point 1. Draw two lines (37 and 38) from this point to edge of grid on chart (15), in same direction as grid. Ends of lines (37 and 38) show that five weights must be removed from A blade, and six from target blade. Blade balance run is repeated.
- b. On run 2, after weights (step a) are removed, IPS reading is 0.3 at 5:30 o'clock angle at point 2. Lines (39) from point 2 show that three weights must be removed from A blade, and one from target blade. Balancing run is then repeated.

**NOTE**


If, on run 2, A blade has less than 3 weights installed, add an equal number of weights to all blades. Then deduct 3 weights from A blade and 2 from target blade before actual weight installation.

- c. On run 3, IPS reading of 0.1 at 3 o'clock angle is shown at point 3. This reading indicates that no further weight adjustment is needed.

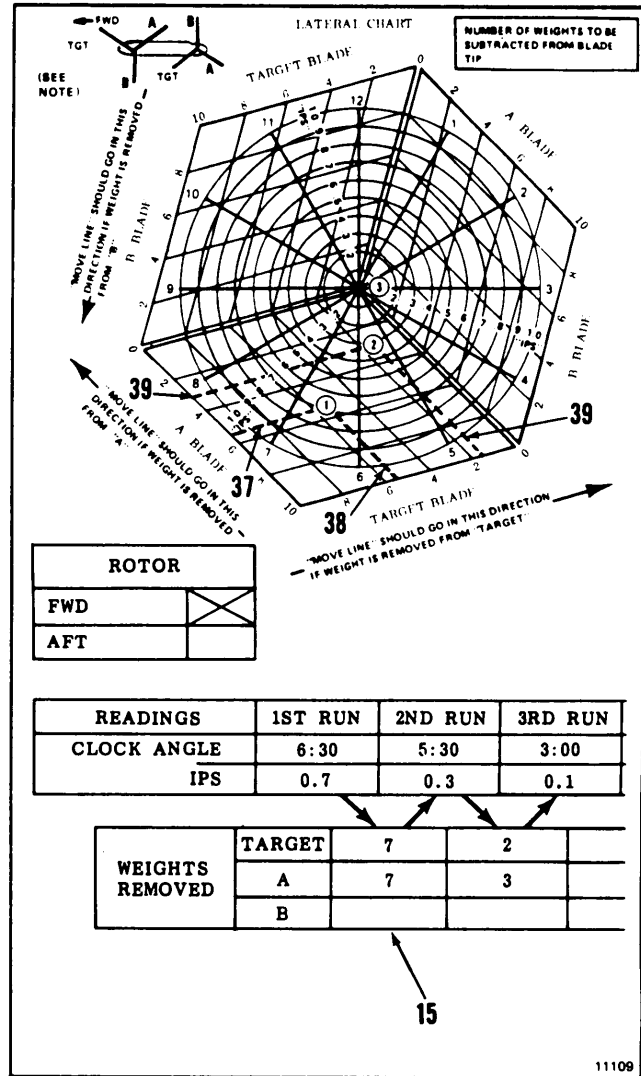




35. Check that weight adjustments, marked in weights removed box (30) of chart (15), are completed.
36. Repeat steps 1 through 29 until IPS reading on chart (15) is less than 0.2 on both rotors.
37. Have pilot land helicopter and stop engines (TM 55-1520-240-10).
38. Record all blade tip weight adjustments by blade serial number, on DA Form 2408-13.
39. Record final weight adjustments for each blade in block 8 of DA Form 2408-16.

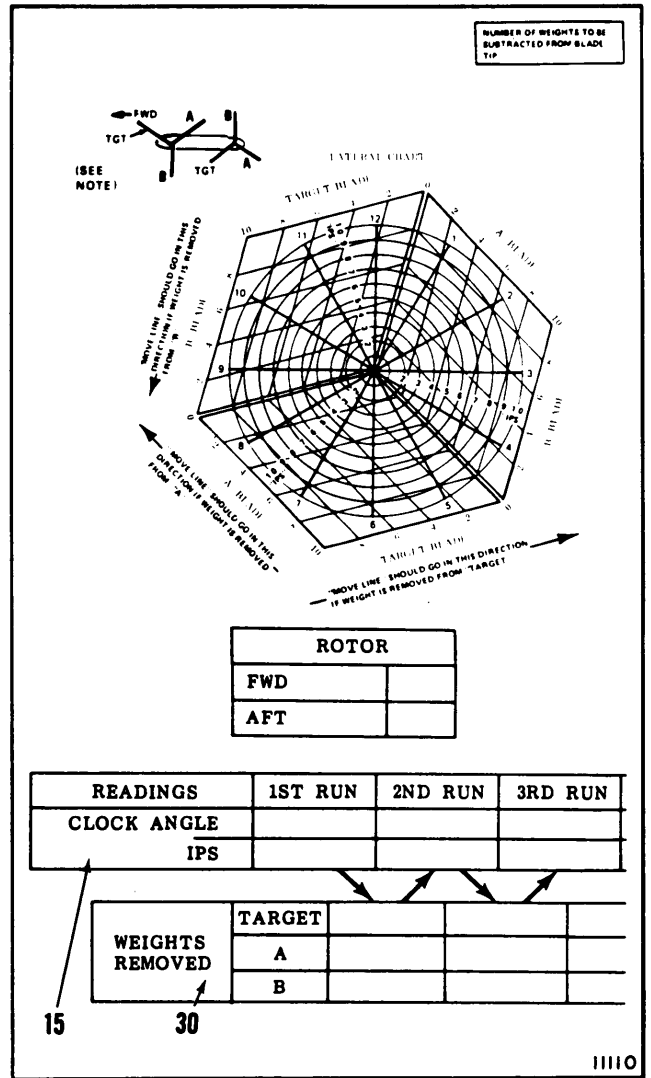

GO TO NEXT PAGE

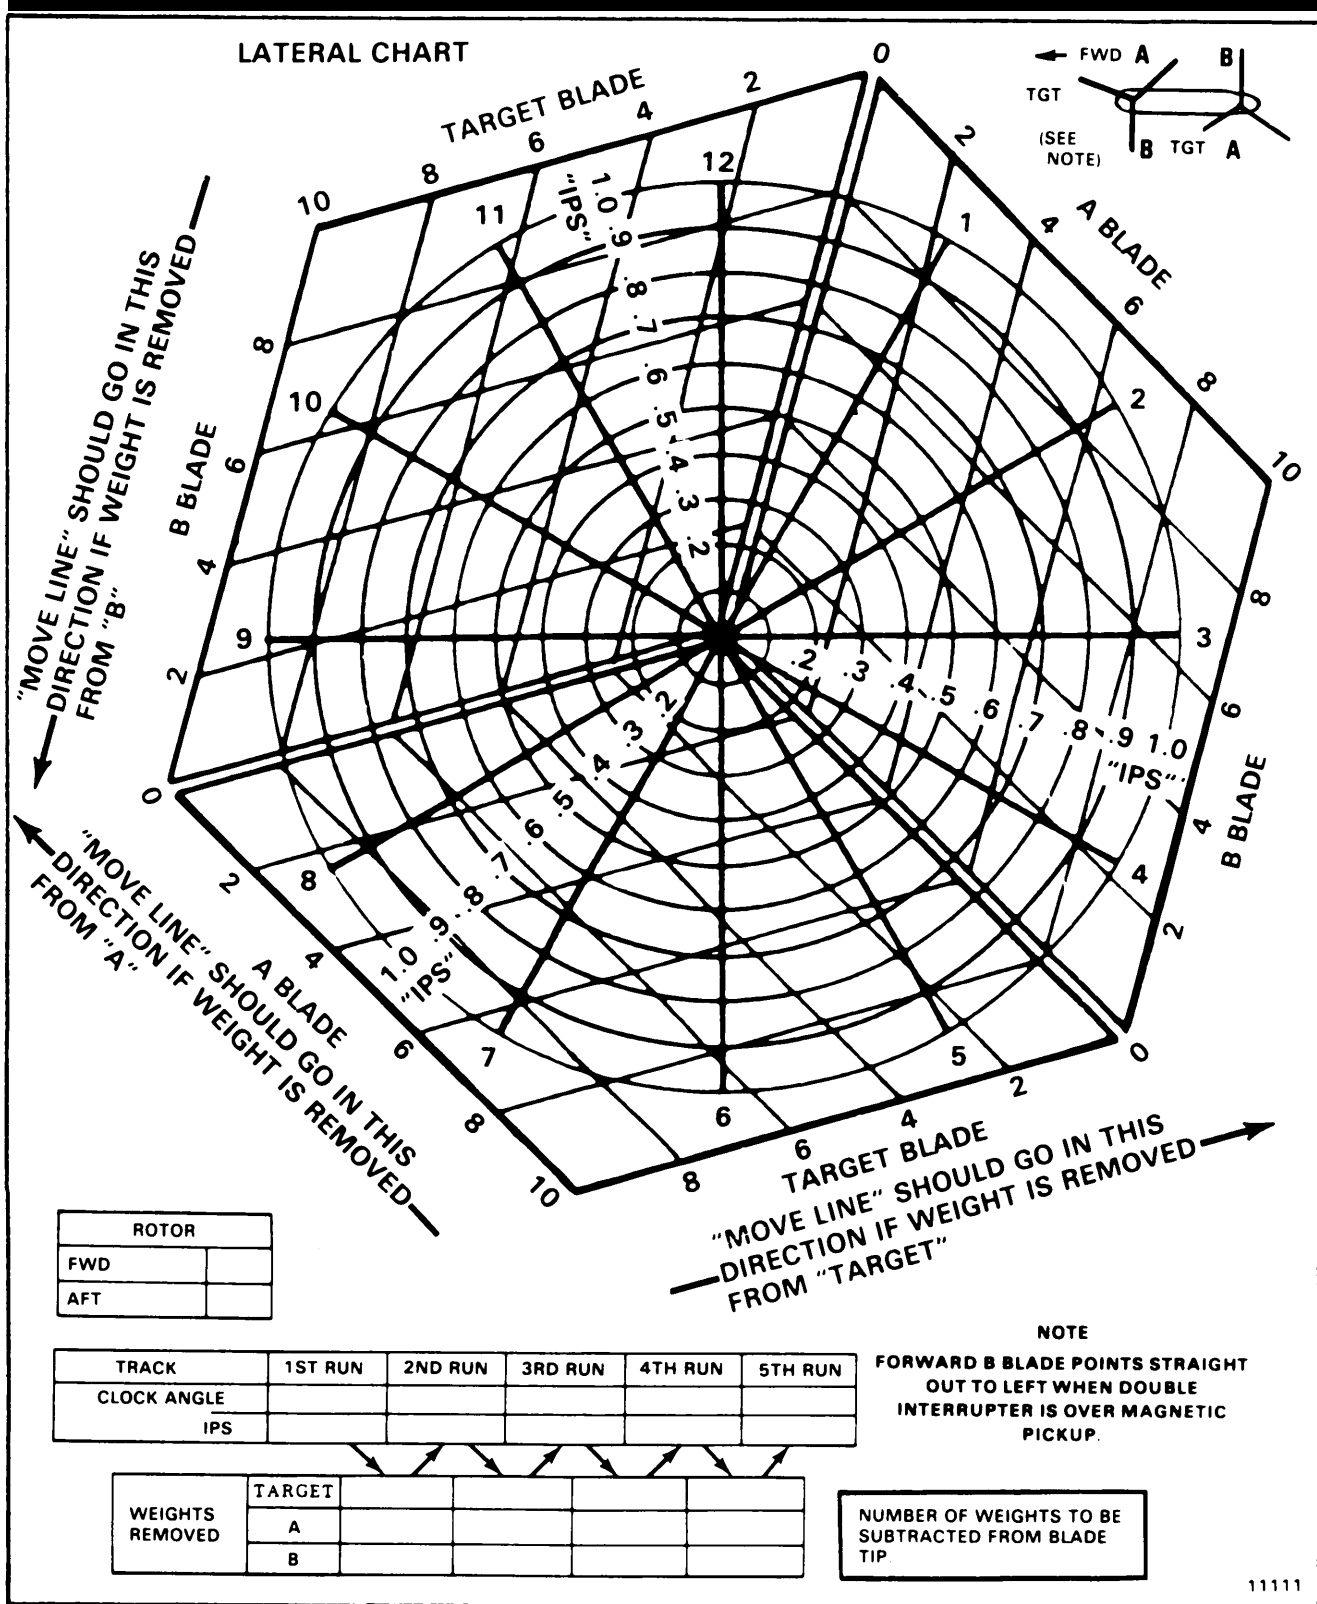

**FOLLOW-ON MAINTENANCE:**

Remove tracking and balancing equipment (Task 5-143).

**END OF TASK**

**5-142.1 COMPUTER-AIDED HOVER/ IN-FLIGHT TRACKING AND BALANCING**

**5-142.1**

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**

Strobex Tracking Cards

**Personnel Required:**

Medium Helicopter Repairer

Army Rotary-Wing Aviator (2)

**References:**

TM 55-1520-240-10

TM 55-1520-240-T

Task 1-26


Task 5-94

Task 5-142.3

**Equipment Condition:**

Helicopter Prepared for Computer-Aided Tracking and Balancing (Task 5-139)

Helicopter Ground Tracked (Task 5-140)

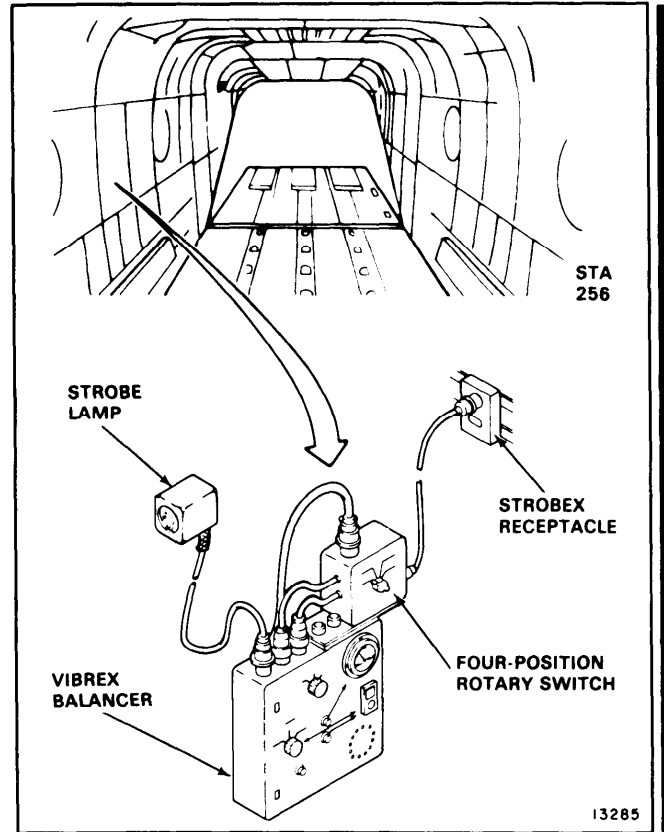

**5-142.1 COMPUTER-AIDED HOVER/IN-FLIGHT TRACKING AND BALANCING (Continued)**

5-142.1

**NOTE**

Perform this task only if a computer will be used to evaluate flight data.


1. Have pilot hover helicopter into the wind at 100 percent rotor rpm.

**EQUIPMENT OPERATIONAL CHECK**

2. Perform operational check of balancer (1) and strobe lamp (2) as follows:

- a. Set **MAGNETIC PICKUP** switch (3) on balancer (1) to **COMMON**.
- b. Set **FUNCTION** switch (4) to **TRACK**.
- c. Set **RPM TUNE** dial (5) to 225.

- d. Set **RPM RANGE** switch (6) to **X1**.
- e. Set **INTERRUPTER LOGIC** switch (7) to **DOUBLE**.
- f. Set selector switch (8) on strobe lamp (2) to **A**.
- g. Set **RPM dial** (9) to 268.
- h. Point strobe lamp (2) down. Press trigger (10). Check that tracker flashes at steady 3-per-rev rate. Check that green 28 VDC power light (11) comes on.
- i. Press **TEST** switch (12) on balancer (1). Check that 12, 4, and 8 o'clock lights on **PHAZOR** (13) come on. If they do not, do not continue. Troubleshoot balancer (TM 55-1520-240-T).

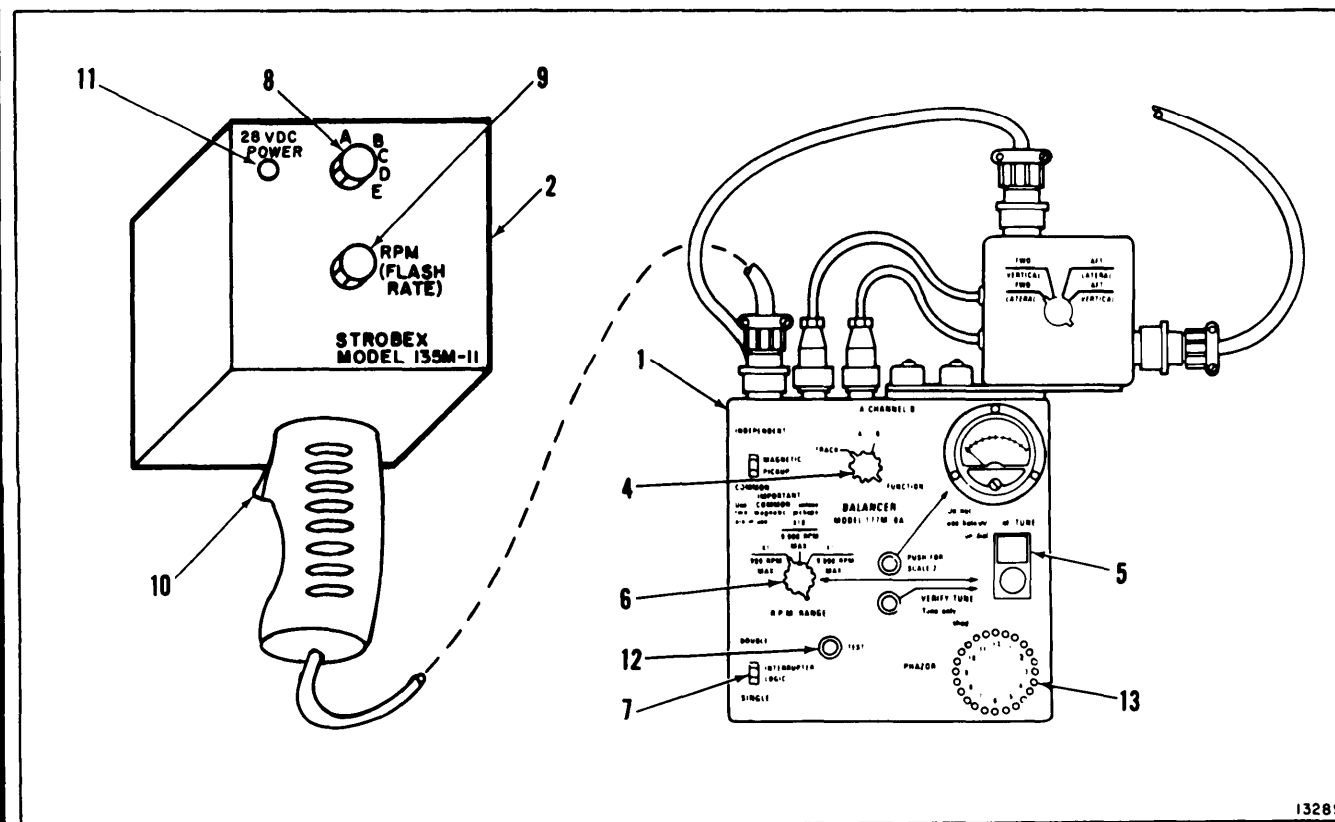

13289

**GO TO NEXT PAGE**


5-142.1 COMPUTER-AIDED HOVER/IN-FLIGHT TRACKING AND BALANCING (Continued)

5-142.1

**CAUTION**

Make sure cyclic trim actuators are not extended during tracking. Damage to droop stops and excess stress on the aft blades and rotor shaft will result.

3. Set SYSTEM SEL switch (14) on AFCS PANEL (15) to OFF. Check that CYCLIC TRIM switch (16) on AFCS panel is set to AUTO.

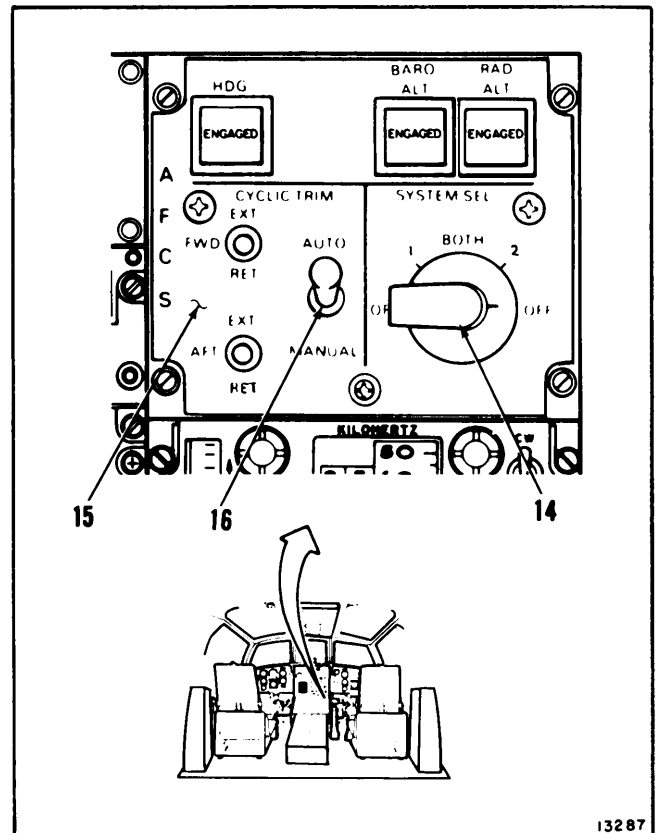


13287

**FORWARD BLADE HOVER TRACKING**

4. Point strobe lamp (2) through pilot's windshield (17) at 1 o'clock.
5. Sight across top of lamp (2). Press trigger (10). Direct light flashes toward targets (18) on forward blades (19). Sweep tracker from side-to-side in W pattern until tip targets are detected.

**NOTE**

Horizontal spread of tape strips as seen with tracker has no effect on track. Always use center blade as main focal point. Focus on pattern formed by center target and one other target at a time. Looking at pattern of all three targets at once is difficult.

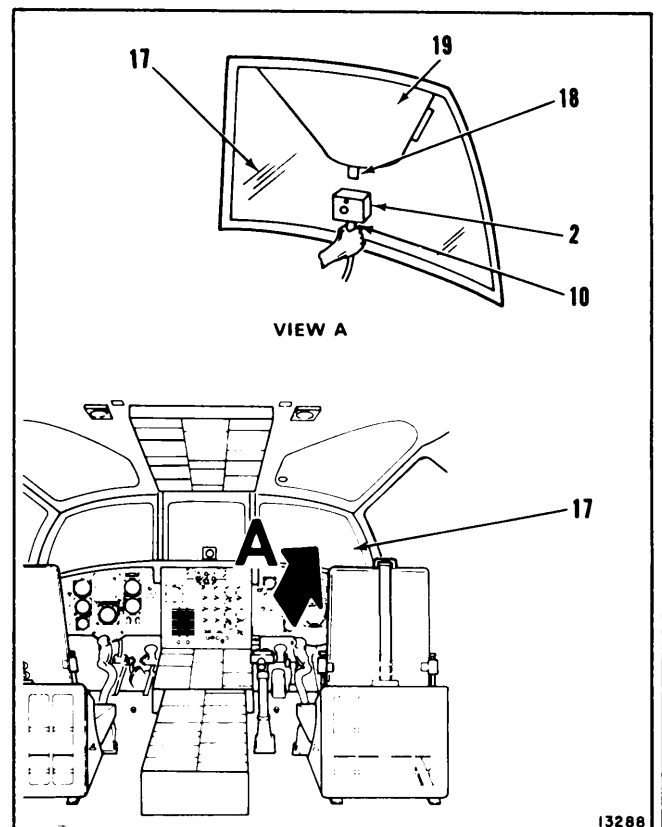

13288

GO TO NEXT PAGE

**NOTE**

- Green blade (vertical tape) is on pitch housing with green band. Red blade (horizontal tape) is on pitch housing with red band. Yellow blade (diagonal tape) is on pitch housing with yellow band.


- If one or two blades have been replaced on the same rotor head, track to a blade that was not changed.

6. **View pattern of tapes (20, 21, and 22) on targets (18).** Note which tape is in center. Track to center blade (19), unless center blade is a replacement blade. Yellow blade is shown in center here.
7. Observe relative vertical positions of high and center blades. **Estimate distance (A)** between centers of tape markers (20) and (21).

**NOTE**

Tracking tape is 0.20 inch wide and 1.0 inch long. Five tape widths equal 1.0 inch.

8. Mark high and center blade tape patterns on Track and Balance Worksheet (23) in their relative positions. **Record estimated distance (A)** between tape centers.
9. Observe relative vertical positions of center and low blades. **Estimate distance (B)** between centers of tape markers (20) and (22).
10. Mark low blade tape pattern on worksheet (23) in its position relative to center blade. **Record estimated distance (B)** between tape centers.
11. **Add total distance (A + B)** between markers (21) and (22).

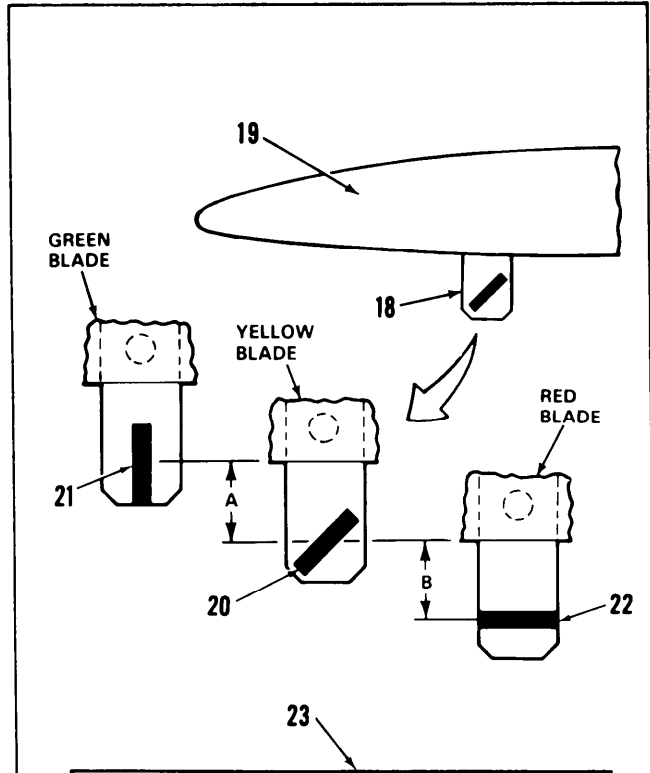

FLIGHT CONDITION	FWD ROTOR		
	GROUND	TRACK 1 O'CLOCK	
HOVER	TRACK 1 O'CLOCK		
	BALANCE	IPS	CLOCK ANGLE
	VERTICAL		
	LATERAL		
130 KTS	TRACK 1 O'CLOCK		
	BALANCE	IPS	CLOCK ANGLE
	VERTICAL		
	LATERAL		

13290

**GO TO NEXT PAGE**

5-142.1 COMPUTER-AIDED HOVER/IN-FLIGHT TRACKING AND BALANCING (Continued) 5-142.1


**AFT BLADE HOVER TRACKING**

12. Point lamp (2) through aft left window (24) at 11 o'clock.
13. Sight across lamp (2). Press trigger (10). **Direct light flashes toward targets (18) on aft blades (25)**. Sweep lamp from side-to-side in W pattern until targets are detected.
14. **View pattern of tapes (20, 21, and 22) on targets (180).** Note which tape is in center. Track to center blade unless center blade is a replacement blade. Red blade is shown in center here.
15. Observe relative vertical positions of high and center blades. **Estimate distance (A)** between centers of tape markers (20) and (22).

**NOTE**

Tracking tape is 0.20 inch wide and 1.0 inch long. Five tape widths equal 1.0 inch.

16. Mark high and center blade tape patterns on Track and Balance Worksheet (23) in their relative positions. **Record estimated distance (A)** between tape centers.
17. Observe relative vertical positions of center and low blades. **Estimate distance (B)** between centers of tape markers (21) and (22).
18. Mark low blade tape pattern on worksheet (23) in its position relative to center blade. **Record estimated distance (B)** between tape centers.
19. **Add total distance (A + B)** between markers (20) and (21).

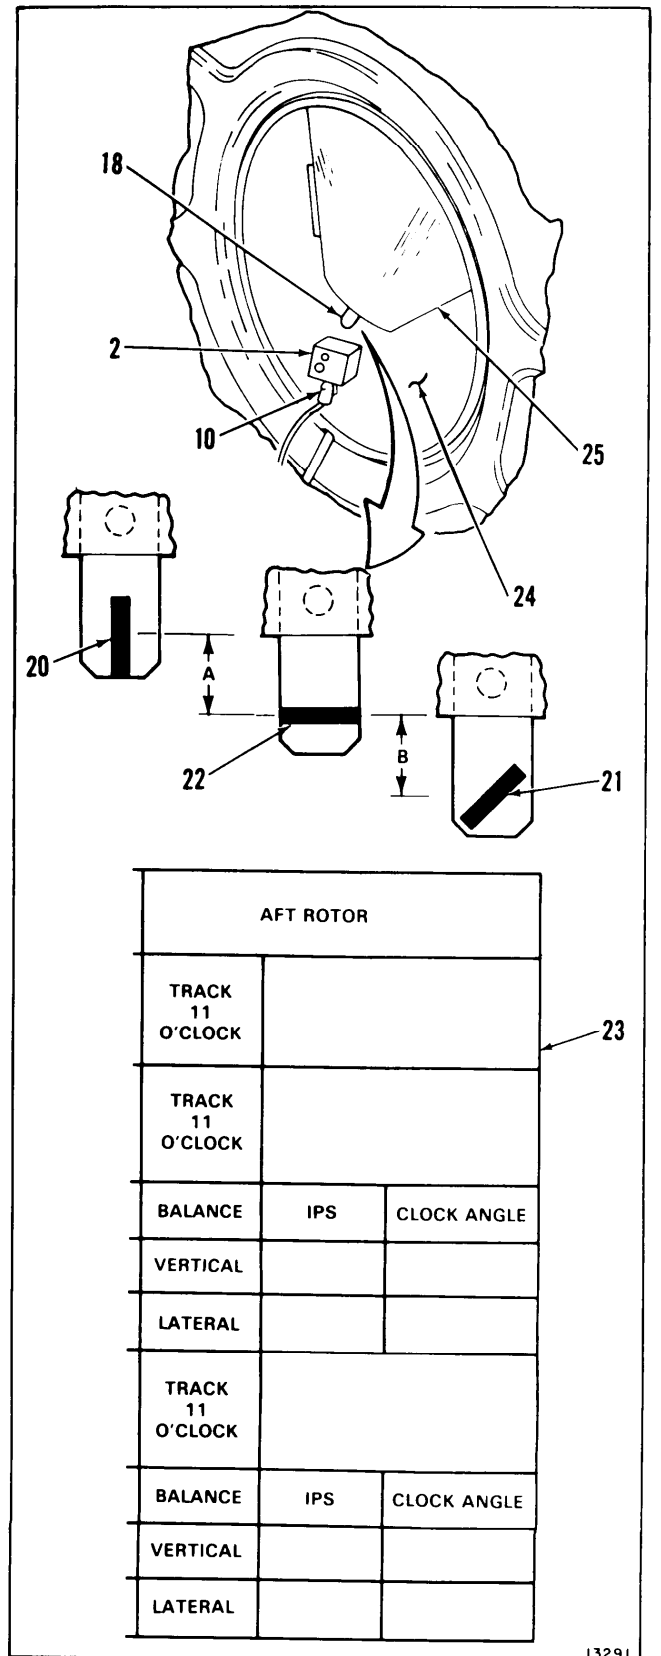

GO TO NEXT PAGE

**HOVER BALANCING**

20. Press balancer TEST switch (12). Check that PHAZOR lights (13) come on at 12, 4, and 8 o'clock positions. Lights must come on to verify that balancer (1) works.
21. Tune balancer (1) as follows:

**NOTE**

Balancer must be tuned before recording vibration data. If it is not, data will not be valid. Adjustments made on the basis of invalid data may increase vibration levels.

- a. Set switch (26) to FWD LATERAL. Note clock angle of PHAZOR light (13) that is on.
  - b. Press VERIFY TUNE switch (14). Note clock position of PHAZOR light (13) that comes on. If same light is on as in step a., go to step 22. If same light is not on, go to step c.
  - c. Press and hold VERIFY TUNE switch (14) and adjust RPM TUNE dial (15). If PHAZOR light (13) moves clockwise when VERIFY TUNE switch is pressed, adjust RPM TUNE dial counterclockwise. If PHAZOR light moves counterclockwise when VERIFY TUNE switch is pressed, adjust RPM TUNE dial clockwise.
  - d. Repeat steps a. thru c. until PHAZOR light (13) comes on at same clock angle before and after VERIFY TUNE switch (14) is pressed.
22. Note clock angle of PHAZOR light (13) and reading on IPS meter (16). Record data in FWD ROTOR HOVER LATERAL boxes of Track and Balance worksheet (23).

**TRACK AND BALANCE WORK SHEET**

FLIGHT NO \_\_\_\_\_ AIRCRAFT S/N \_\_\_\_\_

DATE \_\_\_\_\_ AIRCRAFT MODEL \_\_\_\_\_

FLIGHT CONDITION	FWD ROTOR			AFT ROTOR		
	TRACK 1 O CLOCK			TRACK 11 O CLOCK		
GROUND						
HOVER	TRACK 1 O CLOCK			TRACK 11 O CLOCK		
	BALANCE	IPS	CLOCK ANGLE	BALANCE	IPS	CLOCK ANGLE
	VERTICAL			VERTICAL		
	LATERAL			LATERAL		
130 KTS	TRACK 1 O CLOCK			TRACK 11 O CLOCK		
	BALANCE	IPS	CLOCK ANGLE	BALANCE	IPS	CLOCK ANGLE
	VERTICAL			VERTICAL		
	LATERAL			LATERAL		

13292

**GO TO NEXT PAGE**



**5-142.1 COMPUTER-AIDED HOVER/IN-FLIGHT TRACKING AND BALANCING (Continued) 5-142.1**

23. Set switch (26) to AFT LATERAL.
24. Repeat step 21. to tune balancer.
25. Note clock angle of PHAZOR light (13) and reading on IPS meter (16). Record data in AFT ROTOR HOVER LATERAL boxes of Track and Balance worksheet (23).
26. Set switch (26) to FWD VERTICAL.
27. Repeat step 21. to tune balancer.
28. Note clock angle of PHAZOR light (13) and reading on IPS meter (16). Record data in FWD ROTOR HOVER VERTICAL boxes of worksheet (23).
29. Set switch (26) to AFT VERTICAL.
30. Repeat step 21. to tune balancer.
31. Record clock angle of PHAZOR light (13) and reading on IPS meter (16) in AFT ROTOR HOVER VERTICAL boxes of worksheet (23).

**TRACK AND BALANCE WORK SHEET**

FLIGHT NO \_\_\_\_\_ AIRCRAFT S/N \_\_\_\_\_

DATE \_\_\_\_\_ AIRCRAFT MODEL: \_\_\_\_\_

FLIGHT CONDITION	FWD ROTOR			AFT ROTOR		
	TRACK 1 O'CLOCK			TRACK 11 O'CLOCK		
GROUND						
HOVER	TRACK 1 O'CLOCK			TRACK 11 O'CLOCK		
	BALANCE	IPS	CLOCK ANGLE	BALANCE	IPS	CLOCK ANGLE
	VERTICAL			VERTICAL		
	LATERAL			LATERAL		
130 KTS	TRACK 1 O'CLOCK			TRACK 11 O'CLOCK		
	BALANCE	IPS	CLOCK ANGLE	BALANCE	IPS	CLOCK ANGLE
	VERTICAL			VERTICAL		
	LATERAL			LATERAL		

13293

**GO TO NEXT PAGE**

5-142.1 COMPUTER-AIDED HOVER/IN-FLIGHT TRACKING AND BALANCING (Continued)

32. Evaluate vibration levels as follows:

- a. If all vibration levels are less than 1.0 IPS, continue with an in-flight track and balance at 130 knots (step 34.).
- b. If any recorded vibration level is 1.0 IPS or more, have the pilot land the helicopter and shut down the engines (TM 55-1520-240-10).

33. If rotor blade tip path spread (A + B) is more than 1/2 inch, adjust pitch links on forward or aft head as follows:

**NOTE**

One mark of pitch link adjustment changes blade track in hover or forward flight 0.2 inch.

- a. **Multiply distance A by 5.** This is the number of marks of pitch link adjustment needed to bring high blade down into track. **Record number** in P/L box of POST FLIGHT CORRECTION box of Configuration Record (27).
- b. **Multiply distance B by 5.** This is the number of marks of pitch link adjustment need to bring low blade up into track. **Record number** as in step a.
- c. When you have recorded all numbers for forward and aft blades, **adjust pitch links (Task 5-94).**

27

**CH-47 FIBERGLASS ROTOR BLADES  
CONFIGURATION RECORD**

TARGET  
FWD  
TARGE

AIRCRAFT S/N \_\_\_\_\_  
AIRCRAFT MODEL \_\_\_\_\_  
DATE \_\_\_\_\_

NOTE POSITION BLADES SO DOUBLE INTERRUPTER IS OVER MAGNETIC PICKUP

BLADE RECORD	BLADE COLOR	TIP TARGET CONFIGURATION	BLADE S/N	TIP WT VIBREX
FWD TARGET				
FWD A				
FWD B				
AFT TARGET				
AFT A				
AFT B				

POST FLIGHT CORRECTION

FWD BLADE	P/L		WT		P/L		WT		P/L		WT		P/L		WT	
AFT BLADE																

13294

**5-142.1 COMPUTER-AIDED HOVER/IN-FLIGHT TRACKING AND BALANCING (Continued)** **5-142.1*****IN-FLIGHT TRACKING***

34. Have pilot fly helicopter straight and level at 130 knots and 100 percent rotor rpm.
35. Track blades in same manner as in hover (steps 4. through 19.).

***IN-FLIGHT BALANCING***

36. Check in-flight blade balance in same manner as in hover (steps 20. through 33.).

***TRACK AND BALANCE CORRECTION***

37. Use computer to determine corrections required for proper track and balance (Task 5-142.3).

**FOLLOW-ON MAINTENANCE:**

None

**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Sharp Pocket Computer PC-1500A or Equivalent
- Sharp Printer CE-150 or Equivalent

**Materials:**

None

**Personnel Required:**


Medium Helicopter Repairer

**References:**

- Task 5-142.7
- Task 5-142.8
- Task 5-142.9
- Task 5-142.10

**Equipment Condition:**


Off Helicopter Task

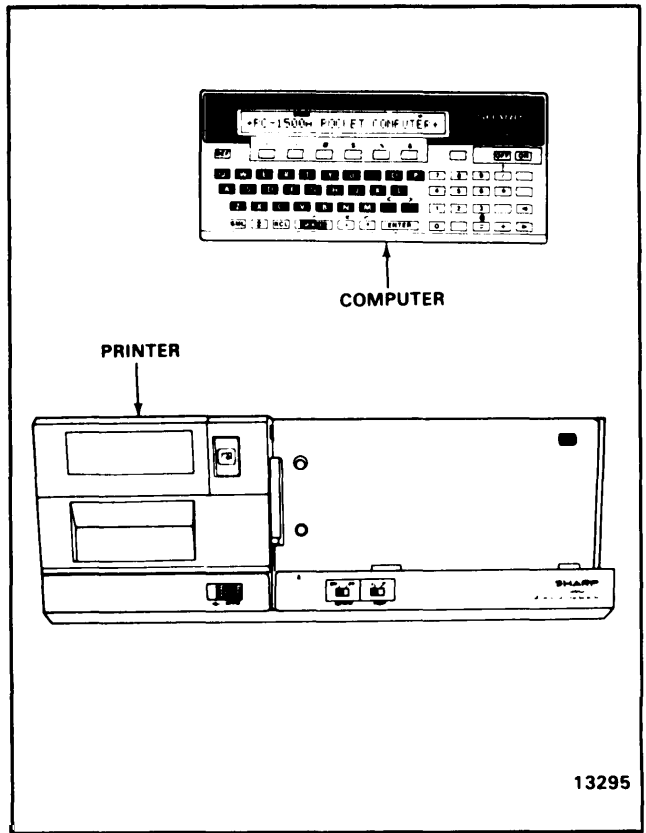

**NOTE**

Perform this task to check the computer for proper operation before taking it on a track and balance flight.

1. Press ON key (1). Check that black dot (2) appears in upper right corner of screen (3). If it does not, replace batteries (Task 5-142.9).
2. Press OFF key (4).

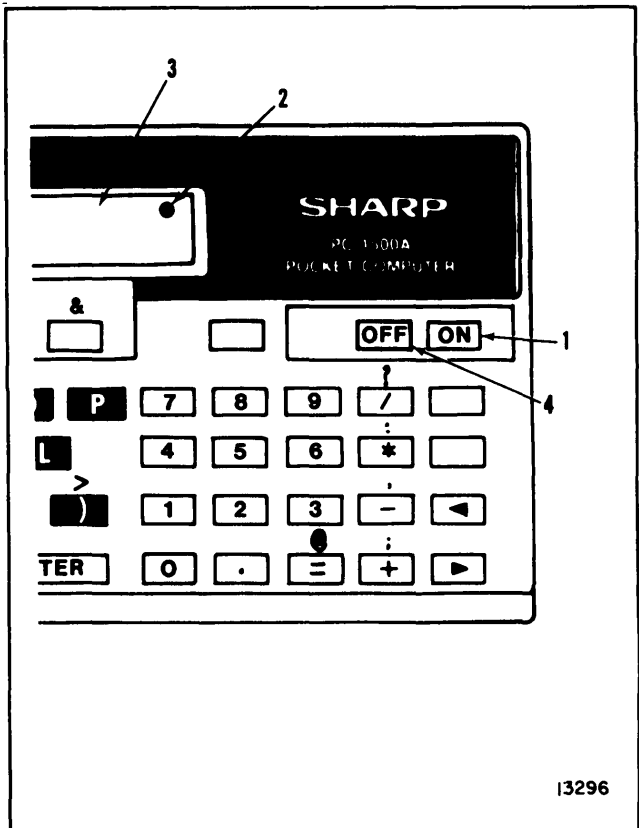

**GO TO NEXT PAGE**

## 5-142.2 COMPUTER PREPARATION (Continued)


5-142.2

3. If printer (5) will be used, check it for proper operation as follows:

**NOTE**

Use printer whenever possible to provide a record of computations.

- a. **Install printer (5)** on computer (6) (Task 5-142.7).
- b. **Check that paper (7) is in printer (5)**. Install new roll, if needed (Task 5-142.8).
- c. **Press ON key (1)**. If CHECK 6 appears on screen (3), printer batteries must be charged. (Refer to computer operating instructions.)

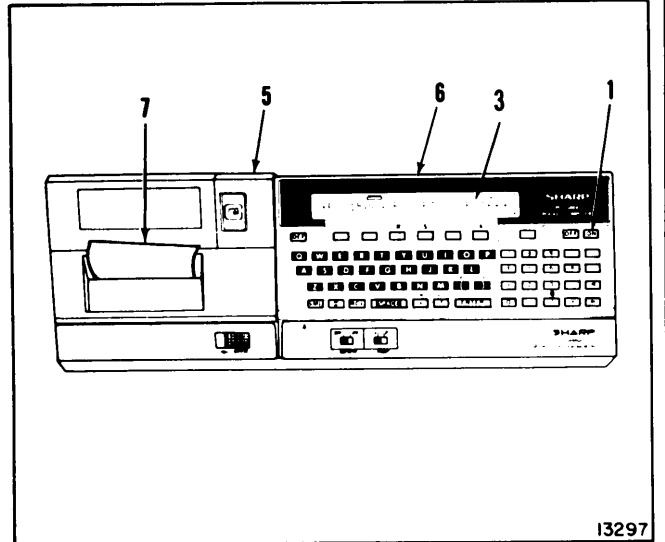


13297

**NOTE**

It takes 15 hours to fully charge printer batteries. The printer will run for 4 hours on a full charge.

- d. Check that printer pens (8) work properly as follows:
  - (1) **Press ON key (1) twice.** Screen (3) will show BREAK IN XXXX.
  - (2) **Press CL button (9), then ENTER key (10). Type T E S T and press ENTER key again.** Each pen (8) will draw a test square.
  - (3) If a pen (8) is defective, replace it (Task 5-142. 10).
  - (4) **Press OFF key (4).**

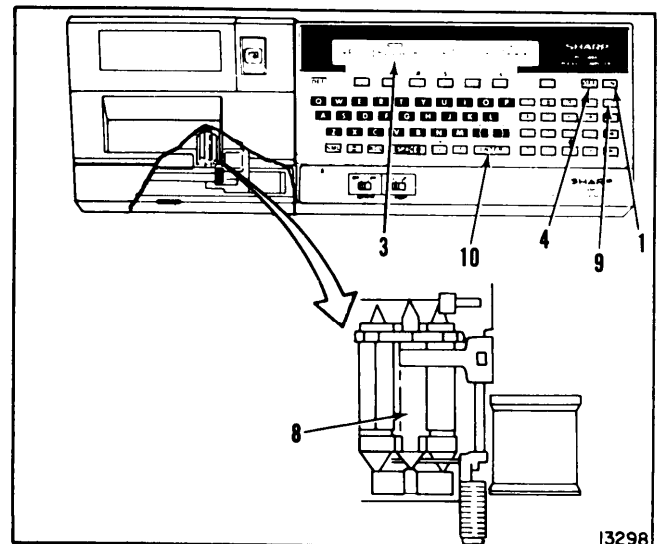

13298

**FOLLOW-ON MAINTENANCE:**

None

**END OF TASK**

**5-142.3 COMPUTER OPERATION**

**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

Sharp Pocket Computer PC-1500A or Equivalent

**Materials:**


None

**Personnel Required:**

Medium Helicopter Repairer

**Equipment Condition:**

Track and Balance Data Recorded  
 Computer Prepared for Computation  
 (Task 5-142.2)

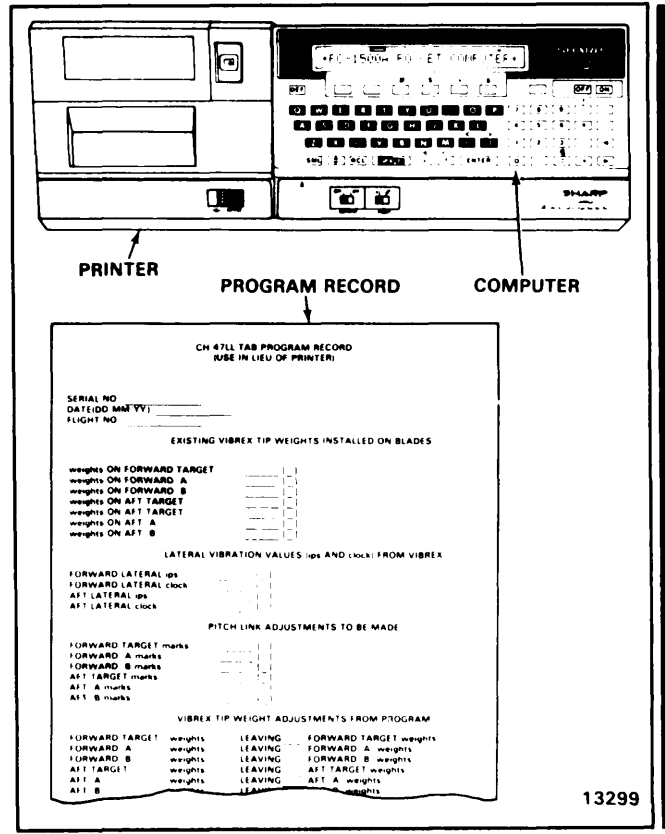

**NOTE**


Before proceeding make sure the following data is available:

- Blade tip target positions.
- Pitch link length change.
- Lateral vibration amplitude and angle.

1. Press **ON** key (1). Screen (2) will show PRINTER ATTACHED (Y OR N)? Press **Y** (for Yes) if printer (3) is attached to computer (4). If not, press **N**. Press **ENTER** key (5).

**NOTE**

- A ? on the screen indicates that the computer is waiting for input.
- If you make a mistake while typing in data, do not press ENTER key. Press CL key and enter data again. If you already pressed ENTER, press OFF key, then ON key. Enter all data again.

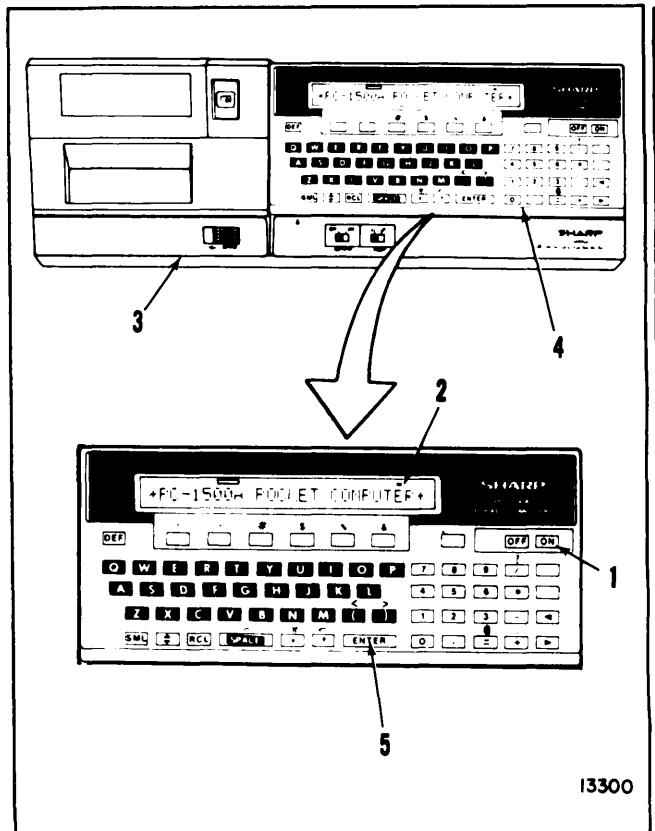


**GO TO NEXT PAGE**

5-142.3 COMPUTER OPERATION (Continued)

5-142.3


2. If you press N, indicating no printer (3) attached, screen (2) will momentarily show CH-47 PITCH LINK VIBREX. Transfer input data on initial tip weight distribution, observed vibration values, and required pitch link adjustments to Program Record (6). Go to step 19.

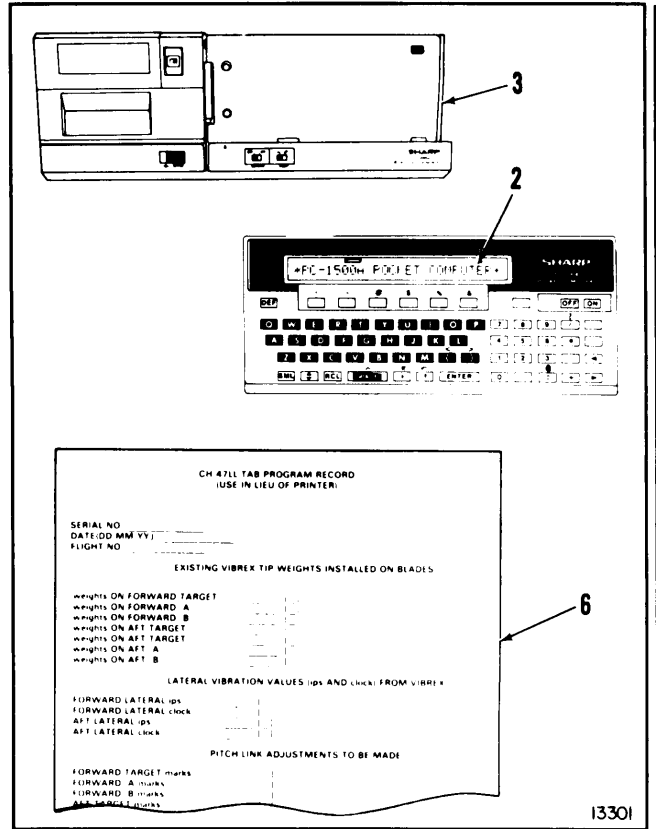

GO TO NEXT PAGE

5-142.3 COMPUTER OPERATION (Continued)

3. If you pressed Y, CH-47 PITCH LINK VIBREX will print at top of paper (7) on printer (3). Screen (2) will show SERIAL NO.?
4. **Type in helicopter serial number and press ENTER** key (5). Screen (2) will show DATE:?: (DD/MM/YY).
5. **Type in current day/month/year** in two-digit form **and press ENTER** key (5). Screen (2) will show FLIGHT NO.? Type in flight number and press ENTER key.
6. Screen (2) will show INPUT NO. OF WTS. ON BLADES, then WTS ON FWD TARGET=?
7. **Type in the number of existing balance weights on the forward target blade.** Refer to INITIAL CONFIGURATION BLOCK (8) of Configuration Record (9). **Press ENTER** key (5). Screen (2) will show WTS ON FWD -A- =?
8. **Type in number of existing balance weights on forward A blade as in step 7. Press ENTER** key (5).
9. **Continue** entering number of balance weights on blade called for **until weights for all six blades are entered.**

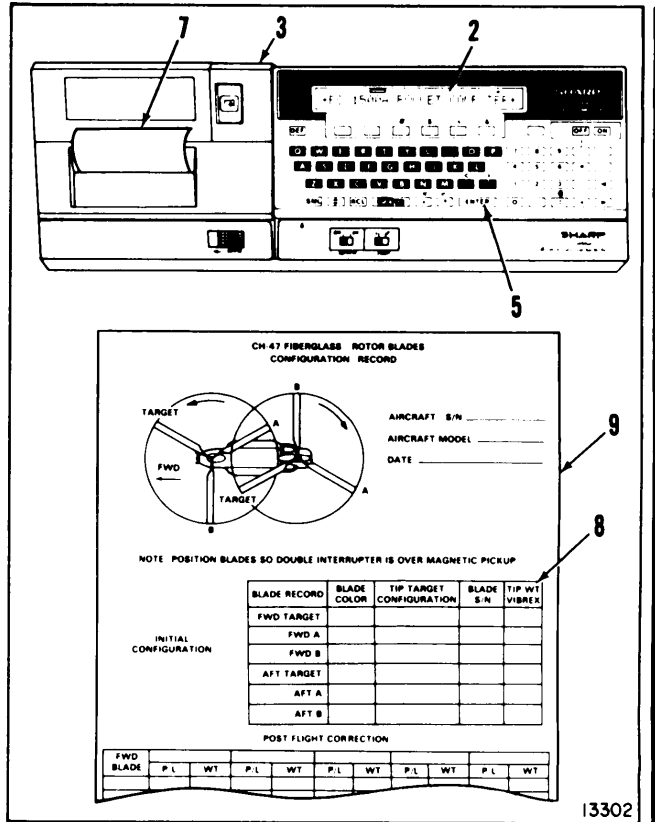



CH-47 PLL TAB PROGRAM RECORD  
(USE IN LIEU OF PRINTER)

SERIAL NO: \_\_\_\_\_  
DATE(DD/MM/YY): \_\_\_\_\_  
FLIGHT NO: \_\_\_\_\_

EXISTING VIBREX TIP WEIGHTS INSTALLED ON BLADES:

weights ON FORWARD TARGET = \_\_\_\_\_   
weights ON FORWARD -A- = \_\_\_\_\_   
weights ON FORWARD -B- = \_\_\_\_\_   
weights ON AFT TARGET = \_\_\_\_\_   
weights ON AFT TARGET = \_\_\_\_\_   
weights ON AFT -A- = \_\_\_\_\_   
weights ON AFT -B- = \_\_\_\_\_

LATERAL VIBRATION VALUES (IPS AND CLOCK) FROM VIBREX:

FORWARD LATERAL ips = \_\_\_\_\_   
FORWARD LATERAL clock = \_\_\_\_\_   
AFT LATERAL ips = \_\_\_\_\_   
AFT LATERAL clock = \_\_\_\_\_

PITCH LINK ADJUSTMENTS TO BE MADE:

FORWARD TARGET marks = \_\_\_\_\_   
FORWARD -A-marks = \_\_\_\_\_   
FORWARD -B-marks = \_\_\_\_\_   
AFT TARGET marks = \_\_\_\_\_   
AFT -A-marks = \_\_\_\_\_   
AFT -B-marks = \_\_\_\_\_

VIBREX TIP WEIGHT ADJUSTMENTS FROM PROGRAM:

FORWARD TARGET	weights	_____	LEAVING	_____	FORWARD TARGET	weights
FORWARD -A-	weights	_____	LEAVING	_____	FORWARD -A-	weights
FORWARD -B-	weights	_____	LEAVING	_____	FORWARD -B-	weights
AFT TARGET	weights	_____	LEAVING	_____	AFT TARGET	weights
AFT -A-	weights	_____	LEAVING	_____	AFT -A-	weights
AFT -B-	weights	_____	LEAVING	_____	AFT -B-	weights

CAUTION:

After recording Vibrex tip weight adjustment, check the box [ ] to insure that input values correspond to those recorded above. Input values must correspond to insure correct program output.

10. When all balance weights have been entered, screen (2) will briefly show:  
 ENTER IPS AND CLOCK ANGLE  
 ENTER CLOCK AS FOLLOWS:  
 HOURS (.5 FOR HALF HOURS)

This display explains that vibration clock angle entries should be in half-hour increments, with .5 for the half hour. As an example, enter 12.5 for 12:30.

11. After the brief displays, screen (2) will show FWD LAT IPS=?. **Type in value of forward rotor lateral vibration.** Refer to FWD ROTOR LATERAL IPS entry on Track and Balance Worksheet (10).
12. **Press ENTER key (5).** Screen (2) will show FWD LAT CLOCK=? **Type in FWD ROTOR LATERAL CLOCK ANGLE** from worksheet (10). **Press ENTER** key.
13. **Repeat steps 11. and 12. for AFT ROTOR LATERAL IPS and AFT LAT CLOCK.**

14. When you have entered the aft lateral clock position into the computer, screen (2) will briefly show:  
 INPUT LINK CHANGES:  
 NUMBER OF MARKS  
 (-) SHORTEN, (+) LENGTHEN

This display explains that pitch link change entries must have a sign to indicate their effect on the link. If no sign is used, a + is assumed, so if a link is to be shortened, you must use a —.

15. Aft the brief displays, screen (2) will show FWD TARGET MARKS =? **Type in sign and amount of pitch link change needed for forward target blade.** Refer to P/L entry in POST FLIGHT CORRECTION box (11) of the Configuration Record. **Press ENTER** key (5).

**NOTE**

If no pitch link change is needed, just press ENTER key.

16. **Repeat step 11. for each of the remaining blades as it is displayed.**

The diagram shows a computer terminal with a screen and a keyboard. Screen (2) displays the prompt 'ENTER IPS AND CLOCK ANGLE'. Below the terminal is a 'TRACK AND BALANCE WORK SHEET' (10) with fields for flight information and a data table.

FLIGHT NO _____		AIRCRAFT S/N _____				
DATE _____		AIRCRAFT MODEL _____				
FLIGHT CONDITION	FWD ROTOR			AFT ROTOR		
	TRACK 1 O CLOCK			TRACK 11 O CLOCK		
HOVER	TRACK 1 O CLOCK			TRACK 11 O CLOCK		
	BALANCE	IPS	CLOCK ANGLE	BALANCE	IPS	CLOCK ANGLE
	VERTICAL			VERTICAL		
	LATERAL			LATERAL		
130 KTS	TRACK 1 O CLOCK			TRACK 11 O CLOCK		
	BALANCE	IPS	CLOCK ANGLE	BALANCE	IPS	CLOCK ANGLE
	VERTICAL			VERTICAL		
	LATERAL			LATERAL		

13304

The diagram shows the computer terminal with screen (2) displaying 'FWD TARGET MARKS =?'. Below it is a 'POST FLIGHT CORRECTION' worksheet (11) with columns for blade type and pitch link/weight changes.

FWD BLADE		P/L	WT	P/L	WT	P/L	WT	P/L	WT	P/L	WT
AFT BLADE											

13305

**GO TO NEXT PAGE**

5-142.3 COMPUTER OPERATION (Continued)


5-142.3

17. If printer (3) is attached to computer (4), it will automatically produce a tape (12) listing required tip weight adjustments, new tip weight configuration, and all input data.
18. If printout (12) calls for adding so many tip weights on one blade that the total number will exceed ten, the printout paper will also display the following:

```
* > 10 WTS MAX < *
* > PER BLADE < *
* > CONSULT MAINT < *
* > MANUAL FOR < *
* > DISPOSITION < *
```


If this happens, do one of the following:

- a. If no more than 12 weights are called for, make a trial run with ten weights. That may be enough for satisfactory smoothness.
- b. Switch blades to mount the problem blade nearest to the swashplate drive arms (Tasks 5-64 and 5-84). This position reduces the need for tip weights.
- c. Troubleshoot the rotor system (TM 55-1520-240-T).
- d. Replace all three blades on the problem rotor head (Tasks 5-64 and 5-84).

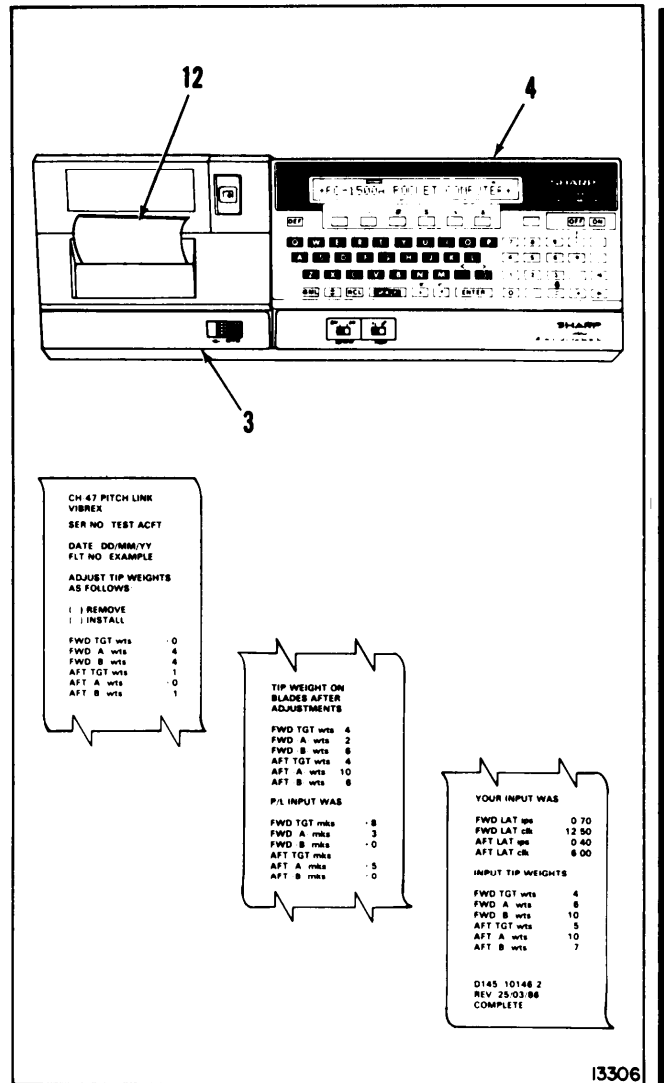

5-142.3 COMPUTER OPERATION (Continued)

19. If printer (3) is not attached to computer (4), screen (2) will show input, needed tip weight adjustments, and the new tip weight configuration for each blade. Press ENTER key (5) to display data one line at a time.
20. Check each value against input data recorded on Program Record (6). If figures match, place a check mark in the accompanying box. If any of the figures do not match, run the program over.
21. When all data have been presented, the word COMPLETE will appear on printout paper (12) or screen (2). If printer (3) is attached to computer (4), the screen will show ANOTHER PRINTOUT (Y OR N)? If you want another copy, press Y and ENTER key (5).
22. Press OFF key (13).

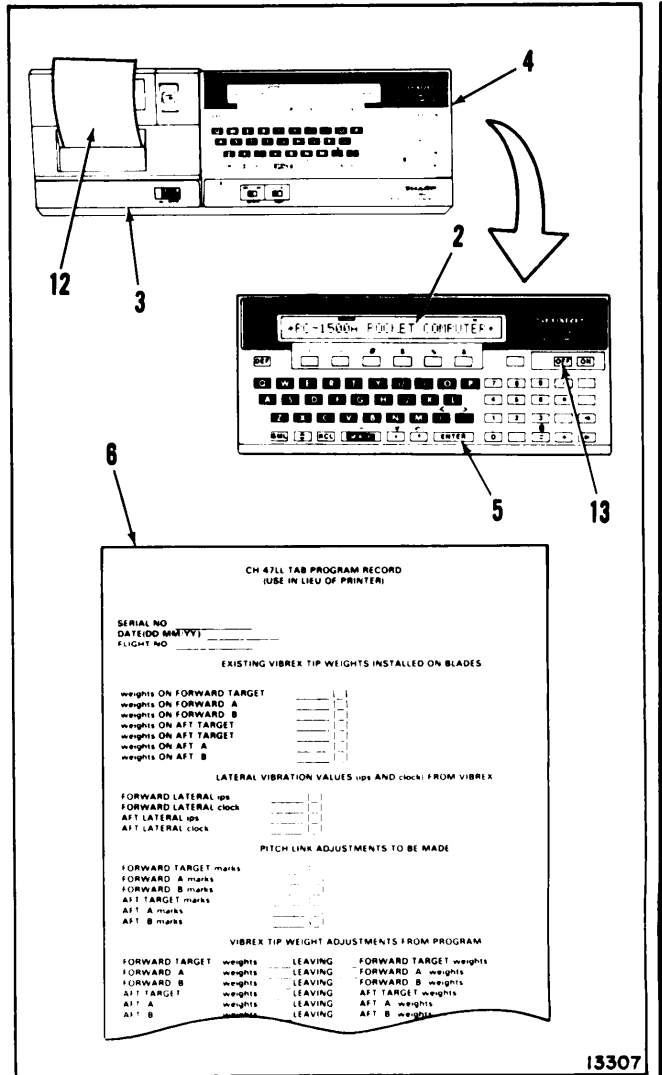

13307

FOLLOW-ON MAINTENANCE:

None

END OF TASK

## 5-142.4 ANALYZE COMPUTER ERROR MESSAGES

5-142.4

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**

None

**Personnel Required:**

Medium Helicopter Repairer


**References:**

Task 5-142.7

Task 5-142.10


**Equipment Condition:**

Off Helicopter Task

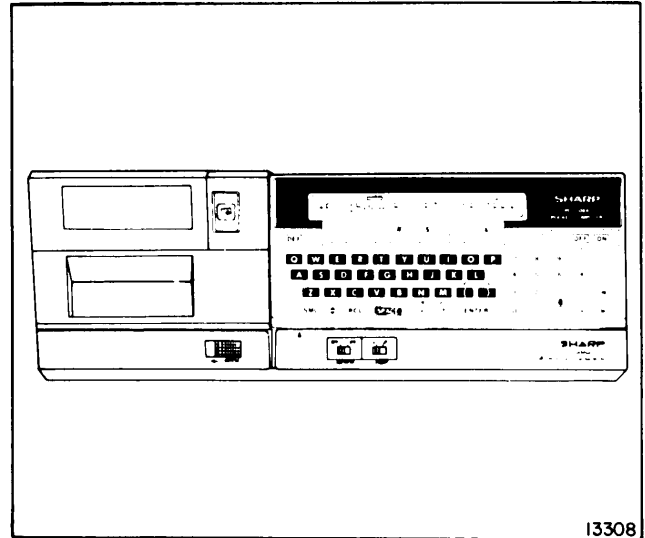
**NOTE**

The following steps refer to operation in which the computer is attached to the printer.

1. If one of the following error messages appears on screen (1), clear it as noted:
  - a. CHECK 6: If this appears after ON key (2) is pressed, **charge printer batteries**. Refer to computer operating instructions.
  - b. ERROR 80 or ERROR 78: If one of these appears during program operation, **charge printer batteries**. If necessary, you can continue running the program without the printer by doing the following:
    - (1) Press ON key (2) to stop program.
    - (2) Press OFF key (3), then ON key (2). Program will continue.
    - (3) When screen (1) reads PRINTER ATTACHED (Y or N)?, press N key (4). Program will continue as if printer (5) were not attached.
    - (4) Charge printer batteries as soon as possible.

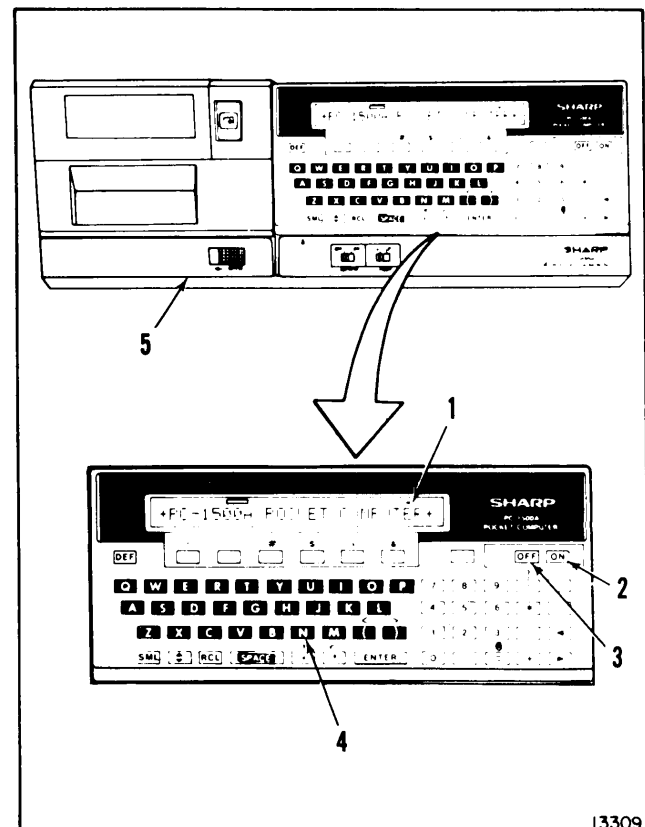**GO TO NEXT PAGE**

- c. ERROR 78: If this appears when ON key (2) is pressed, **printer (5) has not been removed from pen replacement mode** (Task 5-142.10).
  - d. ERROR 27: If this appears after you respond to the query PRINTER ATTACHED (Y OR N)?, it means that **you pressed Y, but printer (5) was not attached**. Attach printer (Task 5-142.7).
2. Clear a CHECK OR ERROR display from screen (1) as follows:
- a. Press ON key (2).
  - b. Press CL key (6). Screen (1) will clear. RUN will appear at top of screen and > will appear at left of screen.
  - c. Type RUN and press ENTER key (7).

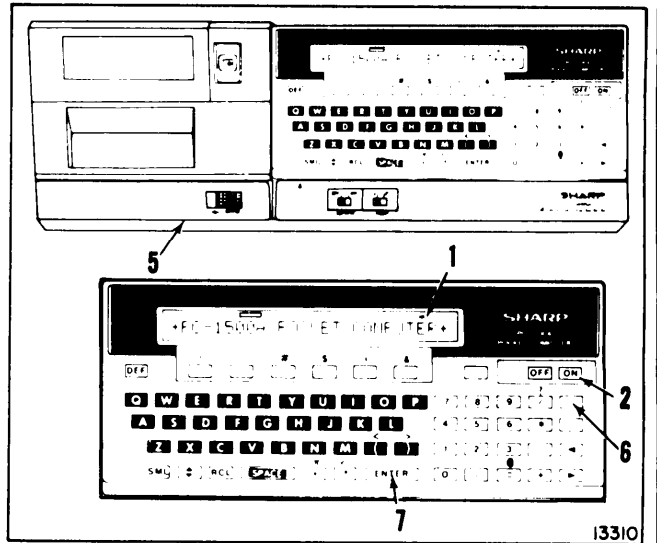

## FOLLOW-ON MAINTENANCE:

None

END OF TASK

5-526.20 Change 18

## 5-142.5 MAINTAIN TRACKING/BALANCING COMPUTER AND ACCESSORIES

5-142.5

### INITIAL SETUP

#### **Applicable Configurations:**

All

#### **Tools:**

None

#### **Materials:**

Cloth (E 120)

#### **Personnel Required:**


Medium Helicopter Repairer

#### **References:**

Task 5-142.9

#### **Equipment Condition:**

Off Helicopter Task

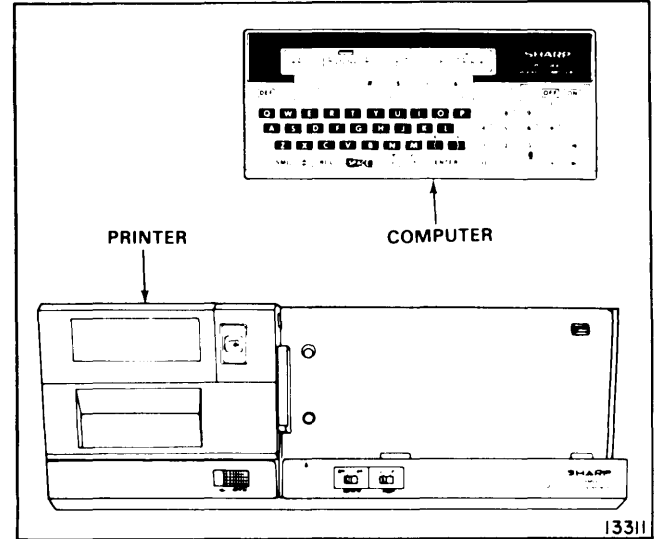

### NOTE

Observe the following general maintenance practices when handling the tracking/balancing computer and accessories.

1. **Do not expose the computer or its accessories to extreme temperatures or temperature changes** to dust, or to moisture. Clean only with a soft, dry cloth (E120). Do not use solvents or water.
2. **Keep the computer in its case as much as possible.** Exposure to radio frequency or electromagnetic radiation could damage the computer or program. The case provides some protection against such radiation.
3. **Do not store the magnetic accelerometers close to the computer.** When removed, store them in the top of the storage case, away from the computer.
4. **If the computer is dropped or suffers other impact, the internally-stored program may be affected.** If this happens, the computer must be reprogrammed. Refer to computer operating instructions.
5. **If the computer will not be used for over six months, remove the batteries.** (Task 5-142.9).

#### FOLLOW-ON MAINTENANCE:

None

**END OF TASK**

Change 18 5-526.21

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**


None

**Personnel Required:**

Medium Helicopter Repairer

**Equipment Condition:**

Off Helicopter Task

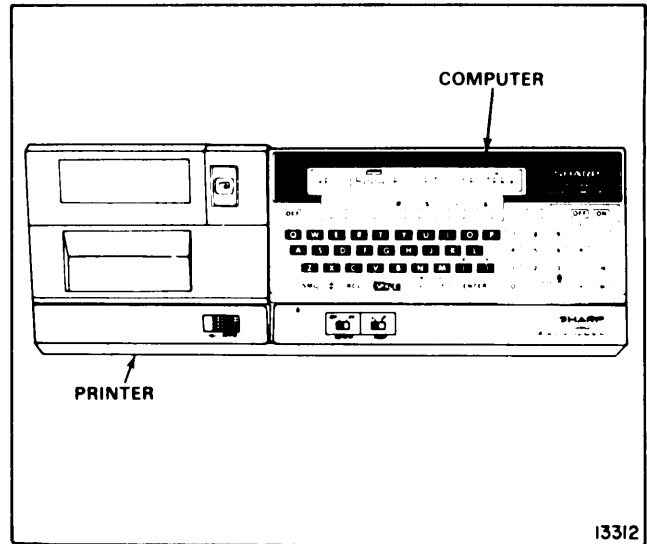


**CAUTION**

If power is not off, the computers internal program may be lost.


1. Press OFF key (1) on computer (2) to make sure power is off.
2. Move OPEN switch (3) at bottom edge of printer (4) left. Lift cover (5) from printer.

**NOTE**

Removing the cover allows a better grip to remove the computer.

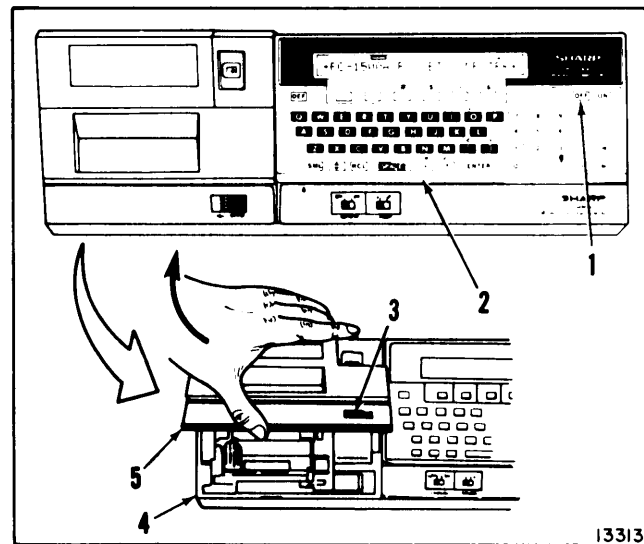


3. Hold printer (4). Gently slide computer (2) up and away from printer.

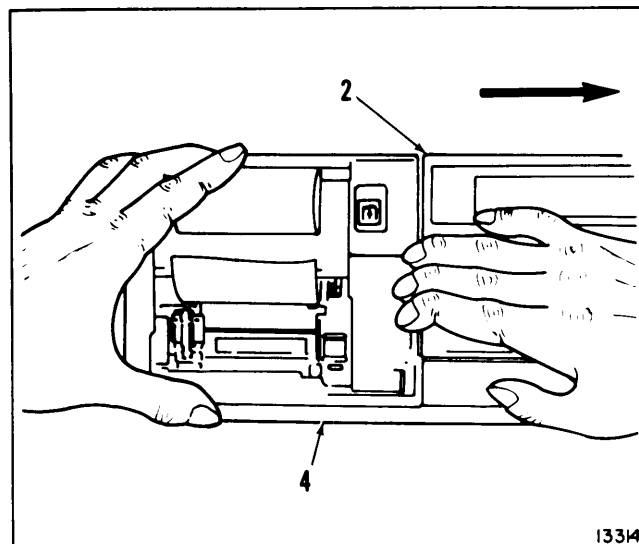




**5-142.6 REMOVE COMPUTER FROM PRINTER (Continued)****5-142.6**


4. Install cover (5) on printer (4). Lock it by moving OPEN switch (3) to the right.

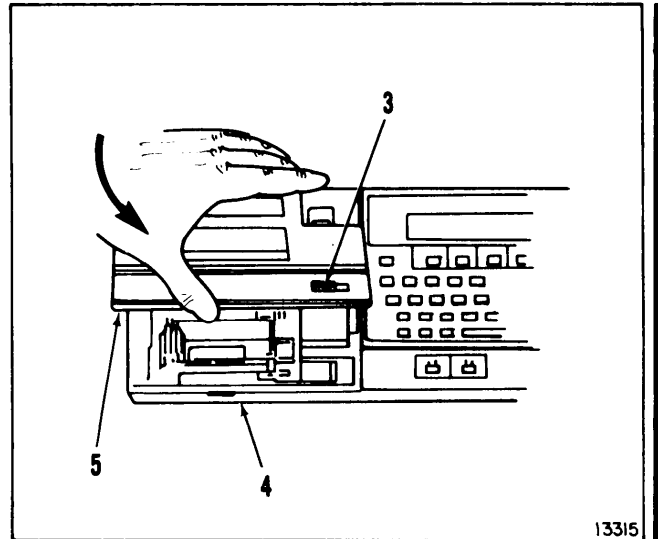

5. Remove connector cover (6) from back of printer (4). Install cover over connector opening at left side of computer (2).

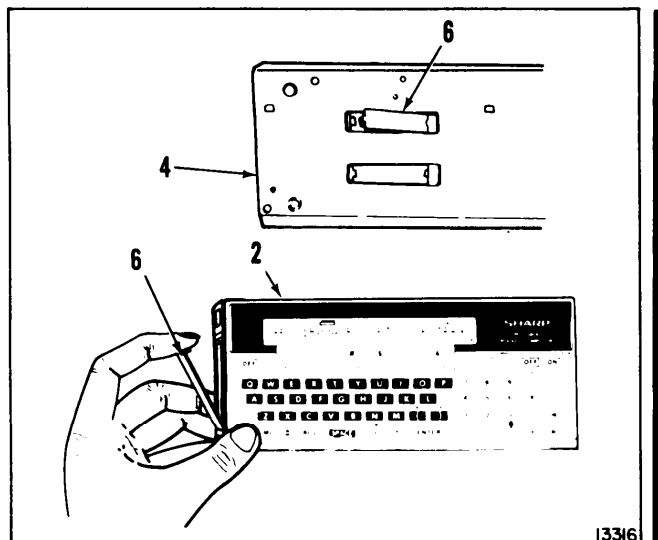**FOLLOW-ON MAINTENANCE:**

None

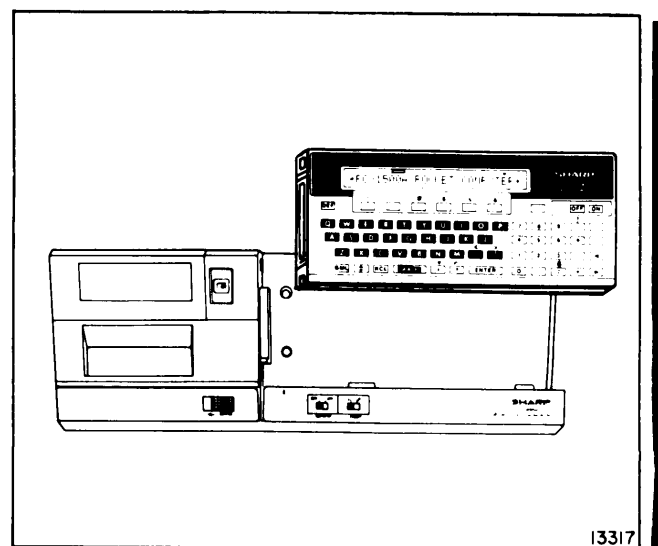**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**


None

**Personnel Required:**

Medium Helicopter Repairer

**Equipment Condition:**


Off Helicopter Task

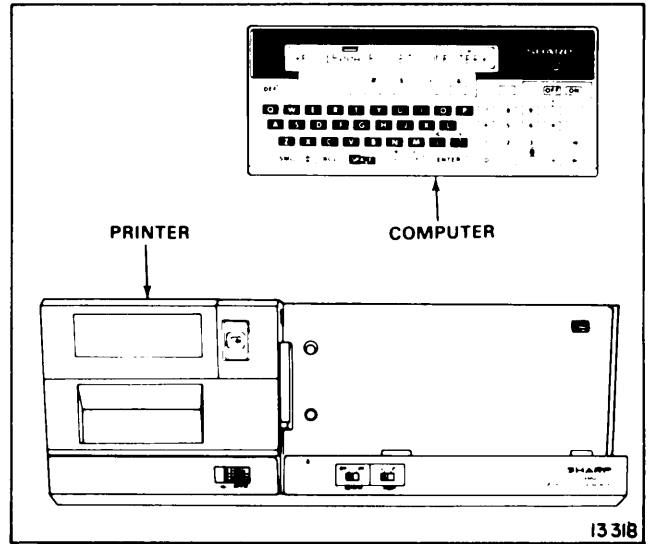

**CAUTION**

If power is not off, the computer's internal program may be lost.

1. Press OFF key (1) on computer (2) to make sure power is off.
2. Remove protective cover (3) from left side of computer (2). Use your fingernail. Snap cover onto bottom of printer (4).

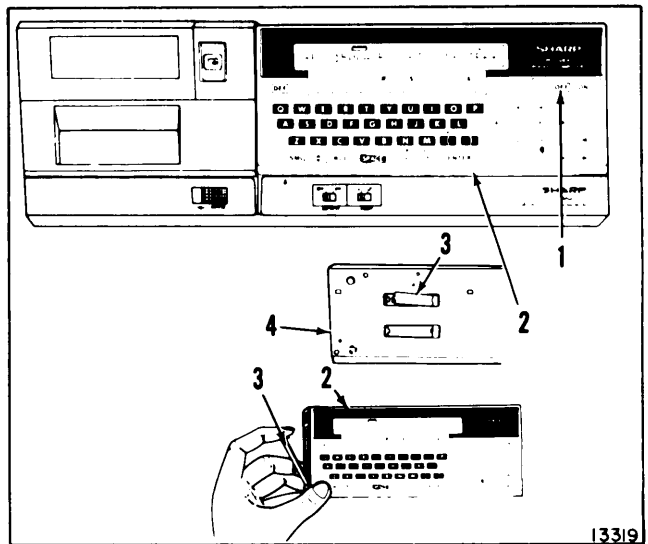


3. Lay computer (2) into cradle of printer (4) so that slots (5) line up with connectors (6). Align left edge of computer with ▲ mark (7) on lower edge of printer.

**NOTE**

If computer and printer do not fit together easily, do not force them. Reposition computer and try again.

4. Gently push computer (2) left and down so that connectors (6) snap into slots (5).

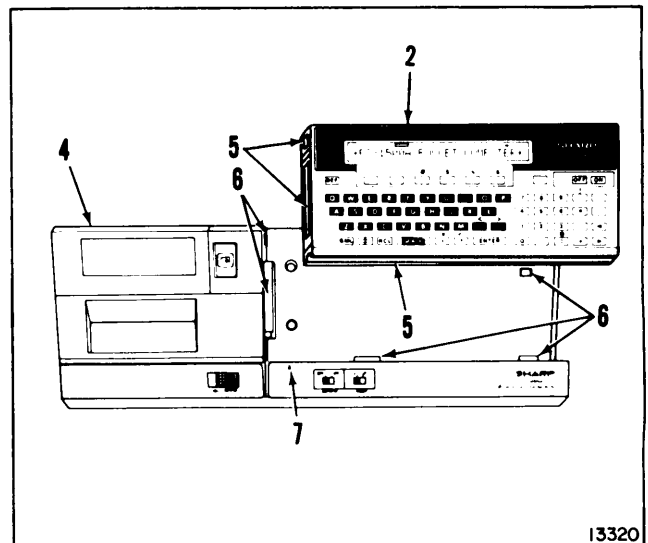


GO TO NEXT PAGE

5-526.24 Change 18

**5-142.7 ATTACH COMPUTER TO PRINTER (Continued)****5-142.7****FOLLOW-ON MAINTENANCE:**

None

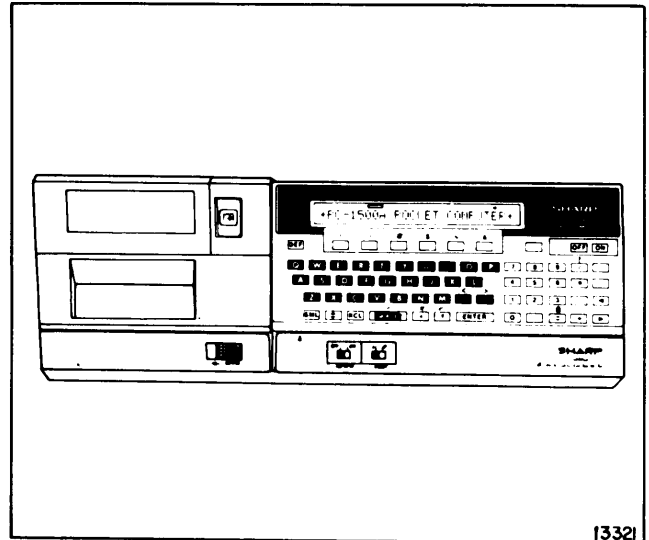**END OF TASK**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**


Printer Paper (E262.1)

**Personnel Required:**

Medium Helicopter Repairer


**Equipment Condition:**

Off Helicopter Task

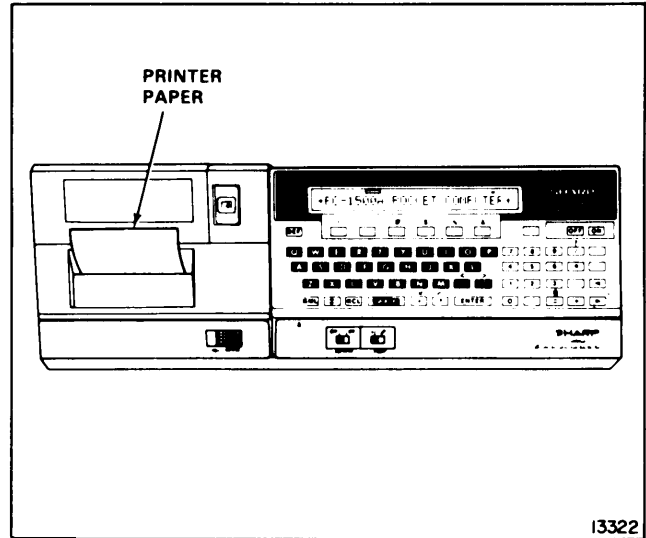

13322

1. Move **OPEN** switch (1) at bottom edge of printer (2) to the **left**. Lift cover (3) from printer.

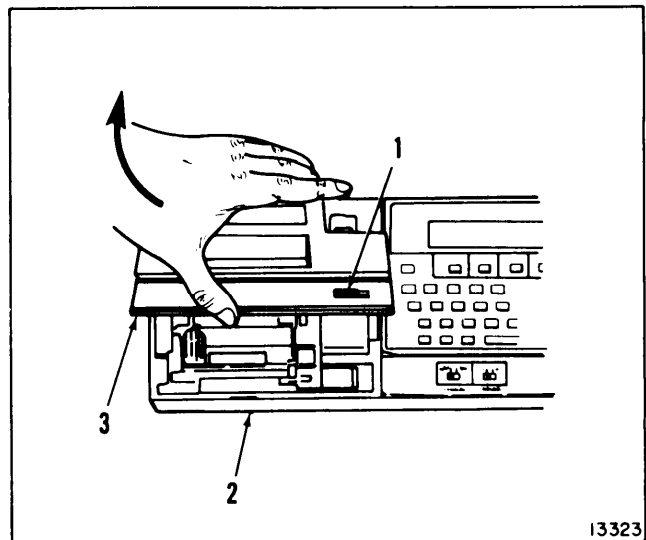


13323

**NOTE**

If edge of paper roll is not straight and smooth, it may prevent paper insertion.

2. Cut end of paper roll (E262.1) (4) straight across. Insert it into paper inlet (5).
3. Press computer **ON** key (6) and feed button (7). Feed paper (4) into paper inlet (5) until it protrudes about 2 inches from printer (2).

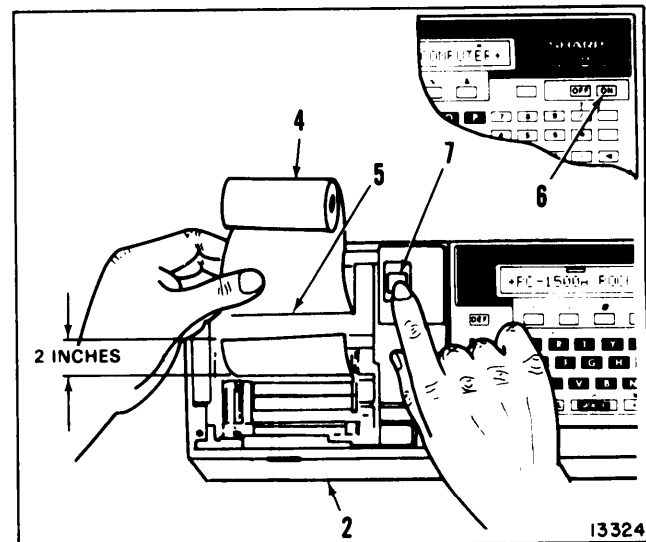

13324


**GO TO NEXT PAGE**

5-526.26 Change 18


## 5-142.8 REPLACE PRINTER PAPER (Continued)

5-142.8

4. Remove shaft (8) from printer (2). Insert shaft in paper roll (4). Install shaft and roll in printer.

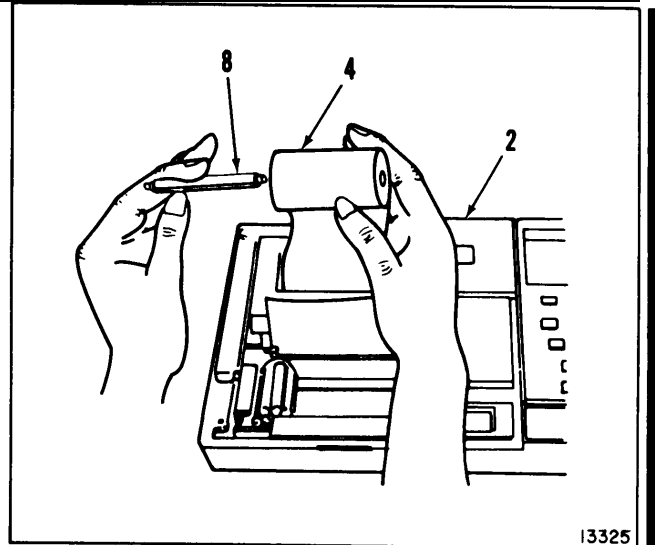


5. Install cover (3) on printer (2). Thread end of paper roll (4) out of cover and through paper cutter (9).
6. Lock cover (3) by moving OPEN switch (1) right.

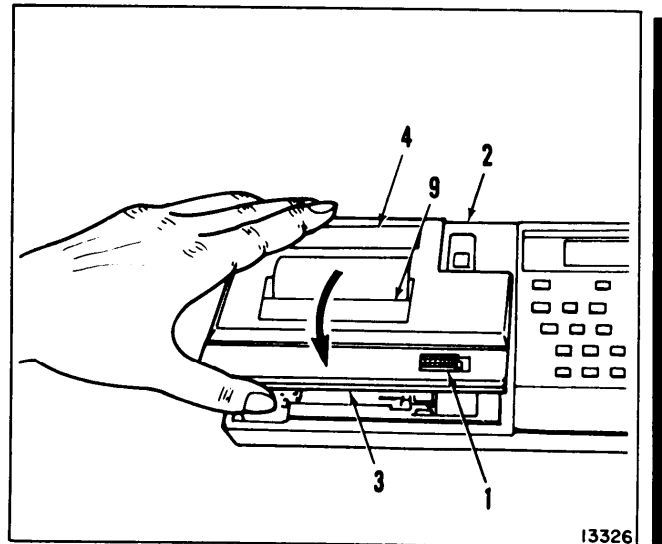

## FOLLOW-ON MAINTENANCE:

None

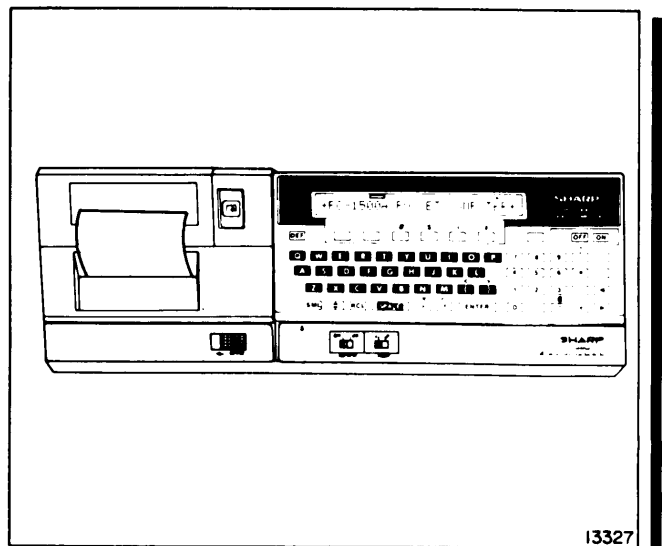

END OF TASK

5-142.9 REPLACE COMPUTER BATTERIES

5-142.9

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**


Batteries (E81.1)

**Personnel Required:**

Medium Helicopter Repairer

**Equipment Condition:**

Off Helicopter Task

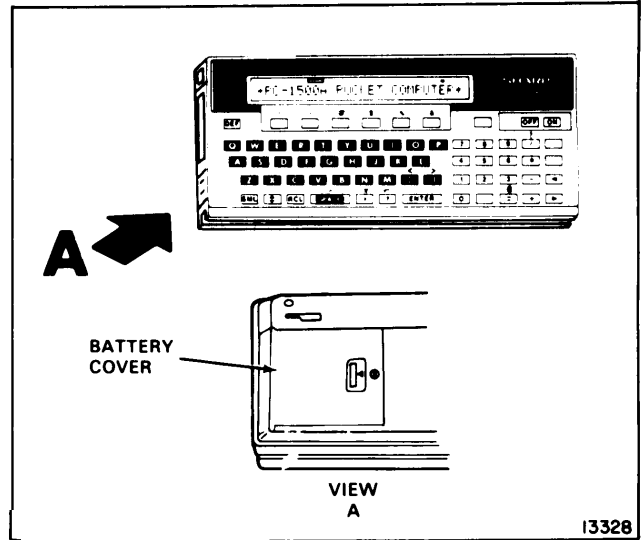



**NOTE**

Always replace all four batteries at the same time. Do not mix new and used batteries.

1. Check that power to computer (1) is off. **Press POWER OFF key (2).**
2. Loosen screw (3) on battery cover (4) on the bottom of computer (1). Use a coin or non-magnetic screwdriver. **Slide cover away** from computer.
3. Remove old batteries (5). Install new ones (E81.1). **Be sure to observe correct polarity (+ or -) direction.**
4. **Slide cover (4) in position** on computer (1). **Tighten screw (3).**
5. **Press ON key (6). Check that screen (7) reads PRINTER ATTACHED (Y OR N)?** If it does not, press ON key again. Then press CL key (8). Type in R U N and press ENTER key (9).

**FOLLOW-ON MAINTENANCE:**

None

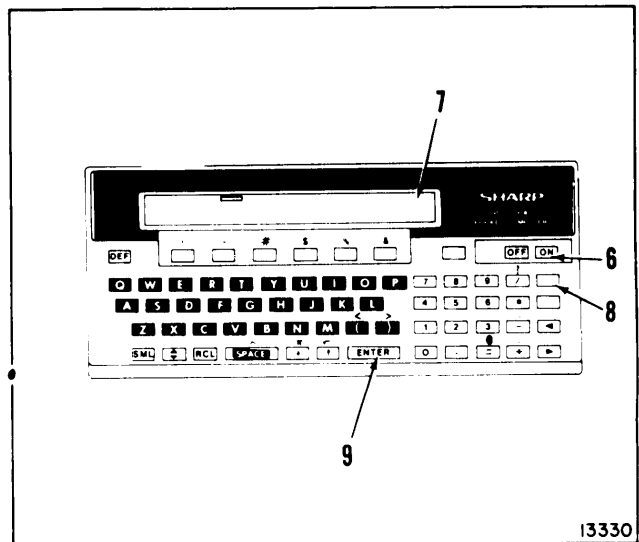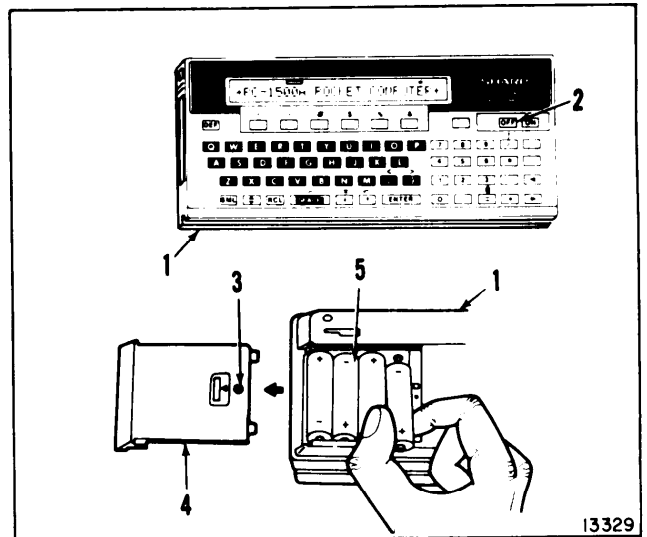

**END OF TASK**

**5-142.10 REPLACE PRINTER PENS****5-142.10**

## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**


Printer Pen (E271.1)

**Personnel Required:**

Medium Helicopter Repairer


**Equipment Condition:**

Off Helicopter Task

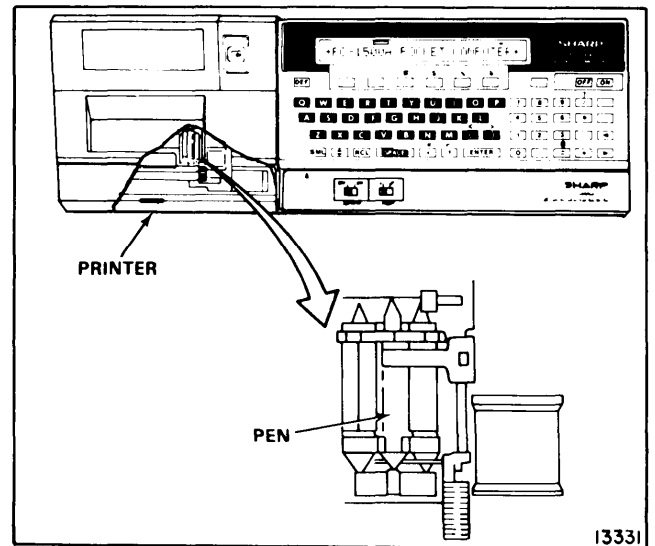**NOTE**

Replace any one of the four colored pens in the same way.

1. **Move OPEN switch (1)** at bottom edge of printer (2) **left**. **Lift cover (3)** from printer.
2. **Press and hold 0 key (4)** on computer (5). At the same time, **press feed key (6)** on printer (2). When pen holder (7) starts to move, release feed key.
3. **Press and release feed key (6)** as in step 2. **until pen (8) to be replaced rotates to top** of holder (7). **Release 0 key (4)**.
4. **Press pen removal lever (9)**. Pen (8) at top of holder will be released.

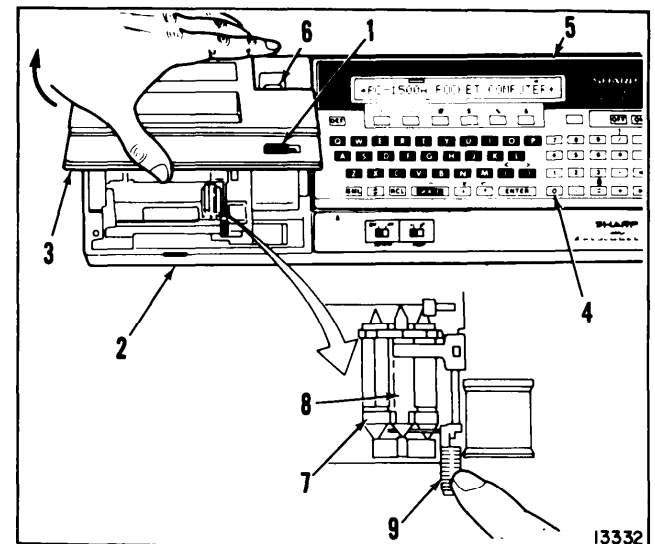**NOTE**

Hold pen securely when removing it so it does not fall into printer.

5. **Remove pen (8)**. **Snap replacement pen (E271.1) into position**.

**GO TO NEXT PAGE**


**5-142.10 REPLACE PRINTER PENS (Continued)****5-142.10**

6. Repeat steps 2. thru 5. until all required pens (8) have been replaced.
7. When required pens have been replaced, **press CL key (10) on computer (5) and feed key (6) on printer (2).**

**NOTE**

Leaving pens uncapped may allow ink to dry out. Remove and cap all pens if computer will not be used for more than two weeks.

8. **Install caps** on removed pens.
9. **Install cover (3)** on printer (2). Lock it by moving OPEN switch (1) to the right.

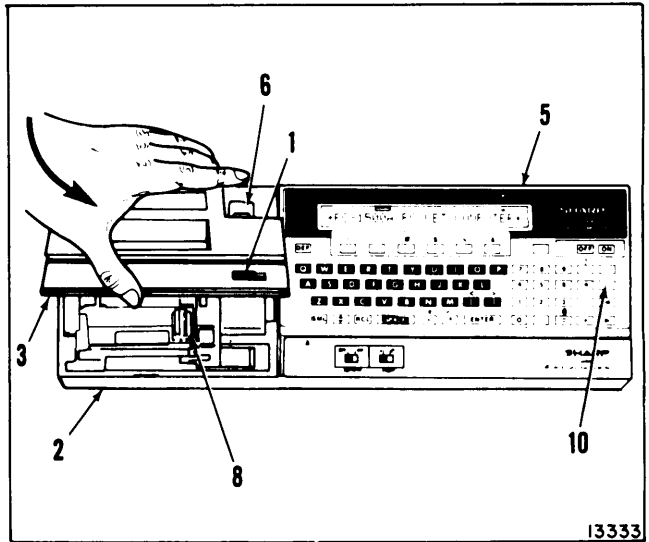**FOLLOW-ON MAINTENANCE:**

None

**END OF TASK**

5-526.30 Change 18



## 5-143 REMOVE TRACKING AND BALANCING EQUIPMENT (STROBEX/VIBREX)

5-143

### INITIAL SETUP

#### **Applicable Configurations:**

All

#### **Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Torque Wrench, 100 to 750 Inch-Pounds

#### **Materials:**

Lockwire (E233)

#### **Personnel Required:**


Medium Helicopter Repairer (2)

#### **References:**


Task 1-26

#### **Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
One Forward and One Aft Rotary-Wing Blade  
Tied-Down (Task 1-26)  
Forward and Aft Pylon Work Platform Open  
(Task 2-2)

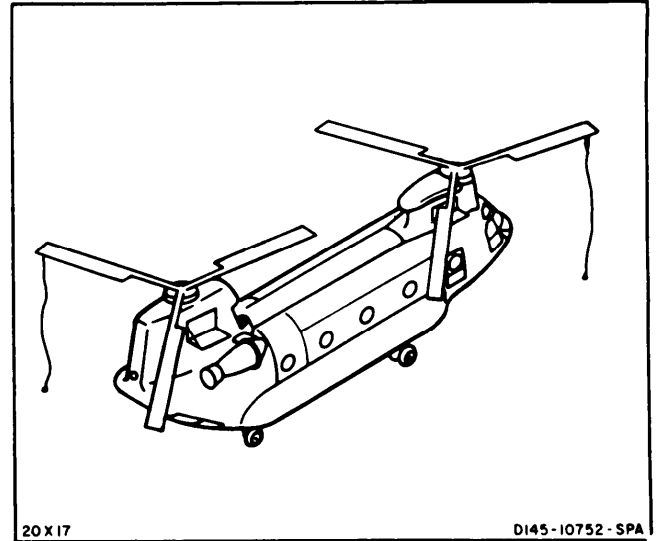

1. Disconnect plug (1) from forward accelerometer block (2). Install plug on dummy connector (3). Remove two screws (4). Remove accelerometer block.

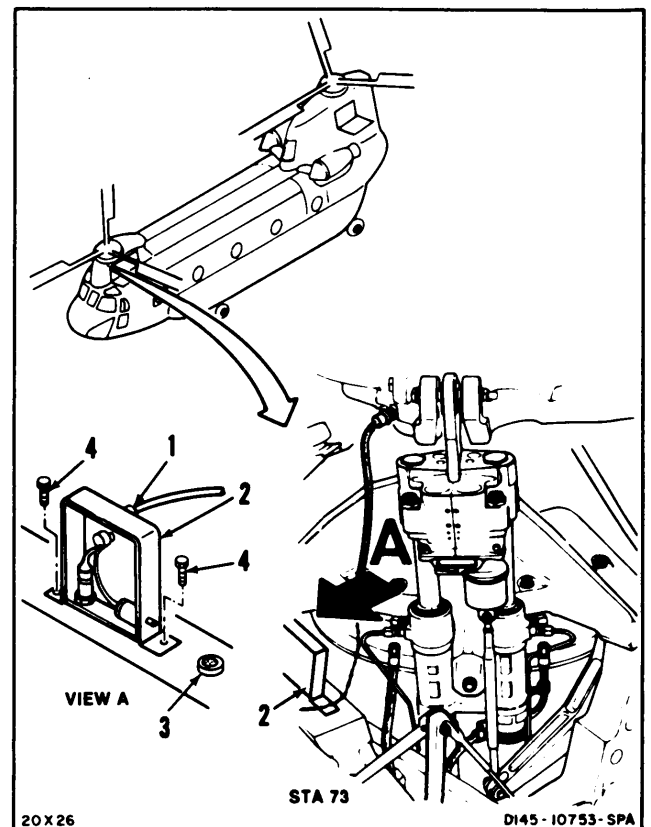


GO TO NEXT PAGE


Change 25

5-527

2. Disconnect plug (5) from aft accelerometer block (6). Install plug on dummy connector (7). Remove two screws (8). Remove accelerometer block.

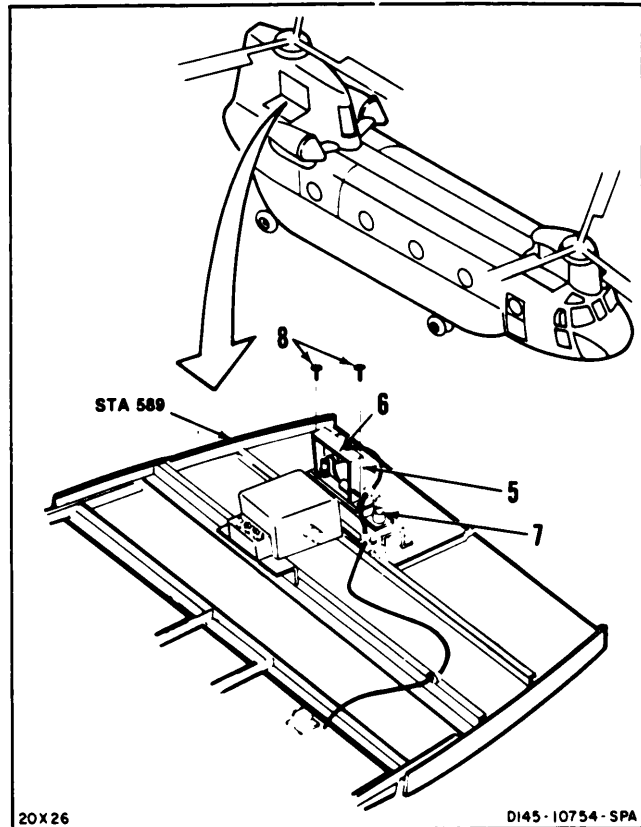


3. Remove six targets (9) as follows:
- Untie blades (10). Position one blade over tunnel (11).
  - Remove lockwire from two screws (12). Remove screws, washers (13), and target (9).
  - Install washers (13) and screws (12). **Torque screws to 175 inch-pounds.**
  - Lockwire screws (12). Use lockwire (E233).
  - Repeat steps a through d for other five blades (10).
  - Tie down one forward and one aft blade (Task 1-26).

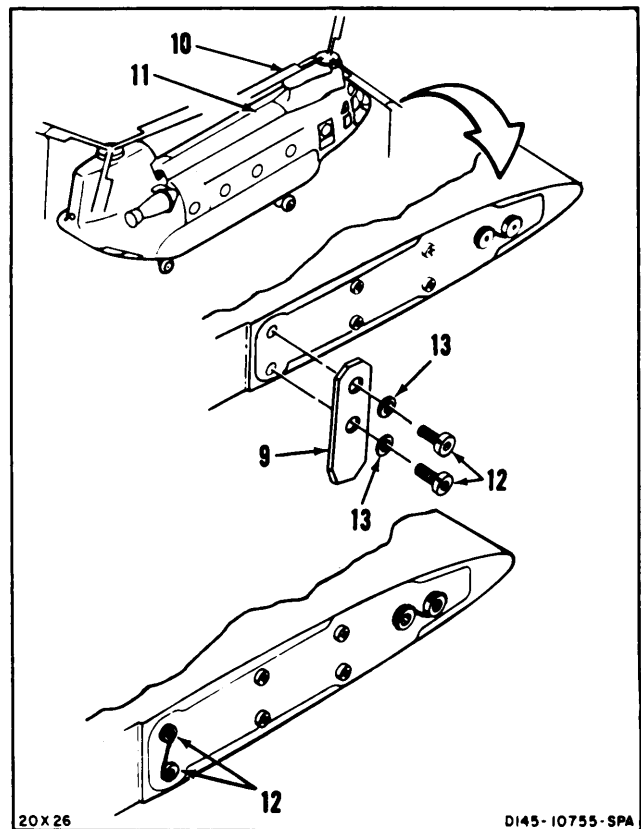


**5-143 REMOVE TRACKING AND BALANCING EQUIPMENT (STROBEX/VIBREX) (Continued)**

4. Disconnect plug (13) to **disconnect tracker (14).**
5. Disconnect plug (15) from receptacle (16). Install dust cap (17).
6. Disconnect plugs (18 and 19) from rotary switch (20).
7. **Disconnect** two plugs (21) from **balancer (22).** Remove two connectors (23). **Remove rotary switch (20).**

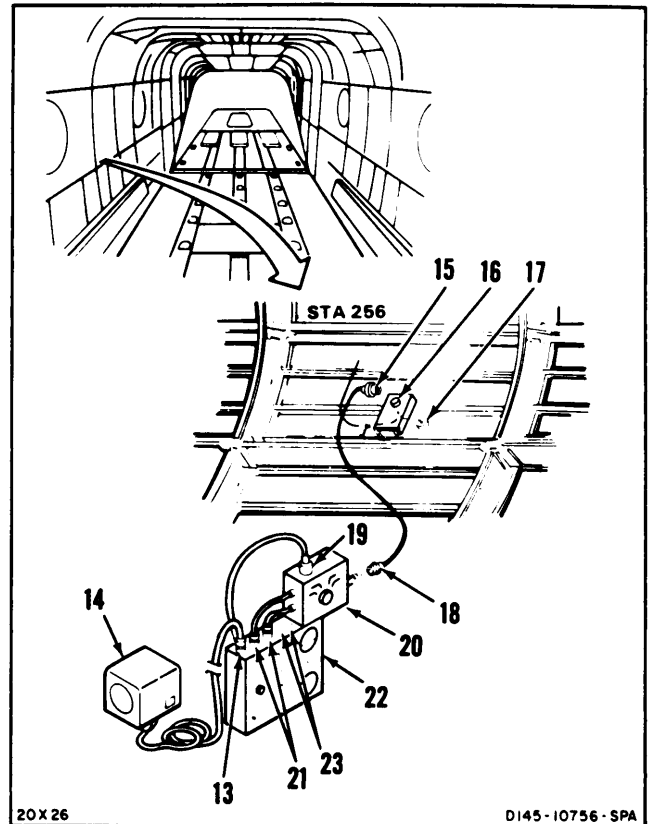

8. Replace cable, targets (9), accelerometer blocks (2 and 6), four screws (4 and 8), and rotary switch (20) in Vibrex accessory set (25).

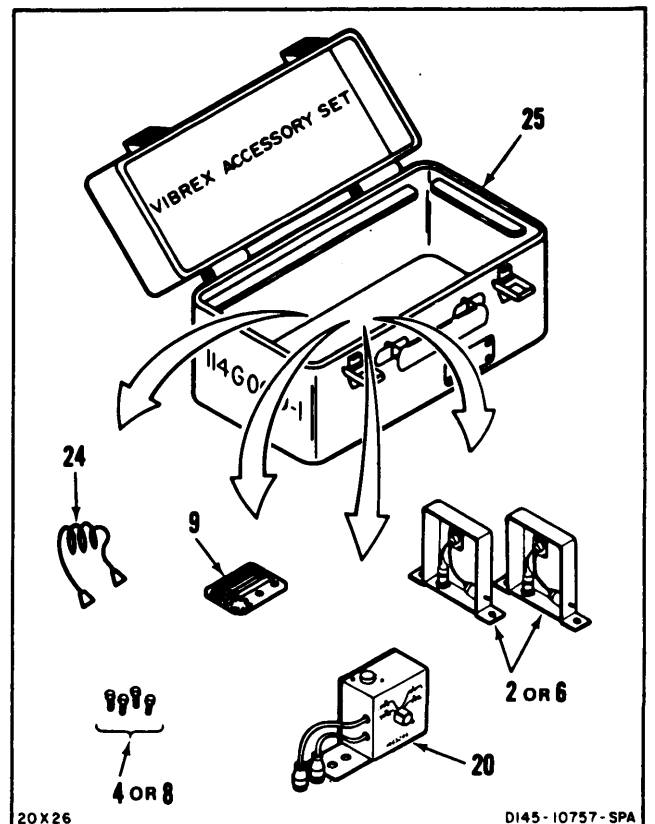

FOLLOW-ON MAINTENANCE:  
Close work platforms (Task 2-2).

**END OF TASK**

**5-144 PITCH LINK CORRECTIONS FOR AUTOROTATION  
% RPM**

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**

None

**Personnel Required:**

- 67U20 Medium Helicopter Repairer
- 100C0 Army Rotary-Wing Aviator (2)


**References:**

- TM 55-1520-240-10
- Task 5-94

**Equipment Condition:**

Helicopter in Level Flight (TM 55-1520-240-10)

1. Have pilot perform autorotation. Have him read ROTOR % RPM while passing through selected density altitudes (TM 55-1520-240-10).
2. Record density altitude and % RPM on Autorotational RPM Chart (1).
3. Have pilot land helicopter and stop engines (TM 55-1520-240-10).

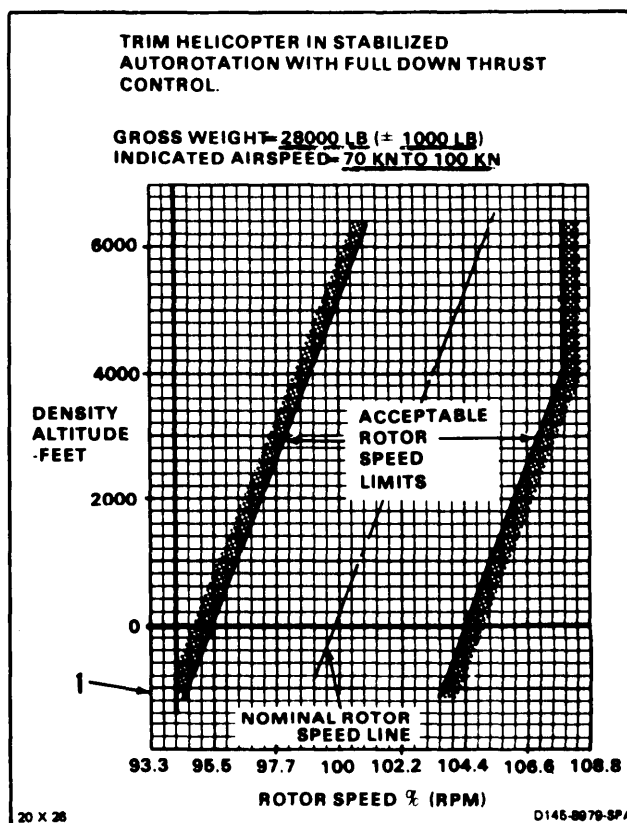

**GO TO NEXT PAGE**

**5-144 PITCH LINK CORRECTIONS FOR AUTOROTATION % RPM**  
**(Continued)**

**NOTE**


% RPM on left side of acceptable range is low. % RPM on right side is high.

4. Enter chart (1) at density altitude (step 1). Follow line to % RPM. If % RPM is within limits, go to FOLLOW-ON MAINTENANCE.
5. If % RPM is not within limits, figure **pitch link adjustment** as follows:
  - a. On chart (1), draw line parallel to nominal (desirable) rotor speed line from % RPM down to 0 density altitude line.
  - b. Read % RPM at 0 density altitude line. If % RPM is low, subtract from 100 percent. If % RPM is high, subtract 100 percent from % RPM.

**NOTE**

- A five-mark adjustment of pitch link turn-buckle changes % RPM by about 1 percent. Adjustment of one complete turn (35 marks) changes % RPM by about 6.5 percent.
- c. Note difference from 100 percent in step b. To reduce % RPM by 1 percent, turn pitch links five marks toward +. To increase % RPM by 1 percent, turn pitch links five marks toward -.
6. Adjust all six pitch links by equal amount as figured in step 5.c. Shorten links if % RPM is low. Lengthen links if % RPM is high (Task 5-94).

FOLLOW-ON MAINTENANCE:  
 None

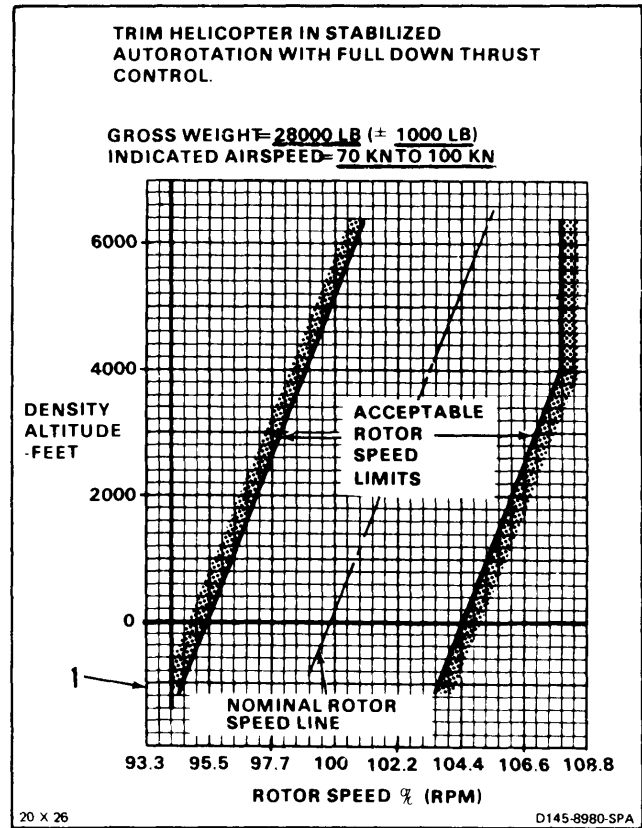

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

- Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692
- Power Supply, 28 VDC
- Strobex/Vibrex Calibrator, Model II
- Calibrator Cable 4875
- Balancer Model 177M-6A
- Strobex Lamp, Model 135M-11
- Vibrex Accessory Set, 114G0019-1
- Magnetic Pickup 3030AN

**Materials:**

None

**Personnel Required:**


- 67U20 Medium Helicopter Repairer
- 67U30 Inspector

**References:**

TM 55-4920-402-13&P

**Equipment Condition:**

Off Helicopter Task

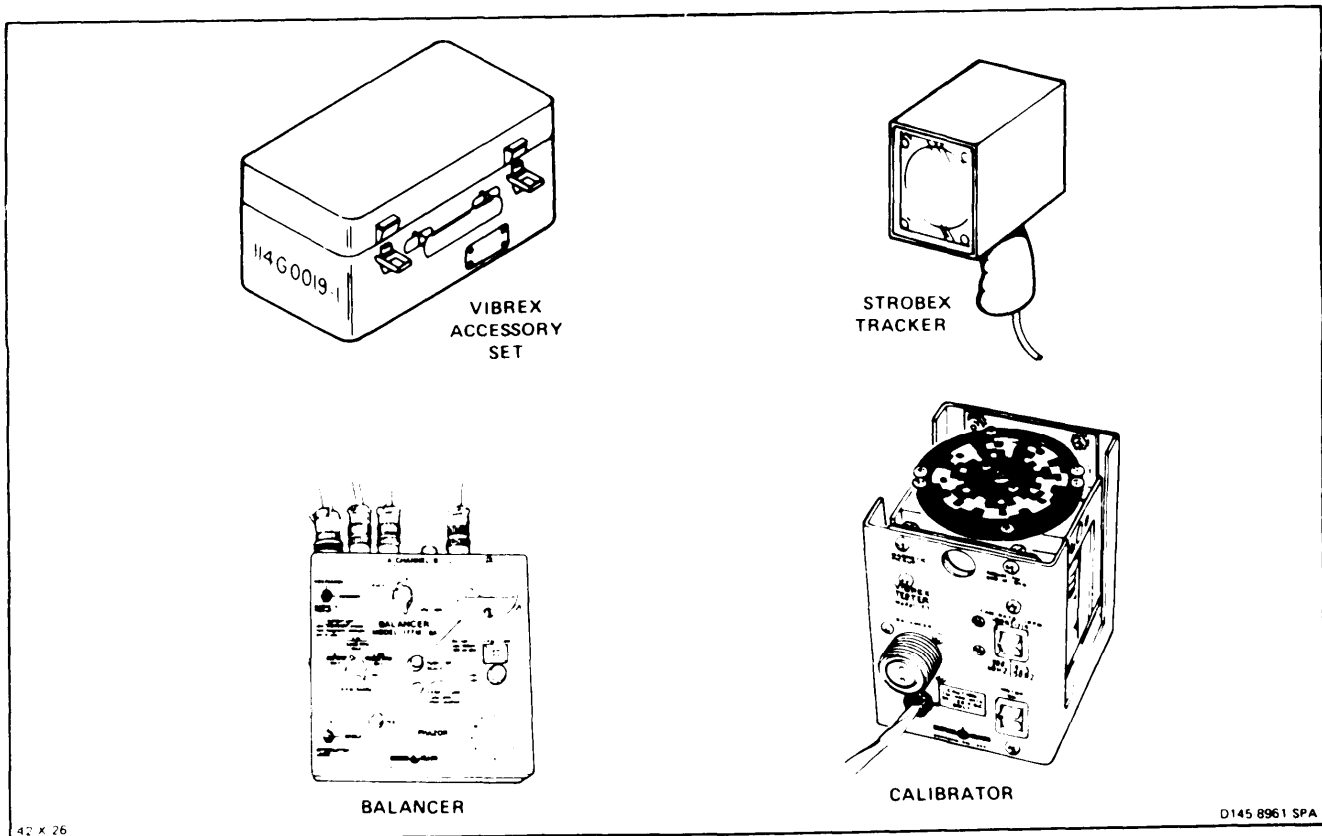


42 X 26

0145 8961 SPA


**GO TO NEXT PAGE**

5-145 STROBEX/VIBREX FUNCTIONAL CHECK (Continued)


1. Screw magnetic pickup detector (1) into calibrator (2) until detector just touches one of six screws (3).
2. Back-off detector 1/6-turn or one flat of jam nut (4).
3. Hold pickup (1) and tighten jam nut (4).

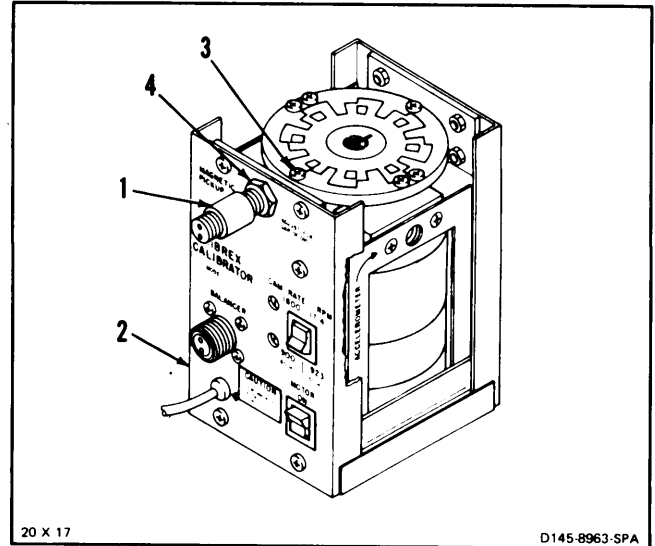

4. Remove four accelerometers (5) from accelerometer blocks (6) as follows:
  - a. Remove connectors (7).
  - b. Remove accelerometers (5).

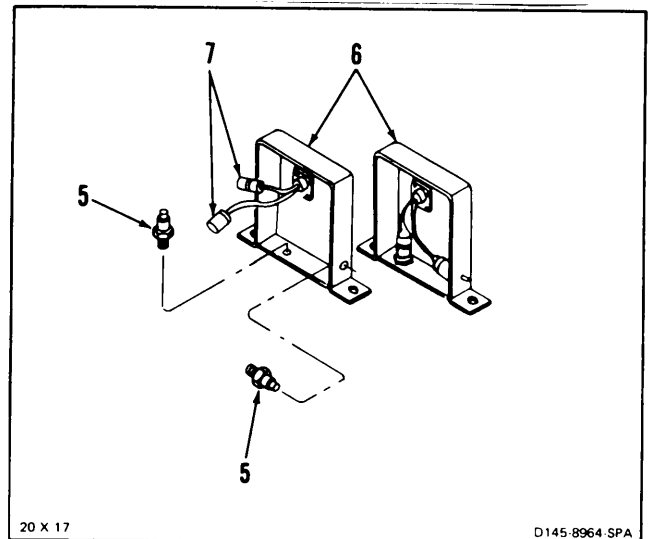


5. Install two accelerometers (5) on calibrator (2). Finger-tighten accelerometers.

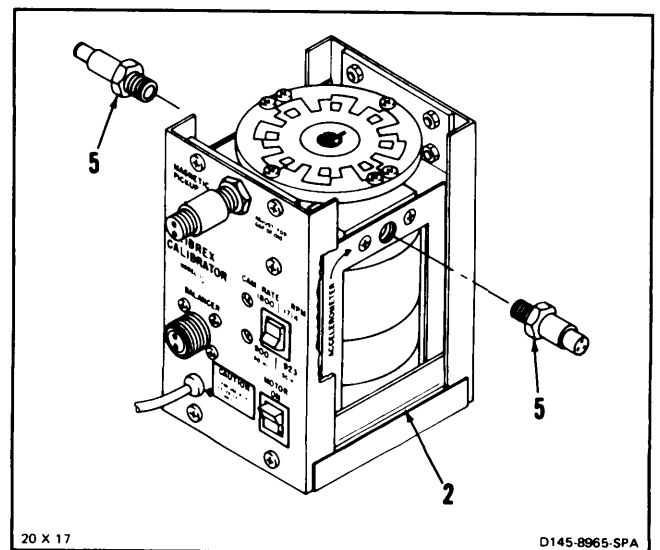

GO TO NEXT PAGE

6. **Install rotary switch (8) on balancer (9).**  
Use two screw caps (10).
7. Connect rotary switch (8) to balancer (9) as follows:
  - a. Connect magnetic pickup cable (11) to balancer (9).
  - b. Connect accelerator cable (12) to balancer (9).
  - c. Connect power cable (13) to rotary switch (8).

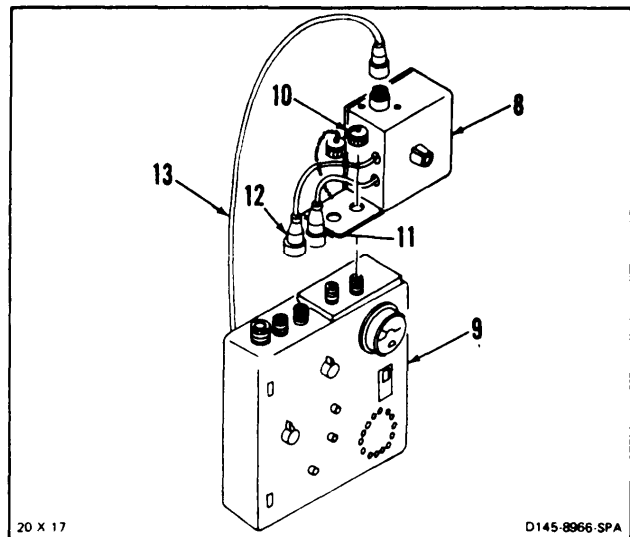


8. **Connect calibrator (2) to rotary switch (8)** as follows:
  - a. Connect cable 4875 (14) to rotary switch (8).
  - b. Connect power cord connector (15) of cable (14) to calibrator (2).
  - c. Connect magnetic pickup connector (16) of cable (14) to detector (1).
  - d. Connect accelerometer cables (17) of cable (14) to accelerometers (5).

**CAUTION**

**Do not operate calibrator on power source other than 28 vdc. Equipment can be damaged.**

9. **Connect power cord (18)** from calibrator (4) to 28 vdc power supply. Apply power source.

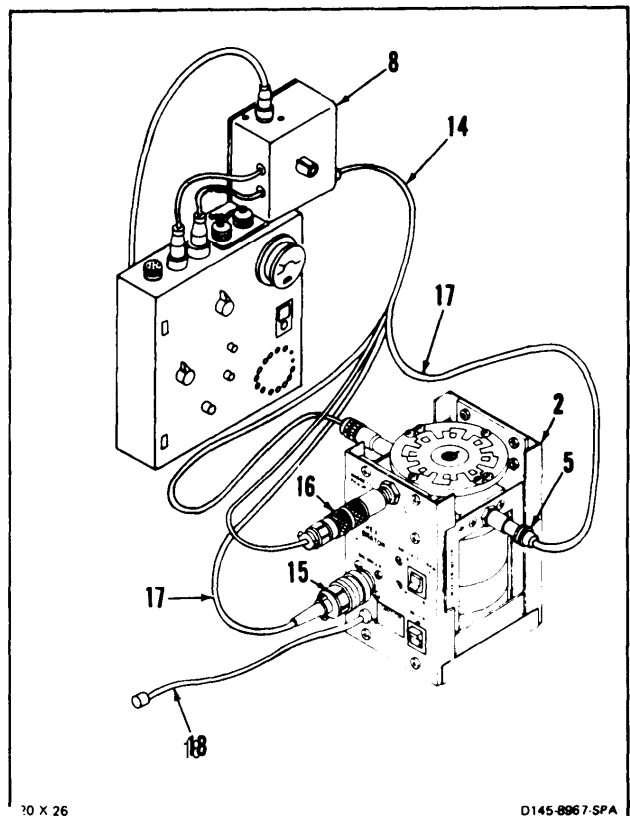


**GO TO NEXT PAGE**




5-145 STROBE/VIBREX FUNCTIONAL CHECK (Continued)

5-145

10. Set MAGNETIC PICKUP switch (19) to COMMON.
11. Set RPM RANGE selector (20) to X10.
12. Set INTERRUPTER LOG IC switch (21) to DOUBLE.
13. Set RPM TUNE control (22) to 180.
14. Set FUNCTION switch (23) to A.

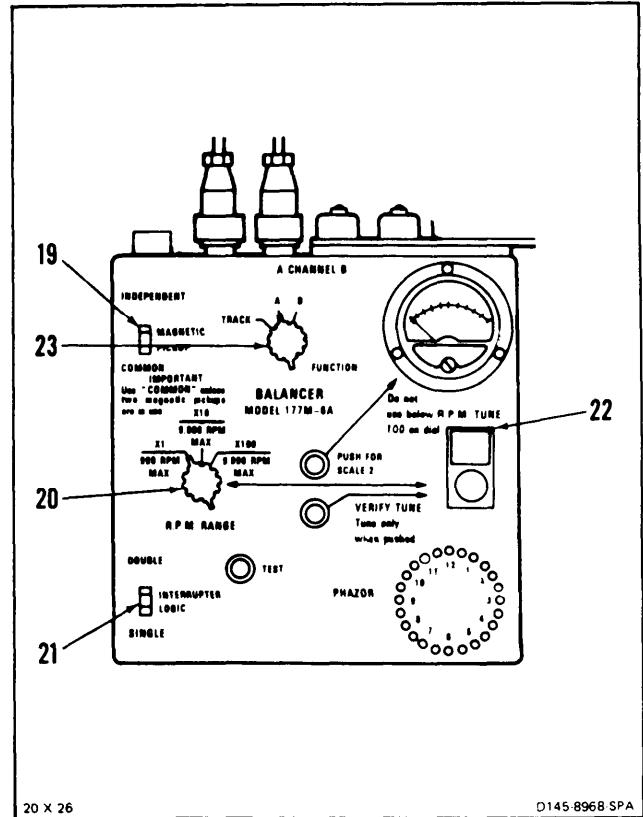

15. Set rotary switch (8) to FWD LATERAL.

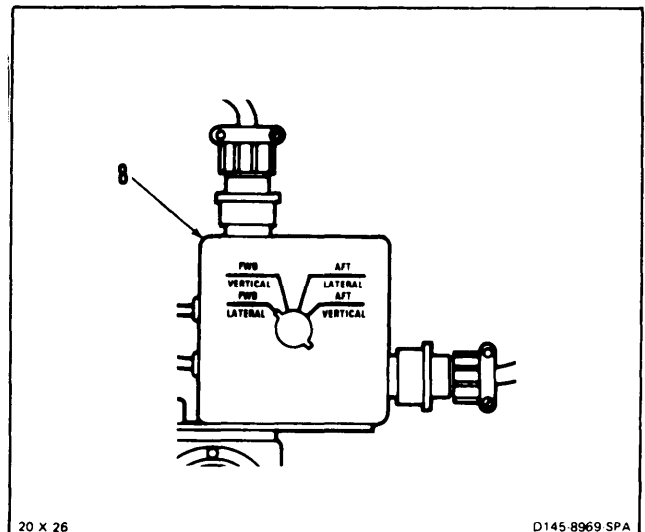


GO TO NEXT PAGE

16. Set CAM RATE switch (24) on calibrator (2) to 1800/1744.
17. Set MOTOR switch (25) to ON.
18. Note outer ring (26) of rotor disc (27) under ordinary fluorescent light. Patterns should remain stationary.

**NOTE**

If calibrator is tuned correctly, image may appear fuzzy or blurred, but should remain stationary.

19. If outer ring (26) rotates, adjust trim potentiometer (28) until outer ring image appears stopped.

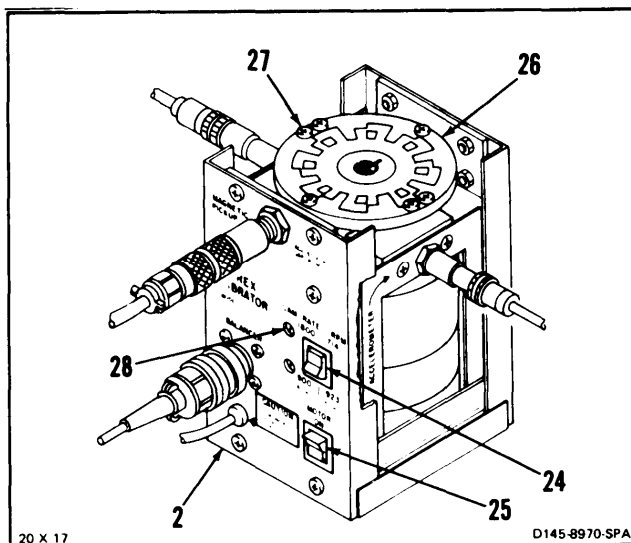

20. Press and hold TEST switch (29). Check that PHAZOR lights (30) come on at 12, 1, and 6 o'clock positions. Release TEST switch. If lights come on at 12, 12:30, and 6 o'clock positions, this is acceptable.

21. If PHAZOR lights (30) do not come on when TEST switch (29) is pressed, check gap between screws (31) and detector (1) (steps 2, 3, and 4). Gap between pickup detector and screws must be very close to pick up output signal.


22. Check that all six screws (31) are installed on rotor (27).

23. Check clock angle of PHAZOR light (30) that remains on.

24. Press and hold verify tune switch (32). Check clock angle of PHAZOR light (30) that is on. Adjust RPM tune control (22) to move light to same position as in step 23.


25. Repeat steps 23 and 24 until light remains on at same position when verify tune switch (32) is pressed. Clock angle should be 2:30 to 3:30.

26. Check that RPM tune (22) indicates 176 to 184. If RPM tune is not 176 to 184, check rotor speed. If rotor speed is not 1800 rpm, calibrate tunable filter network of balancer (9) (TM 55-4920-204-13&P).

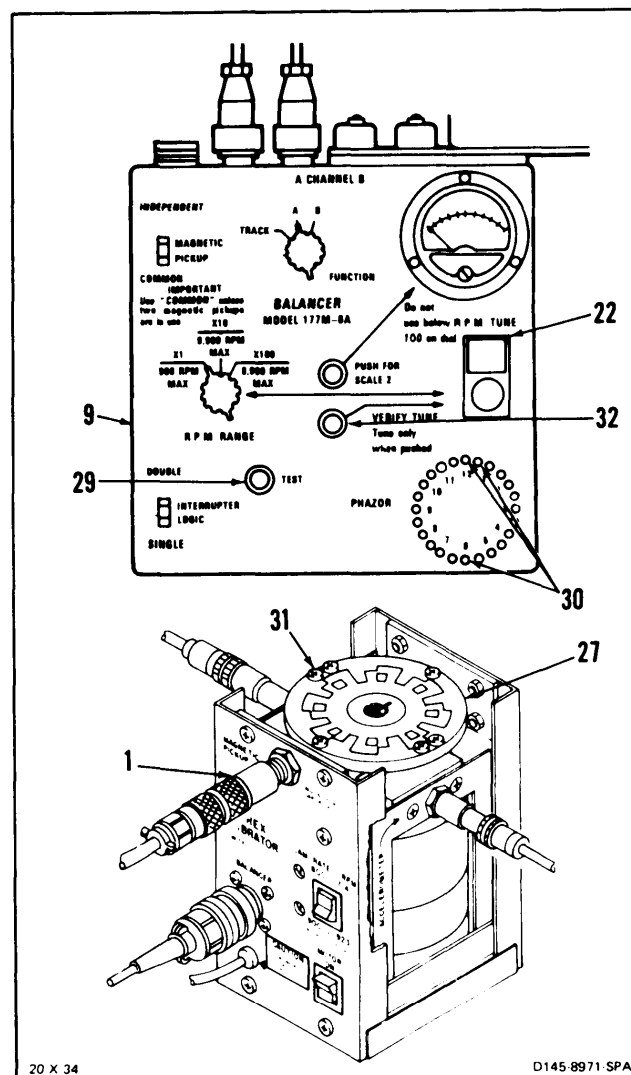

**5-145 STROBEX/VIBREX FUNCTIONAL CHECK (Continued)**


27. Note reading on IPS indicator (33). Reading should be 0.72 to 0.88 IPS.
28. Set rotary switch (8) to FWD VERTICAL.
29. Note reading on IPS indicator (33). Reading should be 0.72 to 0.88 IPS.
30. Accelerometers (5) are serviceable if IPS readings in steps 27 and 29 are within range.
31. If IPS reading in either of steps 27 or 29 is 0.0 IPS, find defective accelerometer (5) as follows:
  - a. Disconnect one cable (17).
  - b. Note IPS indicator reading while switching to FWD LATERAL.
  - c. If IPS reading is same as in steps 27 and 29, replace disconnected accelerometer (5).
  - d. If IPS reading is 0.0 IPS with rotary switch (8) set to FWD LATERAL or FWD VERTICAL, replace connected accelerometer (5).
32. Disconnect two cables (17). Remove accelerometers (5). Install remaining two accelerometers. Connect cables.
33. Repeat step 31.
34. Set calibrator motor switch (25) to OFF.

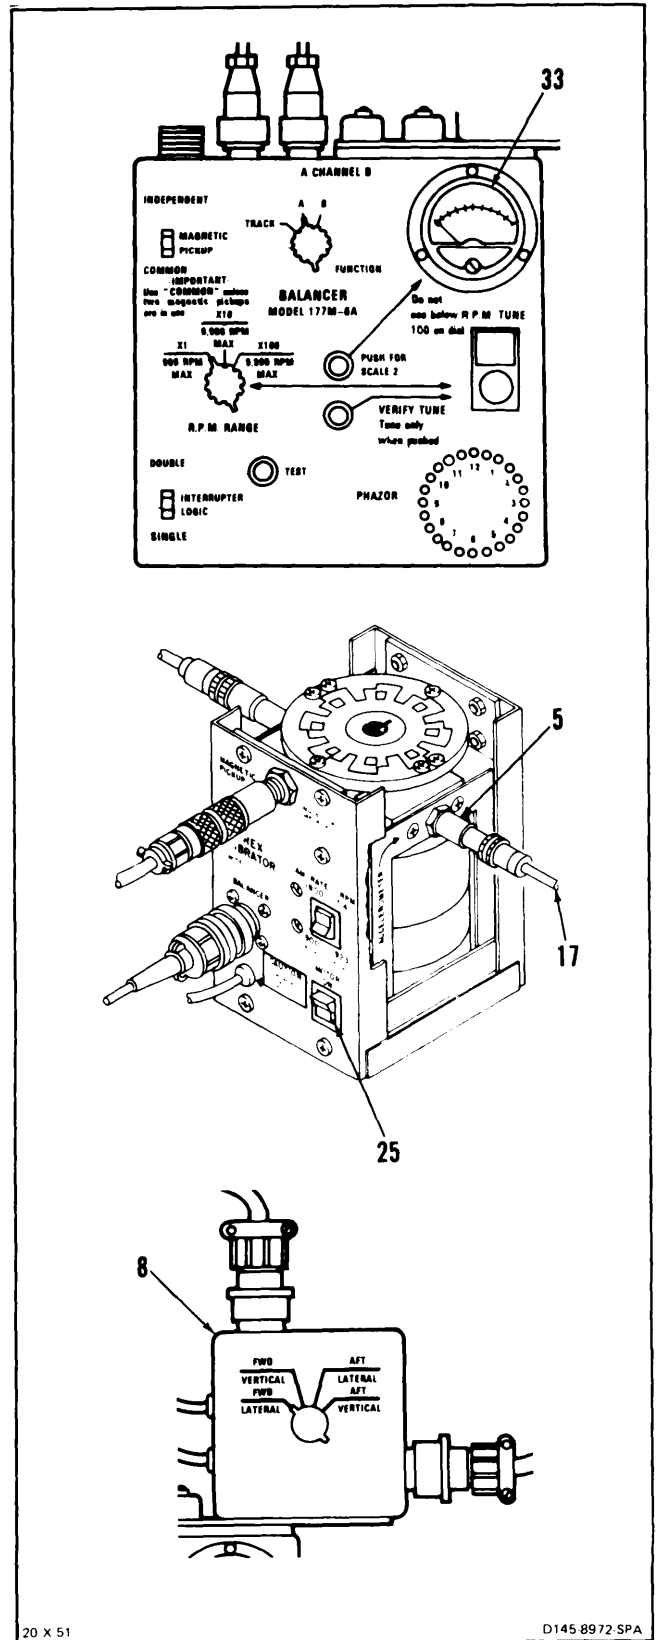

**GO TO NEXT PAGE**

**5-145 STROBEX/VIBREX FUNCTIONAL CHECK (Continued)**

35. **Check operation of Strobex tracker (34)** as follows:
  - a. Connect Strobex tracker (34) to balancer receptacle (35).
  - b. Set MODE switch (36), on lamp (34) to A.
  - c. Set balancer function switch (23) to TRACK.
  - d. Set calibrator MOTOR switch (25) to ON.
  - e. Press and hold trigger (37). Aim tracker (34) at ch logo (38) on calibrator rotor (27).
  - f. Check that stem of h in logo (38) appears stopped at 12, 3, 6 and 9 o'clock positions.
  - g. Set balancer function switch (23) to A.
  - h. Repeat step e. Stem of h should appear stopped at 1:30 and 7:30 o'clock positions.
36. **Set calibrator MOTOR switch (25) to OFF. Remove power source.**
37. **Disconnect cable (18) from power source.**
38. **Disconnect cables (15, 16, and 17) from calibrator (2).**
39. **Disconnect cable (14) from rotary switch (8).**
40. **Disconnect Strobex tracker (34) from receptacle (35).**

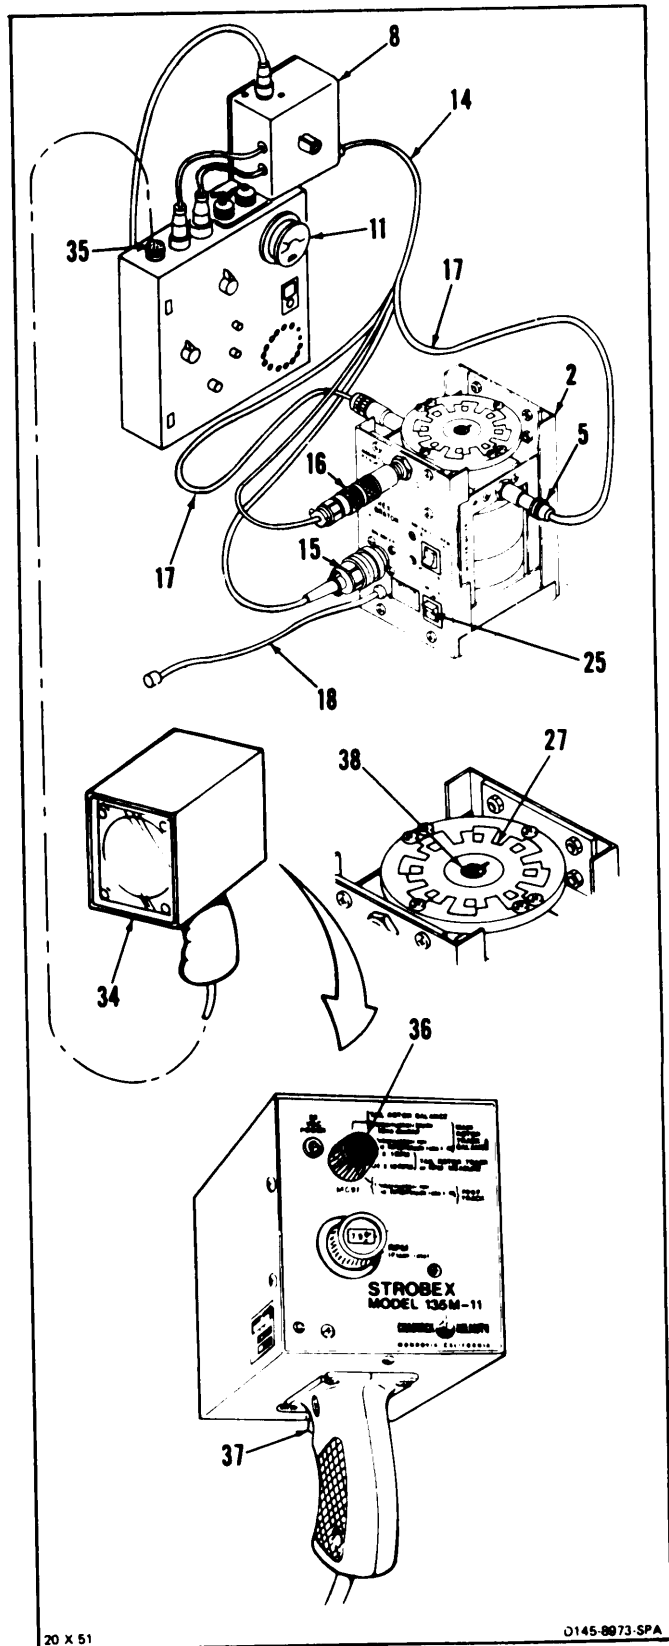


20 X 51

D145-8973-SPA


**GO TO NEXT PAGE**

**5-145 STROBEX/VIBREX FUNCTIONAL CHECK (Continued)**

41. Remove two screw caps (10). Remove rotary switch (8) from balancer (9).

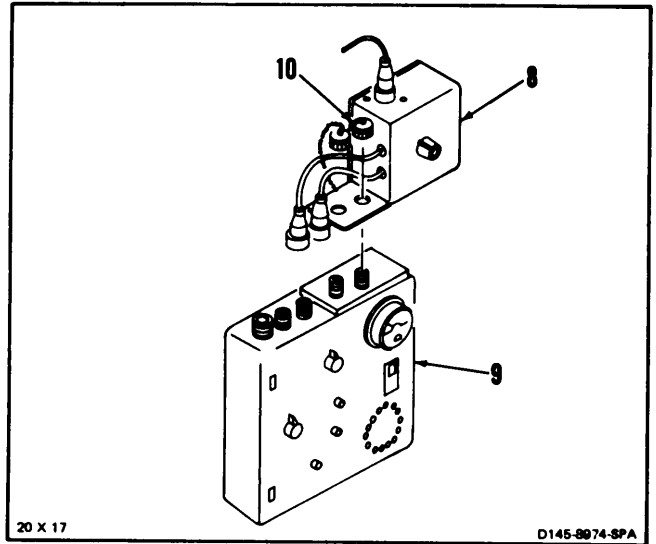


42. Remove two accelerometers (5) from calibrator (2).

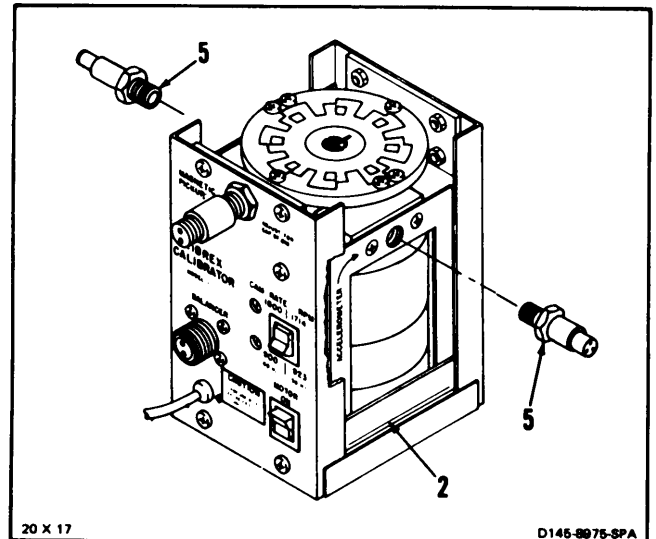


43. Install four accelerometers (5) in accelerometer blocks (6).

44. Install connectors (7) on accelerometers (5).

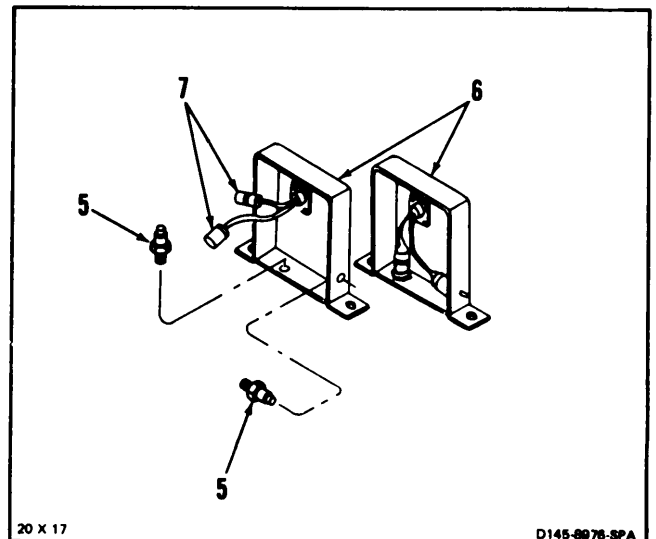

**GO TO NEXT PAGE**

45. Remove magnetic pickup detector (1) from calibrator (2).

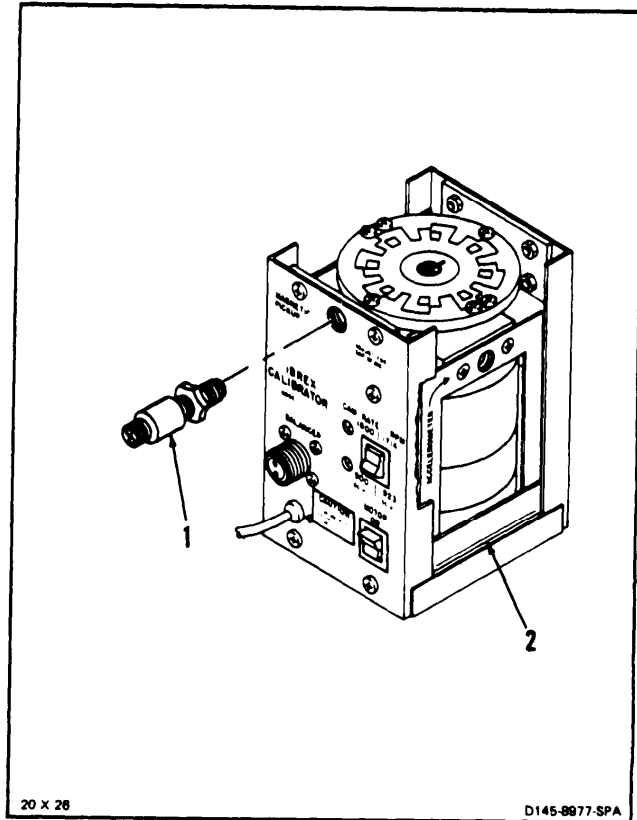

FOLLOW-ON MAINTENANCE:  
None

## 5-99.2 CHECK DRIVE COLLAR AND DRIVE ARM RADIAL PLAY (Continued)


5-99.2

13. Remove cotter pin (7), washer (7.1) and nut (8) from bolt (9). Remove bolt.

### CAUTION

Do not allow swashplate to rotate. Rotorhead, pitch links, and swashplate will be damaged.

14. Clamp indicator (1) to swashplate (10).
15. Position indicator (1) on lower end of arm (5), align with arm. Reload indicator against arm.
16. Push arm (5) toward indicator (1). Record indicator reading C.
17. Hold swashplate (10) down and pull arm (5) away from indicator (1). Record indicator reading D.
18. Subtract reading D from reading C. Result shall not be more than 0.006 inch.
19. Remove indicator (1) from swashplate (10).
20. Position arm (5) in arm (4).
21. Apply antiseize compound (E75) to shank of bolt (9). Wear gloves (E186). Do not apply to thread or bushing on bolt.
22. Install bolt (9), washer (7.1) and nut (8) in arm (5). Torque nut to 500 to 700 inch-pounds.
23. Install cotter pin (7) in nut (8).

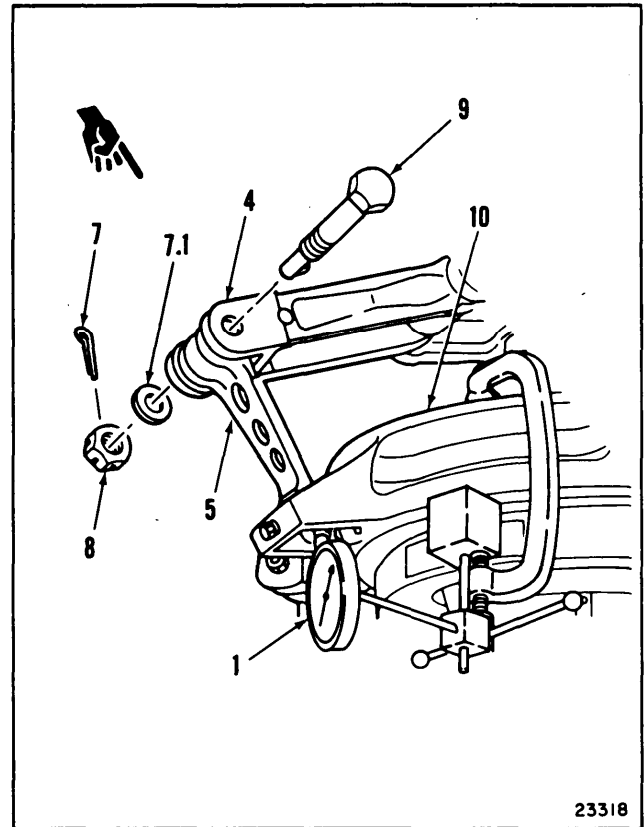

### INSPECT

### FOLLOW-ON MAINTENANCE:

Close forward or aft work platforms (Task 2-2).

END OF TASK





## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692  
Rotortuner Dash 5  
Aircraft Test Cards (1)  
Trim Tab Angle Protractor (T172)  
Vibrex Accessory Kit (T65)  
Torque Wrench 100 to 750 Inch-Pounds

**Materials:**

Lockwire (E233)

**Personnel Required:**

Medium Helicopter Repairer (2)  
Inspector

**References:**

Task 5-75.1      Task 5-114.1  
Task 5-97.1      Task 11-33



**Equipment Condition:**

Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Tiedown Lines Connected to One Forward and  
One Aft Rotary-Wing Blade (Task 1-26)  
Forward and Aft Pylon Work Platforms Open  
(Task 2-2)

**NOTE**

If any major dynamic component has been removed ensure that steps 1 thru 6 are done. For routine track and balance go to step 7.


1. Do complete neutral rig check (Task 11-33).
2. Reset blade tabs (Task 5-75.1) to original whirl-tower setting in historical records.
3. Rig flight controls and blades.
4. Place 10 tip weights in forward & aft yellow blades.
5. Place 8 tip weights in forward & aft green blades.
6. Place 6 tip weights in forward & aft red blades.

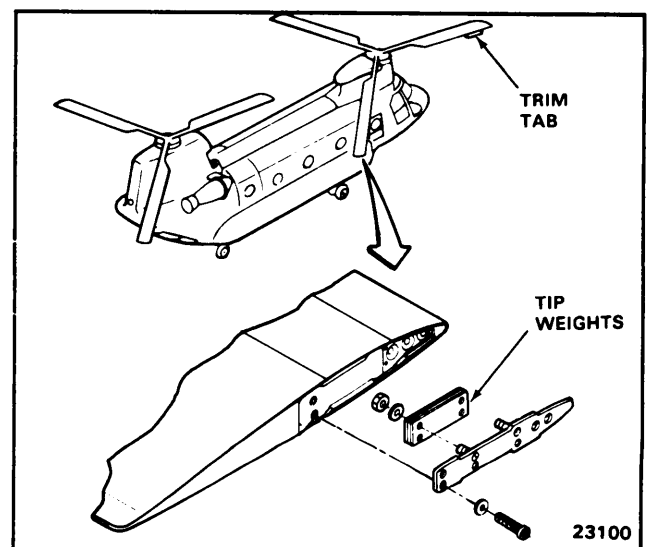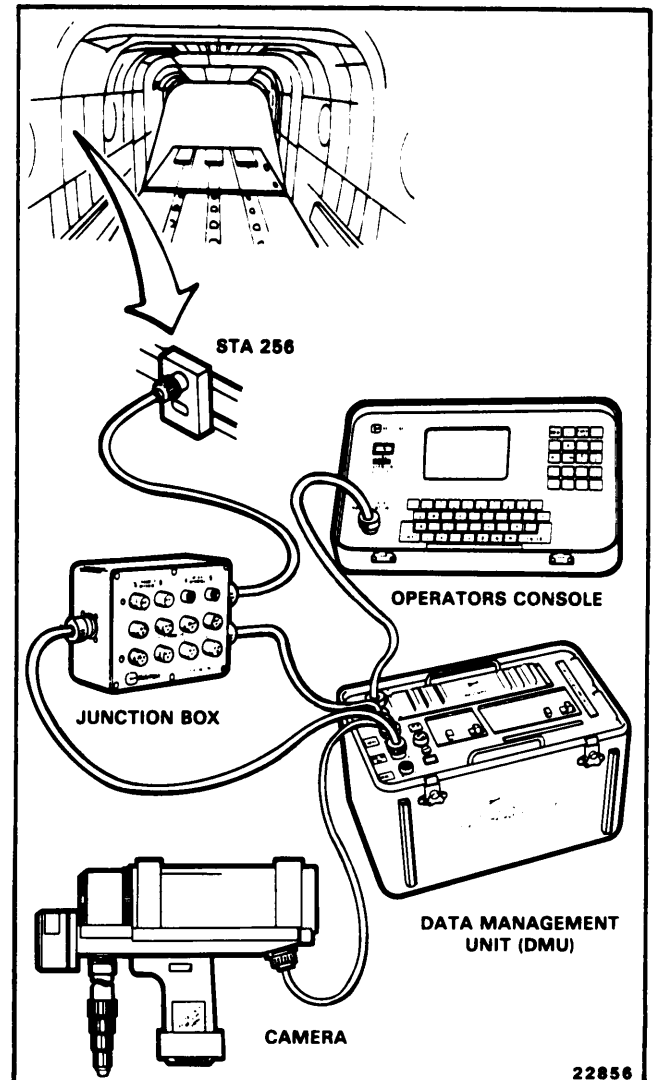

GO TO NEXT PAGE

**NOTE**

- Procedure is same to prepare forward or aft blades for ground tracking.
  - Phase detector and three brackets are installed on forward swashplate only. One bracket has two interrupters.
7. Check that phase detector (1) and three interrupter brackets (2) are attached securely to forward swashplate (3).
  8. Position brackets (2) over detector by turning blades (4). Check clearance between each of three interrupter brackets and phase detector (1). Clearance shall be 0.015 to 0.025 inch.
  9. Turn blades (4) to position double interrupter over phase detector (1).

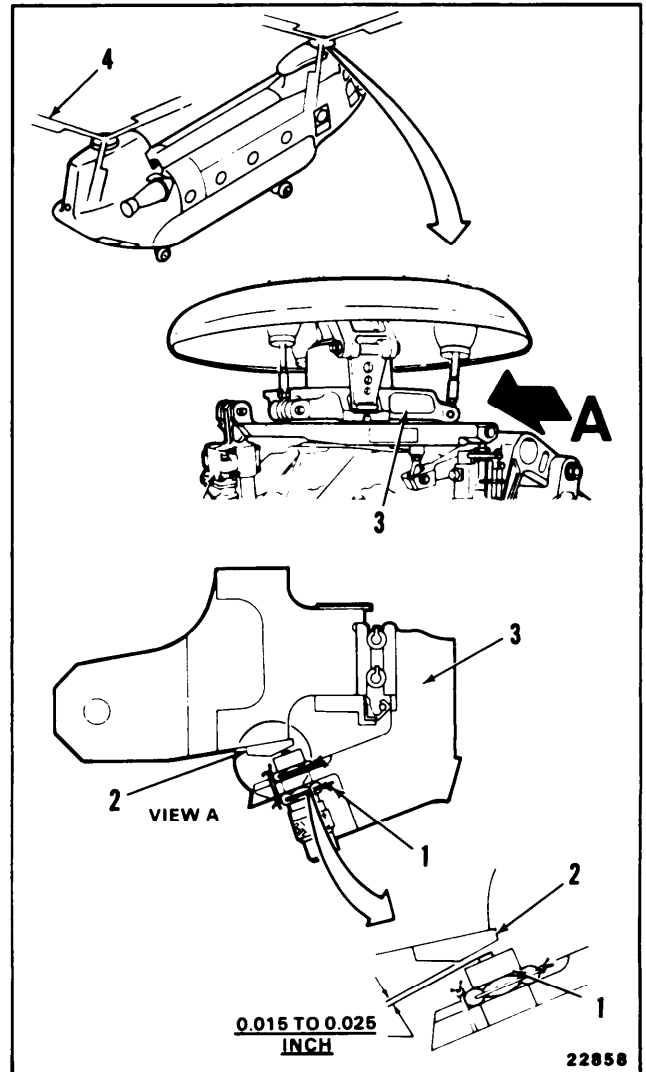


10. Check pitch link bearing play (Task 5-97.1).
11. Check spherical ball axial play (Task 5-114.1).

# 5-146 INSTALL ROTORTUNER TRACK AND BALANCE EQUIPMENT (Continued)

## NOTE



Do steps 12 and 13 only if steps 1 thru 6 were not done.

12. Record blade colors, blade serial number trim tab angle and balance weights on the ROTOR CONFIGURATION WORKSHEET/AIRCRAFT PREPARATION CHECKLIST or each blade.
13. Count balance weights for all blades as follows:
  - a. Position blade (4) over tunnel covers (5). Use tiedown lines (6).
  - b. Remove lockwire from four screws (7). Remove screws and washers (8).
  - c. Remove cover plate (9). Count the number of balance weights (10). Record the number for each blade color.
  - d. Install cover plate (9). Install four screws (7) and washers (8).
  - e. Torque screws (7) to 175 inch-pounds. Lockwire screws. Use lockwire (E233).

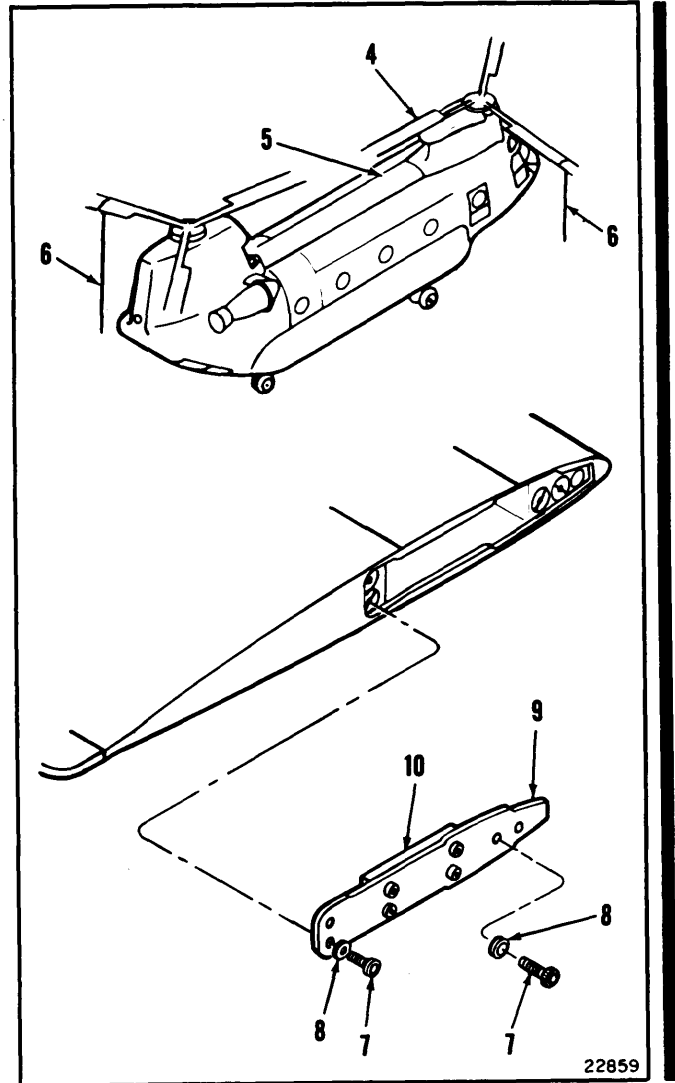

### Rotor Configuration Worksheet/Aircraft Preparation Checklist

12 O'CLOCK  
↑

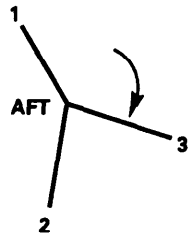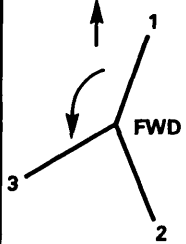

**FWD ROTOR # 1 BLADE IS FIRST BLADE TO CROSS 12 O'CLOCK POSITION WHEN DOUBLE INTERRUPTER IS POSITIONED OVER MAGNETIC PICKUP**

DATE:  
TEST:  
FLIGHT:

AIRCRAFT SERIAL NO.:  
ACMR NO.: /2408-13 DATE:

#### FORWARD ROTOR

BLADE	COLOR	SERIAL #	WEIGHTS INSTALLED	TAB ANGLE
1				
2				
3				

#### AFT ROTOR

BLADE	COLOR	SERIAL #	WEIGHTS INSTALLED	TAB ANGLE
1				
2				
3				

\*ENSURE FUEL LOAD 6800 LB  
INTERNAL TANKS? YES NO  
INTERNAL FUEL QTY \_\_\_ LB.

#### PREPARATION CHECKS

CHECK	MECHANIC INITIAL
MECHANICAL PHASE CHECK	
MAG PICKUP GAP CHECK	
ACCEL INSTALL	
COLOR PHASE CHECK	
BLADE WEIGHT CHECK	
TAB ANGLE CHECK	
AUW: /GW	
ALL FUEL* TANKS FULL	
DASH RIGGED FOR X-WIND HOVER CHECK	

A22857

# 5-146 INSTALL ROTORTUNER TRACK AND BALANCE EQUIPMENT (Continued)

**NOTE**


If a replacement blade (new or used) is installed, the trim tab should be set to the original whirltower setting.

14. Check the trim tab angle (Task 5-75.1) and record the measured angle for each blade.


**NOTE**

Accelerometer blocks and screws are part of Strobex/Vibrex accessory kit (T65).

15. Install forward accelerometer block (11). Use two screws (12). Disconnect plug (13) from dummy receptacle (14). Connect plug to accelerometer (11.1).

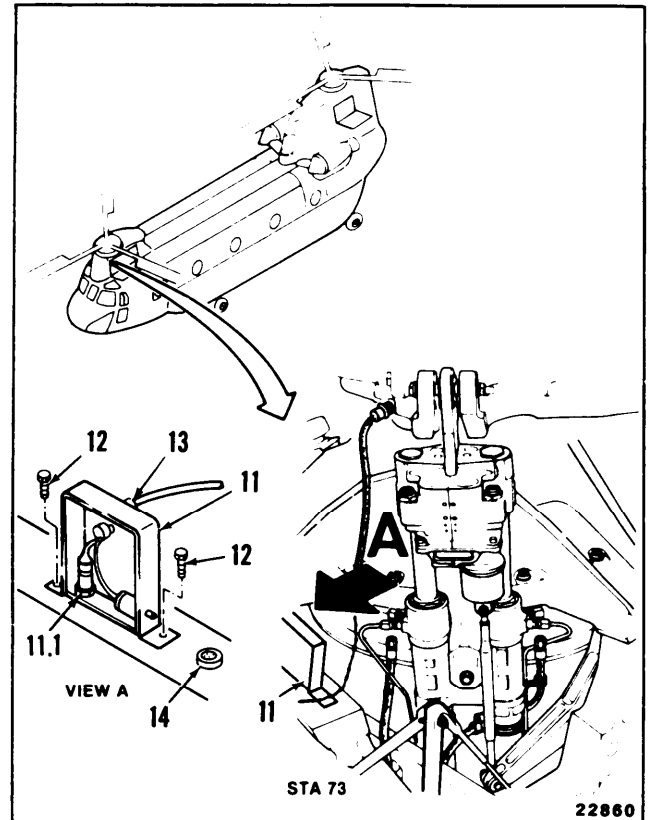


16. Install aft accelerometer block (11). Use two screws (12). Disconnect plug (13) from dummy receptacle (14). Connect plug to accelerometer (11.2).

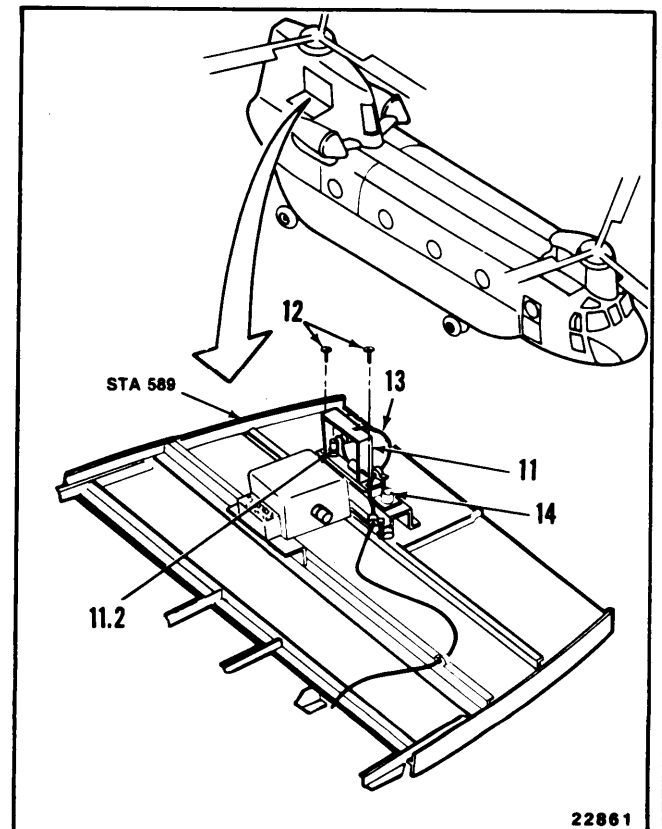

GO TO NEXT PAGE

17. Assemble Rotortuner as follows: Remove operators console (15) from Data Management Unit (DMU) (16). Connect cable connectors to operators console (15) and DMU (16).
18. Connect cable connectors (18) to camera (19) and DMU (16).
19. Connect cable (22) to junction box (21) and DMU (16).
20. Connect cable (23) to junction box (21) then to DMU (16).
21. Connect 28v DC power cable (20) to junction box (21) then to blade track receptacle (24) at station 256.

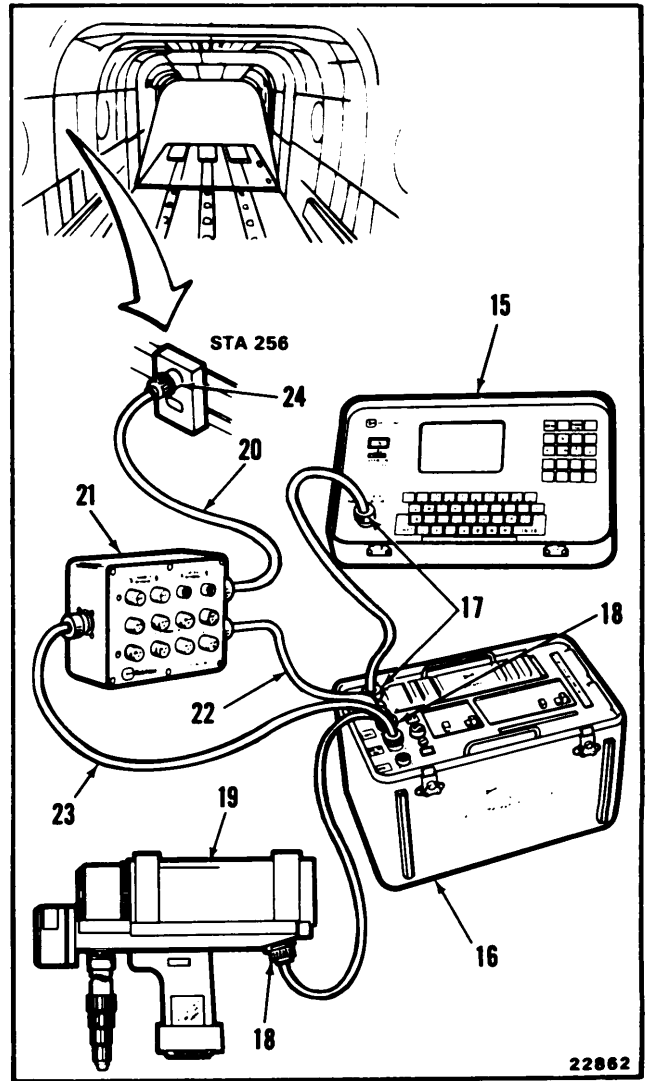


22. Check that BLADE TRACK circuit breaker (25) on No. 2 power distribution panel (26) is closed.
23. Remove tiedown ropes from blades.

**INSPECT**

**FOLLOW-ON MAINTENANCE:**

- Close work platforms (Task 2-2).
- Rotortuner data card formatting (Task 5-147).

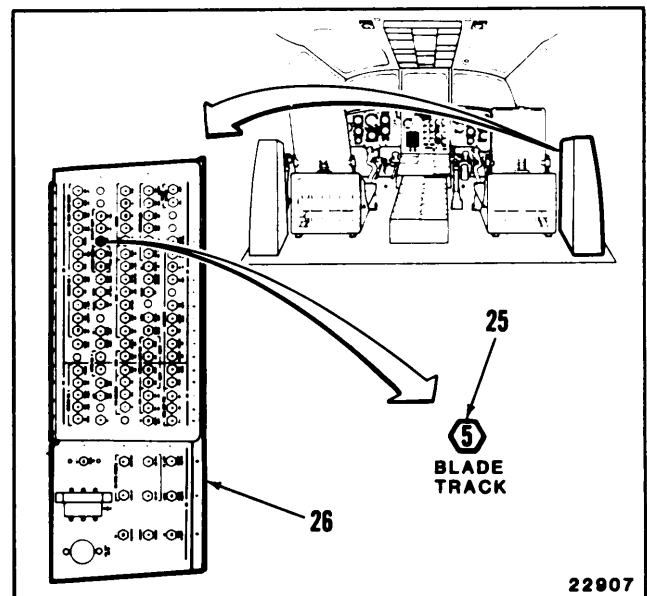

**END OF TASK**

**INITIAL SETUP****Applicable Configurations:**

All

**Tools:**

None

**Materials:**

None

**Personnel Required:**

Power Train Repairer

**References:**

None

**Equipment Condition:**

Install Rotortuner Track and Balance Equipment  
(Task 5-146)

Supply 28 v D.C.

**CAUTION**


Loss of power to memory card will result in all data being lost. The battery has a useful life of approximately 2 years and must be changed on or before the replacement date indicated on the card label.

**NOTE**

Use this task to ensure proper formatting of data card before doing track and balance or vibration analysis procedure.

**NOTE**


Text in *italics* denotes ROTORTUNER commands and prompts as they appear on the display screen.

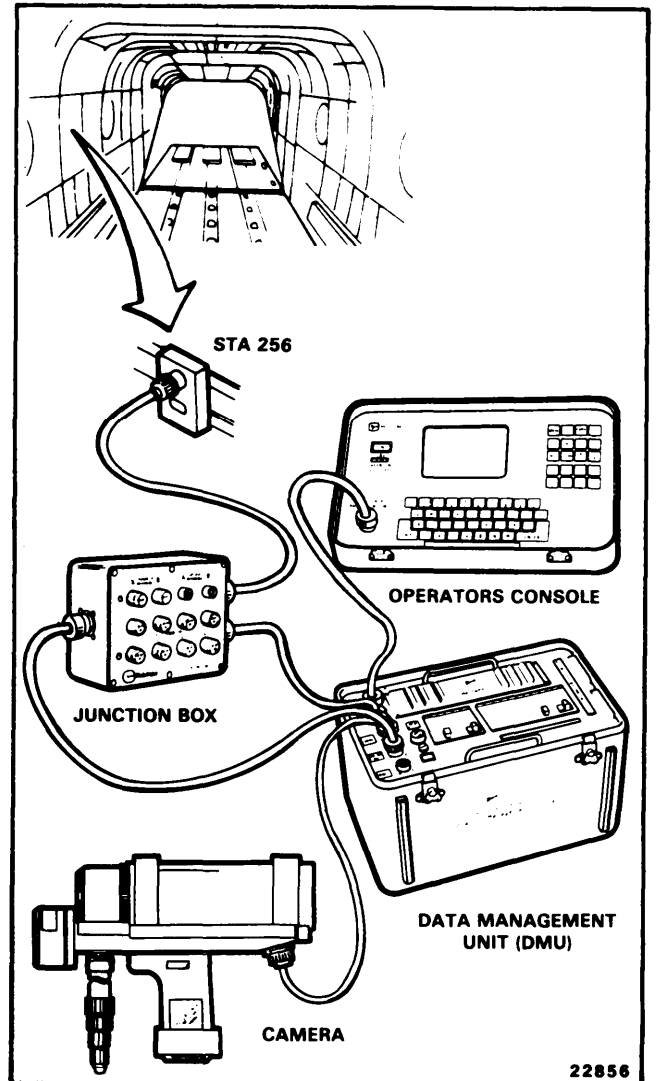

GO TO NEXT PAGE

**DATA CARD OPERATIONAL CHECK**

1. Format Rotortuner as follows:
  - a. Turn Rotortuner on by pressing the emergency isolation switch (1) on the data management unit (DMU) (2) and power on switch (3) on the operators console (4), The Rotortuner startup display (8) will appear on the screen (5).
  - b. Then the Bite display (6) will appear on the screen and indicate, *Analogue subsystem check complete*. Press key F1, *continue* on the function key pad (7).
  - c. The current date and time will be displayed. If correct, press YES on the second row of the function key pad and go to substep e.
  - d. If the date and time is incorrect press NO on the second line of the function key pad (7). Then press ENTER on the main key board (9). If day, month and year are incorrect type in any corrections and press ENTER.
  - e. If this test card has been used for this helicopter before, go to substep f. If it has not been used before go to substep h.
  - f. Load test card into DMU. Verify tail number.
  - g. Press key F7 to display Rotortuner executive menu. Go to FOLLOW-ON MAINTENANCE.
  - h. If this is the first time this card has been used for this helicopter create a blank test card (10) by removing the battery for 30 seconds.
  - i. Press key F3, *Create a TEST card or RUG copy* (10).
  - j. Press Key F1, *Create a TEST card from a DATA card*.
  - k. Load data card with orientation arrow (11) facing down and toward the Helitune label
  - l. Then press key F1, *Confirm DATA card loaded*.
  - m. Press Key F1, *CH47D*. When the Rotortuner has finished reading the information from the data card, remove it and insert the blank test card (10).
  - n. Press key F1, *Confirm BLANK card loaded*.

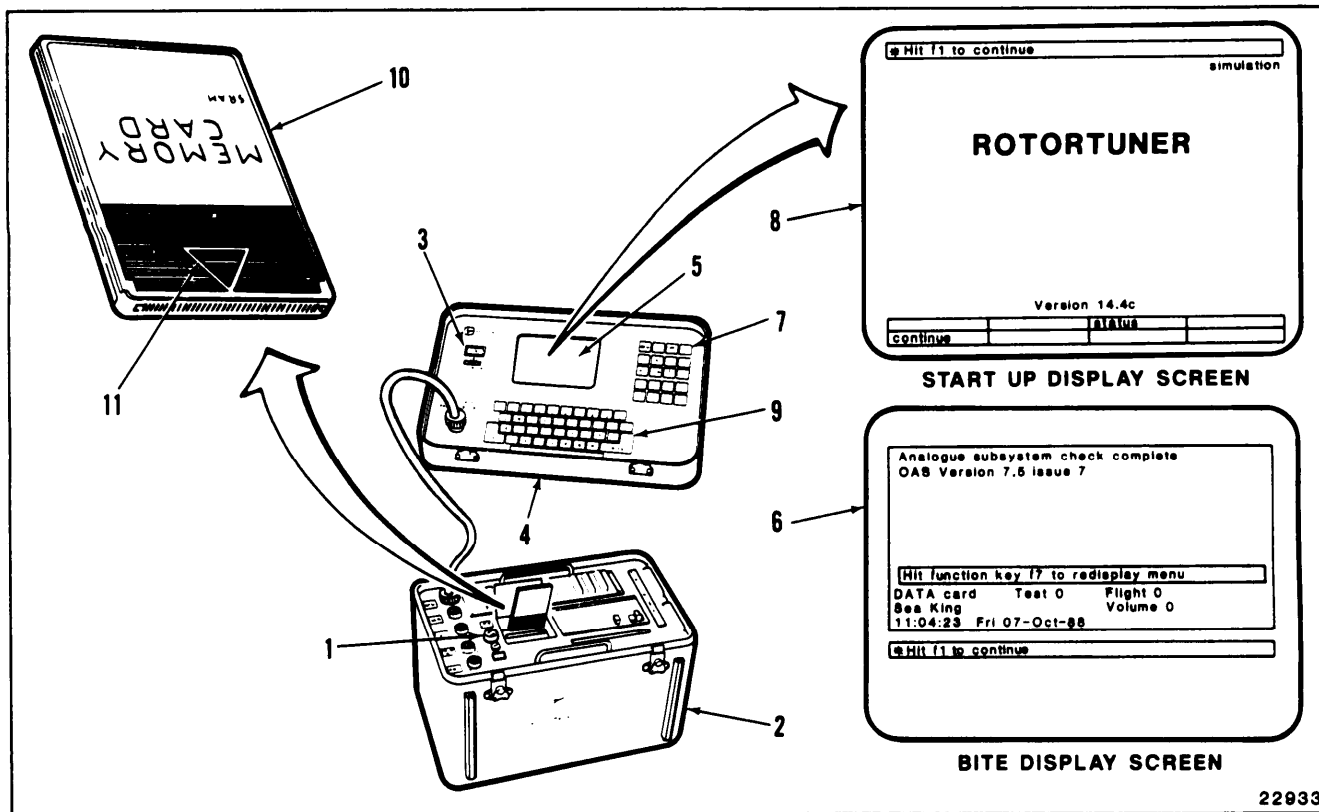

22933



5-147 ROTORTUNER DATA CARD FORMATTING (Continued)

- o. Type in helicopter tail number and press ENTER on the main key board (9) of the operator console (4).
- p. Press key F1 on function key pad (7) to confirm correct aircraft tail number.

**NOTE**


When the Rotortuner has completed loading information onto the blank test card, the screen display (5) will indicate aircraft tail number.

- q. If the helicopter tail number is incorrect, remove test card (10) from DMU (2).

- r. Press key F8, *Change card, rest or turn off*, from the executive menu (12).
- s. Press key F2, *Reset the ROTORTUNER*.
- t. Insert the proper test card and verify helicopter tail number again.
- u. Press key F7 to display the Rotortuner executive menu. Go to follow-on maintenance.

**FOLLOW-ON MAINTENANCE:**

- Perform Ground Track and Balance (Task 5-148).
- Perform Vibration Analysis (Task 6-222).

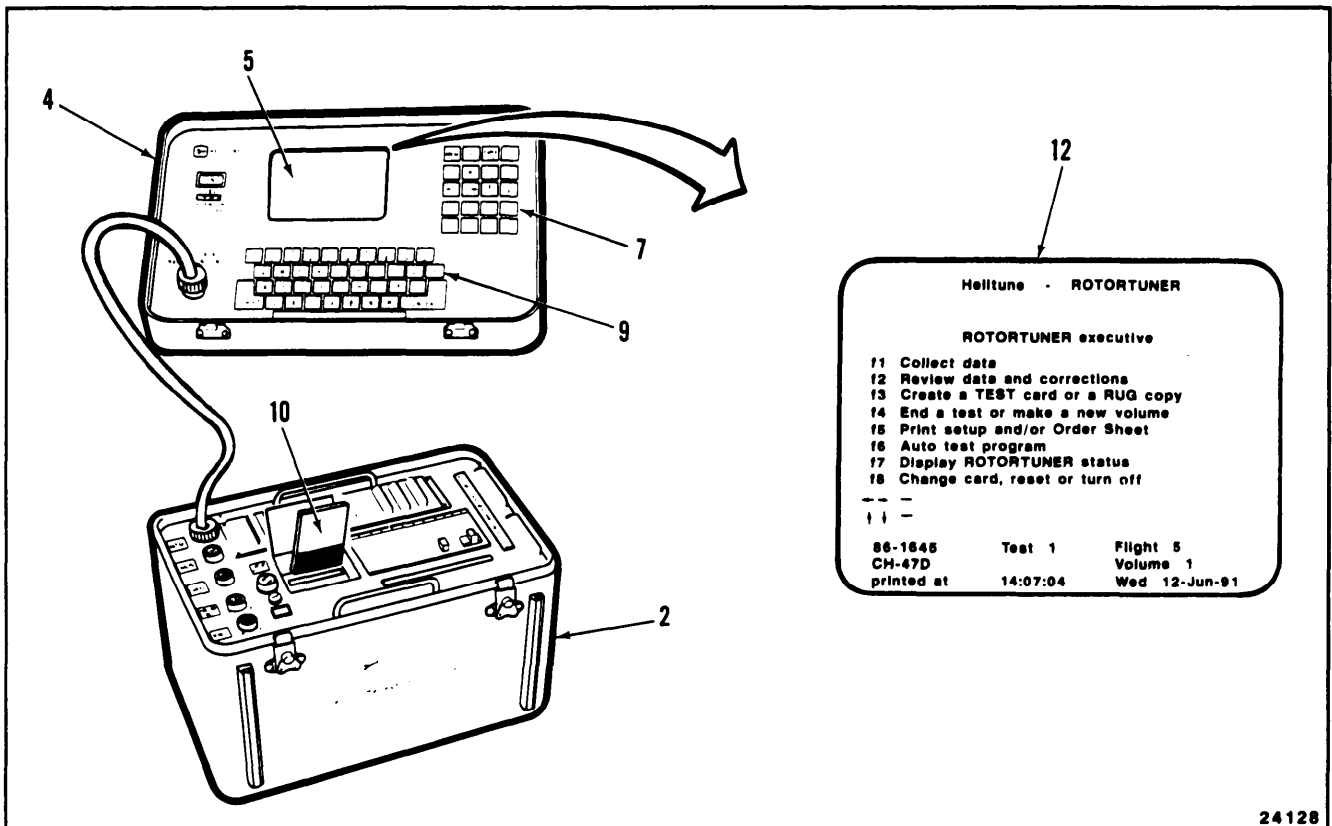

24128

END OF TASK

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**

None

**Personnel Required:**

- Rotary-Wing Aviator (2)
- Medium Helicopter Repairer
- Power Train Repairer
- Inspector

**References:**

- TM 55-1520-240-10
- TM 55-1520-240-T
- Task 5-94

**Equipment Condition:**

- Electrical Power On
- Install Rotortuner Track and Balance Equipment (Task 5-146)
- Rotortuner data card formatting (Task 5-147)



**WARNING**

When the rotors are turning, use care outside the helicopter. Stay outside of the rotor disk area in front of the helicopter. Do not climb on the helicopter until the blades come to a stop. Serious injury or loss of life can occur if personnel are struck by a moving Made.

**CAUTION**

Loss of power to memory card will result in all data being lost. The battery has a useful life of approximately 2 years and must be changed on or before the replacement date indicated on the card label.

1. Have pilot start engines and head helicopter into wind at 100 percent rotor rpm (TM 55-1520-240-10).
2. Place chocks (1) against one aft wheel (2).

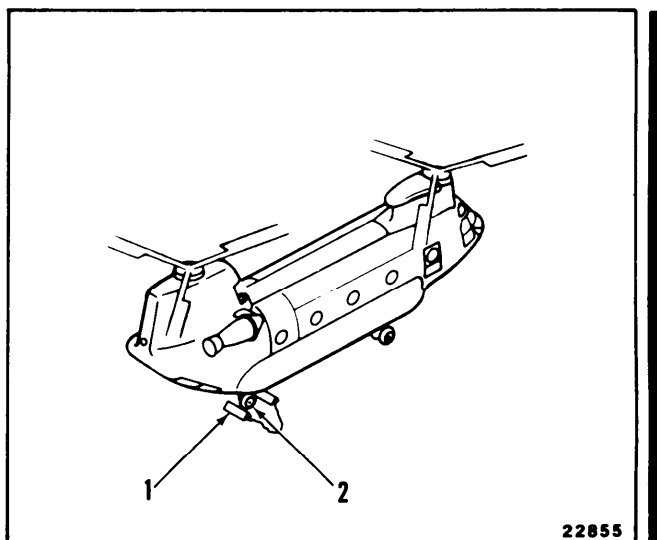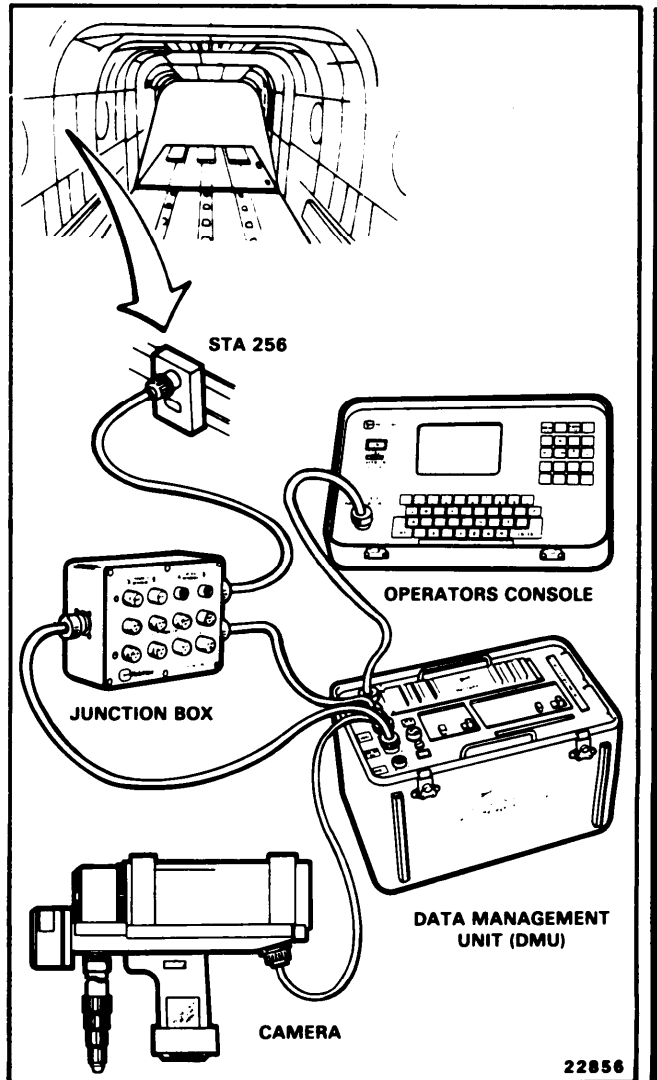

**NOTE**

- Text in *italics* denotes ROTORTUNER commands and prompts as they appear on the display screen.
  - If tracking is erratic during the ground tracking procedure and several unsuccessful attempts have been made to track the aircraft, refer to TM 55-1520-240-T.
3. From the Rotortuner executive menu press key F1, *Collect data*.
  4. Press key F1, *Start next flight*.
  5. Press key F1, *Enter current settings*.
  6. Enter forward and aft rotor pitch, tab, and weight settings on the ROTOR CONFIGURATION WORKSHEET/AIRCRAFT PREPARATION CHECKLIST at this time.
  7. Press key F8, *finished* after each time a current setting is entered.
  8. After all settings have been entered. Press key

F8 to return to Rotortuner executive menu.

**NOTE**

The Rotortuner is capable of collecting data manually and automatically. For automatic method do steps 9 thru 31. For manual method do steps 32 thru 58.


**AUTOMATIC DATA COLLECTION**

9. Press key F6, *Auto test program*.
10. Press key F4, *set/clear* to set track and balance for the forward and aft heads.
11. Use the arrows on functional key pad (3) to cursor left or right as required. The screen display (4) will show *SET* for ground, hover, 100 knot, 120 knot, and 140 knot condition.

**NOTE**

The Auto Test program is now set for the entire track and balance exercise and should not have to be entered again for this card.

12. Press Key F8, *finish*.

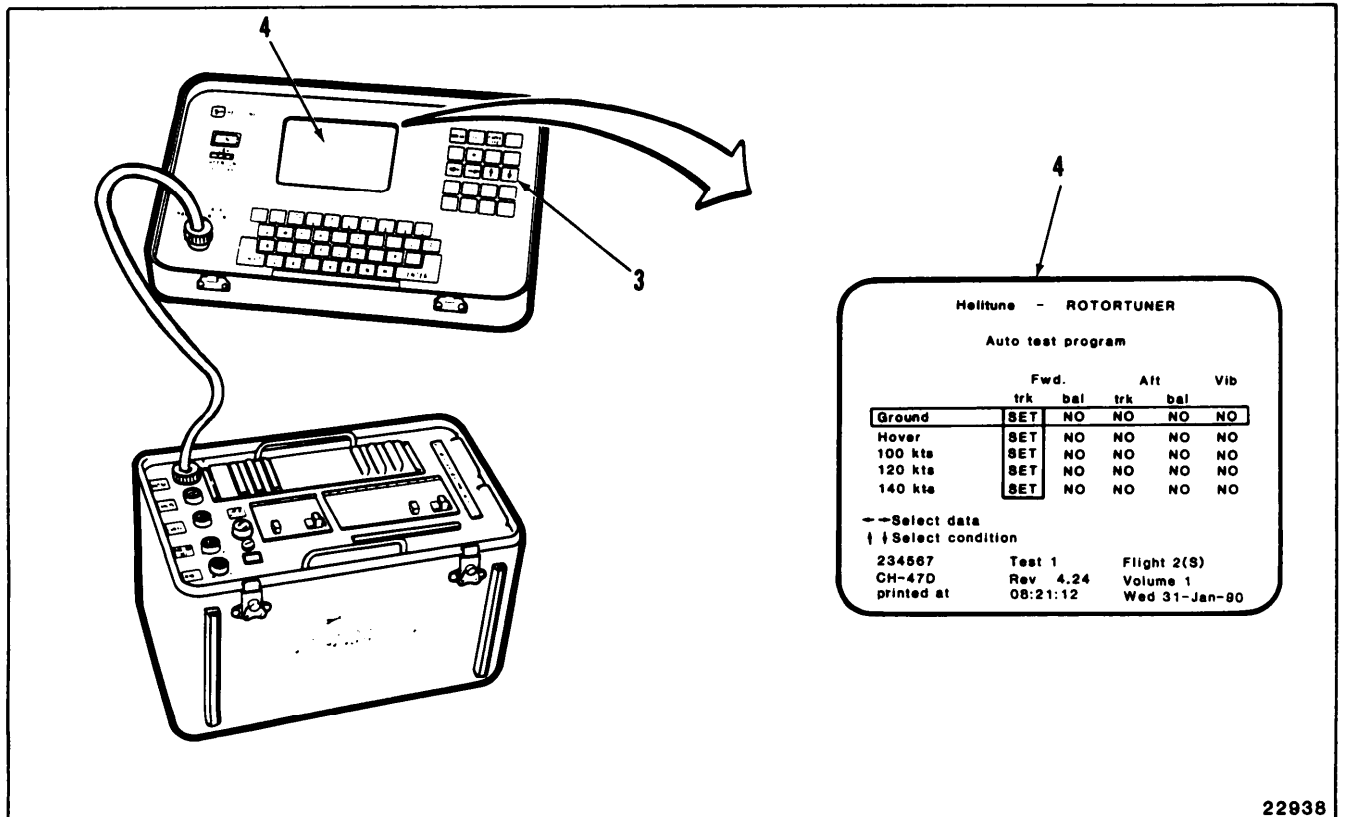

22938


- 13. Press key F7, *Display ROTORTUNER status.*
- 14. Monitor the rotor rpm, when it reaches 224 to 226 rpm press key F1, *Collect Data.*

**NOTE**

Pressing key F4 Resume current flight will overwrite data from the last ground run.

- 15. Press key F4, *Resume current flight.*


- 16. Press key F2, *Automatic data collection.*
- 17. Ensure that the word *Ground* (5) is high-lighted, if it is not high-lighted use the cursor arrows (6) on the function key pad to cursor over to Ground.
- 18. Press Key F1, *confirm.*
- 19. To begin data collection press key F1, *Display day camera data* (7).

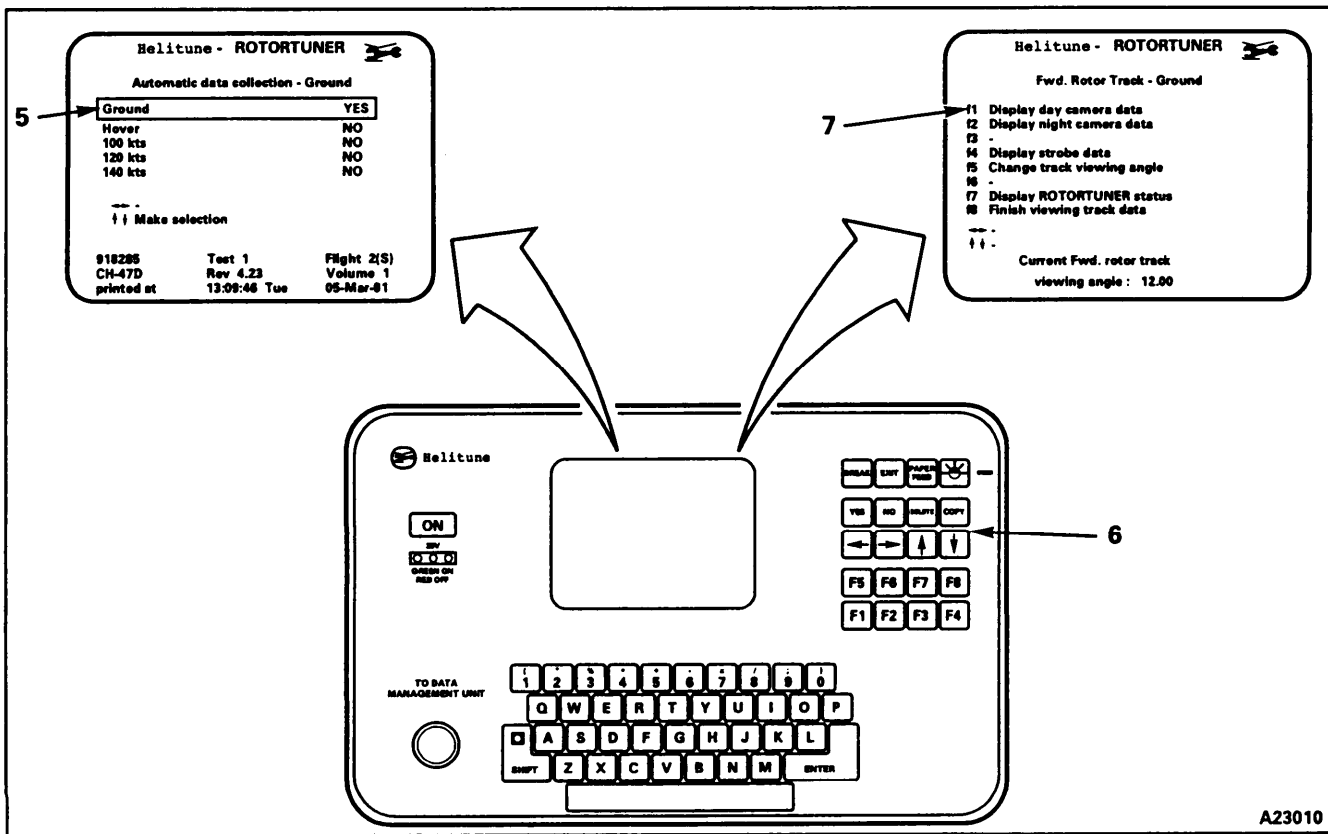


A23010

**AUTOMATIC FORWARD BLADE TRACKING**

20. Proceed to the cockpit with the camera and monopod (8). Extend the monopod out two sections.
21. Rest the monopod on the cockpit floor just behind the center console (9).
22. Point the camera through the center windshield (10) towards the blade tip path (11) at the 12 o'clock position.

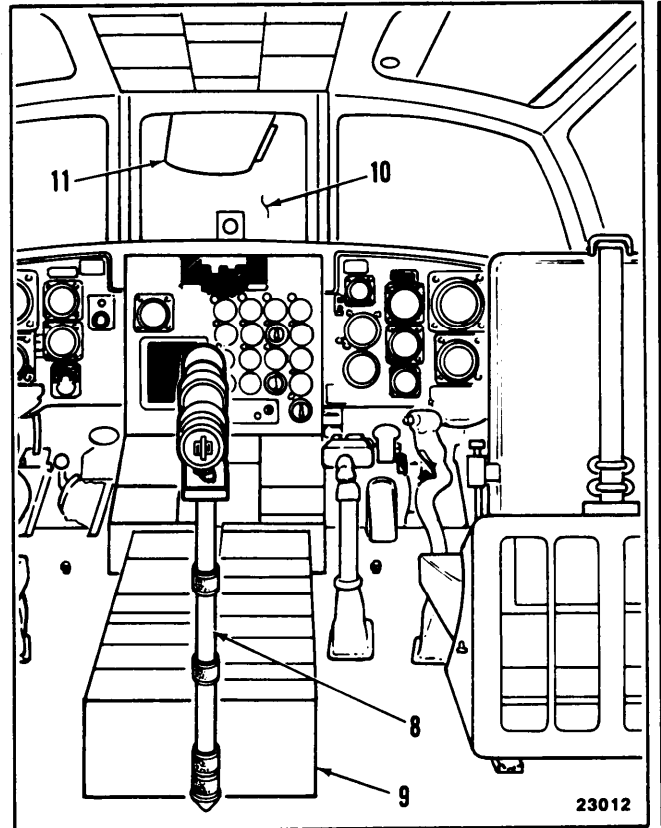


23. Tip the camera back and forth and watch the light emitting display (LED). As it stabilizes a vertical column of light will be displayed on the bar graph. When it is locked onto the blades, the light will stop between the two white brackets. Track data is being collected at this time.
24. When the LED display goes dark the forward track data collection is complete.

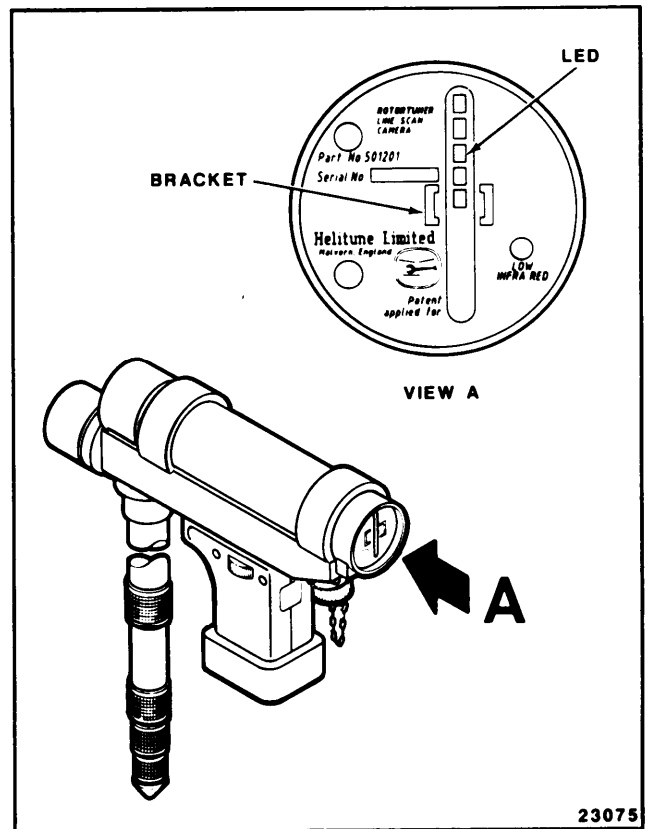

**AUTOMATIC AFT BLADE TRACKING**

25. To begin data collection press key F1, *Display day camera data.*
26. Proceed to the rear of the helicopter, go to the left rear window (14) at station 460. Shorten monopod to one extended section (15).
27. Brace the monopod on the seat support tube (16) near the side wall. Point the camera through the window at the 9 o'clock position toward the blade tip (17) path.

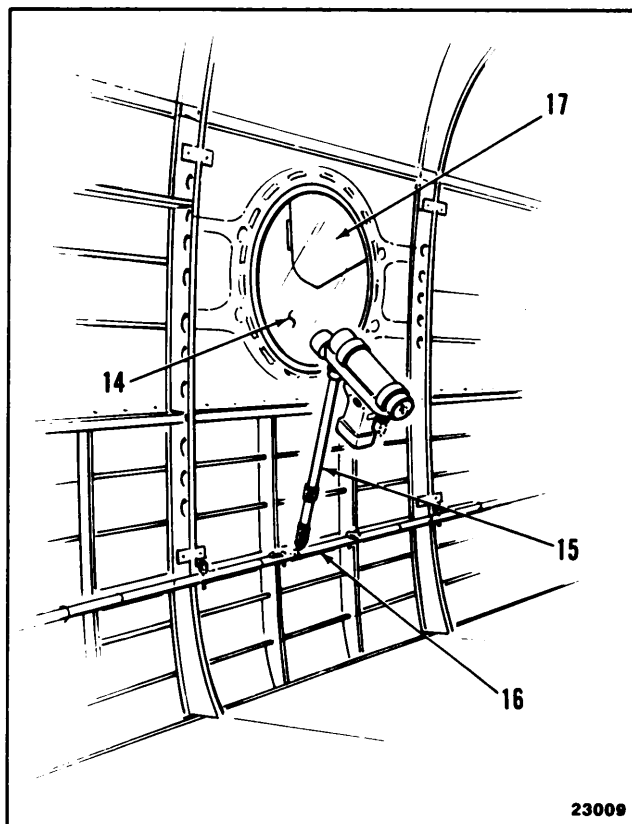


23009

28. Tip the camera back and forth and watch the LED display. As it stabilizes, a vertical column of light will be displayed on the bar graph. When it is locked onto the blades the light will stop between the two white brackets. Track data is being collected at this time.
29. When the LED display goes dark the aft track data collection is complete.

**NOTE**

After tracking is complete, balance collection screen will appear and automatically collect balance data. When data collection is complete the automatic data collection screen will appear and the word YES will appear next to the condition.

30. Press key F8, *Finished viewing tracking trend.*
31. Press Key F8, *Executive menu.* Then go to review data step 59.

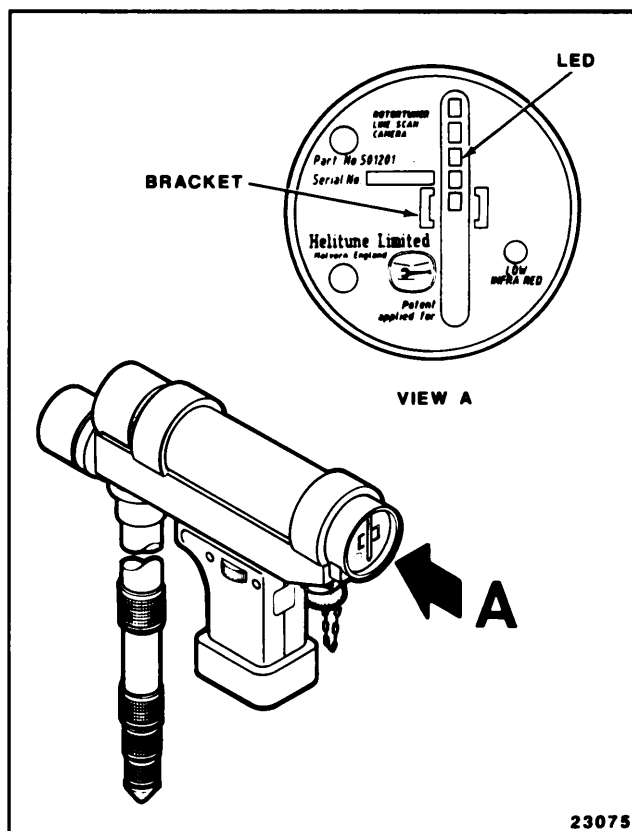

23075

**MANUAL DATA COLLECTION**


2. From the Rotortuner executive menu press key F7, *Display ROTOR TUNER status.*
3. Monitor the rotor rpm, when it reaches 224 to 226 rpm press key F1, *Collect data.*

**NOTE**

Pressing key F4 Resume current flight will overwrite data from the last ground run.


4. Press key F4, *Resume current flight.*

35. Press key F4, *Manual data collection.*
36. Ensure that the word *Ground (18)* is high-lighted, if it is not high-lighted use the cursor arrows (6) on the function key pad to cursor over to *Ground.*
37. Move cursor to *Fwd. trk.*
38. Press Key F1, *collect.*
39. To begin data collection press key F1, *Display day camera data (19).*

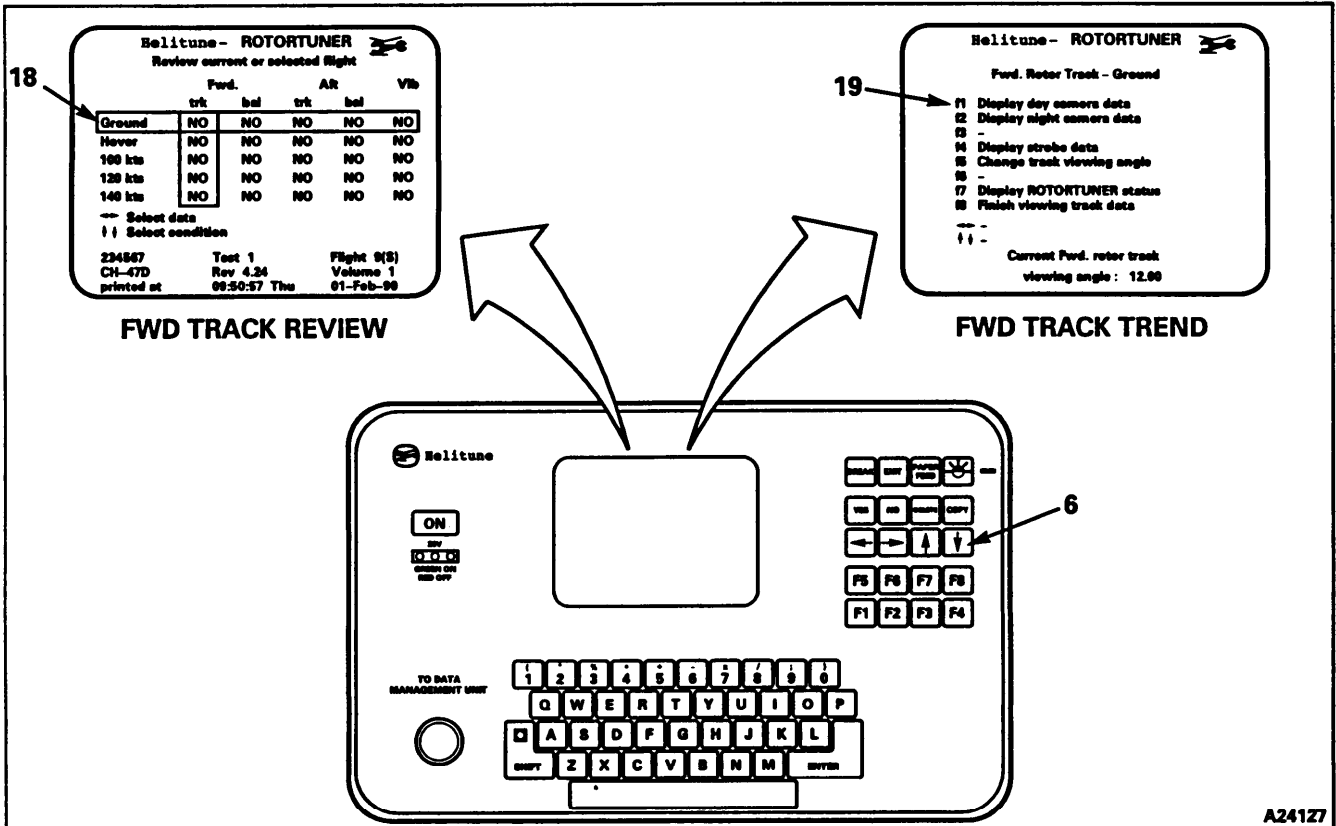


**MANUAL FORWARD BLADE TRACKING**

40. Proceed to the cockpit with the camera and monopod (8). Extend the monopod out two sections.
41. Rest the monopod on the cockpit floor just behind the center console (9).
42. Point the camera through the center windshield (10) towards the blade tip path (11) at the 12 o'clock position.

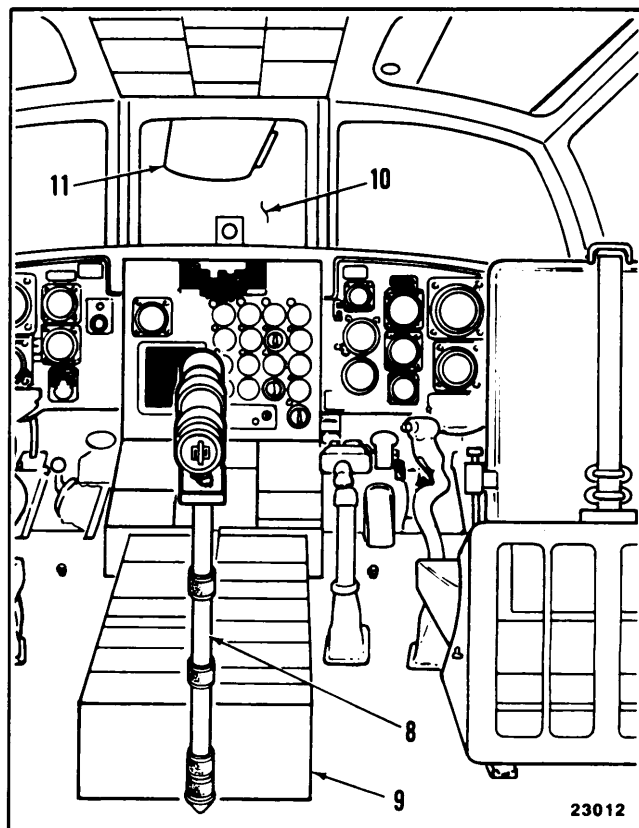


43. Tip the camera back and forth and watch the light emitting display (LED). As it stabilizes a vertical column of light will be displayed on the bar graph. When it is locked onto the blades, the light will stop between the two white brackets. Track data is being collected at this time.
44. When the LED display goes dark the forward track data collection is complete.
45. When the track data collection is complete the word *stored* will appear on the display. Press Key, F8 *finished*.

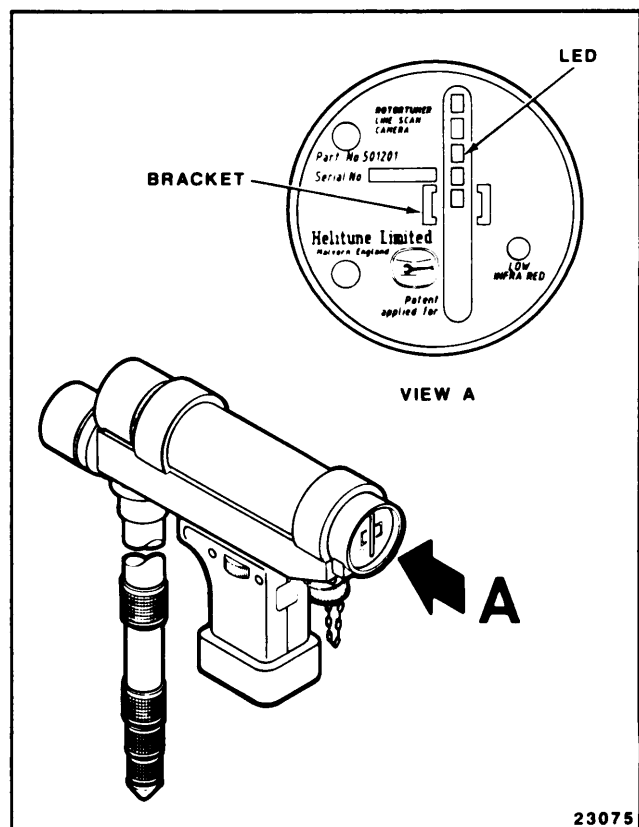




**MANUAL AFT BLADE TRACKING**

- 46. To begin data collection cursor over to *Aft trk*. Press Key F1, *collect*.
- 47. Press key F1, *Display day camera data*.
- 48. Proceed to the rear of the aircraft, go to the left rear window (14) at station 460. Shorten monopod to one extended section (15).
- 49. Brace the monopod on the seat support tube (16) near the side wall. Point the camera through the window at the 9 o'clock position toward the blade tip (17) path.

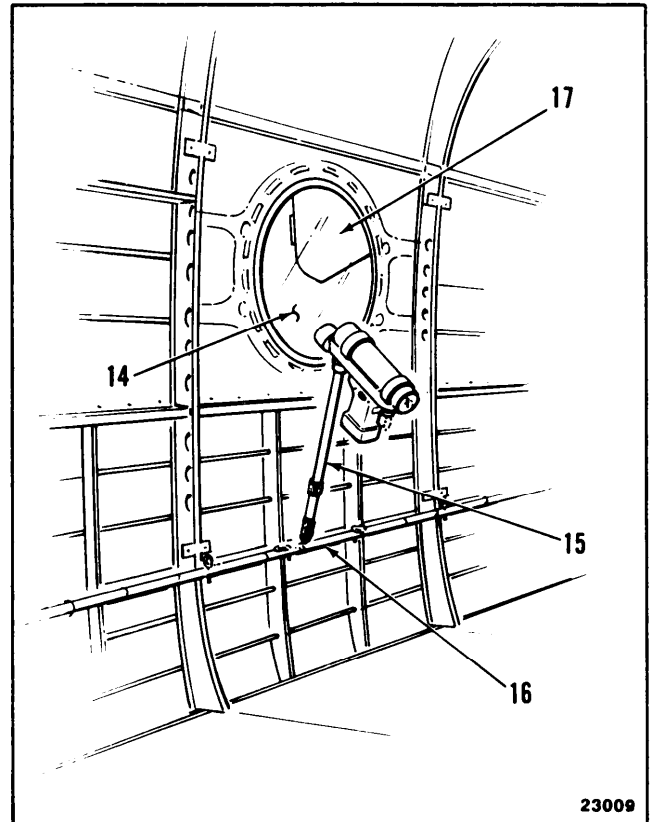

- 50. Tip the camera back and forth and watch the LED display. As it stabilizes, a vertical column of light will be displayed on the bar graph. When it is locked onto the blades the light will stop between the two white brackets. Track data is being collected at this time.
- 51. When the LED display goes dark the aft track data collection is complete.
- 52. The word *stored* will appear on the screen display. Press Key F8, *finished*.

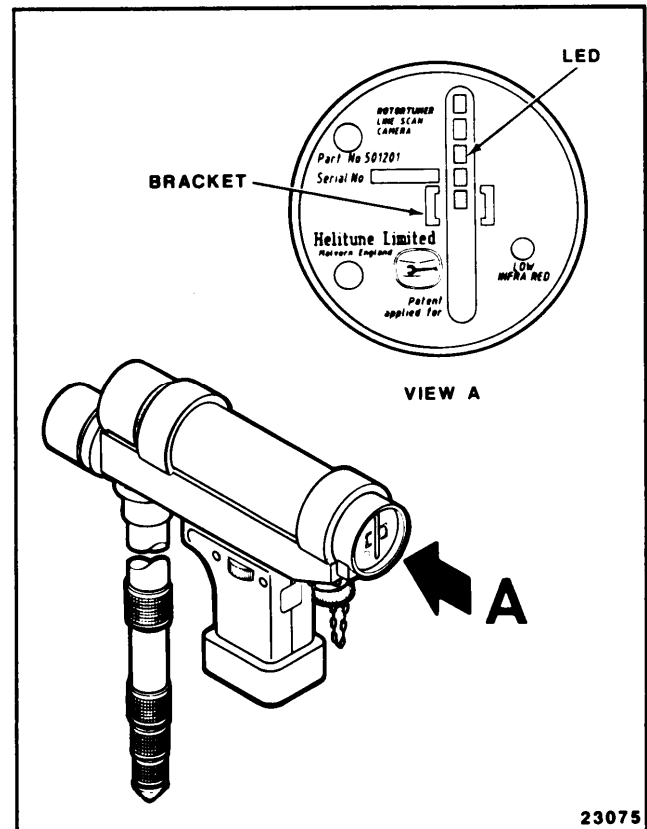


**MANUAL BALANCE DATA COLLECTION.**

3. Use the arrows (6) on the function key pad to cursor over to *Fwd. bal.*
4. Press Key F1, *collect.*

**NOTE**

The balance chart (20) will appear on the screen display then the word *busy* (21) will appear while data is being collected.

55. When data collection is complete the cursor (22) will appear on the balance chart. Press Key F8 *finish.*
56. Repeat steps 53 thru 55 for aft balance data collection, then go to step 57.
57. Press Key F8, *finished.*
58. Press Key F8, *executive.*

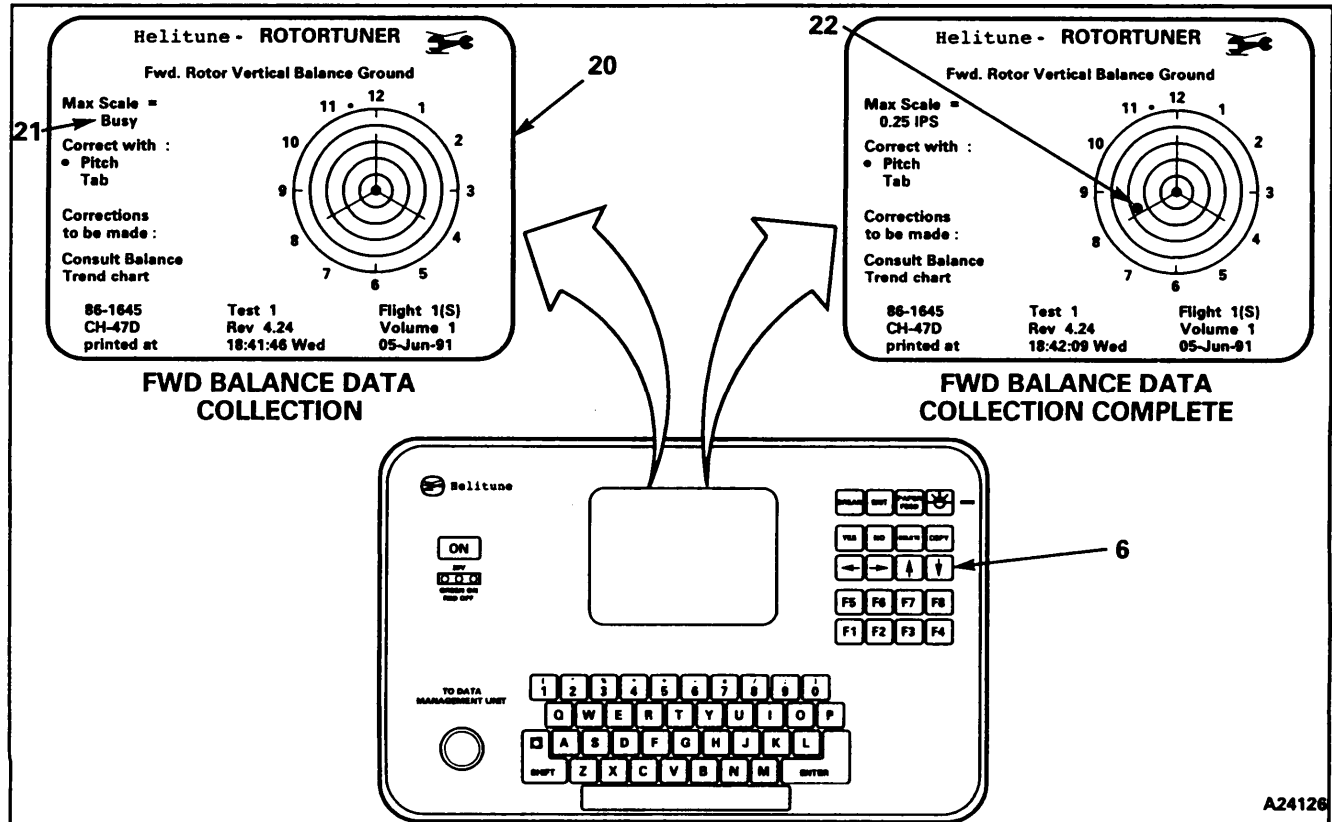

A24126


**REVIEW FORWARD GROUND TRACK DATA**

- 59. Press key F2, *Review data and corrections.*
- 60. Press key F1, *Review data and corrections.*
- 61. Using the cursor arrows (6), move cursor to *Fwd. trk* (23). Press key F1, *review.*
- 62. Press key F1, *Display trend for all blades.*

**NOTE**

To choose the master blade go to step 63 or to let the rotortuner calculate the mean go to step 64.

- 63. Using the cursor arrows (24) cursor to the desired blade. Press key F1, *trend.*
- 64. To Use the Rotortuner calculated mean press-key F1, *trend.*
- 65. Press key F3, *Display pitch correction chart.*
- 66. Move the cursor to the non center blades. Press key F6, *Calculate tab or pitch correction.*
- 67. Press COPY to save as a record and enter data on the CH-47D ROTORTUNER SETTING AND ADJUSTMENT RECORD.
- 68. Press key F8, *Finish reviewing track trend.*

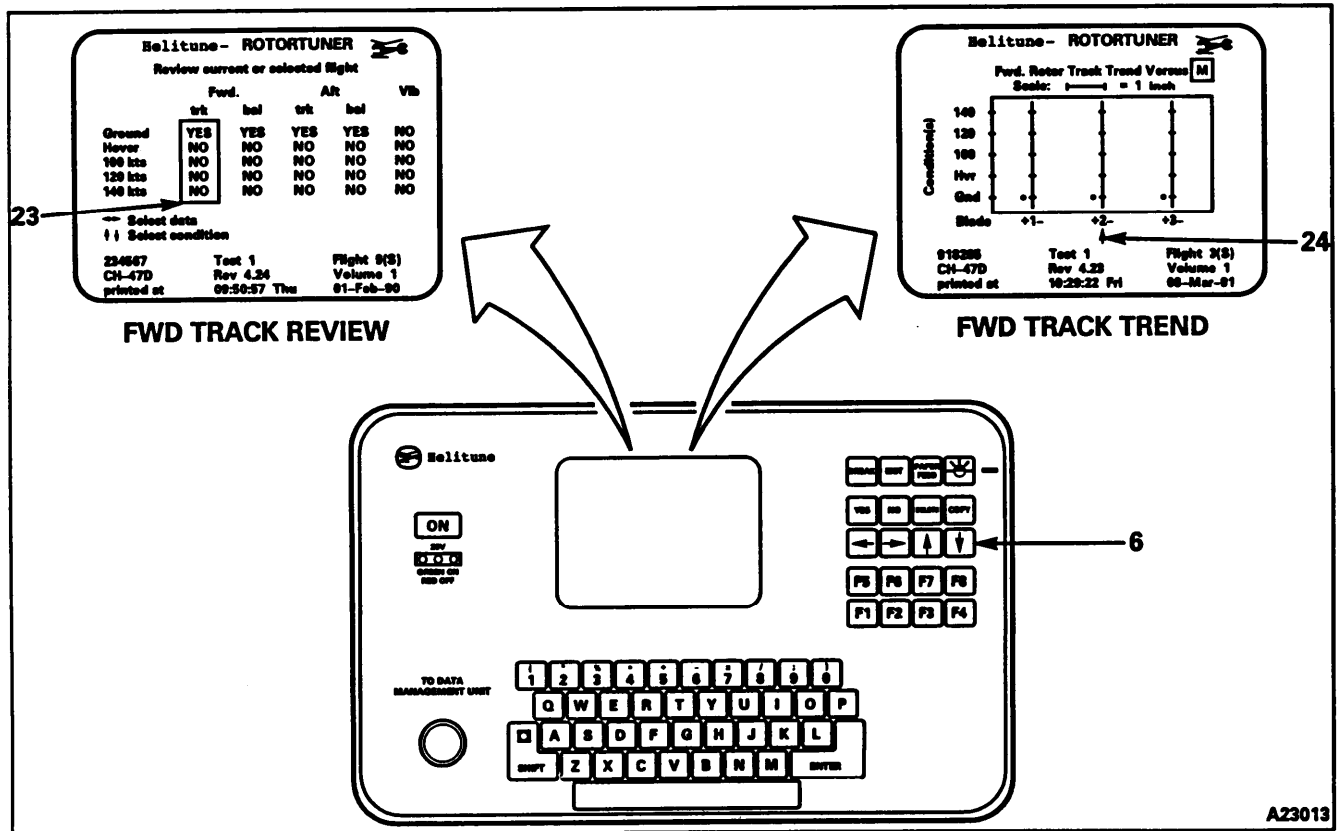

**REVIEW AFT TRACKING DATA**

69. Using the cursor arrows (6) move cursor to *Aft trk* (25).

**NOTE**

To choose the master blade go to step 71 or to let the Rotortuner calculate the mean go to step 72.

70. Press key F1, *Display trend for all blades.*

71. Using the cursor arrows (26), cursor to the desired blade. Press key F1, *trend.*


72. To use the Rotortuner calculated mean press key F1, *trend.*

73. Press key F3, *Display pitch corrections chart.*

74. Move the cursor to the non center blades. Press key F6, *Calculate tab or pitch correction.*

75. Press COPY to save as a record and enter data on CH-47D ROTORTUNER SETTING AND ADJUSTMENT RECORD.

76. Press key F8. *Finish reviewing tracking trend.*

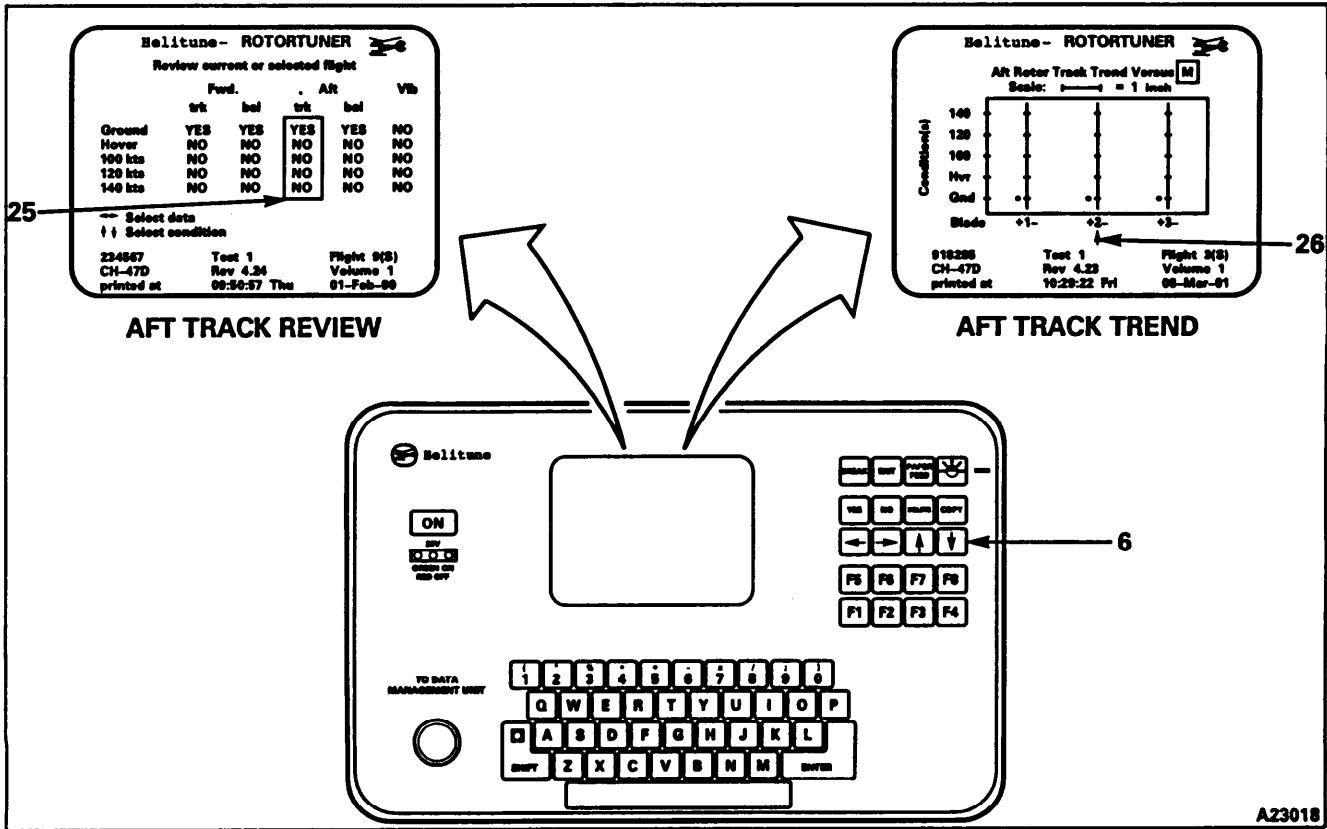

**PATCH LINK TRACKING CORRECTIONS**

77. Use following guidelines to correct track:


**NOTE**

If recommended changes are less than 2 marks no change is required.


**NOTE**

Rotor blades are referred to as number 1 (GREEN), number 2 (YELLOW) and number 3 (RED).


a. Track pattern (27) is within limits and requires no correction.

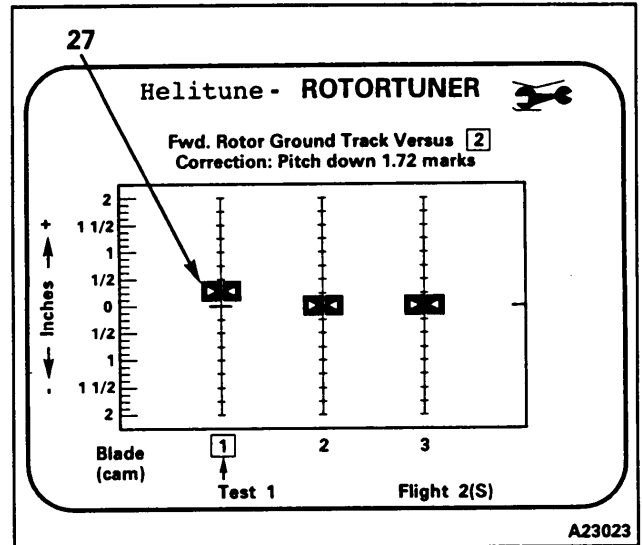

b. Track pattern (28) shows number 1 blade out of track. Number 1 blade must be lowered 2 marks.

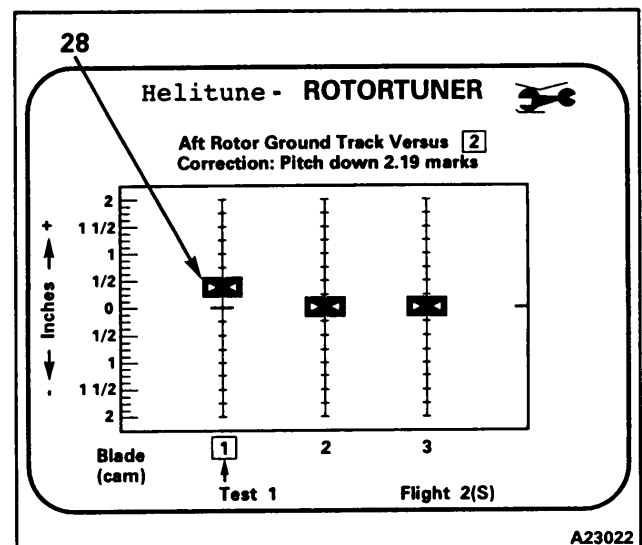

c. Track pattern (29), shows number 1 blade out of track. Number 1 blade must be raised 2 marks.

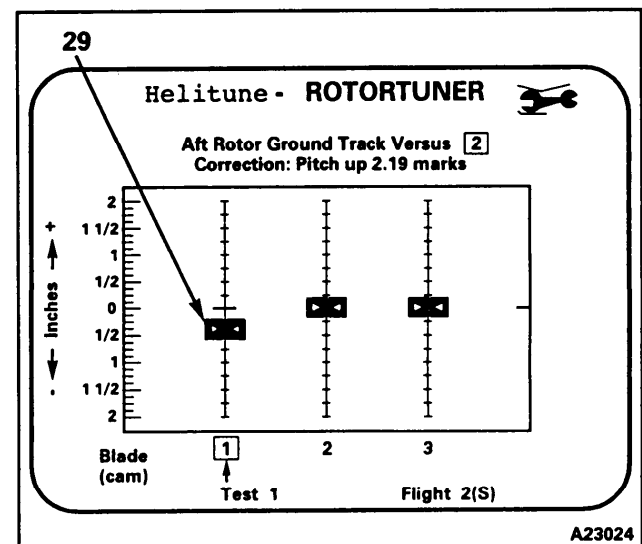

- 78. Use the number of marks entered on the CH-47D ROTORTUNER SETTINGS AND ADJUSTMENT RECORDS for the pitch link corrections.
- 79. Adjust pitch links (Task 5-94).

- 80. Repeat ground track.
- 81. For automatic ground track do steps 9 thru 31.
- 82. For manual ground track do steps 32 thru 58.

### CH-47D ROTORTUNER SETTINGS AND ADJUSTMENT RECORDS


A/C No. \_\_\_\_\_ TOTAL A/C HOURS \_\_\_\_\_  
 DATE \_\_\_\_\_  
 TEST \_\_\_\_\_ FLIGHT \_\_\_\_\_

(Record Test And Flight Nos. On Which Adjustment Figures Are Based)

#### FORWARD ROTOR

BLADE	WEIGHT			PITCH LINK			TAB		
	CURRENT	CHANGE	TOTAL	CURRENT	CHANGE	TOTAL	CURRENT	CHANGE	TOTAL
1 (GREEN)									
2 (YELLOW)									
3 (RED)									

SUGGEST MAINTENANCE CHECK/ACTIONS:

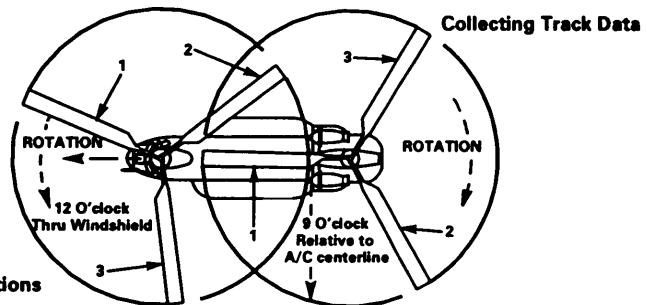


#### AFT ROTOR

BLADE	WEIGHT			PITCH LINK			TAB		
	CURRENT	CHANGE	TOTAL	CURRENT	CHANGE	TOTAL	CURRENT	CHANGE	TOTAL
1 (GREEN)									
2 (YELLOW)									
3 (RED)									

SUGGESTED MAINTENANCE CHECK/ACTIONS:

A23063


83. Using the cursor arrows (6) move the cursor to *Fwd bal* and Press key F1, *Review data and corrections*.

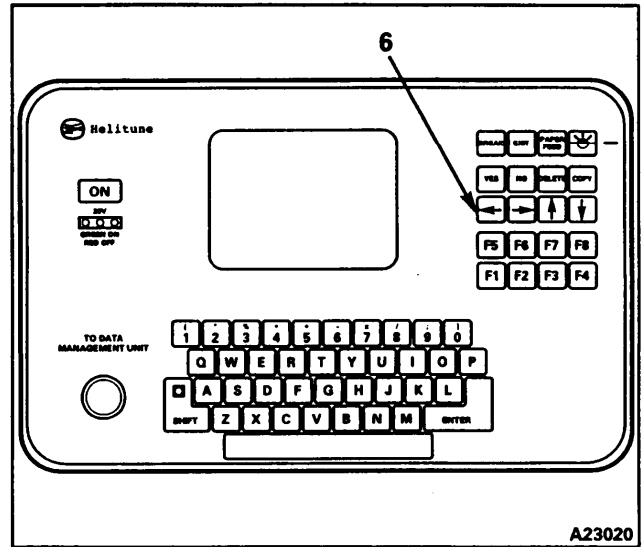

A23020

84. Press key F2, *Review lateral balance* for forward head. If lateral balance is 1 IPS or greater (30) and track is within 2 marks, troubleshoot per TM 55-1520-240-T.

85. Press key F8, *Finish review*.

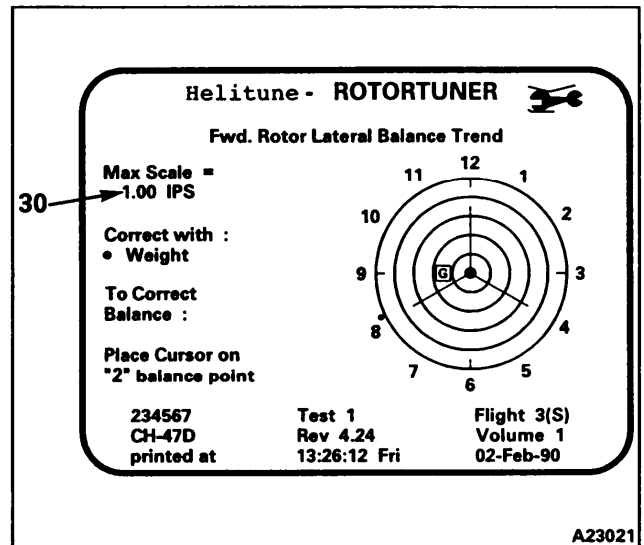


A23021

- 86. Press key F2, *Review lateral balance* for aft rotor head.
- 87. If lateral balance is 1 IPS (31) or greater and track is within 2 marks troubleshoot per TM 55-1520-240-T.
- 88. Press key F8, *Finish review*.
- 89. If lateral balance is below 1 IPS for the forward and aft rotor head, no corrections are required.
- 90. Perform crosswind hover check per TM 55-1520-240-MTF. If changes are made for crosswind hover check, repeat ground tracking.

**INSPECT**

**FOLLOW-ON MAINTENANCE**

Perform Hover Track and Balance (Task 5-149).

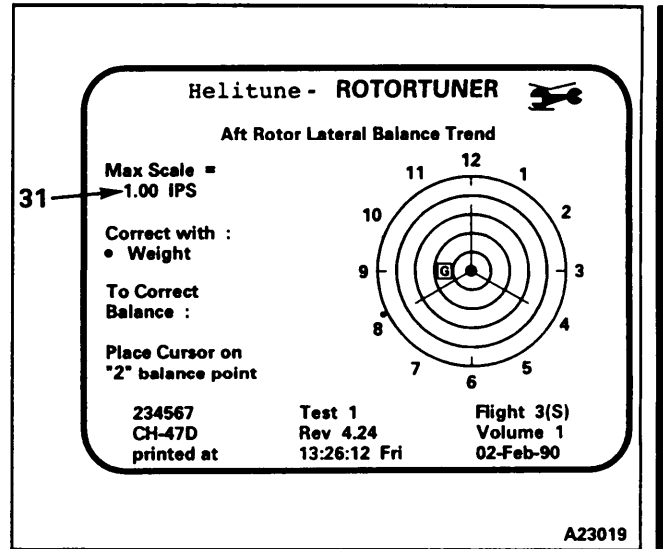



**INITIAL SETUP**

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**

None

**Personnel Required:**

- Rotary-Wing Aviator (2)
- Medium Helicopter Repairer
- Power Train Repairer
- Inspector

**References:**


- TM 55-1520-240-10
- TM 55-1520-240-T
- Task 5-94
- Task 5-147

**Equipment Condition:**


- Install Rotortuner Track and Balance Equipment (Task 5-146)
- Rotortuner Data Card Formatting (Task 5-147)
- Helicopter Ground Track and Balance Completed (Task 5-148)
- Helicopter Hovering, Facing into Wind at 100% RPM (TM 55-1520-240-10)

**NOTE**

Text in *italics* denotes ROTORTUNER commands and prompts as they appear on the display screen.

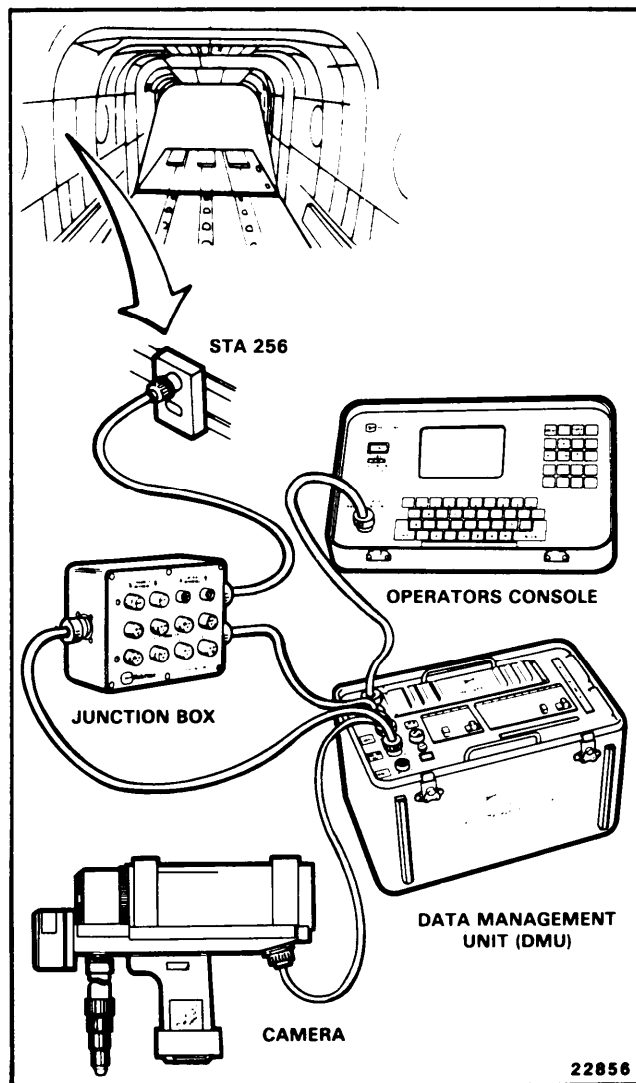

1. If no corrections have been made after ground track and balance go to step 4.
2. If corrections have been made from the ground data collected, proceed as follows:
  - a. Turn Rotortuner on (Task 5-147).
  - b. From the executive menu press key F1, *Collect data*.
  - c. Press key F1, *Start next flight (1)*,
  - d. Press key F1, *Enter current settings*.
  - e. Enter new forward and aft rotor settings to helicopter.
  - f. Press key F8, *finish*.
  - g. Go to automatic data collection step 5 or manual data collection step 21.

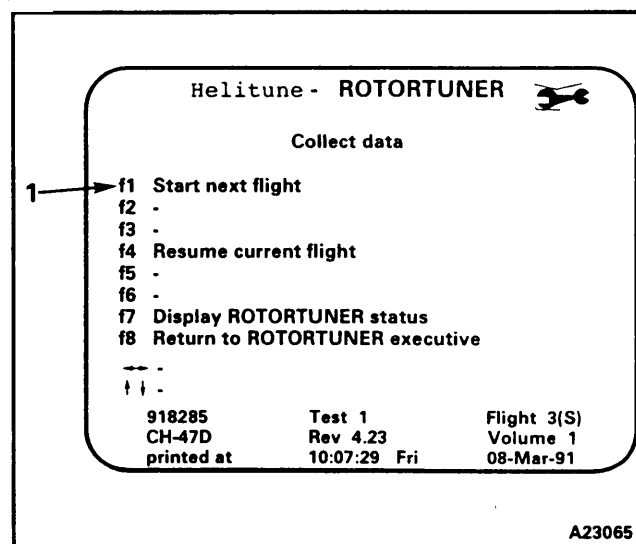

**GO TO NEXT PAGE**


**NOTE**

If corrections were made do not press key F4, this will overwrite data from last flight.

3. Press key F8, *Rotortuner executive menu*, then press key F1, *Collect data*.
4. Press key F4, *Resume current flight (2)*, on the collection data screen.


**NOTE**

The Rotortuner is capable of collecting data manually and automatically. For automatic method do steps 5 thru 20. For manual method do steps 21 thru 43.

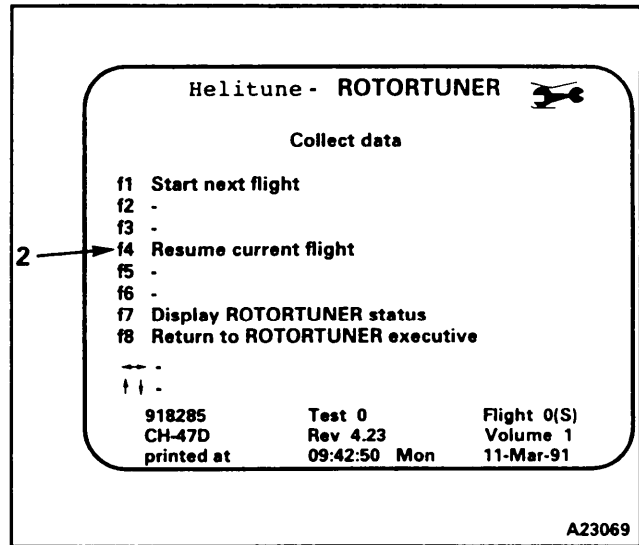


**AUTOMATIC DATA COLLECTION**

5. Press key F2, *Automatic data collection*.
6. Ensure that the hover data collection condition is highlighted (3). If the hover condition is not highlighted use the cursor arrows to highlight.
7. Press key F1, *confirm*.
8. Press key F1, *Display day camera data*.

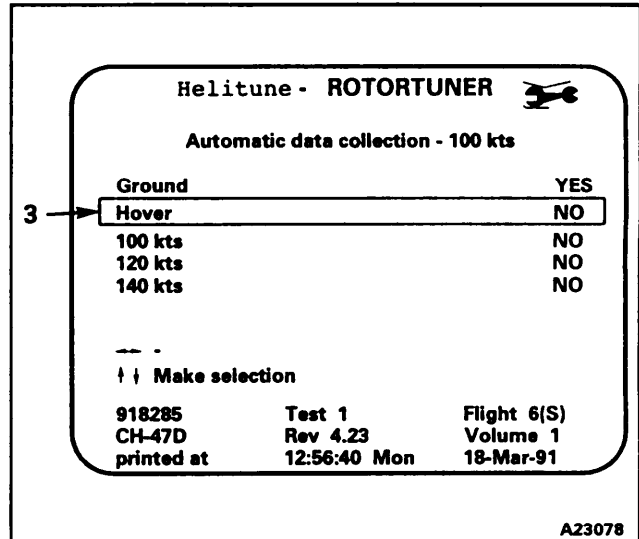


**AUTOMATIC FORWARD BLADE TRACKING**

9. Proceed to the cockpit with the camera and monopod. Extend the monopod out two sections (4).
10. Rest the monopod on the cockpit floor just behind the center console (5).
11. Point the camera through the center windshield (6) toward the blade tip (7) path at the 12 o'clock position.

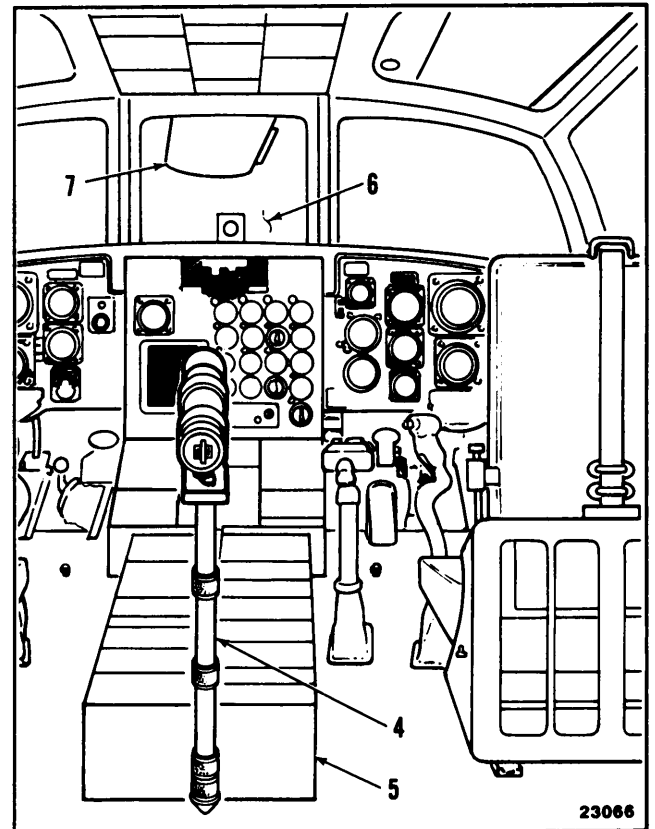


12. Tip the camera back and forth and watch the light emitting display (LED). As it stabilizes a vertical column of light will be displayed on the bar graph. When it has locked onto the blades, the light will stop between the two white brackets. Track data is being collected at this time.
13. When the LED display goes dark the forward track data collection is complete.

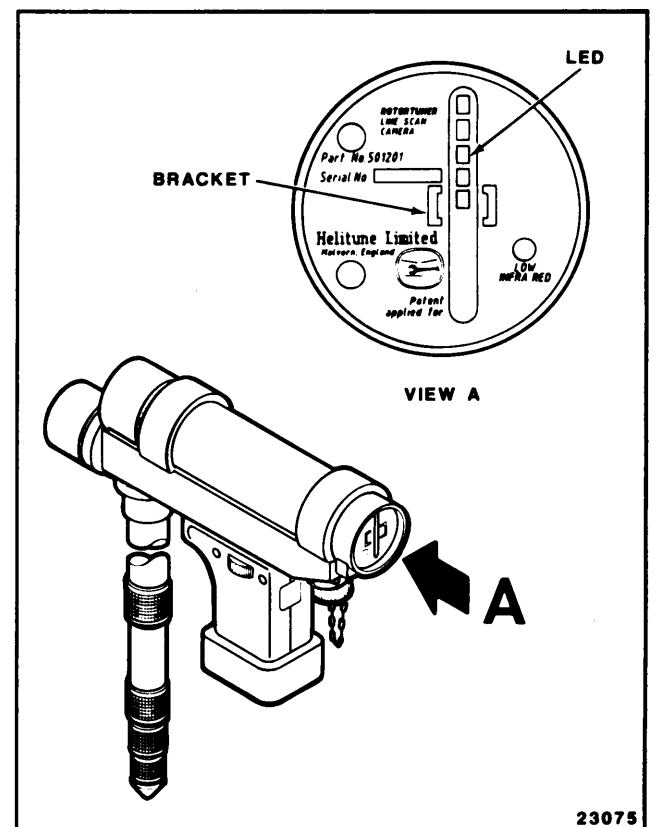

GO TO NEXT PAGE

**AUTOMATIC AFT BLADE TRACKING**

14. Press key F1, Display day camera data. Data collection will begin.
15. Proceed to the rear of the aircraft to the left window at station 460 (10). Shorten the monopod to one extended section (11).
16. Brace the monopod on the seat support tube (12) near the side wall. Point the camera looking through the window at the 9 o'clock position toward the blade tip (13) path.
17. Tip the camera back and forth and watch the LED display. As it stabilizes a vertical column of light will be displayed on the bar graph. When it has locked onto the blades, the light will stop between the two white brackets. Track data is being collected at this time.

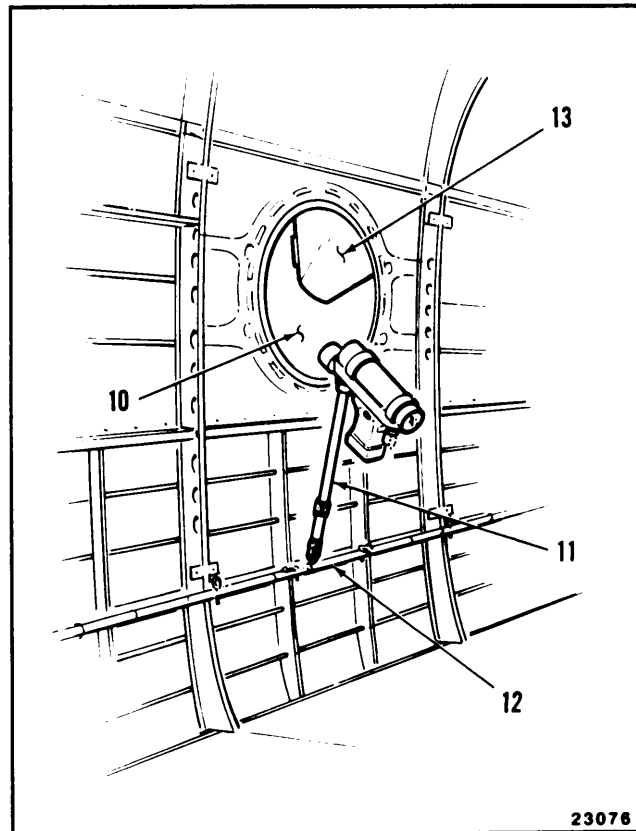


23076

18. When the LED display goes dark the aft track data collection is complete.

**NOTE**

When tracking is complete, the balance collection screen will appear and automatically collect balance data. When balance data collection is complete, the automatic data collection screen will appear and the word YES will appear next to the condition indicating that it is complete.


19. Press key F8, *Finish automatic data collection.*
20. Press key F8 again to return to Rotortuner executive menu, then go to review forward track data step 44.

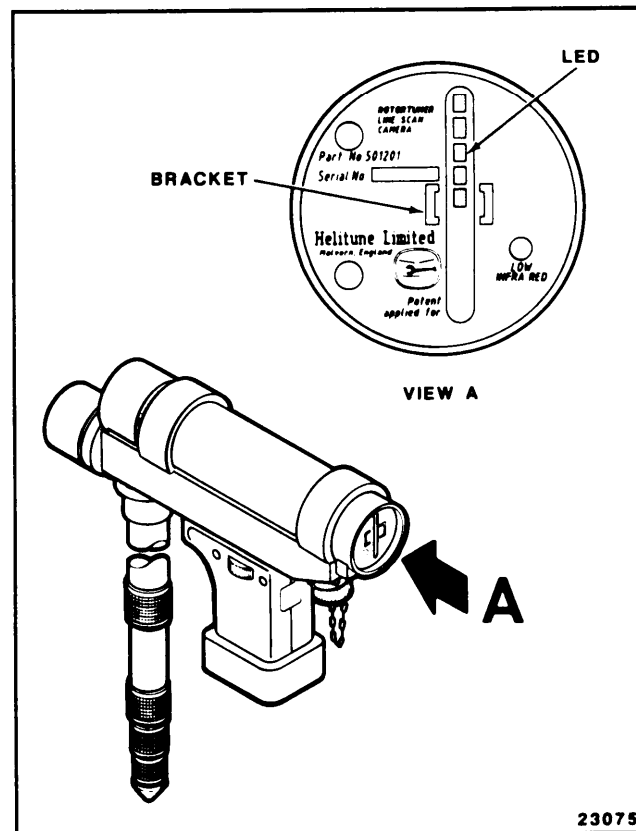

23075

**MANUAL DATA COLLECTION**


- 21. Press key F4, *Manual data collection*.
- 22. Ensure that the word *Hover* is highlighted (14). If it is not highlighted use cursor arrows (15) on the function key pad to cursor over to *Hover*.
- 23. Move cursor to *Fwd. trk*.
- 24. Press key F1, *collect*.
- 25. To begin data collection press key F1, *Display day camera data* (16).

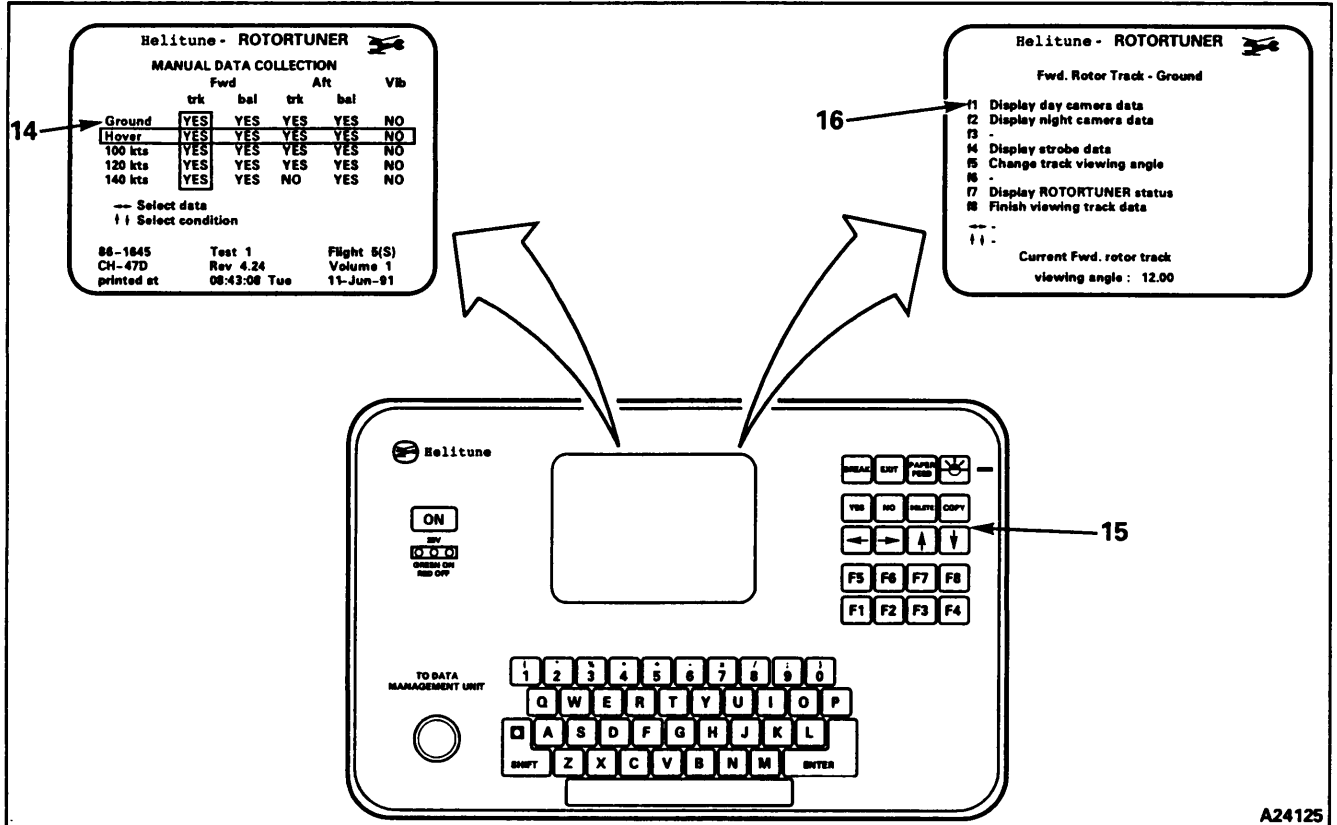




**MANUAL AFT BLADE TRACKING**

- 32. Press key F1, *Display day camera data*. Data collection will begin.
- 33. Proceed to the rear of the aircraft to the left window at station 460 (10). Shorten the monopod to one extended section (11).
- 34. Brace the monopod on the seat support tube (12) near the side wall, Point the camera looking through the window at the 9 o'clock position toward the blade tip (13) path.

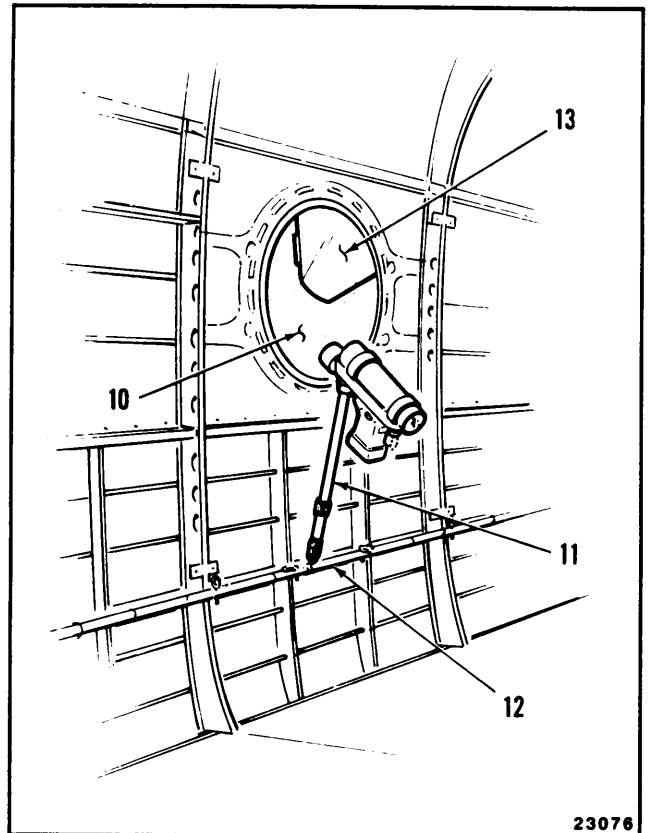

- 35. Tip the camera back and forth and watch the LED display. As it stabilizes a vertical column of light will be displayed on the bar graph. When it has locked onto the blades, the light will stop between the two white brackets. Track data is being collected at this time.
- 36. When the LED display goes dark the aft track data collection is complete.
- 37. The word *stored* will appear on the screen display, Press key F8, *finished*.

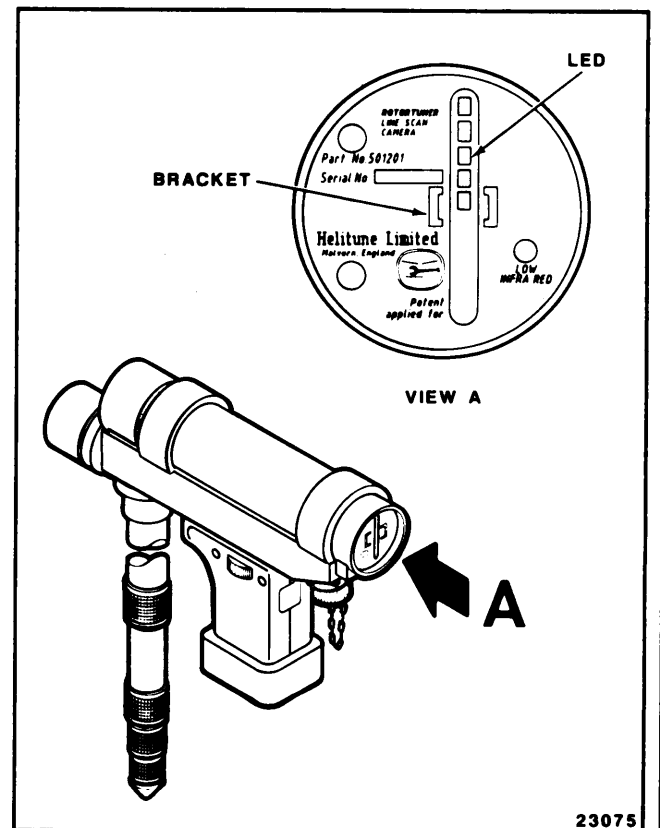

GO TO NEXT PAGE


**MANUAL BALANCE DATA COLLECTION**

- 38. Use the arrows (17) on the function key pad to cursor over to *Fwd bal.*
- 39. Press key F1, *collect.*

**NOTE**

The balance chart (18) will appear on the screen display when then the word *busy* (19) will appear while data is being collected.

- 40. When data collection is complete the cursor (20) will appear on the balance chart. Press key F8 *finish.*
- 41. Repeat steps 38 thru 40 for aft balance data collection, then go to step 42.
- 42. Press key F8, *finished.*
- 43. Press key F8 again to return to Rotortuner executive menu.

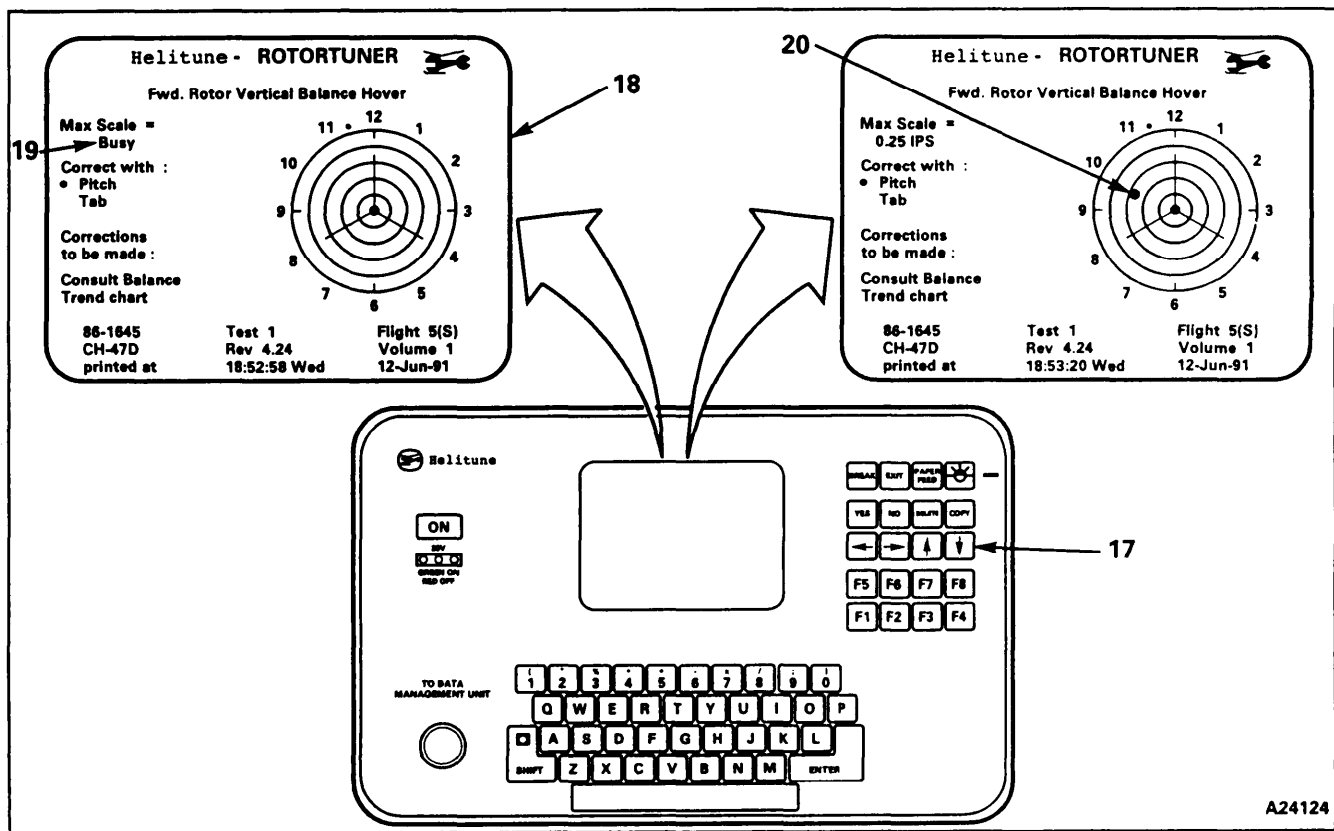

A24124



**REVIEW FORWARD TRACK DATA**


- 44. Press key F2, *Review data and corrections.*
- 45. Press key F1, *Review data and corrections.*
- 46. Using the cursor arrows (21), cursor over to Fwd trk (22). Press key F1, *review.*

**NOTE**

To choose the master blade go to step 47 or to let the Rotortuner calculate the mean go to 48.

- 47. Press key F1, *Display trend for all blades.*
- 48. Using the cursor arrows (23), cursor over to the desired blade. Press key F1, *trend.*

- 49. To use the Rotortuner calculated mean press key F1, *trend.*
- 50. Press key F3, *Display pitch correction chart.* Cursor with the up arrow to the hover display.
- 51. Cursor over to the two non center blades and Press key F6, *Corrections.*
- 52. Press COPY to save as a record and enter data on the CH-47D ROTORTUNER SETTING AND ADJUSTMENT RECORDS.
- 53. Press key F8, *finish.*

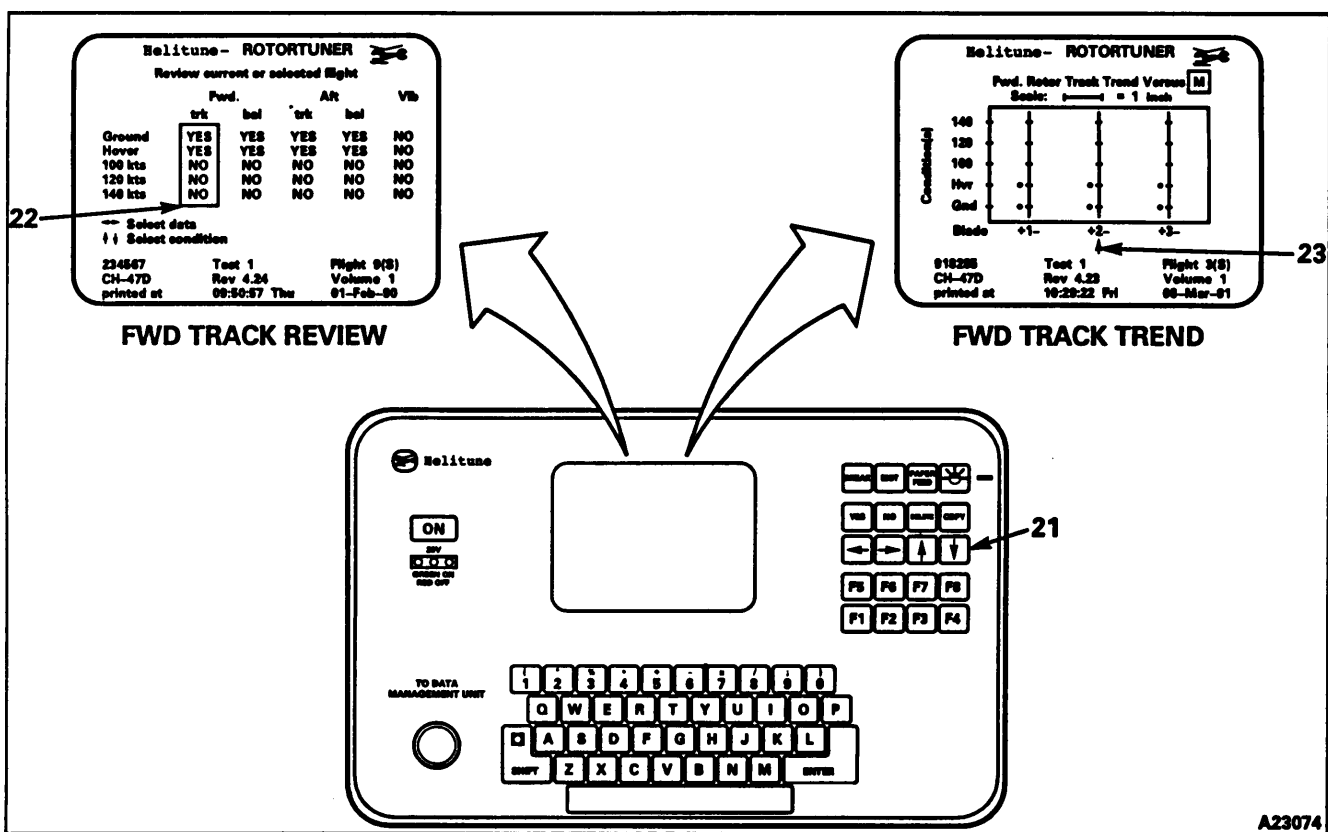

**REVIEW AFT TRACKING DATA**

54. Using the cursor arrow (21), cursor over to *Aft trk* (24). Press key F1, *review*.

**NOTE**

To choose a master blade go to step 55 or to let the Rotortuner calculate the mean go to step 56.

- 55. Press key F1, *Display trend for all blades*.
- 56. Using the cursor arrows (25) cursor to desired blade. Press key F1, *trend*.
- 57. To use the Rotortuner calculated mean press key F1, *trend*.
- 58. Press key F3, *Display pitch correction chart*. Cursor with the up arrow to the hover display.
- 59. Cursor over to the two non center blades, Press key F6, *corrections*.
- 60. Press COPY to save as a record and enter data on CH-47D ROTORTUNER SETTING AND ADJUSTMENT RECORD.


61. Press key F8, *finish*.

62. If recommended changes are less than 2 marks for the forward or aft track, no change is required.

63. If recommended changes are more than 2 marks for the forward or aft track, land the helicopter and do steps 80 thru 83.


**NOTE**

If any blade changes are more than 1 inch between ground and hover tracking, troubleshoot in accordance with TM 55-1520-240-T.

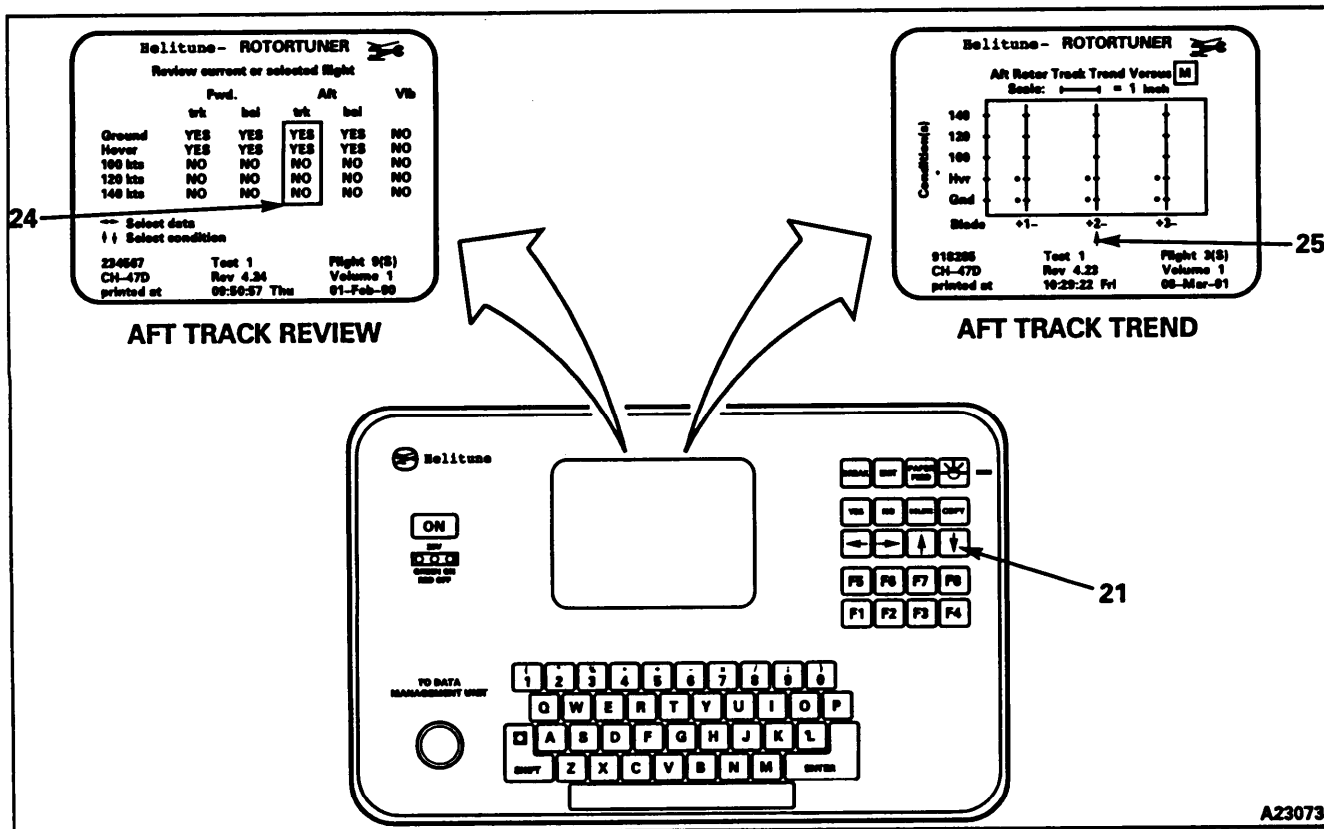

**REVIEW FORWARD ROTOR BALANCE DATA**

- 64. Using the cursor arrows (21), move the cursor to *Fwd bat.* Press key F1, *Review data and correction.*
- 65. Press key F2, *Review lateral balance,* for the forward rotor head.

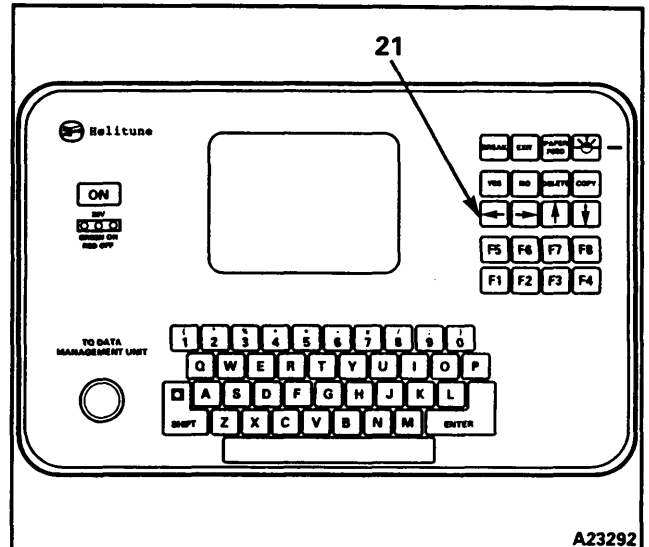


- 66. Using the cursor arrows, move the cursor to the *H* symbol (26) on the balance chart.
- 67. Press key F6, *correction.*

**NOTE**


If Warning appears on display, press key F1 *reset.*

- 68. Press COPY to save a record of corrections and enter on LATERAL BALANCE WORKING SHEET.
- 69. Also enter corrections on the CH-47D ROTORTUNER SETTING AND ADJUSTMENT RECORD.
- 70. Press key F8, *finish.*

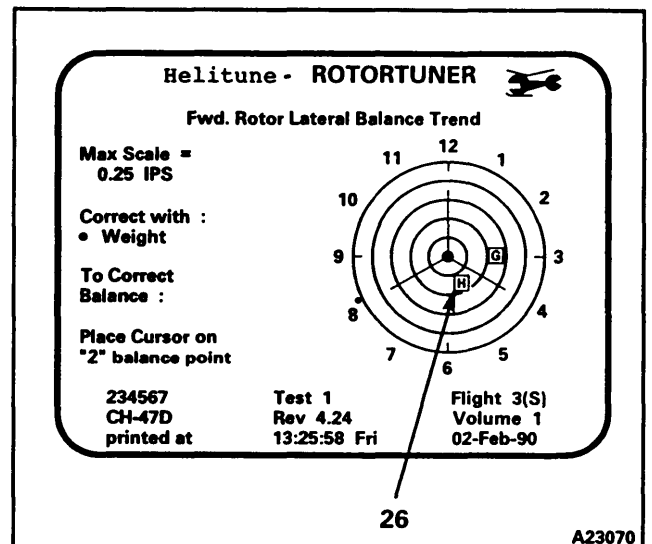

**REVIEW AFT ROTOR BALANCE DATA**

- 71. Using the cursor arrows (21), move the cursor to *Aft bal.* Press key F1, *Review data and correction.*
- 72. Press key F2, *Review lateral balance*, for aft rotor head.

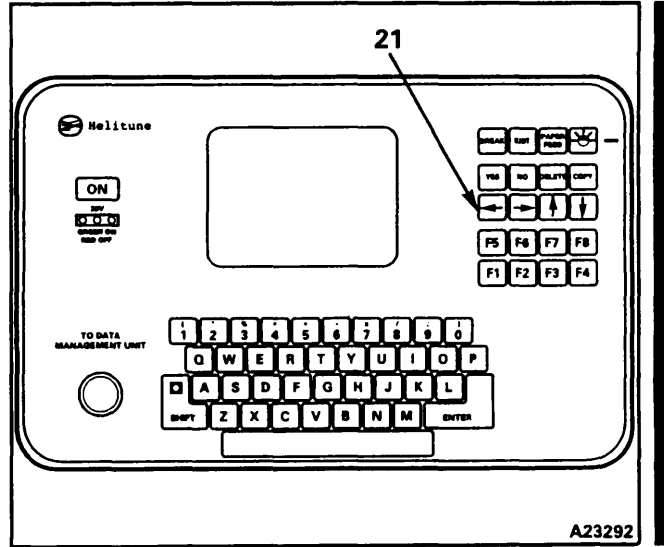


- 73. Using the cursor arrows move the cursor to the *H* symbol (27) on the balance chart.
- 74. Press Key F6, *correction.*

**NOTE**

If Warning appears on the display, Press key F7 *reset.*

- 75. Press COPY to save a record of corrections and enter data on the LATERAL BALANCE WORKING SHEET.
- 76. Also enter corrections on the CH-47D ROTORTUNER SETTING AND ADJUSTMENT RECORD.
- 77. Press F8, *finish.*

- 78. If IPS values for the forward or aft rotorhead are .7 IPS or less no corrections are required. Go to In-flight Track and Balance (Task 5-150).
- 79. If IPS values for the forward or aft rotorheads are .7 IPS or more land the helicopter and do step 83 through 85.



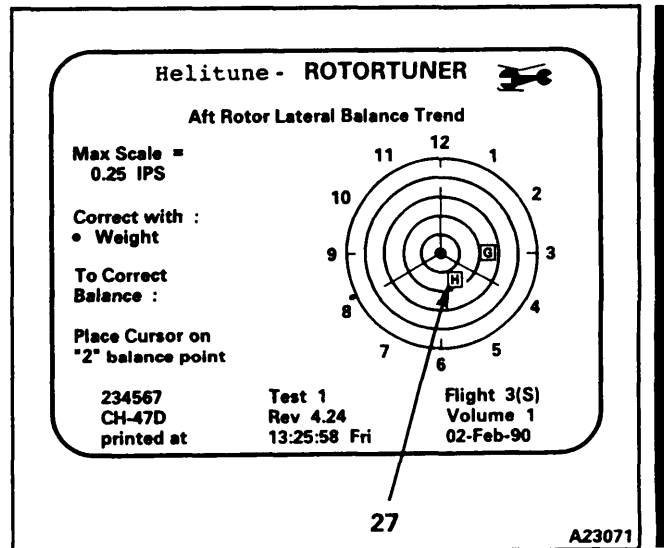


**PITCH LINK TRACKING CORRECTIONS**

80. Use the following guidelines to correct track:

**NOTE**

- If display recommended changes are less than 2 marks no change is required. Only correct hover track if blades are 1/2 inch or greater from master blade.
- Rotor blades are referred to as number 1 (GREEN), number 2 (YELLOW and number 3 (RED).
  - a. Track pattern (28) is within limits and requires no correction.
  - b. Track pattern (29) shows number 1 blade out of track. Number 1 blade must be lowered 2 marks.
  - c. Track pattern (30) shows number 1 blade out of track. Number 1 blade must be raised 2 marks.

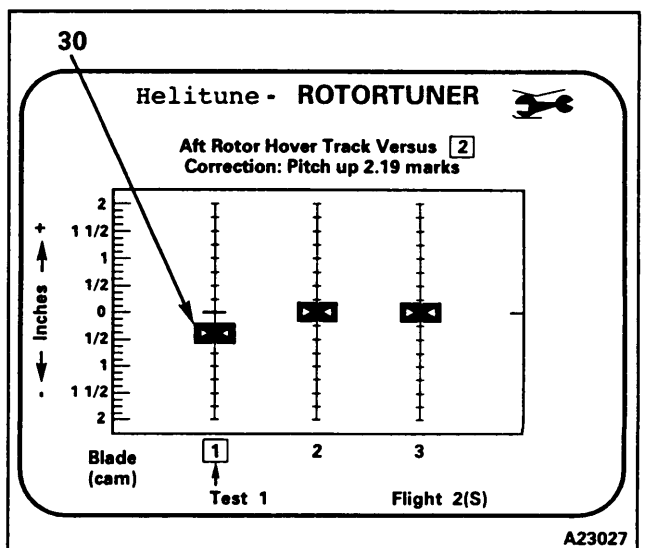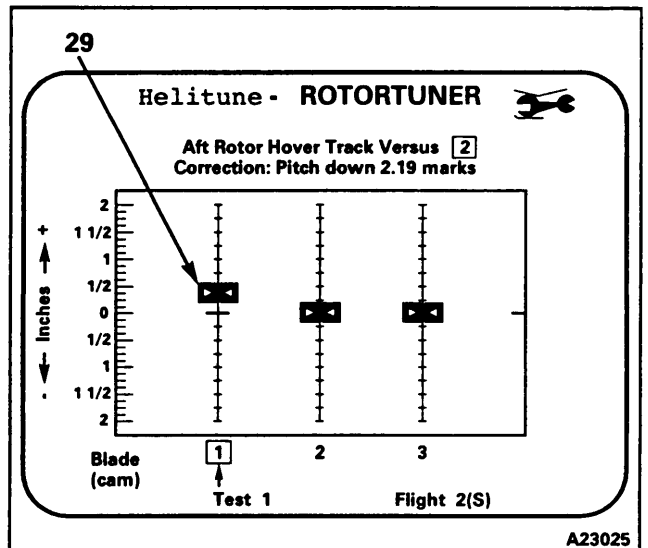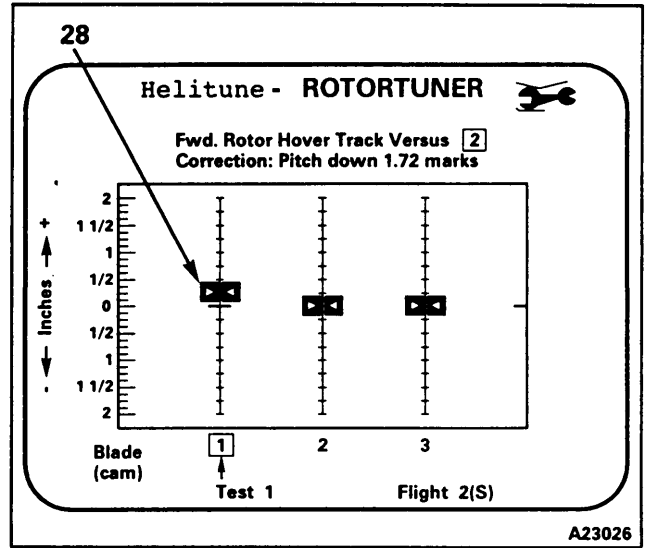

GO TO NEXT PAGE

81. Use the number of marks entered on the CH-47D ROTORTUNER SETTINGS AND ADJUSTMENT RECORD.

82. Adjust pitch links (Task 5-94).

83. Repeat ground and hover track.

### CH-47D ROTORTUNER SETTINGS AND ADJUSTMENT RECORDS

A/C No. \_\_\_\_\_ TOTAL A/C HOURS \_\_\_\_\_


DATE \_\_\_\_\_

TEST \_\_\_\_\_ FLIGHT \_\_\_\_\_ (Record Test And Flight Nos. On Which Adjustment Figures Are Based)

#### FORWARD ROTOR

BLADE	WEIGHT			PITCH LINK			TAB		
	CURRENT	CHANGE	TOTAL	CURRENT	CHANGE	TOTAL	CURRENT	CHANGE	TOTAL
1 (GREEN)									
2 (YELLOW)									
3 (RED)									

SUGGEST MAINTENANCE CHECK/ACTIONS:

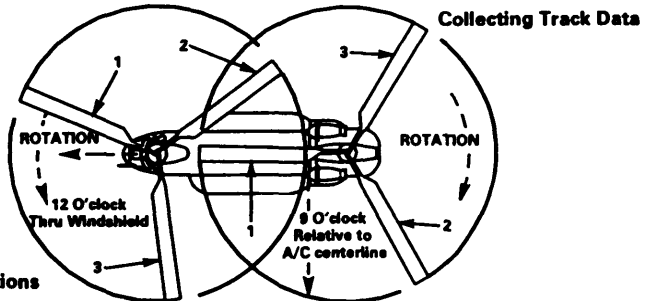

#### AFT ROTOR

BLADE	WEIGHT			PITCH LINK			TAB		
	CURRENT	CHANGE	TOTAL	CURRENT	CHANGE	TOTAL	CURRENT	CHANGE	TOTAL
1 (GREEN)									
2 (YELLOW)									
3 (RED)									

SUGGESTED MAINTENANCE CHECK/ACTIONS:

A23063


**ADJUST BALANCING WEIGHTS****WARNING**

- Do not install more than 10 weights on a blade. Too many weights can cause damage to equipment and injury to personnel.
- Do not adjust weights on wrong blade. Vibration levels can be increased. Damage to equipment and injury to personnel could result.

84. Determine weight changes and adjust balancing weights as follows:
- a. Identify 1, 2 or 3 blade (31 thru 36) on which weights are to be adjusted.
  - b. Remove lockwire. Remove four socket head screws (37) and washers (38) from tip cover (39).
  - c. Remove tip cover (39).
  - d. Remove four nuts (40) and four washers (41).

**NOTE**


- If lateral balance trend display recommends adding more weights than is allowed, use lateral balance worksheet to get final setting.
  - If the number of weights to be removed from a blade is greater than the number of weights installed, remove all the weights from the heavy blade. The remaining number must be added to each of the other blades.
- e. Install four washers (41) and four nuts (40). torque nuts to 60 inch-pounds.
  - f. Install tip cover (39).
  - g. Install four socket head screws (37) and washers (38). Torque screws to 175 inch-pounds.
  - h. Lockwire screws (37). Use lockwire (E233).
85. If any corrections have been made to the balance weights, repeat ground and hover balance data. Recheck against the 1 IPS and .7 IPS ground and hover balance. Remove and install weights (42) as needed. Record weight changes on CH-47D ROTORTUNER SETTING AND ADJUSTMENT RECORD.

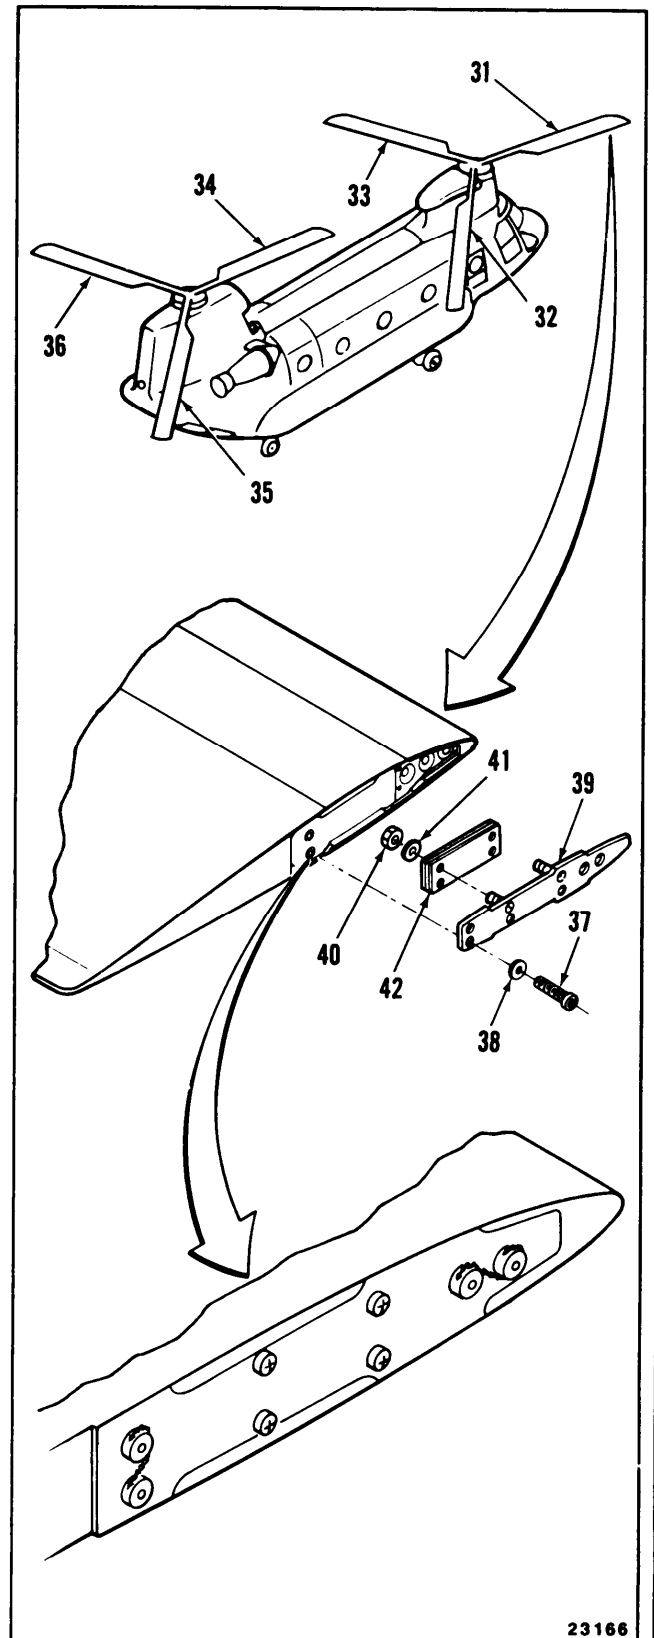**GO TO NEXT PAGE**

LATERAL BALANCE WORKING SHEET


**FORWARD ROTOR**

WEIGHT CONFIGURATION	( 1 ) GREEN	( 2 ) YELLOW	( 3 ) RED
1) ORIGINAL			
2) ROTORTUNER CHANGE			
3) ADD ( 1 ) + ( 2 )			
4) SUBTRACT SMALLEST OF ( 3 ) IF ANY VALUE IS GREATER THAN 10 WTS			
5) RESULT			
6) SUBTRACT FROM ( 5 ) AMOUNT ABOVE 10 WTS			
7) FINAL SETTING			

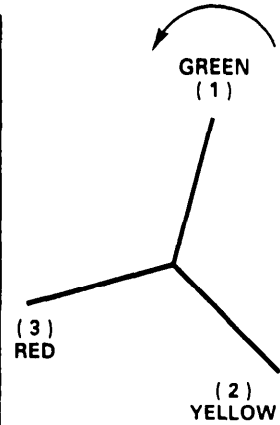

**AFT ROTOR**

WEIGHT CONFIGURATION	( 1 ) GREEN	( 2 ) YELLOW	( 3 ) RED
1) ORIGINAL			
2) ROTORTUNER CHANGE			
3) ADD ( 1 ) + ( 2 )			
4) SUBTRACT SMALLEST OF ( 3 ) IF ANY VALUE IS GREATER THAN 10 WTS			
5) RESULT			
6) SUBTRACT FROM ( 5 ) AMOUNT ABOVE 10 WTS			
7) FINAL SETTING			

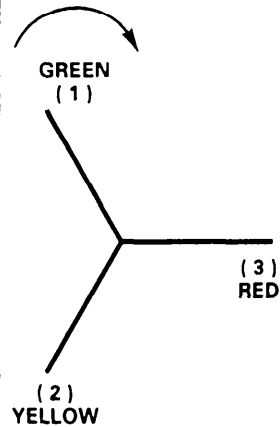

A23067

FOLLOW-ON MAINTENANCE

Perform In Flight Track and Balance (Task 5-150)

INSPECT

END OF TASK

5-580 Change 25



## INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

None

**Materials:**

None

**Personnel Required:**

Rotary-Wing Aviator (2)  
 Medium Helicopter Repairer  
 Power Train Repairer  
 Inspector

**References:**


TM 55-1520-240-10  
 TM 55-1520-240-T  
 Task 5-75.1  
 Task 5-94  
 Task 5-147

**Equipment Condition:**

Install Rotortuner Track and Balance Equipment  
 (Task 5-146)  
 Rotortuner Data Card Formatting (Task 5-147)  
 Helicopter Ground Track and Balance Completed  
 (Task 5-148)  
 Helicopter Hover Track and Balance Completed  
 (Task 5-149)

**WARNING**

Before collecting track and balance data for the 100 KTS, 120 KTS, and 140 KTS conditions, the maintenance test pilot will determine if it is safe to proceed to the next condition from the data collected in the previous condition.

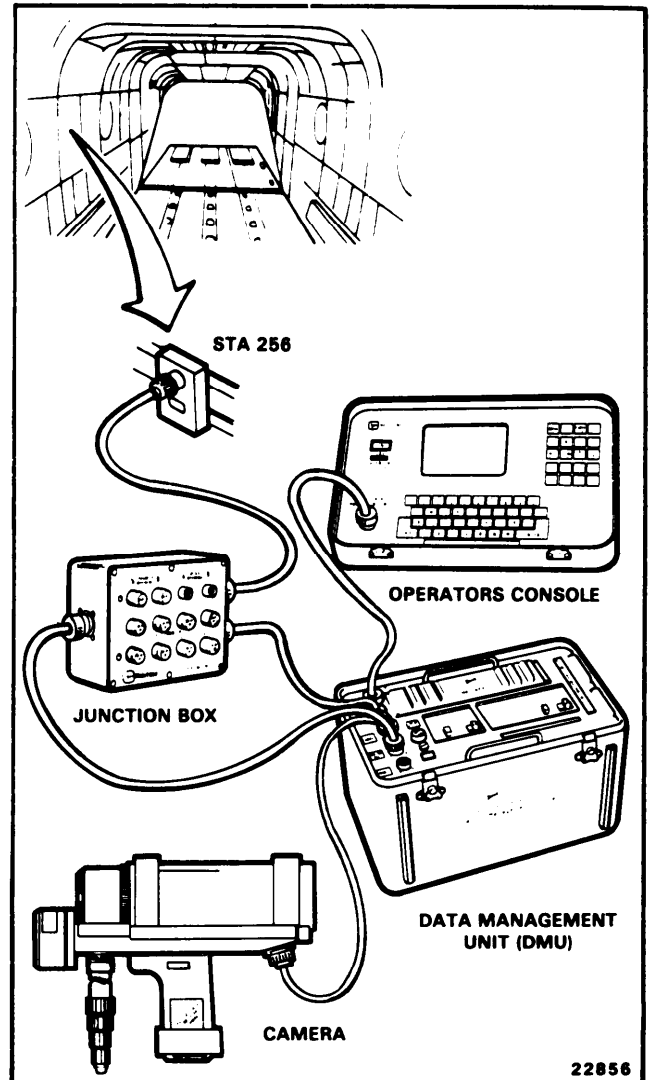

1. Have pilot start engines (TM 55-1520-240-10).
2. Before collecting forward flight data, perform an autorotation check in accordance with TM 55-1520-240-MTF.

**NOTE**



- If pitch link changes are made as a result of the autorotation check, recheck track and balance for ground and hover. Make adjustments if required.
- Text in *italics* denotes ROTORTUNER commands and prompts as they appear on the display screen.

GO TO NEXT PAGE

**NOTE**

If corrections were made do not press key F4, Resume current flight. This will overwrite data from last flight.

3. If no corrections have been made after hover track and balance go to step 5.
4. If corrections have been made from the hover data collected, proceed as follows:
  - a. Turn Rotortuner on (Task 5-147).
  - b. From the executive menu press key F1, *Collect data*.
  - c. Press key F1, *Start next flight (1)*.
  - d. Press key F1, *Enter current setting*.
  - e. Enter new forward and aft rotor setting.
  - f. Press key F8, *finish*.
  - g. Go to step 7 for automatic data collection and step 36 for manual data collection.
5. Press key F8, *Rotortuner executive menu*, then press key F1, *Collect data*.
6. Press key F4, *Resume current flight (2)*, on the collect data screen.

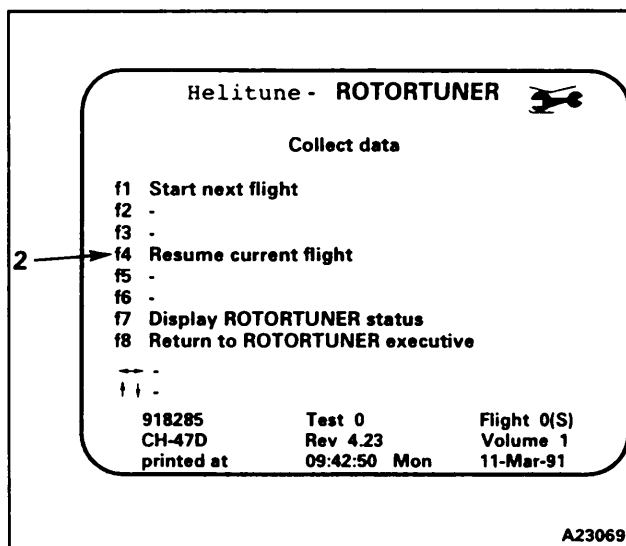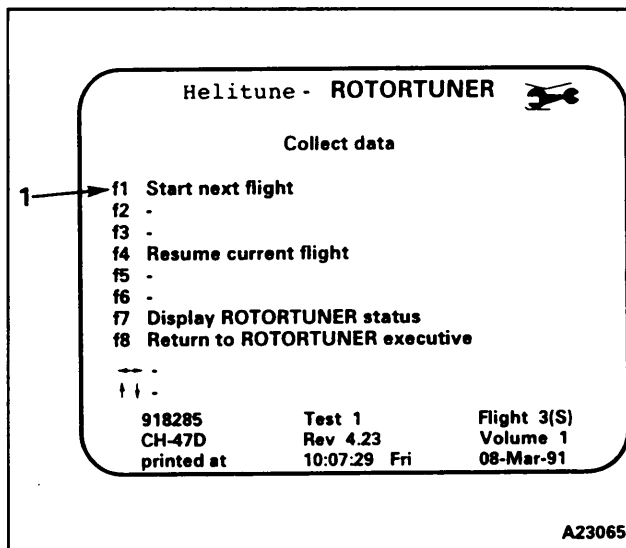


**NOTE**

The Rotortuner is capable of collecting data manually and automatically. For automatic data collection do steps 7 thru 35. For manual data collection do steps 36 thru 77.

**AUTOMATIC DATA COLLECTION.**


7. Press key F2, *Automatic data collection*.
8. Ensure that the 100 kts data collection condition is highlighted (3). If the 100 kts. condition is not highlighted use the cursor arrows to highlight.
9. Press key F1, *confirm*.
10. Press key F1, Display day camera data.

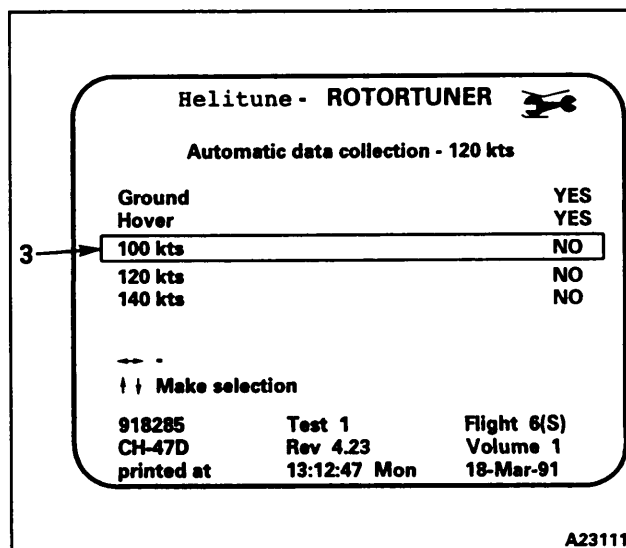


**AUTOMATIC FWD BLADE TRACKING**

**COLLECT DATA 100 KTS**

11. Proceed to the cockpit area with the camera and monopod. Extend the monopod (4) out two sections.
12. Rest the monopod on the floor just behind the center cockpit console (5).
13. Point the camera through the center windshield (6) towards the blade tip (7) path at the 12 o'clock position.

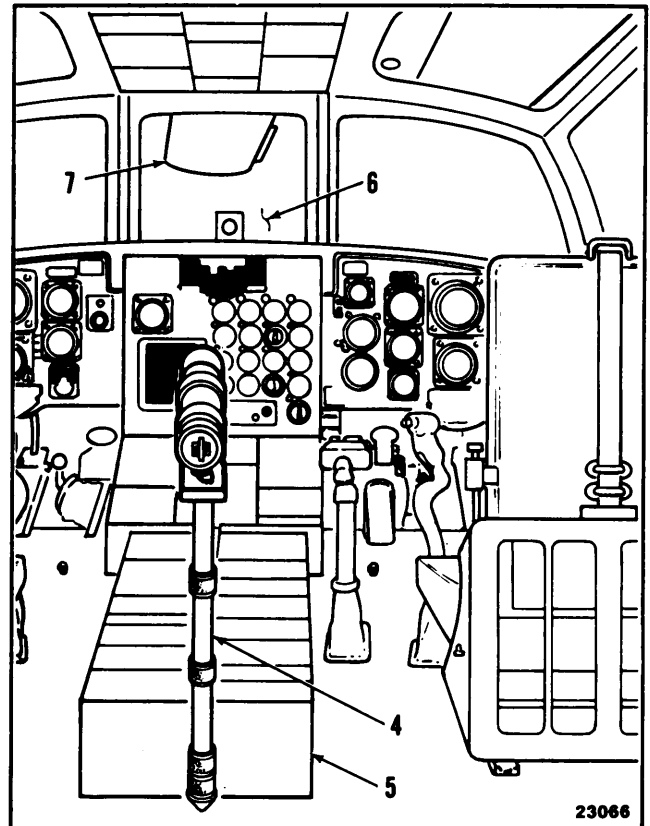

14. Tip the camera back and forth and watch the light emitting display (LED). As it stabilizes, a vertical column of light will be displayed on the bar graph. When it has locked onto the blades, the light will stop between the two white brackets. Track data is being collected at this time.
15. When the LED goes dark the forward track data collection procedure is complete.

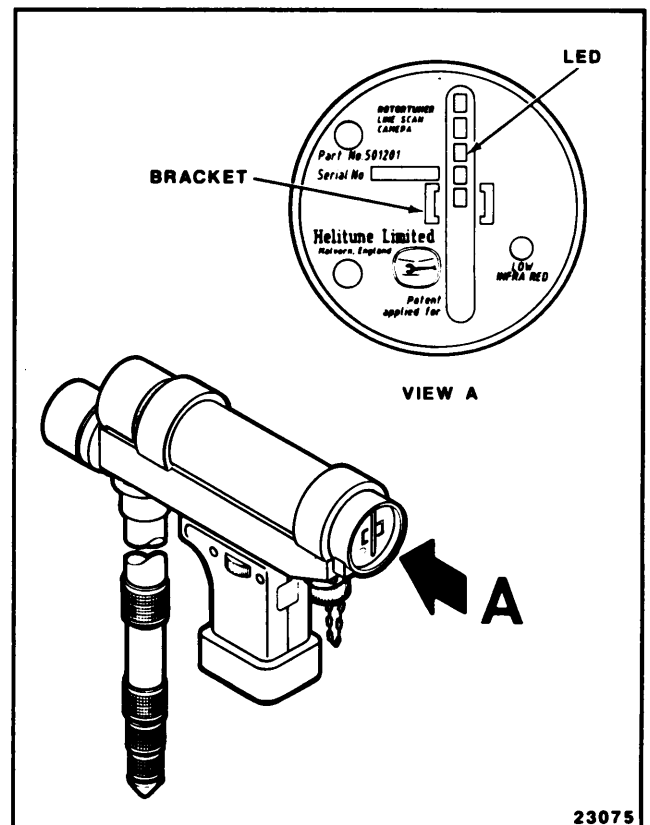


GO TO NEXT PAGE


**AUTOMATIC AFT BLADE TRACKING**

**COLLECT DATA 100 KTS**

16. Press key F1, *Display day camera data*. Data collection will begin.
17. Proceed to the rear of the aircraft to the left window (10) at station 460. Shorten the monopod (11) to one extended section.
18. Brace the monopod on the seat support tube (12) near the side wall. Point the camera looking through the window at the 9 o'clock position toward the blade tip (13) path.

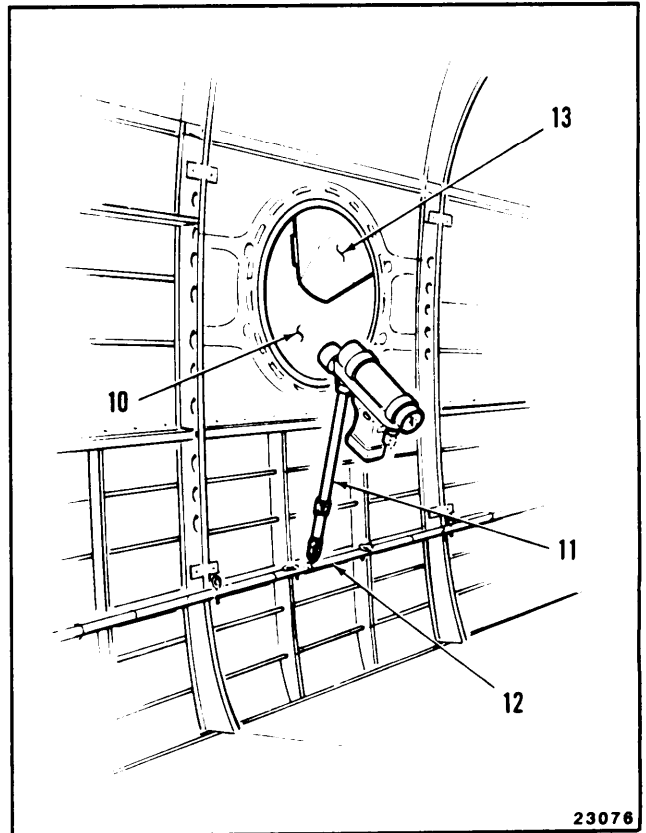


19. Tip the camera back and forth and watch the LED display. As it stabilizes a vertical column of light will be displayed on the bar graph. When it has locked onto the blades, the light will stop between the two white brackets. Track data is being collected at this time.
20. When the LED display goes dark the aft track data collection is complete.

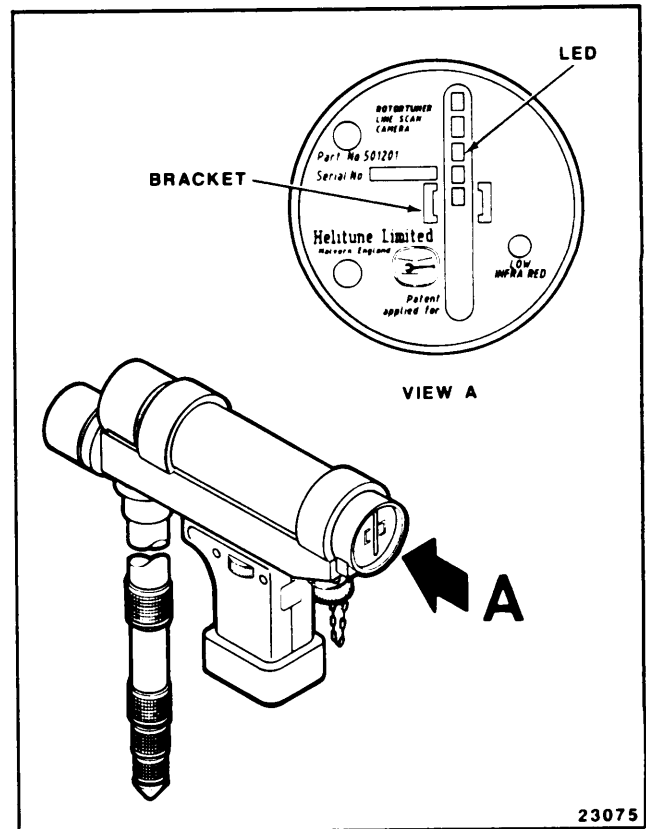

**NOTE**


The balance collection screen will appear and automatically collect balance data. When data collection is complete the automatic data collection screen will appear and the word YES (16) will appear next to the condition indicating that it is complete.

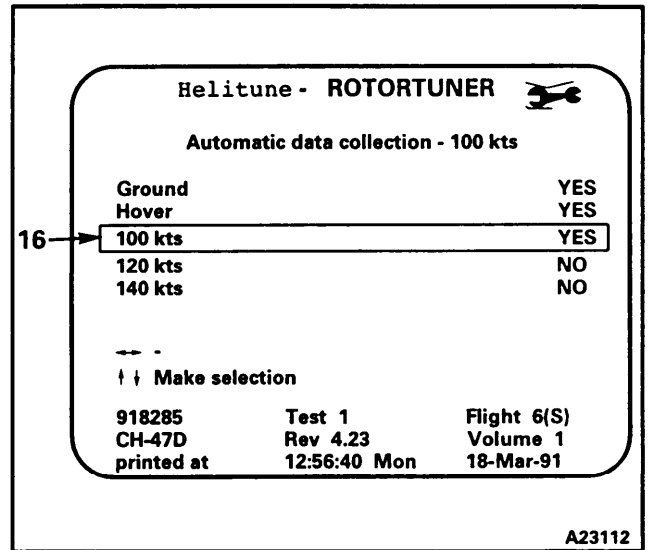

**AUTOMATIC FWD BLADE TRACKING**

**COLLECT DATA 120 KTS**

21. Ensure that the 120 kts data collection condition is highlighted (17). If the 120 kts condition is not highlighted use the cursor arrows to highlight.
22. Press key F1, *confirm*.
23. Press key F1, *Display day camera data*.
24. Repeat steps 11 through 15 for forward blade tracking.

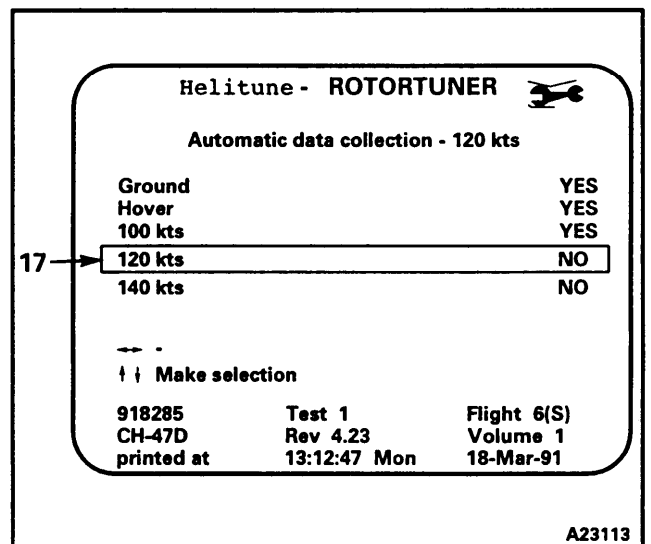


**AUTOMATIC AFT BLADE TRACKING**

**COLLECT DATA 120 KTS**

25. Repeat steps 21 through 23.
26. Repeat steps 16 through 20 for aft blade tracking.

**NOTE**

The balance collection screen will appear and automatically collect balance data. When data collection is complete the automatic data collection screen will appear and the word YES (18) will appear next to the condition indicating that it is complete.

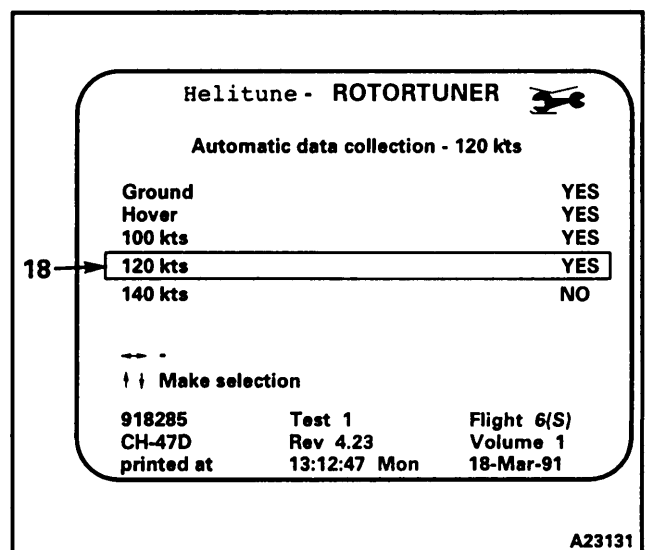

**AUTOMATIC FWD BLADE TRACKING**

**COLLECT DATA 140 KTS**

27. Ensure that the 140 kts data collection condition is highlighted (19). If the 140 kts condition is not highlighted use the cursor arrows to highlight.

28. Press key F1, *confirm*.

29. Press key F1, *Display day camera data*.

30. Repeat steps 11 through 15 for forward blade tracking.

**AUTOMATIC AFT BLADE TRACKING**

**COLLECT DATA 140 KTS**

31. Repeat steps 27 through 29.

32. Repeat steps 16 through 20 for aft blade tracking.



**NOTE**

The balance collection screen will appear and automatically collect balance data. When data collection is complete the automatic data collection screen will appear and the word YES (20) will appear next to the condition indicating that it is complete.

33. Press key F8, Finish viewing tracking trend.

34. Press key F8 again to return to Rotortuner executive menu.


35. Go to review forward track data step 77.

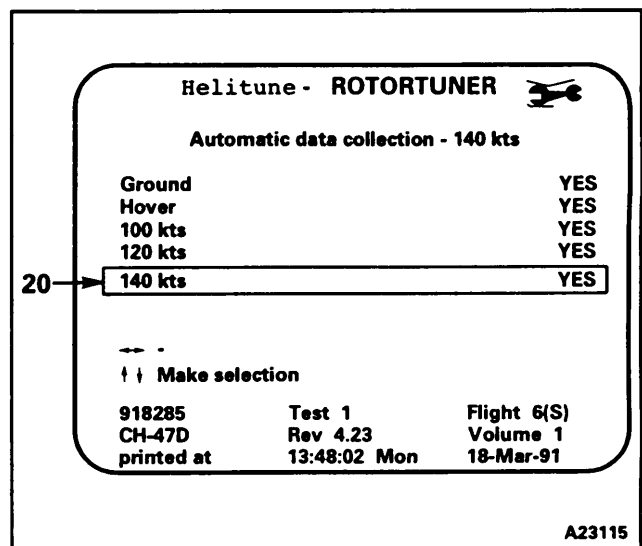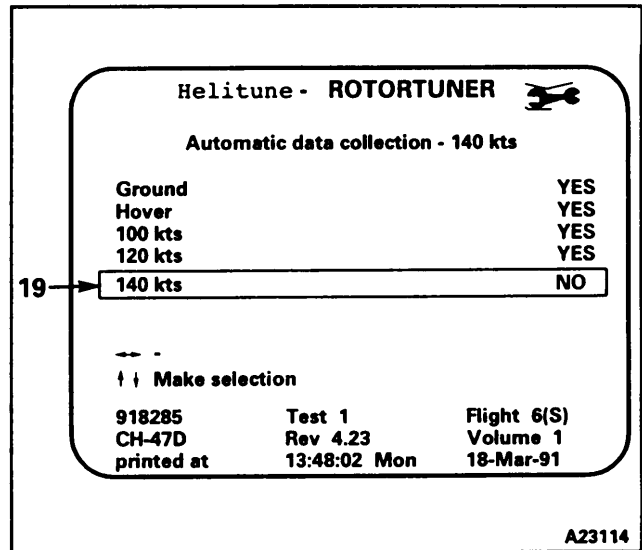

**MANUAL DATA COLLECTION**

- 36. Press key F4, *Manual data collection*.
- 37. Ensure that the *100 kts.* condition is high-lighted (21). If it is not highlighted use the cursor arrows (22) to cursor over to *100 kts.*

- 38. Move cursor to *Fwd. trk.*
- 39. Press key F1, *collect*.
- 40. To begin data collection press key F1, *Display day camera data* (23).

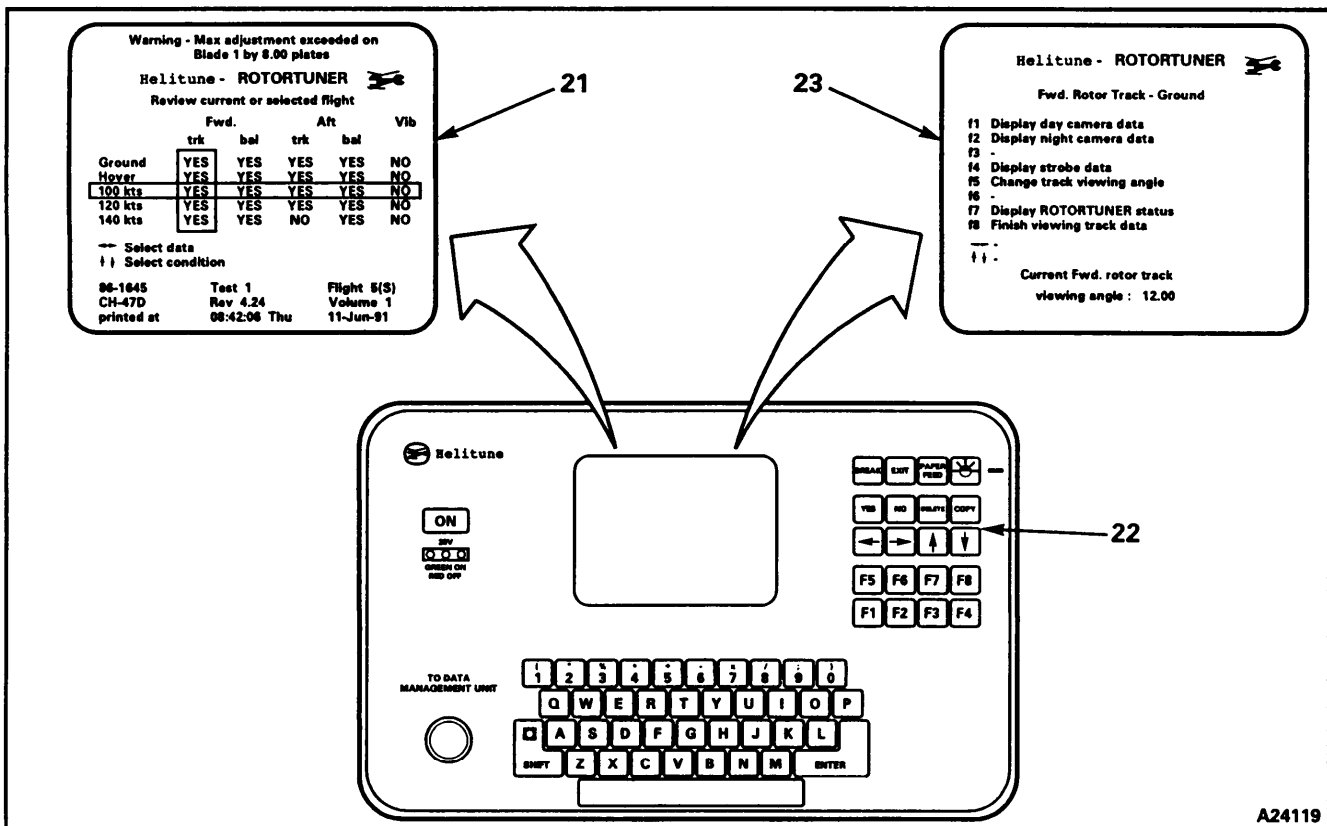


A24119


**MANUAL FWD BLADE TRACKING**

**COLLECT DATA 100 KTS**

41. Proceed to the cockpit area with the camera and monopod. Extend the monopod (24) out two sections.
42. Rest the monopod on the floor just behind the center cockpit console (25).
43. Point the camera through the center windshield (26) towards the blade tip (27) path at the 12 o'clock position.

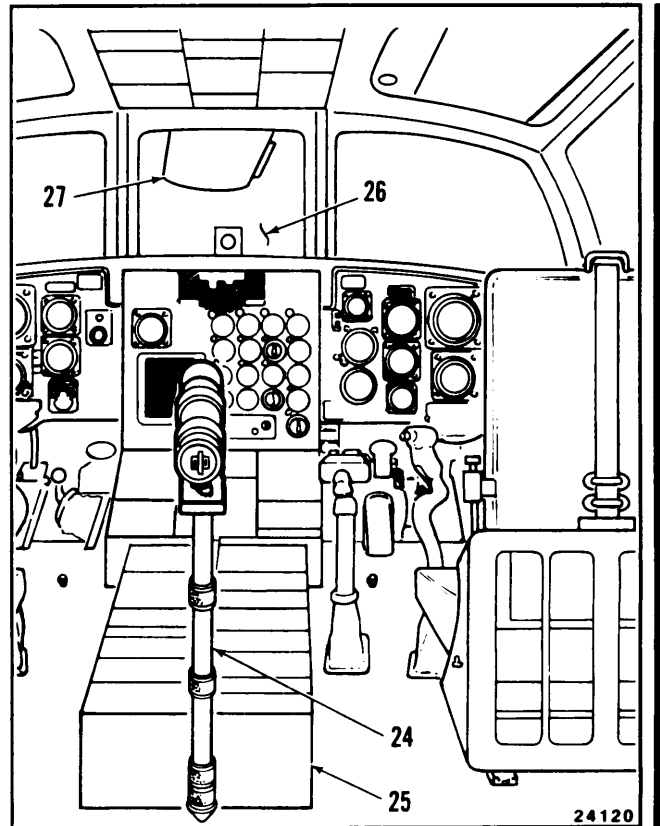

44. Tip the camera back and forth and watch the light emitting display (LED). As it stabilizes, a vertical column of light will be displayed on the bar graph. When it has locked onto the blades, the light will stop between the two white brackets. Track data is being collected at this time.
45. When the LED goes dark the forward track data collection procedure is complete.
46. The word *stored* will appear on the screen display. Press key F8, *finished*.

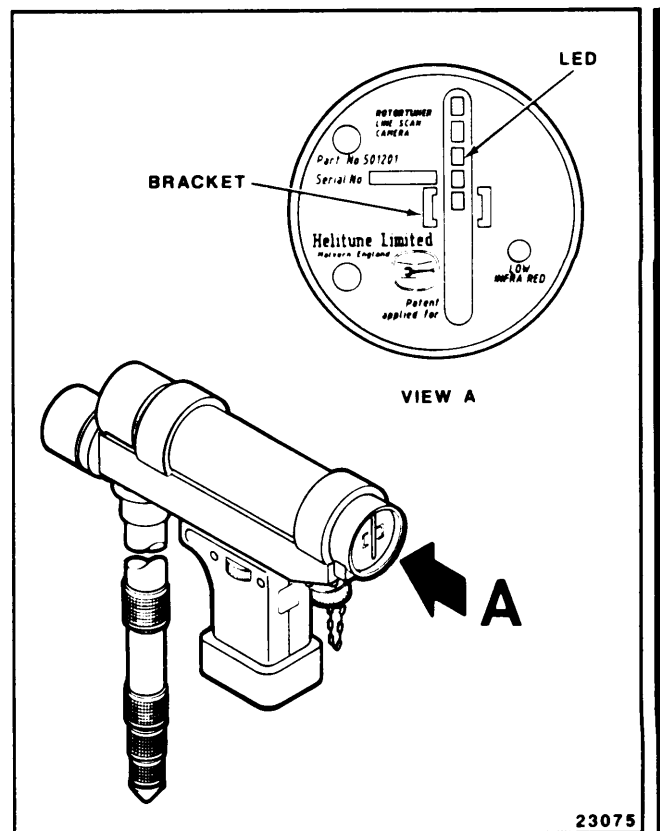




**MANUAL AFT BLADE TRACKING**


**COLLECT DATA 100 KTS**

- 47. Move cursor to *Aft trk.*
- 48. Press key F1, *collect.*
- 49. Press key F1, *Display day camera data.* Data collection will begin.
- 50. Proceed to the rear of the aircraft to the left window (30) at station 460. Shorten the monopod (31) to one extended section.
- 51. Brace the monopod on the seat support tube (32) near the side wall. Point the camera looking through the window at the 9 o'clock position toward the blade tip (33) path.

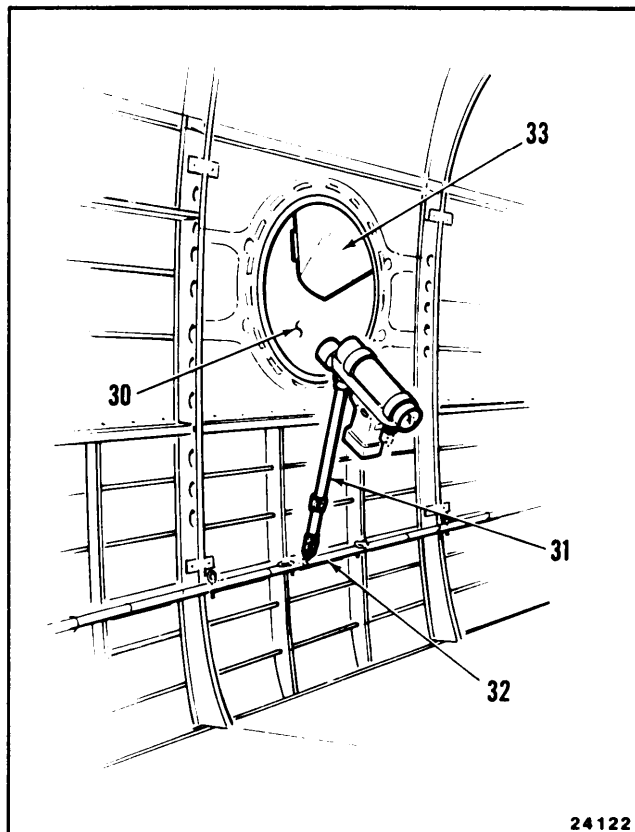

24122

- 52. Tip the camera back and forth and watch the LED display. As it stabilizes a vertical column of light will be displayed on the bar graph. When it has locked onto the blades, the light will stop between the two white brackets. Track data is being collected at this time.
- 53. When the LED display goes dark the aft track data collection is complete.
- 54. The word *stored* will appear on the screen display. Press key F8, *finish.*

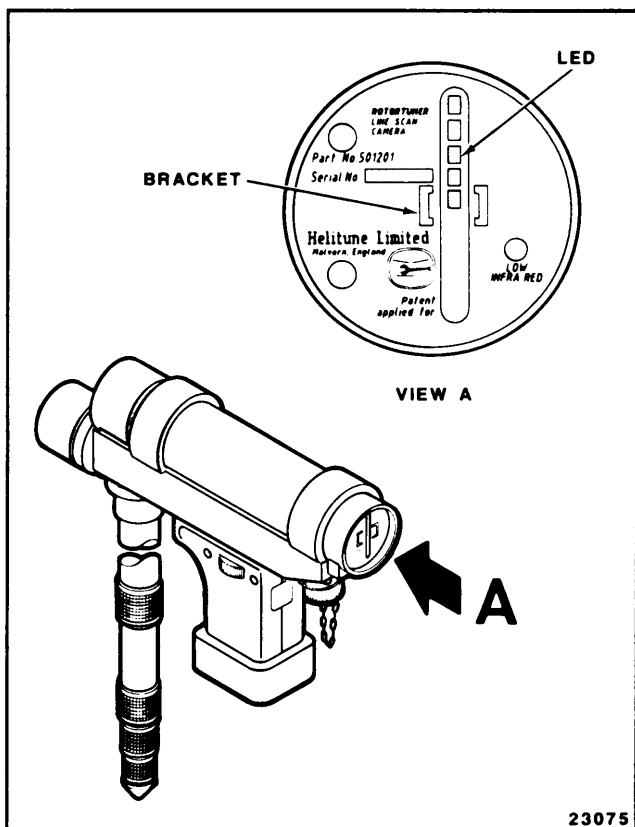

23075

**GO TO NEXT PAGE**


**MANUAL BALANCE DATA COLLECTION**

- 55. Use the arrows (36) on the function key pad to cursor over to *Fwd. bal 100 kts*.
- 56. Press key F1, *collect*.

**NOTE**

The balance chart (37) will appear on the screen display then the word *busy* (38) will appear while data is being collected.

- 57. When the data collection is complete the cursor (39) will appear on the balance chart.
- 58. Press key F8, *finish*.
- 59. Repeat steps 55 thru 57 for aft balance data collection, then go to step 60.

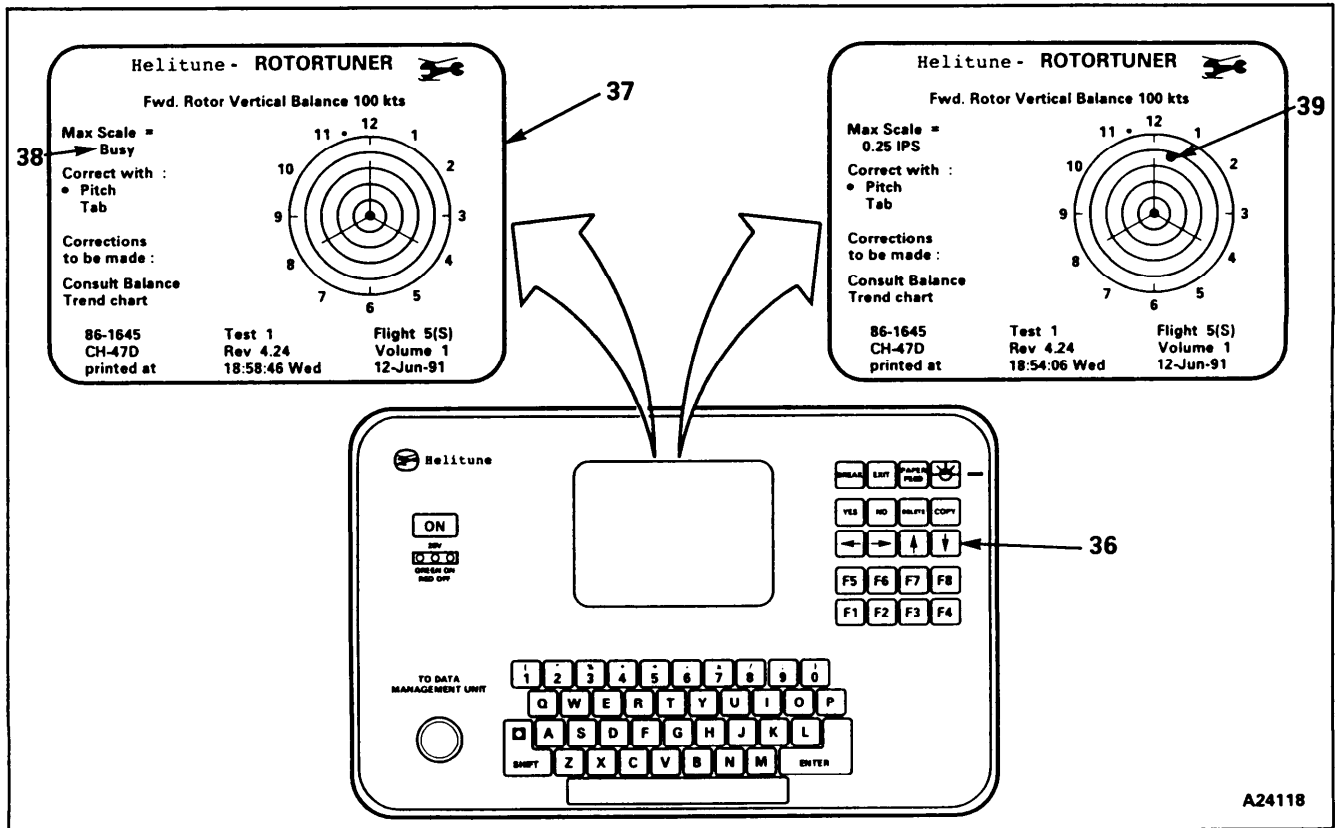

A24118

**MANUAL FWD BLADE TRACKING**

**COLLECT DATA 120 KTS**

- 60. Ensure that the 120 kt data collection condition is highlighted (40). If it is not highlighted use the cursor arrows to cursor over to 120 kts.
- 61. Move cursor to *Fwd. trk*.
- 62. Press key F1, *collect*.
- 63. Press key F1, *Display day camera data*.
- 64. Repeat steps 41 through 46 for forward blade tracking.

**Helitune - ROTORTUNER**

Review current or selected flight

	Fwd.		Aft		Vib
	trk	bal	trk	bal	
Ground	YES	YES	YES	YES	NO
Hover	YES	YES	YES	YES	NO
100 kts	YES	YES	YES	YES	NO
120 kts	YES	YES	YES	YES	NO
140 kts	YES	YES	YES	YES	NO

40 →

← Select data  
↑ ↓ Select condition

234567      Test 1      Flight 6(S)  
CH-47D      Rev 4.23      Volume 1  
printed at    14:24:57 Mon    18-Mar-91

A24114

**MANUAL AFT BLADE TRACKING**

**COLLECT DATA 120 KTS**

- 65. Repeat steps 47 through 54 for aft blade tracking.

**MANUAL BALANCE DATA COLLECTION**

- 66. Use the arrows on the function key pad to cursor over to *Fwd bal 120 kts* (41).
- 67. Do steps 56 thru 58 then go to forward blade tracking 140 knots condition.

**Helitune - ROTORTUNER**

Manual data collection

	Fwd.		Aft		Vib
	trk	bal	trk	bal	
Ground	YES	YES	YES	YES	NO
Hover	YES	YES	YES	YES	NO
100 kts	YES	YES	YES	YES	NO
120 kts	YES	YES	YES	YES	NO
140 kts	YES	YES	NO	YES	NO

41 →

← Select data  
↑ ↓ Select condition

86-1645      Test 1      Flight 5(S)  
CH-47D      Rev 4.24      Volume 1  
printed at    08:42:20 Tue    11-Jun-91

A24116

**MANUAL FWD BLADE TRACKING**

**COLLECT DATA 140 KTS**

68. Ensure that the 140 kt data collection condition is highlighted (42). If it is not highlighted use the cursor arrows to cursor over to 140 kts.

69. Move cursor to *Fwd. trk*.

70. Press key F1, *collect*.

71. Press key F1, *Display day camera data*.

72. Repeat steps 41 through 46 for forward blade tracking.

**MANUAL AFT BLADE TRACKING**

**COLLECT DATA 140 KTS**

73. Repeat steps 47 through 54 for aft blade tracking.

**MANUAL BALANCE DATA COLLECTION**

74. Use the arrows on the function key board to cursor over to *Fwd. bal* 140 kts (43).

75. Do steps 56 thru 57.

76. Press key F8, *finished*.

77. Press key F8, *executive*.

78. Then go to review forward flight track data step 79.

**Helitune - ROTORTUNER**

**Review current or selected flight**

	Fwd.		Aft		Vib
	trk	bal	trk	bal	
Ground	YES	YES	YES	YES	NO
Hover	YES	YES	YES	YES	NO
100 kts	YES	YES	YES	YES	NO
120 kts	YES	YES	YES	YES	NO
140 kts	YES	YES	YES	YES	NO

42 →

-- Select data  
↑ ↓ Select condition

234567                      Test 1                      Flight 6(S)  
CH-47D                      Rev 4.23                      Volume 1  
printed at                      14:24:57 Mon                      18-Mar-91

A24115

**Helitune - ROTORTUNER**

**Manual data collection**

	Fwd.		Aft		Vib
	trk	bal	trk	bal	
Ground	YES	YES	YES	YES	NO
Hover	YES	YES	YES	YES	NO
100 kts	YES	YES	YES	YES	NO
120 kts	YES	YES	YES	YES	NO
140 kts	YES	YES	NO	YES	NO

43 →

-- Select data  
↑ ↓ Select condition

86-1645                      Test 1                      Flight 5(S)  
CH-47D                      Rev 4.24                      Volume 1  
printed at                      08:42:42 Tue                      11-Jun-91

A24117



**REVIEW FORWARD FLIGHT TRACK DATA**

- 79. Press F2, *Review data and corrections.*
- 80. Press F1, *Review data and corrections.*
- 81. Using the cursor arrows, cursor to *Fwd trk* (44). Press key F1, *review.*
- 82. Press key F1, *Display trend for all blades.*


**NOTE**

To choose the master blade go to step 83 or to let the Rotortuner calculate the mean go to step 84.

- 83. Using the cursor arrows, cursor to the desired blade. Press key F1, *trend.*
- 84. To use the Rotortuner calculated mean press key F1, *trend.*
- 85. Press key F2, *Display tab correction chart.* Forward rotor blade 1 (45) should now be displayed. Use the up and down cursor arrows to move between blade 1 (Green), blade 2 (Yellow) and blade 3 (Red). Analyze the change of track from 100 kts through 140 kts for each blade. If the out of track condition of the blade is less than 1 inch, then no correction is needed.

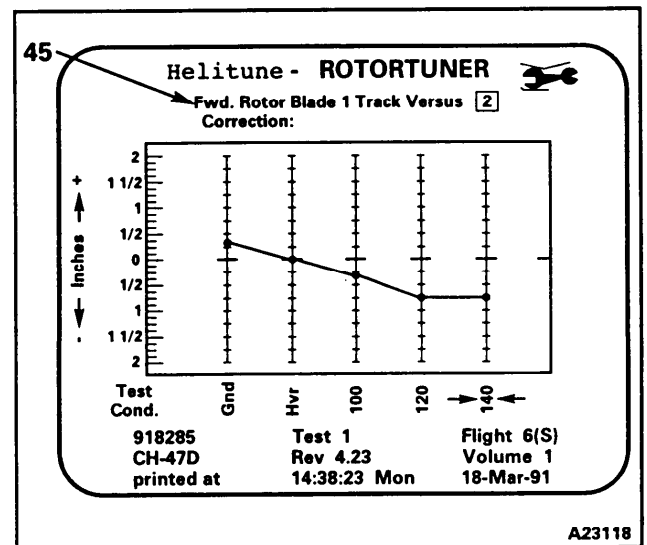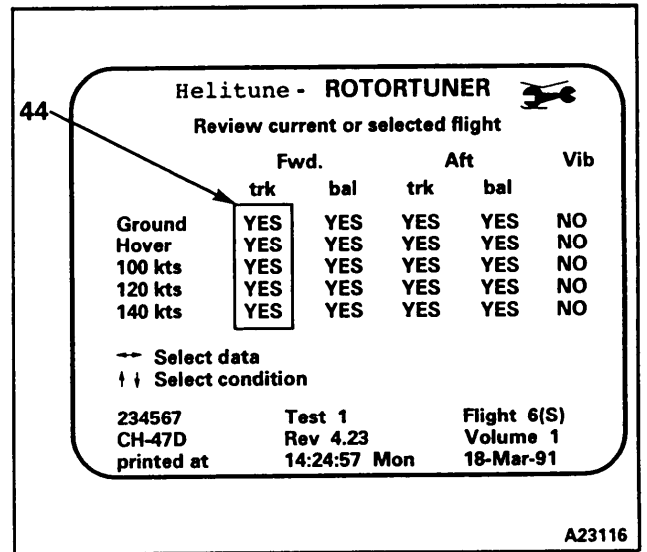

- 86. If the out of track condition of the blade is 1 inch or more, then cursor with the left or right cursor arrows to the 140 kts condition. Press F6, Corrections, The correction will appear at the top of the screen (46). Press COPY to save a record of the correction. Enter data on CH-47D ROTORTUNER SETTINGS AND ADJUSTMENT RECORD.
- 87. If the recommended correction from the Rotortuner for any of the blades is 1 degree or greater do steps 125 through 127.
- 88. Press key F8, *finish.*

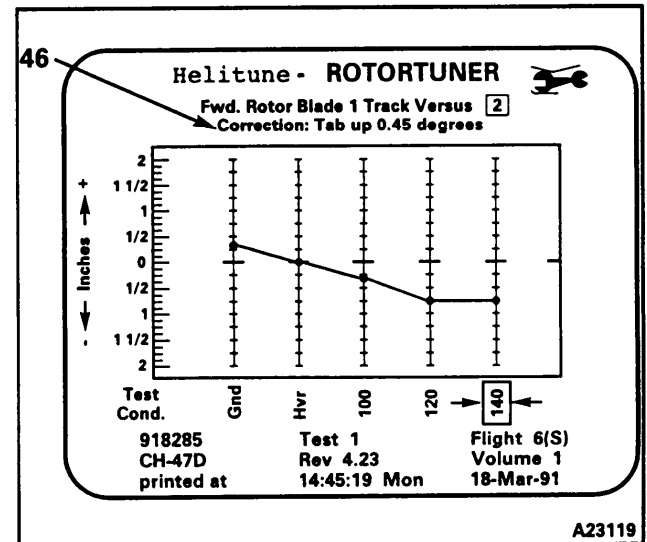

**REVIEW AFT FLIGHT TRACK DATA**

89. Using the cursor arrows, cursor to Aft trk (47). Press key F1, *review*.


**NOTE**

To choose the master blade go to step 91 or to let the Rotortuner calculate the mean go to step 92.

90. Press key F1, *Display trend* for all blades.


91. Using the cursor arrows cursor to the desired blade. Press key F1, *trend*.

92. To use the Rotortuner calculated mean press key F1 *trend*.

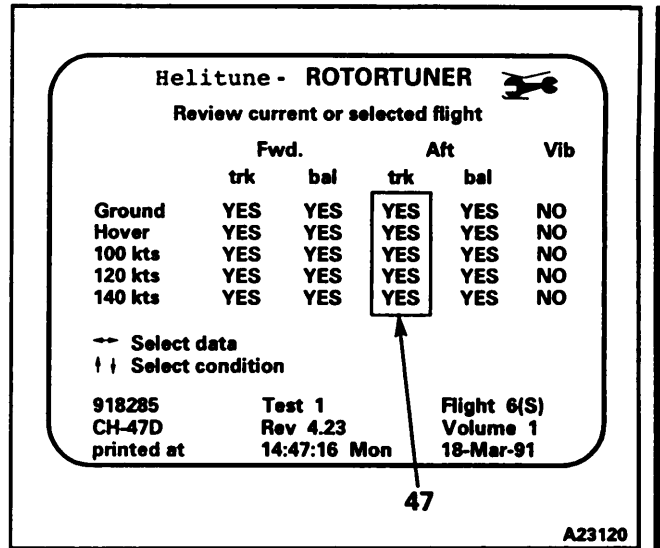


93. Press key F2, *Display tab correction chart*.

94. Aft Rotor Blade 1 Track Versus, should now be displayed (48). Use the up and down cursor arrows to move between blade 1 (Green), blade 2 (Yellow) and blade 3 (Red). Analyze the change of track from 100 kts through 140 kts for each blade. If the out of track condition is less than 1 inch, no correction is needed.

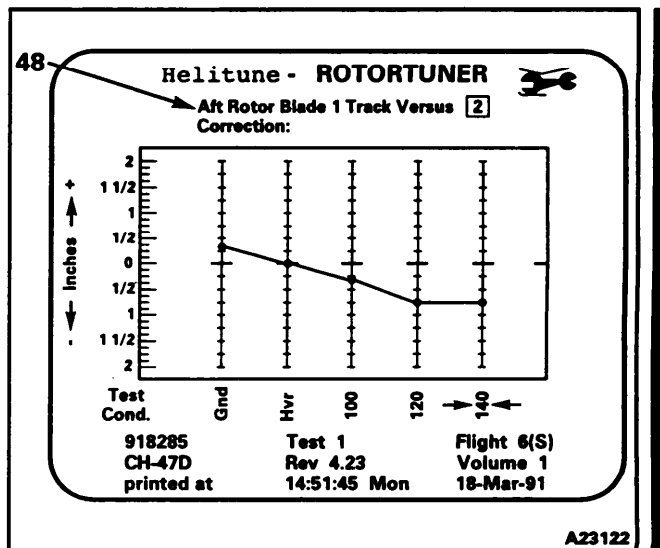

95. If the out of track condition of the blade is 1 inch or more then cursor with left or right arrows to the 140 kts condition. Press F6, *correction*. The corrections will appear at the top of the screen (49). Press COPY to save a record of the corrections. Enter data on CH-47D ROTORTUNER SETTINGS AND ADJUSTMENT RECORD.

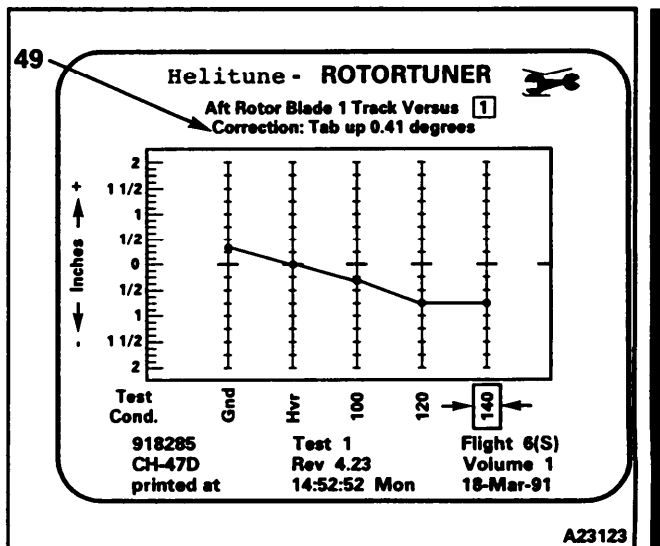

**NOTE**

If trim tab changes are made to the forward or aft rotor blades as a result of the in-flight tracking procedure, then perform another track and balance for ground, hover, and in-flight.

96. If the recommended corrections from the Rotortuner for any of the blades are 1 degree or greater do steps 125 through 127.

97. Press key F8, finish.

**REVIEW FORWARD FLIGHT VERTICAL BALANCE DATA**

98. Using the cursor arrows, cursor to *Fwd. bal* (50). Press key F1, *review*.

99. If the vertical balance is below .25 IPS for 140 kts, or below .20 IPS for 100 kts and 120 kts, no corrections are required.

100. If the vertical balance is above .25 IPS for 140 kts, or above .20 IPS for 100 kts and 120 kts (51), press key F6, *correction*.

**Helitune - ROTORTUNER**

Review current or selected flight

	Fwd.		Aft		Vib
	trk	bal	trk	bal	
Ground	YES	YES	YES	YES	NO
Hover	YES	YES	YES	YES	NO
100 kts	YES	YES	YES	YES	NO
120 kts	YES	YES	YES	YES	NO
140 kts	YES	YES	YES	YES	NO

-- Select data  
↑↓ Select condition

918285	Test 1	Flight 6(S)
CH-47D	Rev 4.23	Volume 1
printed at	15:08:58 Mon	18-Mar-91

A23124

**Helitune - ROTORTUNER**

Fwd. Rotor Vertical Balance Trend

Max Scale = 0.50 IPS

Correct with :  
• Pitch Tab


To Correct Balance :

Place Cursor on "2" balance point

918285	Test 1	Flight 6(S)
CH-47D	Rev 4.23	Volume 1
printed at	15:12:37 Mon	18-Mar-91


A23125

101. Select adjustment (52) by pressing key F2, *Pitch*.
102. Press key F4, *Vertical and lateral corrections*.
103. Press COPY to save a record of the corrections and record weight changes on LATERAL BALANCE WORKING SHEET. Record the results of the LATERAL BALANCE WORKING SHEET and the recommended pitch link changes on the CH-47D ROTOR TUNER SETTINGS AND ADJUSTMENT RECORDS.
104. Press key F8, *finish*.

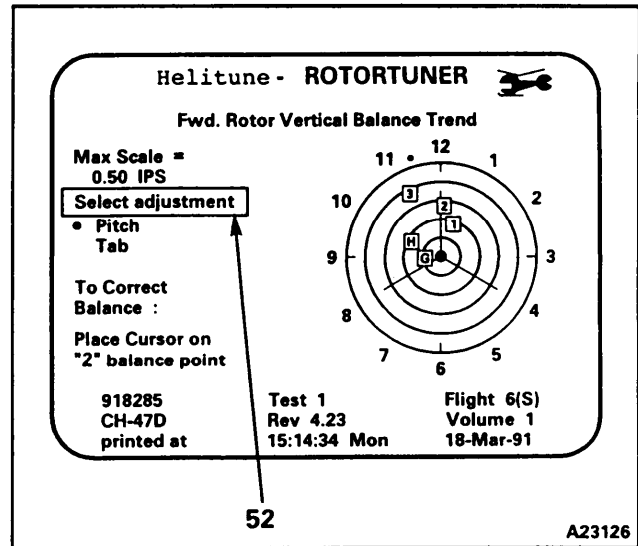


**REVIEW AFT FLIGHT VERTICAL BALANCE DATA**

105. Using the cursor arrows cursor to *Aft bal.* (53). Press key F1, *review*.
106. If the vertical balance is below .25 IPS for 140 kts or below .20 IPS for 100 kts and 120 kts, no corrections are required.
107. If the vertical balance is above .25 IPS for 140 kts or above .20 IPS for 100 kts and 120 kts, cursor to Aft bal and repeat steps 101 through 104.

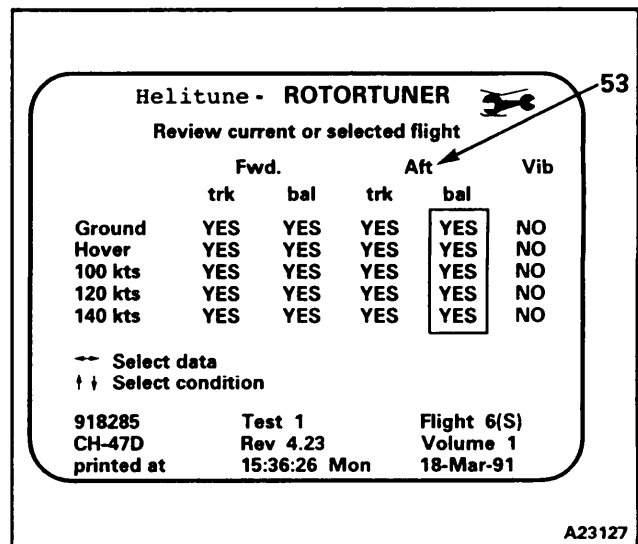

108. If the Rotortuner recommended corrections are less than 2 marks for the forward and aft rotor head, then go to Lateral balance review.
109. If the Rotortuner recommended corrections are 2 marks or greater for the forward and aft rotor head (54), adjust pitch links (Task 5-94).
110. If any corrections were made to the forward and aft rotor heads due to vertical balance, perform another track and balance for ground, hover, and forward flight.

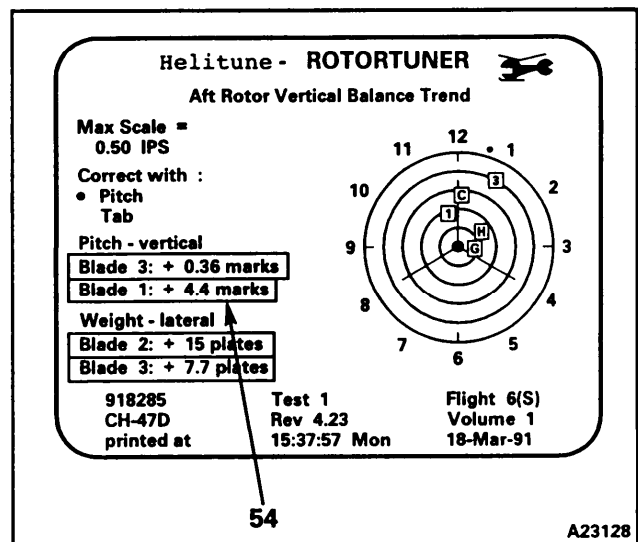



**REVIEW FORWARD FLIGHT LATERAL BALANCE DATA**

- 111. Using the cursor arrows, cursor to Fwd bal. Press key F1, *review*.
- 112. Press key F2, *lateral*.
- 113. If the lateral balance is below .2 IPS for 100 kts, 120 kts and 140 kts, no corrections are required.
- 114. If the lateral balance is above .2 IPS (55) for 100 kts, 120 kts and 140 kts, press key F6, correction.
- 115. Press COPY to save a record of corrections and record data on LATERAL BALANCE WORKING SHEET. Enter results from the LATERAL BALANCE WORKING SHEET on the CH47D ROTORTUNER SETTINGS AND ADJUSTMENT RECORDS.



116. Press key F8, *finish*.

**REVIEW AFT FLIGHT LATERAL BALANCE DATA**

- 117. Using the cursor arrows, cursor to Aft bal. Press key F1, *review*.
- 118. Press key F2, *lateral*.
- 119. If the lateral balance is below .2 IPS for 100 kts, 120 kts and 140 kts, no corrections are required.
- 120. If the lateral balance is above .2 IPS (56) for 100 kts, 120 kts and 140 kts, press F6, correction and repeat steps 115 and 116.
- 121. If the Rotortuner recommends changes for the lateral balance of the forward and aft rotor heads, do steps 126 and 127.
- 122. If lateral balance changes were made, collect forward flight track and balance data again.

**POST TRACK AND BALANCE ADJUSTMENTS**

- 123. Repeat and verify autorotation in accordance with TM 55-1520-240-MTF. If changes are made to the pitch links as a result of autorotation, perform track and balance procedure for ground, hover, and forward flight.
- 124. For trim tab bends 2 degrees or greater, make a compensating pitch link change in the opposite direction of the trim tab bend (1 mark equals 1 degree).
- 125. Bend trim tabs as directed in task 5-75.1.

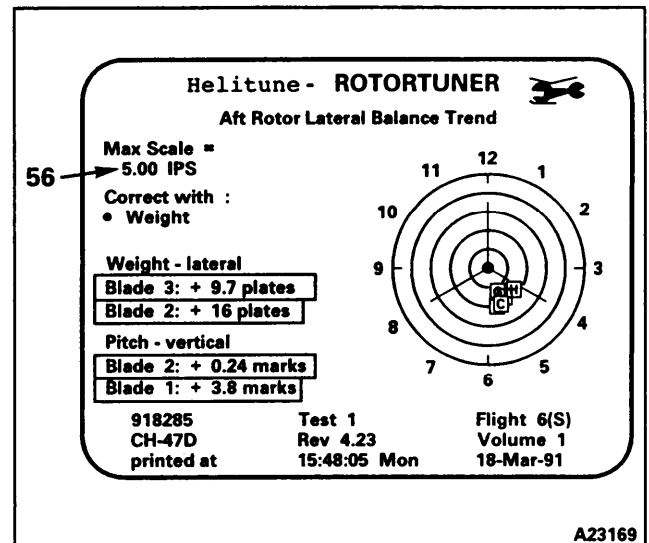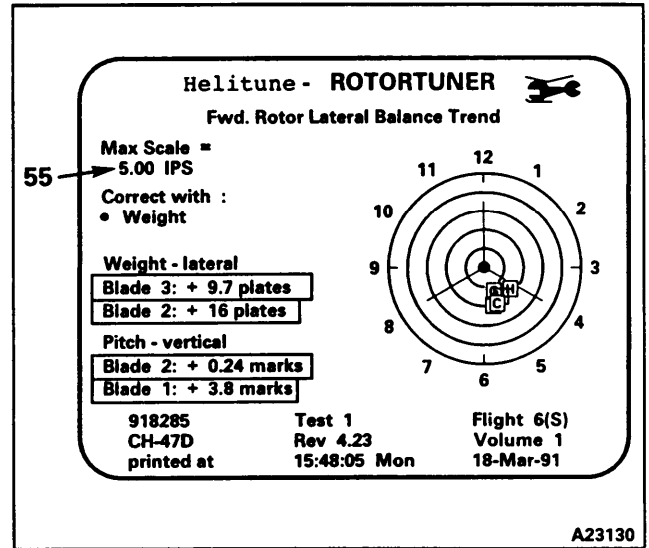


**ADJUST BALANCING WEIGHTS****WARNING**

- Do not install more than 10 weights on a blade. Too many weights can cause damage to equipment and injury to personnel.
- Do not adjust weights on wrong blade.
- Levels can be incorrect. Damage to equipment and injury to personnel could result.

126. Determine weight changes and adjust balancing weights as follows:
- Identify 1, 2 or 3 blade (57 thru 62) on which weights are to be adjusted.
  - Remove lockwire. Remove four socket head screws (63) and washers (64) from tip cover (65).
  - Remove tip cover (65).
  - Remove four nuts (66) and washers (67).

**NOTE**

- If lateral balance trend display shows to add more weights than is allowed, use lateral balance worksheet to get final settings.
  - If the number of weights to be removed from a blade is greater than the number of weights installed, remove all the weights from the heavy blade. The remaining number must be added to each of the other blades. To fine tune lateral vibrations. Halfblade weights may be cut lengthwise and secure with 2 of the 4 screws on the tip cap.
- Remove and install weights (68) as needed. Record all blade weight changes on the CH-47D ROTORTUNER SETTINGS AND ADJUSTMENT RECORDS.
  - Install washers (67) and nuts (66). Torque nuts to 60 inch-pounds.
  - Install tip cover (65).
  - Install four socket head screws (63) and washers (64). Torque screws to 175 inch-pounds.

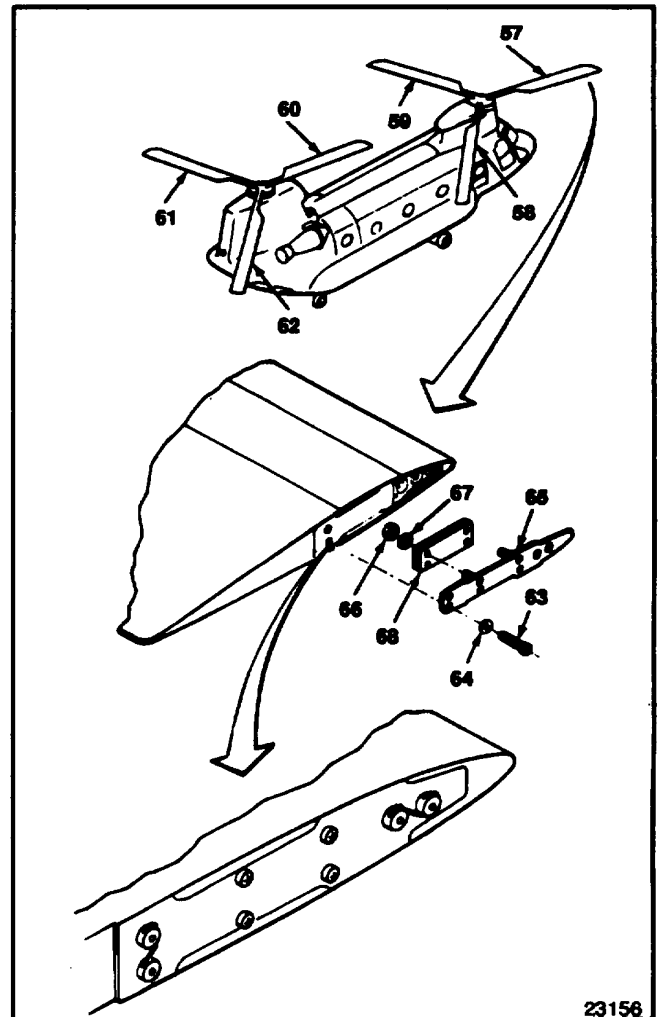**GO TO NEXT PAGE**

- Remove four nuts (66) and washers (67).
  - Lockwire screws (63). Use lockwire (E233).
127. If any corrections have been made to the balance weights, repeat ground, hover, and forward flight balance. Use the 1 IPS and .7 IPS balance limit from ground, hover, and forward flight. Remove and install weights (68) as needed. Record all blade weight changes on CH47D ROTOR-TUNER SETTINGS AND ADJUSTMENT RECORDS.


**NOTE**

All blade repairs, weight adjustment, painting, or balancing will be recorded on rotor blade DA Form 2408-16, each blade requires a separate form. If the rotor blade does not have a DA Form 2408-16, one must be prepared and all actions recorded, as example; location of repair, size of repair, weight of repair, and required weight adjustments for track and balance.

LATERAL BALANCE WORKING SHEET


**FORWARD ROTOR**

WEIGHT CONFIGURATION	( 1 ) GREEN	( 2 ) YELLOW	( 3 ) RED
1) ORIGINAL			
2) ROTORTUNER CHANGE			
3) ADD ( 1 ) + ( 2 )			
4) SUBTRACT SMALLEST OF ( 3 ) IF ANY VALUE IS GREATER THAN 10 WTS			
5) RESULT			
6) SUBTRACT FROM ( 5 ) AMOUNT ABOVE 10 WTS			
7) FINAL SETTING			

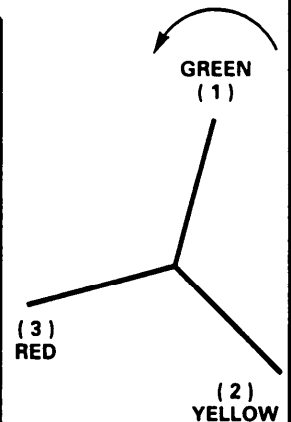

**AFT ROTOR**

WEIGHT CONFIGURATION	( 1 ) GREEN	( 2 ) YELLOW	( 3 ) RED
1) ORIGINAL			
2) ROTORTUNER CHANGE			
3) ADD ( 1 ) + ( 2 )			
4) SUBTRACT SMALLEST OF ( 3 ) IF ANY VALUE IS GREATER THAN 10 WTS			
5) RESULT			
6) SUBTRACT FROM ( 5 ) AMOUNT ABOVE 10 WTS			
7) FINAL SETTING			

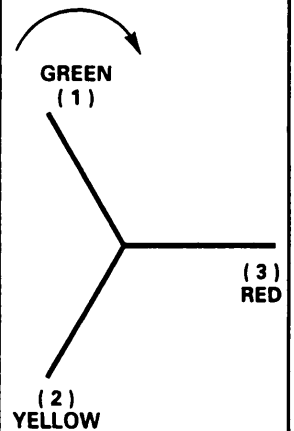

A23067

**5-150 IN FLIGHT TRACK AND BALANCE (ROTORTUNER) (Continued) 5-150**

**CH-47D ROTORTUNER SETTINGS AND ADJUSTMENT RECORDS**

A/C No. \_\_\_\_\_ TOTAL A/C HOURS \_\_\_\_\_


DATE \_\_\_\_\_

TEST \_\_\_\_\_ FLIGHT \_\_\_\_\_ (Record Test And Flight Nos. On Which Adjustment Figures Are Based)

**FORWARD ROTOR**

BLADE	WEIGHT			PITCH LINK			TAB		
	CURRENT	CHANGE	TOTAL	CURRENT	CHANGE	TOTAL	CURRENT	CHANGE	TOTAL
1 (GREEN)									
2 (YELLOW)									
3 (RED)									

SUGGEST MAINTENANCE CHECK/ACTIONS:

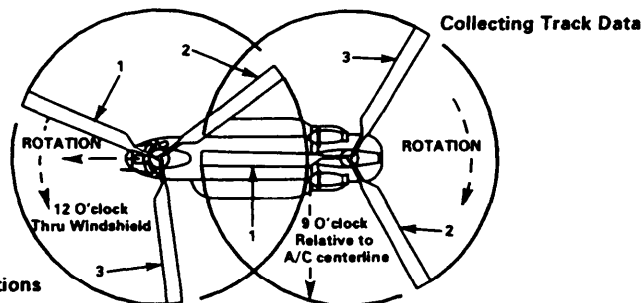

**AFT ROTOR**

BLADE	WEIGHT			PITCH LINK			TAB		
	CURRENT	CHANGE	TOTAL	CURRENT	CHANGE	TOTAL	CURRENT	CHANGE	TOTAL
1 (GREEN)									
2 (YELLOW)									
3 (RED)									

SUGGESTED MAINTENANCE CHECK/ACTIONS:

A23063

**INSPECT**

FOLLOW ON MAINTENANCE:

Remove Track and Balance Equipment (Rotor-tuner) (Task 5-151).

**END OF TASK**

5-151 REMOVE ROTORTUNER TRACK AND BALANCE EQUIPMENT

INITIAL SETUP

**Applicable Configurations:**

All

**Tools:**

Aircraft Mechanic's Tool Kit,  
NSN 5180-00-323-4692

**Materials:**


None

**Personnel Required:**


Medium Helicopter Repairer (2)

**Equipment Condition:**


Battery Disconnected (Task 1-39)  
Electrical Power Off  
Hydraulic Power Off  
Forward and Aft Pylon Work Platform Open  
(Task 2-2)

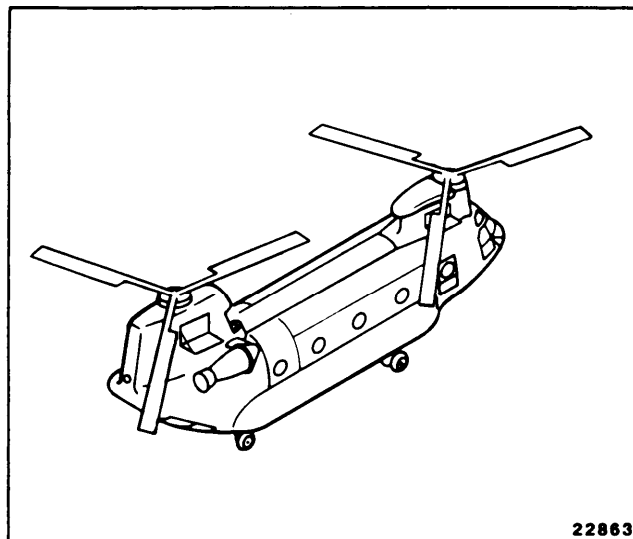


1. Disconnect plug (1) from forward accelerometer (2), Install plug on dummy connector (3). Remove two screws (4). Remove accelerometer block.

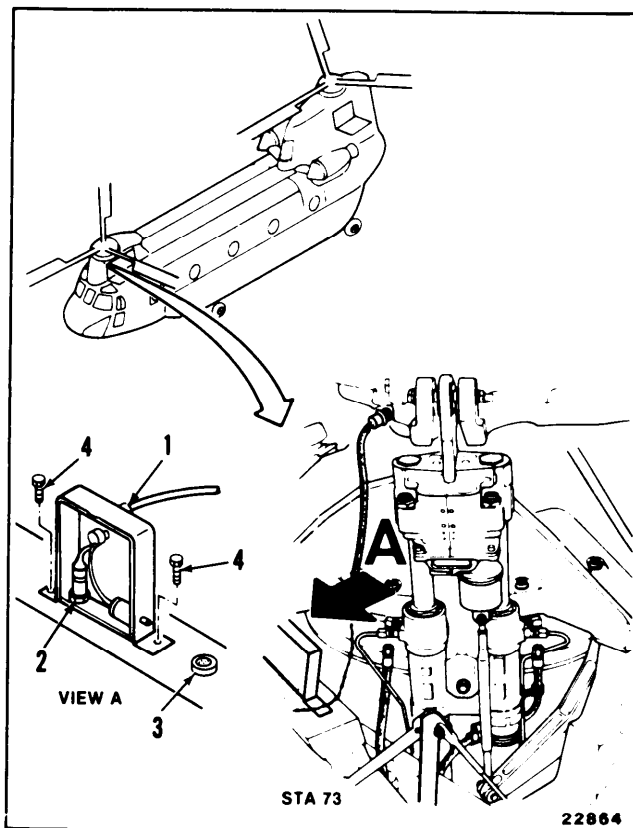

2. Disconnect plug (5) from aft accelerometer (6). Install plug on dummy connector (7). Remove two screws (8). Remove accelerometer block.

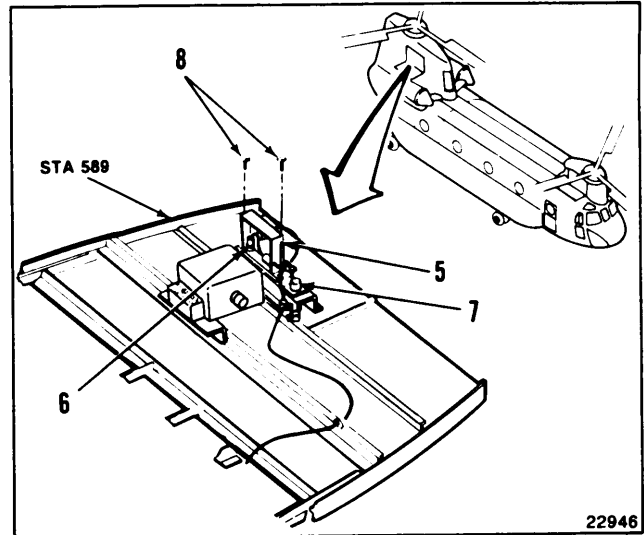

3. Disassemble Rotortuner as follows:
  - a. Disconnect 28v DC power cable connectors (9) from junction box (10) then from blade track receptacle (11) at station 256.
  - b. Disconnect cable connectors (12) from junction box (10) and DMU (13).
  - c. Disconnect cable connectors (14) from junction box (10) and DMU (13).
  - d. Disconnect cable connectors (15) from camera (16) and DMU (13).
  - e. Disconnect cable connectors (17) from operators console (18) and DMU (13).
  - f. Install operators console (18) on DMU (13).

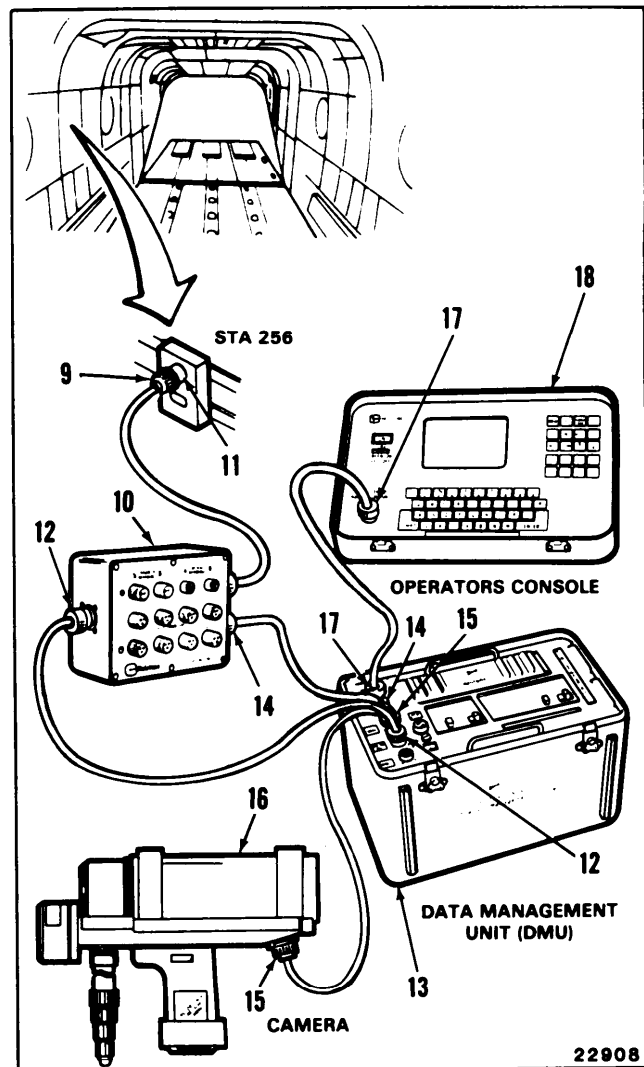

**5-151 REMOVE ROTORTUNER TRACK AND BALANCE EQUIPMENT**  
**(Continued)**


**5-151**

4. Replace cables (19), four screws (4 and 8), camera (16) and junction box (10) in Rotor-tuner accessory set (20). Return accelerometer blocks (2 and 6) to Strobex/Vibrex accessory set.

**INSPECT**

**FOLLOW ON MAINTENANCE**

Close Work Platforms (Task 2-2).

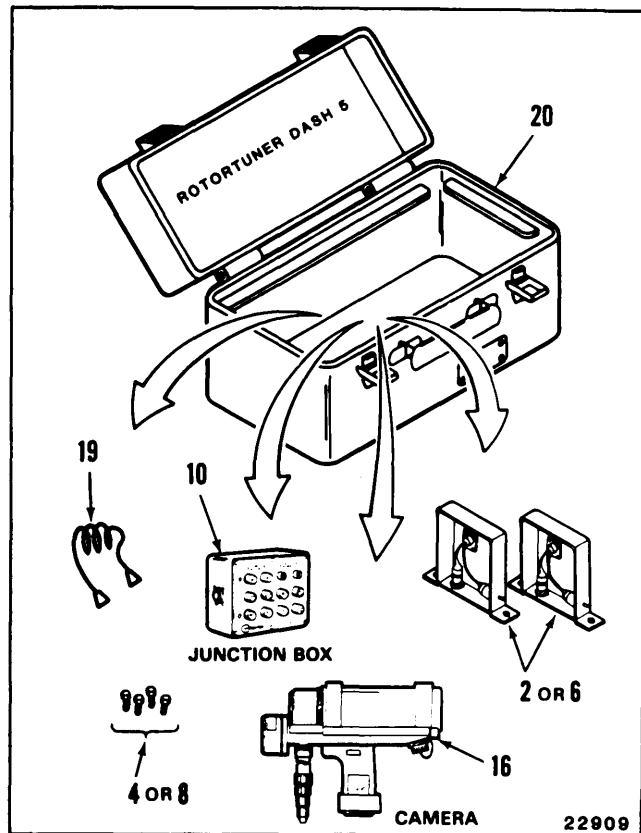

	<i>Task</i>	<i>Page</i>
Cover and Wire Harness, Solenoid		
Install . . . . .	16-16	16-47
Remove . . . . .	16-15	16-45
Disassemble and inspect (AVIM) . . . . .	16-24	16-62
Inserts, Threaded		
Install (AVIM) . . . . .	16-26	16-76
Remove (AVIM) . . . . .	16-25	16-74
Inspect . . . . .	16-11	16-37
Install . . . . .	16-31	16-110
Keeper		
Install . . . . .	16-22	16-54
Remove . . . . .	16-21	16-53
Remove . . . . .	16-23	16-56
Switches		
Adjust (AVIM) . . . . .	16-28	16-94
Test		
Functional (AVIM) . . . . .	16-29	16-102
Watertightness . . . . .	16-12	16-40
Watertightness (AVIM) . . . . .	16-30	16-107
Window, Inspection		
Install . . . . .	16-20	16-52
Remove . . . . .	16-19	16-51
Cargo Ramp — See Ramp, Cargo		
Cargo Ramp Extension		
Assemble . . . . .	2-243	2-636
Disassemble . . . . .	2-241	2-631
Hinge		
Install . . . . .	2-240	2-629
Remove . . . . .	2-239	2-627
Install . . . . .	2-244	2-638
Remove . . . . .	2-238	2-625
Repair . . . . .	2-242	2-632
Cartridge (Squib), Fire Extinguisher 892868-02		
Install . . . . .	12-31	12-68
Remove . . . . .	12-29	12-64
Test . . . . .	12-25	12-56
Cartridge (Squib), Fire Extinguisher 30402103		
Install . . . . .	12-30	12-66
Remove . . . . .	12-28	12-62
Test . . . . .	12-25	12-56
Cell, Fuel		
Aft Tank		
Install . . . . .	10-30	10-105
Remove . . . . .	10-29	10-100
Cleaning . . . . .	10-8	10-38
Damage Classification and Repair Limits . . . . .	10-10	10-40



	<b>Task</b>	<b>Page</b>
Forward Tank		
Install . . . . .	10-25	10-81
Remove . . . . .	10-24	10-77
Inspect Before installation . . . . .	10-19	10-52
Main Tank		
Install . . . . .	10-20	10-55
Remove . . . . .	10-7	10-33
Precautionary Criteria . . . . .	10-9	10-39
Preservicing . . . . .	10-18	10-51
Repair (Exterior Seam) . . . . .	10-13	10-43
Repair (Fitting Flange) . . . . .	10-14	10-44
Repair (Interior Cold Patch) . . . . .	10-15	10-45
Repair (Interior Seam) . . . . .	10-12	10-42
Repair (Outer Coating) . . . . .	10-11	10-41
Test		
Chemical . . . . .	10-16	10-46
Soap Suds . . . . .	10-17	10-49
Center Cargo Hook — See Cargo Hook, Center		
Center Windshield, Mixed Installation		
Install . . . . .	2-53	2-211
Remove . . . . .	2-52	2-209
Centrifugal Droop Stops — See Droop Stops, Centrifugal		
Chain and Wire Rope, Cargo Door — See		
Cargo Door Chain and Wire Rope		
Chains, Winch Clutch and Roller		
Clean and Inspect (AVIM) . . . . .	14-6	14-17
Install (AVIM) . . . . .	14-8	14-20
Remove (AVIM) . . . . .	14-5	14-15
Charger, Battery — See Battery Charger		
Check and Repressurizing Valve, APU Start Module		
Install . . . . .	7-184	7-638
Remove . . . . .	7-183	7-636
Check for Leaks, Windshield or Window . . . . .	2-61	2-230
Check Valve, Engine Fuel Line		
Install . . . . .	10-104	10-365
Remove . . . . .	10-103	10-363
Check Valve Fitting, Fuel Dual		
Install . . . . .	10-96	10-349
Remove . . . . .	10-95	10-347
Check Valve, Forward Fuel Tank Boost Pump		
Install . . . . .	10-76	10-291
Remove . . . . .	10-75	10-289
Check Valve, Fuel Suction Feed		
Install . . . . .	10-62	10-242
Remove . . . . .	10-61	10-240
Check Valve, integrated Lower Control Actuator		
(ILCA) — See Integrated Lower Control Actuator		
(ILCA) Check Valve		

	<i>Task</i>	<i>Page</i>
Check Valve, Jet Pump Motive Flow		
Install . . . . .	10-50	10-191
Remove . . . . .	10-49	10-189
Check Valve, Power Transfer Unit Module — See Power Transfer Unit Module Check Valve		
Check Valves, Filter, Utility Return Control Module		
Install . . . . .	7-201	7-676
Remove . . . . .	7-200	7-674
Check Valves, Utility Pressure Control Module		
Install . . . . .	7-167	7-598
Remove . . . . .	7-166	7-596
Check Valve, Swivel Lock Power Steering		
Install . . . . .	7-296	7-944
Remove . . . . .	7-295	7-942
Check Valve, Transfer Cylinder, Utility Return Control Module		
Install . . . . .	7-203	7-680
Remove . . . . .	7-202	7-678
Chip Detector		
Aft Rotary-Wing Drive Shaft		
Inspect Plug . . . . .	6-160	6-438
Install . . . . .	6-162	6-442
Remove . . . . .	6-161	6-441
Combining Transmission		
Inspect Plug . . . . .	6-178	6-470
Install . . . . .	6-179	6-473
Remove . . . . .	6-177	6-469
Chip Detector, Engine Accessory Gearbox		
Install . . . . .	4-22	4-77
Remove . . . . .	4-21	4-76
Clamp Mounted Instruments — See Instruments		
Clean and Treat Parts, Salt Corroded — See Clean and Treat Salt Corroded Parts		
Clean Flight Control System . . . . .	11-2	11-6
Cleaning		
Aluminum (AVIM) . . . . .	1-83	1-265
Dusty Environment . . . . .	1-85	1-269
Fuselage Exterior . . . . .	1-76	1-245
General Information . . . . .	1-80	1-259
Hydraulic Pistons . . . . .	1-78	1-251
Magnesium Alloy (AVIM) . . . . .	1-82	1-262
Metal Parts (AVIM) . . . . .	1-81	1-261
Plastic — Impregnated Glass Cloth . . . . .	1-77	1-250
Saltwater Landing or Immersion . . . . .	1-79	1-255
Clearance Check Controls — See Controls Clearance Check		
Clearance Check Procedure Flight Controls — See Control Clearance Procedure		

	<i>Task</i>	<i>Page</i>
Clock		
Install . . . . .	8-93	8-203
Remove . . . . .	8-92	8-202
Closure, Apu Exhaust Duct		
Install . . . . .	15-9	15-33
Remove . . . . .	15-8	15-32
Coaling, Cabin Door — See Cabin Door Coaming		
Cockpit Aft Floor Panel		
Install . . . . .	2-84	2-276
Remove . . . . .	2-83	2-275
Cockpit Air Control		
Install . . . . .	13-43	13-122
Remove . . . . .	13-42	13-120
Cockpit Control Assembly (Copilot's)		
Assemble (AVIM) . . . . .	11-78	11-337
Disassemble (AVIM) . . . . .	11-76	11-305
Install . . . . .	11-82	11-378
Remove . . . . .	11-74	11-286
Rig (AVIM) . . . . .	11-79	11-357
Cockpit Control Assembly (Pilot's)		
Assemble (AVIM) . . . . .	11-77	11-317
Disassemble (AVIM) . . . . .	11-75	11-294
Install . . . . .	11-81	11-369
Remove . . . . .	11-73	11-278
Rig (AVIM) . . . . .	11-80	11-363
Cockpit Control Assembly, Pilot's and Copilot's		
Rig Installed . . . . .	11-42	11-132
Cockpit Control Assy Rigging — See Cockpit Control Assembly Pilot's or Copilot's		
Cockpit Control Stick Position Indicator		
Install . . . . .	11-84	11-391
Remove . . . . .	11-83	11-387
Rig . . . . .	11-45	11-163
Cockpit Control Transfer Bellcranks		
Install . . . . .	11-88	11-414
Remove . . . . .	11-87	11-409
Rig . . . . .	11-46	11-164
Cockpit Control Transfer Connecting Links		
Install . . . . .	11-86	11-400
Remove . . . . .	11-85	11-396
Cockpit Transfer Bellcranks Rigged — See Cockpit Control Transfer Connecting Links		
Cockpit Travel Quadrant Pitch, Roll, or Yaw		
Install . . . . .	11-24	11-59
Remove . . . . .	11-25	11-62
Cockpit Crown Window Panel		
Install . . . . .	2-57	2-221
Installation . . . . .	2-56	2-219
Remove . . . . .	2-55	2-217

	<i>Task</i>	<i>Page</i>
Cockpit Defrost Control		
Install . . . . .	13-37	13-102
Remove . . . . .	13-36	13-99
Cockpit Dome Light		
Install . . . . .	9-110	9-296
Lamp		
Replace . . . . .	9-109	9-109
Remove . . . . .	9-108	9-108
Cockpit Ducting		
Install . . . . .	13-29	13-83
Remove . . . . .	13-28	13-79
Cockpit Enclosure, Repair . . . . .	2-36	2-166
Damage Requiring Replacement (AVIM) . . . . .	2-39	2-172
Minor Repair . . . . .	2-37	2-170
Repairable Damage . . . . .	2-38	2-171
Cockpit Floor		
Minor Repair . . . . .	2-74	2-259
Repair . . . . .	2-78	2-269
Cockpit Forward Floor Covers		
Install . . . . .	2-82	2-274
Remove . . . . .	2-81	2-272
Cockpit Rigging Tools		
Install . . . . .	11-22	11-53
Remove . . . . .	11-23	11-56
Cockpit Windows, Inspect . . . . .	2-54	2-215
Coin Patch, Skin Repair — See Skin Repair, Coin Patch		
Collar, Drive — See Drive Collar		
Combined Yaw and Roll Travel . . . . .	11-37	11-110
Combining Transmission — See Transmission Combining		
Compound, Palmer 611, Application of (AVIM) — See Palmer 611 Compound, Application of (AVIM)		
Compass, Magnetic		
Install . . . . .	8-47	8-104
Remove . . . . .	8-46	8-103
Components, Hydraulic Maintenance Panel		
Install . . . . .	8-101	8-226
Remove . . . . .	8-100	8-216
Computer AFCS No. 1 or No. — See AFCS No. 1 or No. 2 Computer		
Conditioner, Cruise Guide Signal		
Install . . . . .	8-40	8-93
Remove . . . . .	8-39	8-92
Cone, Engine Exhaust		
Install . . . . .	4-90	4-223
Remove . . . . .	4-88	4-221
Repair . . . . .	4-89	4-222

	<i>Task</i>	<i>Page</i>
Connecting Link, Drag Strut Engine Mount Fittings		
Inspect . . . . .	4-41	4-123
Install . . . . .	4-43	4-131
Remove . . . . .	4-40	4-121
Repair . . . . .	4-42	4-126
Connecting Link Forward LCT		
Clean . . . . .	11-2	11-6
Check — Bearings . . . . .	11-15	11-29
Check—Looseness . . . . .	11-6	11-12
Inspect — General . . . . .	11-7	11-15
Inspect — Bearing (Installed) . . . . .	11-9	11-19
Inspect — Bearing (Removed) . . . . .	11-8	11-17
Install . . . . .	11-210	11-731
Remove . . . . .	11-207	11-723
Repair . . . . .	11-14	11-27
Connecting Link Forward Left or Right — See Forward Left or Right Connecting Links		
Connecting Link Left Aft Fuselage		
Check — Bearings . . . . .	11-15	11-29
Check — Looseness . . . . .	11-6	11-12
Inspect — General . . . . .	11-7	11-15
Inspect — Bearings (Installed) . . . . .	11-9	11-19
Inspect — Bearings (Removed) . . . . .	11-8	11-17
Install . . . . .	11-253	11-864
Remove . . . . .	11-252	11-863
Repair . . . . .	11-14	11-27
Rig . . . . .	11-57	11-221
Connecting Link Left Upper Pylon		
Check — Bearings . . . . .	11-15	11-29
Check — Looseness . . . . .	11-6	11-12
Inspect — General . . . . .	11-7	11-15
Inspect — Bearings (Installed) . . . . .	11-9	11-19
Inspect — Bearings (Removed) . . . . .	11-8	11-17
Install . . . . .	11-261	11-880
Remove . . . . .	11-260	11-879
Rig . . . . .	11-57	11-221
Connecting Link Pitch Viscous Damper — See Pitch Viscous Damper Connecting Link		
Connecting Link Right Aft Fuselage		
Adjust		
Check — Bearings . . . . .	11-15	11-29
Check — Looseness . . . . .	11-6	11-12
Inspect — General . . . . .	11-7	11-15
Inspect — Bearings (Installed) . . . . .	11-9	11-19
Inspect — Bearings (Removed) . . . . .	11-8	11-17
Install . . . . .	11-255	11-868
Remove . . . . .	11-254	11-867
Rig . . . . .	11-57	11-221

	<i>Task</i>	<i>Page</i>
Connecting Link Right Upper Pylon		
Check — Bearings . . . . .	11-15	11-29
Check — Looseness . . . . .	11-6	11-12
Inspect — General . . . . .	11-7	11-15
Inspect — Bearings (Installed) . . . . .	11-9	11-19
Inspect — Bearings (Removed) . . . . .	11-8	11-17
Install . . . . .	11-263	11-884
Remove . . . . .	11-262	11-883
Rig . . . . .	11-57	11-221
Connecting Link Rod-End Bearings Adjust or Fixed (Installed)		
Inspect . . . . .	11-9	11-19
Connecting Link Rod-End Bearings Adjust or Fixed (Removed)		
Inspect . . . . .	11-8	11-7
Connecting Link Roll Intermediate		
Check . . . . .	11-15	11-29
Inspect — General . . . . .	11-7	11-15
Inspect — Bearings (Installed) . . . . .	11-9	11-19
Inspect — Bearings (Removed) . . . . .	11-8	11-17
Install . . . . .	11-185	11-640
Remove . . . . .	11-184	11-639
Repair . . . . .	11-14	11-27
Connecting Link Roll Viscous Damper — See Roll Viscous Damper Connecting Link		
Connecting Link Servocylinder Forward or Aft - See Servocylinder Connecting Link Forward or Aft		
Connecting Link Thrust Intermediate		
Check . . . . .	11-15	11-29
Inspect — General . . . . .	11-7	11-15
Inspect — Bearings (Installed) . . . . .	11-9	11-19
Inspect — Bearings (Removed) . . . . .	11-8	11-17
Install . . . . .	11-185	11-640
Remove . . . . .	11-184	11-639
Repair . . . . .	11-14	11-27
Connecting Link Thrust Viscous Damper — See Thrust Viscous Damper Connecting Link		
Connecting Link Yaw Viscous Damper — See Yaw Viscous Damper Connecting Link		
Connecting Links Aft Fuselage		
Clean . . . . .	11-2	11-6
Check — Beatings . . . . .	11-15	11-29
Check — Looseness . . . . .	11-6	11-12
Inspect — General . . . . .	11-7	11-15
Inspect — Bearings (Installed) . . . . .	11-9	11-19
Inspect — Bearings (Removed) . . . . .	11-8	11-17
Install . . . . .	11-245	11-844
Remove . . . . .	11-244	11-841

	<i>Task</i>	<i>Page</i>
Repair .....	11-14	11-27
Rig .....	11-57	11-221
Connecting Links Aft Tunnel		
Check — Bearings .....	11-15	11-29
Check — Looseness .....	11-6	11-12
Inspect — General .....	11-7	11-15
Inspect — Bearings (Installed) .....	11-9	11-19
Inspect — Bearings (Removed) .....	11-8	11-17
Install .....	11-239	11-823
Remove .....	11-238	11-821
Repair .....	11-14	11-27
Rig .....	11-56	11-217
Connecting Links, Apu Aft Mount		
Inspect .....	15-5	15-24
Install .....	15-7	15-30
Remove .....	15-6	15-26
Connecting Links Flight Control System		
Clean .....	11-2	11-6
Check — Bearings .....	11-15	11-29
Check — Looseness .....	11-6	11-12
Inspect — General .....	11-7	11-15
Install .....	11-106	11-465
Remove .....	11-105	11-463
Repair .....	11-14	11-27
Connecting Links Forward Tunnel		
Check — Bearings .....	11-15	11-29
Check — Looseness .....	11-6	11-12
Inspect — General .....	11-7	11-15
Inspect — Bearings (Installed) .....	11-9	11-19
Inspect — Bearings (Removed) .....	11-8	11-17
Install .....	11-235	11-811
Remove .....	11-234	11-809
Repair .....	11-14	11-27
Rig .....	11-56	11-217
Connecting Links ILCA intermediate — See ILCA Intermediate Connecting Link		
Connecting Links Mixing — See Mixing Linkage Connecting Links		
Connecting Links Pitch Intermediate		
Check .....	11-15	11-29
Inspect — General .....	11-7	11-15
Inspect — Bearings (installed) .....	11-9	11-19
Inspect — Bearings (Removed) .....	11-8	11-17
Install .....	11-185	11-640
Remove .....	11-184	11-639
Repair .....	11-14	11-27
Connecting Links Transfer—See Cockpit Control Transfer Connecting Links		

	<i>Task</i>	<i>Page</i>
Connecting Links Tunnel		
Check — Bearings . . . . .	11-15	11-29
Check — Looseness . . . . .	11-6	11-12
Inspect — General . . . . .	11-7	11-15
Inspect — Bearings (Installed) . . . . .	11-9	11-19
Inspect — Bearings (Removed) . . . . .	11-8	11-17
Install . . . . .	11-237	11-818
Remove . . . . .	11-236	11-816
Repair . . . . .	11-14	11-27
Rig . . . . .	11-56	11-217
Connecting Links Yaw Intermediate		
Check . . . . .	11-15	11-29
Inspect — General . . . . .	11-7	11-15
Inspect — Bearings (Installed) . . . . .	11-9	11-19
Inspect — Bearings (Removed) . . . . .	11-8	11-17
Install . . . . .	11-185	11-640
Remove . . . . .	11-184	11-639
Repair . . . . .	11-14	11-27
Contactor, Apu Generator — See Apu Generator Contactor		
Contactor, Generator — See Generator Contactor		
Console Components		
Install . . . . .	9-104	9-284
Remove . . . . .	9-103	9-281
Container, Stowage Cargo Handling		
Install . . . . .	14-20	14-48
Remove . . . . .	14-19	14-47
Contamination, Hydraulic System — See Hydraulic System Contamination		
Contamination, Isolating Fuel . . . . .	10-33	10-121
Control Arms and Bellcranks, Repair . . . . .	11-12	11-22
Control Box, Gas Producer		
Install . . . . .	4-107	4-257
Remove . . . . .	4-106	4-256
Control Box, Power Steering-See Power Steering		
Control Box		
Control Box, Remote Positioning		
Install . . . . .	4-128	4-300
Remove . . . . .	4-127	4-299
Control Boxes, Windshield Anti-Icing		
Install . . . . .	12-4	12-8
Remove . . . . .	12-3	12-6
Control, Engine Condition		
Inspect . . . . .	4-103	4-253
Install . . . . .	4-105	4-255
Remove . . . . .	4-104	4-254
Control, Engine Fuel		
Install . . . . .	4-16	4-68
Remove . . . . .	4-15	4-65



	<i>Task</i>	<i>Page</i>
Control, Fire Detection		
Install . . . . .	12-9	12-20
Remove . . . . .	12-8	12-18
Control, Fire Pull		
Install . . . . .	12-18	12-42
Lamp Replace . . . . .	12-14	12-37
Remove . . . . .	12-15	12-38
Switch and Adapter		
Install . . . . .	12-17	12-41
Remove . . . . .	12-16	12-40
Control, Heater Fuel		
Install . . . . .	13-63	13-160
Remove . . . . .	13-62	13-158
Control, Inertia Reel, Pilot or Copilot Shoulder		
Harness — See Inertia Reel, Pilot or Copilot		
Shoulder Harness, Control		
Controller, Temperature		
Install . . . . .	13-59	13-154
Remove . . . . .	13-58	13-153
Control Linkage, Power Turbine — See Linkage, Power Turbine		
Control Looseness Procedure Check . . . . .	11-6	11-12
Control Pallet Sta 95		
Install . . . . .	11-90	11-424
Remove . . . . .	11-89	11-422
Control Pallet Sta 95 Thrust Idler Bellcrank		
Install . . . . .	11-96	11-439
Remove . . . . .	11-95	11-436
Rig . . . . .	11-48	11-171
Control Pallet Sta 95 Yaw and Thrust idler		
Bellcrank Support		
Install . . . . .	11-102	11-458
Remove . . . . .	11-101	11-457
Control Pallet Sta 95 Yaw Idler Bellcrank		
Install . . . . .	11-94	11-434
Remove . . . . .	11-93	11-432
Rig . . . . .	11-48	11-171
Control Pallet Sta 120		
Install . . . . .	11-92	11-429
Remove . . . . .	11-91	11-427
Control Pallet Sta 120 Pitch and Roll Idler		
Bellcrank Support		
Install . . . . .	11-104	11-461
Remove . . . . .	11-103	11-460
Control Pallet Sta 120 Pitch Idler Bellcrank		
Install . . . . .	11-100	11-453
Remove . . . . .	11-99	11-450
Rig . . . . .	11-49	11-176

	<i>Task</i>	<i>Page</i>
Control Pallet Sta 120 Roll Idler Bellcrank		
Install . . . . .	11-98	11-446
Remove . . . . .	11-97	11-443
Rig . . . . .	11-49	11-176
Control Panel, Generator — See Generator Control Panel		
Control Pitch Position Indicator Rigged — See Cockpit		
Control Stick Position Indicator		
Control Pitch Travel — See Pitch Control Travel		
Control Relay Box, Heater — See Relay Box,		
Heater Control		
Control Rig Thrust — See Rig Thrust Control		
Control Roll Travel — See Roll Control Travel		
Control Shutoff Valve Hoist — See Hoist Control		
Shutoff Valve		
Control Stick Pitch and Roll (Copilot's)		
Install . . . . .	11-72	11-275
Remove . . . . .	11-70	11-271
Control Stick Pitch and Roll (Pilot's)		
Install . . . . .	11-71	11-272
Remove . . . . .	11-69	11-270
Control Stick Position Indicator — See Cockpit		
Control Stick Position Indicator		
Control Thrust — See Thrust Control		
Control Thrust (Copilot's) — See Thrust Control (Copilot's)		
Control Thrust Detent — See Thrust Control Detent		
Control Thrust (Pilot's) — See Thrust Control (Pilot's)		
Control Thrust Travel — See Thrust Control Travel		
Control Unit, Electronic Apu — See Apu		
Electronic Control Unit		
Control Valve Boots Servocylinder — See Servocylinder		
Control Valve Boots		
Control Unit, Fuel Quantity Indicating		
Install . . . . .	8-80	8-174
Remove . . . . .	8-79	8-173
Control Valve and Mounting Bracket, Fuel		
Install . . . . .	10-60	10-236
Remove . . . . .	10-59	10-233
Control Valve Hoist — See Hoist Control Valve		
Control Valve Power Steering Swivel Lock — See		
Power Steering/Swivel Lock Control Valve		
Controls Clearance Check . . . . .	11-5	11-9
Controls Tunnel Linkage Rigged — See Rig Tunnel		
Control Linkage		
Controls Yaw Travel — See Yaw Control Travel		
Converter, Windshield Wiper		
Install . . . . .	12-49	12-102
Remove . . . . .	12-48	12-100
Cooling Fan, Flight Control — See Flight Control		
Cooling Fan		

	<i>Task</i>	<i>Page</i>
Cooling Fan Utility Hydraulic — See Utility Hydraulic Cooling Fan		
Corfil Filler Application of . . . . .	2-339	2-896
Corrosion Bellcrank		
Inspect . . . . .	11-11	11-21
Corrosion/Heat Resistant Steels (Inorganic Surface Treatment) — See Finish Corrosion/Heat Resistant Steels (Inorganic Surface Treatment)		
Corrosion Prevention and Treatment . . . . .	2-343	2-900
Cotter Pins, Nuts, or Washers, Use Of — See Nuts, Washers, or Cotter Pins, Use Of		
Coupling and Seal, Apu Motor Pump		
Install (AVIM) . . . . .	7-145	7-545
Remove (AVIM) . . . . .	7-144	7-543
Coupling and Seal, Flight Control Hydraulic Pumps — See Flight Control Hydraulic Pumps, Coupling and Seal		
Cover, Access, Cockpit Floor — See Access Cover, Cockpit Floor		
Cover, Engine		
Adjust . . . . .	4-51	4-146
Assemble . . . . .	4-58	4-157
Close . . . . .	4-50	4-143
Disassemble . . . . .	4-53	4-151
Install . . . . .	4-59	4-158
Open . . . . .	4-49	4-141
Remove . . . . .	4-52	4-149
Repair (Damage Requiring Replacement) . . . . .	4-57	4-156
Repair (General Information).. . . . .	4-54	4-153
Repair (Major Damage) . . . . .	4-56	4-155
Repair (Minor Damage) . . . . .	4-55	4-154
Cover and Wire Harness, Solenoid, Forward and Aft Cargo Hook		
Install . . . . .	16-16	16-47
Remove . . . . .	16-15	16-45
Covers, Protective . . . . .	1-32	1-94
Crossfeed Valve, Fuel		
Install . . . . .	10-114	10-389
Remove . . . . .	10-113	10-386
Cross Feedback Transducer, Integrated Lower Control Actuator (ILCA) — See Integrated Lower Control Actuator (ILCA) Cross Feedback Transducer		
Crown Fairing, Aft — See Pylon Aft Crown Fairing		
Crown Fairing Forward — See Pylon Fwd Crown Fairing		
Crown Fairing Mid — See Pylon Mid Crown Fairing		

	<i>Task</i>	<i>Page</i>
Cruise Guide Signal Conditioner		
Install . . . . .	8-40	8-93
Remove . . . . .	8-39	8-92
Cruise Guide Signal Processor		
Install . . . . .	8-42	8-96
Remove . . . . .	8-41	8-95
Cumulative Stops, Adjust . . . . .	11-52	11-192
Cups and Keys, Fwd and Aft Landing Gear Wheel		
Install . . . . .	3-10	3-25
Remove . . . . .	3-9	3-24
Cushion, Seat, Pilot, or Copilot — See Seat Cushion, Pilot or Copilot		
Cutter, Winch Cable — See Cable Cutter		
Cyclic Trim Indicator		
Install . . . . .	8-87	8-187
Remove . . . . .	8-86	8-185
Test . . . . .	8-43	8-97
Cylinder Actuating Cargo Ramp — See Ramp Cargo Actuating Cylinder		
Cylinder Brake Master — See Brake Master Cylinder		
Cylinder Actuator Swivel Lock — See Swivel Lock Actuator Cylinder		
Cylinder, Transfer, Utility Return Control Module		
Assemble (AVIM) . . . . .	7-191	7-653
Disassemble and inspect (AVIM) . . . . .	7-190	7-652
Install . . . . .	7-193	7-659
Remove . . . . .	7-189	7-649
Test (AVIM) . . . . .	7-192	7-655
<b>D</b>		
Damage Repair, Complete (AVIM) . . . . .	2-10	2-21
Damage Repair, Composite . . . . .	2-9	2-20
Damage Repair, Partial . . . . .	2-8	2-19
Damper Pitch Viscous — See Viscous Damper Pitch		
Damper Roll Viscous — See Viscous Damper Roll		
Damper Thrust Viscous — See Viscous Damper Thrust		
Damper Yaw Viscous — See Viscous Damper Yaw		
Dash Actuator		
Adjust . . . . .	11-165	11-590
Install . . . . .	11-164	11-587
Remove . . . . .	11-163	11-586
Dash Actuator Dummy Link		
Install . . . . .	11-26	11-64
Remove . . . . .	11-27	11-65
Dash Actuator Rigged for Hover — See Rig Dash Actuator for Hover		
Data Plate, Aft Landing Gear		
Replace (AVIM) . . . . .	3-65	3-146

	<i>Task</i>	<i>Page</i>
Dc Cabin Utility Receptacle		
Install . . . . .	9-7	9-22
Remove . . . . .	9-6	9-20
Dc Electrical System — See Electrical Dc System		
Dc Power Receptacle		
Install . . . . .	9-5	9-18
Remove . . . . .	9-4	9-16
Decals Overcoating, Special Finish . . . . .	2-355	2-934
Defrost Valve		
Install . . . . .	13-27	13-77
Remove . . . . .	13-26	13-75
Defroster Nozzle, Jettisonable Door Window		
Install . . . . .	13-35	13-97
Remove . . . . .	13-34	13-95
Defueling		
With Ac Power . . . . .	10-34	10-124
Without Ac Power . . . . .	10-35	10-132
Refueling Manual Valve		
Install . . . . .	10-110	10-377
Remove . . . . .	10-109	10-375
Diffusers, Air, Nose Enclosure		
Install . . . . .	13-33	13-93
Remove . . . . .	13-32	13-91
Dimming Resistor, Position Light — See Position Light Dimming Resistor		
Dimming Resistor, Troop Jump Signal — See Troop Jump Signal Dimming Resistor		
Dispenser, Flare		
Install . . . . .	16-50	16-159
Remove . . . . .	16-49	16-157
Distribution Panels, Power — See Power Distribution Panels		
Distributor Air Duct		
Install . . . . .	13-25	13-73
Remove . . . . .	13-24	13-71
Door, Cabin — See Cabin Door		
Door, Cabin, Lower — See Cabin Door, Lower		
Door, Cabin, Upper — See Cabin Door Upper		
Door Cargo — See Cargo Door		
Door Cargo Actuator Motor — See Cargo Door Actuator Motor		
Door Cargo Pressure Actuating Valve — See Cargo Door Pressure Actuating Valve		
Door Cargo Sequence Valve — See Cargo Door Sequence Valve		
Door Jettisonable — See Jettisonable Door, Pilot or Copilot		
Door, Nose Access — See Nose Access Door		
Drag Link, Lower — See Lower Drag Link, Aft Landing Gear		
Drag Link, Upper — See Upper Drag Link, Aft Landing Gear		

	<i>Task</i>	<i>Page</i>
Drag Strut — See Connecting Link (Drag Strut)		
Engine Mount Fittings		
Drain Plug, Fuselage — See Fuselage Drain Plug		
Drain Valve, Fuel		
Fuel System		
Install . . . . .	10-94	10-345
Remove . . . . .	10-93	10-343
Fuel Tank		
Install . . . . .	10-40	10-155
Remove . . . . .	10-39	10-154
Drip Pans, Remove and Install . . . . .	2-3	2-9
Drive Arms		
Lower		
Assemble (AVIM) . . . . .	5-110	5-397
Disassemble (AVIM) . . . . .	5-108	5-391
Inspect (AVIM) . . . . .	5-109	5-394
Install . . . . .	5-112	5-405
Remove . . . . .	5-101	5-376
Upper		
Assemble (AVIM) . . . . .	5-107	5-387
Disassemble (AVIM) . . . . .	5-105	5-384
Inspect (AVIM) . . . . .	5-106	5-386
Install . . . . .	5-112	5-405
Remove . . . . .	5-101	5-376
Drive Collar		
Assemble (AVIM) . . . . .	5-104	5-382
Disassemble (AVIM) . . . . .	5-102	5-379
Inspect (AVIM) . . . . .	5-103	5-380
Install . . . . .	5-111	5-401
Remove . . . . .	5-100	5-373
Drive Shaft, Aft Rotary-Wing . . . . .	6-1	6-1
Chip Detector		
Inspect Plug . . . . .	6-160	6-438
Install . . . . .	6-162	6-442
Remove . . . . .	6-161	6-441
Inspect . . . . .	6-58	6-170
Install Through Cabin . . . . .	6-63	6-185
Install Through Top of Pylon . . . . .	6-62	6-180
Oil Filter		
Clean . . . . .	6-164	6-445
Inspect . . . . .	6-164	6-445
Install . . . . .	6-165	6-448
Remove . . . . .	6-163	6-444
Prepare for Shipment or Storage . . . . .	6-60	6-174.4
Remove From Storage . . . . .	6-61	6-178
Remove Through Cabin . . . . .	6-57	6-167
Remove Through Top of Pylon . . . . .	6-56	6-164

	<i>Task</i>	<i>Page</i>
Repair . . . . .	6-59	6-171
Seal, Upper		
Install (AVIM) . . . . .	6-54	6-156
Remove (AVIM) . . . . .	6-53	6-154.4
Slider Shaft		
Install . . . . .	6-55	6-162
Remove . . . . .	6-52	6-153
Repair . . . . .	6-52.1	6-154
Support		
Repair . . . . .	6-59.1	6-174.1
Drive Shaft, Engine . . . . .	6-1	6-1
Install . . . . .	6-32	6-82
Inspect . . . . .	6-30.1	6-80
Repair . . . . .	6-31	6-80.3
Remove . . . . .	6-30	6-77
Drive Shafting		
Adapter Assembly — See Adapter Assembly		
Aft Rotor Shaft — See Aft Rotary-Wing		
Drive Shaft		
Align Forward Drive Shafting. . . . .	6-20	6-55
Assemble . . . . .	6-16	6-43
Disassemble . . . . .	6-12	6-33
Inspect . . . . .	6-10	6-28
Mount, Aft		
Inspect . . . . .	6-13	6-35
Install . . . . .	6-27	6-70
Remove . . . . .	6-26	6-69
Mount, Forward		
Inspect . . . . .	6-13	6-35
Install . . . . .	6-15	6-39
Remove . . . . .	6-14	6-36
No. 1 Shaft		
Install . . . . .	6-17	6-45
Remove . . . . .	6-2	6-11
No. 2 thru No. 6 Shaft		
Install . . . . .	6-18	6-48
Remove . . . . .	6-3	6-14
No. 7 Shaft		
Install . . . . .	6-19	6-52
Remove . . . . .	6-4	6-18
No. 8 and No. 9 Shaft (Aft Shafting)		
Install . . . . .	6-29	6-74
Remove . . . . .	6-21	6-60
Repair . . . . .	6-11	6-31
Droop Stops, Centrifugal		
Balancing Arms		
Install . . . . .	5-59	5-200
Remove . . . . .	5-58	5-198

	<i>Task</i>	<i>Page</i>
Blocks and Supports		
Inspect .....	5-51	5-176
Install .....	5-61	5-206
Remove .....	5-60	5-203
Bolts and Lugs		
Inspect .....	5-53	5-181
Functional Check .....	5-52	5-178
Install .....	5-55	5-186
Interposer Support Spring Back		
Inspect and Adjust .....	5-49	5-170
Remove .....	5-54	5-185
Springs and Balancing Arms		
Inspect .....	5-50	5-174
Springs and Weights		
Install .....	5-57	5-193
Remove .....	5-56	5-190
Droop Stops, Fixed		
Inspect .....	5-47	5-164
Replace .....	5-48	5-166
Drum and Level Wind Mechanism, Winch		
Time (AVIM) .....	14-7	14-19
Dual Cargo Hook Release Relay Box		
Assemble (AVIM) .....	9-153	9-414
Disassemble (AVIM) .....	9-152	9-410
Install .....	9-154	9-418
Remove .....	9-151	9-408
Test (AVIM) .....	9-153.1	9-417.1
Dual Check Valve Fitting, Fuel		
Install .....	10-96	10-349
Remove .....	10-95	10-347
Dual Torque Indicator		
Install .....	8-89	8-192
Remove .....	8-88	8-190
Test (AVIM) .....	8-19	8-43
Duct, Cockpit Air Outlet		
Install .....	13-31	13-88
Remove .....	13-30	13-86
Duct, Distributor Air		
Install .....	13-25	13-73
Remove .....	13-24	13-71
Duct, Heater Air Inlet		
Install .....	13-19	13-58
Remove .....	13-18	13-56
Duct, Heater Transition		
Install .....	13-23	13-69
Remove .....	13-22	13-67
Ducting, Cabin		
Install .....	13-39	13-110
Remove .....	13-38	13-106
Ducting, Cockpit		
Install .....	13-29	13-83
Remove .....	13-28	13-79



	<i>Task</i>	<i>Page</i>
Dummy Link Dash Actuator — See Dash Actuator		
Dummy Link		
Dynamic Absorber Adapter — See Adapter, Dynamic Absorber		
Dynamic Absorber, Cockpit — See Absorber, Dynamic, Cockpit		
Dynamic Absorber, Nose — See Absorber, Dynamic, Nose		
<b>E</b>		
Electrical AC System . . . . .	9-30	9-69
Electrical Cable Assy, Engine		
Install . . . . .	4-48	4-140
Remove . . . . .	4-47	4-139
Repair and Test . . . . .	4-11.1	4-40.1
Electrical DC System . . . . .	9-1	9-1
Element, Filter, Utility Return Control Module		
Install . . . . .	7-195	7-664
Remove . . . . .	7-194	7-661
Element, Sensing, Fire Detection		
Inspect . . . . .	12-11	12-25
Install . . . . .	12-13	12-31
Remove . . . . .	12-12	12-26
Test . . . . .	12-10	12-22
Emergency Brake Accumulator — See Brake Accumulator Emerg		
Emergency Engine Trim Relays		
Install . . . . .	4-126	4-297
Remove . . . . .	4-125	4-295
Emergency Equipment . . . . .	17-1	17-1
Emergency Exit Light — See Light, Emergency Exit		
Emergency Exit Light Batteries		
Charge . . . . .	17-7	17-16
Install . . . . .	17-6	17-12
Remove . . . . .	17-5	17-9
Emergency Exit Light Panel and Pan		
Install . . . . .	17-10	17-22
Remove . . . . .	17-9	17-20
Emergency Hook Release Relay Box		
Assemble (AVIM) . . . . .	9-149	9-402
Disassembly (AVIM) . . . . .	9-148	9-398
Install . . . . .	9-150	9-407
Remove . . . . .	9-147	9-397
Test (AVIM) . . . . .	9-149.1	9-406.1
Emergency Power Light		
Install . . . . .	8-4	8-15
Lamp		
Replace . . . . .	8-5	8-17
Remove . . . . .	8-3	8-13
Emergency Power Panel		
Assemble (AVIM) . . . . .	9-99.2	9-272.3
Disassemble (AVIM) . . . . .	9-99.1	9-272.1
Test (AVIM) . . . . .	9-99.3	9-272.5
Emergency Power Switches		
Install . . . . .	8-7	8-19
Remove . . . . .	8-6	8-18

	<i>Task</i>	<i>Page</i>
Engine — See Powerplant		
Engine Accessory Gearbox Chip Detector		
Install . . . . .	4-22	4-77
Remove . . . . .	4-21	4-76
Engine Air Inlet Bypass Panels — See Bypass Panels,		
Engine Air Inlet		
Engine Air Inlet Bypass Screens		
Adjust . . . . .	4-63	4-165
Clean . . . . .	4-66	4-176
Install . . . . .	4-76	4-198
Remove . . . . .	4-65	4-173
Repair (General Information) . . . . .	4-67	4-177
Repair (Major Damage) . . . . .	4-69	4-179
Repair (Minor Damage) . . . . .	4-68	4-178
Engine Air Inlet Fairing		
Install . . . . .	4-75	4-194
Remove . . . . .	4-74	4-190
Engine Condition Control		
Inspect . . . . .	4-103	4-253
Install . . . . .	4-105	4-255
Remove . . . . .	4-104	4-254
Engine Cover — See Cover, Powerplant		
Engine Cover Former		
Adjust . . . . .	4-44	4-134
Install . . . . .	4-46	4-137
Remove . . . . .	4-45	4-135
Engine Droop Eliminator Resistors		
Adjust . . . . .	4-118	4-277
Assemble . . . . .	4-121	4-286
Disassemble . . . . .	4-120	4-284
Install and Rig . . . . .	4-122	4-288
Remove . . . . .	4-119	4-283
Engine Firewall and Engine Cover Former		
Adjust . . . . .	4-44	4-134
Install . . . . .	4-46	4-137
Remove . . . . .	4-45	4-135
Engine Fuel Booster Pump		
Install . . . . .	4-18	4-72
Remove . . . . .	4-17	4-71
Engine Fuel Control		
Install . . . . .	4-16	4-68
Remove . . . . .	4-15	4-65
Engine Fuel Line Check Valve		
Install . . . . .	10-104	10-365
Remove . . . . .	10-103	10-363
Engine Fuel Shutoff Valve		
Install . . . . .	10-112	10-383
Remove . . . . .	10-111	10-380
Engine Inline Fuel Filter		
Replace . . . . .	4-19	4-74
Engine Mounts — See Mounts, Engine		

	<i>Task</i>	<i>Page</i>
Engine Oil Pressure Indicator		
Install . . . . .	8-87	8-187
Remove . . . . .	8-86	8-185
Test . . . . .	8-14	8-36
Engine Oil Pressure Transmitter		
Install . . . . .	8-16	8-38
Remove . . . . .	8-15	8-37
Engine Oil Temperature Indicator		
Install . . . . .	8-87	8-187
Remove . . . . .	8-86	8-185
Test . . . . .	8-17	8-40
Engine Oil Temperature Transmitter		
Replace . . . . .	8-18	8-42
Engine Starter		
Install . . . . .	7-142	7-538
Remove . . . . .	7-141	7-535
Engine Transmission — See Transmission Engine		
Engine Transmission Fairing		
Install . . . . .	4-73	4-186
Remove . . . . .	4-70	4-180
Engine Trim Relay		
Install . . . . .	4-124	4-293
Remove . . . . .	4-123	4-291
Engine Trim Resistors		
Adjust . . . . .	4-129	4-301
Install . . . . .	4-131	4-306
Remove . . . . .	4-130	4-304
Engine Work Platform		
Install . . . . .	2-220	2-593
Remove . . . . .	2-219	2-591
Environmental Maintenance		
Cold . . . . .	1-86	1-270
Dust . . . . .	1-85	1-268
Heat . . . . .	1-84	1-267
Environmental System . . . . .	13-1	13-1
Equipment Support Structure, Aft Pylon		
Minor Repair . . . . .	2-300	2-764
Repair . . . . .	2-301	2-765
Repair (AVIM) . . . . .	2-302	2-768
Equipment Support Structure, Cockpit		
Repair . . . . .	2-71	2-256
Major Damage (AVIM) . . . . .	2-73	2-258
Minor Damage . . . . .	2-72	2-257
Erosion Cap, Rotary-Wing Blades Replace (AVIM) . . . . .	5-66	5-225
Escape Hatch, Forward Cabin		
Install . . . . .	2-165	2-455
Remove . . . . .	2-160	2-449

	<i>Task</i>	<i>Page</i>
Repair . . . . .	2-161	2-450
Damage Requiring Replacement . . . . .	2-164	2-454
Major Damage (AVIM) . . . . .	2-163	2-453
Minor Damage . . . . .	2-162	2-452
Essential DC Bus Relay		
Install . . . . .	9-23	9-56
Remove . . . . .	9-22	9-55
ESU, APU		
Install . . . . .	9-164	9-441
Remove . . . . .	9-163	9-439
Exhaust Cone, Powerplant		
Install . . . . .	4-90	4-223
Remove . . . . .	4-88	4-221
Repair (AVIM) . . . . .	4-89	4-222
Exhaust Duct Closure, APU		
Install . . . . .	15-9	15-33
Remove . . . . .	15-8	15-32
Exhaust Pipe, Heater		
Install . . . . .	13-21	13-64
Remove . . . . .	13-20	13-61
Expendable Materials . . . . .	1-18	1-31
Extensible Link		
Actuator Cylinder		
Functional Test (AVIM) . . . . .	7-97	7-291
Install . . . . .	7-86	7-264
Remove . . . . .	7-85	7-262
Self Feedback Transducer		
Adjust (AVIM) . . . . .	7-101	7-392
Servo Valve		
Install (AVIM) . . . . .	7-96	7-289
Remove (AVIM) . . . . .	7-95	7-286
Extension, Cargo Ramp — See Cargo Ramp Extension		
External Power		
Electric . . . . .	1-37	1-112
Hydraulic . . . . .	1-38	1-113
External Power Monitor		
Install . . . . .	9-38	9-98
Remove . . . . .	9-37	9-97
Extinguisher (Bottle) 30402103, Fire		
Cartridge (Squib)		
Install . . . . .	12-30	12-66
Remove . . . . .	12-28	12-62
Test . . . . .	12-25	12-56
Install . . . . .	12-32	12-70
Inspect . . . . .	12-26	12-58
Remove . . . . .	12-23	12-52

	<i>Task</i>	<i>Page</i>
Extinguisher (Bottle) 892868-02, Fire		
Cartridge (Squib)		
Install . . . . .	12-31	12-68
Remove . . . . .	12-29	12-64
Test . . . . .	12-25	12-56
Install . . . . .	12-33	12-73
Inspect . . . . .	12-27	12-60
Remove . . . . .	12-24	12-54
Extinguisher, Fire, Portable		
Install . . . . .	17-3	17-5
Remove . . . . .	17-2	17-3
Extrusions, Minor Damage Removal . . . . .	2-336	2-892
<b>F</b>		
Fairing, Aft Crown — See Pylon Aft Crown Fairing		
Fairing, Engine Air Inlet		
Install . . . . .	4-75	4-194
Remove . . . . .	4-74	4-190
Fairing, Engine Transmission		
Install . . . . .	4-73	4-186
Remove . . . . .	4-70	4-180
Repair (General Info) . . . . .	4-71	4-184
Repair (Major Damage) (AVIM) . . . . .	4-72	4-185
Fairing, Forward Crown, Pylon — See Pylon Forward Crown Fairing		
Fairing, Forward Transmission — See Forward Transmission Fairing		
Fairing Hot Air Valve, Engine		
Install . . . . .	4-79	4-204
Remove . . . . .	4-78	4-202
Fairing, Mid Crown, Pylon — See Pylon Mid Crown Fairing		
Fairing, Pylon Lower, Hinged — Pylon Lower Hinged Fairing		
Fairing, Trailing Edge — See Trailing Edge Fairing		
Fan, Avionics Cooling — See Avionics Cooling Fan		
Fan, Cooling-Flight Control — See Flight Control Cooling Fan		
Fan Cooling Utility Hydraulic — See Utility Hydraulic Cooling Fan		
Fan, Heater		
Assemble (AVIM) . . . . .	13-15	13-48
Clean Parts (AVIM) . . . . .	13-14	13-47
Disassemble and Inspect (AVIM) . . . . .	13-13	13-44
Install . . . . .	13-17	13-54
Remove . . . . .	13-12	13-43
Test (AVIM) . . . . .	13-16	13-52
Fan, Utility Hydraulic Cooling — See Cooling Fan Utility Hydraulic		
FAT Gage		
Install . . . . .	8-96	8-208
Remove . . . . .	8-94	8-205
Test . . . . .	8-95	8-207
Feel Forces Artificial — See Artificial Feel Forces		

	<i>Task</i>	<i>Page</i>
Filler Corfil, Application Of — See Corfil Filler, Application Of		
Finish Aluminum Alloy Parts (Inorganic Surface Treatment) . . . . .	2-346	2-905
Finish Carbon and Low Alloy Steels (Inorganic Surface Treatment) . . . . .	2-348	2-908
Finish Corrosion/Heat Resistant Steels (Inorganic Surface Treatment) . . . . .	2-349	2-909
Finishes, Removal of (AVIM) . . . . .	2-341	2-898
Finish, Final, Interior/Exterior Metal Structures — See Interior/Exterior Metal Structures, Final Finish		
Finish Interior Structures Detail or Repair Parts		
Non-Mating, Similar Metal . . . . .	2-350	2-910
Mating, Dissimilar Metal . . . . .	2-351	2-912
Finish Magnesium Alloy Parts (inorganic Surface Treatment) . . . . .	2-347	2-906
Finish Nonmetallic Parts, Organic — See Nonmetallic Parts, Finish, Organic		
Finish Special, Decals Overcoating — See Decals Overcoating, Special Finish		
Finish, Special, Surfaces Exposed to Alkaline — See Alkaline Exposure, Special Finish Surfaces		
Finish, Special, Walkways — See Walkways, Special Finish		
Fitting, Lubrication, Fwd Landing Gear — See Lubrication Fitting, Fwd Landing Gear		
Firewall, Engine		
Adjust . . . . .	4-44	4-134
Filler, Engine Oil		
Install . . . . .	4-99	4-241
Remove . . . . .	4-98	4-239
Filter, Engine Inline Fuel		
Replace . . . . .	4-19	4-74
Fixed Droop Stops		
Inspect . . . . .	5-47	5-164
Replace . . . . .	5-48	5-166
Filter Element Replacement, Oil		
Aft Transmission		
Auxiliary . . . . .	6-154	6-427
Main . . . . .	6-148	6-414
Combining Transmission		
Auxiliary . . . . .	6-173	6-463
Main . . . . .	6-171	6-458
Engine Transmission . . . . .	6-199	6-528
Forward Transmission		
Auxiliary . . . . .	6-129	6-370
Main . . . . .	6-123	6-357
Filter, Oil, Aft Rotor Shaft		
Clean . . . . .	6-164	6-445
Inspect . . . . .	6-164	6-445
Install . . . . .	6-165	6-448
Remove . . . . .	6-163	6-444

	<i>Task</i>	<i>Page</i>
Fill Module		
Assemble (AVIM) . . . . .	7-19	7-88
Disassemble and Inspect (AVIM) . . . . .	7-18	7-83
Install . . . . .	7-21	7-100
Remove . . . . .	7-17	7-81
Test (AVIM) . . . . .	7-20	7-94
Filling and Bleeding Flight Control Hydraulic System . . . . .	7-16	7-72
Filter Check Valve, Power Control Module — See Power Control Module Filter Check Valve		
Filter Element, Power Control Module — See Power Control Module Filter Element		
Filter Indicator Switch, Power Control Module — See Power Control Module Filter Indicator Switch		
Filter Relief Valve, Power Control Module — See Power Control Module, Filter Relief Valve		
Filter Bypass Valve, Utility Return Control Module		
Install . . . . .	7-197	7-668
Remove . . . . .	7-196	7-666
Filter Element, Utility Return Control Module — See Element, Filter, Utility Return Control Module		
Filter, Pressure Control Module		
Install . . . . .	7-157	7-576
Remove . . . . .	7-156	7-573
First and Second Stage Bellcranks Rigged — See Rig First and Second Stage Bellcranks		
First Stage Control Rig Pin Damaged — See Rig Pin Damaged in First Stage Controls		
First Stage Mixing Assembly		
Bushings		
Replace . . . . .	11-16	11-29
Check — Bearings . . . . .	11-15	11-30
Clean . . . . .	11-2	11-6
Inspect — Bearings (Installed) . . . . .	11-9	11-19
Inspect — Bearings (Removed) . . . . .	11-8	11-17
Inspect — General . . . . .	11-7	11-15
Install . . . . .	11-189	11-664
Remove . . . . .	11-188	11-658
Repair . . . . .	11-14	11-27
Rig . . . . .	11-51	11-186
Fire Extinguisher Agent Switch		
Install . . . . .	12-20	12-47
Remove . . . . .	12-19	12-45
Fire Detection and Extinguishing System . . . . .	12-12	12-26
Fire Detection Control		
Install . . . . .	12-9	12-20
Remove . . . . .	12-8	12-18
Fire Detection Sensing Element — See Element, Sensing, Fire Detection		
Fire Extinguisher (Bottle) 30402103 — See Extinguisher		

	<i>Task</i>	<i>Page</i>
Fire Extinguisher (Bottle) 892868-02 — See Extinguisher		
Fire Extinguisher Discharge Nozzle		
Install . . . . .	12-22	12-50
Remove . . . . .	12-21	12-49
Fire Pull Control — See Control, Fire Pull		
Field Manufacture Items		
Appendix E		
Fire Extinguisher, Portable		
Install . . . . .	17-3	17-5
Remove . . . . .	17-2	17-3
Flange Mounted Instruments — See Instruments		
Flap, Air Outlet, Butterfly Valve and		
Install . . . . .	13-41	13-117
Remove . . . . .	13-40	13-115
Flare Dispenser		
Install . . . . .	16-50	16-159
Remove . . . . .	16-49	16-157
Flare Dispenser System . . . . .	16-48	16-155
Test . . . . .	16-55	16-165
Flare Dispenser Relay		
Install . . . . .	16-59	16-175
Remove . . . . .	16-58	16-174
Flare Dispenser Timer		
Install . . . . .	16-57	16-173
Remove . . . . .	16-56	16-172
Flight Control Cooling Fan		
Assemble (AVIM) . . . . .	7-120	7-446
Disassemble and Inspect (AVIM) . . . . .	7-119	7-442
Install . . . . .	7-122	7-454
Remove . . . . .	7-118	7-440
Test (AVIM) . . . . .	7-121	7-452
Flight Control and Utility Hydraulic Pump Test . . . . .	7-26	7-113
Flight Control Hydraulic Pumps		
Coupling and Seal		
Install (AVIM) . . . . .	7-25	7-111
Remove and inspect (AVIM) . . . . .	7-24	7-109
Install Pump #1 . . . . .	7-27	7-115
Install Pump #2 . . . . .	7-28	7-119
Remove Pump #1 . . . . .	7-22	7-103
Remove Pump #2 . . . . .	7-23	7-106
Flight Control Hydraulic System . . . . .	7-1	7-1
Flight Control Hydraulic System, Filling and Bleeding —See Filling and Bleeding Flight Control Hydraulic System		
Flight Control Hydraulic System Flushing — See Flushing Flight Control Hydraulic System		
Flight Control Reservoir/Cooler		
Assemble (AVIM) . . . . .	7-115	7-427



	<i>Task</i>	<i>Page</i>
Bleed/Relief Valve		
Install . . . . .	7-106	7-406
Remove . . . . .	7-105	7-404
Disassemble and Inspect (AVIM) . . . . .	7-114	7-423
Install . . . . .	7-117	7-437
Relief Valve		
Install . . . . .	7-108	7-410
Remove . . . . .	7-107	7-408
Remove . . . . .	7-113	7-420
Temperature Bulb		
Install . . . . .	7-110	7-414
Remove . . . . .	7-109	7-412
Temperature Switch		
Install . . . . .	7-112	7-418
Remove . . . . .	7-111	7-416
Test . . . . .	7-116	7-430
Flight Controls . . . . .	11-1	11-1
Floodlight		
Install . . . . .	9-106	9-289
Lamp		
Replace . . . . .	9-107	9-291
Remove . . . . .	9-105	9-287
Floor, Cockpit — See Cockpit Floor		
Floor Covers, Cockpit Forward — See Cockpit Forward Floor Covers		
Floor Panel, Cockpit Aft — See Cockpit Aft Floor Panel		
Flow Divider, Powerplant Fuel		
Replace . . . . .	4-20	4-75
Flow Limiter, Power Transfer Unit Module — See Power Transfer Unit Module Flow Limiter		
Flow Test, Vent System . . . . .	10-118	10-401
Flush APU and Aft Transmission Pump Case Drains . . . . .	7-328	7-1051
Flush Cargo Door Motor Tubing . . . . .	7-326	7-1044
Flush Engine Start Pressure Tubing . . . . .	7-315	7-987
Flush Engine Start Return Tubing . . . . .	7-316	7-989
Flush External Supply Lines, Flight Control Hydraulic System — See Flush Flight Control Hydraulic System External Supply Lines		
Flush Flight Control Hydraulic System		
External Supply Lines . . . . .	7-15	7-67
Pressure Lines . . . . .	7-10	7-40
Return Lines . . . . .	7-13	7-57
Prepare For Flushing Pressure Lines . . . . .	7-9	7-34
Prepare For Flushing Return Lines . . . . .	7-12	7-51
Prepare System After Flushing Pressure Lines . . . . .	7-11	7-44
Prepare System After Flushing Return Lines . . . . .	7-14	7-61
Flush Ground Service Return Tubing . . . . .	7-327	7-1047
Flush Ground Test Pump, Hand Pump and Reservoir Pressure Tubing . . . . .	7-321	7-1008
Flush Hoist Control Pressure Tubing . . . . .	7-319	7-1001
Flush Hoist Control Return Tubing . . . . .	7-320	7-1004

	<i>Task</i>	<i>Page</i>
Flush Power Steering Pressure Tubing . . . . .	7-323	7-1026
Flush Power Steering and Wheel Brake Return Tubing . . . . .	7-324	7-1033
Flush Pressure Lines, Flight Control Hydraulic System — See Flush Flight Control Hydraulic System Pressure Lines		
Flush Ramp Control Pressure Tubing . . . . .	7-325	7-1038
Flush Return Lines, Flight Control Hydraulic System — See Flush Flight Control Hydraulic System Return Lines		
Flush Utility Pump and APU Return Tubing . . . . .	7-329	7-1055
Flush Wheel Brake Pressure Tubing . . . . .	7-322	7-1018
Flush land 2 PTU and Cargo Hook Pressure Tubing . . . . .	7-317	7-992
Flush land 2 PTU and Cargo Hook Return Tubing . . . . .	7-318	7-997
Flushing Airframe Fuel System . . . . .	10-36	10-134
Flushing Engine Fuel System . . . . .	10-37	10-147
Foldout Step		
Install . . . . .	2-175	2-479
Remove . . . . .	2-174	2-477
Formation Lights		
Aft		
Install . . . . .	9-85	9-232
Remove . . . . .	9-83	9-229
Forward		
Install . . . . .	9-84	9-230
Remove . . . . .	9-82	9-228
Former, Engine Cover		
Adjust . . . . .	4-44	4-134
Install . . . . .	4-46	4-137
Remove . . . . .	4-45	4-135
Formers, Repair . . . . .	2-18	2-59
Minor Damage . . . . .	2-19	2-107
Repairable Damage (AVIM) . . . . .	2-20	2-109
Forward Crown Fairing, Pylon — See Pylon		
Forward Crown Fairing		
Forward Engine Mounts — See Mounts Forward Engine		
Forward Fairing, Forward Transmission — See Forward Transmission		
Forward Fairing		
Forward Fuel Tank		
Boost Pump		
Install . . . . .	10-70	10-274
Remove . . . . .	10-69	10-271
Cell		
Install . . . . .	10-25	10-81
Remove . . . . .	10-24	10-77
Fuel Lines and Wiring		
Install . . . . .	10-68	10-266
Remove . . . . .	10-67	10-260
Install . . . . .	10-26	10-87
Remove . . . . .	10-23	10-72

	<i>Task</i>	<i>Page</i>
Shutoff Valve		
Install . . . . .	10-72	10-280
Remove . . . . .	10-71	10-277
Vent Assy		
Install . . . . .	10-66	10-255
Remove . . . . .	10-65	10-250
Vent Valve		
Install . . . . .	10-74	10-285
Remove . . . . .	10-73	10-283
Test After installation . . . . .	10-27	10-92
Forward Landing Gear		
Assemble . . . . .	3-5	3-14
Convert . . . . .	3-3	3-10
Disassemble . . . . .	3-4	3-12
Inspect . . . . .	3-16	3-41
Install . . . . .	3-6	3-15
Remove . . . . .	3-2	3-6
Forward Landing Gear Access Panel — See Access Panel, Forward Landing Gear		
Forward LCT Actuator Rigged — See Rigging of Forward and Aft LCT Actuator		
Forward LCT Connecting Link — See Connecting Link LCT Forward		
Forward Left or Right Connecting Links		
Clean . . . . .	11-2	11-6
Check — Bearings . . . . .	11-15	11-29
Check — Looseness . . . . .	11-6	11-12
Inspect — General . . . . .	11-7	11-15
Inspect — Bearings (Installed) . . . . .	11-9	11-19
Inspect — Bearings (Removed) . . . . .	11-8	11-17
Install . . . . .	11-195	11-697
Remove . . . . .	11-194	11-695
Repair . . . . .	11-14	11-27
Forward Left Upper Bellcrank		
Clean . . . . .	11-2	11-6
Inspect — Corrosion . . . . .	11-11	11-21
Inspect — General . . . . .	11-10	11-20
Install . . . . .	11-199	11-705
Remove . . . . .	11-198	11-703
Repair — General . . . . .	11-12	11-22
Repair — Finish . . . . .	11-13	11-24
Forward Right Upper Bellcrank		
Clean . . . . .	11-2	11-6
Inspect — Corrosion . . . . .	11-11	11-21
Inspect — General . . . . .	11-10	11-20
Install . . . . .	11-201	11-709
Remove . . . . .	11-200	11-708
Repair — General . . . . .	11-12	11-22
Repair — Finish . . . . .	11-13	11-24

	<i>Task</i>	<i>Page</i>
Forward Transmission — See Transmission, Forward		
Forward Transmission Aft Fairing		
Install . . . . .	2-68	2-248
Remove . . . . .	2-63	2-234
Forward Transmission Fairing, Repair . . . . .	2-64	2-237
Damage Requiring Replacement (AVIM) . . . . .	2-66	2-245
Minor Damage . . . . .	2-65	2-244
Forward Transmission Forward Fairing		
Install . . . . .	2-67	2-246
Remove . . . . .	2-62	2-232
Forward Swashplate — See Swashplates		
Forward Swashplate and Servocylinder Rigged — See		
Rig Forward or Aft Swashplate and		
Servocylinders		
Forward Upper Bellcranks Rigged — See Rig		
Forward Upper Bellcrank		
Fuel Boost Pump, APU		
Install . . . . .	10-98	10-353
Remove . . . . .	10-97	10-351
Fuel Cell — See Cell, Fuel		
Fuel Contamination . . . . .	10-33	10-121
Fuel Control Bleeding, Engine . . . . .	10-122	10-442
Fuel Control, Engine		
Install . . . . .	4-16	4-68
Remove . . . . .	4-15	4-65
Fuel Control, Heater		
Install . . . . .	13-63	13-160
Remove . . . . .	13-62	13-158
Fuel Control Valve and Mounting Bracket		
Install . . . . .	10-60	10-236
Remove . . . . .	10-59	10-233
Fuel Feed System . . . . .	10-120	10-412
Fuel Filter, Engine Inline		
Replace . . . . .	4-19	4-74
Fuel Flow Divider, Engine		
Replace . . . . .	4-20	4-75
Fuel Lines and Wiring		
Aft Tank		
Install . . . . .	10-78	10-297
Remove . . . . .	10-77	10-293
Forward Tank		
Install . . . . .	10-68	10-266
Remove . . . . .	10-67	10-260
Main Tank		
Install . . . . .	10-42	10-162
Remove . . . . .	10-41	10-157
Fuel Pod Panels — See Panels, Fuel Pod		

	<i>Task</i>	<i>Page</i>
Fuel Pump Relay		
Install . . . . .	10-116	10-394
Remove . . . . .	10-115	10-392
Fuel Quantity Indicating Control Unit		
Install . . . . .	8-80	8-174
Remove . . . . .	8-79	8-173
Fuel Quantity Indicating Tank Unit		
Install . . . . .	8-82	8-177
Remove . . . . .	8-81	8-175
Fuel System . . . . .	10-1	10-1
Bleeding . . . . .	10-121	10-431
Fuel System Drain Valve		
Install . . . . .	10-94	10-345
Remove . . . . .	10-93	10-343
Fuel System, Flushing Airframe . . . . .	10-36	10-134
Fuel System, Flushing Engine . . . . .	10-37	10-147
Fuel Tank Drain Valve		
Install . . . . .	10-40	10-155
Remove . . . . .	10-39	10-154
Fuel Tank Inspection, Hard Landings . . . . .	10-5	10-23
Fuel Tank Vent Fairing		
Install . . . . .	10-64	10-248
Remove . . . . .	10-63	10-246
Fuse, Ignition Unit, Heater		
Replace . . . . .	13-64	13-162
Fuselage Drain Plug		
Install . . . . .	2-215	2-586
Remove . . . . .	2-214	2-585
Fuselage and Pylon Damage, Inspection . . . . .	2-4	2-12
Fuselage Sealing . . . . .	2-324	2-858
<b>G</b>		
Gallery, Lower Anti-Icing		
Install . . . . .	4-81	4-208
Remove . . . . .	4-80	4-206
Gallery, Upper Anti-Icing		
Install . . . . .	4-83	4-212
Remove . . . . .	4-82	4-210
Gas Producer Actuator		
Install . . . . .	4-109	4-260
Remove . . . . .	4-108	4-258
Gas Producer Control Box		
Install . . . . .	4-107	4-257
Remove . . . . .	4-106	4-256
Gas Producer Control Linkage — See Linkage, Gas Producer		
Gas Producer Control System		
Adjust . . . . .	4-102	4-247

	<i>Task</i>	<i>Page</i>
Gas Producer Tachometer Indicator		
Install . . . . .	8-87	8-187
Remove . . . . .	8-86	8-185
Test . . . . .	8-8	8-21
Gearbox, Rescue Hatch Lower Door — See Rescue Hatch		
Lower Door Gearbox		
Generator, Apu — See Apu Generator		
Generator Contactor		
Install . . . . .	9-50	9-123
Remove . . . . .	9-49	9-121
Generator Control Panel		
Install . . . . .	9-36	9-94
Remove . . . . .	9-35	9-92
Generators, Main AC — See Main AC Generators		
Generators, Tachometer, No. 1 Gas Producer		
Install . . . . .	8-12	8-30
Remove . . . . .	8-9	8-23
Test . . . . .	8-11	8-27
Generator, Tachometer, No. 2 Gas Producer		
Install . . . . .	8-13	8-33
Remove . . . . .	8-10	8-25
Test . . . . .	8-11	8-27
Glass Cloth Parts, Impregnated, Repair . . . . .	2-357	2-936
Glass Windshield, Center — See Windshield, Glass, Center		
Glass Windshield, Pilot or Copilot — See Windshield, Glass, Pilot or Copilot		
Glossary		
Grip, Pitch and Roll Control Stick — See Pitch and Roll Control Stick Grip		
Grip, Thrust Control — See Thrust Control		
Grip, Winch Control — See Winch Control Grip		
Ground Device Module		
Install . . . . .	9-168	9-449
Remove . . . . .	9-167	9-447
Grounding . . . . .	1-29	1-77
<b>H</b>		
Handgrip		
Install . . . . .	2-177	2-483
Remove . . . . .	2-176	2-481
Handpump, Hydraulic		
Assemble (AVIM) . . . . .	7-138	7-519
Disassemble and Inspect (AVIM) . . . . .	7-137	7-514
Install . . . . .	7-140	7-533
Remove . . . . .	7-136	7-512
Test (AVIM) . . . . .	7-139	7-525
Hard Landings, Inspect Fuel Tanks . . . . .	10-5	10-23

	<i>Task</i>	<i>Page</i>
Harness, Hoist Operator's		
Inspect . . . . .	14-18	14-46
Harness, Shoulder — See Shoulder Harness		
Hatch, Escape, Forward Cabin — See Escape Hatch, Forward Cabin		
Hatch, Rescue, Lower Door — See Rescue Hatch Lower Door		
Head, Rotary-Wing — See Rotary-Wing Head		
Health Indicator Test (HIT) . . . . .	4-2	4-6
Heater		
Assemble (AVIM) . . . . .	13-6	13-22
Clean Parts (AVIM) . . . . .	13-4	13-15
Disassemble (AVIM) . . . . .	13-3	13-10
Drain		
Clean . . . . .	13-9	13-37
Igniter (Sparkplug)		
Install . . . . .	13-11	13-42
Remove . . . . .	13-10	13-41
Inspect Parts (AVIM) . . . . .	13-5	13-19
Install . . . . .	13-8	13-31
Remove . . . . .	13-2	13-4
Test for Air Leaks (AVIM) . . . . .	13-7	13-30
Heater Control Relay Box		
Install . . . . .	13-57	13-151
Remove . . . . .	13-54	13-144
Heater Fan — See Fan, Heater		
Heater Fan Relay		
Install . . . . .	9-54	9-131
Remove . . . . .	9-53	9-129
Heater Fuel Solenoid Valve		
Install . . . . .	13-49	13-136
Remove . . . . .	13-48	13-134
Heater Ignition Lead		
Install . . . . .	13-68	13-168
Remove . . . . .	13-67	13-167
Heater Ignition Unit		
Remove . . . . .	13-65	13-163
Install . . . . .	13-66	13-165
Hinge, Lower Cabin Door — See Cabin Door, Lower, Hinge		
Hinged Fairing, Pylon — See Work Platform, Pylon		
Hinged Fairing, Pylon Leading Edge (Clamshell Doors)		
Install . . . . .	2-281	2-723
Latch		
Install . . . . .	2-283	2-727
Remove . . . . .	2-282	2-725
Remove . . . . .	2-279	2-719
Repair . . . . .	2-280	2-721

	<i>Task</i>	<i>Page</i>
Hinges, Repair . . . . .	2-325	2-871
Hoist — See Winch		
Hoist Operator's Harness		
Inspect . . . . .	14-18	14-46
Hoist Operator's Panel		
Install . . . . .	9-157	9-424
Remove . . . . .	9-155	9-420
Repair . . . . .	9-156	9-422
Hook and Cable Assembly, Winch		
Inspect . . . . .	14-12	14-35
Install . . . . .	14-14	14-38
Remove . . . . .	14-13	14-37
Hook System, External . . . . .	16-1	16-1
Hook System Release Modes, External . . . . .	16-2	16-3
Honeycomb Structures Repair . . . . .	2-358	2-937
HIT (Health Indicator Test) . . . . .	4-2	4-6
Hoist/Cargo Hook Panel		
Assemble (AVIM) . . . . .	9-99.5	9-272.10
Disassemble (AVIM) . . . . .	9-99.4	9-272.7
Test (AVIM) . . . . .	9-996	9-272,14
Hoist Control Shutoff Valve		
Install . . . . .	7-252	7-825
Remove . . . . .	7-251	7-823
Hoist Control Valve		
Install . . . . .	7-250	7-821
Remove . . . . .	7-249	7-818
Hoist Pressure Reducing Valve		
Assemble (AVIM) . . . . .	7-257	7-835
Disassemble and inspect (AVIM) . . . . .	7-256	7-833
Install . . . . .	7-259	7-843
Remove . . . . .	7-255	7-831
Test (AVIM) . . . . .	7-258	7-838
Hoist Pressure Relief Valve		
Install . . . . .	7-254	7-829
Remove . . . . .	7-253	7-827
Hoisting . . . . .	1-35	1-105
Hoisting Unit		
Azimuth Control		
Assemble . . . . .	1-43	1-141
Disassemble . . . . .	1-42	1-138
Boom		
Assemble . . . . .	1-47	1-153
Disassemble . . . . .	1-46	1-147
Install . . . . .	1-40	1-117
Jib Boom		
Assemble . . . . .	1-44	1-144
Disassemble . . . . .	1-45	1-145
Mast		
Assemble . . . . .	1-49	1-162
Disassemble . . . . .	1-48	1-159
Remove . . . . .	1-41	1-128
Hook Release Valve		
Assemble (AVIM) . . . . .	7-263	7-853



	<i>Task</i>	<i>Page</i>
Disassemble (AVIM) . . . . .	7-261	7-847
Inspect (AVIM) . . . . .	7-262	7-849
Install . . . . .	7-265	7-859
Remove . . . . .	7-260	7-845
Test (AVIM) . . . . .	7-264	7-855
Horizontal Hinge Pin — See Pin, Horizontal Hinge		
Horizontal Hinge Pin Bearings — See Bearings, Horizontal Hinge Pin		
Horizontal Hinge Pin Bearing Cap — See Cap, Horizontal Hinge Pin Bearing		
Horizontal Hinge Pin Oil Seals — See Seals, Oil, Horizontal Hinge Pin		
Horizontal Situation Indicator		
Install . . . . .	8-91	8-197
Remove . . . . .	8-90	8-195
Repair . . . . .	8-48	8-105
Hot Air Valve, Engine Fairing		
Install . . . . .	4-79	4-204
Remove . . . . .	4-78	4-202
Housing, Pitch Varying		
Install (AVIM) . . . . .	5-23	5-90
Remove (AVIM) . . . . .	5-22	5-87
How To Use This Manual		
HSI Mode Select Panel — See Mode Select Panel, HSI		
Hub Oil Tank Sight Indicator — See Sight Indicator, Hub Oil Tank		
Hydraulic Maintenance Panel — See Panel, Hydraulic Maintenance		
Hydraulic Pressure Indicator		
Install . . . . .	8-101	8-226
Remove . . . . .	8-100	8-216
Test . . . . .	8-83	8-179
Hydraulic Pump Drive Shaft Seal		
No. 1 Flight Control Pump		
Install . . . . .	7-25	7-111
Remove . . . . .	7-24	7-109
No. 2 Flight Control Pump		
Install . . . . .	7-25	7-111
Remove . . . . .	7-24	7-109
Utility Pump		
Install . . . . .	7-25	7-111
Remove . . . . .	7-24	7-109
Hydraulic Reservoir Level Indicator		
Install . . . . .	8-101	8-226
Remove . . . . .	8-100	8-216
Test . . . . .	8-84	8-180
Hydraulic System Components		
Inspection — General . . . . .	7-1.1	7-6.1
Hydraulic System Contamination, Inspect or . . . . .	7-8	7-32
Hydraulic System, Flight Control — See Flight Control Hydraulic System		

	<i>Task</i>	<i>Page</i>
Hydraulic System Leakage, General . . . . .	7-7	7-31
Hydraulic System Plumbing		
Inspect, General . . . . .	7-2	7-7
Install, General . . . . .	7-4	7-10
Remove, General . . . . .	7-3	7-8
Repair, Permaswage . . . . .	7-5	7-12
Hydraulic Temperature Indicator		
Install . . . . .	8-101	8-226
Remove . . . . .	8-100	8-216
Test . . . . .	8-85	8-183
I		
Idler Arms and Bellcranks Flight Control System,		
Inspect . . . . .	11-10	11-20
Idler Bellcrank Aft Fuselage		
Clean . . . . .	11-2	11-6
Inspect — Corrosion . . . . .	11-11	11-21
Inspect — General . . . . .	11-10	11-20
Install . . . . .	11-247	11-849
Remove . . . . .	11-246	11-847
Repair — General . . . . .	11-12	11-22
Repair — Finish . . . . .	11-13	11-24
Rig . . . . .	11-57	11-221
Idler Control Tunnel — See Tunnel Control Idler		
Igniter (Sparkplug), Heater		
Install . . . . .	13-11	13-42
Remove . . . . .	13-10	13-41
Ignition Switch		
Install . . . . .	4-101	4-245
Remove . . . . .	4-100	4-243
Ignition Unit, Heater		
Fuse		
Replace . . . . .	13-64	13-162
Install . . . . .	13-66	13-165
Lead, Shielded		
Install . . . . .	13-68	13-168
Remove . . . . .	13-67	13-167
Remove . . . . .	13-65	13-163
ILCA Intermediate Connecting Links		
Check — Bearings . . . . .	11-15	11-29
Check — Looseness . . . . .	11-6	11-12
Inspect — General . . . . .	11-7	11-15
Inspect — Bearings (installed) . . . . .	11-9	11-19
Inspect — Bearings (Removed) . . . . .	11-8	11-17
Install . . . . .	11-179	11-627
Remove . . . . .	11-178	11-626
Repair . . . . .	11-14	11-27
Indicator, Attitude		
Install . . . . .	8-91	8-197
Remove . . . . .	8-90	8-195

	<i>Task</i>	<i>Page</i>
Repair .....	8-55	8-112
Test .....	8-56	8-113
Indicator, Cyclic Trim		
Install .....	8-87	8-187
Remove .....	8-86	8-185
Test .....	8-43	8-97
Indicator, Dual Torque		
Install .....	8-89	8-192
Remove .....	8-88	8-190
Test (AVIM) .....	8-19	8-43
Indicator, Engine Oil Pressure		
Install .....	8-87	8-187
Remove .....	8-86	8-185
Test .....	8-14	8-36
Indicator, Engine Oil Temperature		
Install .....	8-87	8-187
Remove .....	8-86	8-185
Test .....	8-17	8-40
Indicator, Filter, Utility Pressure Control Module		
Install .....	7-159	7-580
Remove .....	7-158	7-578
Indicator, Filter, Utility Return Control Module		
Install .....	7-199	7-672
Remove .....	7-198	7-670
Indicator, Free Air Temperature		
Install .....	8-96	8-208
Remove .....	8-94	8-205
Test .....	8-95	8-207
Indicator, Horizontal Situation		
Install .....	8-91	8-197
Remove .....	8-90	8-195
Repair .....	8-48	8-105
Indicator, Hydraulic Pressure		
Install .....	8-101	8-226
Remove .....	8-100	8-216
Test .....	8-83	8-179
Indicator, Hydraulic Reservoir Level		
Install .....	8-101	8-226
Remove .....	8-100	8-216
Test .....	8-84	8-180
Indicator, Hydraulic Temperature		
Install .....	8-101	8-226
Remove .....	8-100	8-216
Test .....	8-85	8-183
Indicator, Power Turbine Inlet Temperature (PTIT)		
Install .....	8-87	8-187
Remove .....	8-86	8-185
Test .....	8-2	8-9

	<i>Task</i>	<i>Page</i>
Indicator, Pump Fail, Utility Return Control Module		
Install . . . . .	7-205	7-684
Remove . . . . .	7-204	7-682
Indicator, Tachometer, Gas Producer		
Install . . . . .	8-87	8-187
Remove . . . . .	8-86	8-185
Test . . . . .	8-8	8-21
Indicator, Transmission Oil Pressure		
Install . . . . .	8-87	8-187
Remove . . . . .	8-86	8-185
Test (AVIM) . . . . .	8-58	8-125
Indicator, Transmission Oil Temperature		
Install . . . . .	8-87	8-187
Remove . . . . .	8-86	8-185
Test (AVIM) . . . . .	8-73	8-156
Indicator, Turn and Slip		
Install . . . . .	8-45	8-100
Remove . . . . .	8-44	8-98
Inertia Reel, Pilot or Copilot Shoulder Harness		
Control		
Install . . . . .	2-124	2-373
Remove . . . . .	2-123	2-372
Install . . . . .	2-122	2-370
Lever Throw		
Adjust . . . . .	2-125	2-375
Remove . . . . .	2-117	2-362
Strap		
Install . . . . .	2-121	2-368
Remove . . . . .	2-120	2-366
Test . . . . .	2-116	2-360
Inertia Switch, Emergency Light		
Install . . . . .	17-12	17-25
Remove . . . . .	17-11	17-24
Inlet Duct, Air, Heater		
Install . . . . .	13-19	13-58
Remove . . . . .	13-18	13-56
Insert, Screw-Thread, Replacement . . . . .	1-16	1-22
Inspect Cockpit Windows. . . . .	2-54	2-215
Inserts, Threaded, Fwd and Aft Cargo Hook		
Install (AVIM) . . . . .	16-26	16-76
Remove (AVIM) . . . . .	16-25	16-74
Inspect Arms Idler and Bellcranks . . . . .	11-10	11-20
Inspect Bellcranks and Idler Arms Flight Control System . . . . .	11-10	11-20
Inspect Bearings, Rod-End, Connecting Links Adjust or Fixed (installed) . . . . .	11-9	11-19
Inspect Bearing Rod-End Connecting Links Adjust or Fixed (Removed) . . . . .	11-8	11-17
Inspect Fuel Tanks . . . . .	10-4	10-18

	<i>Task</i>	<i>Page</i>
Inspection . . . . .	1-92	1-287
Inspection, Lightning Strike . . . . .	2-5	2-13
Inspect Skin, Oil Can — See Skin Inspection, Oil Can		
Inspect Windshields . . . . .	2-41	2-177
Installation of AN Bolts for AN Rivets — See Bolts, AN, Installation for AN Rivets		
Instrument Panel — See Panel, Instrument		
Instrument Transformer		
Install . . . . .	9-46	9-115
Remove . . . . .	9-45	9-113
Instruments		
Clamp Mounted, Center Panel		
Install . . . . .	8-87	8-187
Remove . . . . .	8-86	8-185
Clamp Mounted, Pilot/Copilot Panel		
Install . . . . .	8-89	8-192
Remove . . . . .	8-88	8-190
Flange Mounted, Pilot/Copilot Panel		
Install . . . . .	8-91	8-197
Remove . . . . .	8-90	8-195
Instruments, Engine . . . . .	8-1	8-1
Instruments, Flight . . . . .	8-23	8-51
Instruments, Hydraulic Maintenance Panel		
Install . . . . .	8-98	8-212
Remove . . . . .	8-97	8-210
Instruments, Miscellaneous . . . . .	8-57	8-115
Integrated Lower Control Actuator (ILCA)		
Check Valve		
Install (AVIM) . . . . .	7-94	7-283
Remove (AVIM) . . . . .	7-93	7-282
Cross Feedback Transducer		
Adjust (AVIM) . . . . .	7-100	7-388
Adjust on Helicopter . . . . .	7-99	7-384
Install (AVIM) . . . . .	7-102	7-395
Jam Sensor		
Install (AVIM) . . . . .	7-90	7-275
Remove (AVIM) . . . . .	7-89	7-273
Relief Valve		
Install (AVIM) . . . . .	7-92	7-279
Remove (AVIM) . . . . .	7-91	7-277
Remove . . . . .	7-84	7-259
Self Feedback Transducer		
Adjust . . . . .	7-101	7-392
Install (AVIM) . . . . .	7-88	7-271
Remove (AVIM) . . . . .	7-87	7-269
Test (AVIM) . . . . .	7-87	7-317
Interior/Exterior Metal Structures, Final Finish . . . . .	2-352	2-913
Interior Structures Detail or Repair Parts, Finish — See Finish Interior Structures Detail or Repair Parts		

	<i>Task</i>	<i>Page</i>
Inventory . . . . .	1-109	1-345
Isolation Panel, Fuel Tank		
Install . . . . .	2-192	2-524
Remove . . . . .	2-191	2-522

**J**

Jacking		
Aft End . . . . .	1-24	1-66
Entire Helicopter . . . . .	1-21	1-54
Forward Fuselage Jack Pad . . . . .	1-22	1-60
Forward Landing Gear . . . . .	1-23	1-65
Jam Sensor, Integrated Lower Control Actuator (ILCA) —		
See Integrated Lower Control Actuator Jam Sensor		
Jet Pump, Fuel		
Install . . . . .	10-48	10-186
Remove . . . . .	10-47	10-183
Jet Pump Motive Flow		
Check Valve		
Install . . . . .	10-50	10-191
Remove . . . . .	10-49	10-189
Jettisonable Door Connecting Links		
Clean . . . . .	2-87	2-284
Install . . . . .	2-92	2-300
Remove . . . . .	2-91	2-299
Jettisonable Door Lower Fixed Window		
Install . . . . .	2-104	2-328
Remove . . . . .	2-103	2-327
Jettisonable Door, Pilot or Copilot		
Install and Adjust . . . . .	2-90	2-292
Install Without Adjustment . . . . .	2-89	2-288
Remove . . . . .	2-86	2-283
Repair . . . . .	2-88	2-286
Test . . . . .	2-85	2-277
Jettisonable Door Sliding Window		
Adjust . . . . .	2-98	2-313
Bushings . . . . .	2-95	2-305
Replace		
Install . . . . .	2-97	2-310
Locking Mechanism		
Install . . . . .	2-100	2-320
Remove . . . . .	2-99	2-317
Panel		
Install . . . . .	2-96	2-306
Remove . . . . .	2-94	2-303
Remove . . . . .	2-93	2-301
Test . . . . .	2-105	2-329

	<i>Task</i>	<i>Page</i>
Jettisonable Door Upper Fixed Window		
Install . . . . .	2-102	2-325
Remove . . . . .	2-101	2-323
<b>K</b>		
Keeper, Fwd and Aft Cargo Hook		
Install . . . . .	16-22	16-54
Remove . . . . .	16-21	16-53
<b>L</b>		
Lamp, Fire Pull Handle		
Replace . . . . .	12-14	12-37
Landing Gear . . . . .	3-1	3-1
Landing Gear, Aft — See Aft Landing Gear		
Landing Gear, Fwd — See Fwd Landing Gear		
Landing Light		
Assemble (AVIM) . . . . .	9-77	9-213
Disassemble (AVIM) . . . . .	9-70	9-190
Extend Gearbox		
Assemble (AVIM) . . . . .	9-76	9-209
Disassemble (AVIM) . . . . .	9-71	9-195
Install . . . . .	9-79	9-220
Lamp		
Install . . . . .	9-81	9-226
Remove . . . . .	9-80	9-224
Motor		
Assemble (AVIM) . . . . .	9-74	9-202
Disassemble (AVIM) . . . . .	9-73	9-200
Remove . . . . .	9-69	9-187
Rotating Mechanism		
Assemble (AVIM) . . . . .	9-75	9-205
Disassemble (AVIM) . . . . .	9-72	9-197
Test and Adjust (AVIM) . . . . .	9-78	9-217
LCT Actuator Aft — See Actuator LCT Aft		
LCT Actuator Forward — See Actuator LCT Forward		
LCT Yoke Forward — See Yoke LCT Forward		
Lead/Lag Tool		
Install . . . . .	11-30	11-70
Remove . . . . .	11-31	11-72
Lead, Shielded, Heater Ignition Unit		
Install . . . . .	13-68	13-168
Remove . . . . .	13-67	13-167
Leakage, Hydraulic System — See Hydraulic System Leakage		
Left Upper Pylon Connecting Link —		
See Connecting Link Left Upper Pylon		
Leaks, Check Windshield or Window . . . . .	2-61	2-230
Lever, Manual Release, Fwd and Aft Cargo Hook		
Install . . . . .	16-41	16-141
Remove . . . . .	16-36	16-131

	<i>Task</i>	<i>Page</i>
Lever Throw, Inertia Reel, Pilot or Copilot Shoulder Harness — See Inertia Reel, Pilot or Copilot Shoulder Harness, Lever Throw		
Light, Emergency Power		
Install . . . . .	8-4	8-15
Lamp		
Replace . . . . .	8-5	8-17
Remove . . . . .	8-3	8-13
Link Aft LCT		
Check — Bearings . . . . .	11-15	11-29
Check — Looseness . . . . .	11-6	11-12
Inspect — General . . . . .	11-7	11-15
Inspect — Bearings (Installed) . . . . .	11-9	11-19
Inspect — Bearings (Removed) . . . . .	11-8	11-17
Install . . . . .	11-225	11-778
Remove . . . . .	11-222	11-769
Repair . . . . .	11-14	11-27
Link Connecting — See Connecting Link Flight Control System		
Link Connecting Rod-End Bearing Adjustor		
Fixed (Installed),Inspect . . . . .	11-9	11-19
Link, Drag, Lower, Aft Landing Gear —See Lower Dragline, Aft Landing		
Link, Drag, Upper, Aft Landing Gear — See Upper Dragline, Aft Landing Gear		
Link, Extensible — See Extensible Link		
Link Dummy, DASH Actuator — See DASH Actuator Dummy Link		
Link LCT Lower Fitting Bearing		
Clean . . . . .	11-2	11-6
Check — Bearings . . . . .	11-15	11-29
Check — Looseness . . . . .	11-6	11-12
Inspect — General . . . . .	11-7	11-15
Inspect — Bearing (Installed) . . . . .	11-9	11-19
Inspect — Bearing (Removed) . . . . .	11-8	11-17
Install (AVIM) . . . . .	11-224	11-775
Remove (AVIM) . . . . .	11-223	11-773
Repair . . . . .	11-14	11-27
Link LCT Rod End Bearing—See Bearing Rod End LCT Link		
Linkage Aft Cabin and Pylon Rigged — See Rig Aft Cabin and Pylon Linkage		
Linkage Bearing Flight Control System, Check . . . . .	11-15	11-29
Linkage, Gas Producer Control		
Inspect Rod . . . . .	4-115	4-273
Install and Rig . . . . .	4-113	4-265
Install Rod . . . . .	4-117	4-275
Repair Rod . . . . .	4-116	4-274
Remove . . . . .	4-112	4-263
Remove Rod . . . . .	4-114	4-271



	<i>Task</i>	<i>Page</i>
Linkage, Power Turbine Control		
Inspect Rod . . . . .	4-133	4-311
Install and Rig . . . . .	4-140	4-322
Install Rod . . . . .	4-135	4-313
Repair Rod . . . . .	4-134	4-312
Remove . . . . .	4-136	4-315
Remove Rod . . . . .	4-132	4-309
Links, Apu Aft Mount Connecting		
Inspect . . . . .	15-5	15-24
Install . . . . .	15-7	15-30
Remove . . . . .	15-6	15-26
Links Connecting Flight Control System, Inspect . . . . .	11-7	11-15
Links, Connecting, Jettisonable Door — See Jettisonable Door Connecting Links		
Links Connecting Pitch Intermediate — See Connecting Links Pitch Intermediate		
Links Connecting Rod-End Bearings Adjust or Fixed (Removed), Inspect . . . . .	11-8	11-17
Links Connecting Roll Intermediate — See Connecting Links Roll Intermediate		
Links Connecting Transfer — See Cockpit Control Transfer Connecting Links		
Links Connecting Thrust Intermediate — See Connecting Links Thrust Intermediate		
Links, Rescue Hatch Lower Door — See Rescue Hatch Lower Door Links		
Light, Anticollision — See Anticollision Light		
Light, Cabin/Ramp Dome — See Cabin/ Ramp Dome Light		
Light, Cockpit Dome — See Cockpit Dome Light		
Light, Emergency Exit		
Assemble . . . . .	17-6	17-12
Batteries		
Charge . . . . .	17-7	17-16
Disassemble . . . . .	17-5	17-9
Install . . . . .	17-8	17-18
Panel and Pan		
Install . . . . .	17-10	17-22
Remove . . . . .	17-9	17-20
Remove . . . . .	17-4	17-7
Light, Landing — See Landing Light		
Light, Oil Level Check — See Oil Level Check Light		
Light, Side Position — See Side Position Light		
Light, Tail Position — See Tail Position Light		
Light, Utility — See Utility Light		
Lighting System . . . . .	9-60	9-149
Lighting Transformer, 26V		
Install . . . . .	9-62	9-174
Remove . . . . .	9-61	9-172

	<i>Task</i>	<i>Page</i>
Lightning Strike, Inspection . . . . .	2-5	2-13
Lights, Formation — See Formation Lights		
Limit Switches, Winch		
Adjust (AVIM) . . . . .	14-3	14-5
Litter Provisions . . . . .	16-60	16-177
Litters		
Bracket		
Install . . . . .	16-64	16-183
Remove . . . . .	16-63	16-182
Stanchion		
Install . . . . .	16-62	16-180
Remove . . . . .	16-61	16-178
Strap		
Install . . . . .	16-66	16-185
Remove . . . . .	16-65	16-184
Lock Mechanism, Static, Aft Landing Gear — See Static Lock Mechanism, Aft Landing Gear		
Lock, Swivel, Aft Landing Gear		
Locking Mechanism, Jettisonable Door Sliding Window — See Jettisonable Door Sliding Window Locking Mechanism		
Locks, Security . . . . .	1-28	1-74
Longeron Repair, Right Lower (AVIM) . . . . .	2-32	2-153
Longerons, Repair . . . . .	2-21	2-110
Minor Damage . . . . .	2-22	2-111
Reparable Damage (AVIM) . . . . .	2-23	2-114
Lower Access Door Engine		
Repair (General Information). . . . .	4-60	4-160
Repair (Major Damage) . . . . .	4-62	4-163
Repair (Minor Damage) . . . . .	4-61	4-161
Lower Controls Actuator Structural Manifold		
Install . . . . .	7-104	7-401
Remove . . . . .	7-103	7-398
Lower Controls Module		
Install . . . . .	7-79	7-249
Pressure Reducer		
Install . . . . .	7-83	7-257
Remove . . . . .	7-82	7-255
Remove . . . . .	7-78	7-247
Solenoid Valve		
Install . . . . .	7-81	7-253
Remove . . . . .	7-80	7-251
Lower Drag Link Aft Landing Gear		
Assemble (AVIM) . . . . .	3-47	3-97
Disassemble (AVIM) . . . . .	3-44	3-93
Inspect Parts (AVIM) . . . . .	3-45	3-94
Install . . . . .	3-48	3-99
Remove . . . . .	3-43	3-91
Repair Parts (AVIM) . . . . .	3-46	3-96

	<i>Task</i>	<i>Page</i>
Lubricate Bearing Rod-End, Flight Control System . . . . .	11-3	11-7
Lubrication		
Drive Shaft Bearings . . . . .	1-89	1-278
Landing Gear . . . . .	1-88	1-275
Swashplate . . . . .	1-90	1-280
Lubrication Chart . . . . .	1-87	1-273
Lubrication Fitting, Fwd Landing Gear		
Install . . . . .	3-24	3-51
Remove . . . . .	3-23	3-50
<b>M</b>		
Main AC Generators		
Install . . . . .	9-32	9-79
Remove . . . . .	9-31	9-77
Main Current Transformer		
Install . . . . .	9-40	9-102
Remove . . . . .	9-39	9-100
Main Fuel Tank		
Aft Boost Pump and Check Valve		
Install . . . . .	10-54	10-208
Remove . . . . .	10-53	10-203
Cell		
Install . . . . .	10-20	10-55
Remove . . . . .	10-7	10-33
Forward Boost Pump and Check Valve		
Install . . . . .	10-52	10-198
Remove . . . . .	10-51	10-193
Fuel Lines and Wiring		
Install . . . . .	10-42	10-162
Remove . . . . .	10-41	10-157
Inspect . . . . .	10-4	10-8
Install . . . . .	10-21	10-61
Jet Pump		
Install . . . . .	10-48	10-186
Remove . . . . .	10-47	10-183
Jet Pump Motive Flow Check Valve		
Install . . . . .	10-50	10-191
Remove . . . . .	10-49	10-189
Remove . . . . .	10-6	10-28
Servicing Check Valve, No. 1 System		
Install . . . . .	10-90	10-334
Remove . . . . .	10-89	10-331
Servicing Check Valve, No. 2 System		
Install . . . . .	10-92	10-340
Remove . . . . .	10-91	10-337
Shutoff Valve, No. 1 System		
Install . . . . .	10-56	10-220
Remove . . . . .	10-55	10-215

	<i>Task</i>	<i>Page</i>
Shutoff Valve, No. 2 System		
Install . . . . .	10-58	10-229
Remove . . . . .	10-57	10-225
Suction Feed Check Valve		
Install . . . . .	10-62	10-242
Remove . . . . .	10-61	10-240
Test After installation . . . . .	10-22	10-67
Vent Assy		
Install. . . . .	10-44	10-173
Remove . . . . .	10-43	10-167
Vent Valve		
Install . . . . .	10-46	10-181
Remove . . . . .	10-45	10-179
Magnetic Compass		
Install . . . . .	8-47	8-105
Remove . . . . .	8-46	8-104
Magnesium Alloy Parts, Finish (Inorganic Surface Treatment) — See Finish Magnesium Alloy Parts (Inorganic Surface Treatment)		
Maintenance Allocation Chart (MAC) Appendix B		
Maintenance Crane — See Hoisting Unit		
Manifold, Hydraulic Structural Lower Controls		
Install . . . . .	7-104	7-401
Remove . . . . .	7-103	7-398
Manual Release, Fwd and Aft Cargo Hook		
Bellcrank		
Install . . . . .	16-40	16-139
Remove . . . . .	16-37	16-133
Cable, External		
Install . . . . .	16-33	16-120
Remove . . . . .	16-32	16-118
Cable, Interior		
Install . . . . .	16-35	16-126
Remove . . . . .	16-34	16-123
Lever		
Install . . . . .	16-41	16-141
Remove . . . . .	16-36	16-131
Mount		
Install . . . . .	16-39	16-137
Remove . . . . .	16-38	16-135
Manual Valve, Defueling		
Install . . . . .	10-110	10-377
Remove . . . . .	10-109	10-375
Master Caution Panel		
Assemble (AVIM) . . . . .	9-130	9-351
Disassemble (AVIM) . . . . .	9-129	9-348

	<b>Task</b>	<b>Page</b>
Install . . . . .	9-131	9-355
Lamp		
Install . . . . .	9-127	9-345
Remove . . . . .	9-126	9-344
Remove . . . . .	9-128	9-346
Test (AVIM) . . . . .	9-1301	9-3541
Materials, Expendable . . . . .	1-18	1-31
Mid Crown Fairing, Pylon — See Pylon		
Mid Crown Fairing		
Minimum Rotor Rpm, Adjustment . . . . .	4-129	4-301
Minor Damage, Classification Of . . . . .	2-6	2-14
Minor Damage Removal, Extrusions — See Extrusions,		
Minor Damage Removal		
Mirror, Rearview, Cockpit		
Install . . . . .	2-137	2-399
Remove . . . . .	2-136	2-398
Miscellaneous Electric . . . . .	9-125	9-342
Mixing Assembly First Stage — See First		
Stage Mixing Assembly		
Mixing Assembly Second Stage — See Second		
Stage Mixing Assembly		
Mixing Linkage Connecting Links		
Clean . . . . .	11-2	11-6
Check — Looseness . . . . .	11-6	11-12
Check — Bearings . . . . .	11-15	11-29
Inspect — General . . . . .	11-7	11-15
Inspect — Bearings (Installed) . . . . .	11-9	11-19
Inspect — Bearings (Removed) . . . . .	11-8	11-17
Install . . . . .	11-187	11-649
Remove . . . . .	11-186	11-643
Repair . . . . .	11-14	11-27
Mode Select Panel, HSI		
Install . . . . .	8-91	8-197
Remove . . . . .	8-90	8-195
Repair . . . . .	8-49	8-106
Test . . . . .	8-50	8-107
Module, APU Start		
Accumulator 60910		
Assemble (AVIM) . . . . .	7-176	7-618
Disassemble (AVIM) . . . . .	7-174	7-613
Install . . . . .	7-178	7-626
Remove . . . . .	7-172	7-608
Test (AVIM) . . . . .	7-177	7-620
Accumulator HP1323100		
Assemble (AVIM) . . . . .	7-175	7-615
Disassemble (AVIM) . . . . .	7-173	7-611
Install . . . . .	7-178	7-626
Remove . . . . .	7-172	7-608
Test (AVIM) . . . . .	7-177	7-620

	<i>Task</i>	<i>Page</i>
Remove . . . . .	7-185	7-640
Valve, Check and Depressurizing		
Install . . . . .	7-184	7-638
Remove . . . . .	7-183	7-636
Valve, Pilot		
Install . . . . .	7-182	7-634
Remove . . . . .	7-181	7-632
Valve, Start		
Install . . . . .	7-180	7-630
Remove . . . . .	7-179	7-628
Module, Fill — See Fill Module		
Module, Ground Device — See Ground Device Module		
Module, Lower Controls — See Lower Controls		
Module, No. 1 or No. 2		
Module, Power Control — See Power Control Module		
Module, Power Transfer Unit — See Power Transfer		
Unit Module, No. 1 or No. 2		
Module, Pressure Control		
Filter		
Install . . . . .	7-157	7-576
Remove . . . . .	7-156	7-573
Indicator, Filter		
Install . . . . .	7-159	7-580
Remove . . . . .	7-158	7-578
Module, Pressure Control		
Filter		
Install . . . . .	7-157	7-576
Remove . . . . .	7-156	7-573
Indicator, Filter		
Install . . . . .	7-159	7-580
Remove . . . . .	7-158	7-578
Install . . . . .	7-153	7-566
Remove . . . . .	7-152	7-563
Transmitter, Pressure		
Install . . . . .	7-169	7-602
Remove . . . . .	7-168	7-600
Valve, High Pressure Relief		
Install . . . . .	7-165	7-594
Remove . . . . .	7-164	7-592
Valve, PTU		
Install . . . . .	7-171	7-606
Remove . . . . .	7-170	7-604
Valves, Check		
Install . . . . .	7-167	7-598
Remove . . . . .	7-166	7-596
Valves, Engine Start		
Install . . . . .	7-155	7-571
Remove . . . . .	7-154	7-569

	<i>Task</i>	<i>Page</i>
Valves, Pilot		
Install . . . . .	7-161	7-585
Remove . . . . .	7-160	7-582
Valves, Three-Way		
Install . . . . .	7-163	7-590
Remove . . . . .	7-162	7-587
Module, Terminal Board — See Terminal Board Module		
Module, Utility Return Control		
Element, Filter		
Install . . . . .	7-195	7-664
Remove . . . . .	7-194	7-661
Indicator, Filter		
Install . . . . .	7-199	7-672
Remove . . . . .	7-198	7-670
Indicator, Pump Fail		
Install . . . . .	7-205	7-684
Remove . . . . .	7-204	7-682
Install . . . . .	7-188	7-647
Remove . . . . .	7-187	7-644
Transfer Cylinder		
Assemble (AVIM) . . . . .	7-191	7-653
Disassemble (AVIM) . . . . .	7-190	7-652
Install . . . . .	7-193	7-659
Remove . . . . .	7-189	7-649
Test (AVIM) . . . . .	7-192	7-655
Valve, Check, Transfer Cylinder		
Install . . . . .	7-203	7-680
Remove . . . . .	7-202	7-678
Valve, Filter Bypass		
Install . . . . .	7-197	7-668
Remove . . . . .	7-196	7-666
Valves, Filter Check		
Install . . . . .	7-201	7-676
Remove . . . . .	7-200	7-674
Monitor, External Power — External Power Monitor		
Mooring		
Handstand . . . . .	1-26	1-70
Unpaved Area . . . . .	1-27	1-72
Motor, Power Transfer Unit Module — See Power Transfer Unit Module Motor		
Motor Pump, APU		
Coupling and Seal		
Install (AVIM) . . . . .	7-145	7-545
Remove and Inspect (AVIM) . . . . .	7-144	7-543
Install . . . . .	7-147	7-550
Remove . . . . .	7-143	7-540
Test (AVIM) . . . . .	7-146	7-548
Motor Winch — See Winch Motor		

	<i>Task</i>	<i>Page</i>
Motor Cargo Door Actuator — See Cargo Door Actuator Motor		
Module Assy Power Steer/Swivel — See Power Steer/Swivel Lock Module		
Motor, Trim or Servo (CCD), Inspect . . . . .	11-156	11-566
Motor, Windshield Wiper		
Brushes		
Replaces (AVIM) . . . . .	12-43	12-90
Install . . . . .	12-45	12-96
Remove . . . . .	12-42	12-88
Test . . . . .	12-44	12-93
Module Accumulator Power Steering/Swivel Lock — See Power Steering/Swivel Lock Module Accumulator		
Motor, Winch		
Install . . . . .	7-248	7-816
Remove . . . . .	7-247	7-814
Mount, Aft Drive Shafting		
Inspect . . . . .	6-13	6-35
Install . . . . .	6-27	6-70
Remove . . . . .	6-26	6-69
Mount, Forward Drive Shafting		
Inspect . . . . .	6-13	6-35
Install . . . . .	6-15	6-39
Remove . . . . .	6-14	6-36
Mount, Manual Release, Fwd and Aft Cargo Hook		
Install . . . . .	16-39	16-137
Remove . . . . .	16-38	16-135
Mounds, Engine Aft		
Inspect . . . . .	4-37	4-115
Install . . . . .	4-39	4-119
Remove . . . . .	4-36	4-113
Repair . . . . .	4-38	4-117
Mounds, Engine Forward		
Inspect . . . . .	4-28	4-86
Install Adapter . . . . .	4-35	4-107
Install Cap Assy . . . . .	4-34	4-103
Remove Adapter . . . . .	4-29	4-89
Remove Cap Assy . . . . .	4-27	4-82
Repair Adapter and Cap . . . . .	4-32	4-96
Repair Lugs . . . . .	4-31	4-95
Repair Structure . . . . .	4-30	4-94
Replace Lug Bushings . . . . .	4-33	4-98
<b>N</b>		
Neutral Rig Check . . . . .	11-33	11-81
Nonmetallic Parts, Finish Organic . . . . .	2-353	2-932
Nose Access Door		
Install . . . . .	2-144	2-416



	<i>Task</i>	<i>Page</i>
Remove . . . . .	2-138	2-400
Repair . . . . .	2-141	2-407
Nose Bubble Window Panel		
Install . . . . .	2-60	2-228
Prepare for Installation . . . . .	2-59	2-225
Remove . . . . .	2-58	2-223
Nozzle, Defroster, Jettisonable Door Window		
Install . . . . .	13-35	13-97
Remove . . . . .	13-34	13-95
Nozzle, Discharge, Fire Extinguisher		
Install . . . . .	12-22	12-50
Remove . . . . .	12-21	12-49
Nuts, Washers, or Cotter Pins, Use Of . . . . .	2-334	2-890
<b>O</b>		
Oil, MIL-L-7808		
Change to MIL-L-23699 . . . . .	4-91	4-225
Oil, MIL-L-23699		
Change to MIL-L-7808 . . . . .	4-91	4-225
Oil Change Requirements . . . . .	1-87	1-273
Oil Cooler Assembly, Aft Transmission		
Fan		
Assemble . . . . .	6-143	6-397
Disassemble . . . . .	6-142	6-393
Install . . . . .	6-144	6-402
Remove . . . . .	6-141	6-391
Repair . . . . .	6-142.1	6-396.1
Repair . . . . .	6-147	6-412
Fan Duct Replacement . . . . .		
Oil Cooler		
Install . . . . .	6-146	6-408.4
Remove . . . . .	6-145	6-405
Outside Surface		
Repair . . . . .	6-145.1	6-408.1
Oil Cooler Assembly, Combining Transmission		
Fan		
Assemble (AVIM) . . . . .	6-184	6-483
Disassemble (AVIM) . . . . .	6-183	6-480
Install . . . . .	6-186	6-491
Remove . . . . .	6-182	6-478
Repair . . . . .	6-183.1	6-482.1
Fan Drive Shaft		
Inspect Snubber . . . . .	6-185	6-489
Install . . . . .	6-186	6-491
Remove . . . . .	6-182	6-478
Oil Cooler		
Install . . . . .	6-188	6-497
Remove . . . . .	6-187	6-494
Outside Surface		
Repair . . . . .	6-187.1	6-482.1
Oil Cooler, Engine		
Replace . . . . .	4-96	4-237

	<i>Task</i>	<i>Page</i>
Oil Cooler, Engine Transmission		
Install (Left) . . . . .	6-215	6-559
Install (Right) . . . . .	6-216	6-561
Remove (Left) . . . . .	6-214	6-556
Remove (Right) . . . . .	6-213	6-554
Repair Outside Surface . . . . .	6-214.1	6-558.1
Oil Cooler Assembly, Forward Transmission		
Air Inlet Duct		
Install . . . . .	6-122	6-353
Remove . . . . .	6-121	6-351
Diffuser		
Install . . . . .	6-120	6-347
Remove . . . . .	6-119	6-343
Fan Assembly		
Repair . . . . .	6-114.1	6-334.1
Impeller		
Install . . . . .	6-118	6-340
Remove . . . . .	6-117	6-337
Oil Cooler		
Install . . . . .	6-114	6-332.4
Remove . . . . .	6-113	6-330
Outside Surface		
Repair . . . . .	6-113.1	6-332.1
Shroud		
Install . . . . .	6-116	6-335
Remove . . . . .	6-115	6-334.4
Oil Filler, Engine		
Install . . . . .	4-99	4-241
Remove . . . . .	4-98	4-239
Oil Filter Strainer Element, Engine		
Replace . . . . .	4-97	4-238
Oil Level Check Light		
Install . . . . .	9-93	9-254
Remove . . . . .	9-92	9-251
Switch		
Install . . . . .	9-95	9-259
Remove . . . . .	9-94	9-257
Oil Manifold Tube, Vertical Hinge Pin		
Install (AVIM) . . . . .	5-31	5-115
Remove (AVIM) . . . . .	5-30	5-113
Oil Pump, Engine		
Install No. 1 . . . . .	4-93	4-229
Install No. 2 . . . . .	4-95	4-235
Remove No. 1 . . . . .	4-92	4-226
Remove No. 2 . . . . .	4-94	4-233
Oil Pump, Transmission, Auxiliary		
Aft Transmission		
Install . . . . .	6-153	6-425
Remove . . . . .	6-152	6-423
Forward Transmission		
Install . . . . .	6-128	6-368
Remove . . . . .	6-127	6-366

	<i><b>Task</b></i>	<i><b>Page</b></i>
Oil Pump, Transmission, Main		
Aft Transmission		
Adjust . . . . .	6-151	6-421
Install . . . . .	6-150	6-419
Remove . . . . .	6-149	6-418
Combining Transmission		
Adjust . . . . .	6-172	6-461
Engine Transmission		
Adjust . . . . .	6-200	6-531
Forward Transmission		
Adjust . . . . .	6-126	6-364
Install . . . . .	6-125	6-362
Remove . . . . .	6-124	6-360
Oil Seal, Forward Rotor Shaft		
Install . . . . .	6-40	6-101
Remove . . . . .	6-39	6-100
Oil Seals, Horizontal Hinge Pin — See Seals, Oil, Horizontal Hinge Pin		
Oil Seals, Pitch Varying Housing—See Seals, Oil, Pitch Varying Housing		
Oil Seals, Vertical Hinge Pin — See Seals, Oil, Vertical Hinge Pin		
Oil Tanks, Pitch Bearing		
Inspect . . . . .	5-18	5-78
Install . . . . .	5-21	5-84
Remove . . . . .	5-19	5-79
Repair (AVIM) . . . . .	5-20	5-81
Oil Tank, Rotor Hub		
Inspect . . . . .	5-14	5-67
Install . . . . .	5-17	5-74
Remove . . . . .	5-15	5-69
Repair (AVIM) . . . . .	5-16	5-72
Oil Tanks, Vertical Hinge Pin		
Install . . . . .	5-29	5-106
Remove . . . . .	5-28	5-104
Out-Of-Phase Switch, Power Steering — See Power Steering Out-Of-Phase Switch		
Output Shaft Seal		
Replace . . . . .	4-23	4-78
Overhaul and Retirement Schedule . . . . .	1-91	1-283
Overhead Panel		
Install . . . . .	9-98	9-265
Lamps		
Replace . . . . .	9-96	9-261
Panels		
Install . . . . .	9-100	9-272.17
Remove . . . . .	9-99	9-268
Remove . . . . .	9-97	9-262
Variable Resistor		
Install . . . . .	9-102	9-279
Remove . . . . .	9-101	9-277

P

Pallet, Control, Sta 95 — See Control Pallet Sta 95		
Pallet Sta 120 — See Control Pallet Sta 120		
Palmer 611 Compound, Application of (AVIM) . . . . .	2-340	2-897
Panel AFCS — See AFCS Panel		
Panel and Pan, Emergency Exit Light		
Install . . . . .	17-10	17-22
Remove . . . . .	17-9	17-20
Panel, Cabin Floor — See Cabin Floor Panel		
Panel, Emergency Power — See Emergency Power Panel		
Panel, Generator Control — See Generator Control Panel		
Panel, Hoist/Cargo Hook — See Hoist/Cargo Hook Panel		
Panel, Hoist Operator's — See Hoist Operator's Panel		
Panel, Hydraulic Maintenance		
Panel, Hydraulic Maintenance		
Components		
Install . . . . .	8-101	8-226
Remove . . . . .	8-100	8-216
Install . . . . .	8-102	8-237
Instruments, Clamp Mounted		
Install . . . . .	8-98	8-212
Remove . . . . .	8-97	8-210
Remove . . . . .	8-99	8-215
Panel, instrument		
Center		
Install . . . . .	8-108	8-257
Remove . . . . .	8-107	8-254
Copilot		
Install . . . . .	8-106	8-250
Remove . . . . .	8-105	8-246
Pilot		
Install . . . . .	8-104	8-242
Remove . . . . .	8-103	8-238
Panel, Isolation, Fuel Tank — See Isolation Panel,		
Fuel Tank		
Panel, Jettisonable Door Sliding Window — See Jettisonable		
Door Sliding Window Panel		
Panel, Master Caution — See Master Caution Panel		
Panel, Overhead — See Overhead Panel		
Panel, Status, Flare Dispenser — See Status Panel,		
Flare Dispenser		
Panels, Access — See Access Panels		
Panels, Fuel Pod		
Inspect . . . . .	2-182	2-496
Install . . . . .	2-188	2-516
Remove . . . . .	2-185	2-499
Pans, Drip — See Drip Pans		
Paratroop and Cargo Drop Equipment . . . . .	16-42	16-143
Paratroop Anchor Line		
Assemble . . . . .	16-46	16-150
Disassemble . . . . .	16-45	16-148
Inspect . . . . .	16-43	16-144

	<i>Task</i>	<i>Page</i>
Install . . . . .	16-47	16-153
Remove . . . . .	16-44	16-146
Park Helicopter . . . . .	1-25	1-68
Parking Brake Valve — See Brake Parking Valve		
Permaswage Hydraulic System Plumbing, Repair — See Hydraulic System Plumbing, Repair, Permaswage		
Phase Rotary Wing Blades. . . . .	6-28	6-71
Pilot Valve, APU Start Module		
Install . . . . .	7-182	7-634
Remove . . . . .	7-181	7-632
Pilot Valve, Power Control Module—See Power Control Module Pilot Valve		
Pilot Valve, Power Transfer Unit Module — See Power Transfer Unit Module Pilot Valve		
Pilot Valves, Pressure Control Module		
Install . . . . .	7-161	7-585
Remove . . . . .	7-160	7-582
Pin, Horizontal Hinge		
Inspect . . . . .	5-45	5-155
Install . . . . .	5-46	5-158
Remove . . . . .	5-44	5-151
Pin Rig Damage in First Stage Control		
Remove . . . . .	11-19	11-46
Pin, Rig Damaged, From Thrust Control		
Remove . . . . .	11-17	11-37
Pin, Rig, Damaged, in Second Stage Controls		
Remove . . . . .	11-20	11-49
Pin, Rigging, Bent or Sheared Removed — Inspect for Damage . . . . .	11-18	11-45
Pipe, Heater Exhaust		
Install . . . . .	13-21	13-64
Remove . . . . .	13-20	13-61
Pitch and Roll Control Stick Grip		
Assemble (AVIM) . . . . .	9-136	9-363
Disassemble (AVIM) . . . . .	9-135	9-361
Install . . . . .	9-137	9-366.4
Remove . . . . .	9-134	9-359
Test (AVIM) . . . . .	9-136.1	9-366.1
Pitch and Roll Pallet Idler Bellcranks		
Rigged — See Rig Pallet Pitch and Roll Idler Bellcranks		
Pitch Arm		
Install . . . . .	11-139	11-532
Remove . . . . .	11-138	11-531
Pitch Balance Spring		
Adjust . . . . .	11-137	11-528
Install . . . . .	11-135	11-525
Remove . . . . .	11-134	11-524
Pitch Bearing Oil Tanks — See Oil Tanks, Pitch Bearing		

	<i>Task</i>	<i>Page</i>
Pitch CCDA Actuator		
Assemble . . . . .	11-161	11-579
Disassemble . . . . .	11-160	11-576
Install . . . . .	11-162	11-584
Remove . . . . .	11-159	11-574
Test — Bench . . . . .	11-279	11-1022



	<i>Task</i>	<i>Page</i>
Pitch Control Position Transducer — See Transducer		
Pitch Control Position		
Pitch Control Travel		
Check . . . . .	11-38	11-115
Pitch Idler Bellcrank Control Pallet Sta 120 — See		
Control Pallet Sta 120 Pitch Idler Bellcrank		
Pitch Intermediate Bellcranks		
Clean . . . . .	11-2	11-6
Inspect — Corrosion . . . . .	11-11	11-21
Inspect — General . . . . .	11-10	11-20
Install . . . . .	11-181	11-631
Remove . . . . .	11-180	11-630
Repair—General . . . . .	11-12	11-22
Repair — Finish . . . . .	11-13	11-24
Pitch Housing Oil Tank Sight Indicator — See		
Sight indicator. Pitch Housing Oil Tank		
Pitch Link Boot — See Boot. Pitch Link		
Pitch Links		
Adjust . . . . .	5-94	5-349
Correct for Autorotation % Rpm . . . . .	5-144	5-530
Install . . . . .	5-99	5-370
Prepare for Service . . . . .	5-96	5-356
Prepare for Storage or Shipment . . . . .	5-95	5-354
Remove . . . . .	5-97	5-359
Repair . . . . .	5-98	5-362
Pitch Overtravel Stop		
Rig . . . . .	11-44	11-155
Pitch, Roll, or Yaw Travel Quadrants Cockpit		
Install . . . . .	11-26	11-64
Remove . . . . .	11-25	11-62
Pitch Shaft Wear Sleeve—See Wear		
Sleeve, Pitch Shaft		
Pitch Spring Assembly		
Adjust (AVIM) . . . . .	11-145	11-544
Assemble (AVIM) . . . . .	11-143	11-539
Disassemble (AVIM) . . . . .	11-142	11-537
Install (AVIM) . . . . .	11-147	11-548
Remove . . . . .	11-141	11-536
Test . . . . .	11-144	11-542
Pitch Varying Housing — See Housing, Pitch Varying		
Pitch Varying Housing Oil Seals — See Seals,		
Oil, Pitch Varying Housing		
Pitch Varying Shaft		
Inspection (AVIM) . . . . .	5-21.2	5-86.2
Inspection (ALUM) . . . . .	5-21.1	5-86.1
Installation . . . . .	5-46	5-150
Removal . . . . .	5-44	5-154



	<i>Task</i>	<i>Page</i>
Pitch Viscous Damper Connecting Link		
Install . . . . .	11-126	11-509
Remove . . . . .	11-125	11-508
Pitot Static and Side Slip Sensing System		
Drain . . . . .	8-25	8-57
Inspect . . . . .	8-24	8-55
Purge . . . . .	8-26	8-59
Pitot Tube		
Install . . . . .	8-30	8-72
Remove . . . . .	8-27	8-67
Pitot Tube Support		
Install . . . . .	8-29	8-70
Remove . . . . .	8-28	8-68
Pivoting and Swiveling Servocylinders Bearing		
Inspect for Radial and Axial Play (AVIM) . . . . .	7-128	7-475
Inspect . . . . .	7-123	7-456
Install Aft Pivoting . . . . .	7-132	7-494
Install Aft Swiveling . . . . .	7-134	7-502
Install Forward Pivoting . . . . .	7-131	7-489
Install Forward Swiveling . . . . .	7-133	7-498
Remove Aft Pivoting . . . . .	7-125	7-462
Remove Aft Swiveling . . . . .	7-127	7-471
Remove Forward Pivoting . . . . .	7-124	7-458
Remove Forward Swiveling . . . . .	7-126	7-467
Repair Pivoting (AVIM) . . . . .	7-129	7-482
Repair Swiveling (AVIM) . . . . .	7-130	7-485
Plastic Windshield and Window Repair . . . . .	2-42	2-179
Plastic Windshield, Center — See Windshield, Plastic, Center		
Plastic Windshield, Pilot or Copilot — See Windshield, Plastic, Pilot or Copilot		
Plates, Support, Suppressive Fire System — See Support Plates, Suppressive Fire System		
Platform, Work, Pylon — See Work Platform, Pylon		
Plumbing, Hydraulic System — See Hydraulic System Plumbing		
Pods		
Repair . . . . .	2-183	2-497
Damage Requiring Replacement (AVIM) . . . . .	2-187	2-515
Major Damage (AVIM) . . . . .	2-186	2-502
Minor Damage . . . . .	2-184	2-498
Ports, Sideslip Sense		
Install . . . . .	8-32	8-76
Remove . . . . .	8-31	8-74
Position Light Dimming Resistor		
Install . . . . .	9-123	9-332
Remove . . . . .	9-122	9-330
Power Control Module Hydraulic Flight Control		
Accumulator		
Assemble (AVIM) . . . . .	7-49	7-175
Disassemble and Inspect (AVIM) . . . . .	7-48	7-172

	<i>Task</i>	<i>Page</i>
Install . . . . .	7-51	7-185
Remove . . . . .	7-47	7-169
Test (AVIM) . . . . .	7-50	7-181
Filter Check Valve		
Install . . . . .	7-53	7-190
Remove . . . . .	7-52	7-188
Filter Element		
Install . . . . .	7-34	7-137
Remove . . . . .	7-33	7-134
Filter Indicator Switch		
Install . . . . .	7-36	7-143
Remove . . . . .	7-35	7-140
Filter Relief Valve		
Install . . . . .	7-38	7-148
Remove . . . . .	7-37	7-146
High Pressure Relief Valve		
Install . . . . .	7-40	7-153
Remove . . . . .	7-39	7-150
Install No. 1 Module . . . . .	7-30	7-126
Install No. 2 Module . . . . .	7-32	7-131
Pilot Valve		
Install . . . . .	7-57	7-198
Remove . . . . .	7-56	7-196
Pressure Switch		
Install . . . . .	7-44	7-163
Remove . . . . .	7-43	7-161
Pressure Transmitter		
Install . . . . .	7-46	7-167
Remove . . . . .	7-45	7-165
Pump Change Indicator		
Install . . . . .	7-55	7-194
Remove . . . . .	7-54	7-192
Remove No. 1 Module . . . . .	7-29	7-123
Remove No. 2 Module . . . . .	7-31	7-129
Three-Way Valve		
Install . . . . .	7-42	7-159
Remove . . . . .	7-41	7-157
Power Distribution Panels		
Circuit Breakers		
Install . . . . .	9-11	9-35
Remove . . . . .	9-10	9-32
Install . . . . .	9-9	9-28
Remove . . . . .	9-8	9-24
Power Emergency Panel — See Emergency Power Panel		
Power Receptacle, DC — See DC Power Receptacle		
Power Steering . . . . .	7-290	7-934
Power Steering Assy		
Install . . . . .	7-300	7-954
Remove . . . . .	7-299	7-591

	<i>Task</i>	<i>Page</i>
Power Steering Assy Pressure Tube		
Install . . . . .	7-302	7-958
Remove and inspect . . . . .	7-301	7-957
Power Steering Control Box		
Assemble (AVIM) . . . . .	9-144	9-382
Disassemble (AVIM) . . . . .	9-143	9-376
Install . . . . .	9-146	9-396
Remove . . . . .	9-142	9-374
Test and Adjust . . . . .	9-145	9-389
Power Steering Out-Of-Phase Switch		
Adjust . . . . .	7-307	7-968
Install . . . . .	7-306	7-966
Remove . . . . .	7-305	7-964
Power Steering Servo Valve		
Install . . . . .	7-304	7-962
Remove . . . . .	7-303	7-960
Power Steering/Swivel Lock Check Valve		
Install . . . . .	7-296	7-944
Remove . . . . .	7-295	7-942
Power Steering/Swivel Lock Control Valves		
Install . . . . .	7-294	7-941
Remove . . . . .	7-293	7-939
Power Steering/Swivel Lock Module		
Install . . . . .	7-292	7-937
Remove . . . . .	7-291	7-935
Power Steering/Swivel Lock Module Accumulator		
Install . . . . .	7-297	7-946
Remove . . . . .	7-298	7-949
Power Supply, Engine Torquemeter		
Install . . . . .	8-22	8-49
Remove . . . . .	8-20	8-46
Test (AVIM) . . . . .	8-21	8-47
Power Transfer Unit Module		
Check Valve		
Install . . . . .	7-63	7-212
Remove . . . . .	7-62	7-210
Flow Limiter		
Install . . . . .	7-67	7-222
Remove . . . . .	7-66	7-220
Install Module . . . . .	7-59	7-202
Motor		
Install . . . . .	7-77	7-245
Remove . . . . .	7-73	7-236
Shaft Seal, Motor		
Install . . . . .	7-75	7-240
Remove and inspect . . . . .	7-74	7-238
Test (AVIM) . . . . .	7-76	7-243

	<i>Task</i>	<i>Page</i>
Pilot Valve		
Install . . . . .	7-65	7-217
Remove . . . . .	7-64	7-215
Pump		
Install . . . . .	7-72	7-234
Remove . . . . .	7-68	7-225
Shaft Seal, Pump		
Install . . . . .	7-70	7-230
Remove and inspect . . . . .	7-69	7-227
Test (AVIM) . . . . .	7-71	7-233
Remove Module . . . . .	7-58	7-200
Three-Way Valve		
Install. . . . .	7-61	7-207
Remove . . . . .	7-60	7-205
Power Turbine Actuator		
Install . . . . .	4-139	4-320
Remove . . . . .	4-138	4-318
Power Turbine Inlet Temperature (PTIT) Indicator		
Install . . . . .	8-87	8-187
Remove . . . . .	8-86	8-185
Test . . . . .	8-2	8-9
Power Turbine Linkage—See Linkage, Power Turbine		
Powerplant . . . . .	4-9	4-23
After Check Run Inspection . . . . .	4-12	4-41
Assemble . . . . .	4-91	4-41
Change Engine Oil . . . . .	4-91	4-225
Check Coastdown Time . . . . .	4-5	4-16
Check Engine After Excessive G-Force Load . . . . .	4-6	4-18
Check For Suspected Compressor Stall . . . . .	4-8	4-21
Disassemble . . . . .	4-11	4-31
Health Indicator Test . . . . .	4-2	4-6
Initial Runup . . . . .	4-4	4-14
Install . . . . .	4-13	4-50
Power Turbine Overspeed (N2). . . . .	4-7	4-20
Remove . . . . .	4-10	4-24
Turbine Engine Analysis Check . . . . .	4-3	4-8
Vibration Test . . . . .	4-14	4-58
Preparation of Bonding Surfaces — See Bonding Surfaces, Preparation of		
Prepare for Flushing Pressure Lines, Flight Control Hydraulic System — See Flush Flight Control Hydraulic System, Prepare for Flushing Pressure Lines		
Prepare for Flushing Return Lines, Flight Control Hydraulic System — See Flush Flight Control Hydraulic System, Prepare for Flushing Return Lines		
Prepare System After Flushing Pressure Lines, Flight Control Hydraulic System — See Flush Flight Control Hydraulic System, Prepare System After Flushing Pressure Lines		

	<i>Task</i>	<i>Page</i>
Prepare System After Flushing Return Lines, Flight Control Hydraulic System — See Flush Control Hydraulic System, Prepare System After Flushing Pressure Lines		
Preservation, Auxiliary Power Unit (APU) . . . . .	15-2	15-3
Pressure Control Module — See Module, Pressure Control		
Pressure Reducer, Lower Controls Module — See Lower Controls Module Pressure Reducer		
Pressure Refueling Adapter		
Install . . . . .	10-88	10-329
Remove . . . . .	10-87	10-327
Pressure Refueling System Test . . . . .	10-119	10-405
Pressure Switch, Power Control Module — See Power Control Module Pressure Switch		
Pressure Switches, Fuel System		
Auxiliary Fuel Pump		
Install . . . . .	10-86	10-325
Remove . . . . .	10-85	10-323
No. 1 System		
Install . . . . .	10-106	10-369
Remove . . . . .	10-105	10-367
No. 2 System		
Install . . . . .	10-108	10-373
Remove . . . . .	10-107	10-371
Pressure Test, Vent System . . . . .	10-117	10-396
Pressure Transmitter — Power Control Module — See Power Control Module Pressure Transmitter		
Priming Engine Fuel Control . . . . .	10-122	10-442
Processor, Cruise Guide Signal		
Install . . . . .	8-42	8-96
Remove . . . . .	8-41	8-95
Protective Covers . . . . .	1-32	1-94
Proximity Switch, Aft Landing Gear		
Adjust Switch . . . . .	3-56	3-117
Switch, Target, and Adjuster Link		
Install . . . . .	3-55	3-114
Remove . . . . .	3-54	3-111
Pump Change Indicator, Power Control Module — See Power Control Module Pump Change Indicator		
Pump, Hand, Hydraulic — See Handpump, Hydraulic		
Pump, Power Transfer Unit Module — See Power Transfer Unit Module Pump		
Pump, Powerplant Fuel Boost		
Install . . . . .	4-18	4-72
Remove . . . . .	4-17	4-71
Pump, Powerplant Oil		
Install No. 1 . . . . .	4-93	4-229
Install No. 2 . . . . .	4-95	4-235
Remove No. 1 . . . . .	4-92	4-226
Remove No. 2 . . . . .	4-94	4-233

	<i>Task</i>	<i>Page</i>
Pump, Utility Hydraulic		
Install . . . . .	7-151	7-560
Remove . . . . .	7-150	7-557
Test (AVIM) . . . . .	7-26	7-113
Pumps, Flight Control Hydraulic—See Flight Control		
Hydraulic Pumps		
Purging Fuel Tanks		
With Air . . . . .	10-3	10-14
With Inert Gas . . . . .	10-2	10-11
Pylon and Cabin Aft Linkage Rigged — See Rig		
Aft Cabin and Pylon Linkage		
Pylon, Aft		
Install, Aft Shaft Installed . . . . .	2-308	2-806
Install, Aft Shaft Removed . . . . .	2-309	2-820
Remove, Aft Shaft Installed . . . . .	2-306	2-783
Remove, Aft Shaft Removed. . . . .	2-307	2-795
Repair . . . . .	2-304	2-770
Minor Repair . . . . .	2-303	2-769
Repair (AVIM) . . . . .	2-305	2-782
Pylon Aft Crown Fairing		
Repair . . . . .	2-299	2-763
Pylon, Aft, Equipment Support Structure — See Equipment Support		
Structure, Aft Pylon		
Pylon Damage, Inspection — See Fuselage and Pylon		
Damage, Inspection		
Pylon Forward Crown Fairing		
Install . . . . .	2-295	2-749
Remove . . . . .	2-293	2-743
Repair . . . . .	2-294	2-746
Pylon Leading Edge Hinged Fairing (Clamshell Doors) — See		
Hinged Fairing, Pylon Leading Edge (Clamshell Doors)		
Pylon Left Lower Bellcrank Sta 534		
Clean . . . . .	11-2	11-6
Inspect — Corrosion . . . . .	11-11	11-21
Inspect — General . . . . .	11-10	11-20
Install . . . . .	11-257	11-873
Remove . . . . .	11-256	11-871
Repair—General . . . . .	11-12	11-22
Repair — Finish . . . . .	11-13	11-24
Rig . . . . .	11-57	11-221
Pylon Left Upper Bellcrank		
Clean . . . . .	11-2	11-6
Inspect — Corrosion . . . . .	11-11	11-21
Inspect — General . . . . .	11-10	11-20
Install . . . . .	11-265	11-889
Remove . . . . .	11-264	11-887
Repair — General . . . . .	11-12	11-22
Repair — Finish . . . . .	11-13	11-24
Rig . . . . .	11-57	11-221

	<i>Task</i>	<i>Page</i>
Pylon Lower Hinged Fairing		
Install . . . . .	2-285	2-731
Remove . . . . .	2-284	2-729
Pylon Mid Crown Fairing		
Install . . . . .	2-298	2-759
Remove . . . . .	2-296	2-752
Repair . . . . .	2-297	2-756
Pylon Right Lower Bellcrank Sta 534		
Clean . . . . .	11-2	11-6
Inspect — Corrosion . . . . .	11-11	11-21
Inspect — General . . . . .	11-10	11-20
Install . . . . .	11-259	11-877
Remove . . . . .	11-258	11-875
Repair — General . . . . .	11-12	11-22
Repair — Finish . . . . .	11-13	11-24
Rig . . . . .	11-57	11-221
Pylon Right Upper Bellcrank		
Clean . . . . .	11-12	11-22
Inspect — Corrosion . . . . .	11-11	11-21
Inspect — General . . . . .	11-10	11-20
Install . . . . .	11-267	11-893
Remove . . . . .	11-266	11-891
Repair — General . . . . .	11-12	11-22
Repair — Finish . . . . .	11-13	11-24
Rig . . . . .	11-57	11-221
<b>Q</b>		
Quadrant Travel, Pitch, Roll or Yaw Cockpit — See Cockpit Travel Quadrant Pitch, Roll, or Yaw		
Quill Shaft Inspection Engine Transmission . . . . .	6-101	6-304
<b>R</b>		
Radar Altimeter (Altimeter, Radar)		
Rails, Seat Pilot or Copilot		
Install . . . . .	2-113	2-355
Remove . . . . .	2-112	2-354
Rainshield — See Weather Protective Cover		
Ramp Cargo		
Floor Panels		
Install . . . . .	2-249	2-646
Remove . . . . .	2-247	2-642
Repair . . . . .	2-248	2-643
Install . . . . .	2-255	2-672
Remove . . . . .	2-252	2-650
Repair . . . . .	2-254	2-654
Minor Damage . . . . .	2-250	2-648
Reparable Damage . . . . .	2-251	2-649
Reparable Damage (AVIM) . . . . .	2-253	2-653

	<i>Task</i>	<i>Page</i>
Ramp Cargo Actuating Cylinder		
Adjust . . . . .	7-274	7-891
Install . . . . .	7-273	7-886
Remove . . . . .	7-271	7-880
Repair (AVIM) . . . . .	7-272	7-883
Ramp Control Valve		
Assemble (AVIM) . . . . .	7-268	7-868
Disassemble and Inspect (AVIM) . . . . .	7-267	7-864
Install . . . . .	7-270	7-877
Remove . . . . .	7-266	7-861
Test (AVIM) . . . . .	7-269	7-872
Rearview Mirror, Cockpit — See Mirror, Rearview, Cockpit		
Receptacle, AC Power		
Install . . . . .	9-48	9-119
Remove . . . . .	9-47	9-117
Receptacle, DC Cabin Utility — See DC Cabin Utility Receptacle		
Receptacle, DC Power — See DC Power Receptacle		
Rectifiers, Transformer — See Transformer Rectifiers		
Reel, Inertia — See Inertia Reel		
References		
Appendix A		
Refitting of Fittings, Hoses, and Tubing . . . . .	10-38	10-153
Relay, Battery — See Battery Relay		
Relay Box, Dual Cargo Hook Release — See Dual Cargo Hook Release Relay Box		
Relay Box, Emergency Hook Release — See Emergency Hook Release Relay Box		
Relay Box, Heater Control		
Install . . . . .	13-57	13-151
Relays		
Install . . . . .	13-56	13-148
Remove . . . . .	13-55	13-145
Remove . . . . .	13-54	13-144
Relay, Bus Tie — See Bus Tie Relay		
Relay, Engine Trim		
Install . . . . .	4-124	4-293
Remove . . . . .	4-123	4-291
Relay, Essential DC Bus — See Essential DC Bus Relay		
Relay, Flare Dispenser		
Install . . . . .	16-59	16-175
Remove . . . . .	16-58	16-174
Relay, Fuel Pump		
Install . . . . .	10-116	10-394
Remove . . . . .	10-115	10-392
Relay, Heater Fan — See Heater Fan Relay		
Relay, Reverse Current Cutout — See Reverse Current Cutout Relay		
Relay, Switched Battery Bus — See Switched Battery Bus Relay		



	<i>Task</i>	<i>Page</i>
Relay, Transformer Fail — See Transformer Fail Relay		
Relays, Cabin and Ramp Lighting — See Cabin and Ramp Lighting Relays		
Relays, Emergency Engine Trim		
Install . . . . .	4-126	4-297
Remove . . . . .	4-125	4-295
Relays, Heater Control		
Install . . . . .	13-56	13-148
Remove . . . . .	13-55	13-145
Relays, Windshield Anti-Icing		
Install . . . . .	12-6	12-13
Remove . . . . .	12-5	12-10
Release, Manual, Fwd, and Aft Cargo Hook — See Manual Release, Fwd and Aft Cargo Hook		
Relief Valve, Flight Control Reservoir/Cooler — See Flight Control Reservoir/Cooler Relief Valve		
Relief Valve, High Pressure; Power Control Module — See Power Control Module High Pressure Relief Valve		
Relief Valve, Hoist Pressure		
Install . . . . .	7-254	7-829
Remove . . . . .	7-253	7-827
Relief Valve, Integrated Lower Control Actuator (ILCA) — See Integrated Lower Control Actuator (ILCA) Relief Valve		
Relief Valve, High Pressure, Pressure Control Module		
Install . . . . .	7-165	7-594
Remove . . . . .	7-164	7-592
Relief Valve, Low Pressure, Utility Reservoir/Cooler		
Install . . . . .	7-207	7-688
Remove . . . . .	7-206	7-686
Remote Positioning Control Box		
Install . . . . .	4-128	4-300
Remove . . . . .	4-127	4-299
Reparable Damage, Classification Of . . . . .	2-7	2-17
Rescue Hatch Lower Door		
Assemble . . . . .	2-195	2-532
Disassemble . . . . .	2-194	2-528
Gearbox		
Assemble (AVIM) . . . . .	2-199	2-544
Disassemble (AVIM) . . . . .	2-197	2-541
Inspect (AVIM) . . . . .	2-198	2-543
Install . . . . .	2-200	2-548
Remove . . . . .	2-196	2-537
Install, . . . . .	2-203	2-555
Rescue Hatch Lower Door		
Links, Rigid or Welded		
Install . . . . .	2-202	2-553
Remove . . . . .	2-201	2-551
Remove . . . . .	2-193	2-526

	<i>Task</i>	<i>Page</i>
Reservoir/Cooler, Flight Control — See Flight Control Reservoir/Cooler		
Reservoir/Cooler, Utility		
Assemble (AVIM) . . . . .	7-215	7-707
Bleed . . . . .	7-335	7-107.8
Bulb, Temperature		
Install . . . . .	7-209	7-692
Remove . . . . .	7-208	7-690
Disassemble and inspect (AVIM) . . . . .	7-214	7-704
Install . . . . .	7-218	7-719
Remove . . . . .	7-212	7-698
Switch, Temperature		
Install . . . . .	7-211	7-696
Remove . . . . .	7-210	7-694
Test (AVIM) . . . . .	7-217	7-712
Valve, Bleed/Relief		
Install . . . . .	7-216	7-711
Remove . . . . .	7-213	7-702
Valve, Relief, Low Pressure		
Install . . . . .	7-207	7-688
Remove . . . . .	7-206	7-686
Resistors, Engine Droop Eliminator		
Adjust . . . . .	4-118	4-277
Assemble . . . . .	4-121	4-286
Disassemble . . . . .	4-120	4-284
Install and Rig . . . . .	4-122	4-288
Remove . . . . .	4-119	4-283
Resistors, Engine Trim		
Adjust . . . . .	4-129	4-301
Install . . . . .	4-131	4-306
Remove . . . . .	4-130	4-304
Restore Finish, Transparent Plastic — See Transparent Plastic Finish, Restore		
Restrictor, Airspeed Indicator		
Adjust . . . . .	8-37	8-86
Replace . . . . .	8-36	8-85
Test . . . . .	8-35	8-83
Reverse Current Cutout Relay		
Install . . . . .	9-13	9-38
Remove . . . . .	9-12	9-36
Rig Aft Cabin and Pylon Linkage . . . . .	11-57	11-221
Rig Aft Rotary Wing Blades . . . . .	11-58	11-231
Rig Dash Actuator for Hover . . . . .	11-50	11-180
Rig First and Second Stage Bellcranks . . . . .	11-51	11-186
Rig Forward or Aft Swashplate and Servocylinders . . . . .	11-54	11-205
Rig Forward Rotary Wing Blades . . . . .	11-55	11-212
Rig Forward Upper Bellcrank. . . . .	11-53	11-199
Rig LCT Actuator Forward and Aft . . . . .	11-40	11-126

	<i>Task</i>	<i>Page</i>
Rig Neutral — See Neutral Rig		
Rig Pallet Pitch and Roll Idler Bellcranks	11-49	11-176
Rig Pallet Thrust and Yaw Idler Bellcranks	11-48	11-171
Rig Pin Damaged From Thrust Control, Remove . . . . .	11-17	11-37
Rig Pin Damaged in First Stage Controls, Remove . . . . .	11-19	11-46
Rig Pin Damaged in Second Stage Controls, Remove . . . . .	11-20	11-49
Rig Pitch Control Position Indicator — See Cockpit Control Stick Position Indicator		
Rig Pitch Overtravel Stop . . . . .	11-44	11-155
Rig Position, Check . . . . .	11-32	11-74
Rig Roll, Yaw, or Thrust ILCA Input Connecting Links . . . . .	11-47	11-167
Rig Thrust Control . . . . .	11-43	11-148
Rig Tunnel Controls Linkage. . . . .	11-56	11-217
Rigging Cockpit Control Assy — See Cockpit Control Assembly Pilot's or Copilot's		
Rigging Cockpit Transfer Bellcranks — See Cockpit Control Transfer Connecting Links		
Rigging Flight Control System . . . . .	11-4	11-8
Rigging, Gas Producer Linkage — See Linkage, Gas Producer		
Rigging General Information . . . . .	11-21	11-52
Rigging of Forward and Aft LCT Actuator Check . . . . .	11-40	11-126
Rigging Pin Bent or Sheared Removed, Inspect . . . . .	11-18	11-45
Rigging Power Turbine Linkage — See Linkage, Power Turbine		
Rigging Tools, Cockpit — See Cockpit Rigging Tools		
Right Upper Pylon Connecting Link — See Connecting Link Right Upper Pylon		
Rivets . . . . .	2-326	2-875
Rod-End Bearing Lubricate . . . . .	11-3	11-7
Roll and Pitch Pallet Idler Bellcranks — See Rig Pallet Pitch and Roll Idler Bellcranks		
Roll and Yaw Travel Combined, Check . . . . .	11-37	11-110
Roll Arm Install . . . . .	11-139	11-532
Remove . . . . .	11-138	11-531
Roll Balance Spring Adjust . . . . .	11-137	11-526
Install . . . . .	11-135	11-525
Remove . . . . .	11-134	11-524
Roll Controls Travel, Check . . . . .	11-36	11-105
Roll Idler Bellcrank Control Pallet Sta 120 — See Control Pallet Sta 120 Roll idler Bellcrank		
Roll Intermediate Bellcranks Clean . . . . .	11-2	11-6
Inspect — Corrosion . . . . .	11-11	11-21
Inspect — General . . . . .	11-10	11-20
Install . . . . .	11-181	11-631

	<i>Task</i>	<i>Page</i>
Remove . . . . .	11-180	11-630
Repair — General . . . . .	11-12	11-22
Repair — Finish . . . . .	11-13	11-24
Roll Magnetic Brake		
Adjust (AVIM) . . . . .	11-151	11-555
Install . . . . .	11-153	11-559
Remove . . . . .	11-149	11-551
Test (AVIM) . . . . .	11-150	11-553
Roll or Yaw Control Position Transducer — See Transducer		
Control Position Roll or Yaw		
Roll, Pitch, or Yaw Travel Quadrants Cockpit - See Cockpit		
Travel Quadrant Pitch, Roll or Yaw		
Roll Spring Assembly		
Adjust . . . . .	11-145	11-544
Assemble . . . . .	11-143	11-539
Disassemble . . . . .	11-142	11-537
Install . . . . .	11-147	11-548
Remove . . . . .	11-141	11-536
Test . . . . .	11-144	11-542
Roll Viscous Damper Connecting Link		
Install . . . . .	11-128	11-513
Remove . . . . .	11-127	11-512
Rosan Fasteners		
Locked-in Stud Replacement . . . . .	1-15	1-16
Screw-Thread Insert Replacement . . . . .	1-16	1-22
Rosan Fittings, Replace . . . . .	7-6	7-30
Rotary Wing Aft Blades, Rig . . . . .	11-58	11-231
Rotary Wing Blade Erosion Cap — See Erosion Cap, Rotary Wing Blades		
Rotary Wing Blade ShockAbsorber — See Shock		
Absorber, Rotary Wing Blade		
Rotary Wing Blade Tracking and Balancing — See		
Tracking and Balancing, Rotary Wing Blades		
Rotary Wing Blades — See Blades, Rotary Wing		
Rotary Wing Forward Blades, Rig . . . . .	11-55	11-212
Rotary Wing Head . . . . .	5-1	5-1
Inspect . . . . .	5-6	5-28
Install . . . . .	5-9	5-47
Place in Service . . . . .	5-4	5-18
Prepare for Shipment . . . . .	5-2	5-6
Pressure Test Seals and Packings (AVIM) . . . . .	5-5	5-23
Remove . . . . .	5-8	5-38
Remove from Shipping Container . . . . .	5-3	5-13
Repair . . . . .	5-7	5-33
Rotor Hub Oil Tank — See Oil Tank, Rotor Hub		
Rotor Hub Surface Inspection . . . . .	5-21.3	5-86.4
Rotor RPM, Adjust Minimum . . . . .	4-129	4-301
RPM Limiting Stop, Power Turbine		
Replace . . . . .	4-137	4-317

	<i>Task</i>	<i>Page</i>
Rubber Seal Repair . . . . .	2-367	2-950
Rust Stripper Solution, Prepare (AVIM) . . . . .	2-342	2-899

**S**

Safety Belt, Pilot or Copilot		
Install . . . . .	2-127	2-379
Remove . . . . .	2-126	2-378
Safety Blocks Servocylinder — See Blocks Safety Servocylinder		
Salt Corroded Parts, Clean and Treat . . . . .	2-344	2-901
Screws, Bolt Replacement or Substitution For — See Bolts, Substitute or Replacement for Screws		
Seal, Engine Output Shaft		
Replace . . . . .	4-23	4-78
Seal, Repair Rubber — See Rubber Seal Repair		
Sealing, Fuselage—See Fuselage Sealing		
Seals, Oil, Horizontal Hinge Pin		
Install . . . . .	5-43	5-148
Remove . . . . .	5-42	5-147
Seals, Oil, Pitch Varying Housing		
Install . . . . .	5-25	5-97
Remove . . . . .	5-24	5-94
Seals, Oil, Vertical Hinge Pin		
Install Inner . . . . .	5-35	5-126
Install Outer . . . . .	5-34	5-122
Remove Inner . . . . .	5-33	5-120
Remove Outer . . . . .	5-32	5-119
Seat Cushion, Pilot or Copilot		
Install . . . . .	2-129	2-382
Remove . . . . .	2-128	2-380
Seat, Pilot or Copilot		
Adjust . . . . .	2-115	2-358
Clean . . . . .	2-110	2-351
Install . . . . .	2-114	2-356
Remove . . . . .	2-111	2-352
Seat Rails		
Install . . . . .	2-113	2-355
Remove . . . . .	2-112	2-354
Test . . . . .	2-109	2-358
Seat, Troop Commander's --- See Troop Commander's Seat		
Seat, Troop, One-Man --- See Troop Seat, One-Man		
Seat, Troop, Three-Man -- See Troop Seat, Three-Man		
Seats, Troop — See Troop Seats		
Second Stage Damaged Rig Pin — See Rig Pin Damaged In Second Stage Controls		

	<i>Task</i>	<i>Page</i>
Second Stage Mixing Assembly		
Check — Bearings . . . . .	11-15	11-29
Check — Looseness . . . . .	11-6	11-12
Clean . . . . .	11-2	11-6
Inspect — Bearings (Installed) . . . . .	11-9	11-19
Inspect — Bearings (Removed) . . . . .	11-8	11-17
Inspect — General . . . . .	11-7	11-15
Install . . . . .	11-191	11-680
Remove . . . . .	11-190	11-672
Repair . . . . .	11-14	11-27
Rig . . . . .	11-51	11-186
Selector, Cabin Temperature		
Install . . . . .	13-47	13-132
Remove . . . . .	13-46	13-130
Selector Switch, Transmission Oil Pressure		
Install . . . . .	8-87	8-187
Remove . . . . .	8-86	8-185
Test (AVIM) . . . . .	8-58	8-125
Selector Switch, Transmission Oil Temperature		
Install . . . . .	8-87	8-187
Remove . . . . .	8-86	8-185
Test (AVIM) . . . . .	8-73	8-156
Self Feedback Transducer, Extensible Link — See Extensible Link Self Feedback Transducer		
Sensing Element, Fire Detection — See Element, Sensing Fire Detection		
Servicing — Air		
Accumulator, Apu Start . . . . .	1-64	1-208
Accumulator, Apu Start Module . . . . .	1-65	1-211
Accumulator, Flight Control . . . . .	1-63	1-205
Accumulator, Power Steering/Swivel Lock . . . . .	1-66	1-214
Accumulator, Pressurization, Utility System Reservoir . . . . .	1-68	1-219
Accumulator, Wheel Brake . . . . .	1-67	1-217
Cargo Hook . . . . .	1-74	1-239
Landing Gear Shock Strut, Aft . . . . .	1-72	1-233
Landing Gear Shock Strut, Forward . . . . .	1-71	1-229
Tires . . . . .	1-73	1-237
Servicing Check Valve, Main Fuel Tank		
Install No. 1 . . . . .	10-90	10-334
Install No. 2 . . . . .	10-92	10-340
Remove No. 1 . . . . .	10-89	10-331
Remove No. 2 . . . . .	10-91	10-337
Servicing, Fuel . . . . .	1-51	1-169
Servicing, General information . . . . .	1-50	1-165
Servicing, Hoist Cable Cutter . . . . .	1-75	1-241
Servicing, Hydraulic Fluid		
Flight Control Hydraulic System — Manual . . . . .	1-62	1-203
Flight Control Hydraulic System, No. 1-Power . . . . .	1-60	1-199

	<i>Task</i>	<i>Page</i>
Flight Control Hydraulic System, No. 2-Power . . . . .	1-61	1-201
Landing Gear Shock Strut, Aft . . . . .	1-70	1-226
Landing Gear Shock Strut, Forward . . . . .	1-69	1-222
Shock Absorber, Rotary-Wing . . . . .	1-58	1-193
Utility Hydraulic System Reservoir — Manual . . . . .	1-62	1-203
Utility Hydraulic System Reservoir — Power . . . . .	1-59	1-196
Servicing, Oil		
Apu . . . . .	1-53	2-182
Engine . . . . .	1-52	1-178
Pitch-Bearing, Rotary-Wing Blade . . . . .	1-56	1-189
Rotary-Wing Hub . . . . .	1-55	1-186
Transmissions . . . . .	1-54	1-183
Vertical Hinge Pin, Rotary Wing Blade . . . . .	1-57	1-191
Servocylinder Connecting Link Forwarder Aft		
Check — Bearings . . . . .	11-5	11-9
Check — Looseness . . . . .	11-6	11-12
Clean . . . . .	11-2	11-6
Inspect — Bearings (Installed) . . . . .	11-9	11-19
Inspect — Bearings (Removed). . . . .	11-8	11-17
Inspect — General . . . . .	11-7	11-15
Install . . . . .	11-193	11-692
Remove . . . . .	11-192	11-691
Repair . . . . .	11-14	11-27
Servocylinder Control Valve Boots		
Install . . . . .	11-197	11-701
Remove . . . . .	11-196	11-700
Servocylinder Safety Blocks — See Blocks		
Safety Servocylinder		
Servocylinders, Pivoting and Swiveling — See Pivoting and Swiveling Servocylinders		
Servo or Trim Motor, (CCDA) — See Motor		
Trim or Servo		
Servo Valve, Extensible Link — See		
Extensible Link Servo Valve		
Shackle, Towing — See Towing Shackle, Forward		
Landing Gear, or Towing Shackle, Aft Landing Gear		
Shaft, Drive, Windshield Wiper		
Install . . . . .	12-47	12-99
Remove . . . . .	12-46	12-98
Shaft Rotation LCT Actuator — See		
Actuator LCT Shaft Rotation		
Shaft Seal, Engine Output		
Replace . . . . .	4-23	4-78
Shock Absorber Rod-End		
Install . . . . .	5-89	5-329
Remove . . . . .	5-88	5-327

	Task	Page
Shock Absorber, Rotary-Wing Blade		
Adjust Length (AVIM) .....	5-90	5-331
Install .....	5-93	5-344
Piston		
Clean .....	5-85	5-321
Place in Service .....	5-92	5-340
Prepare for Storage or Shipment .....	5-91	5-33/
Remove .....	5-87	5-32/
Rod End		
Install .....	5-89	5-329
Remove .....	5-88	5-327
Vent Valve		
Clean Filter .....	5-86	5-322
Shock Strut, Aft Landing Gear		
Convert .....	3-29	3-61
Inspect .....	3-39	3-81
Install .....	3-42	3-87
Remove .....	3-40	3-82
Repair (AVIM) .....	3-41	3-85
Shoulder Harness, Pilot or Copilot		
Install .....	2-119	2-356
Remove .....	2-118	2-364
Shutoff Manual Valve, Apu Fuel		
Install .....	10-102	10-361
Remove .....	10-101	10-359
Shutoff Valve, Engine Fuel		
Install .....	10-104	10-365
Remove .....	10-103	10-363
Shutoff Valve, Fuel Level		
Aft Tank		
Install .....	10-82	10-313
Remove .....	10-81	10-310
Forward Tank		
Install .....	10-72	10-280
Remove .....	10-71	10-277
Install No. 1 System .....	10-56	10-220
Install No. 2 System .....	10-58	10-229
Remove No. 1 System .....	10-55	10-215
Remove No. 2 System .....	10-57	10-225
Side Position Light		
Install .....	9-67	9-182
Lamp		
Replace .....	9-68	9-185
Remove .....	9-66	9-181
Sideslip Sense Ports		
Install .....	8-32	8-76
Remove .....	8-31	8-74



	<i>Task</i>	<i>Page</i>
Side Slip Sensing and Pitot Static System		
Drain . . . . .	8-25	8-57
Inspect . . . . .	8-24	8-55
Purge . . . . .	8-26	8-59
Sight Indicator, Hub Oil Tank		
Install . . . . .	5-11	5-61
Remove . . . . .	5-10	5-58
Sight Indicator, Pitch Housing Oil Tank		
Install . . . . .	5-13	5-66
Remove . . . . .	5-12	5-63
Sight Indicator, Vertical Hinge Pin Oil Tank		
Install . . . . .	5-29	5-106
Remove . . . . .	5-28	5-104
Skin . . . . .	2-11	2-22
Damage Requiring Replacement (AVIM) . . . . .	2-14	2-40
Minor Damage . . . . .	2-12	2-27
Reparable Damage (AVIM) . . . . .	2-13	2-30
Skin and Web Repair . . . . .	2-361	2-940
Skin Inspection, Oil Can . . . . .	2-359	2-938
Skin Repair, Coin Patch . . . . .	2-362	2-941
Skin Repair, Oil Can . . . . .	2-360	2-939
Skin Repair, Temporary Patch . . . . .	2-364	2-945
Slider Shaft, Aft		
Install . . . . .	6-55	6-162
Remove . . . . .	6-52	6-153
Slider Shaft, Forward		
Install . . . . .	6-41	6-103
Remove . . . . .	6-38	6-98
Sliding Window, Jettisonable Door — See Jettisonable Door Sliding Window		
Solenoid Valve, APU Fuel		
Install . . . . .	10-100	10-357
Remove . . . . .	10-99	10-355
Solenoid Valve, Heater Fuel		
Install . . . . .	13-49	13-136
Remove . . . . .	13-48	13-134
Solenoid Valve, Lower Controls Module — See Lower Controls Module Solenoid Valve		
Spring Assembly Pitch — See Pitch Spring Assembly		
Spring Assembly Roll — See Roll Spring Assembly		
Spring Assembly Yaw — See Yaw Spring Assembly		
Spring Pitch Balance — See Pitch Balance Spring		
Spring Roll Balance — See Roll Balance Spring		
Spring Thrust Balance — See Thrust Balance Spring		
Spring Yaw Balance — See Yaw Balance Spring		
Stanchion, Litter		
Install . . . . .	16-62	16-180
Remove . . . . .	16-61	16-178

	<i>Task</i>	<i>Page</i>
Standard Bushings, Use Of — See Bushings, Standard Use Of		
Standards, Bolt Hole — See Bolt Hole Standards		
Start Accumulator, APU		
Install . . . . .	7-149	7-555
Remove . . . . .	7-148	7-553
Starter Drive Housing		
Install . . . . .	4-26	4-81
Remove . . . . .	4-25	4-80
Starter Drive Shaft Seal		
Replace . . . . .	4-24	4-79
Starter, Engine		
Install . . . . .	7-142	7-538
Remove . . . . .	7-141	7-535
Start Valve, APU Start Module		
Install . . . . .	7-180	7-630
Remove . . . . .	7-179	7-628
Start Valves, Engine, Pressure Control Module		
Install . . . . .	7-155	7-571
Remove . . . . .	7-154	7-569
Static Ground Wire, Aft Landing Gear		
Inspect . . . . .	3-36	3-78
Install . . . . .	3-38	3-80
Remove . . . . .	3-37	3-79
Static Lock Mechanism, Aft Landing Gear		
Install . . . . .	3-53	3-109
Remove . . . . .	3-52	3-107
Static Port Adapter		
Install . . . . .	8-34	8-80
Remove . . . . .	8-33	8-78
Status Panel, Flare Dispenser		
Assemble . . . . .	16-53	16-163
Disassemble . . . . .	16-52	16-162
Install . . . . .	16-54	16-164
Remove . . . . .	16-51	16-161
Steering Lever, Aft Landing Gear		
Install . . . . .	3-70	3-158
Remove . . . . .	3-69	3-156
Steering Out of Phase Switch — See Power		
Steering Out of Phase Switch		
Steering Power . . . . .	7-290	7-934
Steering Power Assy — See Power		
Steering Assy		
Steering Power Assy Pressure Tube — See Power Steering Assy Pressure Tube		
Steering Servo Valve — See Power		
Steering Servo Valve		
Steering/Swivel Lock Check Valve — See Power Steering/Swivel Lock Check Valve		

	<i>Task</i>	<i>Page</i>
Steering/Swivel Lock Control Valves — See Power Steering/Swivel Lock Control Valve		
Steering/Swivel Lock Module Accumulator — See Power Steering/Swivel Lock Module Accumulator		
Steer/Swivel Lock Power Module — See Power Steer/Swivel Lock Module		
Step, Foldout — See Foldout Step		
Stick Control Pitch and Roll (Copilot's) — See Control Stick Pitch and Roll (Copilot's)		
Stick Control Pitch and Roll (Pilot's) — See Control Stick Pitch and Roll (Pilot's)		
Stiffeners, Repair . . . . .	2-28	2-139
Damage Requiring Replacement (AVIM) . . . . .	2-31	2-151
Major Damage (AVIM) . . . . .	2-30	2-150
Minor Damage . . . . .	2-29	2-147
Stop Pitch Overtravel — See Pitch Overtravel Stop		
Stop, Power Turbine RPM Limiting Replace . . . . .	4-137	4-317
Stops Cumulative — See Cumulative Stops		
Storage		
General Information . . . . .	1-93	1-313
General Inspection . . . . .	1-95	1-315
General Procedures . . . . .	1-94	1-314
Storage, Flyable		
Inspection . . . . .	1-98	1-321
Inspection, Preliminary . . . . .	1-96	1-317
Inspection After Servicing . . . . .	1-100	1-324
Preparation . . . . .	1-97	1-319
Servicing . . . . .	1-99	1-322
Storage Intermediate		
Inspection, Preliminary . . . . .	1-105	1-334
Inspection, After Servicing . . . . .	1-108	1-343
Preparation . . . . .	1-106	1-335
Servicing . . . . .	1-107	1-339
Storage, Short Term		
Inspection, Preliminary . . . . .	1-101	1-325
Inspection After Servicing. . . . .	1-104	1-333
Preparation . . . . .	1-102	1-326
Servicing . . . . .	1-103	1-330
Stowage Container, Cargo Handling		
Install . . . . .	14-20	14-48
Remove . . . . .	14-19	14-47
Strainer Element, Oil Filler		
Replace . . . . .	4-97	4-238
Strakes		
Repair . . . . .	2-216	2-587

	<i>Task</i>	<i>Page</i>
Strap, Inertia Reel, Pilot or Copilot Shoulder Harness — See Inertia Reel, Pilot or Copilot Shoulder Harness, Strap		
Strap, Litter Support		
Install . . . . .	16-66	16-185
Remove . . . . .	16-65	16-184
Stringers . . . . .	2-16	2-43
Minor Damage . . . . .	2-15	2-41
Reparable Damage (AVIM) . . . . .	2-17	2-58
Stripper Solution, Rust, Prepare (AVIM) — See Rust Stripper Solution, Prepare (AVIM)		
Strip, Rubber, Windshield Support Structure, Replace — See Windshield Support Structure Rubber		
Strip, Replace		
Strobex/Vibrex		
Functional Check . . . . .	5-145	5-532
Strobex Tracker		
Clean and inspect (AVIM) . . . . .	5-146	5-541
Clean . . . . .	5-147	5-542
Repair (AVIM) . . . . .	5-148	5-543
Structural Manifold, Lower Controls Actuator — See Lower Controls Actuator Structural Manifold		
Structure, Support, Cabin Equipment — See Cabin Equipment Support Structure		
Structure, Support, Cockpit Equipment — See Equipment Support Structure, Cockpit		
Stud, Locked-in, Replacement . . . . .	1-15	1-16
Substitute AN Bolts For AN Rivets — See Bolts, AN Substitute for AN Rivets		
Substitution of Bolts — See Bolts, Substitution Of		
Suction Feed Check Valve		
Install . . . . .	10-62	10-242
Remove . . . . .	10-61	10-240
Sump, Aft Transmission		
Assemble . . . . .	6-80	6-237
Disassemble . . . . .	6-79	6-235
Install . . . . .	6-81	6-240
Remove . . . . .	6-78	6-233
Sump, Combining Transmission		
Assemble . . . . .	6-191	6-506
Disassemble . . . . .	6-190	6-504
Install . . . . .	6-192	6-509
Remove . . . . .	6-189	6-500
Sump, Forward Transmission		
Assemble . . . . .	6-36	6-93
Disassemble . . . . .	6-34	6-87
Install . . . . .	6-37	6-96

	<i>Task</i>	<i>Page</i>
Remove . . . . .	6-33	6-85
Repair . . . . .	6-35	6-89
Support Beam and Bearings, Center Hook		
Install . . . . .	16-10	16-35
Remove . . . . .	16-9	16-33
Support Bellcrank Pitch and Roll, Control Pallet Sta 120		
Support Bellcrank Yaw and Thrust Control Pallet Sta 95 — See Control Pallet Sta 95		
Yaw and Thrust idler Bellcrank Support		
Support Bracket, Actuator		
Install . . . . .	4-111	4-262
Remove . . . . .	4-110	4-261
Support Brackets, Suppressive Fire System		
Install . . . . .	2-212	2-576
Remove . . . . .	2-211	2-573
Support, Pitot Tube		
Install . . . . .	8-29	8-70
Remove . . . . .	8-28	8-68
Support Plates, Suppressive Fire System		
Install Aft . . . . .	2-259	2-680
Install Forward . . . . .	2-235	2-621
Remove Aft . . . . .	2-258	2-679
Remove Forward . . . . .	2-234	2-619
Support Structure, Equipment, Aft Pylon — See Equipment Support Structure, Aft Pylon		
Support Thrust Detent — See Thrust Detent Support		
Supports, Apu — See Apu Supports		
Swashplate and Servocylinder Aft or Forward Rigged — See Rig Forward or Aft Swashplate and Servocylinder		
Swashplate Ball and Slider Travel, Check . . . . .	11-41	11-128
Swashplates		
Aft Swashplate		
Install . . . . .	5-133	5-470
Remove . . . . .	5-116	5-423
Ball Spherical Bearing, Fwd and Aft		
Axial Play Check . . . . .	5-121	5-435
Friction Check . . . . .	5-114	5-410
Install (AVIM) . . . . .	5-125	5-445
Remove (AVIM) . . . . .	5-122	5-436
Clean Installed, Fwd and Aft . . . . .	5-113	5-409
Clean Removed, Fwd and Aft . . . . .	5-117	5-427
Forward Swashplate		
Install . . . . .	5-132	5-466
Remove . . . . .	5-115	5-417
Place in Service, Fwd and Aft . . . . .	5-131	5-463
Prepare for Storage and Shipment, Fwd and Aft . . . . .	5-130	5-456

	<i>Task</i>	<i>Page</i>
Rotating Ring, Fwd and Aft		
Inspect . . . . .	5-119	5-432
Repair . . . . .	5-120	5-433
Sliding Sleeve Bearings, Fwd and Aft		
Install (AVIM) . . . . .	5-124	5-440
Remove (AVIM) . . . . .	5-123	5-438
Stationary Ring, Aft		
Inspect . . . . .	5-128	5-453
Repair (AVIM) . . . . .	5-129	5-454
Stationary Ring, Fwd		
Inspect . . . . .	5-126	5-450
Repair (AVIM) . . . . .	5-127	5-451
Swashplate Bearing (Fwd and Aft)		
Friction Check . . . . .	5-118	5-431
Switch, Agent, Fire Extinguisher		
Install . . . . .	12-20	12-47
Remove . . . . .	12-19	12-45
Switch, Air Pressure, Heater		
Install . . . . .	13-53	13-143
Remove . . . . .	13-52	13-142
Switch and Adapter, Fire Pull Control		
Install . . . . .	12-17	12-41
Remove . . . . .	12-16	12-40
Switch, Inertia, Emergency Light		
Install . . . . .	17-12	17-25
Remove . . . . .	17-11	17-24
Switch, Out-of-Phase Power Steering — See Power Steering Out-of-Phase Switch		
Switch Panel, Caution Lights — See Caution Lights Switch Panel		
Switch, Proximity, Aft Landing Gear — See Proximity Switch, Aft Landing Gear		
Switch, Temperature, Utility Reservoir/Cooler		
Install . . . . .	7-211	7-696
Remove . . . . .	7-210	7-694
Switched Battery Bus Relay		
Install . . . . .	9-19	9-49
Remove . . . . .	9-18	9-48
Swatches, Emergency Power		
Install . . . . .	8-7	8-19
Remove . . . . .	8-6	8-18
Switches, Forward and Aft Cargo Adjust (AVIM) . . . . .	16-28	16-94
Switches, Heater Thermostatic		
Install . . . . .	13-51	13-140
Remove . . . . .	13-50	13-138
Switches, Transmission Oil Pressure		
Aft Trans. Auxiliary		
Replace . . . . .	8-71	8-152

	<b>Task</b>	<b>Page</b>
Aft Trans. Main		
Replace .....	8-70	8-150
Combining Trans. Auxiliary		
Replace .....	8-67	8-144
Combining Trans. Main		
Replace .....	8-66	8-142
Engine Trans., No. 1, Main		
Replace .....	8-68	8-146
Engine Trans., No. 2, Main		
Replace .....	8-69	8-148
Forward Transmission		
Replace .....	8-65	8-140
Rotor Shaft, Aft		
Replace .....	8-72	8-154
Switches, Winch Limit		
Adjust (AVIM) .....	14-3	14-5
Swivel Housing, Aft Landing Gear		
Assemble (AVIM) .....	3-63	3-133
Disassemble (AVIM) .....	3-62	3-130
Install .....	3-66	3-149
Remove .....	3-61	3-126
Test (AVIM) .....	3-64	3-139
Seals		
Install .....	3-58	3-121
Remove .....	3-57	3-119
Swivel Housing Seals, Aft Landing Gear		
Install .....	3-58	3-121
Remove .....	3-57	3-119
Swivel Lock Actuator Cylinder		
Assemble (AVIM) .....	7-312	7-980
Clean-Parts (AVIM) .....	7-310	7-976
Disassemble (AVIM) .....	7-309	7-974
Inspect (AVIM) .....	7-311	7-978
Install .....	7-314	7-985
Remove .....	7-308	7-971
Test (AVIM) .....	7-313	7-982
Swivel Lock, Aft Landing Gear		
Install .....	3-68	3-154
Remove .....	3-67	3-153
Swiveling and Pivoting Servocylinders — See		
Pivoting and Swiveling Servocylinders		
Synchronizing Shafting — See Drive Shafting		

**T**

Tab, Trim, Rotary-Wing Blades—See		
Rotary-Wing Blades Trim Tab		
Tachometer Generator, No. 1 Gas Producer		
Install .....	8-12	8-30

	<i>Task</i>	<i>Page</i>
Remove . . . . .	8-9	8-23
Test . . . . .	8-11	8-27
Tachometer Generator, No. 2 Gas Producer		
Install . . . . .	8-13	8-33
Remove . . . . .	8-10	8-25
Test . . . . .	8-11	8-27
Tail Position Light		
Install . . . . .	9-64	9-178
Lamp		
Replace . . . . .	9-65	9-180
Remove . . . . .	9-63	9-176
Tailcone		
Repair . . . . .	2-275	2-709
Repair (AVIM) . . . . .	2-276	2-716
Tandem Cargo Hook — See Cargo Hook, Fwd and Aft		
Tank, Fuel — See Aft, Forward, or Main Fuel Tank		
Tank Unit, Fuel Quantity Indicating		
Install . . . . .	8-82	8-177
Remove . . . . .	8-81	8-175
Tape, Anti-Chafing, Application of — See Application of Anti-Chafing Tape		
Tape, Velcro, Application of — See Velcro Tape, Application of		
TEAC (Turbine Engine Analysis Check) . . . . .	4-3	4-8
Temperature Bulb, Flight Control Reservoir/Cooler — See Flight Control Reservoir/Cooler Temperature Bulb		
Temperature Controller		
Install . . . . .	13-59	13-154
Remove . . . . .	13-58	13-153
Temperature Switch, Flight Control Reservoir/Cooler — See Flight Control Reservoir/Cooler Temperature Switch		
Terminal Board Module		
Install . . . . .	9-166	9-445
Remove . . . . .	9-165	9-443
Test AFCS Interface — See AFCS Interface Test		
Test Box, Dynamic Absorber — See Absorber, Dynamic, Test Box		
Test Tank After Installation		
Aft Tank . . . . .	10-32	10-116
Forward Tank . . . . .	10-27	10-92
Main Tank . . . . .	10-22	10-67
Thermostat, Cabin		
Install . . . . .	13-61	13-157
Remove . . . . .	13-60	13-156
Thermostatic Switches, Heater		
Install . . . . .	13-51	13-140
Remove . . . . .	13-50	13-138



	<i>Task</i>	<i>Page</i>
Three-Way Valve, Power Control Module		
— See Power Control Module Three-Way Valve		
Three-Way Valve, Power Transfer Unit Module		
— See Power Transfer Unit Module Three-Way Valve		
Three-Way Valves, Pressure Control Module		
Install . . . . .	7-163	7-590
Remove . . . . .	7-162	7-587
Thrust and Yaw Pallet Idler Bellcranks Rigged		
— See Rig Pallet Thrust and Yaw Idler Bellcranks		
Thrust Arm		
Install . . . . .	11-139	11-532
Remove . . . . .	11-138	11-531
Thrust Balance Spring		
Adjust . . . . .	11-133	11-522
Install . . . . .	11-132	11-521
Remove . . . . .	11-131	11-520
Thrust CCDA Actuator		
Assemble . . . . .	11-157	11-567
Disassemble . . . . .	11-155	11-563
Install . . . . .	11-158	11-572
Remove . . . . .	11-154	11-561
Test-Bench . . . . .	11-279	11-1022
Thrust Control (Copilot)		
Assemble (AVIM) . . . . .	11-65	11-252
Clean (Installed) . . . . .	11-59	11-237
Clean (Removed) (AVIM) . . . . .	11-64	11-251
Disassemble (AVIM) . . . . .	11-63	11-246
Inspect (AVIM) . . . . .	11-60	11-239
Install . . . . .	11-67	11-263
Paint . . . . .	11-68	11-268
Remove . . . . .	11-62	11-243
Rig . . . . .	11-43	11-148
Test (AVIM) . . . . .	9-140.1	9-372.1
Thrust Control (Pilot)		
Assemble (AVIM) . . . . .	11-65	11-252
Clean (Installed) . . . . .	11-59	11-237
Clean (Removed) (AVIM) . . . . .	11-64	11-251
Disassemble (AVIM) . . . . .	11-63	11-246
Inspect . . . . .	11-60	11-239
Install . . . . .	11-66	11-258
Paint . . . . .	11-68	11-268
Remove . . . . .	11-61	11-240
Rig . . . . .	11-43	11-148
Test (AVIM) . . . . .	9-140.1	9-372.1
Thrust Control Detent		
Adjust . . . . .	11-109	11-470
Install . . . . .	11-108	11-469
Remove . . . . .	11-107	11-468

Thrust Control Grip		
Assemble (AVIM) . . . . .	9-140	9-371
Disassemble (AVIM) . . . . .	9-139	9-369
Install . . . . .	9-141	9-373
Remove . . . . .	9-138	9-368
Thrust Control Rig — See Rig Thrust Control		
Thrust Control Rig Pin Damage Remove . . . . .	11-17	11-37
Thrust Control Travel Check . . . . .	11-39	11-120
Thrust Detent Support		
Install . . . . .	11-111	11-473
Remove . . . . .	11-110	11-472
Thrust Idler Bellcrank Control Pallet Sta 95		
— See Control Pallet Sta 95 Thrust Idler Bellcrank		
Thrust Intermediate Bellcranks		
Clean . . . . .	11-2	11-6
Inspect — Corrosion . . . . .	11-11	11-21
Inspect — General . . . . .	11-10	11-20
Install . . . . .	11-183	11-637
Remove . . . . .	1-182	11-634
Repair — General . . . . .	11-12	11-22
Repair — Finish . . . . .	11-13	11-24
Thrust, Roll or Yaw ILCA Input Connecting Links		
Rigged — See Rig Roll, Yaw or Thrust ILCA		
Input Connecting Links		
Thrust Viscous Damper Connecting Link		
Install . . . . .	11-126	11-509
Remove . . . . .	11-125	11-508
Tiedown Adapter, 5000 Pound, Cabin Floor		
Install . . . . .	2-206	2-559
Remove . . . . .	2-205	2-558
Tiedown Adapter, 10,000 Pound Cabin Floor		
Install . . . . .	2-237	2-624
Remove . . . . .	2-236	2-623
Tiedown Adapters, Ramp		
Install . . . . .	2-246	2-640
Remove . . . . .	2-245	2-639
Tiedown Kit		
Install . . . . .	1-33	1-99
Remove . . . . .	1-34	1-102
Tiedown Receiver, Rotary-Wing Blade — See Rotary-Wing Blade Tiedown Receiver		
Timer, Flare Dispenser		
Install . . . . .	16-57	16-173
Remove . . . . .	16-56	16-172
Tire and Tube, Fwd and Aft Landing Gear		
Install . . . . .	3-8	3-22
Remove . . . . .	3-7	3-19
Tire, Landing Gear Wheel — See Tire and Tube, Fwd and Aft Landing Gear		
Tool Lead/Lag — See Lead/Lag Tool		
Tools and Test Equipment . . . . .	1-17	1-27
Tools Rigging Cockpit — See Cockpit Rigging Tools		

	<i>Task</i>	<i>Page</i>
Torque Arm, Fwd Landing Gear		
Install . . . . .	3-18	3-44
Remove . . . . .	3-17	3-42
Torque Limits . . . . .	1-13	1-7
Torquemeter Power Supply, Engine		
Install . . . . .	8-22	8-49
Remove . . . . .	8-20	8-46
Test (AVIM) . . . . .	8-21	8-47
Towing		
Alternate . . . . .	1-20	1-50
Normal . . . . .	1-19	1-45
Towing Shackle, Aft Landing Gear		
Install . . . . .	3-60	3-125
Remove . . . . .	3-59	3-124
Towing Shackle, Fwd Landing Gear		
Install . . . . .	3-26	3-53
Remove . . . . .	3-25	3-52
Tracking and Balancing, Rotary-Wing Blades		
Ground Tracking . . . . .	5-140	5-504
In-Flight Balancing . . . . .	5-142	5-517
In-Flight Tracking . . . . .	5-141	5-511
Prepare for Tracking and Balancing . . . . .	5-139	5-499
Remove Tracking and Balancing Equipment . . . . .	5-143	5-527
Tracking, Rotary-Wing Blades — See Tracking and Balancing, Rotary-Wing Blades		
Trailing Edge Fairing		
Install . . . . .	2-288	2-735
Remove . . . . .	2-286	2-733
Repair . . . . .	2-287	2-734
Transducer Linear End Fitting Bearing		
Install (AVIM) . . . . .	11-175	11-613
Remove (AVIM) . . . . .	11-174	11-612
Transducer Linear Rod End Bearing		
Install (AVIM) . . . . .	11-173	11-610
Remove (AVIM) . . . . .	11-172	11-609
Transducer Pitch Control Position		
Adjust . . . . .	11-177	11-622
Install . . . . .	11-169	11-602
Remove . . . . .	11-168	11-601
Transducer Roll or Yaw Control Position		
Adjust . . . . .	11-176	11-616
Install — Yaw . . . . .	11-167	11-598
Install — Roll . . . . .	11-167	11-598
Remove — Yaw . . . . .	11-166	11-597
Remove -- Roll . . . . .	11-170	11-605
Transducer, Transmission Oil Pressure		
Aft Transmission		
Install . . . . .	8-62	8-136
Remove . . . . .	8-61	8-135

	<i>Task</i>	<i>Page</i>
Combining, No. 1 and No. 2 Trans.		
Install . . . . .	8-60	8-133
Remove . . . . .	8-59	8-132
Forward Transmission		
Install . . . . .	8-64	8-139
Remove . . . . .	8-63	8-138
Transfer Bellcranks, Cockpit Control — See Cockpit Control Transfer Bellcranks		
Transfer Bellcranks in Cockpit Rigged — See Cockpit Control Transfer Connecting Links		
Transfer Connecting Links Cockpit Control — See Cockpit Control Transfer Connecting Links		
Transfer Cylinder — See Cylinder, Transfer — Utility Return Control Module		
Transfer Valve Brake — See Brake Transfer Valve		
Transformer, Apu Generator Current, Aft — See Apu Generator Current Transformer, Aft		
Transformer, Apu Generator Current, Forward—See Apu Generator Current Transformer, Forward		
Transformer Fail Relay		
Install . . . . .	9-17	9-46
Remove . . . . .	9-16	9-44
Transformer, instrument — See Instrument Transformer		
Transformer, Lighting, 26V — See Lighting Transformer, 26V		
Transformer, Main Current—See Main Current Transformer		
Transformer Rectifiers		
Install . . . . .	9-3	9-13
Remove . . . . .	9-2	9-11
Transition Duct, Heater		
Install . . . . .	13-23	13-69
Remove . . . . .	13-22	13-67
Transmission, Aft . . . . .	6-1	6-1
Assemble . . . . .	6-96	6-283
Disassemble . . . . .	6-93	6-275
Drain Oil . . . . .	6-138	6-385
Drive Shaft Seal, Oil Cooler Fan		
Install . . . . .	6-89	6-259
Remove . . . . .	6-88	6-257
Flush Oil System . . . . .	6-139	6-387
Generator Drive Shaft Seal		
Install . . . . .	6-87	6-254
Remove . . . . .	6-86	6-252
Hydraulic Pump Drive Shaft Oil Seal		
Install . . . . .	6-85	6-249
Remove . . . . .	6-84	6-247
Input Shaft Oil Seal		
Install . . . . .	6-83	6-244
Remove . . . . .	6-82	6-242
Install . . . . .	6-97	6-285

	<i>Task</i>	<i>Page</i>
Leakage, Allowable . . . . .	6-137	6-384
Oil Contamination Analysis . . . . .	6-136	6-383
Oil Cooler — See Oil Cooler, Aft Transmission		
Oil Filter Element Replacement, Aux . . . . .	6-154	6-427
Oil Filter Element Replacement, Main . . . . .	6-148	6-414
Oil Pump, Aux		
Install . . . . .	6-153	6-425
Remove . . . . .	6-152	6-423
Oil Pump, Main		
Adjust . . . . .	6-151	6-421
Install . . . . .	6-150	6-419
Remove . . . . .	6-149	6-418
Outside Surface		
Repair . . . . .	6-93.1	6-276.1
Prepare for Storage or Shipment . . . . .	6-94	6-276.4
Remove . . . . .	6-92	6-266
Remove from Storage . . . . .	6-95	6-280
Rotor Shaft Seal		
Install . . . . .	6-91	6-263
Remove . . . . .	6-90	6-262
Screen, Debris Detection		
Install . . . . .	6-158	6-434
Remove . . . . .	6-157	6-432
Screen, Main Inlet		
Inspect . . . . .	6-131	6-373
Install . . . . .	6-156	6-430
Remove . . . . .	6-155	6-429
Serviceability Check . . . . .	6-140	6-389
Servicing . . . . .	1-54	1-183
Sight Gage Replacement . . . . .	6-159	6-436
Sump — See Sump, Aft Transmission		
Transmission, Combining . . . . .	6-1	6-1
Assemble . . . . .	6-76	6-223
Chip Detector		
Inspect Plug . . . . .	6-178	6-470
Install . . . . .	6-179	6-473
Remove . . . . .	6-177	6-469
Disassemble . . . . .	6-73	6-215
Drain Oil . . . . .	6-168	6-452
Drive Shaft Seal, Oil Cooler Fan		
Install . . . . .	6-71	6-206
Remove . . . . .	6-70	6-204
Flush Oil System . . . . .	6-169	6-454
Input Shaft Oil Seal		
Install . . . . .	6-65	6-191
Remove . . . . .	6-64	6-189
Install . . . . .	6-77	6-226
Leakage, Allowable . . . . .	6-167	6-451
Oil Contamination Analysis . . . . .	6-166	6-450
Oil Cooler — See Oil Cooler Assembly Combining Transmission		

	<i>Task</i>	<i>Page</i>
Oil Filter Element Replacement, Aux . . . . .	6-173	6-463
Oil Filter Element Replacement, Main . . . . .	6-171	6-460
Oil Pump Adjustment, Main . . . . .	6-172	6-461
Output Shaft Oil Seal, Aft		
Install . . . . .	6-69	6-201
Remove . . . . .	6-68	6-199
Output Shaft Oil Seal, Forward		
Install . . . . .	6-67	6-196
Remove . . . . .	6-66	6-194
Outside Surface		
Repair . . . . .	6-73.1	6-216.1
Prepare for Shipment or Storage . . . . .	6-74	6-217
Remove . . . . .	6-72	6-209
Remove from Storage . . . . .	6-75	6-221
Screen, Debris Detection		
Inspect . . . . .	6-175	6-466
Install . . . . .	6-176	6-467
Remove . . . . .	6-174	6-465
Screen, Inlet		
Install . . . . .	6-181	6-476
Remove . . . . .	6-180	6-475
Serviceability Check . . . . .	6-170	6-456
Servicing . . . . .	1-54	1-183
Sight Gage Replacement . . . . .	6-193	6-513
Sump — See Sump, Combining Transmission		
Transmission, Engine . . . . .	6-1	6-1
Assemble (Left) . . . . .	6-105	6-314
Assemble (Right) . . . . .	6-106	6-316
Chip Detector Plug		
Inspect . . . . .	6-205	6-539
Install . . . . .	6-206	6-542
Remove . . . . .	6-204	6-538
Disassemble . . . . .	6-102	6-305
Drain Oil . . . . .	6-196	6-518
Flush Oil System . . . . .	6-197	6-520
Install . . . . .	6-107	6-319
Leakage, Allowable . . . . .	6-195	6-517
Oil Contamination Analysis . . . . .	6-194	6-516
Oil Cooler — See Oil Cooler, Engine Transmission		
Oil Filter Element Replacement . . . . .	6-199	6-528
Oil Pump Adjustment . . . . .	6-200	6-531
Output Shaft Oil Seal		
Install . . . . .	6-99	6-298
Remove . . . . .	6-98	6-295
Outside Surface		
Repair . . . . .	6-102.1	6-306.1
Prepare for Shipment or Storage . . . . .	6-103	6-307
Quill Shaft Inspection . . . . .	6-101	6-304
Remove . . . . .	6-100	6-302
Remove from Storage . . . . .	6-104	6-311

	<i>Task</i>	<i>Page</i>
Screen, Debris Detection		
Inspect . . . . .	6-202	6-535
Install . . . . .	6-203	6-536
Remove . . . . .	6-201	6-533
Screen Inlet		
Inspect . . . . .	6-210	6-548
Install . . . . .	6-211	6-549
Remove . . . . .	6-209	6-547
Serviceability Check . . . . .	6-198	6-523
Servicing . . . . .	1-54	1-183
Sight Gage Replacement . . . . .	6-212	6-551
Temperature and Chip Detector		
Install . . . . .	6-208	6-545
Remove . . . . .	6-207	6-544
Transmission Fairing, Engine		
Install . . . . .	4-73	4-186
Remove . . . . .	4-70	4-180
Repair (General Information and Minor Damage) . . . . .	4-71	4-184
Repair (Major Damage) . . . . .	4-72	4-185
Transmission, Forward . . . . .	6-1	6-1
Air Inlet Duct		
Install . . . . .	6-122	6-353
Remove . . . . .	6-121	6-351
Assemble . . . . .	6-50	6-137
Disassemble . . . . .	6-47	6-123
Drain Oil . . . . .	6-110	6-325
Flight Control Pump Shaft Oil Seal		
Install . . . . .	6-45	6-113
Remove . . . . .	6-44	6-111
Flush Oil System . . . . .	6-111	6-326
Input Shaft Oil Seal		
Install . . . . .	6-43	6-108
Remove . . . . .	6-42	6-106
Install . . . . .	6-51	6-146
Leakage, Allowable . . . . .	6-109	6-324
Oil Contamination Analysis . . . . .	6-108	6-323
Oil Cooler — See Oil Cooler, Forward Transmission		
Oil Filter Element Replacement, Aux . . . . .	6-129	6-370
Oil Filter Element Replacement, Main . . . . .	6-123	6-357
Oil Pump, Auxiliary		
Install . . . . .	6-128	6-368
Remove . . . . .	6-127	6-366
Oil Pump, Main		
Adjust . . . . .	6-126	6-364
Install . . . . .	6-125	6-362
Remove . . . . .	6-124	6-360

	<i>Task</i>	<i>Page</i>
Prepare for Storage or Shipment . . . . .	6-48	6-131
Remove . . . . .	6-46	6-116
Remove from Storage . . . . .	6-49	6-135
Repair Outside Surface . . . . .	6-47.1	6-130.1
Rotor Shaft Oil Seal		
Install . . . . .	6-40	6-101
Remove . . . . .	6-39	6-100
Screen, Debris Detection		
Install . . . . .	6-134	6-378
Remove . . . . .	6-133	6-376
Screen, Inlet		
Inspect . . . . .	6-131	6-373
Install . . . . .	6-132	6-374
Remove . . . . .	6-130	6-372
Serviceability Check . . . . .	6-112	6-328
Servicing . . . . .	1-54	1-183
Sight Gage Replacement . . . . .	6-135	6-382
Slider Shaft		
Install . . . . .	6-41	6-103
Remove . . . . .	6-38	6-98
Sump — See Sump, Forward Transmission		
Transmission Oil Pressure Indicator		
Install . . . . .	8-87	8-187
Remove . . . . .	8-86	8-185
Test (AVIM) . . . . .	8-58	8-125
Transmission Oil Pressure Selector Switch		
Install . . . . .	8-87	8-187
Remove . . . . .	8-86	8-185
Test (AVIM) . . . . .	8-58	8-125
Transmission Oil Pressure Switches — See Switches, Transmission Oil Pressure		
Transmission Oil Pressure Transducer — See Transducer, Transmission Oil Pressure		
Transmission Oil Temperature Indicator		
Install . . . . .	8-87	8-187
Remove . . . . .	8-86	8-185
Test (AVIM) . . . . .	8-73	8-156
Transmission Oil Temperature Selector Switch		
Install . . . . .	8-87	8-187
Remove . . . . .	8-86	8-185
Test (AVIM) . . . . .	8-73	8-156
Transmission Oil Temperature Transmitter — See Transmitter, Transmission Oil Temperature		
Transmitter, Engine Oil Pressure		
Install . . . . .	8-16	8-38
Remove . . . . .	8-15	8-37
Transmitter, Engine Oil Temperature		
Replace . . . . .	8-18	8-42



	<i>Task</i>	<i>Page</i>
Transmitter, Pressure Control Module		
Install . . . . .	7-169	7-602
Remove . . . . .	7-168	7-600
Transmitter, Transmission Oil Temperature		
Aft		
Replace . . . . .	8-78	8-171
Combining		
Replace . . . . .	8-75	8-165
Engine, No. 1		
Replace . . . . .	8-76	8-167
Engine, No. 2		
Replace . . . . .	8-77	8-169
Forward		
Replace . . . . .	8-74	8-163
Transparent Plastic Finish Restore . . . . .	2-345	2-903
Travel Quadrant, Pitch, Roll or Yaw Cockpit—See Cockpit Travel Quadrant Pitch, Roll, or Yaw		
Trim or Servo Motor (CCDA) — See Motor Trim or Servo		
Troop Commander's Seat		
Assemble . . . . .	2-132	2-389
Disassemble . . . . .	2-131	2-385
Install . . . . .	2-133	2-393
Position for Use (Unstop) . . . . .	2-135	2-396
Remove . . . . .	2-130	2-384
Stow . . . . .	2-134	2-394
Troop Jump Signal Dimming Resistor		
Adjust . . . . .	9-124	9-334
Install . . . . .	9-123	9-332
Remove . . . . .	9-122	9-330
Troop Seat, One-Man		
Assemble . . . . .	2-226	2-605
Disassemble . . . . .	2-225	2-603
Install . . . . .	2-223	2-599
Remove . . . . .	2-224	2-601
Stow . . . . .	2-227	2-608
Unstow . . . . .	2-222	2-598
Troop Seat, Three-Man		
Assemble . . . . .	2-232	2-616
Disassemble . . . . .	2-231	2-614
Install . . . . .	2-229	2-610
Remove . . . . .	2-230	2-612
Stow . . . . .	2-233	2-618
Unstop . . . . .	2-228	2-609
Troop Seats		
Clean . . . . .	2-221	2-597

	<i>Task</i>	<i>Page</i>
Troop Warning Box		
Assemble . . . . .	9-120	9-321
Disassemble . . . . .	9-119	9-316
Install . . . . .	9-121	9-327
Remove . . . . .	9-118	9-312
Tube, Landing Gear Wheel — See Tire and Tube, Fwd and Aft Landing Gear		
Tube, Pitot		
Install . . . . .	8-30	8-72
Remove . . . . .	8-27	8-67
Tube Pressure Power Steering Assy — See Power Steering Assy Pressure Tube		
Tubing Repair, Aluminum — See Aluminum Tubing Repair		
Tunnel Connecting Links — See Connecting Links		
Tunnel		
Tunnel Connecting Links Forward — See Connecting Links		
Forward Tunnel		
Tunnel Control Arms		
Check—Clearance . . . . .	11-5	11-9
Clean . . . . .	11-2	11-6
Inspect . . . . .	11-10	11-20
Install . . . . .	11-241	11-828
Remove . . . . .	11-240	11-826
Repair . . . . .	11-12	11-22
Repair — Finish . . . . .	11-13	11-24
Rig . . . . .	11-56	11-217
Tunnel Control Idler		
Check—Clearance . . . . .	11-5	11-9
Check—Bearing . . . . .	11-15	11-29
Clean . . . . .	11-2	11-6
Inspect . . . . .	11-10	11-20
Install . . . . .	11-243	11-836
Remove . . . . .	11-242	11-834
Repair . . . . .	11-12	11-22
Repair — Finish . . . . .	11-13	11-24
Rig . . . . .	11-56	11-217
Tunnel Controls Linkage Rigged — See Rig Tunnel		
Control Linkage		
Tunnel Covers — See Access Doors, Cabin Crown		
Tunnel Drains		
Replace . . . . .	2-213	2-581
Turn and Slip indicator		
Install . . . . .	8-45	8-100
Remove . . . . .	8-44	8-98

	<i>Task</i>	<i>Page</i>
<b>U</b>		
Upper Drag Link, Aft Landing Gear		
Install . . . . .	3-51	3-104
Remove . . . . .	3-49	3-101
Repair (AVIM) . . . . .	3-50	3-103
Utility and Flight Control Hydraulic Pump Test — See Flight Control and Utility Hydraulic Pump Test		
Utility Hydraulic Cooling Fan		
Assemble (AVIM) . . . . .	7-221	7-731
Disassemble (AVIM) . . . . .	7-220	7-726
Install . . . . .	7-223	7-739
Remove . . . . .	7-219	7-724
Test (AVIM) . . . . .	7-222	7-737
Utility Hydraulic Pump		
Install . . . . .	7-151	7-560
Remove . . . . .	7-150	7-557
Test (AVIM) . . . . .	7-26	7-113
Utility Hydraulic System . . . . .	7-135	7-507
Utility Light		
Install . . . . .	9-112	9-300
Remove . . . . .	9-111	9-298
Utility Reservoir/Cooler — See Reservoir/ Cooler, Utility		
Utility Return Control Module — See Module, Utility Return Control		
<b>V</b>		
Valve Actuating Cargo Door— See Cargo Door Pressure Actuating Valve		
Valve, Air, Fwd Landing Gear — See Air Valve, Fwd Landing Gear		
Valve, Apu Fuel Shutoff Manual		
Install . . . . .	10-102	10-361
Remove . . . . .	10-101	10-359
Valve, Apu Fuel Solenoid		
Install . . . . .	10-100	10-357
Remove . . . . .	10-99	10-355
Valve Brake Transfer — See Brake Transfer Valve		
Valve, Butterfly, Air Outlet Flap		
Install . . . . .	13-41	13-117
Remove . . . . .	13-40	13-115
Valve Check Steering/Swivel Lock — See Power Steering/ Swivel Lock Check Valve		
Valve Control Power Steering and Swivel Lock—See Power Steering and Swivel Lock Control Valve		
Valve, Defrost		
Install . . . . .	13-27	13-77
Remove . . . . .	13-26	13-75

	<i>Task</i>	<i>Page</i>
Valve, Engine Fairing Hot Air		
Install . . . . .	4-79	4-204
Remove . . . . .	4-78	4-202
Valve, Engine Start		
Install . . . . .	7-155	7-571
Remove . . . . .	7-154	7-569
Valve, Fuel Crossfeed		
Install . . . . .	10-114	10-389
Remove . . . . .	10-113	10-386
Valve, Heater Fuel Solenoid		
Install . . . . .	13-49	13-136
Remove . . . . .	13-48	13-134
Valve Hoist Control — See Hoist Control Valve		
Valve Hoist, Pressure Reducing—See Hoist Pressure Reducing Valve		
Valve Hook Release — See Hook Release Valve		
Valve, Manual Refueling		
Install . . . . .	10-110	10-377
Remove . . . . .	10-109	10-375
Valve Parking Brake — See Brake Parking Valve		
Valve, Pilot, Utility Pressure Control Module		
Install . . . . .	7-161	7-585
Remove . . . . .	7-160	7-582
Valve, PTU, Pressure Control Module		
Install . . . . .	7-171	7-606
Remove . . . . .	7-170	7-604
Valve Ramp Control — See Ramp Control Valve		
Valve Reducing Brake Pressure — See Brake Pressure Reducing Valve		
Valve Reducing Hoist Pressure — See Hoist Pressure Reducing Valve		
Valve Relief Hoist Pressure — See Hoist Pressure Relief Valve		
Valve Servo Power Steering—See Power Steering Servo Valve		
Valve Sequence Cargo Door — See Cargo Door Sequence Valve		
Valve, Shutoff Engine Fuel		
Install . . . . .	10-112	10-383
Remove . . . . .	10-111	10-380
Valve Shutoff Hoist Control — See Hoist Control Shutoff Valve		
Valve, Three-Way, Utility Pressure Control		
Install . . . . .	7-163	7-590
Remove . . . . .	7-162	7-587
Velcro Tape, Application Of . . . . .	2-338	2-895

	<i>Task</i>	<i>Page</i>
Vent Assy, Fuel Tank		
Aft or Forward Tank		
Install . . . . .	10-66	10-255
Remove . . . . .	10-65	10-250
Main Tank		
Install . . . . .	10-44	10-173
Remove . . . . .	10-43	10-167
Vent Fairing, Fuel Tank		
Install . . . . .	10-64	10-248
Remove . . . . .	10-63	10-246
Vent System Flow Test . . . . .	10-118	10-401
Vent System Pressure Test . . . . .	10-117	10-396
Vent Valve, Fuel Tank		
Aft Tank		
Install . . . . .	10-84	10-319
Remove . . . . .	10-83	10-316
Forward Tank		
Install . . . . .	10-74	10-285
Remove . . . . .	10-73	10-283
Main Tank		
Install . . . . .	10-46	10-181
Remove . . . . .	10-45	10-179
Vent Valve, Shock Absorber—See Shock Absorber, Rotary Wing Blade		
Vertical Hinge Pin Bearings—See Bearings, Vertical Hinge Pin		
Vertical Hinge Pin Oil Manifold Tube — See Oil Manifold, Vertical Hinge Pin		
Vertical Hinge Pin Oil Seals — See Oil Seal, Vertical Hinge Pin		
Vertical Hinge Pin Oil Tanks — See Oil Tanks, Vertical Hinge Pin		
Vertical Hinge Pin Oil Tank Sight Indicator — See Sight Indicator, Vertical Hinge Pin Oil Tank		
Vibrex — See Strobex/Vibrex		
Viscous Damper Pitch		
Adjust (AVIM) . . . . .	11-121	11-494
Assemble (AVIM) . . . . .	11-117	11-484
Disassemble and Inspect (AVIM) . . . . .	11-115	11-480
Install . . . . .	11-123	11-500
Remove . . . . .	11-113	11-476
Test (AVIM) . . . . .	11-119	11-490
Viscous Damper Roll		
Adjust (AVIM) . . . . .	11-121	11-494
Assemble (AVIM) . . . . .	11-118	11-487
Disassemble and Inspect (AVIM) . . . . .	11-116	11-482
Install . . . . .	11-123	11-500

	<i>Task</i>	<i>Page</i>
Remove . . . . .	11-113	11-476
Test (AVIM) . . . . .	11-119	11-490
Viscous Damper Thrust		
Adjust (AVIM) . . . . .	11-120	11-492
Assemble (AVIM) . . . . .	11-117	11-484
Disassemble and Inspect (AVIM) . . . . .	11-115	11-480
Install . . . . .	11-122	11-496
Remove . . . . .	11-112	11-474
Test . . . . .	11-119	11-490
Viscous Damper Yaw		
Adjust (AVIM) . . . . .	11-121	11-494
Assemble (AVIM) . . . . .	11-117	11-484
Disassemble and inspect (AVIM) . . . . .	11-115	11-480
Install . . . . .	11-124	11-504
Remove . . . . .	11-114	11-478
Test (AVIM) . . . . .	11-119	11-490
<b>W</b>		
Walkway, Cabin Crown		
Repair, . . . . .	2-171	2-473
Damage Requiring Replacement (AVIM) . . . . .	2-173	2-476
Minor Damage . . . . .	2-172	2-475
Walkways, Special Finish . . . . .	2-356	2-935
Warning Page		
Washers, Nuts, or Cotter Pins, Use Of — See Nuts, Washers, or Cotter Pins, Use Of		
Wear Sleeve, Pitch Shaft		
Install . . . . .	5-27	5-101
Remove . . . . .	5-26	5-100
Weather Protective Cover, Rotor Controls		
Install . . . . .	5-138	5-494
Remove . . . . .	5-136	5-480
Repair (AVIM) . . . . .	5-137	5-483
Web Repair, Backing Plate.. . . . .	2-363	2-943
Weigh Helicopter		
3-Point . . . . .	1-30	1-79
4-Point . . . . .	1-31	1-87
Wheel — See Wheel and Tire Assembly Fwd and Aft Landing Gear		
Wheel and Tire Assembly, Fwd Landing Gear		
Install . . . . .	3-12	3-30
Remove . . . . .	3-9	3-24
Wheel Bearings, Fwd Landing Gear		
Inspect . . . . .	3-33	3-73
Install . . . . .	3-12	3-30
Remove . . . . .	3-9	3-24

	<i>Task</i>	<i>Page</i>
Winch		
Chains		
Clean and Inspect (AVIM) . . . . .	14-6	14-17
Install (AVIM) . . . . .	14-8	14-20
Remove (AVIM) . . . . .	14-5	14-15
Install . . . . .	14-9	14-22
Limit Switches		
Adjust (AVIM) . . . . .	14-3	14-5
Remove . . . . .	14-4	14-12
Time (AVIM) . . . . .	14-7	14-19
Wire Rope (Cable)		
Clean and Inspect . . . . .	14-2	14-3
Install (AVIM) . . . . .	14-11	14-30
Remove (AVIM) . . . . .	14-10	14-26
Winch Control Grip		
Assemble (AVIM) . . . . .	9-160	9-431
Disassemble (AVIM) . . . . .	9-159	9-427
Install . . . . .	9-162	9-438
Remove . . . . .	9-158	9-426
Test . . . . .	9-161	9-435
Winch Hook and Cable Assembly		
Inspect . . . . .	14-12	14-35
Install . . . . .	14-14	14-38
Remove . . . . .	14-13	14-37
Winch Motor		
Install . . . . .	7-248	7-816
Remove . . . . .	7-247	7-814
Winch Tackle/Cable Blocks		
Install . . . . .	14-22	14-50
Remove . . . . .	14-21	14-49
Window, Inspection, Fwd and Aft Cargo Hook		
Install . . . . .	16-20	16-52
Remove . . . . .	16-19	16-51
Window, Lower Fixed, Jettisonable Door—See Jettisonable Door Lower Fixed Window		
Window Panel, Cockpit Crown — See Cockpit Crown Window Panel		
Window Panel, Nose Bubble — See Nose Bubble Window Panel		
Windows, Cockpit — See Cockpit Windows		
Window, Upper Fixed, Jettisonable Door—See Jettisonable Door Upper Fixed Window		
Windshield and Window Repair, Plastic — See Plastic Windshield and Window Repair		
Windshield Anti- Icing Control Boxes		
Install . . . . .	12-4	12-8
Remove . . . . .	12-3	12-6

	<i>Task</i>	<i>Page</i>
Windshield Anti-Icing Relays		
Install . . . . .	12-6	12-13
Remove . . . . .	12-5	12-10
Windshield Anti-Icing System . . . . .	12-1	12-1
Test Element . . . . .	12-2	12-2
Windshield, Center, Mixed Plastic and Glass — See Center		
Windshield, Mixed Installation		
Windshield, Clean . . . . .	2-40	2-173
Windshield, Glass, Center		
Install . . . . .	2-47	2-193
Remove . . . . .	2-44	2-184
Windshield, Glass, Pilot or Copilot		
Install . . . . .	2-46	2-190
Remove . . . . .	2-43	2-181
Windshield, Inspect . . . . .	2-41	2-177
Windshield or Window Leaks, Check for — See		
Check for Leaks, Windshield or Window	2-42	2-179
Windshield or Window, Plastic Repair . . . . .		
Windshield, Plastic, Center		
Install . . . . .	2-51	2-205
Remove . . . . .	2-49	2-199
Windshield, Plastic, Pilot or Copilot		
Install . . . . .	2-50	2-201
Remove . . . . .	2-48	2-196
Windshield Support Structure Rubber Strip		
Replace . . . . .	2-45	2-186
Windshield Wiper Actuator (Converter)		
Install . . . . .	12-49	12-102
Remove . . . . .	12-48	12-100
Windshield Wiper Arm — See Arm, Windshield		
Wiper		
Windshield Wiper Blade		
Inspect Parts . . . . .	12-40	12-85
Install . . . . .	12-36	12-77
Remove . . . . .	12-35	12-76
Windshield Wiper Drive Shaft		
Install . . . . .	12-47	12-99
Remove . . . . .	12-46	12-98
Windshield Wiper Motor — See Motor, Windshield Wiper		
Windshield Wiper System . . . . .	12-34	12-75
Wire Harness and Solenoid Cover, Fwd and		
Aft Cargo Hook		
Install . . . . .	16-16	16-47
Remove . . . . .	16-15	16-45
Wire Rope (Cable), Winch		
Clean and Inspect . . . . .	14-2	14-3
Install (AVIM) . . . . .	14-11	14-30
Remove (AVIM) . . . . .	14-10	14-26



	<i>Task</i>	<i>Page</i>
Work Platform, Engine — See Engine Work Platform		
Work Platform, Forward		
Install . . . . .	2-70	2-254
Remove . . . . .	2-69	2-252
Work Platform, Pylon		
Install . . . . .	2-292	2-742
Latch		
install . . . . .	2-291	2-740
Remove . . . . .	2-290	2-738
Remove . . . . .	2-289	2-736
<b>Y</b>		
Yaw and Roll Travel Combined Check . . . . .	11-37	11-110
Yaw and Thrust Pallet Idler Bellcranks Rigged — See Rig Pallet Thrust and Yaw Idler Bellcranks		
Yaw Arm		
Install . . . . .	11-139	11-532
Remove . . . . .	11-138	11-531
Yaw Balance Spring		
Adjust . . . . .	11-136	11-526
Install . . . . .	11-135	11-525
Remove . . . . .	11-134	11-524
Yaw Controls Travel Check . . . . .	11-35	11-100
Yaw Idler Bellcrank Control Pallet Sta 95 — See Control Pallet Sta 95 Yaw Idler Bellcrank		
Yaw Intermediate Bellcranks		
Clean . . . . .	11-2	11-6
Inspect — Corrosion . . . . .	11-11	11-21
Inspect — General . . . . .	11-10	11-20
Install . . . . .	11-183	11-636
Remove . . . . .	11-182	11-634
Repair — General . . . . .	11-12	11-22
Repair — Finish . . . . .	11-13	11-24
Yaw Intermediate Connecting Links — See Connecting Links Yaw Intermediate		
Yaw Magnetic Brake		
Adjust (AVIM) . . . . .	11-151	11-555
Install . . . . .	11-152	11-557
Remove . . . . .	11-148	11-550
Test (AVIM) . . . . .	11-150	11-552
Yaw or Roll Control Position Transducer — See Transducer Control Position Roll or Yaw		
Yaw, Pitch or Roll Travel Quadrant Cockpit — See Cockpit Travel Quadrant Pitch, Roll or Yaw		
Yaw, Roll or Thrust ILCA Input Connecting Link Rigged — See Rig Roll, Yaw or Thrust ILCA Input Connecting Links		

	<i><b>Task</b></i>	<i><b>Page</b></i>
Yaw Spring Assembly		
Adjust (AVIM) . . . . .	11-145	11-544
Assembly (AVIM) . . . . .	11-143	11-539
Disassemble (AVIM) . . . . .	11-142	11-537
Install . . . . .	11-146	11-546
Remove . . . . .	11-140	11-535
Test (AVIM) . . . . .	11-144	11-542
Yaw Viscous Damper Connecting Link		
Install . . . . .	11-130	11-517
Remove . . . . .	11-129	11-516
Yoke Aft LCT		
Clean . . . . .	11-2	11-6
Inspect . . . . .	11-226	11-783
Inspect — General . . . . .	11-7	11-16
Install . . . . .	11-233	11-804
Remove . . . . .	11-227	11-785
Repair . . . . .	11-228	11-788
Yoke Bearings Aft LCT		
Install (AVIM) . . . . .	11-230	11-792
Remove (AVIM) . . . . .	11-229	11-790
Yoke Bearings Forward LCT		
Install (AVIM) . . . . .	11-214	11-744
Remove (AVIM) . . . . .	11-213	11-742
Yoke Bushings Aft LCT		
Install (AVIM) . . . . .	11-232	11-799
Remove (AVIM) . . . . .	11-231	11-796
Yoke Bushings Forward LCT		
Install (AVIM) . . . . .	11-216	11-752
Remove (AVIM) . . . . .	11-215	11-748
Yoke Forward LCT		
Clean . . . . .	11-2	11-6
Inspect . . . . .	11-211	11-735
Inspect — General . . . . .	11-7	11-16
Install . . . . .	11-217	11-754
Remove . . . . .	11-212	11-738

**By Order of the Secretary of the Army:**

**Official:**

**ROBERT M. JOYCE**  
*Major General, United States Army*  
*The Adjutant General*

**E. C. MEYER**  
*General, United States Army*  
*Chief of Staff*

**DISTRIBUTION:**

To be distributed in accordance with DA Form 12-31, Organizational Maintenance requirements for CH-47B/C & D Aircraft.

## ***These are the instructions for sending an electronic 2028***

The following format must be used if submitting an electronic 2028. The subject line must be exactly the same and all fields must be included; however, only the following fields are mandatory: 1, 3, 4, 5, 6, 7, 8, 9, 10, 13, 15, 16, 17, and 27.

From: "Whomever" [whomever@avma27.army.mil](mailto:whomever@avma27.army.mil)  
To: [2028@redstone.army.mil](mailto:2028@redstone.army.mil)  
Subject DA Form 2028

1. **From:** Joe Smith
2. **Unit:** home
3. **Address:** 4300 Park
4. **City:** Hometown
5. **St:** MO
6. **Zip:** 77777
7. **Date Sent:** 19-OCT-93
8. **Pub no:** 55-2840-229-23
9. **Pub Title:** TM
10. **Publication Date:** 04-JUL-85
11. **Change Number:** 7
12. **Submitter Rank:** MSG
13. **Submitter FName:** Joe
14. **Submitter MName:** T
15. **Submitter LName:** Smith
16. **Submitter Phone:** 123-123-1234
17. **Problem:** 1
18. **Page:** 2
19. **Paragraph:** 3
20. **Line:** 4
21. **NSN:** 5
22. **Reference:** 6
23. **Figure:** 7
24. **Table:** 8
25. **Item:** 9
26. **Total:** 123
27. **Text:**

This is the text for the problem below line 27.



THEN ... JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

# SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

PFC John DOE  
CO 4 3rd Engineer Bn  
Ft. Leonardwood, MD 63108

DATE SENT

10 January 1999

PUBLICATION NUMBER

TM 55-1520-240-23-4

PUBLICATION DATE

30 December 1998

PUBLICATION TITLE

Operator's manual CH-47 Helicopter

BE EXACT PIN-POINT WHERE IT IS

IN THIS SPACE, TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO
6	2-1 a		
B1		4-3	

In line 6 of paragraph 2-1a the manual states the engine has 6 cylinders. The engine on my set only has 4 cylinders. Change the manual to show 4 cylinders.

Callout 16 in figure 4-3 is pointed at a bolt. In key to figure 4-3, item 16 is called a shim. Please correct one or the other

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER


JOHN DOE, PFC (268) 317-7111

SIGN HERE

JOHN DOE *John Doe*



FILL IN YOUR  
UNITS ADDRESS



FOLD BACK

DEPARTMENT OF THE ARMY

---

---

OFFICIAL BUSINESS


COMMANDER  
U.S. ARMY AVIATION AND MISSILE COMMAND  
ATTN: AMSAM-MMC-MA-NP  
REDSTONE ARSENAL, AL 35898-5230

TEAR ALONG PERFORATED LINE





FILL IN YOUR  
UNITS ADDRESS



FOLD BACK

DEPARTMENT OF THE ARMY

---

---


OFFICIAL BUSINESS

COMMANDER  
U.S. ARMY AVIATION AND MISSILE COMMAND  
ATTN: AMSAM-MMC-MA-NP  
REDSTONE ARSENAL, AL 35898-5230

TEAR ALONG PERFORATED LINE



FILL IN YOUR  
UNITS ADDRESS



FOLD BACK

DEPARTMENT OF THE ARMY

---

---

OFFICIAL BUSINESS

COMMANDER  
U.S. ARMY AVIATION AND MISSILE COMMAND  
ATTN: AMSAM-MMC-MA-NP  
REDSTONE ARSENAL, AL 35898-5230

TEAR ALONG PERFORATED LINE

## The Metric System and Equivalents

### Linear Measure

1 centimeter = 10 millimeters = .39 inch  
 1 decimeter = 10 centimeters = 3.94 inches  
 1 meter = 10 decimeters = 39.37 inches  
 1 dekameter = 10 meters = 32.8 feet  
 1 hectometer = 10 dekameters = 328.08 feet  
 1 kilometer = 10 hectometers = 3,280.8 feet

### Weights

1 centigram = 10 milligrams = .15 grain  
 1 decigram = 10 centigrams = 1.54 grains  
 1 gram = 10 decigrams = .035 ounce  
 1 decagram = 10 grams = .35 ounce  
 1 hectogram = 10 decagrams = 3.52 ounces  
 1 kilogram = 10 hectograms = 2.2 pounds  
 1 quintal = 100 kilograms = 220.46 pounds  
 1 metric ton = 10 quintals = 1.1 short tons

### Liquid Measure

1 centiliter = 10 milliliters = .34 fl. ounce  
 1 deciliter = 10 centiliters = 3.38 fl. ounces  
 1 liter = 10 deciliters = 33.81 fl. ounces  
 1 dekaliter = 10 liters = 2.64 gallons  
 1 hectoliter = 10 dekaliters = 26.42 gallons  
 1 kiloliter = 10 hectoliters = 264.18 gallons

### Square Measure

1 sq. centimeter = 100 sq. millimeters = .155 sq. inch  
 1 sq. decimeter = 100 sq. centimeters = 15.5 sq. inches  
 1 sq. meter (centare) = 100 sq. decimeters = 10.76 sq. feet  
 1 sq. dekameter (are) = 100 sq. meters = 1,076.4 sq. feet  
 1 sq. hectometer (hectare) = 100 sq. dekameters = 2.47 acres  
 1 sq. kilometer = 100 sq. hectometers = .386 sq. mile

### Cubic Measure

1 cu. centimeter = 1000 cu. millimeters = .06 cu. inch  
 1 cu. decimeter = 1000 cu. centimeters = 61.02 cu. inches  
 1 cu. meter = 1000 cu. decimeters = 35.31 cu. feet

## Approximate Conversion Factors

<i>To change</i>	<i>To</i>	<i>Multiply by</i>	<i>To change</i>	<i>To</i>	<i>Multiply by</i>
inches	centimeters	2.540	ounce-inches	Newton-meters	.007062
feet	meters	.305	centimeters	inches	.394
yards	meters	.914	meters	feet	3.280
miles	kilometers	1.609	meters	yards	1.094
square inches	square centimeters	6.451	kilometers	miles	.621
square feet	square meters	.093	square centimeters	square inches	.155
square yards	square meters	.836	square meters	square feet	10.764
square miles	square kilometers	2.590	square meters	square yards	1.196
acres	square hectometers	.405	square kilometers	square miles	.386
cubic feet	cubic meters	.028	square hectometers	acres	2.471
cubic yards	cubic meters	.765	cubic meters	cubic feet	35.315
fluid ounces	milliliters	29.573	cubic meters	cubic yards	1.308
pints	liters	.473	milliliters	fluid ounces	.034
quarts	liters	.946	liters	pints	2.113
gallons	liters	3.785	liters	quarts	1.057
ounces	grams	28.349	liters	gallons	.264
pounds	kilograms	.454	grams	ounces	.035
short tons	metric tons	.907	kilograms	pounds	2.205
pound-feet	Newton-meters	1.356	metric tons	short tons	1.102
pound-inches	Newton-meters	.11296			

### Temperature (Exact)

F	Fahrenheit temperature	5/9 (after subtracting 32)	Celsius temperature	C
---	---------------------------	-------------------------------	------------------------	---

