

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

OPERATOR AND ORGANIZATIONAL MAINTENANCE MANUAL CRANE-SHOVEL,
BASIC UNIT, CRAWLER MOUNTED, 40 TON, 2 CU YD, DIESEL DRIVEN
(W/HARNISCHFEGER ENGINE MODEL 687C-18-ES) (W/CATERPILLAR ENGINE
MODEL D333TA) (HARNISCHFEGER MODEL 855BG-2) NON-WINTERIZED,
FSN 3810-542-3048 WINTERIZED, FSN 3810-542-3049 (HARNISCHFEGER
MODEL 855BG-31 NON-WINTERIZED, FSN 3810-786-5200

HEADQUARTERS, DEPARTMENT OF THE ARMY

MARCH 1969

This copy is a reprint which includes current
pages from Change 2.

CHANGE

NO. 3

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington D. C., 14 July 1991

OPERATOR AND ORGANIZATIONAL MAINTENANCE MANUAL

**CRANE-SHOVEL, BASIC UNIT, CRAWLER MOUNTED;
40 TON; 2 CU. YD.; DIESEL DRIVEN
(W/HARNISCHEFEGER ENGINE MODEL 687C-18-ES)
(W/CATERPILLAR ENGINE MODEL D333TA)
(HARISCHFEGER MODEL 855BG-2)**

**NON-WINTERIZED, NSN 3810-00-542-3048
WINTERIZED, NSN 3810-00-542-3049
(HARNISCHEFEGER MODEL 855BG-3)
NON-WINTERIZED, NSN 3810-00-786-5200**

TM 5-3810-201-12, 14 March 1969, is changed as follows:

Cover. The manual title is changed to read as shown above

Inside Front Cover. The following WARNING is added to the inside front cover of the manual:

WARNING

If NBC exposure is suspected, all air filter media should be handled by personnel wearing protective equipment. Consult your unit NBC Officer or NBC NCO for appropriate handling or disposal instructions.

PAGE 2-33. The following paragraph is added at the end of "Section IV. Operation Under Usual Conditions":

2-12.1. Air Cleaner/Air Filter NBC Warning Decal

A decal has been developed that warns of NBC exposure. It is to be positioned in a noticeable place on or near the air filter or air cleaner housing. You may order the decal using part number 12296626, CAGE 19207. Refer to TB43-0219 for more information. (Figure 3-2, Figure 3-3, Figure 3-10, Figure 3-53, Figure 3-54 and Figure 3-55).

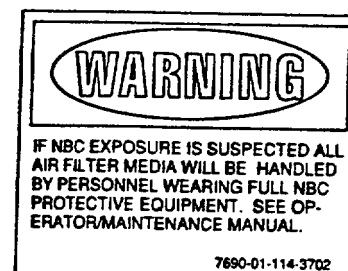


Figure 2-30.1. NBC Warning Decal

Add the following WARNING preceding paragraph 3-4 e on page 3-1; preceding paragraph 3-4 e (2) on page 3-16; preceding paragraph 3-4 f (1) on page 3-17; preceding paragraph 3-11 on page 3-25; preceding Table 3-3 on page 3-47; and preceding paragraph 3-69 on page 3-62:

WARNING

**IF NBC EXPOSURE IS SUSPECTED
ALL AIR FILTER MEDIA SHOULD BE
HANDLED BY PERSONNEL
WEARING PROTECTIVE
EQUIPMENT. CONSULT YOUR UNIT
NBC NCO FOR APPROPRIATE
HANDLING OR DISPOSAL
INSTRUCTIONS.**

By Order of the Secretary of the Army:

GORDON R. SULLIVAN
General, United States Army
Chief of Staff

Official:

PATRICIA P. HICKERSON
Brigadier General, United States Army
The Adjutant General

Distribution:

To be distributed in accordance with DA Form 1225-E, Block 0529, Operator, Unit Maintenance Requirements for TM 5-3810-201-12.

★US GOVERNMENT PRINTING OFFICE. 1991 - 543 025 40116

Change

No. 2



HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., 7 July 1972

Operator's and Organizational Maintenance Manual
CRANE-SHOVEL, BASIC UNIT, CRAWLER MOUNTED;
40 TON; 2 CU. YD.; DIESEL DRIVEN
(W/HARNISCHFEGER ENGINE MODEL 687C-18-ES)
(W/CATERPILLAR ENGINE MODEL D333TA)
(HARNISCHFEGER MODEL 855BG-2)
NON-WINTERIZED, FSN 3810-542-3048
WINTERIZED, FSN 3810-542-3049
(HARNISCHFEGER MODEL 8551G-3)
NON-WINTERIZED, FSN 3810-786-5200

TM 5-3810-201-12, 14 March 1969, is changed as follows:

Page ii. Change title to Appendix B as follows:

APPENDIX B. BASIC ISSUE ITEM LIST AND ITEMS TROOP INSTALLED OR AUTHORIZED

***This change supersedes C 1, 5 January 1970.**

APPENDIX B

BASIC ISSUE ITEM LIST AND ITEMS

TROOP INSTALLED OR AUTHORIZED

Section I. INTRODUCTION

1. Scope

This appendix lists basic issue items, items troop installed or authorized which accompany the Crane Shovel, and required by the crew operator for operation, installation, or operator's maintenance.

2. General

This basic issue items, items troop installed or authorized list is divided into the following sections:

a. *Basic Issue Items List*-Section II. "Not Applicable".

b. *Items Troop Installed or Authorized List*-Section III. A list, in alphabetical sequence of items which at the discretion of the unit commander may accompany the end item. but are NOT subject to be turned in with the end item.

3. Explanation of Columns

The following provides an explanation of columns in the tabular list of Basic Issue Items List, Section II, and Items Troop Installed or Authorized, Section III.

(a) *Source, Maintenance, and Recoverability Codes* (SMR):

(1) Source code. indicates the source for the listed item. Source codes are:

Code	Explanation
P	Repair parts, special tools and test equipment supplied from GSA DSA. or Army supply system and authorized for use at indicated maintenance levels.

(2) Maintenance code, indicates the lowest level) of maintenance authorized to install the listed item The maintenance level code is

Code:	Explanation
C	Crew/Operator

(3) Recoverability code. indicates whether

unserviceable items should be returned for recovery or salvage. Items not coded are nonrecoverable.

Recoverability codes are

Code	Explanation
R	Applied to repair parts (assemblies and components), special tools and test equipment which are considered economically repairable at direct and general support maintenance levels.
S	Repair parts, special tools, test equipment and assemblies which are economically repairable at DSU and GSU activities and which normally are furnished by supply on an exchange basis.

b. *Federal Stock Number*. This column indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.

c. *Description*. This column indicates the Federal item name and any additional description of the item required.

d. *Unit of Measure (U/M)*. A 2-character alphabetic abbreviation indicating the amount or quantity of the item upon which the allowances are based, e.g., ft, ea, pr, etc.

e. *Quantity Furnished With Equipment* (BIIL only). This column indicates quantity of an item furnished with the equipment.

f. *Quantity Authorized* (Items Troop Installed or Authorized Only). This column indicates the quantity, of the item authorized to be used with the equipment.

g. *Illustration* (BIIL only). This column is divided as follows'

(1) *Figure Number*. Indicates the figure number of the illustration in which the item is shown.

(2) *Item Number*. Indicates the callout number used to reference the item in the illustration.

Section III. ITEMS TROOP INSTALLED OR AUTHORIZED LIST

(1) SMR Code	(2) Federal Stock Number	(3) Description Ref No. & Mfr Code	(4) Unit of Meas	(5) Qty Auth
PC	2590-045-9811	CASE ASSY: RIFE	EA	1
PC	7520-559-9618	CASE, MAINTENANCE AND OPERATIONAL MANUAL	EA	1
PC	4210-889-2221	EXTINGUISHER, FIRE	EA	1

By Order of the Secretary of the Army

BRUCE PALMER, JR.
General, U. S. Army
Acting Chief of Staff

Official:

VERNE L. BOWERS,
Major General, United States Army,
The Adjutant General.

Distribution:

To be distributed in accordance with DA Form 12-25B (qty rqr block No. 35), Organizational maintenance requirements for Crane-Shovel, Crawler: 40 Ton.

CHANGE }
No. 2 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., 7 July 1972

Operator's and Organizational Maintenance Manual

**CRANE-SHOVEL, BASIC UNIT, CRAWLER MOUNTED;
40 TON; 2 CU. YD.; DIESEL DRIVEN
(W/HARNISCHEFEGER ENGINE MODEL 687C-18-ES)
(W/CATERPILLAR ENGINE MODEL D333TA)
(HARISCHFEGER MODEL 855BG-2)
NON-WINTERIZED, FSN 3810-542-3048
WINTERIZED, FSN 3810-542-3049
(HARNISCHFEGER MODEL 855BG-3)
NON-WINTERIZED, FSN 3810-786-5200**

TM 5-3810-201-12, 14 March 1969, is changed as follows:

Page ii. Change title to Appendix B as follows:

APPENDIX B. BASIC ISSUE ITEM LIST AND ITEMS TROOP INSTALLED OR AUTHORIZED

*This change superseded C 1, 5 January 1970

**APPENDIX B
BASIC ISSUE ITEM LIST AND ITEMS
TROOP INSTALLED OR AUTHORIZED**

Section I. INTRODUCTION

1. Scope

This appendix lists basic issue items, items troop installed or authorized which accompany the Crane-Shovel, and required by the crew operator for operation, installation, or operator's maintenance.

2. General

This basic issue items, items troop installed or authorized list is divided into the following sections:

a. Basic Issue Items List - Section II. "Not Applicable".

b. Items Troop Installed or Authorized List - Section III. A list, in alphabetical sequence of items which at the discretion of the unit commander may accompany the end item. but are NOT subject to be turned in with the end item.

3. Explanation of Columns

The following provides an explanation of columns in the tabular list of Basic Issue Items List, Section II, and Items Troop Installed or Authorized, Section III.

a. Source, Maintenance, and Recoverability Code(s) (SMR):

(1) Source code. indicates the source for the listed item. Source codes are:

<i>Code</i>	<i>Explanation</i>
P	Repair parts, special tools and test equipment supplied from GSA DSA, or Army supply system end authorized for use at indicated maintenance levels.

(2) code, indicates the lowest level of maintenance authorized to install the listed item The maintenance level code is:

<i>Code</i>	<i>Explanation</i>
C	Crew/Operator

(3) Recoverability code, indicates whether unserviceable items should be returned for recovery or

salvage. Items not coded are nonrecoverable. Recoverability codes are:

<i>Code</i>	<i>Explanation</i>
R	Applied to repair parts (assemblies and components), special tools and test equipment which are considered economically repairable at direct and general support maintenance levels.
S	Repair parts. special tools, test equipment and assemblies which are economically repairable at DSU and GSU activities and which normally are furnished by supply on an exchange basis.

b. Federal Stock Number. This column indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.

c. Description. This column indicates the Federal item name and any additional description of the item required.

d. Unit of Measure (U/M). A 2-character alphabetic abbreviation indicating the amount or quantity of the item upon which the allowances are based, e.g., ft, ea, pr, etc.

e. Quantity Furnished With Equipment (BILL only). This column indicates quantity of an item furnished with the equipment.

f. Quantity Authorized (Items Troop Installed or Authorized Only). This column indicates the quantity of the item authorized to be used with the equipment.

g. Illustration (BILL only). This column is divided as follows:

(1) *Figure Number.* Indicates the figure number of the illustration in which the item is shown.

(2) *Item Number.* Indicates the callout number used to reference the item in the illustration.

TECHNICAL MANUAL }
No. 5-3810-201-12

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., 14 March 1969

OPERATOR AND ORGANIZATIONAL MAINTENANCE MANUAL

**CRANE-SHOVEL, BASIC UNIT, CRAWLER MOUNTED, 40 TON,
2 CU YD, DIESEL DRIVEN (W/HARNISCHFEGER ENGINE
MODEL 687C-18-ES) (W/CATERPILLAR ENGINE MODEL
D333TA) (HARNISCHFEGER MODEL 855BG-2)
NON-WINTERIZED, FSN 3810-5423048
WINTERIZED, FSN 3810-5423049
(HARNISCHFEGER MODEL 855BG-3)
NON-WINTERIZED, FSN 3810-786-5200**

	<i>Paragraph</i>	<i>Page</i>
CHAPTER 1. INTRODUCTION		
Section I. General	1-1,1-2	1-1
II. Description and data.....	1-3--1-5	1-1
CHAPTER 2. INSTALLATION AND OPERATING INSTRUCTIONS		
Section I. Service upon receipt of materiel	2-1--2-4	2-1
II. Movement to a new worksite	2-5, 2-6	2-21
III. Controls and instruments.....	2-7, 2-8	2-23
IV. Operations under usual conditions.....	2-9--2-12	2-30
V. Operation under unusual conditions.....	2-13--2-22	2-33
VI. Operation of auxiliary material used in conjunction with crane-shovel.....	2-23-2-34	2-35
CHAPTER 3. OPERATOR AND ORGANIZATIONAL MAINTENANCE INSTRUCTIONS		
Section I. Operator's and organizational maintenance repair parts, tools, and equip- ment.....	3-1, 3-2	3-1
II. Lubrication.....	3-3, 3-4	3-1
III. Preventive maintenance checks and services	3-6, 3-6	3-21
IV. Operator's maintenance.....	3-7--3-43	3-24
V. Troubleshooting.....	3-44, 3-45	3-47
VI. Field expedient repairs	3-46--3-51	3-50
VII. Radio interference suppression.....	3-52--3-55	3-60
VIII. Organizational maintenance procedures.....	3-56, 3-57	3-52
IX. Engine cylinder head and valve mechanism	3-58--3-60	3-52
X. Engine lubricating system.....	3-61--3-66	3-54
XI. Fuel system.....	3-67--3-79	3-62
XII. Electrical system	3-80--3-95	3-81
XIII. Exhaust system	3-96--3-99	3-97
XIV. Cooling system.....	3-100--3-106	3-98
XV. Engine clutch.....	3-107--3-109	3-105
XVI. Power transfer	3-110--3-115	3-106
XVII. Hydraulic system	3-116--3-123	3-107
XVIII. Rotating base (revolving frame)	3-123--3-139	3-115
XIX. Tracks	3-140--3-145	3-134
XX. Instruments and controls.....	3-146--3-161	3-136
XXI. Counterweights.....	3-162, 3-163	3-140
XXII. Cabs, panels, doors, windows and seats.....	3-164--3-179	3-141
XXIII. Lights, light enclosure, and components	3-180--3-183	3-150

*This manual supersedes TM 3-810-201-10, 25 July 1960, including C 1, 14 August 1961 and C 2, 4 April 1963; and TM 5-3810-201-20, 7 July 1960, including C 1, 28 July 1961 and C 4, 2 August 1967.

		Paragraph	Page
CHAPTER	4. MATERIAL USED IN CONJUNCTION WITH CRANE-SHOVEL		
	Section I. Shovel front end attachment.....	4-1--4-10	4-1
	II. Clamshell, crane, and dragline front end attachments.....	4-11--4-23	4-10
	III. Backhoe front end attachment.....	4-24--4-31	4-22
	IV. Piledriver front end attachment.....	4-32--4-37	4-30
	V. Accessories.....	4-38--4-52	4-33
CHAPTER	5. SHIPMENT AND LIMITED STORAGE, AND DEMOLITION TO PREVENT ENEMY USE		
	Section I. Shipment and limited storage.....	5-1--5-3	5-1
	II. Demolition of material to prevent enemy use.....	5-4--5-8	5-1
APPENDIX	A. REFERENCES.....		A-1
	B. BASIC ISSUE ITEMS LIST.....		B-1
	C. MAINTENANCE ALLOCATION CHART.....		C-1
Index		I-1

CHAPTER 1 INTRODUCTION

Section I. GENERAL

1-1. Scope

a. These instructions are published for the use of personnel to whom the Crane-Shovel is issued. They provide information on the operation and organizational maintenance of the equipment. Also included are descriptions of main units and their functions in relationship to other components.

b. Numbers in parentheses following nomenclature callouts on illustrations indicate quantity. Numbers preceding nomenclature callouts indicate preferred maintenance sequence of removal or disassembly, and reassembly or installation should be performed in reverse order.

c. Report all Equipment Improvement Recommendations as prescribed in TM 38-750.

1-2. Forms and Records

a. DA Forms and records used for equipment maintenance will be only those prescribed in TM 38-750.

b. Report of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to DA Publications) and forwarded direct to the Commanding General, U.S. Army Mobility Equipment Command, ATTN: AMSMEMPP, 4300 Goodfellow Boulevard, St. Louis Mo. 63120.

Section II. DESCRIPTION AND DATA

1-3. Description

a. General. The Harnischfeger Models 855BG-2 and 855BG3 Crane-Shovels are crawler mounted, two cubic yard, 40 ton capacity, diesel engine driven units. The booms are interchangeable, enabling conversion to shovel, crane, clamshell, dragline, backhoe, or piledriver operation.

b. *Revolving Frame.* The revolving frame (fig. 1-1) upon which are mounted the engine, upper machinery, and gantry, revolves around a center gudgeon and a live roller circle mounted on the crawler. It carries four hook rollers (two in front and two at rear), which ride on the underside of the roller path, and prevents tipping of the rotating base. A counterweight is fastened at rear of revolving frame. A gantry frame which contains gantry sheaves and harness is mounted on the revolving frame, along with a collapsible high gantry which is provided for use in crane, clamshell, dragline, or piledriver service.

c. Cab. The cab (fig. 1-1) completely encloses all machinery on the revolving frame. It consists of rigid steel frame work and panels. Several

hinged doors and sliding panels provide access for removal of engine or machinery. Framed glass windows in operator's compartment can be opened for ventilation or additional visibility. Hand levers and foot pedals in operator's compartment control all motions of revolving frame operating machinery (para 2-8), and are easily within reach of the operator from his adjustable seat.

d. *Crawler Mounting.* Crawler mounting (fig. 1-2) consists of two crawler tracks and the carbody. Each crawler track consists of forged steel side bars, (pinned together), with track shoes bolted on. Tracks are chain driven by the tread sprocket, and supported by a large idler roller and numerous track rollers. The carbody houses the propelling and steering mechanism.

e. *Engine.* The crane-shovel units are powered by six-cylinder diesel engines, which operates both deck machinery and crawlers, and are equipped with electrical starting motors. The engine may be either a Harnischfeger Model 687C-18-ES or a Caterpillar Model D333TA,

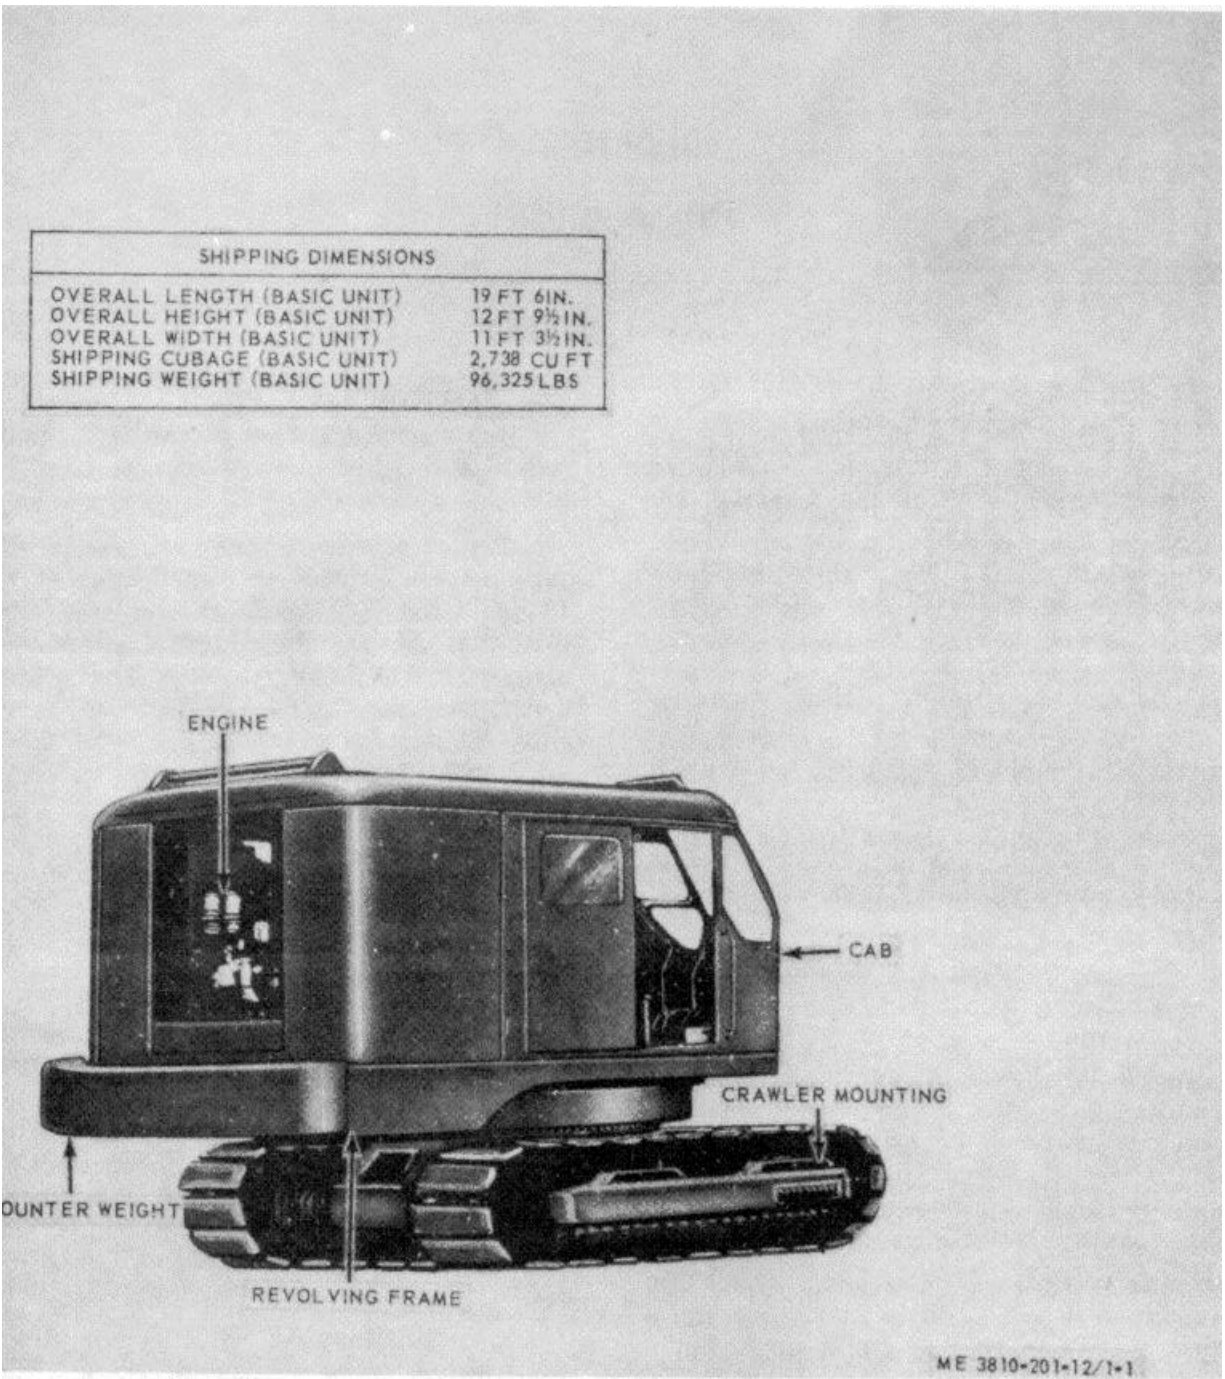


Figure 1-1. Crane-shovel basic unit, non-winterized, right $\frac{3}{4}$ rear view, and shipping dimensions.

therefore in this manual the component position on engine will be described in relation to radiator as front end, or flywheel as the rear end. As an example, on Model 687C-18-ES the starting motor is at rear on left side, the generator at front on 'right side. On Model D333TA, the alternator is at front on left side, and starting motor at rear on right side. The cylinders are numbered from front to rear.

f. *Winterization.* Winterized units are

equipped with three heaters (fig. 1-3) mounted on rear of cab, just above the counterweight. Tubing and ducts direct flow of heated air to operator's compartment and defrosters; engine, water and oil, and battery compartment. A separate fuel tank supplies fuel to these heaters.

1-4. Identification and Tabulated Data

a. *Identification.* The crane-shovel basic unit has eleven major identification plates which this

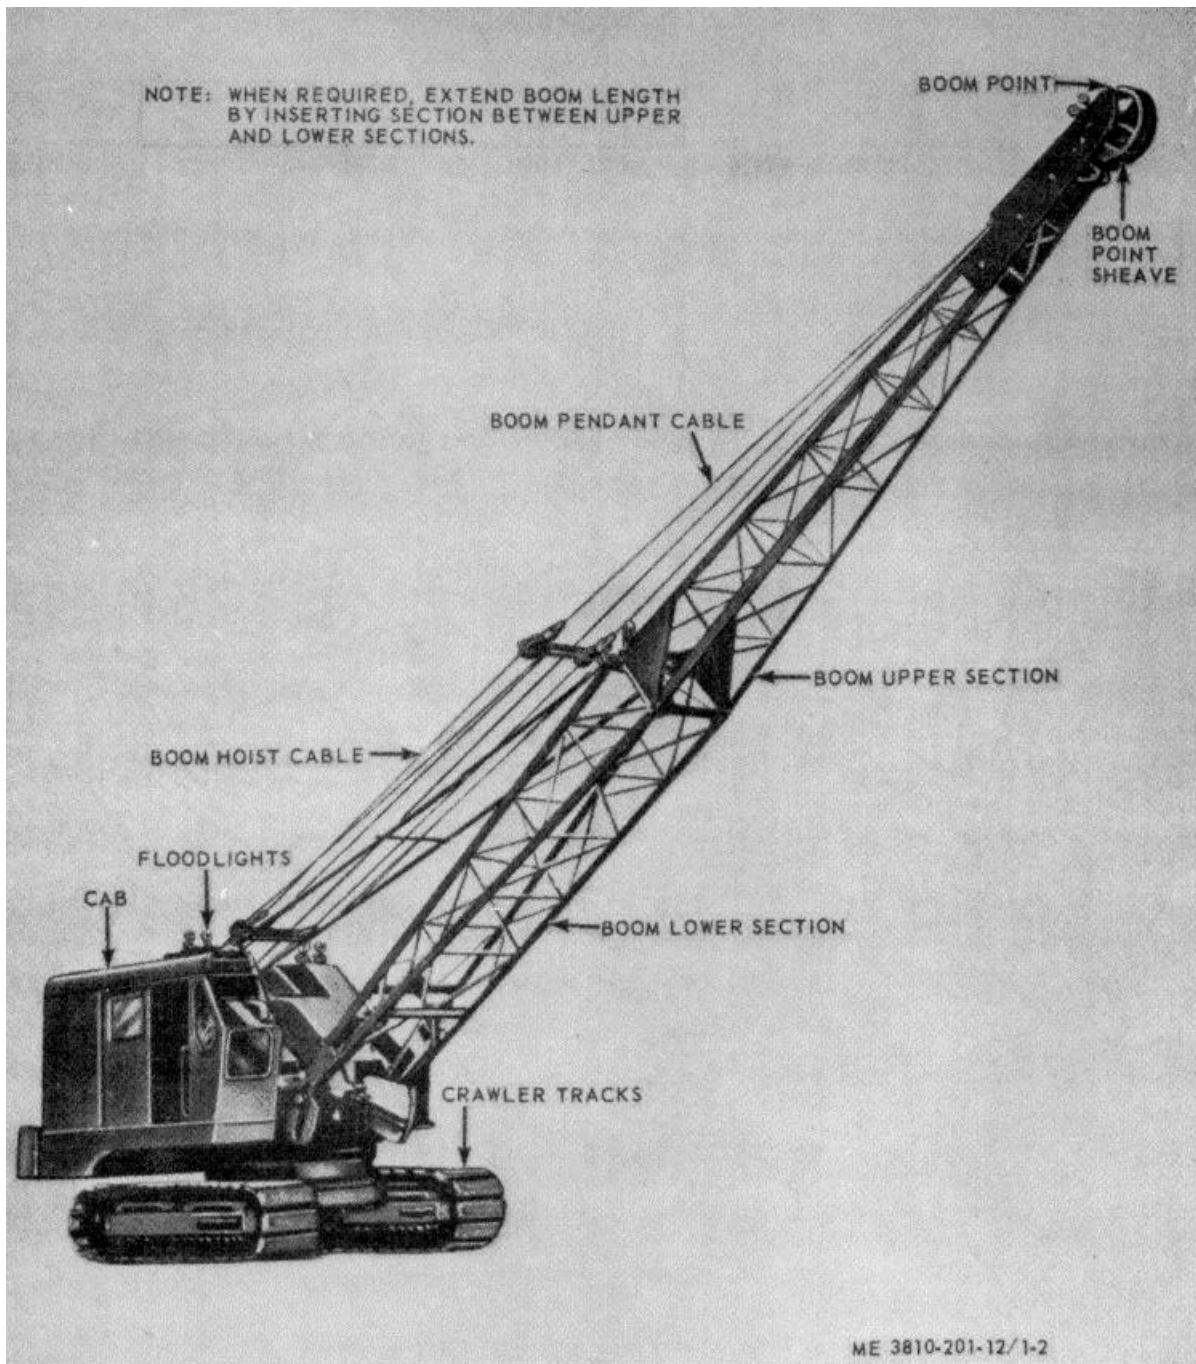


Figure 1-2. Crane-shovel basic unit, non winterized, with crane boom installed.

paragraph locates and described. Data contained on them is listed in b below.

(1) *Corps of Engineers identification plate.*

This plate is mounted at right of the transportation data plate ((11) below). It specifies the class, nomenclature, stock number, model number, manufacturer's name, and serial number.

(1) *Manufacturer's identification plate.* This plate is mounted on right front of operator compartment directly below the front window. It

gives the manufacturer's name and the unit serial number.

(3) *Engine identification plate.*

(a) The model 687C18-ES engine identification plate is mounted on upper left side of flywheel housing and gives the manufacturer's name, model number, engine number, bore stroke, horsepower revolutions per minute, and firing order.

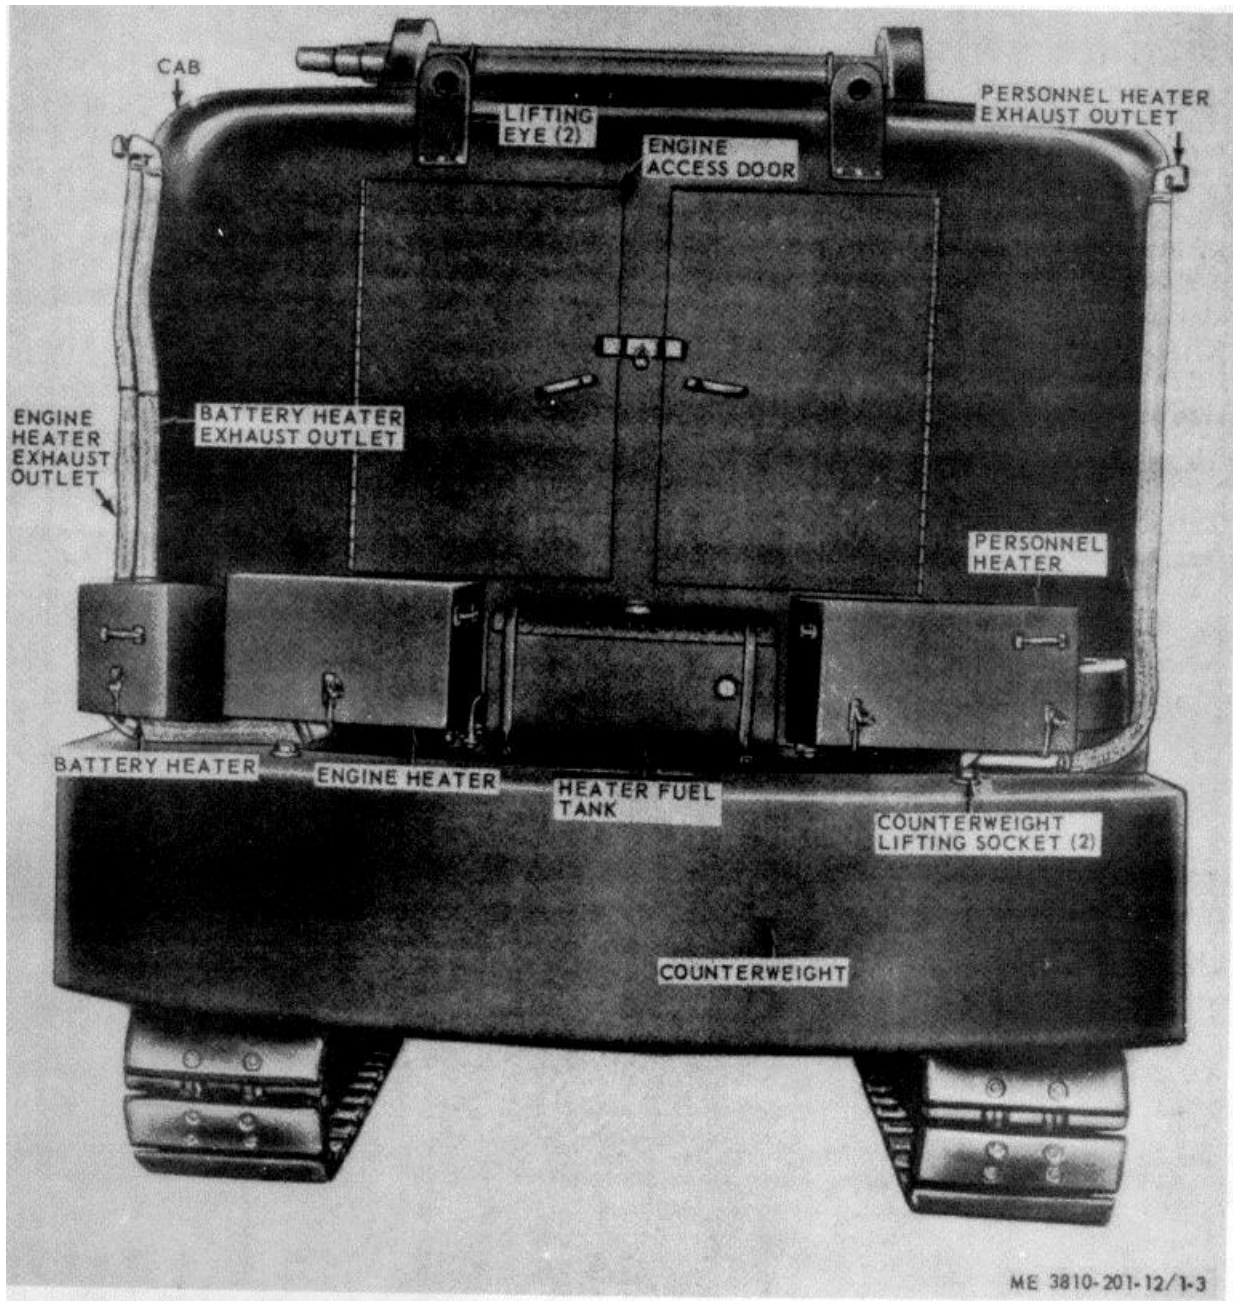


Figure 1-3. Crane-shovel basic unit, winterized, rear view.

(b) The model D333TA engine identification plate is mounted on left hand side of No. 6 cylinder wall and gives manufacturer's name and engine serial number.

(4) *Engine specification plate.*

(a) The model 687C-18-ES engine specification plate is mounted on right side of valve cover, and gives engine model number, number of cylinders, displacement in cubic inches, valve lash, type of fuel, injection pump timing, and cooling system capacities.

(b) The model D333TA engine specification plate is mounted on fuel filter and gives model number, number of cylinders, bore, stroke, high idle engine rpm, full head engine rpm, rack setting, hp rating at sea level, and warning of turbocharger setting and altitude above sea level.

(5) Rated load capacity identification plate. This plate is mounted inside operator's compartment and is located on panel to right of cab door. It specifies operating radius, angles, boom lengths, and lifting capacity in pounds.

(6) *Loading identification plate.* This plate is

located on right front side of revolving frame cab. It specifies position of slings for loading.

(7) *Heater operating instruction plate.* This plate is on all winterized models, located on inside of door to operator's compartment below the door glass. It provides operation instructions and location of all heaters.

(8) *Personnel heater identification plate (model E-510).* This plate is mounted on inside of heater compartment door. Heater compartment is at right rear of cab, just above counterweight. It gives manufacturers name, model number, volts, and output capacity in BTU's.

(9) *Engine heater identification plate (model E-511),* This plate is located inside door of heater compartment. Heater compartment is just to left of heater fuel tank at rear of cab, above counterweight. It gives the manufacturer's name, model number, volts, and output capacity in BTU's.

(10) *Battery heater identification plate (model MH15-B2).* This plate is located on top of battery heater, which is in compartment at left rear of cab just above counterweight. It gives manufacturer's name, model number, volts, and output capacity in BTU's.

(11) *Transportation data plate.* This plate is located directly below the loading identification plate ((6) above.) It specifies dimensions, cubage, tonnage, height, length, and weights of the crane-shovel unit.

b. Tabulated Data.

(1) General.

(a) Crane-shovel basic unit, model 855BG-2.

ManufacturerHarnischfeger Corp.
Model855BG-2
Designed for use asBackhoe, clamshell, crane,
dragline, piledriver, and
shovel

(b) Crane-shovel basic unit, model 855BG-3.

ManufacturerHarnischfeger Corp.
Model855BG-3
Designed for use asBackhoe, clamshell, crane,
dragline, piledriver, and
shovel

(2) Engines.

(a) Model 687C-18-ES,.

ManufacturerP & H Diesel Division,
Harnischfer Corp.
Model687C-18-ES
Cycle2
Compression ratio..... 16 to 1
Displacement.....522 cu in. (cubic inches)
Number of cylinders.....6
CoolingLiquid
Horsepower190 HP (horsepower) at
1,700 rpm (revolutions per
minute)

Idle speed.....500 rpm
Rotation at flywheel end.....Counterclockwise
Fire order.....1-6-2-4-3-5
Governed full load speed1,800 rpm
Weight.....1,900 lbs (pounds)

(b) Model D33STA.

ManufacturerCaterpillar Corp.
ModelD333TA
Bore4.5 in. (inch)
Stroke.....5.5 in.
Number of cylinders.....6
Displacement.....522 cu in.
Horsepower (HP)190 HP without fan
Idle speed.....600 rpm
Governed full load speed2,000 rpm

(3) Dimensions and weights.

(a) Overall length.

(Less boom) 19 ft 6 in.
(With 60 ft crane boom) 67 ft 5 in.
(With 50 ft crane boom and
15 ft jib)..... 80 ft 4% in.
(With 50 ft dragline boom) 67 ft 5 in.
(With 50 ft clamshell
boom) 67 ft 5 in.
(With 24 ft shovel boom)..... 47 ft 7 in.
(With 23 ft backhoe boom)..... 41 ft 1 in.

(b) Overall width.

(27 1/2 in. shoes)..... 11 ft 8% in.

(c) Overall height.

(Less boom and gantry) 12 ft 9 1/2 in.
(With 23 ft backhoe boom)..... 21 ft

(d) Shipping cubage.

(Basic unit)2,738 cu ft
With 50 ft boom).....9,675 cu ft
(With 50 ft boom and 15 ft
jib) 11,600 cu ft
(With 50 ft dragline boom) 9,675 cu ft
(With 50 ft clamshell boom) 9,675 cu ft
(With 24 ft shovel boom)..... 6,775 cu ft
(With 23 ft backhoe boom)..... 9,725 cu ft

(e) Operating weights (approximate).

(Basic unit) 101,025 lbs
(Backhoe)..... 119,290 lbs
(Crane) 106,400 lbs
(Shovel)..... 118,600 lbs
(Clamshell) 107,000 lbs
(Dragline) 107,500 lbs
(Piledriver)..... 118,600 lbs

(f) Heater dimensions.

Battery heater:
Width.....6 1/2 in.
Length 13 1/16 in.
Height..... 10 in.
Personnel heater:
Width.....8 1/2 in.
Length 25 1/4 in.
Height..... 12 1/2 in.
Engine heater:
Width.....8 1/2 in.
Length 23 1/2 in.
Height..... 12 1/2 in.

(4) Heaters.

(a) Battery heater.

Manufacturer Perfection Industries Division of Hupp Corp.
Model MH15-B2
Volts 24 VDC (volts direct current)
Control type Remote
Temperature selection Manual
Fuel Gasoline
Consumption rate
High heat 0.25 gph (gallons per hour)
Heat output
High heat 15,000 BTU (British Thermal Units)

(b) Personnel heater.

Manufacturer Perfection Industries Division of Hupp Corp.
Model E-510
Volts 24 VDC
Control type Remote
Temperature selection Manual
Fuel Gasoline
Consumption rate
Low heat 0.6 gph
High heat 0.75 gph
Heat output
High heat 60,000 BTU
Low heat 30,000 BTU

(c) Engine heater.

Manufacturer Perfection Industries Division of Hupp Corp.
Model E-511
Volts 24 VDC
Control type Remote
Temperature selection Manual
Fuel Gasoline
Consumption rate
Low heat 0.5 gph
High heat 0.75 gph
Heat output
High heat 60,000 BTU
Low heat 30,000 BTU

(5) Capacities.

(a) Engine, model 687C-18-ES.

Crankcase 32 qt (quart)
Fuel filters:
Primary 1/2 pt (pint)
Secondary 1 pt
Cooling system 36 qt
Air cleaner 4 1/2 qt
Oil filters 2 qt
Transmission case 8 qt

(b) Engine, model D3SBTA.

Crankcase 22 qt
Cooling system 33.6 qt
Transmission case 8 qt

(c) Crane capacities.

Fuel tank 90 gal (gallons)
Swing gear box (oil) 20 qt
Chain case 8 qt
12 Hydraulic cylinders 4 qt
7 Hydraulic cylinders 2 qt

Hydraulic tank 2 1/2 qt
Power transfer reduction gear case 8 qt
Horizontal vertical drive gear case 12 qt
Heater fuel tank 18 gal

(6) Starter.

(a) For model 687C-18-ES.

Manufacturer Delco Remy
Model 1113757
Volts 24 VDC
Rotation Counterclockwise at drive end
New brush spring tension 24 to 28 oz (ounce (s))

(b) For model D333TA.

Manufacturer Delco Remy
Model 1113771 or 1113818
Volts 24 VDC
Rotation at drive end Clockwise
No load test:
Volts 23.0
Maximum amps (amperes) 82.5 for 1113771 and 90 for 1113818
Minimum rpm 7,000
Lock test:
Volts 3.5
Maximum amps 500
Minimum torque 26 ft-lb (foot-pounds)
Minimum brush spring tension 80 oz

(7) Generator (model 687C-18-ES).

Manufacturer Delco Remy
Model 1117478
Volts 24 VDC
Ground polarity control Current-voltage regulator
Rated output 40 amps (amperes)
New brush spring tension 28 oz
Rotation Clockwise

(8) Alternator (model D33STA).

Manufacturer Delco Remy
Model 1117072
Brush spring tension 10 oz
Rotation (viewing drive end) Clockwise
Circuit A or B (normally B)
Field Current (80° F):

Volts 24 VDC
Amps 3.6 to 4.0
Output (cold):
Volts 28 VDC
Amps 61 amps
Approximate RPM 2,500

(9) Generator regulator (model 687C-18-ES).

Manufacturer Delco Remy
Model 1118658
Type M11ST48803
Volts 24 VDC
Circuit B
Amperes 40
Ground Negative

(10) *Alternator regulator (model DSKSTA).*
 Manufacturer Delco Remy
 Model 9000591
 Circuit A or B (normally B)
 Polarity Either
 (A circuit for positive ground, B circuit for negative ground)
 Voltage setting range 27.5 to 28.5 VDC (with adjusting screw at "0")

(11) *Fuel filter (primary).*
 (a) *For model 687C-18-ES.*
 Manufacturer Zenity
 Model F471-2X712
 (b) *For model D3SSTA. None used.*

(12) *Fuel filter (secondary).*
 (a) *For model 687C-18-ES.*
 Manufacturer Fram
 Type Cartridge
 Model F1125-AP811
 (b) *For model D333TA.*
 Manufacturer Caterpillar
 Model 9H4729

(13) *Air cleaner.*
 (a) *For model 687C-18-ES (on model 855BG2).*
 Manufacturer Donaldson
 Model Oil bath
 Type A14111
 (b) *For model 687C-18-ES (on model 855BGs).*
 Manufacturer Donaldson
 Type Oil bath
 Model TFA14-1790

(c) *For model DSS3TA.*
 Manufacturer Caterpillar
 Type Dry
 Model 5L7680
 (14) *Engine lubricating oil filter.*
 (a) *For model 687C-18-ES.*
 Manufacturer Purolator
 Model WF500 (Assembly 64776)
 Filter element PC500 (heavy duty senior type)

(b) *For model DS3STA.*
 Manufacturer Caterpillar
 Model 9M530
 Filter element 5S484 (disposable type)

(15) *Batteries (2)*
 Manufacturer Unspecified
 Volts (each battery) 12 (hook up in series for 24 VDC electrical system)

(16) *Specific nut and bolt torque data.*
 (a) *For model 687C-18-ES.*

Starter motor mounting 71-75 ft-lbs
 Generator mounting 35-39 ft-lbs
 Exhaust manifold nut 50 ft-lbs
 Fuel injector mounting nut 15-20 ft-lbs
 Fuel injector stud 15 ft-lbs
 Muffler mounting 83-93 ft-lbs
 Pulley mounting 30-35 ft-lbs
 Fan mounting 15-19 ft-lbs
 Water manifold mounting 35-39 ft-lbs

(b) *For model D33STA.*
 Fuel line nut torque 25-35 ft-lbs
 Valve cover retaining nut 12-18 ft-lbs
 Glow plug 8-12 ft-lbs

(17) *General torque data.* The following general torque values are to be used unless otherwise specified.

Size	Threads per inch	Torque ft-lbs, for	Torque ft-lbs for
		std. Heat treated SAE grade 5 min-tensile strength 120,000 P.S.I.	special heat treated SAF grade 8 min-tensile strength 150,000 P.S.I.
¼	20	6-8	9-11
	28	8-10	10-12
5/16	18	15-18	17-20
	24	17-20	19-23
3/8	16	26-32	36-43
	24	33-40	41-49
7/16	14	42-50	54-65
	20	50-60	64-77
½	13	67-80	81-97
	20	83-100	96-115
9/16	12	85-100	103-123
	18	100-120	122-146
5/8	11	117-140	164-192
	18	134-160	193-225
¾	10	180-210	284-325
	16	215-250	337-385


(18) *Specific gravity temperature corrections for batteries.* Refer to table 1-1 for battery temperature corrections.

(19) *Cable lengths, diameters, and use.* Refer to table 1-2 for cable lengths for front end attachment to be used.

(20) *Crane and jib working ranges.* Refer to figure 1-4 for various crane and jib working ranges.

Table 1-1. Specific Gravity Temperature Corrections for Batteries.

Cranking power available	Temperature in degrees F										
	-65°	-40°	-20°	-10°	0°	+20°	+40°	+80°	+100°	+110°	+120°
50%	1.277	1.267	1.259	1.2655	1.251	1.243	1.236	1.220	1.213	1.209	1.205
58.3%	1.287	1.277	1.269	1.265	1.261	1.253	1.246	1.230	1.223	1.219	1.215
66.6%	1.297	1.287	1.279	1.275	1.271	1.263	1.256	1.240	1.233	1.229	1.225
75%	1.307	1.297	1.289	1.285	1.281	1.273	1.266	1.250	1.243	1.239	1.235
83.3%	1.317	1.307	1.299	1.295	1.291	1.283	1.276	1.260	1.252	1.248	1.245
91.6%	1.327	1.317	1.309	1.305	1.301	1.294	1.286	1.270	1.262	1.258	1.255
100%	1.338	1.328	1.320	1.316	1.312	1.304	1.296	1.280	1.272	1.268	1.265

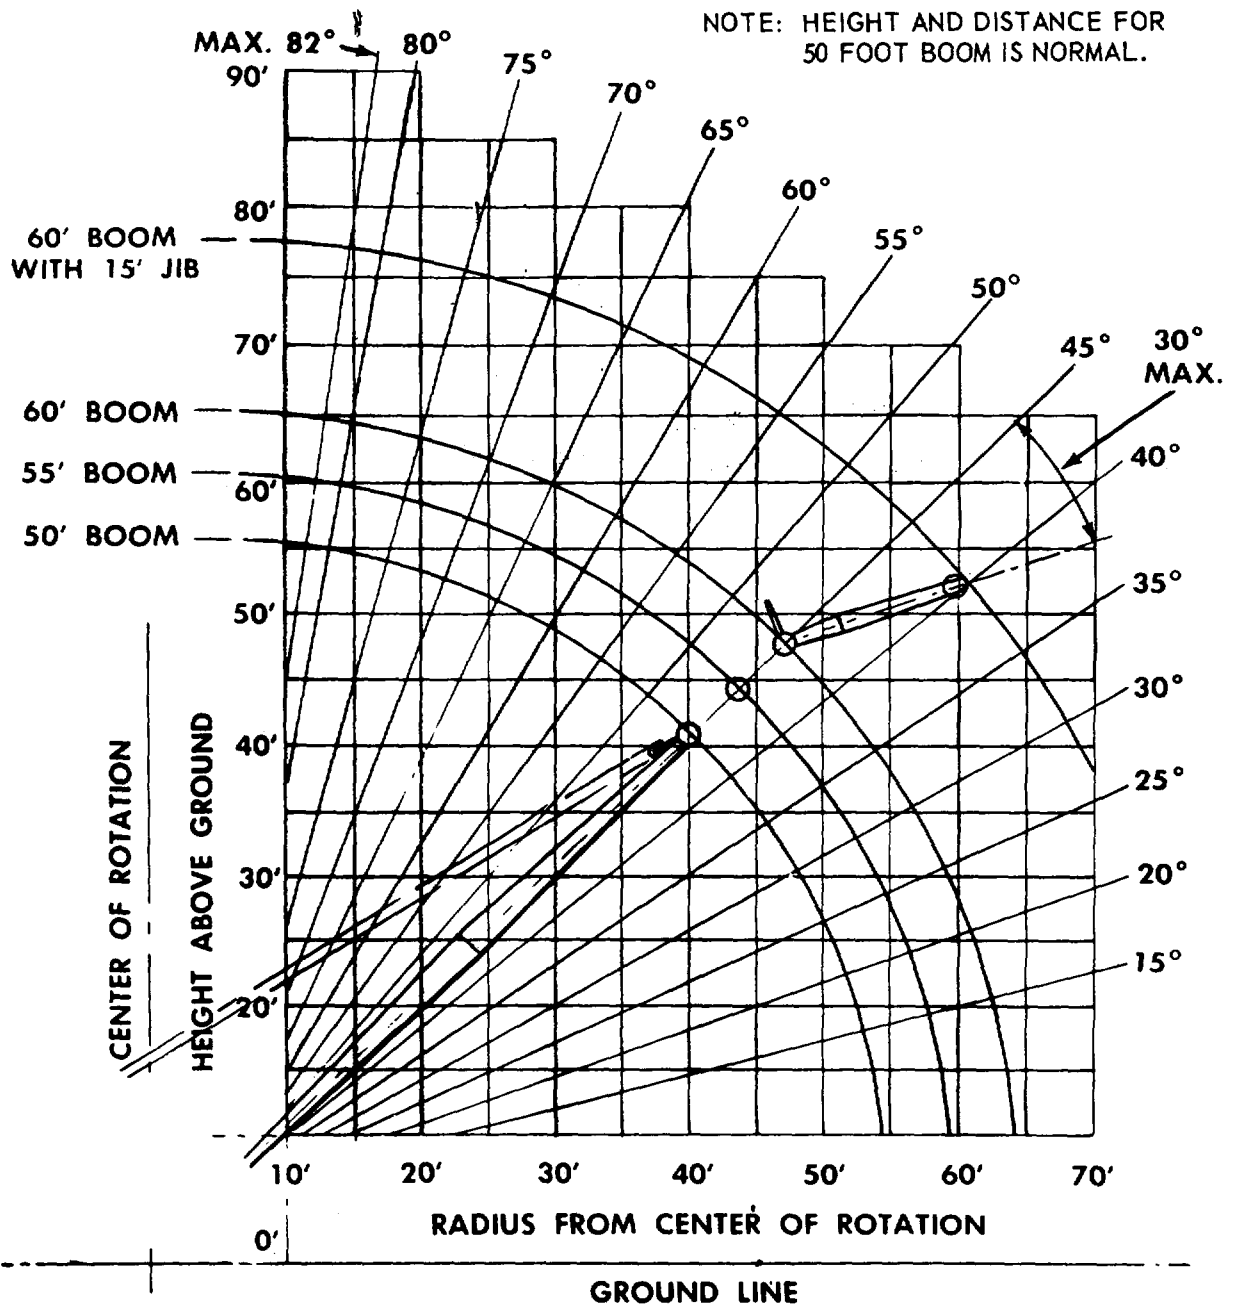


ME 3810-201-12/1-4

Figure 1-4. Crane and jib working ranges.

(21) *Clamshell working ranges.* Clamshell working ranges are illustrated in figure 1-5 and dimension of ranges are listed below.

Operating Radius (bin) (45° boom angle) 40 ft
 Operating radius (stockpile) (45° boom angle) 40 ft

Height from top of stock pile to boom point 15 ft
 Height of stock pile 25 ft
 Width of stock pile (approximate) 60 ft
 Height of bin 24 ft
 Half width of bin 12 ft
 Boom length 50 ft

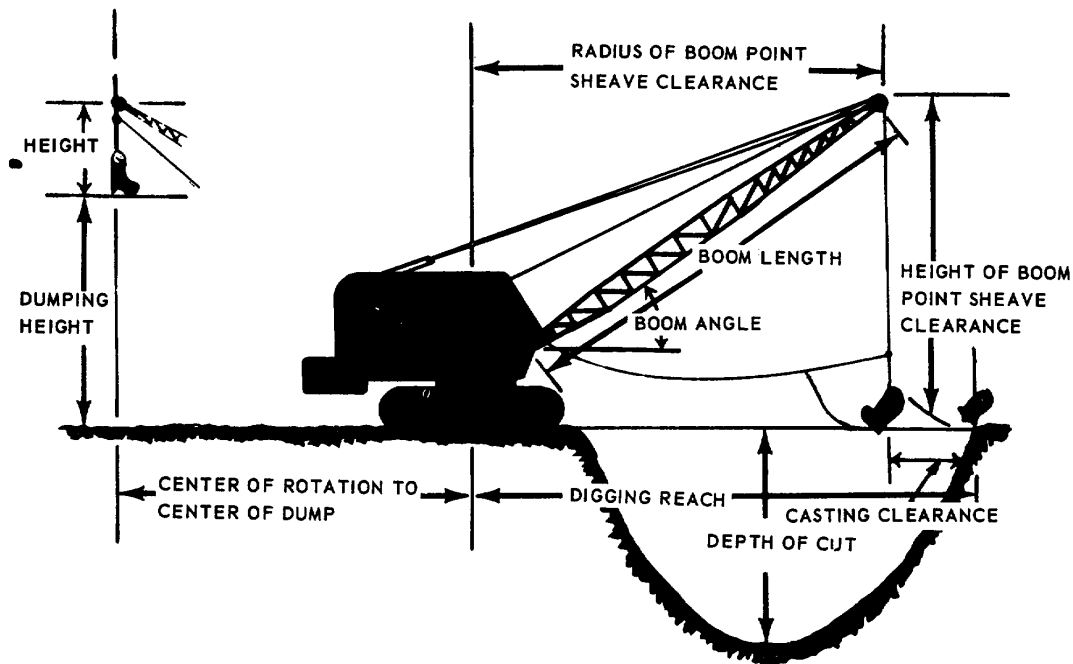

ME 3810-201-12/ 1-6

Figure 1-5. Clamshell working ranges.

Table 1-2. Cable Lengths, Diameter, and Use

For	Boom length		Cable type and size		Main guy cable		Intermediate guy cable		Drag line	Clam shell	Crane	Pile driver
	Ft.	In.	In.	Ft In.	In.	Ft In.	In.	Ft In.				
Boom	50	0	No. 4	¾ x 290-0					X	X	X	
Hoist	50	0	No. 4	¾ x 190-02-1 ¼ x 28-0				X	X	X	
	55	0	No. 4	¾ x 310-0					X	X	X	
	55	0	No. 4	¾ x 180-02-1 ¼ x 33-0				X	X	X	
	60	0	No. 4	¾ x 390-0		2-¾ x 20-0		X	X	X	
	60	0	No. 4	¾ x 240-02-1 ¼ x 38-0	2-¾ x 20-0		X	X	X	X
	65	0	No. 4	¾ x 420-0		2-¾ x 20-0		X	X	X	
	65	0	No. 4	¾ x 240-02-1 ¼ x 43-0	2-¾ x 20-0		X	X	X	
	70	0	No. 4	¾ x 450-0		2-¾ x 20-0		X	X	X	
	70	0	No. 4	¾ x 240-02-1 ¼ x 48-0	2-¾ x 20-0		X	X	X	
	75	0	No. 4	¾ x 460-0		2-¾ x 20-0		X	X	X	
	75	0	No. 4	¾ x 240-02-1 ¼ x 53-0	2-¾ x 20-0		X	X	X	
	80	0	No. 4	¾ x 470-0		2-¾ x 28-0		X	X	X	
	80	0	No. 4	¾ x 240-02-1 ¼ x 58-0	2-¾ x 28-0				X	
	85	0	No. 4	¾ x 240-02-1 ¼ x 63-0	2-¾ x 28-0				X	
	90	0	No. 4	¾ x 240-02-1 ¼ x 68-0	2-¾ x 28-0					X
	95	0	No. 4	¾ x 240-02-1 ¼ x 73-0	2-¾ x 33-0					X
	100	0	No. 4	¾ x 240-02-1 ¼ x 78-0	2-¾ x 38-0					X
Hoist	50	0	No. 4	7/8 x 130-0					X			
	50	0	No. 4	1 x 175-0								X*
	55	0	No. 4	7/8 x 140-0					X			
	55	0	No. 4	1 x 190-0								X*
	60	0	No. 4	7/8 x 150-0					X			
	60	0	No. 4	1 x 205-0								X*
Hoist	65	0	No. 4	7/8 x 160-0					X			
	65	0	No. 4	1 x 220-0								X*
	70	0	No. 4	7/8 x 170-0					X			
	70	0	No. 4	1 x 235-0								X*
	75	0	No. 4	7/8 x 180-0					X			
	75	0	No. 4	1 x 250-0								X*

*See footnotes at end of table.

Table 1-2. Cable Lengths, Diameter, and Use-Continued

For	Boom length		Cable type and size		Main guy cable		Intermediate guy cable		Drag line	Clam shell	Crane	Pile driver
	Ft.	In.	In.	Ft In.	In.	Ft In.	In.	Ft In.				
	80	0	No. 4	7/8 x 185-0					X			
	80	0	No. 4	1 x 265-0							X*	
	85	0	No. 4	1 x 280-0							X*	
	90	0	No. 4	1 x 295-0							X*	
	95	0	No. 4	1 x 310-0							X*	
	100	0	No. 4	1 x 325-0							X*	
Digging	50	0	No. 4	1 x 60-0					X			
	55	0	No. 4	1 x 65-0					X			
	60	0	No. 4	1 x 70-0					X			
	65	0	No. 4	1 x 75-0					X			
	70	0	No. 4	1 x 80-0					X			
	75	0	No. 4	1 x 85-0					X			
	80	0	No. 4	1 x 90-0					X			
Closing	50	0	No. 4	7/8 x 165-0						X		
	55	0	No. 4	7/8 x 175-0						X		
	60	0	No. 4	7/8 x 185-0						X		
	65	0	No. 4	7/8 x 195-0						X		
	70	0	No. 4	7/8 x 205-0						X		
	75	0	No. 4	7/8 x 215-0						X		
Holding	50	0	No. 4	7/8 x 130-0						X		
	55	0	No. 4	7/8 x 140-0						X		
Holding	60	0	No. 4	7/8 x 150-0						X		
	65	0	No. 4	7/8 x 160-0						X		
	70	0	No. 4	7/8 x 170-0						X		
	75	0	No. 4	7/8 x 180-0						X		
Tagline	50	0	No. 12	3/8 x 85-0						X		
	55	0	No. 12	3/8 x 85-0						X		
	60	0	No. 12	3/8 x 85-0						X		
	65	0	No. 12	3/8 x 85-0						X		
	70	0	No. 12	3/8 x 85-0						X		
Hammer	60	0	No. 4	3/4 x 145-0								X
Pile	60	0	No. 4	3/4 x 176-0							X	
Line Hoist	100	0	No. 11	3/4 x 280-0							X	
20 Ft Jib Guy	100	0	No. 4	2- 3/4 x 22-0							X	
Line 20 Ft				2- 3/4 x 100-0								
Dump Cable			No. 4	3/4 x 18-0					X			
Shovel:												
Hoist Cable			No. 4	1 x 95-0								
Boom Hoist Cable			No. 4	3/4 x 145-0								
Dipper Trip Cable			No. 12	5/16 x 35-0								
Trip Cable			No. 12	5/16 x 13-0								
Backhoe:												
Hoist Cable			No. 4	1 x 190-0								
Boom Hoist Cable			No. 4	3/4 x 115-0								
Digging Cable			No. 4	1 x 80-0								

*Represents two part line.

Note. Quantities indicated on this chart are indicated only to define those cables used with various attachments and are not intended to show quantity as reflected by the basic issue Items list.


(22) *Dragline working ranges.* Dragline working ranges are illustrated in figure 1-6 and dimensions are listed below.

- Radius of boom point sheave clearance (45° boom angle) 41 ft
- Height of boom point sheave clearance 45° boom angle) 42 ft
- Casting clearance (approximate) 15 ft
- Depth of end or side cut (approximate) 25 ft
- Digging reach (approximate) 65 ft
- Center of rotation to center of dump (approximate) 40 ft

- Dumping height 26 ft 6 in.
- Height 13 ft 6 in.
- Boom length 50 ft
- Boom angle 45°


(23) *Shovel working ranges.* Shovel working ranges are illustrated in figure 1-7 and dimensions are listed below.

- Digging radius (boom at 45° angle) 34 ft
- Digging radius (boom at 60° angle) 31 ft
- Clearance radius of boom point sheave (45' angle) 22 ft

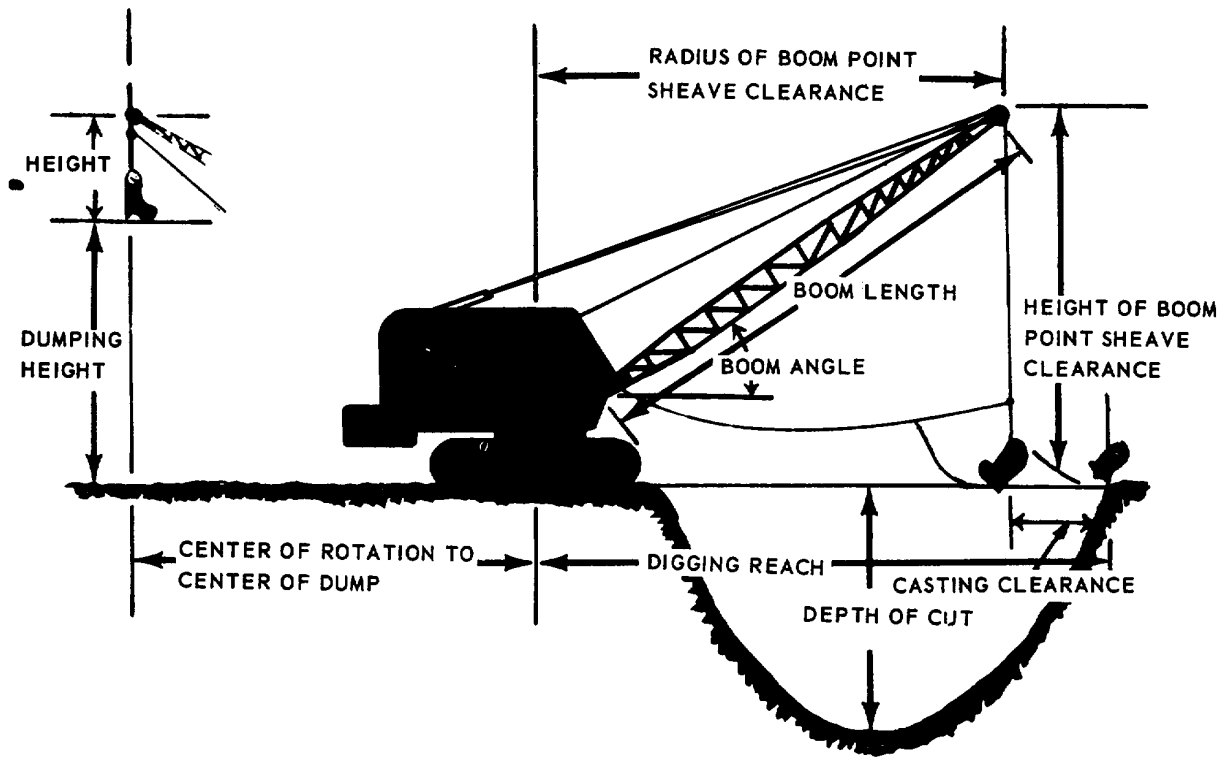

ME 3810-201-12/1-6

Figure 1-6. Dragline working ranges.

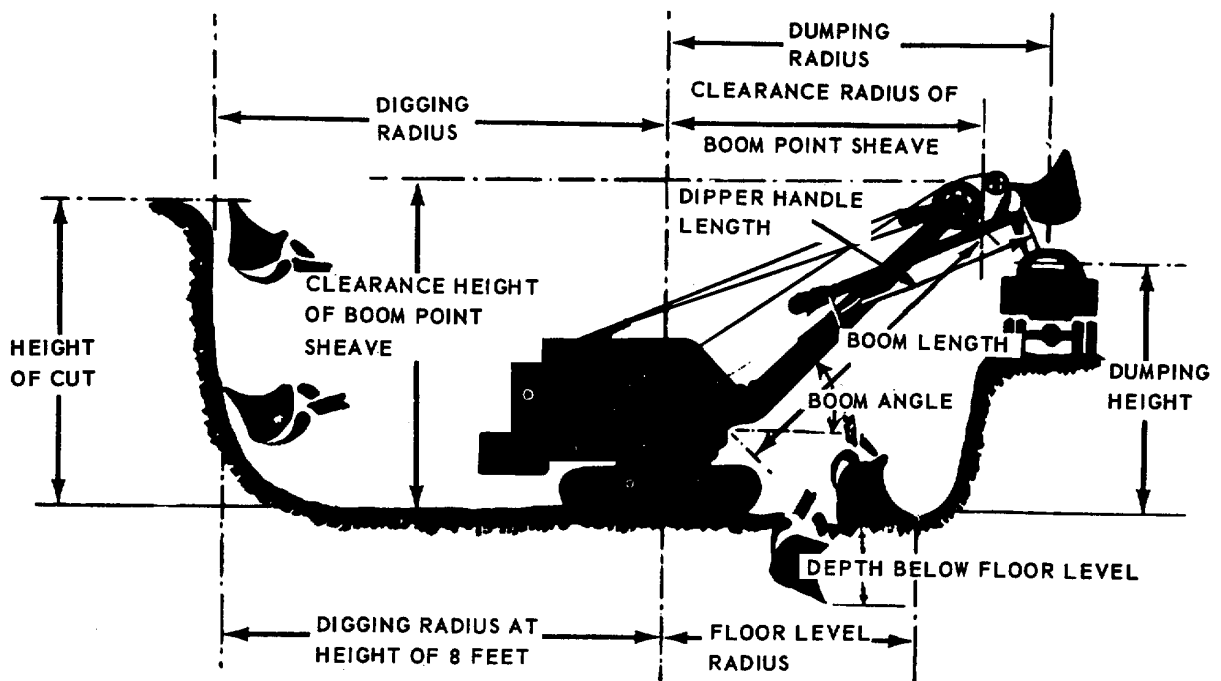

ME 3810-201-12/1-7


Figure 1-7. Shovel working ranges

Clearance radius of boom point sheave (60° angle)	17 ft
Dumping radius (boom at 45° angle)	29 ft 3 in.
Dumping radius (boom at 60° angle)	26 ft 9 in.
Dumping height (boom at 45° angle)	18 ft 6 in.
Dumping height (boom at 60° angle)	24 ft
Depth below floor level (45° boom angle)	7 ft
Depth below floor level (60° boom angle)	ft 6 in.
Floor level radius (45° boom angle)	22 ft
Floor level radius (60° boom angle)	20 ft
Digging radius at height of 8 ft (45° boom angle)	34 ft
Digging radius at height of 8 ft (60° boom angle)	1 ft
Height of cut (45° boom angle)	27 ft 8 in.
Height of cut (60° boom angle)	3 ft 6 in.

Clearance height of boom point sheave (45° boom angle)	24 ft 9 in.
Clearance height of boom point sheave (60° boom angle)	28 ft 6 in.
Dipper handle length	17 ft
Boom length	24 ft
Boom angle	45° or 60°

(24) *Backhoe working ranges.* Backhoe working ranges are illustrated in figure 1-8 and dimensions are listed below.

Radius at beginning of dump	11 ft
Radius at end of dump (maximum)	28 ft
Clearance dumping height (maximum)	29 ft
Dumping height at end of dump	26 ft 6 in.

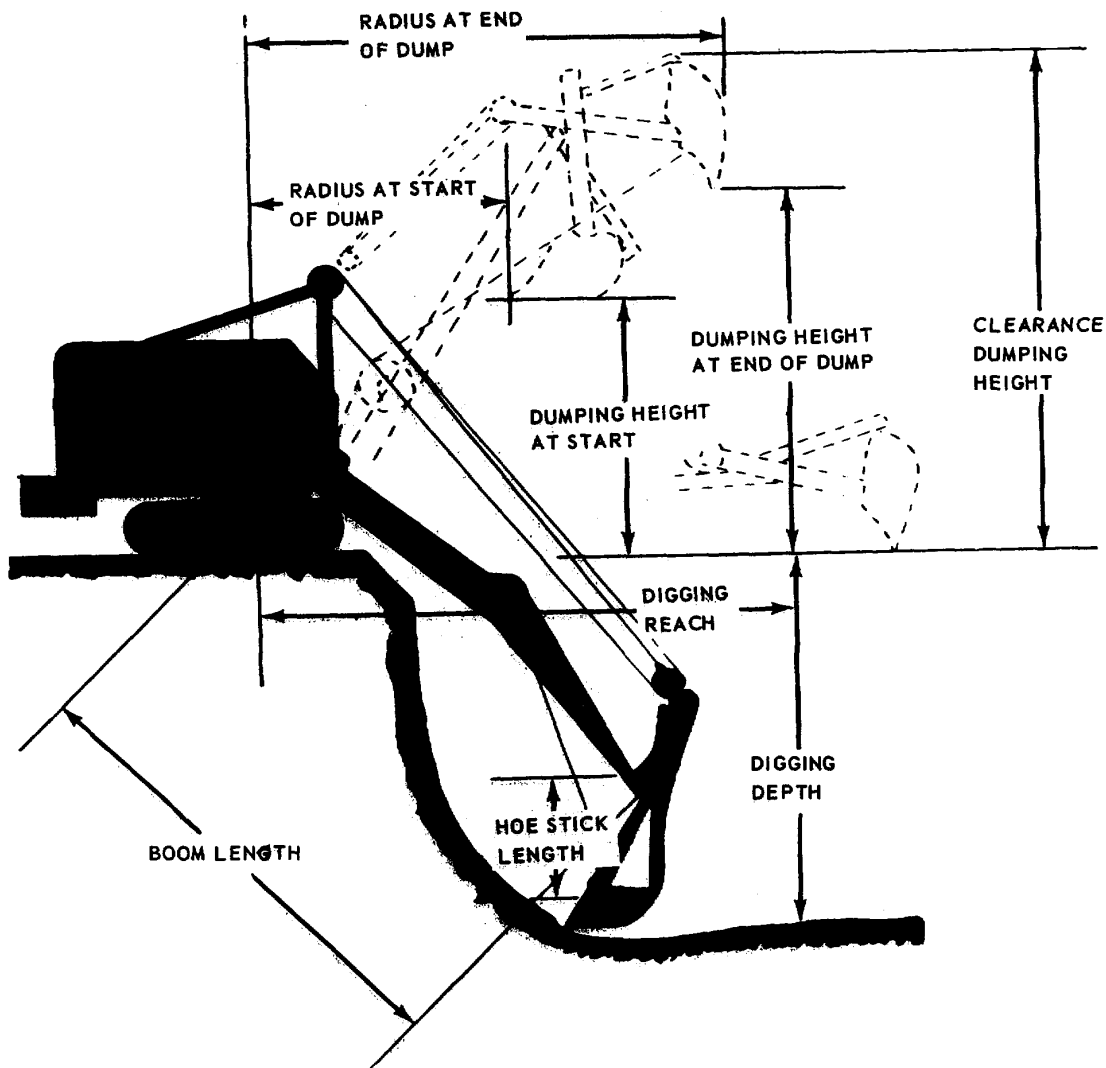

ME 3810-201-1 2/1-8

Figure 1-8. Backhoe working ranges

Dumping height at start of dump 14 ft
 Digging reach (maximum) 40 ft
 Digging depth (maximum) 27 ft
 Hoe stick length 9 ft
 Boom length 28 ft

(25) *Piledriver clearances.* Piledriver clearances are illustrated in figure 1-9 and dimensions are listed below.

Boom length 50 ft
 Distance from ground to hammer 47 ft 3 in. (maximum)
 45 ft (minimum)

Centerline of boom point sheave to bottom of leads 48 ft
 Width of leads 3 ft
 Height from ground to center of boom point sheave 51 ft 9 in. (minimum)
 55 ft (maximum)

Height from ground to boom tip 55 ft 3 in.
 Distance from boom foot pin-to-center line of leads 15 ft 3 in. (minimum)
 21 ft 3 in. (maximum)

(26) *General information.* Listed below are weights of materials per two cubic yards, in pounds, commonly handled with the clamshell bucket. These weights are approximate and should only be used as a general guide. Be sure to add bucket weight to determine total load lift.

Ash, dry 1,890 lbs
 Cinders 2,971 lbs
 Clay, compact 5,886 lbs
 Clay, dry, in lumps 3,503 lbs
 Coal, anthracite 3,024 lbs

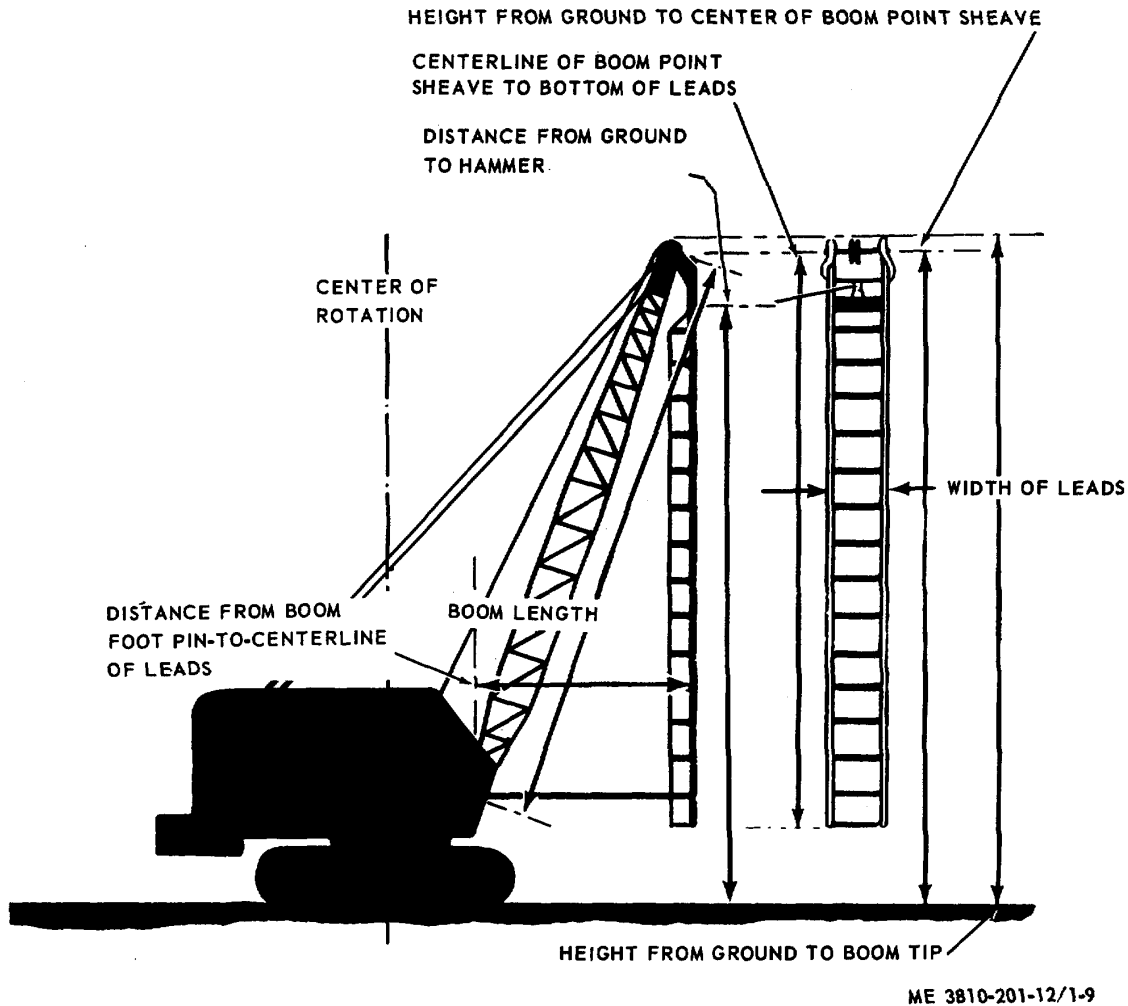


Figure 1-9. Piledriver clearance diagram

Coal, bituminous.....	2,971 lbs
Coke.....	1,458 lbs
Concrete, ready to pour.....	7,992 lbs
Earth, dry, loose.....	4,051 lbs
Earth, dry, packed.....	5,131 lbs
Earth, wet, mud.....	5,942 lbs
Gravel, loose, dry.....	5,942 lbs
Gravel, wet, packed.....	6,480 lbs
Gypsum, crushed.....	5,131 lbs
Iron ore (50% iron).....	13,503 lbs
Limestone, 1%-2 in. grade.....	4,589 lbs
Limestone, run of crusher 6.....	5,181 lbs
Sand, dry, loose.....	5,131 lbs
Sand, wet, packed.....	6,480 lbs

(27) *Wiring diagrams.* Refer to views A through G of figure 1-10 for wiring diagrams of electrical functions.

(28) *Maintenance and operating supplies.* Maintenance and operating supplies are listed in appendix B of this manual.

1-5. Difference in Models

a. *General.* This manual covers both winterized and non-winterized versions of the Harnischfeger model 855BG2 and model 855BG8 non-winterized crane-shovel basic units. Model 855BG2 winterized unit serial numbers range from 22,506 through 22,519. Non-winterized unit serial numbers range from 22,520 through 22,620. Model 855BG3 non-winterized unit serial numbers range from 23,501 through 23,570. All

winterized units are equipped with three heaters mounted on rear of cab (fig. 1-3) and a windshield wiper. Differences between models 855BG2 and 855BG3 are described below.

b. *Fuel Tank Filler Cap.* Model 855BG3 fuel tank filler cap is moved from left side frame inside cab door to left front panel inside cab.


c. *Operators Seat.* Seat on model 855BG3 changed to provide greater vertical and horizontal adjustability, making all controls more accessible to the operator.

d. *Engine Air Cleaner.* Model 855BG3 air cleaner is equipped with a centrifugal type precleaner that is housed above the main air cleaner.

e. *Engines.* All model crane-shovel units will be equipped with a model D333TA caterpillar engine, replacing the Harnischfeger model 687C-18-ES, as that unit becomes unserviceable.

Note. When a model D338TA engine replaces the harnischfeger model 687C18-ES on a winterized unit, the organization making the substitution will request a modification winterization kit from the Commanding General, U.S. Army Mobility Equipment Command, ATTN: AMSME-M, 4300 Goodfellow Boulevard, St. Louis, Missouri 68120.

NOTE: FUEL TRANSMITTER AND WINDSHIELD WIPER (BROKEN LINES) ON WINTERIZED MODELS ONLY.

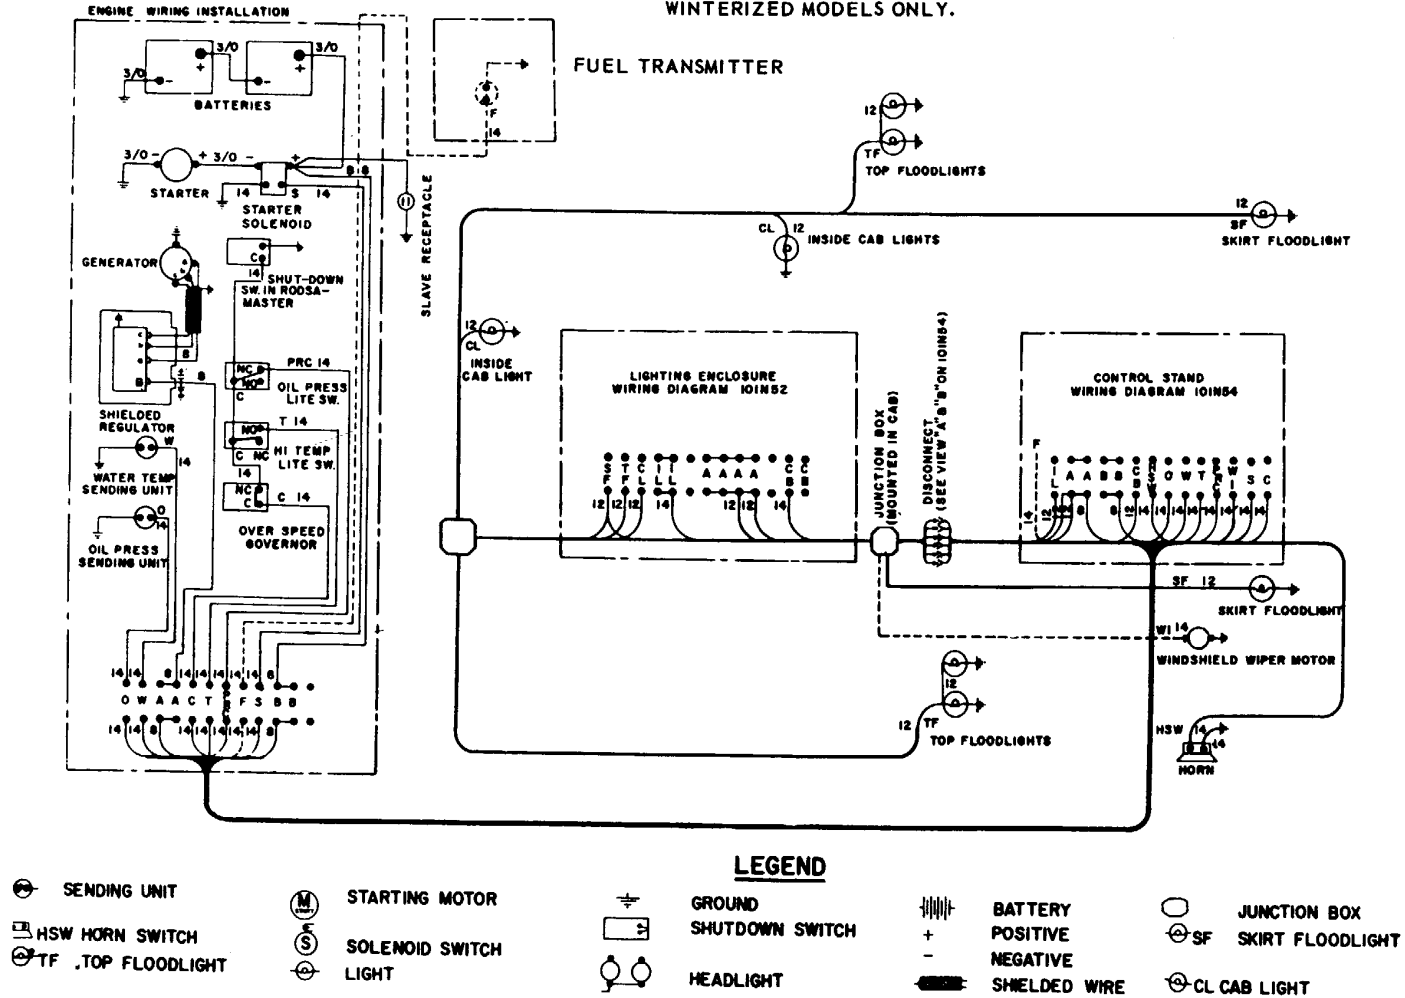


A. CRANE WIRING DIAGRAM

ME 3810-201-12/1-10 ①


Figure 1-10. Wiring diagram (sheet 1 of 7).

NOTE: FUEL GAGE AND WINDSHIELD WIPER ON WINTERIZED MODELS ONLY (BROKEN LINES).

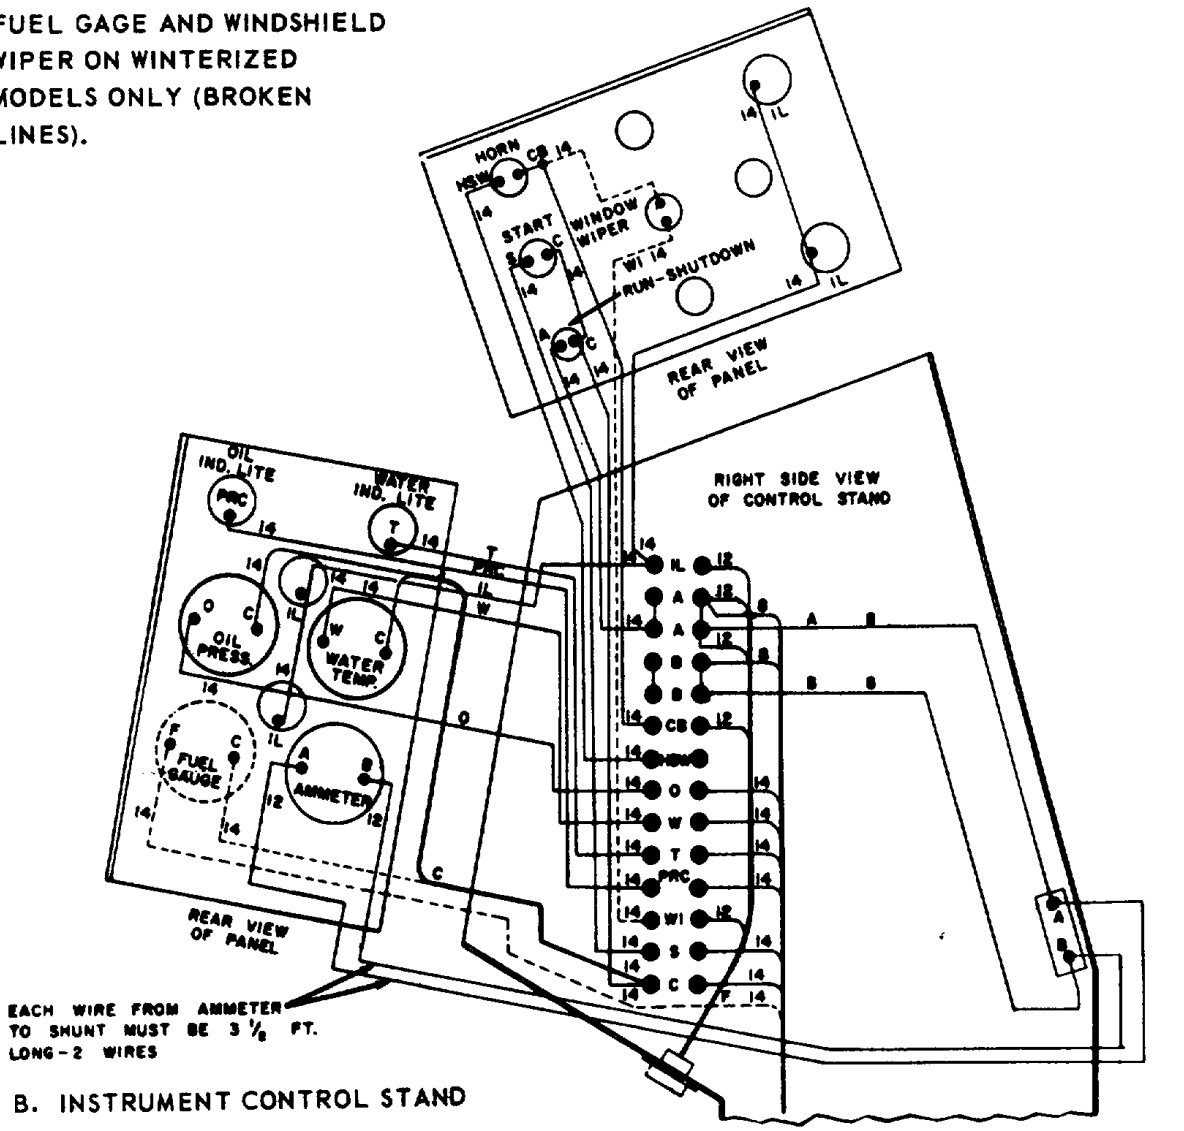

ME 3810-201-12/1-10 (2)


Figure 1-10. Wiring diagram (sheet 2 of 7).

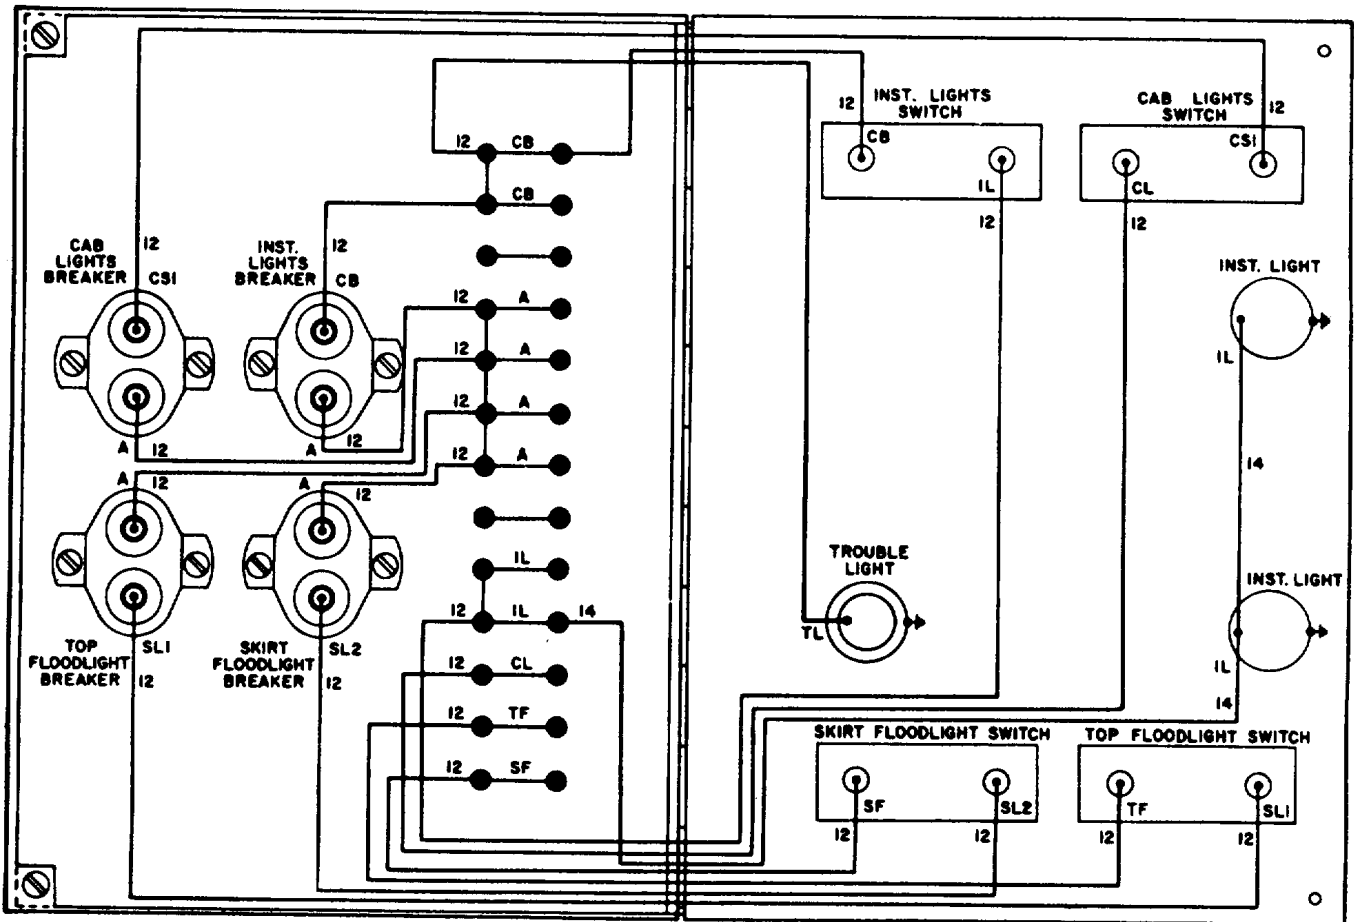


C. LIGHT CONTROL PANEL

ME 3810-201-12/1-10 ③

Figure 1-10. Wiring diagram (sheet 3 of 7).

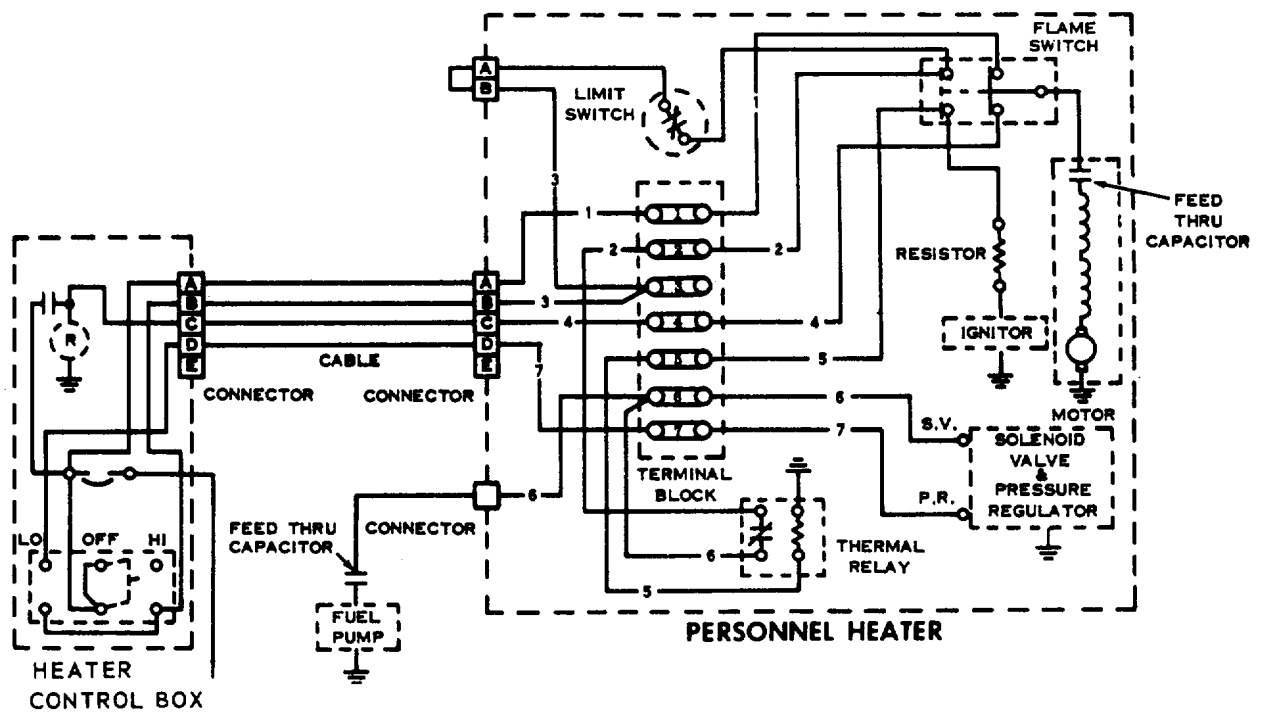


LEGEND

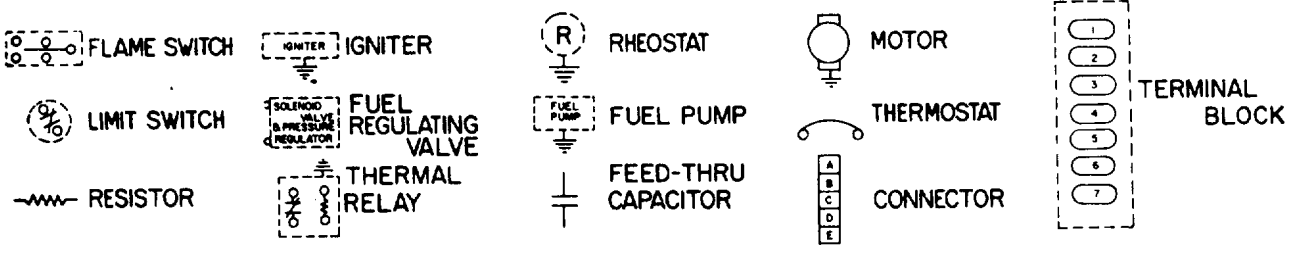

D. PERSONNEL HEATER (WINTERIZED MODELS ONLY).

ME 3810-201-12/1-10 (4)

Figure 1-10. Wiring diagram (sheet 4 of 7).

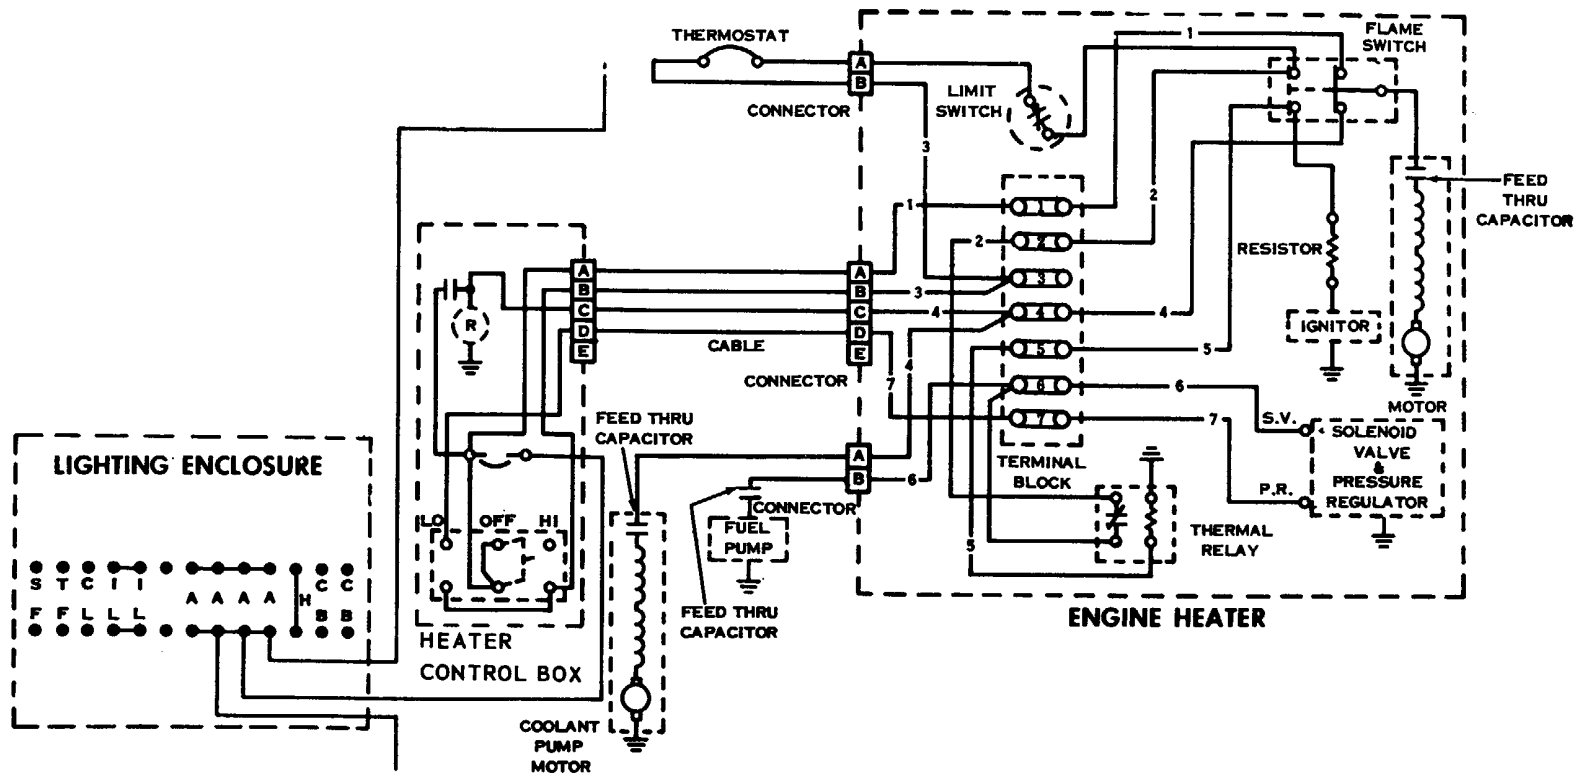



E. ENGINE HEATER (WINTERIZED MODELS ONLY).

LEGEND

FLAME SWITCH	IGNITER	RHEOSTAT	MOTOR
LIMIT SWITCH	FUEL REGULATING VALVE	FUEL PUMP	THERMOSTAT
RESISTOR	THERMAL RELAY	FEED-THRU CAPACITOR	TERMINAL BLOCK
		CONNECTOR	

ME 3810-201-12/1-10 (5)


Figure 1-10. Wiring diagram (sheet 5 of 7).

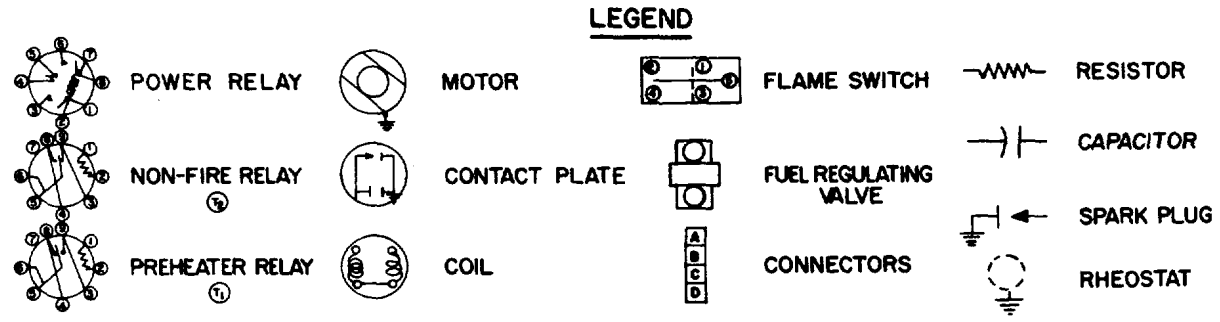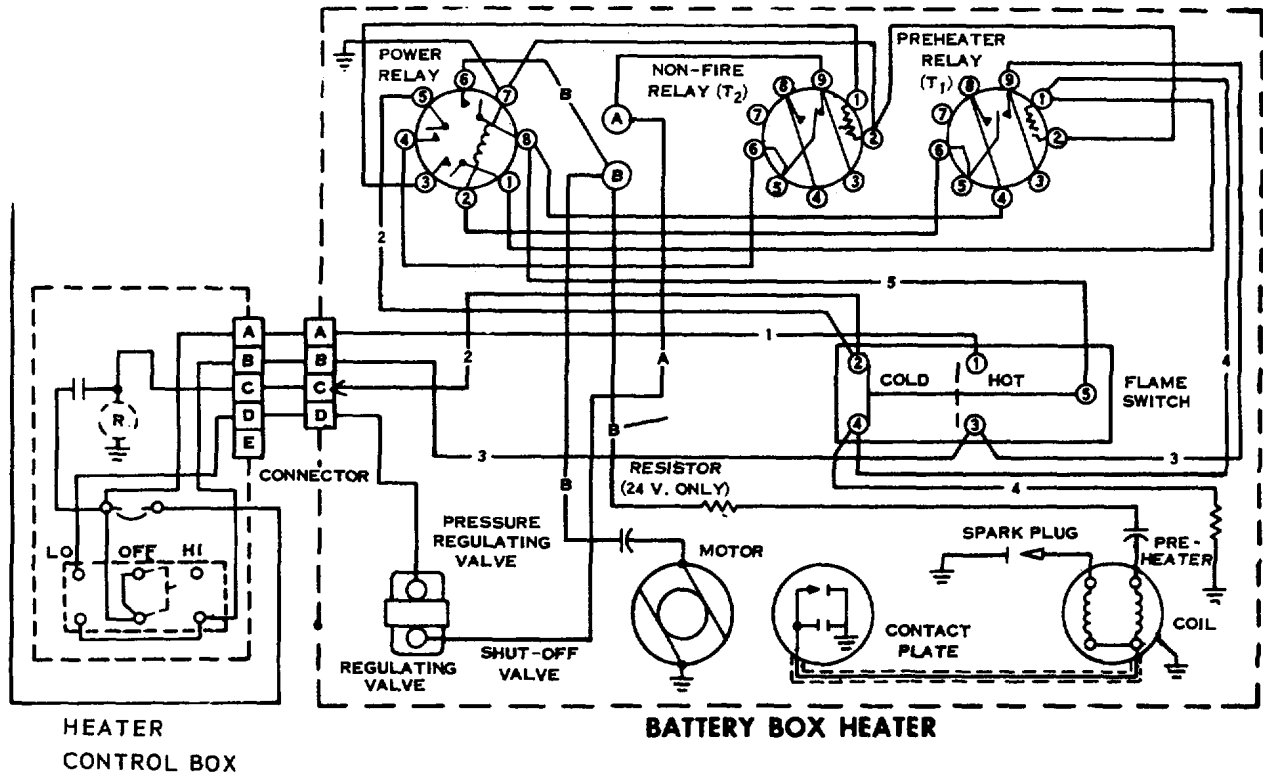

F. BATTERY HEATER (WINTERIZED MODELS ONLY)

ME 3810-201-12/1-10 (6)

Figure 1-10. Wiring diagram (sheet 6 of 7).

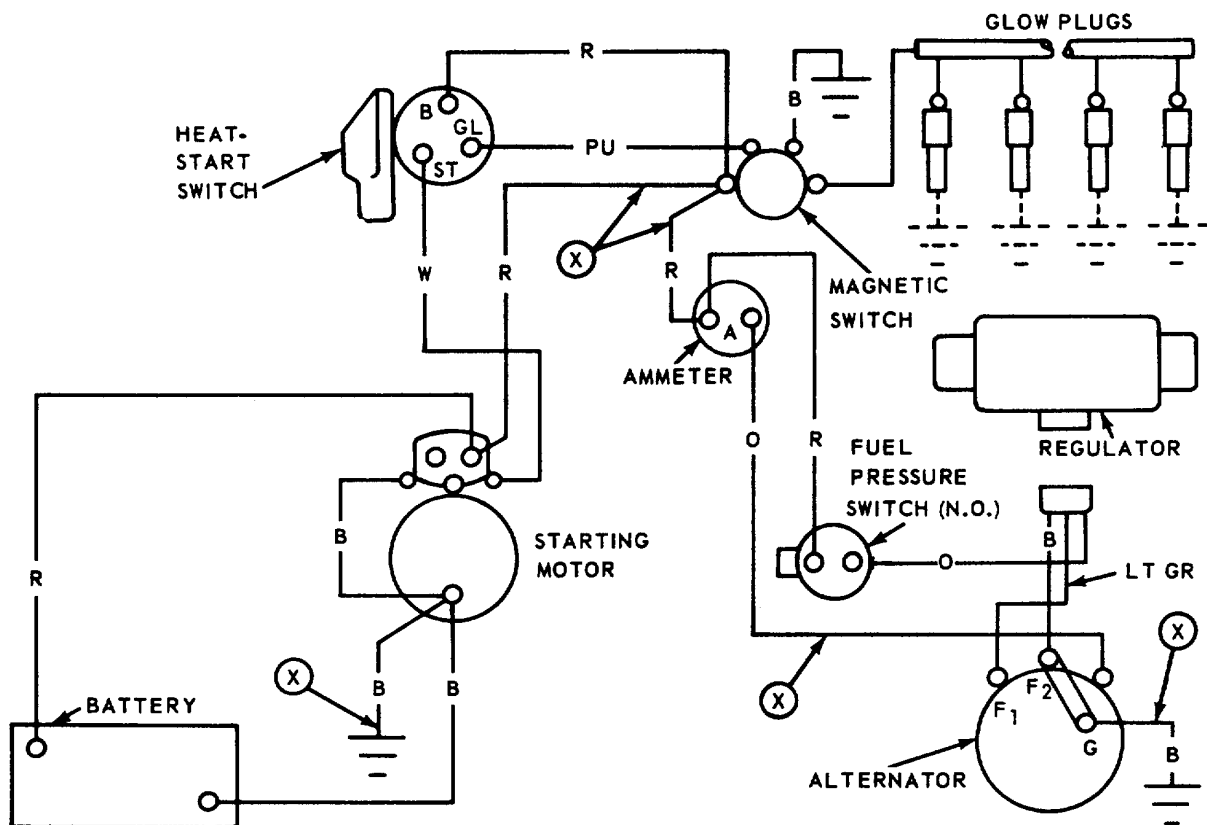

LEGEND		
COLOR CODE	SYMBOL	DESCRIPTION
B BLACK	○	WIRING TERMINAL
W WHITE		
R RED		
O ORANGE		
P PINK		
PU PURPLE		
BR BROWN	⎓	VISIBLE GROUNDING OF COMPONENTS
LT GR LIGHT GREEN		
DK GR DARK GREEN		
LT BL LIGHT BLUE		
DK BL DARK BLUE		
W/B WHITE WITH BLACK STRIPE	⎓	INTERNAL GROUNDING OF COMPONENTS

THE WIRES MARKED (X) ARE TO BE WIRES WITH THE HEAVY GAUGE WIRE SUPPLIED IN THE WIRING KIT GROUP.

G. ENGINE, MODEL D333TA ONLY.

ME 3810-201-12/1-10 ⑦

Figure 1-10. Wiring diagram (sheet 7 of 7).

CHAPTER 2

INSTALLATION AND OPERATING INSTRUCTIONS

Section I. SERVICE UPON RECEIPT OF MATERIEL

2-1. Inspecting and Servicing the Equipment

a. *General.* When a crane-shovel unit is received by the organization, and after it has been unloaded from the carrier (para 2-3), it must be thoroughly inspected and serviced to insure that it is in good operating condition.

b. *Visual Inspection.*

(1) Inspect for damage that might have occurred during shipment.

(2) Inspect all components for loose mounting hardware or connections.

(3) Inspect all controls for freedom of movement through operating range, and that all handles or knobs are in place.

(4) Inspect engine compartment for loose or missing parts, or damage to air cleaner, manifold, muffler, fuel injection pump, or fuel lines.

(5) Inspect fuel tank for dents, cracks, or other damage. Insure removal of all preservative or barrier material.

(6) Inspect battery installation for tightness of cables and level of electrolyte.

(7) Inspect instruments for cracked or broken glass, and security of mounting.

(8) Inspect cab for broken windows or door glass.

(9) Inspect flood lights for serviceability, and test operation of switches on control panel.

(10) Report all discrepancies to proper authority.

c. *Servicing the Equipment.* After the equipment has been unpacked (para 2-3) and separately packed components have been installed (para 2-2), the equipment must be serviced as follows:

(1) Lubricate the crane-shovel in accordance with current lubrication order and paragraph 3-4.

(2) Perform all preventive maintenance checks and services (para 3-6).

Caution: Provide a metallic contact between service vehicle and fuel tank during fueling operation. Never operate engine while in refueling

fueling process. Have serviceable fire extinguisher available while refueling

(3) Fill the fuel tank.

(4) Fill engine crankcase with oil as specified in current lubrication order.

(5) Batteries may be shipped separately (para 2-2) or installed dry charged, with electrolyte shipped separately. Install batteries (para 3-81) if necessary, then fill with electrolyte until acid stands at least 3/8 inch above plates. For further service to batteries refer to TM 9-6140-200.

(6) Service cooling system (TB ORD 651) with water, or proper mixture of anti-freeze solution. For cold weather operation requirements see paragraph 2-14.

2-2. Installation of Separately Packed Components

a. *General.* Components packed separately are boxed, crated, or secured on or about the basic unit on carrier. After unloading (para 2-3b) and unpacking has been accomplished, these components are installed as follows:

b. *Floodlights.* Insure packing material has been removed, then install a floodlight in single mounting bracket on left or right front of cab (fig. 1-2) by removing one locknut, inserting stud through bracket and reinstalling locknut. Install remaining floodlights in a similar manner.

c. *Batteries.* After batteries and electrolyte have been unpacked (para 2-3), install batteries in box (para 3-81).

(1) Remove vent plugs (caps) from battery cells and fill each cell with electrolyte, until it stands at least 3/8 inch above plates. Install caps after checking that vent holes are clear of any obstruction.

Warning: Avoid spilling of electrolyte. Wash off all spilled electrolyte with fresh water, from battery, skin, or clothing. Serious burns may result, if this warning is ignored.

Caution: Avoid flash currents when installing battery cables by installing ground cable first.

Serious damage to instruments can occur, should this caution be ignored.

(2) Install ground cable to negative post on battery, then secure remaining end to stud on engine mounting frame.

(3) Install battery cable to positive post on battery, then secure remaining end to positive terminal of starting motor solenoid. For further service to batteries refer to paragraph 3-81, and TM 9-6140-200-15 (Operation and Organizational, Field and Depot Maintenance of Storage Batteries, Lead Acid type).

Note. After batteries have been installed for about three or four hours, recheck electrolyte level in all cells. Add electrolyte, if necessary, until it stands at least 3/8 inch above plates.

(4) Place cover on battery box and secure with two catches (para 3-81).

d. *Front End Attachments.* Not all of the front end attachment components will be boxed or crated. Most will be secured to carrier with blocking, cribbing, and hold-down bolts (para 2-3). After unloading, the proper front end attachment will be installed (para 2-4).

2-3. Installation or Setting Up Instructions

a. *General.* Crane-shovels are shipped partially disassembled and processed for limited storage. Definite services described below are required before they can be put into operation. The operator and crew requires assistance from organizational maintenance personnel in performing these services.

b. *Unloading the Equipment.*

(1) *Preparation for unloading.* Remove all blocking, hold-down cables, supports, or cribbing, from front end attachments, accessories, or crane-shovel unit (fig. 2-1 thru 2-3).

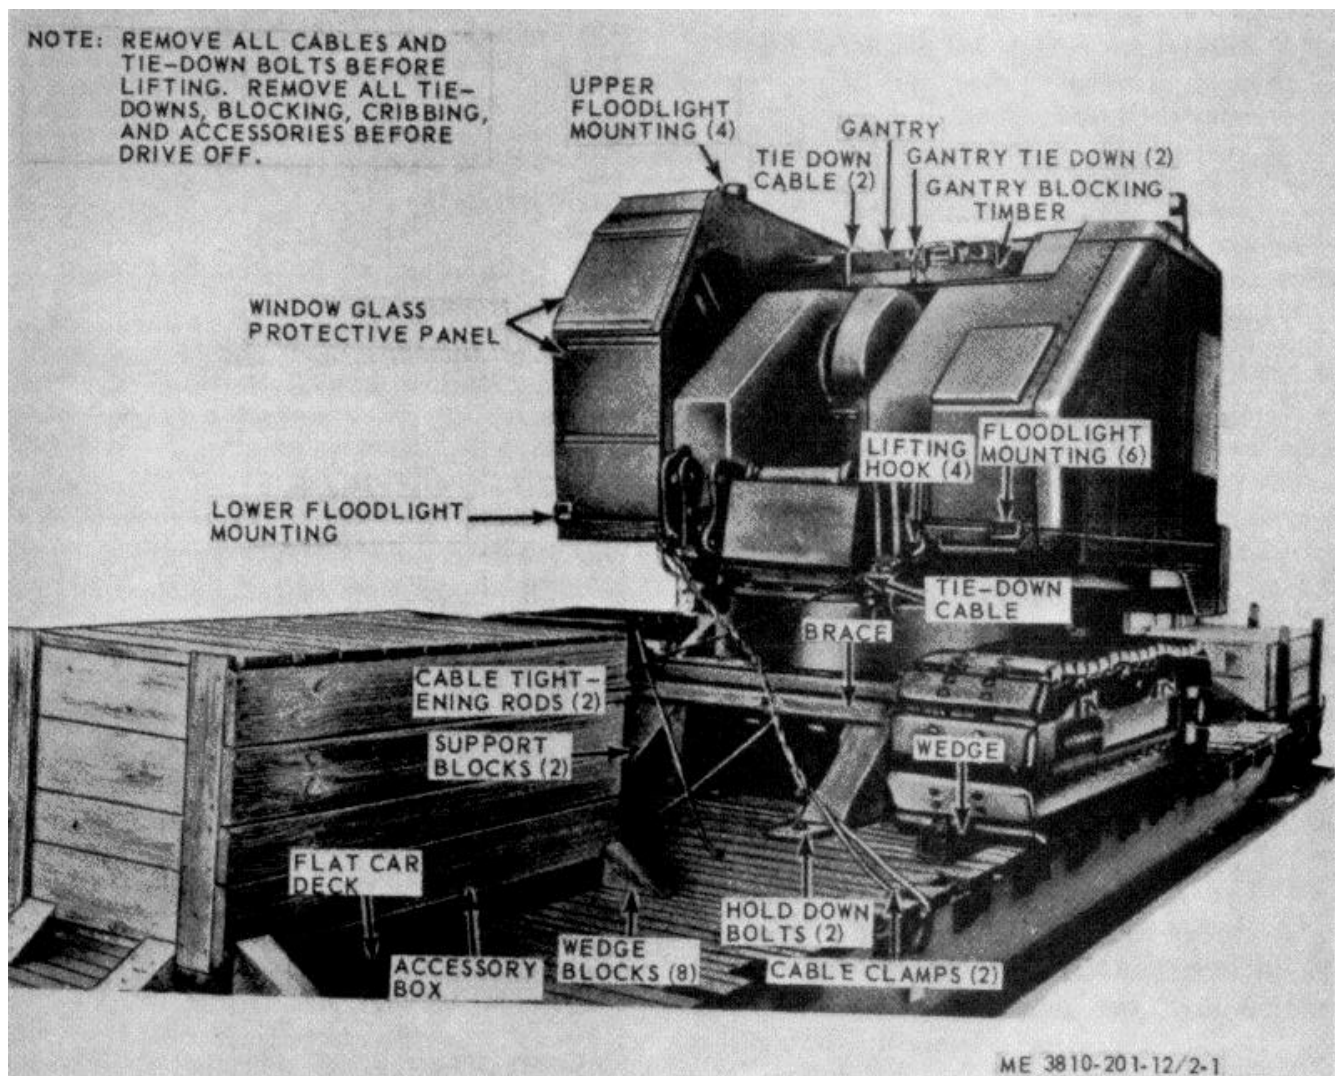


Figure 2-1. Crane-shovel basic unit, and accessories loaded and blocked for shipment, front view.

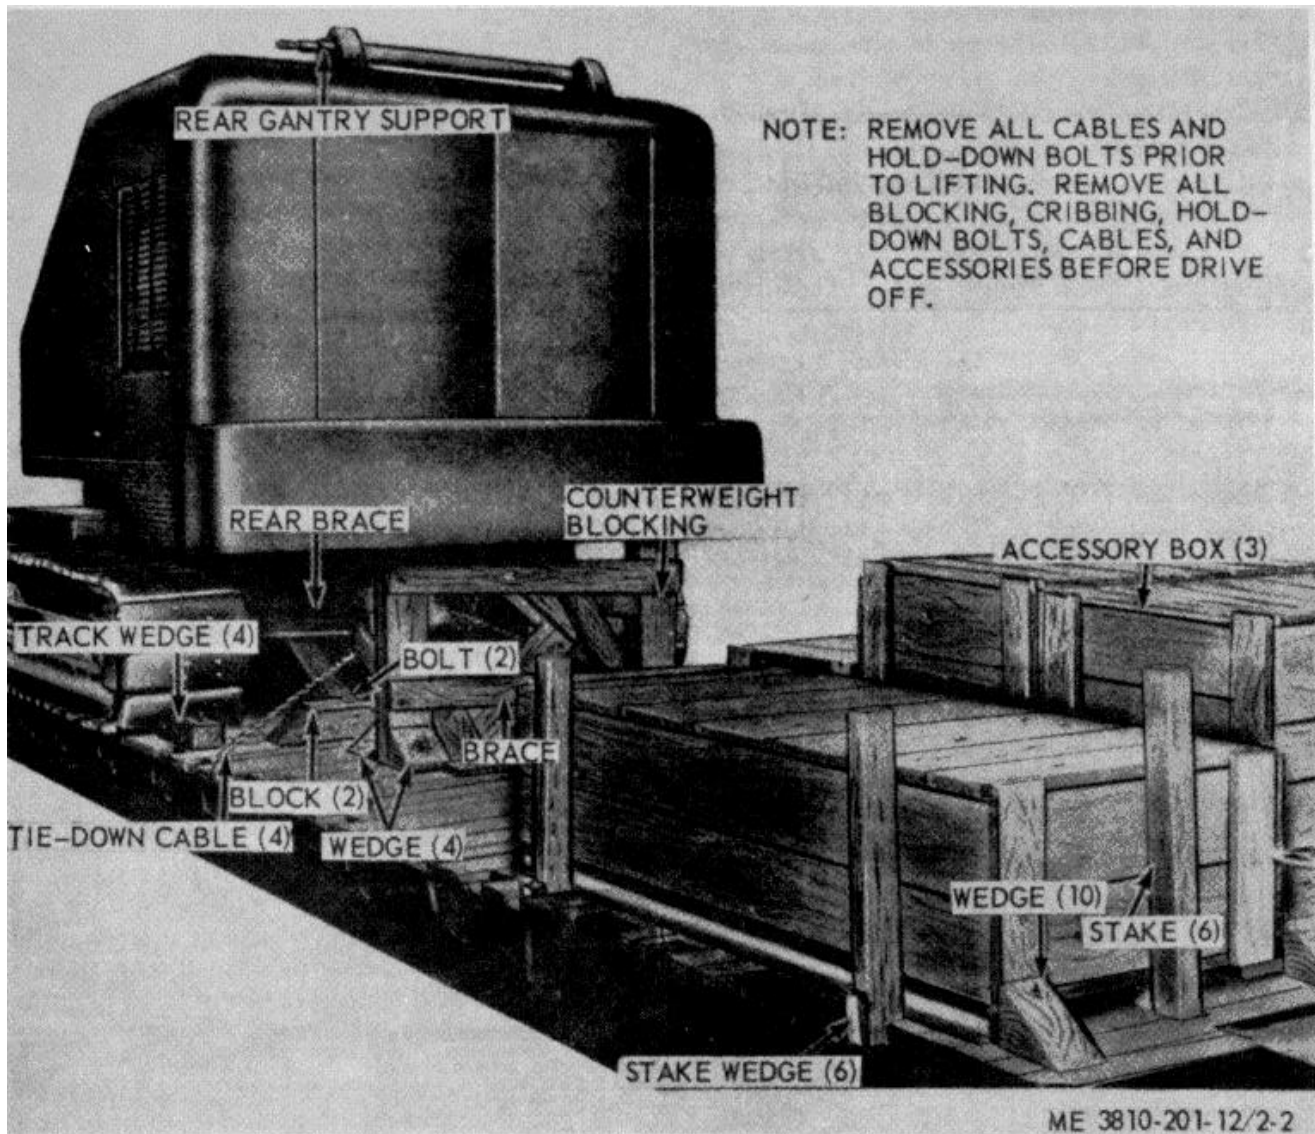


Figure 2-2. Crane-shovel basic unit, and accessories loaded and block for shipment, rear view.

(2) *Unpacking the equipment.* When crane-shovel unit is to be set up for immediate operation remove anti-rotation bars (para 2-5); protective paneling from cab windows and openings; barrier materials; preservatives; pressure sensitive tape from instruments or engine components, and unpack crates or boxes containing components of front end attachment to be installed.

Caution: Always use a nail puller to open boxes, or crates, and avoid damage to contents.

(3) Unloading by lifting.

(a) Position lifting device capable of lifting 102,000 pounds along side carrier.

(b) Assure that all hold-down bolts and tie-down cables have been removed; position suitable slings in lifting eyes of crane-shovel; over hook of lifting

device (fig. 2-4), and attach a tag line to prevent crane-shovel from twisting or turning.

Warning: Keep all personnel not engaged in unloading procedure well back from working area to avoid possible injury.

(c) Lift crane-shovel unit (on signal), swing it away from carrier, and lower to level ground.

(d) Remove lifting slings from eyes of crane-shovel unit and hook of lifting device.

(4) *Unloading by drive off method.*

(a) Position flatcar on a siding with an end ramp, preferably earthen, or where a suitable ramp (fig. 2-5) may be constructed.

(b) Block all flatcar wheels to prevent car moving away from ramp.

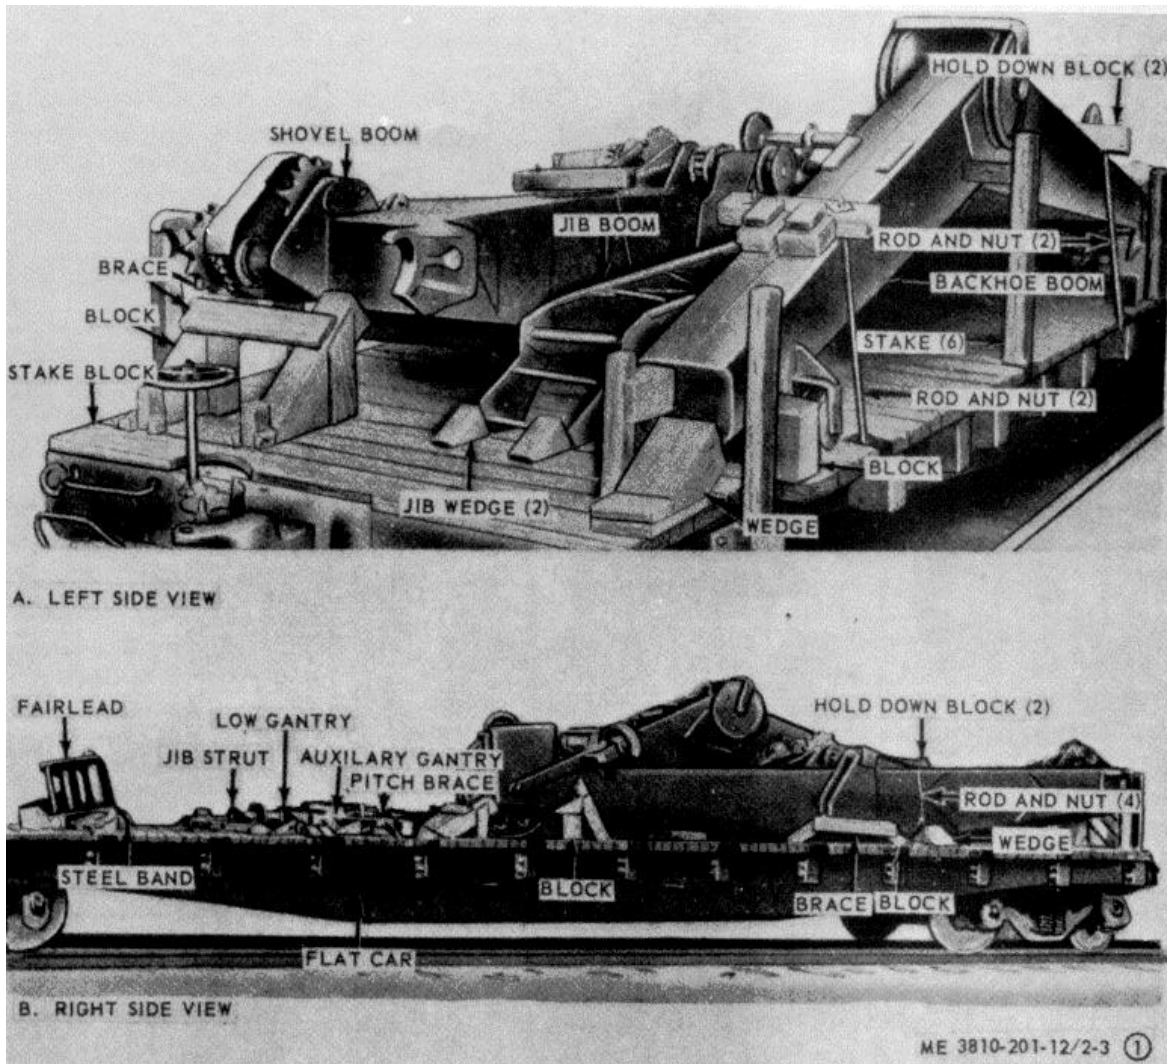


Figure 2-3. Front end attachments loaded and blocked for shipment (sheet 1 of 2).

- (c) Perform steps (1) and (2) of b above.
- (d) Perform preventive maintenance checks and services (para 3-6).
- (e) Assure that crane-shovel has been inspected and serviced (para 2-1) then start engine (para 2-10), and drive crane-shovel off flatcar to a suitable area near by where selected front end attachment, may be installed.

c. Setting Up Instructions for Crane Operation.

(1) *Description.* The equipment required for crane operation consists of a 50 foot boom, boom backstop, boom hoist guy cables, boom hoist cable, snatch block, hook block, boom angle indicator, and room harness spreader (cross-over).

(2) *Crane front end attachment installation.* With crane boom cribbed as illustrated in figure

2-6, move basic unit into position and connect boom by installation of two boom foot pins. Install pins with head out and secure each with a cotterpin. Complete crane installation as follows:

(a) Refer to view A of figure 2-7 and reeve boom hoist cable, connect cable to dead end socket and secure with cable clamps.

(b) Refer to view C of figure 2-7 and reeve main hoist cable through hook block, connect to dead end socket, and secure with cable clamps.

(c) Raise boom to operating position and install boom backstop (fig. 2-8).

(d) When jib boom is required, install as directed in paragraph 4-13, and reeve as shown in view B of figure 2-7.

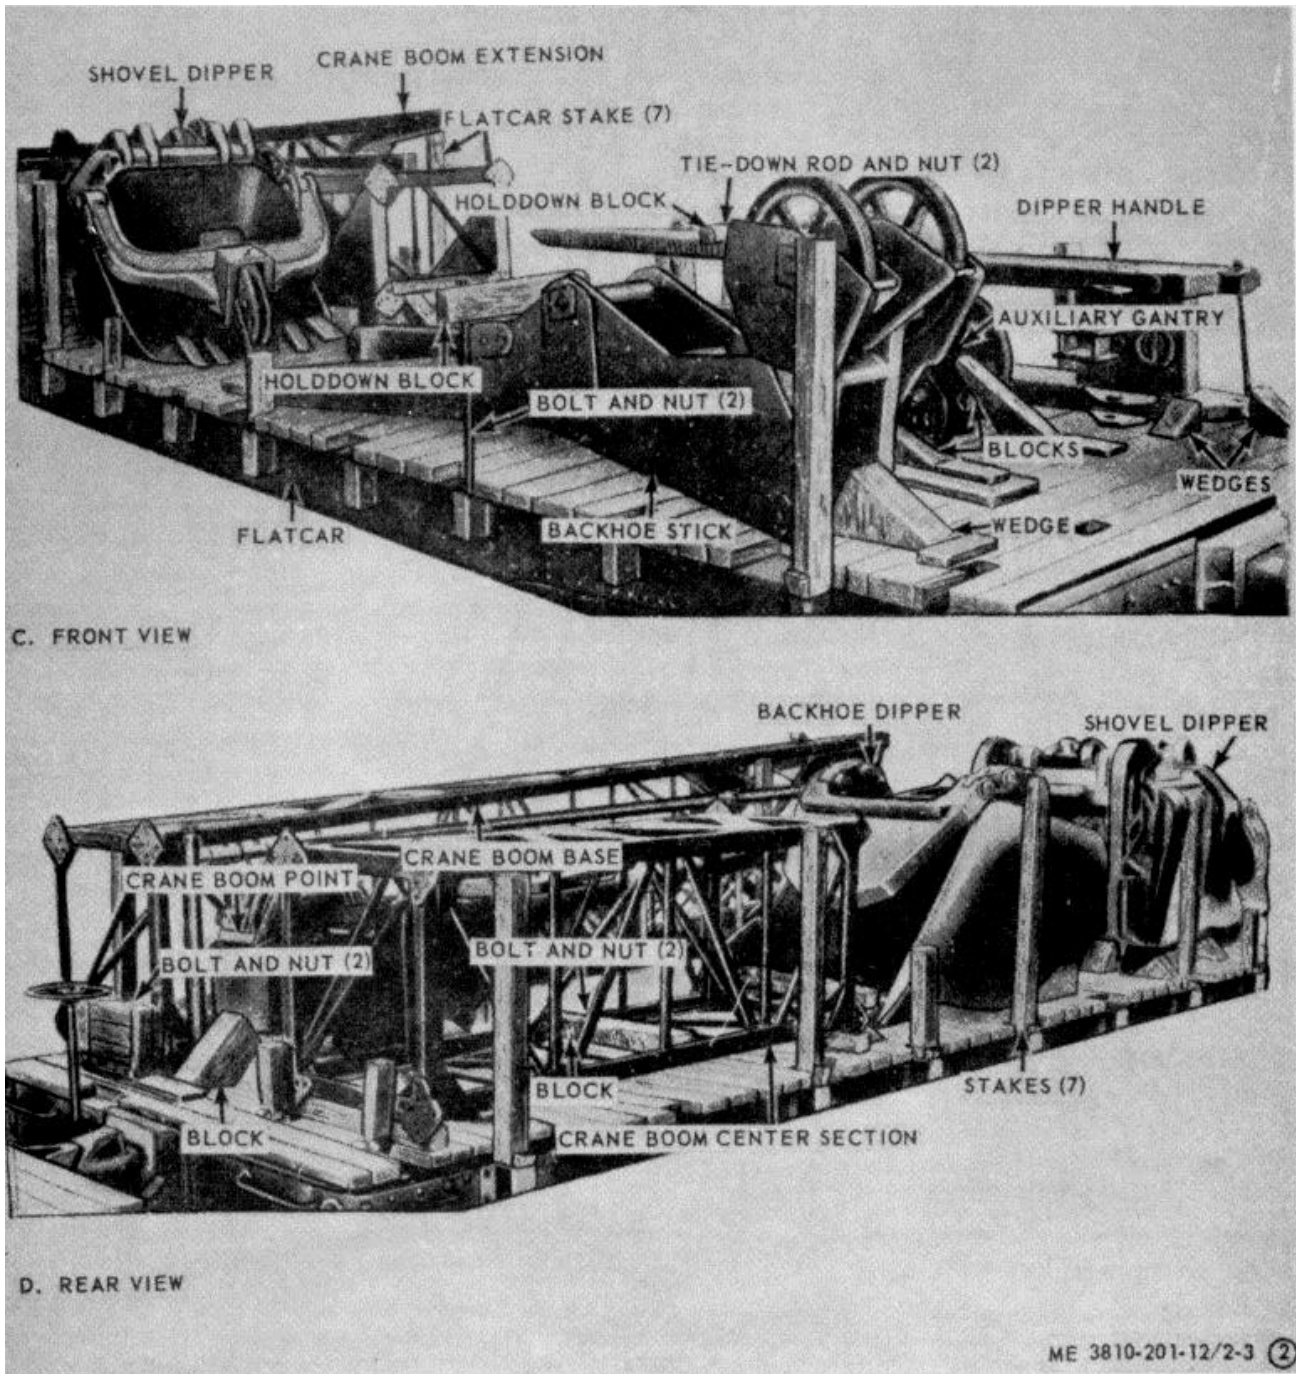


Figure 2-3. Front end attachments loaded and blocked for shipment (sheet 2 of 2).

2-4. Equipment Conversion

a. *General.* The crane-shovel basic unit is normally equipped as a crane, but, front end attachments are available for conversion into backhoe, clamshell, dragline, piledriver, and shovel front operating units. The conversion instructions below will assume that basic unit has been in operation as a crane, and will list the different components required for converting to new front end attachment.

Note. Crane boom of 50 foot length, without center section, or jib boom.

b. *Clamshell Front End Attachment.* This attachment requires clamshell lagging, tagline winder, closing and holding cables, and clamshell bucket.

(1) *Installation.*

(a) Raise hook block to near boom point sheave, then lower crane boom to horizontal position.


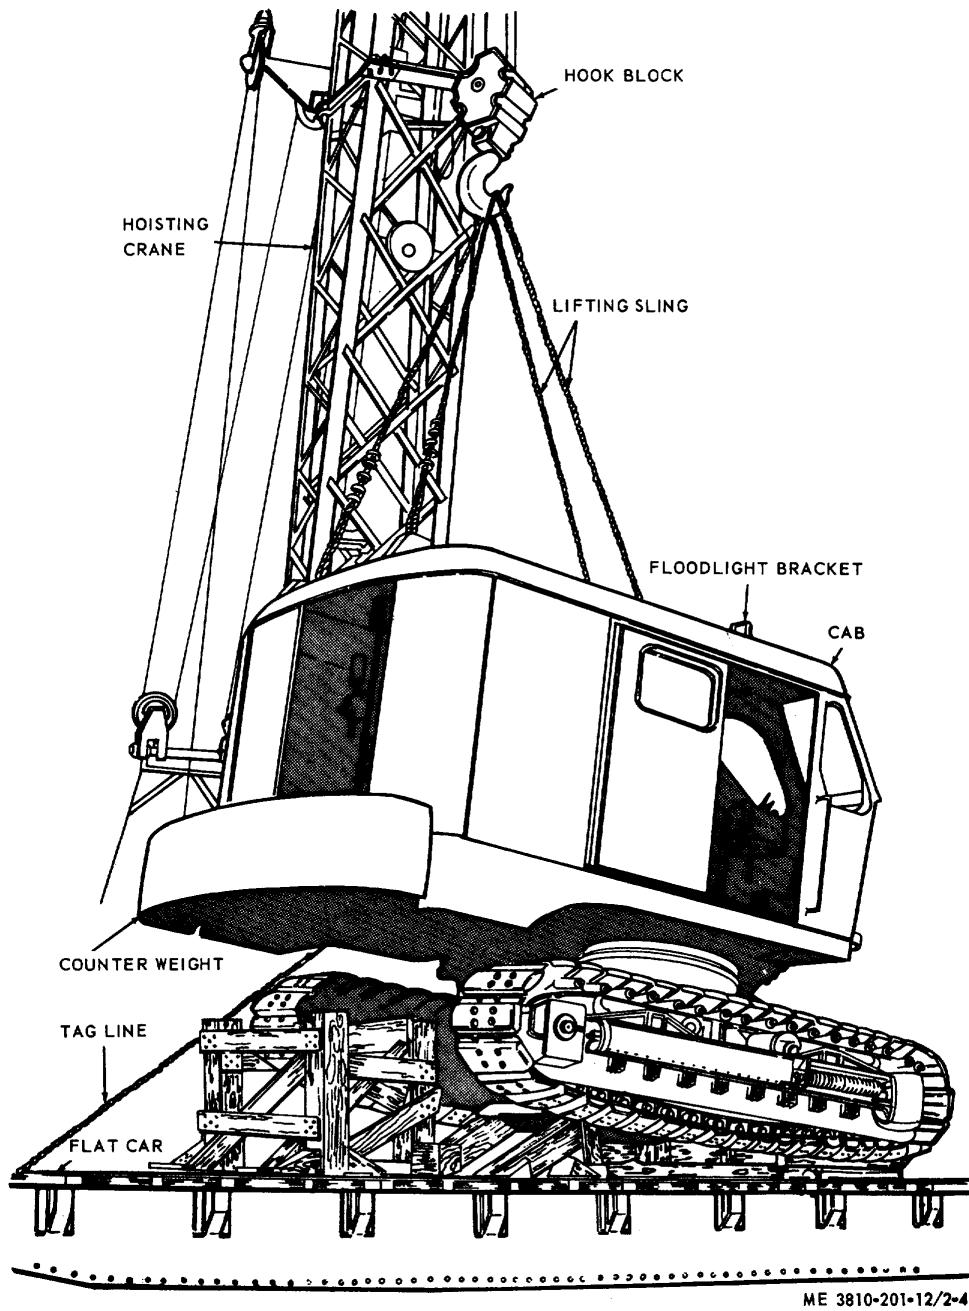



Figure 2-4. Unloading crane-shovel basic unit by lifting.

NOTE: MATERIAL USED FOR RAMP CONSTRUCTION MUST BE OF HARDWOOD AND FREE OF KNOTTY DEFECTS BETWEEN SUPPORTS. RAMP BASE, RAMP RUNNERS, AND RAMP SUPPORTS MUST BE OF 6 INCH BY 6 INCH TIMBER, AND OF A LENGTH TO ASSURE NO MORE THAN A 30 DEGREE ANGLE OR SLOPE. PLACE THREE OF THESE RAMPS UNDER EACH TRACK AND CROSS SUPPORT THEM (ALL CROSS SUPPORTS MAY BE OF 2 INCH BY 4 INCH DIMENSION)) FOR STABILITY.

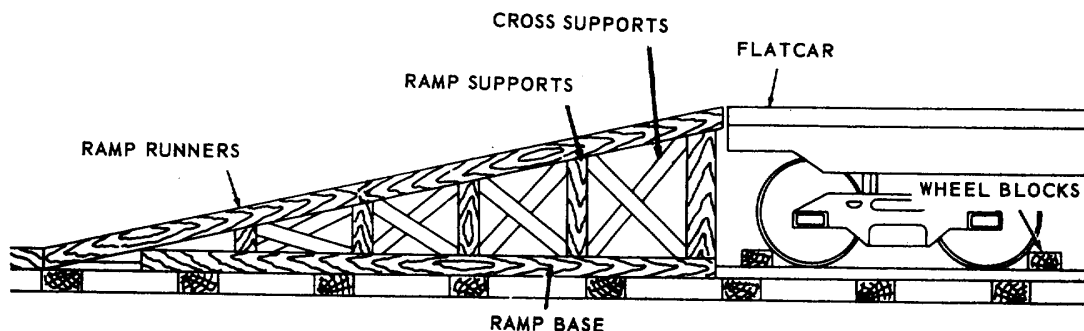

ME 3810-201-12/2-5

Figure 2-5. End ramp construction.

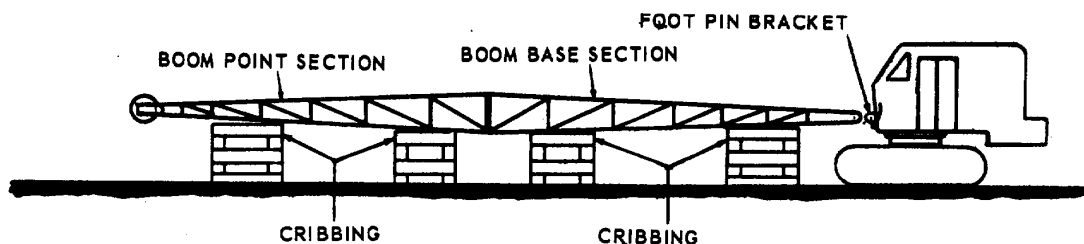

ME 3810-201-12/2-6

Figure 2-6. Crane boom, positioned for removal or installation.

(b) Remove clamps from hoist cable at dead end socket (view C, fig. 2-7); remove hook block, then remove hoist cable from drum. Remove cable from left hand drum if necessary.

Note. Organizational maintenance personnel will remove, or install, all drum lagging.

(c) Remove crane lagging (para 4-12) and install clamshell lagging, then wind holding cable on right hand drum, and closing cable on left hand drum. Refer to table 1-2 for size and length of cables.

(d) Position clamshell bucket under boom point, reeve holding cable (fig. 2-9) and connect to dead end socket at clamshell bucket. Secure with cable clamps.


(e) Reeve closing cable in similar manner.

(f) Install tagline winder (para 4-14); unwind and connect tagline to clamshell chain, and secure with cable clamps.


(g) Raise crane boom to proper height (fig. 2-10).

(2) *Removal.* Remove clamshell front end attachment by reversing steps (a) through (g) above and revert to crane operation.


c. *Dragline Front End Attachment.* This front end attachment requires installation of dragline lagging, fair

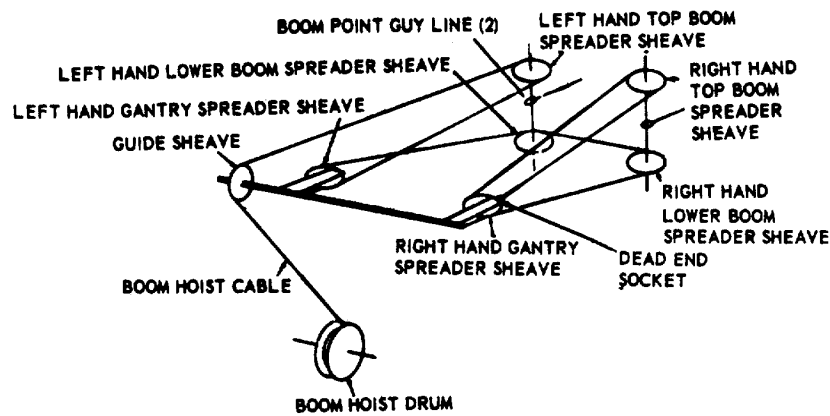

A. BOOM HOIST CABLE REEVING

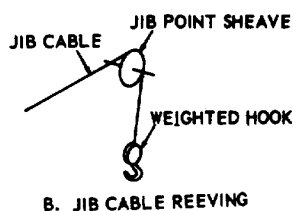

B. JIB CABLE REEVING

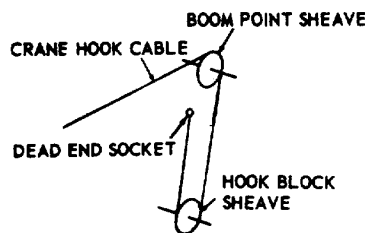

C. CRANE HOOK REEVING

ME 3810-201-12/2-7 ①

Figure 2-7. Crane boom and jib boom reeving diagram (sheet 1 of 2).

lead, dragline bucket, dragline cable, and hoist cable.

(1) *Installation.*

(a) Raise crane hook block to near boom point sheave then lower crane boom to horizontal position (fig. 2-11).

(b) Remove clamps from hoist cable at dead end socket (view C, or D, fig. 2-7); remove hook block, then Unwind and remove hoist cable from right hand drum. Remove cable from left hand drum.

Note. Organizational maintenance personnel will install lagging.

(c) Install dragline lagging (para 3-181), then install digging (drag) cable (table 1-2) on left hand drum (fig. 2-12).

(d) Install dragline hoist cable (table 1-2) on right hand drum.

(e) Install fair lead (para 4-16).

(f) Position dragline bucket under boom point; reeve dragline hoist cable (fig. 2-12), then connect at dead end socket on dragline bucket bridle and secure with cable clamps.

(g) Reeve drag (digging) cable (fig. 2-12), connect to dead end socket on dragline bucket, and secure with cable clamps.

(h) Raise boom to normal operating position.

(i) Raise dragline bucket from ground.


(2) *Removal.* Remove dragline front end attachment by reversing steps (a) through (i) above and revert to crane operation.

d. Pile Driver Front End Attachment. For this attachment, pile adapters; pile leads; cat-walk; drop hammer; boom center (extension) section; boom hoist cable; hammer cable, and pile cable are required.

(1) *Installation.*

(a) Lift hook block to near boom point sheave then lower crane boom to horizontal position on cribbing (fig. 2-6); remove clamps from hoist cable at dead end socket (view C, fig. 2-7); remove hook block, and wind hoist cable or drum.

(b) Loosen tension on boom hoist cable (view A, fig. 2-7), remove cable end from dead end

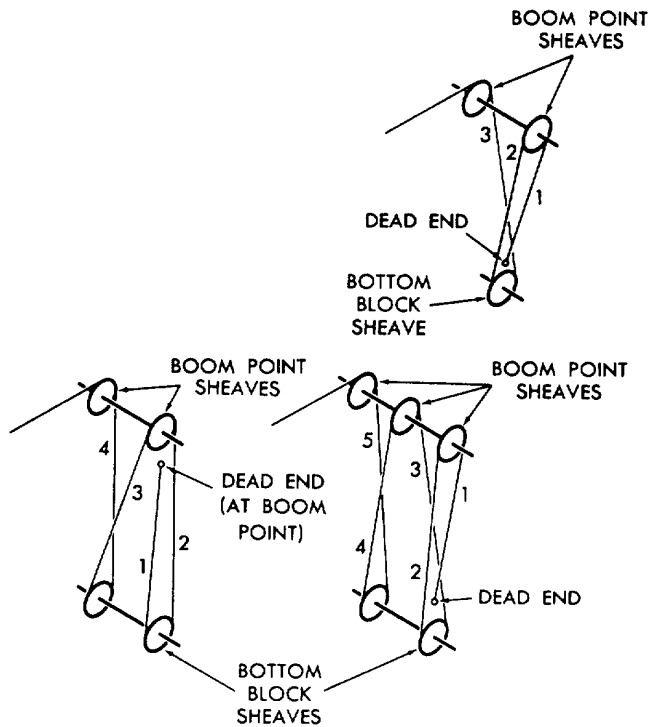

D. CRANE HOOK REEVING (CONT'D)

ME 3810-201-12/2-7 ②

Figure 2-7. Crane boom and jib boom reeving diagram (sheet 2 of 2).

socket, and rewind on cable drum slowly while guiding cable through sheaves.

(c) Remove boom hoist cable from drum and replace with pile driver boom hoist cable (table 1-2).

(d) Separate boom point section from base section (para 4-18) and install center (extension) section as shown in figure 2-11.

(e) Reeve boom hoist cable (view A, fig. 2-7) and connect to dead end socket. Secure with proper clamps.

(f) With 60 foot boom installed, remove crane hoist cable from right hand drum and install pile cable (table 1-2) and reeve as shown in figure 2-18. Make loop and secure with cable clamps.

(g) Position piledriver adapters and spacers on boom point pin (fig. 2-14).

(h) Install bolts and nuts securing adapters to pile leads.

(i) Remove cable from left hand drum and install drop hammer cable (table 1-2) and reeve as shown on figure 2-18, over boom point sheave, down through pile leads, then connect at dead end socket at

drop hammer and secure with cable clamps.

(j) Raise boom until pile leads are above drop hammer; position pile leads so that hammer guides inside pile leads will enter grooves in hammer sides, then lower pile leads.

(k) Raise drop hammer up into pile leads.

(l) Install catwalk at boom foot, then at pile leads (fig. 2-14), and secure with bolts, lockwashers and nuts.

(2) *Removal.* Remove piledriver front end attachment by reversing steps (a) through (1) above and revert to crane operation.

e. *Backhoe Front End Attachment.* Items required for backhoe operations are: auxiliary gantry; boom; backhoe stick; pitch brace; dipper; backhoe lagging, and cables. Convert as follows:

(1) *Installation.*

(a) Remove crane boom (para 4-13) and crane lagging (para 3-131).

Note. Removal of lagging above, and installation of lagging below, will be accomplished by organizational maintenance personnel.

(b) Install backhoe lagging (para 4-12).

(c) Move crane-shovel into position (fig. 2-15) and connect backhoe boom by installing foot pins. Secure with cotterpins.

(d) Install auxiliary gantry and secure with gantry pins.

(e) Install backhoe digging cable (table 1-2) on drum lagging (fig. 2-16) and reeve through guide sheaves (view C) to dead end socket, and secure end with cable clamps.

(f) Install boom hoist cable (table 1-2) and reeve as shown in view A of figure 2-16. Connect in dead end socket and secure with cable clamps.

(g) Install hoist cable (table 1-2) and reeve as shown in view B of figure 2-16. Connect in dead end socket and secure with cable clamps.

(h) Raise gantry, insure that pitch brace is properly installed (para 4-29b), then remove backhoe front end attachment from cribbing.

(2) *Removal.*

(a) Extend backhoe dipper and build cribbing under boom foot (fig. 2-15).

(b) Position blocking between boom and backhoe stick.

(c) Build cribbing under boom point, then lower boom to cribbing so that dipper rests on ground and boom is horizontal.

(d) Remove clamps from cable at dead end socket (view A, fig. 2-16), then slowly rewind cable on drum as it is carefully guided through the sheaves.

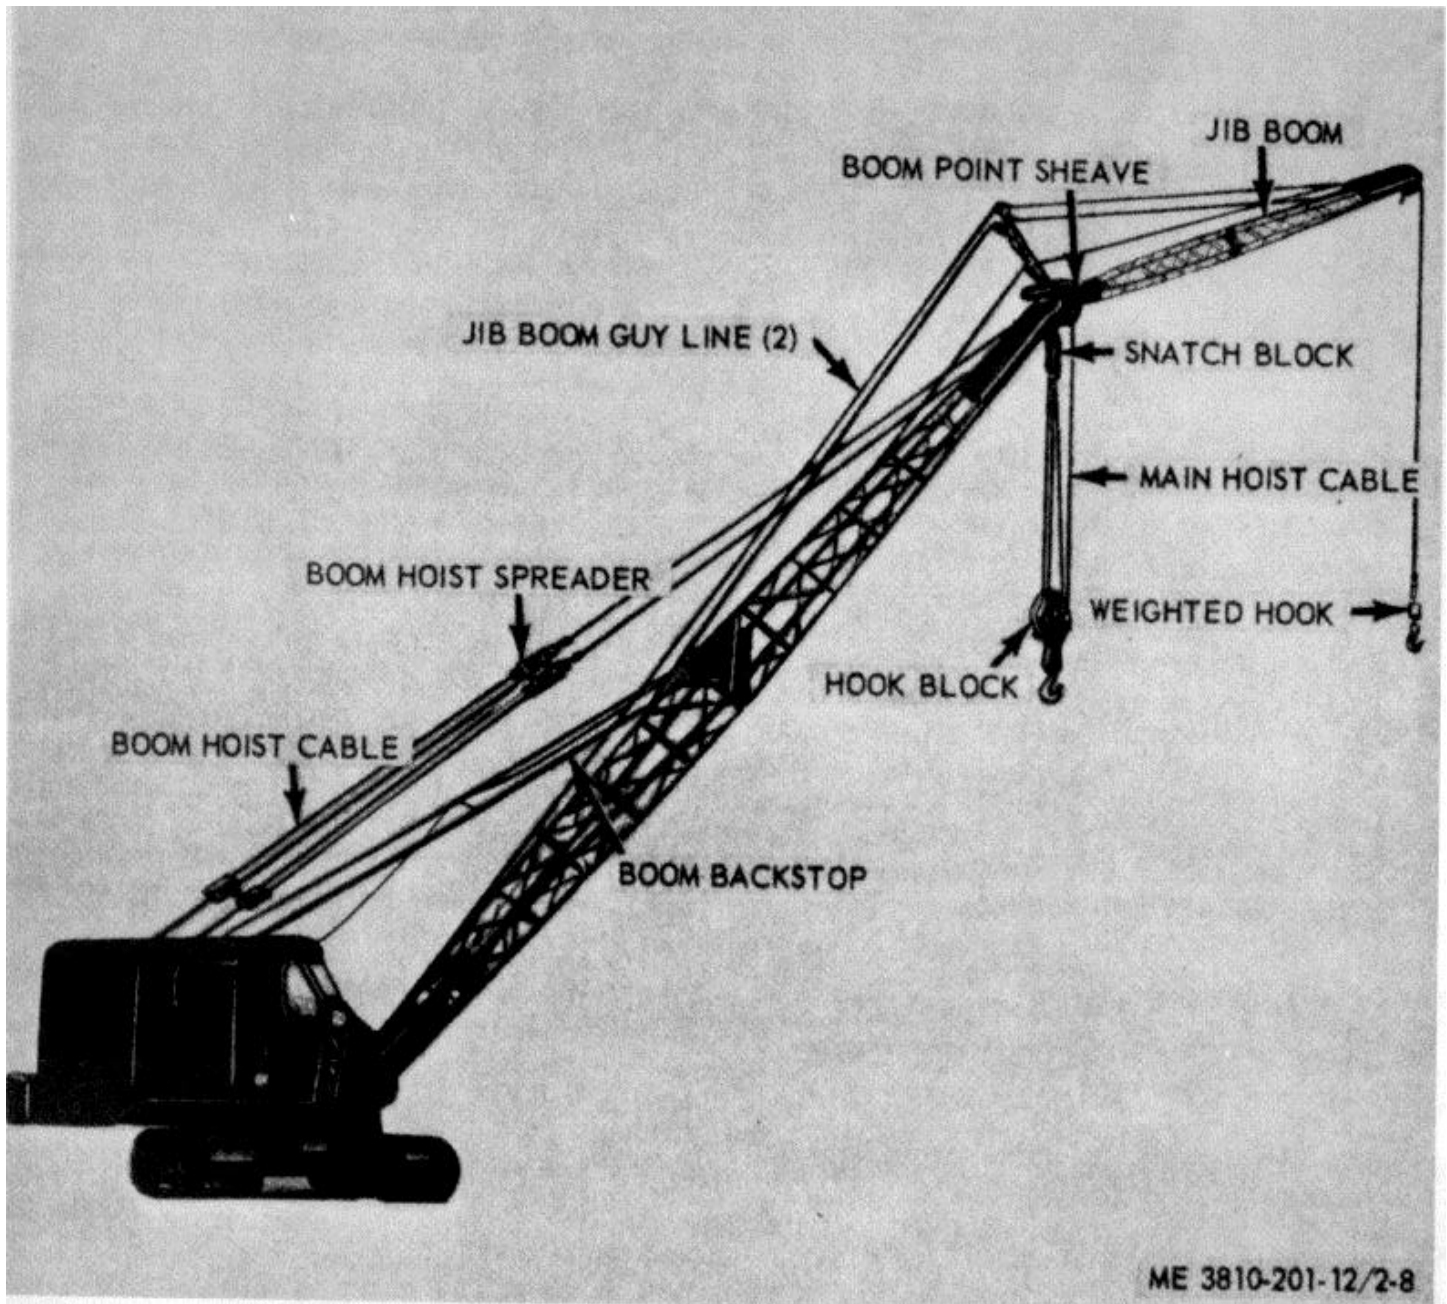


Figure 2-8. Crane front end attachment, with jib boom installed.

(e) Remove clamps from digging cable (view C) at dead end socket, then slowly rewind cable on drum as it is carefully guided through the sheaves.


(f) Remove clamps from hoist cable (view B) at dead end socket, then slowly rewind on drum as it is carefully guided through the sheaves.

(g) Remove cotterpins from boom foot pins (fig. 2-15); remove pins from brace and auxiliary gantry, then back basic unit away from backhoe front end attachment slowly until machine is clear.

(h) Remove cables from drums (views A, B and C, fig. 2-16); remove backhoe lagging (para 3-131); install crane lagging, then install crane cables (table 1-2).

(i) Install crane front end attachment (para 2-3c).

f. Shovel Front End Attachment. Installation of shovel front end attachment (fig. 2-18) requires the assistance of organizational maintenance personnel, and in case the crowd chain mechanism is not installed on boom foot, the assistance of direct support maintenance personnel as well. Installation instructions are covered in paragraph 4-2. Reeve the cables as shown on figure 2-19.

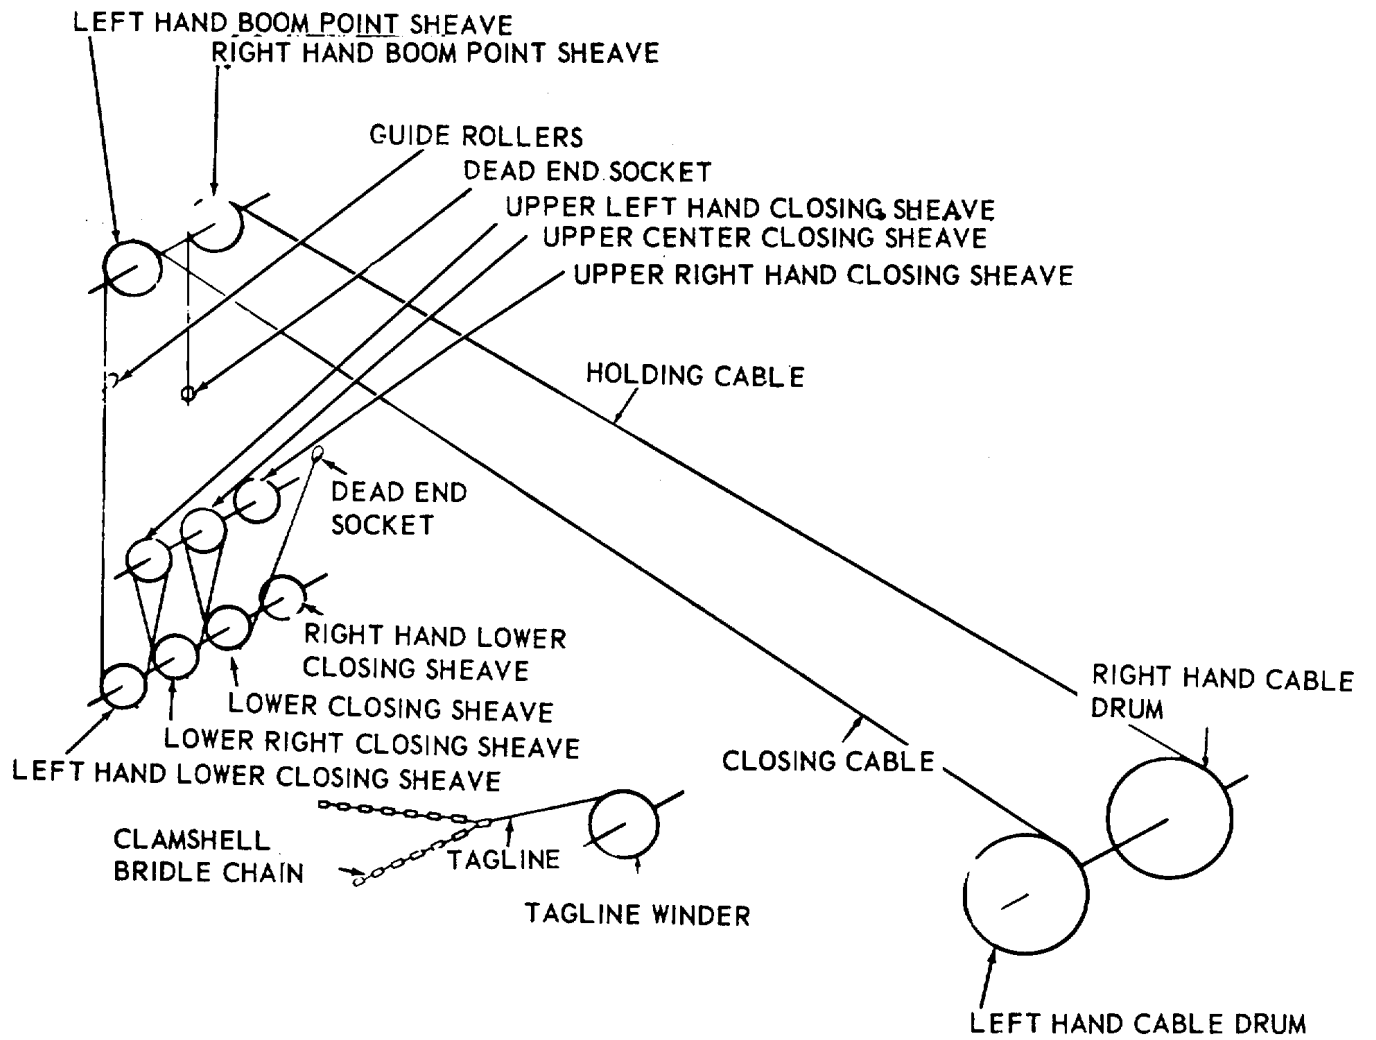

ME 3810-201-12/2-9

Figure 2-9. Clamshell front end attachment reeving diagram.

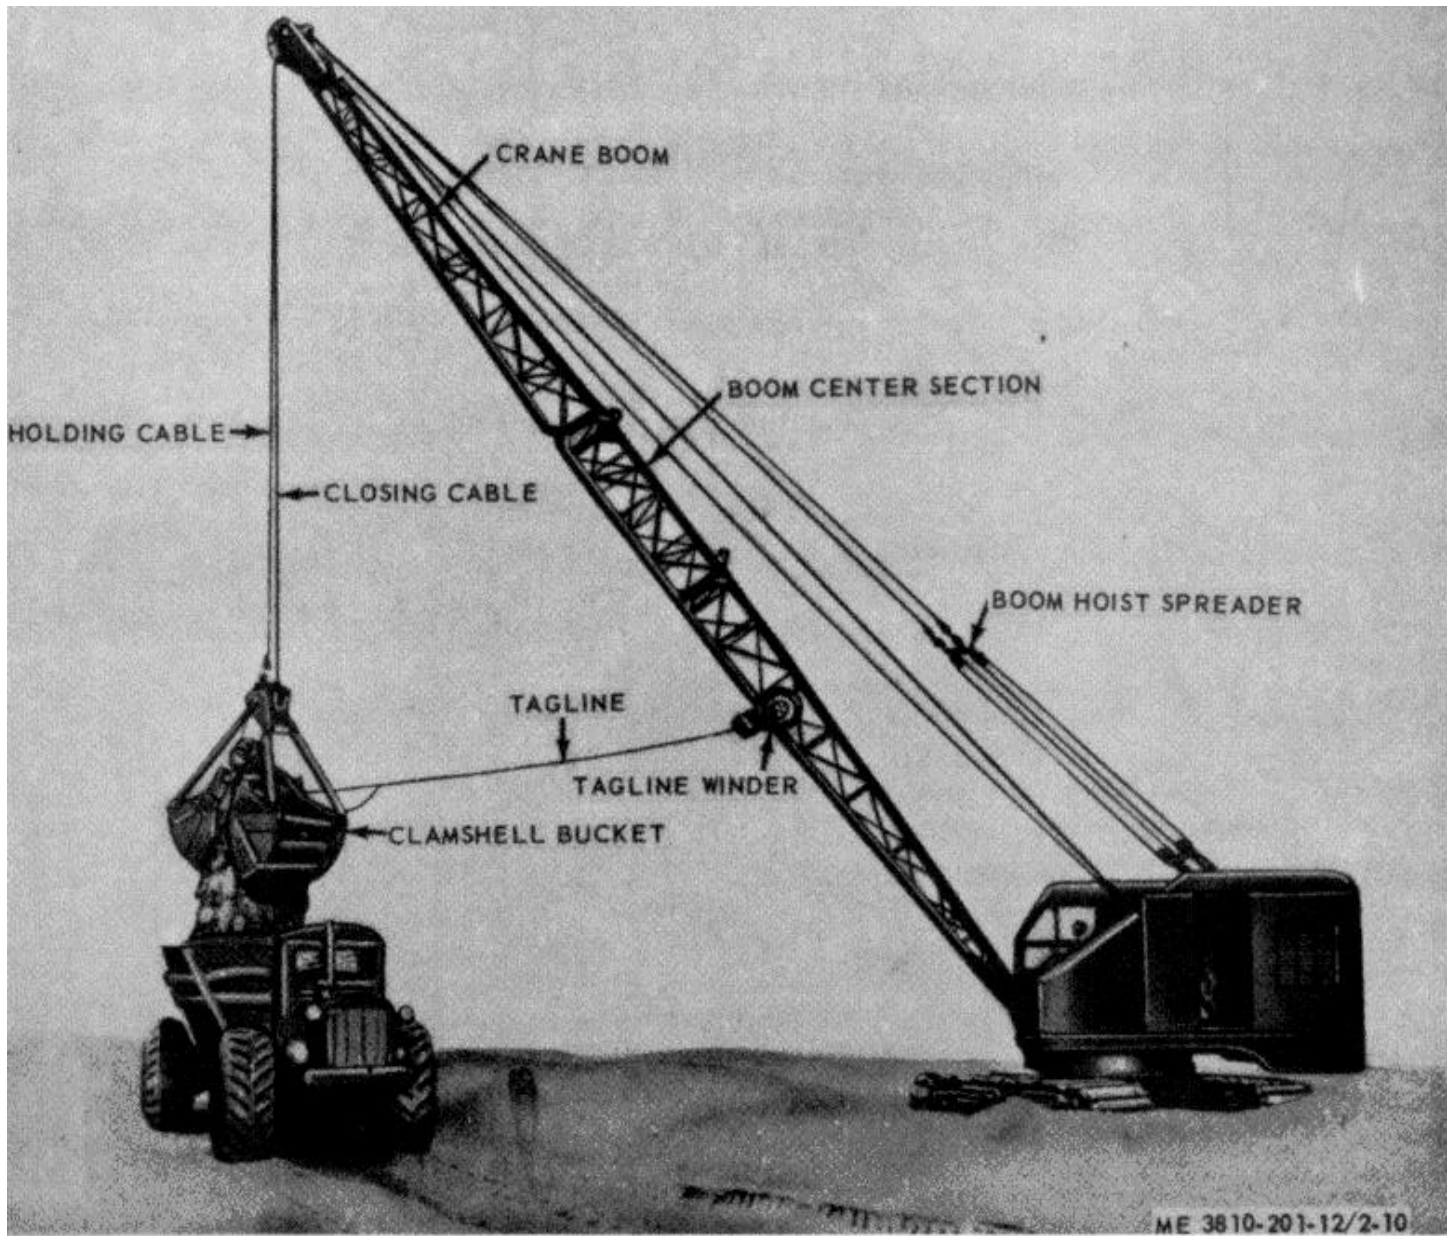


Figure 2-10. Clamshell front end attachment, installed view.



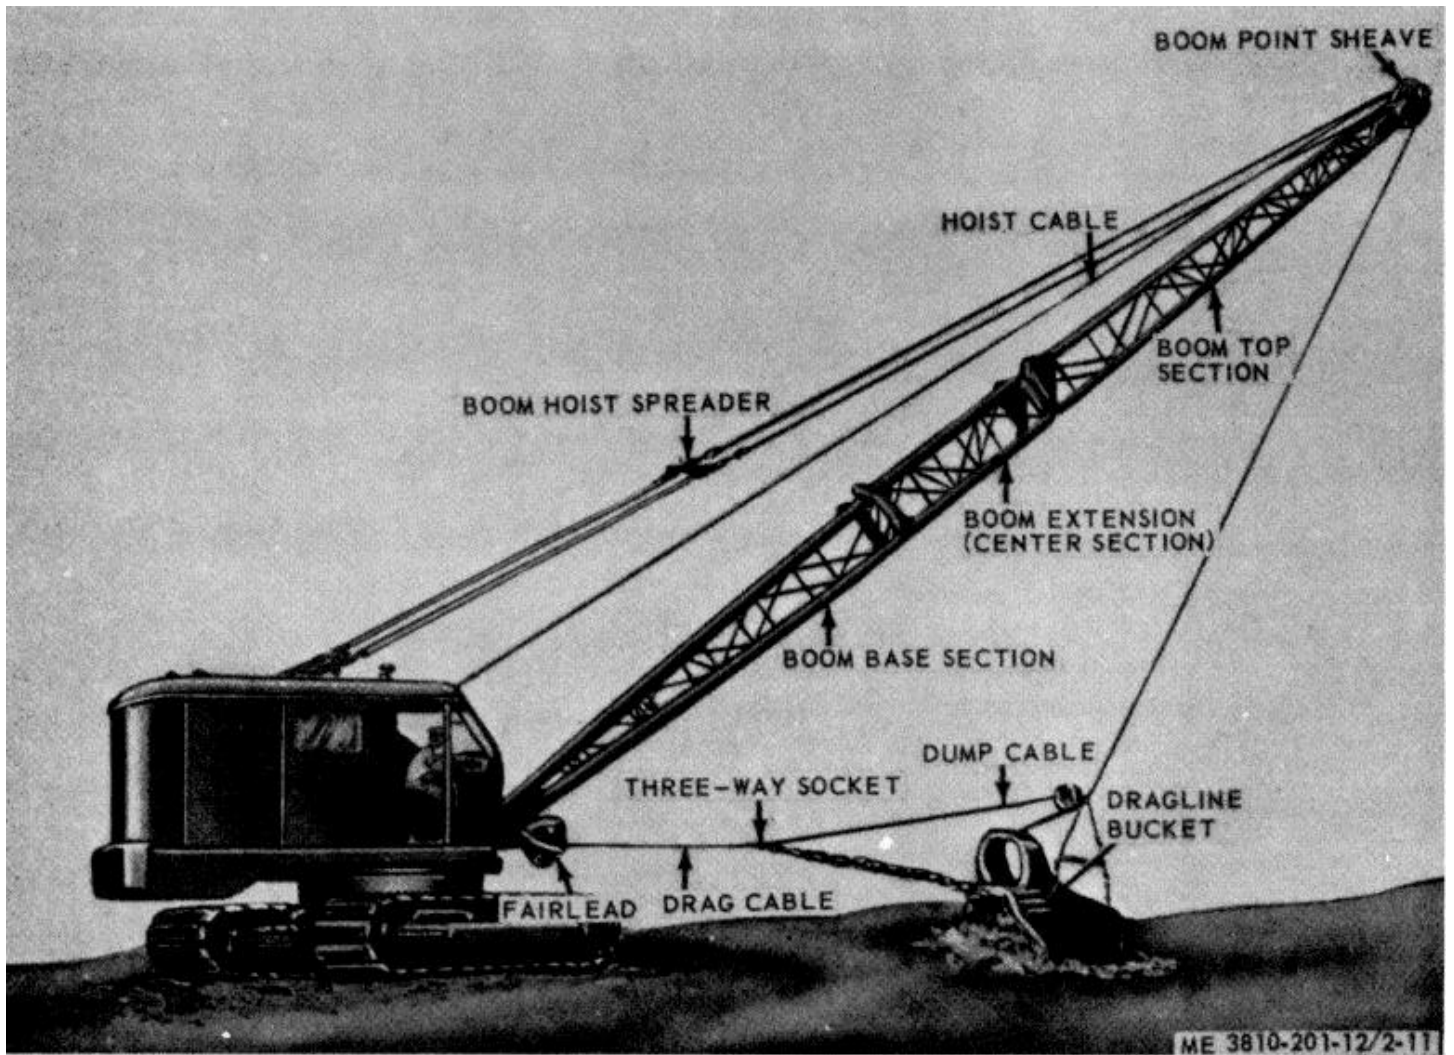


Figure 2-11. Dragline front end attachment, installed view.

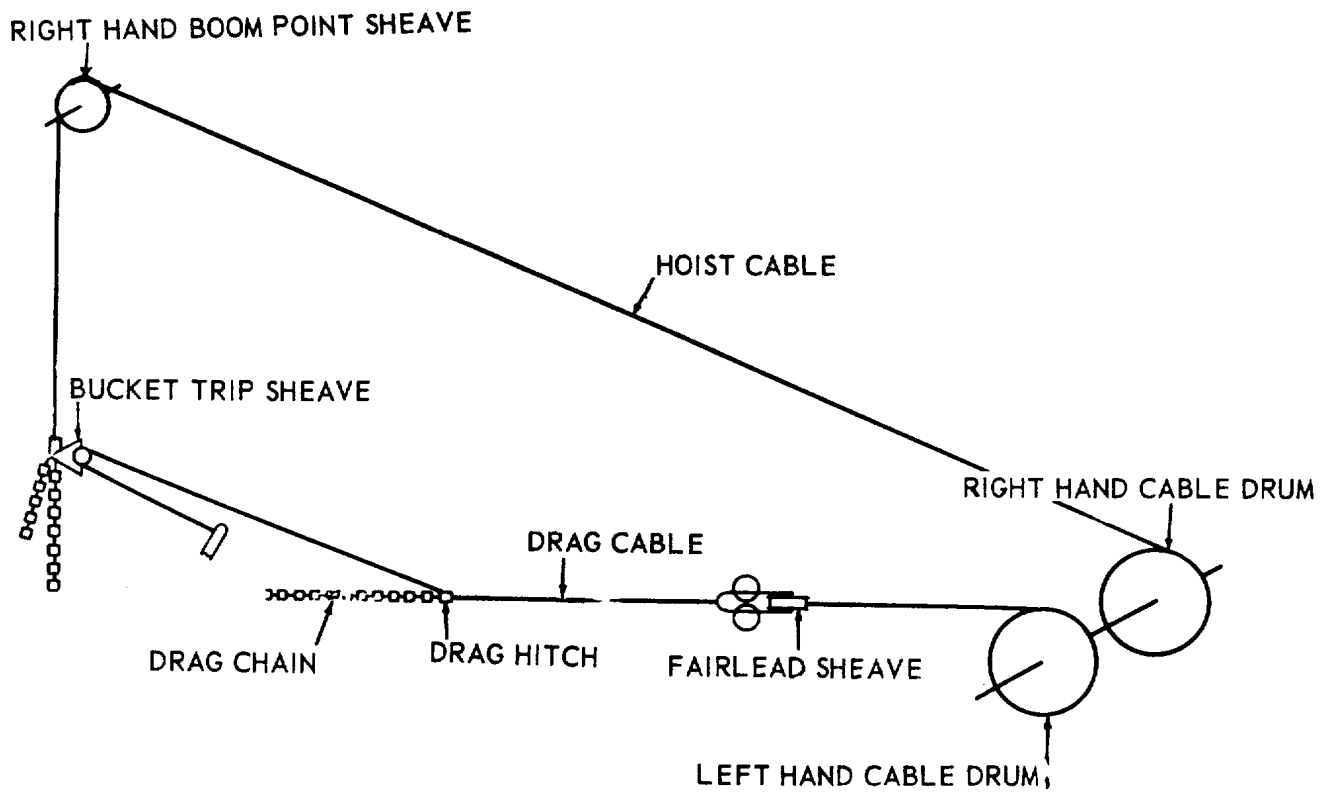

ME 3810-201-12/2-12

Figure 2-12. Dragline front end attachment reeving diagram.

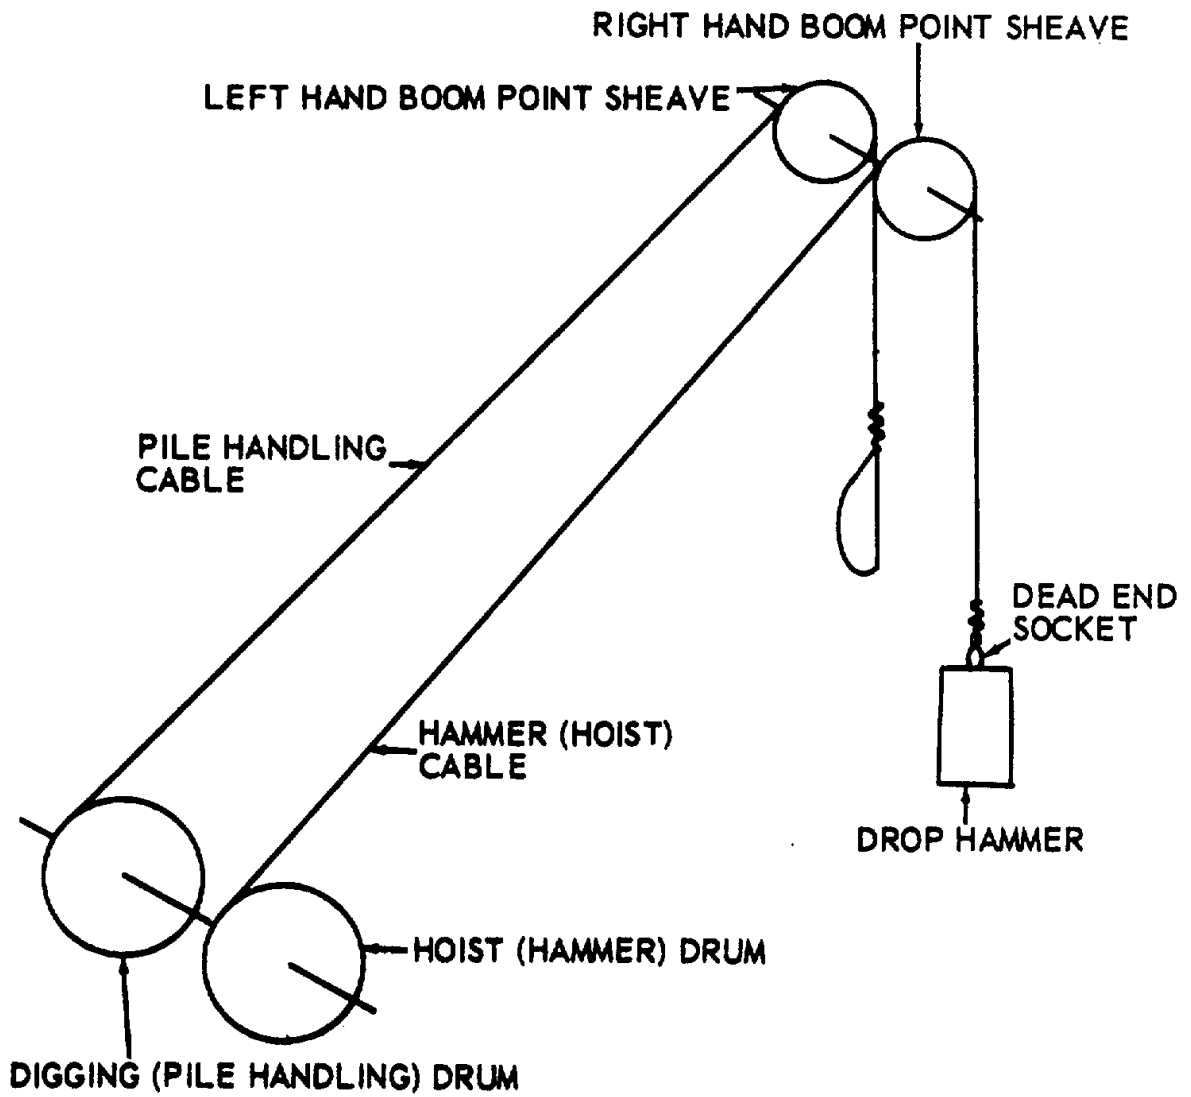

ME 3810-201-12/2-13

Figure 2-13. Piledriver front end attachment, reeving diagram.

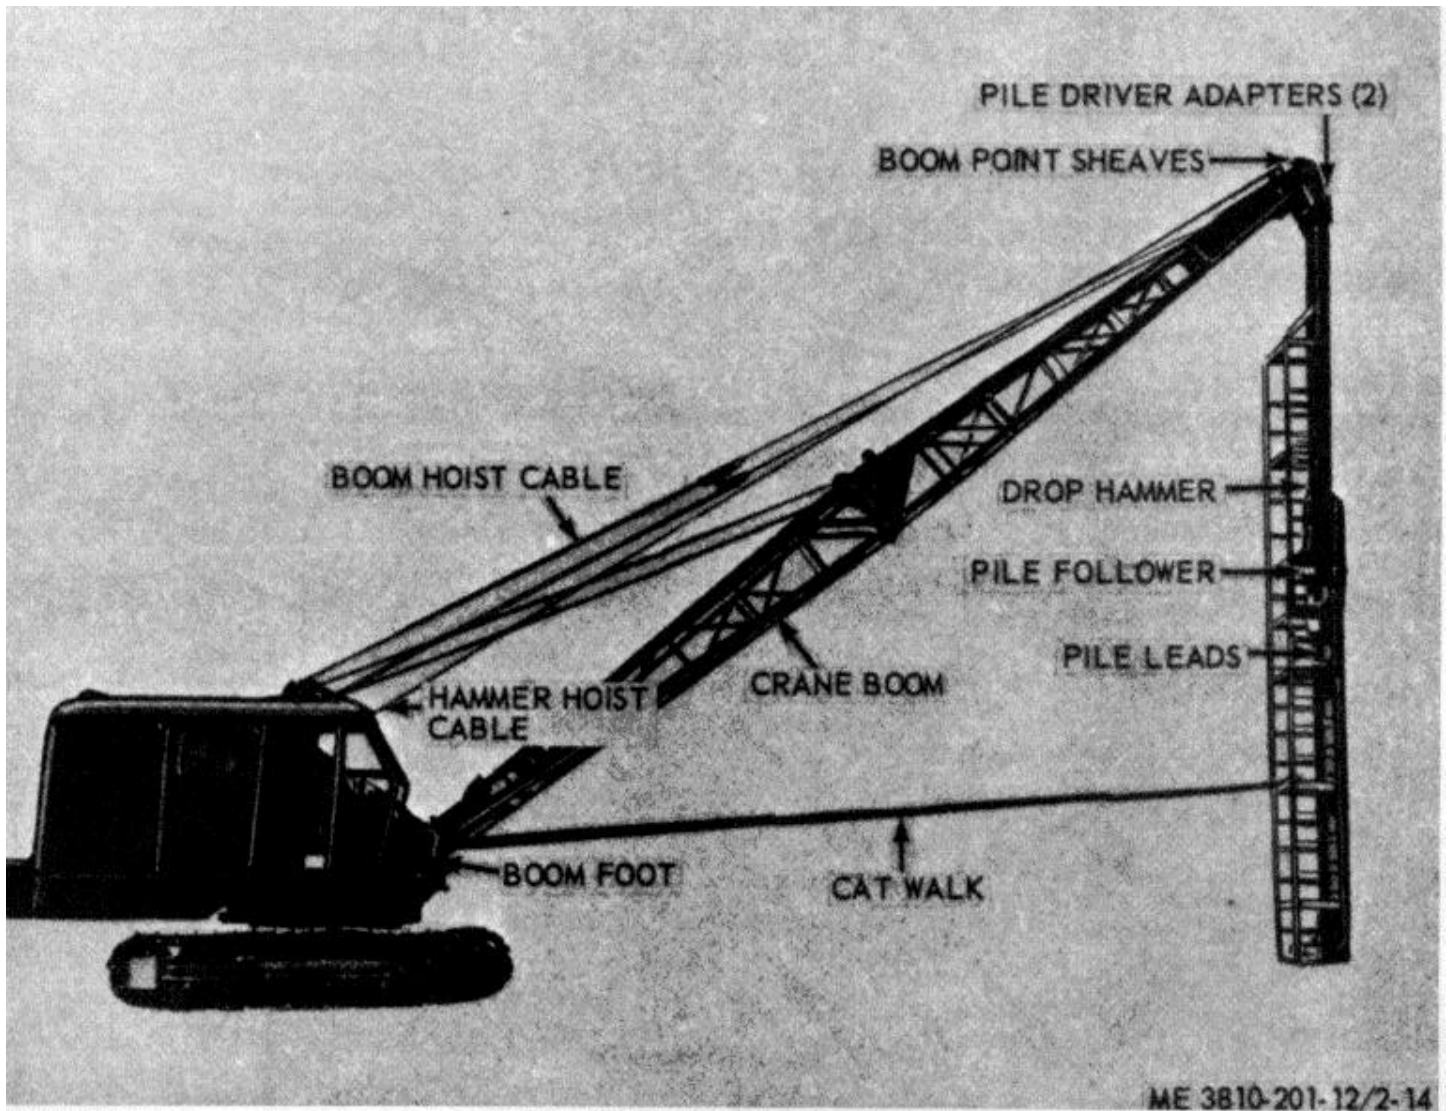


Figure 2-14. Piledriver front end attachment, installed view.



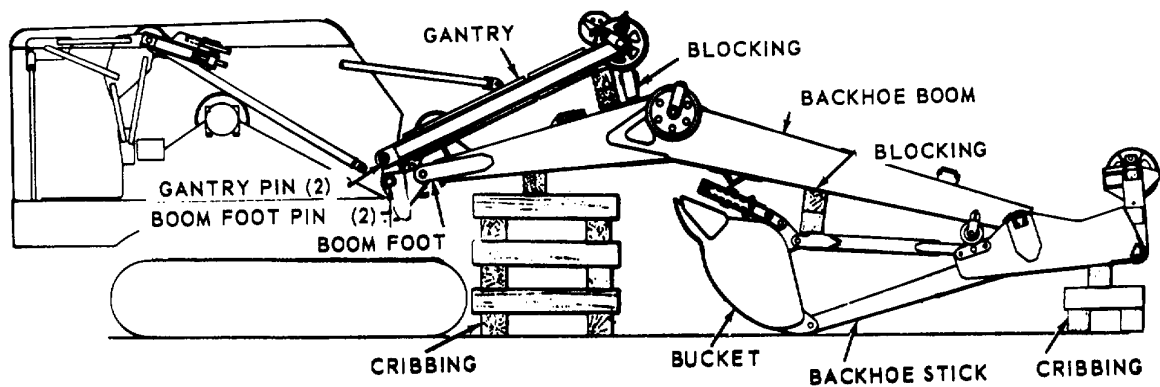


Figure 2-15. Backhoe front end attachment, prepared for removal and installation.

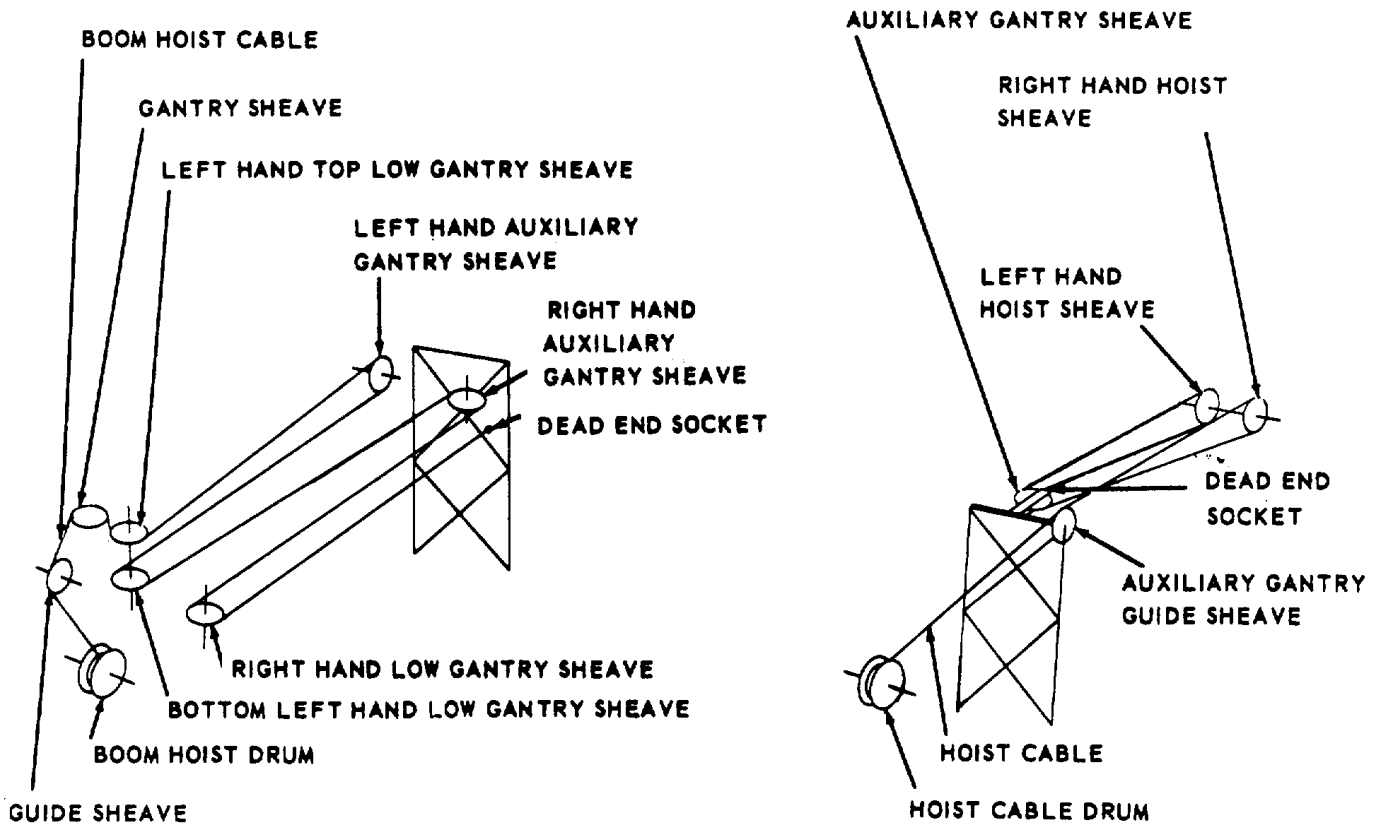

A. BOOM HOIST CABLE REEVING


B. BOOM HOIST CABLE REEVING (CONT'D)

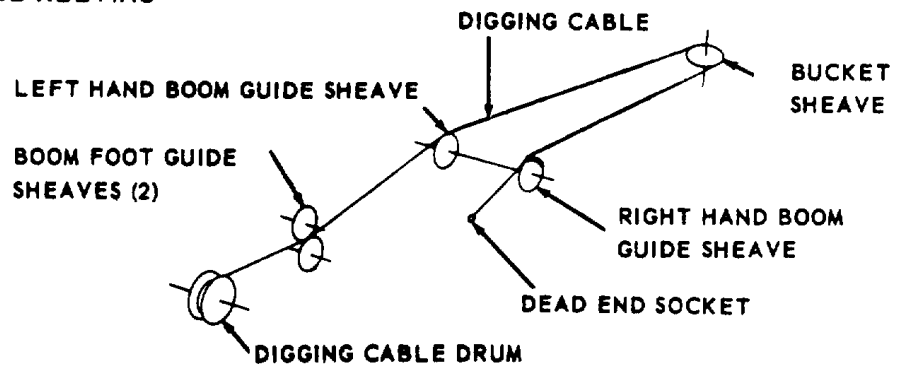

C. DIGGING CABLE REEVING

ME 3810-201-12/2-16

Figure 2-16. Backhoe front end attachment, reeving diagram.

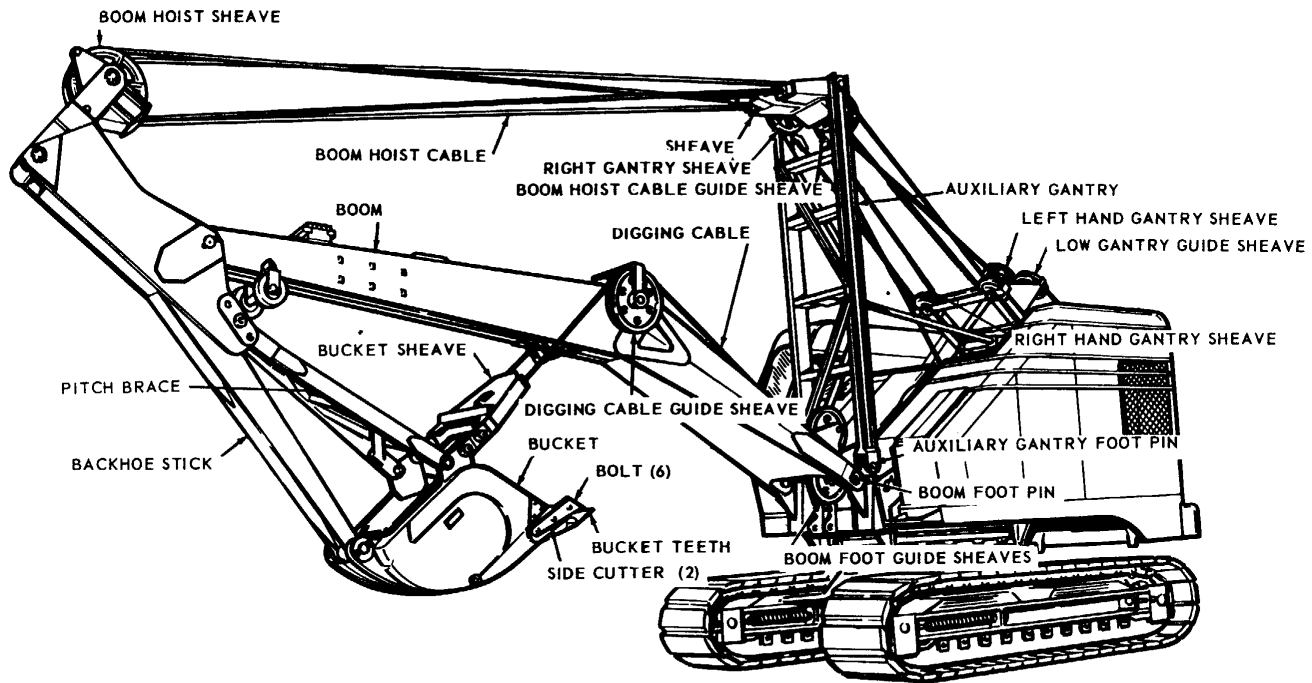

ME 3810-201-12/2-17

Figure 2-17. Backhoe front end attachment, installed view.


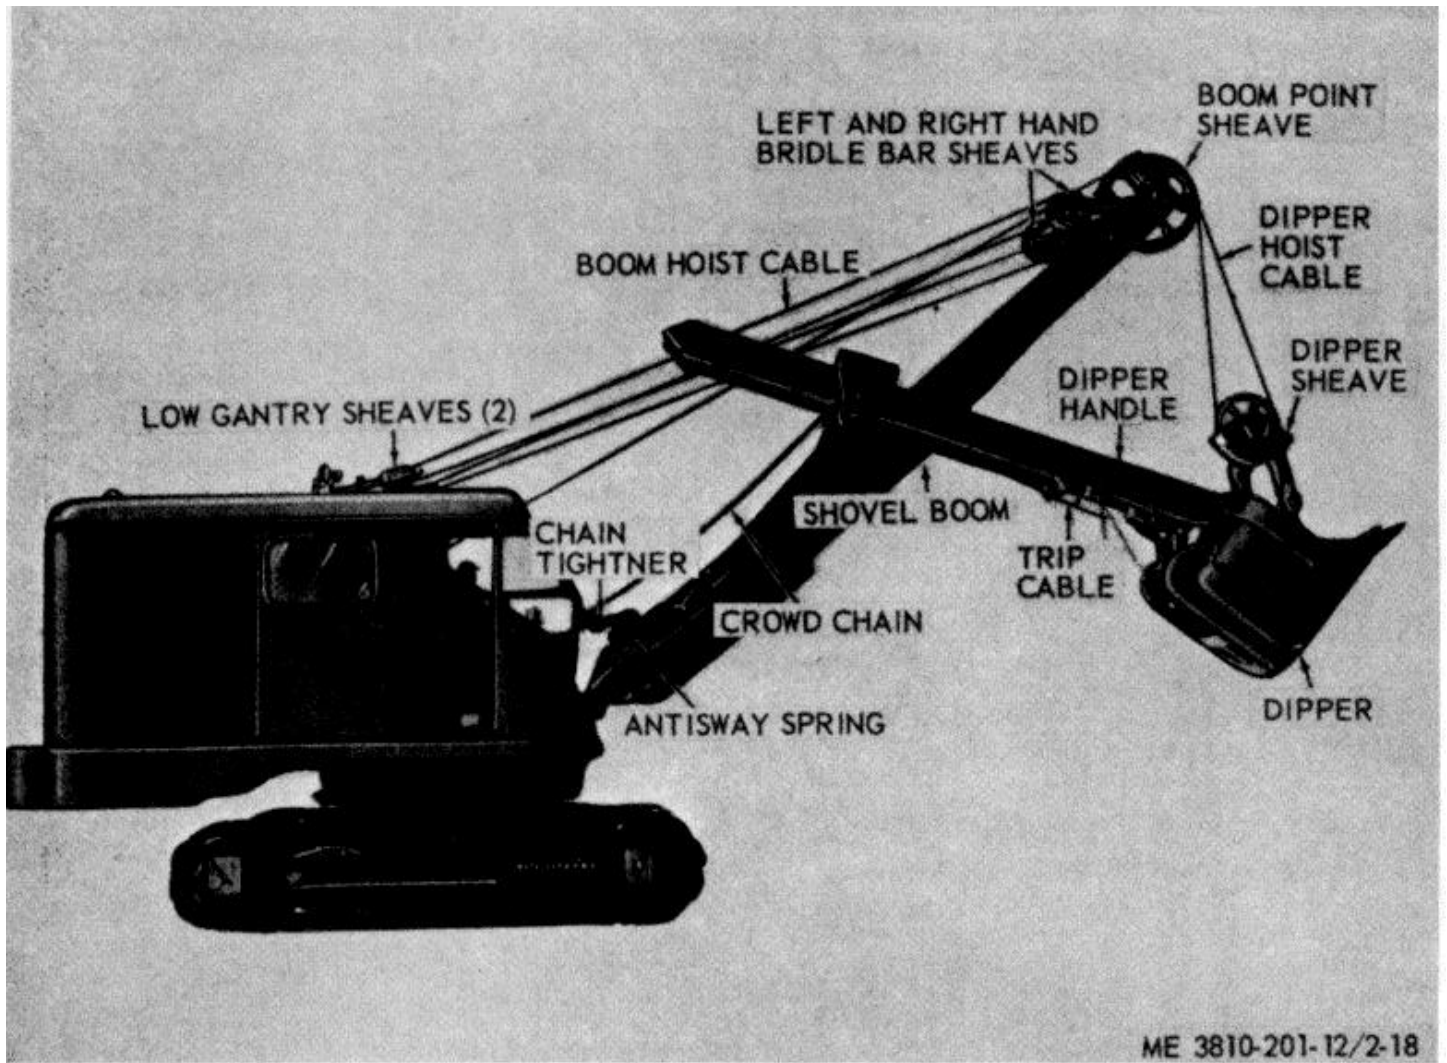


Figure 2-18. Shovel front end attachment, installed view.

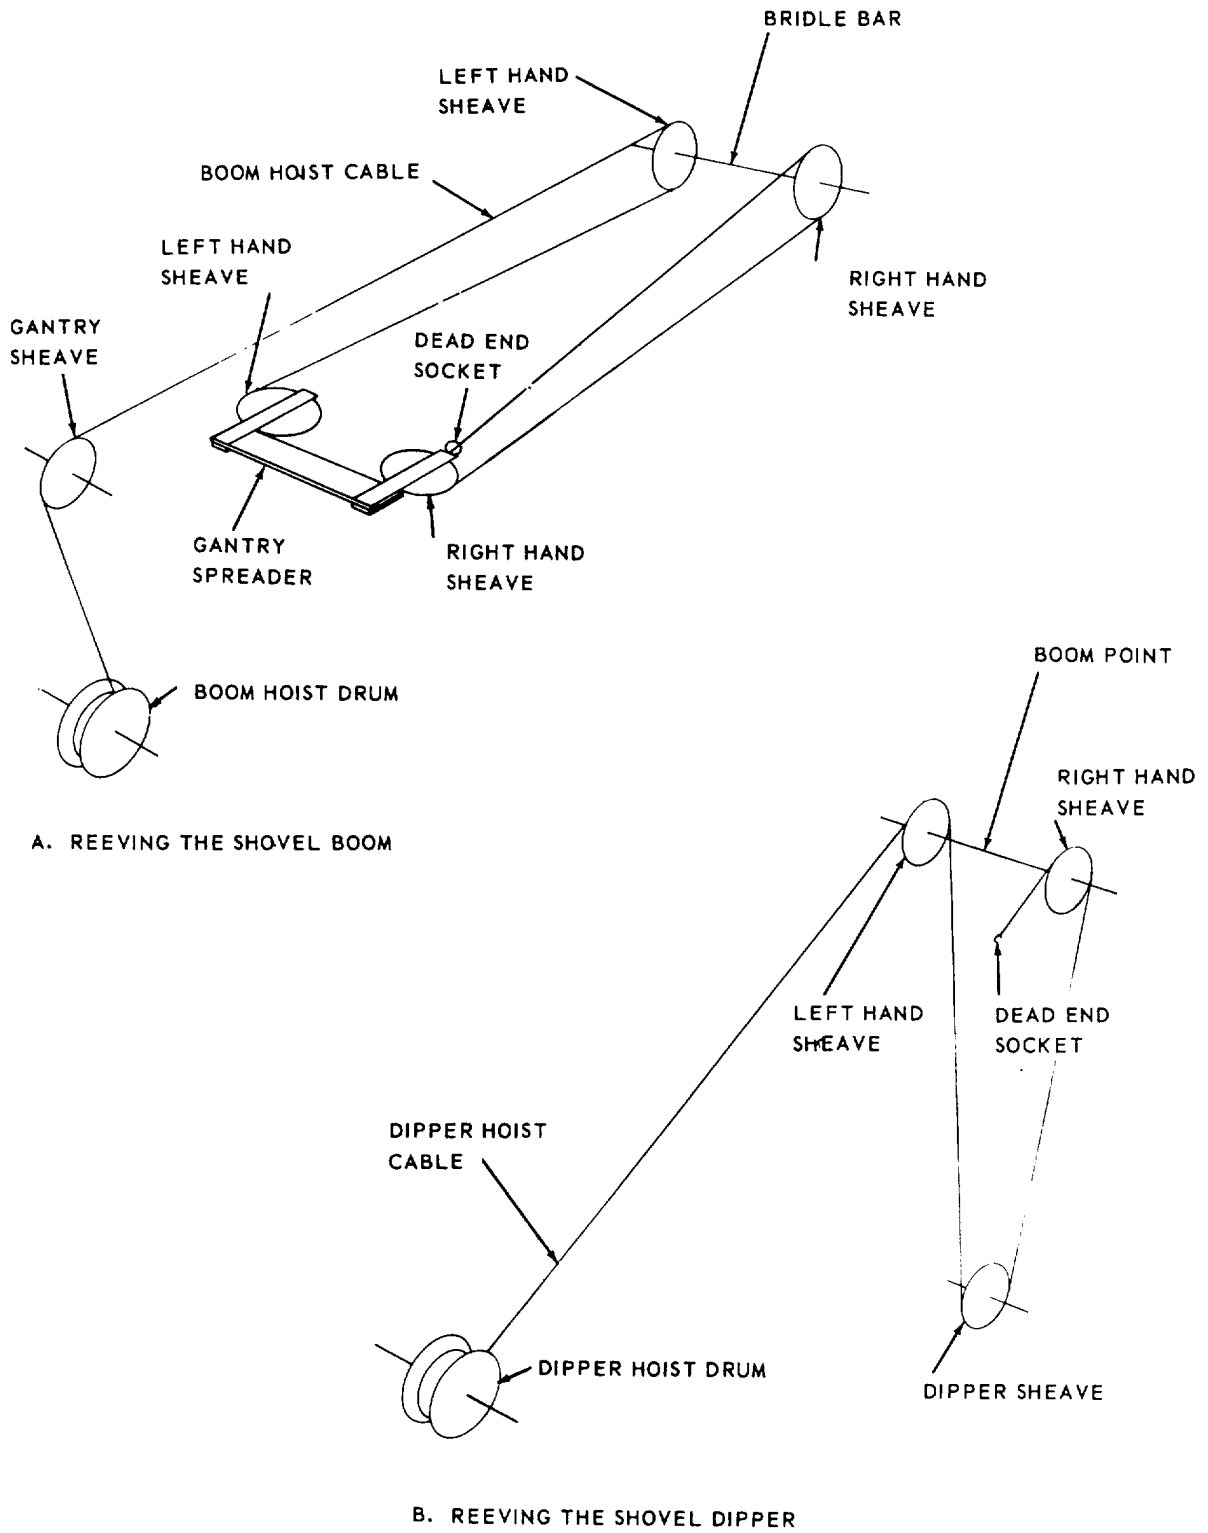

ME 3810-201-12/2-19

Figure 2-19. Shovel front end attachment reeving diagram.

Section II. MOVEMENT TO A NEW WORKSITE

2-5. Dismantling for Movement

a. General. When it is necessary to move the crane-shovel to another worksite, it may be driven under its own power, or it may be transported by rail. Method of movement will depend on destination and distance involved.

b. Movement for Short Distance. The crane-shovel is never dismantled for short distance movements. Proceed as follows:

(1) Perform preventive maintenance checks and services (para 3-6).

(2) Insure that all tools and equipment to be moved with crane-shovel are clean, serviceable, and properly stowed.

(3) Start engine (para 2-10) and drive crane-shovel to new worksite.

c. Dismantling for Long Distance Movement. Refer to the appropriate paragraph in Chapter 4 and remove the front end attachment now installed on crane-shovel.

d. Preparation for Loading.

(1) Position flatcar on siding with permanent ramp, preferable an earthen end ramp, or where an end ramp may be constructed (fig. 2-5).

(2) Block all wheels of flatcar, and clear deck of previous blocking, tie-downs, or other debris.

e. Loading by Drive-On.

(1) Perform preventive maintenance checks and services (para 3-6).

(2) Start engine (para 2-10); drive crane-shovel slowly and carefully up ramp onto flatcar, and position it as shown on figures 2-1 or 2-2.

f. Loading by Lifting.

(1) Position lifting device at flatcar, capable of lifting a minimum of 102,000 pounds.

(2) Place lifting slings over lifting device hook and attach to crane-shovel lifting eyes (fig. 2-4).

(3) Attach tagline to keep crane-shovel from twisting or turning during lifting process.

Warning: Keep all personnel not engaged in loading procedure back and away from working area to avoid injury, should slings break during lift.

Caution: Do not allow crane-shovel to turn or twist during lift. The added stress on lifting slings might cause them to break and drop crane-shovel, causing excessive damage to the equipment.

(4) Lift the crane-shovel (on signal) and swing it over flatcar then lower and position it as shown on figures 2-1 or 2-2.

g. Preparation for Storage and Shipment.

(1) Prepare crane-shovel for temporary storage as directed in TM 740-93-1.

(2) Remove anti-rotation bars from their stowed position (fig. 2-20), and install (fig. 2-21), to prevent cab and platform movement.

(3) Remove floodlights (para 3-181) and pack them in a box, protected by ample quantities of cushioning material.

(4) Install block, cribbing, hold-downs, and wedges as shown on figures 2-1 and 2-2. Refer to Section 1 (General Rules) and the applicable figure(s) in Section 4 of the Association of American Railroads Rules Governing the loading of commodities on open top cars for detailed instructions.

(5) Position accessory boxes on flatcar and secure as illustrated on figures 2-1 and 2-2. Refer to Section 1 (General Rules) and the applicable figure(s) in Section 4 of the Association of American Railroads Rules governing the loading of commodities on open top cars for detailed instructions.

(6) Load and secure front end attachments in the manner shown on figure 2-3. Refer to Section 1 (General Rules) and the applicable figure(s) in Section 4 of the Association of American Railroads Rules governing the loading of commodities on open top cars for detailed instructions.

2-6. Reinstallation After Movement

For reinstallation after movement instructions, refer to paragraph 2-3.

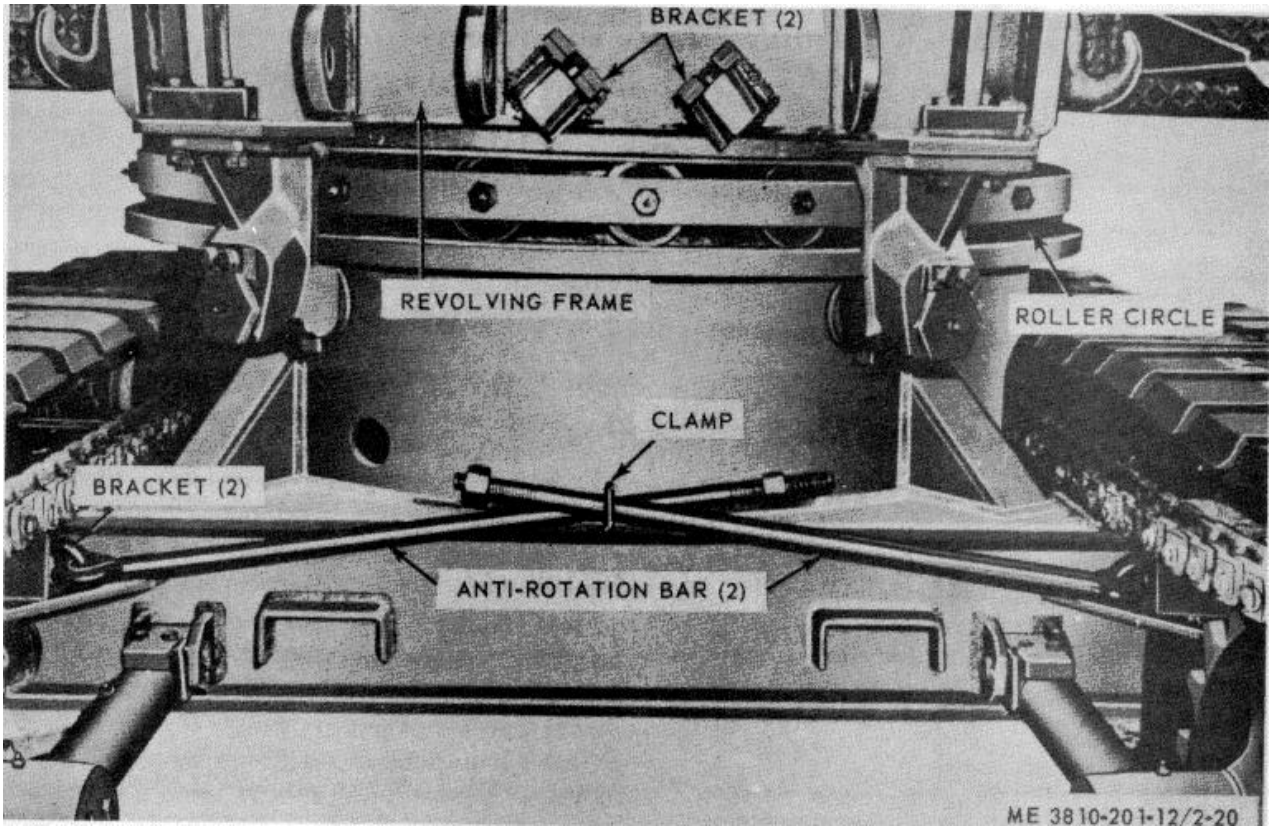


Figure 2-20. Anti-rotation bars, stowed.

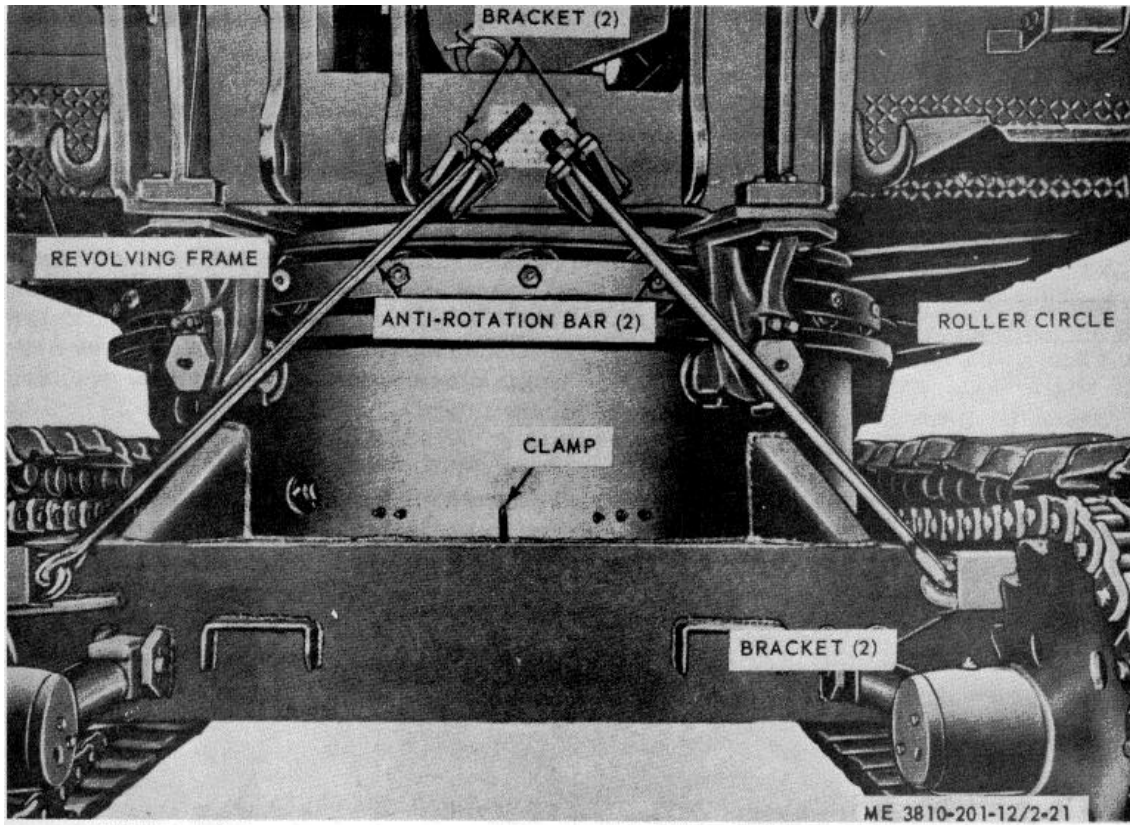


Figure 2-21. Anti-rotation bars, installed.

Section III. CONTROLS AND INSTRUMENTS

2-7. General

This section describes the various controls and instruments and provides operator/crew sufficient information to insure proper operation of the crane-shovel.

2-8. Controls and Instruments

a. *General.* The following instruments and controls are identified on illustrations indicated.

b. *Tachometer (Time Totalizing Meter).*

(1) The tachometer-hour meter is located at top of instrument panel (fig. 2-22) and indicates speed (in revolutions per minute) at which engine is operating.

(2) The hour meter portion of tachometer is calibrated to register engine hours at 1,411 rpm. Operation at other speeds subject to interpolation.

c. *Instrument Panel Lights.* Two panel lights (fig. 2-22) illuminate instrument panel on control stand. Two others illuminate lighting control box area.

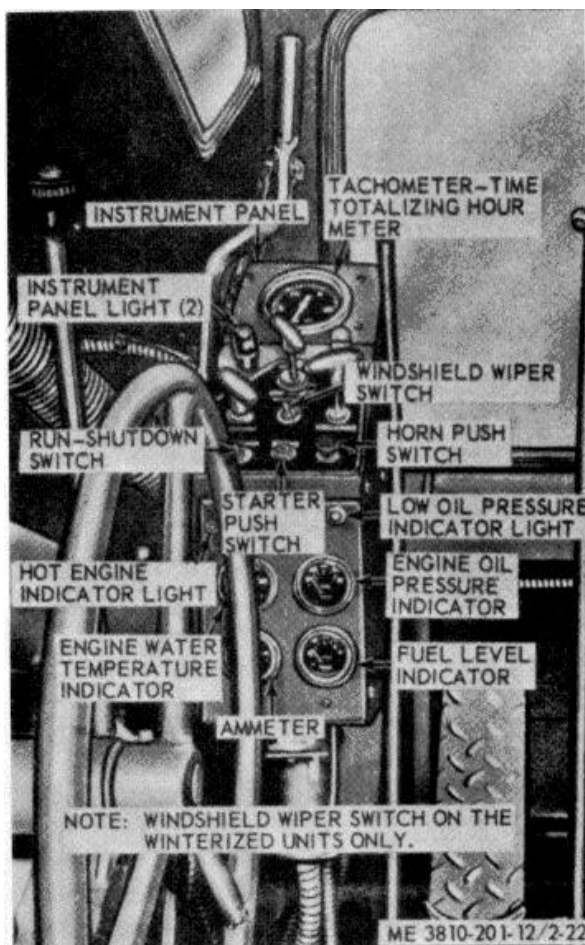


Figure 2-22. Instrument control stand.

d. *Boom Hoist Pawl Control Handle.* The boom hoist pawl control handle (fig. 2-23) enables operator to disengage pawl from boom hoist drum ratchet. Push down to engage, and turn one quarter turn clockwise to lock the control. To release pawl from the ratchet, raise boom slightly by pulling boom hoist lever toward operator, turn handle one quarter turn counterclockwise, then pull up on handle.

e. *Swing Brake Hydraulic Control Handle.* This handle (fig. 2-23) locks swing brake. To apply swing brake, push swing brake lever (fig. 2-24) forward, then push down on hydraulic control handle and turn it 1/4 turn clockwise to lock. To release swing brake, turn hydraulic control handle 1/4 turn counterclockwise then pull up.

f. *Propel Brake Hydraulic Control Handle.* This handle (fig. 2-23) locks propel brake. To apply, push hoist clutch and propel brake lever away from operator, then push down on hydraulic control handle and turn 1/4 turn clockwise to lock. To release propel brakes, turn the handle counterclockwise one quarter turn and pull up.

g. *Windshield Wiper Switch (Winterized Models Only).* This is a two position toggle switch (fig. 2-22). Move toggle up to turn wiper motor ON. When pulled down, wiper motor is OFF.

h. *Horn Push Switch.* When depressed, horn push switch (fig. 2-22) completes electrical circuit and horn sounds warning. When pressure is released, horn shuts off.

i. *Run-Shutdown Switch.* Moving this switch (fig. 2-22) to RUN energizes starter circuit; fuel shutoff solenoid in fuel pump cover; the low oil pressure/water high temperature warning light switch circuits, and governor overspeed micro-switch circuit. Before engine starts, low oil pressure warning light will be red. If this red light does not go out within 15 seconds after engine starts, move switch to SHUTDOWN and investigate. If either light becomes red during normal engine operation, stop engine (para 2-11), move switch to SHUTDOWN and investigate. If governor overspeed microswitch (normally closed) opens because engine speed reaches 1,935 rpm + 15 rpm, open circuit will deenergize solenoid in fuel pump cover and shut off fuel supply, stopping engine. Always move this switch to SHUTDOWN after engine has been stopped (para 2-11).

j. *Starter Push Switch.* After moving RUN-SHUTDOWN switch to RUN, depressing this switch (fig. 2-22) will cause starter solenoid to engage starter, and start engine.

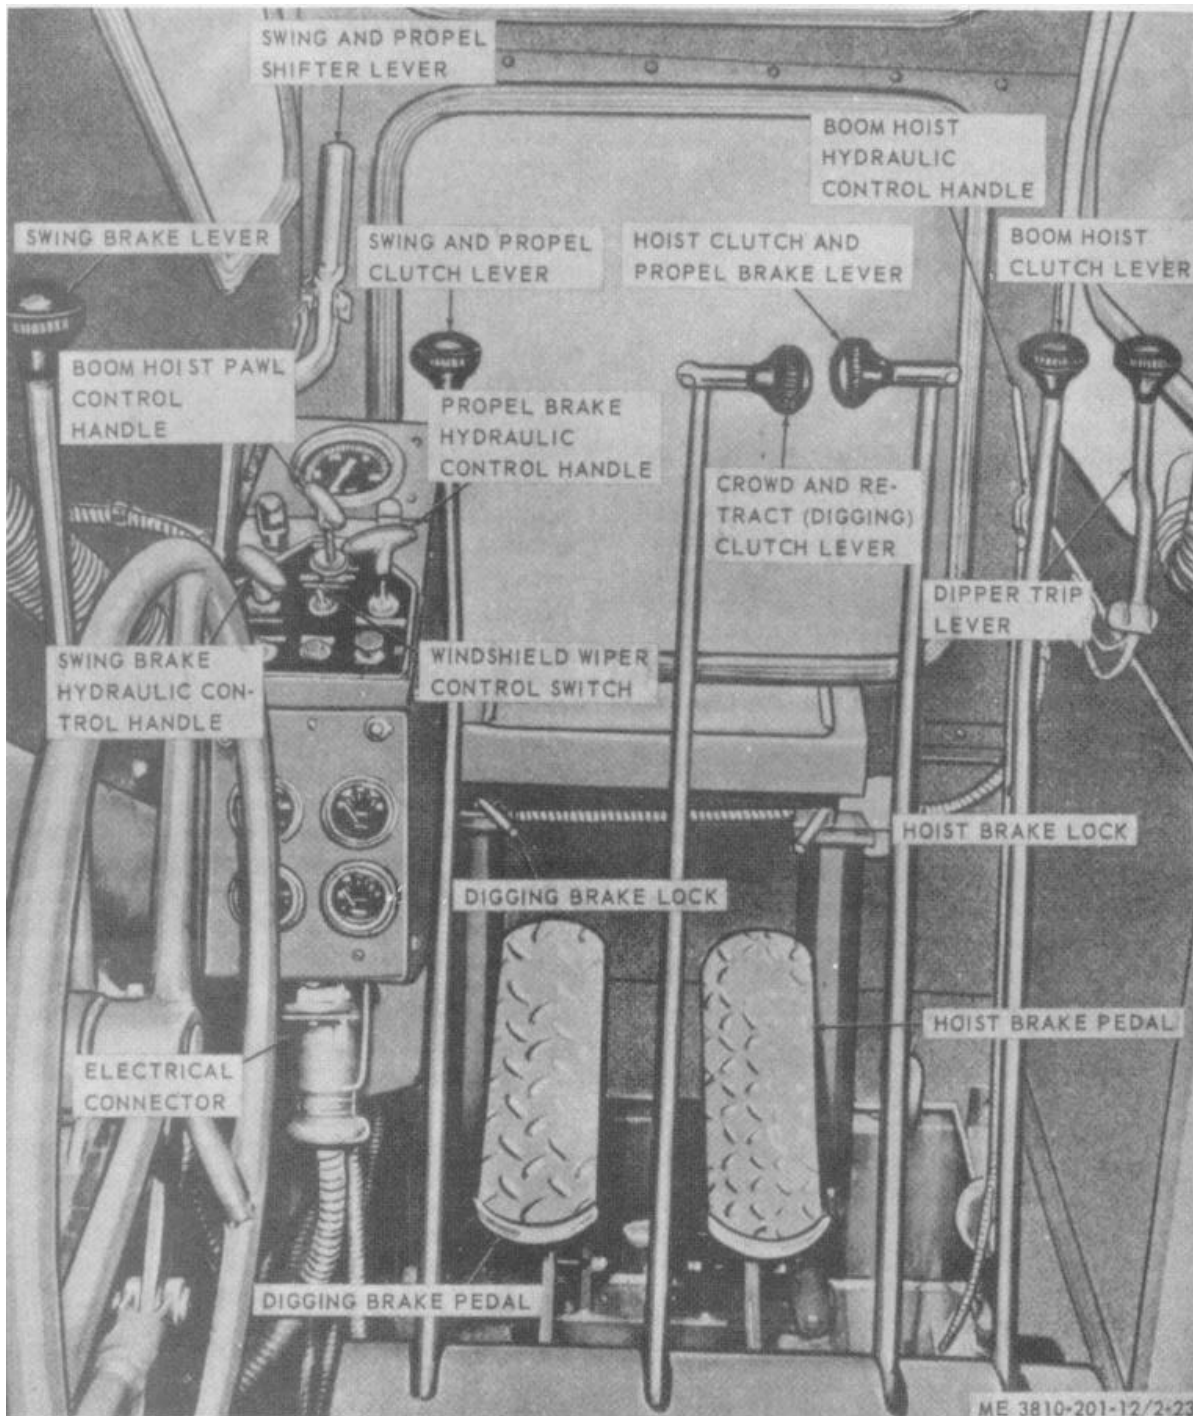


Figure 2-23. Crane operating control handles and levers.

k. Low Oil Pressure Indicator (Warning) Light.

This light (fig. 2-22) when ON, (red) warns operator that engine oil pressure is below safe operating level, and that he should stop engine (para 2-11) for an investigation of cause(s).

l. Hot Engine Indicator (Warning) Light.

This light (fig. 2-22) when ON, (red) warns operator that cooling system is defective, and that he should stop engine (para 2-11) for an investigation of cause(s).

m. Engine Oil Pressure Indicator. This indicator (fig. 2-22), when engine is operating, indicates pressure in lubrication system. The pressure indication at idle speed should be 15 psi or above. Normal operating pressure at governed speed is 35 psi.

n. Engine Water Temperature Indicator. This

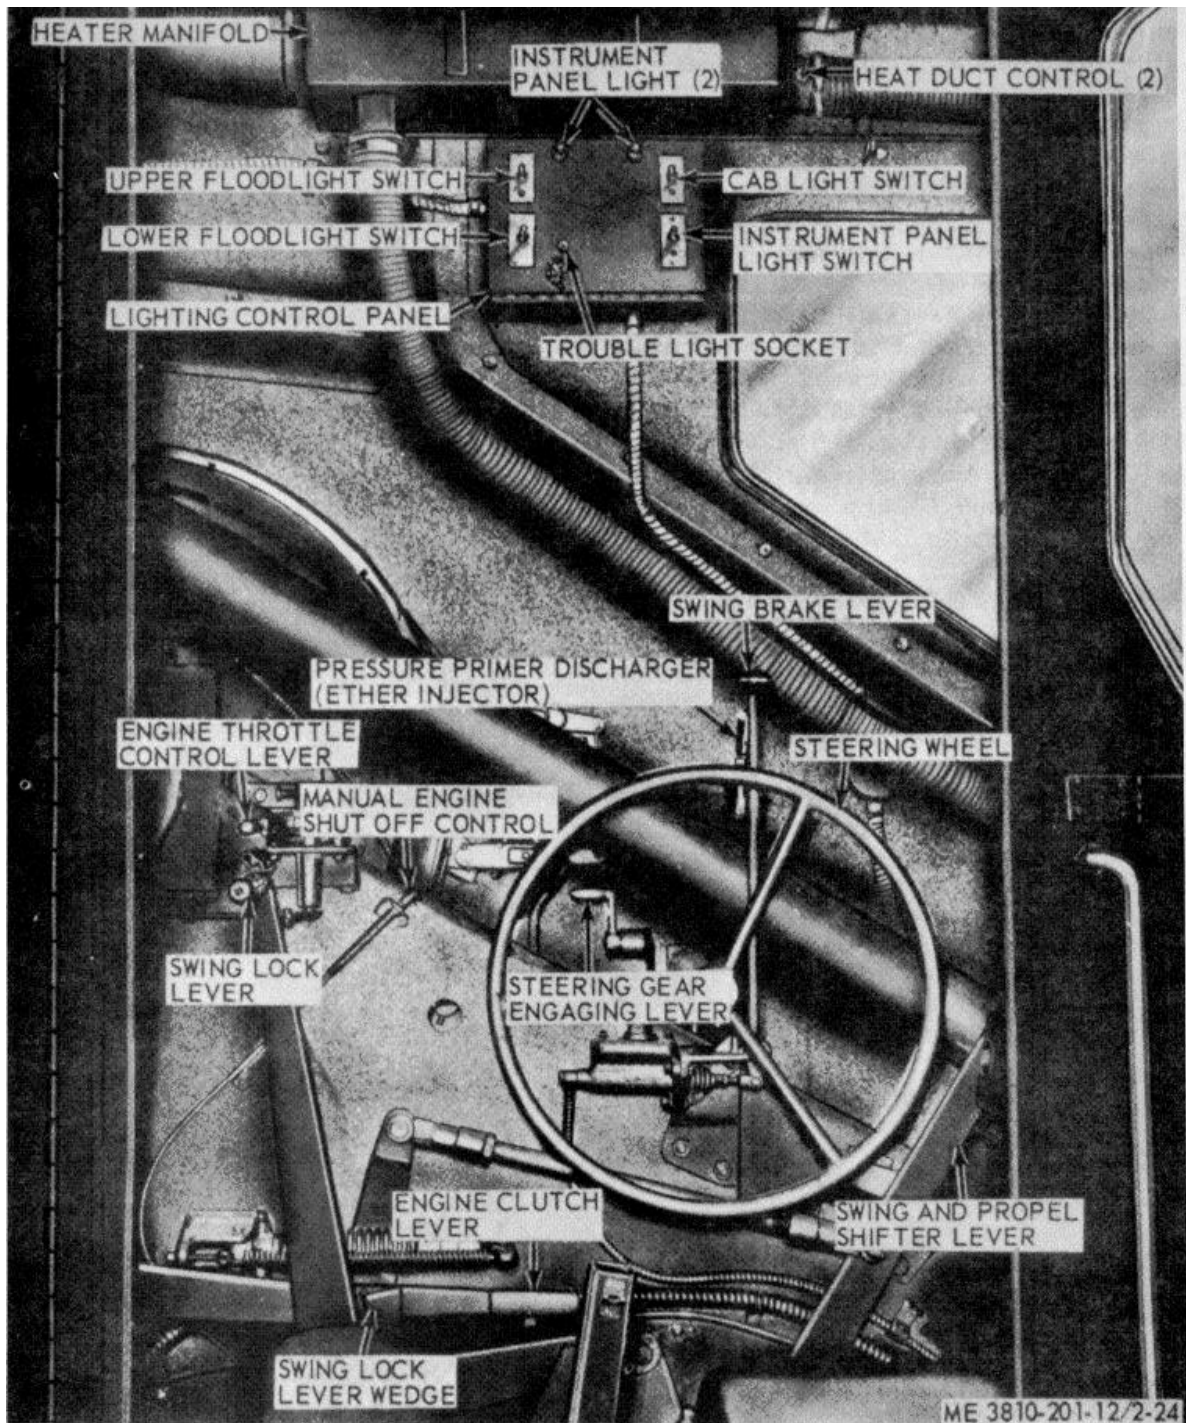


Figure 2-24. Crane, engine and lighting controls.

indicator (fig. 2-22), when engine is operating, indicates temperature of coolant. Normal operating temperature should range between 160° F and 180°F. If operating temperature is not reached in a reasonably short time, stop engine (para 2-11) and determine cause(s).

o. *Ammeter.* The ammeter (fig. 2-22), while engine is operating, gives reading of battery condition.

When pointer is at zero (dial center) battery is fully charged and generator (alternator) is supplying required current for operation. Rate of battery discharge (current use) is indicated by distance pointer is left of zero. Rate of charge (after starting) will be indicated by distance pointer is right of zero.

p. *Indicator Fuel Level.*

(1) *Model 855BG2 Winterized Models.* Located on operators instrument panel (fig. 2-22), it indicates quantity of fuel in tank.

(2) *Models 855BG2 and 855BG3 Non-Winterized.* Located on fuel tank (para 3-72), it indicates quantity of fuel in tank.


q. *Pressure Primer Discharge (Ether Injector) Winterized Model 855BG2 Only.* Located on left side pane behind steering wheel (fig. 2-24), the ether injector forces ether vapor into air intake manifold while trigger is held down, as an aid to starting in cold weather (para 2-25). Release pressure on trigger to stop ether vapor entry (after engine is running).

e. *Heat-Start Switch(On Models _With D333TA Engine).* This switch (fig. 2-25) is an aid to cold weather starting (para 2-25) for the model D333TA engine only, and will replace starter push switch (fig. 2-22) on operator's instrument panel as D333TA engines are installed. Refer to paragraph 2-25 for operating instructions.

s. *Swing Lock Lever Wedge.* This wedge (fig. 2-24) must be installed when swing lock is disengaged (ad below), to prevent swing lock from engaging while crane-shovel is in operation.

t. *Instrument Panel Light Switch.* This switch (fig. 2-24), mounted on lighting control box, is a two position toggle switch that controls all four instrument lights for ON-OFF function.

u. *Cab Light Switch.* Located on lighting control

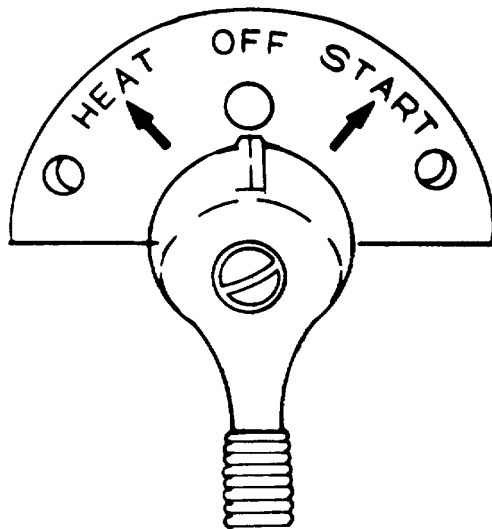

ME 3810-201-12/2-25

Figure 2-25. Heat-start switch.

box (fig. 2-24), this two position toggle switch turns interior cab lights ON and OFF.

v. *Upper Floodlight Switch.* Located on lighting control box (fig. 2-24) this two position toggle switch turns the dual floodlights ON and OFF. Floodlights are mounted on top front of cab, and act as headlights when crane is traveling.

w. *Lower Floodlight Switch.* Located on lighting control box (fig. 2-24) this two position toggle switch turns single floodlights, mounted on either side of boom foot, ON and OFF.

x. *Coolant Control Valve (Winterized Units Only).* This valve (view A, fig. 2-26) located on left side of engine, controls flow of coolant from engine heater to engine oil pan.

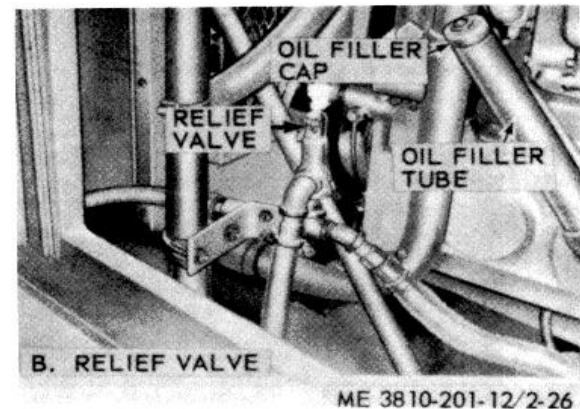
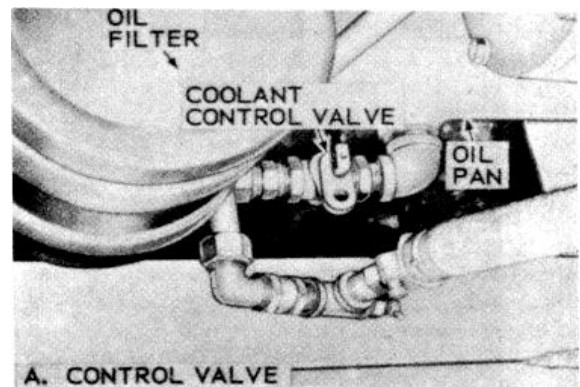


Figure 2-26. Coolant control and relief valve, "Y winterized unit.

y. *Relief Valve (Winterized Units Only).* This valve (view B, fig. 2-26) located in coolant line between engine heater and the engine, is a blowoff type relief valve that relieves all steam or air locks.

z. *Dipper Trip Lever.* This push-pull type lever (fig. 2-23) mounted on right side of operator's compartment,

controls opening of dipper door when operating with shovel front end attachment. Pull this lever toward operator to open dipper door. Release lever the instant dipper door opens.

aa. Engine Throttle Control Lever. Located on left compartment panel at rear of operator's seat (fig. 2-24) is used to set engine speed. Move forward to increase speed, back to idle.

ab. Manual Engine Shut Off Control. Located below throttle control lever (fig. 2-24) this control shuts off fuel flow to injector pump. Pull to stop engine (para 2-11), then after engine stops, push in.

ac. Steering Gear Engaging Lever. Located behind steering wheel (fig. 2-24), this lever should always be up as illustrated, except when steering wheel is to be used. Moving lever downward engages steering wheel with steering gear.

ad. Swing Lock Lever. This lever (fig. 2-24) is a "trigger lever" type control for locking machine so it will not swing during transportation, or prolonged storage. Lever is illustrated in the unlocked position. To lock, remove wedge; grasp trigger lever and squeeze together while moving lever forward. (It may require swinging machinery deck a little left or right before the lock will engage ring gear). Let wedge hang on its chain.

Note. Anti-rotation bars (para 2-5g) must also be installed for transportation and storage.

ae. Swing Brake Lever. Located between steering wheel and pressure primer discharger (fig. 2-24), push this lever forward to apply hydraulic pressure to swing brake. To lock the swing brake, push lever forward and set brake, then push swing brake hydraulic control handle in and turn one quarter turn clockwise.

af. Swing and Propel Shifter Lever. This lever, located at left of steering wheel (fig. 2-24) and along side instrument control stand, shifts motive power to propel or swing. Move shifter lever fully forward to travel machine, fully to the rear to swing it.

ag. Hoist Brake Lock. Turning this lever to the left (fig. 2-23) (after applying hoist brake) will lock hoist brake in applied position. Move right to release.

ah. Digging Brake Lock. Moving this lever to right (fig. 2-23) after applying digging brake, will lock digging brake in the applied position.

ai. Digging Brake Pedal. This pedal (fig. 2-23) located on floor in front of lever stand, near instrument control stand, applies brake to left hand or digging drum.

aj. Hoist Brake Pedal. Located on floor in front of lever stand to right of digging brake pedal (fig. 2-23), this pedal applies brake to right hand or hoist drum.

ak. Swing and Propel Clutch Lever. This lever (fig. 2-23) when used in conjunction with swing and propel shifter lever (af. above) will swing or propel the machine. With swing shifter lever pulled back in swing position, pull swing clutch lever toward operator to swing right, push toward front to swing left. With propel shifter lever moved forward in propel position, push, propel clutch lever forward to travel forward, or pull toward operator for reverse.

Caution: When traveling over 100 feet, or longer distances, the crawler idler sprockets must be at front of crane-shovel, and must point in direction of forward travel.

al. Crowd (Digging) and Retract Clutch Lever. This lever (fig. 2-23) is a push-pull type lever which rotates left hand (digging) crowd drum. Pull toward operator to wrap cable on the drum. Push away from operator to run cable off drum (when planetary pinions are installed). With shovel front end attachment and sprocket installed, pull lever toward operator to crowd shovel into bank, push lever away from operator to retract dipper from bank after it is loaded.

am. Hoist Clutch and Propel Brake Lever. This lever (fig. 2-23) when pulled toward operator engages clutch on hoist drum and wraps cable on drum. When this lever is pushed away from operator, it applies the propel brake. To lock propel brake in applied position, push down on propel brake hydraulic control handle (e above) and turn clockwise.

an. Boom Hoist Clutch Lever. This lever (fig. 2-23) located at extreme right of lever stand, when pulled toward operator, will wrap cable on boom hoist drum and raise boom (or auxiliary gantry, when used with backhoe). Push this lever away from operator to release boom hoist brake and allow boom to lower by gravity. Return lever to neutral position to set boom hoist brake and hold boom in new position.

ao. Boom Hoist Hydraulic Control Handle. This handle (fig. 2-23) must be squeezed toward boom hoist clutch lever to close the pressure retaining valve connected to boom hoist hydraulic line and lock hoist. Clutch lever can then be pumped (moved to and from operator more than once), to engage boom hoist clutch more firmly on the drum.

ap. Boom Angle (radius) Indicator. This indicator (fig. 2-27), pendulum type, is mounted on right hand foot of crane boom, and is used in conjunction with capacity plate mounted on right cab panel directly behind cab door, to determine crane safety capacity at any given boom length, or angle.

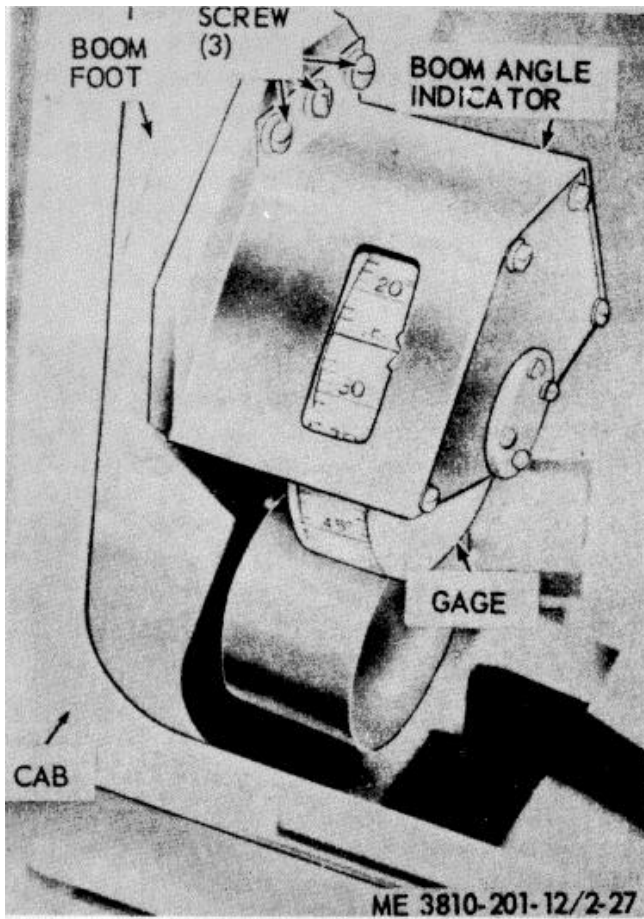


Figure 2-27. Boom angle (radius) indicator, installed view.

aq. Engine Clutch Lever. This lever (fig. 2-23), located at lower left rear of operator's seat between swing lock lever and cab left side panel, is a pull-up, push-down type lever, that engages or disengages engine from machinery. Pull up to engage. Push down to disengage.

Note. There is an auxiliary clutch lever mounted on power take-off housing that operator may use in the event this engine clutch lever does not function properly.

ar. Primer Pump. This pump (fig. 2-28) on engine model 687C-18-ES (view A), D333TA (view B) is used as starting aid in temperatures below + 40° F, or after a prolonged idle period. Releasing plunger and pumping in and out a few strokes, fills fuel filter and lines, so that fuel transfer pumps will be able to instantly send fuel to injectors.

as. Heater Controls (Winterized Units Only).

The heater control box (fig. 2-29) contains control for the three heaters on winterized models.

Operation of heaters is described in paragraph 2-26.

at. Heat Duct Controls (Winterized Units Only). These controls (fig. 2-24) located on manifold, are used for changing flow of heated air through ducts.

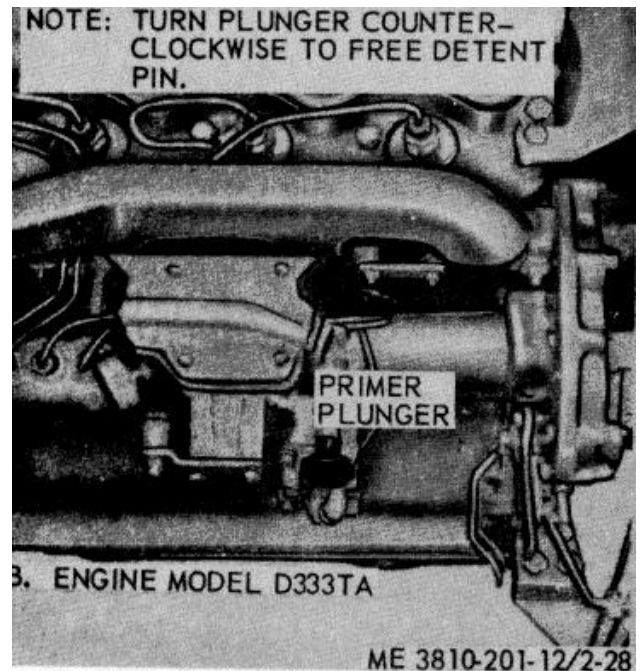
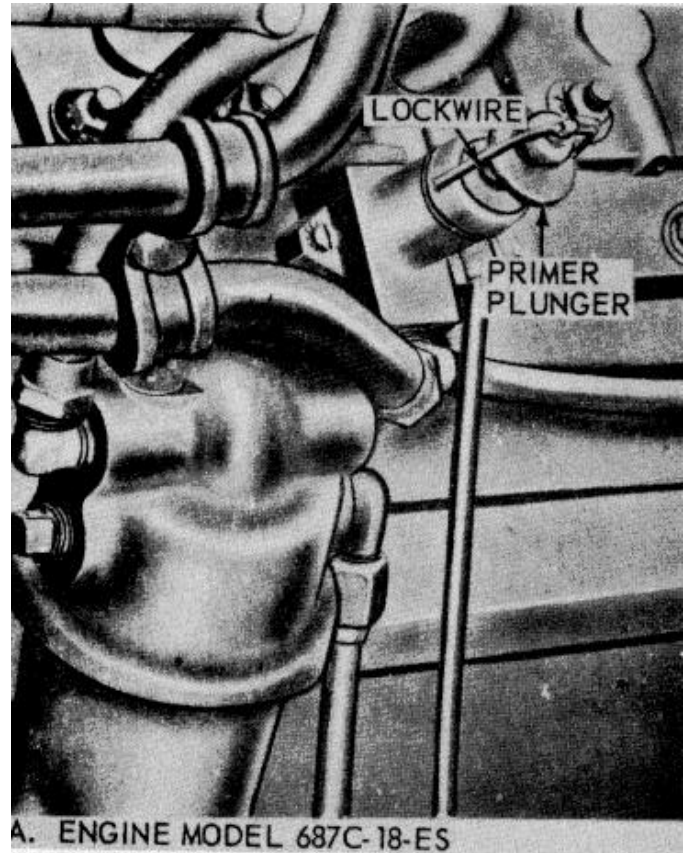


Figure 2-28. Primer pump.

au. Radiator Shutter Control (Winterfront) (Winterized Units Only). This control (fig. 2-30) is a lever that opens or closes shutters in front of radiator, located on left side of cab.

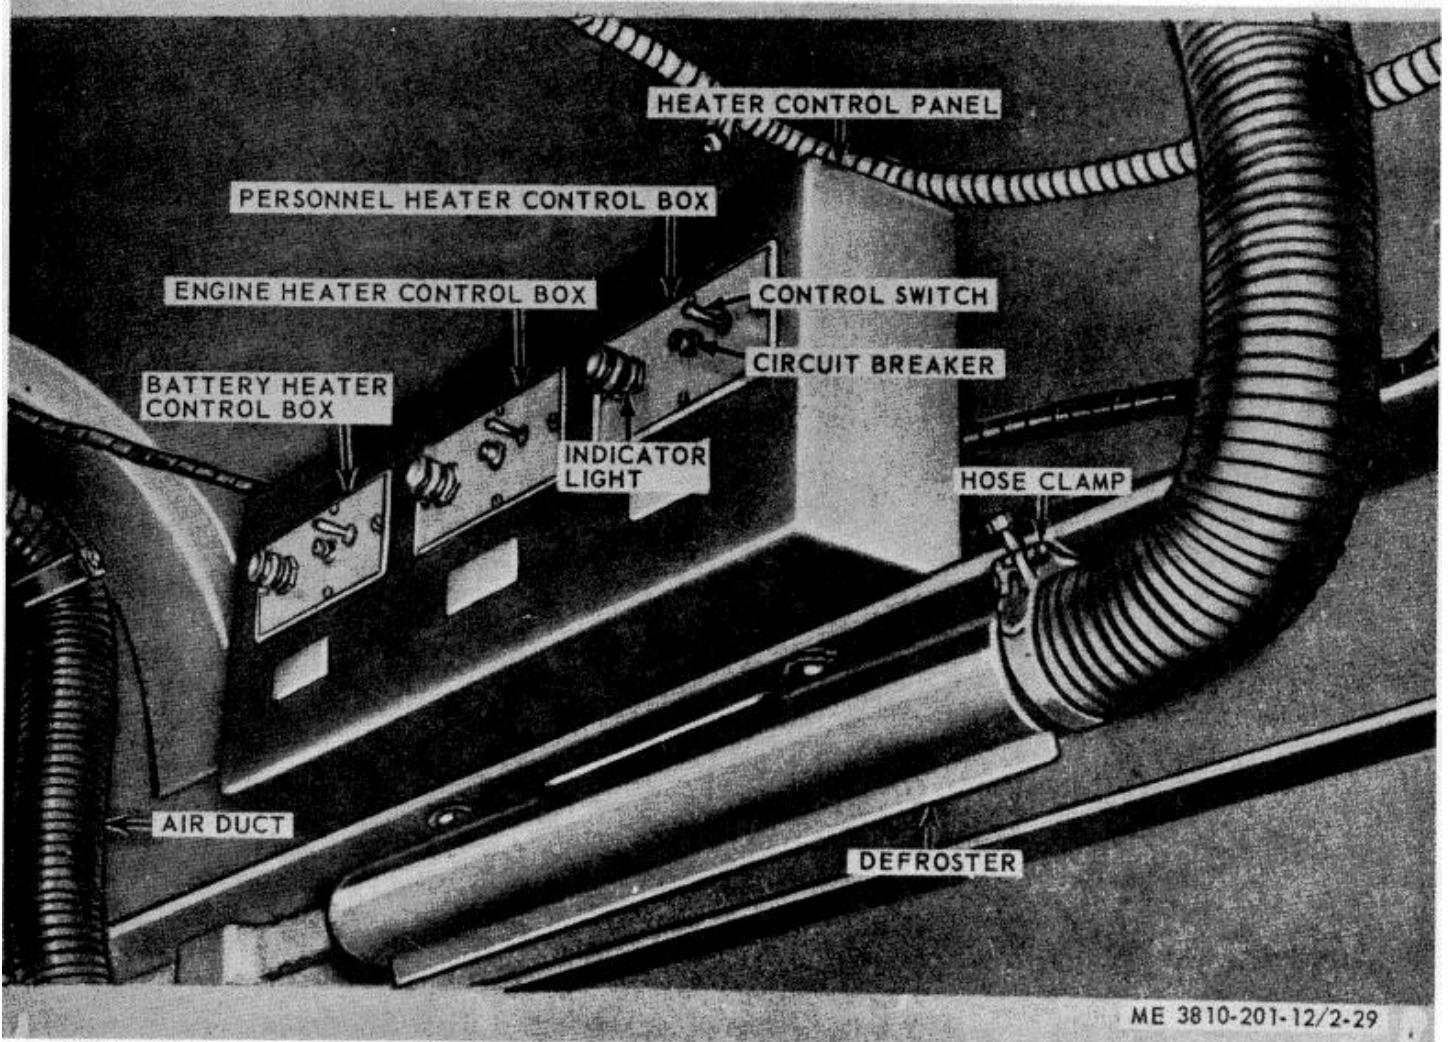


Figure 2-29. Heater control box.

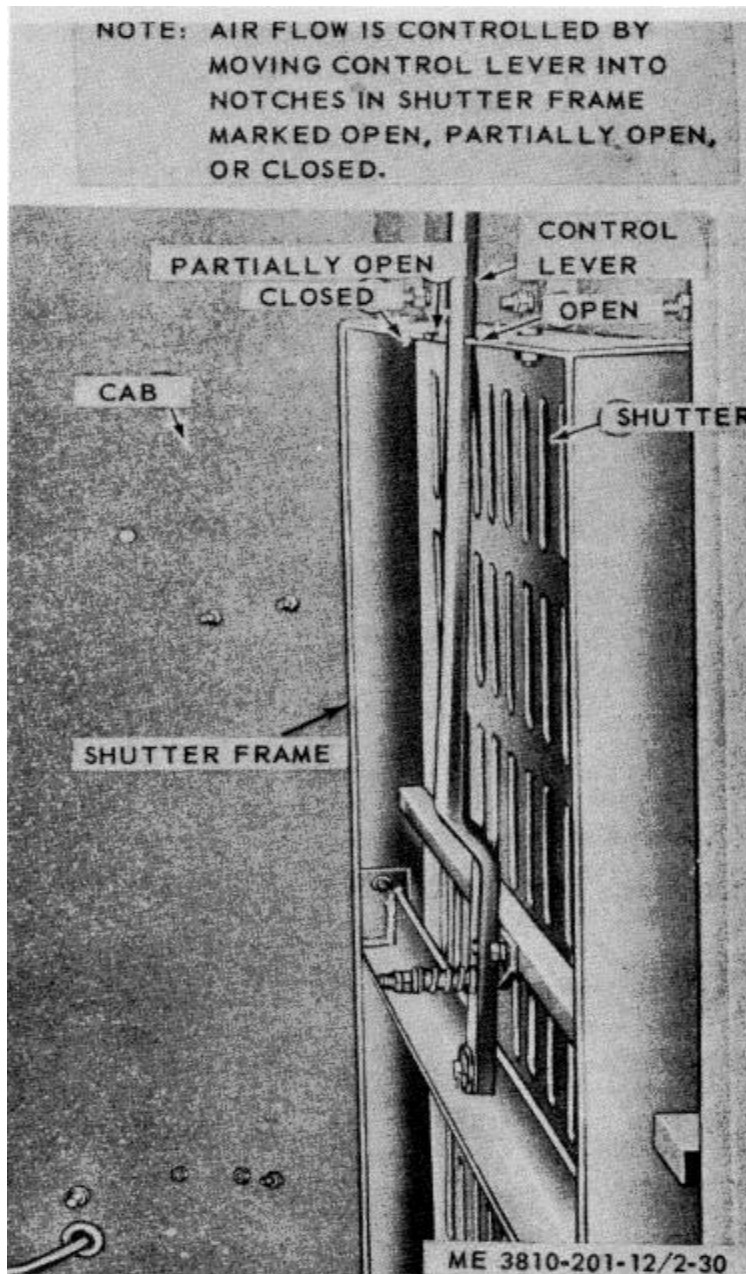


Figure 2-30. Radiator winterfront shutter control.

Section IV. OPERATION UNDER USUAL CONDITIONS

2-9. General

a. The instructions in this section are published for the information and guidance of personnel responsible for operation of the crane-shovel.

b. The operator must know how to perform every operation of which the crane-shovel is capable. This section gives instructions on starting and stopping the crane-shovel, operation of the crane-shovel, and on coordinating the basic motions to perform the specific tasks for which the equipment is designed. Since nearly every job presents a different problem, the operator may have to vary given procedures to fit the individual job.

2-10. Starting the Engine

a. Preparation for Starting.

(1) Perform required preventive maintenance checks and services (para 3-6).

(2) Insure that all brakes are set (para 2-8) and that engine clutch lever (fig. 2-24 and para 2-8) is disengaged.

(3) Position engine throttle control lever at half throttle, and move run-shutdown switch (fig. 2-22) from shutdown to ON.

(4) If engine has not been run for several days, prime fuel system with primer pump (fig. 2-28).

b. *Starting.*

(1) *Model 687C-18-ES.*

(a) Depress start push switch (fig. 2-22) for 15 seconds or until engine starts, then release switch.

(b) If engine does not start within 15 seconds, let starter rest while fuel system is re-primed, then repeat step (a) above.

Caution: When engine fails to start on third try, let starter rest for several minutes, then repeat step (a).

(c) After engine starts, insure that there is sufficient oil pressure to turn off low oil pressure warning light (fig. 2-22). If light does not go out within 15 seconds, stop engine (para 2-11) and determine cause(s). Report deficiencies to organizational maintenance personnel.

(2) *Model D333TA.*

(a) When starting at an ambient temperature below + 600 F, turn heat-start switch (para 2-8) to heat for time listed in table 2-1 after ambient temperature, then move switch to START for 10 seconds, or until engine starts. As soon as engine starts, move switch to HEAT position until engine is running smoothly.

(b) If engine does not start after 10 seconds of cranking, repeat step (a) above.

(c) When engine fails to start on second try, let starter rest for at least three minutes, then repeat step (a) above.

Table 2-1. *Use of Cold Weather Starting Aids.*

Ambient temperature	Glow plug heat time	Use ether injection as indicated below
Above +60 F	None	No
Between +60 F and +32 F	One minute	No
Between +32 F and +20 F	Two minutes	Yes
*Between +20 F and 0 F	Two minutes	Yes
*Below 0 F	Two minutes	Yes

*Non-winterized units will require preheating of crankcase oil and coolant at these temperatures.

(d) After engine starts, turn HEATSTART switch to HEAT until engine runs smoothly; insure that there is enough oil pressure to turn off low oil pressure warning light (fig. 2-22). If light does not go out within 15 seconds, stop engine (para 2-11) and determine causes(s). Report deficiencies to organizational maintenance personnel.

Caution: Do not turn HEAT-START switch to HEAT while the engine is warm and running.

c. *Cold Weather Starting.* Starting the diesel engine at ambient temperatures of +40° F or lower

requires use of an ether starting aid; and on winterized models, heaters are used to warm engine coolant, oil, and batteries. For operating instructions on use of cold weather starting aids, refer to paragraph 2-25.

2-11. Stopping the Engine

a. *Preparation for Stopping.*

(1) Lower load until it rests on ground.

(2) Apply swing and propel brakes and lock with hydraulic control levers (para 2-8).

(3) Disengage engine clutch lever (fig. 2-24).

(4) Move engine throttle control lever to closed position (fig. 2-24) and allow engine to idle for 5 to 10 minutes.

b. *Stopping the Engine.*

(1) Pull the manual engine shutoff control (fig. 2-24) out and stop engine. When engine is stopped, push shutoff control in.

(2) Move RUN-SHUTDOWN switch (fig. 2-22) to SHUTDOWN.

(3) Turn all light switches OFF (fig. 2-24).

(4) Perform preventive maintenance checks and services (para 3-6).

Warning: Be sure that dipper; bucket; clamshell; hammer, or crane load is lowered to ground when halting operations, or leaving the crane-shovel. After brake drums cool, brakes may slip and allow load to fall. Injury or death, and damage to equipment, could occur should this warning be ignored.

2-12. Operation of Equipment

a. *General.* This paragraph will describe all modes of operation, assuming that operator has inspected and serviced the machinery; the cranes shovel is at an operational site; the engine has been started (para 2-10); clutch has been engaged; unit has reached proper operating temperature, and the crane-shovel is ready to begin the assigned task(s).

b. *Swinging.*

Caution: If work requires repeated short swings, make one complete (360°) swing to right every hour, to prevent excessive wear on rollers of turntable roller circle.

(1) Raise load from its resting place by pulling hoist clutch and propel brake lever (fig. 2-23) toward operator, and at same time release hoist brake pedal. When load is at proper height, return hoist lever to neutral and apply hoist brake pedal to hold load in position.

(2) Remove swing lock lever wedge (fig. 2-24), pull swing lock lever back to disengaged position, then install wedge behind lever to prevent accidental movement of swing lock lever.

(3) Move swing and propel shifter lever (fig. 2-23) back toward operator until it engages upper notch on quadrant to engage swing gear.

(4) Release swing brake by turning swing brake hydraulic control handle (fig. 2-23) one quarter turn counterclockwise, then pulling handle up.

(5) To swing right, pull swing and propel clutch lever (fig. 2-23) toward operator. To swing left, push lever away from operator.

Note. When using a long boom, or when load is suspended from a long cable, operate engine at lowest practical throttle setting to prevent load from swinging wide of boom point when stopping.

(6) To stop swinging, in either direction, return swing and propel clutch lever to neutral.

To stop load from passing desired point, apply swing and propel clutch lever in the opposite direction.

Note. If accurate stopping of load is necessary, or if revolving frame has a tendency to drift, apply swing brake lever (fig. 2-23) and lock with swing brake hydraulic control handle. This will hold revolving frame in a fixed position while the load is lowered.

(7) Lower load by releasing hoist brake pedal. The rate of load descent can be regulated by varying pressure applied to hoist brake pedal.

When load is at rest, release pressure on hoist brake pedal.

(8) Repeat steps (1) through (7) as necessary.

c. Boom Raising or Lowering. With boom in a horizontal position, assure that boom hoist cable is properly reeved, then proceed to raise as follows:

(1) To raise boom, pull back on boom hoist clutch lever (fig. 2-23) to engage boom hoist clutch. (Squeeze the boom hoist hydraulic control handle against boom hoist clutch lever, and pump lever for a second short stroke to engage the clutch more firmly on boom hoist drum).

(2) Pull boom hoist pawl control handle out to remove pawl from engagement with gear on boom hoist drum.

(3) Pull boom hoist clutch lever toward operator and raise boom. As boom approaches proper position, slow down by moving clutch lever toward neutral, and as boom angle indicator (para 2-8) shows proper angle, move clutch to neutral, stopping the boom.

(4) To lock and maintain booms stationary position, push boom hoist pawl control handle down and engage pawl in teeth of gear on boom hoist drum.

(5) In preparation for lowering boom, pull boom hoist clutch lever back toward operator just enough to take drum pressure off pawl; pull boom hoist

pawl control handle out to disengage pawl, then move hoist clutch lever back to neutral.

(6) Lower boom by moving boom hoist clutch lever away from operator. Boom will fall by gravity. Operator will control rate of boom descent by moving clutch lever back toward neutral. Leave clutch lever in neutral when boom is in desired position.

Caution: When lowering boom to a horizontal position, never lower it below plane of cranshovel. When the ground level in front of cranshovel is lower than crawler tread, build up cribbing under boom point to keep it horizontal. Booms have collapsed under lifting stress applied at this critical angle.

d. Traveling. For traveling the crane-shovel more than 100 feet, revolving frame must be positioned with boom foot over crawler so that idler sprockets lead in forward travel. Swing revolving frame (b above) into proper position when necessary, then travel as follows:

(1) Remove wedge from in front of swing lock lever (fig. 2-24), grasp trigger-lever and squeeze together while moving swing lock lever forward. (It may require swinging the revolving frame a little left or right before lock will engage ring gear.)

(2) Move the swing and propel shifter lever (fig. 2-23) forward to engage forward notch on quadrant.

(3) To travel forward, push the swing and propel clutch lever (fig. 2-23) away from operator. For information on how to steer, refer to e below.

(4) When travel in completed, move swing, and propel shifter lever (fig. 2-23) back to engage rear notch on quadrant.

(5) If further operation is to be performed, grasp trigger-lever and squeeze together while moving swing lock lever backward, then install swing lock lever wedge in front of lever.

e. Steering.

(1) Engage steering wheel with steering gear by turning steering gear engaging lever (fig. 2-24) to the down position.

(2) There are four different positions (or combinations) of the propel clutches and brakes possible by turning steering wheel as follows:

(a) Position number one. Turn steering wheel counterclockwise as far as it will go. This will mechanically set both propel brakes and disengage both of the jaw clutches. This position is used when digging, or when machine is parked for a prolonged period.

(b) Position number two. Starting with wheel in position number one, turn wheel about one and one half turns clockwise. This will set the left hand brake

and engage the right hand jaw clutch. The crane-shovel will turn to the left when the swing/propel lever is pushed away from the operator.

(c) *Position number three.* Starting with wheel in position number one, turn wheel two turns clockwise. This will release both propel brakes, and engage both jaw clutches. The crane-shovel will travel straight ahead when the swing/propel lever is pushed away from operator.

(d) *Position number four.* Turn steering wheel clockwise as far as it will go. This will set the right hand brake and engage the left hand jaw clutch. The crane-shovel will turn to the right when the swing/propel lever is pushed away from operator.

Note. All travel directions are given with the

front of the crawler (idler sprocket toward front) under the front end of the upper revolving machinery.

(3) When travel is completed, and cranes shovel is in position for next task, disengage steering wheel by lifting engaging lever (fig.2-24) up.

f. *Operation of Front End Components.* Operation of the various front end components are properly described in the section devoted to auxiliary materiel used in conjunction with the cranes shovel as listed below.

- (1) Crane operation (para 2-28).
- (2) Clamshell operation (para 2-29).
- (3) Dragline operation (para 2-30).
- (4) Shovel operation (para 2-31).
- (5) Backhoe operation (para 2-32).
- (6) Piledriver operation (para 2-33).
- (7) Jib boom operation (para 2-34).

Section V. OPERATION UNDER UNUSUAL CONDITIONS

2-13. General

This section contains instructions for operating the crane-shovel under special conditions that are unusual, and not all of which are encountered in any one operating area.

2-14. Operation in Extreme Cold

a. *General.* As temperatures drop below freezing, metal and rubber parts become progressively more brittle, and a relatively minor shock or jar can cause serious damage. Generally, crane-shovels assigned work in extremely cold areas are winterized to take care of these problems, but when conditions are encountered always remember to warm machine up slowly and carefully, and start all operations in low speed. Avoid jerky handling and sharp impacts.

Warning: Do not touch metal parts with bare hands during extreme cold, or serious and painful injury may occur.

b. *Lubrication.*

(1) When temperatures are below 0° F and unit is not winterized, keep crane-shovel in a heated enclosure while not in use. If this is impossible, drain engine oil immediately after halting operations for the day and store oil in a warm place. If there is no warm place available for storage of oil, preheat oil to approximately 1800 F before returning it to crankcase.

Caution: Be sure a tag is placed conspicuously in operator's compartment warning personnel that crankcase is empty.

(2) Refer to current lubrication order LO 5-3810-201-12 and use proper lubricants as described in key for the temperature expected.

(3) Winterized models are protected by heaters, and operating instructions are furnished in paragraph 2-26.

c. *Cooling System.*

(1) The cooling system must be inspected and serviced with anti-freeze as directed in TB ORD 651 (Use of Anti-freeze Solution and Cleaning Compounds in Engine Cooling Systems).

(2) On non-winterized models, fashion cover out of card board and cover enough of radiator core to assure coolant temperature will rise to 1600 F (minimum operating temperature). On winterized models close winterfront shutters as required (para 2-8).

d. *Electrical System.*

(1) Keep electrolyte at least 8/8 inch above plates and batteries fully charged (table 1-1).

Caution: Do not add water to batteries in subzero temperatures, unless engine is run for at least one hour after addition. The water will freeze unless charging generator (or alternator) has an opportunity to mix or convert to electrolyte.

(2) Remove batteries from non-winterized crane-shovel, and keep in heated storage area when not in use.

e. *Controls.* Operation of control levers will be sluggish during extreme cold. Do not force levers into first operation until after slow warming of engine has thinned lubricant. Apply levers slowly and allow friction to assist in warming of clutches, brakes, and fluids.

f. *Fuel System.*

(1) Keep fuel tank as full as possible (refuel frequently) during cold weather to minimize condensation. If presence of water in fuel supply is

suspected, use suitable strainer while refueling.

(2) Drain condensate from fuel tank frequently (para 3-14a(2)).

(3) Service primary fuel filter more frequently (on models with engine 687C-1-ES) (para 3-13).

(4) Service secondary fuel filter more frequently (para 3-13).

g. Crawlers.

(1) When subzero temperatures are expected, remove accumulations of mud from crawlers when halting operations for the day.

(2) When parking crane-shovel overnight in subzero temperatures never park in a muddy area without cleaning off mud, and placing crane crawlers upon planks.

Caution: When crawlers are frozen (in areas that were muddy when crane-shovel was parked), be sure and thaw mud and ice from sprockets, chain, and track shoes, to avoid damage when traveling away from parking area, or to new worksite.

2-15. Operation in Extreme Heat

a. *Cooling System.*

(1) Assure that system is clean, free flowing, and remove all obstructions to air passage through radiator core.

(2) Check coolant level frequently, and add water as required.

(3) Check fan belt adjustment frequently.

(4) Keep cab sliding panels open, to insure more air circulation around engine.

(5) Keep water pump and drive well lubricated. See LO 5-3810-201-12.

b. *Engine.*

(1) Check oil level frequently. Add oil when necessary. See LO 5-3810-201-12.

(2) If engine becomes overheated from lack of water, allow it to cool before adding water, then run engine at fast idle while adding water.

c. *Electrical System.*

(1) Do not allow batteries to overheat in service. Open battery box cover in extreme heat, and allow air to circulate around batteries.

(2) Check electrolyte frequently in hot weather and add water, unless water stands at least 3/8 inch above plates.

d. *Lubrication.* Lubricate more frequently in hot weather, changing lubricants when required by LO 5-3810-201-12.

2-16. Operation in Dusty or Sandy Areas

a. *Inspection and Lubrication.* Fine sand or dust

has a tendency to penetrate into bushings and bearings. Inspect; clean and lubricate at more frequent intervals. See paragraphs 3-3 and 3-4, and LO 5-3810-201-12.

b. *Fuel System.* Keep fuel tank cap on tight, and wipe free of sand and dust before removing to refuel. Service fuel filters more frequently (para 3-13) to remove sand and grit. Service air cleaners (para 3-11) more frequently.

c. *Turntable Roller Path.* Do not allow lubricant to accumulate on roller path. Clean frequently under dusty or sandy conditions, to prevent excessive wear.

d. *Brakes and Clutches.* Inspect all clutch and brake bands frequently. Use compressed air and remove all sand or dust, or wipe clean. Failure to keep bands clean will result in worn bands, scored drums, and unsatisfactory operation.

e. *Open Gears.* Wash contaminated lubricant from all open gears and relubricate frequently, to eliminate excessive wear from sand and grit accumulations.

f. *Cables.* Keep all unused cables in boxes. Clean and lubricate operating cables more frequently, to prevent excessive wear and insure satisfactory operation.

g. *Crawlers.* Inspect crawler and carbody frequently for excess lubricant that results in accumulation of sand or dust. Pay particular attention to drive chains, sprockets, or gears, that wear easily. Clean and relubricate frequently (LO 5-3810-201-12).

2-17. Operation Under Rainy or Humid Conditions

a. *Fuel System.*

(1) Wipe away all moisture from filler cap and neck before removing to service fuel tank.

(2) Keep fuel tank full to minimize condensation.

(3) Drain condensate from tank daily (para 3-14a(2)).

(4) Drain fuel filters frequently (para 3-13).

b. *Bare Metal.* Check crane-shovel carefully for signs of corrosion. Wipe all moisture from bare metal parts, and coat with lubricating oil, grease, or an approved rust preventive. If painting is required, report the condition to organizational maintenance.

c. *Electrical System.* Keep electrical components, connectors, and wiring clean and dry. Coat battery terminals with a light coat of grease to prevent corrosion.

d. *Lubrication.* Lubricate and service cranes shovel more frequently (LO 5-810-201-12).

Refer to paragraph 3-4 for detailed lubrication instructions.

2-18. Operation in Salt Water Areas

a. *Electrical System.* Keep electrical connections clean and dry. Coat battery terminals with grease to prevent corrosion.

b. *Bare Metal.* Check all bare metal surfaces.

Wipe dry, and lubricate with oil or grease. If painting of surface is necessary, report condition to organizational maintenance.

c. *Lubrication.* Refer to paragraph 3-4; current lubrication order (LO 5-3810-201-12), and lubricate more frequently.

d. *Cooling System.* Do not use salt water in the crane-shovel cooling system.

2-19. Operation in Snow

a. *General.* Operation in snow combines conditions found in extreme cold, and humid conditions. Accumulations of snow turns to ice, and is damaging to gears, or chains, and will contaminate fuel system.

b. *Fuel System.*

(1) Wipe all snow away from fuel filler cap before servicing crane-shovel fuel tank.

(2) Drain condensate from fuel tank frequently (para 3-14a(2)).

(3) Keep fuel tank full to minimize condensation.

c. *Crawlers.* Remove all accumulations of snow from crane-shovel crawler to prevent snow from turning to ice and causing damage.

d. *Parking.* When possible, lay boards on snow and drive crawlers up on them, then use compressed air to blow away all snow accumulations from gears; chains; sprockets; cable drums; sheaves of bucket, hook block or boom.

2-20. Operation in Mud or Deep Water

a. *General.*

(1) When operating in mud, or water, check footing of crane-shovel frequently to avoid tipping.

(2) When fording a body of water be careful of hidden boulders or deep holes. Use dipper or weighted hook block to feel the way across, stopping crane travel to swing from side-to-side to detect boulders. Lower dipper or hook to measure depth of water and avoid dangerous holes.

b. *Lubrication.* Lubricate crane-shovel immediately after washing or fording. Keep all operating mechanism thoroughly lubricated(LO 5-3810-201-12).

2-21. Operation at High Altitude

a. *With Model 687C-18-ES Engine.* The blowers on this engine operates satisfactorily at higher altitudes without special attention. Service of air cleaner (para 3-11) more frequently, will assure full flow of air for combustion.

b. *With Model D333TA Engine.* This turbocharged engine operates best when operating at altitude specified on warning plate installed on valve cover. The highest altitude at which the engine may be safely operated, without resetting, is listed on this plate. The engine must be reset for higher altitudes. It may be operated at a lower altitude without danger of engine damage, but at less than maximum performance.

2-22. Operation Below Sea Level

a. *With Model 687C-18-ES Engine.* This engine will operate satisfactorily at altitudes below sea level without special adjustment.

b. *With Model D333TA Engine.* This turbocharged engine will operate at altitudes below sea level without danger of damage to engine but with reduced efficiency. Long periods of operation at low altitudes should not be attempted without reporting details to proper authority, so that required adjustments may be accomplished.

Section VI. OPERATION OF AUXILIARY MATERIEL USED IN CONJUNCTION WITH CRANE SHOVEL

2-23. General

This section furnishes information on operation of auxiliary materiel used on, or with the cranes shovel. Cold weather starting aids, fire extinguisher, heaters, trouble light, and front end attachments are covered in succeeding paragraphs.

2-24. Fire Extinguisher (Dry Chemical Type)

a. *Description.* The dry chemical type fire extinguisher is suitable for use on all types of fire, and is effective in areas where ambient temperature is -25° F and above. When winterized, (pressurized with nitrogen) the fire

extinguisher may be used in temperatures below -25° F. This extinguisher is a 21/2 pound, stored pressure, lever-operated fire extinguisher.

b. *Operation.*

(1) Remove fire extinguisher from its mounting bracket on inside of cab, at right of operator's seat.

(2) Lift handle; press lever, and direct powder at base of flame by using a side-to-side sweeping motion.

c. *Maintenance.*

(1) Inspect for broken seal.

(2) Replace cylinder that has been used, or that does not weigh in accordance with marking on cylinder.

2-25. Cold Weather Starting Aids

a. *General.* Winterized units with engines model 687C-ES-18, and some units with engine model D333TA installed, are equipped with ether injector pressure primer discharger (fig. 2-24) for use in cold weather starting. Model D333TA engines also have glow plugs installed, and in this instance both glow plugs and ether injection is used for cold weather starting (table 2-1).

Battery and engine heaters are installed on winterized units to assist in cold weather starting (para 2-26).

b. Cold Weather Starting Operation.

(1) Operating the ether injector pressure primer discharger. Prepare for starting as directed in paragraph 2-10, then proceed as follows:

(a) Remove capsule holder (fig. 2-31) by unscrewing it from body in a counterclockwise motion, and move engine throttle control lever (fig. 2-24) to half throttle position.

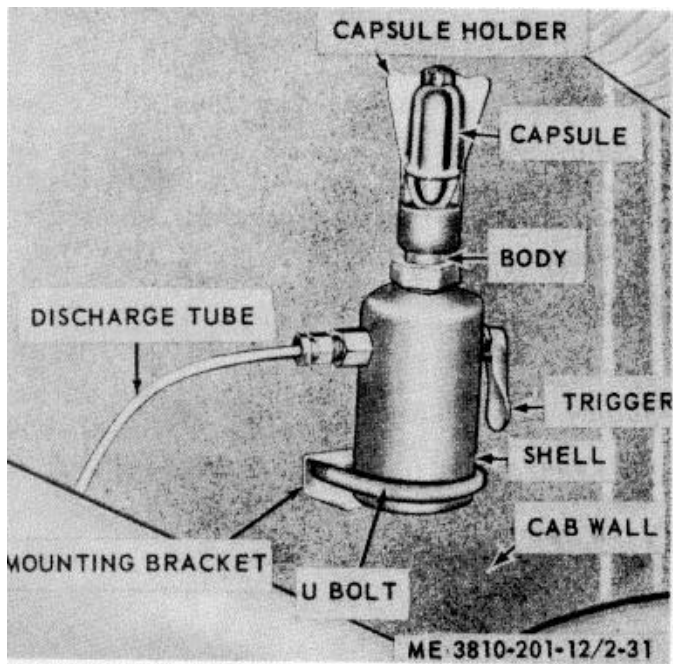


Figure 2-31. Ether injector pressure primer discharger.

(b) Insert capsule (fig. 2-31) in holder then replace holder on body by turning clockwise.

(c) Press on trigger which causes pin to pierce capsule, allowing gas pressure in capsule to force ether into intake manifold.

(d) Depress starter push switch (fig. 2-22) simultaneously with trigger of pressure primer, and hold for 15 seconds, or until engine starts.

Note. One capsule may be discharged into manifold and another placed in holder, in readiness for use should the engine begin to stall.

(e) If engine does not start in 15 seconds, let starter motor rest for at least 30 seconds then repeat steps (a) through (d) above.

(f) When engine starts, decrease throttle control lever to a low idle until engine oil pressure reaches normal operating pressure, then run engine at half throttle for at least five minutes before applying a load.

Note. Be sure spent capsule is left in pressure discharger while engine is running, and that capsule holder is screwed on finger tight, to avoid dirt entering engine.

Caution: Use only enough ether to start the engine, or to keep it running if it begins to stall. Do not discharge more than two capsules without cranking the engine.

(2) Operating the glow plugs (on engines model D333TA).

(a) Refer to table 2-1 for time required, then move HEAT-START switch (fig. 2-25) to HEAT.

(b) After plugs have heated the required time, move HEAT-START switch to START and hold for 10 seconds, or until engine starts. As soon as engine starts, move switch to HEAT position until engine is running smoothly, then move switch to OFF.

(c) If engine does not start after 10 seconds of cranking, repeat step (a) above.

(d) If engine fails to start on second try, let starter motor rest for three minutes, then repeat step (a) above.

(e) After engine has started, move HEAT-START switch to HEAT position until engine is running smoothly, and insure that there is enough oil pressure to turn off low oil pressure warning light. If warning light does not go out within 15 seconds, stop engine (para 2-11) and determine cause(s). Report deficiencies to organizational maintenance.

Caution: Do not turn HEAT-START switch to HEAT when engine is warm and running.

(3) Operating glow plugs and pressure discharger simultaneously.

(a) Refer to table 2-1, compare ambient temperature with time required, then move HEAT-START switch to HEAT.

(b) After glow plugs have heated the allotted time, press trigger of pressure discharger; release ether into intake manifold, and at same time move HEAT-START switch to START.

(c) After engine starts, move HEAT-START switch to HEAT until engine is running smoothly, then move switch to OFF.

Note. Starting non-winterized units at ambient temperature of +20° F or lower will require preheating of crankcase oil and coolant.

2-26. Heaters

a. *General.* Fourteen crane-shovel units, model 855BG2, with serial numbers 22506 through 22519, have been winterized and equipped with three heaters, insulation, weatherstripping, with separate controls mounted in cab to control heaters which are mounted on rear of revolving frame cab, just above counterweight (fig. 1-3).

b. *Controls.* A control box for each individual heater is mounted on a control panel in the cab (fig. 2-29). Each control box has a three position toggle control switch, (positions are marked ONHI, OFF, ON-LO); a push-pull switch to actuate circuit breaker, (when switch is pushed in, circuit breaker is in the circuit, when pulled out, circuit breaker is out of the circuit). (This is an overload safety factor), and an indicator light that tells when heater is operating.

c. Operation.

(1) Before attempting to start heaters, be sure fuel line valves at fuel tank are open.

(2) Start battery heater (fig. 2-29) by moving switch up to ON-HI, then open air relief valve located inside engine housing in coolant line from top of heater.

(3) Start engine heater by moving switch up to ON-HI.

(4) Check that defroster controls on manifold are closed; manifold sliding door is open; and lower front defroster control is closed, then start personnel heater by moving switch to ONHI.

Note. In extreme low ambient temperatures, it may be necessary to operate heaters for an hour before attempting to start diesel engine.

(5) After battery and engine heaters have warmed the equipment sufficiently, start engine (para 2-10 and 2-25), then adjust shutters of winterfront to maintain efficient engine operation.

Caution: In extreme low temperatures, be sure personnel heater has been operating at full cab heat for at least 20 minutes before attempting to defrost, and avoid breakage of glass due to sudden extreme temperature change.

(6) Move defroster controls to open position and open lower defroster door as required.

2-27. Trouble Light

a. *Description.* The trouble light is a drop cord type, 24 Vdc, and is stowed in the cab.

b. *Operation.* Remove light from stowed position and plug into trouble light socket on lighting panel (fig. 2-24).

2-28. Operation of Crane Front End Attachment

a. Perform preventive maintenance checks and services (para 3-6); start engine (para 2-10); engage engine clutch (fig. 2-24), then raise boom (if necessary).

b. Lower hook block by releasing the hoist brake pedal (fig. 2-23) and allow hook block to drop slowly to center of load to be lifted. Swing revolving frame (para 2-12b), or travel cranes shovel (para 2-12d) when necessary to center hook over load.

c. When hook block is in desired position, apply hoist brake pedal and hold.

d. After load is safely attached, allow ground crew to clear load, then pull back on hoist clutch and propel brake lever (fig. 2-23), at the same time release hoist brake pedal.

e. When load is sufficiently high to swing safely, return hoist clutch lever to neutral position, and at same time apply hoist brake pedal to hold load in position.

f. Swing revolving frame to desired position (para 2-12b).

Note. Engage swing and propel clutch lever (fig. 2-23) slowly so that swing motion will start and stop smoothly.

g. Lower load by releasing hoist brake pedal, and control rate of load descent by varying the pressure applied to hoist brake pedal.

Note. If it is necessary to unload at a greater or lesser radius, the boom may be raised or lowered as required (para 2-12c) or, crane-shovel may be traveled (para 2-12d). If boom is lowered, load must be hoisted simultaneously to prevent load from lowering too fast and causing damage. If traveled for less than 100 feet, it is not necessary to put idler sprockets under boom foot.

h. When load is solidly at rest, release hoist brake pedal and give ground crew slack to unfasten hitch.

i. When load is unhitched, pull back hoist clutch lever to raise hook block clear, and hold in position with hoist brake pedal.

Note. Travel, or adjust boom if necessary, in reverse order to change made as a result of note above.

j. Swing revolving frame to spot for next load (para 2-12b).

k. Repeat steps a through j cycle as necessary.

l. When through work for the day, lower bucket to ground.

m. Disengage engine clutch (fig. 2-24); stop engine (para 2-11), then perform preventive maintenance checks and services (para 3-6).

2-29. Operation of Clamshell Front End Attachment

a. Perform preventive maintenance checks and services (para 3-6); start engine (para 2-10), then

engage engine clutch (fig. 2-24).

b. Raise the open clamshell bucket from ground by releasing digging brake pedal and hoist brake pedal (fig. 2-24), and at the same time pulling back on the crowd and retract clutch lever and the hoist and propel clutch lever.

Note. The above clutch levers are side-by-side, and may be controlled with one hand, if desired. If the clamshell bucket starts to close in mid air, release pressure on crowd and retract clutch lever just enough to reopen bucket.

c. When bucket is high enough to clear obstructions, return crowd and retract and hoist and propel clutch levers (fig. 2-24) to neutral and at the same time apply digging and hoist brake pedals to hold open bucket in position.

d. Swing revolving frame in desired direction (para 2-12b).

e. Release digging brake pedal and hoist brake pedal and slowly lower open clamshell bucket to stockpile. The rate of bucket descent is controlled by pressure on hoist brake pedal. Allow closing line to run free when lowering bucket.

Note. If necessary to force bucket teeth into hard material, a long fast drop of bucket from tip of boom to stockpile will do the job.

f. As soon as bucket enters material, apply digging and hoist brake pedals to prevent cables overrunning.

g. Release digging brake pedal, and at the same time pull crowd and retract clutch lever toward operator to close the bucket. To adjust digging depth, slack off on hoist brake pedal as bucket closes and digs into material.

h. When bucket is closed, pull the hoist clutch lever toward operator, and at same time release hoist brake pedal. As bucket rises it may be necessary to slack off on hoist clutch lever to avoid opening bucket in mid air.

i. Raise bucket high enough to clear obstructions; release crowd and retract clutch lever and the hoist clutch lever, and at the same time apply pressure to digging brake and hoist brake pedals to hold bucket in position.

j. Swing the revolving frame to desired dumping position (para 2-12b), then release digging brake pedal to open bucket. Hold bucket with hoist brake pedal to prevent cable from unwinding.

k. Swing the open bucket back to loading point and repeat steps b through j working cycle as often as necessary.

l. When through with work for the day, lower bucket to ground and disengage engine clutch (fig. 2-24).

m. Stop engine (para 2-11) and perform preventive maintenance checks and services (para 3-6).

2-30. Operation of Dragline Front End Attachment

a. Perform preventive maintenance checks and services (para 3-6); start engine (para 2-10), and engage engine clutch (fig. 2-24).

b. Raise or lower boom (if necessary) to between 40 and 45° angle (para 2-12c), the normal angle for dragline operation.

c. Release digging brake pedal, allow bucket to trip, then lower bucket to work area by releasing pressure on hoist brake pedal. When bucket touches ground apply hoist brake pedal to prevent cable overrunning.

d. To fill dragline bucket, pull crowd and retract clutch lever toward operator, slipping hoist brake as required to allow bucket to level out when filled.

e. When bucket is loaded return crowd and retract clutch lever to neutral and apply slight pressure to digging brake pedal, then pull hoist and propel clutch lever toward operator. The slight pressure on digging brake keeps bucket level and prevents it from dumping its load.

f. When bucket is high enough to clear obstructions, swing to dumping area (para 2-12b), at the same time slipping digging brake to allow bucket to swing out under boom point.

g. When bucket has reached the desired position for dumping, release all pressure on digging brake pedal.

h. Swing bucket (para 2-12b) out over digging position and repeat above working cycle as often as necessary.

Note. Working or digging area can be enlarged beyond boom point by "casting" bucket.

i. To cast bucket beyond boom point, pull crowd and retract clutch lever toward operator and bring bucket toward boom foot, as bucket is hoisted to half boom height. Swing boom toward work area (para 2-12b) then apply swing brake to hold boom in desired position.

j. Release pressure on digging brake pedal and hoist brake pedal simultaneously. Apply pressure to both brake pedals to prevent cables from overrunning as bucket reaches ground.

k. Repeat steps c through g, i and j above as necessary.

l. When work for day is through, lower bucket to ground, and disengage engine clutch (fig. 2-24).

m. Stop engine (para 2-11) and perform preventive maintenance checks and services (para 3-6).

2-31. Operation of Shovel Front End Attachment

a. Perform preventive maintenance checks and services (para 3-6); start engine (para 2-10), and engage engine clutch (fig. 2-24).

b. Travel (para 2-12) to bank as shown in figure 1-7. When positioning crane-shovel near bank, keep about 1 1/4 to 1 1/2 times dipper length between crawlers and edge of bank.

c. Lower dipper by releasing hoist brake pedal (fig. 2-23). Control speed of lowering dipper by varying pressure on hoist brake pedal.

d. To crowd dipper into bank, extend dipper stick by pulling crowd and retract clutch lever toward operator, then returning lever to neutral.

e. To load dipper from bank, move hoist clutch lever toward operator, then just a moment later, pull crowd and retract clutch lever toward operator.

Note. The dipper should slice a thin layer from bank rather than digging in.

f. When dipper is loaded, move crowd and retract clutch lever away from operator and retract dipper from bank.

g. When dipper is high enough to clear obstacles, return hoist clutch to neutral and apply hoist brake pedal, then swing dipper (para 2-12b) over unloading area. Apply swing brake (fig. 2-23) when dipper is in unloading position, then move dipper trip lever to open dipper door and dump load.

h. Swing dipper back to loading area (para 2-12b) then position crane-shovel for digging, and repeat above work cycle as necessary.

i. When work is finished for the day, lower dipper to the ground, and disengage engine clutch (fig. 2-24).

j. Stop engine (para 2-11) and perform preventive maintenance checks and services (para 3-6).

2-32. Operation of Backhoe Front End Attachment

a. Perform preventive maintenance checks and services (para 3-6); start engine (para 2-10), and engage engine clutch (fig. 2-24).

Note. Observe that the position of auxiliary gantry (fig. 2-17) is almost vertical, and the backstop is almost closed. Adjust position, if necessary, as described for raising or lowering of boom (para 2-12c).

b. Take up slack in hoist cable and digging cable by moving hoist clutch and propel brake lever and crowd and retract clutch lever (fig. 2-23) toward operator. Move clutch levers back to neutral when cable tension is equal.

c. To raise backhoe dipper boom and extend dipper, pull the hoist clutch and propel brake lever (fig. 2-23) toward operator, at the same time move crowd

and retract clutch lever away from operator allowing digging cable to run out.

Control slack in digging cable by varying pressure on digging brake pedal.

d. Continue raising of backhoe boom and dipper extension until dipper is over the work area; then return both clutch levers to neutral; hold digging cable tight with pressure on digging brake pedal; allow backhoe boom and dipper to lower, controlling rate of descent by pressure on hoist brake pedal.

e. Fill dipper by pulling crowd and retract clutch lever toward operator, at same time keeping tension on hoist cable by applying pressure on hoist brake pedal.

Note. Depth of backhoe dipper cut is controlled by tension on hoist brake pedal. If hoist cable goes slack, dipper will dig in instead of slicing material from the cut.

f. Stop travel of backhoe dipper before dipper sheave (fig. 2-17) strikes boom, by returning crowd and retract clutch lever to neutral and applying pressure to digging brake pedal.

g. Raise dipper out of cut and to dumping height by holding pressure on digging brake pedal (keeping dipper close to boom), and moving hoist clutch and propel brake lever toward operator. When dipper is at proper height return clutch lever to neutral and apply pressure to hoist brake pedal.

h. Swing revolving frame (para 2-12b) to dumping area.

i. Dump load by moving hoist clutch and propel brake lever toward operator, at the same time moving crowd and retract clutch lever away from operator, keeping pressure on digging brake pedal to prevent overrunning of digging cable. When load is dumped and stick is extended return hoist clutch and propel brake lever and crowd and retract clutch lever to neutral, then apply pressure to both brake pedals to hold backhoe in position.

j. Swing revolving frame (para 2-12b) back to work area.

k. Repeat the above work cycle as necessary.

l. When work is through for the day lower dipper to the ground, and disengage engine clutch (fig. 2-24).

m. Stop engine (para 2-11) and perform preventive maintenance checks and services (para 3-6).

2-33. Operation of Piledriver Front End Attachment

a. Perform preventive maintenance checks and services (para 3-6); start engine (para 2-10), and engage engine clutch (fig. 2-24).

b. Attach pile follower cable (fig. 2-14) to hooks on

hammer, then lift hammer and pile follower by moving hoist clutch lever toward operator. When hammer reaches top of hammer guides, return hoist clutch lever to neutral, apply hoist brake pedal, and set hoist brake lock (fig. 2-23) to hold hammer in raised position.

c. Run pile handling cable off drum by moving crowd and retract clutch lever away from operator, and at same time applying pressure to digging brake pedal to prevent pile cable from overrunning. Attach pile handling cable to upper end of a pile and raise it into position within pile leads by moving crowd and retract clutch lever toward operator, return clutch to neutral and apply digging brake when pile is within pile leads.

d. Position pile in desired location by moving crane as required (swing para 2-12b, travel para 2-12d), then lower point of pile to ground by slowly moving crowd and retract lever away from operator, at same time applying digging brake pedal to prevent cable overrunning drum.

e. Wrap a heavy chain around pile and leads to hold pile within leads.

Note. The chain should be sufficiently loose not to bind pile when driving begins.

f. Lower hammer and pile follower by releasing hoist brake lock and pressure on hoist brake pedal allowing hammer and pile follower to drop slowly to top of pile. Position pile in follower then remove pile follower cables from hooks on hammer.

g. To drive the pile, raise hammer by pulling reaches top of pile leads, return hoist clutch to neutral, and apply hoist brake pedal immediately after hammer its pile follower to prevent hammer cable overrunning the drum.

h. Position another pile and repeat the above operating cycle as often as necessary.

i. When work is through for the day, lower hammer to rest on pile follower, and disengage engine clutch (fig. 2-24).

j. Stop engine (para 2-11) and perform preventive maintenance checks and services (para 3-6).

2-34. Operation of Jib Boom Front End Attachment

a. When jib boom is installed to crane boom (fig. 2-8) and reeved (fig. 2-7), the jib hoist line (or whip line) is operated as described below.

b. Position boom with jib over center of load (by swinging revolving frame, paragraph 2-12b above, or traveling, paragraph 2-12d above).

c. Lower weighted hook by releasing hoist brake lock (fig. 2-23) and allowing hook to drop by gravity, controlling rate of descent by varying pressure on hoist brake pedal.

d. After load is attached to hook, lift load by moving hoist clutch and propel brake lever (fig. 2-23) toward operator.

e. When load is at proper height to clear all obstacles, move hoist clutch and propel brake lever to neutral and apply hoist brake pedal and lock with hoist brake lock.

f. Complete handling of load in similar manner to crane operation (para 2-28 above).

**CHAPTER 3
OPERATOR AND ORGANIZATIONAL MAINTENANCE INSTRUCTIONS**

**Section I. OPERATOR'S AND ORGANIZATIONAL
MAINTENANCE REPAIR PARTS, TOOLS, AND EQUIPMENT**

3-1. Tools and Equipment

a. Basic issue tools and repair parts issued with or authorized for the crane-shovel basic unit are listed in the Basic Issue Items List, Appendix B of this manual.

b. The special tools required to perform operator and organizational maintenance on the crane-shovel are listed in table 3-1, and Appendix C. References and illustrations indicating the use of these tools are listed in the table. No special equipment is required by operator, crew, or organizational maintenance personnel for performing maintenance on the crane-shovel basic unit.

3-2. Organizational Maintenance Repair Parts
Organizational maintenance repair parts are listed and illustrated in TM 5-3810-201-20P.

Table 3-1 Special Tools

Item	FSN or Part number	Ref		Use
		Fig.	Para	
Puller, shear washer	5120-690-7948		3-131	Changing of lagging on hoist drums

Section II. LUBRICATION

3-3. General Lubrication Information

a. This section contains instructions which are supplemental to, and not specifically covered in the lubrication order.

b. Refer to lubrication order LO 5-8810-201-12 for normal information on lubrication points and intervals.

3-4. Detailed Lubrication Information

a. *General.* Keep all lubricants in closed containers and store in a clean dry place, away from external heat. Allow no dust, dirt, or other foreign material to mix with the lubricant. Keep all lubrication equipment clean and ready for use at all times.

b. *Cleanings.* Keep all external parts not requiring lubrication clean of lubricants. Before lubricating the crane-shovel, clean all lubricating points (fig. 3-1) to prevent contaminants from entering housing under applied pressure. After lubrication, wipe excess grease from all lubrication points to prevent accumulation of foreign matter.

c. *Operation After Lubrication.* Start engine (para 2-10) and operate the crane-shovel immediately after lubrication. Inspect lubrication oil filters for leaks, then

stop engine (para 2-11) and check all oil levels. Add oil, if necessary, to bring level up to full mark on dipstick level gage. Check for any additional leaks and correct them if found.

d. *OES Oil.*

(1) The crankcase oil level must be checked frequently, as oil consumption may increase.


(2) The oil may require changing more frequently, because contamination by dilution and sludge formation will increase during cold weather operation.

e. *Engine Air Cleaners.* The air cleaners may be oil bath, or dry type depending on type of engine installed in crane-shovel. Service as follows:


(1) Service for crane-shovel model 855BG2 (engine 687C-18ES).

(a) Refer to figure 3-2, loosen special screw in clamp, then remove top cap from body.


(b) Loosen two wing nuts; remove bottom pan from body, then empty old oil from pan.

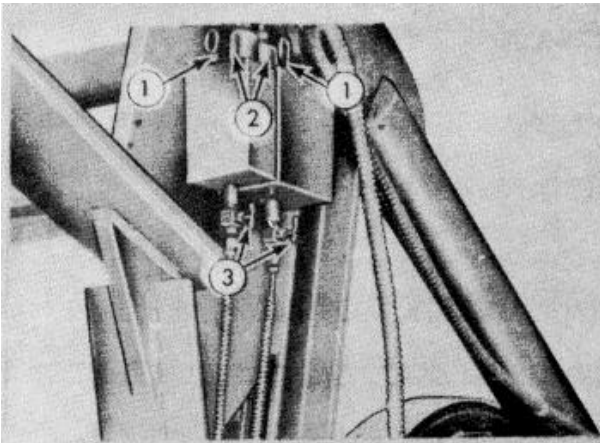


1 HYDRAULIC OIL TANK DIPSTICKS
 2 HYDRAULIC OIL TANK FILL PLUG
 3 HYDRAULIC OIL TANK DRAIN PLUGS

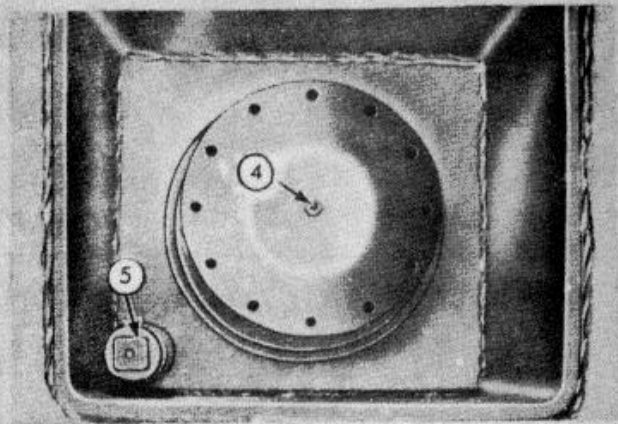


4 INTERMEDIATE SWING SHAFT
 5 JACK SHAFT PEDESTAL CASE DRAIN PLUG

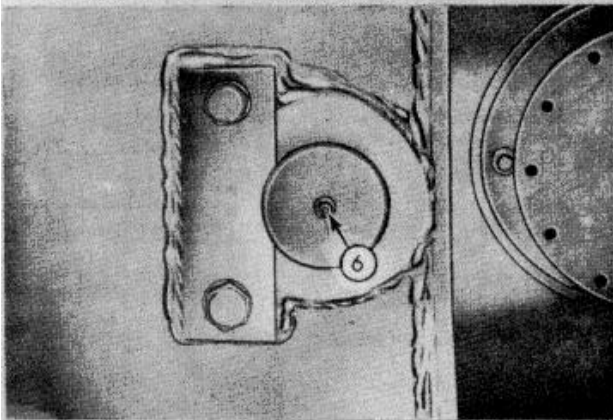


6 PROPEL IDLER SHAFT

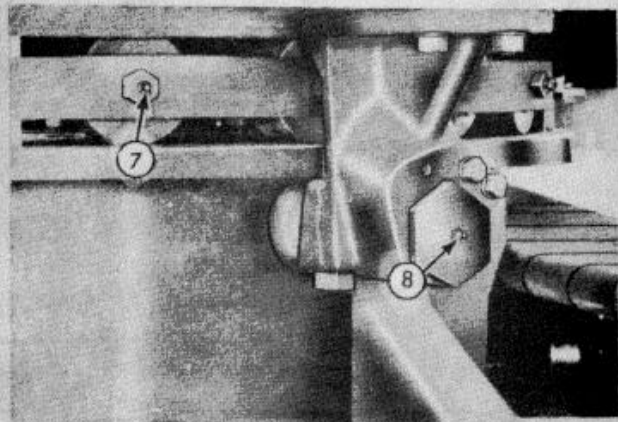

7 LIVE ROLLER CIRCLE SHAFT BUSHINGS
 8 FRONT HOOK ROLLERS

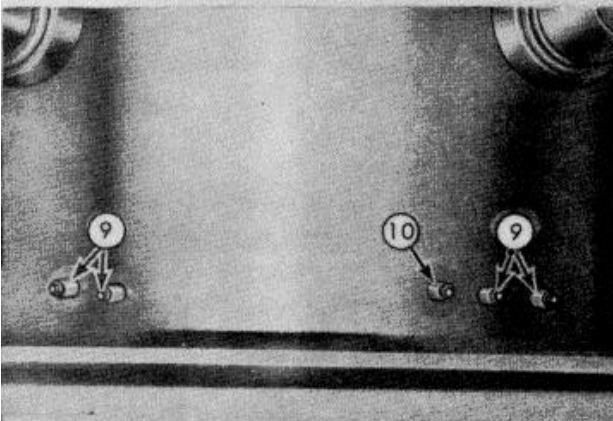


9 LOWER VERTICAL PROPEL SHAFT BUSHING
 10 HORIZONTAL PROPEL SHAFT INBOARD AND
 OUTBOARD BEARINGS

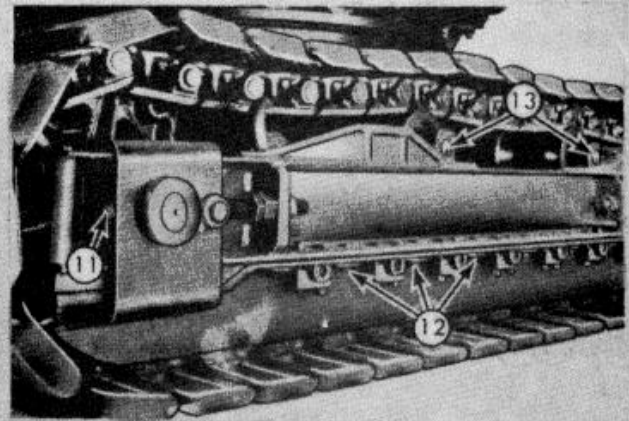


11 OUTER DRIVE SHAFT BEARING
 12 LOWER TRACK ROLLER SHAFTS
 13 UPPER TRACK SUPPORT ROLLERS

ME 3810-201-12/3-1 ①


Figure 3-1. Lubricating point identification (sheet 1 of 14).

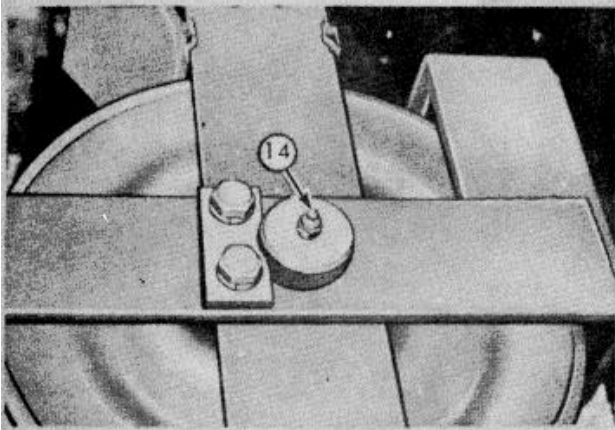


14 SPREADER BAR SHEAVES

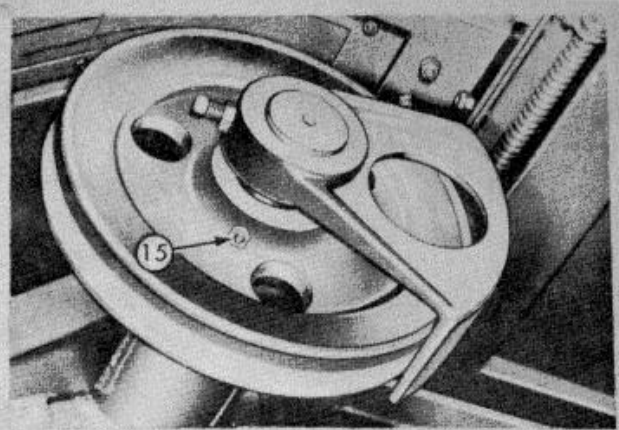


15 GANTRY SHEAVE

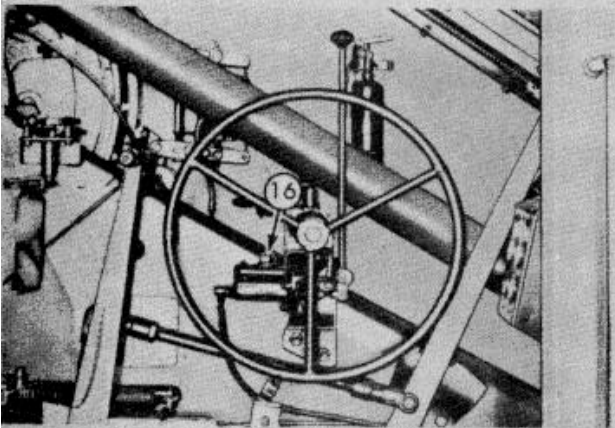


16 SWING BRAKE HYDRAULIC MASTER CYLINDER
FILL AND LEVEL PLUG

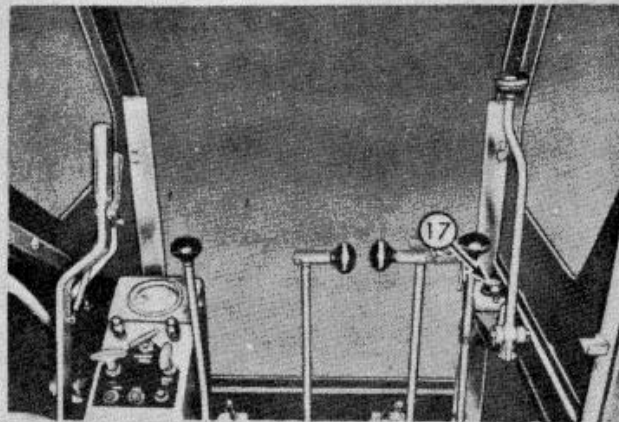

17 DIPPER TRIP HYDRAULIC MASTER CYLINDER
FILL AND LEVEL PLUG

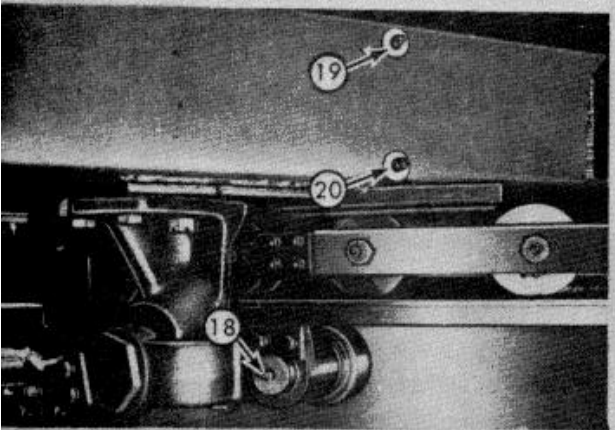


18 REAR HOOK ROLLERS
19 SWING GEAR UPPER GUDGEON
20 SWING GEAR LOWER GUDGEON

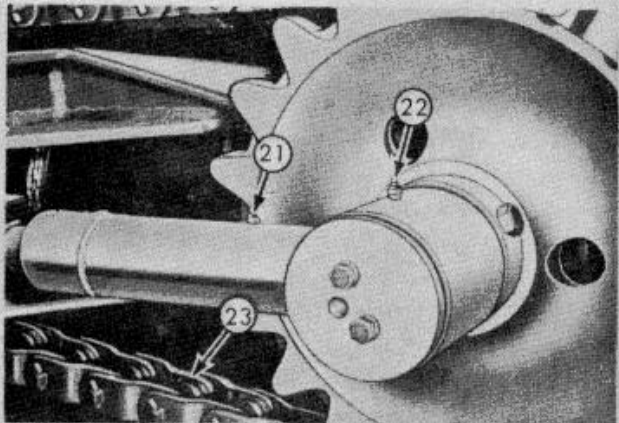


21 ADJUSTING BOLT
22 DRIVE SPROCKET HUB
23 PROPEL CHAIN

ME 3810-201-12/3-1 (2)


Figure 3-1. Lubricating point identification (sheet 2 of 14).

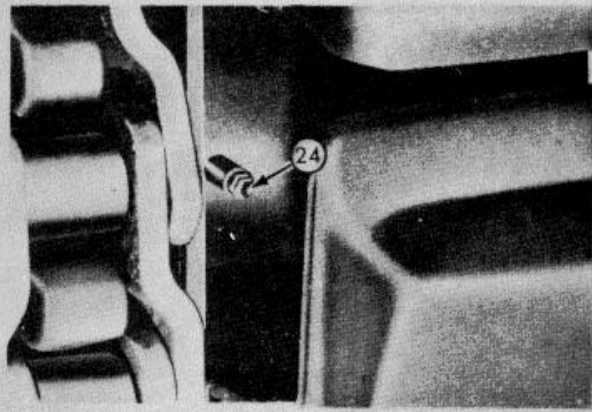


24 INNER DRIVE SHAFT BEARING

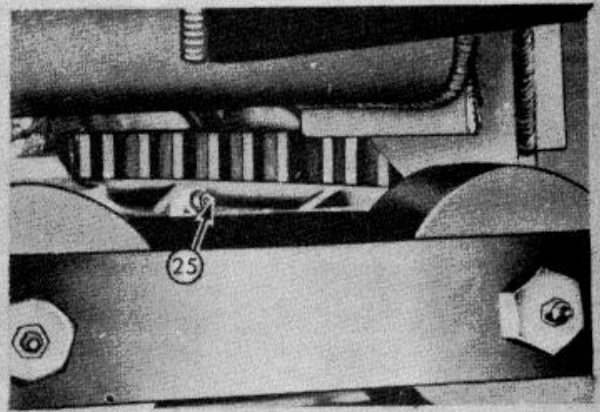


25 PROPEL GEAR BUSHING

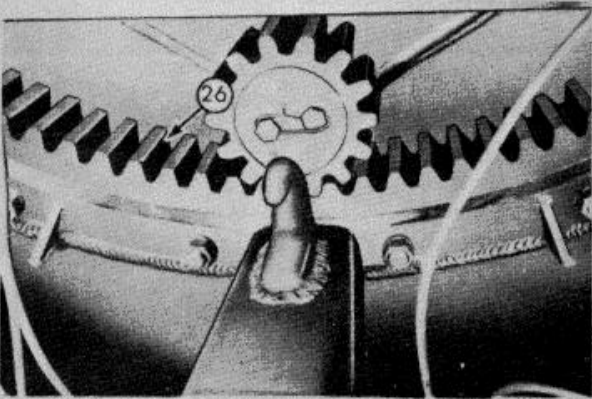


26 MAIN SWING GEAR

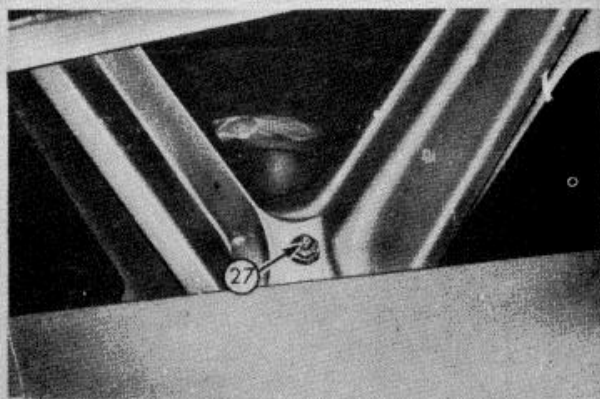

27 IDLER SPROCKET BEARING

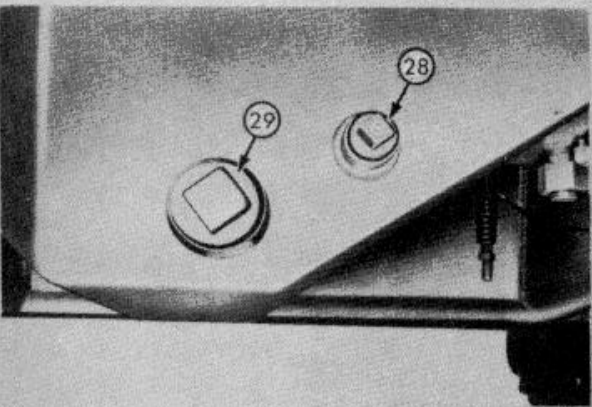


28 PROPEL SHAFT BEVEL GEAR CASE FILL AND LEVEL PLUG
29 PROPEL SHAFT BEVEL GEAR CASE DRAIN PLUG

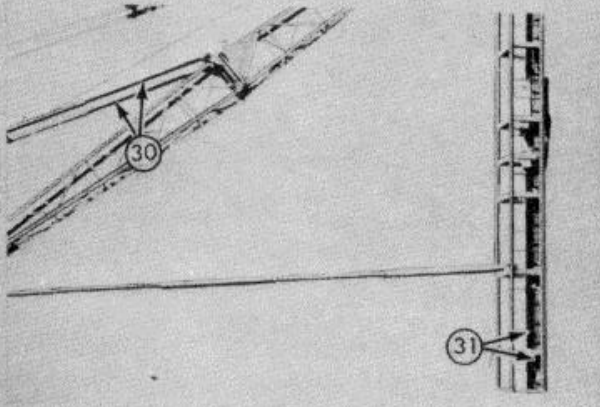


30 BOOM STOPS
31 HAMMER GUIDES

ME 3810-201-12/3-1 (3)


Figure 3-1. Lubricating point identification (sheet 3 of 14).

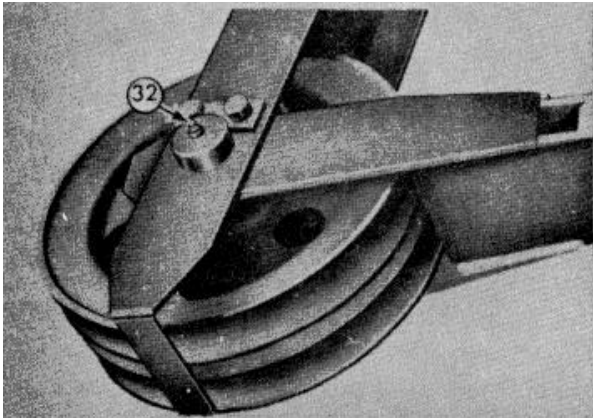


32 EQUALIZER SHEAVES

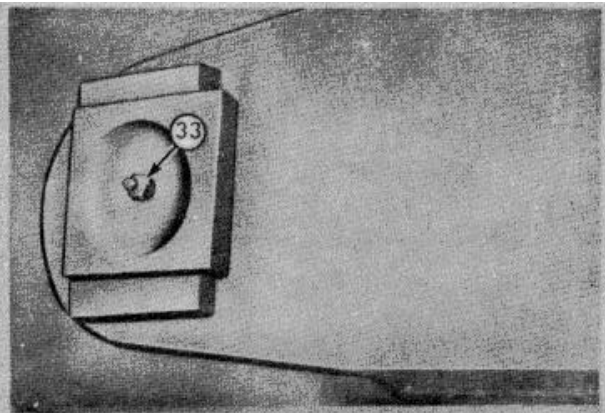


33 BOOM FOOT PINS

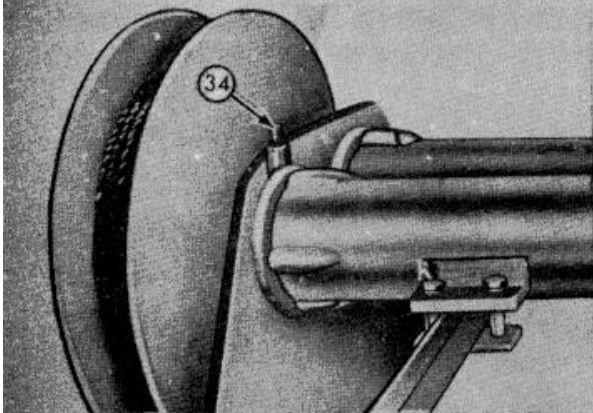


34 TAGLINE GEARS

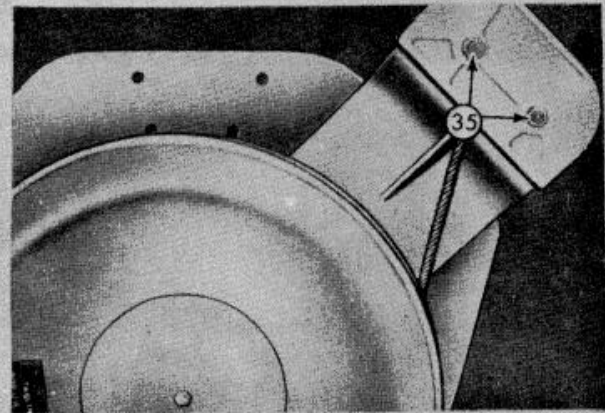

35 TAGLINE GUIDE SHEAVES

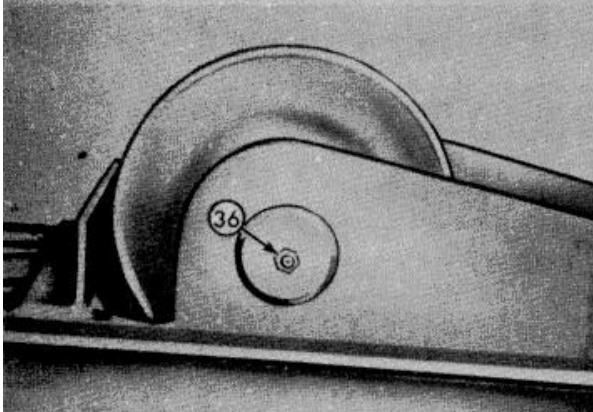


36 JIB STRUT SHEAVE

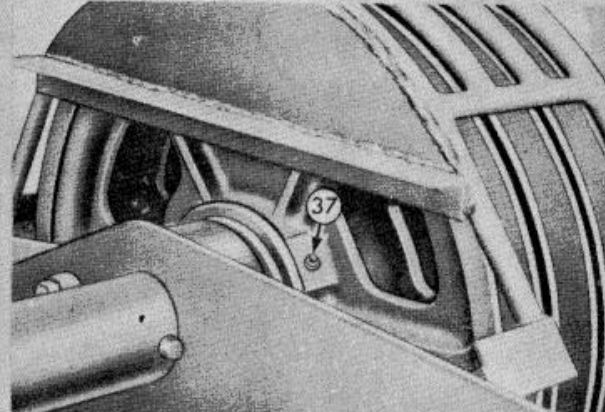


37 BOOM POINT SHEAVES

ME 3810-201-12/3-1 (4)


Figure 3-1. Lubricating point identification (sheet 4 of 14).

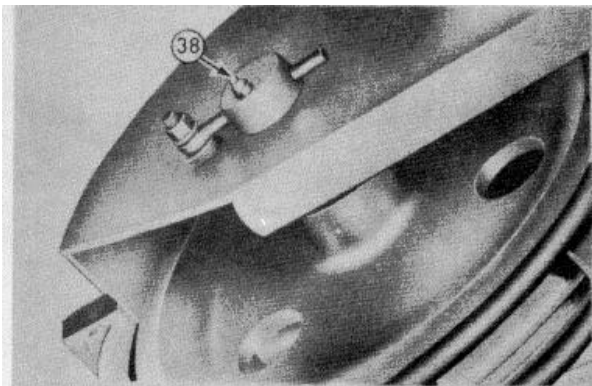


38 JIB POINT SHEAVE

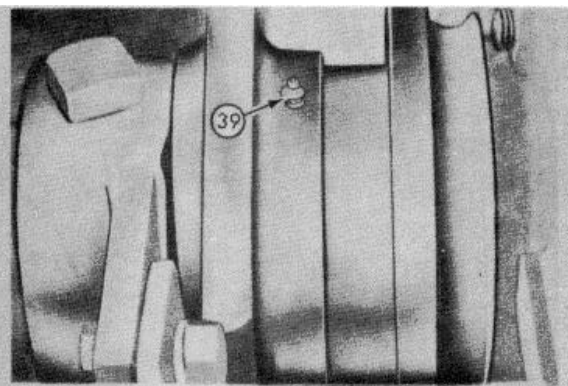


39 DEAD END LINK BUSHINGS

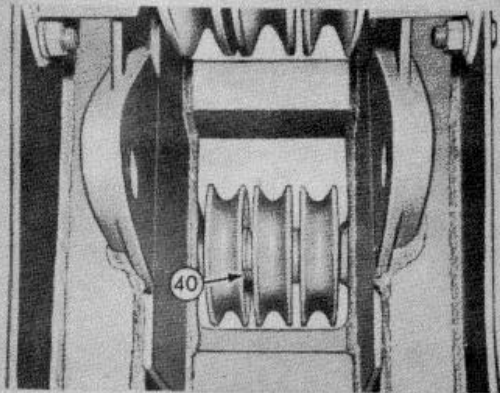


40 IDLER SHEAVES

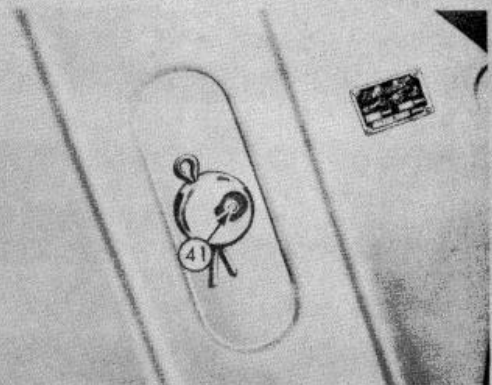

41 HOOK BLOCK SHEAVES

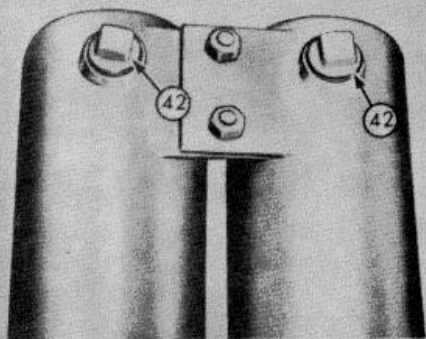


42 RUD-O-MATIC TAGLINE FILL, LEVEL AND DRAIN

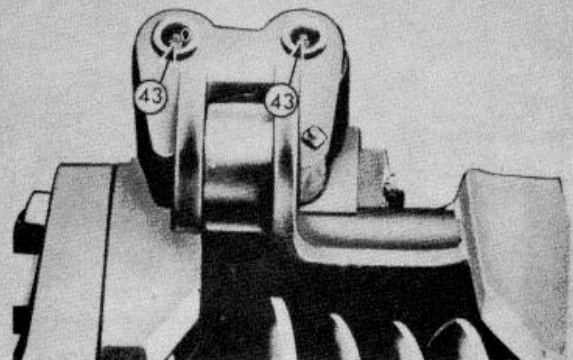


43 UPPER CABLE GUIDE ROLLER PINS

ME 38 10-201-12/3-1 (5)


Figure 3-1. Lubricating point identification (sheet 5 of 14).

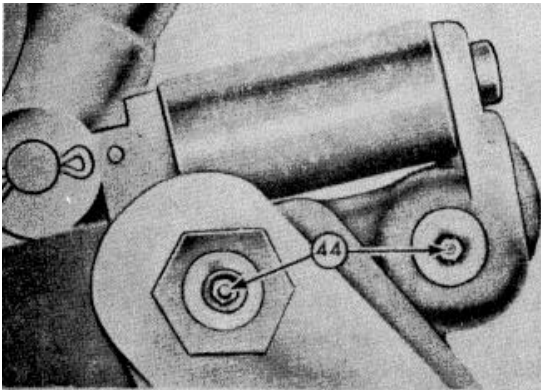


44 LOWER CABLE GUIDE ROLLER PINS

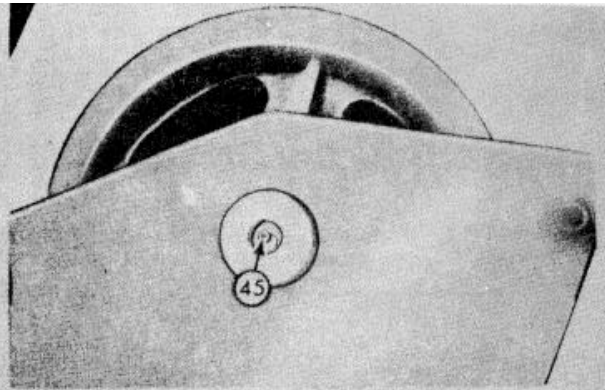

45 LOWER CLOSING SHEAVES

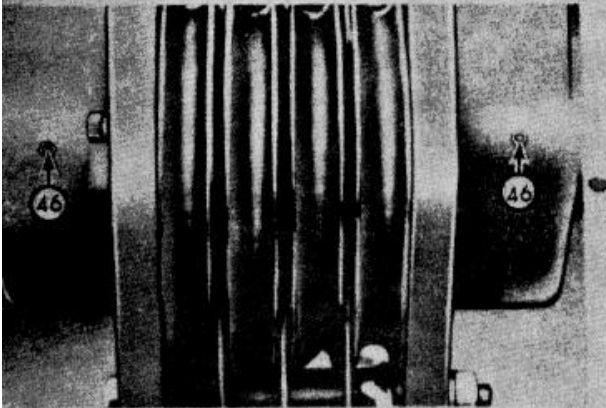


46 BOTTOM SHEAVE BLOCK

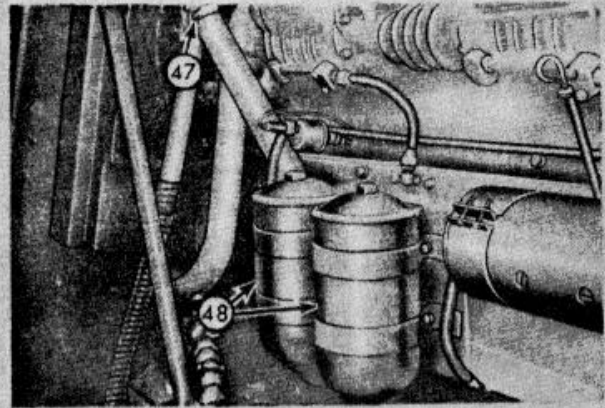

47 CRANKCASE FILL CAP

48 OIL FILTERS

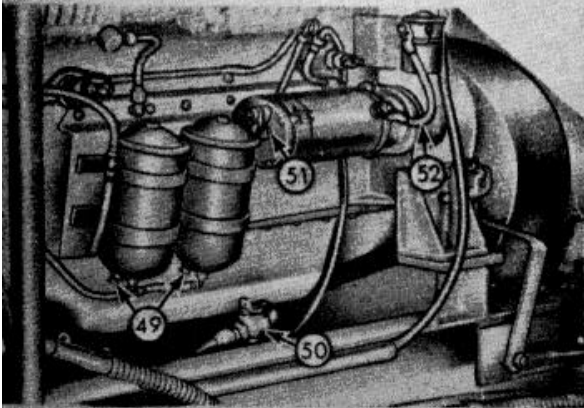


49 OIL FILTER DRAIN PLUGS

50 CRANKCASE DRAIN COCK

51 STARTER OUTBOARD BEARING


52 STARTER INBOARD BEARING

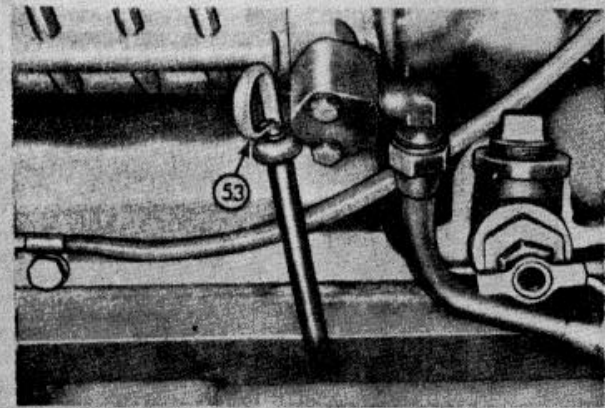


53 CRANKCASE LEVEL DIPSTICK

ME 3810-201-12/3-1 (6)


Figure 3-1. Lubricating point identification (sheet 6 of 14).

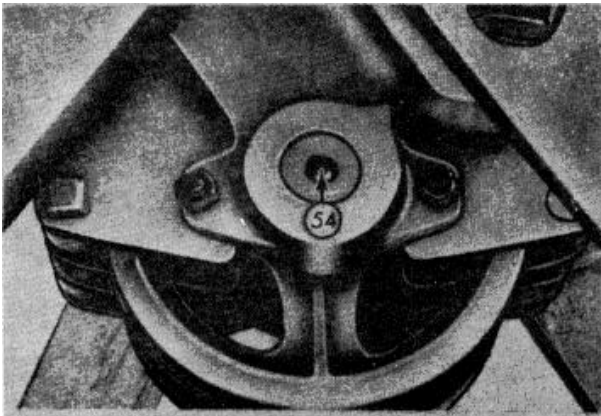


54 UPPER CLOSING SHEAVES

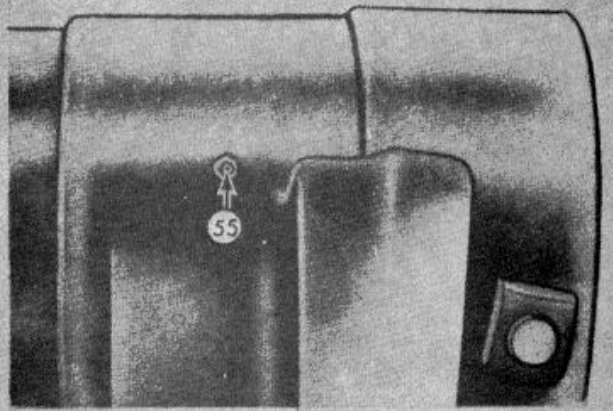


55 BLADE ARM BUSHINGS

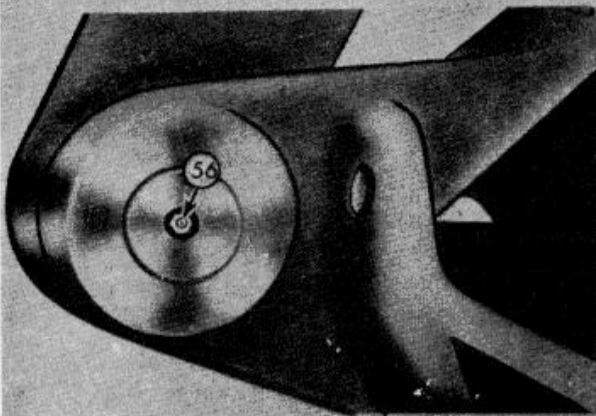

56 CORNER PIN BUSHINGS

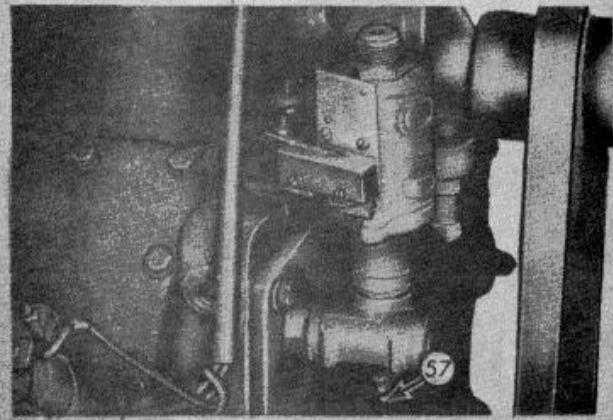


57 GOVERNOR DRIVE GEAR

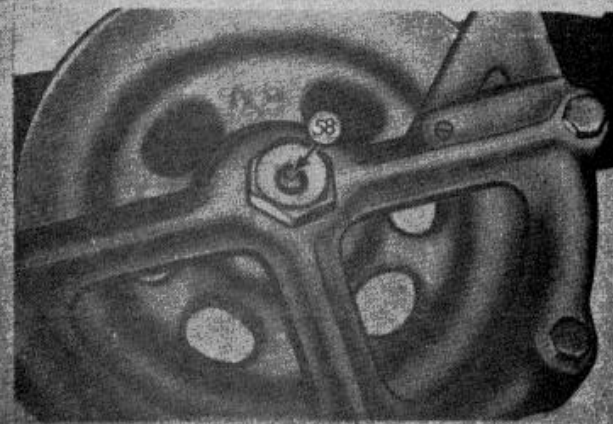


58 DRAGLINE DUMP SHEAVE

ME 3810-201-12/3/17


Figure 3-1. Lubricating point identification (sheet 7 of 14).

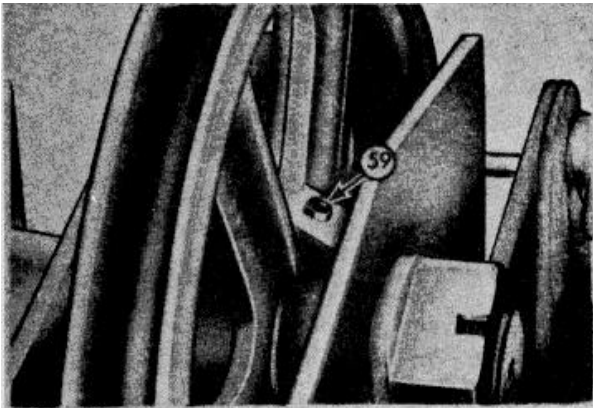


59 HOE STICK SHEAVE BUSHINGS

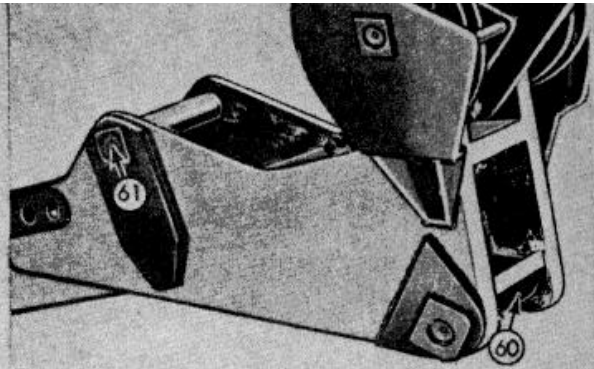


60 HOE STICK BRIDLE BUSHINGS
61 HOE STICK PIN

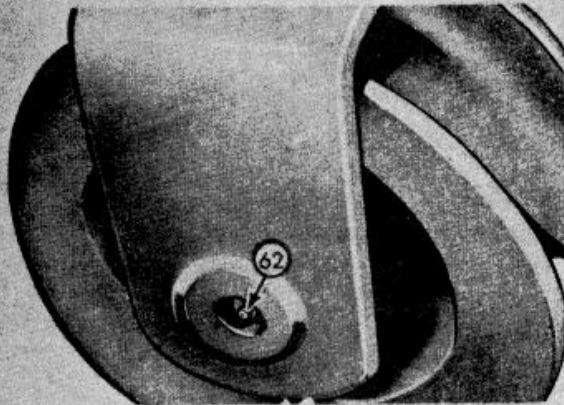


62 SHEAVE PIN

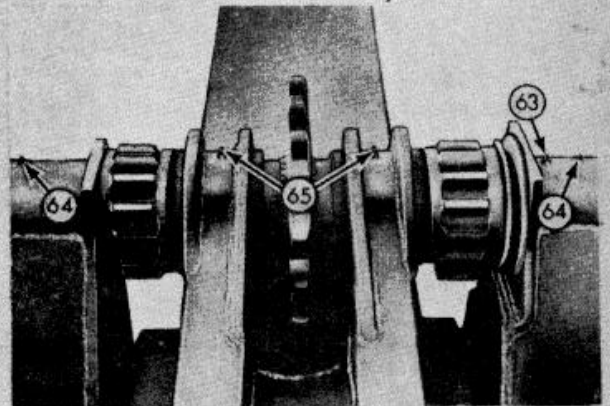

63 SHIPPER SHAFT IDLER SHEAVE
64 SHIPPER SHAFT BUSHINGS
65 SADDLE BLOCK BUSHINGS

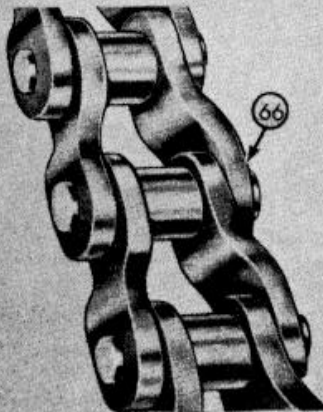


66 CROWD CHAIN

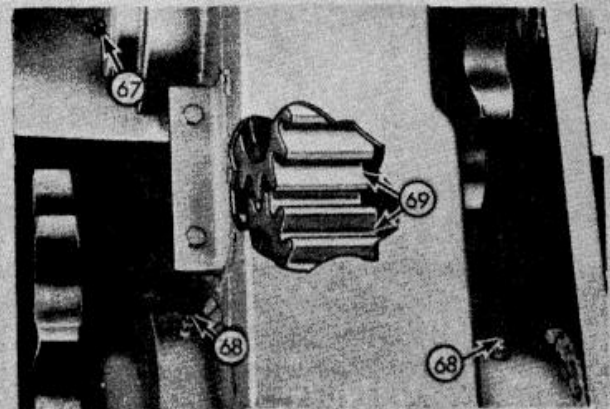


67 CROWD CHAIN IDLER SPROCKET
68 CROWD CHAIN SPROCKET BUSHINGS
69 CROWD REVERSE GEARS

ME 3810-201-12/3-1 ©


Figure 3-1. Lubricating point identification (sheet 8 of 14).

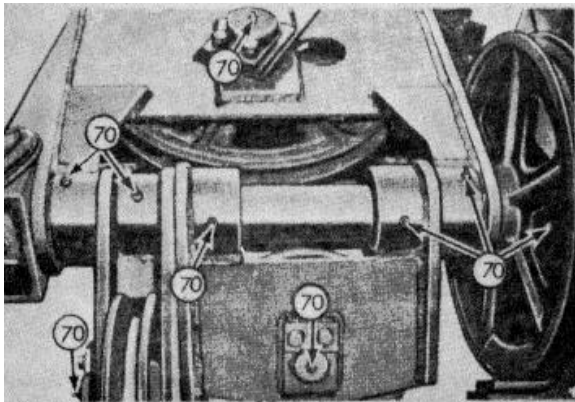


70 HOE GANTRY SHEAVES

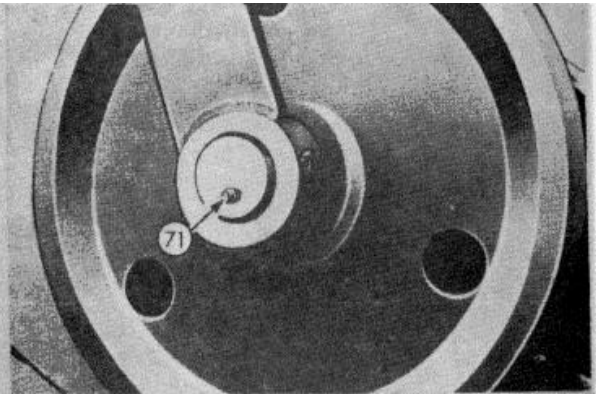


71 HOE BOOM SHEAVE PINS

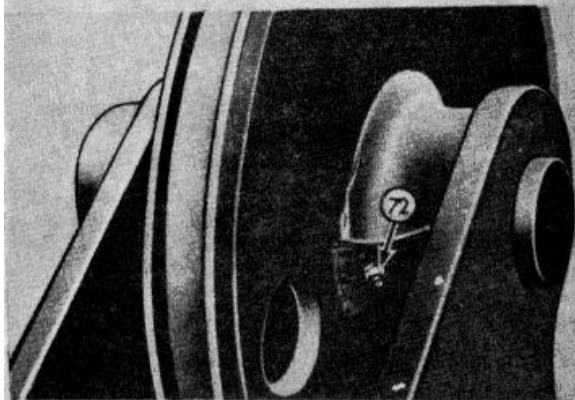


72 BOOM FOOT IDLER SHEAVES

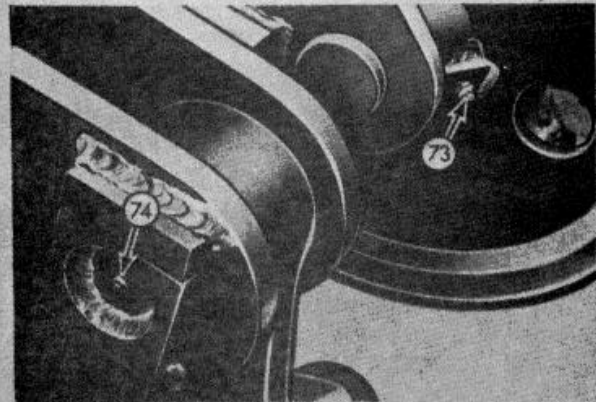

73 BOOM FOOT SHEAVE
74 BOOM FOOT PINS

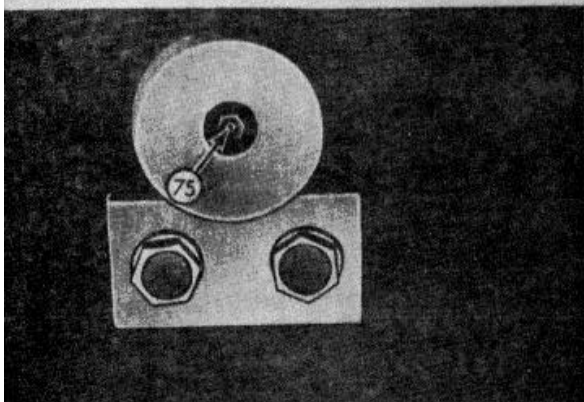


75 PADLOCK SHEAVE PIN

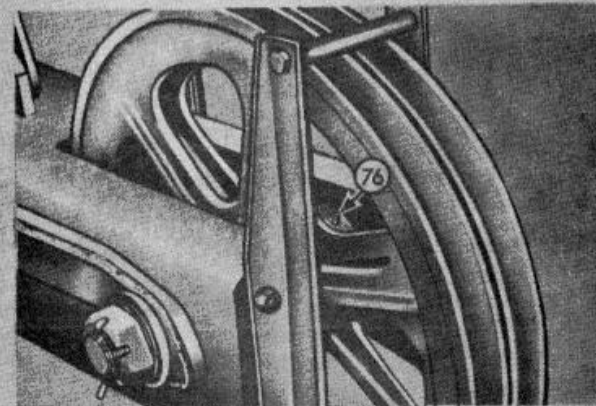


76 BOOM POINT SHEAVES

ME 3810-201-12/3-1 9


Figure 3-1. Lubricating point identification (sheet 9 of 14).

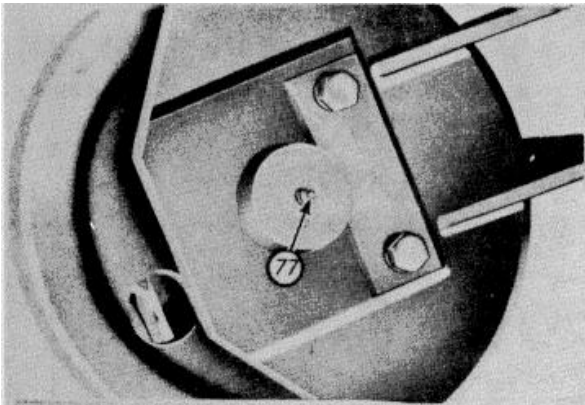


77 BRIDLE BAR SHEAVE BUSHINGS

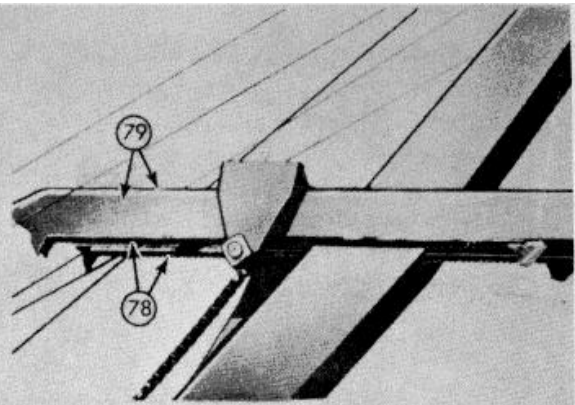


78 DIPPER HANDLE RACKS
79 DIPPER HANDLE SIDES AND TOPS

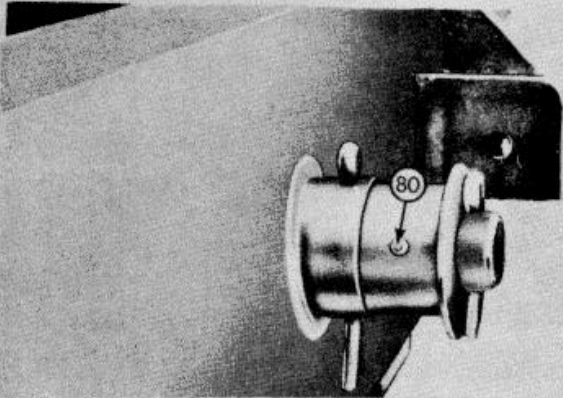


80 DIPPER TRIP LEVER

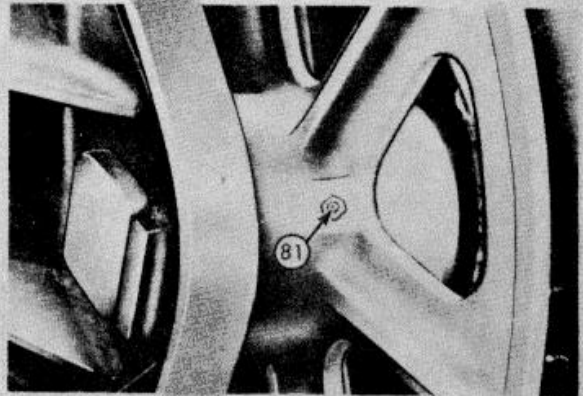

81 PADLOCK SHEAVE

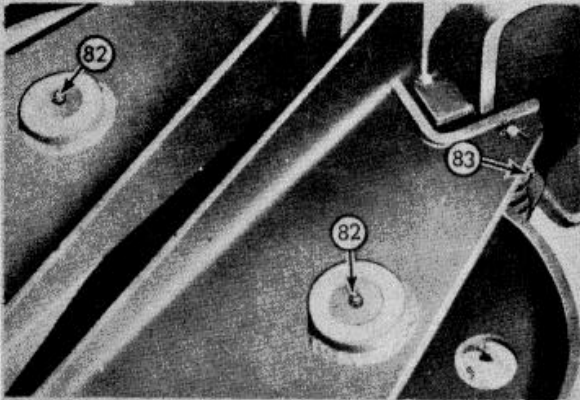


82 VERTICAL SHEAVES
83 PIVOT PIN

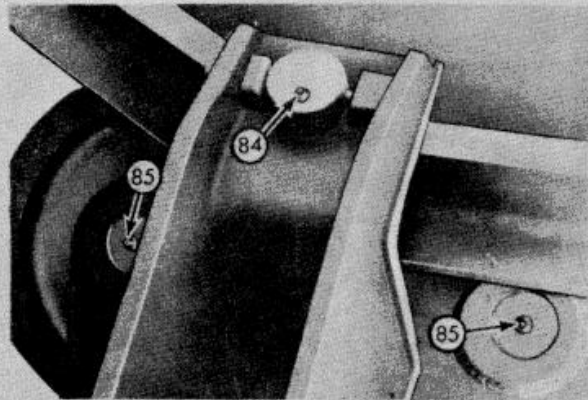


84 PIVOT PIN
85 HORIZONTAL SHEAVES

ME 3810-201-12/3-1 (10)


Figure 3-1. Lubricating point identification (sheet 10 of 14).

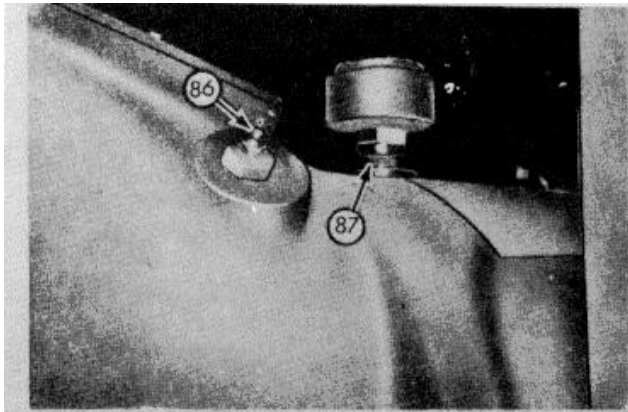


86 POWER TAKE-OFF CLUTCH THROWOUT BEARING
87 POWER TAKE-OFF BREATHER

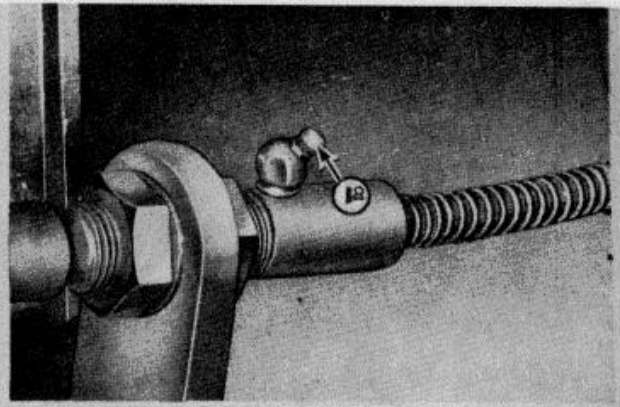


88 CLUTCH CONTROL CABLE

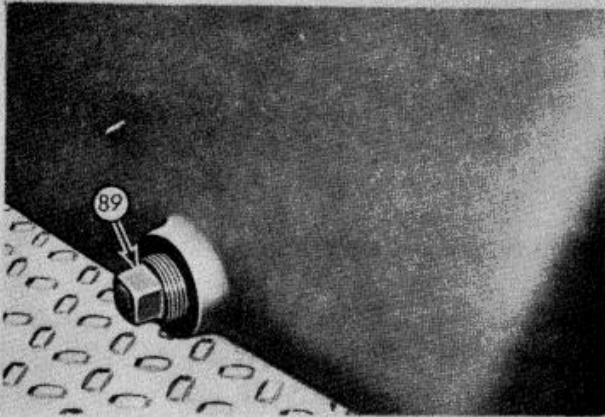


89 POWER TAKE-OFF DRAIN PLUG

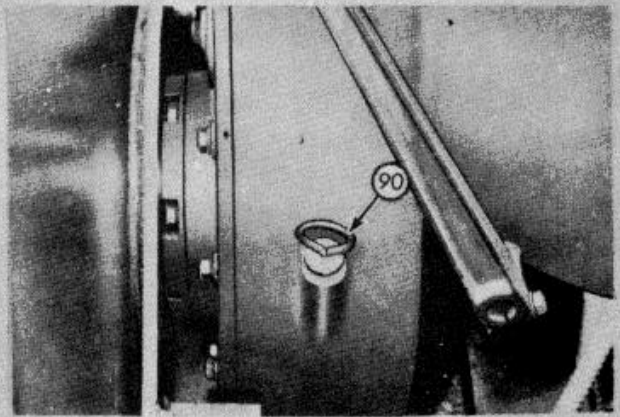

90 POWER TAKE-OFF FILL AND LEVEL DIPSTICK

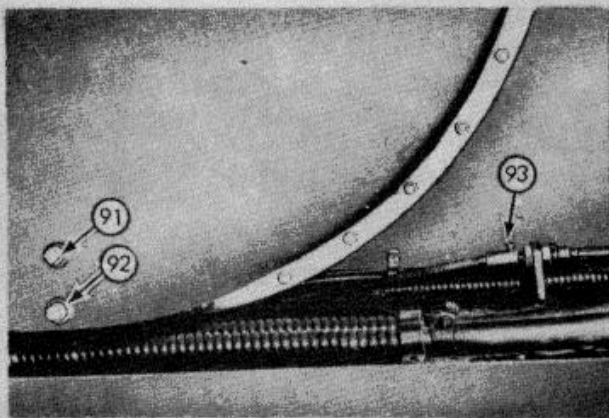


91 CHAIN CASE LEVEL PLUG
92 CHAIN CASE DRAIN PLUG
93 CLUTCH CONTROL CABLE

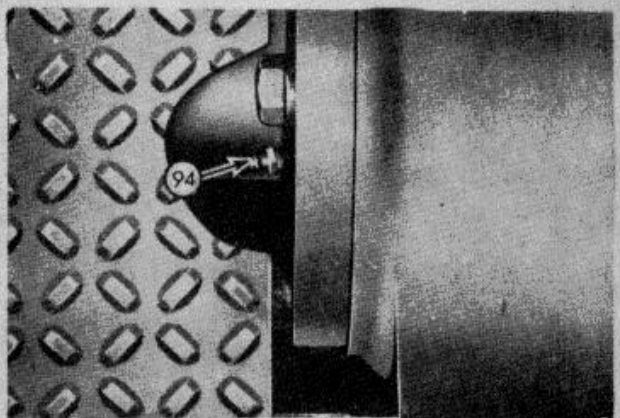


94 JACK SHAFT BEARING

ME 38 10-201-12/3-1 (11)


Figure 3-1. Lubricating point identification (sheet 11 of 14).

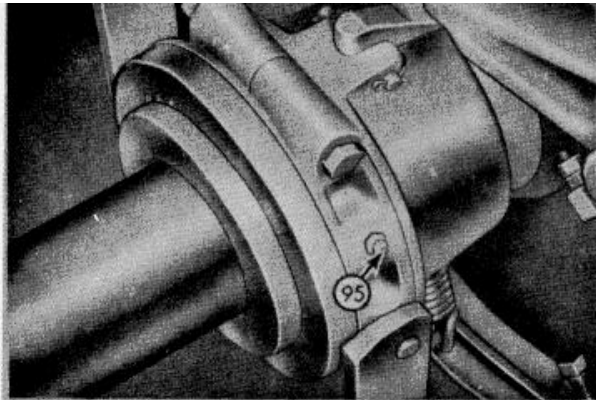


95 JACK SHAFT CLUTCH THROWOUT COLLAR

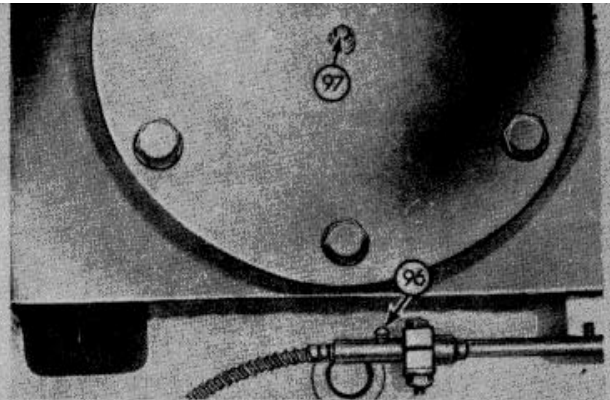


96 THROTTLE CONTROL CABLE
97 DRUM SHAFT OUTBOARD END BEARING

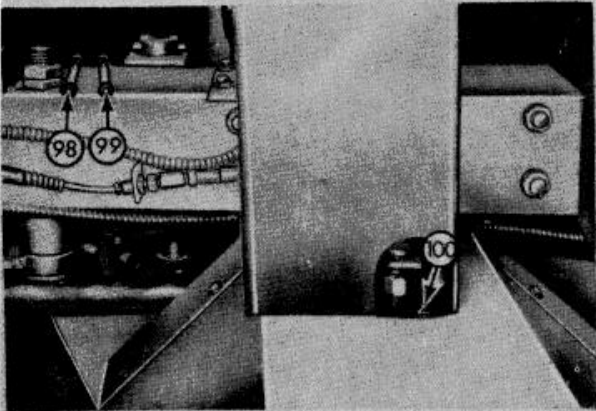


98 SWING GEAR JAW CLUTCH SHIFTER COLLAR
99 SWING GEAR PILOT BEARING
100 VERTICAL PROPEL SHAFT

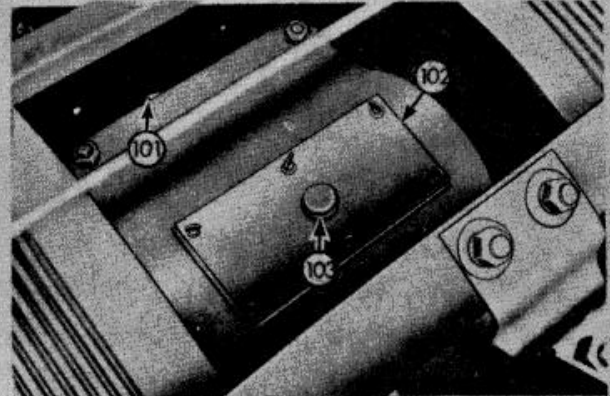

101 JACK SHAFT PEDESTAL CASE LEVEL PLUG
102 JACK SHAFT PEDESTAL CASE INSPECTION COVER AND FILL
103 JACK SHAFT PEDESTAL CASE BREATHER

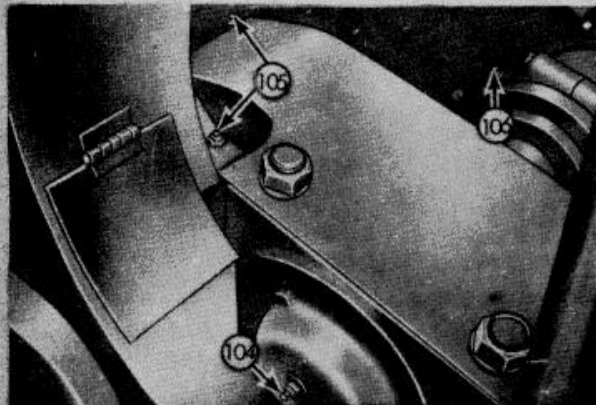


104 JACK SHAFT BEARING
105 INTERMEDIATE HOIST SHAFT BEARINGS
106 JACK SHAFT THROWOUT COLLAR

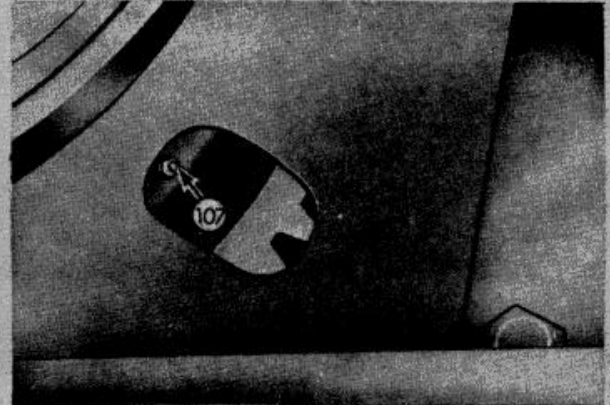


107 SWING GEAR BUSHING

ME 3810-201-12/3-1


Figure 3-1. Lubricating point identification (sheet 12 of 14).

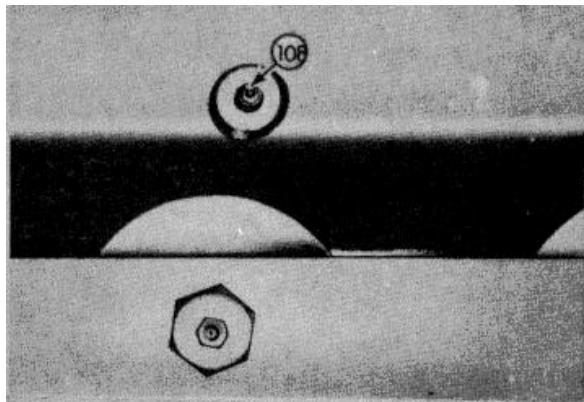


108 LOWER GUDGEON BUSHING

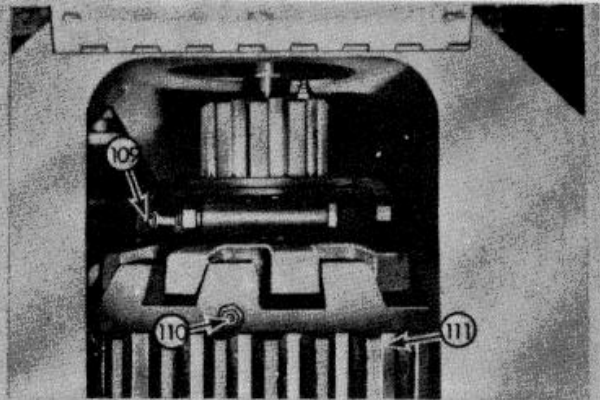


109 PROPEL GEAR JAW CLUTCH SHIFTER COLLAR
110 PROPEL GEAR BUSHING
111 PROPEL GEAR AND SWING GEAR

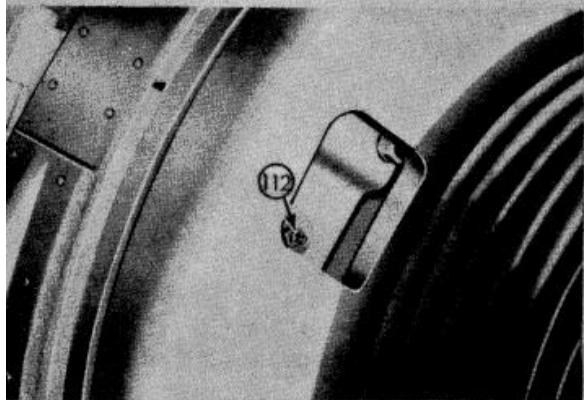


112 PLANETARY PINION GEAR

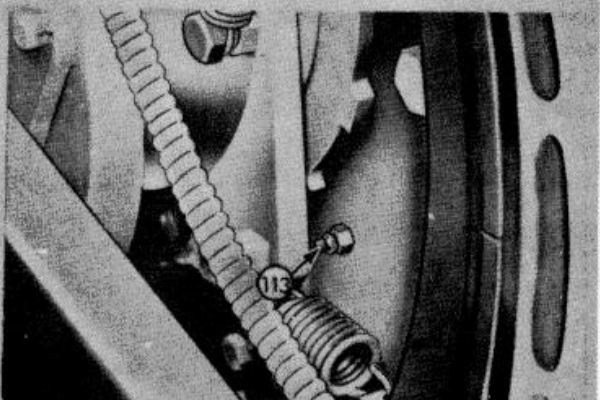

113 DRUM BEARING

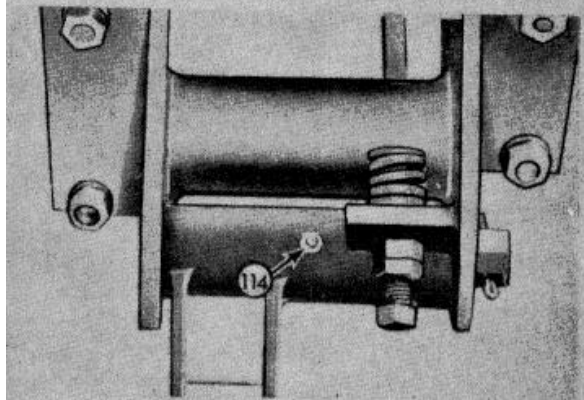


114 DIPPER TRIP LEVER ASSEMBLY

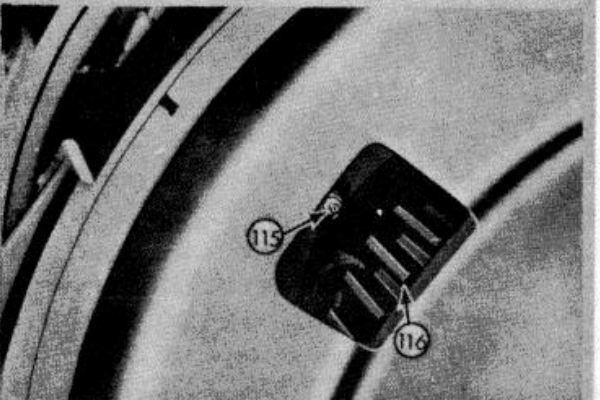


115 DRUM SHAFT BEARING
116 PLANETARY GEAR AND PINIONS

ME 3810-201-12/3-1 13


Figure 3-1. Lubricating point identification (sheet 13 of 14).

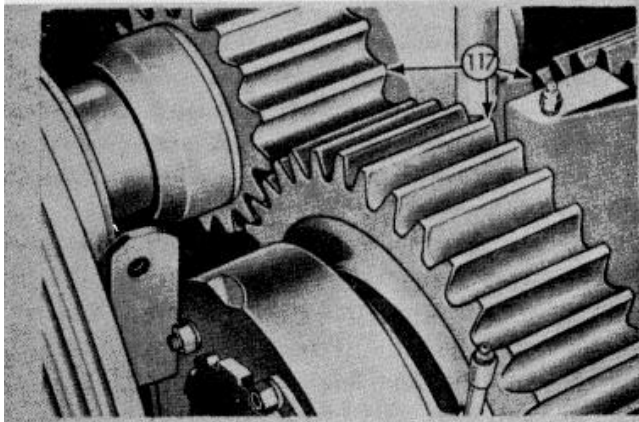


117 INTERMEDIATE HOIST AND PINION SHAFT GEARS

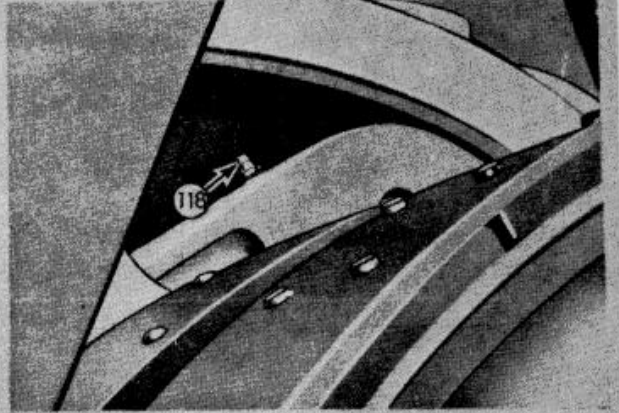


118 SAFETY PAWL PIN

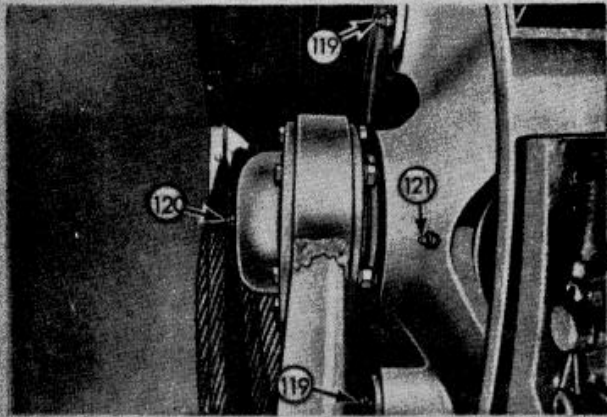


119 PLANETARY PINIONS
120 DRUM SHAFT OUTBOARD END BEARING
121 PLANETARY SPIDER

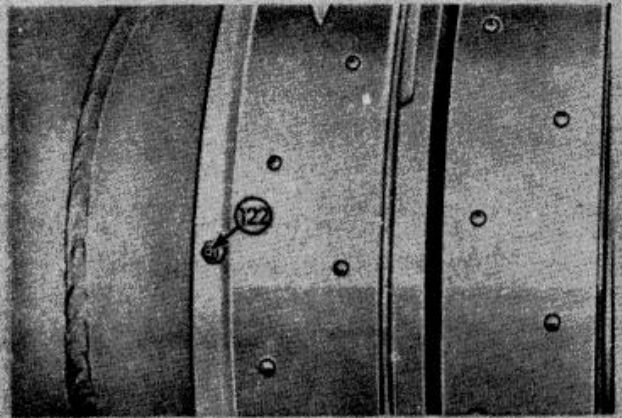

122 BOOM HOIST DRUM BEARING

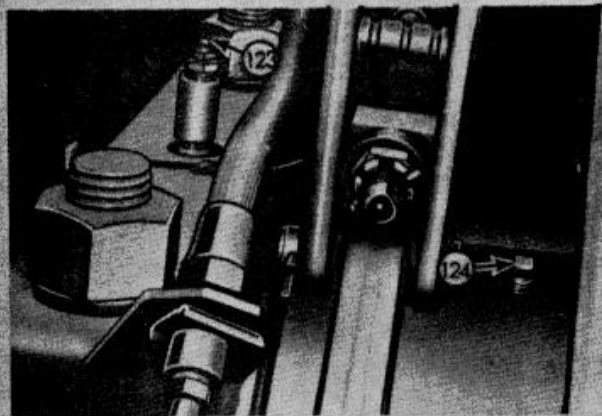

123 DRUM SHAFT BEARING
124 CLUTCH DRUM BEARING PLUG

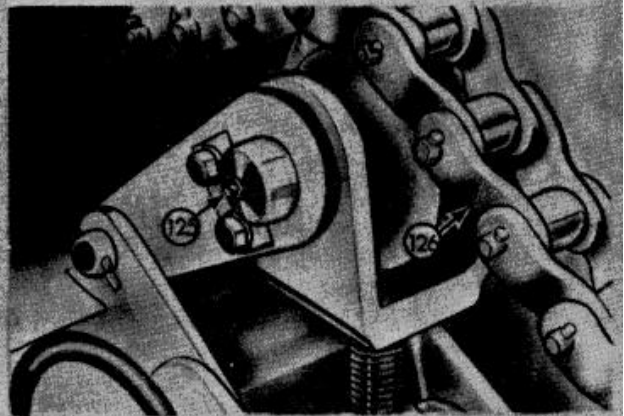

125 CHAIN TIGHTENER
126 CROWD CHAIN

Figure 3-1. Lubricating point identification (sheet 14 of 14).

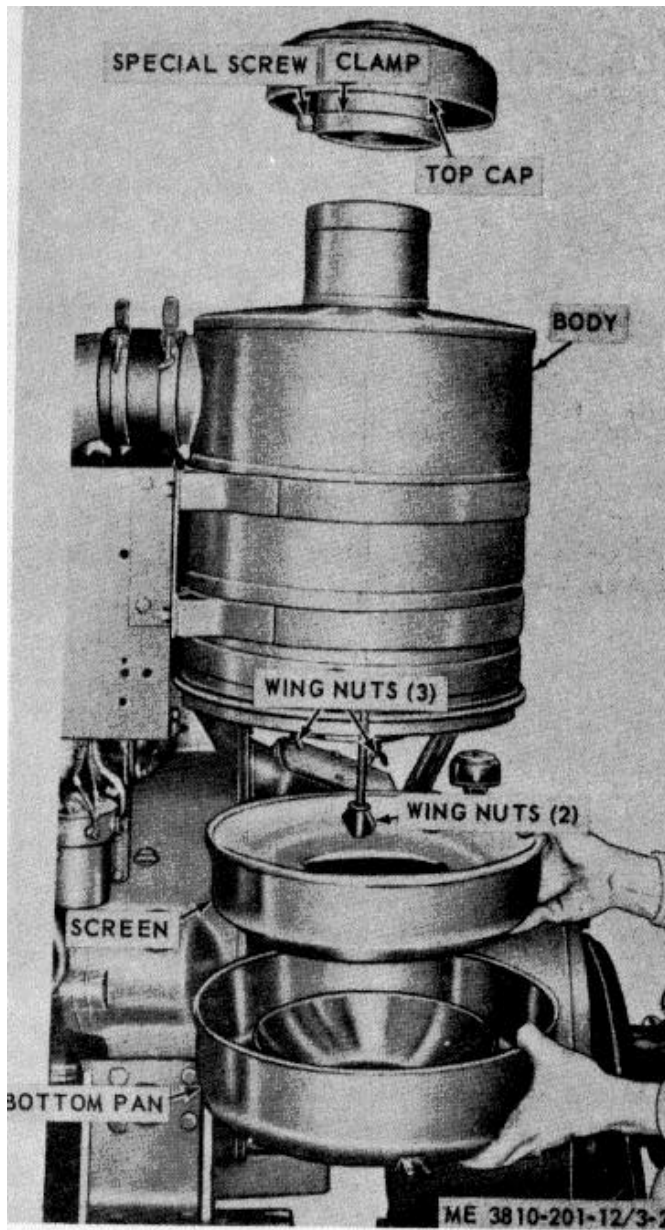


Figure 3-2. Air cleaner service (crane-shovel model 855BG2).'

(c) Remove three wing nuts that secures screen to body, then remove screen.

(d) Clean all parts in an approved cleaning solvent and dry thoroughly.

(e) Install screen on body and secure with three wing nuts.

(f) Refer to LO 53810-201-12 for type and quantity required, then fill bottom pan with oil.

(g) Install bottom pan over screen, then tighten the two wing nuts.

(h) Install top cap on body and secure by tightening special screw in holddown clamp.

(2) Service for crane-shovel model 855BGS (engine 687C-18-ES) .

(a) Refer to figure 3-3 and loosen wing nut; remove cover from air cleaner intake; remove

intake body from sleeve; empty dust, then wipe clean with a clean rag.

(b) Loosen two wingnuts that secures oil cup to body; empty old oil; remove tray from body by pressing down on edges, then remove packings.

(c) Clean all parts with an approved cleaning solvent and dry thoroughly.

(d) Install intake body on sleeve; install cover on body, and secure with wing nut.

(e) Position one packing and tray on air cleaner body and press in place.

(f) Refer to LO 5-3810-201-12 for type and quantity then fill cup with oil.

(g) Position packing and oil cup over tray, then tighten the two wing nuts.

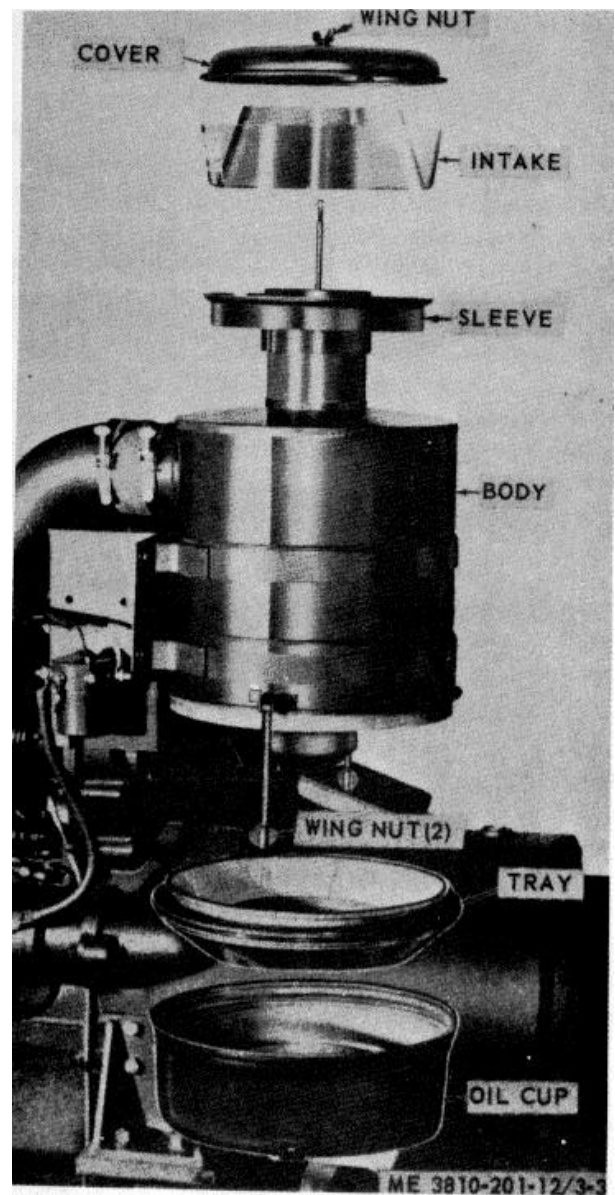


Figure 3-3. Air cleaner service (model 855BG) (engine 687C-18-ES).

f. *Engine Oil Filter Service.*

(1) *For engine model 687C-18-ES.* The two engine oil filters are located on left hand side of engine at rear of cab. Service as follows:

(a) Refer to LO 5-3810-201-12 for correct interval, then loosen bolt (fig. 3-4); remove cover, spring, and gasket. Discard gasket.

(b) Remove pipe plug and drain filter.

(c) Remove and discard filter element.

(d) Clean cover, spring, and filter shell by wiping away all sludge with a cloth wet in an approved cleaning solvent, then dry thoroughly.

(e) Install pipe plug.

(f) Insert new filter element in shell; position gasket in cover, then install cover and spring on shell. Secure by tightening bolt.

Note.

Service remaining filter in a similar manner.

(2) *For engine model D333TA.* These two filters are mounted on a common base that is installed on left hand side of engine. Service as follows:

(a) Refer to LO 5-3810-201-12 for interval, then remove drain plug (fig. 3-5) and drain the filters.

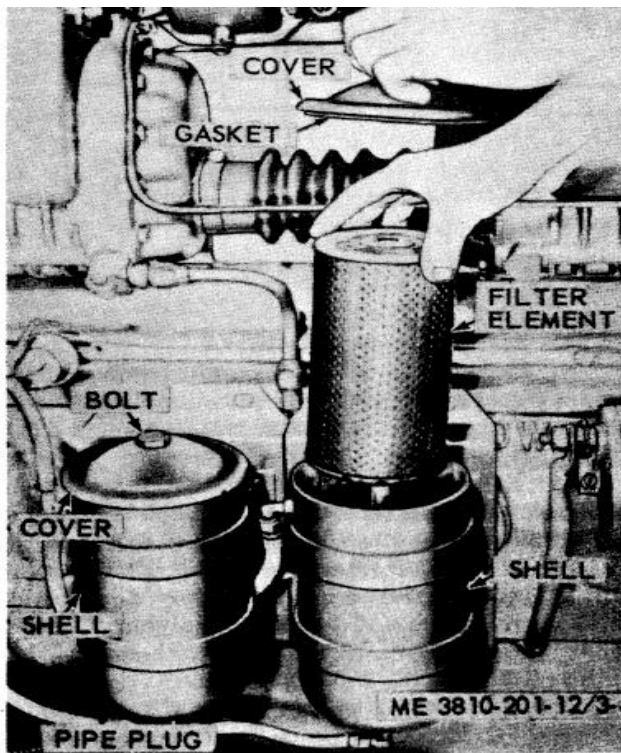


Figure 3-4. Engine oil filter service for model 687C-18-ES.

(b) Loosen the two cover screws; remove cover from both cases, then remove and discard used filter element from both cases.

(c) Remove three capscrews, lockwashers, and clamps, then remove both cases from filter base.

(d) Remove both gaskets from filter base.

(e) Clean all removed parts in an approved cleaning solvent, dry thoroughly, then use a cloth dampened with solvent and wipe all sludge from filter base.

Note.

Discard all unserviceable gaskets.

(f) Install drain plug in filter base; install serviceable gasket in both case grooves in filter base, then position cases on base and secure with clamp, lockwasher, and capscrew (3).

(g) Install new filter element in both cases, then position cover on case and secure with cover screw.

(3) *All models.* After engine oil filters are serviced fill crankcase; (LO 5-3810-201-12) start engine (para 2-10), and run for about five minutes at a fast idle. Inspect oil filters for leaks, then stop engine (para 2-11) and check oil level. Add oil when necessary.

g. *Engine Oil Strainer Service (Model 687C-18-ES Only).*

(1) Remove drain plug (fig. 3-6) and drain oil strainer.

(2) Remove two nuts, lockwashers, and cover.

(3) Remove cover gasket and the element spring, then lift filter element from housing. Discard cover gasket.

(4) Clean all parts in an approved cleaning solvent and dry thoroughly.

(5) Visually inspect element spring for break or other defect, such as loss of tension. Replace a defective spring.

(6) Position filter element in housing; position spring on filter element; position new gasket on cover, then place cover on housing and secure with two lockwashers and nuts.


h. *Chain Case Fill Cap and Breather Service.*

(1) Refer to LO 5-3810-201-12 for interval, then remove fill cap (fig. 3-7), wash in an approved cleaning solvent, and dry thoroughly with low pressure compressed air.

(2) Inspect breather portion of fill cap for damage to filter screen wire, and assure removal of all foreign matter.

(3) Replace a defective fill cap breather.

(4) Refer to current lubrication LO 5-3810-201-12 for instructions on changing of oil in chain case.

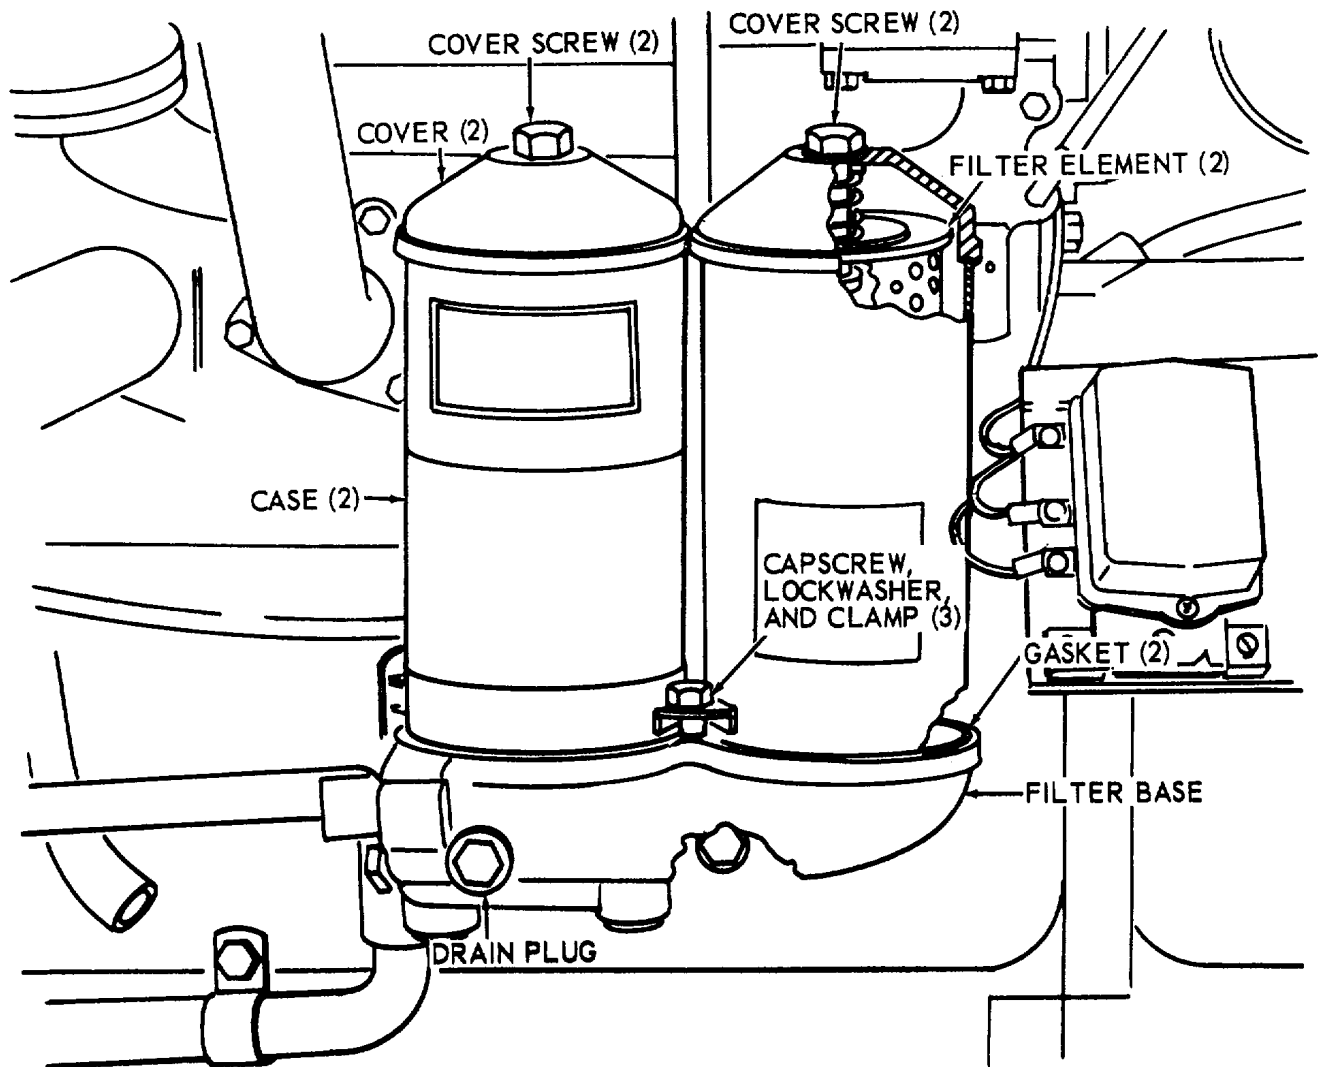

ME 3810-201-12/3-5

Figure 3-5. Engine oil filter service for engine model D333TA.

i. Power Take-Off Breather Service and Cover Removal.

(1) Refer to current lubrication order LO 5-3810-201-12 for correct interval, then remove and service power take-off breather as directed below.

(2) Refer to figure 3-8, remove screw and breather cover, then remove filter body from short nipple by turning body counterclockwise. Cover short nipple with a clean cloth to prevent entry of contaminating material into power take-off.

(3) Clean all parts in an approved cleaning solvent then dry thoroughly with low pressure compressed air.

(4) Inspect filter wire mesh for damage, or other defect to body. Replace a defective filter body.

(5) Install in reverse order.

(6) Refer to lubrication order LO 5-3810-201-12 for interval and lubricant, then change as required.

j. Starter Motor Inboard Bearing Service.

Refer to LO 5-3810-201-12 for correct interval and lubricant, then service as described below.


(1) Remove starter motor (para 3-87).

(2) Clean the starter motor and bendix drive with an approved cleaning solvent. Use care not to allow solvent inside motor, then dry thoroughly.

(3) Inspect all parts visually for signs of wear or damage. Replace a defective starter motor.

(4) Lubricate as directed in LO 5-3810-201-12.

(5) Install starter motor (para 3-87).

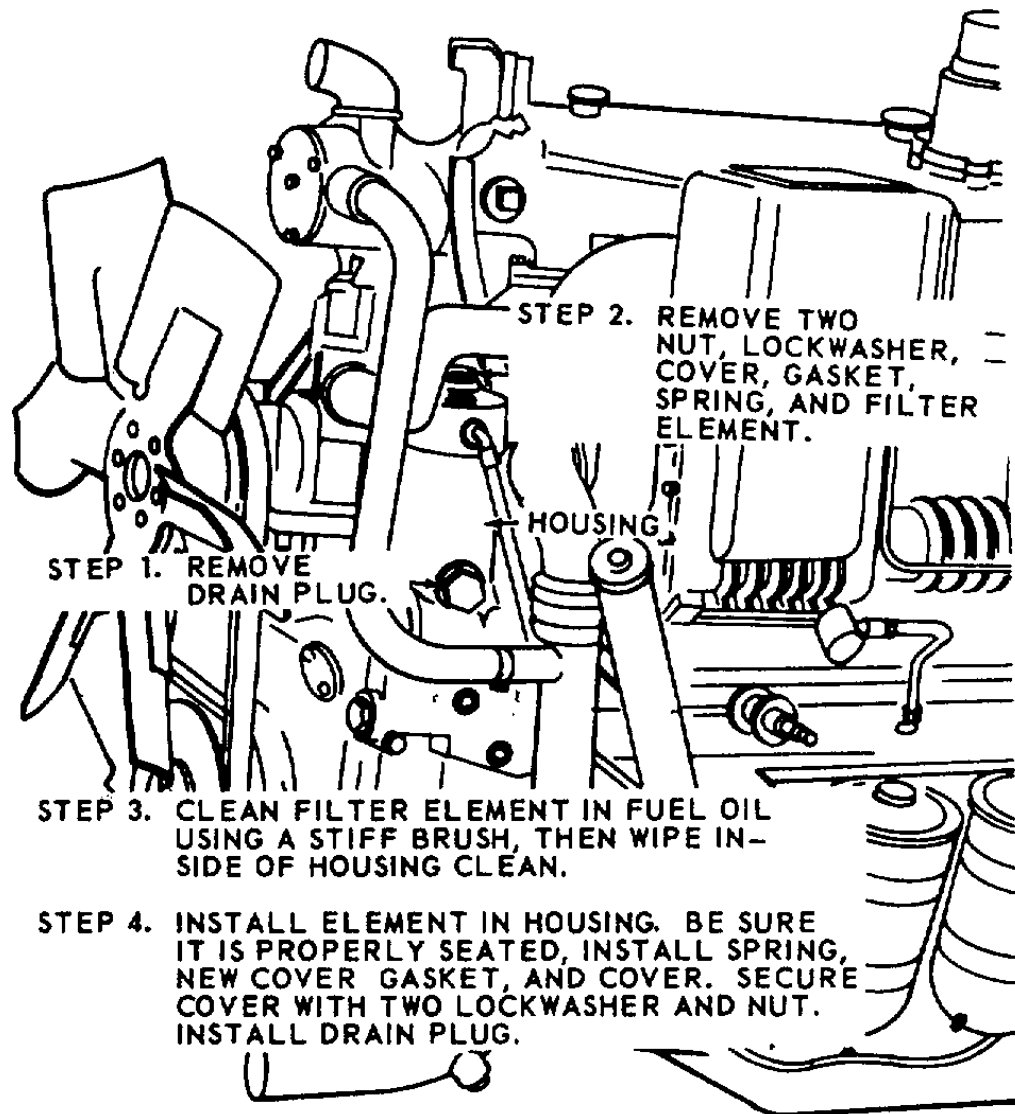

ME 3810-201-12/3-6

Figure 3-6. Engine oil strainer service (model 687C-18-ES only).

NOTE: REMOVE DRAIN PLUG AND DRAIN OIL AS REQUIRED BY CURRENT LUB-
RICATION ORDER. REFILL THROUGH FILL PIPE UNTIL OIL RUNS OUT
LEVEL PLUG

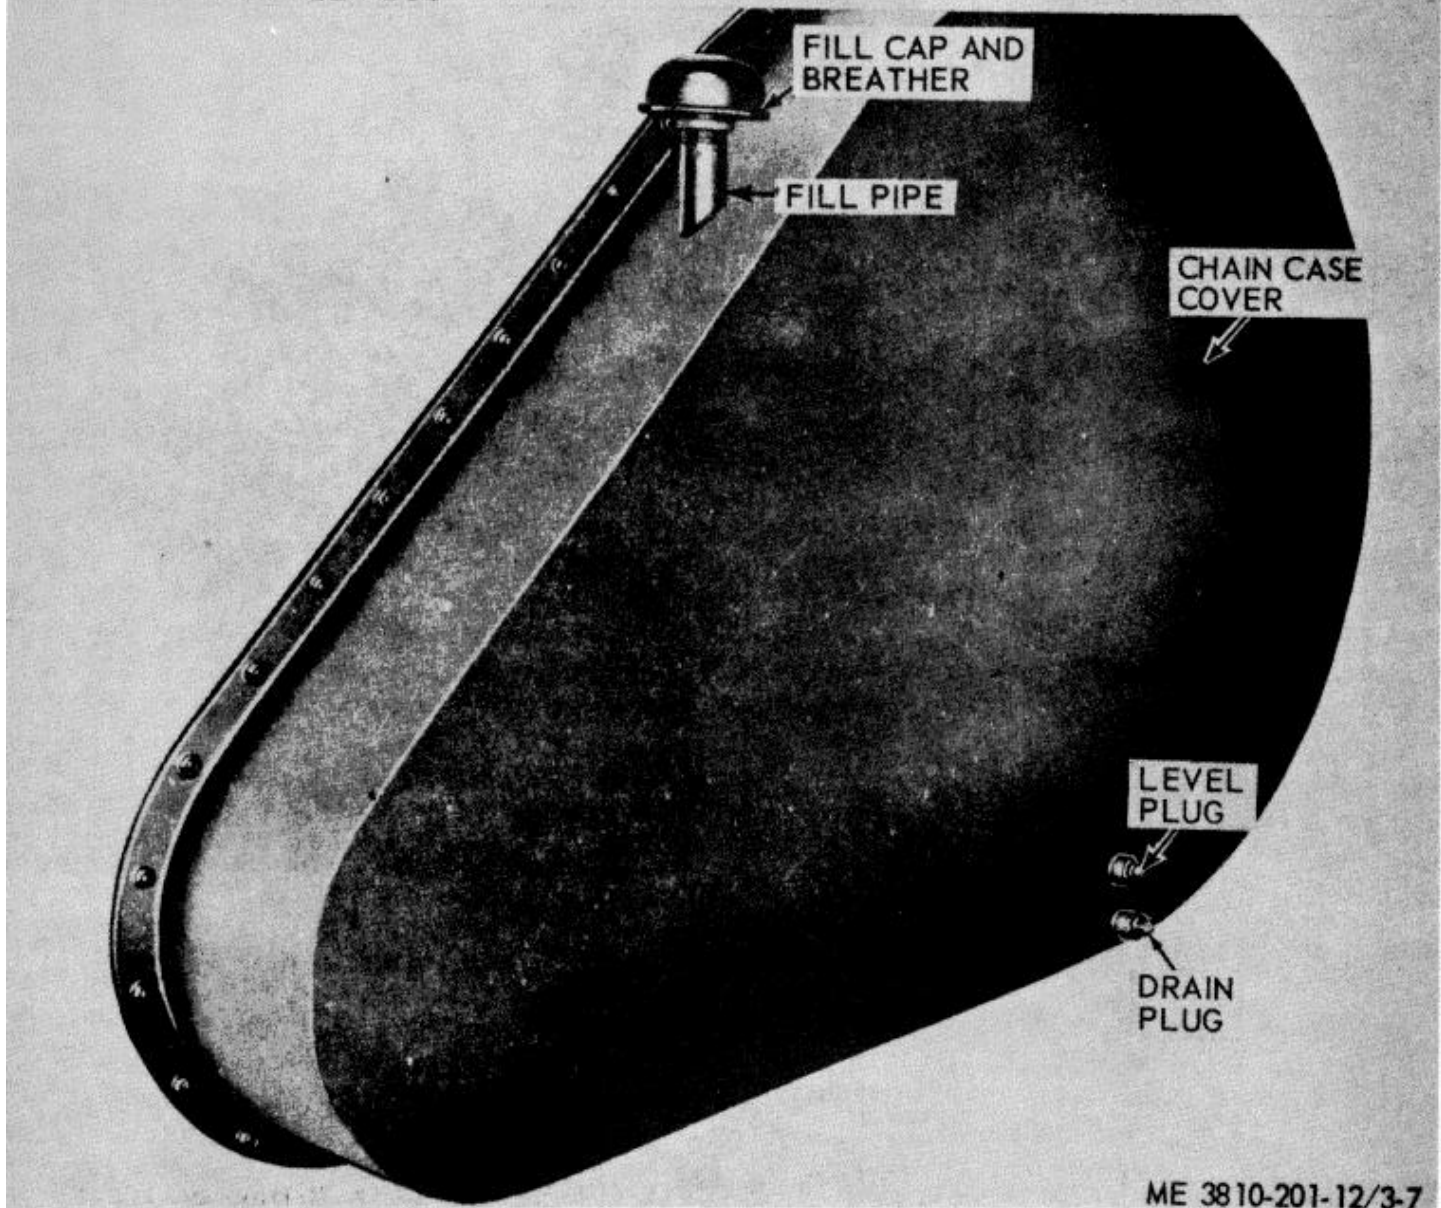


Figure 3-7. Chain case fill cap and breather service.

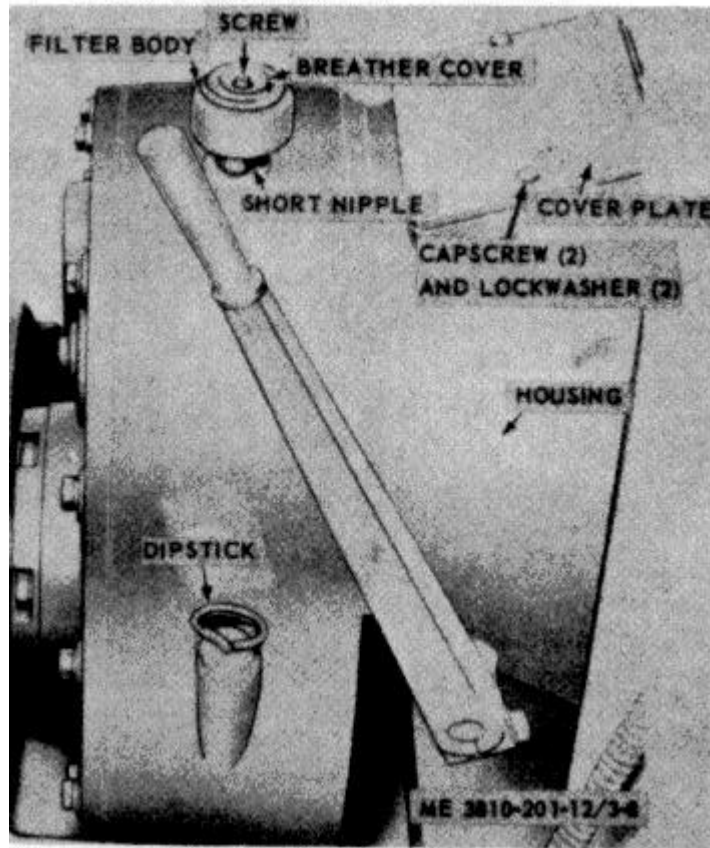


Figure 3-8. Power take-off breather service and cover removal.

Section III. PREVENTIVE MAINTENANCE CHECKS AND SERVICES

3-5. General

To insure that the crane-shovel is ready at all times, it must be inspected systematically so that defects may be discovered and corrected before they result in serious damage or failure. The necessary preventive maintenance checks and services to be performed are listed and described in paragraph 3-6. Then item numbers indicate the sequence of minimum inspection requirements. Defects discovered during operation of the unit will be noted for future correction, to be made as soon as operation has ceased. Stop operation immediately if a deficiency is noted during operation which would damage the equipment if operation were continued. All deficiencies and shortcomings will be

recorded together with the corrective action taken on DA Form 2404 at the earliest possible opportunity.

3-6. Preventive Maintenance Checks and Services

Table 3-2 contains a listing of the minimum inspection requirement for preventive maintenance checks and services. This table indicates by an X in the appropriate column (before, during, after, weekly, monthly, or quarterly) when the inspection should be performed. A quarterly interval for the crane-shovel unit is equal to three months, or 500 hours of operation, whichever comes first.

Table 3-2. Preventive Maintenance Checks and Services

Item number	Interval				Org.		B--Before operation	A-After operation	M-Monthly
	Operator				M	Q	D-During operation	W-Weekly	Q-Quarterly
	Daily						Item to be inspected	Procedure	Reference
	B	D	A	W					
1	X		X			LUBRICATE IN ACCORDANCE WITH CURRENT Engine Fuel Tank	LUBRICATION ORDER (LO 5-3810-201-12) Check fuel level. Add fuel when necessary.	(para 2-1c)	
					X		Check for leaks in tank or fittings. Replace a defective fuel tank.	(para 3-71)	
2	X		X			Heater Fuel Tank	Check fuel level. Add fuel when necessary. Clean strainer.	(para 3-24)	
					X		Check for leak in tank or fittings. Replace a defective tank.	(para 4-46)	
3				X		Batteries	Check level of electrolyte. Proper level is 3/8 inch above plates. Add water when necessary. (In freezing weather run engine at least an hour after adding water). Assure that ground and battery cables are tight, and that no corrosion is forming on cables or posts. Assure that specific gravity of electrolyte is 1.250 or more.	(para 3-16)	
							Charge weak battery. Replace defective battery.	(para 3-81)	
4	X					Track and Hook Rollers	Visually inspect for loose hardware, excessive wear, or improper adjustment. Adjust track; proper adjustment is 1 1/2 inch minimum sag. Adjust hook rollers.	(para 3-41) (para 3-39)	
					X		Replace defective hook rollers. Replace track.	(para 3-125 and 3-126) (para 3-141)	
5		X				Crowd Chain, Tightener, and reverse mechanism	Check operation and adjustment. Adjust if necessary. Report defective chain to organizational maintenance. Report defective gears to direct support maintenance.	(para 3-35)	
					X		Replace defective crowd chain.	(para 4-3)	
6	X	X				Lighting	Check all lighting. Clean all lenses, replace all defective lamps.	(para 3-15)	
					X		Replace defective panel, floodlights, or dome lights.	(para 3-181 through 3-183)	
7	X		X			Engine Oil	Check engine oil level. Add oil when necessary (See Lubrication Order LO 5-3810-201-12).		
					X		Check external oil lines and fittings. Tight loose fittings. Replace defective fitting or hose.	(para 3-65)	
8				X		Engine Fuel Filters	Drain sediment. Clean or replace filter element.	(para 3-13) (para 3-13)	
					X		Inspect fuel lines for leaks or defective fittings. Replace defective fitting or hose.	(para 3-74 or para 3-75)	
9				X		Heater Fuel Pump	Clean screen in an approved solvent and dry with compressed air. Check. Replace a defective screen.	(para 3-26)	
				X			Check for leak in line or pump. Replace a defective pump.	(para 4-46)	
10	X					Radiator	Check coolant level. Add coolant when	(para 3-20)	

Table 3-2. Preventive Maintenance Checks and Services

Item number	Interval				Org.		B--Before operation	A-After operation	M-Monthly
	Operator				M	Q	D-During operation	W-Weekly	Q-Quarterly
	Daily						Item to be inspected	Procedure	Reference
	B	D	A	W					
11		X				X	Engine Clutch	below filler cap). Drain flush, neutralize, and refill when necessary. Check for proper anti-freeze solution, clean radiator grill and core of all entrapped material. Correct all coolant leaks in hose or fittings. Report a defective radiator to direct support maintenance.	(para 3-105)
12				X		X		Check for adjustment. Adjust if necessary. Check lever and linkage for defects. Replace defective parts.	(para 3-9)
13	X					X	Fire Extinguisher	Check adjustment of fan, generator, or alternator drive belts. Correct adjustment will allow belt to depress 1/2 to 3/4 inch midway between pulleys. Replace defective belts.	(para 3-108)
14	X	X				X	Instruments	Check that extinguisher is in proper location and that seal is unbroken. Inspect for full charge, loose mounting, or broken seal. Check that no glass is broken and after starting engine check that all are operating correctly. Normal readings are as follows: TACHOMETER: with engine 687C-18-ES 1, 700 rpm with engine D333TA 2, 000 rpm OIL PRESSURE-15 to 35 psi WATER TEMPERATURE-160° to 180°F AMMETER-at 0, or in charge area.	(para 3-21 through 3-23)
15	X					X	Hydraulic System	Replace defective instruments.	(para 2-24)
16		X				X	Winterization System	Check fluid level in reservoir. Service hydraulic reservoir. Visually inspect lines and cylinders for leaks. Report defects to organizational maintenance.	(para 2-24)
17	X					X	Windshield Wiper	Replace defective lines, fittings, or cylinders. Check heater operation, duct controls, and defroster. Report defects to organizational maintenance.	(para 3-147)
18		X				X	Control Pedals and Levers	Repair or replace defective heaters, ducts, or controls. Check that windshield wiper operates properly. Replace a defective blade. Report defective wiper to organizational maintenance. Replace defective wiper motor. Check for proper operation and adjustment. Report defects to organizational maintenance.	(para 3-149, 3-150 and 3-154)

Table 3-2. Preventive Maintenance Checks and Services

Item number	Interval					Org.		B--Before operation	A-After operation	M-Monthly
	Operator				M	Q	D-During operation	W-Weekly	Q-Quarterly	
	B	D	A	W			Item to be inspected	Procedure	Reference	
19						X			Adjust, repair, or replace control levers, pedals, or linkage.	(para's 3-119 through 3-123)
20	X					X	Hoist Cables	Inspect for excessive wear or fraying of strands. Replace defective cables.	Inspect for excessive wear or fraying of strands. Replace defective cables.	(para 3-43)
				X			Main Hoist and Boom Hoist	Visually inspect for frayed cables, excessive wear, or kinks. Replace defective cables. Inspect brake and clutch bands on hoist drums. Adjust as necessary. Report defective clutch or brakes to organizational maintenance.	Visually inspect for frayed cables, excessive wear, or kinks. Replace defective cables. Inspect brake and clutch bands on hoist drums. Adjust as necessary. Report defective clutch or brakes to organizational maintenance.	(para 3-43) (para's 3-30 through 3-32)
21		X				X	Jackshaft	Replace defective clutch or brake linings.	Replace defective clutch or brake linings.	(para's 3-128, 3-129, and 3-135)
						X		Check swing clutches for excessive wear and adjustment. Adjust as necessary.	Check swing clutches for excessive wear and adjustment. Adjust as necessary.	(para 3-29)
22						X	Engine Valve Mechanism	Replace defective clutch shoes as required.	Replace defective clutch shoes as required.	(para 3-128)
						X		Every 1, 000 hours check valve adjustment. Correct setting for Model 687C-18-ES is:	Every 1, 000 hours check valve adjustment. Correct setting for Model 687C-18-ES is:	(para 3-60)
								0.012 inch (Hot)	0.012 inch (Hot)	(fig 3-42)
								0.014 inch (Cold)	0.014 inch (Cold)	
								Model D333TA is:	Model D333TA is:	
								Intake 0.015 inch (Hot)	Intake 0.015 inch (Hot)	(fig. 3-43)
								0.017 inch (Cold)	0.017 inch (Cold)	
								Exhaust 0.025 inch (Hot)	Exhaust 0.025 inch (Hot)	
								0.028 inch (Cold)	0.028 inch (Cold)	

Section IV. OPERATOR'S MAINTENANCE

3-7. General

This section contains information necessary for operator/crew maintenance of the crane-shovel, as authorized by the maintenance allocation chart.

3-8. Engine Inspection and Service

a. *Inspection.* Visually inspect engine compartment for cleanliness. Investigate all accumulations of oil, dirt, or dust, to assure that no lubricant or coolant leakage exists. Assure that all external lines, fittings, or accessories are securely mounted and that no hardware or accessory is missing. Report all defects to organizational maintenance.

b. *Service.*

(1) Refer to current lubrication order LO 5-3810-201-12 for interval and type of lubricant to service engine crankcase.

(2) Refer to paragraph 3-4 for service instructions on oil filters, air cleaner, or oil strainer.

3-9. Engine Clutch Adjustment

a. *General.* The engine clutch, when engaged, transfers power from engine to power take-off output shaft which actuates the operating mechanisms. A drive chain connects engine drive sprocket to main drive sprocket. Clutch control is through adjustable linkage from lever at operator's station to power takeoff. The clutch is in need of adjustment when it will not pull the load; it gets hot, or clutch control lever jumps out of the engaged position.

b. *Adjusting the Engine Clutch.*

(1) Refer to figure 3-8, remove two capscrews, lockwashers, and cover plate from housing.

(2) Disengage the clutch (para 2-8 aq) and turn pressure plate until lock (fig. 3-9) is up.

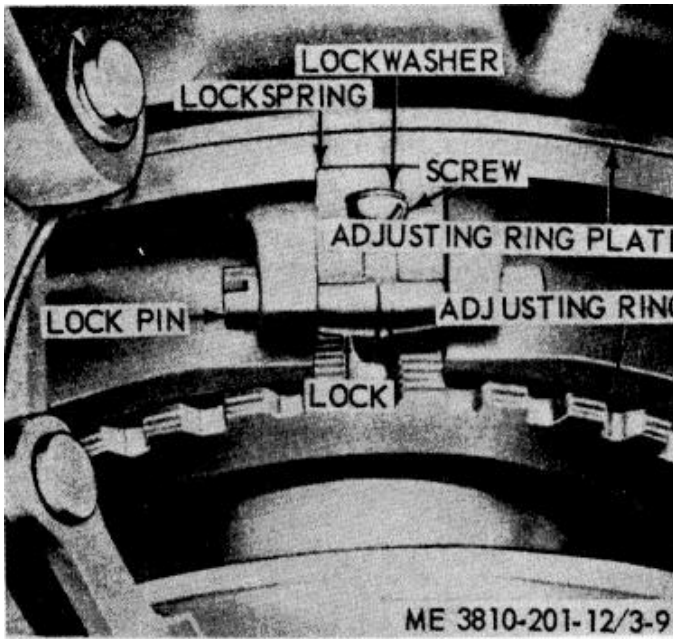


Figure 3-9. Engine clutch adjustment.

(3) Remove screw, lockwasher, and lock spring from the adjusting ring.

(4) Unlock the adjusting ring by turning lockpin 1/4 turn counterclockwise.

(5) Turn the adjusting ring clockwise to tighten clutch, counterclockwise to loosen.

(6) Test clutch by engaging clutch control lever. When the clutch is properly adjusted, a distinct pressure is required to engage clutch control lever.

(7) When adjustment is correct, lock adjusting ring by turning lock pin 14 turn clockwise.

(8) Position lock spring in the adjusting ring and secure with lockwasher and screw.

(9) Position cover plate (fig. 3-8) on housing and secure with two lockwashers and capscrews.

3-10. Engine Oil Filter Service


Refer to paragraph 3-4f and service engine oil filters.

3-11. Engine Air Cleaner Service

a. *Oil Bath Type.* Refer to paragraph 3-4e and service oil bath type engine air cleaners.

b. *Dry Type.* The rear mounted dry type engine air cleaner, used on engines model D333TA, contains a replaceable filter element which can be removed for cleaning by compressed air, or by washing. Service as follows:

(1) Loosen two wing nuts (fig. 3-10) and remove cover from air cleaner.

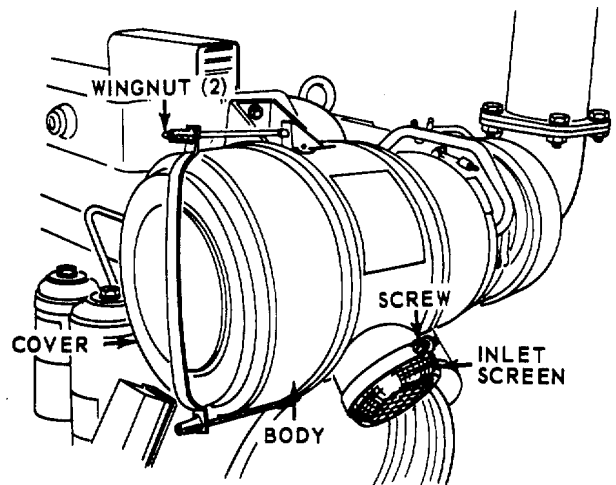

ME 3810-201-12/3-10

Figure 3-10. Air cleaner service for engine model D3SSTA.

(2) Remove filter element and packing from body.

(3) Loosen screw and remove inlet screen from body.

(4) Clean all removed parts in an approved cleaning solvent and dry thoroughly, then use a damp cloth to wipe accumulation of dust from body.

Caution:

When compressed air is used to clean, or dry filter element, do not blow dust from body while it is installed on turbocharger. Accumulations of dust might be blown into turbocharger and cause damage.

(5) Insert packing into body, then place filter element in position with open end toward turbocharger.

(6) Install cover and secure by tightening two wing nuts.

(7) Position screen over intake and secure by tightening screw.

3-12. Engine Oil Strainer Service (Model 687C-18-ES Only)

Refer to paragraph 3-4g and service engine oil strainer.

3-13. Fuel Filter Service

a. *General.* The fuel filters strain all fuel prior to its entering the injectors, removing water and foreign matter that would clog the injectors. Engine model 687C-18-ES has both primary and secondary filters.

Engine model D333TA has only one filter.

b. Primary Fuel Filter Service (Model 687C18-ES Only).

(1) Remove nut and gasket (fig. 3-11) which secures bowl to filter head and remove bowl and washer.

(2) Remove nut that secures filter element to stud in filter head, then remove filter element.

(3) Clean all parts in an approved cleaning solvent and dry thoroughly with compressed air

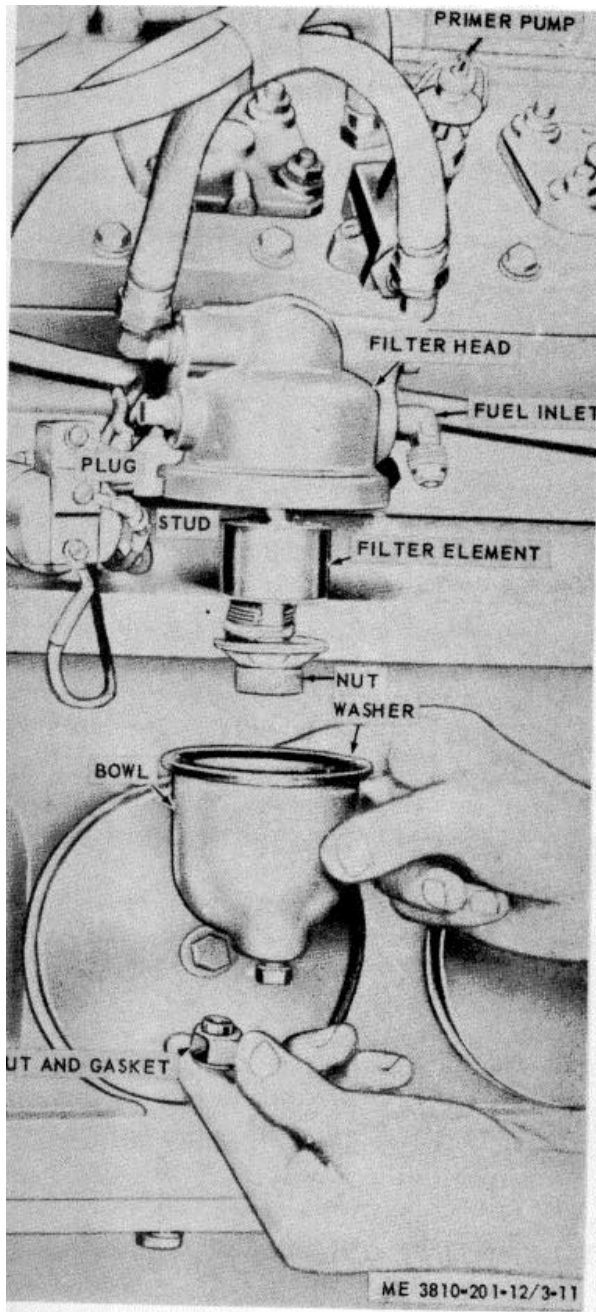


Figure 3-11. Primary fuel filter service. (model 687C-18-ES).

or lint free cloth. Be sure that screen of filter element is free of all sludge or foreign matter.

(4) Visually inspect all parts for cracks, holes, or excessive wear. Repair by replacing defective parts.

(5) Install filter element on stud and secure with nut.

(6) Place washer on bowl, position bowl over filter element, and secure with gasket and nut.

(7) After fuel line is connected to inlet port prime filter with primer pump (para 3-77).

c. Secondary Fuel Pump Service (Model 687C18-ES).

(1) Remove drain plug (fig. 3-12) and drain filter.

(2) Remove plug from center bolt; remove center bolt and center bolt washer, then remove filter body from cover.

(3) Remove disposable filter element and washer and discard.

(4) Clean all parts with an approved cleaning solvent and dry thoroughly. Be sure that all sludge and foreign matter has been removed from filter body.

(5) Install new filter element in body; install washer on cover, then install filter body in cover and secure with center bolt washer and center bolt.

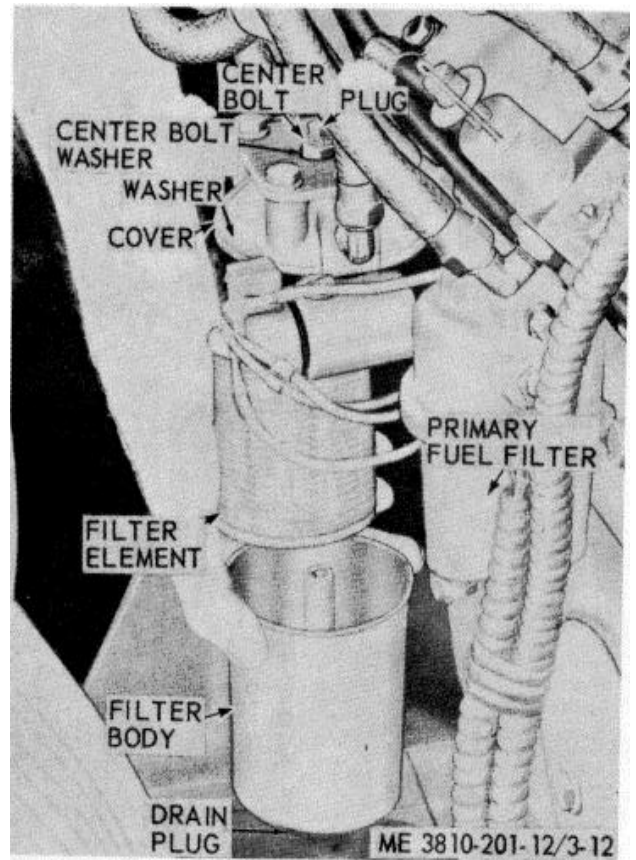


Figure 3-12. Secondary fuel filter service (model 687C-18-ES).

Caution

Be sure that washer between cover and body is serviceable and properly installed, or an air leak will occur that will starve fuel injection pump.

(6) Install plug in center bolt then install drain



plug.

(7) Prime fuel system (para 3-77).

d. Fuel Filter Service (Model D333TA).



(1) Close valve in fuel line from tank; remove drain plug (fig. 3-13); open vent valve, and drain fuel filter.

(2) Clean thoroughly around filter cover

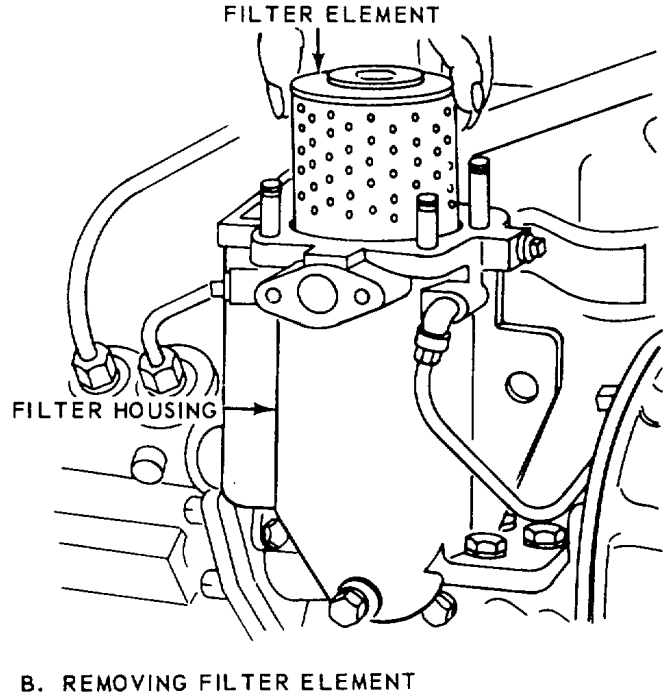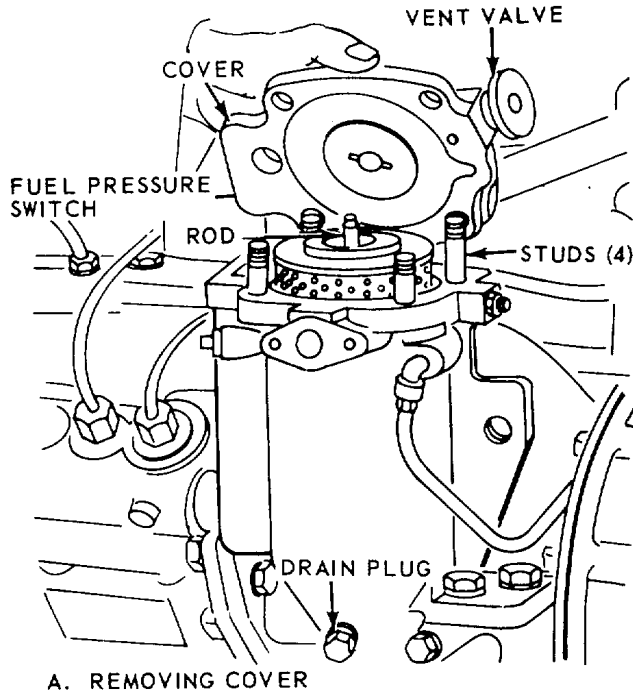

ME 3810-201-12/3-13

Figure 3-13. Fuel filter service on engine model D333TA.

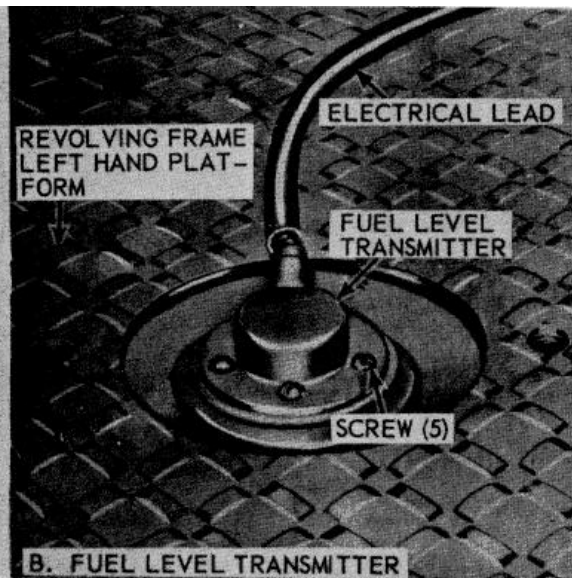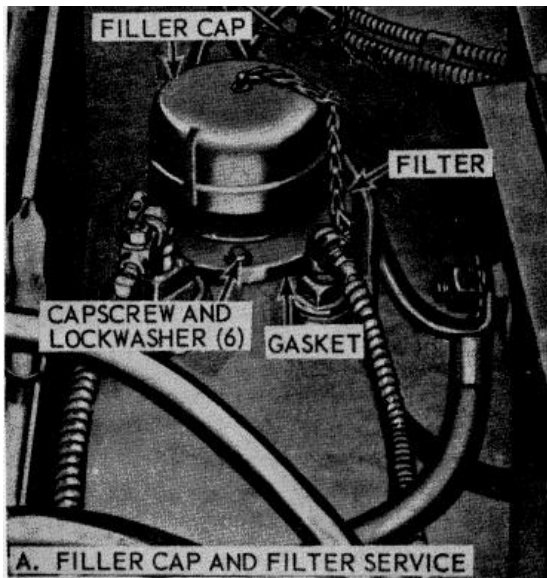

ME 3810-201-12/3-14

Figure 3-14. Filler cap and filter service, model 855BG2.

and gasket to prevent dirt from dropping into filter when cover is removed.

(3) Remove four nuts, lockwashers, and flatwashers, then remove filter cover from housing.

(4) Remove filter element and gasket, and discard.

(5) Remove rod and spring from housing, then clean housing thoroughly by using a lint free cloth dampened in an approved cleaning solvent. Wipe dry with a clean cloth. Be sure all gummy sludge has been removed.

(6) Install rod, place spring over rod and seat it around boss in bottom of housing, then install a new filter element.

(7) Install new gasket on housing, position cover on studs, and secure with four flatwashers, lockwashers, and nuts.

(8) Install drain plug, prime fuel system (para 3-77), then close vent valve in cover.

3-14. Fuel Tank Filler Cap, Filter, and Breather Service

a. Model 855BG2 Filler Cap and Filter Service.

(1) Remove filler cap (fig. 3-14).

(2) Remove six screws and lockwashers then remove filter and gasket from fuel tank. Cover fuel tank opening to prevent dirt entry. Open draincock on bottom of fuel tank, drain sediment, then tighten draincock.

(3) Clean filter screen in an approved cleaning solvent and dry thoroughly with compressed air. Be sure all foreign material is removed from filter screen.

(4) Remove covering from tank opening, position gasket and filter screen on tank adapter and secure with six capscrews.

(5) Install filler cap.

b. Model 855BG3 Filler Cap and Filter Service.

(1) Remove filler cap (fig. 3-15) and lift filter screen from sleeve. Cover sleeve opening to prevent dirt entering tank.

(2) Clean filter screen in an approved cleaning solvent and dry thoroughly with compressed air. Be sure all foreign material is out of filter screen.

(3) Remove covering from sleeve, install filter screen in sleeve, then install filler cap.

c. Model 855BG3 Fuel Tank Breather Service.

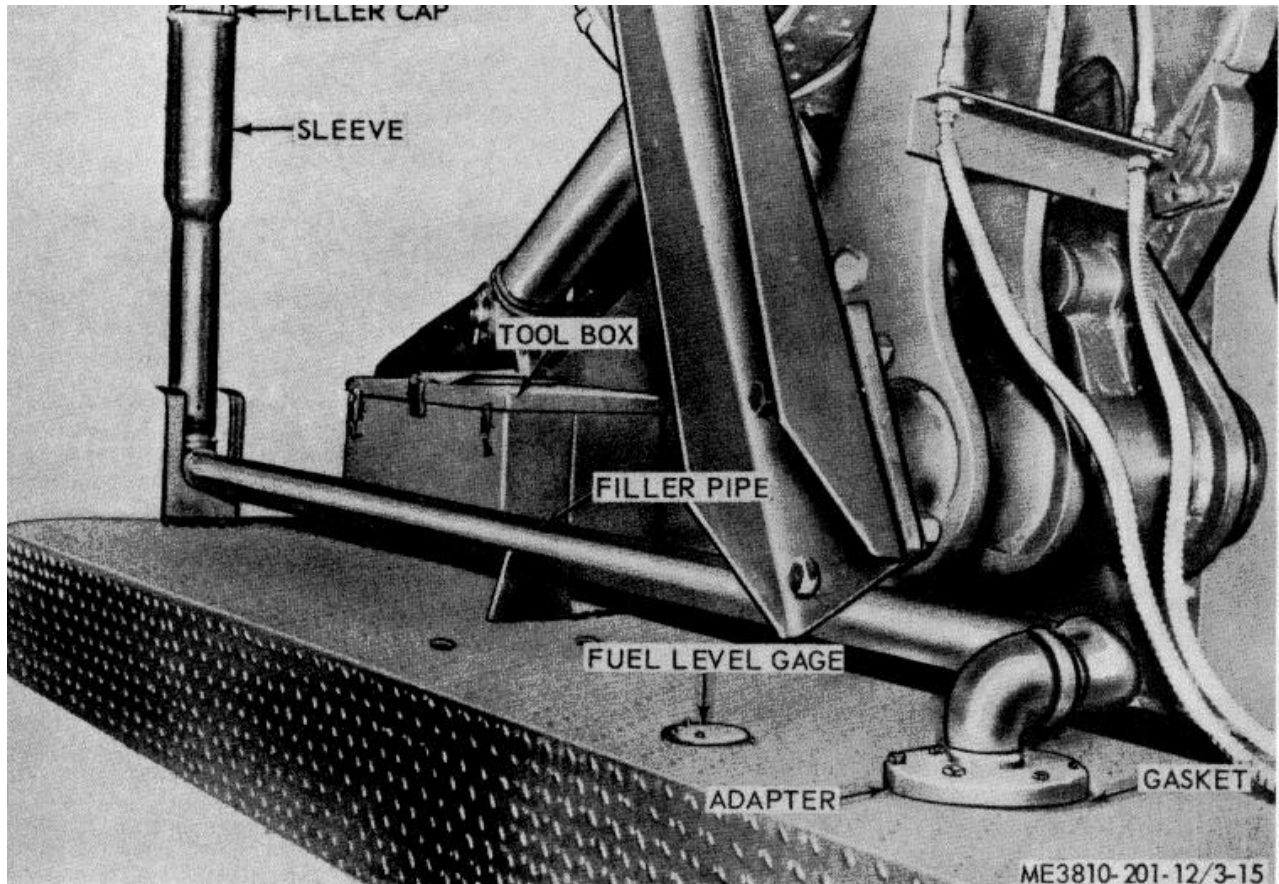


Figure 3-15. Filler cap and filter service, model 855BG3.

(1) Remove breather (fig. 3-16) from coupling by turning counterclockwise.

(2) Clean breather in an approved cleaning solvent and dry thoroughly with compressed air. Be sure that screen mesh of breather is free of all foreign matter.

(3) Install breather on coupling and secure by turning clockwise until tight.

3-15. Floodlight Adjustment and Lamp Replacement

a. Floodlight Adjustment.

(1) To change horizontal position loosen locknut (fig. 3-17), move beam to desired position, then tighten locknut.

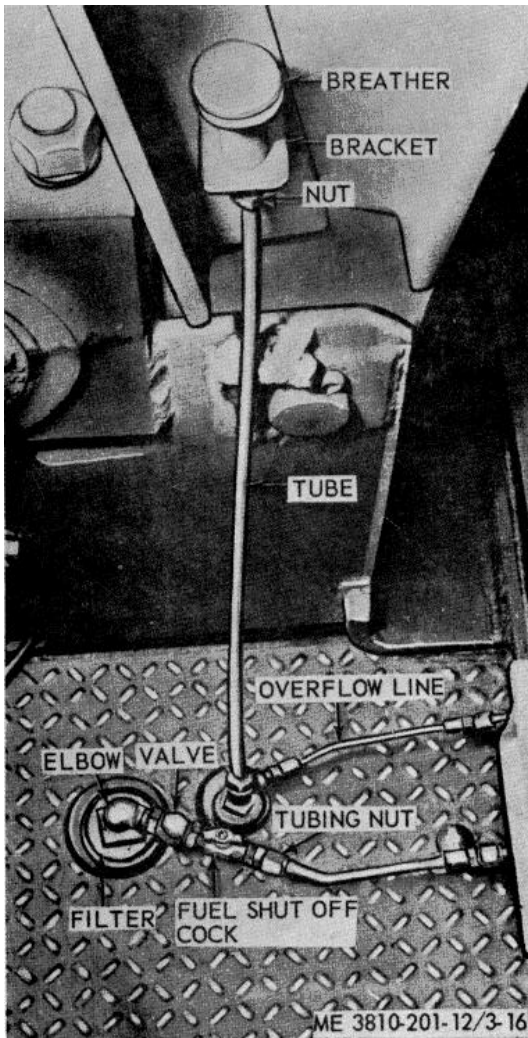


Figure 3-16. Fuel tank breather service, model 855BG3.

(2) To change vertical position, loosen adjusting nut, move adjusting bracket until beam is in desired position, then tighten adjusting nut.

b. Lamp Replacement.

(1) Remove three screw and lockwasher (fig. 3-17) from rear of body and remove lamp retainer.

(2) Remove three screw and lockwasher from plate on rear of retainer, remove plate, then remove lamp and packing from lamp retainer. Discard unserviceable lamp.

(3) Install packing in retainer, install new lamp; position plate on retainer, then secure with three lockwasher and screws.

(4) Position lamp retainer on floodlight body, so that lamp prongs engage socket in body, then secure retainer to body with three lock-washer and screws.

3-16. Battery Service

a. General. Batteries should be fully charged at all times, and acid level must be maintained at 3/8 inch above plates. Service batteries as directed in b below.

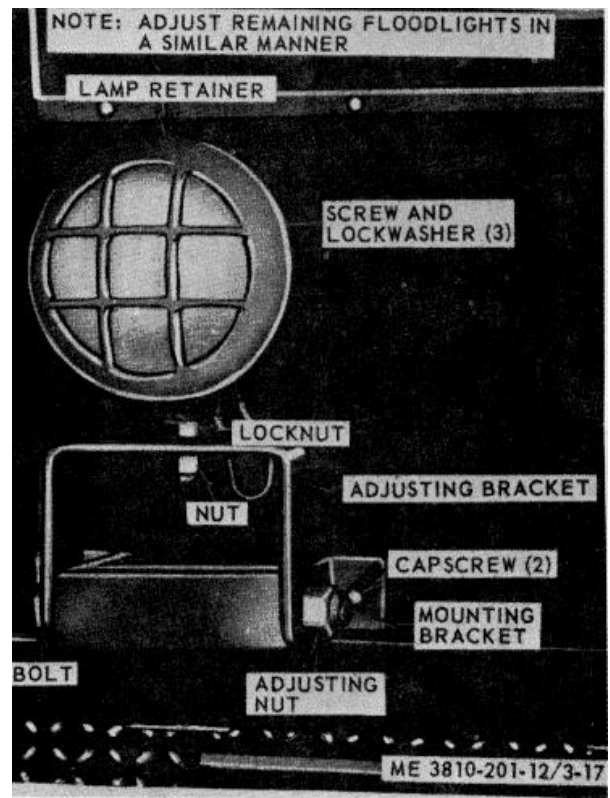


Figure 3-17. Floodlight adjustment and lamp replacement.

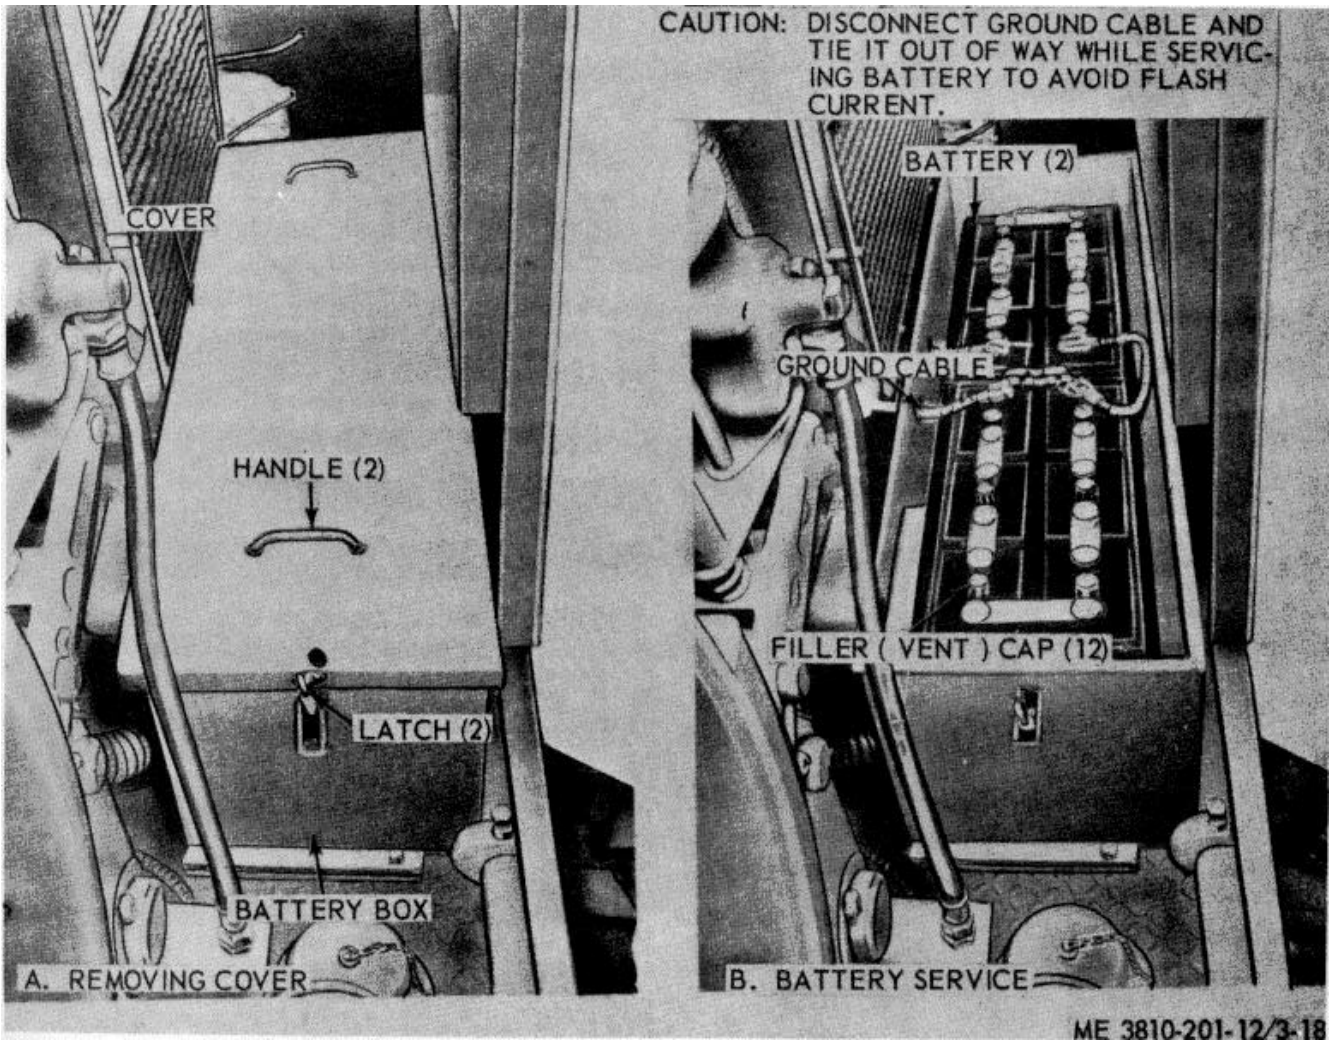


Figure 3-18. Battery service (winterized models).'

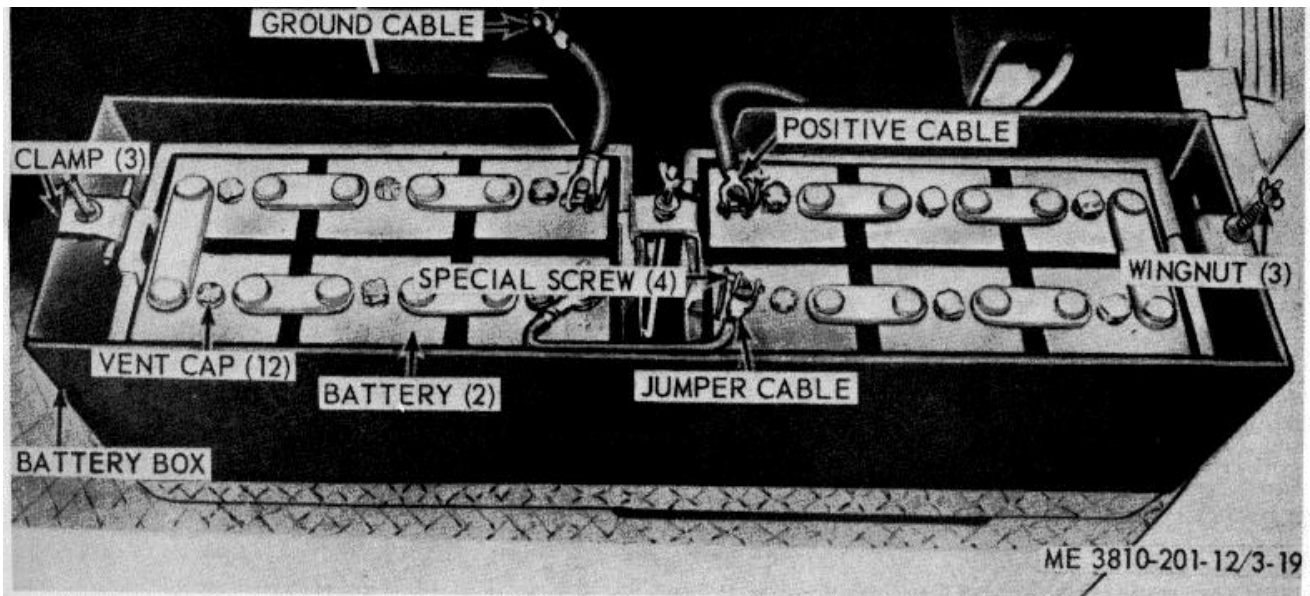


Figure 3-19. Battery service (non-winterized models).

b. *Battery Service (Winterized Models)*. If batteries are not installed, refer to paragraph 3-81 and install as directed. Service as follows:

(1) Unhook two catches (fig. 3-18) and remove cover.

(2) Remove 12 filler caps; check level of electrolyte, add electrolyte or distilled water if necessary to bring level to 3/8 inch above plates.

(3) Clean vent hole in caps, then install all caps on batteries.

(4) Check that battery cables and ground cable connections are tight on terminals and free of corrosion.

Note. A thin coating of grease on terminals will prevent corrosion.

(5) Clean tops of batteries to remove all spilled electrolyte or dirt.

(6) Visually inspect cables for serviceability. Replace all defective cables.

(7) Install cover and secure with two catches.

c. *Battery Service (Non-Winterized Models)*.

(1) Remove three wing nuts (fig. 3-19), remove cover then place wing nuts back on screws for safe keeping.

(2) Remove 12 filler caps; check level of electrolyte, add electrolyte or distilled water, if necessary, to bring level to 3/8 inch above plates.

(3) Clean vent holes in caps, then install all caps on batteries.

(4) Check that battery cable and ground cable connections are tight on terminals and free of corrosion.

Note. A thin coating of grease on terminals will prevent corrosion.

(5) Clean tops of batteries to remove all spilled electrolyte or dirt.

(6) Visually inspect cables for serviceability. Replace a defective cable.

(7) Remove wing nuts from cover holddown screws, install cover on battery box, then secure with three wingnuts.

3-17. Windshield Wiper Service (Winterized Models Only)

a. *Inspection*. Inspect wiper blade for defective rubber squeegee; arm for bend or other defect, and defective mounting hardware.

b. *Repair*.

(1) To replace arm and blade, remove cap nut and flatwasher (fig. 3-20) and lift arm off pivot post.

(2) To replace arm or blade; remove capscrew and lockwasher; separate blade from arm, then replace defective blade or arm, and secure with lockwasher and capscrew.

(3) Install wiper arm or pivot post, then secure with flatwasher and capnut.

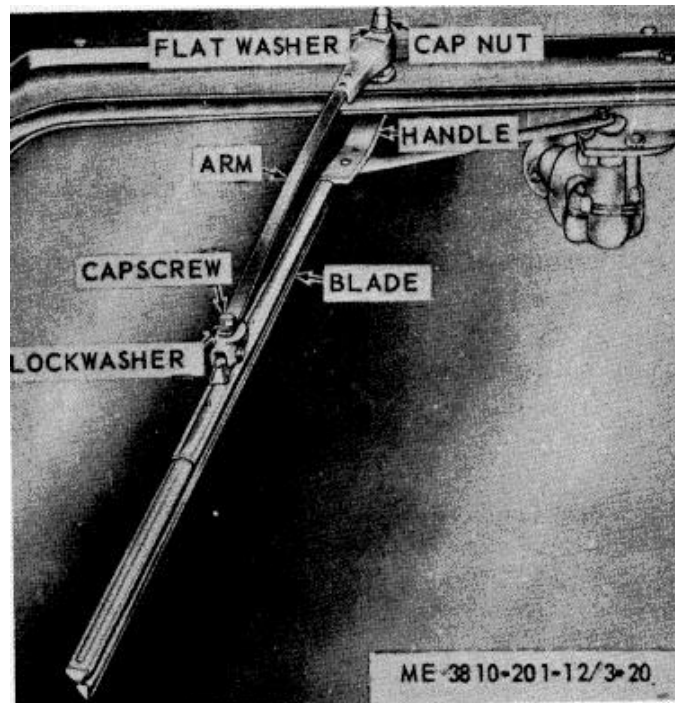


Figure 3-20. Windshield wiper service (winterized models only).

3-18. Cold Weather Starting Aids

Operator service to cold weather starting aid is limited to replenishment of capsules in pressure primer discharger. Refer to paragraph 2-25 for operation.

3-19. Hydraulic Reservoir (Tank) Service

a. *General*. Operator service to hydraulic reservoir (tank) is to drain, refill, and to maintain constant level.

b. *Oil Level Check*. Remove two dipsticks (1, fig. 3-1) and check level. Add oil, if necessary, by removing two fill plugs (2). Replace plugs after oil has been replenished.

c. *Draining*.

(1) Close drain plugs (3, fig. 3-1).

(2) Remove the two oil lines from adapter.

(3) Place container under drain plugs; remove fill plugs; cover opening in tank to prevent dirt entering, then open drain plugs.

(4) When oil is drained, close drain plugs, then install oil lines on adapters.

(5) Remove covering placed over fill holes, fill tank with required quantity of proper oil (LO 5-3810-201-12).

(6) Open drain plugs and allow oil to enter lines to cylinders; add more oil in tank, if necessary, then install fill plugs.

3-20. Radiator Service

a. *Maintaining Water Level.* Remove radiator cap, add water until it stands two inches below over flow, then install radiator cap.

b. *Draining, Cleaning, Flushing, Neutralizing, and Filling.* Refer to TB ORD 651 (Use of Antifreeze Solutions and Cleaning Compounds in Engine Cooling Systems) for instructions on cleaning, flushing, and neutralizing radiator. Drain and refill as described below.

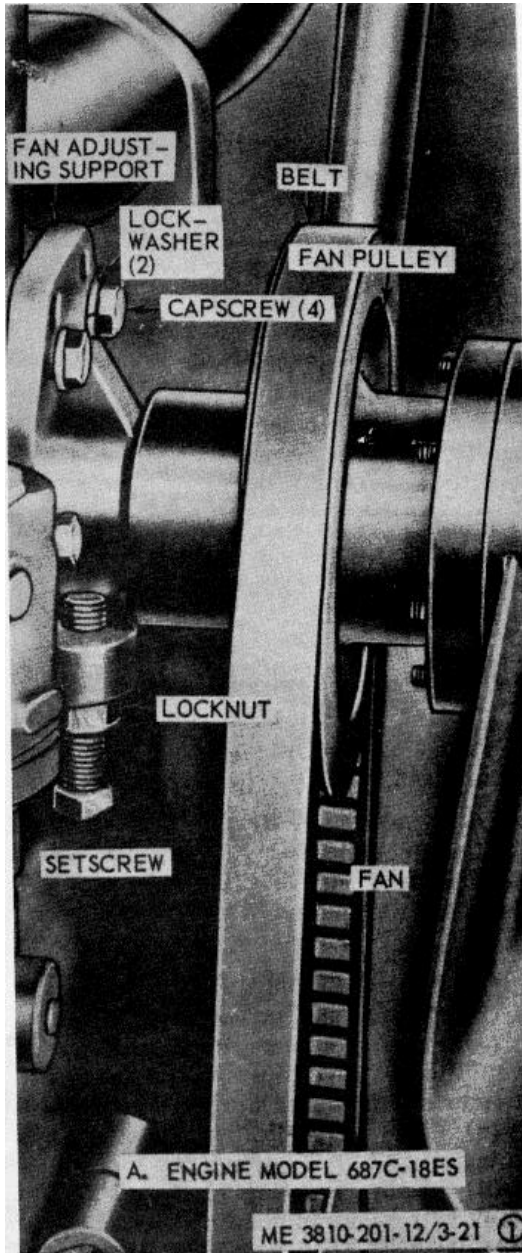


Figure 3-21. Fan drive belt adjustment (sheet 1 of 2).

(1) Remove radiator cap, then open drain cocks on radiator and engine block.

(2) When engine and radiator is fully drained, close all drain cocks.

(3) Fill system with clean water until it stands two inches below the over flow. Install radiator cap.

3-21. Fan Drive Belt Adjustment

a. *On Engine Model 687C-18-ES.*

(1) Loosen four capscrews (view A of fig. 3-21) and locknut.

(2) Increase belt tension by turning setscrew clockwise. Loosen belt by turning setscrew counterclockwise.

Note. Proper adjustment will allow belt to depress from 3/4 to one inch at a point midway between pulleys, while using a moderate pressure.


(3) When proper adjustment is attained tighten the four capscrews and locknut.

b. *On Engine Model D3S3TA.*

(1) Loosen the two bracket retaining bolts which hold idler hub bracket to timing gear cover (view B of fig. 3-21).

(2) Loosen locknut on adjusting screw and turn adjusting screw clockwise until the two belts can be depressed approximately 1/2 inch midway between pulleys with a force of approximately 25 pounds.

(3) When adjustment is correct, tighten the two bracket retaining bolts and locknut. Recheck adjustment.

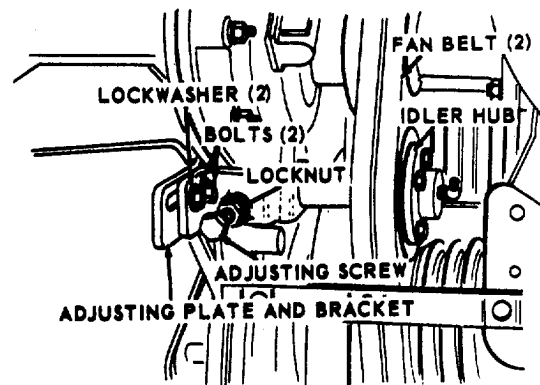

B. ENGINE MODEL D333TA

ME 3810-201-12/3-21 ②

Figure 3-21. Fan drive belt adjustment (sheet 2 of 2).

Note. Fan drive belts must be replaced in matched sets. When belts can be depressed $\frac{1}{4}$ inch midway between pulleys, adjustment is required.

3-22. Generator Drive Belt Adjustment (Engine Model 687C-18-ES Only)

- a. Loosen nut and capscrew (fig. 3-22) on adjusting strap.
- b. Loosen two nuts at generator pivot, pull generator away from engine until belt will depress $\frac{1}{2}$ inch at a point midway between pulleys.

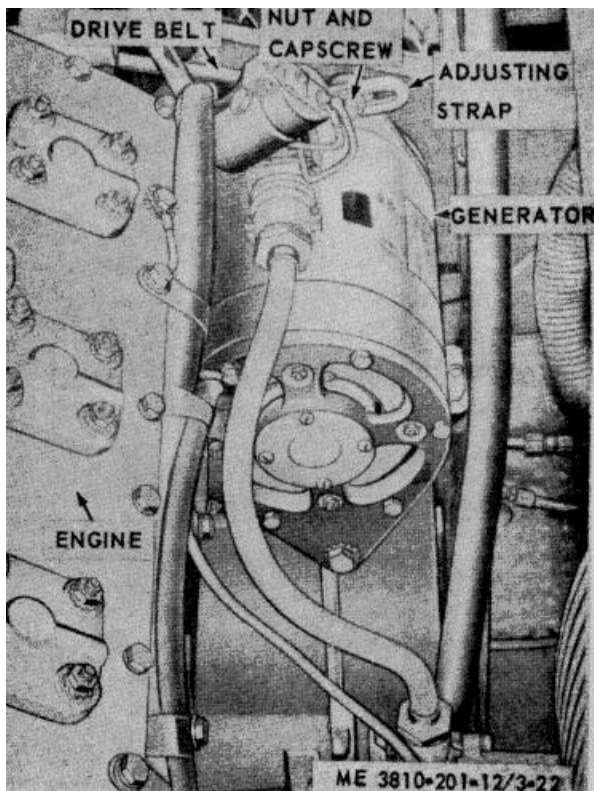


Figure 3-22. Generator drive belt adjustment.

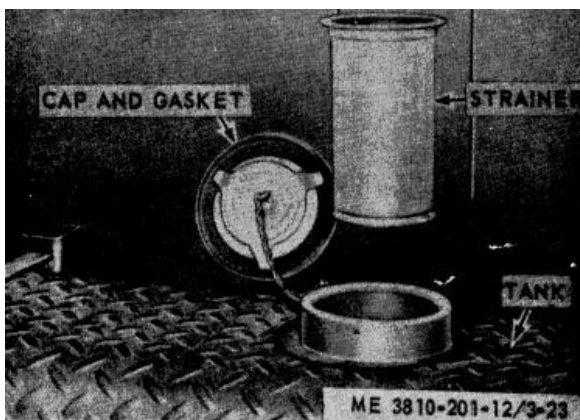


Figure 3-23. Heater fuel tank service (winterized models).

- c. When adjustment is correct, tighten nut and capscrew to hold generator in place. Recheck adjustment.

3-23. Alternator Drive Belt Adjustment (Engine Model D333TA Only)

- a. The alternator may be driven with one or two belts. When two belts are used, they must be replaced in matched sets.
- b. Adjust alternator drive belts in a manner similar to method used for generator drive belt (para 3-22).

3-24. Heater Fuel Tank Service (Winterized Models)

- a. Remove cap and gasket (fig. 3-23).
- b. Lift strainer from tank, clean in an approved cleaning solvent and dry thoroughly with compressed air. Be sure all foreign matter is removed from mesh of strainer.
- c. Visually inspect all parts for damage. Replace a defective cap and gasket, or strainer with damaged mesh.

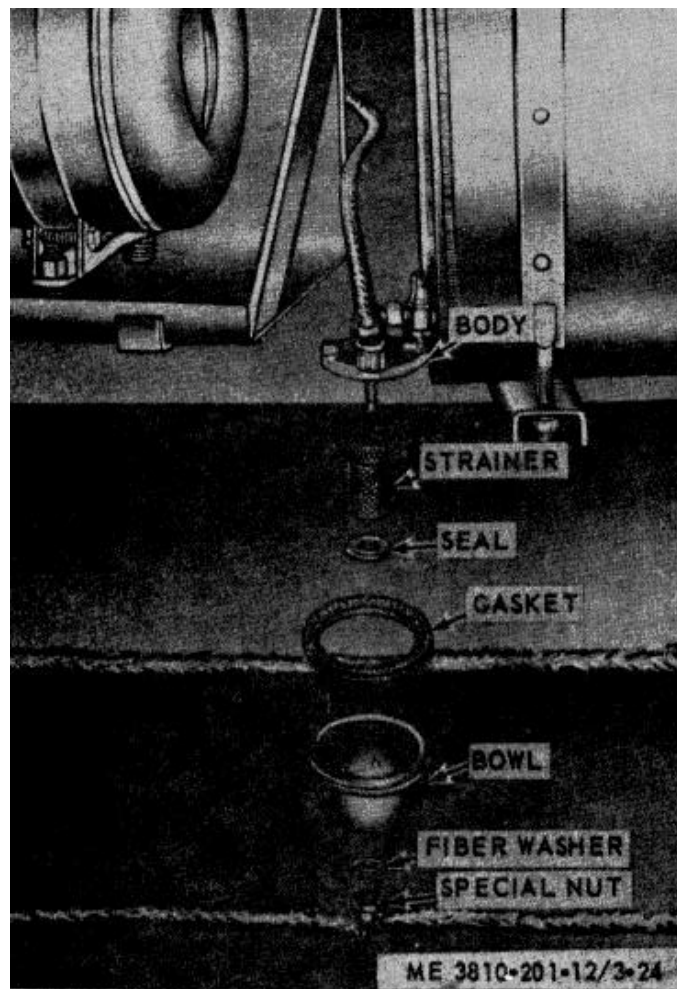


Figure 3-24. Heater fuel strainer service (winterized models).

d. Position strainer in fuel tank, then install cap and gasket.

3-25. Heater Fuel Strainer Service (Winterized Models)

- a. Remove special nut (fig. 3-24) and fiber washer that secures bowl to body.
- b. Remove strainer bowl, gasket, seal, and strainer from body.
- c. Clean all parts in an approved cleaning solvent and dry thoroughly with compressed air. Be sure all foreign material is out of strainer mesh.
- d. Visually inspect all parts for excessive wear, or other damage. When parts are defective, replace the assembly (para 4-46).
- e. Position strainer and seal on stud of body; place gasket on bowl; position bowl on body, and secure with fiber washer and special nut.

Note. Service remaining heater fuel strainers in a similar manner.

3-26. Heater Fuel Pump Service (Winterized Models)

- a. Remove cover (fig. 3-25) from pump by turning cover counterclockwise until pins are in slot, then pull down.
- b. Remove gasket and screen from cover.

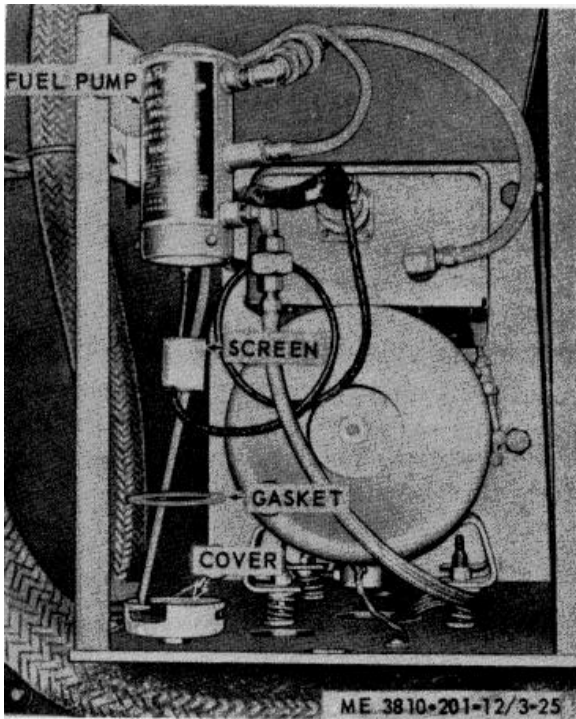


Figure 3-25. Heater fuel pump service (winterized models).

c. Visually inspect gasket for deterioration; Discard a defective gasket.

d. Clean screen in an approved cleaning solvent and dry thoroughly with compressed air. Be sure all foreign material is removed from screen mesh. If screen is defective, replace the pump (para 4-46).

e. Position serviceable gasket in cover, place screen in position on cover, then install in fuel pump. Secure by pressing upward until pins on body of pump enter slots in cover, then turn cover clockwise as far as it will go.


Note. Service remaining fuel, pumps in a similar manner.

3-27. Chain Case Fill Cap and Breather Service

Service chain case fill cap and breather as described in paragraph 3-4h.

3-28. Power Take-Off Breather Service

Service power take-off breather as described in paragraph 3-4i.

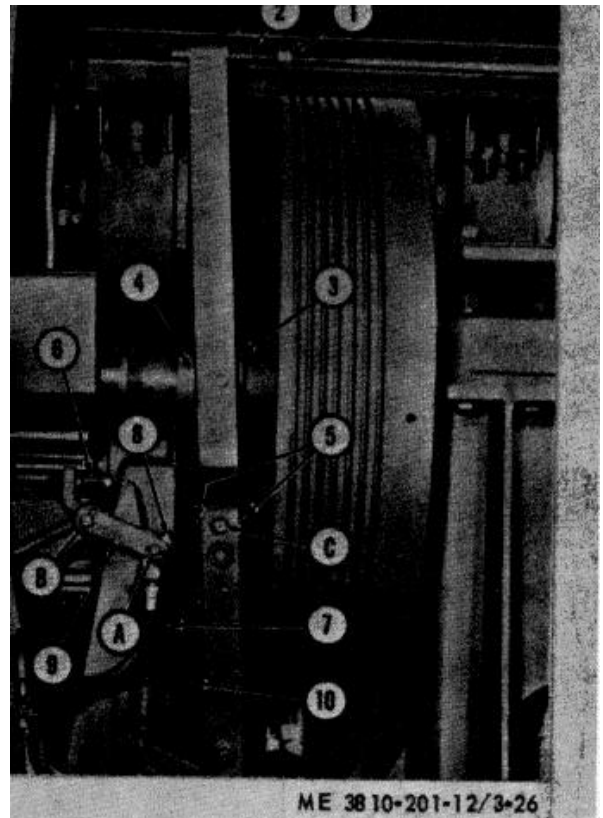

- | | |
|------------------|------------|
| 1 Locknut | 6 Setscrew |
| 2 Spring | 7 Cylinder |
| 3 Shifter collar | 8 Clevis |
| 4 Washer | 9 Link |
| 5 Locknut | 10 Spring |

Figure 3-26. Swing clutch shifter mechanism.

3-29. Swing (jackshaft) Clutch Adjustment

a. Adjustment to Compensate for Lining Wear.

(1) Be sure that swing clutch lever is in neutral position, and that locknuts (fig. 3-26) hold spring (2) compressed to approximately three inches. Check on both ends of shifter rod for each clutch.

Note. In released position, the shifter collar (3) must rest against the washer (4) on outer end of

spider hub. Shifter collar must travel a minimum distance of 1/8 inches from released position to engaged position for proper clutch action. To change shifter travel, loosen one and tighten the other locknut (5) on opposite sides of the trunnion.

(2) Assure that point A is 1/4 inch below a straight line between points B and C (with clutch

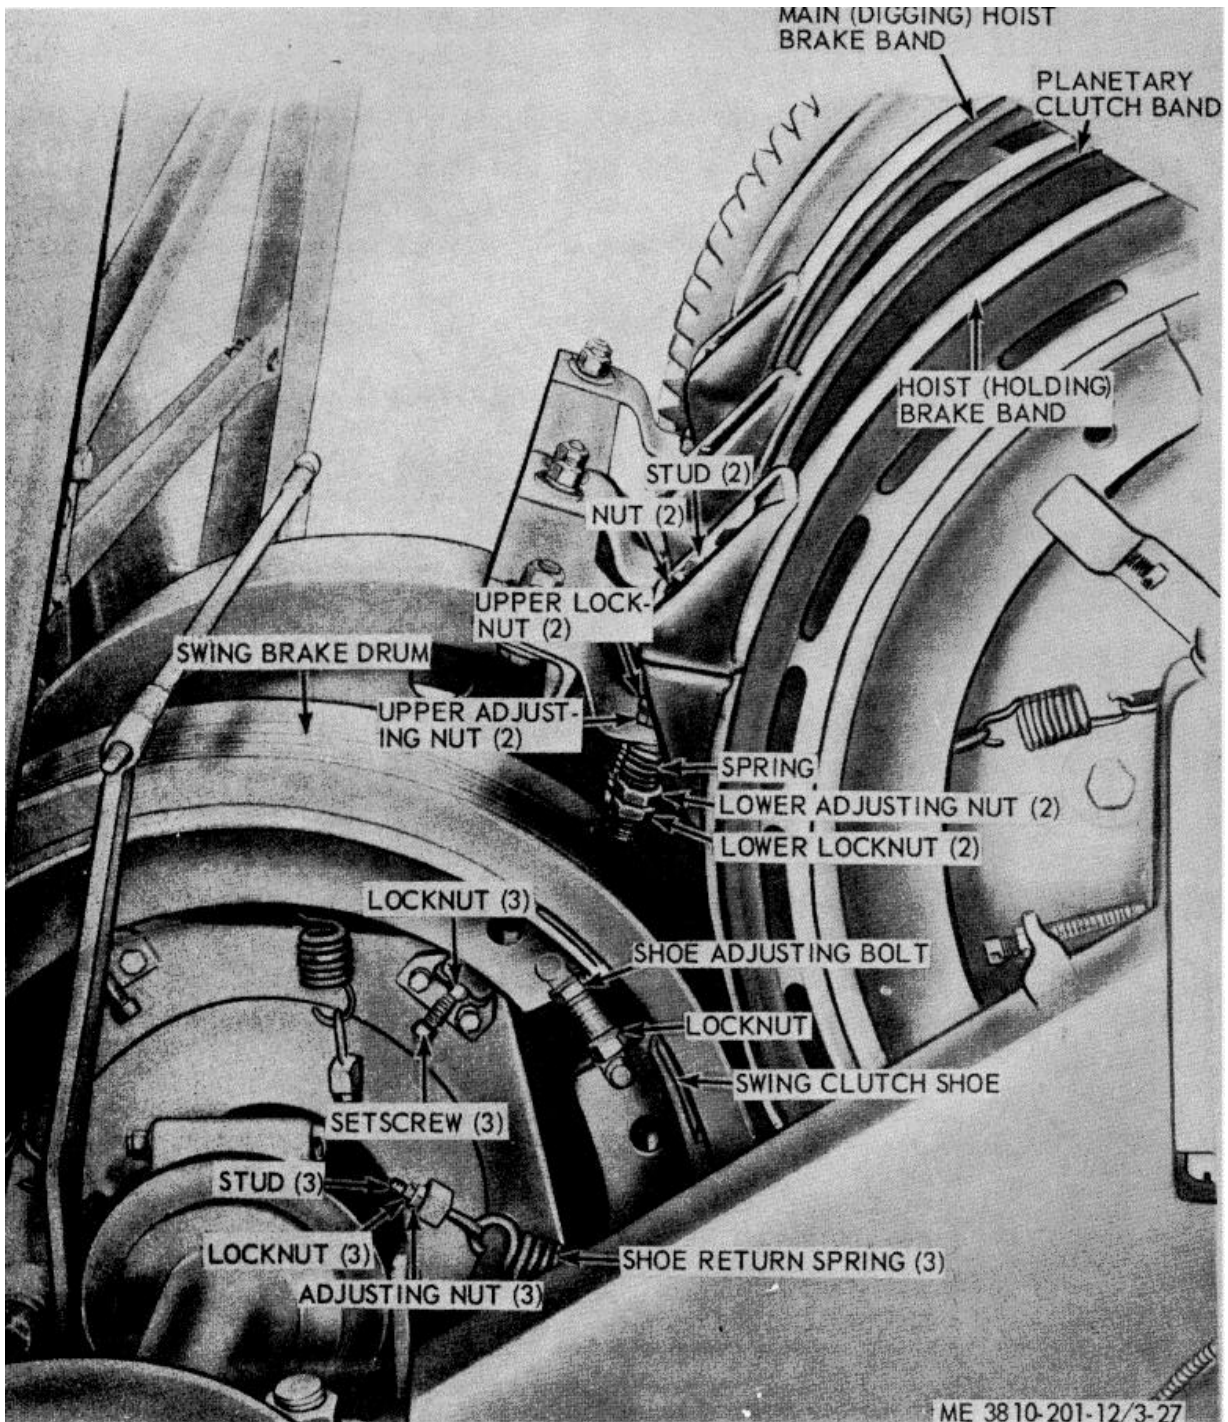


Figure 3-27. Swing clutch shoe lining wear adjustment and positioning of hoist drum clutch and brake bands.

engaged). Be sure that setscrew (6) prevents hydraulic cylinder (7) from pushing link (9) and clevis (8) into a straight line.

(3) Compensation for lining wear is accomplished by loosening locknut (fig. 3-27) and turning the adjusting bolt until the clutch lining has proper clearance from clutch drum (0.012 to 0.015 inch).

Note. Measure clearance with a thickness gage blade that is long enough to reach inside edge of shoe and drum, to avoid possibility of a tilted shoe that will drag.

(4) When adjustment is correct, tighten locknut, then recheck clearance. Readjust if necessary.

b. Adjustment After Lining Replacement or Disassembly.

(1) Remove capscrew and lockplate then rotate adjusting bolt (same as fig. 3-28) until there is between 0.012 and 0.015 inch clearance between shoe lining and clutch drum at dead end. Be sure shoes are not tilted in drum (see note in a above).

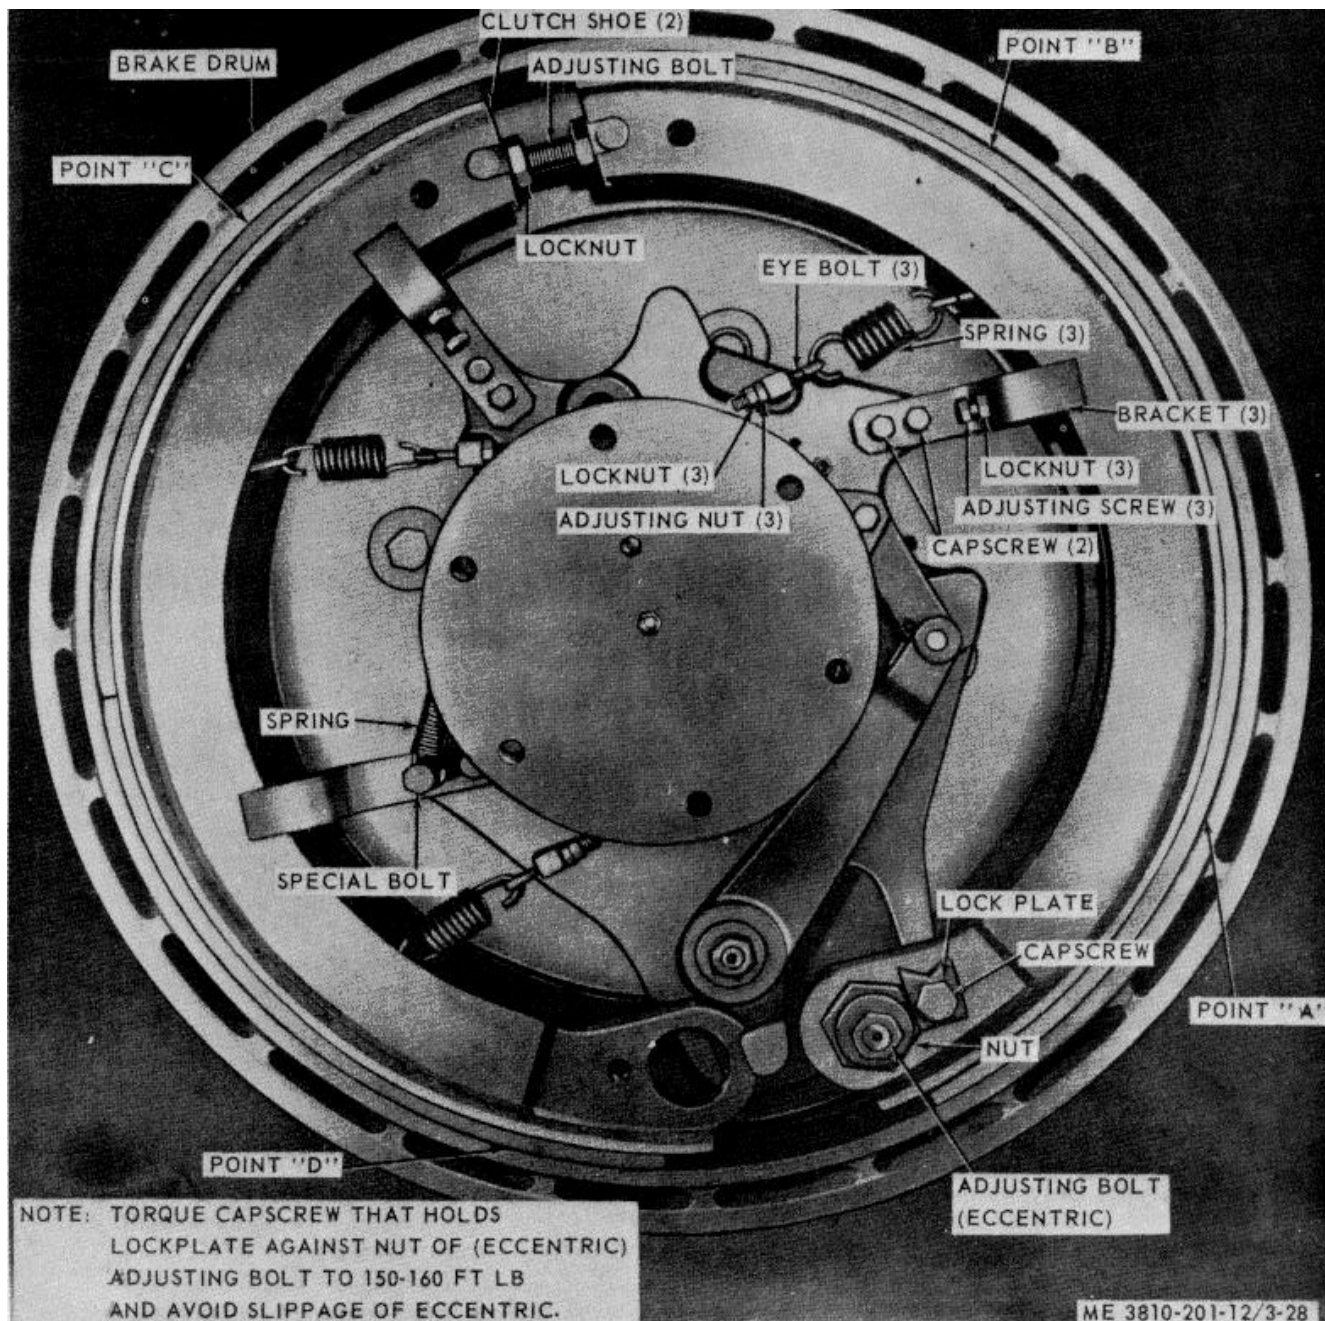


Figure 3-28. Hoist clutch shoes adjustment and removal points.

(2) Continue adjustment in manner described in paragraph 3-32c.

3-30. Positioning Clutch and Brake Bands on Hoist Drum

a. *General.* Hoist drum brake and clutch bands are spring mounted to allow bands to move slightly during engagement or disengagement. Spring tension keeps them in the desired position. With applicable brake or clutch control lever in neutral, position band on drum as described below.

b. *Installation Positioning.* Install band on two studs (fig. 3-27) on mounting bracket, and secure with two lockwashers and nuts.

c. *Positioning Prior to Adjustment.* Position band so that it does not drag on drum by backing off the upper and lower locknuts on both studs (fig. 3-27), then tightening or loosening the lower or upper adjusting nuts until there is clearance all around the drum. After band is positioned correctly, tighten the four locknuts on the two studs.

Note. See paragraph 3-130 for difference in planetary clutch band linkage arrangement between shovel and crane operation.

d. Position hoist drum brake band, digging drum brake band, and planetary clutch band in similar manner, then proceed to adjust brake or clutch band (para 3-31).

3-31. Hoist Brake, Digging Brake, or Planetary Clutch Band Adjustment

a. Position planetary clutch band (para 3-30).

b. Adjust hoist brake band (fig. 3-29) by loosening locknut and tightening adjusting bolt as far as it will go. then back off on adjusting bolt until operation of brake lever engages with band drum smoothly under nominal pressure. After brake band is properly adjusted, tighten locknut.

Note. A few drops of light oil on trunnions will smooth out operation at band and lever.

Note. See different linkage arrangement for planetary clutch band in paragraph 3-130, for shovel or crane operation.

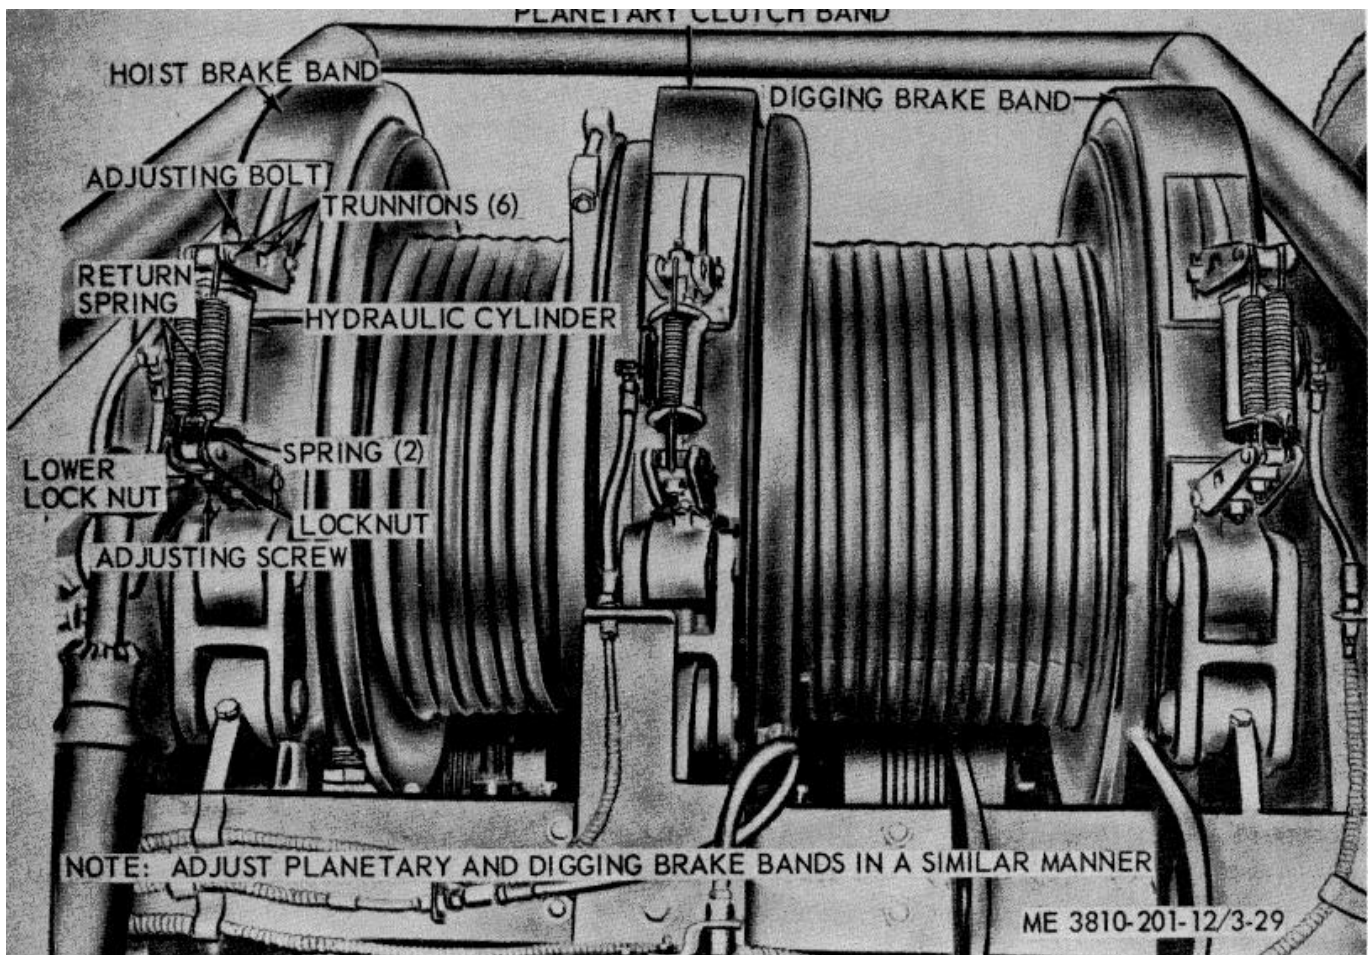


Figure 3-29. Hoist brake, digging brake, and planetary clutch band adjustment.

c. Adjust digging brake and planetary clutch bands in a similar manner.

Caution: Do not adjust bands so tight that operation of lever is hard. Tight bands cause excessive wear on linings and shorten their serviceable life.

3-32. Hoist Clutch and Digging Clutch Adjustment

a. General.

(1) Each main clutch has an auxiliary, or booster clutch, which is the unit most frequently requiring adjustment. However determine which one actually requires adjustment by engaging the hand lever controlling the clutch to be checked, then setting the foot brake pedal controlling the same drum.

Note. Setting the foot brake simulates a load on the drum. If this is not done, the clutch will not "wrap in" to the drum as it does during normal operation.

(2) Engage the engine clutch long enough for the clutch to "wrap in", then measure gap (fig. 3-30) between lug and stop on clutch spider. If there is less than 1/2 inch clearance between these points, the main clutch linings are worn and must be tightened. If there is more than 1/2 inch clearance between the above points the auxiliary clutch must be adjusted.

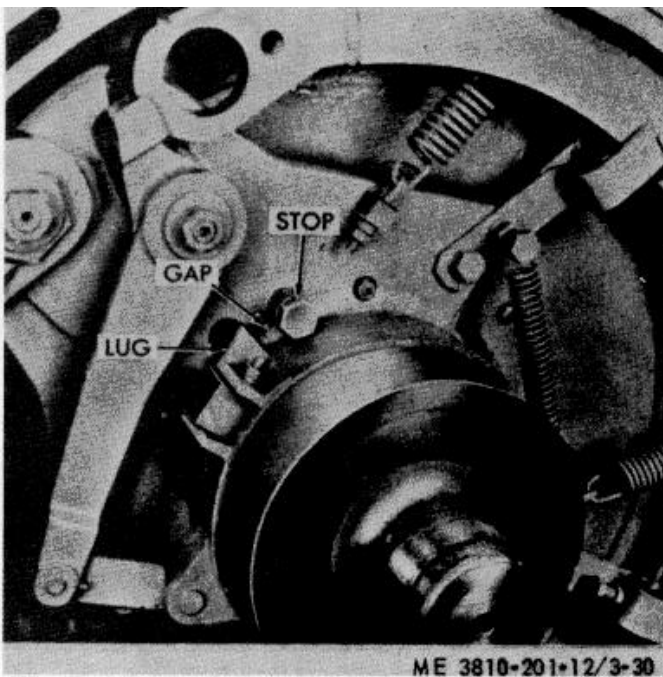


Figure 3-30. Main hoist or auxiliary clutch lining wear determination.

b. Main Hoist or Digging Clutch Lining Wear Adjustment. To compensate for lining wear on main clutch, loosen locknut on adjusting bolt (fig. 3-28) and

turn adjusting bolt until clutch linings are in proper adjustment. Tighten locknut to hold the adjustment.

c. Main Clutch Shoe Adjustment.

(1) When clearance between clutch shoe lining and the clutch drum at points A, B and C (fig. 3-28) exceeds 3/32 inch, or when new clutch shoes are installed, the clutch must be adjusted for proper lining clearance.

(2) To adjust clearance at point A, remove capscrew and lockplate then rotate adjusting bolt (eccentric) until a minimum clearance of 1/32 inch is obtained at point A.

(3) Establish approximately 1/16 inch clearance at points B and C by backing off locknut (2) and turning the two adjusting screws until clearance is correct.

Note. Clearance at point D will always be greater than that at points A, B and C, and does not effect clutch operation.

(4) The tension of three springs (fig. 3-28) should be adjusted just tight enough to prevent clutch shoes from engaging the clutch drum when machinery is rotated at full speed. These springs should not be tighter than necessary to prevent clutch shoes from dragging.

(5) It may be necessary to bend the two brackets slightly to get a good fit of the clutch shoe within the clutch drum.

Note. It is good practice, before linings are worn out, to exchange the dead shoe for the live shoe. Most lining wear is concentrated on the live shoe.

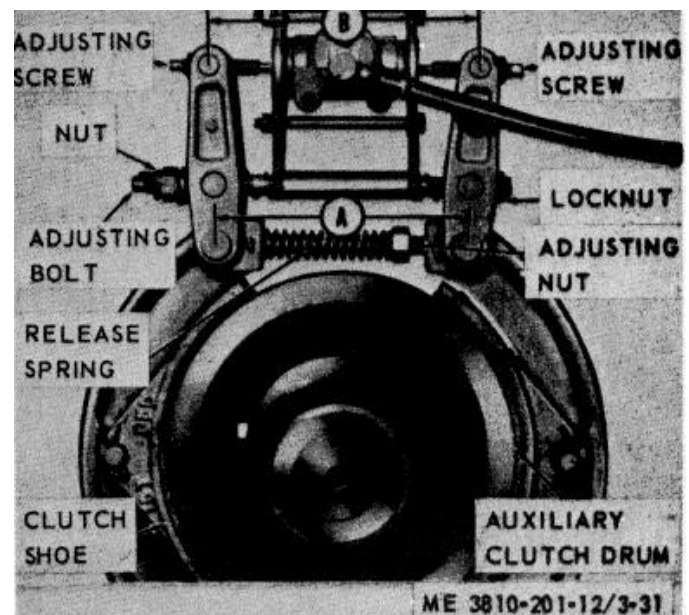


Figure 3-31. Auxiliary (booster) clutch adjustment points.

Caution: Be sure there is enough tension on springs. Operation with clutches too loose may cause breakage of release spring.

d. Auxiliary (Booster) Clutch Adjustment.


(1) To compensate for normal clutch lining wear, loosen locknut (fig. 3-31) and turn adjusting bolt. Do not adjust nut for normal band wear adjustment.

(2) If the unit has been disassembled for any reason, adjust as follows:

(a) Tighten nut until spring is bottomed. Back off nut one complete turn, then install cotter pin through nut.

(b) Turn the two adjusting screws in equally until distance B is just slightly less than distance A.

(c) Tighten adjusting nut until the release

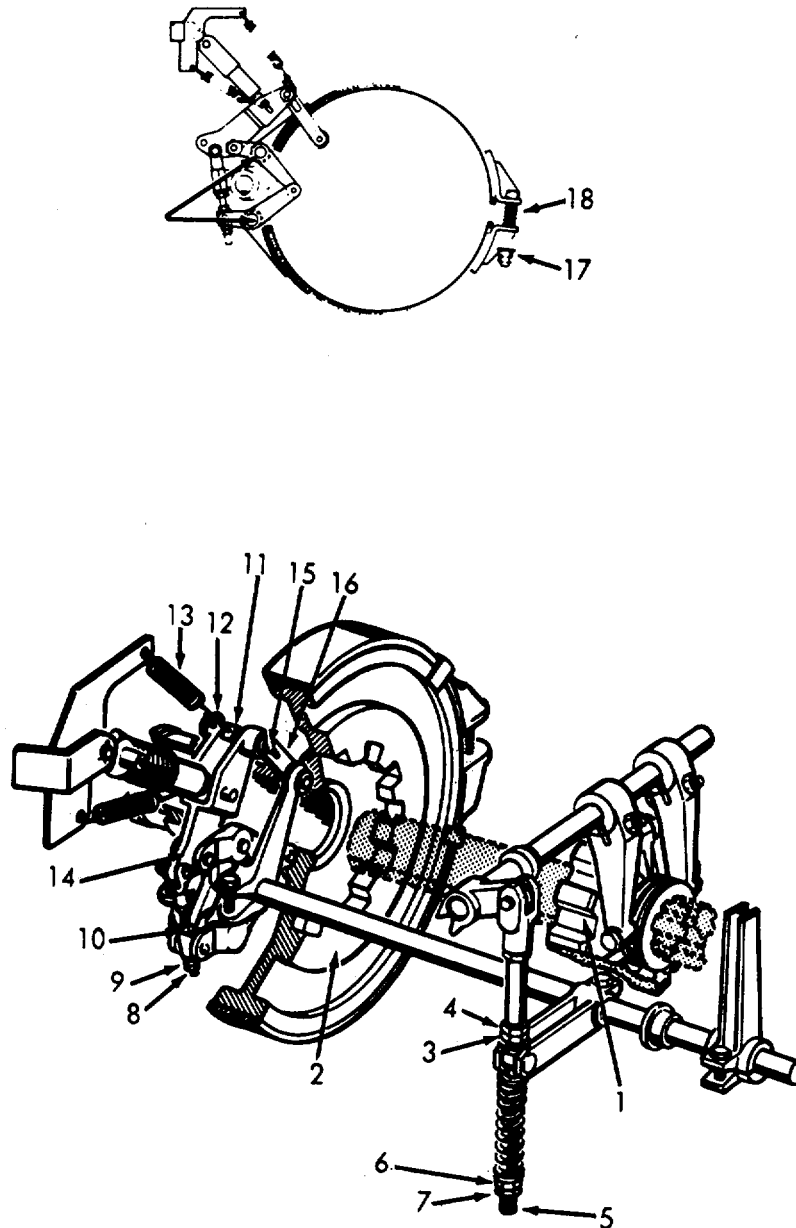

- 1 Jaw clutch
- 2 Brake drum
- 3 Adjusting nut
- 4 Locknut
- 5 Rod
- 6 Nut

- 7 Nut
- 8 Locknut
- 9 Adjusting nut
- 10 Adjusting nut
- 11 Adjusting nut
- 12 Eye bolt

ME 3810-201-12/3-32

- 13 Spring
- 14 Lever
- 15 Pin
- 16 Link
- 17 Nut
- 18 Bolt

Figure 3-32. Steering linkage and propel brake adjustment.

spring is compressed to a length of approximately 3 1/2 inches.

3-33. Steering Linkage, Swing Brake and Propel Brake Adjustment

a. Steering Linkage Adjustment.

(1) Raise steering engage lever (fig. 2-24) to engage steering gear.

(2) Turn steering wheel counterclockwise as far as it will go. (This disengages both jaw clutches, and sets both propel brakes in locked position).

(3) Measure distance between face of jaw clutch (1, fig. 3-32) and face of brake drum (2), which must be approximately 3/4 inch. When distance is less, turn adjusting nut (3) and locknut (4) downward until distance between faces measures 8s inch. When distance is greater, turn adjusting nut (3) and locknut (4) upward until the distance is 8/4 inch between faces.

(4) Spring tension on rod (5) against lever is obtained by turning nuts (6) and (7) in an upward direction.

(5) Turn steering wheel clockwise until both jaw clutches (1) are fully engaged with recesses in brake drum (2). When clutches are fully engaged, both propel brakes will be in released position.

(6) Back off locknut (8) and adjusting nuts (9) and (10). Turn adjusting nut (11) on eyebolt (12) until maximum tension is placed on spring (13) (the hydraulic cylinder must be completely compressed).

(7) Pull lever (14) toward hydraulic cylinder, hold it there while tightening adjusting nuts (10) and (9) up against linkage. The pin (15) in lever (14) must be snug against top of slot in link (16).

b. Propel Brake Adjustment.

(1) Turn steering wheel counterclockwise as far as it will go. Both propel brakes will be set in locked position.

(2) Tighten adjusting nut (17) on bolt (18) until propel brake bands are tight. Secure the adjustment with locknut.

c. *Swing Brake Adjustment.* To compensate for lining wear, back off locknut (fig. 3-88); tighten adjusting nut just enough to get the proper feel on swing brake lever (fig. 2-24), then tighten locknut (fig. 3-48).

3-34. Boom Hoist Brake Adjustment

a. Before making any adjustment on boom hoist brake, assure that pawl is engage in hoist drum ratchet

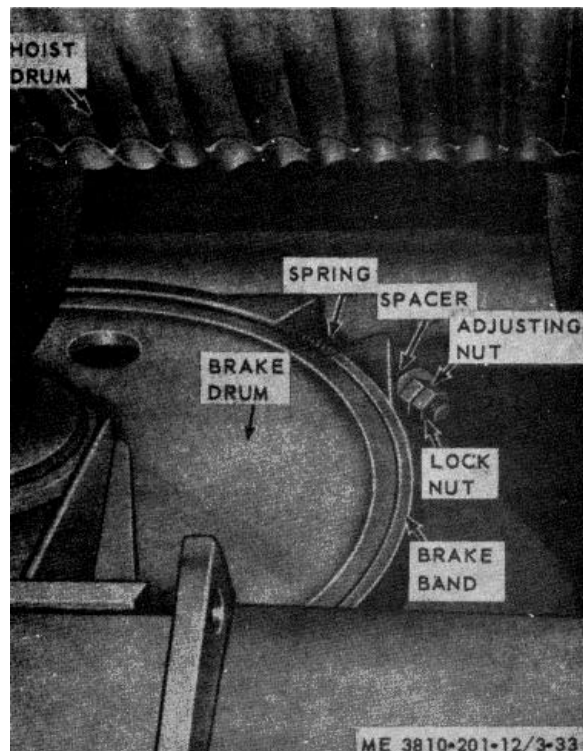


Figure 3-33. Swing brake adjustment.

gear to prevent boom from lowering.

b. To adjust boom hoist brake, sufficient tension must be placed on spring (fig. 3-34) to hold boom in desired position. Position boom hoist lever in neutral. (With boom hoist lever in neutral brake is applied and clutch is disengaged). Turn nut clockwise until brake band is tight, then tighten locknut.

c. Always check clearance between thimble and side plate. It should be at least 1/16 inch. Adjust this clearance, when necessary, by backing off locknut then turning adjusting screw. When clearance is correct, tighten locknut.

d. With brake applied, measure distances A and B. Distance A should be from 8s/ inch to 1/2 inch less than distance B. Make adjustment by turning adjusting bolt then tighten locknut.

Check gap between thimble and side plate after adjusting (c. above).

Note. Levers should be parallel when brake is released.

Note. A few drops of light engine oil on all pine and trunnions, before adjustment, will allow smoother operation.

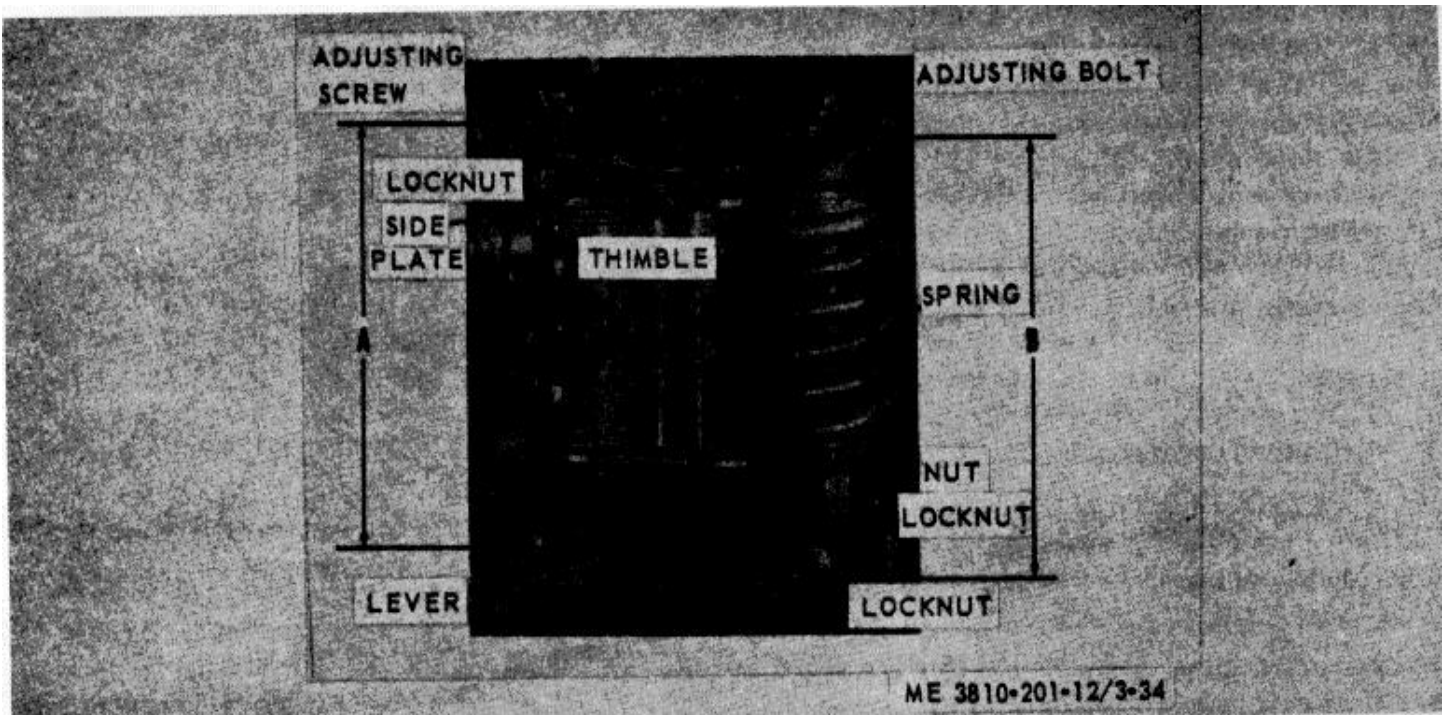


Figure 3-34. Boom hoist brake adjustment points.

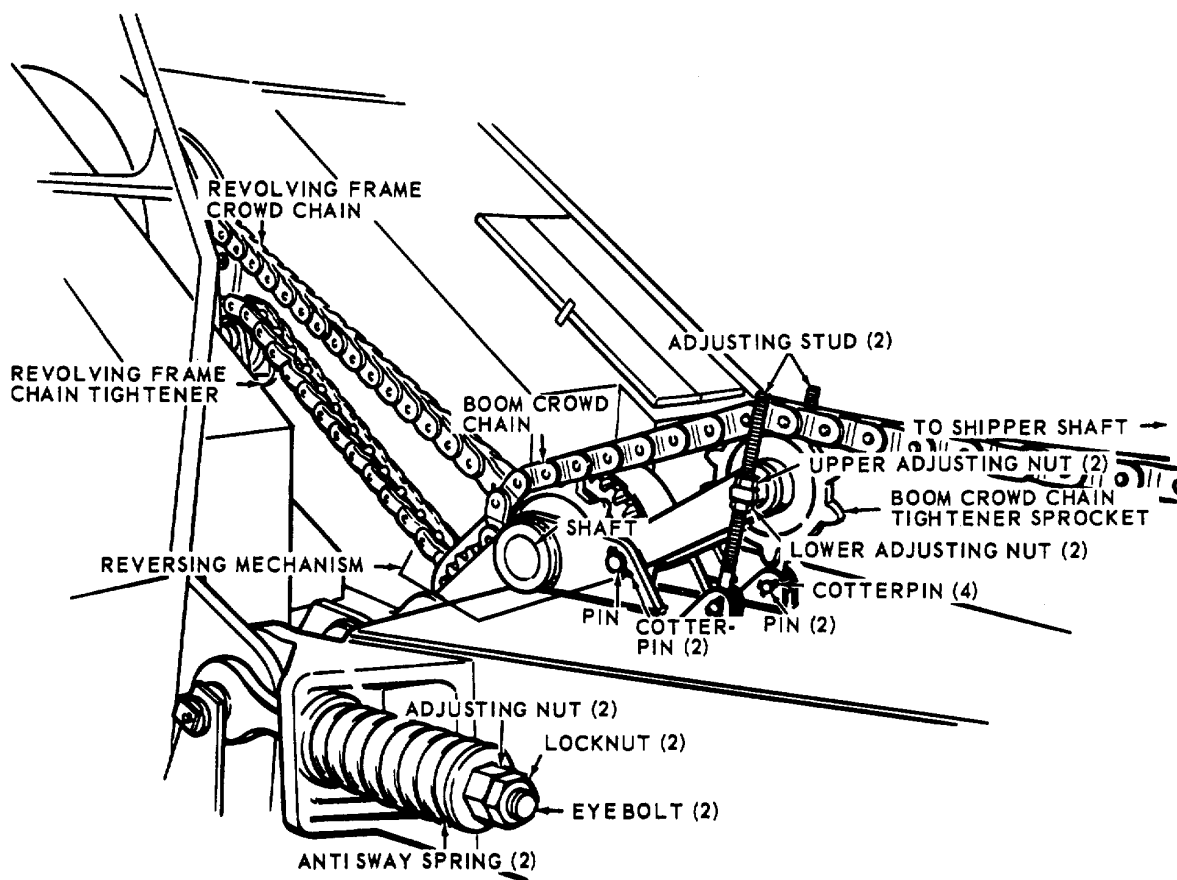


Figure 3-35. Crowd chain and antisway spring adjusting points.

e. Engage boom hoist clutch by pulling boom hoist lever toward operator just enough to take pressure off pawl, then disengage pawl. Return boom hoist lever to neutral, slowly, to assure that brake will hold boom. Readjust if necessary. After adjustment is complete, engage boom hoist pawl, move boom hoist lever away from operator to release brake, then check levers for position described in note in d. above.

3-35. Crowd Chain Adjustment

- Loosen top adjusting nut (fig. 3-35) and bottom adjusting nut on the two studs.
- Lift up on tightened sprocket to tighten, or lower to loosen boom crowd chain, then tighten adjusting nuts.
- Proper adjustment allows from three to four inches of sag in chain between shipper shaft sprocket and chain tightened sprocket.
- Adjust revolving frame crowd chain in a similar manner.

3-36. Antisway (Boom Foot) Spring Attachment

- Tension on antisway springs allows boom some freedom of movement, yet prevents excessive swaying. At installation, tighten adjusting nut (fig. 3-35) to compress spring until it is $14\frac{5}{8}$ inches in length.

Caution: Never tighten enough to remove clearance between coils. If spring coils are bottomed, all strain will be transferred to boom foot lugs and damage to the revolving frame will result.

- Operator will check shovel antisway springs frequently. When length of spring is correct, but excessive sway occurs because of weakened springs; replace old springs with new, and adjust as directed in a. above.

3-37. Dipper Trip Adjustment

- If the brake drum (fig. 3-36) does not tend to rotate when dipper trip lever (fig. 2-23) is operated, the brake shoes (fig. 3-36) are probably worn enough to require adjustment.

- Turn the bellcrank (underneath revolving frame) until the brake shoe just barely drags against brake drum, then turn bellcrank back until brake shoe is just clear of the drum, then loosen locknuts on rod and adjust length of rod until top and bottom levers are both from 15 to 20 degrees below a horizontal position.


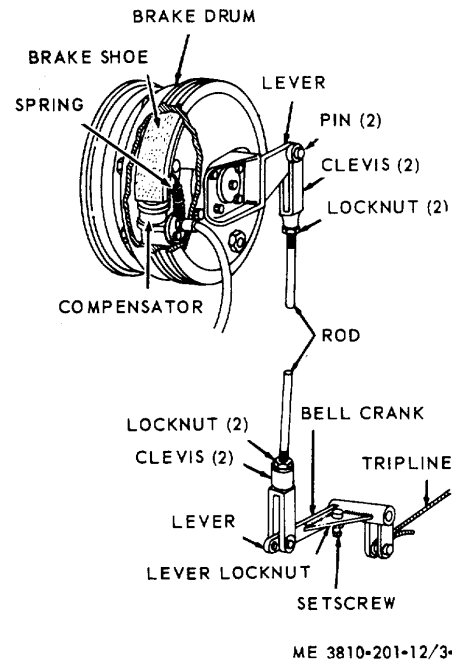


Figure 3-36. Dipper trip adjustment points.

- Loosen lever locknut and adjust setscrew so that travel of rod is stopped before lever is bottomed in upper clevis and bends rod.
- When brake shoe adjustment is correct, tighten two locknuts on rod, and locknut on setscrew, to hold the adjustment.

3-38. Trip Cable Adjustment

- Assure that trip cable is fastened to equalizer bracket (fig. 3-37) with a cable clamp; loosen clamp at bellcrank; take up all slack, then refasten cable clamp at bellcrank.
- Assure that boom trip cable is reeled correctly; from take-up drum mounted on shipper shaft; through equalizer sheave on equalizer bracket, then over idler sheave to dipper trip lever mounted on dipper sticks near dipper.
- If there is any slack in boom trip cable; loosen cable clamp at dipper trip lever; take up slack until dipper trip lever is just downward from perpendicular to the dipper sticks, then secure cable clamp.
- Adjust length of trip chain as required.

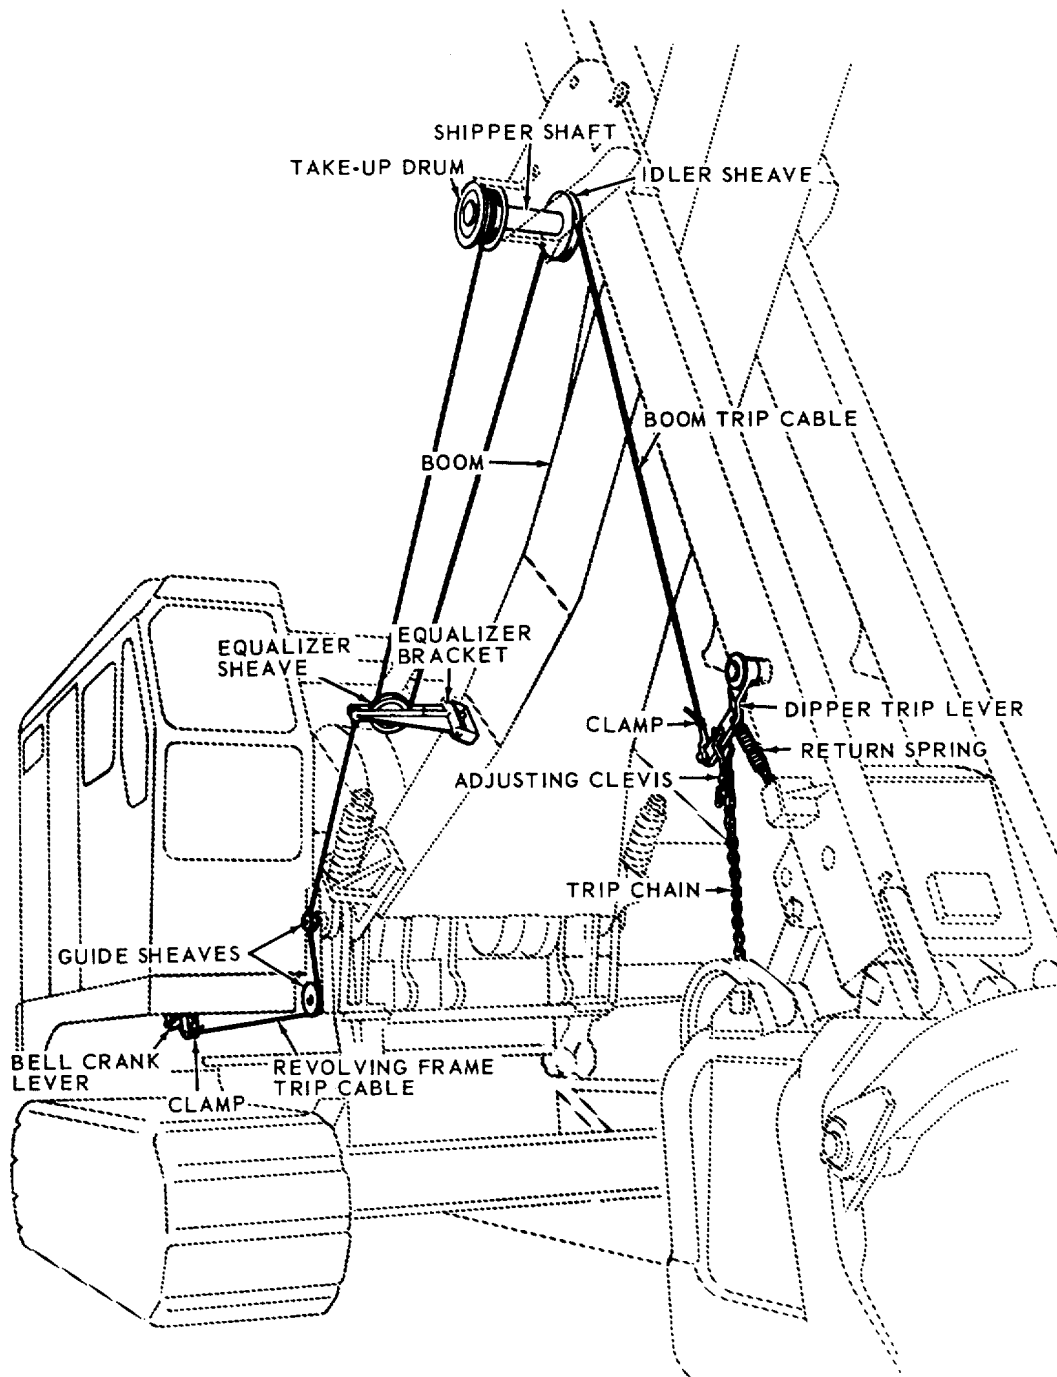

ME 3810-201-12/3-37

Figure 3-37. Trip cable adjustment.

3-39. Hook Roller Adjustment

a. Lower boom to near the horizontal position. This will put weight on rear hook rollers while both front hook rollers are being adjusted.

b. Remove screws, lockwashers and keeper plate (fig. 3-38), then rotate eccentric shafts until both rollers are snug against bottom of roller path. A maximum of 1/16 inch clearance is allowed between hook rollers and roller path. When adjustment is correct, install keeper plate and secure with lockwashers and screws.

c. Build up cribbing equal to revolving frame height under boom, and lower boom to rest on cribbing. This will equalize weight of revolving frame on roller circle, then adjust rear hook rollers in same manner as front hook rollers above.

Note. When replacing keeper plates, the lip of front hook roller keeper plate must be between flange of eccentric shaft and hook roller mounting

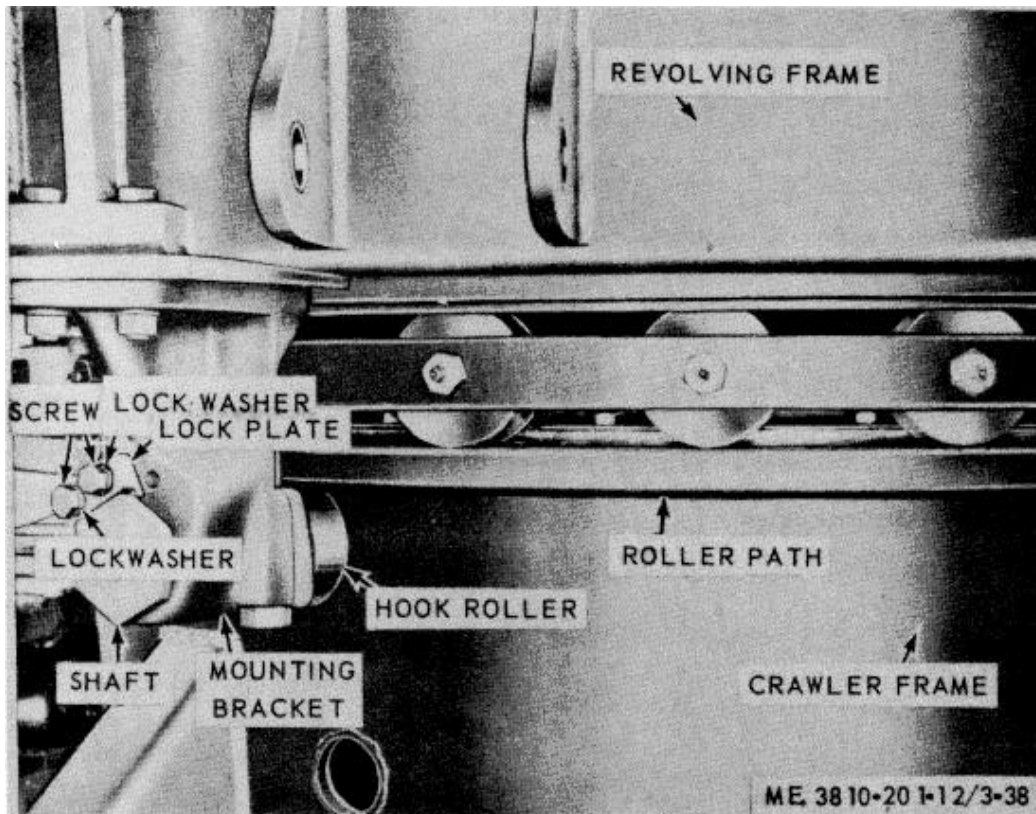


Figure 3-38. Hook roller adjustment points

bracket. The lip of rear hook roller keeper plate must be on outside of the eccentric shaft.

d. When adjustment is correct, raise boom to operating position.

Caution: If boom tip had been lowered to rest on the ground because no cribbing was available, be sure and get assistance from another crane or hoisting device to lift boom tip above the horizontal before using boom hoist to position boom. Booms have been known to collapse under stress applied by boom hoist clutch when boom tip was lower than boom foot.

3-40. Propel Chain Adjustment

a. *General.* To properly adjust the propel chain, the crane-shovel should be propelled backward for at least the length of the crawler frame. This will place the slack in the chain on top. Adjust as follows.

b. *Adjustment.*

(1) Back off locknuts on two eyebolts (fig. 3-39) (one on each side of sprocket) then, alternately turn adjusting nuts, first on outside then on inside, in or out until slack in propel chain can be raised approximately 1 1/2 inches. Repeat on opposite side of frame for remaining propel chain. When adjustment is correct, tighten locknuts to secure adjustment.

Note. When a new propel chain is installed, it must be adjusted tight (no slack), to allow for stretch.

(2) Remove two capscrews, lockwashers, and lockplate from the adjusting block on outboard bearing of both propel sprockets, then turn adjusting nut on adjusting bolt, in or out, until crawler drive shaft is parallel to the rear axle. When adjustment is correct, install lockplates and secure with lockwashers and capscrews.

3-41. Track Adjustment

a. *General.* The crane-shovel unit should be propelled in a forward direction for a distance equal to length of crawlers, in order that sag in track will be on top. Adjust as follows.

b. *Adjustment.*

(1) Position a straight edge on track parallel with frame, between upper roller (fig. 3-40) and high point of track on top of drive sprocket. Measure distance between straight edge and low point of track sag. This distance should be approximately 1 1/2 inches. If sag is more than 1 1/2 inch, loosen locknut on adjusting bolt (on both sides of sprocket), then tighten adjusting nuts until sag is correct.

Caution: Equalize turning of adjusting nuts, so that idler shaft is parallel to front axle. The teeth on idler sprocket must be centered between side bars on crawler track. Be sure locknuts on adjusting

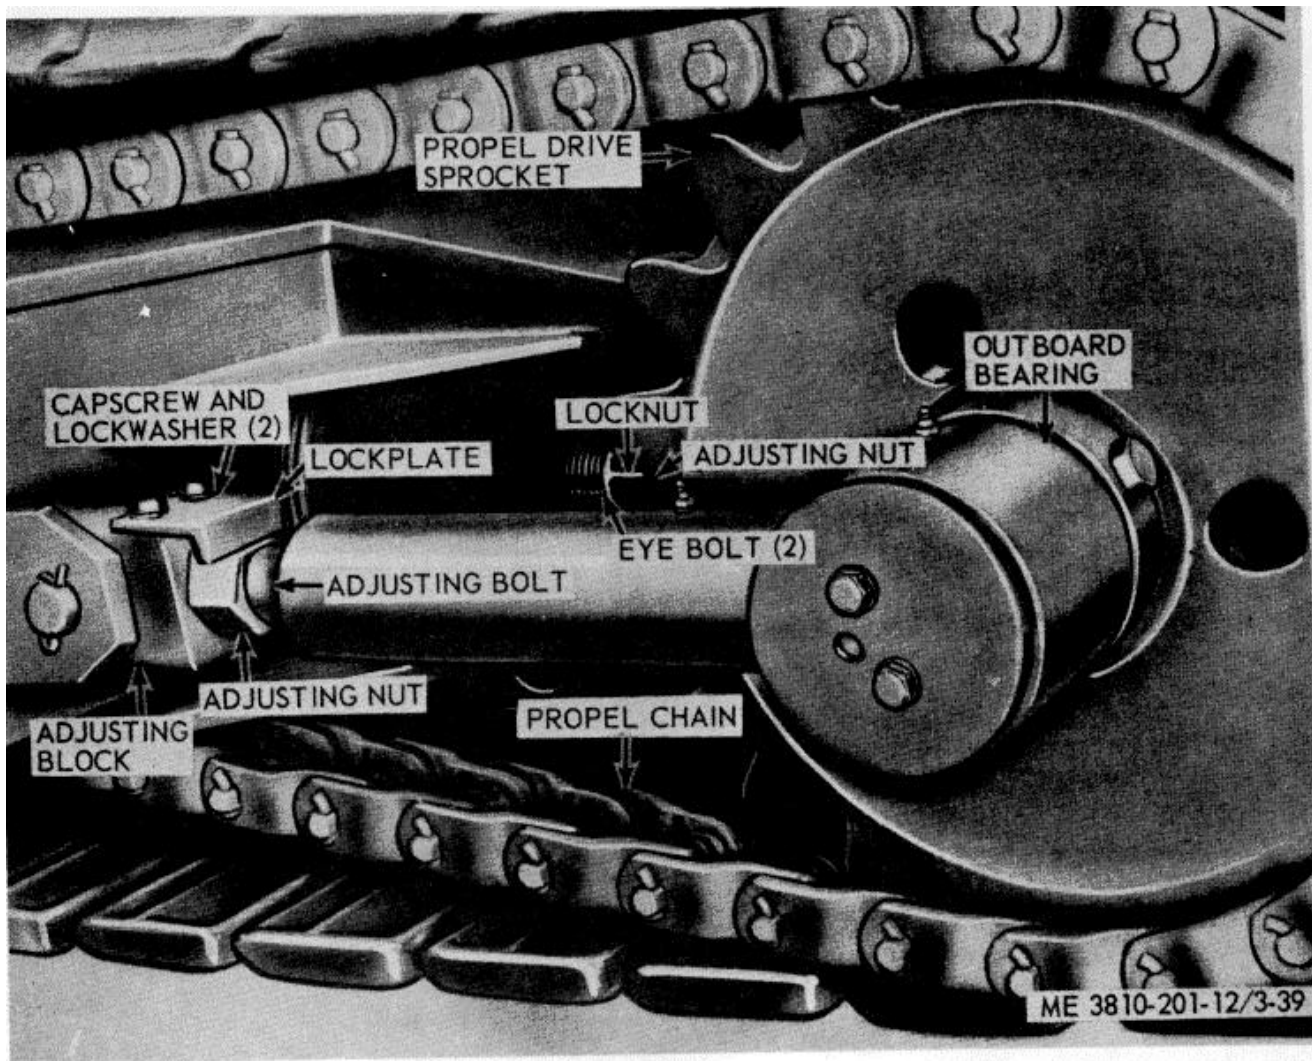


Figure 3-39. Propel chain adjustment.

bolts are drawn up tight to adjusting blocks to secure the adjustment.

(2) Measure compressed length of springs. Each spring should measure 31 inches. To adjust length, backoff, or tighten spring adjusting nut (fig. 3-40), until length is correct.

Caution: Correct tension on springs is necessary to take up shock when small stones lodge between idler sprocket and crawler shoes.

3-42. Instrument Panel and Cab Light Lamp Replacement

a. *General.* Illumination for performance of preventive maintenance checks and services on operating machinery within cab enclosure is furnished by lamps in holders on cab ceiling behind operators seat and on left rear side. These lamps are to be augmented by use of trouble light (para 2-27). Panel lights illuminate instruments on control stand and switches on lighting control panel.

b. *Lamp Replacement.*

(1) *Panel lights.* Remove cover by turning counterclockwise; remove defective lamp by pressing in and turning counterclockwise to free prongs. Insert new lamp and install cover by reversing this procedure.

(2) *Cab lights.* Remove lamp by pressing in and turning counterclockwise to free prongs. Insert new lamp, push in, and turn clockwise to engage prongs of lamp in socket of holder.

3-43. Cable Replacement

a. *Cable Removal.* To replace a defective cable, from shovel hoist drum or when changing front end attachment, proceed as follows.

(1) Remove cable clamps securing cable in dead end socket on right hand boom point sheave (fig. 2-19).

(2) Slowly wind cable on drum through right hand boom point sheave, dipper sheave, and left hand boom point sheave.

(3) Unwind cable from hoist drum, carefully coiling slack in a suitable box, or on a reel, then disconnect

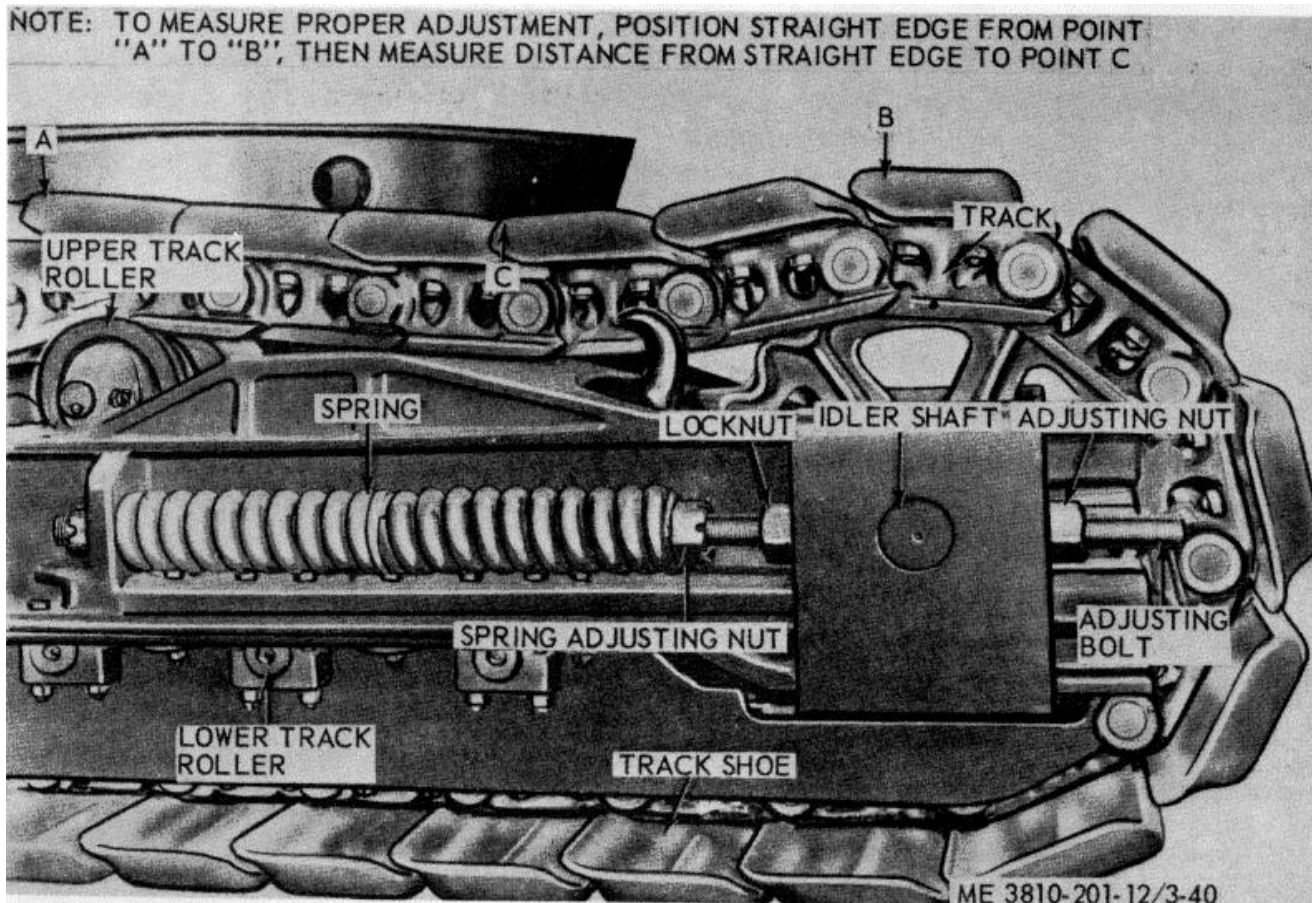


Figure 3-40. Track adjustment.

cable from dead end on lagging of drum.

(4) Remove remaining cables in a similar manner.

b. Cable Installation.

(1) Refer to table 1-2 and select proper type and length of cable for required operation.

(2) Place reel, or coil, of cable at left side of crane-shovel near boom foot.

(3) Pull loose end of cable from reel, or coil, and lead the end of cable to the proper drum.

(4) Position end of cable in dead end socket of drum and secure by driving cable wedge into the drum dead end socket.

(5) Wind cable length on hoist drum until completely off of reel, or out of coil, then begin reeving cable through sheaves as shown on applicable reeving diagram.

(6) Install remaining cables in a similar manner.

c. Cable Lubrication.

(1) *General.* When cables are removed from drums at time of front end attachment conversion, the cable that is serviceable should be wiped free of dirt and thoroughly lubricated with HDO engine oil (LO 5-3810-201-12) as it is placed on reel, or in a coil, for storage.

(2) *Method of lubrication at removal.*

(a) *Paint brush application.* For penetration between strands, and safety from injury by a single broken strand of wire, use two paint brushes from opposite sides of wire. Saturate brushes freely and frequently in HDO engine oil and cover cable thoroughly on all sides as it comes off drum toward reel or coil. Use drying brushes to wipe away excess oil as it goes on reel, or in coil.

(b) *Rag application.* Saturate two large rags in HDO, hold one in each hand, and oil cable plentifully as it comes off drum. Wipe away excess oil before cable winds on reel, or in coil.

Warning: Use heavy leather gloves while holding oily rags on cable, and avoid injury by a broken strand of wire.

(3) *Lubrication at installation.* The procedure outlined above should be reversed at installation, if cable being installed appears in need of lubrication. Lubricate groove and hub of sheaves as cable are reeved also (LO 5-3810-201-12).

Note: Field tests have proved that cables, like any machined part, last longer when they are kept well lubricated.

Section V. TROUBLESHOOTING

3-44. General

This section provides information useful in diagnosing and correcting unsatisfactory operation or failure of the crane-shovel and its components. Malfunctions which may occur are stated, and followed by a list of probable causes of the trouble. The corrective action recommended is described opposite the probable cause.

3-45. Troubleshooting

Refer to table 3-3 for listing of possible malfunctions. Any trouble beyond scope of organizational maintenance personnel shall be reported to direct support maintenance.

Table 3-3. Troubleshooting

Malfunction	Probable cause	Corrective action
1 Engine will not start -----	a. No fuel, or fuel shutoff valve closed.	a. Open fuel shutoff valve, or fill tank.
	b. Low temperature -----	b. Use cold weather starting aid (para 2-25).
	c. Loss of fuel, or air leak -----	c. Tighten loose fuel connections. Prime fuel system (para 3-77).
	d. Defective batteries -----	d. Replace or recharge batteries (para 3-81).
	e. Improper valve clearance -----	e. Adjust valves (para 3-60).
2 Engine hard to start -----	a. Air in fuel, or no fuel -----	a. Tighten loose connections, prime fuel system (para 3-77) and service fuel tank.
	b. Low ambient temperature -----	b. Use cold weather starting aid (para 2-25).
	c. Clogged air cleaner -----	c. Service air cleaner (para 3-11).
3 Engine starts but will not run, or stalls frequently	a. Low on fuel -----	a. Service fuel tank.
	b. Wrong type of fuel -----	b. Drain fuel tank and service with proper fuel.
	c. Loss of fuel-----	c. Tighten loose fuel line connections then prime system (para 3-77).
	d. Fuel filters clogged -----	d. Service fuel filters (para 3-18).
	e. Air cleaner clogged or defective -----	e. Service air cleaners (para 3-11) or replace defective air cleaner (para 3-69).
4 Engine starts but misfires, or	a. Wrong fuel in tank -----	a. Drain tank and service with proper grade fuel.
	b. Fuel filters clogged-----	b. Service fuel filters (para 3-18).
	c. Air cleaner clogged -----	c. Service air cleaner (para 3-11).
	d. Fuel injector defective -----	d. Replace fuel injector (para 3-68).
5 Engine lacks power -----	a. Air cleaner clogged or damaged	a. Service dirty air cleaner (para 3-11) or replace defective air cleaner (para 3-69).
	b. Fuel filter, clogged or defective -----	b. Service fuel filters (para 3-18). Replace defective filter (paras 3-74 and 3-75).
	c. Defective fuel lines -----	c. Tighten loose lines or fittings Replace a defective line (para 3-71).
6 Engine overheats -----	a. Loose fan belt -----	a. Adjust (para 3-21).
	b. Obstructions in fins of radiator -----	b. Clean fins.
	c. Collapsed hose or loose connections	c. Check condition of coolant hose. Tighten loose connections, or replace defective hose (para 3-105).
	d. Low on coolant -----	d. Service radiator (para 3-20).
	e. Oil low in crankcase -----	e. Check oil level Add when necessary (LO 5-3810-201-12).
	f. Defective thermostat -----	f. Replace (para 3-105).

Table 3-3. Troubleshooting - Continued

Malfunction	Probable cause	Corrective action
7. Engine exhaust excessively smoky	a. Air cleaner clogged	a. Service air cleaner (para 3-11).
8. Engine clutch slips -----	b. Defective fuel injector	b. Replace (para 3-68).
9. Engine clutch will not engage	a. Clutch out of adjustment	a. Adjust (para 3-9).
	b. Linkage out of adjustment -----	b. Adjust (para 3-108).
	a. Linkage out of adjustment -----	a. Adjust (para 3-108).
	b. Clutchout of adjustment	b. Adjust (para 3-9).
	c. Worn clutch-----	c. Report defect to general support maintenance.
10. Engine temperature fails to raise	a. Winterfront open at low ambient	a. Adjust winterfront (para 4-52). temperature.
11. Water temperature indicator	b. Defective thermostat (stuck open)	b. Replace (para 3-105).
	a. Loose electrical connection ----- inoperative	a. Tighten all connections, Make good ground.
	b. Transmitter defective -----	b. Replace (para 3-91).
	c. Indicator defective -----	c. Replace (para 3-154).
12. Oil pressure indicator inoperative	a. Loose electrical connections	a. Tighten all connections. See that ground is good.
	b. Defective transmitter -----	b. Replace (para 3-150).
	c. Defective indicator -----	c. Replace (para 3-150).
13. Ammeter inoperative-----	a. Battery cables loose or corroded.	a. Remove corrosion and tighten (para 3-81).
	b. Dead batteries -----	b. Charge or replace (para 3-81).
	c. Ammeter defective -----	c. Replace (para 3-149).
14. Starter motor inoperative -----	a. Loose electrical connections	a. Remove corrosion and tighten battery cables (para 3-81) and at solenoid. Replace defective cables.
	b. Starter push switch defective	b. Replace (para 3-157).
	c. Batteries defective -----	c. Replace (para 3-81).
	d. Defective starter motor -----	d. Replace (para 3-87).
15. Lights are dim or do not light	a. Defective lamps or lights -----	a. Replace (paras 3-15 and 3-42). Replace defective light (paras 3-181 thru 3-188).
	b. Short in wiring-----	b. Replace defective leads (para 3-95).
	c. Batteries dead -----	c. Charge, or replace (para 3-81).
	d. Defective generator, alternator, or regulator	d. Test and replace defective component (para 3-33 thru 3-86).
16. Revolving frame teeters, or will not swing	a. Hook rollers out of adjustment or worn excessively.	a. Adjust (pars 3-39) or replace (paras 3-125 and 3-126).
	b. Swing brake lock engaged, or out of adjustment.	b. Release, or adjust (para 3-33).
	c. Swing jaw clutch out of ----- adjustment.	c. Adjust shoe (para 3-29) or shifter (para 3-33).
17. Boom will not lower -----	a. Boom hoist pawl still engaged -----	a. Release pawl (paras 2-8c and 2-12b).
	b. Brake does not release -----	b. Adjust boom hoist lever and linkage (para 3-120), or clutch (para 3-32).
18. Crane-shovel does not steer --- properly.	a. Steering gear not engaged -----	a. Engage (para 2-8ac).
	b. Steering linkage, clutch, or brake out of adjustment	b. Adjust (para 3-88 and/or 3-138).
19. Cables twisted -----	a. Twisted during installation -----	a. Unwind cable from drum and rewind.
	b. Too much slack -----	b. Refer to applicable front end attachment reeving diagram and reeve correctly.
20. Cables wear rapidly -----	a. Sheave(s) dragging or defective	a. Lubricate (LO 5-8810-201-12), or replace defective sheave bearing or shaft (refer to applicable front end attachment paragraphs).

Table 3-3. Troubleshooting - Continued

Malfunction	Probable cause	Corrective action
21. Cables Jump boom point sheaves	b. Incorrectly reeved and dragging against another cable.	b. Refer to applicable front end attachment reeving diagram and reeve correctly.
	a. Improper operation-----	a. Operator must center boom point over load (para 2-28).
22. Backhoe front end attachment does not operate properly.	b. Improper operation-----	b. Do not allow cable overrun when dropping clamshell or dragline (pares 2-29 or 2-30).
	a. Improper reeving-----	c. Refer to applicable front end attachment reeving diagram and reeve correctly.
	a. Cable out of sheave -----	a. Install, cable (para 3-48).
23. Clamshell bucket fails to open.	b. Improperly reeved-----	b. Refer to figure 2-16 and reeve correctly.
	c. Dipper digs incorrectly-----	c. Adjust pitch brace (para 4-29b).
24. Clamshell bucket will not take proper bite.	a. Closing cable jammed in sheaves---	a. Lower clamshell and free cable.
	b. Closing cable too short-----	b. Lower boom to a horizontal position and replace short cable with one of proper length (table 1-2 and fig. 2-9).
25. Crane will not lift rated capacity	a. Operator holding too much tension on hoist brake.	a. Gradually release brake (para 2-29).
	b. Improper reeving (wrong cable)	b. Lower boom to a horizontal position and check cables (table 1-2 and fig. 2-9).
26. Dragline bucket will not dump properly.	a. Hook block incorrectly reeved-----	a. Reeve hook block with maximum parts of the cable (fig. 2-7).
	b. Crane not level-----	b. Crane must be level, and as near to load as possible (boom near vertical) for maximum lift and swing. (See capacity chart in cab for boom angle or radius required for lift).
27. Shovel front end attachment does not operate properly.	a. Dump sheave binding -----	a. Clean and lubricate cable (pars 3-43) and sheave (LO 5-3810-201-12).
	b. Fairlead sheaves binding -----	b. Clean sheave throat. Lubricate sheaves (LO 5-3810-201-12).
	c. Bucket does not dump soon enough	c. Lengthen dump cable.
	d. Bucket dumps too soon -----	d. Shorten dump cable.
28. Propel chain excessively noisy	a. Clutches slipping -----	a. Adjust (pars 3-32).
	b. Dipper trip inoperative -----	b. Adjust (paras 3-37 and 3-38), or replace clutch shoes (para 4-9).
29. Pins and bushings in crawler track wear excessively.	c. Crowd chain loose-----	c. Adjust (para 3-85).
	a. Chain loose or defective -----	a. Adjust (pars 3-40) or replace (pars 3-144).
30. Idler roller wear excessive-----	b. Worn sprocket -----	b. Replace (para 3-144).
	a. Crawler track too tight -----	a. Adjust (pars 3-41).
31. Trackshoes wear excessively----	b. Crawler track too loose -----	b. Adjust (pars 3-41).
	a. Crawler track out of adjustment	a. Adjust (para 3-41).
32. Heaters do not ignite-----	b. Idler roller, or drive shaft, not parallel to horizontal propel shaft.	b. Adjust (pars 3-41).
	a. Too much sag in track-----	a. Adjust (pars 3-41).
	b. Defective track-----	b. Replace (para 3-141).
	a. Fuel strainers clogged-----	a. Service heater fuel strainers (para 3-25).
	b. Defective igniter-----	b. Replace (paras 4-48, 4-44, or 4-45).
	c. Defective fuel-----	a. Replace (pars 4-46).

Table 3-3. Troubleshooting-Continued

Malfunction	Probable cause	Corrective action
33. Heaters do not keep burning----	<ul style="list-style-type: none"> a. Burner dirty----- b. Fuel strainer clogged----- c. Defective fuel pump----- d. Defective limit switch----- 	<ul style="list-style-type: none"> a. Clean burner (paras 4-43, 4-44 and 4-45). b. Service (para 3-25). c. Replace (para 4-46). d. Replace (paras 4-43, 4-44, and 4-45).

Section VI. FIELD EXPEDIENT REPAIRS

3-46. General

Organizational maintenance troubles may occur while the crane-shovel is operating in the field where supplies and repair parts are not available and corrective action cannot be performed. When this condition exists, the following expedient repairs may be used in emergencies upon the decision of the unit commander. Equipment so repaired must be removed from operation as soon as possible and properly repaired before being placed in service again.

3-47. Starter Motor Fails to Turn Engine

<i>Trouble</i>	<i>Expedient remedy</i>
Dead batteries	Use jumper cables from other batteries or another piece of equipment to supply current for starting engine.

3-48. Engine Overheats

<i>Trouble</i>	<i>Expedient remedy</i>
Defective thermostat	Remove thermostat (para 3-105) and operate without until one is received.

3-49. Engine Starved for Fuel

<i>Trouble</i>	<i>Expedient remedy</i>
Clogged filter element	Remove filter element para 3-13) and operate without until one is received.
Defective fuel filter	Remove fuel filter (para 3-74 or 3-75), connect by-pass line, and operate without until one is received.

3-50. Low Engine Oil Pressure

<i>Trouble</i>	<i>Expedient remedy</i>
Clogged filter element	Remove oil filter element (para 3-4f) and operate without until one is received.

3-51. Engine Oil Strainer Faulty

<i>Trouble</i>	<i>Expedient remedy</i>
Clogged or defective filter.....	Remove filter element (para 3-4g) reassemble oil strainer and use without until one is received.

Section VII. RADIO INTERFERENCE SUPPRESSION

3-52. General Methods Used to Attain Proper Suppression

Essentially, suppression is attained by providing a low resistance path to ground for the stray currents. The methods used include shielding the ignition and high-frequency wires, grounding the frame with bonding straps, and using capacitors and resistors.

3-53. Interference Suppression Components


a. Primary Suppression Components. The primary suppression components are those whose primary function is to suppress radio interference. These components are described and located in figure 3-41

b. Secondary Suppression Components. The secondary suppression have radio interference suppression functions which are incidental of secondary to their primary function.

3-54. Replacement of Suppression Components

a. General. Replacement of suppression components requires positive metal-to-metal contact with washers and ground straps. Replace as follows:

- b. Generator Ground Strap.*
 - (1)Remove capscrew (fig. 3-41) and ET washer that secures ground strap to engine.
 - (2)Remove capscrew and ET washer that secures ground strap to generator, and remove ground strap.

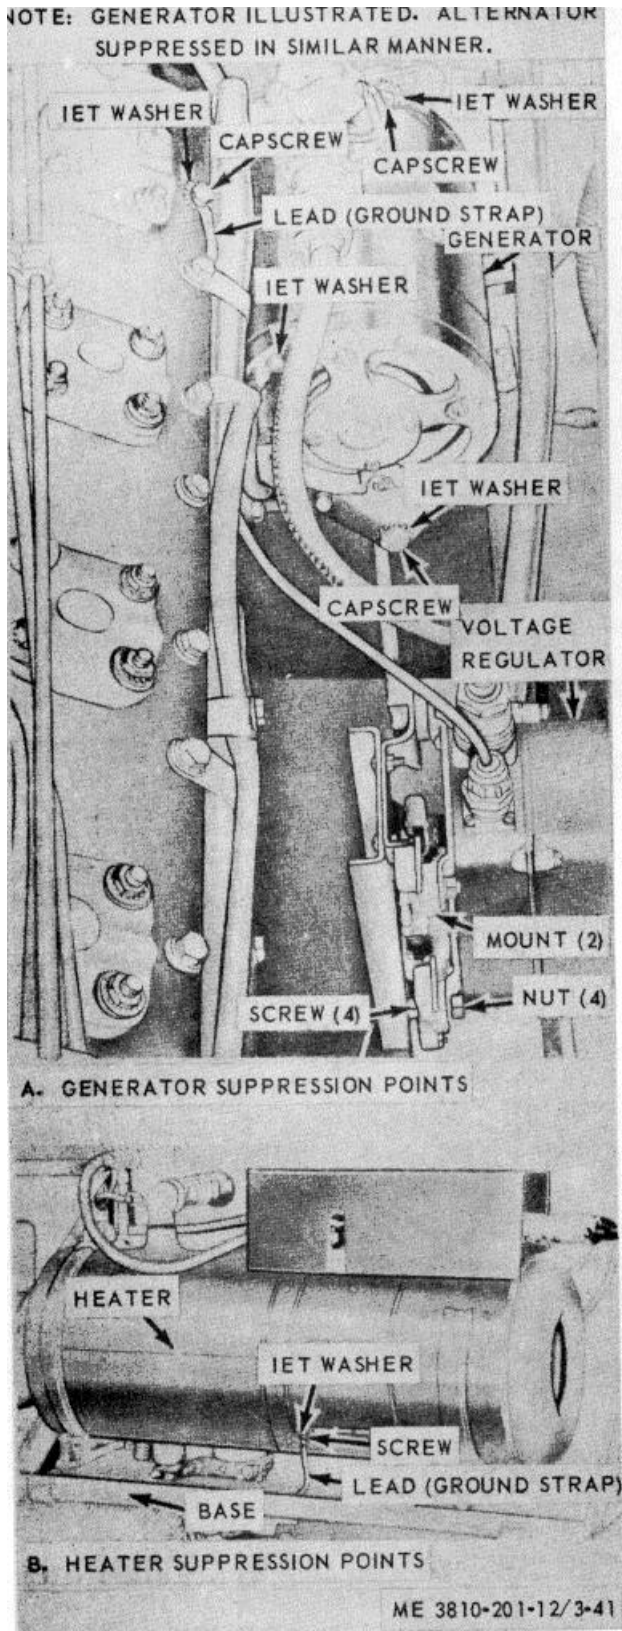

(3) Place new ground strap in position and secure to engine with IET washer and capscrew.

(4) Connect ground strap to generator and secure with IET washer and capscrew.

c. Voltage Regulator.

(1) Remove four nuts and screws (fig. 3-41) that secures regulator and two mounts, and remove regulator.

(2) Place new regulator in position with two mounts and secure with four screws and nuts.

d. Heaters.

(1) Remove screw and IET washer that secures ground strap (fig. 3-41) to heater.

(2) Remove screw and IET washer that secures ground strap to heater base, then remove ground strap.

(3) Place new ground strap in position and secure to heater base with IET washer and screw.

(4) Position ground strap on heater and secure with IET washer and screw.

3-55. Testing of Radio Interference Suppression Components

Test any capacitors for leaks and shorts on a capacitor tester; replace defective capacitors. If test equipment is not available and interference is indicated, isolate the cause of interference by the trial and error method of replacing each capacitor in turn until the cause of interference is located and eliminated.

Figure 3-41. Radio interference suppression components

Section VIII. ORGANIZATIONAL MAINTENANCE PROCEDURES

3-56. General

The instructions in this section, and all subsequent paragraphs and sections, are published for the information and guidance of organizational maintenance personnel in maintaining the crane shovel.

3-57. Inspection and Test

All inspection and test requirements outlined in maintenance allocation chart for organizational level are covered in the paragraphs describing other maintenance procedures within the system.

Section IX. ENGINE CYLINDER HEAD AND VALVE MECHANISM

3-58. General

a. Model 687C-18-ES Engine. On this two cycle diesel engine the cylinder head forms the top of the combustion chamber and contains passages for the intake of air and the expulsion of gases. The exhaust valve mechanism is attached to the head. The rocker arm, which directly operates the exhaust valve, operates on a short shaft mounted in two supports on the cylinder head. Valve lash adjustment is accomplished with the adjustable ball-ended screw in the rocker arm.

b. Model D33TA Engine. On this four cycle diesel engine the valves and valve mechanism admit inlet air and release exhaust gases at precisely timed intervals during engine operation. The inlet valve is open during inlet stroke of piston to permit air to enter cylinder. After the power stroke, the exhaust valve is opened to permit piston to force burned gases from the cylinder as it moves upward in the exhaust stroke.

c. Differences. There are other changes in configuration between the two engines, in addition to quantity of valves and stroke cycles, which will be covered in the applicable maintenance paragraphs.

3-59. Valve Cover and Gasket

a. Removal and Installation, Model 687C-18ES Engine.

(1) Turn three locking handwheels securing cover counterclockwise until they are loose, then remove valve cover from cylinder head.

(2) Remove valve cover gasket from cylinder head (or cover) and discard.

(3) Install new valve cover gasket on cylinder head; position valve cover on gasket, then secure by turning the three locking handwheel clockwise until they are tight.

(4) Start engine (para 2-10), run until engine reaches operating temperature, checking for oil leaks at gasket. Stop engine (para 2-11); correct any leaks, then add

engine oil to crankcase, if necessary (LO 5-3810-201-12).

b. Removal and Installation, Model D333TA Engine.

(1) Remove the six bolts, flatwashers, and seals that secure valve cover to cylinder head, remove valve cover, and inspect gasket.

(2) Replace a defective gasket seal, then carefully install valve cover. Be sure gasket fits recess in valve cover, then install six seals in top of valve cover, position flatwashers on bolts, install bolts through seals, and tighten to between 12 and 18 foot-pounds torque.

(3) Start engine (para 2-10), and run until engine reaches operating temperature, checking for oil leaks at gasket and seals. Stop engine (para 2-11), correct any leaks, then add engine oil to crankcase if necessary (LO 5-3810-20112).

3-60. Valve (Rocker Arm) Adjustment

a. General. The valve adjustment may be accomplished with engine hot, or cold. But when adjusted cold, final adjustment must be made while hot. These instructions will cover valve adjustment on a hot engine (water temperature between 160°F and 180°F).

b. Model 687C-18-ES Engine Valve Adjustment.

(1) Remove valve cover (para 3-59).

(2) Start engine (para 2-10) and run until operating temperature is reached (between 160° and 180° F).

(3) When engine is at operating temperature, stop engine (para 2-11), with cylinder No. 1 at top dead center (valve seated closed) Use wrench (fig. 3-42) to loosen locknut holding valve adjusting screw.

(4) Use screwdriver and turn adjusting screw until a clearance of 0.012 inch (hot) to 0.014 inch (cold) is obtained with thickness gage.

Note: When engine temperature is at 130° F or below, it is considered to be a cold engine.

(5) When clearance is correct, hold adjusting screw with screwdriver and tighten the locknut.

(6) Recheck clearance. Readjust if necessary.


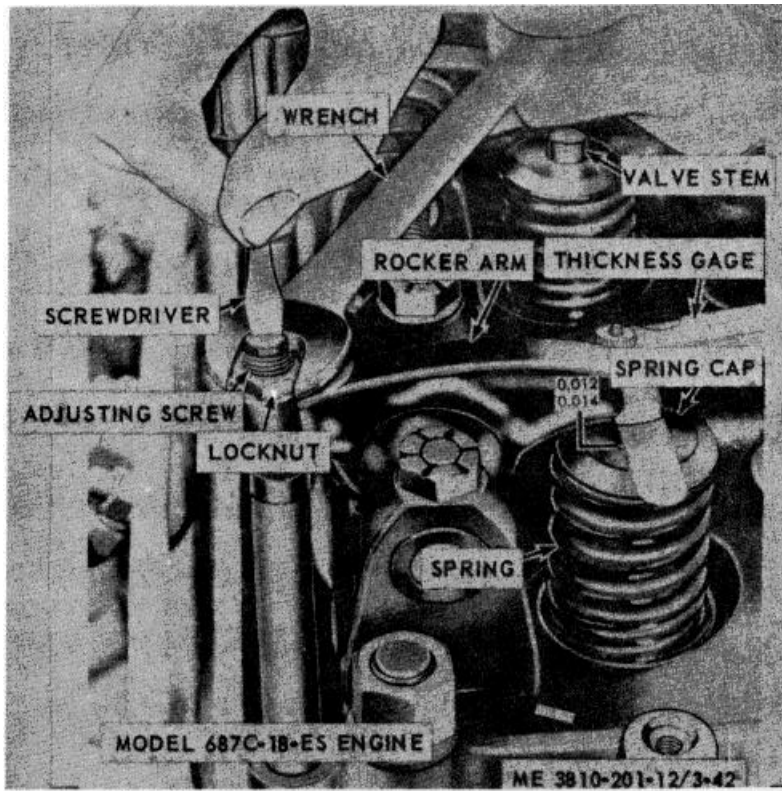


Figure 3-42. Valve (rocker arm) adjustment, model 687C-18-ES engine.

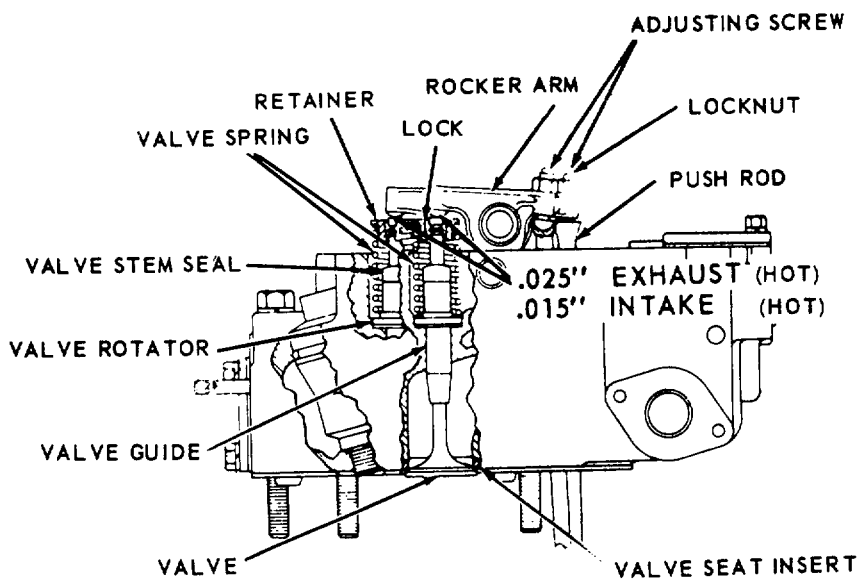

MODEL D333TA ENGINE

ME 3810-201-12/3-43

Figure 3-43. Valve (rocker arm) adjustment, Model D333TA engine.

(7)Repeat steps (3) through (6) above for remaining cylinders. Cylinders fire in 1-6-2-4-3-5 order.

(8)Install valve cover (para 3-59).

c. *Model D333TA Engine Valve Adjustment.*

(1)Remove valve cover (para 3-59).

(2)Start engine (para 2-10) and run until operating temperature is reached (between 160° and 180°F).

(3)When engine is at operating temperature, stop engine (para 2-11) with cylinder No. 1 at top dead center on compression stroke (both valves seated closed). Refer to figure 3-43, and use a wrench to loosen locknuts holding valve adjusting screws.

(4)Use screwdriver and adjust exhaust valve until a clearance of 0.025 inch (hot) 0.028 inch (cold) is obtained with thickness gage (fig. 3-42).

Note. When engine temperature is at 130° F, or below, it is considered to be a cold engine.

(5)When clearance is correct, hold adjusting screw with screwdriver and tighten the locknut.

(6)Recheck clearance. Readjust if necessary.

(7)Repeat steps (3) through (6) for intake valves, except use 0.015 inch (hot) 0.017 inch (cold).

(8)Repeat above procedures for remaining cylinders. Cylinders fire in 1-5-3-6-2-4 order.

(9)Install valve cover (para 3-59).

Section X. ENGINE LUBRICATION SYSTEM

3-61. General

a. *Description.* A pressurized lubricating system, filtered and strained, with full flow by-pass features is pumped from crankcase oil pan through strainer and filter to passages designed to distribute oil where it is most required. Differences are described under paragraph devoted to each engine.

b. *Engine Model 687C-18-ES.* A gear type oil pump is mounted in bottom of oil pan at rear of engine. This pump forces oil to front of engine through a supply line and cored passage to oil strainer; through strainer to manifolds on each side of engine, where it is distributed to all moving parts by means of holes drilled at strategic points. Exhaust valve rocker arms are lubricated through an external line which supplies oil to end rocker arm shaft. The remaining rocker arms are lubricated by means of short jumper connections. The blower is also lubricated through an external line. Drain plugs for draining system are located on bottom of oil pan, and side of oil strainer housing.

c. *Engine Model D333TA.* A two section oil pump contains a scavenge pump and a pressure pump. Oil that does not return to pan is collected by a scavenge tube and then returned to oil pan. Oil is pumped from oil pan to oil cooler, then to oil filters, except on starting, when it is by-passed through an external line to the filters, cutting out the cooler for cold oil. When engine is first started, unfiltered oil is passed by the turbocharger lubrication valve to turbocharger components by an external line. As the oil temperature increases, the oil cooler by-pass valve closes, forcing oil through cooler to filter bases. As oil pressure is built up through filters,

the turbocharger lubrication valve closes off flow of unfiltered oil and provides filtered oil to turbocharger components. The oil filter bypass valve opens when filters become restricted and allows oil to bypass filters and flow directly to outlet passage. Unless filters become restricted or oil viscosity is extremely high, only filtered oil is furnished to the engine bearings. The by-pass valves assures supply of lubricating oil any time filter, cooler, or both may become clogged.

3-62. Engine Oil Filters

a. *For Engine Model 687C-18-ES.*

(1)Removal and installation.

(a)Refer to figure 3-44, disconnect oil line from elbow at strainer, then remove oil line from filter.

(b)Remove drain plug, drain filter, then remove remaining oil lines and fittings. Plug line ends or ports to prevent contamination of oil supply.

(c)Remove items 1 through 7, figure 3-45, then remove filter and mounting bracket from engine as an assembly.


(d)Remove remaining filter in a similar manner.

(2)Disassembly and reassembly. Refer to figure 3-45 and disassemble oil filter in numerical (9 through 27) order. Reassemble in reverse order.

(3)Cleaning, inspection, and repair.

(a)Clean all parts in an approved cleaning solvent, except filter element and gaskets which are discarded, then dry thoroughly.

(b)Visibly inspect all parts for signs of damage or defect.

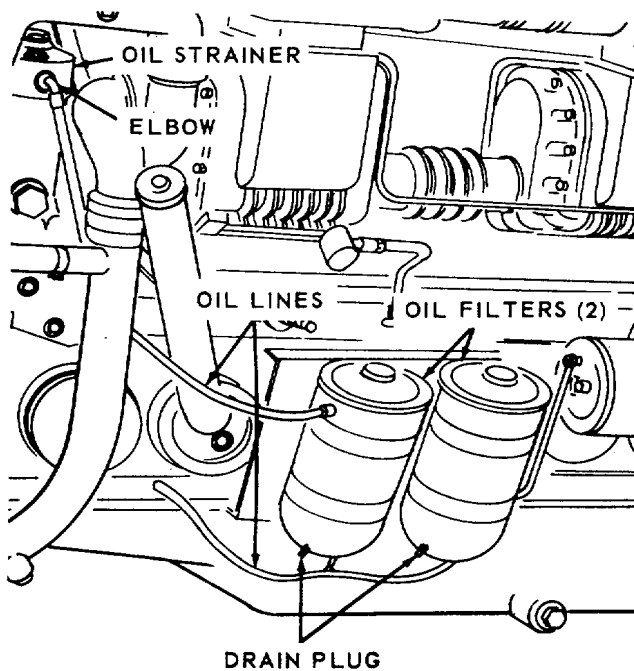

ME 3810-201-12/3

Figure 3-44. Engine oil filters (for engine 687C-18-ES), removal and installation.

(c) Repair by replacing damaged or defective part, all gaskets, and filter element.

b. For Engine Model DS33TA.

(1) *Removal and installation.* Remove drain plug (view A, fig. 3-46) and drain oil filters, disconnect oil lines, remove six capscrews and lockwashers then remove oil filter base from engine.

(2) *Disassembly and reassembly.* Refer to view B of figure 3-46 and disassemble the oil filters in numerical sequence. Reassemble in reverse order.

(3) *Cleaning, inspection and repair.*

(a) Clean all parts except filter element, which is discarded, in an approved cleaning solution and dry thoroughly.

(b) Visibly inspect all parts for deformation, stripped threads, or excessive wear. Inspect the three by-pass valves and the seating surfaces within filter base for wear or damage. Inspect springs for loss of tension or deformation. Inspect packings, seals and gaskets for signs of damage or deterioration.

(c) Repair by replacing damaged or defective parts.

3-63. Engine Oil Strainer (for Engine Model 687C-1-ES)

a. *Removal and Installation.* Refer to figure 3-47, perform step 1 and remove oil strainer from engine. Install in reverse order.

b. *Disassembly and Reassembly.* Refer to figure 3-47, perform step 2 and disassemble oil strainer. Reassemble in reverse order.

c. *Cleaning, Inspection, and Repair.*

(1) Clean all parts in an approved cleaning solvent and dry thoroughly, using low pressure compressed air to blow filter element dry. Be sure all gummy sludge has been removed from filter element.

(2) Visually inspect all parts for bends, breaks, or distortion, and mounting hardware for stripped threads or other defect.

(3) Repair by replacing all gaskets, then replace any other part that is excessively worn, damaged or defective.

3-64. Engine Oil Level Gage (Dipstick)

a. On Engine Model 687C-18-ES.

(1) *Removal.*

(a) Refer to figure 3-1 (6), reference number 53, and remove dipstick from tube.

(b) Remove tube from bushing by turning in a counterclockwise direction.

(c) Remove bushing from block.

(2) *Installation.* Install by reversing procedure used in (a), (b) and (c) above.

b. On Engine Model D333TA.

(1) *Removal.*

(a) Refer to figure 3-48 and remove dipstick from tube.

(b) Remove capscrew (2) and lockwasher (2) then remove tube from oil pan.

(2) *Installation.* Install by reversing procedure in steps (a) and (b) above.

3-65. External Oil and Ventilation Lines

a. On Engine Model 687C-18-ES.

(1) *Removal.*

(a) Loosen coupling nut (fig. 3-49) and remove air box drain tube from clamp.

(b) Remove crankcase ventilation line by removing items 4 through 12 in sequence.

(c) Remove remaining external oil lines in a similar manner.


(2) *Installation.* Install external oil and ventilation lines by reversing procedure in steps (a) (b) and (c) above.

b. On Engine Model D333TA. Remove and install external oil and ventilation lines from engine model D333TA in a manner similar to that described in a above.

3-66. Crankcase Breather and Oil Filler Pipe

a. Oil Filler Pipe (on Model 687C-18-ES).

(1) *Removal.* Refer to figure 3-45 and remove oil

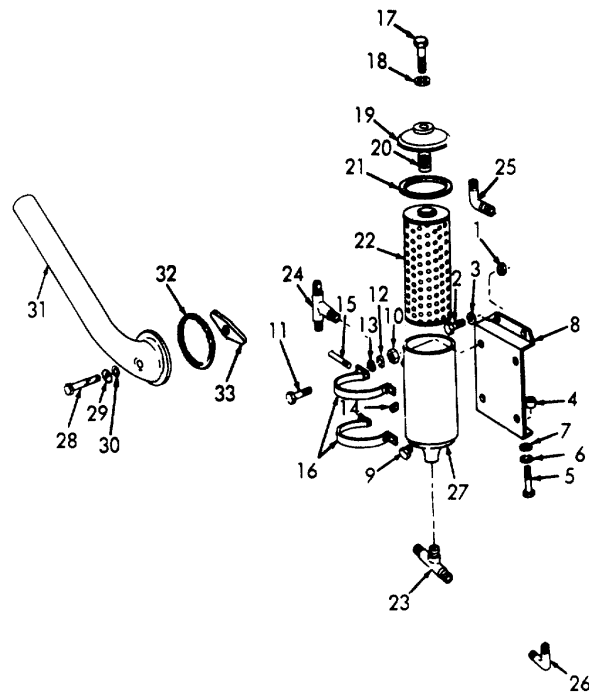

ME 3010-201-12/3-45

- | | | |
|------------------|-------------------|-----------------|
| 1 Nut (4) | 12 Lockwasher (4) | 23 Tee |
| 2 Capscrew (4) | 13 Flatwasher (4) | 24 Tee |
| 3 Lockwasher (4) | 14 Nut (2) | 25 Elbow |
| 4 Nut (4) | 15 Bolt (2) | 26 Elbow |
| 5 Bolt (4) | 16 Straps (2) | 27 Filter shell |
| 6 Lockwasher (4) | 17 Capscrew | 28 Bolt |
| 7 Flatwasher (4) | 18 Packing | 29 Lockwasher |
| 8 Bracket (2) | 19 Cover | 30 Flatwasher |
| 9 Drain plug | 20 Spring | 31 Filler, pipe |
| 10 Nut (4) | 21 Packing | 32 Packing |
| 11 Bolt (4) | 22 Filter element | 33 Bracket |

Figure 3-45. Engine oil filters (Model 887C-18-ES) disassembly, and reassembly, and oil filter pipe removal and installation.

filler pipe by removing items 28 through 27 in numerical sequence.

(2) *Installation.* Install oil filler pipe by reversing procedure in (1) above.

b. *Crankcase Breather and Oil Filler (on Model D333TA).*

(1) *Removal.* Refer to figure 3-50 and remove crankcase breather and oil filler from left hand side of engine.

(2) *Disassembly and reassembly.* Refer to figure 3-50 and disassemble crankcase breather and oil filler. Reassemble in reverse order.

(3) *Installation.* Reverse procedure in (1) above for installation.

c. *Cleaning, Inspection, and Repair.*

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect for deformation or defect, including deterioration of hose or gaskets.

(3) Repair by replacing damaged or defective parts.


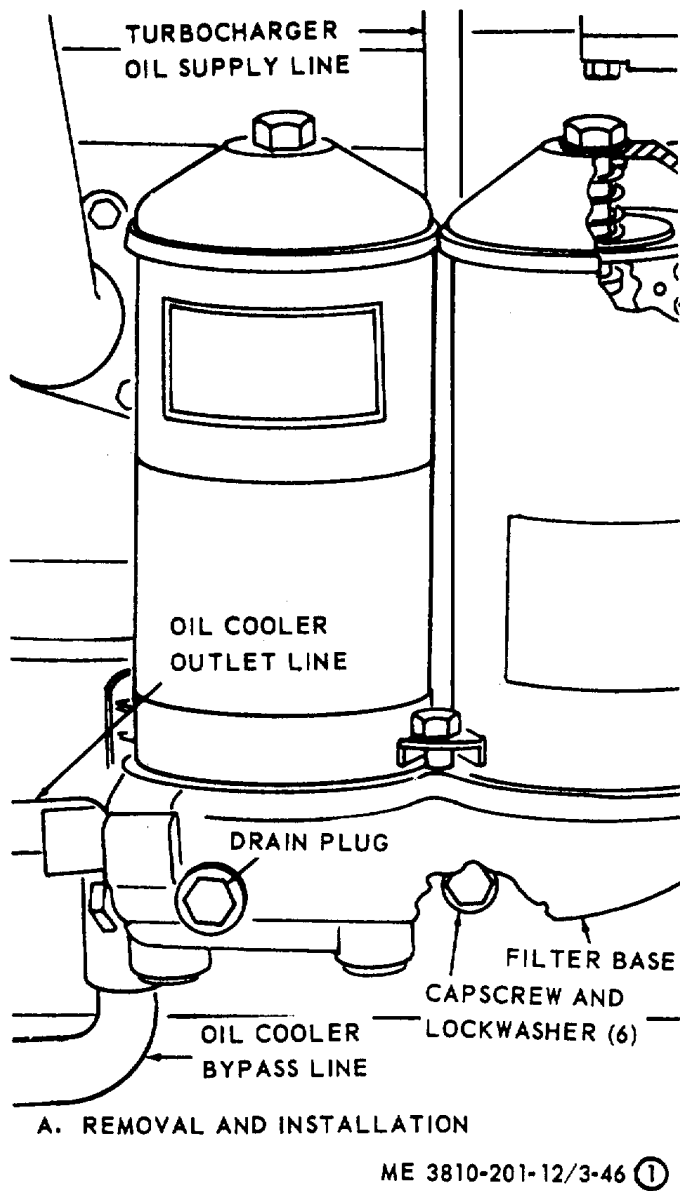


Figure 3-46. Oil filters, removal, disassembly, reassembly and installation for engine Model D333TA (sheet 1 of 2).

NOTE: THE RETAINER (21) IS A PRESS FIT, BUT IS EASILY REMOVED BY USING A 3/8-16 (NC) BOLT OF SUITABLE LENGTH AND A SPACER.

NOTE: AT REASSEMBLY, COAT PREFORMED PACKING OR SEALS WITH LIQUID SOAP TO EASE INSTALLATION.

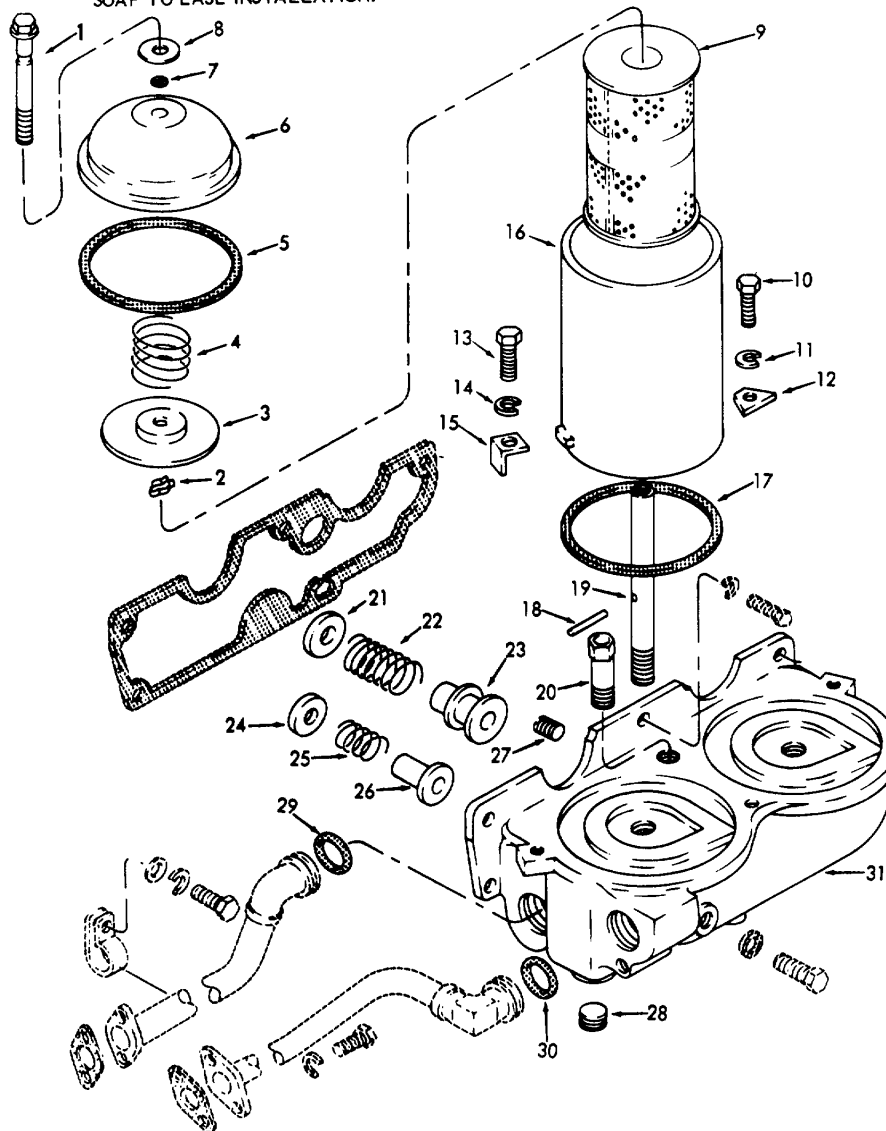


B. DISASSEMBLY AND REASSEMBLY

ME 3810-201-12/3-46 ②

- | | | |
|------------------|-------------------|----------------|
| 1 Screw | 12 Clamp | 22 Spring |
| 2 Clip | 13 Capscrew (2) | 23 Valve |
| 3 Plate | 14 Lockwasher (2) | 24 Plug (2) |
| 4 Spring | 15 Clamps (2) | 25 Spring (2) |
| 5 Gasket | 16 Case (2) | 26 Valve (2) |
| 6 Cover | 17 Gasket (2) | 27 Plug |
| 7 Seal | 18 Spring pin (2) | 28 Plug |
| 8 Washer | 19 Stud (2) | 29 Packing |
| 9 Filter element | 20 Adapter | 30 Packing |
| 10 Capscrew | 21 Retainer | 31 Filter base |
| 11 Lockwasher | | |

Figure 3-46. Oil filters, removal, disassembly, reassembly, and installation for engine Model D333TA (sheet 2 of 2).

STEP 1. DISCONNECT OIL LINE (NOT SHOWN) FROM ADAPTER. REMOVE ITEM 1 AND 2 AND DRAIN STRAINER. REMOVE ITEMS 3, 4, AND 5, THEN REMOVE STRAINER AND GASKETS 6 AND 7 FROM ENGINE.

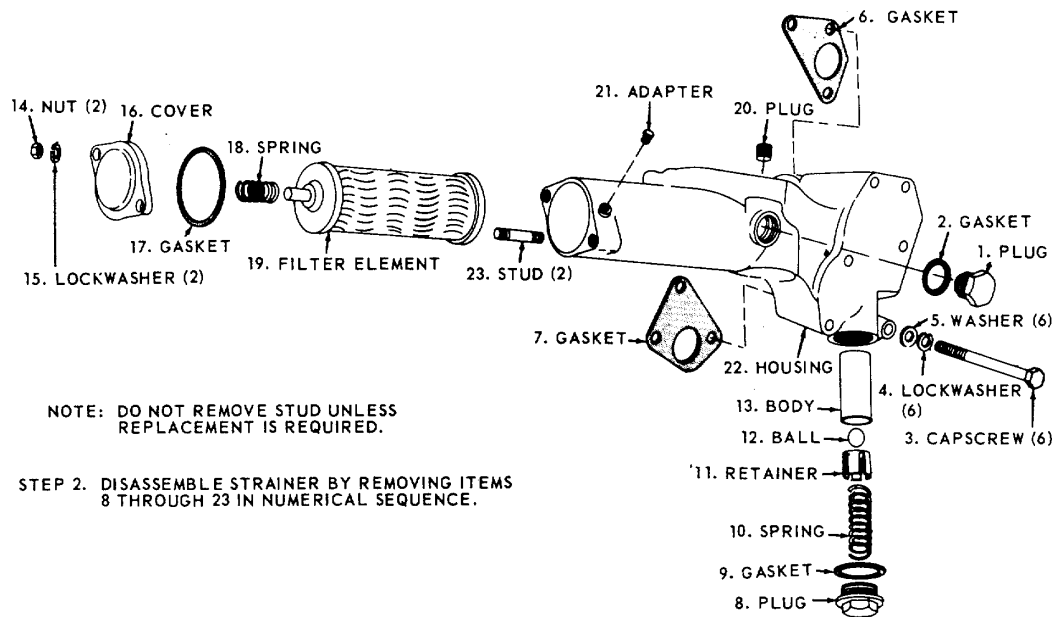

ME 3810-201-12/3-47

Figure 3-47. Engine oil strainer (for engine Model 687C-18-ES), removal, disassembly, reassembly and installation.

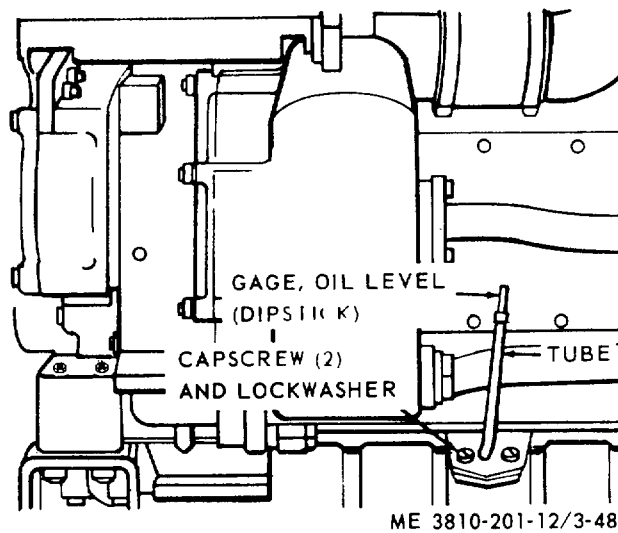


Figure 3-48. Engine oil level gage (Dipstick).


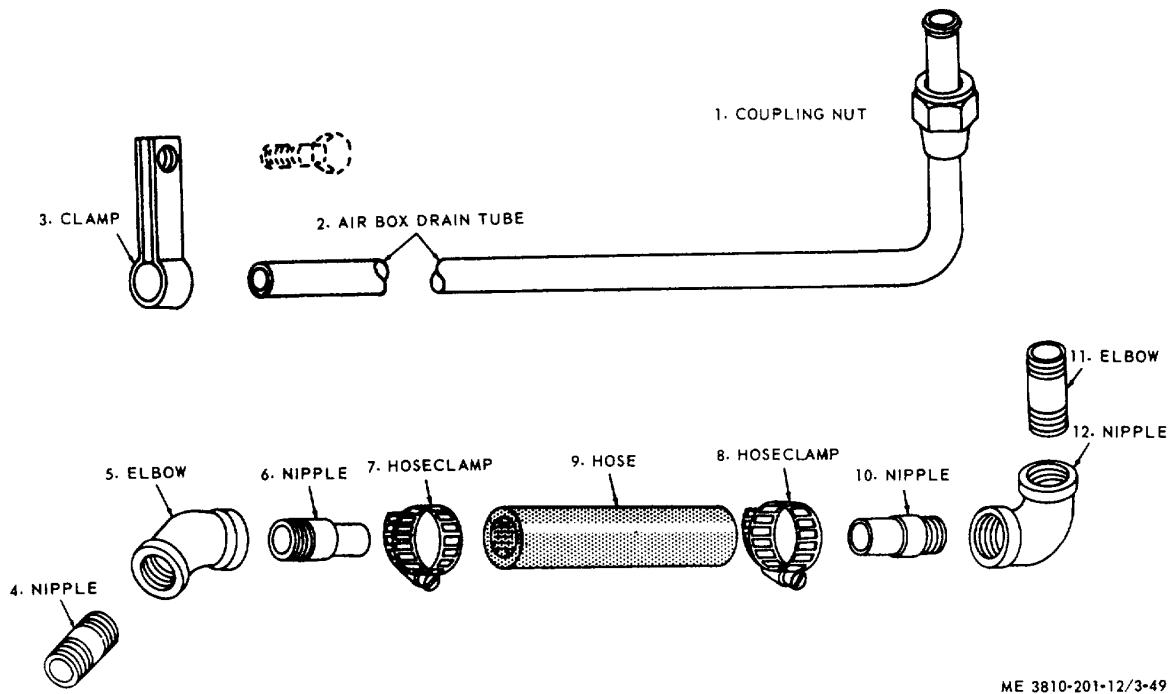


Figure 3-49. External oil and ventilation lines, removal and installation.

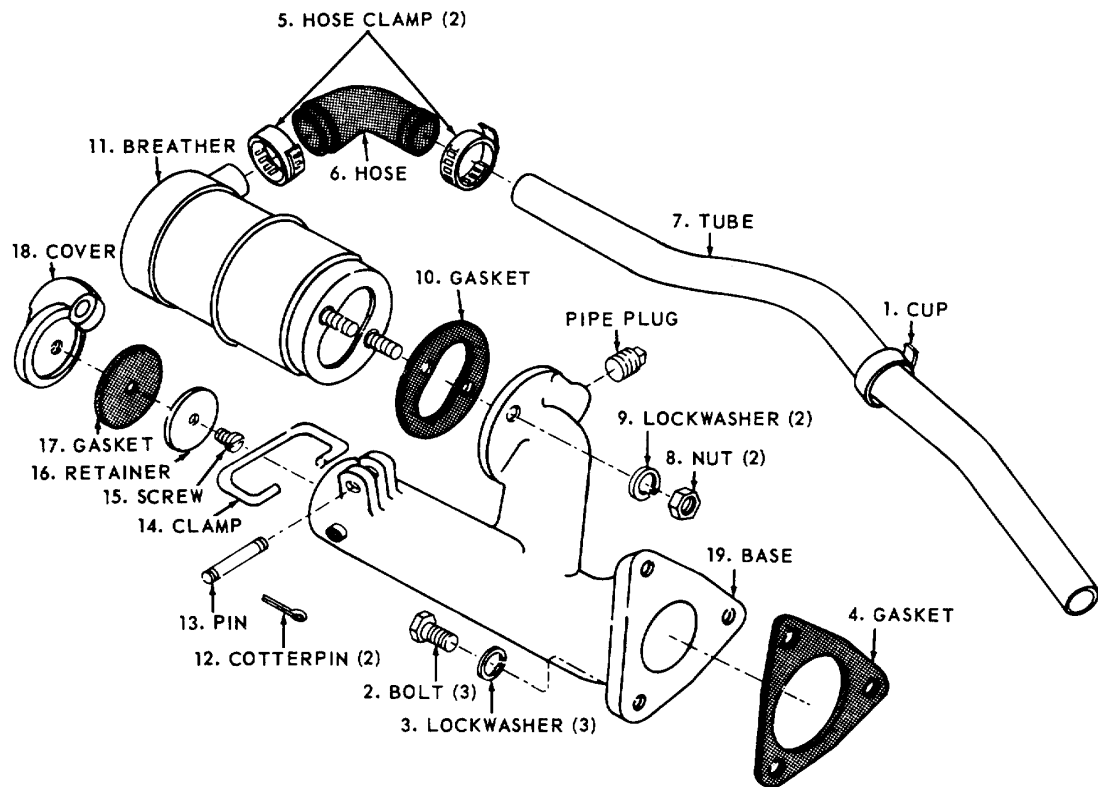

STEP 1. REMOVE CLIP FROM TUBE, BOLT (3) AND LOCKWASHER (3), THEN REMOVE BASE AND GASKET FROM LEFT SIDE OF ENGINE.

STEP 2. DISASSEMBLE BY REMOVING ITEMS 5 THROUGH 18 IN NUMERICAL SEQUENCE FROM BASE 19.

NOTE: REASSEMBLE AND INSTALL BY REVERSING ABOVE PROCEDURE.

ME 3810-201-12/3-50

Figure 3-50. Crankcase breather and oil filler (engine model D333TA), removal, disassembly, reassembly and installation.

Section XI. FULL SYSTEM

3-67. General

a. *Fuel System for Engine Model 687C-18-ES.* The fuel supply system for this engine consists of a fuel tank, shutoff valve, primary filter, priming pump, secondary filter, and a transfer pump that is built into the fuel injection pump. It also includes a return flow line from injectors to pump, and return lines through shutoff valve to fuel tank. The injection pump forces a metered amount of fuel through lines to injectors, and into engine cylinders at high pressure. An overspeed governor driven by tachometer drive, activates shutdown lever on injection pump through a microswitch controlled circuit, when rpm exceeds 1935 + or - 15 rpm.

b. *Fuel System Flushing Procedure for Engine Model 687C-18-ES.*

(1) Disconnect fuel line at pump inlet and place end of line in a suitable container.

(2) Pump the hand primer (para 2-8ar) several times to flush the lines and filters.

(3) Reconnect fuel line to pump inlet. Be sure the fuel line connector screws are set at proper torque of 420 inch-pounds.

Note: New fuel line connector washers should be installed every time the fuel line connector screws are loosened.

(4) Disconnect injector lines at the injectors.

(5) Crank the engine with starter for thirty seconds.

(6) Reconnect injector lines.

Note: A characteristic of the Roosa-Master fuel injection pump is that if engine misfiring occurs and it is traced to a certain cylinder in which no combustion is taking place, the cause may be a nozzle valve sticking open in the cylinder which immediately precedes that cylinder in the firing order. During injection to the cylinder which has the nozzle valve sticking in the open position, the fuel rushes into that cylinder with no restriction, causing a scavenging effect in the pump distributor rotor and a void which cannot be reached to a sufficient degree to provide opening pressure of fuel to the following nozzle valve. Hence, no combustion can take place.

c. *Fuel System for Engine Model D333TA.* The fuel is drawn from supply tank by a gear type transfer pump that forces fuel through a drilled passage in filter housing to the outside of filter element. A spring loaded by-pass valve on front of filter housing maintains a maximum pressure of approximately 15 psi on the fuel in filter housing; as indicated on fuel pressure gage mounted on housing. This fuel transfer pump supplies more fuel than is required by engine, or to maintain 15 psi pressure. Excess fuel is by-passed around valve

and returned to fuel tank. Filtered fuel flows up center of filter housing into a passage through cover then down rear of housing to fuel manifold, which distributes fuel to the injection pumps. A cam activated injection pump for each cylinder, forces fuel through an injection line to proper fuel injector where a definite quantity of fuel is forced into precombustion chamber at the proper time.

d. *Fuel System Flushing Procedure for Engine Model D333TA.*

(1) Open vent valve at front of filter cover.

(2) Operate primer pump (para 2-8ar) several times, until a solid stream of fuel flows out of the drain tube, indicating that all air has been flushed from the system.

(3) Close the vent valve.

Note: The fuel system may also be flushed by using transfer pump to force fuel out of drain tube. Open vent valve and operate starter for approximately thirty seconds, or until a solid stream of fuel flows out of drain tube, whichever requires the shorter time, then close vent valve.

3-68. Fuel Injector and Fuel Line

a. *General.* A fuel injector or fuel line that is loose, damaged, or defective will effect diesel engine operation. When it is suspected that a fuel injector is defective, the defective injector can be isolated by the following process of elimination: (1) Loosen fuel line coupling nut at fuel injector while engine is idling, and observe engine performance.

(2) If idling speed slows down, the injector is working.

(3) If there is no noticeable difference in engine speed, that injector is defective. Repeat on remaining five injectors. Replace defective or damaged fuel line, or injector.

b. *Removal and Installation.*

(1) On engine model 687C-18-ES.

(a) Refer to figure 3-51 and remove items in numerical sequence.

(b) Install by reversing procedure above.

(2) On engine model D383TA.

(a) Refer to figure 3-52 and remove glow plug to prevent damage.


(b) Remove remaining items in numerical sequence.

(c) Install by reversing procedure above.

3-69. Air Cleaners

a. *Used by Engine Model 687C-18-ES on Crane Model 855BG2.*

(1) Removal and installation. Refer to figure 3-53, remove items 1 through 5 in numerical sequence, and

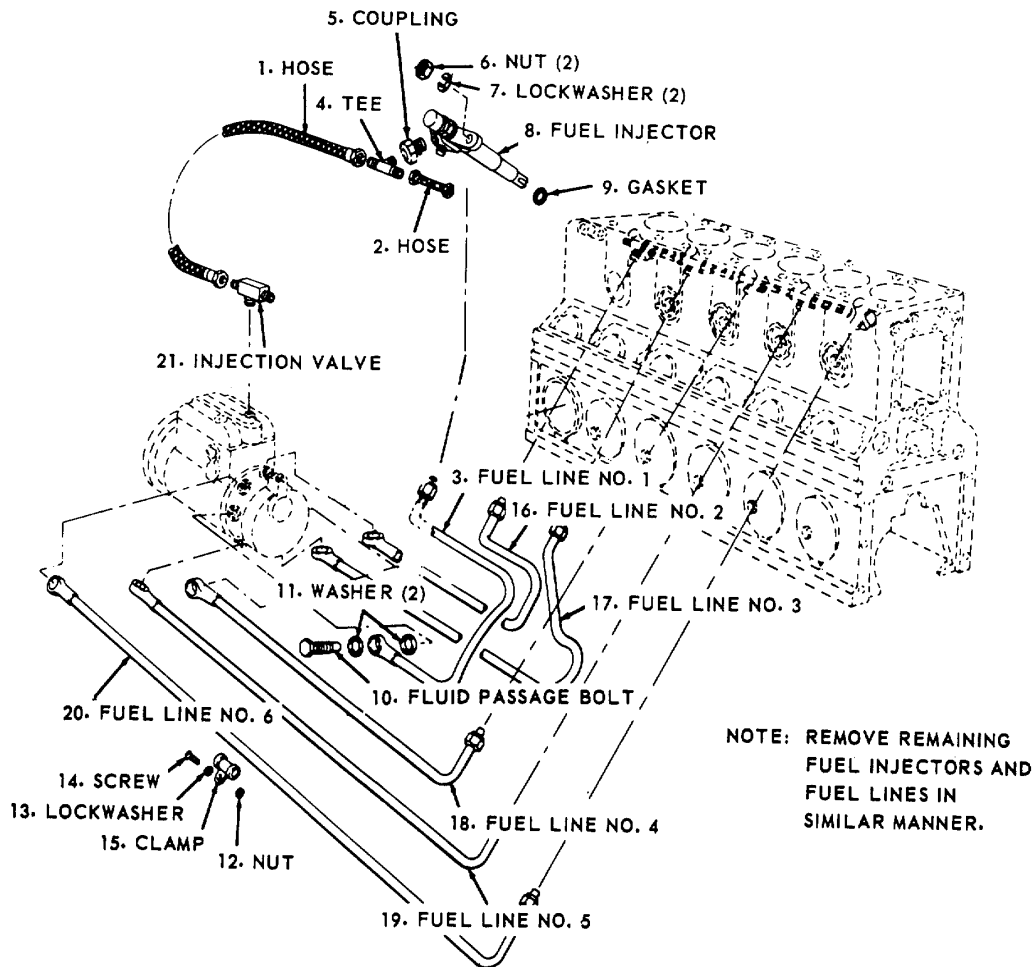

ME 3810-201-12/3-51

Figure 3-51. Fuel injector and fuel line removal and installation (engine model 687C-18-ES).

remove air cleaner from engine. Install in reverse order.

(2) *Disassembly and reassembly.* Refer to figure 3-53, remove items 6 through 21 in numerical sequence and disassemble air cleaner. Reassemble in reverse order.

(3) *Mounting bracket removal and installation.* Refer to figure 3-53, remove items 23 through 33 in numerical sequence and remove mounting bracket from engine. Install in reverse order.

(4) *Cleaning, inspection and repair.*

(a) Clean all parts with an approved cleaning solvent and dry thoroughly.

(b) Visually inspect for dents, breaks, cracks, stripped threads on mounting hardware, or deterioration of packings

(c) Repair by replacing defective packings, hardware, or damaged air cleaner.

(5) *Service.* Service air cleaner as described in paragraph 3-4.

b. Used by Engine Model 687C-18-ES on Crane Model 855BG3.

(1) *Removal and installation.* Refer to figure 3-53, remove items 1 through 5 in numerical sequence, and remove air cleaner from engine. Install in reverse order.

(2) *Disassembly and reassembly.* Refer to figure 3-54 and disassemble air cleaner in numerical sequence. Reassemble in reverse order.

(3) *Mounting bracket removal and installation.* Refer to figure 3-53, remove items 23 through 33 in numerical sequence, and remove mounting bracket from

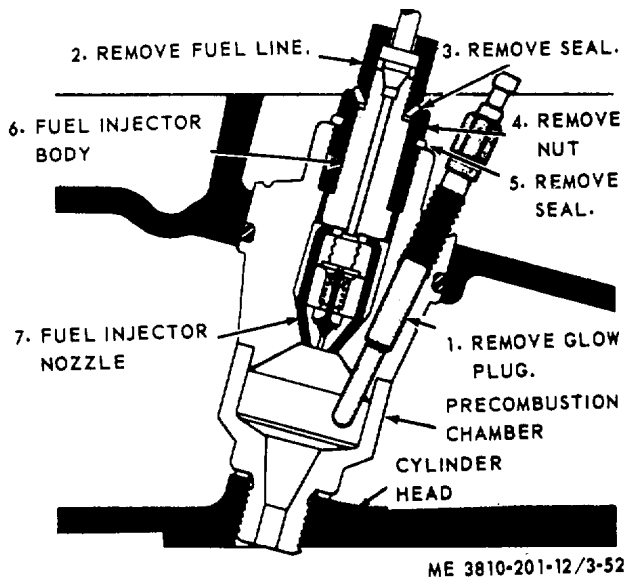


Figure 3-52. Fuel injector, fuel line and glow plug, removal and installation.

mounting bracket from engine. Install in reverse order.

(4) *Cleaning, inspection, and repair.*

(a) Clean all parts with an approved cleaning solvent and dry thoroughly.

(b) Visually inspect all parts for breaks, bends, cracks, stripped threads, or deterioration of packings.

(c) Repair by replacing defective hardware, deteriorated packings or a damaged air cleaner.

(5) *Service.* Service air cleaner as directed in paragraph 3-4.

c. *Used by Engine D3SSTA on all Model Cranes.*

(1) *Removal and installation.* Refer to figure 3-55, remove items 1 through 8 in numerical sequence, then remove air cleaner from support bracket and turbocharger coupling. Install in reverse order.

(2) *Disassembly and reassembly.* Refer to figure 3-56, disassemble air cleaner by removing items 4 through 10 in numerical sequence.

Reassemble in reverse order.

(3) *Support bracket removal and installation.* Refer to figure 3-55, remove items 11 and 12, then remove support bracket from engine. Install in reverse order.

(4) *Cleaning, inspection, and repair.*

(a) Clean all parts with an approved cleaning solvent and dry thoroughly. Dry filter element with low pressure compressed air.

(b) Visually inspect all parts for damage, defect, or deterioration.

(c) Repair by replacing damaged or defective parts.

(5) *Service.* Service dry type air cleaner as directed in paragraph 3-11.

3-70. Air Manifold (Blower-to-Blower) Engine Model 687C-18-ES

a. *Removal.*

(1) Remove two hose clamps (fig. 3-56) from hose.

(2) Remove eight capscrew, lockwasher, and flatwasher, then remove blower-to-blower air manifold and gaskets from blower adapters.

b. *Cleaning, Inspection, and Repair.*

(1) Clean all parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect all parts for bends, cracks, other damage or defects.

(3) Repair by straightening bends, welding cracks, or replacing damaged gaskets, defective manifold or mounting hardware.

c. *Installation.* Install by reversing procedure described in a above.

3-71. Fuel Tanks, Lines, and Fittings

a. *Removal and Installation.*

(1) On crane model 855BG2 (winterized). Refer to figure 3-57 and remove fuel tank, lines, and fittings.

Install in reverse order.

(2) On crane model 855BG2 (non-winterized). Refer to figure 3-57 and remove in similar manner, except remove fuel level gage, not fuel level transmitter. Install in reverse order.

(3) On crane model 858BG3 (non-winterized).

(b) Remove fuel lines and breather (para 3-78).

(c) Refer to figure 3-57 and remove fuel tank in similar manner, except fuel level gage, removed in (a) above,

(d) Install in reverse order.

b. *Cleaning and inspection.*

(1) Clean all parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect all parts for cracks, breaks, or other damage. Inspect hardware for stripped threads or other defect. Inspect fuel strainers for breaks, tears of screen, or other damage. Inspect fuel tank for leaks. Replace defective components or mounting hardware.


(3) Repair cracks and breaks by welding. Repair a leaking tank as follows:

(a) Remove fuel tank (1), (2), or (8) in a above.

(b) Fill tank with water to avoid concentration of fumes.

(c) Weld leaking area.


(d) Drain water from tank, blow dry as possible with compressed air, then pour about $\frac{1}{2}$

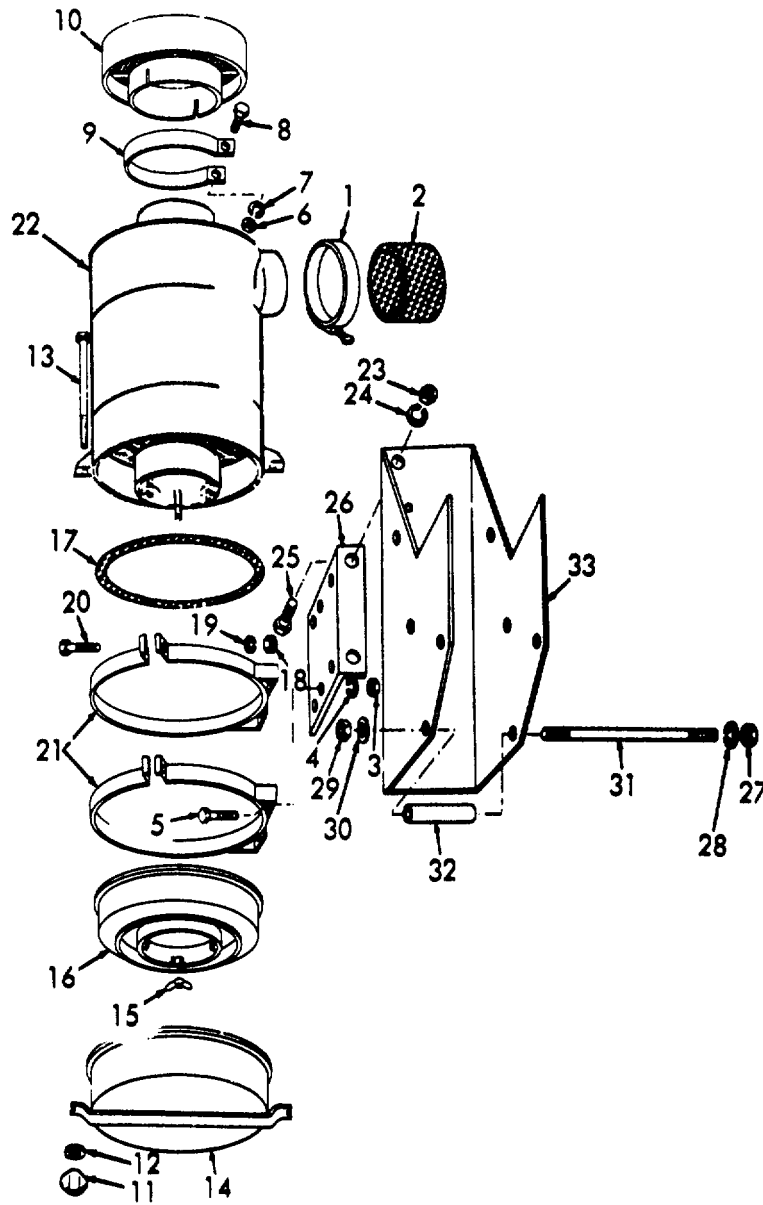

ME 3810-201-12/3-53


- | | | |
|------------------|-------------------|-------------------|
| 1 Hose clamp (2) | 12 Lockwasher (2) | 28 Nut (2) |
| 2 Hose | 18 Thumbscrew (2) | 24 Lockwasher (2) |
| 8 Nut (4) | 14 Oil cup | 26 Capscrew (2) |
| 4 Lockwasher (4) | 15 Wingnut (8) | 26 Bracket |
| 5 Capscrew (4) | 16 Tray | 27 Nut |
| 6 Nut | 17 Packing (2) | 28 Lockwasher |
| 7 Lockwasher | 18 Nut (2) | 29 Nut |
| 8 Capscrew | 19 Lockwasher (2) | 80 Lockwasher |
| 9 Clamp | 20 Capcrew (2) | 81 Stud |
| 10 Cover | 21 Bands | 82 Spacer |
| 11 Wing nut (2) | 22 Body | 88 Bracket |

Figure 3-53. Air cleaner and mounting bracket, removal, disassembly and installation (on Crane model 855BG with engine 687C-18-ES).

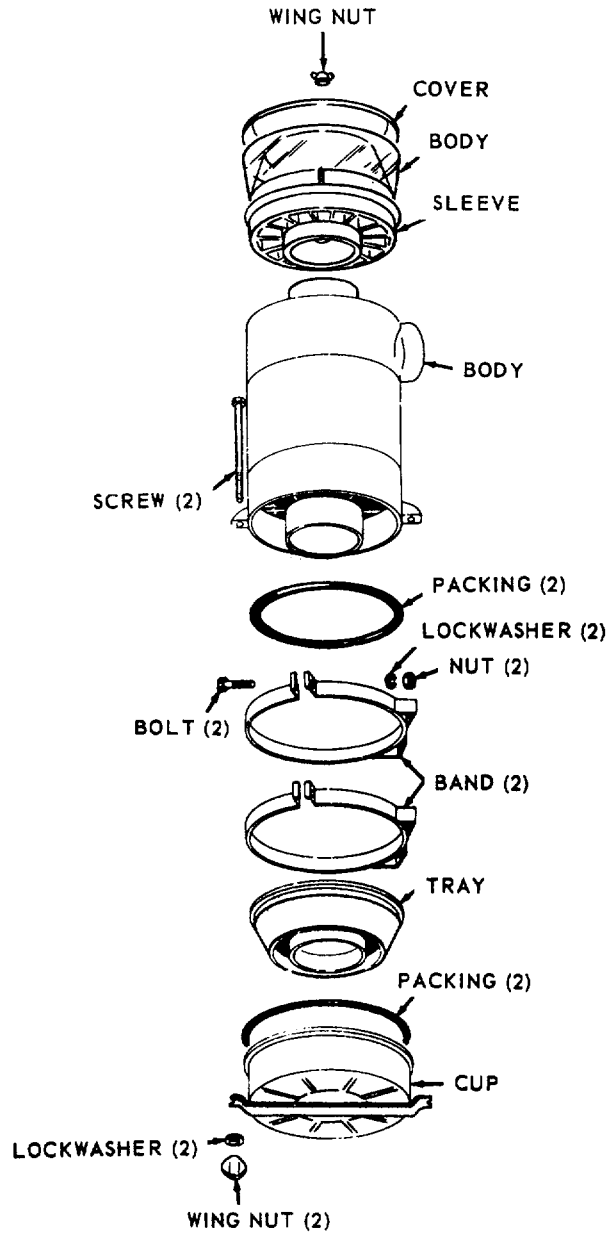

ME 3810-201-12/3-54

Figure 3-54. Air cleaner, disassembly and reassembly (on crane models 855BGs with engine model 687C-18-ES).

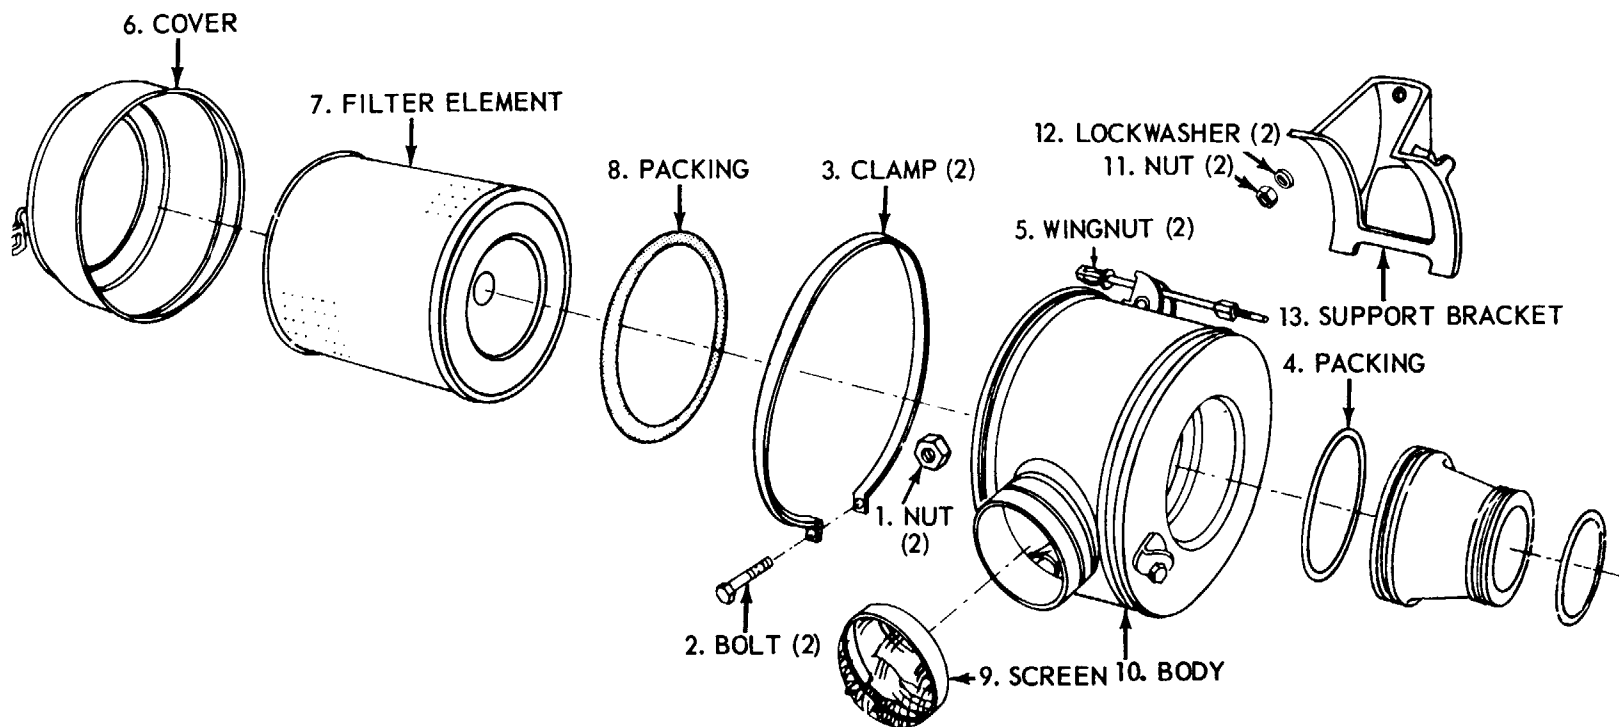

ME 3810-201-12/3-55

Figure 3-55. Air cleaner, dry type, removal, disassembly, reassembly, and installation (for engine mode D333TA).

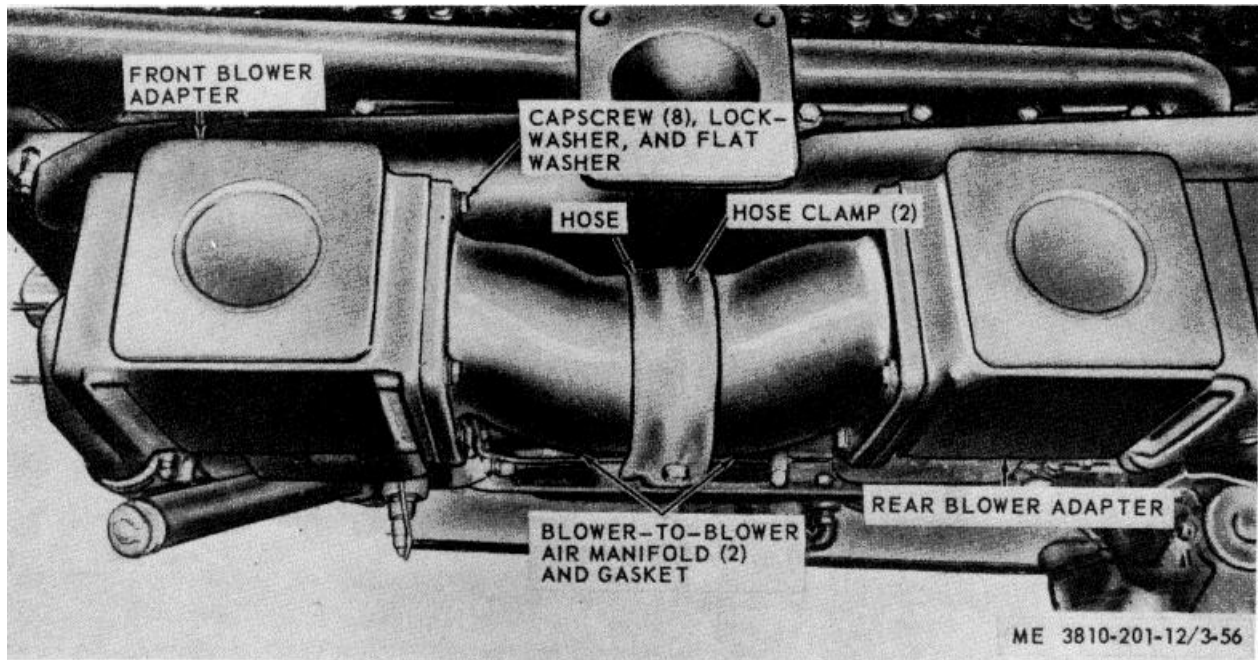


Figure 3-56. Air manifold and blower adapters, installed view.

gallon of fuel oil into tank and slosh it around to pick up remaining moisture. Let tank set in normal position for about 10 minutes, then remove drain plug and drain tank. Install drain plug.

(e) Install fuel tank by reversing procedure used to remove in (a) above.

3-72. Filler Pipe and Fuel Level Gage (Crane Model 855BG3 Only)

a. Removal and Installation.

(1) Remove six capscrew and lockwasher (fig. 3-58), then remove filler pipe assembly, adapter, and gasket from revolving frame.

(2) Remove four screw and lockwasher, then remove fuel level gage and gasket.

(3) Install in reverse order.

b. Cleaning and Inspection.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect all parts for bends, dents, cracks, or other damage. Inspect gaskets for deterioration. Inspect mounting hardware for stripped threads or other defects. Replace all damaged or defective parts.

3-73. Fuel Line and Breather (Crane Model 855BG3 Only)

a. *Removal and Installation.* Refer to figure 3-59 and remove fuel line and breather. Install in reverse order.

b. Cleaning and Inspection.

(1) Clean all parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect all parts for bends, breaks, cracks, or other defects. Replace all defective parts.

3-74. Primary Fuel Filter (Engine Model 687C-18-ES Only)

a. *Removal and Installation.* Refer to figure 3-60, remove items 1 through 3, then remove filter from engine. Install in reverse order.

b. *Disassembly and Reassembly.* Refer to figure 3-60 and disassemble filter by removing items 11 through 13 in numerical sequence from item 14.

Reassemble in reverse order.

c. Cleaning, Inspection, and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect all parts for damage or defect.

(3) Repair by replacing defective parts. Replace all gaskets as reassembly.

3-75. Fuel Filter (Secondary on Engine Model 687C-18-ES)

a. *Secondary Fuel Filter on Engine Model 687C-18-ES.*


(1) Removal and installation.

(a) Refer to figure 3-61, remove items 1 and 2, and drain filter.

(b) Remove items 3 and 4 and remove filter and bracket from engine.

(2) *Disassembly and reassembly.* Refer to figure 3-61 and disassemble fuel filter by removing items

STEP 1. REMOVE CAP, OPEN DRAINCOCK AND DRAIN FUEL FROM TANK, THEN LOOSEN NUT AND REMOVE TUBE FROM ADAPTERS (2), AND PLUG OR COVER END OF TUBES AND ADAPTERS. DISCONNECT ELECTRICAL LEAD (NOT SHOWN) FROM FUEL LEVEL TRANSMITTER.

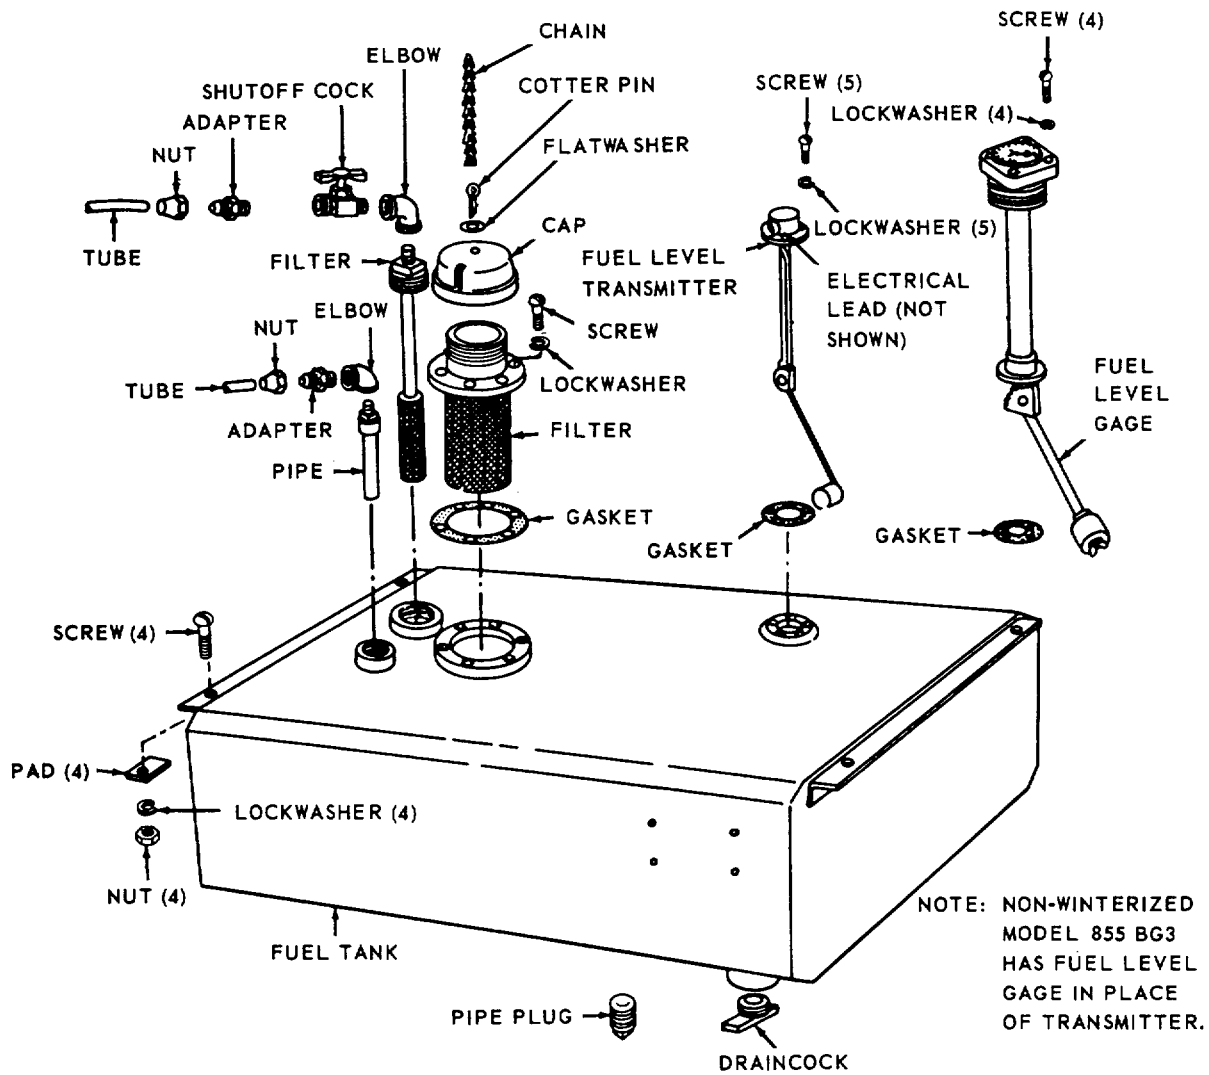

STEP 2. REMOVE NUT (4), LOCKWASHER (4), PAD (4), AND SCREW (4) THEN REMOVE FUEL TANK FROM REVOLVING FRAME.

ME 3810-201-12/3-57

Figure 3-57. Fuel tank, lines, and fittings (on crane models 855-BG2), removal and installation.

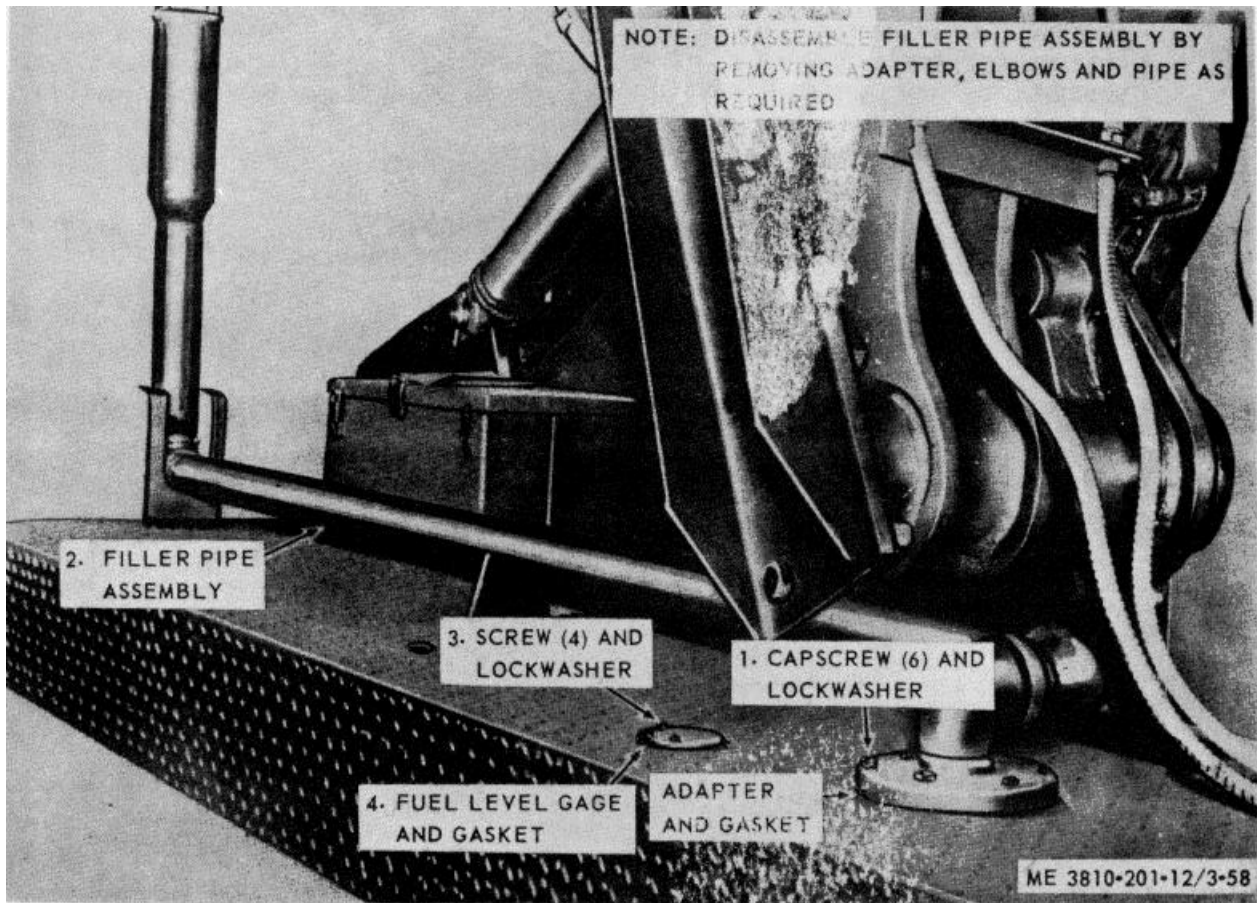


Figure 3-58. Filler pipe and fuel level gage (crane model 855Bg only), removal and installation.



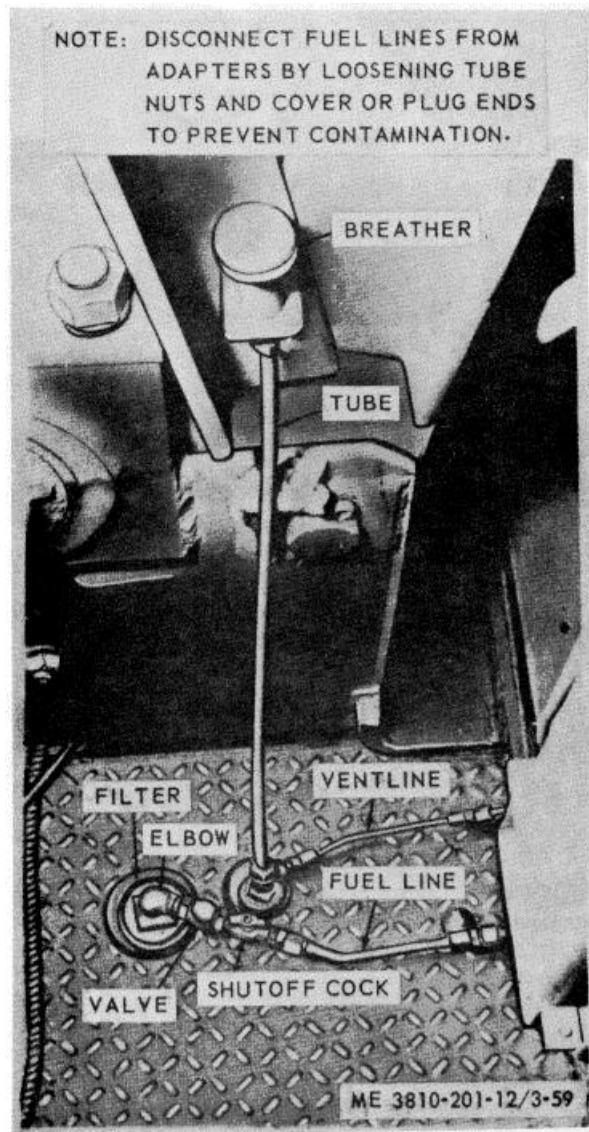


Figure 3-59. Fuel line and breather (crane model/855BG3), installed view.

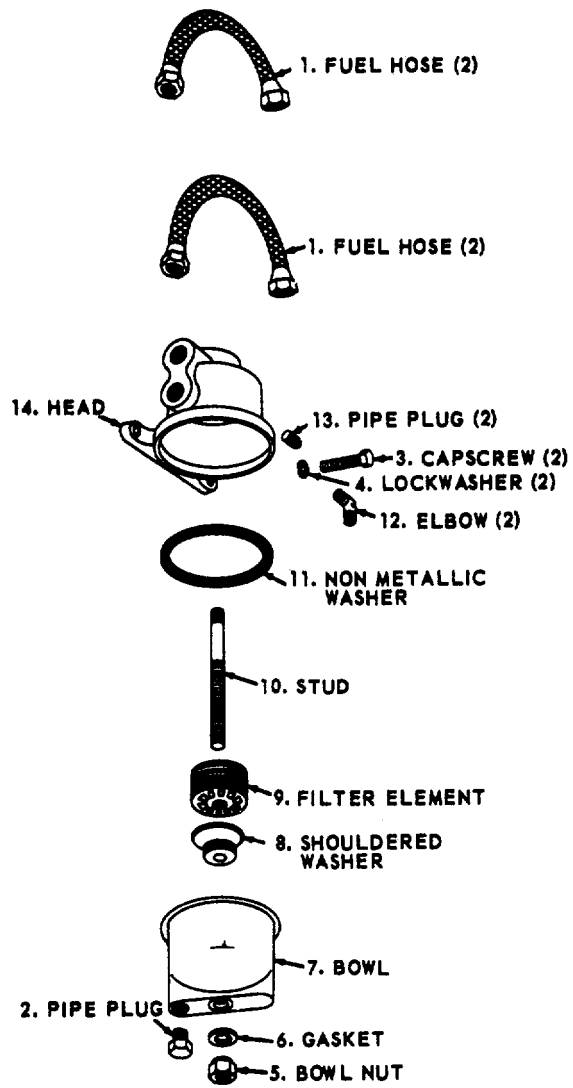

ME 3810-201-12/3-60

Figure 3-60. Primary fuel filter (on engine model 687C-18 ES only) removal, disassembly, reassembly and installation.

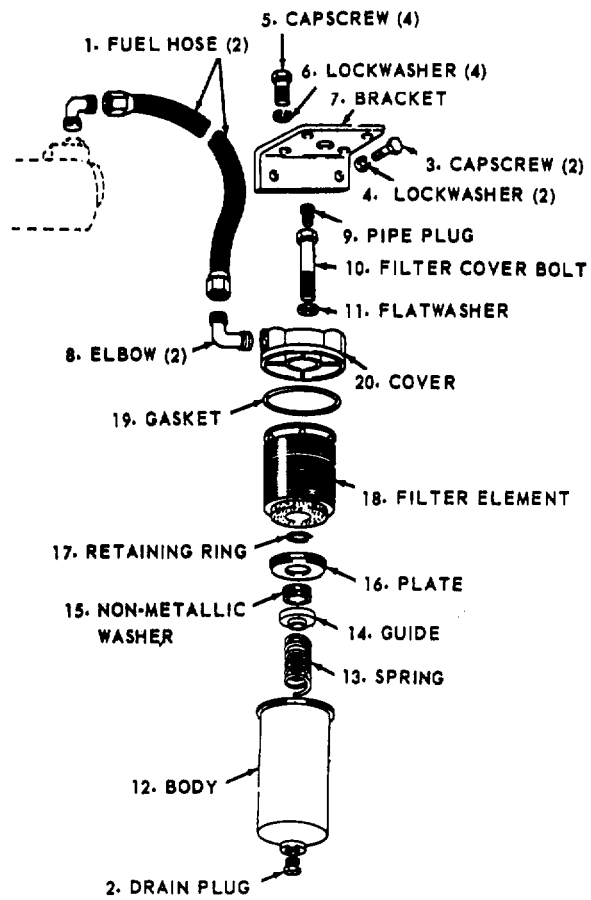

ME 3810-201-12/3-61

Figure 3-61. Fuel filter (secondary), removal, disassembly, reassembly and installation (engine model 687C-18-ES).

5 through 19 in numerical sequence from item 20. Reassemble in reverse order.

(3) *Cleaning, inspection, and repair.*

(a) Clean all parts in an approved cleaning solvent and dry thoroughly.

(b) Visually inspect all part for dents, cracks, stripped threads, or other damage.

(c) Repair by replacing defective components or mounting hardware.

(4) *Service.* Service fuel filter as directed in paragraph 3-13.

b. *Fuel Filter on Engine Model D333TA.*

(1) *Removal and installation.* Refer to figure 3-62 and remove fuel filter. Install in reverse order.

(2) *Disassembly and reassembly.* Refer to figure 3-62 and disassemble fuel filter. Reassemble in reverse order.

(3) *Cleaning, inspection, and repair.*

(a) Clean all parts except pressure gage and switch, and filter element which is discarded, in an approved cleaning solvent and dry thoroughly. Wipe gage and switch clean with a rag dampened in cleaning solution, then wipe dry.

(b) Visually inspect all parts for excessive wear, cracks, dents, or stripped threads. Test continuity of low fuel pressure switch. Test fuel pressure gage with controlled air pressure.

(c) Repair by replacing damaged, defective, or worn parts. Install new filter element at reassembly.

(4) *Service.* Service fuel filter as directed in paragraph 3-13.

3-76. Governor Throttle Control Linkage

a. *Removal and Installation.* Refer to figure 3-63 and remove governor throttle control linkage in numerical sequence. Install in reverse order.

b. *Cleaning, Inspection, and Repair.*

(1) Clean all parts except flexible control cable in an approved cleaning solvent and dry thoroughly. Wipe housing and rod ends of control cable clean with rag dampened in cleaning solvent, then wipe dry.

(2) Visually inspect mounting hardware for stripped threads or other defects. Move flexible control through housing to check freedom and ease of movement. Inspect housing for dents or other deformation.

(3) Repair by replacing defective items. When housing of control cable is deformed and binds control, replace the flexible control.

c. *Adjustment.* The flexible control is adjustable at either engine or throttle lever end. When throttle lever is not correctly positioned on quadrant, at idle or high speed, adjust as follows:

(1) Remove cotterpin and pin from rod end clevis (fig. 3-63), back off locknut, then turn clevis on rod end

clockwise to shorten, or counterclockwise to lengthen control cable.

(2) Reinstall cable rod end of shaft and try throttle lever position.

(3) Repeat steps (1) and (2) until adjustment is correct, then tighten locknut.

3-77. Primer Pump, Lines, and Fittings

a. *For Engine Model 687C-18-ES.*

(1) *Removal and installation.* Refer to figure 3-64 and remove primer pump in numerical sequence. Install in reverse order.

(2) *Cleaning, inspection, and repair.*

(a) Clean all parts in an approved cleaning solvent and dry thoroughly.

(b) Visually inspect for bent or clogged fuel lines, burs, or stripped threads.

(c) Repair by removing burs, replacing damaged or defective hardware or replacing a defective inner pump.

b. *For Engine Model D333TA.*

(1) Removal and installation. Refer to view A of figure 3-65 and remove items in numerical sequence. Install in reverse order.

(2) Disassembly and reassembly. Refer to view B of figure 3-65 and disassemble the primer pump in numerical sequence. Reassemble in reverse order.

(3) Cleaning, inspection, and repair.

(a) Clean all parts in an approved cleaning solvent and dry thoroughly.

(b) Visually inspect for burred threads, weak spring, damaged seals, and bent or clogged fuel lines (tubes).

(c) Repair by replacing defective items.

3-78. Engine Shutoff Control

a. *Removal and Installation.* Refer to figure 3-66, remove items in numerical sequence, and remove engine shutoff control. Install in reverse order.

b. *Cleaning, Inspection, and Repair.*

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect all hardware for burred or stripped threads, test that flexible control pulls through housing easily (does not bind), and that knob is serviceable.

(3) Repair by replacing defective hardware or flexible control.

3-79. Blower Adapters (For Engine Model 678C-18-ES).

a. *Removal and Installation.* Refer to figure 3-67 and


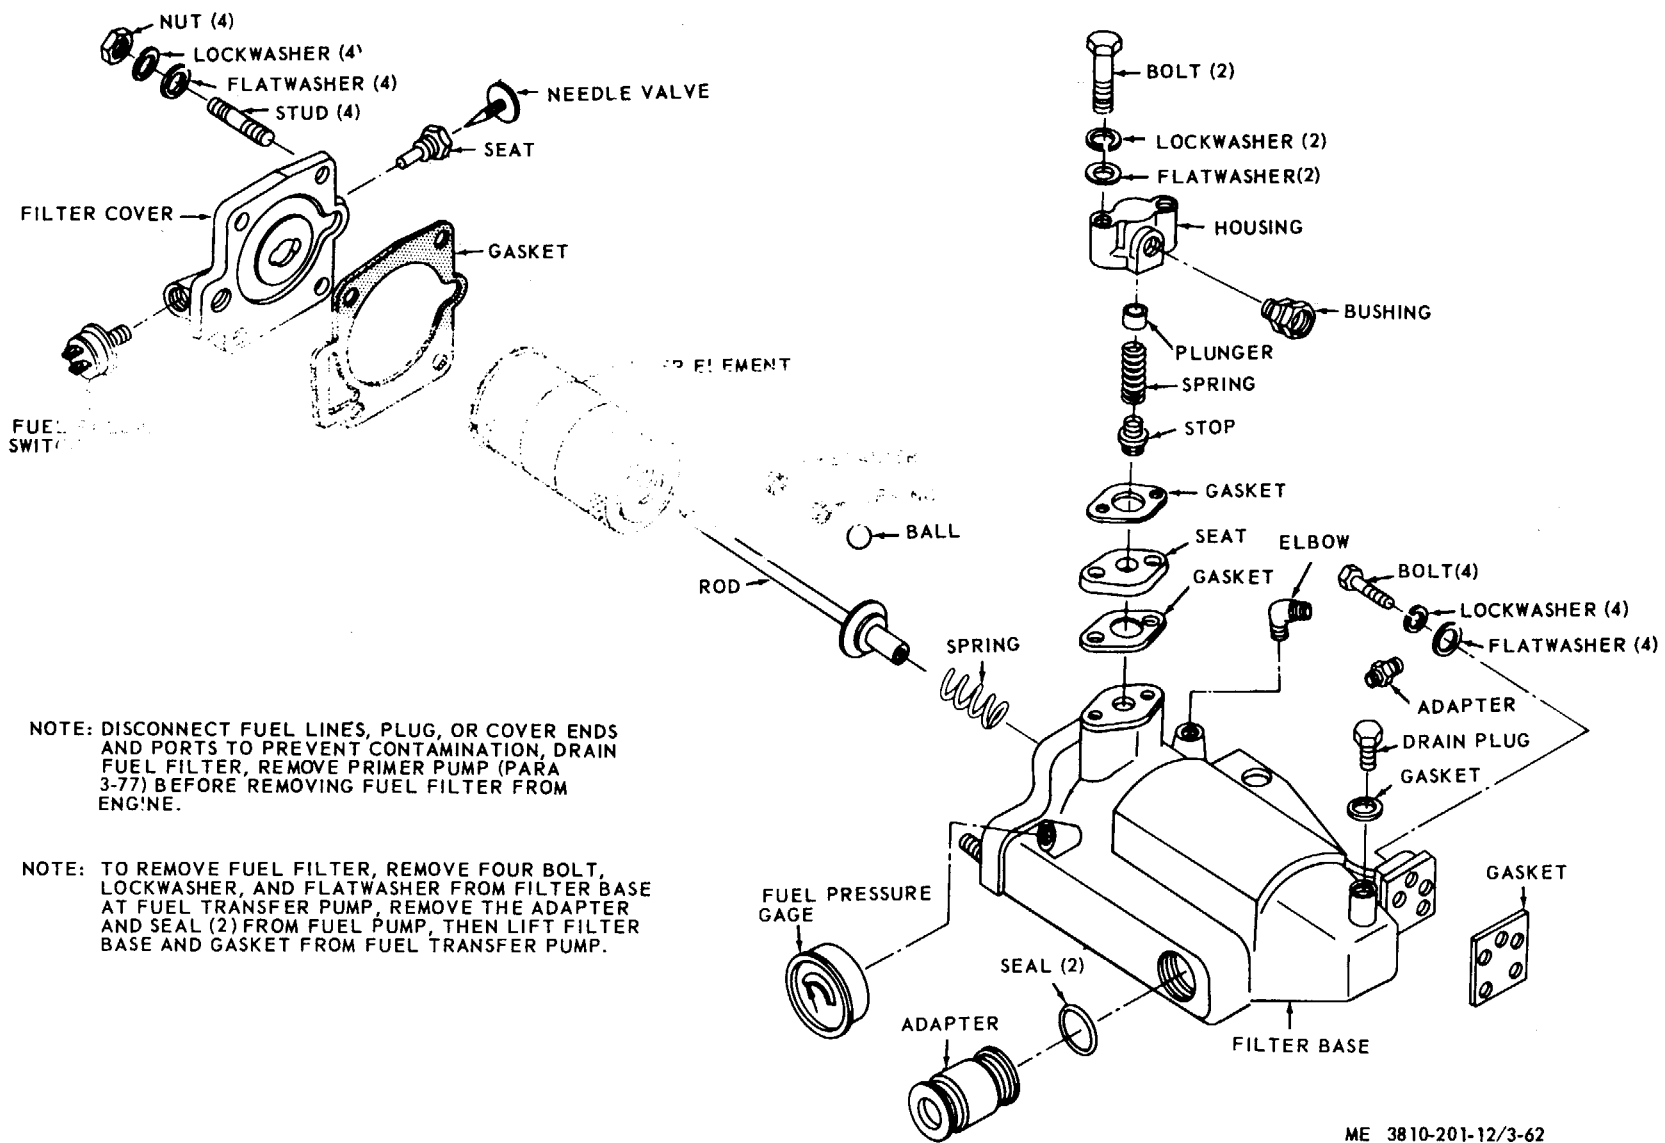


Figure 3-62. Fuel filter (for engine model D333TA), removal, disassembly, reassembly, and installation.

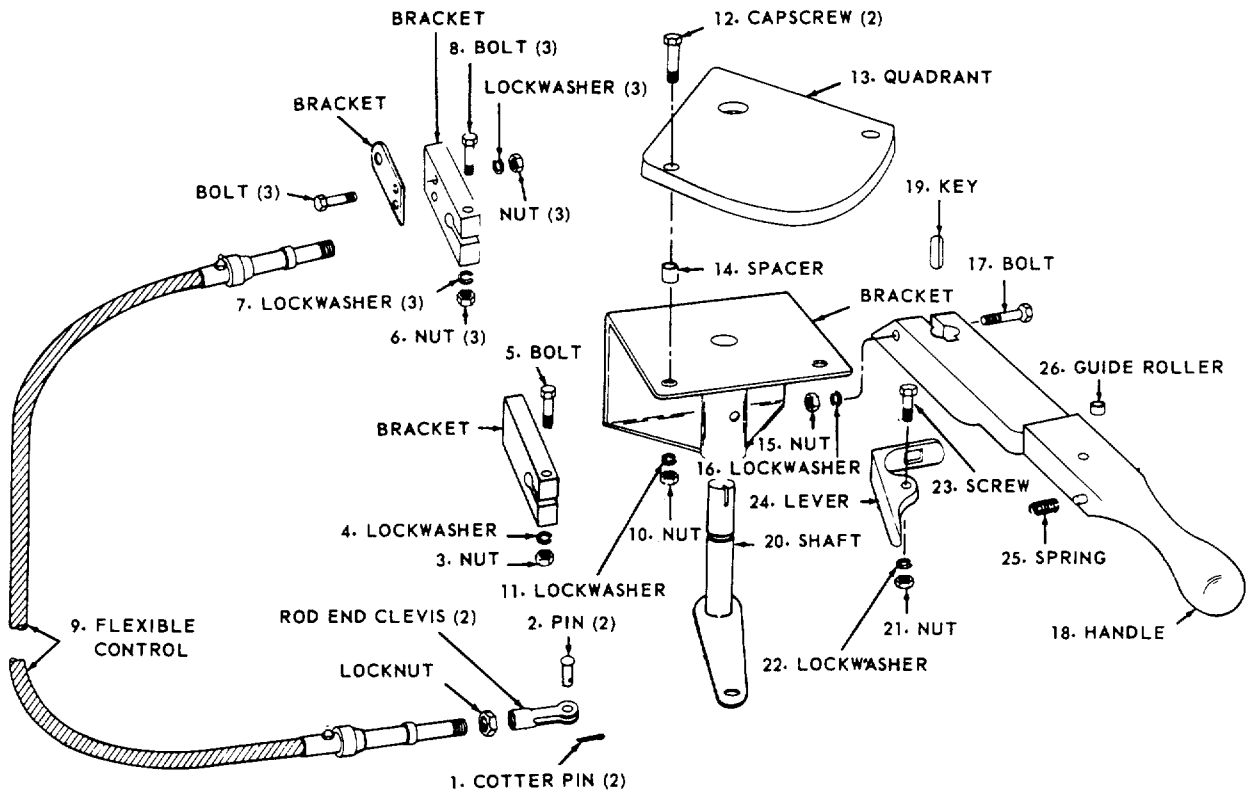

NOTE: DO NOT REMOVE BRACKETS UNLESS REPLACEMENT IS REQUIRED.

ME 3810-201-12/3-63

Figure 3-63. Governor throttle control linkage, removal and installation.


remove blower adapters. Install in reverse order.

b. Cleaning, Inspection, and Repair.

- (1) Clean all parts in an approved cleaning solvent and dry thoroughly.
- (2) Visually inspect all parts for dents, cracks,


excessive wear, or other defect. Inspect gaskets and hose for deterioration or other defect. Inspect mounting hardware for burrs, stripped threads, or other defects.

- (3) Repair by replacing defective component or mounting hardware.

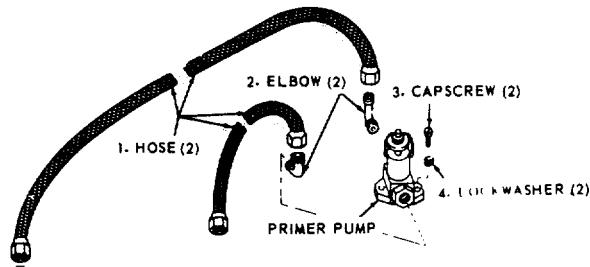

ME 3810-201-12/3-64


Figure 3-64. Primer pump (for engine model 687C-18-ES) removal and installation.

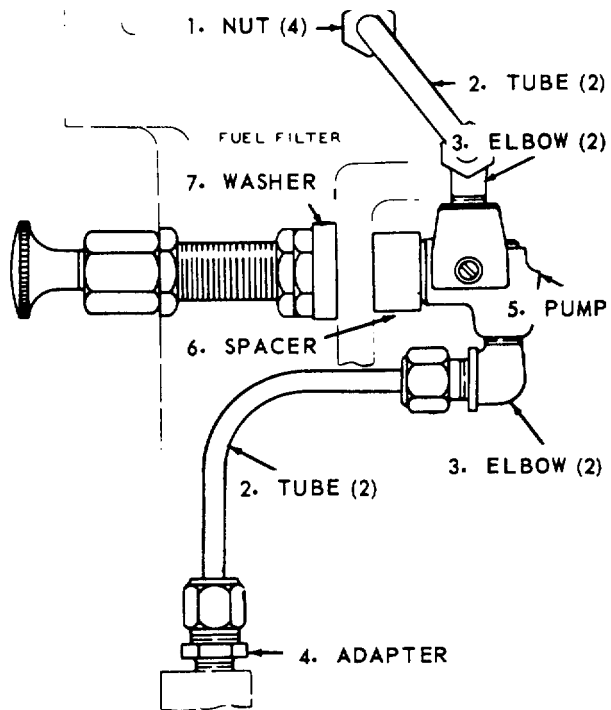

A. REMOVAL AND INSTALLATION

ME 3810-201-12/3-65 ①

Figure 3-65. Primer pump (for engine model D333TA) removal, disassembly, reassembly and installation (sheet 1 of 2).

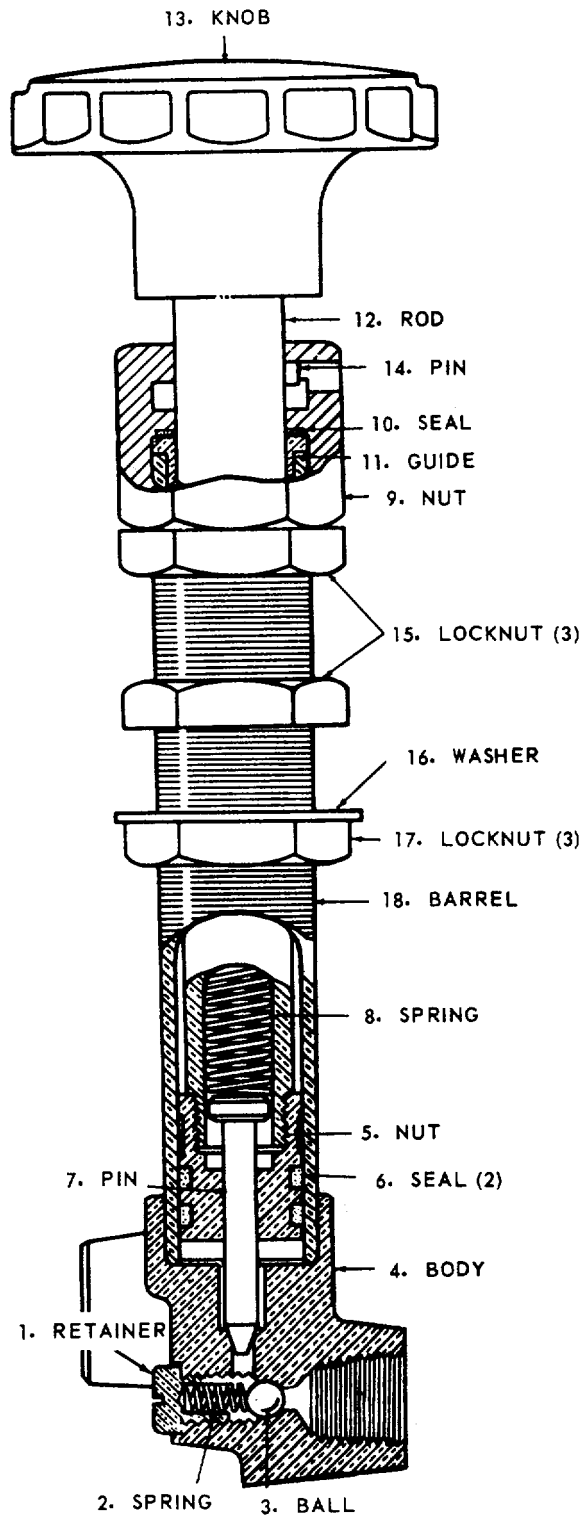

B. DISASSEMBLY AND REASSEMBLY

ME 3810-201-12/3-65 (2)

Figure 3-65. Primer pump (for engine Model D333TA) removal, disassembly, reassembly and installation (sheet 2 of 2).


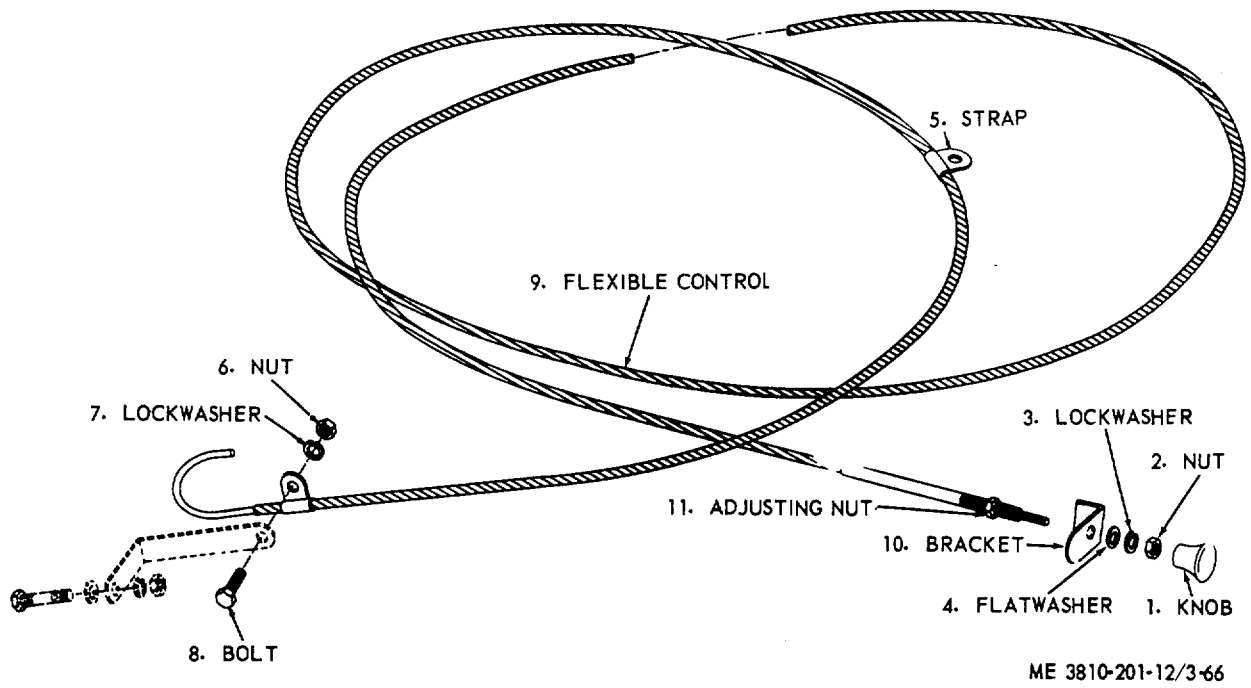


Figure 3-66. Engine shutoff control, removal and installation.

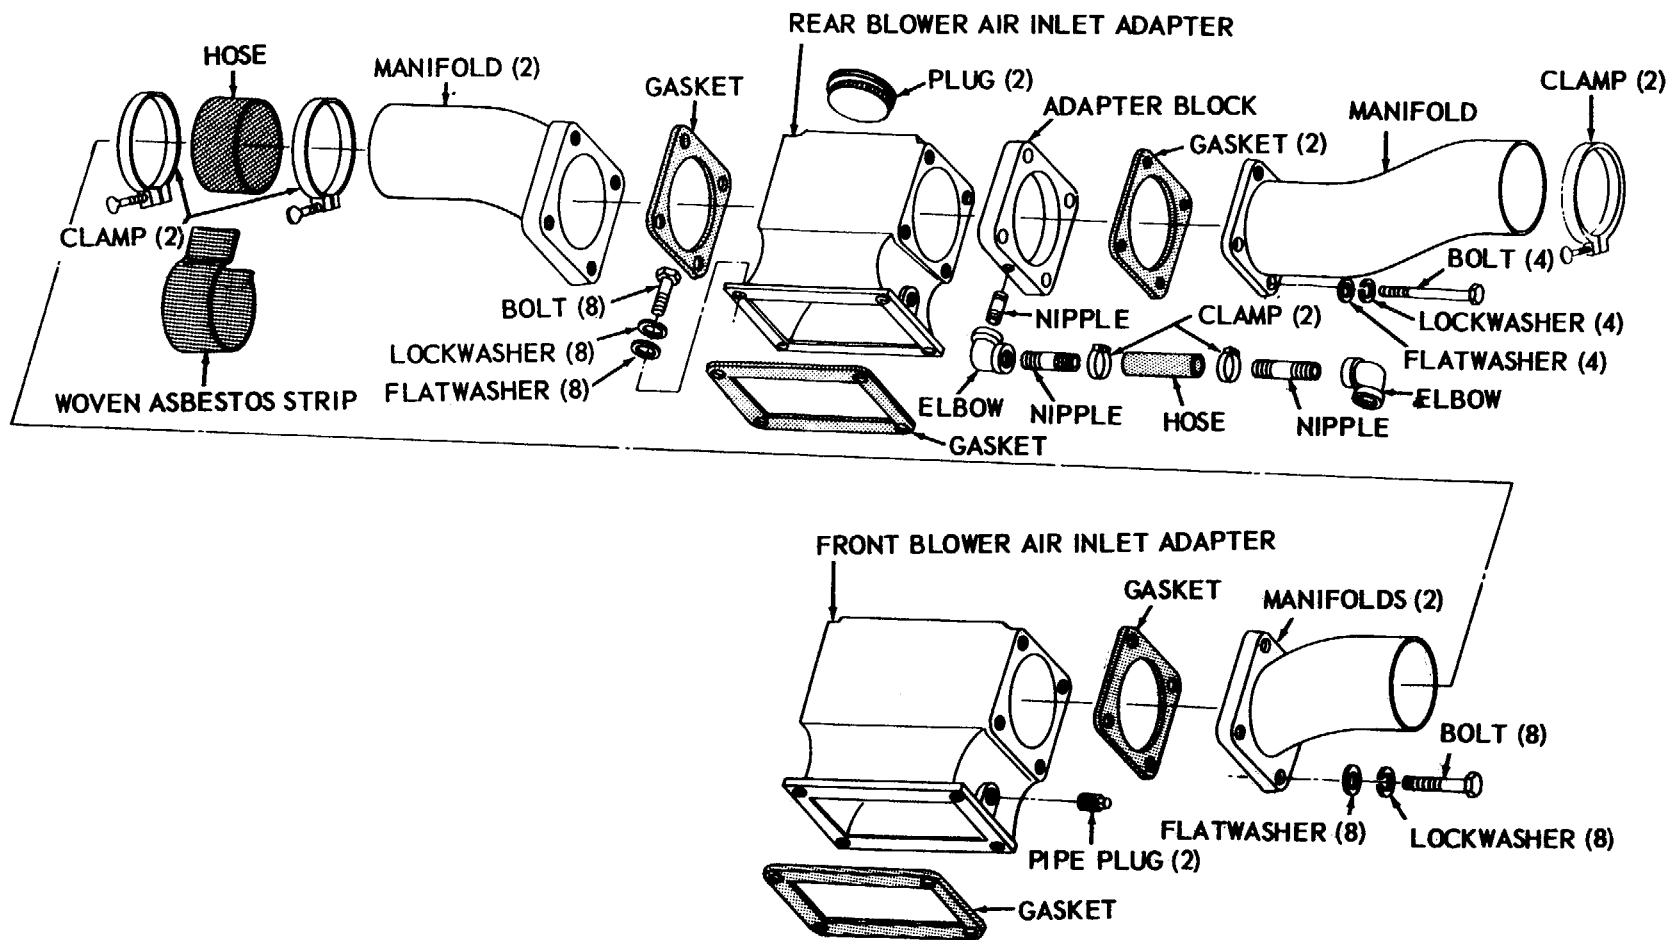

ME 3810-201-12/3-67

Figure 3-67. Blower Adapters, removal and installation (Engine Model 687C-18-ES).

Section XII. ELECTRICAL SYSTEM

3-80. General

a. *For Crane Units with engine Model 687C18-ES.* This 24 volt electrical system consists of two 12 volt batteries connected in series, A belt driven battery-charging generator, starter, starter solenoid relay, panel lights, generator voltage regulator, trouble light, oil pressure transmitter, water temperature transmitter, low oil pressure switch, water high temperature switch, and ammeter. An overspeed governor driven through tachometer drive, actuates the shutdown lever on injection pump through a microswitch controlled circuit when engine overspeeds the predetermined limit. The cranes are also equipped with a horn and floodlights, and the winterized units have windshield wiper, engine heater, battery heater, and personnel heater. See wiring schematic diagrams (view A, fig. 1-10 through view G).

b. *For Crane Units with engine Model D3S3TA.* This unit is equipped with battery-charging alternator and alternator voltage regulator instead of generator and generator voltage regulator. It is not equipped with the microswitch overspeed governor shutdown circuit, but has a low fuel pressure switch mounted on clean side of fuel filter that is normally open to prevent electrical current from flowing back to the alternator when engine is stopped, and cause damage to rectifiers in alternator or transistors in regulator. See wiring schematic diagram (view G, fig. 1-10)

c. *Organization Maintenance Procedures.* This section will outline and illustrate organizational maintenance procedures authorized by the maintenance Allocation Chart (Appendix C).

3-81. Batteries

a. Removal and Installation.

(1) Non-winterized units.

(a) Refer to figure 3-68, perform steps 1 and 2, and remove batteries.

(b) Install in reverse order.

(2) Winterized units.

(a) Refer to figure 3-69, perform steps 1 and 2, and remove batteries.

(b) Install in reverse order.

b. Cleaning, Inspection, and Repair.

(1) Clean batteries with an approved cleaning solution and dry thoroughly. Remove all corrosion from battery cables and terminal posts.

(2) Visually inspect battery cases and vent caps for cracks, or terminals for looseness. Use a hydrometer and test electrolyte for specific gravity. Charge, or replace a battery reading less than 1.0 on hydrometer.

(3) Repair by replacing defective cables or battery.

3-82. Battery Box

a. and Installation.

(1) Non-winterized units.

(a) Remove batteries (para 3-81).

(b) Refer to figure 3-68, perform step 3, and remove battery box.

(c) Install in reverse order.

(2) Winterized units.

(a) Remove batteries (para 3-81).

(b) Refer to figure 3-69, perform steps 3 and 4, and remove battery box.

(c) Install in reverse order.

b. *Insulation Panels (Winterized Units).* Refer to figure 3-70 and remove the battery box insulation panels. Install in reverse order.

3-83. Generator and Belt (For Engine Model 687C-1 8-ES).

a. Equipment Test of Generator.

(1) *Field current test.* Refer to figure 3-71, remove shielded cable, and inspection band, from generator.

(a) Use automotive generator and voltage regulator test set as illustrated in view A of figure 3-72 and test field current output.

(b) Adjust variable resistance until voltmeter reads 24 volts.

Note. Batteries must be fully charged for this test.

(c) Read ammeter. Correct reading should be from 1.00 to 1.05 ampere.

(d) When readings do not meet requirements of (b) and (c) above, generator is defective and must be replaced.

(2) *Motoring test.* Connect test set as illustrated in view B of figure 3-72.

(a) Adjust variable resistor to maximum resistance.

(b) Close battery switch then gradually reduce resistance until armature begins to rotate. It should rotate freely.

(c) When armature fails to rotate freely, generator is defective and must be replaced.

(d) Remove test set, install inspection band, and replace shielded cable.

b. Removal and Installation.

(1) Tag and remove all electrical leads.

(2) Remove capscrew from adjusting bracket, move generator toward engine block and remove belt from pulley.

(3) Remove two capscrews, washers and

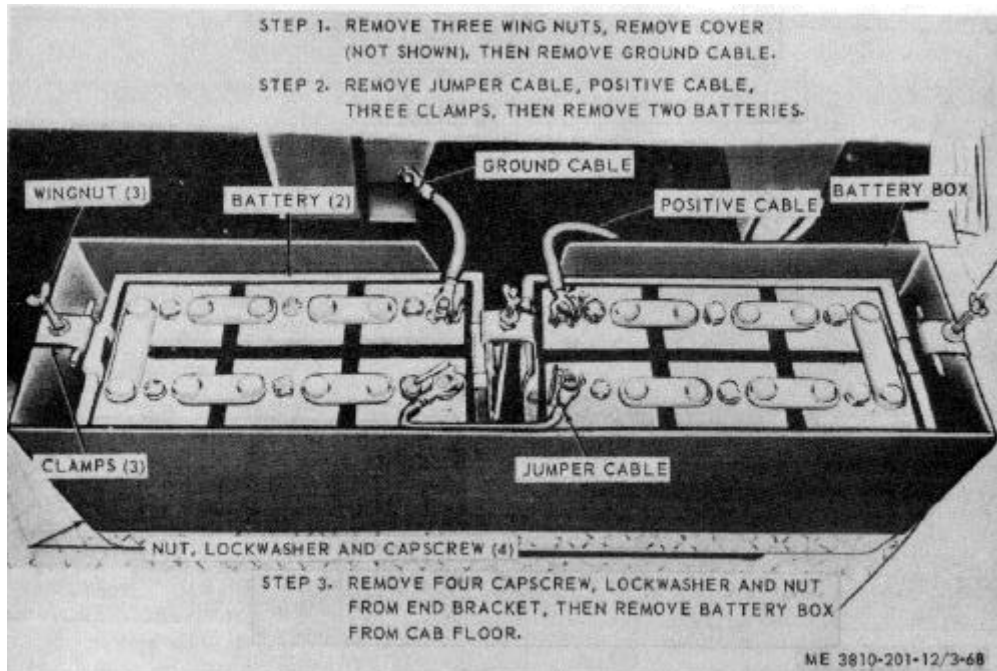


Figure 3-68. Battery and Battery Box removal and installation (nonwinterized units).

nuts from generator mounting bracket, then lift generator from bracket.

(4) Install in reverse order.

c. Cleaning, Inspection, and Repair.

(1) Clean exterior of generator housing with a rag dampened in an approved cleaning solvent then dry thoroughly. Blow dust from armature brush area with low pressure compressed air.

(2) Inspect mounting hardware for worn or stripped threads, inspect belt for excessive wear, frayed, or deteriorating condition. Visually inspect housing, end bells, or pulley for breaks or cracks. Inspect brushes for wear beyond 50 percent of original length.

(3) Repair by replacing defective mounting hardware, belt, or worn brushes. Replace a defective generator.

d. Brush Replacement. Worn brushes will be replaced in a manner similar to that described for starter motor brushes (para 3-87).

e. Belt Removal, Installation, and Adjustment.

(1) Removal and installation. Remove belt as described in b (2) above. Install in reverse order.

(2) Adjustment. Adjust generator belt as shown on figure 3-22.

3-84. Alternator and Belt (For Engines Model D333TA).

a. General. The self-rectifying charging alternator is designed to give long and satisfactory service with a minimum amount of maintenance, but the following precautions must be observed.

Caution:

Do not attempt to polarize the alternator. If an accidental connection were made between the battery terminal and either of the terminals "F1" or "F2" on the alternator the transistors in voltage regulator will be damaged.

Caution:

Do not make, or break, any alternator connections while alternator is operating. This would damage the voltage regulator.

Caution:

Never operate alternator without battery being connected in circuit.

Caution:

When charging batteries from an external source of power, be sure battery is disconnected from circuit before beginning charging operation to prevent damage to alternator rectifying diodes.

Caution:

Before using booster cables to start the engine, be sure of the lead polarity and connect the batteries correctly. Incorrect connection, even for an instant, will destroy alternator's rectifying diodes.

- STEP 1. DISENGAGE LATCH (2), THEN REMOVE COVER FROM BATTERY BOX.
- STEP 2. REMOVE BATTERIES (FIG. 3-68).
- STEP 3. REMOVE HOSE CLAMP (2) AND DISCONNECT AIR HOSE FROM BOX.
- STEP 4. REMOVE FOUR NUT LOCKWASHER, AND CAPSCREW, THEN REMOVE BOX FROM CAB FLOOR.

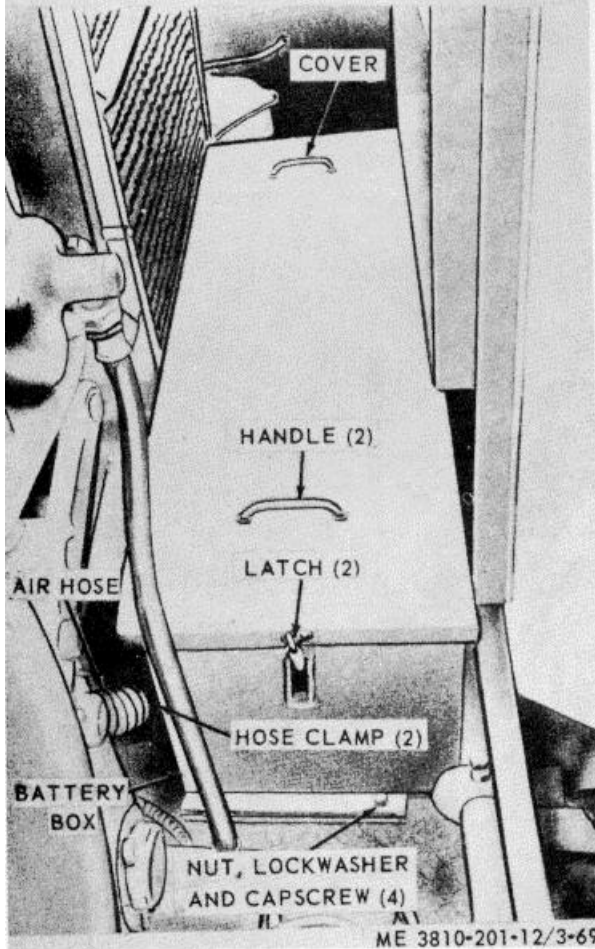


Figure 3-69. Battery and Battery Box removal and installation (winterized units)..

Caution: Do not operate the alternator simultaneously with a DC generator on a common battery circuit.

b. *On Equipment Test.*

- (1) Disconnect battery cables and tie back to prevent accidental flash current.
- (2) Tag accurately for position, then remove all electrical leads from alternator.
- (3) Use automotive generator and voltage regulator test set and hook up as illustrated in figure 3-73.
- (4) Operate the alternator at approximately 2,500 RPM.

Caution:

Do not allow voltage to exceed the recommended voltage setting of the regulator .

(5) Adjust the load rheostat to obtain 28 volts. When the correct voltage is obtained, the ammeter should read 61 amperes.

(6) If the correct output is not obtained. replace the alternator.

(7) If the correct output is obtained and the batteries are not charging correctly, check remainder of the charging circuit (view G, fig. 1-10)

(8) Remove test set harness, reconnect all electrical leads, then remove tags.

(9) Install battery cables.

c. Removal and Installation.

(1) Remove battery cables and tie back to prevent flash currents.

(2) Tag correctly for position, then remove all electrical leads from alternator.

(3) Remove alternator in manner similar to that described for generator (para 3-83).

d. Cleaning, Inspection and Repair.

(1) Clean exterior of alternator with a rag dampened in an approved cleaning solvent then dry thoroughly. Blow all dust from brush area with low pressure compressed air.

(2) Visually inspect all mounting hardware for wear or stripped threads. Inspect alternator for cracks or breaks in pulley, housing, or end bells. Inspect belt for wear, frayed condition, or deterioration.

(3) Repair by replacing defective hardware, belt, or alternator.

e. Belt Removal, Installation and Adjustment.

(1) *Removal and installation.* Remove alternator belt in manner similar to that described for generator (para 3-83). Install in reverse order.

(2) *Adjustment.* Adjust generator belt as shown on figure 3-22.

3-85. Generator Regulator (For Engine Model 687C-18-ES).

a. On Equipment Test.


(1) Remove electrical leads from voltage regulator (fig. 3-71).

(2) Test voltage regulator in conjunction with generator (para 3-83) by using connections illustrated in view B. figure 3-74. Polarize generator by momentarily touching jumper wire as shown in view A.

(3) Start generator and gradually increase speed until cutout relay point close. Closing voltage should be 26 volts.

(4) With generator operating at 4,000 RPM, reading on voltmeter should be 28.2 volts, and ammeter should read 40 amperes.

(5) If requirements of (3) and (4) above are not met, regulator is defective, and must be replaced.

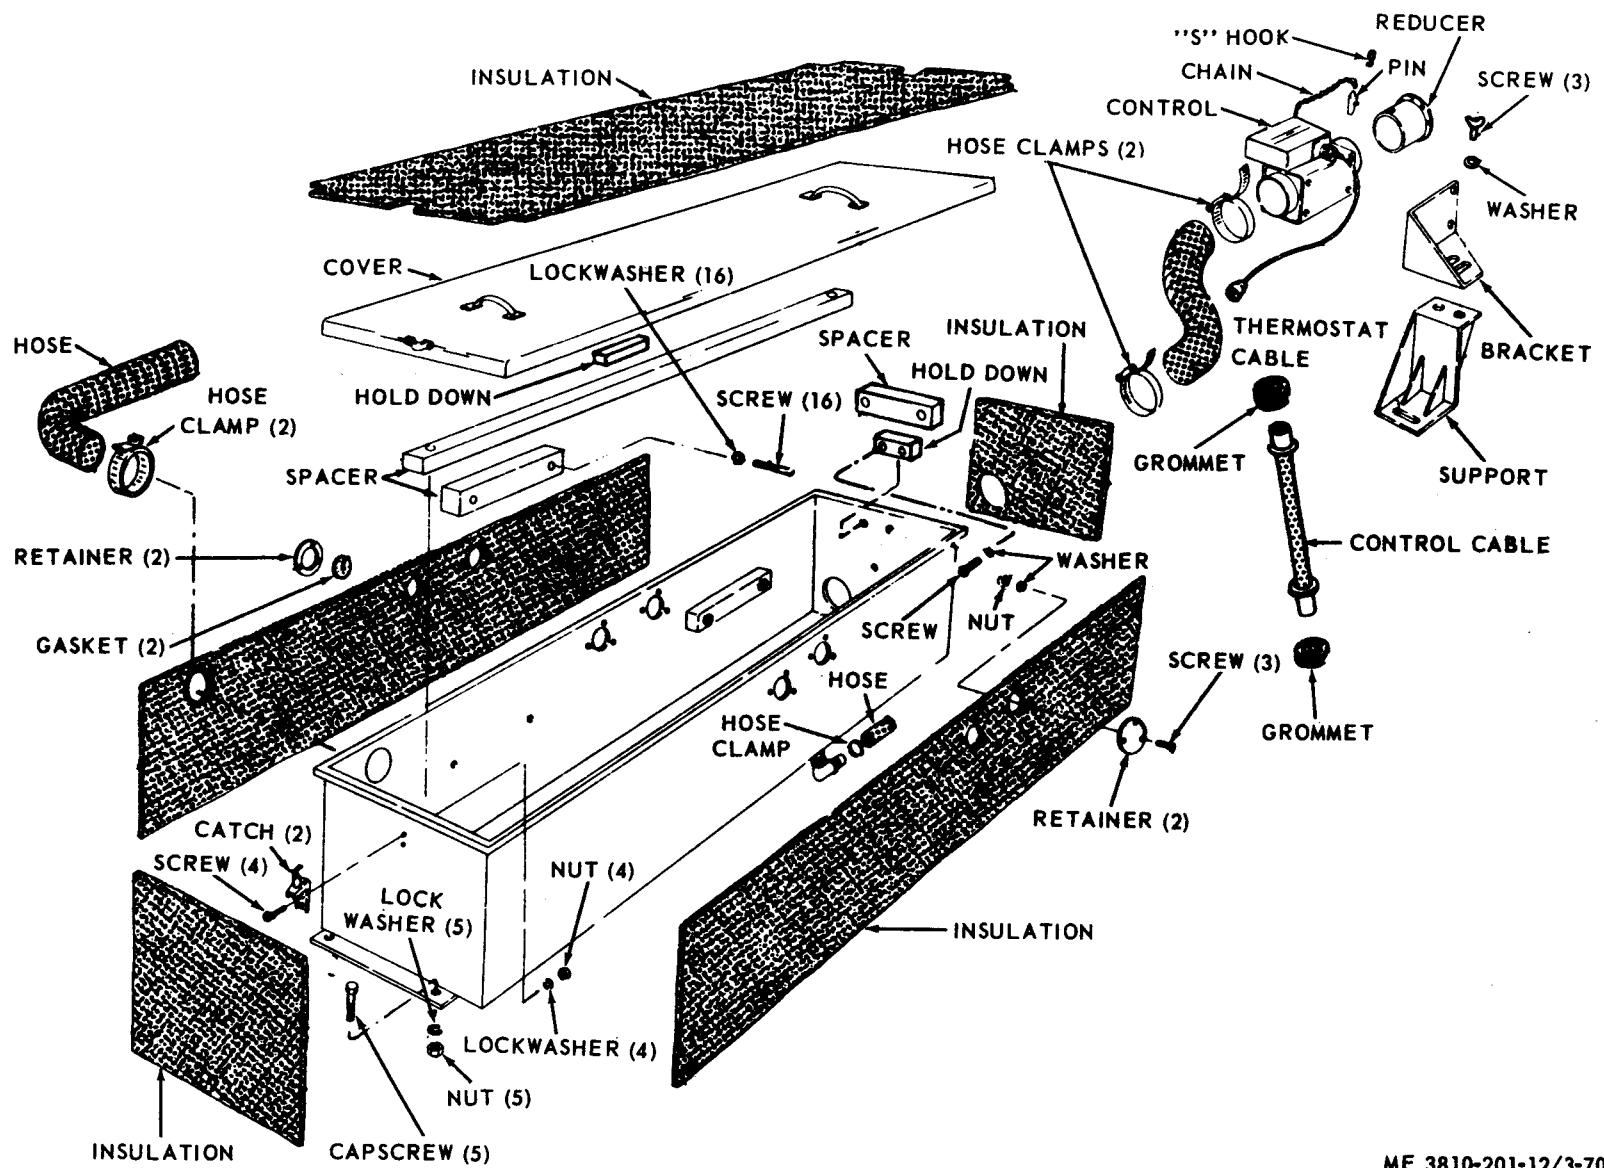

ME 3810-201-12/3-70

Figure 3-70. Insulation panels and temperature controls, removal and installation (winterized units)



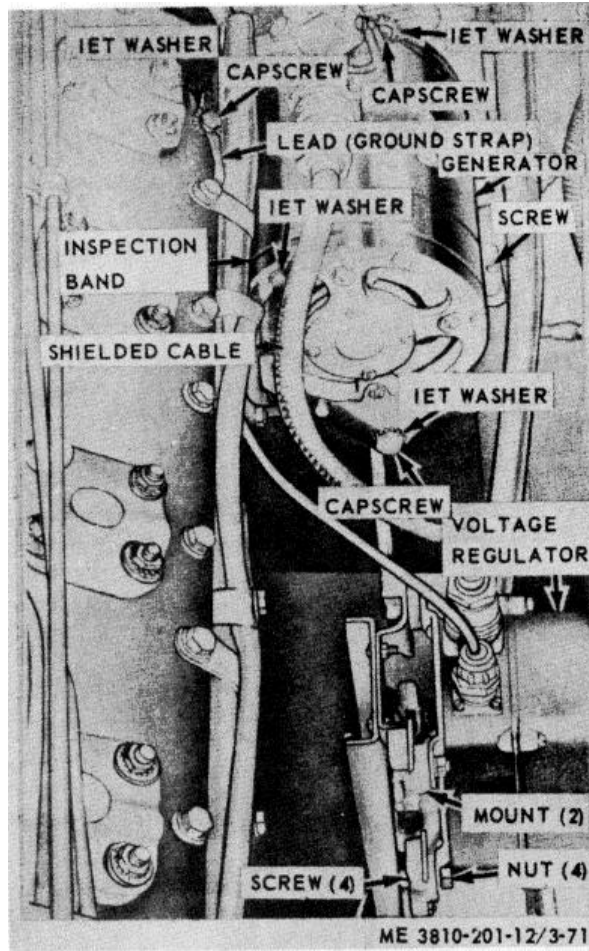


Figure 3-71. Generator and voltage regulator test points

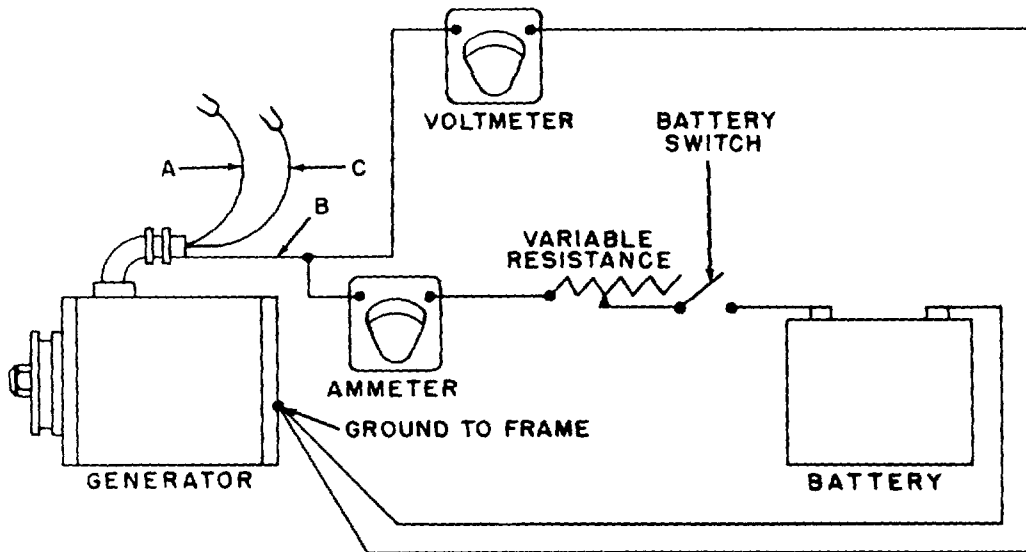


A

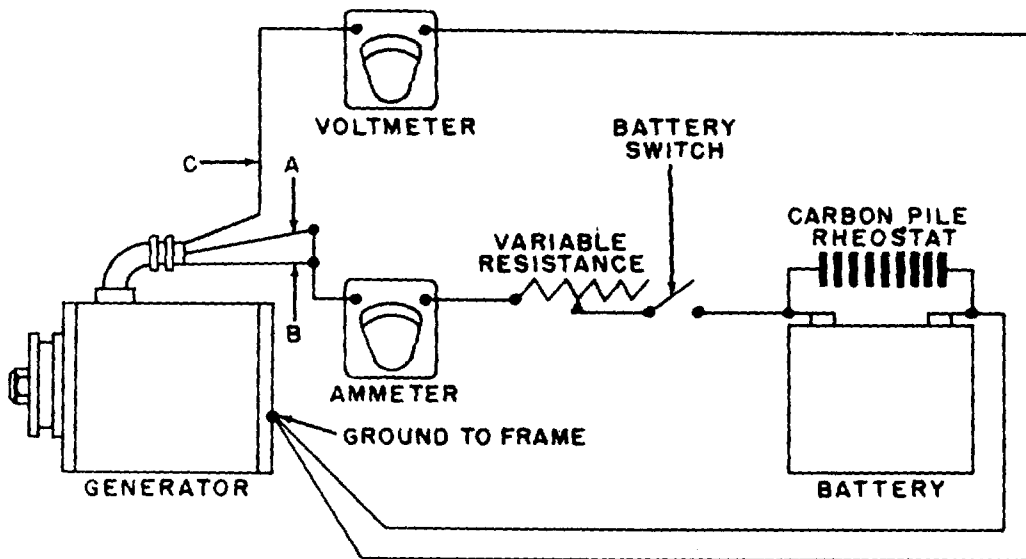

B

EMC 5-3810-201-20, 27

Figure 3-72. Generator test connections.

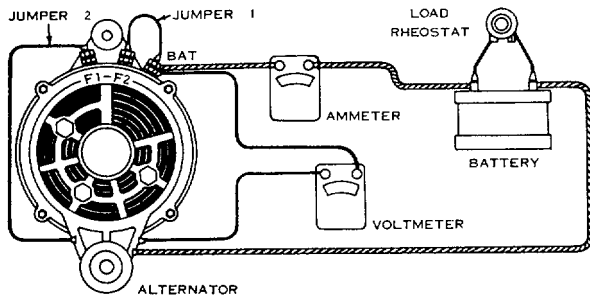

ME 3810-201-12/3-73

Figure 3-73. Alternator test connections.

Note Do not remove voltage regulator except when replacement is required.

b. *Removal and Installation.* Refer to figure 3-75 and remove items 1 through 4 in numerical sequence to remove voltage regulator. Items 5 through 8 removes shock mount. Install in reverse order.

3-86. Alternator Voltage Regulator (For Engine Model D333TA).

a. *General.* The alternator voltage regulator senses charge condition of batteries as well as electrical system power demand, and controls alternator output accordingly. As battery charge increases, charging rate decreases, until batteries are fully charged and ammeter will indicate a rate only perceptibly above zero. Since this regulator is factory adjusted for average operating conditions, it may require adjustment for the particular ambient temperature in which the engine is operating.

b. *Test and Adjustment.*

(1) Use voltmeter set on 0 to 50 vdc scale, refer to figure 1-10 (7) and connect positive (red) lead of voltmeter to alternator terminal "F1", connect negative lead (black) to ground, then start engine.

(2) Operate alternator at approximately 2,500 RPM and read voltmeter. It should read between 27.5 and 28.5 volts.

(3) If reading is not within limits prescribed in (2) above, remove plug (fig. 3-76) from voltage regulator and use screwdriver to adjust screw within regulator counterclockwise to reduce voltage, clockwise to increase voltage, until reading on voltmeter is correct.

(4) When regulator will not adjust to prescribed reading, regulator is defective and must be replaced.

(5) Stop engine and remove voltmeter.

Note. Do not remove regulator except when replacement is required.

c. *Removal and Installation.*

(1) Disconnect battery cables and tie back to prevent flash currents.

(2) Disconnect electrical connector (fig.3-76) from voltage regulator.

(3) Remove three nuts, washers, and cap-screws, then remove voltage regulator from mounting bracket.

(4) Install in reverse order.

3-87. Starter Motor

a. *Removal and Installation.* Refer to figure 3-77, remove items (13), (2), and 14 through (18) in numerical sequence, and starter motor is removed. Install in reverse order.

b. *Cleaning and Inspection.*

(1) Clean all parts with a rag dampened in an approved cleaning solution and dry thoroughly. Blow dust from brush area with low pressure compressed air.

(2) Visually inspect mounting hardware for wear or stripped threads. Replace defective hardware or starter motor. Repair by replacing defective brush set (c below).

c. *Starter Motor Brush Replacement.*

(1) Remove starter motor (a above).

(2) Refer to fig. 3-77 and remove items (19) and (20).

Note. Remove and replace one brush at a time, until set of eight is replaced.

(3) Refer to figure 3-78, remove screw and lockwasher from brushholder.

(4) Remove brush from guide by pulling outward on brush lead.

(5) Install new brush by first lifting outward on brush springs.

(6) Insert brush into guide, push it down into contact with commutator, and let spring down on top of brush.

(7) Seat brush so it has perfect surface contact with commutator.

Note. brushes can be seated perfectly by drawing a piece of 00 grade sandpaper between commutator and brush and against brushholder. Sand only as much as is necessary to obtain a perfect brush fit. Blow the sand and carbon dust out of starter motor with low pressure compressed air.


(8) Pull brush outward 1/4 inch and then allow spring to push it back down into guide. Repeat this step as often as necessary to assure brush is free in guide and will not bind.

(9) Connect brush cable terminal to brushholder with screw and lockwasher.


(10) Install remaining brushes by repeating steps (3) through (9) for each brush.

(11) Position inspection band on starter and secure with two screw and nuts (fig. 3-77).

(12) Refer to figure 3-77 and install starter

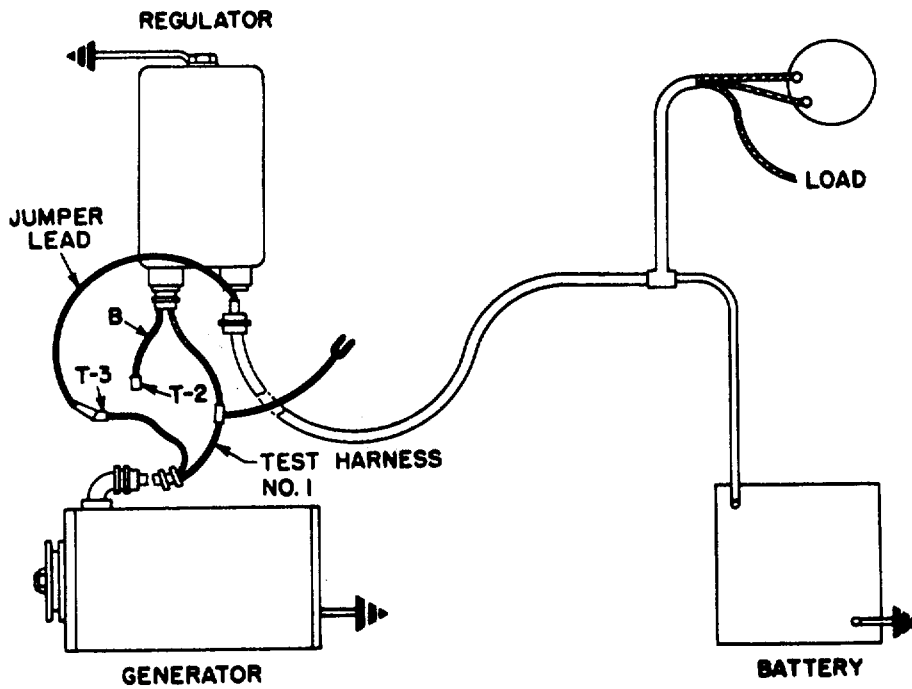

A

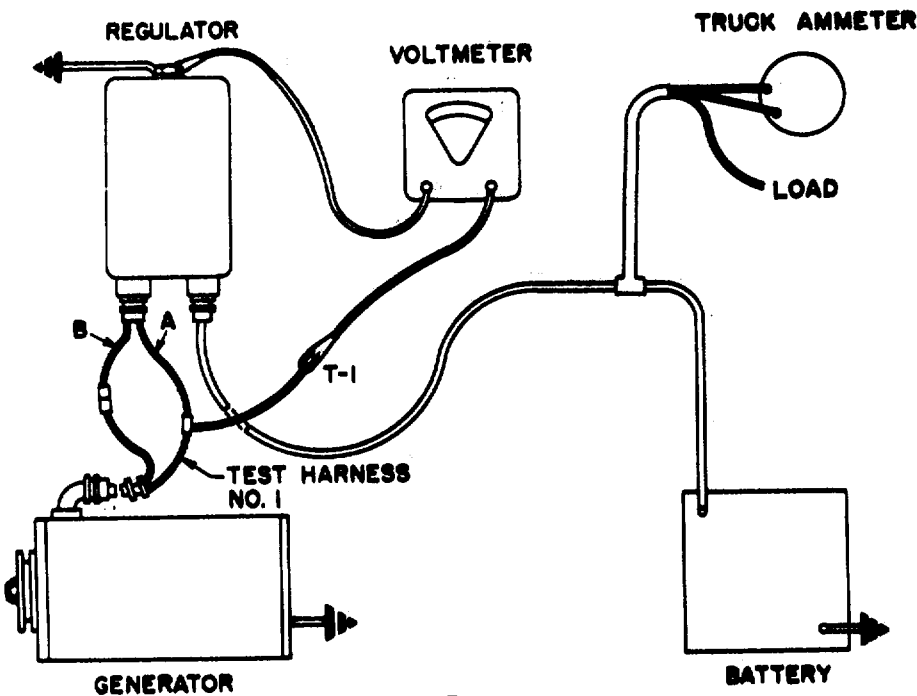

B

EMC 5-3810-201-20/28

Figure 3-74. Generator voltage regulator test connections.


by reversing numerical sequence (13) through (19).

3-88. Relay Solenoid (Starter)

a. Removal and Installation.

(1) From engine model 687C-18-ES. Refer to figure 3-77, remove items (1) through (12) in numerical sequence, to remove relay solenoid. In install in reverse order.

(2) From engine model D333TA. Remove or

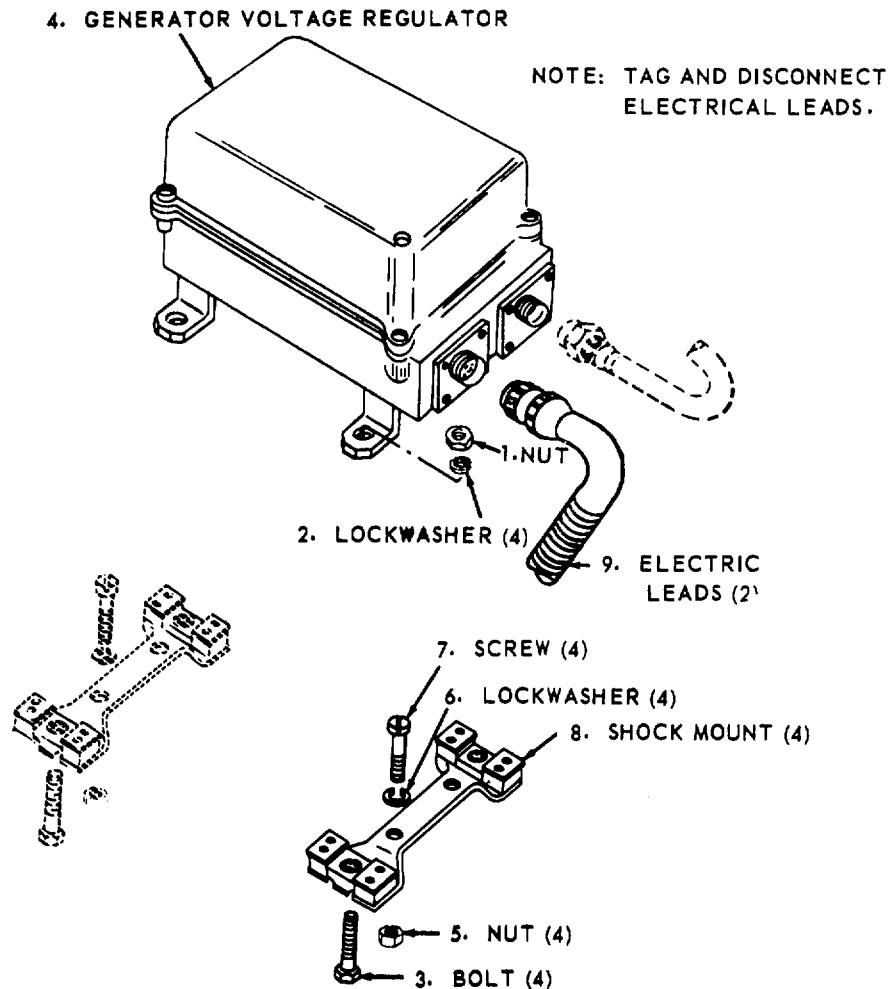

ME 3810-201-12/3-75

Figure 3-75. Generator voltage regulator and shock mounts, removal and installation.

install in a manner similar to that described in (1) above.

b. Cleaning, Inspection, and Repair.

(1) Clean relay solenoid with a rag dampened in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect mounting hardware for excessive wear or stripped threads, electrical leads for loose terminals, bare wire, or frayed insulation, and test relay for proper operation by placing source of 24 vdc power across terminals and listen for solenoid movement.

(3) Repair by replacing defective hardware, electrical lead, or defective relay solenoid.

3-89. Receptacle (Slav.) Electrical Connector

a. Removal and Installation.

(1) Remove capscrew, lockwasher, and ground cable (fig. 3-79).

(2) Remove nut (7, fig. 3-77) and electrical lead (8) then remove clip and grommet (fig.

3-79)

(3) Remove capscrews (4), lockwashers, nuts, and receptacle (slave) electrical connector.

(4) Install by reversing steps (1) through (3) above.

b. Cleaning, Inspection, and Repair.


(1) Clean all parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect hardware for excessive wear or stripped threads, electrical leads for loose terminals, bare wire, or frayed insulation, and receptacle for proper mating with plug electrical connector.

(3) Repair by replacing defective hardware, electrical leads, or receptacle.

3-90. Lubricating Oil Pressure Transmitter

a. Removal and Installation.

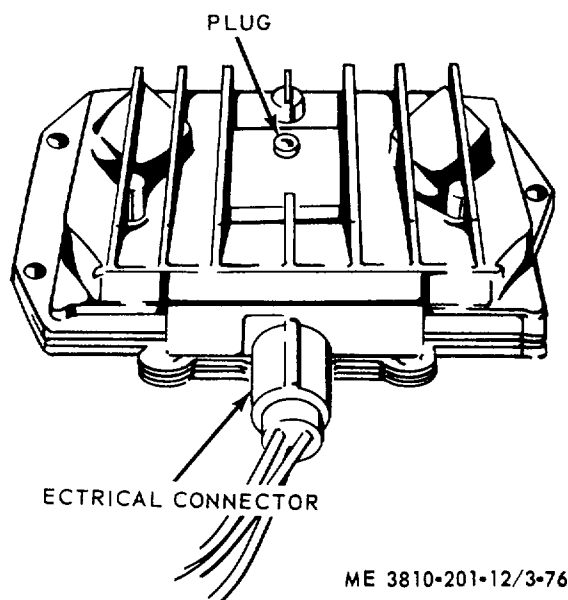

ME 3810-201-12/3-76

Figure 3-76. Alternator voltage regulator, adjustment, removal, and installation.

(1) Refer to figure 3-80 and remove lubricating oil pressure transmitter from engine model 687C-18-ES. Install in reverse order.

(2) Remove lubricating oil pressure transmitter from engine model D333TA in a manner similar to that given in (1) above.

b. Cleaning, Inspection, and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect electrical connector for defective connections or frayed lead, inspect transmitter for defective threads, cracked housing, or other defect.

(3) Repair by repairing electrical lead (para 3-95) or replacing defective lead or transmitter.

3-91. Water Temperature Transmitter

a. Removal and Installation.

(1) Refer to figure 3-81, disconnect electrical connector, and remove water temperature transmitter from engine model 687C-18-ES. Install in reverse order.

(2) Remove transmitter from engine model D333TA in a similar manner to that given in (1) above.

b. Cleaning, Inspection, and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect electrical connector for defective connections or frayed lead, inspect 3-90 transmitter for defective threads, cracked housing, or other defect.

(3) Repair by repairing electrical lead (para 3-95), replacing defective lead, or transmitter.

3-92. Water High Temperature Switch

a. Removal and Installation.

(1) Refer to figure 3-81, tag and disconnect three electrical leads, then remove water high temperature switch from engine model 687C-18-ES. Install in reverse order.

(2) Remove water high temperature switch from engine model D333TA in a manner similar to that given in (1) above.

b. Cleaning, Inspection, and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect electrical leads for loose connections or frayed insulation, inspect switch for cracked or dented housing.

(3) Repair by replacing defective lead or switch.

3-93. Low Oil Pressure Switch

a. Removal and Installation.

(1) Refer to figure 3-82, tag and disconnect three electrical leads, then remove low oil pressure switch from engine model 687C-18-ES. Install in reverse order.

(2) Remove low oil pressure switch from engine model D333TA in a manner similar to that given in (1) above.

b. Cleaning, Inspection, and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect electrical leads for loose connections or frayed insulation, inspect switch for cracked or dented housing.

(3) Repair by replacing defective lead or switch.

3-94. Overspeed Governor (On Engine Model 687C-18-ES)

a. Removal and Installation.

(1) Disconnect and remove tachometer drive cable (fig. 3-83), then tag and disconnect two electrical leads.


(2) Remove four capscrews, lockwashers, and flatwashers securing overspeed governor to engine front cover, then remove governor.

(3) Install in reverse order.

b. Cleaning and Inspection.

(1) Clean all metal parts with an approved cleaning solvent and dry thoroughly. Wipe microswitch with a rag dampened in solvent.

(2) Visually inspect mounting hardware

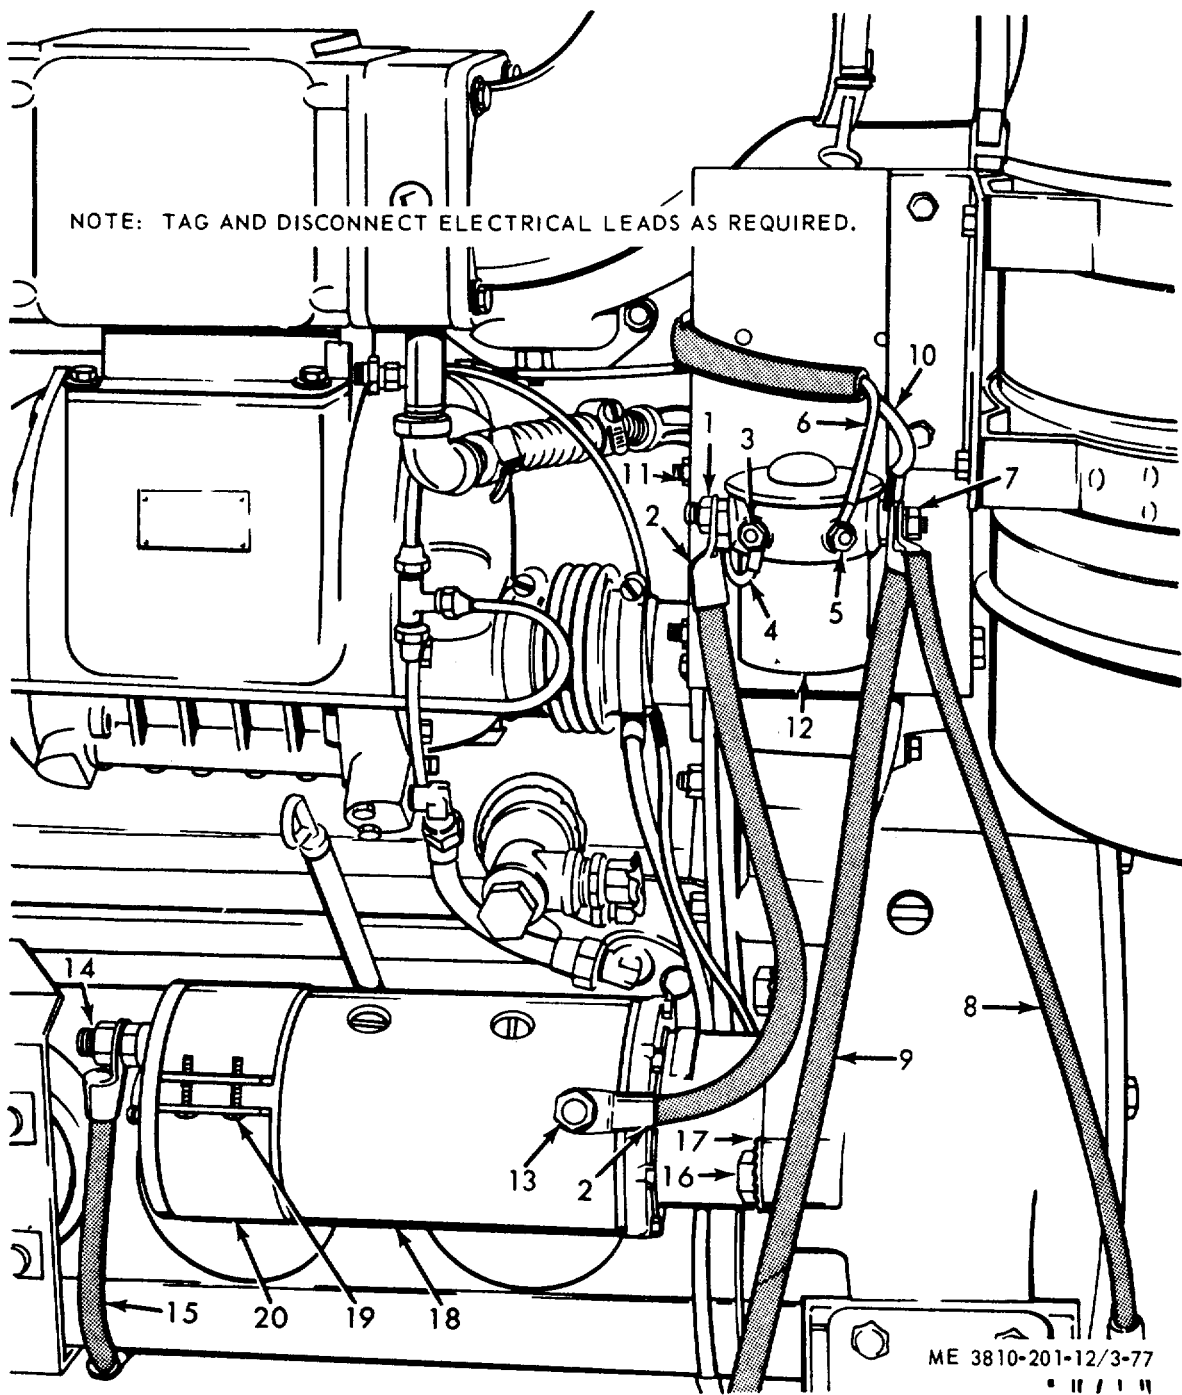

- | | | |
|-------------------|--------------------|----------------------|
| 1 Nut | 8 Electrical Lead | 15 Electrical Lead |
| 2 Electrical Lead | 9 Electrical Lead | 16 Nut (3) |
| 3 Nut | 10 Electrical Lead | 17 Lockwasher (3) |
| 4 Electrical Lead | 11 Capscrew (2) | 18 Starter Motor |
| 5 Nut | 12 Relay Solenoid | 19 Screw and Nut (2) |
| 6 Electrical Lead | 13 Nut | 20 Inspection Band |
| 7 Nut | 14 Nut | |

Figure 3-77. Starter motor, relay solenoid, and inspection band, removal and installation.

and other threaded surfaces for burrs or stripped threads. Replace defective parts.

c. Test for Speed Adjustment.

(1) Start engine (para 2-10).

(2) Run at full throttle. If tachometer indicates more than 1,935 - 15 RPM without shutting down engine, over speed governor requires adjustment.

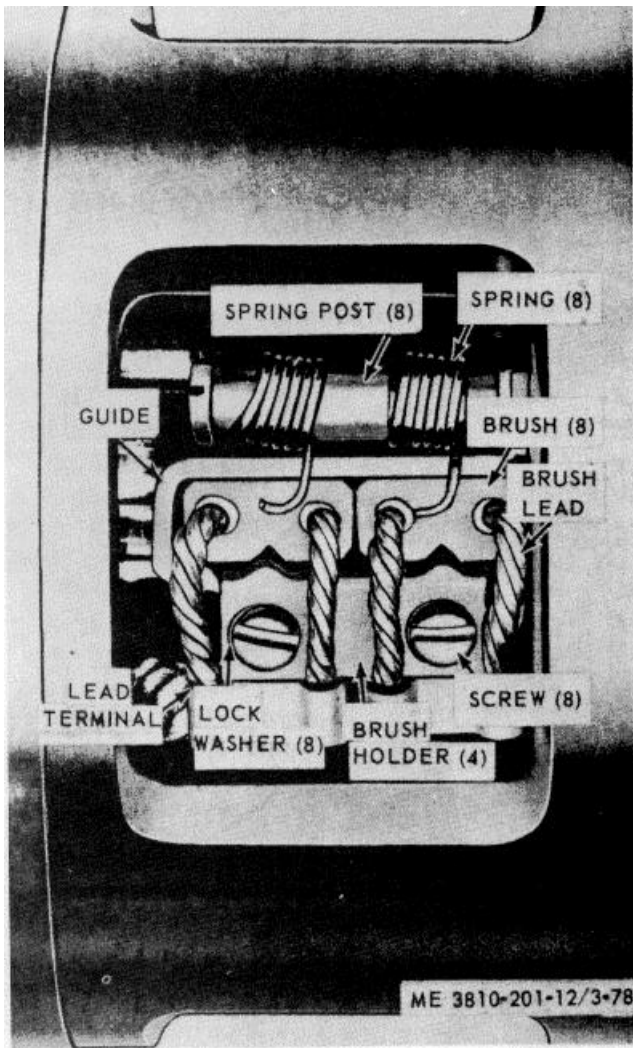


Figure 3-78. Starter motor brush replacement

(3) If engine shuts down before tachometer indicates 1,920 RPM, overspeed governor requires adjustment.

d. Adjustment.

(1) If engine shuts down before tachometer indicates 1,920 RPM, increase distance between head of the adjusting screw (fig. 3-83) and microswitch arm by turning adjusting screw counterclockwise then moving adjusting nut toward throttle lever. Repeat adjustment, by trial and error, until engine shuts down at 1,935 + 15 RPM.

(2) If engine does not shut down when tachometer indicates more than 1,950 RPM, decrease distance between head of adjusting screw and microswitch arm by backing off adjusting nut, turn adjusting screw clockwise, then move adjusting nut toward throttle lever. Repeat adjustment, by trial and error until engine shuts down at 1,935 to 15 RPM.

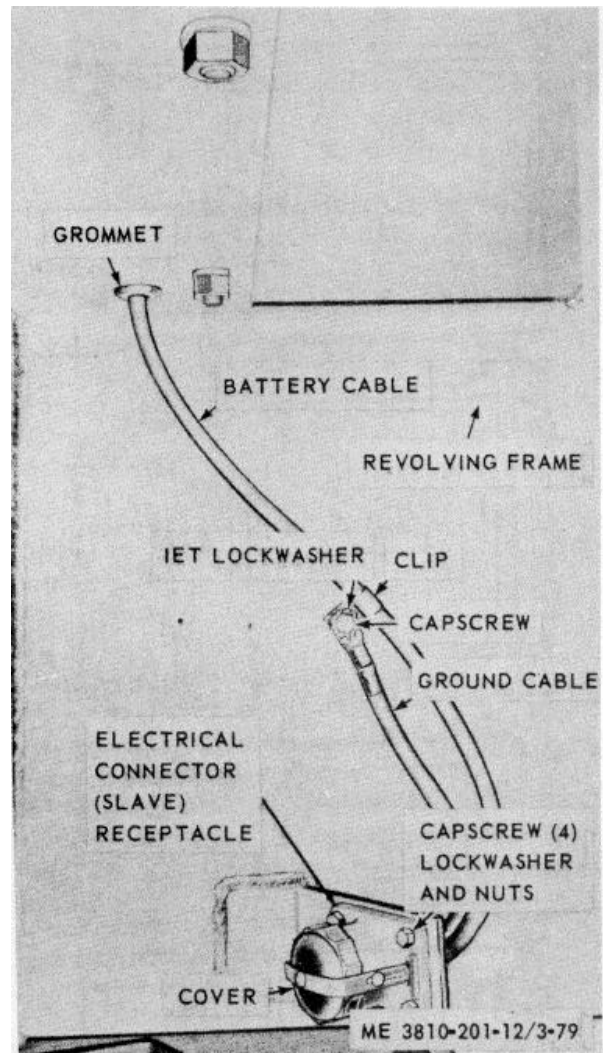


Figure 3-79. Receptacle (slave) electrical connector, removal and installation.

(3) Throttle spring tension is adjusted in a similar manner by adjusting screw on back side of overspeed governor. Tighten adjusting screw against bracket to increase tension, backoff screw from bracket to decrease tension.

3-95. Wiring

a. *General.* Crane electrical system consists of wiring of varied types, including harness, single wires, and conduit protected circuits between junction boxes.

Caution: Keep all wiring free of grease, oil, and accumulations of dust and dirt. Grease and oil will cause rapid deterioration of insulation, and excessive dust accumulations will speed grounding at cracked insulation of electrical leads.

b. *Testing.* Individual electrical leads may be tested for continuity by use of a multimeter or

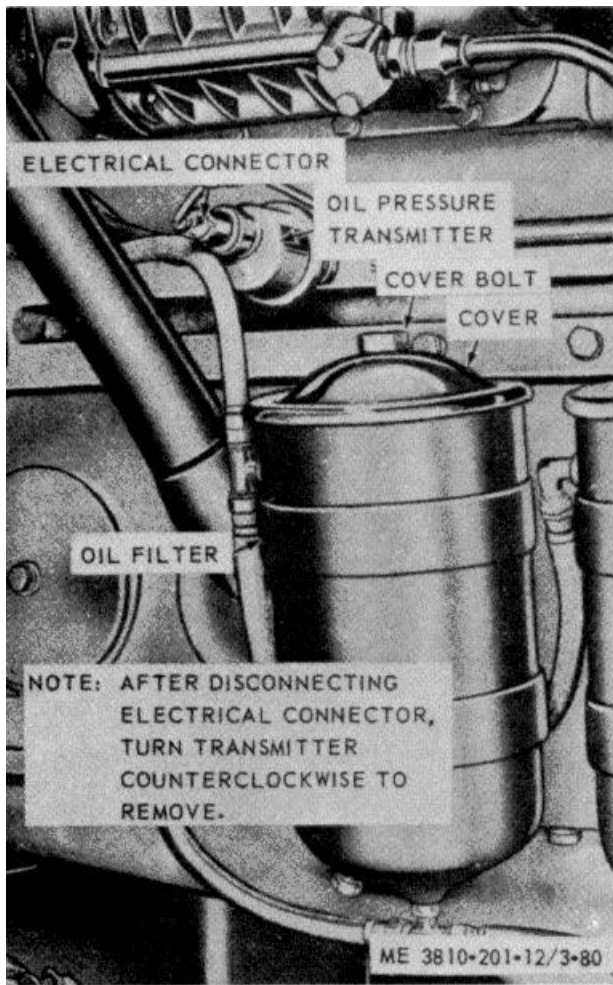


Figure 3-80. Lubricating oil pressure transmitter removal and installation.

low voltage test lamp. Leads within a harness may be tested similarly by tagging and disconnecting one end of a harness, moving loose end closer to fixed end for ease in reaching terminals by probes of multimeter or test lamp.

c. *Inspection.* Visually inspect insulation or looms for cracks or fraying. Closely examine lead or harness at all points where passage is over rough or sharp edges, or through holes without grommet protection. Examine lead terminals for security to lead or terminal post of junction box and accessory. Carefully trace leads by referring to applicable portion of wiring diagram (fig.1-10, (1) through (7)). Repair or replace defective leads or harness.

d. *Replacement.*

(1) Individual leads will be replaced by disconnecting at both terminal points, and installing a new lead of exactly the same size wire. Be sure that end terminals are secure on lead and terminal post, and that markers are removed from old lead and installed on ends of new lead, or that new markers are prepared and installed in a similar manner.

(2) Individual leads within a harness may be replaced by cutting a length of wire lead as long as the defective lead, taping it to outside of harness at frequent intervals, installing end terminals and connecting to proper terminals. Be sure that protruding ends of old lead are cut off as close to harness as practical, and that markers are removed from old lead and installed on both ends of the substitute lead.

(3) When there are two or more defective leads within a harness, the harness should be replaced. Tag terminals, identifying lead color or marker number, and disconnect and remove harness. Install new harness, making sure that all leads are correctly positioned and securely fastened to terminals.

Caution: Never remove, or install, leads to alternator while battery cables are installed. Disconnect and tie battery cables back to prevent flash currents. Rectifying diodes in alternator, or transistors in voltage regulator are easily damaged by flash current.

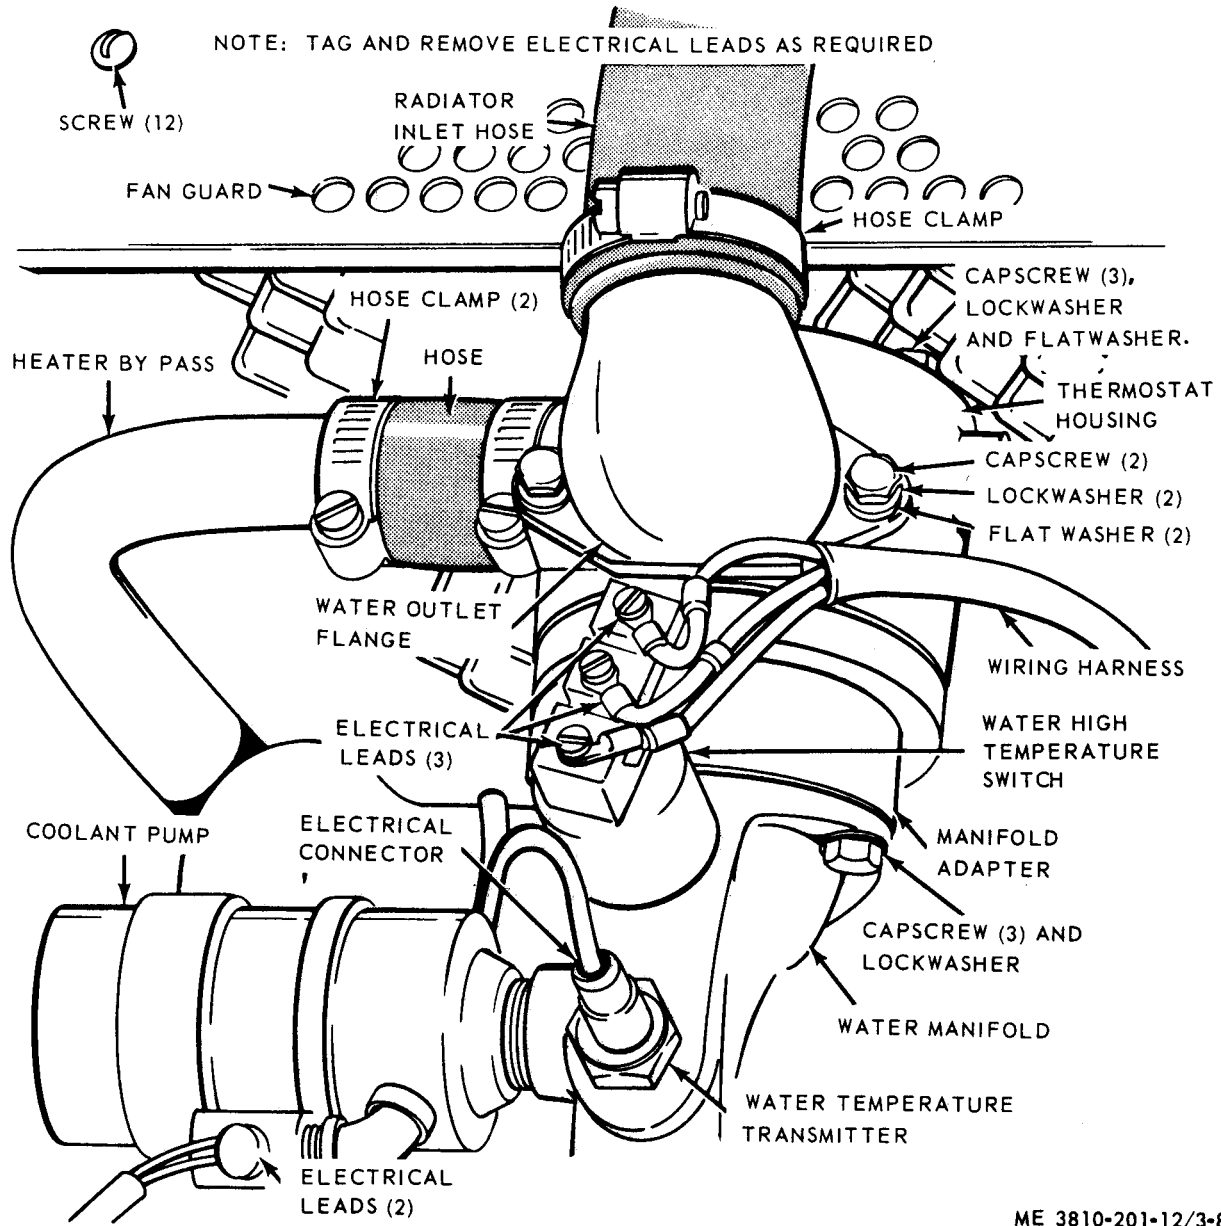


Figure 3-81 Water temperature transmitter, and water high temperature switch, removal and installation.

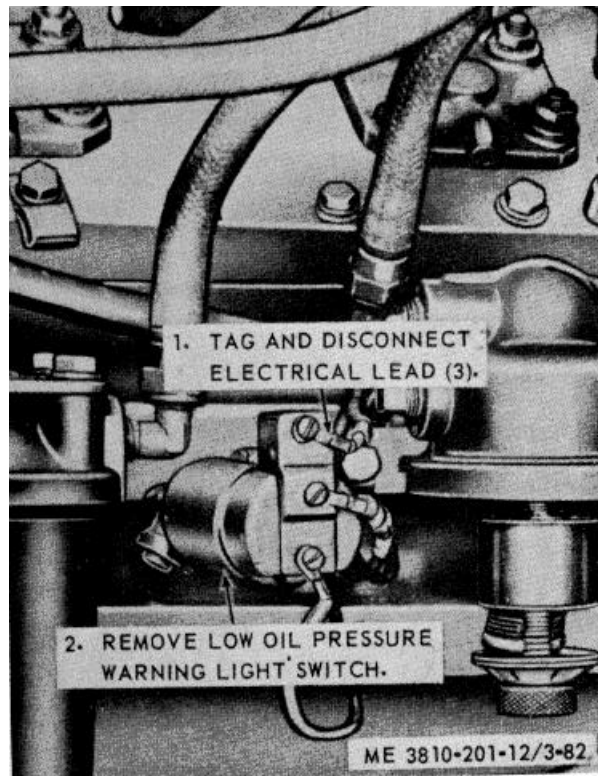


Figure 3-82. Low Oil pressure switch, removal and installation.

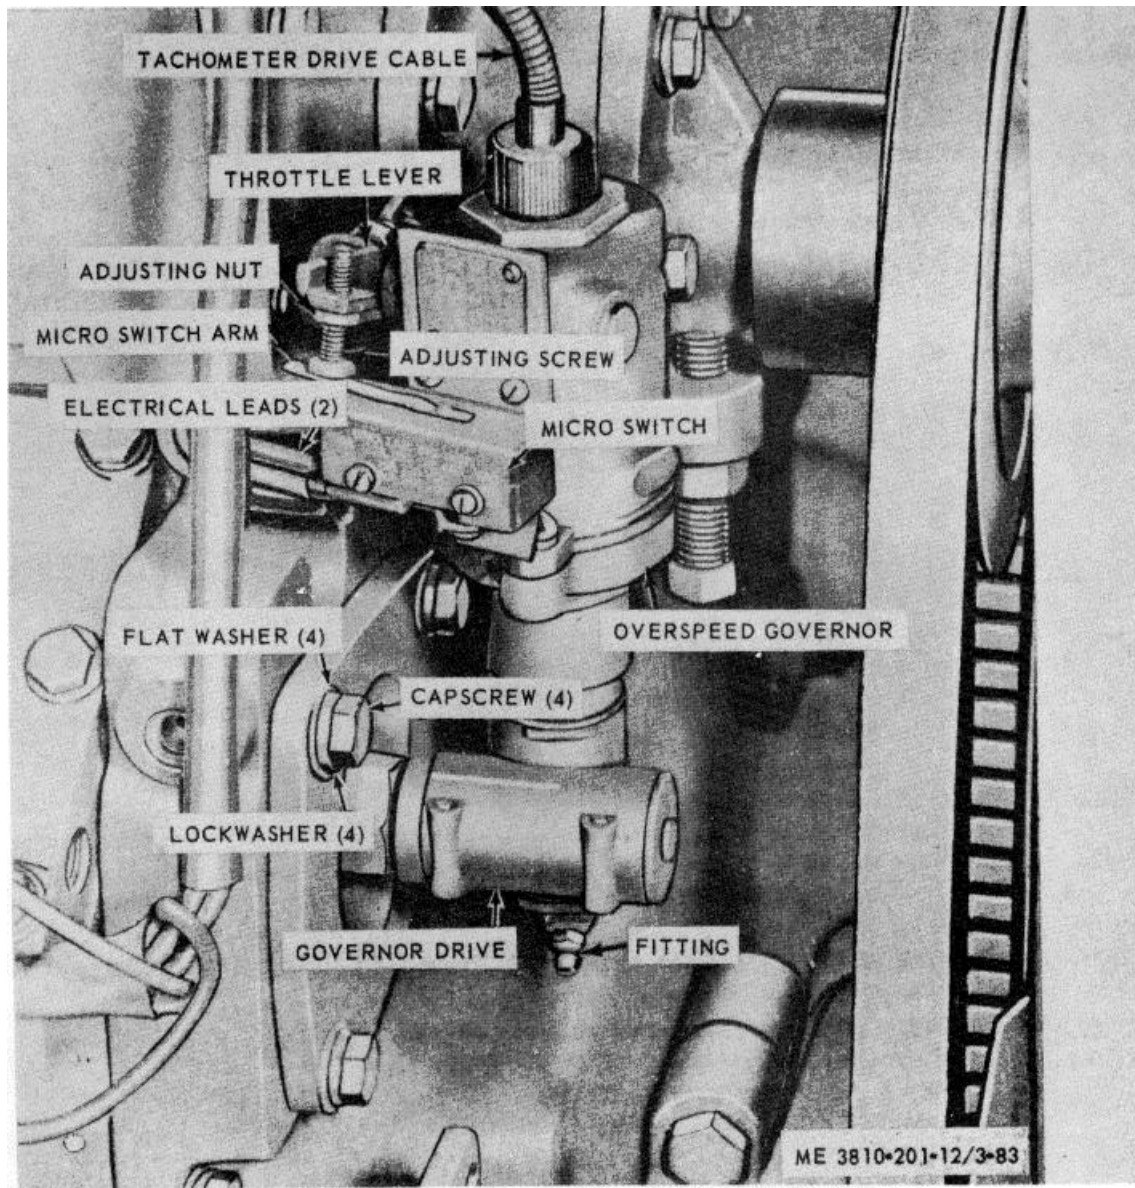


Figure 3-83. Overspeed governor, removal, installation, and speed adjustment (engine model 687C-18-ES).

Section XIII. EXHAUST SYSTEM

3-96. General

a. *Engine Model 687C-18-ES.* This exhaust system provides a positive method of expelling exhaust gases from cylinders to atmosphere through twin mufflers and pipes. Each muffler handles the exhaust of three cylinders.

b. *Engine Model D33STA.* This exhaust system uses gases to power the turbocharger. The exhaust

manifold directs gases to turbocharger, and thence to atmosphere through an unmuffled exhaust pipe.

3-97. Exhaust Pipe and Cap

a. *Engine Model 687C-18-ES.* Refer to figure 3-84 and remove cap, and unscrew exhaust pipe from coupling. Install in reverse order.

b. *Engine Model D333TA.* Refer to figure 3-85 perform steps 1 and 2 and remove cap, hood, and

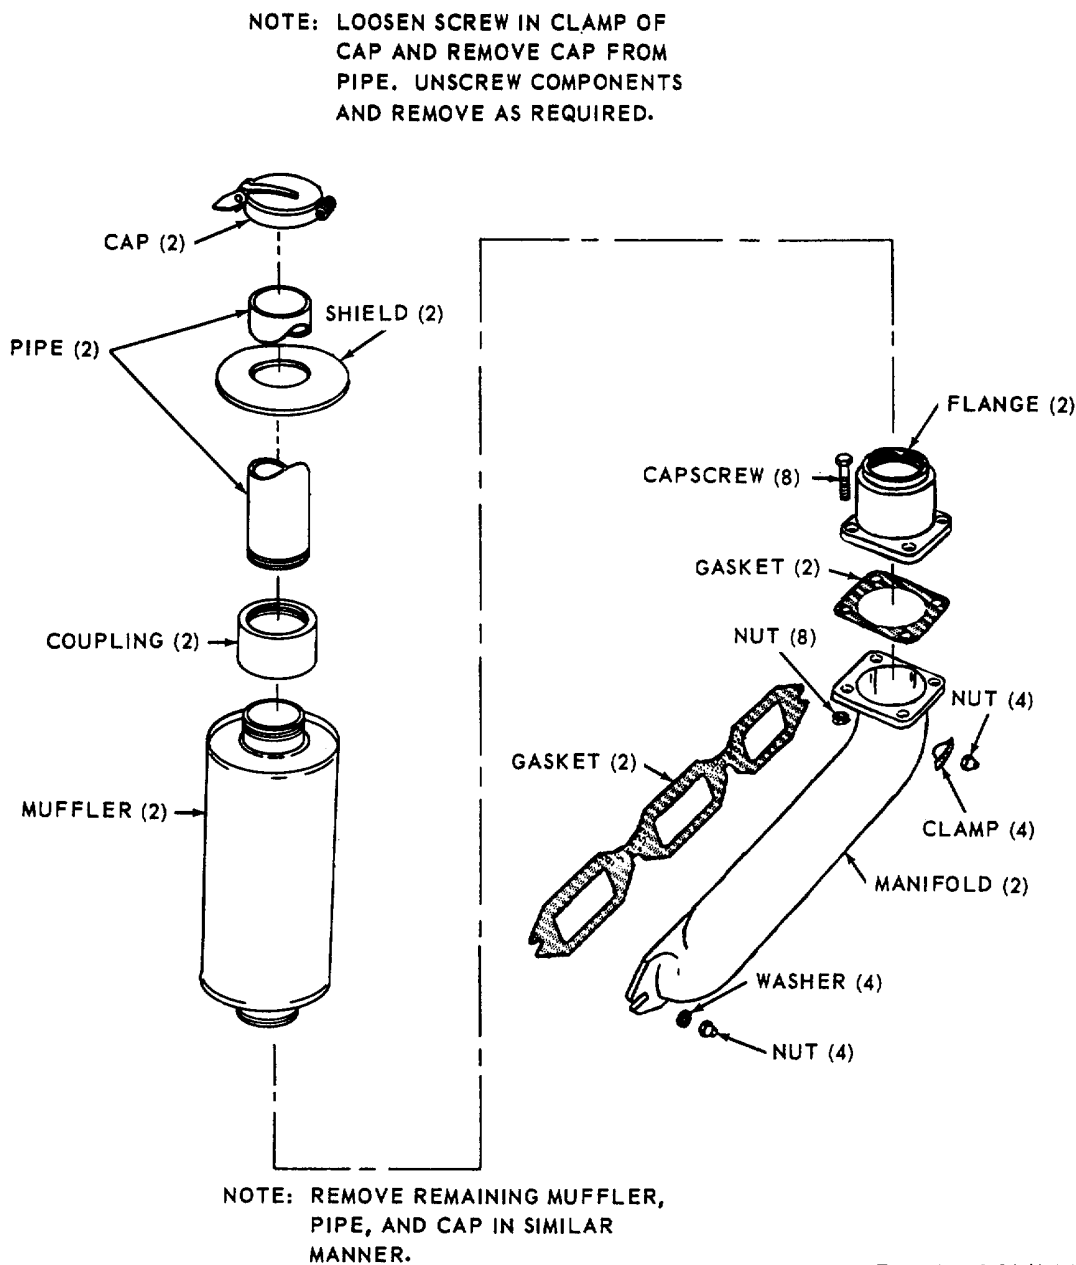


Figure 3-84. Exhaust pipe, muffler, and cap, removal and installation (engine model 687C-18-ES).

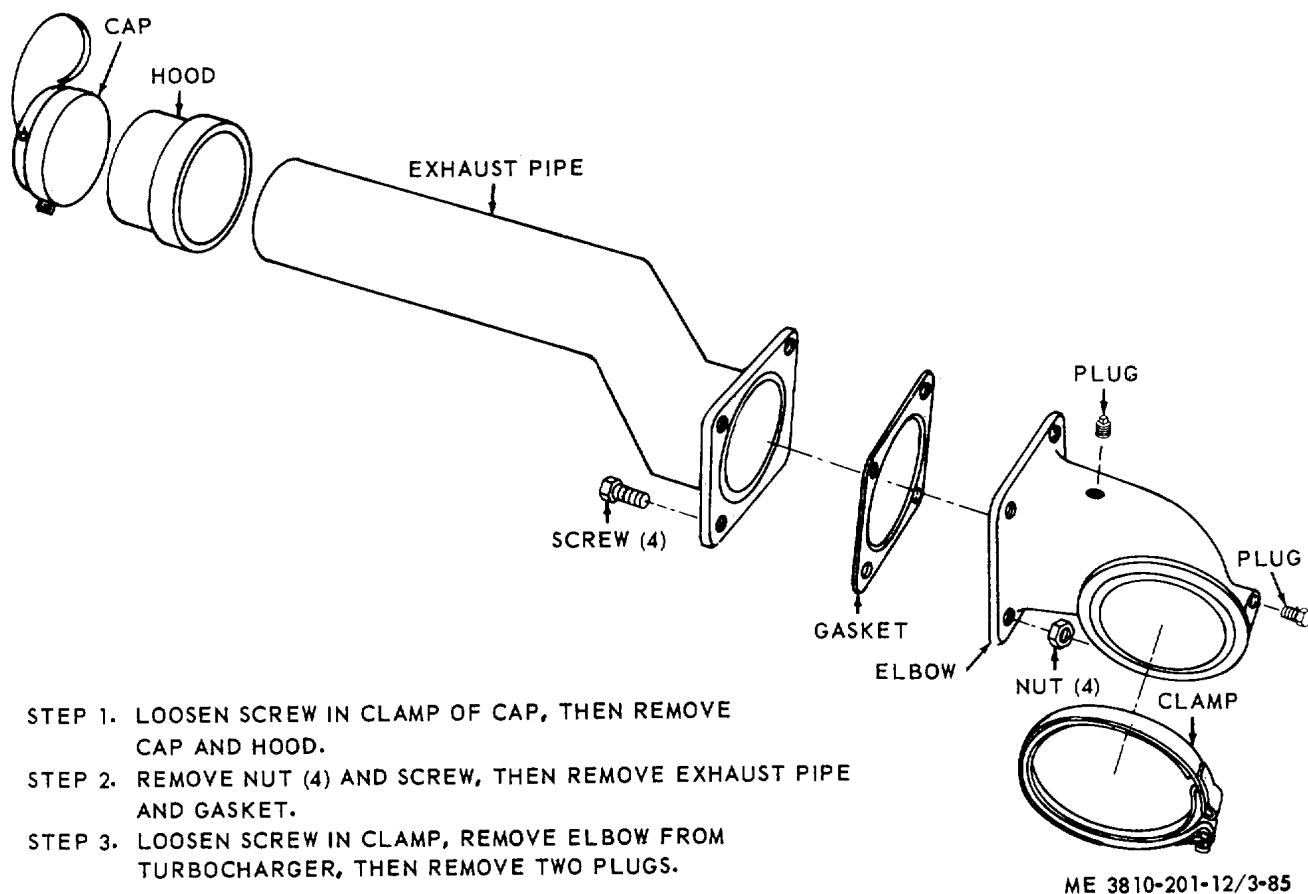


Figure 3-85. Exhaust pipe, hood, cap, and elbow, removal and installation (engine model D333TA).

exhaust pipe. Perform step 3 and remove elbow and plugs. Install in reverse order.

3-98. Muffler (Engine Model 687C-18-ES Only)

Refer to figure 3-84, unscrew coupling and muffler to remove. Install in reverse order.

3-99. Exhaust Manifold (Engine Model 687C-18-ES)

a. Removal and Installation.

- (1) Remove exhaust pipe and cap (para 3-97).
- (2) Remove muffler (para 3-98).
- (3) Refer to figure 3-84, remove four nuts, capscrews, flange, and gasket.
- (4) Remove four nuts and clamp, four nuts and

washers, then remove two exhaust manifolds and gaskets.

- (5) Install in reverse order.

b. Cleaning, Inspection, and Repair.

- (1) Clean all parts in an approved cleaning solution and dry thoroughly.
- (2) Visually inspect manifold for cracks, breaks, or other defect. Inspect gaskets for damage or defect. Inspect mounting hardware for burs, stripped threads, or other defect.
- (3) Repair by welding cracks or breaks, and replacing defective mounting hardware. Replace an excessively damaged manifold.

Section XIV. COOLING SYSTEM

3-100. General

a. Crane-Shovel Unit Model 855BG3. The sealed-type liquid cooling system consists of: radiator, fan, fan drive belt, thermostat, water temperature transmitter (para 3-91), high water temperature switch (para 3-92), water temperature indicator (para 3-154) high water

temperature warning indicator light (para 3-155), bypass line, and hoses and fittings connecting radiator to engine and water pump. Coolant is drawn from bottom of radiator by the pump, circulated through engine, and

returned to radiator through upper connections, or through the bypass line for recirculation through system. When engine is operating, air is drawn through radiator core by the fan to cool and maintain correct operating temperature of the engine. The six-blade fan is driven by a single belt.

b. *Crane-Shovel Unit Model 855BG2.* All of the crane-shovel units of this model, except the fourteen described in c below, are equipped exactly the same as in a above.

c. *Winterized Crane-Shovel Units Model 855BG2.* The fourteen winterized crane-shovel units model 855BG2 have the following additional components in the cooling system: coolant heater, coolant lines through oil pan, and a coolant circulating pump. The coolant heater heats the coolant and oil in engine as an aid to cold weather starting.

3-101. Radiator, Shroud, and Fan Shroud

a. *Removal and Installation (Engine Model 687C-18-ES).*

(1) Fan guard and shroud.

(a) Drain cooling system (para 3-20).

(b) Remove radiator outlet (bottom) hose (fig. 3-86) by loosening hose clamps at radiator and suction side of water pump.

(c) Remove radiator inlet (top) hose (fig. 3-87) in a similar manner.

(d) Remove two capscrews, lockwashers, and flatwashers, then remove pipe flange from thermostat housing (fig. 3-81).

(e) Remove 12 screws (fig. 3-87) that secures fan guard to shroud, then remove fan guard.

(f) Remove eight screws (fig. 3-86) securing shroud to radiator, then remove shroud.

(g) Install in reverse order.

(2) *Radiator.*

Note. Provide lifting device that will reach through cab side door and couple close to radiator.

(a) Remove fan guard and shroud ((1) above).

(b) Refer to figure 3-86, remove two capscrews and lockwashers, lift radiator off of pad and out of side door.

(c) Remove pad and support from mounting bracket.

(d) Install in reverse order.

b. *Removal and Installation (Engine Model D333TA).*

(1) *Fall guard and shroud.*

(a) Refer to figure 3-88 and remove fan guard.

(b) Shroud is welded to this radiator and is not ordinarily removable at organizational maintenance.

(2) *Radiator.*

Note. Provide lifting device that will reach through cab side door and couple close to radiator.

(a) Drain cooling system (para 3-20).

(b) Remove fan guard ((1) above)

(c) Refer to figure 3-89 and remove radiator.

(d) Install in reverse order.

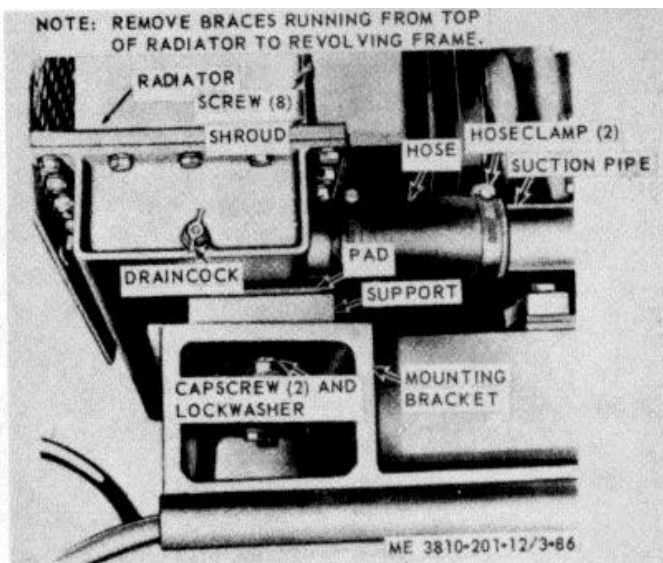


Figure 3-86. Radiator removal points.

3-102. Fan

a. *Fan and Support Bracket (Engine Model 687C-18-ES).*

(1) *Removal and installation.*

(a) Remove fan belt (para 3-103).

(b) Refer to figure 3-90 and remove fan and support bracket.

(c) Install in reverse order.

(2) *Cleaning, inspection and repair.*

(a) Clean all parts in an approved cleaning solvent and dry thoroughly.

(b) Visually inspect all parts for cracks, breaks, damaged threads, or other defect.

(c) Repair by replacing defective parts or mounting hardware.

b. *Fan (Engine Model D333TA).*

(1) *Removal and installation.*


(a) Refer to figure 3-91 and remove fan.

(b) Install in reverse order.

(2) *Cleaning, inspection and repair.*

(a) Clean all parts in an approved cleaning solvent and dry thoroughly.

(b) Visually inspect fan blades for bends, cracks, or other damage. Inspect mounting hardware for burrs or stripped threads.

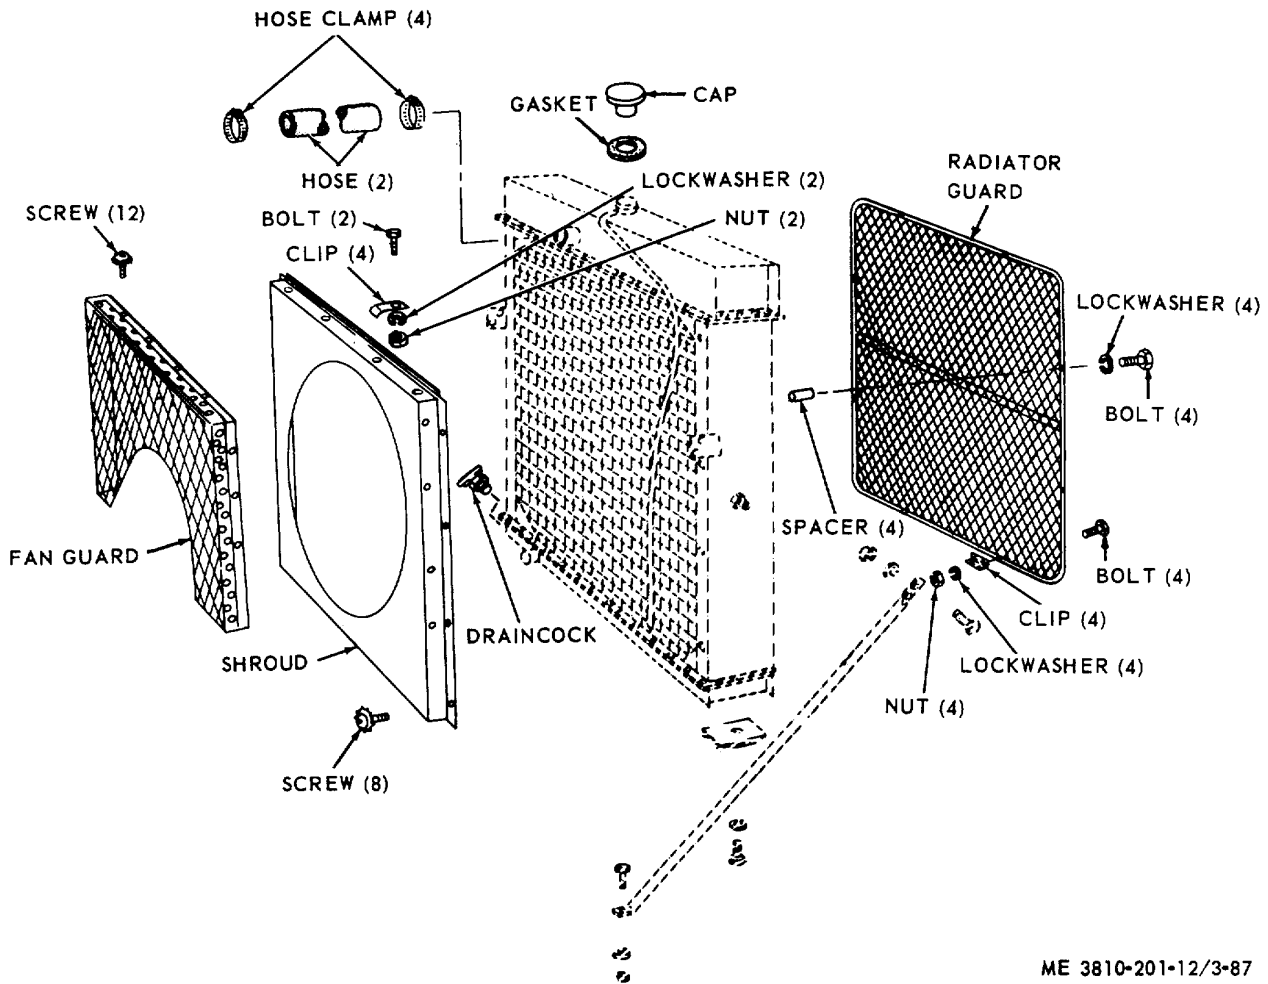

ME 3810-201-12/3-87

Figure 3-87. Fan guard and shroud (engine model 687C-18-ES), removal and installation.

(c) Repair by straightening bends, welding cracks, or replacing defective hardware.

c. Fan Idler Pulley (Engine Model D333TA).

(1) *Removal and installation.* Refer to view A or figure 3-92 and remove fan idler pulley. Install in reverse order.

(2) *Disassembly and reassembly.* Refer to view B of figure 3-92 and disassemble fan idler pulley. Reassemble in reverse order.

(3) *Cleaning, inspection and repair.*

(a) Clean all parts in an approved cleaning solvent and dry thoroughly.

(b) Visually inspect all parts for damage or defect.

(c) Repair by replacing damaged or defective parts.

d. Fan Hub.

(1) *Removal and installation.*

(a) Remove fan guard (para 3-101).

(b) Remove radiator (para 3-101).

(c) Refer to view C of figure 3-92 and remove fan hub.

(d) Install in reverse order.

(2) *Disassembly and reassembly.* Refer to view D of figure 3-92 and disassemble fan hub. Reassemble in reverse order.

(3) *Cleaning, inspection, and repair.*

(a) Clean all parts in an approved cleaning solvent and dry thoroughly.

(b) Visually inspect all parts for damage or defect. Inspect seal for deterioration, bearings for wear or scoring, and mounting hardware for burrs or stripped threads.

(c) Repair by replacing damaged, defective, or worn parts.

3-103. Fan Belt

a. *Removal and Installation.*

(1) From engine model 687C-18-ES. Refer to view A of figure 3-21, loosen adjustment screw, then remove belt from pulleys. Install in reverse order.

(2) From engine model D333TA. Refer to view A of figure 3-92, loosen adjustment screw,

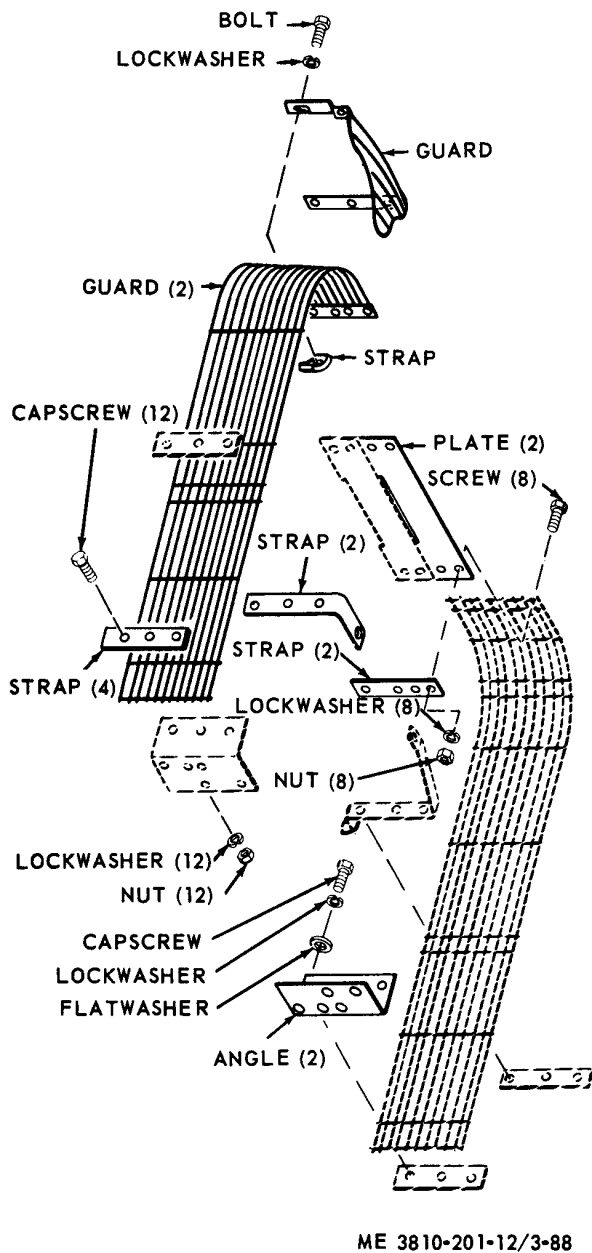


Figure 3-88. Fan guard (engine model DS33TA) removal and installation.

then remove belts from pulleys. Install in reverse order.

Note. When twin belts are used, replace belts in matched pairs when one is defective.

b. Cleaning and Inspection.

(1) Clean belts with a rag dampened in an approved cleaning solution and dry thoroughly.

(2) Visually inspect belt for fraying, tearing, or other deterioration. Replace a defective belt(s). See note in a(2) above.

3-104. Heater Coolant Pump (Winterized Models)

a. Removal and Installation.

(1) Drain coolant system below level of manifold (para 3-20).

(2) Tag and disconnect electrical leads (fig. 3-81).

(3) Turn coolant pump counter clockwise to remove from close nipple at manifold.

b. Cleaning and Inspection.

(1) Wipe motor clean with a rag dampened in an approved cleaning solvent then dry with a clean rag.

(2) Visually inspect electrical leads for deterioration, motor for external damage, or mounting hardware for burs, stripped threads, or other damage. Replace damaged or defective items.

3-105. Thermostat Housing, Thermostat, and Coolant Lines

a. On Engine Model 687C-18-ES.

(1) Thermostat housing removal and installation.

(a) Drain coolant system below manifold level (para 3-20).

(b) Refer to figure 3-81, remove pipe flange, disconnect bypass line, then remove thermostat housing and gasket from manifold.

(c) Install in reverse order.

(2) Thermostat housing disassembly and reassembly. Refer to figure 3-93 and disassemble the thermostat housing. Reassemble in reverse order.

(3) Cleaning, inspection, and repair.

(a) Clean all parts in an approved cleaning solvent and dry thoroughly.

(b) Visually inspect all metal parts for excessive wear, burs, or scoring of surfaces. Inspect gaskets and seals for tears, deterioration, or other damage or defect.

(c) Repair by replacing defective or excessively worn parts. Replace a defective seal or gasket.

(4) *Thermostat removal and installation.*

(a) Remove thermostat housing ((1) above).

(b) Disassemble thermostat housing ((2) above).

(c) Remove thermostat for test below.

(d) Install in reverse order.

(5) *Testing the thermostat.*

(a) Insert thermostat and a suitable thermometer in a container of water.

(b) Heat water until thermostat is open, noting temperature when thermostat begins to open, and when it is fully open. Thermostat should begin to open at 165° F, and be fully open at 180° F.

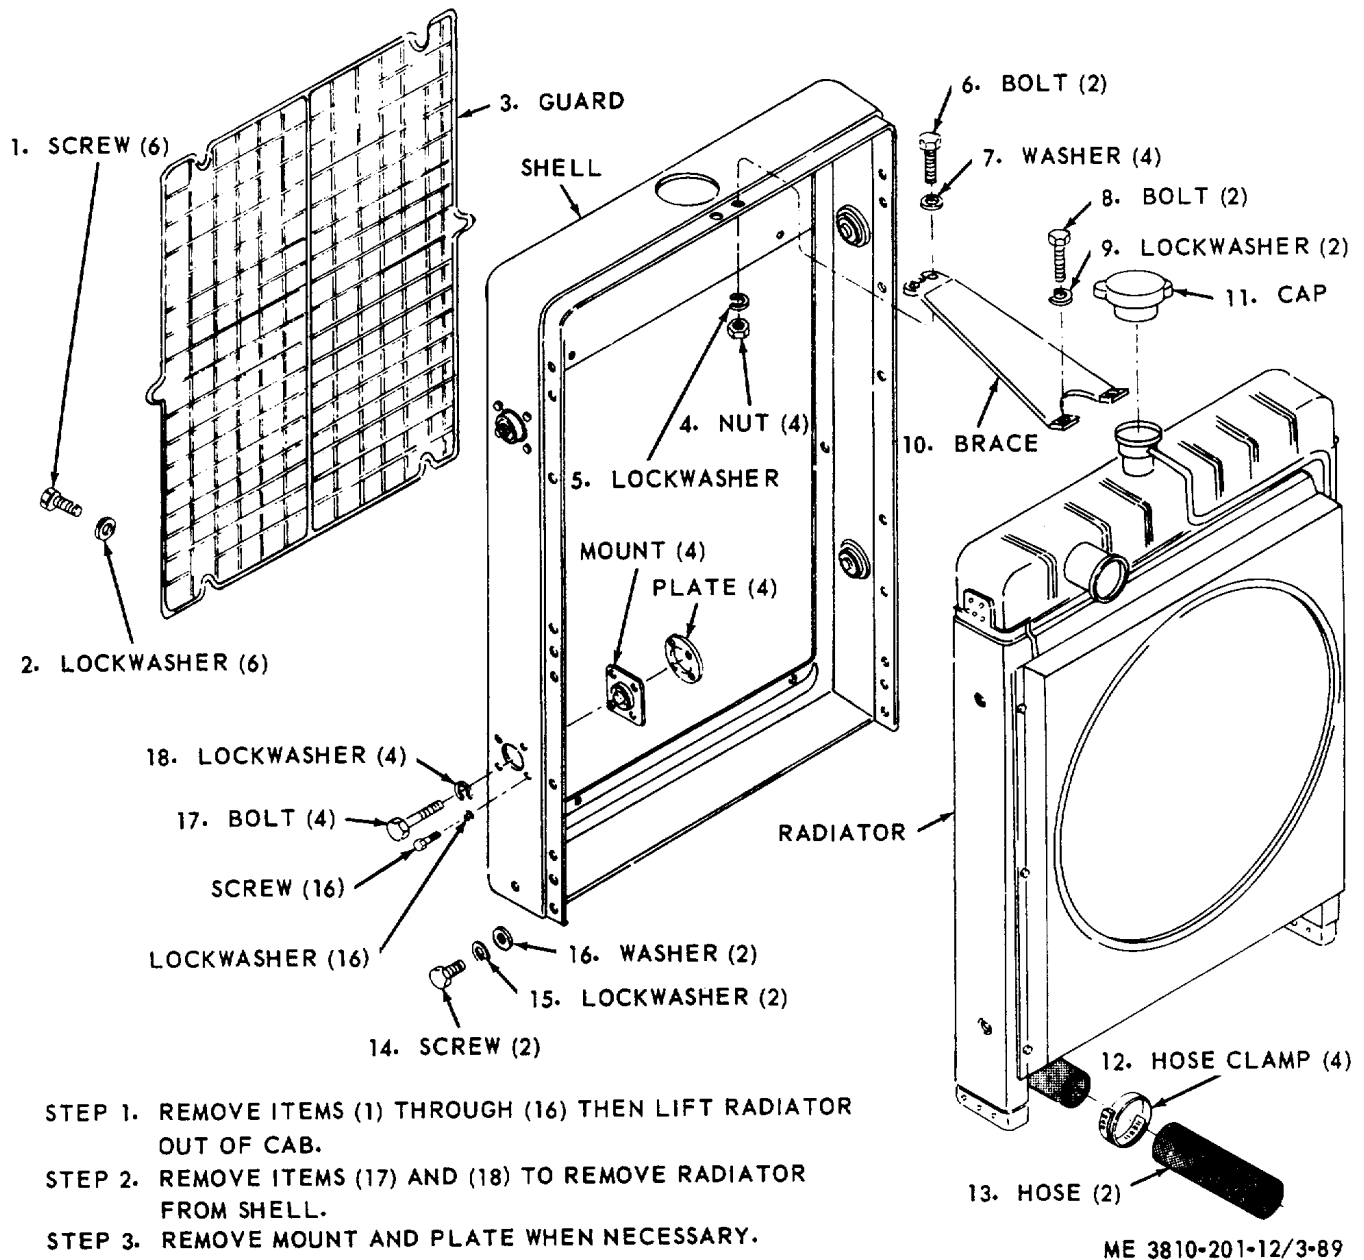


Figure 3-89. Radiator, removal and installation.

(c) When thermostat does not meet requirements of (b) above, it is defective and must be replaced.

(6) *Coolant lines removal and installation.*

- (a) Drain coolant system (para 3-20).
- (b) Loosen two hose clamp (fig. 3-81) and remove hose from by-pass line.
- (c) Disconnect by-pass line from water pump connection in similar manner.
- (d) Remove remaining coolant lines in a similar manner.
- (e) Install in reverse order.


c. *On Engine Model D333TA.* The thermostat housing, thermostat, and coolant lines are removed

from and installed on engine model D333TA in a manner similar to that described above.

3-106. Water Manifold (Model 687-18-ES)


a. *Removal and Installation.*

- (1) Remove the exhaust manifold from crankcase (para 3-99).
- (2) Remove high water temperature switch (para 3-92).
- (3) Remove the water temperature transmitter (para 3-91).
- (4) Remove thermostat housing (para 3-105).

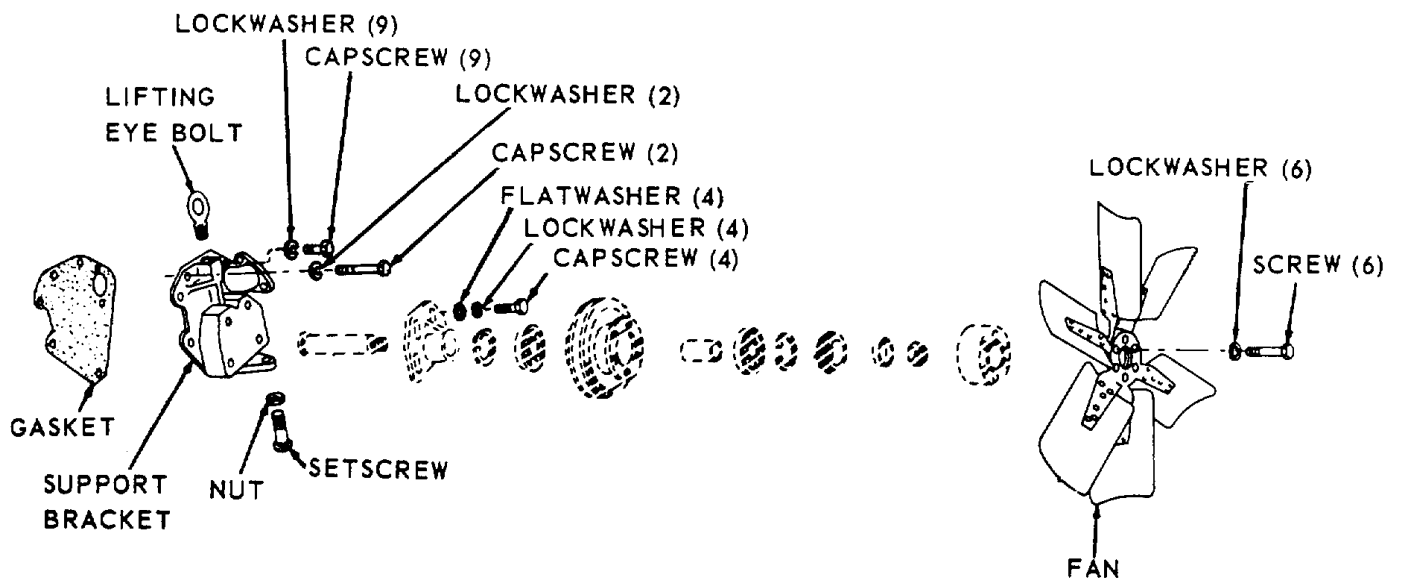

ME 3810-201-12/3-90


Figure 3-90. Fan and support bracket (engine model 687C-18-ES), removal and installation.

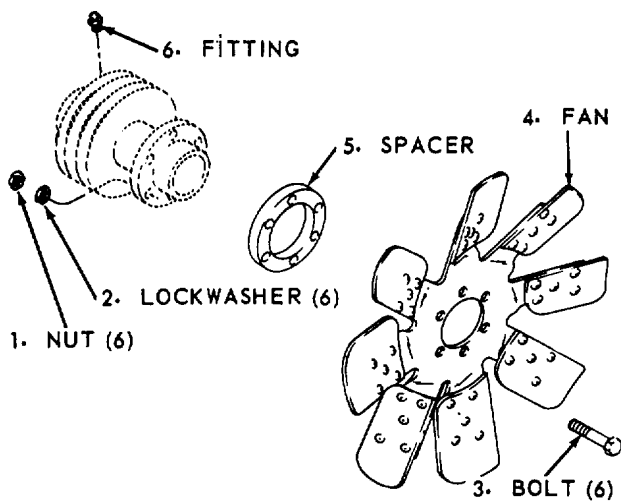


ME 3810-201-12/3-91

Figure 3-91. Fan (engine model D333TA), removal or installation.


- (5) Remove heater coolant pump (para 3-104).
 - (6) Remove 12 capscREWS, washers, and lockwashers that secure water manifold to crankcase.
 - (7) Remove water manifold and six gaskets from engine.
 - (8) Install in reverse order.
- b. *Cleaning, Inspection, and Repair.*
- (1) Scrape or brush all carbon, corrosion, or rust off parts, clean with an approved cleaning solvent, dry thoroughly.
 - (2) Visually inspect water manifold for cracks, breaks, or warping.
 - (3) Visually inspect all threaded surfaces for burrs or defective threads.
 - (4) Replace a defective manifold, all gaskets, and defective mounting hardware.

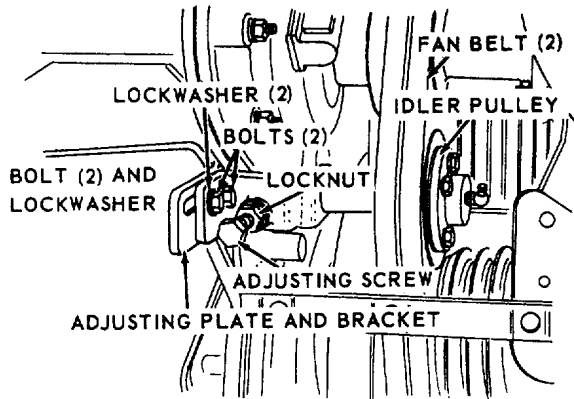


A. FAN IDLER PULLEY REMOVAL AND INSTALLATION, AND BELT ADJUSTMENT

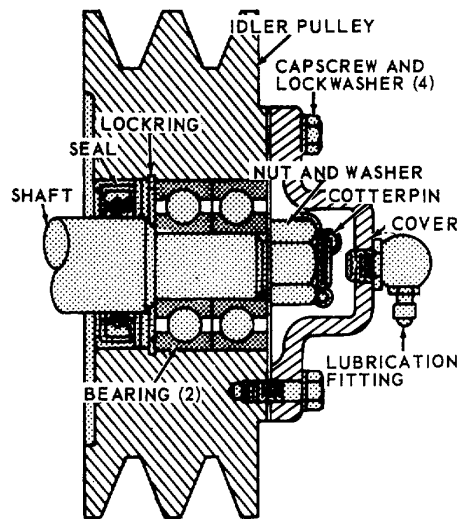

B. FAN IDLER PULLEY, DISASSEMBLY AND REASSEMBLY

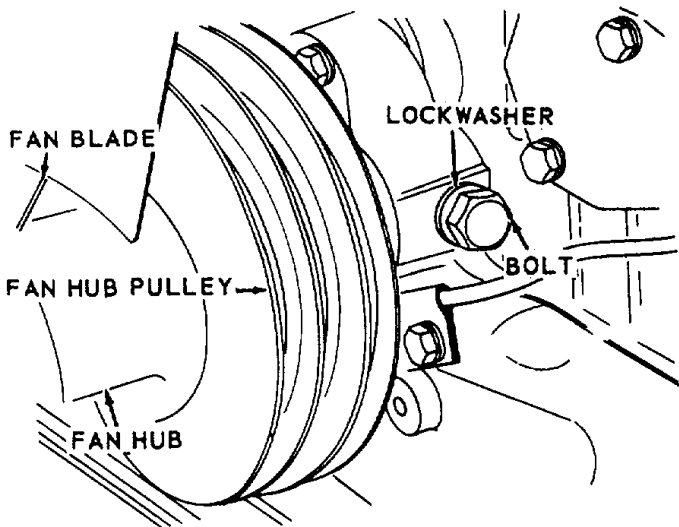


C. FAN HUB REMOVAL AND INSTALLATION

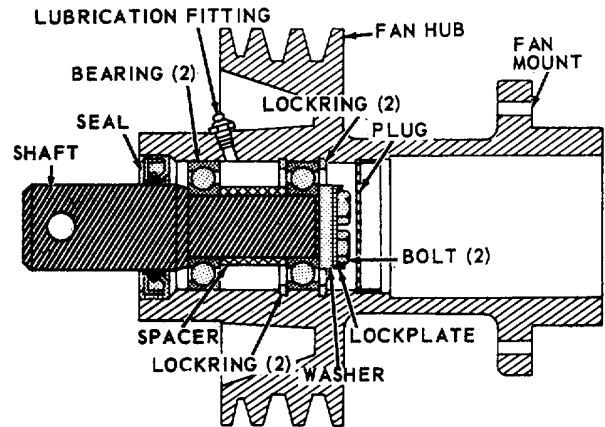

D. FAN HUB DISASSEMBLY AND REASSEMBLY

Figure 3-92. Fan idler pulley, fan hub, and fan belt removal, disassembly, reassembly, installation, and adjustment.

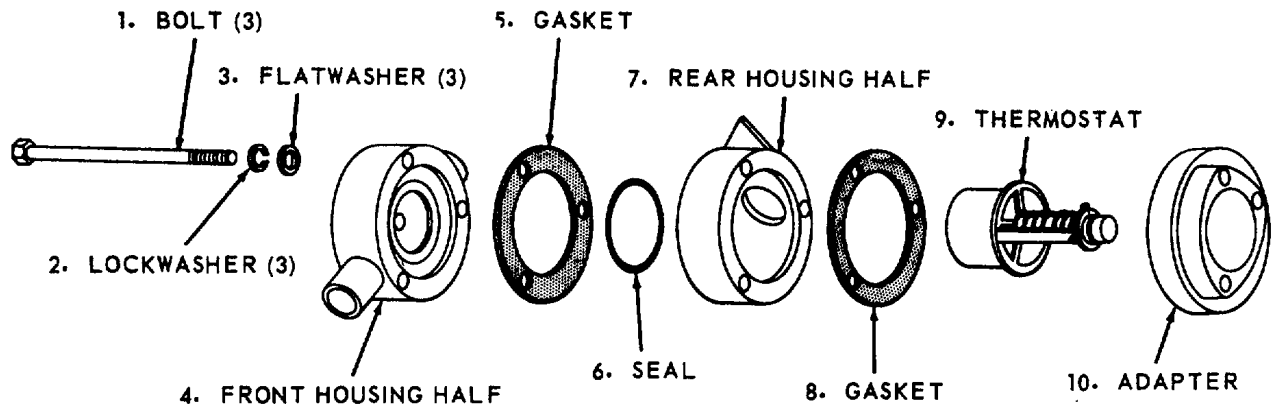

ME 3810-201-12/3-93

Figure 3-93. Thermostat housing, disassembly and reassembly.

Section XV. ENGINE CLUTCH

3-107. General

The clutch, when engaged, transfers power from engine to power takeoff output shaft, which actuates the operating mechanisms. A drive chain connects the engine drive sprocket, working off the output shaft, to the main drive sprocket. The clutch is controlled, through adjustable linkage, from the operators cab. An auxiliary control lever is located on the power takeoff housing. The engine clutch requires adjustment if it will not pull the load, heats, or the operating lever jumps out of engagement.

3-108. Clutch Lever and Linkage

a. Removal and Installation. Refer to figure 3-94 and remove clutch lever and linkage. Install in reverse order.

b. Cleaning, Inspection, and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect all parts for excessive wear, burs, stripped threads, or other damage or defect.

(3) Repair by replacing a damaged or

defective part, or defective mounting hardware.

c. Adjustment.

(1) Refer to paragraph 3-9 for instructions on engine clutch adjustment.

(2) Adjust lever and linkage by removing pins from clevises, and turning each clevis clockwise to shorten, counterclockwise to lengthen, until operator's control lever is properly positioned on quadrant when clutch is in the engaged or disengaged position.

3-109. Auxiliary Clutch Lever


a. Removal and Installation. Refer to figure 3-95, remove capscrew and lockwasher from lever, then remove lever from crossbar. Install in reverse order.

b. Cleaning, Inspection, and Repair.

(1) Clean lever and mounting hardware in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect lever for bend, crack, or excessive wear. Inspect hardware for burs, or stripped threads.

(3) Repair by replacing worn or defective parts.

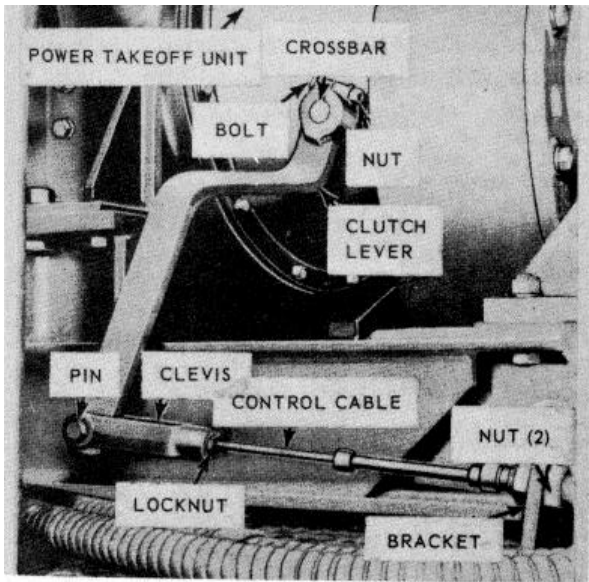

- STEP 1. REMOVE PIN FROM CLEVIS AND CLUTCH LEVER.
 - STEP 2. REMOVE NUT AND BOLT FROM, ' CLUTCH LEVER AND REMOVE. CLUTCH LEVER FROM CROSSBAR.
 - STEP 3. LOOSEN LOCKNUT AND CLEVIS FROM CONTROL
 - STEP 4. LOOSEN TWO NUT AND REMOVE CONTROL CABLE FROM BRACKET.
 - STEP 5. REMOVE CONTROL CABLE FROM OPERATOR'S CONTROL LEVER BY REPEATING STEPS 1 AND 3, REMOVE ALL CLAMPS HOLDING CABLE TO CAB FRAME, THEN REMOVE CONTROL CABLE.
- ME 3810-201-12/3-94**

Figure 3-94. Clutch lever and linkage, removal and installation.

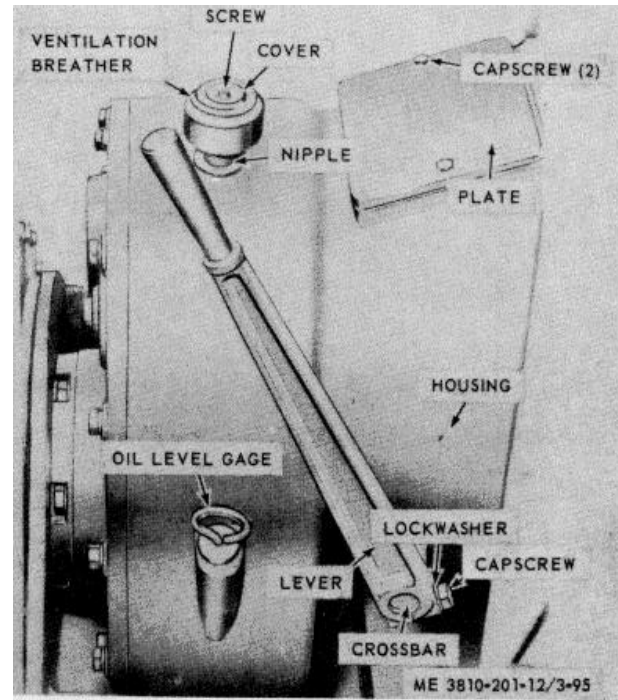


Figure 3-95. Auxiliary clutch lever and ventilation breather, removal points.

Section XVI. POWER TRANSFER

3-110. General

The main drive chain case is located at right rear side of crane-shovel unit inside the cab. The case completely surrounds the input and main shaft sprockets, and the transfer chain. The transfer chain is a multiple strand roller chain which connects input and main shaft sprockets.

3-111. Ventilation Breather (Filter)

a. Removal and Installation.

- (1) Refer to figure 3-95, remove screw, and cover, from ventilation breather (filter).
- (2) Remove ventilation breather (filter) from nipple by turning counterclockwise. Remove a damaged nipple.

- (3) Install in reverse order.

b. Cleaning, Inspection and Repair.

- (1) Clean all parts in an approved cleaning solvent and dry thoroughly. Use low pressure compressed air to dry breather (filter).
- (2) Visually inspect screw for burrs or stripped threads. Inspect breather for excess clogging of filter portion.
- (3) Repair by replacing a defective breather or screw.

3-112. Transfer Chain Case Cover

a. Removal and Installation.

- (1) Refer to figure 3-96 and remove transfer chain case cover.

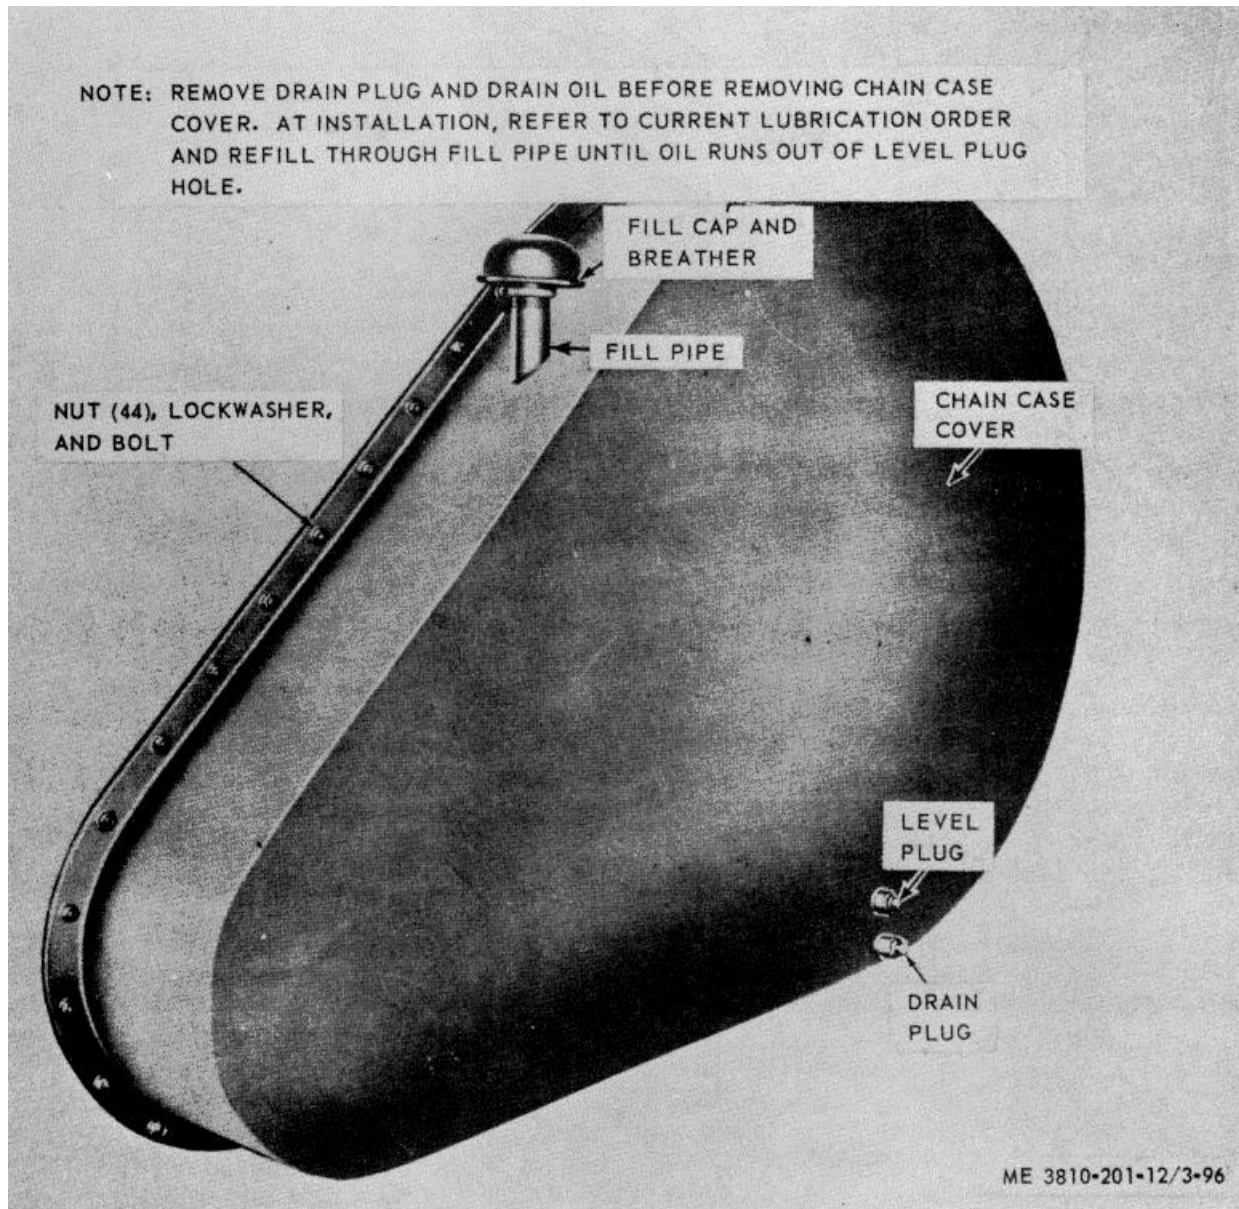


Figure 3-96. Transfer chain case cover, removal and installation.

(2) Remove gasket from cover, or case.

(3) Install in reverse order.

b. Cleaning, Inspection, and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect case for dents or cracks. Inspect mounting hardware for burrs or stripped threads. Inspect gasket for deterioration.

(3) Repair by straightening dents or welding cracks. Replace a defective cover, damaged gasket, or mounting hardware.

3-113. Transfer Chain

a. Removal and Installation.

(1) Remove transfer chain case cover (para 3-112).

(2) Remove two cotterpins (fig. 3-97) and master link from chain, then remove transfer chain from input and main shaft sprockets.

(3) Install in reverse order.

b. Cleaning, Inspection, and Repair.

(1) Clean chain in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect chain for damaged links, pins, or cotterpins.

(3) Repair by replacing damaged links, pins, or removed cotterpins.

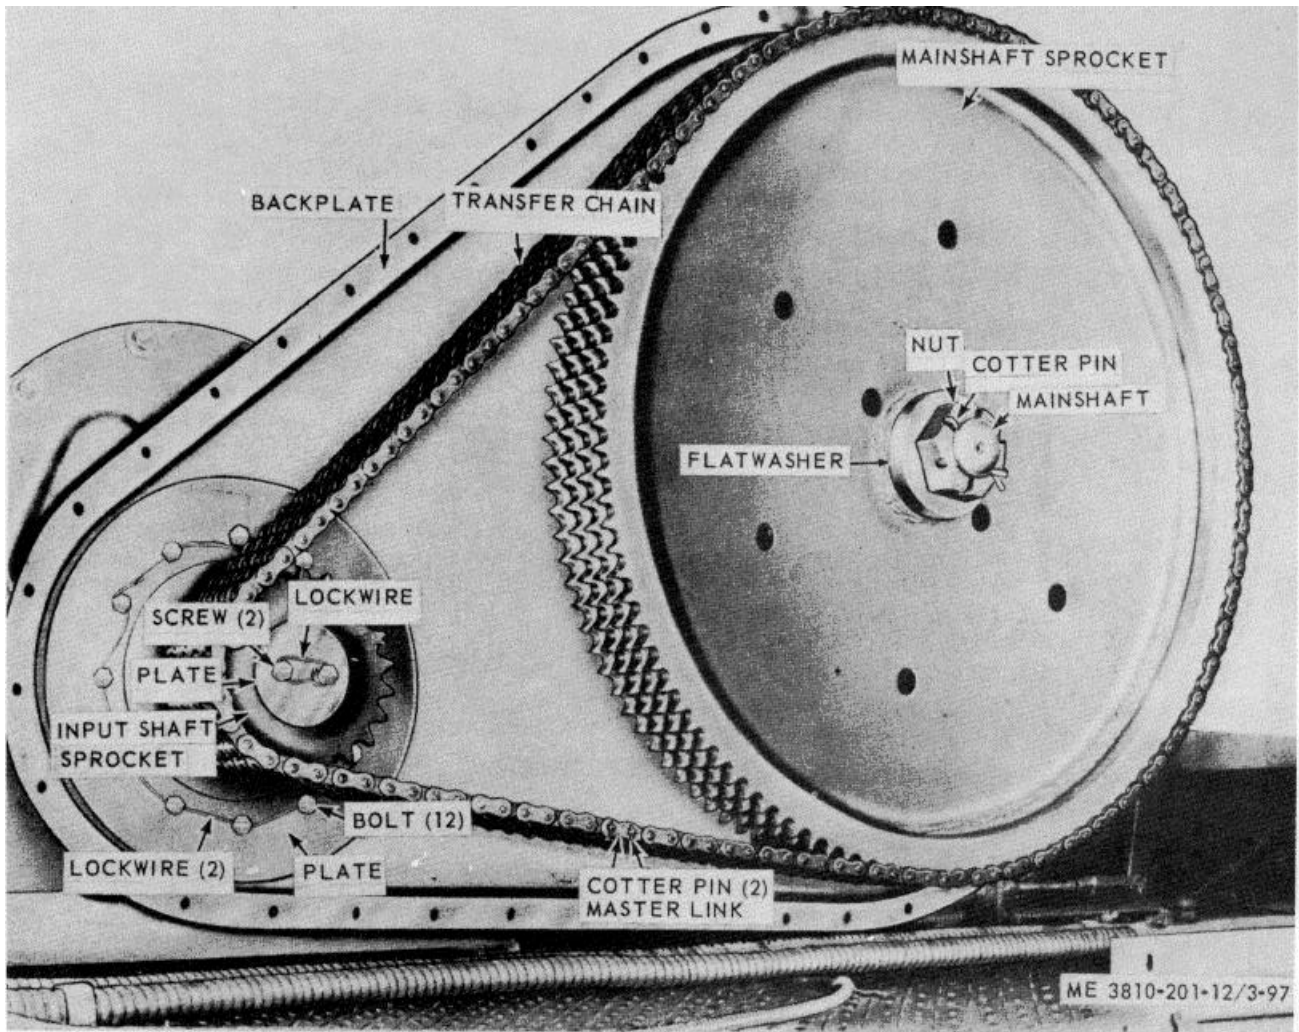


Figure 3-97. Transfer chain, removal and installation.

3-114. Input Shaft Chain Sprocket

a. Removal and Installation.

- (1) Remove transfer chain case cover (para 3-112).
- (2) Remove transfer chain (para 3-113).
- (3) Remove lockwire from two screws in input shaft (fig. 3-97).
- (4) Remove two screws and plate, then remove input shaft sprocket from input shaft.
- (5) Install in reverse order.

b. Cleaning, Inspection, and Repair.

- (1) Clean all parts in an approved cleaning solvent and dry thoroughly.
- (2) Visually inspect mounting hardware for burrs or stripped threads. Inspect sprocket for cracked or broken teeth.

- (3) Repair by replacing a damaged sprocket, or defective hardware

3-115. Main Shaft Sprocket

a. Removal and Installation.

- (1) Remove transfer chain case cover (para 3-112).
- (2) Remove transfer chain (para 3-113).
- (3) Remove cotterpin, nut, and flatwasher from mainshaft, then remove mainshaft sprocket.
- (4) Install in reverse order.

- #### b. Cleaning, Inspection, and Repair.
- Clean, inspect, and repair in manner similar to that described in paragraph 3-114b, above.

Section XVII. HYDRAULIC SYSTEM

3-116. General

a. *Description.* Each hydraulic control lever or foot pedal is connected to a master cylinder (compensator). Each master cylinder is connected by a hydraulic line to an hydraulic cylinder. The hydraulic cylinder is connected to brake, clutch, or other mechanism by mechanical linkage. When the lever or foot pedal is moved, there is a corresponding movement of the piston in master cylinder, which transmits fluid to hydraulic cylinders, thus actuating brake or clutch. When pressure is released from pedal lever, springs cause pistons in hydraulic cylinders to return to normal position.

b. *Bleeding the Hydraulic Systems.* When air is present in the hydraulic system, controls become "spongy" and do not hold brake or clutch firmly as they should. To remove air from system, proceed as follows:

(1) Fill hydraulic tank with clean hydraulic fluid (para 3-19 and LO 5-3810-201-12). Check level in tank frequently during bleeding operation, to prevent air from entering supply line.

(2) Be sure shutoff cock (drain cock) in supply line at bottom of tank is open to assure gravity flow of fluid to cylinders, then bleed compensators (cylinders) in lever stand by opening bleeder cap in each compensator. starting with the lower compensator, and working upward through the top row.

(3) After bleeding lever stand compensators, begin bleeding clutch and brake cylinders, starting with the lowest one then working upward toward cylinders mounted at highest point.

Attach one end of bleeder hose to bleeder screw then let opposite hose end rest in jar partially filled with hydraulic fluid. Always keep this end of hose under fluid to prevent air from entering bleeder hose and re-entering the hydraulic system. Open bleeder screw, apply pressure to appropriate lever or pedal and watch hose end in jar. When bubbles no longer form in fluid, close bleeder screw and remove bleeder hose from screw. Repeat above procedure for each cylinder in system.

(4) Move each control lever or pedal slowly and note clutch or brake action. If any of the controls still feel spongy, repeat bleeding operation.

(5) Fill both hydraulic tanks (para 3-19 and LO 5-3810-201-12) with clean fluid. Check level frequently while bleeding cylinders, then bleed air from the propel brake cylinders in car body. Reach through holes in turret just above the tread. The bleed screw for these cylinders is toward inside of car body. Reach around the cylinder, install bleeder hose, then open screw.

Tighten bleeder screw as soon as bubbles no longer appear in bleeder jar. Repeat procedure on remaining propel clutch hydraulic cylinder.

Note.

Winterized units intended for service in temperatures as low as -65' F require boots of special material on all hydraulic components. Check parts manual (TM 5-3810-201-20P) to assure proper boots have been installed, or to order proper boot when replacement is required.

3-117. Hydraulic Tank (Reservoir)

a. Removal and Installation.

(1) Close shutoff cocks in two supply lines beneath tank, tag and disconnect supply lines, then plug lines to prevent contamination of hydraulic system.

(2) Open tank by removing breather or filler plugs, position suitable container to receive fluid, then open shutoff cocks and drain hydraulic fluid from tank.

(3) Refer to figure 3-98 and remove hydraulic tank.

b. Cleaning, Inspection, and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect all parts for dents cracks, or excessive wear.

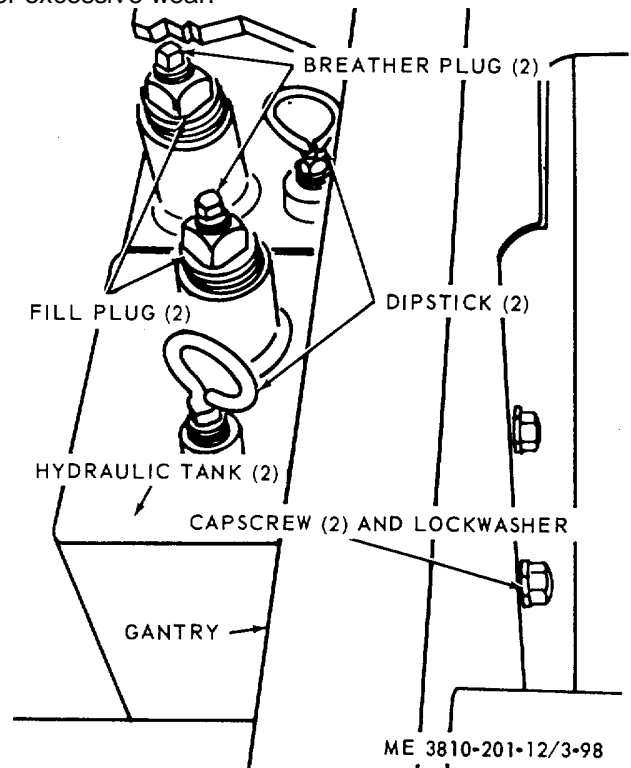


Figure 3-98. Hydraulic tank, removal and installation.

(3) Repair by welding cracks, straightening dents, or replacing defective hardware, or hydraulic tank.

and remove appropriate hydraulic hose, line, tube, or fitting. Install in reverse order.

b. Cleaning, Inspections, and Repair.


(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect all parts for leaking connection, dents, or cracks. Inspect hardware

3-118. Hydraulic, Hose, Lines, Tubes and Fittings

a. Removal and Installation. Refer to figure 3-99

NOTE: WHEN A LINE IS REMOVED, MARK ITS FITTINGS AND POSITION ON THE REVOLVING FRAME. PLUG OR COVER ENDS OR PORTS TO PREVENT CONTAMINATION OF HYDRAULIC SYSTEM.

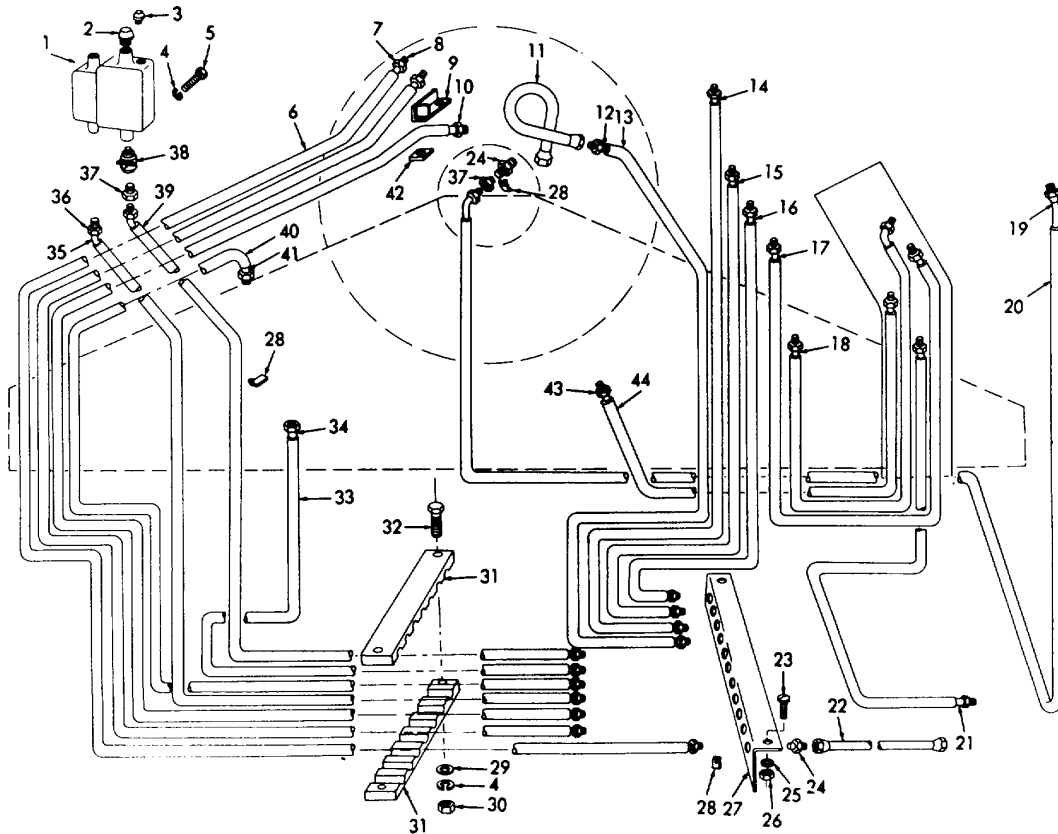

ME 3810-201-12/3-99

- | | | | | | |
|----|------------------|----|------------------|----|--------------------|
| 1 | Hydraulic tank | 16 | Tubing | 31 | Clamp |
| 2 | Fill plug | 17 | Tubing | 32 | Capscrew |
| 3 | Fluid level plug | 18 | Tubing | 33 | Conduit |
| 4 | Lockwasher (2) | 19 | Tubing | 34 | Tubing |
| 5 | Capscrew (2) | 20 | Conduit | 35 | Tubing |
| 6 | Conduit | 21 | Tubing | 36 | Nub connector (30) |
| 7 | Tubing | 22 | Hose (10) | 37 | Adapter (2) |
| 8 | Tubing nut | 23 | Screw (2) | 38 | Shutoff cock |
| 9 | Bracket | 24 | Adapter (22) | 39 | Conduit |
| 10 | Tubing | 25 | Lockwasher (2) | 40 | Conduit |
| 11 | Hose | 26 | Nut (2) | 41 | Tubing |
| 12 | Tubing | 27 | Bracket | 42 | Clamp |
| 13 | Conduit | 28 | Spring clip (22) | 43 | Tubing |
| 14 | Tubing | 29 | Flatwasher | 44 | Conduit |
| 15 | Tubing | 30 | Nut | | |

Figure 3-99. Hydraulic hose, lines, tubes, and fittings, removal and installation.

and fittings for signs of excessive wear or damaged condition.

(3) Repair by replacing defective components.

3-119. Compensators (Cylinders)

a. *Removal and Installation.* Refer to sheet 1 of figure 3-100 and remove applicable compensator. Install in reverse order.

b. *Cleaning, Inspection, and Repair.*

(1) Clean all parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect compensator for external damage or excessive wear, burs, or stripped threads on mounting hardware, or deterioration of boot on push rod.

(3) Repair by replacing damaged hardware, defective boot or compensator.

3-120. Levers and Linkage (Lever stand)

a. *General.* Normal servicing of this equipment will not require complete removal or disassembly of the lever stand and its components, therefore, these instructions will cover individual component removal.

a. *Lever and Linkage Removal and Installation.*

(1) Remove upper and lower cover plates from lever stand.

(2) Remove boom hoist hydraulic control handle (fig. 2-23) from boom hoist lever, and applicable (raise and lower) compensator (cylinder) from lever stand (para 3-119).

(3) Refer to sheet 2 of figure 3-100 and remove boom hoist lever and linkage from lever stand.

(4) Install in reverse order.

c. *Cleaning, Inspection and Repair.*

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect all parts for breaks, cracks, deformation, or excessive wear. Inspect mounting hardware for burs, or stripped threads.


(3) Repair by replacing defective parts or mounting hardware.

d. *Adjustment.*

(1) Make adjustment to mechanical linkage by lengthening or shortening adjusting setscrews in lever stop bar (sheet 2 of fig. 3-100) or clevis at rod end.

(2) Adjust the adjusting screws at both compensator push rods until lever remains in neutral when push rods are snug against piston.

NOTE: TAG, DISCONNECT, AND PLUG ALL HYDRAULIC LINES REMOVED, THEN PLUG OR COVER PORTS OF COMPENSATORS TO PREVENT CONTAMINATION OF HYDRAULIC SYSTEM.

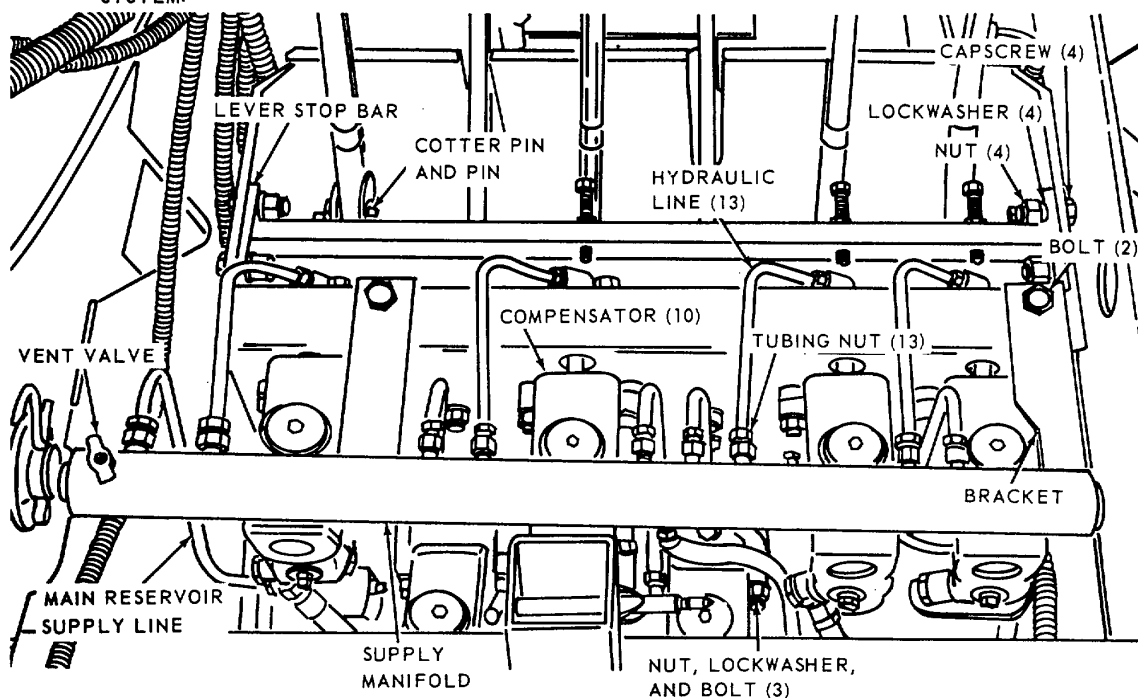

ME 3810-201-12/3-100 ①

Figure 3-100. Lever stand, showing compensator, lever, pedal and linkage removal and adjustment points (sheet 1 of 2).

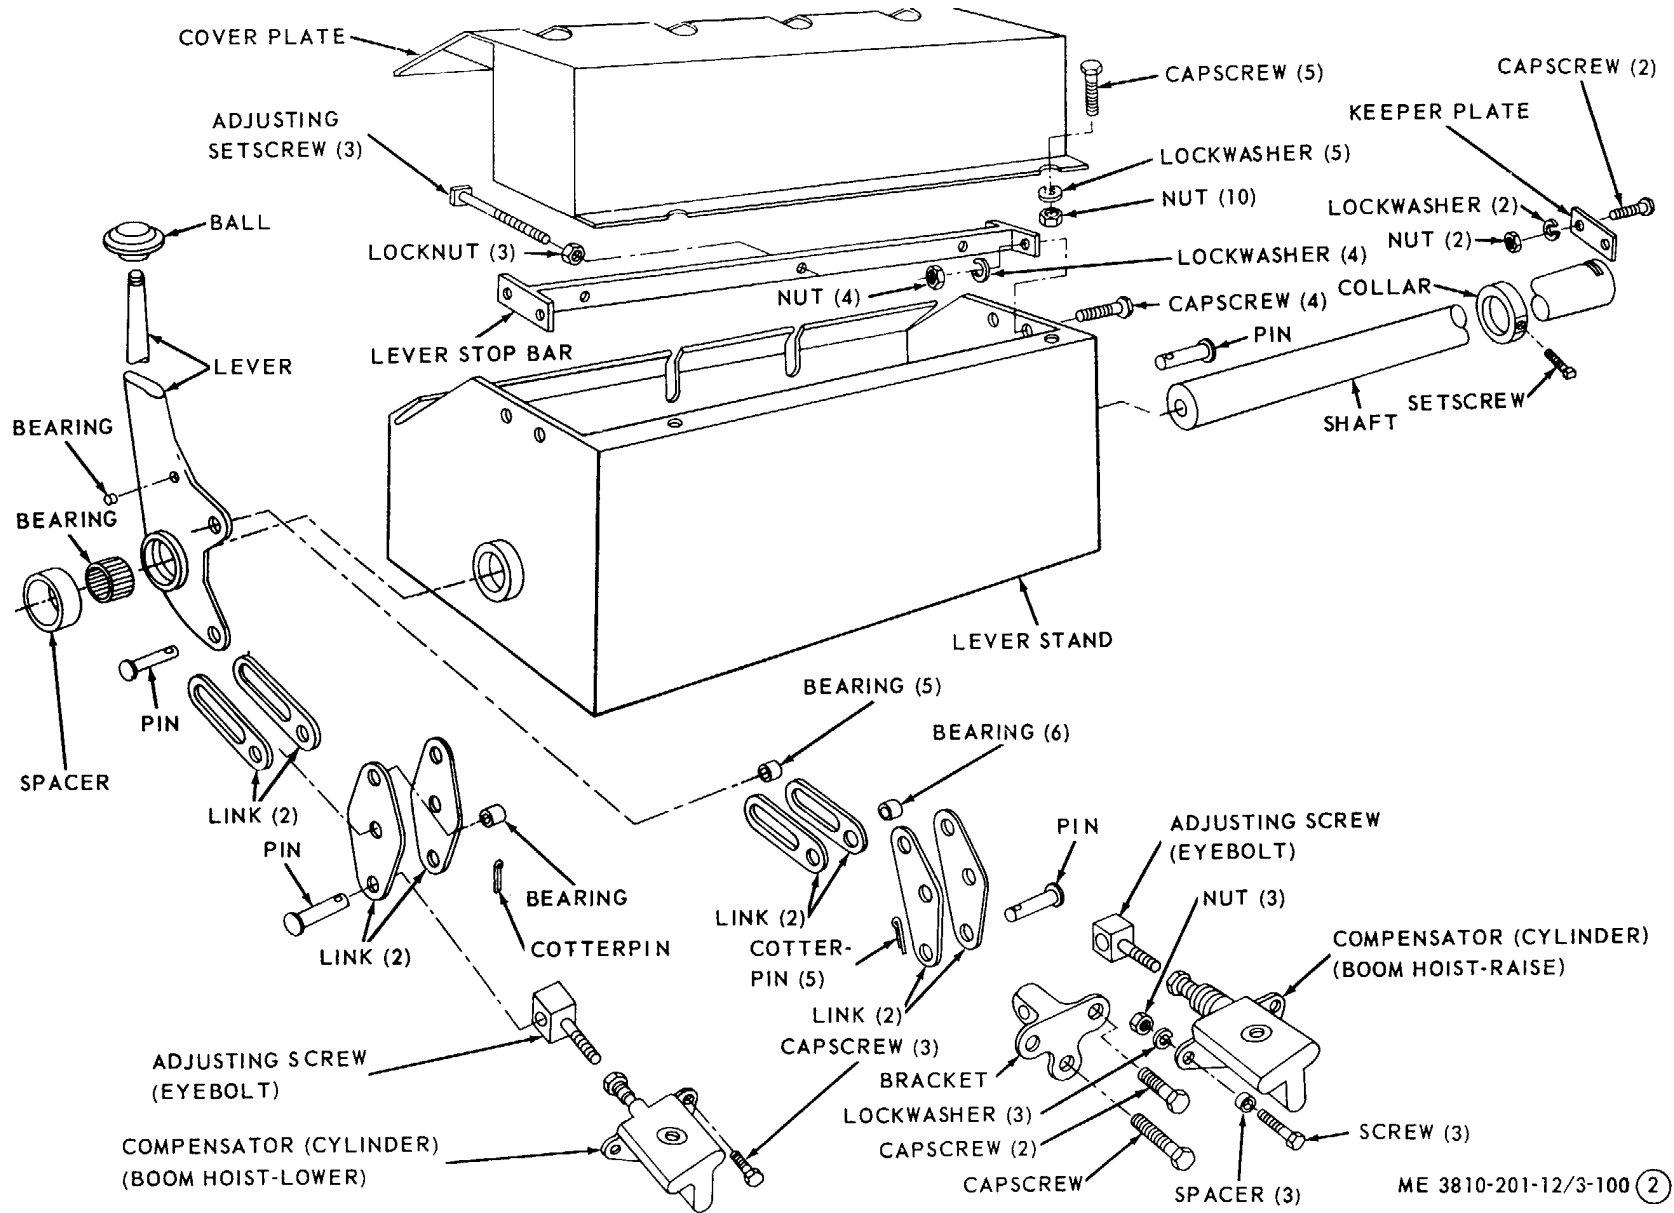


Figure 3-100. Lever stand showing compensator, lever, pedal, and linkage removal and adjustment points (sheet 2 of 2).

(3) Minor adjustment to foot pedals are made by connecting links to pedals in either the front or rear holes in lower portion of pedal. Push rod adjustment at pedal compensator are made in a manner similar to that described in (2) above.

3-121. Swing and Propel Shifter Lever and Linkage

a. Removal and Installation.

(1) Refer to figure 3-101 and remove swing propel shifter lever and linkage.

(2) Install in reverse order.

b. Cleaning, Inspection and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect all parts for excessive wear, bends, breaks, or other defect. Inspect mounting hardware for burs or stripped threads.

(3) Repair by replacing damaged parts or defective hardware.

c. Adjustment.

Adjust the linkage for positive engagement of the swing or propel jaw clutches by adjusting the overall length of pipe and two rod ends as follows:

(1) Remove cotterpin and pin that connects rod end clevis to lever.

(2) Loosen locknut at rod end then turn pipe clockwise to shorten, counterclockwise to lengthen.

(3) When length is satisfactory, tighten locknut up to rod end and connect rod end to lever by installing pin and securing with cotterpin.

3-122. Swing Brake Hydraulic Control and Linkage Adjustment

a. Swing Brake Hydraulic Control, Removal and Installation.

(1) Remove side panel from instrument control stand.

(2) Position a suitable container under control stand to receive hydraulic fluid, then refer to figure 3-104 and remove items in numerical sequence to remove swing brake hydraulic control.


(3) Install in reverse order.

Note.

Remove remaining hydraulic controls in a similar manner.

b. Cleaning, Inspection, and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

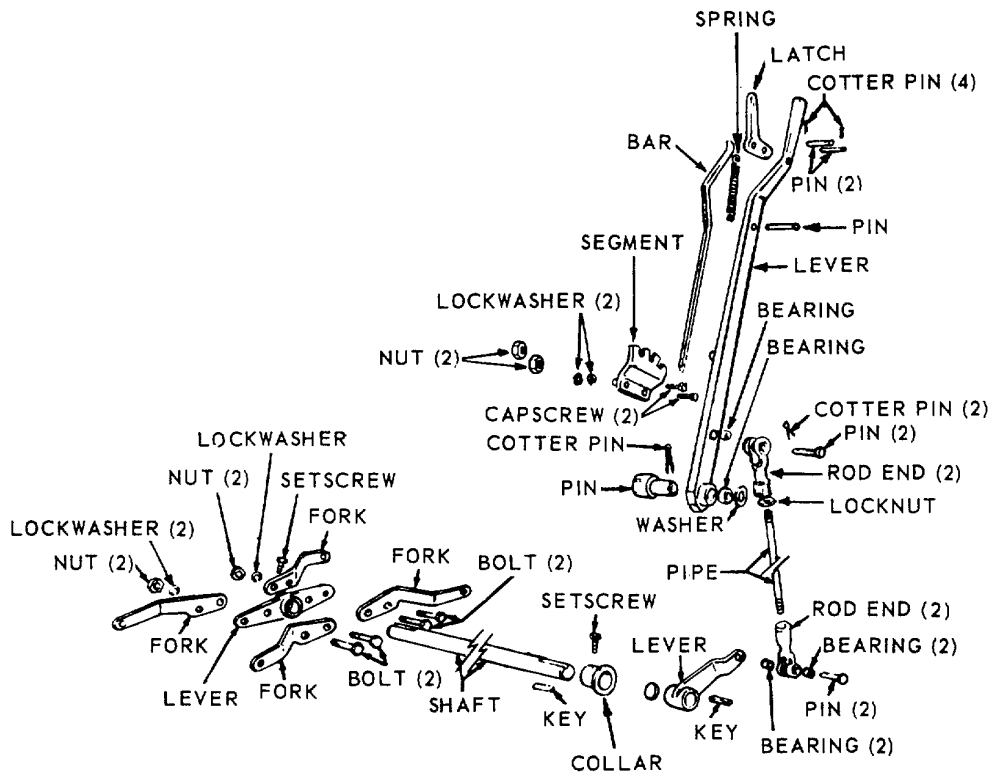

ME 3820-201-12/3-101

Figure 3-101. Swing and Propel shifter level and linkage, removal and installation.

NOTE: WHEN DISCONNECTING HYDRAULIC LINES, PLUG, OR COVER ENDS AND PORTS TO PREVENT CONTAMINATION OF HYDRAULIC SYSTEM.

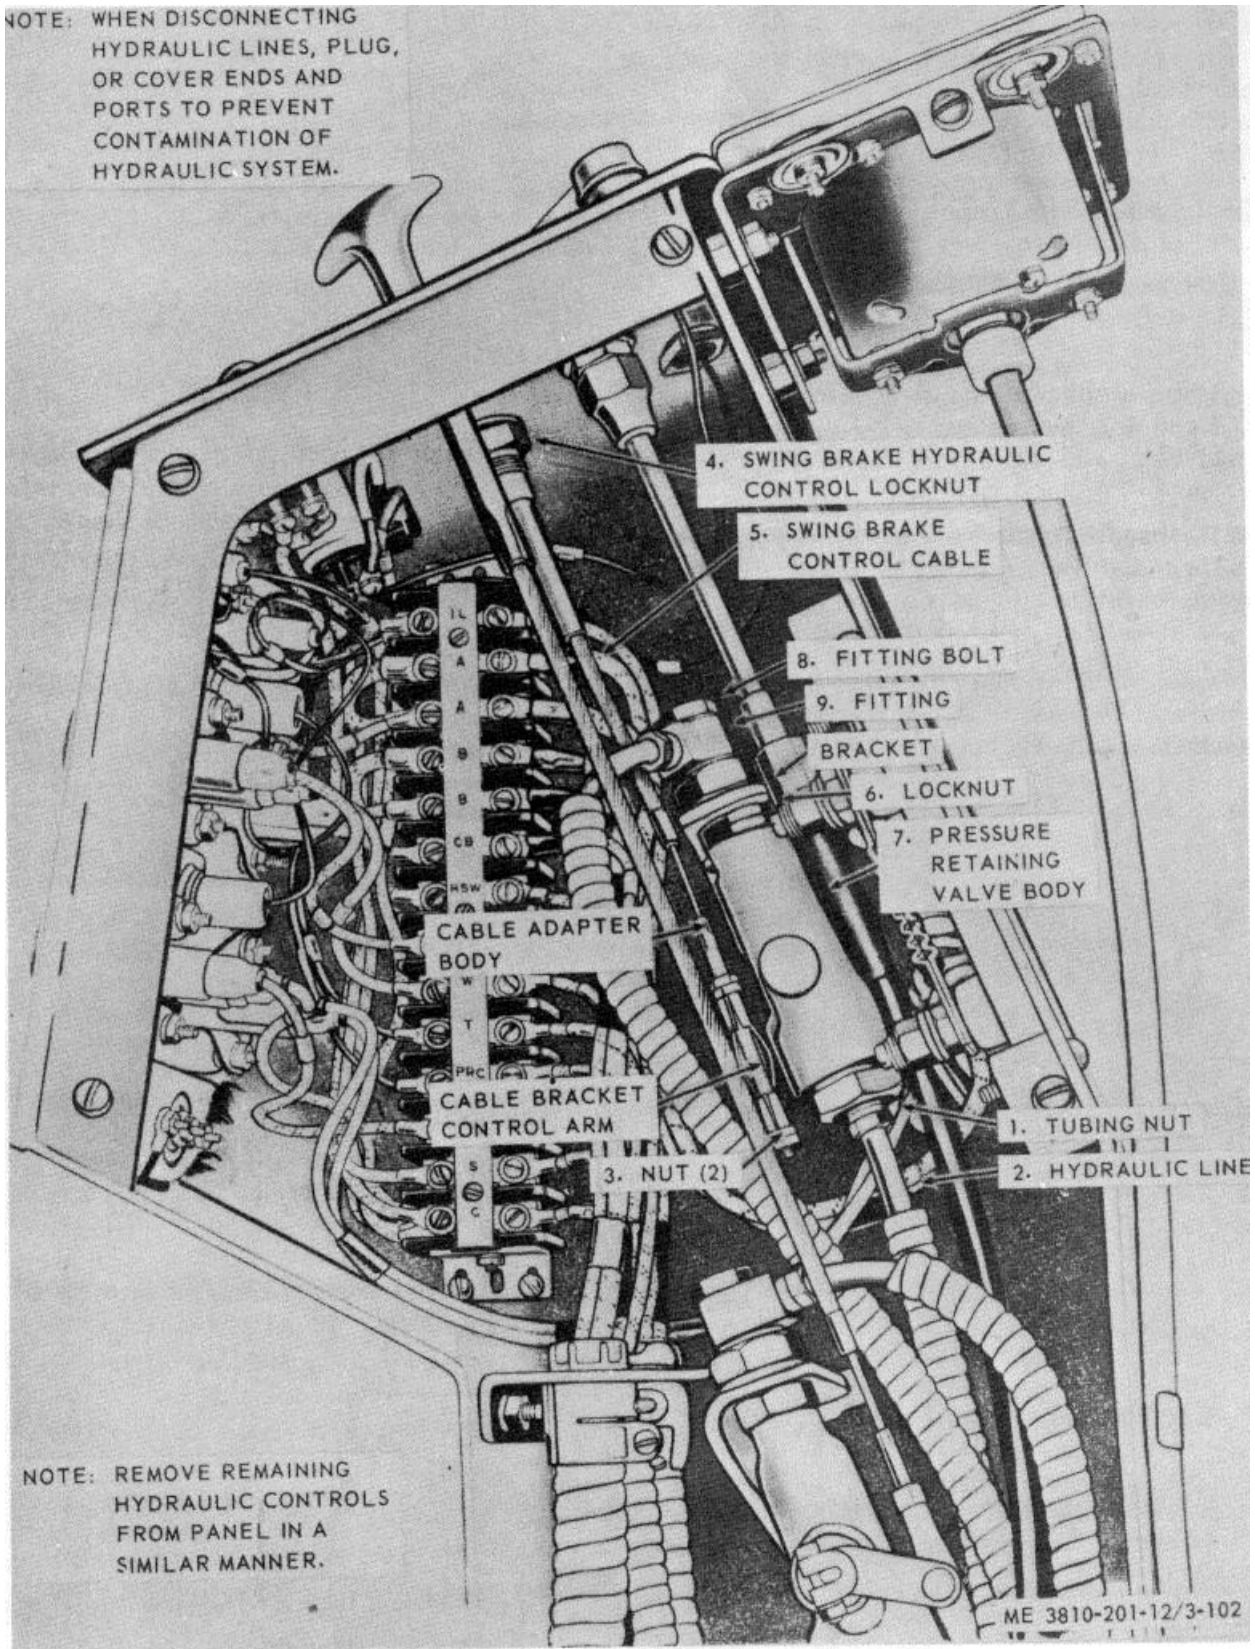


Figure 3-102. Swing brake hydraulic control, removal and installation.

(2) Visually inspect all parts for excessive wear, burs, stripped threads, or other damage. Inspect push-pull controls for freedom of movement.

(3) Repair by replacing defective components or mounting hardware.

c. Swing Brake Linkage Adjustment.

(1) Refer to figure 3-103, adjust locknuts on either side of point A so that lever touches edge of slot in the side stand.

(2) Lay a straight edge from point A to point B. Point C should be 5/8 inch nearer brake drum. This will keep linkage from "togglng in". When togglng in does occur, the brake will not release when pressure on hydraulic cylinder is released.

(3) Adjust two locknuts so that alinement of points A, B, and C are maintained as described in (1) and (2) above.

(4) Adjust two locknuts on eyebolt at brake release spring until there is just enough tension on spring to release brake when hydraulic pressure is released.

3-123. Hydraulic Clutch and Brake Cylinders and Linkage

a. Removal and Installation.

(1) Position container to receive fluid, then disconnect hydraulic line at clutch cylinders (fig. 3-104) or brake cylinder (fig. 3-105), and plug or cover end of line and port of cylinder to prevent contamination of hydraulic system.


(2) Refer to figure 3-104 and remove clutch cylinder, or figure 3-105 to remove brake cylinder.

(3) Remove remaining cylinders in a similar manner.

(4) Install in reverse order.

b. Cleaning, Inspection, and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

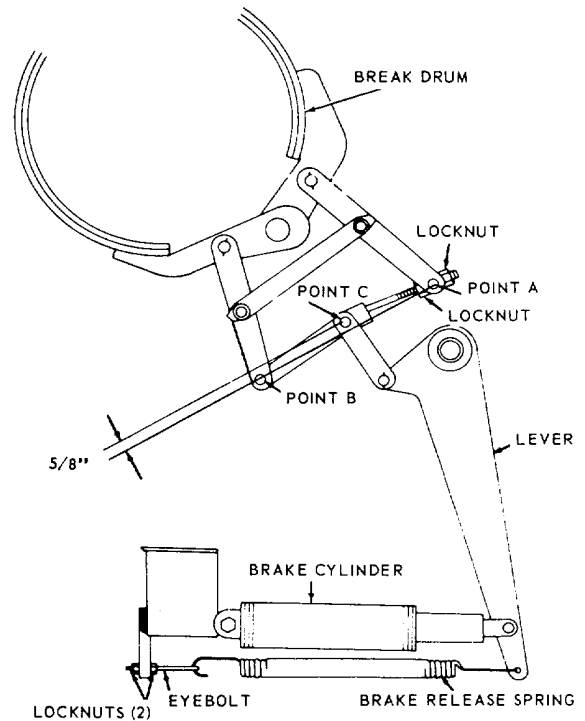


NOTE: HARD OPERATION WILL RESULT IF THERE IS TOO MUCH TENSION ON BRAKE RELEASE SPRING.

ME 3810-201-12/3-103

Figure 3-103. Swing brake linkage adjustment.


(2) Visually inspect linkage and mounting hardware for distortion, wear, burs, or stripped threads. Inspect hydraulic cylinder for signs of leakage or deterioration of end cups.

(3) Repair by replacing defective linkage parts, mounting hardware, and a leaking or defective hydraulic cylinder.

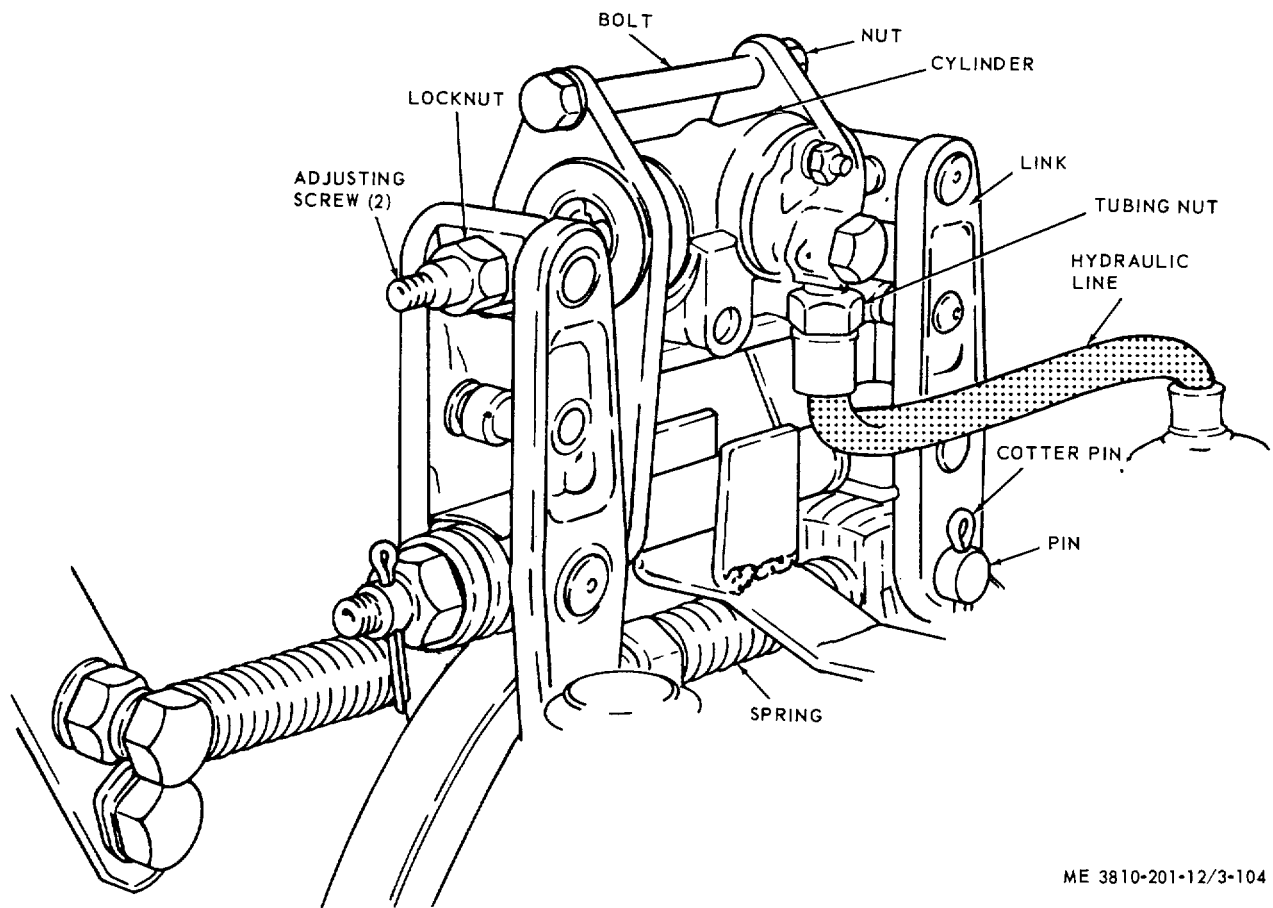

ME 3810-201-12/3-104

Figure 3-104. Hydraulic clutch cylinder, removal and installation.

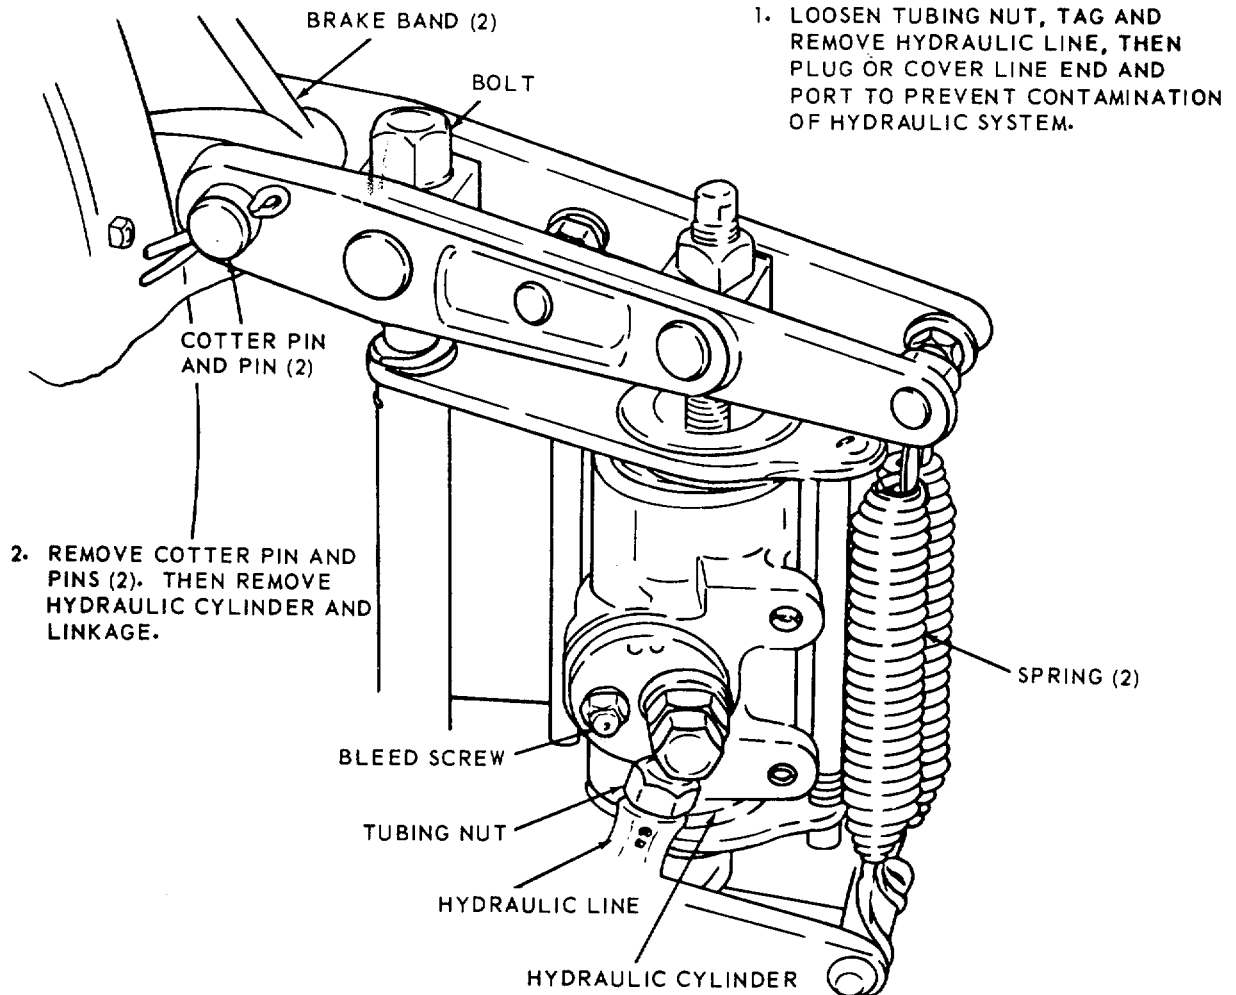

ME 3810-201-12 /3-105

Figure 3-105. Boom hoist hydraulic brake cylinder, removal and installation.

Section XVIII. ROTATING BASE (REVOLVING FRAME)

3-124. General

The rotating base (revolving frame) of the crane-shovel unit is the mounting base for all operating components including front end attachments, engine, hoisting mechanism, and cab. The revolving frame derives swing power through a vertical swing shaft and revolves on rollers traveling in the roller circle. Front and rear hook rollers are provided to reduce strain on center gudgeon, while 8,250 pounds of counter weight slugs in box plus the counterweight extension, provides stability during swinging operation. Keep the hook rollers in proper adjustment at all times (para 3-39).

Warning:

Never travel crane-shovel basic unit (less front end attachment) over rough terrain with counterweight extension installed. The unit could tip over backward, causing damage to the unit, and possible injury to the operator.

3-125. Front Hook Rollers

a. Removal and Installation.

- (1) Lower boom to approximate horizontal position.

1. REMOVE TWO CAPSCREW AND LOCKWASHER SECURING KEEPER PLATE, THEN REMOVE KEEPER PLATE

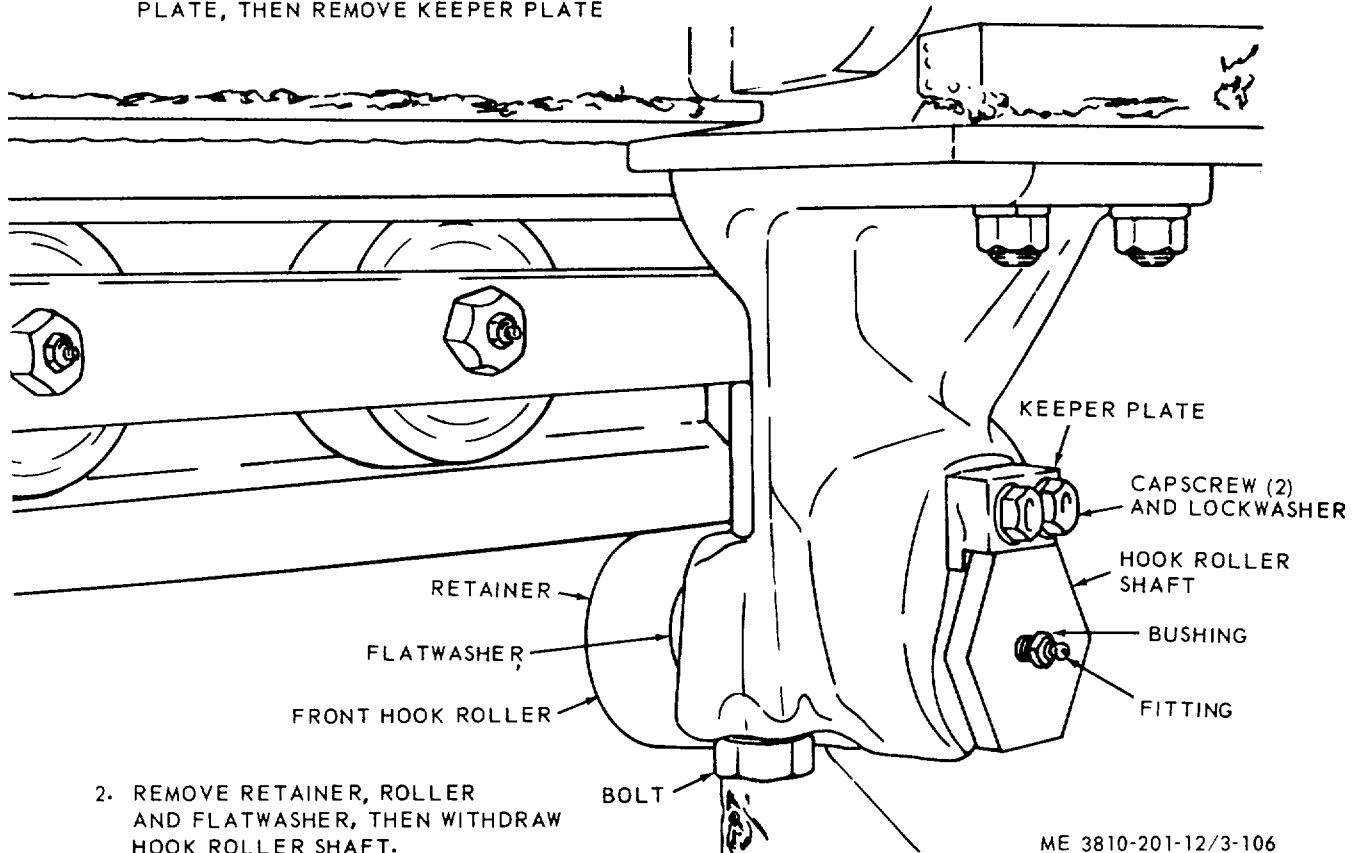


Figure 3-106. Front hook rollers, removal and installation.

- (2) Remove two capscrews, lockwashers, and keeper plate from bracket (fig. 3-106).

- (3) Drive hook roller shaft backward slightly to make locking accessible, remove locking, then pull hook roller shaft forward out of mounting bracket and remove hook roller.

- (4) Remove remaining hook roller in a similar manner.

- (5) Install in reverse order.

b. Cleaning, Inspection, and Repair.

- (1) Clean all parts in an approved cleaning solvent and dry thoroughly.

- (2) Visually inspect mounting hardware for burrs or stripped threads, inspect eccentric shaft (pins) or rollers for signs of excessive wear, grooves, chips, or cracks.

- (3) Repair by replacing damaged, defective, or worn parts.

c. Adjustment. Adjust hook rollers as directed in paragraph 3-39.

3-126. Rear Hook Rollers

a. Removal and Installation.

- (1) Lower boom until point is slightly below the horizontal with weight of boom resting on cribbing similar to that shown in figure 2-6.

- (2) Support the swivel arm (fig. 3-107) with cribbing or a jack, remove two capscrews, lockwashers, and keeper plate, use wedges on cribbing, or the jack to take arm weight off eccentric pin, then remove eccentric pin.

- (3) Remove four capscrews, lockwashers, and two keeper plates, push roller pins inward slightly to make retainer accessible, remove retainer, then pull roller pins outward and remove rollers and pins. Remove lubrication fittings and bushings from the two roller pins.

- (4) Remove remaining rear hook roller in a similar manner.

- (5) Install in reverse order.

a. Cleaning, Inspection, and Repair.

- (1) Clean all parts in an approved cleaning solvent and dry thoroughly.

- (2) Visually inspect pins for grooves, cracks, chips or other damage. Inspect mounting hardware for burrs or stripped threads.

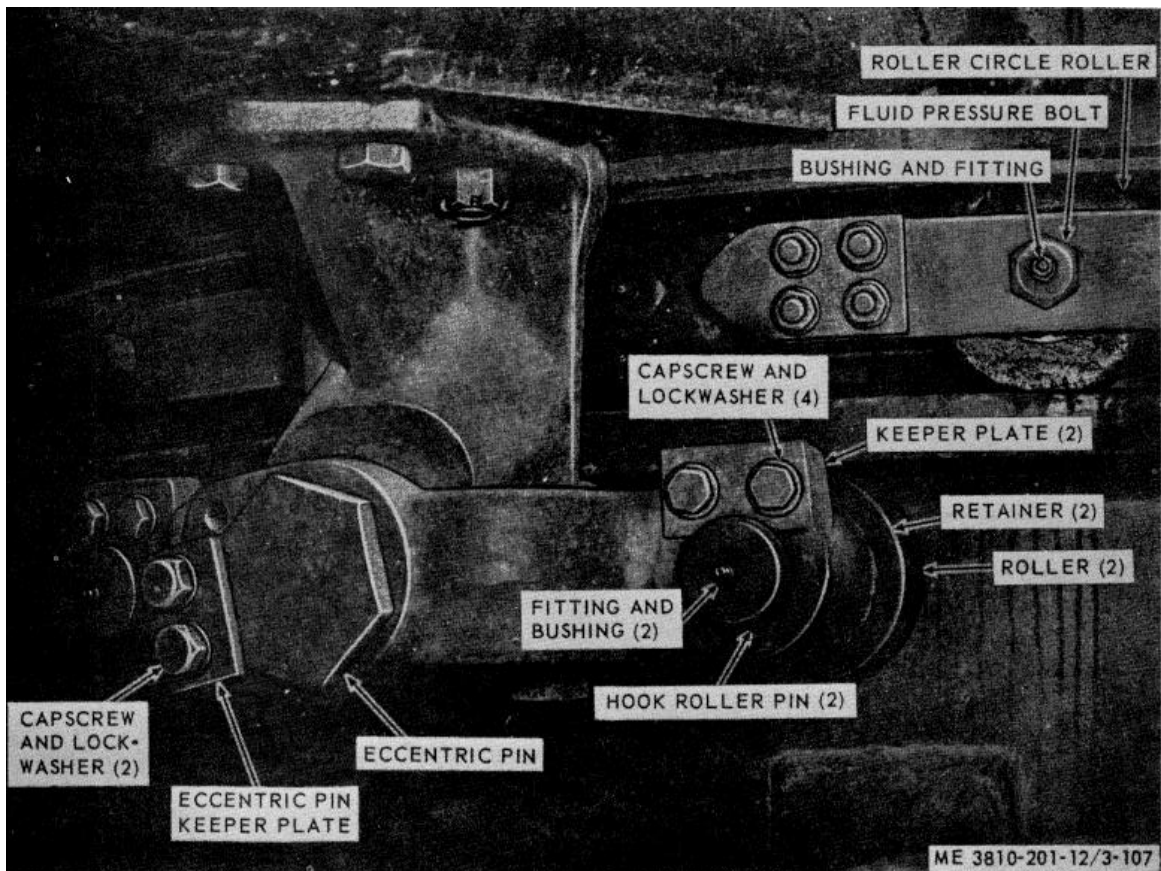


Figure 3-107. Rear hook rollers, removal and installation.

(3) Repair by replacing damaged, defective, or worn parts.

c. *Adjustment.* Adjust rear hook rollers as directed in paragraph 3-39.

3-127. Roller Circle Rollers

a. Removal and Installation.

Note

To remove a damaged roller, always move revolving frame left or right until damaged roller is on high side of frame, opposite the opening in frame. This will take most of the frame weight off damaged roller and make it easier to withdraw the fluid pressure bolt from roller segment shaft.

(1) Remove nut and lockwasher from fluid pressure bolt (fig. 3-107), then withdraw bolt from segment roller shaft, and remove roller from roller circle frame.

(2) Remove lubrication fitting and bushing from fluid pressure bolt.

(3) Remove shaft from segment roller.

(4) Install in reverse order.

(5) Remove or install remaining rollers in a similar manner.

b. Cleansing, Inspection, and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect mounting hardware for burs, stripped threads or excessive wear. Inspect roller for chipping, cracks, breaks, or flat spots (wear).

(3) Repair by replacing defective hardware or roller.

3-128. Jackshaft Clutch Shoes

a. Removal and Installation.


(1) Relieve tension on three shoe return springs (fig. 3-108), by loosening nuts on studs, then remove springs from stud and clutch shoe.

(2) Loosen locknut and adjusting bolt until the adjusting assembly can be removed from between the clutch shoes.

(3) Loosen three locknuts on three setscrews and back setscrews out of brackets enough to free shoes.

(4) Remove cap screw, lockwasher, and sleeve from eccentric, then lift both clutch shoes out of drum.

a. Cleaning, Inspection, and Repair.

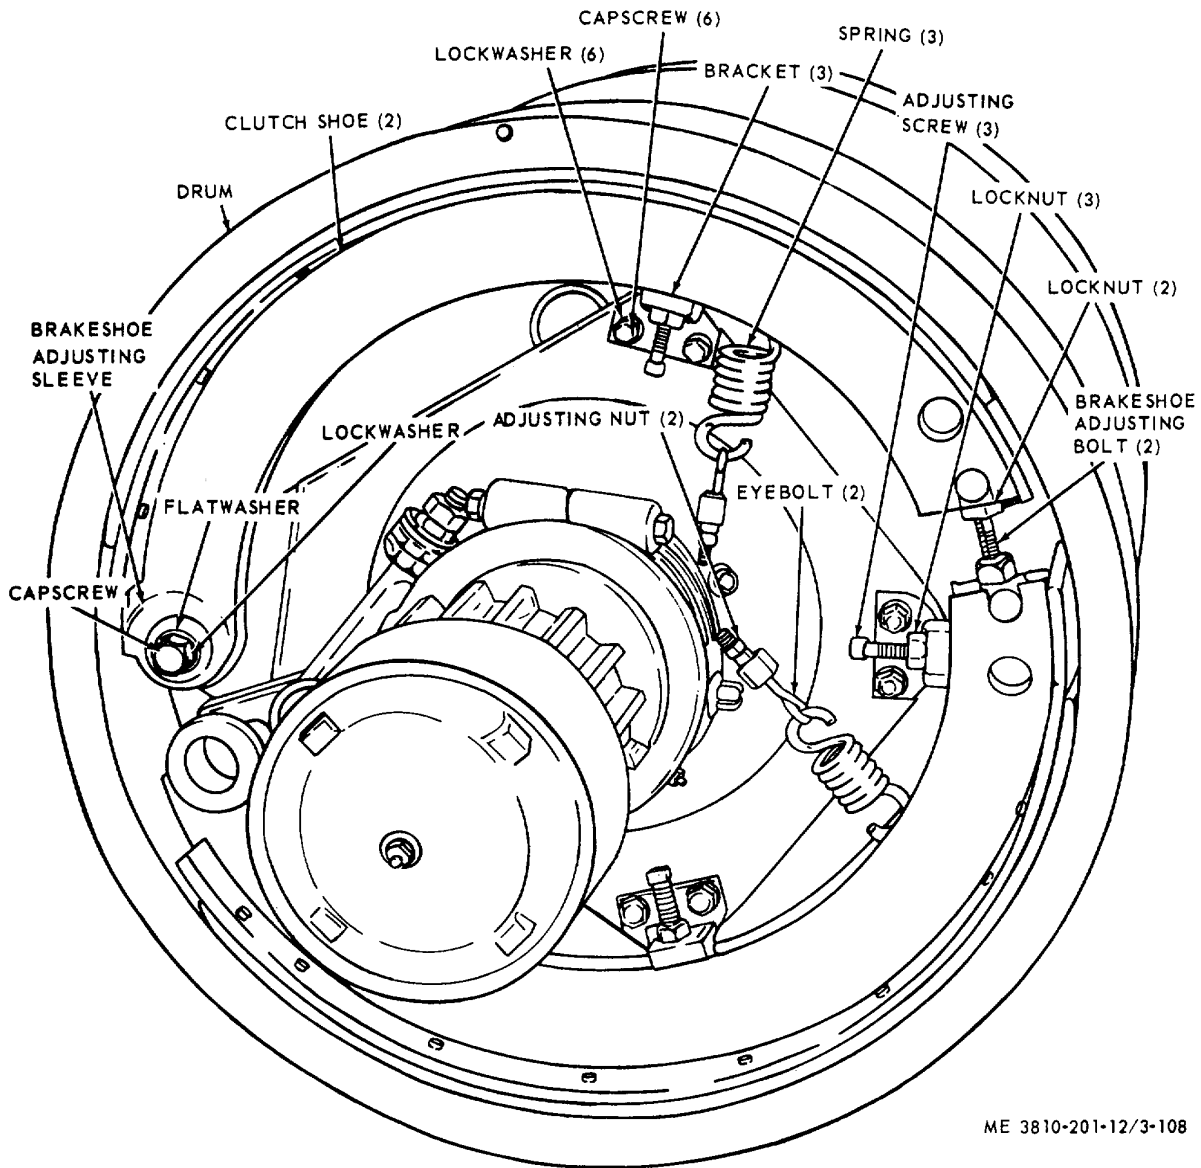

ME 3810-201-12/3-108

Figure 3-108. Jackshaft clutch shoes, removal and installation.

(1) Clean all metal parts except clutch shoe in an approved cleaning solvent and dry thoroughly. Blow dust off clutch shoe lining and shoe with low pressure compressed air, or wipe with dry clean cloth.

(2) Visually inspect clutch shoe lining for wear, mounting hardware for burrs or stripped threads, and test the strength of springs.

(3) Repair by replacing weak or damaged springs or defective mounting hardware. Replace clutch shoe when lining is worn to within 50 percent of original thickness.

Note

Clutch shoes may be switched, placing the "dead" shoe in "live

position, since dead shoe receives very little wear.

c. *Adjustment.* Refer to paragraph 3-29 and adjust swing (jackshaft) clutch shoes.

3-129. Main Hoist Shaft Clutch Shoes

a. *Removal and Installation.*

(1) Remove auxiliary clutch hydraulic brake cylinder (para 3-123).

(2) Refer to figure 3-109 and remove main hoist shaft clutch shoes.

(3) Remove remaining clutch shoes in a similar manner.

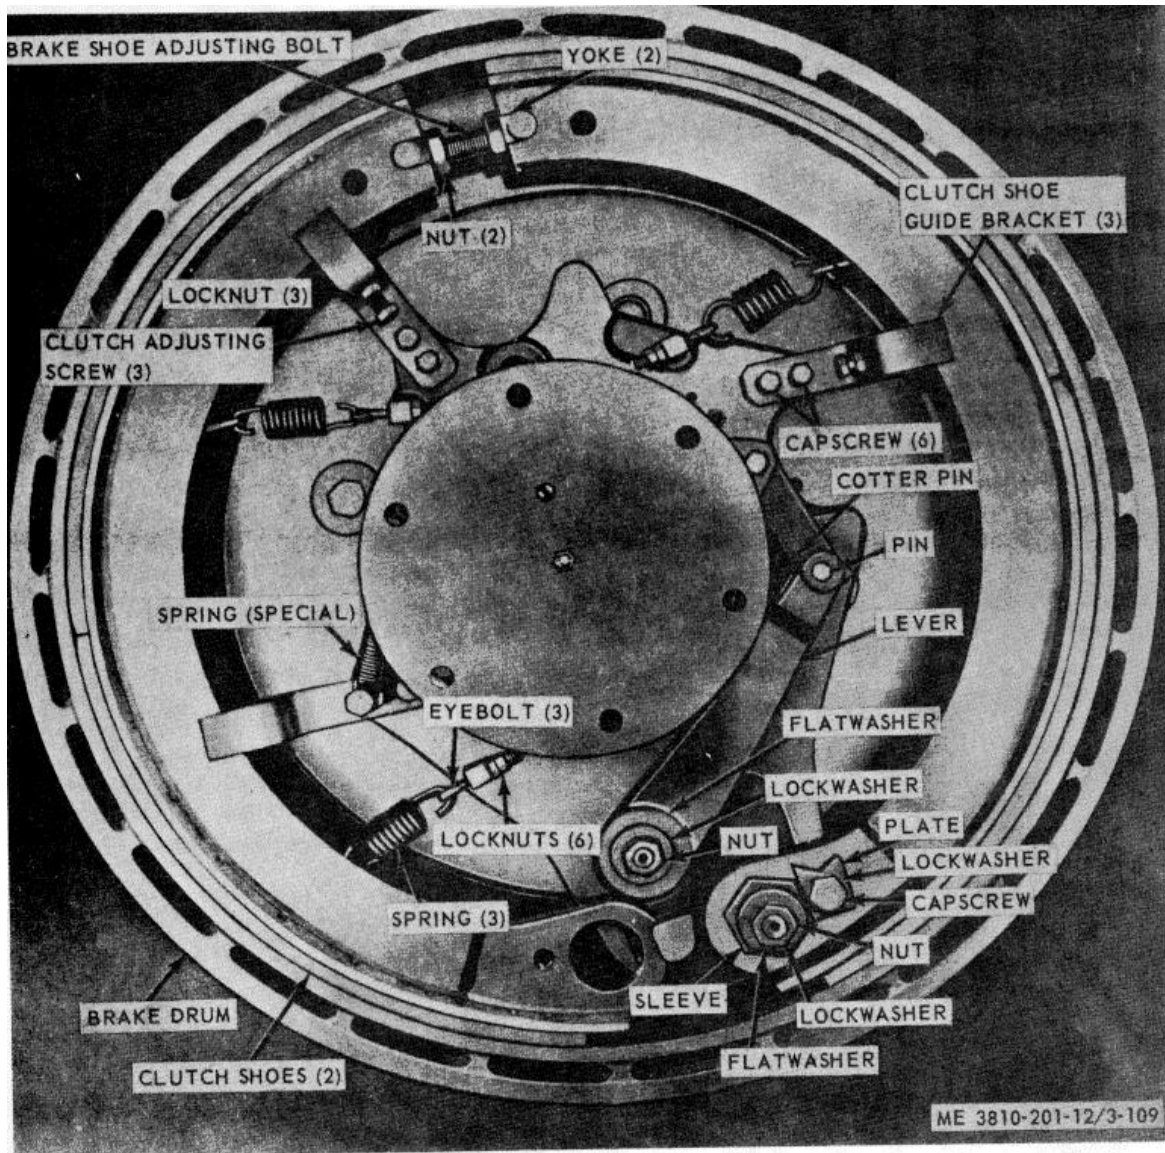


Figure 3-109. Main hoist clutch shoes, removal and installation.

(4) Install in reverse order.

b. *Cleaning, Inspection, and Repair.* Clean, inspect and repair clutch shoes in manner described in paragraph 3-128b above.

c. *Adjustment.* Refer to paragraph 3-32 for adjustment procedures.

3-130. Planetary Clutch Band and Brake Bands (Main Shaft)

a. *General.* For shovel operation, the planetary clutch band must be positioned with dead end above the hydraulic cylinder. This is accomplished by use of a longer link and bracket (fig. 3-110), which is removed and installed in a manner similar to that described in b, below.

b. *Removal and Installation.*

(1) Remove hydraulic clutch cylinder (para 3-123).

(2) Refer to figure 3-110 and remove band from support bracket.


(3) Remove the remaining bands in a similar manner.

(4) Install in reverse order.


c. *Cleaning, Inspection, and Repair.*

(1) Clean all metal parts in an approved cleaning solvent and dry thoroughly. Clean clutch or brake band by wiping with a clean rag, or use of compressed air.

(2) Visually inspect clutch or brake band for cracks, breaks, worn, or damaged condition.

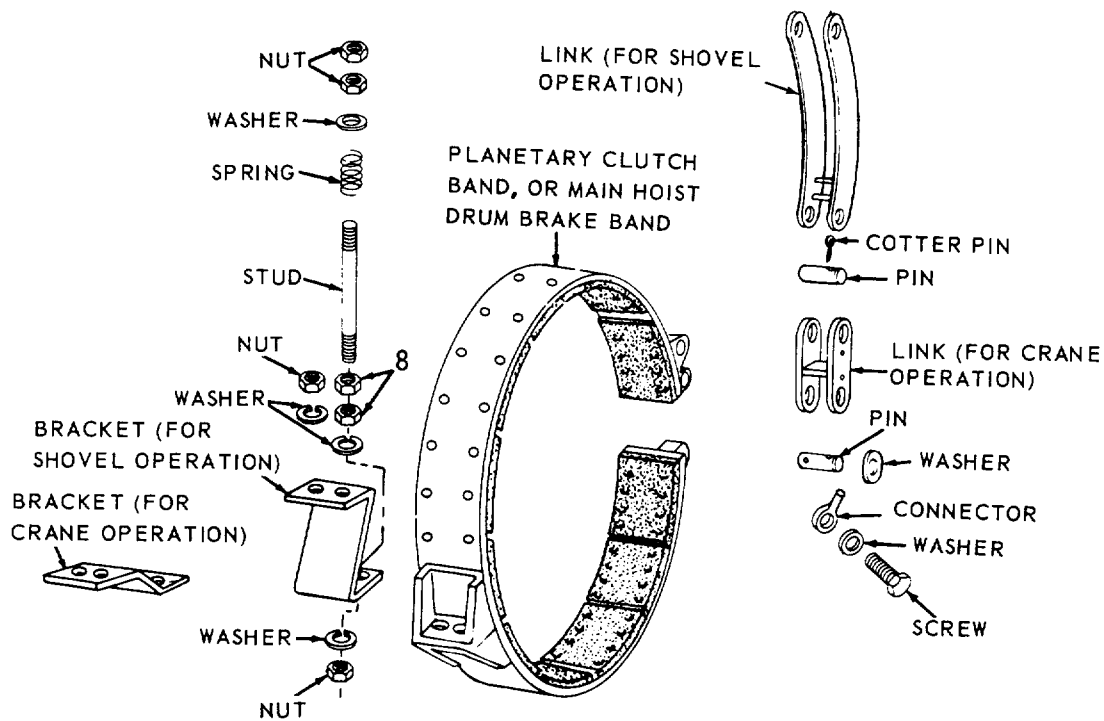

NOTE: REMOVE REMAINING BANDS IN A SIMILAR MANNER.

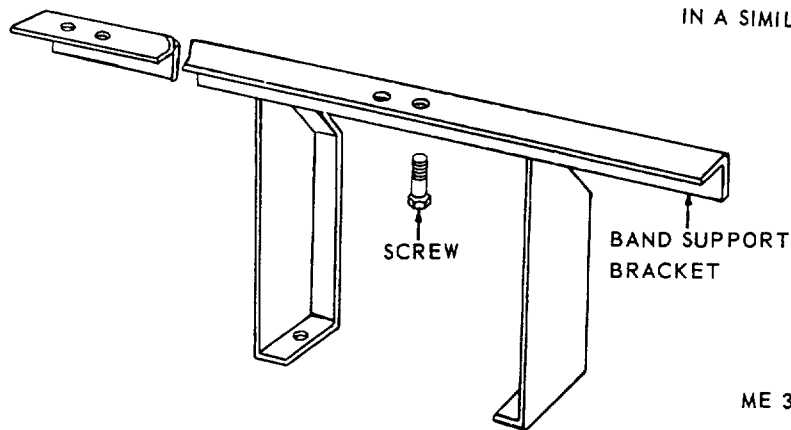

ME 3810-201-12/3-110

Figure 3-110. Planetary clutch band and brake band, removal and installation.

Inspect springs for deformation, strength, or other defect. Inspect mounting hardware for burs, wear, stripped threads, or elongated holes.

(3) Repair by replacing defective mounting hardware, defective springs, and clutch or brake bands when lining is worn to within 1/16 inch of rivet heads.

3-131. Drum Lagging and Sleeve Nut (Shear Washer)

a. Removal and Installation.

(1) Remove cable from drum (para 3-43).

(2) Remove the four capscrews (fig. 3-111) and washers from lagging.


(3) Refer to figure 3-112 and remove sleeve nut (shear washer) by use of special tool (table 3-1).

(4) Secure lifting device to lagging halves, remove the two nuts, washers and bolts that hold halves together, then lift lagging off drum.

(5) Remove remaining laggings in a similar manner.

(6) Install in reverse order.

a. Cleaning, Inspection, and Repair

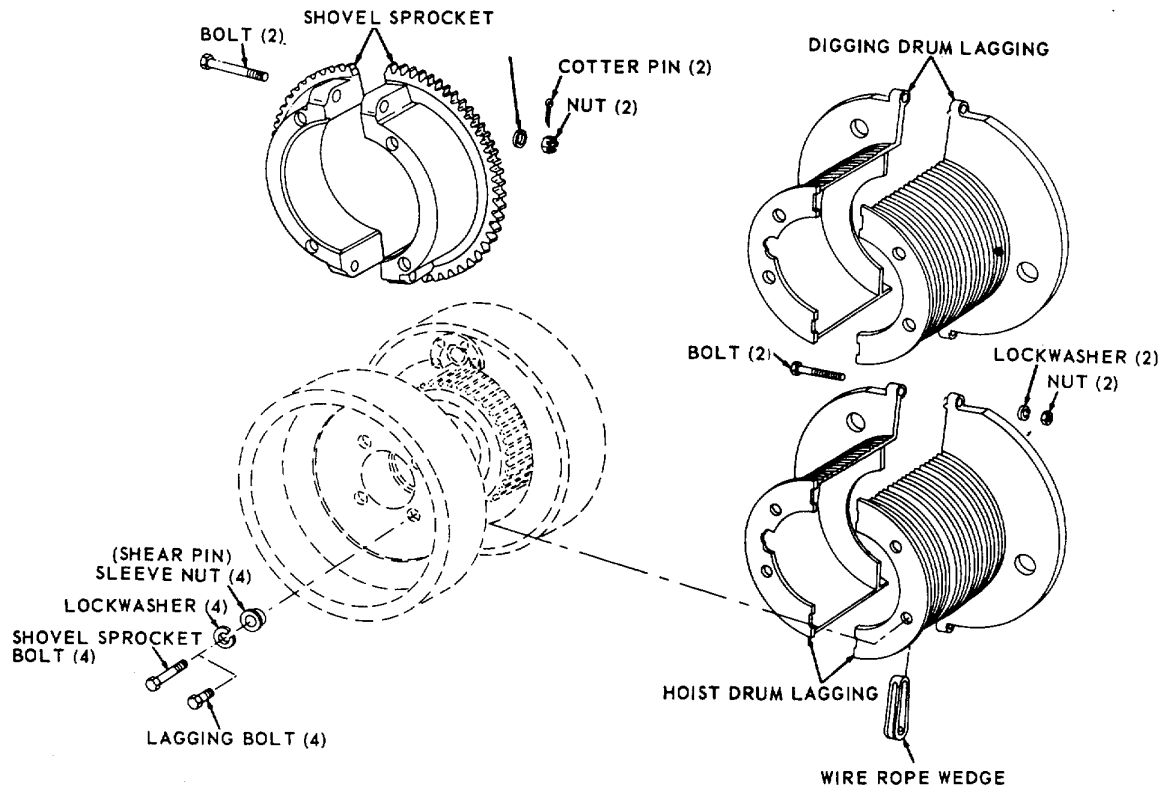

ME 3810-201-12/3-111

Figure 3-111. Drum lagging, removal and installation.



Figure 3-112. Sleeve nut, removal and installation.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect mounting hardware for worn, burred, or stripped thread condition. Inspect lagging for wear, cracks, or other damage.

(3) Repair by replacing defective mounting hardware, and replacement of damaged or defective lagging.

Note. When lagging is removed for conversion to another front end attachment, the removed lagging must be prepared for storage.

c. *Lubrication.* Refer to figure 3-113, lubrication fitting arrangement.

3-132. Shovel Sprocket and Planetary Pinion Gear

a. *General.* The shovel front end attachment requires installation of planetary pinion gear and shovel sprocket, which must be removed when converting to any other front end attachment.

b. *Removal and Installation.*

(1) Remove revolving frame crowd and retract chain (para 4-3).

(2) Refer to view A of figure 3-114 and remove shovel sprocket.

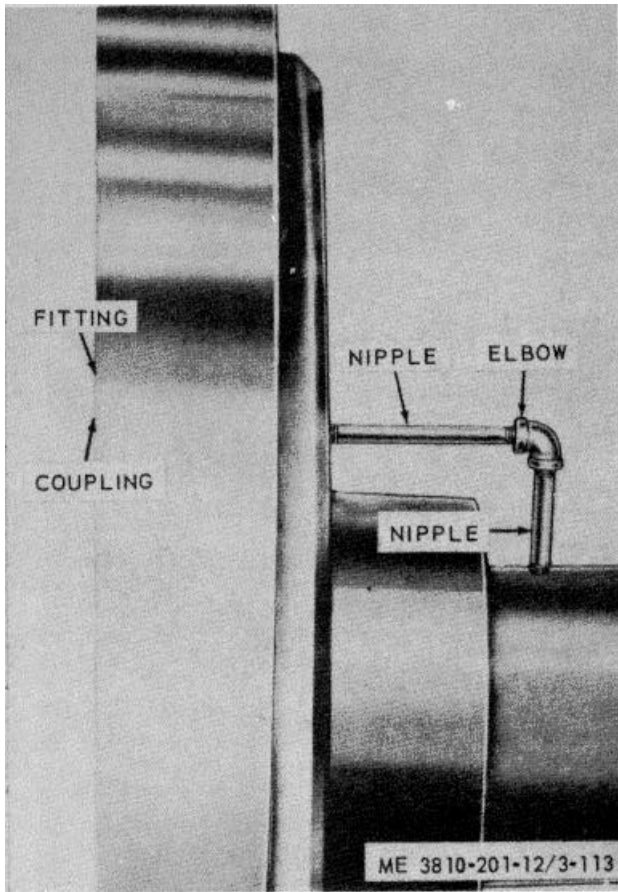


Figure 3-113. Lubricating fitting arrangement for lagging.

(3) Refer to view B of figure 3-114 and remove planetary pinion gear.

Note.

Lubrication arrangement (view A, fig. 3-114) for sprocket installation must be modified to that shown in figure 3-113 when other front end attachments are installed.

(4) Install in reverse order.

c. Cleaning, Inspection, and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect mounting hardware for burs, stripped threads or other damage. Inspect sprocket or pinion for cracks, breaks, excessive wear, or other damage.

(3) Repair by replacing damaged or defective mounting, hardware, sprocket, or planetary pinion gear.

3-133. Gear and Dirt Guards or Shields

a. Swing Brake Dirt Guard Removal and Installation. Refer to figure 3-115 and remove swing brake dirt guard. Install in reverse order.

b. Dragline Dirt Guard, Removal and Installation. Refer to figure 3-116 and remove dragline dirt guard. Install in reverse order.

c. Hoist Gear Guard, Removal and Installation. Refer to figure 3-117 and remove hoist gear guard. Install in reverse order.

d. Vertical Propel Shaft Guard, Removal and Installation. Refer to figure 3-118 and remove vertical propel shaft guard. Install in reverse order.

e. Planetary Gear Guard, Removal and Installation. Refer to figure 3-118 and remove planetary gear guard. Install in reverse order.

f. Horizontal Gear Train Corer, Removal and Installation. Refer to figure 3-118 and remove horizontal gear train cover. Install in reverse order.

g. Intermediate Hoist and Jackshaft Cover, Removal and Installation. Refer to figure 3-119 and remove intermediate hoist and jackshaft cover. Install in reverse order.

h. Cleaning, Inspection, and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect guards and covers for cracks, breaks, or dents. Inspect mounting hardware for burs, stripped threads or other damage.

(3) Repair by welding cracks or breaks, straightening dents, or replacing defective hardware, guards, or covers.

3-134. Vertical Intermediate Shaft Adjustment

a. Remove cotterpin (fig. 3-120) and lockpin from bearing retainer.

b. Turn bearing retainer clockwise until all backlash is removed between the bevel pinions and the bevel gear.

c. Back off bearing retainer three holes, then secure retainer with lockpin and cotterpin.

3-135. Swing Brake Band

a. Removal and Installation. Refer to figure 3-121 and remove swing brake band. Install in reverse order.

b. Cleaning, Inspection, and Repair.

(1) Clean all metal parts in an approved cleaning solvent and dry thoroughly. Wipe brake lining with a clean cloth, or blow clean with compressed air.

(2) Visually inspect all parts for damage, defect, or excessive wear.

(3) Repair by replacing damaged, or defective parts. Replace brake band when lining is worn to within 1/16 inch of rivet heads.

c. Adjustment. Adjust swing brake linkage as shown on figure 3-103. Adjust swing brake (para 3-33).

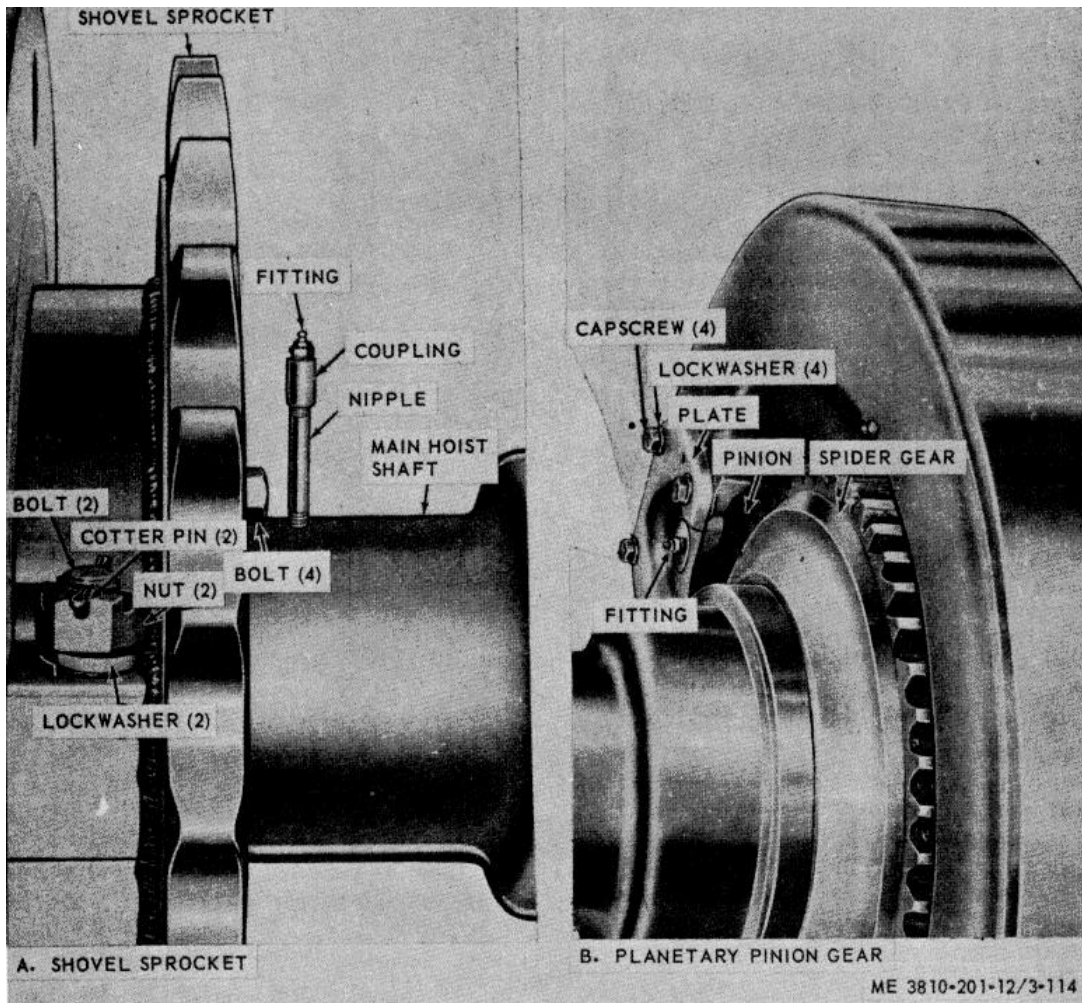


Figure 3-114. Shovel sprocket and planetary pinion gear, removal and installation.

3-136. Boom Hoist Planetary Brake, Hoist Brake, and Boom Hoist Holding Pawl

a. Planetary or Hoist Brake Band Removal and Installation.

(1) Loosen two tubing nuts (fig. 3-122) and remove hydraulic line.

(2) Remove two cotterpins and pins from hydraulic cylinder linkage then remove cylinder (para 3-123).

(3) Remove two cotterpins and pins securing brake band to link, (fig. 3-122) then remove brake band.

(4) Remove remaining cylinder and band in a similar manner.

(5) Install in reverse order.

b. Boom Hoist Holding Pawl, Removal and Installation.

(1) Refer to figure 3-123 and remove boom hoist holding pawl.

(2) Install in reverse order.

c. Cleaning, Inspection, and Repair.

(1) Clean all metal parts in an approved cleaning solvent and dry thoroughly. Clean brake band lining with a cloth, or blow dry with compressed air.

(2) Visually inspect all parts for damage or defect, and brake lining for excessive wear.

(3) Repair by replacing brake band when lining is worn to within 1/16 inch of rivet heads, and replacing all damaged or defective mounting hardware or parts as required.

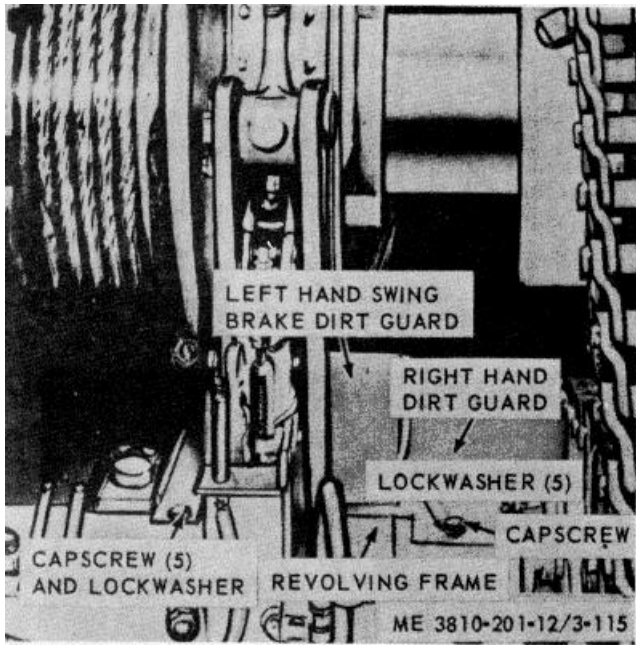


Figure 3-115. Swing brake dirt guard, removal and installation.

3-137. Propel Brake Band and Linkage

a. *Removal and Installation.* Refer to figure 3-124 and remove propel brake band and linkage. Install in reverse order.

b. *Cleaning, Inspection, and Repair.* Clean, adjust, and repair in manner similar to that described in paragraph 3-130.

c. *Adjustment.* Refer to paragraph 3-33 for adjustment instructions.

3-138. Propel and Steering Mechanism Adjustment

a. *Steering Wheel Adjustment.* Refer to paragraph 3-139 and adjust the steering wheel.

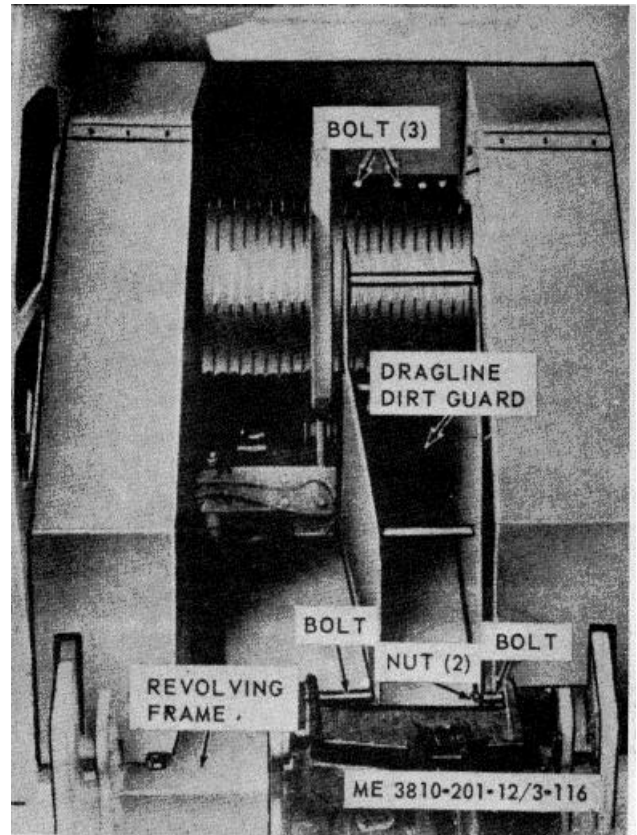


Figure 3-116. Dragline dirt guard, removal and installation.

a. *Steering Linkage and Propel Brake Adjustment.* Refer to paragraph 3-33 and adjust steering linkage and propel brakes.

3-139. Steering Wheel Adjustment

Refer to figure 3-125 and adjust the steering wheel.

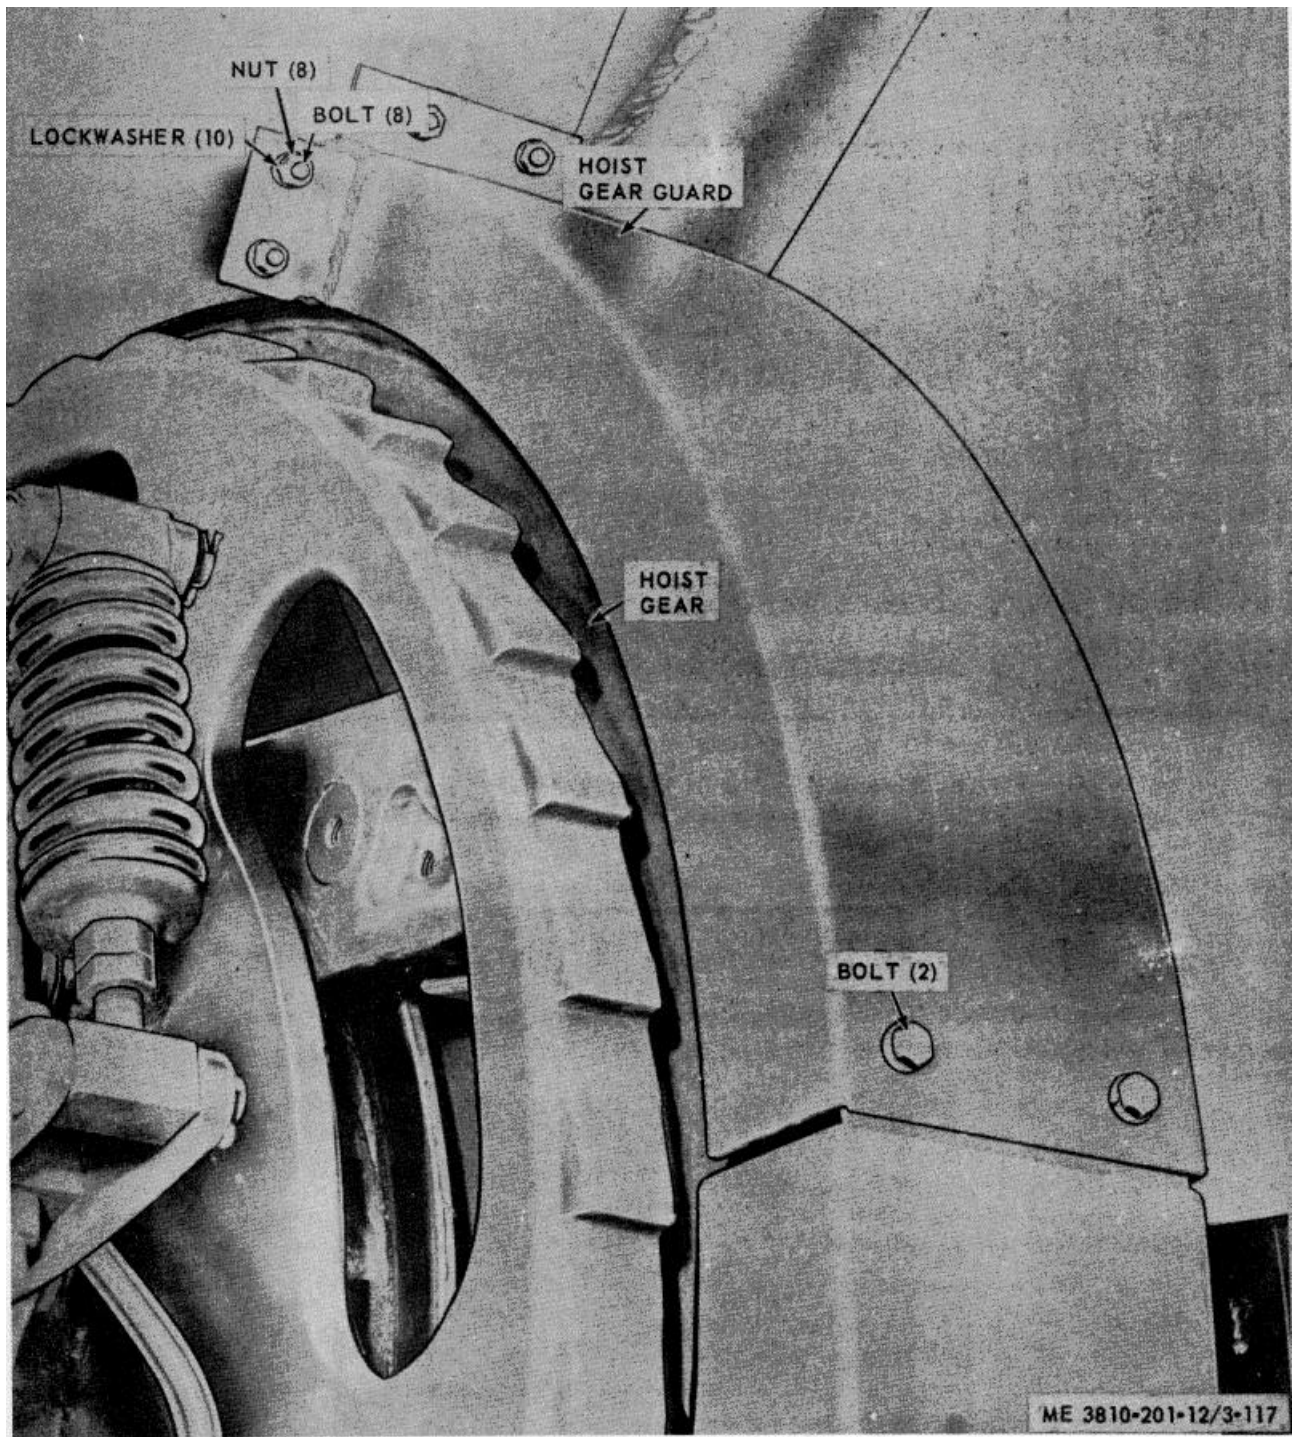


Figure 3-117. Hoist gear guard, removal and installation.

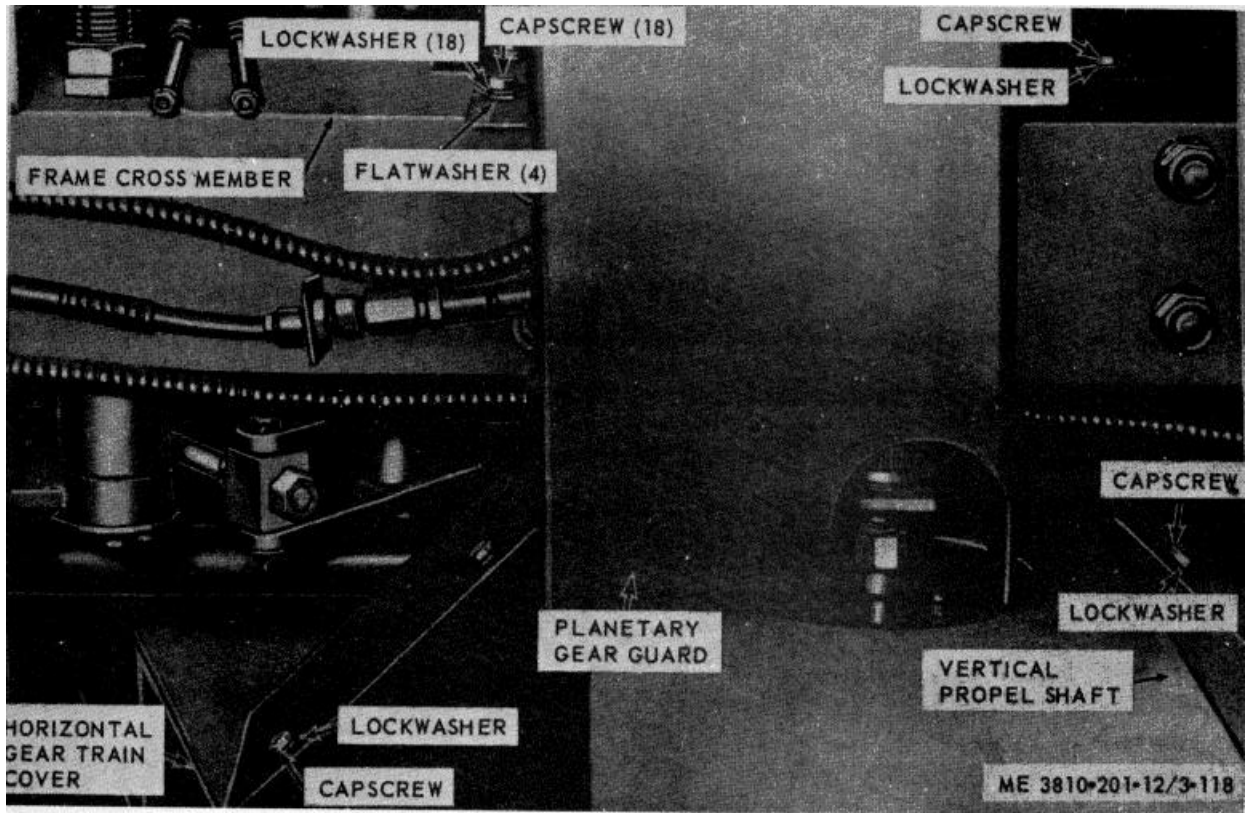


Figure 3-118. Vertical propel shaft guard, planetary gear guard, and horizontal gear train cover, removal and installation.

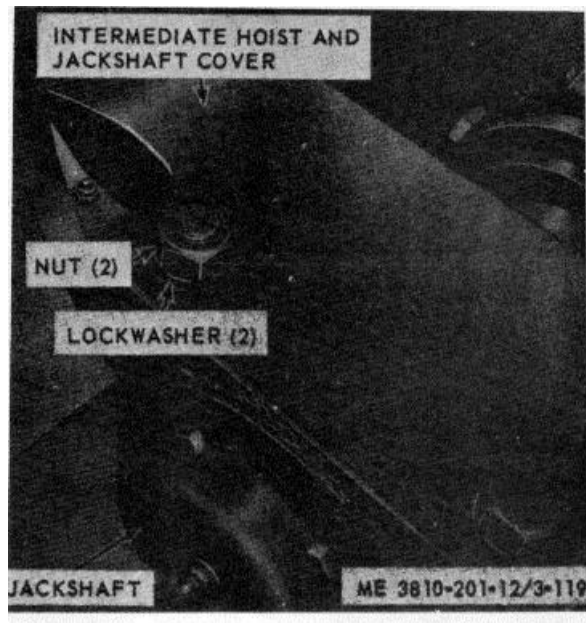


Figure 3-119. Intermediate hoist and jackshaft cover, removal and installation.

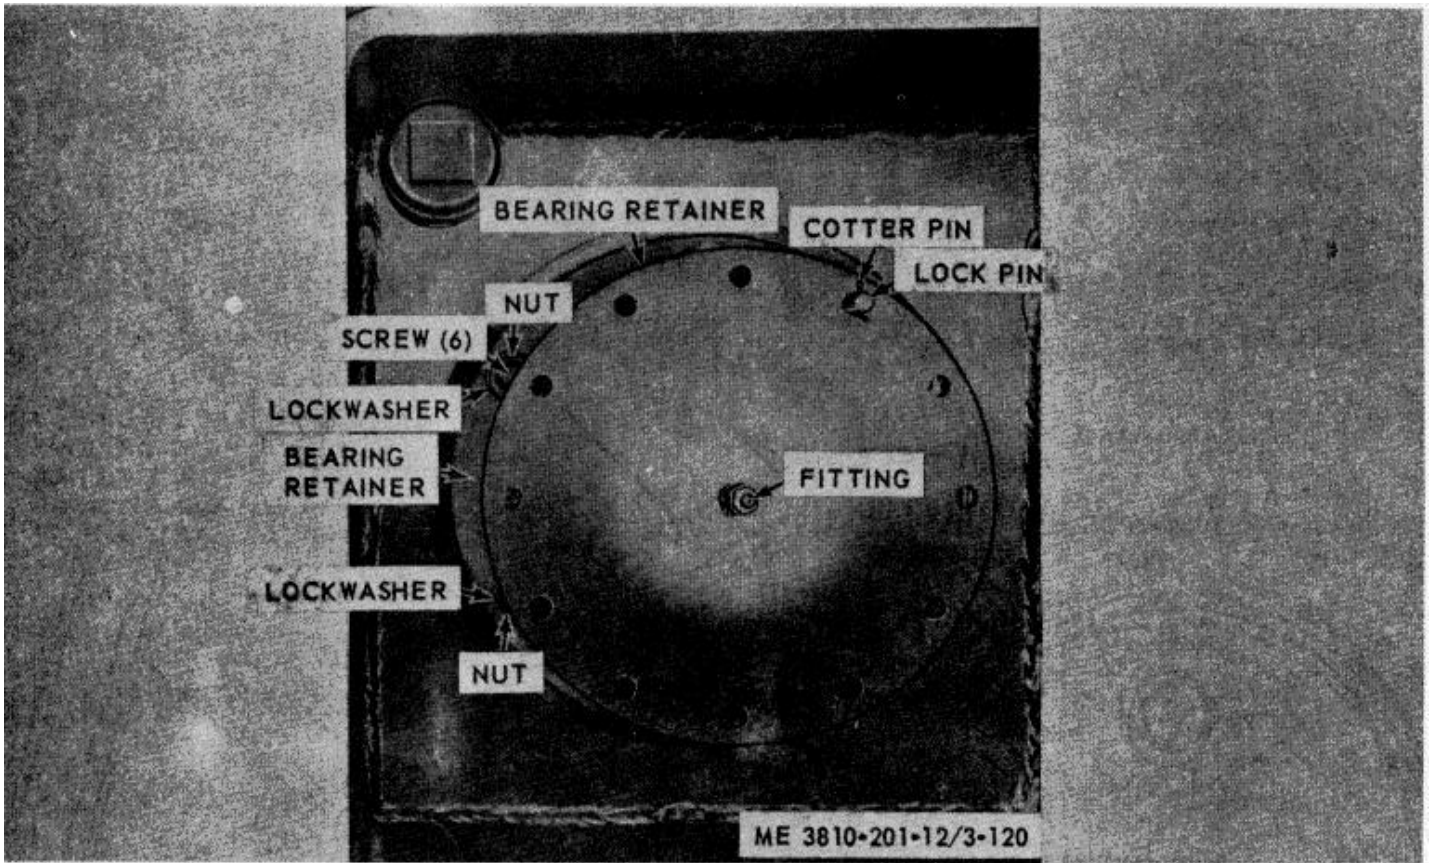


Figure 3-120. Vertical intermediate shaft adjustment.

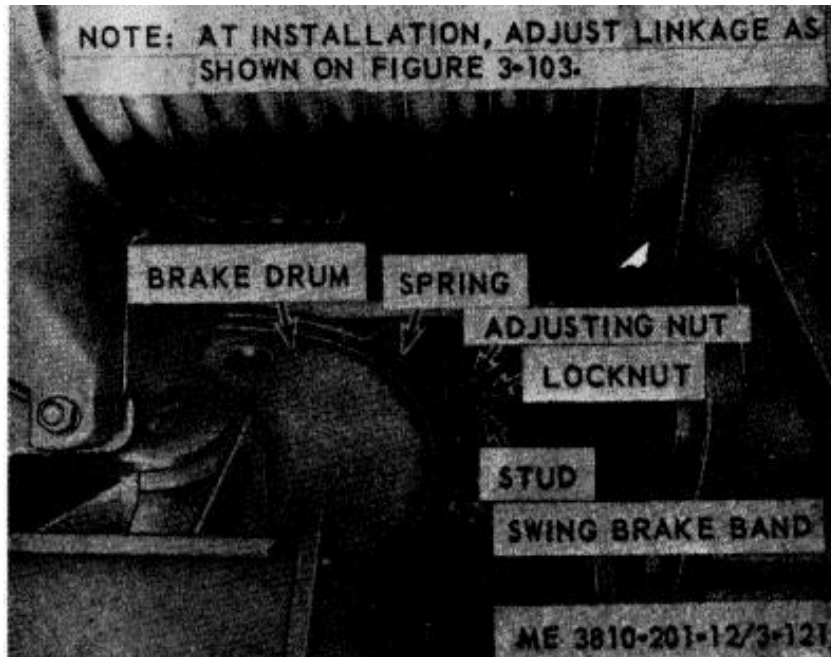


Figure 3-121. Swing brake band, removal and installation.

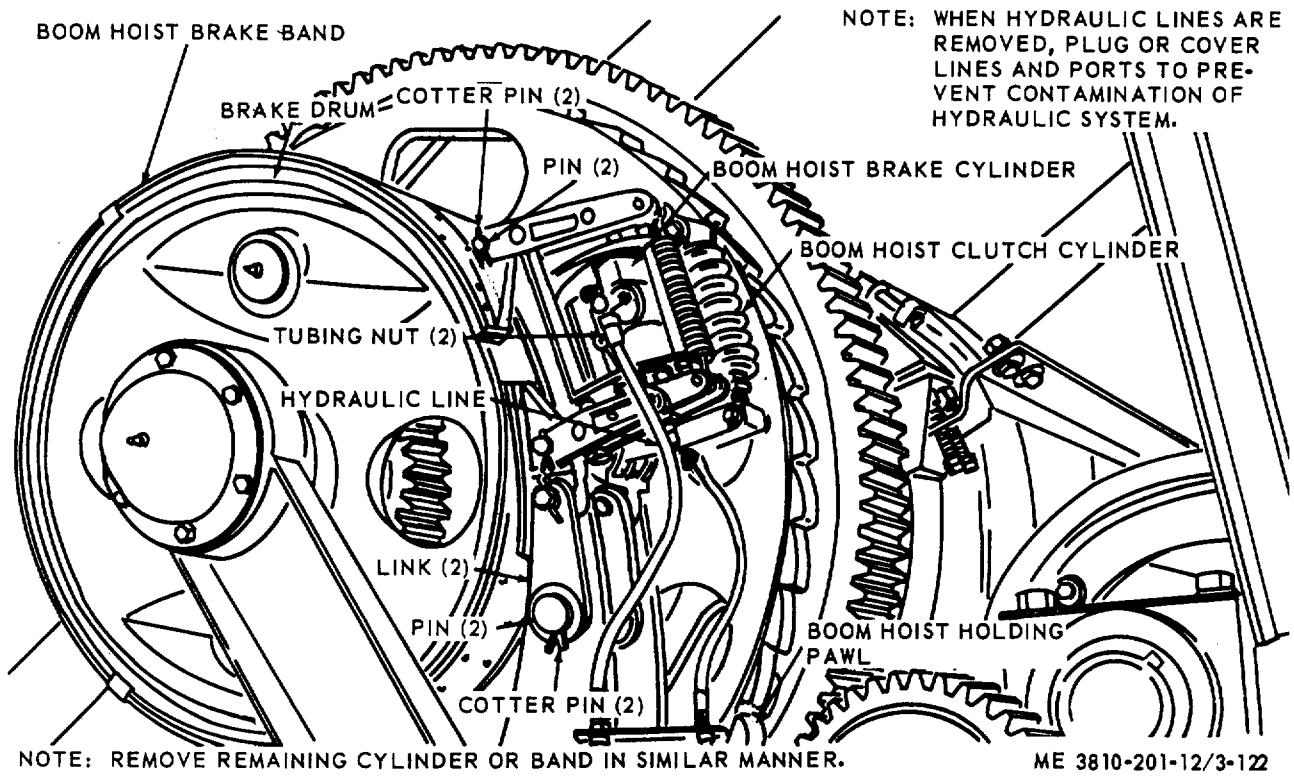


Figure 3-122. Boom planetary of hoist brake band, removal and installation.


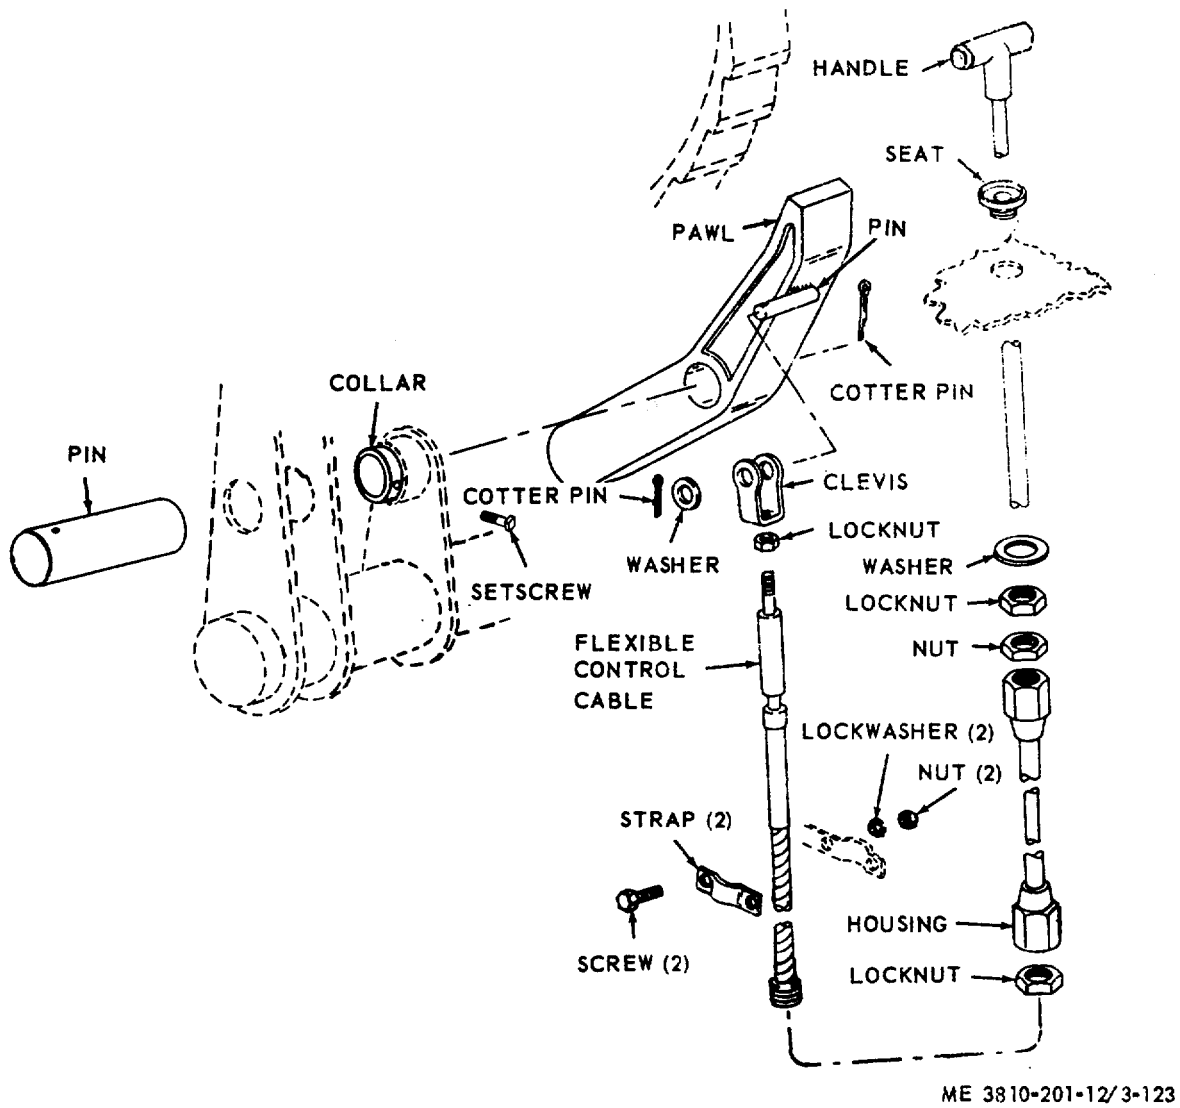


Figure 3-123. Boom hoist holding pawl, removal and installation.

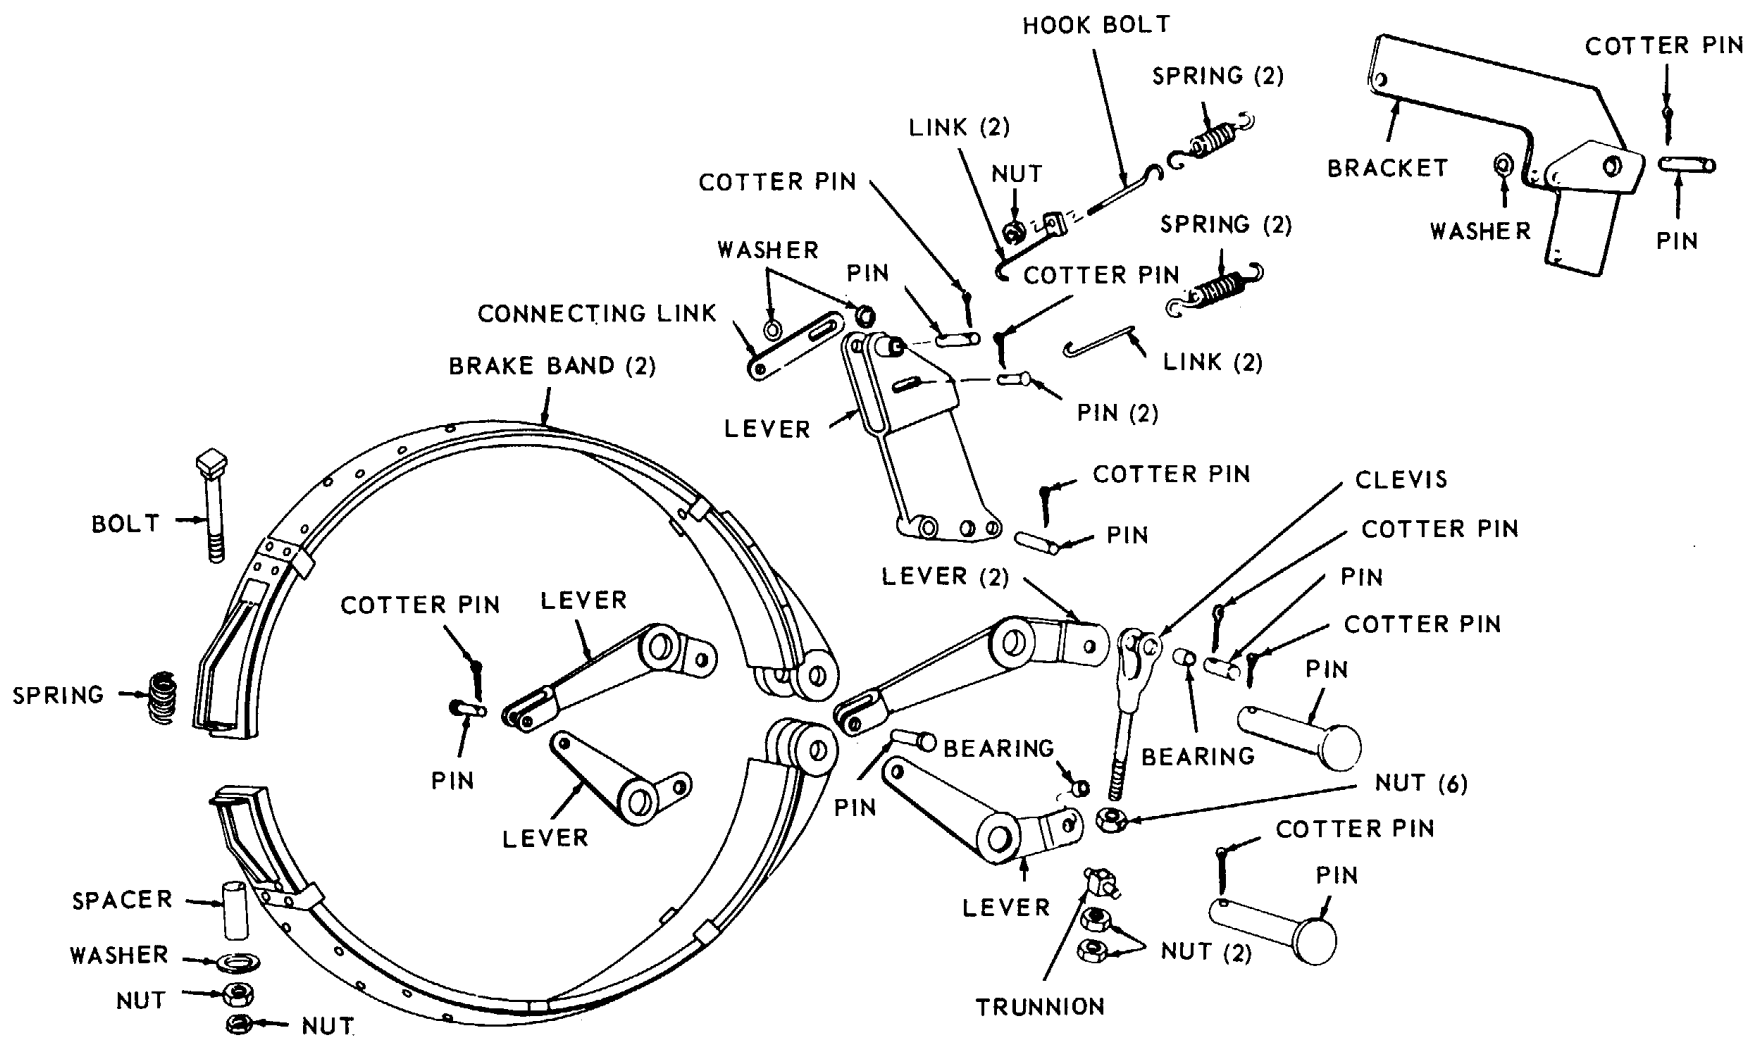

ME 3810-201-12/3-124

Figure 3-124. Propel brake band and linkage, removal and installation.

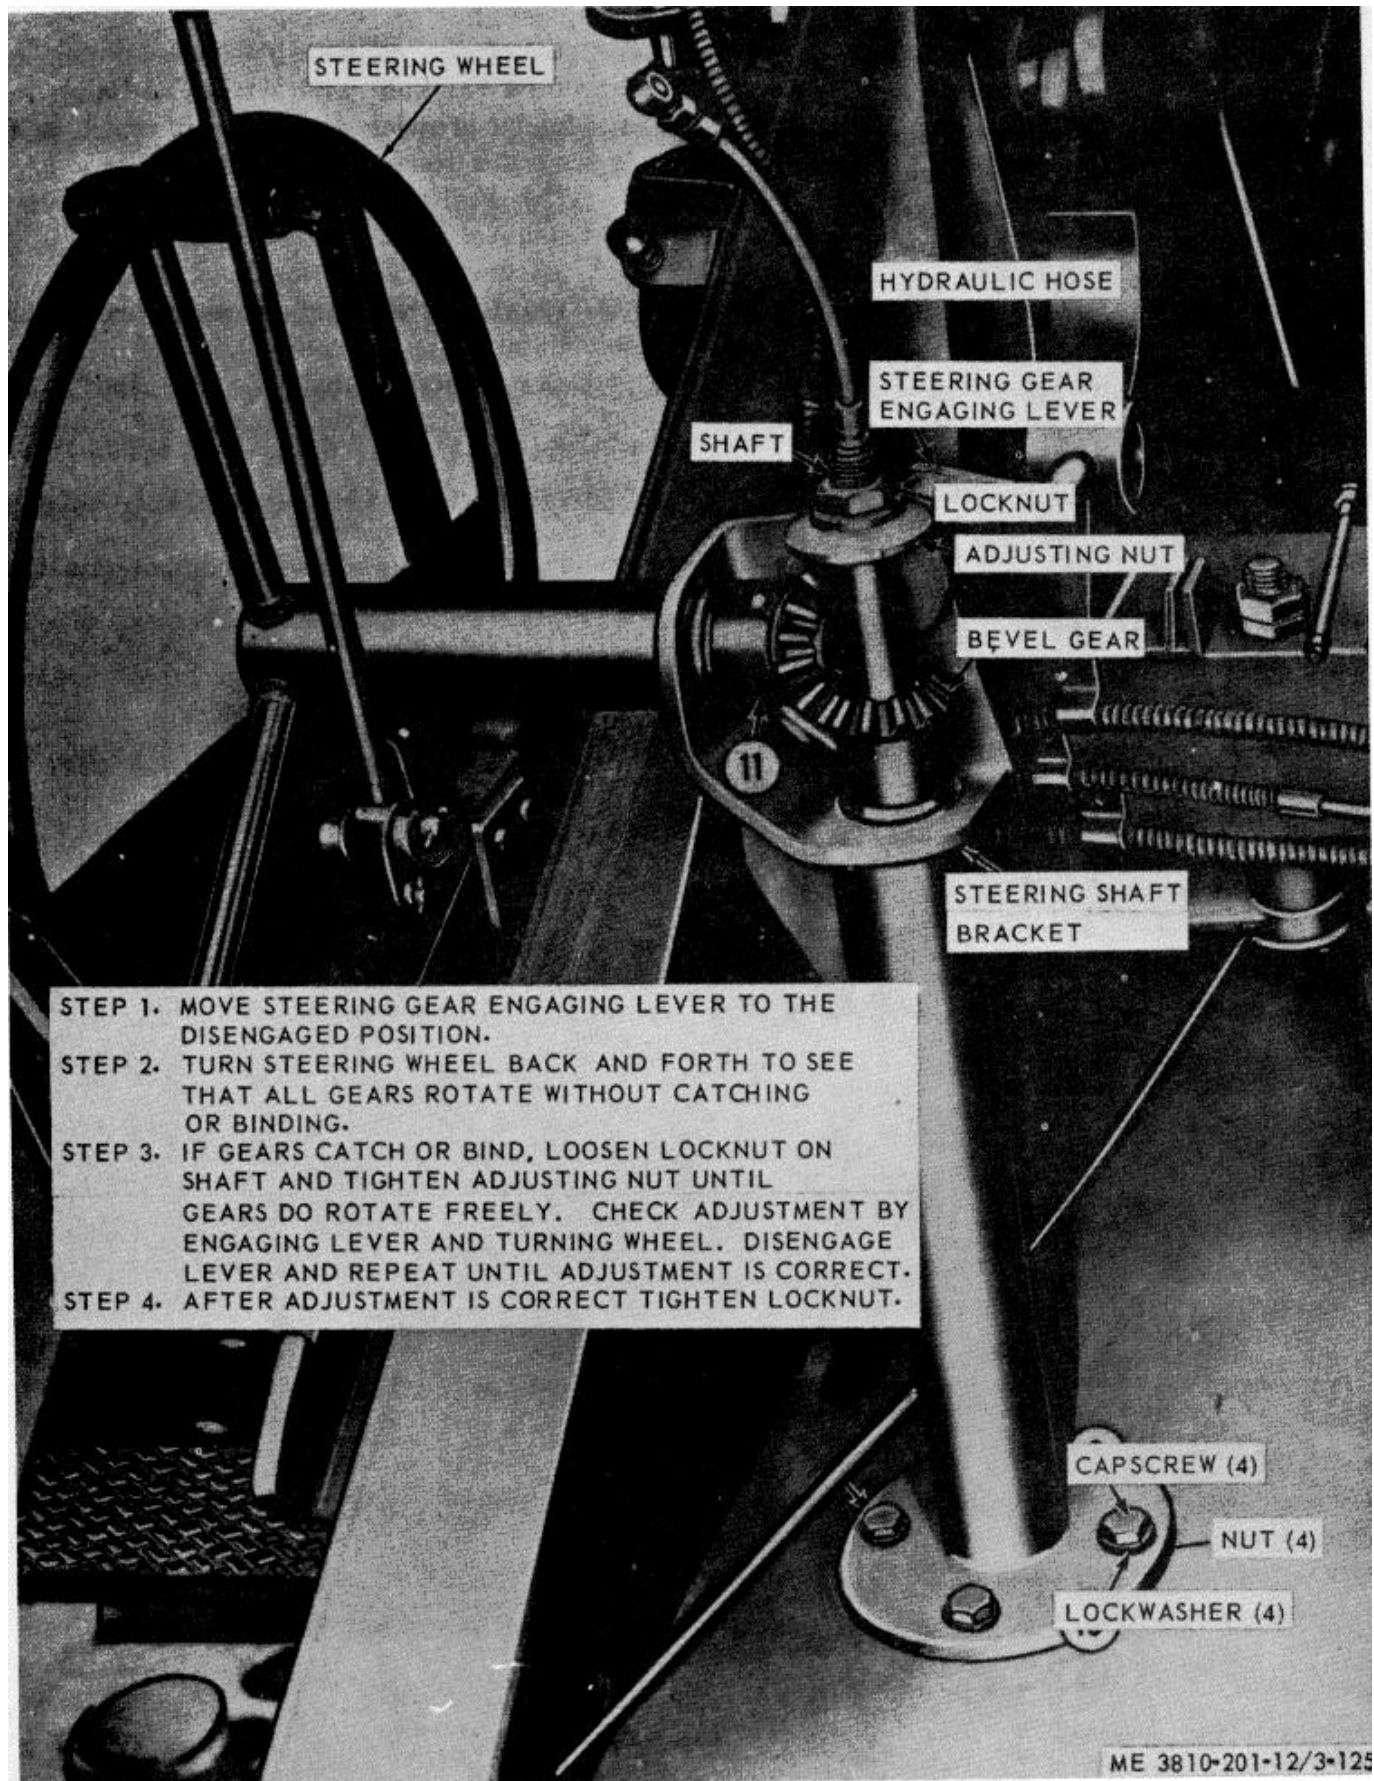


Figure 3-125. Steering wheel adjustment.

Section XIX. TRACKS

3-140. General

This section describes maintenance procedures for the portion of the crawler assembly authorized at organization by the maintenance allocation chart. The track consists of track shoes pinned together around drive sprockets, upper support and bottom idler rollers, to form a continuous tread for traveling for the crane-shovel basic unit. Two drive chains run from sprockets on propel shaft to sprockets on track drive shaft to operate individual tracks.

3-141. Track (Tread), Links, and Pins

a. Removal.

(1) Travel crane-shovel unit to firm ground that is as level as possible, and stop with one of the master pins (fig. 3-126) at one end of crawler frame.

(2) Drive out master pin, then remove spacer and master bushing from link.

(3) Travel crane-shovel unit slowly away from removed master pin until the track is flat on the ground.

(4) Position suitable jack under crawler frame on the side where track is being removed and raise crawler frame until track is free of lower track roller and sprocket.

(5) Pull the track assembly from under the crane-shovel unit.

b. Cleaning, Inspection, and Repair.

(1) Clean all parts in -an approved cleaning solvent and dry thoroughly.

(2) Visually inspect side bars, shoulder bolts, bushings, nuts, links, link pins, master linkpins, and shoes for cracks, breaks, excessive wear, other damage.

(3) Repair side bars by welding cracks or breaks, and replace other components that are damaged or defective.

c. Installation.

(1) Pull the assembled track under lower

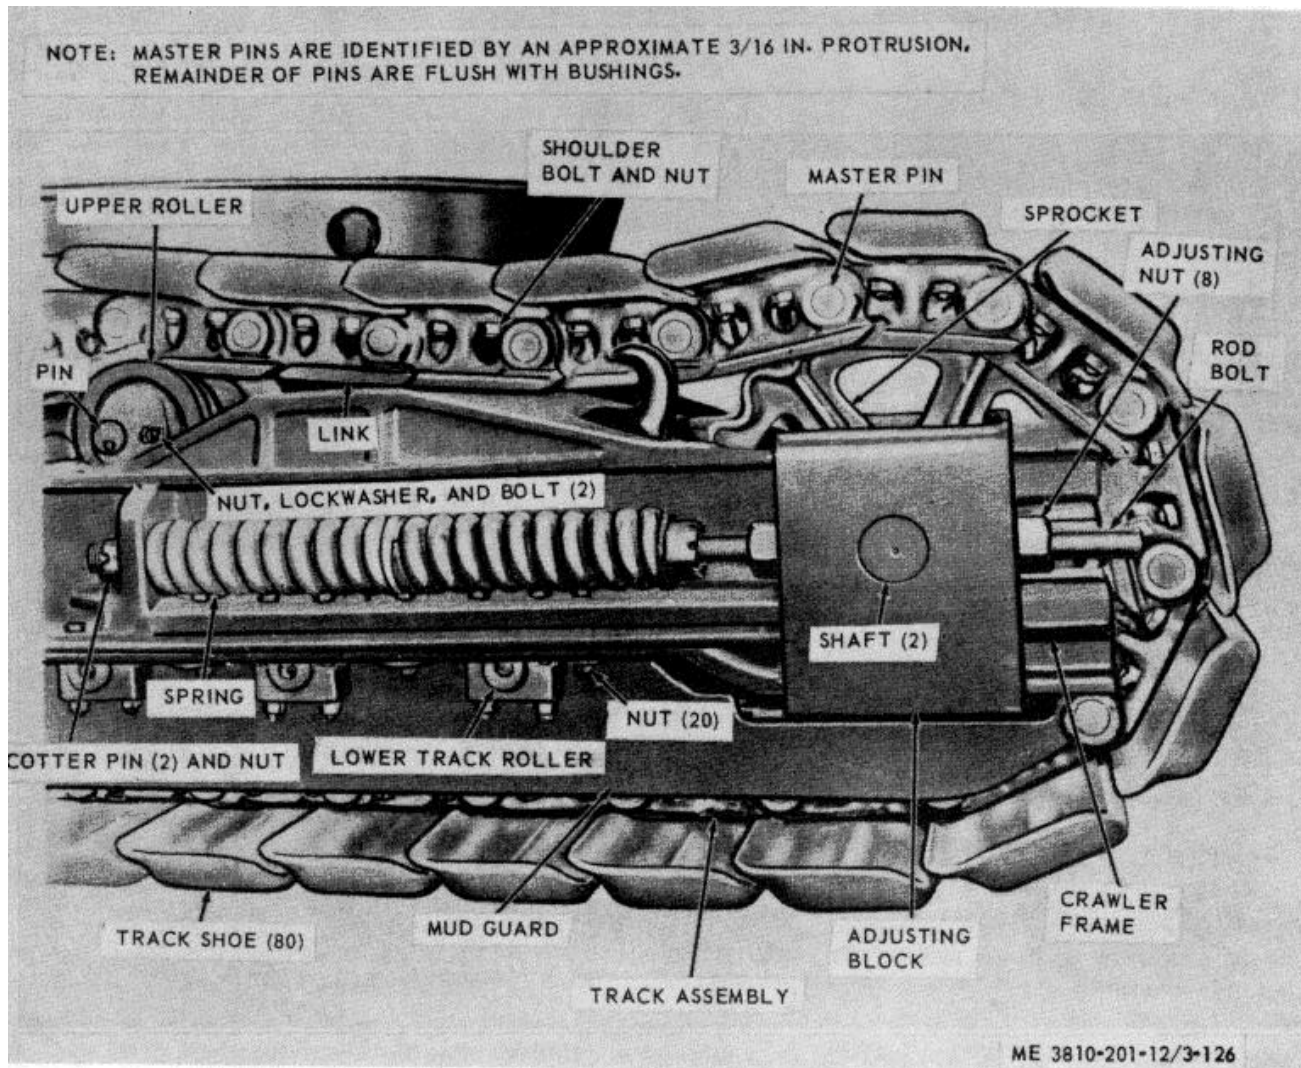


Figure 3-126. Track, removal and installation.

track rollers and drive sprocket. Leave enough track protruding beyond drive sprocket in such a way that end of track can be lifted up around sprocket.

Note. Be sure roller flanges are directly above track.

(2) Lower jack and crawler frame until lower track rollers rest properly on track.

(3) Pull ends of track up and around sprocket, and over upper track roller until ends meet, install bushing in link, install spacers, then install master pin.

(4) Remove jack from crawler frame.

d. *Adjustment.* Refer to paragraph 3-41 and adjust track.

3-142. Upper Track Support Rollers

a. *Removal and Installation.*

(1) Provide slack for removal of upper support rollers by loosening the adjusting nuts (fig. 3-126) on rod bolt.

(2) Remove two nuts, lockwashers, and bolts from roller pin.

(3) Raise track assembly with a long pry bar, insert blocking between track and crawler frame to provide clearance for removal of roller.

(4) Drive out pin and remove roller.

(5) Remove remaining rollers in a similar manner.

(6) Install in reverse order.

(7) Adjust track (para 3-41).

b. *Cleaning, Inspection, and Repair.*

(1) Clean all parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect rollers and pins for wear or breakage. Inspect mounting hardware for burs, stripped threads, or other damage. Inspect roller mounting brackets for cracks, or breaks.

(3) Repair by replacing defective mounting hardware, worn roller pins, or welding cracks or breaks in mounting brackets. Replace damaged rollers. Damaged or defective rollers will be forwarded to direct support maintenance for repair.

3-143. Track Idler Adjusting Springs

a. *Removal and Installation.*

(1) Remove cotterpin and nut (fig. 3-126) from end of rod bolt. Remove cotterpin from nut at end of spring, and move nut toward adjusting block until tension on springs is relieved.

(2) Remove adjusting nut at end of rod bolt and backoff the one on other side of adjusting block until rod bolt will come out of bracket at end of springs.

(3) Remove rod bolt from bracket, pull rod bolt out of adjusting block, then remove and separate the two springs.

Note. At installation, position adjusting nut and spring control nut on rod bolt at their approximate positions when rod bolt was removed above.

(4) Install in reverse order.

b. *Cleaning, Inspection, and Repair.*

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect mounting hardware for burs, or stripped threads. Inspect springs for loss of tension (no space between coils) or breaks.

(3) Repair by replacing damaged mounting hardware, or a weak or broken spring.

3-144. Drive Chain

a. *Removal and Installation.*

(1) Remove lockpin (fig. 3-127) from pin in drive chain, and drive pin from chain link.

(2) If necessary to give slack, remove two capscrews and lockwashers from lockplate on adjustment block, remove lockplate, then turn adjusting bolt until chain has enough slack to allow pins easy removal.

(3) Loosen adjusting nuts on two eyebolts one on inside the other on outside of frame.

(4) Remove drive chain.

(5) Remove remaining drive chain in similar manner.

b. *Cleaning, Inspection, and Repair.*

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect each link of chain for bent link, worn link rollers, bent pin, or excessively worn chain.

(3) Repair by replacing worn or bent links, pins, or rollers. Replace the complete chain when wear appears to be equal, but excessive throughout its entire length.

c. *Adjustment.* After installation, refer to paragraph 3-40 for adjustment instructions.

3-145. Mud Guard

a. *Removal and Installation.*

(1) Remove track (para 3-141).

(2) Remove 20 nuts (fig. 3-126) then remove mud guard.

(3) Remove remaining mud guard in similar manner.

(4) Install in reverse order.

b. *Cleaning, Inspection, and Repair.*

(1) Clean all parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect mud guard for bents, cracks, or other damage.

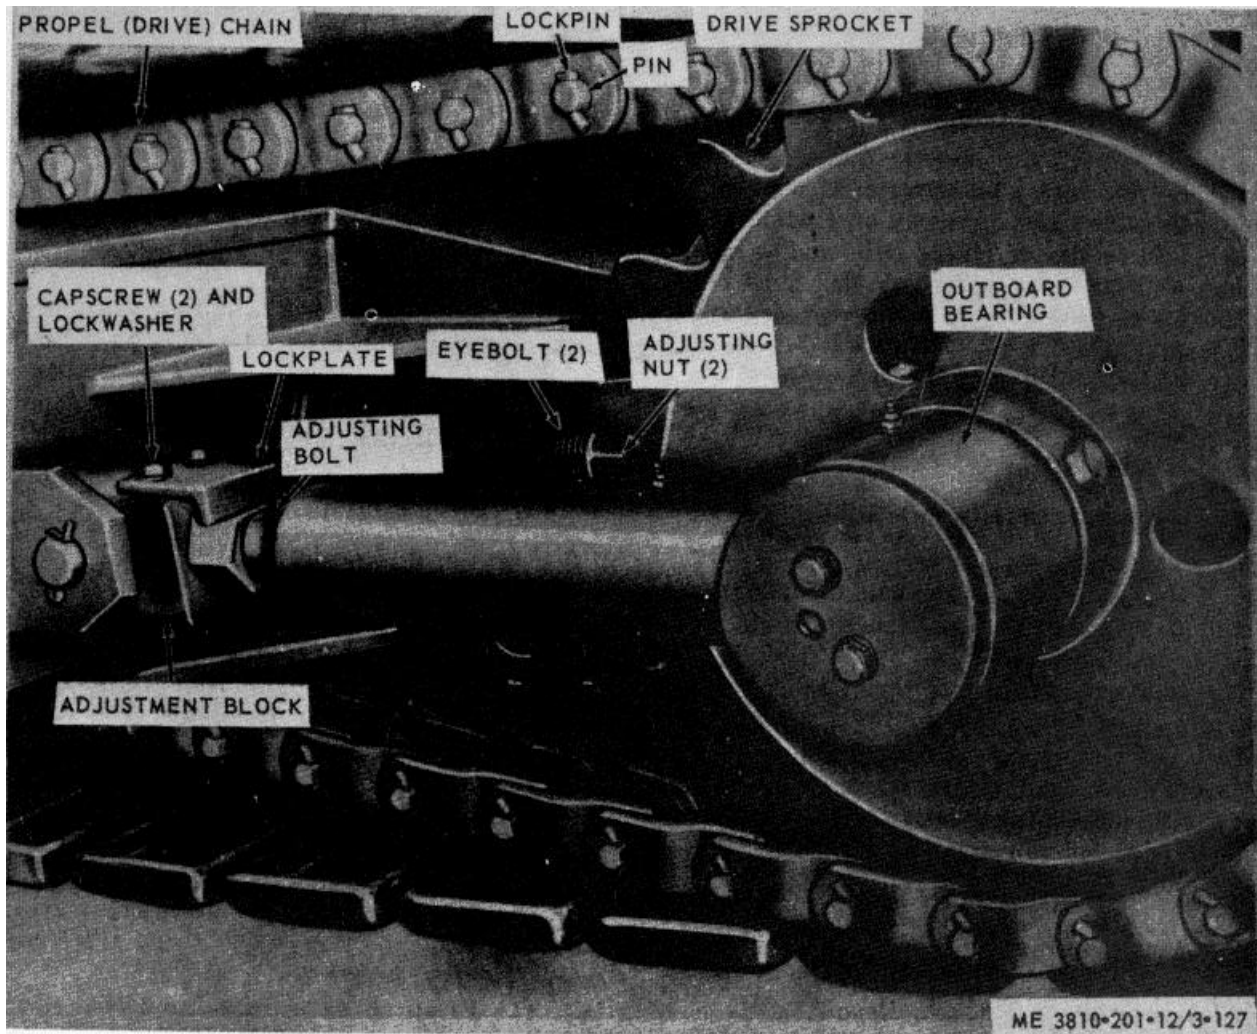


Figure 3-127. Drive (propel) chain, removal and installation.

(3) Repair by straightening bends, welding cracks, and replacement of defective mounting

hardware. Replace a mud guard damaged beyond repair.

Section XX. INSTRUMENTS AND CONTROLS

3-146. General

This section describes organizational maintenance for the instruments and controls, and consists of ammeter, tachometer hourmeter, oil pressure indicator, water temperature indicator, starter push switch, horn push switch, run-shutdown switch, governor control, manual shutdown control, and warn (warning) indicator lights.

3-147. Tachometer-Time Totalizing Meter

a. Removal and Installation.

(1) Refer to figure 3-128 and loosen cable housing nut.

(2) Remove two nuts and lockwashers securing tachometer to control panel, then lift tachometer

indicator from control panel.

(3) Install in reverse order.

b. Cleaning and Inspection.

(1) Clean ammeter with a soft cloth dampened in an approved cleaning solvent, then dry thoroughly.

(2) Visually inspect tachometer for broken glass and free movement of drive shaft. Replace a defective tachometer.

3-148. Overspeed Governor Microswitch (for Engine Model 687C-18-ES)

a. Removal and Installation.

NOTE: TAG AND DISCONNECT ELECTRICAL LEADS, AND REMOVE MOUNTING HARDWARE AS REQUIRED

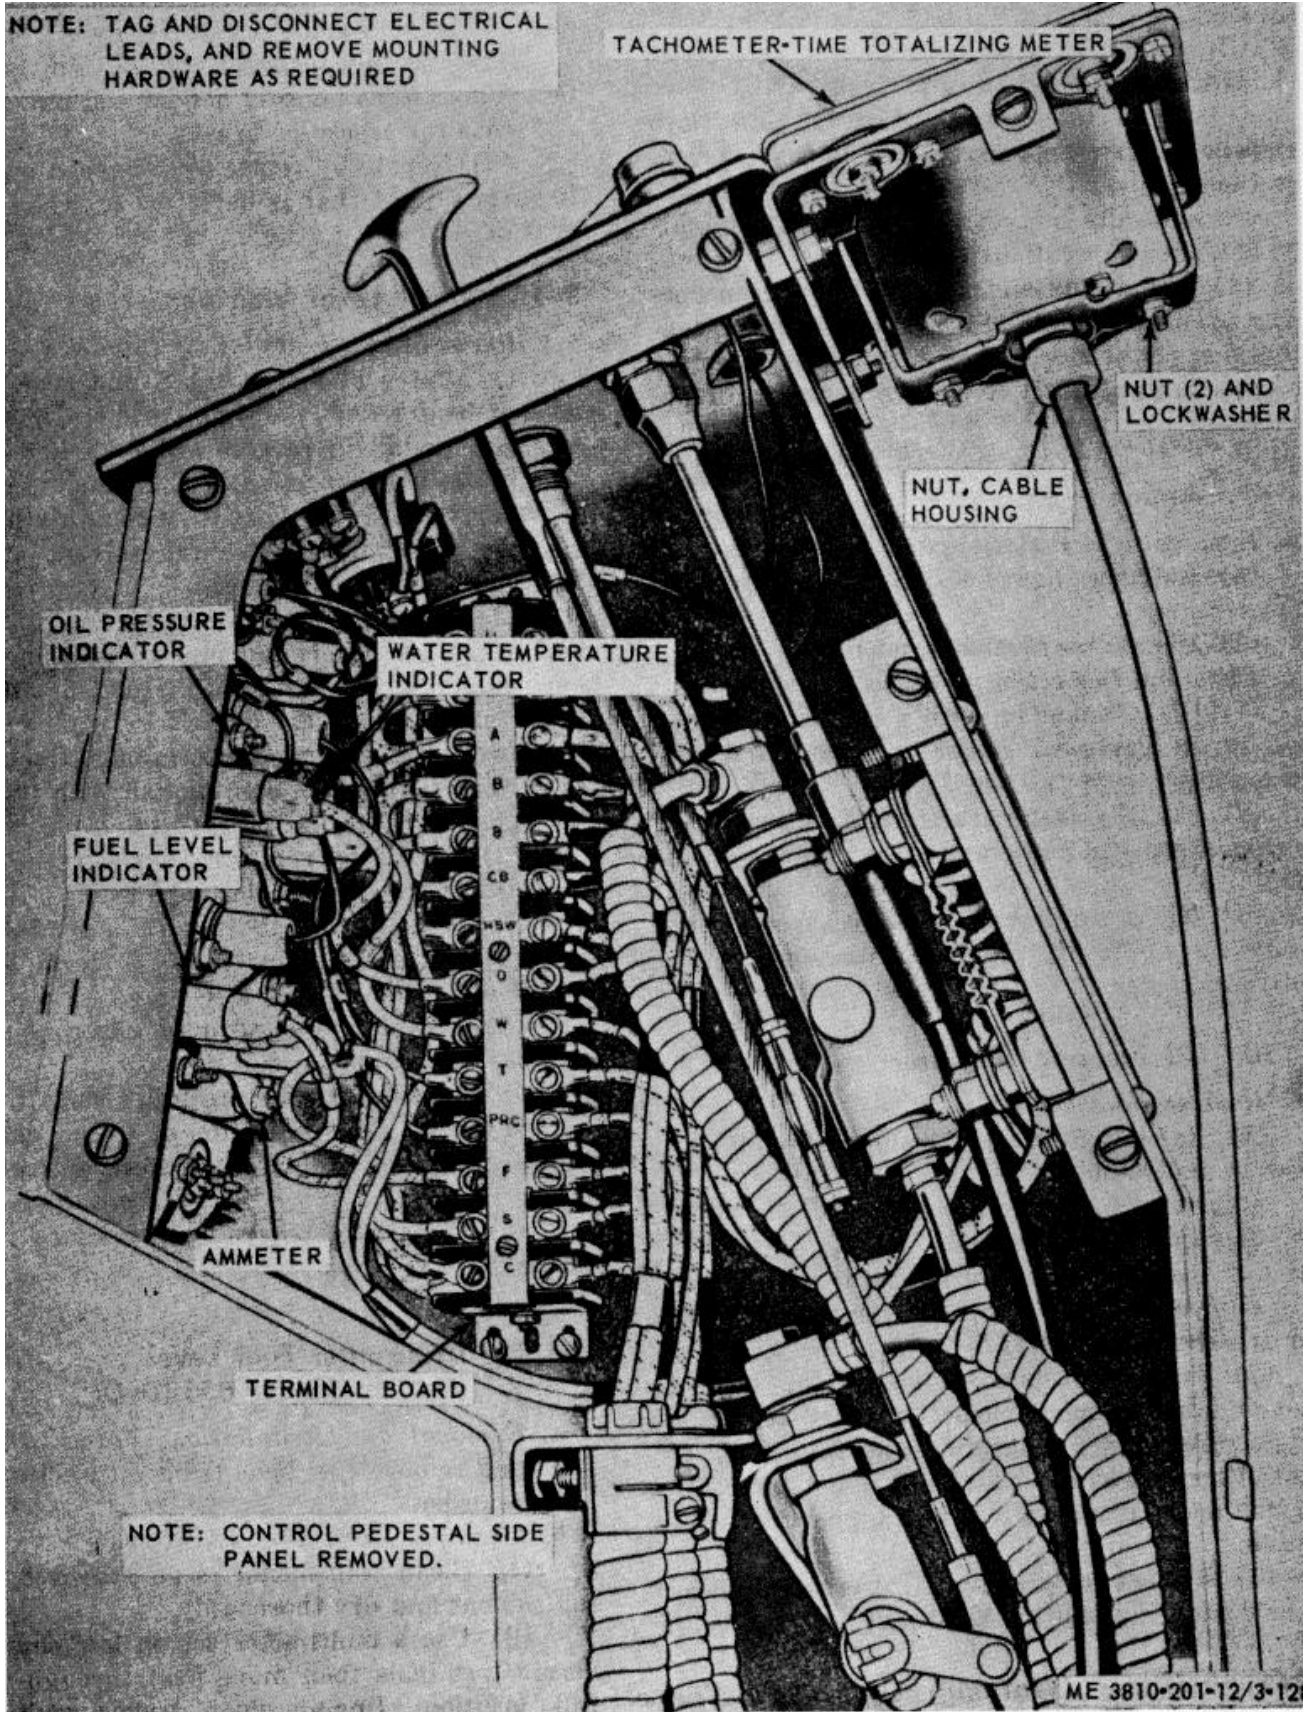


Figure 3-128. Tachometer-time totalizing meter, oil pressure indicator, fuel lever indicator, and ammeter, removal and installation.

(1) Refer to figure 3-83, tag and disconnect two electrical leads, remove two screws securing switch to overspeed governor, then remove microswitch.

(2) Install in reverse order.

b. Cleaning, Inspection, and Test.

(1) Clean microswitch with a soft cloth dampened in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect for corroded terminals and damaged or weak arm contact.

(3) Use a multimeter and test between normally open and normally closed contacts for continuity. If continuity is shown, switch is defective and must be replaced. Replace a damaged or defective microswitch.

3-149. Ammeter

a. Removal and Installation.

(1) Refer to figure 3-128 and remove the ammeter.

(2) Install in reverse order.

b. Cleaning, Inspection, and Test.

(1) Clean ammeter with a soft cloth dampened in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect ammeter for corroded terminals, cracked glass, and other damage or defect.

(3) Use a multimeter and check across terminals for continuity. Replace a damaged or defective ammeter.

3-150. Oil Pressure Indicator

a. Removal and Installation.

(1) Refer to figure 3-128 and remove the oil pressure indicator.

(2) Install in reverse order.

b. Cleaning and Inspection.

(1) Clean oil pressure indicator with a soft cloth dampened in an approved cleaning solvent, and dry thoroughly.

(2) Visually inspect indicator for broken glass or other damage. Inspect transmitter leads for good terminal connections at indicator. If transmitter checks out (para 3-90) but indicator does not operate, return to direct support for calibration.

(3) Replace a defective oil pressure indicator or damaged mounting hardware.

3-151. Indicator (Warning) Light, Low Oil Pressure

a. Removal and Installation.

(1) Refer to figure 3-129 and remove the low oil pressure indicator (warning) light.

(2) Install in reverse order.

b. Cleaning, Inspection, and Repair.

(1) Clean all metal parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect light for damage or defect. Check that lamp is not burned out. Inspect red lense for cracks or breaks.

(3) Repair by replacing a burned out lamp. Replace a light that is defective or when lens is broken.

3-152. Fuel Level Indicator

a. Removal and Installation (Model 855BG-2).

(1) Refer to figure 3-128 and remove fuel level indicator.

(2) Install in reverse order.

b. Cleaning, Inspection, and Repair.

(1) Clean indicator with a clean cloth dampened in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect indicator for dents, broken glass, or other damage. Inspect mounting hardware for burrs, stripped threads, or other defect. Inspect electrical leads for fraying insulation, broken wire, or loose terminals. Check indicator for operation in conjunction with transmitter (para 3-153).

(3) Repair by replacing defective indicator, mounting hardware, or electrical lead.

c. Removal and Installation (Model 855BG-3).

(1) Refer to figure 3-58, perform steps 3 and 4 and remove fuel level gage.

(2) Clean in an approved cleaning solvent and dry thoroughly.

(3) Check that movement of float through its arc gives a true indication of full or empty at limits of travel. Replace a defective fuel level gage.

(4) Install by reversing procedure in (1) above.

3-153. Transmitter Fuel Level

(Not on Model 855BG-3)

a. Removal and Installation, Refer to figure 3-57 and remove fuel level transmitter. Install in reverse order.

b. Cleaning, Inspection, and Repair.

(1) Clean transmitter in an approved cleaning solvent and dry thoroughly.

(2) Use a multimeter set on low ohm scale across terminals then move float through arc to full position. During float travel multimeter should indicate increasing ohms. When increasing ohms are indicated, install electrical lead then check position of pointer on indicator with position of float relative to distance traveled.

NOTE: TAG AND DISCONNECT ELECTRICAL LEADS, AND REMOVE MOUNTING HARDWARE AS REQUIRED.

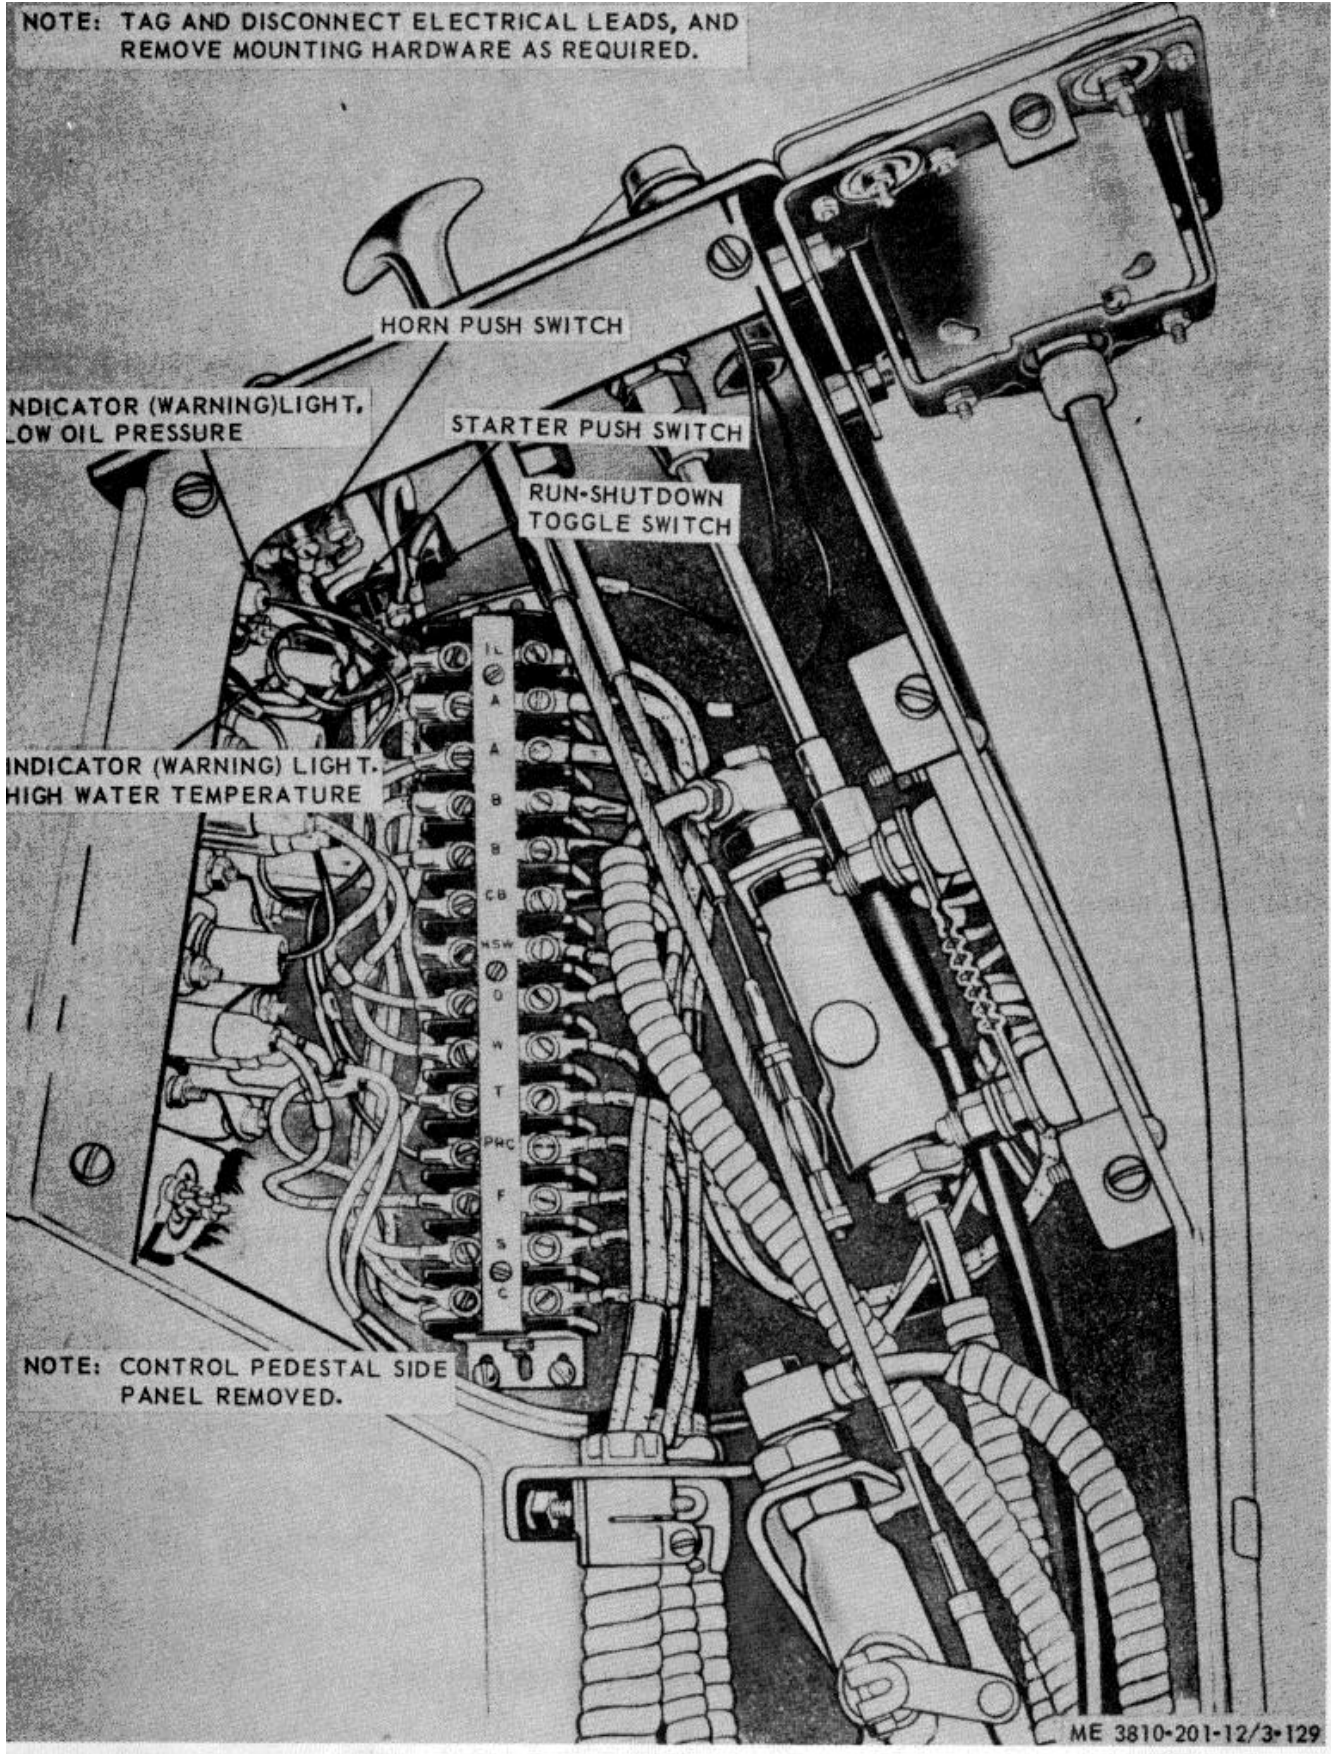


Figure 3-129. Indicator light and switch, removal and installation.

(3) Repair by replacing a defective transmitter or mounting hardware.

3-154. Water Temperature Indicator

a. Removal and Installation.

(1) Refer to figure 3-128 and remove the water temperature indicator.

(2) Install in reverse order.

b. Cleaning, Inspection, and Repair.

(1) Clean indicator with a soft cloth dampened in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect indicator for dents, broken glass, or other defect. Inspect mounting hardware for burs, stripped threads or other damage.

(3) Repair by replacing defective mounting hardware or water temperature indicator.

3-155. Indicator (Warning) Light, Water High Temperature

a. Removal and Installation. Refer to figure 3-129 and remove indicator (warning) light water high temperature. Install in reverse order.

b. Cleaning, Inspection, and Repair. Clean, inspect, and repair indicator light in manner described in paragraph 3-151.

3-156. Run-Shutdown Switch

a. Removal and Installation.

(1) Refer to figure 3-129 and remove run-shut-down-toggle switch.

(2) Install in reverse order.

b. Cleaning, Inspection, and Repair.

(1) Clean switch in an approved cleaning solvent and dry thoroughly with compressed air.

(2) Visually inspect switch for damaged or defect. Use multimeter and test for continuity between terminals when switch is ON. When switch is OFF, no continuity should be indicated.

(3) Repair by replacing a defective switch.

3-157. Starter Push Switch

a. Removal and Installation.

(1) Refer to figure 3-129 and remove starter push switch.

(2) Install in reverse order.

b. Cleaning, Inspection, and Repair. Refer to paragraph 3-156 and clean, inspect, or repair starter push switch in a similar manner.

3-158. Horn Push Switch

a. Removal and Installation.

(1) Refer to figure 3-119 and remove horn push switch.

(2) Install in reverse order.

b. Cleaning, Inspection, and Repair. Refer to paragraph 3-156 and clean, inspect, or repair horn switch in a similar manner.

3-159. Windshield Wiper Switch (Winterized Units Only)

a. Removal and Installation.

(1) Remove side panel from instrument control pedestal.

(2) Tag and disconnect electrical leads and remove mounting hardware as required.

(3) Remove windshield wiper switch (fig. 2-22).

b. Cleaning, Inspection, and Repair. Refer to paragraph 3-156 and clean, inspect, or repair in a similar manner.

3-160. Electrical Connector (Quick Disconnect) Receptacle (855BG-2 or -3)

a. Removal.

(1) Remove electrical connector from receptacle at bottom of instrument panel (fig. 2-23).

(2) Remove side panel from control pedestal.

(3) Remove four nuts, lockwashers, and screws, then remove electrical connector receptacle from bottom of control panel.

b. Installation. Install by reversing procedure in a, above.

3-161. Terminal Board and Wiring

a. Removal and Installation.

(1) Refer to figure 3-128 and remove terminal board.

(2) Install in reverse order.

b. Wiring Test and Repair. Refer to paragraph 3-95 for test and repair or wiring.

Section XXI. COUNTERWEIGHTS

3-162. General

Warning: Do not travel over rough terrain with crane-shovel basic unit (without front end attachment), unless

counterweight extension is removed. This will avoid danger of tipping the unit over, damaging the equipment, or injury to personnel.

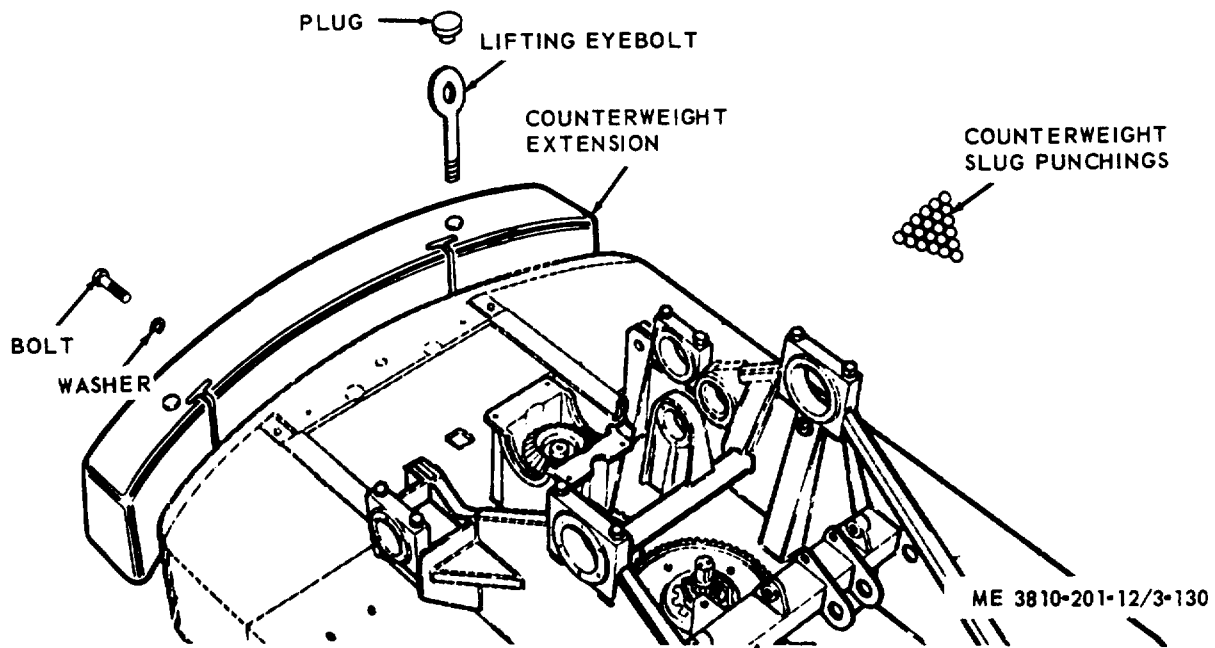


Figure 3-130. Counterweight extension, removal and installation.

The counterweight consists of slug punchings which are stored in compartments of revolving frame, and the extension, which mounts on rear of revolving frame. Purpose of counterweight distribution is to offset extended weights of front end attachment and load. Slug punchings are not ordinarily removed from revolving frame.

3-163. Counterweight Extension

a. Removal.

- (1) Position lifting device capable of lifting 10,000 lbs at rear of crane-shovel unit.
- (2) Remove two plugs (fig. 3-130) from

counterweight extension, and install two lifting eyebolts in counterweight.

(3) Secure lifting hooks in lifting eyebolts, take up slack, then remove bolts and washers.

(4) Lift extension up and off revolving frame, and move to a suitable storage area.

b. Installation.

(1) With a suitable lifting device, lift counterweight extension, move to rear of crane-shovel basic unit and position it for installation.

(2) Install bolts and washer to secure extension to frame, then remove lifting hooks.

(3) Remove two lifting eyebolts, then install plugs in bolt holes.

Section XXII. CAB, PANELS, DOORS, WINDOWS, AND SEATS.

3-164. General

The cab of the crane-shovel basic unit is manufactured of sheet metal sections, panels, doors, and window frames, which are bolted to one another and to the revolving frame. Any part of the cab can be removed for repair, or in sections to provide access to machinery components that require repair or adjustment. Panels and doors on winterized units have a slight difference in configuration, but are removed and installed in a similar manner.

3-165. Door Handrail (Grip)

a. Removal and Installation.


(1) Remove two nuts (fig. 3-131) and two washers, then remove handrail from cab.

(2) Remove the two remaining nuts from handrail.

(3) Install in reverse order.

b. Cleaning, Inspection, and Repair.

(1) Clean handrail in an approved cleaning solvent and dry thoroughly.

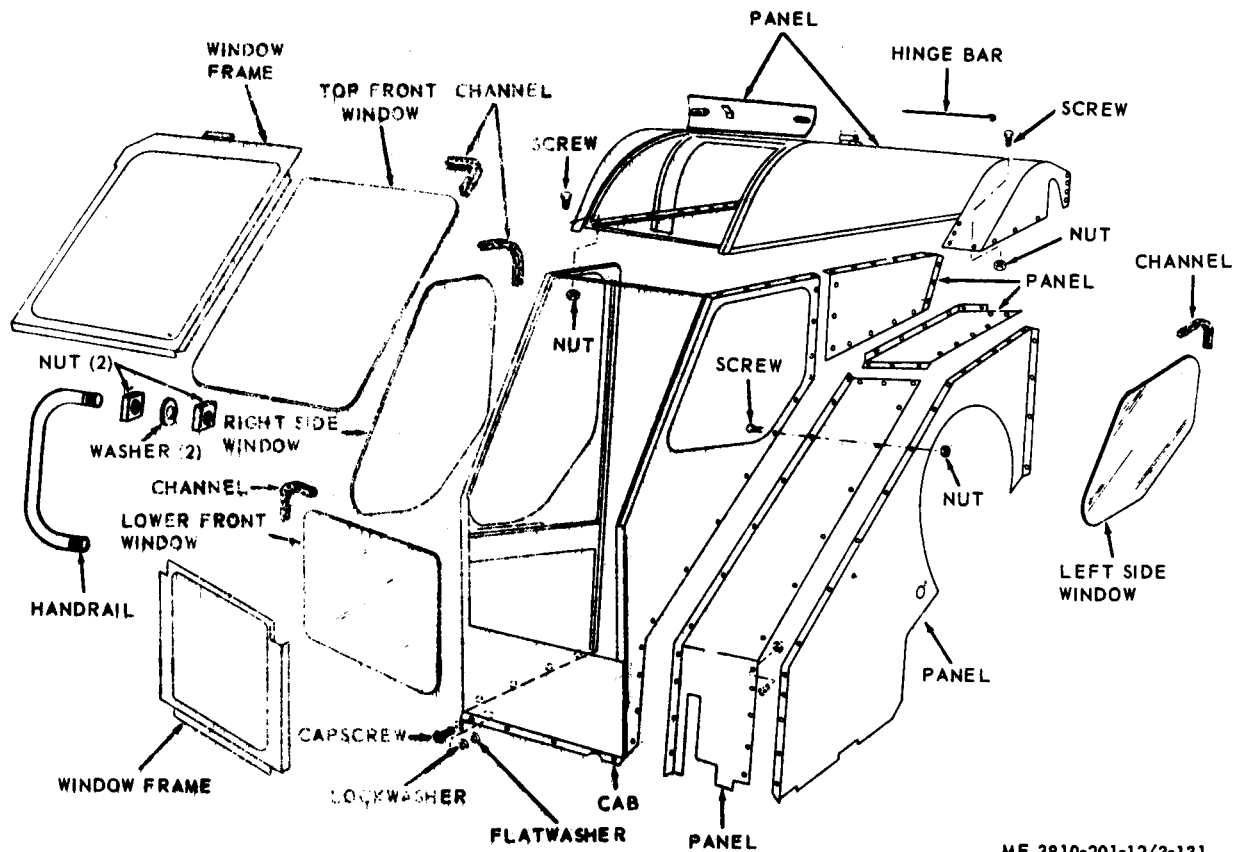

ME 3810-201-12/3-131

Figure 3-131. Handrail, panel, window frame, and cab, removal and installation.

(2) Visually inspect handrail for bends, cracks, or burs on threads.

(3) Repair by straightening bends welding cracks, and chase burs off threads. Replace a defective handrail.

3-166. Door and Window Glass

a Removal.

(1) Insert hook end of channel tool in groove of channel (fig. 3-131) and slide tool completely around channel to break the seal.

(2) Insert straight end of channel tool between channel and glass, move tool slowly around window or door glass to break seal of channel to glass. Press glass outward gently while breaking seal and the glass will slide (out of the frame when seal is completely broken.

b Installation.

(1) Start channel along the side of opening.

(2) Fit narrow edge of channel over edge of window frame ;and continue, around frame until the two ends of channel are joined.

(3) Start glass in one of lower corner's of the

channel, lift lip with straight end of channel tool and allow glass to slip into position.

(4) When glass is in position, insert hooked end of tool into channel, move around window forcing locking strip into position and completing the installation.

Note. Do not begin locking operation at channel joint. Start around the corners smoothly to avoid buckling or crimping the channel. Use care, and assure weather protection.

c Cleaning, Inspection, and Repair.

(1) Clean edges of window frame, inside and out, with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect channel for cracks, breaks, deterioration, or other damage. Inspect window frame or panels for dents or cracks.

(3) Repair by welding cracks and straightening dents in window frame. Replace defective channel or broken glass.

3-167. Swinging Door

a Removal and Installation.

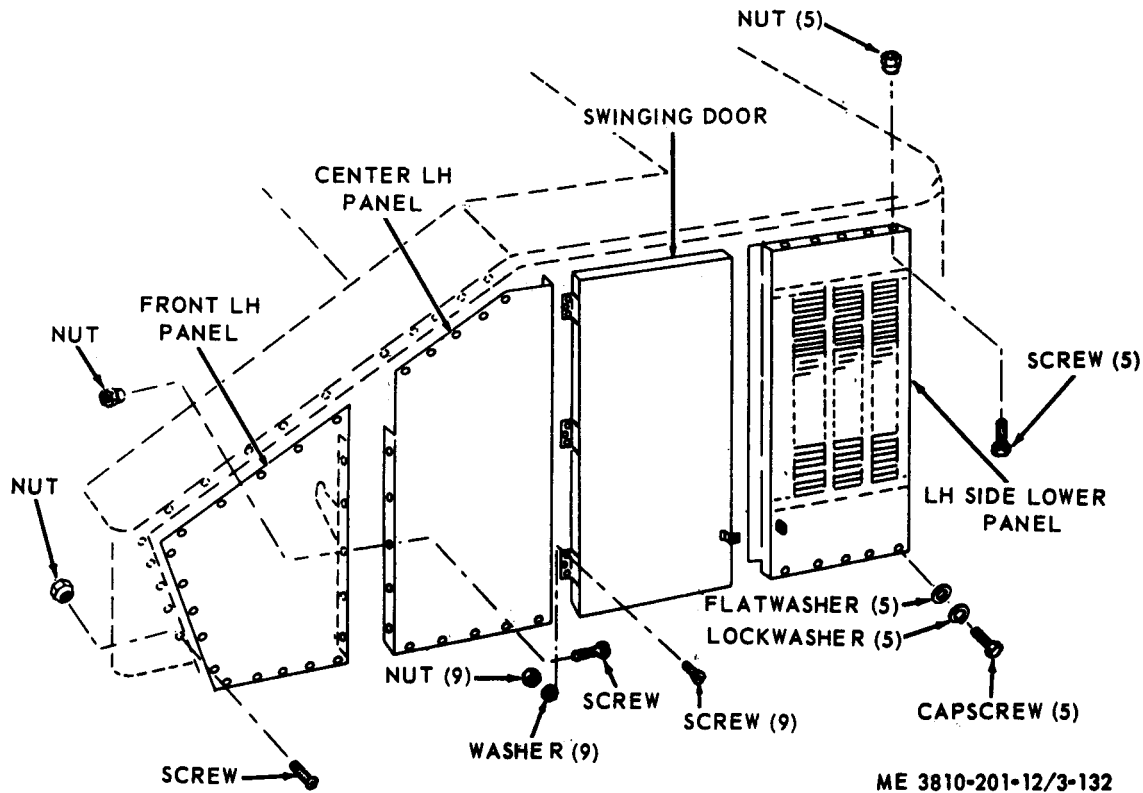


Figure 3-132. Panels and swinging door, removal and installation.

- (1) Unhook latch.
- (2) Refer to figure 3-132, remove nine nuts, washers and screws, then remove swinging door.
- (3) Install in reverse order.

b. Cleaning, Inspection, and Repair.

- (1) Clean all parts in an approved cleaning solvent and dry thoroughly.
- (2) Visually inspect door for defective hinges, dents, cracks, or other defect.
- (3) Repair by straightening bends, welding cracks, or replacing defective hinge or door.

3-168. Sliding Doors

a. Removal and Installation.

- (1) Refer to figure 3-133 and unhook latch.
- (2) Remove two roller bearings and washers from pins then lift right rear sliding door from guides.
- (3) Remove left rear sliding door in similar manner.
- (4) Install in reverse order.

b. Cleaning, Inspection, and Repair.

- (1) Clean door with an approved cleaning solvent and dry thoroughly.

- (2) Visually inspect bearings for excessive wear, door for bends, cracks, or other damage.
- (3) Repair by straightening bends, welding cracks, or replacing defective bearings or door.

3-169. Doors on Winterized Models

Doors on winterized models (fig. 3-133 and 3-134) are removed and installed in manner similar to that described in paragraph 3-167.

3-170. Left Hand Center Side Panel

a. Removal and Installation.


- (1) Refer to figure 3-132 and remove center panel from left side.
- (2) Install in reverse order.

b. Cleaning, Inspection, and Repair.

Clean, inspect, and repair panels in manner similar to that described for doors in paragraph 3-167.


3-171. Left Hand Front Panel

Refer to paragraph 3-170 and remove or install left hand front panel in a similar manner.

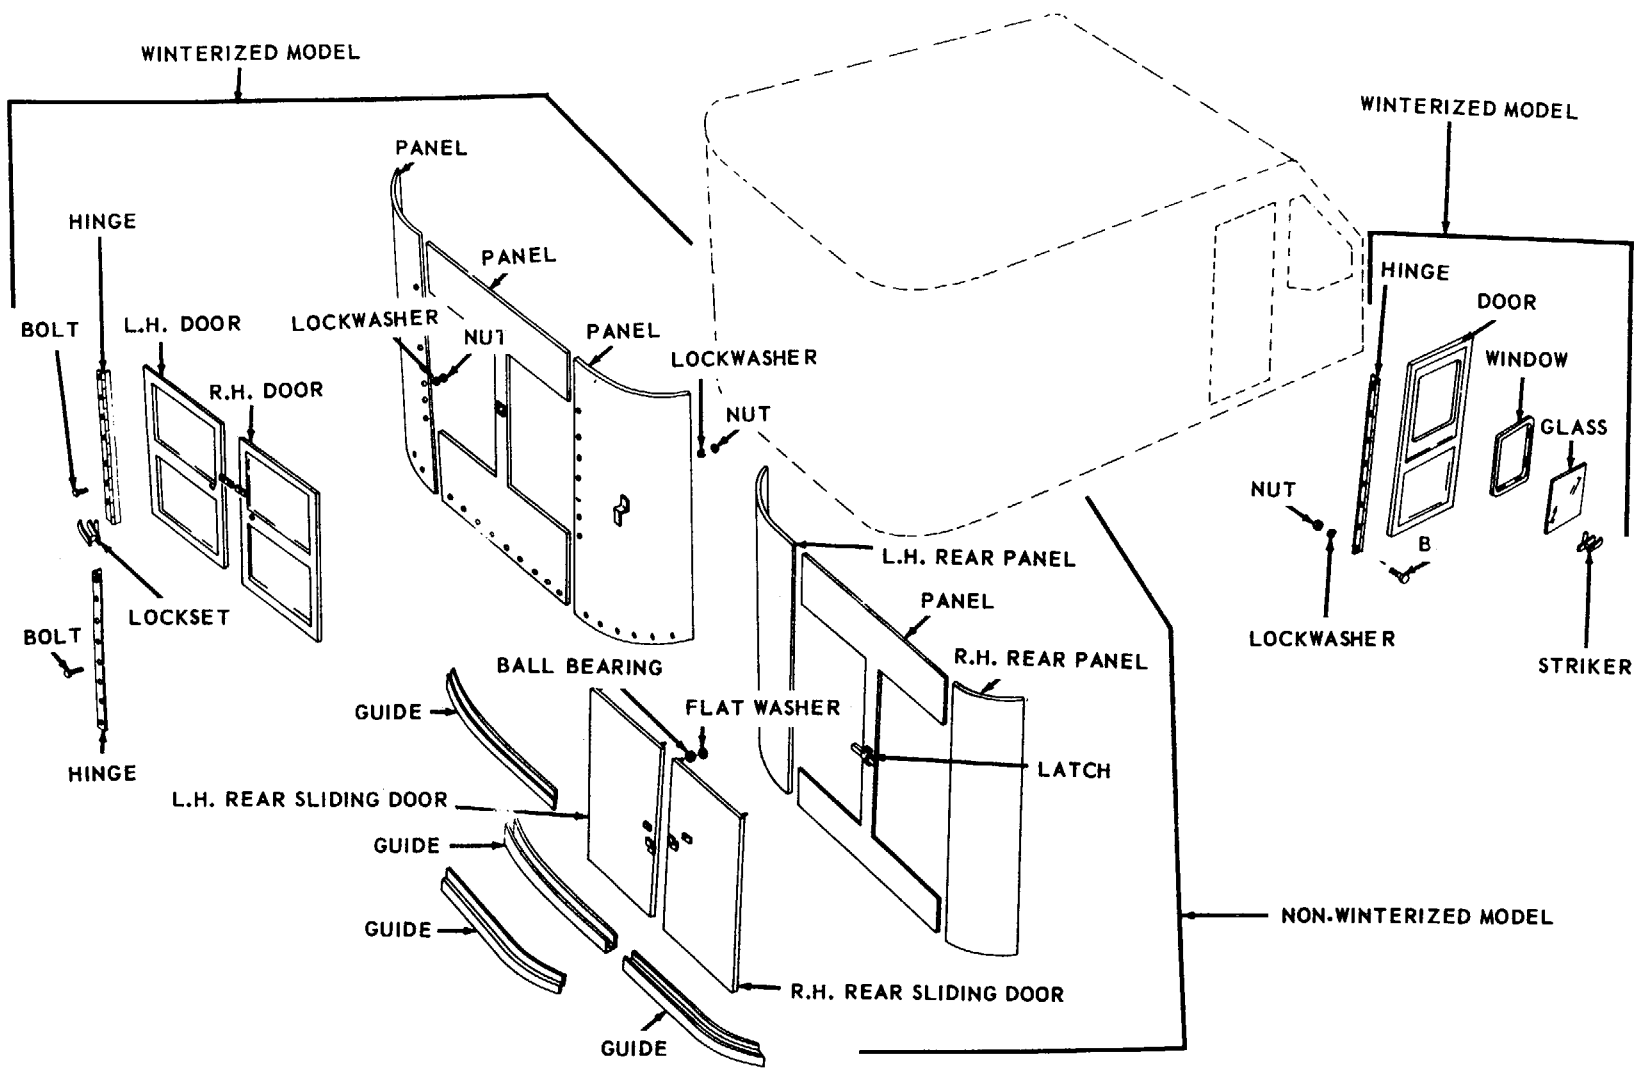

ME 3810-201-12/3-133

Figure 3-133. Sliding and winterized doors, removal and installation.

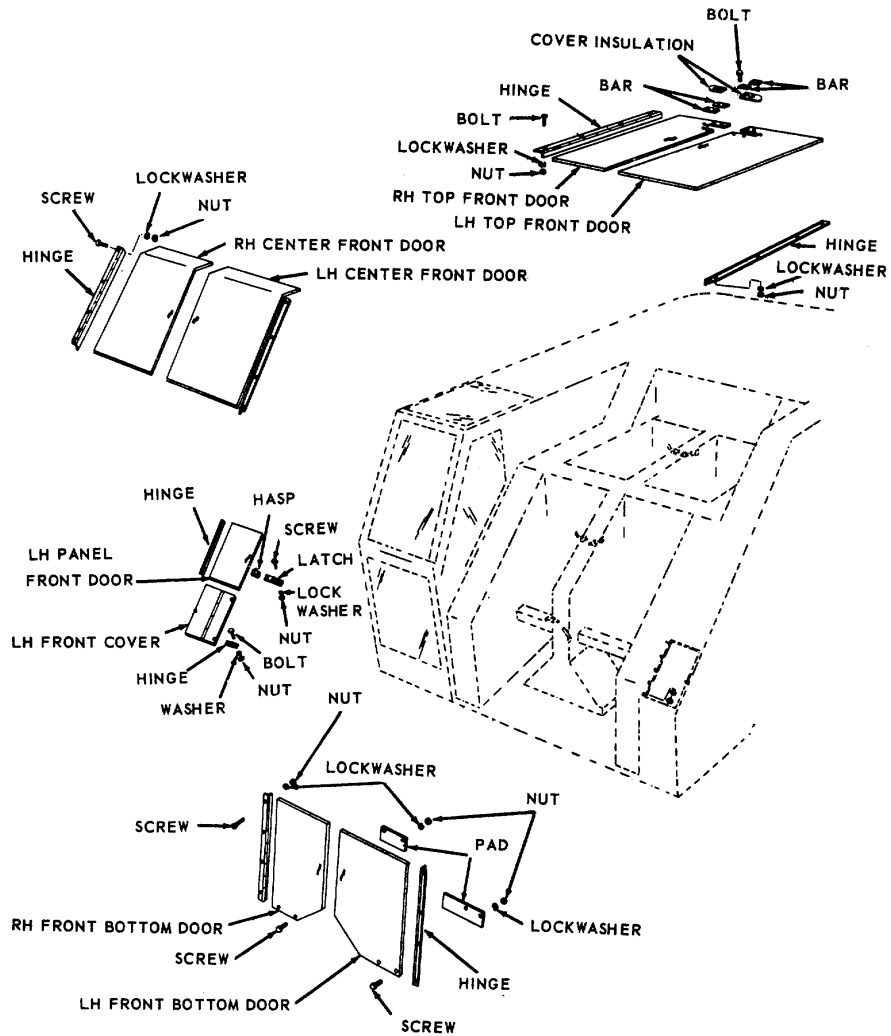

ME 3810-201-12/3-134

Figure 3-134. Front doors on winterized model.

3-172. Left Front Panel Door

a. Removal and Installation.

(1) Refer to figure 3-135 and remove left front panel door.

(2) Install in reverse order.

c. Cleaning, Inspection, and Repair. Clean, inspect, and repair left front panel door in manner similar to that described in paragraph 3-167.

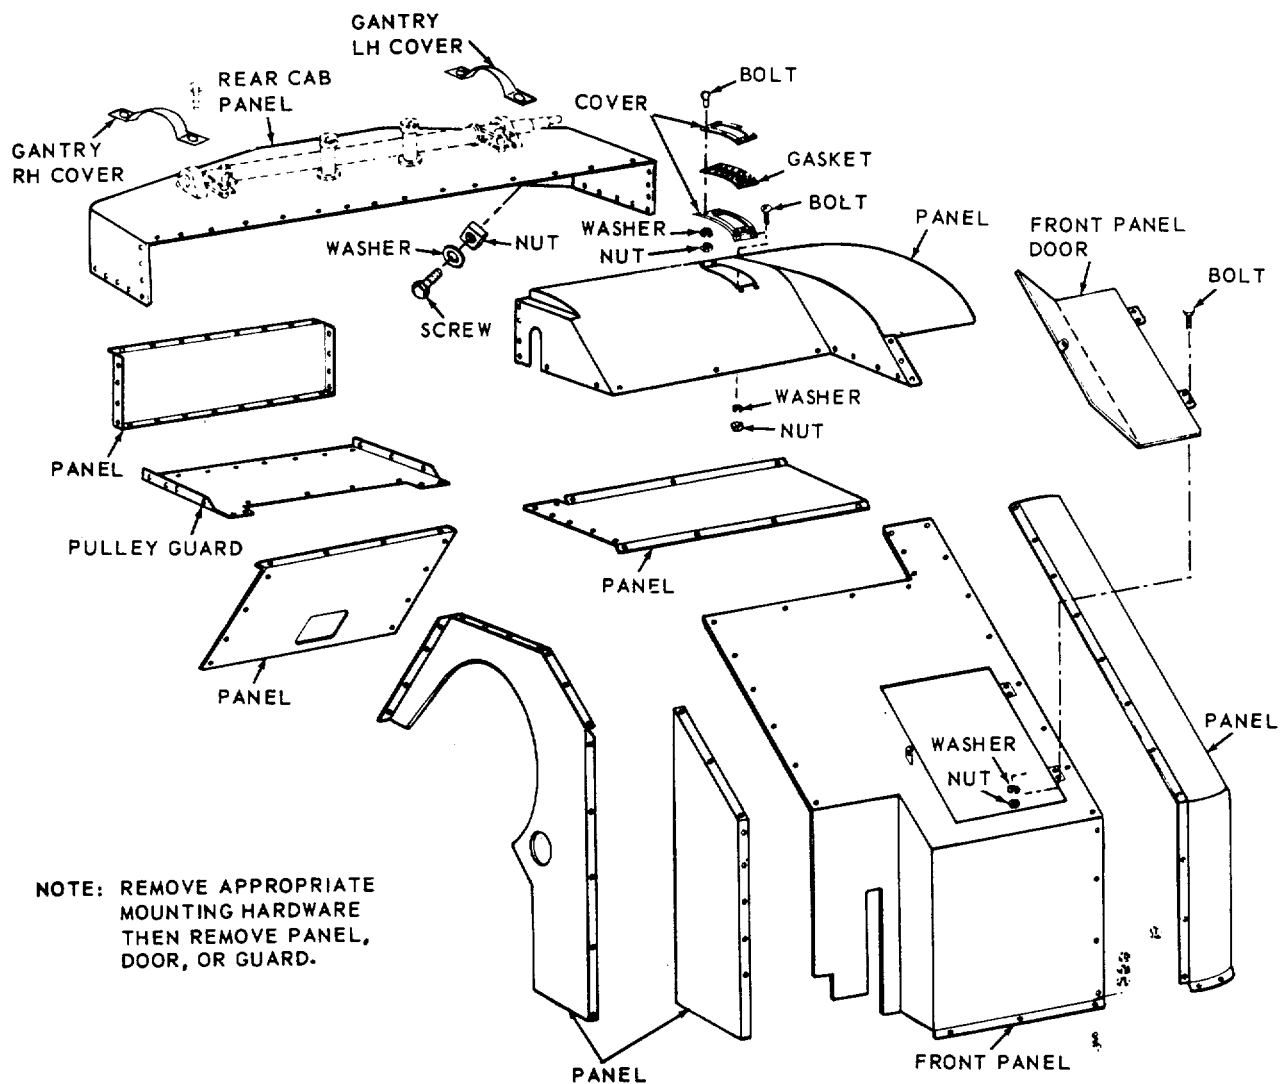


Figure 3-135. Panel, covers, and doors, removal and installation.

3-173. Upper Cable Doors

a. Removal and Installation.

(1) Refer to figure 3-136, remove mounting hardware, and remove upper cable doors.

(2) Install in reverse order.

b. Cleaning, Inspection, and Repair. Clean, inspect, and repair in manner similar to that described in paragraph 3-167.

3-174. Lower Cable Doors

Refer to paragraph 3-173 and remove or install lower cable doors in a similar manner.

3-175. Rear Cab Panel

Refer to figure 3-135 and remove or install the rear cab panel.

3-176. Right Rear Side Panel

Remove or install right rear side panel in manner similar to that described for louver panel (para 3-177).

3-177. Left Hand Side Louver Panel

a. Removal and Installation.

(1) Refer to figure 3-132 and remove louver panel.

(2) Install in reverse order.

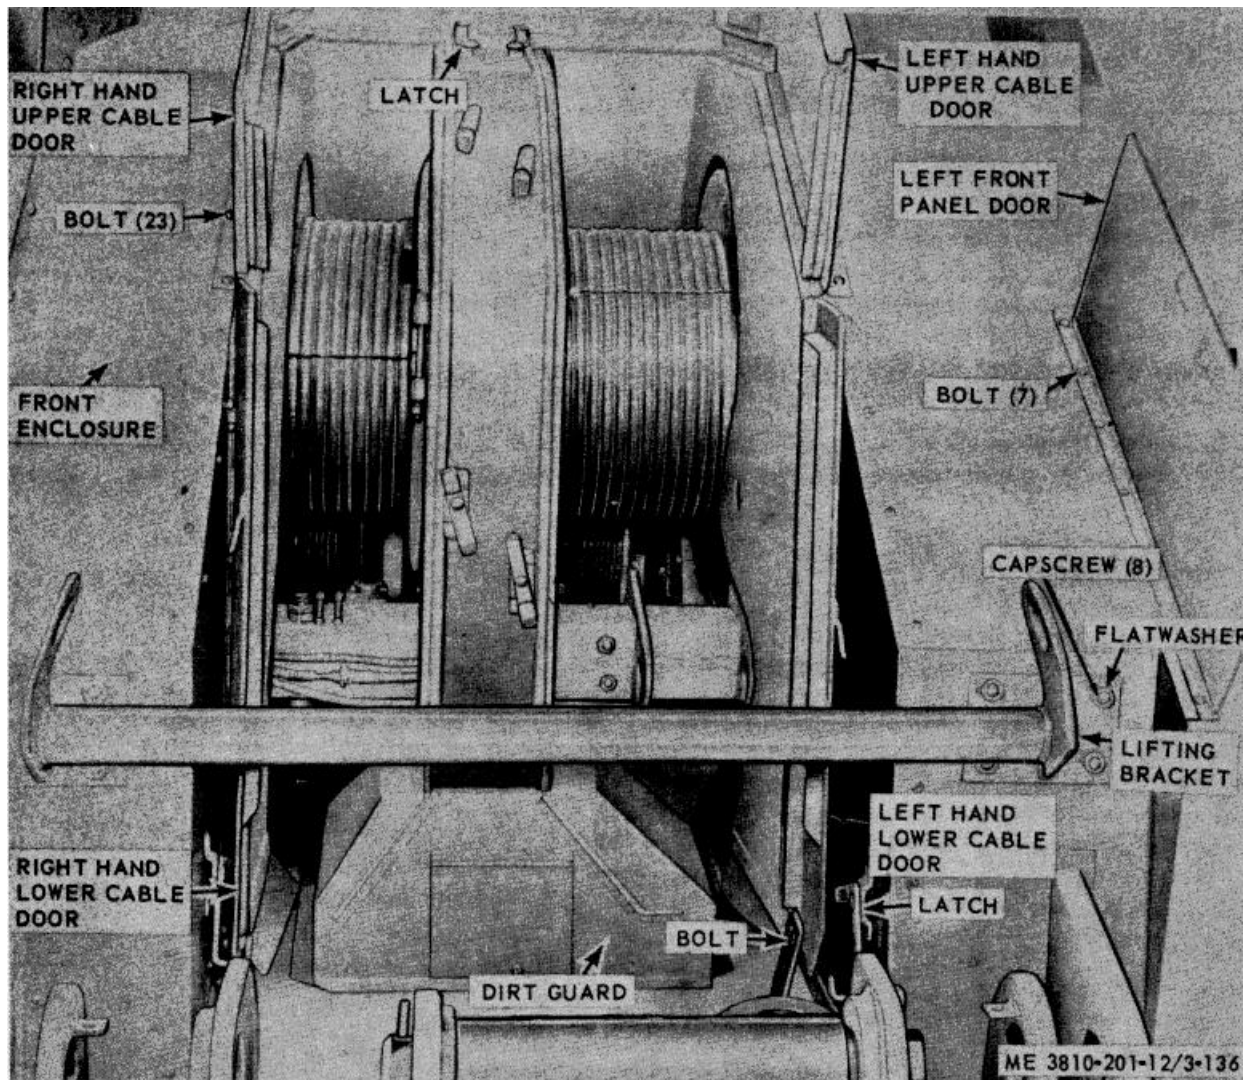


Figure 3-136. Upper and lower doors (winterized models) removal and installations.

b. Cleaning, Inspection, and Repair.

(1) Clean panel in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect for dents, cracks, or bent louvers. Inspect mounting hardware for burs, stripped threads, or other damage.

(3) Repair by straightening bends and dents, or welding cracks. Replace defective mounting hardware, or panel.

3-178. Right Hand Side Center Cab Panel

Remove or install right hand side center cab panel in similar manner as described for louver panel (para 3-177).

3-179. Operator's Seat

a. Removal or Installation from Model 855BG-2.

(1) Refer to figure 3-137 and remove operator's seat.

(2) Install in reverse order.

b. Removal and Installation from Model 855BG-3.

(1) Refer to figure 3-138 and remove operator's seat.

(2) Install in reverse order.

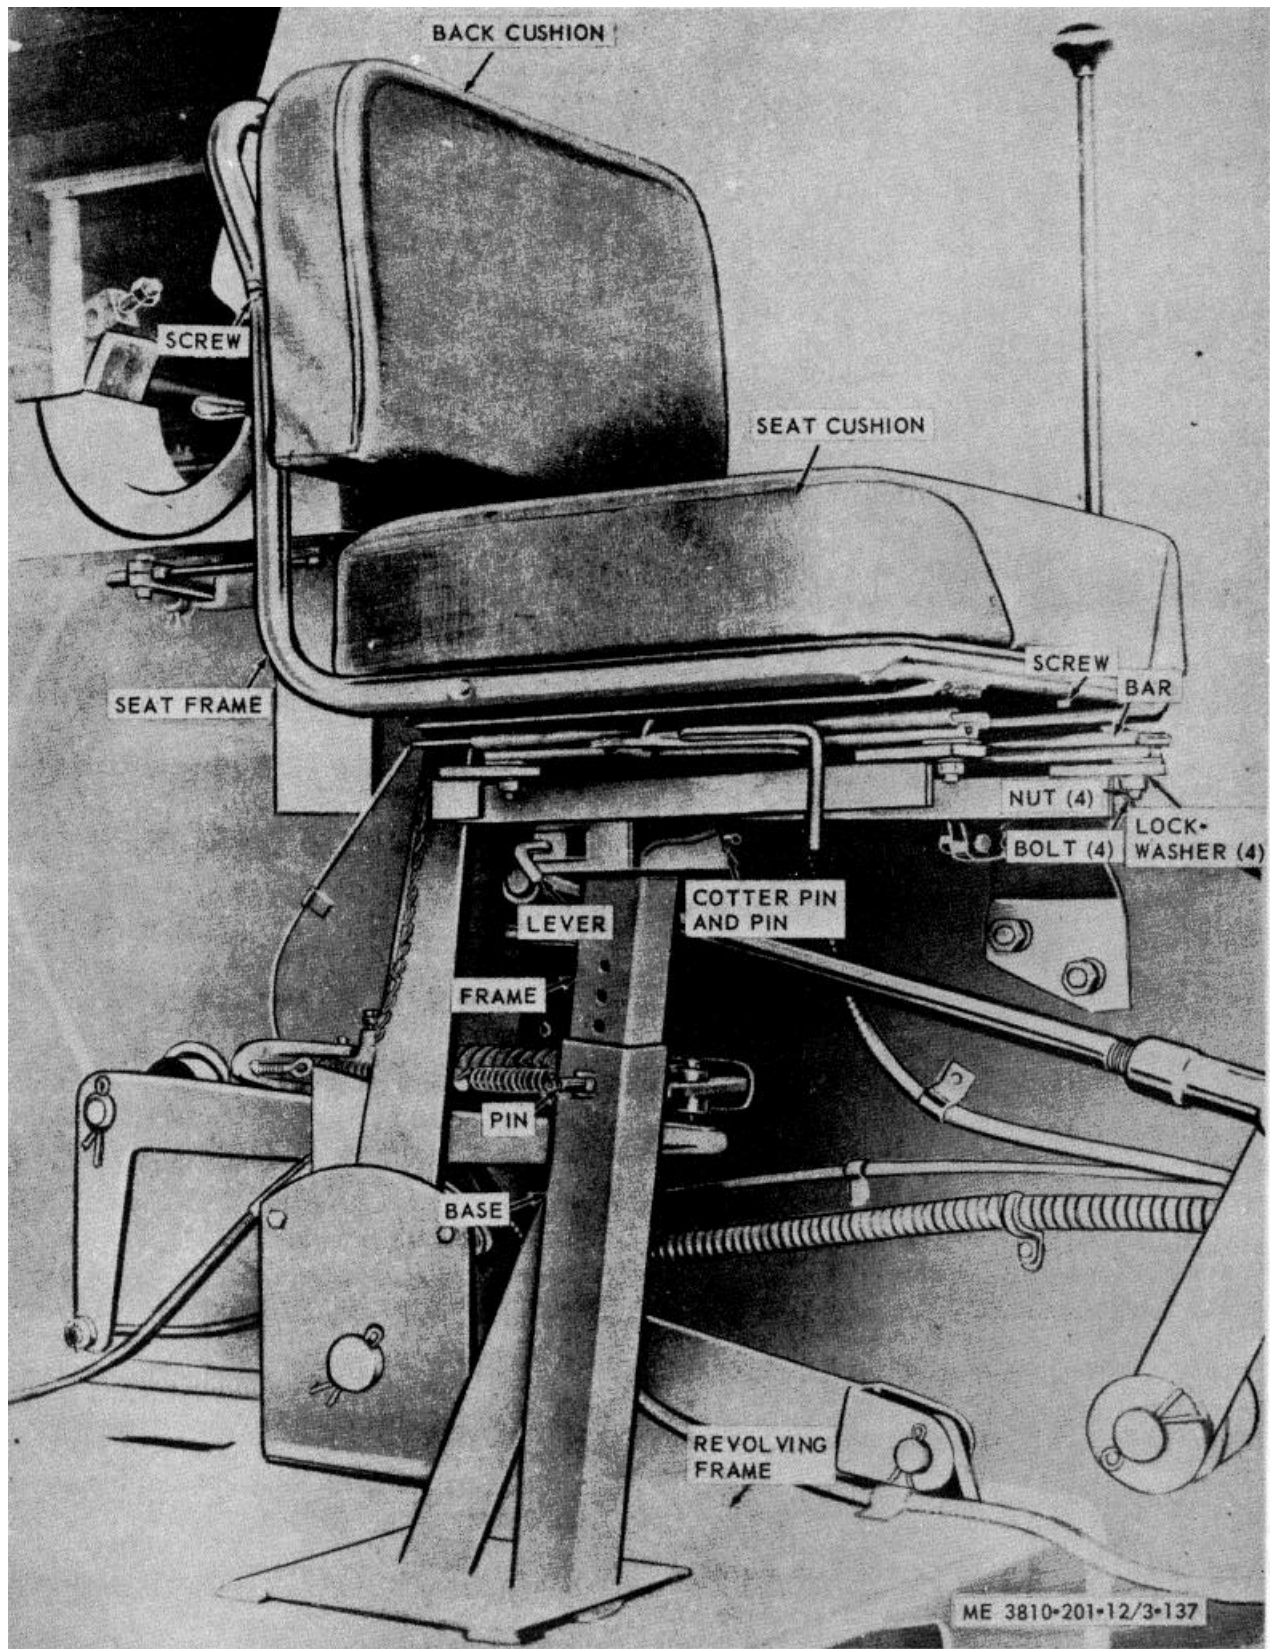


Figure 3-137. Operator's seat, removal and installation (Model 855BG-2).

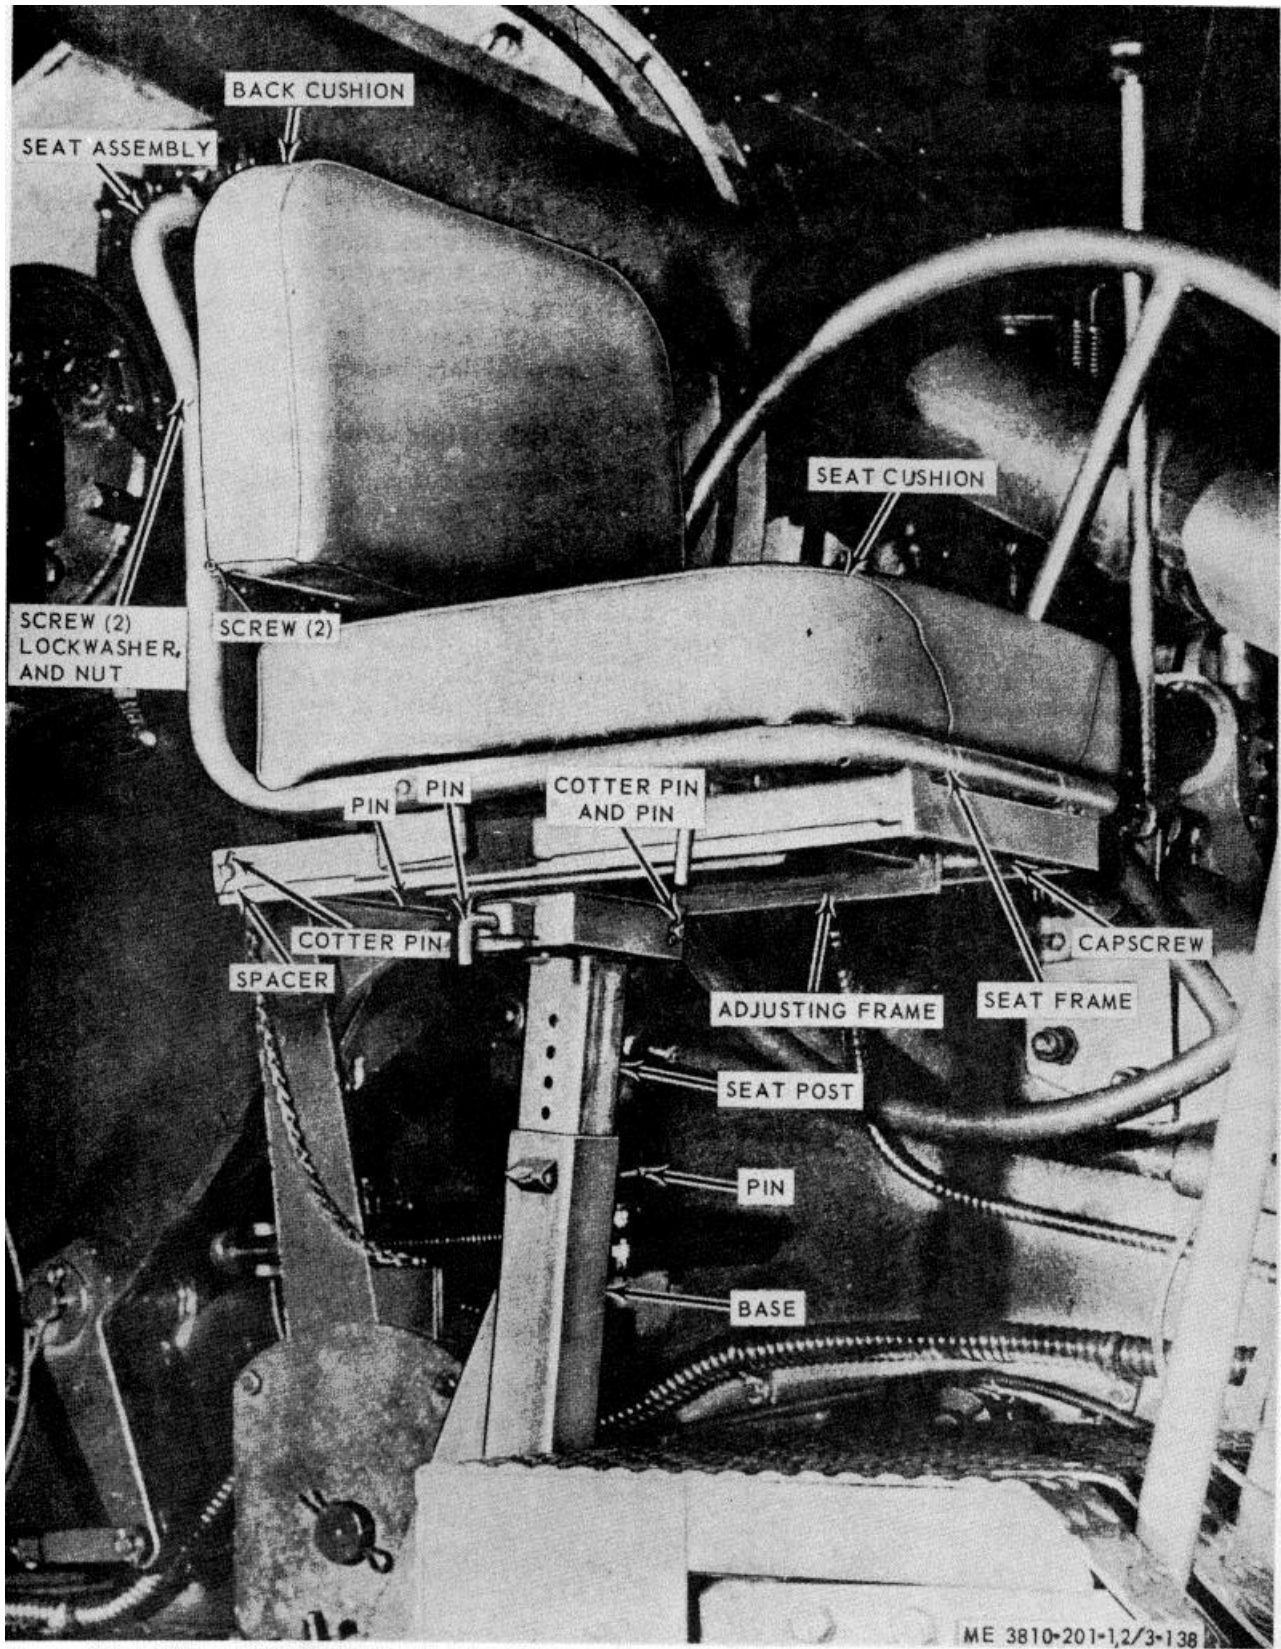


Figure 3-138. Operator's seat, removal and installation (Model 855BG-3).

Section XXIII. LIGHTS, LIGHT ENCLOSURE, AND COMPONENTS

3-180. General

The lightening system consists of upper and lower floodlights, cab lights, and panel lights, with conduit from junction boxes to light enclosure, or cab light lampholders. The panel lights are identical with those on instrument control panel and are mounted at top of lighting enclosure.

3-181. Floodlights

a. Removal and Installation.

- (1) Tag and remove electrical leads.
- (2) Remove nut (fig. 3-17) from stem inside adjusting bracket.

b. *Disassembly and Reassembly.* Refer to figure 3-139 and disassemble the floodlight. Reassemble in reverse order.

c. Cleaning, Inspection, and Repair.

- (1) Clean all metal parts in an approved cleaning solvent and dry thoroughly.
- (2) Visually inspect electrical terminals for corrosion or looseness. Inspect and test lamp for serviceable condition. Inspect mounting hardware for stripped threads or other defect. Inspect packing for deterioration.
- (3) Repair by replacing defective lamp or packing.

3-182. Cab Light

a. Removal and Installation.

- (1) Remove lamp.
- (2) Refer to figure 3-140 and remove cab light lampholder.
- (3) Install in reverse order.

b. Inspection and Repair.

- (1) Visually inspect wiring at lampholder for continuity. Inspect for frayed or defective leads. Test lamp for serviceability. Inspect hardware for damage or defect.
- (2) Repair by replacing defective wiring, lamp, or lampholder.

3-183. Light Enclosure

a. Removal and Installation.


- (1) Remove two screws and open cover (fig. 3-140).
- (2) Tag and disconnect conduit and electrical leads from light enclosure.
- (3) Remove four nuts, lockwashers, and screws, then remove light enclosure.
- (4) Install in reverse order.

b. Component Removal or Installation.

- (1) Open cover.
- (2) Tag and disconnect applicable leads(s), then remove defective component.
- (3) Install in reverse order.

3-184. Gun Case and Tool Box


Refer to figure 3-141 and remove gun case or tool box. Install in reverse order.

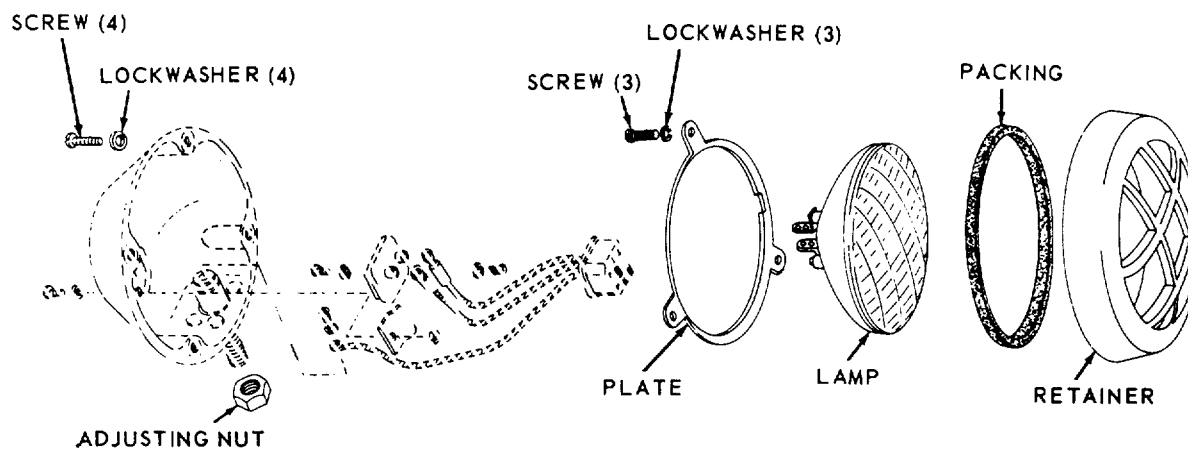

ME 3810-201-12/3-139


Figure 3-139. Floodlight, disassembly and assembly.

NOTE: TAG AND REMOVE ELECTRICAL LEADS AND MOUNTING HARDWARE AS REQUIRED.

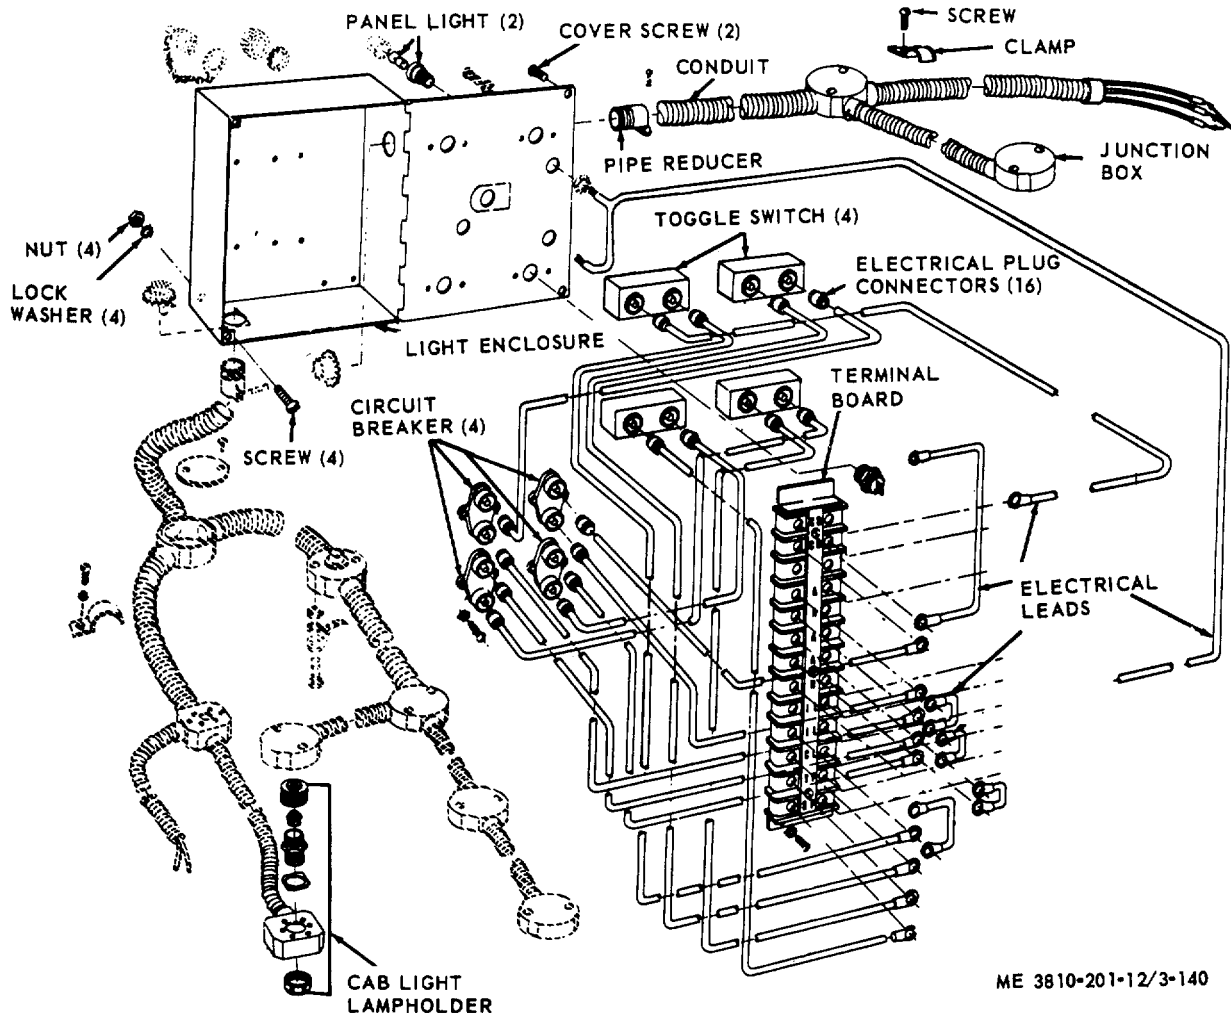

ME 3810-201-12/3-140

Figure 3-140. Light enclosure and components, removal and installation.

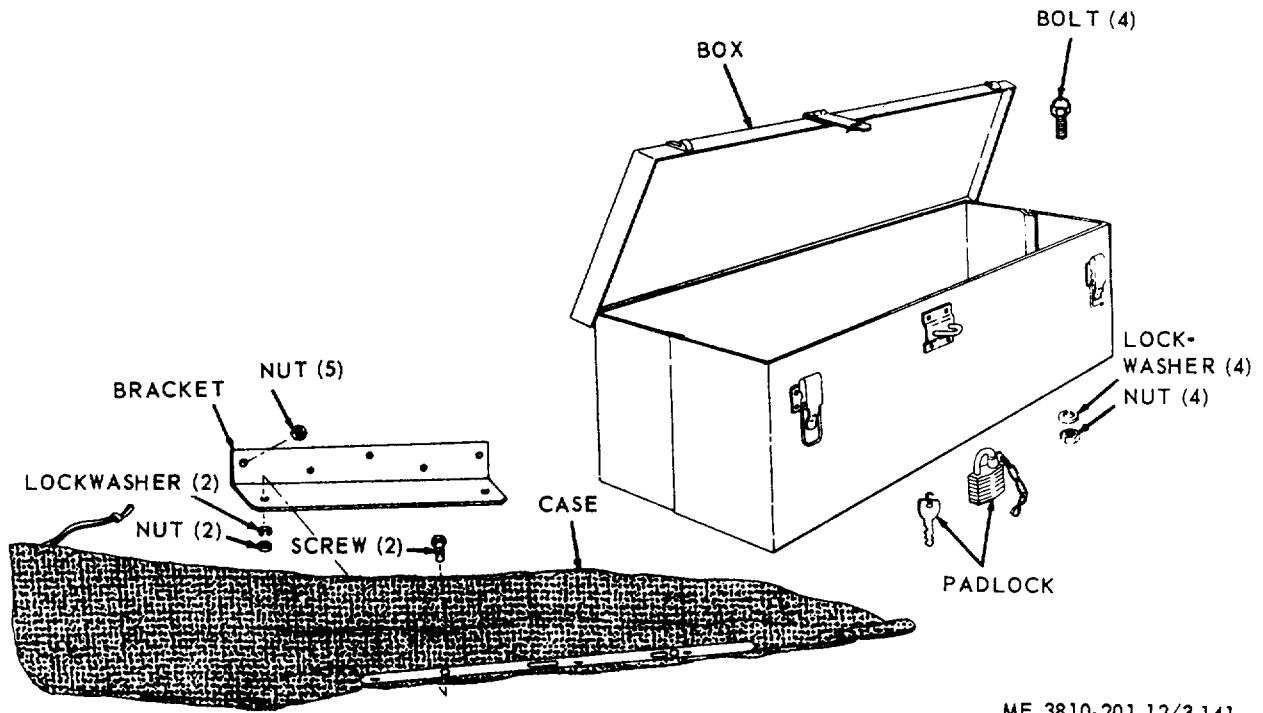

ME 3810-201-12/3-141

Figure 3-141. Gun case and tool box, removal and installation.

MATERIEL USED IN CONJUNCTION WITH CRANE-SHOVEL

Section I. SHOVEL FRONT END ATTACHMENT

4-1. General

a. *Description.* The crane-shovel basic unit is normally procured for crane operation, although front end attachments for conversion to other type operation are available, and will be described in subsequent sections of this chapter. The shovel front end attachment (fig. 4-1) consists of shovel boom dipper handle, dipper trip cable, bridle bar, saddle block, shipper shaft, crowd chain, antisway spring, crowd and retract mechanism on the boom foot, drum sprocket, planetary pinion gear, and cables. Refer to figure 4-2 for relationship of revolving frame components.

Note. When crowd and retract mechanism is not installed on boom foot, this must be accomplished at direct support maintenance before shovel front end attachment can be installed at organization.

b. *Preparation Prior to Installation of Shovel Attachment.*

(1) Remove front end attachment currently installed on crane-shovel unit (see applicable section of this Chapter).


(2) Remove cables from boom hoist and digging drum (para 3-43).

(3) Present crane-shovel at organizational maintenance for removal of lagging (para 3-131); installation of shovel sprocket on digging drum, planetary pinion gear (para 3-132), and the repositioning of planetary clutch band (para 3-130).

(4) Proceed with installation of shovel front end attachment (para 4-2).


4-2. Shovel Front End Attachment

a. *General.* The shovel front end attachment is normally positioned on cribbing (fig. 4-1) for storage between periods of use, but may be received disassembled as shown on figures 2-2 and 2-3. In the latter case, assembly of the shovel

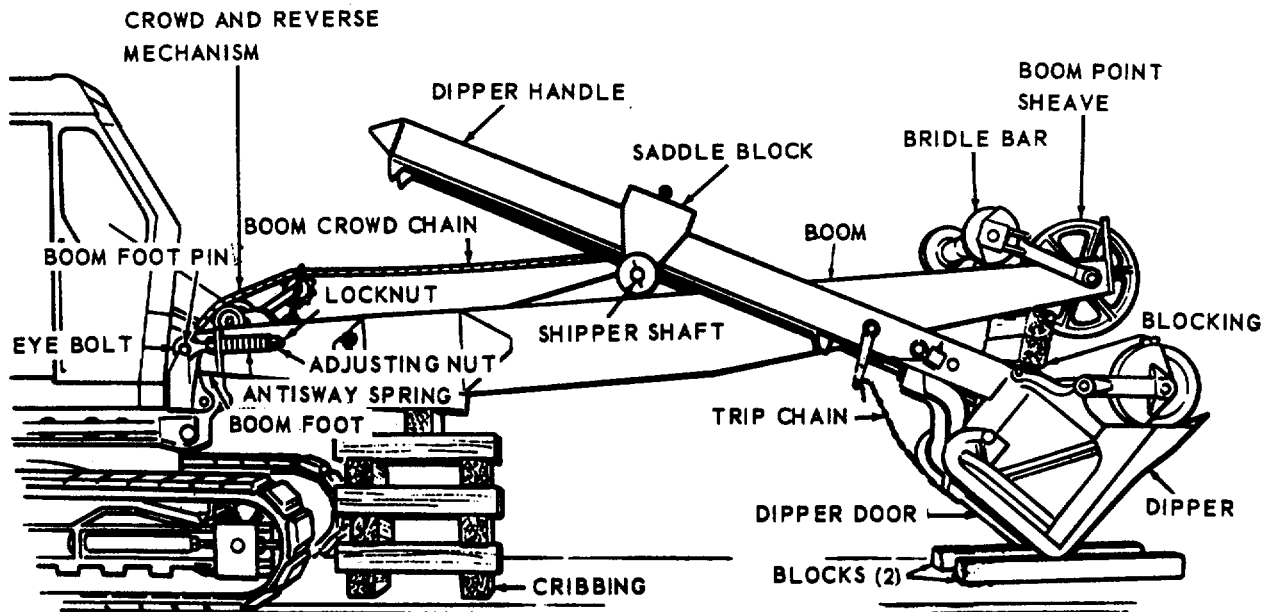

ME 3810-20 1-12/4-1

Figure 4-1. Shovel front end attachment, cribbed for removal or installation.

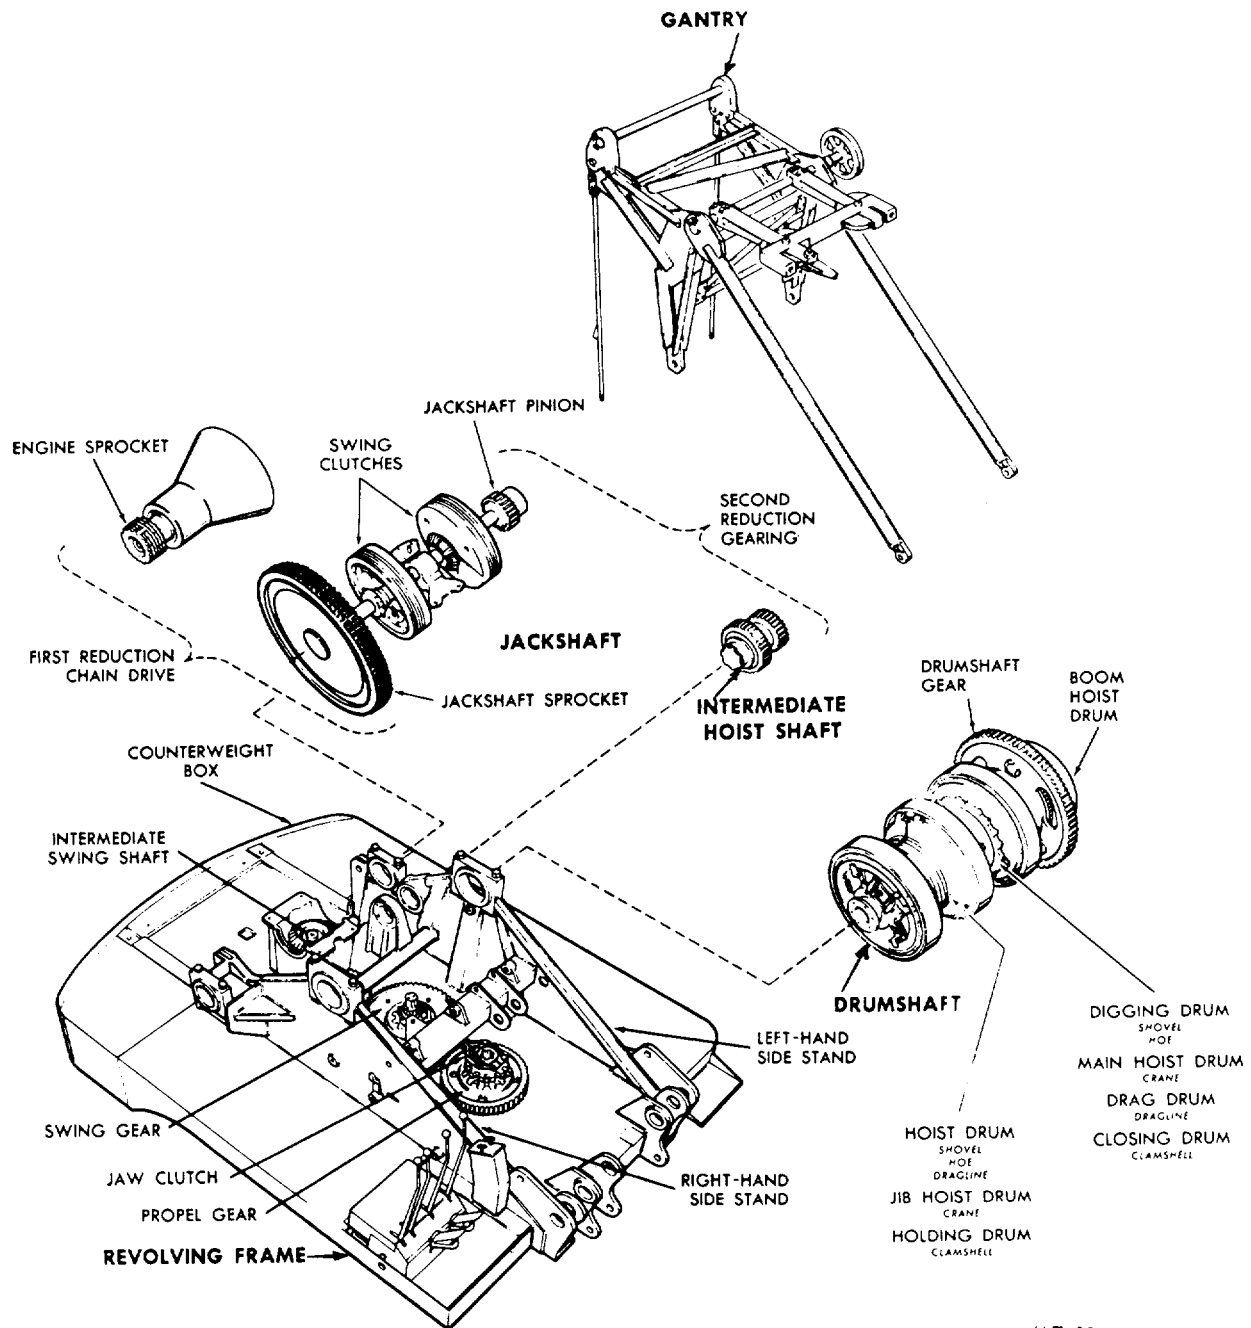

ME 3810-201-12/4-2

Figure 4-2. Revolving frame component relationship.

attachment will require the assistance of another crane, or suitable lifting device, and components should be assembled in the reverse order of removal from shovel boom (para 4-10).

b. Installation.

(1) Assure that crane-shovel basic unit has been prepared for shovel front end attachment installation as outlined in paragraph 4-1b above.

(2) Install shovel hoist cable (table 1-2) on hoist drum (fig. 4-2) (para 3-43) and shovel boom hoist cable on boom hoist drum. Wind cables on drums.

(3) Position crane-shovel basic unit at end of shovel boom as illustrated in figure 4-1; position antisway spring eye bolt at lug on revolving frame, then install boom foot pins through eye bolt; lugs on revolving frame; lugs on boom foot, then secure with cotterpins.

Note. Be sure boom foot pins are installed from outside to inside.

(4) Install trip cable (from equalizer bracket) through guide sheave on boom foot, then connect to lever underneath revolving frame.

(5) Refer to figure 2-19 and reeve both hoist cables, securing them at dead end sockets with cable clamps.

(6) Tighten adjusting nuts (fig. 4-1) on antisway springs to obtain spring tension, then hold adjustment by tightening locknuts.

(7) Install revolving frame crowd' chain on crowd reversing mechanism then on digging drum sprocket, and secure by installing master link (para 4-3), then adjust (para 3-35). Install boom crowd chain on reversing mechanism and sprocket on shipper shaft, then adjust in a similar manner.

(8) Adjust dipper trip (para 3-37) and trip cable (para 3-38).

(9) Perform preventive maintenance checks and services (para 3-6), then raise boom (para 2-12b).

c. Removal.

(1) Move crane-shovel unit to storage area, an area that is level, preferably hard surfaced, under cover, and suitable for storage of shovel front end attachment.


(2) Position two blocks, approximately 24 feet from boom foot (fig 4-1), then lower boom (para 2-12b) until dipper rests on blocks. Position blocking between dipper handle and boom point, then lower boom until point rests on blocking.

(3) Build a substantial crib under boom, near foot, until there is just room enough to insert wedges, or jacks, to take weight of boom off boom foot pins.

(4) Remove master pin of revolving frame crowd chain and remove chain from shovel sprocket on digging drum. Reinstall master pin and position crowd chain back over boom crowd chain temporarily, until cleaning and preserving is performed ((10) below).

(5) Loosen locknut and adjusting nut from antisway spring until all tension is removed from springs.

(6) Remove cable clamps from dead end sockets of dipper hoist cable and boom hoist cable (fig. 2-10) and carefully reel them in on hoist

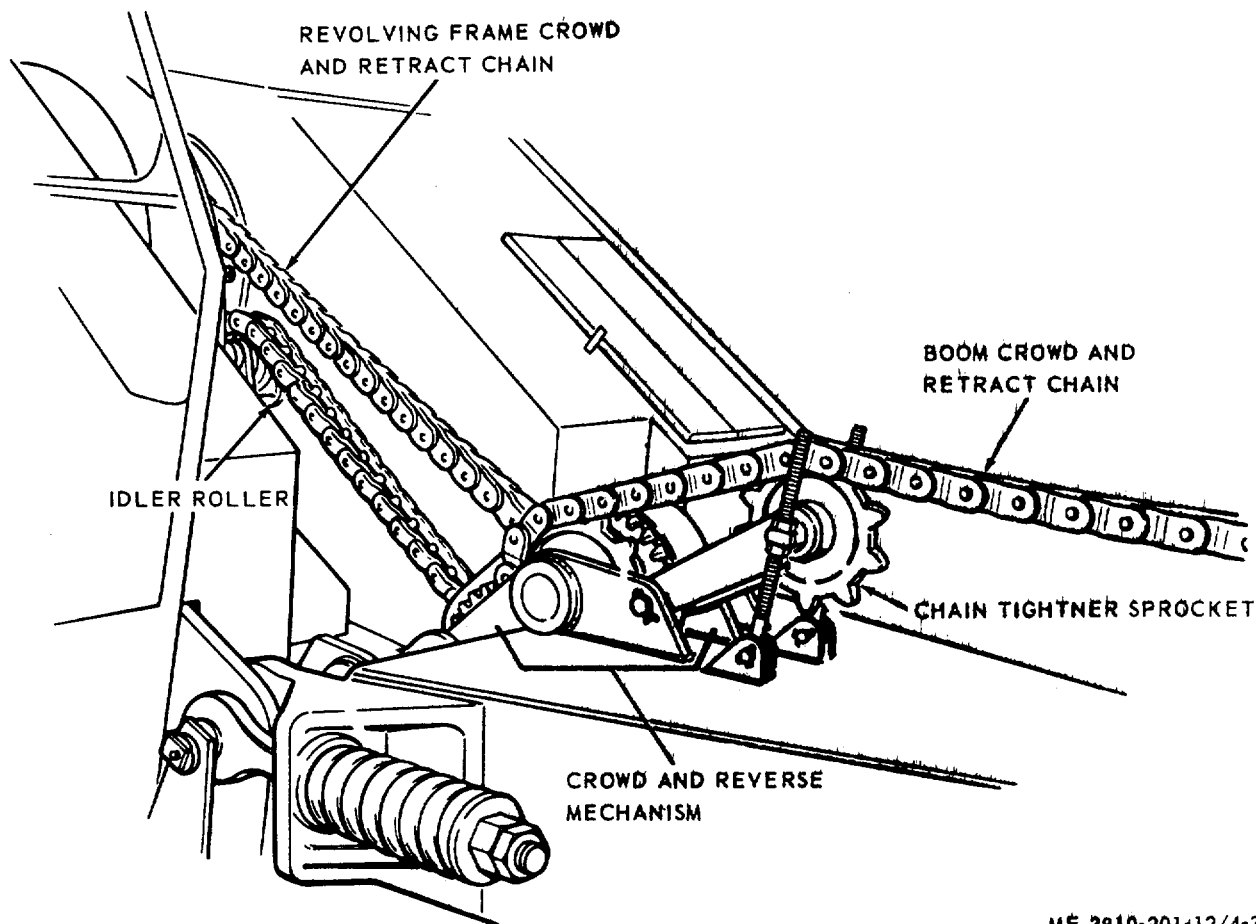

ME 3810-201-12/4-3

Figure 4-3. Crowd and retract chain, removal, installation, and adjustment.

drums, guiding ends through sheaves as this is accomplished.

(7) Disconnect trip cable from lever underneath revolving frame, remove from guide sheaves at boom foot and secure it to boom and equalizer bracket.

(8) Remove cotter pins from boom foot pins (2), drive wedges between cribbing and boom foot until weight is off foot pins (or raise jacks), then remove boom foot pins.

(9) Move crane-shovel unit away from shovel front end attachment.

(10) When attachment is to be stored on blocks for a prolonged period, clean with an approved solvent, dry thoroughly, and lubricate attachment in accordance with current lubrication order. (LO 5-3810-301-12), paying particular attention to dipper handle, crowd chains, and crowd and reversing mechanism. Protect all unpainted surfaces from rust or corrosion.

(11) When removal is for purpose of installing crane front end attachment, remove shovel hoist cable (para 3-43); shovel boom hoist cable; shovel sprocket and planetary pinion gear from digging drum (para 3-132); reposition planetary brake band (para 3-130), then install crane lagging (para 3-131).

Note. When removal of shovel front is for purpose of installing any attachment except shovel front, do not install planetary pinion gears.

4-3. Crowd and Retract Chain, Idler, and Tightener

a. Crowd and Retract Chain Removal and Installation.


(1) Remove cotterpin, roller, and master pin from link of boom crowd and retract chain (fig. 4-3), then lift chain off crowd and reverse mechanism at foot of boom, chain tightener sprocket, and shipper shaft sprocket.

(2) Remove revolving frame crowd and retract chain from digging drum sprocket, idler roller, and crowd and reverse mechanism in manner similar to (1) above.

(3) Install in reverse order of removal.

b. Chain Tightener Adjustment. Refer to paragraph 3-35 and adjust chain tightener.

c. Roller Adjustment. Adjust in manner similar to that used for chain tightener (para 3-35)

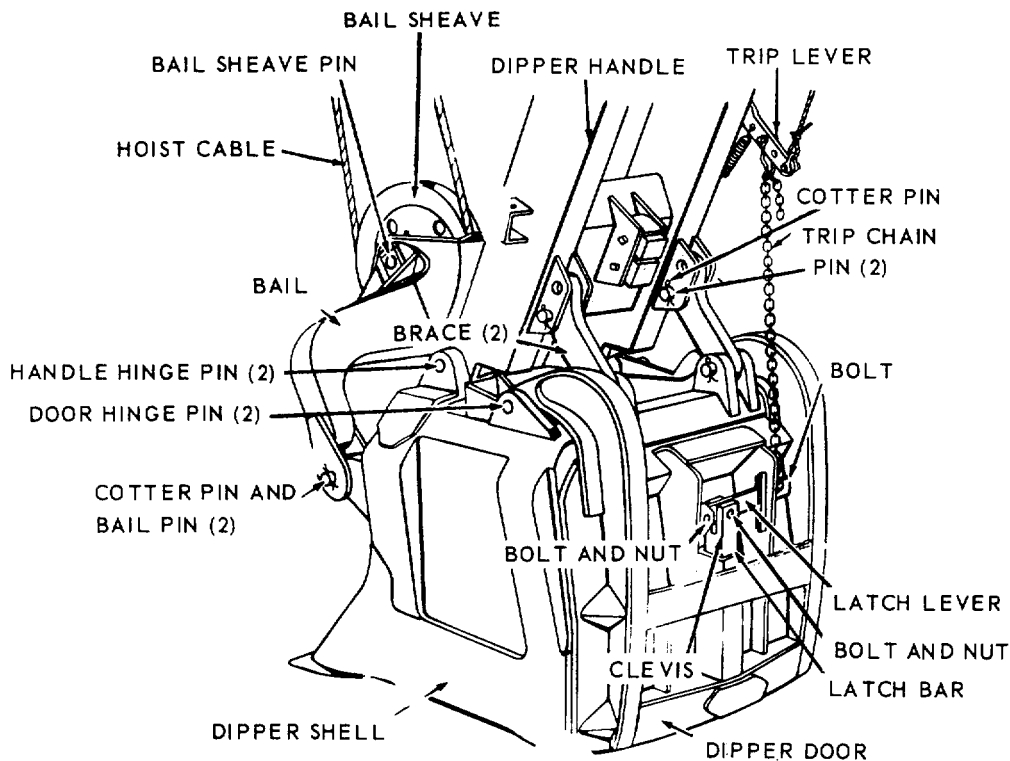

ME 3810-201-12/4-4

Figure 4-4. Shovel dipper, removal, disassembly, reassembly, and installation.

4-4. Shovel Dipper a. Removal.

(1) Lower dipper to rest on blocks, then remove hoist cable from bail sheave only (fig. 2-19).

(2) Refer to figure 4-4, disconnect trip chain from trip lever, remove cotterpins from two pins securing braces to dipper handle, then remove pins.

(3) Remove cotterpin and washer from two handle pins, remove handle pins, then remove dipper from handle.

b. Disassembly and Reassembly of Dipper.

(1) Remove cotterpin and bail pin (fig. 4-4), then remove bail.

(2) Remove bolt from chain at latch lever, then remove chain.

(3) Remove cotterpin and pin from two braces, then remove braces.

(4) Remove two bolt and nut from latch lever, remove latch lever, then remove clevis and latch bar from dipper door.

(5) Remove cotterpin from two door hinge pins, remove pins, then remove dipper door.

(6) When necessary to remove latch keeper for repair or replacement, remove two short and four long rivets then remove keeper.

(7) Disassemble bail (para 4-6).

(8) Reassemble in reverse order of disassembly.

c. Cleaning, Inspection, and Repair.

(1) Clean all parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect all parts for signs of excessive wear, cracks, breaks, bends, stripped threads on hardware, or elongation of holes.

(3) Repair by welding cracks or breaks, straightening bends, and replacing all defective hardware or excessively worn parts.

d. Installation.

(1) Position dipper at end of dipper handle, install two handle pins and secure each with washer and cotterpin.

(2) Place two braces at lugs on dipper handle, install pins and secure with cotterpins.

(3) Connect door trip chain to trip lever, then reeve hoist cable (fig. 2-19).

4-5. Dipper Handle

a. Removal.

(1) Open boom crowd chain by removing cotterpin, roller, and master pin, then lifting chain off sprocket on shipper shaft.

(2) Remove shovel bucket (para 4-4).

(3) Remove dipper trip cable from dipper handle (para 4-8).

(4) Lash saddle blocks to boom so that they are prevented from changing angles when dipper handle is removed from shipper shaft.

(5) Fasten one end of a heavy rope about three feet from dipper end of handle, the other end of rope to boom point of lifting device. Move dipper handle until pointed end is almost at shipper shaft, and almost free of saddle blocks.

(6) Lower dipper end, if necessary, then work points of handle over pinions, carefully, and lower dipper handle to ground.

b. Installation.

(1) Position shovel boom to receive dipper handle, making sure saddle blocks are lashed secure to boom.

(2) Position lifting device, and clamp hoist cable around dipper handle at balance point (about three feet from dipper end).

(3) Lash a heavy rope to point end of handle, thread it through, or over shipper shaft, then station one man on each side of boom to help guide dipper handle into saddle blocks.

(4) Pull hoist cable in slowly and move lifting device forward.

(5) Guide dipper handle into saddle blocks, making sure that racks engage with pinions on shipper shaft.

(6) Install boom crowd chain over sprocket on shipper shaft and crowd and reversing mechanism at foot of boom and secure with master pin, roller, and cotterpin (para 4-3).

(7) Install dipper trip cable on dipper handle (para 4-8).

(8) Install shovel dipper (para 4-4).

4-6. Dipper Bail and Sheave

a. Removal.

(1) Remove shovel dipper (para 4-4).

(2) Remove bail (para 4-4b (1)).

b. Disassembly and Reassembly.

(1) Remove cotterpin and slotted nut from sheave pin.

(2) Remove sheave pin, then remove sheave from bail.

(3) Reassemble by reversing steps (1) and (2) above.

c. Cleaning and Inspection.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect sheave for scored sleeve bearing, cracks, worn groove, or other defect. Inspect bail for cracks, breaks, elongated mounting holes, or defective mounting hardware. Replace all defective parts.

d. Installation.

(1) Install bail on dipper (para 4-4b).

(2) Install shovel dipper (para 4-4d).

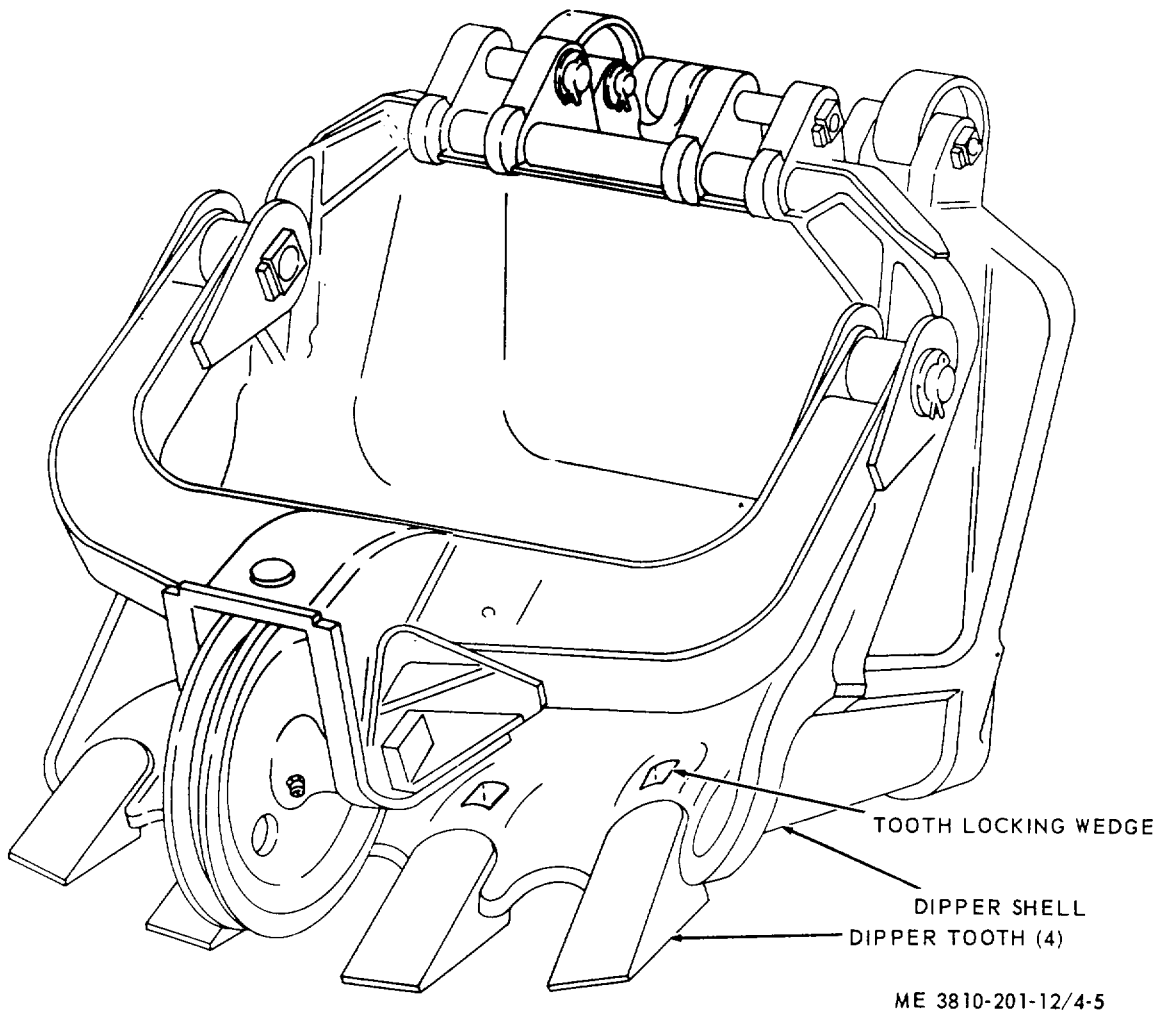


Figure 4-5. Dipper teeth, removal and installation.

4-7. Dipper Teeth

Caution: Never dig with shovel front end attachment while a tooth is missing from dipper, even for a short time. The tooth socket will wear to such an extent that a replacement tooth will never fit properly. Reinstall old worn tooth and use until new one is available, when continued operation is imperative.

a. Tooth Removal.

(1) Lower dipper to rest on blocking or cribbing at door end, allowing crewman room to drive tooth locking wedge from tooth (fig. 4-5).

(2) Use drift punch or other suitable tool at small point (bottom of wedge), then drive upward until wedge is free of tooth.

(3) Loosen tooth in socket with side-to-side taps of hammer, then remove defective tooth.

(4) Remove remaining teeth in a similar manner.

b. Tooth Installation.

(1) Clean tooth and wedge socket, insert tooth in position, then drive tooth until it is seated in socket.

(2) Position tooth locking wedge and drive it into place until tooth is secure.

(3) Install remaining teeth in a similar manner.

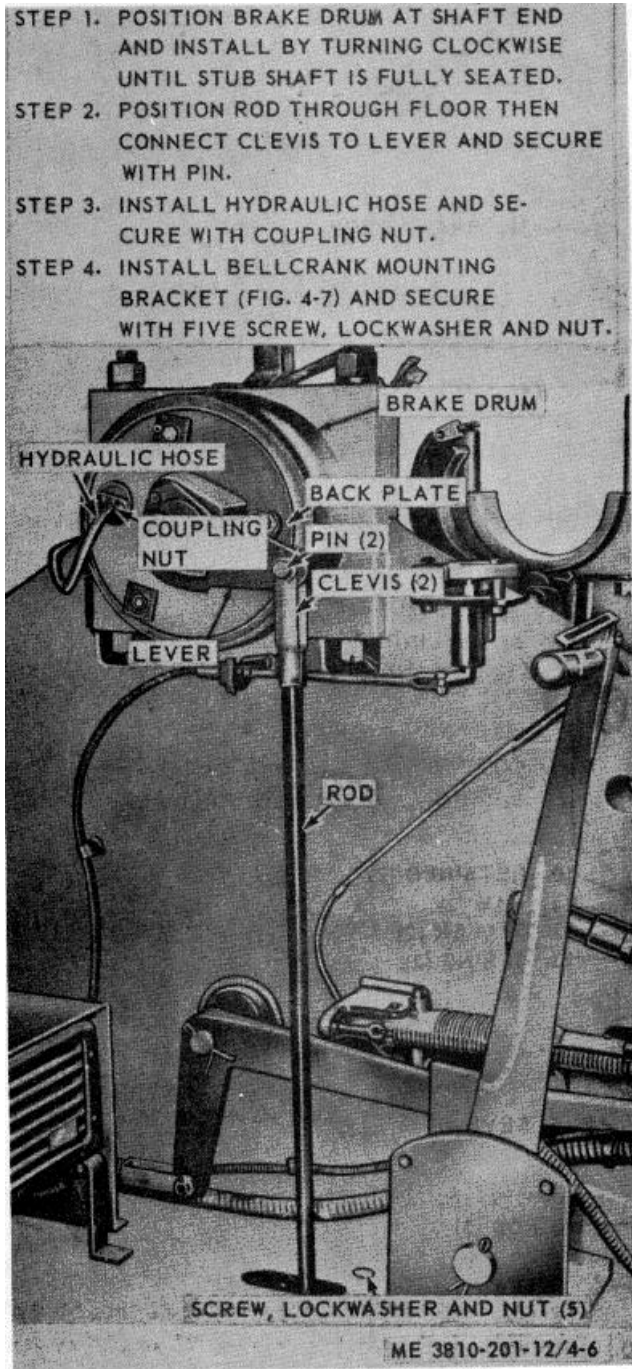


Figure 4-6. Dipper trip mechanism, removal or installation.

4-8. Dipper Trip Mechanism and Trip Lines

a. *General.* The dipper trip mechanism (fig. 4-6) is used for opening the door of shovel dipper only, but once installed on main hoist drum shaft, need not be removed when shovel is converted to any other front end arrangement. The boom trip line, consisting of chain from bucket door latch to dipper handle trip lever; trip line

from trip lever over idler sheave on shipper shaft, through equalizer sheave on equalizer bracket back to take up drum on shipper shaft (fig. 4-7). The revolving frame trip line runs from equalizer bracket on boom, through guide sheaves on bracket mounted on revolving frame at boom foot to bellcrank lever mounted underneath revolving frame. When properly adjusted (para 3-37 and 3-38), dipper is tripped when dipper trip lever (fig. 2-23) is actuated.

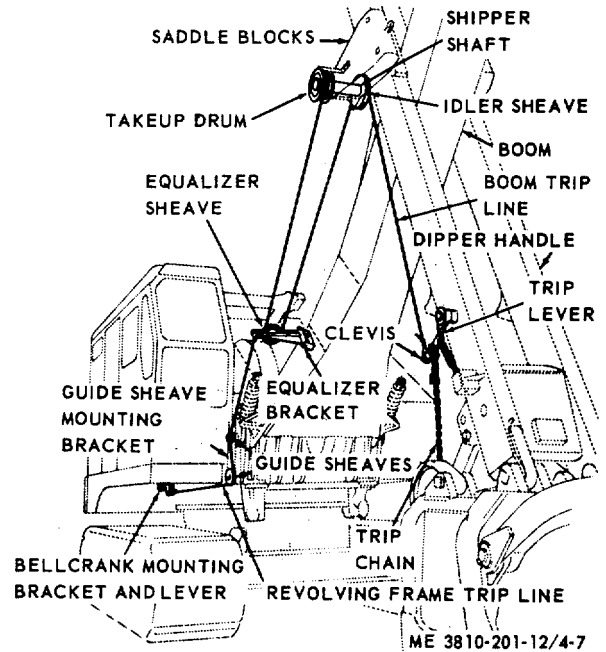


Figure 4-7. Dipper trip lines, installed view.

b. Installation.

(1) Install dipper trip lever (fig. 2-23) and secure with pin to mounting bracket. Install hydraulic compensator and line to main header (para's 3-118, 119 and 120).

(2) Refer to figure 4-6 and install dipper trip mechanism.

(3) Install bellcrank mounting bracket under revolving frame, and guide sheave mounting bracket on revolving frame at boom foot (fig. 4-7).


(4) When shovel front end attachment is installed, install revolving frame trip line.

(5) Adjust dipper trip mechanism (para's 3-37 and 3-38).

Note. The above procedure assumes that shovel tripping mechanism is installed on boom of shovel front end attachment.

c. *Removal.* The entire dipper trip mechanism may be removed by reversing procedure in b above, or individual components may be removed for replacement or repair as follows:

(1) *Dipper trip clutch mechanism removal.*

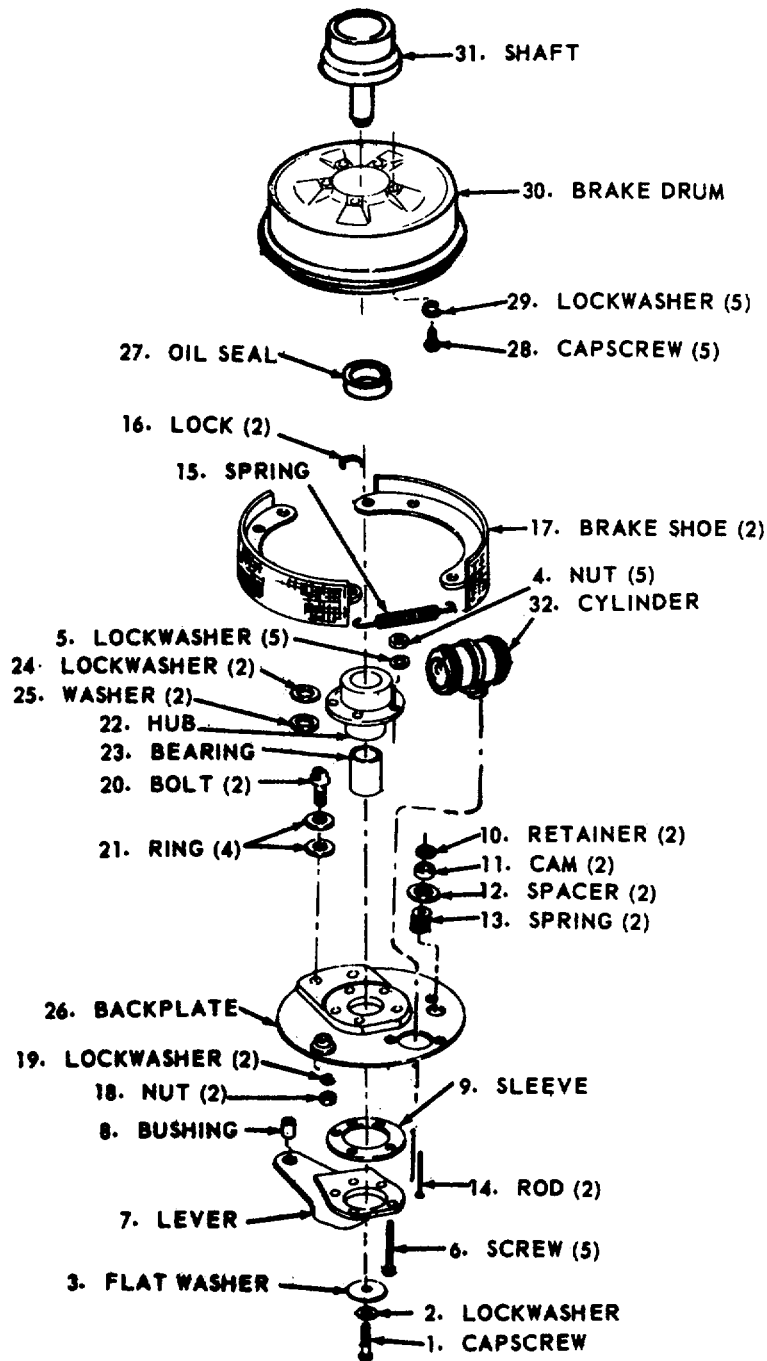

ME 3810-201-12/4-8

Figure 4-8. Dipper trip clutch mechanism, disassembly and reassembly.

(a) Remove pin from clevis at lever (fig. 4-6) and remove clevis from lever.

(b) Loosen coupling nut and remove hydraulic hose from wheel brake cylinder.

(c) Grasp brake drum firmly and turn counterclockwise to remove mechanism from end of main hoist drum shaft.

(2) Disassembly and reassembly. Refer to

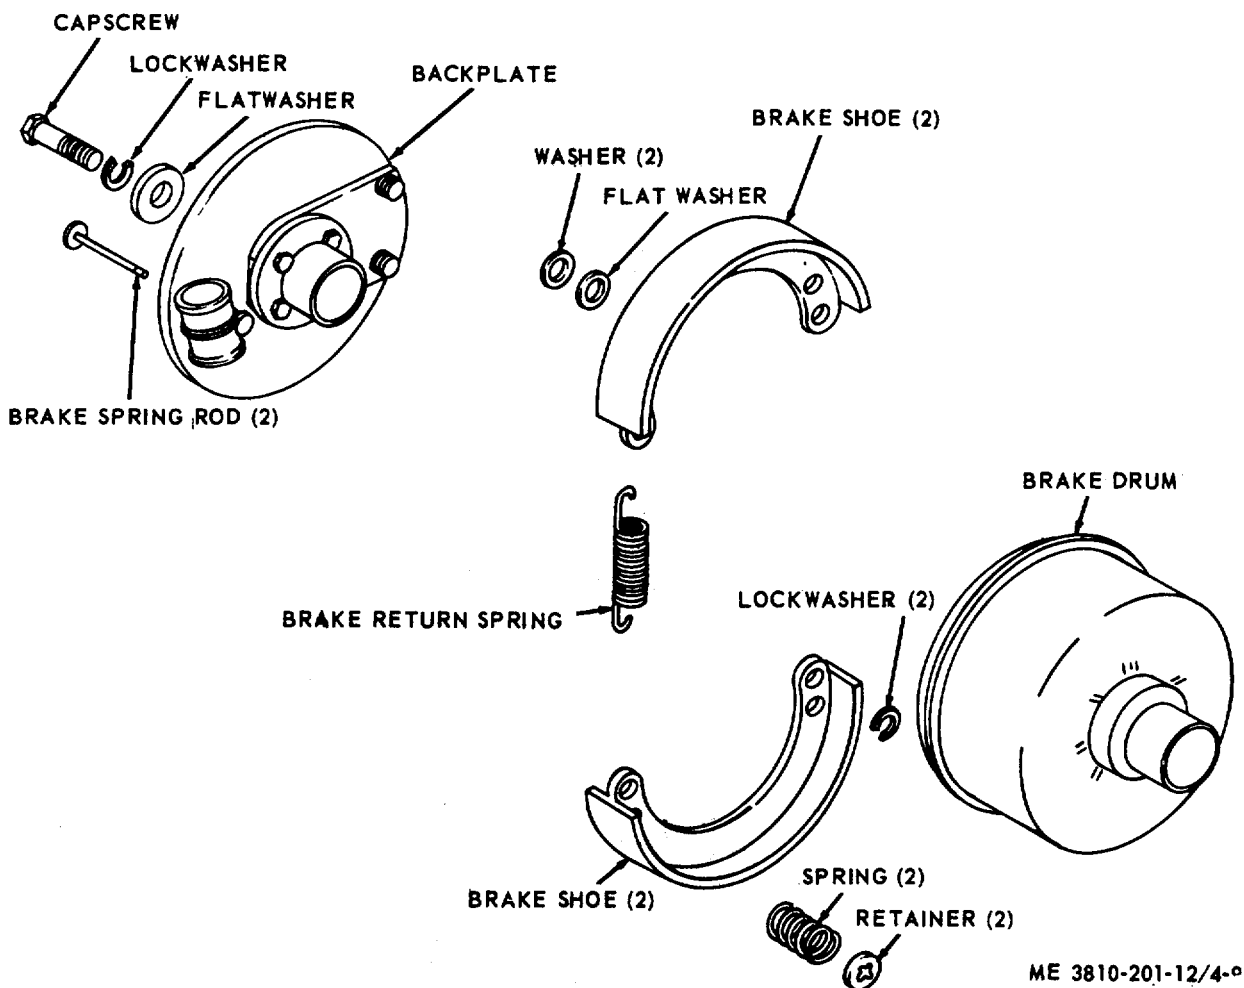


Figure 4-9. Clutch brakeshoes, removal and installation.

figure 4-8 and disassemble dipper trip clutch mechanism in numerical sequence. Assemble in reverse order.

(3) Cleaning, Inspection and Repair.

(a) Clean all parts in an approved cleaning solvent and dry thoroughly.

(b) Visually inspect brakeshoes for excessively worn, or defective lining. Replace brakeshoes when lining is defective.

(c) Visually inspect brakedrum for scored or damaged friction surface. Replace a damaged or defective brake drum.

(d) Visually inspect mounting hardware, seals, springs or retainers for defects. Replace defective parts.

(e) Visually inspect hydraulic cylinder for leakage, or lack of freedom in movement of piston. Replace a defective cylinder.

4-9. Dipper Trip Clutch Brakeshoes

a. Removal.

(1) Remove pin (fig. 4-6) from clevis at lever and disconnect clevis.

(2) Disconnect hydraulic hose at coupling nut.

(3) Remove cap screw (fig. 4-9), lockwasher, and flatwasher, then remove backplate from brake drum.

(4) Remove two retainers, springs, and brake spring rods.

(5) Disconnect and remove brake return spring.

(6) Remove two locks, brakeshoes, washers, and flatwashers from back plate.

b. Cleaning, Inspection and Repair.

(1) Clean all parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect brakeshoes for excessively worn or cracked lining. Replace both shoes when lining is defective.

(3) Check brake drum for scored or damaged friction surface. Replace a defective brake drum (para 4-8 above).

c. Installation.

(1) Position brakeshoes (fig. 4-9) on back plate, install washer and flatwasher, then secure with locks.

- (2) Install brake return spring.
- (3) Install two brake spring rods, springs, and secure with retainers.
- (4) Install back plate in brake drum. Make sure lever (fig. 4-6) is in proper position, then secure back plate to mechanism with flatwasher (fig. 4-9) lockwasher, and capscrew.
- (5) Connect hydraulic hose at coupling nut, position clevis on lever, then secure with pin.

4-10. Shovel Boom

a. Removal.

- (1) Remove shovel dipper (para 4-4).
- (2) Remove dipper handle (para 4-5).
- (3) Lower shovel boom (para 2-12b) to cribbing similar to that shown in figure 4-1 and disconnect boom from crane-shovel unit (para 4-2).

b. Cleaning, Inspection and Repair.

- (1) Clean shovel boom with an approved cleaning solvent and dry thoroughly.

- (2) Visually inspect boom for cracks, breaks, or excessive wear at boom foot, point, or saddle blocks. Inspect bumper blocks for excessive wear.

- (3) Repair boom by replacing worn bumper blocks, or welding small cracks. Report large cracks, bends, or excessive wear beyond scope of organization repair to direct support maintenance.

Note.

When shovel boom has been returned to direct support for repair or replacement, be sure the returned or replacement boom comes equipped with boom point sheaves, bridle bar, shipper shaft, and crowd and reverse mechanism.

c. Installation.

- (1) Install shovel boom (para 4-2).
- (2) Install dipper handle (para 4-5).
- (3) Install shovel dipper (para 4-4).
- (4) Perform preventive maintenance checks and services (para 3-6).

Section II. CLAMSHELL, CRANE, AND DRAGLINE FRONT AND ATTACHMENTS

4-11. General

The clamshell, crane, and dragline front end attachments use a similar boom arrangement, which consists of the base section, an upper section, and which may be lengthened by insertion of boom section(s) (para 4-13). For crane operation, there is the jib boom attachment that may be installed as required (para 4-21). For clamshell operation, a tagline winder (para 4-14) is used to stabilize the bucket. For dragline operation, a fairlead and sheaves (para 4-16) is installed at revolving frame. All of these attachments use the boom backstop (para 4-22), radius (boom angle) indicator (para 4-23) and boom harness spreader (para 4-15). All use drum cable lagging (para 3-131) and cables (table 1-2), although size and lengths differ according to operation being performed, or length of boom in use.

This section will cover organizational maintenance as outlined in Maintenance Allocation Chart.

4-12. Drum Cable Lagging

The drum lagging for crane, clamshell, and dragline are removed, or installed, in manner similar to that described in paragraph 3-131.

4-13. Boom

a. Removal.

- (1) Disconnect boom backstop from gantry (para 4-22).
- 4-10 (2) Lower boom (para 2-12b) to rest on cribbing (fig. 2-6).

- (3) Refer to reeving diagram of front end attachment in use, disconnect boom hoist, hoist, digging, or drag cables at dead end socket, then wind cables on drums slowly, while guiding cable end through sheaves.

- (4) Use wedges between cribbing at boom foot and boom; drive them in from each side to take weight off boom foot pins; remove cotterpins, then remove boom foot pins (fig. 4-10).

- (5) Move crane-shovel basic unit away from boom.

b. Disassembly and Reassembly.

- (1) Remove two cotter pins (fig. 4-10) and pin, then remove boom backstop. Disassemble boom backstop (para 4-20).

- (2) Remove radius indicator (para 4-23).

- (3) Remove two pendant cables (fig. 4-10) from boom point, remove cotterpins and pins, then remove cables from boom spreader.


- (4) Remove 16 nuts, lockwashers, and bolts securing base section to upper section, or boom (extension) section (fig. 4-11).

Note.

When boom (extension) selection is installed in boom, proceed as in step (5) below.


- (5) Remove 16 nuts, lockwashers, and bolts securing boom (extension) section to upper section, then remove boom (extension) section from upper section.

- (6) Separate the two 10 foot pendant cables

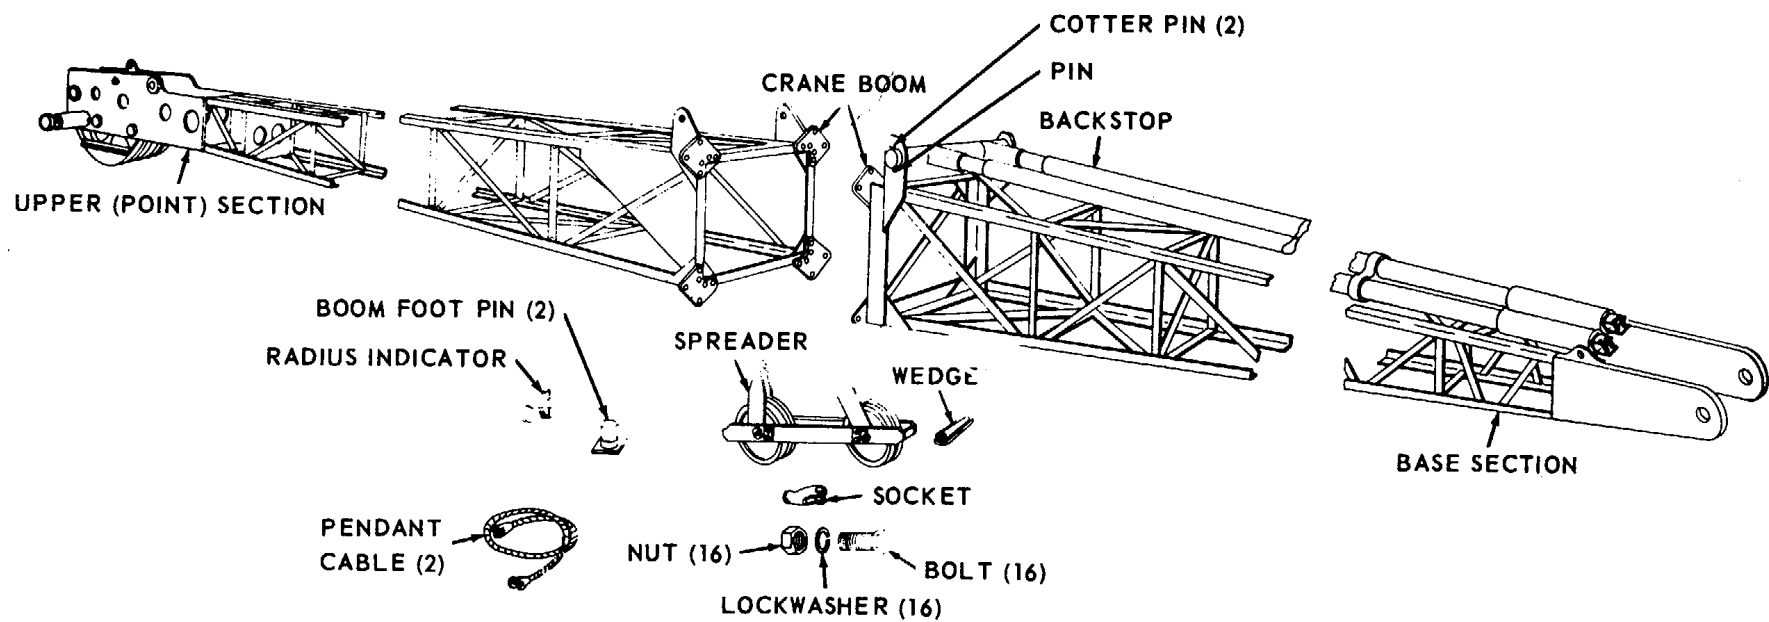

ME 3810-201-12/4-10

Figure 4-10. Boom disassembly and reassembly.

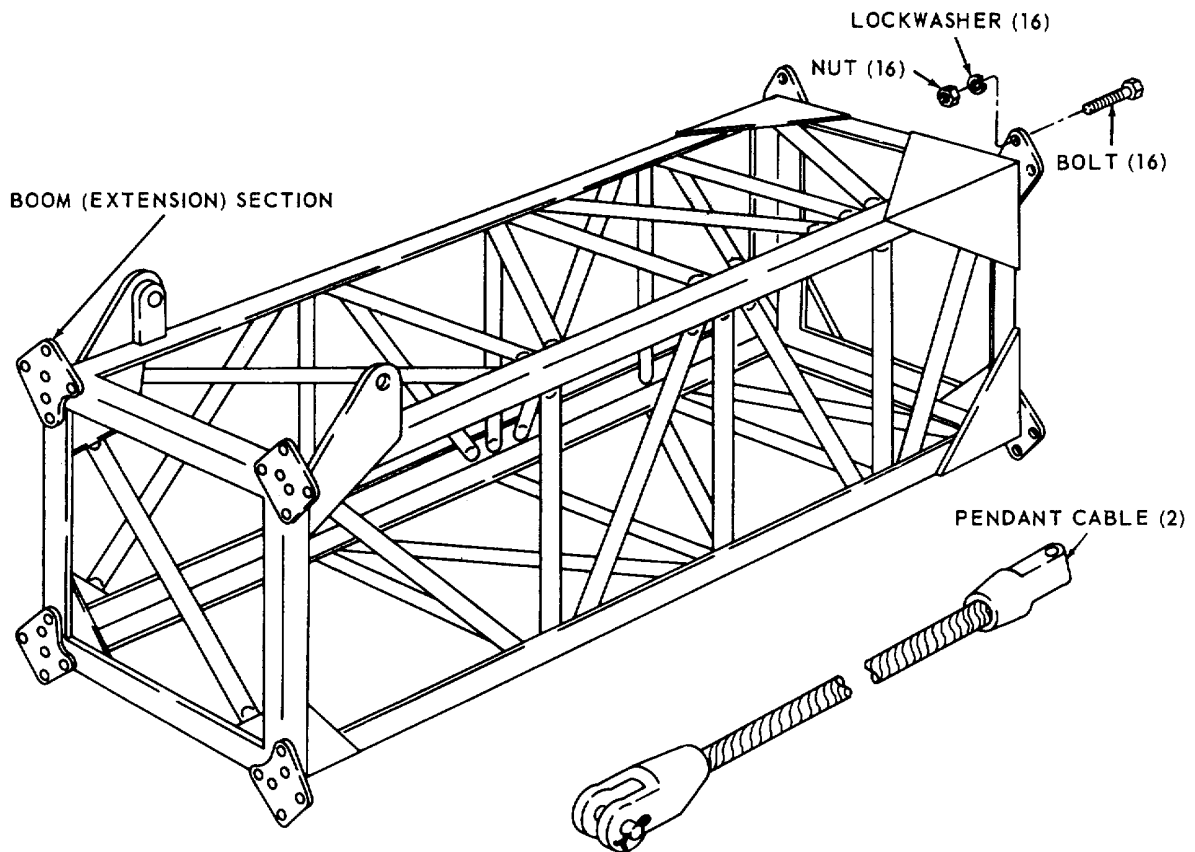

ME 3810-201-12/4-11

Figure 4-11. Boom (extension) section, removal and installation.

from the 25 foot cables by removing cotterpins and pins from rope sockets.

(7) Remove boom point sheaves (para 4-20) from upper section.

(8) Reassembly by reversing steps (7) through (1) above.

Note.

When boom (extension) section is not used, eliminate steps (5) and (6) above.

c. Cleaning, Inspection and Repair.

(1) Clean all parts in an approved cleaning solution and dry thoroughly.

(2) Visually inspect all parts for signs of excessive wear, damaged threads, scored bushings, damaged bearings, or other defects.

(3) Repair by replacing worn or defective parts.

4-14. Tagline Winder

a. Removal.

(1) Disconnect tagline from clamshell bucket and remove line from reel (fig. 4-12), or wind on reel and secure loose end.

(2) Remove four nuts, lockwashers, bolts, and two plates securing left end of tagline winder to boom.

(3) Remove four nuts, lockwashers, two U bolts, and two plates securing right end of winder to boom, then lift tagline winder from boom.

b. Cleaning and Inspection.

(1) Clean tagline winder with an approved cleaning solvent and dry thoroughly.

(2) Inspect mounting hardware for burrs, stripped threads, or cracked plates. Replace defective hardware. Replace a defective tagline winder.

c. Installation.

(1) Position tagline winder in boom, install two U bolts, and two plates, then secure right end of winder with four lockwashers and nuts.

(2) Install two plates, four bolts, and four lockwashers, then secure left end of winder to boom with four nuts.

(3) Install tagline on winder, then attach line to clamshell bucket.

4-15. Boom Harness Spreader

a. Removal and Installation.

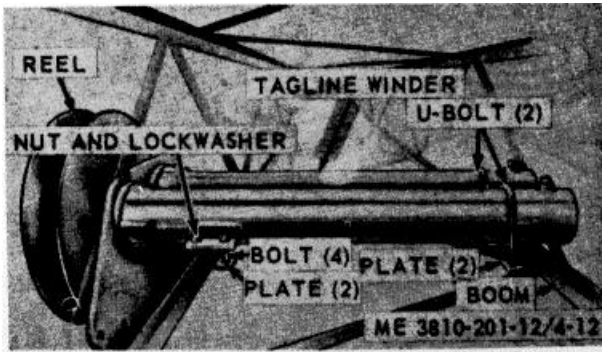


Figure 4-12. Tagline winder, removal and installation.

(1) Lower boom (para 2-12b) to rest on cribbing (fig. 2-6), then slack off on boom hoist cable until spreader rest on boom.

(2) Disconnect boom hoist cable from dead end socket on gantry, then wind cable on boom hoist drum slowly while guiding cable end through sheaves (fig. 4-13).

(3) Remove two cotterpins and pins, then remove two cable sockets from boom harness spreader.

(4) Lift the spreader off the boom.

(5) Install in reverse order.

b. Disassembly and Reassembly.

(1) Remove four capscrews, lockwashers, and two keeper plates which secure two pins in spreader.

(2) Remove two pins and lift four sheaves from spreader.

(3) Reassemble by reversing above procedure.

c. Cleaning, Inspection and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect mounting hardware for stripped threads or burrs; inspect sheaves for cracks or excessive wear, then inspect spreader for bent, cracked, or defective condition.

(3) Repair by replacing defective components or mounting hardware.

4-16. Fairlead and sheaves

a. Removal and Installation.

(1) Lower dragline bucket to ground and remove all tension from cables.

(2) Disconnect drag cable at dead end socket on bucket (fig. 2-12), then wind drag cable on drum, slowly, while guiding cable end through sheaves.


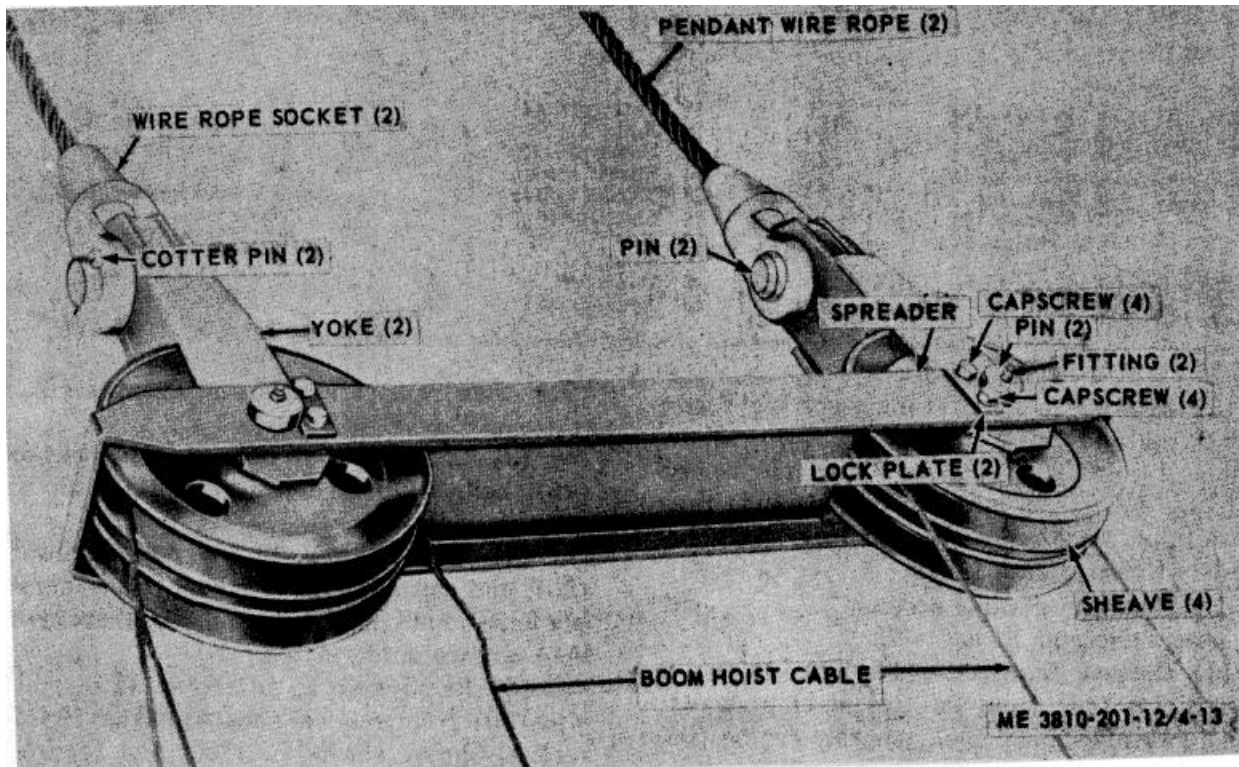


Figure 4-13. Boom harness spreader, removal and installation

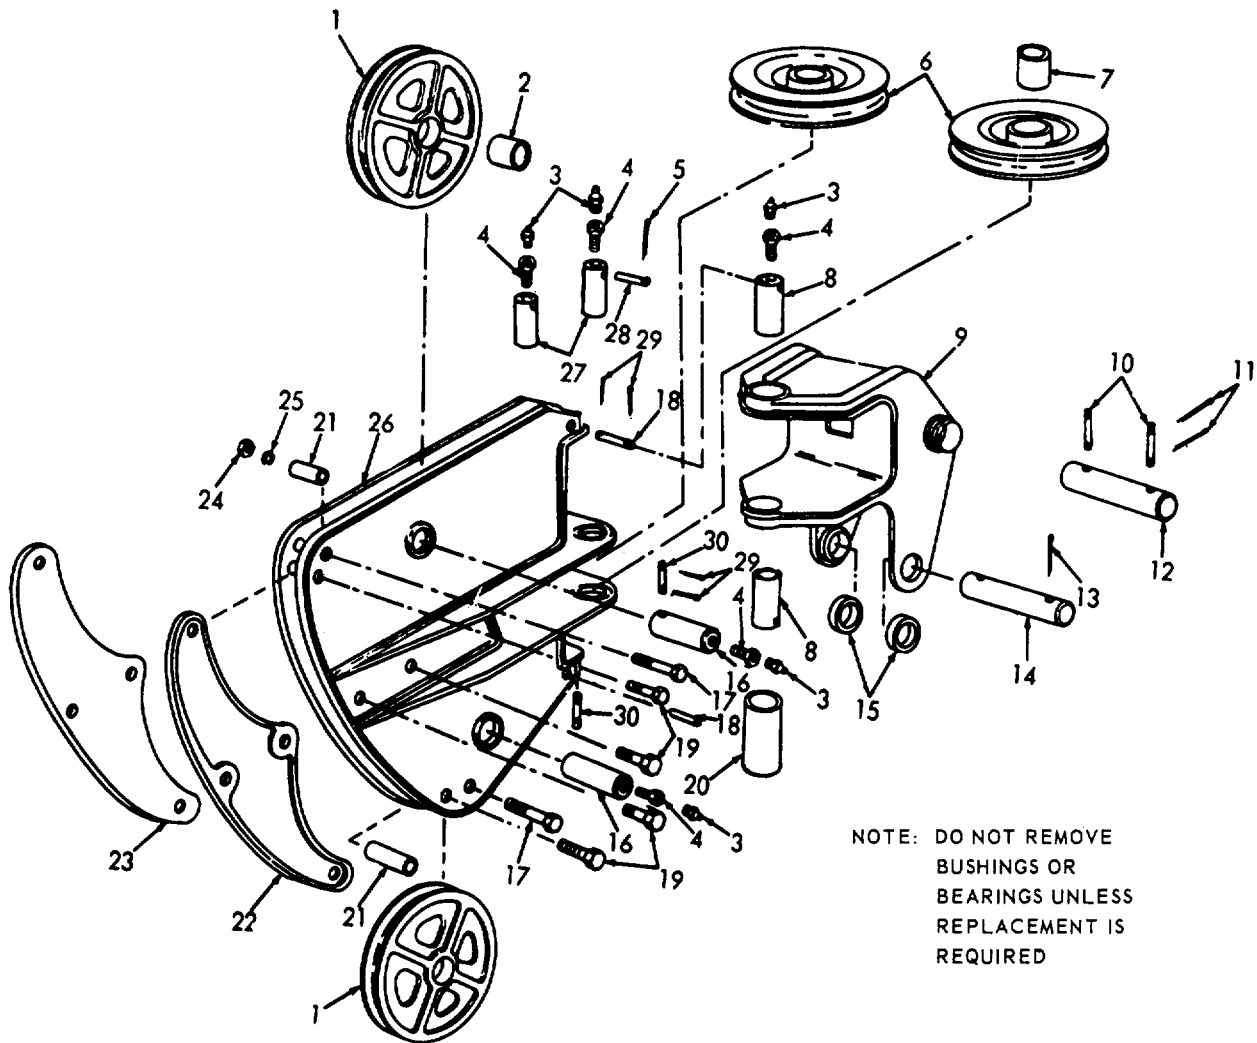

NOTE: DO NOT REMOVE
BUSHINGS OR
BEARINGS UNLESS
REPLACEMENT IS
REQUIRED

ME 3810-201-12/4-14

- | | | |
|-----------------|------------------|--------------------|
| 1 Sheave (2) | 11 Cotterpin (4) | 21 Spacer (2) |
| 2 Bearing (2) | 12 Rod | 22 Guide plate, lh |
| 3 Fitting (6) | 13 Cotterpin (2) | 23 Guide plate, rh |
| 4 Bushing (6) | 14 Shaft, lower | 24 Nut (10) |
| 5 Cotterpin (4) | 15 Thrust collar | 25 Lockwasher (10) |
| 6 Sheave (2) | 16 Shaft (2) | 26 Frame |
| 7 Bearing (2) | 17 Bolt (2) | 27 Shaft (2) |
| 8 Pin (2) | 18 Pin (2) | 28 Pin (2) |
| 9 Base | 19 Capscrew (8) | 29 Cotterpin (4) |

Figure 4-14. Fair lead and sheaves, disassembly and reassembly.

(3) Remove fairlead from revolving frame by removing four cotterpins (11, fig. 4-14) securing pins (10) in upper base rod (12); remove two cotter pins (13) from lower base shaft (14); then remove upper base rod and lower base shaft. Remove two thrust collars (15).

(4) Install in reverse order.

b. Disassembly or Reassembly.

(1) Remove four cotterpins (29, fig. 4-14) and two pins (18) from the two pivot pins (8); remove two pivot pins, then separate frame (26) from base (9).

(2) Remove four cotterpins (5) and two pins (28) from two horizontal sheave shafts (27), then remove

shafts and sheaves (6) from frame (26).

(3) Remove two nuts (24), lockwashers (25), bolts (17), and spacers (21) from frame (26).

(4) Remove two nuts (24), lockwashers (25), and capscrews (19) which secure right and left hand guide plates (23 and 22) to frame (26), then remove guide plates.

(5) Remove four cotterpins (29) and two pins (30) from vertical sheave shafts (16). Drive vertical sheave shafts (16) out and remove two sheaves (1) from frame (26).

Note. Do not remove bushings or bearings unless replacement is required.

(6) Remove bearings (7) from two horizontal sheaves (6).

(7) Remove bearings (2) from two vertical sheaves (1).

(8) Remove six lubrication fittings (3) and bushings (4) from two shafts (16 and 27), and two pins (8).

(9) Reassemble by reversing steps (1) through (8) above.

c. Cleaning, Inspection and Repair.

(1) Clean all parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect all bushings and bearings for scoring, or excessive wear; sheave shafts for excessive wear; sheaves for cracks, bends, or excessive wear; mounting base and frame for bends, cracks, or breaks, and mounting hardware for stripped threads, elongated hole, or other defect.

(3) Repair by welding cracks, or breaks straightening bends, or replacement of parts, re pair of which is beyond scope of organizational maintenance. Replace defective bearings, bushings, or mounting hardware.

4-17. Clamshell Bucket and Teeth

a. Description. The clamshell bucket consists of two halvescoops, hinged together at top so that they will close over material to be picked up. Bucket opens when closing line is allowed to run free, closes when pressure on hoist brake is slackened and crowd and retract clutch is engaged.

b. Removal.

(1) Lower open bucket to ground until there is slack in the holding and closing cables.

(2) Disconnect tagline from bucket and wind tagline on winder drum.

(3) Disconnect both holding and closing cables at dead end sockets on bucket (fig. 2-9) and slowly wind cables on drums, as ends are guided through sheaves.

c. Clamshell Bucket Teeth Replacement.

(1) *Removal.* Position bucket on its side, remove 30 nuts, (fig. 4-15), lockwashers, and bolts, and six teeth from clam jaws.

(2) *Cleaning, inspection and repair.*

(a) Replace damaged or defective parts cleaning solvent and dry thoroughly.

(b) Visually inspect mounting hardware for stripped threads or other defects; inspect teeth for bent, cracked, or excessively worn condition.

(c) Replace damaged or defective parts.

(3) *Installation of teeth.* Install teeth on

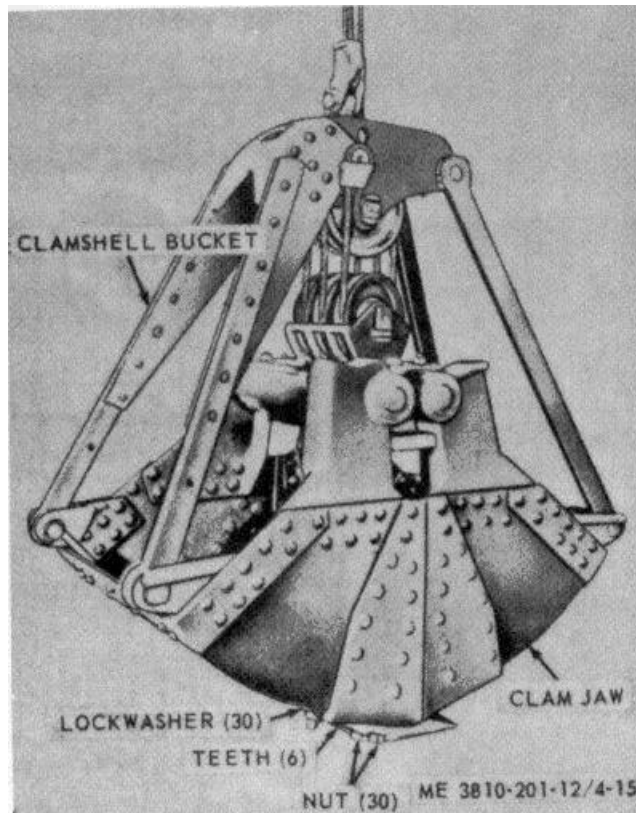


Figure 4-15. Clamshell bucket teeth replacement.

jaws (fig. 4-15), and secure with bolts, lockwashers, and nuts.

d. Bucket Installation.

(1) Position boom over bucket, reeve holding and closing cables (fig. 2-9), and secure to dead end sockets on buckets.

(2) Attach tagline to bucket.

4-18. Dragline Bucket and Teeth

a. Removal.

(1) Lower dragline bucket to ground then slacken hoist and drag cables.

(2) Remove drag, hoist, and dump cables from dead end (fig. 4-16).

(3) Wind cables on drum, slowly, as cable ends are guided through sheaves (fig. 2-12).

b. Bucket Teeth Replacement.

(1) *Removal.* Position bucket on its side and remove four cotterpins, nuts, and lockwashers, from - recess in teeth, then remove four wedge screws and teeth from bucket.

(2) *Cleaning, inspection, and repair.*

(a) Clean all parts in an approved cleaning solvent and dry thoroughly.

(b) Visually inspect teeth for excessive wear, and mounting hardware for stripped threads or other defect.

(c) Replace all defective parts.

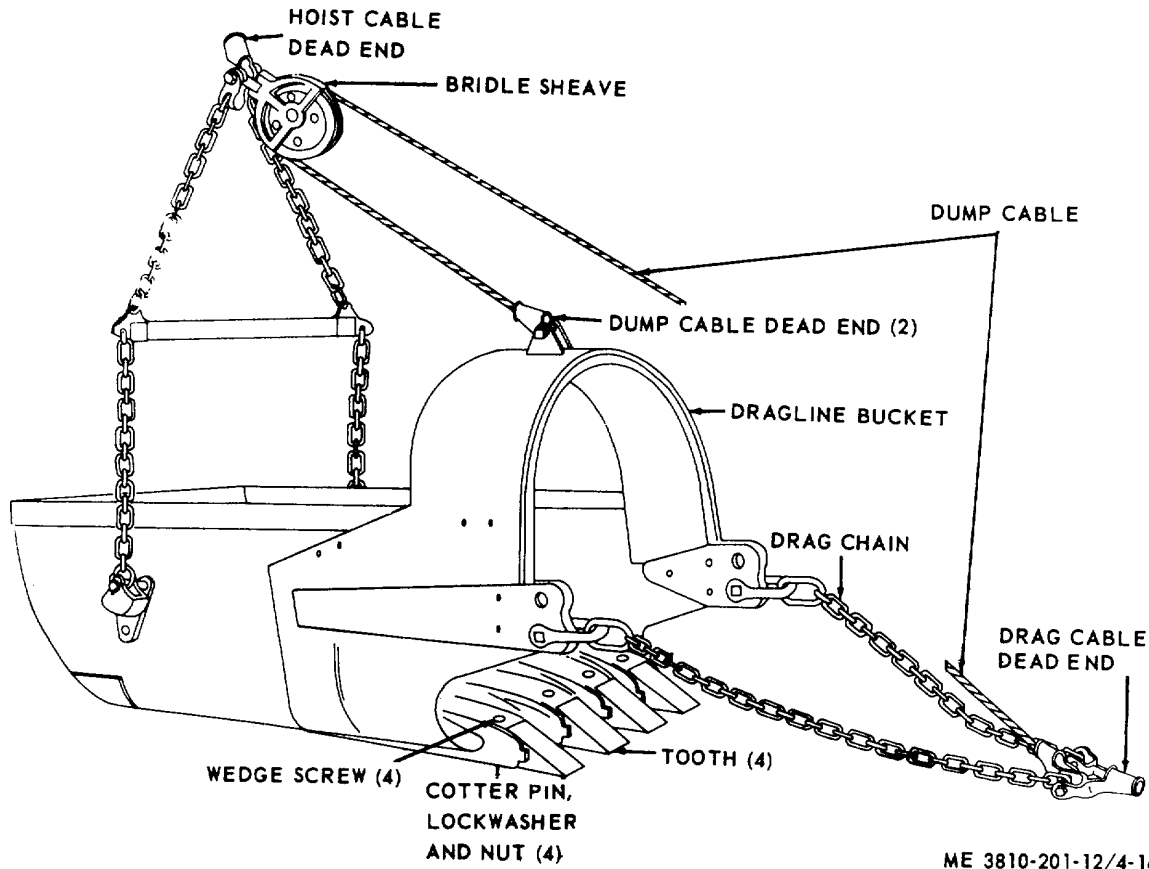


Figure 4-16. Dragline bucket, teeth replacement.

(3) *Teeth installation.*

(a) Position teeth on lip of bucket.

(b) Insert wedge screws, then secure tooth (4) in position with lockwasher, nut, and cotterpin (4).

c. *Installation of Bucket.* Reeve drag cable, hoist cable, and dump cable (fig. 2-12) and connect to dead ends (fig. 4-16).

4-19. Hook Block and Weighted Hook

Refer to reeving diagram (fig. 2-7) and figure 4-17 for removal and installation of hook block or weighted hook.

4-20. Boom Point and Idler Sheaves

a. *Removal.*

(1) Lower boom (para 2-12b).

(2) Remove hook (para 4-19) or bucket (para's 4-17 or 4-18), that is currently in use, then wind cables on drum(s).

(3) Remove nut (fig. 4-18), two lockwasher, bolt, and spacer.

(4) Remove capscrew, lockwasher, and rod end securing idler sheave shaft; remove shaft, two spacers, and three idler sheaves.


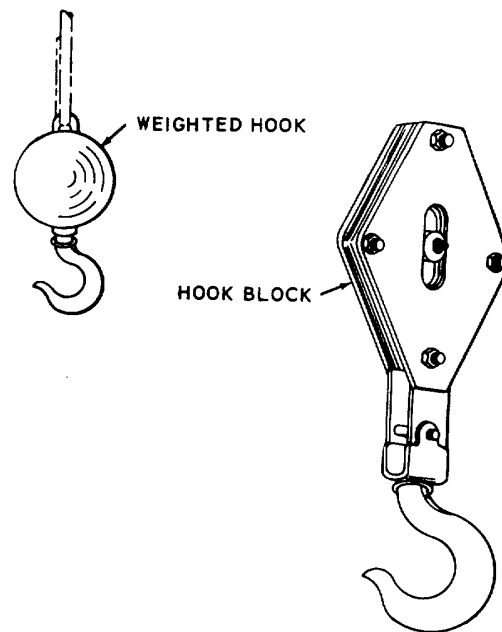


Figure 4-17. Hook block and weighted hook, removal or installation.

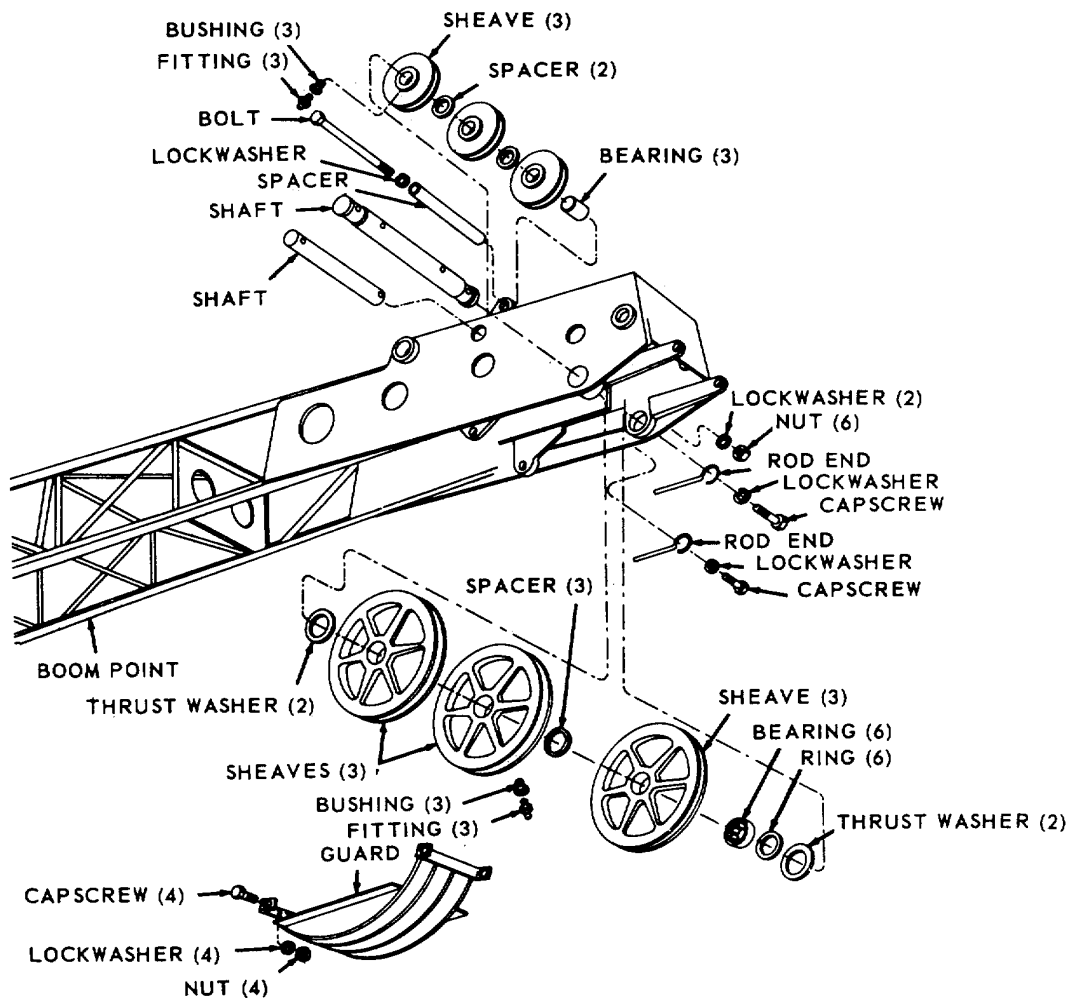

ME 3810-201-12/4-18

Figure 4-18. Boom point and idler sheaves, removal and installation.

(5) Remove capscrew, lockwasher, and rod end that secures boom point sheave shaft, drive out shaft, then remove spacers and sheaves.

(6) Remove four nuts, lockwasher, and capscrew, then remove guard.

Note. Do not remove rings or bearings unless replacement is required.

b. Cleaning, Inspection, and Repair.

(1) Clean all parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect all parts for signs of excessive wear, cracks, breaks, bends, or stripped threads.

(3) Replace all defective, damaged, or worn parts.

c. Installation. Install boom point and idler sheaves by reversing steps (1) through (6) in a above.

4-21. Jib Boom, Strut, and Sheaves

a. Installation. When use of jib boom is required, it will be installed as follows:

(1) Build cribbing at end of cribbed jib boom (fig. 4-19) in line with and of equal height for crane boom.


(2) Lower hook block to ground, remove two clamps (fig. 4-20) from hoist cable, remove hook block, then wind hoist cable onto drum.

(3) Lower crane boom (para 2-12b) to rest on cribbing (fig. 4-19).

(4) Move jib boom into position over crane boom point and install jib to boom point pin (fig. 4-21) then install keeper rod and secure with lockwasher and capscrew.


(5) Install strut on jib boom, install two strut pins, and secure pins with four cotterpins.

(6) Position pendant wire ropes at strut,

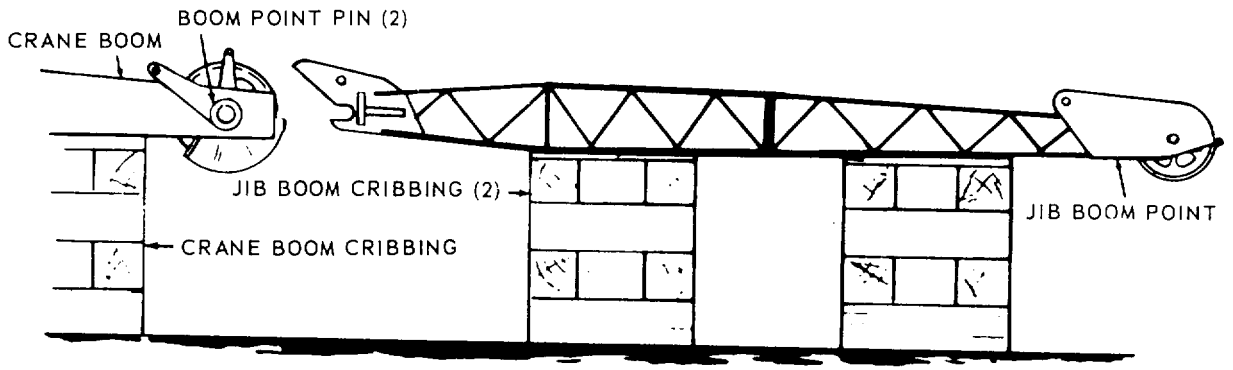


ME 3810-201-12/4-19

Figure 4-19. Jib boom cribbed for installation, or removal.

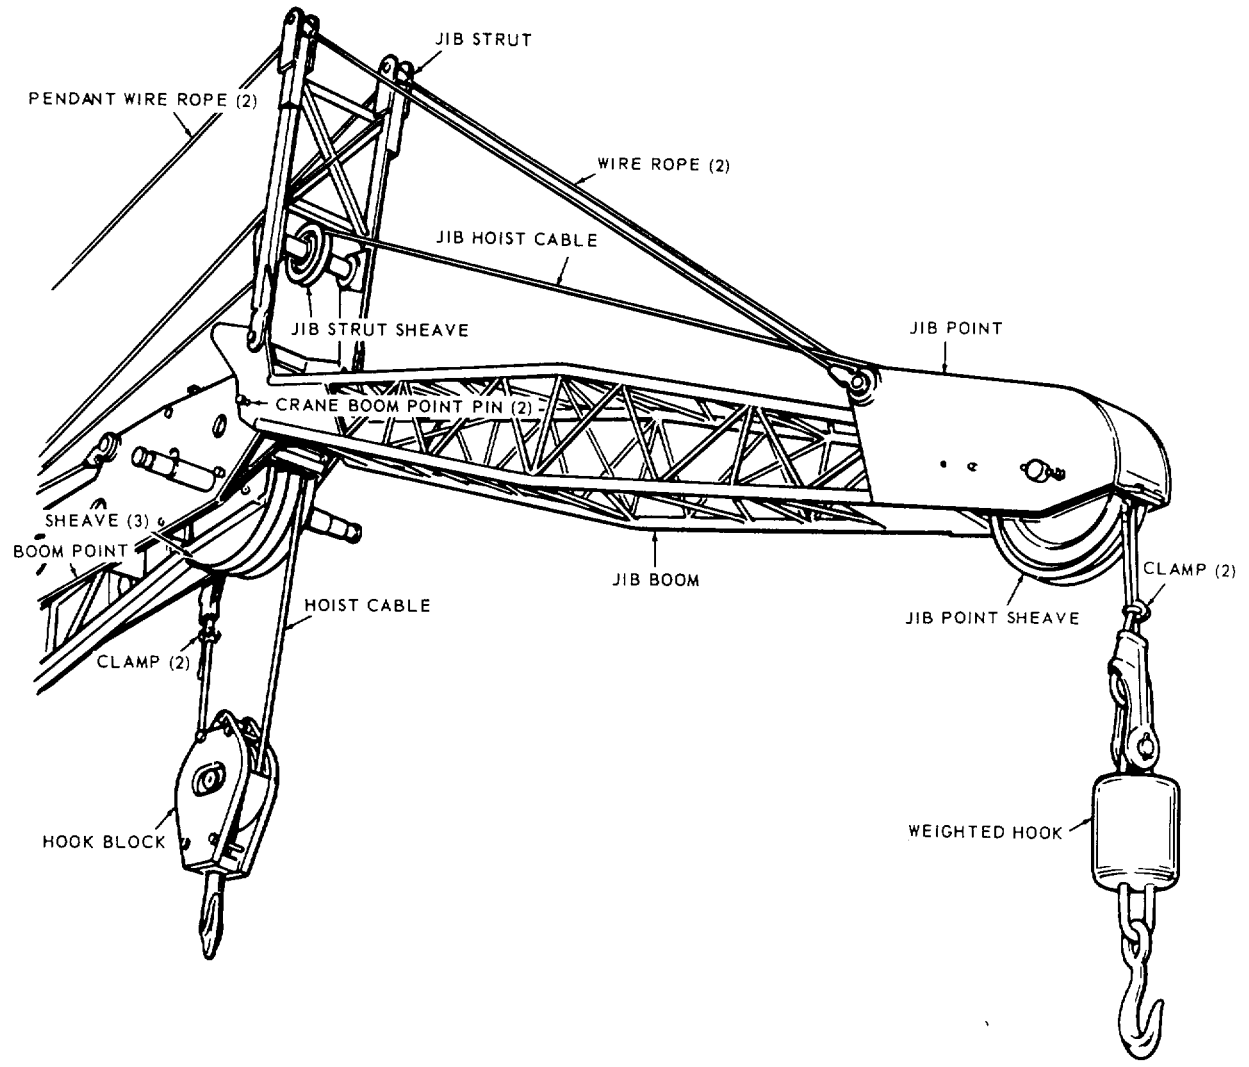

ME 3810-201-12/4-20

Figure 4-20. Crane boom with jib, installed view.

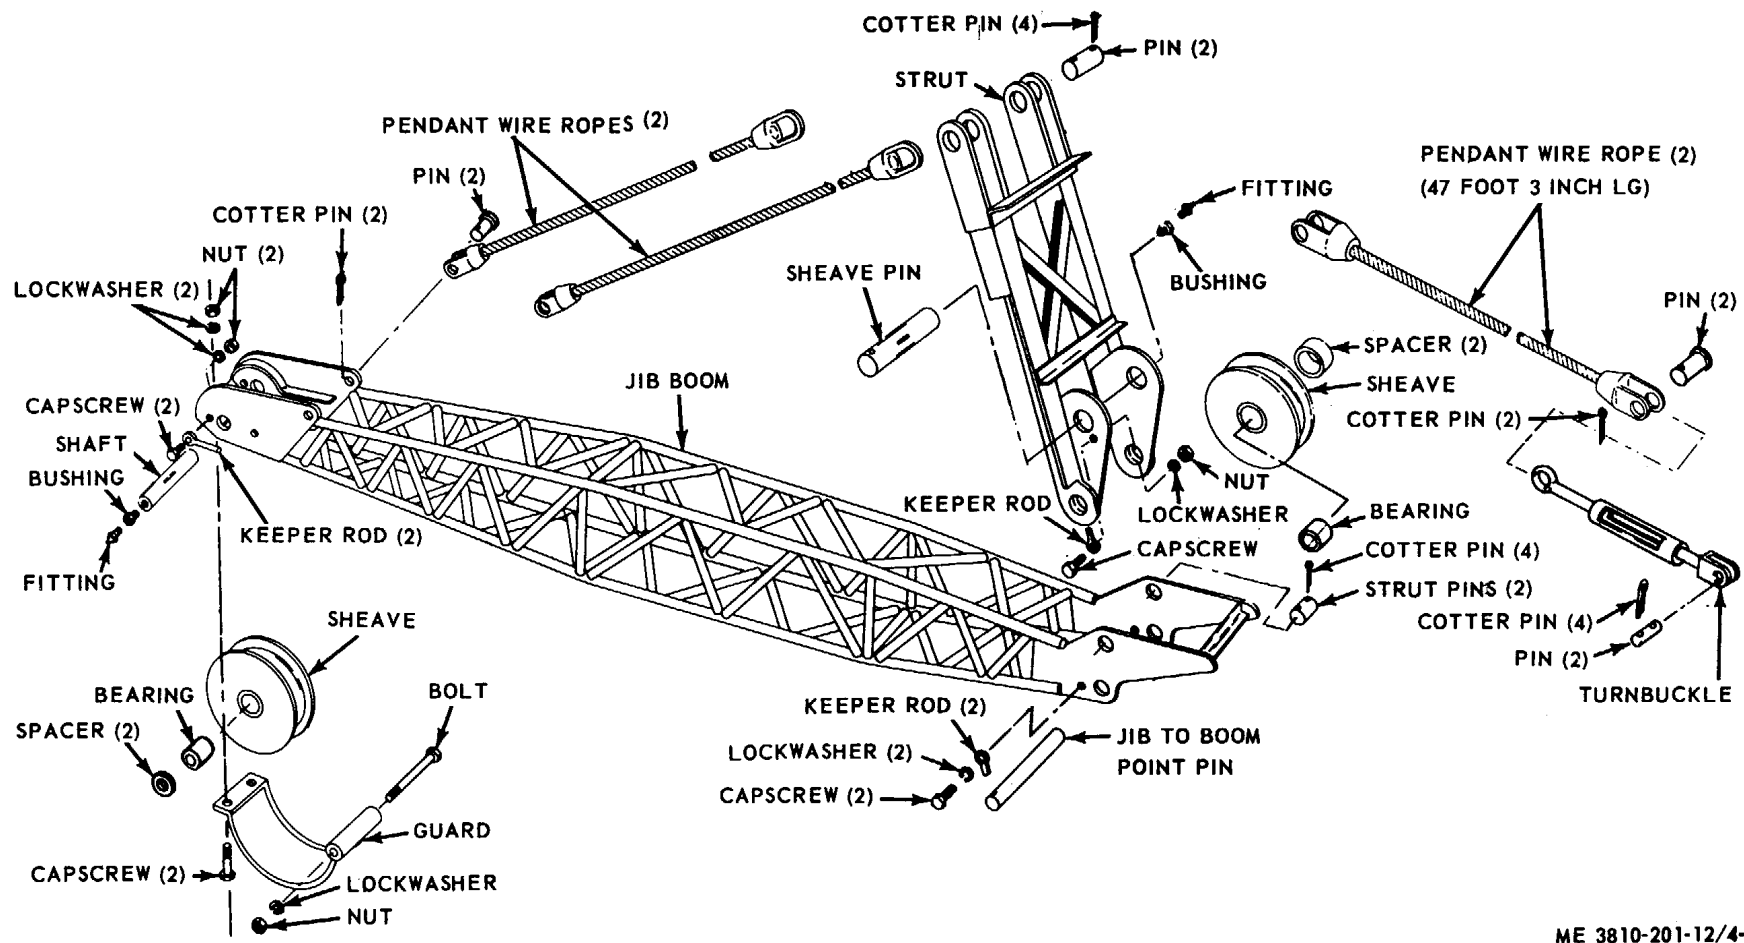

ME 3810-201-12/4-21

Figure 4-21. Jib boom, disassembly or reassembly.

install pins through sockets and secure with cotterpins.

(7) Connect wire ropes to jib boom point, install pins and secure pins with cotterpins.

(8) Connect longer wire ropes to eyebolt of turnbuckle, connect turnbuckle to crane boom foot, install pins and secure with cotter pins.

(9) Refer to figure 2-7 and reeve crane hook block and jib boom hoist cables.

(10) Raise boom (para 2-12b).

b. Removal of Jib Boom.

(1) Move crane-shovel unit into position for placement of jib boom then build cribbing (fig. 4-19).

(2) Lower jib boom weighted hook to ground, remove clamps, then cable from weighted hook. Wind cable onto hoist drum.

Note.

If crane boom is to be removed, remove hook block in a manner similar to (2) above, winding cable onto digging drum.

(3) Lower boom (para 2-12b) until jib boom rests on prepared cribbing, then disconnect two pendant wire rope turn buckles from crane boom foot.

(4) Remove capscrew, lockwasher, and keeper rod securing jib to boom point pin, then remove pin.

Note. If crane boom is to be removed, proceed as directed in paragraph 4-2.

(5) Move crane-shovel unit away from cribbed jib boom.

c. Disassembly and Reassembly.

(1) Remove cotterpins, pins, and two turnbuckles from pendant wire ropes (fig. 4-21), then remove cotterpins and pins from pendant wire ropes and remove wire ropes from jib boom and strut.

(2) Remove capscrew, lockwasher, and keeper rod securing strut sheave pin; remove sheave pin, spacer and sheave from strut. Remove fitting and bushing from strut sheave pin.

Note. Do not remove bearings from sheaves unless replacement is required.

(3) Remove four cotterpins from two strut pins, remove pins, then remove strut from jib boom.

(4) Remove three nuts and lockwashers from two capscrews and bolt, remove bolt and capscrews, then remove sheave guard.

(5) Remove nut, lockwasher, capscrew, and keeper rod securing jib boom point sheave shaft, remove shaft, spacer, and sheave. Remove fitting and bushing from sheave shaft.

Note. Do not remove bearings unless replacement is required.

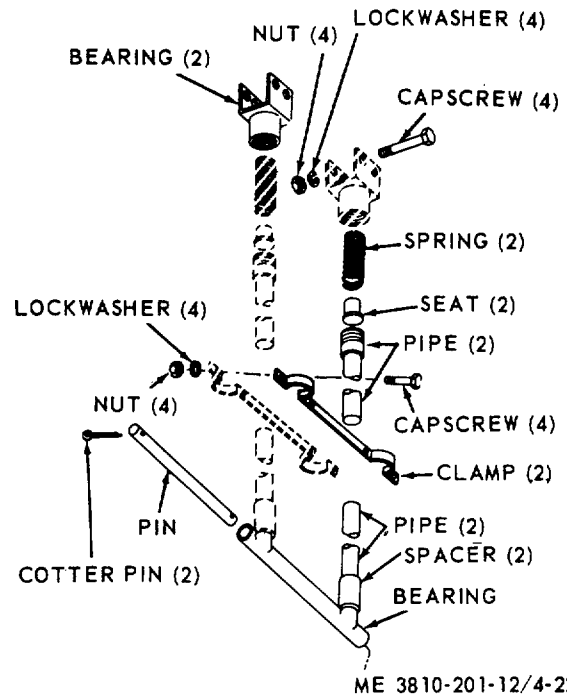


Figure 4-22. Boom backstop, removal, disassembly, reassembly, and installation.

(6) Reassemble by reversing procedure of steps (1) through (5) above.

d. Cleaning, Inspection, and Repair.

(1) Clean all parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect jib boom for cracks, breaks, or bent sections. Inspect sheave pins and shafts for excessive wear. Inspect mounting hardware for stripped threads or elongated holes.

(3) Repair breaks and cracks by welding, straighten all bends, and replace all worn, damaged, or defective parts.

4-22. Boom Backstop

a. Removal and Installation.

(1) If necessary, raise boom (para 2-12b) to a moderate angle and take pressure off mounting hardware; remove four nuts, lockwashers, and capscrews (fig. 4-22) then lift two bearings from gantry.


(2) Lower boom to a horizontal position with cribbing at boom point (fig. 2-6).

(3) Remove two cotterpins from pin securing bearing (fig. 4-22) at boom; drive pin from bearing, then remove boom backstop.

(4) Install in reverse order.

b. Disassembly and Reassembly.

(1) Slide bottom bearing, spring, seat, and pipe as an assembly (fig. 4-22) off of two pipes connected to upper bearing; unscrew two pipes from

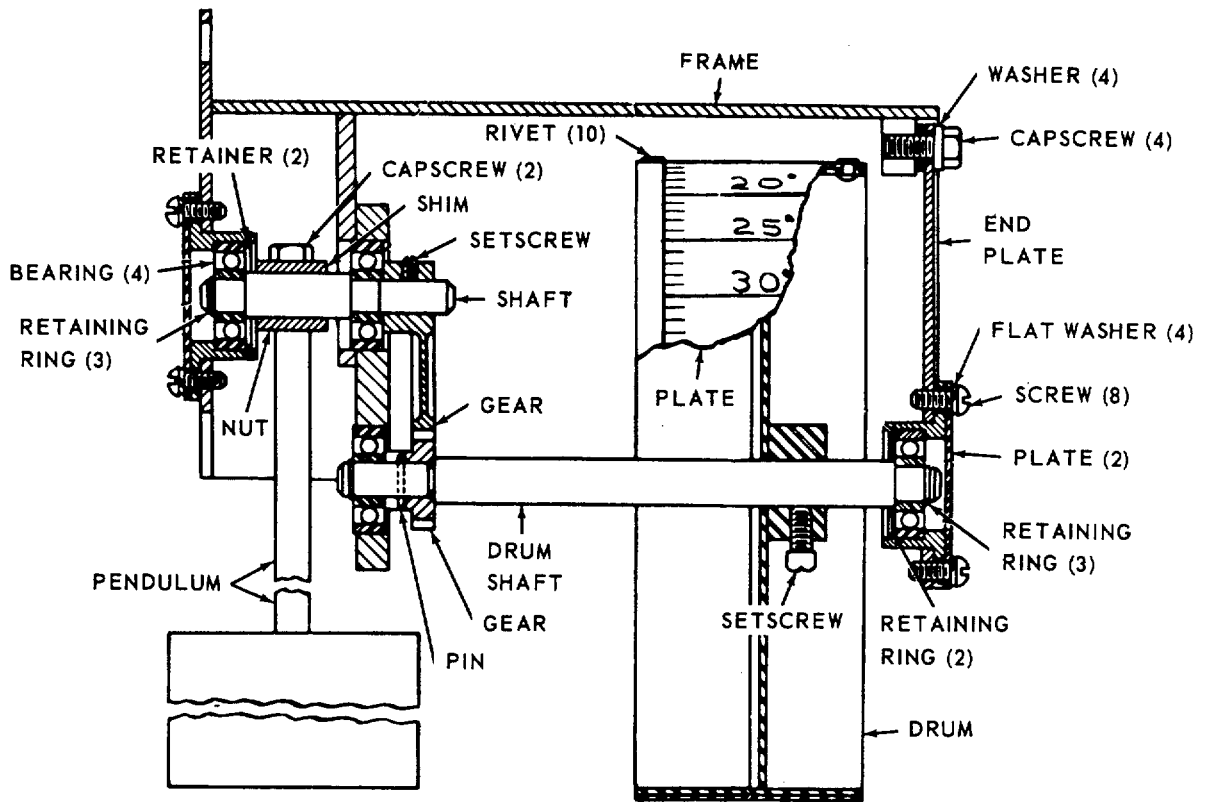

ME 3810-201-12/4-23

Figure 4-23. Radius (boom angle) indicator, removal, disassembly, reassembly, and installation

bearings, then remove pipes, seats, and springs.

(2) Remove two pipes and spacers from upper bearing.

(3) Reassembly by reversing procedure in steps (1) and (2) above.

c. Cleaning, Inspection, and Repair.

(1) Clean all parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect parts for excessive wear, bends, cracks, or other defect.

(3) Repair by straightening bends, welding cracks, or replacement of all parts damaged beyond repair.

4-23. Radius Indicator (Boom Angle Indicator)

a. Removal. Refer to figure 2-27, remove three mounting capscrews and lockwashers, then remove radius indicator from crane boom.

b. Disassembly and Reassembly.

(1) Remove eight screws (fig. 4-23), flatwashers, and two plates to expose bearings and shafts. Remove four capscrews and washer, then remove end plate.

(2) Remove retaining rings from ends of drum shaft; move pendulum aside, move drum shaft against bearing and press bearing out of frame until

drum shaft is free of remaining bearing; remove bearing from drum shaft, then remove drum and shaft from frame.

(3) Loosen setscrew securing drum to shaft and remove drum from shaft. Remove bearing retaining ring, then remove remaining drum shaft bearing from frame. Drive pin from gear and shaft, then remove gear from shaft.

(4) Loosen setscrew and remove gear from pendulum shaft. Remove capscrew and shim from pendulum, then remove pendulum from shaft.

(5) Remove retainer from outer shaft bearing; drive bearing inward until free of frame; remove bearings from pendulum shaft, then remove shaft.

Note. Do not remove rivets from plate on drum unless plate is to be replaced.

(6) Reassemble by reversing procedure in steps (1) through (5) above.

Note. At reassembly, assure that pendulum and drum move freely without bind. Test by moving frame back and forth through drum measurement arc.

c. Cleaning, Inspection, and Repair.

(1) Clean all parts, except bearings, in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect bearings for signs of scoring in races, excessive wear, or other defect. Clean serviceable bearings by wiping exterior with a

cloth dampened in engine lubricating oil, then lay them aside, protected from contamination until reassembly. Replace all defective bearings.

(3) Visually inspect all parts for signs of excessive wear or other defect. Replace all defective

Section III. BACKHOE FRONT END ATTACHMENT

4-24. General

The backhoe front end attachment (fig. 4-24) does not use the planetary pinion gear of the shovel or crane, therefore if the crane-shovel unit is so equipped, they must be removed (para 3-132). Backhoe attachment consists of boom, bucket handle, brace, bucket, auxiliary gantry, spreader bar, backstop, boom foot adapters, and backhoe lagging for digging drum. Cables for backhoe operation are listed in table 1-2, and are reeved as shown in figure 2-16.

Caution: When reeving the digging cable, be sure that a second layer does not wrap on drum. Over wrapping causes very rapid cable wear.

4-25. Lagging

Backhoe lagging for digging drum is installed, or removed, in manner described in paragraph 3-131.

4-26. Backhoe Front End Attachment

a Removal.

(1) Select a firm, level area in which to work.

Caution: If attachment will not be used for a considerable period of time, arrangements should be made to protect the machinery from damage by the elements.

(2) Pull bucket under boom and lower boom gradually until blocking may be placed between pitch brace and boom (fig. 2-15).

(3) Build cribbing at boom point and foot (fig. 2-15); lower boom to cribbing; disconnect backstop (para 4-30); lower auxiliary gantry toward boom until blocking can be positioned (fig. 2-15).

(4) Disconnect backhoe digging cable, boom hoist cable, and boom (gantry) hoist cable from dead end sockets, then unreeve by winding cables on drums (fig. 2-16). Wind cables slowly, while ends are carefully guided through sheaves.

(5) Use wedges or jacks to raise boom foot enough to take weight off pins; remove pins 4-22 which attach backhoe boom adapters to revolving frame lugs. The backhoe boom and gantry remain attached to boom

foot adapters. Secure backstop in closed position on gantry.

(6) Move crane-shovel unit away from backhoe front end attachment.

b Disassembly and Reassembly.

(1) Remove backstop (para 4-30).

(2) Remove auxiliary gantry (para 4-27).

(3) Remove backhoe bucket (dipper) (para 4-28).

(4) Remove backhoe bucket (dipper) stick (para 4-29).

(5) Disassemble or reassemble backhoe boom (para 4-31).

(6) Disassemble and reassemble components as described in the paragraphs listed above.

(7) Reassemble backhoe attachment by reversing steps (1) through (4) above.

c Installation. When backhoe front end attachment is to be installed, assure that backhoe lagging is installed on digging drum (para 3-131) then proceed as follows:

(1) Move crane-shovel unit into position at cribbed backhoe attachment as shown in figure 2-15.


(2) Use wedges or jacks to raise boom from cribbing so that adapters line up with revolving frame foot lugs, install pins that secure boom foot adapters to revolving frame and secure pins with cotter pins (fig. 4-24).

(3) Lift auxiliary gantry from boom, lean it toward cranes shovel, then attach backstop to revolving frame gantry pin (para 4-30).

(4) Remove blocking that is between auxiliary gantry and boom (fig. 2-15); install backhoe cables shown in table 1-2 as described in paragraph 3-43, and reeve (fig. 2-16).


(5) Adjust boom hoist cable on drum until auxiliary gantry is vertical; use hoist cable to raise boom and remove cribbing at point and foot of boom, then release digging cable and allow bucket to drop so blocking can be removed from between brace and boom (fig. 2-15).

(6) Perform preventive maintenance checks and services (para 3-6).

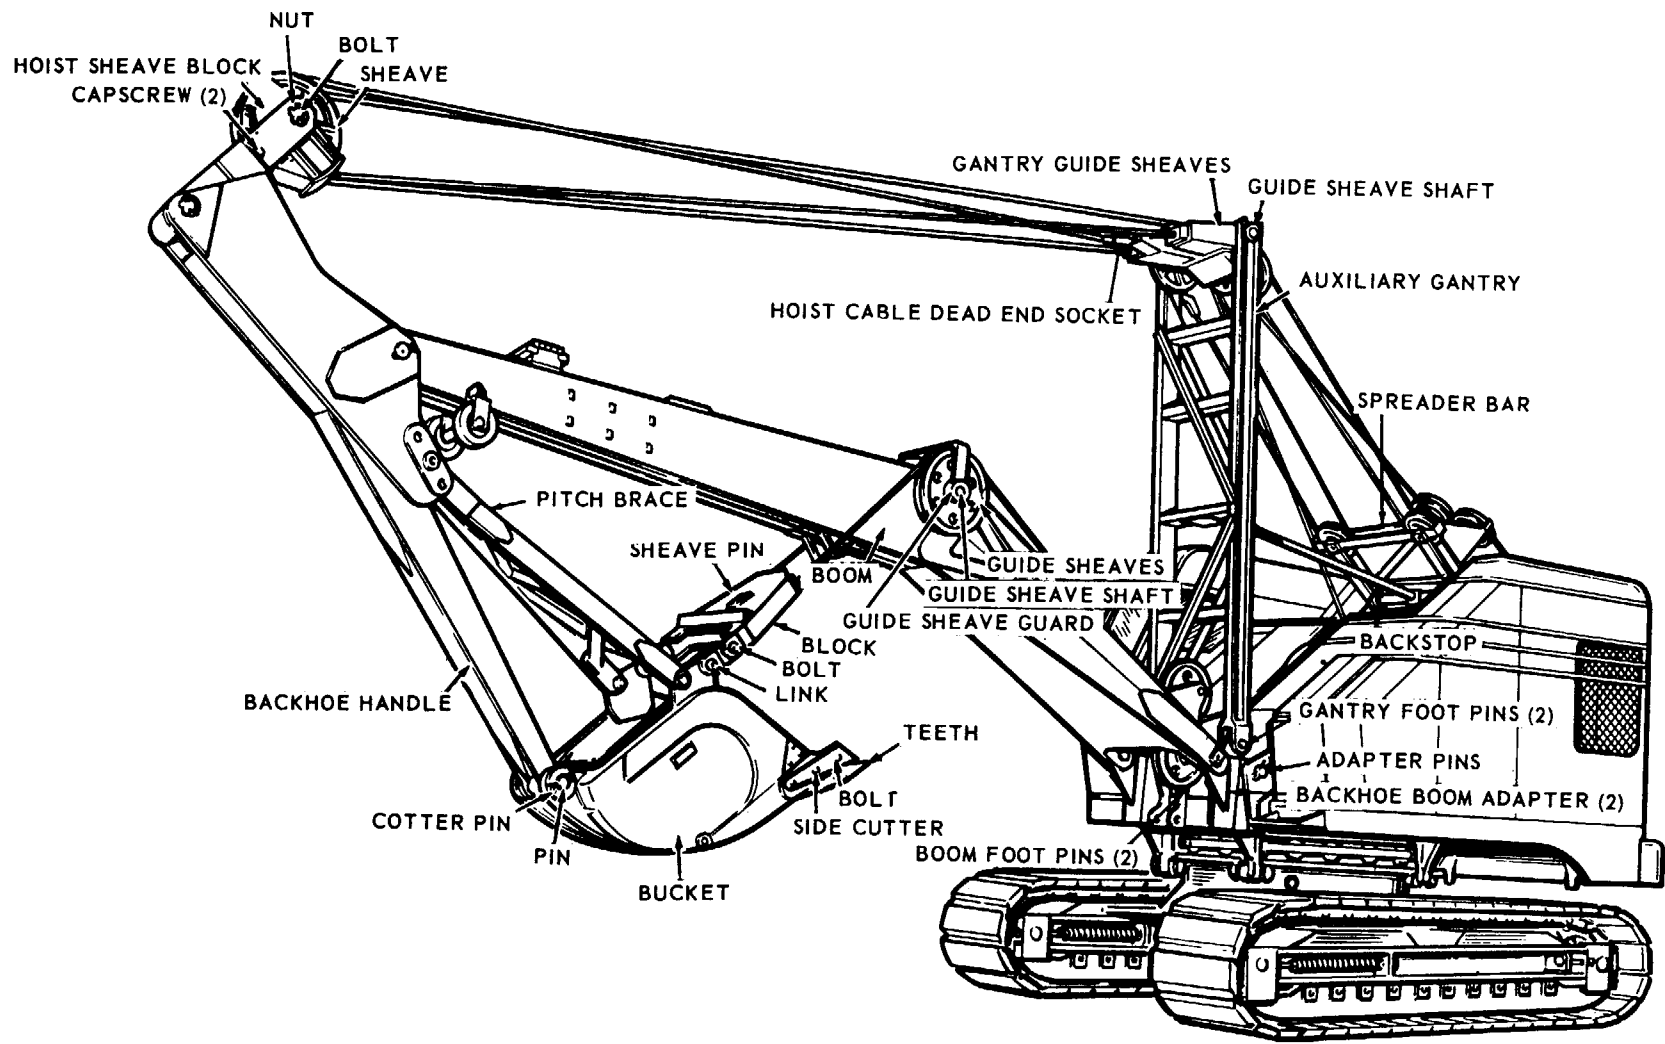

ME 3810-201-12/4-24

Figure 4-24. Backhoe front end attachment, installed view.

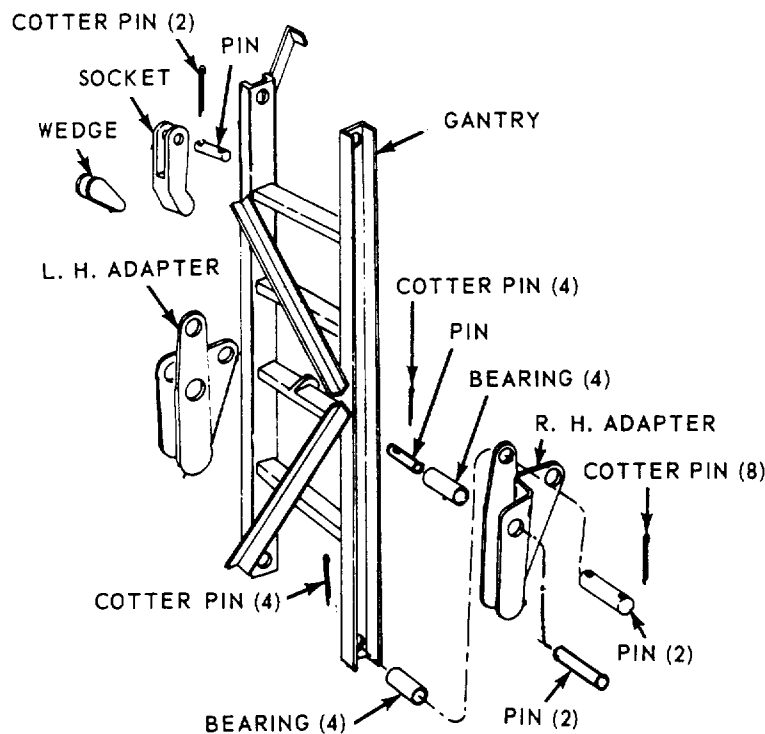

NOTE: DO NOT REMOVE BEARINGS OR BUSHINGS UNLESS REPLACEMENT IS REQUIRED.

Figure 4-25. Auxiliary gantry and boom foot adapters.

4-27. Backhoe Auxiliary Gantry

a Removal.

(1) Lower boom (para 2-12b) to rest on cribbing (fig. 2-15).

(2) Disconnect boom hoist, hoist, and digging cables at dead end sockets (fig. 2-16) then wind on drums (unreeve).

(3) Remove backstop (para 4-30).

(4) Remove four cotterspines (fig. 4-25) from two pins securing gantry to left and right hand boom foot adapters, remove pins, then remove auxiliary gantry.

b Disassembly and Reassembly.

(1) Refer to figure 4-26, remove items 1 through 9 in numerical sequence, then remove sheave frames from gantry.

(2) Refer to figure 4-25 to remove adapters and wire rope socket from gantry frame.

(3) Complete disassembly, numerically, as shown on figure 4-26.

(4) Reassemble in reverse order.

c Installation. Install the auxiliary gantry by reversing procedure in steps (1) through (4) in a above.

d Cleaning, Inspection, and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect all parts for cracks, breaks, bends or other defect.

(3) Repair by welding cracks or breaks, straightening bends, or replacing defective mounting hardware.

4-28. Backhoe Bucket, Bail, and Teeth

a Removal.

(1) Raise boom (para 2-12b), build cribbing under boom near foot, lower boom to rest, then disconnect and unreeve the digging cable (fig. 2-16).


(2) Remove bail and link by removing cotterspines, nuts, washers, and bolts (fig. 4-27).

(3) Remove cotterpin, nut, washers, and bolt securing brace to bucket. Remove cotterspines and pin (fig. 4-28) securing bucket to bucket stick, then remove bucket.

b Disassembly and Reassembly.

(1) Disassemble bail by removing two bolts, lockwashers, and keeper plate (fig. 4-27), remove pin, then remove sheave from bail.

(2) Remove 12 nuts and bolts, and remove left and right hand cutting edges.

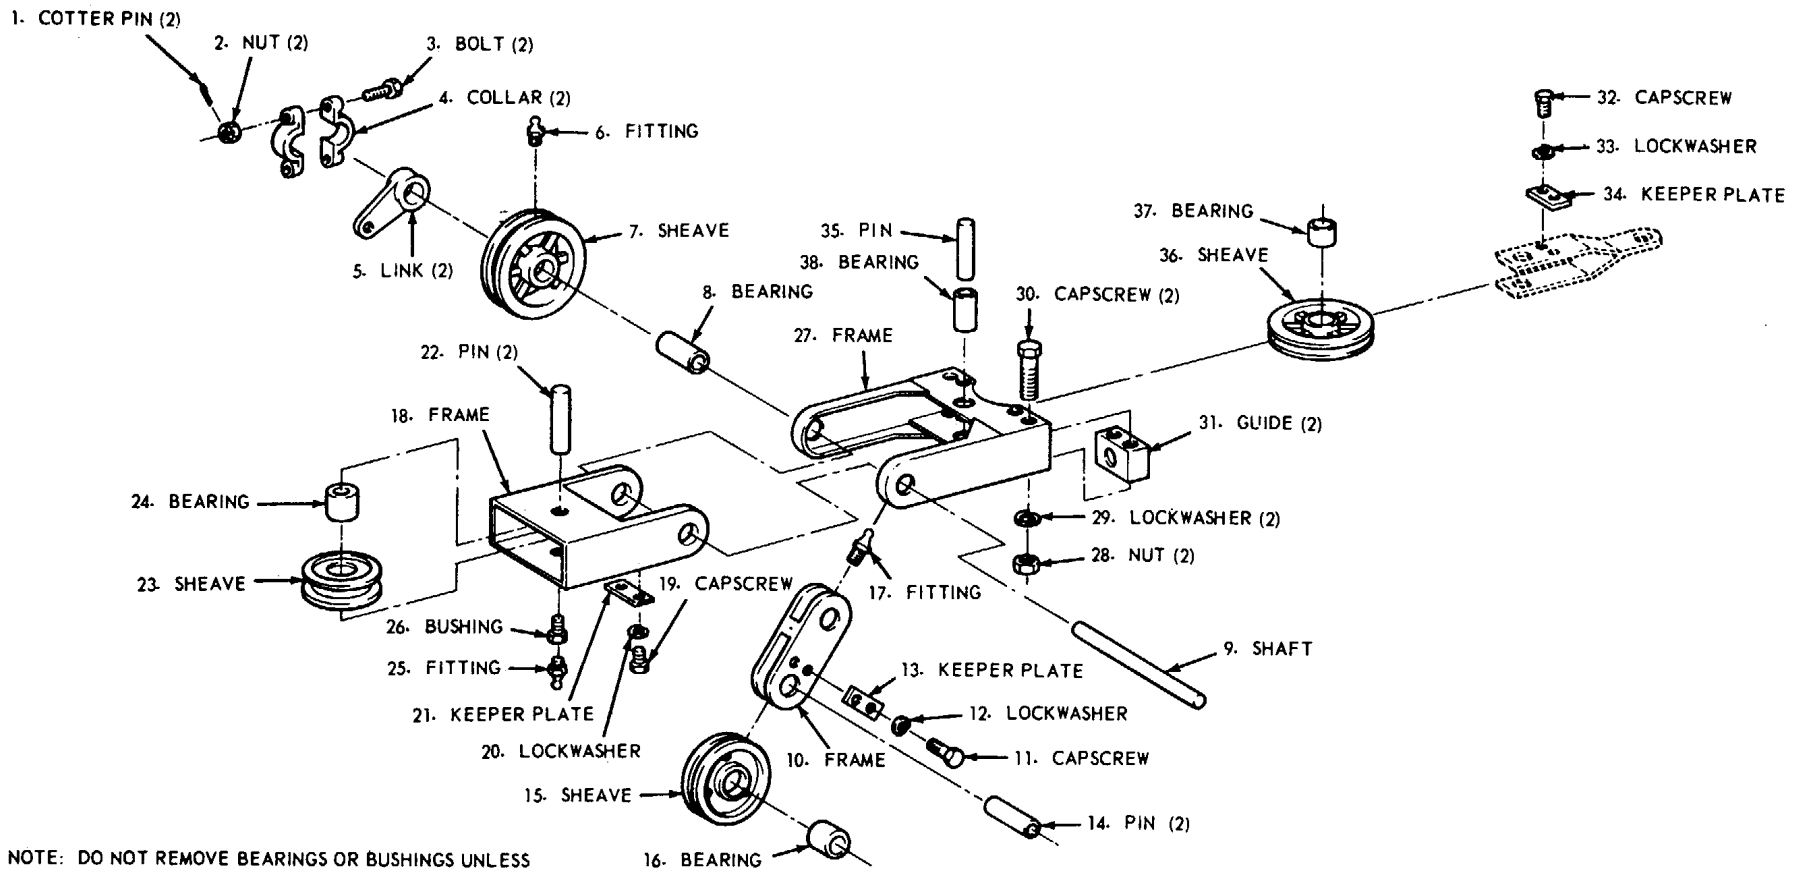


NOTE: DO NOT REMOVE BEARINGS OR BUSHINGS UNLESS REPLACEMENT IS REQUIRED.

ME 3810-201-12/4-26

Figure 4-26. Auxiliary gantry sheaves.

NOTE: DO NOT REMOVE BEARINGS OR BUSHINGS UNLESS REPLACEMENT IS REQUIRED.

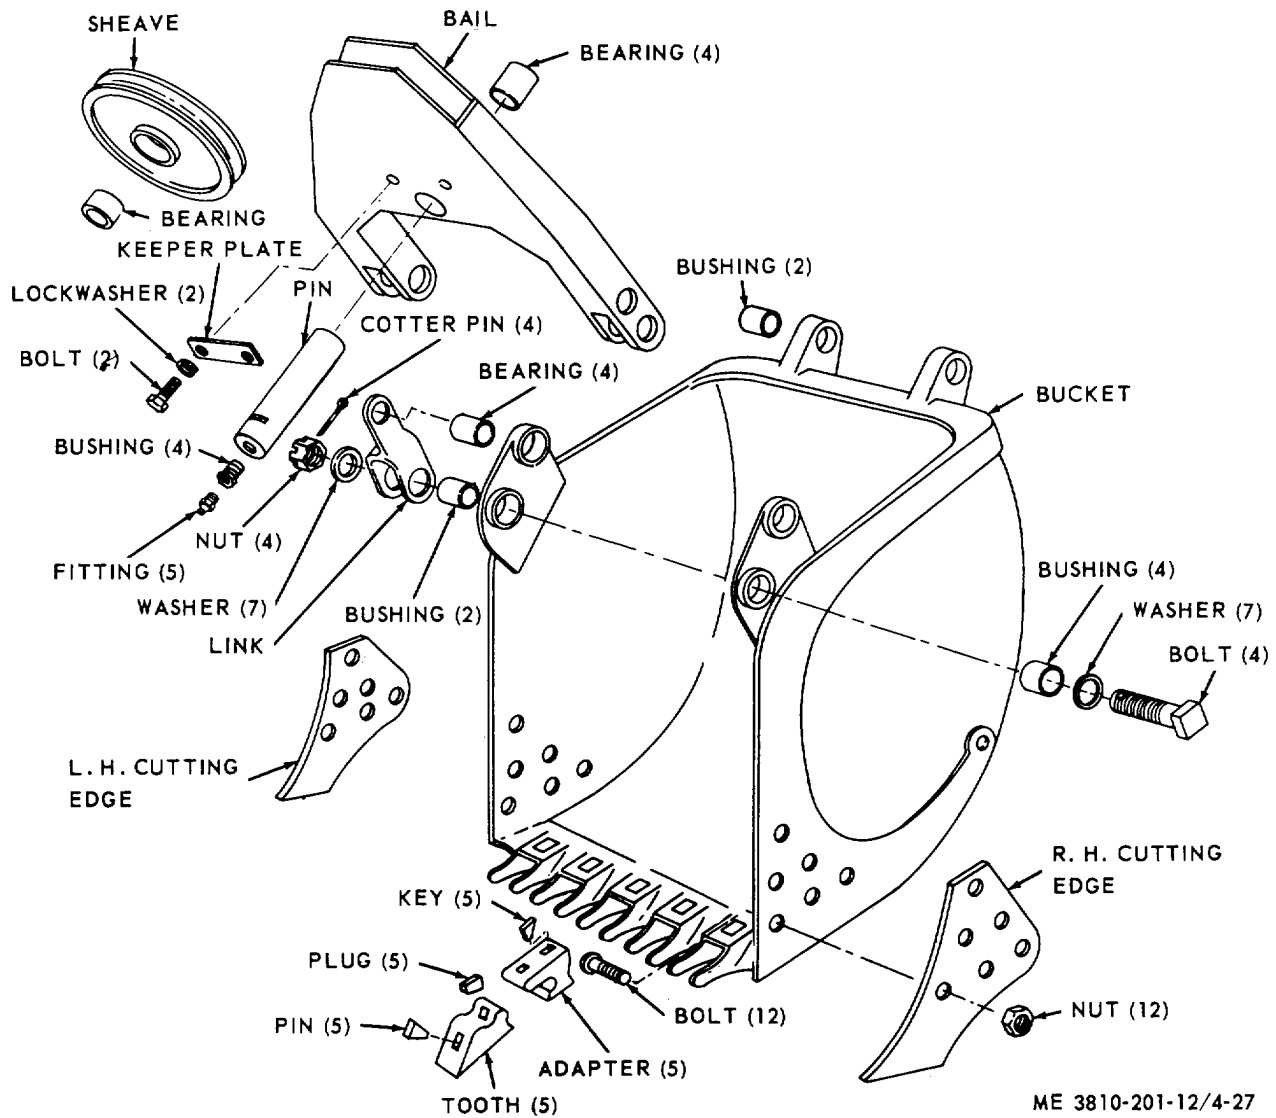

ME 3810-201-12/4-27

Figure 4-27. Backhoe bucket, disassembly and reassembly.

(3) Drive pins and plugs out of five teeth then remove teeth from adapter.

(4) Drive key out of five adapters, then remove adapters from bucket

(5) Reassemble by reversing procedure of steps (1) through (4) above.

c. Cleaning, Inspection and Repair.

(1) Clean all parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect all parts for cracks, breaks, bends, or excessive wear.

(3) Repair by welding cracks or breaks, straightening bends, or replacing excessively worn parts.

d. Installation. Install bucket, bail, and teeth by reversing procedure in steps (1) through (3) in a above.

4-29. Backhoe Bucket Stick

a. Removal.


(1) Lower boom to rest on cribbing, near foot, then unreeve hoist and digging cables (fig. 2-16)

(2) Attach lifting device to bucket stick, remove keeper rod (fig. 4-28) and boom point pin, then remove bucket stick from boom.

b. Disassembly and Reassembly.

(1) Remove bucket (para. 4-28).

NOTE: DO NOT REMOVE BUSHINGS OR BEARINGS UNLESS REPLACEMENT IS REQUIRED.

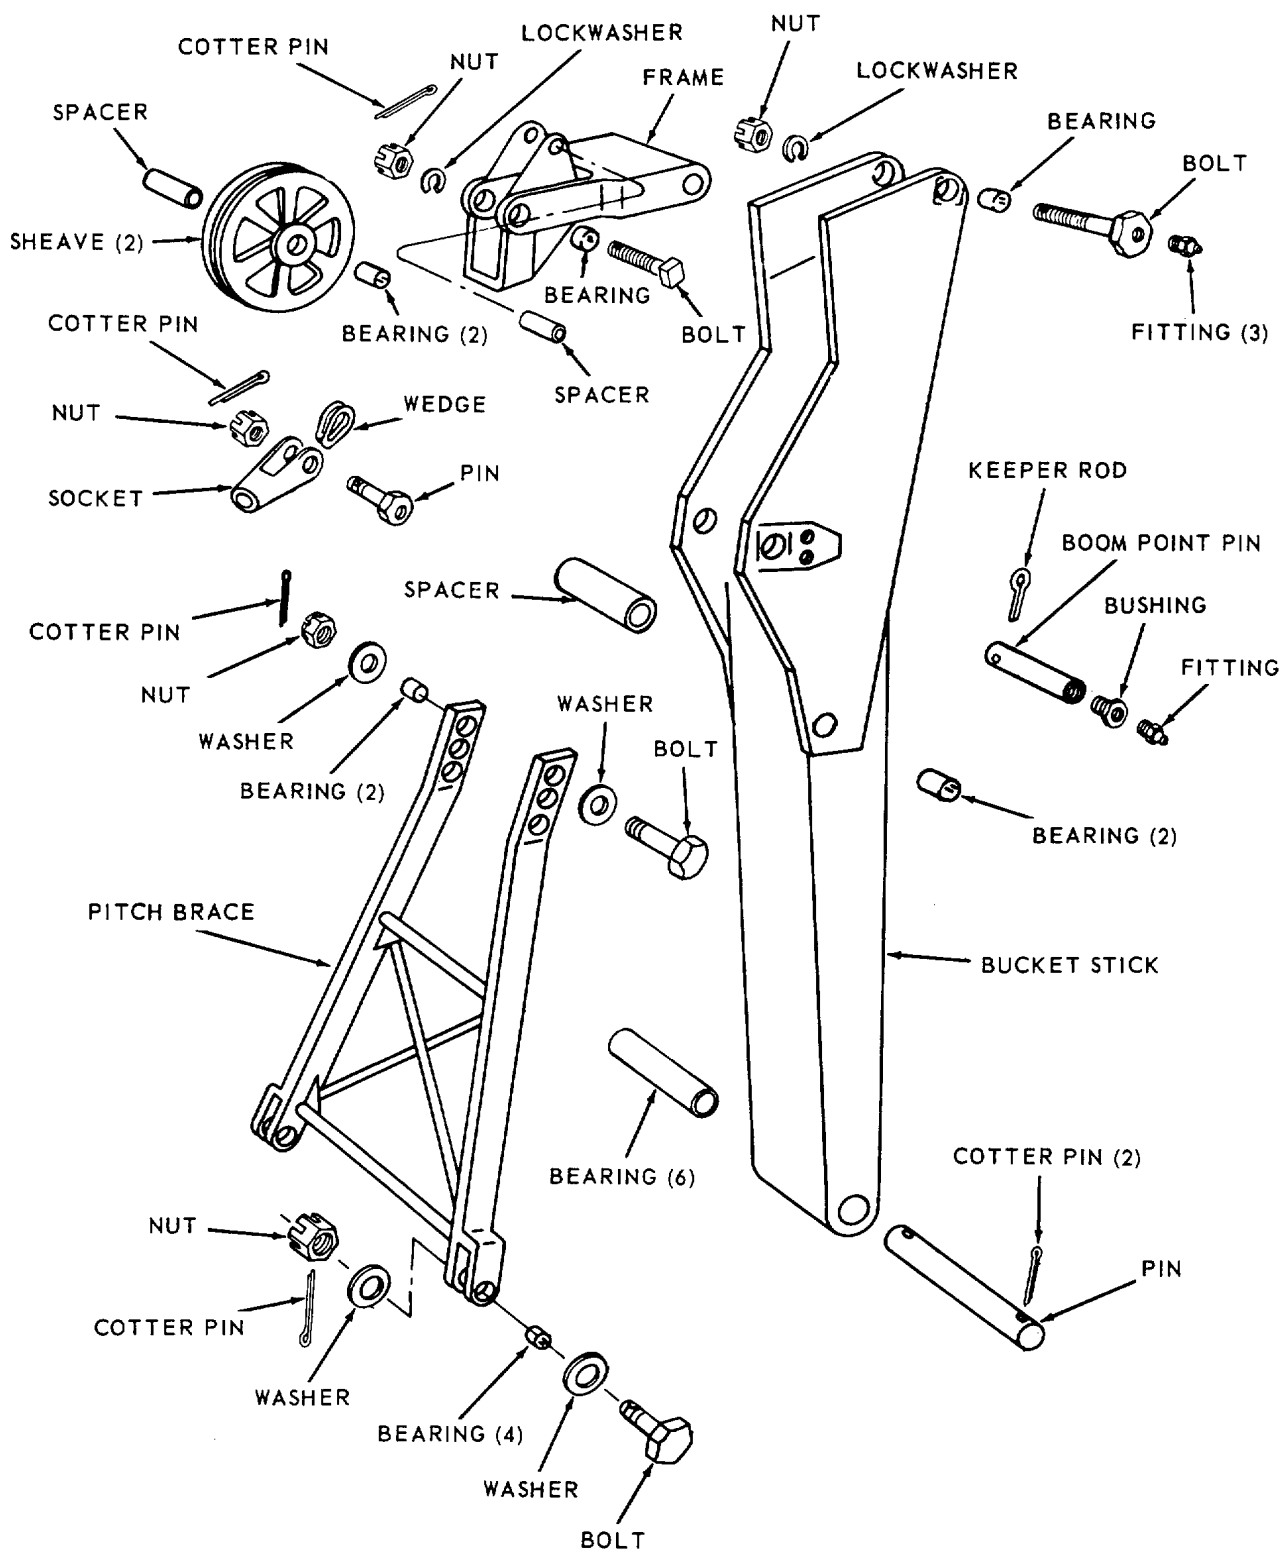

ME 3810-201-12/4-28

Figure 4-28. Backhoe bucket stick, disassembly and reassembly.

(2) Remove cotterpin, nut, washers, and bolt from pitch brace (fig. 4-28) then remove brace from stock.

Note. At reassembly, depth of bucket slice is adjusted by position of bolt in brace. For deep excavation put bolt through lower hole. Where maximum dumping height is required put bolt in upper hole. For normal operation the bolt should be in center hole.

(3) Remove nut, lockwasher and bolt then remove sheave frame from bucket stick.

(4) Remove cotter pin, nut, lockwasher, spacer, sheave, and bolt from frame.

(5) Remove cotter pin, nut, wedge, socket, and pin from frame.

(6) Reassemble by reversing procedures in steps (1) through (5) above.


c. Cleaning, Inspection and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect parts for cracks, breaks, bends, or excessive wear.

(3) Repair by welding cracks or breaks, straightening bends, or replacing worn or defective parts.

d. Installation. Install bucket stick by reversing procedure used in removal (a above)

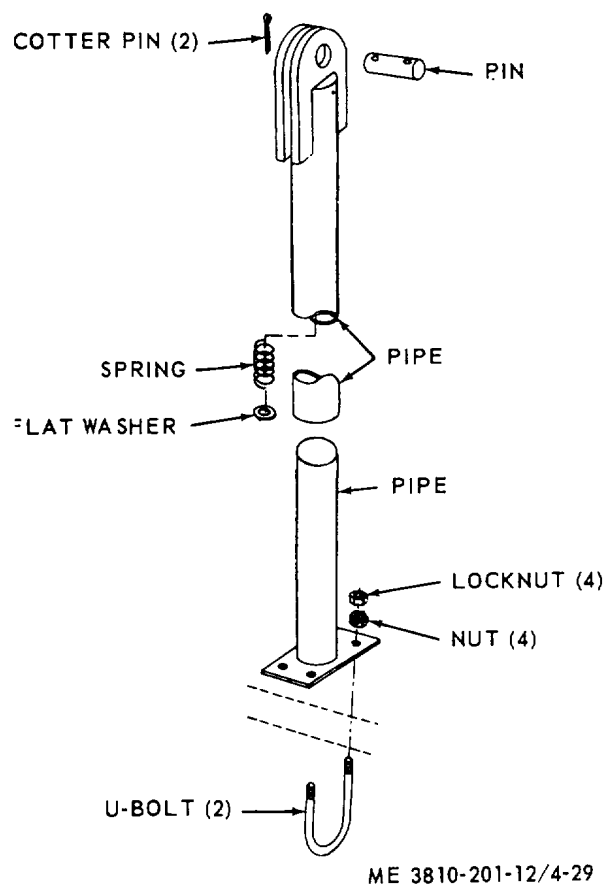

4-30. Backhoe Safety Backstop

a. Removal.

(1) Remove four locknuts, nuts, and two U bolts (fig. 4-29), and disconnect backstop from revolving frame gantry pin.

(2) Remove two cotterpins from pin, remove pin, then remove backstop from auxiliary gantry.

b. Disassembly and Reassembly.

(1) Separate the two pipes by pulling smaller out of the larger (fig. 4-29).

(2) Remove washer and spring from the larger pipe.

(3) Reassemble by reversing procedure in steps (1) and (2) above.

c. Cleaning, Inspection and Repair.

(1) Clean all parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect pipes for bend or other defect, and spring for compression strength.

(3) Repair by straightening bends, or replacing defective parts.

d. Installation. Install backstop by reversing procedure in a above.

4-31. Backhoe Boom

a. Removal. When boom must be repaired, or replaced, proceed as follows:

(1) Pull bucket under boom and lower boom to rest on cribbing at boom foot only, then unreeve all

Figure 4-29. Backhoe safety backstop, removal, disassembly, reassembly, and installation.

reeve all cables (fig. 2-16), winding them carefully on drums.

(2) Remove boom safety backstop (para 4-30).

(3) Remove auxiliary gantry (para 4-27).

(4) Remove bucket stick (para 4-29).

(5) Build cribbing under boom point, use wedges or jacks to take weight off boom foot pins (fig. 4-30) remove pins, then move crane-shovel unit away from boom.

b. Disassembly and Reassembly.


(1) Remove two cotterpins, pins, and guide sheaves from boom foot.

(2) Remove cotterpin, pin, and guide sheave from under sheave guard.

(3) Remove two cotterpins, pin, wedge, then remove cotterpin, nut, socket, lockwasher and bolt from boom.

(4) Remove two nuts, lockwashers, and bolts from bumper blocks, then remove bumper blocks from boom.

Note. Do not remove bushings or bearings unless replacement is required.

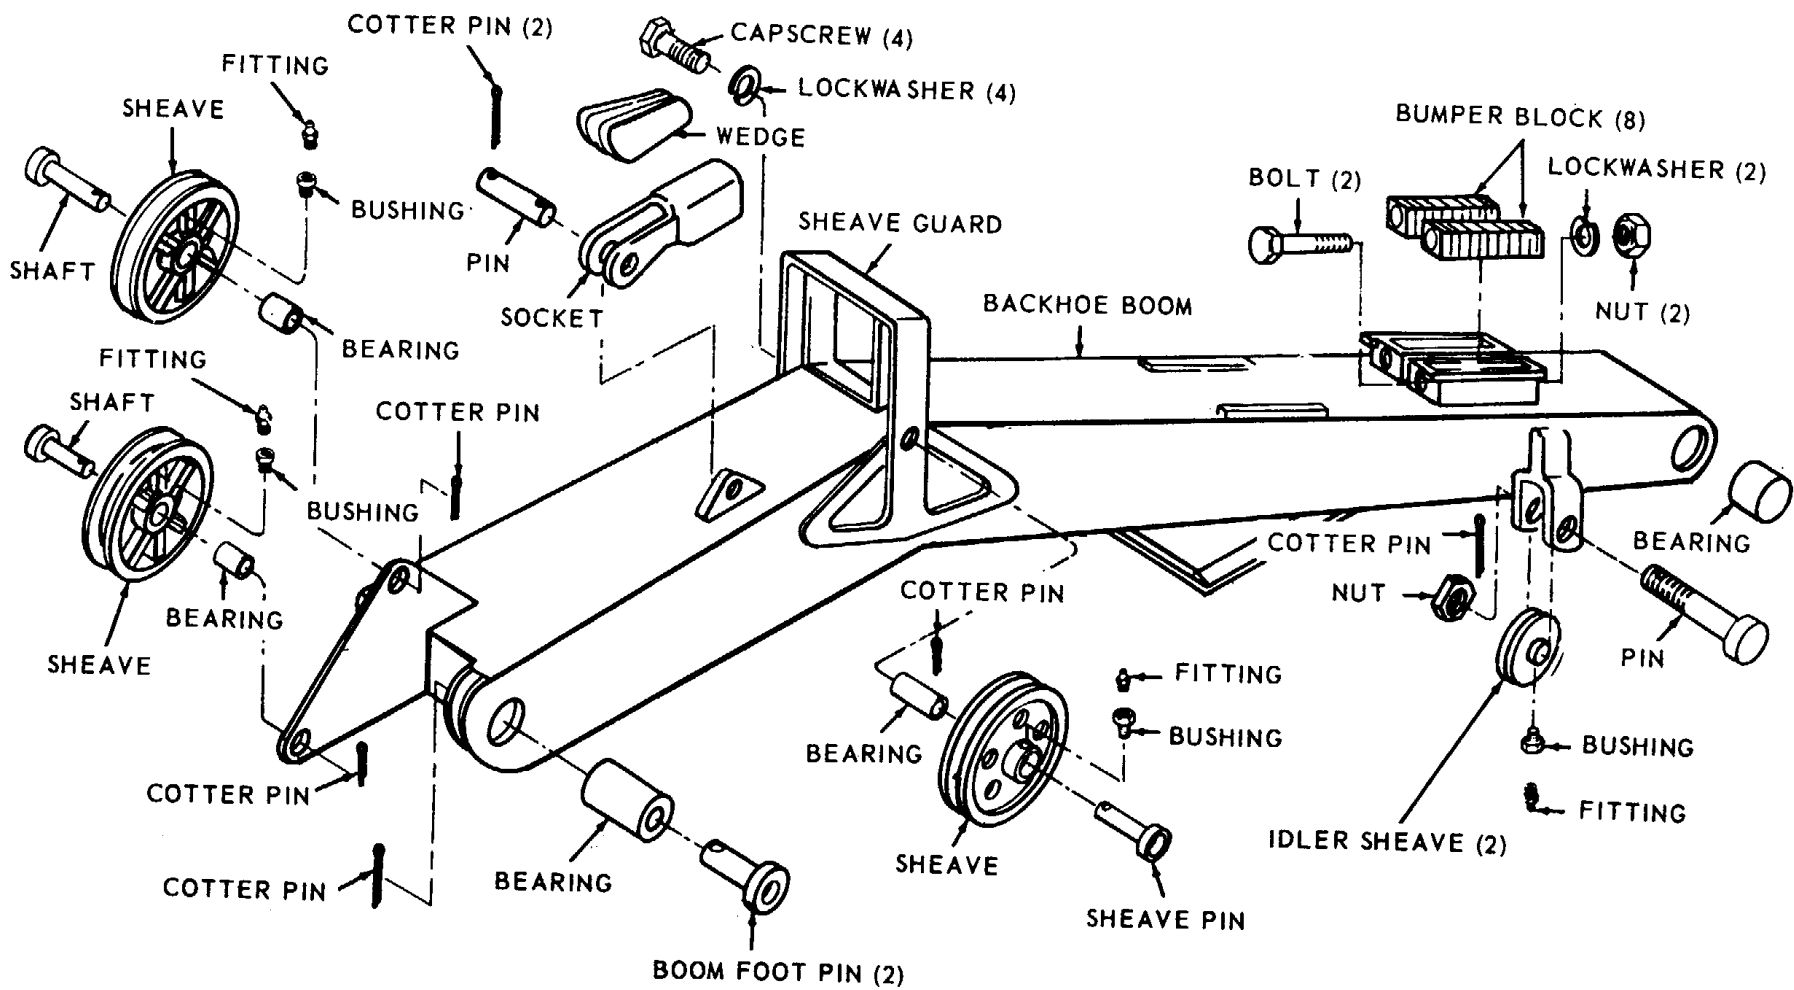

ME 3810-201-12/4-30

Figure 4-30. Backhoe boom disassembly and reassembly.

(5) Reassemble boom and components by reversing procedure in steps (1) through (4) above.

c. Cleaning, Inspection and Repair.

(1) Clean all parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect all parts for cracks, breaks, bends, scored or worn bearings, worn bumper

blocks, or other defect.

(3) Repair by welding cracks or breaks, straightening bends, and replacing worn or defective parts.

d. Installation. Install backhoe boom by reversing procedures in a above.

Section IV. PILEDRIVER FRONT END ATTACHMENT

4-32. General

The piledriver front end attachment (fig. 2-14) consists of a standard crane boom (para 4-13) with one 10 foot boom section inserted between base and point sections, pile leads, hangers, catwalk, adapters, hammer, pile cap, pile collar, and special cables for hoist and digging drums (table 1-2).

Caution: Crane-shovel unit must be level when using piledriver attachment. If it is impracticable to grade site level, timbers must be used to level the unit.

4-33. Piledriver Front End Attachment

a. Installation. Assuming the shovel front end attachment has been installed, proceed as follows:

(1) Remove shovel front end attachment (para 4-2)

(2) Remove shovel cables from drums (para. 3-43) remove shovel sprocket and planetary pinion gear (para 3-132) install crane lagging (para 3-131) and reposition planetary clutch band to crane configuration (pars 3-130).

(3) Install piledriver cables (table 1-2) (para 3-43) and wind boom hoist, pile handling, and hammer cables on drums.

(4) Move crane-shovel unit into position to install boom, similar to that shown in figure 2-6, connect boom to revolving frame (para 4-13) then reeve boom hoist cable (fig. 2-7).

(5) Raise boom (para 2-12b) just enough to allow cribbing to be removed. Remove cribbing, then install pile leads (para 4-35)

(6) Reeve hammer and pile handling cables (fig. 2-13), run off enough slack in pile handling cable to keep looped end in reach, then guide hammer cable down through pile leads. Raise boom (para 2-12b) and travel unit forward (para 2-12c) simultaneously until pile leads are suspended vertically (fig. 2-14) with bottom of leads touching the ground.

Caution: Do not drag bottom of leads on ground by raising boom without traveling crane shovel unit, and avoid damage to the leads.

(7) adapters on catwalk (para 4-37) then install catwalk.

(8) Install pile hammer, pile cap, and pile collar (para 4-36)

(9) Lower hammer, cap, and collar to ground, then perform preventive maintenance checks and services (para 3-6).

b. Removal. When piledriver front end attachment is to be removed and stored so that crane-shovel unit may be converted for other use, proceed as follows:

(1) Move piledriver unit to a suitable area for storage, then remove collar, cap, and hammer (para 4-36)

(2) Remove pile leads (para 4-35).

(3) When shovel or backhoe front end attachment is to be installed, remove crane boom (para 4-13)

Note. When crane, clamshell, or dragline front end attachment is to be installed, disregard step (3) above and proceed as in step (4) below.

(4) Remove piledriver cables (para 3-43), and after referal to appropriate paragraph, install lagging and cables (table 1-2) for the new front end attachment.

Caution: When it is intended to store any removed front end attachment for a considerable period of time, all components must be lubricated in accordance with lubricating order (LO 5-3810-201-12)and protected against deterioration by the elements during period of storage.

4-34. Pile Lead Hangers

a. Removal. Remove six nuts, lockwashers, and bolts from each hanger (fig. 4-31), then remove hangers from pile lead.

b. Cleaning, Inspection and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect hangers for cracks,

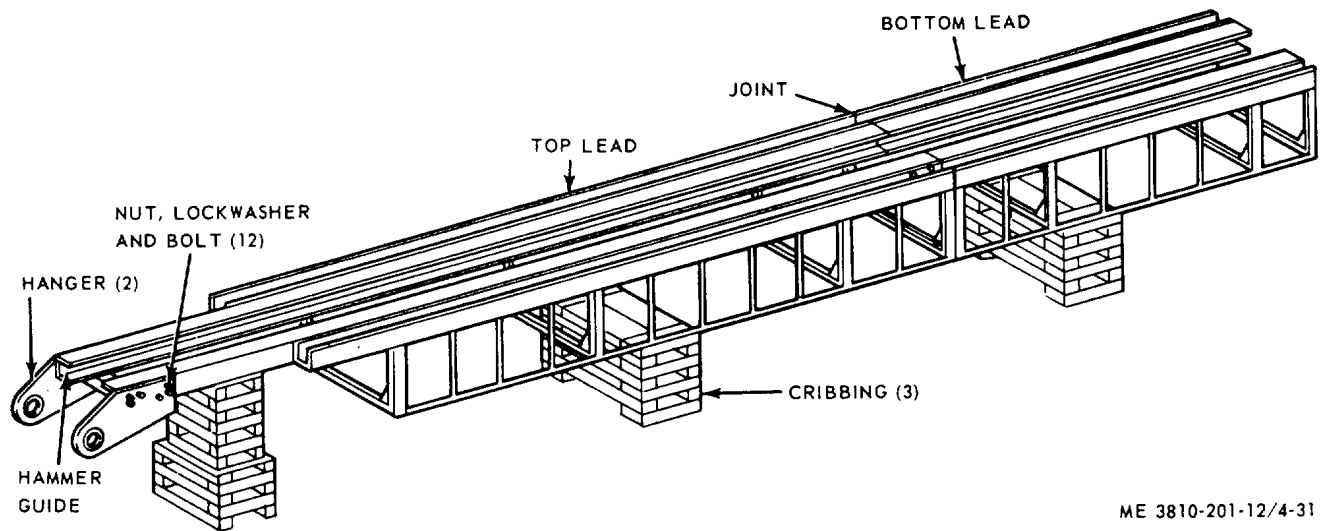


Figure 4-31. Pile leads, cribs for removal or installation.

bends, or breaks, and mounting hardware for stripped threads, or other defect.

(3) Repair by straightening bends, welding cracks, or breaks, or replacement of defective part.

c. *Installation.* Position lead hangers on lead, then secure each one with six bolts, lockwashers, and nuts.

4-35. Pile Leads

a. *Installation.*

(1) Remove one lead hanger (para 4-34) move crane-shovel unit with proper boom installed into position at cribbed pile leads, position installed hanger over boom point sheave pin, position loose hanger over boom point sheave pin, then secure it to lead with six bolts, lockwashers, and nuts.

(2) Position two spacers (fig. 4-32) on boom point sheave pin ends, install two split collars, and secure each with bolt, lockwasher and nut.

b. *Removal.*

(1) Remove collar, cap, and hammer (para 4-36).

(2) Remove catwalk and adapters (para 4-37).

(3) Position cribbing for foot of pile lead (fig. 4-31) then lower boom (para 2-12b) and travel crane-shovel unit (para 2-12c) backward simultaneously, until boom point is just above the horizontal, then build cribbing to support top and center of pile leads (fig. 4-31).

Caution: Be sure cribbing is high enough to keep boom point above the horizontal.

(4) Use wedges or jacks to take weight off of pile hangers, remove two nuts, lockwashers, and bolts securing split collars (fig. 4-32), remove two collars, and two spacers.

(5) Remove one lead hanger (para 4-34) work remaining hanger off boom point sheave pin, move crane-shovel unit away from leads, then reinstall removed hanger on lead.

(6) Raise boom and move crane-shovel unit to area for boom removal, if required.

4-36. Hammer, Pile Cap, and Pile Collar

a. *Installation.*

(1) Raise pile leads above hammer, swing boom until leads are over hammer, then install hammer cable to pin (fig. 4-32).


(2) Lift hammer up into pile leads, making sure guides of hammer engage pile guides.

(3) Position pile leads over pile cap and collar, lower hammer to rest on cap, then place two collar cable loops over hooks on hammer.

b. *Removal.*

(1) Lower hammer to ground, lift two collar cable loops off hooks on hammer and leave collar and cap on ground.

(2) Raise hammer and pile leads clear of cap and collar, swing it to one side, lower hammer to ground, then disconnect hammer cable from pin and remove hammer by raising pile leads and swinging them aside.

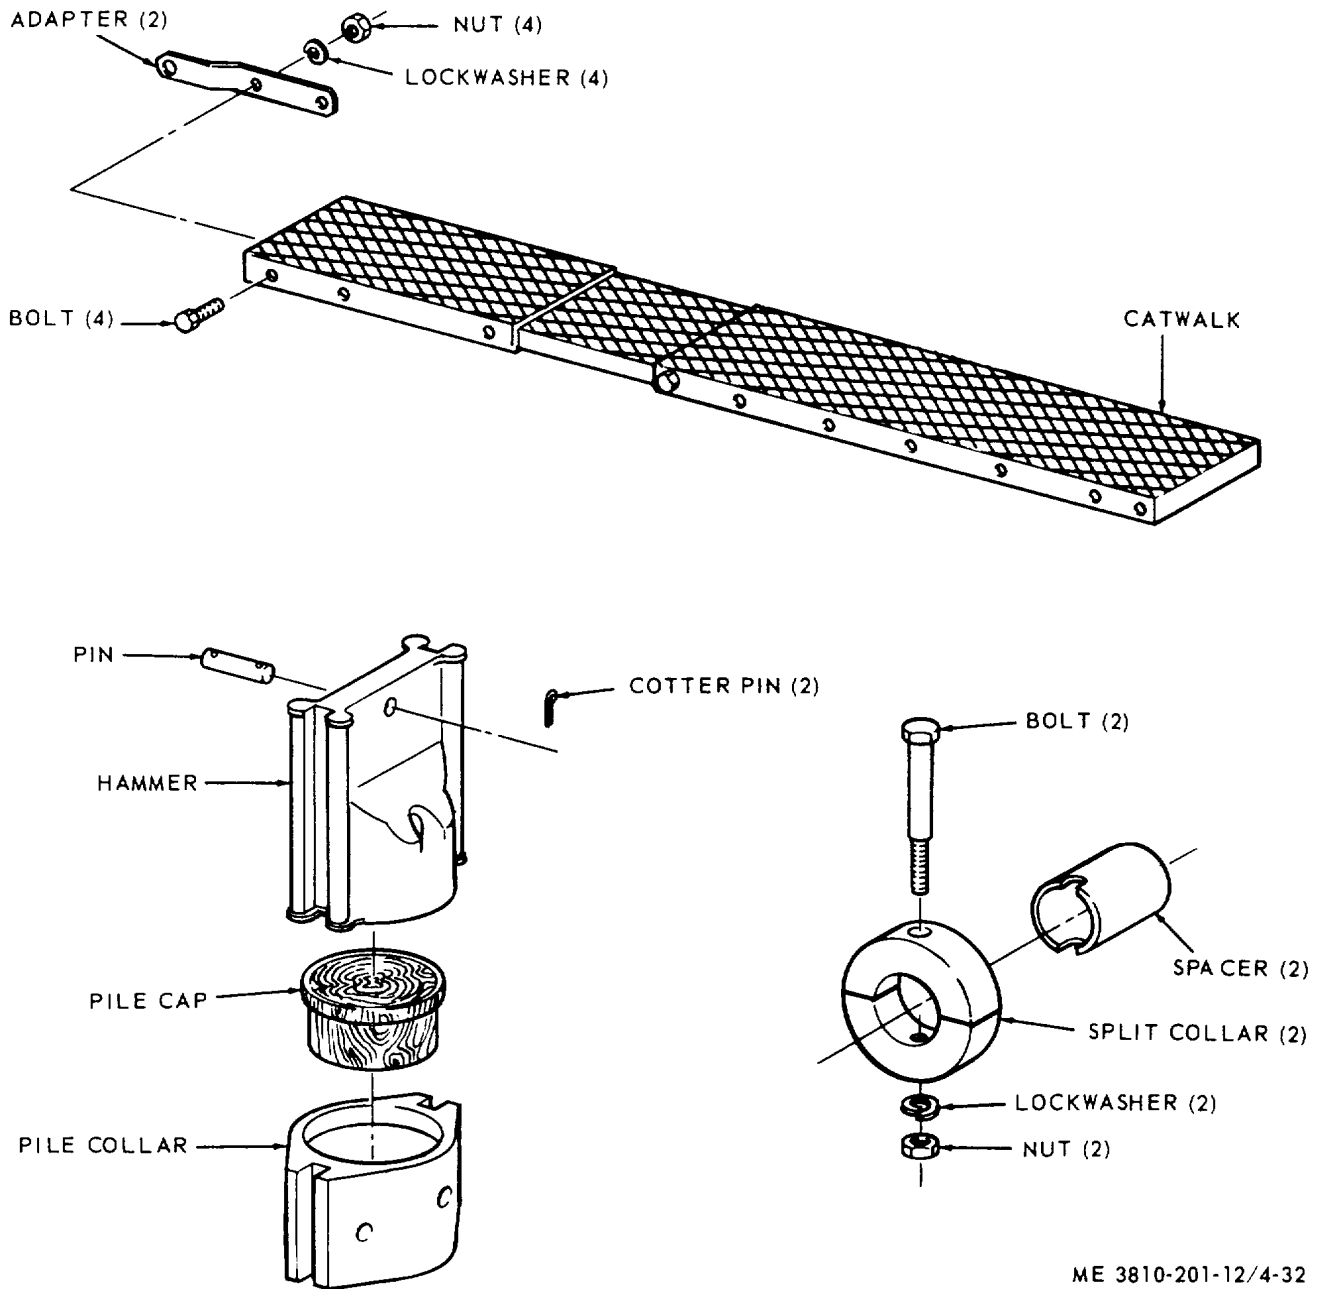

ME 3810-201-12/4-32

Figure 4-32. Pile lead attaching hardware

4-37. Catwalk and Adapters

a. Installation.

(1) Install two adapters (fig. 4-32) on end of catwalk, and secure each with two capscrews, lockwashers, and nuts.

(2) Position adapters and connect to revolving frame, then extend the telescoping catwalk toward pile lead and install two capscrews. Secure with lockwashers and nuts.

b. Removal.

(1) Remove two nuts, lockwashers, and capscrews securing catwalk to pile lead (fig. 2-14). Telescope catwalk to its shortest length, then disconnect adapters from revolving frame.

(2) Remove four nuts, lockwashers, and capscrews (fig. 4-32), then remove two adapters from catwalk.

Section V. ACCESSORIES


4-38. General

The accessory items installed on crane-shovel units include windshield wiper (winterized models) horn, and extension (trouble) light. This section will describe organizational maintenance responsibilities for these items.

4-39. Horn

a. Removal.

(1) Tag and disconnect two electrical leads (fig. 4-33).

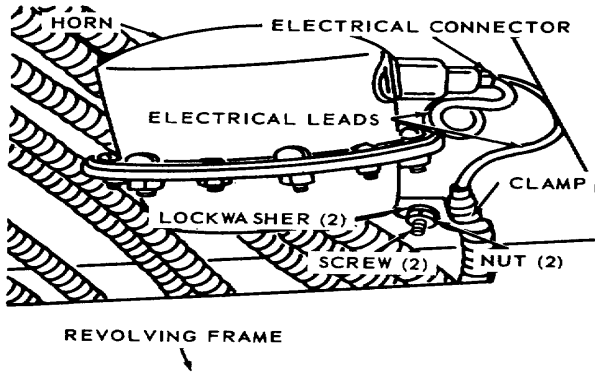

ME 3810-201-12/4-33

Figure 4-33. Horn, removal and installation.

(2) Remove two nuts, lockwashers, clamp, and screws that secures horn to underside of revolving frame and remove horn.

b. Cleaning, Inspection and Repair.

(1) Clean all parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect horn and mounting hardware for damage or defect. Inspect electrical leads for defective insulation or connectors. Test leads and horn for continuity.

(3) Replace defective horn, lead, or mounting hardware.

c. Installation.

(1) Position horn on revolving frame (fig. 4-33) install two screws, clamp, lockwashers, and secure with two nuts.

(2) Install two electrical leads as tagged and remove tags. Insure that male electrical connector plugs are well seated in the female half.

4-40. Extension (Trouble) Light

The trouble light hangs in cab ready for installation of quick connector plug into trouble light socket (fig. 2-24) on lighting control panel. Length of light cord allows use of light at any place inside cab enclosure.

4-41. Windshield Wiper

a. Removal.

(1) Disconnect electrical lead from wiper.
(2) Remove two retainers and connecting link (fig. 4-34).

(3) Remove two capscrews and lockwashers that secures wiper to mounting bracket then remove wiper.

b. Cleaning, Inspection, and Repair.

(1) Clean all parts with a rag dampened in an approved cleaning solution and dry thoroughly.

(2) Visually inspect all parts for damage or defect. Test wiper and lead for continuity. Assure that mounting hardware has not stripped threads.

(3) Repair by replacing defective mounting hardware, electrical lead, or wiper.

c. Installation.

(1) Position wiper on mounting bracket, install lockwashers on two capscrews, install cap screws to secure wiper.

(2) Position connecting link or wiper and arm posts and secure with retainers.

(3) Connect electrical lead to wiper and secure by tightening screw.

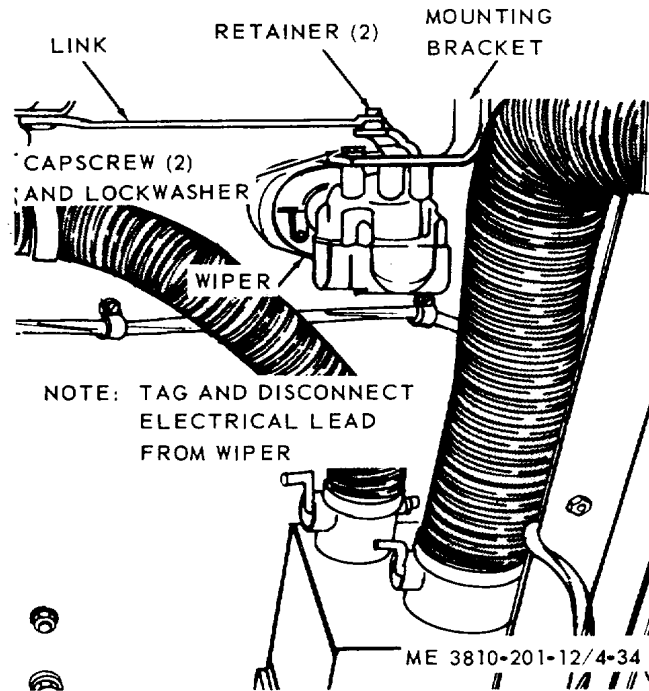


Figure 4-34. Windshield wiper removal and installation.

Section VI. WINTERIZATION EQUIPMENT

4-42. General

Fourteen units of the Model 855BG2 crane-shovel with serial number range from 22506 through 22519 are winterized for operation in temperatures to -65° F. Winterization equipment consists of a personnel heater (para 4-43), engine heater (para 4-44), battery heater (para 4-45), airducts, defrosters, controls, ether injector (primer discharger), winterfront, and special cab panels or sections. All Model D333TA engines are equipped with glow plugs (para 4-51). Heaters are mounted outside the cab, above counterweight, and are remotely controlled by heater control panel (para 4-47). This section outlines organizational maintenance procedures authorized by the maintenance allocation chart for these units. The balance of the units are not equipped with heaters, or windshield wipers.

Note. When the Model 687C-18-ES engine is replaced by the Model D333TA engine on a winterized crane-shovel unit, a special winterization modification kit must be requested from the National Maintenance Point. Direct the request to: Commanding General, Army Mobility Equipment Command, ATTN: AMSME-M, 4300 Goodfellow Boulevard, St. Louis, Mo. 63120.

4-43. Personnel Heater

a. Removal and Installation. Refer to figure 4-35 and remove personnel heater. Install in reverse order.

b. Disassembly and Reassembly.

(1) Refer to figure 4-36 and disassemble the personnel heater. Reassemble in reverse order.

(2) Refer to figure 4-37 and disassemble the personnel heater control. Reassemble in reverse order.

c. Cleaning, Inspection, and Repair.

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect burner, ignitor, flame switch, fuel regulating valve, resistor, and time delay relay for damage or defect.

(3) Visually inspect mounting hardware for excessive wear, burs, or stripped threads.

(4) Visually inspect terminal block, electrical leads for, breaks, frayed insulation, or loose terminals. Inspect casings and covers for dents or cracks.

(5) Repair by replacing damaged or defective mounting hardware or components. Straighten dents and weld cracks. Repair or replace defective electrical leads. Replace a defective heater.

d. Operation. Refer to paragraph 2-26 for heater operating instructions.

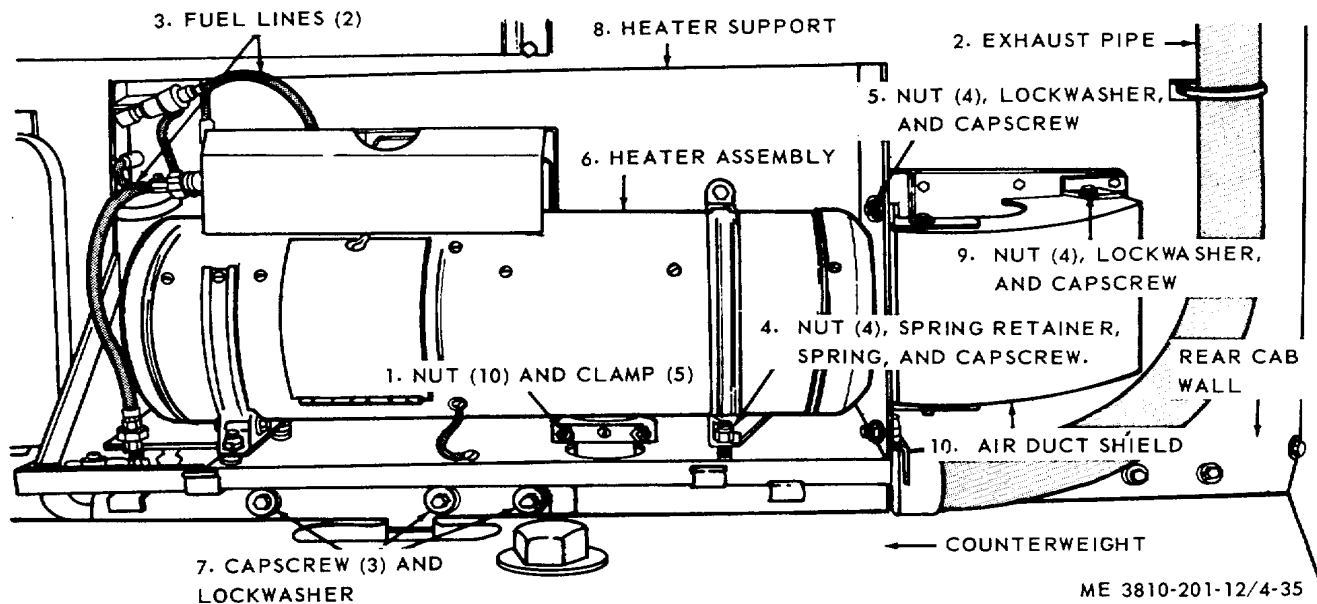


Figure 4-35. Personnel heater removal and installation.

4-44. Engine Heater

a. *Removal and Installation.* Refer to view A figure 4-38 and remove engine heater. Install in reverse order.

b. *Disassembly and Reassembly.*

(1) Refer to figure 4-36 and disassemble the engine heater. Reassemble in reverse order.

(2) Refer to figure 4-37 and disassemble the engine heater control. Reassemble in reverse order.

c. *Cleaning, Inspection, and Repair.* Clean, inspect, and repair engine heater in manner similar to that described in paragraph 4-43 above.

d. *Operation.* Refer to paragraph 2-26 for heater operating instructions.

4-45. Battery heater

a. *Removal and Installation.* Refer to view B of figure 4-38 and remove battery heater. Install in reverse order.

b. *Disassembly and Reassembly*

(1) Refer to figure 4-39 and disassemble the battery heater. Reassemble in reverse order.

(2) refer to figure 4-40 and disassemble the battery heater control. Reassemble in reverse order.

c. *Cleaning, Inspection, and Repair.* Clean, inspect, and repair battery heater in manner similar to that described in paragraph 4-43 above.

d. *Operation.* Refer to paragraph 2-26 for heater operating instructions.

4-46. Heater Fuel Tank, Fuel Pumps, Tank and Fuel Strainer Group

a. *Removal and Installation.*

(1) Tag and disconnect electrical leads from all fuel pumps, and cutoff fuel flow by closing shutoff valves.

(2) Refer to figure 4-41, position container under drain plug, remove items 1, 2, and 3 and drain heater fuel tank.

(3) Remove remaining items in numerical sequence.

(4) Install in reverse order.

Note. Individual items of the group may be removed and installed separately. Never remove any item except when necessary to remove defective components.

b. *Cleaning, Inspection, and Repair.*


(1) Clean all removed parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect removed hardware for wear, burs, or stripped threads. Inspect other removed components for damage or defect. Inspect fuel tank for cracks, leaks, or other defect.

(3) Repair by replacing defective tank strainer, cap, fuel strainer, fuel line, fitting or mounting hardware. Weld cracks or leaks in fuel tank.

Warning: Fill, tank with water before welding to void tank of gasoline fumes, and avoid injury by explosion.

c. *Service.* Services to heater fuel tank, heater

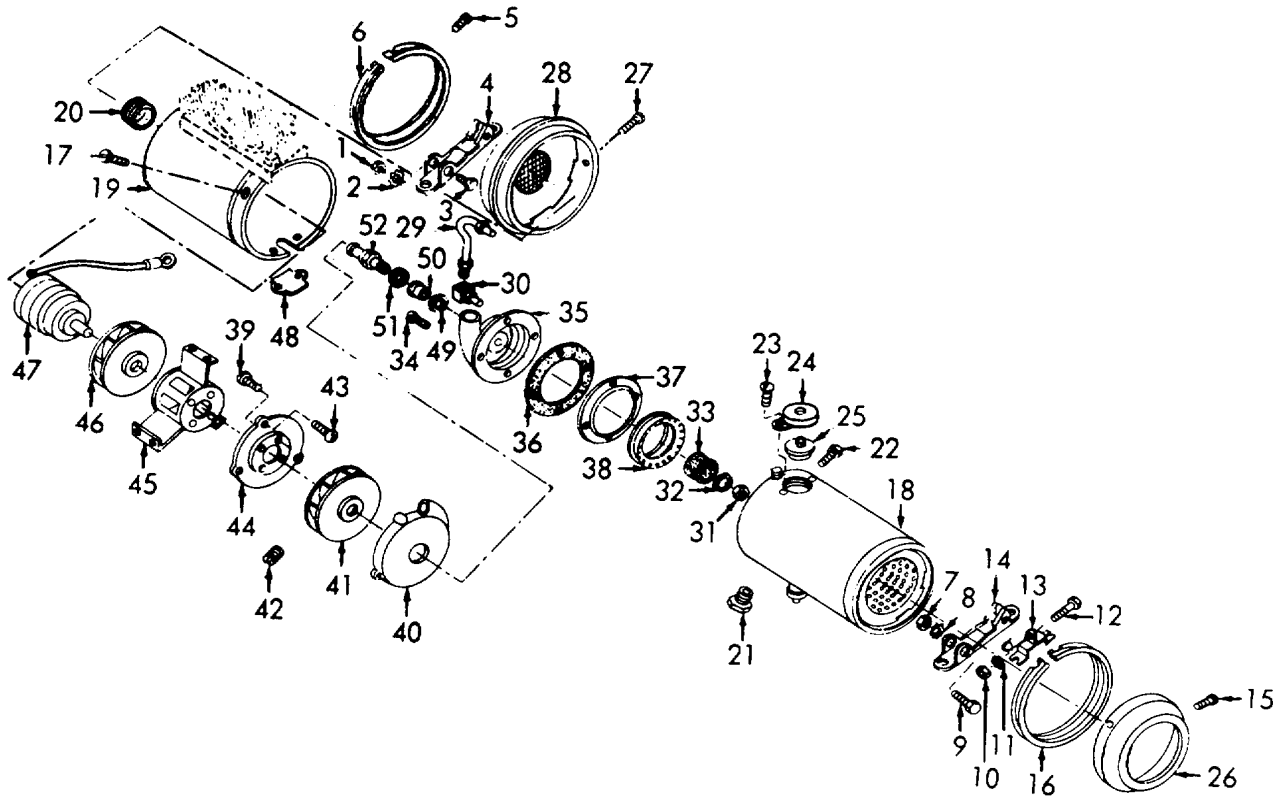

ME 3810-201-12/4-36

- | | | |
|--------------|----------------|-----------------|
| 1 Nut | 19 Casing | 37 Ring |
| 2 Washer | 20 Grommet | 38 Head, burner |
| 3 Capscrew | 21 Cap | 39 Screw (3) |
| 4 Base | 22 Screw (9) | 40 Body |
| 5 Screw (9) | 23 Screw (4) | 41 Fan |
| 6 Bracket | 24 Cover | 42 Setscrew |
| 7 Nut (5) | 25 Reducer | 43 Screw (4) |
| 8 Washer (5) | 26 Reducer | 44 Scroll |
| 9 Bolt (5) | 27 Screw (10) | 45 Support |
| 10 Nut | 28 Cover | 46 Fan |
| 11 Washer | 29 Tube | 47 Motor |
| 12 Bolt | 30 Nozzle | 48 Plate |
| 13 Clamp (2) | 31 Nut | 49 Shim (2) |
| 14 Base | 32 Washer | 50 Adapter |
| 15 Screw | 33 Wick | 51 Shim (2) |
| 16 Ring | 34 Bolt (4) | 52 Igniter |
| 17 Screw (5) | 35 Burner head | |
| 18 Chamber | 36 Gasket | |

Figure 4-36. Personnel or engine heater, disassembly and reassembly.

fuel strainers, and heater fuel pumps are described in paragraphs 3-24, 3-25, and 3-26.

4-47. Heater Control Panel (Distribution Box)

a. *Removal and Installation.* Refer to view A of figure 4-42 and remove wiring harness and heater control panel from operator's compartment. Install in reverse order.

b. *Disassembly and Reassembly.* Refer to view B of figure 4-42 and disassemble heater control panel in numerical sequence. Reassemble in reverse order.


c. *Cleaning, Inspection, and Repair.*

(1) Clean all metal parts with an approved cleaning solvent and dry thoroughly.

(2) Clean all electrical parts with a rag dampened in an approved cleaning solvent then dry thoroughly with a clean dry cloth.

(3) Visually inspect all parts for damage or defect.

(4) Repair by replacing damaged or defective electrical lead, switch, circuit breaker, or indicator light. Replace all defective mounting hardware.

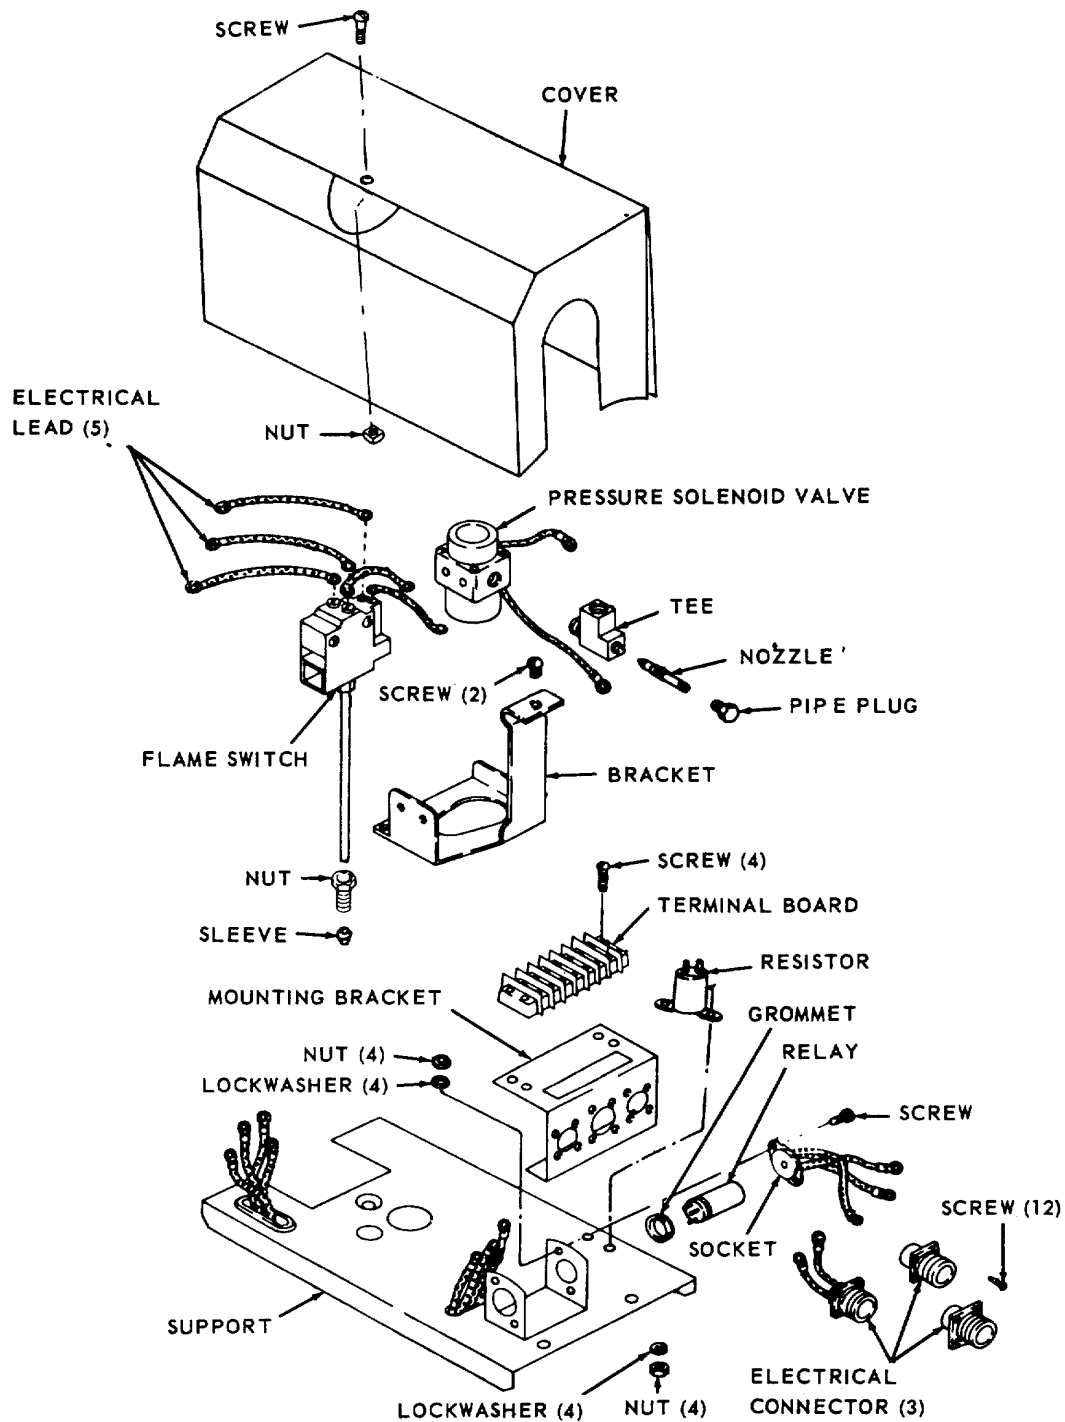

ME 3810-201-12/4-37

Figure 4-37. Personnel and engine heater control, disassembly and reassembly.

4-48. Battery Heater Automatic Temperature Control


a. Removal and Installation

(1) Refer to figure 4-43, remove pin from reducer and let it hang by chain.

(2) Loosen two hose clamps and disconnect battery air hose, then disconnect electrical lead.


(3) Remove four capscrews and lockwashers securing automatic temperature control to mounting bracket then remove control.

NOTE: DRAIN COOLANT SYSTEM (PARA 3-20). REMOVE HEATER COVER, TAG AND DISCONNECT CONTROL CABLE, SHUT OFF FUEL FLOW, THEN REMOVE THE ENGINE HEATER.

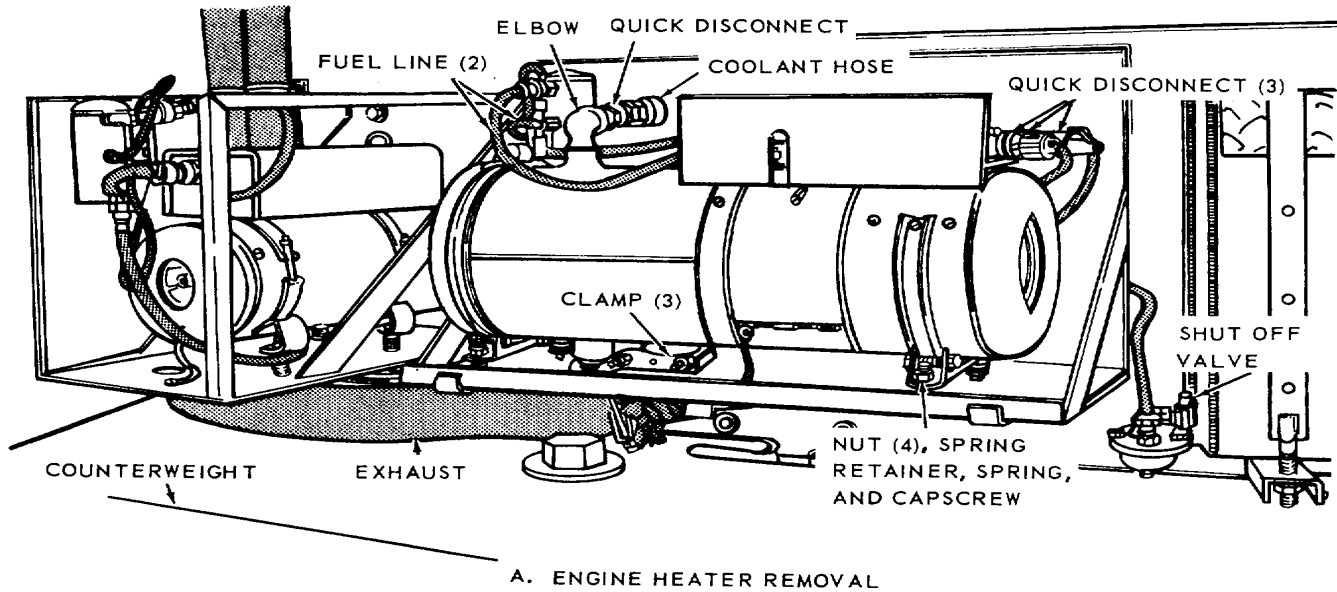

ME 3810-201-12/4-38 (1)

Figure 4-38. Engine heater and battery heater, removal and installation (sheet 1 of 2).

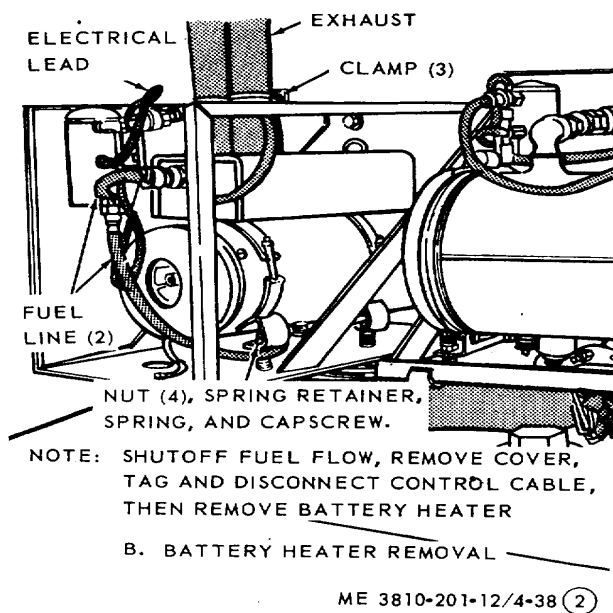


ME 3810-201-12/4-38 (2)

Figure 4-48. Engine heater and battery heater, removal and installation (sheet 2 of 2)

- (4) Install in reverse order.
- b. *Cleaning, Inspection, and Repair.*
 - (1) Clean all metal parts in an approved cleaning solvent and dry thoroughly.
 - (2) Visually inspect automatic temperature control for damage, defect, or damaged mounting hardware.
 - (3) Repair by replacing damaged mounting hardware. Replace a defective automatic temperature control.


4-49. Defroster, Hose, and Manifold Group

- a. *Removal and Installation.* Refer to figure 4-44 and remove applicable defroster, hose, or the manifold.
- b. *Cleaning, Inspection, and Repair.*
 - (1) Clean all removed parts with a rag dampened in an approved cleaning solvent and dry thoroughly.
 - (2) Visually inspect all parts for cracks, bends, collapsed hose, or defective mounting hardware.
 - (3) Repair by straightening bends, welding cracks, or replacing defective components.

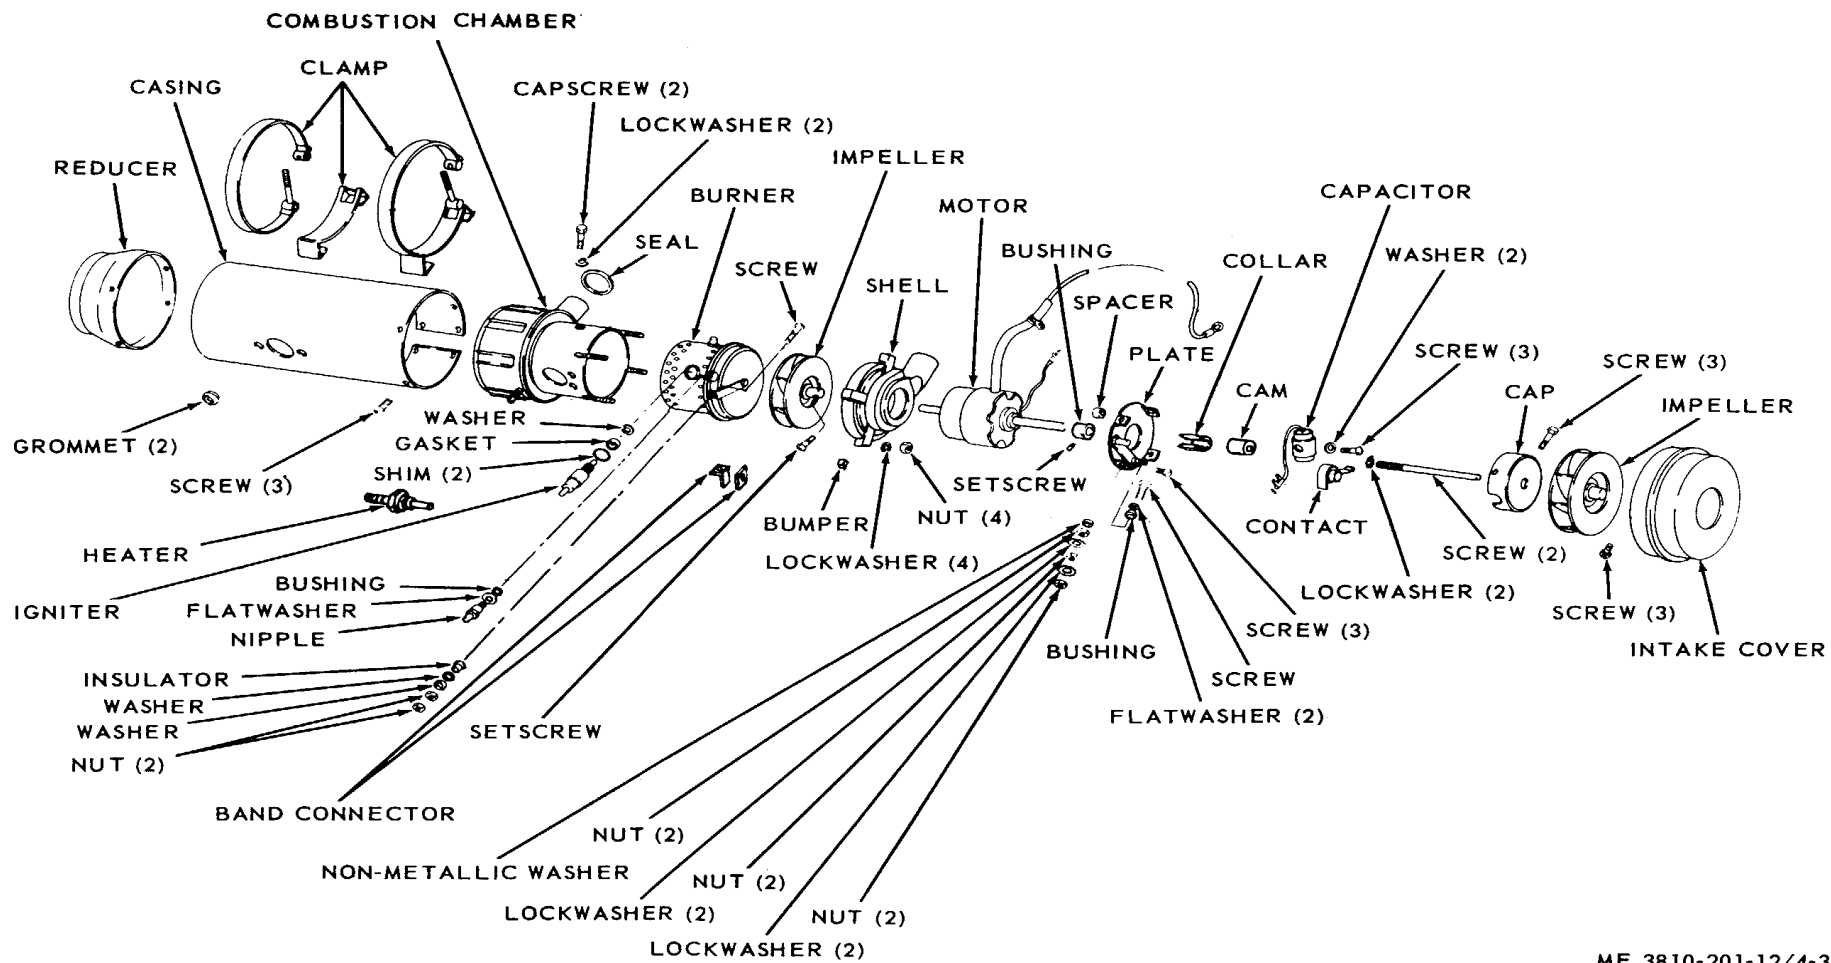

ME 3810-201-12/4-39

Figure 4-39. Battery heater, disassembly and reassembly.

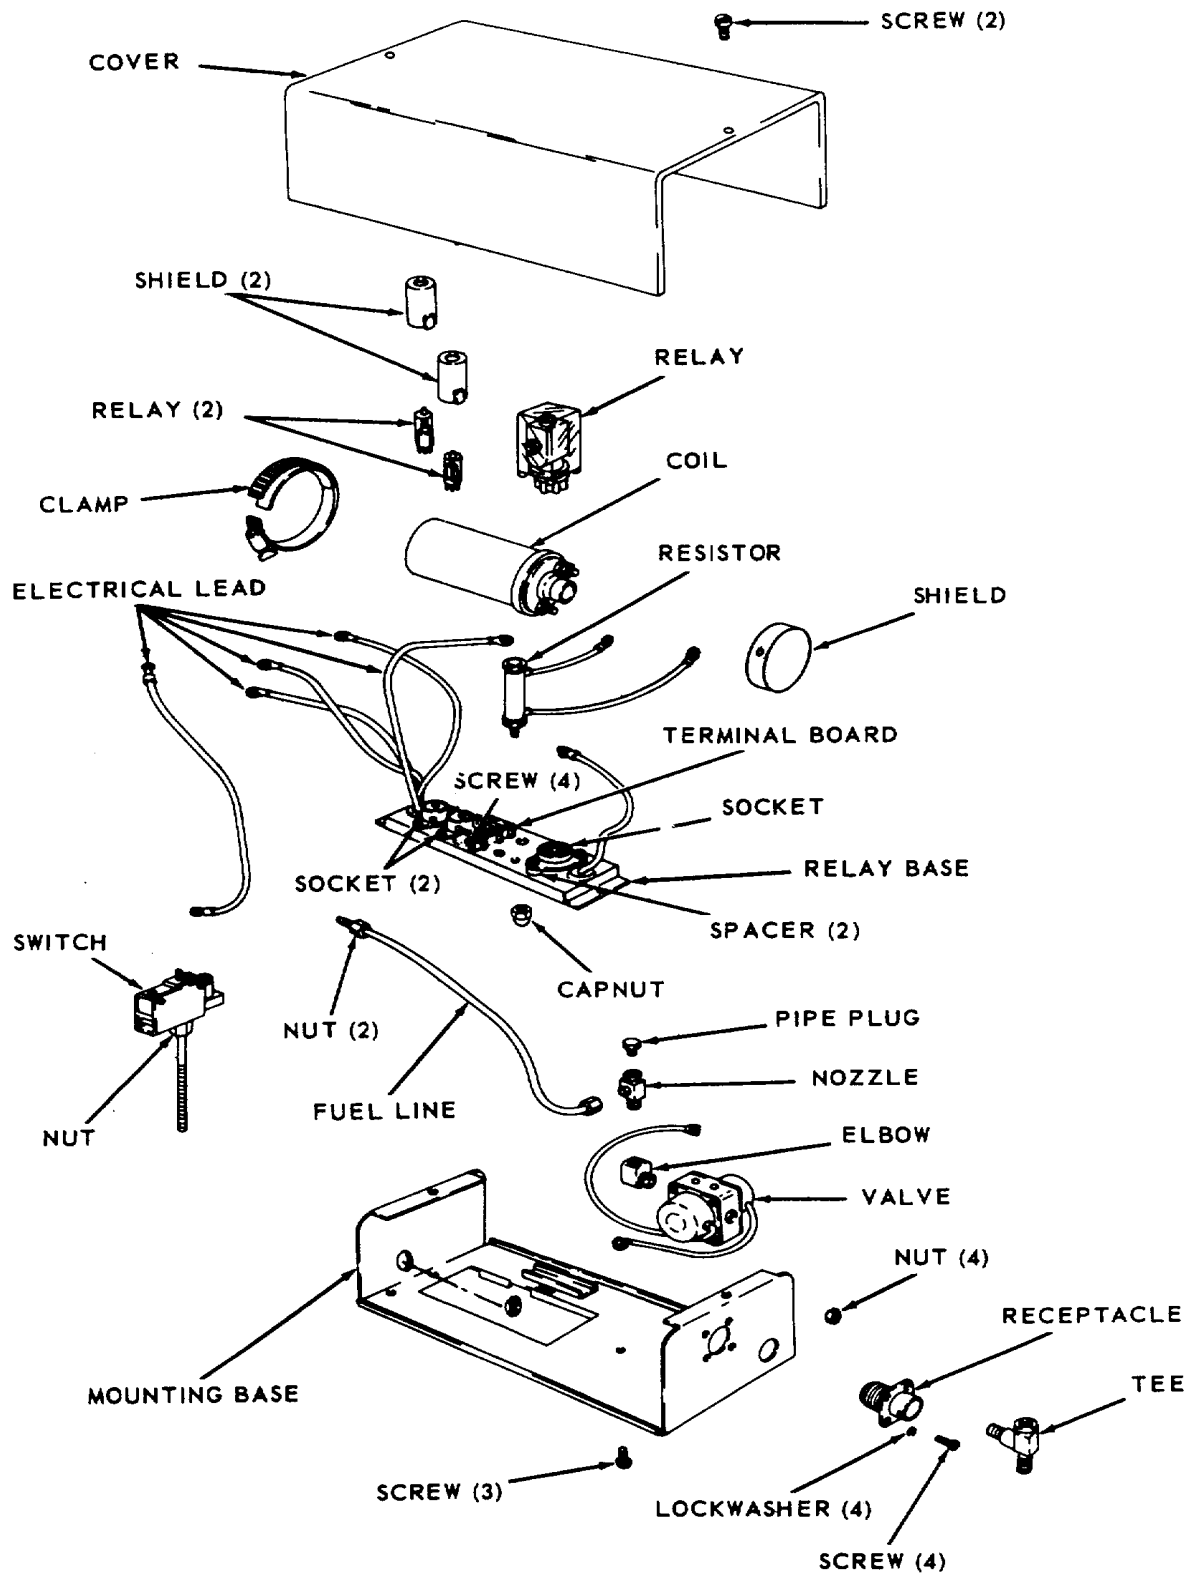

ME 3810-201-22/4-40

Figure 4-40. Battery heater control, disassembly and reassembly.


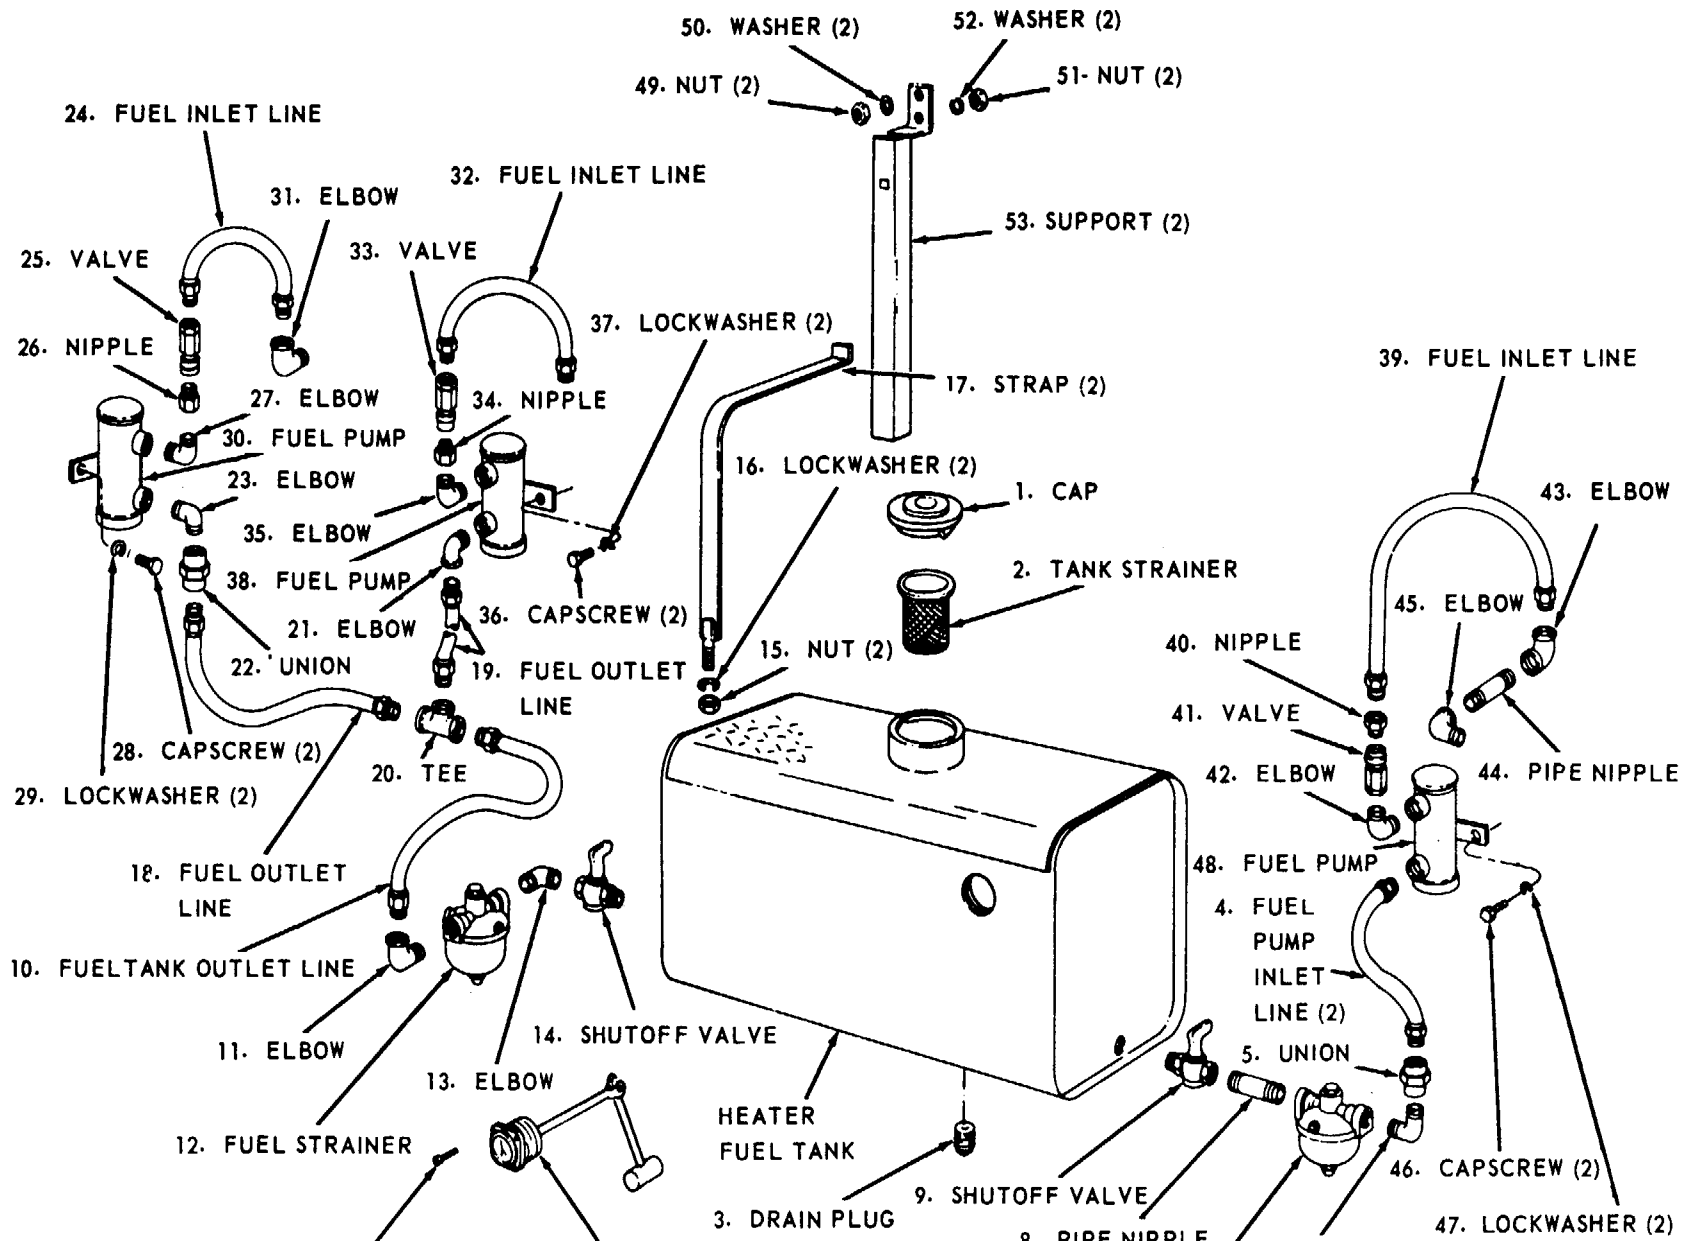


Figure 4-41. Heater fuel tank, strainers, and fuel pump group, removal and installation.

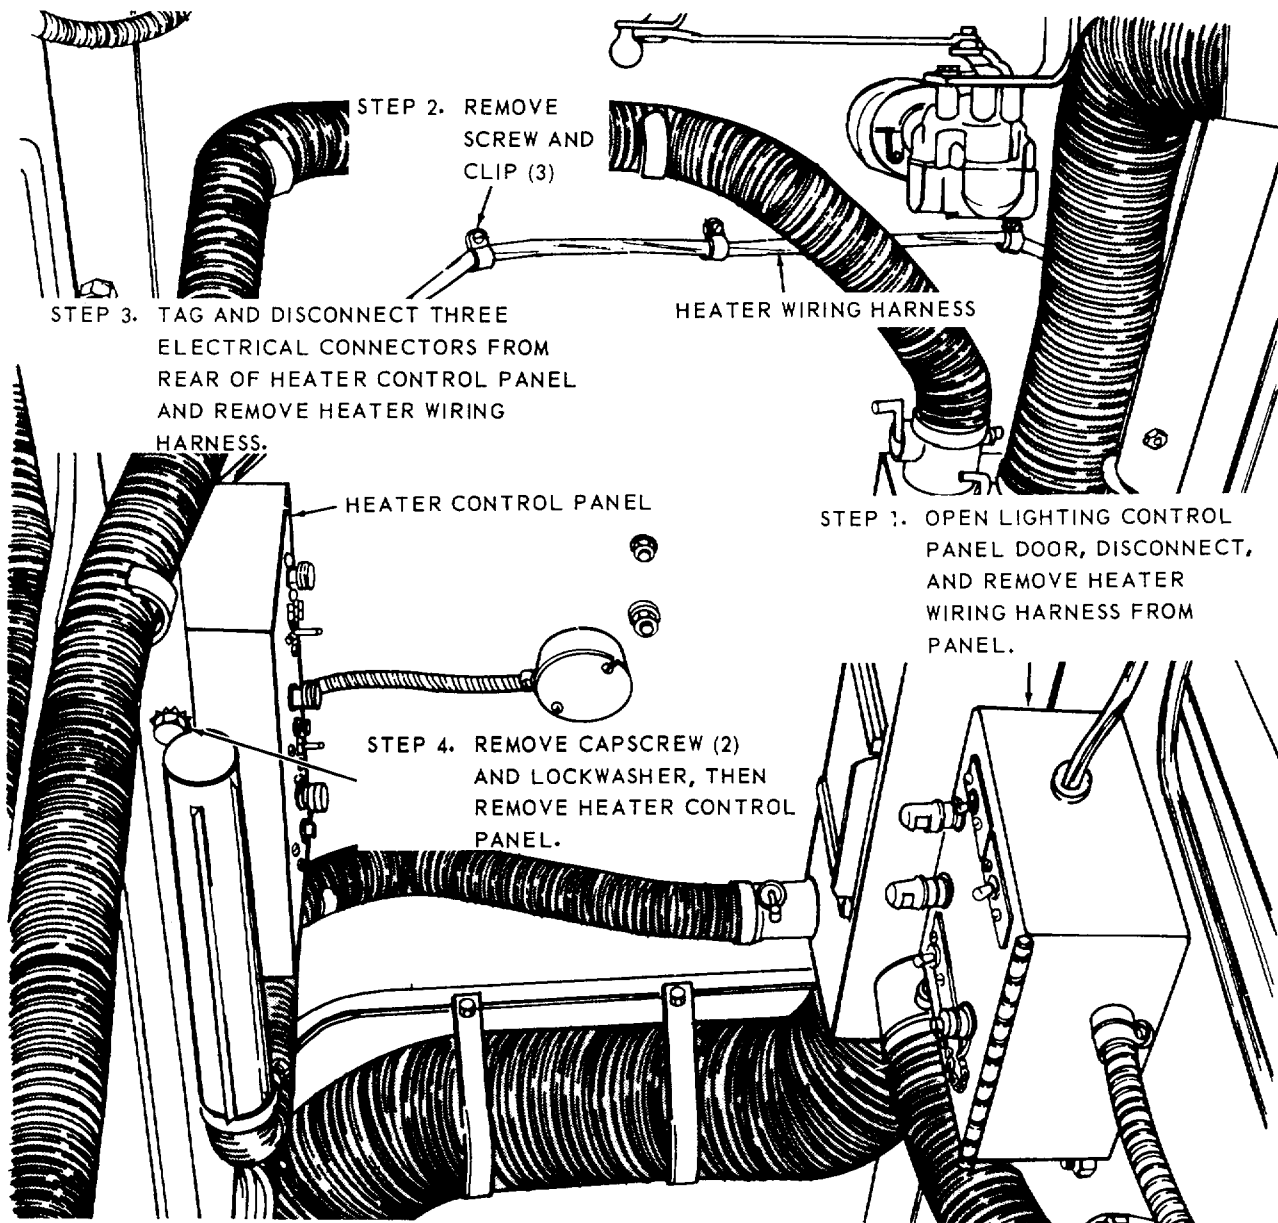

A. WIRING HARNESS AND HEATER CONTROL PANEL REMOVAL.

ME 3810-201-12/4-42 ①

Figure 4-42. Heater control panel, removal, disassembly, reassembly and installation (sheet 1 of 2).

4-50. Pressure Primer Discharger (Ether Injector)

a. *Removal and Installation.* Refer to figure 4-45 and remove pressure primer discharger in numerical sequence. Install in reverse order.

b. *Disassembly and Reassembly.* Refer to figure 4-46 and disassemble the pressure primer discharger in numerical sequence. Reassemble in reverse order.


c. *Cleaning, Inspection, and Repair.*

(1) Clean all parts in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect valve spring for deformation, for tension, seating of valve at discharge nozzle, or other defect. Be sure cotter pin hole in valve stem is not elongated so that discharge trigger has excess movement before moving valve from discharge nozzle. Be sure that piercing pin is sharp enough and long enough to open cartridge during travel of holder down body threads.

(3) Repair by replacing worn or defective parts.

NOTE: TAG EACH ELECTRICAL WIRE LEAD TO IDENTIFY ITS POSITION BEFORE REMOVING FROM CONTROL BOX.

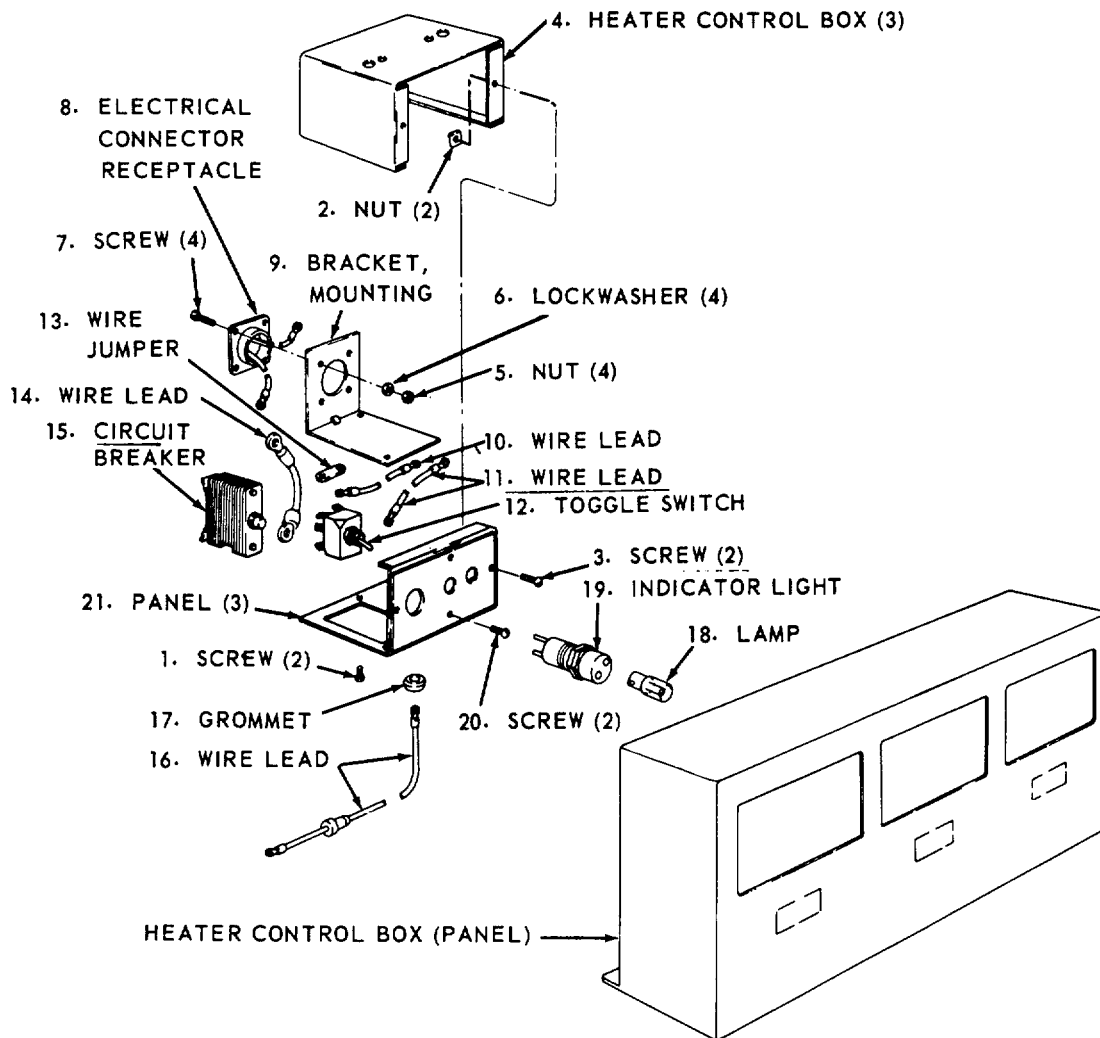

NOTE: DISASSEMBLE OR REASSEMBLE REMAINING HEATER CONTROL BOXES IN A SIMILAR MANNER.

DISASSEMBLY AND REASSEMBLY

ME 3810-201-12/4-42 (2)

Figure 4-42. Heater control panel, removal, disassembly, reassembly, and installation (Sheet 2 of 2).

4-51. Glow Plugs (Engine Model D333TA Only)

a. Removal.

(1) Tag and disconnect electrical lead at glow plug.

(2) Remove glow plug (fig. 4-47) by turning counterclockwise with wrench on wrenching surface until threads are disengaged then lift glow plug from precombustion chamber. Remove remaining plugs in a similar manner.

b. Cleaning, Inspection, Test, and Repair.

(1) Clean electrical lead and glow plug with a rag dampened in an approved cleaning solvent and dry thoroughly.

(2) Visually inspect electrical lead for cracked or deteriorating insulation, or loose terminals. Inspect glow plug for visible signs of short circuit (discoloration), or other damage.

(3) Use an ohmmeter, place probe at each end of lead and test for continuity. Replace a defective electrical lead.

(4) Use an ohmmeter, place negative probe at threads and positive probe at glow plug terminal, then test for continuity. Replace a defective glow plug.

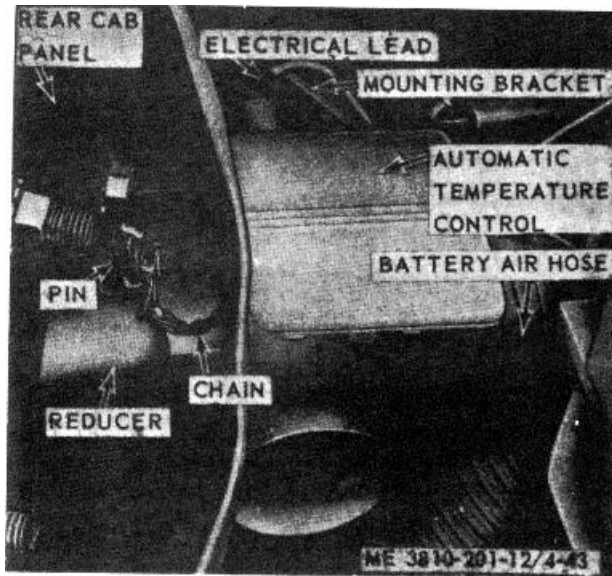


Figure 4-43. Battery heater automatic temperature control, removal and installation.

Note. In absence of an ohmmeter the glow plug may be tested by grounding threads at cylinder head, attaching known 24vdc hot lead at glow plug terminal. If heat cannot be felt at tip, or plug fails to glow, it is defective and must be replaced.

c. Installation.

(1) Install glow plug (fig. 4-47) in precombustion chamber by turning clockwise until threads are seated finger tight.

(2) Use torque wrench or wrenching surface and tighten to between 10 and 12 ft-lbs.

(3) Connect electrical lead and remove tag.

(4) Install remaining glow plugs in a similar manner.

4-52. Winterfront

a. Removal and Installation. Refer to figure 4-48, remove items (1), (2), and (3) then remove winterfront from cab left hand wall. Install in reverse order.


b. Disassembly and Reassembly. Refer to figure 4-48, disassemble winterfront by starting at item (4) and remove items in numerical sequence. Reassemble in reverse order.

c. Cleaning, Inspection, and Repair.

(1) Clean all parts with an approved cleaning solvent and dry thoroughly.

(2) Visually inspect all parts for bends, cracks, or other defect. Inspect mounting hardware for burs or stripped threads.

(3) Repair by straightening bends, welding cracks, and replacing defective mounting hardware or components.

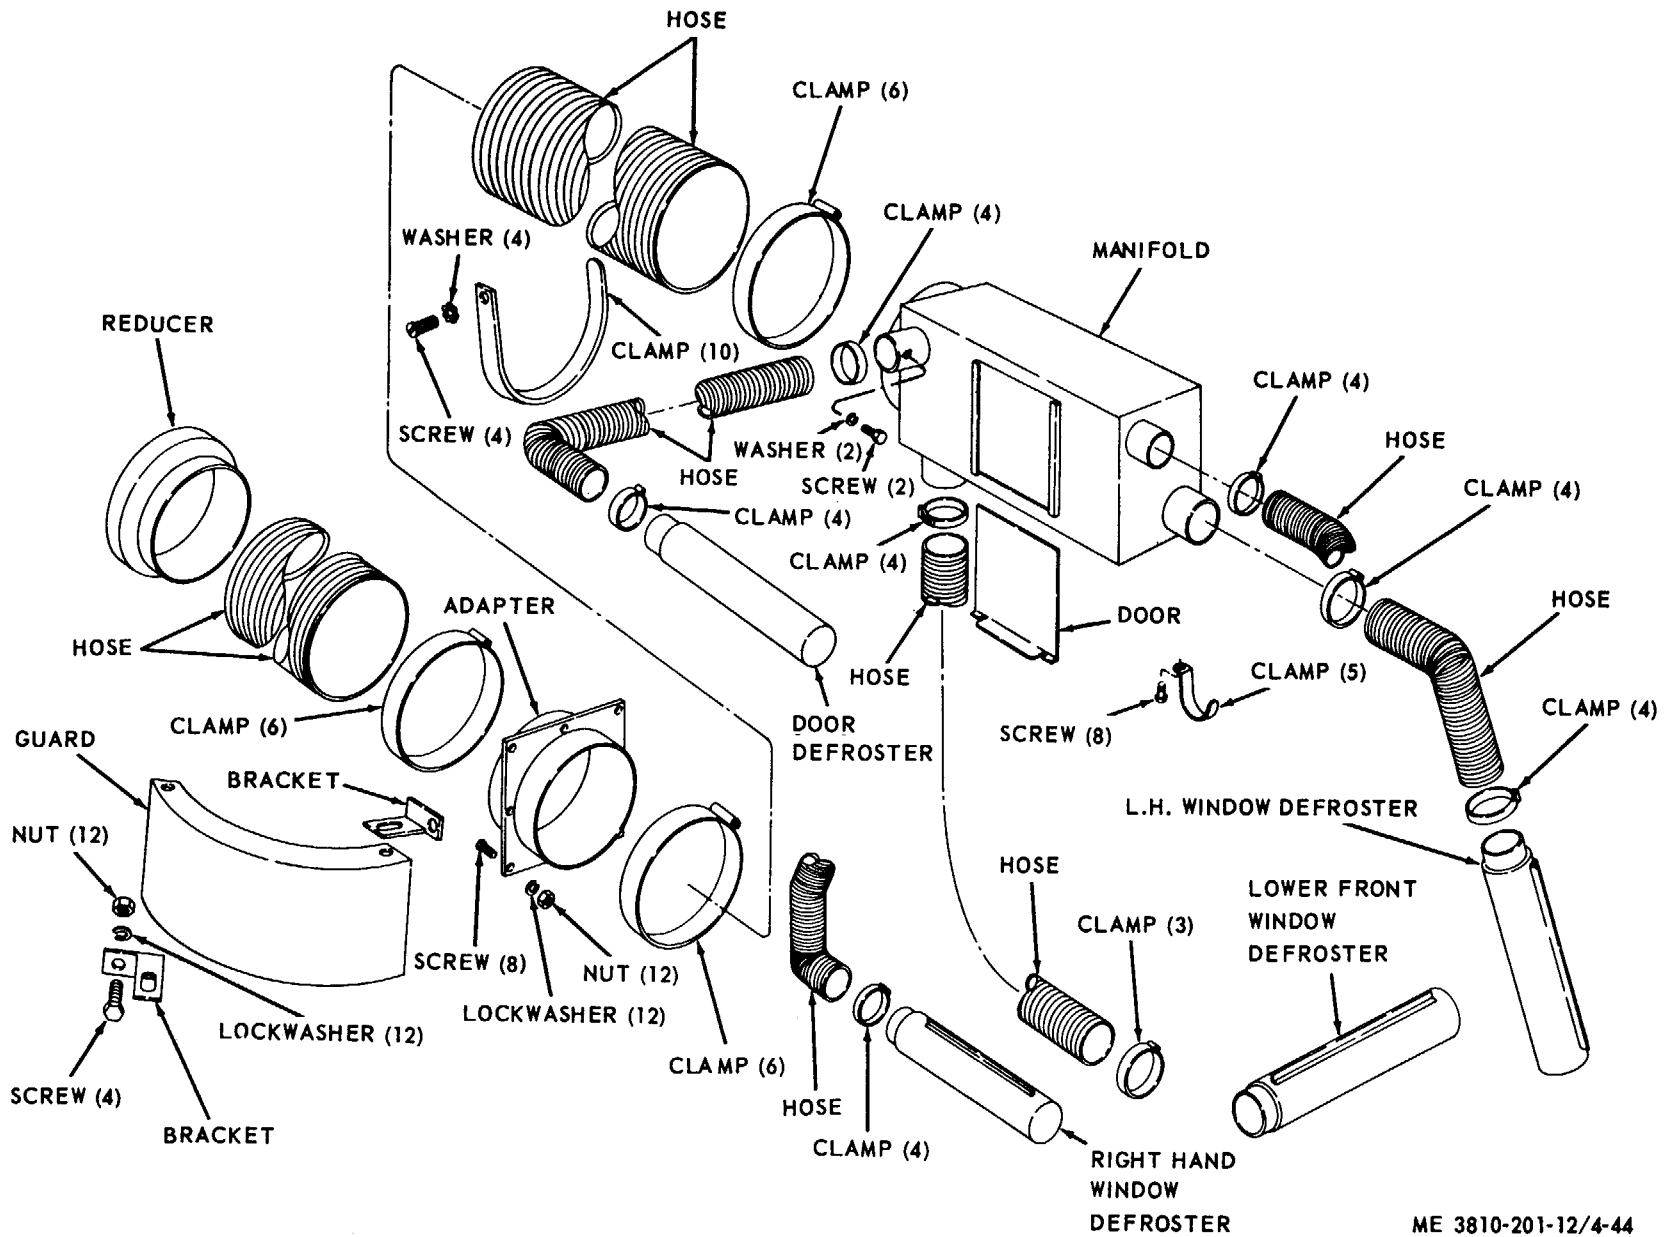

ME 3810-201-12/4-44

Figure 4-44. Defroster, hose, and manifold group, removal and installation.


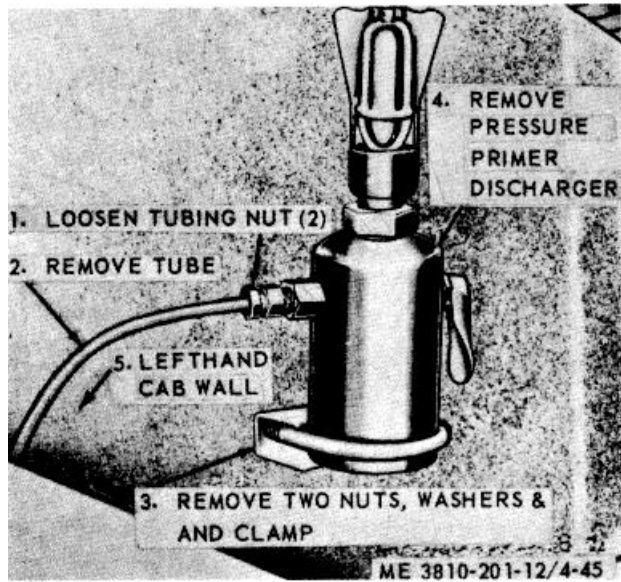


Figure 4-45. Pressure Primer discharge, removal and installation.

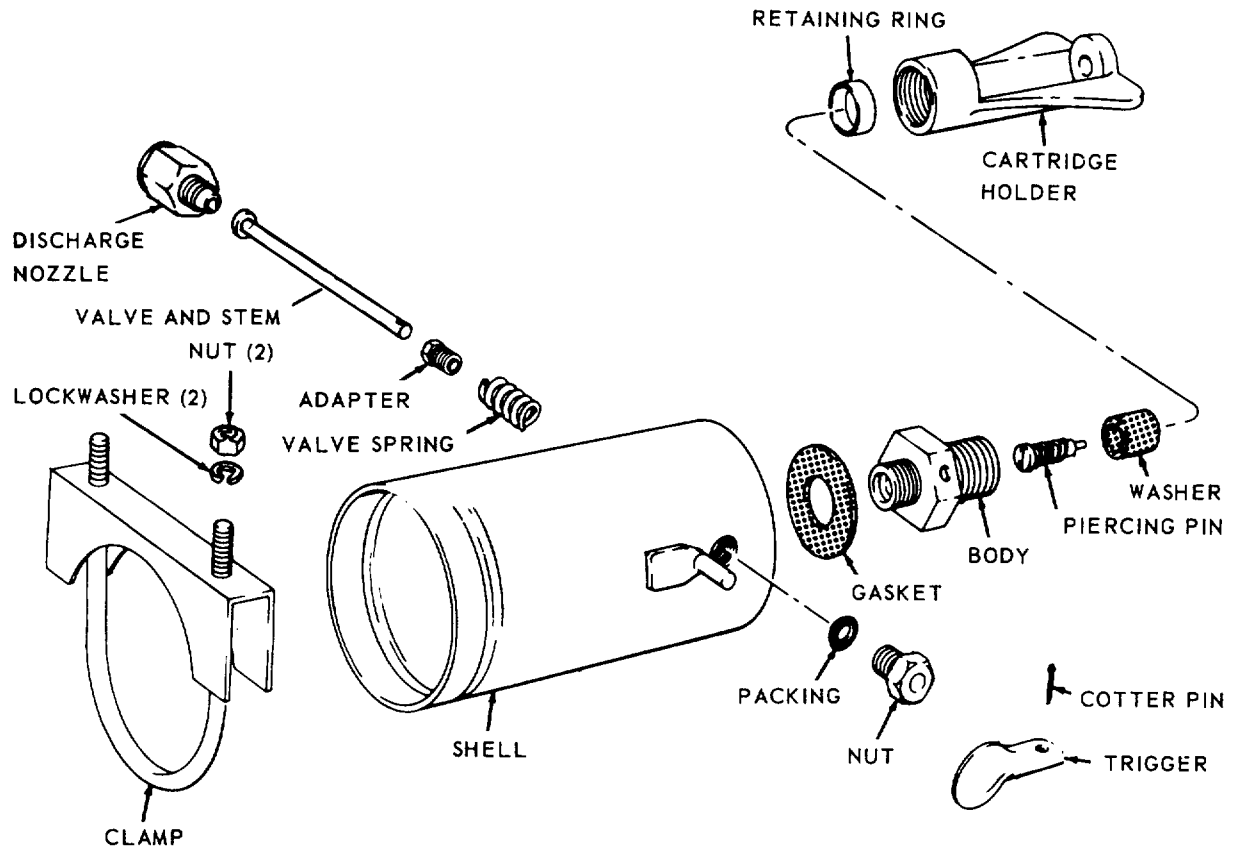

ME 3810-201-12/4-46

Figure 4-46. Pressure primer discharger, disassembly and reassembly.

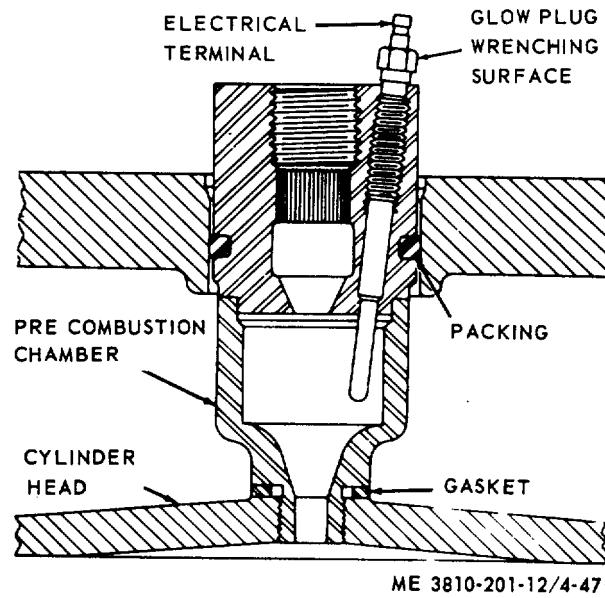


Figure 4-47. Glow plug, removal and installation.

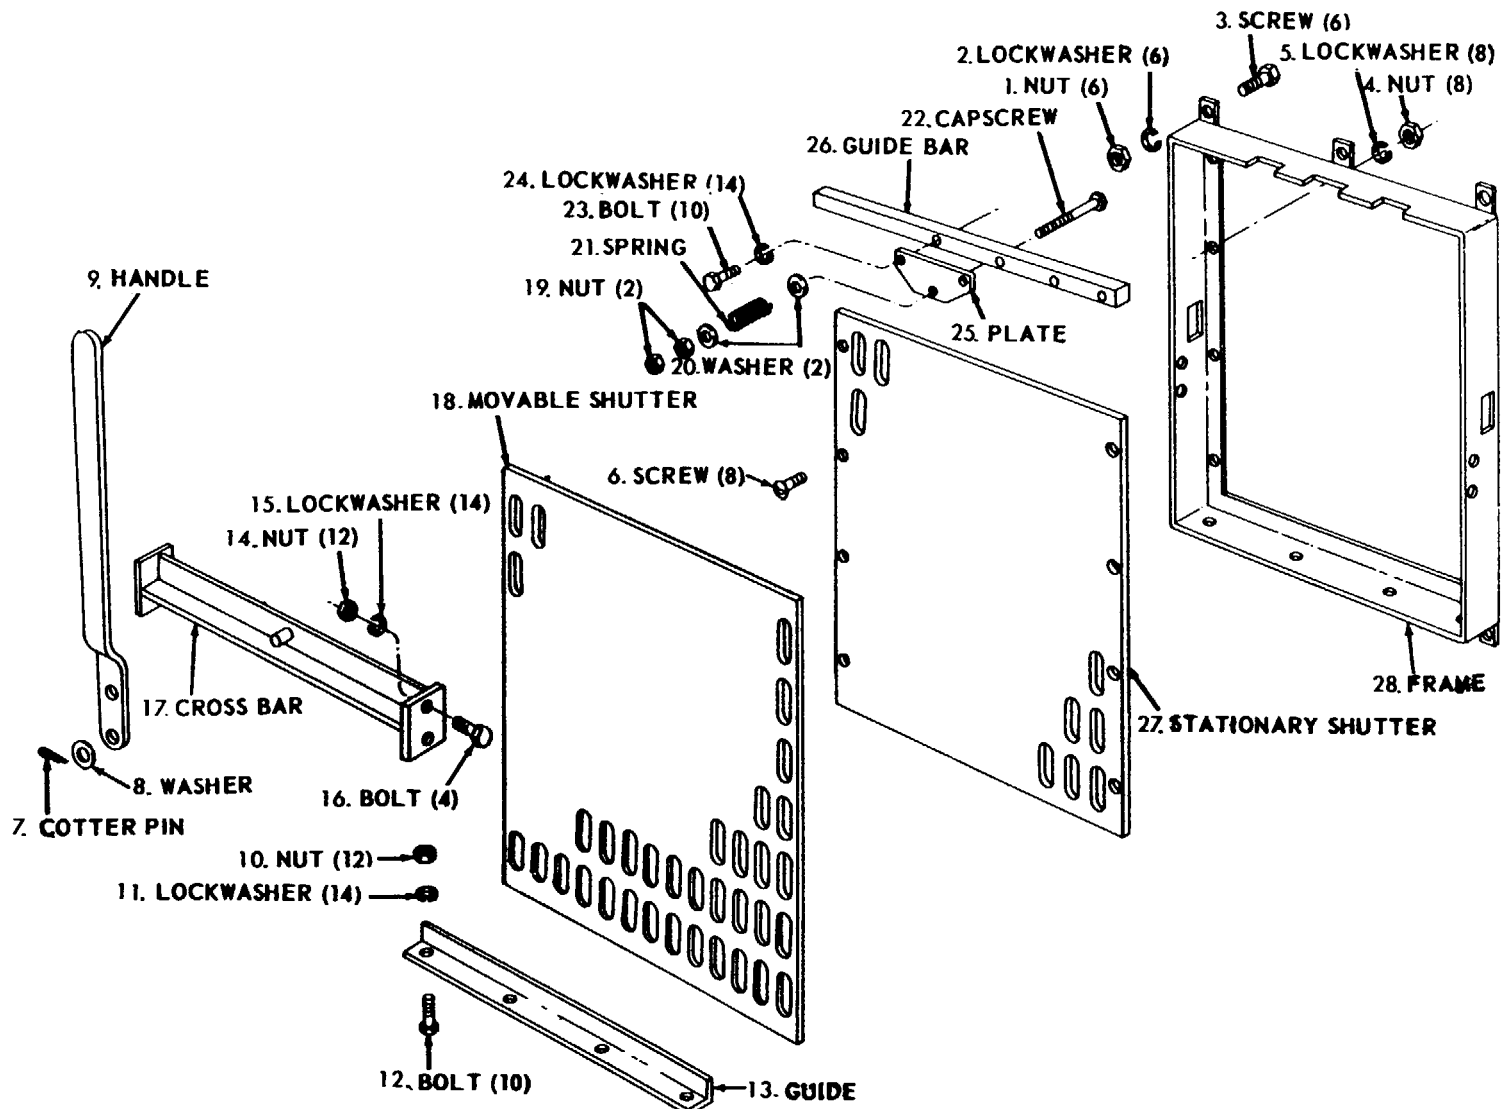


Figure 4-48. Winterfront, removal, disassembly, reassembly, and installation

CHAPTER 5

SHIPMENT AND LIMITED STORAGE, AND DEMOLITION TO PREVENT ENEMY USE

Section I. SHIPMENT AND LIMITED STORAGE

5-1. General

When mobile equipment is being transported from place to place in the zone of interior, other than by its own locomotion, it is considered as being in administrative storage during the period of shipment. Administrative storage is defined as limited storage, a storage period of up to 90 days, when equipment must be preserved from deterioration caused by the elements.

5-2. Preparation for Limited Storage

Refer to TM 740-98-1, Administrative Storage of Equipment, for detailed instructions on preparation of the Crane-shovel basic unit for administrative storage and maintenance during storage.

5-3. Loading Crane-Shovel for Shipment

a. *Rail Shipment.* Blocking, bracing, and tiedown of the crane and attachments shall be in accordance with Section No. 1 (General Rules) and applicable figure (s) in Section 4 of the Association of American Railroads, "Rules Governing the Loading of Commodities on Open Top Cars."

b. *Anti-Rotation Rods and Crane Cab (Swing) Lock.* Secure the crane cab (swing) lock in the locked position to prevent displacement. The antirotation rods shall be installed (fig. 2-20 and 2-21) and positive means provided to prevent nuts from working loose.

c. *Movement to New Worksite.* Instructions covering move to new worksite are provided in paragraph 2-5.

Section II. DEMOLITION OF MATERIAL TO PREVENT ENEMY USE

5-4. General

When capture or abandonment of the cranes shovel is imminent, the responsible unit commander must make the decision either to destroy the equipment or render it inoperative. Based upon this decision, orders are issued which cover the desired extent of destruction. Whatever method of destruction is employed, it is essential to destroy the same vital parts of all crane-shovel units and all corresponding spare parts in the critical area. When lack of time or personnel prevents complete destruction of the cranes shovel, the following priority will be used in destruction of essential parts:

Priority	Part
1	Engine clutch and drive sprocket, jack-shaft drive sprocket, drive pinion, gears, drum clutches, swing clutches, and boom hoist mechanism.
2	Engine block, head, fuel injectors, and all control mechanisms.

Priority	Part
3	Machinery side frame castings.
4	Boom foot connections.
5	Shovel attachment, backhoe attachment, piledriver, crane and jib booms.
6	Clamshell and dragline buckets.
7	Gentry.
8	Hook rollers and roller circle.
9	Cables (all).
10	Propelling gear, sprockets, crawler sprockets, and treads.

5-5. Demolition to Render Crane-Shovel Inoperative

a. *Demolition by Mechanical Means.* Use sledge hammers, crowbars, picks, axes, cutting, or any other tools which may be available to demolish items in the priority established in paragraph 5-4 above.

b. *Demolition on by Misuse.*

- (1) Drain engine radiator and crankcase.
- (2) Throw sand or other abrasive material

into engine clutch, main drive chain case, jackshaft bevel gear case, horizontal gear train, and propelling shaft oil pan.

(3) Start engine and engage clutch.

(4) Operate the front end attachment forcibly into a bank or tree, or another object, to damage boom and break cables.

(5) Drop bolts, nuts, and tools into gear trains.

(6) Operate unit until failure occurs.

5-6. Demolition by Explosives or Weapons Fire

a. Demolition by Explosives. Place as many of the following charges as the situation permits, and detonate them simultaneously with detonating cord and a suitable detonator.

(1) One 4-pound charge on engine drive sprocket and jack-shaft sprocket.

(2) One 4-pound charge against the main clutch and machinery side frame castings at each end of main drum shaft.

(3) One 4-pound charge against boom hoist mechanism.

(4) One 2-pound charge against each of the swing clutches on the jackshaft.

(5) One 4-pound charge in the jackshaft bevel gear case.

(6) One 4-pound charge on top of the vertical propelling shaft.

(7) One 2-pound charge between starter and engine.

(8) One 4-pound charge at each of the boom hinges.

(9) One 4-pound charge against each of the hook rollers.

(10) One 4-pound charge against side of engine.

Note. The above charges are considered minimum requirements for this method.

(11) One 8-pound charge on shipper shaft of shovel boom.

(12) One 8-pound charge on dipper handlebucket connection.

(13) One 1-pound charge on each of boom hoist sheaves.

(14) One 8-pound charge at bucket-dipper stick connection of backhoe attachment.

(15) One 4-pound charge at stick point, and another at stick pivot of backhoe attachment.

(16) One 6-pound charge against auxiliary

gentry of backhoe attachment.

(17) One 1-pound charge against each corner single at midpoint of crane boom.

(18) One 6-pound charge at boom point sheaves on crane.

(19) One 4-pound charge at dragline pins and a 2-pound charge at hoist line pins of dragline bucket.

(20) One 4-pound charge on upper closing sheaves and one 41/1 pound charge at lower closing sheaves and hinges of clamshell bucket.

(21) Three 4-pound charges along piledriver leads.

(22) One 6-pound charge in propelling gear oil pan.

(23) One 4-pound charge on each of the crawler tracks at crawler drive sprocket.

(24) One 4-pound charge on each chain drive sprockets on end of horizontal propelling shaft.

b. *Demolition by Weapons Fire.* Fire on craneshovel unit with the heaviest weapon available.

5-7. Other Demolition Methods

a. *By Scattering and Concealment.* Remove all easily accessible vital parts, such as fuel injectors, hydraulic lines, control levers, brake and clutch cylinders, starting motor, and hook rollers. Scatter these parts through dense foliage; bury them in dirt or sand, or throw them in lake, stream, well or other body of water.

b. *Burning.* Pack rags, clothing or canvas under and around unit, particularly around engine, clutches, brakes, and fuel tanks, saturate, this packing with gasoline, oil or diesel fuel and ignite it.

c. *Submersion.* Totally submerge the craneshovel unit in a body of deep water to provide water damage and concealment. (Salt water does most damage to metal parts).

5-8. Training

All operator's should receive thorough training in methods of destroying the crane-shovel unit. Refer to FM 5-25. Simulated destruction, using methods listed above, should be included in operator training programs. It must be emphasized in training that demolition operations are only necessitated by critical situations, when time available for destruction is limited. For this reason, it is necessary that operators be thoroughly familiar with all methods of destruction and be able to perform demolition without referring to this or any other manual.

APPENDIX A

REFERENCES

A-1. Fire Protection

TB 5-4200-200-10 Hand Portable Fire Extinguishers for Army Users

A-2. Lubrication

C9100-IL Fuels, Lubricants, Oils and Waxes

LO 5-3810-201-12-1-2-3-4-5 Lubrication Order for Crane-Shovel, Basic Unit, Crawler Mounted, 40 Ton, 2 Cu Yd; Diesel Driven; (Harnischfeger models 855BG2 and 855BG3)

A-3. Painting

TM 9-213 Paint Instructions for Field Use

A-4. Radio Suppression

TM 11-483 Radio Interference Suppression

A-5. Maintenance

TM 38-750 Army Equipment Record Procedure

TB ORD 651 Use of Antifreeze Solutions and Cleaning Compounds in Engine Cooling Systems

TM 5-3810-201-20P Department of the Army Organizational Maintenance Repair Parts and Special Tools Lists

TM 9-6140-200-15 Operation and Organizational, Field and Depot Maintenance Storage Batteries, Lead/Acid Type

TB 385-101 Safety Use of Cranes, Crane-Shovel, Dragline, and Similar Equipment Near Electric Power Lines

A-6. Shipment and Storage

TM 740-90-1 Administrative Storage of Equipment

APPENDIX B

BASIC ISSUE ITEMS LIST

Section I. INTRODUCTION

B-1. Scope

This appendix lists items which accompany the crane-shovel basic unit or are required for installation, operation, or operator's maintenance.

B-2. General

This basic Issue Items list is divided into the following sections:

a. Basic Issue Items-Section II. A list of items which accompany the crane-shovel basic unit and are required by the operator/crew for installation, operation, or maintenance.

b. Maintenance and Operating Supplies-Section III. A listing of maintenance and operating supplies required for initial operation.

B-3. Explanation of Columns

The following provides an explanation of columns in the tabular list of Basic Issue Items, Section II.

a. Source, Maintenance, and Recoverability Codes (SMR), Column (1):

Note. Common hardware items known to be readily available in Army Supply will be assigned Maintenance Codes only. Source Codes, Recoverability Codes, and Quantity Authorized will not be assigned this category of items.

(1) Source code, indicates the selection status and source for the listed item. Source codes are:

<i>Code</i>	<i>Explanation</i>
P	Applied to repair parts which are stocked in or supplied from GSA/DSA or Army supply system, and authorized for use at indicated maintenance categories.

(2) Maintenance code, indicates the lowest category of maintenance authorized to install the listed item. The maintenance level code is:

<i>Code</i>	<i>Explanation</i>
C	Operator/crew

(3) Recoverability code, indicates whether unserviceable items should be returned for recovery or salvage. Items not coded are expendable. Recoverability codes are:

<i>Code</i>	<i>Explanation</i>
R	Applied to repair parts and assemblies which are economically repairable at DSU and GSU activities and are normally furnished by supply on an exchange basis.
S	Applied to repair parts and assemblies which are economically repairable at DSU and GSU activities and which normally are furnished by supply on an exchange basis. When items are determined by a GSU to be uneconomically repairable, they will be evacuated to a depot for evaluation and analysis before final disposition.
T	Applied to high dollar value recoverable repair parts which are subject to special handling and are issued on an exchange basis. Such repair parts are normally repaired or overhauled at depot maintenance activities.
U	Applied to repair parts specifically selected for salvage by reclamation units because of precious metal content, critical materials, or high dollar value reusable casings or castings.
	b. Federal Stock-Number, Column (2). This column indicate, the Federal stock number assigned to the item and will be used for requisitioning purposes.
	c. Description, Column (3). This column indicates the Federal item name and any additional description of the item required. The abbreviation "w/e", when used as a part or the nomenclature, indicates the Federal stock number includes all armament, equipment, accessories, and repair parts issued with the item. A part number or other reference number is followed by the applicable five-digit Federal supply code for manufacturers in parenthesis. The physical security classification of the item is indicated by the parenthetical entry Repair parts quantities included in kits, sets, and assemblies are shown in front of the repair part name.
	d. Unit of Measure (u/m), Column (4). A 2 character alphabetic abbreviation indicating the amount or quantity of the item upon which the allowances are based, e.g., ft, ea, pr, etc.

e. *Quantity Incorporated in Unit, Column (5)*. This column indicates the quantity of the item used in the functional group or the assembly group. A "V" appearing in this column in lieu of a quantity indicates that a definite quantity cannot be indicated (e.g., shims, spacers, etc.).

f. *Quantity Furnished with Equipment, Column (6)*. This column indicates the quantity of an item furnished with the equipment.

g. *Illustration, Column (7)*. This column is divided as follows:

(1) *Figure Number, Column (7) (a)*. Indicates the figure number of the illustration in which the item is shown.

(2) *Item Number, Column (7) (b)*. Indicates the callout number used to reference the item in the illustration.

B-4. Explanation of Columns in the Tabular List of Maintenance and Operating Supplies-Section III

a. *Component Application, Column (1)*. This column identifies the component application of each

maintenance or operating supply item.

b. *Federal Stock Number, Column (2)*. This column indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.

c. *Description, Column (3)*. This column indicates the item name and brief description.

d. *Quantity Required for Initial Operation, Column (4)*. This column indicates the quantity of each maintenance or operating supply item required for initial operation of the equipment.

e. *Quantity Required for 8 Hours Operation, Column (5)*. This column indicates the estimated quantity required for an average 8 hours of operation.

f. *Notes, Column (6)*. This column indicates informative notes keyed to data appearing in a preceding column.

B-5. Federal Supply Code for Manufacturers

<i>Code</i>	<i>Manufacturer</i>
27315.....	Harnischfeger Corporation, 4400 W. National Ave., Milwaukee, Wisconsin 53246

Section II. BASIC ISSUE ITEMS

(1) SMR code	(2) Federal Stock number	(3) Description Ref no. & mfr code	(4) Unit of meas	(5) Qty inc in unit	(6) Qty inc in unit	(7) Illustration	
						(A) Fig No.	(B) Item No.
		GROUP 31-BASIC ISSUE ITEMS, MANUFACTURER INSTALLED					
		3100-BASIC ISSUE ITEMS, MANUFACTURER OR DEPOT INSTALLED					
PC	7510-889-3494	BINDER, LOOSELEAF: U. S. Army Equipment Log Book	ea		1		
PC	2590-045-9611	CASE ASSEMBLY, RIFLE	ea		1		
PC	7520-559-9618	CASE: operation and maintenance publications, water repellent, mildew resistant, MIL-B-11743B	ea		1		
		DEPARTMENT OF THE ARMY LUBRICATION ORDER					
		LO 5-3810-201-12-1	ea		1		
		LO 5-3810-201-12-2	ea		1		
		LO 5-3810-201-12-3	ea		1		
		LO 5-3810-201-12-4	ea		1		
		LO 5-3810-201-12-5	ea		1		
		DEPARTMENT OF THE ARMY OPERATOR AND ORGANIZATIONAL MAINTENANCE MANUAL	ea		1		
		TM 5-3810-201-12					
		DEPARTMENT OF THE ARMY ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS TM 5-3810-201-20P	ea		1		
PC	4210-889-2221	EXTINGUISHER, FIRE, DRY CHEMICAL: hand type, 2 1/2 lb. Stored pressure, 1 wall bracket	ea		1		
PC	5120-690-7948	PULLER, MECHANICAL 921T2 (27315)	ea		1		

Section III. MAINTENANCE AND OPERATING SUPPLIES

(1) Component application	(2) Federal stock number	(3) Description	(4) Quantity required f/initial operation	(5) Quantity required f/8 hrs operation	(6) Notes
AIR CLEANER (1)	9150-680-1105(2) 9150-680-1104(2) 9150-242-7604(2)	LUBRICATION OIL, ENGINE: 55 gal drum, 18 gage, as follows:	4½ qt (1)	(3)	(1) Included in quantity required to fill system as follows: 32 qts Crankcase 2 qts Oil Filters 4½ qts Air Cleaner 8 qts Chain Case 16 qts Tagline Winder
		HDO-10	62½ qt (1)	(3)	
		HDO-30	62½ qt (1)	(3)	
COOLING SYSTEM		OES	62½ qt (1)	(3)	(2) See C9100-IL for additional data and for requisitioning procedures. (3) See LO 5-3810-201-12 Series for grade application and replenishment intervals. (4) See TB ORD 651 for quantities, ambient temperatures, specific gravities and replenishment data. (5) Tank capacity. (6) Average fuel consumption is 7½1/ gal per hour of continuous operation. (7) Includes 1/2 qt in swing brake master cylinder and 1½ qt in dipper trip master cylinder.
		WATER	36 qt		
		ANTIFREEZE: ethylene glycol	(4)		
CRANKCASE (1)		ANTIFREEZE: compound artoc	(4)		(8) Includes 20 qts in jackshaft gear case and 12 qts in propel shaft gear case. (9) Quantity required is determined by number of times engine is shut down, and low temperatures. (10) Quantity consumed depends on ambient temperatures.
		LUBRICATING OIL, ENGINE: (1) (Same as item 1 above)	32 qt (1)	(3)	
EXPOSED GEAR CHAINS	9150-234-5199(2)	LUBRICATING OIL, CHAIN-WIRE ROPE	5 lb	4 lb (3)	(10) Quantity consumed depends on ambient temperatures.
FUEL TANK		EXPOSED GEAR: can, CW-11 B, Type II	5-lb		
GREASE POINTS	9140-286-5294(2) 9150-190-0907(2)	FUEL OIL, DIESEL: bulk as follows:	90 gal (5)	60 gal (6)	(1) Included in quantity required to fill system as follows: 32 qts Crankcase 2 qts Oil Filters 4½ qts Air Cleaner 8 qts Chain Case 16 qts Tagline Winder (2) See C9100-IL for additional data and for requisitioning procedures. (3) See LO 5-3810-201-12 Series for grade application and replenishment intervals. (4) See TB ORD 651 for quantities, ambient temperatures, specific gravities and replenishment data. (5) Tank capacity. (6) Average fuel consumption is 7½1/ gal per hour of continuous operation. (7) Includes 1/2 qt in swing brake master cylinder and 1½ qt in dipper trip master cylinder. (8) Includes 20 qts in jackshaft gear case and 12 qts in propel shaft gear case. (9) Quantity required is determined by number of times engine is shut down, and low temperatures. (10) Quantity consumed depends on ambient temperatures.
		Regular grade (DF-2)	10 lb	8 lb (3)	
HEATER FUEL TANK HYDRAULIC SYSTEM	9130-160-1837(2)	GREASE, AUTOMOTIVE AND ARTILLERY 35-lb pail, type GAA	18 gal (5)	(10)	
STARTING AID	9150-231-9071(2) 2990-355-6377	GASOLINE, UNLEADED: Bulk	13 qts (7)	(3)	
		BRAKE FLUID, AUTOMOTIVE: non-mineral oil, 1 gal cans	10 ea	(9)	
TRANSMISSION	9150-577-5841(2) 9150-577-5844(2) 9150-257-5440(2)	Type HBA	10 gal (8)	(3)	
		CAPSULE, METAL: Pressure primed	10 gal (8)	(3)	
		LUBRICATION OIL, GEAR: 5 gal drums as follows:	10 gal (8)	(3)	
		GO-80	10 gal (8)	(3)	
		GO-90	10 gal (8)	(3)	
		GOS	10 gal (8)	(3)	

APPENDIX C

MAINTENANCE ALLOCATION CHART

Section I. INTRODUCTION

C-1. General

a. This section provides a general explanation of all maintenance and repair functions authorized at various maintenance levels.

b. Section II designates overall responsibility for the performance of maintenance functions on the identified end item or component. The implementation of the maintenance functions upon the end item or component will be consistent with the assigned maintenance functions.

c. Section III lists the special tools and test equipment required for each maintenance function as referenced from section II.

d. Section IV contains supplemental instructions, explanatory notes and/or illustrations required for a particular maintenance function.

C-2. Explanation of Columns in Section II

a. *Group Number, Column (1)*. The functional group is a numerical group set up on a functional basis. The applicable functional grouping indexes (obtained from TB 750-93-1, Functional Grouping Codes) are listed on the MAC (Maintenance Allocation Chart) in the appropriate numerical sequence. These indexes are normally set up in accordance with their function and proximity to each other.

b. *Functional Group, Column (2)*. This column contains a brief description of the components of each functional group.

c. *Maintenance Functions, Column (3)*. This column lists the various maintenance functions (A through K) and indicates the lowest maintenance category authorized to perform these functions. The symbol designations for the various maintenance categories are as follows:

C	Operator or crew
O	Organizational maintenance
F	Direct support maintenance
H	General support maintenance
D	Depot maintenance

The maintenance functions are defined as follows:

A	Inspect: To determine serviceability of an item by comparing its physical, mechanical, and electrical characteristics with established standards.
B	Test: To verify serviceability and to detect electrical or mechanical failure by use of test equipment.

C Service: To clean, to preserve, to charge, to paint, and to add fuel, lubricants, cooling agents, and air.

D Adjust: To rectify to the extent necessary to bring into proper operating range.

E Aline: To adjust specified variable elements of an item to bring optimum performance.

F Calibrate: To determine the corrections to be made in the readings of instruments or test equipment used in precise measurement. Consists of the comparisons of two instruments, one of which is a certified standard of known accuracy, to detect and adjust any discrepancy in the accuracy of the instrument being compared with the certified standard.

G Install: To set up for use in an operational environment such as an emplacement, site, or vehicle.

H Replace: To replace unserviceable items with serviceable assemblies, subassemblies, or parts.

I Repair: To restore an item to serviceable condition. This includes, but is not limited to, inspection, cleaning, preserving, adjusting, replacing, welding, riveting, and strengthening.

J Overhaul: To restore an item to a completely serviceable condition as prescribed by maintenance serviceability standards using the Inspect and Repair Only as Necessary (IROAN) technique.

K Rebuild: To restore an item to a standard as nearly as possible to original or new condition in appearance, performance, and life expectancy. This is accomplished through complete disassembly of the item, inspection of all parts or components, repair or replacement of worn or unserviceable elements (items) using original manufacturing tolerances and specifications, and subsequent reassembly of the item.

d. *Tools and Equipment, Column (4)*. This column is provided for referencing by code the special tools and test equipment, (sec. III) required to perform the maintenance functions (sec. II).

e. *Remarks, Column (5)*. This column is provided for referencing by code the remarks (sec. IV) pertinent to the maintenance functions.

C-3. Explanation of Columns in Section II

a. *Reference Code.* This column consists of a number and a letter separated by a dash. The number references the T&TE requirements column on the Maintenance Allocation Chart. The letter represents the specific maintenance function the item is to be used with. The letter is representative of columns A through K on the MAC.

b. *Maintenance Category.* This column shows the lowest level of maintenance authorized to use the special tool or test equipment.

c. *Nomenclature.* This column lists the name or identification of the tool or test equipment.

d. *Tool Number.* This column lists the manufacturer's code and part number, or Federal Stock Number of tools and test equipment.

C-4. Explanation of Columns in Section IV

a. *Reference Code.* This column consists of two letters separated by a dash, both of which are references to Section II. The first letter references column 5 and the second letter references a maintenance function, column 3, A through K.

b. *Remarks.* This column lists information pertinent to the maintenance function being performed, as indicated on the MAC, Section II.

Section II. MAINTENANCE ALLOCATION CHART

(1) Group No.	(2) Functional Group	(3) Maintenance functions										(4) Tools and equipment	(5) Remarks	
		A	B	C	D	E	F	G	H	I	J			K
		Inspect	Test	Service	Adjust	Align	Calibrate	Install	Replace	Repair	Overhaul			Rebuild
01	ENGINE													
0100	Engine Assembly (687C-18-ES)	C	F	C	H	O	H	D	A	
	Engine Assembly (D333TA)	C	F	C	F	O	H	D		
0101	Crankshaft, Block Cylinder Head													
	Crankcase assembly.....	O	H	H	1, 2, 3, & 4		
	Head and valve assembly (D333TA)	H	F	5		
	Head and valve assembly (687C-18-ES)	H	H			
0102	Crankshaft													
	Cover assembly	F	F		
	Crankshaft assembly	H	D	6.....	B	
	Damper assembly	F	F			
0103	Flywheel Assembly (D333TA).....	H	H	C	
	Flywheel Assembly (687C-18-ES)	F	F			
0104	Pistons, Connecting Rods	H	H	H	7, 8		
0105	Valves, Camshaft, and Timing System.													
	Arm assembly, rocker	O	F	F		
	Cover assembly, cam pocket	F	F		
	Cover assembly, valve gear	O	O		
	Camshaft assembly	H	H	H	10		
	Valves, seats (687C-18-ES)	H	H	H	9.....	D	
	Valves, seats (D333TA)	F	F	F			
0106	Engine Lubrication System Cooler, oil (D333TA)	O	F		
	Filter assembly, oil	C	O	O	H	H	..		
	Pan, oil (687C-18-ES)	H	H	H	H	..		
	Pan, oil (D333TA)	F	H	H	H	..		
	Pump, oil	H	H	H	H	H	..		
	Strainer, oil pump	H	H		
	Strainer, lube oil.....	C	O		
0108	Manifolds, exhaust	O	O		
0109	Accessory Driving Mechanisms (687C-18-ES).....	H	H		
	Accessory Driving Mechanisms (D333TA).....	F	F		

(1) Group No.	(2) Functional Group	(3) Maintenance functions											(4) Tools and equipment	(5) Remarks			
		A	B	C	D	E	F	G	H	I	J	K					
		Inspect	Test	Service	Adjust	Align	Calibrate	Install	Replace	Repair	Overhaul	Rebuild					
02	CLUTCH																
0200	Clutch Assembly	H	...	C	C	H	H							
0202	Clutch Release Mechanism Cable, flexible control	C	O	O							
	Linkage; lever	O	O	O							
	Shaft; bearing; yoke	H	H								
03	FUEL SYSTEM																
0301	Fuel injector	F	O	F	11,12				
0302	Fuel Pump Pump, fuel injection	H	H.	F	H	13,14,15, 16,17,18, 19,20				
0304	Air Cleaner	C	O	O							
0305	Blower-Turbocharger Blower assembly (687C-18-ES)	F	F							
	Manifold (687C-18-ES)	O	O	F							
	Manifold (D333TA)	O	F	F							
	Turbocharger (D333TA)	F	H	21,22,23, 24,25				
0306	Tanks, Lines, Fittings Cap, fuel tank	C	C								
	Tank, fuel	C.	...	C	O	O							
0308	Engine speed Governor and Controls Governor (D333TA)	F	H							
	Shaft assembly, governor drive	H	H							
0309	Fuel Filters	C	O	O							
0311	Engine Starting Aids	O	O							
0312	Accelerator, Throttle or Choke Controls	O	O	O							
04	EXHAUST SYSTEM																
0401	Muffler and Pipes	O	O								
05	COOLING SYSTEM																
0501	Radiator Cap, radiator	O	O								
	Guard	O	O								
	Radiator (D333TA)	C	O	C	O	F							
	Radiator (687C-18-ES)	C	F	C	F	F							
0502	Shroud	O	O							
0503	Water Manifold, Headers, Thermo- stat, and Housing Gasket	O	O								
0504	Water Pump	F	F	26				
0505	Fan Assembly Belt, V drive	C	C	O								
	Fan assembly	O	O								
	Support assembly (687C-18-ES)	O	F							
06	ELECTRICAL SYSTEM																
0601	Generator-Alternator Alternator (D333TA)	O	O	F							
	Belt, V drive	C	C	O								
	Generator (687C-18-ES)	O	O	O	F				E
0602	Generator Regulator	O	O								
0602	Alternator Regulator	O	..	O	O								

(1) Group No.	(2) Functional Group	(3) Maintenance functions											(4) Tools and equipment	(5) Remarks			
		A	B	C	D	E	F	G	H	I	J	K					
		Inspect	Test	Service	Adjust	Align	Calibrate	Install	Replace	Repair	Overhaul	Rebuild					
0603	Starting Motor																
	Cable assemblies.....	O	O							
	Starter	O	C		O	O	F				F
0606	Engine Safety Controls																
	Governor assembly, overspeed (687C-18-ES).....	O	F							
	Switches.....	O	O							
	Wires	O	O							
0607	Instrument or Engine Control Panel																
	Control box: gages; switches; lights; indicator; panels; termi- nal boards.....	O	O	O								
	Lamps	C	C	C							
	Wiring	O	O							
0608	Miscellaneous items																
	Circuit breaker; light; junction boxes, receptacles.....	O	O								
	Lamps	C	C	C							
	Wiring	O	O							
0609	Lights																
	Floodlights and cab lights.....	C	C	O								
0611	Horn	O	O	O							
0612	Batteries	O	C		O	O	O						
0613	Chassis Wiring Harness.....	H	F							
0615	Radio Interference Suppression																
	Capacitors (687C-18-ES).....	..	O	O								
	Lead, ground.....	O	O								
08	TRANSFER ASSEMBLY																
0801	Power Transfer Assembly.....	C	..	C		H	H							
0804	Lubrication Components Breather, assembly	C		O								
13	TRACKS																
1302	Track Support Rollers and Brackets																
	Roller assembly, lower	C	C	F	F							
	Roller assembly, upper	C	C												
1303	Track idlers and Brackets																
	Shaft assembly, idler.....	C		F	F							
	Rod, spring	O	O								
1304	Track Drive Sprockets																
	Chain, drive	C	O	O							
	Shaft assembly, drive.....	C		F	F							
1305	Track Assembly	C	O	O				G
15	FRAME																
1501	Frame Assembly																
	Mud guard	O	O								
1502	Counterweights	O	O								
18	BODY, CAB, HOOD AND HULL																
1801	Body, Cab, Hood, Hull Assemblies																
	Brace; angle; lug; shackle	H	H								
	Cab assembly	H	O	O						
1806	Seats	O	O	O						
1808	Boxes, Carrying Cases.....	O	O								
22	BODY CHASSIS OR HULL, AND ACCESSORY ITEMS																

(1) Group No.	(2) Functional Group	(3) Maintenance functions											(4) Tools and equipment	(5) Remarks			
		A	B	C	D	E	F	G	H	I	J	K					
		Inspect	Test	Service	Adjust	Align	Calibrate	Install	Replace	Repair	Overhaul	Rebuild					
2202	Accessory items																
	Box assembly, control.....	O	O							
	Heater assembly, personnel.....	C		O	O							
	Tank, heater, fuel.....	..	O	C		O	O							
	Wiper assembly, windshield.....	C	O	C							
2207	Winterization Equipment																
	Heater assembly.....	C		O	O							
	Line, coolant.....	H	H							
	Switches, control; valves, pipe, ex- haust; box, battery; ducts; regu- lator.....		O	O						
2210	Data Plates																
	Plate, data (C.O.E.).....	F	F								
	Plate, instruction.....	O	O								
43	HYDRAULIC SYSTEMS																
4301	Strainers, Filters, Hose, Pipe Fit- tings, Tubing.....	O	O							
4305	Manifold and/or Control Valves.....	O	O							
4307	Hydraulic Cylinders.....	O	O							
4308	Liquid Tank.....	C		O	O							
4309	Manual Controls.....	C	O	O	O							
47	GAGES																
4701	Instruments.....	C		O								
4702	Gages.....	O	O								
74	CRANES, SHOVELS, AND EARTH MOVING EQUIPMENT COMPO- NENTS																
7410	Shovel Front Attachments																
	Bail assembly, dipper; sheave.....	C		O	F							
	Bar assembly, bridle; boom point assembly; shipper shaft assem- bly; tightener assembly, chain.....	C		F	F							
	Boom assembly, shovel.....	C		C	O							
	Chain, crowd.....	C	O	O							
	Lagging, sprockets, planetary pinion gear.....	O	O								
	Shell assembly, dipper; handle, dipper.....	O	F							
	Teeth, dipper.....	C	O	O							
7411	Crane Dragline or Clamshell At- tachment.....	C		C	O							
7412	Back Hoe Attachment.....	C		C	O							
7413	Pile Driver Attachment.....	C		C	O							
7414	Base Deck																
	Frame Assembly, Crane.....	C		H	O							
	Rollers, hook.....	C	C	O	O							
	Rollers; pin (ratchet).....	C		O								
7416	Shafts																
	Brake bands, and clutch shoes.....	C	O	F							
	Case assembly, chain.....	C		O	O							
	Chains.....	O	O	O							
	Clutch assembly.....	C	C	O	O							
	Dipper trip assembly and cables.....	C	..	C	C	C	O							
	Guards; covers.....	H	O							
	Jackshaft assembly.....	C		H	F							

(1) Group No.	(2) Functional Group	(3) Maintenance functions											(4) Tools and equipment	(5) Remarks			
		A	B	C	D	E	F	G	H	I	J	K					
		Inspect	Test	Service	Adjust	Align	Calibrate	Install	Replace	Repair	Overhaul	Rebuild					
7416	Continued																
	Shaft assembly, drum and idler.....	C.		H	H							
	Sprocket, power take-off drive	O.	O	H							
7419	Turntable																
	Brake band assembly.....	C.	C	F	F							
	Drum H	H	O							
	Swing lock assembly.....	O	O							
7420	Machinery Gear Case or Frame																
	Breathers	C.		C	H							
	Pan assembly, oil.....	C.		H	H							
7421	Independent or Precision Boom Hoist																
	Brake bands, and clutch shoes.....	C	O	F							
	Drum, cable; spider assemblies	C.	H	H							
	Planetary brake, holding pawl	C	O	O							
7422	Machinery Mechanism Controls.....	C.	C	O	O							
7423	Gantry																
	Gantry	F	F							
	Spreader bar assembly; sheaves.....	C.	O	F							
7424	Crawler Bed; Frame and Ring Gear																
	Frame and axle assembly	C.	H	F							
7425	Propel and Steering Mechanism																
	Brake band assembly.....	C.	C	O	F							
	Shaft assemblies; gear assembly, steering.....	C.	O	F	H							
7499	Cables	C.	C								
76	FIRE EXTINGUISHERS																
7603	Extinguishers, fire.....	C.	C								

**Section III. SPECIAL TOOL AND SPECIAL TEST
EQUIPMENT REQUIREMENTS**

Reference code	Maintenance level	Nomenclature	Tool number
1-I	H	Puller	5120-417-2952
2-I	H	Plate (11083)	5F7362
3-I	H	Puller, Mechanical	5120-766-4747
4-I	H	Puller, Mechanical	5120-707-1266
5--I	F	Wrench (11083)	5F8353
6--H	H	Adapter	5120-316-9170
7-H	H	Expander (11083)	5F9059
8--H	H	Compressor (11083)	5F6502
9-H	H	Lifter, Valve Spring	5120-679-3416
10-H	H	Puller	5120-293-1430
11-I	F	Maintenance Fixture	4910-657-7429
12-I	F	Cleaning Tool Group	5120-423-9520
13-I	H	Tool Kit, Roosamaster: injector pump	5180-679-3417
14-I	H	Wrench: Box, halfmoon opening	5120-649-9184
15-I	H	Extractor	5120-861-4015
16-I	H	Wrench	5120-861-4014
17-I	H	Gage	4910-861-1344
18-I	H	Gage: Rack setting	5210-861-1345
19-I	H	Seal Tamping tool	Fabricate
20-I	H	Seal tamping tool guide	Fabricate
21-I	H	Wrench	Fabricate
22-I	H	Fixture Adapter	Fabricate
23-I	H	Fixture	Fabricate
24-I	H	Ring Expander Sleeve	Fabricate
25-I	H	Spacer Block	Fabricate
26-I	F	Puller, Mechanical	5120-766-4748

Section IV. REMARKS

Reference code	Remarks
A-B	Test of engine includes operation and compression.
B-I	Repair of Crankshaft includes metalizing, grinding, and alining.
C-I	Repair of flywheel includes replacing ring gear.
D-I	Repair of valves and seats includes refacing.
E-I	Repair of generator includes brush replacement only.
F-I	Repair of starter includes brushes and solenoid replacement only.
G-I	Organizational repairs track by replacing trackshoes.

INDEX

	Paragraph	Page		Paragraph	Page
Adapters, blower.....	3-79	3-74	Crane front end.....	4-11	4-10
Adapters, catwalk and.....	4-37	4-32	Dragline front end.....	4-11	4-10
Adjustment:			Operation of backhoe front end.....	2-32	2-37
Alternator drive belt.....	3-23	3-33	Operation of clamshell front end.....	2-29	2-37
And lamp replacement, floodlight.....	3-15	3-29	Operation of crane front end.....	2-28	2-37
Antisway (boom foot) spring.....	3-36	3-42	Operation of dragline front end.....	2-30	2-38
Boom hoist brake.....	3-34	3-40	Operation of jib boom front end.....	2-34	2-41
Crowd chain.....	3-35	3-42	Operation of piledriver front end.....	2-33	2-39
Dipper trip.....	3-37	3-42	Operation of shovel front end.....	2-31	2-37
Engine clutch.....	3-9	3-24	Piledriver front end.....	4-33	4-30
Fan drive belt.....	3-21	3-32	Shovel front end.....	4-2	4-1
Generator drive belt.....	3-22	3-33	Automatic temperature control, battery heater.....	4-48	4-37
Hoist brake, digging brake or planetary clutch band.....	3-31	3-37	Auxiliary clutch lever.....	3-109	3-105
Hoist clutch and digging clutch.....	3-32	3-38	Auxiliary gantry, backhoe.....	4-27	4-24
Hook roller.....	3-39	3-43	Backhoe auxiliary gantry.....	4-27	4-24
Propel chain.....	3-40	3-44	Backhoe boom.....	4-31	4-28
Steering linkage, swing brake, and propel brake.....	3-33	3-40	Backhoe bucket, bail, and teeth.....	4-28	4-24
Steering wheel.....	3-139	3-126	Backhoe bucket stick.....	4-29	4-26
Swing brake hydraulic control and linkage.....	3-122	3-113	Backhoe front end attachment, operation of.....	2-32	2-39
Vertical intermediate shaft.....	3-134	3-124	Backhoe front end attachment.....	4-26	4-22
Swing (jackshaft) clutch.....	3-29	3-35	Backhoe safety backstop.....	4-30	4-28
Track.....	3-41	3-44	Backstop, backhoe safety.....	4-30	4-28
Track idler.....	3-143	3-135	Backstop, boom.....	4-22	4-20
Trip cable.....	3-38	3-42	Bail and sheave, dipper.....	4-6	4-5
Valve (rocker arm).....	3-60	3-52	Bands, propel brake.....	3-137	3-126
Aids, cold weather starting.....	2-25	2-36	Band, swing brake.....	3-135	3-124
	3-18	3-31	Battery heater automatic temperature control.....	4-48	4-37
Air cleaners.....	3-69	3-62	Battery heater.....	4-45	4-35
Air cleaners services, engine.....	3-11	3-25	Batteries.....	3-81	3-81
Air manifold (blower to blower) (model 687C18ES).....	3-70	3-64	Battery box.....	3-82	3-81
Alternator and belt (engine model D333TA).....	3-84	3-82	Battery service.....	3-16	3-27
Alternator drive belt adjustment (engine model D333TA only).....	3-23	3-33	Belt adjustment, alternator drive.....	3-23	3-33
Alternator regulator (engine model D333TA).....	3-86	3-87	Belt adjustment, fan drive.....	3-21	3-32
Altitude, operation at high.....	2-21	2-35	Belt adjustment, generator drive.....	3-22	3-33
Ammeter.....	3-149	3-138	Belt, alternator and.....	3-84	3-82
Antisway (boom foot) sprint adjustment.....	3-36	3-42	Belt fan.....	3-103	3-100
Attachment:			Belt, generator and.....	3-83	3-81
Backhoe front end.....	4-26	4-22	Blower adapters (model 687C13ES only).....	3-79	3-74
Clamshell front end.....	4-11	4-10	Boom.....	4-13	4-10
			Boom angle indicator (radius).....	4-23	4-21
			Boom, backhoe.....	4-31	4-28
			Boom, backstop.....	4-22	4-20

	Paragraph	Page		Paragraph	Page
Boom harness spreader	4-15	4-12	Clutch and brake band positioning		
Boom hoist brake adjustment.....	3-34	3-40	on hoist drum	3-30	3-37
Boom hoist brake, clutch band,			Clutch band and brake bands,		
and holding pawl.....	3-136	3-125	planetary	3-130	3-121
Boom point and idler sheaves	4-20	4-16	Clutch band, and holding pawl,		
Boom, shovel.....	4-10	4-10	boom hoist brake	3-136	3-125
Box, battery	3-82	3-81	Clutch brake shoe, dipper trip.....	4-9	4-9
Bracket, fan and support.....	3-102	3-99	Clutch lever and linkage	3-108	3-105
Brake adjustment, boom hoist.....	3-34	3-40	Clutch lever, auxiliary.....	3-109	3-105
Brake bands on hoist drum,			Clutch shoes, jackshaft	3-128	3-119
positioning clutch and	3-30	3-37	Clutch shoes, mainhust shaft	3-129	3-120
Brake bands, planetary clutch			Cold, operation in extreme	2-14	2-33
band and.....	3-130	3-121	Cold weather starting aids.....	2-25	2-36
Brake bands, propel.....	3-137	3-126		3-18	3-31
Brake bands, swing.....	3-135	3-124	Compensators (cylinders)	3-119	3-111
Brake cylinders, hydraulic clutch			Components, installation of sepa-		
and	3-123	3-115	rately packed.....	2-2	2-1
Brake shoe, dipper trip clutch.....	4-9	4-9	Components of light enclosure	3-183	3-150
Breather and oil filter, crankcase.....	3-66	3-55	Connector (quick disconnect)		
Breather, fuel line and.....	3-73	3-68	electrical	3-160	3-140
Breather service, chain case			Connector, receptacle (slave)		
fill cap and	3-27	3-34	electrical	3-89	3-89
Breather service, fuel tank filler			Control, battery heater automatic		
filter and.....	3-14	3-28	temperature	4-48	4-37
Breather service, power take-off	3-28	3-34	Control, engine shutoff	3-78	3-74
Breather, ventilation.....	3-111	3-106	Control panel, heater.....	4-47	4-36
Bucket and teeth, clamshell	4-17	4-15	Control panel wiring	3-161	3-140
Bucket and teeth, dragline.....	4-18	4-15	Controls and instruments	2-8	2-23
Bucket, bail, and teeth backhoe.....	4-28	4-24	Conversion of equipment	2-4	2-5
Bucket stick, backhoe	4-29	4-26	Coolant lines, thermostat housing,		
			thermostat and.....	3-105	3-101
Cable adjustment, dipper trip	3-38	3-42	Coolant pump, heater.....	3-104	3-101
Cable doors, lower	3-174	3-146	Crane front end attachment,		
Cable doors, upper	3-173	3-146	operation of.....	2-28	2-37
Cable replacement.....	3-43	3-45	Crane-shovel inoperative, demolition		
Cab light.....	3-182	3-150	to render	5-5	5-1
Cab rear panel.....	3-175	3-146	Crankcase breather and oil filler	3-66	3-55
Cap light lamp replacement instru-			Crowd and retract chain, idler,		
ment panel and.....	3-42	3-45	and tightener	4-3	4-4
Catwalk and adapters	4-37	4-32	Crowd chain adjustment.....	3-35	3-42
Center cab panel, right side.....	3-178	3-147	Counterweight extension	3-163	3-141
Center side panel, left hand.....	3-170	3-143	Cover and gasket, valve.....	3-59	3-52
Chain adjustment, propel	3-40	3-44	Cover, transfer chain case.....	3-112	3-106
Chain case fill cap and			(Cylinders), compensators	3-119	3-111
breather service	3-27	3-34	Cylinders, hydraulic clutch and brake	3-123	3-115
Chain drive	3-144	3-135	Data, identification and tabulated	1-4	1-2
Chain sprocket, input shaft.....	3-144	3-135	Deep water, operation in mud or	2-20	2-35
Chain transfer	3-113	3-107	Defroster, hose, and manifold group.....	4-49	4-38
Chain idler and tightener crowd and			Demolition by explosives or weapons		
retract.....	4-3	4-4	fire	5-6	5-2
Checks and services, preventive			Demolition methods, other	5-7	5-2
maintenance	3-6	3-21	Demolition to render crane-shovel		
Circle rollers	3-127	3-119	inoperative.....	5-5	5-2
Clamshell bucket and teeth	4-17	4-15	Description.....	1-3	1-1
Clamshell front end attachment,			Detailed lubrication information	5-4	5-1
operation of.....	2-29	2-37	Difference in models	1-5	1-14
Cleaners, air	3-69	3-62	Digging brake or planetary clutch		
Clutch adjustment, engine.....	3-9	3-24	band adjustment, hoist. brake	3-31	3-37
Clutch adjustment, swing			Digging clutch adjustment, hoist		
(jackshaft).....	3-29	3-35	clutch and	3-32	3-38

	Paragraph	Page		Paragraph	Page
Dipper bail and sheave.....	4-6	4-5	Extension, counterweight	3-163	3-141
Dipper handle	4-5	4-5	Extension (trouble) light	4-40	4-33
Dipper, shovel.....	4-4	4-5	External oil ventilation lines.....	3-65	3-55
Dipper teeth	4-7	4-6	Extinguisher fire (dry chemical type).....	2-24	2-35
Dipper trip adjustment.....	3-37	3-42	Extreme cold, operation in.....	2-14	2-33
Dipper trip clutch brakeshoe.....	4-9	4-9	Extreme heat, operation in	2-15	2-34
Dipper trip mechanism and trip lines	4-8	4-7	Fairlead sheaves	4-16	4-13
(Dipstick), engine oil level gage	3-64	3-55	Fan and support bracket	3-102	3-99
Dirtguards and shields, gear and.....	3-133	3-124	Fan belt	3-103	3-100
Discharger, pressure primer	4-50	4-42	Fan drive belt adjustment.....	3-21	3-32
Dismantling for movement	2-5	2-21	Fan guard, radiator, shroud and.....	3-101	3-99
Door and window glass.....	3-166	3-142	Field expedient repairs:		
Door handrail (grip).....	3-165	3-141	Engine oil strainer faulty	3-51	3-50
Door, left front panel	3-172	3-145	Engine overheats	3-48	3-50
Doors, lower cable	3-174	3-146	Engine starved for fuel	3-49	3-50
Doors on winterized models	3-169	3-143	Low oil pressure.....	3-50	3-50
Doors, upper cable.....	3-173	3-146	Starter motor fails to turn engine	3-47	3-50
Door, sliding	3-168	3-143	Fill cap and breather service,		
Door, swinging.....	3-167	3-142	chain case.....	3-27	3-34
Dragline bucket and teeth.....	4-18	4-15	Filler, crankcase breather and oil.....	3-66	3-55
Dragline front end attachment			Filler pipe and fuel level gage		
operation of.....	2-30	2-38	(Model 855BG3 only)	3-72	3-68
Drive chain	3-144	3-135	Filter and breather service,		
Drum cable lagging.....	4-12	4-10	fuel tank filler	3-14	3-28
Drum lagging	4-25	4-22	Filter, fuel.....	3-75	3-68
Drum lagging and sleeve nut			Filter, fuel (secondary)	3-75	3-68
(shear washer)	3-131	3-122	Filter, primary fuel.....	3-74	3-68
Dry chemical type fire extinguisher	2-24	2-35	Filters, engine oil.....	3-62	3-54
Dusty or sandy areas, operation in	2-16	2-34	Filter service, fuel	3-13	3-25
Electrical connector (quick discon			Filter services, engine oil.....	3-10	3-25
nect)	3-160	3-140	Fire extinguisher (dry chemical		
Electrical connector, receptacle			type)	2-24	2-35
(slave).....	3-89	3-89	Fittings, fuel tank lines and.....	3-71	3-64
Enclosure and components, light	3-183	3-150	Fittings, primer pump lines and	3-77	3-74
Engine air cleaner services	3-11	3-25	Floodlight adjustment and lamp		
Engine clutch adjustment	3-9	3-24	replacement	3-15	3-29
Engine heater	4-44	4-35	Floodlights.....	3-181	3-150
Engine inspection and services	3-8	3-24	Forms and records.....	1-2	1-1
Engine oil filters	3-62	3-54	Front end attachment.....	4-2	4-1
Engine oil filter services	3-10	3-25	Front end attachment, operation of		
Engine oil level gage (dipstick)	3-64	3-55	backhoe	2-32	2-39
Engine shutoff control	3-78	3-74	Front end attachment, operation of		
Engine oil strainer	3-63	3-55	clamshell	2-29	2-37
Engine oil strainer faulty.....	3-51	3-50	Front end attachment, operation of		
Engine oil strainer service			crane	2-28	2-37
(Model 687C-18-ES only)	3-12	3-25	Front end attachment, operation of		
Engine overheats.....	3-48	3-50	dragline.....	2-30	2-38
Engine starved for fuel	3-49	3-50	Front end attachment, operation of		
Engine, starting the	2-10	2-30	jib boom.....	2-34	2-41
Engine, stopping the	2-11	2-31	Front end attachment, operation of		
Equipment, conversion of.....	2-4	2-5	piledriver	2-33	2-39
Equipment inspection and servicing			Front end attachment, operation of		
the	2-1	2-1	shovel.....	2-31	2-39
Equipment, operation of	2-12	2-31	Front end attachment, backhoe	4-26	4-22
Equipment, tools and.....	3-1	3-1	Front end attachment, piledriver.....	4-33	4-30
Exhaust manifold	3-99	3-98	Front hook roller adjustment.....	3-39	3-43
Exhaust pipe	3-97	3-97	Front hook rollers.....	3-125	3-125
Explosives or weapons fire,			Front panel door, left.....	3-172	3-145
demolition by	5-6	5-2	Front side panel, left hand.....	3-171	3-143

	Paragraph	Page		Paragraph	Page
Front, winter radiator.....	4-52	4-44	Heater fuel strainer service		
Fuel filter (model D333TA engine).....	3-75	3-68	(winterized models).....	3-25	3-34
Fuel filter, primary.....	3-74	3-68	Heater, fuel tank, fuel pumps, tank		
Fuel filter (secondary on model			and fuel strainer group	4-46	4-35
687C-18-ES).....	3-75	3-68	Heater fuel tank services		
Fuel filter service.....	3-13	3-25	(winterized models)	3-24	3-33
Fuel injectors	3-68	3-62	Heater, personnel.....	4-43	4-34
Fuel level gage, filler pipe and.....	3-72	3-68	Heaters, operation of.....	2-26	2-37
Fuel level indicator.....	3-152	3-138	Heat, operation in extreme	2-15	2-34
Fuel level transmitter.....	3-153	3-138	High altitude, operation at	2-21	2-35
Fuel line and breather (model			High temperature switch, water	3-92	3-90
855BG3 only).....	3-73	3-68	High temperature warning light,		
Fuel pump service heater	3-26	3-34	water.....	3-155	3-140
Fuel pumps, heater	4-46	4-35	Hoist brake, digging brake, or		
Fuel strainers, heater	4-46	4-35	planetary clutch band adjustment	3-31	3-37
Fuel strainer service, heater	3-25	3-34	Hoist clutch and digging clutch		
Fuel tank filler cap, filter, and			adjustment	3-32	3-38
breather service	3-14	3-28	Hoist drum clutch and brake bands	3-30	3-37
Fuel tank, heater.....	4-46	4-35	Hook block and weighted hook.....	4-19	4-16
Fuel tank, lines, and fittings.....	3-71	3-64	Hook roller adjustment	3-39	3-43
Fuel tank service, heater	3-24	3-33	Hook rollers, front	3-125	3-117
			Hook roller, rear	3-126	3-118
Gage (dipstick), engine oil level.....	3-64	3-55	Holding pawl, boom hoist brake,		
Gage, filler pipe and fuel level	3-72	3-68	clutch and	3-136	3-125
Gantry, auxiliary backhoe.....	4-27	4-24	Horn	4-39	4-33
Gasket, valve cover and.....	3-59	3-52	Horn push switch	3-158	3-140
Gear and dirt guards and shields	3-133	3-124	Housing, thermostat.....	3-105	3-101
General lubrication information	3-3	3-1	Humid conditions, operation under		
General methods used to attain			rainy or	2-17	2-34
proper suppression	3-52	3-50	Hydraulic clutch and brake cylinders	3-123	3-135
Generator and belt (engine model			Hydraulic hose, lines, tubes, and		
687C-18-ES).....	3-83	3-81	fittings.....	3-118	3-110
Generator drive belt adjustment			Hydraulic reservoir (tank) service	3-10	3-25
(engine model 687C-18-ES only).....	3-22	3-33	Hydraulic tank.....	3-117	3-109
Generator regulator (engine model			Identification and tabulated data.....	1-4	1-2
687C-18-ES).....	3-85	3-83	Idler adjustment, track.....	3-143	3-135
Glass, window and door.....	3-166	3-142	Idler and tightener, crowd and		
Glow plugs (engine model D333TA			retract chain.....	4-3	4-4
only)	4-51	448	Idler sheaves, boom point and	4-20	4-16
Governor, overspeed.....	3-94	3-90	Indicator, boom angle (radius).....	4-23	4-21
Governor overspeed microswitch	3-148	3-136	Indicator, fuel level.....	3-152	3-138
Governor throttle control linkage	3-76	3-74	Indicator, oil pressure.....	3-150	3-138
Grip, door handrail.....	3-165	3-141	Indicator, radius (boom angle).....	4-23	4-21
Guard, mud	3-145	3-135	Indicator (warning) light, water		
Guard, radiator shroud and fan	3-101	3-99	high temperature.....	3-155	3-140
Gun case and tool box	3-184	3-150	Indicator (warning) light, low oil		
			pressure.....	3-151	3-138
Hammer, pile cap, and pile collar	4-36	4-31	Indicator, water temperature.....	3-154	3-140
Handle, dipper	4-5	4-5	Information, detailed lubrication	3-4	3-1
Handrail, (grip) door.....	3-165	3-141	Information, general lubrication	3-3	3-1
Hangers, pile lead.....	4-34	4-30	Injectors, fuel	3-68	3-62
Harness spreader, boom.....	4-15	4-12	Input shaft chain sprocket	3-114	3-108
Heater, battery.....	4-45	4-35	Inspecting and servicing the		
Heater control panel			equipment.....	2-1	2-1
(distribution box)	4-47	4-36	Inspection and services, engine.....	3-8	3-24
Heater coolant pump (winterized			Inspection and test.....	3-57	3-52
models).....	3-104	3-101	Installation of separately packed		
Heater, engine	4-44	4-35	components	2-2	2-1
Heater fuel pump service			Installation or setting up		
(winterized models).....	3-26	3-34	instructions	2-3	2-2

	Paragraph	Page		Paragraph	Page
Instructions, installation or setting up	2-3	2-2	Maintenance repair parts,		
Instrument panel and cab light lamp.....			organizational	3-2	3-1
replacement.....	3-42	3-45	Manifold (blower to blower) air.....	3-70	3-64
Instruments, controls and.....	2-8	2-23	Manifold, exhaust.....	3-99	3-98
Interference suppression components	3-53	3-50	Manifold group, defroster hose and	4-49	4-38
Intermediate shaft adjustment,			Manifold, water	3-106	3-102
vertical.....	3-134	3-124	Mechanism and trip lines, dipper trip	4-8	4-7
Jackshaft clutch shoes.....	3-128	3-119	Meter, tachometer time totalizing.....	3-147	3-136
Jib boom front end attachment,.....			Micro switch, overspeed governor	3-148	3-136
operation of.....	2-34	2-41	Models, difference in	1-5	1-14
Jib boom strut and sheaves	4-21	4-17	Motor, starter	3-87	3-87
Lagging	4-25	4-22	Movement, dismantling for	2-5	2-21
Lagging cable drum	4-12	4-10	Movement, reinstallation after	2-6	2-21
Lamp replacement, floodlight			Mud guard	3-145	3-135
adjustment and	3-15	3-29	Mud or deep water, operation in	2-20	2-35
Lead hangers, pile	4-34	4-30	Muffler	3-98	3-98
Leads, pile	4-35	4-31	Oil filler, crankcase breather and.....	3-66	3-55
Left front panel door.....	3-172	3-145	Oil filters, engine.....	3-62	3-54
Left hand center side panel	3-170	3-143	Oil filter services, engine	3-10	3-25
Left hand front side panel.....	3-171	3-143	Oil level gage (dipstick), engine.....	3-64	3-55
Left side louver panel.....	3-177	3-146	Oil pressure indicator	3-150	3-138
Lever and linkage, clutch.....	3-108	3-105	Oil pressure switch, low	3-93	3-90
Lever, auxiliary clutch	3-109	3-105	Oil pressure transmitter.....	3-90	3-89
Lever stand levers and linkage	3-120	3-111	Oil strainer, engine.....	3-63	3-55
Light, cab.....	3-182	3-150	Oil strainer service, engine	3-12	3-25
Light enclosure and components.....	3-183	3-150	Oil ventilation lines, external.....	3-65	3-55
Light, extension (trouble).....	4-40	4-33	Operation at high altitude	2-21	2-35
Light, water high temperature.....			Operation below sea level	2-22	2-35
warning.....	3-155	3-140	Operation in dusty or sandy areas.....	2-16	2-34
Light, low oil pressure warning	3-151	3-138	Operation in extreme cold	2-14	2-33
Light, trouble.....	2-27	2-37	Operation in extreme heat	2-15	2-34
Lights, flood.....	3-181	3-150	Operation in mud or deep water	2-20	2-35
Limited storage, preparation for	5-2	5-1	Operation in salt water areas.....	2-18	2-35
Line and breather, fuel	3-73	3-68	Operation in snow	2-19	2-35
Lines and fittings, fuel tank.....	71	3-64	Operation of backhoe front end attachment.....	2-32	2-39
Lines and fittings, primer pump	3-77	3-74	Operation of clamshell front end attachment.....	2-29	2-37
Lines, external oil ventilation	3-65	3-55	Operation of crane front end attachment.....	2-28	2-37
Lines, tubes, and fittings hydraulic			Operation of dragline front end attachment.....	2-30	2-38
hose.....	3-118	3-110	Operation of equipment.....	2-12	2-31
Linkage, governor throttle control	3-76	3-74	Operation of heaters	2-26	2-37
Linkage, lever stand levers and	3-120	3-111	Operation of jib boom front end attachment.....	2-34	2-41
Linkage, propel and steering			Operation of piledriver front end attachment.....	2-33	2-39
mechanism	3-138	3-126	Operation of shovel front end attachment.....	2-31	2-39
Links and pins, tract.....	3-141	3-134	Operation under rainy or humid conditions	2-17	2-34
Loading crane-shovel for shipment.....	5-3	5-1	Operators seat	3-179	3-147
Louver panel, left side	3-177	3-146	Organizational Maintenance repair parts	3-2	3-1
Low engine air pressure	3-50	3-50	Other demolition methods.....	5-7	5-2
Low oil pressure switch	3-93	3-90	Overspeed governor micro switch	3-14f	3-136
Low oil pressure warning.....			Overspeed governor (model 687C-18-ES).....	3-94	3-90
indicator light	3-151	3-138			
Lower cable doors.....	3-174	3-146			
Lubrication information, detailed	3-4	3-1			
Lubrication information, general	3-3	3-1			
Main hoist shaft clutch shoes	3-129	3-120			
Main shaft sprocket.....	3-115	3-108			
Maintenance checks and services,					
preventive	3-6	3-21			

	Paragraph	Page		Paragraph	Page
Panel and cab light lamp replacement			Replacement.....	3-54	3-50
ment	3-42	3-45	Testing.....	3-55	3-51
Panel, cab rear	3-175	3-146	Radius indicator (boom angle indicator).....	4-23	4-21
Panel, center, right side	3-178	3-147	Rainy or humid conditions, operation under	2-17	2-34
Panel door, left front	3-172	3-145	Rear cab panel.....	3-175	3-146
Panel, heater control	4-47	4-36	Rear hook roller adjustment	3-39	3-43
Panel, left hand center side	3-170	3-143	Rear hook rollers.....	3-126	3-118
Panel, left hand front side	3-171	3-143	Records, forms and.....	1-2	1-1
Panel, left side louver.....	3-177	3-146	Receptacle (slave) electrical connector.....	3-89	3-89
Panel, right rear side.....	3-176	3-146	Regulator, alternator	3-86	3-87
Parts, organizational maintenance			Regulator, generator.....	3-853-83	
repair	3-2	3-1	Reinstallation after movement	2-6	2-21
Personnel heater.....	4-43	4-34	Relay, starter solenoid	3-88	3-88
Pile cap and pile collar, hammer	4-36	4-31	Render crane-shovel inoperative, demolition to	5-5	5-1
Pile collar, hammer, pile cap and	4-36	4-31	Repair parts, organizational maintenance	3-2	3-1
Pile lead hangers	4-34	4-30	Repairs, field expedient:		
Pile leads.....	4-35	4-31	Engine oil strainer faulty	3-51	3-50
Piledriver front end attachment.....	4-33	4-30	Engine overheats	3-48	3-50
Piledriver front end and attachment.....			Engine starved for fuel.. ..	3-49	3-50
operation of.....	2-33	2-37	Low oil pressure	3-50	3-50
Pipe, exhaust	3-97	3-97	Starter motor fails to turn engine	3-47	3-50
Pins, track links and.....	3-141	3-134	Replacement, cable	3-43	3-45
Planetary clutch band adjustment,			Replacement of suppression components	3-54	3-50
hoist brake, digging brake or	3-31	3-37	Right rear side panel	3-176	3-146
Planetary clutch band and brake			Right side center cab panel	3-178	3-147
bands (main shaft).....	3-130	3-121	Roller circle.....	3-127	3-119
Planetary pinion gear and shovel			Rollers, upper track support	3-142	3-135
sprocket	3-132	3-123	Run shutdown switch	3-156	3-140
Plugs, glow	4-51	4-43	Safety backstop, backhoe	4-30	4-28
Positioning clutch and brake bands			Salt water areas, operation in.....	2-18	2-35
on hoist drum.....	3-30	3-37	Sandy areas, operation in dusty or	2-16	2-34
Power take-off breather service	3-28	3-34	Scope	1-1	1-1
Preparation for limited storage	5-2	5-1	Sea level, operation below.....	2-22	2-35
Pressure indicator, oil	3-150	3-138	Seat, operator	3-179	3-147
Pressure primer discharger			Secondary fuel filter	3-75	3-68
(ether injector)	4-50	4-42	Separately packed components, installation of.....	2-2	2-1
Pressure switch, low oil.....	3-93	3-90	Service, battery	3-16	3-29
Pressure transmitter, oil.....	3-90	3-89	Service, chain case fill cap and breather	3-27	3-34
Preventive maintenance checks and.....			Service, engine air cleaner	3-11	3-25
services	3-6	3-21	Service, engine oil filters	3-10	3-25
Primary fuel filter (model.....			Service, engine oil strainer	3-12	3-25
687C-18-ES only)	3-74	3-68	Service, fuel filter	3-13	3-25
Primer pump, lines, and fittings.....	3-77	3-74	Service, fuel tank filler cap, filter and breather.....	3-14	3-28
Propel and steering mechanism			Service, heater fuel pump.....	3-26	3-34
linkage	3-138	3-126	Service, heater fuel strainer.....	3-25	3-34
Propel brake adjustment, steering			Service, heater fuel tank.....	3-24	3-33
linkage, swing brake and.....	3-33	3-40	Service, hydraulic reservoir (tank)	3-19	3-31
Propel brake bands.....	3-137	3-126	Service, power take-off breather.....	3-28	3-34
Propel chain adjustment.....	3-40	3-44	Service, radiator.....	3-20	3-32
Pump, heater coolant.....	3-104	3-101	Service, windshield wiper	3-17	3-31
Pump, lines and fittings, primer.....	3-77	3-74	Services, engine inspection and	3-8	3-24
Pump service, heater fuel.....	3-26	3-34			
Push switch, horn	3-158	3-140			
Push switch, starter	3-157	3-140			
Radiator, shroud, and fan guard.....	3-101	3-99			
Radiator service.....	3-20	3-32			
Radiator winterfront	4-52	4-44			
Radio interference suppression:					
General methods use to attain.....	3-52	3-50			
Components	3-53	3-50			

	Paragraph	Page
Services, preventive maintenance checks and.....	3-6	3-21
Servicing the equipment, inspecting and.....	2-1	2-1
Setting up instructions, installation of	2-3	2-2
Sheaves, boom point and idler	4-20	4-16
Sheave, dipper bail and	4-6	4-5
Sheaves, fairlead	4-16	4-13
Sheaves, jib boom, strut and.....	4-21	4-17
Shifter lever, swing and propel	3-121	3-113
Shipment, loading crane shovel for	5-3	5-1
Shovel boom	4-10	4-10
Shovel dipper	4-4	4-5
Shovel front end attachment	4-2	4-1
Shovel front end attachment, operation of	2-31	2-39
Shovel, sprocket, planetary pinion gear and	3-132	3-123
Shroud and fan guard, radiator	3-101	3-99
Shutdown switch, run	3-156	3-140
Shutoff control, engine	3-78	3-74
Slave receptacle	3-89	3-89
Sleeve nut (shear washer), drum lagging and.....	3-131	3-122
Sliding doors.....	3-168	3-143
Snow, operation in	2-19	2-35
Solenoid relay, starter	3-88	3-88
Spreader, boom harness.....	4-15	4-12
Spring adjustment, antisway	3-36	3-42
Sprocket, input shaft chain.....	3-114	3-108
Sprocket, main shaft.....	3-115	3-108
Starter motor	3-87	3-87
Starter motor fails to turn engine.....	3-47	3-50
Starter push switch	3-157	3-140
Starter solenoid relay	3-88	3-88
Starting aid, cold weather.....	2-25	2-36
.....	3-18	3-31
Starting the engine	2-10	2-30
Steering linkage, swing brake and propel brake adjustment.....	3-33	3-40
Steering mechanism linkage, propel and.....	3-138	3-126
Steering wheel adjustment	3-139	3-126
Stick, backhoe bucket	4-29	4-26
Stopping the engine	2-11	2-31
Storage, preparation for limited	5-2	5-1
Strainer, engine oil	3-63	3-55
Strut and sheaves, jib boom.....	4-21	4-17
Support bracket, fan and.....	3-102	3-99
Support rollers, upper track.....	3-142	3-135
Suppression, radio interference: General methods used to attain	3-52	3-50
Components	3-53	3-50
Replacement.....	3-54	3-50
Testing	3-55	3-51
Swing and propel shifter lever	3-121	3-113
Swing brake band	3-135	3-124
Swing brake hydraulic control and linkage adjustment	3-122	3-113

	Paragraph	Page
Switch, overspeed governor micro	3-29	3-35
Swing door	3-167	3-142
Switch, water high temperature.....	3-92	3-90
Switch, horn push	3-158	3-140
Switch, low oil pressure	3-93	3-90
Swing (jackshaft) clutch adjustment	3-148	3-136
Switch, run shutdown.....	3-156	3-140
Switch, starter push	3-157	3-140
Switch, windshield wiper	3-159	3-140
Tables:		
Table 1-1. Specific gravity temperature corrections for batteries		1-7
Table 1-3. Cable lengths, diameter and use		1-9
Table 2-1. Use of cold weather starting aids		2-31
Table 3-1. Special tools.....		3-1
Table 3-2. Preventive maintenance checks and services		3-22
Table 3-3. Troubleshooting		3-47
Tabulated data, identification and.....	1-4	1-2
Tachometer time totalizing meter	3-147	3-136
Tagline winder	4-14	4-12
Tank, hydraulic.....	3-117	3-109
Tank, lines, and fittings, fuel	3-71	3-64
Tank service, hydraulic	3-19	3-31
Teeth, backhoe, bucket, bail, and.....	4-28	4-24
Teeth, clamshell bucket and.....	4-17	4-15
Teeth, dipper	4-7	4-6
Teeth, dragline bucket and.....	4-18	4-15
Temperature control, battery heater automatic.....	4-48	4-37
Temperature indicator, water	3-154	3-140
Temperature switch, water high	3-92	3-90
Temperature transmitter, water.....	3-91	3-90
Test and inspection.....	3-57	3-52
Testing of radio interference suppression components	3-55	3-51
Thermostat	3-105	3-101
Thermostat housing, thermostat, and coolant lines.....	3-105	3-101
Throttle control linkage, governor	3-76	3-74
Tools and equipment	3-1	3-1
Track adjustment	3-41	3-44
Track idler adjustment	3-143	3-135
Track support rollers, upper	3-142	3-135
Training	5-8	5-2
Transfer chains.....	3-113	3-107
Transfer chain case cover.....	3-112	3-106
Transmitter fuel level	3-153	3-138
Transmitter, oil pressure	3-90	3-89
Transmitter, water temperature	3-91	3-90
Tread (track), links, and pins.....	3-141	3-134
Trip adjustment, dipper	3-37	3-42
Trip cable adjustment	3-38	3-42
Trip clutch brake shoe, dipper	4-9	4-9
Trip mechanism and trip lines, dipper	4-8	4-7
Trouble light.....	2-27	2-37

	Paragraph	Page		Paragraph	Page
Troubleshooting.....	3-45	347	Water temperature transmitter	3-91	3-90
Tubes, and fittings, hydraulic hose, lines.....	3-118	3-110	Weapon fire, demolition by explosives or.....	5-6	6-2
Upper cable doors.....	3-178	3-146	Weighted hook, hook block and	4-19	4-16
Upper track support rollers.....	3-142	3-185	Wheel adjustment, steering.....	3-189	3-126
Valve (rocker arm) adjustment	3-60	3-52	Winder, tagline	4-14	4-12
Valve cover and gasket	3-59	3-52	Window glass, door and	3-166	3-142
Ventilation breather.....	3-111	3-106	Windshield wiper	4-41	4-88
Ventilation lines, external oil	3-65	3-55	Windshield wiper service (winter- ized models only).....	3-17	3-81
Vertical intermediate shaft adjustment.....	3-184	3-124	Windshield wiper switch.....	3-159	3-140
Water areas, operation in salt	2-18	2-85	Winter front	4-52	4-44
Water manifold (model \$87C- 18-ES)	3-106	38-102	Winterized model doors	3-169	3-148
Water, operation in mud or deep.....	2-20	2-85	Wiper, windshield	4-41	4-88
Water temperature indicator	3-154	3-140	Wiring.....	3-95	3-92
Water temperature switch, high.....	3-92	3-90	Wiring, control panel.....	3-161	8-140

By Order of the Secretary of the Army:

W. C. WESTMORELAND,
General United States Army,
Chief of Staff.

Official:

KENNETH G. WICKHAM,
Major General, United States Army,
The Adjutant General.

Distribution:

To be distributed in accordance with DA Form 12-25, Section II, (qty rqr block no. 350) organizational maintenance requirements for Crane-Shovels, Crawlers, 40 Ton.

*U.S. GOVERNMENT PRINTING OFFICE: 1994 0 - 300-421 (82533)

SAFETY PRECAUTIONS

BEFORE OPERATION

Always provide a metallic contact between container, or nozzle, and fuel tank during fueling operation. This will prevent sparks from jumping between nozzle and filler neck and lessen fire hazard.

Before starting engine, assure that all operating levers and controls are in neutral position.

Keep revolving frame floor free from mud, grease, or ice to prevent injury by falling.

Replace all guards and shields immediately after completing adjustments.

DURING OPERATION

Stop the crane-shovel unit before maintenance is to be performed around gears, sheaves, drums, or other moving parts.

Do not attempt to get on or off of the unit while it is in motion.

Do not give the operator a signal to raise a load until you are sure it is properly secured.

When the hook is not clearly visible by operator, use an intermediate signal man. Lift loads vertically to avoid swinging.

Always keep within maximum working radius for load being lifted.

Be sure there is adequate clearance before attempting to move under low objects. Keep the boom at least 10 feet from all electrical power lines. Assure that there is adequate clearance around unit before attempting to swing a load.

Do not travel unit with boom at high angle, or when carrying close to maximum load. Do not exceed capacity rating.

To move capacity loads beyond radius of unit, pick up the load, swing it ahead, set it down, then move around it. Repeat as often as necessary.

When traveling with a suspended load, secure load to the unit and prevent load from swinging out beyond boom point.

Keep lift height to a minimum when handling close to maximum load. Never leave the unit while dipper, bucket, or crane load is in raised position. Lower load to ground and disengage the engine clutch.

Always start or stop revolving frame swing slowly and smoothly to avoid tilting the unit.

When operating as a shovel and digging from a bank, always inspect cut carefully for loose rock, frozen chunks of sand, or other evidence of conditions which might lead to slides or rock falls. Use all necessary precautions to insure safety of personnel. Avoid all careless operating habits which cause accidents to personnel.

When dumping into trucks, always spot trucks so swing will be over tailgate. Never swing a load over the cab, for a brake may loosen enough to allow load to fall on personnel.

Stop all operation before cleaning, adjusting, or lubricating the crane-shovel unit.

If the boom contacts high tension wires, stay on the unit until boom is cleared or current is shut off, and keep all ground crew away from the unit.

Keep all ground personnel away from swinging area when making lifts, to avoid injury should clutch, brake, or slings fail.

Never operate with worn or frayed cables. Install new cables when wear or frayed condition indicates failure is imminent.

Assure that all hooks, slings, or ties, are in good condition, properly placed, and secure before lifting loads.

Never operate a shovel under overhanging embankments.

Stop operations at first sign of a slipping clutch or brake, and make proper adjustments to avoid dropping a load, or injury to personnel.

Always be alert to unusual noises. Investigate immediately.

AFTER OPERATION

Always lower a crane load, bucket, shovel, or hoe to ground before stopping operations.

When stopping operations, disengage engine clutch and assure that all operating levers are in neutral.

Use extreme caution when removing radiator cap when engine is hot, to avoid a scalding injury.

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN... JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

PUBLICATION DATE

PUBLICATION TITLE

BE EXACT... PIN-POINT WHERE IT IS

PAGE NO.

PARA-GRAPH

FIGURE NO.

TABLE NO.

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

TEAR ALONG PERFORATED LINE

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE:

DA FORM 2028-2
1 JUL 79

PREVIOUS EDITIONS ARE OBSOLETE.

P.S.—IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

PIN: 012219 000