


## TECHNICAL MANUAL

**DIRECT SUPPORT MAINTENANCE MANUAL  
(INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST)**

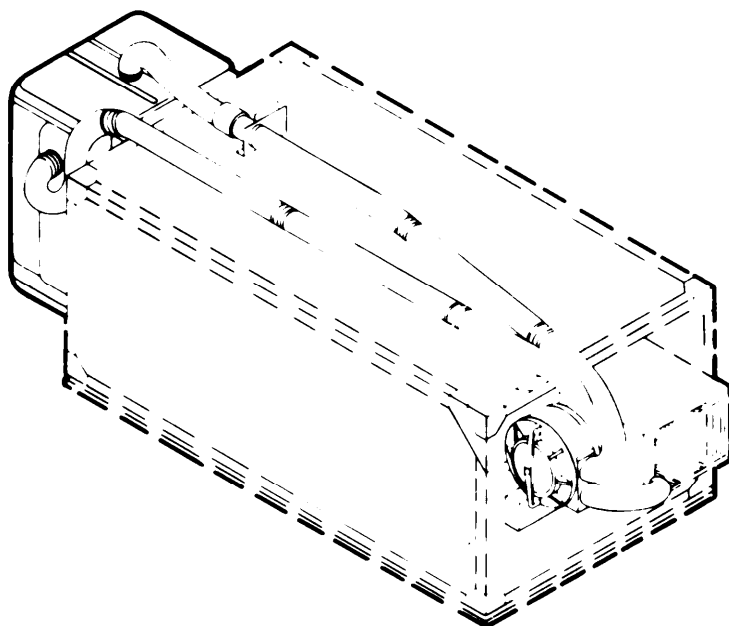

<b>INTRODUCTION</b>	<b>1-1</b>
<b>TROUBLESHOOTING</b>	<b>2-1</b>
<b>MAINTENANCE PROCEDURES FOR M10 PROTECTIVE ENTRANCE</b>	<b>2-137</b>
<b>MAINTENANCE PROCEDURES FOR M56 GAS-PARTICULATE FILTER UNIT</b>	<b>2-144</b>
<b>REPAIR PARTS AND SPECIAL TOOLS LIST</b>	<b>B-1</b>
<b>EXPENDABLE SUPPLIES AND MATERIALS LIST</b>	<b>C-1</b>
<b>INDEX</b>	<b>INDEX-1</b>

**COLLECTIVE PROTECTION EQUIPMENT, FIRE DIRECTION SYSTEM,  
ARTILLERY, (TACFIRE) AN/GSG-10(V)  
CONSISTING OF  
ENTRANCE, PROTECTIVE, PRESSURIZED: COLLAPSIBLE, M10  
(NSN 4240-00-229-2610);  
FILTER UNIT, GAS-PARTICULATE: 200 CFM, 208 V, 400 HZ, M56  
(NSN 4240-00-237-0227)  
AND  
INSTALLATION KIT: CBR, PROTECTIVE EQUIPMENT, TACFIRE, M262  
(NSN 4240-01-063-4655)**

---

**HEADQUARTERS, DEPARTMENT OF THE ARMY**

**JULY 1982**



CHANGE  
NO. 1

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, DC, 23 December 1989

DIRECT SUPPORT MAINTENANCE MANUAL  
( INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST)  
FOR  
COLLECTIVE PROTECTION EQUIPMENT  
FIRE DIRECTION SYSTEM, ARTILLERY (TACFIRE), AN/GSG-10 (V)

1. The purpose of this change is to update guidance for disposal, handling, and storage of filters.
2. New or changed material is indicated by a vertical bar in the margin of the page. RPSTL listing changes are indicated by an asterisk to the left of the item number column adjacent to the line item.
3. Remove old pages and insert new pages as follows:

Remove Pages

None  
B-17 and B-18

Insert Pages

a/(b blank)  
B-17 and B-18

4. File this change sheet in front of the publication for reference purposes.

By Order of the Secretary of the Army:

CARL E. VUONO  
General, United States Army  
Chief of Staff

Official:

WILLIAM J. MEEHAN II  
Brigadier General, United States Army  
The Adjutant General

Distribution:

To be distributed in accordance with DA Form 12-28 (block 41), maintenance requirements for TM 3-4240-284-30&P.



WARNING

HEALTH/ENVIRONMENTAL HAZARD

Filters use ASC Whetlerite Carbon which contains Chromium VI. Chromium VI is a known carcinogen if inhaled or swallowed. Damaged or unusable filters are classified as hazardous waste:

DO NOT throw away damaged or unusable filters as ordinary trash.

DO turn in damaged or unusable filters to your hazardous waste management office or Defense Reutilization and Marketing Office (DRMO).

Filters are completely safe to handle and use if they are not damaged in such a way that carbon leaks from them. In unlikely event that carbon should leak, use protection such as a dust respirator to cover nose and mouth and put carbon in container such as self-sealing plastic bag; turn in to hazardous waste management office or DRMO.

Disposal of hazardous waste is restricted by the Resource Conservation and Recovery Act as amended (42 U.S.C.A sec 6901 et seq). Violation of these laws is subject to severe criminal penalties.



TECHNICAL MANUAL

No. 3-4240-284-30&P

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
Washington, DC 30 July 1982

Direct Support Maintenance Manual  
(Including Repair Parts And Special Tools List)  
**COLLECTIVE Protection EQUIPMENT, FIRE DIRECTION SYSTEM,  
ARTILLERY, (TACFIRE) AN/GSG-10(V)**  
CONSISTING OF  
**ENTRANCE, PROTECTIVE, PRESSURIZED: COLLAPSIBLE, M10  
(NSN 4240-00-229-2610);  
FILTER UNIT, GAS-PARTICULATE:  
200 CFM, 206 V, 400 HZ, M56  
NSN 4240-00-237-0227)**  
AND  
**INSTALLATION KIT: CBR, PROTECTIVE EQUIPMENT, TACFIRE, M262  
(NSN 4240-01-063-4655)**

Current as of 20 April 1982 for Appendix B.

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**


You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Armament Materiel Readiness Command, ATTN: DRSAR-MAS-C, Aberdeen Proving Ground, MD 21010. A reply will be furnished to you.

	<b>Page</b>
<b>CHAPTER 1 INTRODUCTION</b> .....	1-1
Section I General Information .....	1-1
Section II Equipment Description and Data.....	1-2
Section III Repair Parts, Special Tools, TMDE, and Support Equipment .....	1-2
Section IV Principles of Operation .....	1-2


		Page		
<b>CHAPTER</b>	<b>2</b>	<b>MAINTENANCE INSTRUCTION</b>	2-1	
Section	I	Troubleshooting	2-1	
Section	II	Maintenance Procedures for M12 Protective Entrance	2-137	
Section	III	Maintenance Procedures for M56 Gas-Particulate Filter Unit	2-144	
<b>APPENDIX</b>	<b>A</b>	<b>REFERENCES</b>	A-1	
<b>APPENDIX</b>	<b>B</b>	<b>REPAIR PARTS AND SPECIAL TOOLS LIST</b>	B-1	
Section	I	Introduction	B-1	
Section	II	Repair Parts List	B-6	
			<b>Page</b>	
			<b>illus</b>	
			<b>Figure</b>	
Group	0100	M10 Protective Entrance	B-7	B-1
		0110 Protective Entrance Control Module	B-n	B-2
Group	0200	M56 Gas-Particulate Filter Unit	B-17	B-3
		0210 Main Fan	B-21	B-4
		0220 Airflow Valve	B-23	B-5
		0230 Power Distribution Unit	B-25	B-6
		0231 Power Distribution Panel	B-29	B-7
		0240 Compartment Control Module	B-35	B-6
Group	0300	M262 Installation Kit	B-39	B-9
		0310 Airflow Valve and Silencer	B-41	B-10
		0311 Airflow Valve	B-43	B-11
Group	0500	Bulk Material	B-44	
Section	III	Special Tools List (Nonapplicable)		
Section	IV	NSN,PadNo.index	B-45	
<b>APPENDIX C</b>		<b>EXPENDABLE SUPPLIES AND MATERIALS LIST</b>		
<b>APPENDIX D</b>		<b>ILLUSTRATED LIST OF MANUFACTURED ITEM</b>	C-1	
			D-1	
		<b>INDEX</b>	Index	1






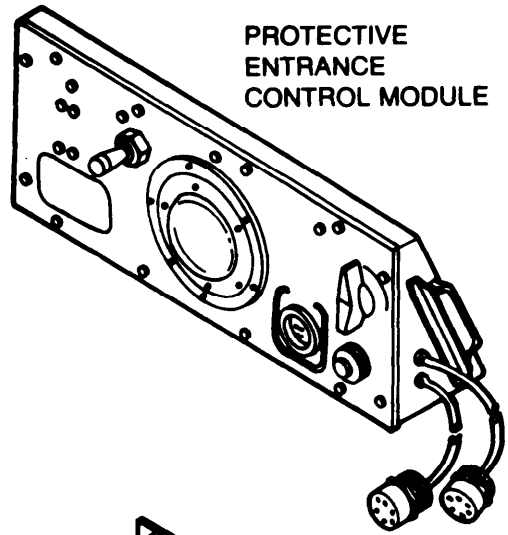


PROTECTIVE  
ENTRANCE  
CONTROL MODULE

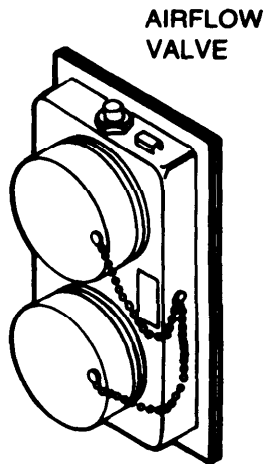


AIRFLOW  
VALVE

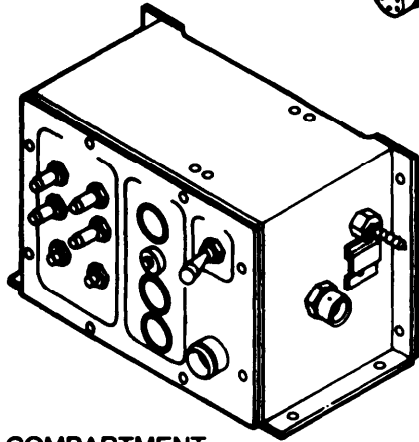

COMPARTMENT  
CONTROL MODULE

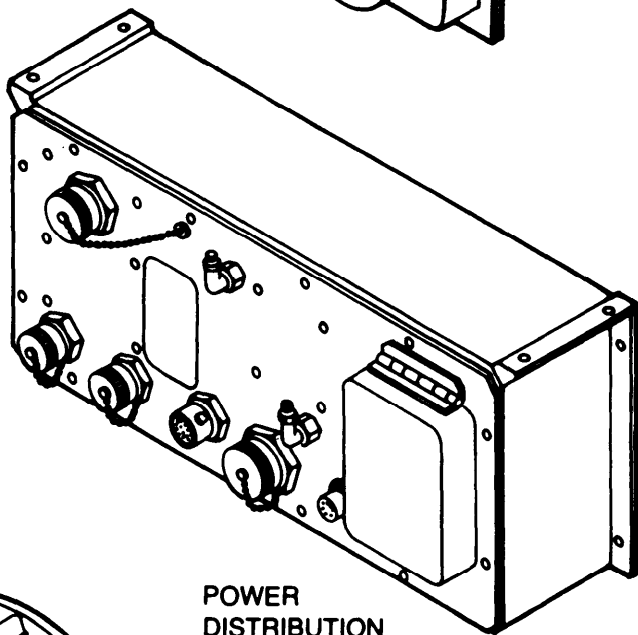

POWER  
DISTRIBUTION  
UNIT

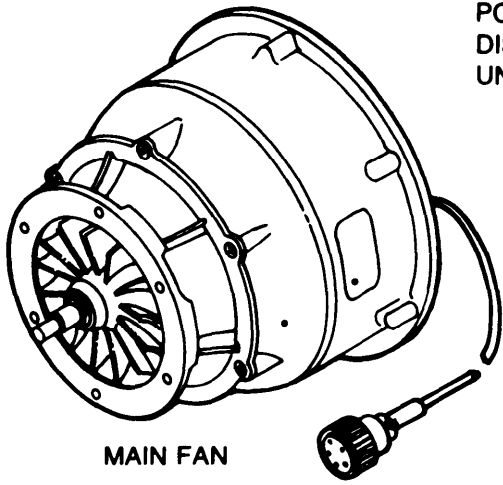

MAIN FAN

# CHAPTER 1 INTRODUCTION

## Section I. GENERAL INFORMATION

### 1-1. SCOPE.

a. *Type of Manual.* Direct Support Maintenance, including the Repair Parts and Special Tools List.

b. *Model Numbers and Equipment Names.*

M10 protective entrance:

Protective entrance control module

M56 gas-particulate filter unit:

Main fan

Airflow valve

Power distribution unit

Compartment control module

M262 installation kit:

Airflow valve

c. *Purpose of Equipment.* Provides filtered air under positive pressure to field shelters.

**1-2. MAINTENANCE FORMS, RECORDS, AND REPORTS.** Department of the Army forms and procedures used for equipment maintenance will be those prescribed by TM 38-750, The Army Maintenance Management System (TAMMS).

**1-3. DESTRUCTION OF ARMY MATERIEL TO PREVENT ENEMY USE.** Refer to TM 43-0002-31, Destruction of Chemical Weapons and Defense Equipment to Prevent Enemy Use.

**1-4. NOMENCLATURE CROSS-REFERENCE LIST.** This listing includes nomenclature cross-references used in this manual.

<i>Common Name</i>	<i>Official Nomenclature</i>
Compartment control module (CCM)	Control module, compartment

<i>Common Name</i>	<i>Official Nomenclature</i>
Differential pressure gage	Gage, differential, dial indicating
M56 gas-particulate filter unit	Filter unit, gas-particulate, M56
M 10 protective entrance	Entrance, protective, pressurized, M10
M262 installation kit	Installation kit, M262
Power card	Printed circuit board: power
Protective entrance control module (PECM)	Control module, protective entrance
Switching card	Printed circuit board: switching

**1-5. REPORTING EQUIPMENT IMPROVEMENT RECOMMENDATIONS (EIR).** If your collective protection equipment needs improvement, let us know. Send us an EIR. You, the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design. Tell us why a procedure is hard to perform. Put it on an SF 368 (Quality Deficiency Report). Mail it to us at Commander, US Army Armament Materiel Readiness Command, ATTN: DRSAR-MAP-A, Aberdeen Proving Ground, MD21010. A reply will be furnished directly to you.

## Section II. EQUIPMENT DESCRIPTION AND DATA

**1-6. DESCRIPTION AND TABULATED DATA.** Refer to TM 3-4240-284-20&P.

## Section III. REPAIR PARTS, SPECIAL TOOLS, TMDE, AND SUPPORT EQUIPMENT

**1-7. COMMON TOOLS AND EQUIPMENT.** For authorized common tools and equipment refer to the Modified Table of Organization and Equipment (MTOE) applicable to your unit.

**1-8. SPECIAL TOOLS, TMDE, AND SUPPORT EQUIPMENT.** No special tools, TMDE, or support equipment are required.

**1-9. REPAIR PARTS.** Repair parts are listed and illustrated in appendix B of this manual.


## Section IV. PRINCIPLES OF OPERATION

### 1-10. PRESSURE CONTROL SYSTEM.

a. The basic function of the pressure control system is to control the air pressure in a protected compartment within the prescribed limits by controlling the opening of an airflow valve from the pressurized air supply, the filter unit. The prescribed limits are 1.2 to 1.7 inches water gage (hereafter referred to as in. wg) for the compartment or compartment control module and 0.4 to 0.8 in. wg for the protective entrance and protective entrance control module. The control system operates from 28 vdc power.

b. The compartment pressure is sensed by the pressure transducer which provides an output voltage of 2 volts/in. wg to pin 1 of the switching card. When the air pressure in the compartment drops below the desired low limit, 1.2 in. wg for switching card A2 or 0.4 in. wg for

switching card A3, the pressure transducer output voltage drops below the low limit reference voltage. An operational amplifier (op amp) on the switching card compares pressure transducer output voltage to the low limit reference voltage (2.6 volts for the compartment control module low limit side) provided by potentiometer R11, resistor R13 and the voltage reference diode VR1 and multiplies the voltage difference by 26 times and provides this as the output voltage at TP-D. The op amp output voltage is at a low power level of only a few milliamps (mA). The transistor Q1 amplifies the power level to about 50 mA while providing no voltage amplification. The power level is further amplified by Q4 of the power card A1. This transistor brings the power level up to about 500 mA to drive the airflow valve motor.

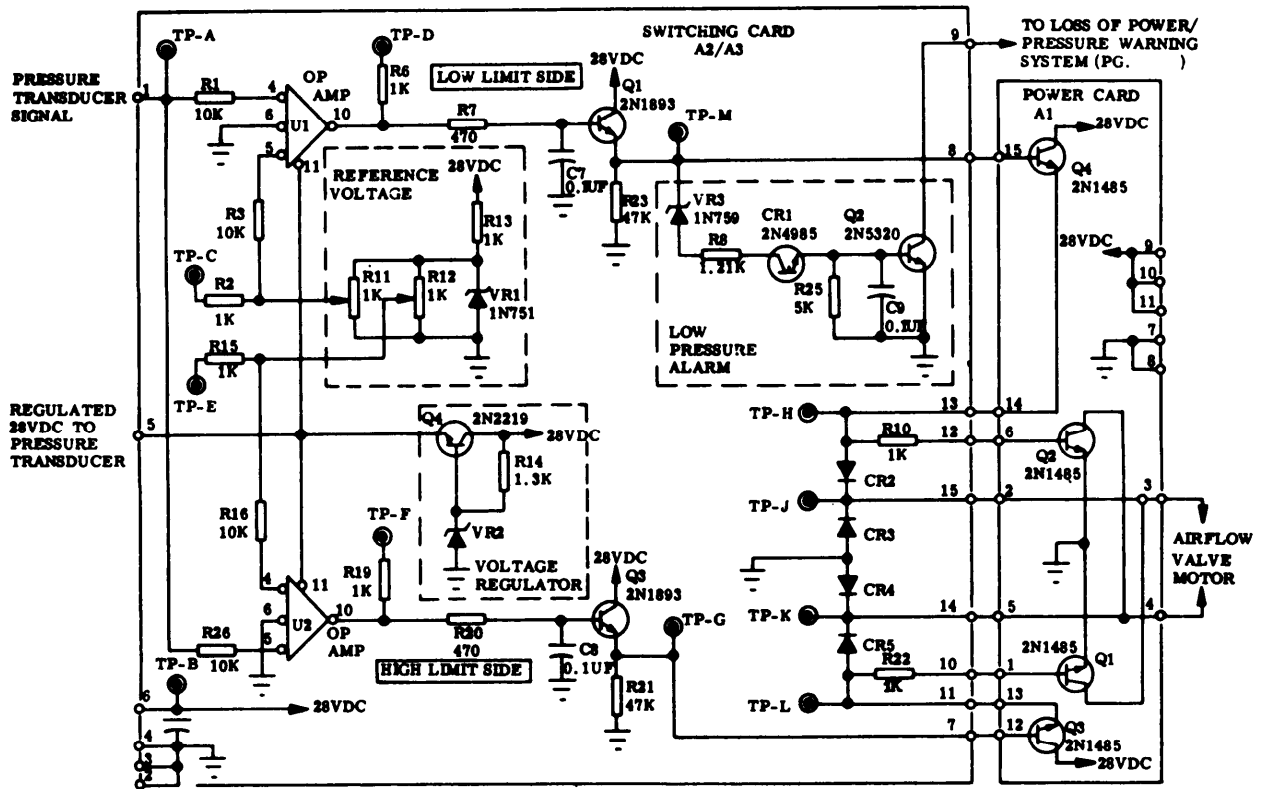

Pressure Control System, Switching and Power Card, Interconnection Schematic

c. Direct current power and ground are provided at output terminals 3 and 4 of the power card to the reversible 28 vdc motor. As the output of Q4 on the power card starts to rise, it provides current via R1 O to the base of Q2 on the power card. When this happens, Q2 turns on and provides a ground at terminal 4 of the power card whenever a voltage greater than a few volts is provided at terminal 3 of the power card. The airflow valve motor is connected such that when this happens the airflow valve motor will start and open the valve until the compartment pressure has risen to within the prescribed limits.

d. The description so far has been only for a low pressure condition or low limit side. There is an equivalent high pressure or high limit side circuitry which provides opposite polarity voltage to terminals 3 and 4 of the power card and hence the airflow valve motor. This circuitry consists of U2, Q3 on the switching card, and Q3 and Q1 on the power card. Whenever one pressure side is on, the other side is off. In the dead band (i.e., when the pressure is within the proper limits), both sides are off. The greater the pressure is outside the dead band, the greater the dc voltage to the airflow valve

motor. The voltage increases at the rate of 5.1 volts/.1 in. wg and saturates or reaches a maximum of about 25 volts when the pressure is 0.35 in. wg or more outside of the dead band.

e. The switching card also contains the low pressure alarm circuitry consisting basically of Q2, CR1, VR3, and the voltage divider resistors R8 and R25. This circuit is set to fire when the pressure falls below a preset level, 1.0 in. wg for the compartment control module and 0.33 in. wg for the protective entrance control module. When the pressure reaches the levels described above, the voltage across the four layer diode goes down to about 1 volt and allows base current to flow into the transistor Q2. The transistor is, therefore, "on" and provides a ground at terminal 9 of the switching card. In the system when this ground is provided, the MASK light/hem alarm or PE LOW PRESSURE light comes on. The circuit turns off when the voltage level of the low limit side falls within the proper limits.

f. The circuit consisting of R14, VR2, and Q4 is a series voltage regulator for the op amps and the pressure transducer. The circuit limits the voltage of these components to 28 vdc during high voltage transients.

**1-11. LOSS OF POWER/PRESSURE WARNING SYSTEM.**


a. The loss of power warning system provides an alarm, mask light and warning horn whenever the power switch on the compartment control module is turned on in the absence of input power to the compartment control module. An alarm is also provided when power is lost during normal operation.

b. When the compartment control module power switch is ON and the power is provided to the modular collective protection equipment, the batteries are charged through normal power distribution in the compartment control module through charging resistor R8. With the compartment control module power switch ON and a loss of power, battery power is provided to the loss of power warning system through terminals 5 and 6 of the compartment control module power switch of terminals 7 of A4 (printed circuit assembly switching auxiliary). Power is provided to the warning devices from terminal 8 of A4. Diodes A4 CR4 and CR5 prevent

power feedback into the rest of the 28 vdc power system. Diode CR3 provides power for the MASK indicator press-to-test. Diode A4 CR6 blocks power to the loss of power warning system when the system is off; however, press-to-test power is being provided through CR5.


c. During normal operation, 28 vdc power is provided through the closed contacts of pressure switch S6 and diode A4 CR7 to keep A4 Q3 turned off. Whenever there is a loss of pressure or a loss of power, 28 vdc is removed from the base of A4 Q3 and battery current provided by A4 R5, A4 VR1, and A4 R7 turns A4 Q3 on. Current provided by A4 Q3 and A4 R3 is directed to the base of A4 Q2 turning A4 Q2 on. When A4 Q2 is on, a ground is provided at terminals 1,2, and 6 of A4 which activates the warning circuit.

d. Current will be supplied by A4 Q3 as long as the battery voltage is greater than 16 volts. In the range of 14-16 volts the transistor A4 Q3 will be turned off by A4 VR1 thus removing base drive for A4 Q2 and hence turning off the warning circuit and preventing deep discharge of the batteries.


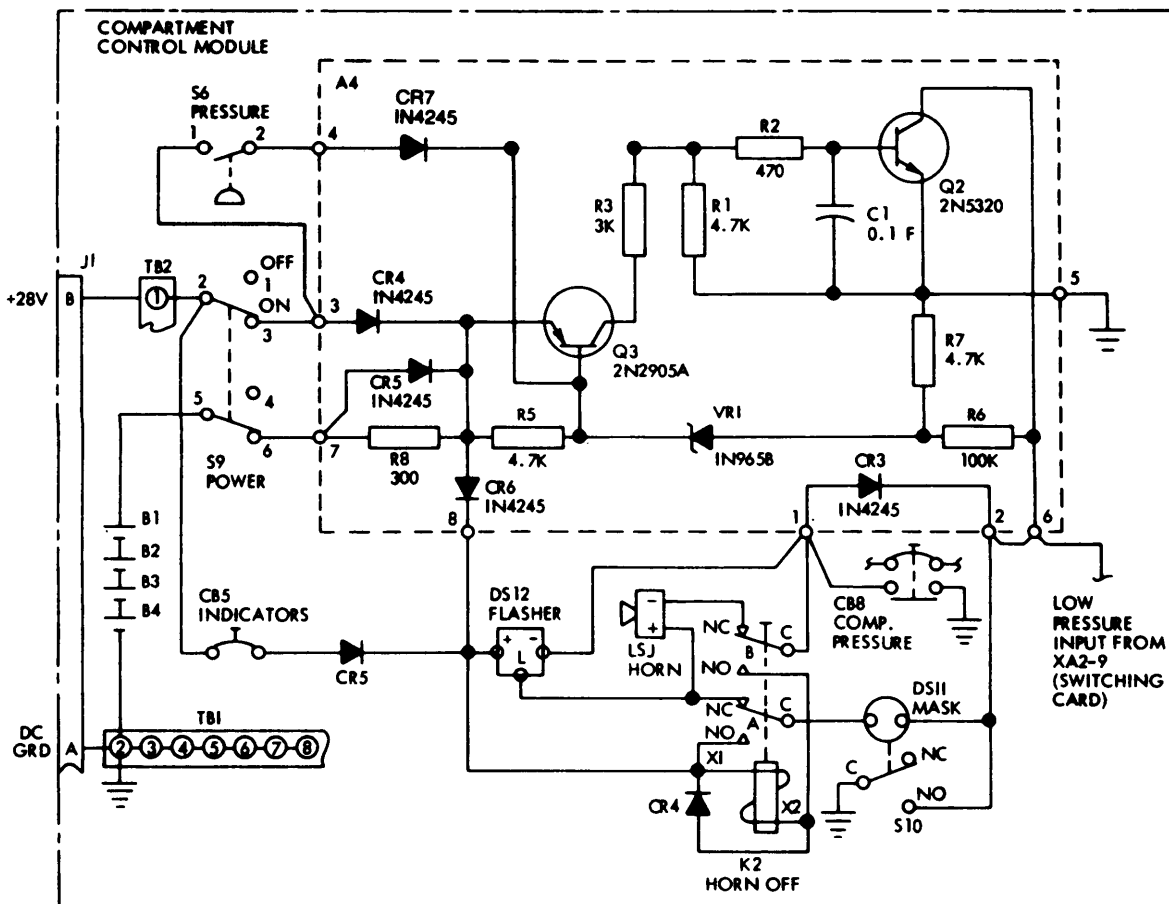


Loss of Power/Pressure Warning System Schematic Diagram

**1-12. OVERALL SYSTEM.** Refer to system schematic diagram below for component operation with other collective protection equipment.

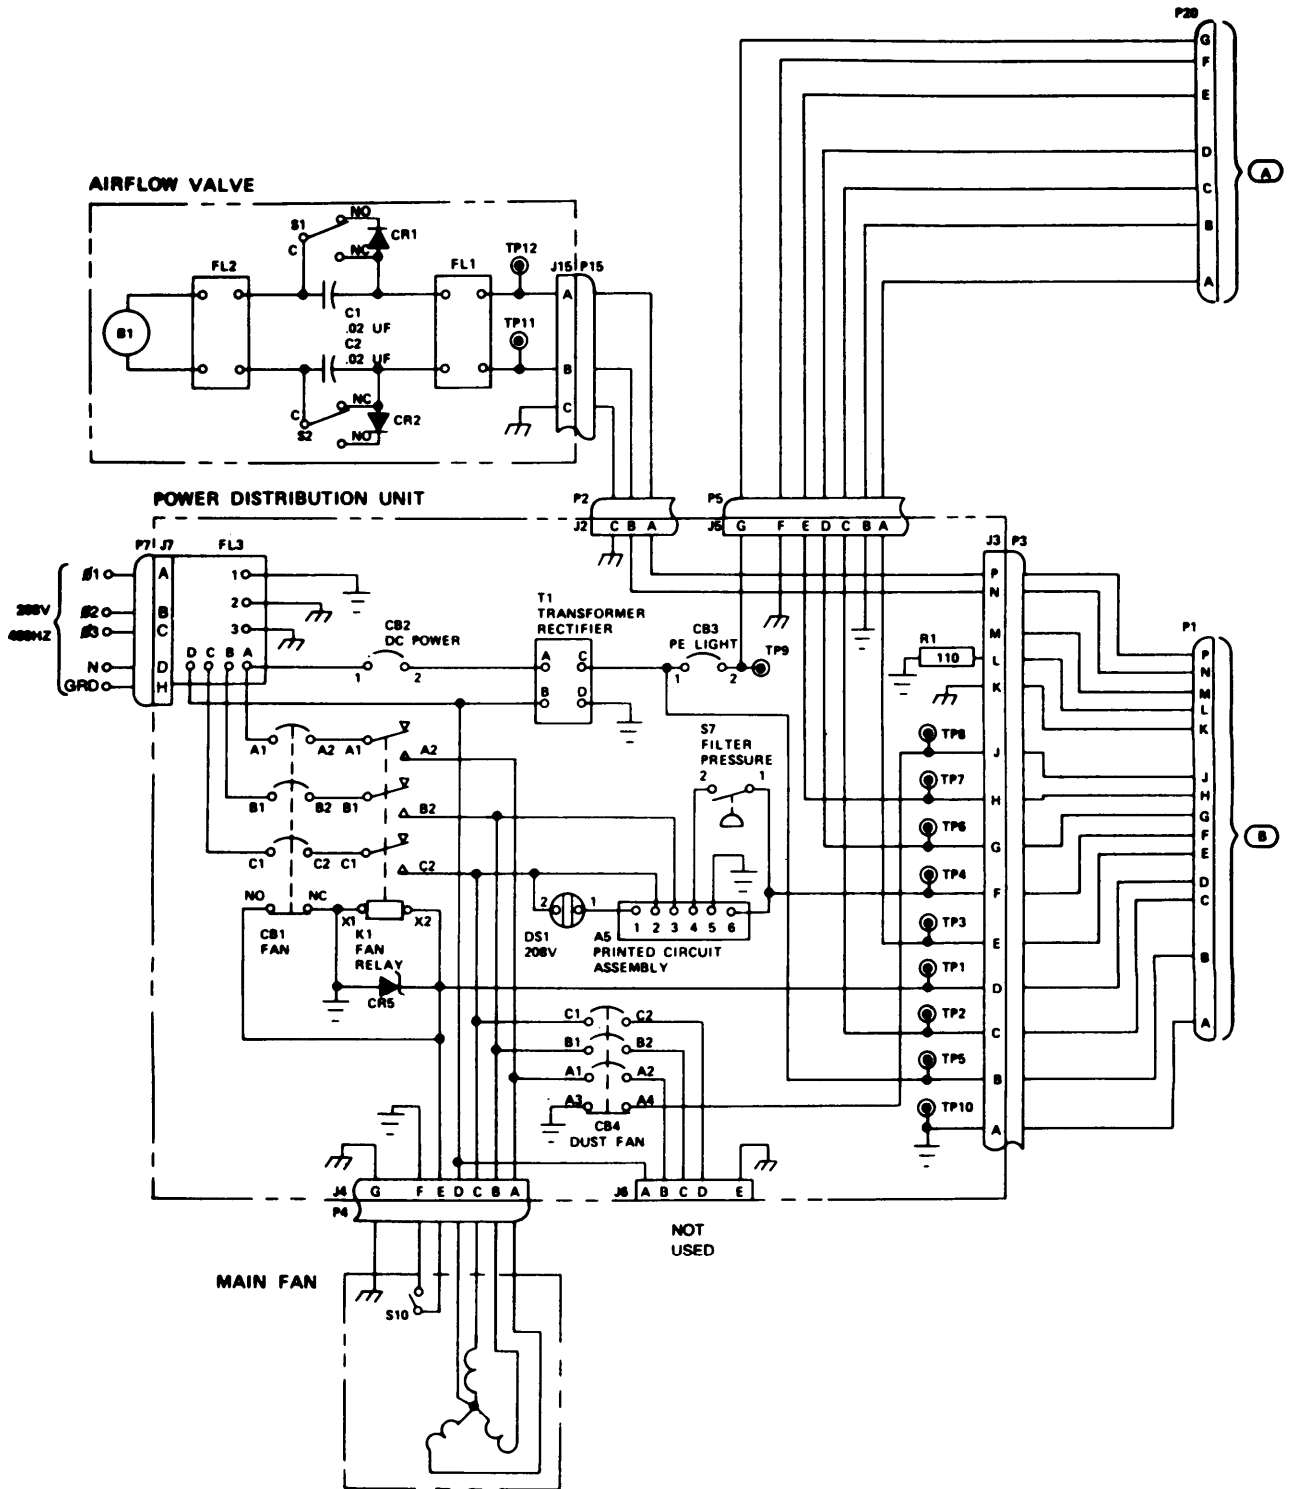

Collective Protection System Schematic Diagram (Sheet 1 of 2)

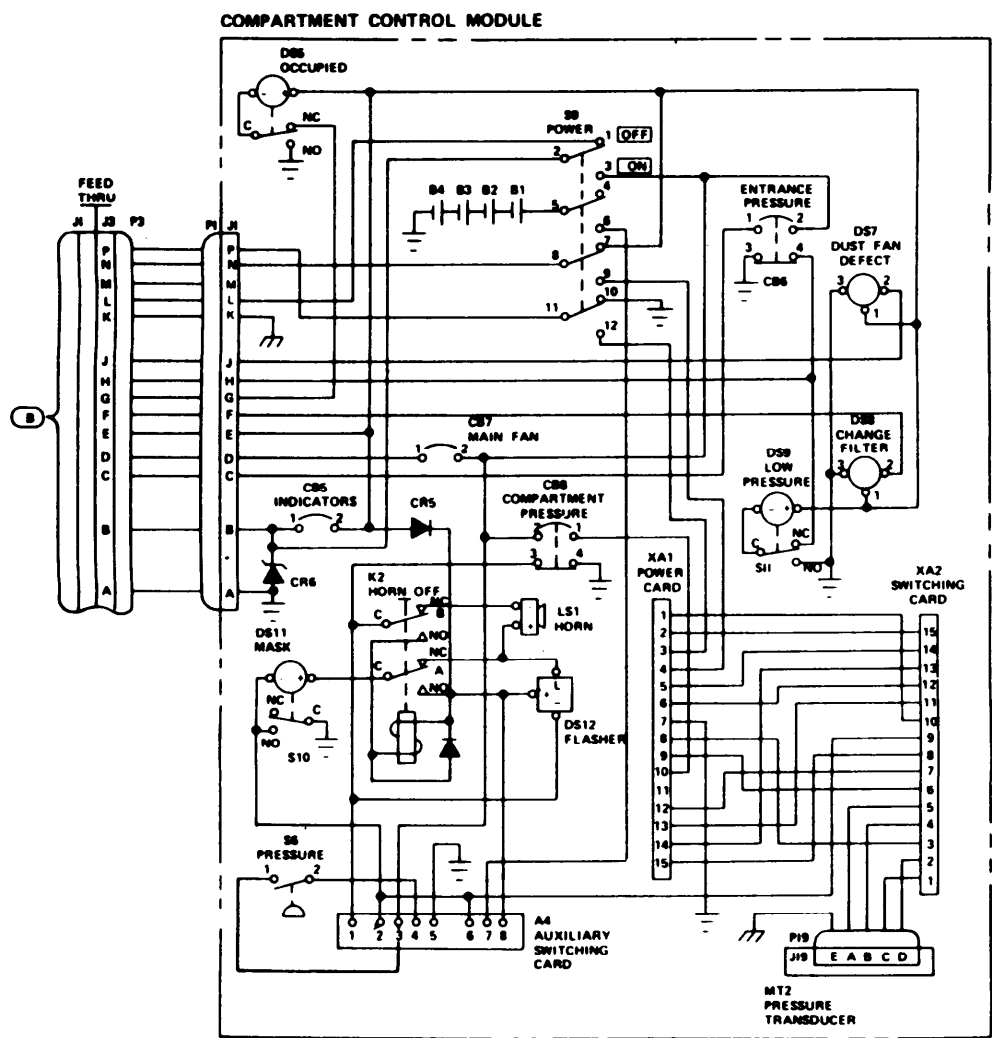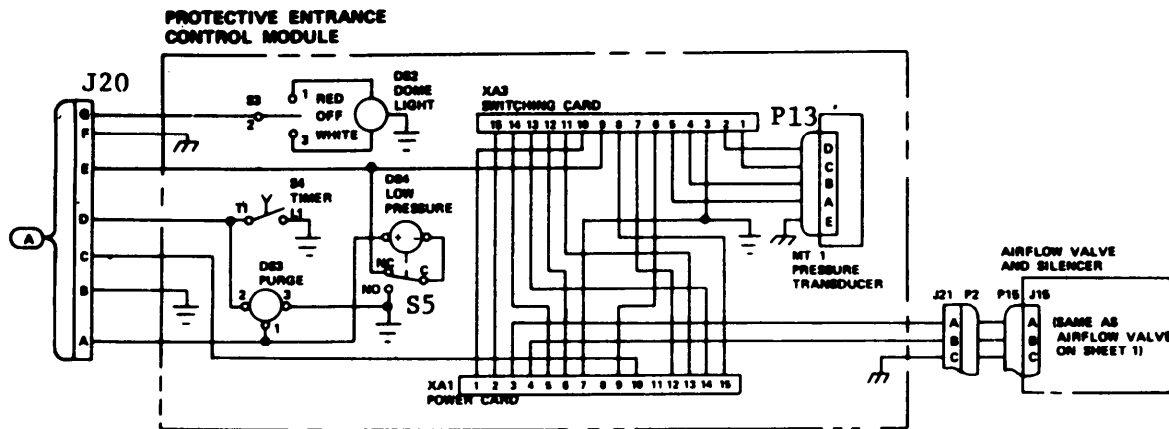

Collective Protection System Schematic Diagram (Sheet 2 of 2)




## CHAPTER 2 MAINTENANCE INSTRUCTIONS

### Section I. TROUBLESHOOTING

**2-1. SCOPE.** This section provides information for locating and correcting malfunctions in the modular collective protection equipment. Flow charts are used to

isolate malfunctions and prescribe the required corrective action.

**2-2. FLOW CHART PROCEDURES.** The following describes the use of the troubleshooting charts:

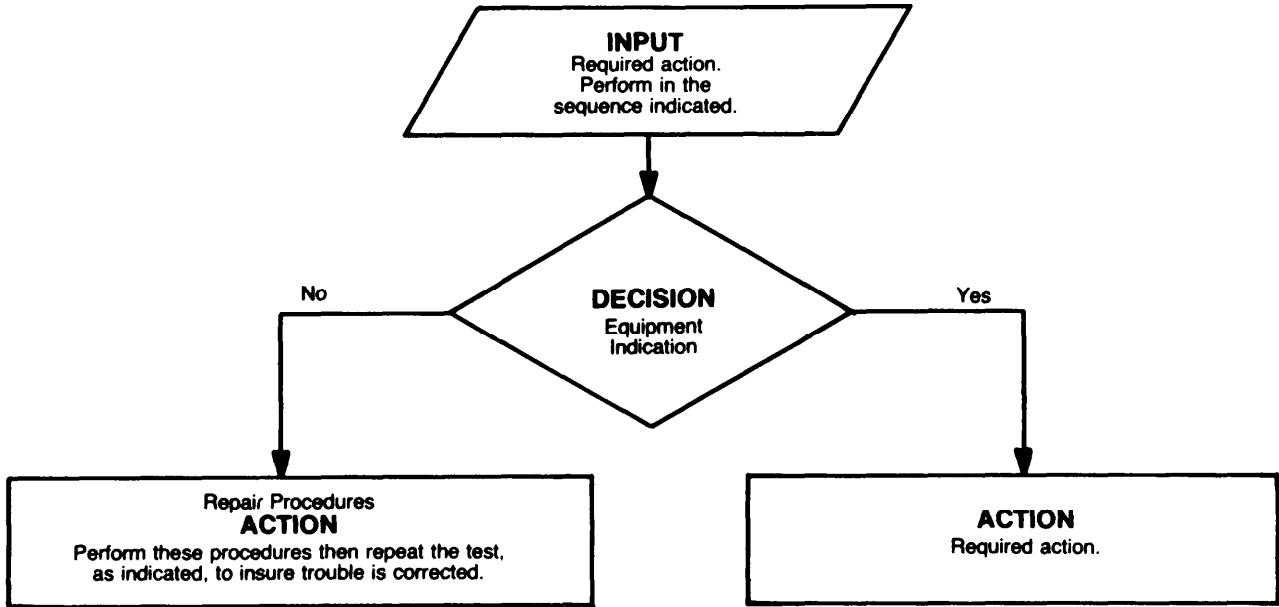

#### INDEX

**TROUBLESHOOTING PROCEDURE**

	Page	
PECM .....		2-2
Main Fan .....		2-32
Airflow Valve .....		2-33
Power Distribution Panel .....		2-39
CCM .....	2-63	




**TEST EQUIPMENT**

Multimeter .....	●	●	●	●	●
Power Supply 6130-00-408-4962 (or equiv) .....	●	●	●	●	●
Differential Pressure Gage 6685-00-087-6331 .....	●	●	●	●	●
Hypodermic Syringe 6515-00-754-0412 .....	●	●	●	●	●
Hose Tee 4730-00-082-5402 .....	●	●	●	●	●
Tubing 4720-00-059-5819 .....	●	●	●	●	●
Resistor (680 OHM, 2W) 5905-00-258-0390 .....	●	●	●	●	●
Resistor (100 OHM, 10W) 5905-00-752-6460 .....	●	●	●	●	●


2-3. PECM TROUBLESHOOTING PROCEDURES.

**NOTE**


All voltages are dc and are measured with respect to dc return (TB1-1) unless otherwise specified.

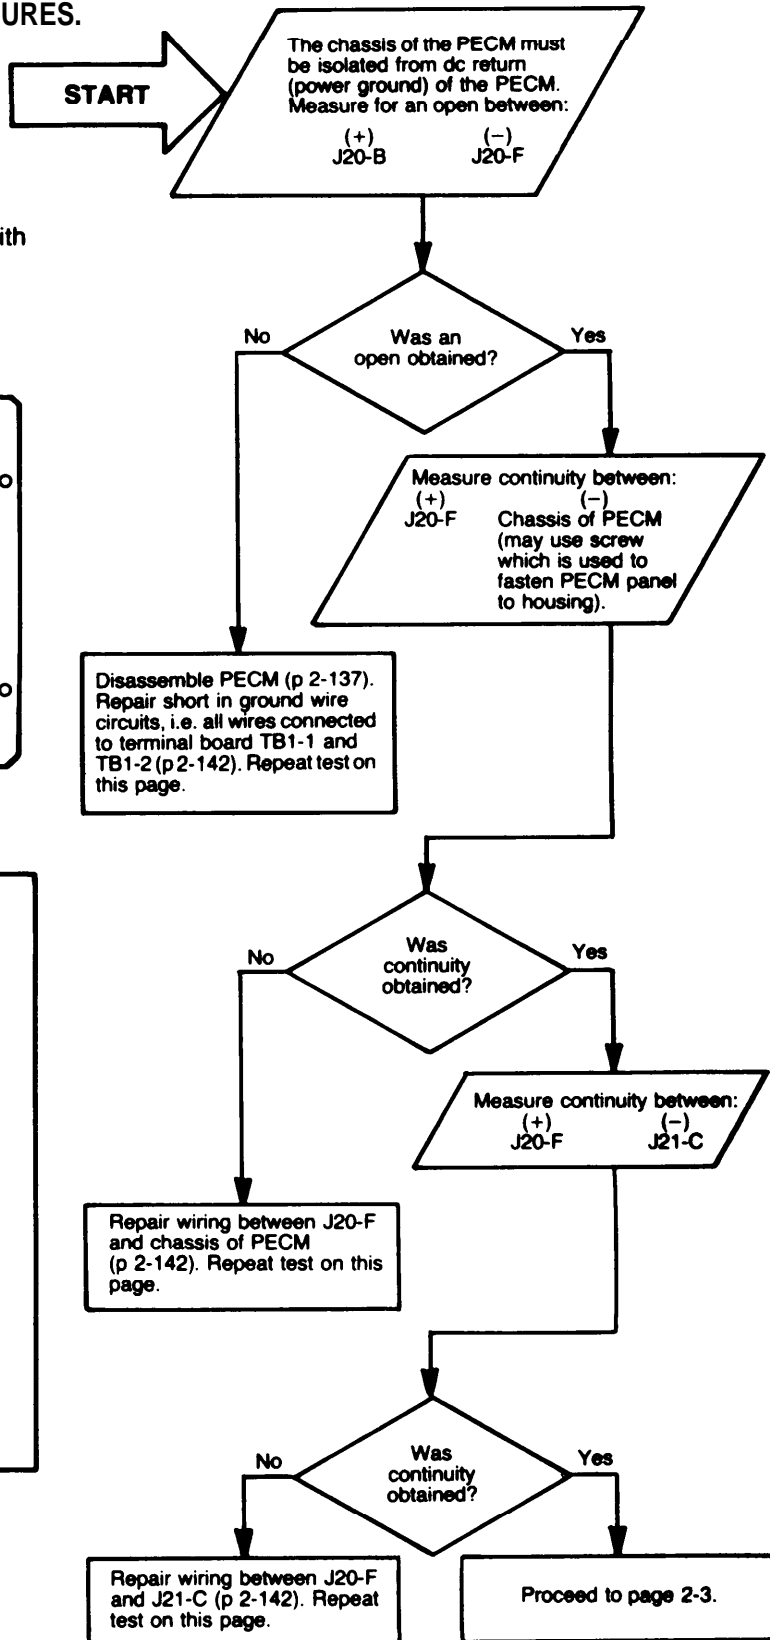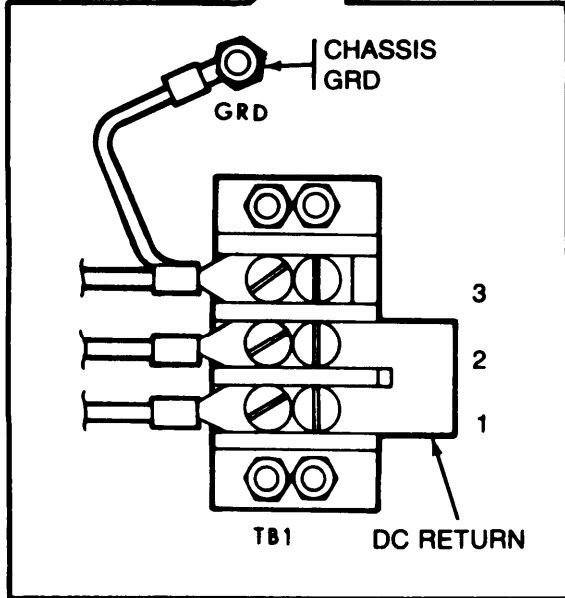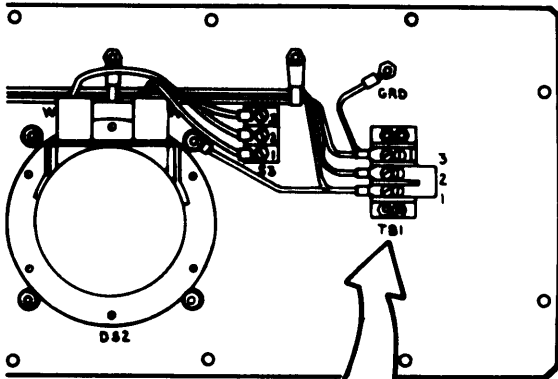


2-3. PECM TROUBLESHOOTING PROCEDURES (cont).

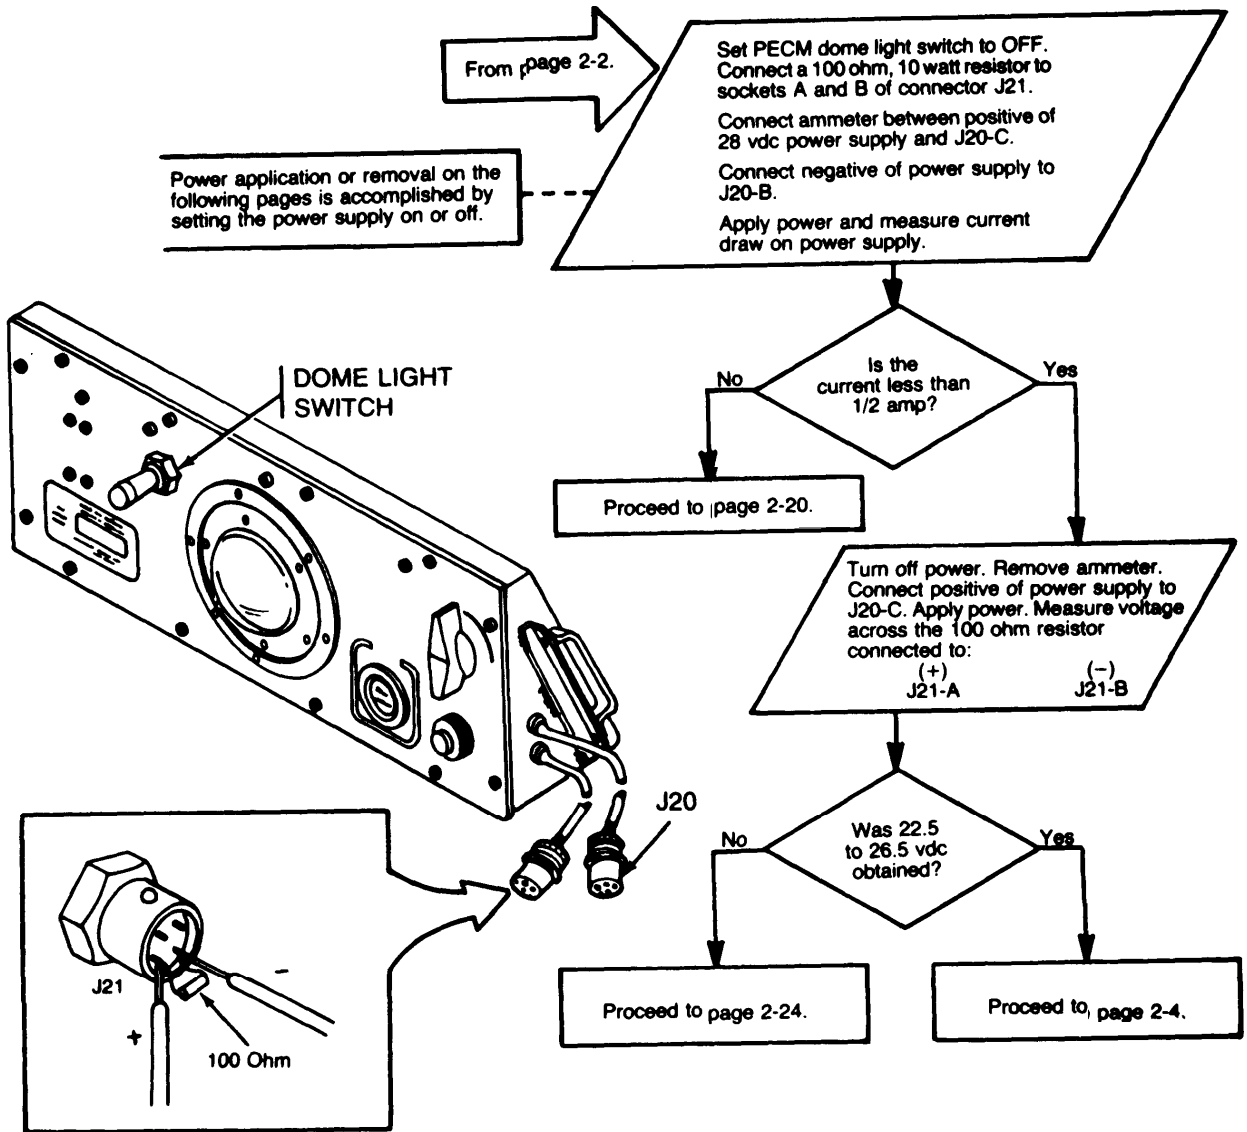


2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

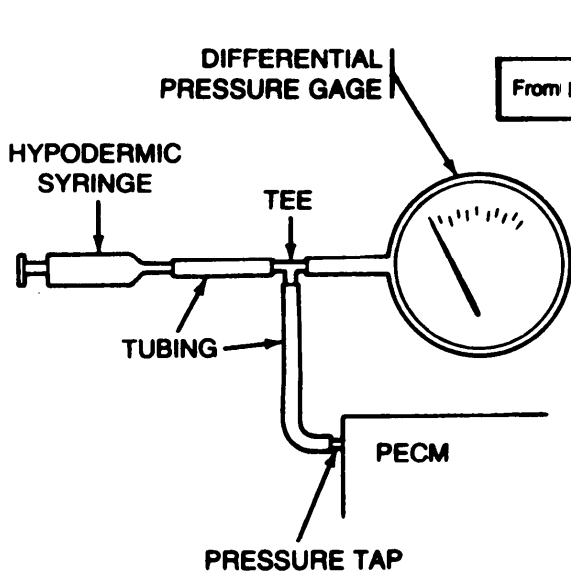



From page 2-3.

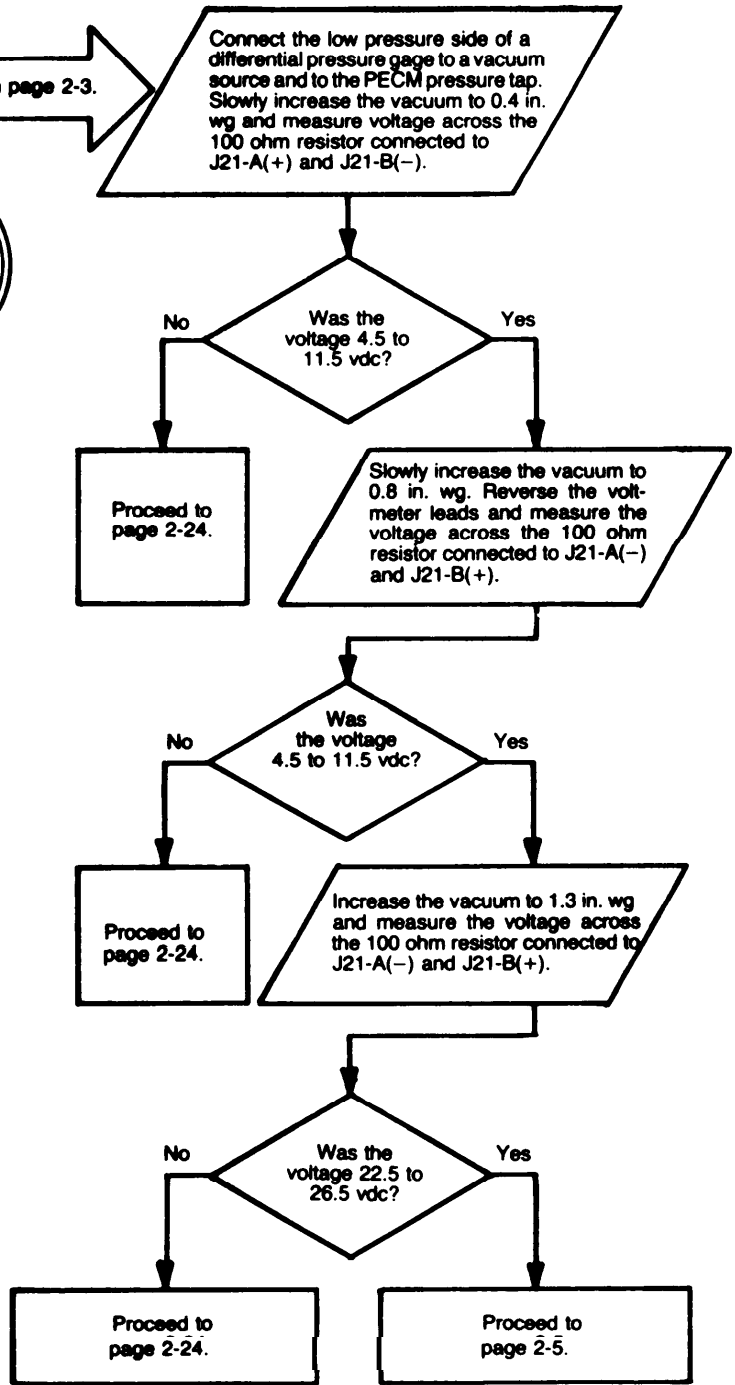



2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

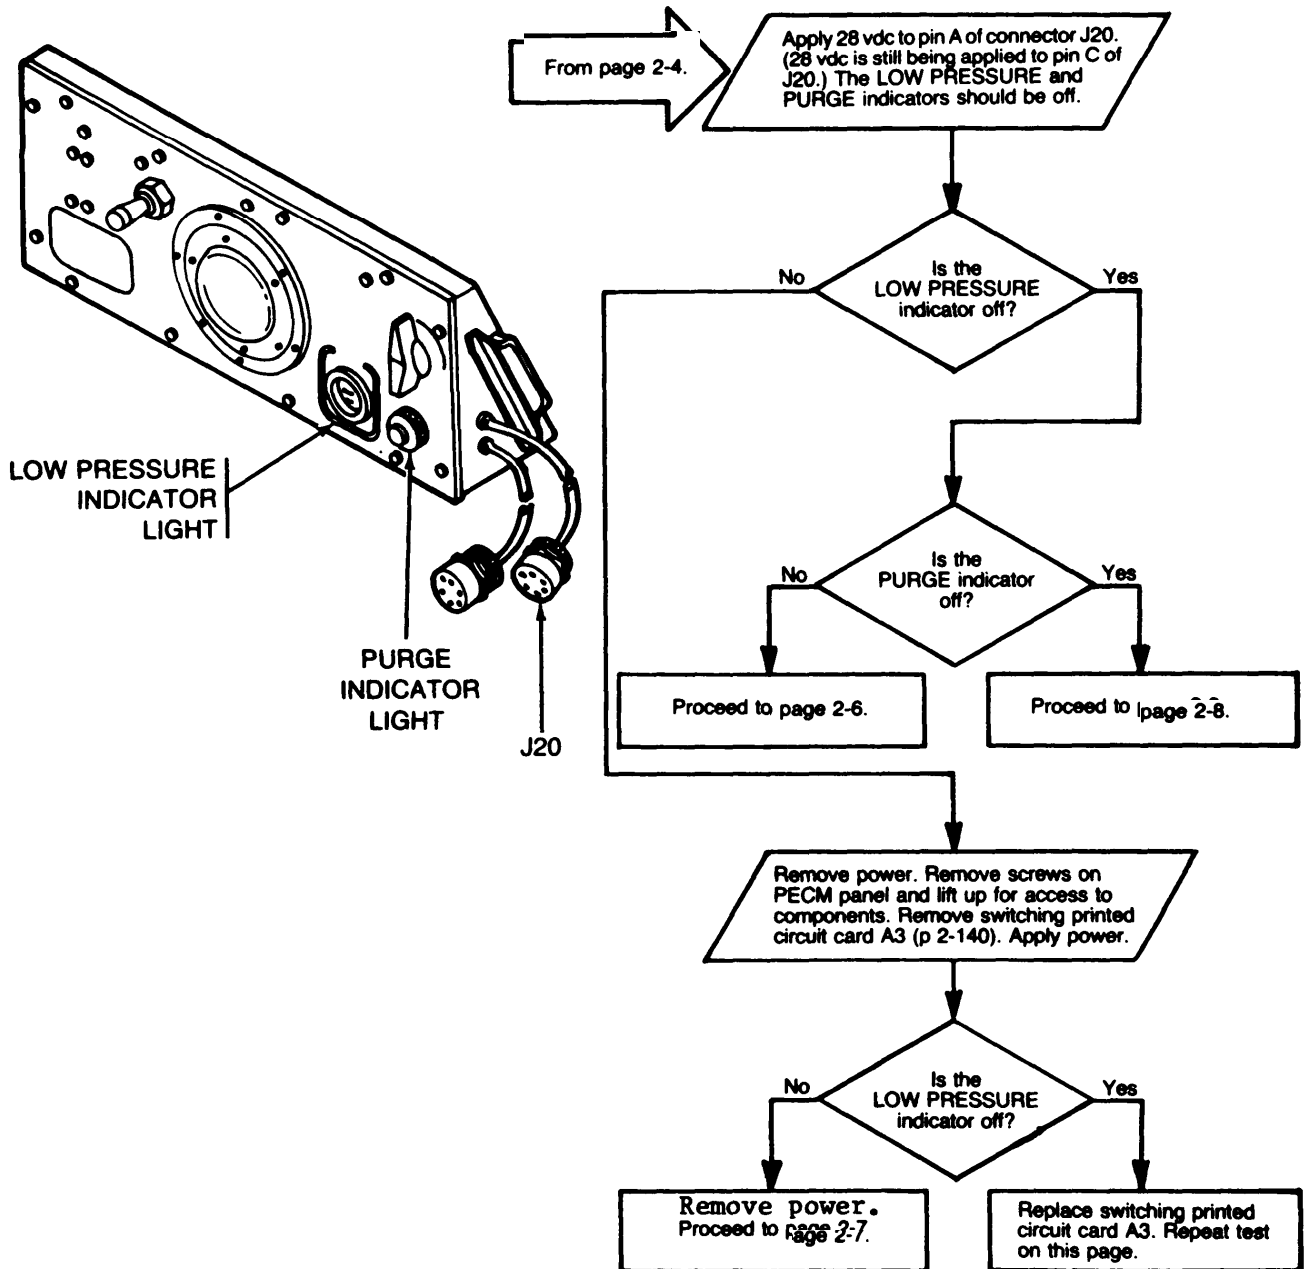



2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

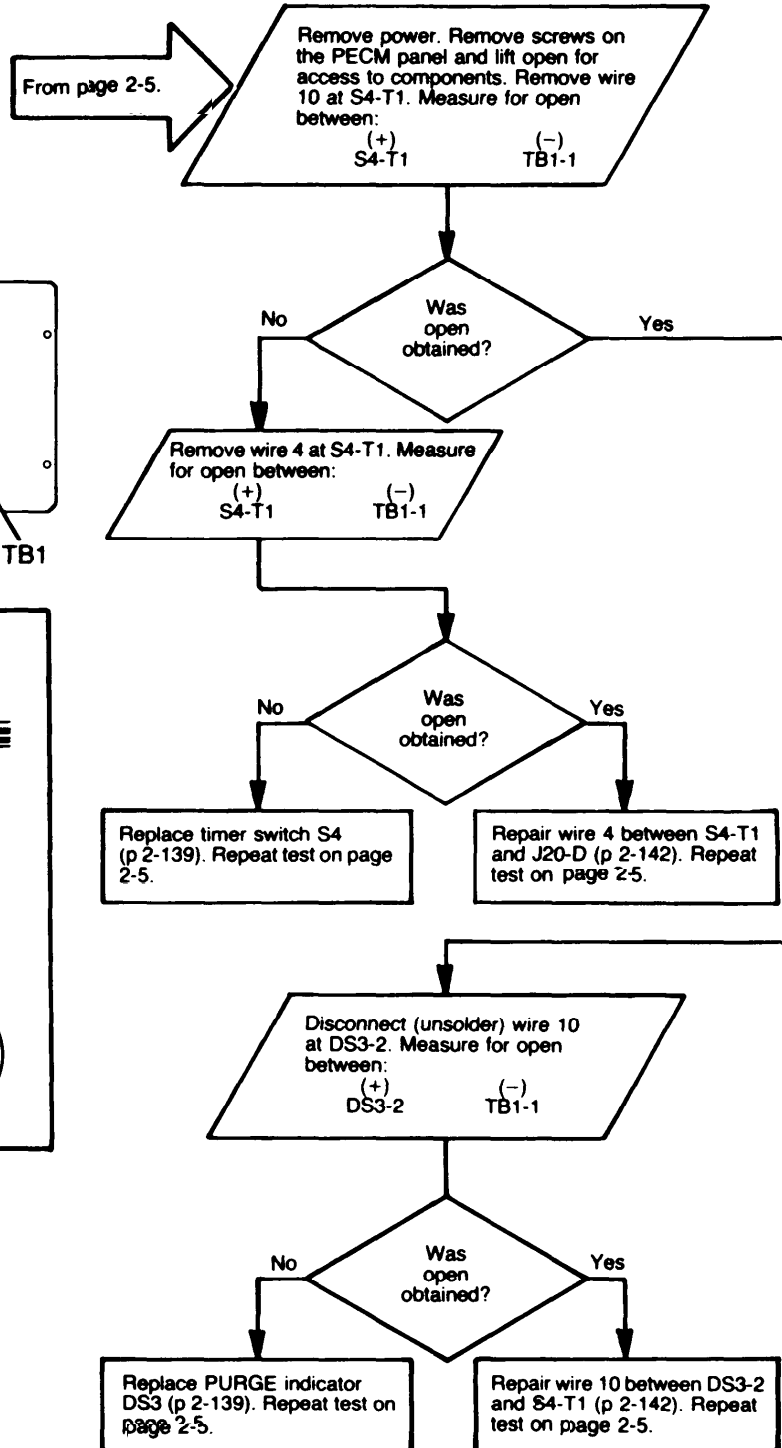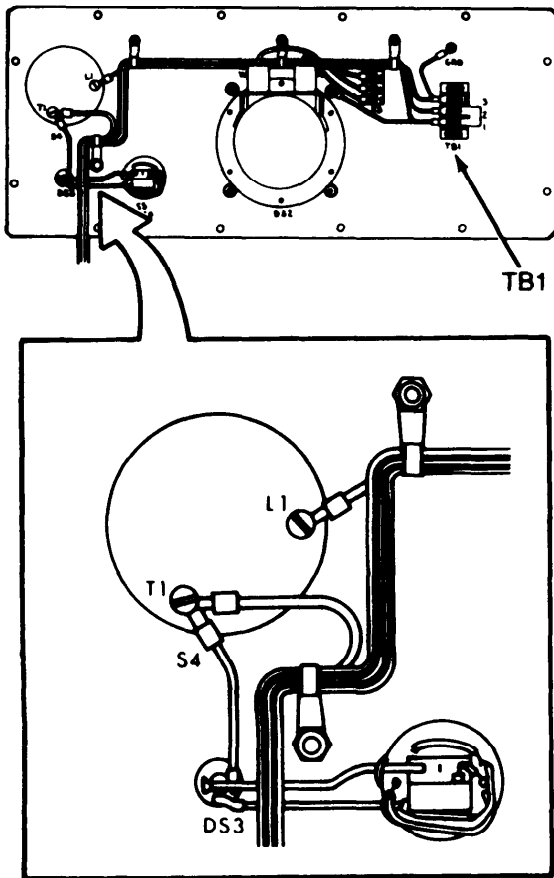

2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

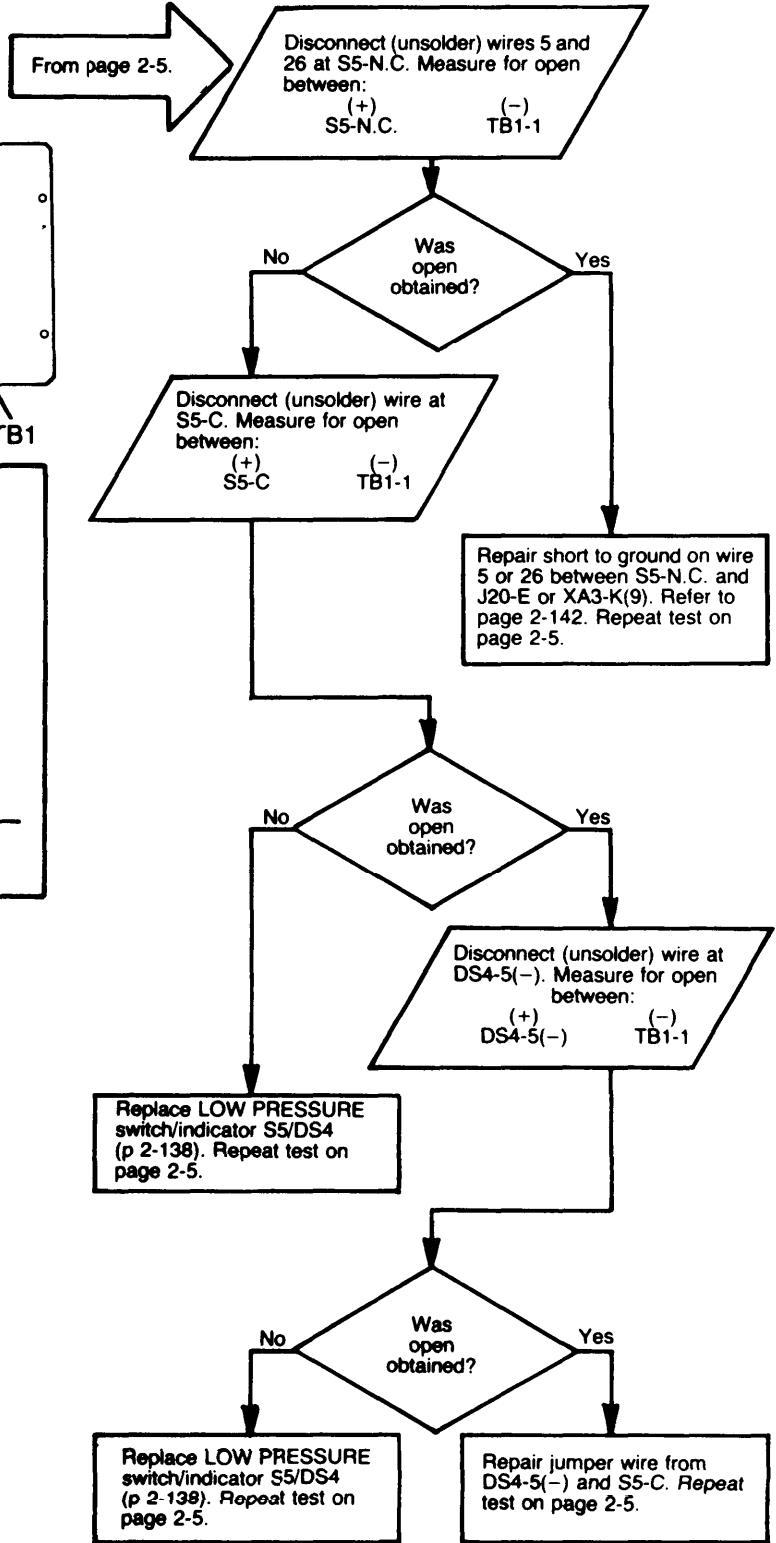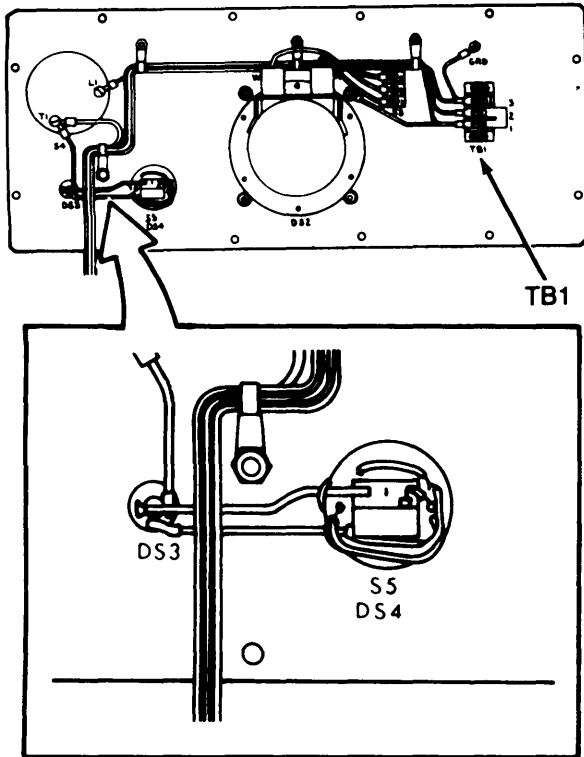


2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

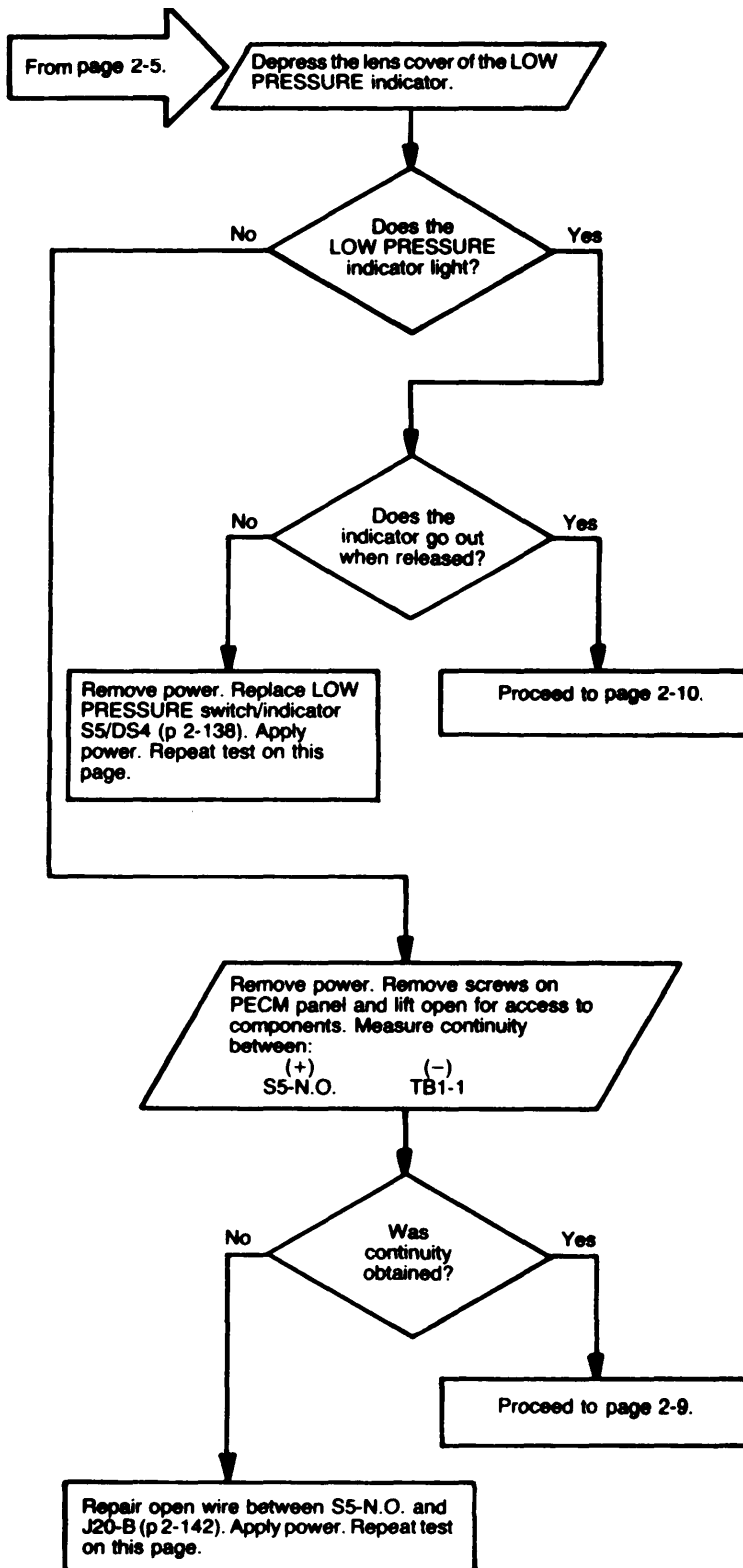
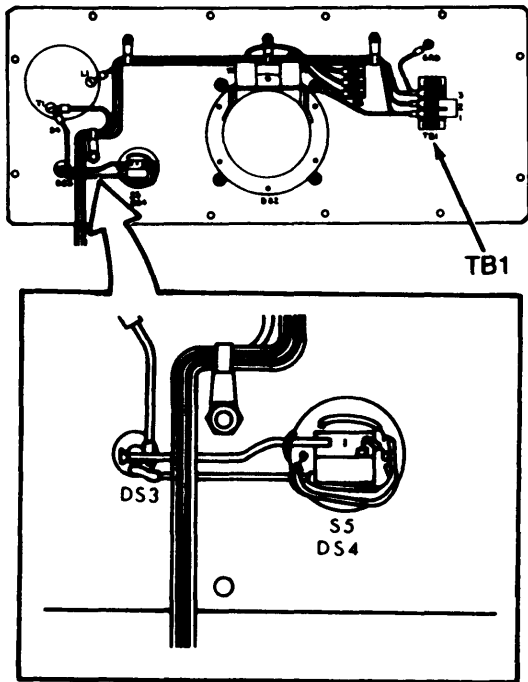





2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

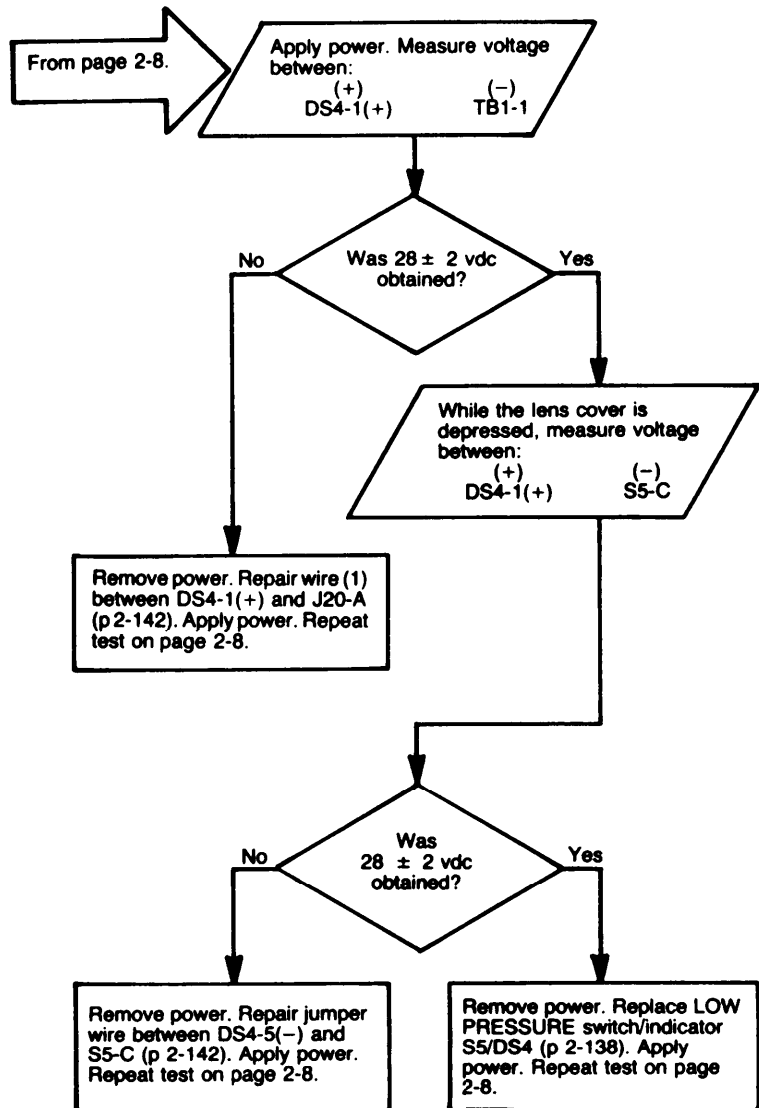

2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

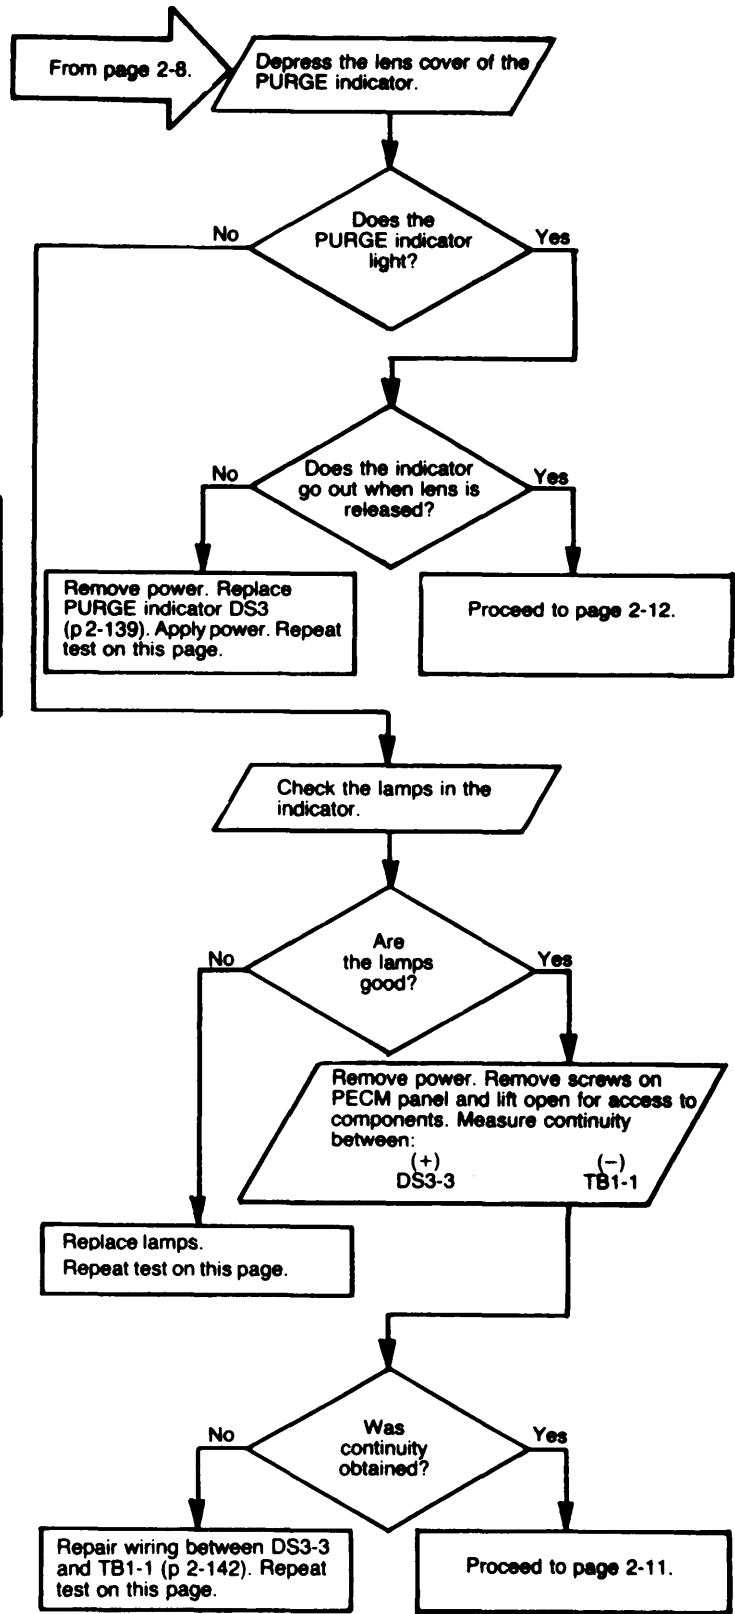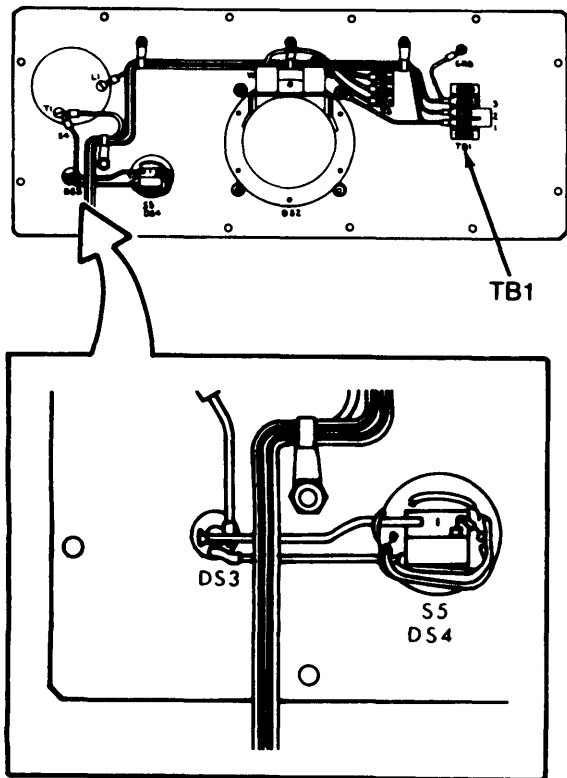



2-3 PECM TROUBLESHOOTING PROCEDURES (Cont).

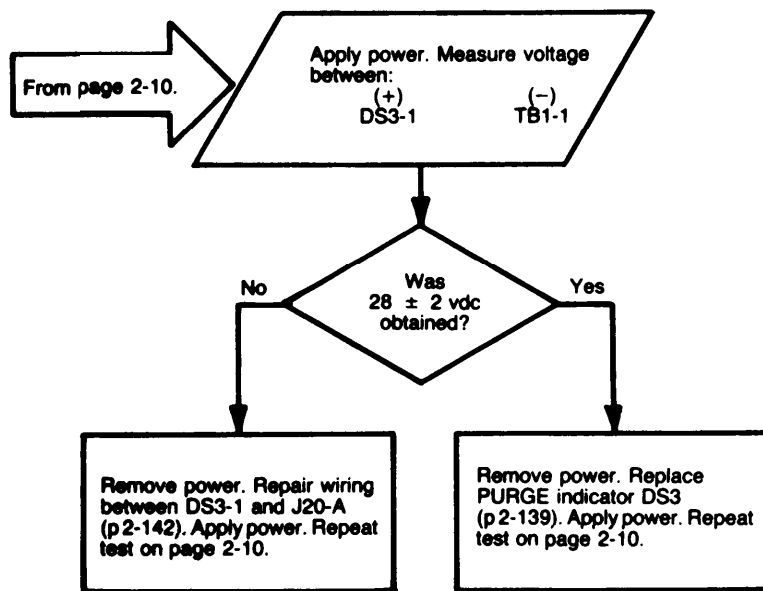


2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

**CAUTION**



Be careful not to touch other pins in J20 as it may short out components on XA3 switching card.

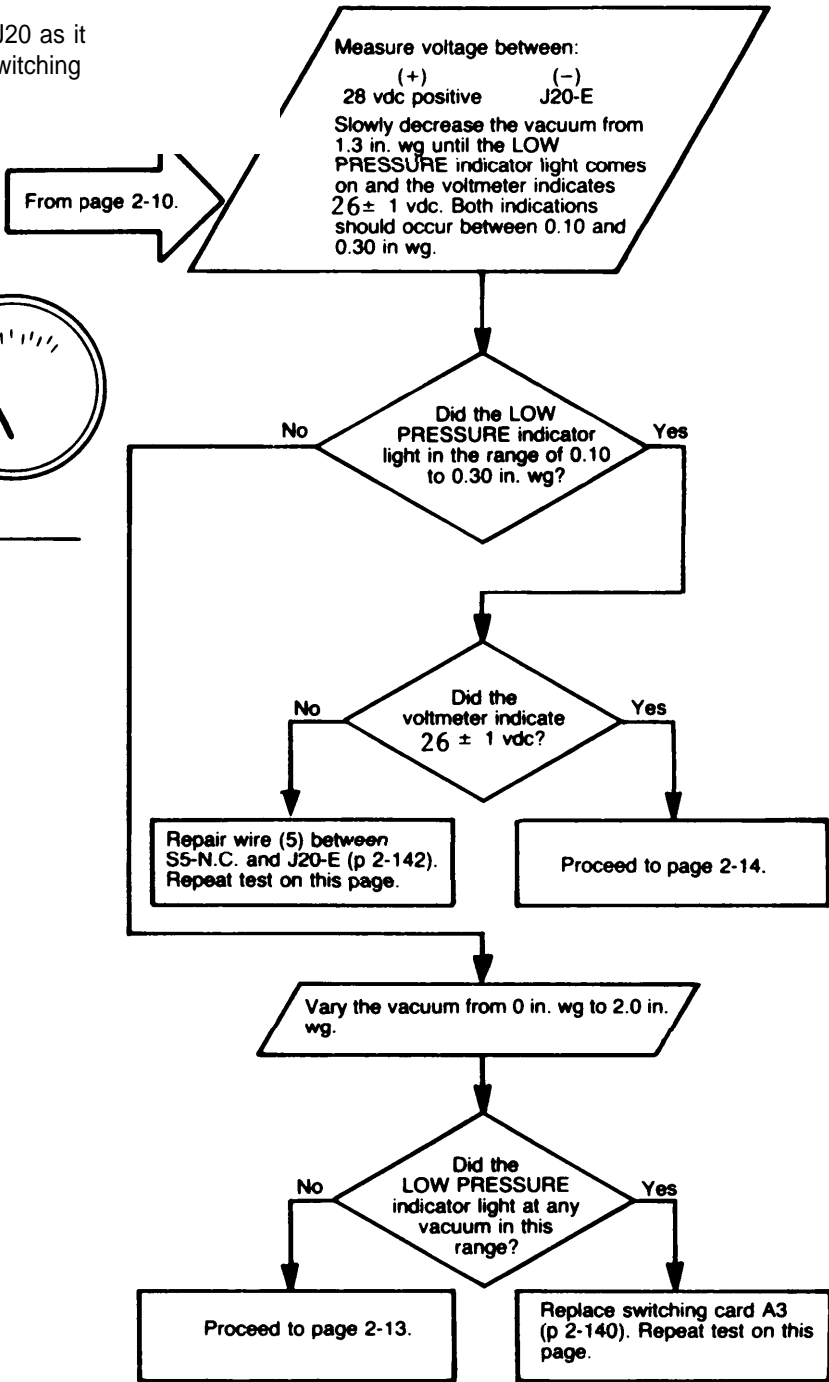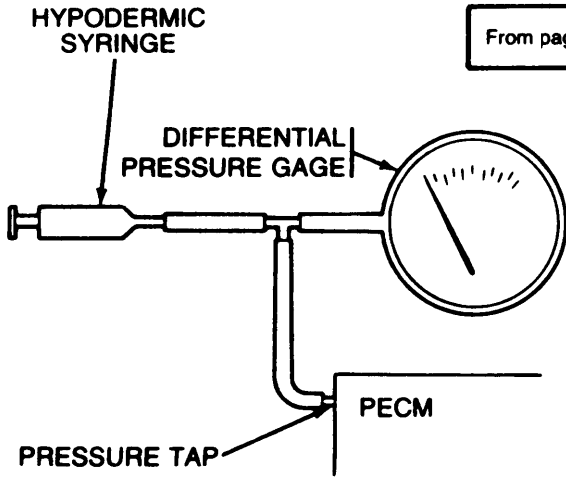


2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

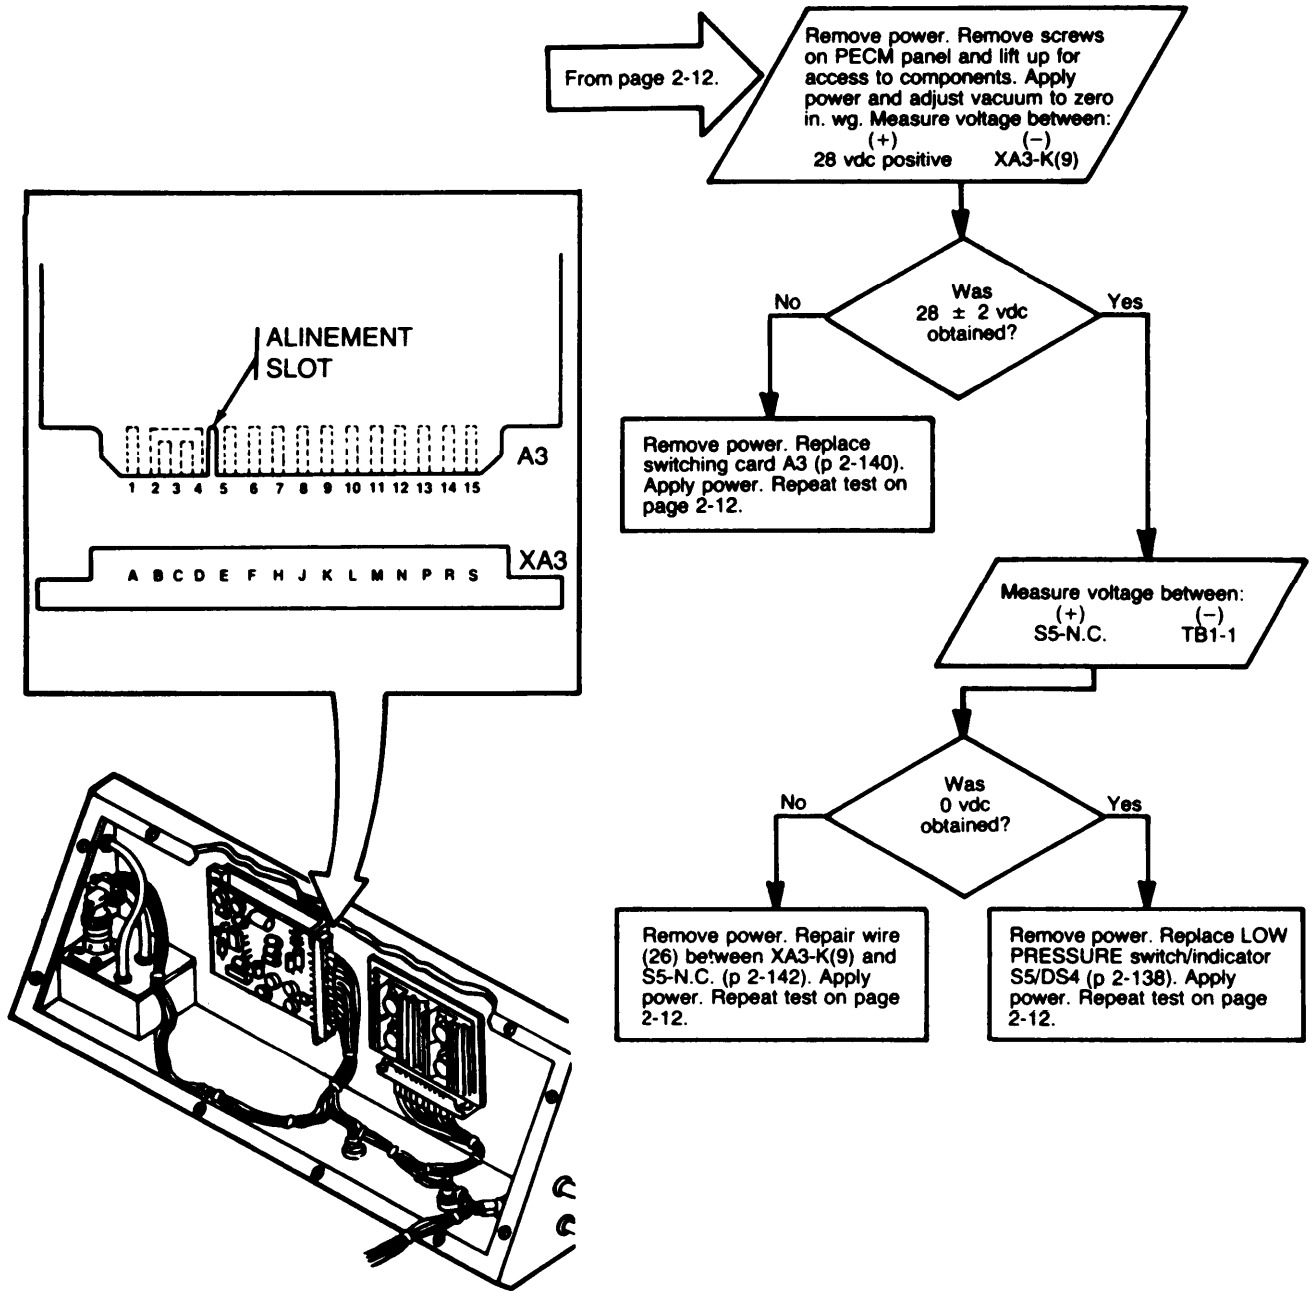


2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

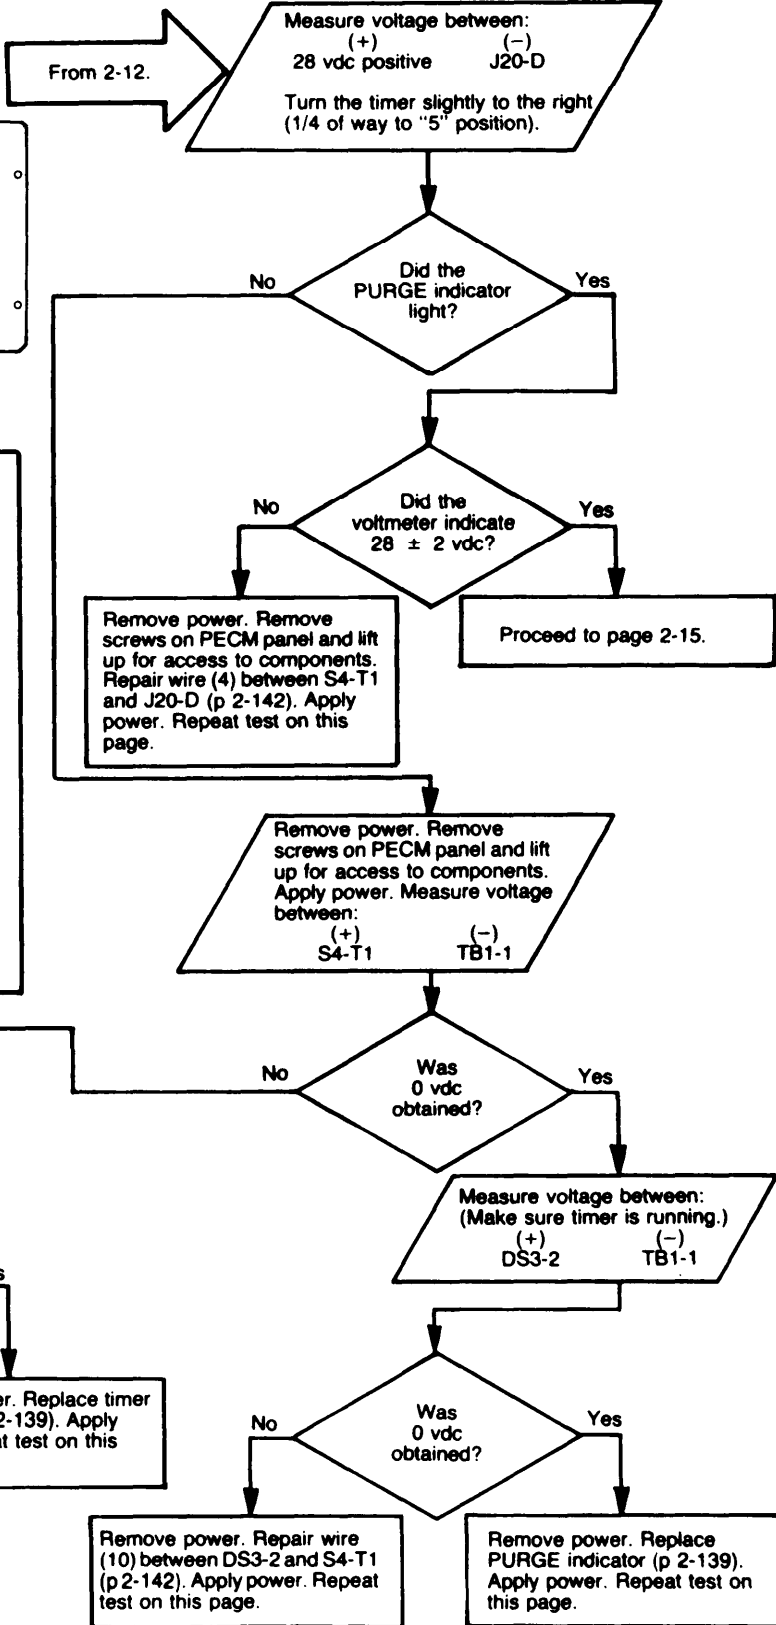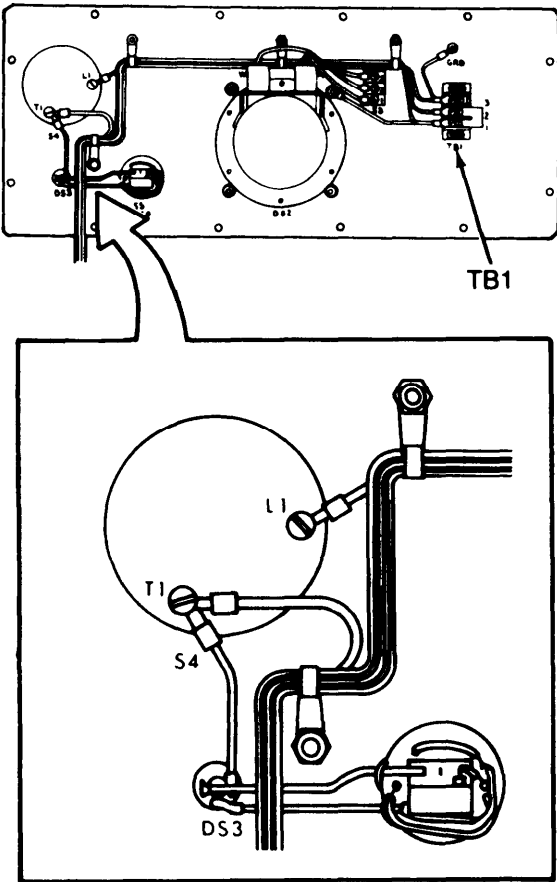

2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

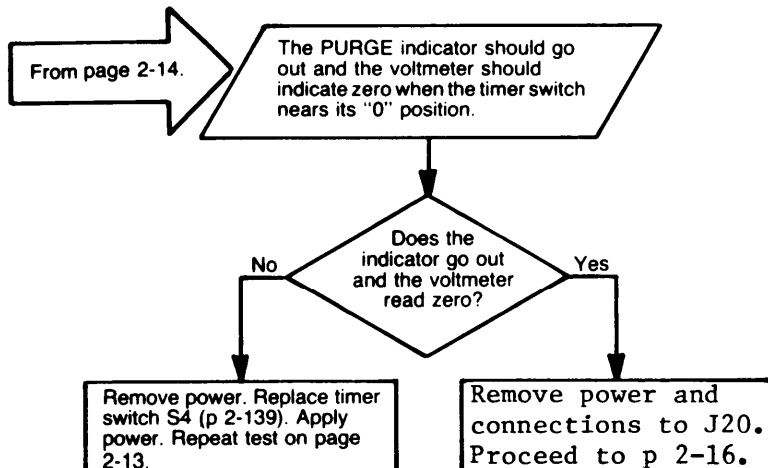


2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

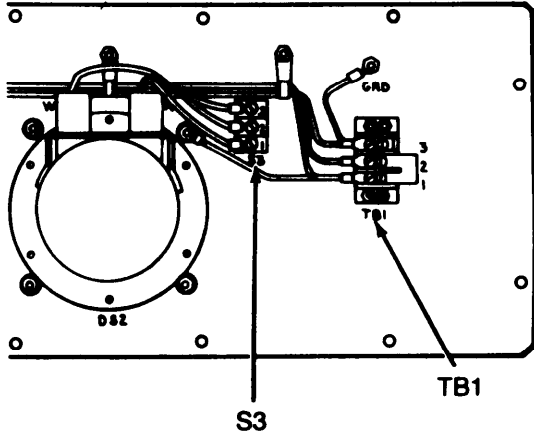



From page 2-15.

Apply 28 vdc to J20 as follows:  
 J20-G - Positive  
 J20-B - Negative  
 The dome light switch should be in the OFF position.

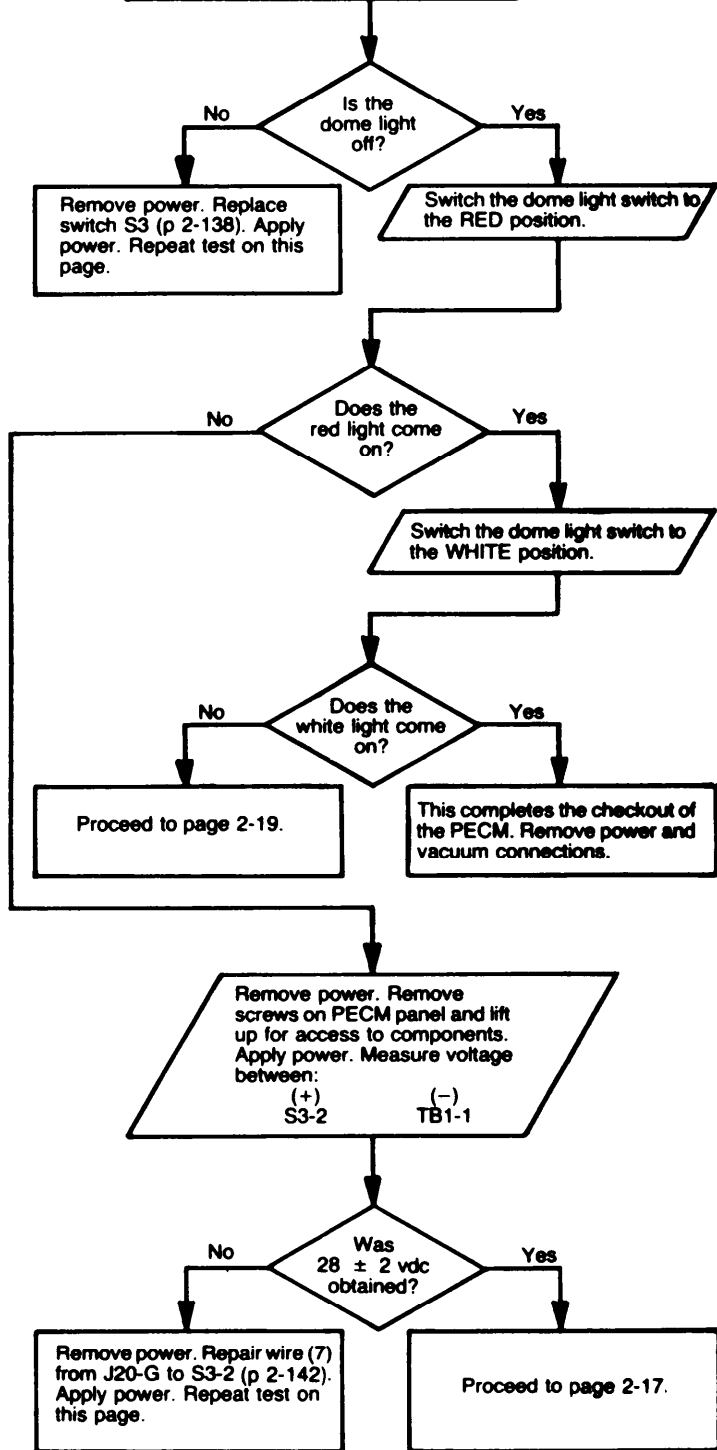






2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

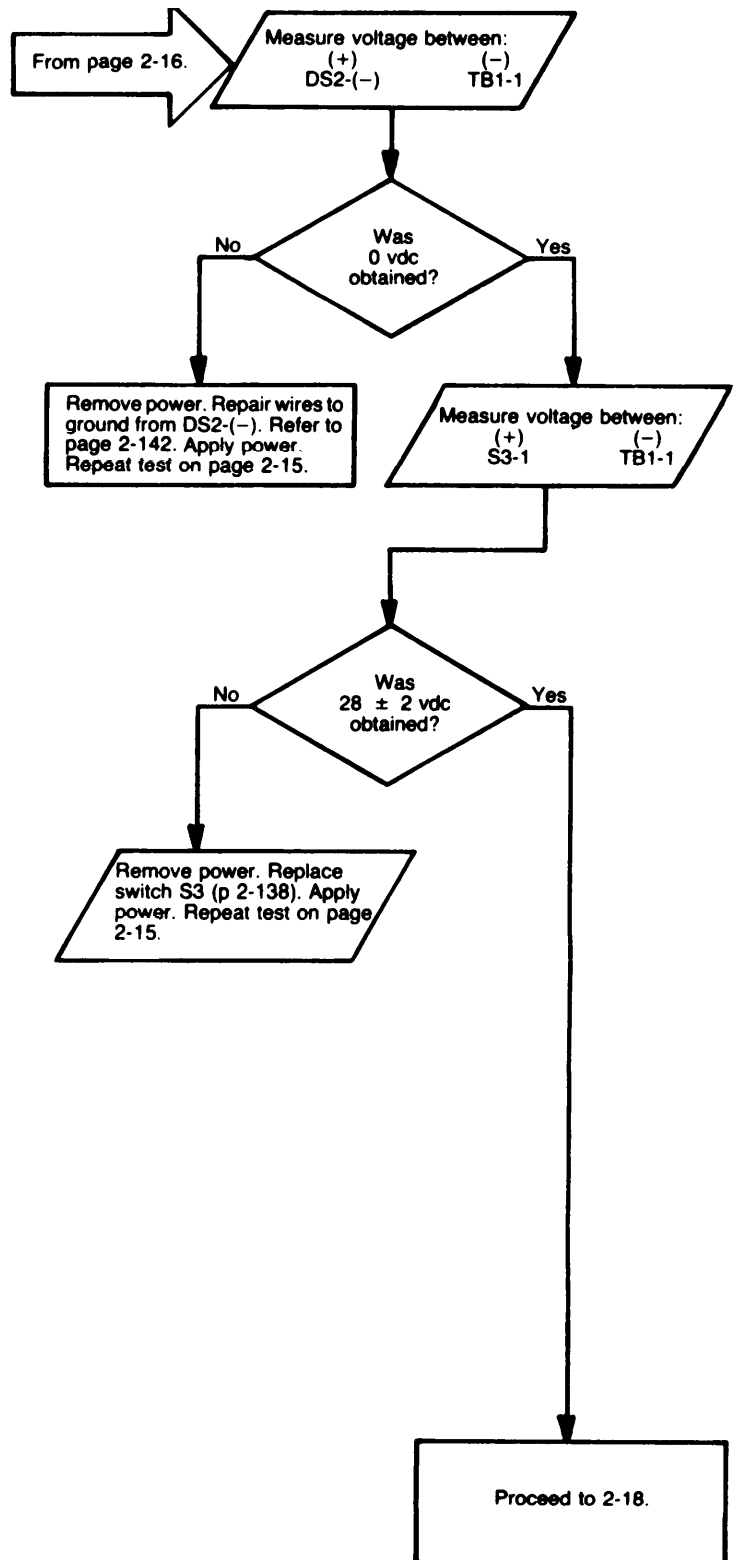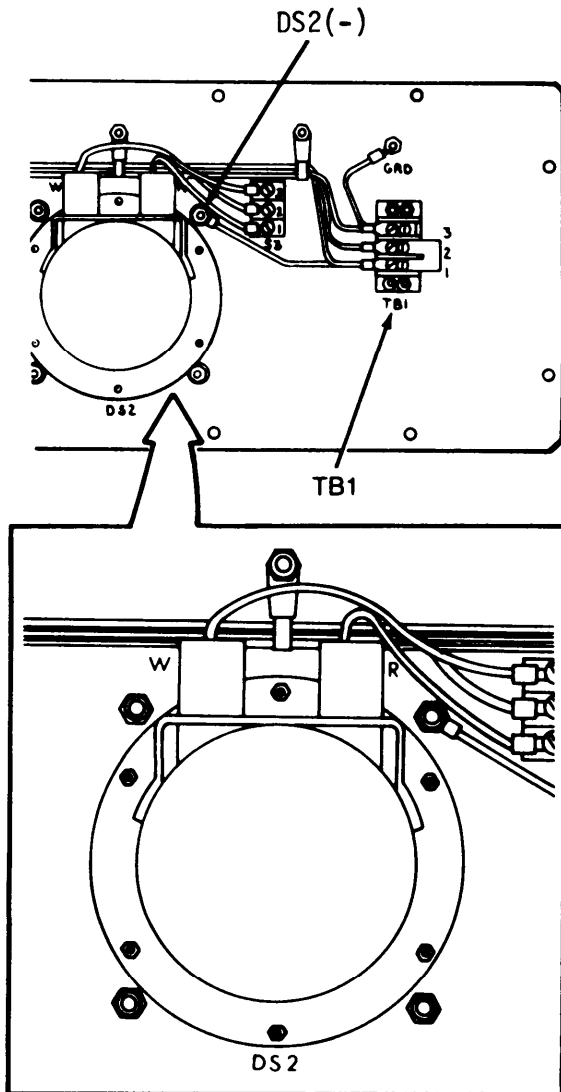


### 2-3. PECM TROUBLESHOOTING PROCEDURES

From page 2-17.



Remove power. Remove lens on dome light DS2. Check the red and white lamps. The lamps may be tested by directly applying 28 vdc.

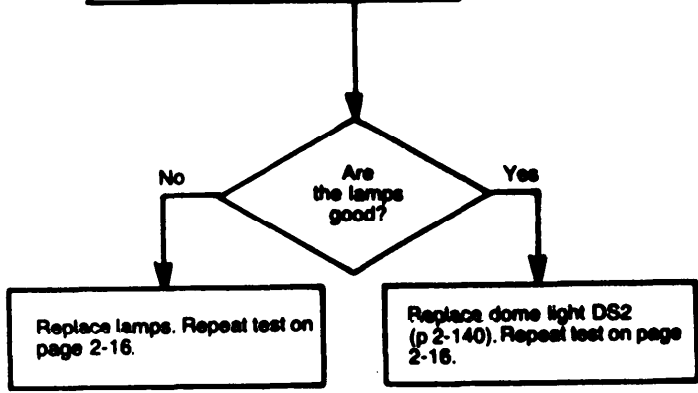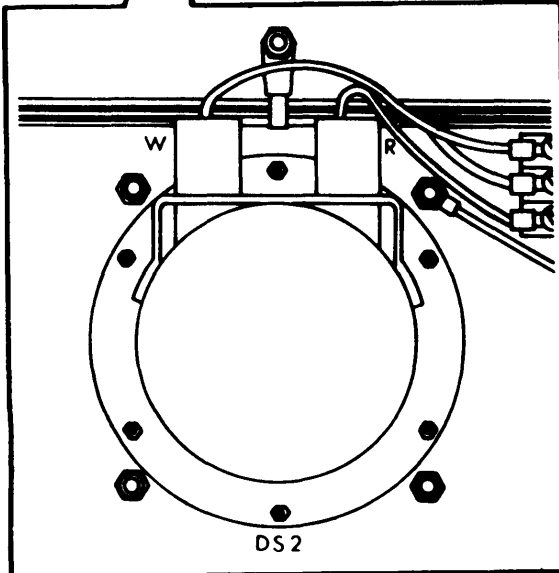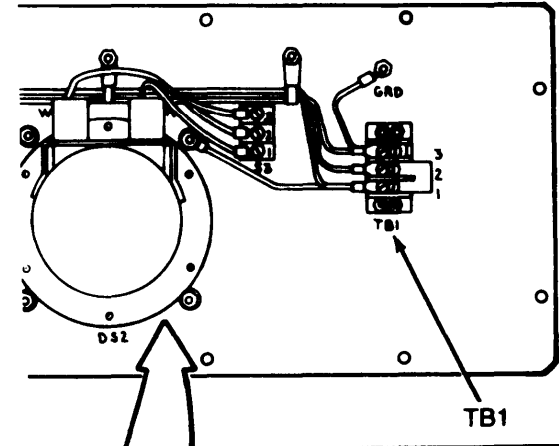


2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

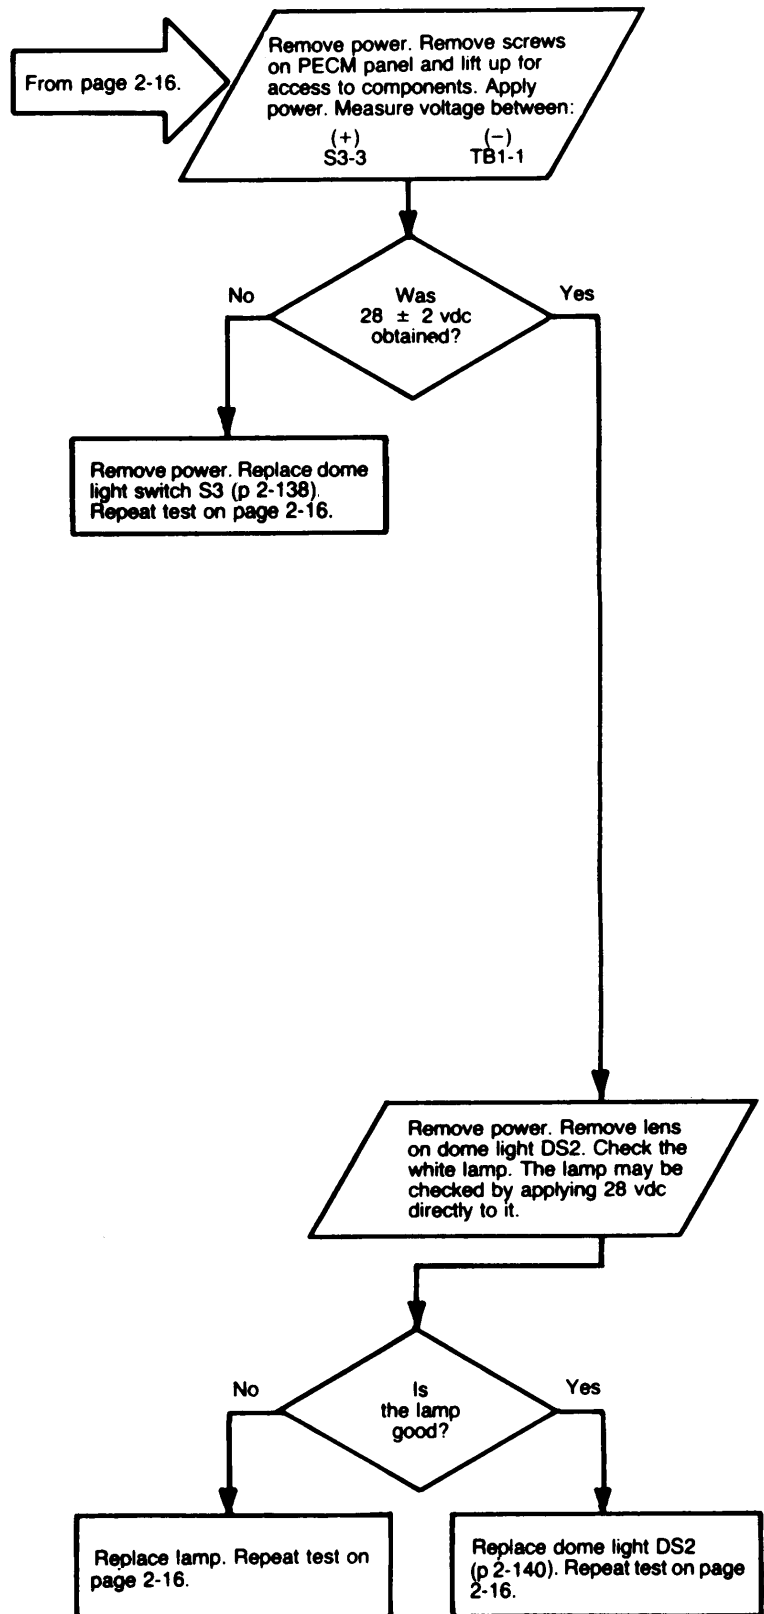

2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

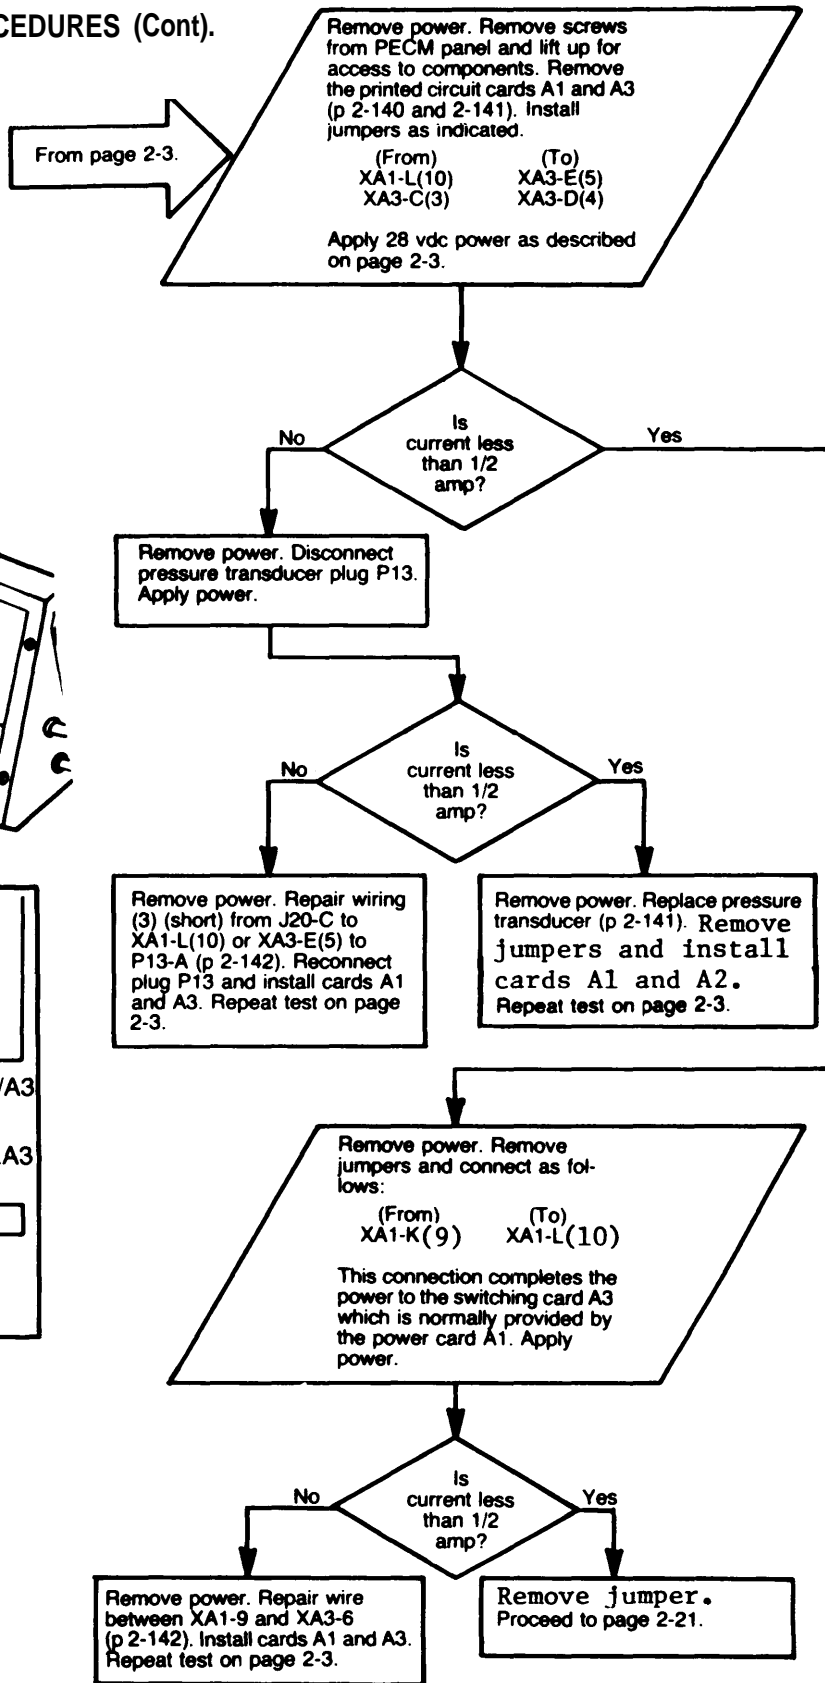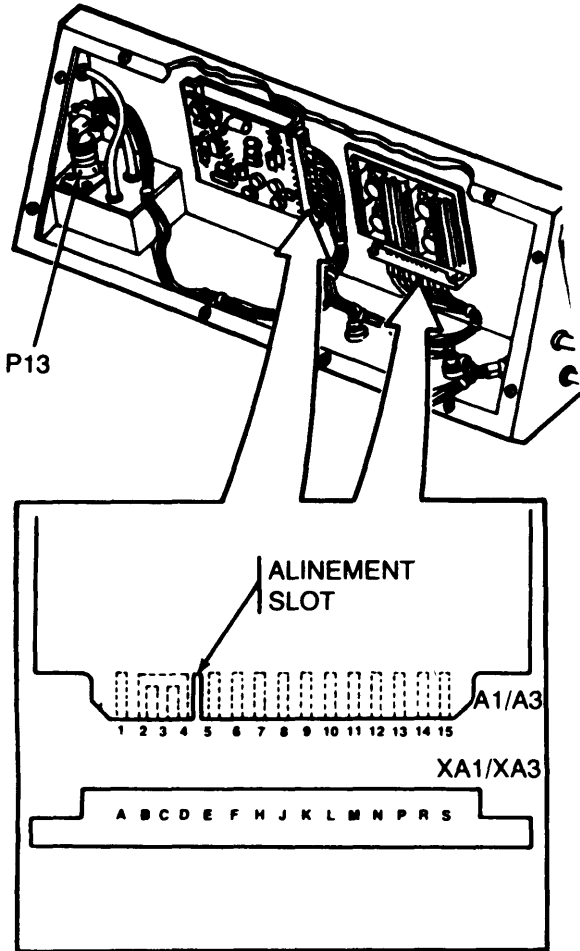




2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

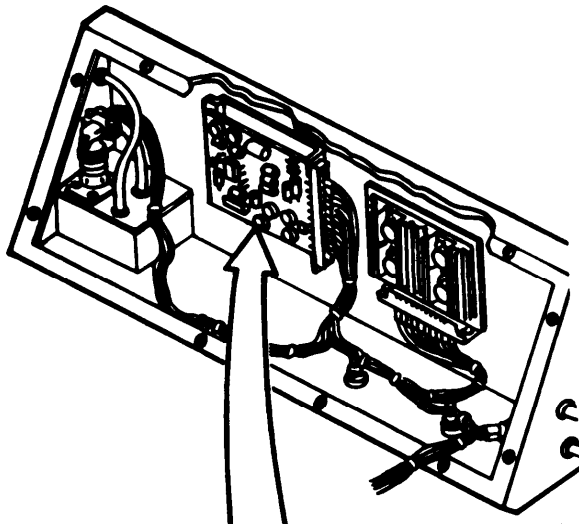





From page 2-20.

Remove power. Measure diodes on switching card A3 to verify that they are not shorted. Measure resistance between:


Diode	(+)	(-)
A3CR2	TP-J	TP-H
A3CR3	TP-J	A3-B(3)
A3CR4	TP-K	A3-B(3)
A3CR5	TP-K	TP-L

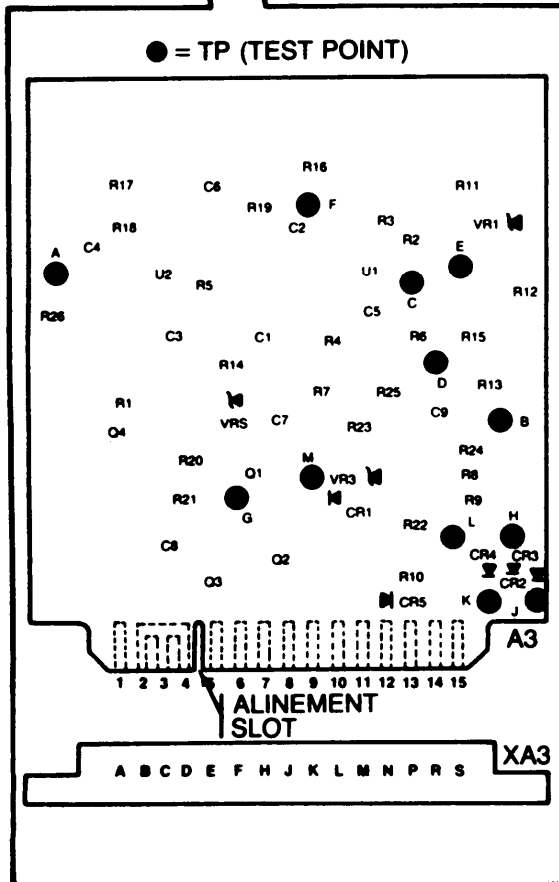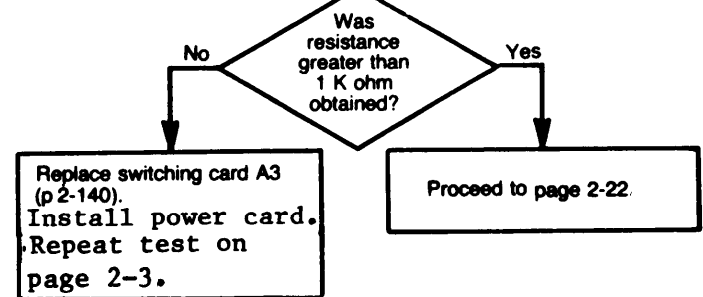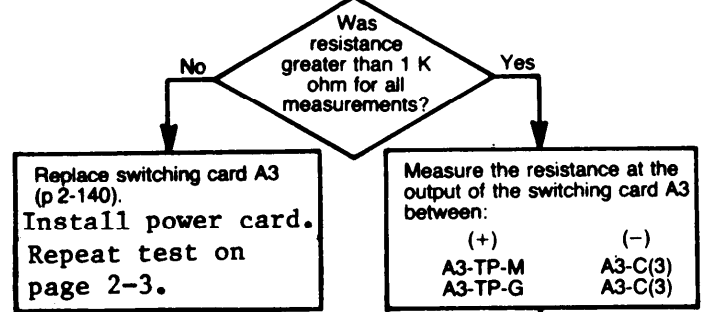

2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

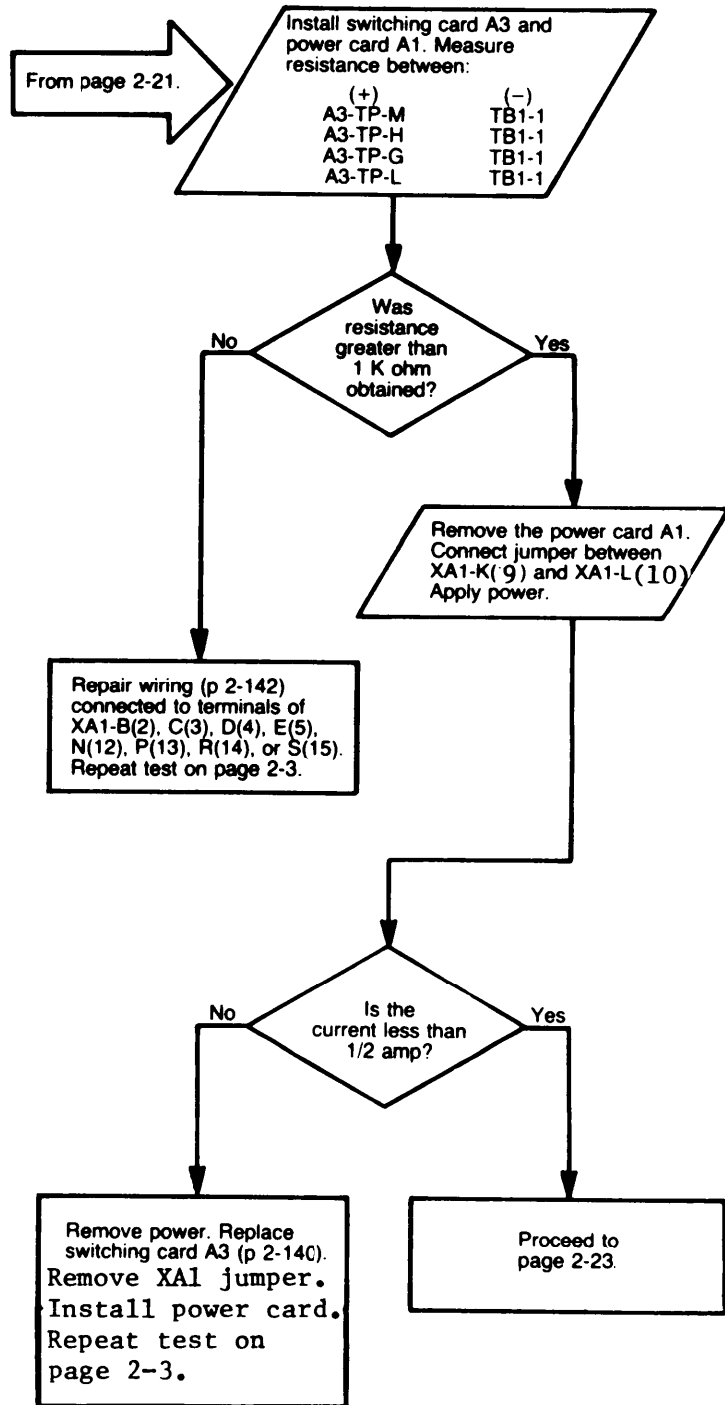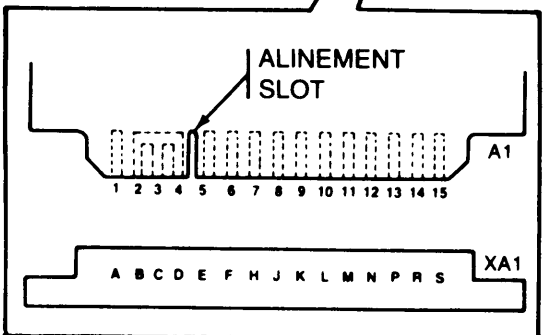
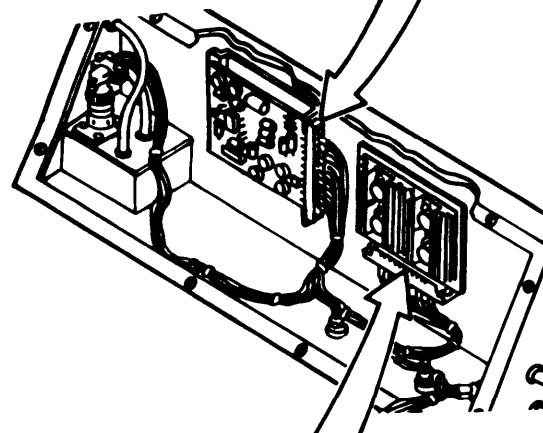
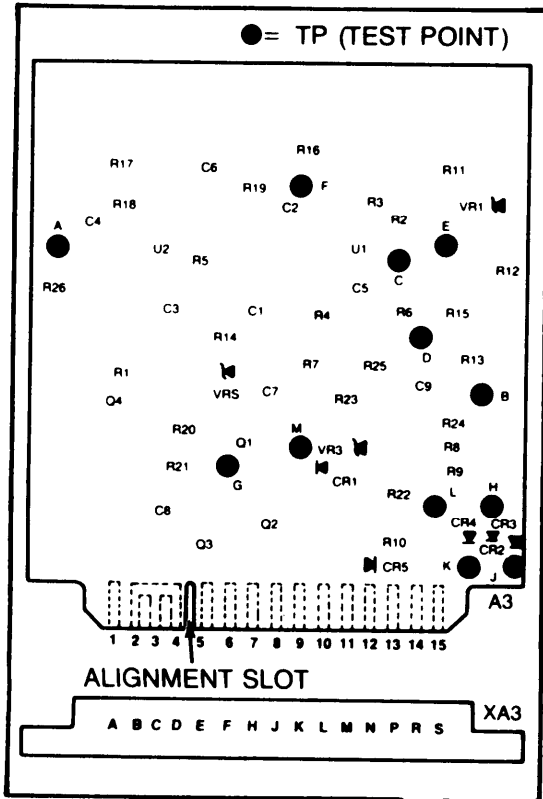


2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

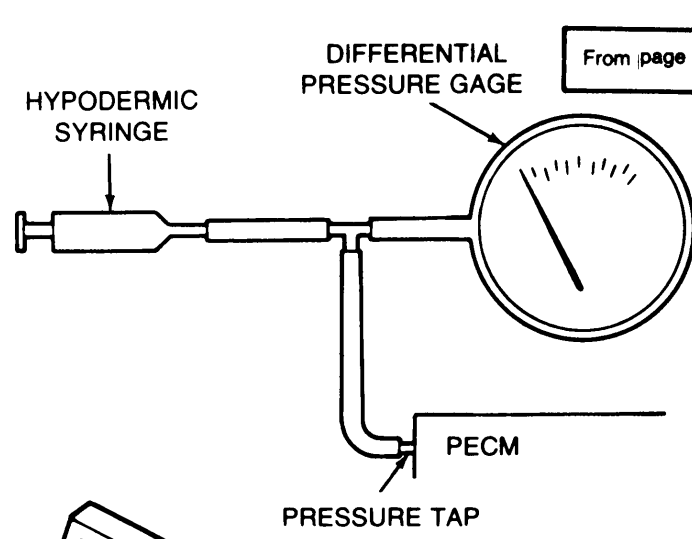

Apply vacuum to the PECM as indicated below and measure test point (TP) voltage on switching card A3 with respect to TB1-1 as indicated:




Vacuum (in. wg)	TP-M Volts	TP-G Volts
0	$25 \pm 2$	$< 1$
0.4	$9.3 \pm 3.5$	$< 1$
0.6	$< 1$	$< 1$
0.8	$< 1$	$9.3 \pm 3.5$
1.3	$< 1$	$25.3 \pm 2$

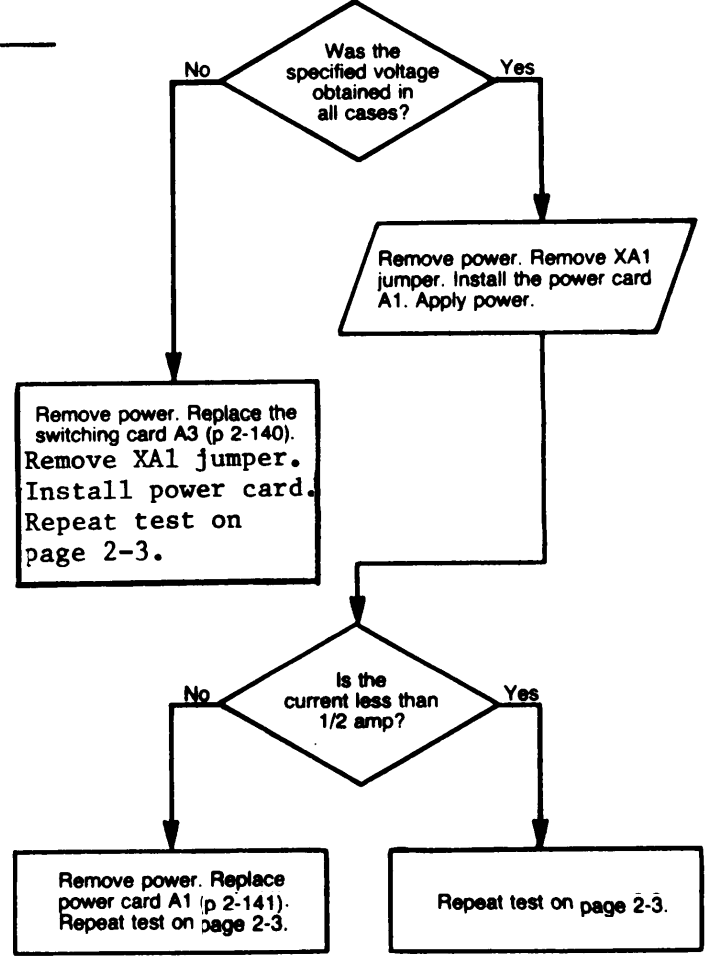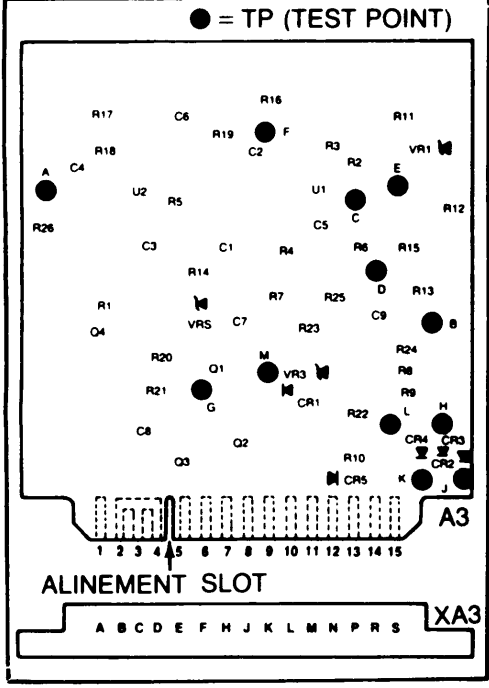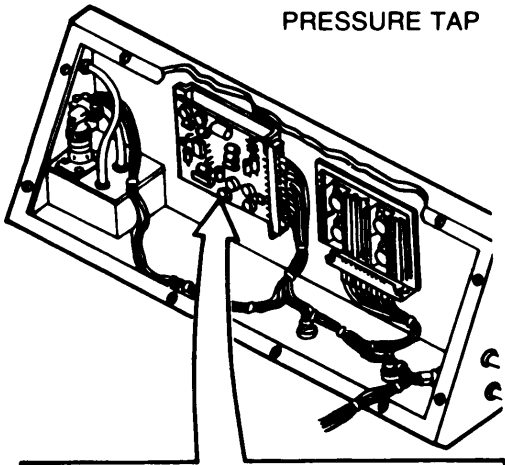

2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

● = TP (TEST POINT)

From page 2-3 and page 2-4.

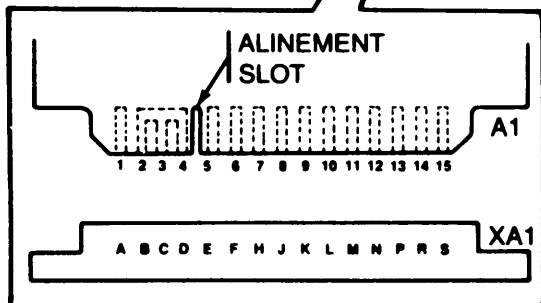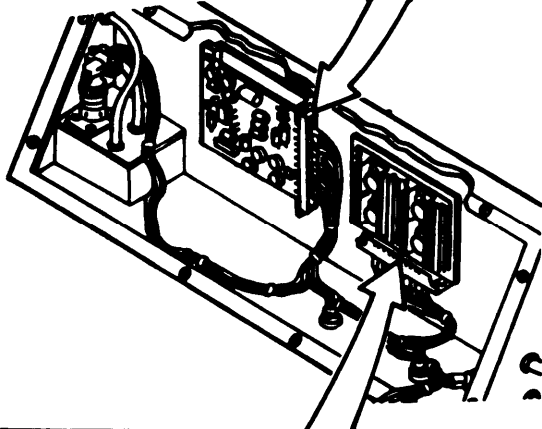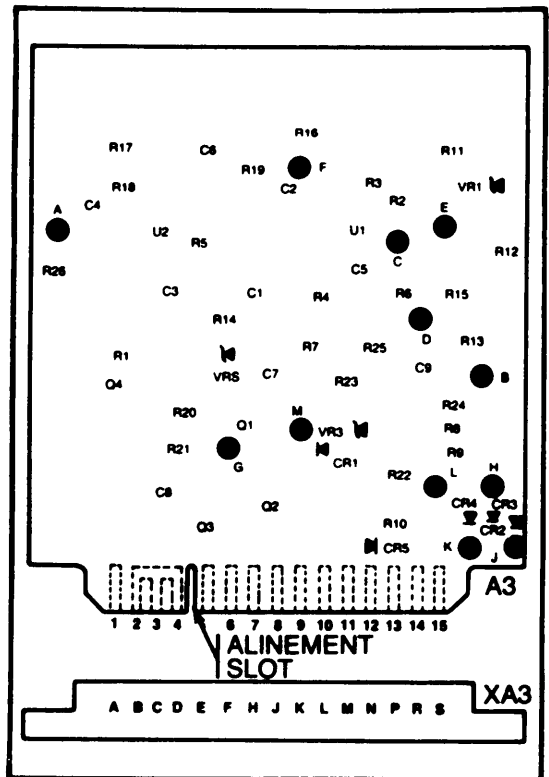

Remove power. Remove screws from PECM panel and lift up for access to components. Apply power. Measure voltage between:  
 (+) A3-TP-J (-) A3-TP-K

Was 22.5 to 26.5 vdc obtained?

Remove power. Repair wiring (p 2-142) for continuity between:  
 Wire No. From (+) To (-)  
 20 XA3-S(15) XA1-B(2)  
 21 XA3-R(14) XA1-E(5)  
 31 XA1-C(3) J21-A  
 32 XA1-D(4) J21-B  
 Repeat test on page 2-3.

Measure voltage between:  
 (+) A3-TP-B (-) TB1-1

Was 28 ± 2 vdc obtained?

Remove power. Repair wire (3) between J20-C and XA1-10 (p 2-142). Apply power. Repeat test on page 2-3.

Measure voltage between:  
 (+) A3-TP-B (-) XA3-C(3)





Was 28 ± 2 vdc obtained?

Remove power. Repair wires to TB1-1 from XA1-H(7) and XA3-C(3). Refer to page 2-142. Apply power and repeat test on page 2-3.


Proceed to page 2-25.






2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

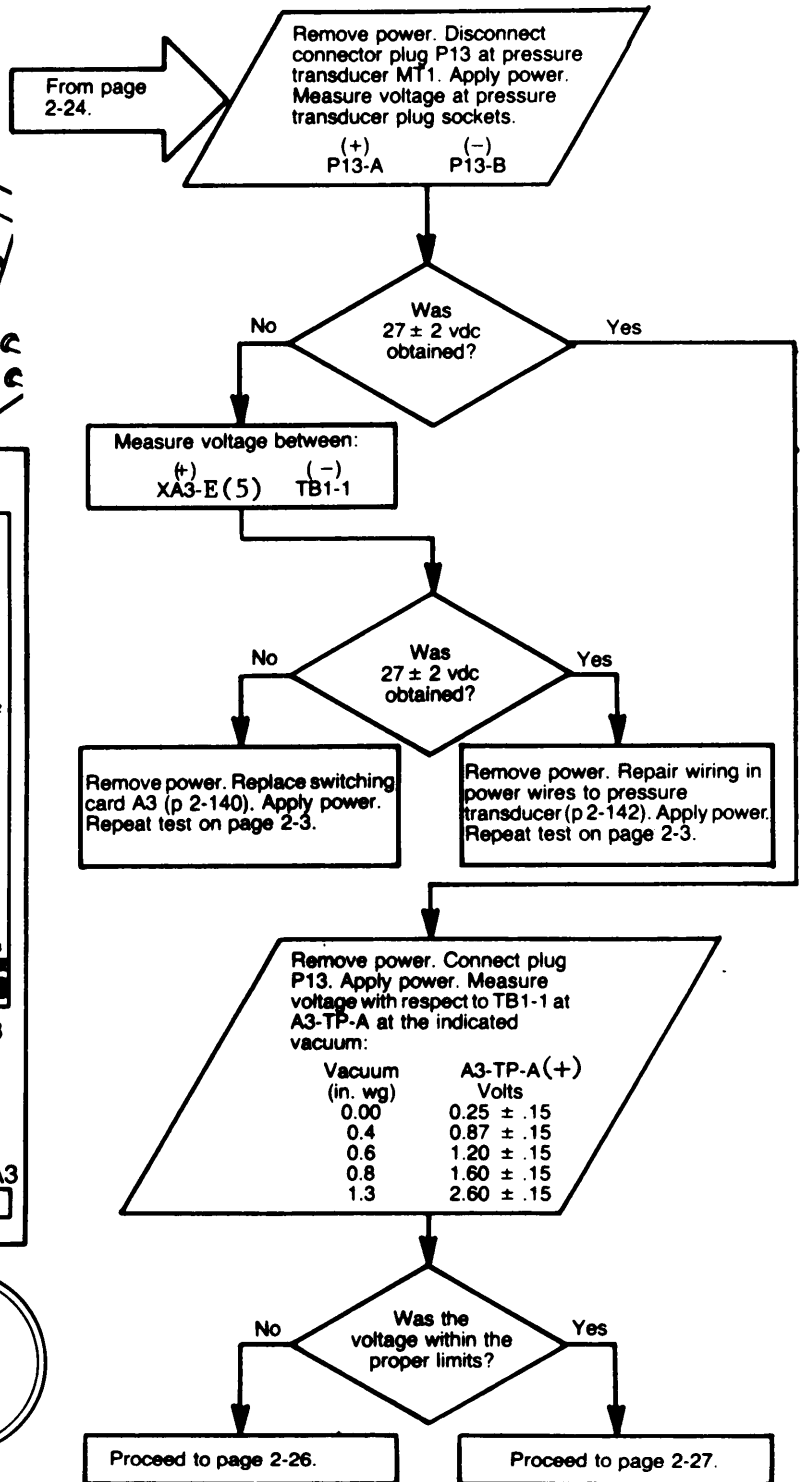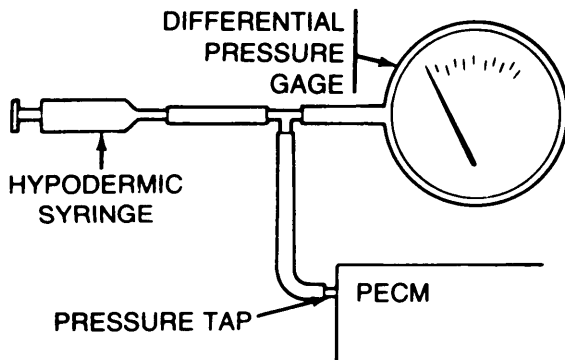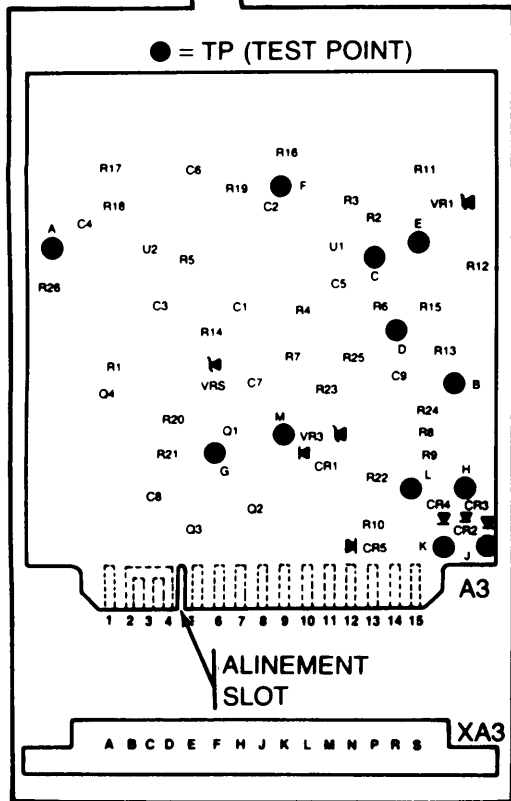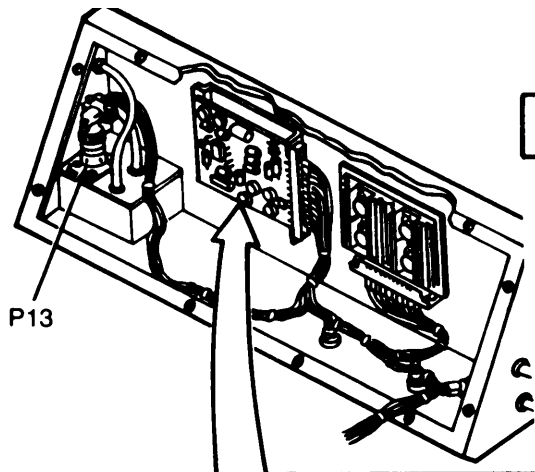


2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

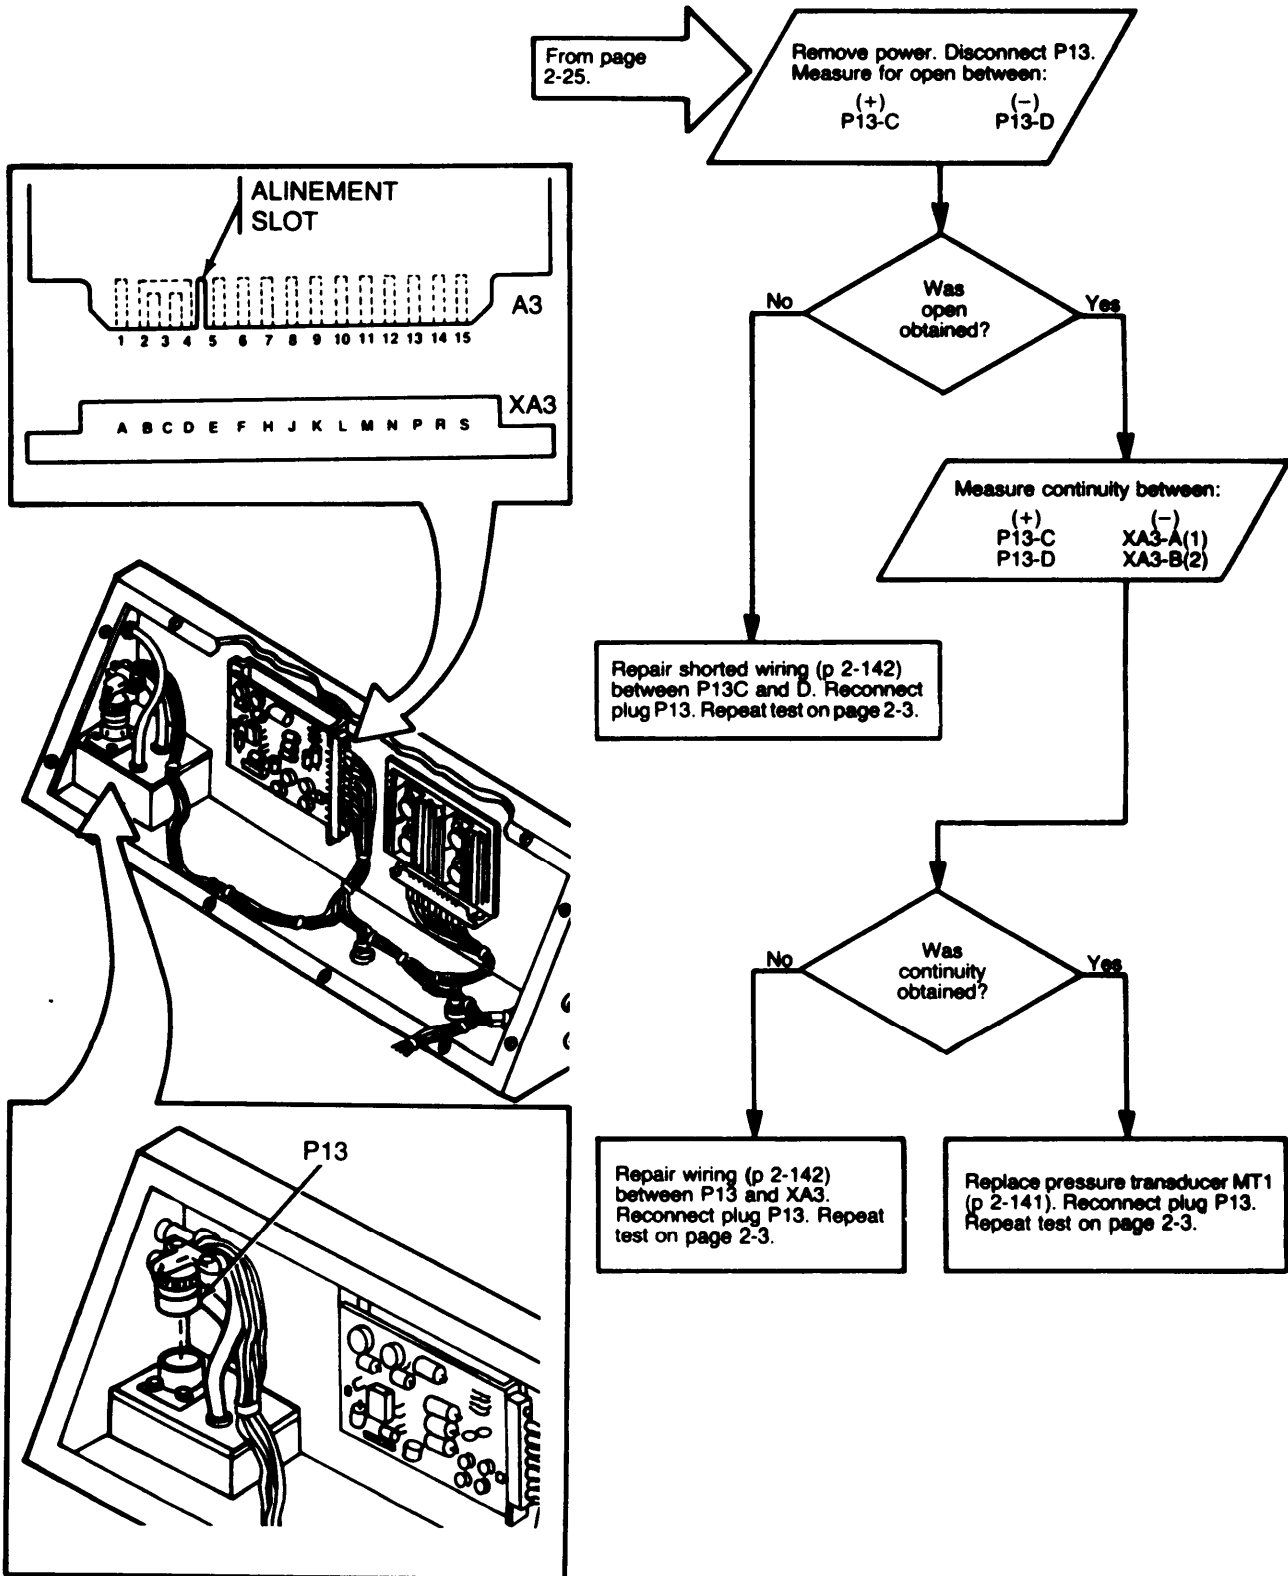


2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

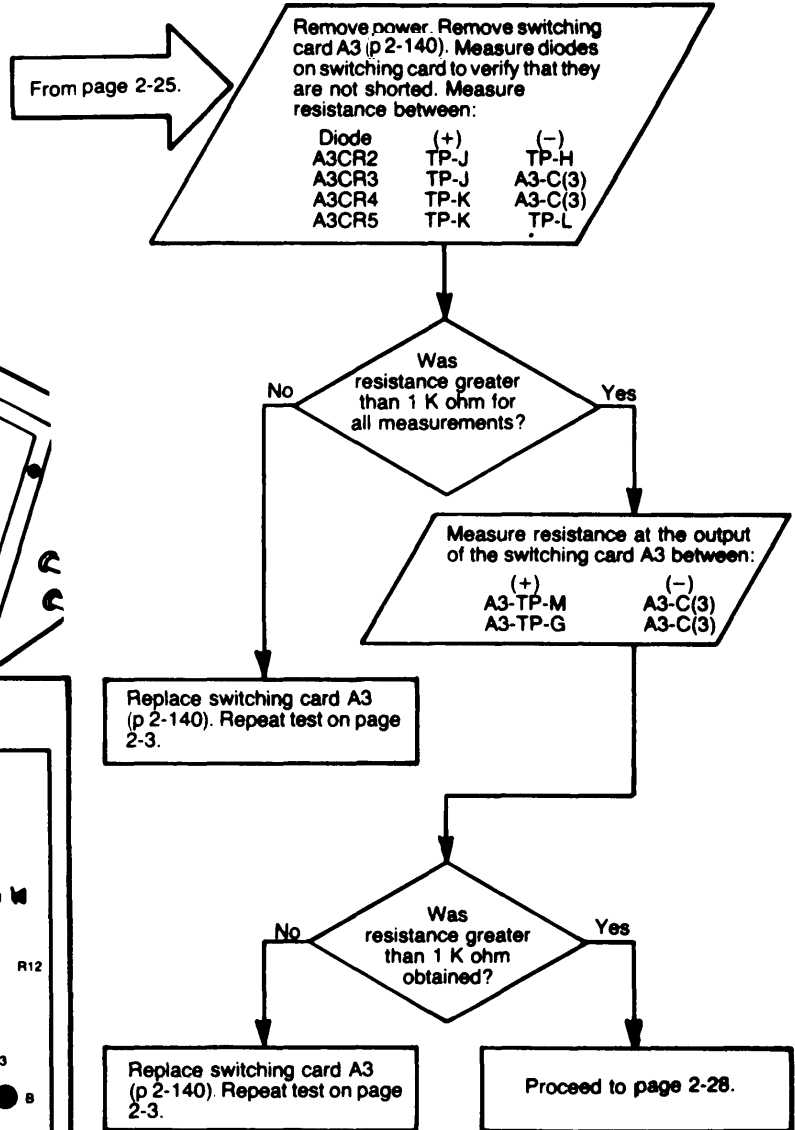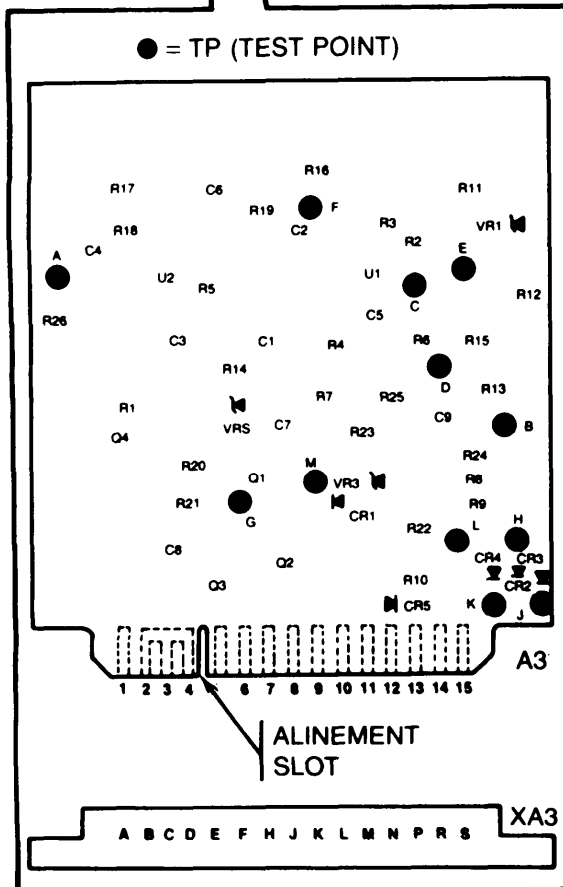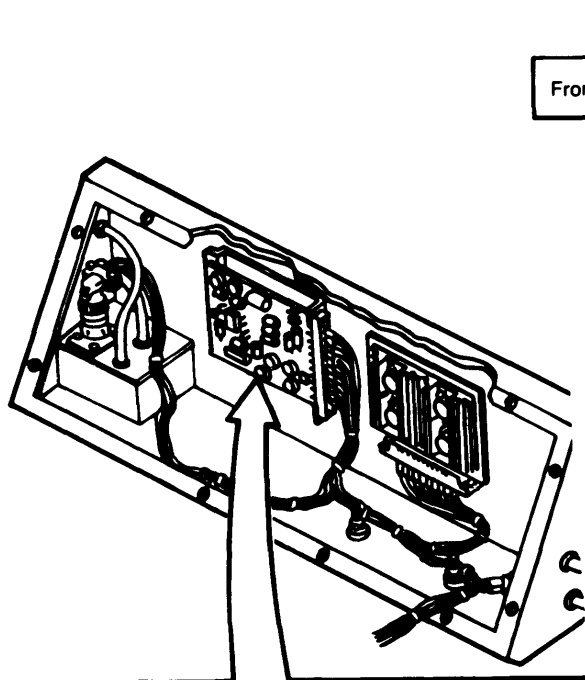

2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

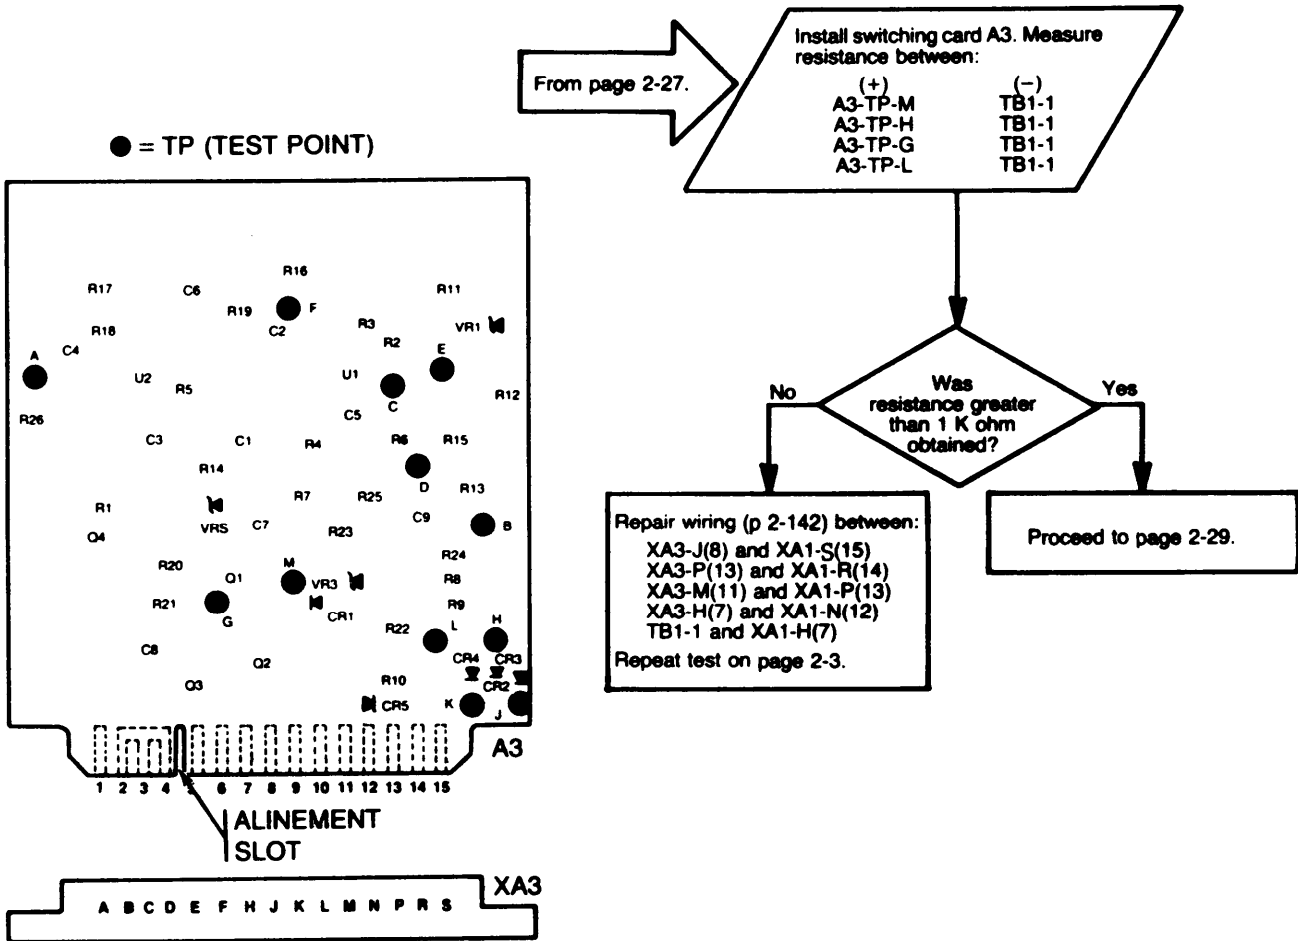

2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

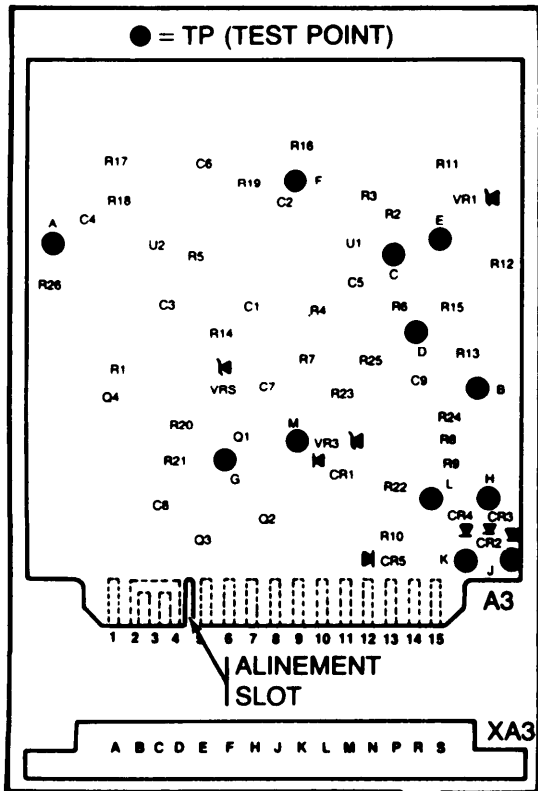


From page 2-28.

Remove power printed circuit card A1.  
Connect jumpers as follows:

(From)	(To)
XA1-L(10)	XA1-K(9)



This connection completes the power to the switching card A3 which is normally provided when the power card A1 is removed so that the switching card A3 is not electrically loaded by a defective power card. Apply 28 vdc power and vacuum to the PECM as indicated below and measure test point (TP) voltage on switching card A3 with respect to ground TB1-1 as indicated:

Vacuum (in. wg)	Voltage at test point (volts)	
	A3-TP-M(+)	A3-TP-G(+)
0	25 ± 2	< 1
0.4	9.3 ± 3.5	< 1
0.6	< 1	< 1
0.8	< 1	9.3 ± 3.5
1.3	< 1	25.3 ± 2

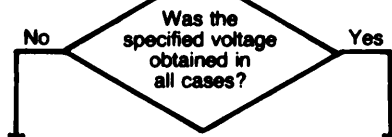


No  
Remove power. Remove jumper. Replace the switching card A3 (p 2-140). Repeat test on page 2-3.




Yes  
Proceed to page 2-30. Remove jumper.

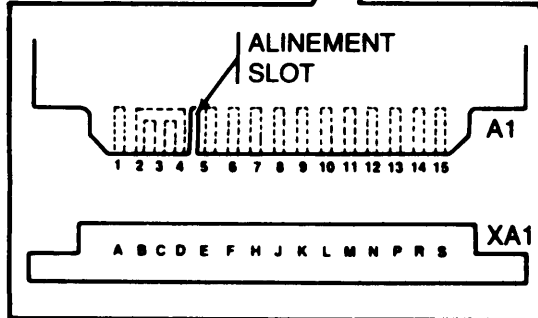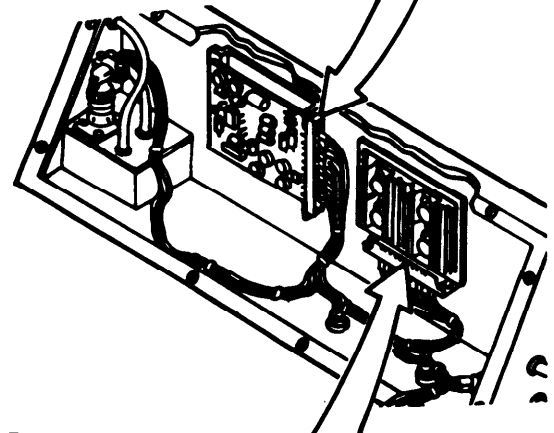



2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

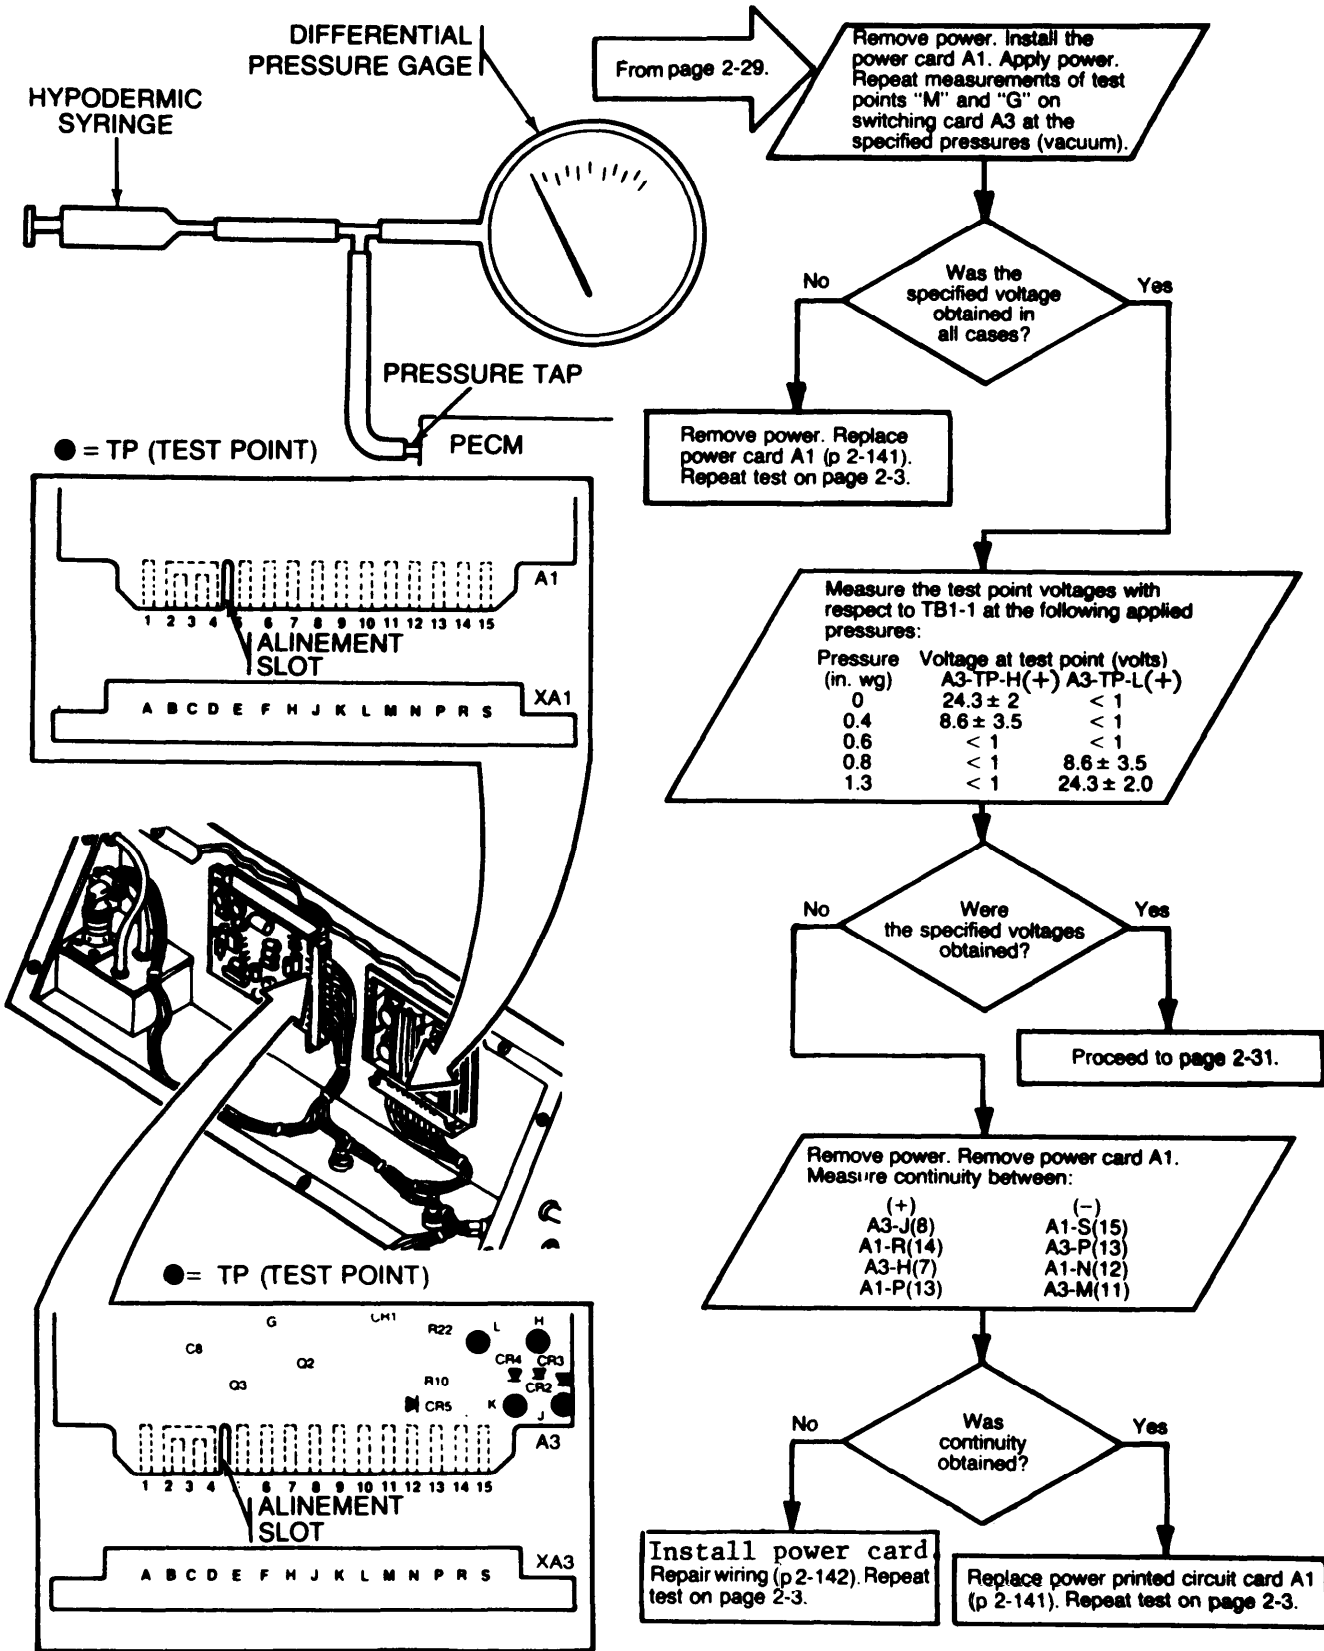

2-3. PECM TROUBLESHOOTING PROCEDURES (Cont).

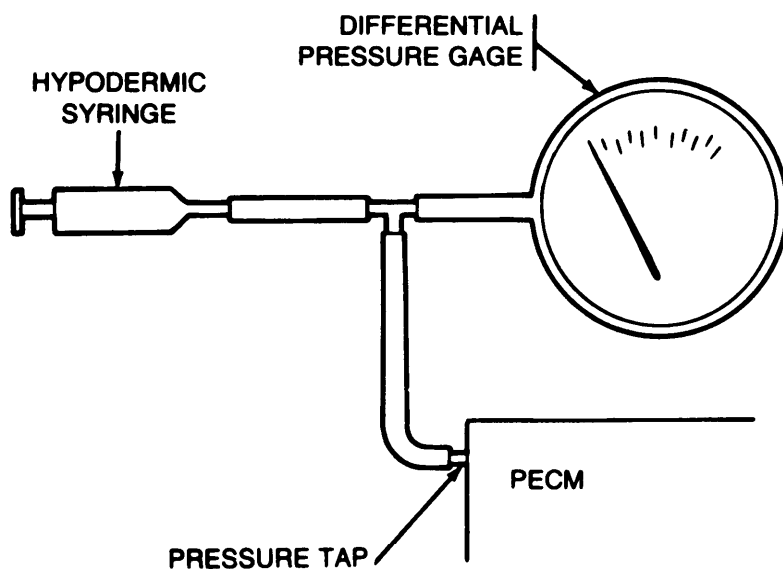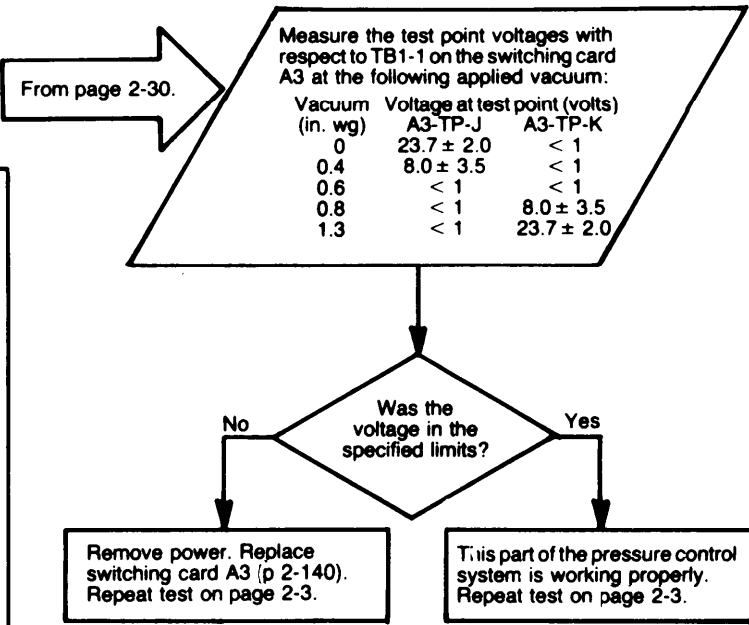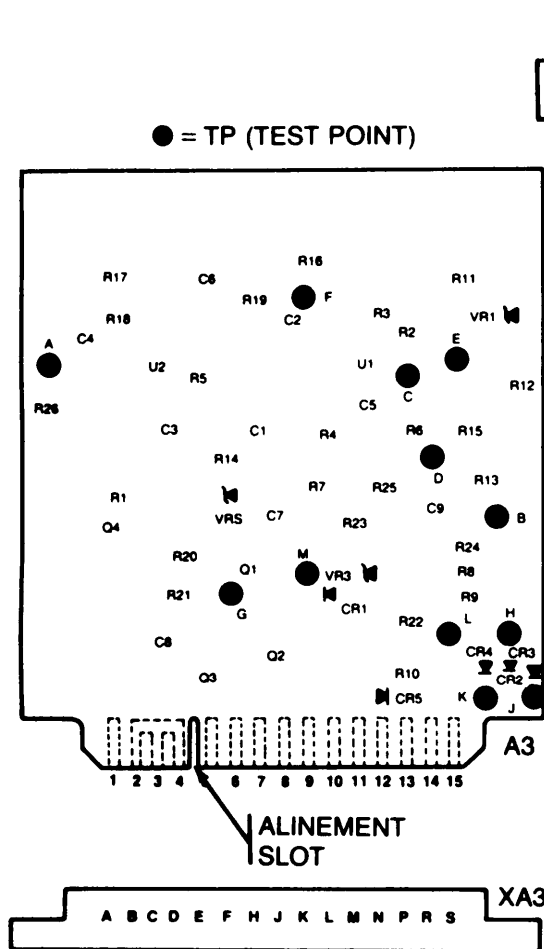



2-4. MAIN FAN TROUBLESHOOTING PROCEDURES.

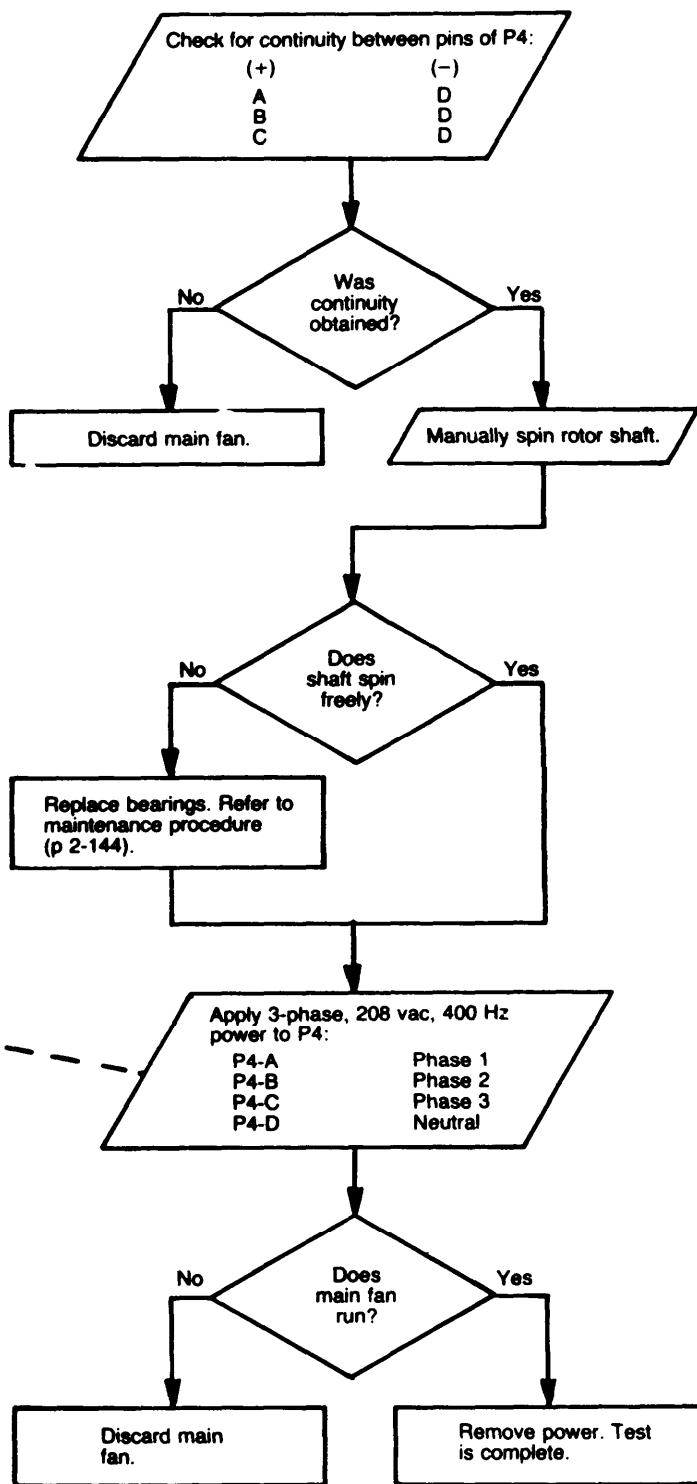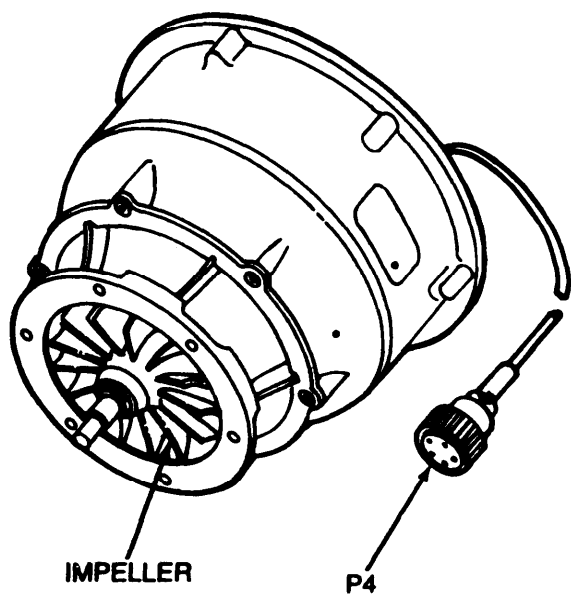



**WARNING**  
Keep hands away from fan impeller area when main fan is running.




2-5. AIRFLOW VALVE TROUBLESHOOTING PROCEDURES.

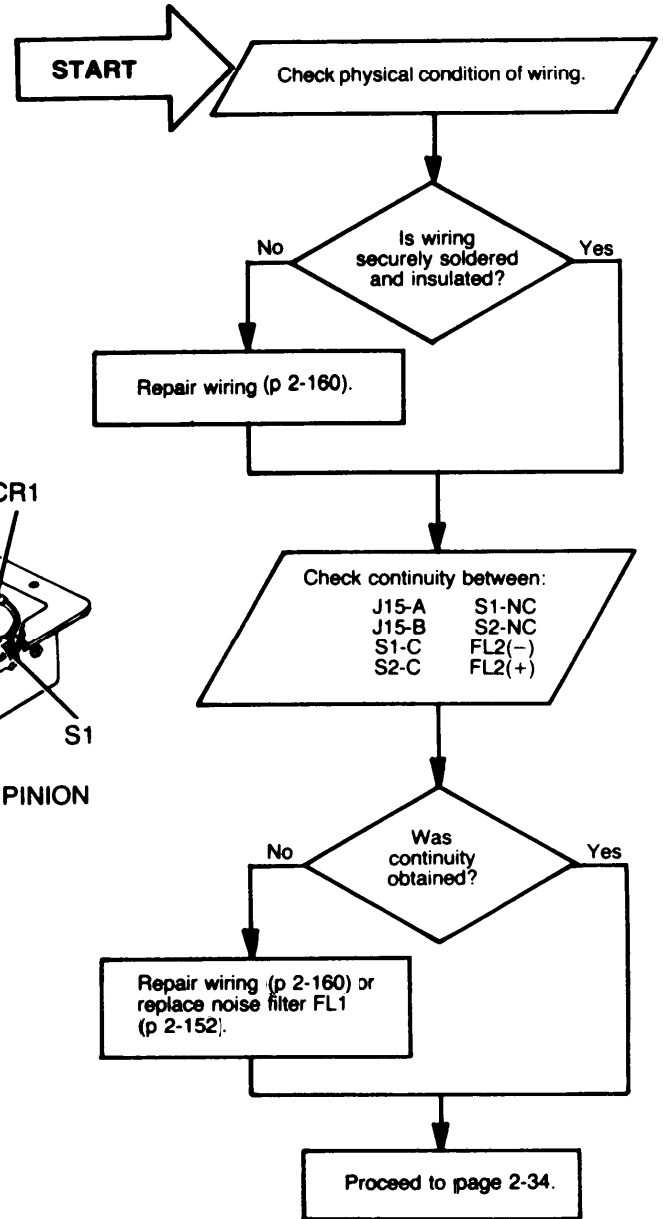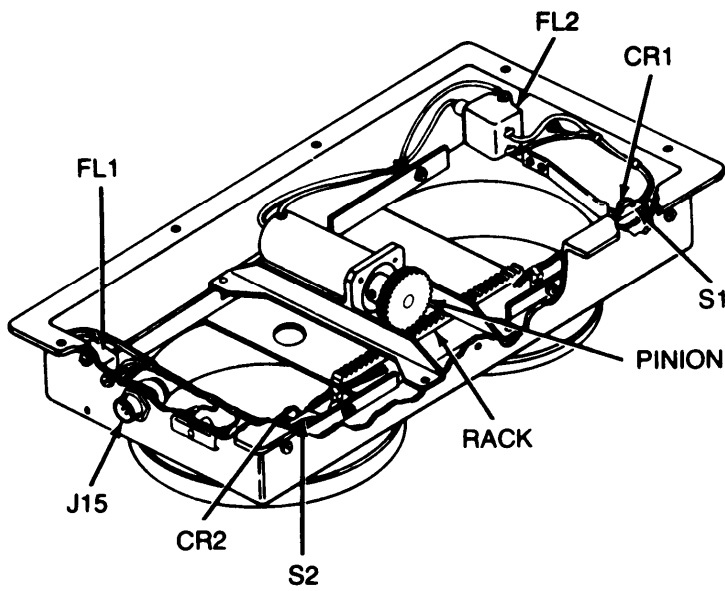


2-5. AIRFLOW VALVE TROUBLESHOOTING PROCEDURES (Cont).

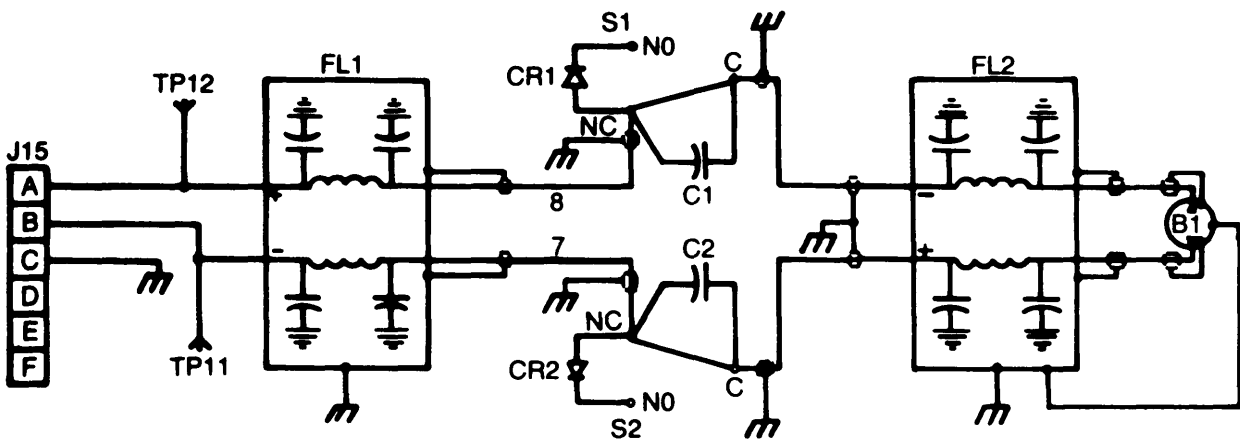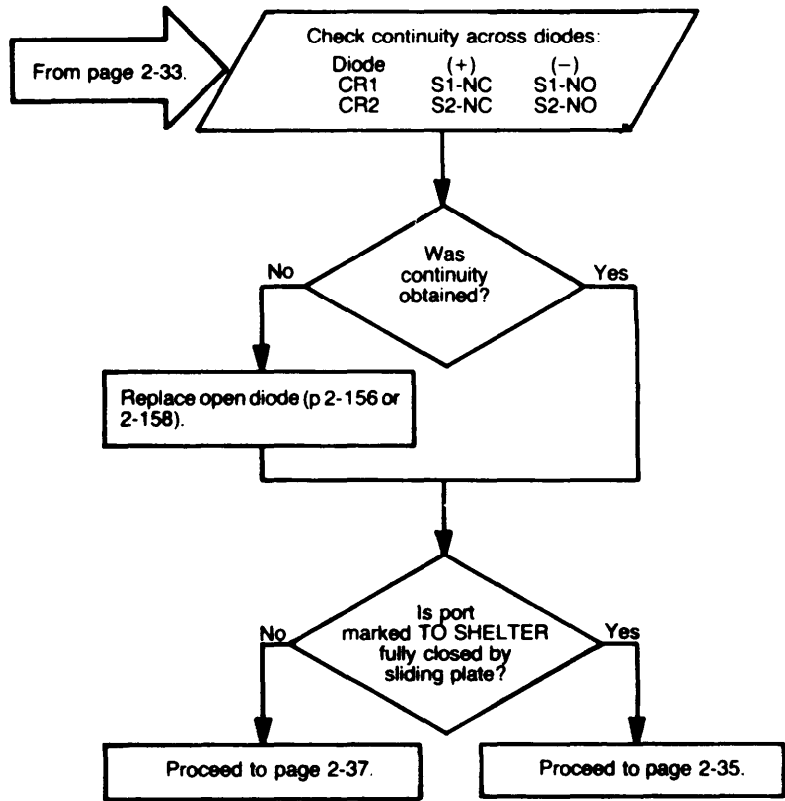


2-5. AIRFLOW VALVE TROUBLESHOOTING PROCEDURES (Cont).

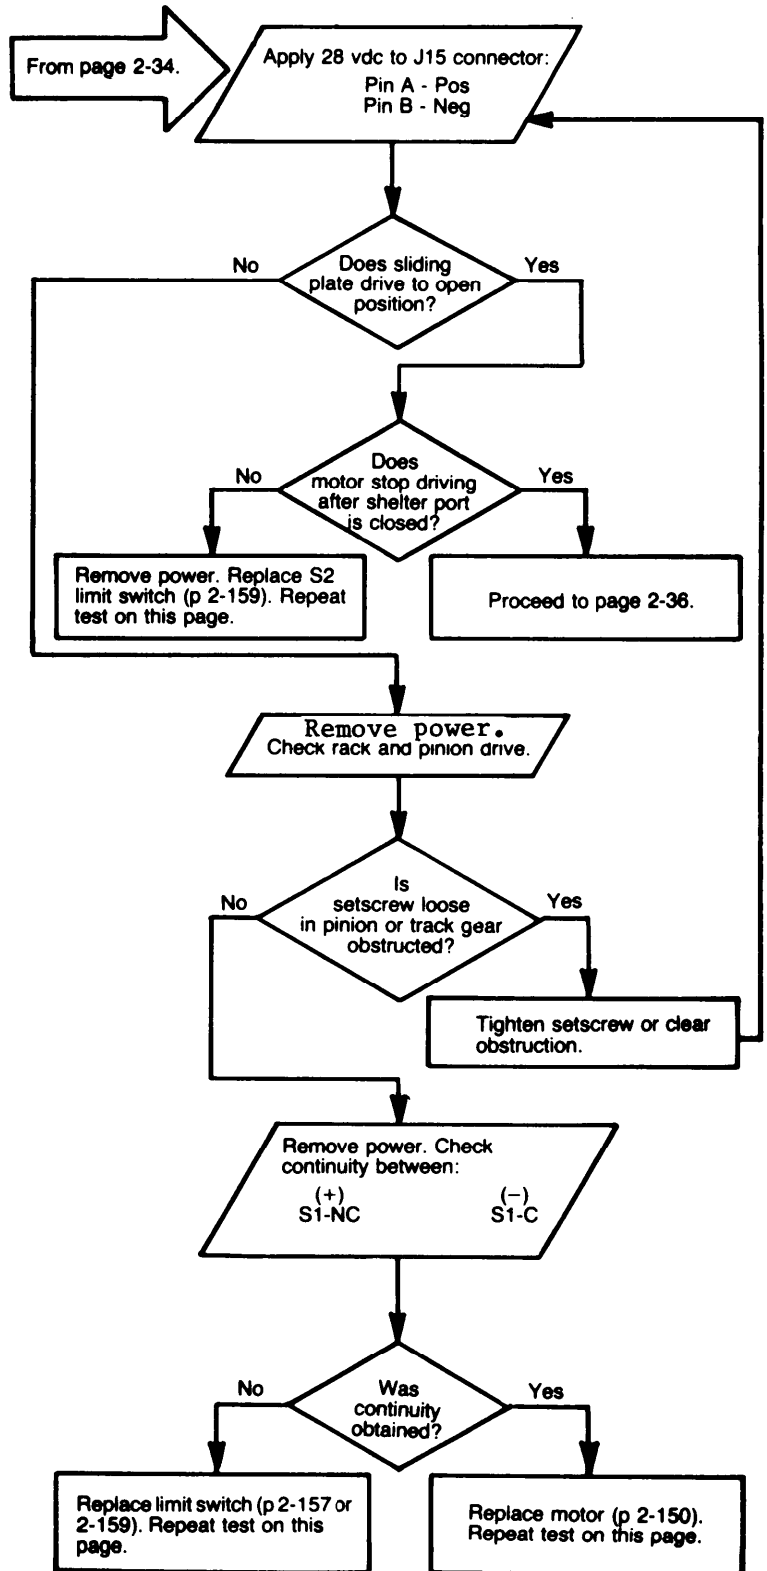


2-5. AIRFLOW VALVE TROUBLESHOOTING PROCEDURES (Cont).

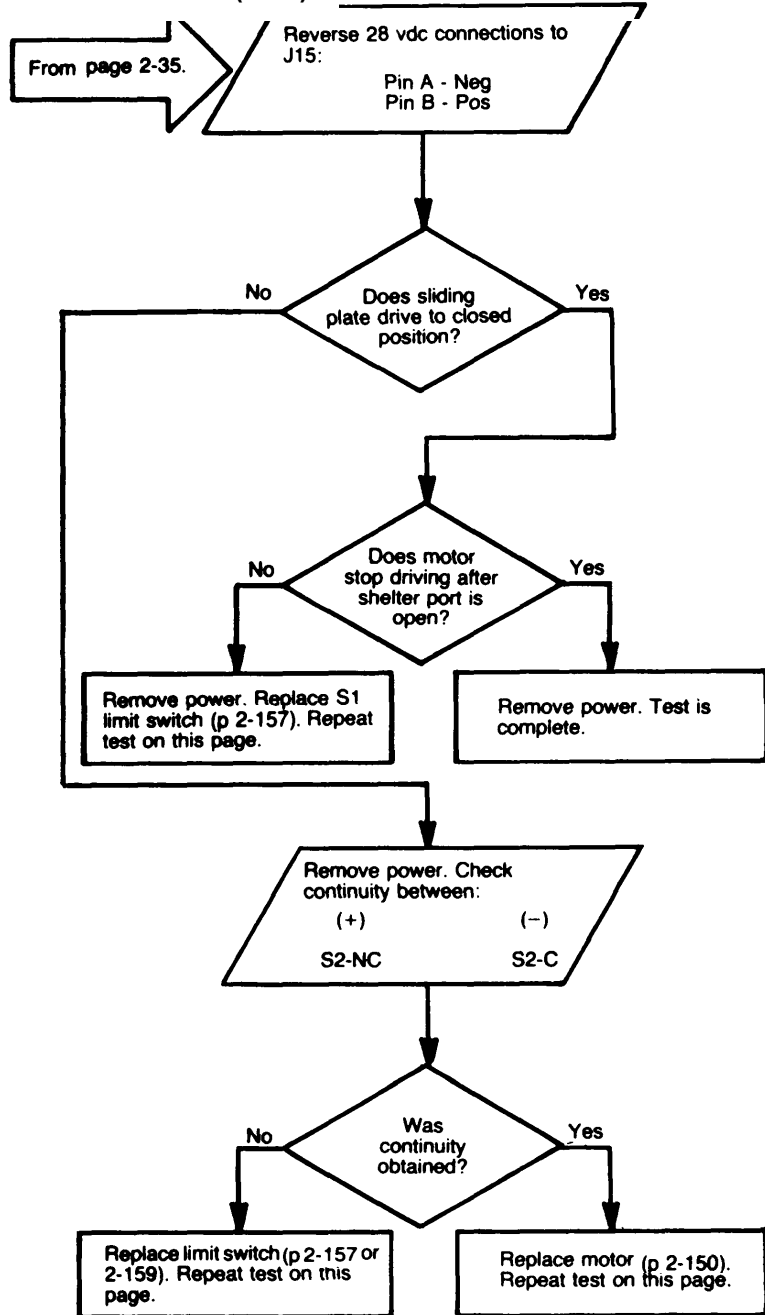



2-5. AIRFLOW VALVE TROUBLESHOOTING PROCEDURES (Cont).

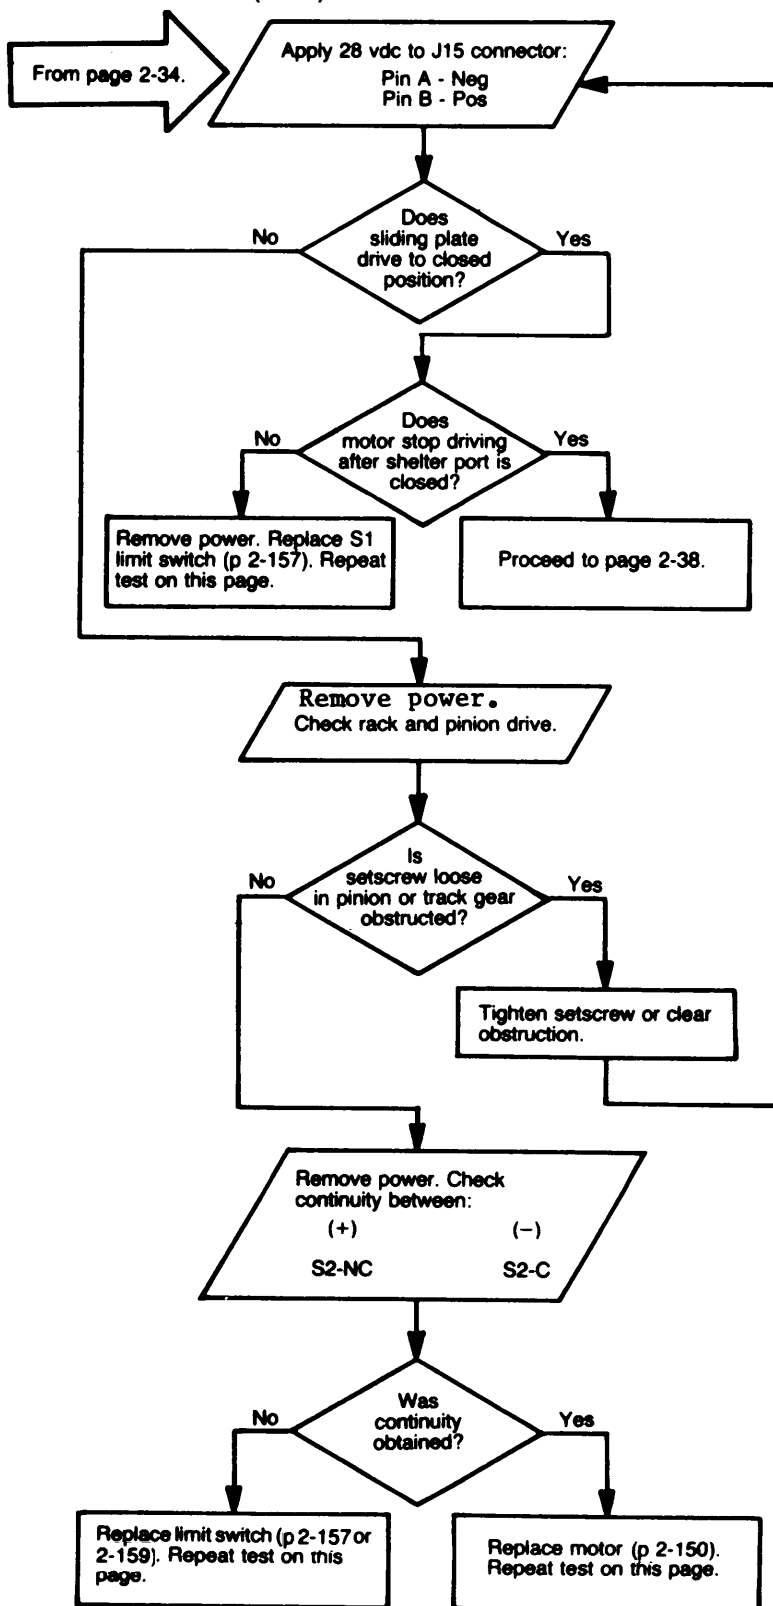



2-5. AIRFLOW VALVE TROUBLESHOOTING PROCEDURES (Cont).

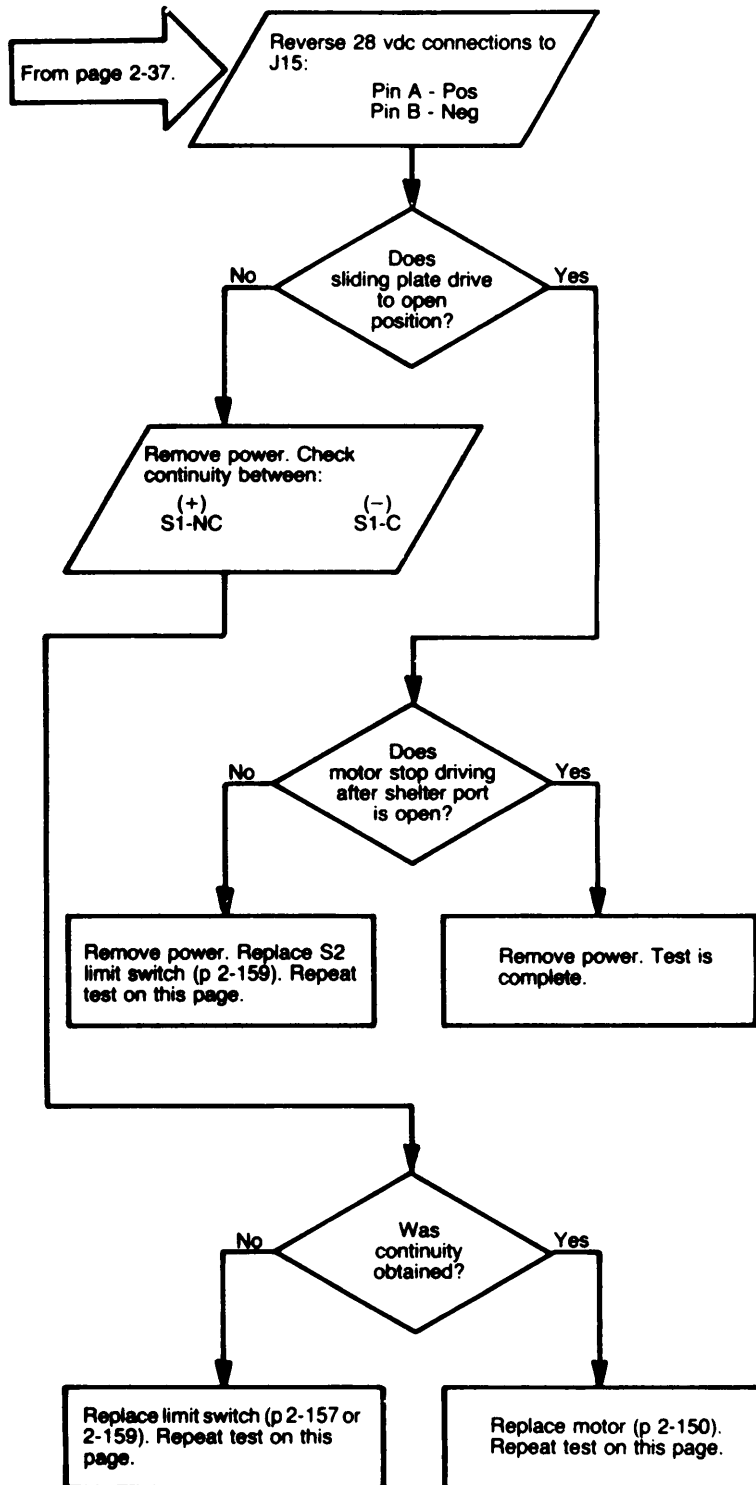


2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES.

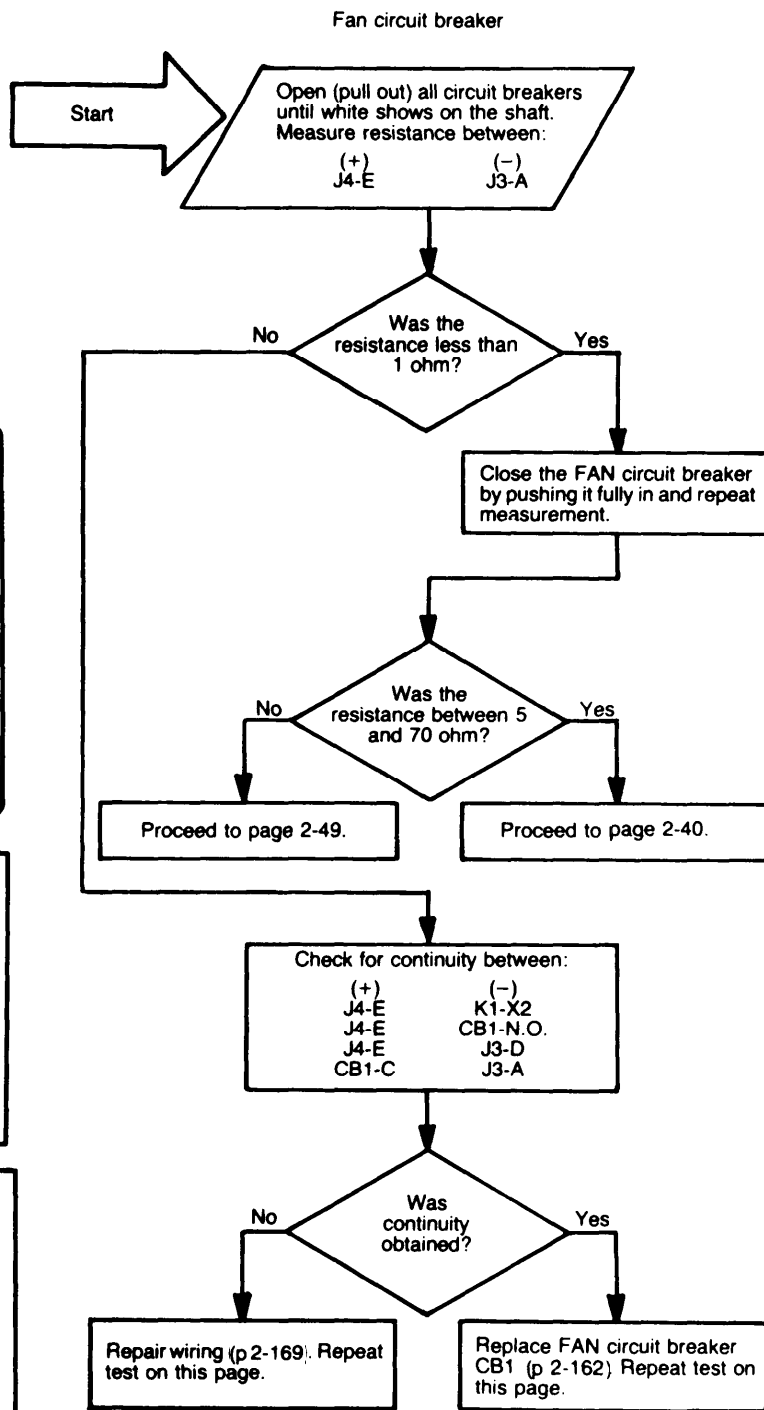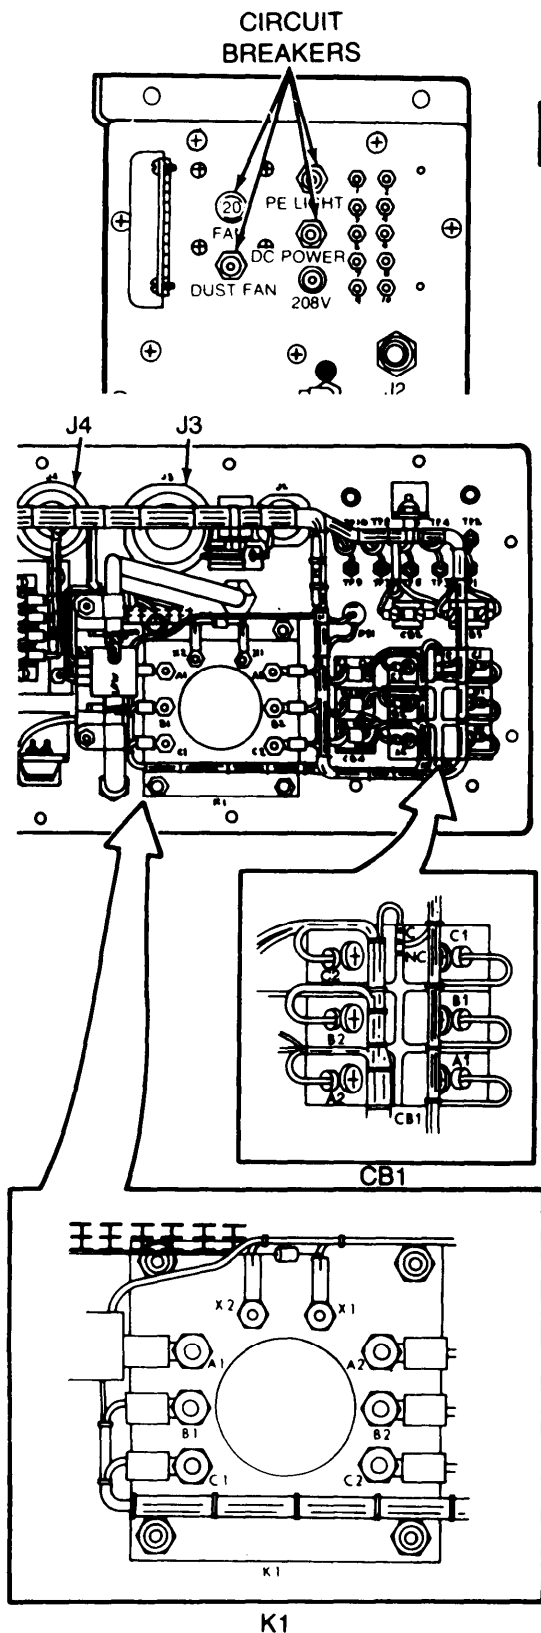

2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

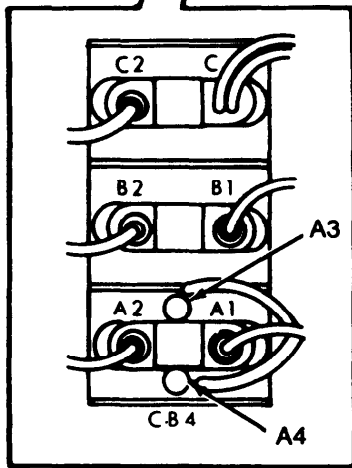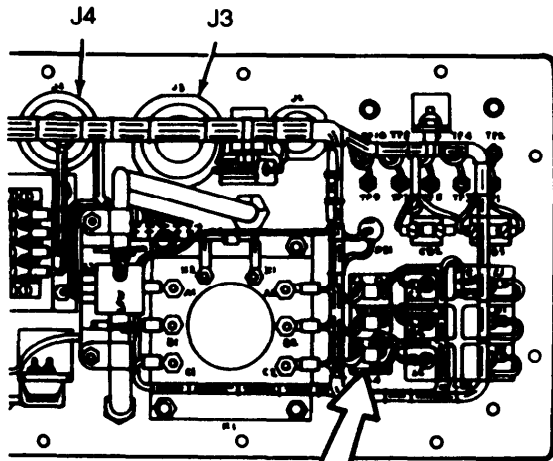


CB4

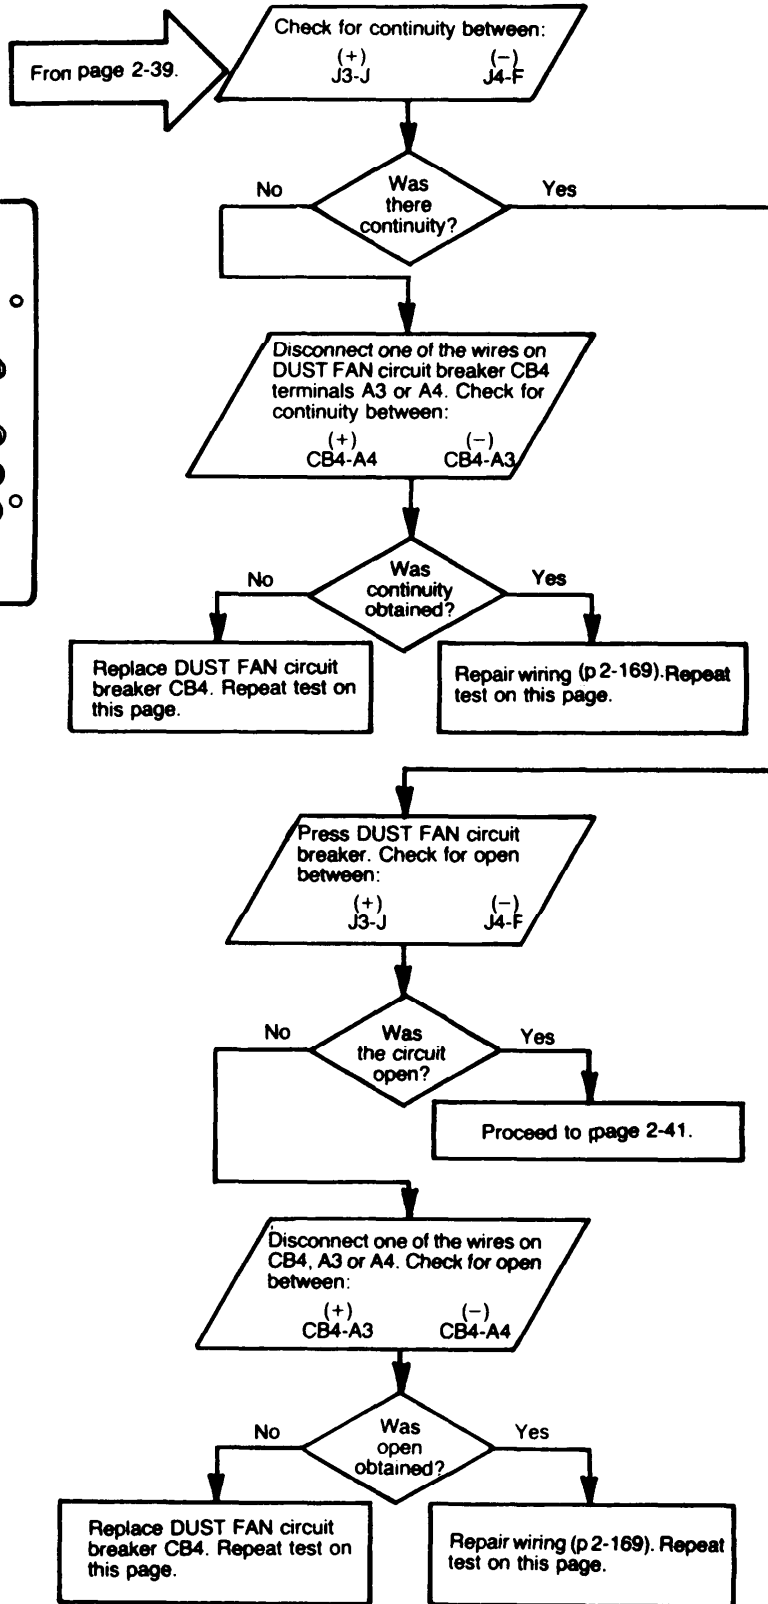




2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

Power Relay

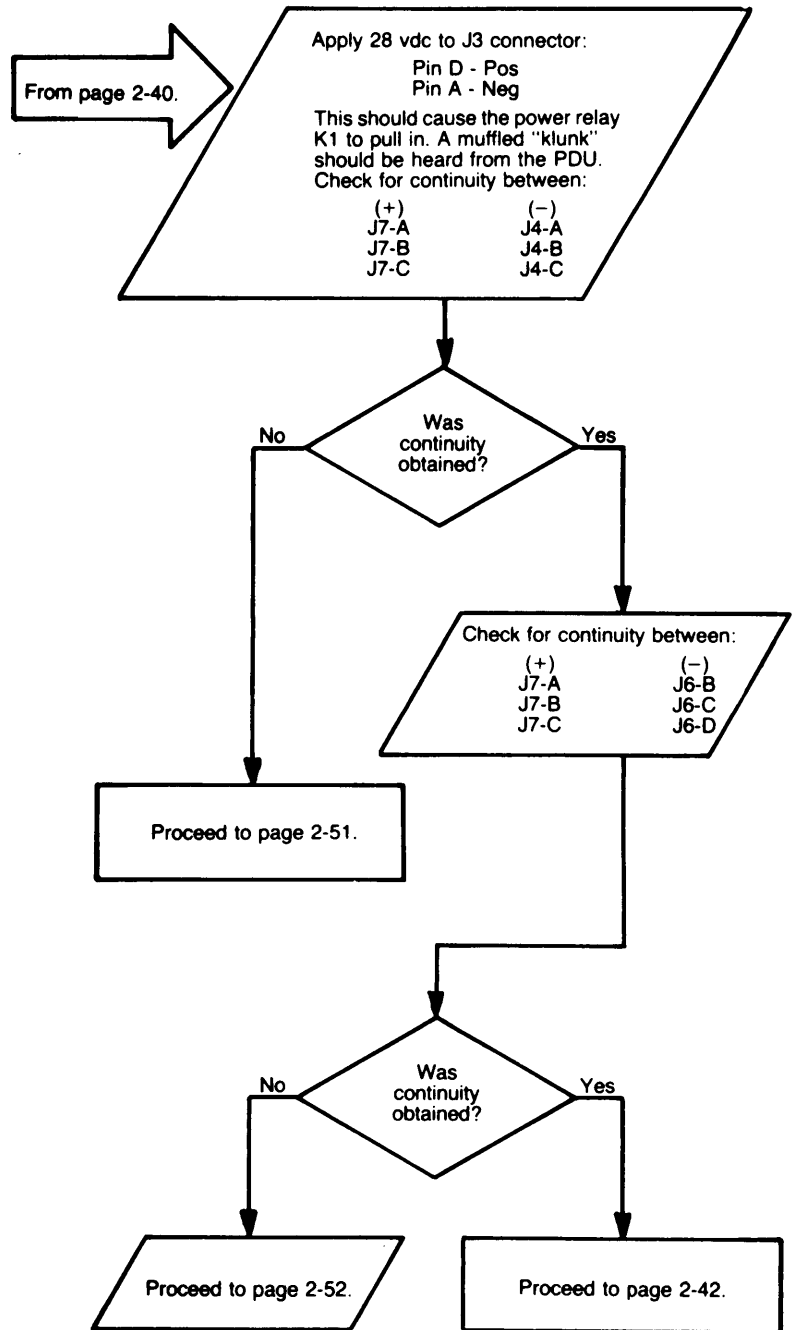


2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

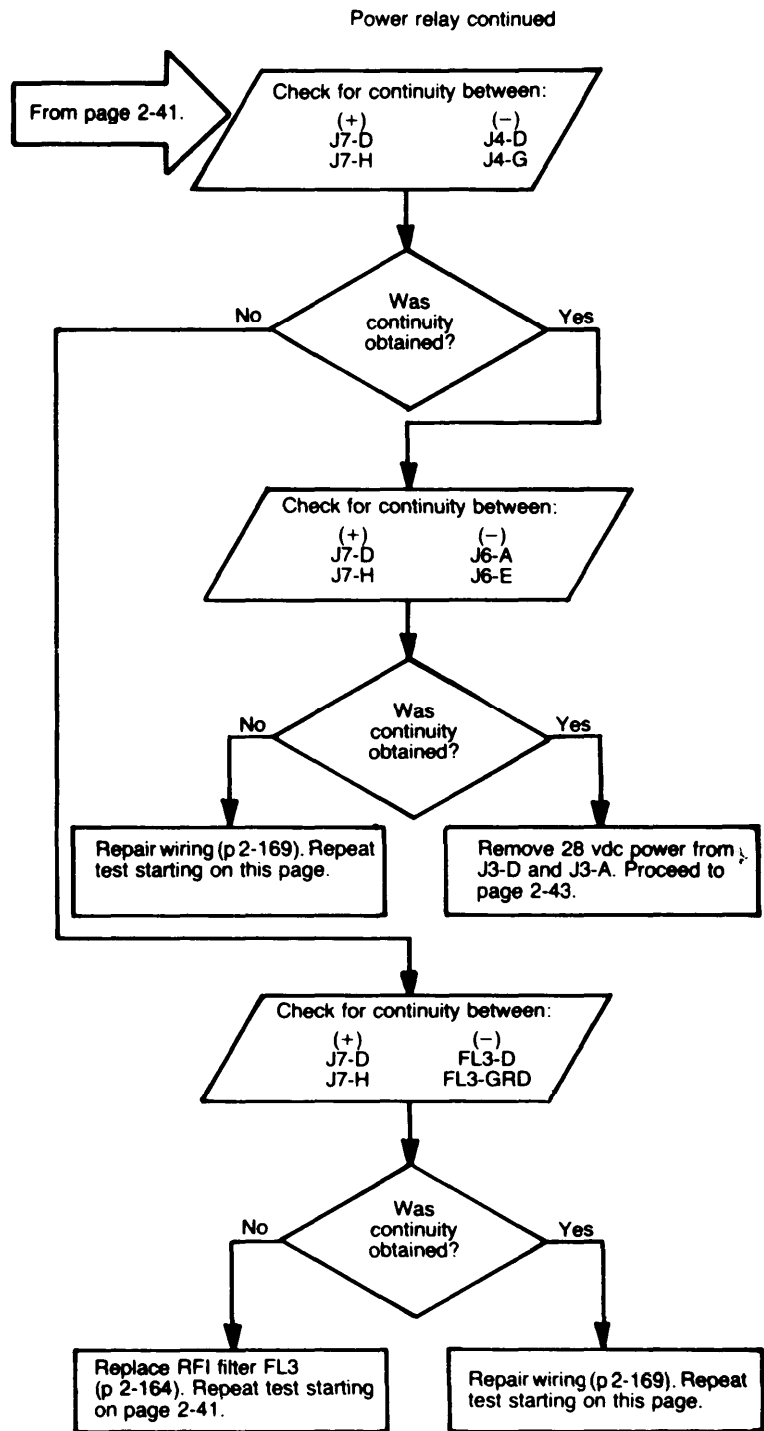

2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

Pressure switch

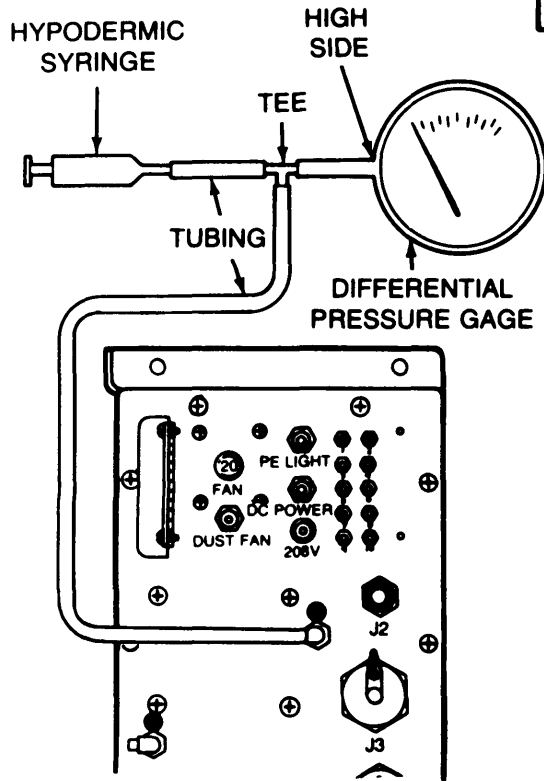

From page 2-42.

Connect the high pressure side of a differential pressure gage (6 in. wg) to a pressure source (syringe, aspirator, etc.) and to the hose fitting marked with a red dot on the PDU panel.

Connect one end of a 680 ohm, 2 watt resistor to J3-F. Apply 28 vdc to:


(+)	(-)
680 resistor	J3-A

Slowly increase pressure to 6 in. wg and measure voltage across resistor connected to power source (+) and J3-F (-). Voltmeter should indicate  $28 \pm 2$  vdc when pressure is greater than 5.5 in. wg; 0 vdc when less than 4.5 in. wg.

```


    graph TD
        Start([From page 2-42.]) --> Step1[Connect the high pressure side of a differential pressure gage (6 in. wg) to a pressure source (syringe, aspirator, etc.) and to the hose fitting marked with a red dot on the PDU panel. Connect one end of a 680 ohm, 2 watt resistor to J3-F. Apply 28 vdc to: (+) 680 resistor (-) J3-A. Slowly increase pressure to 6 in. wg and measure voltage across resistor connected to power source (+) and J3-F (-). Voltmeter should indicate 28 ± 2 vdc when pressure is greater than 5.5 in. wg; 0 vdc when less than 4.5 in. wg.]
        Step1 --> Dec1{Was the voltage 0 vdc at pressure less than 4.5 in. wg?}
        Dec1 -- No --> Step2{Was the voltage 28 ± 2 vdc at pressure greater than 5.5 in. wg?}
        Dec1 -- Yes --> Step2
        Dec2 -- No --> Box1[Proceed to page 2-54.]
        Dec2 -- Yes --> Box2[Proceed to page 2-44.]
        Dec3{Did the voltage switch to 28 ± 2 vdc at a pressure less than 4.5 in. wg?}
        Dec3 -- No --> Box3[Proceed to page 2-53.]
        Dec3 -- Yes --> Box4[Remove power. Replace pressure switch S7 (p 2-165). Repeat test on this page.]
    
```

2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

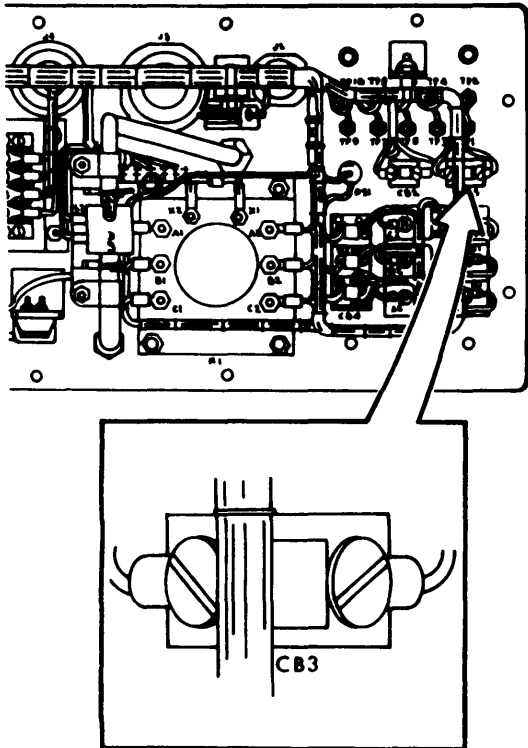


CB3


Protective entrance light circuit breaker

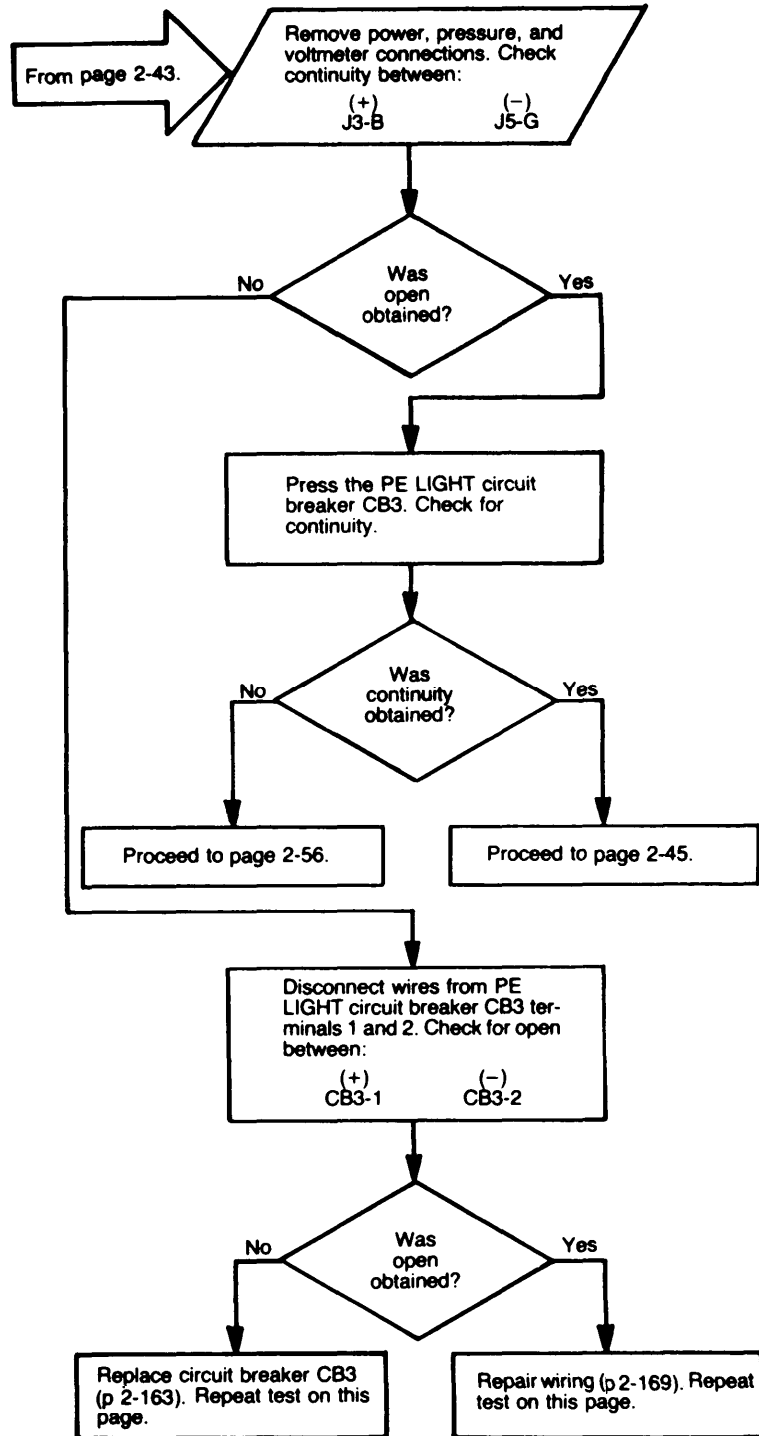


2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

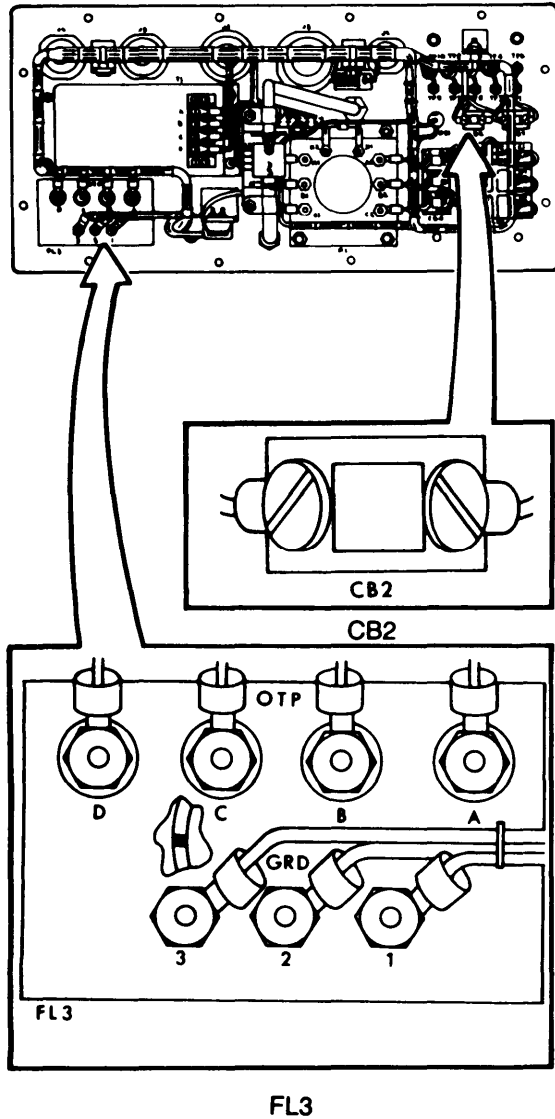


DC POWER circuit breaker

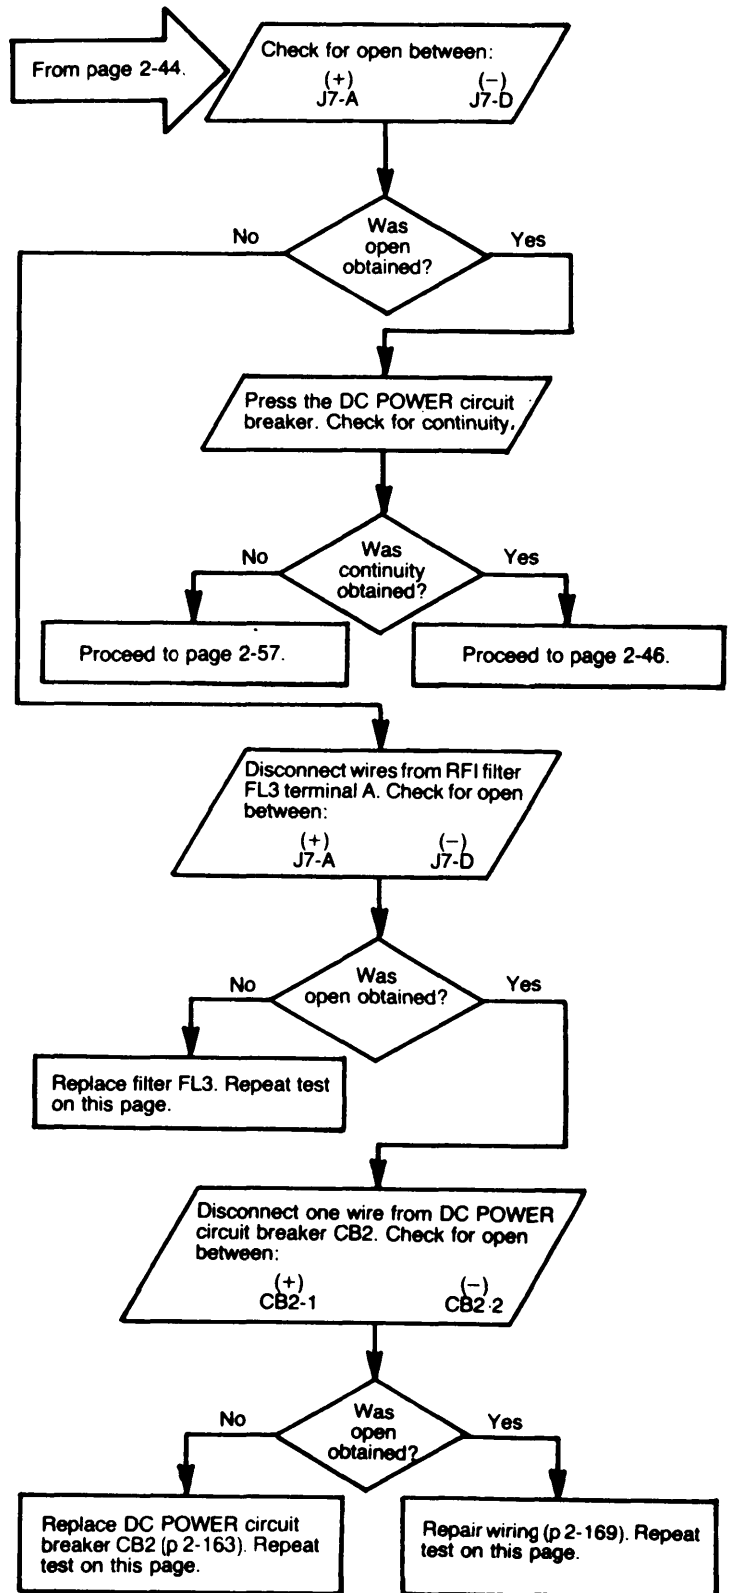


2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES

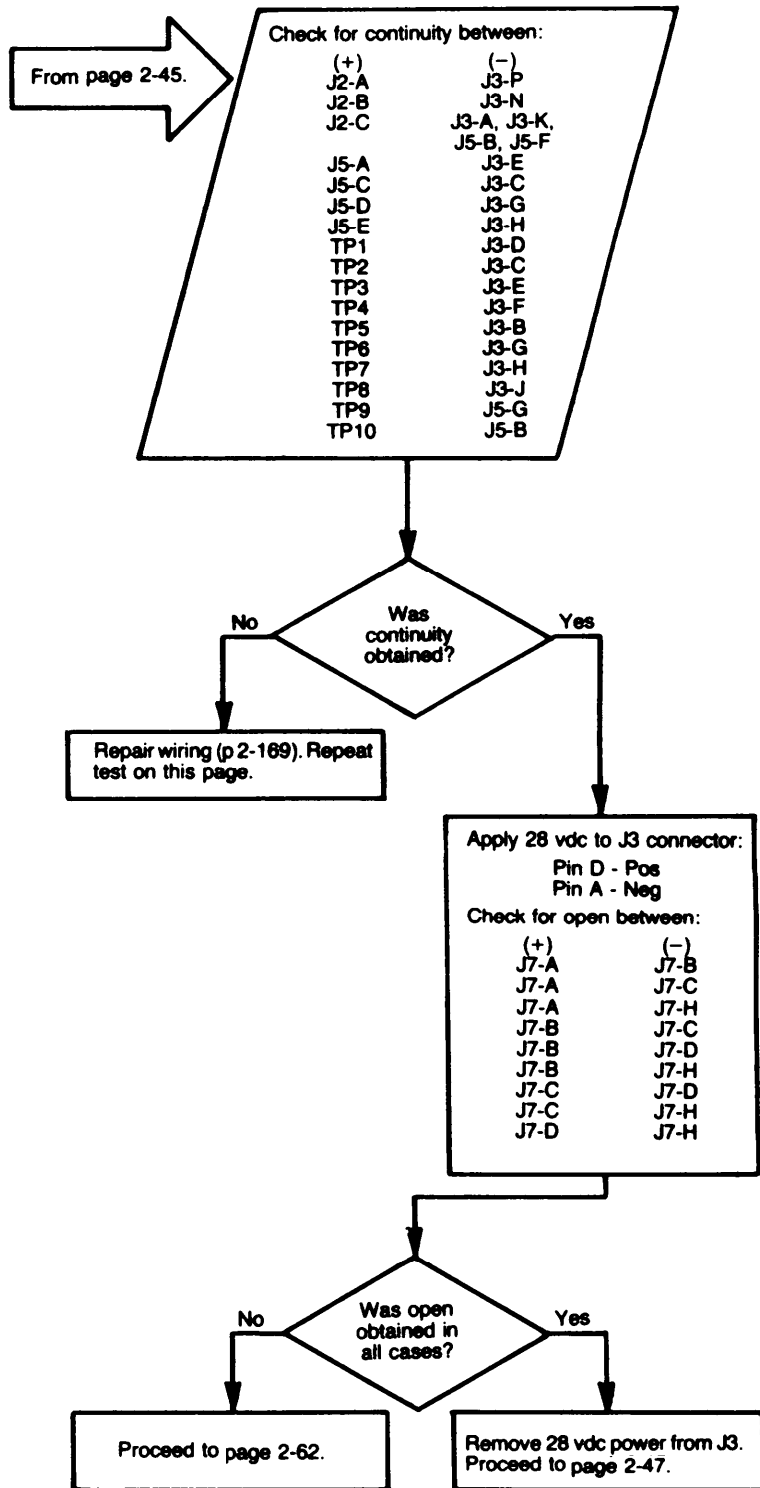

2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont)

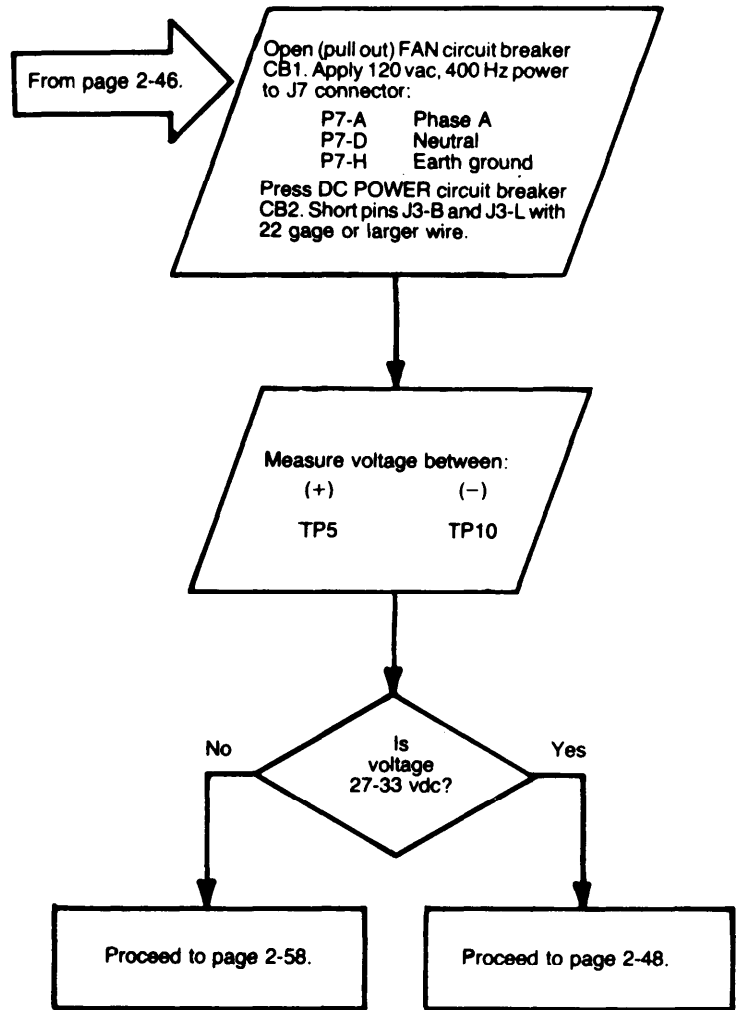


2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).



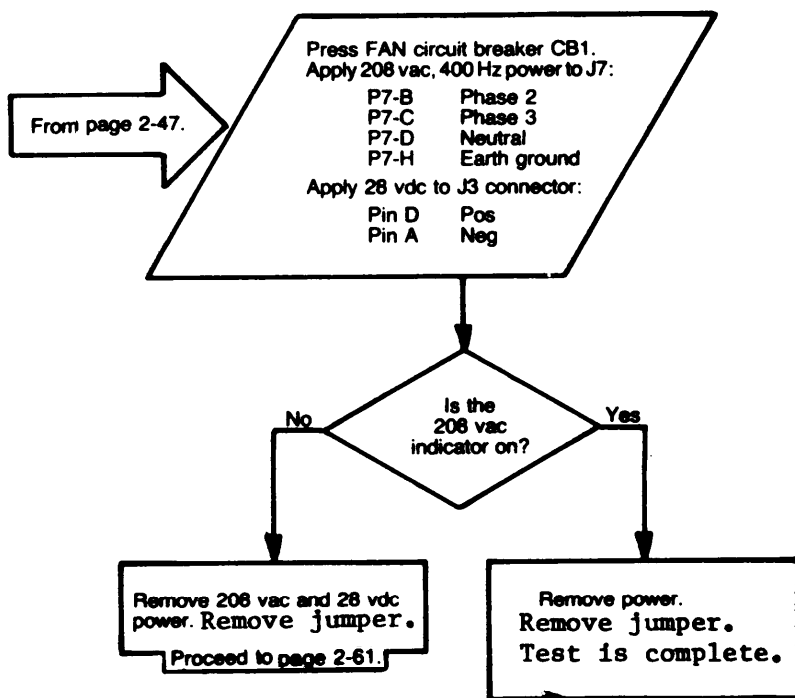




2-6. POWER DISTRIBUTION PANAL TROUBLESHOOTING PROCEDURES (Cont).


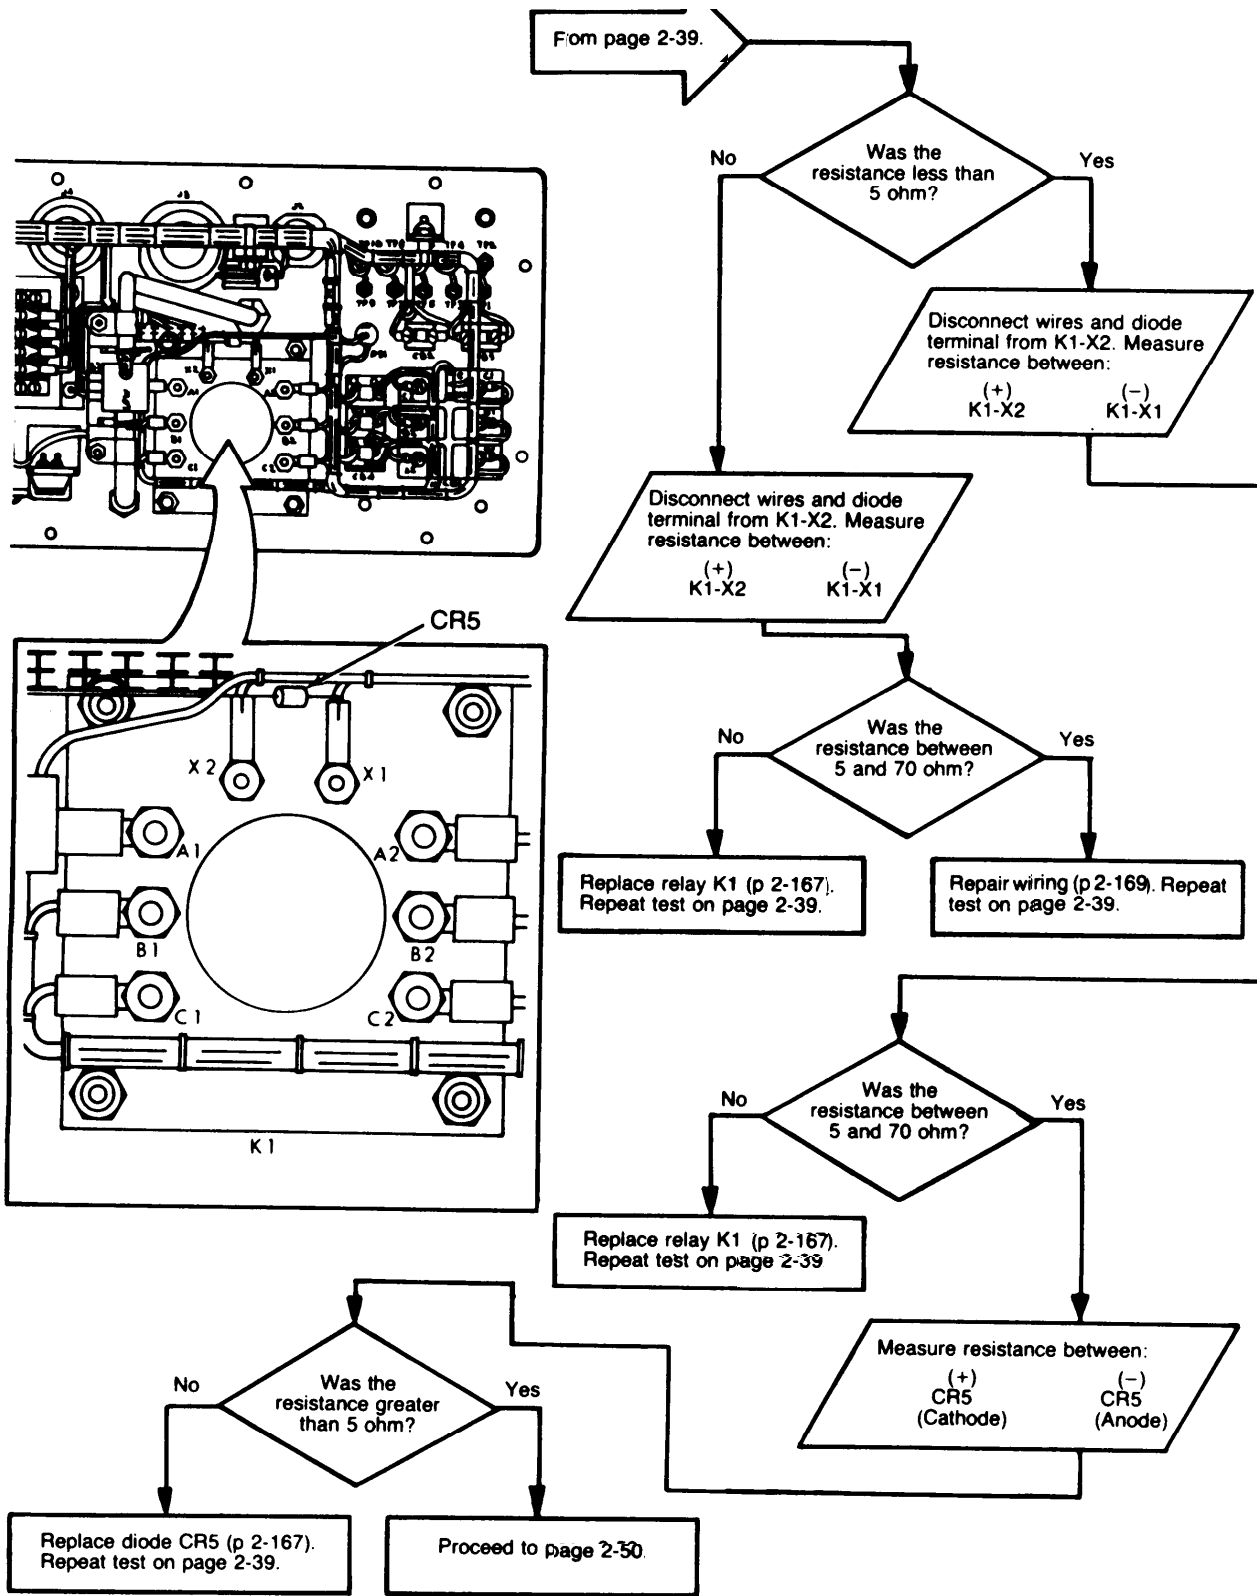


2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

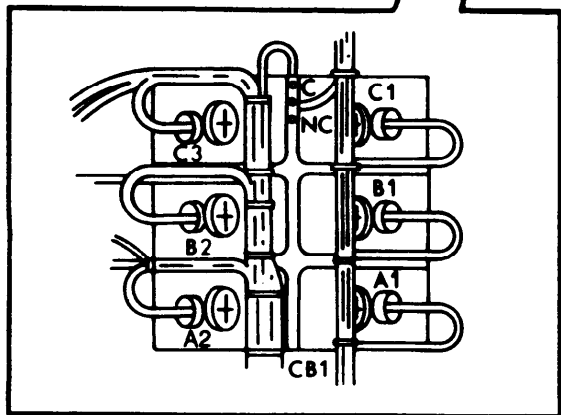
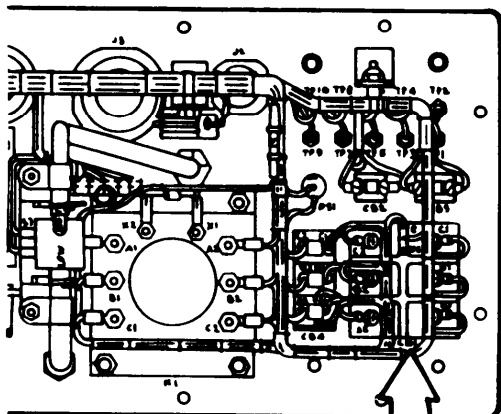
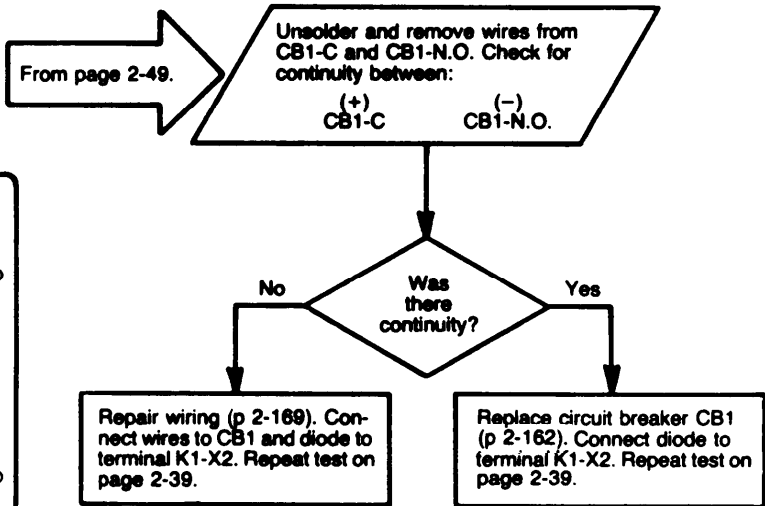


CB1


2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

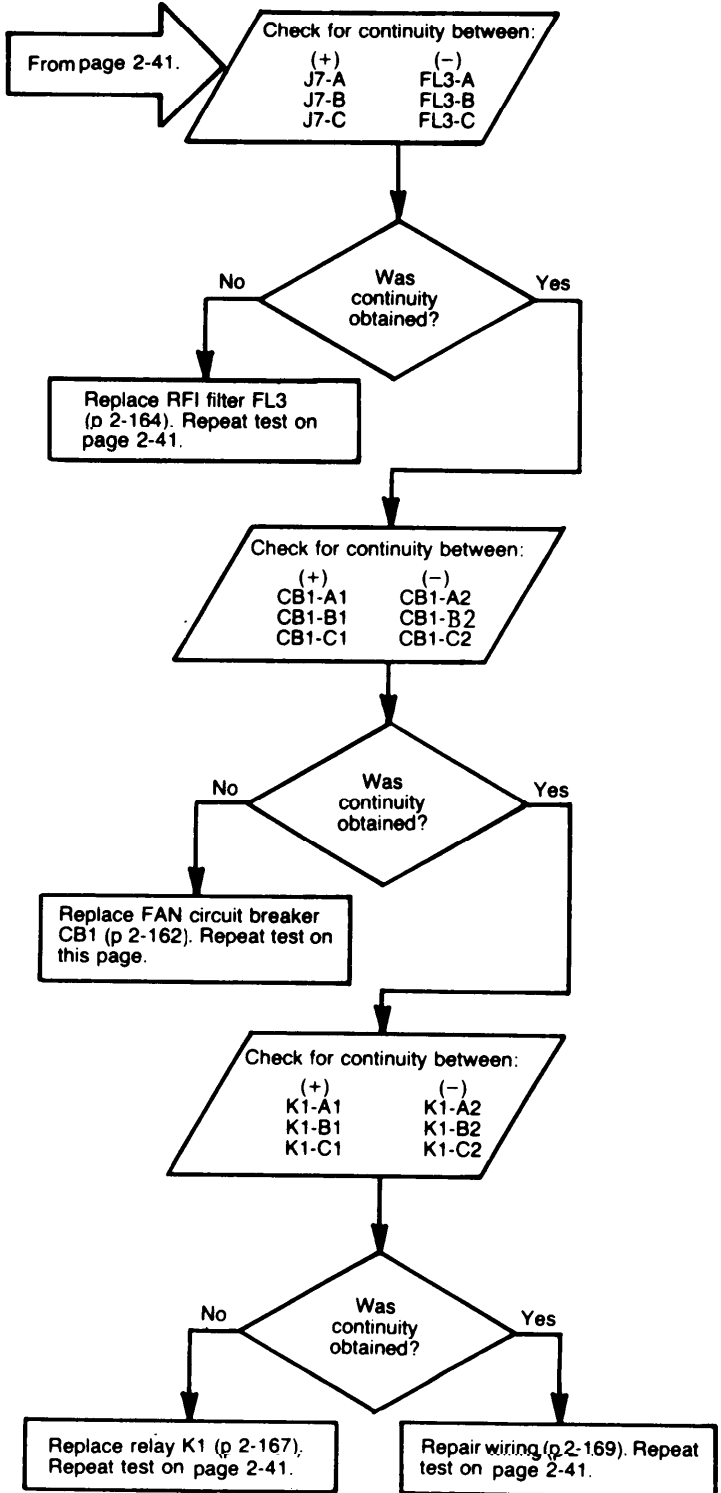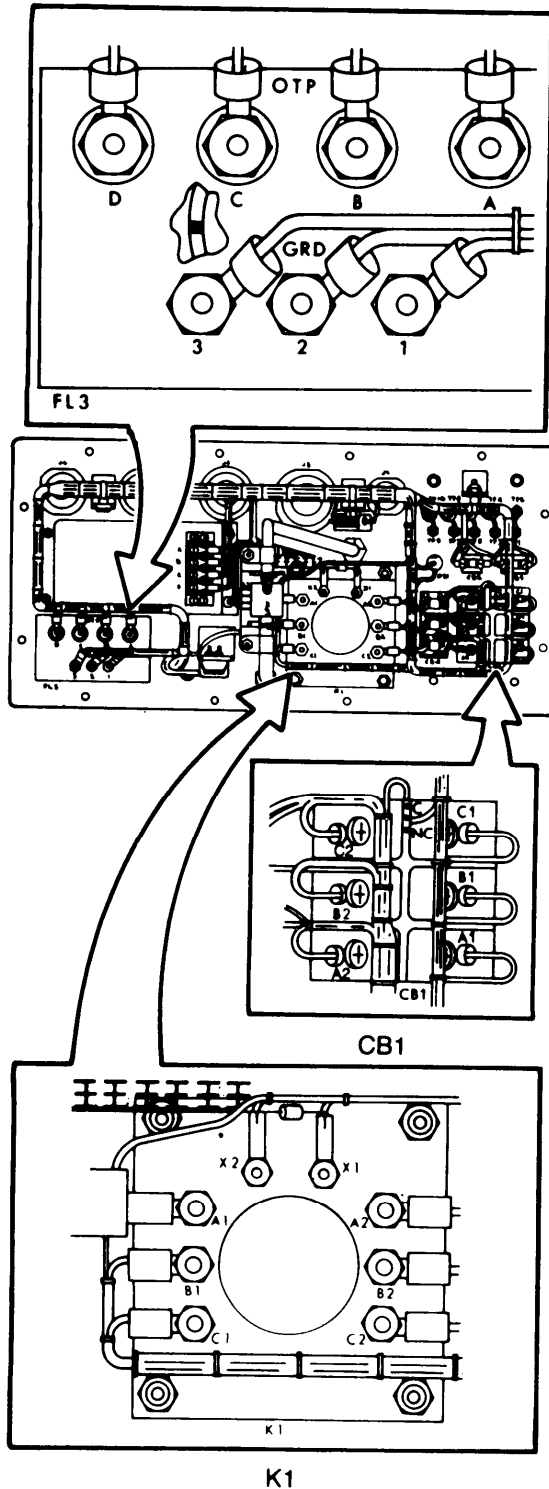



2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

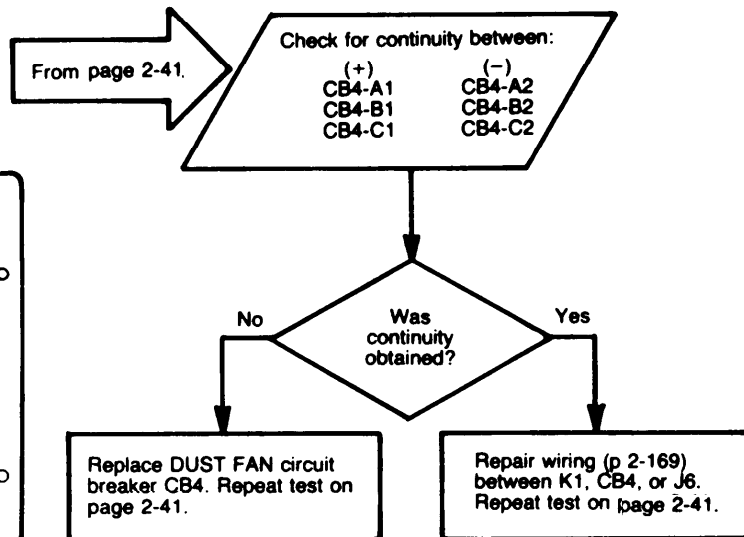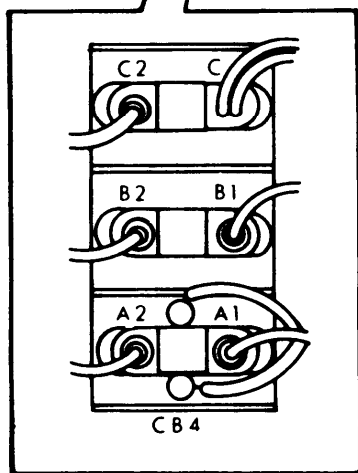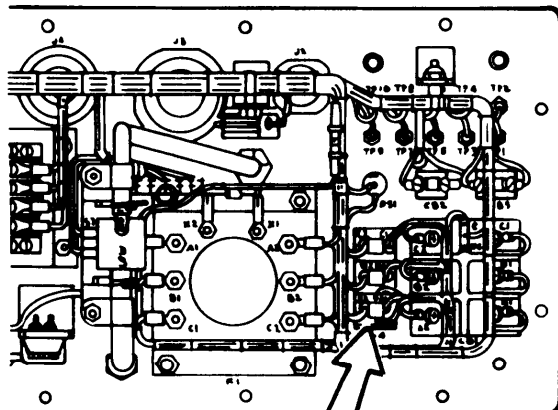



2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

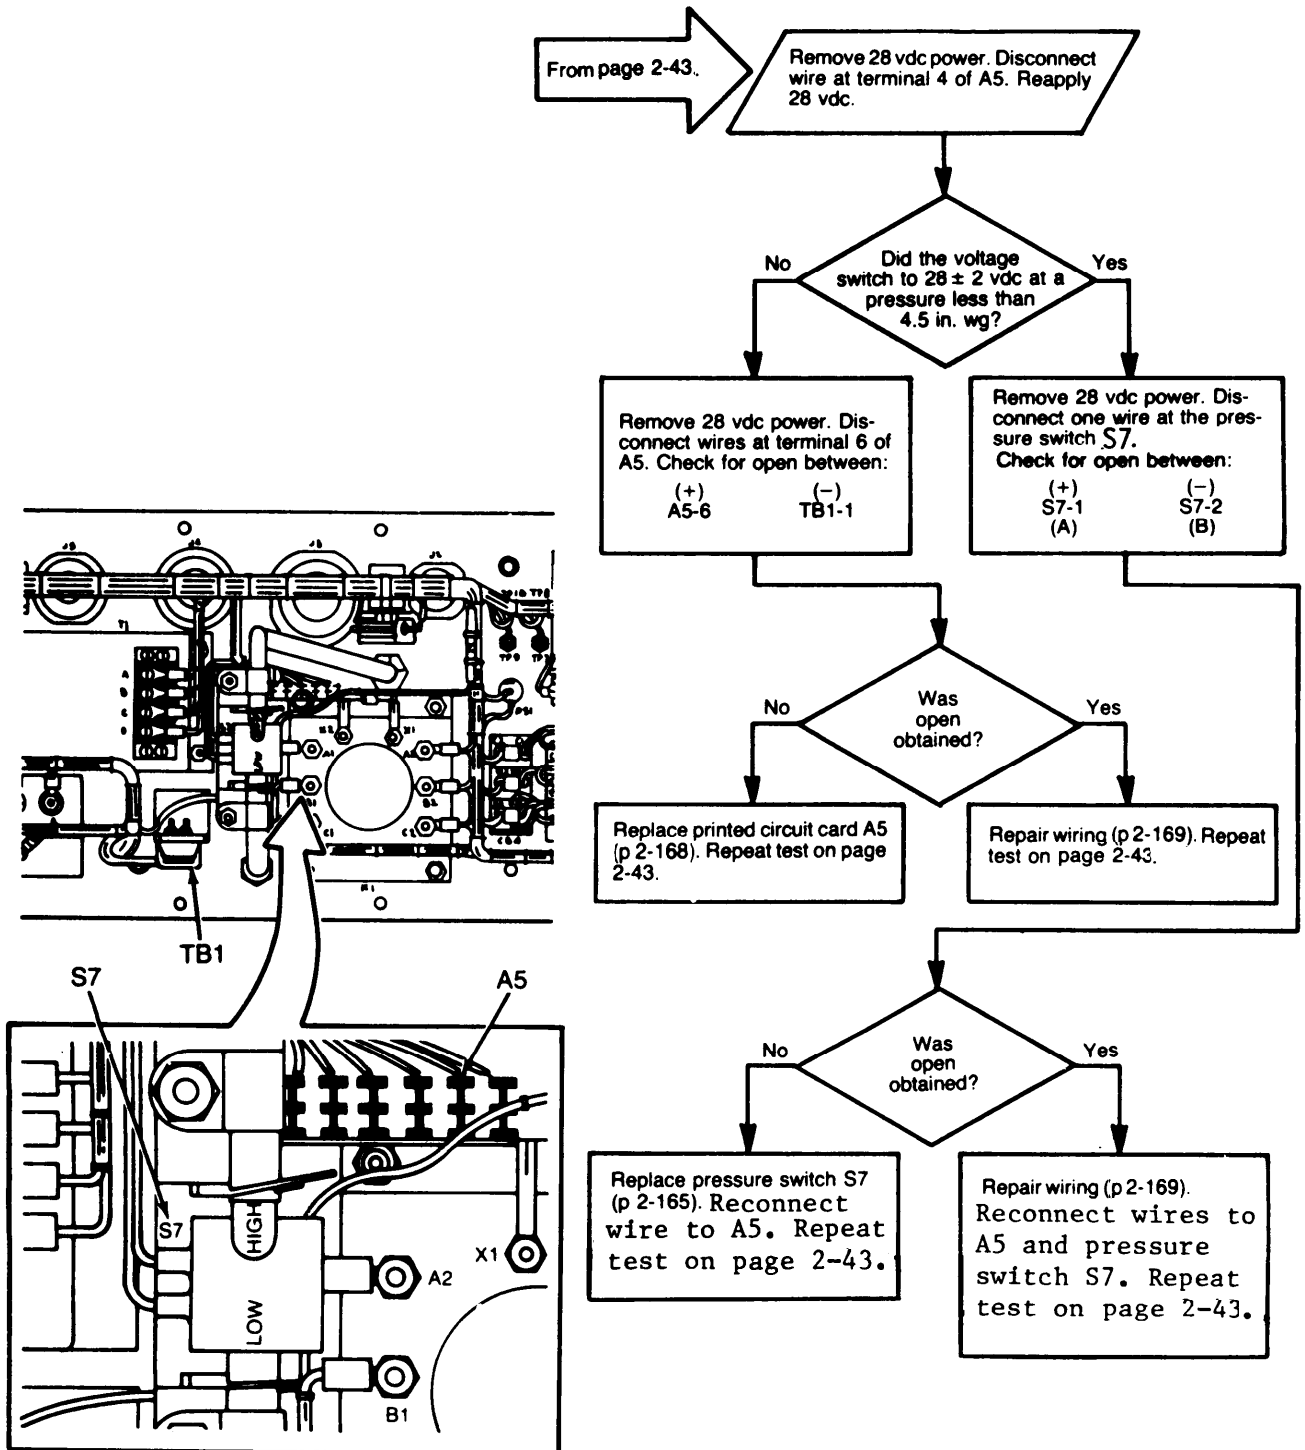


2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

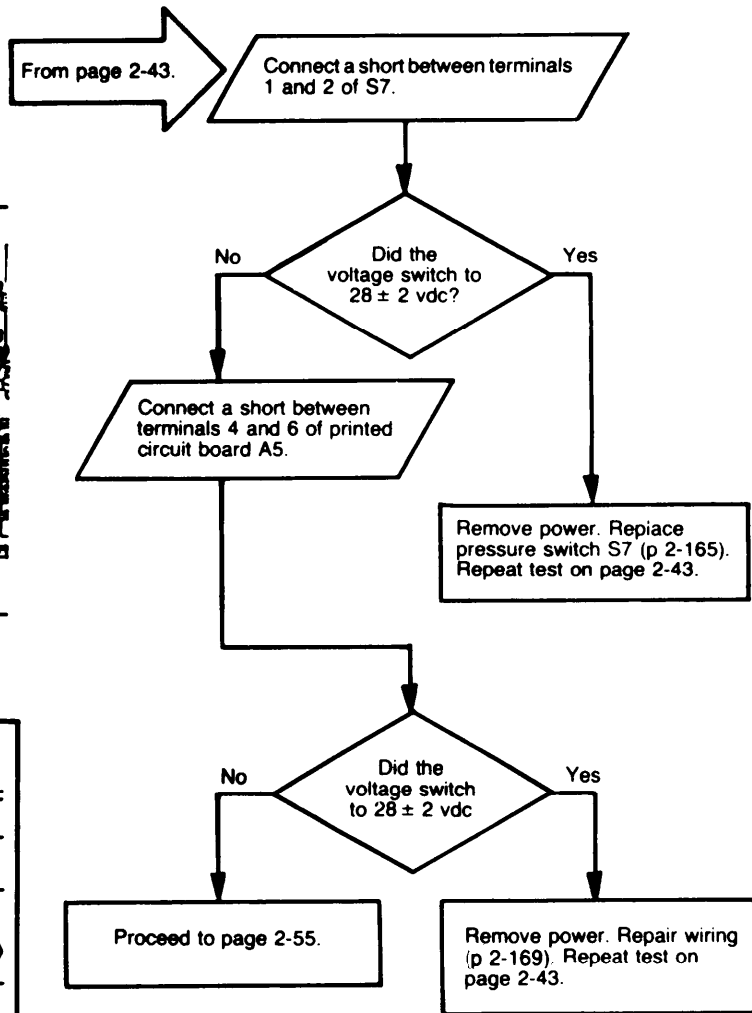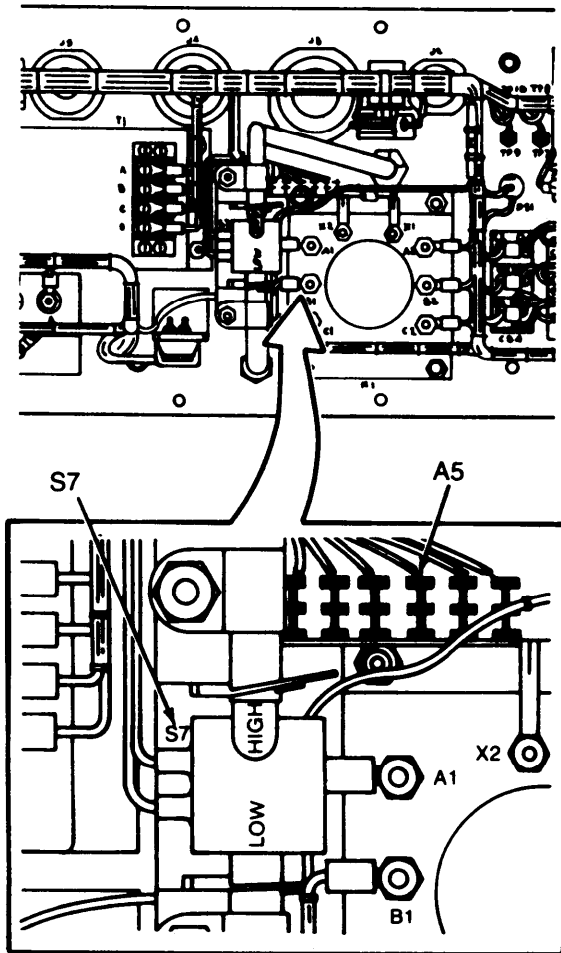

2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

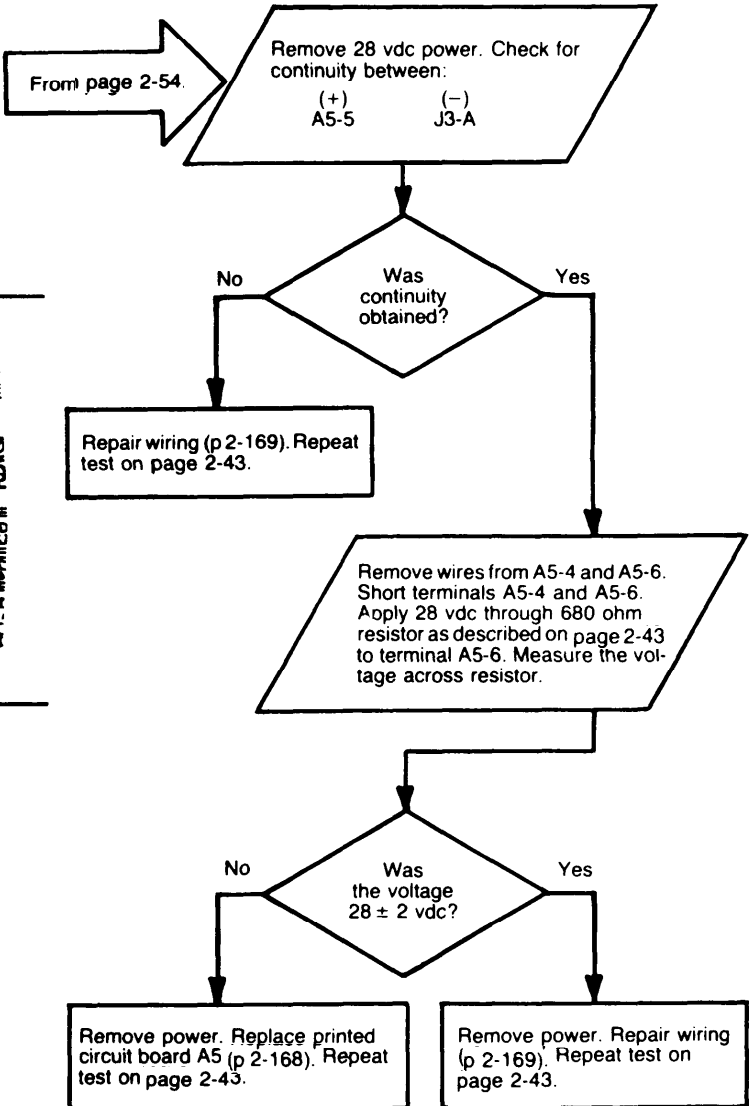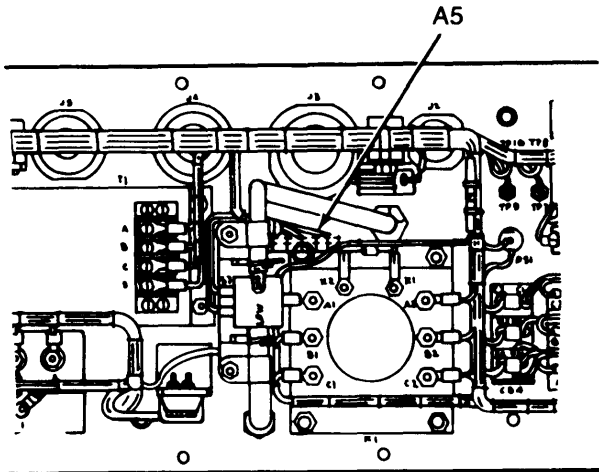


2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

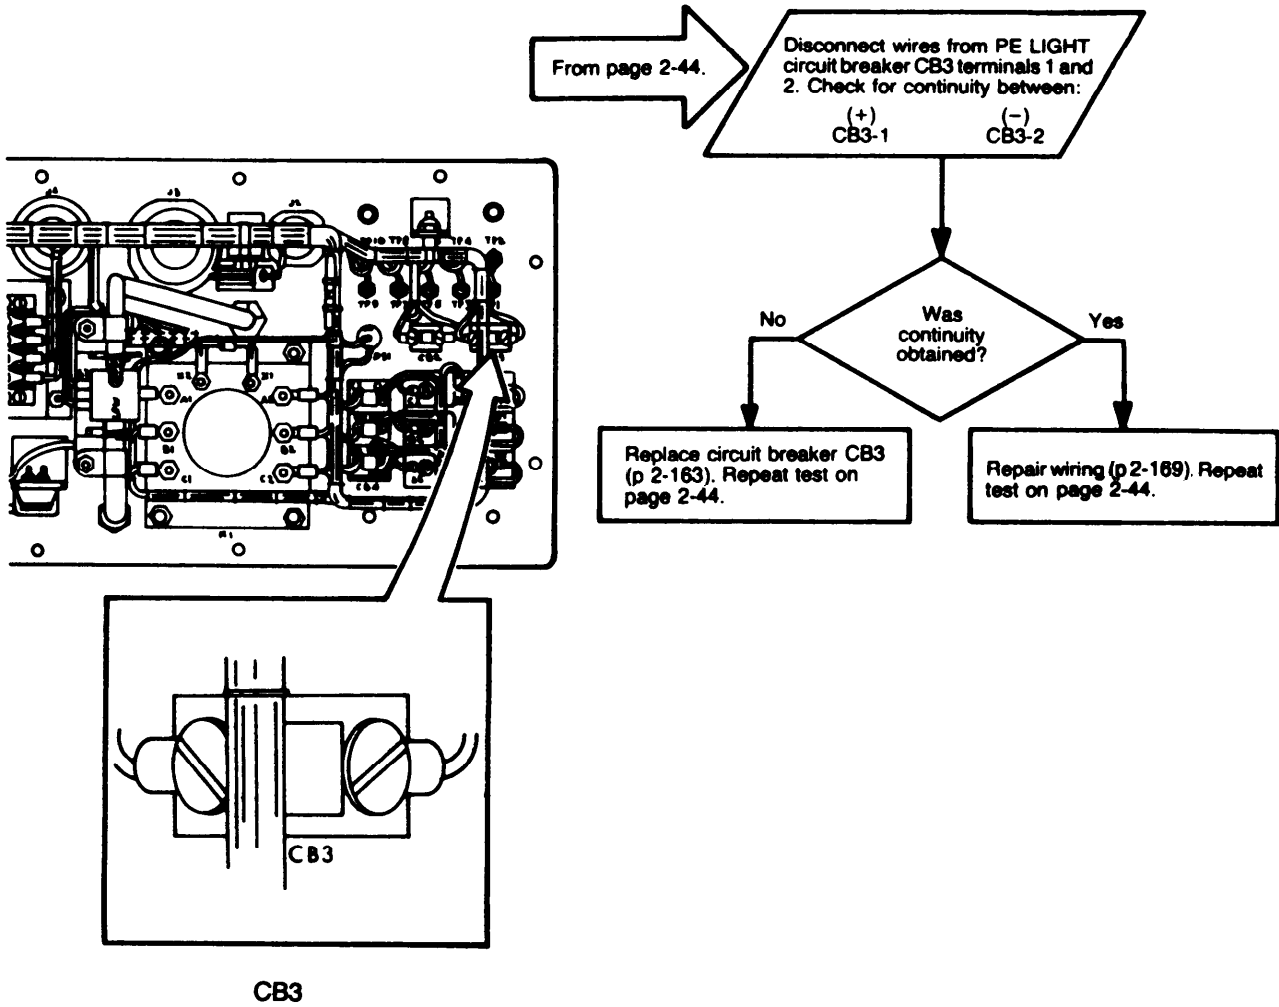





2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

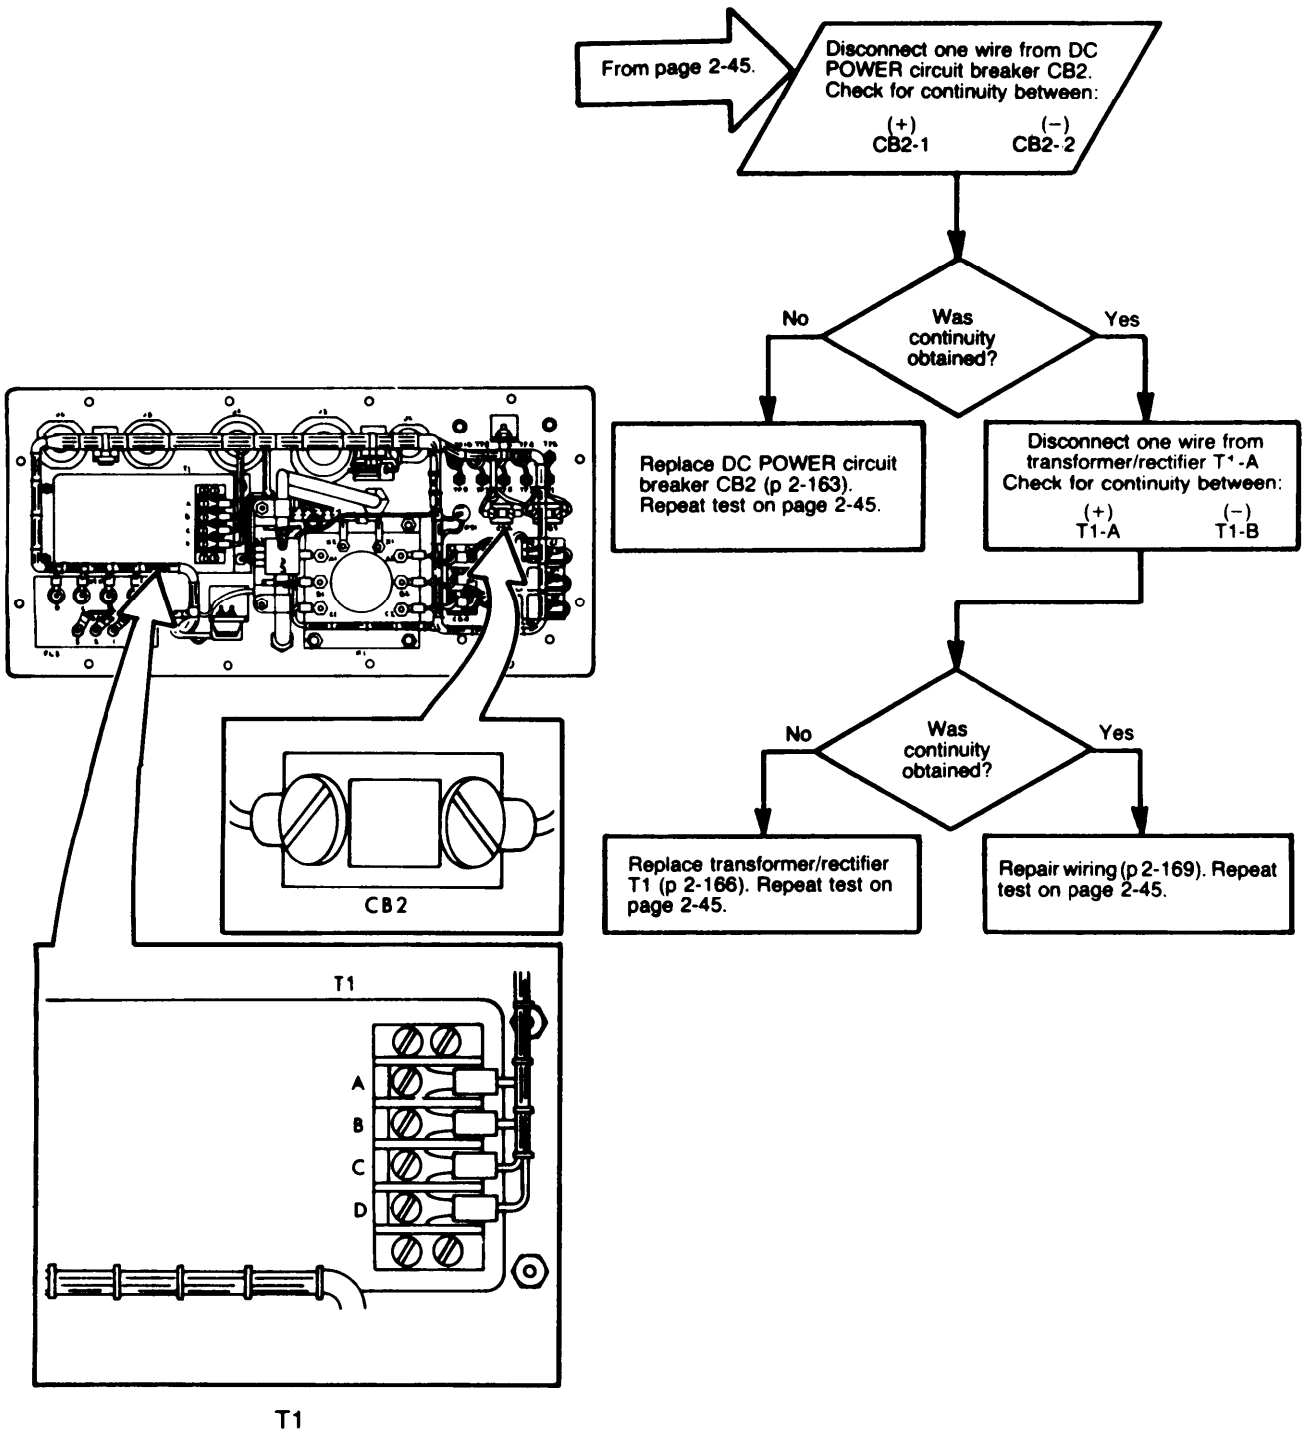



2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

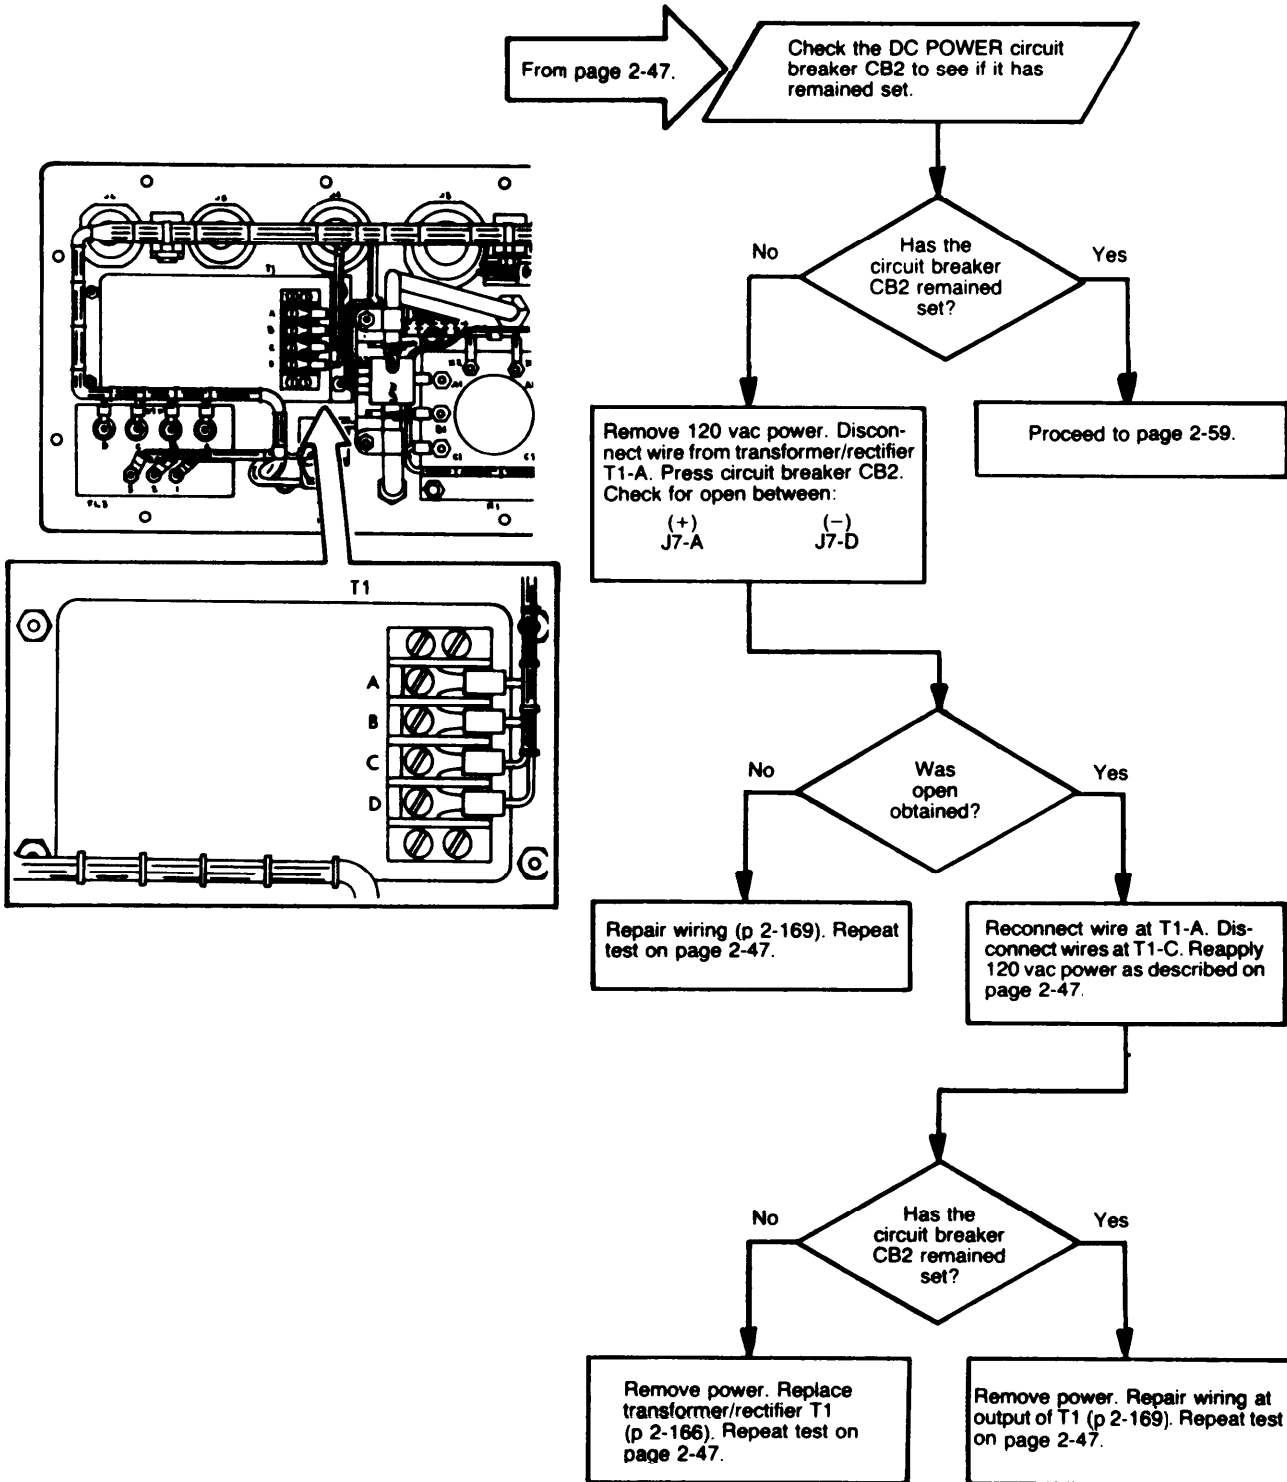



2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

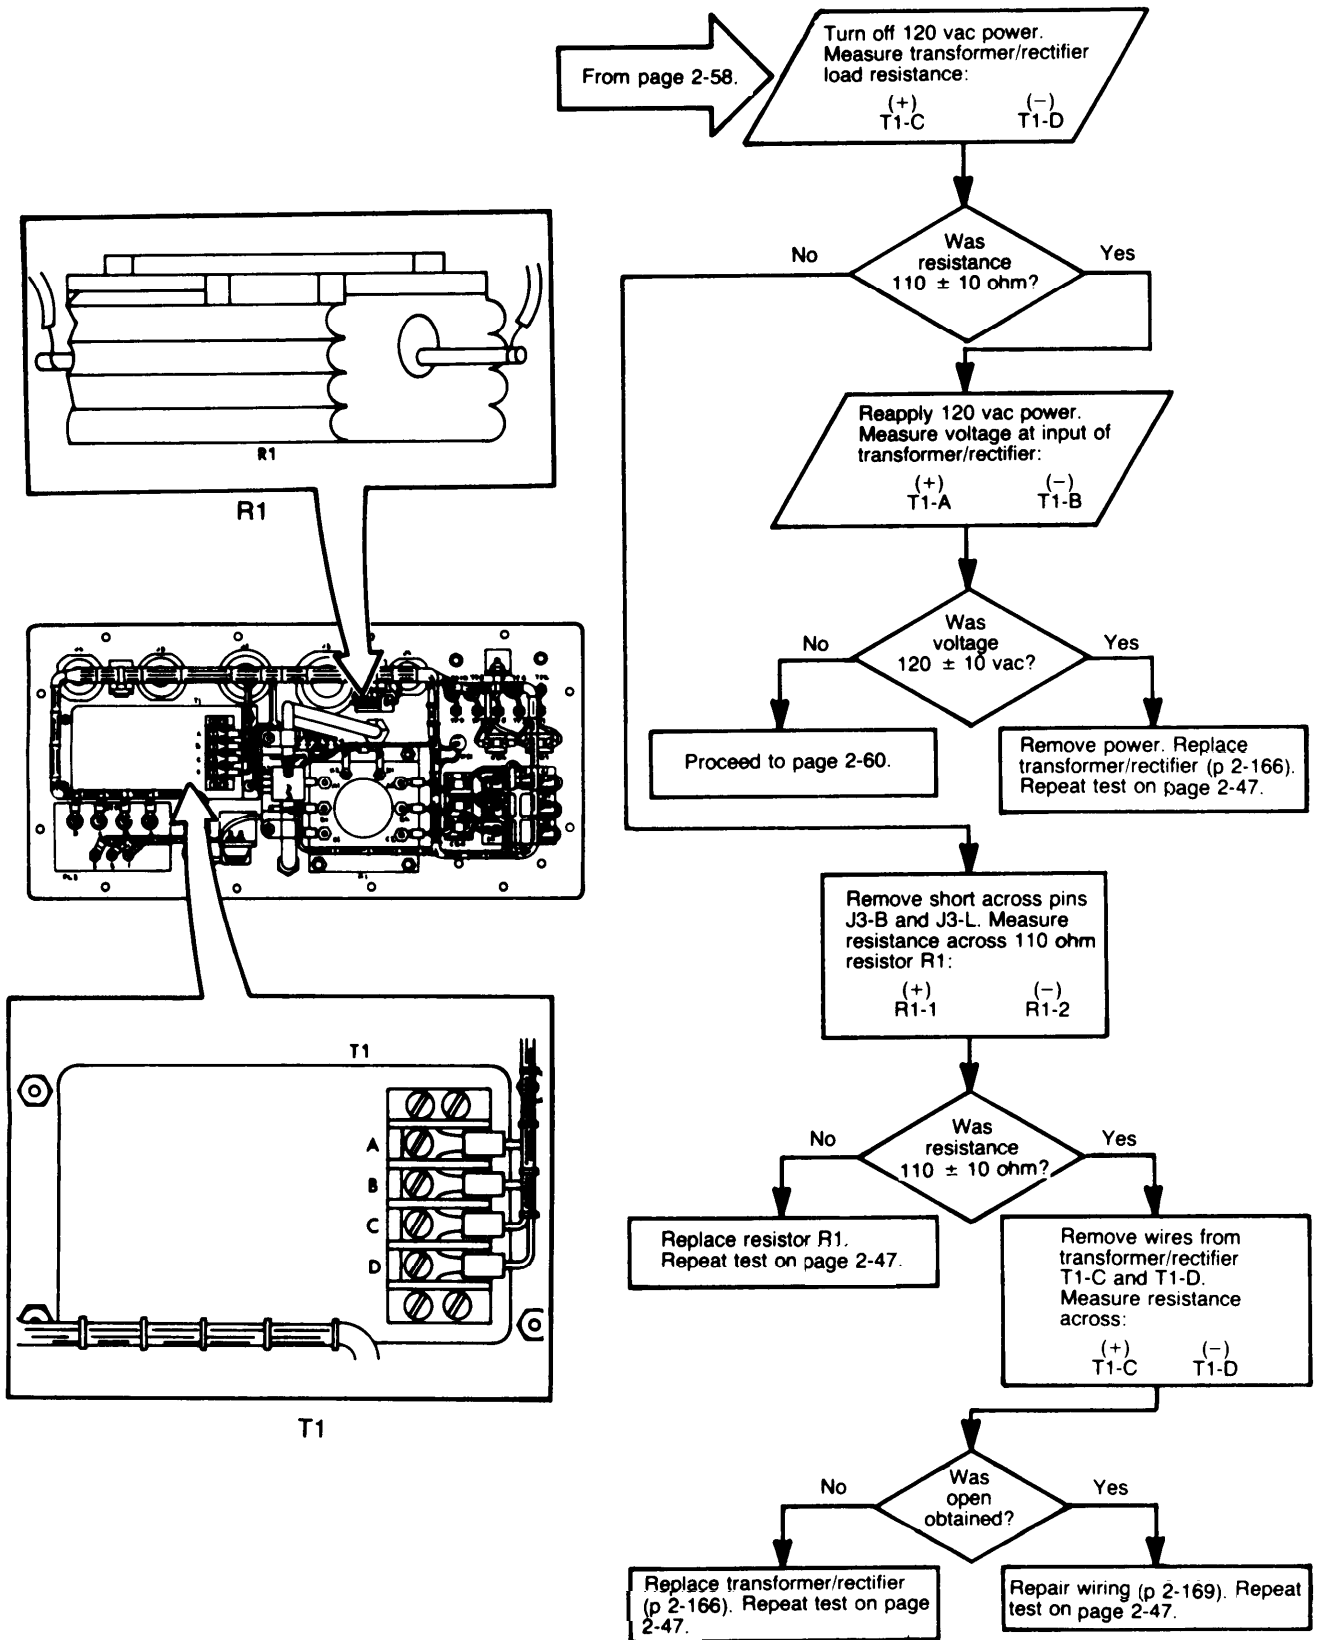




2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

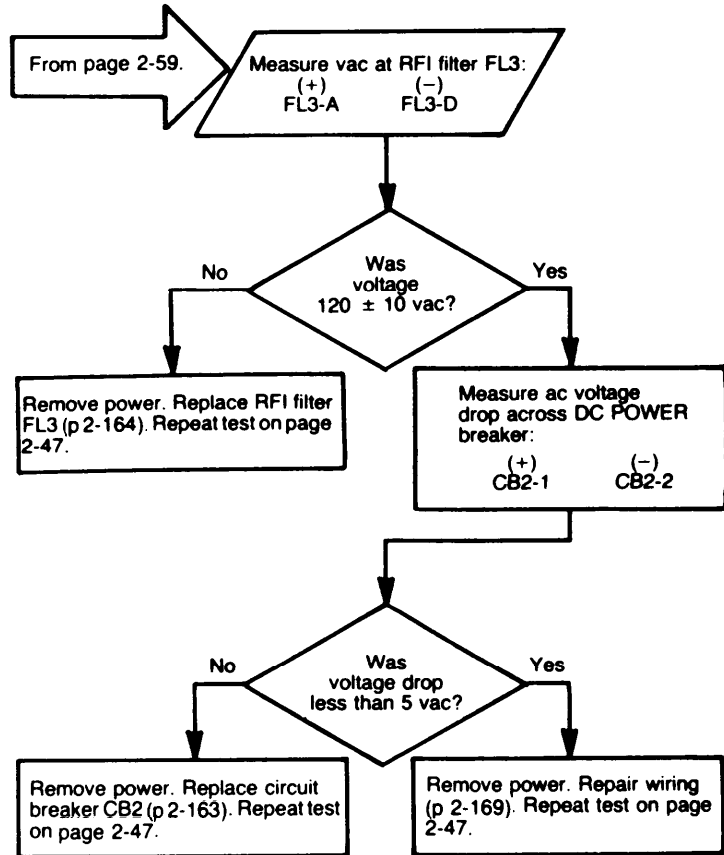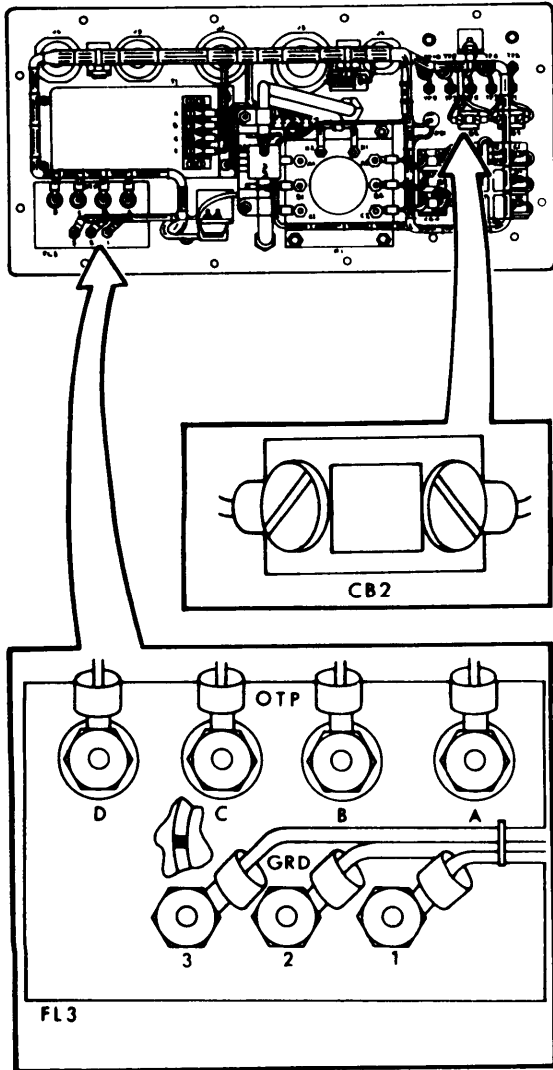


2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

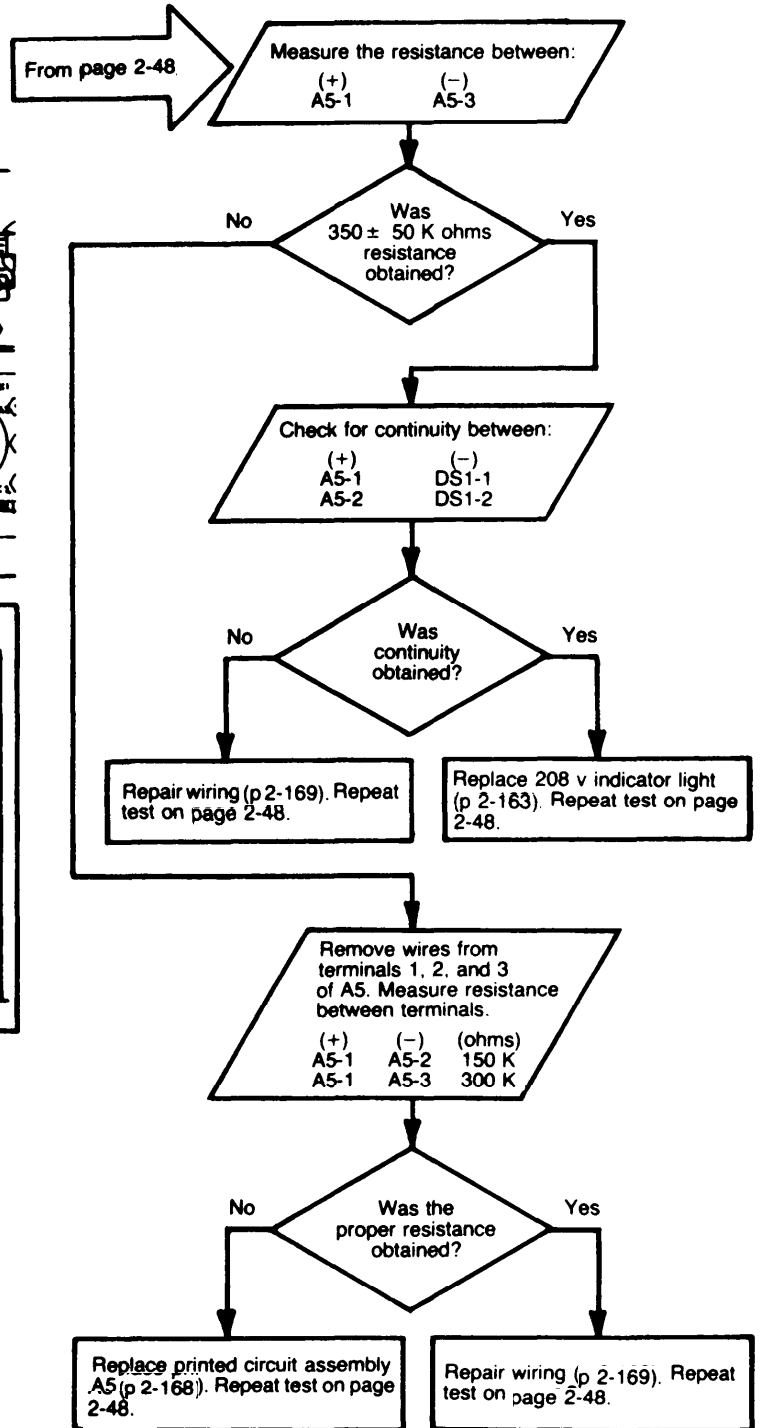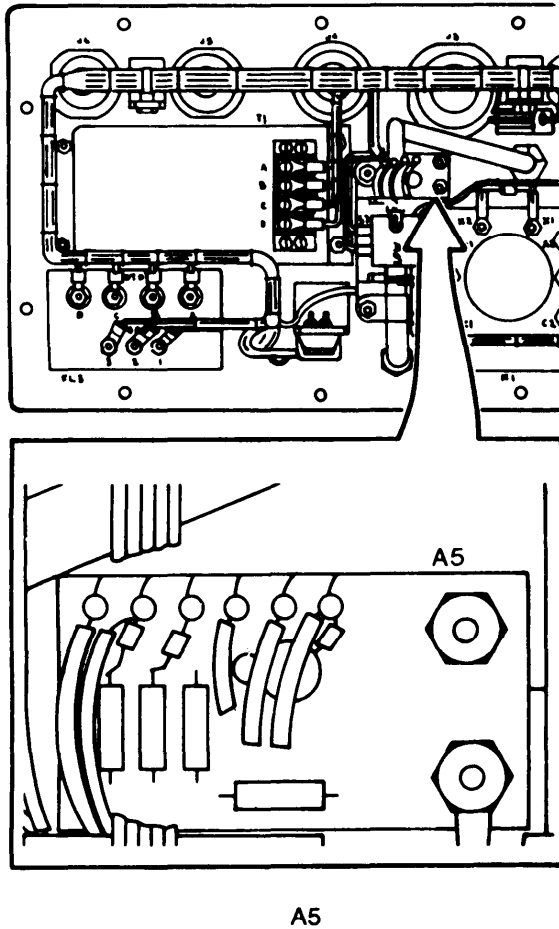

2-6. POWER DISTRIBUTION PANEL TROUBLESHOOTING PROCEDURES (Cont).

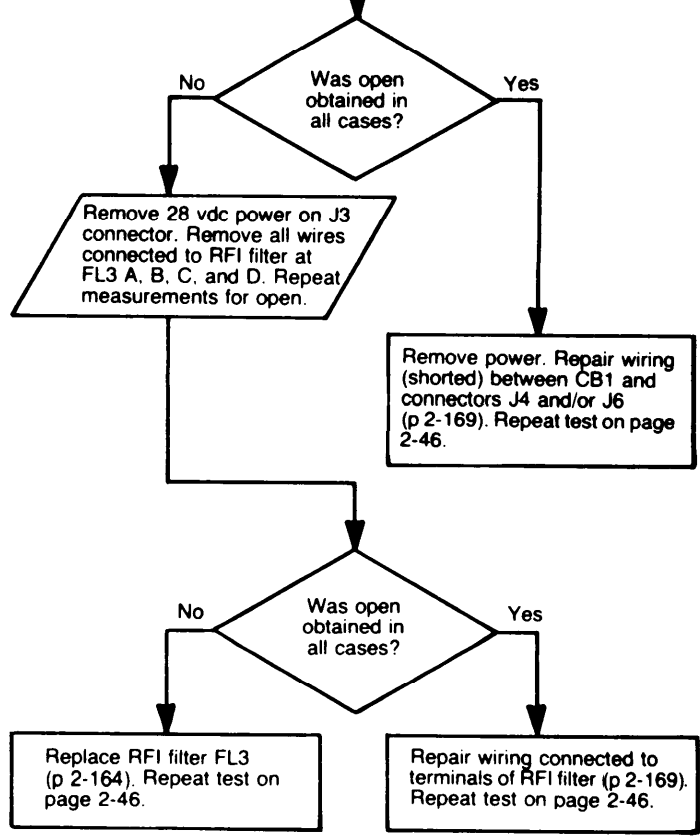
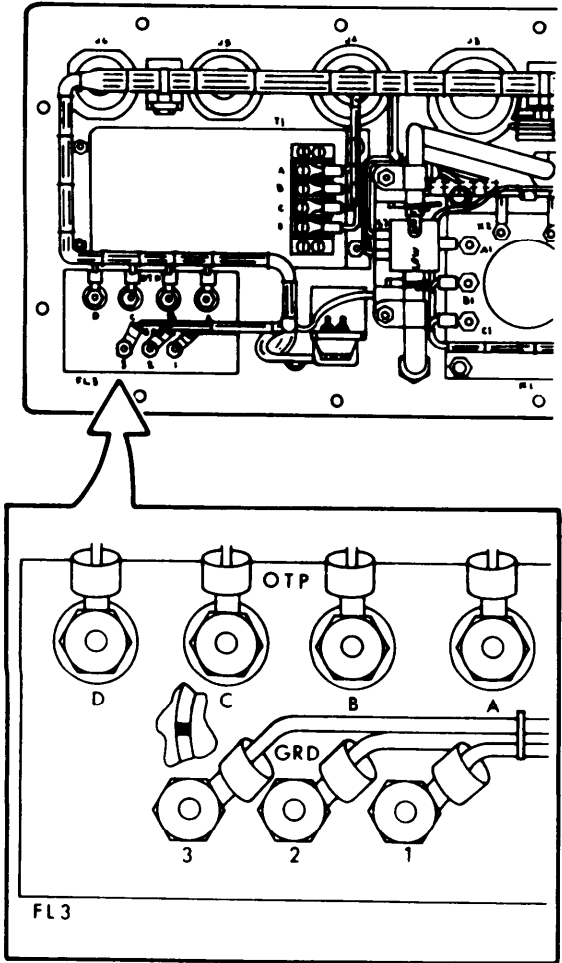
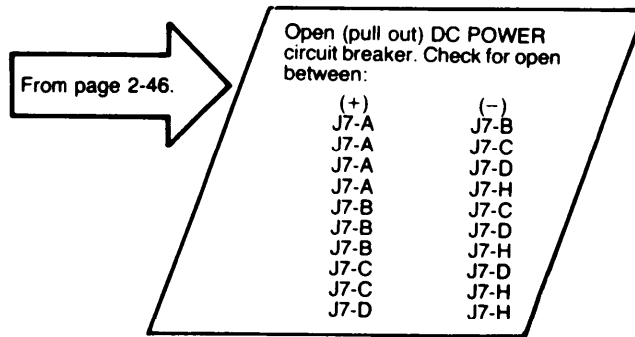


2-7. CCM TROUBLESHOOTING PROCEDURES.

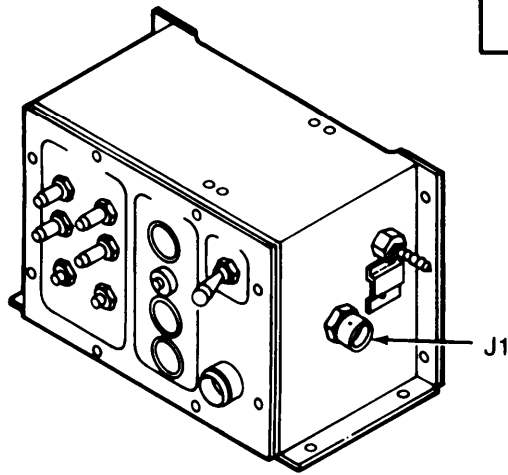


**NOTE**


All voltages are dc and are measured with respect to dc return (TB1-2 thru 8) unless otherwise specified.

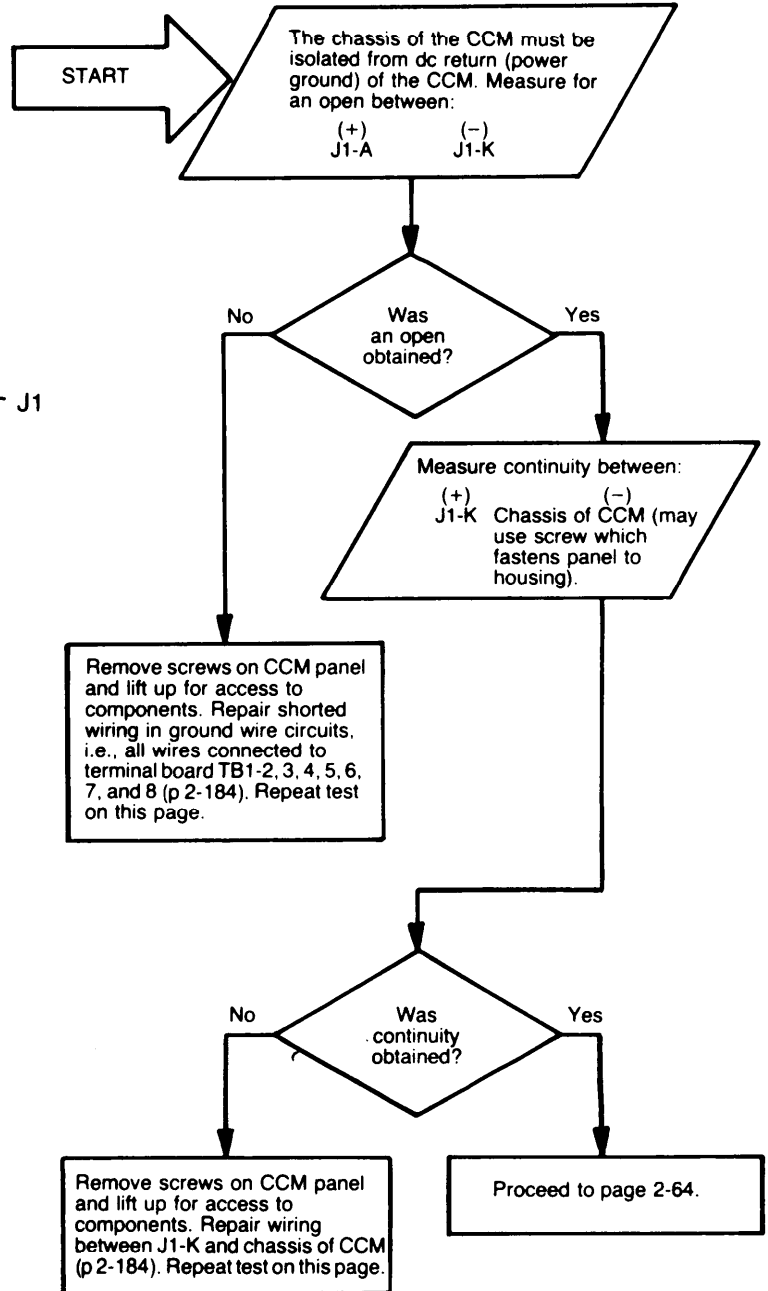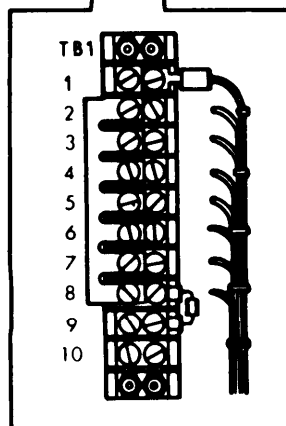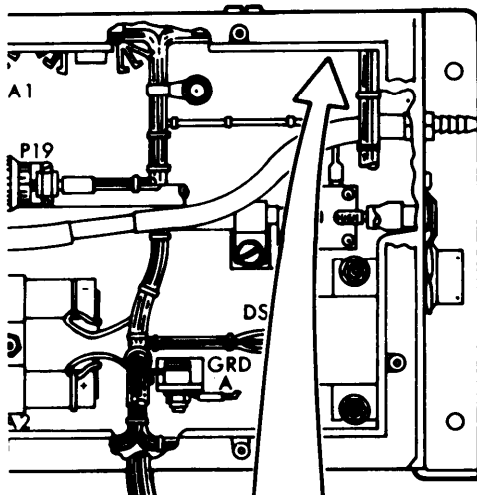

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).


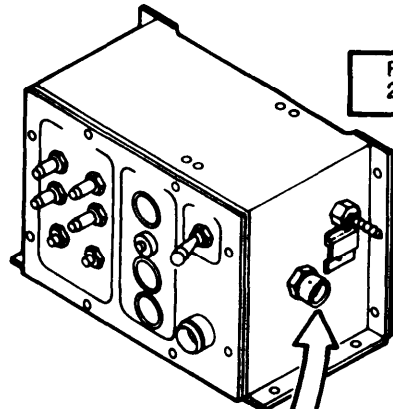


From page 2-63.


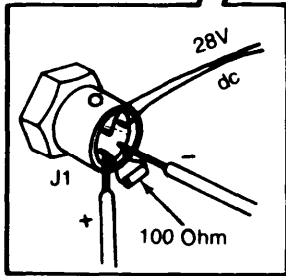


With the POWER switch S9 OFF, open (pull out) all circuit breakers until white shows on shaft. Connect a 100 ohm, 10 watt resistor across terminals J1-P and J1-N. Apply 28 vdc to J1 connector:  
 Pin B - positive  
 Pin A - negative  
 Measure the voltage across resistor:

Power application or removal on the following pages is accomplished by making or breaking connections to pins A and B of J1 or by setting the power source on or off.

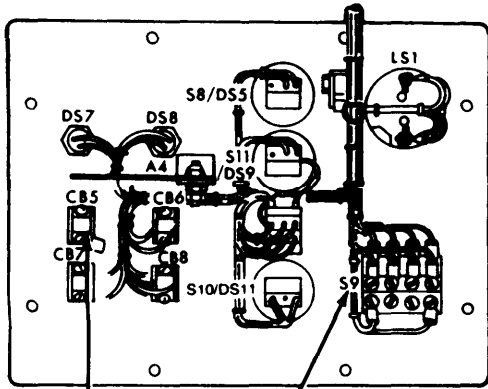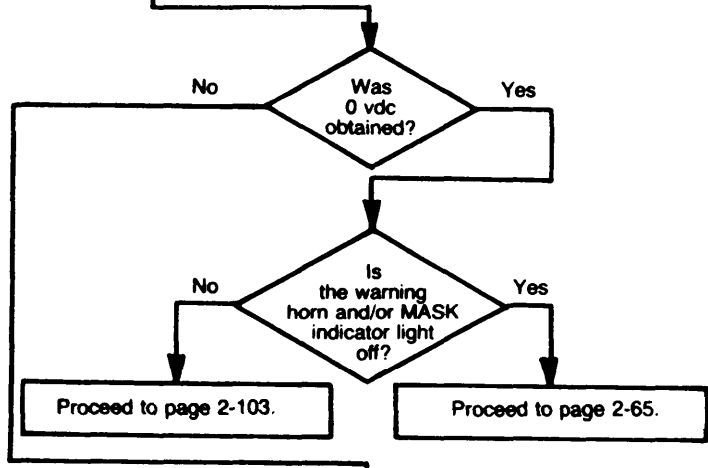


Remove screws on CCM panel and lift up for access to components. Remove power. Disconnect wires (11 and 12) from S9-8 and S9-11. Apply power.

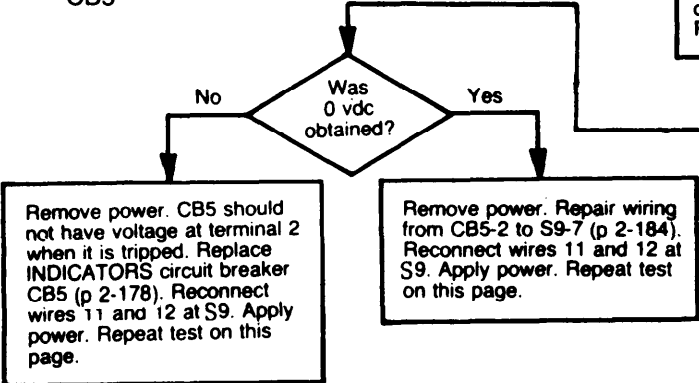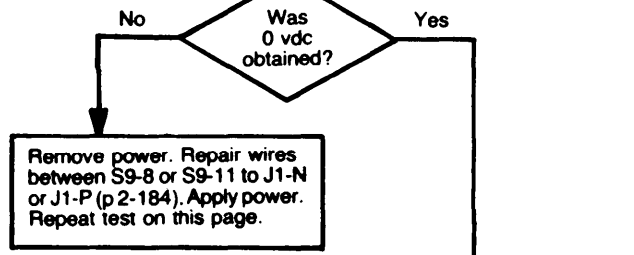


Remove power. Disconnect wires from CB5-2. Measure voltage at CB5-2.  
 (+) CB5-2 (-) TB1-2  
 Apply power.







2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

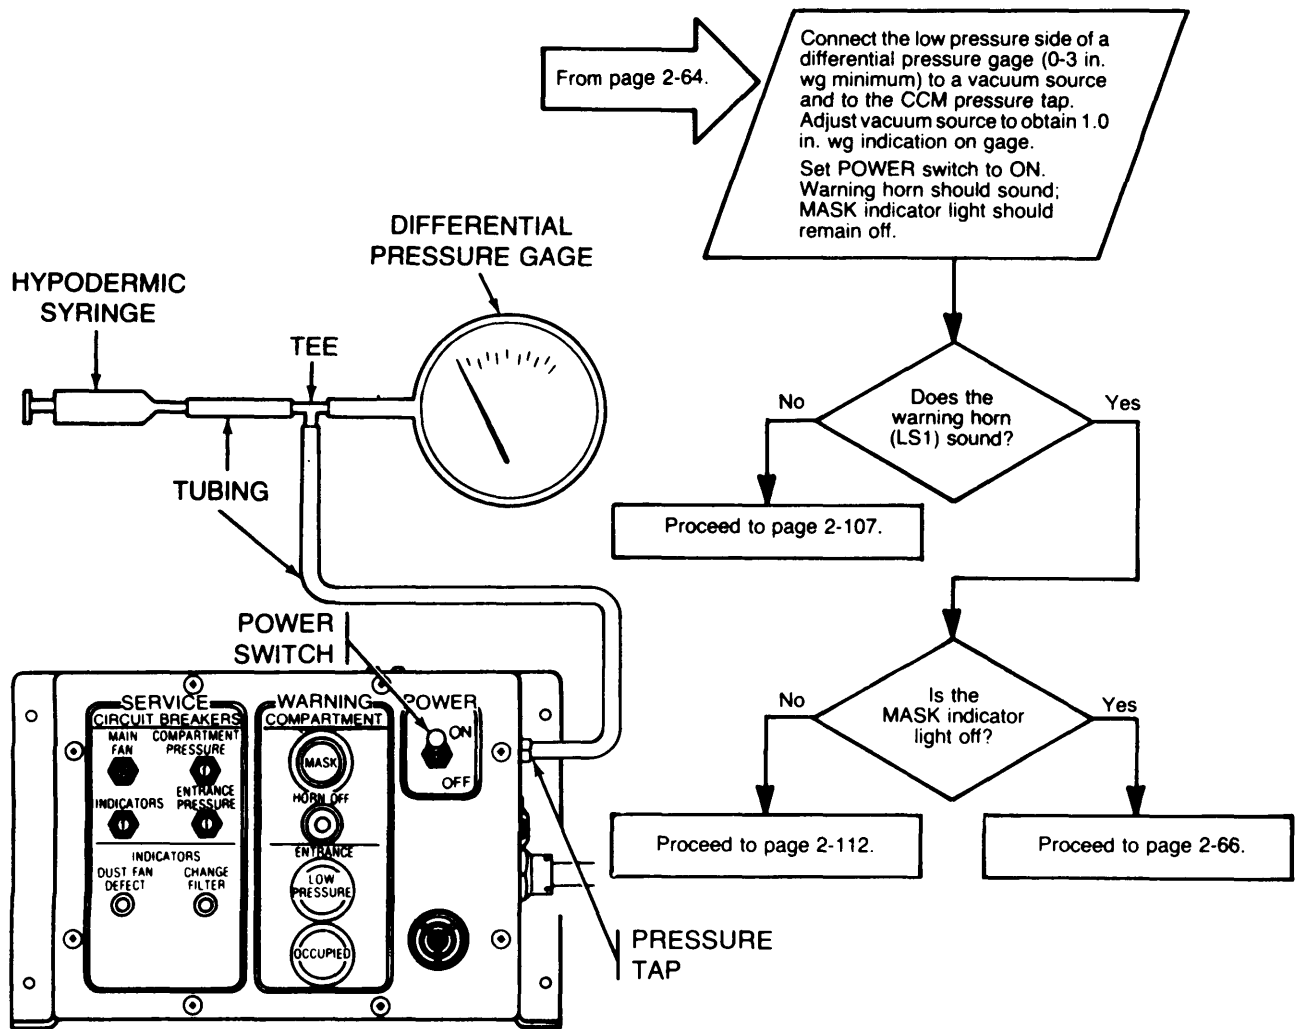


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

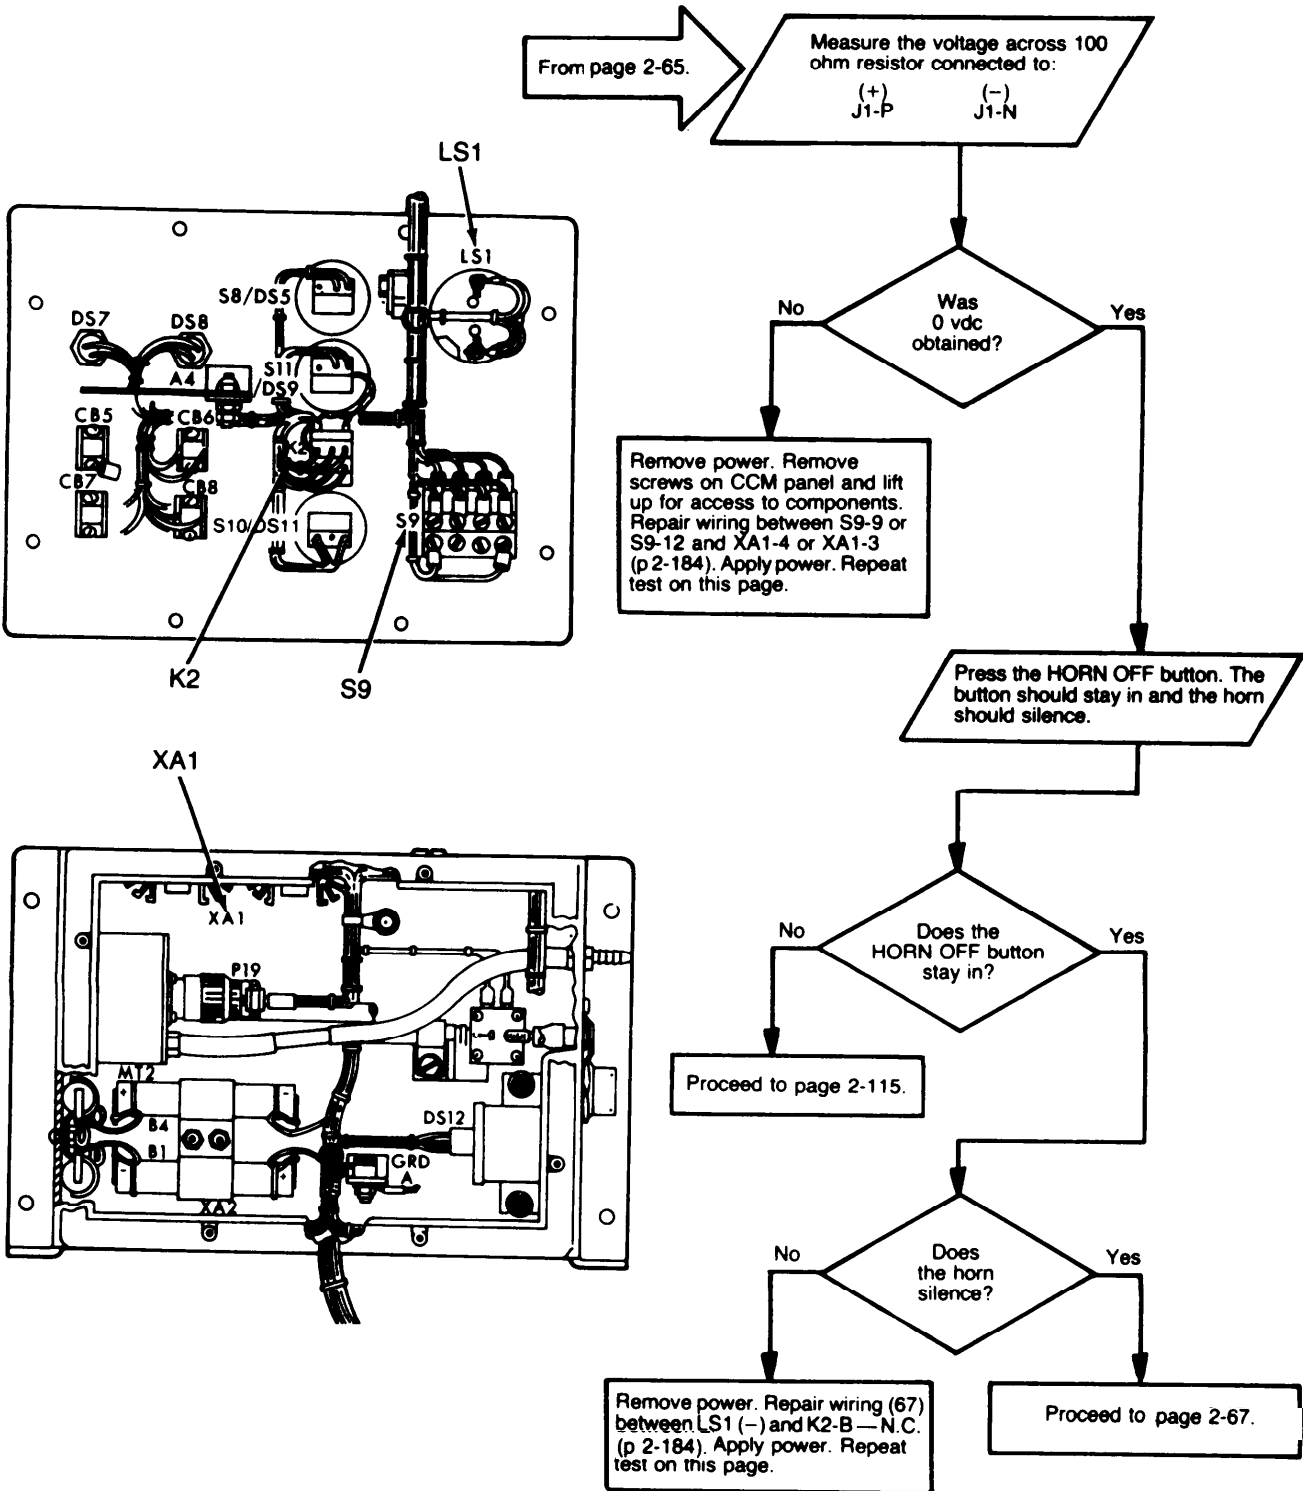


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

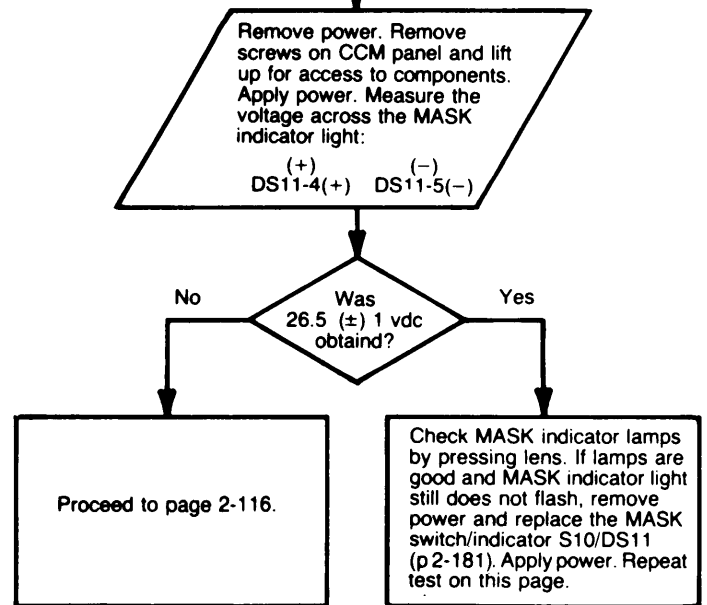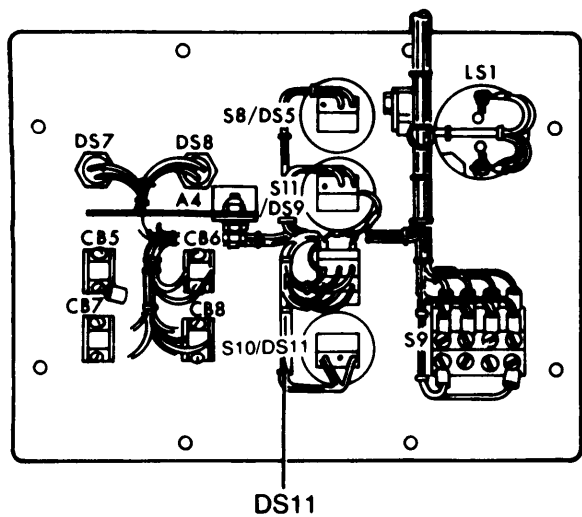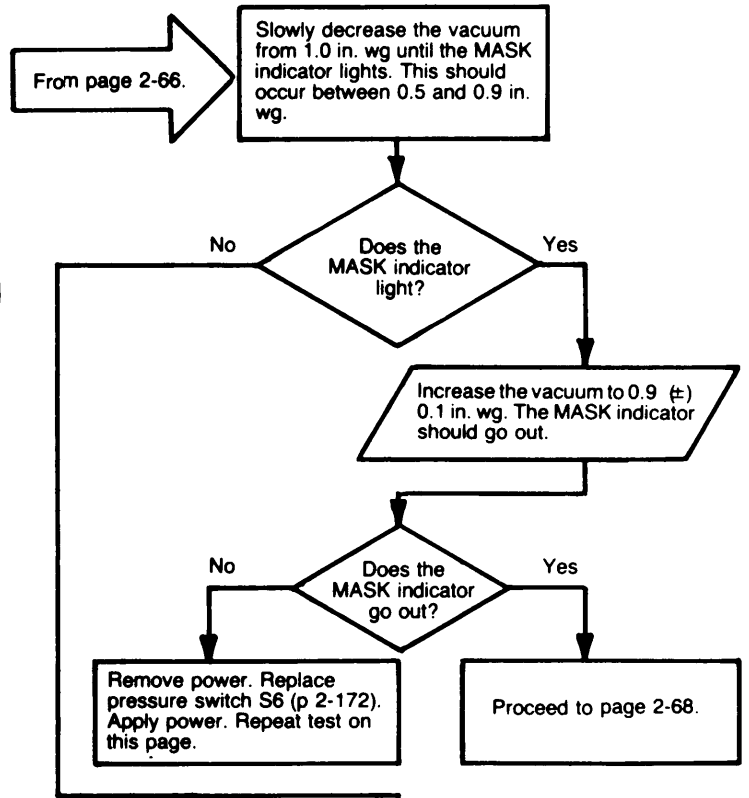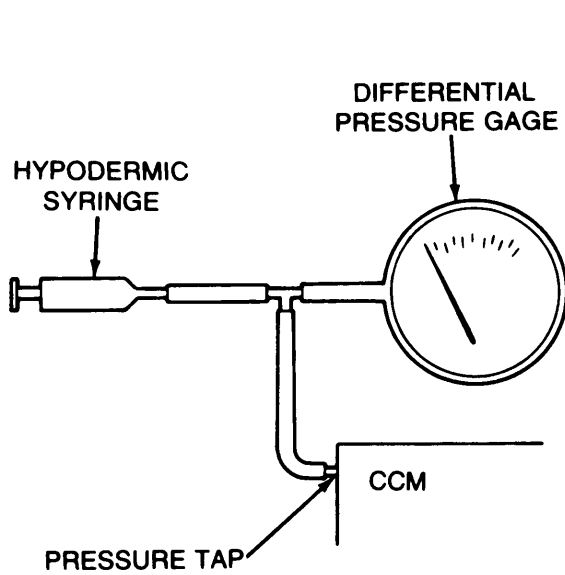



2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

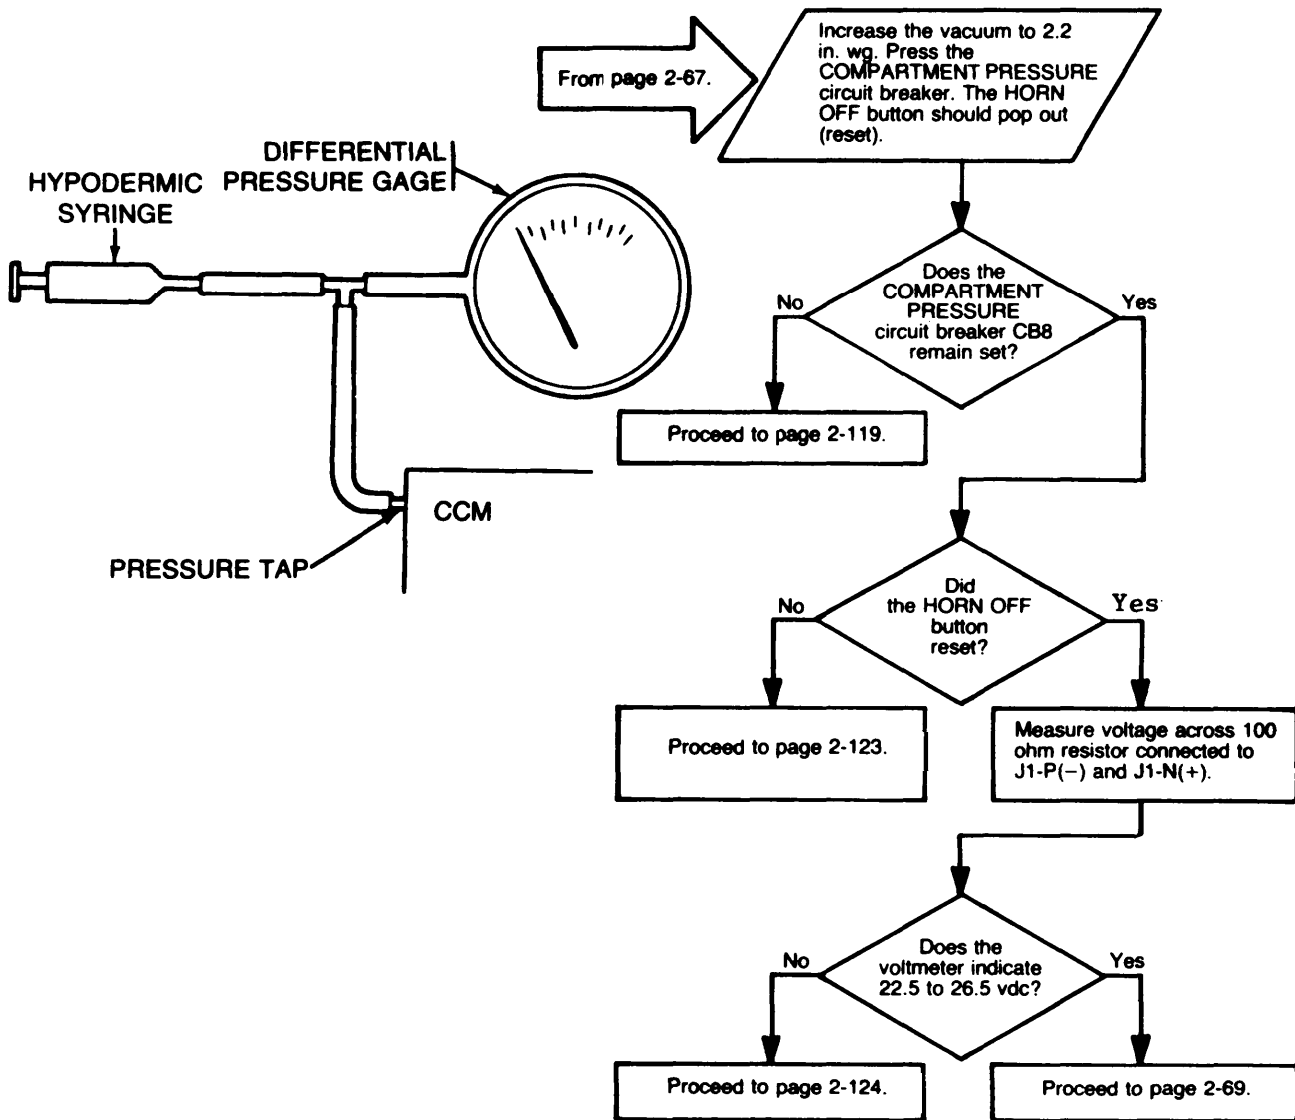


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

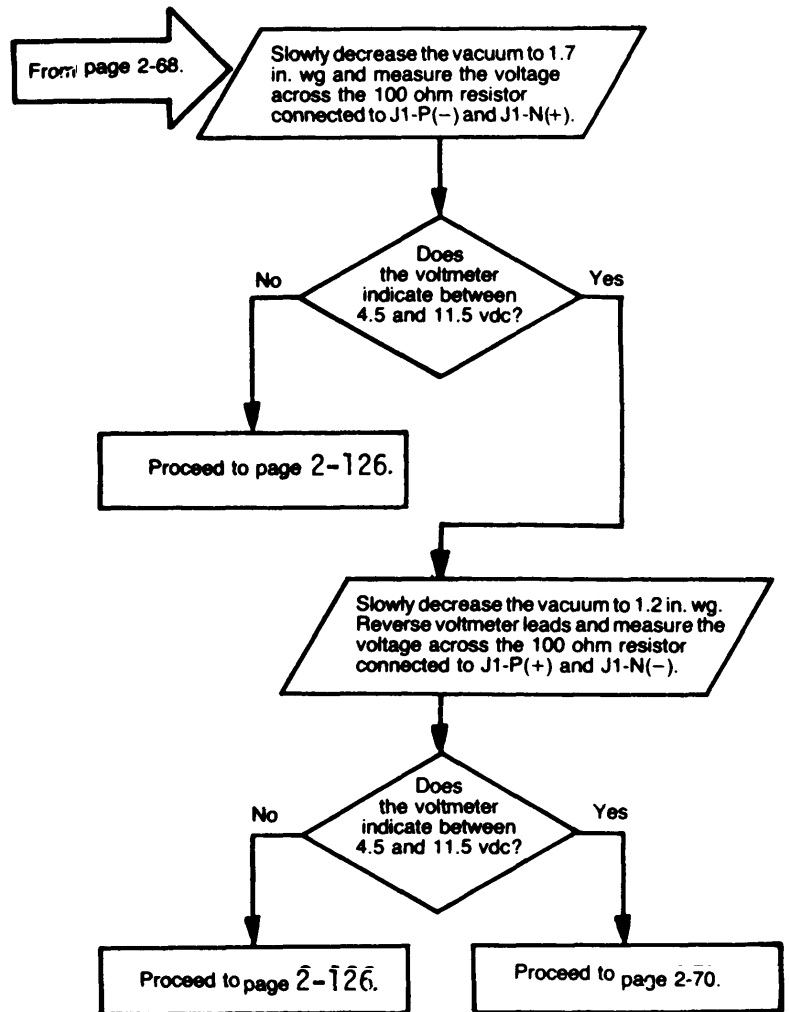



2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

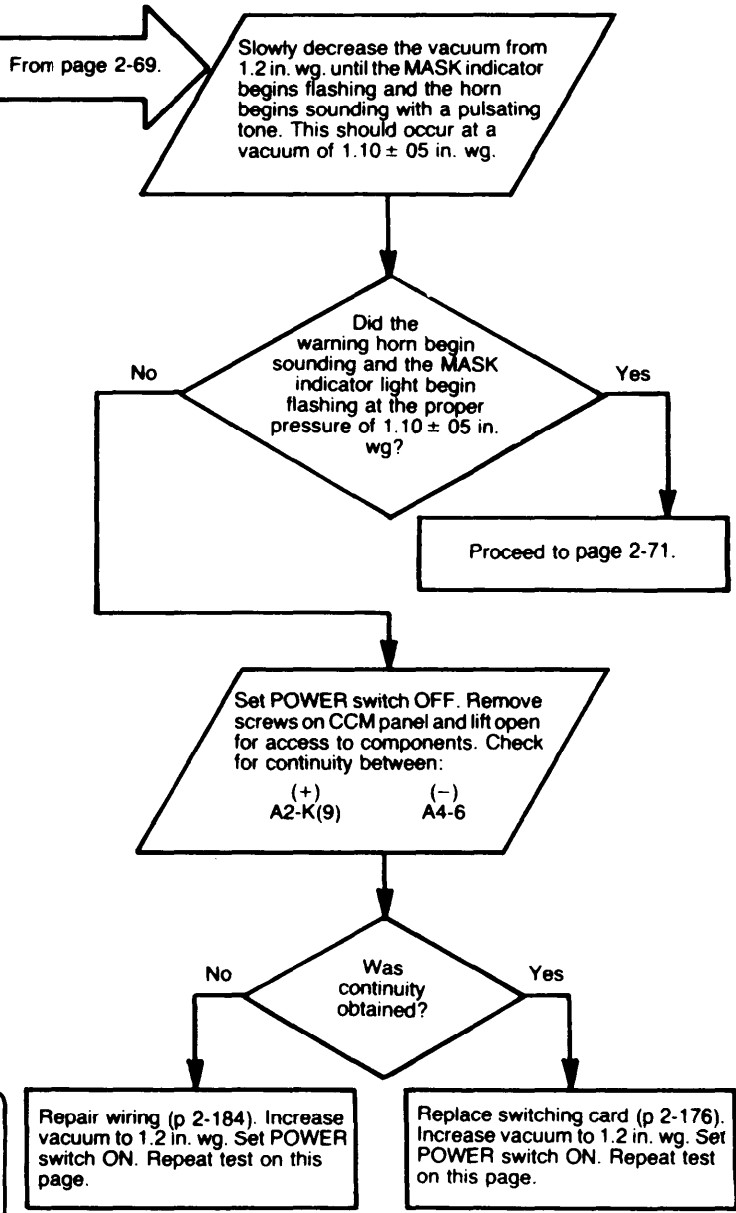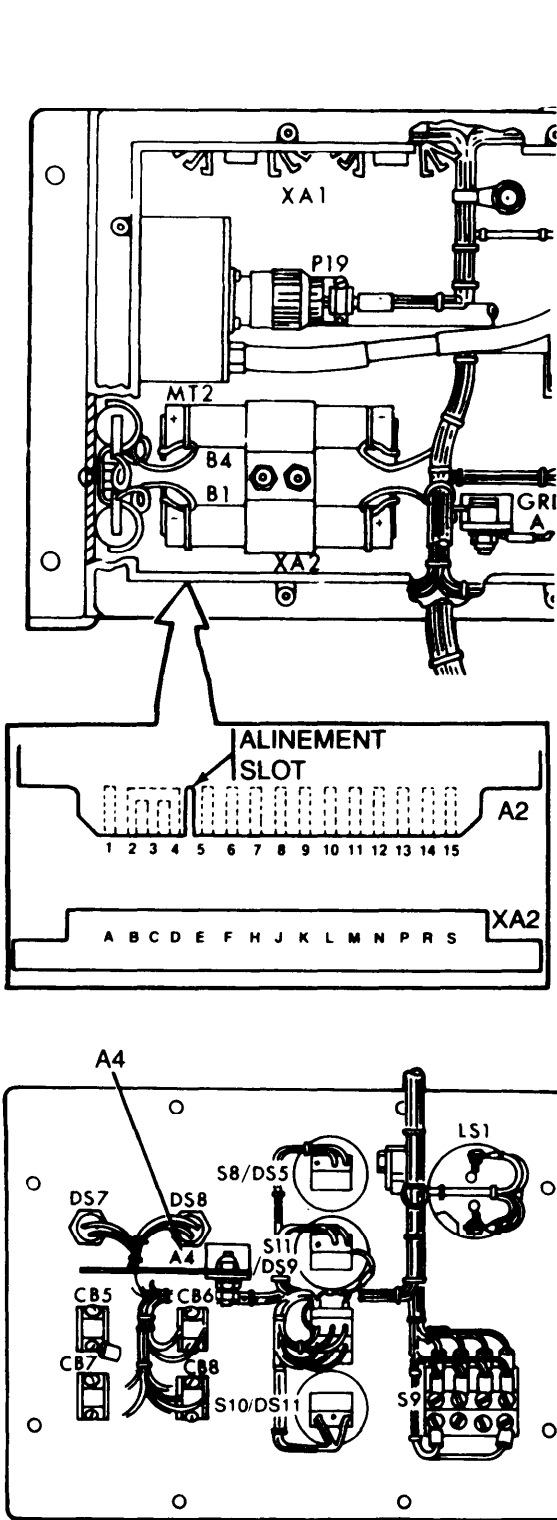

2-7. CCM TROUBLESHOOTING PROCEDURES

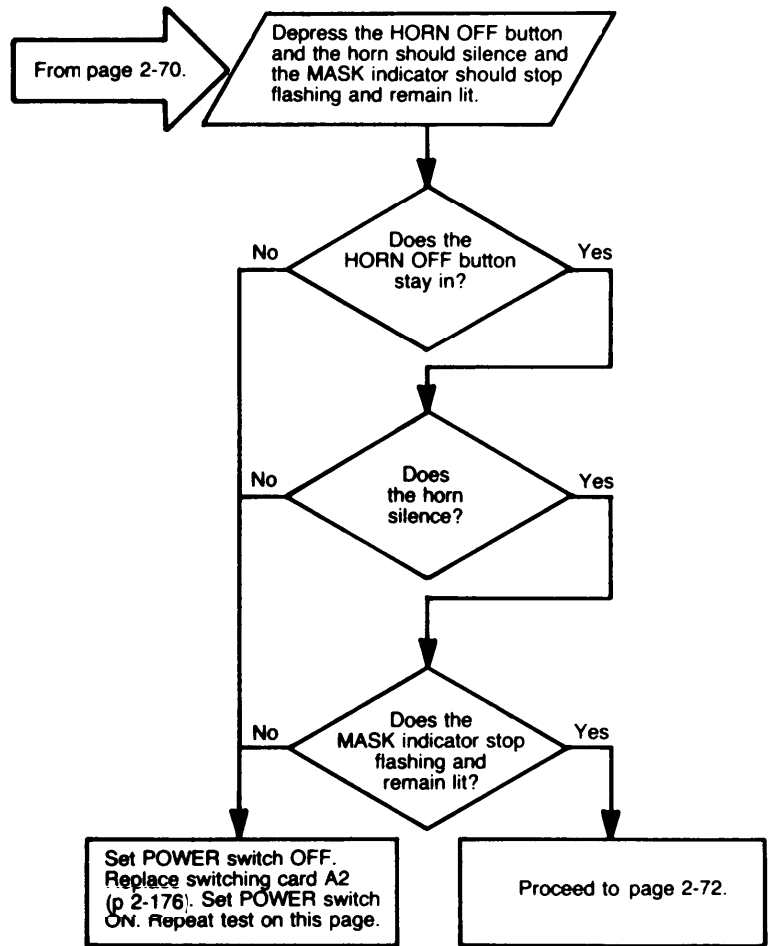

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

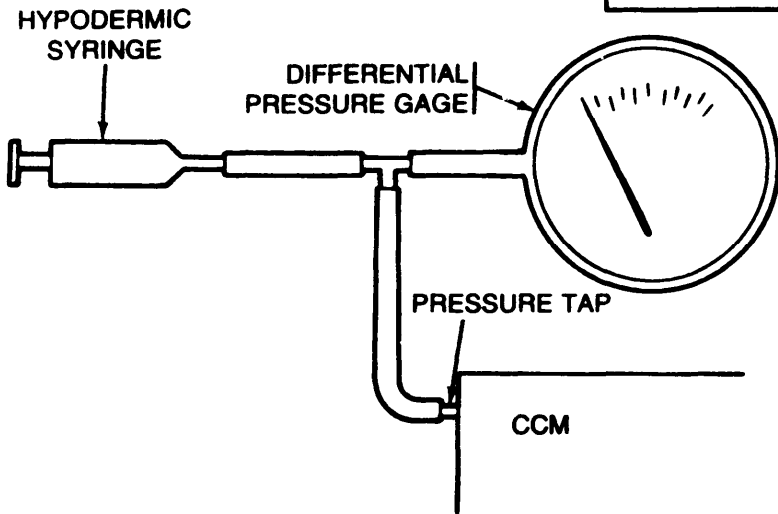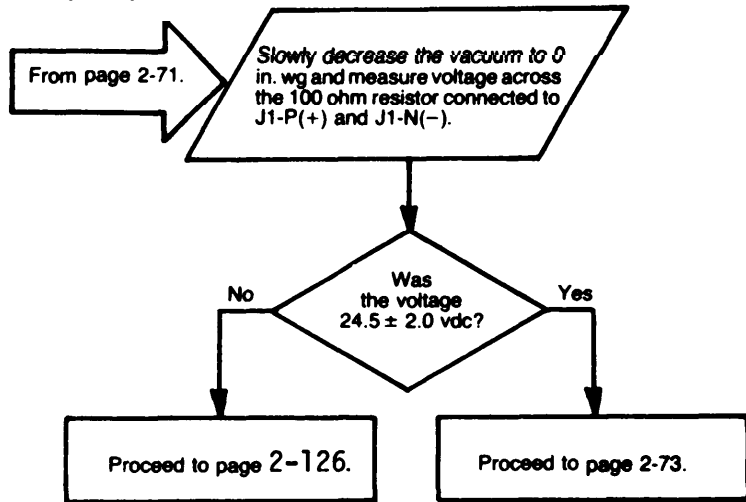





2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

**NOTE**




Reapplying power on the following pages will probably cause the horn to sound. Press the HORN OFF button to silence horn.

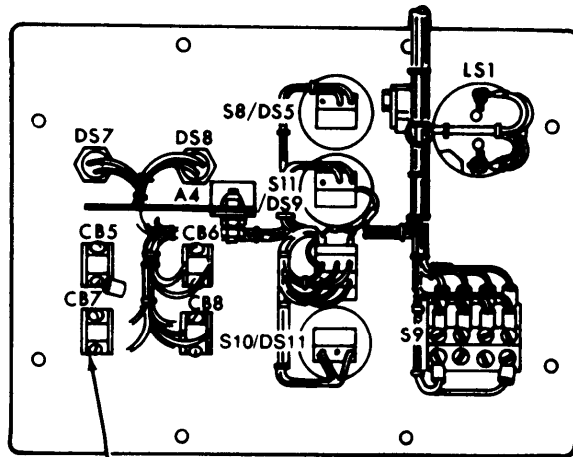


CB7

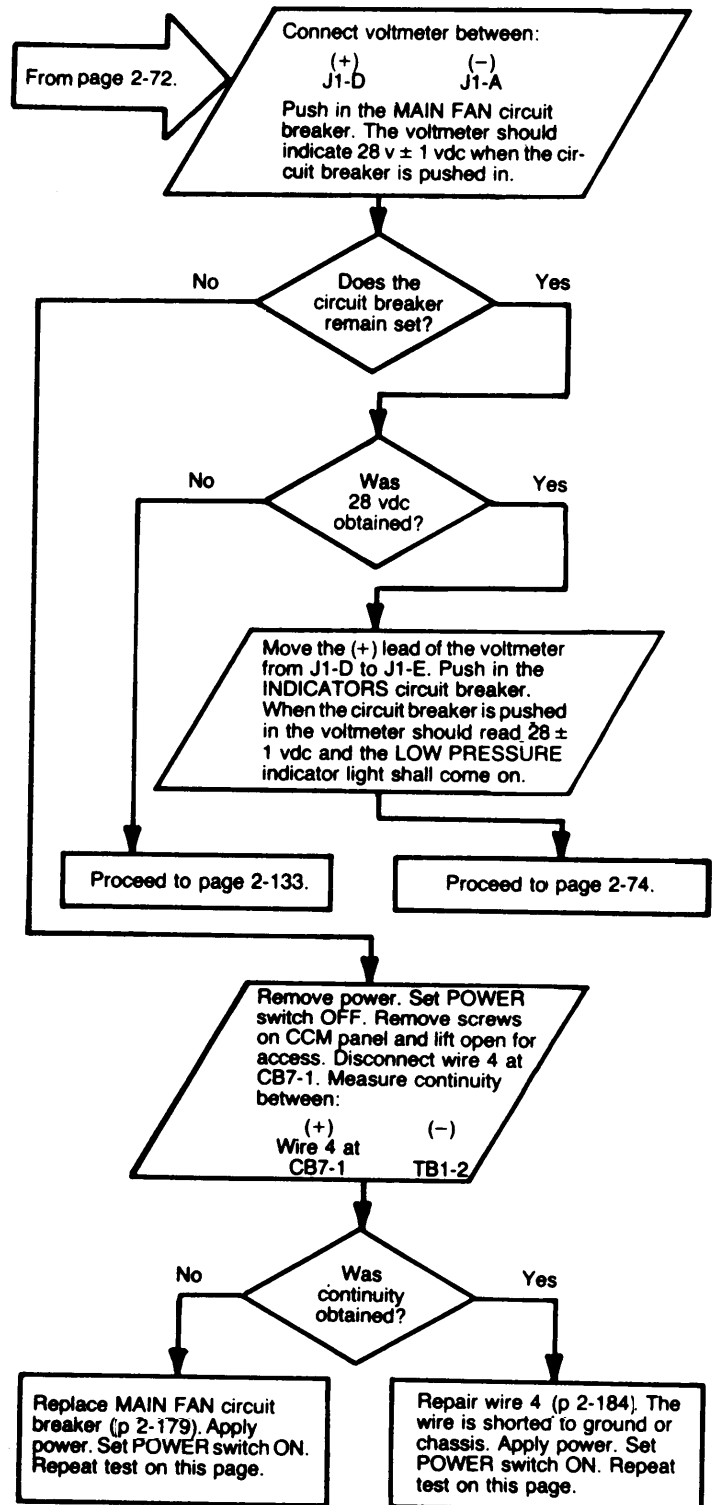


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

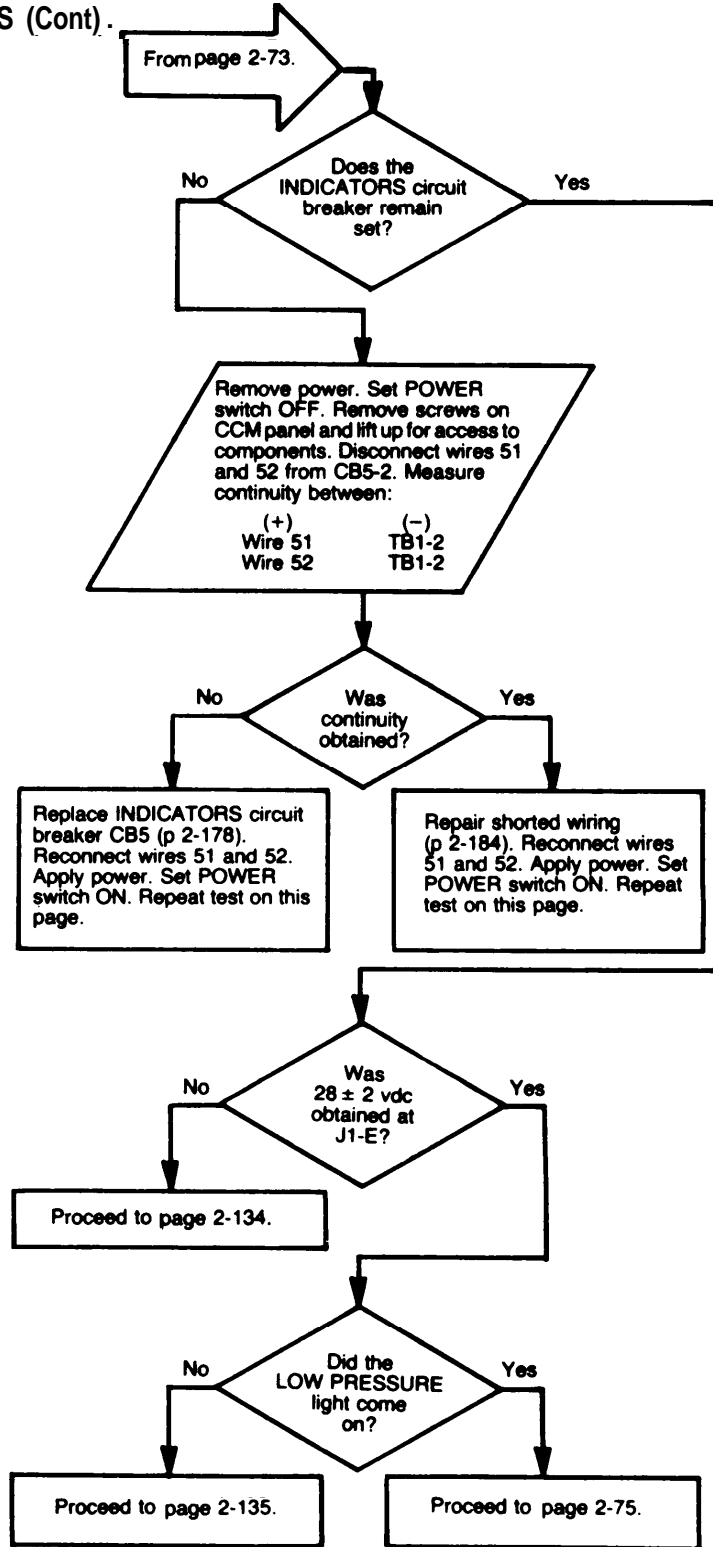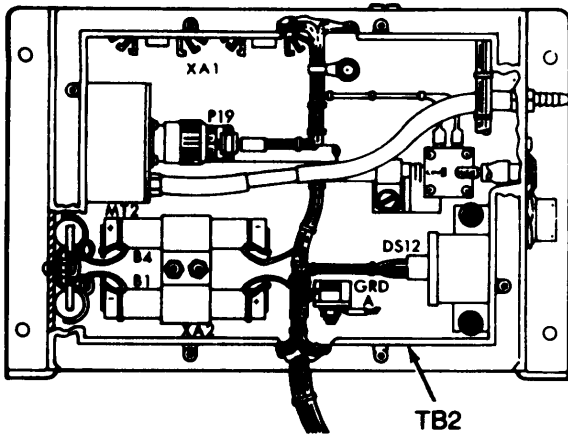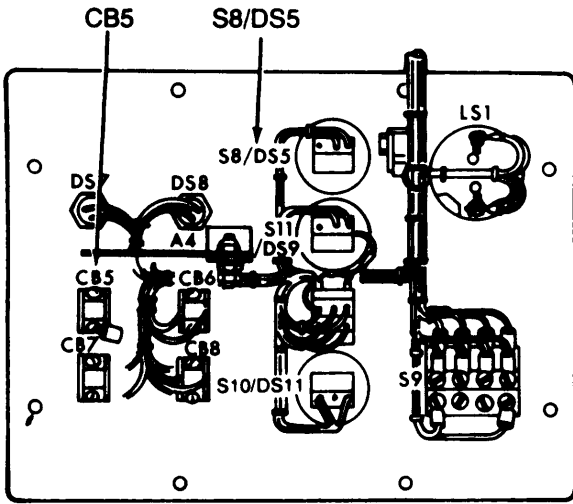


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

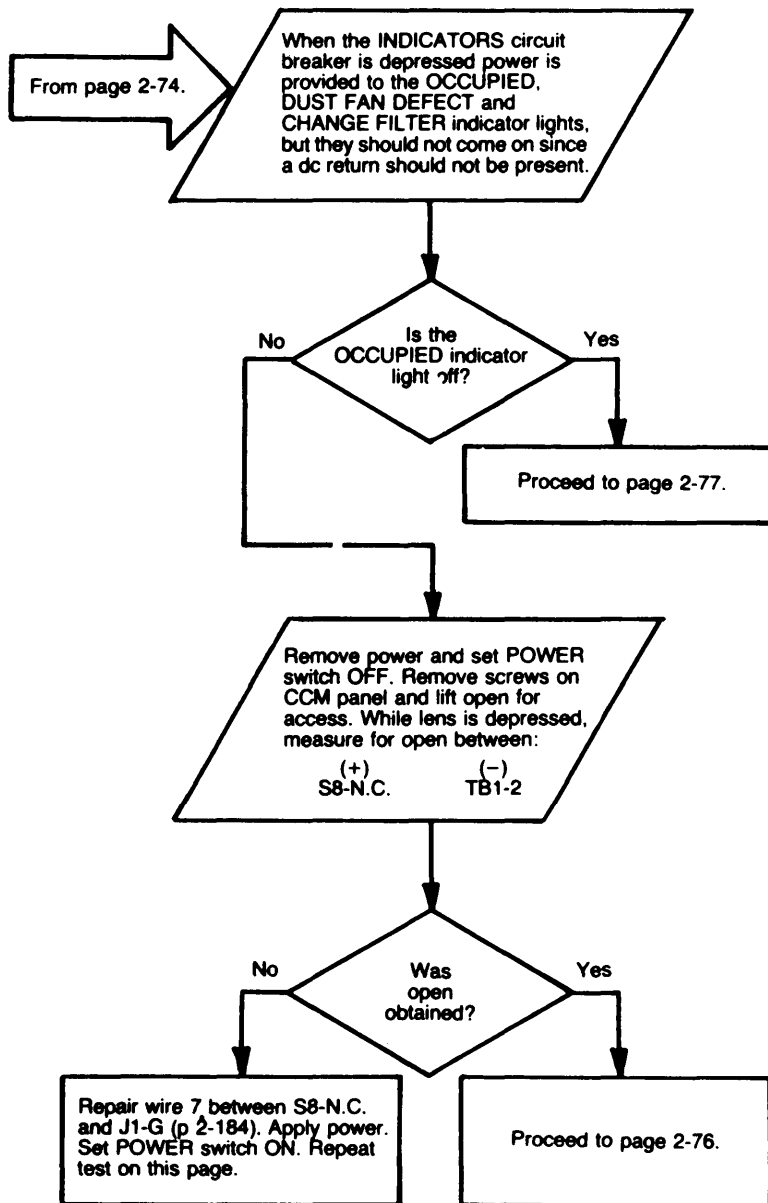







2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

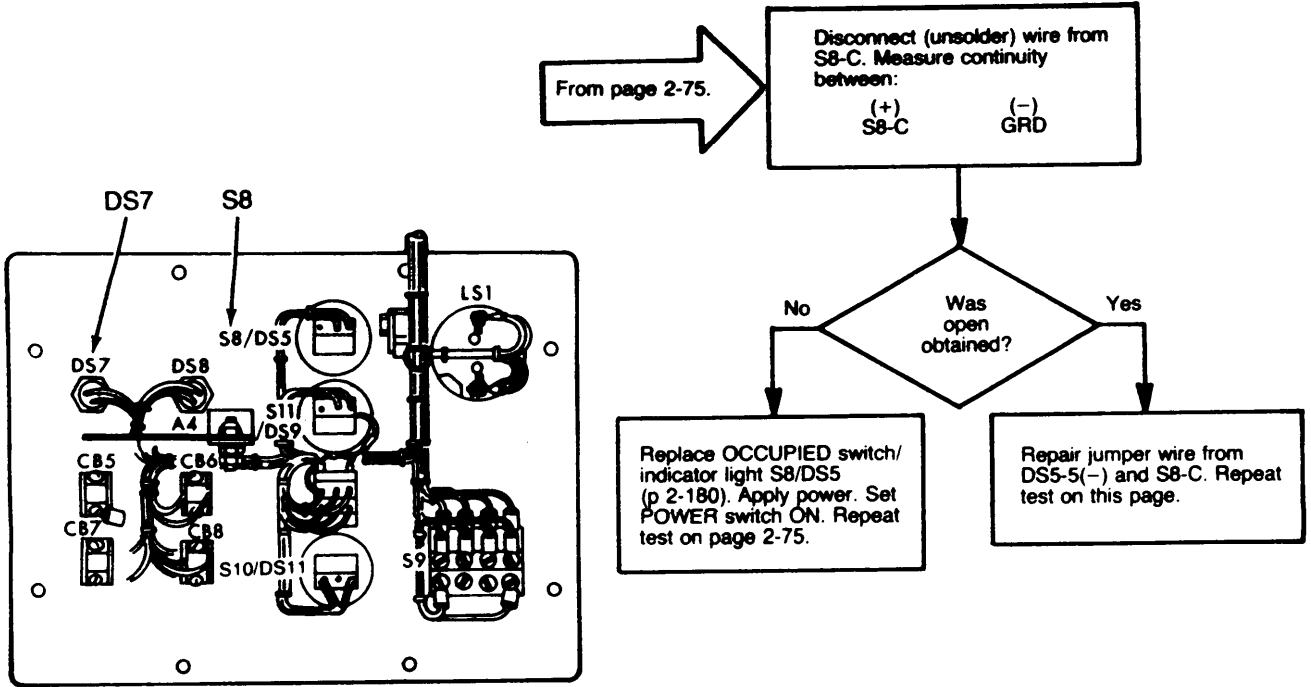


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

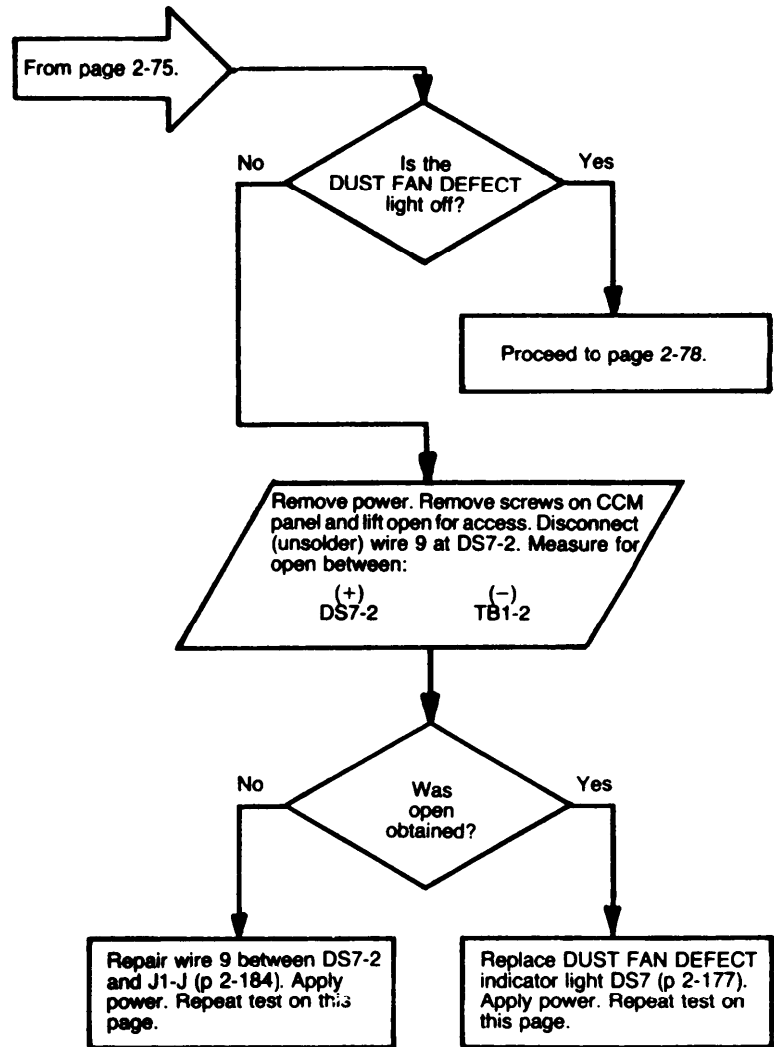



2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

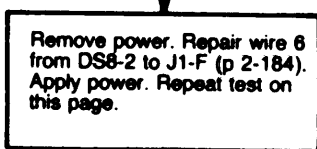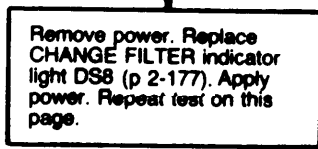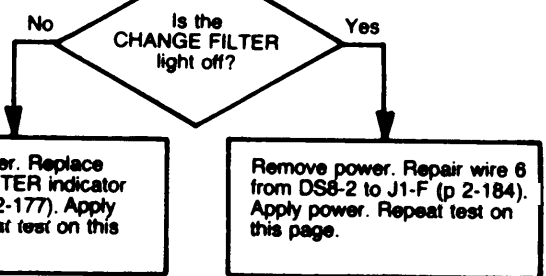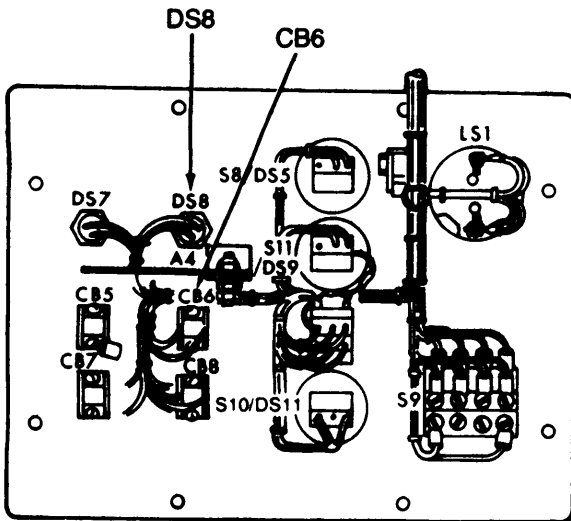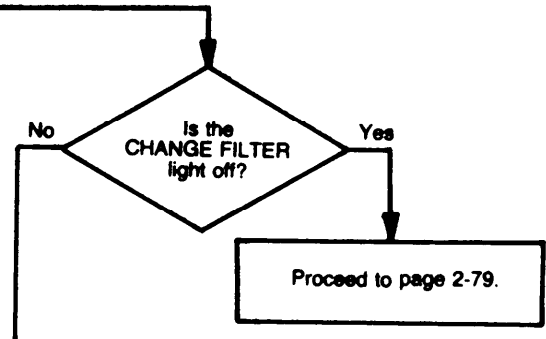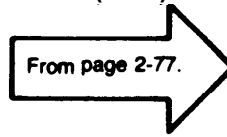

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

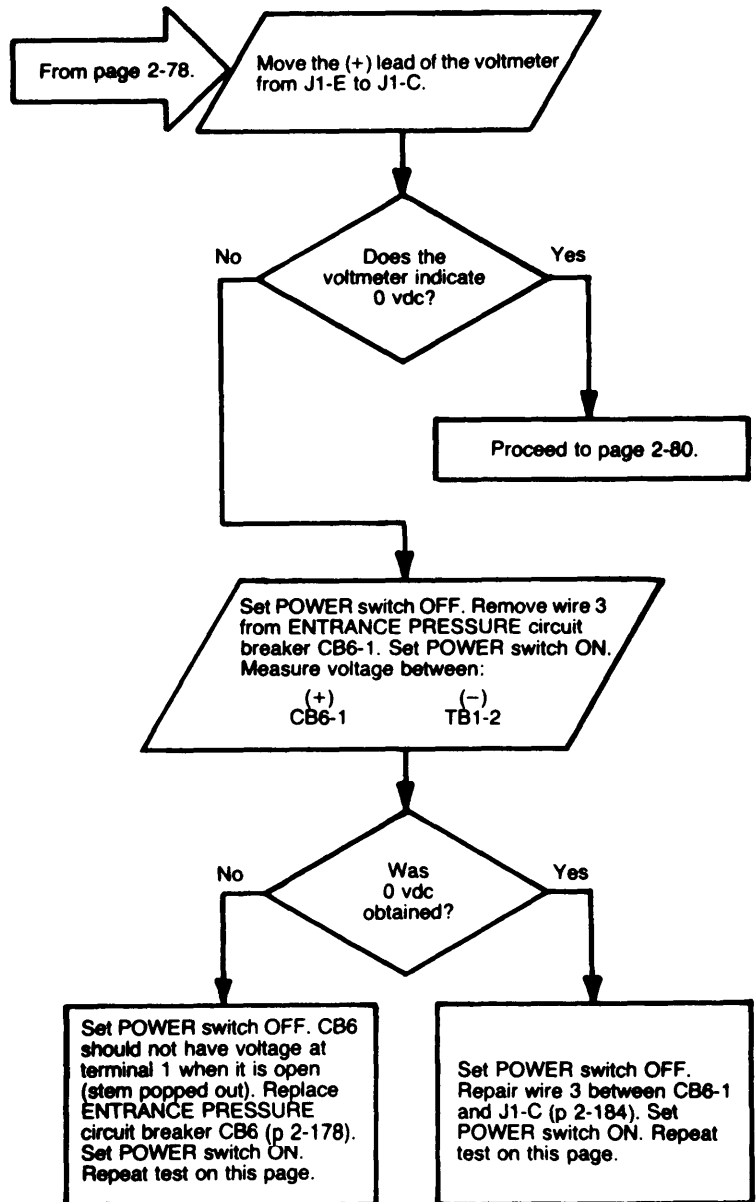


2-7. CCM TROUBLESHOOTING PROCEDURES

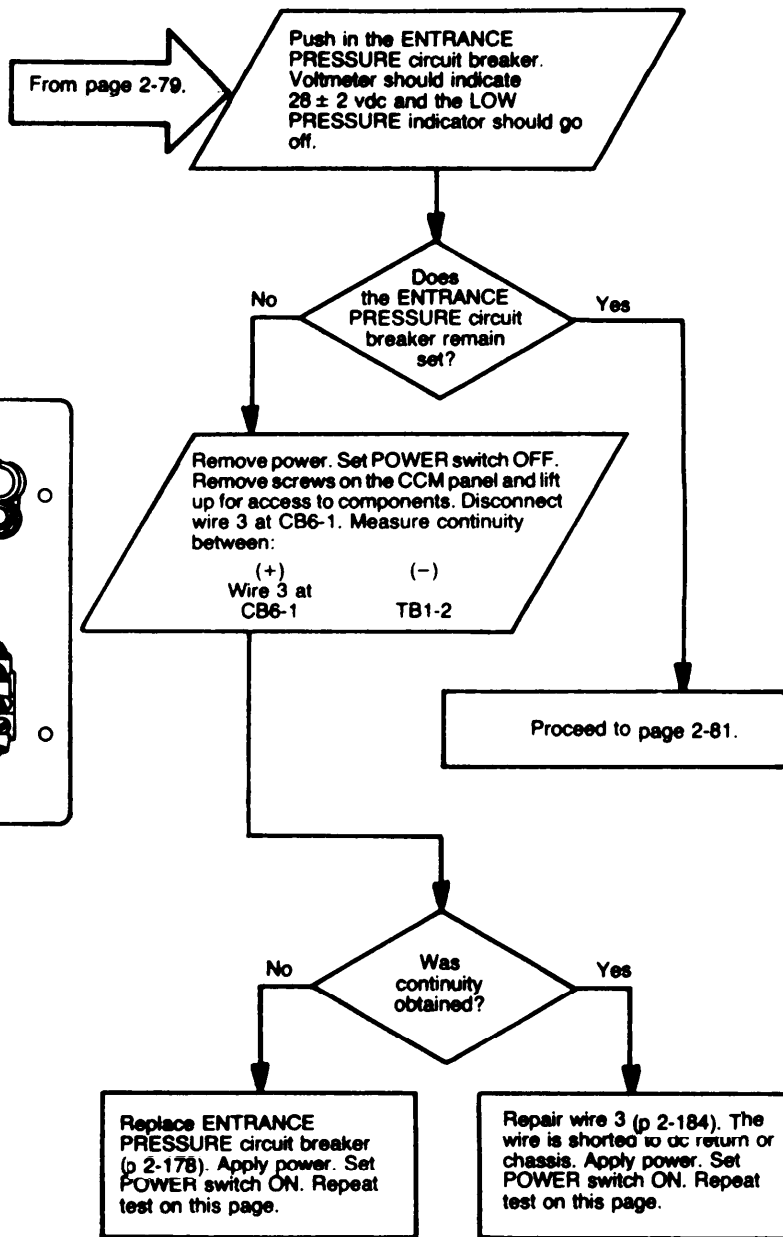
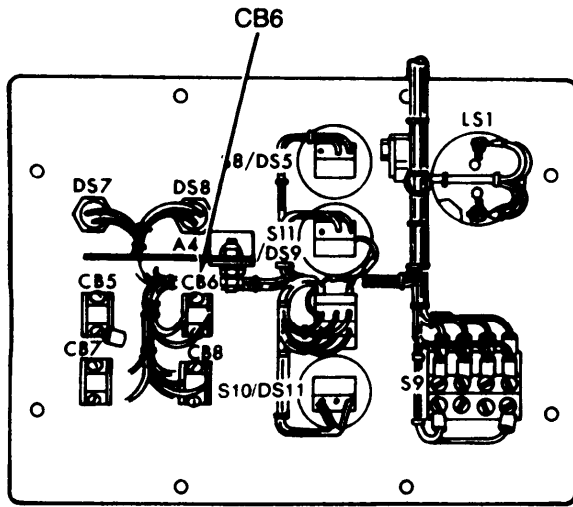





2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

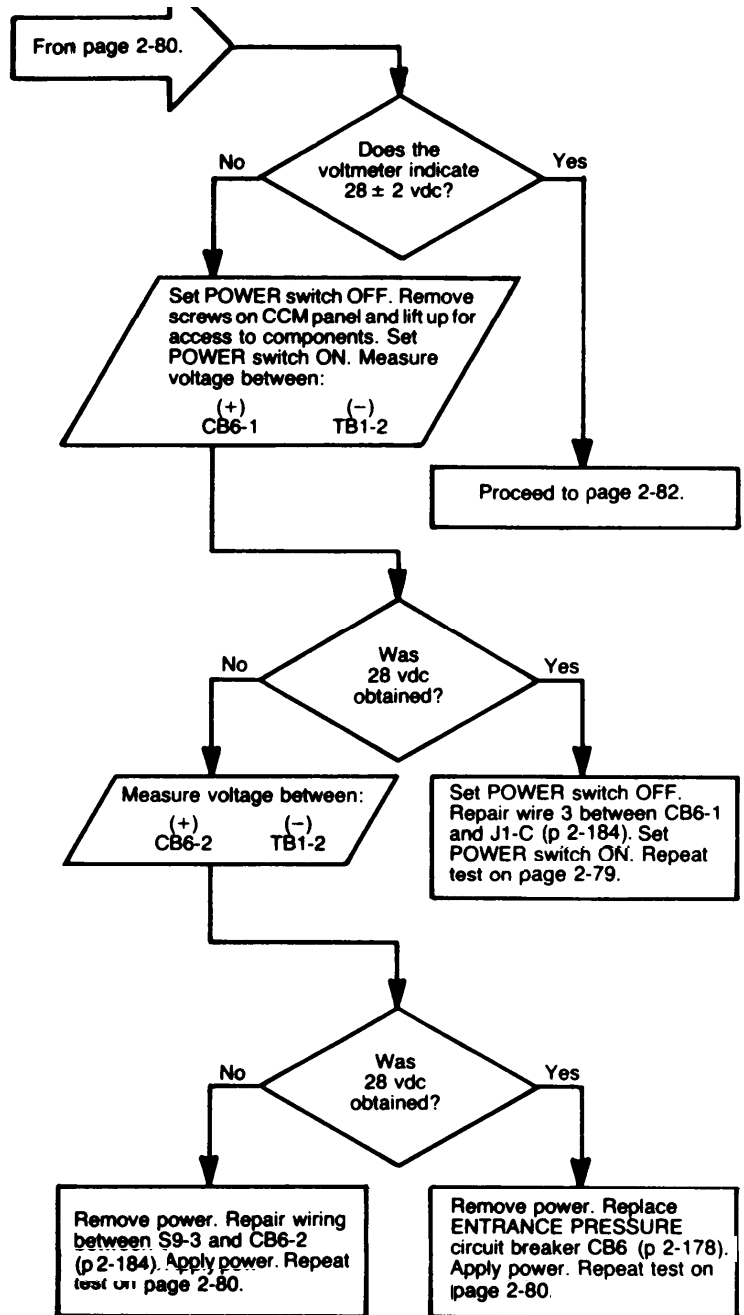



2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

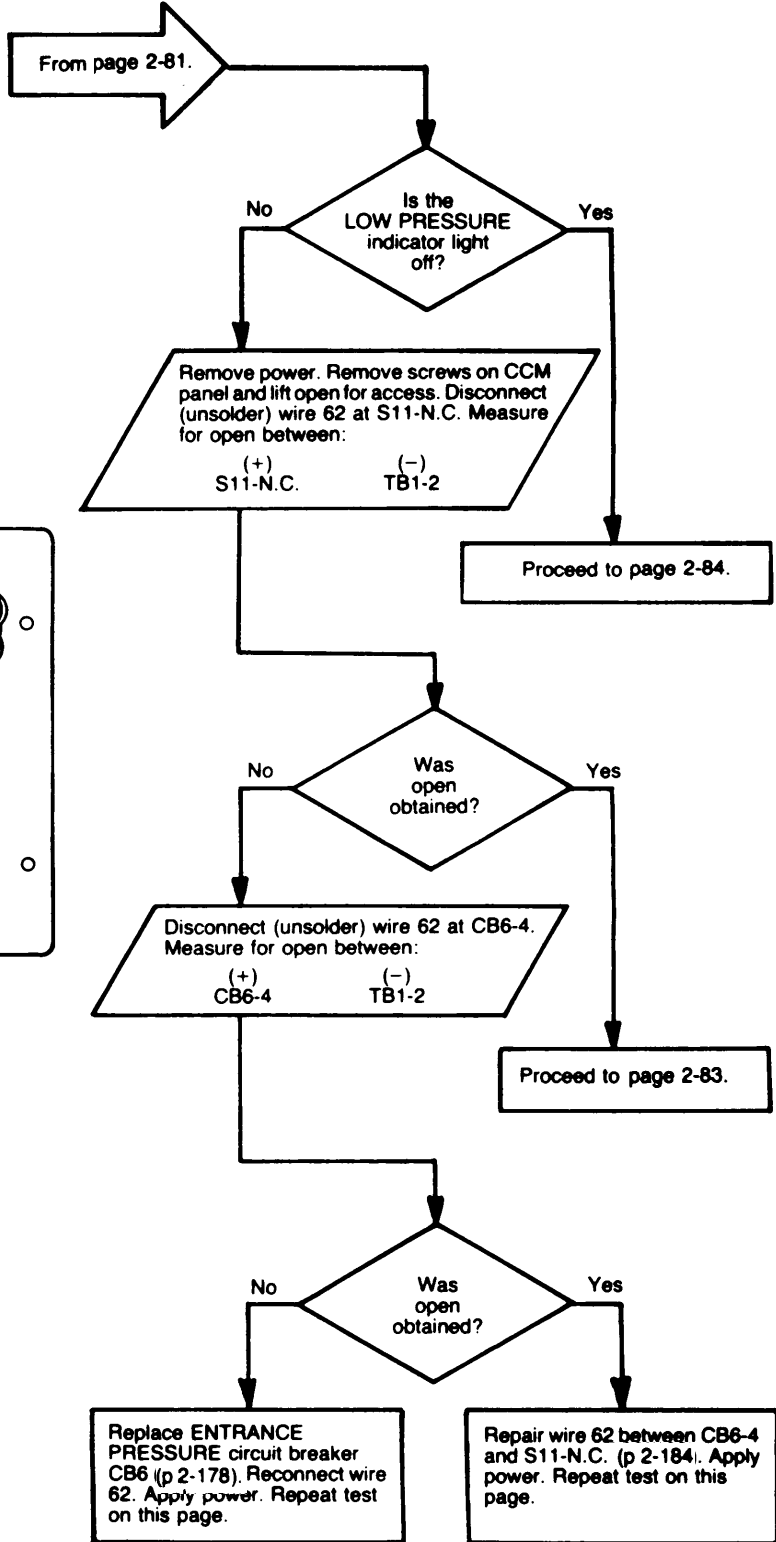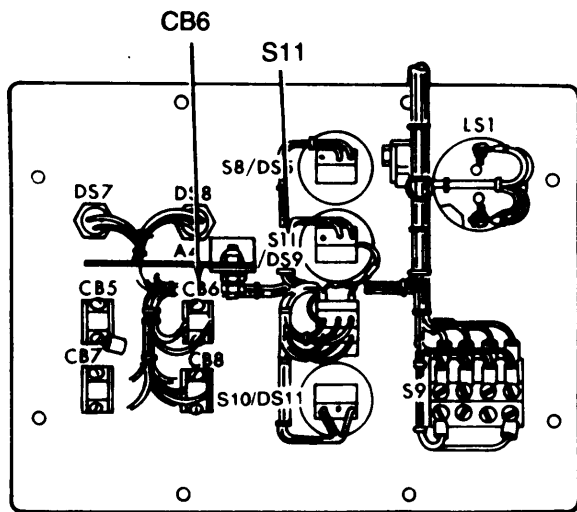


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

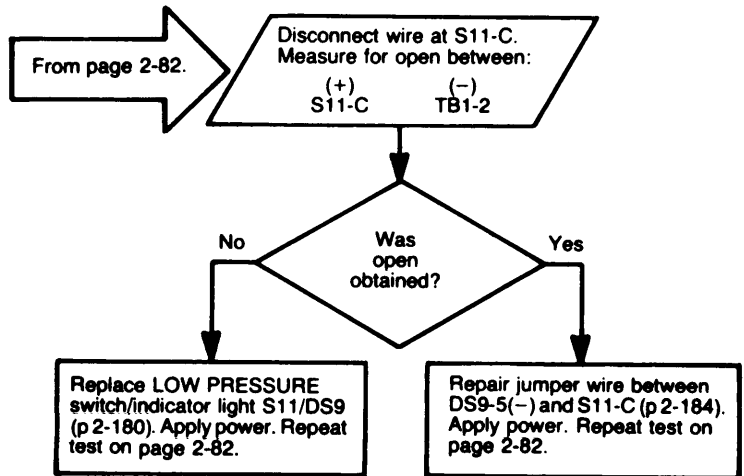



2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

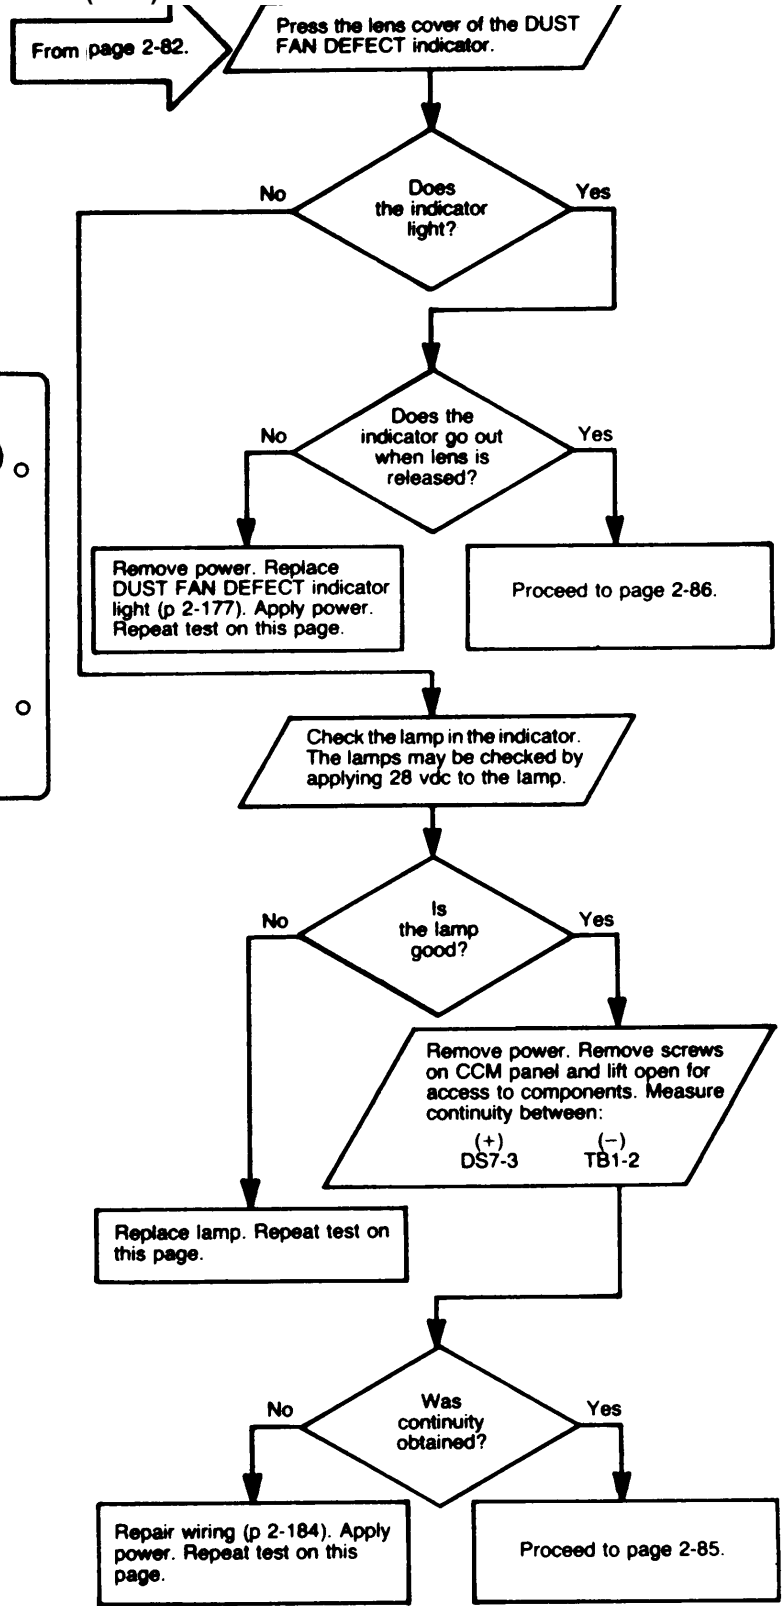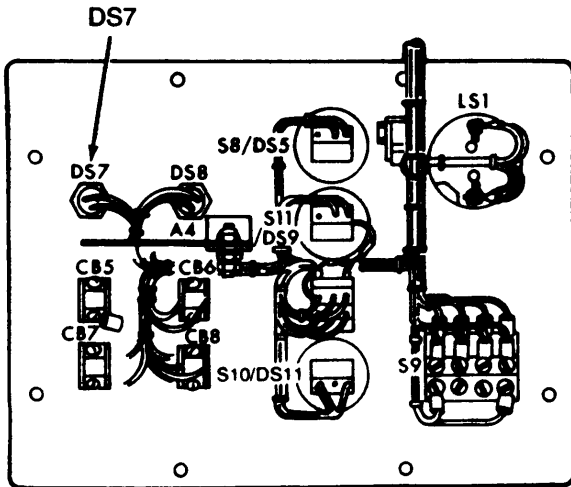


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

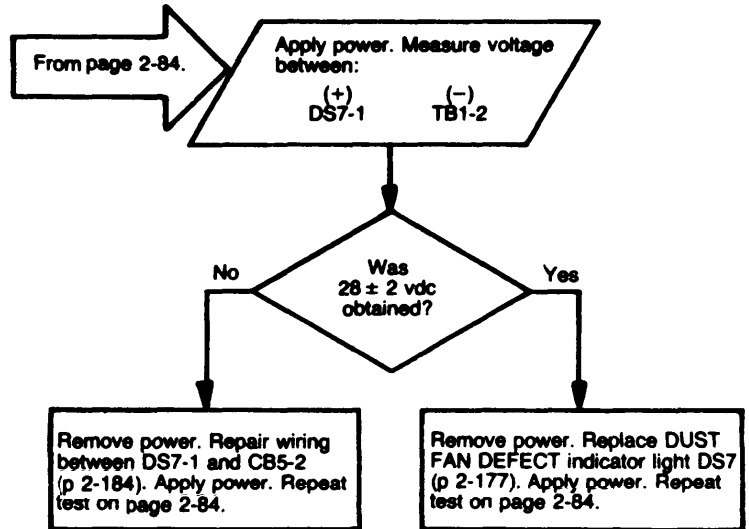



2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

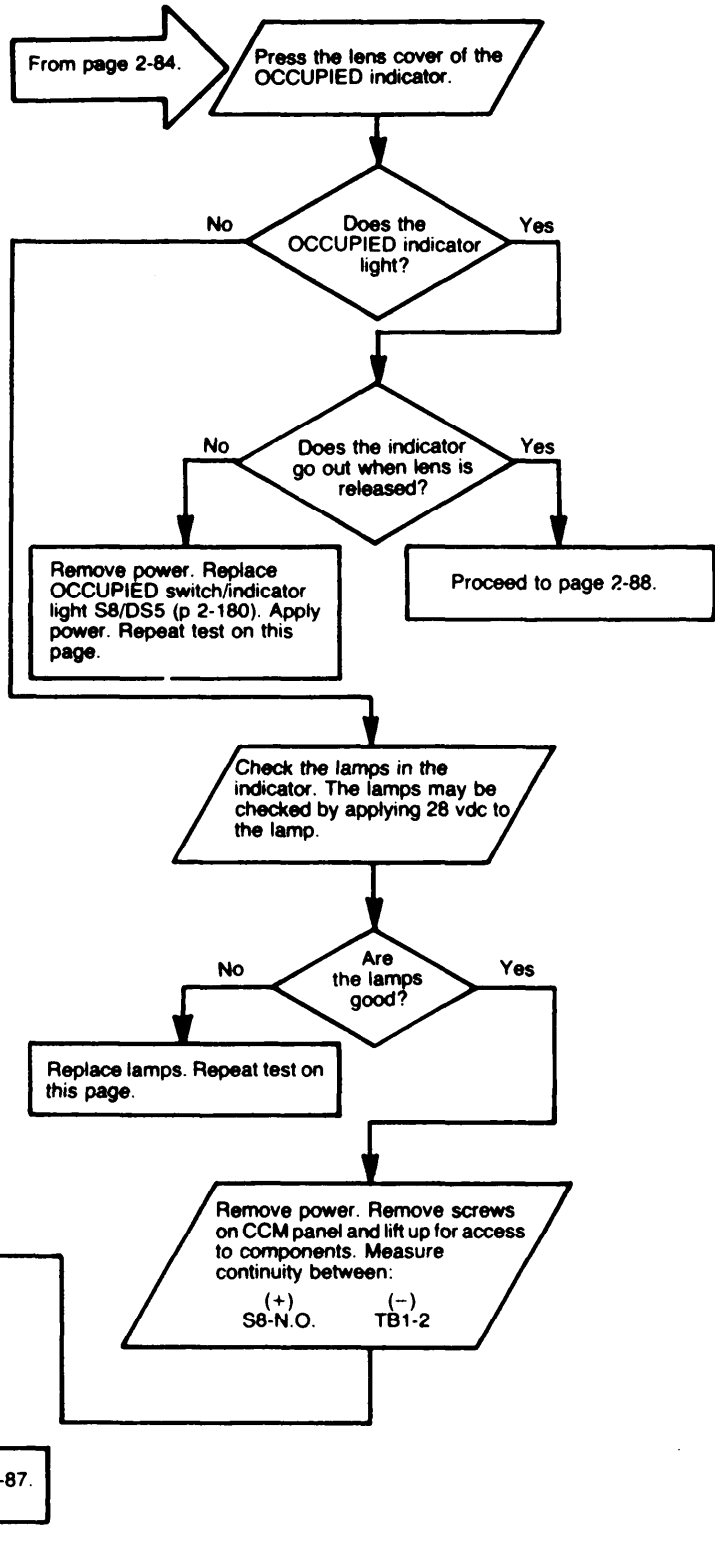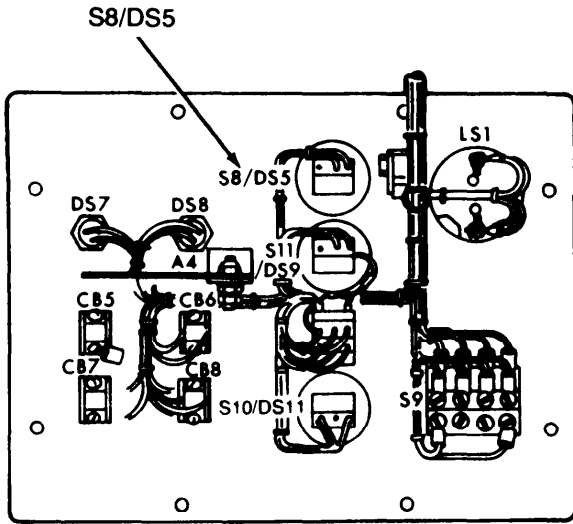

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

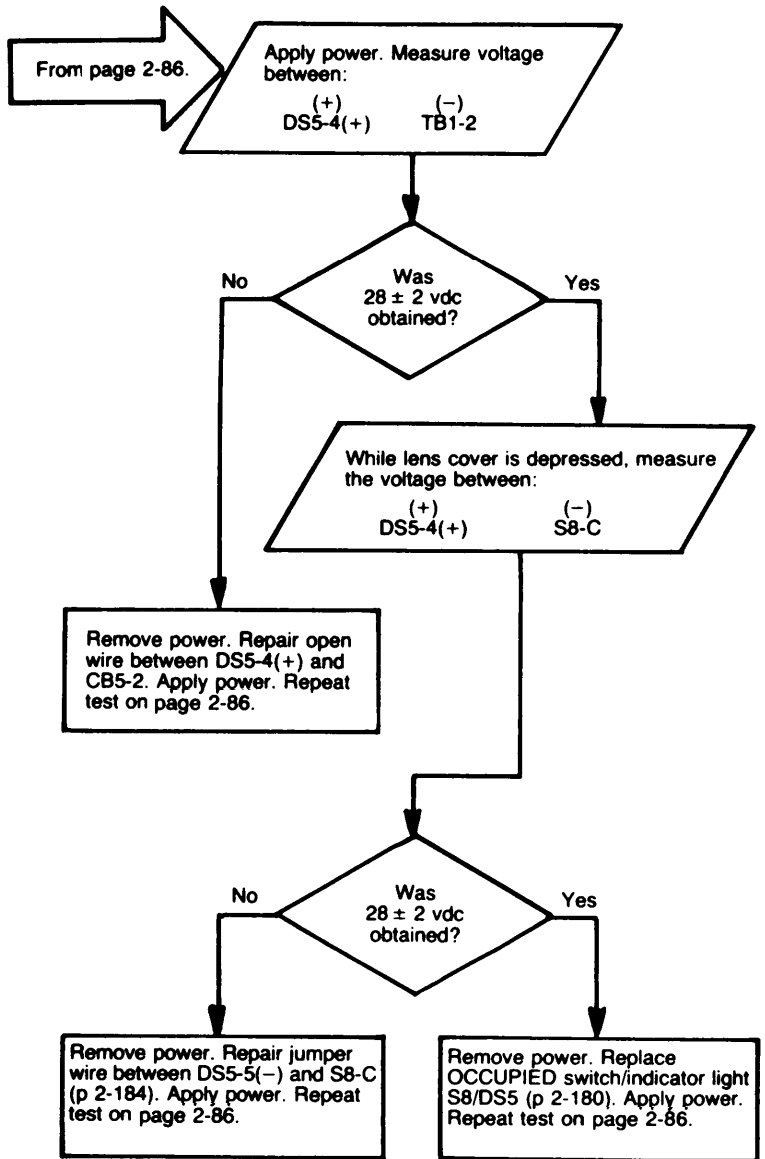


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

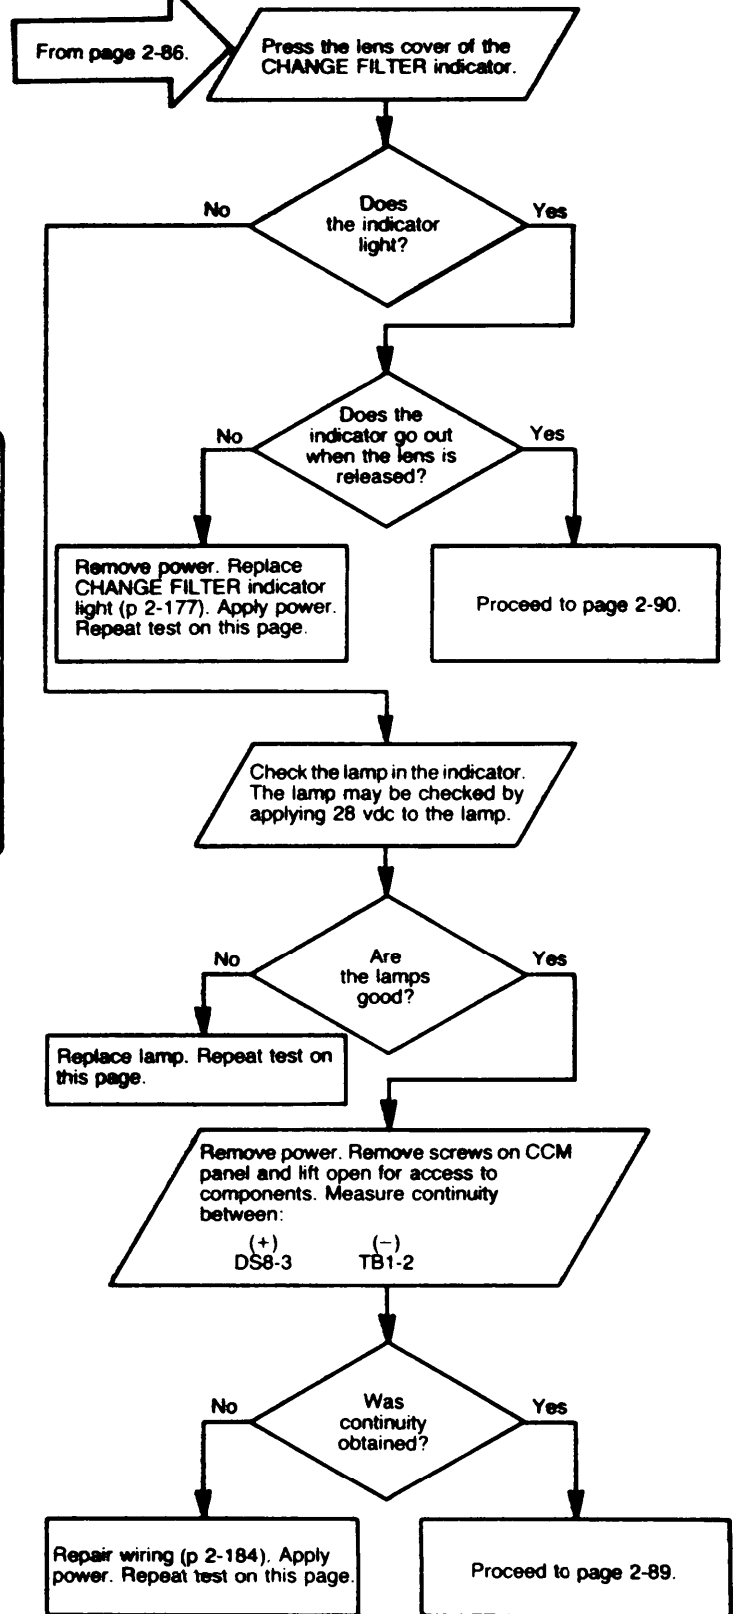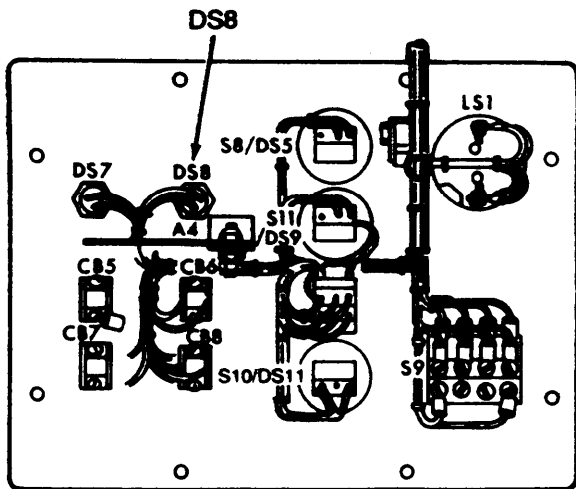





2-7. CCM TROUBLESHOOTING PROCEDURES (Cont)

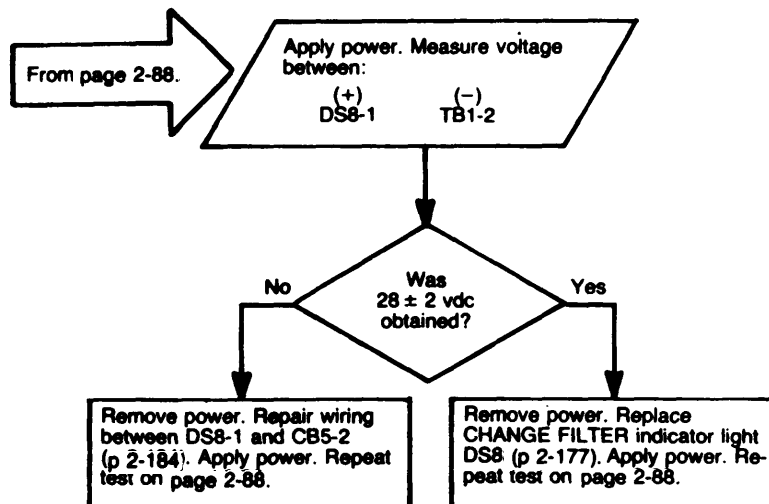


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).



page 2-88.

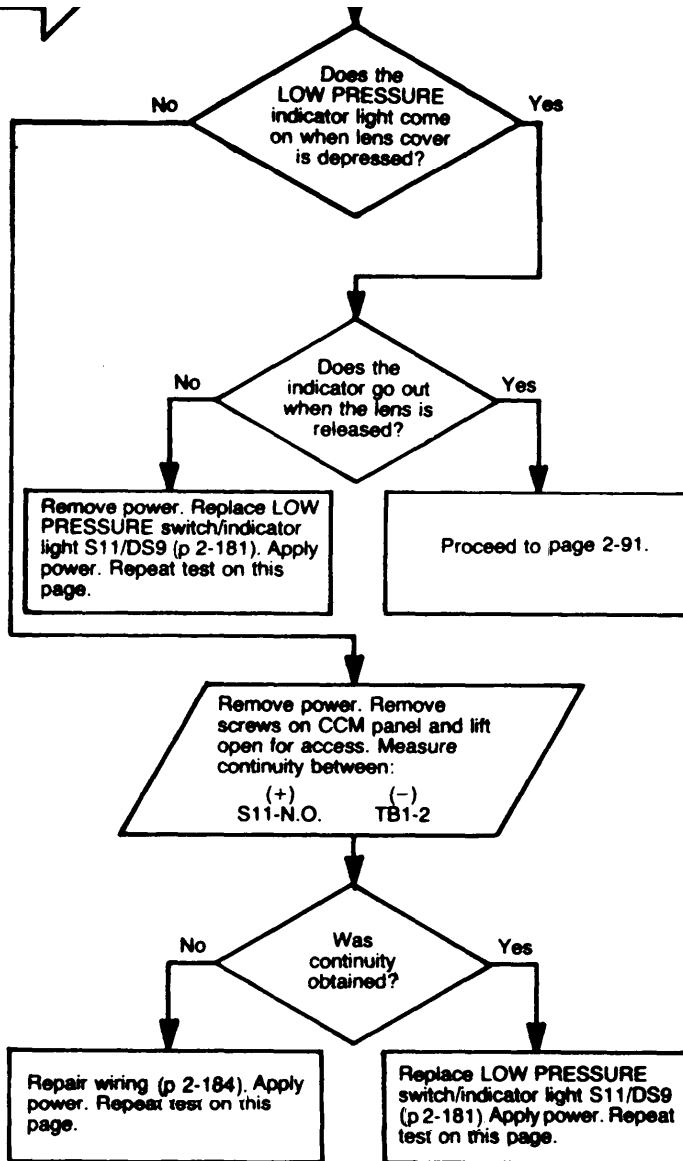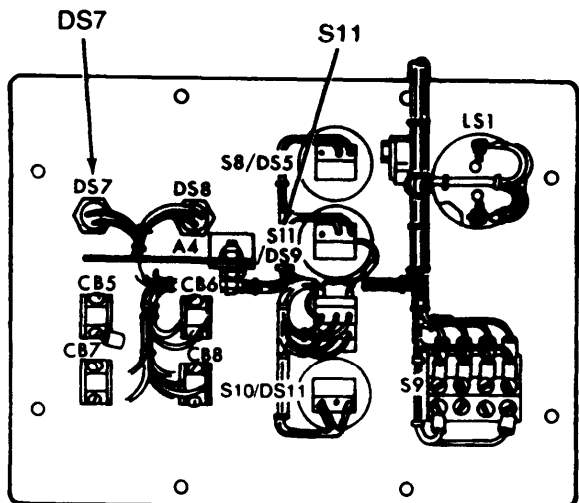


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

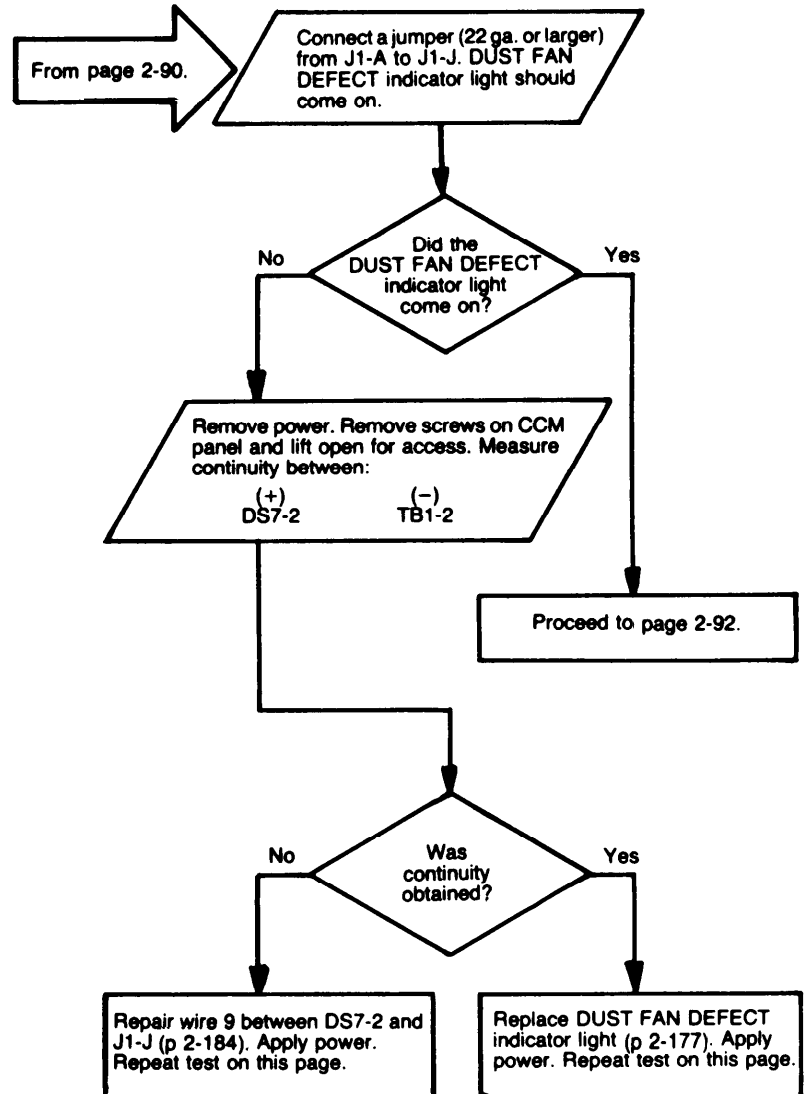



2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

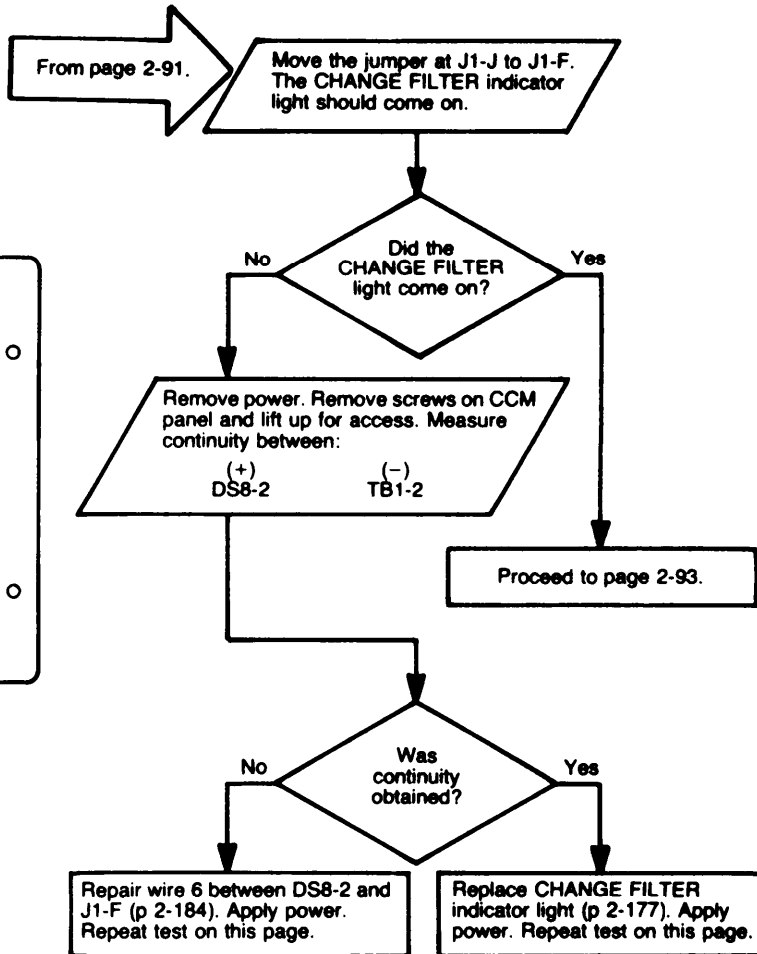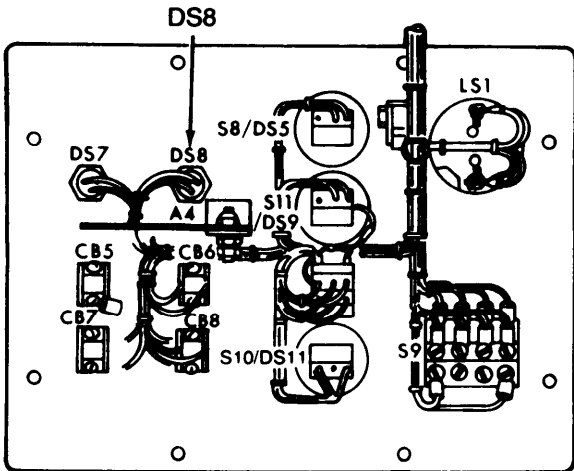


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

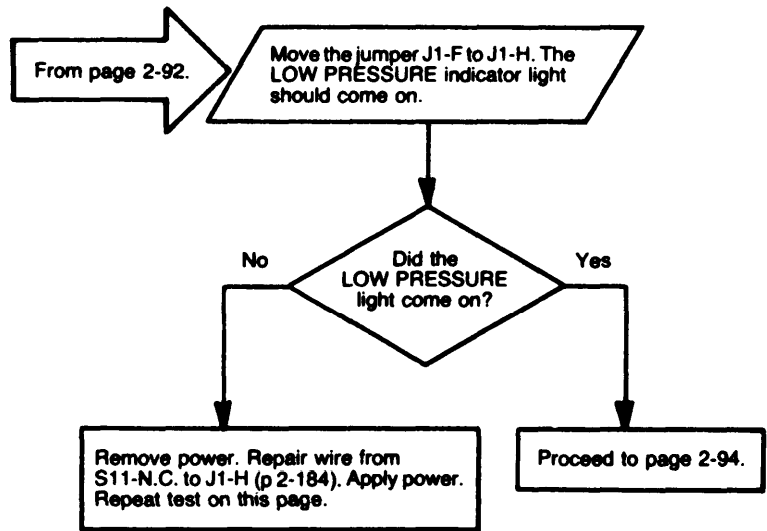



2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

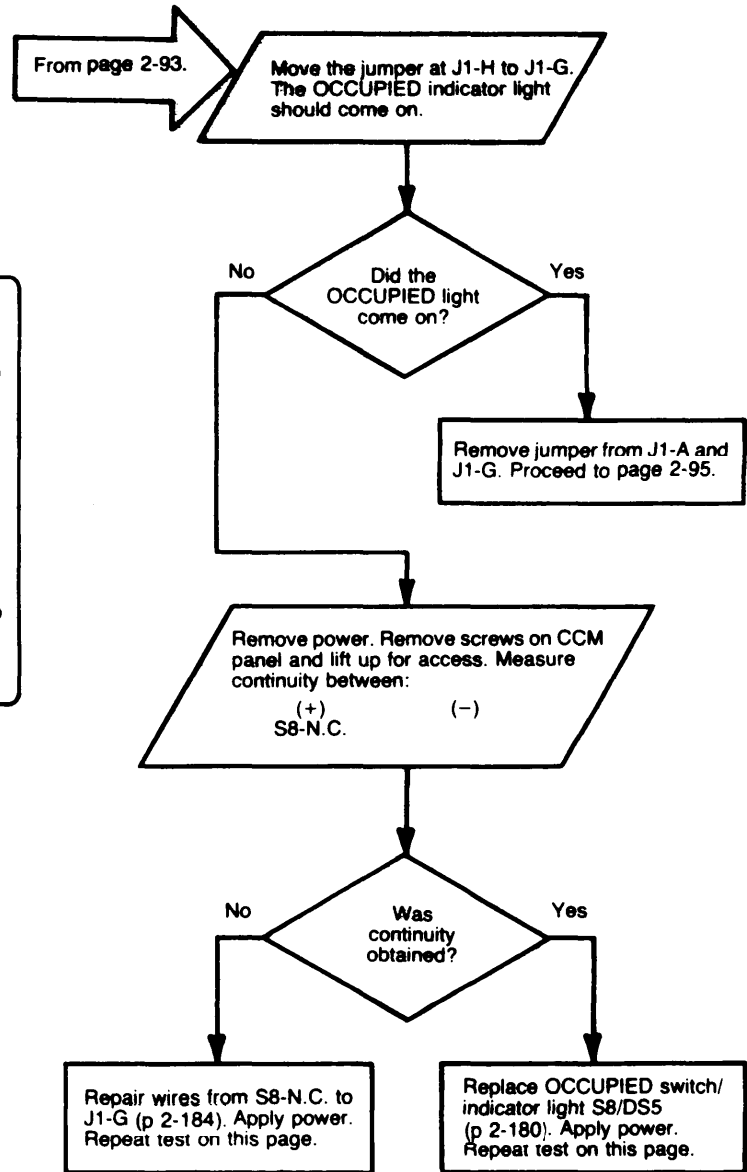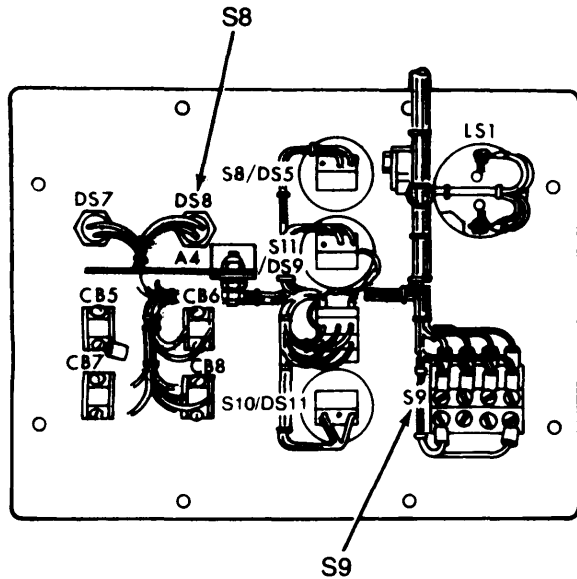

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

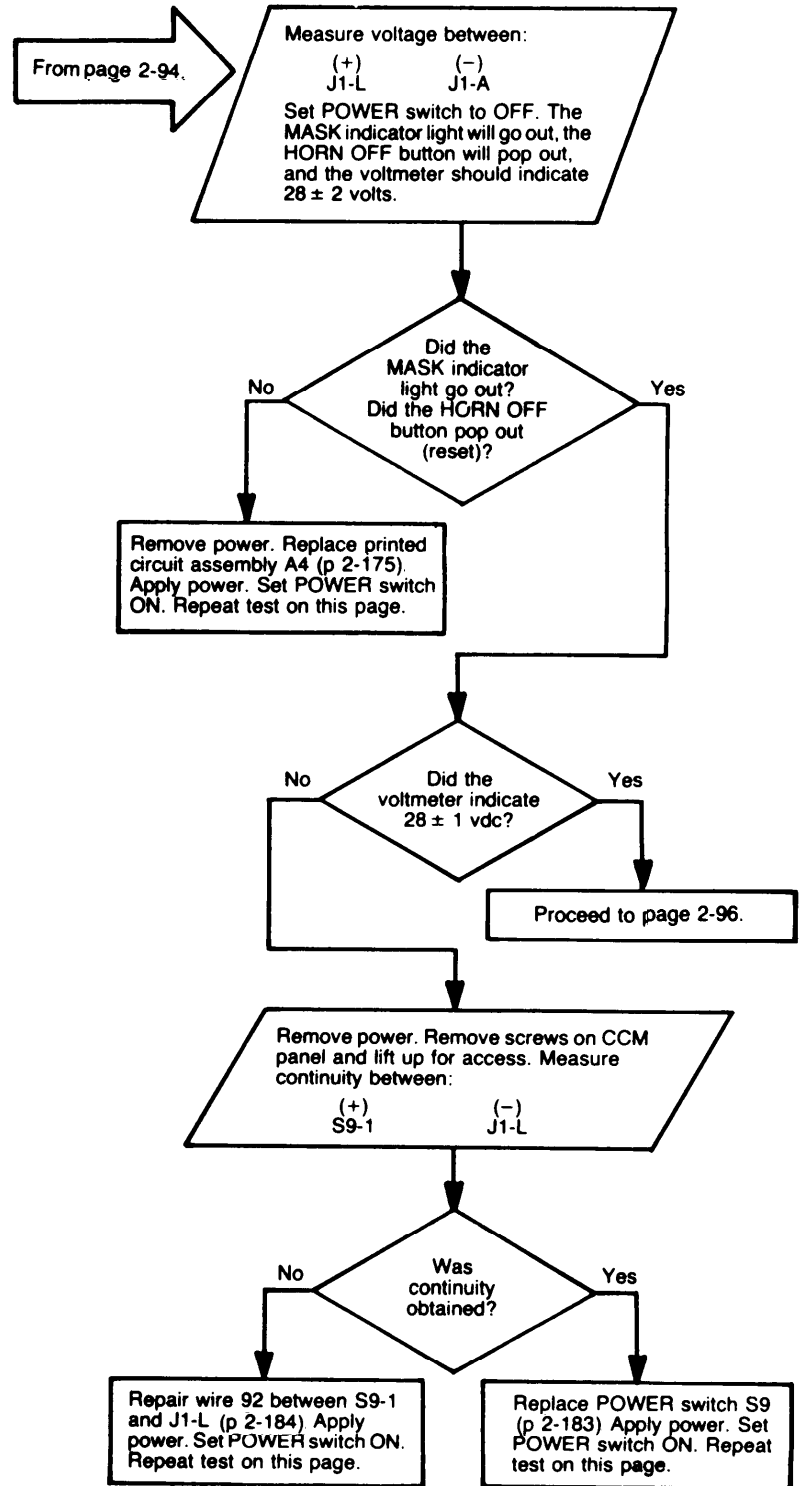


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

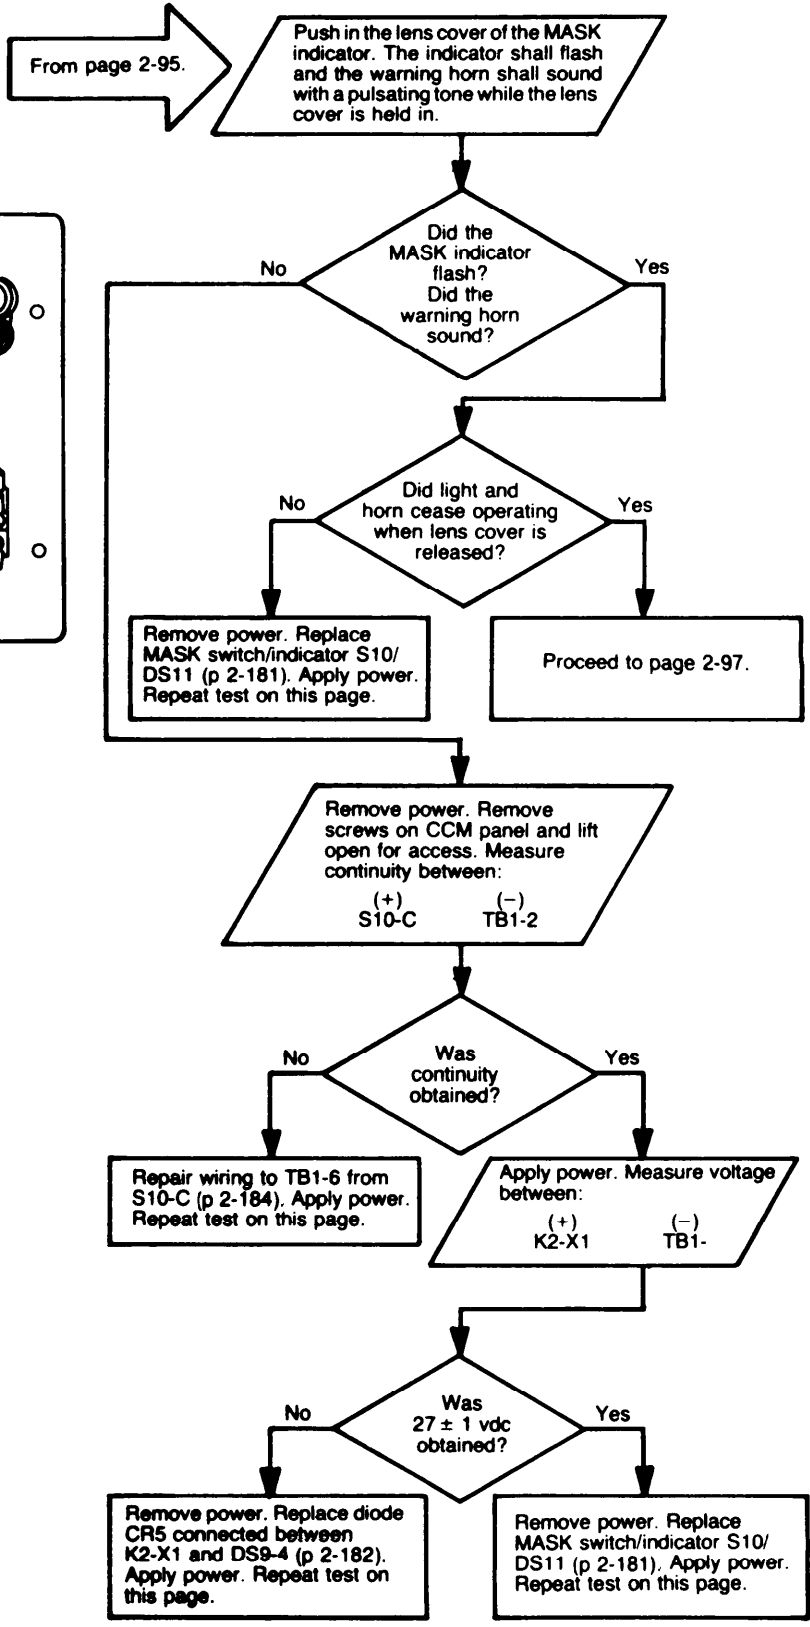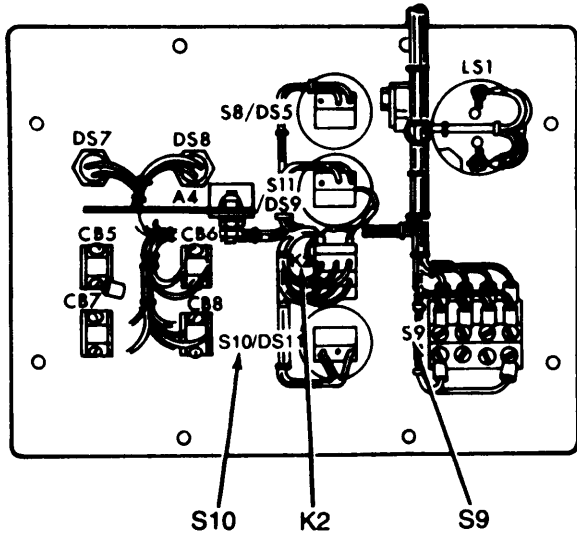




2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

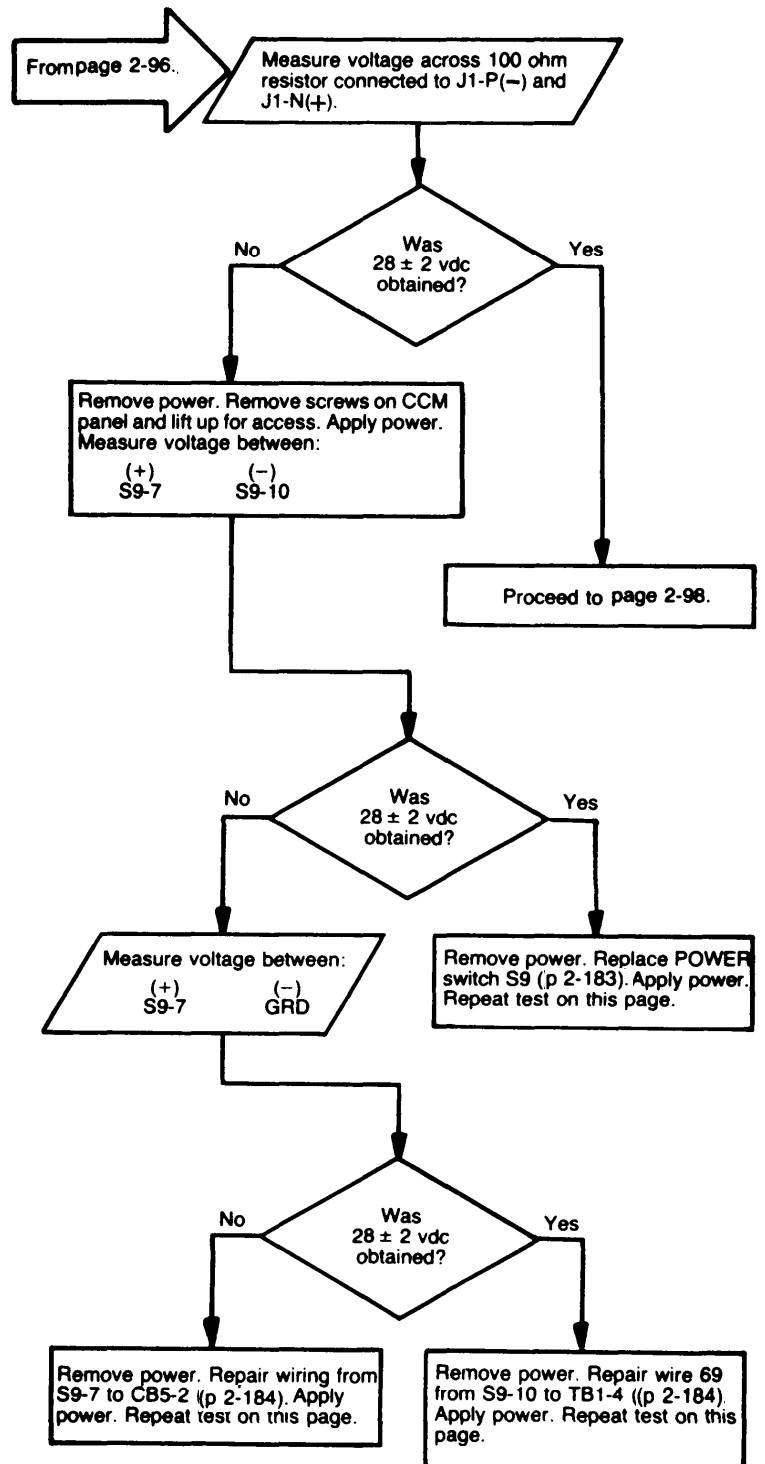

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

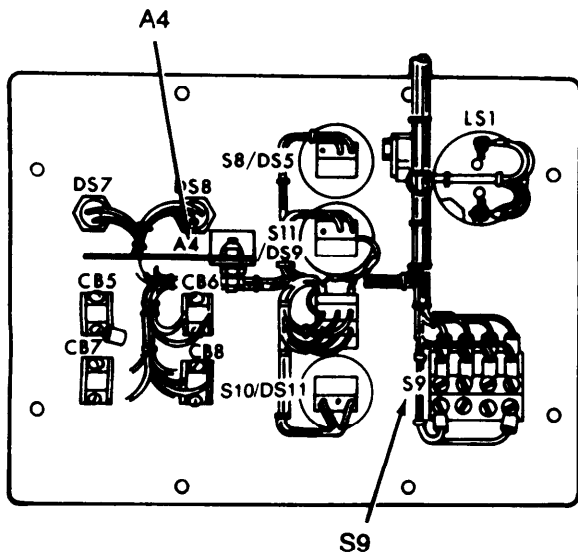

From page 2-97.

Adjust the vacuum source to 1.0 in. wg. Set POWER switch ON. Remove power. Decrease the vacuum to zero. The MASK indicator light shall flash and the warning horn shall sound with a pulsating tone.

Does the MASK indicator light flash?  
Does the warning horn sound?

Remove screws on CCM panel and lift up panel for access to components. Measure voltage between:  
(+) A4-7      (-) TB1-2



This completes test. Remove power and vacuum source connections.

Was voltage greater than 18 vdc obtained?



Proceed to page 2-99.

Set POWER switch OFF. Replace printed circuit assembly A4 (p 2-175). Repeat test on this page.



2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

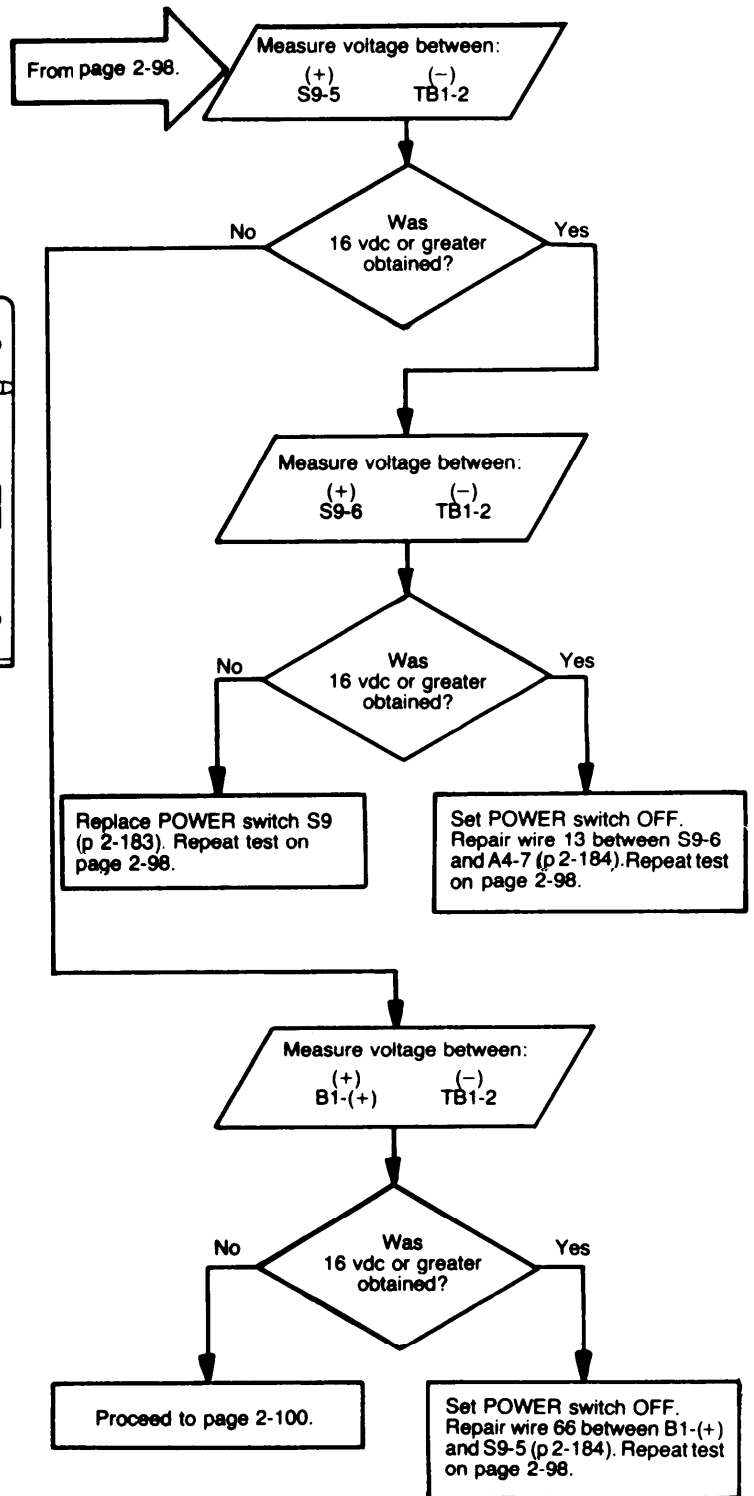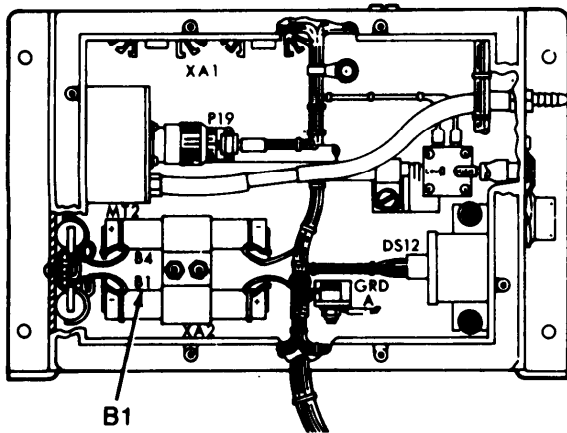



2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

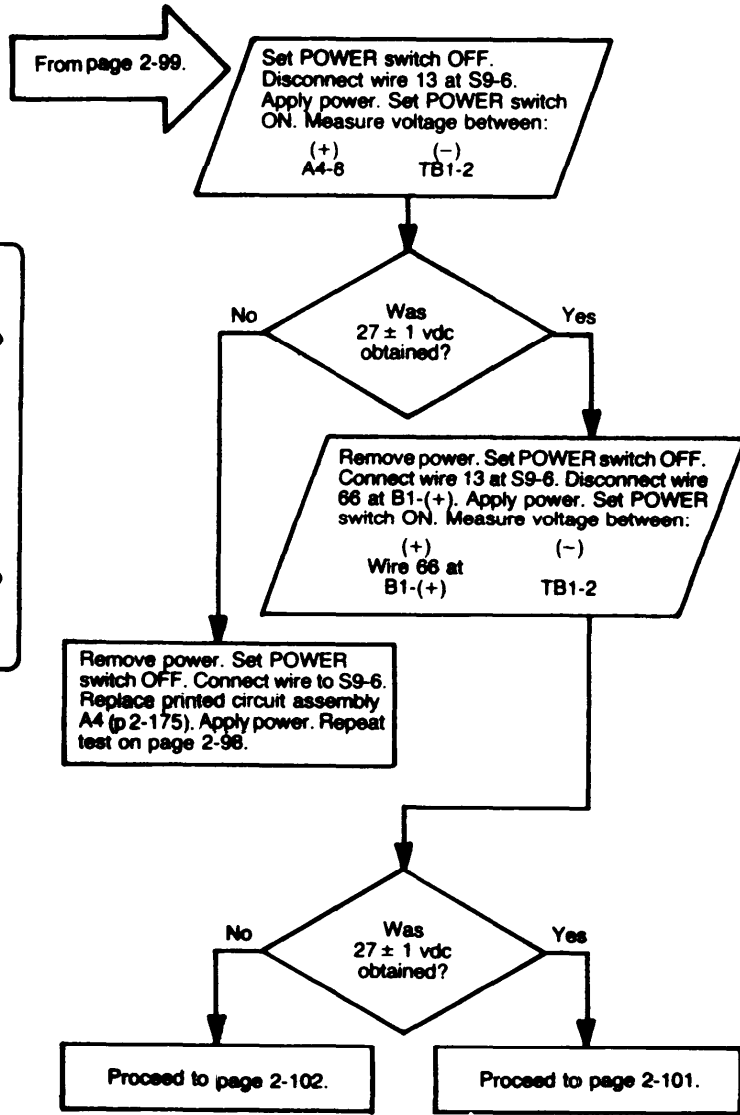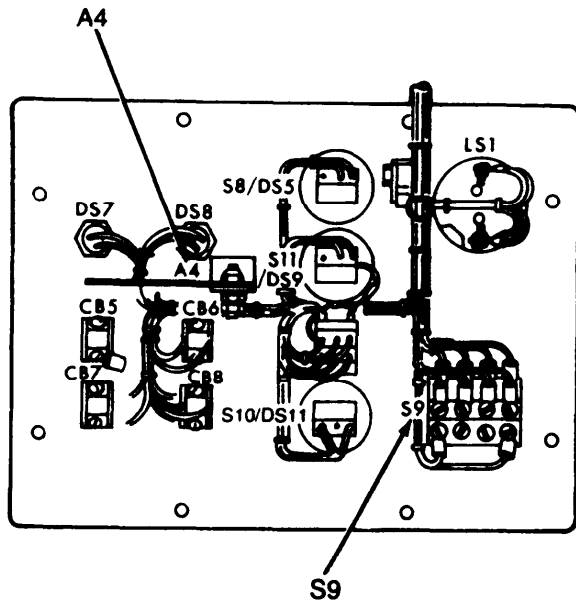


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

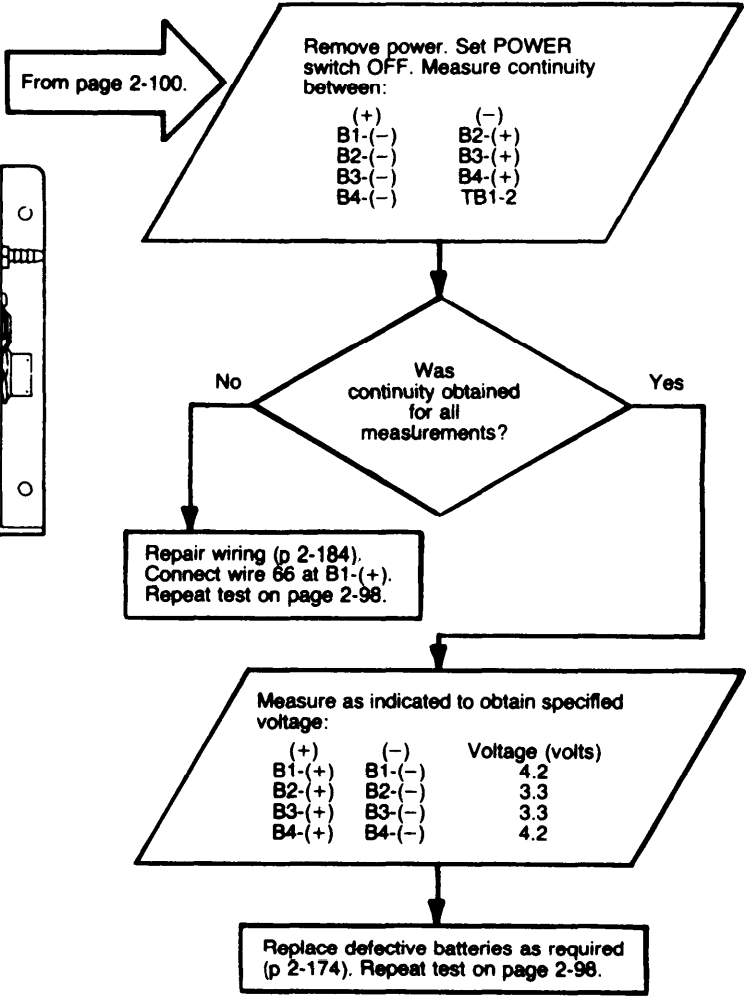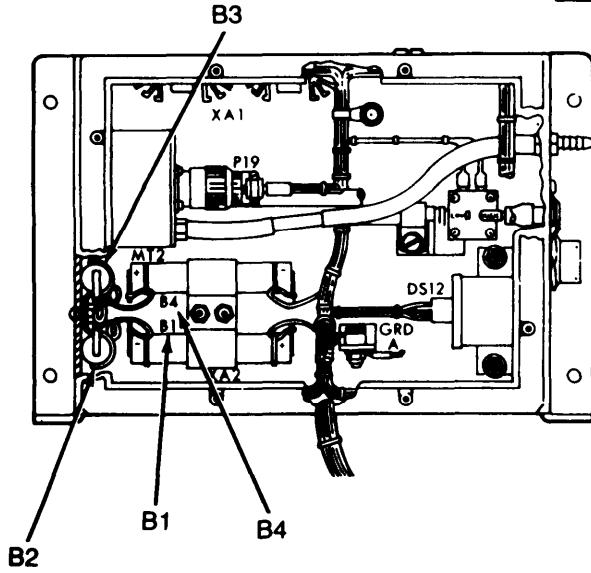



2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

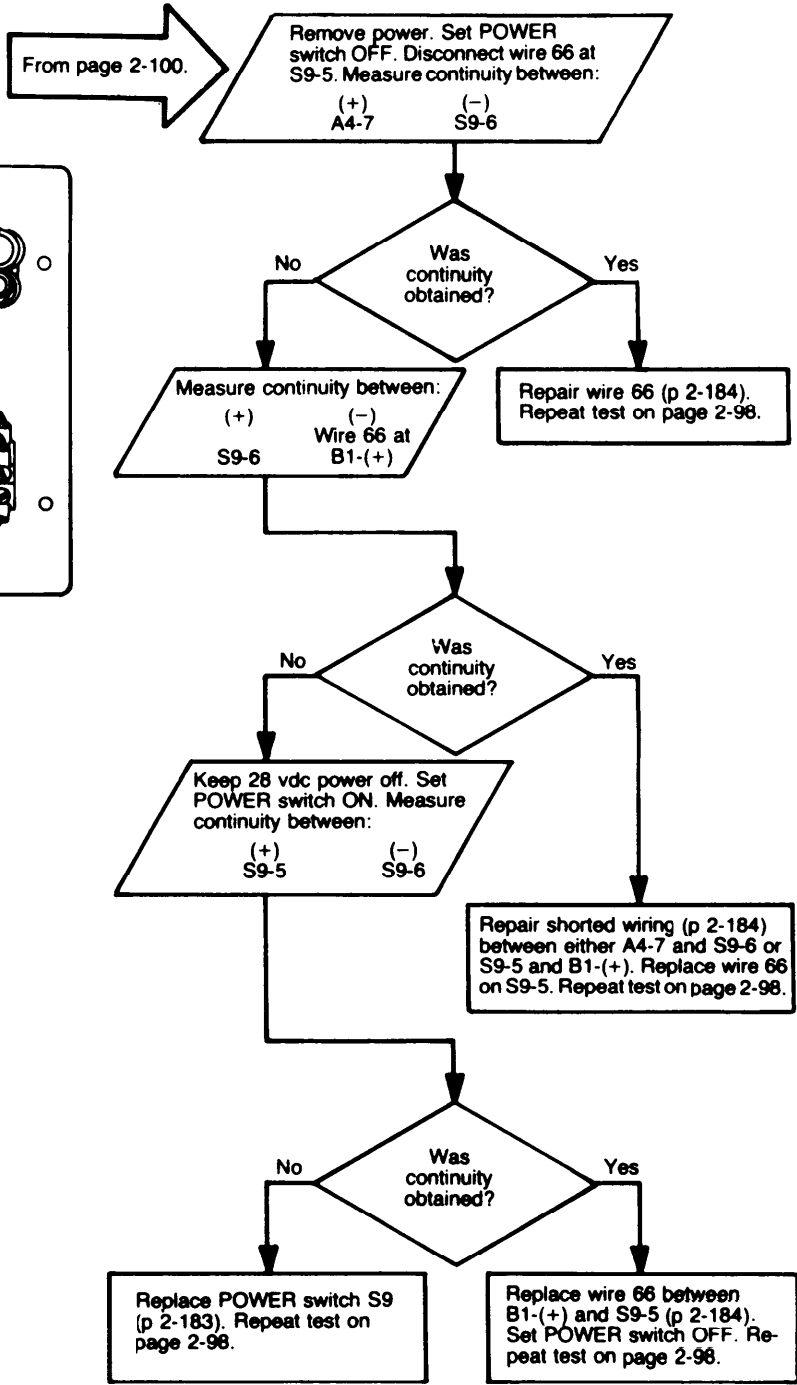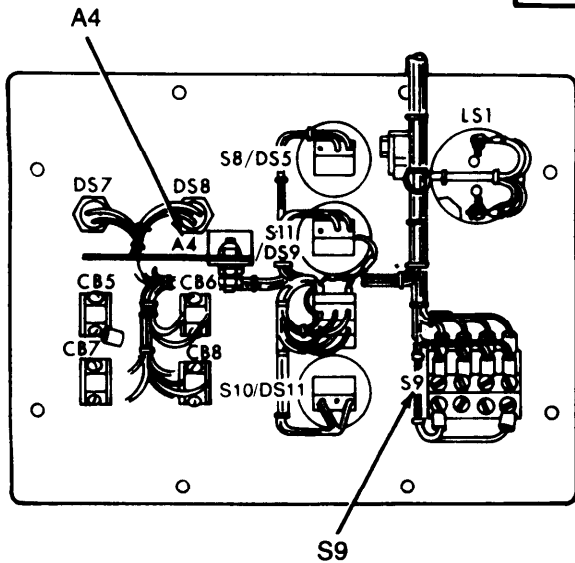

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

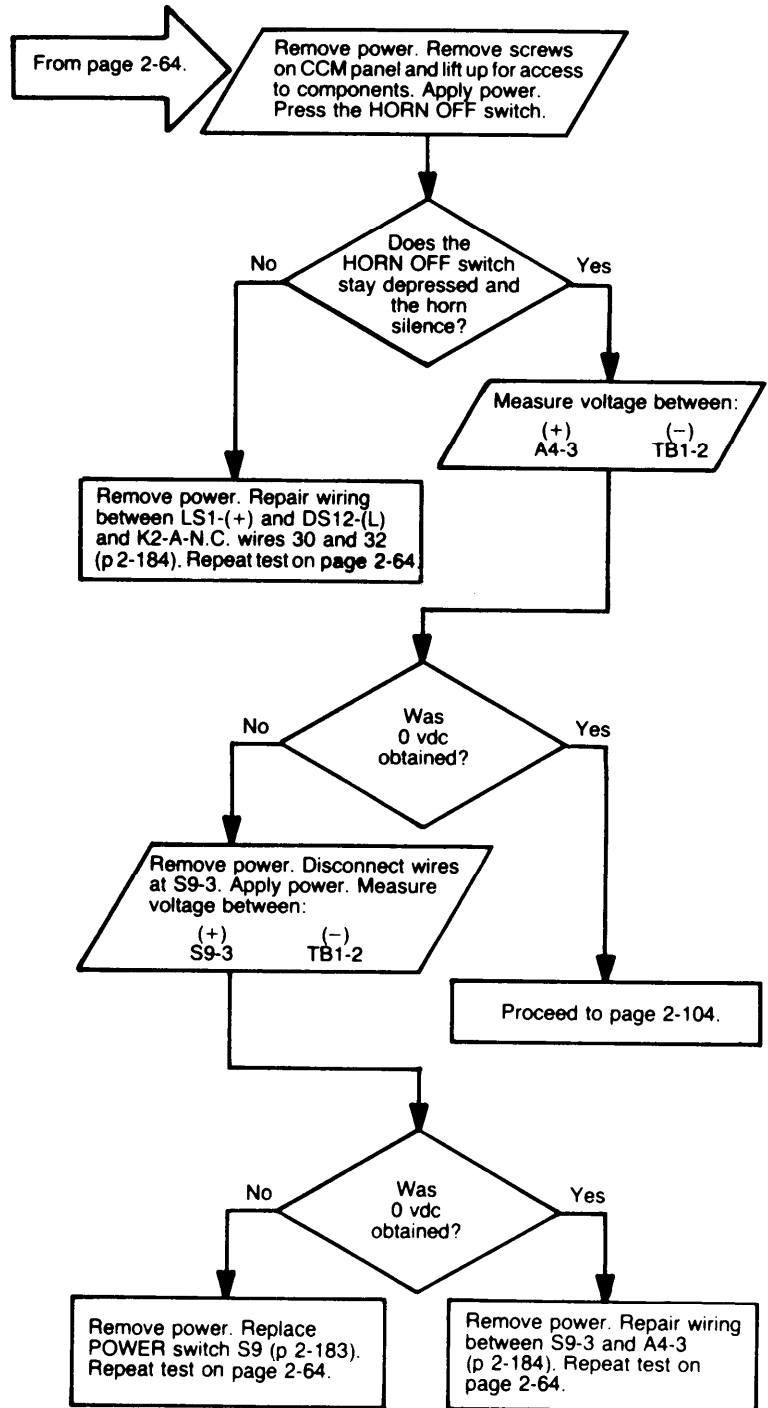


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

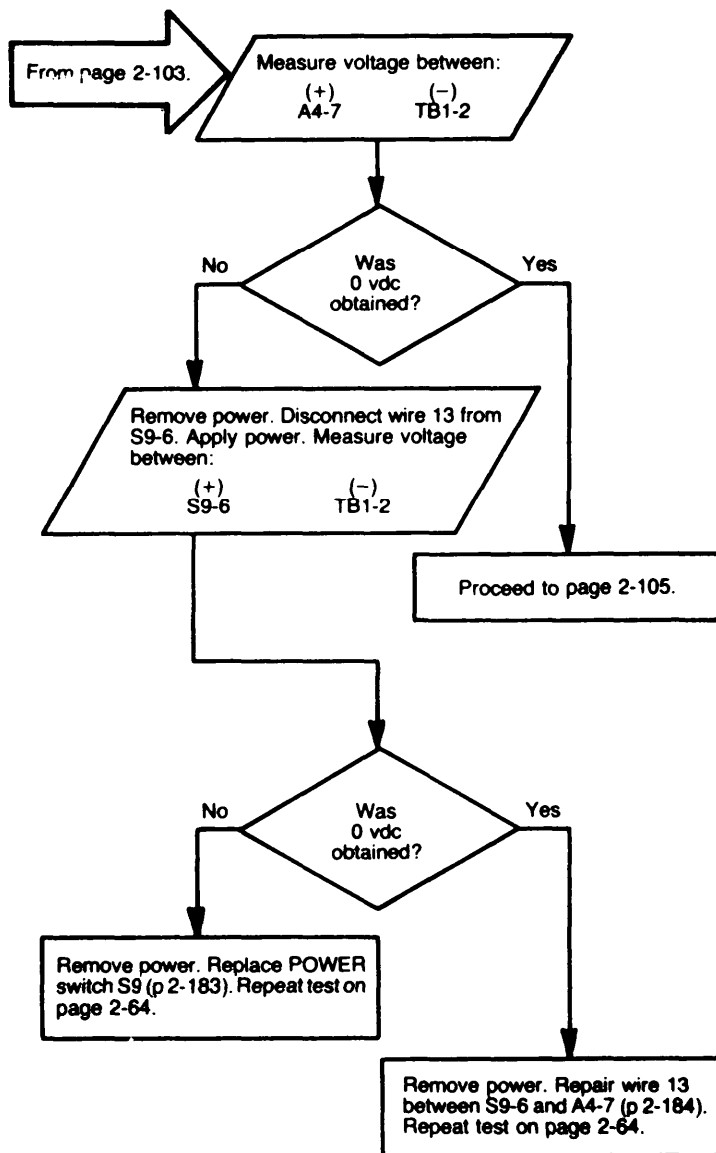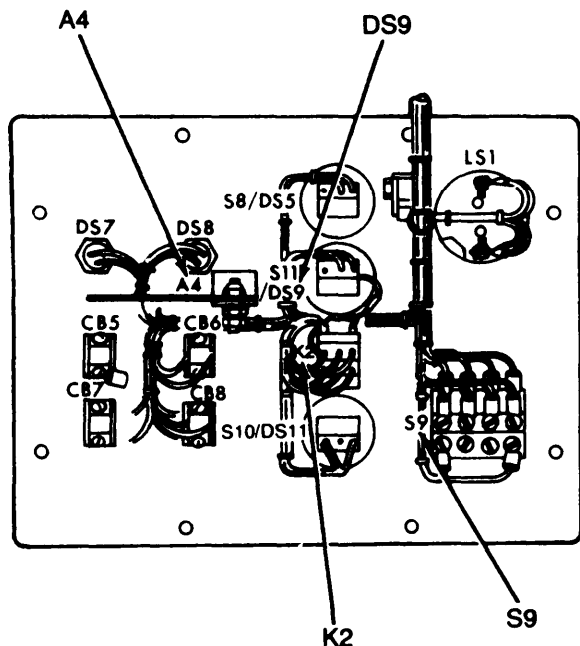





2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

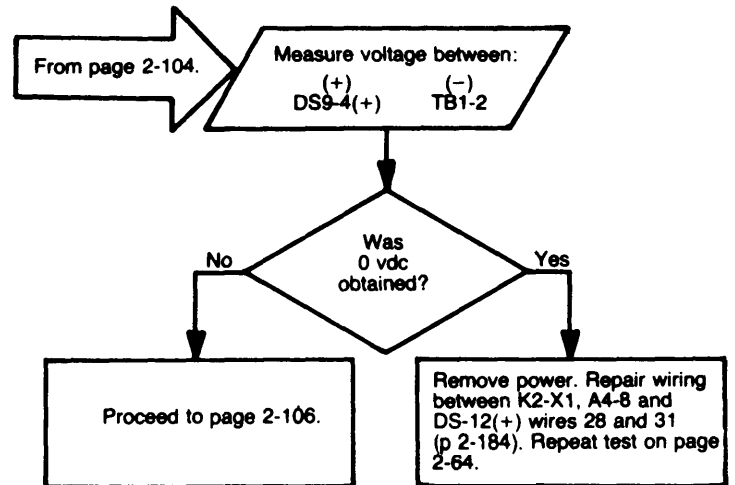




2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

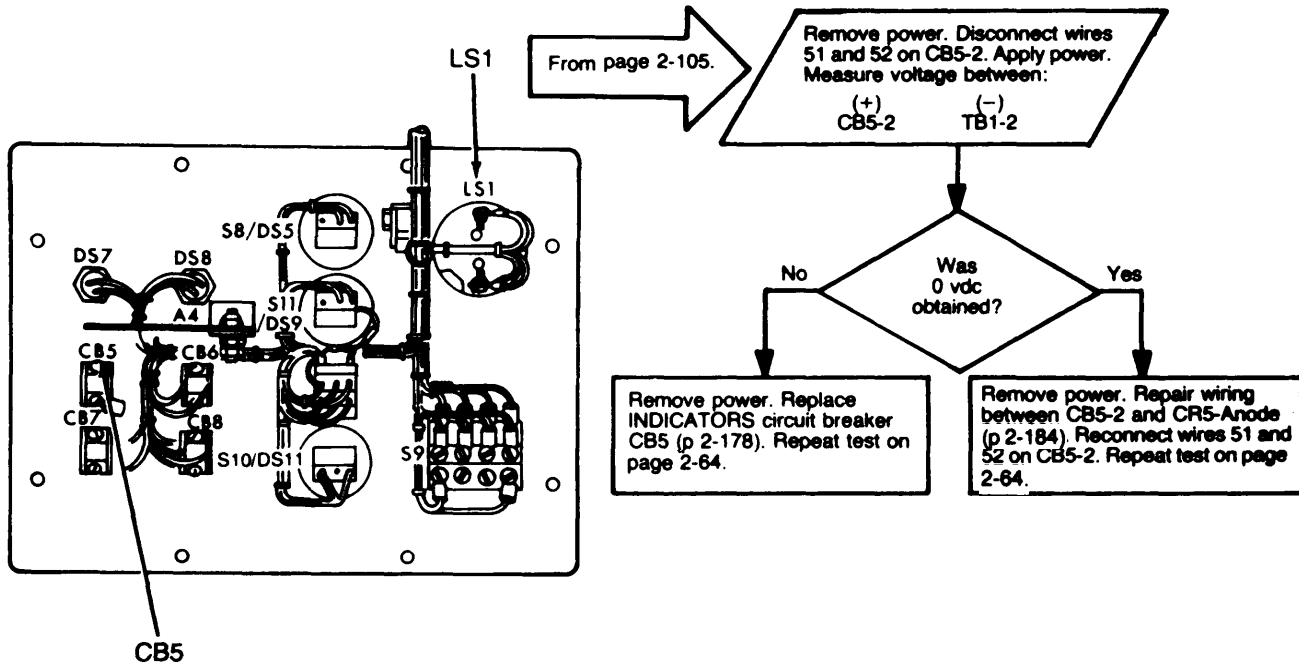


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

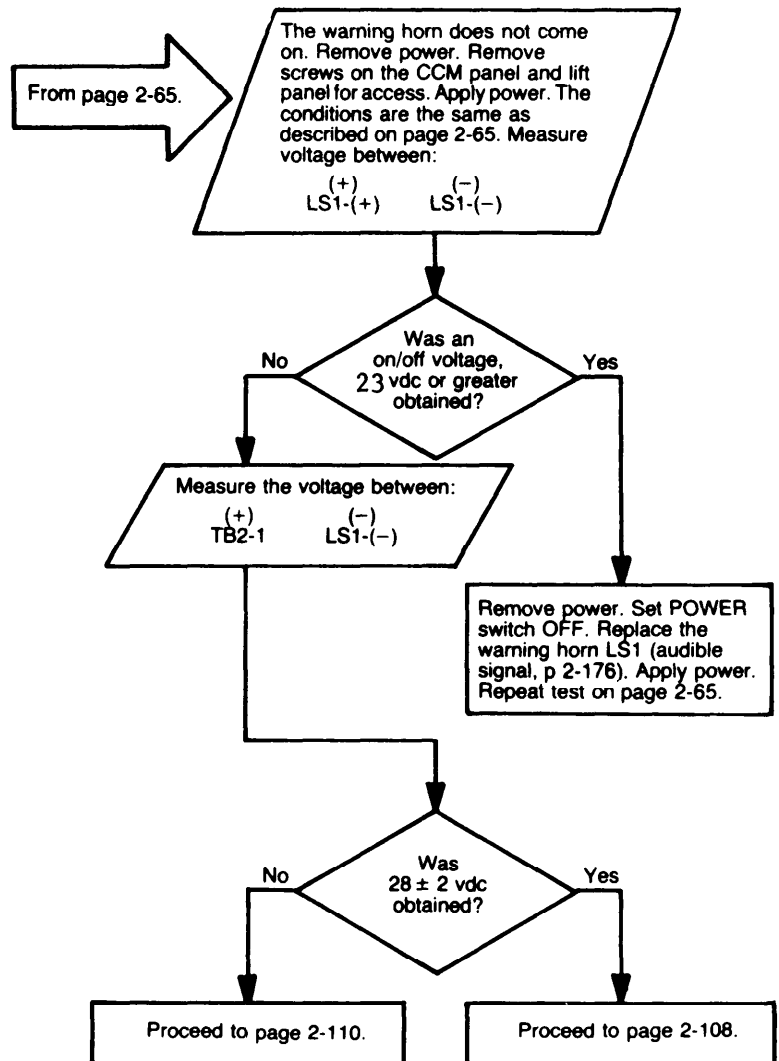

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

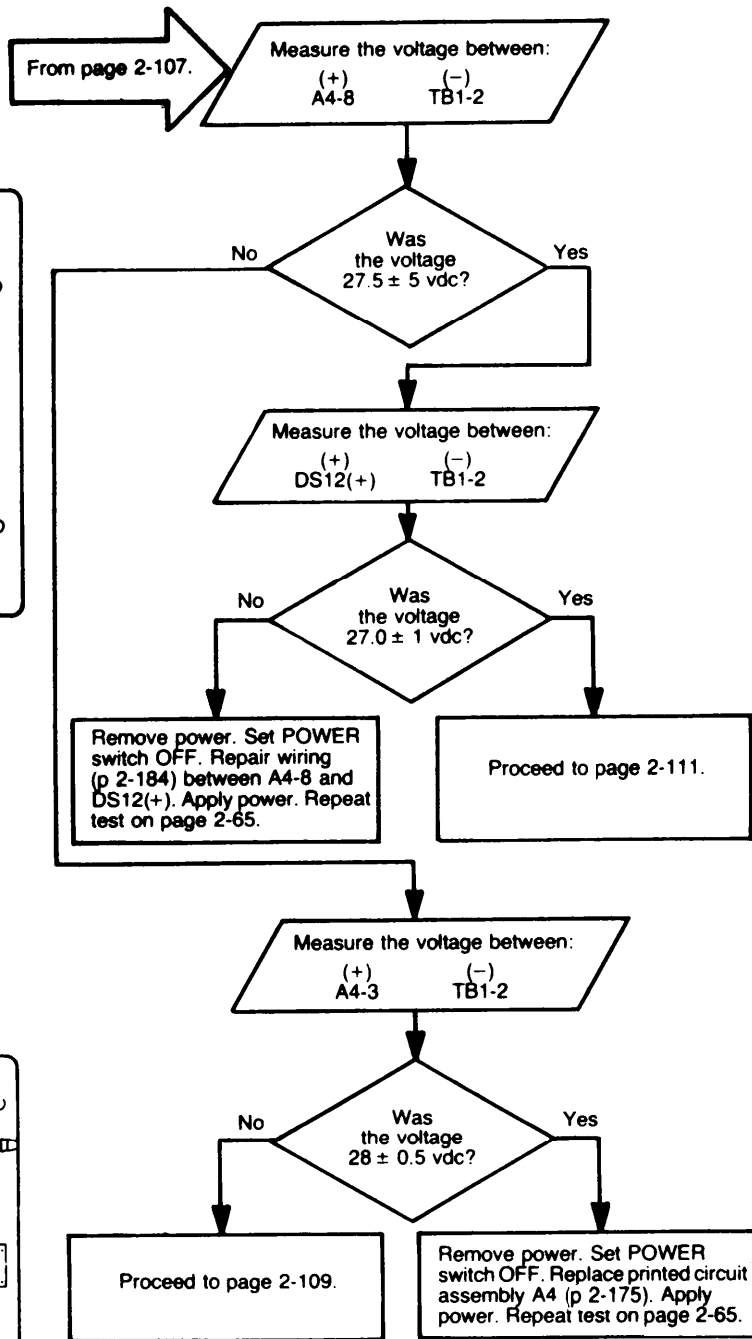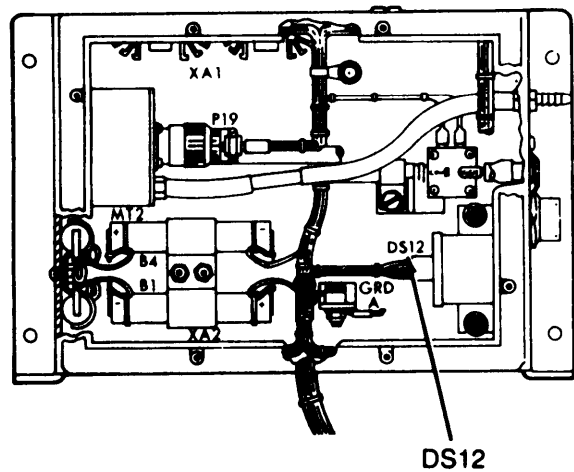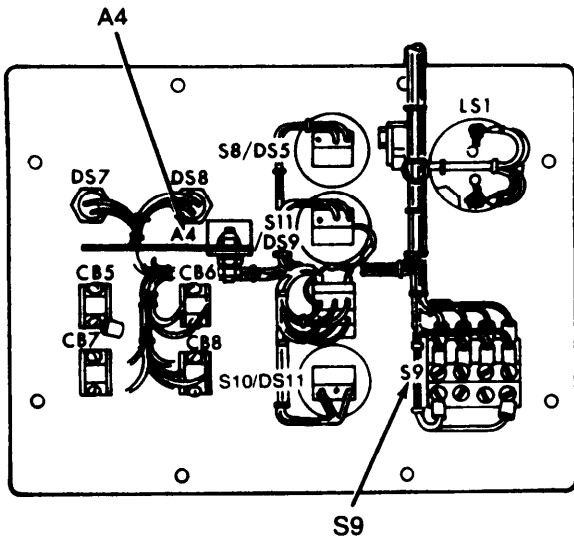


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont). .

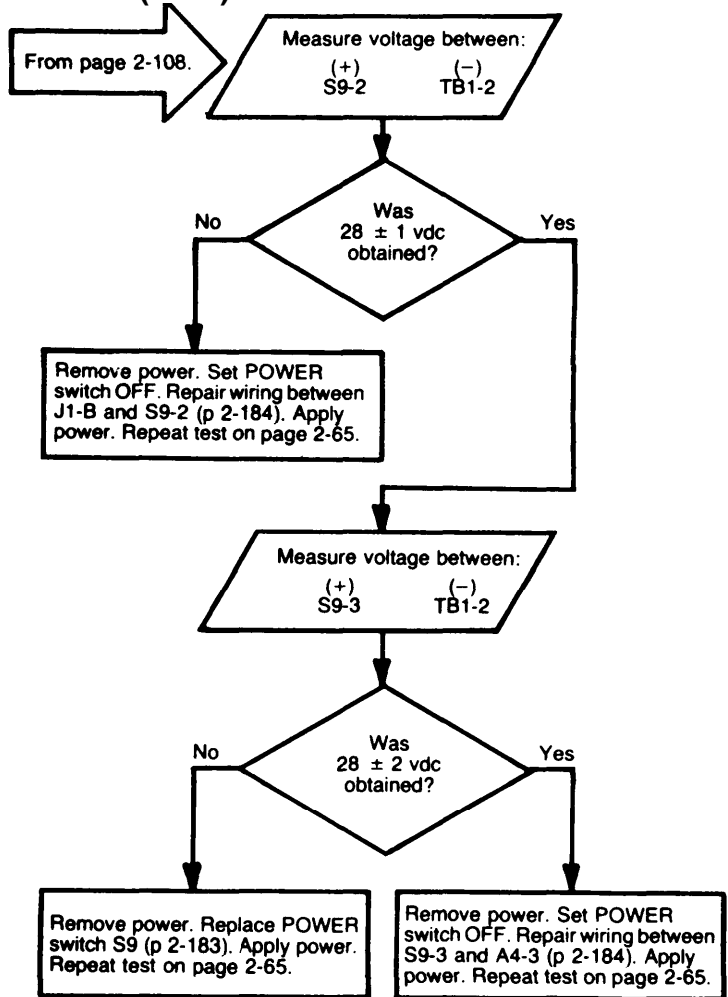

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

From page 2-107.

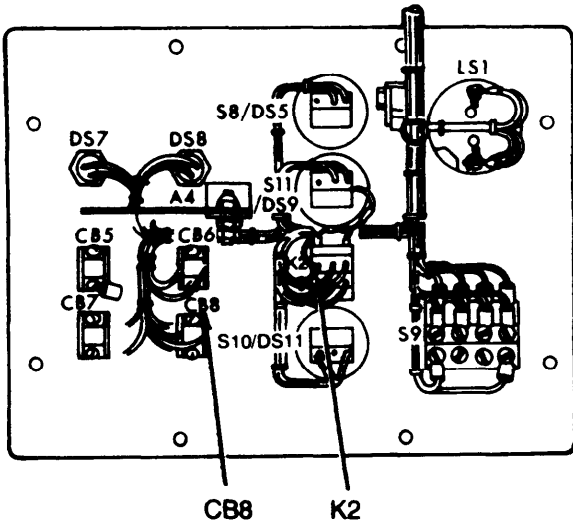




Pressure circuit breaker CB8 provides a dc return signal on its auxiliary contacts to actuate the warning horn LS1 when CB8 is open or tripped. Measure the voltage at the auxiliary terminal CB8-3 (soldered terminal) with respect to dc return.

(+) CB8-3      (-) TB1-2


```

    graph TD
        Start([From page 2-107]) --> D1{Was the voltage less than 1 vdc?}
        D1 -- No --> M1[/Measure the voltage between:  
(+) K2-C on B side of switch  
(-) TB1-2/]
        D1 -- Yes --> M1
        M1 --> D2{Was the voltage less than 1 vdc?}
        D2 -- No --> R1[Remove power. Set POWER switch OFF. Repair wiring between K2-B-C and CB8-3 (p 2-184). Apply power. Repeat test on page 2-65.]
        D2 -- Yes --> M2[/Measure the voltage between:  
(+) K2-N.C. on B side of switch  
(-) TB1-2/]
        M2 --> D3{Was the voltage 0 ± 0 vdc?}
        D3 -- No --> R2[Remove power. Set POWER switch OFF. Replace HORN OFF switch (p 2-182). Apply power. Repeat test on page 2-65.]
        D3 -- Yes --> R3[Remove power. Set POWER switch OFF. Repair wiring (p 2-184) between K2-B-N.C. and LS1-(-). Apply power. Repeat test on page 2-65.]
        R1 --> M3[/Remove power. Measure for continuity to ground:  
(+) CB8-4  
(-) TB1-2/]
        R2 --> M3
        R3 --> M3
        M3 --> D4{Was continuity obtained?}
        D4 -- No --> R4[Set POWER switch OFF. Repair wire to TB1-5. Apply power. Repeat test on page 2-65.]
        D4 -- Yes --> R5[Set POWER switch OFF. Replace COMPARTMENT PRESSURE circuit breaker CB8 (p 2-179). Apply power. Repeat test on page 2-65.]
    
```

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

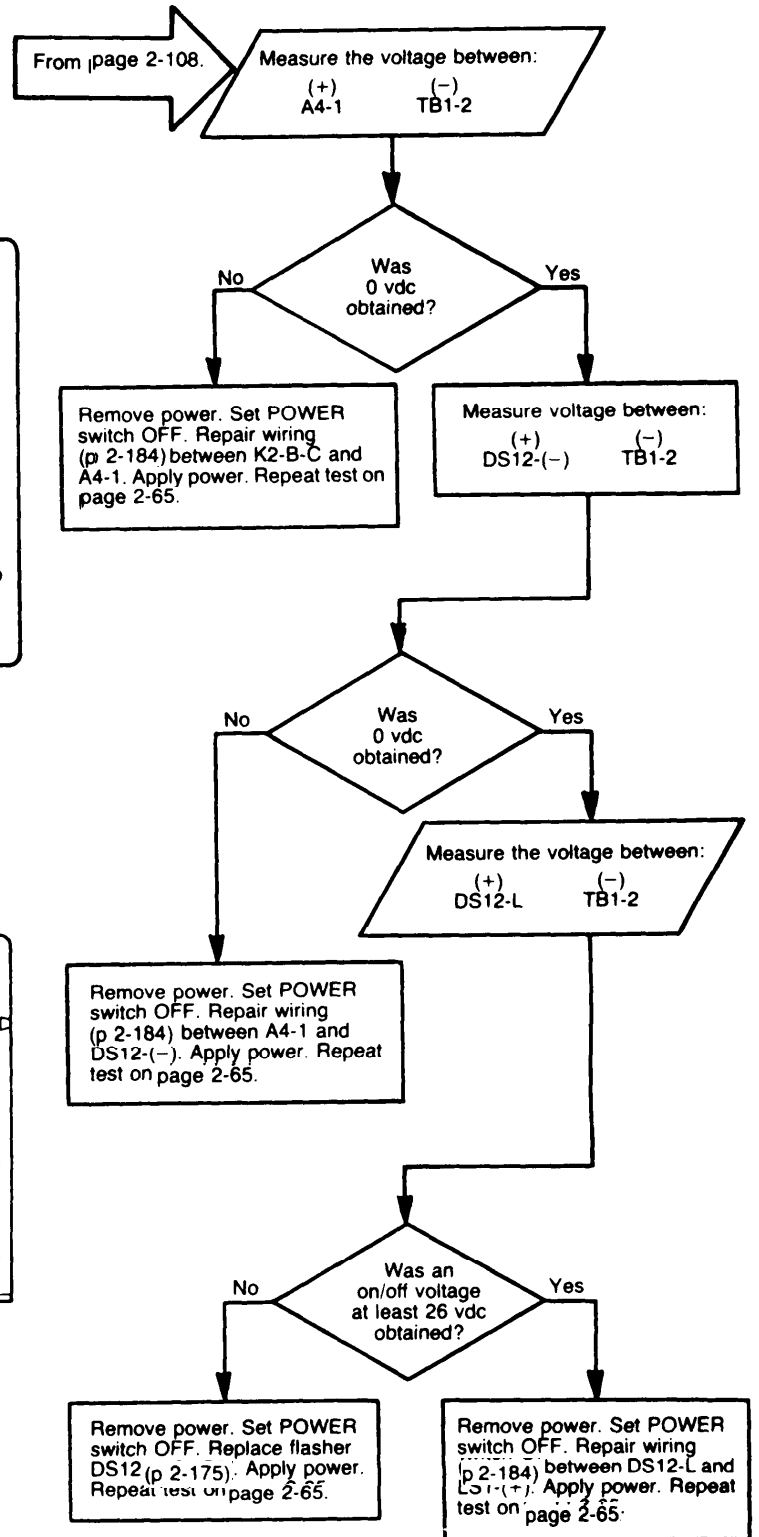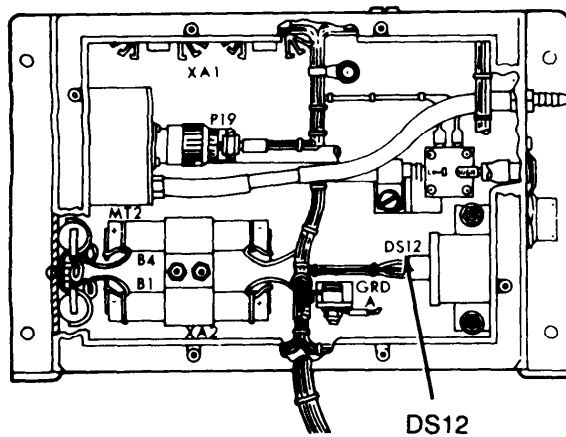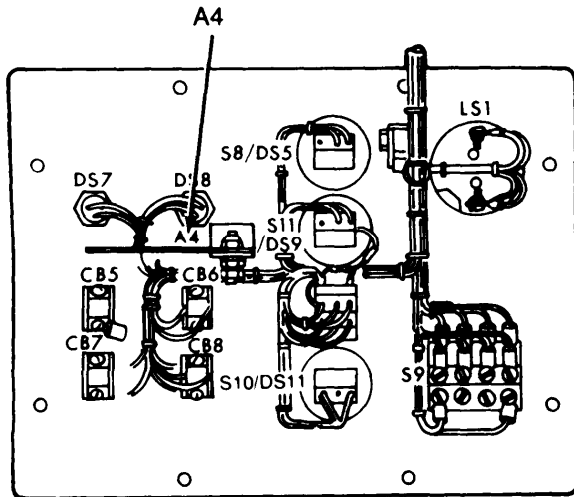

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont)

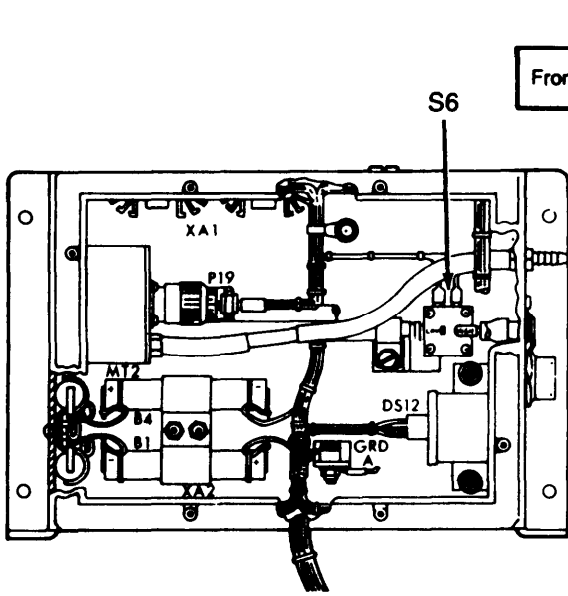


From page 2-65.

Remove power. Remove screws on CCM panel and lift open for access. MASK indicator is on when applied pressure is 1.0 in. wg and all circuit breakers are open. A dc return signal should not be present at MASK light. Connect a jumper across the pressure switch terminals S6-1 and S6-2. Apply power.




No  
Remove power. Remove switching card A2 (p 2-176) to eliminate an erroneous dc return signal from switching circuit. Apply power.

Yes  
Remove power and jumper. Set POWER switch OFF. Replace pressure switch S6 (p 2-172). Repeat test on page 2-65.

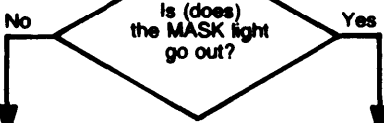




No  
Proceed to page 2-114.

Yes  
Proceed to page 2-113.


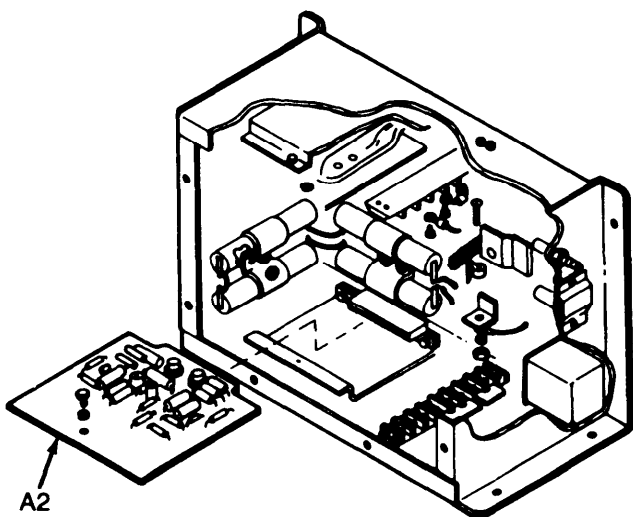





2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

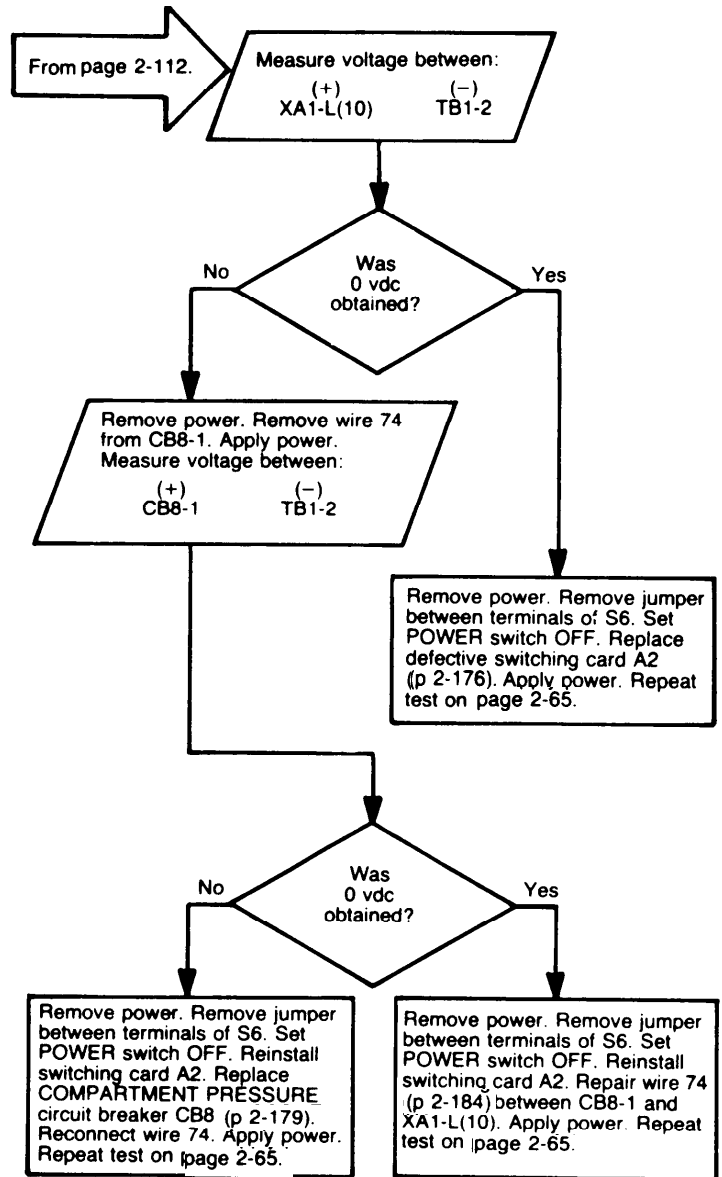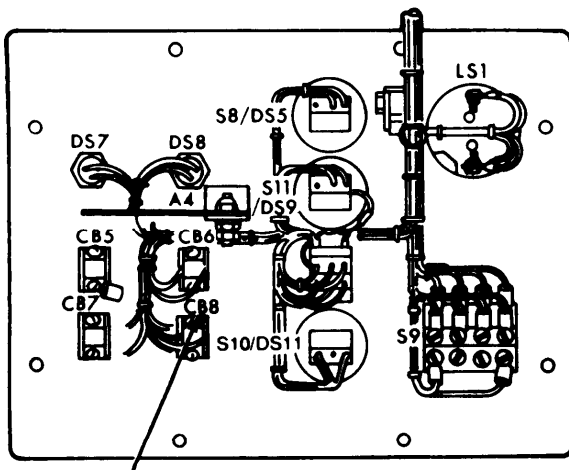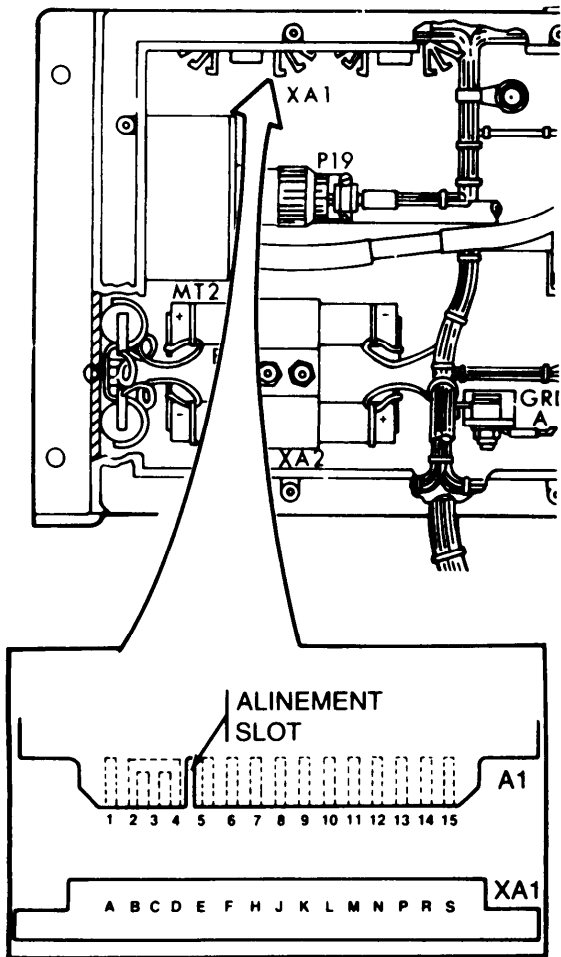




2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

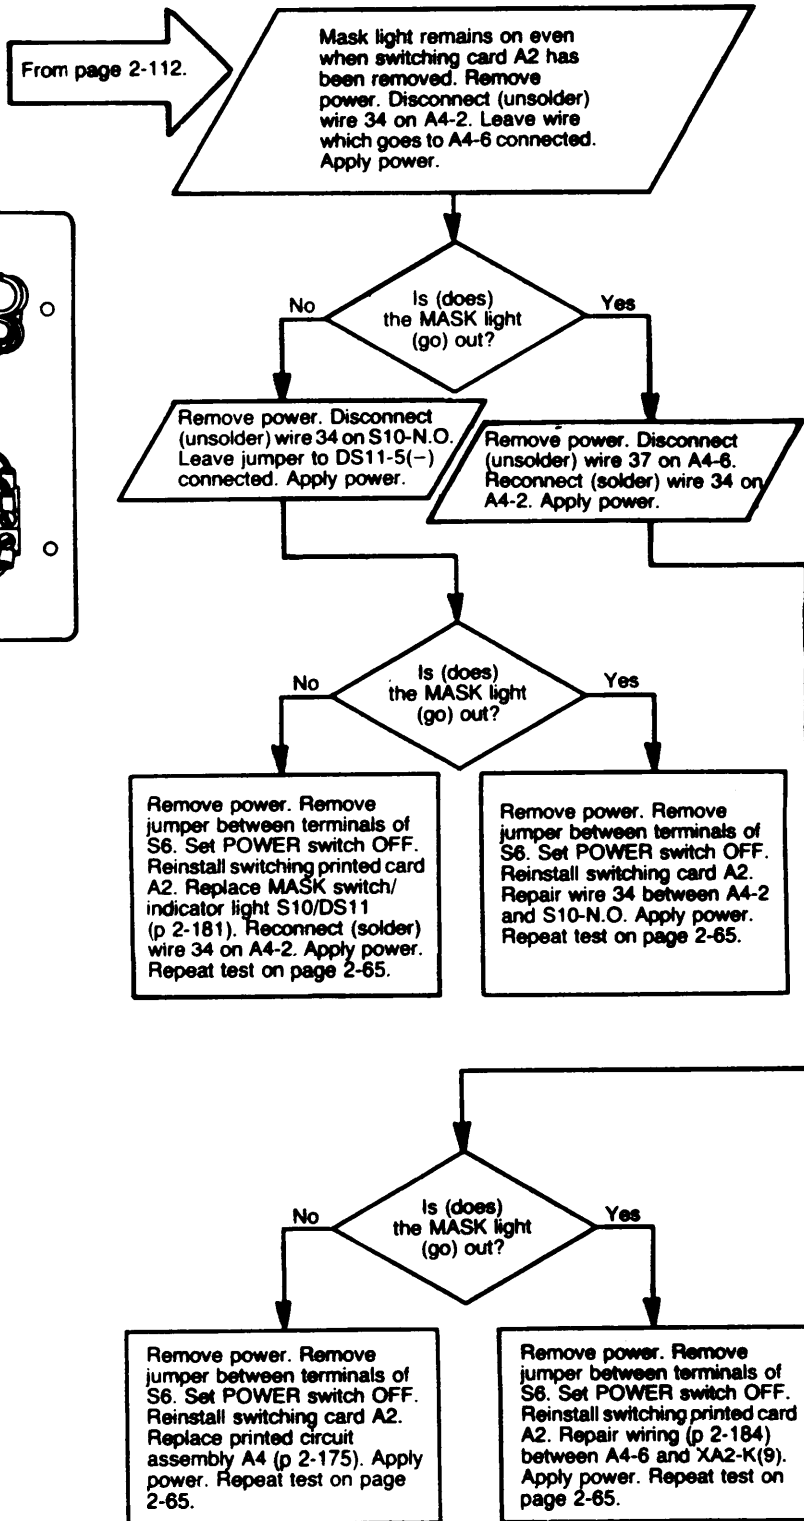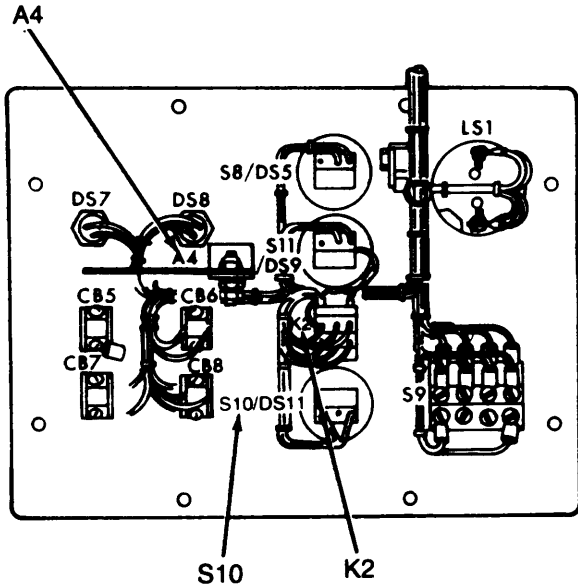


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

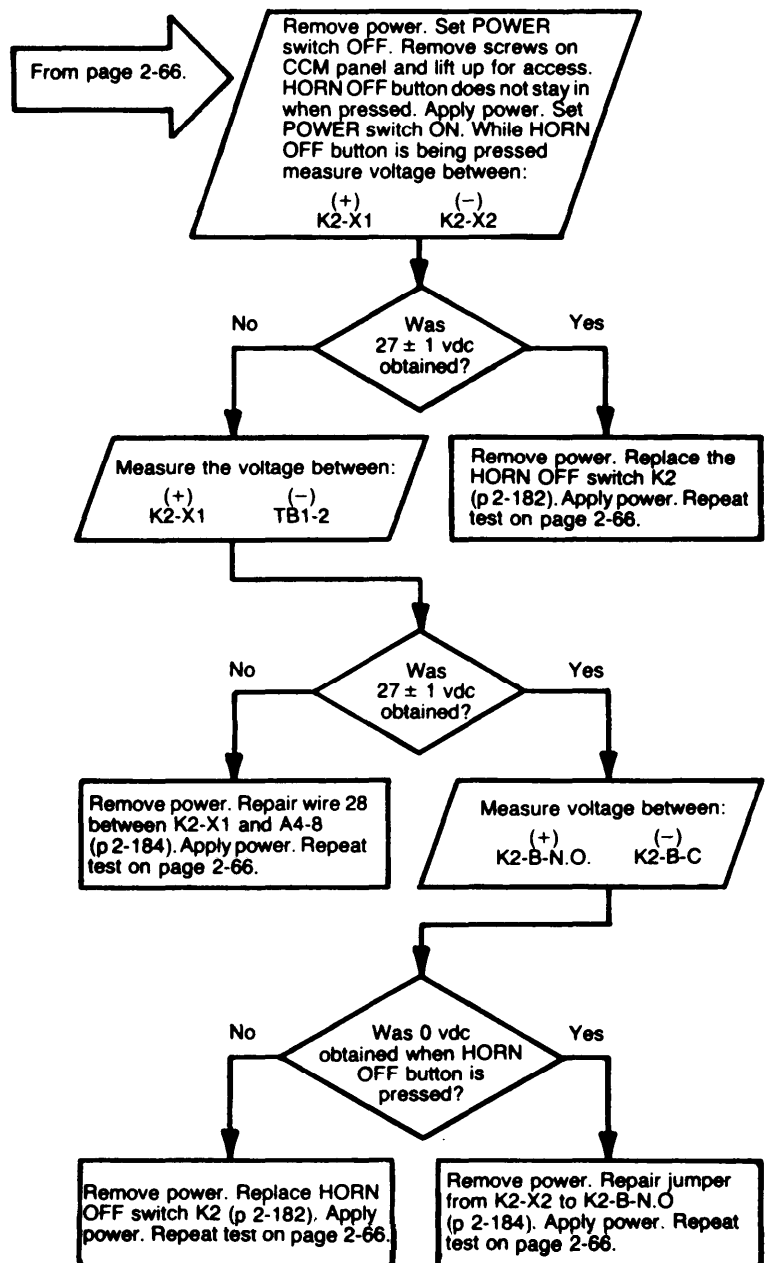



2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

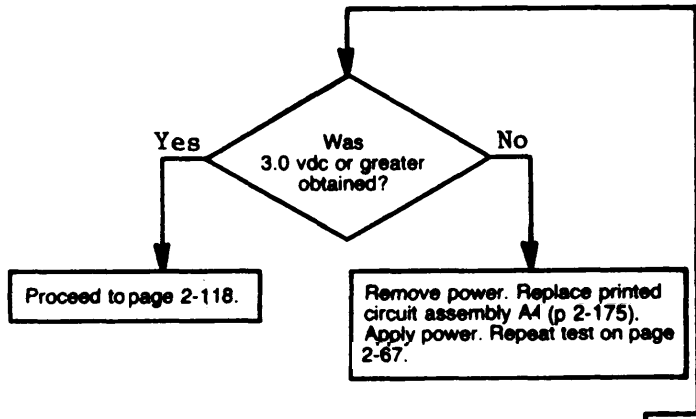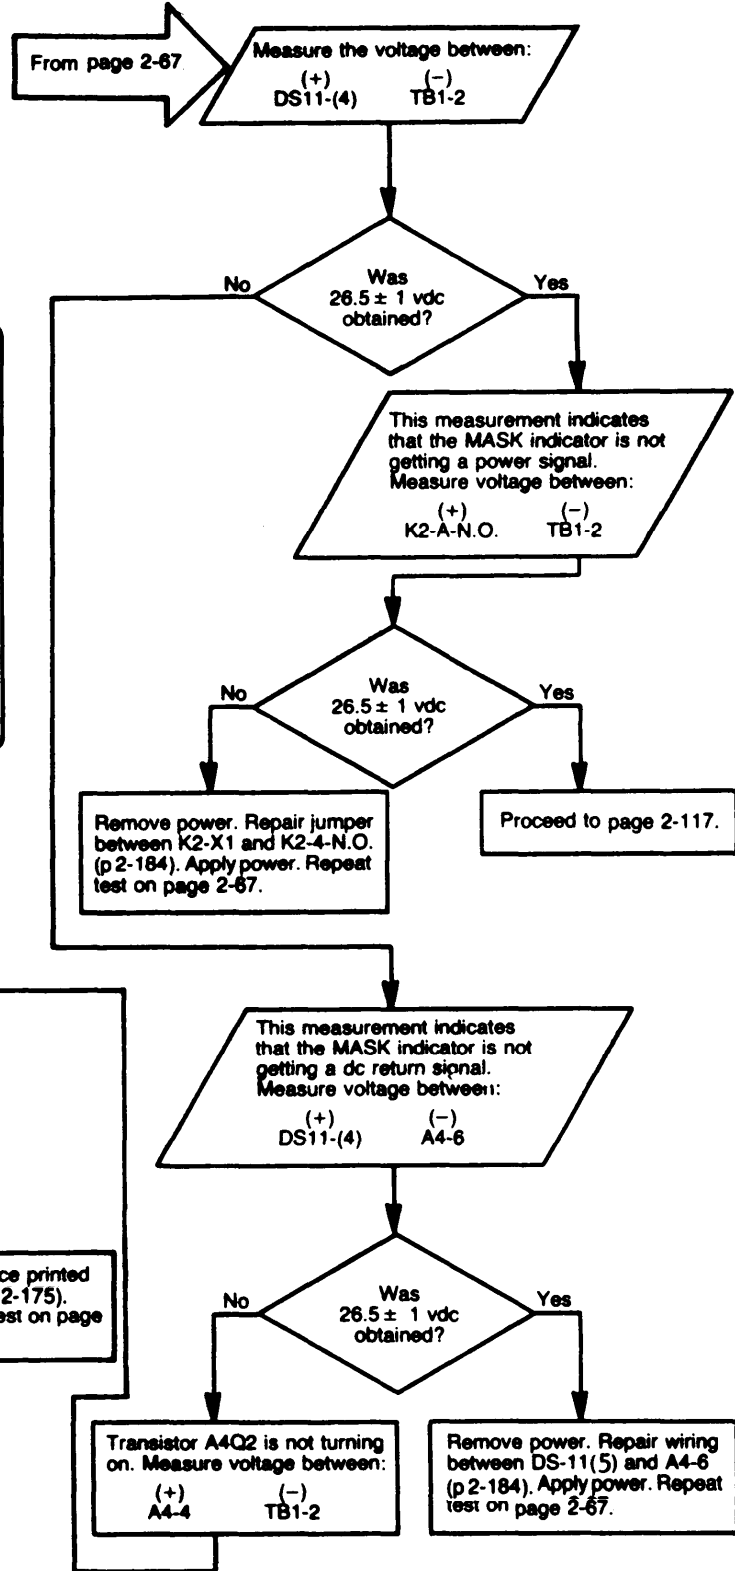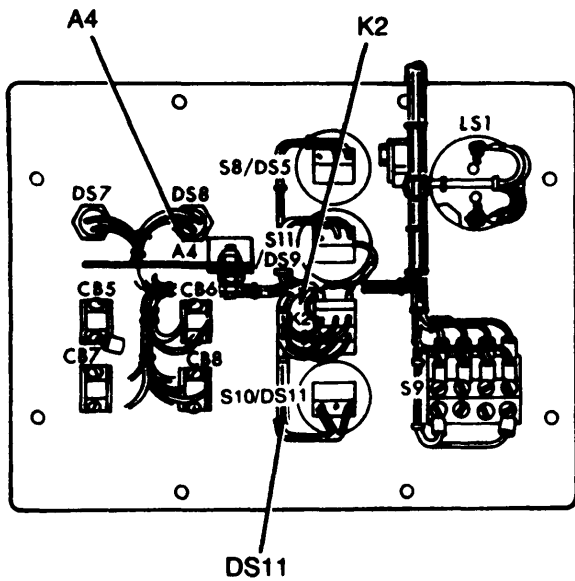


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

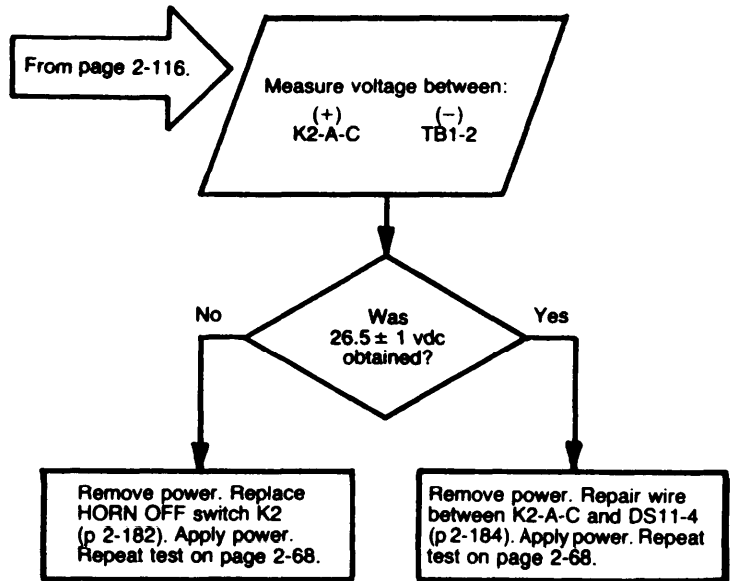

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

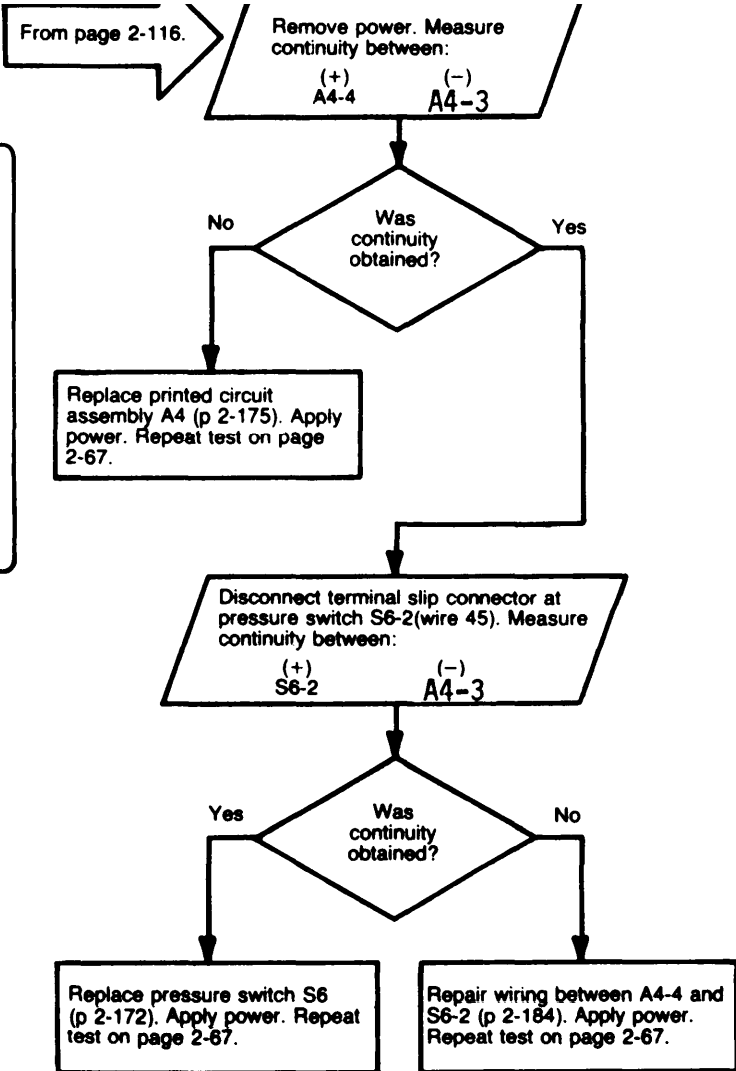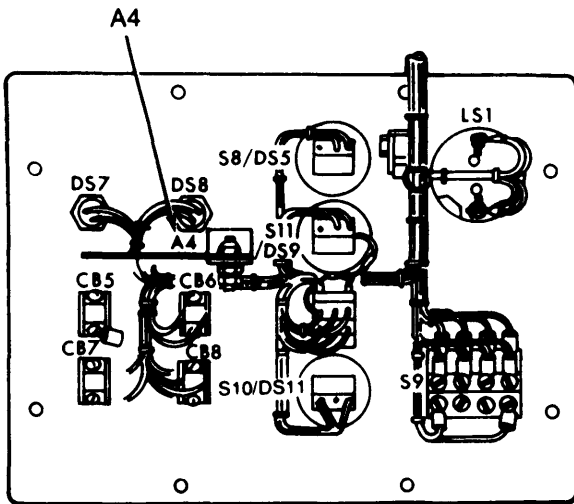

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont)

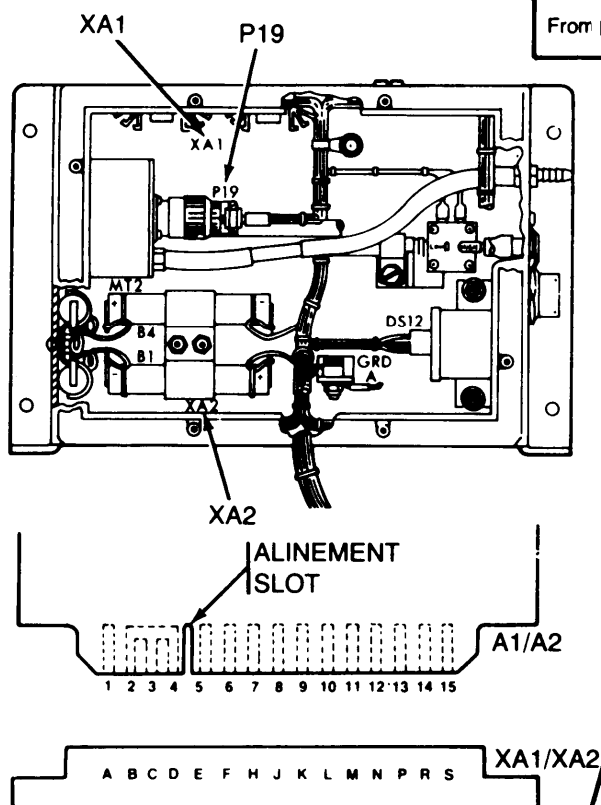

From page 2-68.

Remove power. Set POWER switch OFF. Remove screws on CCM panel and lift up for access to components. Disconnect power connection at J1-B and reconnect with ammeter as follows:

(+)	(-)
Positive of 28 vdc supply	J1-B

Apply power. Set POWER switch ON.

Is current less than 1/2 amp?

Remove power. Remove switching and power cards A2 (p 2-176) and A1 (p 2-174). Install jumpers as indicated:

(From)	(To)
XA1-L(10)	XA2-E(5)
XA1-H(7)	XA2-D(4)

Remove ammeter and reconnect 28 vdc supply positive to J1-B. Apply power.

Remove power. Replace COMPARTMENT PRESSURE circuit breaker (p 2-179). Remove ammeter and reconnect 28 vdc supply positive to J1-B. Apply power. Repeat test on page 2-68.

Does the COMPARTMENT PRESSURE circuit breaker remain set?

Remove power. Repair wiring (short) from CB8-1 to XA1-L(10) or XA2-E(5) to P19-A (p 2-184). Remove jumpers. Reinstall A1 and A2. Apply power. Repeat test on page 2-68.



Remove power. Replace pressure transducer (p 2-173). Remove jumpers. Reinstall A1 and A2. Apply power. Repeat test on page 2-68.

Does the COMPARTMENT PRESSURE circuit breaker remain set?



Remove power. Disconnect pressure transducer connector plug P19. Reset circuit breaker. Apply power.

Remove power. Remove jumpers. Proceed to page 2-120.

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

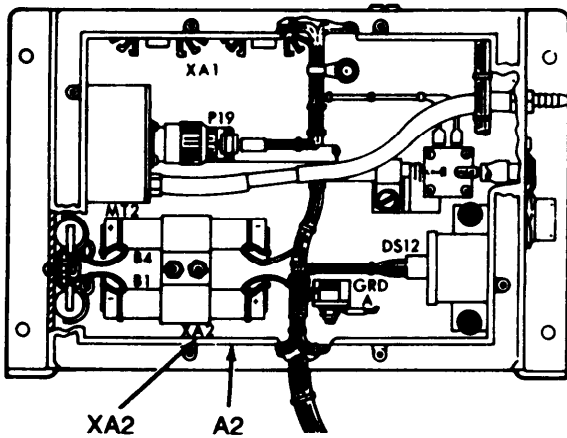
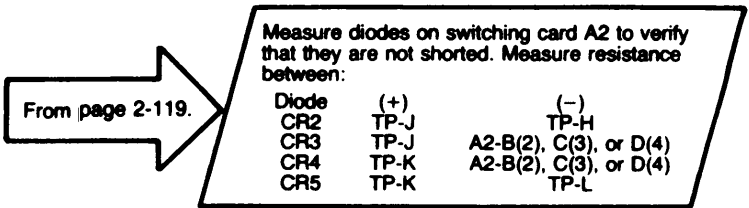


● = TP (TEST POINT)

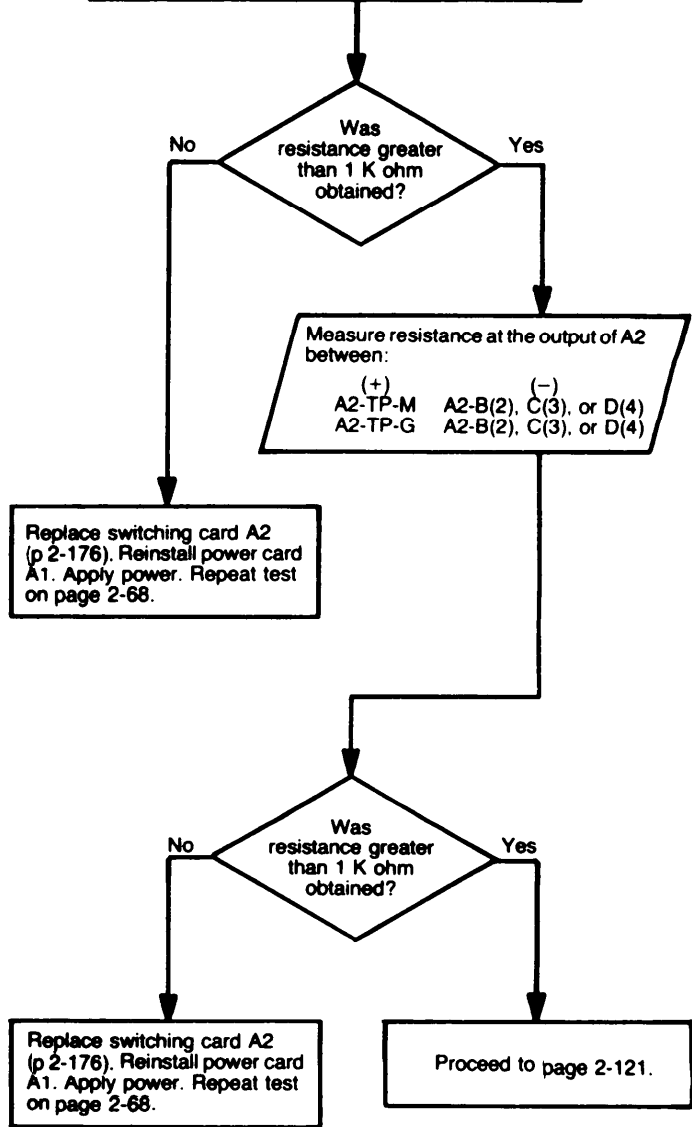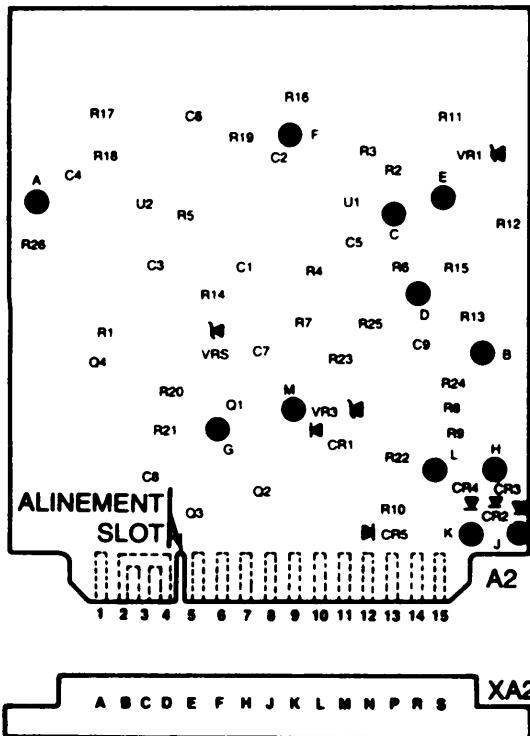




2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

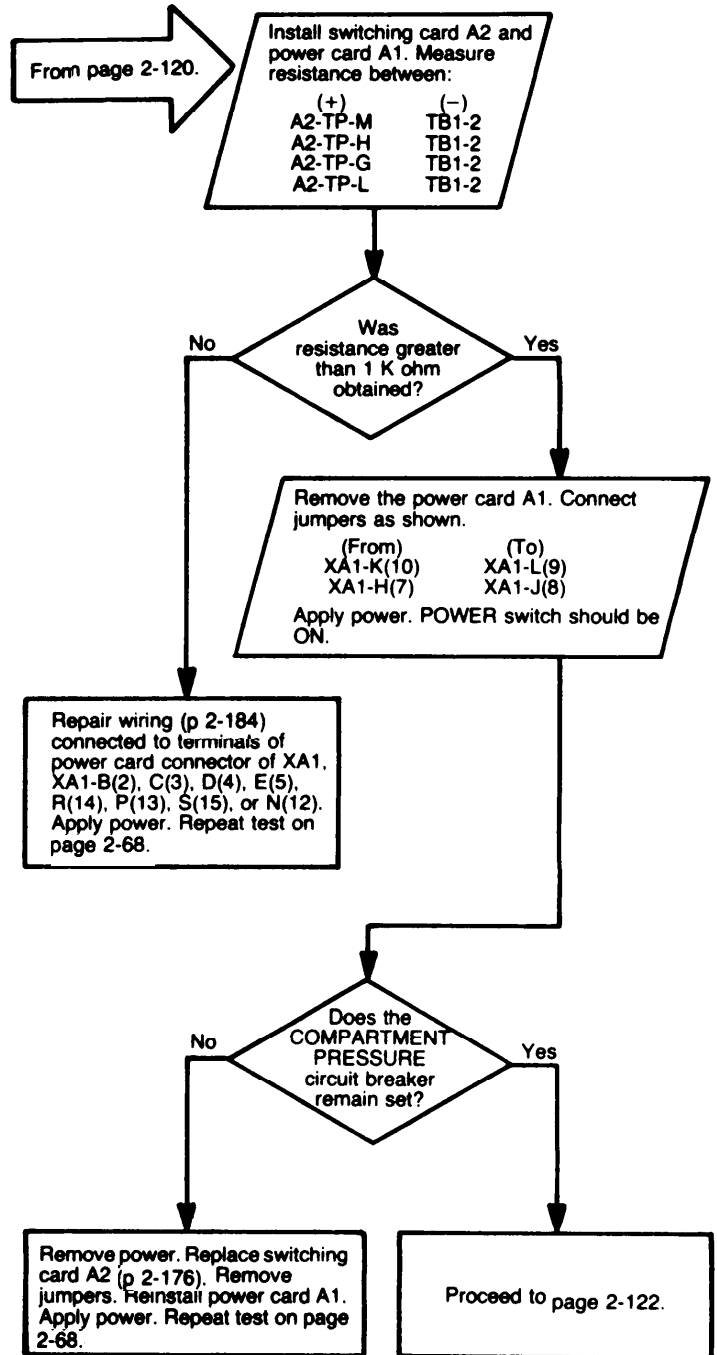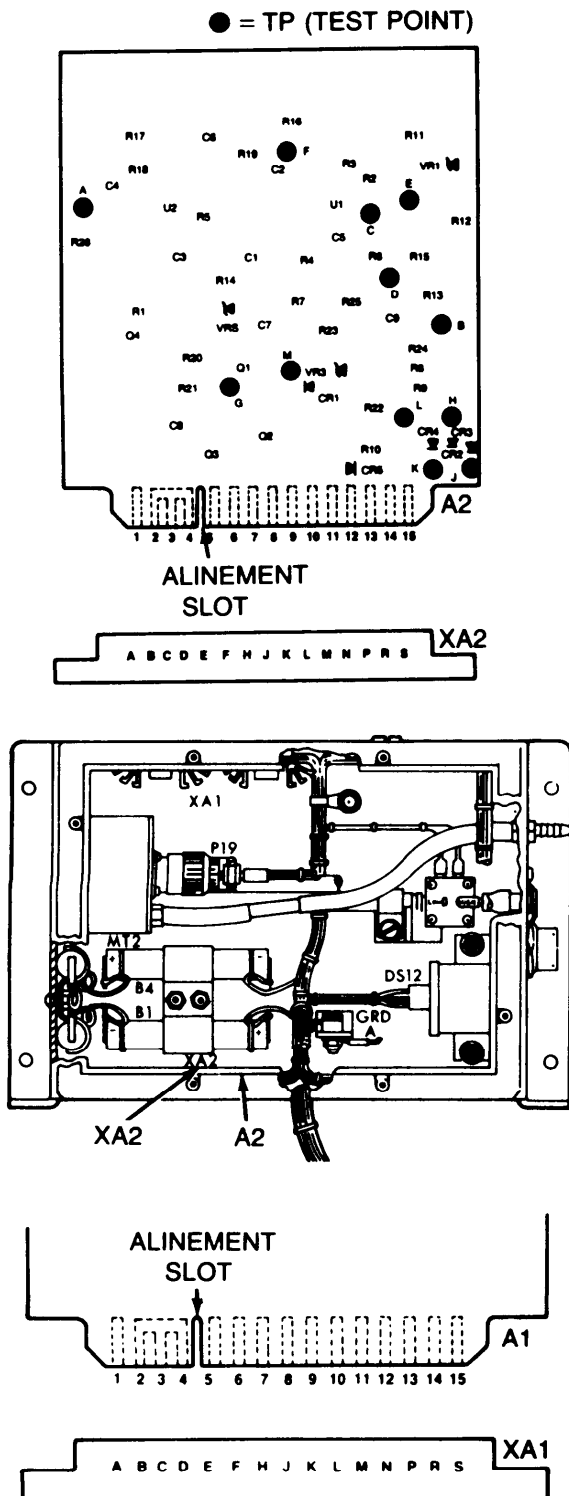



2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

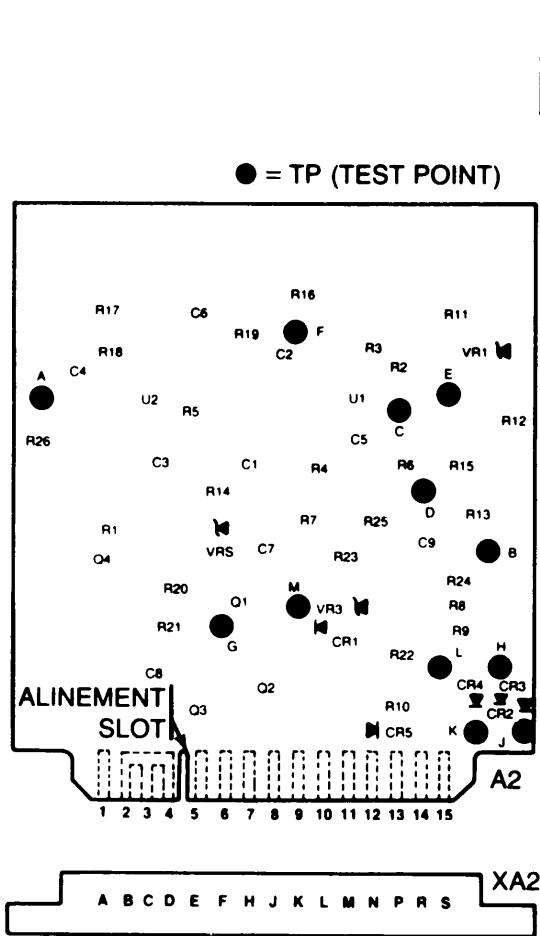


From page 2-121.

Apply vacuum to CCM as indicated below and measure test point (TP) voltage on switching card A2 with respect to TB1-2 as indicated.



Pressure (in. wg)	Voltage at test points	
	TP-M	TP-G
0	25 ± 2	< 1
1.2	9.3 ± 3.5	< 1
1.45	< 1	< 1
1.7	< 1	9.3 ± 3.5
2.5	< 1	25.3 ± 2

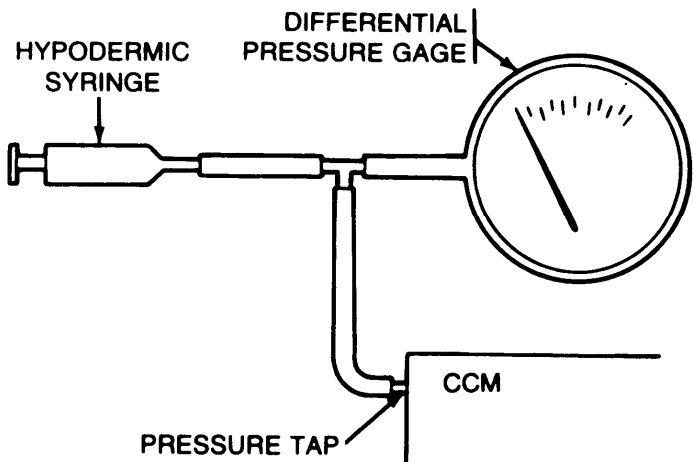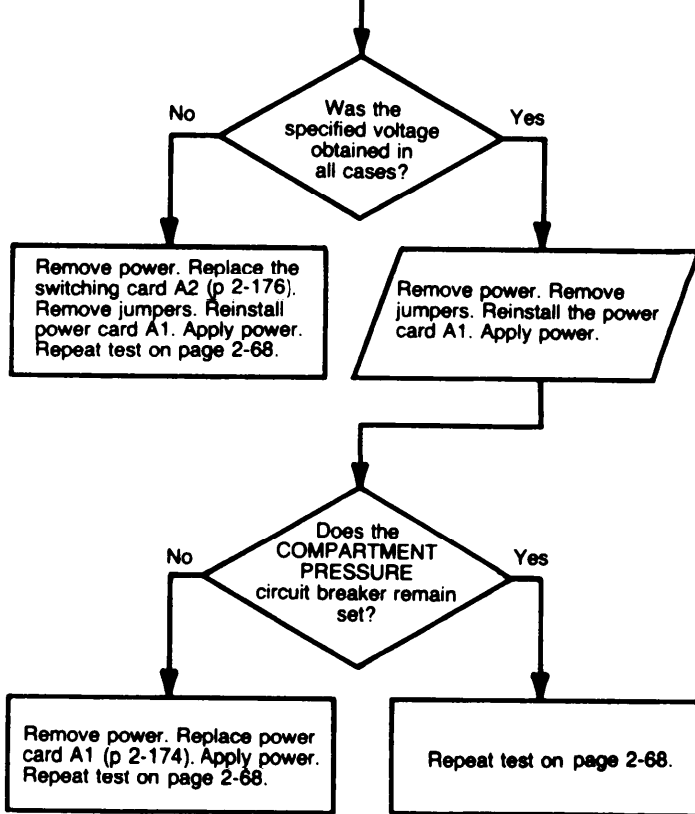

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

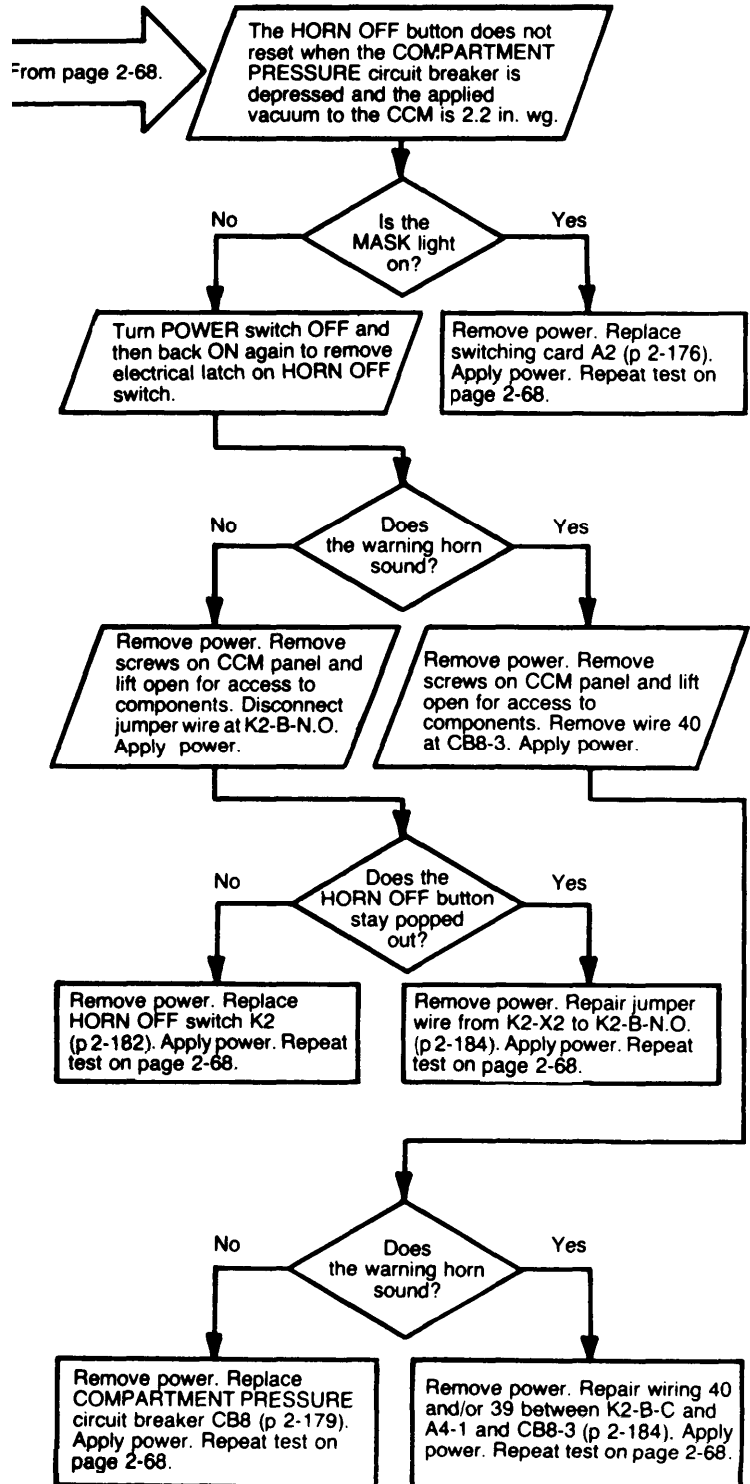

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

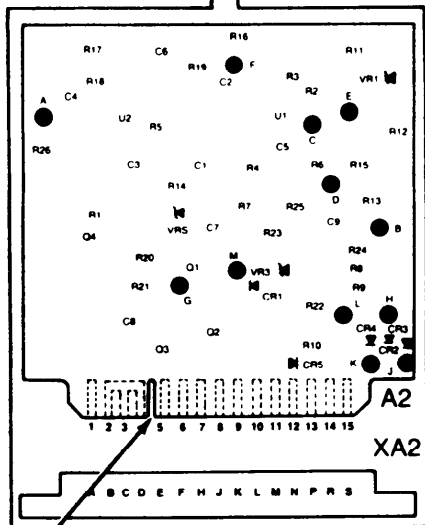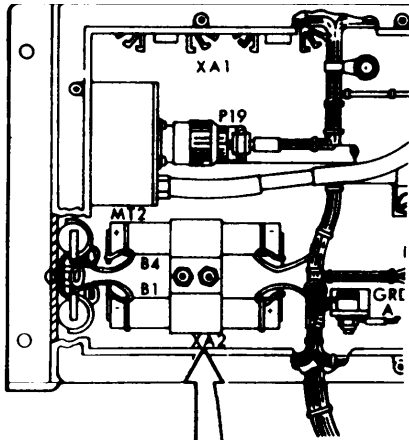

ALINEMENT SLOT

From page 2-68, Set POWER switch OFF. Remove the screws from the CCM panel and lift open for access to components. Set POWER switch ON. Measure voltage between:

(+)	(-)
A2-TP-J	A2-TP-K

Was 22.5 to 26.5 vdc obtained?

Measure voltage between:

(+)	(-)
A2-TP-B	TB1-2

Remove power. Remove switching and power cards A2 (p 2-176) and A1 (p 2-174). Check the following wires for continuity and repair as necessary (p 2-184).

Wire No.	From(+)	To(-)
77	XA2-S(15)	XA1-B(2)
78	XA2-R(14)	XA1-E(5)
70	XA1-C(3)	S9-N(12)
71	XA1-D(4)	S9-K(9)

Reinstall cards A1 and A2. Apply power. Repeat test on page 2-68.

Was  $28 \pm 1$  vdc obtained?

Measure voltage between:

(+)	(-)
CB8-1	TB1-2

Was  $28 \pm 1$  vdc obtained?

Proceed to page 2-125.

Remove power. Repair wire 74 (p 2-184) between CB8-1 and XA1-L(10). Apply power. Repeat test on page 2-68.

Measure voltage between:



(+)	(-)
A2-TP-B	XA2-C(3)

Was  $28 \pm 2$  vdc obtained?


Remove power. Repair wiring (p 2-184) from J1-A to TB1, from TB1 to XA1-7, or from XA1-8 to XA2-3. Apply power. Repeat test on page 2-68.

Proceed to page 2-126.




2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

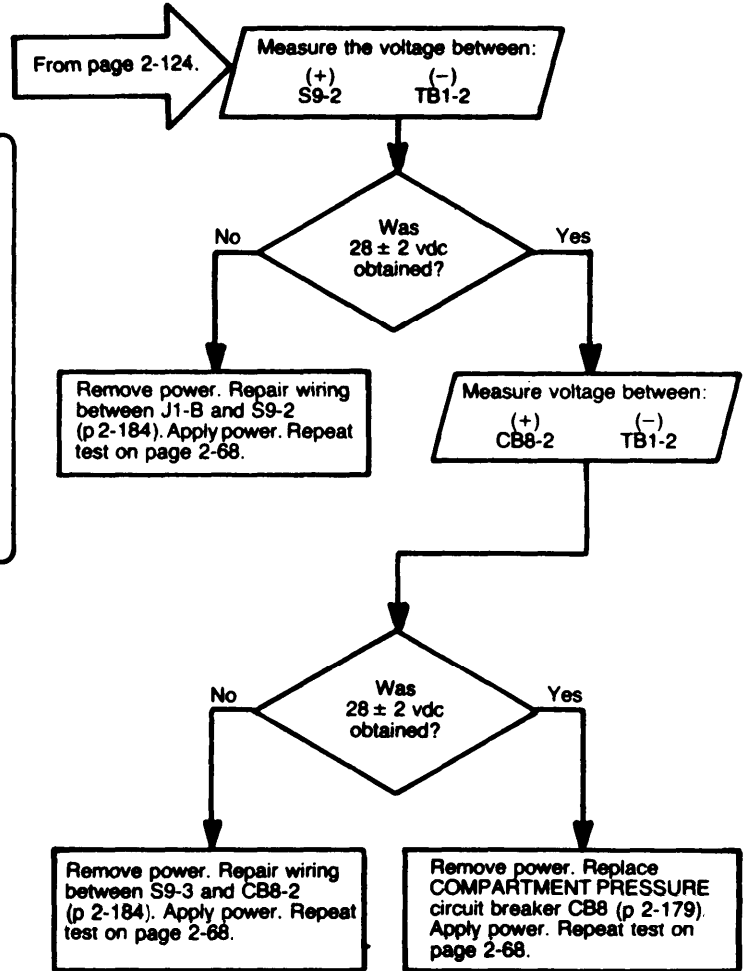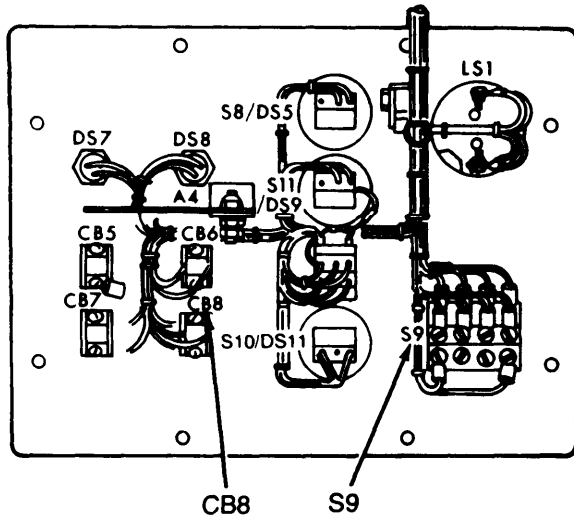


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

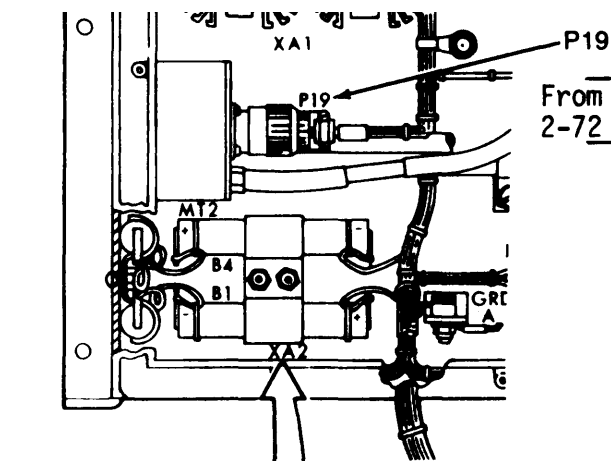


From page 2-69, 2-72 and 2-124.

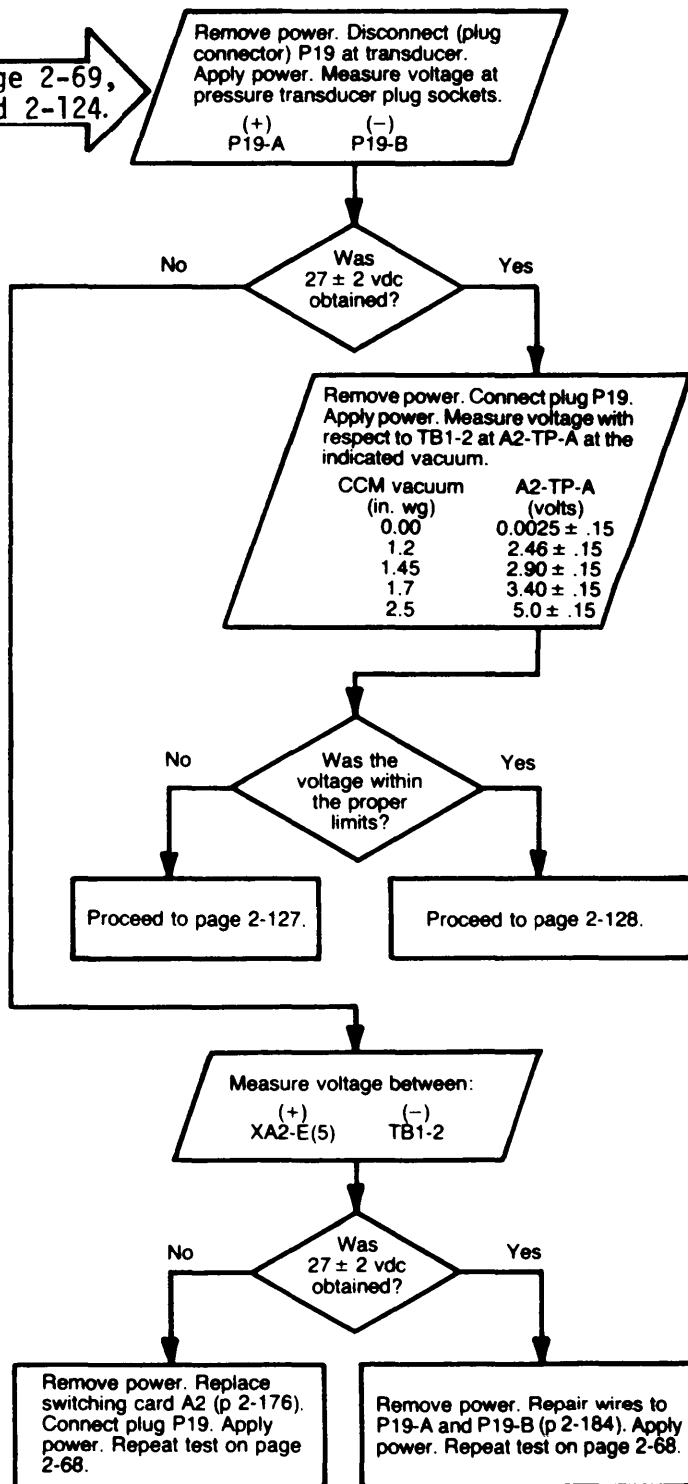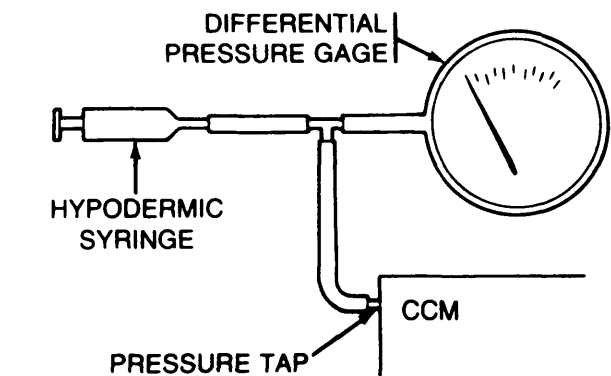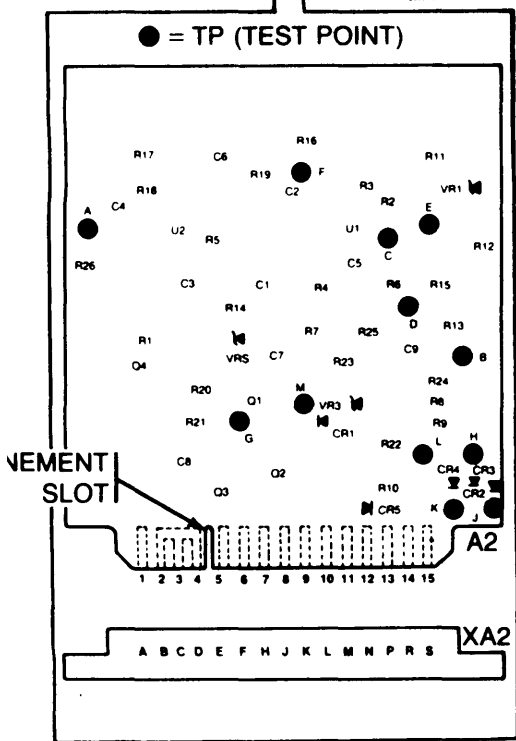

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

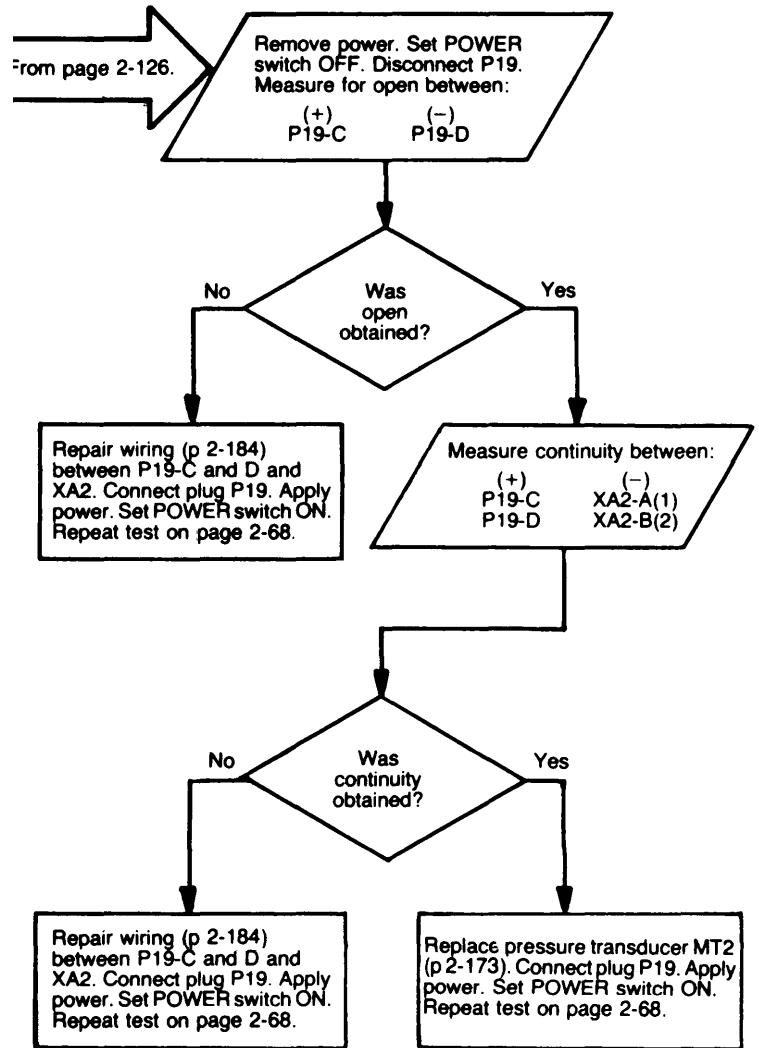

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

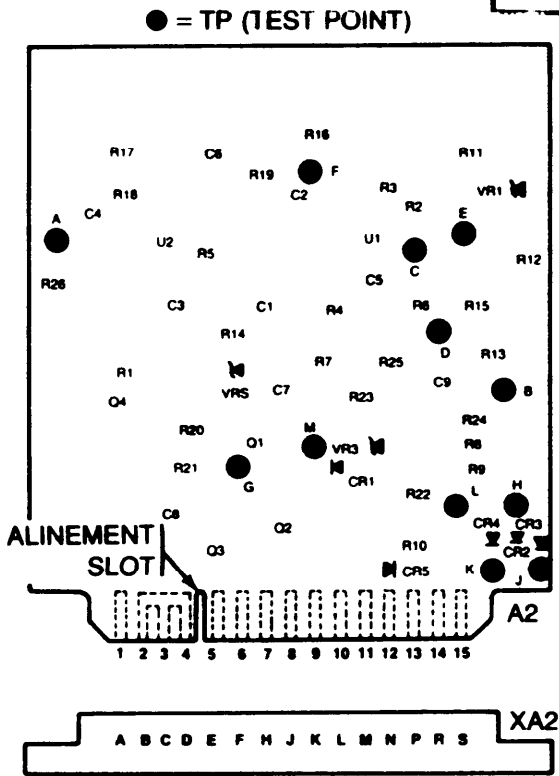

From page 2-126.

Set POWER switch OFF. Remove power. Remove switching card A2 (p 2-1. U). Measure diodes on switching card to verify that they are not shorted. Measure resistance between:

Diode	(+)	(-)
CR2	TP-J	TP-H
CR3	TP-J	A2-B(2), C(3), or D(4)
CR4	TP-K	A2-B(2), C(3), or D(4)
CR5	TP-K	TP-L

Was resistance greater than 1 K for all measurements?

No

Yes

Measure resistance at the output of the switching card A2 between:

(+)	(-)
A2-TP-M	A2-B(2), C(3), or D(4)
A2-TP-G	A2-B(2), C(3), or D(4)

Replace switching card A2. Apply power. Set POWER switch ON. Repeat test on page 2-68.

Was resistance greater than 1 K obtained?

No



Yes

Replace switching card A2. Apply power. Set POWER switch ON. Repeat test on page 2-68.

Proceed to page 2-129.




2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

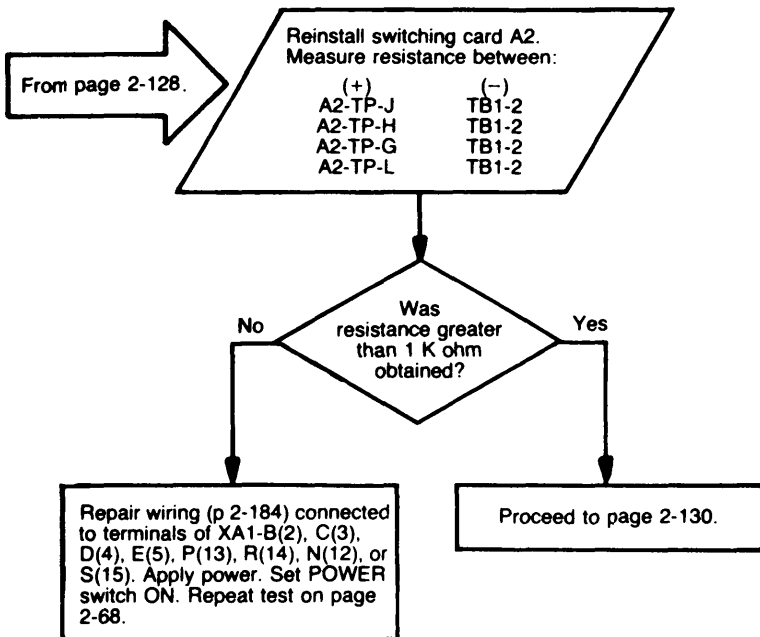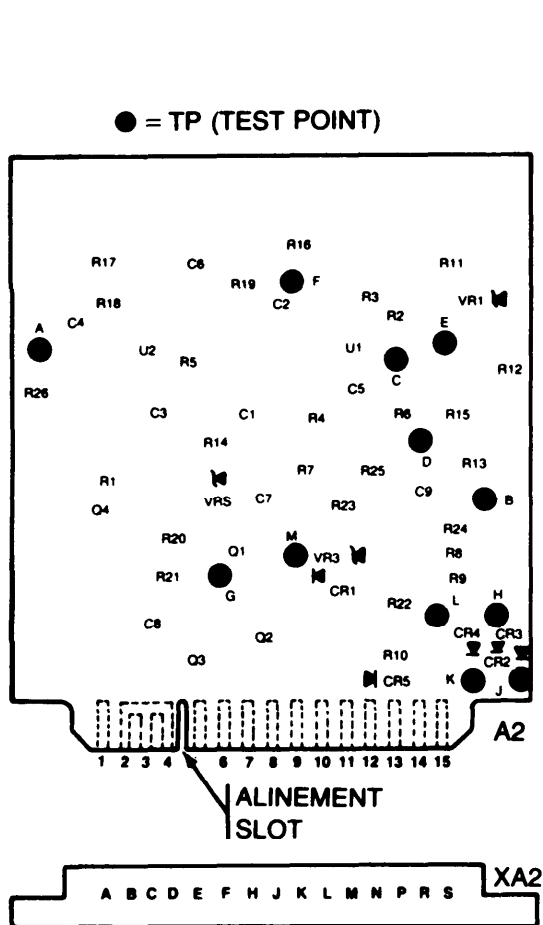

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

From page 2-129.

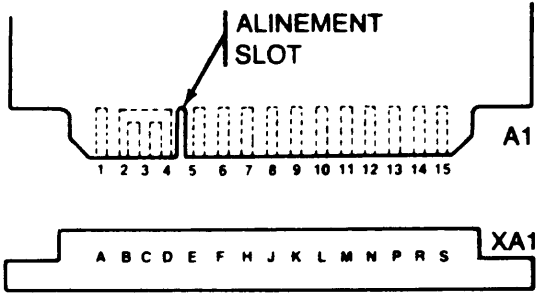


Remove power card A1 (p 2-174). Connect jumpers as indicated:

(From)	(To)
XA1-L(10)	XA1-K(9)
XA1-H(7)	XA1-J(8)

This connection completes the power to the switching card A2 which is normally provided when the power card is installed. The power card A1 is removed so that the switching card is not electrically loaded by a defective power card. Apply power. Set POWER switch ON and apply vacuum to CCM as indicated below and measure test point (TP) voltage on switching card A2 with respect to TB1-2 as indicated:

Vacuum (in. wg)	Voltage at test points TP-M	TP-G
0	$25 \pm 2$	$< 1$
1.2	$9.3 \pm 3.5$	$< 1$
1.45	$< 1$	$< 1$
1.70	$< 1$	$9.3 \pm 3.5$
2.5	$< 1$	$25.3 \pm 2$


● = TP (TEST POINT)

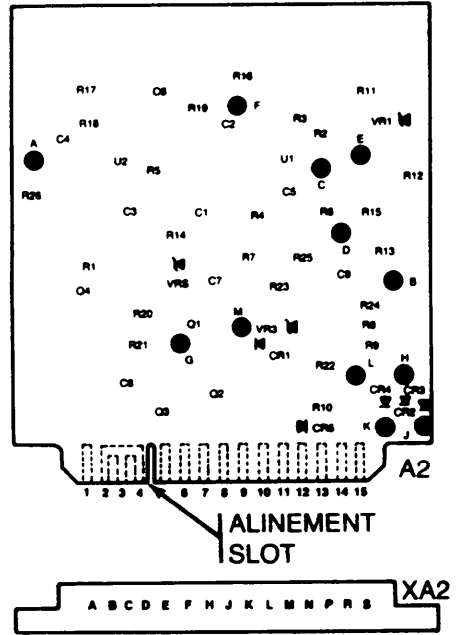



Was the specified voltage obtained in all cases?

No  
Set POWER switch OFF. Replace the switching card A2 (p 2-176). Remove jumpers. Reinstall power card A1. Set POWER switch ON. Repeat test on page 2-68.


Yes  
Proceed to page 2-131.

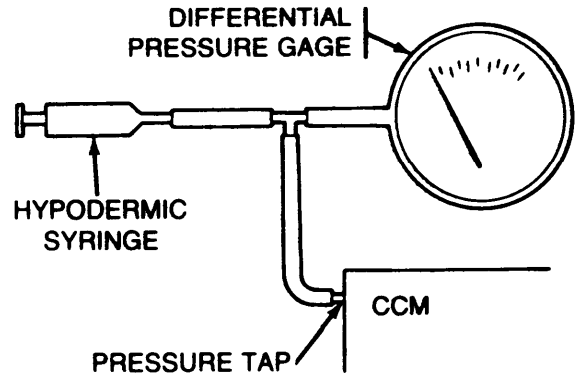




2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

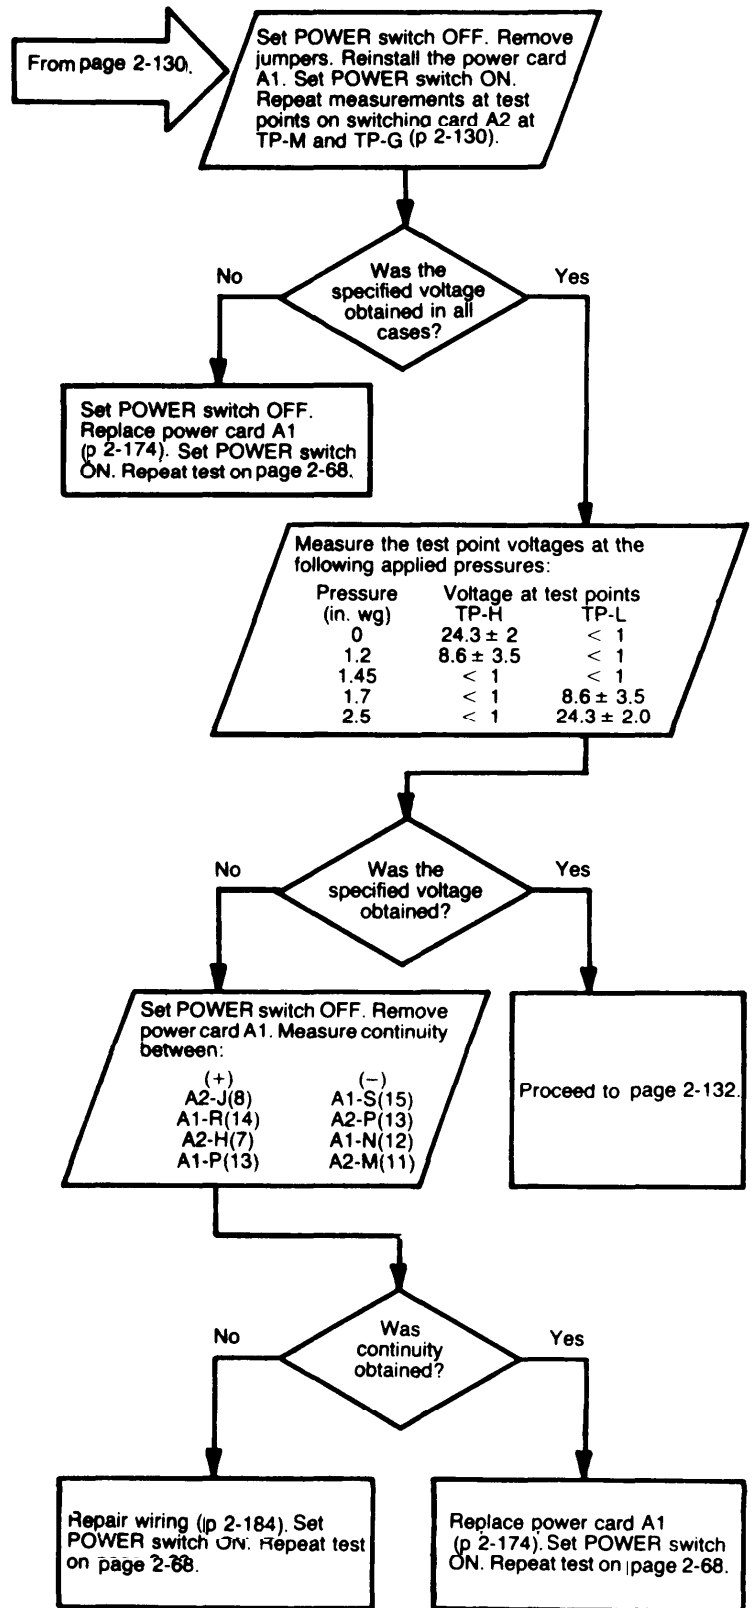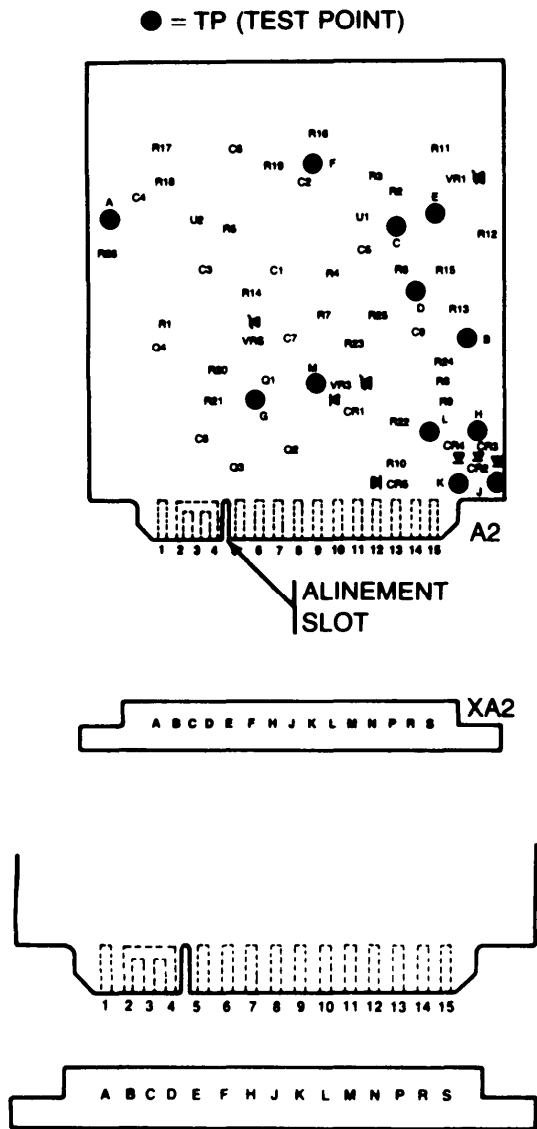



2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

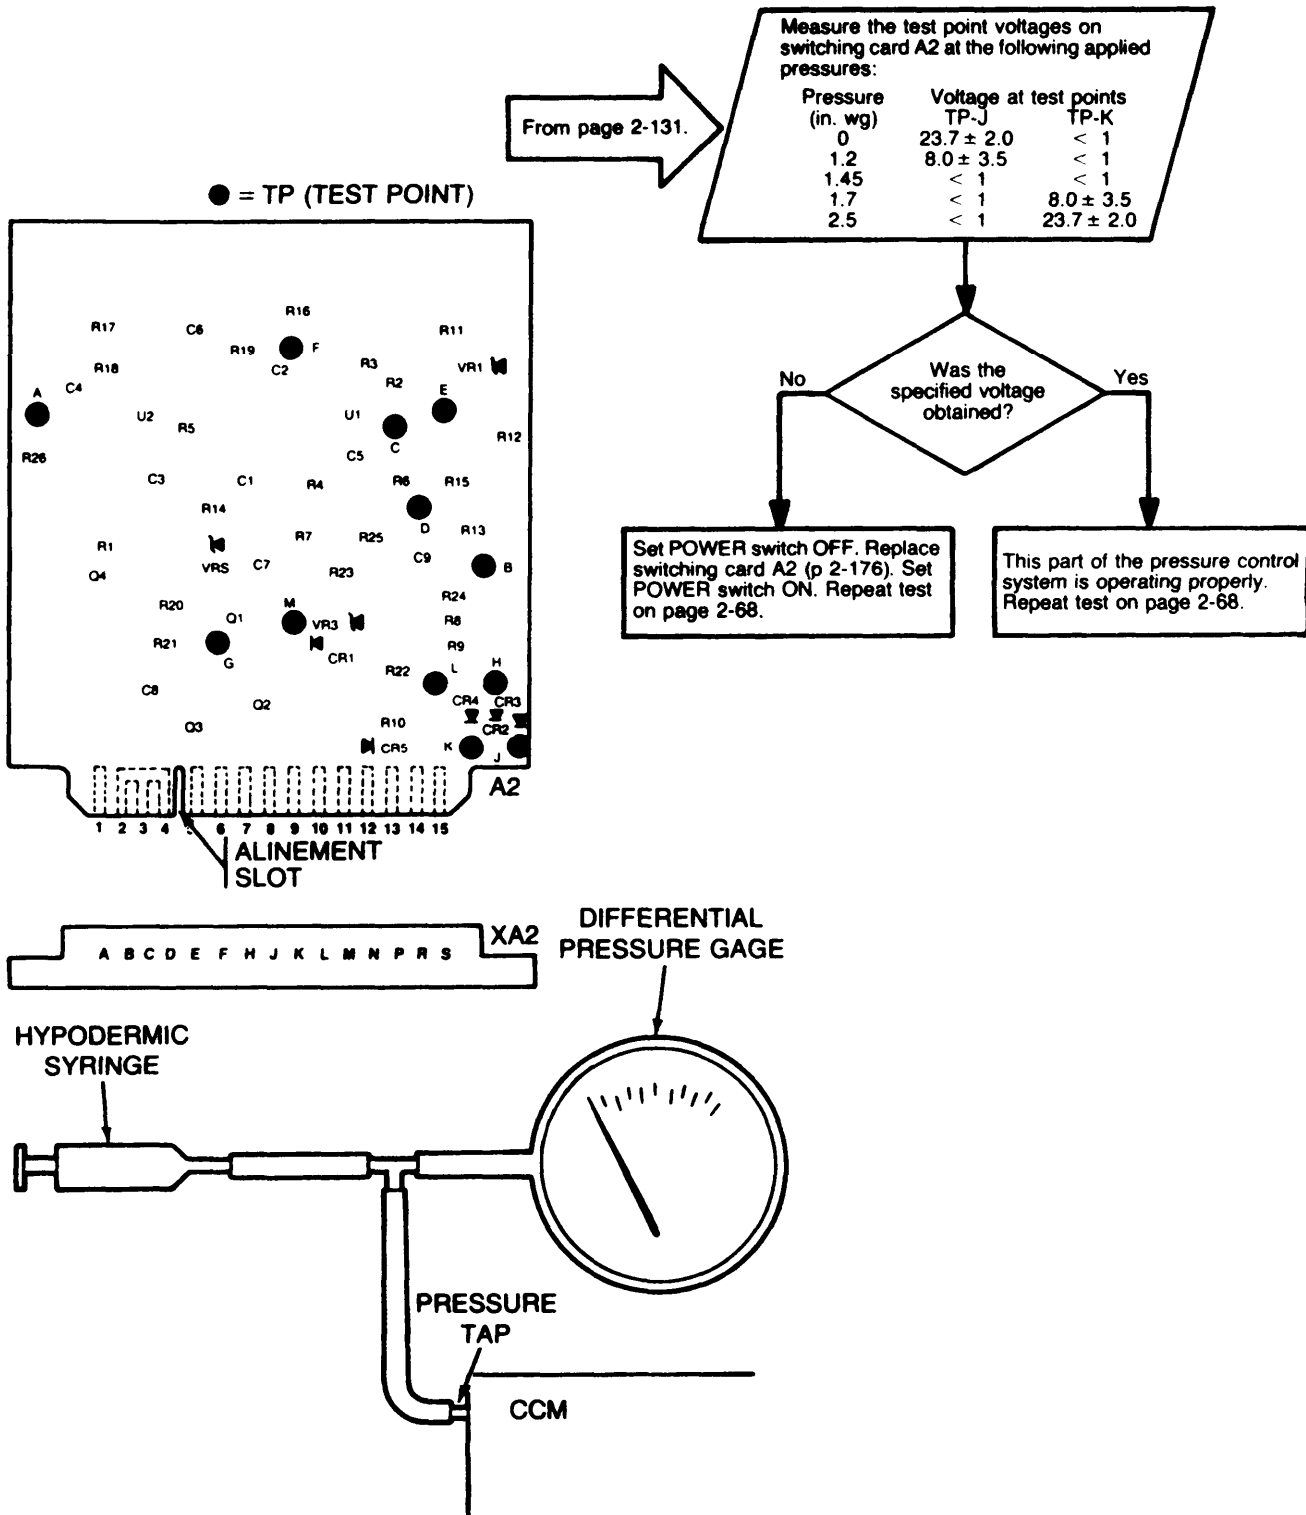


2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

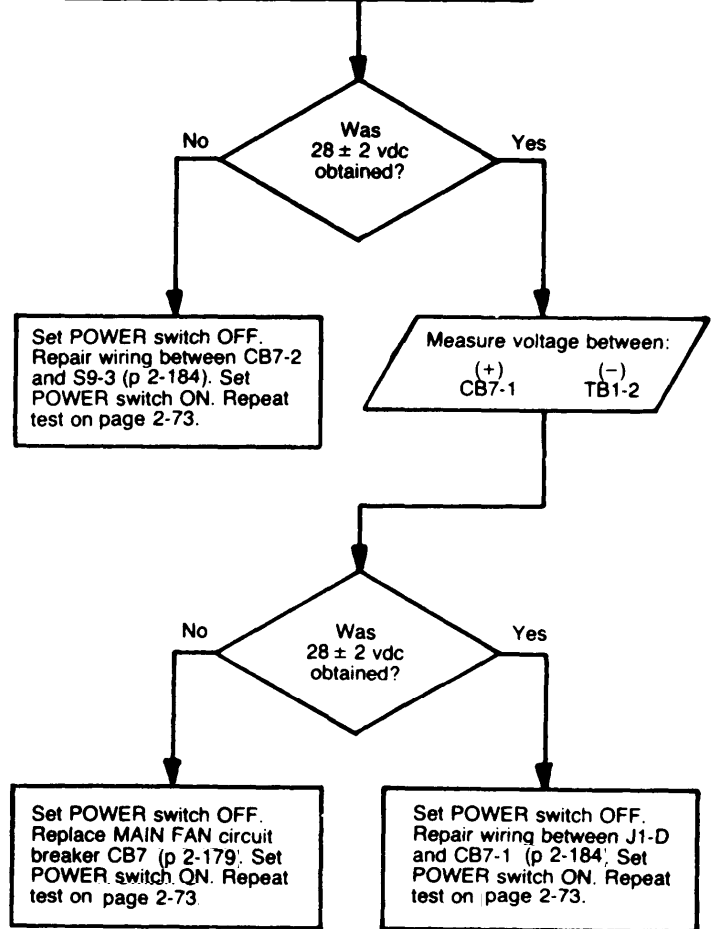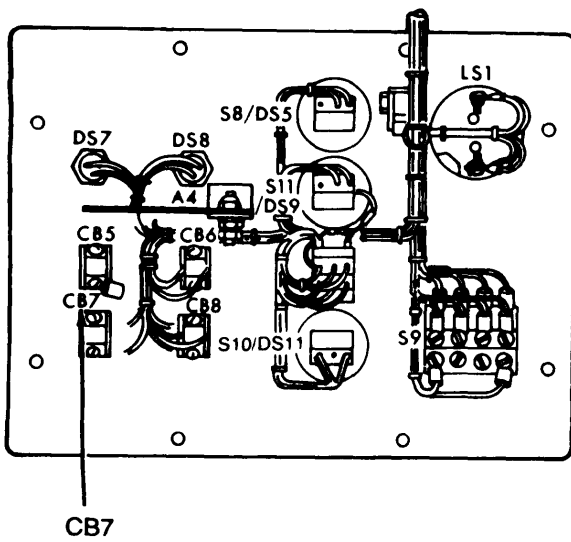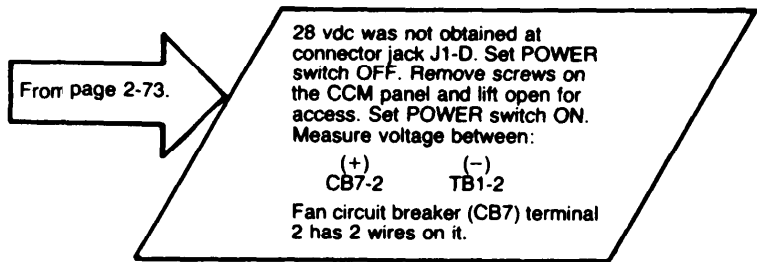



2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

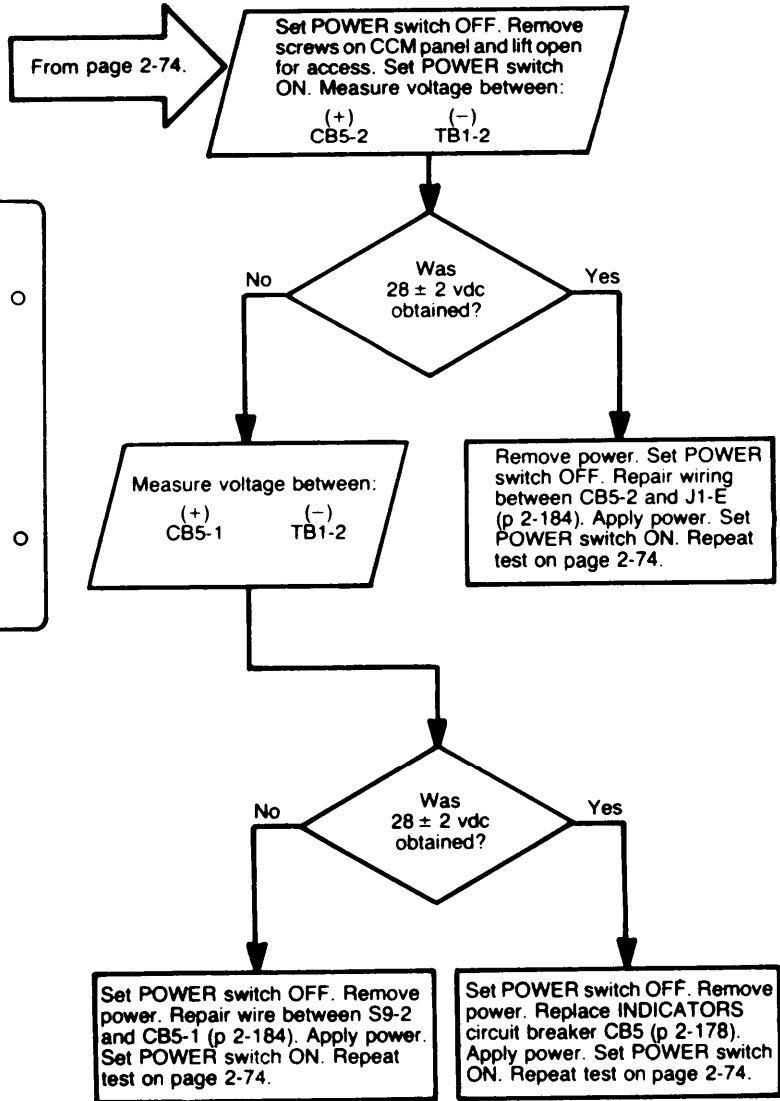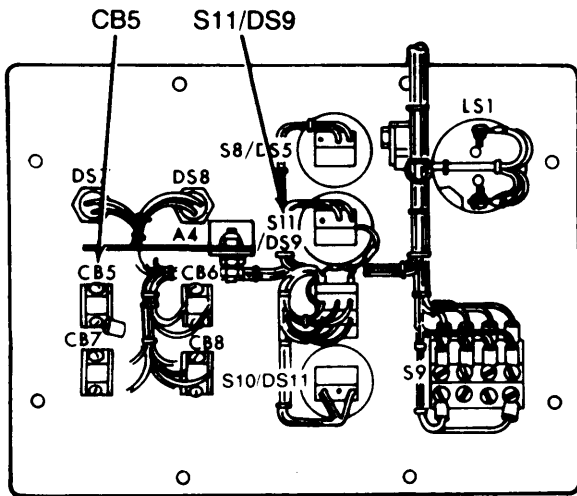

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

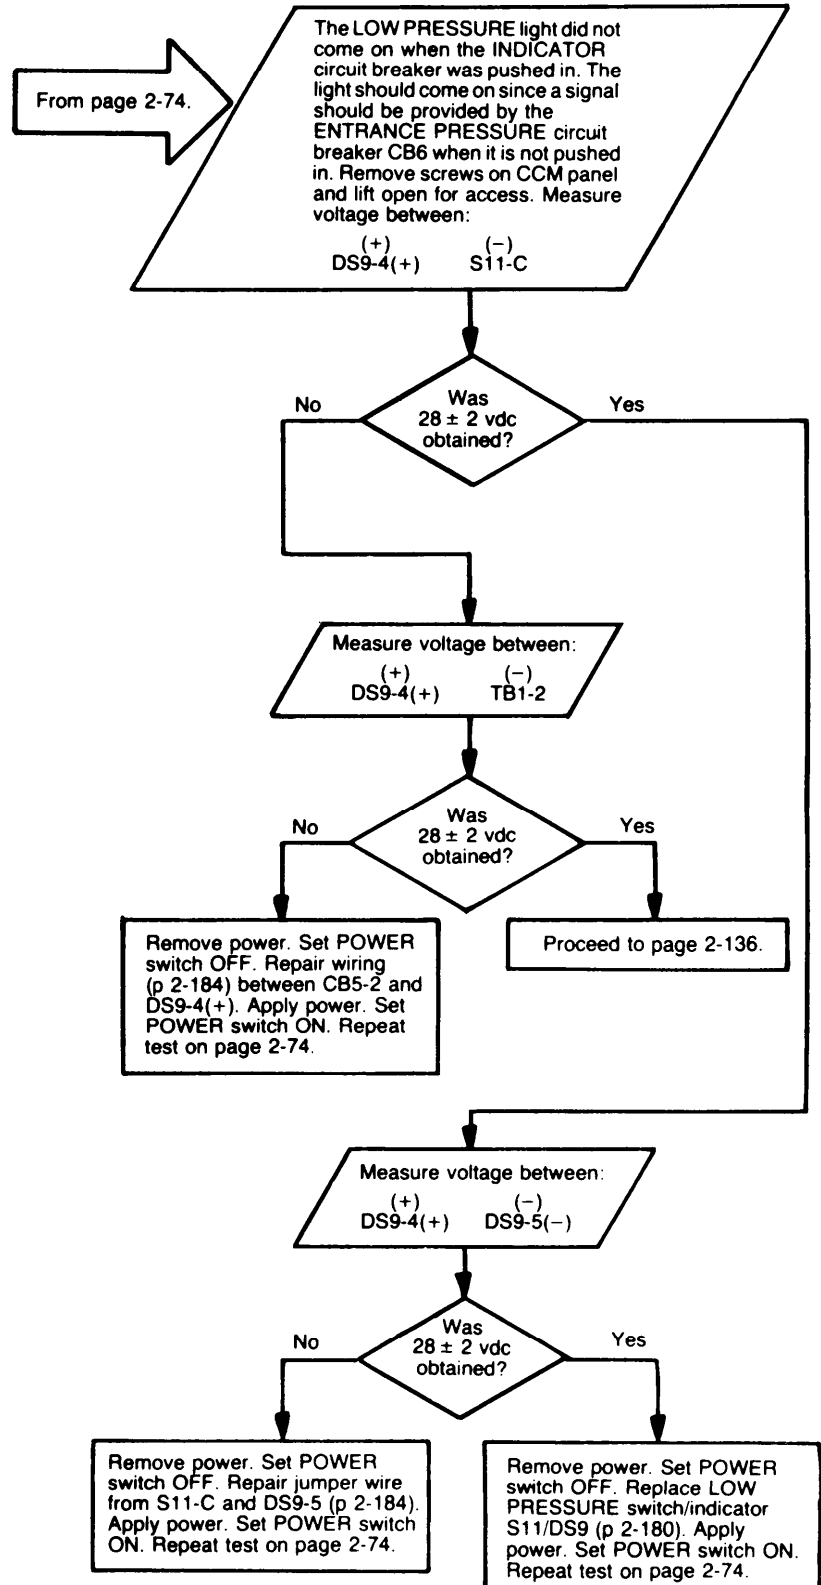

2-7. CCM TROUBLESHOOTING PROCEDURES (Cont).

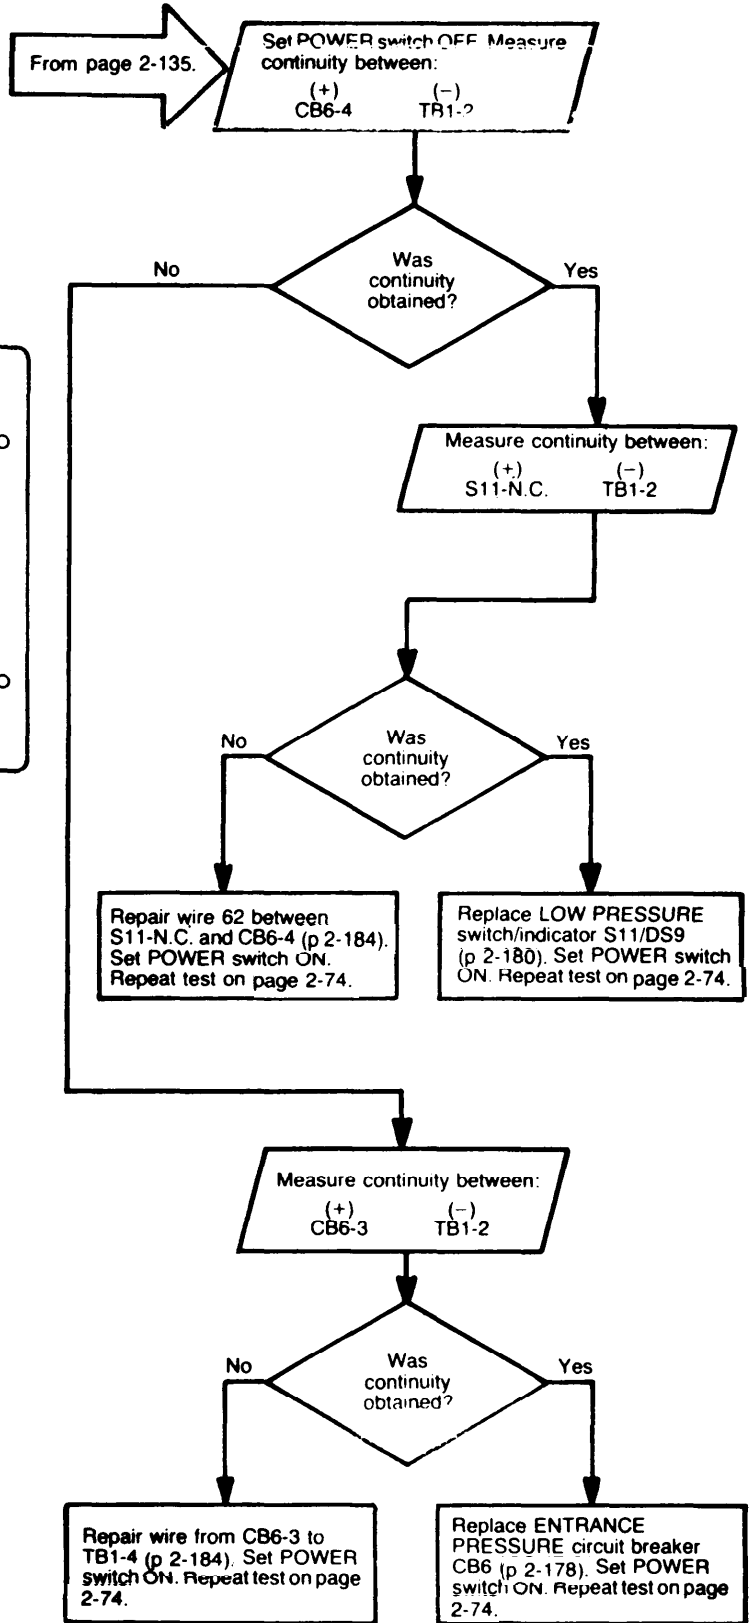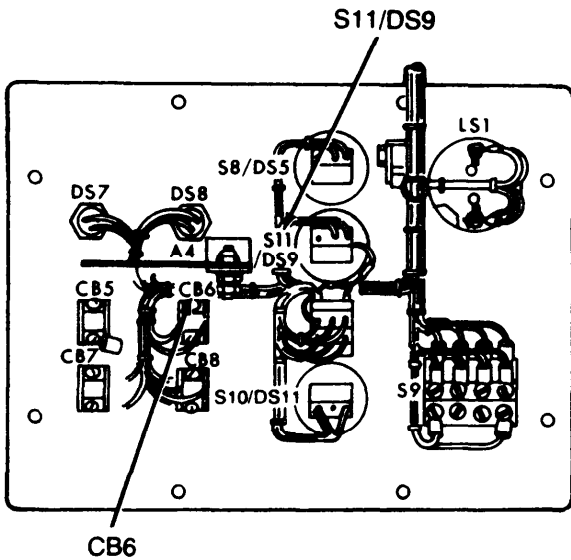



## Section II. MAINTENANCE PROCEDURES FOR M10 PROTECTIVE ENTRANCE

### 2-8. Scope.

- a. This section contains repair procedures for Component Parts of the M10 protective entrance.
- b. Disassemble only as necessary to gain access to desired components.

- c. Illustrations are configured to show access to the specific components being-addressed and may not show the true position of the item or items being maintained or disassembled.
- d. Identify wiring prior to unsoldering connection to simplify reassembly.

### 2-9. PROTECTIVE ENTRANCE CONTROL MODULE - MAINTENANCE INSTRUCTIONS.

This task covers:

- a. Disassembly
- b. Repair
- c. Reassembly
- d. Removal
- e. Installation

#### INITIAL SETUP

*Tools*

Electronic Equipment Tool  
Kit TK-105/G (SC 5180-91-CL-R07)

*Troubleshooting References*

Refer to page 2-2.

*References*

TB SIG 222


*Equipment Condition*

PECM removed from the protective entrance.

LOCATION	ITEM	ACTION
----------	------	--------

#### DISASSEMBLY

- Protective entrance control module
1. Remove twelve screws (1) from panel (2).
  2. Carefully pull panel (2) away from housing (3).

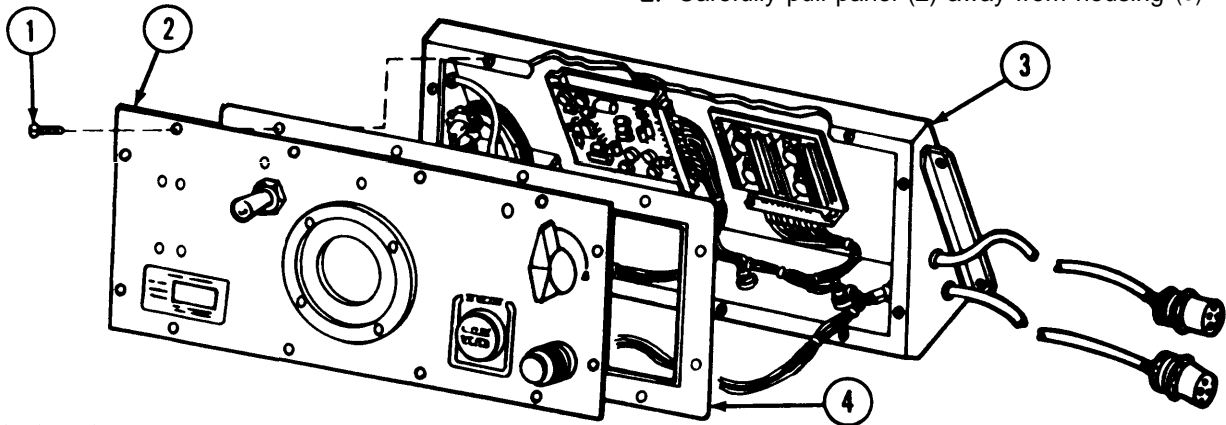

#### REPAIR

Gasket

Replace gasket (4) if defective.

#### REASSEMBLY


Protective entrance control module

1. Place panel (2) on housing (3) and secure with twelve screws (1).

**2-9. PROTECTIVE ENTRANCE CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

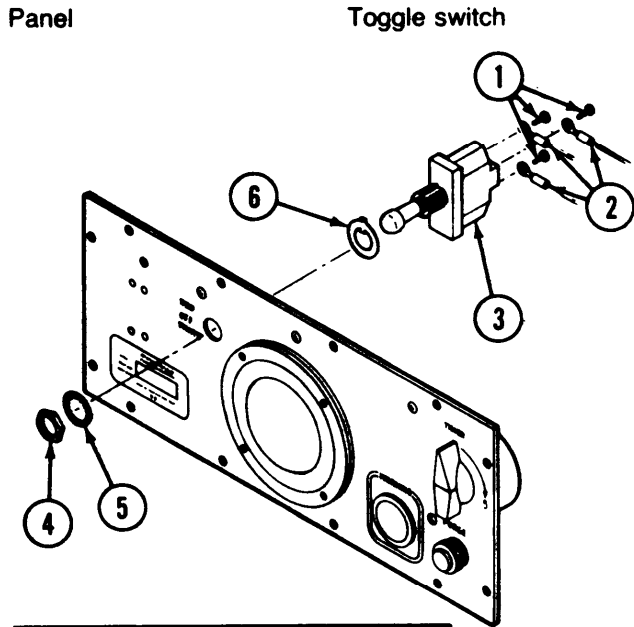


**REMOVAL**

1. Disassemble PECM (page 2-137).
2. Remove three screws (1) and wires (2) from toggle switch (3).
3. Remove nut (4) and washer (5).
4. Remove toggle switch (3) and keying washer (6).

**INSTALLATION**

1. Install keying washer (6) on toggle switch (3).
2. Insert toggle switch in panel and secure with washer (5) and nut (4).
3. Attach wires (2) to toggle switch using three screws (1). Refer to page 2-142.
4. Reassemble PECM (page 2-137).

**REMOVAL/INSTALLATION**

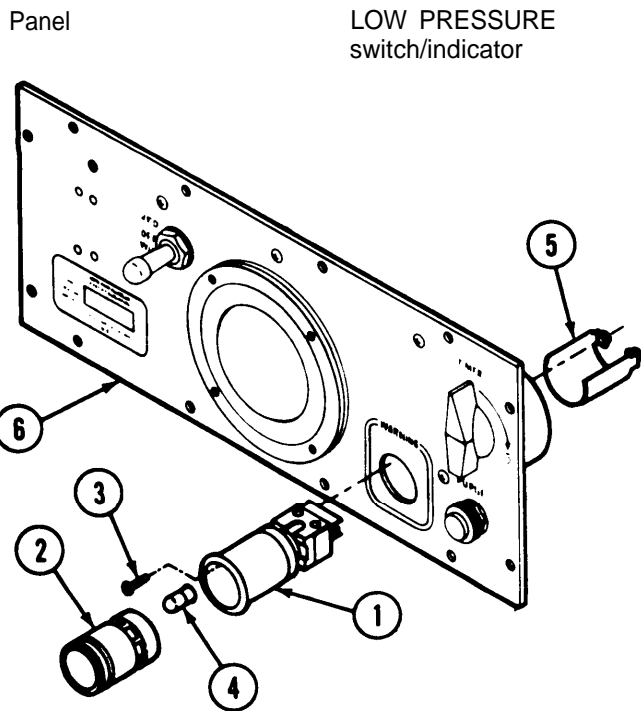

**REMOVAL**

1. Disassemble PECM (page 2-137).
2. Unsolder wires from LOW PRESSURE switch/indicator light (1).
3. Pry out lamp module (2).
4. Remove two screws (3) and two lamps (4).
5. Remove sleeve (5) from back of panel (6) and pull LOW PRESSURE switch/indicator light (1) from front of panel (6).

**INSTALLATION**


1. Insert LOW PRESSURE switch/indicator light (1) in panel.
2. Place sleeve (5) over LOW PRESSURE switch/indicator light and secure with screws (3). Install lamps (4).
3. Press lamp module (2) into LOW PRESSURE switch/indicator light.
4. Connect and solder wires to LOW PRESSURE switch/indicator light. Refer to page 2-142.
5. Reassemble PECM (page 2-137).

**2-9. PROTECTIVE ENTRANCE CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

Panel PURGE indicator light

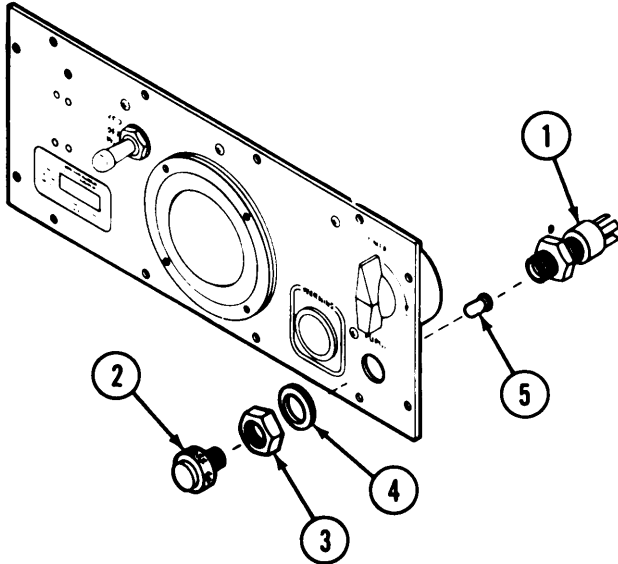

**REMOVAL**


1. Disassemble PECM (page 2-137).
2. Remove insulating tubing and unsolder wires from PURGE indicator light (1).
3. Unscrew knurled lens (2) and nut (3).
4. Remove washer (4) and PURGE indicator light (1).
5. Remove lamp (5) from lens (2).

**INSTALLATION**

1. Install lamp (5) in lens (2).
2. Insert PURGE indicator light in panel and install washer (4) and nut (3).
3. Install knurled lens (2).
4. Place insulating tubing over wires.
5. Connect and solder wires to PURGE indicator light. Refer to page 2-142.
6. Reassemble PECM (page 2-137).

**REMOVAL/INSTALLATION**

Panel TIMER switch

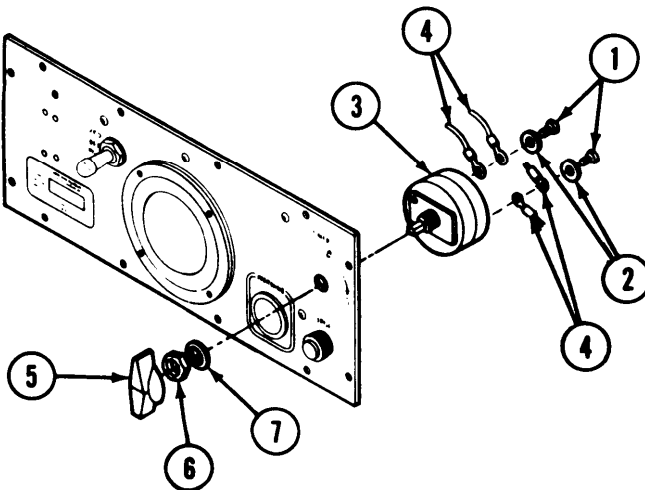

**REMOVAL**

1. Disassemble PECM (page 2-137).
2. Remove two screws (1) and two washers (2) from TIMER switch (3). Remove wires (4).
3. Pull off knob (5).
4. Remove nut (6) and washer (7) from TIMER switch (3).
5. Remove TIMER switch (3).

**INSTALLATION**


1. Install TIMER switch (3) in panel using washer (7) and nut (6).
2. Push knob (5) on shaft of TIMER switch.
3. Install wire leads (4) on TIMER switch using washers (2) and screws (1). Refer to page 2-142.
4. Reassemble PECM (page 2-137).

**2-9. PROTECTIVE ENTRANCE CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL**

Panel

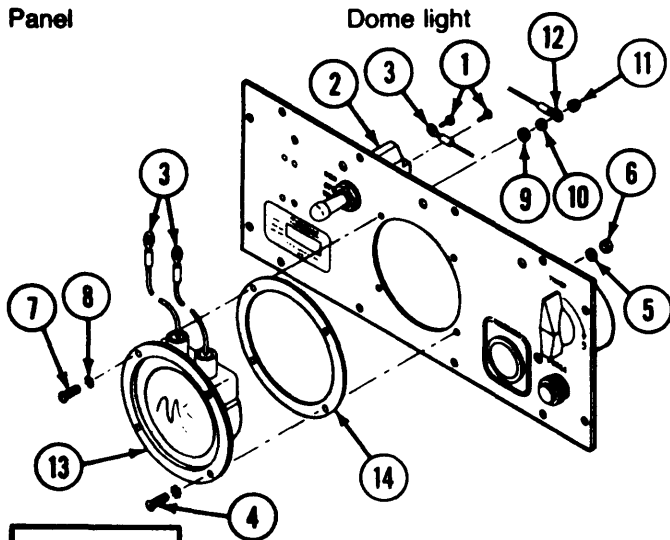

1. Disassemble PECM (page 2-137).
2. Remove two screws (1) from toggle switch (2) and release wires (3).
3. Remove three screws (4), nonmetallic washers (5), and nuts (6).
4. Remove one screw (7), washers (8 and 9), nuts (10 and 11), and wire (12).
5. Remove dome light (13) and gasket (14).

**REPAIR**

Gasket

Fabricate gasket (fig D-1, app D).

**INSTALLATION**


Dome light

1. Install gasket (14) and dome light (13) in panel using three screws (4), washers (5) and nuts (6).
2. Install wire lead (12) on one screw (7) and secure with washers (8 and 9) and nuts (10 and 11). Install wire leads (3) on toggle switch (2) using two screws (1). Refer to page 2-142.
3. Reassemble PECM (page 2-137).

**REMOVAL/INSTALLATION**

Housing

Switching card

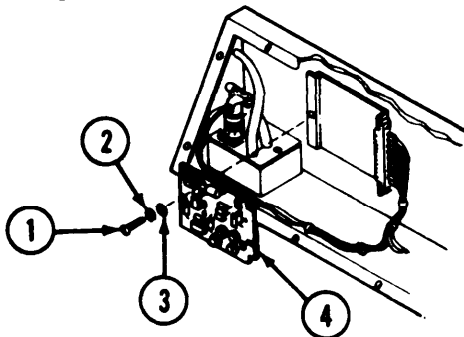

**REMOVAL**

1. Disassemble PECM (page 2-137).
2. Remove screw (1) and washers (2 and 3).
3. Lift switching card (4) slightly and pull from socket.

**INSTALLATION**

1. Insert switching card (4) into socket in housing.
2. Secure switching card with screw (1) and washers (2 and 3).
3. Reassemble PECM (page 2-137).


**2-9. PROTECTIVE ENTRANCE CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

Housing

Power card

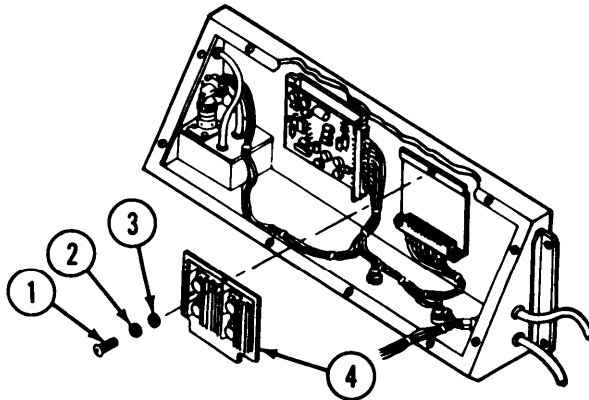

**REMOVAL**

1. Disassemble PECM (page 2-137).
2. Remove screw (1) and washers (2 and 3).
3. Lift power card (4) slightly and pull from socket.


**INSTALLATION**

1. Insert power card (4) into socket in housing.
2. Secure power card (4) with screw (1) and washers (2 and 3).
3. Reassemble PECM (page 2-137).

**REMOVAL**

Housing

Pressure transducer

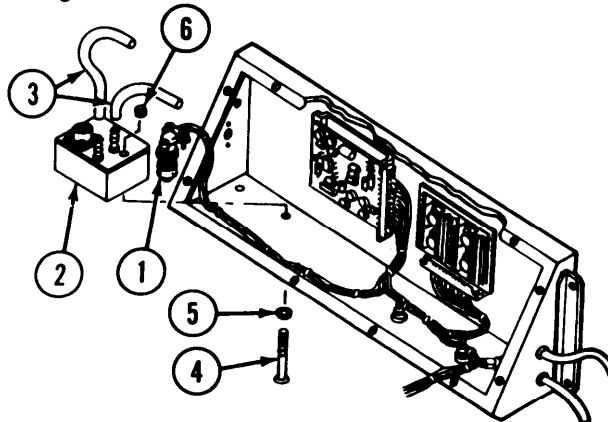

1. Disassemble PECM (page 2-137).
2. Remove connector plug (1) from pressure transducer (2).
3. Remove tubing (3).
4. Remove two screws (4), washers (5), and nuts (6).
5. Remove pressure transducer (2).

**REPAIR**

Nonmetallic tubing

Fabricate replacement tubing (3) from NSN 9330-01-073-1011 stock. Cut to same length as tubing being replaced.

**INSTALLATION**

Pressure transducer


1. Place transducer (2) in housing and secure with two screws (4), washers (5), and nuts (6).
2. Install tubing (3).
3. Connect plug (1) to transducer.
4. Reassemble PECM (page 2-137).

2-9. PROTECTIVE ENTRANCE CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).

LOCATION	ITEM	ACTION
----------	------	--------

**REPAIR**

Protective entrance control Wiring module

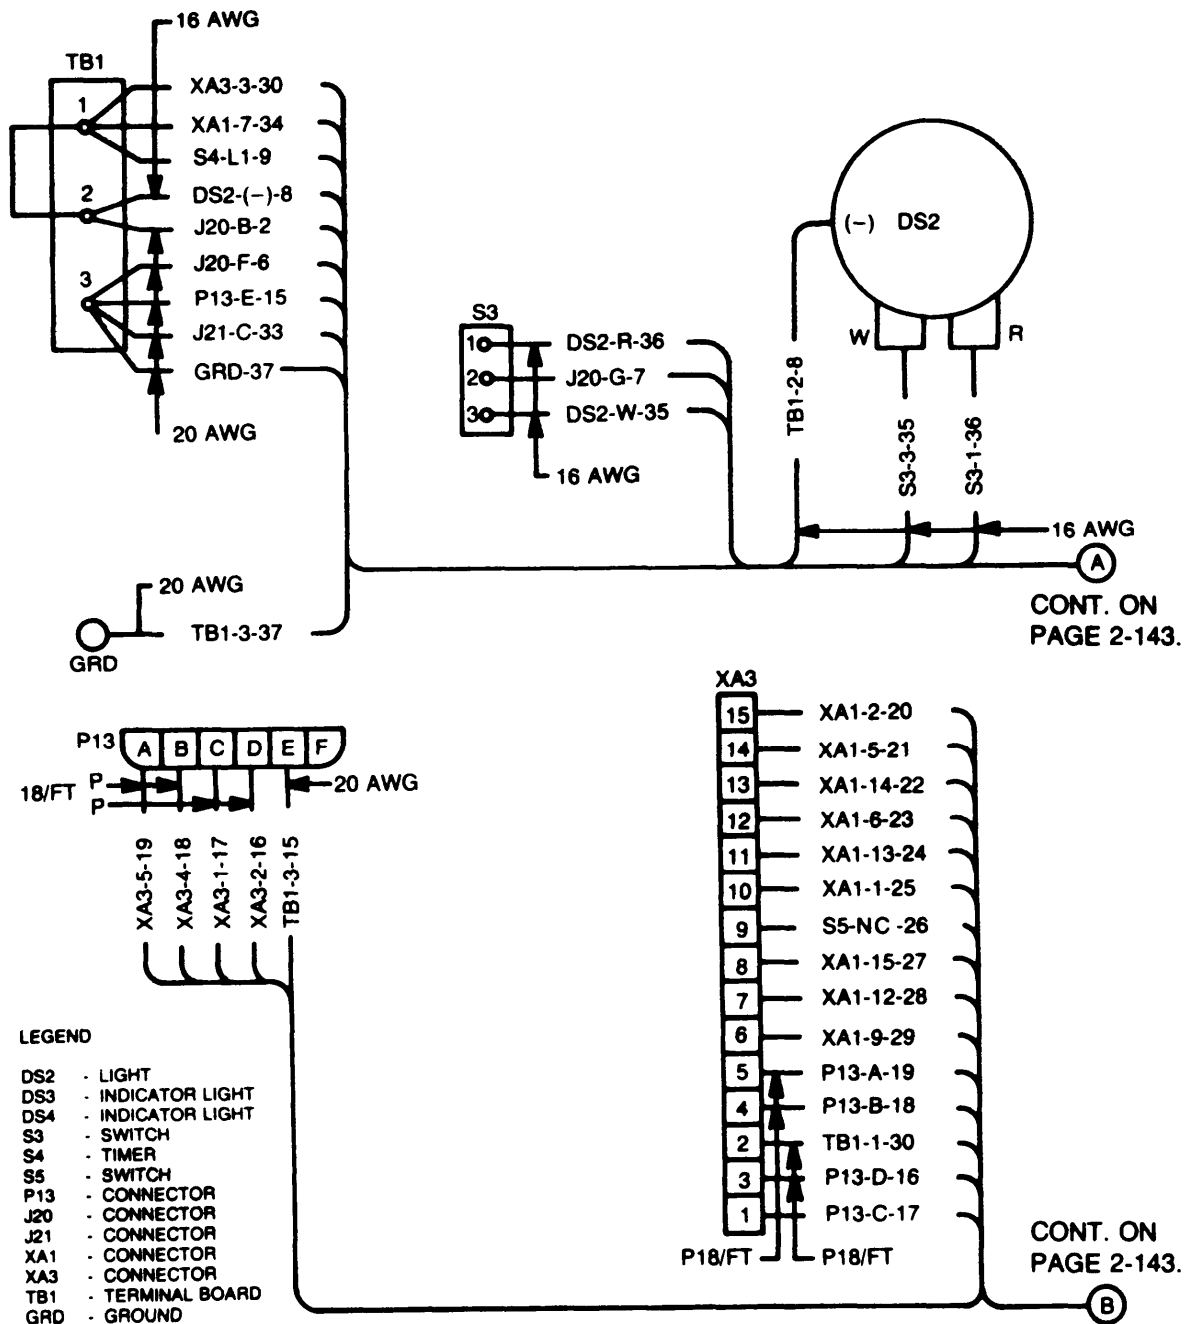


**2-9. PROTECTIVE ENTRANCE CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REPAIR (Cont)**

Protective entrance control Wiring module

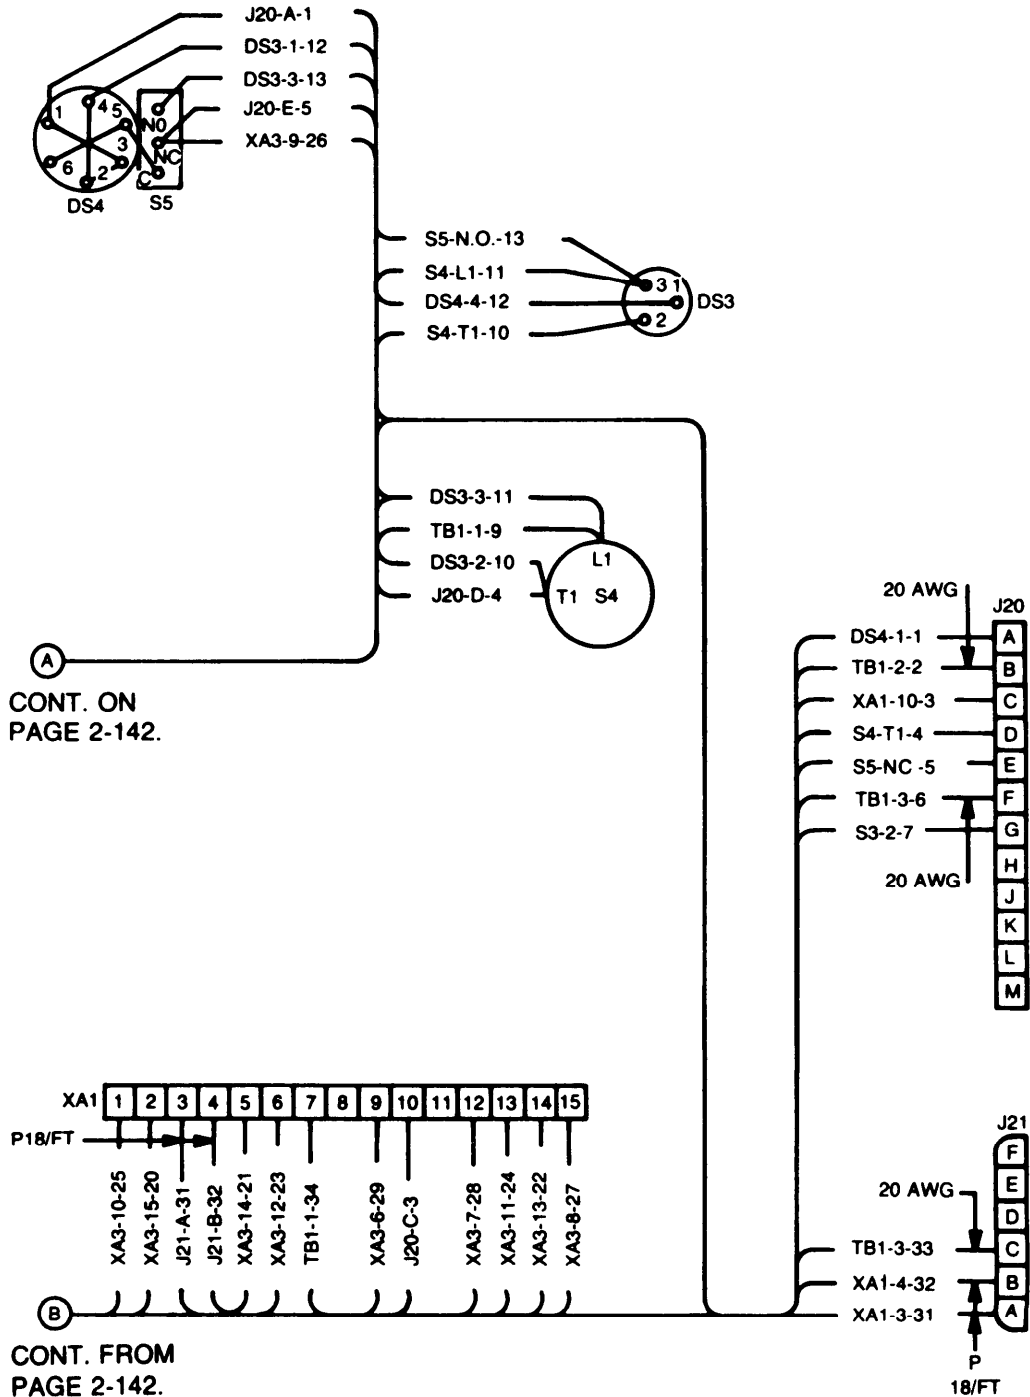

### Section III. MAINTENANCE PROCEDURES FOR M56 GAS-PARTICULATE FILTER UNIT

#### 2-10. General.

- a. This section contains repair procedures for component parts of the M56 Gas-particulate Filter Unit.
- b. Disassemble only as necessary to gain access to desired components.

c. Illustrations are configured to show access to the specific components being addressed and may not show the true position of the item or items being maintained or disassembled.

#### 2-11. MAIN FAN - MAINTENANCE INSTRUCTIONS.

This task covers:

- a. Removal
- b. Disassembly
- c. Installation
- d. Reassembly

#### INITIAL SETUP

*Troubleshooting References*  
Refer to page 2-32.

*Equipment Condition*  
Main fan removed from filter unit.

*Tools*  
General mechanics tool kit SC 5180-90-CL-N26  
Puller kit 5120-00-289-9597

Torque wrench 5120-00-247-2536  
Micrometer depth gage 5210-00-619-4045  
Arbor press 3444-00-243-2655  
(or equivalent)


*Materials*  
Coating, aliphatic polyurethane (item 3, app C)  
Dry cleaning solvent (item 4, app C)  
Grease (item 5, app C)

LOCATION	ITEM	ACTION
----------	------	--------

#### REMOVAL/INSTALLATION

Main Fan

Identification plate

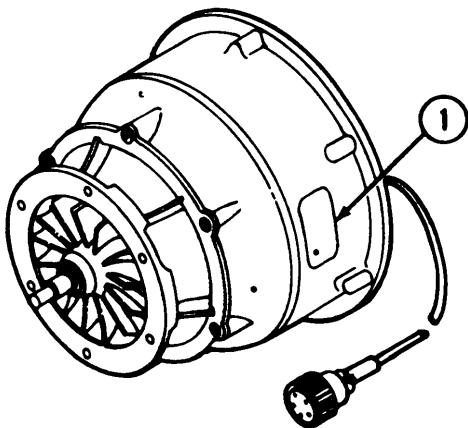

#### REMOVAL

1. Lift edge of plate (1) with a sharp tool.
2. Pull plate completely off the mounting surface.

#### INSTALLATION

1. Thoroughly clean mounting surface with dry cleaning solvent (item 4, app C). Mounting surface must be free of all contamination such as oil, grease, dirt, or any foreign matter.
2. Activate the back of the plate with dry cleaning solvent (item 4, app C).
3. Mount plate (1) and apply pressure to the plate surface.
4. Spray or brush plate with aliphatic polyurethane coating (item 3, app C).




**2-11. MAIN FAN - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL**

Main Fan	Bearings	Disassemble main fan.
----------	----------	-----------------------

**DISASSEMBLY**

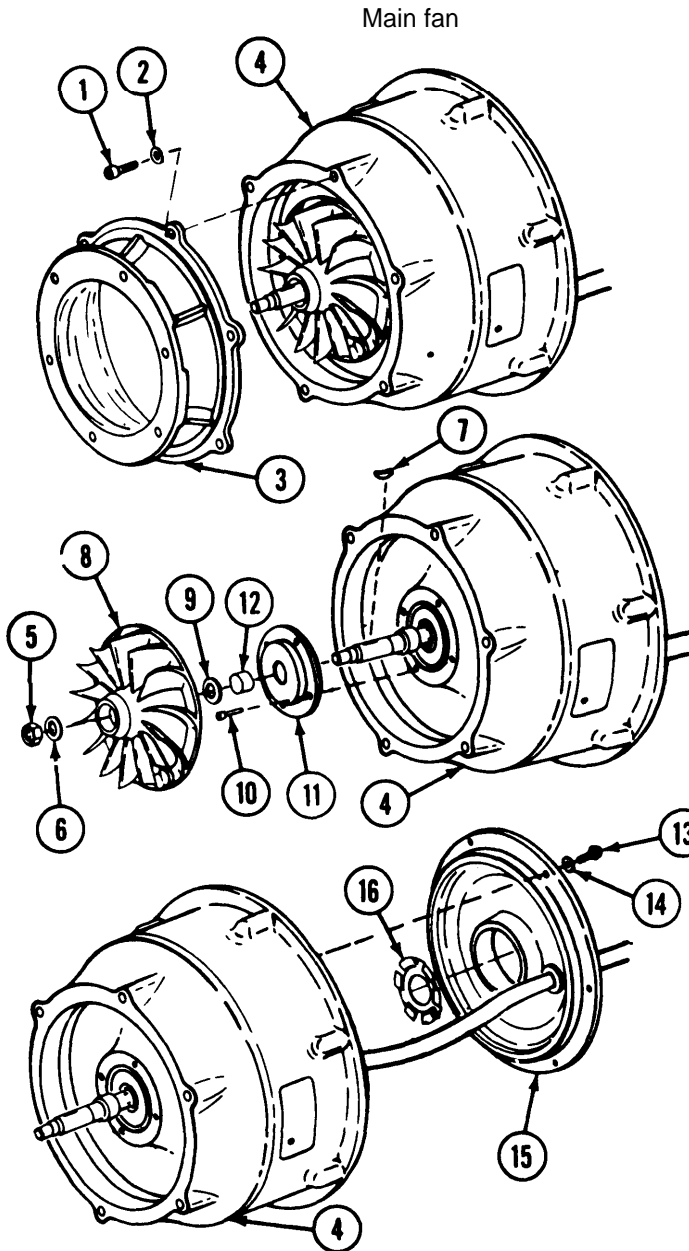

1. Remove six screws (1) and washers (2).
2. Remove impeller cover (3) from fan housing (4).

3. Remove impeller nut (5) and washer (6).
4. Remove impeller (8).
5. Remove woodruff key (7).
6. Remove shim (9).
7. Remove four screws (10), bearing retainer plate (11), and bushing (12).

**CAUTION**

When removing the motor cover (15) from the fan housing (4), use care not to pull the stator electrical wires from ground.

8. Remove six screws (13) and washers (14).
9. Carefully remove motor cover (15) from fan housing (4). Slide the motor cover (15) back onto the electrical cable.

**NOTE**

Use care not to lose loading spring washer (16), as it will fall free when the motor cover is removed from the fan housing.

**2-11. MAIN FAN - MAINTENANCE INSTRUCTIONS (Cont).**


LOCATION	ITEM	ACTION
----------	------	--------

**DISASSEMBLY (Cont)**

Main fan

**CAUTION**

Use care not to damage the rotor or nick rotor shaft journals when pressing rotor from bearing.

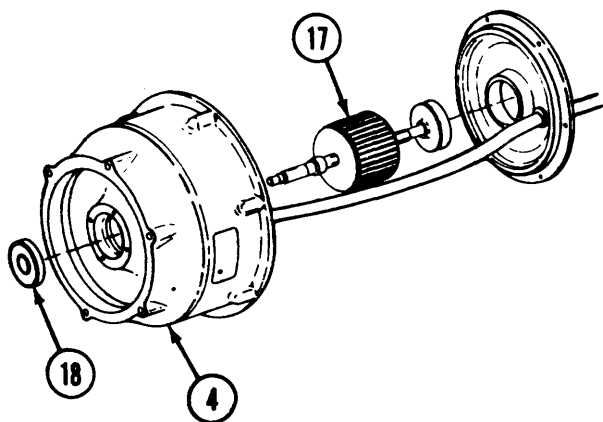

- Using an arbor press, press rotor (17) from bearing (18) and out of fan housing (4).
- Press bearing (18) from fan housing (4).

**CAUTION**

Use care not to damage the rotor or nick shaft journals when removing the bearing.

- Remove bearing (19) from rotor (17) shaft using a standard bearing puller.


**NOTE**

Use care not to lose deflector (20). It will fall tie when bearing is removed.

**INSTALLATION**

Rotor shaft

Bearing

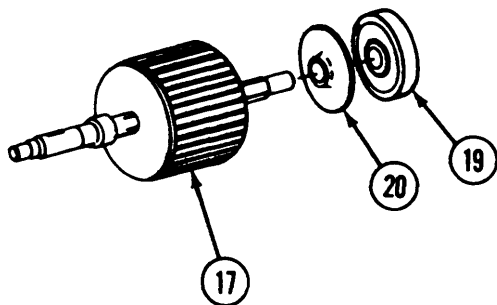


- Install deflector (20) on rotor shaft. Press a new bearing (19) on the rotor (17) shaft (use an arbor press). Make sure the bearing is flush against the deflector and shaft shoulder.

**2-11. MAIN FAN - MAINTENANCE INSTRUCTIONS (Cont).**


LOCATION	ITEM	ACTION
----------	------	--------

**INSTALLATION (Cont)**

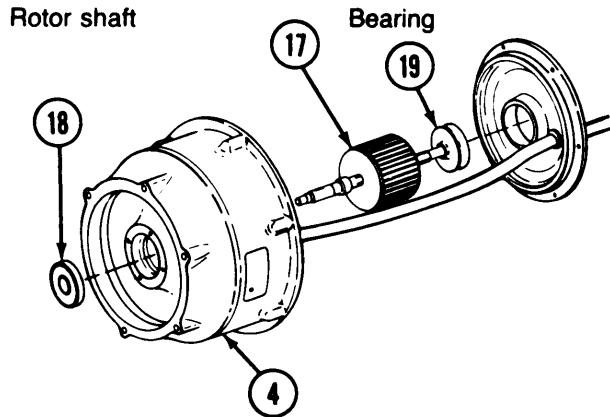

2. Install the rotor (17) in the fan housing (4).
3. Stand the fan housing on end with rotor shaft supported, and press a new bearing (18) on the input end of the rotor shaft, flush against the shaft shoulder.
4. Fill cavity of bearings (18 and 19) half full of grease (item 5, app C).

**REASSEMBLY**

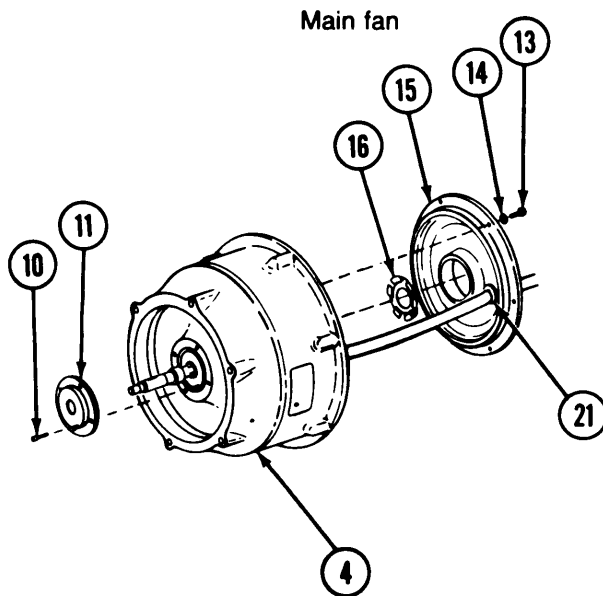

1. Install loading spring washer (16) on the end of rotor shaft and press against the bearing with the fingers.
2. Position the motor cover in place on the fan housing (4). Work stator cable through rubber grommet (21) to remove slack while positioning. Seat bearing and loading spring washer in motor cover.

**CAUTION**

Make sure loading spring washer remains in place on the rotor shaft and bearing is fully seated before tightening screws.

3. Install six screws (13) and washers (14) in motor cover.
4. Install bearing retainer plate (11 ) with four screws (10).


**2-11. MAIN FAN - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REASSEMBLY (Cont)**

Main fan

5. Check the contour fit between the fan impeller and the impeller cover.

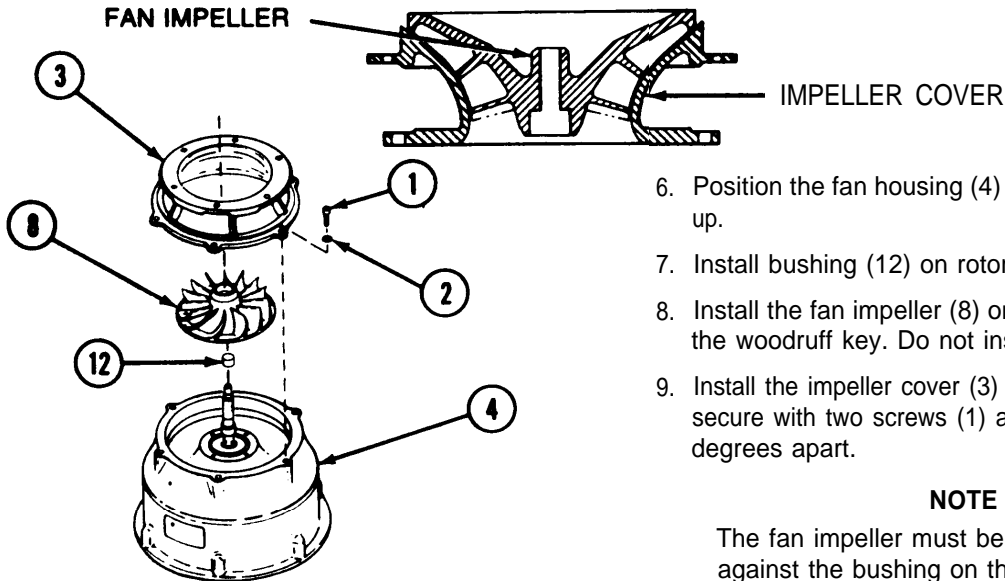

- 6. Position the fan housing (4) vertically with input end up.
- 7. Install bushing (12) on rotor shaft.
- 8. Install the fan impeller (8) on the rotor shaft without the woodruff key. Do not install self locking nut.
- 9. Install the impeller cover (3) on the fan housing and secure with two screws (1) and two washers (2) 180 degrees apart.


**NOTE**

The fan impeller must be firmly seated against the bushing on the rotor shaft in order to obtain an accurate reading for dimension "A".

**DIMENSION "A"**  
FAN IMPELLER  
FIRMLY SEATED  
AGAINST SPACER.

**DIMENSION "B"**  
FAN IMPELLER  
SEATED AGAINST  
IMPELLER COVER.

- 10. With the fan impeller against bushing, use a 2 inch depth micrometer with two parallel bars (1/2 inch by 1 inch by 8 inches). Measure the distance from the top of the parallel bars to the machined surface on the fan impeller as shown. Record as dimension "A".

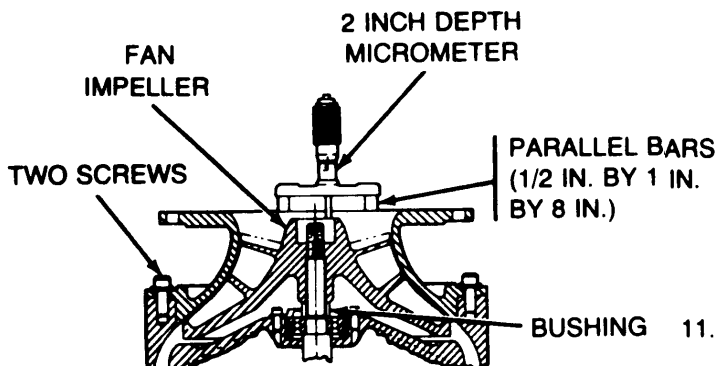

**NOTE**

The fan impeller must be firmly seated against the impeller cover to obtain an accurate reading for dimension "B".

- 11. Pull up on the fan impeller to seat against the impeller cover and take a second measurement using the same technique as in step 10 and record as dimension "B".

IMPELLER GAGE DIAMETER. (ADD SHIMS BETWEEN IMPELLER AND SPACER TO OBTAIN 0.007 TO 0.012 INCH AXIAL CLEARANCE BETWEEN FAN IMPELLER AND IMPELLER COVER.)



**2-11. MAIN FAN - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REASSEMBLY (Cont)**

Example Main Fan

1.152 inches	(Dimension "A")
- 1.086 inches	(Dimension "B")
<hr/>	
0.066 inch	(Dimension "C")
- 0.010 inch	(Nominal)
<hr/>	
0.056 inch	(Dimension "D")

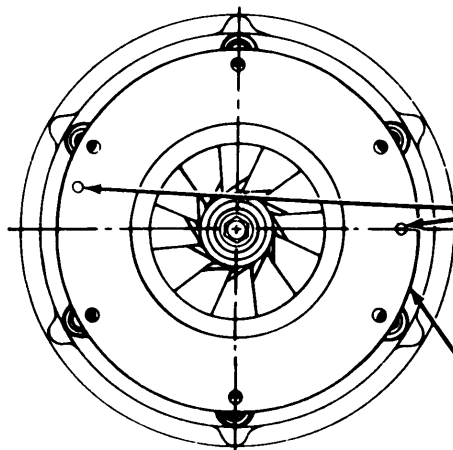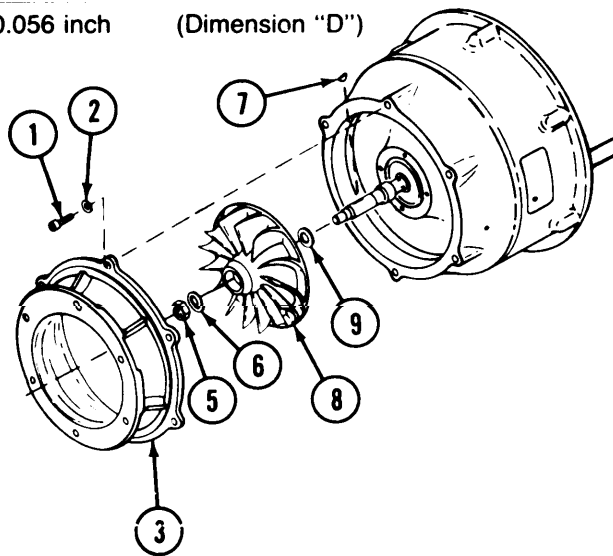

LOCATION OF  
INSTALLATION  
HOLES (WITH  
STATOR CABLE  
ON OUTPUT END  
AT 6 O'CLOCK  
POSITION)

IMPELLER COVER  
VIEWED FROM  
INPUT END

12. Subtract dimension "B" from dimension "A" as recorded in steps 10 and 11, the difference being dimension "C". (See example below.)
13. Subtract a nominal 0.010 inch from dimension "C" and record as dimension "D" Dimension "D" is the required shim thickness for shim to obtain 0.007 to 0.012 inch axial clearance between the fan impeller and the impeller cover.
14. Remove impeller cover and impeller.
15. Peel laminated shims (9) to required thickness determined by dimension "D" to obtain the proper spacing.
16. Install shims (9) on rotor shaft.
17. Install woodruff key (7) in rotor shaft and install fan impeller (8).
18. Install washer (6) and lock nut (5).
19. Torque lock nut (5) to 95 to 110 inch-pounds.
20. Turn rotor counterclockwise to check that bearings are free.
21. With the stator electric cable positioned in the 6 o'clock position, install the impeller cover (3) with the installation locating holes located in the 3 o'clock and 9:30 positions.
22. Install six washers (2) and screws (1).

**2-12. AIRFLOW VALVE - MAINTENANCE INSTRUCTIONS.**

This task covers:

- a. Removal
- b. Installation

**INITIAL SETUP**

*Tools*

Electronic Equipment Tool  
Kit TK-105/G- (SC 5180-91-CL-R07)

*Equipment Condition*

Airflow valve removed from filter unit or airflow valve removed from airflow valve and silencer.

*References*

TB SIG 222

*Troubleshooting References*

Refer to page 2-33.

**NOTE**

Perform all electrical connections in accordance with wiring diagram on page 2-160.

LOCATION	ITEM	ACTION
----------	------	--------


**REMOVAL/INSTALLATION**

**REMOVAL**

**Airflow Valve**

**Motor with radio noise filter**


1. Remove nut (1) and screw (2) from GRD 4 terminal lug (3).
2. Tag and unsolder wires (4 and 5) from FL2 radio noise fitter (6).
3. Cut cable strap (7). Remove nut (8), screw (9) and cable strap (7).
4. Remove two nuts (10) and screws (11).

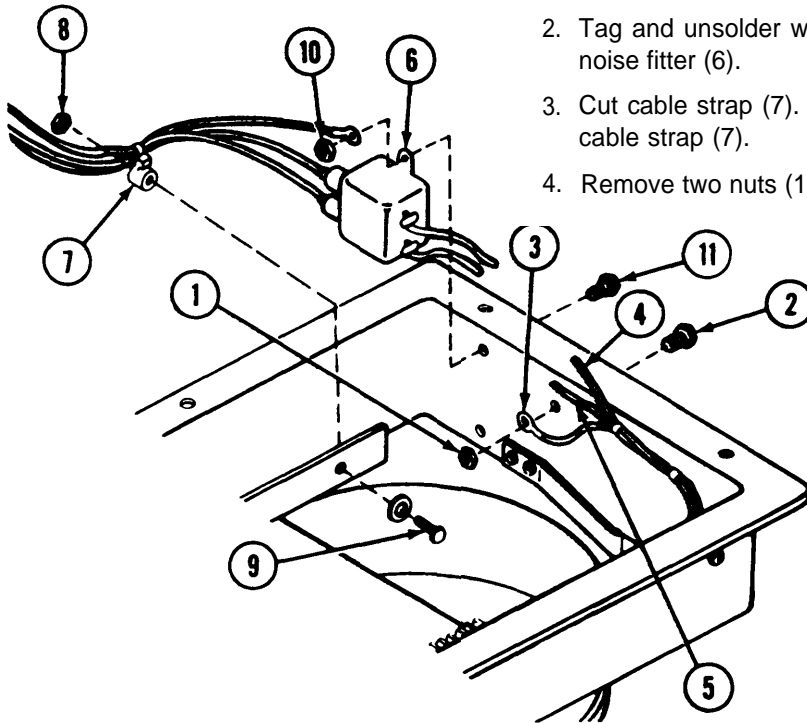

**2-12. AIRFLOW VALVE - MAINTENANCE INSTRUCTIONS (Cont).**


LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION (Cont)**

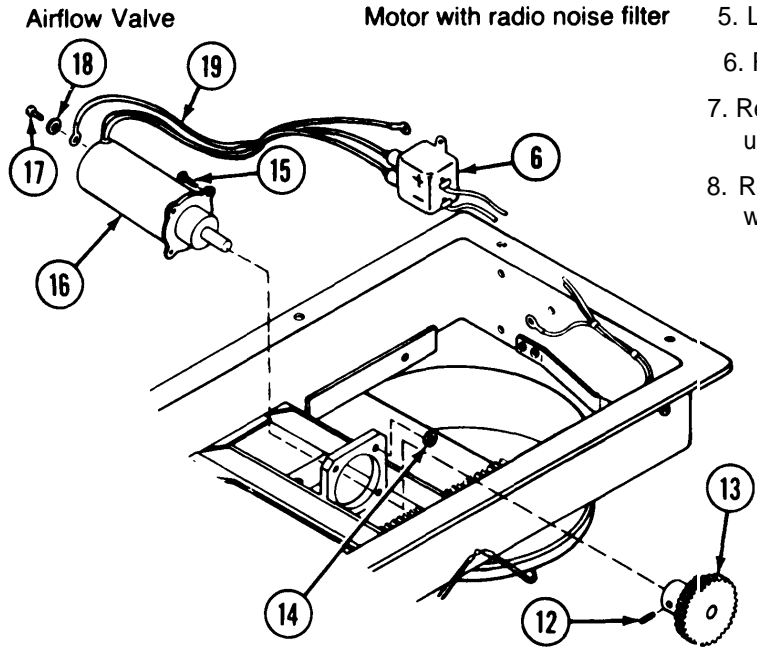

- 5. Loosen setscrew (12) and remove gear (13).
- 6. Remove four nuts (14) and screws (15).
- 7. Remove motor (16) and FL2 radio noise filter (6) as a unit.
- 8. Remove screw (17), washer (18), and grounding wire (19).

**INSTALLATION**

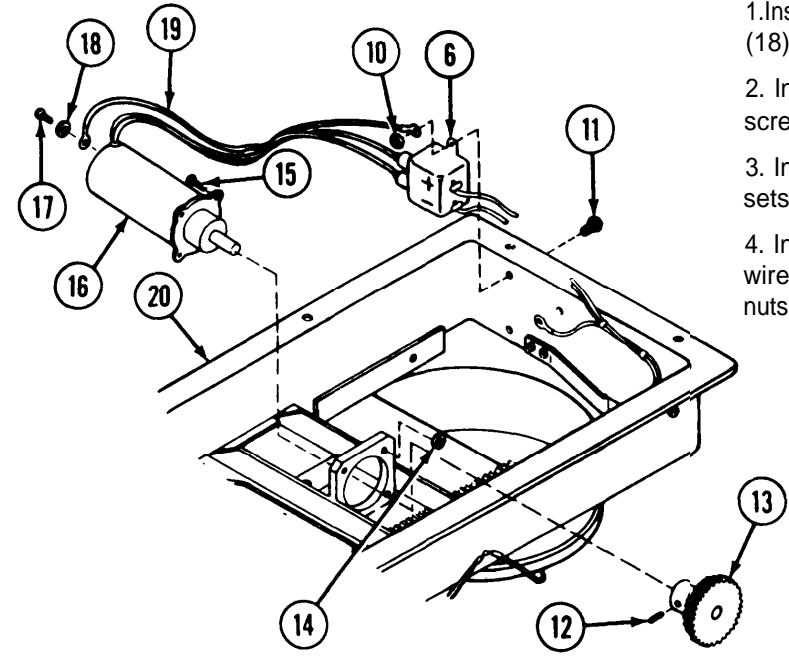

- 1. Install grounding wire (19) on motor (16) with washer (18) and screw (17).
- 2. Install motor (16) in airflow valve (20) using four screws (15) and nuts (14).
- 3. Install gear (13) on shaft of motor (16). Tighten setscrew (12).
- 4. Install FL2 radio noise filter (6) and grounding wire (19) in airflow valve (20) using screws (11) and nuts (10).


**2-12. AIRFLOW VALVE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION (Cont)**

Airflow Valve

Motor with radio noise filter

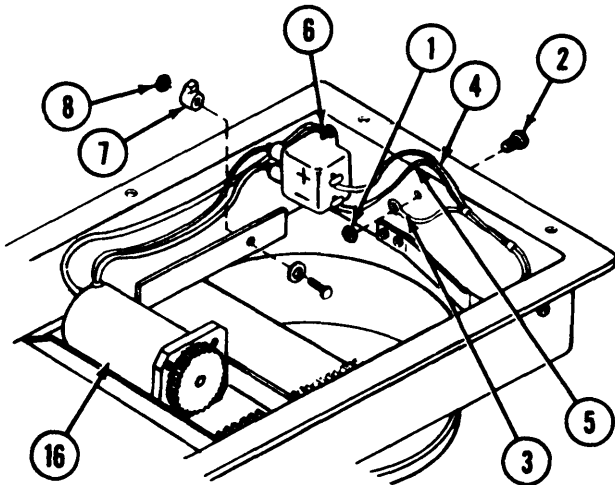


5. Install screw (2), GRD 4 terminal lug (3), and nut (1).
6. Observing the wiring diagram on page 2-160, solder the tagged wires (4 and 5) to lugs on FM radio noise filter (6).
7. Bring cabling between motor (16) and FL2 radio noise filter (6) together and install cable strap (7), screw (9), and nut (8).

**REMOVAL/INSTALLATION**

Airflow Valve

Radio noise filter

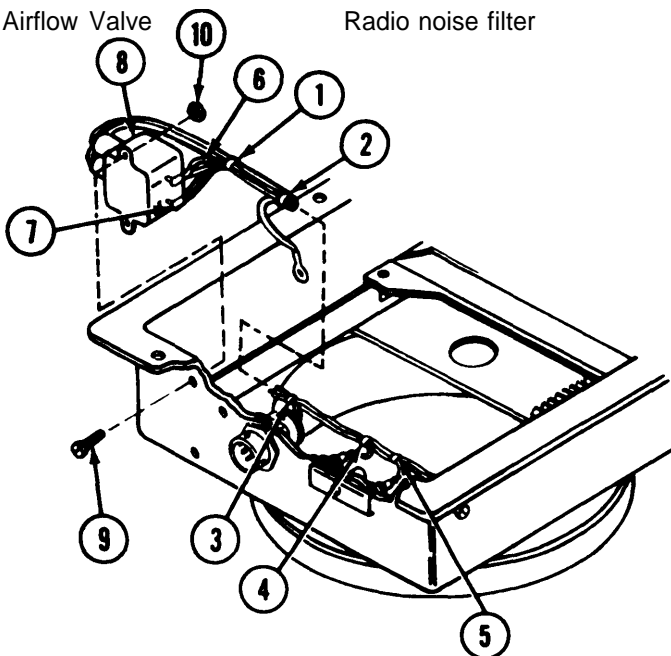

**REMOVAL**

1. Cut and remove cable ties (1 thru 5) and separate the wires.
2. Tag and unsolder one pair of wires (6) from FL1 radio noise filter (8) negative (-) terminal.
3. Tag and unsolder one pair of wires (7) from FL1 radio noise filter (8) positive (+) terminal.
4. Remove two screws (9) and nuts (10).







**2-12. AIRFLOW VALVE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION (Cont)**

Airflow Valve

Radio noise filter

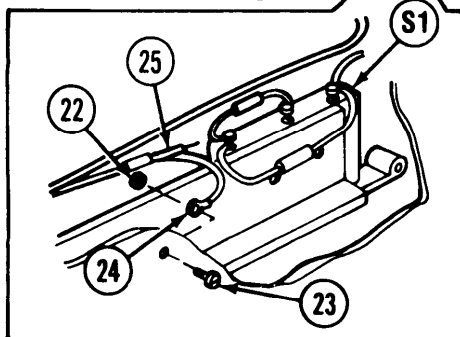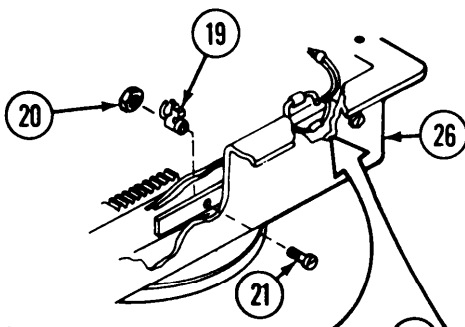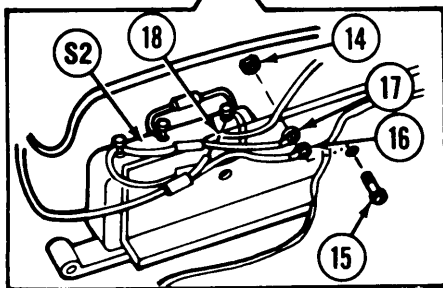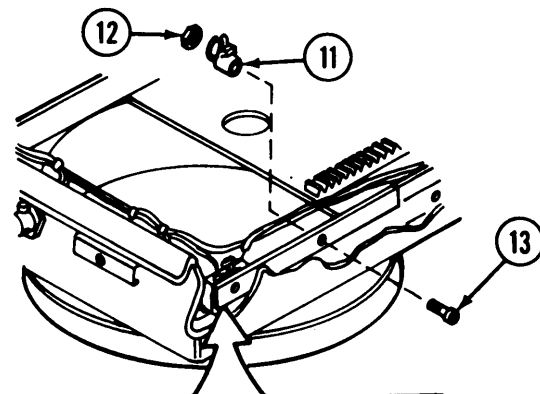

5. Cut cable strap (11 ). Remove nut (1 2), screw (13), and cable strap (11 ).
6. Remove nut (14), screw (15), and two grounding terminal lugs (16 and 17) from GRD 2.
7. Tag and unsolder wire (18) from normally closed (NC) terminal on switch (S2).

8. Cut cable strap (19). Remove nut (20), screw (21), and cable strap (19).
9. Remove nut (22), screw (23), and grounding lug (24) from GRD 3.
10. Tag and unsolder wire (25) from normally closed (NC) terminal on switch (S1 ).
11. Remove FL1 radio noise filter (8) from airflow valve (26).


**NOTE**

Be sure to keep the old filter. It will be used as a pattern for installing a new filter.

**2-12. AIRFLOW VALVE - MAINTENANCE INSTRUCTIONS (Cont).**


LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION (Cont)**

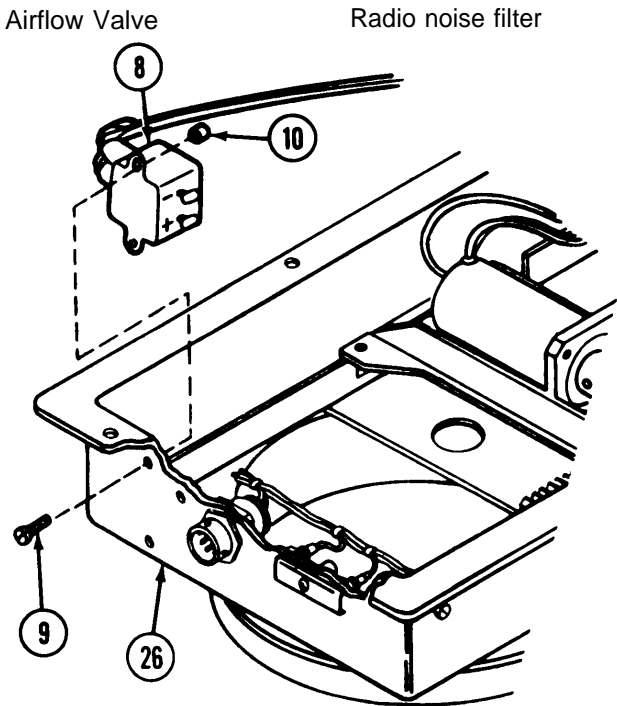

**INSTALLATION**

1. Using the old radio noise filter as a pattern, cut and tag wires on new filter and install ground terminal lugs on the shielding of both wires.
2. Mount radio noise filter (8) in airflow valve (26) using two screws (9) and nuts (10).

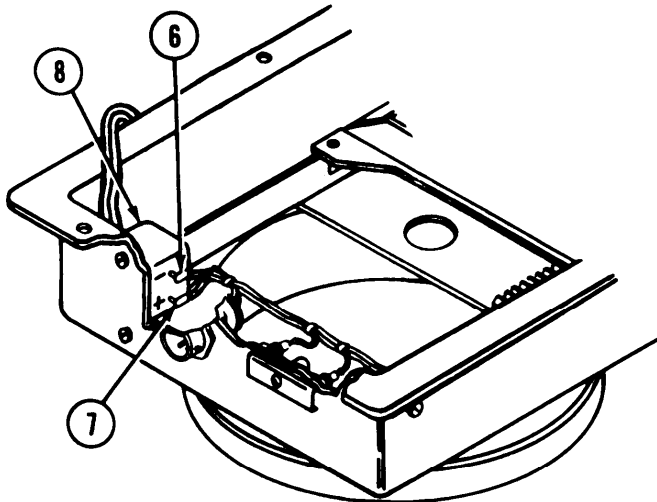

3. Observing the wiring diagram on page 2-160 solder the tagged wires (6 and 7) to lugs on FL1 radio noise filter (8).





**2-12. AIRFLOW VALVE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION (Cont)**

Airflow Valve

Radio noise filter

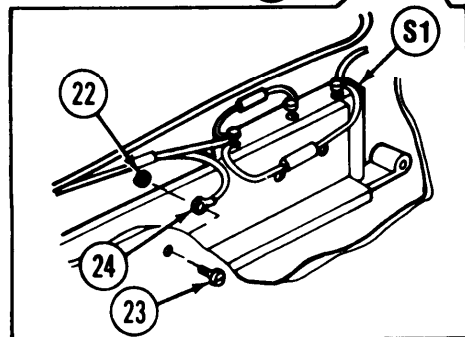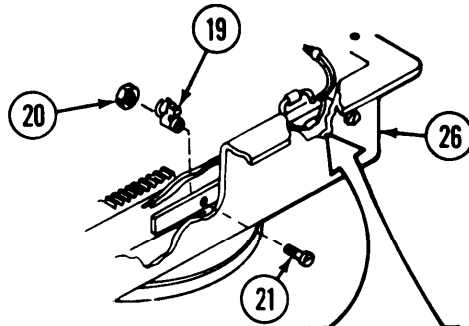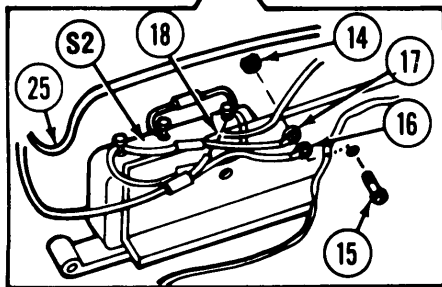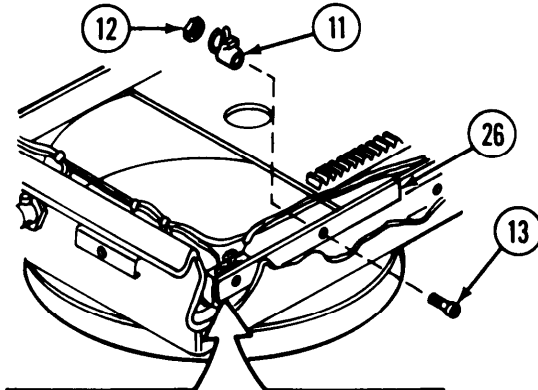

4. Place wires (18 and 25) in position in the airflow valve (26).
5. Solder wire (18) to normally closed (NC) terminal on switch (S2).
6. install grounding lugs (16 and 17), using screw (15) and nut (14).
7. Install cable strap (11) using screw (13) and nut (12). Secure the wires within the cable strap.

8. Solder wire (25) to normally closed (NC) terminal on switch (S1).
9. Install grounding lug (24) using screw (23) and nut (22).
10. Install cable strap (19) using screw (21) and nut (20). Secure the wires within the cable strap.

---

**2-12. AIRFLOW VALVE - MAINTENANCE INSTRUCTIONS (Cont).**

---


LOCATION	ITEM	ACTION
----------	------	--------

---

**REMOVAL/INSTALLATION**

Airflow Valve

Diode and capacitor on switch (S1 )

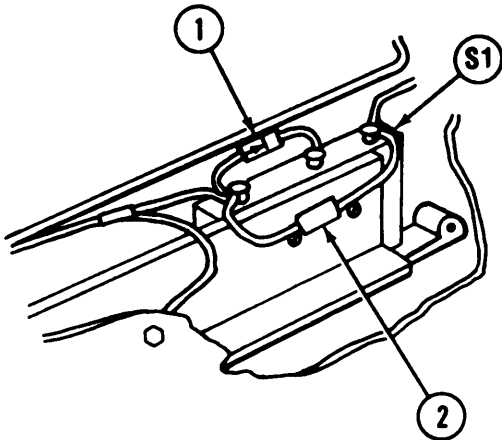

REMOVAL

1. Unsolder diode (1) from normally closed (NC) and from normally open (NO) terminals on switch (S1 ).
2. Unsolder capacitor (2) from normally closed (NC) and from common (C) terminals on switch (S1 ).

INSTALLATION

1. Cut and bend leads of diode (1) and capacitor (2) using the old parts as a pattern.
2. Solder diode (1) leads to normally closed (NC) and to normally open (NO) terminals on switch (S1 ).
3. Solder capacitor (2) leads to normally closed (NC) and common (C) terminals on switch (S1 ).


**2-12. AIRFLOW VALVE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

Airflow Valve

Switch (S1 ) and adapter

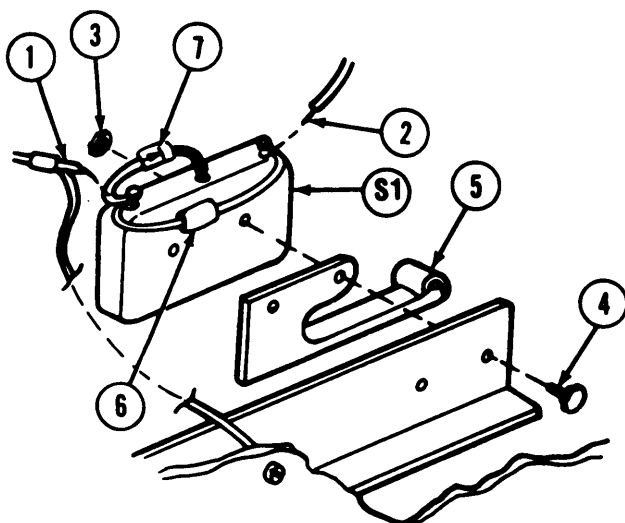**REMOVAL**

1. Tag and unsolder wire (1) from normally closed (NC) terminal on switch (S1 ).
2. Tag and unsolder wire (2) from common (C) terminal on switch (S1 ).
3. Remove two nuts (3) and screw (4).
4. Remove switch (S1) and adapter (5).

**INSTALLATION**

1. Install switch (S1 ) and adapter (5) using two screws (4) and nuts (3).
2. Cut and bend leads of capacitor (6) to fit between normally closed (NC) and common (C) terminals of switch (S1 ).
3. Cut and bend leads of diode (7) to fit between normally closed (NC) and normally open (NO) terminals of switch (S1 ).
4. Solder wire (1), one end of capacitor (6), and one end of diode (7) to normally closed (NC) terminal of switch (S1 ).
5. Solder wire (2) and one end of capacitor (6) to common (C) terminal of switch (S1 ).
6. Solder one end of diode (7) to normally open (NO) terminal of switch (S1 ).


**2-12. AIRFLOW VALVE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

Airflow Valve

Diode and capacitor on switch (S2)

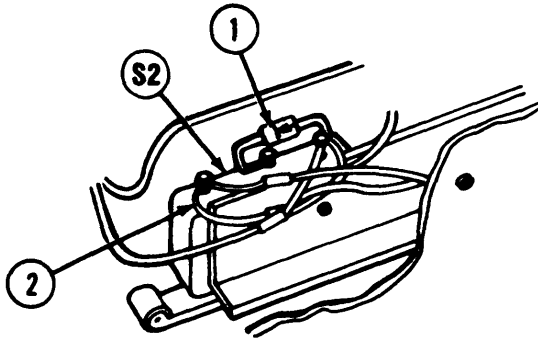

**REMOVAL**

1. Unsolder diode (1) from normally closed (NC) and from normally open (NO) terminals on switch (S2).
2. Unsolder capacitor (2) from normally closed (NC) and from common (C) terminals on switch (S2).

**INSTALLATION**

1. Cut and bend leads of diode (1) and capacitor (2) using the old parts as a pattern.
2. Solder diode (1) leads to normally closed (NC) and to normally open (NO) terminals on switch (S2).
3. Solder capacitor (2) leads to normally closed (NC) and to common (C) terminals on switch (S2).




**2-12. AIRFLOW VALVE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

Airflow Valve

Switch (S2) and adapter

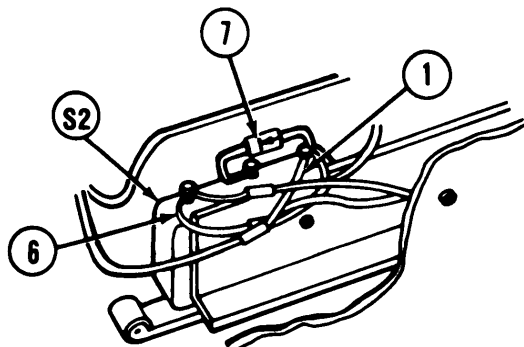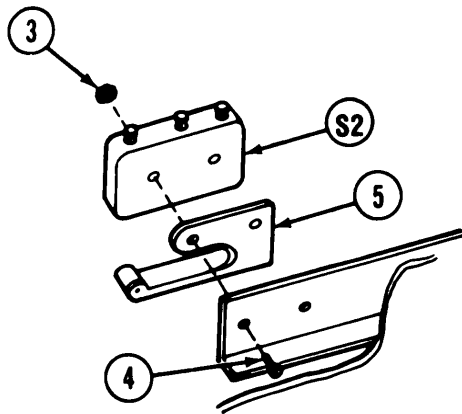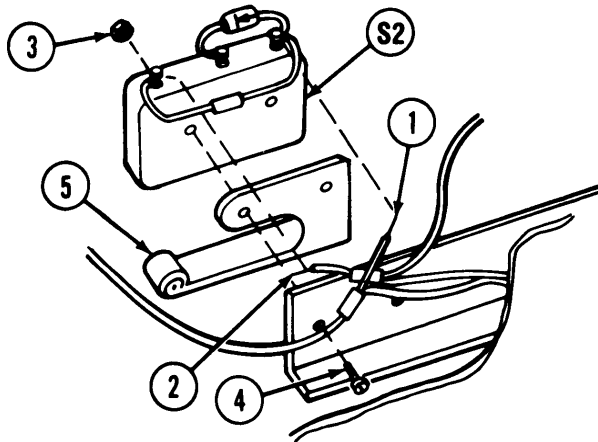

**REMOVAL**

1. Tag and unsolder wire (1) from normally closed (NC) terminal on switch (S2).
2. Tag and unsolder wire (2) from common (C) terminal on switch (S2).
3. Remove two nuts (3) and screws (4).
4. Remove switch (S2) and adapter (5).

**INSTALLATION**

1. Install switch (S2) and adapter (5) using two screws (4) and nuts (3).
2. Cut and bend leads of capacitor (6) to fit between normally closed (NC) and common (C) terminals of switch (S2).
3. Cut and bend leads of diode (7) to fit between normally closed (NC) and normally open (NO) terminals of switch (S2).
4. Solder wire (1), one end of capacitor (6), and one end of diode (7) to normally closed (NC) terminal of switch (S2).
5. Solder wire (2) and one end of capacitor (6) to common (C) terminal of switch (S2).
6. Solder one end of diode (7) to normally open (NO) terminal of switch (S2).


**2-12. AIRFLOW VALVE - MAINTENANCE INSTRUCTIONS (Cont)**

LOCATION	ITEM	ACTIVE
----------	------	--------

**REPAIR**

Airflow Valve

Wiring

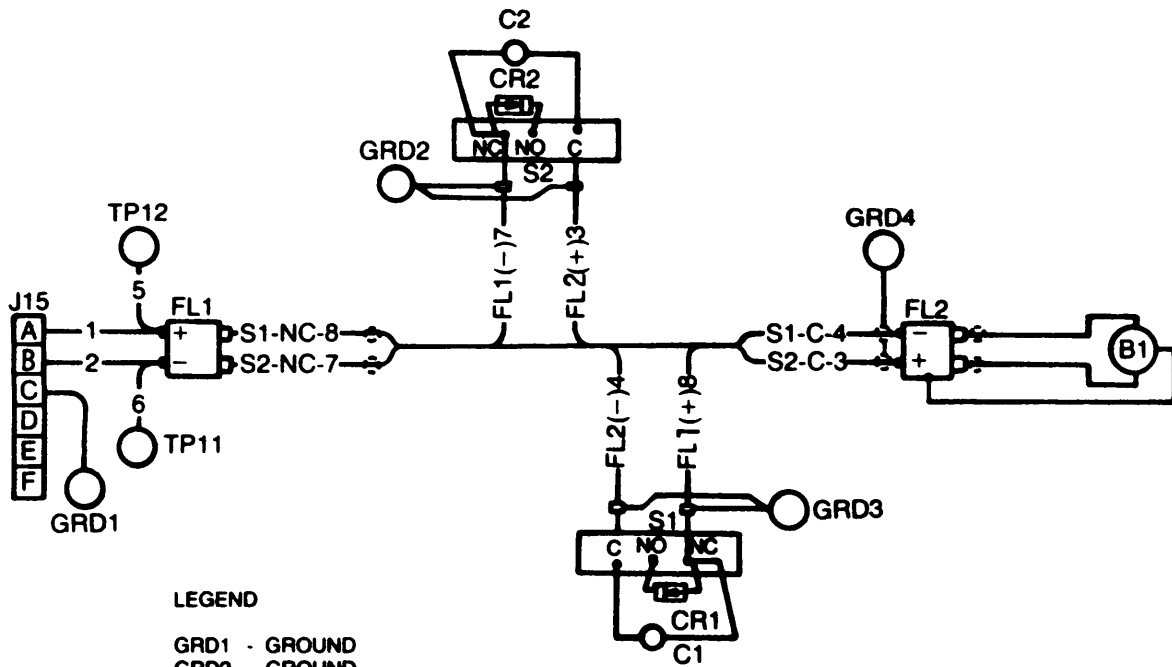

**LEGEND**

- GRD1 - GROUND
- GRD2 - GROUND
- GRD3 - GROUND
- GRD4 - GROUND
- B1 - GEAR MOTOR
- C1 - CAPACITOR
- C2 - CAPACITOR
- CR1 - DIODE
- CR2 - DIODE
- FL1 - FILTER
- FL2 - FILTER
- J15 - CONNECTOR
- S1 - CLOSED LIMIT SWITCH
- S2 - OPEN LIMIT SWITCH
- TP12 - TEST POINT
- TP11 - TEST POINT



**2-13. POWER DISTRIBUTION UNIT - MAINTENANCE INSTRUCTIONS.**

This task covers:

- a. Removal
- b. Installation

**INITIAL SETUP**

*Troubleshooting Reference*  
Refer to page 2-39.

*Equipment Condition*  
Power distribution unit removed from the filter unit.

*Tools*

Electronic Equipment Tool  
Kit TK-105/G (SC 5180-91-CL-R07)

LOCATION	ITEM	ACTION
----------	------	--------

<b>REMOVAL/INSTALLATION</b>
-----------------------------


Power Distribution Unit	Panel
-------------------------	-------

**REMOVAL**

1. Remove twelve screws (1) and separate panel (2) from housing (3).
2. Remove gasket (4) from housing (3).

**INSTALLATION**

1. Install gasket (4) on housing (3) with screw holes aligned.
2. Install panel (2) on housing using twelve screws (4).

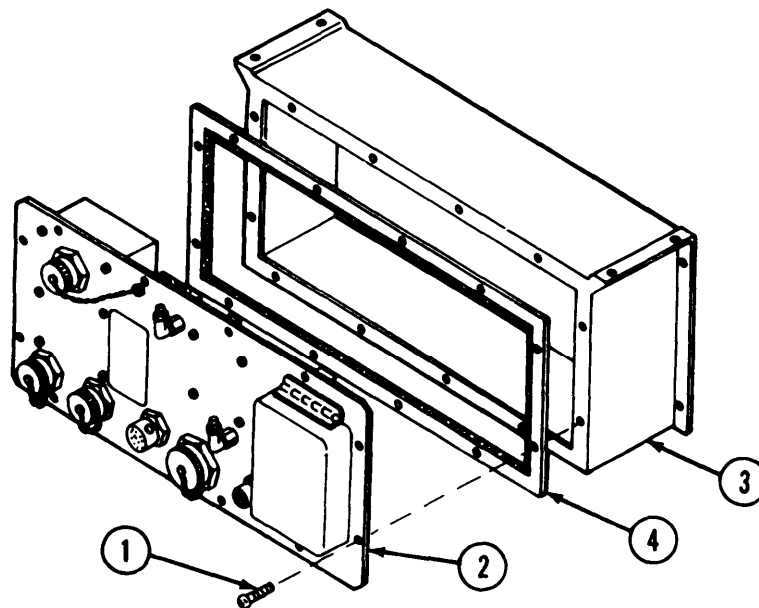

**2-14. POWER DISTRIBUTION PANEL - MAINTENANCE INSTRUCTIONS.**

This task covers:

- a. Removal
- b. Repair
- c. Installation

**INITIAL SETUP**

*Materials*

Insulation sleeving (item 6, app C)

*Troubleshooting References*

Refer to page 2-39.

*Tools*

Electronic Equipment Tool  
Kit TK-105/G (SC 5180-91-CL-R07)

*Equipment Condition*

Power distribution panel removed from distribution unit. Refer to page 2-161.


References

TB SIG 222

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

Power Distribution Panel      FAN circuit breaker

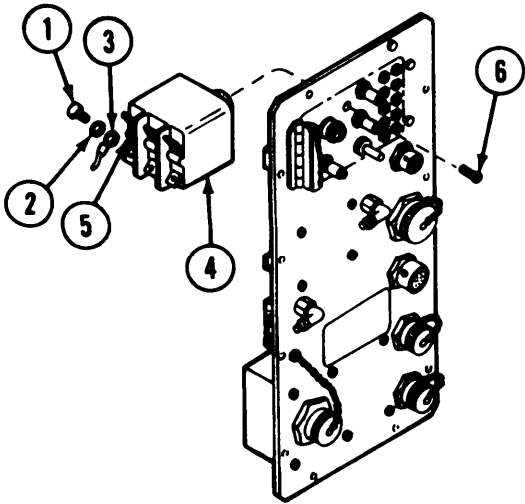

REMOVAL

1. Remove six screws (1), washers (2), and wires (3) from circuit breaker (4).
2. Unsolder wires from C and NO contacts (5) on circuit breaker.
3. Remove four screws (6) and remove fan circuit breaker (5).

INSTALLATION


Observe the orientation of the numbers on the push button.

1. Insert fan circuit breaker (4) in panel and secure with four screws (6).
2. Solder wires to C and NO contacts of circuit breaker. Refer to page 2-169.
3. Install wires on six electrical terminals using six screws (1) and washers (2).

**2-14. POWER DISTRIBUTION PANEL - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

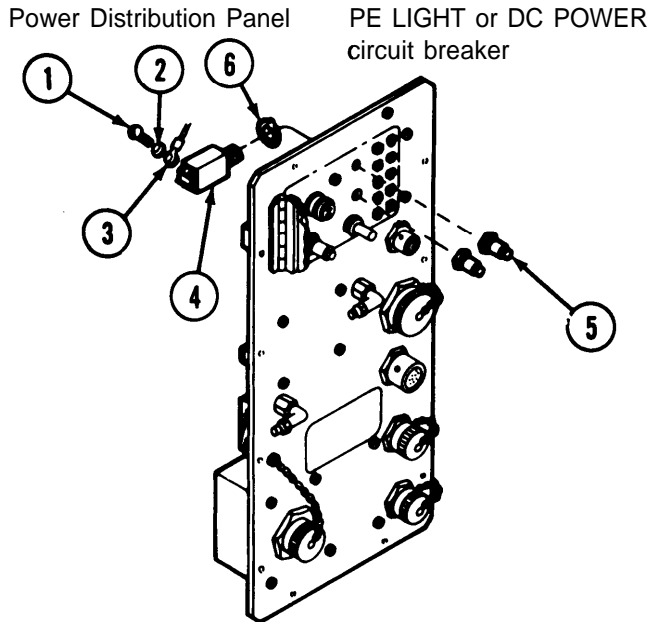

**REMOVAL**


1. Remove two screws (1), washers (2), and wires (3) from circuit breaker (4).
2. Unscrew waterproof boot (5).
3. Remove circuit breaker and keying washer (6).

**INSTALLATION**

1. Place keying washer (6) on circuit breaker (4).
2. Insert circuit breaker in panel and secure with waterproof boot (5).
3. Connect wires using screws (1) and washers (2). Refer to page 2-169.

**REMOVAL/INSTALLATION**

Power Distribution Panel      208 v indicator light

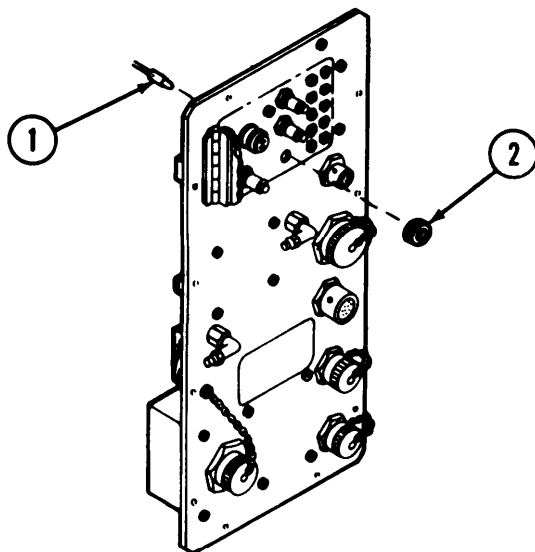

**REMOVAL**

1. Remove insulation and unsolder connections from indicator light (1).
2. Unscrew knurled ring (2) and remove indicator light.

**INSTALLATION**


1. Insert 208 v indicator light (1) in panel and secure with knurled nut (2).
2. Place insulation sleeving (item 6, app C) over wire leads.
3. Solder wire leads to 208 v indicator light. Refer to page 2-169.
4. Place insulation sleeving (item 6, app C) over connection and shrink,

**2-14. POWER DISTRIBUTION PANEL - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL**

Power Distribution Panel	RFI filter	<ol style="list-style-type: none"> <li>1. Remove five nuts (1), lockwashers (2), and washers (3) from filter terminals and release wiring (4).</li> <li>2. Unscrew nut (5).</li> <li>3. unscrew four screws (6) and remove radio noise filter.</li> <li>4. Remove preformed packing (7) from radio noise filter (8).</li> </ol>
--------------------------	------------	---

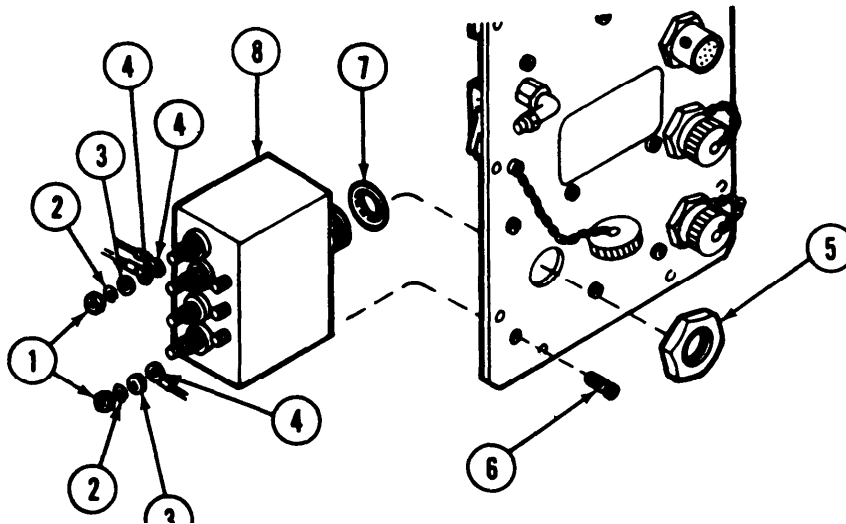

**REPAIR**

Preformed packing

Replace preformed packing (7) if unserviceable.

**INSTALLATION**


Power Distribution Panel	RFI filter	<ol style="list-style-type: none"> <li>1. Place preformed packing (7) on radio noise filter (8).</li> <li>2. Install radio noise filter in panel using four screws (6) and nut (5).</li> <li>3. Connect electrical wiring to the seven connectors. Refer to page 2-169.</li> </ol>
--------------------------	------------	--

**2-14. POWER DISTRIBUTION PANEL - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL**

Power Distribution Panel      Pressure switch

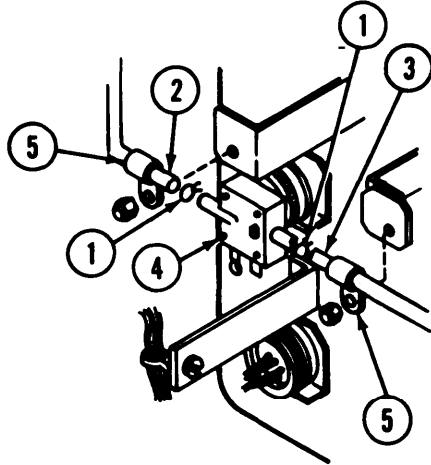

1. Pinch ears of hose clamps (1) and remove tubing (2 and 3) from pressure switch (4).
2. Loosen clamps (5) if necessary to remove tubes.
3. Disconnect electrical connector from pressure switch and remove switch.

**REPAIR**

Nonmetallic tubing

Fabricate replacement tubing (2 or 3) from NSN 9330-01-073-1011 stock. Cut to same length as tubing being replaced.

**INSTALLATION**

Pressure switch

1. Connect wire connector to pressure switch (4).
2. Position pressure switch between tubing (2 and 3) with switch terminals pointing toward transformer/rectifier and "LOW" and "HIGH" marking away from panel.
3. Install tube (3) on the "LOW" side of the switch and tube (2) on the "HIGH" side.
4. Position clamps (1) within 1/4 inch of switch body.

**2-14. POWER DISTRIBUTION PANEL - MAINTENANCE INSTRUCTIONS (Cont).**


LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

Power Distribution Panel      Transformer/rectifier

**REMOVAL**

1. Remove four screws (1) from transformer/rectifier (2) and remove wires.
2. Remove four screws (3), washers (4), and nuts (5) and remove transformer/rectifier.

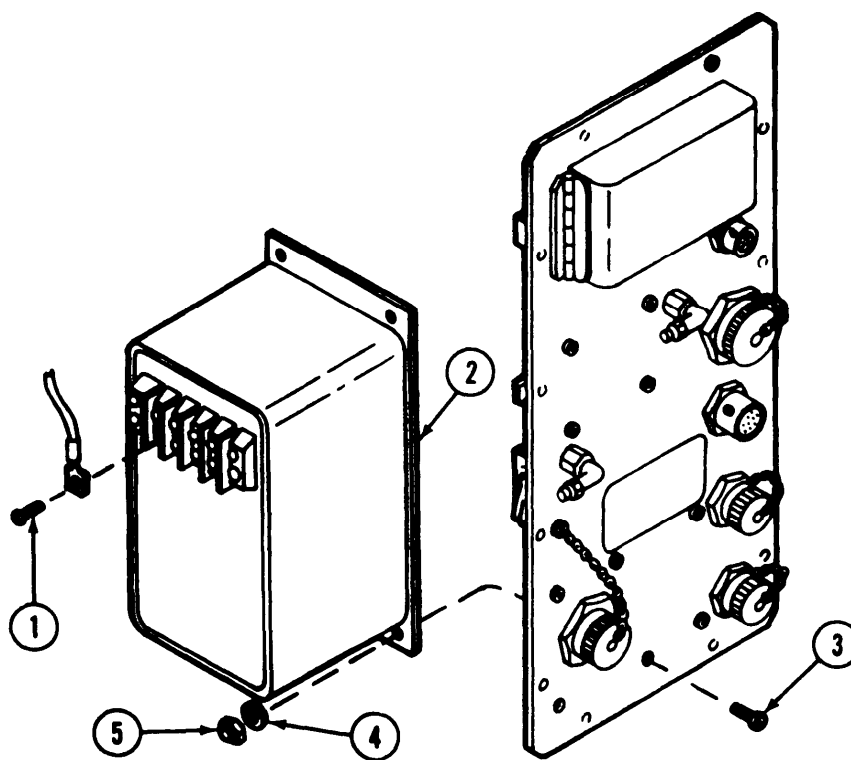

**INSTALLATION**

1. Position transformer/rectifier (2) on panel.
2. Secure to panel using four screws (3), washers (4), and nuts (5).
3. Install wires using four screws (1). Refer to page 2-169.

**2-14. POWER DISTRIBUTION PANEL - MAINTENANCE INSTRUCTIONS (Cont).**


LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

Power Relay	Diode (CR5)
Power Distribution Panel	Power relay

REMOVAL

1. Remove nuts (1) and washers (2).
2. Remove diode (3) from power relay (4).
3. Remove six nuts (5) and washers (6) from power relay and remove wires (7 and 8).
4. Remove four nuts (9), washers (10), and screws (11).
5. Remove power relay.

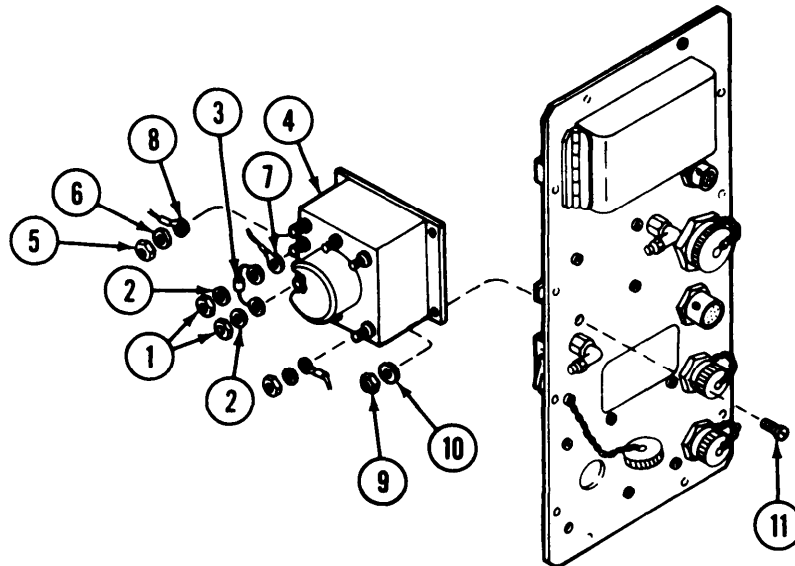

INSTALLATION

Power Distribution Panel	Power relay
Power Relay	Diode (CR5)


1. Position power relay (4) on panel,
2. Attach with four screws (11), washers (10), and nuts (9).
3. Install wires (7) on terminals XI and X2 of power relay. Refer to page 2-169.
4. Install diode (3) between terminal XI and X2 of the power relay. Ensure that the end is installed on terminal X2. Secure with washers (2) and nuts (1).
5. Install wires (8) and secure with washers (6) and nuts (5). Refer to page 2-169.

**2-14. POWER DISTRIBUTION PANEL - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

Power Distribution Panel      Printed circuit assembly

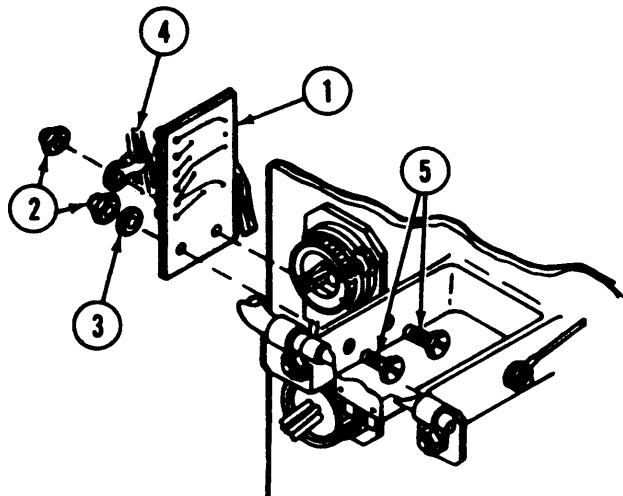

**REMOVAL**

1. Unsolder wires from auxiliary switching printed circuit assembly (1).
2. Remove two nuts (2), washer (3), cable strap (4), and two screws (5).
3. Remove auxiliary switching printed circuit assembly.

**INSTALLATION**

1. Position printed circuit board (1) on bracket and install screws (5).
2. Install cable strap (4) and nut (2) on one screw. Install washer (3) and nut (2) on the other.
3. Connect and solder wires to printed circuit assembly. Refer to wiring diagram on page 4-169.




**2-14. POWER DISTRIBUTION PANEL - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**R E P A I R**

Power Distribution Panel Wiring

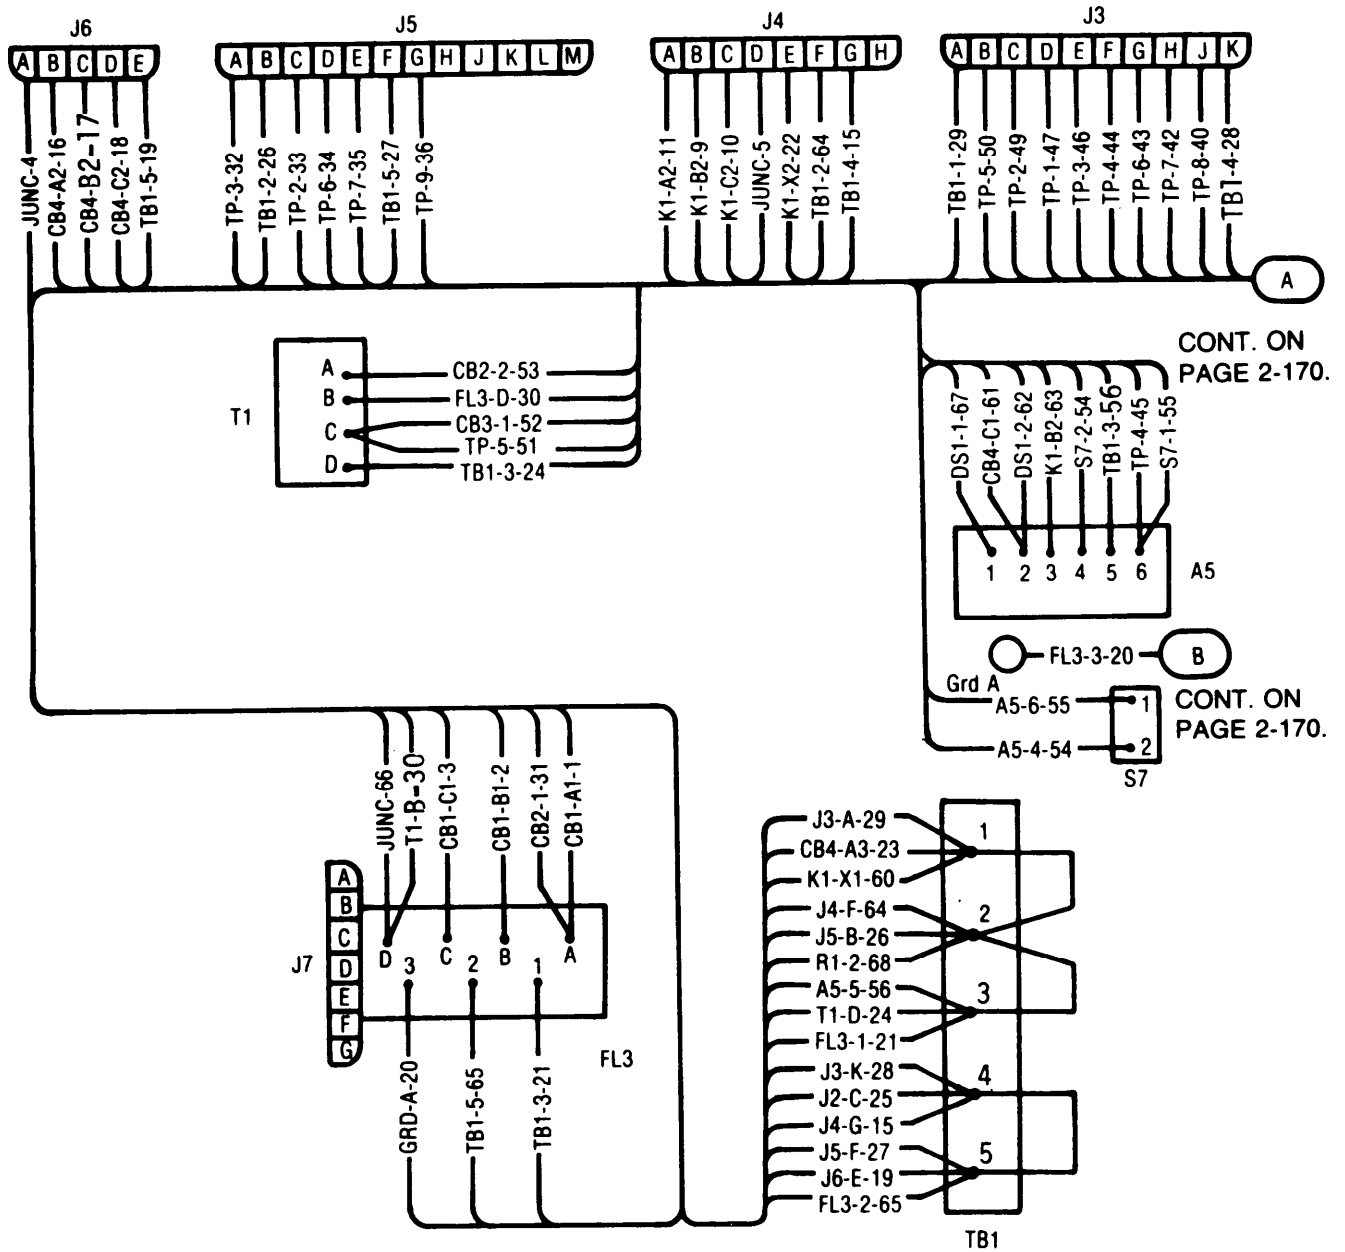


2-14. POWER DISTRIBUTION PANEL - MAINTENANCE INSTRUCTIONS (Cont).

LOCATION	ITEM	ACTION
----------	------	--------

**REPAIR (Cont)**

Power Distribution Panel      Wiring

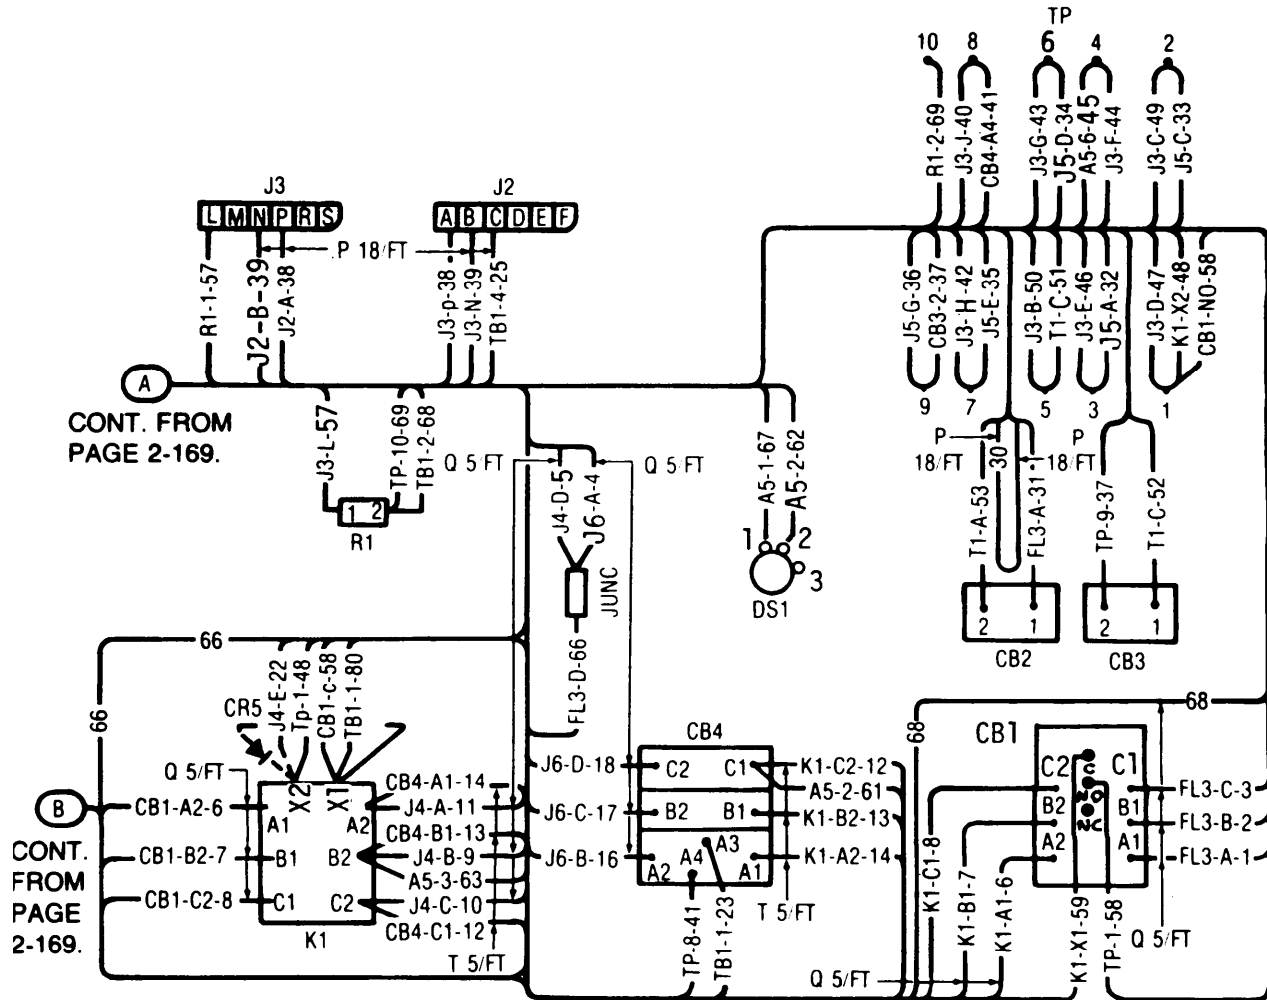

LEGEND

- |                           |                           |
|---------------------------|---------------------------|
| A5 - PRINTED CIRCUIT CARD | J4 - CONNECTOR            |
| CB1 - CIRCUIT BREAKER     | J5 - CONNECTOR            |
| CB2 - CIRCUIT BREAKER     | J6 - CONNECTOR            |
| CB3 - CIRCUIT BREAKER     | J7 - CONNECTOR            |
| CB4 - CIRCUIT BREAKER     | JUNC - INSULATED JUNCTION |
| CR5 - DIODE               | K1 - FAN RELAY            |
| DS1 - INDICATOR           | R1 - RESISTOR             |
| FL3 - FILTER              | S7 - PRESSURE SWITCH      |
| GRD - GROUND              | T1 - TRANSFORMER          |
| J2 - CONNECTOR            | TB1 - TERMINAL BOARD      |
| J3 - CONNECTOR            | TP - TEST POINT           |

**2-15. COMPARTMENT CONTROL MODULE - MAINTENANCE INSTRUCTIONS.**

This task covers:

- a. Disassembly
- b. Repair
- c. Reassembly
- d. Removal
- e. Installation

**INITIAL SETUP**

*Troubleshooting References*

Refer to page 2-63.

*Tools*

Electronic Equipment Tool  
Kit TK-105/G (SC 5180-91-CL-R07)

*Equipment Condition*

Compartment control module removed from shelter.

*References*


TB SIG 222

LOCATION	ITEM	ACTION
----------	------	--------

**DISASSEMBLY**

Compartment control module

1. Remove eight screws (1).
2. Pull panel (2) away from housing (3).

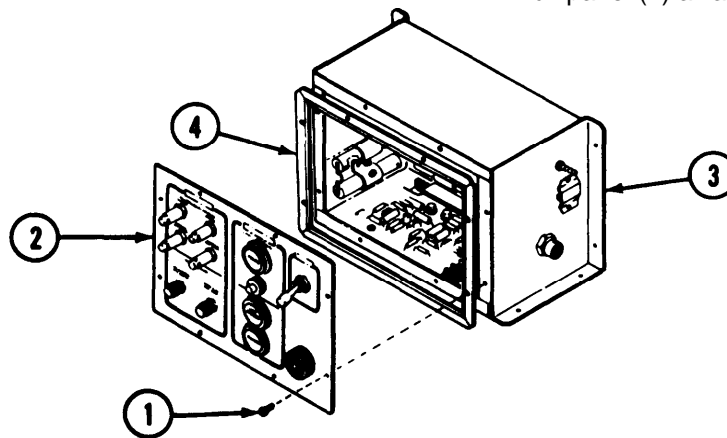

**REPAIR**

Gasket

Replace gasket (4) if defective.

**REASSEMBLY**

Compartment control module

Position panel (2) on housing (3) and secure with eight screws (1).



**2-15. COMPARTMENT CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

**REMOVAL**

1. Disassemble CCM (p 2-171).
2. Remove screw (1) and washer (2).
3. Pinch ears of clamps (3 and 4) and pull tubes from pressure switch (5).
4. Carefully remove connectors (6) from pressure switch (5).

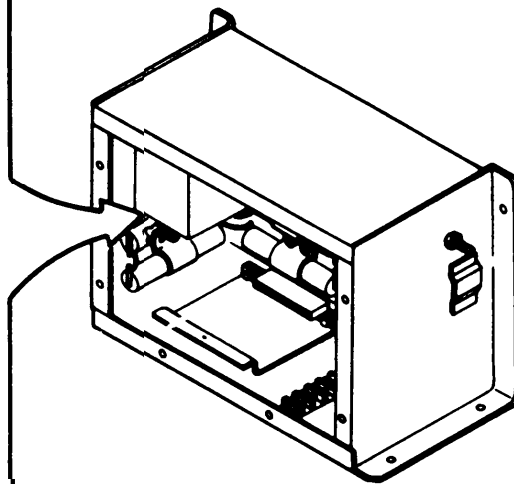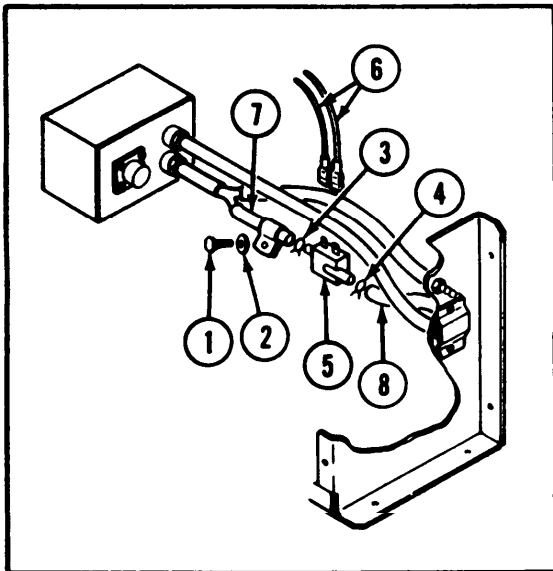

**INSTALLATION**

1. Connect pressure switch (5) (tap marked LOW) to tube (7).
2. Connect pressure switch (5) (tap marked HIGH) to tube (8).
3. Install hose clamps (3 and 4) and electrical connectors (6).
4. Reassemble CCM (p 2-171).

**2-15. COMPARTMENT CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).**


LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL**

Housing

Pressure transducer

1. Disassemble CCM (p 2-171).
2. Remove connector (1) from pressure transducer (2).
3. Pull tubing (3) from pressure transducer (2).
4. Remove two screws (4) and remove pressure transducer (2).

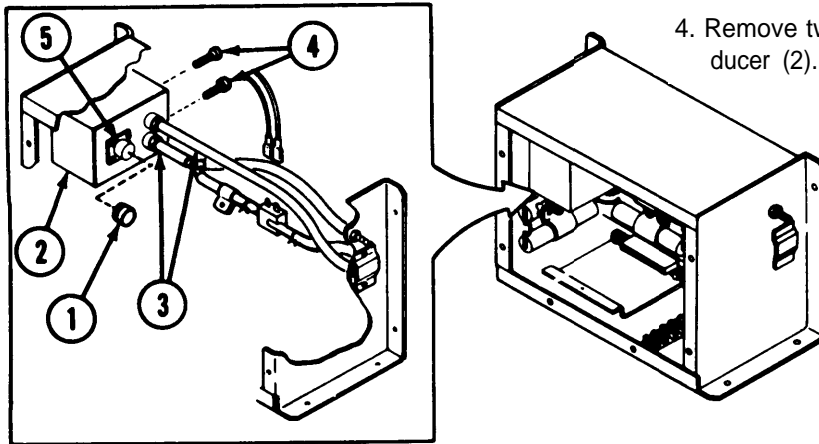

**REPAIR**

Nonmetallic tubing

Fabricate replacement tubing (3) from NSN 9330-01-073-1011 stock. Cut to same length as tubing being replaced.

**INSTALLATION**

Pressure transducer

1. Install pressure transducer (2) using two screws (4).
2. Connect tubing (3) to pressure transducer (2).
3. Connect connector (1) to connector (5).
4. Reassembly CCM (p 2-171).

**CAUTION**

When installing rubber tubes, be sure that the tube from the pressure switch is connected to the hose connector marked LOW on the pressure transducer and that the other tube is connected to the hose connector marked HIGH on the pressure transducer.


**2-15. COMPARTMENT CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

Housing

Power card

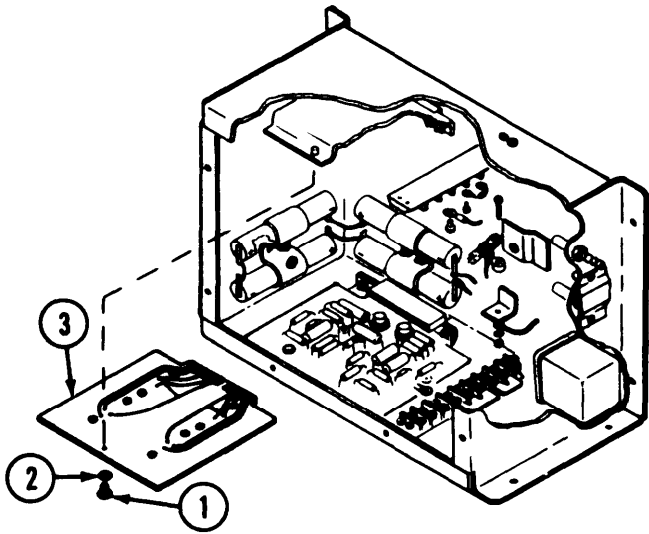

**REMOVAL**

1. Disassemble CCM (p 2-171).
2. Remove screws(1) and washer (2).
3. Pull power card (3) from its socket.


**INSTALLATION**

1. Insert power card (3) into connector.
2. Secure power card (3) with screw (1) and washer (2).
3. Reassemble CCM (p 2-171).

**REMOVAL/INSTALLATION**

Housing

Batteries (warning system)

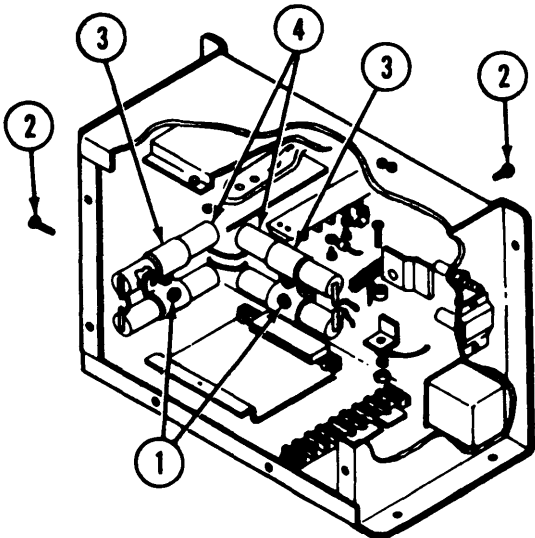

**REMOVAL**

1. Disassemble CCM (p 2-171).
2. Remove four nuts (1) and screws (2).
3. Remove two battery retainers (3).
4. Unsolder and remove four batteries (4).

**INSTALLATION**


1. Solder connections on four warning system batteries (4). Refer to page 2-184.
2. Install and Secure the four batteries (4) using two retainers (3), four screws (2), and four nuts (1).
3. Reassemble CCM (p 2-171).

**2-15. COMPARTMENT CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

Panel Printed circuit assembly (auxiliary switching)

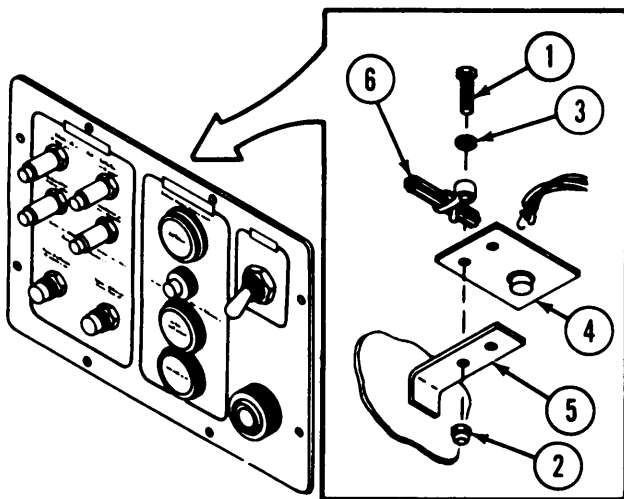

**REMOVAL**

1. Disassemble CCM (p 2-171),
2. Remove two screws (1), nuts (2), and washers (3)
3. Unsolder wires and remove auxiliary switching printed circuit assembly (4).

**CAUTION**


Apply needle-nose pliers to the leads of the diodes connected between terminals 1 and 2, 3 and 8, and 7 and 8 to form a heat sink during soldering of these terminals. This is done to prevent heat damage to the diodes. Use care to apply only enough heat as necessary to form a good solder joint. This applies to all terminals.

**INSTALLATION**

1. Connect and solder wires to auxiliary switching printed circuit assembly (4). Refer to page 2-184.
2. Place auxiliary switching printed circuit assembly (4) on bracket (5) and attach using screws (1), washers (3), cable bracket (6), and nuts (2).
3. Reassemble CCM (p 2-171).

**REMOVAL/INSTALLATION**

Housing Flasher

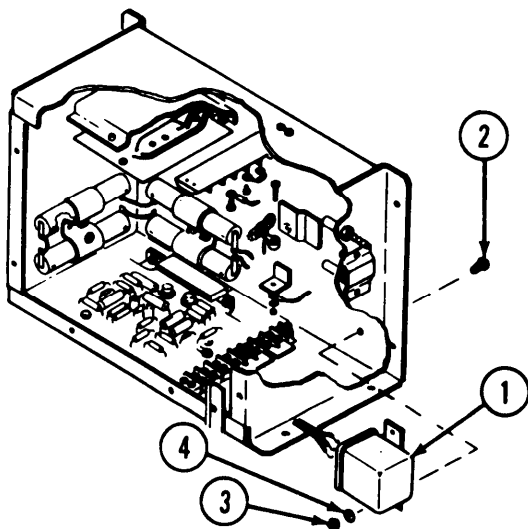

**REMOVAL**

1. Disassemble CCM (p 2-171).
2. Unsolder wires from flasher (1).
3. Remove two screws (2), nuts (3), and washers (4).
4. Remove flasher (1).

**INSTALLATION**


1. Install flasher(1) using two screws (2), washers (4), and nuts (3).
2. Connect and solder wires. Refer to page 2-184.
3. Reassemble CCM (p 2-171).

**2-15. COMPARTMENT CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

Housing                      Switching card

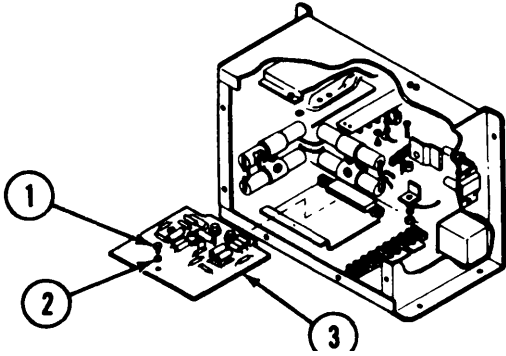


**REMOVAL**

1. Disassemble CCM (p 2-171).
2. Remove screw (1) and washer (2).
3. Pull out switching card (3).

**INSTALLATION**

1. Insert switching card (3) into connector.
2. Secure switching card (3) with screw (1) and washer (2).
3. Reassemble CCM (p 2-171).

**REMOVAL**

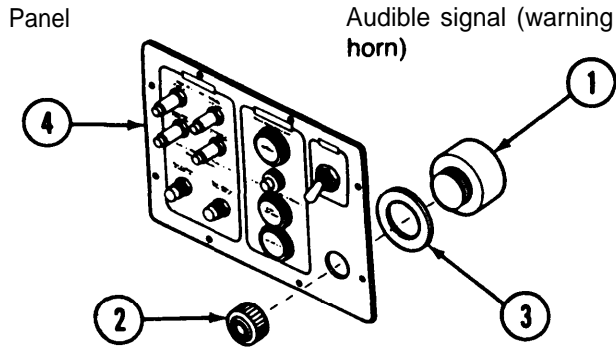

1. Disassemble CCM (p 2-171).
2. Remove wires from warning horn (1).
3. Unscrew bezel (2) and remove warning horn(1) and gasket (3).

**REPAIR**

**Gasket**

Fabricate gasket (fig D-2, app D).

**INSTALLATION**

Audible signal (warning horn)


1. Insert warning horn(1) with gasket (3) in panel (4) and secure with bezel (2).
2. Connect wire leads. Refer to page 2-184.
3. Reassemble CCM (p 2-171).



**2-15. COMPARTMENT CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

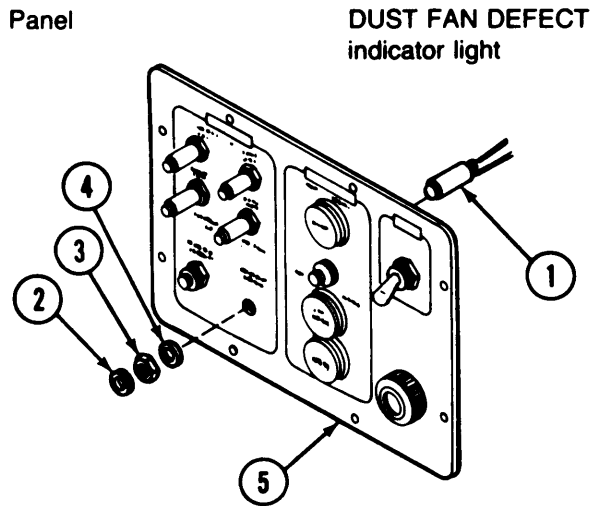


**REMOVAL**

1. Disassemble CCM (p 2-171).
2. Remove insulation and unsolder wires from terminal on DUST FAN DEFECT indicator light (1).
3. Remove knurled ring (2), nuts (3), and washer (4) from light (1).

**INSTALLATION**

1. Insert DUST FAN DEFECT indicator light (1) in panel (5) and secure with washer (4) and nut (3).
2. Install knurled ring (2).
3. Connect and solder wire leads. Refer to page 2-184.
4. Reassemble CCM (p 2-171).

**REMOVAL/INSTALLATION**

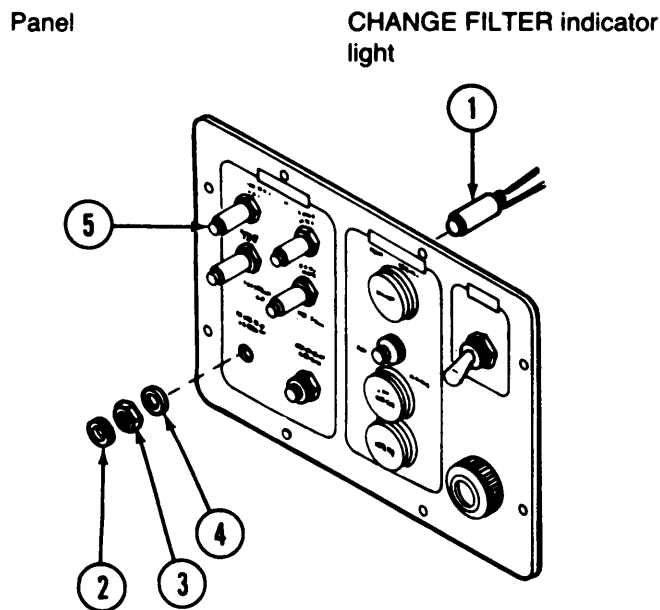

**REMOVAL**

1. Disassemble CCM (p 2-171).
2. Remove insulation and unsolder wires from terminals on CHANGE FILTER indicator light (1).
3. Remove knurled ring (2), nut (3), and washer (4) from light (1).

**INSTALLATION**

1. Insert CHANGE FILTER indicator light (1) in panel (5) and secure with washer (4) and nut (3).
2. Install knurled ring (2).
3. Connect and solder wire leads. Refer to page 2-184.
4. Reassembly CCM (p 2-171).


**2-15. COMPARTMENT CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont),**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

Panel

**INDICATORS circuit breaker**

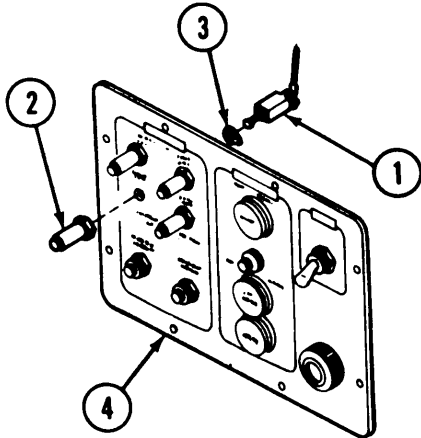

**REMOVAL**

1. Disassemble CCM (p 2-171).
2. Remove wire leads from INDICATORS circuit breaker (1).
3. Unscrew and remove waterproof boot (2).
4. Remove circuit breaker (1) and keying washer (3).


**INSTALLATION**

1. Insert INDICATORS circuit breaker(1) with keying washer (3) in panel (4) and secure with waterproof boot (2).
2. Connect wire leads. Refer to page 2-104.
3. Reassemble CCM (p 2-171).

**REMOVAL/INSTALLATION**

Panel

**ENTRANCE PRESSURE circuit breaker**

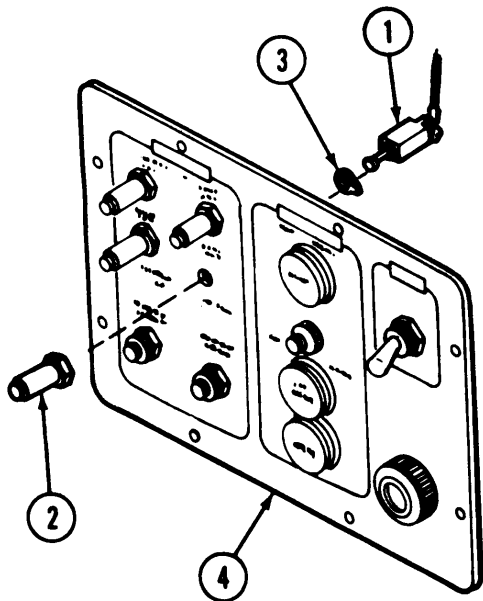

**REMOVAL**

1. Disassemble CCM (p 2-171).
2. Remove wire leads from ENTRANCE PRESSURE circuit breaker (1).
3. Unscrew and remove waterproof boot (2).
4. Remove circuit breaker (1) and keying washer (3).

**INSTALLATION**


1. Insert ENTRANCE PRESSURE circuit breaker (1) with keying washer (3) in panel (4) and secure with waterproof boot (2).
2. Connect wire leads. Refer to page 2-184.
3. Reassemble CCM (p 2-171).

**2-15. COMPARTMENT CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

Panel

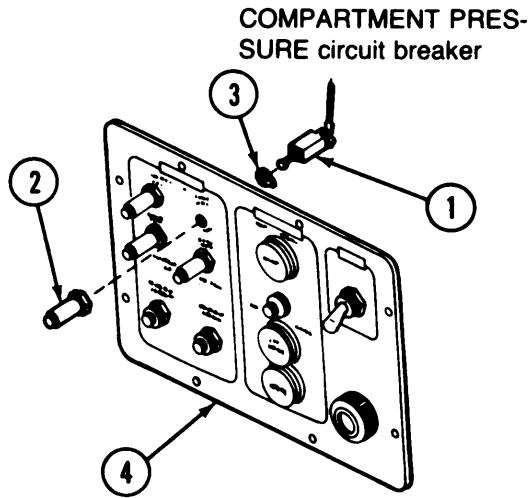


REMOVAL

1. Disassemble CCM (p 2-171).
2. Remove wire leads from COMPARTMENT PRESSURE circuit breaker (1).
3. Unscrew and remove waterproof boot (2).
4. Remove circuit breaker (1) and keying washer (3).

INSTALLATION

1. Insert COMPARTMENT PRESSURE circuit breaker (1) with keying washer (3) in panel (4) and secure with waterproof boot (2).
2. Connect wire leads. Refer to page 2-184.
3. Reassemble CCM (p 2-171).

**REMOVAL/INSTALLATION**

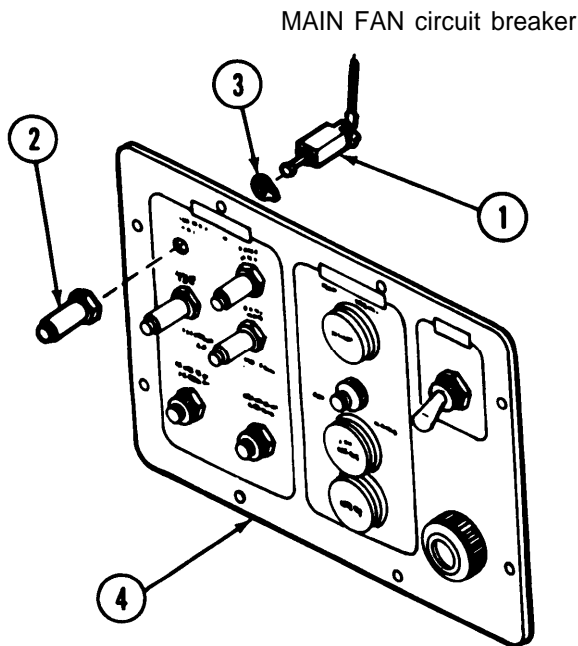

REMOVAL

1. Disassemble CCM (p 2-171).
2. Remove wire leads from MAIN FAN circuit breaker (1).
3. Unscrew and remove waterproof boot (2).
4. Remove circuit breaker (1) and keying washer (3).

INSTALLATION

1. Insert MAIN FAN circuit breaker (1) with keying washer (3) in panel (4) and secure with waterproof boot (2).
2. Connect wire leads. Refer to page 2-184,
3. Reassemble CCM (p 2-171).


**2-15. COMPARTMENT CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

Panel

**OCCUPIED switch/  
indicator light**

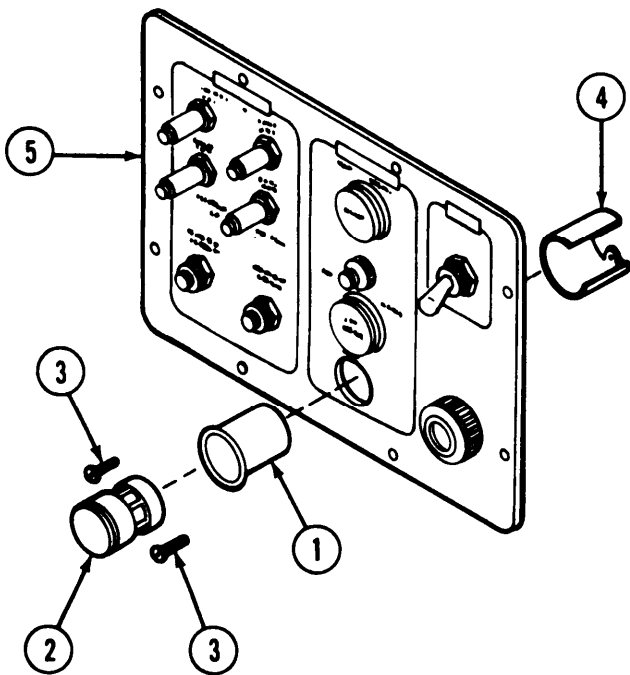

**REMOVAL**

1. Disassemble CCM (p 2-171).
2. Unsolder wire leads from OCCUPIED switch/indicator light (1).
3. Pry out and remove the lamp module (2),
4. Remove two screws (3).
5. Remove sleeve (4) and switch/indicator light (1).

**INSTALLATION**

**NOTE**

Lamp module is keyed to fit into light body at only one rotational position. It maybe necessary to turn the lamp module within the light body to find the keyway.

1. Place module (2) in OCCUPIED switch/indicator light (1) and position in panel (5) with the word OCCUPIED right side up and level.
2. Remove module (2). Place sleeve (4) over switch/indicator light (1) and secure with screws (3).
3. Replace module (2) in switch/indicator light (1).
4. Connect and solder wires. Refer to page 2-184.
5. Reassemble CCM (p 2-171).

**REMOVAL/INSTALLATION**

**LOW PRESSURE switch/  
indicator light**

**REMOVAL**


1. Disassemble CCM (p 2-171).
2. Unsolder wire leads from LOW PRESSURE switch/indicator light (1).
3. Pry out and remove the lamp module (2),
4. Remove two screws (3).
5. Remove sleeve (4) and switch/indicator light(1).

**2-15. COMPARTMENT CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION (Cont)**

**INSTALLATION**

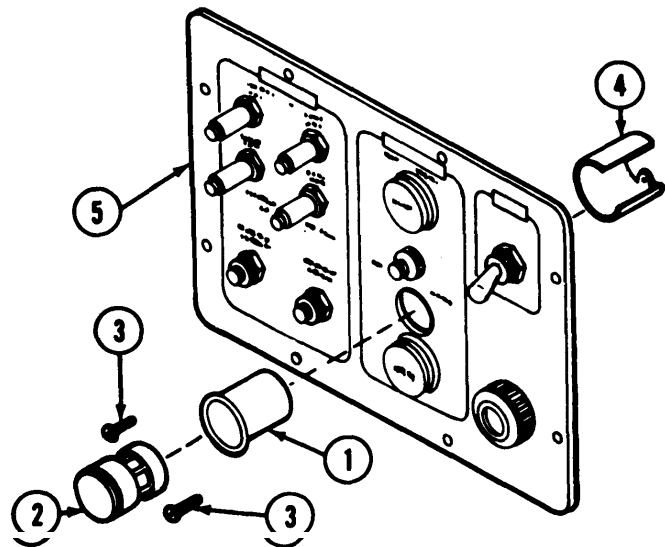

**NOTE**

Lamp module is keyed to fit into light body at only one rotational position. it maybe necessary to turn the lamp module within the light body to find the keyway.


1. Place module (2) in LOW PRESSURE switch/indicator light (1) and position in panel (5) with the words LOW PRESSURE right side up and level.
2. Remove module (2). Place sleeve (4) over switch/indicator light (1) and secure with screws (3).
3. Replace module (2) in switch/indicator light(1).
4. Connect and solder wires. Refer to page 2-184.
5. Reassemble CCM (p 2-171).

**REMOVAL/INSTALLATION**

**REMOVAL**

**Panel**

**MASK switch/indicator light**

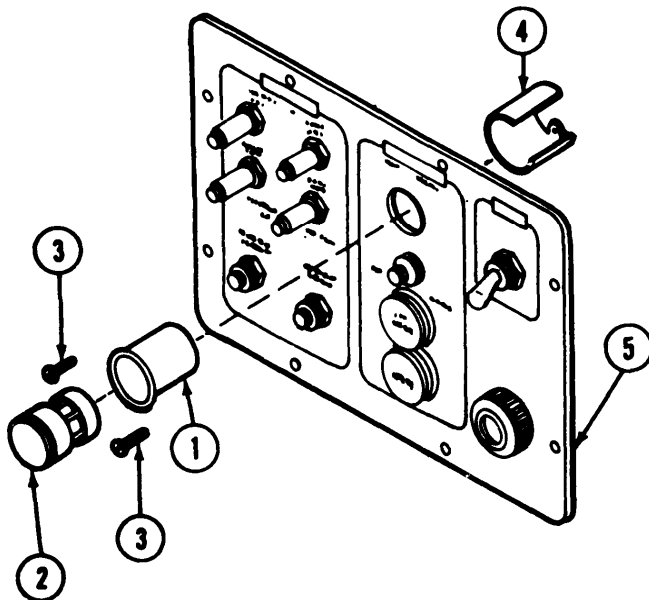

1. Disassemble CCM (p 2-171).
2. Unsolder wire leads from MASK switch/indicator light (1).
3. Pry out and remove lamp module (2).
4. Remove two screws (3).
5. Remove sleeve (4) and switch/indicator light (1).

**INSTALLATION**

**NOTE**

Lamp module is keyed to fit into light body at only one rotational position. It maybe necessary to turn the lamp module within the light body to find the keyway.

1. Place module (2) in MASK switch/indicator light(1) and position in panel (5) with the word MASK right side up and level.
2. Remove module (2). Place sleeve (4) over switch/indicator light (1) and secure with screws (3).
3. Replace module (2) in switch/indicator light (1).
4. Connect and solder wires. Refer to page 2-184,
5. Reassemble CCM (p 2-171).

**2-15. COMPARTMENT CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

REMOVAL

**CAUTION**

When unsoldering diodes (1) from the switch solenoid terminals, apply needle-nose pliers to the leads of the diode to form a heat sink. Excessive heat will damage the diode.


1. Disassemble CCM (p 2-171).
2. Unsolder diodes (1) from HORN OFF switch (2).

INSTALLATION

**CAUTION**

Diodes must be connected properly or damage will result. Observe the banded end of the diodes. Apply needle-nose pliers to leads of diodes to form a heat sink when soldering. Excessive heat will damage the diodes.

1. Solder diodes (1) to HORN OFF switch (2) in accordance with wiring diagram (p 2-184).
2. Reassemble CCM (p 2-171).

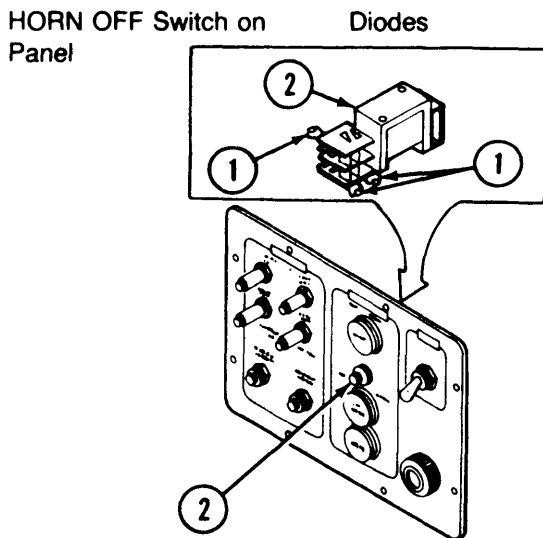


**REMOVAL/INSTALLATION**

REMOVAL

1. Disassemble CCM (p 2-171).
2. Unsolder wire leads and diodes from HORN OFF switch (1).
3. Remove nut (2) and switch (1).

INSTALLATION

1. Insert HORN OFF switch (1) in panel (3) and secure with nut (2).
2. Connect and solder wires and diodes to HORN OFF switch. Refer to page 2-184.
3. Reassemble CCM (p 2-171).

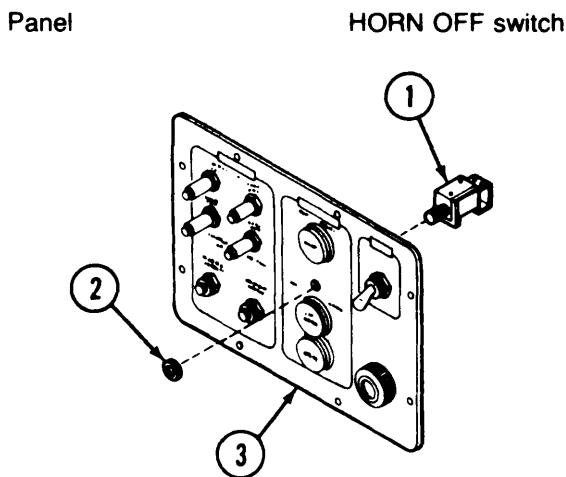


**2-15. COMPARTMENT CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REMOVAL/INSTALLATION**

**POWER toggle switch**

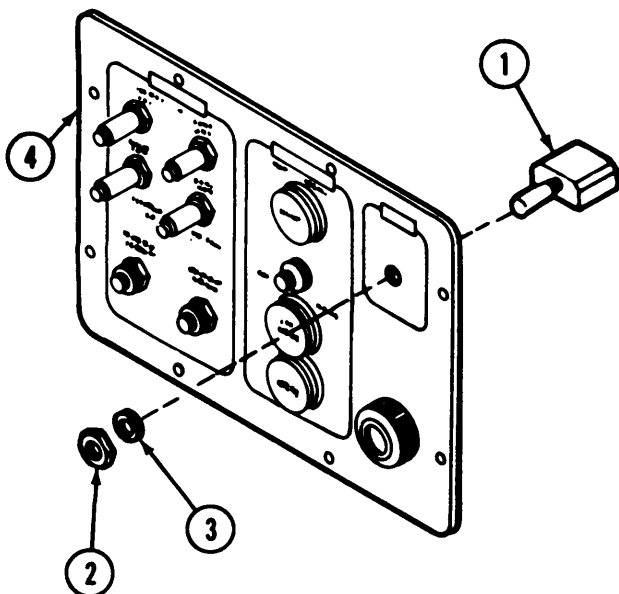

**REMOVAL**

1. Disassemble CCM (p 2-171).
2. Remove wire leads from POWER toggle switch (1).
3. Remove nut (2), washer (3), and POWER toggle switch.

**INSTALLATION**


1. Insert POWER toggle switch (1) in panel (4) and secure with washer (3) and nut (2).
2. Connect electrical wires. Refer to page 2-184.
3. Reassemble CCM (p 2-171).

**2-15. COMPARTMENT CONTROL MODULE -MAINTANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REPAIR**

Compartment Control Module      Wiring

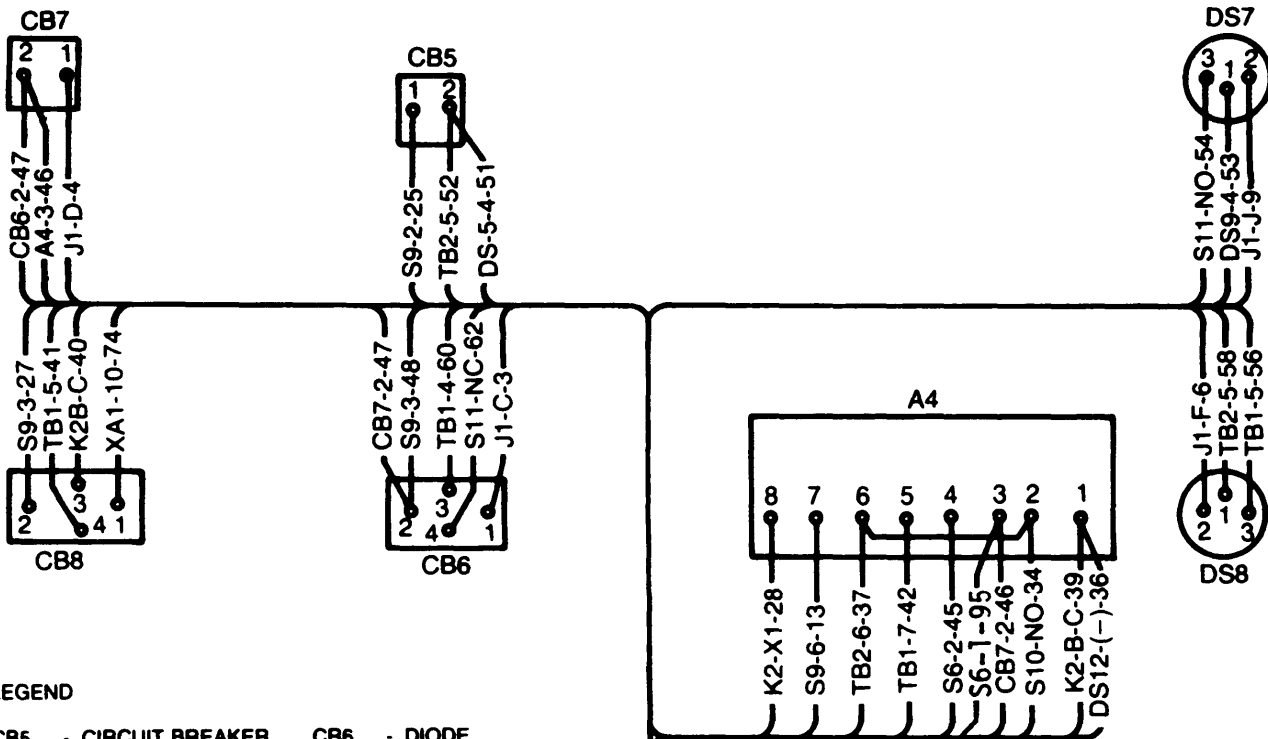

**LEGEND**

- |                       |                      |
|-----------------------|----------------------|
| CB5 - CIRCUIT BREAKER | CR6 - DIODE          |
| CB6 - CIRCUIT BREAKER | CR4 - DIODE          |
| CB7 - CIRCUIT BREAKER | A4 - CIRCUIT BOARD   |
| CB8 - CIRCUIT BREAKER | LS1 - HORN           |
| DS5 - INDICATOR       | J1 - CONNECTOR       |
|                       | P19 - CONNECTOR      |
| DS7 - INDICATOR       | XA1 - CONNECTOR      |
| DS8 - INDICATOR       | XA2 - CONNECTOR      |
| DS9 - INDICATOR       | TB1 - TERMINAL BOARD |
| CR5 - DIODE           | TB2 - TERMINAL BOARD |
| DS11 - INDICATOR      | LS - RELAY           |
| DS12 - INDICATOR      | GRD - GROUND         |
| S6 - SWITCH           | B1 - BATTERY         |
| S8 - SWITCH           | B2 - BATTERY         |
| S9 - SWITCH           | B3 - BATTERY         |
| S10 - SWITCH          | B4 - BATTERY         |
| S11 - SWITCH          |                      |

**A** CONT. ON PAGE 2-185.




**2-15. COMPARTMENT CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).**

LOCATION	ITEM	ACTION
----------	------	--------

**REPAIR (Cont)**

Compartment Control Module      Wiring

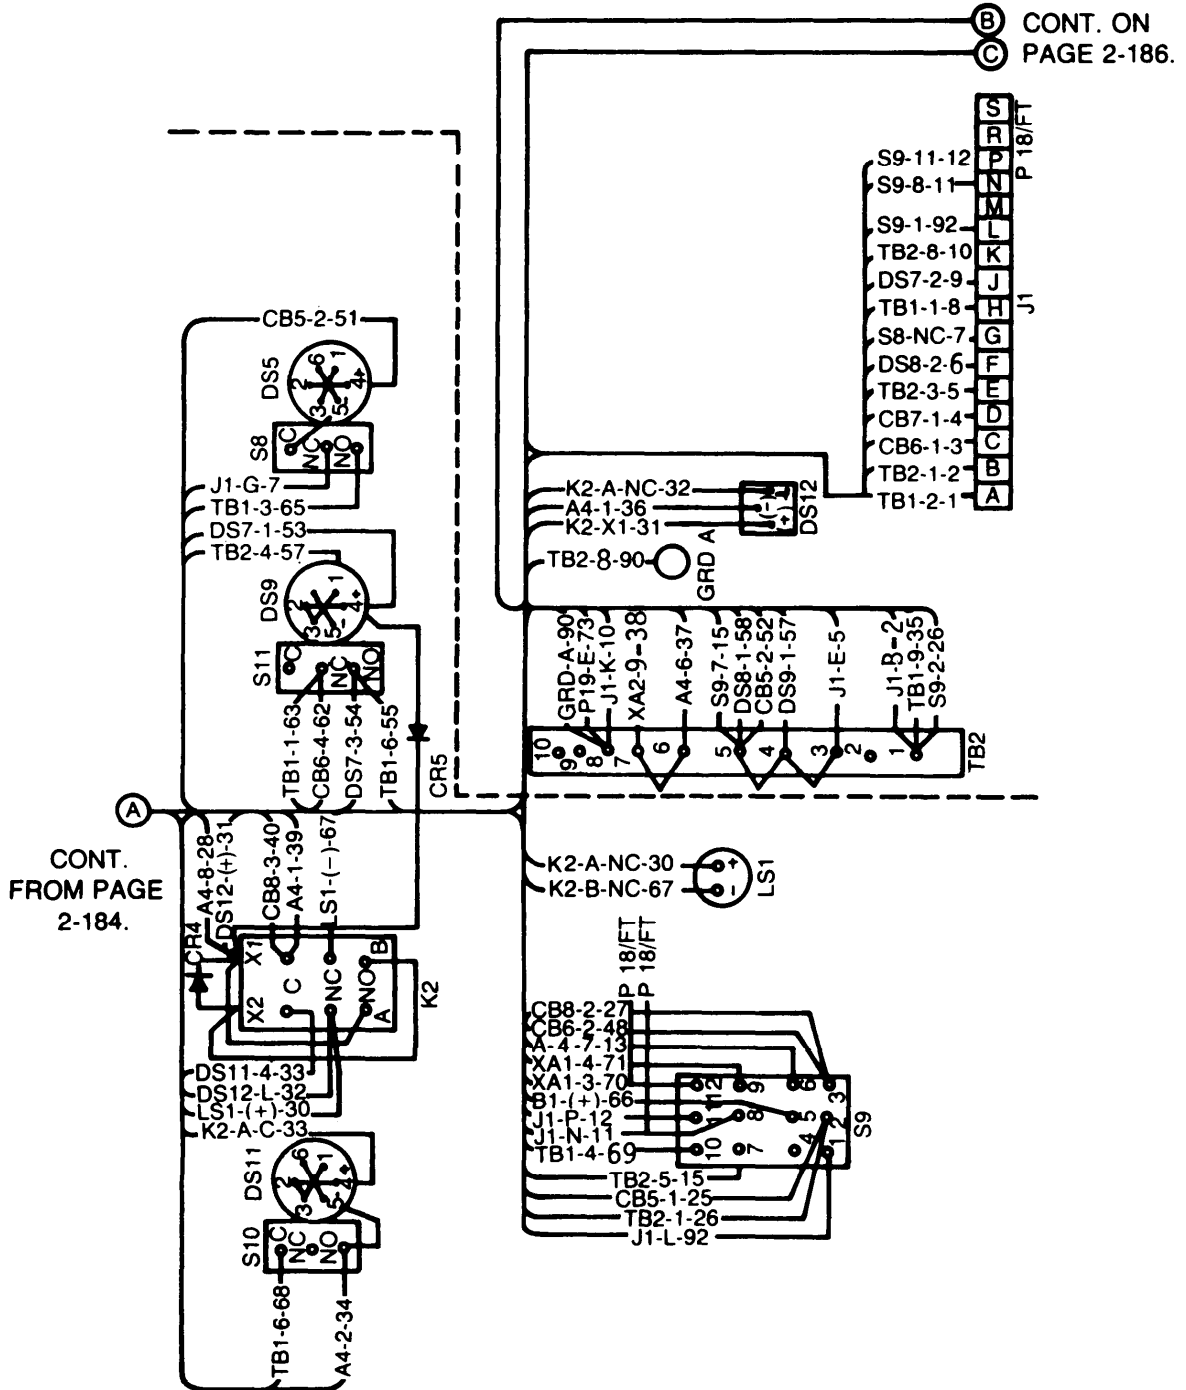


2-15. COMPARTMENT CONTROL MODULE - MAINTENANCE INSTRUCTIONS (Cont).

LOCATION	ITEM	ACTION
----------	------	--------

**REPAIR (Cont)**

Compartment Control Module

Wiring

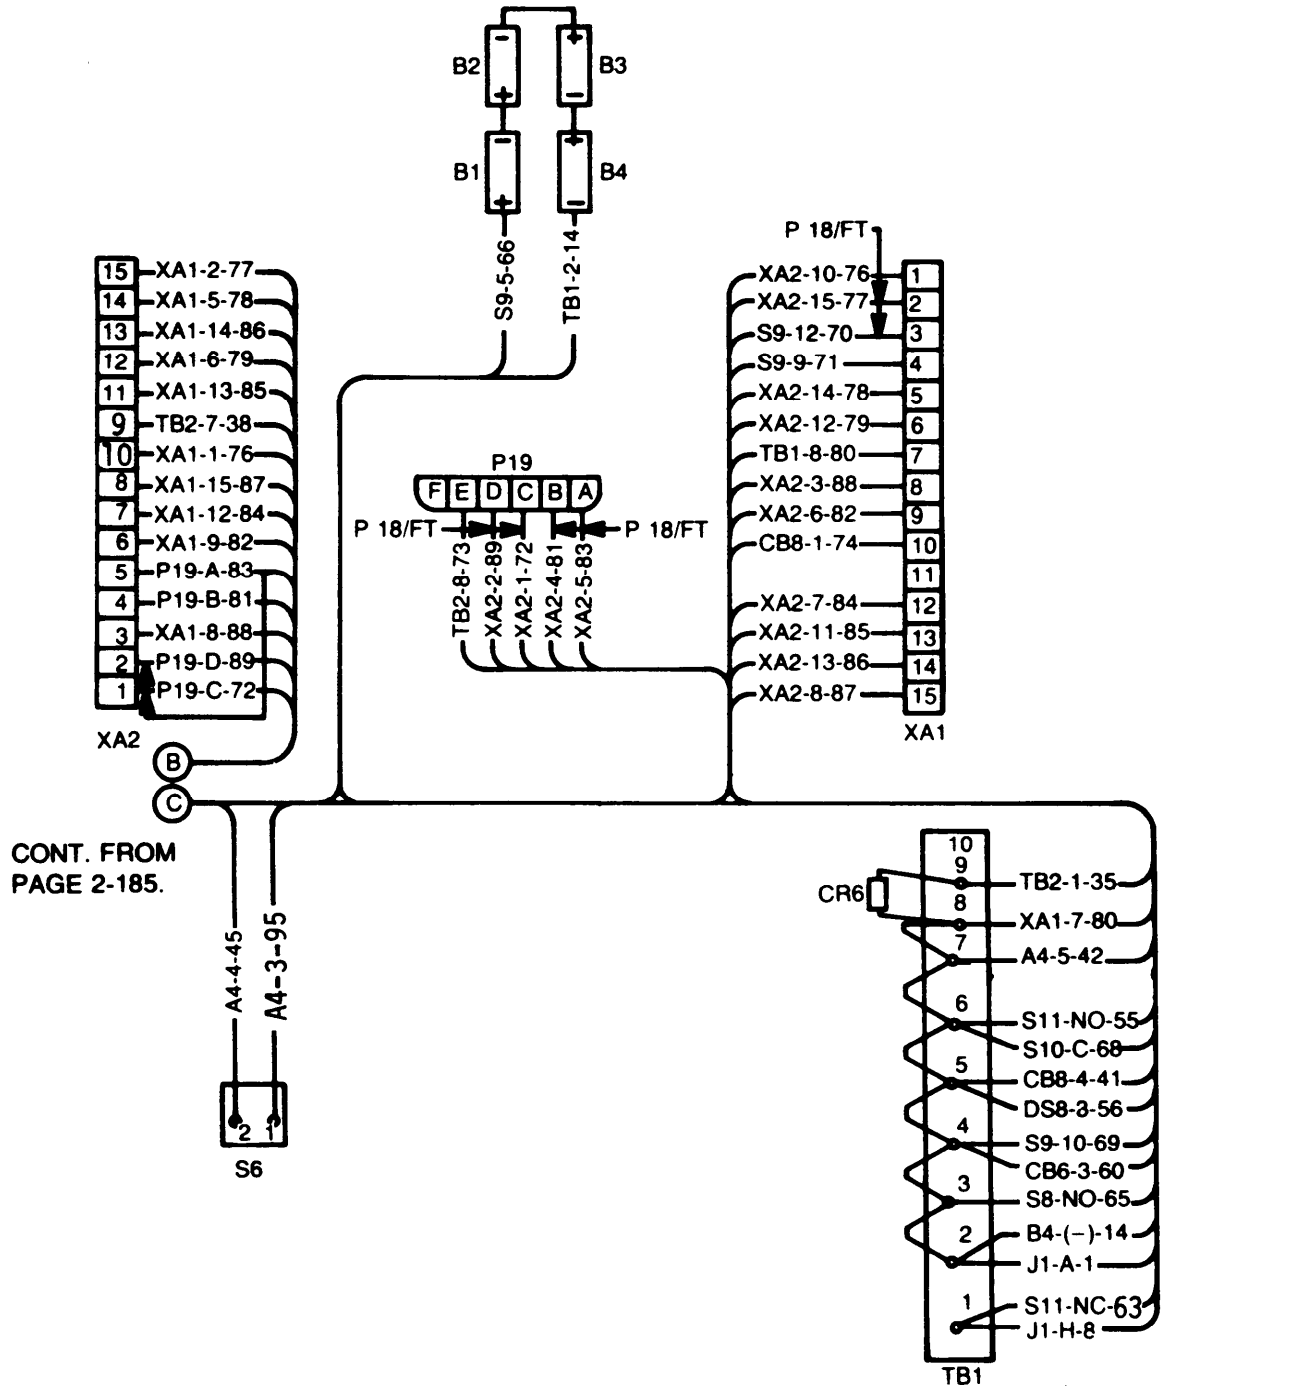

## APPENDIX A REFERENCES

---

The following publications are related to information contained in this manual.

### A-1. TECHNICAL MANUALS

- TM 3-4240-284-20&P . . . . . Organizational Maintenance Manual (Including Repair Parts and Special Tools List) for Collective Protection Equipment, Fire Direction System, Artillery, (TACFIRE) AN/GSG-1 O(V). Consisting of Entrance, Protective, Pressurized, Collapsible, M10 (NSN 4240-00-229-2610); Filter Unit, Gas-Particulate, 200 CFM, 208 V, 400 Hz, M56 (NSN 4240-00-237-0227); and Installation Kit, CBR, Protective Equipment, TACFIRE, M262 (NSN 4240-01-063-4655)
- TM 38-750 . . . . . The Army Maintenance Management System (TAMMS)
- TM 43-0002-31 . . . . . Destruction of Chemical Weapons and Defense Equipment to Prevent Enemy Use

### A-2. COMMON TABLE OF ALLOWANCES

- CTA 50-970 . . . . . Expendable Items (Except Medical, Class V, Repair Parts and Heraldic Items)

### A-3. SUPPLY BULLETIN

- SB 708-42 . . . . . Federal Supply Code for Manufacturers; United States and Canada-Code to Name (Cataloging Handbook H4-2)

### A-4. SUPPLY CATALOGS

- SC 5180-91-CL-R07 . . . . . Tool Kit, Electronic Equipment TK-105/G
- SC 5180-90-CL-N26 . . . . . Tool Kit, General Mechanics

### A-5. TECHNICAL BULLETIN

- TB SIG 222 . . . . . Solder and Soldering



## APPENDIX B REPAIR PARTS AND SPECIAL TOOLS LIST

### Section 1. INTRODUCTION

**B-1. Scope.** This appendix lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for the performance of direct support maintenance of the Collective Protection Equipment for TACFIRE. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

**B-2. General.** This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence. Bulk materials are listed in National stock number (NSN) sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list in National item identification number (NIIN, the last nine figures of the NSN) sequence, of all National stock numbers (NSNS) appearing in the listings, followed by a list in alphameric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

**B-3. Explanation of Columns.**

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA	Item procured and stocked for anticipated or known usage.
PB	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply system.
PC	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
PE	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF	Support equipment which will not be stocked but which will be centrally procured on demand.
PG	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which, because of probable discontinuance or shutdown of production facilities, would prove uneconomical to reproduce at a later time.
KF	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or intermediate levels of maintenance.
KB	Item included in both a depot overhaul/repair kit and a maintenance kit.

**TM 3-4240-284-30&P**

<i>Code</i>	<i>Definition</i>
MO	Item to be manufactured or fabricated at organizational level.
MF	Item to be manufactured or fabricated at the direct support maintenance level.
AO	Item to be assembled at organizational level.
AF	Item to be assembled at direct support maintenance level.
XA	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XB	Item is not procured or stocked. If not available through salvage, requisition.
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

**NOTE**

Cannibalization or salvage may be used as a source of supply for any items coded above, except those coded XA.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR supported items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance.

<i>Code</i>	<i>Application/explanation</i>
C	Crew or operator maintenance performed within organizational maintenance.
O	Support item is removed, replaced, used at the organizational level.
F	Support item is removed, replaced, used at the direct support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/explanation</i>
O	The lowest maintenance level capable of complete repair of the support item is the organizational level.
F	The lowest maintenance level capable of complete repair of the support item is the direct support level.
L	Repair restricted to specialized repair activity. Not applicable.
Z	Nonreparable. No repair is authorized.
B	No repair is authorized. The item maybe reconditioned by adjusting, lubricating, etc, at the user level. No parts or special tools are procured for the maintenance of this item.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Recoverability code</i>	<i>Definition</i>
Z	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
O	Reparable item. When uneconomically repairable, condemn and dispose at organizational level.
F	Reparable item. When uneconomically repairable, condemn and dispose at the direct support level.
L	Reparable item. Repair, condemnation, and disposal not authorized below depot/specialized repair activity level.
A	Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material, or hazardous material). Refer to appropriate manuals/directives for specific instructions.

c. *National Stock Number.* Indicates the National stock number assigned to the item and which will be used for requisitioning purposes.

d. *Federal Supply Code for Manufacturer (FSCM)*. The FSCM is a five-digit numeric code listed in SB 708-42 which is used to identify the manufacturer, distributor, or Government agency, etc.

e. *Part Number*. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

**NOTE**

When a stock numbered item is requisitioned, the item received may have a different part number than the part being replaced.

f. *Description*. Indicates the Federal item name and, if required, a minimum description to identify the item.

g. *Unit of Measure (U/M)*. Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in., pr, etc). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

h. *Quantity Incorporated in Unit*. Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly. A "V" appearing in this column in lieu of a quantity indicates that no specific quantity is applicable (e.g., shims, spacers, etc).

**B-4. Special Information.**

a. Useable On Codes are shown in the description column. Uncoded items are applicable to all models.

b. Detailed manufacturing instructions for items source coded to be manufactured or fabricated are found in maintenance portions of this manual. Bulk materials required to manufacture-r items are listed in the Bulk Material Group of this appendix.

c. Detailed assembly instructions for items source coded to be assembled are found in the maintenance portions of this manual. Assembly components are listed immediately following the item to be assembled.

**B-5. How to Locate Repair Parts.**

a. When National Stock Number or Part Number is Unknown:

(1) *First*. Using the table of contents, determine the functional group with which the item belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.

(2) *Second*. Find the illustration covering the functional group to which the item belongs.

(3) *Third*. Identify the item on the illustration and note the illustration figure and item number of the item.

(4) *Fourth*. Using the repair parts listing, find the figure and item number noted on the illustration.

b. When National Stock Number or Part Number is Known:

(1) *First*. Using the index of National stock numbers and part numbers, find the pertinent NSN or part number. This index is in NIIN sequence followed by a list of part numbers in alphameric sequence, cross-referenced to the illustration figure number and item number.

(2) *Second*. After finding the figure and item number, locate the figure and item number in the repair parts list.

**B-6. ABBREVIATIONS.**

Abbreviation	Explanation
amp . . . . .	amperage
CBR . . . . .	chemical, biological, radio-logical (warfare)
cfm . . . . .	cubic feet per minute
cl . . . . .	class
cres . . . . .	corrosion-resistant steel
deg . . . . .	degree
dia . . . . .	diameter
elec . . . . .	electrical
ext . . . . .	external
fil . . . . .	fillister


<i>Abbreviation</i>	<i>Explanation</i>
ft .....	foot. feet
gr .....	grade
h .....	high
hex .....	hexagonal
hd .....	head
hz .....	hertz
id .....	inside diameter
in .....	inch
intl .....	internal
lg .....	length, long
med .....	medium
mfd .....	manufactured
min .....	minimum
mtg .....	mounting

<i>Abbreviation</i>	<i>Explanation</i>
nom .....	nominal
oa .....	overall
od .....	outside diameter
porm .....	plus or minus
p s i .....	pounds per square inch
pst .....	paste
RFI .....	radio frequency interference
Spst .....	single-pole single-throw
thd .....	thread
thk .....	thick
v .....	volt
w/ .....	with
w/o .....	without






Section II. REPAIR PARTS LIST

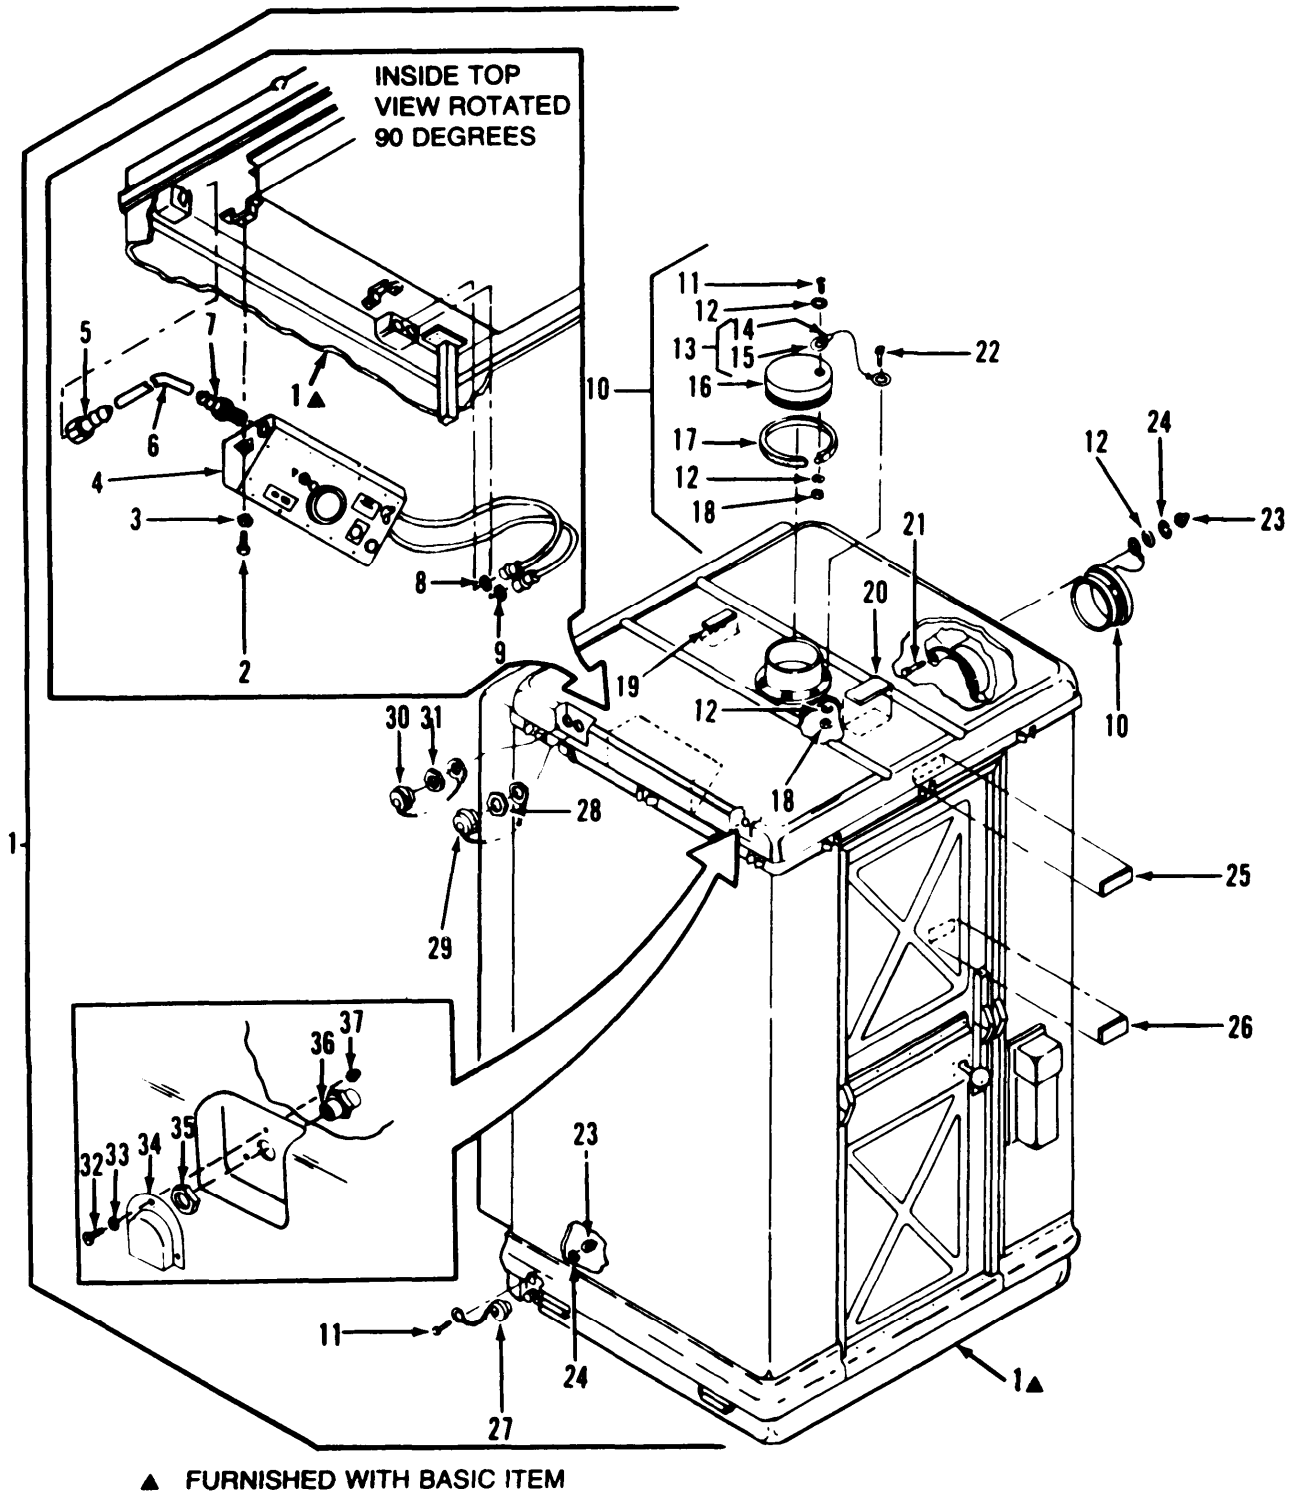

ARA81-0019

Figure B-1. M10 protective entrance


(1)	(2)	(3)	(4)	(5)	TM3-4240-284-30&P	(7)	(8)
ILLUSTRATION					(6)		QTY
(a)	(b)	NATIONAL		PART	DESCRIPTION		INC
FIG	ITEM	STOCK		NUMBER			IN
NO	NO	NUMBER	FSCM	NUMBER	USABLE ON CODE	U/M	UNIT
					GROUP 0100 M10 PROTECTIVE ENTRANCE		
					E5-19-6201-40		
B-1	1	PAOOO	4240-00-229-2610	81361	E5-19-6201-40	ENTRANCE, PROTECTIVE, PRESSURIZED: M10	EA 1
B-1	2	PAOZZ	5305-00-179-8946	96906	MS51849-66	SCREW, MACHINE HEX HD, NO. 10-32UNF-2A, 3/4 IN. LG	EA 3
B-1	3	PAOZZ	5310-00-045-3296	96906	MS35338-43	WASHER, LOCK SPRING, NO. 10 NOM SIZE	EA 3
B-1	4	PAOFF	4240-01-048-2803	81361	E5-19-6357	CONTROL MODULE, PROTECTIVE ENTRANCE	EA 1
B-1	5	PAOZZ	4730-01-050-7540	30327	KF03-04RV	ADAPTER, STRAIGHT	EA 1
B-1	6	MOOZZ		81361	E5-19-6357-111	HOSE, NONMETALLIC LOW PRESSURE: MFD FROM 4720-00-065-8682	EA 1
B-1	7	PAOZZ	4730-01-017-5119	30327	KF03-02PS	ADAPTER, STRAIGHT	EA 1
B-1	8	PAOZZ	5330-00-250-0236	96906	MS29513-024	PACKING, PREFORMED	EA 1
B-1	9	PAOZZ	5330-00-248-3849	96906	MS29513-019	PACKING, PREFORMED	EA 1
B-1	10	PAOOO	5340-01-048-6327	81361	C5-19-6145	CAP, PROTECTIVE, DUST AND MOISTURE SEAL	EA 2
B-1	11	PAOZZ	5305-00-115-9934	96906	MS51849-55	SCREW, MACHINE HEX HD, NO. 8-32UNC-2A, 5/8 IN LG	EA 3
B-1	12	PAOZZ	5310-00-765-3197	96906	MS27183-41	WASHER, FLAT .188 IN OD, .049 IN THK	EA 5
B-1	13	AOOOO		99862	CL-2-FANDCL-2-C-8.0	CABLE	EA 2
B-1	14	PAOZZ	4030-00-878-8693	99862	CL2F	FERRULE, WIRE ROPE	EA 4
B-1	15	MOOZZ		99862	CL-2-C-8.0	CABLE, NYLON 8IN. LG MFD FROM 4010-00-069-5180	EA 2
B-1	16	XAOZZ		81361	C5-19-6309	CAP, RUBBER	EA 2
B-1	17	PAOZZ	4730-00-908-6294	96906	MS35842-16	CLAMP HOSE, 4-1/8 TO 7 IN DIA RANGE	EA 2
B-1	18	PAOZZ	5310-00-811-3494	96906	MS21044N08	NUT, SELF-LOCKING, HEXAGON: 8-32 UNJC-3B	EA 3
B-1	19	PAOZZ	9905-01-068-2368	81361	5-19-6657	PLATE, INSTRUCTION NO STEP	EA 1
B-1	20	PAOZZ	9905-01-049-1385	81361	C5-19-6175	PLATE, INSTRUCTION	EA 1
B-1	21	PAOZZ	5305-00-211-8193	96906	MS51849-54	SCREW, MACHINE HEX HD, NO. 8-32UNC-2A, 1/2 IN LG	EA 1
B-1	22	PAOZZ	5305-00-157-5621	96906	MS51849-56	SCREW, MACHINE HEX HD, NO.8-32UNC-2A, 3/4 IN. LG	EA 1
B-1	23	PAOZZ	5310-00-928-9821	96906	MS24679-2	NUT, PLAIN, CAP NO. 8-32UNC-2B	EA 2
B-1	24	PAOZZ	5310-00-045-3299	96906	MS35338-42	WASHER, LOCK SPRING, NO. 8 NOM SIZE	EA 2
B-1	25	PAOZZ	9905-01-062-0672	81361	C5-19-6316-12	PLATE, IDENTIFICATION: ENTRANCE, PROTECTIVE, PRESSURIZED M10	EA 1
B-1	26	PAOZZ	9905-01-048-2790	81361	B5-19-6238	PLATE, INSTRUCTION CAUTION: DO NOT ENTER WHEN PROTECTIVE ENTRANCE IS OCCUPIED	EA 1
B-1	27	PAOZZ	5410-00-981-8701	01943	8173	CAP, FILLER OPENING W/CHAIN	EA 1
B-1	28	PAOZZ	5310-01-054-4643	96906	MS3186-34	NUT, PLAIN, HEXAGON 11/16-24UNEF-2B	EA 1
B-1	29	PAOZZ	5935-00-912-9599	96906	MS3181-10N	COVER, ELECTRICAL CONNECTOR	EA 1
B-1	30	PAOZZ	5935-00-990-5580	96906	MS3181-14N	COVER, ELECTRICAL CONNECTOR	EA 1
B-1	31	PAOZZ	5310-00-435-8983	96906	MS3186-43	NUT, PLAIN, HEXAGON 1-20UNEF-2B	EA 1
B-1	32	PAOZZ	5305-00-115-9406	96906	MS51849-53	SCREW, MACHINE HEX HD, NO.6-32UNC-2A, .38 IN LG	EA 3
B-1	33	PAOZZ	5310-00-045-3299	96906	MS35338-42	WASHER, LOCK SPRING NO.8 NOM SIZE	EA 3
B-1	34	PAOZZ	4240-01-049-0804	81361	C5-19-6236	COVER, PROTECTIVE	EA 1
B-1	35	PAOZZ	5310-00-897-6081	96906	MS35691-32	NUT, PLAIN, HEXAGON JAM 7/16-20 UNF-2B	EA 1
B-1	36	PAOZZ	4730-01-067-9232	81361	C5-19-6654	ADAPTER, PIPE TO TUBE 1/4NPS, 7/16-20UNF-2A	EA 1
B-1	37	PAOZZ	5310-00-928-9821	96906	MS24679-2	NUT, PLAIN, CAP NO.8-32UNC-2B	EA 3

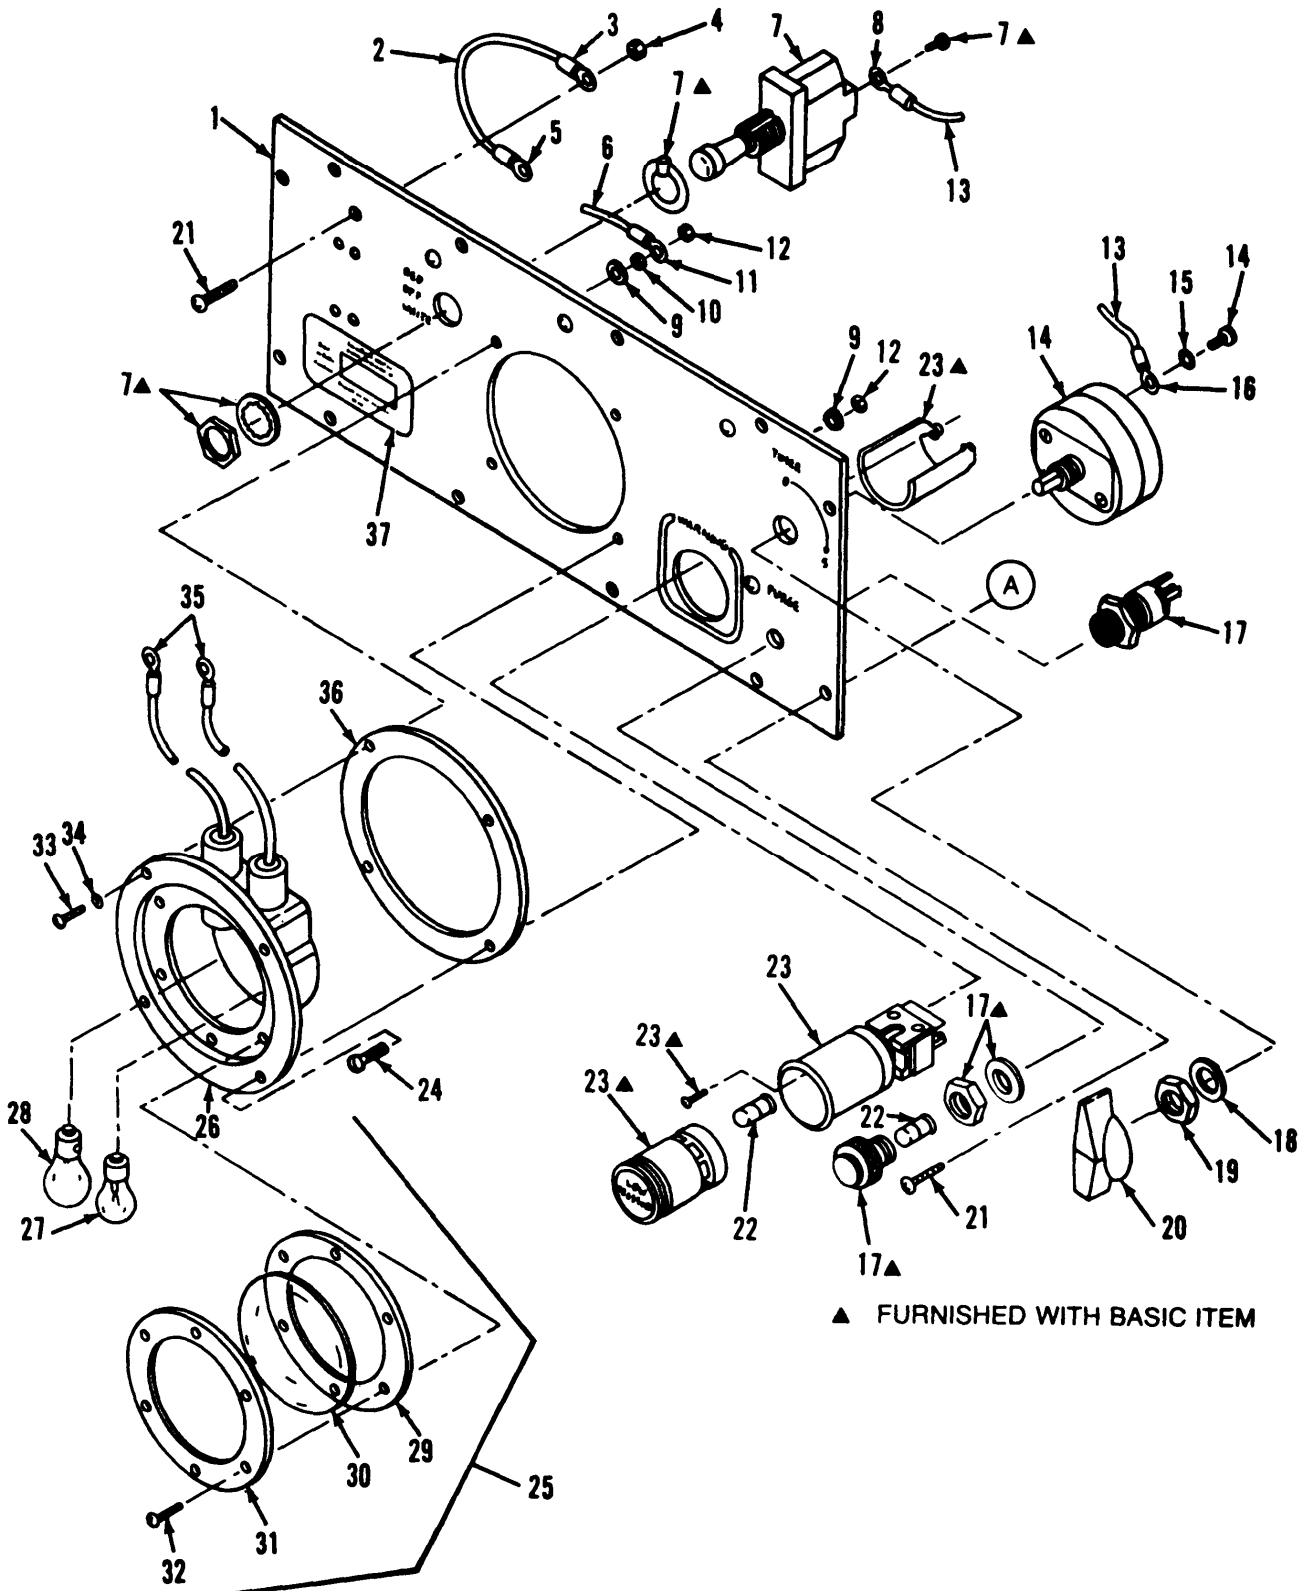

ARA80-2413

Figure B-2. Protective entrance control module (sheet 1 of 2)



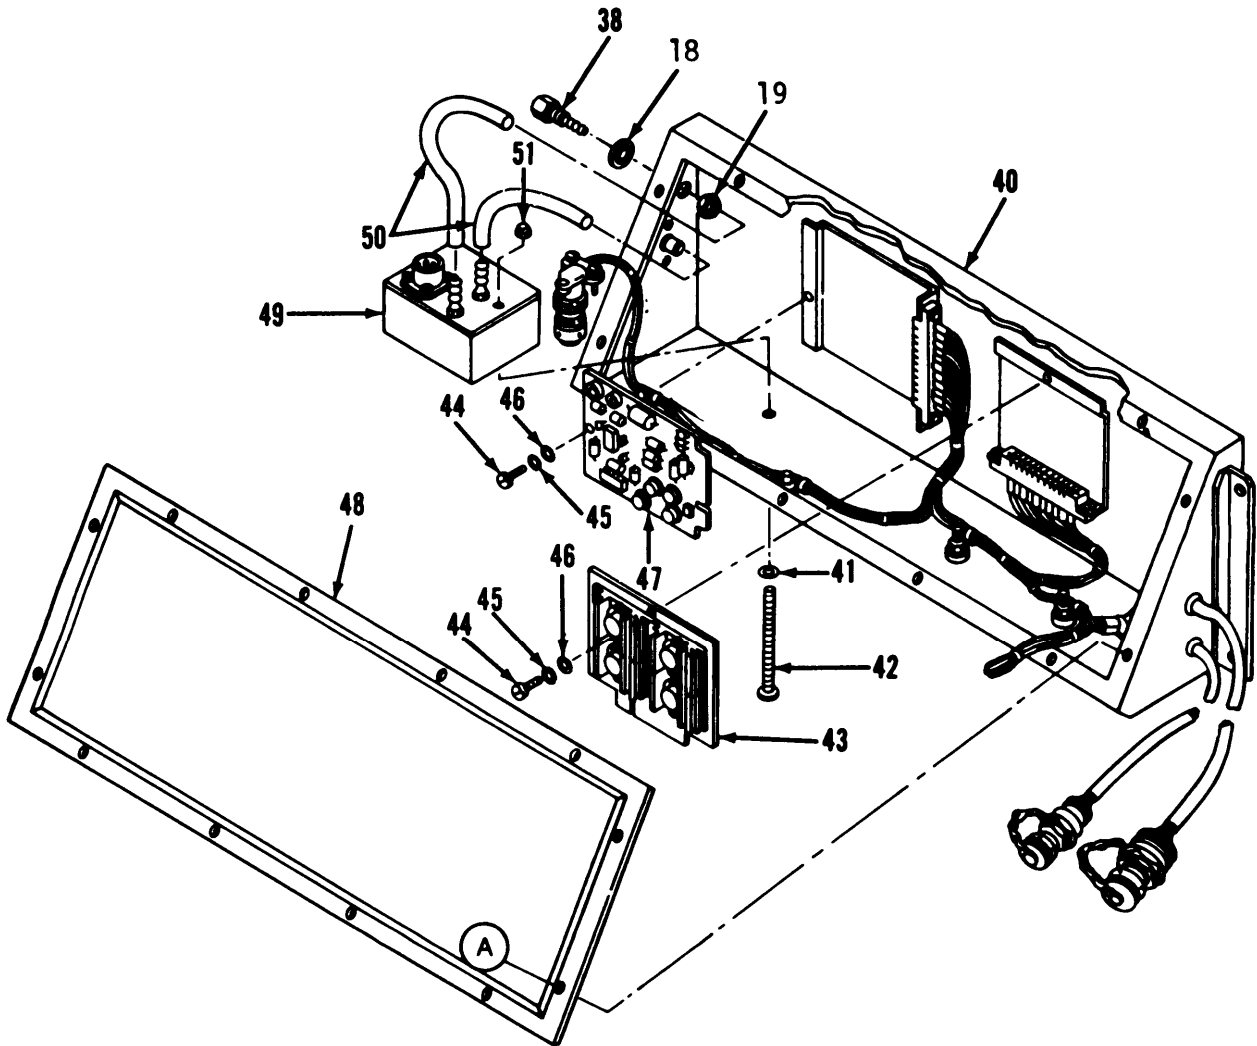

ARA81-0020


Figure B-2. Protective entrance control module (sheet 2 of 2)

(1)	(2)	(3)	(4)	(5)	TM3-4240-284-30&P (6)	(7)	(8)
ILLUSTRATION		NATIONAL		PART	DESCRIPTION		QTY
(a)	(b)	STOCK		NUMBER			INC
FIG	ITEM	SMR		FSCM	USABLE ON CODE		IN
NO	NO	CODE		NUMBER		U/M	UNIT
					GROUP 0110 PROTECTIVE ENTRANCE		
					CONTROL MODULE		
					E5-19-6357		
B-2	1	XAFZZ		81361	E5-19-6360		EA 1
B-2	2	MFFZZ		81349	M5086/1-20-9		FT V
B-2	3	PAFZZ	5940-00-143-4771	96906	MS25036-103		EA 1
B-2	4	PAFZZ	5310-00-877-5797	96906	MS21044N3		EA 1
B-2	5	PAFZZ	5940-00-825-3699	96906	MS17143-10		EA 9
B-2	6	MFFZZ		81349	M5086/1-16-9		FT V
B-2	7	PAFZZ	5930-00-057-5848	96906	MS24658-21M		EA 1
B-2	8	PAFZZ	5940-00-204-8966	96906	MS25036-102		EA 1
B-2	9	PAFZZ	5310-00-575-5292	83330	2660		EA 4
B-2	10	PAFZZ	5310-00-934-9748	96906	MS35649-244		EA 1
B-2	11	PAFZZ	5940-00-615-6073	96906	MS25036-152		EA 1
B-2	12	PAFZZ	5310-00-088-0551	96906	MS21044N04		EA 4
B-2	13	MFFZZ		81349	M5086/1-22-9		FT V
B-2	14	PAFZZ	6645-01-113-2525	79919	71015		EA 1
B-2	15	PAFZZ	5310-00-559-0070	96906	MS35333-38		EA 2
B-2	16	PAFZZ	5940-00-557-1629	96906	MS25036-149		EA 4
B-2	17	PAFZZ	6210-00-635-4700	76854	VM911M8		EA 1
B-2	18	PAFZZ	5330-00-954-6684	80205	NAS1598-6Y		EA 2
B-2	19	PAFZZ	5310-00-199-1056	96906	MS35650-3385		EA 2
B-2	20	PAOZZ	5355-00-821-5225	79919	K35B1		EA 1
B-2	21	PAFZZ	5305-00-148-1286	96906	MS3213-36		EA 13
B-2	22	PAOZZ	6240-00-763-7744	81348	W-L-00111/7		EA 3
B-2	23	PAFZZ	5930-01-052-7684	81361	E5-19-6376-155		EA 1
B-2	24	PAFZZ	5305-01-057-7206	96906	MS3213-5		EA 3
B-2	25	PAFFF	6220-00-891-1491	96906	MS25358-7		EA 1
B-2	26	XAFZZ		96906	MS25358-3		EA 1
B-2	27	PAOZZ	6240-00-155-7784	96906	MS35478-307		EA 1
B-2	28	PAOZZ	6240-00-155-7932	96906	MS25235R311		EA
B-2	29	PAOZZ	5330-00-143-8571	96906	MS25358-6		EA 1
B-2	30	PAOZZ	6220-00-283-9732	96906	MS25358-4		EA 1
B-2	31	XAOZZ		96906	MS25358-5		EA 1
B-2	32	PAOZZ	5305-00-889-2999	96906	MS35206-217		EA 6

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	TMS-4240-284-30&P (6) DESCRIPTION	(7)	(8) QTY INC IN UNIT
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	USABLE ON CODE	U/M	
B-2	33	PAFZZ	5305-00-984-4976	96906	MS35206-219	SCREW, MACHINE PAN HD, NO. 4-40UNC-2A, 3/4 IN. LG	EA	1
B-2	34	PAFZZ	5310-00-058-3599	96906	MS35335-97	WASHER, LOCK EXT TOOTH, NO 4 NOM SIZE	EA	1
B-2	35	PAFZZ	5940-00-113-8179	96906	MS25036-107	TERMINAL, LUG CRIMP STYLE, 16-14 AND WIRE SIZE, NO. 6 STUD SIZE	EA	2
B-2	36	MFFZZ		81361	C5-19-5676	GASKET MFD FORM 9320007858171	EA	1
B-2	37	PAOZZ	9905-01-053-3006	81361	C5-19-6316-4	PLATE, IDENTIFICATION: CONTROL MODULE, PROTECTIVE ENTRANCE	EA	1
B-2	38	PAFZZ	4730-01-053-5923	81341	B5-19-6362	ADAPTER, STRAIGHT, HOSE	EA	1
B-2	39	PAFZZ	5330-00-954-6684	80205	NAS1598-6Y	PACKING WITH RETAINER: 3/8 IN. BOLT SIZE	EA	1
B-2	40	XAFZZ		81361	E3-19-6358	HOUSING	EA	1
B-2	41	PAFZZ	5330-00-928-0290	80205	NAS1598-06Y	PACKING WITH RETAINER: NO. 6 SCREW SIZE	EA	2
B-2	42	PAFZZ	5305-00-920-0327	12909	500881	SCREW, MACHINE PAN HD, SLOTTED, CRES, NO. 6-32UNC-2A, 2-1/2 IN. LG	EA	2
B-2	43	PAFZZ	5999-01-050-4635	81361	C5-19-6197	PRINTED CIRCUIT BOARD: POWER	EA	1
B-2	44	PAFZZ	5305-00-227-1543	96906	MS51849-33	SCREW, MACHINE HEX HD, NO. 6-32UNC-2A, .38 IN. LG	EA	2
B-2	45	PAFZZ	5310-00-045-4007	96906	MS35338-41	WASHER, LOCK SPRING, NO. 6 NOM SIZE	EA	2
B-2	46	PAFZZ	5310-00-983-8483	96906	MS27183-5	WASHER, FLAT .156 IN. ID, .312 IN. OD, 0.35 IN. THK	EA	2
B-2	47	PAFZZ	5999-01-050-4636	81361	D5-19-6193-20	PRINTED CIRCUIT BOARD: SWITCHING	EA	1
B-2	48	PAFZZ	5330-01-085-3267	81361	5-19-6361	GASKET CONTROL MODULE	EA	1
B-2	49	PAFZZ	6685-01-056-5283	33107	P92-1020	TRANSMITTED, PRESSURE	EA	1
B-2	50	MFFZZ		81361	E5-19-6357-47	TUBING, NONMETALLIC: 3/16 IN. NOM ID, GREEN, MFD FROM 9330010731011	IN	13
B-2	51	PAFZZ	5310-00-081-8087	96906	MS21044N06	NUT, SELF-LOCKING, HEXAGON: NO. 6-32UNJC-38	EA	2






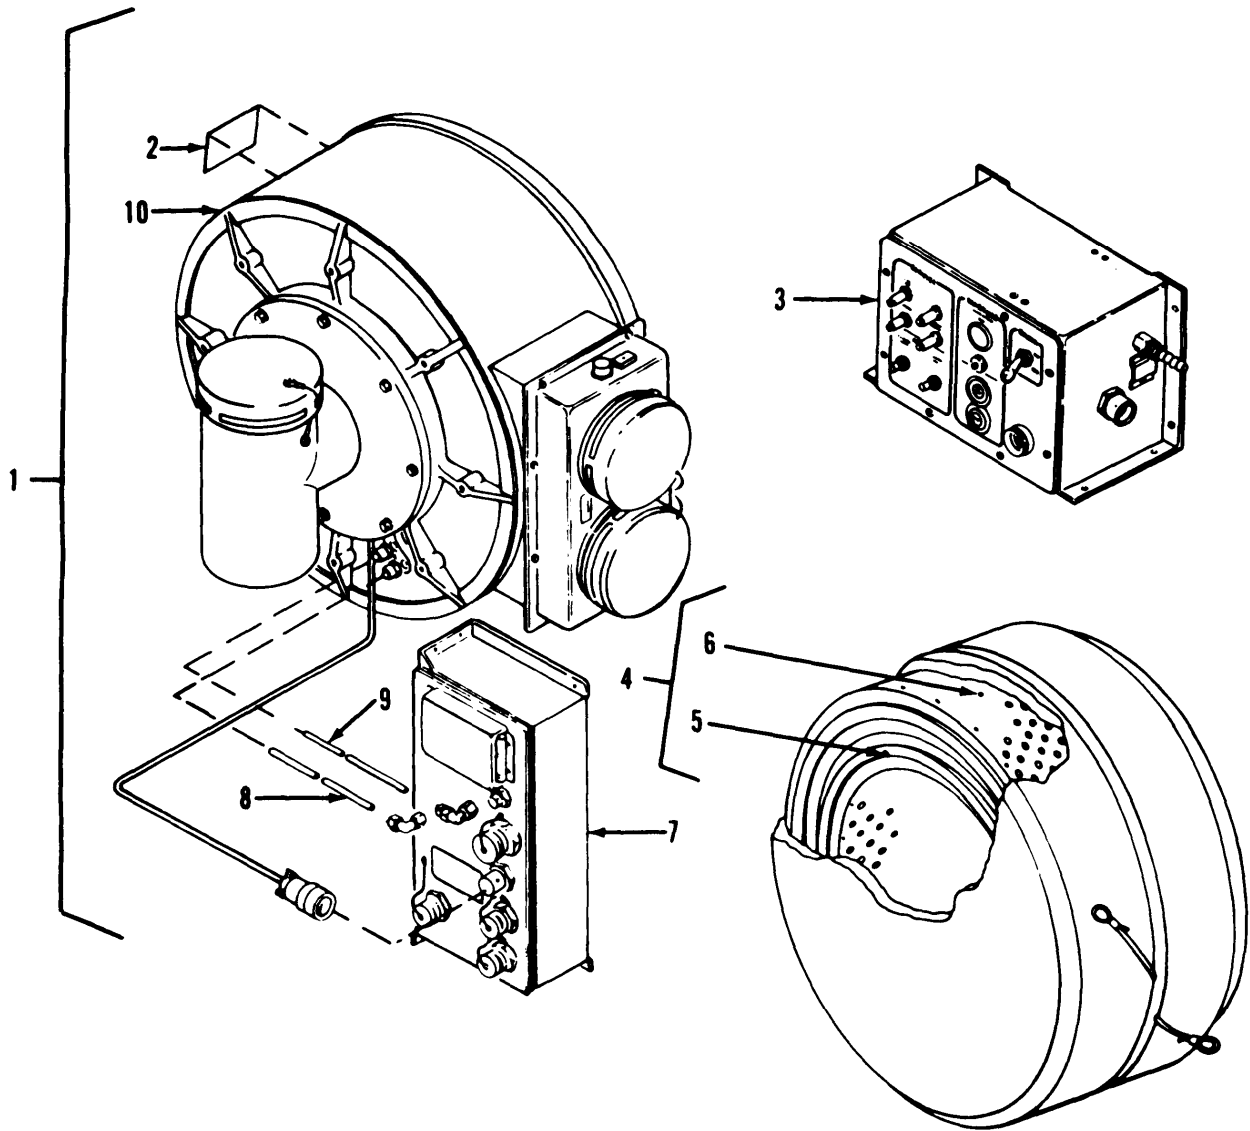

ARA81-0021

Figure B-3. M56 gas-particulate filter unit (sheet 1 of 2)



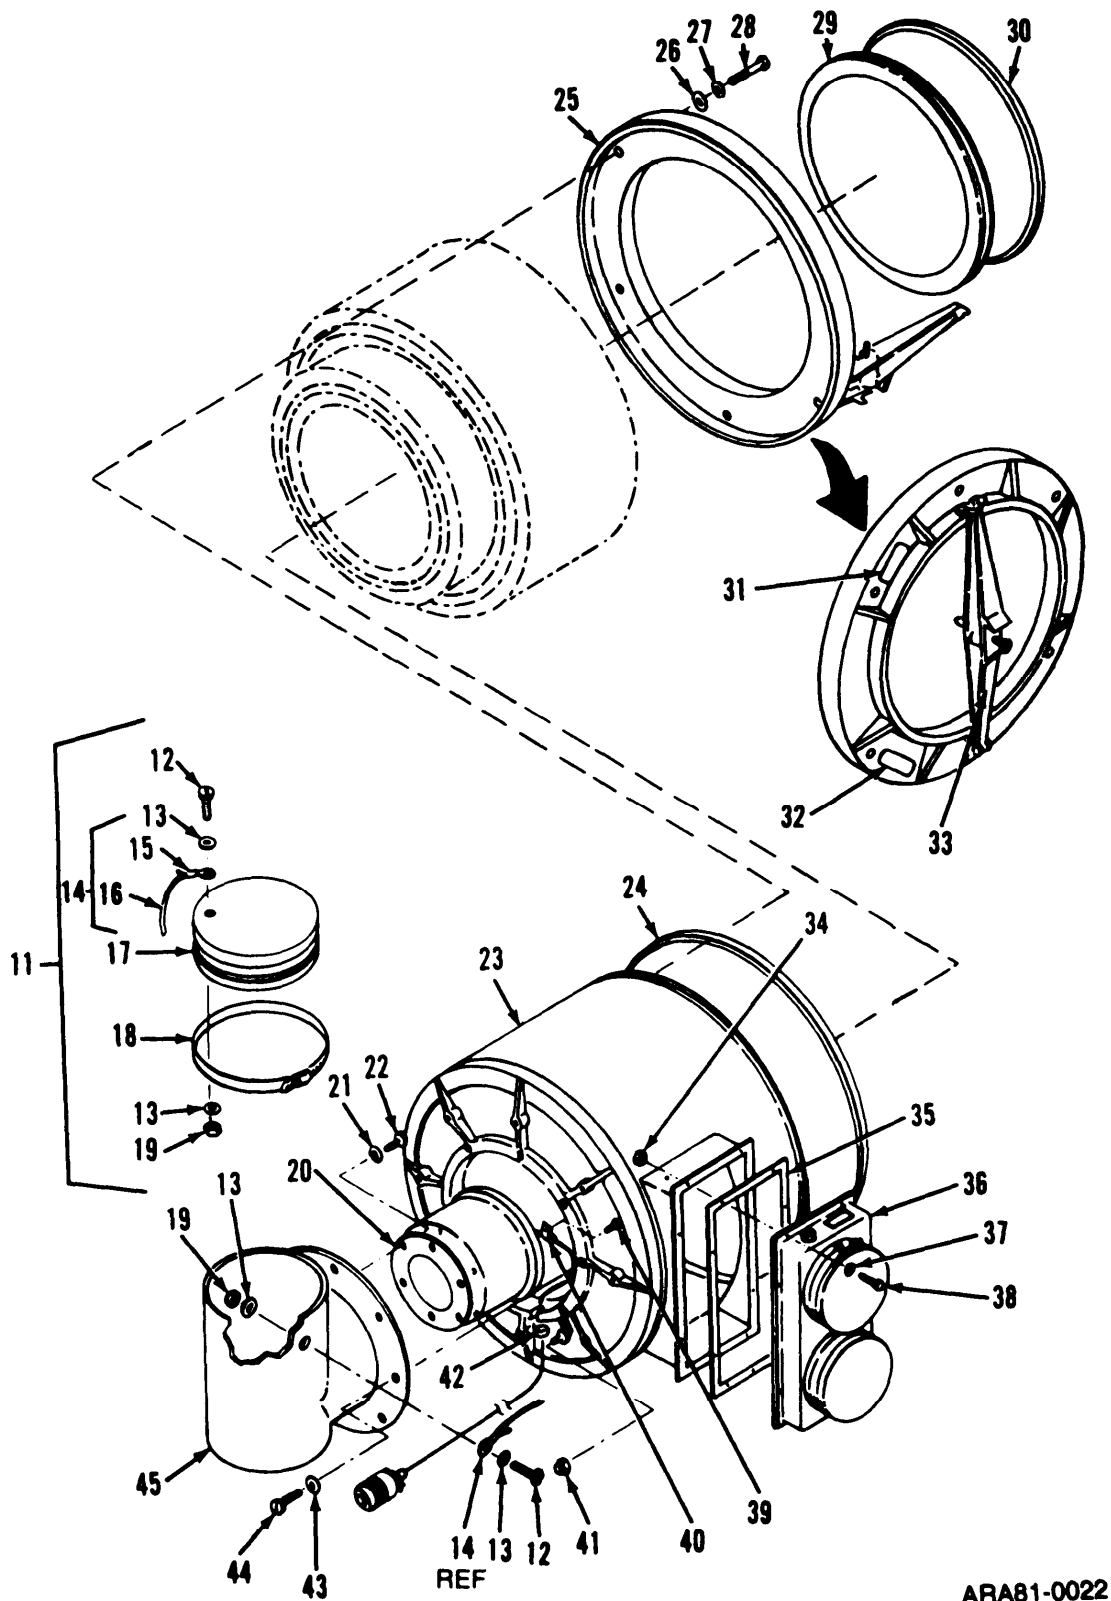


ARA81-0022

Figure B-3. M56 gas-particulate filter unit (sheet 2 of 2)

(1)	(2)	(3)	(4)	(5)	TM3-4240-284-30&P (6)	(7)	(8)
ILLUSTRATION					DESCRIPTION		QTY
(a)	(b)	NATIONAL		PART			INC
FIG	ITEM	STOCK	FSCM	NUMBER	USABLE ON CODE	U/M	IN
NO	NO	NUMBER					UNIT
					GROUP 0200 M56 GAS PARTICULATE FILTER UNIT		
					E5-19-6402		
B-3	1	PAOFA	4240-00-237-0227	81361	E5-19-6402		EA 1
B-3	2	PAOZZ	9905-01-071-5711	81361	5-19-6316-9		EA 1
B-3	3	PAOFF	4240-01-057-3378	81361	E5-19-6376		EA 1
B-3	4	PAOZA	4240-01-067-5605	81361	5-19-6718		SE 1
B-3	5	PAOZA	4240-01-066-3266	81361	D5-19-6262		EA 1
B-3	6	XAOZA		81361	D5-19-6368		EA 1
B-3	7	PAOFF	4240-01-068-8645	81361	E5-19-6387		EA 1
B-3	8	MOOZZ		81361	E5-19-6402-8		EA 1
B-3	9	MOOZZ		81361	E5-19-6402-7		EA 1
B-3	10	XBOFF	4240-01-054-7020	81361	E5-19-6314-20		EA 1
B-3	11	PAOOO	5340-01-048-6327	81361	C5-19-6145		EA 1
B-3	12	PAOZZ	5305-00-115-9934	96906	MS51849-55		EA 2
B-3	13	PAOZZ	5310-00-765-3197	96906	MS27183-41		EA 4
B-3	14	AOOOO		99862	CL-2-FANDCL-2-C-8.0		EA 1
B-3	15	PAOZZ	4030-00-878-8693	99862	CL2F		EA 2
B-3	16	MOOZZ		99862	CL-2-C-8.0		EA 1
B-3	17	XAOZZ		81361	C5-19-6309		EA 1
B-3	18	PAOZZ	4730-00-908-6294	96906	MS35842-16		EA 1
B-3	19	PAOZZ	5310-00-811-3494	96906	MS21044N08		EA 2
B-3	20	PAOFF	4140-01-059-2095	81361	E5-19-6240		EA 1
B-3	21	PAOZZ	5310-00-809-4058	96906	MS27183-10		EA 6
B-3	22	PAOZZ	5305-00-068-0513	96906	MS90727-6		EA 6
B-3	23	XBOZZ	4240-01-107-2433	81361	E5-19-6120		EA 1
B-3	24	PAOZZ	5330-01-069-9824	81361	C5-19-5687-2		EA 1
B-3	25	XBOZZ		81361	E5-19-6128		EA 1
B-3	26	PAOZZ	5310-00-080-6004	96906	MS27183-14		EA 6
B-3	27	PAOZZ	5310-00-187-2400	88044	AN960PD616		EA 6
B-3	28	PAOZZ	5305-00-269-3240	96906	MS90727-64		EA 6
B-3	29	XBOZZ		81361	D5-19-6260		EA 1
B-3	30	PAOZZ	5330-01-068-0515	81361	C5-19-5687-1		EA 1
B-3	31	PAOZZ	9905-01-067-8634	81361	B5-19-6134		EA 1
B-3	32	PAOZZ	9905-01-066-3084	81361	5-19-6135		EA 1
B-3	33	PAOZZ	9905-01-050-7557	81361	B5-19-6133		EA 1
B-3	34	PAOZZ	5310-00-877-5797	96906	MS21044N3		EA 8

(1)	(2)	(3)	(4)	(5)	TM3-4240-284-30&P (6)	(7)	(8)
ILLUSTRATION					DESCRIPTION		QTY
(a)	(b)						INC
FIG	ITEM	SMR	NATIONAL	PART			IN
NO	NO	CODE	STOCK	NUMBER	USABLE ON CODE	U/M	UNIT
			NUMBER	FSCM			
B-3	35	PAOZZ	5330-01-088-4442	81361	5-19-6348	GASKET AIRFLOW VALVE	EA 1
B-3	36	PAOFF	4240-01-055-1493	81361	E5-19-6136	VALVE, AIRFLOW	EA 1
B-3	37	PAOZZ	5310-00-014-5850	96906	MS27183-42	WASHER, FLAT .219 IN ID, .500 IN OD, .049 IN THK	EA 8
B-3	38	PAOZZ	5305-00-824-7363	80205	NAS1096-3-12	SCREW, MACHINE HE HD, NO. 10-32NF-3A, 3/4 IN LG	EA 8
B-3	39	PAOZZ	5305-00-180-4966	96906	MS51849-64	SCREW, MACHINE HEX HD, NO. 10-32UNF-2A, 1/2 IN LG	EA 1
B-3	40	PAOZZ	5340-00-119-4705	96906	MS9352-05	CLAMP, LOOP CUSHIONED, 3/8 IN NOM TUBE OD	EA 1
B-3	41	PAOZZ	4730-00-817-1891	30327	261P1-4	NUT, TUBE COUPLING 1/4 IN TUBE OD, 3/8-24 THD SIZE, W/SLEEVE	EA 2
B-3	42	PAOZZ	5365-01-057-7379	81361	B5-19-6347	BUSHING, RUBBER	EA 1
B-3	43	PAOZZ	5310-00-081-4219	96906	MS27183-12	WASHER, FLAT .344 IN ID, .688 IN OD, .065 IN THK	EA 8
B-3	44	PAOZZ	5305-00-051-4075	96906	MS90727-33	SCREW, CAP, HEXAGON HEAD 5/16-24UNF-2A, 7/8 IN LG	EA 8
B-3	45	PAOZZ	4520-01-057-7010	81361	D5-19-6401	TEE, AIR CONDITIONIN INLET	EA 1



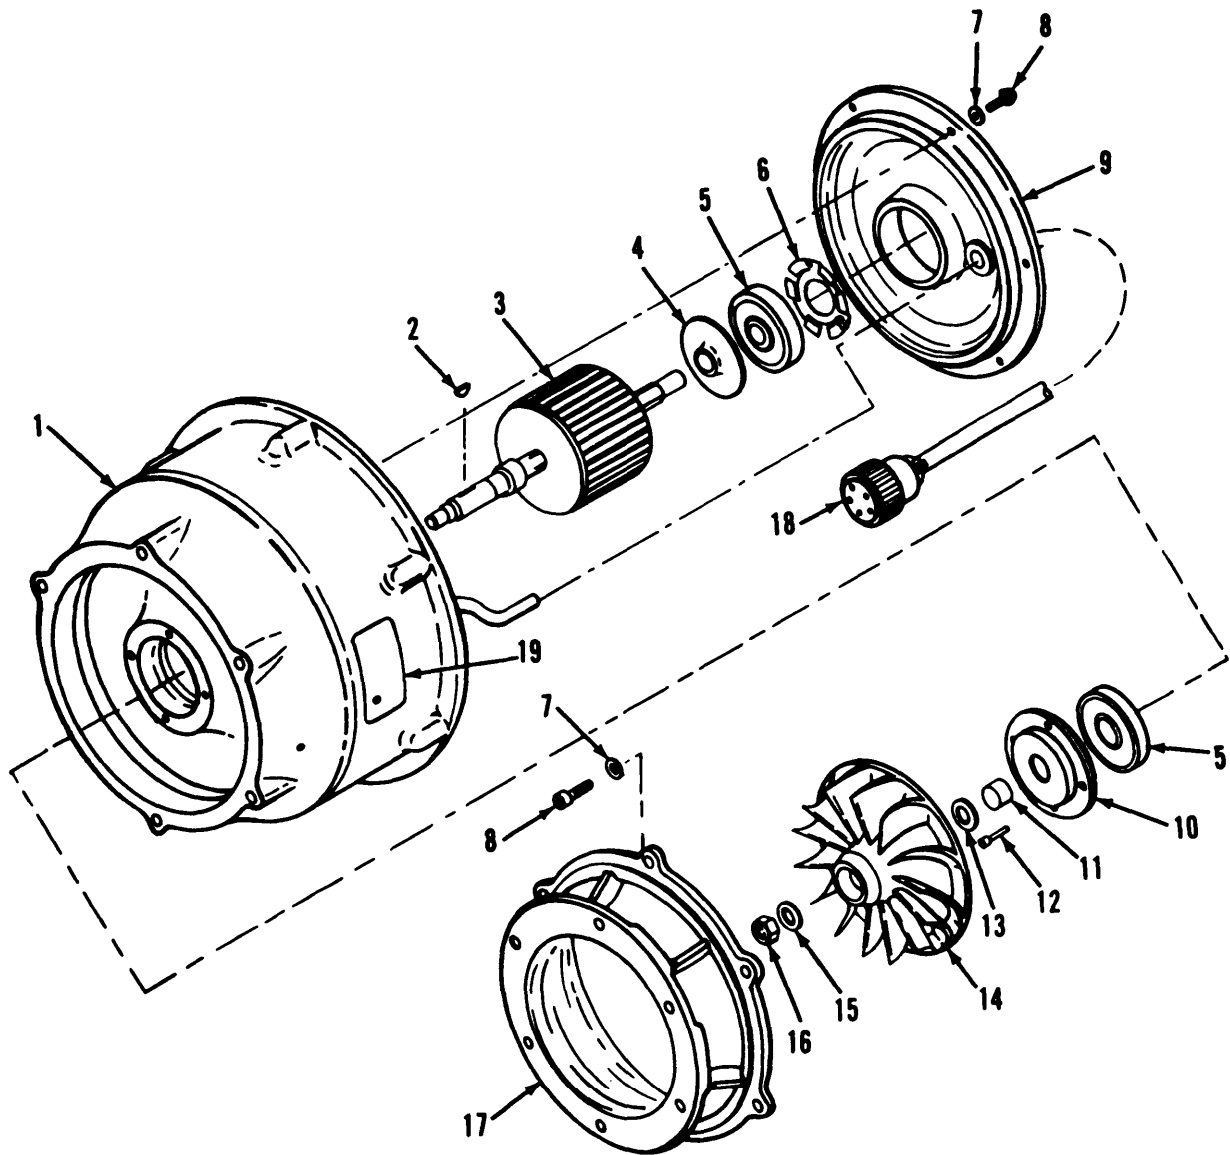


ARA81-0023

Figure B-4. Main fan



(1)	(2)	(3)	(4)	(5)	TM3-4240-284-30&P (6)	(7)	(8)	
ILLUSTRATION					DESCRIPTION		QTY	
(a)	(b)	NATIONAL		PART			INC	
FIG	ITEM	STOCK	FSCM	NUMBER	USABLE ON CODE		IN	
NO	NO	CODE				U/M	UNIT	
					GROUP 0210 MAIN FAN			
					E5-19-6240			
B-4	1	XAFZZ	81361	E5-19-6241	HOUSING, FAN	EA	1	
B-4	2	PAFZZ	5315-00-616-5526	96906	MS35756-8	KEY, WOODRUFF	EA	1
B-4	3	XAFZZ	81361	C5-19-6247	ROTOR	EA	1	
B-4	4	PAFZZ	4320-01-052-7999	81361	B5-19-6081	DEFLECTOR, DIRT AND SHAFT	EA	1
B-4	5	PAFZZ	3110-00-144-8882	38443	201SFP	BEARING, BALI, ANNULAR	EA	2
B-4	6	PAFZZ	5310-00-227-4882	92830	F1240-008	WASHER, SPRING LOADING	EA	1
B-4	7	PAFZZ	5310-00-167-0835	88044	AN960-416L	WASHER, FLAT .265 IN. ID, .500 IN. OD, 0.32 IN. THK	EA	12
B-4	8	PAFZZ	5305-00-477-2713	80205	NAS1351-4-12	SCREW, CAP, SOCKET HEA: 1/4-28UNF-3A, 3/4 IN. LG	EA	12
B-4	9	XAFZZ	81361	D5-19-6242	COVER, MOTOR	EA	1	
B-4	10	PAFZZ	3110-01-057-4653	81361	C5-19-6255	PLATE, RETAINING, BEARING	EA	1
B-4	11	PAFZZ	3120-01-053-5848	81361	B5-19-6254	BUSHING, SLEEVE IMPELLER	EA	1
B-4	12	PAFZZ	5305-00-978-9369	96906	MS16997-31	SCREW, CAP, SOCKET HEAD: NO. 8-32UNC-3A, 3/8 IN. LG	EA	4
B-4	13	PAFZZ	5365-01-053-2593	81361	B5-19-6030-1	SHIM LAMINATED	EA	1
B-4	14	XAFZZ	81361	D5-19-6252	IMPELLER, FAN	EA	1	
B-4	15	PAFZZ	5310-00-167-0821	88044	AN960-616	WASHER, FLAT .390 IN. ID, .625 IN. OD, .063 IN. THK	EA	1
B-4	16	PAFZZ	5310-00-810-1786	96906	MS21042-6	NUT, SELF-LOCKING, EXTENDED WASHER, HEXAOGN: 3/8-24UNJF-3B	EA	1
B-4	17	XAFZZ	81361	E5-19-6251	COVER, IMPELLER	EA	1	
B-4	18	XAFZZ	96906	MS3116P16-8P	CONNECTOR, PLUG, ELECTRIC	EA	1	
B-4	19	PAFZZ	9905-01-054-4263	81361	C5-19-6258-1	PLATE, IDENTIFICATION: MAIN FA, 200 CFM	EA	1

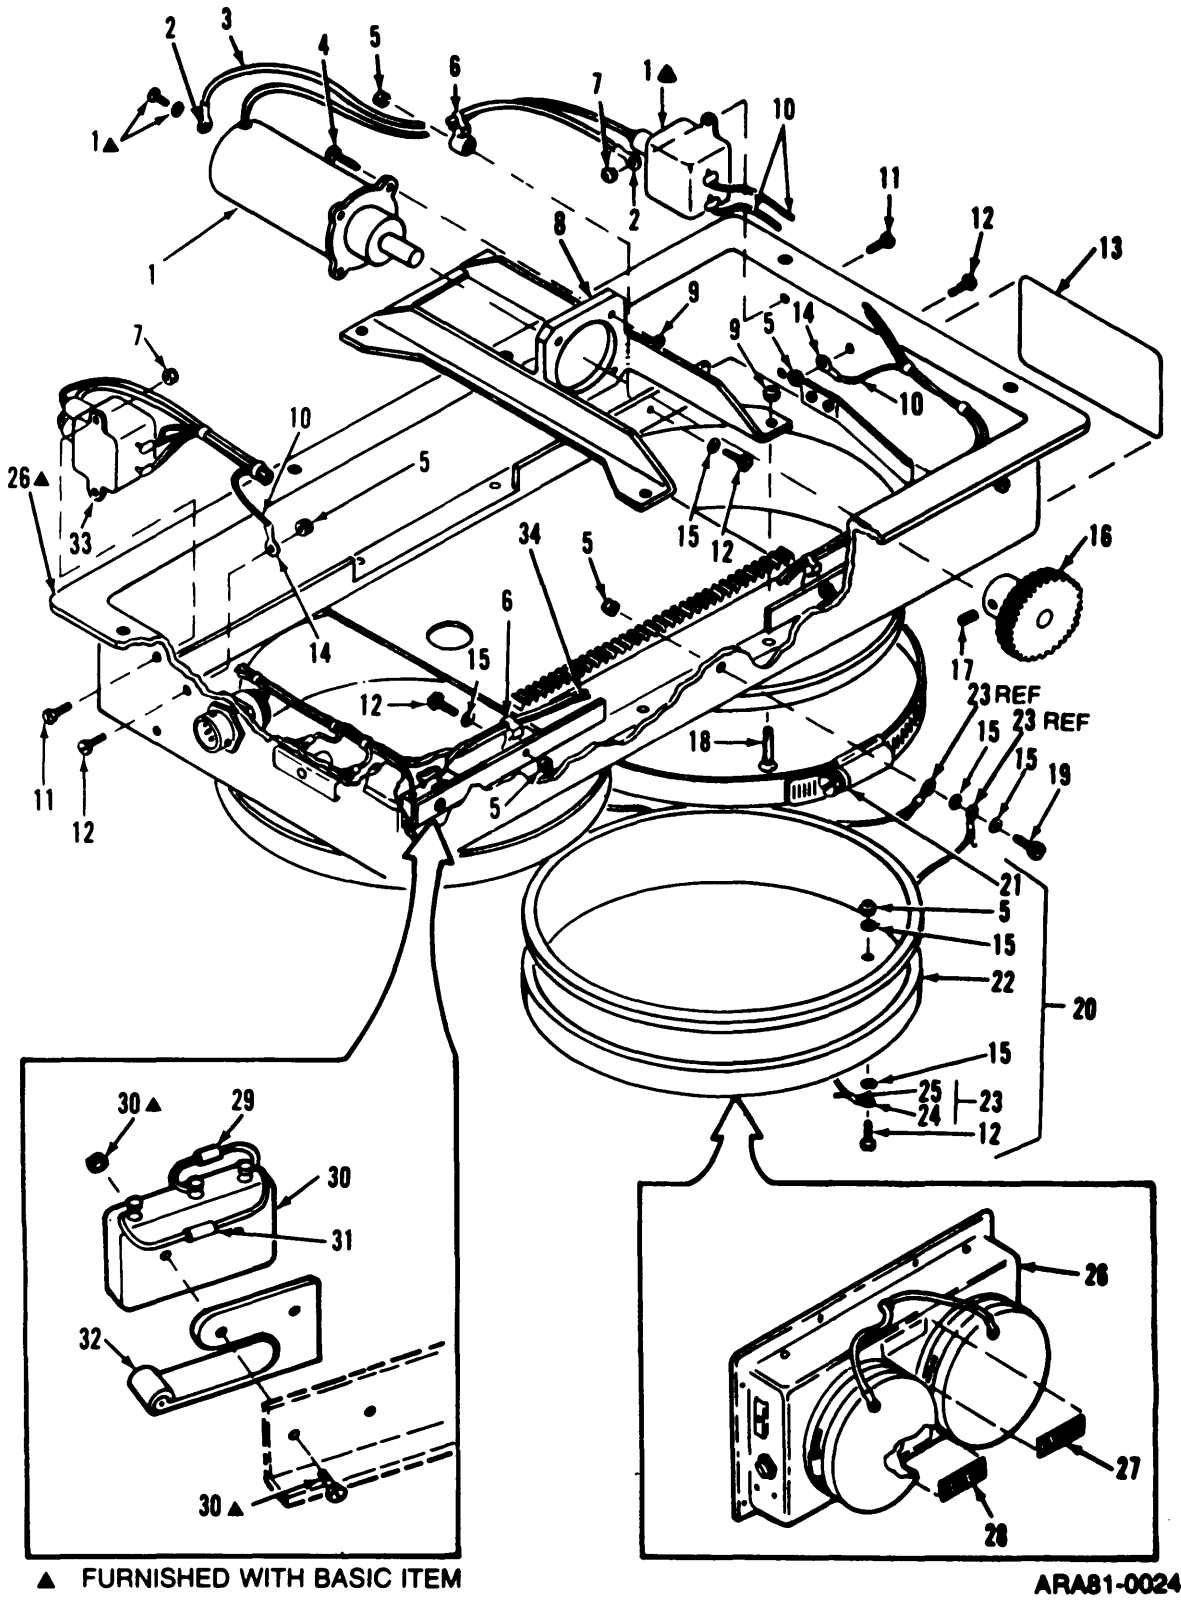

▲ FURNISHED WITH BASIC ITEM

ARA81-0024

Figure B-5. Airflow valve

(1)	(2)	(3)	(4)	(5)	TM3-4240-284-30&P (6)	(7)	(8)
ILLUSTRATION					DESCRIPTION		QTY
(a)	(b)	NATIONAL		PART			INC
FIG	ITEM	STOCK		NUMBER			IN
NO	NO	NUMBER	FSCM	NUMBER	USABLE ON CODE	U/M	UNIT
					GROUP 0220 AIRFLOW VALVE		
					E9-19-6136		
B-5	1	PAFZZ	6105-01-056-9045	25140	5A3128		EA 1
B-5	2	PAFZZ	5940-00-113-9828	96906	MS25036-148		EA 2
B-5	3	MFFZZ		81349	M5086/1-20-9		FT V
B-5	4	PAFZZ	5305-00-582-5808	96906	MS35265-31		EA 4
B-5	5	PAOZZ	5310-00-811-3494	96906	MS21044N08		EA 3
B-5	6	PAFZZ	5975-01-053-6294	09922	TF-5H		EA 3
B-5	7	PAFZZ	5310-00-088-0551	96906	MS21044N04		EA 8
B-5	8	XAFZZ		81361	D5-19-6138		EA 1
B-5	9	PAFZZ	5310-00-081-8087	96906	MS21044N06		EA 12
B-5	10	MFFZZ		81349	M5086/1-22-9		FT V
B-5	11	PAFZZ	5305-00-242-1264	96906	MS51849-13		EA 8
B-5	12	PAOZZ	5305-00-115-9934	96906	MS51849-55		EA 2
B-5	13	PAOZZ	9905-01-065-9382	81361	C5-19-6149		EA 1
B-5	14	PAFZZ	5940-00-557-1629	96906	MS25036-149		EA 6
B-5	15	PAOZZ	5310-00-765-3197	96906	MS27183-41		EA 6
B-5	16	XAFZZ		81361	C5-19-6144		EA 1
B-5	17	PAFZZ	5305-00-058-9362	96906	MS51977-19		EA 1
B-5	18	PAFZZ	5305-00-984-6221	96906	MS35206-234		EA 8
B-5	19	PAOZZ	5305-00-157-5621	96906	MS51849-56		EA 1
B-5	20	PAOOO	5340-01-048-6327	81361	C5-19-6145		EA 2
B-5	21	PAOZZ	4730-00-908-6294	96906	MS35842-16		EA 2
B-5	22	XAOZZ		81361	C5-19-6309		EA 2
B-5	23	AOOOO		99862	CL-2-FANDCL-2-C-8.0		EA 2
B-5	24	MOOZZ		99862	CL-2-C-8.0		EA 2
B-5	25	PAOZZ	4030-00-878-8693	96906	CL2F		EA 4
B-5	26	XAFZZ		81361	E9-19-6137		EA 1
B-5	27	PAOZZ	9905-01-051-0186	81361	B5-19-6147		EA 1
B-5	28	PAOZZ	9905-01-050-7556	81361	B5-19-6148		EA 1
B-5	29	PAFZZ	5961-00-924-6981	81349	JAN1N4245		EA 2
B-5	30	PAFZZ	5930-00-913-7960	81349	MS25085-2		EA 2
B-5	31	PAFZZ	5910-00-114-0510	81349	M39014/01-1581		EA 2
B-5	32	PAFZZ	5930-00-296-9610	94135	1227903-178		EA 2
B-5	33	PAFZZ	5915-01-075-7240	81361	C5-19-6152		EA 1
B-5	34	MFFZZ		81349	M7078-3-22-1		FT V


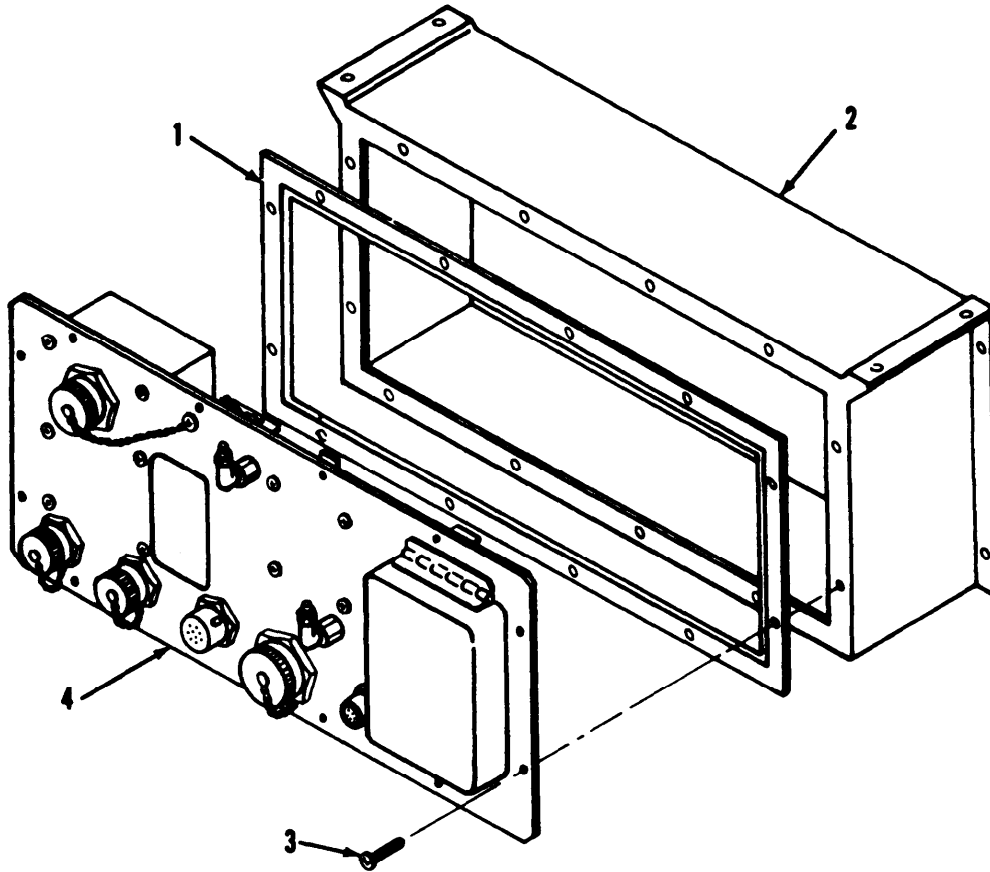


Figure B-6. Power distribution unit

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6) DESCRIPTION	(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	USABLE ON CODE	U/A	QTY INC IN UNIT
GROUP 0230 POWER DISTRIBUTION UNIT E5-19-6387								
B-6	1	PAFZZ	5999-01-074-8880	81361	D5-19-6392	SHIELDING GASKET, POWER DISTRIBUTION UNIT.....	EA	1
B-6	2	XAFZZ		81361	E5-19-6390	HOUSING.....	EA	1
B-6	3	PAFZZ	5305-01-031-3092	96904	MS3213-33	SCREW, MACHINE PAN HD, SELF-SEALING, NO. 10-32UNF-2A, 1/2 IN LG.....	EA	12
B-6	4	PAFFF	4240-01-057-3474	81361	E5-19-6391	PANEL, POWER DISTRIBUTION UNIT.....	EA	1




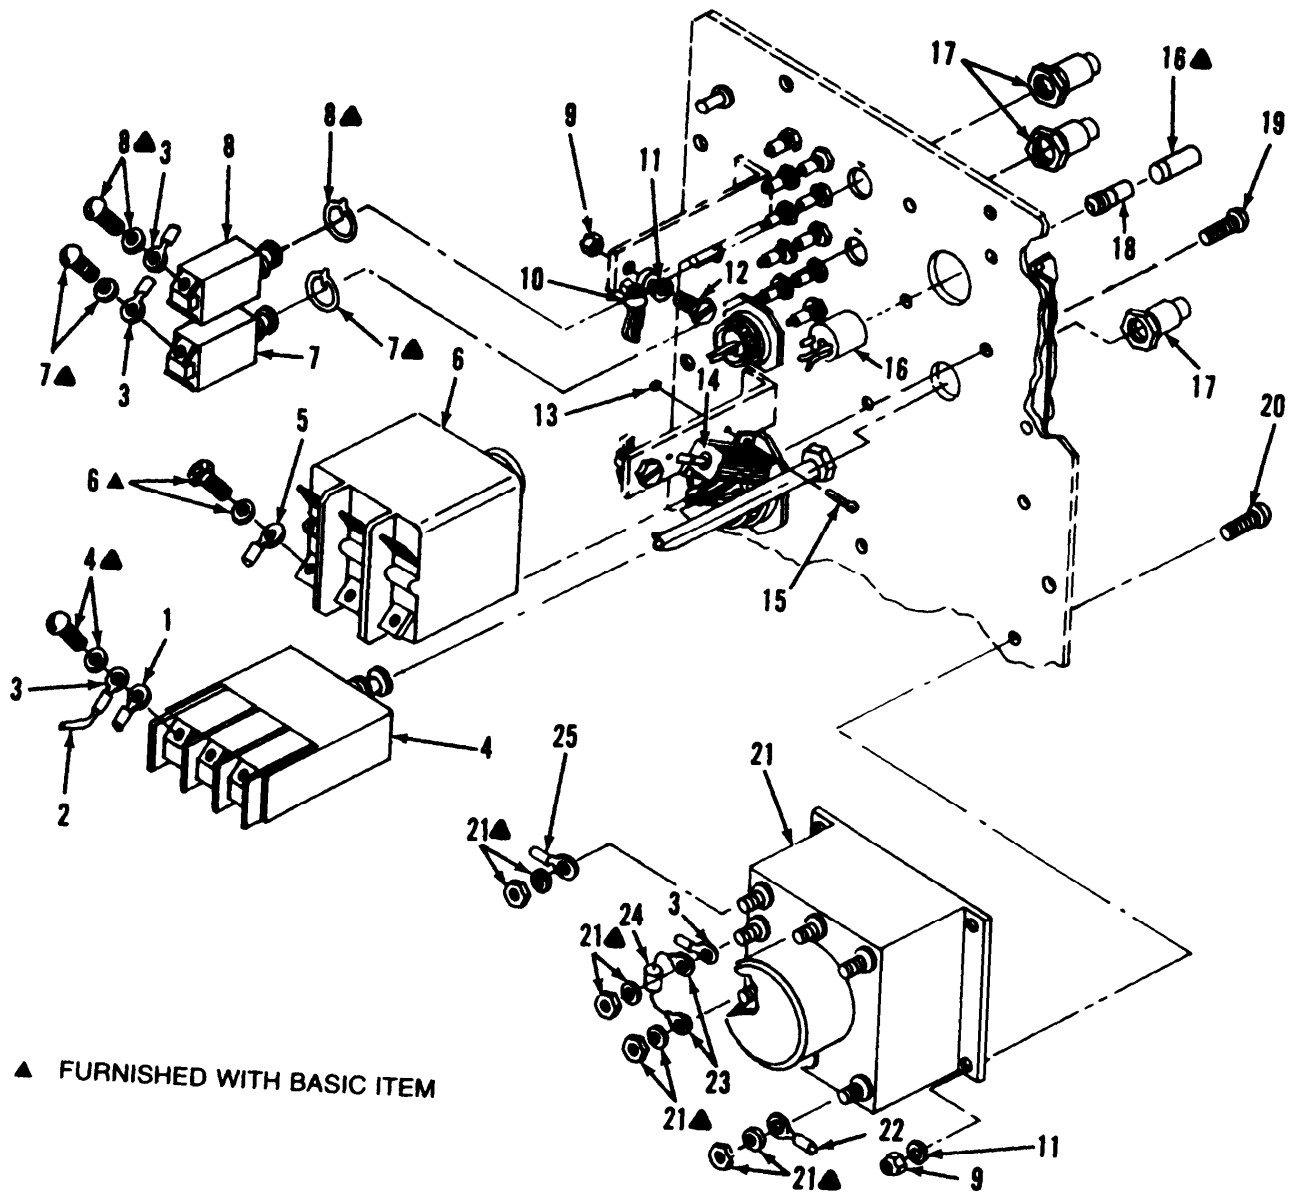

ARA81-0026

Figure B-7. Power distribution panel (sheet 1 of 2)



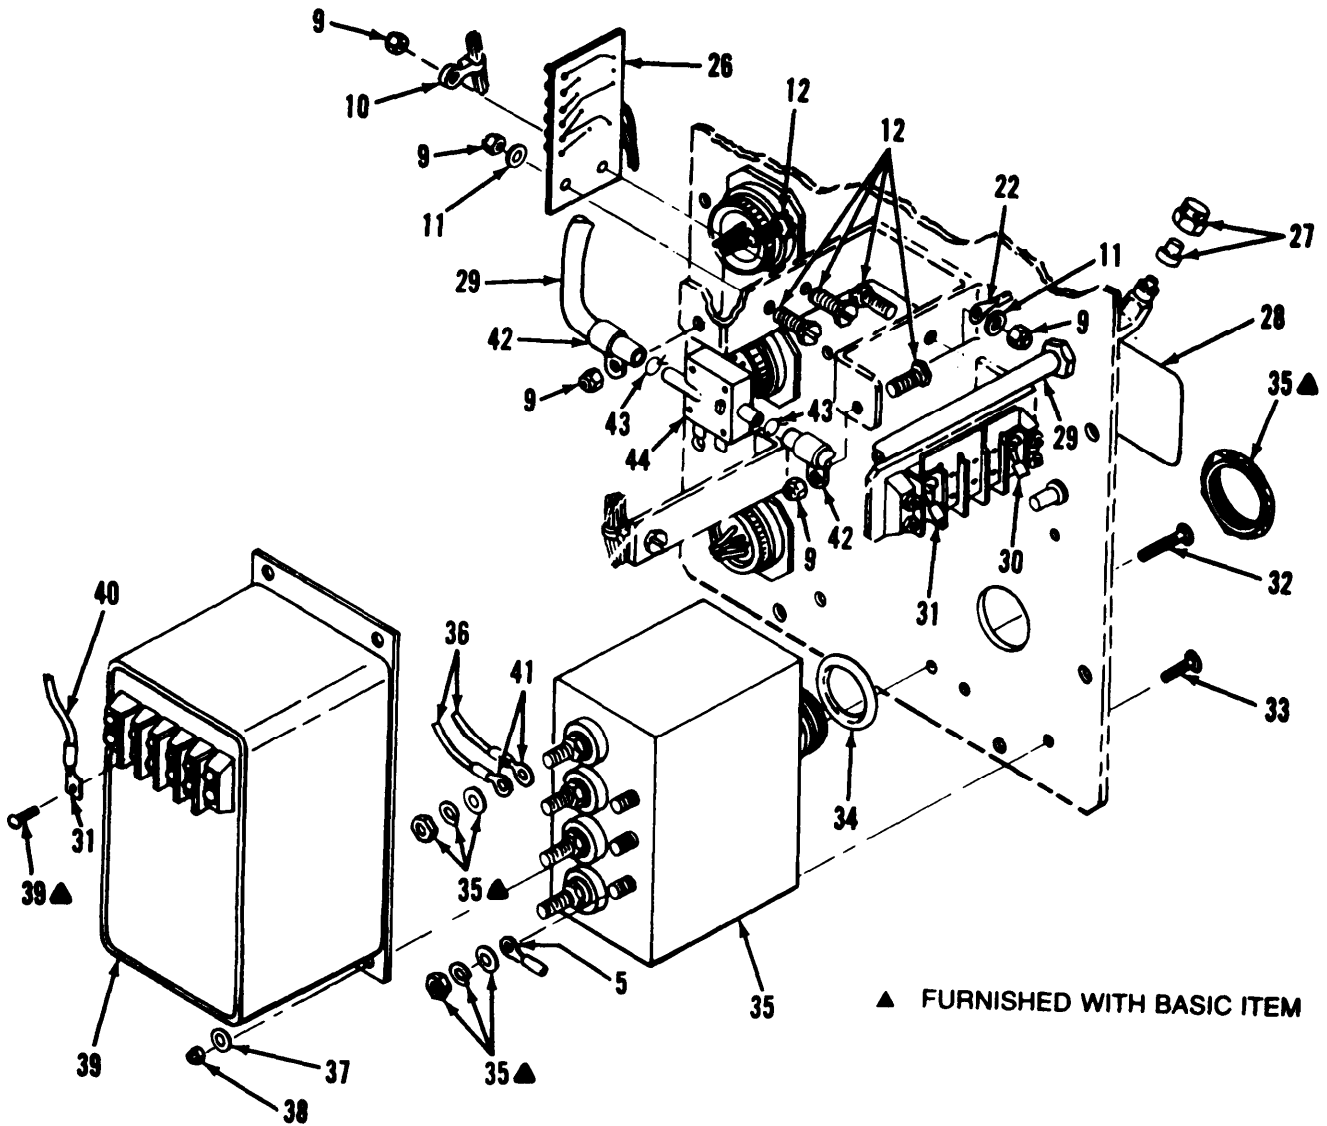

ARA81-0027


Figure B-7. Power distribution panel (sheet 2 of 2)



(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)
ILLUSTRATION					DESCRIPTION		QTY
(a)	(b)	NATIONAL		PART			INC
FIG	ITEM	STOCK		NUMBER	USABLE ON CODE		IN
NO	NO	SMR	FSCM	NUMBER		U/M	UNIT
CODE		NUMBER					
TM3-4240-284-30&P							
GROUP 0231 POWER DISTRIBUTION PANEL							
E5-19-6391							
B-7	1	PAFZZ	5940-00-113-8179	96906	MS25036-107	TERMINAL,LUG CRIMP STYLE, 16-14 AGW WIRE SIZE, NO. 6 STUD SIZE	EA 6
B-7	2	MFFZZ		81349	M5086/1-20-9	WIRE, ELECTRICAL MFD FROM 6145-00-578-7519	FT V
B-7	3	PAFZZ	5940-00-204-8966	96906	MS25036-102	TERMINAL,LUG CRIMP STYLE, 22-18 AWG WIRE SIZE, NO. 6 STUD SIZE	EA 9
B-7	4	PAFZZ	5925-00-814-8428	18876	10231240	CIRCUIT BREAKER	EA 1
B-7	5	PAFZZ	5940-00-143-4774	96906	MS25036-153	TERMINAL,LUG CRIMP STLYE, 16-14 AWG WIRE SIZE, NO. 8 STUD SIZE	EA 13
B-7	6	PAFZZ	5925-01-067-5437	82647	6752-320-20	CIRCUIT BREAKER	EA 1
B-7	7	PAFZZ	5925-00-045-1704	82647	7274-12-1	CIRCUIT BREAKER	EA 1
B-7	8	PAFZZ	5925-00-768-2035	82647	7274-12-1-1-2	CIRCUIT BREAKER	EA 1
B-7	9	PAFZZ	5310-00-877-5797	96906	MS21044N3	NUT, SELF-LOCKING, HEXAGON NO. 10-32UNJF-3B	EA 12
B-7	10	PAFZZ	5975-01-053-6294	09922	TF-5H	STRAP, TIEDOWN, CABLE	EA 4
B-7	11	PAFZZ	5310-00-809-8546	96906	MS27183-8	WASHER, FLAT .219 IN. ID, .438 IN. OD, .049 IN. THK	EA 9
B-7	12	PAFZZ	5305-00-179-8946	96906	MS51849-66	SCREW, MACHINE HEX HD, NO. 10-32UNF-2A, 3/4 IN. LG	EA 8
B-7	13	PAFZZ	5310-00-088-0551	96906	MS21044N04	NUT, SELF-LOCKING, HEXAGON: NO. 4-4OUNJC-3B	EA 2
B-7	14	PAFZZ	5905-00-553-8100	81349	RER70F1100R	RESISTOR, FIXED, WIRE WOUND	EA 1
B-7	15	PAFZZ	5305-01-053-0958	96906	MS51849-14	SCREW, MACHINE HEX HD, NO. 4-4OUNC-2A, 1/2 IN. LG	EA 2
B-7	16	XBFZZ		07137	PTL-A1 (3-C7A)	LIGHT, INDICATOR	EA 1
B-7	17	PAFZZ	5975-00-958-6451	82647	14500-1	BOOT, DUST AND MOISTURE SEAL	EA 3
B-7	18	PAOZZ	6240-00-892-4420	81349	M15098/11-001	LAMP,GLOW	EA 1
B-7	19	PAFZZ	5305-01-053-0959	96906	MS3213-14	SCREW, MACHINE PAN HD, SELF-SEALING, NO. 6-32UNC-2A, 7/16 IN. LG	EA 4
B-7	20	PAFZZ	5305-00-148-1286	96906	MS3213-36	SCREW, MACHINE PAN HD, SELF-SEALING, NO 10-32UNF-2A, 3/4 IN. LG	EA 4
B-7	21	PAFZZ	5945-00-201-9456	96906	MS24143D1	RELAY, ELECTROMAGNETIC 25 AMP, 3 PST, N. O	EA 1
B-7	22	PAFZZ	5940-00-143-4780	96906	MS25036-108	TERMINAL,LUG CRIMP STYLE, 16-14 AWG WIRE SIZE, NO. 10 STUD SIZE	EA 10
B-7	23	PAFZZ	5940-00-681-8185	96906	MS35430-4	TERMINAL,LUG SOLDER TYPE, 14-20 AWG WIRE SIZE, NO. 6 STUD SIZE	EA 2
B-7	24	PAFZZ	5961-00-139-9812	81349	JAN1N5557	SEMICONDUCTOR DEVICE, DIODE	EA 1
B-7	25	PAFZZ	5940-00-143-4771	96906	MS25036-103	TERMINAL, LUG CRIMP STYLE, 22-18 AWG SIZE, NO. 10 STUD SIZE	EA 1
B-7	26	PAFZZ	5999-01-048-9865	81361	C5-19-6415	PRINTED CIRCUIT ASSEMBLY	EA 1
B-7	27	PAOZZ	4730-00-817-1891	30327	261P1-4	NUT, TUBE COUPLING 1/4 IN TUBE OD, 3/8-24 THD SIZE, W/SLEEVE	EA 2
B-7	28	PAOZZ	9905-01-065-3065	81361	C5-19-6316-6	PLATE, IDENTIFICATION: POWER DISTRIBUTION UNIT	EA 1
B-7	29	MFFZZ		81361	E5-19-6391-52	TUBING, NONMETALLIC: 3/16 IN. NOM ID, GREEN, MFD FROM 9330-01-073-1011	IN 14
B-7	30	PAFZZ	5940-00-825-3697	96906	MS17143-11	TERMINAL,LUG CRIMP STYLE, 16-14 AWG SIZE, NO. 5 STUD SIZE	EA 4
B-7	31	PAFZZ	5940-00-825-3699	96906	MS17143-10	TERMINAL,LUG CRIMP SYTLE, 22-18 AWAG WIRE SIZE, NO. 5 STUD SIZE	EA 16

(1)	(2)	(3)	(4)	(5)	TM3-4240-284-30&P (6)	(7)	(8)
ILLUSTRATION					DESCRIPTION		QTY
(a)	(b)						INC
FIG	ITEM	SMR	NATIONAL	PART			IN
NO	NO	CODE	STOCK	NUMBER	USABLE ON CODE	U/M	UNIT
			NUMBER	FSCM			
B-7	32	PAFZZ	5305-01-006-8953	96906	MS3213-27		EA 4
						SCREW, MACHINE PAN HD, SELF-SEALING, NO. 8-32UNC-2A, 5/8 IN. LG	
B-7	33	PAFZZ	5305-01-053-0960	96906	MS3213-24		EA 4
						SCREW, MACHINE PAN HD, SELF-SEALING, NO. 8-32UNC-2A, 7/16 IN LG	
B-7	34	PAFZZ	5330-00-542-1329	96906	MS28775-120		EA 1
						PACKING, PREFORMED	
B-7	34	PAFZZ	5330-00-524-1329	96906	MS28775-120		EA 1
						PACKING, PREFORMED	
B-7	35	PAFZZ	5915-01-096-8853	81361	D5-19-6353		EA 1
						FILTER, RADIO FREQUENCY INTERFERENCE	
B-7	36	MFFZZ		81349	M5086/1-16-9		FT V
						WIRE, ELECTRICAL MFD FROM 6145-00-578-7517	
B-7	37	PAFZZ	5310-00-809-8544	96906	MS27183-7		EA 4
						WASHER, FLAT .100 IN. ID, .375 IN. OD, .049 IN. THK	
B-7	38	PAFZZ	5310-00-811-3494	96906	MS21044N08		EA 4
						NUT, SELF-LOCKING, HEXAOGN: NO. 6-32UNC-3B	
B-7	39	PAFZZ	5950-01-091-8626	81361	D5-19-6397		EA 1
						TRANSFORMER, POWER RECTIFIER MODULE, 400 HZ	
B-7	40	MFFZZ		81349	M5086/1-22-9		FT V
						WIRE, ELECTRICAL MFD FROM 6145-00-578-7520	
B-7	41	PAFZZ	5940-00-557-1629	96906	MS25036-149		EA 2
						TERMINAL, LUG CRIMP STYLE, 22-18 AWG WIRE SIZE, NO. 8 STUD SIZE	
B-7	42	PAFZZ	5340-00-989-9224	96906	MS25281R6		EA 2
						CLAMP, LOOP PLASTIC WIRE SUPPORT, RIBBED INNER DIA, 3/8 IN. BUNDLE DIADIA	
B-7	43	PAFZZ	4730-00-116-2969	70494	A5S		EA 2
						CLAMP, HOSE	
B-7	44	PAFZZ	5930-01-055-9249	81361	B5-19-6261-1		EA 1
						SWITCH, PRESSURE	



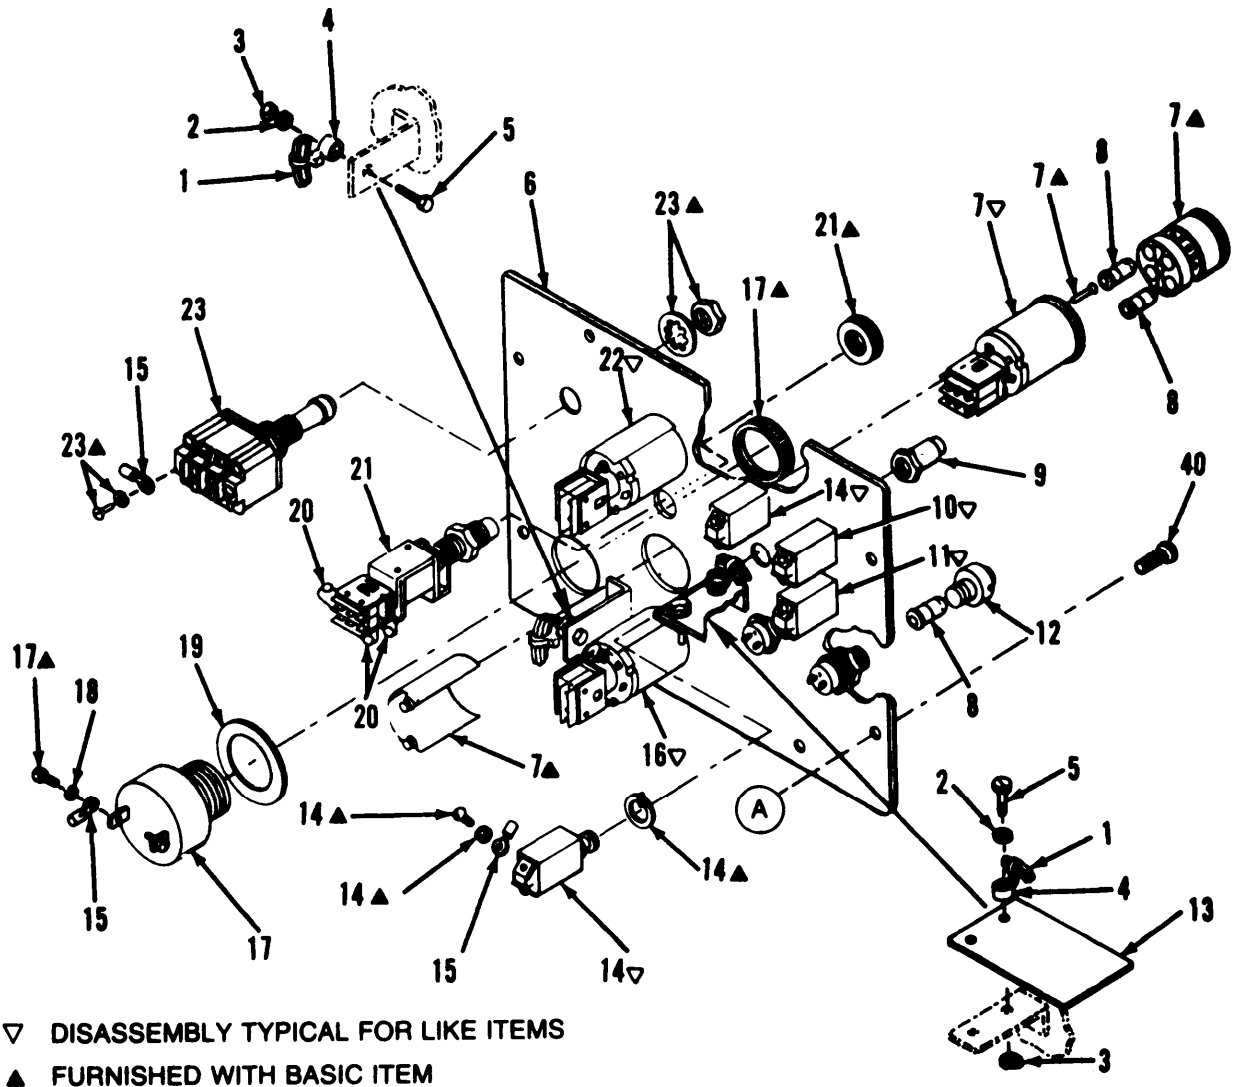


▽ DISASSEMBLY TYPICAL FOR LIKE ITEMS  
 ▲ FURNISHED WITH BASIC ITEM

ARA81-0028

Figure B-8. Compartment control module (sheet 1 of 2)



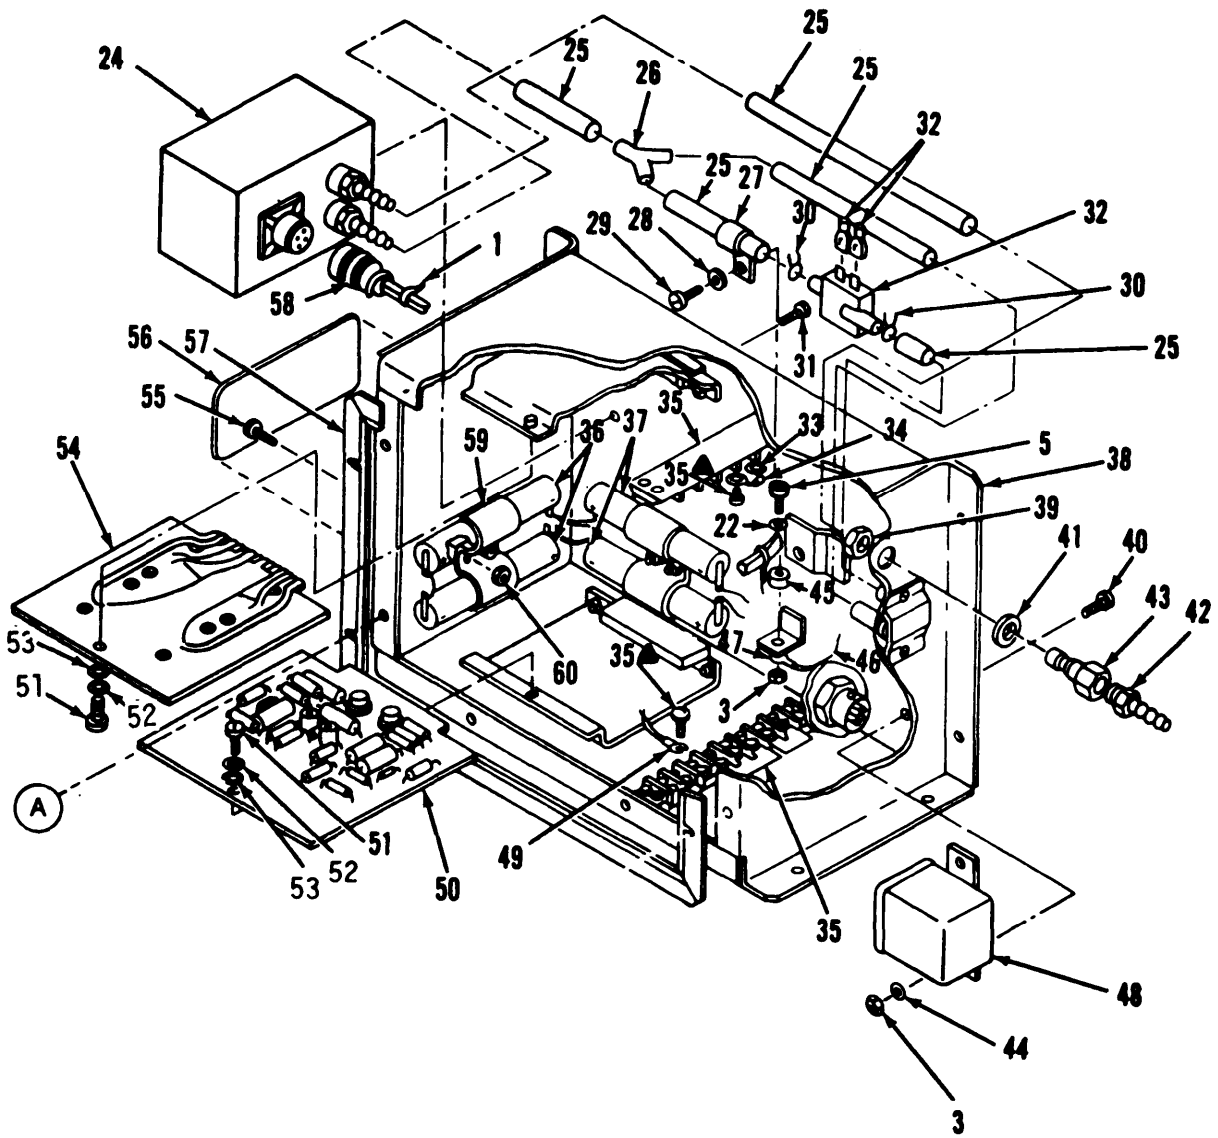

▲ FURNISHED WITH BASIC ITEM

ARA81-0029

Figure B-8. Compartment control module (sheet 2 of 2)

(1)	(2)	(3)	(4)	(5)	TM3-4240-284-30&P (6)	(7)	(8)
ILLUSTRATION					DESCRIPTION		QTY
(a)	(b)	NATIONAL		PART			INC
FIG	ITEM	STOCK		NUMBER	USABLE ON CODE		IN
NO	NO	SMR	FSCM	NUMBER		U/M	UNIT
NO	NO	CODE					
					GROUP 0240 COMPARTMENT CONTROL MODULE		
					E5-19-6376		
B-8	1	MFFZZ	81349	M5086/1-22-9	WIRE, ELECTRICAL MFD FROM 6145-00-578-7520	FT	V
B-8	2	PAFZZ	5310-00-014-5850	96906	MS27183-42	EA	7
B-8	3	PAFZZ	5310-00-877-5797	96906	MS21044N3	EA	7
B-8	4	PAFZZ	5975-01-053-6294	09922	TF-5H	EA	4
B-8	5	PAFZZ	5305-00-179-8946	96906	MS51849-66	EA	4
B-8	6	XAFZZ		81361	D5-19-6378	EA	1
B-8	7	PAFZZ	5930-01-052-7684	81361	E5-19-6376-155	EA	1
B-8	8	PAZZZ	6240-00-763-7744	81348	W-L-00111/7	EA	8
B-8	9	PAFZZ	5975-00-958-6451	82647	14500-1	EA	4
B-8	10	PAFZZ	5925-01-054-3453	82647	7274-34-3/4	EA	1
B-8	11	PAFZZ	5925-00-045-1704	82649	7274-12-1	EA	1
B-8	12	PAFZZ	6210-00-635-4700	76854	VH911M8	EA	2
B-8	13	PAFZZ	5999-01-048-9866	81361	C5-19-6688	EA	1
B-8	14	PAFZZ	5925-01-054-3452	82647	7274-34-1	EA	2
B-8	15	PAFZZ	5940-00-813-0698	96906	MS25036-101	EA	29
B-8	16	PAFZZ	5930-01-050-4362	04426	44-580151AAAA	EA	1
B-8	17	PAFZZ	6350-00-267-0442	37942	SC628M	EA	1
B-8	18	PAFZZ	5310-00-579-0079	96906	MS35333-37	EA	2
B-8	19	MFFZZ		81361	B5-19-5710	EA	1
B-8	20	PAFZZ	5961-00-924-6981	81349	JAN1N4245	EA	3
B-8	21	PAFZZ	5930-00-854-7864	18876	9745533	EA	1
B-8	22	PAFZZ	5930-01-108-2588	81361	E5-19-6376-159	EA	1
B-8	23	PAFZZ	5930-00-847-2599	96906	MS24660-23D	EA	1
B-8	24	PAFZZ	6685-01-056-5283	33107	P92-1020	EA	1
B-8	25	MFFZZ		81361	E5-19-6376-46	IN	18
B-8	26	PAFZZ	6640-00-494-0527	05178	6152	EA	1
B-8	27	PAFZZ	5340-00-989-9224	96906	MS25281R6	EA	1
B-8	28	PAFZZ	5310-00-765-3197	96906	MS27183-41	EA	1
B-8	29	PAFZZ	5305-00-211-8193	96906	MS51849-54	EA	1
B-8	30	PAFZZ	4730-00-116-2969	70494	A5S	EA	2
B-8	31	PAFZZ	5305-01-054-2488	96906	MS3213-11	EA	2
B-8	32	PAFZZ	5930-01-068-8812	81361	5-19-6261-2	EA	1
B-8	33	PAFZZ	5940-00-681-8185	96906	MS35430-4	EA	2
B-8	34	PAFZZ	5961-00-139-9812	81349	JAN1N5557	EA	1

(1)	(2)	(3)	(4)	(5)	TM3-4240-284-30&P (6)	(7)	(8)	
ILLUSTRATION					DESCRIPTION		QTY	
(a)	(b)	NATIONAL		PART			INC	
FIG	ITEM	STOCK		NUMBER	USABLE ON CODE		IN	
NO	NO	SMR	FSCM	NUMBER		U/M	UNIT	
		CODE						
		NUMBER						
B-8	35	XAFZZ		81349	37TB10	TERMINAL BOARD	EA	2
B-8	36	PAFZZ	6135-01-083-0564	09823	CS1004	BATTERY, DRY CELL TYPE 225SC	EA	2
B-8	37	PAFZZ	6135-01-055-9627	09823	CS1005	BATTERY, DRY CELL TYPE 225SC	EA	2
B-8	38	XAFZZ		81361	E5-19-6377	HOUSING, COMPARTMENT CONTROL	EA	1
B-8	39	PAFZZ	5310-00-199-1056	96906	MS35650-3385	NUT, PLAIN, HEXAGON 3/8-2UNF-2B	EA	1
B-8	40	PAFZZ	5305-01-031-5092	96906	MS3213-33	SCREW, MACHINE PAN HD, SELF-SEALING, NO. 10-32UNF-2A, 1/2 IN. LG	EA	10
B-8	41	PAFZZ	5330-00-954-6684	80205	NAS1598-6Y	PACKING WITH RETAINER: 3/8 IN. BOLT SIZE	EA	1
B-8	42	PAFZZ	4730-01-053-5923	81361	B5-19-6362	ADAPTER, STRAIGHT, HOSE	EA	1
B-8	43	PAFZZ	4730-01-017-5119	30327	KF03-02PS	ADAPTER, STRAIGHT, PIPE TO HOSE	EA	1
B-8	44	PAFZZ	5310-00-014-5850	96906	MS27183-42	WASHER, FLAT .219 IN. ID, .500 IN. OD, .049 IN. THK	EA	1
B-8	45	PAFZZ	5975-01-053-6294	09922	TF-5H	STRAP, TIEDOWN, CABLE	EA	1
B-8	46	MFFZZ		81349	M5086/1-20-9	WIRE, ELECTRICAL MFD FROM 6145-00-578-7519	FT	V
B-8	47	PAFZZ	5940-00-143-4771	96906	MS25036-103	TERMINAL, LUG CRIMP STYLE, 22-18 AWG WIRE SIZE, NO. 10 STUD SIZE	EA	1
B-8	48	PAFZZ	5945-01-059-7074	81361	C5-19-6383	FLASHER, THERMAL E11	EA	1
B-8	49	PAFZZ	5940-00-825-3699	96906	MS17143-10	TERMINAL, LUG CRIMP STYLE, 22-18 AWG WIRE SIZE, NO 5 STUD SIZE	EA	43
B-8	50	PAFZZ	5999-01-048-9867	81361	D5-19-6193-10	PRINTED CIRCUIT BOARD, SWITCHING	EA	1
B-8	51	PAFZZ	5305-00-227-1543	96906	MS51849-33	SCREW, MACHINE HEX HD, NO. 6-32UNC-2A, .38 IN. LG	EA	2
B-8	52	PAFZZ	5310-00-045-4007	96906	MS35338-41	WASHER, LOCK SPRING, NO. 6 NOM SIZE	EA	2
B-8	53	PAFZZ	5310-00-983-8483	96906	MS27183-5	WASHER, FLAT .153 IN. ID, .312 IN. OD, .035 IN. THK	EA	2
B-8	54	PAFZZ	5999-01-050-4638	81361	C5-19-6197	PRINTED CIRCUIT BOARD: POWER	EA	1
B-8	55	PAFZZ	5305-01-033-2636	96906	MS3213-13	SCREW, MACHINE PAN HD, SELF-SEALING, NO. 6-32UNC-2A, 3/5 IN. LG	EA	4
B-8	56	PAFZZ	9905-01-052-3766	81361	C5-19-6316-7	PLATE, IDENTIFICATION: CONTROL MODULE COMPARTMENT	EA	1
B-8	57	PAFZZ	5999-01-070-8434	81361	C5-19-6382	SHIELDING GASKET, RFI	EA	1
B-8	58	XBFZZ	5935-00-715-2756	96906	MS3126F10-6S	CONNECTOR, PLUG, ELECTRICAL	EA	1
B-8	59	PAFZZ	6135-01-082-3744	81361	B5-19-6659	RETAINER, BATTERY	EA	2
B-8	60	PAFZZ	5310-00-081-8087	96906	MS21044N06	NUT, SELF-LOCKING, HEXAGON: NO. 69-32UNJC-3B	EA	4






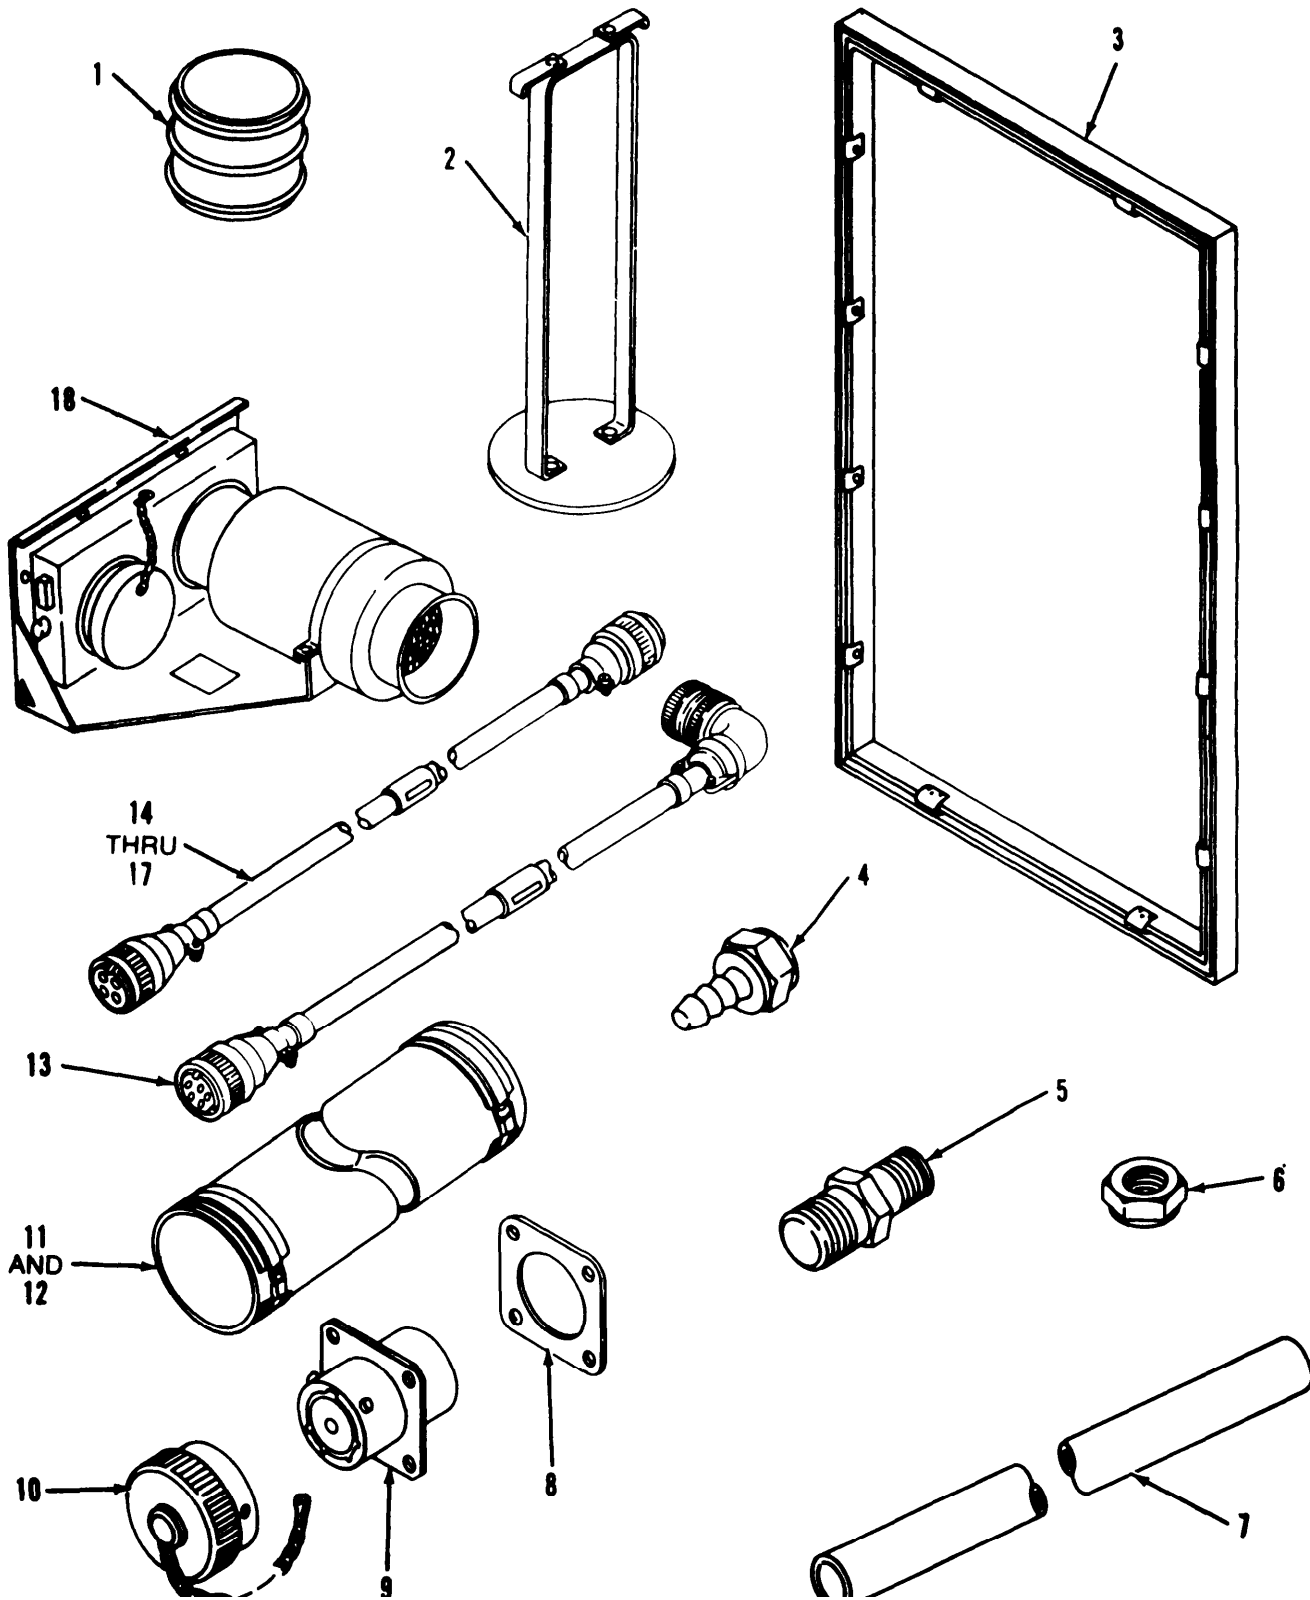


Figure B-9. M262 installation kit

(1)	(2)	(3)	(4)	(5)	TM3-4240-284-30&P (6)	(7)	(8)
ILLUSTRATION					DESCRIPTION		QTY
(a)	(b)	NATIONAL		PART			INC
FIG	ITEM	STOCK		NUMBER	USABLE ON CODE		IN
NO	NO	CODE	FSCM	NUMBER		U/M	UNIT
					GROUP 0300 M262 INSTALLATION KIT		
					PLS-19-6704		
B-9	1	PAOZZ	4730-01-049-0805	81361	C5-19-6182		EA 5
B-9	2	PAOZZ	4240-01-052-3783	81361	C5-19-6180		EA 9
B-9	3	PAOZZ	4240-01-061-7233	81361	E5-19-5908		EA 1
B-9	4	PAOZZ	4730-01-050-7540	30327	KF03-04RV		EA 1
B-9	5	PAOZZ	4730-01-067-9232	81361	C5-19-6654		EA 1
B-9	6	PAOZZ	5310-00-897-6081	96906	MS35691-32		EA 1
B-9	7	MOOZZ		30327	C403		EA 1
B-9	8	PAOZZ	5330-01-054-0857	96906	MS90484-20-1		EA 1
B-9	9	PAOZZ	5935-00-994-0294	96906	MS3119E20-16		EA 1
B-9	10	PAOZZ	5935-00-762-1392	96906	MS3181-20C		EA 1
B-9	11	PAOOO	4720-01-074-9220	30299	0120-0600-0109		EA 6
B-9	12	PAOOO	4720-01-063-4567	30299	0120-0600-0106		EA 2
B-9	13	PAOZZ	4240-01-068-2354	81361	5-19-6693		EA 2
B-9	14	PAOZZ	4240-01-069-9827	81361	5-19-6691		EA 1
B-9	15	PAOZZ	4240-01-073-3439	81361	5-19-6162-10		EA 1
B-9	16	PAOZZ	4240-01-067-8376	81361	5-19-6170-10		EA 1
B-9	17	PAOZZ	4240-01-068-2355	81361	5-19-6170-40		EA 1
B-9	18	XBOOO		81361	D5-19-6628		EA 1

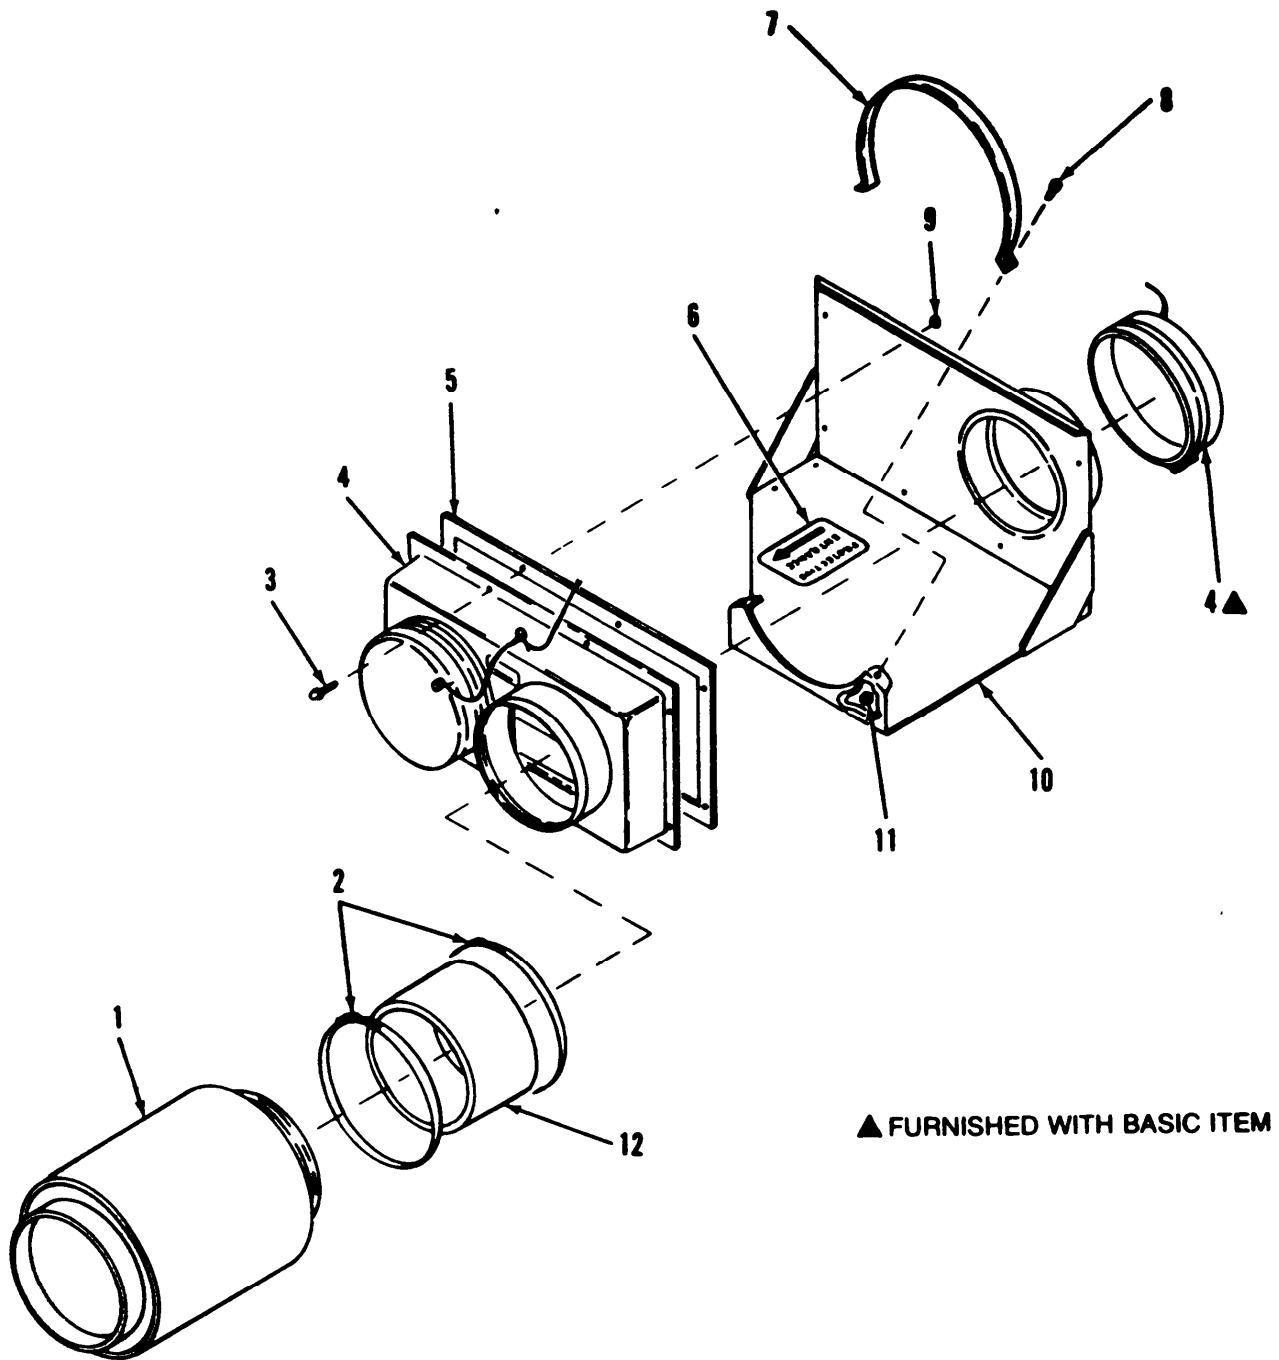


▲ FURNISHED WITH BASIC ITEM

ARAB1-0031

Figure B-10. Airflow valve and silencer

(1)	(2)	(3)	(4)	(5)	TM3-4240-284-30&P (6)	(7)	(8)
ILLUSTRATION					DESCRIPTION		QTY
(a)	(b)	NATIONAL		PART			INC
FIG	ITEM	STOCK	FSCM	NUMBER	USABLE ON CODE		IN
NO	NO	NUMBER				U/M	UNIT
					GROUP 0310 AIRFLOW VALVE AND SILENCER		
					D5-19-6628		
B-10	1	PAOZZ	2990-01-057-3475	81361	C5-19-6627	MUFFLER, INTAKE	EA 1
B-10	2	PAOZZ	4730-00-908-6294	96906	MS35842-16	CLAMP, HOSE 4-1/8 TO 7 IN DIA RANGE	EA 2
B-10	3	PAOZZ	5305-00-179-8946	96906	MS51849-66	SCREW, MACHINE HEX HD, NO. 10-32UNF-2A, 3/4 IN LG	EA 8
B-10	4	PAOFF	4240-01-055-1493	81361	E5-19-6136	VALVE, AIRFLOW	EA 1
B-10	5	PAOZZ	5330-01-088-4442	81361	5-19-6348	GASKET AIRFLOW VALVE	EA 1
B-10	6	PAOZZ	9905-01-051-0187	81361	B5-19-6656	PLATE, INSTRUCTION PROTECTIVE ENCETRANCE	EA 1
B-10	7	XBOZZ		81361	C5-19-6626	STRAP, RETAINING	EA 1
B-10	8	PAOZZ	5305-00-157-5621	96906	MS51849-56	SCREW, MACHINE HEX HD, NO. 8-32UNC-2A, 3/4 IN LG	EA 2
B-10	9	PAOZZ	5310-00-877-5797	96906	MS21044N3	NUT, SELF-LOCKING, HEXAGON: NO. 10-32UNJF-3B	EA 8
B-10	10	XBOZZ		81361	D5-19-6625	BRACKET, MOUNTING	EA 1
B-10	11	PAOZZ	5310-00-811-3494	96906	MS21044N08	NUT, SELF-LOCKING, HEXAGON: 8-32UNJC-3B	EA 2
B-10	12	MOOZZ		81361	D5-19-6628-14	HOSE, NONMETALLIC 3.50 IN. LG, MFD FROM 4720-01-106-4602	EA 1

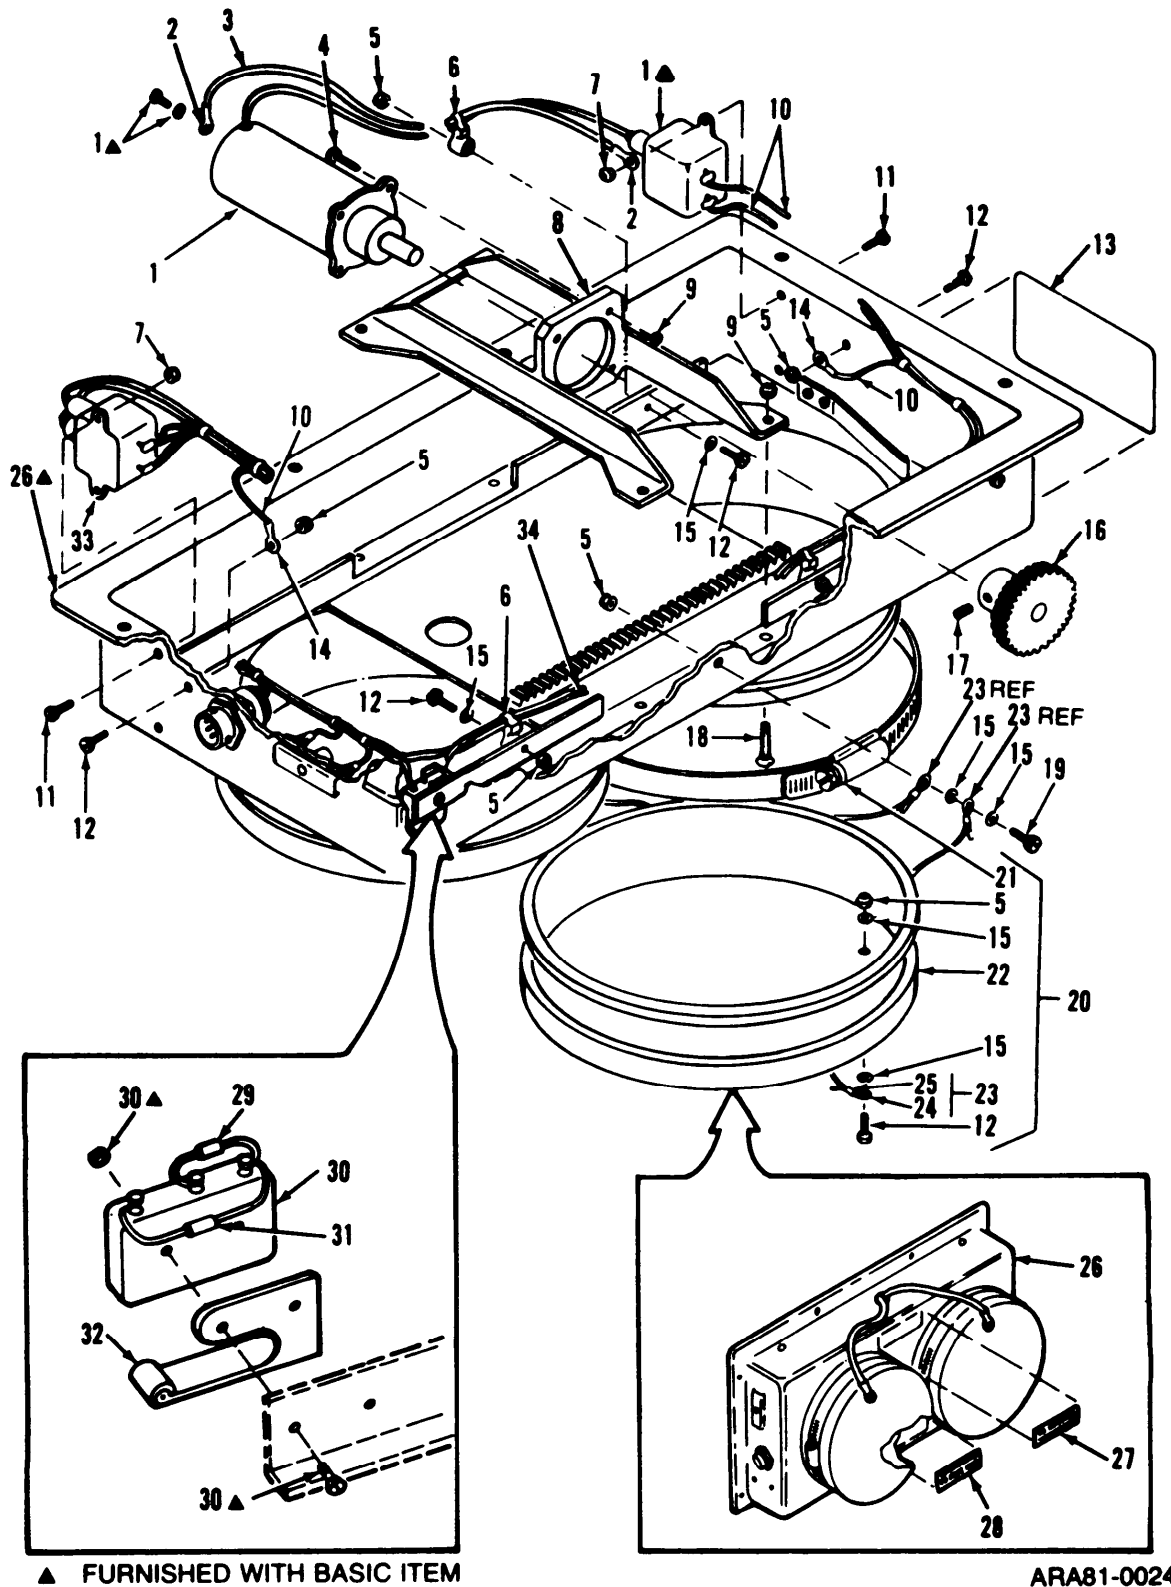

▲ FURNISHED WITH BASIC ITEM

ARA81-0024

Figure B-11. Airflow valve.

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) QTY INC IN U/M	(8) QTY INC IN UNIT
						TM3-4240-284-30&P		
						(6) DESCRIPTION		
						GROUP 0311 AIRFLOW VALVE		
						E5-19-6136		
B-11	1	PAFZZ	6105-01-056-9045	25140	5A3128	GEARCASE-MOTOR PLANETARY, GEAR REDUCED	EA	1
B-11	2	PAFZZ	5940-00-113-9828	96906	MS25036-148	TERMINAL,LUG CRIMP STYLE, 22-18 AWG WIRE SIZE, NO. 4 STUD SIZE	EA	2
B-11	3	MFFZZ		81349	M5086/1-20-9	WIRE, ELECTRICAL MFD FROM 6145-00-578-7519	FT	V
B-11	4	PAFZZ	5305-00-582-5808	96906	MS35265-31	SCREW, MACHINE FIL HD, NO. 6-32UNC-2A, 5/8 IN LG.	EA	4
B-11	5	PAOZZ	5310-00-811-3494	96906	MS21044N08	NUT,SELF-LOCKING, HEXAGON: NO. 8-32UNJC-3B	EA	3
B-11	6	PAFZZ	5975-01-053-6294	09922	TF-5H	STRAP,TIEDOWN, CABLE	EA	3
B-11	7	PAFZZ	5310-00-088-0551	96906	MS21044N04	NUT, SELF-LOCKING, HEXAGON: NO. 4-40UNJC-3B	EA	8
B-11	8	XAFZZ		81361	D5-19-6138	MOUNT, MOTOR	EA	1
B-11	9	PAFZZ	5310-00-081-8087	96906	MS21044N06	NUT, SELF-LOCKING, HEXAGON	EA	12
B-11	10	MFFZZ		81349	M5086/1-22-9	WIRE, ELECTICAL MFD FROM 6145-00-578-7520	FT	V
B-11	11	PAFZZ	5305-00-242-1264	96906	MS51849-13	SCREW,MACHINE HEX HD, NO. 4-40UNC-2A, .38 IN. LG	EA	8
B-11	12	PAOZZ	5305-00-115-9934	96906	MS51849-55	SCREW,MACHINE HEX HD, NO. 8-32UNC-2A, 5/8 IN LG	EA	2
B-11	13	PAOZZ	9905-01-065-9382	81361	C5-19-6149	PLATE, IDENTIFICATION: AIRFLOW VALVE	EA	1
B-11	14	PAFZZ	5940-00-557-1629	96906	MS25036-149	TERMINAL,LUG CRIMP STYLE, 22-18 AWG WIRE SIZE, NO. 8 STUD SIZE	EA	6
B-11	15	PAOZZ	5310-00-765-3197	96906	MS27183-41	WASHER, FLAT .188 IN ID, .438 OD, .049 IN THK	EA	6
B-11	16	XAFZZ		81361	C5-19-6144	GEAR	EA	1
B-11	17	PAFZZ	5305-00-058-9362	96906	MS51977-19	SETSCREW HEX SOCKET, NO. 6-32UNC-3A, 3/16 IN. LG	EA	1
B-11	18	PAFZZ	5305-00-984-6221	96906	MS35206-234	SCREW,MACHINE PAN HD, NO. 6-32UNC-2A, 1 IN. LG	EA	8
B-11	19	PAOZZ	5305-00-157-5621	96906	MS51849-56	SCREW,MACHINE HEX HD, NO. 8-32UNC-2A, 3/4 IN LG	EA	1
B-11	20	PAOOO	5340-01-048-6327	81361	C5-19-6145	CAP,PROTECTIVE,DUST AND MOISTURE SEAL	EA	2
B-11	21	PAOZZ	4730-00-908-6294	96906	MS35842-16	CLAMP,HOSE 4-1/8 TO 7 IN DIA RANGE	EA	2
B-11	22	XAOZZ		81361	C5-19-6309	CAP, RUBBER	EA	2
B-11	23	AOOOO		99862	CL-2-FANDCL-2-C-8.0	CABLE	EA	2
B-11	24	MOOZZ		99862	CL-2-C-8.0	CABLE, NYLON: 8 IN. LG MFD FROM 4010-00-069-5180	EA	2
B-11	25	PAOZZ	4030-00-878-8693	99862	CL2F	FERRULE, WIRE ROPE	EA	4
B-11	26	XAFZZ		81361	E9-19-6137	HOUSING,VALVE	EA	1
B-11	27	PAOZZ	9905-01-051-0186	81361	B5-19-6147	PLATE,INSTRUCION TO SHELTER	EA	1
B-11	28	PAOZZ	9905-01-050-7556	81361	B5-19-6148	PLATE,INSTRUCTION TO PROT	EA	1
B-11	29	PAFZZ	5961-00-924-6981	81349	JAN1N4245	SEMICONDUCTOR DEVICE, DIODE	EA	2
B-11	30	PAFZZ	5930-00-913-7960	81349	MS25085-2	SWITCH,SENSITIVE	EA	2
B-11	31	PAFZZ	5910-00-114-0510	81349	M39014/01-1581	CAPACITOR,FIXED CERAMIC	EA	2
B-11	32	PAFZZ	5930-00-296-9610	94135	1227903-178	ADAPTER,SWITCH ACTU	EA	2
B-11	33	PAFZZ	5915-01-075-7240	81361	C5-19-6152	FILTER,RADIO FREQUENCY INTERFERENCE	EA	1
B-11	34	MFFZZ		81349	M7078-3-22-1	CABLE,SPECIAL PURPOSE, ELECTRICAL: MFD FROM 6145-00-608-5484	FT	V

(1)	(2)	(3)	(4)	(5)	TM3-4240-284-30&P (6)	(7)	(8)
ILLUSTRATION					DESCRIPTION		QTY
(a)	(b)	NATIONAL		PART			INC
FIG	ITEM	STOCK		NUMBER	USABLE ON CODE		IN
NO	NO	SMR CODE	NUMBER	FSCM		U/M	UNIT
GROUP 0500 BULK MATERIALS							
BULK	1	PAOZZ	4010-00-069-5180	99862	CL2C		FT
CABLE, NYLON COVERE NYLON COVERED							
BULK	2	PAOZZ	4720-00-065-8682	30327	C403		FT
HOSE, NONMETALLIC RUBBER 3/16 IN NOM ID							
BULK	3	PAOZZ	4720-00-996-0381	30327	44PRED		FT
TUBING, NONMETALLIC 1/4 IN. OD, .040 IN. WALL THK RED							
BULK	4	PAOZZ	4720-01-053-0316	30327	44PGREEN		FT
TUBING, NONMETALLIC 1/4 IN. OD, .040 IN. WALL THK GREEN							
BULK	5	PAOZZ	4720-01-106-4602	81361	B5-19-6716		EA
HOSE, NONMETALLIC 6.000 IN. ID, 4.000 IN. LG, 50 PSI BURST PRESSURE							
BULK	6	PAFZZ	6145-00-578-7517	81349	M5086/1-16-9		FT
WIRE, ELECTRICAL 600 V. 16 AWG, STRANDED SINGLE CONDUCTOR WHITE							
BULK	7	PAFZZ	6145-00-578-7519	81349	M5086/1-20-9		FT
WIRE, ELECTRICAL 600 V, 20 AWG, STRANDED SINGLE CONDUCTOR, WHITE							
BULK	8	PAFZZ	6145-00-578-7520	81349	M5086/1-22-9		FT
WIRE, ELECTRICAL 600 V, 22 AWG, STRANDED SINGLE CONDUCTOR, WHITE							
BULK	9	PAFZZ	6145-00-608-5484	81349	M7078-3-22-1		FT
CABLE, SPECIAL PURPOSE, ELECTRICAL: 600V, 22 AWG, STRANDED SINGLE CONDUCTOR, SHIELDED							
BULK	10	PAFZZ	9320-00-785-8171	81349	MIL-R-3065		SH
RUBBER STRIP 1/16 IN. NOM THK, 2 FT X 2 FT, GR SC415BF20							
BULK	11	PAFZZ	9330-01-073-1011	81348	ZZ-R-765		FT
TUBING NONMETALLIC: SILICONE RUBBER, GREEN, .188 LIN. ID, .375 IN. OD, CL 2B, GR 50							

SECTION III. SPECIAL TOOLS LIST

(NOT APPLICABLE)



SECTION IV. NATIONAL STOCK NUMBER AND PART NUMBER INDEX

STOCK NUMBER	FIGURE NO.	ITEM NO.	STOCK NUMBER	FIGURE NO.	ITEM NO.
5310-00-014-5850	B-3	37	5305-00-242-1264	B-5	11
5310-00-014-5850	B-8	2	5330-00-248-3849	B-1	9
5310-00-014-5850	B-8	44	5330-00-250-0236	B-1	8
5925-00-045-1704	B-7	7	6350-00-267-0442	B-8	17
5925-00-045-1704	B-8	11	5305-00-269-3240	B-3	28
5310-00-045-3296	B-1	3	6220-00-283-9732	B-2	30
5310-00-045-3299	B-1	24	5930-00-296-9610	B-11	32
5310-00-045-3299	B-1	33	5930-00-296-9610	B-5	32
5310-00-045-4007	B-2	45	5310-00-435-8983	B-1	31
5310-00-045-4007	B-8	52	5305-00-477-2713	B-4	8
5305-00-051-4075	B-3	44	6640-00-494-0527	B-8	26
5930-00-057-5848	B-2	7	5330-00-542-1329	B-7	34
5310-00-058-3599	B-2	34	5905-00-553-8100	B-7	14
5305-00-058-9362	B-11	17	5940-00-557-1629	B-11	14
5305-00-058-9362	B-5	17	5940-00-557-1629	B-2	16
4720-00-065-8682	BULK	2	5940-00-557-1629	B-5	14
5305-00-068-0513	B-3	22	5940-00-557-1629	B-7	41
4010-00-069-5180	BULK	1	5310-00-559-0070	B-2	15
5310-00-080-6004	B-3	26	5310-00-575-5292	B-2	9
5310-00-081-4219	B-3	43	6145-00-578-7517	BULK	6
5310-00-081-8087	B-11	9	6145-00-578-7519	BULK	7
5310-00-081-8087	B-2	51	6145-00-578-7520	BULK	8
5310-00-081-8087	B-5	9	5310-00-579-0079	B-8	18
5310-00-081-8087	B-8	60	5305-00-582-5808	B-11	4
5310-00-088-0551	B-11	7	5305-00-582-5808	B-5	4
5310-00-088-0551	B-2	12	6145-00-608-5484	BULK	9
5310-00-088-0551	B-5	7	5940-00-615-6073	B-2	11
5310-00-088-0551	B-7	13	5315-00-616-5526	B-4	2
5940-00-113-8179	B-2	35	6210-00-635-4700	B-2	17
5940-00-113-8179	B-7	1	6210-00-635-4700	B-8	12
5940-00-113-9828	B-11	2	5940-00-681-8185	B-7	23
5940-00-113-9828	B-5	2	5940-00-681-8185	B-8	33
5910-00-114-0510	B-11	31	5935-00-715-2756	B-8	58
5910-00-114-0510	B-5	31	5935-00-762-1392	B-9	10
5305-00-115-9406	B-1	32	6240-00-763-7744	B-2	22
5305-00-115-9934	B-1	11	6240-00-763-7744	B-8	8
5305-00-115-9934	B-11	12	5310-00-765-3197	B-1	12
5305-00-115-9934	B-3	12	5310-00-765-3197	B-11	15
5305-00-115-9934	B-5	12	5310-00-765-3197	B-3	13
4730-00-116-2969	B-7	43	5310-00-765-3197	B-5	15
4730-00-116-2969	B-8	30	5310-00-765-3197	B-8	28
5340-00-119-4705	B-3	40	5925-00-768-2035	B-7	8
5961-00-139-9812	B-7	24	9320-00-785-8171	BULK	10
5961-00-139-9812	B-8	34	5310-00-809-4058	B-3	21
5940-00-143-4771	B-2	3	5310-00-809-8544	B-7	37
5940-00-143-4771	B-7	25	5310-00-809-8546	B-7	11
5940-00-143-4771	B-8	47	5310-00-810-1786	B-4	16
5940-00-143-4774	B-7	5	5310-00-811-3494	B-1	18
5940-00-143-4780	B-7	22	5310-00-811-3494	B-10	11
5330-00-143-8571	B-2	29	5310-00-811-3494	B-11	5
3110-00-144-8882	B-4	5	5310-00-811-3494	B-3	19
5305-00-148-1286	B-2	21	5310-00-811-3494	B-5	5
5305-00-148-1286	B-7	20	5310-00-811-3494	B-7	38
6240-00-155-7784	B-2	27	5940-00-813-0698	B-8	15
6240-00-155-7932	B-2	28	5925-00-814-8428	B-7	4
5305-00-157-5621	B-1	22	4730-00-817-1891	B-3	41
5305-00-157-5621	B-10	8	4730-00-817-1891	B-7	27
5305-00-157-5621	B-11	19	5355-00-821-5225	B-2	20
5305-00-157-5621	B-5	19	5305-00-824-7363	B-3	38
5310-00-167-0821	B-4	15	5940-00-825-3697	B-7	30
5310-00-167-0835	B-4	7	5940-00-825-3699	B-2	5
5305-00-179-8946	B-1	2	5940-00-825-3699	B-7	31
5305-00-179-8946	B-10	3	5940-00-825-3699	B-8	49
5305-00-179-8946	B-7	12	5930-00-847-2599	B-8	23
5305-00-179-8946	B-8	5	5930-00-854-7864	B-8	21
5305-00-180-4966	B-3	39	5310-00-877-5797	B-10	9
5310-00-187-2400	B-3	27	5310-00-877-5797	B-2	4
5310-00-199-1056	B-2	19	5310-00-877-5797	B-3	34
5310-00-199-1056	B-8	39	5310-00-877-5797	B-7	9
5945-00-201-9456	B-7	21	5310-00-877-5797	B-8	3
5940-00-204-8966	B-2	8	4030-00-878-8693	B-1	14
5940-00-204-8966	B-7	3	4030-00-878-8693	B-11	25
5305-00-211-8193	B-1	21	4030-00-878-8693	B-3	15
5305-00-211-8193	B-8	29	4030-00-878-8693	B-5	25
5305-00-227-1543	B-2	44	5305-00-889-2999	B-2	32
5305-00-227-1543	B-8	51	6220-00-891-1491	B-2	25
5310-00-227-4882	B-4	6	6240-00-892-4420	B-7	18
4240-00-229-2610	B-1	1	5310-00-897-6081	B-1	35
4240-00-237-0227	B-3	1	5310-00-897-6081	B-9	6
5305-00-242-1264	B-11	11	4730-00-908-6294	B-1	17

STOCK NUMBER	FIGURE NO.	ITEM NO.	STOCK NUMBER	FIGURE NO.	ITEM NO.
4730-00-908-6294	B-10	2	5365-01-053-2593	B-4	13
4730-00-908-6294	B-11	21	9905-01-053-3006	B-2	37
4730-00-908-6294	B-3	18	3120-01-053-5848	B-4	11
4730-00-908-6294	B-5	21	4730-01-053-5923	B-2	38
5935-00-912-9599	B-1	29	4730-01-053-5923	B-8	42
5930-00-913-7960	B-11	30	5975-01-053-6294	B-11	6
5930-00-913-7960	B-5	30	5975-01-053-6294	B-5	6
5305-00-920-0327	B-2	42	5975-01-053-6294	B-7	10
5961-00-924-6981	B-11	29	5975-01-053-6294	B-8	4
5961-00-924-6981	B-5	29	5975-01-053-6294	B-8	45
5961-00-924-6981	B-8	20	5330-01-054-0857	B-9	8
5330-00-928-0290	B-2	41	5305-01-054-2488	B-8	31
5310-00-928-9821	B-1	23	5925-01-054-3452	B-8	14
5310-00-928-9821	B-1	37	5925-01-054-3453	B-8	10
5310-00-934-9748	B-2	10	9905-01-054-4263	B-4	19
5330-00-954-6684	B-2	18	5310-01-054-4643	B-1	28
5330-00-954-6684	B-2	39	4240-01-054-7020	B-3	10
5330-00-954-6684	B-8	41	4240-01-055-1493	B-10	4
5975-00-958-6451	B-7	17	4240-01-055-1493	B-3	36
5975-00-958-6451	B-8	9	5930-01-055-9249	B-7	44
5305-00-978-9369	B-4	12	6135-01-055-9627	B-8	37
5410-00-981-8701	B-1	27	6685-01-056-5283	B-2	49
5310-00-983-8483	B-2	46	6685-01-056-5283	B-8	24
5310-00-983-8483	B-8	53	6105-01-056-9045	B-11	1
5305-00-984-4976	B-2	33	6105-01-056-9045	B-5	1
5305-00-984-6221	B-11	18	4240-01-057-3378	B-3	3
5305-00-984-6221	B-5	18	4240-01-057-3474	B-6	4
5340-00-989-9224	B-7	42	2990-01-057-3475	B-10	1
5340-00-989-9224	B-8	27	3110-01-057-4653	B-4	10
5935-00-990-5580	B-1	30	4520-01-057-7010	B-3	45
5935-00-994-0294	B-9	9	5305-01-057-7206	B-2	24
4720-00-996-0381	BULK	3	5365-01-057-7379	B-3	42
5305-01-006-8953	B-7	32	4140-01-059-2095	B-3	20
4730-01-017-5119	B-1	7	5945-01-059-7074	B-8	48
4730-01-017-5119	B-8	43	4240-01-061-7233	B-9	3
5305-01-031-5092	B-6	3	9905-01-062-0672	B-1	25
5305-01-031-5092	B-8	40	4720-01-063-4567	B-9	12
5305-01-033-2636	B-8	55	9905-01-065-3065	B-7	28
9905-01-048-2790	B-1	26	9905-01-065-9382	B-11	13
4240-01-048-2803	B-1	4	9905-01-065-9382	B-5	13
5340-01-048-6327	B-1	10	9905-01-066-3084	B-3	32
5340-01-048-6327	B-11	20	4240-01-066-3266	B-3	5
5340-01-048-6327	B-3	11	5925-01-067-5437	B-7	6
5340-01-048-6327	B-5	20	4240-01-067-5605	B-3	4
5999-01-048-9865	B-7	26	4240-01-067-8376	B-9	16
5999-01-048-9866	B-8	13	9905-01-067-8634	B-3	31
5999-01-048-9867	B-8	50	4730-01-067-9232	B-1	36
4240-01-049-0804	B-1	34	4730-01-064-9232	B-9	5
4730-01-049-0805	B-9	1	5330-01-068-0515	B-3	30
9905-01-049-1385	B-1	20	4240-01-068-2354	B-9	13
5930-01-050-4362	B-8	16	4240-01-068-2355	B-9	17
5999-01-050-4635	B-2	43	9905-01-068-2368	B-1	19
5999-01-050-4635	B-8	54	4240-01-068-8645	B-3	7
5999-01-050-4636	B-2	47	5930-01-068-8812	B-8	32
4730-01-050-7540	B-1	5	5330-01-069-9824	B-3	24
4730-01-050-7540	B-9	4	4240-01-069-9827	B-9	14
9905-01-050-7556	B-11	28	5999-01-070-8434	B-8	57
9905-01-050-7556	B-5	28	9905-01-071-5711	B-3	2
9905-01-050-7557	B-3	33	9330-01-073-1011	BULK	11
9905-01-051-0186	B-11	27	4240-01-073-3439	B-9	15
9905-01-051-0186	B-5	27	5999-01-074-8880	B-6	1
9905-01-051-0187	B-10	6	4720-01-074-9220	B-9	11
6135-01-052-3744	B-8	59	5915-01-075-7240	B-11	33
9905-01-052-3766	B-8	56	5915-01-075-7240	B-5	33
4240-01-052-3783	B-9	2	5330-01-085-3267	B-2	48
5930-01-052-7684	B-2	23	5330-01-088-4442	B-10	5
5930-01-052-7684	B-8	7	5330-01-088-4442	B-3	35
4320-01-052-7999	B-4	4	5950-01-091-8626	B-7	39
4720-01-053-0316	BULK	4	5915-01-096-8853	B-7	35
6135-01-053-0564	B-8	36	4720-01-106-4602	BULK	5
5305-01-053-0958	B-7	15	4240-01-107-2433	B-3	23
5305-01-053-0959	B-7	19	5930-01-108-2588	B-8	22
5305-01-053-0960	B-7	33	6645-01-113-2525	B-2	14

FSCM	PART NUMBER	FIGURE NO.	ITEM NO.	FSCM	PART NUMBER	FIGURE NO.	ITEM NO.
88044	AN960-416L	B-4	7	88044	AN960PD616	B-3	27
88044	AN960-616	B-4	15	70494	A5S	B-7	43

FSCM	PART NUMBER	FIGURE NO.	ITEM NO.	FSCM	PART NUMBER	FIGURE NO.	ITEM NO.
70494	A5S	B-8	30	81361	D5-19-6260	B-3	29
81361	B5-19-5710	B-8	19	81361	D5-19-6262	B-3	5
81361	B5-19-6030-1	B-4	13	81361	D5-19-6353	B-7	38
81361	B5-19-6081	B-4	4	81361	D5-19-6368	B-3	6
81361	B5-19-6133	B-3	33	81361	D5-19-6378	B-8	6
81361	B5-19-6134	B-3	31	81361	D5-19-6392	B-6	1
81361	B5-19-6147	B-11	27	81361	D5-19-6397	B-7	39
81361	B5-19-6147	B-5	27	81361	D5-19-6401	B-3	45
81361	B5-19-6148	B-11	28	81361	D5-19-6625	B-10	10
81361	B5-19-6148	B-5	28	81361	D5-19-6628	B-9	18
81361	B5-19-6238	B-1	26	81361	D5-19-6628-14	B-10	12
81361	B5-19-6254	B-4	11	81361	E5-19-5908	B-9	3
81361	B5-19-6261-1	B-7	44	81361	E5-19-6120	B-3	23
81361	B5-19-6347	B-3	42	81361	E5-19-6128	B-3	25
81361	B5-19-6362	B-2	38	81361	E5-19-6136	B-10	4
81361	B5-19-6362	B-8	42	81361	E5-19-6136	B-3	36
81361	B5-19-6656	B-10	6	81361	E5-19-6201-40	B-1	1
81361	B5-19-6659	B-8	59	81361	E5-19-6240	B-3	20
81361	B5-19-6716	BULK	5	81361	E5-19-6241	B-4	1
99862	CL-2-C-8.0	B-11	24	81361	E5-19-6251	B-4	17
99862	CL-2-C-8.0	B-1	15	81361	E5-19-6314-20	B-3	10
99862	CL-2-C-8.0	B-3	16	81361	E5-19-6357	B-1	4
99862	CL-2-C-8.0	B-5	24	81361	E5-19-6357-111	B-1	6
99862	CL-2-FANDCL-2-C-8.0	B-11	23	81361	E5-19-6357-47	B-2	50
99862	CL-2-FANDCL-2-C-8.0	B-1	13	81361	E5-19-6358	B-2	40
99862	CL-2-FANDCL-2-C-8.0	B-3	14	81361	E5-19-6360	B-2	1
99862	CL-2-FANDCL-2-C-8.0	B-5	23	81361	E5-19-6376	B-3	3
99862	CL2C	BULK	1	81361	E5-19-6376-155	B-2	23
99862	CL2F	B-11	25	81361	E5-19-6376 155	B-8	7
99862	CL2F	B-1	14	81361	E5-19-6376-159	B-8	22
99862	CL2F	B-3	15	81361	E5-19-6376-46	B-8	25
99862	CL2F	B-5	25	81361	E5-19-6377	B-8	38
09823	CS1004	B-8	36	81361	E5-19-6387	B-3	7
09823	CS1005	B-8	37	81361	E5-19-6390	B-6	2
30327	C403	B-9	7	81361	E5-19-6391	B-6	4
30327	C403	BULK	2	81361	E5-19-6391-52	B-7	29
81361	C5-19-5676	B-2	36	81361	E5-19-6402	B-3	1
81361	C5-19-5687-1	B-3	30	81361	E5-19-6402-7	B-3	9
81361	C5-19-5687-2	B-3	24	81361	E5-19-6402-8	B-3	8
81361	C5-19-6144	B-11	16	81361	E9-19-6137	B-11	26
81361	C5-19-6144	B-5	16	81361	E9-19-6137	B-5	26
81361	C5-19-6145	B-11	20	92830	F1240-008	B-4	6
81361	C5-19-6145	B-1	10	81349	JAN1N4245	B-11	29
81361	C5-19-6145	B-3	11	81349	JAN1N4245	B-5	29
81361	C5-19-6145	B-5	20	81349	JAN1N4245	B-8	20
81361	C5-19-6149	B-11	13	81349	JAN1N5557	B-7	24
81361	C5-19-6149	B-5	13	81349	JAN1N5557	B-8	34
81361	C5-19-6152	B-11	33	30327	KF03-02PS	B-1	7
81361	C5-19-6152	B-5	33	30327	KF03-02PS	B-8	43
81361	C5-19-6175	B-1	20	30327	KF03-04RV	B-1	5
81361	C5-19-6180	B-9	2	30327	KF03-04RV	B-9	4
81361	C5-19-6182	B-9	1	79919	K35B1	B-2	20
81361	C5-19-6197	B-2	43	81349	ML-R-3065	BULK	10
81361	C5-19-6197	B-8	54	96906	MS16997-31	B-4	12
81361	C5-19-6236	B-1	34	96906	MS17143-10	B-2	5
81361	C5-19-6247	B-4	3	96906	MS17143-10	B-7	31
81361	C5-19-6255	B-4	10	96906	MS17143-10	B-8	49
81361	C5-19-6258-1	B-4	19	96906	MS17143-11	B-7	30
81361	C5-19-6309	B-11	22	96906	MS21042-6	B-4	16
81361	C5-19-6309	B-1	16	96906	MS21044N04	B-11	7
81361	C5-19-6309	B-3	17	96906	MS21044N04	B-2	12
81361	C5-19-6309	B-5	22	96906	MS21044N04	B-5	7
81361	C5-19-6316-12	B-1	25	96906	MS21044N04	B-7	13
81361	C5-19-6316-4	B-2	37	96906	MS21044N06	B-11	9
81361	C5-19-6316-6	B-7	28	96906	MS21044N06	B-2	51
81361	C5-19-6316-7	B-8	56	96906	MS21044N06	B-5	9
81361	C5-19-6382	B-8	57	96906	MS21044N06	B-8	60
81361	C5-19-6383	B-8	48	96906	MS21044N08	B-10	11
81361	C5-19-6415	B-7	26	96906	MS21044N08	B-11	5
81361	C5-19-6626	B-10	7	96906	MS21044N08	B-1	18
81361	C5-19-6627	B-10	1	96906	MS21044N08	B-3	19
81361	C5-19-6654	B-1	36	96906	MS21044N08	B-5	5
81361	C5-19-6654	B-9	5	96906	MS21044N08	B-7	38
81361	C5-19-6688	B-8	13	96906	MS21044N3	B-10	9
81361	D5-19-6138	B-11	8	96906	MS21044N3	B-2	4
81361	D5-19-6138	B-5	8	96906	MS21044N3	B-3	34
81361	D5-19-6193-10	B-8	50	96906	MS21044N3	B-7	9
81361	D5-19-6193-20	B-2	47	96906	MS21044N3	B-8	3
81361	D5-19-6242	B-4	9	96906	MS24143D1	B-7	21
81361	D5-19-6252	B-4	14	96906	MS24658-21M	B-2	7

FSCM	PART NUMBER	FIGURE NO.	ITEM NO.	FSCM	PART NUMBER	FIGURE NO.	ITEM NO.
96906	MS24660-23D	B-8	23	96906	MS35430-4	B-7	23
96906	MS24679-2	B-1	23	96906	MS35430-4	B-8	33
96906	MS24679-2	B-1	37	96906	MS35478-307	B-2	27
96906	MS25036-101	B-8	15	96906	MS35649-244	B-2	10
96906	MS25036-102	B-2	8	96906	MS35650-3385	B-2	19
96906	MS25036-102	B-7	3	96906	MS35650-3385	B-8	39
96906	MS25036-103	B-2	3	96906	MS35691-32	B-1	35
96906	MS25036-103	B-7	25	96906	MS35691-32	B-9	6
96906	MS25036-103	B-8	47	96906	MS35756-8	B-4	2
96906	MS25036-107	B-2	35	96906	MS35842-16	B-10	2
96906	MS25036-107	B-7	1	96906	MS35842-16	B-11	21
96906	MS25036-108	B-7	22	96906	MS35842-16	B-1	17
96906	MS25036-148	B-11	2	96906	MS35842-16	B-3	18
96906	MS25036-148	B-5	2	96906	MS35842-16	B-5	21
96906	MS25036-149	B-11	14	96906	MS51849-13	B-11	11
96906	MS25036-149	B-2	16	96906	MS51849-13	B-5	11
96906	MS25036-149	B-5	14	96906	MS51849-14	B-7	15
96906	MS25036-149	B-7	41	96906	MS51849-33	B-2	44
96906	MS25036-152	B-2	11	96906	MS51849-33	B-8	51
96906	MS25036-153	B-7	5	96906	MS51849-53	B-1	32
81349	MS25085-2	B-11	30	96906	MS51849-54	B-1	21
81349	MS25085-2	B-5	30	96906	MS51849-54	B-8	29
96906	MS25235R311	B-2	28	96906	MS51849-55	B-11	12
96906	MS25281R6	B-7	42	96906	MS51849-55	B-1	11
96906	MS25281R6	B-8	27	96906	MS51849-55	B-3	13
96906	MS25358-3	B-2	26	96906	MS51849-55	B-5	12
96906	MS25358-4	B-2	30	96906	MS51849-56	B-10	8
96906	MS25358-5	B-2	31	96906	MS51849-56	B-11	19
96906	MS25358-6	B-2	29	96906	MS51849-56	B-1	22
96906	MS25358-7	B-2	25	96906	MS51849-56	B-5	19
96906	MS27183-10	B-3	21	96906	MS51849-64	B-3	39
96906	MS27183-12	B-3	43	96906	MS51849-66	B-10	3
96906	MS27183-14	B-3	26	96906	MS51849-66	B-1	2
96906	MS27183-41	B-11	15	96906	MS51849-66	B-7	12
96906	MS27183-41	B-1	12	96906	MS51849-66	B-8	5
96906	MS27183-41	B-3	13	96906	MS51977-19	B-11	17
96906	MS27183-41	B-5	15	96906	MS51977-19	B-5	17
96906	MS27183-41	B-8	28	96906	MS90484-20-1	B-9	8
96906	MS27183-42	B-3	37	96906	MS90727-33	B-3	44
96906	MS27183-42	B-8	2	96906	MS90727-6	B-3	22
96906	MS27183-42	B-8	44	96906	MS90727-64	B-3	28
96906	MS27183-5	B-2	46	96906	MS9352-05	B-3	40
96906	MS27183-5	B-8	53	81349	M15098/11-001	B-7	18
96906	MS27183-7	B-7	37	81349	M39014/01-1581	B-11	31
96906	MS27183-8	B-7	11	81349	M39014/01-1581	B-5	31
96906	MS28775-120	B-7	34	81349	M5086/1-16-9	B-2	6
96906	MS29513-019	B-1	9	81349	M5086/1-16-9	B-7	36
96906	MS29513-024	B-1	8	81349	M5086/1-16-9	BULK	6
96906	MS3116P16-8P	B-4	18	81349	M5086/1-20-9	B-11	3
96906	MS3119E20-16	B-9	9	81349	M5086/1-20-9	B-2	2
96906	MS3126F10-6S	B-8	58	81349	M5086/1-20-9	B-5	3
96906	MS3181-10N	B-1	29	81349	M5086/1-20-9	B-7	2
96906	MS3181-14N	B-1	30	81349	M5086/1-20-9	B-8	46
96906	MS3181-20C	B-9	10	81349	M5086/1-20-9	BULK	7
96906	MS3186-34	B-1	28	81349	M5086/1-22-9	B-11	10
96906	MS3186-43	B-1	31	81349	M5086/1-22-9	B-2	13
96906	MS3213-11	B-8	31	81349	M5086/1-22-9	B-5	10
96906	MS3213-13	B-8	55	81349	M5086/1-22-9	B-7	40
96906	MS3213-14	B-7	19	81349	M5086/1-22-9	B-8	13
96906	MS3213-24	B-7	33	81349	M5086/1-22-9	BULK	8
96906	MS3213-27	B-7	32	81349	M7078-3-22-1	B-11	34
96906	MS3213-33	B-6	3	81349	M7078-3-22-1	B-5	34
96906	MS3213-33	B-8	40	81349	M7078-3-22-1	BULK	9
96906	MS3213-36	B-2	21	80205	NAS1096-3-12	B-3	38
96906	MS3213-36	B-7	20	80205	NAS1351-4-12	B-4	8
96906	MS3213-5	B-2	24	80205	NAS1598-06Y	B-2	41
96906	MS35206-217	B-2	32	80205	NAS1598-6Y	B-2	18
96906	MS35206-219	B-2	33	80205	NAS1598-6Y	B-2	39
96906	MS35206-234	B-11	18	80205	NAS1598-6Y	B-8	41
96906	MS35206-234	B-5	18	07137	PTL-A1 (3-C7A)	B-7	16
96906	MS35265-31	B-11	4	33107	P92-1020	B-2	49
96906	MS35265-31	B-5	4	33107	P92-1020	B-8	24
96906	MS35333-37	B-8	18	81349	RER70F1100R	B-7	14
96906	MS35333-38	B-2	15	37942	SC628M	B-8	17
96906	MS35335-57	B-2	34	09922	TF-5H	B-11	6
96906	MS35338-41	B-2	45	09922	TF-5H	B-5	6
96906	MS35338-41	B-8	52	09922	TF-5H	B-7	10
96906	MS35338-42	B-1	24	09922	TF-5H	B-8	4
96906	MS35338-42	B-1	33	09922	TF-5H	B-8	45
96906	MS35338-43	B-1	3	76854	VM911MB	B-2	17

FSCM	PART NUMBER	FIGURE NO.	ITEM NO.	FSCM	PART NUMBER	FIGURE NO.	ITEM NO.
76854	VM911M8	B-8	12	81361	5-19-6261-2	B-8	32
81348	W-L-00111/7	B-2	22	81361	5-19-6316-9	B-3	2
81348	W-L-00111/7	B-8	8	81361	5-19-6348	B-10	5
81348	ZZ-R-765	BULK	11	81361	5-19-6348	B-3	35
30299	0120-0600-0106	B-9	17	81361	5-19-6361	B-2	48
30299	0120-0600-0109	B-9	11	81361	5-19-6657	B-1	19
18876	10231240	B-7	4	81361	5-19-6691	B-9	14
94135	1227903-178	B-11	32	81361	5-19-6693	B-9	13
94135	1227903-178	B-5	32	81361	5-19-6718	B-3	4
82647	14500-1	B-7	17	25140	5A3128	B-11	1
82647	14500-1	B-8	9	25140	5A3128	B-5	1
38443	201SFF	B-4	5	12909	500881	B-2	42
30327	261P1-4	B-3	41	05178	6152	B-8	26
30327	261P1-4	B-7	27	82647	6752-320-20	B-7	6
83330	2660	B-2	9	79919	71015	B-2	14
81349	37TB10	B-8	35	82647	7274-12-1	B-7	7
04426	44-5B0151AAAA	B-8	16	82647	7274-12-1	B-8	11
30327	44PGREEN	BULK	4	82647	7274-12-1-1-2	B-7	8
30327	44PRED	BULK	3	82647	7274-34-1	B-8	14
81361	5-19-6135	B-3	32	82647	7274-34-3/4	B-8	10
81361	5-19-6162-10	B-9	15	01943	8173	B-1	27
81361	5-19-6170-10	B-9	16	18876	9745533	B-8	21
81361	5-19-6170-40	B-9	17				



## APPENDIX C EXPENDABLE SUPPLIES AND MATERIALS LIST

### Section I. INTRODUCTION

**C-1. SCOPE.** This appendix lists expendable supplies and materials you will need to operate and maintain the collective protection equipment. These items are authorized to you by CTA 50-970, Expendable items (Except Medical, Class V, Repair Parts, and Heraldic Items).

**C-2. EXPLANATION OF COLUMNS.**

a. *Column 1, Item Number.* This number is assigned to the entry in the listing and is referenced in the narrative instructions to identify the material (e.g., "Use dry-cleaning solvent, item 4, app C").

b. *Column 2, Level* This column identifies the lowest level of maintenance that requires the listed item.

- O - Organizational Maintenance
- F - Direct Support Maintenance

c. *Column 3, National Stock Number.* This is the National stock number assigned to the item; use it to request or requisition the item.

d. *Column 4, Description.* Indicates the Federal item name and, if required, a description to identify the item. The last line for each item indicates the Federal Supply Code for Manufacturer (FSCM) in parentheses followed by the part number.

e. *Column 5, Unit of Measure ((U/M).* Indicates the measure used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in., pr). If the unit of measure differs from the unit of issue, requisition the lowest unit of issue that will satisfy your requirements.

### Section II EXPENDABLE SUPPLIES AND MATERIALS LIST

(1) ITEM NUMBER	(2) LEVEL	(3) NATIONAL STOCK NUMBER	(4) DESCRIPTION	(5) U/M
1	O	8040-00-165-8614	ADHESIVE, BONDING VULCANIZED: (81348) MMM-A-121 1 qt can	QT
2	O	7920-00-543-7728	BRUSH, ACID SWABBING: bristle (81348) HB643	EA
3	O	8010-01-055-2319	COATING, ALIPHATIC POLYURETHANE: two part kit, 1 gal pigment and polyester, 1 qt catalyst (81349) MIL-C-46168	KT
4	O	6850-00-281-1985	DRY CLEANING SOLVENT: 1 gal can (81348) P-D-680	GL
5	F	9150-00-944-8953	GREASE, AIRCRAFT, GENERAL PURPOSE: wide temperature range (81349) MIL-G-81322 1 lb can	CN

(1)	(2)	(3)	(4)	(5)
ITEM NUMBER	LEVEL	NATIONAL STOCK NUMBER	DESCRIPTION	U/M
6	F	5970-00-812-2969	INSULATION SLEEVING: BLACK,MF 100, 1/8 X 1 FT. LG. (06090)	FT
7	0	8010-00-142-9279	PRIMER COATING: 1 QT, TWO QUART KIT, CLASS 2 (81349) MIL-P-23377	KT
8	0	7920-00-205-1711	RAG, WIPING: COTTON DESIGNED FOR GENERAL PURPOSE USE (81348) DDD-R-30 50 LB BALE	EA
9	F	8030-00-889-3535	TAPE, ANTISEIZING: 1/2 IN. WIDE, 260 IN. LG (81349) MIL-T-27730	EA
10	O	7510-00-663-3738	TAPE: OLIVE DRAB, 3 WIDE TYPE 3, CLASS 1 (80244) PPP-T-60 ROLL	EA




## APPENDIX D ILLUSTRATED LIST OF MANUFACTURED ITEMS

---

### D-1. INTRODUCTION.

a. This appendix includes complete instructions for making items authorized to be manufactured or fabricated at direct support maintenance level.


b. All bulk materials needed for manufacture of an item are listed by National Stock Number in a tabular list on the illustration.

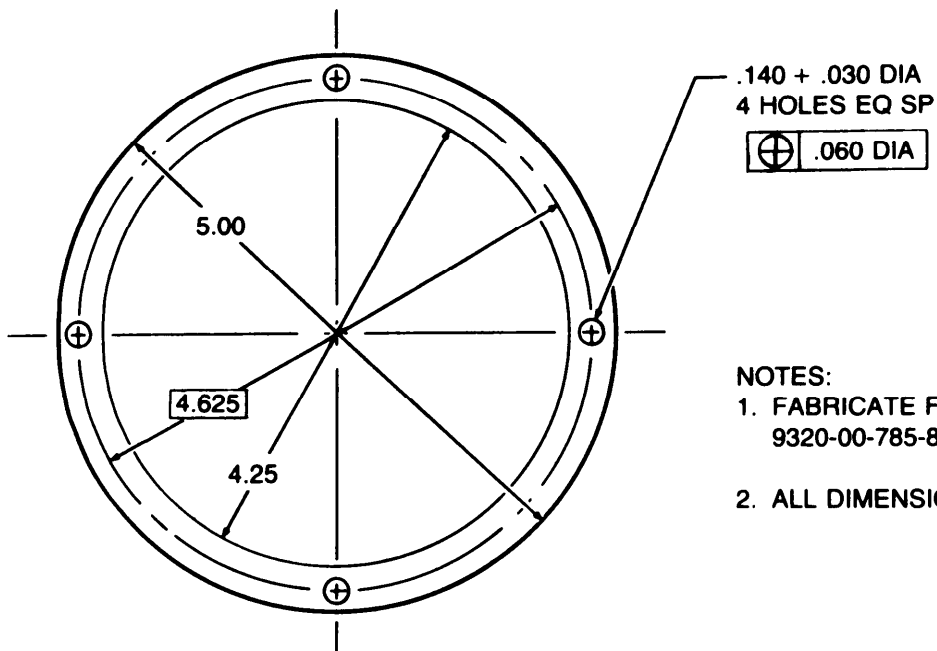

**NOTES:**

1. FABRICATE FROM NSN 9320-00-785-8171 STOCK.
2. ALL DIMENSIONS ARE IN INCHES.

*Figure D-1. Gasket*

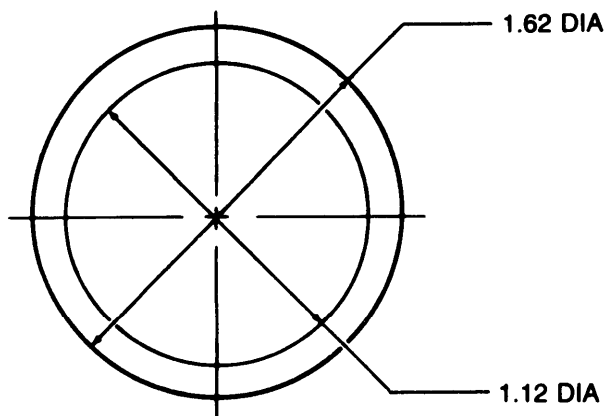

**NOTES:**

1. FABRICATE FROM NSN 9320-00-785-8171 STOCK.
2. ALL DIMENSIONS ARE IN INCHES.

*Figure D-2. Gasket*



# INDEX

<i>Subject</i>	<i>Page</i>	<i>Subject</i>	<i>Page</i>
<b>A</b>		<b>M</b>	
Airflow Valve		Main Fan	
Maintenance Instructions . . . . .	2-150	Maintenance Instructions . . . . .	2-144
Troubleshooting . . . . .	2-33	Troubleshooting . . . . .	2-32
Appendix A, References . . . . .	A-1	Maintenance Forms and Records . . . . .	1-1
Appendix B, Repair Parts and Special Tools		Maintenance Instructions	
List . . . . .	B-1	Airflow Valve . . . . .	2-150
Appendix C, Expendable Supplies and Materials		Compartment Control Module . . . . .	2-171
List . . . . .	C-1	Main Fan . . . . .	2-144
Appendix D, Illustrated List of Manufactured		Power Distribution Unit . . . . .	2-161
Items . . . . .	D-1	Protective Entrance Control Module . . . . .	2-137
<b>C</b>		<b>P</b>	
Compartment Control Module		Power Distribution Unit	
Maintenance Instructions . . . . .	2-171	Maintenance Instructions . . . . .	2-162
Troubleshooting . . . . .	2-63	Troubleshooting . . . . .	2-39
<b>D</b>		Pressure Control System . . . . .	1-2
Destruction of Materiel to Prevent		Principles of Operation . . . . .	1-2
Enemy Use . . . . .	1-1	Protective Entrance Control Module	
<b>E</b>		Maintenance Instructions . . . . .	2-137
Expendable Supplies and Materials List,		Troubleshooting . . . . .	2-2
Appendix C . . . . .	C-1	<b>R</b>	
<b>F</b>		References, Appendix A . . . . .	A-1
Flowchart Procedures . . . . .	2-1	Repair Parts and Special Tools List, Appendix B	B-1
<b>L</b>		Reporting Equipment improvement Recommen-	1-1
Loss of Power/Pressure Warning System . . . . .	1-4	dations . . . . .	
		<b>T</b>	
		Troubleshooting	
		Airflow Valve . . . . .	2-33
		Compartment Control Module . . . . .	2-63
		Main Fan . . . . .	2-32
		Power Distribution Panel . . . . .	2-39
		Protective Entrance Control Module . . . . .	2-2



RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT. FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

Your mailing address

DATE SENT

Date you fill out this form

PUBLICATION NUMBER

TM 3-4240-284-30&P

PUBLICATION DATE

PUBLICATION TITLE COLLECTIVE PROTECTION EQUIPMENT FIRE DIRECTION SYSTEM, ARTILLERY, (TACFIRE) AN/GSG-10(V)

BE EXACT...PIN-POINT WHERE IT IS

PAGE NO.	PARA-GRAPH	FIGURE NO.	TABLE NO.
1-1	1-4		
2-28	2-12		
2-43	2-14		

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

ITEM 1. LINE 12. Change "Rock Island, IL 61201" to read, "Aberdeen Proving Ground, MD 21010."  
REASON: Wrong address.

ITEM 2. Test equipment. Add, "28V dc power supply capable of delivery 2 amps"  
REASON: Incomplete information.

ITEM 3. Add callout "20" to the shaft slinger in the illustration.  
REASON: Callout missing from illustration.

**SAMPLE**

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

JOHN SMITH, S.SGT. 793/XXXX

SIGN HERE

*John Smith*

DA FORM 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE.

P.S. --IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

TEAR ALONG DOTTED LINE



RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT. FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER  
TM 3-4240-284-30&P

PUBLICATION DATE

PUBLICATION TITLE COLLECTIVE PROTECTION EQUIPMENT FIRE DIRECTION SYSTEM, ARTILLERY, (TACFIRE) AN/GSG-10(V)

BE EXACT...PIN-POINT WHERE IT IS

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

PAGE NO.	PARA-GRAPH	FIGURE NO.	TABLE NO.

TEAR ALONG DOTTED LINE

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE

REVERSE OF DA FORM 2028-2

FILL IN YOUR  
UNIT'S ADDRESS



FOLD BACK

DEPARTMENT OF THE ARMY

---

---

Commander  
US Army Armament Materiel Readiness Command  
ATTN: DRSAR-MAS-C  
Aberdeen Proving Ground, MD 21010

TEAR ALONG DOTTED LINE



RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



SOMETHING WRONG WITH THIS PUBLICATION?

THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT. FOLD IT AND DROP IT IN THE MAIL!

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

TM 3-4240-284-30&P

PUBLICATION DATE

PUBLICATION TITLE COLLECTIVE PROTECTION EQUIPMENT FIRE DIRECTION SYSTEM, ARTILLERY, (TACFIRE) AN/GSG-10(V)

BE EXACT...PIN-POINT WHERE IT IS

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

PAGE NO.	PARA-GRAPH	FIGURE NO.	TABLE NO.
----------	------------	------------	-----------

TEAR ALONG DOTTED LINE

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE

DA FORM 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE.

P.S. --IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

REVERSE OF DA FORM 2026-2

FILL IN YOUR  
UNIT'S ADDRESS



FOLD BACK

DEPARTMENT OF THE ARMY

---

---

TEAR ALONG DOTTED LINE

Commander  
US Army Armament Materiel Readiness Command  
ATTN: DRSAR-MAS-C  
Aberdeen Proving Ground, MD 21010

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT. FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

TM 3-4240-284-30&P

PUBLICATION DATE

PUBLICATION TITLE

COLLECTIVE PROTECTION

EQUIPMENT FIRE DIRECTION SYSTEM, ARTILLERY, (TACFIRE) AN/GSG-10(V)

BE EXACT...PIN-POINT WHERE IT IS

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

PAGE NO.	PARA-GRAPH	FIGURE NO.	TABLE NO.

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE

TEAR ALONG DOTTED LINE

FILL IN YOUR  
UNIT'S ADDRESS



FOLD BACK

**DEPARTMENT OF THE ARMY**

---

---

TEAR ALONG DOTTED LINE

Commander  
US Army Armament Materiel Readiness Command  
ATTN: DRSAR-MAS-C  
Aberdeen Proving Ground, MD 21010

By Order of the Secretary of the Army:

Official:

E. C. MEYER  
*General, United States Army*  
*Chief of Staff*

ROBERT M. JOYCE  
*Brigadier General, United States Army*  
*The Adjutant General*

DISTRIBUTION :

To be distributed in accordance with DA Form 12-28, Direct and General Support Maintenance Requirements for Collective Protection Equipment and DA Form 12-32, Direct and General Support Maintenance Requirements for AN/TSQ-73 Missile System.





