

FUNCTION GENERATOR

3314A



MODEL 3314A FUNCTION GENERATOR

SERIAL NUMBERS

This manual applies directly to instruments with serial numbers prefixed 2734A.

With changes described in Section VII, this manual also applies to instruments with serial numbers prefixed 2141A and 2505A.

For additional important information about serial numbers, see **MANUAL AND INSTRUMENT IDENTIFICATION** in Section I.

**Manual Part No. 03314-90025
Microfiche Part No. 03314-90225**

Copyright © 1982,1987, Hewlett-Packard Company
8600 Soper Hill Road, Everett, Washington 98205-1298 U.S.A.

Notice

Hewlett-Packard to Agilent Technologies Transition

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, semiconductor products and chemical analysis businesses are now part of Agilent Technologies. To reduce potential confusion, the only change to product numbers and names has been in the company name prefix: where a product name/number was HP XXXX the current name/number is now Agilent XXXX. For example, model number HP8648 is now model number Agilent 8648.

Contacting Agilent Sales and Service Offices

The sales and service contact information in this manual may be out of date. The latest service and contact information for your location can be found on the Web at:

<http://www.agilent.com/find/assist>

If you do not have access to the Internet, contact your field engineer or the nearest sales and service office listed below. In any correspondence or telephone conversation, refer to your instrument by its model number and full serial number.

United States

(tel) 1 800 452 4844

(fax) 1 800 829 4433

Canada

(tel) +1 877 894 4414

(fax) +1 888 900 8921

Europe

(tel) (31 20) 547 2323

(fax) (31 20) 547 2390

Latin America

(tel) (305) 269 7500

(fax) (305) 269 7599

Japan

(tel) (81) 426 56 7832

(fax) (81) 426 56 7840

Australia

(tel) 1 800 629 485

(fax) (61 3) 9210 5947

New Zealand

(tel) 0 800 738 378

(fax) 64 4 495 8950

Asia Pacific

(tel) (852) 3197 7777

(fax) (852) 2506 9284



Agilent Technologies

CERTIFICATION

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

This Hewlett-Packard product is warranted against defects in material and workmanship for a period of one year from date of shipment. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by -hp-. Buyer shall prepay shipping charges to -hp- and -hp- shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to -hp- from another country.

HP software and firmware products which are designated by HP for use with a hardware product, when properly installed on that hardware product, are warranted not to fail to execute their programming instructions due to defects in materials and workmanship. If HP receives notice of such defects during their warranty period, HP shall repair or replace software media and firmware which do not execute their programming instructions due to such defects. HP does not warrant that the operation of the software, firmware or hardware shall be uninterrupted or error free.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HEWLETT-PACKARD SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HEWLETT-PACKARD SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

ASSISTANCE

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.



SAFETY SUMMARY

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements. This is a Safety Class 1 instrument.

GROUND THE INSTRUMENT

To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument is equipped with a three-conductor ac power cable. The power cable must either be plugged into an approved three-contact electrical outlet or used with a three-contact to two-contact adapter with the grounding wire (green) firmly connected to an electrical ground (safety ground) at the power outlet. The power jack and mating plug of the power cable meet International Electrotechnical Commission (IEC) safety standards.

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

KEEP AWAY FROM LIVE CIRCUITS

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power and discharge circuits before touching them.

DO NOT SERVICE OR ADJUST ALONE

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the instrument. Return the instrument to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

DANGEROUS PROCEDURE WARNINGS

Warnings, such as the example below, precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.

WARNING

Dangerous voltages, capable of causing death, are present in this instrument. Use extreme caution when handling, testing, and adjusting.

A

SAFETY SYMBOLS


General Definitions of Safety Symbols Used On Equipment or In Manuals.



Instruction manual symbol: the product will be marked with this symbol when it is necessary for the user to refer to the instruction manual in order to protect against damage to the instrument.




Indicates dangerous voltage (terminals fed from the interior by voltage exceeding 1000 volts must be so marked)



Protective conductor terminal For protection against electrical shock in case of a fault. Used with field wiring terminals to indicate the terminal which must be connected to ground before operating equipment.



Low-noise or noiseless, clean ground (earth) terminal. Used for a signal common, as well as providing protection against electrical shock in case of a fault. A terminal marked with this symbol must be connected to ground in the manner described in the installation (operating) manual, and before operating the equipment.



Frame or chassis terminal. A connection to the frame (chassis) of the equipment which normally includes all exposed metal structures.



Alternating current (power line).



Direct current (power line).



Alternating or direct current (power line).

WARNING

The **WARNING** sign denotes a hazard. It calls attention to a procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in injury or death to personnel.

CAUTION

The **CAUTION** sign denotes a hazard. It calls attention to an operating procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product

NOTE :

The **NOTE** sign denotes important information. It calls attention to procedure, practice, condition or the like, which is essential to highlight.

TABLE OF CONTENTS

Section	Page	Section	Page
I. GENERAL INFORMATION	1-1	4-9. Sine Wave Harmonics	4-11
1-1. Introduction	1-1	4-10. AM Harmonics	4-12
1-2. Manual and Instrument Identificaton	1-1	4-11. VCO Linearity	4-12
1-3. Description	1-1	4-12. Phase Locked Loop Phase Accuracy	4-13
1-4. Options	1-1	4-13. Amplitude Accuracy	4-15
1-5. Supplied Accessories	1-1	4-14. Sine Wave Power Flatness	4-16
1-6. Specifications	1-2	4-15. Manual Sweep Accuracy	4-18
1-7. Safety Considerations	1-4	4-16. Step Attenuator Accuracy	4-18
1-8. Grounding	1-4	4-17. Vernier Attenuator Flatness	4-20
1-9. Recommended Test Equipment	1-4	4-18. Option 001 Performance Tests	4-22
1-10. Operator Maintenance	1-4	4-19. X3 Gain Accuracy	4-22
1-11. Available Equipment	1-4	4-20. Sine Power Flatness	4-23
		4-21. Harmonic Distortion	4-23
Section	Page	4-22. Square Wave Rise/Fall Time	4-24
II. INSTALLATION	2-1	4-23. Residual DC Offset	4-25
2-1. Introduction	2-1	Performance Test Record	4-27
2-2. Initial Inspection	2-1		
2-3. Mating Connectors	2-1	Section	Page
2-4. Line Voltage Selection	2-1	V. ADJUSTMENTS	5-1
2-5. Z-Axis Polarity Selection	2-2	5-1. Introduction	5-1
2-6. HP-IB Address Selection	2-2	5-2. Battery Voltage and Current Drain Check	5-1
2-7. Power On and Operator's Check	2-2	5-3. Power Supply Adjustment	5-2
2-8. What to do in Case of Difficulty	2-3	5-4. 5V Switching Supply Frequency Check	5-3
2-9. Option 001: Pre-Installation and Ordering Information	2-3	5-5. Crystal Oscillator Frequency Check	5-3
2-10. Installation (Option 001)	2-4	5-6. RAM/ROM Test	5-3
2-11. How to Install A3CR123 (Serial numbers 2141A00101 through 214A00150 only)	2-4	5-7. Amplitude Calibration Reference Voltage Check	5-4
2-12. How to Install Option 001	2-5	5-8. Multiplex DAC Offset Adjustment	5-5
2-13. Re-packaging a 3314A	2-6	5-9. Frequency Accuracy Calibration Adjustment	5-5
2-14. Installing Accessories	2-6	5-10. Z-Axis Polarity Observation	5-5
Section	Page	5-11. Log Sweep Start Frequency Adjustment	5-6
III. OPERATION	3-1	5-12. Linear Sweep Start Frequency Adjustment	5-7
3-1. Introduction	3-1	5-13. DC Offset Adjustment	5-8
HP-IB Programming Summary	blue	5-14. Phase Lock Phase Adjustment	5-8
Section	Page	5-15. Symmetry Adjustment	5-10
IV. PERFORMANCE TESTS	4-1	5-16. Hold Phase Zero Adjustment	5-11
4-1. Introduction	4-1	5-17. DC/AC Balance Adjustment	5-11
4-2. Frequency Accuracy Test	4-1	5-18. Low Frequency Harmonic Distortion Adjustment	5-13
4-3. Time Axis and Variable Symmetry	4-3	5-19. Amplitude Calibration Pad Selection	5-14
4-4. Internal Trigger Accuracy	4-4	5-20. High Frequency Harmonic Distortion Adjustment	5-16
4-5. Triangle Linearity	4-5		
4-6. Start/Stop Phase Accuracy	4-7		
4-7. Residual DC and DC Offset Accuracy	4-8		
4-8. Square Wave Rise Time and Aberrations	4-9		

TABLE OF CONTENTS (Cont'd)

<p>5-21. Attenuator High Frequency Compensation Adjustment 5-17</p> <p>5-22. X3 (Option 001) Functional Check 5-18</p> <p>5-23. X3 (Option 001) Square Wave Rise/Fall Time and Overshoot Adjustment 5-19</p> <p>TROUBLESHOOTING REFERENCE GUIDE</p> <p>Frequency Accuracy 5-23</p> <p>Time Axis and Variable Symmetry 5-23</p> <p>Internal Trigger Accuracy 5-23</p> <p>Triangle Linearity 5-23</p> <p>Start/Stop Phase Accuracy 5-24</p> <p>Residual DC and DC Offset Accuracy 5-24</p> <p>Square Wave Rise Time and Aberrations 5-24</p> <p>Sine Wave Harmonics 5-24</p> <p>AM Harmonics 5-24</p> <p>VCO Linearity 5-25</p> <p>Phase Locked Loop</p> <p>Phase Accuracy 5-25</p> <p>Amplitude Accuracy 5-25</p> <p>Sine Wave Power Flatness 5-25</p> <p>Manual Sweep Accuracy 5-25</p> <p>Step Attenuator Accuracy 5-26</p> <p>Vernier Attenuator Flatness 5-26</p>	<p>$\Delta 11$ 7-13</p> <p>$\Delta 12$ 7-19</p> <p>$\Delta 13$ 7-19</p> <p>$\Delta 14$ 7-19</p> <p>$\Delta 15$ 7-20</p> <p>$\Delta 16$ 7-24</p>																																																																																				
<table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Section</th> <th style="text-align: right;">Page</th> </tr> </thead> <tbody> <tr> <td>VI. REPLACEABLE PARTS</td> <td style="text-align: right;">6-1</td> </tr> <tr> <td>6-1. Introduction</td> <td style="text-align: right;">6-1</td> </tr> <tr> <td>6-2. Replaceable Parts List</td> <td style="text-align: right;">6-1</td> </tr> <tr> <td>6-3. Ordering Information</td> <td style="text-align: right;">6-1</td> </tr> <tr> <td>6-4. Direct Mail System</td> <td style="text-align: right;">6-1</td> </tr> <tr> <td>6-5. Special Handling</td> <td style="text-align: right;">6-1</td> </tr> <tr> <td>6-6. Parts Kits</td> <td style="text-align: right;">6-1</td> </tr> </tbody> </table>	Section	Page	VI. REPLACEABLE PARTS	6-1	6-1. Introduction	6-1	6-2. Replaceable Parts List	6-1	6-3. Ordering Information	6-1	6-4. Direct Mail System	6-1	6-5. Special Handling	6-1	6-6. Parts Kits	6-1	<table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Section</th> <th style="text-align: right;">Page</th> </tr> </thead> <tbody> <tr> <td>VIII. SERVICE</td> <td style="text-align: right;">8-1</td> </tr> <tr> <td>8-1. Introduction</td> <td style="text-align: right;">8-1</td> </tr> <tr> <td>8-2. Safety Considerations</td> <td style="text-align: right;">8-1</td> </tr> <tr> <td>8-3. Static Sensitivity</td> <td style="text-align: right;">8-1</td> </tr> <tr> <td>8-4. Clean Handling</td> <td style="text-align: right;">8-1</td> </tr> <tr> <td>8-5. Parts Kits</td> <td style="text-align: right;">8-2</td> </tr> <tr> <td>8-6. 3314A Operating System</td> <td style="text-align: right;">8-2</td> </tr> <tr> <td>8-7. Theory of Operation</td> <td style="text-align: right;">8-2</td> </tr> <tr> <td>8-8. Analog and Output Boards (A1 and A8)</td> <td style="text-align: right;">8-2</td> </tr> <tr> <td>8-9. Basic Function Generator</td> <td style="text-align: right;">8-2</td> </tr> <tr> <td>8-10. Basic Triangle Differential Integrator</td> <td style="text-align: right;">8-2</td> </tr> <tr> <td>8-11. Triangle Generator Control in the 3314A</td> <td style="text-align: right;">8-3</td> </tr> <tr> <td>8-12. Normal Mode (Free Run, Hold Bar = High)</td> <td style="text-align: right;">8-4</td> </tr> <tr> <td>8-13. Servo Mode (Gate/N Cycle/1/2 Cycle)</td> <td style="text-align: right;">8-4</td> </tr> <tr> <td>8-14. Servo Mode (ARbitrary Waveform)</td> <td style="text-align: right;">8-4</td> </tr> <tr> <td>8-15. Transconductance Stage</td> <td style="text-align: right;">8-5</td> </tr> <tr> <td>8-16. The Sine Shaper/Amplitude Control Hybrid IC</td> <td style="text-align: right;">8-5</td> </tr> <tr> <td>8-17. Preamplifier</td> <td style="text-align: right;">8-5</td> </tr> <tr> <td>8-18. Output Amplifier and Attenuator (A8)</td> <td style="text-align: right;">8-5</td> </tr> <tr> <td>8-19. Mode Board (A2)</td> <td style="text-align: right;">8-5</td> </tr> <tr> <td>8-20. DACs On the A2 Board</td> <td style="text-align: right;">8-6</td> </tr> <tr> <td>8-21. Phase Locked Loop</td> <td style="text-align: right;">8-7</td> </tr> <tr> <td>8-22. VCO, FM, AM and Sweeping</td> <td style="text-align: right;">8-8</td> </tr> <tr> <td>8-23. DC Offset</td> <td style="text-align: right;">8-8</td> </tr> <tr> <td>8-24. Calibration Cycle</td> <td style="text-align: right;">8-8</td> </tr> <tr> <td>8-25. Frequency Calibration</td> <td style="text-align: right;">8-8</td> </tr> <tr> <td>8-26. Amplitude Calibration</td> <td style="text-align: right;">8-8</td> </tr> <tr> <td>8-27. Power Supply, Controller and Front Panel (A3 and A10)</td> <td style="text-align: right;">8-9</td> </tr> <tr> <td>8-28. The Power Supplies</td> <td style="text-align: right;">8-9</td> </tr> <tr> <td>8-29. The Controller (A3)</td> <td style="text-align: right;">8-9</td> </tr> <tr> <td>8-30. The Front Panel and Keyboard (A10)</td> <td style="text-align: right;">8-9</td> </tr> <tr> <td>8-31. X3 Output (A5)</td> <td style="text-align: right;">8-9</td> </tr> <tr> <td>8-32. Troubleshooting</td> <td style="text-align: right;">8-9</td> </tr> </tbody> </table>	Section	Page	VIII. SERVICE	8-1	8-1. Introduction	8-1	8-2. Safety Considerations	8-1	8-3. Static Sensitivity	8-1	8-4. Clean Handling	8-1	8-5. Parts Kits	8-2	8-6. 3314A Operating System	8-2	8-7. Theory of Operation	8-2	8-8. Analog and Output Boards (A1 and A8)	8-2	8-9. Basic Function Generator	8-2	8-10. Basic Triangle Differential Integrator	8-2	8-11. Triangle Generator Control in the 3314A	8-3	8-12. Normal Mode (Free Run, Hold Bar = High)	8-4	8-13. Servo Mode (Gate/N Cycle/1/2 Cycle)	8-4	8-14. Servo Mode (ARbitrary Waveform)	8-4	8-15. Transconductance Stage	8-5	8-16. The Sine Shaper/Amplitude Control Hybrid IC	8-5	8-17. Preamplifier	8-5	8-18. Output Amplifier and Attenuator (A8)	8-5	8-19. Mode Board (A2)	8-5	8-20. DACs On the A2 Board	8-6	8-21. Phase Locked Loop	8-7	8-22. VCO, FM, AM and Sweeping	8-8	8-23. DC Offset	8-8	8-24. Calibration Cycle	8-8	8-25. Frequency Calibration	8-8	8-26. Amplitude Calibration	8-8	8-27. Power Supply, Controller and Front Panel (A3 and A10)	8-9	8-28. The Power Supplies	8-9	8-29. The Controller (A3)	8-9	8-30. The Front Panel and Keyboard (A10)	8-9	8-31. X3 Output (A5)	8-9	8-32. Troubleshooting	8-9
Section	Page																																																																																				
VI. REPLACEABLE PARTS	6-1																																																																																				
6-1. Introduction	6-1																																																																																				
6-2. Replaceable Parts List	6-1																																																																																				
6-3. Ordering Information	6-1																																																																																				
6-4. Direct Mail System	6-1																																																																																				
6-5. Special Handling	6-1																																																																																				
6-6. Parts Kits	6-1																																																																																				
Section	Page																																																																																				
VIII. SERVICE	8-1																																																																																				
8-1. Introduction	8-1																																																																																				
8-2. Safety Considerations	8-1																																																																																				
8-3. Static Sensitivity	8-1																																																																																				
8-4. Clean Handling	8-1																																																																																				
8-5. Parts Kits	8-2																																																																																				
8-6. 3314A Operating System	8-2																																																																																				
8-7. Theory of Operation	8-2																																																																																				
8-8. Analog and Output Boards (A1 and A8)	8-2																																																																																				
8-9. Basic Function Generator	8-2																																																																																				
8-10. Basic Triangle Differential Integrator	8-2																																																																																				
8-11. Triangle Generator Control in the 3314A	8-3																																																																																				
8-12. Normal Mode (Free Run, Hold Bar = High)	8-4																																																																																				
8-13. Servo Mode (Gate/N Cycle/1/2 Cycle)	8-4																																																																																				
8-14. Servo Mode (ARbitrary Waveform)	8-4																																																																																				
8-15. Transconductance Stage	8-5																																																																																				
8-16. The Sine Shaper/Amplitude Control Hybrid IC	8-5																																																																																				
8-17. Preamplifier	8-5																																																																																				
8-18. Output Amplifier and Attenuator (A8)	8-5																																																																																				
8-19. Mode Board (A2)	8-5																																																																																				
8-20. DACs On the A2 Board	8-6																																																																																				
8-21. Phase Locked Loop	8-7																																																																																				
8-22. VCO, FM, AM and Sweeping	8-8																																																																																				
8-23. DC Offset	8-8																																																																																				
8-24. Calibration Cycle	8-8																																																																																				
8-25. Frequency Calibration	8-8																																																																																				
8-26. Amplitude Calibration	8-8																																																																																				
8-27. Power Supply, Controller and Front Panel (A3 and A10)	8-9																																																																																				
8-28. The Power Supplies	8-9																																																																																				
8-29. The Controller (A3)	8-9																																																																																				
8-30. The Front Panel and Keyboard (A10)	8-9																																																																																				
8-31. X3 Output (A5)	8-9																																																																																				
8-32. Troubleshooting	8-9																																																																																				
<table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Section</th> <th style="text-align: right;">Page</th> </tr> </thead> <tbody> <tr> <td>VII. MANUAL BACKDATING</td> <td style="text-align: right;">7-1</td> </tr> <tr> <td>7-1. Introduction</td> <td style="text-align: right;">6-1</td> </tr> <tr> <td>7-2. Manual Change Sheets</td> <td style="text-align: right;">7-1</td> </tr> <tr> <td>7-3. Format</td> <td style="text-align: right;">7-1</td> </tr> <tr> <td>$\Delta 1$</td> <td style="text-align: right;">7-2</td> </tr> <tr> <td>$\Delta 2$</td> <td style="text-align: right;">7-2</td> </tr> <tr> <td>$\Delta 3$</td> <td style="text-align: right;">7-2</td> </tr> <tr> <td>$\Delta 4$</td> <td style="text-align: right;">7-6</td> </tr> <tr> <td>$\Delta 5$</td> <td style="text-align: right;">7-9</td> </tr> <tr> <td>$\Delta 6$</td> <td style="text-align: right;">7-9</td> </tr> <tr> <td>$\Delta 7$</td> <td style="text-align: right;">7-10</td> </tr> <tr> <td>$\Delta 8$</td> <td style="text-align: right;">7-12</td> </tr> <tr> <td>$\Delta 9$</td> <td style="text-align: right;">7-12</td> </tr> <tr> <td>$\Delta 10$</td> <td style="text-align: right;">7-12</td> </tr> </tbody> </table>	Section	Page	VII. MANUAL BACKDATING	7-1	7-1. Introduction	6-1	7-2. Manual Change Sheets	7-1	7-3. Format	7-1	$\Delta 1$	7-2	$\Delta 2$	7-2	$\Delta 3$	7-2	$\Delta 4$	7-6	$\Delta 5$	7-9	$\Delta 6$	7-9	$\Delta 7$	7-10	$\Delta 8$	7-12	$\Delta 9$	7-12	$\Delta 10$	7-12																																																							
Section	Page																																																																																				
VII. MANUAL BACKDATING	7-1																																																																																				
7-1. Introduction	6-1																																																																																				
7-2. Manual Change Sheets	7-1																																																																																				
7-3. Format	7-1																																																																																				
$\Delta 1$	7-2																																																																																				
$\Delta 2$	7-2																																																																																				
$\Delta 3$	7-2																																																																																				
$\Delta 4$	7-6																																																																																				
$\Delta 5$	7-9																																																																																				
$\Delta 6$	7-9																																																																																				
$\Delta 7$	7-10																																																																																				
$\Delta 8$	7-12																																																																																				
$\Delta 9$	7-12																																																																																				
$\Delta 10$	7-12																																																																																				

TABLE OF CONTENTS (Cont'd)

8-33. Digital Troubleshooting 8-10	8-44. SA Test #5 8-17
8-34. 3314A Controller Self Test and Signature Analysis 8-10	8-44a. Latch Test and DAC Exercises 8-18
8-35. Available Tests 8-10	8-45. Analog Troubleshooting 8-20
8-36. Description of Tests and Functions 8-10	8-46. Signal Name 8-20
8-37. Test Initiated Form A3 S1 8-10	8-47. Control Latch Truth Tables 8-21
8-38. Troubleshooting Sequence of the Controller (A3) 8-11	8-48. Multiplexed DAC Troubleshooting Diagram 8-23
8-39. How to Use SA Tests #1, #2, #3 8-11	8-49. Basic Operation Troubleshooting Diagram 8-26
40. SA Test #1 8-13	8-50. General Operation Troubleshooting Diagram 8-28
41. SA Test #2 8-14	8-51. Calibration Error Troubleshooting 8-32
42. SA Test #3 8-15	8-52. Schematics 8-36
8-43. SA Test #4 8-16	8-53. Special Schematic Symbols 8-36

LIST OF ILLUSTRATIONS

Figure	Page	Figure	Page
1-1. Serial Number Plate	1-1	5-1. Seven Segment Display	5-4
2-1. HP-IB Connector Detail	2-0	5-2. Z-Axis Polarity Observation	5-6
2-2. Line Voltage/Line Fuse Selection	2-0	5-3. Z-Axis Polarity Observation "BLK + "	5-7
2-3. Z-Axis Polarity Selection	2-2	5-4. Z-Axis Polarity Observation "BLK - "	5-7
2-4. A3CR123 Installation	2-5	5-5. Log Sweep Start Frequency Adjustment	5-7
3-1a. 3314A Rear Panel	3-3	5-6. Linear Sweep Start Frequency Adjustment	5-8
3-1b. 3314A Front Panel	3-5	5-7. DC Offset Adjustment	5-9
4-1. Frequency Accuracy Test	4-3	5-8. Phase Lock Phase Adjustment	5-9
4-2. Time Axis and Variable Symmetry	4-4	5-9. Symmetry Adjustment	5-10
4-3. Internal Trigger Accuracy	4-5	5-10. Hold Phase Zero Adjustment	5-12
4-4. Triangle Linearity	4-6	5-11. DC/AC Balance Adjustment	5-12
4-5. Triangle Linearity	4-6	5-12A. DC/AC Balance Sine Adjustment	5-13
4-6. Start/Stop Phase Accuracy	4-7	5-12B. DC/AC Balance Triangle Adjustment	5-13
4-7. Residual and Variable DC Offset Accuracy	4-8	5-13. Low Frequency Harmonic Distortion Adjustment	5-14
4-8. Square Wave Rise Time and Aberrations	4-9	5-14. Amplitude Calibration Pad Selection	5-15
4-9. Sine Wave Harmonics	4-10	5-15. High Frequency Harmonic Distortion Adjustment	5-17
4-10. AM Harmonics	4-13	5-16. High Frequency Harmonic Distortion Adjustment	5-17
4-11. VCO Linearity	4-14	5-17. Attenuator High Frequency Compensation Adjustment	5-18
4-12. Phase Locked Loop Phase Accuracy	4-15	5-18. X3 (Option 001) Functional Check	5-19
4-13. Amplitude Accuracy	4-16	5-19. A1 Adjustment Locations	5-20
4-14. Sine Wave Power Flatness	4-17	5-20. A2 Adjustment Locations	5-21
4-15. Manual Sweep Accuracy	4-18	5-21. A3 Adjustment Locations	5-21
4-16. Step Attenuator Accuracy	4-19	5-22. A5 Adjustment Locations	5-22
4-17. Vernier Attenuator Flatness	4-21	5-23. A8 Adjustment Locations	5-22
4-18. X3 Gain Accuracy Connections	4-22	7-1. A1 Component Locator	7-25
4-19. Sine Power Flatness Connections	4-23	7-2. A8 Component Locator	7-25
4-20. Harmonic Distortion Connections	4-24		
4-21. Square Wave Rise/Fall Time Connections	4-24		
4-22. Residual DC Offset Connections	4-25		

LIST OF ILLUSTRATIONS (Cont'd)

Figure	page	Figure	page
7-3.	A3 Component Locator	7-26	
7-4.	A4 Component Locator	7-26	
8-1A.	Basic Function Generator Block Diagram	8-2A	
8-1B.	3314A Block Diagram	8-2B	
8-2.	Basic Differential Integrator	8-4	
8-3.	3314A Triangle Generation	8-5	
8-4.	Integrator Control Signals	8-6	
8-5.	Phase Locked Loop Block Diagram	8-7	
8-6.	SA Clocks	8-12	
8-7.	Signal Name Connections	8-20	
8-8.	Multiplexed DAC Troubleshooting Diagram	8-25	
8-9.	Basic Operation Troubleshooting Diagram	8-27	
8-10A.	General Operation Troubleshooting Diagram (A1 and A8)	8-29	
8-10B.	General Operation Troubleshooting Diagram (A2 and A3)	8-31	
8-11A.	Frequency Calibration Troubleshooting Flowchart	8-33	
8-11B.	Amplitude Calibration Troubleshooting Flowchart	8-35	
8-12.	Integrator Current Block Diagram	8-37	
8-13.	Integrator Current Control (includes the Freq/Sym DAC)	8-39	
8-14.	Integrator Block Diagram	8-40	
8-15.	Triangle Integrator	8-41	
8-16.	Transconductance Amplifier	8-43	
8-17.	Trig/Gate/Arb Phase Servo Amplifier	8-45	
8-18.	Comparator Block Diagram (Continuous Operation)	8-46	
8-19.	Comparator Block Diagram (Non Continuous Operation)	8-47	
8-20.	Hysteresis Comparator	8-49	
8-21.	Sync Circuits and Sync Output	8-51	
8-22.	Function and Vernier and Amplitude Control (includes the Sine Shaper IC)	8-53	
8-23.	Preamplifier	8-55	
8-24.	Offset Amplifier	8-57	
8-25.	Output Interface	8-59	
8-26.	Misc Interface	8-61	
8-27.	Phase Locked Loop (Analog)	8-63	
8-28.	Multiplexed DAC and X Drive Output	8-65	
8-29.	Phase Locked Loop (digital) and Dividers	8-67	
8-30.	Frequency Control and Z-Axis Output	8-69	
8-31.	Power Supplies	8-71	
8-32.	Clock Circuits	8-73	
8-33.	Processor, Memory and HP-IB	8-75	
8-34.	Timer and IO	8-77	
8-35.	X3 Output Amplifier	8-79	
8-36.	Output Amplifier and Step Attenuator	8-81	
8-37.	Front Panel Display and Keyboard	8-83	

LIST OF TABLES

Table	Page	Table	Page
1-1.	Specifications	1-2	
1-2.	Supplemental Characteristics	1-4	
1-3.	Recommended Test Equipment	1-5	
2-1.	HP-IB Address	2-3	
3-1.	Error Codes With Status Byte Bit#	3-1	
4-1.	Performance Tests	4-1	
4-2.	Frequency Accuracy Measurement Parameters With Specified Limits	4-2	
4-3.	Residual DC Offset Limits	4-9	
4-4.	Variable DC Offset Limits	4-9	
4-5.	Sine Wave Harmonic Test Frequencies 3Hz Resolution Bandwidth	4-12	
4-6.	Sine Wave Harmonic Test Frequencies 300Hz Resolution Bandwidth	4-12	
4-7.	Sine Wave Harmonic Test Frequencies (High Frequency Spectrum Analyser)	4-12	
4-8.	Sine Wave Power Flatness	4-32	
4-9.	Step Attenuator Accuracy	4-32	
4-10.	Vernier Attenuator Flatness	4-33	
5-1.	Adjustments	5-1	
5-2.	RAM/ROM Location and Reference LED's	5-4	

LIST OF TABLES (Cont'd)

Table	Page	Table	page
5-3.	R522 Selection.....5-16	7-6.	Replaceable Parts Δ15 7-21
6-1.	List of Abbreviations.....6-2	7-7.	SA Start/Stop Connections Δ16 7-24
6-2.	Code List of Manufacturers.....6-2	8-1.	Frequency Range Capacitance8-3
6-3.	Replaceable Parts6-3	8-2.	Integration Control Signals.....8-4
7-1.	Manual Changes by Serial Number7-1	8-3.	Start/Stop Connections8-14
7-2.	Manual Changes by Assembly7-1	8-4.	Latch Test Outputs8-18
7-3.	SA Start/Stop Connections Δ37-3	8-5.	Multiplex DAC Outputs 8-19
7-4.	RAM/ROM Location and Reference LED'S Δ11..... 7-13	8-6.	INPHA Latch 8-21
7-5.	SA Start/Stop Connections Δ11..... 7-14		

SECTION 1

GENERAL INFORMATION

1-1. INTRODUCTION

This Service Manual contains information for Service-Trained personnel to install, test, adjust and service the Hewlett-Packard Model 3314A Function Generator. A front panel overview and the HP-IB Summary are also included; however, the Operating Manual should be used for detailed operating information.

1-2. MANUAL AND INSTRUMENT IDENTIFICATION

The -hp- part number for this manual and for a microfiche of this manual are located on the title page. Each 4 x 6 inch microfiche contains up to 96 photoduplicates of the Service Manual pages. The latest Manual Changes Supplement as well as Service Notes are also included in the microfiche.

Attached to the 3314A's rear panel is a serial number plate. $\Delta 8$

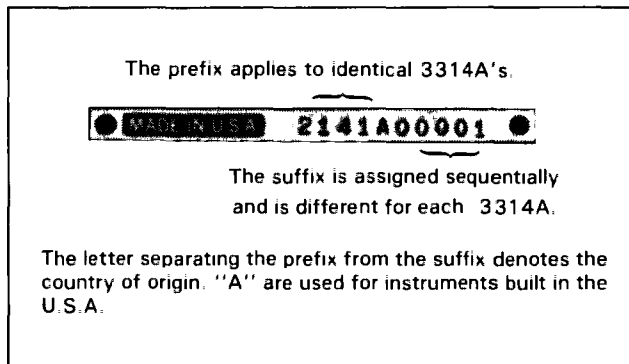


Figure 1-1. Serial Number Plate

The contents of this manual apply to instruments with the serial number prefix(es) listed under SERIAL NUMBERS on the title page. Changes made to instruments after the printing of this manual will be covered by a Manual Change Supplement. In addition to change information, a Manual Change Supplement may contain information correcting errors in this manual.

1-3. DESCRIPTION

The 3314A Function Generator is a multi-mode, programmable function generator. The 3314A features Sine, Triangle and Squarewave functions from 1mHz to

19.99MHz. In addition, the 3314A can be redefined as an ARbitrary Waveform Generator. ARB waveforms are made up of a series of voltage ramps called vectors. The operator has control over the number of vectors, the height and length of each vector. The operating modes include:

Free Run	Gate	N Cycle
CW	CW	1/2 Cycle
linear sweeps	linear sweeps	Fin X N
log sweeps	ARB	Fin ÷ N
ARB		

In addition, the 3314A has a programmable time interval for internal triggering. A trigger (either internal or external) is an important part of every operating mode except Free Run when not sweeping.

1-4. OPTIONS

The 3314A may be equipped with one or more of the following options:

- $\Delta 8$ Option 001, Simultaneous X3 Output
- Option 907, Front Handle Kit
- Option 908, Rack Mount Adapters
- Option 910, Extra Manual Set

Option 001 to the 3314A Function Generator is a low impedance, rear panel output. The X3 Output voltage is 3 times the voltage from the 3314A's Main 50 Ω Output. Note that the X3 Output is always active and that the voltage depends upon the selected amplitude and the Main Output's load. This output is DC coupled and is useable to 1 MHz.

1-5. SUPPLIED ACCESSORIES

Every 3314A is supplied with the following accessories:

- An Operating Manual
- A Service Manual
- A Power Cord
- A 50 Ω Feedthrough Termination


The power cord included with your 3314A was selected at the factory based upon the country of destination. If your power cord is incompatible with your AC mains outlet, contact your local -hp- Sales Office.

1.6. SPECIFICATIONS

The 3314A's specifications are listed in Table 1-1, Specifications. These specifications are the performance standards or limits against which every 3314A is tested.

Some of the 3314A's operating characteristics are listed in Table 1-2, Supplemental Characteristics. The Operating Manual contains detailed discussions of the remaining operating characteristics.

Table 1-1. Specifications

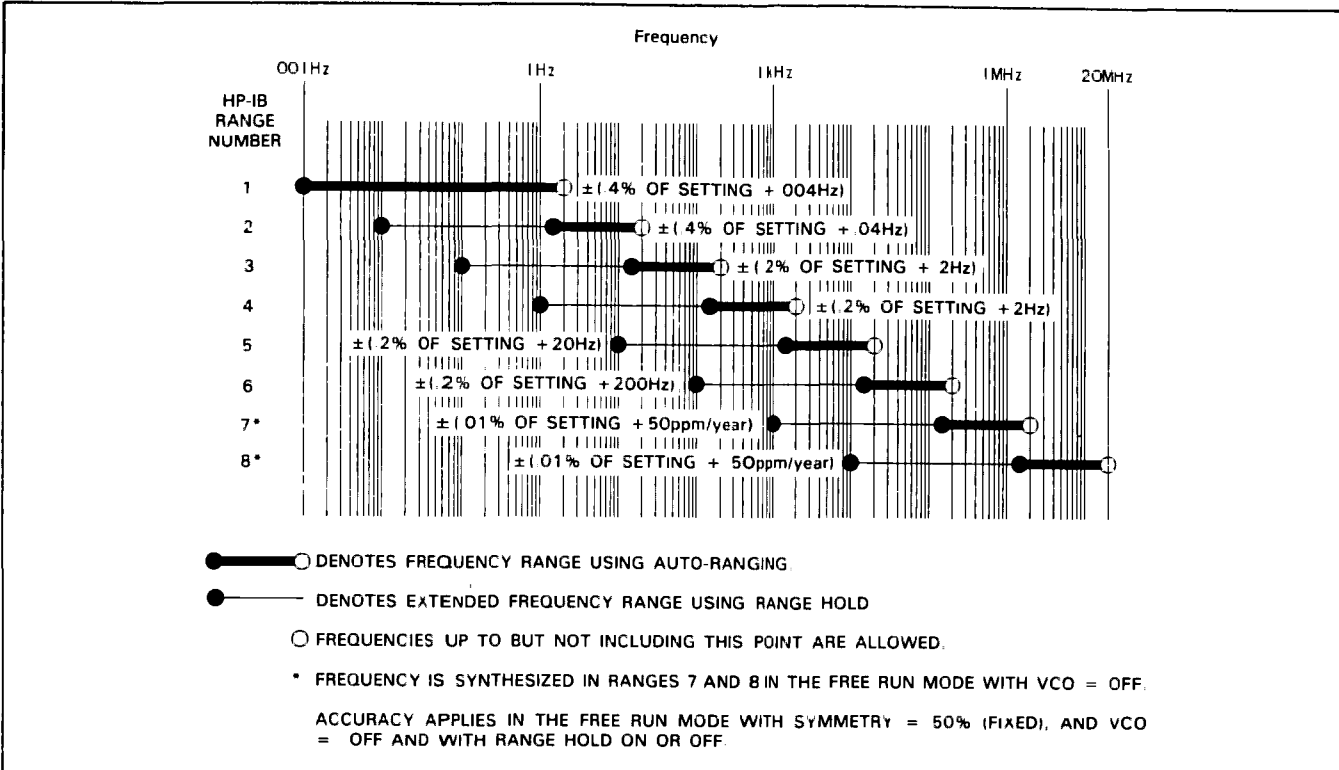

Amplitude	DC Offset									
Absolute Amplitude Accuracy: $\pm(1\% \text{ of display} + .035\text{Vp-p})$, sine wave and square wave $\pm(1\% \text{ of display} + .06\text{Vp-p})$, triangle Amplitudes: 1.00Vp-p to 10.00Vp-p (Range 4) Frequency: 10kHz Auto-Range: ON	Offset Accuracy: $\pm(3\% \text{ of display} + 10 \text{ mVDC} + 0.5\% \text{ of AC Amplitude Range})$ Frequency: < 100kHz Auto-Range: ON									
Flatness--sine wave: Combines sine power flatness and vernier attenuator flatness Relative to 10kHz, 1.00 V to 10.00Vp-p (Range 4) <table border="1" style="margin-left: 40px;"> <tr> <td>20Hz</td> <td>50kHz</td> <td>1MHz</td> <td>19.99MHz</td> </tr> <tr> <td>.07dB</td> <td>.33dB</td> <td>1.5dB</td> <td></td> </tr> </table>	20Hz	50kHz	1MHz	19.99MHz	.07dB	.33dB	1.5dB		Residual DC Offset: $\pm 0.5\% \text{ of AC Amplitude Range}$ If option 001: $\pm 0.5\% \text{ of AC Amplitude Range} \pm 500\mu\text{V}$ Setting: OVDC Frequency: $\leq 100\text{kHz}$	
20Hz	50kHz	1MHz	19.99MHz							
.07dB	.33dB	1.5dB								
Step Attenuator Accuracy: <table border="1" style="margin-left: 40px;"> <tr> <td>001Hz</td> <td>50kHz</td> <td>19.99MHz</td> </tr> <tr> <td rowspan="3">20dB</td> <td rowspan="3">.05dB</td> <td rowspan="3">.3dB</td> </tr> <tr> <td rowspan="2">40dB</td> <td rowspan="2">.5dB</td> </tr> <tr> <td>60dB</td> </tr> </table>	001Hz	50kHz	19.99MHz	20dB	.05dB	.3dB	40dB	.5dB	60dB	Symmetry Symmetry Accuracy (Fixed): $50\% \pm 0.2\%$ Fixed Symmetry: 50% (SYM light OFF) Frequency: 1Hz to 100kHz Function: square wave
001Hz	50kHz	19.99MHz								
20dB	.05dB	.3dB								
			40dB	.5dB						
					60dB					

Table 1-1. Specifications (Cont'd)

<p>Symmetry Accuracy (Variable)</p> <p>±0.5% of period</p> <p>Frequency: 1Hz to 100kHz Function: square wave</p> <p>Phase</p> <p>Phase Offset--Phase lock Modes</p> <p>Accuracy: ±2° (50Hz to 25kHz)</p> <p>Phase Offset is referenced to the signal output for Fin - N or the trigger input for Fin X N.</p> <p>Start/Stop Phase--Burst Modes:</p> <p>Accuracy: ±3° (applies from 0.01Hz to 1kHz)</p> <p>Function Characteristics</p> <p>Sine Harmonic Distortion:</p> <p>Individual harmonics will be below these levels, relative to carrier level. Offset = 0V. Function Invert = OFF. *Add 4dB for ambient temperature 0 to 5°C or 45 to 55°C.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="text-align: center;">20Hz</td> <td style="text-align: center;">50kHz</td> <td style="text-align: center;">1999kHz</td> <td style="text-align: center;">19.99MHz</td> </tr> <tr> <td style="text-align: center;">-55dB*</td> <td style="text-align: center;">-40dB</td> <td style="text-align: center;">-25dB</td> <td></td> </tr> </table> <p>Square Wave Rise/Fall Time:</p> <p>≤ 9ns, 10% to 90% of a 10 Vp-p output</p> <p>Square Wave Aberrations.</p> <p>5% of (High Settled Amplitude - Low Settled Amplitude)</p> <p>where Settled Amplitude is the voltage on the pulse top or bottom measured 100ns after the appropriate zero crossing</p> <p>Frequency: ≤ 1MHz</p> <p>Amplitude: 10Vp-p</p> <p>10% of p-p Aberrations relative to programmed amplitude.</p> <p>Frequency: > 1MHz</p> <p>Amplitude: 10Vp-p</p> <p>Triangle Linearity:</p> <p>±0.2% of the p-p voltage</p> <p>Frequency: .01Hz to 1kHz, Amplitude = 10 Vp-p Deviation is from a best fit straight line, from 10% to 90% of each ramp.</p> <p>Internal Trigger Interval</p> <p>Period Accuracy: ±(0.01% + 50 ppm/year) of displayed interval (excluding sweep intervals)</p>	20Hz	50kHz	1999kHz	19.99MHz	-55dB*	-40dB	-25dB		<p>Frequency Sweep</p> <p>Sweep Frequency Accuracy--Manual Sweep:</p> <p>±(0.2% of Stop Freq + 0.1% of Stop Freq Range), Stop Freq Range ≤ 200kHz ±1% of Stop Freq, Stop Freq in 2MHz Range ±3% of Stop Freq, Stop Freq in 20MHz Range</p> <p>Modulation</p> <p>Amplitude Modulation Envelope Distortion:</p> <p>≤ -40dB</p> <p>Carrier: = 1MHz, 10Vp-p, sine wave Modulating Input: 1kHz, sine wave Index of Modulation: 95%</p> <p>VCO Linearity:</p> <p>±0.15% of p-p frequency, .1Hz through 200kHz Range ±1% of p-p frequency, 2MHz Range ±3% of p-p frequency, 20MHz Range</p> <p>-8Vdc to +1 Vdc input (-80% to +10%) Deviation is from a best fit straight line.</p> <p>Option 001 - Simultaneous X3 Output</p> <p>Specifications apply when the X3 Output is terminated with > 500Ω and < 500pF and when the Main output is terminated with 50Ω.</p> <p>The X3 Output is useable into all loads until the output current limits at ≈ 30 mA peak or the output voltage clips at ≈ 15V peak</p> <p>X3 Gain Accuracy</p> <p>±1% at 10kHz X3 Output Amplitude ≈ (3 ± 1%) x Main Output Amplitude</p> <p>Sine Power Flatness.</p> <p>Relative to full output power at 10kHz</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="text-align: center;">20Hz</td> <td style="text-align: center;">50kHz</td> <td style="text-align: center;">500kHz</td> <td style="text-align: center;">1MHz</td> </tr> <tr> <td style="text-align: center;">± 1dB</td> <td style="text-align: center;">± 5dB</td> <td style="text-align: center;">± 15dB</td> <td></td> </tr> </table> <p>Harmonic Distortion:</p> <p>All harmonically related signals will be below these levels relative to the fundamental.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="text-align: center;">20Hz</td> <td style="text-align: center;">50kHz</td> <td style="text-align: center;">1MHz</td> </tr> <tr> <td style="text-align: center;">-53dB</td> <td style="text-align: center;">-38dB</td> <td></td> </tr> </table> <p>Square Wave Rise/Fall Time (Rear Panel)</p> <p>≤ 200ns, 10% to 90% at full output.</p> <p>Residual DC Offset (Rear Panel)</p> <p>≤ 40mVDC</p>	20Hz	50kHz	500kHz	1MHz	± 1dB	± 5dB	± 15dB		20Hz	50kHz	1MHz	-53dB	-38dB	
20Hz	50kHz	1999kHz	19.99MHz																				
-55dB*	-40dB	-25dB																					
20Hz	50kHz	500kHz	1MHz																				
± 1dB	± 5dB	± 15dB																					
20Hz	50kHz	1MHz																					
-53dB	-38dB																						

Table 1-2. Supplemental Characteristics

<p>General</p> <p>Specifications apply when:</p> <p>Main signal output is terminated into 50 ± 0.1 ohms Warm-up is ≥ 30 minutes Within ± 5°C, and 24 hours of last internal calibration Temperature 0° to 55°C Relative Humidity ≤ 95% at 40°C Altitude ≤ 15,000 ft</p> <p>Storage Limits:</p> <p>Temperature -40° to +75°C Altitude ≤ 15,000 ft</p> <p>Power:</p> <p>100/120/220/240 V, + 5% - 10%, 48 to 66 Hz 95 VA maximum</p> <p>Weight:</p> <p>7.3 kg (16 lbs) net 10.5 kg (23 lbs) shipping</p> <p>Dimensions:</p> <p>132.6 mm (5.22 in) high 212.3 mm (8.36 in) wide 419.0 mm (16.50 in) deep</p>	<p>Accessories Included:</p> <p>11048C 50 ohm feed through</p> <p>Accessories:</p> <p>Transit case for one 3314A, -hp- #9211-2677</p> <p>OPTION 001:</p> <p>Amplitude Range:</p> <p>AC only to 30Vp-p or 60mAp-p before clipping DC only to ± 15VDC or ± 30mADC before clipping. AC + DC to ± 15V peak or ± 30mA peak before clipping</p> <p>Frequency Range:</p> <p>DC to 1MHz</p> <p>Output Resistance:</p> <p>≤ 2Ω at 10kHz</p> <p>Relationship of the X3 Amplitude to the 3314A's displayed amplitude:</p> $X3 \text{ AMPTD} = 3 \left[2 \times \text{Display} \frac{\text{Main Output Load}}{\text{Main Output Load} + 50} \right]$
--	--

1-7. SAFETY CONSIDERATIONS

The 3314A is a Safety Class 1 instrument (provided with a protective earth terminal). The instrument and manuals should be reviewed for safety markings and instructions before operation.

1-8. GROUNDING

The outer conductor of all BNC type connectors, the shield and pins 12 and 18 through 24 of the HP-IB connector, the frame, chassis, covers, and all exposed metal surfaces are connected to the protective earth terminal.



Do NOT interrupt the protective earth ground or "float" the 3314A. This action could expose operators to potentially hazardous voltages!

1-9. RECOMMENDED TEST EQUIPMENT

Equipment required to maintain the 3314A is listed in Table 1-3 Recommended Test Equipment. Other equipment may be substituted if it meets or exceeds the performance of the listed equipment. When substitutions are made, the user may have to change the test procedures to accommodate different operating characteristics.

1-10. OPERATOR MAINTENANCE

Operator Maintenance is limited to replacing the line fuse. There are no operator controls inside the 3314A. The Z-Axis polarity switch is located inside the 3314A, however, only Service Trained personnel using the instructions located in Section 2 of this manual are to set this switch.



Under no circumstances should an operator remove any covers, screws, shields or in any other way enter the 3314A. There are no operator controls inside the 3314A.

1-11. AVAILABLE EQUIPMENT

The following service kits are available and contain the necessary hardware and instructions to retrofit the instrument:

- Front Panel Kit 03314-84401
- Rear Panel Kit 03314-84402

Table 1-3. Recommended Test Equipment

Instrument	Critical Specs	Recommended Model
Universal Counter	Freq Measurement to 20MHz Accuracy ± 2 counts Resolution 8 Digits	-hp- 5328B PA (-hp- 5328A) (-hp- 5345A)
AC/DC Digital Voltmeter	DC Function Acc. $\pm .05\%$ AC Function: True RMS Acc. $\pm .2\%$ Resolution 6 Digits	-hp- 3455A PA (-hp- 3456A)
High Speed Digital Voltmeter	DC Voltage 0V-10V Sample/Hold Measurement External Trigger. Low True TTL Edge Trigger Trigger Delay: Selectable, 10 μ S to 140 μ S	-hp- 3437A P
Synthesizer/Function Generator	Sine Output: 1kHz Amplitude: 1Vrms into 10k Ω	-hp- 3325A PA (-hp- 3335A)
VHF Attenuator (see Note 1)	Atten: 100dB in 10dB steps Freq Range 50Hz to 20MHz Impedance 50 Ω	-hp- 355D P
High Frequency Spectrum Analyzer	Freq Range 40MHz to 120MHz Amplitude Accuracy: ± 5 dB	-hp- 8557A P (-hp- 8558B) (-hp- 141T,8552B)
Spectrum Analyzer (see Note 2)	Freq Range 20Hz to 40MHz Amplitude Linearity: $\pm .3$ dB Resolution: .01dB	-hp- 3585A PA
3 Volt Thermal Converter	Input Impedance 50 Ω Input Voltage: 3Vrms Freq: 2kHz to 20MHz Frequency Response: $\pm .05$ dB	-hp- 11049A P (Ballantine 1395A-3 with cable 12257A opt. 10)*
1 Volt Thermal Converter	Input Impedance 50 Ω Input Voltage: 1Vrms Freq: 2kHz to 20MHz Frequency Response: $\pm .05$ dB	-hp- 11050A P (Ballantine 1395A-1 with cable 12257A opt 10)*
Oscilloscope	Dual input, Ext Trigger, X-Y Display Mode X10 Mag, Delayed Sweep Vertical BW DC to 275MHz Deflection 01V to 10V/Div Horizontal Sweep: .01 μ S to 1s/Div	-hp- 1725A PA (-hp- 1745A)
Power Supply	Volts: -8VDC to +2VDC Amps: 10mA	-hp- 6235A P

Note 1: VHF attenuator must be characterized.
 Note 2: The 3585A is required because of its .01dB Resolution

P=Performance Test
 A=Adjustments
 ()=Alternative Instruments

* Ballantine Laboratories, Inc.
 PO Box 97
 Boonton, NJ 07005, U.S.A.
 Telephone: 201-335-0900 TWX: 710-987-8380

Table 1-3. Recommended Test Equipment (Cont'd)

Instrument	Critical Specs	Recommended Model
BNC/Tee Adaptor	50Ω BNC/Tee (m)(f)(f)	-hp- 1250-0781 PA
BNC/Banana Adaptor	50Ω BNC (f) to dual banana plug	-hp- 1250-2277 PA
BNC to Triax Adaptor	50Ω BNC (f) to BNC Triaxial (m)	-hp- 1250-0595 P
50Ω Feedthrough Termination	Accuracy: ± 2% Power Rating: 1W	-hp- 11048C PA
500Ω Feedthrough Termination (use in X3 test)	Resistor: 499Ω	-hp- 0698-4123 P
500Ω 250pF Feedthrough Termination (use in X3 test)	Resistor: 499Ω Capacitor: 240pF (10pF added by probe in test)	-hp- 0698-4123 A -hp- 0140-0199
450Ω Voltage Reducer (use in X3 test)	Resistor: 450Ω	-hp- 0698-3510 P
Low Pass Filter	Resistor: 1MΩ ± 5% Capacitor: 1μF ± 20%	-hp- 0683-1055 P -hp- 0160-0127
10:1 Probe	Impedance: 1MΩ Capacitance: 20-26pF	-hp- 10041A A
P=Performance Test A=Adjustments ()=Alternative Instruments		

SECTION II

INSTALLATION

2-1. INTRODUCTION

This section provides installation instructions for the 3314A Function Generator. This section also provides information about initial inspection and damage claims, preparation for using the 3314A and what to do in case of difficulty. In addition, installation instruction sheets for several -hp- accessories (rack, handle and foot kits) are located at the end of this section. See Section VII, Manual Backdating, for “Δ” explanations.

2-2. INITIAL INSPECTION

Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked for completeness and the instrument has been checked mechanically and electrically. The contents of the shipment should be:

- An Operating Manual
- A Service Manual
- A Power Cord
- A 50Ω Feedthrough Termination

If the contents are incomplete, if there is mechanical damage or defect or if the 3314A does not pass the Performance Tests, notify the nearest Hewlett-Packard office. If the shipping container or the cushioning material is damaged, notify the carrier as well. Keep the shipping material for the carrier's inspection. The -hp- office will arrange for repair or replacement at -hp- option without waiting for a claim settlement.

WARNING

The integrity of the protective earth ground may be interrupted if the 3314A has been mechanically damaged. Under no circumstances should a 3314A be connected to power if it is damaged.

2-3. MATING CONNECTORS

The 3314A uses 50Ω BNC(f) type connectors for all signal I/O. The outer shield is connected to protective earth ground.

The HP-IB connector is an Amphenol or Cinch type 57 connector. See Figure 2-1 for pin assignments.



An improperly set voltage selector will cause the line fuse to blow.

The wrong fuse value or type will not protect the instrument's circuitry and may result in damage to your 3314A.

Remove line voltage selector to change voltage. Rotating selector without removal will damage the module.

Δ 2 Δ 15

2-4. LINE VOLTAGE SELECTION

Figure 2-2 provides instructions for line voltage and fuse selection. The line voltage selector position and line fuse value are selected at the factory based upon the country of destination. Always check the line voltage selector and line fuse value before connecting the 3314A to AC power. To change voltage, be sure to remove selector before rotating to avoid damaging the module.

The three-wire power cord provided with the 3314A establishes a protective earth ground for the chassis and cabinet when plugged into a receptacle with a ground contact. The offset pin on the plug is the ground connection.

This protective ground may be interrupted if the 3314A is mechanically damaged. Intentional interruption is prohibited. An interruption of any connection that establishes the ground can make the instrument dangerous. If it is likely that ground protection is impaired, the instrument must not be connected to power.

The line voltage selected for the 3314A is indicated on the line voltage selector. It is set at the factory to correspond to the most commonly used line voltage of the country of destination. Refer to Figure 2-2 for setting the line voltage and selecting the appropriate fuse.

If you make any changes to the voltage selector or the fuse, be aware of correct alignment indications. Before closing the module's cover, confirm that the arrow on the fuse holder aligns with the arrows on the inside of the cover. They should all point in the same direction. After firmly pushing the cover closed, be sure the correct line voltage appears through the cover window.

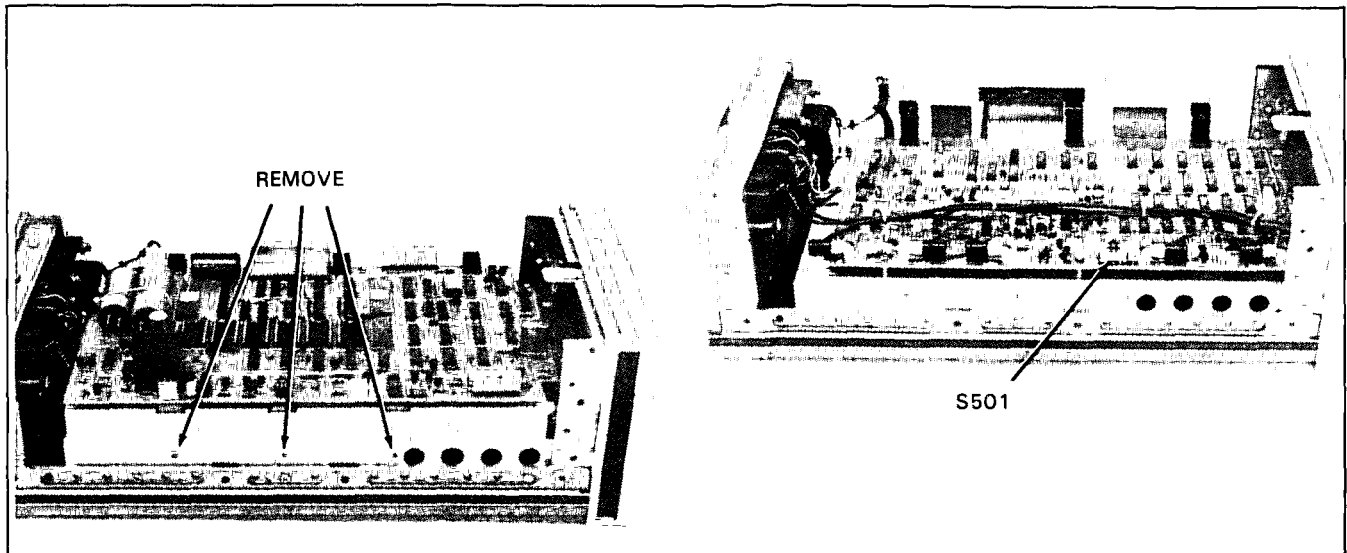


Figure 2-3. Z-AXIS Polarity Selection

2.5. Z-AXIS POLARITY SELECTION

The polarity of the Z-Axis output can be inverted by setting S501 on the A2 PC board. This switch is set at the factory to output positive ($> +5V$) blanking pulses, negative ($< -5V$) intensifying pulses and 0V baseline.

To gain access to this switch:

1. Disconnect the 3314A from its power source.
2. Remove the top handle and then the top cover.
3. Remove the three screws that secure the A3 PC Assembly shield to the main deck. See Figure 2-3.
4. Raise the A3 PC Assembly on its hinges to expose the A2 PC Assembly.
5. S501 is located at the left edge of the A2 PC Assembly.
6. Set S501 as required. "BLK-" is for negative blanking pulses. "BLK+" is for positive blanking pulses.
7. Re-assemble the 3314A.

2.6. HP-IB ADDRESS SELECTION

The HP-IB address is set from the front panel and stored in non-volatile memory.

To view the address:

1. Press the blue shift key and then the LCL key. The current address will be displayed for about 1/2 second.

To change the address:

1. Press the RECALL key and then the LCL key. The current address will be displayed indefinitely.
2. Set the 3314A's address from 0 to 30 inclusive with the Modify knob. Address 31 is not allowed. Incrementing the past 30 sets the address to Listen Only. When the 3314A is set to Listen Only, the displayed address will be "L-O".
3. Press the STORE key and then the LCL key to execute the entry.

The HP-IB address is set at the factory to 7. 7 is also the default address if the non-volatile memory is lost.

If you are using a controller in the "command" mode or are using an older type that requires the Talk and Listen addresses, use Table 2-1 to determine the proper addresses.

2.7. POWER ON AND OPERATOR'S CHECKS

Connect the 3314A to its power source using the power cord provided. If the power cord included with your 3314A is not compatible with the outlet, contact your nearest -hp- office for a replacement.

Table 2-1. HP-IB Address

Device	Talk	Listen
0	@	SP
1	A	
2	B	"
3	C	#
4	D	\$
5	E	%
6	F	&
7	G	' 3314A factory setting
8	H	(
9	I)
10	J	*
11	K	+
12	L	,
13	M	-
14	N	.
15	O	/
16	P	0
17	Q	1
18	R	2
19	S	3
20	T	4
21	U	5 usually the controller
22	V	6
23	W	7
24	X	8
25	Y	9
26	Z	:
27		;
28	\	<
29]	=
30	^	>
Listen Only		

Set the LINE switch, located at the upper left corner of the front panel, to the on position. At this time the 3314A will

initiate a 2 second count down to allow electrical stabilization.

do a CALibrate ALL to generate a full complement of calibration constants. Every frequency range and all three functions are checked by a CAL ALL.

display the appropriate calibration errors if the CAL ALL failed. The 3314A will attempt to calibrate itself for another 20 seconds or until a calibration is successful.

This checks ~80% of the all the 3314A's circuitry. A special memory test has been built into the 3314A to test every ROM and RAM IC. To perform this test, hold the "ARB" key in while power is turned ON. While the 3314A is checking the memory, the front panel will be completely blank (about 30 seconds). After the test is finished, all the front panel LEDs will be lit if the test was successful. If the test was not successful, one or more of these LEDs will be off.

ROM IC	LED	RAM IC	LED
U208	FREQ AMPTD	U211	SW/TR INTVL START FREQ
U207	OFFSET SYM PHASE N		STOP FREQ MARK FREQ

In addition, you can now check every front panel key. When a key is pressed, a corresponding LED should go OFF. The Modify knob and arrow keys cause elements of the 7 segment display to go OFF.

2-8. WHAT TO DO IN CASE OF DIFFICULTY

There are several operator actions that should be performed before an 3314A is diagnosed as defective.

1. Clear the 3314A's memory completely by holding the PRESET key in while setting power ON. The 3314A will display "E09" after the normal start up to indicate the the non-volatile memory has been cleared.

2. Check the Line Voltage and the Line Voltage Selector. These must be compatible.

3. Check the Line Fuse for the proper value and type. Normal blow type fuses are not allowed.

4. Clean the air filter.

5. Perform the Operators Checks. See Paragraph 2-7.

6. Check the system cabling and the loading of each output.

7. Check the performance of the 3314A against the specifications with the instructions in Section 4 of this manual.

Hewlett-Packard has a world-wide service organization in case your 3314A requires service. Page ii of this manual contains explicit warranty information and should be thoroughly understood before an instrument is shipped to a repair facility. When a 3314A is shipped to a repair facility, use one of the Service Repair Tags to insure timely action. If you need more Service Repair Tags, order part number 9320-3896 from your nearest sales and service office.

2-9. OPTION 001: PRE-INSTALLATION AND ORDERING INFORMATION

This information applies when you want to install Option 001 into a 3314A in the field. Option 001 has been completely installed and tested at the factory in 3314A's which were ordered with Option 001.

Field installation requires that you order a K04-3314A kit that contains the necessary parts for converting a standard instrument to an Option 001. The K04-3314A kit includes the first six parts listed in the following table.

Qty.	Description	-hp- Part Number
1	X3 PC Assembly	03314-66505
1	X3 Output Cable	03314-61611
1	X3 Power Supply Cable	03314-61616
1	BNC Jack	1250-1717
4	SCREW PH M3	0515-0886
4	WASHER-LOCK-SCR 4	2190-0004
1*	DIODE, Zener, 35.8V	1902-3301
2*	Tie Point	0360-0124
2ft.*	Flexible Tubing	0890-0060
1**	CABLE, COAX, A5 to Main Output	03314-61613
2**	WASHER, SHLDR	5040-0345
1	Label	7120-8377

* These items are required if you are installing Option 001 into 3314A's with serial numbers 2141A00101 through 2141A00150.
 ** These items are required if you are installing Option 001 into 3314A's with serial numbers 2141A00151 through 2141A00261. Cable W13 in this serial number range is 20mm shorter than a standard cable (too short to be used with Option 001). The short cable can be identified because it has an RCA PHONO type connector. The longer cable has a BNC panel connector.

WARNING

Failure to install A1CR123 (35.8V zener diode) into 3314A's with serial numbers 2141A00101 through 2141A00150 when installing Option 001, will affect the warranty of the 3314A and Option 001. This diode protects the X3 PC Assembly from "high line" operation. High line conditions exist whenever the line voltage exceeds the line voltage switch settings by more than 5%.

2-10. INSTALLATION (OPTION 001)

WARNING

Maintenance described herein is performed with power supplied to the instrument and protective covers removed. Such maintenance should be performed by service-trained personnel who are aware of the hazards involved (for example fire and electrical shock). Where maintenance can be performed without power applied, the power cord should be removed.

WARNING

Before any repair is completed, ensure that all safety features are intact and functioning and that all necessary parts are connected to their protective grounding means.

WARNING

All 3314A's with serial numbers from 2141A00101 through 2141A00150 must have a 35.8V zener diode added to the power supply before installing Option 001. This diode is required to protect Option 001 from "high line" operation. High line conditions exist when the line voltage exceeds the line voltage switch settings by more than 5%.

NOTE

The installation of A3CR123 must be done very carefully to meet HP's stringent quality assurance requirements. Failure to install A3CR123 as directed will affect the warranty. See "LIMITATION OF WARRANTY" paragraph on page i of this manual for exact details.

2-11. HOW TO INSTALL A3CR123 (Serial numbers 2141A00101 through 2141A00150 only)

Read the entire set of instructions and review Figure 2-4, "A3CR123 Installation" before beginning. Review the general safety consideration and the static sensitivity topics in Section VIII of the Service Manual.

CAUTION

There are several components on the A3 PC Assembly that are static sensitive. The work station, the soldering iron and the service personnel should be static protected.

A. Remove the power cord.

B. Remove the screws securing the top handle and then remove the handle. Remove the top cover by pulling the cover carefully up and to the rear of the 3314A.

C. Disconnect all five cables from the A3 PC Assembly.

D. Remove all eight screws that secure the A3 PC Assembly to the deck.

E. Carefully lift the A3 PC Assembly straight up. There are three transistors mounted on the deck that connect to the A3 PC Assembly via three connectors on the left side of the PC board

F. Unsolder the collector of A3Q115 and the end of A3R146 that is nearest Q112.

G. Solder a Tie Point (0360-0124) into the empty holes created in step F.

H. Wrap the lead from A3Q115 around its tie point. This lead should make one full turn around the tie point to insure good mechanical contact and the lead should have a slight bend to relieve any stress.

I. Wrap the lead from A3R146 around its tie point. This lead should make one full turn around the tie point to insure good mechanical contact and the lead should have a slight bend to relieve any stress.

J. Install about .6 inch of flexible tubing on each lead of A3CR123.

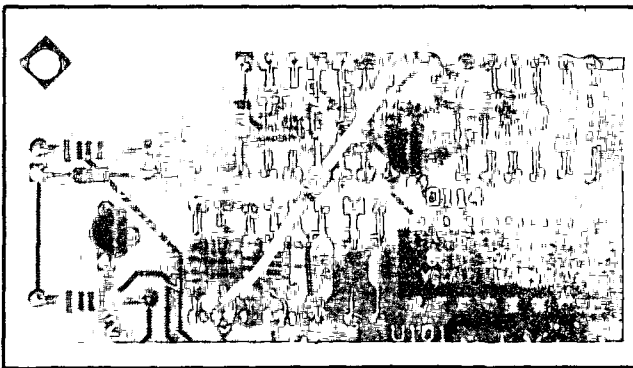


Figure 2-4. A3CR123 Installation

K. Wrap the lead from the cathode (the end with the stripe of A3CR123) to the A3R146 tie point. This lead should make one full turn around the tie point to insure good mechanical contact, the lead should have a slight bend to relieve stress and the end of the flexible tubing should end < .1 inch from the tie point. See Figure 2-4, "A3CR123 installation".

L. Install the other lead from A3CR123 onto the A3Q115 tie point. This lead should make one full turn around the tie point to insure good mechanical contact, the lead should have a slight bend to relieve any stress and the end of the flexible tubing should end < .1 inch

from the tie point. See Figure 2-4, "A3CR123 Installation."

M. Solder the leads to each tie point.

N. Remove the solder flux from both sides of the A3 PC Assembly with flux remover.

O. Carefully install the A3PC Assembly back into the 3314A. Make sure the leads from Q100, Q101 and Q108 are correctly seated in their respective connectors and are not bent. When the A3 PC Assembly is correctly installed, each transistor lead will show about .05 inch above the connectors.

P. Complete the assembly of the 3314A by reversing the actions taken in steps D, C, B and then A.

2-12. HOW TO INSTALL OPTION 001

A. Remove the power cord.

B. Remove the top and bottom covers.

C. Install the A5 PC assembly onto the A1 VCO shield using the four screws and washers supplied. Make sure that the two adjustment holes in the A5 PC Board align with the holes in the shield.

D. Install the X3 Power Supply Cable, 03314-61616, from A5J1 to A3J102.

E. Remove the temporary plug from the X3 Output hole in the rear panel.

F. Install the X3 BNC jack, 1250-1717, in the X3 Output hole. If you do not have a socket type wrench to tighten the nut properly, you will have to remove the rear panel. The rear panel is secured to the rear frame with two screws from the top and two screws from the bottom.

G. Install the X3 Output Cable, 03314-61611, from A5J4 to the X3 Output jack just installed. Install the rear panel if removed in step F.

H. Using a razor or sharp knife, carefully cut the tubing that secures the two SMB connectors located in the middle of the Main Output Cable. It is not necessary to remove the tubing, just to disconnect the SMB connectors.

I. Connect each SMB connector from the Main Output Cable to a corresponding SMB connector on the X3 PC Assembly.

J. Dress the cables so that they are not stressed and so that they will not interfere with the fan blades.

K. Replace all covers and then connect the power cord. All X3 PC Assemblies were fully tested at the factory, however, the Performance Tests should be performed to verify that the X3 Output is fully operational.

2-13. RE-PACKAGING A 3314A

The best material to re-pack a 3314A is the original material used by the factory. If this material has not been retained, the following steps should be performed:

1. Wrap the 3314A in heavy paper or plastic. If you are shipping the 3314A to a -hp- office, attach one of the Service Repair Tags. The front panel should also be protected with an additional piece of cardboard.
2. Use a strong shipping container. A double wall carton made of 350 pound test material is adequate.
3. Use a layer of shock-absorbing material 70 to 100 mm (3 to 4 inches) thick around all sides of the instrument to provide firm cushioning. Do not use loose filler such as styrofoam chips.
4. Seal the shipping container.
5. Mark the shipping container FRAGILE to ensure careful handling.
6. In any correspondence, refer to the 3314A by its full serial number.

2-14. INSTALLING ACCESSORIES Δ8

-hp- manufactures several kits to adapt your 3314A with handles, feet and rack mounts. These kits are available from -hp-.

5 1/4 H Front Handle Kit	5061-9689 Option 907
5 1/4 H Rack Adapter Kit (Half Module)	5061-9657 Option 908
5 1/4 H Support Shelf Kit	5061-0097
Slide Kit (For Support Shelf)	1494-0041
Lock Link Kit (Vertical and Horizontal)	5061-0094
5 1/4 H Bail Handle Kit (Half Module)	5061-2002
Feet-Rear Panel Stand-Off	5061-2009
Feet-Rear and Cord Wrap	5061-0095


132.6H FRONT HANDLE KIT

[PRODUCT HT 132.6mm/5.219 in.]

HP PART NUMBER 5061-9689 (OPTION 907)

CONTENTS

QTY.	PART NO.	"INCH" EQUIV. PART NO.
2.....	FRONT HANDLE ASS'Y 5061-9499	
2.....	FRONT HANDLE TRIM 5020-8896	
6.....	M4 x 0.7 x 10 SCREW, FLAT HEAD, 90° 0515-0896	2510-0195

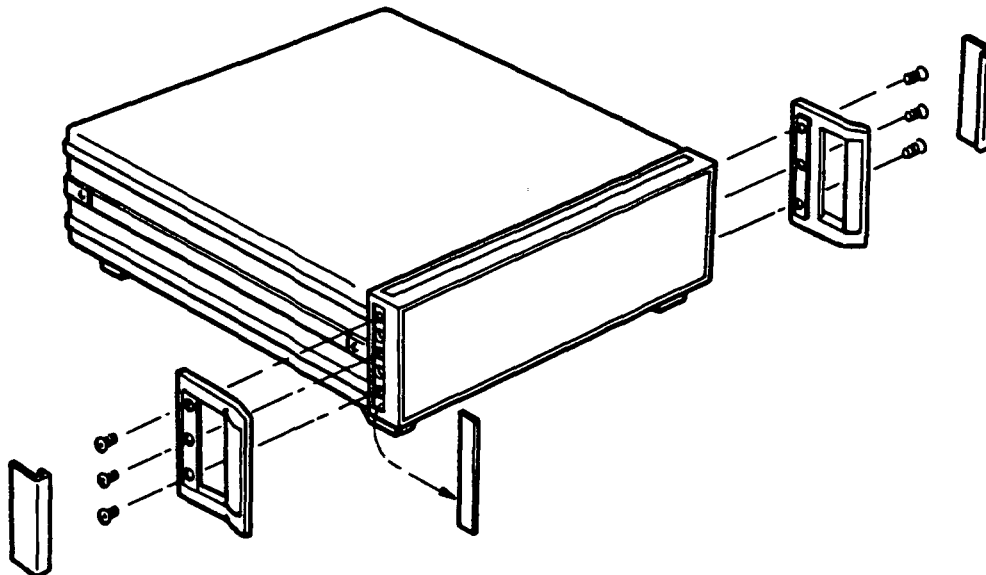

CAUTION: PLEASE VERIFY THE METRIC (5021-) OR THE INCH (5020-) PART NUMBER ON TOP OF THE FRONT FRAME OF THE CABINET FOR THE CORRECT SCREWS.

INSTRUCTIONS

1. REMOVE SIDE TRIM STRIPS.
2. ATTACH FRONT HANDLE ASS'Y WITH 3 SCREWS PER SIDE.
3. PRESS FRONT HANDLE TRIM IN PLACE.

MADE IN USA 2/85
 LABEL NO. 5958-3328


132.6H RACK ADAPTER KIT HALF MODULE

[PRODUCT HT 132.6mm / 5.219 in.]

HP PART NUMBER 5061-9657

CONTENTS

QTY.	PART NO.	"INCH" EQUIV. PART NO.
1.....	ADAPTER ASS'Y	5061-0006
1.....	RACK FLANGE	5020-8862
6.....	M4 x 0.7 x 10 SCREW, PAN HEAD ...	0515-1114 2510-0193

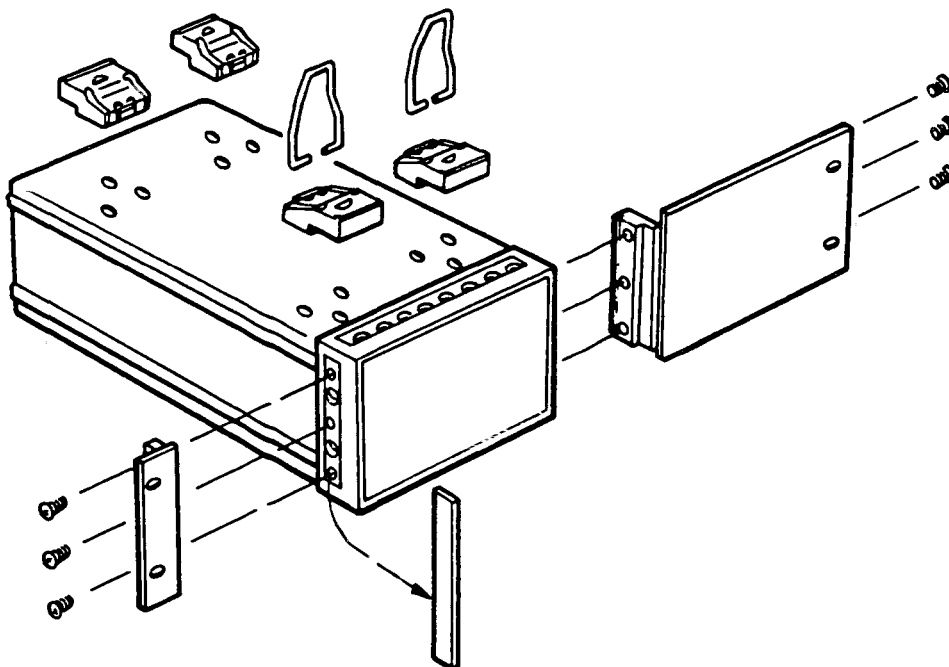

CAUTION: PLEASE VERIFY THE METRIC (5021-) OR THE INCH (5020-) PART NUMBER ON TOP OF THE FRONT FRAME OF THE CABINET FOR THE CORRECT SCREWS.

INSTRUCTIONS

1. REMOVE SIDE TRIM STRIPS.
2. ATTACH ADAPTER ASS'Y TO LEFT OR RIGHT SIDE WITH 3 SCREWS.
3. ATTACH RACK FLANGE TO OPPOSITE SIDE WITH 3 SCREWS.

MADE IN USA 2/85
LABEL NO. 5958-3301

132.6H SUPPORT SHELF KIT SUB MODULES


[PRODUCT WTS. to 22.7kg/50 lbs.]

HP PART NUMBER 5061-9697

CONTENTS

QTY.		PART NO.	"INCH" EQUIV. PART NO.
1	SUPPORT SHELF ASS'Y	5061-9697	
8	TIE DOWN CLIPS	1600-1424	
8	M3.5 x 0.6 x 6, SCREW*, PAN HEAD	0515-0887	2360-0330
8	M3.5 x 0.6 x 12, SCREW**, PAN HEAD	0515-0892	2360-0199
8	M3.5 WASHER	3050-1192	

* STANDARD CABINETS ** PLASTIC CABINETS

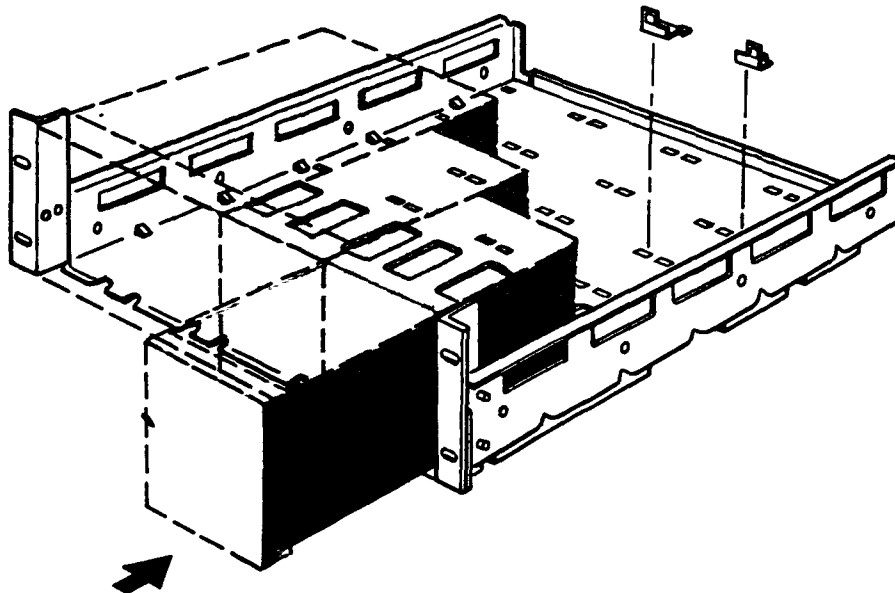

CAUTION: PLEASE VERIFY THE METRIC (5021-....) OR THE INCH (5020-....) PART NUMBER ON THE REAR FRAME OF THE CABINET FOR THE CORRECT SCREWS.

INSTRUCTIONS

1. REMOVE FEET FROM SUB MODULE INSTRUMENT.
2. SET MODULE ON FLOOR OF TRAY AND SLIDE BACK UNTIL TRAY TAB IS INSERTED IN FRONT FRAME.
3. INSERT 2 TIE DOWN CLIPS IN APPROPRIATE TRAY SLOTS, PRESS CLIPS OVER REAR CASTING BOSSES AND LOCK DOWN WITH APPROPRIATE M3.5 x 0.6 SCREWS & WASHERS.
4. MOUNT SUPPORT SHELF IN ANY STD. 482.6 mm RACK ENCLOSURE.


MADE IN USA 2/85
LABEL NO. 5958-3336

SLIDE KIT SUB-MODULE SUPPORT SHELF SYSTEM II

HP PART NUMBER 1494-0065

CONTENTS

QTY.		PART NO.
1 PR.	SLIDE ASSEMBLY	1494-0065
8	M4 x 0.7 x 6 SCREW, PAN HEAD	0515-0698
8	M4 x 0.7 NUT W/LOCKWASHER	0535-0082
8	M5 x 0.8 x 12 PAN HEAD SCREW	0515-0909
8	M5 x 0.8 UNISTRUT NUT05#5-0079	0535-0079

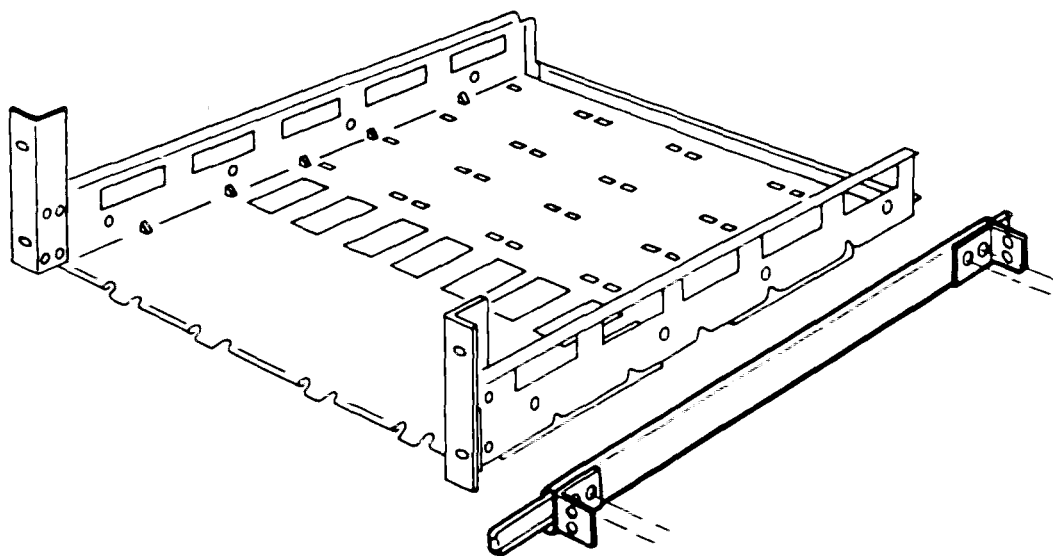

INSTRUCTIONS

1. ATTACH SLIDE (INNER MEMBER) TO EACH SIDE OF SUPPORT SHELF USING 4 M4 x 0.7 x 6 P.H. SCREWS AND NUTS PER SIDE.
2. INSERT 2 UNISTRUT NUTS IN THE REAR OF EACH OF THE 4 VERTICAL COLUMNS OF THE H.P. SYSTEMS ENCLOSURE.
3. ATTACH SLIDE (OUTER MEMBER) TO EACH SIDE OF SYSTEMS ENCLOSURE USING 4 M5 x 0.8 x 12 P.H. SCREWS PER SIDE.

MADE IN USA 2/85
LABEL NO. 5958-3359

LOCK LINK KIT VERTICAL AND HORIZONTAL

HP PART NUMBER 5061-9694

The vertical and horizontal lock link hardware is used for locking together various bench and rack mountable combinations of full and sub module cabinets of equal depths, sufficient horizontal links (12 front, 8 rear), to form three side by side joints (up to 4 sub module instruments), and sufficient vertical links (4 front, 4 rear) to form two sets of over-under joinings.*

CONTENTS

QTY	CONTENTS	PART NO.
4	VERTICAL LOCK LINK, FRONT	1600-1423
8	M3.5 x 0.6 x 6 PAN HEAD	0515-0887
4	VERTICAL LOCK LINK, REAR	0050-2168
8	M3.5 x 0.6 x 12 (90°) FLAT HEAD PLASTIC MOD	0515-1235
8	M3.5 x 0.6 x 8 (90°) FLAT HEAD METAL MOD	0515-1234
12	HORIZONTAL LOCK LINK, FRONT	0050-2166
12	M4 x 0.7 x 6 (90°) FLAT HEAD	0515-1055
6	HORIZONTAL LOCK LINK, REAR	0050-2167
12	M3.5 x 0.6 x 12 (90°) FLAT HEAD PLASTIC MOD	0515-1235
12	M3.5 x 0.6 x 8 (90°) FLAT HEAD METAL MOD	0515-1234

"INCH" HARDWARE

This kit also contains the equivalent "inch" hardware to attach the lock links to the "inch" cabinet frames.

QTY	CONTENTS	PART NO.
8	6-32 x 0.188 PAN Head	2360-0330
20	6-32 x 0.312 FLAT HEAD, 100'	2360-0334
20	6-32 x 0.438 FLAT HEAD, 100'	2360-0360
12	8-32 x 0.250 FLAT HEAD, 100'	2510-0192

CAUTION

Please verify the "inch" front- or rear frame as follows:

"Inch" Front- or Rear Frame 5020-

"Metric" Front- or Rear Frame 5021-

(These P/N's are diecast into the top and rear of the frames)

INSTRUCTIONS

Vertical Locking

1. Remove top trim strip from bottom front frame.
2. Attach front vertical lock links to bottom front frame using 2 M3.5 x 0.6 pan hd. screws per link.
3. Slide top cabinet back to lock front frames together.
4. Attach rear vertical lock links over appropriate rear bosses using 2 M3.5 x 0.6 F.H.M. screws per link .

Horizontal Locking


1. Remove appropriate side trim strips.
2. Attach front horizontal lock links to front frames using 1 M4x0.7 F.H.M. screw per link. Opposing links must be installed to interlock.
3. Press cabinets together, slide left cabinet back to lock front frames.
4. Attach rear horizontal lock links over appropriate rear bosses using 2M3.5 x 0.6 F.H.M. screws per link.

*Locking cabinet together horizontally in a configuration wider than 1 full module width or locking more than two sub modules vertically is not recommended.


MADE IN USA 2/85
LABEL NO. 5958-3333

FRONT LOCK LINKS 


REAR LOCK LINKS 

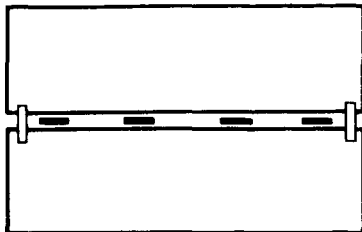


- VERTICAL LOCK LINKS FRONT
- VERTICAL LOCK LINKS REAR

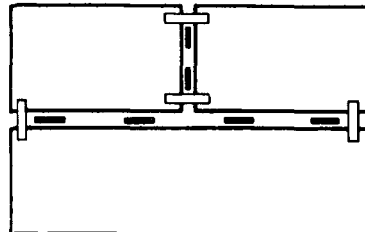


- 4 - VERTICAL LOCK LINKS FRONT
- 2 - VERTICAL LOCK LINKS REAR
- 4 - HORIZONTAL LOCK LINKS FRONT
- HORIZONTAL LOCK LINKS REAR

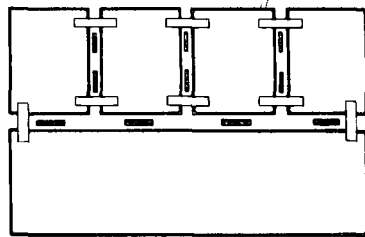


- 4 - VERTICAL LOCK LINKS FRONT
- 2 - VERTICAL LOCK LINKS REAR
- 12 - HORIZONTAL LOCK LINKS FRONT
- 6 - HORIZONTAL LOCK LINKS REAR

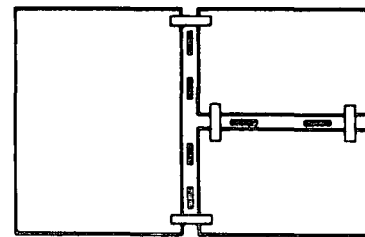







- 2 - VERTICAL LOCK LINKS FRONT
- 2 - VERTICAL LOCK LINKS REAR
- 8 - HORIZONTAL LOCK LINKS FRONT
- 2 - HORIZONTAL LOCK LINKS REAR

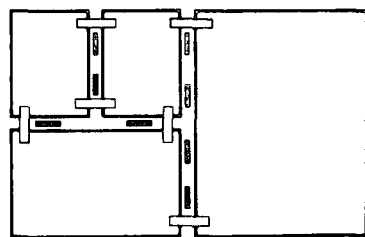

- 2 - VERTICAL LOCK LINKS FRONT
- 2 - VERTICAL LOCK LINKS REAR
- 12 - HORIZONTAL LOCK LINKS FRONT
- 4 - HORIZONTAL LOCK LINKS REAR

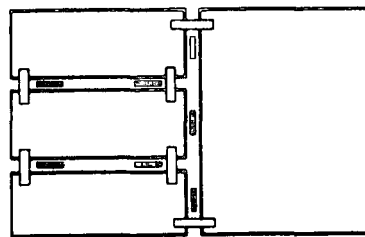

- 4 - VERTICAL LOCK LINKS FRONT
- 4 - VERTICAL LOCK LINKS REAR
- 6 - HORIZONTAL LOCK LINKS FRONT
- 2 - HORIZONTAL LOCK LINKS REAR

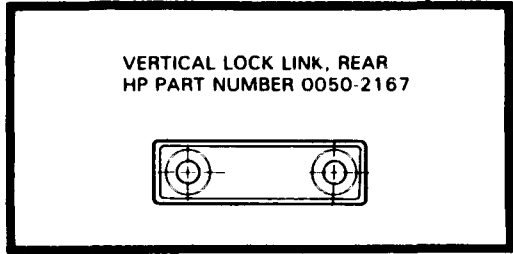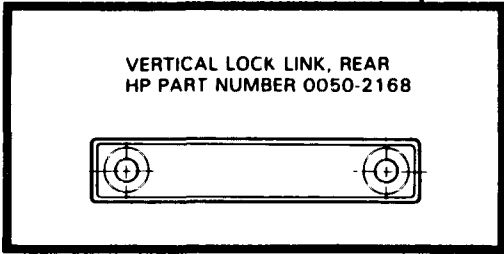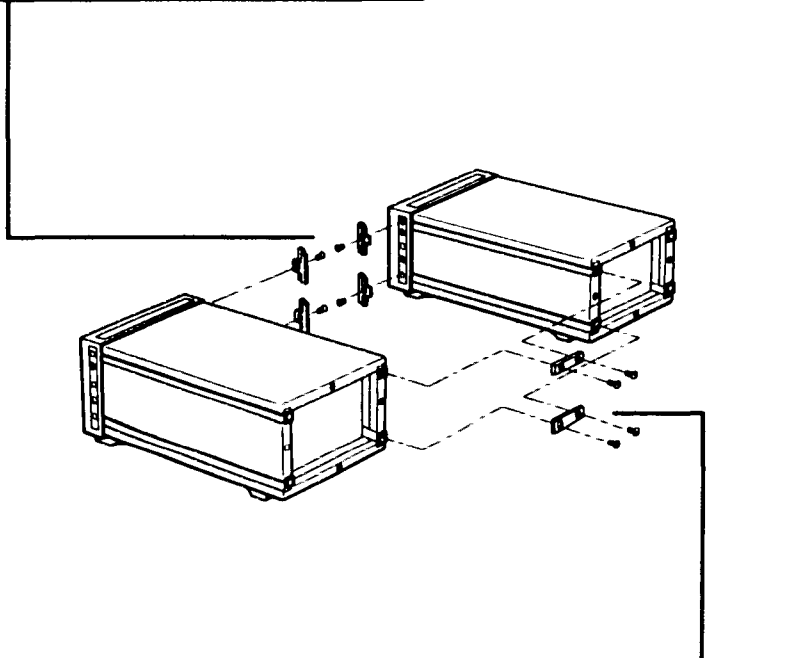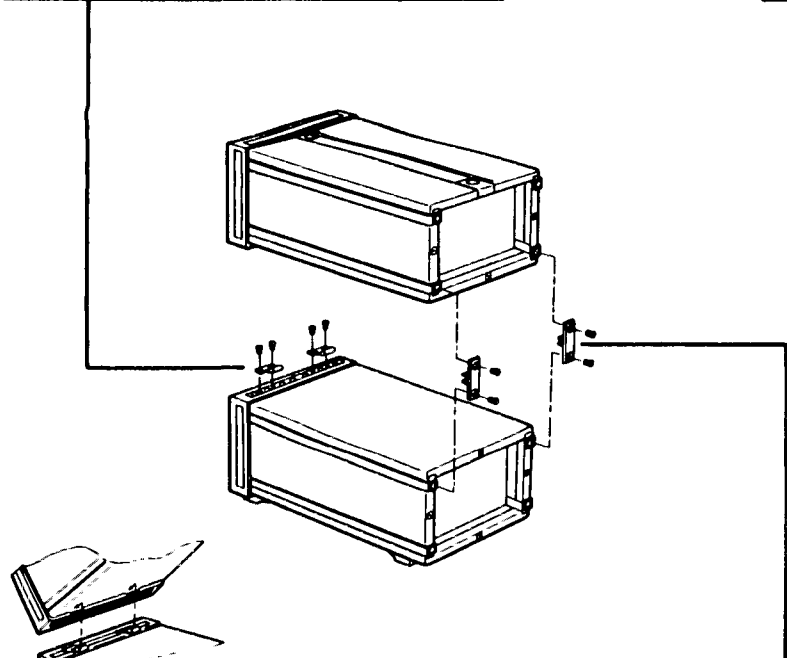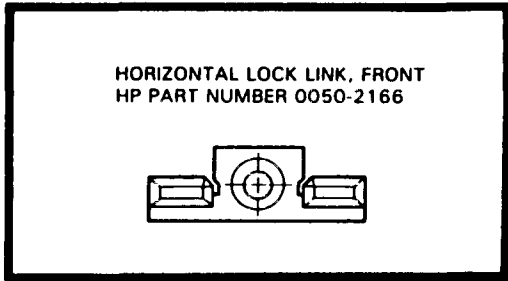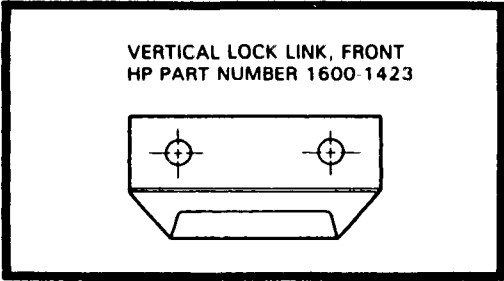


132.6H BAIL HANDLE KIT HALF MODULE

[PRODUCT HT. 132.6mm/5.219 in.]

HP PART NUMBER 5061-9702

CONTENTS

QTY.	PART NO.	"INCH" EQUIV. PART NO.
1.....	BAIL HANDLE ASS'Y	5061-0036
2.....	BAIL HANDLE ADAPTER	5040-7217
2.....	BAIL HANDLE RETAINER	5040-7216
2.....	M4 x 0.7 x 16 SCREW, PAN HEAD ...	0515-1106 2510-0194
2.....	SPACER	0380-1721

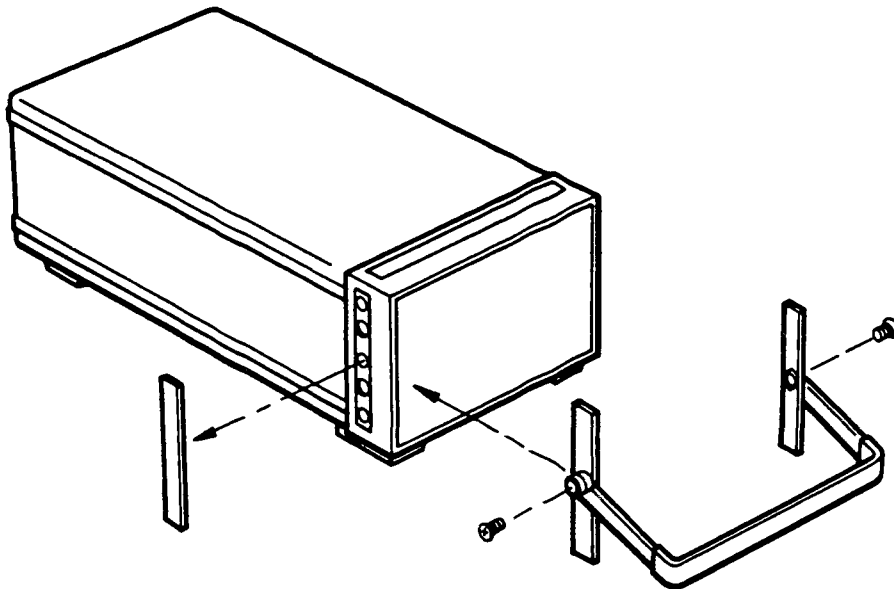

CAUTION: PLEASE VERIFY THE METRIC (5021-) OR THE INCH (5020-) PART NUMBER ON TOP OF THE FRONT FRAME OF THE CABINET FOR THE CORRECT SCREWS.

INSTRUCTIONS

1. REMOVE SIDE TRIM STRIPS.
2. ATTACH HANDLE ASSEMBLY WITH 1 SCREW PER SIDE.


MADE IN USA 2/85
LABEL NO. 5958-3340

FEET-REAR PANEL STAND-OFF FULL & SUB MODULES

HP PART NUMBER 5061-9709

CONTENTS

QTY.		PART NO.	"INCH" EQUIV. PART NO.
4	FOOT-REAR PANEL STAND-OFF	5040-7221	
4	M3.5 x 0.6 x 8 PAN HD. SCREW	0515-1232	2360-0195

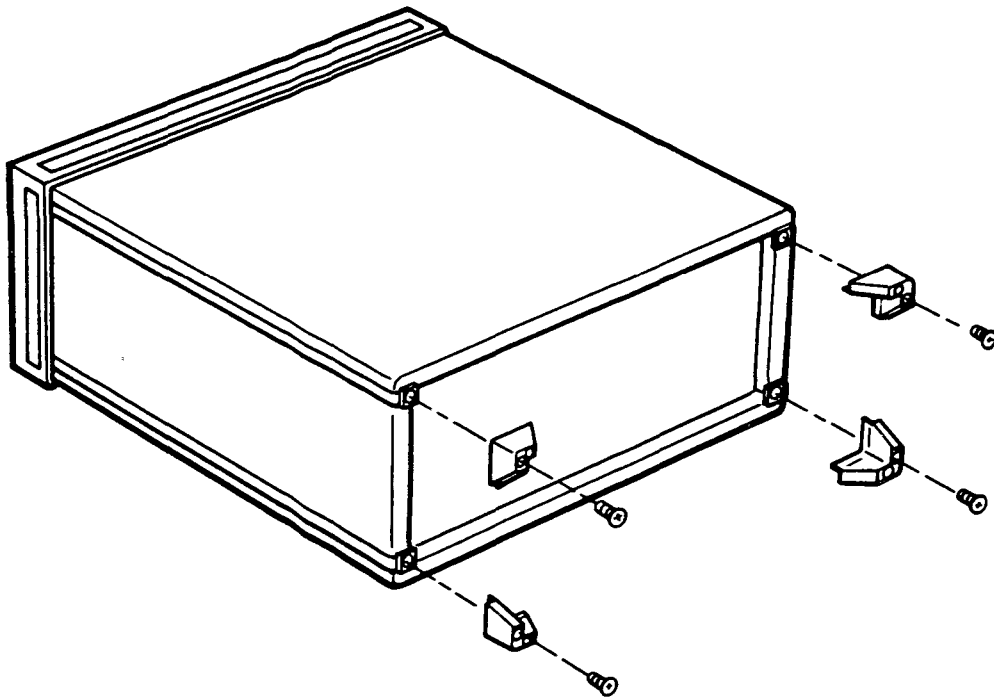

CAUTION: PLEASE VERIFY THE METRIC (5021- . . .) OR THE INCH (5020- . . .) PART NUMBER ON THE REAR FRAME OF THE CABINET FOR THE CORRECT SCREW

INSTRUCTIONS

1. PLACE ONE FOOT OVER EACH CORNER BOSS ON REAR CASTING AND SECURE WITH 1 SCREW.


MADE IN USA 2/85
LABEL NO. 5958-3344

FEET-REAR & CORD WRAP SUB MODULES

HP PART NUMBER 5061-9695

CONTENTS

QTY.		PART NO.	"INCH" EQUIV. PART NO.
4	FOOT-REAR & CORD WRAP	5040-7213	
4	M3.5 x 0.6 x 25 PAN HD. SCREW	0515-1233	2560-0209

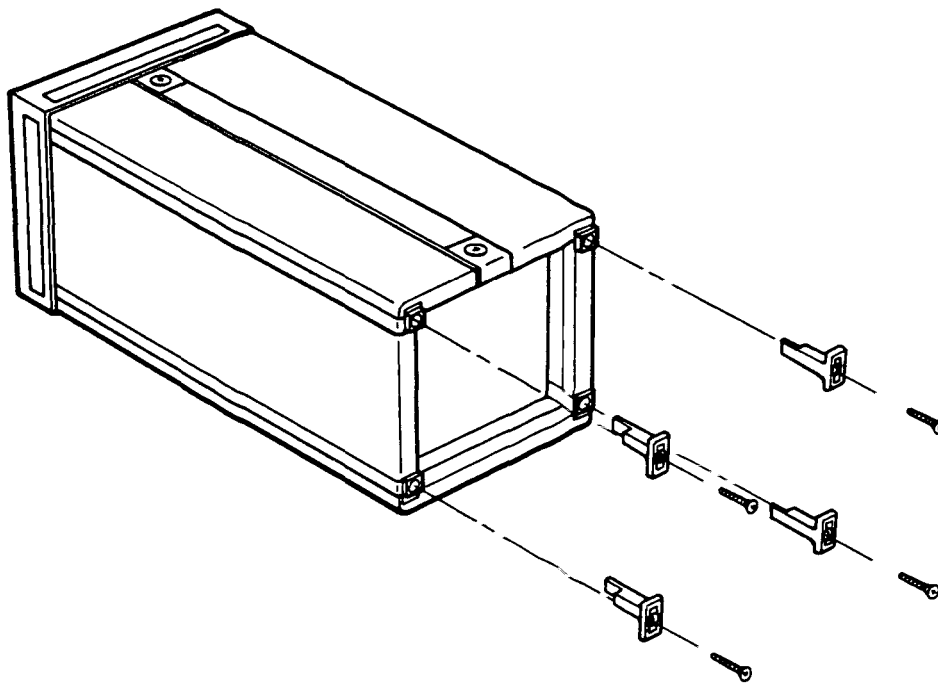

CAUTION: PLEASE VERIFY THE METRIC (5021-. . .) OR THE INCH (5020-. . .) PART NUMBER ON THE REAR FRAME OF THE CABINET FOR THE CORRECT SCREW.

INSTRUCTIONS

1. PLACE ONE FOOT OVER EACH CORNER BOSS ON REAR CASTING AND SECURE WITH 1 SCREW.

MADE IN USA 2/85
LABEL NO. 5958-3334

SECTION III OPERATION

3-1. INTRODUCTION

This section contains a front and rear panel overview, error code listing, and an HP-IB summary. The Operating Manual should be used for detailed operating information.

Table 3. Error Codes With Status Byte Bit#

Error #	Definition	Status Byte bit #
00	No Error (used via HP-IB, only)	
	--- OPERATOR ERRORS (non-ARB) ---	
01	Frequency/Symmetry conflict	0
02	Bus address entry error	0
03	Front panel failure/Invalid keycode	0
04	Calibration measurement not performed	1
05	Allowed in sweep, only	0
06	Not allowed in sweep	0
07	Not allowed in log sweep	0
08	Store 0 not allowed	0
09	Non-volatile memory lost; battery down	0
	--- OPERATOR ERRORS (ARB) ---	
10	Vector insert not allowed	0
11	Vector delete not allowed	0
18	Allowed in ARB, only	0
19	Not allowed in ARB	0
	--- PLL ERRORS ---	
20	Unstable input frequency	1
21	Input frequency outside of acquisition range	1
22	3314A output frequency would be out of range	1
23	SW/TR INTVL > 20ms	1
24	Internal phase locked loop, unlocked	0
	--- FREQUENCY CALIBRATION ERRORS ---	
30	No frequency detected	0
31	Frequency error exceeds correction capability	0
32	Frequency unstable during calibration	0
	--- AMPLITUDE CALIBRATION ERRORS ---	
34	Signal amplitude outside measurement range	0
35	Signal amplitude gain too high	0
36	Signal amplitude gain too low	0
37	Signal amplitude gain exceeds correction capability	0
38	Signal amplitude gain offset exceeds correction capability	0
	--- HP-IB ERRORS ---	
41	Mnemonic invalid	0
42	Definition number invalid	0
43	Data invalid	0
44	Units invalid	0
45	Range Hold not allowed	0
46	ARB/SWEEP parameter conflict	0
47	Not allowed in MAN Sweep	0
	--- OVERLOAD ---	
50	AM or FM/VCO input voltage exceeds normal operating limits	1
51	Output voltage exceeds safe operating limits; or, excessive external voltage (greater than $\pm 15V$ peak) applied to main output. 3314A has disconnected itself.	3


THE 3314A REAR PANEL

X3 output

(only Instruments with Option 001 have this output) IS a high voltage, low impedance output whose output voltage is 3 times the displayed amplitude and offset when the Main Output is terminated into 50Ω . This output whose capable of sourcing $\pm 30\text{mA}$ peak current without clipping. The upper frequency limit is 1MHz,

X Axis output produces a voltage ramp from -5V to +5V whose voltage is proportional to the sweep frequency. This output is useful to drive the X Axis of plotters and oscilloscopes,

Z Axis output produces voltage levels to blank ($> +5\text{V}$ or enhance ($< -5\text{V}$) the intensity of an oscilloscope display during sweep (intensifies the marker frequency and blanks the retrace] or ARB (intensifies the current vector).

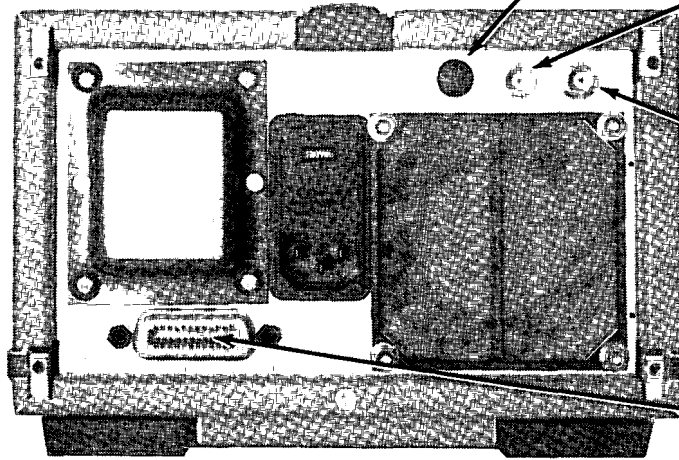

HP-IB is used to control the operating of the 3314A from a remote controller. This connector uses metric fasteners and is not compatible With older cables using english threated fasteners, Metric fasteners are available from -hp- to upgrade older cables

Figure 3-1a. 3314A Rear Panel

THE 3314A FRONT PANEL

1

Status

This group contains the HP-IB status indicators and the LCL key to switch control of the 3314A from remote to front panel operation. When the LCL key is preceded by the BLUE shift key, the 3314A displays its HP-IB address for 1/2 second. The HP-IB address is set from the front panel and stored in non-volatile memory. The factory setting is 7. See "How to Change the 3314A's HP-IB Address" located in the HP-IB section of this manual.

2

Mode

The 3314A has 7 basic operating modes. The trigger signal, either the 3314A's internal trigger source or an external signal you supply, is essential to every operating mode except FREE RUN with sweep off.

FREE RUN Mode. The 3314A outputs continuous Sine, Square, Triangle or ARB functions. Continuous functions, sweeps and ARB operations are allowed. See "How to Use the FREE RUN Mode"

GATE Mode The output is "gated" ON and OFF by the Trigger level. Gated functions, sweeps and ARB operations are allowed. See "How to Use the GATE Mode".

N CYCLE Mode. The 3314A outputs a burst of N complete cycles of the selected function, starting when a Trigger edge is received. The N parameter sets the number of cycles from 1 to 1999. The start/stop phase is set with the Phase parameter from -90° to +90°. See "How to Use the N CYCLE Mode".

1/2 CYCLE Mode. The 3314A outputs alternate 1/2 cycles of the selected function when a Trigger edge is received. The start phase of the first 1/2 cycle (and the stop phase of the second 1/2 cycle) is set with the Phase parameter from -90° to +90°. See "How to Use the 1/2 CYCLE Mode".

Fin X N Mode. The 3314A will phase lock to the Trigger (reference) signal and output a frequency "N" times the reference frequency. The N parameter sets "N" from 1 to 1999. The frequency limits for both the 3314A and the reference are from 50Hz to 20MHz. See "How to Use the PHASE LOCK Modes"

Fin + N Mode. The 3314A will phase lock to the Trigger (reference) signal and output a frequency equal to the reference frequency divided by "N". The N parameter sets "N" from 1 to 1999. The frequency limits for both the 3314A and the reference are from 50Hz to 20MHz. See "How to Use the PHASE LOCK Modes"

ARB Mode The ARB mode redefines the 3314A as an Arbitrary Waveform Generator. The output waveform consists of a series of voltage ramps called vectors. The operator has control over the number of vectors, the length of each vector in time and the height of each vector. Both continuous ARB functions (FREE RUN Mode) and gated ARB (GATE Mode) are allowed. See "How to Use the ARB Mode".

3

Preset

The Preset key initializes the 3314A to its basic operating state. This feature is especially useful to quickly recover from complex operating states

4

Store/Recall

Up to 5, non-ARB front panel control settings can be stored in registers 1 through 5 to be recalled in the future. Register 0 is reserved for the front panel setting at power off. In addition, 6 ARB waveforms can be recalled from ARB registers 0 through 5. ARB waveforms are automatically stored as they are created.

5

External Trigger

One EXT Trigger is a signal you apply to the Trigger I/O port that satisfies the selectable slope and threshold conditions (note that the Trigger I/O port is an input when EXT Trigger is selected). EXT Triggers are level sensitive for Gate; edge sensitive for Burst, Phase Lock and Sweep operations.

Another EXT Trigger is the MAN key. You will have to press this key twice when in Gate mode, to simulate a complete trigger cycle (both levels). Once is sufficient for all other operations. The minimum signal that will consistently trigger the 3314A is $\geq 300\text{mVp-p}$, centered on the selected trigger threshold voltage

There are two EXT Triggers available from the HP-IB, the Group Execute Trigger (GET) and the "MN" programming command.

6

Internal Trigger

The SW/TR INTVL parameter sets the period of the internal trigger (note that the Trigger I/O port is an output when INT trigger is selected). This output signal is useful as a sync signal during sweeps, gate and burst operations

7

External Modulation

Type	Sensitivity	Range
AM	$\pm 1\text{V} - 100\%$	0% to > 100%
FM	$\pm 1\text{V} - \pm 1\%$ of range	0% to $\pm 1\%$ deviation
VCO	10%/volt	+10% to -80%, useable to -100%

8

Function

The **MAIN OUTPUT**. This output has a characteristic output impedance of 50Ω. Although operation into other than 50Ω is allowed, the actual AC amplitude and DC offset will be different from the displayed values and the quality of the functions will be degraded at higher frequencies due to transmission line impedance mismatches.

The **SYNC OUTPUT**. This output has a characteristic output impedance of 50Ω when terminated into $\leq 50\Omega$. When terminated into $> 50\Omega$, it will deliver TTL compatible levels of 0 to $> 2.5\text{V}$. The maximum unloaded voltage is limited to $\sim 3\text{V}$. The edges of the sync signal are coincident with the peaks of the sine and triangle functions and coincident with the edges of the square function. This relationship is inverted by Function Invert.

9 Entry/Sweep

Most of the keys in this group are select keys for variable entries. The top row contains select keys for the more universal parameters. Note that the blue shifted definition of these keys presets the parameter. The second row contains the select keys for the 3314A's sweep capabilities. The SW/TR INTVL key is the select key for the sweep interval (SW INTVL) and for the internal trigger interval (TR INTVL). When ARB is active, the sweep functions are redefined to ARB functions. The keys are renamed by the labels below them.

10 Range

RANGE UP or **DOWN** (↑ or ↓) keys multiply or divide the displayed value by 10 until the 3314A's operating limits are reached. This provides an extremely fast method to modify the displayed parameter.

RANGE HOLD inhibits auto-ranging of Frequency (8 ranges), Amplitude (4 ranges), and/or DC Offset (2 ranges) when these parameters are changed with the Modify knob. When in Fin X N and Fin - N, Frequency Range Hold also inhibits auto-acquisition.

11 Modify

All variable parameters (selected by keys in the Entry Group) are entered into the 3314A using the Modify knob or the ↑ or ↓ keys. These controls change the value of the displayed operating parameter. The Modify knob has 2 basic operating modes called "Cursor" and "Multi Speed".

CURSOR (a digit is flashing). This mode is useful when making small changes or changes of constant increments. The flashing cursor digit is incremented or decremented by 1 whenever rotation of the Modify knob is sensed. The ← and → keys move the cursor through the display.

MULTI SPEED (no digit is flashing). This mode is useful when making large changes. The least significant digit in the display is incremented or decremented 1, 2, 4, 8, 16 or 32 times faster depending upon how fast you turn the Modify knob.

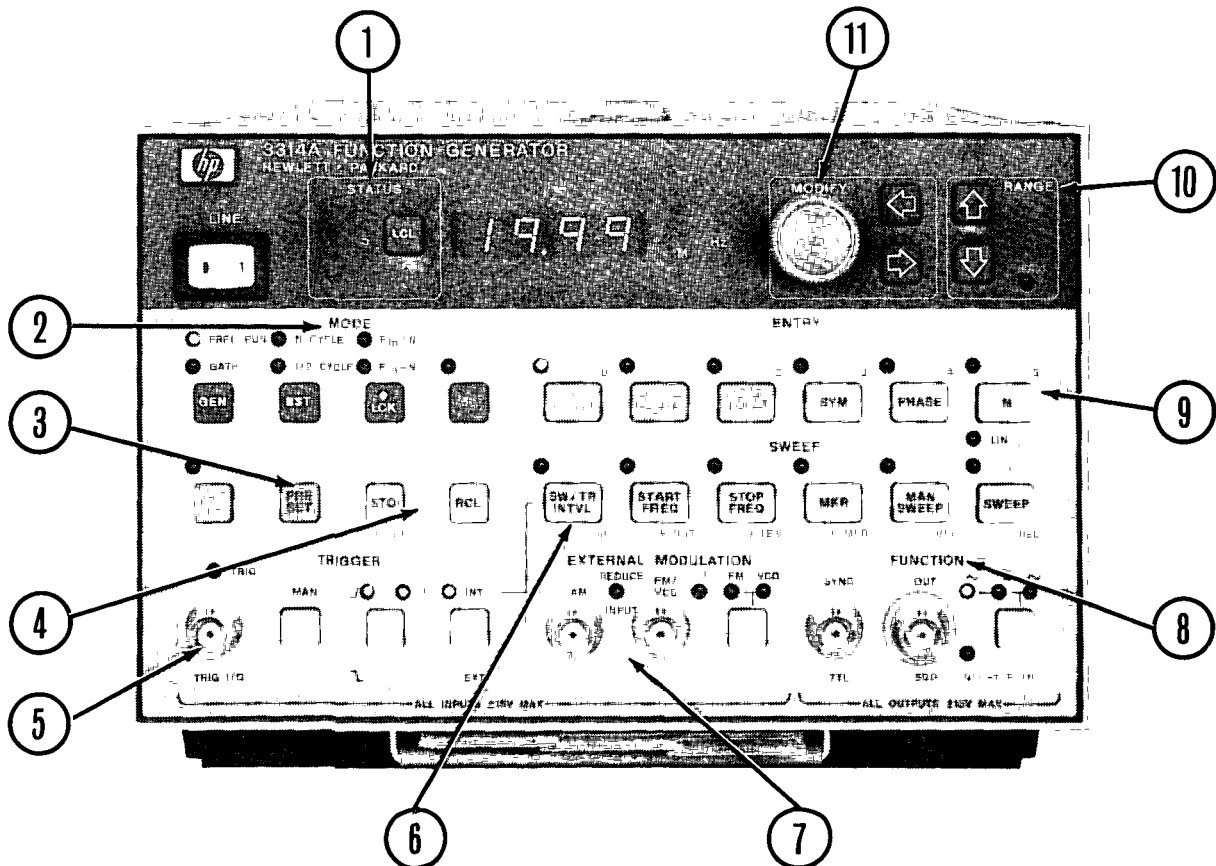


Figure 3-1b. 3314A Front Panel

HP-IB PROGRAMMING SUMMARY

HP-IB Address

The 3314A's HP-IB address is set at the factory to 7. To view the current HP-IB address, press the BLUE shift key and then the LOCAL key. To change the HP-IB address, press the RECALL and then the LOCAL keys, rotate the TUNING KNOB until the desired address is displayed and then press the STORE and LOCAL keys. Listen Only is set by incrementing the address past 30.

3314A Programming Codes

3314A Function	HP-IB Codes		Format Of Returned Data	3314A Function	HP-IB Codes		Format of Returned Data
	Program	Query			Program	Query	
Amplitude milli Volt μ V Volt μ V	AP MV VD	QAP	AP 00000ddd ddVO or AP 00000dd dddVO or AP 000000 ddddVO or AP 000000 ddddVO	Preset	PR		
Ampl Modulation OFF ON	AM I	QAM	AMd	Range Down	RD		
ARB OFF ON ON/Clear Wave	AR 0 1 2	QAR	ARd	Range Hold OFF DC Offset Amplitude Frequency	RH 0 1 to 2 1 to 4 1 to 8		
Calibrate All	CA			Range Up	RU		
Calibrate Disable	CD			Recall (non ARB) Register	RC 0 to 5		
Calibrate Enable	CE			Recall Wave (ARB) ARB ON and recall Wave	RW 0 to 5	QRW	RWd
Calibrate Freq	CF			SRQ Mask, bits 0-3 Mask	ML @ to 0		
Data Transfer Mode Unbuffered 96 Byte Buffer	DM 1 2			SRQ Mask, bits 4-7 Mask	MH @ to 0		
Delete Vector	DV			Start Frequency Hertz kilo-Hertz Mega Hertz	ST HZ KZ MZ	QST	ST 00000000 HZ or ST 00000000 dHZ or ST 00000000 ddHZ or ST 0000000 dddHZ
Δ 1 milli Seconds Seconds Display Errors OFF ON	DT MS SN DE 0 1	QDT	DT 000000 ddddSN or DT 0000 00000SN	Stop Frequency Hertz kilo-Hertz Mega Hertz	SP HZ KZ MZ	QSP	SP 00000000 HZ or SP 00000000 dHZ or SP 00000000 ddHZ or SP 0000000 dddHZ
Error Codes		QER	ERdd	Store (non ARB) Register	SD 1 to 5		
Frequency Hertz kilo-Hertz Mega Hertz	FR HZ KZ MZ	QFR	FR 00000000 HZ or FR 00000000 dHZ or FR 00000000 ddHZ or FR 0000000 dddHZ	Sweep OFF Linear Log	SW 0 1 2	QSW	SWd
Freq Modulation OFF ON	FM 0 1	QFM	FMd	Sweep Status Mask (bit 5 of Status Byte) Masked = 1 at Start = 1 at Stop = 1 either	SM 0 1 2 3		
Function Invert OFF ON	FI 0 1	QFI	FI d	Symmetry Percent	Sr PC	QSt	Sr 00000000 PC
Function OFF Sine Square Triangle Insert Vector	FU 0 1 2 3 IV	QFU	FUd	Sweep/Trig Interval milli Seconds Seconds	TI MS SN	QTI	TI 0000000000 SN or TI 000000000 dSN or TI 00000000 ddSN or TI 0000000 dddSN or TI 000000 ddddSN or TI 00000000000SN or TI 00000000000SN
Manual Sweep OFF ON	MA 0 1	QMA	MA d	Trigger Level LV Threshold OV Threshold	LV 1 2	QLV	LVd
Manual Trigger	MN			Trigger Slope Positive Negative	SL 1 2	QSL	SLd
Marker Frequency Hertz kilo-Hertz Mega Hertz	Mk HZ KZ MZ	QMK	Mk 00000000 HZ or Mk 00000000 dHZ or Mk 00000000 ddHZ or Mk 0000000 dddHZ	Trigger Source Internal External	SR 1 2	QSR	SRd
Mode Free Run Gate N Cycle 1/2 Cycle Fin \times N Fin \div N	MD 1 2 3 4 5 6	QMO	MOd	VCO OFF ON	VC 0 1	QVC	VCd
N Enter	NM EN	QNM	NM 0000000000 EN	Vector Height Enter	VH EN	QVH	VHs0000000000 EN
Offset Volts DC	OF VO	QOF	OFs00000000 ddVO or OFs0000000 dddVO	Vector Length Enter	VL EN	QVL	VL 0000000000 EN
Phase degree	PH DG	QPH	PHs0000000000 dDG PHASE	Vector Marker Enter	VM EN	QVM	VM 0000000000 EN
PLL Status Mask (bit 5 of Status Byte) Masked = 1 at Lock = 1 at Unlock = 1 either	PM 0 1 2 3						


d = ASCII digits 0 to 9.
s = sign bit, ASCII space or -
All other characters are exactly as shown.

All returned data is followed by an ASCII carriage return and line feed. EOI remains false.

HP-IB PROGRAMMING SUMMARY (cont)

Status Byte

Bits of the Status Byte are set (1) only after unmasking that bit and the condition is met. All bits are reset immediately after the Status Byte is sent.

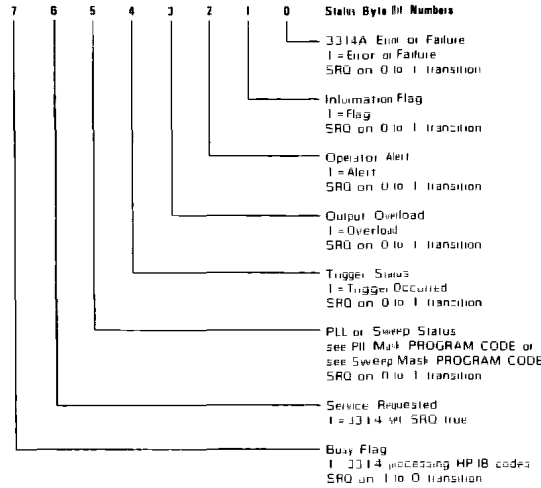

Unmasking The Status Byte

The 3314A will Request Service (SRQ line true) when a bit of the Status Byte is unmasked and the operating condition to set that bit exists. Masking is not affected by PRESET or CLEAR 7. All bits except bit 7 will set SRQ at the 0 to 1 logic transition. Bit 7 will set SRQ at the 1 to 0 logic transition and is useful when using Data Transfer Mode 2, indicating when the 3314A is ready to be programmed again.

ML	Bit Number				ML	Bit Number			
	3	2	1	0		7	6	5	4
@	MASKED	MASKED	MASKED	MASKED	@	MASKED	MASKED	MASKED	MASKED
A	MASKED	MASKED	MASKED	UNMASKED	A	MASKED	MASKED	MASKED	UNMASKED
B	MASKED	MASKED	UNMASKED	MASKED	B	MASKED	MASKED	UNMASKED	MASKED
C	MASKED	MASKED	UNMASKED	UNMASKED	C	MASKED	MASKED	UNMASKED	UNMASKED
D	MASKED	UNMASKED	MASKED	MASKED	D	MASKED	MASKED	MASKED	MASKED
E	MASKED	UNMASKED	MASKED	UNMASKED	E	MASKED	MASKED	MASKED	UNMASKED
F	MASKED	UNMASKED	UNMASKED	MASKED	F	MASKED	MASKED	UNMASKED	MASKED
G	MASKED	UNMASKED	UNMASKED	UNMASKED	G	MASKED	MASKED	UNMASKED	UNMASKED
H	UNMASKED	MASKED	MASKED	MASKED	H	UNMASKED	MASKED	MASKED	MASKED
I	UNMASKED	MASKED	MASKED	UNMASKED	I	UNMASKED	MASKED	MASKED	UNMASKED
J	UNMASKED	MASKED	UNMASKED	MASKED	J	UNMASKED	UNMASKED	MASKED	MASKED
K	UNMASKED	MASKED	UNMASKED	UNMASKED	K	UNMASKED	UNMASKED	UNMASKED	UNMASKED
L	UNMASKED	UNMASKED	MASKED	MASKED	L	UNMASKED	MASKED	MASKED	MASKED
M	UNMASKED	UNMASKED	MASKED	UNMASKED	M	UNMASKED	MASKED	MASKED	UNMASKED
N	UNMASKED	UNMASKED	UNMASKED	MASKED	N	UNMASKED	UNMASKED	MASKED	MASKED
O	UNMASKED	UNMASKED	UNMASKED	UNMASKED	O	UNMASKED	UNMASKED	UNMASKED	UNMASKED

Error Codes

ER #	Definition	Status Byte Bit #	ER #	Definition	Status Byte Bit #
00	No errors since errors were last queried (HP-IB function only)				
	OPERATOR ERRORS (non ARB)			FREQUENCY CALIBRATION ERRORS	
01	Frequency symmetry conflict	0	30	No frequency detected	0
02	Bus address entry error	0	31	Frequency error exceeds correction capability	0
03	Front panel key failure	0	32	Frequency unstable during calibration	0
04	Calibration measurements not performed	1		AMPLITUDE CALIBRATION ERRORS	
05	Allowed in sweep only	0	34	Signal amplitude outside measurement range	0
06	Not allowed in sweep	0	35	Signal amplitude gain too high	0
07	Not allowed in log sweep	0	36	Signal amplitude gain too low	0
08	Store 0 not allowed	0	37	Signal amplitude gain out of limit	0
09	Non-volatile memory lost/battery down	0	38	Signal amplitude gain offset out of limit	0
	OPERATOR ERRORS (ARB)			HP-IB ERRORS	
10	Factor insert not allowed	0	41	Mnemonic invalid	0
11	Vector delete not allowed	0	42	Definition number invalid	0
18	Allowed in ARB only	0	43	Data invalid	0
19	Not allowed in ARB	0	44	Unit invalid	0
	PLL ERRORS		45	Range Hold not allowed	0
20	Unstable input frequency	1	46	ARB/SWEEP parameter conflict	0
21	Input frequency outside of capture range	1	47	Not allowed in Manual Sweep	0
22	3314A output frequency would be out of range	1		OVERLOAD	
23	Internal interval > 20ms	1	50	AM or FM/VCO input voltage exceeds normal operating limits (HP-IB function only)	1
24	Internal synthesis unlocked	0	51	Output voltage exceeds safe operating limits or excessive external voltage (greater than ±15V peak) applied to main output; 3314A has disconnected itself	3

SECTION IV

PERFORMANCE TESTS

4.1. INTRODUCTION

The following tests are designed to compare various 3314A parameters to their given specifications, in order to determine the functional accuracy of the instrument. Test data can be entered on the Performance Test Record located at the end of this section. The test record, which contains the tested specifications and acceptable limits, may be copied without written permission from the Hewlett-Packard Co. See Section VII, Manual Backdating, for "Δ" explanations.

Table 4-1 Performance Tests

Test Name	Paragraph
Frequency Accuracy	4-2
Time Axis and Variable Symmetry	4-3
Internal Trigger Accuracy	4-4
Triangle Linearity	4-5
Start/Stop Phase Accuracy	4-6
Residual DC and DC Offset Accuracy	4-7
Square Wave Rise Time and Aberrations	4-8
Sine Wave Harmonics	4-9
AM Harmonics	4-10
VCO Linearity	4-11
Phase Locked Loop Phase Accuracy	4-12
Amplitude Accuracy	4-13
Sine Wave Power Flatness	4-14
Manual Sweep Accuracy	4-15
Step Attenuator Accuracy	4-16
Vernier Attenuator Flatness	4-17
Option 001 Test Name	4-18
X3 Gain Accuracy	4-19
Sine Power Flatness	4-20
Harmonic Distortion	4-21
Square Wave Rise/Fall Time	4-22
Residual DC Offset	4-23

When "PRESET" is pressed on the 3314A, the instrument defaults to the following conditions:

- MODE -- Free Run
- FREQ -- 1kHz
- AMPTD -- 100mVp-p
- OFFSET -- 0VDC
- SYM -- 50%
- TRIGGER SLOPE -- Positive
- TRIGGER LEVEL -- 1Vp-p
- TRIGGER SOURCE -- Internal
- PHASE -- 0°
- N -- 1
- SW/TR INTVL -- 10ms

START FREQ -- 1kHz
 STOP FREQ -- 10kHz
 MKR -- 5kHz

NOTE

The following tests were developed using the equipment listed in Section I of this manual. Equipment with equal or better critical specifications may be used; however, the operator is responsible for the determination of accurate test results.

4.2. FREQUENCY ACCURACY TEST

This is a test to verify the accuracy of the 3314A output signal frequency.

Specification:

- Range 1,2: ±(0.4% of setting + 0.2% of range)
- Range 3,4,5,6,: ±(0.2% of setting + 0.1% of range)
- Range 7,8: ±(0.01% of setting + 50ppm/year)

Equipment Required.

- Universal Counter
- 50 Ohm Feedthrough Termination

Procedures:

- A. Preset the 3314A.
- B. Set the 3314A as follows:

Amplitude 1Vp-p
 Frequency 19.99MHz
 Frequency Range Hold On

- C. Set the Counter as follows:

Function Freq A
 Resolution 1Hz
 Input Attenuation x1
 Coupling DC
 Channel Input Com

- D. Connect the output of the 3314A to the Counter input (see Figure 4-1).

E. Record the Counter frequency to 4 significant digits in the test record. Compare this value to the limits given in part A of Table 4-2 for the frequency setting of 19.99MHz.

F. Using the Range Down function, decrement the frequency of the 3314A to the settings listed in part A of Table 4-2, recording the measured value in the test record.

NOTE

In order to measure the 199.9Hz frequency setting, set the resolution of the counter to 0.1Hz.

G. Using the Modify Knob only, set the frequency of the 3314A to 00.1Hz.

H. Set the Counter to "Per A" and the resolution to 1kHz.

I. Measure the period of the 00.1Hz signal. Take the reciprocal of that value and compare the result to the limits shown in part B of Table 4-2 for the 00.1Hz setting.

J. Set the Counter function to "Freq A" and the resolution to 0.1Hz.

K. Using the Range Up function, increment the value of frequency displayed on the 3314A to the values listed in part B of Table 4-2, recording the measured value in the test record.

NOTE

Allow the Counter at least 15 seconds to stabilize and display the correct frequency measurement.

Table 4-2. Frequency Accuracy Measurement Parameters With Specified Limits

3314A Frequency Setting (A)	Upper Limit	Lower Limit
19.99MHz	19.992MHz	19.988MHz
1999kHz	1999.2kHz	1998.8kHz
199.9kHz	200.5kHz	199.3kHz
19.99kHz	20.05kHz	19.93kHz
1999.Hz	2005Hz	1993Hz
199.9Hz	200.5Hz	199.3Hz
3314A Frequency Setting (B)	Upper Limit	Lower Limit
00.1Hz	0.3Hz	0.0Hz
001H	3Hz	0.0Hz
0 01kHz	30Hz	00Hz
00.1kHz	300Hz	0Hz
001kHz	1000 1Hz	999 9Hz
0.01MHz	10.001kHz	9.999kHz

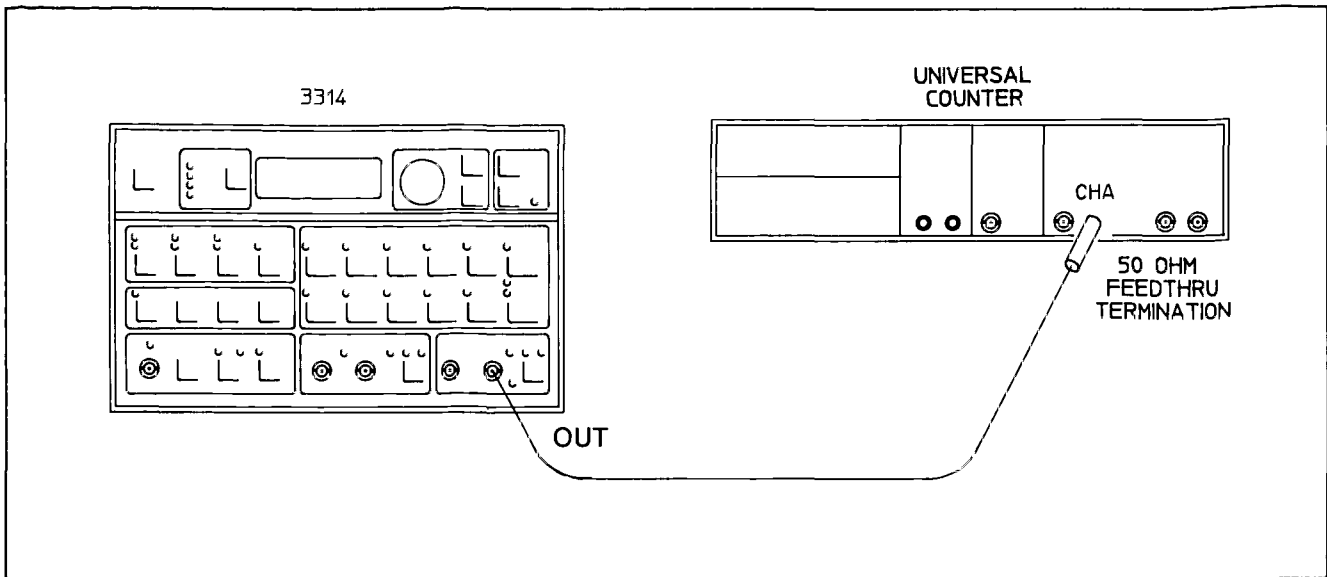


Figure 4-1. Frequency Accuracy Test

4-3. TIME AXIS AND VARIABLE SYMMETRY

This is a test to check the Symmetry function of the 3314A.

Specification:

%Symmetry	Specification
50%	50% ± 0.2% of period
5%	5% ± 0.5% of period
95%	95% ± 0.5% of period

Equipment Required:

- Universal Counter
- 50 Ohm Feedthrough Termination

Procedures:

A. Preset the 3314A.

B. Set the 3314A as follows:

- Function Square
- Frequency 100kHz
- Amplitude 10Vp-p
- Symmetry 50%

C. Set the Counter as follows:

- Function Per Avg A
- Resolution 0.1kHz
- Attenuation x10
- Channel A Slope +
- Channel B Slope -
- Coupling DC (Both Channels)
- Channel Input Com

D. Connect the 3314A to the Counter as shown in Figure 4-2.

E. Record the period of the 3314A Square Wave signal (t) displayed on the Counter.

F. Change the Counter function to "TI Avg A-B".

G. Record reading (t₁).

H. Calculate the percent of symmetry using the following equation and record in the test record:

$$\%Symmetry = (t_1/t)100\%$$

I. Adjust the symmetry on the 3314A to 5%, set the Counter function back to Period Avg A, and repeat steps E through H.

J. Adjust the symmetry on the 3314A to 95%, set the Counter function back to Period Avg A, and repeat steps E through H.

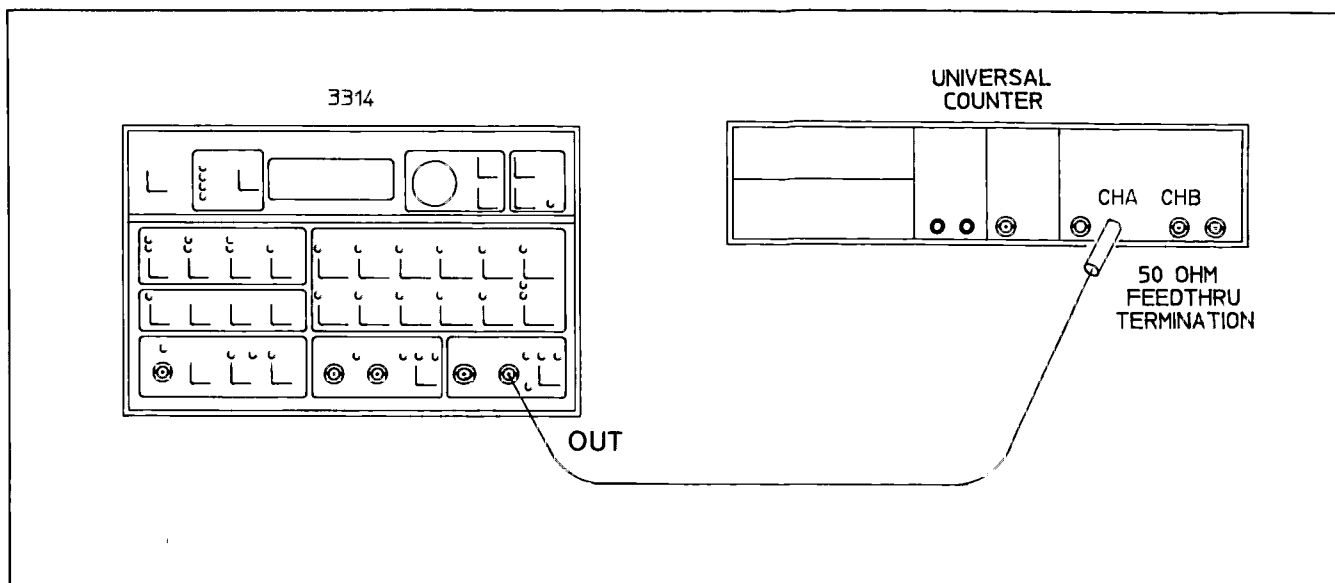


Figure 4-2. Time Axis and Variable Symmetry

4-4. INTERNAL TRIGGER ACCURACY

This test measures the accuracy of the 3314A Internal Trigger Period.

Specification:

$\pm 0.01\%$ of setting + 50ppm/year

Equipment Required:

Universal Counter

Procedures:

A. Preset the 3314A.

B. Set the Counter as follows:

Function	Per Avg A
Resolution	1MHz
Attenuation	x1
Coupling	AC
Channel Input	Com

C. Connect the 3314A to the Counter as shown in Figure 4-3.

D. Record the measured value of the 3314A trigger period in the test record. The reading should be 10ms ± 0.001 ms.

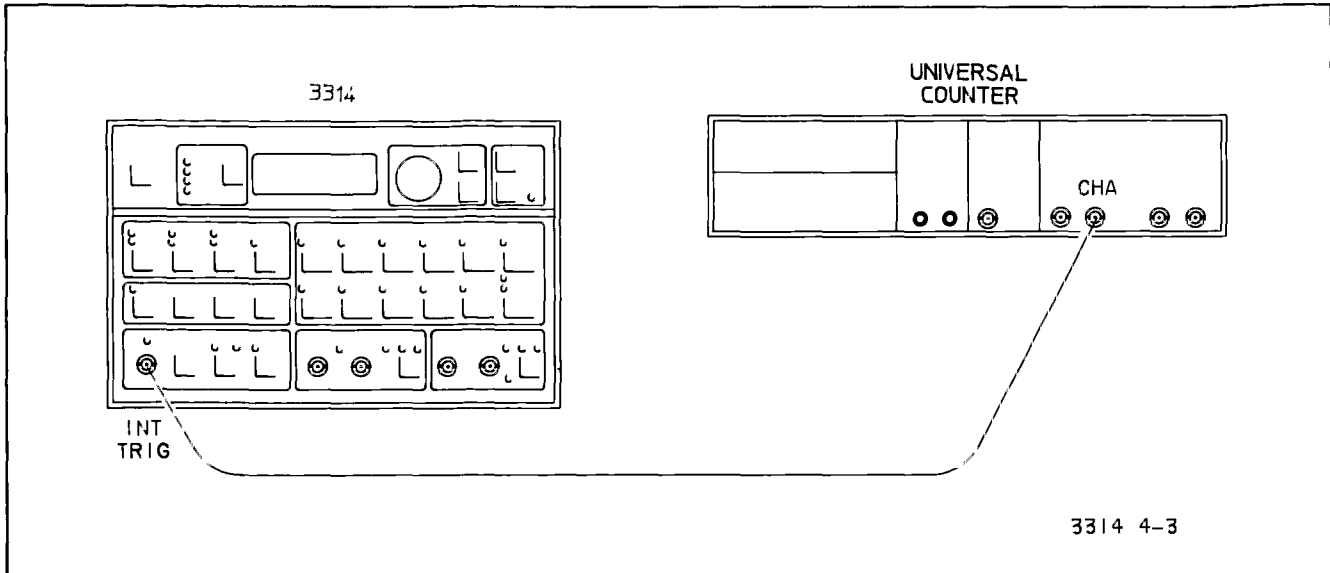


Figure 4-3. Internal Trigger Accuracy

4-5. TRIANGLE LINEARITY

This procedure determines the linearity of the 3314A Triangle wave at frequencies between 1Hz and 1kHz.

Specification:

±0.2%

Equipment Required:

- High Speed Digital Voltmeter
- 50 Ohm Feedthrough Termination
- Triax to BNC Connector

Procedures:

A. Preset the 3314A.

B. Set the 3314A as follows:

Function Triangle
 Amplitude 10Vp-p

C. Set the Digital Voltmeter as follows:

Range 10V
 Trigger Ext
 Readings 1
 Delay 0.00055s

D. Connect the 3314A to the Voltmeter as shown in Figure 4-4.

E. Note the Digital Voltmeter reading. Record this value on the Performance Test Record under "Positive Slope Measurement". This is the 10% point on the positive slope of the Triangle (see Figure 4-5).

F. Increment the delay on the Digital Voltmeter to the values listed below. At each increment note and record the corresponding voltage under "Positive Slope Measurement" in the Performance Test Record. (Each increment represents a 10% segment of the positive slope.)

Delay	Percent of Slope
0.00060	20
0.00065	30
0.00070	40
0.00075	50
0.00080	60
0.00085	70
0.00090	80
0.00095	90

G. Measurements for the negative slope of the Triangle wave are made by incrementing the delay on the voltmeter to the values listed below. Note and record the corresponding voltages under "Negative Slope Measurement" in the Performance Test Record.

Delay	Percent of Slope
0.00105	90
0.0011	80
0.00115	70
0.0012	60
0.00125	50
0.0013	40
0.00135	30
0.0014	20
0.00145	10

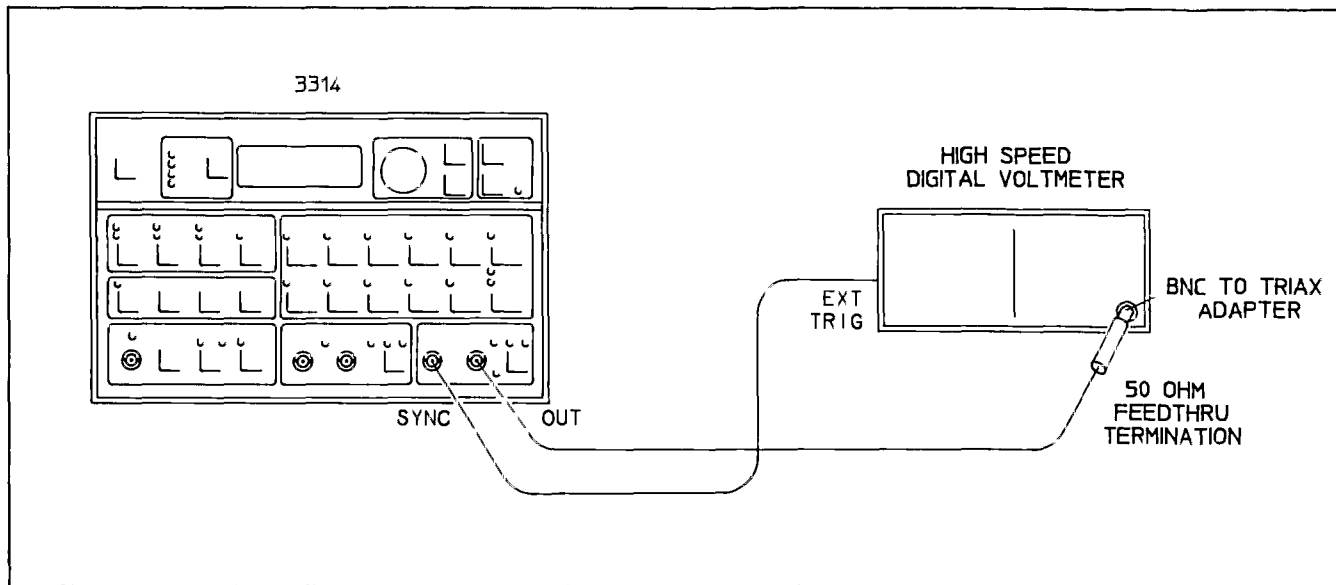


Figure 4-4. Triangle Linearity

H. Algebraically add the voltages recorded in the "Positive Slope Measurement" column and enter the total in the " Σy " space.

I. Multiply Σy by 45 (which is Σx) and enter the result in the $\Sigma x \Sigma y$ space.

J. Multiply each y value by the corresponding x value and enter the result in the "x Times y" column. Total these values and enter the result in the " Σxy " space.

K. The equation for determining the "best fit straight line" specification for each y value is:

$$y = mx + b$$

where m and b are constants to be calculated from data previously taken.

NOTE

Calculate the values of m and b to at least 5 decimal places.

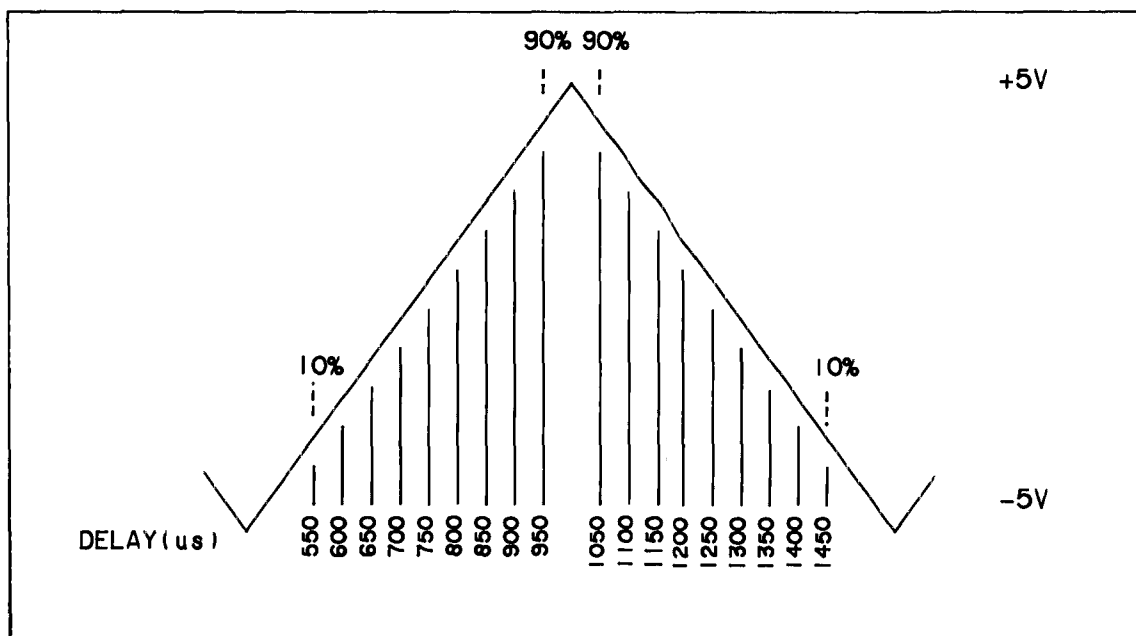


Figure 4-5. Triangle Linearity

L. Determine the value of m using the following equation:

$$m = \frac{\Sigma xy - \Sigma x \Sigma y / n}{\Sigma x^2 - (\Sigma x)^2 / n}$$

where Σx , Σy , Σxy , $\Sigma x \Sigma y$, Σx^2 , and $(\Sigma x)^2$ are the previously calculated values entered on the performance test record, and $n = 9$ (the number of points to be calculated).

M. Determine the value of b using the equation:

$$b = \Sigma y / n - m \Sigma x / n$$

N. Calculate the "best fit straight line" value for y_0 through y_9 using the equation:

$$y = mx + b$$

Enter each result on the Performance Test Record in the "Best Fit Straight Line" column.

O. Algebraically add the voltages recorded in the "Negative Slope Measurement" column and enter the total in the " Σy " space.

P. Repeat steps I through N to determine the "best fit straight line" values for the negative slope.

4-6. Start/Stop PHASE ACCURACY

This test determines the Start/Stop phase accuracy of the N Cycle mode on the 3314A.

Specification:

$$\pm 3^\circ$$

Equipment Required:

- High Speed Digital Voltmeter
- 50 Ohm Feedthrough Termination
- Triax to BNC Connector

Procedures:

A. Preset the 3314A.

B. Set the 3314A as follows:

- Function Triangle
- Amplitude 10Vp-p
- Mode N Cycle
- Trigger Negative Edge

C. Set the Digital Voltmeter as follows:

- Range 10V
- Trigger Ext
- Readings 1
- Delay 0.00025s

D. Connect the 3314A to the Digital Voltmeter as shown in Figure 4-6.

E. Record the voltage reading displayed on the Digital Voltmeter.

F. Set the delay on the Voltmeter to 0.00075s, and record the voltage reading.

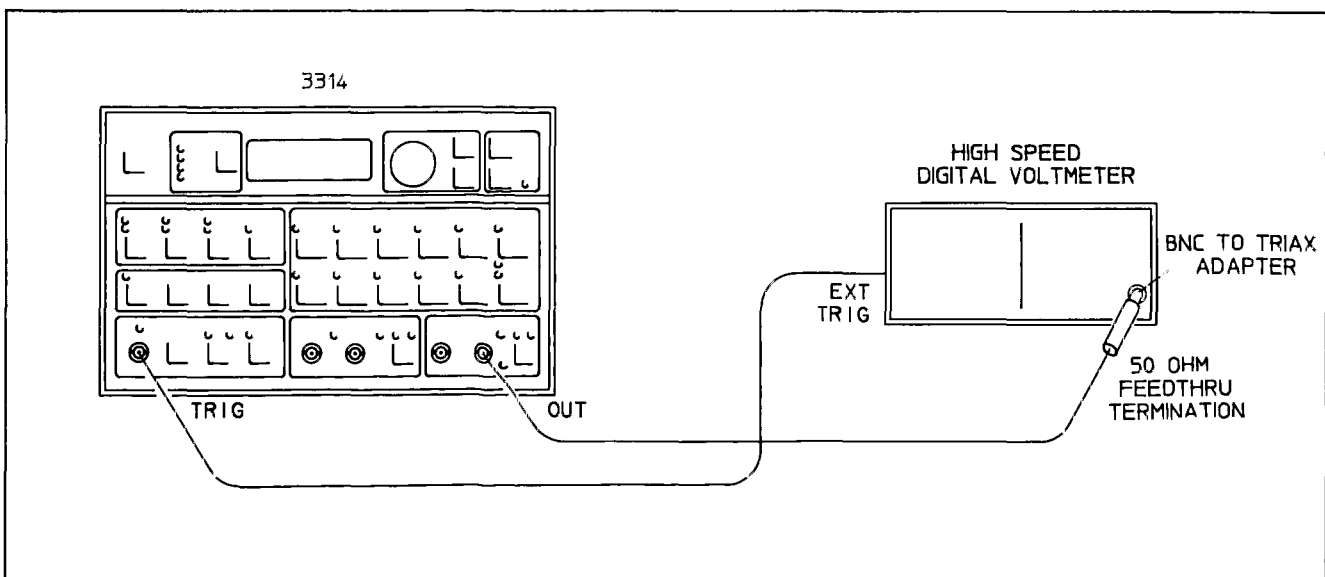


Figure 4-6. Start/Stop Phase Accuracy

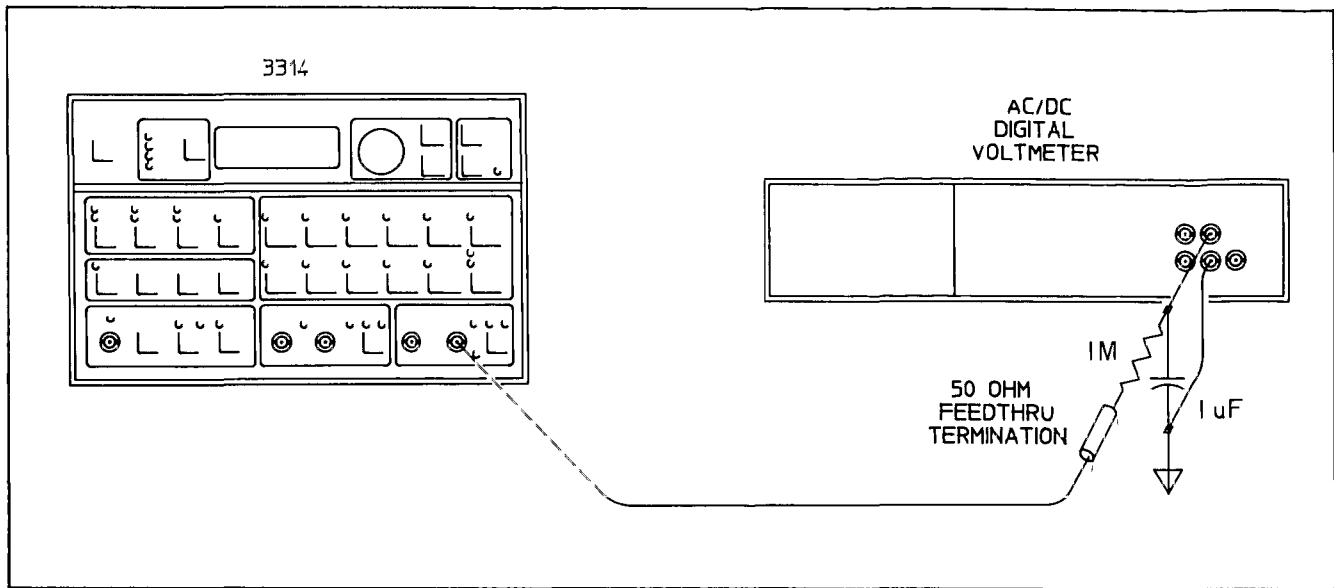


Figure 4-7. Residual and Variable DC Offset Accuracy

G. Average the readings taken in steps E and F and record in the Performance Test Record under "AVG"

H. Set the delay on the Voltmeter to 0.010s, and record the corresponding voltage.

I. This test passes if the average of the readings taken in steps E & F is within $\pm 0.167V$ of the reading taken in step H. (0.167V corresponds to 3° of phase difference.)

4-7. RESIDUAL DC AND DC OFFSET ACCURACY

This is a test to determine the accuracy of the Residual DC Offset (0V DC offset) and the Variable DC Offset function of the 3314A.

Specification:

- Residual: $\pm 0.5\%$ of AC Amplitude Range
- Variable: $\pm (3\%$ of setting, $+10mV$, $+0.5\%$ of AC Amplitude Range)

If option 001:

$\pm 0.5\%$ of AC Amplitude Range $\pm 500\mu V$

Equipment Required:

- AC/DC Digital Voltmeter
- 1 M Ω /1 μF Low Pass Filter
- 50 Ohm Feedthrough Termination

Procedures: (Residual)

A. Preset the 3314A.

B. Set the 3314A as follows:

- Frequency 100kHz
- Amplitude 10Vp-p

C. Set the Digital Voltmeter as follows:

- Function DC
- Trigger Internal
- Range Auto

D. Connect the 3314A to the Digital Voltmeter as shown in Figure 4-7.

E. Record and compare the Residual DC Offset measured on the Digital Voltmeter to the limits corresponding to the 10.00V 3314A setting given in Table 4-3.

NOTE

Tables 4-3 and 4-4 are provided for convenience in spot checking the measured parameters. The values obtained in this test may be permanently recorded in the corresponding section of the Performance Test Record.

F Using the Range Down function, decrement the amplitude displayed on the 3314A to the values listed in Table 4-3. Record and compare the measured Residual Offset at each decrement to its corresponding limits.

(Variable Offset)

G. Set the amplitude of the 3314A to 10V and adjust the DC Offset to 5V.

H. Record and compare the DC Offset measured on the Digital Voltmeter to the limits shown in Table 4-4 for the 10V setting with 5V DC offset.

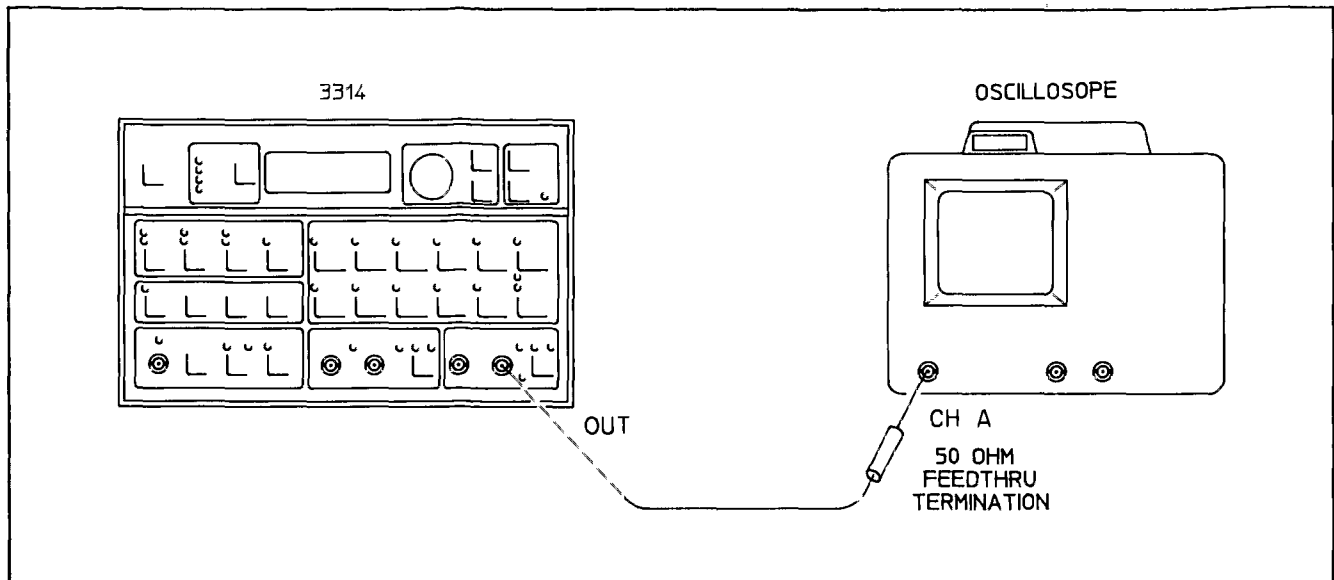


Figure 4-8 Square Wave Rise Time and Aberrations

I. Using the Range Down function, decrement the amplitude of the 3314A to the values shown in Table 4-4, each time recording and comparing the measured Offset to its corresponding limits.

J. Set the amplitude on the 3314A to 10V and adjust the DC offset to 0.887V.

K. Record and compare the DC Offset measured on the Digital Voltmeter to the limits given in the appropriate section of Table 4-4.

L. Repeat step I for the offset of 0.887V.

M. Set the amplitude of the 3314A to 10V and adjust the DC offset to -0.887V.

N. Record and compare the DC Offset measured on the Digital Voltmeter to the corresponding limits shown in Table 4-4.

O. Repeat step I for the offset of -0.887V.

P. Set the amplitude of the 3314A to 10V and adjust the DC offset to -5V.

Q. Record and compare the DC Offset measured on the Digital Voltmeter to the corresponding limits shown in Table 4-4.

R. Repeat step I for the Offset of -5V.

Table 4-3. Residual DC Offset Limits

3314A Voltage Setting	Residual Offset	
	Upper Limit	Lower Limit
10.00V	50mV	-50mV
1.000V	5mV	-5mV
100.0mV	0.5mV	-0.5mV
10.00mV	50µV	-50µV

Table 4-4. Variable DC Offset Limits

Voltage Setting	DC Offset	Upper Limit	Lower Limit
10.00V	5V	5.21V	4.79V
1.000V	5V	5.16V	4.84V
100.0mV	5V	5.16V	4.84V
10.00mV	5V	5.16V	4.84V
10.00V	0.887V	0.974V	0.8V
1.000V	0.887V	0.924V	0.85V
100.0mV	0.887V	0.924V	0.85V
10.00mV	0.887V	0.924V	0.85V
10.00V	-0.887V	-0.8V	-0.974V
1.000V	-0.887V	-0.85V	-0.924V
100.0mV	-0.887V	-0.85V	-0.924V
10.00mV	-0.887V	-0.85V	-0.924V
10.00V	-5V	-4.79V	-5.21V
1.000V	-5V	-4.84V	-5.16V
100.0mV	-5V	-4.84V	-5.16V
10.00mV	-5V	-4.84V	-5.16V

4-8. SQUARE WAVE RISE TIME AND ABERRATIONS

This test examines the Rise/Fall time and Aberrations of the 3314A Square Wave signal.

Specification:

Square Wave Rise/Fall Time

10% to 90% 9ns

Square Wave Aberrations <5% at 10Vp-p

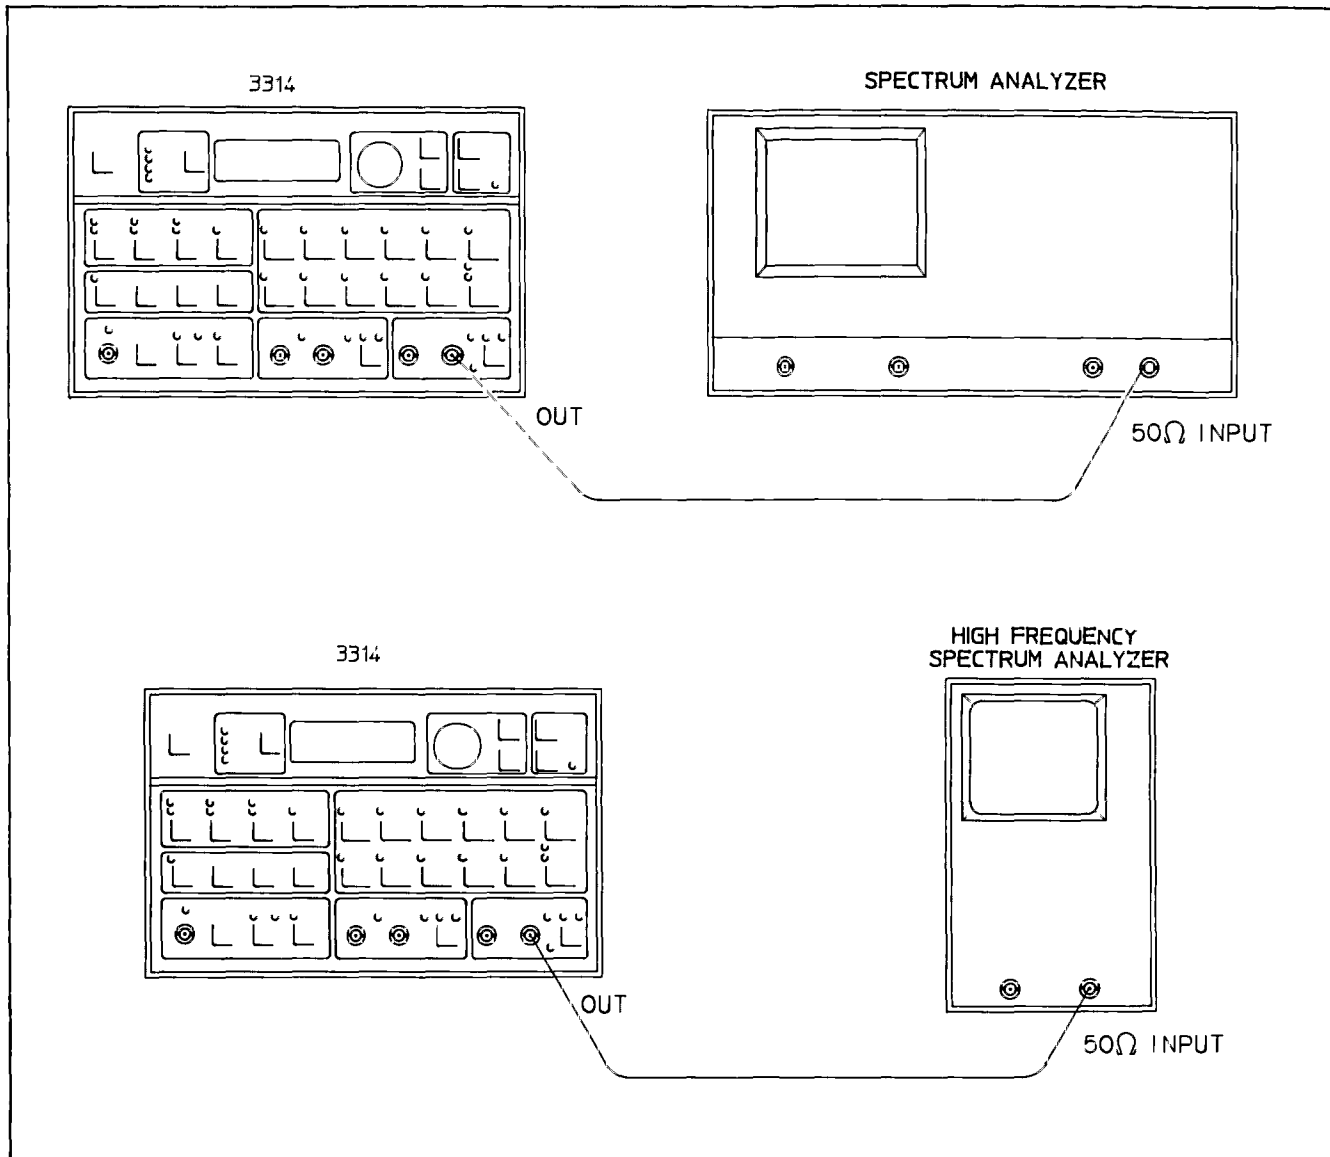


Figure 4-9. Sine Wave Harmonics

Equipment Required:

- Oscilloscope
- 50 Ohm Feedthrough Termination

Procedures:

A. Preset the 3314A.

B. Set the 3314A as follows:

- Function Square
- Frequency 19.99MHz
- Amplitude 10Vp-p

C. Set the Oscilloscope as follows:

- Volts/Div 2V
- Time/div 0.01us/cm
- Coupling DC
- Horizontal Display Main
- Main Triggering Positive

D. Connect the 3314A to the Oscilloscope as shown in Figure 4-8.

E. While observing the waveform on the Oscilloscope, use the Horizontal Position knob to ad-

just the waveform until the bottom of the Square wave's rising edge is on top of the Y-axis graticule. Note the distance between the 10% and 90% points on the rising edge. If the distance between the points is less than or equal to .9cm (note scope setting), the specification is met.

F. Set the Main Triggering function of the Oscilloscope to negative.

G. Observe the trailing edge of the waveform. Note the distance between the 90% and 10% points. If the distance is less than or equal to .9cm, the test passes.

H. Set the Time/div setting on the Oscilloscope to 1 μ s/cm.

I. Rotate the Oscilloscope's "Cal" knob (located on the VOLTS/DIV knob) counterclockwise until the waveform is four divisions tall. The "intensified" portion on the top of the wave should be <0.5V (1 minor division).

4-9. SINE WAVE HARMONICS

This is a test to check the amplitude levels of the Sine Wave Harmonics.

Specification:

20Hz to 50kHz	- 55dB
50kHz to 1.999MHz	- 40dB
1.999MHz to 19.99MHz	- 25dB

Equipment Required:

- Spectrum Analyzer
- High Frequency Spectrum Analyzer

Procedures:

A. Preset the 3314A.

B. Set the 3314A as follows:

Frequency	20.0Hz (Range 3)
Amplitude	10Vp-p
Function	Sine
Range Hold	On

C. Connect the 3314A to the Spectrum Analyzer as shown in Figure 4-9

NOTE

To get to the frequencies listed in the following ranges (see Tables 4-5, 4-6, 4-7), set the 3314A to the middle value in the range (i.e. range 3, 100.0Hz), activate Range Hold, then use the Modify knob to select the frequencies. Be sure that the frequency on the 3314A is set exactly as shown in the table.

D. To verify that the Sine wave harmonics are within specification, set the Spectrum Analyzer as follows:

1. Press "INSTR PRESET".
2. Press "DSPL LINE" and adjust the Control knob for a -55 dB level.
3. Press "STOP FREQ" and set it to 8 times the 3314A frequency setting.
4. Press "MARKER" and using the Control knob, place it over the fundamental.
5. Press "MKR-REF LVL" and wait for the sweep to update the screen display.

E. Observe the harmonics displayed on the Spectrum Analyzer and verify that they are below the -55dB level.

F. Repeat steps D (parts 3-5) and E for the 3314A frequency settings listed in Tables 4-5 and 4-6 whose harmonic level specification is -55dB.

G. Press "INSTR PRESET" on the Spectrum Analyzer.

H. Press "DSPL LINE" and adjust the Control knob for a -40dB level.

I. Repeat step D, parts 3-5 for the 3314A frequency settings listed in Table 4-6 whose harmonic level specification is -40dB. Verify that these levels are within the specification.

J. Disconnect the 3314A from the Spectrum Analyzer

K. To measure the harmonics of the frequencies listed in Table 4-7, connect the 3314A to the High Frequency Spectrum Analyzer as shown in Figure 4-9.

L. Set the frequency of the 3314A to 1.00MHz.

M. Set the High Frequency Spectrum Analyzer as follows:

Input Range	+ 30dBm
Time/div	Auto
Start Frequency	1MHz

N. Measure 2nd through 7th harmonics.

O. Set the frequency on the 3314A to 10.00MHz, and adjust the start frequency on the High Frequency Spectrum Analyzer to 10MHz.

P. Measure 2nd through 7th harmonics.

Q. Set the frequency on the 3314A to 19.99MHz, and adjust the start frequency on the High Frequency Spectrum Analyzer to 19.99MHz.

R. Measure the 2nd through 7th harmonics.

SINE WAVE HARMONICS

**Table 4-5. Sine Wave Harmonic Test Frequencies
3Hz Resolution Bandwidth**

3314A Frequency	Range	Harmonics dB					
		2nd	3rd	4th	5th	6th	7th
20.0Hz	3						
100.0Hz	3						
199.9Hz	3						
100.0Hz	4				-55dB		
1000.0Hz	4						
1999.0Hz	4						

**Table 4-6. Sine Wave Harmonic Test Frequencies
300Hz Resolution Bandwidth**

3314A Frequency	Range	Harmonics dB					
		2nd	3rd	4th	5th	6th	7th
1.00kHz	5						
10.0kHz	5						
19.99kHz	5						
10.0kHz	6				-55dB		
100.0kHz	6						
199.9kHz	6						
100.0kHz	7				-40dB		
1000.0kHz	7						
1999.0kHz	7						

**Table 4-7. Sine Wave Harmonic Test Frequencies
(High Frequency Spectrum Analyzer)**

3314A Frequency	Range	Harmonics dB					
		2nd	3rd	4th	5th	6th	7th
1.00MHz	8						
10.00MHz	8						
19.99MHz	8				-25dB		

4-10. AM HARMONICS

This test measures the AM envelope distortion.

Specification:

Sideband harmonics 40dB below sideband level

Equipment Required:

- Synthesizer/Function Generator
- Spectrum Analyzer
- 50 Ohm Feedthrough Termination

Procedures:

A. Preset the 3314A.

B. Set the 3314A as follows:

Frequency 1MHz
 Amplitude 10Vp-p
 External Modulation AM

C. Set the Synthesizer as follows:

Function Sine
 Frequency 1kHz
 Amplitude 1Vp-p

D. Press "INSTR PRESET" on the Spectrum Analyzer and set it as follows:

Center Frequency 1MHz
 Frequency Span 10kHz

E. Connect the 3314A to the Synthesizer and Spectrum Analyzer as shown in Figure 4-10.

F. Press "DSPL LINE" on the Spectrum Analyzer and adjust the Control knob for a -46dB level.

G. Press "MARKER" and place it over the carrier peak.

H. Press "MKR → REFLVL".

I. Note the levels of the AM sideband harmonics (located at 1kHz intervals from sideband) relative to "DSPL LINE". The levels should not exceed this reference.

4-11. VCO LINEARITY

This is a test to determine the linearity of the Voltage Controlled Oscillator.

Specification:

± 3% of setting

Equipment Required:

- Power Supply
- Universal Counter
- AC/DC Digital Voltmeter
- 50 Ohm Feedthrough Termination

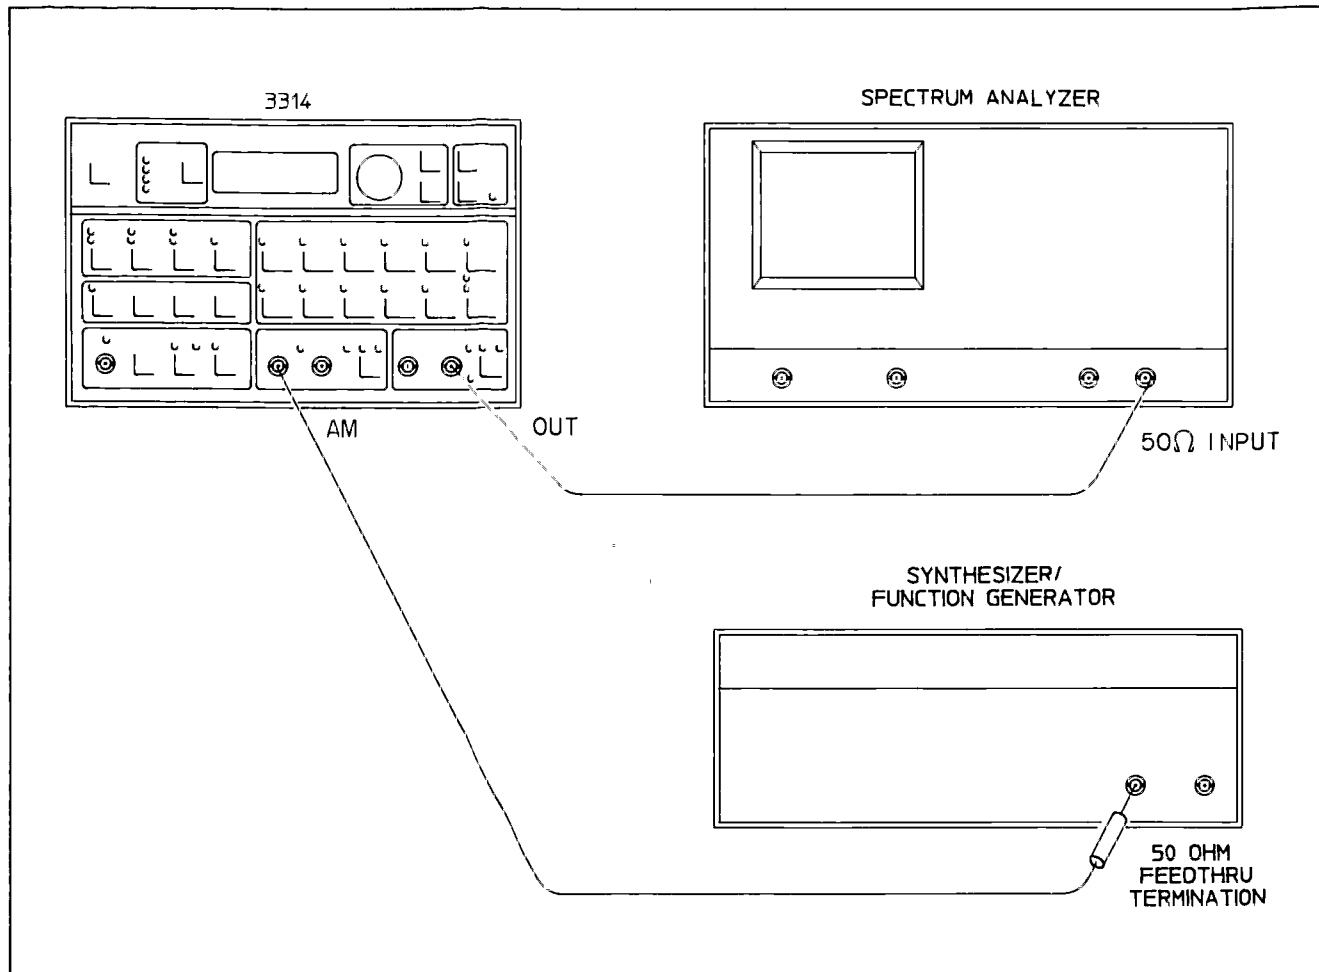


Figure 4-10. AM Harmonics

Procedures:

A. Preset the the 3314A.

B. Set the 3314A as follows:

Frequency 10MHz
 Amplitude 10Vp-p
 VCO On

C. Set the Counter as follows:

Function Frequency A
 Resolution 0.1kHz
 Channel Input Com

D. Set the Voltmeter as follows:

Range Auto
 Function DC
 Trigger Internal

E. Connect the Counter, Voltmeter, and Power Supply to the 3314A as shown in Figure 4-11.

F. Set the power supply voltage to $-8V \pm 10mV$ and record the frequency reading on the Counter. Frequency should be $2MHz \pm 300kHz$.

G. Set the power supply voltage to $-4.5V \pm 10mV$ and record the frequency reading on the Counter. Frequency should be $5.5MHz \pm 300kHz$.

H. Set the power supply voltage to $+1V \pm 10mV$ and record the frequency reading on the Counter. Frequency should be $11MHz \pm 300kHz$.

4-12. PHASE LOCKED LOOP PHASE ACCURACY

This is a test to determine the Phase Accuracy of the 3314A Phase Locked Loop.

Specification:

± 2 degrees of setting

Equipment Required:

- Synthesizer/Function Generator
- Universal Counter
- 50 Ohm Feedthrough Termination

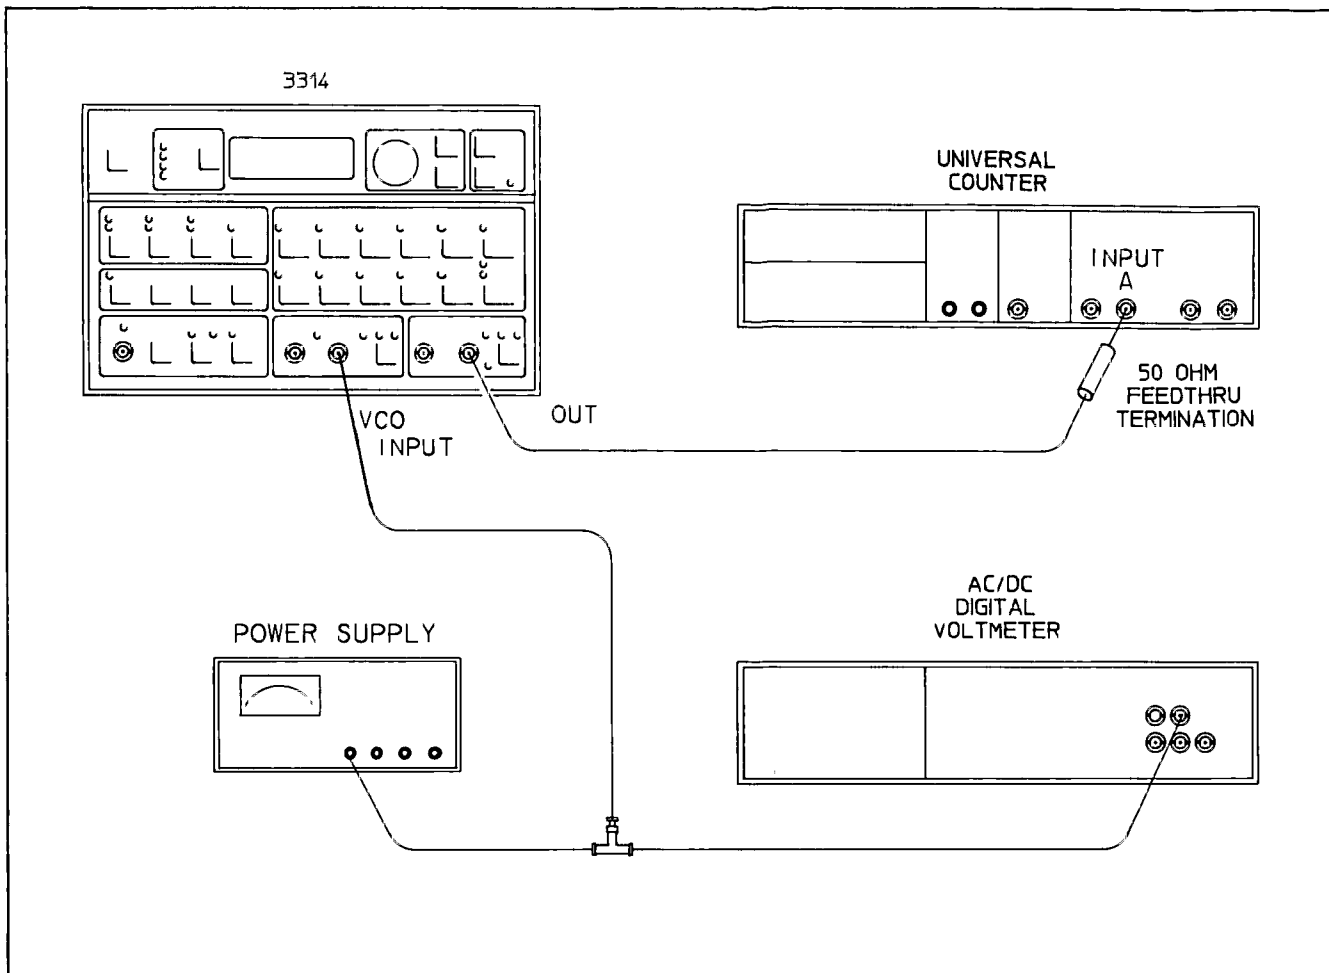


Figure 4-11. VCO Linearity

Procedures:

A. Preset the 3314A.

B. Set the 3314A as follows:

Function Square
 Amplitude 1Vp-p
 Trigger Source Ext
 Mode Fin x N
 Trigger Threshold 0V
 Phase - 199.9 degrees

C. Set the Synthesizer/Function Generator as follows:

Function Square
 Amplitude 1Vp-p
 Frequency 50Hz

D. Set the Universal Counter as follows:

Coupling DC
 Attenuation x1
 Slope Setting Cha. +, Chb. +
 Function Period Avg A
 Periods Averaged 10
 Channel Input Sep

E. Connect the Synthesizer/Function Generator and the Universal Counter to the 3314A as shown in Figure 4-12.

F. Note and record the period (t) of the 50Hz signal now being measured on the Universal Counter.

G. Change the function of the Universal Counter to "TI Avg A-B" and record the corresponding period (t₁).

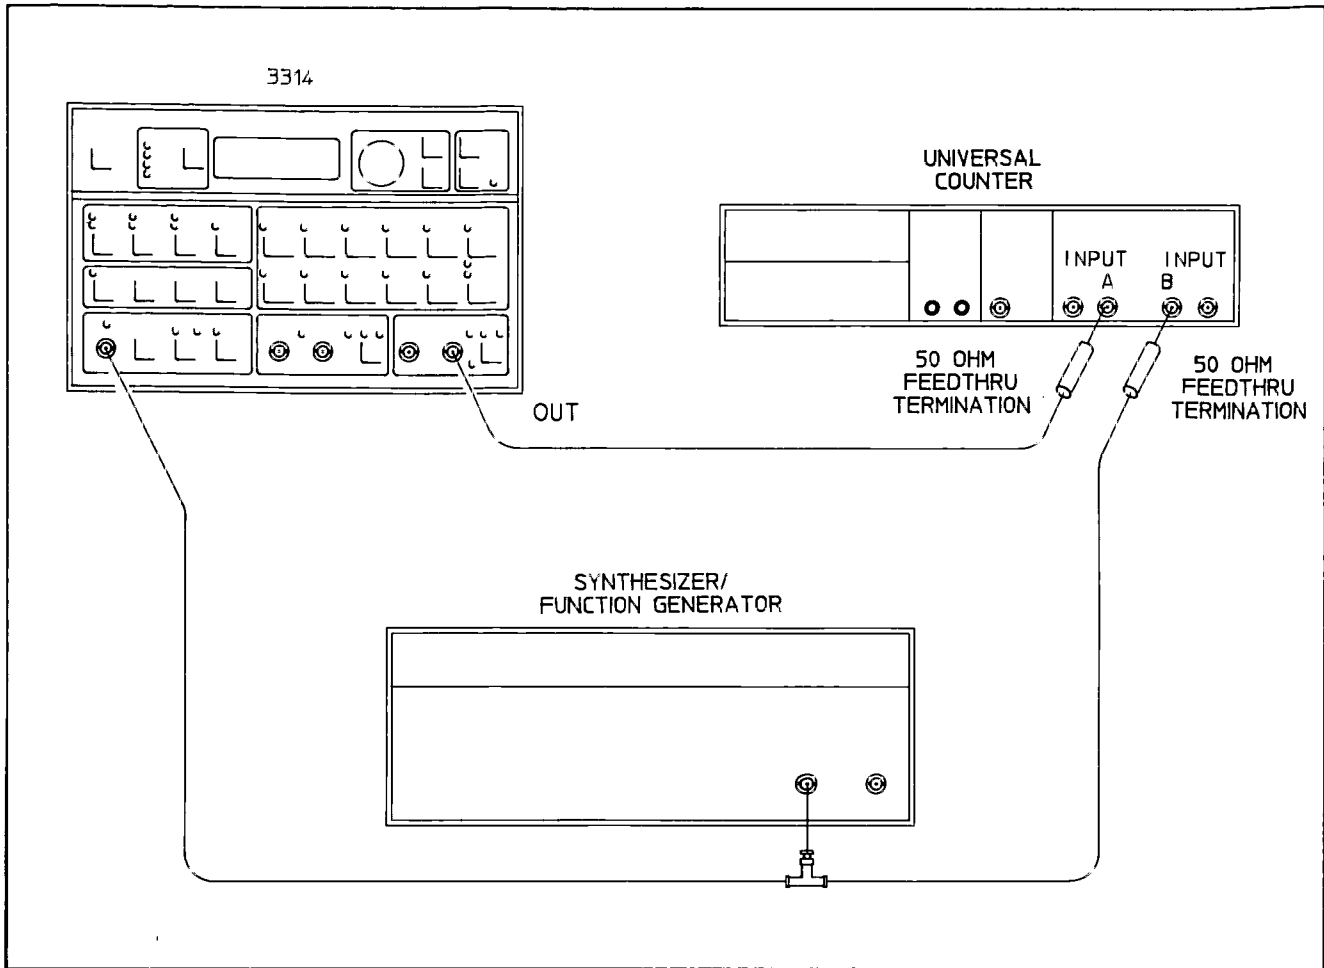


Figure 4-12. Phase Locked Loop Phase Accuracy

H. The accuracy of the phase setting displayed on the 3314A can be determined by the following equation:

$$\phi = (t_1/t)360^\circ$$

where t is the period of the 50Hz Synthesizer/Function Generator signal (constant throughout the test), and t₁ is the change in time between the trailing edges of the phase locked signals (varies with phase setting).

I. Repeat step H for phase settings on the 3314A of -90°, 0°, +90°, and +199.9° noting that each phase setting will have a corresponding value of t₁ to be entered into the above equation.

NOTE

The data taken above can be entered into the Performance Test Record for permanent reference and comparison.

NOTE

This test always results in positive phases. Subtract 360° from the measured results to obtain negative phase shifts.

4-13. AMPLITUDE ACCURACY

This test determines the amplitude accuracy of the 3314A's Sine, Square, and Triangle wave signals.

Specifications:

Sine/Square	± 1% of setting ± 35mV
Triangle	± 1% of setting ± 60mV

Equipment Required:

- AC/DC Digital Voltmeter
- 50 Ohm Feedthrough Termination

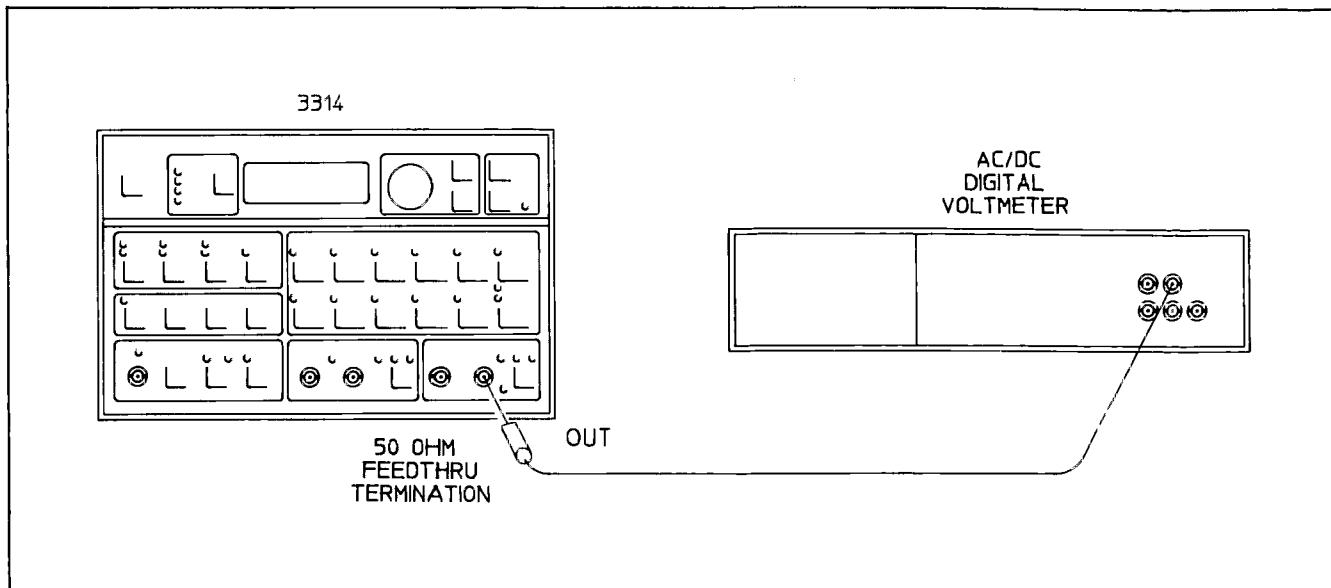


Figure 4-13. Amplitude Accuracy

Procedures:

A. Preset the 3314A.

B. Set the 3314A as follows:

Frequency 10kHz
 Amplitude 10Vp-p

C. Set the Digital Voltmeter as follows:

Range Auto
 Function AC
 Trigger Internal

D. Connect the 3314A to the Digital Voltmeter as shown in Figure 4-13.

NOTE

Cable length between the 3314A and the Digital Voltmeter should be as short as possible.

E. Calibrate the 3314A by pressing the Blue Shift Key followed by the "RCL" Key.

F. Note and record the voltage measured on the Digital Voltmeter. Reading should be 3.535V ±0.0477V.

G. Repeat step E.

H. Change the function on the 3314A to a Square wave.

I. Note and record the voltage measured on the Digital Voltmeter. Reading should be 5.0V ±0.0477V.

J. Repeat step E.

K. Change the function on the 3314A to a Triangle wave.

L. Note and record the voltage measured on the Digital Voltmeter. Reading should be 2.8867V ±0.0477V.

4-14. SINE WAVE POWER FLATNESS

This is a test to check the amplitude flatness of the 3314A Sine wave signal.

Specification:

20Hz to 50kHz	± 0.04dB
50kHz to 1MHz	± 0.17dB
1MHz to 19.99MHz	± 0.8dB

Equipment Required:

- AC/DC Digital Voltmeter
- 3V Thermal Converter

NOTE

For accurate test results, allow the 3314A and the Thermal Converter time to settle and adjust to surrounding temperatures. Avoid sudden temperature changes around the Thermal Converter.

Procedures:

A. Preset the 3314A.

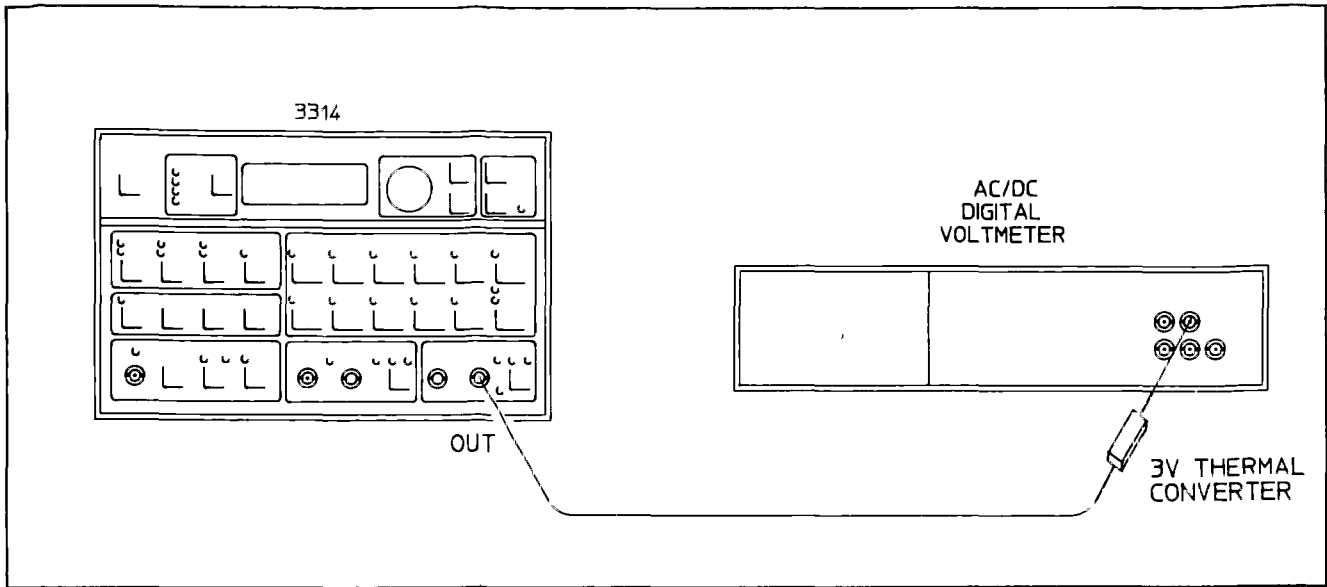


Figure 4-14. Sine Wave Power Flatness

B. Set the 3314A as follows:

Amplitude 7.5Vp-p
 Frequency 10kHz

C. Set the Voltmeter as follows:

Range 1
 Function DC
 Trigger Internal

CAUTION

Double check the 3314A Signal Amplitude. The input signal to the Thermal Converter must not exceed 3V RMS (8Vp-p).

D. Connect the 3314A to the Thermal Converter and the Digital Voltmeter as shown in Figure 4-14.

E. Record the voltage measured on the Digital Voltmeter. This is the reference voltage for the 7.5Vp-p 3314A setting.

F. Set the frequency on the 3314A to 100Hz.

G. Carefully adjust the amplitude on the 3314A until the voltage measured on the Digital Voltmeter is equal to the reference voltage recorded in step E.

H. Record the 3314A's displayed amplitude (in Vp-p) in the appropriate section of Table 4-8 in the Performance Test Record.

I. Repeat steps G & H for the 3314A frequency settings given below:

- 50kHz
- 800kHz
- 1MHz
- 5MHz
- 19.99MHz

J. Set the amplitude of the 3314A to 7.5Vp-p and the frequency to 10kHz.

K. Note and record the voltage reading on the Digital Voltmeter.

L. Using the data taken in steps E & K, calculate the reference drift of the 3314A using the equation given below:

$$\text{Drift(dB)} = 20 \text{ Log } |(\text{Step K Reference}/\text{Step E Reference})|$$

M. If Drift(dB) is < 0.025dB, the data taken in steps F,G,H, and I is acceptable. Proceed to step O.

N. If Drift(dB) is > 0.025dB, the data taken in steps F,G,H, and I is unacceptable. Repeat steps A through L. If the test fails again, perform the Amplitude Accuracy Test for amplitude verification and repeat Flatness test.

O. Disconnect the Thermal Converter from the 3314A.

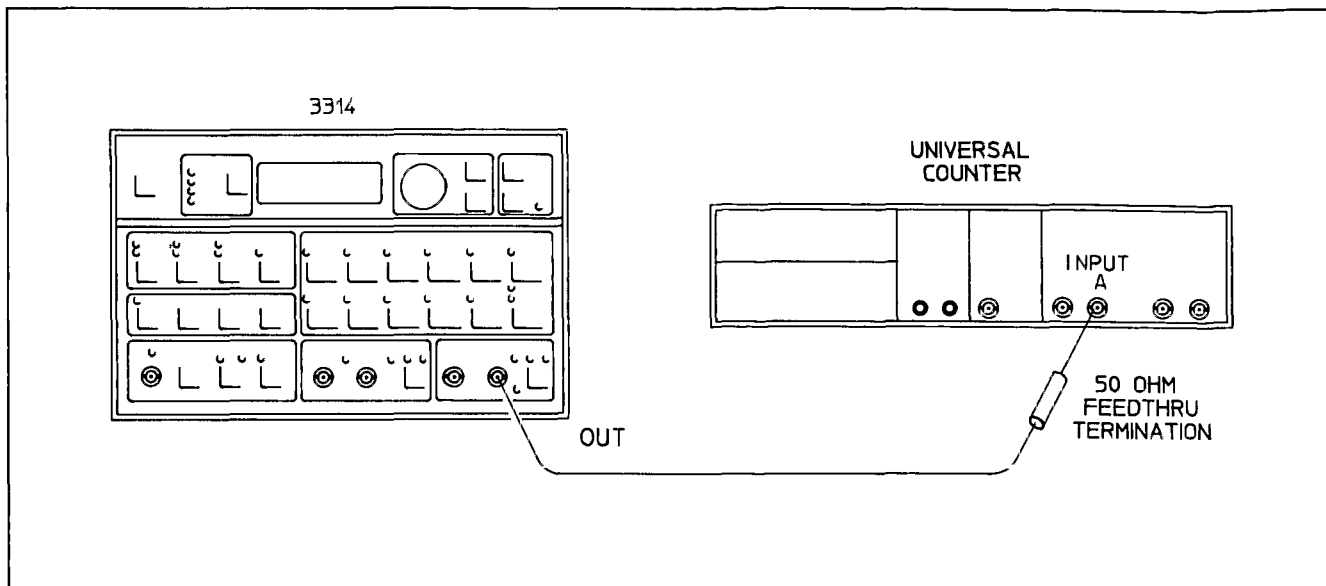


Figure 4-15. Manual Sweep Accuracy

P. Using the equation: Flatness Error (dB) = 20 Log (Displayed Amplitude/7.50V), calculate the Flatness Error in dB for each amplitude entered in the Performance Test Record. Compare the result of each calculation to the specification given in the table.

4-15. MANUAL SWEEP ACCURACY

This test checks the accuracy of the 3314A Manual Linear Sweep.

Specification:

- Manual Linear Sweep Accuracy:
 Stop Range = 20MHz ± 3% of Stop Frequency
 Stop Range = 2MHz ± 1% of Stop Frequency
 Stop Range ≤ 200kHz ± (0.2% of Stop Frequency + 0.1% of Range)

Equipment Required:

- Universal Counter
- 50 Ohm Feedthrough Termination

Procedures:

A. Preset the 3314A.

B. Set the 3314A as follows:

- Amplitude 10Vp-p
- Start Frequency 1MHz
- Stop Frequency 10MHz
- Sweep Linear

C. Set the Counter as follows:

- Function Frequency A
- Resolution 10Hz
- Channel Input Com

D. Connect the 3314A to the Counter as shown in Figure 4-15.

E. Press the "MAN SWEEP" key on the 3314A.

F. Press "START FREQ".

G. Record the frequency reading on the Universal Counter. Reading should be 1MHz ± 300kHz.

H. Set "STOP FREQ" on the 3314A to 1MHz and "START FREQ" to 100kHz.

I. Record the frequency reading on the Universal Counter. The reading should be 100kHz ± 10kHz

J. Set "STOP FREQ" on the 3314A to 100kHz and "START FREQ" to 10kHz.

K. Record the frequency reading on the Universal Counter. The reading should be 10kHz ± 400Hz.

4-16. STEP ATTENUATOR ACCURACY

This test compares the accuracy of the 3314A Step Attenuator against an attenuator of known precision.

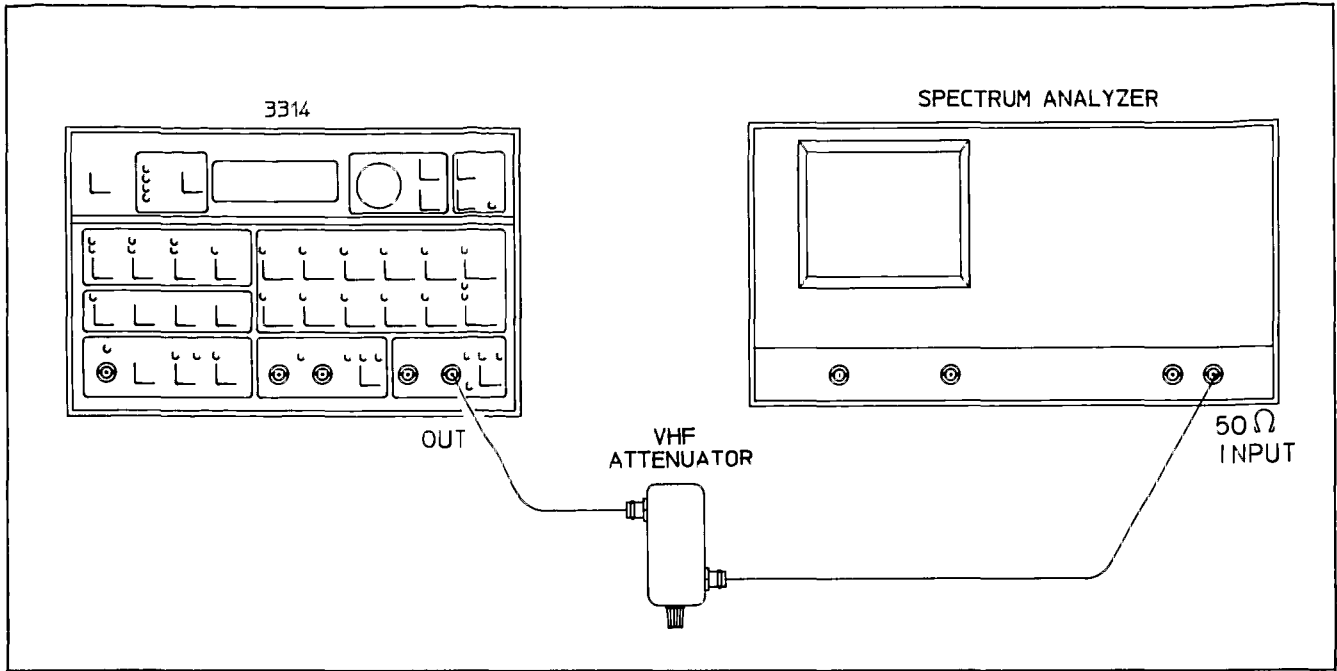


Figure 4-16. Step Attenuator Accuracy

Specification:

- 0.001Hz to 50kHz ±0.05dB
- 50kHz to 19.99MHz (20dB,40dB Attenuation) ±0.3dB
- 50kHz to 19.99MHz (60dB attenuation only) ±0.5dB

Equipment Required:

- Spectrum Analyzer
- VHF Attenuator*

***NOTE**

This attenuator must have current certification data at frequencies of 50kHz, 1MHz, 20MHz, and attenuations of 20dB, 40dB, and 60dB.

Procedures:

- A. Preset the 3314A.
- B. Set the 3314A as follows:
 - Frequency 50kHz
 - Amplitude 10Vp-p
- C. Set the Attenuator to 20dB attenuation.
- D. Connect the 3314A to the Attenuator and Spectrum Analyzer as shown in Figure 4-16.

E. Set the Spectrum Analyzer as follows:

1. Press "INSTR PRESET".
2. Enter Center Frequency (3314A Frequency Setting).
3. Set Frequency Span to 2x Center Frequency.
4. Enable "COUNTER".
5. Press "MKR-CF".
6. Disable COUNTER
7. Press "MANUAL".
8. Press "CLEAR A".
9. Press "MKR-REF LVL".
10. Set "dB/DIV" to 1dB.
11. Press "REF LVL" and adjust to approximately 1dB below full scale.
12. Set Video Bandwidth to 10Hz.
13. Press "OFFSET".
14. Press "ENTER OFFSET".
15. Press "SAVE (off)", "4 (cal)".

F. Using the Range Down function, set the amplitude of the 3314A to 1.000Vp-p.

G. Set the Attenuator to 0dB.

H. Record the Marker Amplitude displayed on the CRT in the appropriate section of Table 4-9 located in the Performance Test Record.

I. From the reading taken in step H, subtract the Insertion Loss Error of the Attenuator. Add that quantity to the Attenuator's setting and enter the result under "Actual Attenuation" in Table 4-9. (See Performance Test Record for an example.)

J. Set the Attenuator to 40dB.

K. Set the amplitude of the 3314A to 10.00Vp-p.

L. Repeat step E.

M. Using the Range Down function, set the amplitude of the 3314A to 100mVp-p.

N. Set the Attenuator to 0dB.

O. Repeat steps H&I.

P. Set the Attenuator to 60dB.

Q. Set the amplitude of the 3314A to 10.00Vp-p.

R. Repeat step E.

S. Using the Range Down function, set the amplitude of the 3314A to 10.0mVp-p.

T. Set the Attenuator to 0dB.

U. Repeat steps H & I.

V. Set the 3314A to the remaining frequencies shown in Table 4-9. Repeat steps E through U for each setting.

4-17. VERNIER ATTENUATOR FLATNESS

This test checks the flatness of the 3314A Vernier Attenuator.

Specification:

20Hz to 50kHz	±0.03dB
50kHz to 1MHz	±0.16dB
1MHz to 20MHz	±0.7dB

Equipment Required:

- Spectrum Analyzer
- VHF Attenuator*

***NOTE**

This attenuator must have current certification data at frequencies of 10kHz, 50kHz, 1MHz, 20MHz, and attenuations of 10dB and 20dB.

Procedures:

A. Preset the 3314A.

B. Set the 3314A as follows:

Frequency 10kHz
 Amplitude 10Vp-p
 Range Hold On

C. Set the Attenuator to 10dB attenuation.

D. Connect the 3314A to the Attenuator and Spectrum Analyzer as shown in Figure 4-17.

E. Set the Spectrum Analyzer as follows:

1. Press "INSTR PRESET".
2. Enter Center Frequency (3314A Frequency Setting).
3. Set the Frequency Span to 2x Center Frequency.
4. Enable "COUNTER".
5. Press "MKR-CF".
6. Disable COUNTER.
7. Press "MANUAL".
8. Press "CLEAR A".
9. Press "MKR-REF LVL".
10. Set "dB/DIV" to 1dB.
11. Press "REF LVL" and adjust to approximately 1dB below full scale.
12. Set Video Bandwidth to 10Hz
13. Press "OFFSET".
14. Press "ENTER OFFSET".
15. Press "SAVE (off)", "4 (cal)".

F. Using the Modify knob, set the amplitude of the 3314A to 3.16Vp-p.

G. Set the Attenuator to 0dB.

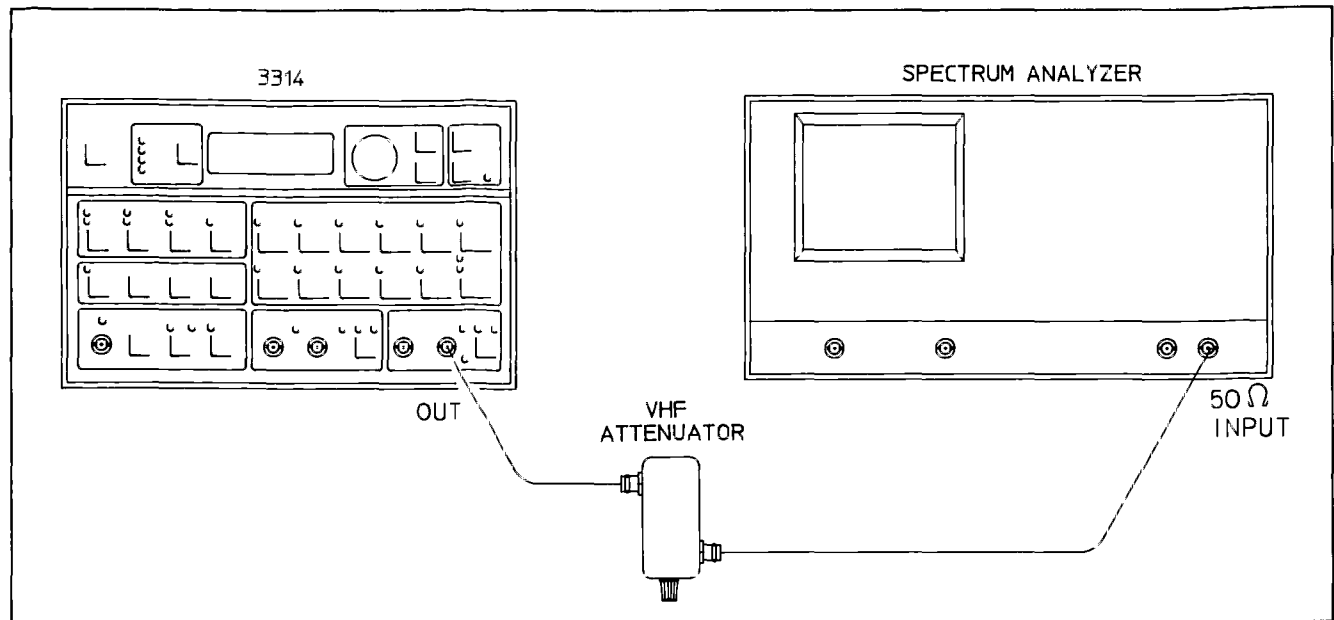


Figure 4-17. Vernier Attenuator Flatness

H. Record the Marker Amplitude displayed on the CRT in the appropriate section of Table 4-10 located in the Performance Test Record.

I. From the reading taken in step H, subtract the Insertion Loss Error of the Attenuator. Add that quantity to the Attenuator's setting and enter the result under "Actual Attenuation" in Table 4-10. (See Performance Test Record for example.)

NOTE

The "Actual Attenuation" calculated for settings of 10dB & 20dB at 10kHz is the reference attenuation to which "Actual Attenuation" at 50kHz, 1MHz, and 20MHz will be compared. (See Table 4-10.)

- J. Set the Attenuator to 10dB.
- K. Set the amplitude of the 3314A to 10.0Vp-p and the frequency to 50kHz.
- L. Repeat steps E through I.
- M. Set the Attenuator to 10dB.
- N. Set the amplitude of the 3314A to 10.0Vp-p and the frequency to 1MHz.
- O. Repeat steps E through I.
- P. Set the Attenuator to 10dB
- Q. Set the amplitude of the 3314A to 10.0Vp-p and the frequency to 19.99MHz.
- R. Repeat steps E through I.
- S. Set the Attenuator to 20dB.
- T. Set the amplitude of the 3314A to 10.0Vp-p and the frequency to 10kHz.
- U. Repeat step E.
- V. Set the amplitude of the 3314A to 1.00Vp-p.
- W. Set the Attenuator to 0dB.
- X. Repeat steps H & I.
- Y. Set the Attenuator to 20dB.
- Z. Set the amplitude of the 3314A to 10.0Vp-p and the frequency to 50kHz.
- A.A. Repeat steps E, V-X.
- B.B. Set the Attenuator to 20dB.
- C.C. Set the amplitude of the 3314A to 10.0Vp-p and the frequency to 1MHz.
- D.D. Repeat steps E, V-X.
- E.E. Set the Attenuator to 20dB.
- F.F. Set the amplitude of the 3314A to 10.0Vp-p and the frequency to 19.99MHz.
- G.G. Repeat steps E, V-X.

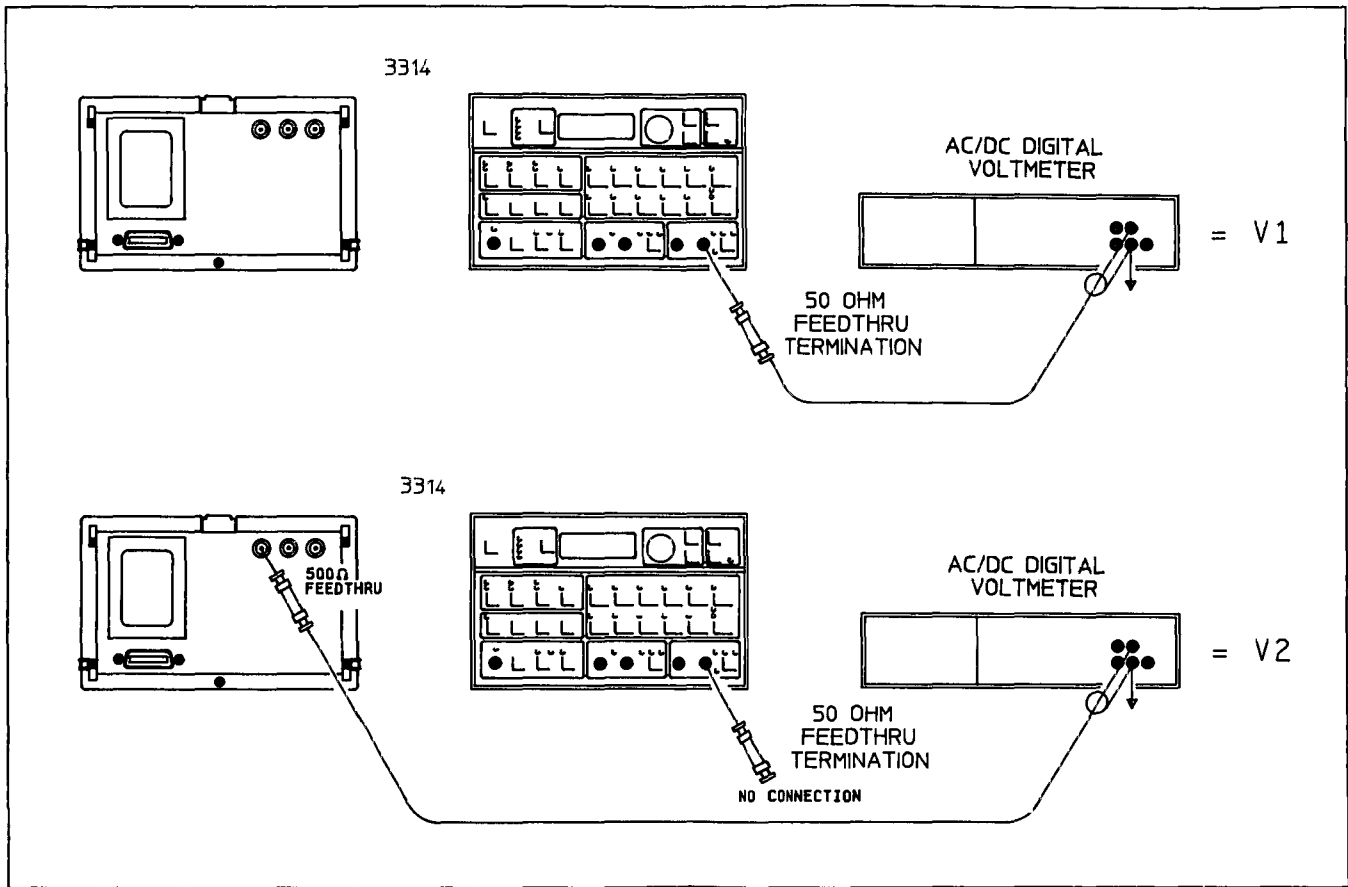


Figure 4-18. X3 Gain Accuracy Connections

4-18. OPTION 001 PERFORMANCE TESTS

These tests measure the performance of Option 001 to determine its functional quality.

4-19. X3 GAIN ACCURACY

This test measures the output voltage at the Main Output and at the X3 output to determine the gain. The gain at 10kHz is specified to be $3 \pm 1\%$.

Equipment Required:

- AC/DC Digital Voltmeter
- 50 Ohm Feedthrough Termination
- A 500Ω Feedthrough Termination consisting of:
1 499Ω resistor, -hp- part number 0698-4123

Procedure:

A. Preset the 3314A.

B. Set the 3314A as follows:

- Frequency 10kHz
- Amplitude 10Vp-p

C. Connect the 50 Ohm Feedthrough to the 3314A's Main Output. Connect the 500Ω Feedthrough Termination to the 3314A's X3 Output

D. Set the digital voltmeter to measure ≈ 3.5 VRMS and then measure and record the voltage from the Main Output (V1).

E. Set the digital voltmeter to measure ≈ 10.6 VRMS and then measure and record the voltage from the X3 Output (V2).

F. Compute the gain error using the following formula'

$$\text{Gain Error (\%)} = \left[\frac{V2}{V1} - 3 \right] \times 100\%$$

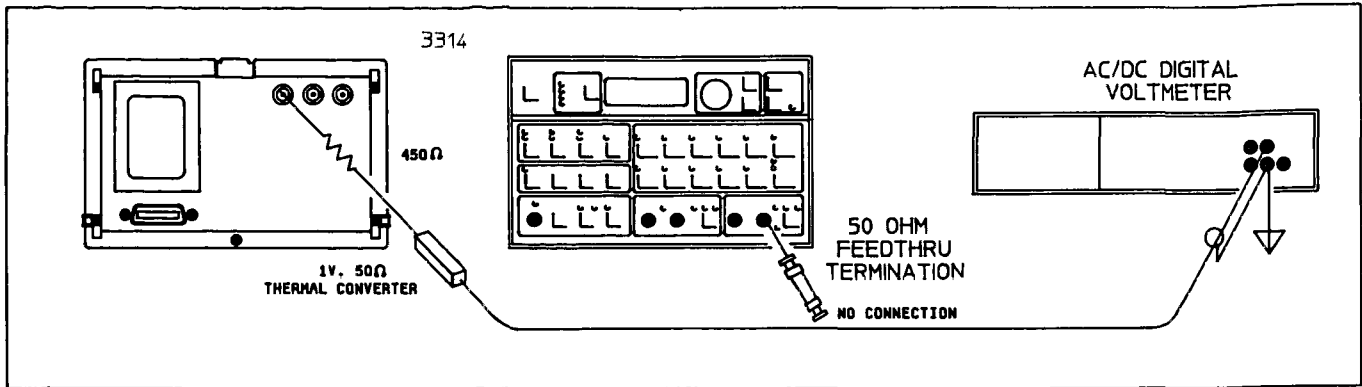


Figure 4-19. Sine Power Flatness Connections

4-20. SINE POWER FLATNESS

This test measures the X3 Output's power level at 30Vpp and 10kHz. Using this as a power reference, various power levels are measured at different frequencies to determine power flatness.

Required Equipment:

- AC/DC Digital Voltmeter
- 50 Ohm Feedthrough Termination
- A 450 Ohm Series Voltage Reducer consisting of:
 - 1 450Ω resistor, -hp- part number 0698-3510
 - 1V Thermal Converter

Procedure:

- A. Preset the 3314A.
- B. Set the 3314A as follows:

Frequency	10kHz
Amplitude	10Vp-p
- C. Connect the 50 Ohm Feedthrough Termination to the 3314A's Main Output. Connect the Voltage Reducer and Thermal Converter to the 3314A's X3 Output as shown in Figure 4-19.
- D. Set the digital voltmeter to measure $\approx 0.007\text{mVdc}$ and measure and record the thermal converter's output voltage (V_{ref}).
- E. Reduce the 3314A's amplitude to 9.89Vp-p and record the thermal converter's output voltage (V_1 limit). This corresponds to a 0.1dB change and is the low frequency flatness limit.
- F. Reduce the 3314A's amplitude to 9.44Vp-p and record the thermal converter's output voltage (V_2 limit). This corresponds to a 0.5dB change and is the mid frequency flatness limit.

G. Reduce the 3314A's amplitude to 8.41Vp-p and record the thermal converter's output voltage (V_3 limit). This corresponds to a 1.5dB change and is the high frequency flatness limit.

H. Set the 3314A's amplitude back to 10Vp-p and set the frequency to each of these values:

- 20Hz
- 50kHz
- 500kHz
- 1MHz

I. Measure and record the thermal converter's output voltage ($V_{20\text{Hz}}$, $V_{50\text{kHz}}$, $V_{500\text{kHz}}$, $V_{1\text{MHz}}$).

J. Voltages $V_{20\text{Hz}}$ and $V_{50\text{kHz}}$ should be within this range:

$$0.1\text{dB RANGE} = V_{\text{ref}} \pm (V_{\text{ref}} - V_1 \text{ limit})$$

K. Voltage $V_{500\text{kHz}}$ should be within this range:

$$0.5\text{dB RANGE} = V_{\text{ref}} \pm (V_{\text{ref}} - V_2 \text{ limit})$$

L. Voltage $V_{1\text{MHz}}$ should be within this range:

$$1.5\text{dB RANGE} = V_{\text{ref}} \pm (V_{\text{ref}} - V_3 \text{ limit})$$

4-21. HARMONIC DISTORTION

This test measures the relative harmonic levels with a spectrum analyzer.

Required equipment:

- Spectrum Analyzer
- 50 Ohm Feedthrough Termination
- A 500Ω Feedthrough Termination consisting of:
 - 1 499Ω resistor, -hp- part number 0698-4123

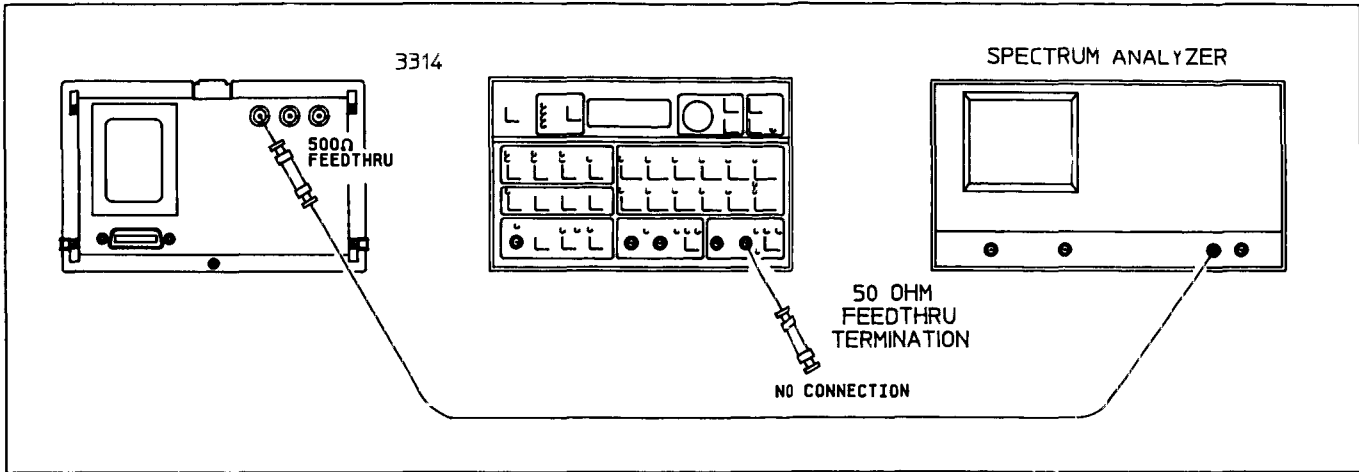


Figure 4-20. Harmonic Distortion Connections

Procedure:

- A. Preset the 3314A.
- B. Set the 3314A as follows:

Frequency 20Hz
 Amplitude 10Vp-p

C. Connect the 50 Ohm Feedthrough Termination to the 3314A's Main Output. Connect the 500Ω Feedthrough Termination to the 3314A's X3 Output.

D. Connect the spectrum analyzer's 1MΩ input to the 3314A's X3 Output. Set the spectrum analyzer to measure the fundamental and at least seven harmonics. Use the Marker function to verify that the level of the largest harmonic is more than 53dB below the fundamental.

E Repeat step D for 3314A frequency settings of 50kHz and 1MHz. The largest harmonic should be more than 53dB below the fundamental at 50kHz, and more than 38dB below at 1MHz.

4-22. SQUARE WAVE RISE/FALL TIME

This test uses a wide bandwidth oscilloscope to measure the rise and fall time of a 10kHz, 30Vp-p square wave.

Required Equipment:

- Oscilloscope
- 50 Ohm Feedthrough Termination
- A 500Ω Feedthrough Termination consisting of:
 1 499Ω resistor, -hp- part number 0698-4123

Procedure:

- A. Preset the 3314A.
- B. Set the 3314A as follows:

Frequency 10kHz
 Amplitude 10Vp-p
 Function Square Wave

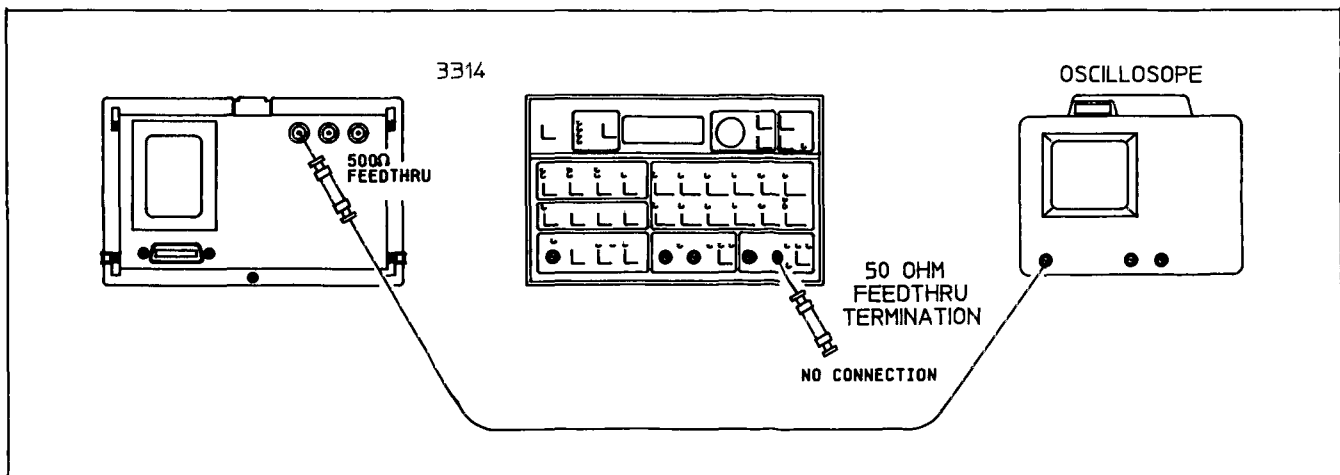


Figure 4-21. Square Wave Rise/Fall Time Connections

C. Connect the 50 Ohm Feedthrough Termination to the 3314A's Main Output. Connect the 500Ω Feedthrough Termination to the 3314A's X3 Output.

D. Connect the oscilloscope's 1MΩ input to the 3314A's X3 Output.

E. Set the oscilloscope to display 2 complete cycles with the peaks of the square wave at the 0% and 100% graticule lines.

F. Using the oscilloscope's delay function (set the delayed time per division to .1μS/DIV), measure the rise and fall time from the 10% to 90% graticule lines. In both cases, this should be less than 2 divisions (< 200ns).

4-23. RESIDUAL DC OFFSET

This test measures the DC voltage output from the X3 Output with no signal present.

Required Equipment:

- AC/DC Digital Voltmeter
- 50 Ohm Feedthrough Termination
- A 500Ω Feedthrough Termination consisting of:
 - 1 499Ω resistor, -hp- part number 0698-4123

Procedure:

- A. Preset the 3314A.
- B. Set the 3314A as follows:

Function OFF
 Offset 0VDC

C. Connect the 50 Ohm Feedthrough Termination to the 3314A's Main Output. Connect the 500Ω Feedthrough Termination to the 3314A's X3 Output.

D. Measure the DC voltage at the X3 Output. This voltage should be within 40mV of 0VDC.

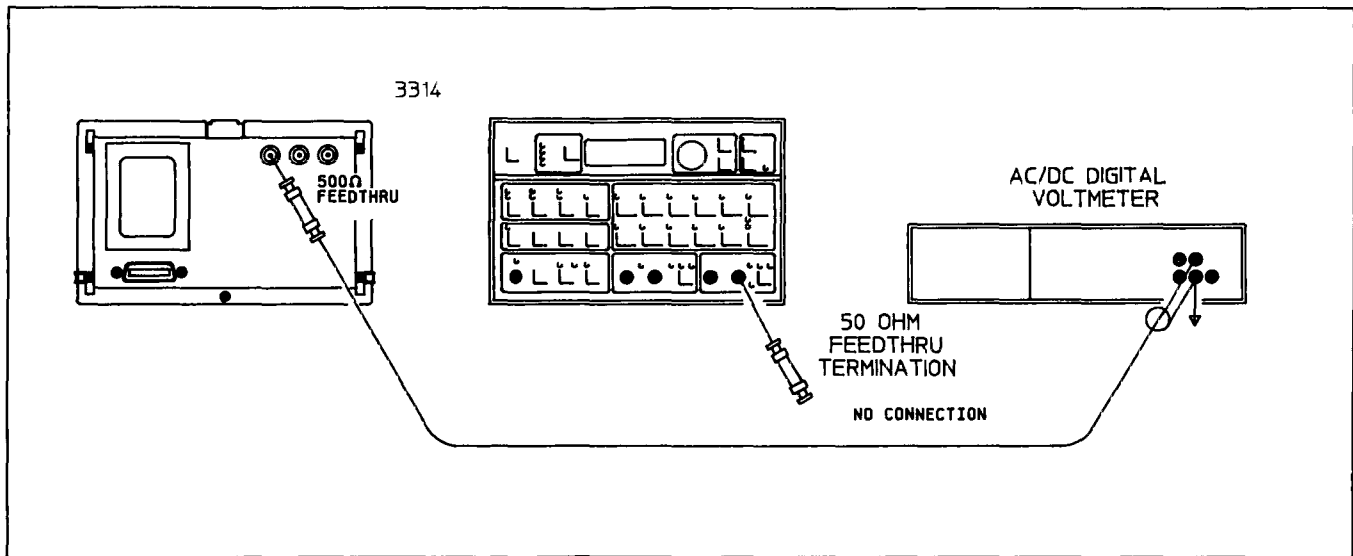


Figure 4-22. Residual DC Offset Connections

PERFORMANCE TEST RECORD

HEWLETT-PACKARD MODEL 3314A

Tests Performed By _____

FUNCTION GENERATOR

Date _____

SERIAL NO. _____

FREQUENCY ACCURACY TEST:

3314A Frequency (A)	Specification	Counter Reading
19.99 MHz	± 2000 Hz	_____
1999 kHz	± 200 Hz	_____
199.9 kHz	± 600 Hz	_____
19.99 kHz	± 60 Hz	_____
1999 Hz	± 6 Hz	_____
199.9 Hz	± 6 Hz	_____
<u>3314A Frequency (B)</u>		
00.1 Hz	± 0.2 Hz	_____
001 Hz	± 2 Hz	_____
0.01 kHz	± 20 Hz	_____
00.1 kHz	± 200 Hz	_____
001 kHz	± 0.1 Hz	_____
0.01 MHz	± 1 Hz	_____

TIME AXIS AND VARIABLE SYMMETRY:

% Symmetry	Specification	Calculated%
50%	$\pm 0.2\%$	_____
5%	$\pm 0.5\%$	_____
95%	$\pm 0.5\%$	_____

INTERNAL TRIGGER ACCURACY:

Period	Specification	Counter Reading
10.0ms	± 0.001 ms	_____

PERFORMANCE TEST RECORD (Cont'd)

TRIANGLE LINEARITY

x Values	Positive Slope Measurement	x Times y	Calculated Best Fit Straight Line	Tolerance*
$x_1 = 1$	10% _____	_____	(y_1) _____	$\pm 0.02V$
$x_2 = 2$	20% _____	_____	(y_2) _____	$\pm 0.02V$
$x_3 = 3$	30% _____	_____	(y_3) _____	$\pm 0.02V$
$x_4 = 4$	40% _____	_____	(y_4) _____	$\pm 0.02V$
$x_5 = 5$	50% _____	_____	(y_5) _____	$\pm 0.02V$
$x_6 = 6$	60% _____	_____	(y_6) _____	$\pm 0.02V$
$x_7 = 7$	70% _____	_____	(y_7) _____	$\pm 0.02V$
$x_8 = 8$	80% _____	_____	(y_8) _____	$\pm 0.02V$
$x_9 = 9$	90% _____	_____	(y_9) _____	$\pm 0.02V$

$$\begin{aligned} \Sigma x &= 45 & \Sigma y & \text{_____} & \Sigma xy & \text{_____} \\ (\Sigma x)^2 &= 2025 & \Sigma x \Sigma y & \text{_____} & m &= \text{_____} \\ \Sigma x^2 &= 285 & & & b &= \text{_____} \end{aligned}$$

*Tolerance is the maximum allowable difference between the "Positive Slope Measurement" (or "Negative Slope Measurement") and the "Calculated Best Fit Straight Line" value

Tolerance is calculated by:

$$\begin{aligned} \text{Tolerance} &= (\text{Triangle Amplitude})(\text{Specification}) \\ &= (10Vp-p)(0.2\%) \\ &= 0.02V \end{aligned}$$

x Values	Negative Slope Measurement	x Times y	Calculated Best Fit Straight Line	Tolerance*
$x_9 = 9$	90% _____	_____	(y_9) _____	$\pm 0.02V$
$x_8 = 8$	80% _____	_____	(y_8) _____	$\pm 0.02V$
$x_7 = 7$	70% _____	_____	(y_7) _____	$\pm 0.02V$
$x_6 = 6$	60% _____	_____	(y_6) _____	$\pm 0.02V$
$x_5 = 5$	50% _____	_____	(y_5) _____	$\pm 0.02V$
$x_4 = 4$	40% _____	_____	(y_4) _____	$\pm 0.02V$
$x_3 = 3$	30% _____	_____	(y_3) _____	$\pm 0.02V$
$x_2 = 2$	20% _____	_____	(y_2) _____	$\pm 0.02V$
$x_1 = 1$	10% _____	_____	(y_1) _____	$\pm 0.02V$

$$\begin{aligned} \Sigma x &= 45 & \Sigma y & \text{_____} & \Sigma xy & \text{_____} \\ (\Sigma x)^2 &= 2025 & \Sigma x \Sigma y & \text{_____} & m &= \text{_____} \\ \Sigma x^2 &= 285 & & & b &= \text{_____} \end{aligned}$$

PERFORMANCE TEST RECORD (Cont'd)

N CYCLE PHASE ACCURACY:

Step E Reading	Step F Reading	AVG	Specification	Step H Reading
			± 0.167V	

RESIDUAL DC AND DC OFFSET ACCURACY:

(Residual) (if Option 001, add ± 500uV to specification.)

3314A Voltage	Offset	Specification	Voltmeter Reading
10.00V	0V	± 0.05V	_____
1.000V	0V	± 0.005V	_____
100.0mV	0V	± 0.0005V	_____
10.00mV	0V	± 0.00005V	_____

(Variable)

3314A Voltage	Offset	Specification	Voltmeter Reading
10.00V	5V	± 0.21V	_____
1.000V	5V	± 0.16V	_____
100.0mV	5V	± 0.16V	_____
10.00mV	5V	± 0.16V	_____
10.00V	0.887V	± 0.087V	_____
1.000V	0.887V	± 0.037V	_____
100.0mV	0.887V	± 0.037V	_____
10.00mV	0.887V	± 0.037V	_____

DC OFFSET ACCURACY (cont):

3314A Voltage	Offset	Specification	Voltmeter Reading
10.00V	- 0.887V	± 0.087V	_____
1.000V	- 0.887V	± 0.037V	_____
100.0mV	- 0.887V	± 0.037V	_____
10.00mV	- 0.887V	± 0.037V	_____
10.00V	- 5V	± 0.21V	_____
1.000V	- 5V	± 0.16V	_____
100.0mV	- 5V	± 0.16V	_____
10.00mV	- 5V	± 0.16V	_____

PERFORMANCE TEST RECORD (Cont'd)

SQUARE WAVE RISE TIME AND ABERRATIONS

Rise Time		Fall Time	
Specification	Oscilloscope Reading	Specification	Oscilloscope Reading
$\leq 1\text{cm}$	_____	$\leq 1\text{cm}$	_____

Aberrations

Specification	Oscilloscope Reading
$\pm 0.5\text{V}$	_____

SINE WAVE HARMONICS:

3314A Frequency	Range	Specification	Pass	Fail				
20.0Hz	3	HARMONICS < - 55dB	_____	_____				
100.0Hz	3	HARMONICS < - 55dB	_____	_____				
199.9Hz	3	HARMONICS < - 55dB	_____	_____				
100. Hz	4	HARMONICS < - 55dB	_____	_____				
1000 Hz	4	HARMONICS < - 55dB	_____	_____				
1999 Hz	4	HARMONICS < - 55dB	_____	_____				
1.00kHz	5	HARMONICS < - 55dB	_____	_____				
10.00kHz	5	HARMONICS < - 55dB	_____	_____				
19.99kHz	5	HARMONICS < - 55dB	_____	_____				
10.0kHz	6	HARMONICS < - 55dB	_____	_____				
100.0kHz	6	HARMONICS < - 40dB	_____	_____				
199.9kHz	6	HARMONICS < - 40dB	_____	_____				
100. kHz	7	HARMONICS < - 40dB	_____	_____				
1000. kHz	7	HARMONICS < - 40dB	_____	_____				
1999. kHz	7	HARMONICS < - 40dB	_____	_____				
			Measured Levels					
			2nd	3rd	4th	5th	6th	7th
1.00MHz	8	- 25dB	_____	_____	_____	_____	_____	_____
10.00MHz	8	- 25dB	_____	_____	_____	_____	_____	_____
19.99MHz	8	- 25dB	_____	_____	_____	_____	_____	_____

PERFORMANCE TEST RECORD (Cont'd)

AM HARMONICS.

Specification	Pass	Fail
Harmonic Levels Below "DSPL Line" Reference	_____	_____

VCO LINEARITY:

Power Supply Voltage	Specification	Counter Reading
-8V ± 10mV	2MHz ± 300kHz	_____
-4.5V ± 10mV	5.5MHz ± 300kHz	_____
1V ± 10mV	11MHz ± 300kHz	_____

PHASE LOCKED LOOP PHASE ACCURACY:

3314A Phase Setting	Specification	(t)	(t ₁)	Calculated Phase
-199.9°	SETTING ± 2°	_____	_____	_____
-90°	SETTING ± 2°	_____	_____	_____
0°	SETTING ± 2°	_____	_____	_____
90°	SETTING ± 2°	_____	_____	_____
199.9°	SETTING ± 2°	_____	_____	_____

AMPLITUDE ACCURACY.

Function	Specification	Voltmeter Reading
Sine	3.535V ± 0.0477V	_____
Square	5.0V ± 0.0477V	_____
Triangle	2.8867V ± 0.0477V	_____

SINE WAVE POWER FLATNESS:

$$\text{Drift(dB)} = 20 \text{ Log} \left| \frac{\text{Step K Reference}}{\text{Step E Reference}} \right| < 0.025\text{dB}$$

$$\text{Flatness Error(dB)} = 20 \text{ Log} \left(\frac{\text{Displayed Amplitude}}{7.5\text{V}} \right)$$

Step E Reference _____

Drift(dB) _____

Step K Reference _____

PERFORMANCE TEST RECORD (Cont'd)

Table 4-8. Sine Wave Power Flatness

3314A Frequency	3314A Displayed Amplitude	VREF	Specification	Calculated Flatness Error
100 Hz	_____	_____	± 0.04dB	_____
50 kHz	_____	_____	± 0.04dB	_____
800kHz	_____	_____	± 0.17dB	_____
1MHz	_____	_____	± 0.17dB	_____
5MHz	_____	_____	± 0.8dB	_____
19.99MHz	_____	_____	± 0.8dB	_____

MANUAL SWEEP ACCURACY:

"Start Freq"	"Stop Freq"	Specification	Counter Reading
1 MHz	10 MHz	1 MHz ± 300kHz	_____
100 kHz	1 MHz	100 kHz ± 10 kHz	_____
10 kHz	100 kHz	10 kHz ± 400 Hz	_____

Table 4-9. Step Attenuator Accuracy

3314A Frequency	Attenuator Setting	Spectrum Analyzer Marker Amplitude	Attenuator Insertion Loss	Actual Attenuation	Upper Limit	Lower Limit
50 kHz	20 dB	_____	_____	_____	20.05 dB	19.95 dB
	40 dB	_____	_____	_____	40.05 dB	39.95 dB
	60 dB	_____	_____	_____	60.05 dB	59.95 dB
1 MHz	20 dB	_____	_____	_____	20.3 dB	19.7 dB
	40 dB	_____	_____	_____	40.3 dB	39.7 dB
	60 dB	_____	_____	_____	60.5 dB	59.5 dB
19.99 MHz	20 dB	_____	_____	_____	20.3 dB	19.7 dB
	40 dB	_____	_____	_____	40.3 dB	39.7 dB
	60 dB	_____	_____	_____	60.5 dB	59.5 dB

Example. Actual Attenuation = Attenuator Setting + (Marker Reading - Insertion Loss)

$$= 20 \text{ dB} + (0.01 \text{ dB} - (-0.013 \text{ dB}))$$

$$= 20.023 \text{ dB}$$

PERFORMANCE TEST RECORD (Cont'd)

Table 4-10. Vernier Attenuator Flatness

3314A Frequency	Attenuator Setting	Spectrum Analyzer Marker Amplitude	Attenuator Insertion Loss	Actual Attenuation	Upper Limit	Lower Limit
10 kHz	10 dB	_____	_____	*Ref	_____	_____
	20 dB	_____	_____	*Ref	_____	_____
50 kHz	10 dB	_____	_____	_____	Ref +0.03 dB	Ref -0.03 dB
	20 dB	_____	_____	_____	Ref +0.03 dB	Ref -0.03 dB
1 MHz	10 dB	_____	_____	_____	Ref +0.16 dB	Ref -0.16 dB
	20 dB	_____	_____	_____	Ref +0.16 dB	Ref -0.16 dB
19.99 MHz	10 dB	_____	_____	_____	Ref +0.7 dB	Ref -0.7 dB
	20 dB	_____	_____	_____	Ref +0.7 dB	Ref -0.7 dB

Example: Actual Attenuation = Attenuator Setting + (Marker Reading - Insertion Loss)
 = 20 dB + (0.01 dB - (-0.013 dB))
 = 20.023 dB

*Reference for attenuation flatness

OPTION 001:

X3 Gain Accuracy:

Voltmeter Reading	V1
~ 3.5VRMS	_____
Voltmeter Reading	V2
~ 10.6VRMS	_____

$$\text{Gain Error (\%)} = \left[\frac{V2}{V1} - 3 \right] \times 100\%$$

= _____

PERFORMANCE TEST RECORD (Cont'd)

SINE POWER FLATNESS:

Vref	V1 Limit	V2 Limit	V3 Limit
_____	_____	_____	_____

3314A Frequency	Thermal Converter Output Voltage
20Hz	_____
50kHz	_____
500kHz	_____
1MHz	_____

The recorded voltages for 3314A frequency settings of 20Hz and 50kHz should fall within the range which is calculated as follows:

$$0.1\text{dB Range} = V_{\text{ref}} \pm (V_{\text{ref}} - V1 \text{ Limit})$$

$$= \underline{\hspace{2cm}}$$

For the 500kHz frequency setting, the recorded voltage should fall within the range:

$$0.5\text{dB Range} = V_{\text{ref}} \pm (V_{\text{ref}} - V2 \text{ Limit})$$

$$= \underline{\hspace{2cm}}$$

For the 1MHz frequency setting, the recorded voltage should fall within the range:

$$1.5\text{dB Range} = V_{\text{ref}} \pm (V_{\text{ref}} - V3 \text{ Limit})$$

$$= \underline{\hspace{2cm}}$$

HARMONIC DISTORTION:

3314A Frequency	Fundamental Level (dB)	Harmonic Levels (dB)
20Hz	_____	2nd _____ 3rd _____ 4th _____ 5th _____ 6th _____ 7th _____

Harmonic Levels are acceptable if:

$$(\text{Fundamental Level} - \text{Highest Level in Harmonics Column}) < -53\text{dB}$$

PERFORMANCE TEST RECORD (Cont'd)

3314A Frequency	Fundamental Level (dB)	Harmonic Levels (dB)
50kHz	_____	2nd _____
		3rd _____
		4th _____
		5th _____
		6th _____
		7th _____

Harmonic Levels are acceptable if:

$$\text{(Fundamental Level - Highest Level in Harmonics Column)} < -53\text{dB}$$

3314A Frequency	Fundamental Level (dB)	Harmonic Levels (dB)
1MHz	_____	2nd _____
		3rd _____
		4th _____
		5th _____
		6th _____
		7th _____

Harmonic Levels are acceptable if:

$$\text{(Fundamental Level - Highest Level in Harmonics Column)} < -38\text{dB}$$

SQUARE WAVE RISE/FALL TIME:

Rise Time		Fall Time	
Specification	Oscilloscope Reading	Specification	Oscilloscope Reading
≤ 200ns	_____	≤ 200ns	_____

RESIDUAL DC OFFSET:

Specification	Measured Offset
≤ 40 mVdc	_____

SECTION V

ADJUSTMENTS

5-1. INTRODUCTION

The adjustment and measurement procedures contained in this section are intended to restore the 3314A to its optimum operating condition. Adjustment of the instrument is necessary following repair, replacement of components, or if desired, after the instrument has failed a Performance Test. These procedures should also be followed for periodic maintenance of the instrument.*

The following tests were developed using the equipment listed in Section I of this manual. Equipment with equal or better critical specifications may be used; however, the operator is responsible for the determination of accurate test results. See Section VII, Manual Backdating, for "Δ" explanations. The individual adjustments and measurements should be completed in the order in which they are presented.

Table 5-1. Adjustments

Adjustment Names	Paragraph
Battery Voltage and Current Drain Check	5-2
Power Supply Adjustment	5-3
5V Switching Supply Frequency Check	5-4
Crystal Oscillator Frequency Check	5-5
RAM/ROM Test	5-6
Amplitude Calibration Reference Voltage Check	5-7
Multiplex DAC Offset Adjustment	5-8
Frequency Accuracy Calibration Adjustment	5-9
Z-Axis Polarity Observation	5-10
Log Sweep Start Frequency Adjustment	5-11
Linear Sweep Start Frequency Adjustment	5-12
JC Offset Adjustment	5-13
Phase Lock Phase Adjustment	5-14
Symmetry Adjustment	5-15
Hold Phase Zero Adjustment	5-16
DC/AC Balance Adjustment	5-17
Low Frequency Harmonic Distortion Adjustment	5-18
Amplitude Calibration Pad Selection	5-19
High Frequency Harmonic Distortion Adjustment	5-20
Attenuator High Frequency Compensation Adjustment	5-21
X3 (Option 001) Functional Check	5-22

*It is recommended that a routine adjustment of the 3314A be performed at least once every six months.

The adjustment and measurement locations for the procedures described in the following paragraphs are found at the end of this section.

WARNING

Maintenance described herein is performed with power supplied to the instrument and protective covers removed. Such maintenance should be performed by service-trained personnel who are aware of the hazards involved (for example, fire and electrical shock). Where maintenance can be performed without power applied, the power cord should be removed.

NOTE

Allow the 3314A a "warm-up" period of 30 minutes prior to making adjustments.

5-2. BATTERY VOLTAGE AND CURRENT DRAIN CHECK

This procedure checks for excessive current drawn by RAM and measures the voltage across Battery A3B1 and at pin 18 of A3U211.

Equipment Required:

AC/DC Digital Voltmeter

Procedures:

- A. Turn the 3314A off.
- B. Set the digital voltmeter as follows:

Function DC
 Range Auto
 Trigger Internal
 Math Off
 Sample Rate Maximum

- C. Using the voltmeter, measure the voltage across A3R13. This voltage has a typical value of <20μV and a maximum value of 18.5mV. A voltage >18.5mV across A3R13 indicates excessive current drain which may result in the discharge of A3B1.

NOTE

If the voltage measured across A3R13 indicates a large current drain, suspect bad RAM.



Servicing personnel should wear a static control wristband to avoid Electrostatic Discharge ("Static Zap") of the components within the 3314A. Potentials as low as 500V though not noticed by touching the instrument, can damage sensitive components within the instrument.

D. Simultaneously short the (+) terminal of A3B1 to ground while measuring the DC voltage across the battery. Maintain the short and measurement for approximately five seconds. Monitor the voltmeter display and verify that the voltage remains $>2.20V$. (**REMOVE SHORT IMMEDIATELY AFTER MAKING THIS MEASUREMENT.**)

NOTE

If the battery voltage failed to remain $>2.20V$, suspect not only bad RAM, but also the possibility that A3CR2 may have been destroyed while probing. This would result in current loading by the power supplies.

$\Delta 11$

E. Briefly place a short across A3C29 to discharge the capacitor. Then measure the battery voltage at A3U211 pin 24 with respect to ground. The voltage should be $\geq 2.5VDC$ but $< 3.5VDC$.

NOTE

This step is a check to insure that the short applied in step D did not drain A3B1 below its required operating potential.

5.3. POWER SUPPLY ADJUSTMENT

This adjustment enables the 3314A to generate accurate voltage levels (through Amplitude Calibration) and calibrate its frequency over the proper range by setting the $-15VDC$ and $+15VDC$ supply levels and measuring the $+5VDC$ supply.

Equipment Required:

AC/DC Digital Voltmeter

Procedures:

A. Preset the 3314A.

B. Set the digital voltmeter as follows:

Function	DC
Range	Auto
Trigger	Internal
Math	Off
Sample Rate	Maximum

C. Using the voltmeter, measure the $-15VDC$ supply with respect to ground on A1J5 pin 17.

D. If necessary, adjust A3R113 until $-15VDC \pm 5mV$ is measured on the voltmeter.

E. Measure the $+15VDC$ supply with respect to ground on A1J5 pin 20.

F. If necessary, adjust A3R114 until $+15VDC \pm 5mV$ is measured on the voltmeter.

G. Measure the $+5VDC$ supply with respect to ground at A3TP3. The level should be $5.1VDC \pm 100mV$.

NOTE

If the voltage measured in step G is below the specified level, disconnect cables A3J1 through A3J3 while continuing to monitor the $+5V$ supply at A3TP3. This will determine which PC assembly is causing the failure. If after J1 through J3 have been disconnected the voltage remains below the required level, suspect problems with either the controller hardware or power supplies.

5-4. 5V SWITCHING SUPPLY FREQUENCY CHECK

This procedure measures the Switching Frequency of the +5VDC supply.

Equipment Required:

- Universal Counter
- 10:1 Probe

Procedures:

- A. Preset the 3314A.
- B. Set the counter as follows:

Function	Freq A
Resolution	1Hz
Level A	Preset
Slope	+
Coupling	AC
Attenuation	x10
Input Termination	1 MΩ
Sample Rate	Adjust CCW as necessary

C. Using the probe, measure the Switching frequency at the collector of A3Q108. The frequency should be 33kHz ± 3.3kHz.

NOTE

Note that this is the "average" value and that instantaneous deviations greater than the 10% spread may occur. If the measured frequency remains outside the 33kHz ± 3.3kHz range, suspect hardware problems or a possible short of the +5V supply.

5-5. CRYSTAL OSCILLATOR FREQUENCY CHECK

This procedure measures the Crystal Oscillator frequency.

Equipment Required:

- Universal Counter

Procedures:

- A. Preset the 3314A.
- B. Set the counter as follows:

Function	Freq A
Resolution	1Hz
Level A	Preset
Slope	+
Coupling	AC
Attenuation	x1
Input Termination	1 MΩ
Sample Rate	Adjust CCW as necessary

C. Using the counter, measure the Crystal Oscillator frequency at A3TP5 (MPU CLK 1) and A3TP4 (MPU CLK 2). The frequency should be 1.0MHz ± 50Hz.

NOTE

If the frequency measured in step C is outside the given range by 10% or more, the crystal may have to be replaced.

5-6. RAM/ROM TEST

This procedure checks for RAM or ROM failures within the 3314A and tests the functioning of the front panel keys.

Equipment Required:

- NONE

Procedures:

- A. Turn the 3314A OFF, then ON, while simultaneously pressing the "ARB" key.

Δ11 Table 5-2. RAM/ROM Location and Reference LED's

ROM Test						
LED	FREQ	AMPTD	OFFSET	SYM	PHASE	N
Reference Designator	U208	U208	U207	U207	U207	U207
ROM Address Block	4000-5FFF	6000-7FFF	8000-9FFF	A000-B000	C000-D000	E000-FFFF
RAM Test						
LED	SW/TR INTVL	START FREQ	STOP FREQ	MKR		
Reference Designator	U211					

B. After power has been restored to the 3314A, release the "ARB" key.

C. The 3314A front panel will be blank for approximately 30 seconds while the RAM/ROM Test is in Progress. At the end of this period, all front panel LED'S and display segments should illuminate.

D. RAM or ROM failures are indicated by the non-illumination of the LED corresponding to the selected front panel parameter listed in Table 5-2. For example, if ROM address block 6000-7FFF failed, the "AMPTD" LED would not illuminate indicating a bad U208.

NOTE

Should a LED assigned to the RAM/ROM locations fail to illuminate, press its corresponding key. If the LED illuminates when the key is pressed, then the RAM or ROM is probably bad. If the LED does not illuminate when the key is pressed, then the LED is most likely defective.

E. After replacing any failed RAM or ROMs, repeat test beginning with step A to verify the quality of any new parts. Repeat this test until all RAM and ROM LEDs illuminate without a failure then proceed to step F.

F. After determining RAM/ROM quality, press each front panel key and verify that its corresponding LED toggles. This assures that each key functions properly.

G. Observe the rightmost seven segment display while pressing the "Range Up" key. Segment "B" of the display (see Figure 5-1), should toggle.

H. Press the "Range Down" key to verify that it toggles segment "C" (see Figure 5-1), of the seven segment display.

I. Press Modify keys "←" and "→" to verify that they toggle segments "F" and "E" respectively.

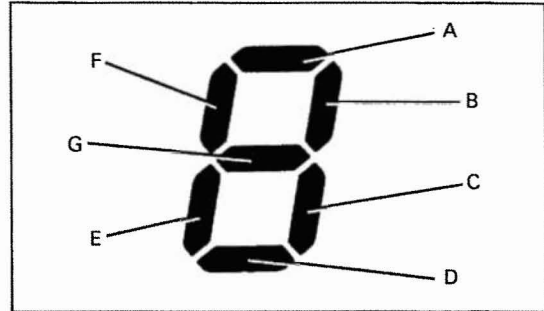


Figure 5-1. Seven Segment Display

J. Observe the "1" on the left side of the 3314A display. Rotate the Modify Knob clockwise to confirm that the upper segment toggles. Rotate the Modify Knob counterclockwise to confirm that the bottom segment toggles.

K. Recycle the power on the 3314A to exit the RAM/ROM test. "E09" will appear in the display due to the memory in RAM that was lost while the test was being performed. This is the normal instrument response.

5-7. AMPLITUDE CALIBRATION REFERENCE VOLTAGE CHECK

This procedure verifies the Reference Voltage levels for Amplitude Calibration.

Equipment Required:

AC/DC Digital Voltmeter

Procedures:

A. Preset the 3314A.

B. Set the digital voltmeter as follows:

Function DC
 Range Auto
 Trigger Internal
 Math Off
 Sample Rate Maximum

C. Using the voltmeter, measure the voltage between A1U805 pin 3 and ground. The level should be +5.515VDC ±0.005V.

D. Measure the voltage between A1U805 pin 6 and ground. The level should be -5.515VDC ±0.005V.

NOTE

If the voltages measured in steps C and D are outside their given tolerances, check the levels of the +15VDC and -15VDC supplies. Adjust the supplies if necessary and repeat steps C and D of this test. If the voltages still do not meet the specification, check the values of A1R804 through A1R807 against those given on the schematic. A1U805 may also need to be replaced.

5-8. MULTIPLEX DAC OFFSET ADJUSTMENT

This adjustment cancels the offset voltage of A2U207, thus assuring the proper functioning of the Multiplex DAC.

Equipment Required:

AC/DC Digital Voltmeter

Procedures:

- A. Preset the 3314A.
- B. Set the digital voltmeter as follows:

Function	DC
Range	Auto
Trigger	Internal
Math	Off
Sample Rate	Maximum

NOTE

Due to the precision required for this adjustment, connect the voltmeter ground directly to A2J8 pin 4 of the 3314A.

- C. Using the voltmeter, measure the DC voltage between A2U213 pin 1 and ground. The level should be 0.0VDC \pm 0.1mV.
- D. If necessary, adjust A2R212 (DAC Offset) until 0.0VDC \pm 0.1mV is measured.

NOTE

Sweep and Amplitude accuracy are affected by this adjustment.

5-9. FREQUENCY ACCURACY CALIBRATION ADJUSTMENT

This adjustment sets the Frequency Calibration potentiometer to the center of the calibration range, thus insuring the 3314A's ability to calibrate frequency over its entire operating temperature range.

Equipment Required:

NONE

Procedures:

- A. Preset the 3314A.
- B. Set A3S1(4) and A3S1(5) to the "closed" position.
- C. Turn the 3314A OFF, then ON.
- D. Return A3S1(4) and A3S1(5) to the "open" position. (The 3314A is now in Test Mode 01.)
- E. Adjust A2R429 (Freq Cal) until 000 \pm 002 is shown in the 3314A display.
- F. Press the "Range Down" key to return the 3314A to normal operation. Verify that the instrument passes the calibration without "E31" appearing in the display*.

***NOTE**

If "E31" continues to be displayed, press the "Range Up" key four times to set the frequency to 10MHz. If "E31" was displayed as the frequency changed to 10MHz, adjust A1C218 (10MHz Adjust) in either direction and perform a calibration ("Blue", "RCL"). Repeat adjustment and calibration until "E31" no longer appears when the calibration is performed. (If E31 continued to appear after adjusting A1C218, check the power supplies for proper amplitude, adjust if necessary, and repeat Frequency Accuracy Calibration adjustment.)

5-10. Z-AXIS POLARITY OBSERVATION

This procedure measures the amplitude of the Z-Axis Marker pulse and verifies its change in polarity when the Z-Axis switch is toggled.

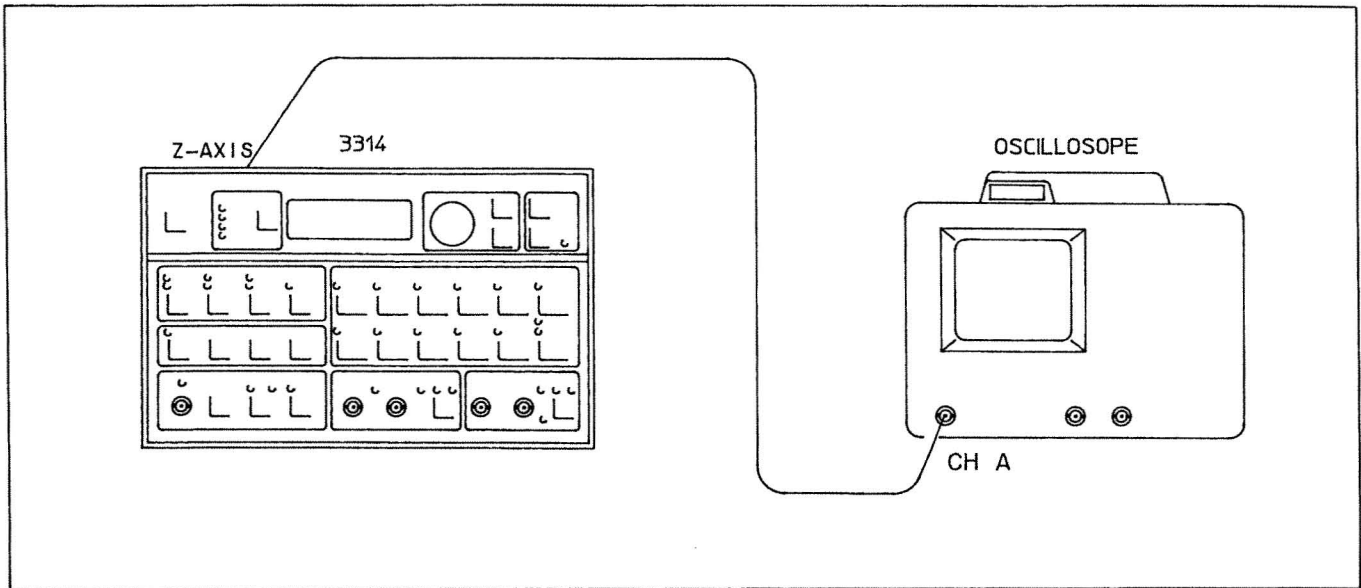


Figure 5-2. Z-Axis Polarity Observation

Equipment Required:

Oscilloscope

Procedures:

A. Preset the 3314A.

B. Set the oscilloscope as follows:

- Volts/Div 5V
- Coupling DC
- Vert Display A
- Internal Trig A
- Time/Div 2ms
- Horiz Display Main

C. Connect the 3314A's "Z-Axis" output to the oscilloscope's channel A input.

D. Enable the 3314A Linear Sweep.

E. Observe the waveform on the oscilloscope. The waveform should have the amplitude and polarity as shown in Figure 5-3 if A2S501 is in the "BLK +" position. If A2S501 is in the "BLK -" position, the waveform should appear as shown in Figure 5-4.

NOTE

Note the position that the Z-Axis switch is currently in. It should be returned to that position as soon as this test is completed.

F. Switch A2S501 from its previous state and observe the waveform's change in polarity. This assures that the Z-Axis switch is functioning properly.

G. Return A2S501 to the position it was in when the instrument was received.

5-11. LOG SWEEP START FREQUENCY ADJUSTMENT

This adjustment provides accurate Log Sweep Start frequencies by setting the Frequency Control Voltage (FCV) to the correct level.

Equipment Required:

Universal Counter

Procedures:

A. Preset the 3314A.

B. Set the counter as follows:

- Function Per Avg A
- Periods Averaged 10
- Level A Preset
- Slope +
- Coupling AC
- Attenuation x1
- Sample Rate Adjust CCW
as necessary

C. Connect the 3314A Sync Output to the counter.

D. Enable the 3314A "Log Sweep".

E. Perform a calibration of the Sweep Stop frequency by pressing "Blue", "RCL".

F. Press "Man Sweep".

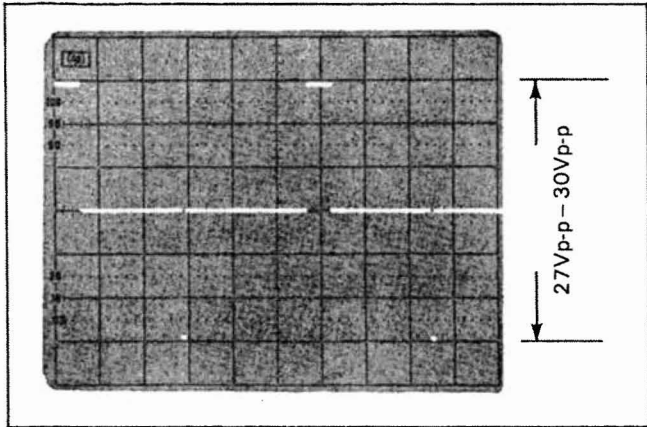


Figure 5-3. Z-Axis Polarity Observation "BLK+"

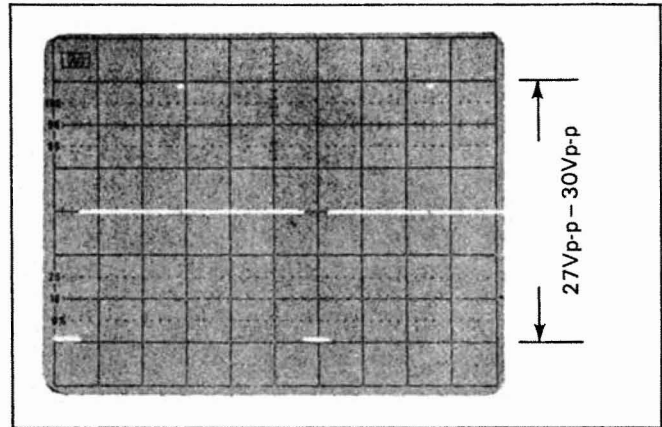


Figure 5-4. Z-Axis Polarity Observation "BLK-"

G. Press "Stop Freq" and record the period measured on the counter. (This period should be between 97.8 μ s and 102.2 μ s.)

H. Press "Start Freq". 1000Hz should now be displayed on the 3314A.

I. While monitoring the counter's display, adjust A2R427 (Log Sweep) until a reading 10x the period recorded in step G ($\pm 1\mu$ s) is measured on the counter.

NOTE

If this adjustment fails to provide accurate Log Sweep Start frequencies, suspect problems with either the frequency generator on the A1 board, the Freq/Sym DAC, or the FCV line.

5-12. LINEAR SWEEP START FREQUENCY ADJUSTMENT

This adjustment insures accurate Linear Sweep Start frequencies by providing the proper reference to the Multiplex DAC.

Equipment Required:

Universal Counter

Procedures:

A. Preset the 3314A.

B. Set the counter as follows:

- Function Per Avg A
- Periods Averaged 10
- Level A Preset
- Slope +
- Coupling AC
- Attenuation x1
- Sample Rate Adjust CCW as necessary

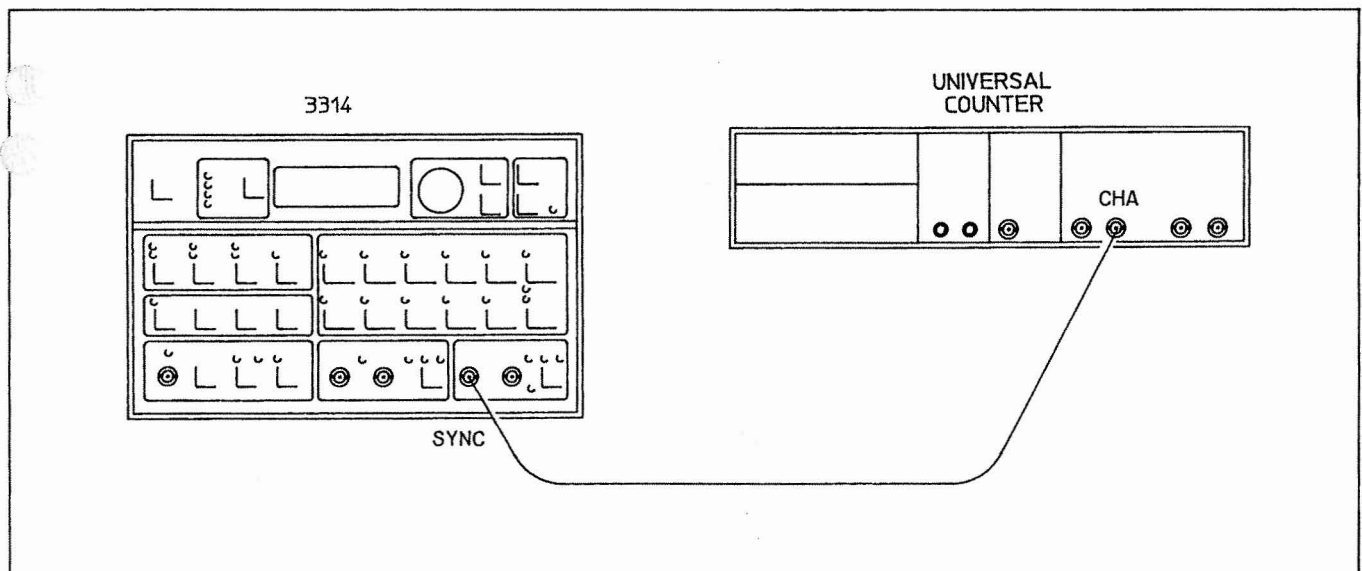


Figure 5-5. Log Sweep Start Frequency Adjustment

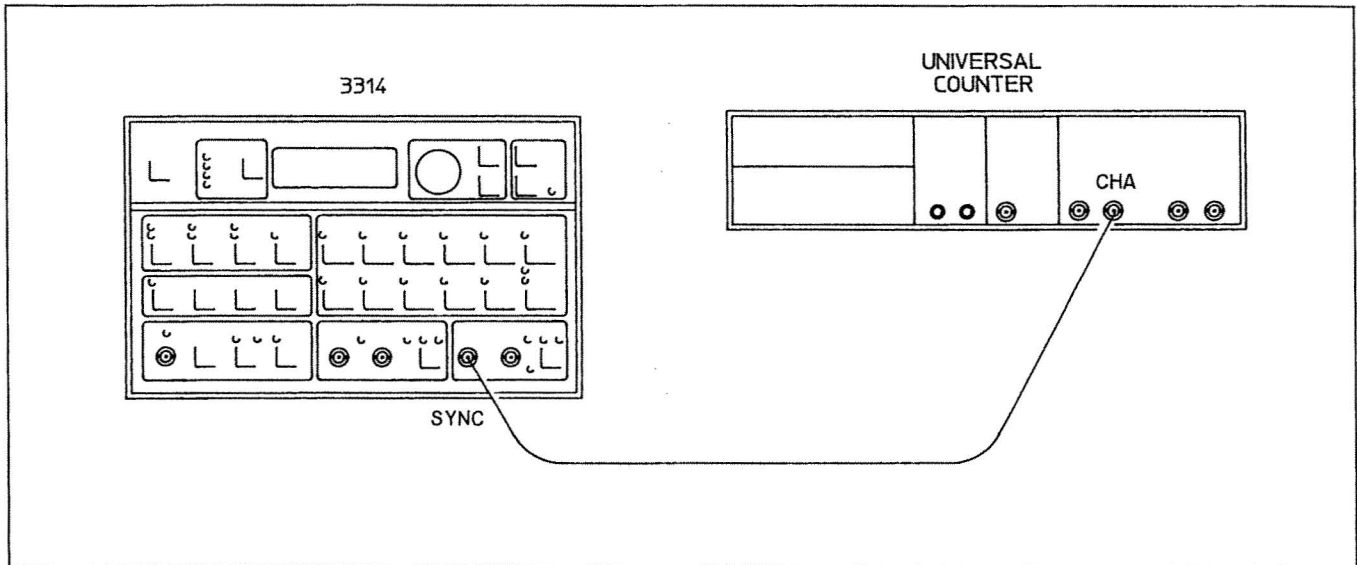


Figure 5-6. Linear Sweep Start Frequency Adjustment

- C. Connect the 3314A Sync Output to the counter.
- D. Enable the 3314A "Linear Sweep".
- E. Perform a calibration of the Sweep Stop frequency by pressing "Blue", "RCL".
- F. Press "Man Sweep".
- G. Press "Stop Freq" and record the period measured on the counter. (This period should be between 99.7µs and 100.3µs.)
- H. Press "Start Freq". 1000Hz should now be displayed on the 3314A.
- I. While monitoring the counter's display, adjust A2R205 (Lin Sweep) until a reading 10x the period recorded in step G ($\pm 1\mu\text{s}$) is measured on the counter.

NOTE

If this adjustment fails to produce the desired results, consider possible problems with A2U201 or the A2U212 analog switch.

5-13. DC OFFSET ADJUSTMENT

This adjustment assures accurate DC Offset levels.

Equipment Required:

- AC/DC Digital Voltmeter
- 50Ω Feedthrough Termination

Procedures:

- A. Preset the 3314A.

- B. Set the 3314A as follows:

Function Off
 DC Offset 0.002V

- C. Set the voltmeter as follows:

Function DC
 Range Auto
 Trigger Internal
 Math Off
 Sample Rate Maximum

- D. Connect the 3314A to the voltmeter as shown in Figure 5-7.

- E. Note the DC Offset measured on the voltmeter. If necessary, adjust A2R267 (DC Zero) until an Offset of 0.002VDC $\pm 5\text{mV}$ is indicated by the voltmeter.

NOTE

If small errors between the actual and displayed offset continue to exist after adjusting A2R267, check the values of A2R233, A2R234, A2R264, A2R265, and A2R266 against those given on the schematic. If large errors result, look for problems on the output amplifier board.

5-14. PHASE LOCK PHASE ADJUSTMENT

This adjustment insures the Phase accuracy between the 3314A and the reference to which it is locked, by regulating bias currents which control the phase difference and stabilize the phase locked loop.

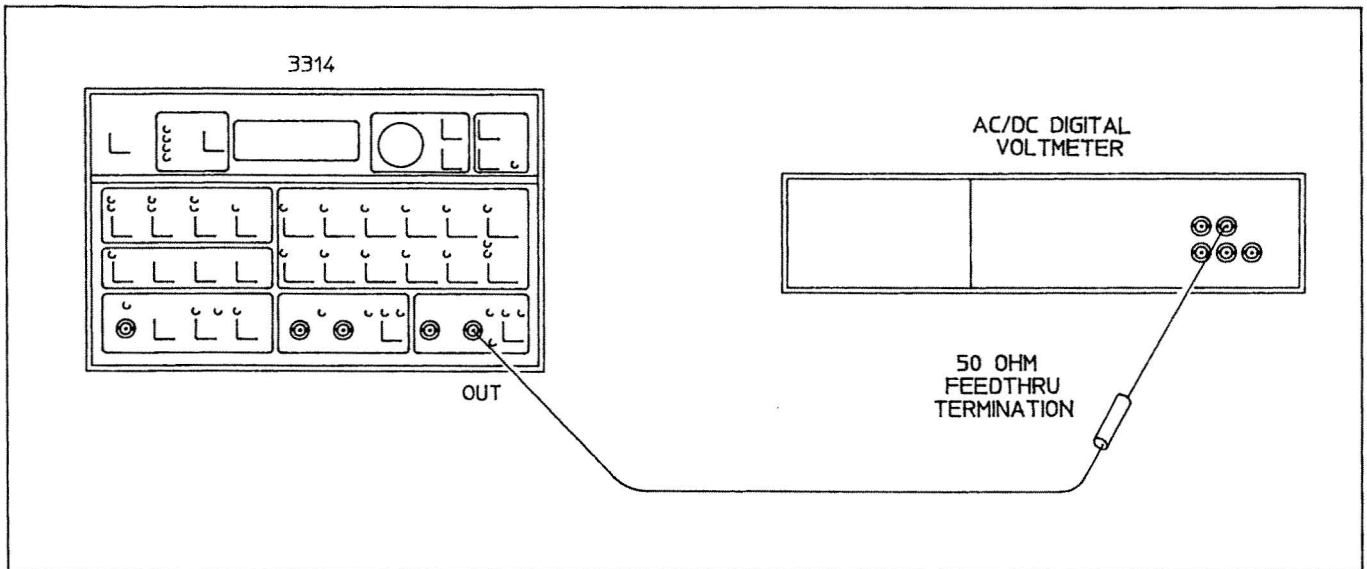


Figure 5-7. DC Offset Adjustment

Equipment Required:

Oscilloscope

Procedures:

- A. Preset the 3314A.
- B. Set the 3314A as follows:

Mode Fin x N
 Trig Intvl 0.1ms

C. Set the oscilloscope as follows:

	Chan. A	Chan. B
Coupling	DC	DC
Volts/Div	0.5V	0.5V
Vert Display	Alt	Alt
Int Trig	B	B
Time/Div	0.02ms	0.02ms
DLY Time Int	Delta T Off	Delta T Off
Horiz Display	Main	Main

D. Connect the "Sync" and "Trigger" outputs of the 3314A to oscilloscope channels A and B respectively.

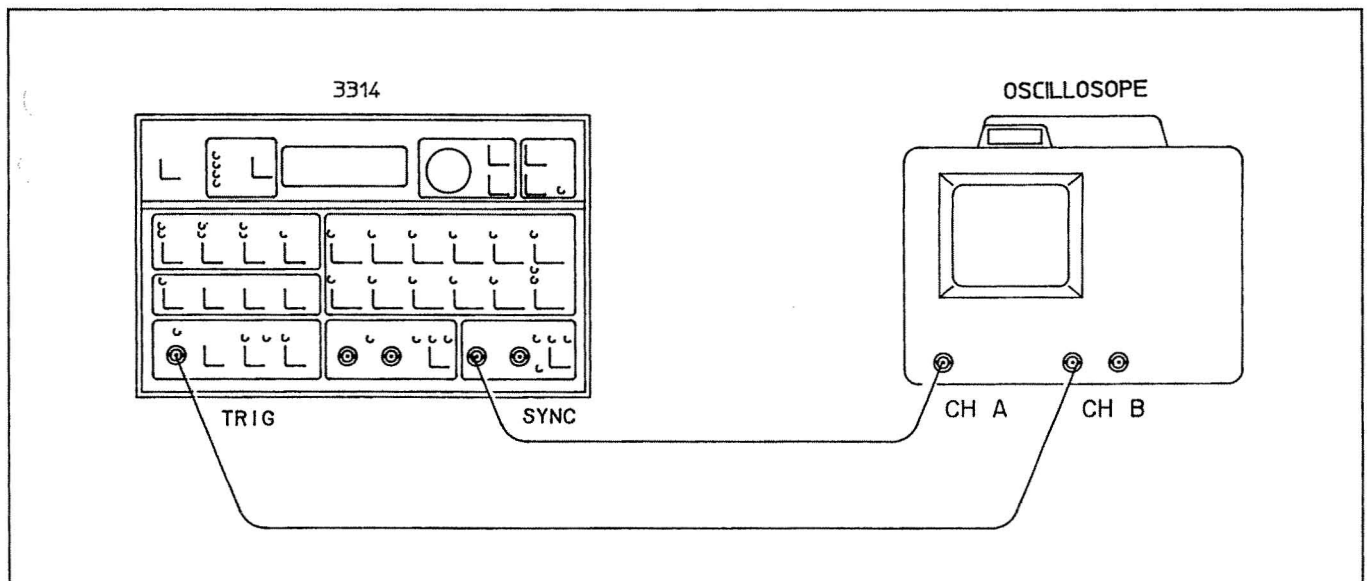


Figure 5-8. Phase Lock Phase Adjustment

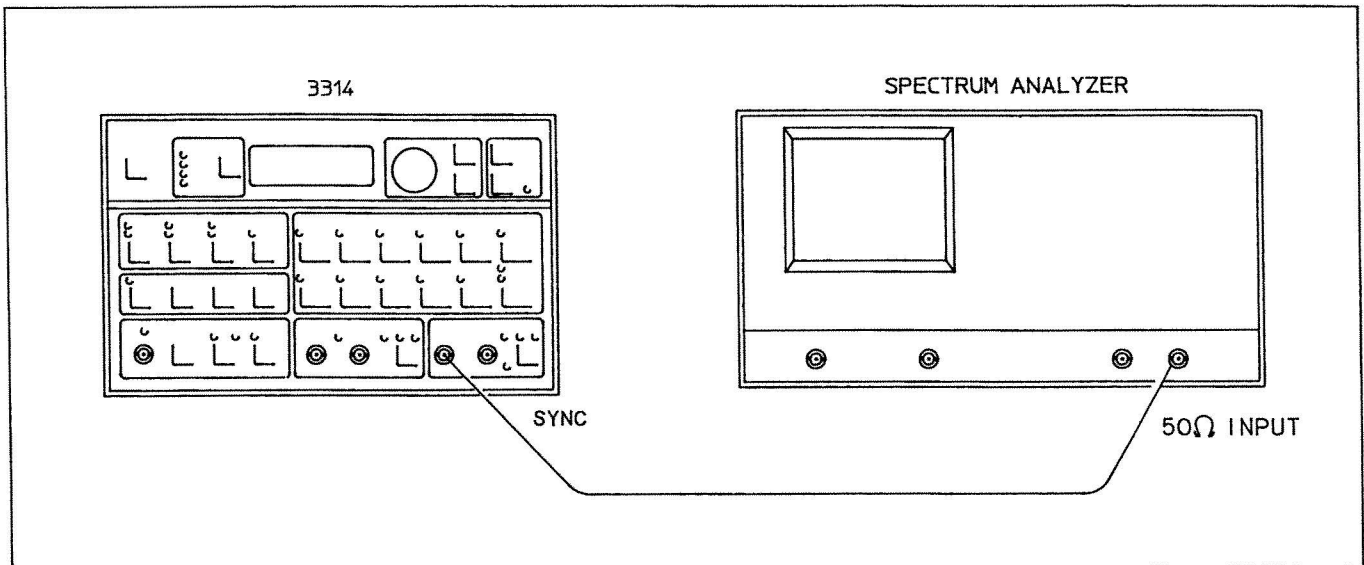


Figure 5-9. Symmetry Adjustment

E. Activate "Range Hold" on the 10kHz range by pressing the "Freq" key followed by the "Blue"/"Range Down" keys.

F. Observe the waveforms displayed on the oscilloscope. Both square waves should be in phase. Center both waveforms around the oscilloscope's x-axis graticule.

G. Set the phase on the 3314A to +180°.

H. Set the "Delayed Time/Division" knob on the oscilloscope to 0.5μs.

I. Adjust the Time Interval Stop Control until the Marker overlaps the rising edge of the 3314A Trigger square wave (chan. B).

J. Change the oscilloscope's "Horiz Display" to "DLY'D" and increase the beam intensity.

K. Using the "Time Interval Stop Control", set the rising edge of the Trigger signal so that it is centered on the oscilloscope's y-axis graticule.

L. Adjust A2R113 (Phase +180) so that the falling edge of the 3314A "Sync" square wave coincides with the "Trigger" rising edge on the y-axis graticule*. The edges should not be more than 166ns apart.

***Note**

Expect at least 1μs of phase jitter on the "Sync" falling edge. Adjust the edge so that the y-axis graticule appears in the "center" of the jitter.

M. Set the phase on the 3314A to -180°. The "Sync" waveform will shift a full period in relation to the "Trigger" waveform.

N. Adjust A2R108 (Phase -180) so that the falling edge of the 3314A "Sync" square wave coincides with the "Trigger" rising edge on the y-axis graticule*. The edges should not be more than 166ns apart.

***Note**

Expect at least 1μs of phase jitter on the "Sync" falling edge. Adjust the edge so that the y-axis graticule appears in the "center" of the jitter.

O. Set the 3314A phase back to +180° and verify that "Phase +180" is within its specification. If necessary, adjust A2R113 until the specification is met (<166ns).

P. Set the 3314A phase to -180° and verify that "Phase -180" is within its specification (<166ns). Adjust A2R108 if necessary.

Q. Repeat steps O and P until both phase adjustments remain within specification.

R. Set the 3314A phase to 0°. Verify that both the "Sync" and "Trigger" waveforms are in phase.

5-15. SYMMETRY ADJUSTMENT

This adjustment minimizes the second harmonic of the differential triangle wave thus producing a symmetrical waveform. This assures that the functions derived from the triangle wave (sine, square), will also be symmetrical.

Equipment Required:

Spectrum Analyzer

Procedures:

A. Preset the 3314A.


B. Set the 3314A as follows:

Amplitude 10Vp-p
Function square

C. Press "Instr Preset" on the spectrum analyzer.

D. Set the spectrum analyzer as follows:

Stop Freq 10kHz
Counter On

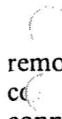Connect the 3314A to the spectrum analyzer by first removing phono cable A1J1 from the instrument. See  , move the "Sync" cable from A1J2 to A1J1 and connect the 3314A to the analyzer's 50Ω input via the 3314's "Sync" output. (See Figure 5-9).

F. Press "Manual" on the spectrum analyzer and enter 1kHz. This places the spectrum analyzer marker over the 3314A fundamental.

G. After the counter reading on the spectrum analyzer screen has stabilized, press the following key sequence:

- "MKR - OFS → STEP"
- "Counter" (Off)
- "Offset"
- "Enter Offset"
- "Manual" (Enter 0Hz)
- "Manual"
- "Up Arrow"
- Up Arrow"

The marker on the spectrum analyzer screen is now over the second harmonic of the 1kHz triangle wave signal.

H. Note the amplitude of the second harmonic (see screen upper right). This level should be ≤ -75 dB. If necessary, adjust A1R110 (Symmetry) on the 3314A until this level is brought into specification.

I. Press "Cont" on the spectrum analyzer. Observe that the 1kHz spectrum up to the 9th harmonic is displayed on the screen.

J. Check the level of the EVEN harmonics (4th-8th) to verify that they are ≤ -75 dB.

K. Place phono cable A1J8 back in the instrument and move the "Sync" cable back to A1J1.

NOTE

If this adjustment fails to yield satisfactory results, check for possible problems with either the Freq/Sym DAC or the A1U103 biasing circuit.

5-16. HOLD PHASE ZERO ADJUSTMENT

This procedure sets the zero point of the servo loop by adjusting the offset of the input to the Hold Phase Servo Amplifier.

Equipment Required:

Oscilloscope

Procedures:

A. Preset the 3314A.

B. Set the 3314A as follows:

Mode Gate
Frequency 10kHz
Amplitude 10Vp-p
Function triangle
Trig Intvl 1ms

C. Set the oscilloscope as follows:

Volts/Div 2V
Time/Div 0.2ms
Coupling 50Ω
Vert Display A
Int Trig A
Horiz Display Main

D. Connect the 3314A to the oscilloscope.

E. Using the Vertical Position knob on the oscilloscope, adjust the display until the triangle wave is centered around the x-axis graticule.

F. Observe the horizontal segment of the waveform between the triangle bursts. If necessary, adjust A1R269 (Hold Phase Zero) until the segment is centered on the x-axis graticule.

NOTE

Gate, N Cycle, 1/2 Cycle, and ARB modes are affected by this adjustment.

5-17. DC/AC BALANCE ADJUSTMENT

These adjustments minimize residual signals at 0V amplitudes and insure amplitude accuracy while "Amplitude Range Hold" is activated.

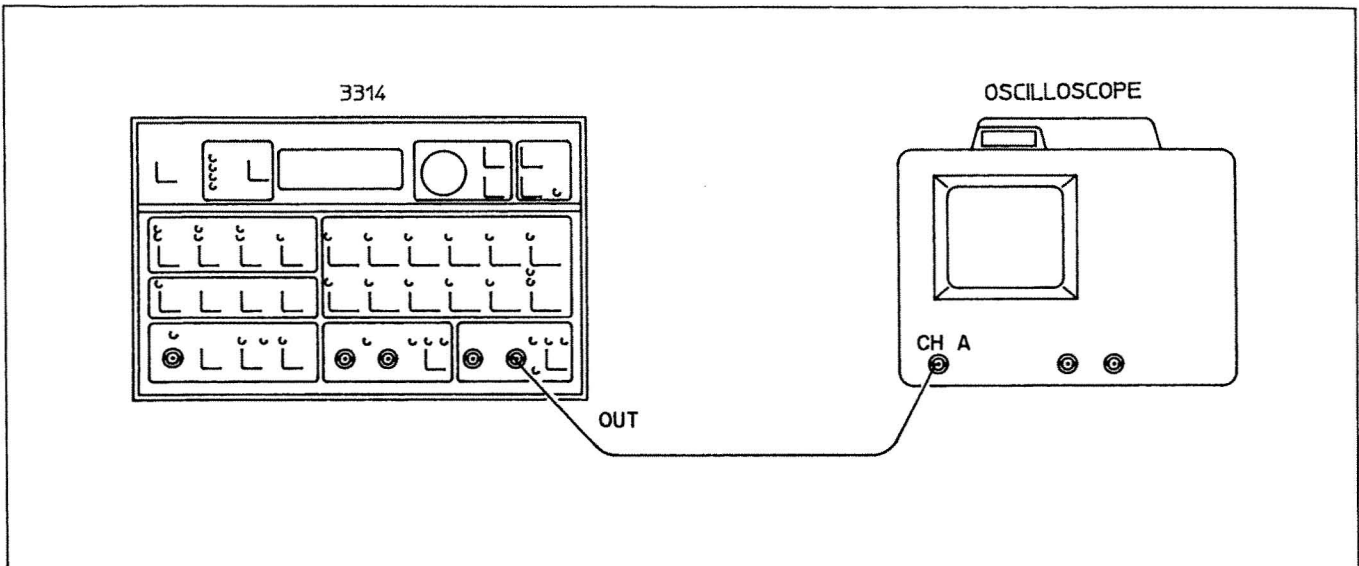


Figure 5-10. Hold Phase Zero Adjustment

Equipment Required:

Oscilloscope

Procedures:

- A. Set A3S1(4) and A3S1(5) to the "closed" position.
- B. Turn the 3314A OFF, then ON.
- C. Return A3S1(4) and A3S1(5) to the "open" position.
- D. Press "Range Up". (The 3314A is now in Test Mode 02.)

E. Set the oscilloscope as follows:

- Volts/Div 0.01V
- Time/Div 0.1ms
- Vert Display A
- Int Trig A
- Horiz Display Main
- Coupling 50Ω
- BW Limit 20MHz
- Main Triggering Ext

F. Set the Coupling Select lever on the oscilloscope to ground and center the trace on the x-axis graticule.

G. Set the coupling on the oscilloscope back to DC and connect the 3314A's "Sync" and "Function" out-

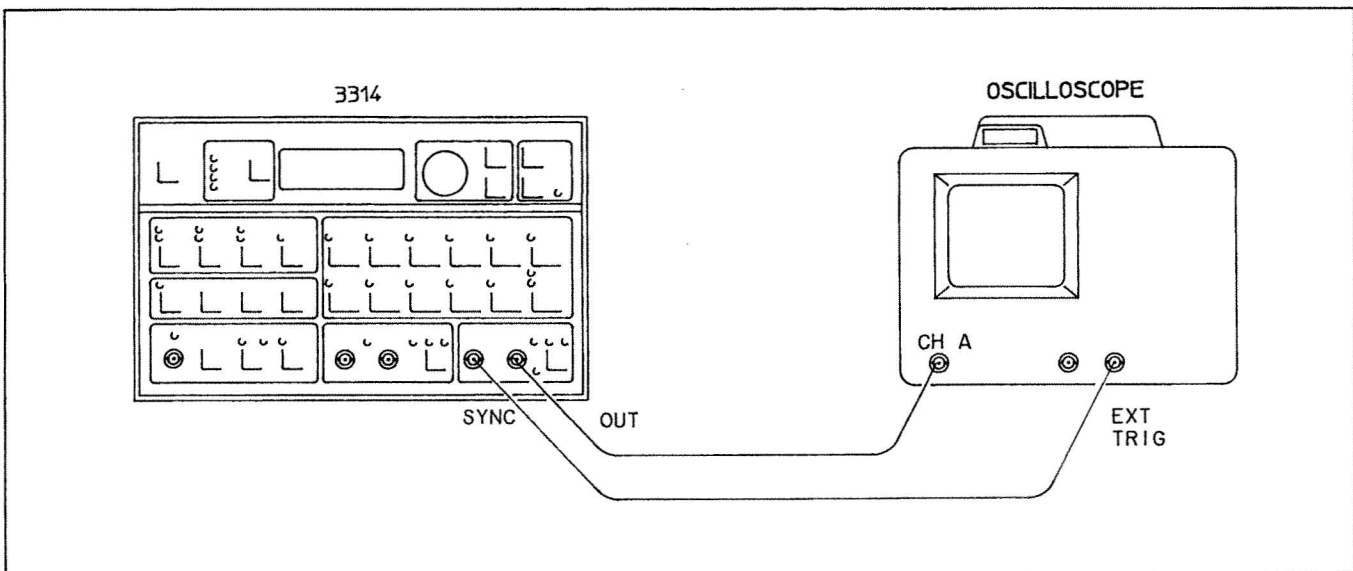


Figure 5-11. DC/AC Balance Adjustment

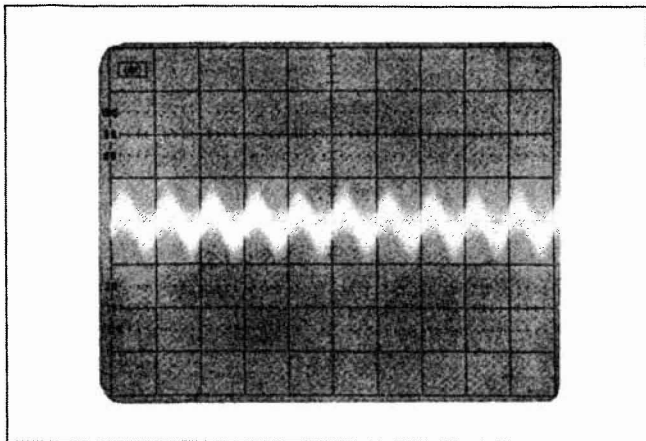


Figure 5-12A. DC/AC Balance Sine Adjustment

puts to the oscilloscope's "Ext Trig" and channel A inputs respectively.

H. Observe the "pulsating" beam on the oscilloscope. Adjust A1R559 (Sine AC Bal) to make the beam as narrow as possible.

I. While continuing to observe the beam on the oscilloscope, adjust A1R542 (DC Bal) until the beam (which will continue to pulsate) remains centered around the x-axis graticule. (See Figure 5-12A.)*

***NOTE**

The beam may shift 1 or 2 divisions with respect to the x-axis graticule which is acceptable.

J. Press "Range Up" on the 3314A to invoke Test Mode 03.

K. Adjust A1R511 (Triangle AC Bal) to make the beam as narrow as possible. (See Figure 5-12B.)

L. Press "Range Up" two times to exit the test modes and return the 3314A to normal operation.

NOTE

This adjustment may affect the symmetry of the instrument. It is therefore recommended that the symmetry (paragraph 5-15), be checked and adjusted (if necessary) before proceeding.

5-18. LOW FREQUENCY HARMONIC DISTORTION ADJUSTMENT

These adjustments minimize the harmonic distortion on the lower frequencies generated by the 3314A.

Equipment Required:

Spectrum Analyzer

Procedures:

A. Preset the 3314A.

B. Set the amplitude of the 3314A to 3.0Vp-p.

C. Press "Instr Preset" on the spectrum analyzer and set the Stop frequency at 10kHz.

D. Connect the 3314A to the spectrum analyzer.

E. Determine the exact frequency of the signal by pressing the following spectrum analyzer keys:

- "Manual" (enter 1kHz)
- "Counter" (on)

F. After the counter reading on the spectrum analyzer has stabilized, press the following key sequence (this accurately locates each harmonic):

- "MKR - OFS → STEP"
- "Counter" (Off)
- "Manual" (enter 0Hz)
- "Manual"
- "Up Arrow"
- "MKR → REFLVL"
- "Offset" (on)
- "Enter Offset"
- "Manual"
- "Up Arrow"

The spectrum analyzer marker is now over the second harmonic.

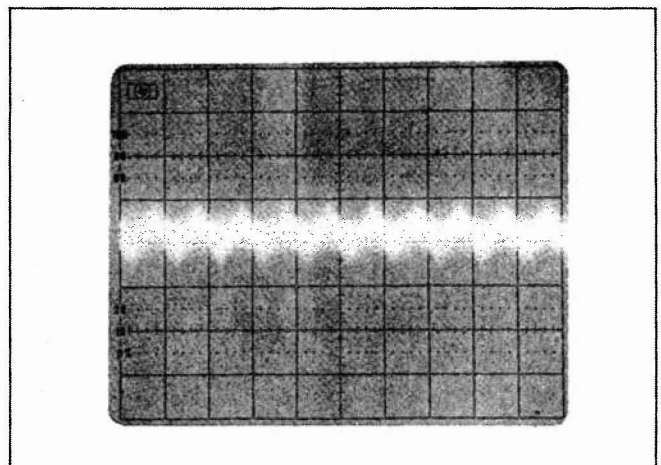


Figure 5-12B. DC/AC Balance Triangle Adjustment

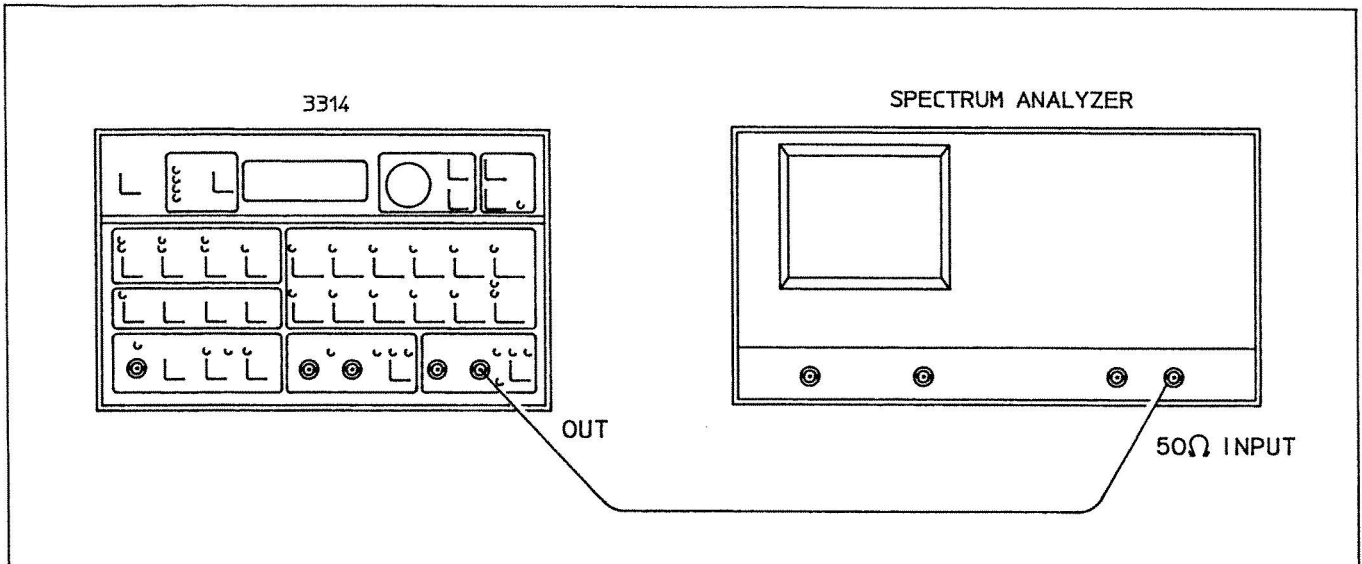


Figure 5-13. Low Frequency Harmonic Distortion Adjustment

Δ4 G. Set the amplitude of the 3314A to 10.00 Vpp.

H. Adjust A1R344 until the second harmonic is at its minimum level.

I. Set the amplitude of the 3314A to 1.00 Vpp. Adjust A1R563 until the second harmonic is at its minimum level.

J. Repeat steps H and I until the second harmonic remains at a minimum level across the amplitude range.

K. Press "Up Arrow" three times on the spectrum analyzer to place the marker over the 5th harmonic.

L. Adjust A1R550 until the 5th harmonic level is at a minimum.

M. Press "Down Arrow" two times to place the marker over the 3rd harmonic.

N. Adjust A1R551 until the 3rd harmonic is at a minimum level.

O. A1R550 and A1R551 interact. Therefore, repeated adjustments of the 3rd and 5th harmonic levels will have to be made to insure that they remain at a minimum. (Third harmonic \leq -60dB. Fifth harmonic \leq -60dB.)

P. Press "Instr Preset" on the spectrum analyzer and set the Stop frequency to 110kHz. Verify that harmonic levels out to the tenth harmonic are less than or equal to -60dB.

5-19. AMPLITUDE CALIBRATION PAD SELECTION

This procedure is a method for selecting three resistors which in turn minimize the amplitude difference between the sine, square, and triangle functions. This enables Amplitude Calibration to correct for accurate voltage levels.

NOTE

DC/AC Balance and Low Frequency Harmonic distortion must be completed before proceeding.

NOTE

Due to the length and involvement of this procedure, it is recommended that the "Sine Shaper Replacement Kit" (P/N 03314-82501) which contains a Sine Shaper IC and three factory selected resistors, be ordered from the nearest -hp- Sales and Service Office. This procedure should be followed if the Kit is unavailable or if the situation requires immediate action.

Equipment Required:

AC/DC Digital Voltmeter
50Ω Feedthrough Termination

Procedures:

A. Preset the 3314A and set the amplitude to 10Vp-p.

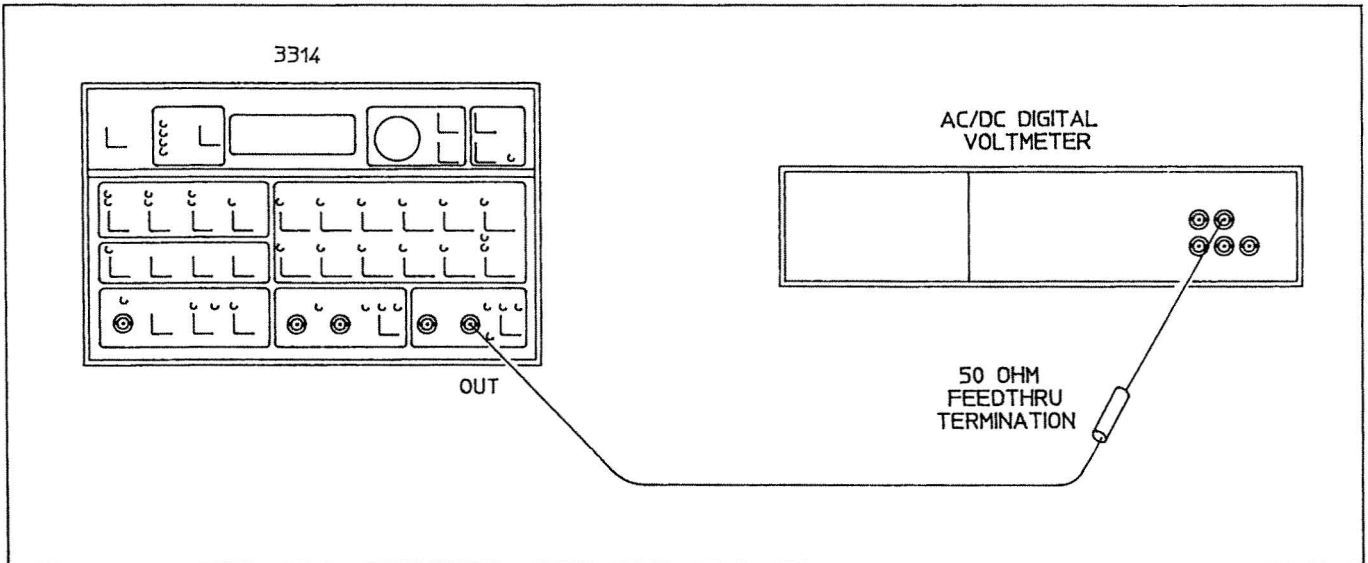


Figure 5-14. Amplitude Calibration Pad Selection.

B. Set the digital voltmeter as follows:

Function AC
 Range Auto
 Trigger Internal
 Math Off
 Sample Rate Maximum

C. Remove the phono cable from A8J1 and perform a calibration on the 3314A by pressing "Blue" "RCL". (E34 will appear in the display.)

D. Set the 3314A CAL OFF by pressing "Blue"/"STO" and replace the phono cable.

E. Measure the voltage across pins 24 and 27 of A1U502. If this voltage is > 0.404V, the following selection procedure is invalid. Increase the value of A1R522 until the voltage is ≤ 0.404V and repeat adjustment procedure beginning with step C. If the voltage across pins 24 and 27 was ≤ 0.404V, proceed to step F.

F. Connect the 3314A to the voltmeter via the 3314A's "Function" output. (See Figure 5-14.)

G. Record the reading on the voltmeter. This is the RMS value of the 3314A sine wave signal. Convert this value to Vp-p using the equation:

$$V_{p-p} = 2.828 * \text{RMS Reading}$$

H. Change the function on the 3314A to square wave.

I. Record the reading on the voltmeter. This is the RMS value of the 3314A square wave signal. Convert this value to Vp-p using the equation:

$$V_{p-p} = 2 * \text{RMS Reading}$$

J. Change the function on the 3314A to triangle.

K. Record the reading on the voltmeter. This is the RMS value of the triangle signal. Convert this value to Vp-p using the equation:

$$V_{p-p} = 3.464 * \text{RMS Reading}$$

L. Calculate the percent error between the sine wave and square wave Vp-p amplitudes determined in steps G and I using the equation:

$$\%Error = [(square V_{p-p} - sine V_{p-p}) / sine V_{p-p}] * 100\%$$

If %Error is inside the -12% to +12% range, the sine and square wave amplitude difference is acceptable, proceed to step Q.

If %Error is outside the -12% to +12% range, A1R522 may be the wrong value. However, gain errors in the amplifier stages, or a decrease in amplitude of the triangle signals at the inputs of A1U502 are possible reasons for %Error failing to meet the specification. If after investigation the above parameters prove acceptable, proceed to step M.

M. From %Error calculated in step L and the value of R522 currently in the board, determine the "padded" value of R522 using Table 5-3*.

***NOTE**

If |%Error| is >30% (see Table 5-3), R522 can be determined using the equation:

$$R522 = 2 / (\%Error / 122 * (1/259.6 + 2/R522 \text{ in Bd}) + 2/R522 \text{ in Board})$$

Table 5-3. R522 Selection Chart

% Error = (Square Vp-p - Sine Vp-p)/Sine Vp-p X100									
HP P/N	R522 In Board	-30% To -24%	-24% To -20%	-20% To -16%	-16% To -12%	12% To 16%	16% To 20%	20% To 24%	24% To 30%
0699-0051	320	505	466	421.7	383				
0699-0274	350	540.9	505	466	421.7	320			
0698-7649	383	588.1	540.9	505	466	320	320		
0698-7388	421.7	660	588.1	588.1	540.9	350	320	320	
0699-0163	466	738.5	738.5	660	588.1	383	383	350	320
0698-6965	505	845	845	738.5	660	421.7	383	383	350
0698-6804	540.9	979.3	845	738.5	738.5	421.7	421.7	383	350
0698-7387	588.1	1153	979.3	845	738.5	466	466	421.7	383
0698-6797	660	1364	1153	979.3	845	540.9	505	466	421.7
0699-0164	738.5	1.65K	1364	1153	979.3	588.1	540.9	505	466
0698-6329	845	2.1K	1.65K	1364	1153	660	588.1	588.1	540.9
0698-6811	979.3	2.8K	2.1K	1.65K	1364	738.5	660	660	588.1
0698-6862	1153	4.12K	2.8K	2.1K	1.65K	845	738.5	738.5	660
0699-0190	1364	6.65K	4.12K	2.8K	2.1K	979.3	845	845	738.5
0698-4427	1.65K	14K	6.65K	4.12K	2.8K	1153	979.3	979.3	845
0698-4432	2.1K		14K	6.65K	4.12K	1364	1153	1153	979.3
0698-4436	2.8K		14K		14K	1.65K	1364	1364	1153
0698-3493	4.12K				14K	2.1K	1.65K	1.65K	1364
0698-3484	6.65K					2.8K	2.1K	1.65K	1.65K
0698-4479	14K					2.8K	2.8K	2.1K	1.65K

N. Insert the “padded” value of R522 and repeat the Low Frequency Harmonic distortion adjustment followed by the DC/AC Balance adjustment.

O. Repeat steps C through L. If %Error still does not meet the specification, then the adjustment fails. If %Error does meet the specification, proceed to step P.

P. Measure the voltage across pins 24 and 27 of A1U502. If the new %Error meets the specification but the voltage is > 0.361V, the adjustment fails. If the voltage is < 0.361V, proceed to step Q.

Q. Calculate and record the average of the sine and square wave Vp-p amplitudes determined in steps G and I.

R. Using the average calculated in step Q, calculate the “padded” value of A1R506 (Sine/Square Amplitude Adjust) given the equation:

$$R506(\text{New}) = (\text{Avg}/10V_{p-p}) * R506 (\text{Currently in Board})$$

Choose the closest 1% resistor.

S. Calculate the “padded” value of A1R528 (Triangle Amplitude Adjust) using the equation:

$$R528\text{New} = [(R506\text{new}/R506\text{old})(10V_{p-p})/\text{triangle } V_{p-p}] * R528 \text{ in Board}$$

where: “R506new” is the value chosen in step R, and “triangle Vp-p” is the value determined in step K.

Choose the closest 1% resistor.

5-20. HIGH FREQUENCY HARMONIC DISTORTION ADJUSTMENT

This adjustment insures accurate high frequencies and minimizes high frequency harmonic distortion.

Equipment Required:

- Oscilloscope
- High Frequency Spectrum Analyzer
- 10:1 Probe

Procedures:

A. Set A3S1(4) and A3S1(5) on the 3314A to the “closed” position.

B. Turn the 3314A OFF, then ON.

C. Set A3S1(4) and A3S1(5) back to the “open” position.

D. Press “Range Up” three times to invoke test mode 04.

E. Set the oscilloscope as follows:

	Chan. A	Chan. B
Volts/Div	0.02V	1V
Coupling	DC	DC
Vert Display	A	A
Int Trigger	B	B
Horiz Display	X-Y	X-Y

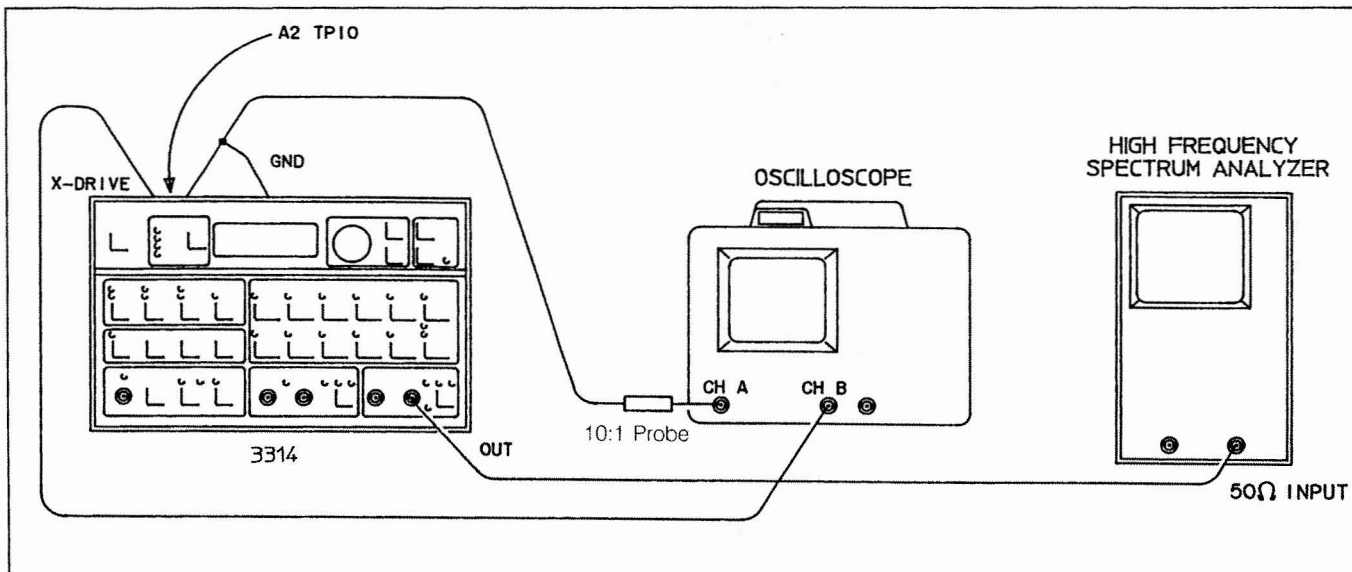


Figure 5-15. High Frequency Harmonic Distortion Adjustment

F. Set the spectrum analyzer as follows:

- Input Attenuation 70dB
- Freq Span/Div 10MHz
- Resolution BW Coupled at optimum
- Freq Start 0Hz
- Sweep Time/Div Auto
- Trigger Line
- dB/Div 10dB
- Reference Level 60dBm
- Ref Level Fine 0dBm

monic level < -35dB. (All other harmonics should remain below -30dB.)

L. Press "Range Up" on the 3314A to exit test mode 04 and return the 3314A to normal operation.

G. Connect the 3314A to the oscilloscope and spectrum analyzer. (See Figure 5-15.)

5-21. ATTENUATOR HIGH FREQUENCY COMPENSATION ADJUSTMENT

This adjustment compensates for stray capacitances on the Output Amplifier board which result in a limited amplifier bandwidth.

NOTE


Equipment Required:

Center oscilloscope trace with both inputs grounded.

Oscilloscope

H. Adjust "Input Atten" on the spectrum analyzer until the fundamental is within 10dB of full scale. Adjust "Ref Level Fine" until the fundamental is referenced to the top graticule on the analyzer screen.

I. Using a non-ferrous screwdriver, adjust A1C218 until the X-Y plot is centered (average of positive and negative deviations is 0V) around the oscilloscope's x-axis graticule (see Figure 5-16).

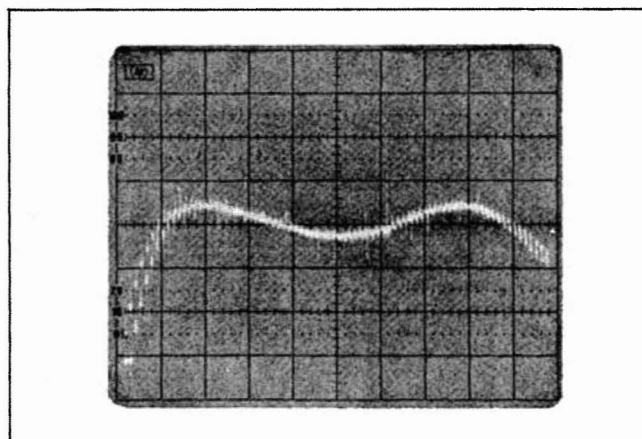

J. Adjust A1C307 and A1C308 until the X-Y plot is as flat as possible. (Note: Adjusting A1C307 flattens the response while A1C308 minimizes harmonic distortion levels. (See Figure 5-16).)

Figure 5-16. High Frequency Harmonic Distortion Adjustment

K. Repeat steps I and J until the trace on the oscilloscope remains within 0.6Vp-p with a second har-

Procedures:

- A. Preset the 3314A.
- B. Set the 3314A as follows:

Frequency 1MHz
 Amplitude 10mVp-p
 Function square

- C. Set the oscilloscope as follows:

Volts/Div 0.01V
 Coupling DC
 Vert Display A
 Int Trigger A
 Time/Div 0.1 μ s
 Horiz Display Main

- D. Connect the 3314A to the oscilloscope.

E. While monitoring the square wave on the oscilloscope, adjust A8C29 until the overshoot of the waveform is at a minimum. (Avoid rounding the waveform.)

5-22. X3 (OPTION 001) FUNCTIONAL CHECK

This procedure provides a functional check of Option 001 by verifying the amplitude level at the x3 output and testing the 3314A Overload Protection feature.

NOTE

This procedure applies only to those instruments which have had Option 001 installed.

Equipment Required:

Oscilloscope
 50 Ω Feedthrough Termination
 BNC/TEE Adaptor

Procedures:

- A. Preset the 3314A.
- B. Set the amplitude of the 3314A to 10Vp-p.
- C. Set the oscilloscope as follows:

Volts/Div 5V
 Coupling DC
 Vert Display A
 Int Trigger A
 Time/Div 0.2ms
 Horiz Display Main

- D. Set up and connect the instruments as shown in Figure 5-18A.

E. Observe the x3 output on the oscilloscope. Verify that its amplitude is 30Vp-p.

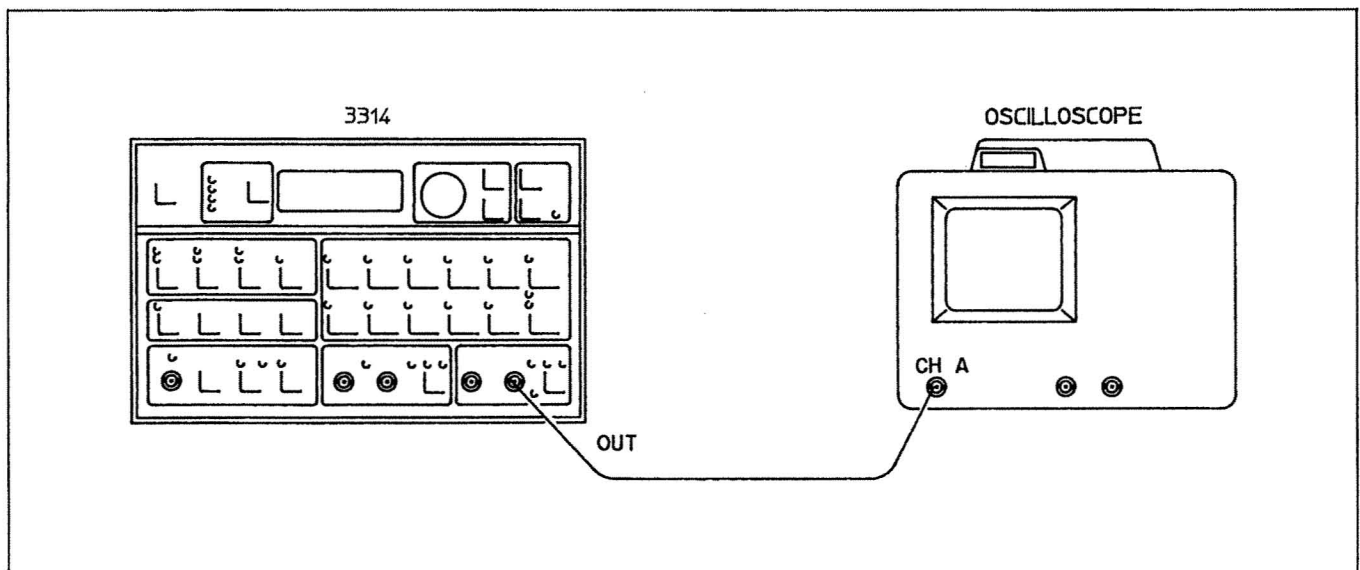


Figure 5-17. Attenuator High Frequency Compensation Adjustment

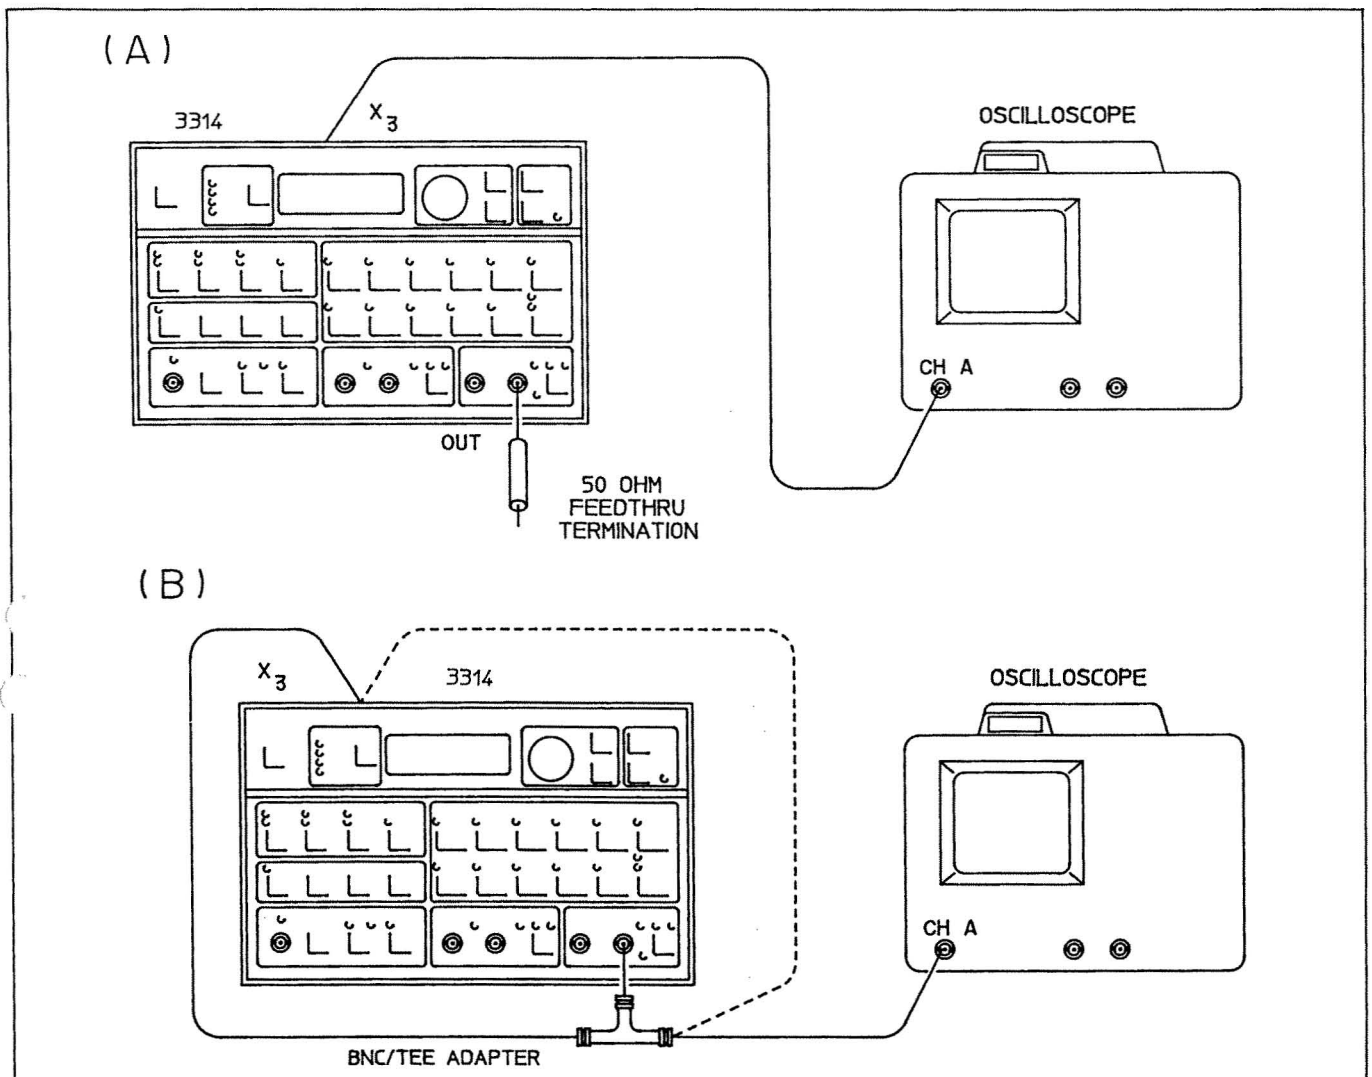


Figure 5-18. X3 (Option 001) Functional Check

F. Replace the 50Ω load on the front of the 3314A with the BNC/TEE connector.

G. Move the cable from the x3 output to one end of the TEE.

H. Observe the oscilloscope and verify that a signal is present at the output of the 3314A.

I. Using another cable, connect the x3 output to the other end of the TEE. (See part B of Figure 5-18.)

J. Satisfactory operation of the Overload Protection feature is indicated by a flashing "E51" in the 3314A display. The flashing "E51" signifies that all attenuator relays on the A8 board have opened in order to protect the 3314A from the excessive voltage present at the Function output. The open relays can also be detected by observing the oscilloscope and noting the shift of the signal to either a +20V or -20VDC level.

5-23. X3 (OPTION 001) SQUARE WAVE RISE/FALL TIME AND OVERSHOOT ADJUSTMENT

Adjusting A5C12 affects both the squarewave rise/fall time and the squarewave overshoot. To insure specified performance over the entire range of specified loads, A5C12 should be adjusted when the X3 Output is driving 500Ω and 250pF.

Required Equipment:

Oscilloscope

50Ω Feedthrough Termination

A 500Ω 250pF feedthrough termination, consisting of:

1 499Ω resistor, -hp- part number 0698-4123

1 240pF* capacitor, -hp- part number 0140-0199

* The oscilloscope adds ≈ 10pF of capacitance.

Procedure:

A. Preset the 3314A.

B. Set the 3314A controls as follows:

- Frequency100kHz
- Amplitude10Vp-p
- FunctionSquarewave


C. Connect the 50Ω Feedthrough Termination to the 3314A's Main Output. Connect the 500Ω, 250pF Feedthrough Termination to the 3314A's X3 Output.

D. Connect the oscilloscope's 1MΩ input to the 3314A's X3 Output.

E. Set the oscilloscope to display 2 complete cycles with the peaks of the square wave at the 0% and 100% graticule lines.

F. Remove the 3314A's bottom cover to gain access to A5C12.

G. Adjust A5C12, using a non-ferrous alignment tool, for minimum rise/fall time and overshoot. Overshoot should be <5% of the peak to peak amplitude while the rise/fall time should be less than 200ns.

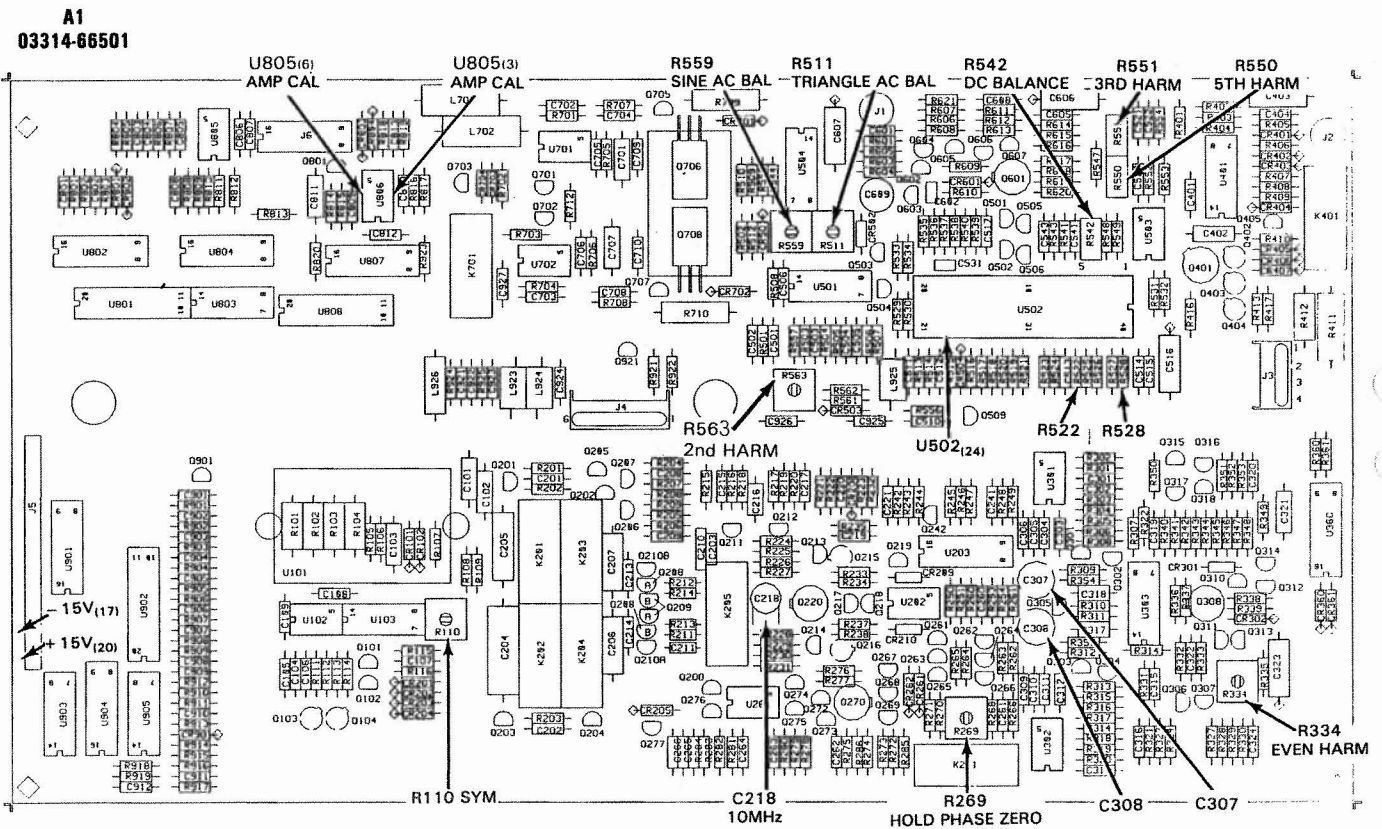

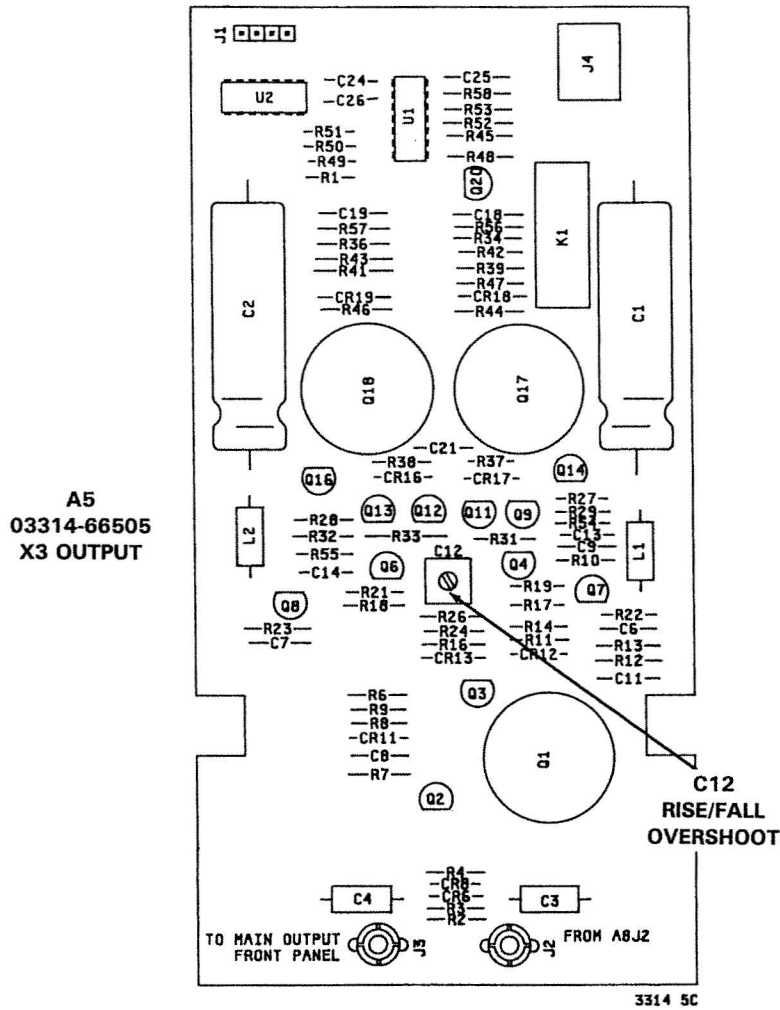


Figure 5-22. A5 Adjustment Locations

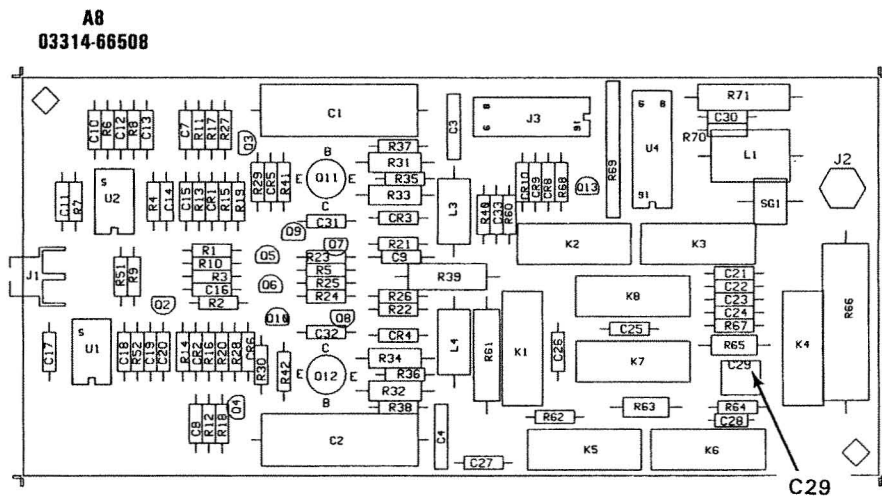


Figure 5-23. A8 Adjustment Locations

Troubleshooting Reference Guide

This guide presents the most common adjustments and troubleshooting hints considered to affect each performance test. Use it as an aid to fix failing tests. It is possible for more complicated mechanisms to cause a test to fail. Such cases are beyond the scope of this guide and require more troubleshooting skill.

Each test listed is followed by associated adjustments and troubleshooting hints. **Performance tests and adjustments are listed numerically by paragraph numbers from the sections in which they are located.** Adjustment notes refer to Section V of this manual. Troubleshooting notes reference diagrams and schematics in Section VIII. References to circuits include schematic labels.

4-2. FREQUENCY ACCURACY

Adjustments:

5-9. Frequency Accuracy Calibration Adjustment
(Turn on 3314A VCO before adjusting A1C218.)

Troubleshooting:

Refer to:
Frequency Calibration Troubleshooting Flowchart
(Figure 8-11A)

Verify circuit operations:

Freq/Sym DAC circuit	A1A
Freq Cal circuit	A2D
Hysteresis Comparator/Sync	A1E
DATA bus	All
	schematics
Phase Lock Loop	A2A, A2C
Integrator	A1B
FCV control	A2D

4-3. TIME AXIS AND VARIABLE SYMMETRY

Adjustments:

5-15. Symmetry Adjustment
5-18. Low Frequency Harmonic Distortion Adjustment
(2nd harmonic (A1R344) is most critical)

Troubleshooting:

Verify operation of:
Freq/Sym DAC (A1U101) and related circuitry A1A
Mode Board control A2D

4-4. INTERNAL TRIGGER ACCURACY

Adjustments:

No adjustment available

Troubleshooting:

Verify operation of:
Frequency Sense circuitry A2C, A3D
Timer circuitry A3D

The problem most likely will appear as a frequency/phase lock error.

4-5. TRIANGLE LINEARITY

Adjustments:

No adjustment available

Troubleshooting:

This is a time consuming test to repeat. After a repair attempt, do the Sine Wave Harmonics Test (paragraph 4-9) since sine harmonic distortion indicates bad triangle linearity. If distortion is good, then verify triangle linearity.

REFERENCE GUIDE

Model 3314A

Questions to consider:

- Are both slopes nonlinear, or just one?
- Is nonlinearity concave upward or downward?
- Is nonlinearity second order?

4-6. START/STOP PHASE ACCURACY

Adjustments:

- 5-8. Multiplex DAC Offset Adjustment
- 5-11. Log Sweep Start Frequency Adjustment
- 5-12. Linear Sweep Start Frequency Adjustment
- 5-16. Hold Phase Zero Adjustment

Troubleshooting:

Refer to:

- (Multiplexed DAC Troubleshooting Diagram, Fig. 8-8
- (Basic Operation Troubleshooting Diagram, Fig. 8-9
- General Operation Troubleshooting Diagram (A1 and A8), Fig. 8-10A

Verify operation of:

- | | |
|-------------------------|-----|
| Trigger Slope circuitry | A2C |
| Hysteresis Comparator | A1E |
| Phase Servo Amplifier | A1D |

4-7. RESIDUAL DC AND DC OFFSET ACCURACY

Adjustments:

- 5-8. Multiplex DAC Offset Adjustment
- 5-13. DC Offset Adjustment
- 5-17. DC/AC Balance Adjustment

Troubleshooting:

For residual DC, verify operation of:

- | | |
|--|-----|
| Output Interface/Calibration circuitry | A1J |
| Sine Shaper IC (A1U502) | A1G |

For variable DC offset, verify operation of:

- | | |
|--|-----|
| Multiplex DAC (A2U213) circuitry | A2B |
| (refer to Multiplexed DAC Troubleshooting Diagram, Fig. 8-8) | |
| DC Offset Amplifier | A1I |
| Output Amplifier | A8A |

4-8. SQUARE WAVE RISE TIME AND ABRERRATIONS

Adjustments:

No adjustment available

Troubleshooting:

Verify operation of:

- | | |
|----------------------------|-----|
| Preamplifier circuitry | A1H |
| Output Amplifier circuitry | A8A |

4-9. SINE WAVE HARMONICS

Adjustments:

- 5-15. Symmetry Adjustment
- 5-18. Low Frequency Harmonic Distortion Adjustment
- 5-20. High Frequency Harmonic Distortion Adjustment

Troubleshooting:

Isolate to and verify operation of:

- | | |
|---|-----|
| A1 BOARD: | |
| Transconductance Amp (all ranges) | A1C |
| Hysteresis Comparator (esp. 0.1% resistors) | A1E |
| Sine Shaper circuitry | A1G |

A8 BOARD:

- | | |
|--------------------------|-----|
| Distortion Correction | A8A |
| Output Amplifier section | A8A |
| Frequency Compensation | A8A |

4-10. AM HARMONICS

Adjustments:

- 5-8. Multiplex DAC Offset Adjustment

Troubleshooting:

Refer to:

- Multiplexed DAC troubleshooting diagram, Fig. 8-8

Verify operation of:

- | | |
|----------------------------|-----|
| Multiplex DAC | A2B |
| A2TP18 (Modulating Signal) | A2B |

4-11. VCO LINEARITY

Adjustments:

No adjustment available

Troubleshooting:

Refer to:

Basic Operation Troubleshooting Diagram, Fig. 8-9

Verify operation of:

VCO circuitry A2D

4-12. PHASE LOCKED LOOP PHASE ACCURACY

Adjustments:

5-8. Multiplex DAC Offset Adjustment

5-14. Phase Lock Phase Adjustment

Troubleshooting:

Refer to:

General Operation Block Diagram (A2 and A3), Fig. 8-10B

If analog problem (marginal performance):

Check operation of Analog PLL circuitry A2A

If digital problem (discontinuous or no VCO control):

Check operation of Digital PLL circuitry A2C

If analog/digital problem:

Check Freq/Sym DAC operation via FCV control A2D, A1A

4-13. AMPLITUDE ACCURACY

Adjustments:

Problem with all functions:

- 5-3. Power Supply Adjustment
- 5-7. Amplitude Calibration Reference Voltage Check
- 5-8. Multiplex DAC Offset Adjustment

If only sine wave, add:

- 5-17. DC/AC Balance Adjustment
- 5-18. Low Frequency Harmonic Distortion Adjustment

Troubleshooting:

Isolate problem to A1 Board or A8 Board. Determine which functions give the problem. Check for DC bias in signal.

Refer to:

Amplitude Calibration Troubleshooting Flowchart, Fig. 8-11B

Verify operation of:

Multiplex DAC/ACI circuitry A2B
(refer to Multiplexed DAC Troubleshooting Diagram, Fig. 8-8)

4-14. SINE WAVE POWER FLATNESS

Adjustments:

No adjustment available

Troubleshooting:

Isolate to A1 or A8 Board.

If A1:

VERIFY OPERATION OF:

Preamplifier circuitry A1H
Sine Shaper circuitry A1G

If A8:

PERFORM PERFORMANCE TEST:

4-16. Step Attenuator Accuracy
(Adjust A8C29 if necessary)

4-15. MANUAL SWEEP ACCURACY

Adjustments:

- 5-8. Multiplex DAC Offset Adjustment
- 5-11. Log Sweep Start Frequency Adjustment
- 5-12. Linear Sweep Start Freq Adjustment

REFERENCE GUIDE

Model 3314A

Troubleshooting:

Refer to:

Multiplexed DAC Troubleshooting Diagram,
Fig. 8-8
Basic Operation Troubleshooting Diagram, Fig.
8-9

Verify operation of:

Multiplex DAC/ACI circuitry	A2B
Sine Shaper circuitry	A1G

Verify operation of:

VCO linearity circuitry	A2D
-------------------------	-----

In manual sweep, the operator controls FCV.

4-16. STEP ATTENUATOR ACCURACY

Adjustments:

5-21. Attenuator High Frequency
Compensation Adjustment

Troubleshooting:

Verify operation of:

A8 relays K1-K8 A8A

Relay Reference:

AMPLITUDE RANGE	RELAYS CLOSED
10.0V	K2,K3
1.0V	K1, K4, K5, K6
0.1V	K1, K4, K6, K7
0.01V	K1, K4, K7, K8

Check values of 0.1% attenuator resistors.

4-17. VERNIER ATTENUATOR FLATNESS

Adjustments:

5-8. Multiplex DAC Offset Adjustment
5-21. Attenuator High Frequency
Compensation Adjustment

Troubleshooting:

Refer to:

Multiplexed DAC Troubleshooting Diagram,
Fig. 8-8

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION

This section contains information for ordering parts. Table 6-1 lists abbreviations used in Table 6-3, Replaceable Parts and throughout this manual. Table 6-2 lists the manufacturer's name and address by manufacturer's code numbers.

6-2. REPLACEABLE PARTS LIST

Table 6-3. Replaceable Parts List is organized as follows:

1. PC Board Assemblies
A1, A2, A3, A5, A8,
A10 (includes subassemblies A11 & A12)
2. Chassis Mounted Components
3. Chassis Components
4. Hardware

Table 6-3 headings include:

1. REFERENCE DESIGNATOR

Assembly Number	Component Type	Component Number
A2R301		

2. HP PART NUMBER

3. CD The Check Digit is used by -hp- to verify the order has been transmitted correctly.

4. QTY The total quantity in the instrument.

5. DESCRIPTION The -hp- description of the part.

6. MFR CODE The manufacturer's code. see Table 6-2.

7. MFR PART NUMBER The manufacturer's part number.

6-3. ORDERING INFORMATION

To order a part listed in Table 6-3, quote the -hp- part number, check digit, quantity required and address the order to the nearest -hp- office.

To order a part that is not listed in Table 6-3, describe the part, its function, the instrument model and serial number, the quantity required and address the order to the nearest -hp- office.

6-4. DIRECT MAIL SYSTEM

Within the USA, -hp- can supply parts through a direct mail order system. Advantages of using this system are:

1. Direct ordering and shipment from the -hp- Parts Center in Mountain View, California.

2. No maximum or minimum on any mail order. There is a minimum order amount for parts ordered through a local -hp- office when the orders require billing and invoicing.

3. Transportation charges are prepaid. A small handling charge is added to each order.

4. No invoicing. A check or money order must accompany each order.

Mail order forms and specific ordering information is available through you local -hp- office. Addresses and phone numbers are located at the back of this manual.

6-5. SPECIAL HANDLING

The 3314A contains many static sensitive components. Use the appropriate precautions when removing, handling and installing all parts to avoid unnecessary waste.

6-6. PARTS KITS

The Sine Shaper/Amplitude Control IC, A1U502, has three bias resistors that must be factory selected. Whenever replacing A1U502, order 03314-82501.

Table 6-1 Abbreviations Used

ABBREVIATIONS			
Ag	silver	Hz	hertz (cycle(s) per second)
Al	aluminum	ID	inside diameter
A	ampere(s)	imp	impregnated
Au	gold	incd	incandescent
C	capacitor	ins	insulation(ed)
cer	ceramic	kΩ	kiloohm(s) = 10 ⁺³ ohms
coef	coefficient	kHz	kiloherz = 10 ⁺³ hertz
com	common	L	inductor
comp	composition	ln	linear taper
conn	connection	log	logarithmic taper
dep	deposited	mA	milliampere(s) = 10 ⁻³ amperes
DPDT	double-pole double-throw	MHZ	megahertz = 10 ⁺⁶ hertz
DPST	double-pole single-throw	MΩ	megohm(s) = 10 ⁺⁶ ohms
elect	electrolytic	met flm	metal film
encap	encapsulated	mfr	manufacturer
F	farad(s)	ms	millisecond
FET	field effect transistor	mtg	mounting
fxd	fixed	nV	millivolt(s) = 10 ⁻³ volts
GaAs	gallium arsenide	μF	microfarad(s)
GHz	gigahertz = 10 ⁺⁹ hertz	μs	microsecond(s)
gd	guard(ed)	μV	microvolt(s) = 10 ⁻⁶ volts
Ge	germanium	my	Mylar ®
gnd	ground(ed)	nA	nanoampere(s) = 10 ⁻⁹ amperes
H	henry(ies)	NC	normally closed
Hg	mercury	Ne	neon
		NO	normally open
		NPO	negative positive zero (zero temperature coefficient)
		ns	nanosecond(s) = 10 ⁻⁹ seconds
		nsr	not separately replaceable
		Ω	ohm(s)
		obd	order by description
		OD	outside diameter
		p	peak
		pA	picoampere(s)
		pc	printed circuit
		pF	picofarad(s) 10 ⁻¹² farads
		piv	peak inverse voltage
		pio	part of
		pos	position(s)
		poly	polystyrene
		pot	potentiometer
		pp	peak-to-peak
		ppm	parts per million
		prec	precision (temperature coefficient, long term stability and/or tolerance)
		R	resistor
		Rh	rhodium
		rms	root-mean-square
		rot	rotary
		Se	selenium
		sect	section(s)
		Si	silicon
		sl	slide
		SPDT	single-pole double-throw
		SPST	single-pole single-throw
		Ta	tantalum
		TC	temperature coefficient
		TiO ₂	titanium dioxide
		tog	toggle
		tol	tolerance
		trim	trimmer
		TSTR	transistor
		V	volt(s)
		vacw	alternating current working voltage
		var	variable
		vdcw	direct current working voltage
		W	watt(s)
		w/	with
		wiv	working inverse voltage
		w/o	without
		ww	wirewound
		*	optimum value selected at factory,
		**	average value shown (part may be omitted),
			no standard type number assigned
			selected or special type
			® Dupont de Nemours
DESIGNATORS			
A	assembly	FL	filter
B	motor	HR	heater
BT	battery	IC	integrated circuit
C	capacitor	J	jack
CR	diode or thyristor	K	relay
DL	delay line	L	inductor
DS	lamp	M	meter
E	misc electronic part	MP	mechanical part
F	fuse	P	plug
		Q	transistor
		OCR	transistor-diode
		R(pl)	resistor(pack)
		RT	thermistor
		S	switch
		T	transformer
		TB	terminal board
		TC	thermocouple
		TP	test point
		TS	terminal strip
		U	microcircuit
		V	vacuum tube, neon bulb, photocell, etc.
		W	wire
		X	socket
		XDS	lampholder
		XF	fuseholder
		Y	crystal
		Z	network

Table 6-2: Code List of Manufacturers

Mfr. No.	Manufacturer's Name	Address
H9027	Schurter A G H	Luzern, Switzerland
S0545	Nippon Electric Co.	Tokyo, Japan
S0562	Toshiba Corporation	Tokyo, Japan
00000	Any Satisfactory Supplier	
01121	Allen-Bradley Co.	Milwaukee, WI 53204
01295	Texas Instr. Inc. Semicond Cmpnt Div.	Dallas, TX 75222
03888	K D I Pyrofilm Corp.	Whippany, NJ 07981
04713	Motorola Semiconductor Products	Phoenix, AZ 85008
07263	Fairchild Semiconductor Div.	Mountain View, CA 94042
09023	Cornell-Dubilier Elek Div Fed Pac	Sanford, NC 27330
11502	TRW Inc. Boone Div.	Boone, NC 28607
13606	Sprague Elect Co Semiconductor Div.	Concord, NH 03301
17856	Siliconix Inc.	Santa Clara, CA 95054
18324	Signetics Corp.	Sunnyvale, CA 94086
19701	Mepco/Electra Corp.	Mineral Wells, TX 76067
24546	Corning Glass Works (Bradford)	Bradford, PA 16701
27014	National Semiconductor Corp.	Santa Clara, CA 95051
28480	Hewlett-Packard Co. Corporate Hq.	Palo Alto, CA 94304
3L585	RCA Corp Solid State Div.	Somerville, NJ 08876
3L680	Beman Mfg Inc.	Etters, PA 17319
32997	Bourns Inc. Trimpot Prod Div.	Riverside, CA 92507
50522	General Instr Corp Opto Div.	Palo Alto, CA 94304
52763	Stettner-Trush Inc.	Cazenovia, NY 13035
54670	Arizona Coil Inc.	Nogales, AZ 85621
56289	Sprague Electric Co.	North Adams, MA 01247
75042	TRW Inc. Philadelphia Div.	Philadelphia, PA 19108
80031	Mepco/Electra Corp.	Morristown, NJ 07960
91637	Dale Electronics Inc.	Columbus, NE 68601

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
	3314A	1	1	FUNCTION GEN	28480	3314A
A1	03314-66501	5	1	PC ASSY-ANALOG	28480	03314-66501
A1C101	0180-0376	5	2	CAPACITOR-FXD 47UF+-10% 35VDC TA	13606	150D474X9035A2-DYS
A1C102	0180-0376	5	2	CAPACITOR-FXD 47UF+-10% 35VDC TA	13606	150D474X9035A2-DYS
A1C103	0180-0197	8	3	CAPACITOR-FXD 2.2UF+-10% 20VDC TA	13606	150D225X9020A2-DYS
A1C104	0160-4813	1	2	CAPACITOR-FXD 180PF +-5% 100VDC CER	04222	SA101A181JAA
A1C105	0160-4571	8	36	CAPACITOR-FXD .1UF +-80-20% 50VDC CER	04222	SA105E104ZAA
A1C106	0160-4813	1		CAPACITOR-FXD 180PF +-5% 100VDC CER	04222	SA101A181JAA
A1C107	0160-4571	8		CAPACITOR-FXD .1UF +-80-20% 50VDC CER	04222	SA105E104ZAA
A1C108	0160-4789	0	2	CAPACITOR-FXD 15PF +-5% 100VDC CER 0+-30	04222	SA106A150JAA
A1C109	0160-4789	0	2	CAPACITOR-FXD 15PF +-5% 100VDC CER 0+-30	04222	SA106A150JAA
A1C201	0160-4832	4	43	CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C202	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C203	0160-4381	8		CAPACITOR-FXD 1.5PF +-25PF 200VDC CER	54583	FD11C0G2D1R5C
A1C204	0160-5529	8	1	CAPACITOR-FXD 2.5UF +-2.5% 50VDC	A02430	HEW-249
A1C205	0160-5530	1	1	CAPACITOR-FXD .25UF +-2.5% 100VDC	A02430	HEW-363
A1C206	0160-5531	2	1	CAPACITOR-FXD .025UF +-2.5% 100VDC	A02430	HEW-363
A1C207	0160-5532	3	1	CAPACITOR-FXD 2500PF +-2.5% 100VDC POLYP	A02430	HEW-640
A1C208	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C209	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C210	0160-3046	0	1	CAPACITOR-FXD 250PF +-1% 100VDC MICA	09023	
A1C211	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
213	0160-4791	4	3	CAPACITOR-FXD 10PF +-5% 100VDC CER 0+-30	04222	SA106A100JAA
214	0160-4791	4	3	CAPACITOR-FXD 10PF +-5% 100VDC CER 0+-30	04222	SA106A100JAA
A1C215	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C216	0160-5612	0	1	CAPACITOR-FXD 4700PF +-5% 100VDC CER	04222	SA101C472JAA
217	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C218	0121-0523	0	1	CAPACITOR-V TRMR-PSTN 1-.8.5PF 750V	18736	V1935
A1C219	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C220	0160-4532	1	7	CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A1C221	0160-4571	8		CAPACITOR-FXD .1UF +-80-20% 50VDC CER	04222	SA105E104ZAA
A1C222	0160-4381	8		CAPACITOR-FXD 1.5PF +-25PF 200VDC CER	54583	FD11C0G2D1R5C
A1C241	0160-4791	4		CAPACITOR-FXD 10PF +-5% 100VDC CER 0+-30	04222	SA106A100JAA
A1C260	0160-4532	1		CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A1C261	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C262	0160-4571	8		CAPACITOR-FXD .1UF +-80-20% 50VDC CER	04222	SA105E104ZAA
A1C263	0160-4571	8		CAPACITOR-FXD .1UF +-80-20% 50VDC CER	04222	SA105E104ZAA
A1C264	0160-4571	8		CAPACITOR-FXD .1UF +-80-20% 50VDC CER	04222	SA105E104ZAA
A1C265	0160-4571	8		CAPACITOR-FXD .1UF +-80-20% 50VDC CER	04222	SA105E104ZAA
A1C266	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C301	0160-4571	8		CAPACITOR-FXD .1UF +-80-20% 50VDC CER	04222	SA105E104ZAA
A1C302	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C303	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C304	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C305	0160-4800	6	2	CAPACITOR-FXD 120PF +-5% 100VDC CER	04222	SA106A121JAA
A1C306	0160-5413	9	2	CAPACITOR-FXD 160PF +-5% 100VDC CER	13606	592C0G161J100B
A1C307	0121-0046	2	2	CAPACITOR-V TRMR-CER 9-35PF 200V PC-MTG	52763	304322 9/35PF N650
A1C308	0121-0046	2		CAPACITOR-V TRMR-CER 9-35PF 200V PC-MTG	52763	304322 9/35PF N650
A1C309	0160-5413	9		CAPACITOR-FXD 160PF +-5% 100VDC CER	13606	592C0G161J100B
A1C310	0160-4800	6		CAPACITOR-FXD 120PF +-5% 100VDC CER	04222	SA106A121JAA
A1C311	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C312	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
313	0160-4571	8		CAPACITOR-FXD .1UF +-80-20% 50VDC CER	04222	SA105E104ZAA
314	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C315	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C316	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C317	0160-4819	7	2	CAPACITOR-FXD 2200PF +-5% 100VDC CER	04222	SA301A222JAA
C318	0160-4819	7		CAPACITOR-FXD 2200PF +-5% 100VDC CER	04222	SA301A222JAA
A1C319	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C320	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C321	0180-0309	4	1	CAPACITOR-FXD 4.7UF+-20% 10VDC TA	13606	150D475X0010A2-DYS
A1C322	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C323	0180-1746	5		CAPACITOR-FXD 15UF+-10% 20VDC TA	13606	150D156X9020B2-DYS
A1C324	0160-4571	8		CAPACITOR-FXD .1UF +-80-20% 50VDC CER	04222	SA105E104ZAA
A1C401	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C402	0180-2623	9	1	CAPACITOR-FXD 12UF+-10% 6VDC TA	13606	152D951
A1C403	0180-0229	7	2	CAPACITOR-FXD 33UF+-10% 10VDC TA	13606	150D336X9010B2-DYS

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A1C404	0160-4571	8	1	CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C501	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C502	0160-4808	4		CAPACITOR-FXD 470PF +5% 100VDC CER	13606	292CCOG471J100B
A1C503	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C504	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C505	0160-4832	4	2	CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C506	0160-4803	9		CAPACITOR-FXD 68PF +5% 100VDC CER 0+-30	04222	SA101A680JAA
A1C510	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C511	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C512	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C513	0160-4832	4	2	CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C514	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C515	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C516	0180-0229	7		CAPACITOR-FXD 33UF+-10% 10VDC TA	13606	150D336X9010B2-DYS
A1C517	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C520	0160-4832	4	2	CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C521	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C522	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C531	0160-6523	4		C-F 1PF --% 200V CERMLr	28480	RPE121-978COG010C200V
A1C541	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C543	0160-4832	4	3	CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C601	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C602	0160-6523	4		C-F 1PF --% 200V CERMLr	28480	RPE121-978COG010C200V
A1C605	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C606	0180-1746	5		CAPACITOR-FXD 15UF+-10% 20VDC TA	13606	150D156X9020B2-DYS
A1C607	0180-1746	5	1	CAPACITOR-FXD 15UF+-10% 20VDC TA	13606	150D156X9020B2-DYS
A1C808	0160-4786	7		CAPACITOR-FXD 27PF +5% 100VDC CER 0+-30	04222	SA101A270JAA
A1C609	0121-0451	3		CAPACITOR-V TRMR-AIR 1.7-11PF 175V	74970	187-0106-02B
A1C701	0180-0197	8		CAPACITOR-FXD 2.2UF+-10% 20VDC TA	13606	150D225X9020A2-DYS
A1C702	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C703	0160-4571	8	1	CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C704	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C705	0160-4532	1		CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A1C706	0160-4532	1		CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A1C707	0180-0197	8		CAPACITOR-FXD 2.2UF+-10% 20VDC TA	13606	150D225X9020A2-DYS
A1C708	0160-4832	4	1	CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C709	0160-4532	1		CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A1C710	0160-4532	1		CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A1C801	0160-4801	7		CAPACITOR-FXD 100PF +5% 100VDC CER	04222	SA101A101JAA
A1C802	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C803	0160-4571	8	1	CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C804	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C805	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C806	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C807	0160-4803	9		CAPACITOR-FXD 68PF +5% 100VDC CER 0+-30	04222	SA101A680JAA
A1C808	0160-4832	4	1	CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C809	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C810	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C811	0180-0291	3		CAPACITOR-FXD 1UF+-10% 35VDC TA	13606	150D105X9035A2-DYS
A1C812	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C813	0160-4810	8	1	CAPACITOR-FXD 330PF +5% 100VDC CER	04222	SA101A331JAA
A1C901	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C902	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C903	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C904	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C905	0160-4571	8	1	CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C906	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C907	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C908	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C909	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C910	0160-4532	1	1	CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A1C911	0160-4805	1		CAPACITOR-FXD 47PF +5% 100VDC CER 0+-30	04222	SA101A470JAA
A1C912	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C921	0160-5350	3		CAPACITOR-FXD 300PF +5% 100VDC CER	13606	592CCOG301J100B
A1C922	0160-4822	2		CAPACITOR-FXD 1000PF +5% 100VDC CER	04222	SA201A102JAA
A1C923	0160-4571	8	1	CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C924	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C925	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A1C926	0160-4832	4		CAPACITOR-FXD .01UF +-10% 100VDC CER	13606	592CX7R103K100C
A1C927	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number	
A1CR101	1901-0040	1	27	DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR102	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR201	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR202	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR203	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR204	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR205	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR208	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR209	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR210	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR261	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR262	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR301	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR302	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR360	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR361	1901-0040	1	5	DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR401	1901-0519	9		DIODE-SWITCHING 200V 150MA 50NS DO-34	9N171	PV17.1	
A1CR402	1901-0519	9		DIODE-SWITCHING 200V 150MA 50NS DO-34	9N171	PV17.1	
A1CR403	1901-0519	9		DIODE-SWITCHING 200V 150MA 50NS DO-34	9N171	PV17.1	
A1CR404	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR405	1902-0944	6	1	DIODE-ZNR 2.7V 5% DO-35 PD=4W TC=-.044%	04713	SZ30035-002	
A1CR406	1901-0519	9		DIODE-SWITCHING 200V 150MA 50NS DO-34	9N171	PV17.1	
A1CR407	1901-0519	9		DIODE-SWITCHING 200V 150MA 50NS DO-34	9N171	PV17.1	
A1CR501	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR502	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR503	1901-0040	1	1	DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR504	1902-0943	5		DIODE-ZNR 2.4V 5% DO-35 PD=4W TC=-.037%	04713	SZ30035-001	
A1CR601	1902-0031	2		DIODE-ZNR 12.7V 5% DO-35 PD=4W	04713	SZ30016-1212	
A1CR701	1901-0026	3		DIODE-PWR RECT 200V 750MA DO-29	04713	SR1358-8BRL	
A1CR702	1901-0026	3		DIODE-PWR RECT 200V 750MA DO-29	04713	SR1358-8BRL	
A1CR703	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR704	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR801	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR802	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR803	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR804	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1CR901	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088	
A1E308A	9170-0894	0		CORE-SHIELDING BEAD	02114	56-590-65/4A6	
A1E308B	9170-0894	0		CORE-SHIELDING BEAD	02114	56-590-65/4A6	
A1E310	9170-0894	0		CORE-SHIELDING BEAD	02114	56-590-65/4A6	
A1E311	9170-0894	0		CORE-SHIELDING BEAD	02114	56-590-65/4A6	
A1E312	9170-0894	0		CORE-SHIELDING BEAD	02114	56-590-65/4A6	
A1E313	9170-0894	0		CORE-SHIELDING BEAD	02114	56-590-65/4A6	
A1E402	9170-0894	0		CORE-SHIELDING BEAD	02114	56-590-65/4A6	
A1E403	9170-0894	0		CORE-SHIELDING BEAD	02114	56-590-65/4A6	
A1E404	9170-0894	0	12	CORE-SHIELDING BEAD	02114	56-590-65/4A6	
A1E505	9170-0894	0		CORE-SHIELDING BEAD	02114	56-590-65/4A6	
A1E506	9170-0894	0		CORE-SHIELDING BEAD	02114	56-590-65/4A6	
A1E603	9170-0894	0		CORE-SHIELDING BEAD	02114	56-590-65/4A6	
A1H101A	0515-0853	4		2	SCREW-MACH M3 X 0.5 8MM-LG PAN-HD	13764	50M030050N008
A1H101B	0515-0853	4	2	SCREW-MACH M3 X 0.5 8MM-LG PAN-HD	13764	50M030050N008	
A1J1	1251-2969	8		CONNECTOR-PHONO SINGLE PHONO JACK; DIP	27264	15-24-0503	
A1J2	1251-2969	8		CONNECTOR-PHONO SINGLE PHONO JACK; DIP	27264	15-24-0503	
A1J3	1251-6854	8		CONN-POST TYPE .156-PIN-SPCG 4-CONT	27264	09-48-3044	
J4	1251-3961	2		CONN-POST TYPE .156-PIN-SPCG 6-CONT	27264	09-48-3064	
A1J5	1252-1478	4	1	CON-HEADER 22 CONT GP .100 SP	22526	68024-122	
A1J6	1200-0507	9		SOCKET-IC 16-CONT DIP-SLDR	06776	ICN-163B-S3-G30	
1K201	0490-1346	8		5	RELAY-REED 1A 500MA 200VDC 5VDC-COIL	12617	HE321A5131
1K201	0490-1628	9		REL REED	O02482	F41A05	
1K202	0490-1628	9		REL REED	O02482	F41A05	
A1K203	0490-1628	9		REL REED	O02482	F41A05	
A1K204	0490-1628	9		REL REED	O02482	F41A05	
A1K205	0490-1628	9		REL REED	O02482	F41A05	
A1K261	0490-1628	9		REL REED	O02482	F41A05	
A1K401	0490-1628	9		REL REED	O02482	F41A05	
A1K701	0490-1628	9	1	REL REED	O02482	F41A05	
A1L701	9100-3334	2		INDUCTOR 25UH 10% .3D	99484	ES-2638	
A1L702	9100-3334	2		INDUCTOR 25UH 10% .3D	99484	ES-2638	
A1L923	9100-1791	1		1	CORE-FERRITE CHOKE-WIDEBAND;IMP>360	02114	VK200-19/4B
A1L924	9100-1791	1		CORE-FERRITE CHOKE-WIDEBAND;IMP>360	02114	VK200-19/4B	

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A1L925	9100-1791	1		CORE-FERRITE CHOKE-WIDEBAND;IMP>360	02114	VK200-19/4B
A1L926	9100-1645	4	1	INDUCTOR RF-CH-MLD 390UH 5% .2DX 45LG	99800	2500-08
A1MP101A	0380-1236	2	2	STANDOFF-RVT-ON 6-MM-LG M3.0 X 0.5-THD	05791	
A1MP101B	0380-1236	2	2	STANDOFF-RVT-ON 6-MM-LG M3.0 X 0.5-THD	05791	
A1MP706A	1205-0474	9	1	HEAT SINK SGL TO-220-CS	13103	6072B-SM3
A1MP706B	0340-0564	3	2	INSULATOR-XSTR THRM-CNDCT	55285	7403-09FR-51
A1MP706C	0535-0004	9	2	NUT-HEX DBL-CHAM M3 X 0.5 2.4MM-THK	28480	
A1MP706D	3050-0716	5	2	WASHER-FL MTLC NO. 5 .128-IN-ID	70318	NAS620-C5
A1MP706E	2190-0913	9	2	WASHER-LK HLCL NO. 4 .115-IN-ID	70318	
A1MP706B	0340-0564	3	2	INSULATOR-XSTR THRM-CNDCT	55285	7403-09FR-51
A1MP708C	0535-0004	9	9	NUT-HEX DBL-CHAM M3 X 0.5 2.4MM-THK	28480	
A1MP708D	3050-0716	5	5	WASHER-FL MTLC NO. 5 .128-IN-ID	70318	NAS620-C5
A1MP708E	2190-0913	9	9	WASHER-LK HLCL NO. 4 .115-IN-ID	70318	
A1Q101	1853-0569	6	20	TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q102	1853-0569	6	6	TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q103	1855-0414	4	1	TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	17856	2N4393
A1Q104	1855-0414	4	4	TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	17856	2N4393
A1Q200	1853-0569	6	6	TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q201	1853-0518	5	1	TRANSISTOR PNP TO-92 PD=350MW FT=40MHZ	04713	SPS 8593
A1Q202	1853-0518	5	5	TRANSISTOR PNP TO-92 PD=350MW FT=40MHZ	04713	SPS 8593
A1Q203	1853-0518	5	5	TRANSISTOR PNP TO-92 PD=350MW FT=40MHZ	04713	SPS 8593
A1Q204	1853-0518	5	5	TRANSISTOR PNP TO-92 PD=350MW FT=40MHZ	04713	SPS 8593
A1Q205	1853-0569	6	6	TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q206	1853-0639	1	6	XTR	04713	SPS7848RL
A1Q207	1853-0639	1	1	XTR	04713	SPS7848RL
A1Q208A	1854-0938	5	1	TRANSISTOR-DUAL NPN PD=350MW	04713	SPS8625M
A1Q208B	1854-0938	5	5	TRANSISTOR-DUAL NPN PD=350MW	04713	SPS8625M
A1Q209A	1854-0938	5	5	TRANSISTOR-DUAL NPN PD=350MW	04713	SPS8625M
A1Q209B	1854-0938	5	5	TRANSISTOR-DUAL NPN PD=350MW	04713	SPS8625M
A1Q210A	1854-0938	5	5	TRANSISTOR-DUAL NPN PD=350MW	04713	SPS8625M
A1Q210B	1854-0938	5	5	TRANSISTOR-DUAL NPN PD=350MW	04713	SPS8625M
A1Q211	1853-0639	1	1	XTR	04713	SPS7848RL
A1Q212	1853-0639	1	1	XTR	04713	SPS7848RL
A1Q213	1854-0636	0	1	TRANSISTOR NPN SI TO-92 PD=350MW	04713	SPS5647
A1Q214	1854-0636	0	0	TRANSISTOR NPN SI TO-92 PD=350MW	04713	SPS5647
A1Q215	1855-0414	4	4	TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	17856	2N4393
A1Q216	1855-0414	4	4	TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	17856	2N4393
A1Q217	1854-1139	0	12	XTR SML1PNP	04713	SPS8028RL
A1Q218	1854-1139	0	0	XTR SML1PNP	04713	SPS8028RL
A1Q219	1853-0569	6	6	TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q220	1855-0441	7	1	TRANSISTOR-JFET DUAL N-CHAN D-MODE TO-78	27014	
A1Q242	1854-1024	2	7	TRANSISTOR NPN SI PD=300MW FT=200MHZ	04713	SPS5103RLRA
A1Q261	1853-0640	4	1	XTR SML1PNP	07263	S44446
A1Q262	1853-0640	4	4	XTR SML1PNP	07263	S44446
A1Q263	1853-0640	4	4	XTR SML1PNP	07263	S44446
A1Q264	1853-0640	4	4	XTR SML1PNP	07263	S44446
A1Q265	1853-0640	4	4	XTR SML1PNP	07263	S44446
A1Q266	1853-0640	4	4	XTR SML1PNP	07263	S44446
A1Q267	1853-0569	6	6	TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q268	1853-0569	6	6	TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q269	1853-0569	6	6	TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q270	1853-0083	9	1	TRANSISTOR-DUAL PNP PD=600MW	07263	SP 12102
A1Q272	1853-0569	6	6	TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q273	1853-0569	6	6	TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q274	1853-0569	6	6	TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q275	1853-0569	6	6	TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q276	1853-0569	6	6	TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q277	1854-1024	2	2	TRANSISTOR NPN SI PD=300MW FT=200MHZ	04713	SPS5103RLRA
A1Q301	1854-0636	0	0	TRANSISTOR NPN SI TO-92 PD=350MW	04713	SPS5647
A1Q302	1854-0795	2	1	TRANSISTOR NPN SI TO-92 PD=625MW	04713	SPS8028
A1Q303	1854-0636	0	0	TRANSISTOR NPN SI TO-92 PD=350MW	04713	SPS5647
A1Q304	1854-0795	2	2	TRANSISTOR NPN SI TO-92 PD=625MW	04713	SPS8028
A1Q305	1854-1028	6	2	TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611RLRA
A1Q306	1854-1139	0	0	XTR SML1PNP	04713	SPS8028RL
A1Q307	1854-1139	0	0	XTR SML1PNP	04713	SPS8028RL
A1Q308	1853-0075	9	1	TRANSISTOR-DUAL PNP PD=400MW	04713	SD4751-001
A1Q310	1854-0795	2	2	TRANSISTOR NPN SI TO-92 PD=625MW	04713	SPS8028
A1Q311	1854-0795	2	2	TRANSISTOR NPN SI TO-92 PD=625MW	04713	SPS8028
A1Q312	1853-0448	0	1	TRANSISTOR PNP SI TO-92 PD=625MW	04713	SPS7848
A1Q313	1853-0448	0	0	TRANSISTOR PNP SI TO-92 PD=625MW	04713	SPS7848

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A1Q314	1853-0639	1		XTR	04713	SPS7848RL
A1Q315	1854-1139	0		XTR SML1NPN	04713	SPS8028RL
A1Q316	1854-1139	0		XTR SML1NPN	04713	SPS8028RL
A1Q317	1854-1139	0		XTR SML1NPN	04713	SPS8028RL
A1Q318	1854-1139	0		XTR SML1NPN	04713	SPS8028RL
A1Q401	1853-0320	7	1	TRANSISTOR PNP 2N4032 SI TO-5 PD=800MW	07263	S44044
A1Q402	1853-0203	5	1	TRANSISTOR PNP SI PD=360MW FT=700MHZ	04713	SS5651
A1Q403	1853-0203	5		TRANSISTOR PNP SI PD=360MW FT=700MHZ	04713	SS5651
A1Q404	1853-0203	5		TRANSISTOR PNP SI PD=360MW FT=700MHZ	04713	SS5651
A1Q405	1854-1024	2		TRANSISTOR NPN SI PD=300MW FT=200MHZ	04713	SPS5103RLRA
A1Q501	1853-0569	6		TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q502	1853-0569	6		TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q503	1853-0569	6		TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q504	1854-0071	7	1	TRANSISTOR NPN SI PD=300MW FT=200MHZ	13606	CT-1200
A1Q505	1854-0795	2		TRANSISTOR NPN SI TO-92 PD=625MW	04713	SPS8028
A1Q506	1854-0795	2		TRANSISTOR NPN SI TO-92 PD=625MW	04713	SPS8028
A1Q509	1853-0569	6		TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q601	1853-0517	4	1	TRANSISTOR-DUAL PNP TO-78 PD=400MW	04713	SD3263
A1Q602	1854-1139	0		XTR SML1NPN	04713	SPS8028RL
A1Q603	1854-0795	2		TRANSISTOR NPN SI TO-92 PD=625MW	04713	SPS8028
A1Q604	1853-0563	0	1	XTR SML1PNP SI 2N3906 TXXXX	04713	SPS3612RLRA
A1Q605	1854-1139	0		XTR SML1NPN	04713	SPS8028RL
A1Q606	1853-0639	1		XTR	04713	SPS7848RL
A1Q701	1854-1028	6		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611RLRA
Q701	1854-1024	2		TRANSISTOR NPN SI PD=300MW FT=200MHZ	04713	SPS5103RLRA
...Q702	1853-0569	6		TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q703	1854-1024	2		TRANSISTOR NPN SI PD=300MW FT=200MHZ	04713	SPS5103RLRA
A1Q705	1853-0569	6		TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
Q706	1853-0367	2	1	TRANSISTOR PNP SI PD=15W FT=50MHZ	04713	SJE844
Q707	1854-1024	2		TRANSISTOR NPN SI PD=300MW FT=200MHZ	04713	SPS5103RLRA
A1Q708	1854-0692	8	1	TRANSISTOR NPN SI PD=15W FT=50MHZ	04713	SJE1634K
A1Q801	1853-0086	2	1	TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322
A1Q901	1853-0569	6		TRANSISTOR PNP SI PD=310MW FT=40MHZ	04713	SPS3322RLRA
A1Q921	1854-1024	2		TRANSISTOR NPN SI PD=300MW FT=200MHZ	04713	SPS5103RLRA
A1R101	0699-1630	5	1	R-F 4M .25% 1/2W MF	C01121	ML-181
A1R102	0699-1631	6	1	R-F 8M .01% 1/2W MF12	C01121	ML-181
A1R103	0699-1630	5		R-F 4M .25% 1/2W MF	C01121	ML-181
A1R104	0699-1631	6		R-F 8M .01% 1/2W MF12	C01121	ML-181
A1R105	0757-0442	9	14	RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A1R106	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A1R107	0698-3161	9	1	RESISTOR 38.3K 1% .125W F TC=0+-100	19701	SFR25H
A1R108	0698-4496	5	2	RESISTOR 45.3K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R109	0698-4496	5		RESISTOR 45.3K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R110	2100-3214	0	2	RESISTOR-TRMR 100K 10% C TOP-ADJ 1-TRN	32997	3386P-Y46-104
A1R111	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A1R112	0757-0280	3	20	RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R113	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R114	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A1R116	0757-0401	0	19	RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A1R201	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R202	0757-0277	8	17	RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A1R203	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A1R204	0757-0427	0	3	RESISTOR 1.5K 1% .125W F TC=0+-100	19701	SFR25H
A1R205	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A1R206	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
R207	0757-0420	3	2	RESISTOR 750 1% .125W F TC=0+-100	19701	SFR25H
A1R208	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	19701	SFR25H
A1R209	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
R211	0698-7212	9	2	RESISTOR 100 1% .05W F TC=0+-100	24546	CT3
R212	0698-7212	9		RESISTOR 100 1% .05W F TC=0+-100	24546	CT3
A1R213	0698-7205	0	4	RESISTOR 51.1 1% .05W F TC=0+-100	24546	CT3
A1R214	0698-7205	0		RESISTOR 51.1 1% .05W F TC=0+-100	24546	CT3
A1R215	0757-0407	6	3	RESISTOR 200 1% .125W F TC=0+-100	19701	SFR25H
A1R216	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A1R217	0698-4386	2	1	RESISTOR 59 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R218	0757-0407	6		RESISTOR 200 1% .125W F TC=0+-100	19701	SFR25H
A1R219	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R220	0757-0283	6	3	RESISTOR 2K 1% .125W F TC=0+-100	19701	SFR25H
A1R221	0757-0472	5	1	RESISTOR 200K 1% .125W F TC=0+-100	19701	SFR25H
A1R222	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A1R223	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A1R224	0698-8927	4	2	RESISTOR 1M 1% .125W F TC=0+-100	19701	SFR25H
A1R225	0757-0273	4	3	RESISTOR 3.01K 1% .125W F TC=0+-100	19701	SFR25H
A1R226	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R227	0757-0410	1	4	RESISTOR 301 1% .125W F TC=0+-100	19701	SFR25H
A1R228	0757-0410	1		RESISTOR 301 1% .125W F TC=0+-100	19701	SFR25H
A1R229	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R230	0757-0273	4		RESISTOR 3.01K 1% .125W F TC=0+-100	19701	SFR25H
A1R231	0698-8927	4		RESISTOR 1M 1% .125W F TC=0+-100	19701	SFR25H
A1R232	0698-4123	5	10	RESISTOR 499 1% .125W F TC=0+-100	19701	SFR25H
A1R233	0698-6343	5	2	RESISTOR 9K .1% .125W F TC=0+-25	19701	5033R
A1R234	0698-6362	8	2	RESISTOR 1K .1% .125W F TC=0+-25	19701	5033R
A1R235	0698-4503	5	1	RESISTOR 66.5K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R237	0698-6362	8		RESISTOR 1K .1% .125W F TC=0+-25	19701	5033R
A1R238	0698-6343	5		RESISTOR 9K .1% .125W F TC=0+-25	19701	5033R
A1R242	0698-4442	1	1	RESISTOR 4.42K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R243	0698-4438	5	2	RESISTOR 3.09K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R244	0757-0421	4	3	RESISTOR 825 1% .125W F TC=0+-100	19701	SFR25H
A1R245	0698-4438	5		RESISTOR 3.09K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R246	0698-6448	1	2	RESISTOR 216.2 .1% .125W F TC=0+-25	19701	5033R
A1R247	0698-3444	1	6	RESISTOR 316 1% .125W F TC=0+-100	19701	SFR25H
A1R248	0698-6448	1		RESISTOR 216.2 .1% .125W F TC=0+-25	19701	5033R
A1R249	0698-3279	0	18	RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A1R250	0698-4457	8	2	RESISTOR 576 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R251	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A1R253	0698-4457	8		RESISTOR 576 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R254	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A1R260	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A1R261	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R262	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A1R263	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A1R264	0698-1069	4	1	RESISTOR 229 .1% .125W F TC=0+-25	19701	5033R
A1R265	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A1R266	0757-0407	6		RESISTOR 200 1% .125W F TC=0+-100	19701	SFR25H
A1R268	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A1R269	2100-0567	0	1	RESISTOR-TRMR 2K 10% C TOP-ADJ 1-TRN	32997	3386P-Y46-202
A1R270	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A1R271	0698-3262	1	1	RESISTOR 40.2 1% .125W F TC=0+-100	19701	SFR25H
A1R272	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A1R273	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A1R274	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A1R275	0698-3155	1	1	RESISTOR 4.64K 1% .125W F TC=0+-100	19701	SFR25H
A1R276	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A1R277	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A1R278	0698-5453	6	2	RESISTOR 900 .1% .125W F TC=0+-50	19701	5033R
A1R279	0698-5453	6		RESISTOR 900 .1% .125W F TC=0+-50	19701	5033R
A1R280	0698-4123	5		RESISTOR 499 1% .125W F TC=0+-100	19701	SFR25H
A1R281	0698-4123	5		RESISTOR 499 1% .125W F TC=0+-100	19701	SFR25H
A1R282	0757-0281	4	1	RESISTOR 2.74K 1% .125W F TC=0+-100	19701	SFR25H
A1R283	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R284	0698-3443	0	1	RESISTOR 287 1% .125W F TC=0+-100	19701	SFR25H
A1R285	0757-0449	6	1	RESISTOR 20K 1% .125W F TC=0+-100	19701	SFR25H
A1R286	0757-0283	6		RESISTOR 2K 1% .125W F TC=0+-100	19701	SFR25H
A1R301	0698-4123	5		RESISTOR 499 1% .125W F TC=0+-100	19701	SFR25H
A1R302	0698-6317	3	2	RESISTOR 500 .1% .125W F TC=0+-25	91637	CMF-55-1, T-9
A1R303	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A1R304	0757-0200	7	2	RESISTOR 5.62K 1% .125W F TC=0+-100	19701	SFR25H
A1R305	0757-0427	0		RESISTOR 1.5K 1% .125W F TC=0+-100	19701	SFR25H
A1R306	0698-4369	1	2	RESISTOR 23.2 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R306*	0698-3430	5		RESISTOR 21.5 1% .125W F TC=0+-100	19701	SFR25H
A1R306*	0757-0291	6		RESISTOR 24.9 1% .125W F TC=0+-100	19701	SFR25H
A1R306*	0698-4373	7		RESISTOR 26.7 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R307	0698-7205	0		RESISTOR 51.1 1% .05W F TC=0+-100	24546	CT3
A1R308	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A1R309	0698-6323	1	2	RESISTOR 100 .1% .125W F TC=0+-25	91637	CMF-55-1, T-9
A1R310	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A1R311	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A1R312	0698-6323	1		RESISTOR 100 .1% .125W F TC=0+-25	91637	CMF-55-1, T-9
A1R313	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A1R314	0698-7205	0		RESISTOR 51.1 1% .05W F TC=0+-100	24546	CT3

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A1R315	0698-4369	1		RESISTOR 23.2 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R315*	0698-3430	5		RESISTOR 21.5 1% .125W F TC=0+-100	19701	SFR25H
A1R315*	0757-0291	6		RESISTOR 24.9 1% .125W F TC=0+-100	19701	SFR25H
A1R315*	0698-4373	7		RESISTOR 26.7 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R316	0757-0427	0		RESISTOR 1.5K 1% .125W F TC=0+-100	19701	SFR25H
A1R317	0757-0200	7		RESISTOR 5.62K 1% .125W F TC=0+-100	19701	SFR25H
A1R318	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A1R319	0698-6317	3		RESISTOR 500 .1% .125W F TC=0+-25	91637	CMF-55-1, T-9
A1R320	0698-4123	5		RESISTOR 499 1% .125W F TC=0+-100	19701	SFR25H
A1R321	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R322	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A1R323	0698-4123	5		RESISTOR 499 1% .125W F TC=0+-100	19701	SFR25H
A1R324	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	19701	SFR25H
A1R327	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	19701	SFR25H
A1R328	0698-6320	8	3	RESISTOR 5K .1% .125W F TC=0+-25	91637	CMF-55-1, T-9
A1R329	0698-6320	8		RESISTOR 5K .1% .125W F TC=0+-25	91637	CMF-55-1, T-9
A1R330	0698-6320	8		RESISTOR 5K .1% .125W F TC=0+-25	91637	CMF-55-1, T-9
A1R331	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A1R332	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A1R333	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A1R334	2100-0568	1	1	RESISTOR-TRMR 100 10% C TOP-ADJ 1-TRN	32997	3386P-Y46-101
A1R335	0698-3132	4	2	RESISTOR 261 1% .125W F TC=0+-100	19701	SFR25H
A1R336	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A1R337	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A1R338	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A1R339	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A1R340	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A1R341	0757-0403	2	2	RESISTOR 121 1% .125W F TC=0+-100	19701	SFR25H
A1R342	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A1R343	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A1R344	0757-0284	7	1	RESISTOR 150 1% .125W F TC=0+-100	19701	SFR25H
A1R345	0757-0412	3	1	RESISTOR 365 1% .125W F TC=0+-100	19701	SFR25H
A1R346	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	19701	SFR25H
A1R347	0698-4123	5		RESISTOR 499 1% .125W F TC=0+-100	19701	SFR25H
A1R348	0757-0403	2		RESISTOR 121 1% .125W F TC=0+-100	19701	SFR25H
A1R349	0757-0421	4		RESISTOR 825 1% .125W F TC=0+-100	19701	SFR25H
A1R350	0757-0399	5	2	RESISTOR 82.5 1% .125W F TC=0+-100	19701	SFR25H
A1R351	0757-0399	5		RESISTOR 82.5 1% .125W F TC=0+-100	19701	SFR25H
A1R352	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	19701	SFR25H
A1R353	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	19701	SFR25H
A1R354	0698-4123	5		RESISTOR 499 1% .125W F TC=0+-100	19701	SFR25H
A1R355	0698-4123	5		RESISTOR 499 1% .125W F TC=0+-100	19701	SFR25H
A1R360	0698-4417	0	1	RESISTOR 174 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R361	0698-3445	2	2	RESISTOR 348 1% .125W F TC=0+-100	19701	SFR25H
A1R401	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R402	0698-7985	3	1	RESISTOR 2 5% .25W F TC=0+-100	102360	TF07
A1R403	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R404	0757-0199	3	1	RESISTOR 21.5K 1% .125W F TC=0+-100	19701	SFR25H
A1R405	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A1R406	0757-0465	6	5	RESISTOR 100K 1% .125W F TC=0+-100	19701	SFR25H
A1R407	0698-7332	4	2	RESISTOR 1M 1% .125W F TC=0+-100	19701	5033R
A1R408	0698-7332	4		RESISTOR 1M 1% .125W F TC=0+-100	19701	5033R
A1R409	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A1R410	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A1R411	0689-5105	6	1	RESISTOR 51 5% 1W CC TC=0+412	01121	GB5105
A1R412	0686-3305	8	1	RESISTOR 33 5% .5W CC TC=0+412	01121	EB3305
A1R413	0757-0410	1		RESISTOR 301 1% .125W F TC=0+-100	19701	SFR25H
A1R416	0757-0410	1		RESISTOR 301 1% .125W F TC=0+-100	19701	SFR25H
A1R417	0683-1505	0	1	RESISTOR 15 5% .25W CF TC=0-400	77902	R-25J
A1R501	0698-6103	5	1	RESISTOR 1.6K .1% .125W F TC=0+-50	91637	CMF-55-1, T-2
A1R502	0698-3445	2		RESISTOR 348 1% .125W F TC=0+-100	19701	SFR25H
A1R503	0698-8613	6	1	RESISTOR 8.97K .1% .125W F TC=0+-25	19701	5033R
A1R504	0698-6360	6	5	RESISTOR 10K .1% .125W F TC=0+-25	19701	5033R
A1R505	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A1R506*	0698-3156	2		RESISTOR 14.7K 1% .125W F TC=0+-100	19701	SFR25H
A1R506*	0698-3264	3		RESISTOR 11.8K 1% .125W F TC=0+-100	19701	SFR25H
A1R506*	0698-3359	7		RESISTOR 12.7K 1% .125W F TC=0+-100	19701	SFR25H
A1R506*	0698-3519	1		RESISTOR 12.4K 1% .125W F TC=0+-100	19701	SFR25H
A1R506*	0698-3540	8		RESISTOR 15.4K 1% .125W F TC=0+-100	19701	SFR25H
A1R506*	0698-4307	7		RESISTOR 14.3K 1% .125W F TC=0+-100	19701	SFR25H

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A1R506*	0698-4479	4		RESISTOR 14K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R506*	0698-4480	7		RESISTOR 15.8K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R506*	0757-0289	2		RESISTOR 13.3K 1% .125W F TC=0+-100	19701	SFR25H
A1R506*	0757-0444	1		RESISTOR 12.1K 1% .125W F TC=0+-100	19701	SFR25H
A1R506*	0757-0445	2		RESISTOR 13K 1% .125W F TC=0+-100	19701	SFR25H
A1R506*	0757-0446	3		RESISTOR 15K 1% .125W F TC=0+-100	19701	SFR25H
A1R506*	0757-0447	4		RESISTOR 16.2K 1% .125W F TC=0+-100	19701	SFR25H
A1R506*	0698-3581	7	1	RESISTOR 13.7K 1% .125W F TC=0+-100	19701	SFR25H
A1R507	0757-0421	4		RESISTOR 825 1% .125W F TC=0+-100	19701	SFR25H
A1R508	0757-0279	0	1	RESISTOR 3.16K 1% .125W F TC=0+-100	19701	SFR25H
A1R509	0698-6355	9	2	RESISTOR 400 .1% .125W F TC=0+-25	19701	5033R
A1R510	0698-6355	9		RESISTOR 400 .1% .125W F TC=0+-25	19701	5033R
A1R511	2100-3210	6		RESISTOR-TRMR 10K 10% C TOP-ADJ 1-TRN	32997	3386P-Y46-103
A1R512	0698-4196	2	1	RESISTOR 1.07K 1% .125W F TC=0+-100	19701	SFR25H
A1R513	0698-8180	2	2	RESISTOR 4.22K .1% .125W F TC=0+-25	19701	5033R
A1R514	0698-0692	7	2	RESISTOR 1.4K .1% .125W F TC=0+-25	19701	5033R
A1R515	0698-0690	5	2	RESISTOR 302 .1% .125W F TC=0+-25	19701	5033R
A1R516	0698-6446	9	2	RESISTOR 2.162K .1% .125W F TC=0+-25	19701	5033R
A1R517	0698-6446	9		RESISTOR 2.162K .1% .125W F TC=0+-25	19701	5033R
A1R518	0698-0690	5		RESISTOR 302 .1% .125W F TC=0+-25	19701	5033R
A1R519	0757-0402	1	1	RESISTOR 110 1% .125W F TC=0+-100	19701	SFR25H
A1R520	0757-0291	6	2	RESISTOR 24.9 1% .125W F TC=0+-100	19701	SFR25H
A1R521	0757-0291	6		RESISTOR 24.9 1% .125W F TC=0+-100	19701	SFR25H
A1R522*	0698-3484	9		RESISTOR 6.65K 1% .125W F TC=0+-100	19701	SFR25H
A1R522*	0698-3493	0		RESISTOR 4.12K 1% .125W F TC=0+-100	19701	SFR25H
A1R522*	0698-4427	2		RESISTOR 1.65K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R522*	0698-4432	9		RESISTOR 2.1K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R522*	0698-4436	3		RESISTOR 2.8K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R522*	0698-4479	4		RESISTOR 14K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R522*	0698-6329	7		RESISTOR 845 1% .125W F TC=0+-25	19701	5033R
A1R522*	0698-6797	3		RESISTOR 660 1% .125W F TC=0+-25	19701	5033R
A1R522*	0698-6804	3		RESISTOR 540.9 .25% .125W F TC=0+-50	19701	5033R
A1R522*	0698-6862	3		RESISTOR 1.153K .25% .125W F TC=0+-50	19701	5033R
A1R522*	0698-6965	7		RESISTOR 505 .1% .125W F TC=0+-25	19701	5033R
A1R522*	0698-7387	9		RESISTOR 588.1 .5% .125W F TC=0+-50	19701	5033R
A1R522*	0698-7388	0		RESISTOR 421.7 .5% .125W F TC=0+-50	19701	5033R
A1R522*	0698-7649	6		RESISTOR 383 .1% .125W F TC=0+-25	24546	NE55
A1R522*	0698-0051	2		RESISTOR 320 .25% .125W F TC=0+-50	19701	5033R
A1R522*	0698-0163	7		RESISTOR 466 .1% .125W F TC=0+-25	19701	5033R
A1R522*	0698-0164	8		RESISTOR 738.5 .1% .125W F TC=0+-25	19701	5033R
A1R522*	0698-0190	0		RESISTOR 1.364K .25% .125W F TC=0+-50	19701	5033R
A1R522*	0698-0274	1		RESISTOR 350 .1% .125W F TC=0+-25	19701	5033R
A1R523	0757-0180	2	2	RESISTOR 31.6 1% .125W F TC=0+-100	19701	SFR25H
A1R524	0757-0180	2		RESISTOR 31.6 1% .125W F TC=0+-100	19701	SFR25H
A1R525	0698-0189	7	2	RESISTOR 259.6 .1% .125W F TC=0+-25	19701	5033R
A1R526	0698-0189	7		RESISTOR 259.6 .1% .125W F TC=0+-25	19701	5033R
A1R527	0698-6347	9	1	RESISTOR 1.5K .1% .125W F TC=0+-25	19701	5033R
A1R528*	0698-3136	8		RESISTOR 17.8K 1% .125W F TC=0+-100	19701	SFR25H
A1R528*	0698-3157	3		RESISTOR 19.6K 1% .125W F TC=0+-100	19701	SFR25H
A1R528*	0698-3158	4		RESISTOR 23.7K 1% .125W F TC=0+-100	19701	SFR25H
A1R528*	0698-3159	5		RESISTOR 26.1K 1% .125W F TC=0+-100	19701	SFR25H
A1R528*	0698-3245	0		RESISTOR 20.5K 1% .125W F TC=0+-100	19701	SFR25H
A1R528*	0698-4308	8		RESISTOR 16.9K 1% .125W F TC=0+-100	19701	SFR25H
A1R528*	0698-4482	9		RESISTOR 17.4K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R528*	0698-4483	0		RESISTOR 18.7K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R528*	0698-4484	1		RESISTOR 19.1K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R528*	0698-4485	2		RESISTOR 23.2K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R528*	0698-4486	3		RESISTOR 24.9K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R528*	0698-4487	4		RESISTOR 25.5K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R528*	0757-0199	3		RESISTOR 21.5K 1% .125W F TC=0+-100	19701	SFR25H
A1R528*	0757-0349	5		RESISTOR 22.6K 1% .125W F TC=0+-100	19701	SFR25H
A1R528*	0757-0448	5		RESISTOR 18.2K 1% .125W F TC=0+-100	19701	SFR25H
A1R528*	0757-0449	6		RESISTOR 20K 1% .125W F TC=0+-100	19701	SFR25H
A1R528*	0757-0450	9		RESISTOR 22.1K 1% .125W F TC=0+-100	19701	SFR25H
A1R528*	0757-0451	0		RESISTOR 24.3K 1% .125W F TC=0+-100	19701	SFR25H
A1R528*	0698-4205	4	1	RESISTOR 21K 1% .125W F TC=0+-100	19701	SFR25H
A1R529	0698-0689	2	2	RESISTOR 88.5 .1% .125W F TC=0+-25	19701	5033R
A1R530	0698-0689	2		RESISTOR 88.5 .1% .125W F TC=0+-25	19701	5033R
A1R531	0683-5615	1	1	RESISTOR 560 5% .25W CF TC=0-400	77902	R-25J
A1R532	0698-4123	5		RESISTOR 499 1% .125W F TC=0+-100	19701	SFR25H

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A1R533	0699-0688	1	2	RESISTOR 78.4 .1% .125W F TC=0+-25	19701	5033R
A1R534	0699-0688	1		RESISTOR 78.4 .1% .125W F TC=0+-25	19701	5033R
A1R535	0698-8180	2		RESISTOR 4.22K .1% .125W F TC=0+-25	19701	5033R
A1R536	0699-0692	7		RESISTOR 1.4K .1% .125W F TC=0+-25	19701	5033R
A1R537	0699-0691	6	2	RESISTOR 306 .1% .125W F TC=0+-25	19701	5033R
A1R538	0698-8191	5	2	RESISTOR 12.5K .1% .125W F TC=0+-25	91637	CMF-55-1, T-9
A1R539	0699-0691	6		RESISTOR 306 .1% .125W F TC=0+-25	19701	5033R
A1R540	0698-8191	5		RESISTOR 12.5K .1% .125W F TC=0+-25	91637	CMF-55-1, T-9
A1R541	0698-0063	4	2	RESISTOR 5.23K 1% .125W F TC=0+-100	19701	SFR25H
A1R542	2100-3821	5	1	RESISTOR-TRMR 200 10% C TOP-ADJ 10-TRN	32997	3262W-DM3-201
A1R543	0698-0063	4		RESISTOR 5.23K 1% .125W F TC=0+-100	19701	SFR25H
A1R544	0698-4476	1	1	RESISTOR 10.2K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R547	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A1R548	0698-8235	8	1	RESISTOR 9.31K 1% .125W F TC=0+-25	19701	5033R
A1R549	0698-3274	5	1	RESISTOR 10K 1% .125W F TC=0+-25	19701	5033R
A1R550	2100-3089	7	2	RESISTOR-TRMR 5K 10% C TOP-ADJ 17-TRN	73138	67WR
A1R551	2100-3089	7		RESISTOR-TRMR 5K 10% C TOP-ADJ 17-TRN	73138	67WR
A1R552	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R553	0698-6943	1	1	RESISTOR 20K .1% .125W F TC=0+-50	19701	5033R
A1R554	0698-3193	7	1	RESISTOR 10K .25% .125W F TC=0+-50	19701	5033R
A1R556	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	19701	SFR25H
A1R557	0698-3154	0	1	RESISTOR 4.22K 1% .125W F TC=0+-100	19701	SFR25H
A1R558	0698-3515	7	1	RESISTOR 5.9K 1% .125W F TC=0+-100	19701	SFR25H
A1R559	2100-3210	6	2	RESISTOR-TRMR 10K 10% C TOP-ADJ 1-TRN	32997	3386P-Y46-103
1R559	0698-4493	2	1	RESISTOR 34K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R562	0698-3572	6	1	RESISTOR 60.4K 1% .125W F TC=0+-100	19701	SFR25H
A1R563	2100-3214	0		RESISTOR-TRMR 100K 10% C TOP-ADJ 1-TRN	32997	3386P-Y46-104
1R601	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
1R603	0698-3442	9	2	RESISTOR 237 .1% .125W F TC=0+-100	19701	SFR25H
A1R604	0698-3442	9		RESISTOR 237 1% .125W F TC=0+-100	19701	SFR25H
A1R605	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A1R606	0698-4424	9	1	RESISTOR 1.4K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R607	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A1R608	0757-0346	2	9	RESISTOR 10 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R609	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A1R610	0698-6447	0	2	RESISTOR 683.8 .1% .125W F TC=0+-25	19701	5033R
A1R611	0698-6447	0		RESISTOR 683.8 .1% .125W F TC=0+-25	19701	5033R
A1R612	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R613	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A1R614	0757-0424	7	1	RESISTOR 1.1K 1% .125W F TC=0+-100	19701	SFR25H
A1R615	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A1R616	0698-3132	4		RESISTOR 261 1% .125W F TC=0+-100	19701	SFR25H
A1R617	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R618	0698-7363	1	2	RESISTOR 75 .1% .125W F TC=0+-50	19701	5033R
A1R619	0698-7363	1		RESISTOR 75 .1% .125W F TC=0+-50	19701	5033R
A1R620	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R621	0698-4453	4	1	RESISTOR 402 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R701	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	19701	5033R
A1R702	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A1R703	0698-4439	6	1	RESISTOR 3.24K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R704	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	19701	5033R
A1R705	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R706	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R707	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
1R708	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A1R709	0757-0984	4	2	RESISTOR 10 1% .5W F TC=0+-100	19701	5053R
A1R710	0757-0984	4		RESISTOR 10 1% .5W F TC=0+-100	19701	5053R
A1R712	0683-1565	2	1	RESISTOR 15M 5% .25W CC TC=-900/+1200	01121	CB1565
1R801	0757-0440	7	2	RESISTOR 7.5K 1% .125W F TC=0+-100	19701	SFR25H
A1R802	0757-0440	7		RESISTOR 7.5K 1% .125W F TC=0+-100	19701	SFR25H
A1R803	0757-0446	3	1	RESISTOR 15K 1% .125W F TC=0+-100	19701	SFR25H
A1R804	0698-0845	2	2	RESISTOR 17.2K .1% .125W F TC=0+-25	19701	5033R
A1R805	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	19701	5033R
A1R806	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	19701	5033R
A1R807	0698-0845	2		RESISTOR 17.2K .1% .125W F TC=0+-25	19701	5033R
A1R808	0757-0278	9	3	RESISTOR 1.78K 1% .125W F TC=0+-100	19701	SFR25H
A1R809	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A1R810	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A1R811	0757-0278	9		RESISTOR 1.78K 1% .125W F TC=0+-100	19701	SFR25H
A1R812	0757-0278	9		RESISTOR 1.78K 1% .125W F TC=0+-100	19701	SFR25H

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A1R813	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A1R814	0757-0271	2	2	RESISTOR 124K 1% .125W F TC=0+-100	19701	SFR25H
A1R815	0698-3215	4	2	RESISTOR 499K 1% .125W F TC=0+-100	19701	SFR25H
A1R816	0698-3215	4		RESISTOR 499K 1% .125W F TC=0+-100	19701	SFR25H
A1R817	0757-0271	2		RESISTOR 124K 1% .125W F TC=0+-100	19701	SFR25H
A1R818	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	19701	SFR25H
A1R819	0757-0451	0	1	RESISTOR 24.3K 1% .125W F TC=0+-100	19701	SFR25H
A1R820	0683-5655	9	1	RESISTOR 5.6M 5% .25W CC TC=-900/+1100	01121	CB5655
A1R901	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	19701	SFR25H
A1R902	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A1R903	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R904	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R905	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R906	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R907	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R908	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A1R909	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R910	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R911	0757-0273	4		RESISTOR 3.01K 1% .125W F TC=0+-100	19701	SFR25H
A1R912	0757-0460	1	1	RESISTOR 61.9K 1% .125W F TC=0+-100	19701	SFR25H
A1R913	0757-0283	6		RESISTOR 2K 1% .125W F TC=0+-100	19701	SFR25H
A1R914	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R915	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A1R916	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A1R917	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A1R918	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R919	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A1R921	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A1R922	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	19701	SFR25H
A1R923	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A1R924	0757-0415	6	1	RESISTOR 475 1% .125W F TC=0+-100	19701	SFR25H
A1R925	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A1U101	1QG3-0073	7	1	ICC ANLG FREQ DAC-3314	28480	1QG3-0073
A1U102	1826-1042	5	1	IC OP AMP LOW-NOISE 8-DIP-P PKG	01295	
A1U103	1826-0522	4	2	IC OP AMP LOW-BIAS-H-IMPQ QUAD 14-DIP-P	01295	SN99856N
A1U202	1826-0346	0	3	IC OP AMP GP DUAL 8-DIP-P PKG	27014	SL32157
A1U203	1858-0040	8	1	TRANSISTOR ARRAY 16-PIN PLSTC DIP	3L585	90978
A1U261	1826-0346	0		IC OP AMP GP DUAL 8-DIP-P PKG	27014	SL32157
A1U301	1820-0493	6	3	IC OP AMP GP 8-DIP-P PKG	27014	SL10084
A1U302	1820-0493	6		IC OP AMP GP 8-DIP-P PKG	27014	SL10084
A1U303	1858-0063	5	1	TRANSISTOR ARRAY 14-PIN PLSTC DIP	3L585	90977
A1U360	1820-0803	2	1	IC GATE ECL OR-NOR TPL	04713	SC63470P105
A1U401	1826-0138	8	1	IC COMPARATOR GP QUAD 14-DIP-P PKG	27014	SL24958
A1U501	1826-0522	4		IC OP AMP LOW-BIAS-H-IMPQ QUAD 14-DIP-P	01295	SN99856N
A1U502**	03314-82501	9	1	SINE-SHAPER REPLACEMENT KIT	28480	03314-82501
NOTE						
The Sine-Shaper Kit comes equipped with preselected values for A1R506, A1R522, and A1R528.						
A1U503	1820-0493	6		IC OP AMP GP 8-DIP-P PKG	27014	SL10084
A1U504	1826-0777	1	1	ANALOG SWITCH 2 DPST 14 -DIP-P	17856	SDG30313
A1U701	1826-0519	9	1	IC OP AMP LOW-BIAS-H-IMPQ 8-DIP-P PKG	01295	SN99853P
A1U702	1826-0346	0		IC OP AMP GP DUAL 8-DIP-P PKG	27014	SL32157
A1U801	1820-1730	6	2	IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN58039N
A1U802	1826-0188	8	1	D/A 8-BIT 16-CERDIP BPLR	04713	SC25204L1
A1U803	1820-1568	8	1	IC BFR TTL LS BUS QUAD	01295	SN57451N
A1U804	1820-1440	5	1	IC LCH TTL LS QUAD	01295	SN57201N
A1U805	1826-0412	1	2	IC COMPARATOR PRCN DUAL 8-DIP-P PKG	27014	SL33675
A1U806	1826-0412	1		IC COMPARATOR PRCN DUAL 8-DIP-P PKG	27014	SL33675
A1U807	1820-1195	7	1	IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN53526N
A1U808	1820-1730	6		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN58039N
A1U901	1820-1216	3	1	IC DCDR TTL LS 3-TO-8-LINE 3-INP	01295	SN53522N
A1U902	1820-1997	7	1	IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN	27014	GDEA105
A1U903	1820-1197	9	1	IC GATE TTL LS NAND QUAD 2-INP	01295	SN53504N
A1U904	1820-1445	0	1	IC LCH TTL LS 4-BIT	01295	SN57206N
A1U905	1820-1211	8	1	IC GATE TTL LS EXCL-OR QUAD 2-INP	01295	SN53518N
A1W15	03314-61615	2	1	CABLE-TWISTED PAIR 143MM ML (VCO Cable)	28480	03314-61615
A1XU101A	1600-0882	1	2	STMP CONN STRIP 16 PIN	28480	1600-0882
A1XU101B	1600-0882	1		STMP CONN STRIP 16 PIN	28480	1600-0882

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A2	03314-66502	6	1	PC ASSY-MODE	28480	03314-66502
A2C101	0160-4571	8	11	CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A2C102	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A2C103	0160-4532	1	10	CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A2C105	0160-3847	9	25	CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C106	0160-6506	3	1	C-F .1UF 20% 50V CERMLr	28480	RPE121-97BZ5U104M50V
A2C107	0160-3914	1	1	CAPACITOR-FXD .01UF +-10% 100VDC CER	04222	SR201C103KAA
A2C108	0160-2225	5	1	CAPACITOR-FXD 2000PF +-5% 300VDC MICA	00853	
A2C109	0160-4810	8	1	CAPACITOR-FXD 330PF +-5% 100VDC CER	04222	SA101A331JAA
A2C111	0160-4805	1	2	CAPACITOR-FXD 47PF +-5% 100VDC CER 0+-30	04222	SA101A470JAA
A2C112	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A2C115	0160-4532	1		CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A2C116	0160-4808	4	1	CAPACITOR-FXD 470PF +-5% 100VDC CER	13606	292CCOG471J100B
A2C117	0160-4532	1		CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A2C118	0160-0161	4	1	CAPACITOR-FXD .01UF +-10% 200VDC POLYE	A02430	HEW-236M
A2C119	0160-4532	1		CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A2C201	0160-4532	1		CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A2C202	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C203	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C204	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C205	0160-4532	1		CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A2C206	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C207	0160-2250	6	1	CAPACITOR-FXD 5.1PF +-25PF 500VDC CER	52763	
A2C208	0160-1746	5	3	CAPACITOR-FXD 15UF+-10% 20VDC TA	13606	150D156X9020B2-DYS
A2C209	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A2C211	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A2C212	0160-4789	0	1	CAPACITOR-FXD 15PF +-5% 100VDC CER 0+-30	04222	SA106A150JAA
A2C213	0160-4532	1		CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A2C214	0160-4532	1		CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A2C215	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C216	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C217	0160-4532	1		CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A2C218	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A2C219	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C222	0160-0127	2	1	CAPACITOR-FXD 1UF +-20% 25VDC CER	13606	2C37Z5U105M050A
A2C223	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A2C224	0160-4532	1		CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A2C225	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	13606	2C37Z5U105M050A
A2C226	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	13606	2C37Z5U105M050A
A2C227	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	13606	2C37Z5U105M050A
A2C228	0160-4787	8	4	CAPACITOR-FXD 22PF +-5% 100VDC CER 0+-30	04222	SA106A220JAA
A2C229	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C231	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C232	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C233	0160-0291	3	1	CAPACITOR-FXD 1UF+-10% 35VDC TA	13606	150D105X9035A2-DYS
A2C235	0160-1746	5		CAPACITOR-FXD 15UF+-10% 20VDC TA	13606	150D156X9020B2-DYS
A2C236	0160-1746	5		CAPACITOR-FXD 15UF+-10% 20VDC TA	13606	150D156X9020B2-DYS
A2C301	0160-4801	7	1	CAPACITOR-FXD 100PF +-5% 100VDC CER	04222	SA101A101JAA
A2C302	0160-4787	8		CAPACITOR-FXD 22PF +-5% 100VDC CER 0+-30	04222	SA106A220JAA
A2C303	0160-4805	1		CAPACITOR-FXD 47PF +-5% 100VDC CER 0+-30	04222	SA101A470JAA
A2C304	0160-4812	0	1	CAPACITOR-FXD 220PF +-5% 100VDC CER	04222	SA101A221JAA
A2C305	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C306	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C307	0160-4811	9	1	CAPACITOR-FXD 270PF +-5% 100VDC CER	04222	SA101A271JAA
A2C308	0160-5348	9		CAPACITOR-FXD 51PF +-5% 100VDC CER 0+-30	K02587	
A2C309	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C311	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C312	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C313	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C314	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C315	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C316	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C317	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C318	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C319	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C320	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A2C321	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A2C322	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A2C401	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A2C404	0160-4787	8		CAPACITOR-FXD 22PF +-5% 100VDC CER 0+-30	04222	SA106A220JAA
A2C405	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	13606	2C37Z5U105M050A
A2C407	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	13606	2C37Z5U105M050A
A2C408	0160-4790	3	1	CAPACITOR-FXD 12PF +-5% 100VDC CER 0+-30	04222	SA106A120JAA
A2C409	0160-4814	2	1	CAPACITOR-FXD 150PF +-5% 100VDC CER	04222	SA101A151JAA
A2C411	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A2C413	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A2C415	0160-4787	8		CAPACITOR-FXD 22PF +-5% 100VDC CER 0+-30	04222	SA106A220JAA
A2CR101	1901-0040	1	13	DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A2CR102	1901-0376	6	4	DIODE-GEN PRP 35V 50MA DO-35	9N171	NDP202
A2CR103	1901-0376	6		DIODE-GEN PRP 35V 50MA DO-35	9N171	NDP202
A2CR104	1901-0376	6		DIODE-GEN PRP 35V 50MA DO-35	9N171	NDP202
A2CR105	1901-0376	6		DIODE-GEN PRP 35V 50MA DO-35	9N171	NDP202
A2CR106	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A2CR107	1902-0951	5	1	DIODE-ZNR 5.1V 5% DO-35 PD=4W TC=+.035%	04713	SZ30035-9RL
A2CR202	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A2CR203	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A2CR205	1901-0518	8	1	DIODE-SCHOTTKY SM SIG	28480	1901-0518
A2CR206	1901-0518	8		DIODE-SCHOTTKY SM SIG	28480	1901-0518
A2CR301	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A2CR302	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A2CR303	1901-0535	9	1	DIODE-SCHOTTKY SM SIG	28480	1901-0535
A2CR304	1901-0535	9		DIODE-SCHOTTKY SM SIG	28480	1901-0535
A2CR305	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A2CR306	1901-0518	8		DIODE-SCHOTTKY SM SIG	28480	1901-0518
A2CR307	1902-0958	2	1	DIODE-ZNR 10V 5% DO-35 PD=4W TC=+.075%	04713	SZ30035-16RL
A2CR311	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A2CR312	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A2CR313	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A2CR400	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A2CR403	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A2CR404	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A2CR501	1902-3345	7	2	DIODE-ZNR 51.1V 5% DO-35 PD=4W	04713	SZ30016-1386
A2CR502	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	07263	FDH 6308
A2CR503	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	07263	FDH 6308
A2CR504	1902-3345	7		DIODE-ZNR 51.1V 5% DO-35 PD=4W	04713	SZ30016-1386
A2H1	1855-0626	0		XSTR SMLFET QJPDN 092 3 0 005	04713	SS3723(TO-5 LD FORM)
A2H2	4330-0496	3	2	INSULATOR-BEAD GLASS	53101	KG12
A2H3	4330-0496	3		INSULATOR-BEAD GLASS	53101	KG12
A2H4	7121-4611	2	1	LABEL-INFORMATION .15-IN-WD .6-IN-LG	28480	L01003
A2J1	1251-6254	2	1	CONNECTOR-SGL CONT RTANG-F	91833	901
A2J2	1251-6254	2		CONNECTOR-SGL CONT RTANG-F	91833	901
A2J3	1251-6254	2		CONNECTOR-SGL CONT RTANG-F	91833	901
A2J4	1251-6254	2		CONNECTOR-SGL CONT RTANG-F	91833	901
A2J5	1251-6254	2		CONNECTOR-SGL CONT RTANG-F	91833	901
A2J6	1252-1478	4	1	CON-HEADER 22 CONT GP .100 SP	22526	68024-122
A2J7	1251-6854	8	1	CONN-POST TYPE .156-PIN-SPCG 4-CONT	27264	09-48-3044
A2J8	1251-3961	2	1	CONN-POST TYPE .156-PIN-SPCG 6-CONT	27264	09-48-3064
A2MP1	5040-7721	7	3	MOLD P.C. HNGE	28480	5040-7721
A2MP2	5040-7721	7		MOLD P.C. HNGE	28480	5040-7721
A2MP3	5040-7721	7		MOLD P.C. HNGE	28480	5040-7721
A2Q101	1854-0071	7	1	TRANSISTOR NPN SI PD=300MW FT=200MHZ	13606	CT-1200
A2Q102	1853-0412	8	1	TRANSISTOR PNP SI DARL TO-92 PD=625MW	04713	SPS7439
A2Q103	1854-0009	1	1	TRANSISTOR NPN SI PD=300MW FT=600MHZ	28480	1854-0009
A2Q106	1853-0036	2	1	TRANSISTOR PNP SI PD=310MW FT=250MHZ	04713	SPS3612
A2Q107	1855-0081	1	1	TRANSISTOR J-FET N-CHAN D-MODE SI	04713	SPF819
A2Q108	1855-0081	1		TRANSISTOR J-FET N-CHAN D-MODE SI	04713	SPF819
A2Q109	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	04713	SPS3612
A2Q111	1855-0410	0	1	TRANSISTOR J-FET N-CHAN D-MODE TO-18 SI	27014	SF51006
A2Q112	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	04713	SPS3612
A2Q113	1854-0215	1	1	TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611
A2Q114	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611
A2Q115	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	04713	SPS3612
A2Q202	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611
A2Q203	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	04713	SPS3612
A2Q204	1855-0689	5	1	XTR SML1JFET	04713	SS3723RLRA
A2Q205	1855-0410	0		TRANSISTOR J-FET N-CHAN D-MODE TO-18 SI	27014	SF51006

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A2Q301	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	04713	SPS3612
A2Q302	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	04713	SPS3612
A2Q303	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	04713	SPS3612
A2Q401	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611
A2Q402	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611
A2Q403	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611
A2Q501	1854-0071	7		TRANSISTOR NPN SI PD=300MW FT=200MHZ	13606	CT-1200
A2Q502	1853-0066	8	1	TRANSISTOR PNP SI TO-92 PD=625MW	07263	S 32263
A2Q503	1853-0264	8	1	TRANSISTOR PNP SI PD=310MW FT=100MHZ	04713	SPS6793
A2Q504	1854-0474	4	1	TRANSISTOR NPN SI PD=310MW FT=100MHZ	04713	SPS1172
A2R101	0757-0280	3	20	RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R107	0699-0034	1	1	RESISTOR 2.312K .25% .125W F TC=0+-50	19701	5033R
A2R108	2100-3212	8	2	RESISTOR-TRMR 200 10% C TOP-ADJ 1-TRN	32997	3386P-Y46-201
A2R109	0698-6320	8	4	RESISTOR 5K .1% .125W F TC=0+-25	91637	CMF-55-1, T-9
A2R111	0699-0122	8	1	RESISTOR 4.8K .1% .125W F TC=0+-25	19701	5033R
A2R113	2100-3210	6	2	RESISTOR-TRMR 10K 10% C TOP-ADJ 1-TRN	32997	3386P-Y46-103
A2R115	0757-0476	9	1	RESISTOR 301K 1% .125W F TC=0+-100	19701	SFR25H
A2R116	0698-4453	4	2	RESISTOR 402 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A2R117	0757-0442	9	39	RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R118	0683-4725	2	6	RESISTOR 4.7K 5% .25W CF TC=0-400	77902	R-25J
A2R119	0683-4725	2		RESISTOR 4.7K 5% .25W CF TC=0-400	77902	R-25J
A2R120	0757-0449	6	5	RESISTOR 20K 1% .125W F TC=0+-100	19701	SFR25H
A2R121	0757-0465	6	10	RESISTOR 100K 1% .125W F TC=0+-100	19701	SFR25H
A2R122	0683-6845	1	1	RESISTOR 680K 5% .25W CF TC=0-800	77902	R-25J
A2R123	0683-2055	7	1	RESISTOR 2M 5% .25W CF TC=0-900	77902	R-25J
A2R124	0683-4755	8	1	RESISTOR 4.7M 5% .25W CC TC=-900/+1100	01121	CB4755
A2R125	0683-1655	1	1	RESISTOR 1.6M 5% .25W CF TC=0-900	77902	R-25J
A2R126	0698-4543	3	1	RESISTOR 487K 1% .125W F TC=0+-100	19701	SFR25H
A2R127	0683-1055	5	1	RESISTOR 1M 5% .25W CF TC=0-800	77902	R-25J
A2R128	0757-0401	0	10	RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A2R131	0698-3279	0	4	RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A2R132	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A2R133	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R134	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R135	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	19701	SFR25H
A2R136	0698-7394	8	1	RESISTOR 698 .1% .125W F TC=0+-25	19701	5033R
A2R137	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R139	0698-4123	5	2	RESISTOR 499 1% .125W F TC=0+-100	19701	SFR25H
A2R141	0698-6320	8		RESISTOR 5K .1% .125W F TC=0+-25	91637	CMF-55-1, T-9
A2R142	0698-7447	2	1	RESISTOR 10K .1% .25W F TC=0+-25	19701	5043R
A2R143	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A2R145	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A2R146	0757-0449	6		RESISTOR 20K 1% .125W F TC=0+-100	19701	SFR25H
A2R147	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R148	0698-3442	9	1	RESISTOR 237 1% .125W F TC=0+-100	19701	SFR25H
A2R149	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R151	0698-3155	1	2	RESISTOR 4.64K 1% .125W F TC=0+-100	19701	SFR25H
A2R152	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R153	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	19701	SFR25H
A2R154	0698-4440	9	1	RESISTOR 3.4K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A2R155	0683-2225	3	1	RESISTOR 2.2K 5% .25W CF TC=0-400	77902	R-25J
A2R158	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R159	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R161	0698-4502	4	2	RESISTOR 64.9K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A2R162	0757-0449	6		RESISTOR 20K 1% .125W F TC=0+-100	19701	SFR25H
A2R163	0698-4502	4		RESISTOR 64.9K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A2R164	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R200	0757-0433	8	2	RESISTOR 3.32K 1% .125W F TC=0+-100	19701	SFR25H
A2R201	0757-0277	8	8	RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A2R202	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R203	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A2R204	0698-6358	2	2	RESISTOR 100K .1% .125W F TC=0+-25	19701	5033R
A2R205	2100-3211	7	1	RESISTOR-TRMR 1K 10% C TOP-ADJ 1-TRN	32997	3386P-Y46-102
A2R206	0698-6358	2		RESISTOR 100K 1% .125W F TC=0+-25	19701	5033R
A2R207	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A2R208	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A2R209	0757-0433	8		RESISTOR 3.32K 1% .125W F TC=0+-100	19701	SFR25H
A2R210	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R211	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	19701	SFR25H
A2R212	2100-3253	7	1	RESISTOR-TRMR 50K 10% C TOP-ADJ 1-TRN	32997	3386P-Y46-503

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A2R213	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A2R214	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A2R215	0698-6320	8		RESISTOR 5K .1% .125W F TC=0+-25	91637	CMF-55-1, T-9
A2R216	0698-6360	6	4	RESISTOR 10K .1% .125W F TC=0+-25	19701	5033R
A2R217	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R218	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R221	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R222	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R223	0757-0446	3		RESISTOR 15K 1% .125W F TC=0+-100	19701	SFR25H
A2R224	0757-0453	2	1	RESISTOR 30.1K 1% .125W F TC=0+-100	19701	SFR25H
A2R225	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A2R226	0764-0016	8	1	RESISTOR 1K 5% 2W MO TC=0+-200	102360	GS-3
A2R227	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R228	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A2R229	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R231	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R232	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	19701	SFR25H
A2R233	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	19701	SFR25H
A2R234	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R236	0757-0407	6	2	RESISTOR 200 1% .125W F TC=0+-100	19701	SFR25H
A2R237	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A2R238	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R239	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A2R241	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	19701	SFR25H
A2R242	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R243	0757-0407	6		RESISTOR 200 1% .125W F TC=0+-100	19701	SFR25H
A2R244	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R245	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R247	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R248	0698-4453	4		RESISTOR 402 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A2R249	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R250	0757-0469	0	1	RESISTOR 150K 1% .125W F TC=0+-100	19701	SFR25H
A2R251**	8159-0005	0	1	RESISTOR-ZERO OHMS 22 AWG LEAD DIA	20940	106
NOTE						
Only Revision A of the A2 board uses the zero Ohm resistor. Later revisions replace the resistor with a trace.						
A2R252	0757-0283	6	6	RESISTOR 2K 1% .125W F TC=0+-100	19701	SFR25H
A2R253	0698-4479	4	1	RESISTOR 14K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A2R255	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R256	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R258	0757-0346	2	1	RESISTOR 10 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A2R259	0683-4725	2		RESISTOR 4.7K 5% .25W CF TC=0-400	77902	R-25J
A2R260	1810-0269	3	1	NETWORK-RES 9-SIP 10.0K OHM X 8	13606	216CJ104
A2R261	0683-4725	2		RESISTOR 4.7K 5% .25W CF TC=0-400	77902	R-25J
A2R262	0683-4725	2		RESISTOR 4.7K 5% .25W CF TC=0-400	77902	R-25J
A2R263	0683-4725	2		RESISTOR 4.7K 5% .25W CF TC=0-400	77902	R-25J
A2R264	0698-6630	3	1	RESISTOR 20K .1% .125W F TC=0+-25	19701	5033R
A2R265	0698-6629	0	1	RESISTOR 60K .1% .125W F TC=0+-25	19701	5033R
A2R266	0698-5540	2	1	RESISTOR 1.1M 5% .25W CF TC=0-900	77902	R-25J
A2R267	2100-3210	6		RESISTOR-TRMR 10K 10% C TOP-ADJ 1-TRN	32997	33B6P-Y46-103
A2R268	0683-1015	7	2	RESISTOR 100 5% .25W CF TC=0-400	77902	R-25J
A2R301	0690-1021	0	1	RESISTOR 1K 10% 1W CC TC=0+647	01121	GB1021
A2R302	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R303	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R304	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R305	0698-4435	2	2	RESISTOR 2.49K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A2R306	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A2R307	0757-0413	4	1	RESISTOR 392 1% .125W F TC=0+-100	19701	SFR25H
A2R308	0698-4121	3	1	RESISTOR 11.3K 1% .125W F TC=0+-100	19701	SFR25H
A2R309	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A2R310	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R311	0698-4435	2		RESISTOR 2.49K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A2R312	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C	D	Qty.	Description	Mfr. Code	Mfr. Part Number
A2R313	0698-4123	5			RESISTOR 499 1% .125W F TC=0+-100	19701	SFR25H
A2R314	0698-3279	0			RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A2R315	0757-0401	0			RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A2R316	0698-3202	9		1	RESISTOR 1.74K 1% .125W F TC=0+-100	19701	SFR25H
A2R317	0698-4437	4		1	RESISTOR 2.94K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A2R318	0683-1015	7			RESISTOR 100 5% .25W CF TC=0-400	77902	R-25J
A2R319	0757-0280	3			RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R320	0683-5105	4		1	RESISTOR 51 5% .25W CF TC=0-400	77902	R-25J
A2R321	0683-1625	5		1	RESISTOR 1.6K 5% .25W CF TC=0-400	77902	R-25J
A2R322	0757-0422	5		1	RESISTOR 909 1% .125W F TC=0+-100	19701	SFR25H
A2R323	0698-5546	8		1	RESISTOR 174 1% .125W F TC=0+-25	91637	CMF-55-1, T-9
A2R324	0698-3445	2		1	RESISTOR 349 1% .125W F TC=0+-100	19701	SFR25H
A2R325	0757-0280	3			RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R326	0757-0280	3			RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R327	0757-0280	3			RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R328	0757-0280	3			RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R329	0757-0280	3			RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R331	0757-0283	6			RESISTOR 2K 1% .125W F TC=0+-100	19701	SFR25H
A2R332	0757-0283	6			RESISTOR 2K 1% .125W F TC=0+-100	19701	SFR25H
A2R333	0757-0442	9			RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R334	0757-0401	0		1	RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A2R335	0683-5115	6		1	RESISTOR 510 5% .25W CF TC=0-400	77902	R-25J
A2R336	0757-0465	6			RESISTOR 100K 1% .125W F TC=0+-100	19701	SFR25H
A2R401	0757-0449	6			RESISTOR 20K 1% .125W F TC=0+-100	19701	SFR25H
A2R402	0757-0449	6			RESISTOR 20K 1% .125W F TC=0+-100	19701	SFR25H
A2R405	0757-0442	9			RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R407	0757-0465	6			RESISTOR 100K 1% .125W F TC=0+-100	19701	SFR25H
A2R408	0757-0442	9			RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R409	0757-0442	9			RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R411	0683-1065	7		1	RESISTOR 10M 5% .25W CC TC=-900/+1100	01121	CB1065
A2R412	0757-0442	9			RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R413	0757-0442	9			RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R414	0757-0442	9			RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R415	0757-0465	6			RESISTOR 100K 1% .125W F TC=0+-100	19701	SFR25H
A2R416	0757-0442	9			RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R417	0698-6320	8			RESISTOR 5K .1% .125W F TC=0+-25	91637	CMF-55-1, T-9
A2R418	0698-6360	6			RESISTOR 10K .1% .125W F TC=0+-25	19701	5033R
A2R419	0698-6360	6			RESISTOR 10K .1% .125W F TC=0+-25	19701	5033R
A2R421	0757-0280	3			RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R422	0757-0288	1		2	RESISTOR 9.09K 1% .125W F TC=0+-100	19701	SFR25H
A2R424	0757-0465	6			RESISTOR 100K 1% .125W F TC=0+-100	19701	SFR25H
A2R425	0757-0442	9			RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R426	0757-0442	9			RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R427	2100-3212	8			RESISTOR-TRMR 200 10% C TOP-ADJ 1-TRN	32997	3386P-Y46-201
A2R428	0698-6321	9		1	RESISTOR 9.9K .1% .125W F TC=0+-25	91637	CMF-55-1, T-9
A2R429	2100-0554	5		1	RESISTOR-TRMR 500 10% C TOP-ADJ 1-TRN	32997	3386P-Y46-501
A2R431	0698-4444	3		1	RESISTOR 4.87K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A2R432	0757-0200	7		1	RESISTOR 5.62K 1% .125W F TC=0+-100	19701	SFR25H
A2R433	0757-0280	3			RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R434	0698-6360	6			RESISTOR 10K .1% .125W F TC=0+-25	19701	5033R
A2R435	0757-0442	9			RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R436	0757-0288	1			RESISTOR 9.09K 1% .125W F TC=0+-100	19701	SFR25H
A2R437	0757-0442	9			RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R438	0757-0435	0		1	RESISTOR 3.92K 1% .125W F TC=0+-100	19701	SFR25H
A2R439	0698-3179	9		1	RESISTOR 2.55K 1% .125W F TC=0+-100	19701	SFR25H
A2R441	0698-4432	9		1	RESISTOR 2.1K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A2R442	0698-3226	7		1	RESISTOR 6.49K 1% .125W F TC=0+-100	19701	SFR25H
A2R443	0757-0280	3			RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R444	0698-3493	0		1	RESISTOR 4.12K 1% .125W F TC=0+-100	19701	SFR25H
A2R455	0757-0401	0			RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A2R456	0757-0401	0			RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A2R501	0757-0280	3			RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R502	0757-0280	3			RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A2R503	0757-0442	9			RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R504	0757-0283	6			RESISTOR 2K 1% .125W F TC=0+-100	19701	SFR25H
A2R505	0757-0283	6			RESISTOR 2K 1% .125W F TC=0+-100	19701	SFR25H
A2R506	0757-0442	9			RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A2R507	0698-3279	0			RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A2R508	0757-0283	6			RESISTOR 2K 1% .125W F TC=0+-100	19701	SFR25H
A2R509	0764-0016	8			RESISTOR 1K 5% 2W MO TC=0+-200	102360	GS-3

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A2S501	3101-0642	5	1	SWITCH-SL DPDT MINTR .5A 125VAC/DC PC	79727	GI-152-0011
A2TP1	1251-0600	0	22	CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP2	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP3	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP4	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP5	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP6	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP7	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP8	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP9	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP10	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP11	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP12	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP13	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP14	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP15	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP16	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP17	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP18	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP19	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP20	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP21	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2TP22	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A2U101	1826-0547	3	3	IC OP AMP LOW-BIAS-H-IMPD DUAL 8-DIP-P	01295	SN99997P
A2U102	1821-0001	4	1	TRANSISTOR ARRAY 14-PIN PLSTC DIP	3L585	90962
A2U103	1826-0476	7	1	ANALOG SWITCH SPDT 8 -DIP-P	01295	SN99487P
A2U104	1826-0412	1	2	IC COMPARATOR PRCN DUAL 8-DIP-P PKG	27014	SL33675
A2U201	1826-0547	3		IC OP AMP LOW-BIAS-H-IMPD DUAL 8-DIP-P	01295	SN99997P
A2U202	1826-0547	3		IC OP AMP LOW-BIAS-H-IMPD DUAL 8-DIP-P	01295	SN99997P
A2U203	1826-0522	4	2	IC OP AMP LOW-BIAS-H-IMPD QUAD 14-DIP-P	01295	SN99856N
A2U204	1826-0519	9	1	IC OP AMP LOW-BIAS-H-IMPD 8-DIP-P PKG	01295	SN99853P
A2U205	1826-0412	1		IC COMPARATOR PRCN DUAL 8-DIP-P PKG	27014	SL33675
A2U206	1826-0081	0	1	IC OP AMP WB TO-99 PKG	27014	SL160376
A2U207	1826-0357	3	1	IC OP AMP WB TO-99 PKG	27014	SL32498
A2U208	1826-0907	9	1	ANALOG SWITCH 4 SPST 16 -DIP-P	17856	DG308ACJ
A2U209	1820-1245	8	1	IC DCDR TTL LS 2-TO-4-LINE DUAL 2-INP	01295	SN53620N
A2U211	1820-0471	0	1	IC INV TTL HEX 1-INP	01295	SN19235N
A2U212	1820-1545	1	2	ANALOG MULTIPLEXER 3 SPDT 16 -CERDIP	04713	SC43972LH
A2U213	1826-0684	9	1	D/A 12-BIT 18-CBRZ/SDR CMOS	24355	AD11/375
A2U214	1820-1447	2	3	IC TTL LS 16-BIT STAT RAM 45-NS 3-S	01295	SN57208N
A2U215	1820-1447	2		IC TTL LS 16-BIT STAT RAM 45-NS 3-S	01295	SN57208N
A2U216	1820-1447	2		IC TTL LS 16-BIT STAT RAM 45-NS 3-S	01295	SN57208N
A2U217	1820-1112	8	1	IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN53030N
A2U218	1820-1197	9	3	IC GATE TTL LS NAND QUAD 2-INP	04295	SN53504N
A2U219	1820-1216	3	1	IC DCDR TTL LS 3-TO-8-LINE 3-INP	01295	SN53522N
A2U221	1826-0944	4	1	D/A 8-BIT 16-CERDIP CMOS	32293	AD7523AD
A2U222	1820-1730	6	6	IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN58039N
A2U301	1820-1275	4	1	IC GATE TTL S-NOR DUAL 5-INP	01295	SN48015N
A2U302	1820-1278	7	4	IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN53646N
A2U303	1820-1278	7		IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN53646N
A2U304	1820-1278	7		IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN53646N
A2U305	1820-1206	1	1	IC GATE TTL LS NOR TPL 3-INP	01295	SN53513N
A2U306	1820-0629	0	2	IC FF TTL S J-K NEG-EDGE-TRIG	01295	SN23357N
A2U307	1820-1279	8	1	IC CNTR TTL LS DECD UP/DOWN SYNCHRO	01295	SN53645
A2U308	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN53504N
A2U309	1820-1322	2	1	IC GATE TTL S NOR QUAD 2-INP	01295	SN84050N
A2U310	1820-0693	8	2	IC FF TTL S D-TYPE POS-EDGE-TRIG	01295	SN24661N
A2U311	1820-0693	8		IC FF TTL S D-TYPE POS-EDGE-TRIG	01295	SN24661N
A2U312	1820-1158	2	3	IC GATE TTL S AND-OR-INV DUAL 2-INP	01295	SN47460N
A2U313	1820-0629	0		IC FF TTL S J-K NEG-EDGE-TRIG	01295	SN23357N
A2U314	1820-1278	7		IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN53646N
A2U315	1820-1158	2		IC GATE TTL S AND-OR-INV DUAL 2-INP	01295	SN47460N
A2U316	1820-1158	2		IC GATE TTL S AND-OR-INV DUAL 2-INP	01295	SN47460N
A2U317	1820-1442	7	1	IC CNTR TTL LS DECD ASYNCHRO	01295	SN57203
A2U318	1820-1211	8	1	IC GATE TTL LS EXCL-OR QUAD 2-INP	01295	SN53518N
A2U319	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN53504N
A2U320	1820-1428	9	1	IC MUXR/DATA-SEL TTL LS 2-TO-1-LINE QUAD	01295	SN57189N
A2U322	1820-1730	6		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN58039N
A2U323	1820-1730	6		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN58039N
A2U324	1820-1730	6		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN58039N
A2U325	1820-1730	6		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN58039N
A2U326	1820-1491	6	1	IC BFR TTL LS NON-INV HEX 1-INP	01295	SN57383N
A2U327	1820-1440	5	1	IC LCH TTL LS QUAD	01295	SN57201N
A2U328	1820-0907	7	1	IC GATE TTL NAND TPL 3-INP	01295	SN36625
A2U329	1820-1422	3	1	IC MV TTL LS MONOSTBL RETRIG	01295	SN57183

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A2U331	1826-0755	5	1	IC COMPARATOR HS 14-DIP-P PKG	18324	CC3882
A2U401	1820-1545	1		ANALOG MULTIPLEXER 3 SPDT 16 -CERDIP	04713	SC43972LH
A2U402	1826-0522	4		IC OP AMP LOW-BIAS-H-IMPD QUAD 14-DIP-P	01295	SN99856N
A2U404	1820-1730	6		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN58039N
A2U405	1826-0188	8	1	D/A 8-BIT 16-CERDIP BPLR	04713	SC25204L1
A2U406	1826-0138	8	1	IC COMPARATOR,GP QUAD 14-DIP-P PKG	27014	SL24958

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A3	03314-66503	7	1	PC ASSY-CONT-PWR	28480	03314-66503
A3B1	1420-0278	7	1	BATTERY 2.9V .72A-HR LI/S-DIOX W-FLEX	P01121	B9511
A3C2	0160-4801	7	6	CAPACITOR-FXD 100PF +-5% 100VDC CER	04222	SA101A101JAA
A3C3	0160-4801	7		CAPACITOR-FXD 100PF +-5% 100VDC CER	04222	SA101A101JAA
A3C4	0160-4801	7		CAPACITOR-FXD 100PF +-5% 100VDC CER	04222	SA101A101JAA
A3C5	0160-4801	7		CAPACITOR-FXD 100PF +-5% 100VDC CER	04222	SA101A101JAA
A3C7	0160-4812	0	2	CAPACITOR-FXD 220PF +-5% 100VDC CER	04222	SA101A221JAA
A3C8	0160-4812	0		CAPACITOR-FXD 220PF +-5% 100VDC CER	04222	SA101A221JAA
A3C9	0160-4571	8	21	CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C10	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C11	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C12	0160-3847	9	2	CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A3C13	0160-4532	1	2	CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A3C14	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C15	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C16	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C17	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C18	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C19	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C20	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C21	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C22	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C23	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C24	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C25	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C26	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C27	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C28	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C29	0160-0128	3	1	CAPACITOR-FXD 2.2UF +-20% 50VDC CER	13606	3C37Z5U225M050A
A3C100	0180-3081	5	1	CAPACITOR-FXD 3000UF+50-10% 35VDC AL	13606	673D335
A3C101	0180-3082	6	1	CAPACITOR-FXD 1500UF+50-10% 35VDC AL	13606	673D336
A3C102	0160-0127	2	1	CAPACITOR-FXD 1UF +-20% 25VDC CER	13606	2C37Z5U105M050A
A3C103	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	13606	2C37Z5U105M050A
A3C104	0160-0362	7	1	CAPACITOR-FXD 510PF +-5% 300VDC MICA	00853	
A3C105	0180-2686	4	1	CAPACITOR-FXD 470UF+100-10% 25VDC AL	13606	672D129
A3C106	0180-1746	5	3	CAPACITOR-FXD 15UF+-10% 20VDC TA	13606	150D156X9020B2-DYS
A3C107	0180-1746	5		CAPACITOR-FXD 15UF+-10% 20VDC TA	13606	150D156X9020B2-DYS
A3C108	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C109	0160-4571	8	1	CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C110	0180-1746	5		CAPACITOR-FXD 15UF+-10% 20VDC TA	13606	150D156X9020B2-DYS
A3C111	0180-0229		3	CAPACITOR-FXD 33UF+-10% 10VDC TA		
A3C112	0160-4801	7		CAPACITOR-FXD 100PF +-5% 100VDC CER	04222	SA101A101JAA
A3C113	0160-4801	7		CAPACITOR-FXD 100PF +-5% 100VDC CER	04222	SA101A101JAA
A3C114	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C115	0180-0058	0	1	CAPACITOR-FXD 50UF+75-10% 25VDC AL	13606	30D506G025CC2-DSM
A3C116	0180-0058	0		CAPACITOR-FXD 50UF+75-10% 25VDC AL	13606	30D506G025CC2-DSM
A3C117	0160-4789	0	1	CAPACITOR-FXD 15PF +-5% 100VDC CER 0+-30	04222	SA106A150JAA
A3C118	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A3C119	0180-0229	7		CAPACITOR-FXD 33UF+-10% 10VDC TA	13606	150D336X9010B2-DYS
A3C120	0180-0229	7		CAPACITOR-FXD 33UF+-10% 10VDC TA	13606	150D336X9010B2-DYS
A3C122	0160-4814	2	1	CAPACITOR-FXD 150PF +-5% 100VDC CER	04222	SA101A151JAA
A3C123	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A3C124	0160-4532	1		CAPACITOR-FXD 1000PF +-20% 50VDC CER	13606	592CX7R102M050B
A3CR1	1901-0535	9	1	DIODE-SCHOTTKY SM SIG	28480	1901-0535
A3CR2	1901-0535	9		DIODE-SCHOTTKY SM SIG	28480	1901-0535
A3CR3	1901-0040	1	15	DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A3CR4	1990-1121		1	LED-LAMP LUM		
A3CR5	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A3CR6	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A3CR7	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A3CR8	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A3CR100	1906-0080	9	1	DIODE-FW BRDG 600V 10A	27777	VJ647
A3CR104	1902-0960	6	1	DIODE-ZNR 12V 5% DO-35 PD=.4W TC=+.077%	04713	SZ30035-18RL
A3CR105	1902-0960	6	1	DIODE-ZNR 12V 5% DO-35 PD=.4W TC=+.077%	04713	SZ30035-18RL
A3CR106	1902-0958	2	1	DIODE-ZNR 10V 5% DO-35 PD=.4W TC=+.075%	04713	SZ30035-16RL
A3CR107	1902-0777	3	1	DIODE-ZNR 1N825 6.2V 5% DO-7 PD=.4W	04713	SZ14376RL

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A3CR108	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A3CR109	1901-0782	8	1	DIODE-SCHOTTKY 1N5821 30V 3A	04713	SBR5401
A3CR111	1902-0953	7	1	DIODE-ZNR 6.2V 5% DO-35 PD=.4W TC=+.053%	04713	SZ30035-11RL
A3CR112	1902-0766	0	1	DIODE-ZNR 18.2V 5% DO-35 PD=.4W	04713	SZ30016-1257
A3CR113	1901-0704	4	2	DIODE-GEN PRP 1N4002 100V 1A DO-41	P01202	1N4002
A3CR114	1901-0704	4		DIODE-GEN PRP 1N4002 100V 1A DO-41	P01202	1N4002
A3CR115	1884-0266	5	1	THYRISTOR-SCR 2N6400 TO-220AB VRRM=50	04713	SCR1826
A3CR116	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A3CR117	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A3CR118	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A3CR119	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A3CR120	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A3CR121	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A3CR122	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A3CR123	1902-3301	5	1	DIODE-ZNR 34.8V 5% DO-35 PD=.4W	04713	SZ30016-1338
A3CR124	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A3CR125	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A3H1	1200-0185	9	1	INSULATOR-XSTR NYLON	13103	7717-86N RED
A3H2	1200-0521	7	1	CON-SKT IC	C01032	CA-24-200-DL
A3H3	7121-4611	2	1	LABEL-INFORMATION .15-IN-WD .6-IN-LG	28480	L01003
A3J1	1251-5854	6	1	CON-HEADER 16 CONT GP .100 SP		
A3J2	1252-1478	4	2	CON-HEADER 22 CONT GP .100 SP	22526	68024-122
A3J3	1252-1478	4	1	CON-HEADER 22 CONT GP .100 SP	22526	68024-122
A3J4	1200-0888	9	1	SOCKET-IC 24-CONT DIP DIP-SLDR	C01032	CA-24S-10SD
A3J5	1251-4822	6	6	CONN-POST TYPE .100-PIN-SPCG 3-CONT	27264	22-03-2031
A3J5A	1258-0141	8	6	CON-JUMPER REM .025P	22526	65474-004
A3J6	1251-4822	6		CONN-POST TYPE .100-PIN-SPCG 3-CONT	27264	22-03-2031
A3J6A	1258-0141	8		CON-JUMPER REM .025P	22526	65474-004
A3J7	1251-4822	6		CONN-POST TYPE .100-PIN-SPCG 3-CONT	27264	22-03-2031
A3J7A	1258-0141	8		CON-JUMPER REM .025P	22526	65474-004
A3J9	1251-4822	6		CONN-POST TYPE .100-PIN-SPCG 3-CONT	27264	22-03-2031
A3J9A	1258-0141	8		CON-JUMPER REM .025P	22526	65474-004
A3J10	1251-4822	6		CONN-POST TYPE .100-PIN-SPCG 3-CONT	27264	22-03-2031
A3J10A	1258-0141	8		CON-JUMPER REM .025P	22526	65474-004
A3J11	1251-4822	6		CONN-POST TYPE .100-PIN-SPCG 3-CONT	27264	22-03-2031
A3J11A	1258-0141	8		CON-JUMPER REM .025P	22526	65474-004
A3J101	1251-4246	8	1	CONN-POST TYPE .156-PIN-SPCG 3-CONT	27264	09-65-1031
A3J102	1251-4484	6	1	CONN-POST TYPE .100-PIN-SPCG 4-CONT	27264	22-03-2041
A3L1	9140-0393	1	1	INDUCTOR RF-CH-MLD 20UH 5% .166DX.385LG	24226	15M202J
A3L2	9100-3912	2	1	INDUCTOR RF-CH-MLD 15UH 5% .166DX.385LG	24226	15M152J
A3L100	9100-3017	8	1	INDUCTOR (MISC ITEM)	24226	
A3L101	9140-0261	2	1	INDUCTOR RF-CH-MLD 100NH 5% .166DX.385LG	24226	15M100J
A3L102	9100-3334	2	1	INDUCTOR 25UH 10% .3D	99484	ES-2638
A3MP1	5040-7787	5	3	MOLD PC HINGE-HALF	28480	5040-7787
A3MP2	5040-7787	5		MOLD PC HINGE-HALF	28480	5040-7787
A3MP3	5040-7787	5		MOLD PC HINGE-HALF	28480	5040-7787
A3MP7L	03314-00604	1	1	SHTF SHLD-CONT/HTSK AL	28480	03314-00604
A3MP7M	03314-24101	3	1	MOLD INSULATOR-CONN	28480	03314-24101
A3MP100A	0340-0564	3	3	INSULATOR-XSTR THRM-CNDCT	55285	7403-09FR-51
A3MP100B	3050-0440	2	2	WASHER-SHLDR NO. 4 .115-IN-ID .2-IN-OD	86928	5607-45
A3MP101A	0340-0564	3		INSULATOR-XSTR THRM-CNDCT	55285	7403-09FR-51
A3MP101B	3050-0440	2		WASHER-SHLDR NO. 4 .115-IN-ID .2-IN-OD	86928	5607-45
A3MP108A	0340-0564	3		INSULATOR-XSTR THRM-CNDCT	55285	7403-09FR-51
A3Q1	1853-0563	0	14	XTR SML1PNP SI 2N3906 TXXXX	04713	SPS3612RLRA
A3Q2	1853-0563	0		XTR SML1PNP SI 2N3906 TXXXX	04713	SPS3612RLRA
A3Q3	1854-1028	6	6	TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611RLRA
A3Q4	1854-1028	6		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611RLRA
A3Q5	1854-1028	6		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611RLRA
A3Q6	1853-0563	0		XTR SML1PNP SI 2N3906 TXXXX	04713	SPS3612RLRA
A3Q7	1853-0563	0		XTR SML1PNP SI 2N3906 TXXXX	04713	SPS3612RLRA
A3Q8	1853-0563	0		XTR SML1PNP SI 2N3906 TXXXX	04713	SPS3612RLRA
A3Q9	1853-0563	0		XTR SML1PNP SI 2N3906 TXXXX	04713	SPS3612RLRA
A3Q10	1853-0563	0		XTR SML1PNP SI 2N3906 TXXXX	04713	SPS3612RLRA
A3Q100	1853-0450	4	1	TRANSISTOR PNP SI TO-220AB PD=60W	04713	SJE1980
A3Q101	1854-0800	0	1	TRANSISTOR NPN SI TO-220AB PD=60W	04713	SJE1996
A3Q102	1853-0563	0		XTR SML1PNP SI 2N3906 TXXXX	04713	SPS3612RLRA
A3Q103	1854-1028	6		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611RLRA
A3Q104	1854-1028	6		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611RLRA
A3Q105	1853-0563	0		XTR SML1PNP SI 2N3906 TXXXX	04713	SPS3612RLRA
A3Q106	1854-1028	6		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611RLRA

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A3Q107	1853-0563	0		XTR SML1PNP SI 2N3906 TXXXX	04713	SPS3612RLRA
A3Q108	1853-0251	3	1	TRANSISTOR PNP SI PD=90W FT=2MHZ	04713	SJE912
A3Q109	1853-0563	0		XTR SML1PNP SI 2N3906 TXXXX	04713	SPS3612RLRA
A3Q111	1853-0012	4	1	TRANSISTOR PNP 2N2904A SI TO-39 PD=600MW	04713	SS1776K
A3Q112	1854-1028	6		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611RLRA
A3Q113	1853-0563	0		XTR SML1PNP SI 2N3906 TXXXX	04713	SPS3612RLRA
A3Q114	1853-0563	0		XTR SML1PNP SI 2N3906 TXXXX	04713	SPS3612RLRA
A3Q115	1853-0563	0		XTR SML1PNP SI 2N3906 TXXXX	04713	SPS3612RLRA
A3Q116	1854-1028	6		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611RLRA
A3R1	0698-3558	8	1	RESISTOR 4.02K 1% .125W F TC=0+-100	19701	SFR25H
A3R2	0683-1065	7	1	RESISTOR 10M 5% .25W CC TC=-900/+1100	01121	CB1065
A3R3	0757-0401	0	3	RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A3R4	0698-3279	0	3	RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A3R5	0757-0384	8	6	RESISTOR 20 1% .125W F TC=0+-100	19701	SFR25H
A3R6	0757-0384	8		RESISTOR 20 1% .125W F TC=0+-100	19701	SFR25H
A3R7	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A3R8	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A3R9	0757-0384	8		RESISTOR 20 1% .125W F TC=0+-100	19701	SFR25H
A3R10	0757-0384	8		RESISTOR 20 1% .125W F TC=0+-100	19701	SFR25H
A3R12	0698-4480	7	1	RESISTOR 15.8K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A3R13	0757-0280	3	5	RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A3R15	0757-0449	6	1	RESISTOR 20K 1% .125W F TC=0+-100	19701	SFR25H
A3R16	1810-0269	3	4	NETWORK-RES 9-SIP 10.0K OHM X B	13606	216CJ104
A3R17	8159-0005	3		RESISTOR ZERO OHMS 22 AWG LEAD DIA	20940	106
A3R18	0757-0465	6	2	RESISTOR 100K 1% .125W F TC=0+-100	19701	SFR25H
A3R20	1810-0269	3		NETWORK-RES 9-SIP 10.0K OHM X B	13606	216CJ104
A3R21	0757-0442	9	21	RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R22	1810-0269	3		NETWORK-RES 9-SIP 10.0K OHM X B	13606	216CJ104
A3R23	1810-0269	3		NETWORK-RES 9-SIP 10.0K OHM X B	13606	216CJ104
A3R24	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R25	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R26	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R27	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R28	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R29	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R30	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R31	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R33	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A3R35	0683-3325	6	2	RESISTOR 3.3K 5% .25W CF TC=0-400	77902	R-25J
A3R36	0683-5115	6	10	RESISTOR 510 5% .25W CF TC=0-400	77902	R-25J
A3R37	0683-2025	1	7	RESISTOR 2K 5% .25W CF TC=0-400	77902	R-25J
A3R38	0683-2415	3	1	RESISTOR 240 5% .25W CF TC=0-400	77902	R-25J
A3R39	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A3R40	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R41	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R42	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R43	0757-0391	7	1	RESISTOR 39.2 1% .125W F TC=0+-100	19701	SFR25H
A3R44	0683-2025	1		RESISTOR 2K 5% .25W CF TC=0-400	77902	R-25J
A3R45	0683-2025	1		RESISTOR 2K 5% .25W CF TC=0-400	77902	R-25J
A3R46	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A3R47	0683-3325	6		RESISTOR 3.3K 5% .25W CF TC=0-400	77902	R-25J
A3R48	0683-5115	6		RESISTOR 510 5% .25W CF TC=0-400	77902	R-25J
A3R49	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R50	0757-0462	3	1	RESISTOR 75K 1% .125W F TC=0+-100	19701	SFR25H
A3R51	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	19701	SFR25H
A3R52	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R53	0757-0384	8		RESISTOR 20 1% .125W F TC=0+-100	19701	SFR25H
A3R54	0757-0384	8		RESISTOR 20 1% .125W F TC=0+-100	19701	SFR25H
A3R58	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A3R59	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A3R60	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A3R61	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R64	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R65	0698-3443	0	1	RESISTOR 287 1% .125W F TC=0+-100	19701	SFR25H
A3R100	0811-3079	0	2	RESISTOR .51 5% .5W PW TC=0+-300	102360	BW20
A3R101	0811-3079	0		RESISTOR .51 5% .5W PW TC=0+-300	102360	BW20
A3R102	0683-5115	6		RESISTOR 510 5% .25W CF TC=0-400	77902	R-25J
A3R103	0683-5115	6		RESISTOR 510 5% .25W CF TC=0-400	77902	R-25J
A3R104	0757-0452	1	2	RESISTOR 27.4K 1% .125W F TC=0+-100	19701	SFR25H
A3R105	0757-0452	1		RESISTOR 27.4K 1% .125W F TC=0+-100	19701	SFR25H

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A3R106	0683-5115	6		RESISTOR 510 5% .25W CF TC=0-400	77902	R-25J
A3R107	0683-5115	6		RESISTOR 510 5% .25W CF TC=0-400	77902	R-25J
A3R108	0683-4715	0	2	RESISTOR 470 5% .25W CF TC=0-400	77902	R-25J
A3R109	0683-4715	0		RESISTOR 470 5% .25W CF TC=0-400	77902	R-25J
A3R110	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R111	0698-8249	4	1	RESISTOR 23.7K 1% .125W F TC=0+-25	19701	5033R
A3R112	0698-5542	4	2	RESISTOR 20K 1% .125W F TC=0+-25	91837	CMF-55-1, T-9
A3R113	2100-3273	1	1	RESISTOR-TRMR 2K 10% C SIDE-ADJ 1-TRN	32997	3386X-Y48-202
A3R114	2100-3351	6	1	RESISTOR-TRMR 500 10% C SIDE-ADJ 1-TRN	32997	3386X-Y48-501
A3R115	0698-8983	9	1	RESISTOR 16.9K 1% .1W F TC=0+-10	19701	5023Z
A3R118	0698-5542	4		RESISTOR 20K 1% .125W F TC=0+-25	91837	CMF-55-1, T-9
A3R117	0698-3512	4	1	RESISTOR 1.18K 1% .125W F TC=0+-100	19701	SFR25H
A3R118	0683-1045	3	3	RESISTOR 100K 5% .25W CF TC=0-400	77902	R-25J
A3R119	0683-5115	6		RESISTOR 510 5% .25W CF TC=0-400	77902	R-25J
A3R120	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R121	0683-5115	6		RESISTOR 510 5% .25W CF TC=0-400	77902	R-25J
A3R122	0683-5125	8	7	RESISTOR 5.1K 5% .25W CF TC=0-400	77902	R-25J
A3R123	0683-1035	1	4	RESISTOR 10K 5% .25W CF TC=0-400	77902	R-25J
A3R124	0683-1035	1		RESISTOR 10K 5% .25W CF TC=0-400	77902	R-25J
A3R125	0683-1045	3		RESISTOR 100K 5% .25W CF TC=0-400	77902	R-25J
A3R126	0683-3335	8	2	RESISTOR 33K 5% .25W CF TC=0-400	77902	R-25J
A3R127	0683-3335	8		RESISTOR 33K 5% .25W CF TC=0-400	77902	R-25J
A3R128	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R129	0698-4438	5	1	RESISTOR 3.09K 1% .125W F TC=0+-100	91837	CMF-55-1, T-1
A3R130	0683-5115	6		RESISTOR 510 5% .25W CF TC=0-400	77902	R-25J
A3R131	0698-3215	4	1	RESISTOR 499K 1% .125W F TC=0+-100	19701	SFR25H
A3R132	0683-1055	6	1	RESISTOR 1M 5% .25W CF TC=0-800	77902	R-25J
A3R133	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R134	0698-0063	4	1	RESISTOR 5.23K 1% .125W F TC=0+-100	19701	SFR25H
A3R136	0683-1045	3		RESISTOR 100K 5% .25W CF TC=0-400	77902	R-25J
A3R137	0683-1035	1		RESISTOR 10K 5% .25W CF TC=0-400	77902	R-25J
A3R138	0683-2025	1		RESISTOR 2K 5% .25W CF TC=0-400	77902	R-25J
A3R139	0683-2025	1		RESISTOR 2K 5% .25W CF TC=0-400	77902	R-25J
A3R140	0683-1035	1		RESISTOR 10K 5% .25W CF TC=0-400	77902	R-25J
A3R141	0683-1035	1	1	RESISTOR 10K 5% .25W CF TC=0-400	77902	R-25J
A3R143	0683-5125	8		RESISTOR 5.1K 5% .25W CF TC=0-400	77902	R-25J
A3R144	0683-1315	0	1	RESISTOR 130 5% .25W CF TC=0-400	77902	R-25J
A3R145	0683-1025	9	1	RESISTOR 1K 5% .25W CF TC=0-400	77902	R-25J
A3R146	0757-0450	9	1	RESISTOR 22.1K 1% .125W F TC=0+-100	19701	SFR25H
A3R147	0698-3279	0		RESISTOR 4.99K 1% .125W F TC=0+-100	19701	SFR25H
A3R148	0683-2025	1		RESISTOR 2K 5% .25W CF TC=0-400	77902	R-25J
A3R151	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A3R152	0683-2025	1		RESISTOR 2K 5% .25W CF TC=0-400	77902	R-25J
A3R153	0683-5115	6		RESISTOR 510 5% .25W CF TC=0-400	77902	R-25J
A3R154	0683-0275	9	1	RESISTOR 2.7 5% .25W CF TC=0-400	77902	R-25J
A3R250	0683-5125	8		RESISTOR 5.1K 5% .25W CF TC=0-400	77902	R-25J
A3R251	0683-5125	8		RESISTOR 5.1K 5% .25W CF TC=0-400	77902	R-25J
A3R252	0683-5125	8		RESISTOR 5.1K 5% .25W CF TC=0-400	77902	R-25J
A3R253	0683-5125	8		RESISTOR 5.1K 5% .25W CF TC=0-400	77902	R-25J
A3R254	0683-5125	8		RESISTOR 5.1K 5% .25W CF TC=0-400	77902	R-25J
A3S1	3101-2094	5	1	SWITCH-RKR DIP-RKR-ASSY B-1A .05A 30VDC	81073	76S808S
A3SA-CK	1460-2201	4	15	RADIAL TEST PIN .100		
A3SA-GD	1460-2201	4		RADIAL TEST PIN .100		
A3S3/5	1460-2201	4		RADIAL TEST PIN .100		
A3S7TP	1460-2201	4		RADIAL TEST PIN .100		
A3SA8TP	1460-2201	4		RADIAL TEST PIN .100		
A3SASTP	1460-2201	4		RADIAL TEST PIN .100		
A3STR	1460-2201	4		RADIAL TEST PIN .100		
A3P0	1460-2201	4		RADIAL TEST PIN .100		
A3TP1	1460-2201	4		RADIAL TEST PIN .100		
A3TP2	1460-2201	4		RADIAL TEST PIN .100		
A3TP3	1460-2201	4		RADIAL TEST PIN .100		
A3TP4	1460-2201	4		RADIAL TEST PIN .100		
A3TP5	1460-2201	4		RADIAL TEST PIN .100		
A3TP6	1460-2201	4		RADIAL TEST PIN .100		
A3TP7	1460-2201	4		RADIAL TEST PIN .100		
A3TP7	0360-0077	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	00866	1601-HP
A3U100	1828-0139	9	1	IC OP AMP GP DUAL B-DIP-P PKG	04713	SC25137P1
A3U101	1828-0180	0	1	IC TIMER TTL MONO/ASTBL	18324	CJ748N
A3U102	1828-0138	8	1	IC COMPARATOR GP QUAD 14-DIP-P PKG	27014	SL24958

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A3U200	1820-1199	1	1	IC INV TTL LS HEX 1-INP	01295	SN53506N
A3U201	1820-0693	8	1	IC FF TTL S D-TYPE POS-EDGE-TRIG	01295	SN24661N
A3U202	1820-0328	6	1	IC GATE TTL NOR QUAD 2-INP	01295	SN44467
A3U203	1820-2019	6	1	IC SCHMITT-TRIG CMOS HEX	04713	SC45114PK
A3U204	1820-1112	8	4	IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN53030N
A3U205	1820-1442	7	1	IC CNTR TTL LS DECD ASYNCHRO	01295	SN57203
A3U206	1820-1480	3	1	IC-MPU: CLK FREQ=1 MHZ	04713	SC44001LK
A3U207	03314-60310	2	1	EPROM-PROGRAMMED	28480	03314-60310
A3U208	03314-60311	3	1	EPROM-PROGRAMMED	28480	03314-60311
A3U211	1818-3286	6	1	IC CMOS 16384 (16K) STAT RAM 200-NS 3-S	T01118	TC5518CPL-20
A3U213	1820-2075	4	3	IC TRANSCEIVER TTL LS BUS OCTL	01295	SN59111N
A3U214	1820-2075	4	1	IC TRANSCEIVER TTL LS BUS OCTL	01295	SN59111N
A3U215	1820-2102	8	2	IC LCH TTL LS D-TYPE OCTL	01295	SN59195N
A3U216	1820-2102	8	1	IC LCH TTL LS D-TYPE OCTL	01295	SN59195N
A3U217	1820-1112	8	1	IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN53030N
A3U218	1820-1240	3	1	IC DCDR TTL S 3-TO-8-LINE 3-INP	01295	SN47883N
A3U219	1820-1216	3	1	IC DCDR TTL LS 3-TO-8-LINE 3-INP	01295	SN53522N
A3U221	1820-1322	2	1	IC GATE TTL S NOR QUAD 2-INP	01295	SN84050N
A3U222	1820-1197	9	2	IC GATE TTL LS NAND QUAD 2-INP	01295	SN53504N
A3U223	1820-1203	8	1	IC GATE TTL LS AND TPL 3-INP	01295	SN53510N
A3U224	1820-1197	9	1	IC GATE TTL LS NAND QUAD 2-INP	01295	SN53504N
A3U225	1820-1112	8	1	IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN53030N
A3U226	1820-1196	8	2	IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN53525N
A3U227	1820-1112	8	1	IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN53030N
A3U228	1820-1991	1	1	IC CNTR TTL LS DECD DUAL 4-BIT	07263	SL66293
A3U229	1820-1198	0	1	IC GATE TTL LS NAND QUAD 2-INP	01295	SN53505N
A3U230	1820-1196	8	1	IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN53525N
A3U231	1820-1491	6	1	IC BFR TTL LS NON-INV HEX 1-INP	01295	SN57383N
A3U232	1820-2005	0	1	IC-PROGRAMMABLE INTERVAL TIMER	S0545	UPD8253D-2
A3U235	1820-2075	4	1	IC TRANSCEIVER TTL LS BUS OCTL	01295	SN59111N
A3U237	1820-1202	7	1	IC GATE TTL LS NAND TPL 3-INP	01295	SN53509N
A3U239	1820-1206	1	1	IC GATE TTL LS NOR TPL 3-INP	01295	SN53513N
A3U240	1820-1209	4	1	IC BFR TTL LS NAND QUAD 2-INP	01295	SN53516N
A3U241	1820-1205	0	1	IC GATE TTL LS AND DUAL 4-INP	01295	SN53512
A3U300	1820-2219	8	1	IC-GENERAL PURPOSE INTERFACE ADAPTOR	04713	SC80908PK
A3U301	1820-3513	7	1	IC TRANSCEIVER TTL S INSTR-BUS IEEE-488	27014	SI100357
A3U302	1820-3431	8	1	IC TRANSCEIVER TTL S INSTR-BUS IEEE-488	27014	SI100097
A3W100	8159-0005	0	2	RESISTOR-ZERO OHMS 22 AWG LEAD DIA	20940	106
A3XG108	1251-6133	6	1	CONN-POST TYPE .156-PIN-SPCG 3-CONT	27264	09-48-3034
A3XQ100	1251-4645	1	2	CONN-POST TYPE .100-PIN-SPCG 3-CONT	27264	22-17-2032
A3XQ101	1251-4645	1	1	CONN-POST TYPE .100-PIN-SPCG 3-CONT	27264	22-17-2032
A3Y1	0410-0465	2	1	CRYSTAL-QUARTZ 4.00000 MHZ HC-6/U-HLDR	N02432	

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A5	03314-66505	9	1	PC ASSY-X3 OUT OPTION 001	28480	03314-66505
A5C1	0180-2779	6	1	CAPACITOR-FXD 470UF+75-10% 50VDC AL	13606	30D2968
A5C2	0180-2779	6	1	CAPACITOR-FXD 470UF+75-10% 50VDC AL	13606	30D2968
A5C3	0180-0116	1	1	CAPACITOR-FXD 6.8UF+-10% 35VDC TA	13606	150D685X9035B2-DYS
A5C4	0180-0116	1	1	CAPACITOR-FXD 6.8UF+-10% 35VDC TA	13606	150D685X9035B2-DYS
A5C6	0160-4571	8	4	CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A5C7	0160-4571	8	1	CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A5C8	0160-4571	8	1	CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A5C9	0160-4789	0	1	CAPACITOR-FXD 15PF +-5% 100VDC CER 0+-30	04222	SA106A150JAA
A5C11	0160-4787	8	1	CAPACITOR-FXD 22PF +-5% 100VDC CER 0+-30	04222	SA106A220JAA
A5C12	0121-0060	0	1	CAPACITOR-V TRMR-CER 2-8PF 350V PC-MTG	52763	304322 2/BPF NPO
A5C13	0160-3847	9	2	CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A5C14	0160-3847	9	2	CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A5C18	0160-6520	1	4	C-F 1UF --% 50V CERMLr	28480	RPE113-90125U105Z50V
A5C19	0160-6520	1	4	C-F 1UF --% 50V CERMLr	28480	RPE113-90125U105Z50V
A5C21	0160-4571	8	1	CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A5C24	0160-6520	1	1	C-F 1UF --% 50V CERMLr	28480	RPE113-90125U105Z50V
A5C25	0180-4532	1	1	CAPACITOR-FXD 1000PF +-20% 50VDC CER	13506	592CX7R102M050B
A5C26	0160-6520	1	1	C-F 1UF --% 50V CERMLr	28480	RPE113-90125U105Z50V
A5CR6	1901-0050	3	4	DIODE-SWITCHING 80V 200MA 2NS DO-35	07263	FDH 6308
A5CR8	1901-0050	3	4	DIODE-SWITCHING 80V 200MA 2NS DO-35	07263	FDH 6308
A5CR11	1901-0040	1	4	DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A5CR12	1901-0040	1	4	DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A5CR13	1902-0965	1	1	DIODE-ZNR 20V 5% DO-35 PD=4W TC=+.092%	04713	SZ30035-023
A5CR16	1901-0040	1	1	DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A5CR17	1901-0040	1	1	DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH1088
A5CR18	1901-0050	3	1	DIODE-SWITCHING 80V 200MA 2NS DO-35	07263	FDH 6308
A5CR19	1901-0050	3	1	DIODE-SWITCHING 80V 200MA 2NS DO-35	07263	FDH 6308
A5H1	1400-0249	0	2	CABLE TIE .062-.625-DIA .091-WD NYL	56501	TY-23M-8
A5H2	1400-0249	0	2	CABLE TIE .062-.625-DIA .091-WD NYL	56501	TY-23M-8
A5H7	7121-4611	2	1	LABEL-INFORMATION .15-IN-WD .6-IN-LG	28480	L01003
A5J1	1251-4484	6	1	CONN-POST TYPE .100-PIN-SPCG 4-CONT	27264	22-03-2041
A5J2	1250-1189	0	1	CONNECTOR-RF SMB FEM PC 50-OHM	98291	51-054-0000
A5J3	1250-1810	4	1	CONNECTOR-RF SMB M PC 50-OHM	98291	51-353-0049
A5J4	1251-6254	2	1	CONNECTOR-SGL CONT RTANG-F	91833	901
A5K1	0490-1346	8	1	RELAY-REED 1A 500MA 200VDC 5VDC-COIL	12617	HE321A5131
A5L1	9140-0748	0	1	INDUCTOR 250UH 25% .25DX.5LG Q=3	24226	CA-253-5
A5L2	9140-0748	0	1	INDUCTOR 250UH 25% .25DX.5LG Q=3	24226	CA-253-5
A5MP60	1250-1717	0	1	ADAPTER-COAX STR F-BNC F-RCA-PHONO	24931	29JJ144-1
A5MP17B	1200-0185	9	2	INSULATOR-XSTR NYLON	13103	7717-86N RED
A5MP18B	1200-0185	9	2	INSULATOR-XSTR NYLON	13103	7717-86N RED
A5Q1	1205-0011	0	1	HEAT SINK TO-5/TO-39-CS	98978	TXBF-032-025B
A5Q2	1854-0474	4	1	TRANSISTOR NPN SI PD=310MW FT=100MHZ	04713	SPS1172
A5Q3	1853-0036	2	1	TRANSISTOR PNP SI PD=310MW FT=250MHZ	04713	SPS3612
A5Q4	1853-0042	0	1	TRANSISTOR PNP SI PD=310MW FT=200MHZ	04713	SPS4653
A5Q6	1854-0474	4	1	TRANSISTOR NPN SI PD=310MW FT=100MHZ	04713	SPS1172
A5Q7	1854-0215	1	1	TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611
A5Q8	1853-0036	2	1	TRANSISTOR PNP SI PD=310MW FT=250MHZ	04713	SPS3612
A5Q9	1853-0264	8	1	TRANSISTOR PNP SI PD=310MW FT=100MHZ	04713	SPS6793
A5Q11	1853-0264	8	1	TRANSISTOR PNP SI PD=310MW FT=100MHZ	04713	SPS6793
A5Q12	1854-0474	4	1	TRANSISTOR NPN SI PD=310MW FT=100MHZ	04713	SPS1172
A5Q13	1854-0474	4	1	TRANSISTOR NPN SI PD=310MW FT=100MHZ	04713	SPS1172
A5Q14	1853-0036	2	1	TRANSISTOR PNP SI PD=310MW FT=250MHZ	04713	SPS3612
A5Q16	1854-0215	1	1	TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611
A5Q17	1854-0090	0	1	TRANSISTOR NPN SI TO-39 PD=1W FT=100MHZ	04713	SM8158
A5Q18	1205-0033	6	1	HEAT SINK TO-5/TO-39-CS	05820	207-CB
A5Q19	1853-0037	3	1	TRANSISTOR PNP SI TO-39 PD=1W FT=100MHZ	04713	SS2109
A5Q20	1205-0033	6	1	HEAT SINK TO-5/TO-39-CS	05820	207-CB
A5Q21	1854-0215	1	1	TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611
A5R1	0683-1005	5	1	RESISTOR 10 5% .25W CF TC=0-400	77902	R-25J
A5R2	0757-0465	6	1	RESISTOR 100K 1% .125W F TC=0+-100	19701	SFR25H
A5R3	0698-3558	8	1	RESISTOR 4.02K 1% .125W F TC=0+-100	19701	SFR25H
A5R4	0757-0280	3	2	RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A5R6	0757-1094	9	1	RESISTOR 1.47K 1% .125W F TC=0+-100	19701	SFR25H
A5R7	0698-4037	0	10	RESISTOR 46.4 1% .125W F TC=0+-100	19701	SFR25H
A5R8	0757-0444	1	1	RESISTOR 12.1K 1% .125W F TC=0+-100	19701	SFR25H

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A5R9	0757-0441	8	1	RESISTOR 8.25K 1% .125W F TC=0+-100	19701	SFR25H
A5R10	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A5R11	0698-4037	0		RESISTOR 46.4 1% .125W F TC=0+-100	19701	SFR25H
A5R12	0757-0161	9	2	RESISTOR 604 1% .125W F TC=0+-100	19701	SFR25H
A5R13	0757-0161	9		RESISTOR 604 1% .125W F TC=0+-100	19701	SFR25H
A5R14	0698-6619	8	1	RESISTOR 15K .1% .125W F TC=0+-25	19701	5033R
A5R16	0698-6614	3	1	RESISTOR 7.5K .1% .125W F TC=0+-25	19701	5033R
A5R17	0698-3443	0	2	RESISTOR 287 1% .125W F TC=0+-100	19701	SFR25H
A5R18	0698-3443	0		RESISTOR 287 1% .125W F TC=0+-100	19701	SFR25H
A5R19	0698-4037	0		RESISTOR 46.4 1% .125W F TC=0+-100	19701	SFR25H
A5R21	0698-4037	0		RESISTOR 46.4 1% .125W F TC=0+-100	19701	SFR25H
A5R22	0698-0085	0	2	RESISTOR 2.61K 1% .125W F TC=0+-100	19701	SFR25H
A5R23	0698-0085	0		RESISTOR 2.61K 1% .125W F TC=0+-100	19701	SFR25H
A5R24	0757-0461	2	1	RESISTOR 68.1K 1% .125W F TC=0+-100	19701	SFR25H
A5R26	0698-3161	9	1	RESISTOR 38.3K 1% .125W F TC=0+-100	19701	SFR25H
A5R27	0757-0420	3	2	RESISTOR 750 1% .125W F TC=0+-100	19701	SFR25H
A5R28	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	19701	SFR25H
A5R29	0698-4037	0		RESISTOR 46.4 1% .125W F TC=0+-100	19701	SFR25H
A5R31	0698-4037	0		RESISTOR 46.4 1% .125W F TC=0+-100	19701	SFR25H
A5R32	0698-4037	0		RESISTOR 46.4 1% .125W F TC=0+-100	19701	SFR25H
A5R33	0698-4037	0		RESISTOR 46.4 1% .125W F TC=0+-100	19701	SFR25H
A5R34	0698-3453	2	2	RESISTOR 196K 1% .125W F TC=0+-100	19701	SFR25H
A5R36	0698-3453	2		RESISTOR 196K 1% .125W F TC=0+-100	19701	SFR25H
A5R37	0698-4037	0		RESISTOR 46.4 1% .125W F TC=0+-100	19701	SFR25H
A5R38	0698-4037	0		RESISTOR 46.4 1% .125W F TC=0+-100	19701	SFR25H
A5R39	0698-0083	8	2	RESISTOR 1.96K 1% .125W F TC=0+-100	19701	SFR25H
A5R41	0698-0083	8		RESISTOR 1.96K 1% .125W F TC=0+-100	19701	SFR25H
A5R42	0683-0825	5	2	RESISTOR 8.2 5% .25W CF TC=0-400	77902	R-25J
A5R43	0683-0825	5		RESISTOR 8.2 5% .25W CF TC=0-400	77902	R-25J
A5R44	0683-0565	0	2	RESISTOR 5.6 5% .25W CF TC=0-400	77902	R-25J
A5R45	0683-1025	9	1	RESISTOR 1K 5% .25W CF TC=0-400	77902	R-25J
A5R46	0683-0565	0		RESISTOR 5.6 5% .25W CF TC=0-400	77902	R-25J
A5R47	0698-3430	5	1	RESISTOR 21.5 1% .125W F TC=0+-100	19701	SFR25H
A5R48	0757-0442	9	1	RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A5R49	0698-7332	4	1	RESISTOR 1M 1% .125W F TC=0+-100	19701	5033R
A5R50	0698-8353	1	1	RESISTOR 806K 1% .125W F TC=0+-100	19701	5033R
A5R51	0757-0472	5	1	RESISTOR 200K 1% .125W F TC=0+-100	19701	SFR25H
A5R52	0698-4539	7	1	RESISTOR 402K 1% .125W F TC=0+-100	19701	SFR25H
A5R53	0698-4531	9	1	RESISTOR 267K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A5R54	0698-3262	1	2	RESISTOR 40.2 1% .125W F TC=0+-100	19701	SFR25H
A5R55	0698-3262	1		RESISTOR 40.2 1% .125W F TC=0+-100	19701	SFR25H
A5R56	0757-0277	8	2	RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A5R57	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A5R58	0757-0470	3	1	RESISTOR 162K 1% .125W F TC=0+-100	19701	SFR25H
A5U1	1826-0412	1	1	IÇ COMPARATOR PRCN DUAL 8-DIP-P PKG	27014	SL33675
A5U2	1906-0096	7	1	DIODE-FW BRDG 200V 2A	28480	1906-0096
A5W11	03314-61611	8	1	CABLE-COAX MRCA/MRCA 216MM BK (x3 to Rear Out)	28480	03314-61611
A5W16	03314-61616	3	1	CABLE-DSC FHSG/FHSG 195MM ML (A3 to A5 power)	101009	
	7120-8377	3	1	LBL-ID "OPTION 001" 9x30 AGMY	91345	
	0400-0226	2	1	GROMMET-CHAN .052-IN-GRV-WD	28480	GRNY-052NA

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A8	03314-66508	2	1	OUTPUT BD	28480	03314-66508
A8C1	0180-2506	7	1	CAPACITOR-FXD 470UF+50-10% 25VDC AL	19701	3074GH471T025JPB
A8C2	0180-2506	7	1	CAPACITOR-FXD 470UF+50-10% 25VDC AL	19701	3074GH471T025JPB
A8C3	0160-6688	2	2	CAPACITOR-FXD 1UF 20% 50V CERMLr	28480	RPE113-907Z5U105M50V
A8C4	0160-6688	2	2	CAPACITOR-FXD 1UF 20% 50V CERMLr	28480	RPE113-907Z5U105M50V
A8C7	0160-4571	8	6	CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A8C8	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A8C9	0160-6523	4	1	CAPACITOR-FXD 1PF +-% 200V CERMLr	28480	RPE121-978CG010C200V
A8C10	0160-3847	9	8	CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A8C11	0160-4810	8	3	CAPACITOR-FXD 330PF +-5% 100VDC CER	04222	SA101A331JAA
A8C12	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A8C13	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A8C14	0160-4810	8		CAPACITOR-FXD 330PF +-5% 100VDC CER	04222	SA101A331JAA
A8C15	0160-4810	8		CAPACITOR-FXD 330PF +-5% 100VDC CER	04222	SA101A331JAA
A8C16	0160-4801	7	1	CAPACITOR-FXD 100PF +-5% 100VDC CER	04222	SA101A101JAA
A8C17	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A8C18	0160-4571	8		CAPACITOR-FXD .1UF +80-20% 50VDC CER	04222	SA105E104ZAA
A8C19	0160-4807	3	2	CAPACITOR-FXD 33PF +-5% 100VDC CER 0+-30	04222	SA101A330JAA
A8C20	0160-4807	3	3	CAPACITOR-FXD 33PF +-5% 100VDC CER 0+-30	04222	SA101A330JAA
A8C21	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A8C22	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A8C23	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A8C24	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
C25	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
C26	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A8C27	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
C28	0160-4791	4	1	CAPACITOR-FXD 10PF +-5% 100VDC CER 0+-30	04222	SA106A100JAA
C29	0121-0487	5	1	CAPACITOR-V TRMR-PSTN 1-3.5PF 300V	93561	GXE 3R501
A8C30	0160-4808	4	1	CAPACITOR-FXD 470PF +-5% 100VDC CER	13606	292CCOG471J100B
A8C31	0160-4793	6	2	CAPACITOR-FXD 6.8PF +-5PF 100VDC CER	04222	MA101A6R8DAA
A8C32	0160-4793	6	2	CAPACITOR-FXD 6.8PF +-5PF 100VDC CER	04222	MA101A6R8DAA
A8C33	0160-4809	5	1	CAPACITOR-FXD 390PF +-5% 100VDC CER	04222	SA101A391JAA
A8CR1	1901-0040	1	7	DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH108B
A8CR2	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH108B
A8CR3	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH108B
A8CR4	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH108B
A8CR5	1902-0025	4	1	DIODE-ZNR 10V 5% DO-35 PD=.4W TC=+.06%	04713	SZ30016-1182
A8CR6	1902-0025	4	1	DIODE-ZNR 10V 5% DO-35 PD=.4W TC=+.06%	04713	SZ30016-1182
A8CR8	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH108B
A8CR9	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH108B
A8CR10	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	07263	FDH108B
A8H1	0360-0124	3	5	CONNECTOR-SGL CONT PIN .04-IN-BSC-SZ RND	97300	
A8H2	0360-0124	3		CONNECTOR-SGL CONT PIN .04-IN-BSC-SZ RND	97300	
A8H3	0360-0124	3		CONNECTOR-SGL CONT PIN .04-IN-BSC-SZ RND	97300	
A8H4	0360-0124	3		CONNECTOR-SGL CONT PIN .04-IN-BSC-SZ RND	97300	
A8H5	0360-0124	3		CONNECTOR-SGL CONT PIN .04-IN-BSC-SZ RND	97300	
A8H17	7121-4611	2	1	LABEL-INFORMATION .15-IN-WD .6-IN-LG	28480	L01003
A8H18	9170-0894	0	8	CORE-SHIELDING BEAD	02114	56-590-65/4A6
A8H19	9170-0894	0		CORE-SHIELDING BEAD	02114	56-590-65/4A6
A8H20	9170-0894	0		CORE-SHIELDING BEAD	02114	56-590-65/4A6
A8H21	9170-0894	0		CORE-SHIELDING BEAD	02114	56-590-65/4A6
A8H22	9170-0894	0		CORE-SHIELDING BEAD	02114	56-590-65/4A6
A8H23	9170-0894	0		CORE-SHIELDING BEAD	02114	56-590-65/4A6
A8H24	9170-0894	0		CORE-SHIELDING BEAD	02114	56-590-65/4A6
A8H25	9170-0694	0		CORE-SHIELDING BEAD	02114	56-590-65/4A6
A8J1	1251-6254	2	1	CONNECTOR-SGL CONT RTANG-F	91833	901
A8J2	1250-1810	4	1	CONNECTOR-RF SMB M PC 50-OHM	98291	51-353-0049
A8J3	1200-0507	9	1	SOCKET-IC 16-CONT DIP-SLDR	06776	ICN-163B-S3-G30
A8K1	0490-1628	9	8	RELAY-REED	002482	F41A05
A8K2	0490-1628	9		RELAY-REED	002482	F41A05
A8K3	0490-1628	9		RELAY-REED	002482	F41A05
A8K4	0490-1628	9		RELAY-REED	002482	F41A05
A8K5	0490-1628	9		RELAY-REED	002482	F41A05
A8K6	0490-1628	9		RELAY-REED	002482	F41A05
A8K7	0490-1628	9		RELAY-REED	002482	F41A05
A8K8	0490-1628	9		RELAY-REED	002482	F41A05
A8L1	9140-0746	8	1	INDUCTOR RF-CH-MLD 400UH 10%	24226	22N403K-1
A8L3	9100-1791	1	1	CORE-FERRITE CHOKE-WIDEBAND;IMP;>360	02114	VK200-19/4B
A8L4	9100-1791	1	1	CORE-FERRITE CHOKE-WIDEBAND;IMP;>360	02114	VK200-19/4B
A8MP1	03314-01101	5	1	SHTF HTSK-OUTPUT AMP AL	28480	03314-01101
A8Q2	1855-0414	4	1	TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	17856	2N4393

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A8Q3	1853-0036	2	1	TRANSISTOR PNP SI PD=310MW FT=250MHZ	04713	SPS3612
A8Q4	1854-0215	1	1	TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611
A8Q5	1854-0795	2	1	TRANSISTOR NPN SI TO-92 PD=625MW	04713	SPS8028
A8Q6	1853-0448	0	1	TRANSISTOR PNP SI TO-92 PD=625MW	04713	SPS7848
A8Q7	1853-0448	0		TRANSISTOR PNP SI TO-92 PD=625MW	04713	SPS7848
A8Q8	1854-0795	2		TRANSISTOR NPN SI TO-92 PD=625MW	04713	SPS8028
A8Q9	1853-0448	0		TRANSISTOR PNP SI TO-92 PD=625MW	04713	SPS7848
A8Q10	1854-0795	2		TRANSISTOR NPN SI TO-92 PD=625MW	04713	SPS8028
A8Q11	1853-0495	7	1	TRANSISTOR PNP PD=1W FT=1GHZ	04713	SRF2954
A8Q12	1854-0876	0	1	TRANSISTOR NPN PD=1W FT=1GHZ	04713	SRF2955
A8Q13	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	SPS3611
A8R1	0757-0277	8	3	RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A8R2	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A8R3	0757-0277	8		RESISTOR 49.9 1% .125W F TC=0+-100	19701	SFR25H
A8R4	0757-0280	3	7	RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A8R5	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A8R6	0757-0401	0	5	RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A8R7	0757-0283	6	1	RESISTOR 2K 1% .125W F TC=0+-100	19701	SFR25H
A8R8	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A8R9	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A8R10	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A8R11	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A8R12	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A8R14	0683-3625	9	1	RESISTOR 3.6K 5% .25W CF TC=0-400	77902	R-25J
A8R15	0757-0291	6	2	RESISTOR 24.9 1% .125W F TC=0+-100	19701	SFR25H
A8R16	0757-0291	6		RESISTOR 24.9 1% .125W F TC=0+-100	19701	SFR25H
A8R17	0698-4123	5	4	RESISTOR 499 1% .125W F TC=0+-100	19701	SFR25H
A8R18	0698-4123	5		RESISTOR 499 1% .125W F TC=0+-100	19701	SFR25H
A8R19	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A8R20	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	19701	SFR25H
A8R21	0698-4123	5		RESISTOR 499 1% .125W F TC=0+-100	19701	SFR25H
A8R22	0698-4123	5		RESISTOR 499 1% .125W F TC=0+-100	19701	SFR25H
A8R23	0757-0395	1	2	RESISTOR 56.2 1% .125W F TC=0+-100	19701	SFR25H
A8R24	0757-0395	1		RESISTOR 56.2 1% .125W F TC=0+-100	19701	SFR25H
A8R25	0698-7171	9	1	RESISTOR 1.73 1% .25W F TC=0+-100	102360	TF07
A8R26	0757-0424	7	1	RESISTOR 1.1K 1% .125W F TC=0+-100	19701	SFR25H
A8R27	0698-4421	6	3	RESISTOR 249 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A8R28	0698-4421	6		RESISTOR 249 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A8R29	0757-0346	2	2	RESISTOR 10 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A8R30	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A8R31	0698-8011	8	4	RESISTOR 25 .1% .25W F TC=0+-50	91637	CMF-60-1
A8R32	0698-8011	8		RESISTOR 25 .1% .25W F TC=0+-50	91637	CMF-60-1
A8R33	0698-8011	8		RESISTOR 25 .1% .25W F TC=0+-50	91637	CMF-60-1
A8R34	0698-8011	8		RESISTOR 25 .1% .25W F TC=0+-50	91637	CMF-60-1
A8R35	0698-6358	2	2	RESISTOR 100K .1% .125W F TC=0+-25	19701	5033R
A8R36	0698-6358	2		RESISTOR 100K .1% .125W F TC=0+-25	19701	5033R
A8R37	0698-6979	3	2	RESISTOR 111.1K .1% .125W F TC=0+-25	19701	5033R
A8R38	0698-6979	3		RESISTOR 111.1K .1% .125W F TC=0+-25	19701	5033R
A8R39	0757-0003	8	1	RESISTOR 26.1 1% .5W F TC=0+-100	19701	5053R
A8R40	0698-4421	6		RESISTOR 249 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A8R41	0698-0063	4	2	RESISTOR 5.23K 1% .125W F TC=0+-100	19701	SFR25H
A8R42	0698-0063	4		RESISTOR 5.23K 1% .125W F TC=0+-100	19701	SFR25H
A8R51	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A8R52	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	19701	SFR25H
A8R60	0757-0443	0	1	RESISTOR 11K 1% .125W F TC=0+-100	19701	SFR25H
A8R61	0699-0999	7	1	RESISTOR 57.2 .1% .5W F TC=0+-25	19701	5053R
A8R62	0699-0633	6	1	RESISTOR 2.475K .1% .125W F TC=0+-25	19701	5033R
A8R63	0699-2100	6	1	R-F 247.5 O .1% 1/4W HF08 T9	91637	CMF-60-79
A8R64	0699-0641	6	1	RESISTOR 24.75K .1% .125W F TC=0+-25	19701	5033R
A8R65	0699-0627	8	1	RESISTOR 305.6 .1% .25W F TC=0+-25	19701	5043R
A8R67	0699-0626	7	1	RESISTOR 3.056K .1% .125W F TC=0+-25	19701	5033R
A8R68	0757-0442	9	1	RESISTOR 10K 1% .125W F TC=0+-100	19701	SFR25H
A8R69	1810-0269	3	1	NETWORK-RES 9-SIP 10.0K OHM X 8	13606	216CJ104
A8R70	0698-4464	7	1	RESISTOR 887 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A8R71	0698-4464	7		RESISTOR 887 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
ABSG1	1970-0052	0	1	TUBE-ELECTRON SURGE V PTCTR	25088	B1-C90/20
ABU1	1826-0043	4	1	IC OP AMP GP TO-99 PKG	27014	SL160762
ABU2	1826-0139	9	1	IC OP AMP GP DUAL 8-DIP-P PKG	04713	SC25137P1
ABU4	1858-0048	6	1	TRANSISTOR ARRAY 16-PIN PLSTC DIP	3L585	90971

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A10	03314-66510	6	1	FRONT PANEL	28480	03314-66510
A11	03314-66511	7	1	FRONT PANEL SWITCH/LED BD	28480	03314-66511
A12	03314-66512	8	1	FRONT PANEL DISPLAY AND KEYBOARD	28480	03314-66512
A11	03314-66511	7	1	FRONT PANEL SWITCH/LED BD	28480	03314-66511
A11CR13	1990-1169	4	34	LED HLMP-1350		
A11CR14	1990-1169	4		LED HLMP-1350		
A11CR15	1990-1169	4		LED HLMP-1350		
A11CR16	1990-1169	4		LED HLMP-1350		
A11CR17	1990-1169	4		LED HLMP-1350		
A11CR18	1990-1169	4		LED HLMP-1350		
A11CR19	1990-1169	4		LED HLMP-1350		
A11CR20	1990-1169	4		LED HLMP-1350		
A11CR21	1990-1169	4		LED HLMP-1350		
A11CR22	1990-1169	4		LED HLMP-1350		
A11CR23	1990-1169	4		LED HLMP-1350		
A11CR24	1990-1169	4		LED HLMP-1350		
A11CR25	1990-1169	4		LED HLMP-1350		
A11CR26	1990-1169	4		LED HLMP-1350		
A11CR27	1990-1169	4		LED HLMP-1350		
A11CR28	1990-1169	4		LED HLMP-1350		
A11CR29	1990-1169	4		LED HLMP-1350		
A11CR30	1990-1169	4		LED HLMP-1350		
A11CR31	1990-1169	4		LED HLMP-1350		
A11CR32	1990-1169	4		LED HLMP-1350		
A11CR33	1990-1169	4		LED HLMP-1350		
A11CR34	1990-1169	4		LED HLMP-1350		
A11CR35	1990-1169	4		LED HLMP-1350		
A11CR36	1990-1169	4		LED HLMP-1350		
A11CR37	1990-1169	4		LED HLMP-1350		
A11CR38	1990-1169	4		LED HLMP-1350		
A11CR39	1990-1169	4		LED HLMP-1350		
A11CR40	1990-1169	4		LED HLMP-1350		
A11CR41	1990-1169	4		LED HLMP-1350		
A11CR42	1990-1169	4		LED HLMP-1350		
A11CR43	1990-1169	4		LED HLMP-1350		
A11CR44	1990-1169	4		LED HLMP-1350		
A11CR45	1990-1169	4		LED HLMP-1350		
A11CR46	1990-1169	4		LED HLMP-1350		
A12	03314-66512	8	1	FRONT PANEL DISPLAY AND KEYBOARD	28480	03314-66512
A12C1	0180-0229	7	7	CAPACITOR-FXD 33UF +-10% 10VDC TA	13606	150D336X9010B2-DYS
A12C2	0160-3847	9	4	CAPACITOR-FXD .01UF +-100-0% 50VDC CER	04222	SA105C103KAA
A12C3	0160-3847	9		CAPACITOR-FXD .01UF +-100-0% 50VDC CER	04222	SA105C103KAA
A12C4	0160-3847	9		CAPACITOR-FXD .01UF +-100-0% 50VDC CER	04222	SA105C103KAA
A12C5	0160-3847	9		CAPACITOR-FXD .01UF +-100-0% 50VDC CER	04222	SA105C103KAA
A12C6	0180-0229	7		CAPACITOR-FXD 33UF +-10% 10VDC TA	13606	150D336X9010B2-DYS
A12C7	0180-0229	7		CAPACITOR-FXD 33UF +-10% 10VDC TA	13606	150D336X9010B2-DYS
A12C8	0180-0229	7		CAPACITOR-FXD 33UF +-10% 10VDC TA	13606	150D336X9010B2-DYS
A12C9	0180-0229	7		CAPACITOR-FXD 33UF +-10% 10VDC TA	13606	150D336X9010B2-DYS
A12C10	0180-0229	7		CAPACITOR-FXD 33UF +-10% 10VDC TA	13606	150D336X9010B2-DYS
A12C11	0180-0229	7		CAPACITOR-FXD 33UF +-10% 10VDC TA	13606	150D336X9010B2-DYS
A12J1	1251-7934	7	1	CONNECTOR-90 DEG 5-PIN		
A12J2	1252-1960	9	1	CONNECTOR-90 DEG 16-PIN		
A12L1	9100-3334	2	1	INDUCTOR 25UH 1%	99484	ES-2638
A12R1	1810-0903	2	1	RESISTOR-ARRAY 2.4K OHM X 8		
A12R2	1810-0325	2	2	RESISTOR-ARRAY 150 OHM X 8		
A12R3	1810-0325	2		RESISTOR-ARRAY 150 OHM X 8		
A12R9	1810-0126	1	2	RESISTOR-ARRAY 10K OHM X 13		
A12R19	1810-0126	1		RESISTOR-ARRAY 10K OHM X 13		
A12R20	1810-0162	5	1	RESISTOR-ARRAY 4.7K OHM X 13		

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A12U1	1820-1730	6	1	IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN58039N
A12U2	1820-3438	5	2	ICD ALS 74ALS257N		
A12U3	1820-3438	5		ICD ALS 74ALS257N		
A12U4	1820-1045	6	1	ICD TTL 8273		
A12U5	1820-1200	5	1	ICD LS 74LS05		
A12U6	1858-0047	5	2	XTR DIF4NPN SI		
A12U7	1858-0047	5		XTR DIF4NPN SI		
A12U8	1820-1112	8	1	IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN53030N
A12U10	1858-0076	0	2	PNP TRANS ARRAY		
A12U11	1858-0076	0		PNP TRANS ARRAY		
A12U12	1990-0619	7	3	OPT DISPLAY A-N R XX		
A12U13	1990-0619	7		OPT DISPLAY A-N R XX		
A12U14	1990-0619	7		OPT DISPLAY A-N R XX		
A12U15	1990-0649	3	1	OPT DISPLAY A-N Z XX		
A12U16	1990-0759	6	3	OPT LED LAMP R AP		
A12U17	1990-0759	6		OPT LED LAMP R AP		
A12U18	1990-0759	6		OPT LED LAMP R AP		
MISCELLANEOUS PARTS						
F1	2110-0312	4	1	FUSE 1A 250V TD 1.25X.25 UL	C02614	MDL-1
F1*	2110-0202	1	1	FUSE .5A 250V TD 1.25X.25 UL	C02614	MDL-.5
MP1A	5061-1979	9	1	SHTF TOP U COVER ALV	28480	5061-1979
	5061-9564	4	1	SHTF BOTTOM COVER II ALV	28480	5061-9564
MP1B	5060-9803	2	1	SHTF ASSY-15" HANDLE STRAP II	28480	5060-9803
MP2B	5040-7201	8	2	MOLD FOOT	28480	5040-7201
MP2C	5040-7222	3	2	MOLD FOOT-NON SKID	28480	5040-7222
MP2D	1460-1345	5	2	TILT STAND SST	60582	
MP2E	5001-2221	0	1	SHTF TRAY-INFO II ALV	28480	5001-2221
MP2F	9320-4963	1	1	CARD-INSTR	22670	
MP2G	9320-4964	2	1	CARD-INSTR	22670	
MP2H	9320-4965	3	1	CARD-INSTR	22670	
MP2I	1460-1345	5		TILT STAND SST	60582	
MP2J	5040-7201	8		MOLD FOOT	28480	5040-7201
MP2K	5040-7222	3		MOLD FOOT-NON SKID	28480	5040-7222
MP3A	5001-0439	8	2	TRIM-VYNL	28480	5001-0439
MP3B	5040-7203	0	1	MOLD TRIM-TOP	28480	5040-7203
MP3C	5001-0439	8		TRIM-VYNL	28480	5001-0439
MP5D	1250-1717	0	6	ADAPTER-COAX STR F-BNC F-RCA-PHONO	24931	29JJ144-1
MP5E	1250-1717	0		ADAPTER-COAX STR F-BNC F-RCA-PHONO	24931	29JJ144-1
MP5F	1250-1717	0		ADAPTER-COAX STR F-BNC F-RCA-PHONO	24931	29JJ144-1
MP5G	1250-1717	0		ADAPTER-COAX STR F-BNC F-RCA-PHONO	24931	29JJ144-1
MP5H	5040-0345	7	2	MOLD INSULATOR-CONN	28480	5040-0345
MP5I	5040-0345	7		MOLD INSULATOR-CONN	28480	5040-0345
MP5N	0370-3045	4	1	KNOB3/4 JGK .25-IN-ID	28480	0370-3045
MP6B	1250-1717	0		ADAPTER-COAX STR F-BNC F-RCA-PHONO	24931	29JJ144-1
MP6C	1250-1717	0		ADAPTER-COAX STR F-BNC F-RCA-PHONO	24931	29JJ144-1
MP6K	35601-04103	8	1	STMP XFRMR CVR	28480	35601-04103
MP6L	6960-0086	4	1	PLUG-HOLE FL-HD FOR .375-D-HOLE NYL	28480	6960-0086
MP6M	7121-1980	2	1	LBL-WRNG "WARNING FOR CONTI	22670	
MP7A	03314-00101	3	1	SHTF ASSY-MAIN DECK AL (holds A1 and A2)	28480	03314-00101
MP7C	03314-00602	9	1	SHTF SHLD-BTM VCO AL	28480	03314-00602
MP7D	03314-00608	5	1	SHTF SHLD-TOP VCO AL	28480	03314-00608
MP7E	1251-6972	1	1	CONNECTOR-A1 TO A2 MAIN DECK .156-SPCG 6-PIN	27264	09-78-1062
MP7F	1251-7153	2	1	CONNECTOR-A1 TO A2 MAIN DECK .156-SPCG 4-PIN	27264	09-78-1042
MP7G	03314-00606	3	1	PLASTIC SHLD-SM RIBBN CABL PROTCT-MAIN DECK	28480	03314-00606
MP7H	03314-00607	4	1	PLASTIC SHLD-LG RIBBN CABL PROTCT-MAIN DECK	28480	03314-00607
MP7I	1400-0054	5	1	CLAMP-CABLE .078-DIA .375-WD STL	73734	1549
MP7N	03314-00603	0	1	SHIELD BELOW TRANSFORMER-ALUM	28480	03314-00603
MP7O	03314-00605	2	1	SHIELD ABOVE TRANSFORMER-ALUM AL	28480	03314-00605
MP7P	03314-24101	3	1	SHIELD INSULATOR-PLASTIC (16mm x 38mm)	28480	03314-24101
MP8	11048C	1	1	TERM-FEED THRU	P01142	
W3	03314-61603	8	1	HP-IB CABLE-RBN FHPB/MDIP 370MM BL	A01012	
W7	03314-61607	2	1	CABLE-COAX MRCA/MRCA 216MM BK (Sync Output)	28480	03314-61607
W8	03314-61608	3	1	CABLE-COAX MRCA/MRCA 102MM BK (A1 to A8)	28480	03314-61608

See introduction to this section for ordering information
 * Indicates factory selected values

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
W10	03314-61610	7	1	CABLE-COAX MRCA/MRCA 216MM BK (X-Drive)	28480	03314-61610
W12	03314-61612	9	1	CABLE-RIBBON (A1 to A8) MDIP/MDIP 160MM GY	28480	03314-61612
W13	03314-61613	0	1	CABLE-COAX FBNC/MSMA 150MM (A5 or W17 to Output)	28480	03314-61613
W17	03314-61617	4	1	CABLE-COAX MSMB/FSMB 395MM (A8 to A5 or W13)	98291	
W20**	03314-61620	9	1	CABLE HARNESS COAX MRCA/MRCA 475MM BK	28480	03314-61620
<p>**NOTE**</p> <p>Individually marked cables, making up harness W20, are not available. Unmarked cables may be ordered using the following part numbers.</p> <p>8120-2585 AM, FM-VCO, Z-AXIS CABLES (COAX) 8120-2587 EXT TRIGGER CABLE (COAX)</p>						
W21	03314-61627	8	1	CABLE-RIBBON FHDR/FHDR 350MM WH (A3 to A12)	A01012	
W22	03314-61628	5	1	CABLE-RIBBON FHDR/FHDR 60MM WH (A3 to A2)	A01012	
W23	03314-61629	7	1	CABLE-RIBBON FHDR/FHDR 310MM WH (A3 to A1)	A01012	
	03314-00223	0	1	REAR SHEETMETAL PANEL-ALSK	28480	03314-00223
	03314-44301	7	1	KEYPAD, ELASTROMERIC	C01024	
	03314-60501	3	1	LINE FILTER ASSEMBLY 2A MODULE	28480	03314-60501
	03314-61631	2	1	CABLE-MHSG/FHSG 590MM GY (Line Switch Cable)	28480	03314-61631
	03314-64302	0	1	FRONT DRESS PANEL-ALLM	28480	03314-64302
	03314-68502	0	1	FAN ASSEMBLY	M01053	
	03314-90001	1	1	OPERATING MANUAL	28480	03314-90001
	03586-61640	1	1	RPG ASM DSC RPG/FHSG 120MM ML	28480	03586-61640
	1251-8598	1	1	CONNECTOR-ELASTOMERIC SPONGE RUBBER	S01018	HL
	1400-0015	8	3	CLAMP-CABLE .25-DIA .375-WD STL	73734	1550
	1400-0249	0	11	CABLE TIE .062-.625-DIA .091-WD NYL	56501	TY-23M-8
	1400-0650	7	1	CLAMP-CABLE .25-DIA .75-WD PVC	06915	KKC-4
	3101-2863	7	1	LINE SWITCH, ROCKER TYPE	D01107	
	3150-0387	8	1	FILTER-AIR NYLON 3.129-IN-WD 3.129-IN-LG	F01019	
	3314A #910	9	1	EXTRA SET MANUALS	28480	3314A #910
	5001-3907	1	2	STMP CLIP-COMPONENT	28480	5001-3907
	7120-3534	4	2	LABEL-WARNING .6-IN-WD 1.4-IN-LG VINYL	22670	
	7120-8377	3	1	LBL-ID "OPTION 001" 9x30 AGMY	91345	
	7121-4963	7	1	NAME PLATE(NEW BUG W/PINS % ADH)	L01093	
	7124-2083	4	1	LABEL-WARNING 1-IN-WD 3.5-IN-LG PPR	28480	7124-2083
	8150-4517	9	1	JMPR 22GA WHTBLKGRA 175MM 8x8	28480	8150-4517
	8150-4555	5	1	JMPR 18GA GRNYEL 75MM 8x8	28480	8150-4555
	9100-4697	2	1	TRANSFORMER LAMINATE PWR	P02386	
<p>SERVICE KITS</p>						
	03314-84401	2	1	FRONT PANEL SERVICE KIT	28480	03314-84401
	03314-84402	3	1	REAR PANEL SERVICE KIT	28480	03314-84402

See introduction to this section for ordering information
* indicates factory selected values

SECTION VII

MANUAL BACKDATING AND CHANGES

7.1. INTRODUCTION

This revision of the manual applies directly to instruments in the serial number range indicated on the title page. Earlier versions of this instrument (serial numbers lower than shown on the title page) differ slightly in design and in some cases appearance. To adapt this manual to your instrument, refer to Table 7-1 and make all of the changes listed opposite your instrument serial number. Table 7-2 ties the changes to 3314 assemblies. Be sure to observe both serial number and assembly revisions in your instrument before making changes.

7.2. MANUAL CHANGE SHEETS

-hp- continues to improve the performance of the 3314A, corrections and modifications to the manual may be required. These changes are documented by a yellow "MANUAL CHANGES" supplement. In order to keep the manual up to date, one should periodically request the most recent supplement which is available from the nearest HP Sales and Service Office. Any changes shown on the supplement sheet which apply to your instrument (identified by serial number), should be implemented into the manual.

7.3. FORMAT

Design and component changes within the instrument are noted by the "Δ" symbol. The numbered delta refers to the numbered delta in the backdating section and its corresponding change. As a convenience, it is recommended that all changes which pertain to your instrument be copied on the page where the discrepancies occur.

Table 7-1. Manual Changes by Serial Number

Instrument Serial Number	Manual Changes
2141A00101 through 2141A00150	1--4, 6--8, 10, 11, 13--16
2141A00151 through 2141A00200	2--4, 6--8, 10, 11, 13--16
2141A00201 through 2141A01156	3, 4, 6--8, 10, 11, 13--16
2141A01157 through 2141A02571	4, 6--8, 10, 11, 13--16
2141A02572 through 2141A03031	6--8, 10, 11, 13--16
2141A03032 through 2141A03572	5--8, 10, 11, 13--16
2141A03573 through 2191A03658	5, 7, 8, 10, 11, 13--16
2141A03659 through 2141A03985	7, 8, 10, 11, 13--16
2141A03986 through 2141A04141	8, 10, 11, 13--16
2505A04142 through 2505A05111	10, 11, 13--16
2505A05112 through 2505A05400	9, 10, 11, 13--16
2505A05401 through 2505A06124	10, 11, 13--16
2505A06125 through 2505A06336	11--16
2505A06337 through 2505A06524	11, 13--16
2505A06525 through 2505A07607	13--16
2505A07608 through 2505A08035	14--16
2505A08036 through 2505A08121	15, 16
2505A08122 through 2505A08197	15

Table 7-2. Manual Changes by Assembly

Assembly	A1*			A3			A4	A8		
	A	B	D	A	B	C	A	A	B	C
Assembly Revision										
Change Number	4			1			15	6	6	
	7	7		3				7	7	
	10	10		11	11					9
			12	16	16	16		13	13	13
	14	14	14							

* Revision C does not exist for assembly A1.

Δ1 (S/N 2141A00150 and lower—A3 REV A assemblies):

Pages 8-70/8-71, Figure 8-31.

Assemblies in this group do not have: A3CR123


NOTE

This range of instruments must be modified with A3CR123 (P/N 1902-3301), if they are to be retrofitted with Option 001 (X3 Amplifier).

Δ2 (S/N 2141A00200 and lower):

Page 2-0, Figure 2-2, Pages 8-70/8-71, Figure 8-31.

Change the voltage selection and fuse values:

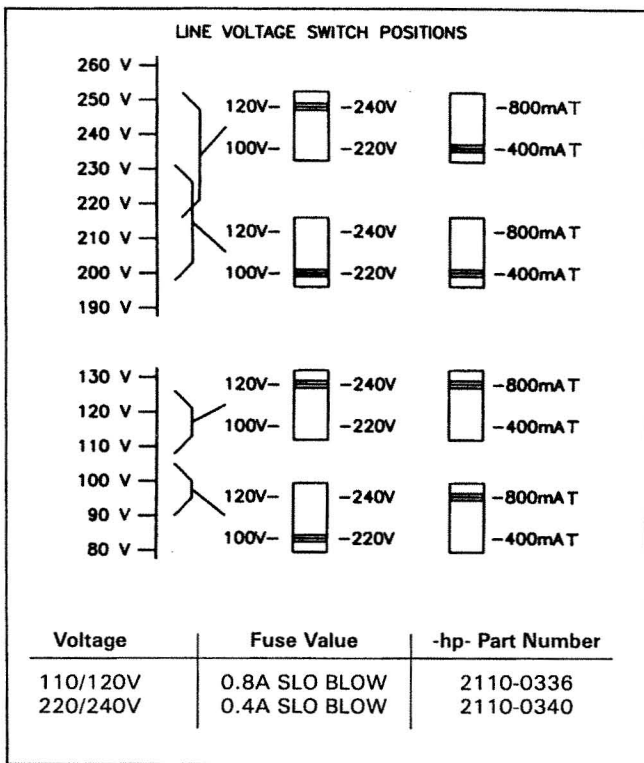

Δ3 (S/N 2141A01156 and lower—A3 REV A assemblies):

Change in Replaceable Parts list:

- Delete A3J8 (SA connector)
- Add SA connectors A3SA1 through A3SA8, P/N 1251-6427
- Change A3U221 to a SN74LS02N, P/N 1820-1144.

Page 8-13 through 8-17, Signature Analyzer Tests 1, 2, 4, & 5.

SA TEST #1

Signature Analyzer set up:

CLOCK/GROUND SA BUS PHASE 2 CONNECTOR
CLOCK NEGATIVE TRIGGER

START/STOP SA A15 STR/STP CONNECTOR
BOTH POSITIVE TRIGGER

Procedure:

- Set A3 S1 for positions 1 and 2 closed.
- Cycle power.
- Take signatures.
- +5 VOLT = 0003

SIGNATURES

U206		U215		U216			
Pin #	Signatures	Pin #	Signatures	Pin #	Signatures		
26	0000	2	7791	2	UUUU		
27	0003	5	6321	5	FFFF		
28	0000	6	37C5	6	8484		
29	0003	9	6U28	9	P763		
30	0003	12	4FCA	12	1U5P		
31	0003	15	4868	15	0356		
32	0003	16	9UP1	16	U759		
33	0003	19	0002	19	6F9A		
9	UUUU						
10	FFFF						
		U218		U219			
11	8484	1	4868	1	37C5		
12	P763	2	9UP1	2	6U28		
13	1U5P	3	0002	3	4FCA		
14	0356	4	0000	4	0000		
15	U759	5	0000	5	5FUA		
16	6F9A	6	0003	6	0003		
17	7791	7	2302	7	A689		
18	6321	9	F9CF	9	A275		
19	37C5	10	534H	10	9842		
20	6U28	11	C9U1	11	8P4F		
22	4FCA	12	1183	12	5P1A		
23	4868	13	64HF	13	282A		
24	9UP1	14	29A4	14	02H5		
25	0002	15	5FUA	15	3APP		
		U200		U221		U223	
		1	29A4	4	29A7	1	282A
		2	29A7	5	29A4	2	5P1A
		12	0000	6	0000	3	A275
		13	0003	11	0000	4	A689
				12	29A4	5	0003
				13	29A7	6	04UU
						8	UF80
						9	04UU
						10	0003
						11	U87F
						12	U87F
						13	8P4F
		U224		U237			
		1	U759	1	7791		
		2	29A7	2	29A7		
		3	C755	12	U15A		
		4	6F9A	13	0003		
		5	29A7				
		6	1214				
		11	PPH8				
		12	29A7	1	7791		
		13	0356	2	6F9A		
				12	4493		
				13	29A4		

SA TEST #2

		U238 (ROM #1)		U236 (ROM #2)		U210 (ROM #3)	
		Pin #	Signature	Pin #	Signature	Pin #	Signature
Signature Analyzer set up:							
CLOCK/GROUND	SA BUS PHASE 2 CONNECTOR CLOCK NEGATIVE TRIGGER	9	P097	9	4A7C	9	7374
		10	7561	10	2U36	10	50A3
		11	620P	11	5020	11	UC66
START/STOP	SEE TABLE 7-3 BOTH NEGATIVE TRIGGERS	13	HU7P	13	OCA0	13	32FH
		14	PA21	14	P930	14	225A
		15	10FH	15	9CAP	15	A60C
Procedure:		16	77F8	16	6F22	16	P902
		17	31FH	17	160P	17	029F

Set A3 S1 for positions 1 and 2 closed.
 Cycle power.
 Move START/STOP to SA ROM connector of ROM under test.
 (See Table 7-3)
 Take signatures of ROM under test.
 +5 Volt = 1180

		U209 (ROM #4)		U208 (ROM #5)		U207 (ROM #6)	
		Pin #	Signature	Pin #	Signature	Pin #	Signature
		9	1843	9	0U3H	9	954U
		10	0F9C	10	F7A9	10	CF1C
		11	2H9A	11	92F2	11	A60C
		13	9321	13	4CP4	13	2A24
		14	295F	14	UPPA	14	2313
		15	2A27	15	9558	15	P9F9
		16	7H72	16	F849	16	6362
		17	245C	17	293F	17	A1A7

NOTE

*IF BAD SIGNATURES ARE FOUND ON MORE THAN ONE ROM
 OR MULTIPLE FAILURES ON A SINGLE ROM MAKE SURE
 THAT THE 'A' BUS SIGNATURES ARE CORRECT (SA TEST #1:
 U15 and U216)*

Table 7-3. SA Start/Stop Connections

START/STOP POSITIONS:	
U238 ROM #1	START (NEGATIVE TRIGGER) SA ROM #1 TEST POINT STOP (NEGATIVE TRIGGER) SA ROM #2 TEST POINT
U236 ROM #2	START (NEGATIVE TRIGGER) SA ROM #2 TEST POINT STOP (NEGATIVE TRIGGER) SA ROM #3 TEST POINT
U210 ROM #3	START (NEGATIVE TRIGGER) SA ROM #3 TEST POINT STOP (NEGATIVE TRIGGER) SA ROM #4 TEST POINT
U209 ROM #4	START (NEGATIVE TRIGGER) SA ROM #4 TEST POINT STOP (NEGATIVE TRIGGER) SA ROM #5 TEST POINT
U208 ROM #5	START (NEGATIVE TRIGGER) SA ROM #5 TEST POINT STOP (NEGATIVE TRIGGER) SA ROM #6 TEST POINT
U207 ROM #6	START (NEGATIVE TRIGGER) SA ROM #6 TEST POINT STOP (NEGATIVE TRIGGER) U218 PIN 15

SA TEST #4

Signature Analyzer set up:
 CLOCK/GROUND SA BUS PHASE 2 CONNECTOR
 CLOCK NEGATIVE TRIGGER
 START/STOP ROM#3 SA CONNECTOR
 BOTH POSITIVE TRIGGER

Procedure:

Set A3 S1 for positions 3 closed.
 Cycle power.
 Take signatures.
 + 5 VOLT = 8094

NOTE

DISCONNECT ANY HP-IB CONNECTORS FROM THE REAR PANEL

SA TEST #5

Signature Analyzer set up:
 CLOCK/GROUND SA BUS PHASE 2 CONNECTOR
 CLOCK NEGATIVE TRIGGER
 START/STOP SA ROM 3 CONNECTOR
 BOTH POSITIVE TRIGGER

Procedure :

Set A3S1 for position 4 closed.
 Cycle Power.
 Take Signatures.
 + 5 Volt = 0803

SIGNATURES

NOTE

() INDICATES SIGNATURES WITH THE CONNECTOR UNDER TEST REMOVED.

U300		U301		U302	
Pin #	Signature	Pin #	Signature	Pin #	Signature
3	CC74	1	370A	1	370A
5	2C8F	2	8094	2	1172
6	8094	3	8094	3	4595
7	84F4	4	370A	4	49H2
8	H56A	5	1761	5	U341
9	6850	6	8094	6	8556
10	A939	7	8094	7	57U2
11	6F82	8	8094	8	5800
12	U47C	9	8094	9	87P2
13	UP52	12	8094	12	87P2
14	5509	13	8094	13	5800
15	HH39	14	8094	14	57U2
16	8094	15	8094	15	8556
17	370A	16	1761	16	U341
18	1761	17	370A	17	49H2
19	8094	18	8094	18	4595
21	8094	19	8094	19	1172
22	8094				
23	8094				
25	8094				
26	8094				
27	370A				
28	370A				
29	87P2				
30	5800				
31	57U2				
32	8556				
33	U341				
34	49H2				
35	4595				
36	1172				
37	5626				
38	8475				
39	PH3H				
40	0000				

J3		J2	
Pin #	Signature	Pin #	Signature
1	C449	1	C449
2	PPAA	2	PPAA
3	HA95	3	HA95
4	2CU3	4	2CU3
5	0045 (4264)	5	4264
6	201F (3330)	6	3330
7	CCCA (755P)	7	755P
8	9978	8	9978
9	PAP7	9	PAP7
10	4C08	10	4C08
11	13PC	11	13PC
12	F965	12	7HP3
13	KEYED PIN	13	C377
14	0000	14	0000
15	0000	15	0003
16	0803	16	0000
17	0000	17	0803
18	0000	18	0000 (0803)
19	0000	19	UNSTABLE
20	0803	20	UNSTABLE (0000)
21	0803	21	3155
22	0803	22	0803

Pages 8-70/8-71, Figure 8-31.


Assemblies in this group do not have:
A3CR124
A3CR125

Pages 8-72/8-73, Figure 8-32.

Assemblies in this group do not have:
A3U204b
A3U221a

The 2MHz clock that drives A3U232 pins 9 and 15 originates from A3U201 pin 5. The SA clock originates from A3U201b pin 9.

SCHEMATIC:

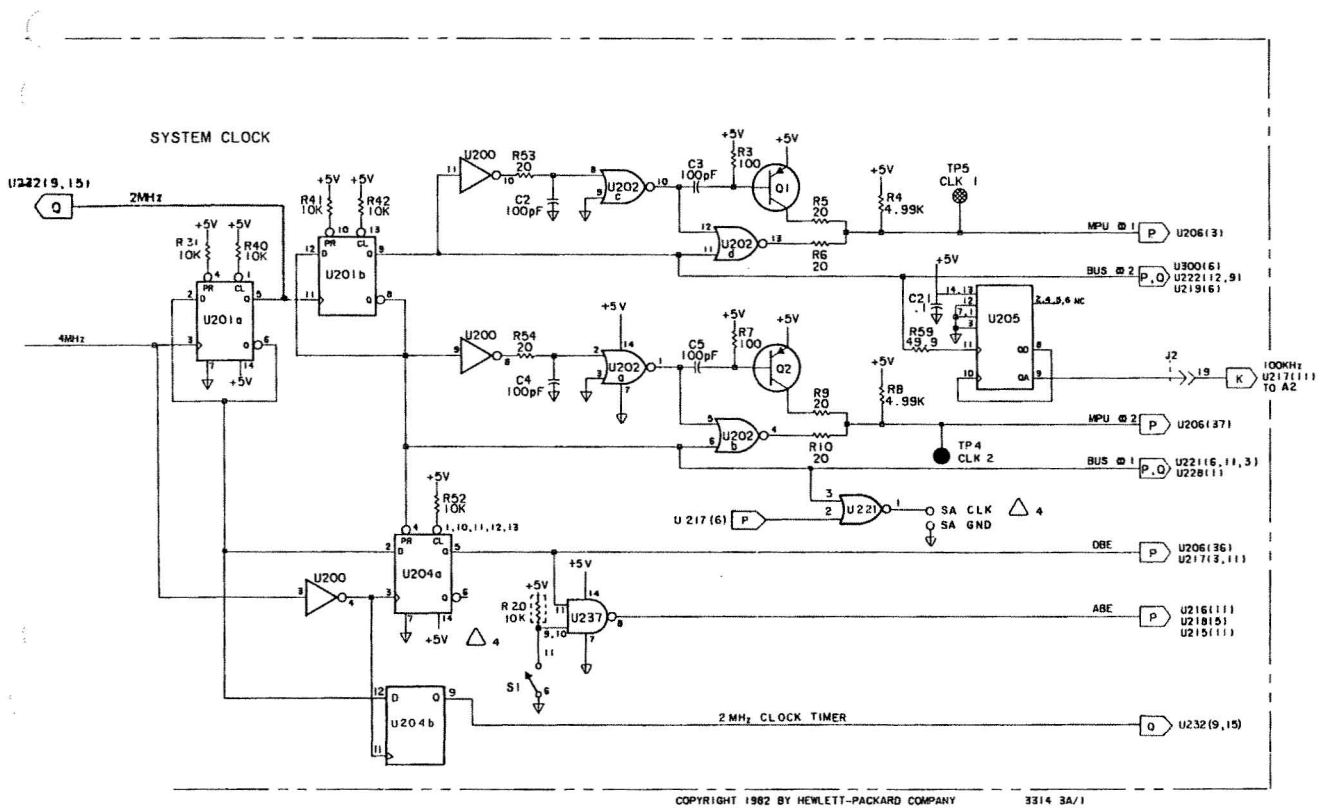

Δ4 (S/N 2141A02571 and lower—A1 REV A assemblies):

NOTE

Some Revision A 03314-66501 assemblies contain some of the following changes making them equivalent to the current schematics and parts list. Manual backdating is unnecessary in these cases.

Page 5-14, Paragraph 5-18. (LOW FREQ HARMONIC DISTORTION ADJ)

03314-66501 assemblies without CR503, R561, R562, and R563 require a different low frequency harmonic adjustment. When performing this adjustment, skip Steps G—J. Continue with Steps K—P until the adjustment is completed.

Pages 8-38/8-39, Figure 8-13.

Change in schematic and Replaceable Parts list:
 U102 to 14 pin DIP, P/N 1826-0522 (TLO74CN)
 U103 to 8 pin DIP, P/N 1826-0547 (TLO72ACP)


Assemblies in this group do not have:
 A1C108
 A1C109

NOTE

To reduce oscillation, these capacitors (P/N 0160-4385, 15pF), may be added between A1U101 pins 4 & 5 and pins A1U101 pins 8 & 1.

Component Locator See Figure 7-1, Page 7-25.

SCHEMATIC:

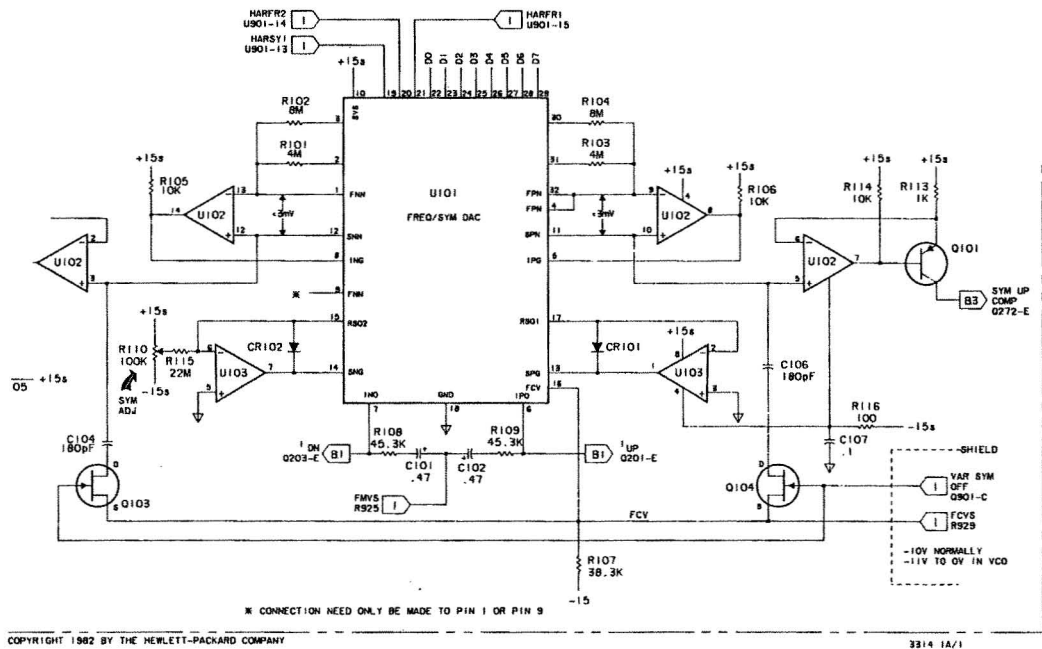

Page 8-41, Figure 8-15.

Change the following information in the Replaceable Parts list:

A1R211 and A1R212 to P/N 0757-0401

Change in schematic and Replaceable Parts list:

A1R213 and A1R214 to 49.9Ω,
P/N 0757-0277

Assemblies in this group do not have:

A1R235

Pages 8-48/8-49, Figure 8-20.

Change in schematic and Replaceable Parts list:

A1C306 and A1C309 to 150pF,
P/N 0160-4814

A1R307 and A1R314 to 49.9Ω,
P/N 0757-0277


A1R306 and A1R315 to 23.7Ω,
P/N 0698-3431

Assemblies in this group do not have:

A1Q305
A1R322

Component Locator See Figure 7-1, Page 7-25.

SCHEMATIC:

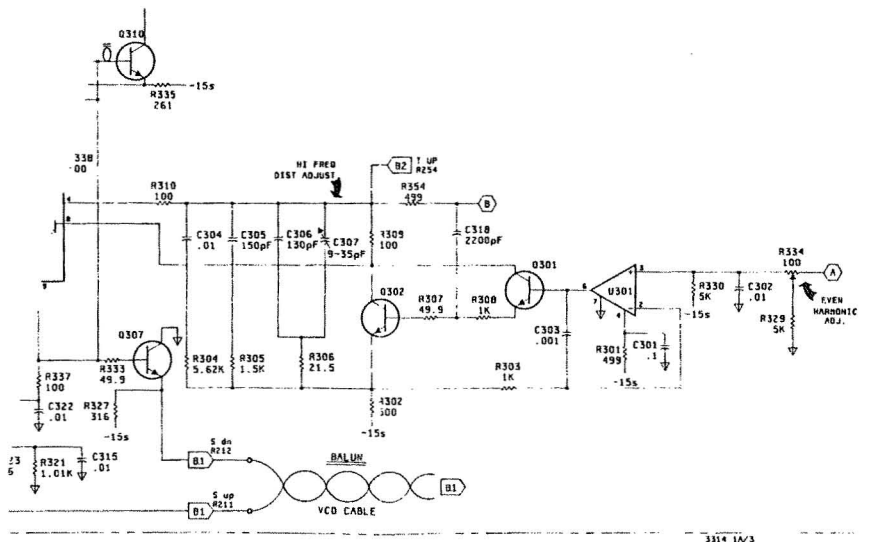

Pages 8-50/8-51, Figure 8-21.

Assemblies in this group include:

- A1R414 and A1R415 0Ω jumpers,
P/N 8150-3375
(A1R414 connects base of AIQ402 to emitter of AIQ316.)
(A1R415 connects base of AIQ403 to emitter of AIQ315.)


Pages 8-52/8-53, Figure 8-22.

Assemblies in this group do not have:

- A1C531
- A1C541
- A1C543
- A1CR503
- A1L505 (ferrite bead on Q505)
- A1L506 (ferrite bead on Q506)
- A1R561
- A1R562
- A1R563

Component Locator See Figure 7-1, Page 7-25.

SCHEMATIC:

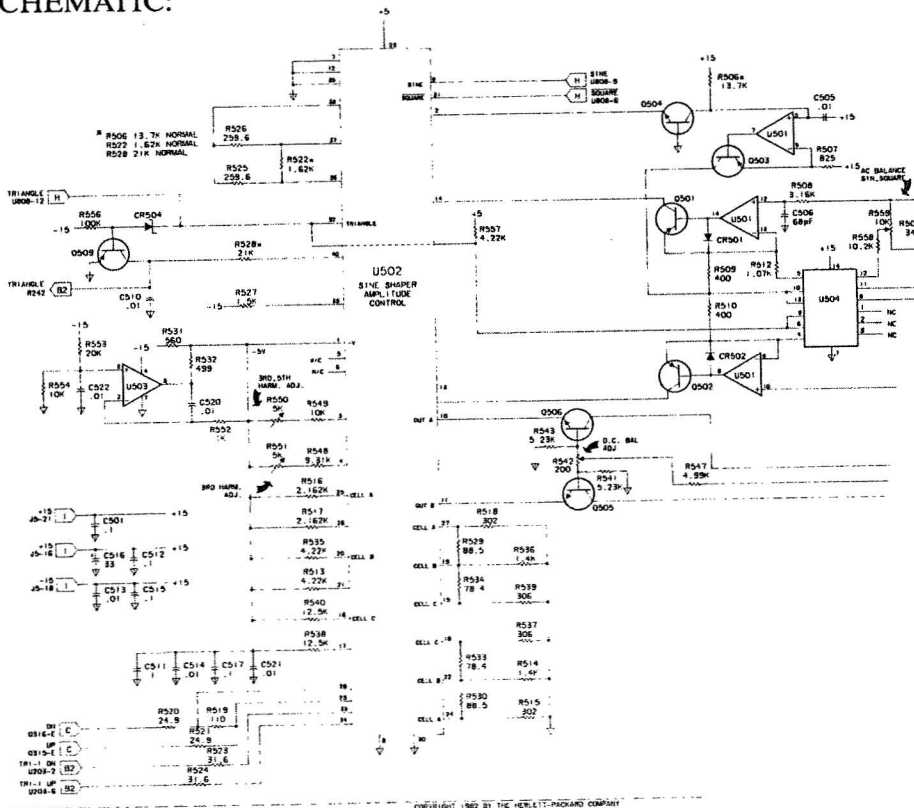

Δ5 (S/N 2141A03032 through 2141A03658):

Instruments in this serial number range have a fan grill (P/N 31600201) installed on the rear panel. Add this part number to the Replaceable Parts list.

Δ6 (S/N 2141A03572 and lower—A8 REV A & B assemblies):

Pages 8-80/8-81, Figure 8-36.

Change in schematic and Replaceable Parts list:


- A8Q002 to NPN transistor 2N3904,
- P/N 1854-0215
- A8R14 to 7.5kΩ, P/N 0757-0440

Assemblies in this group include:

- A8CR007, 12V zener diode, P/N 1902-0960

Component Locator See Figure 7-2, Page 7-25.

SCHEMATIC:

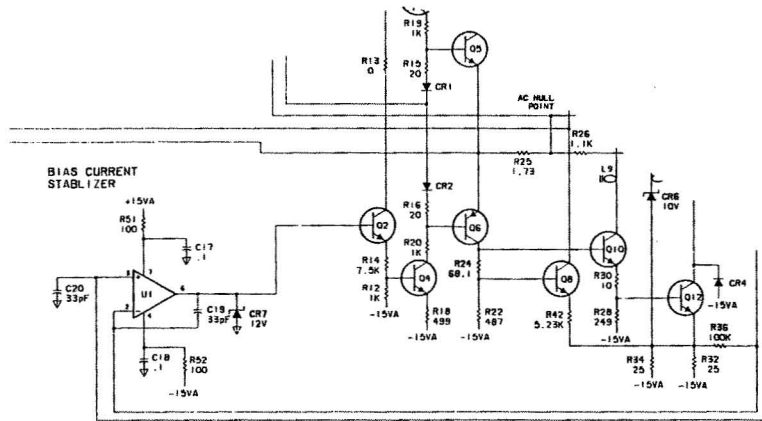

Δ7 (S/N 2141A03985 and lower):

Pages 8-54/8-55, Figure 8-23.

(A1 REV A & B assemblies).


Change in schematic and Replaceable Parts list:
A1C602 to 2.7pF, P/N 0160-4798

Assemblies in this group include:
A1C603 4.7pF, P/N 0160-4795
A1R602 1kΩ, P/N 0757-0280

Assemblies in this group do not have:
A1C608
A1C609
A1R621

Component Locator See Figure 7-1, Page 7-25.

SCHEMATIC:

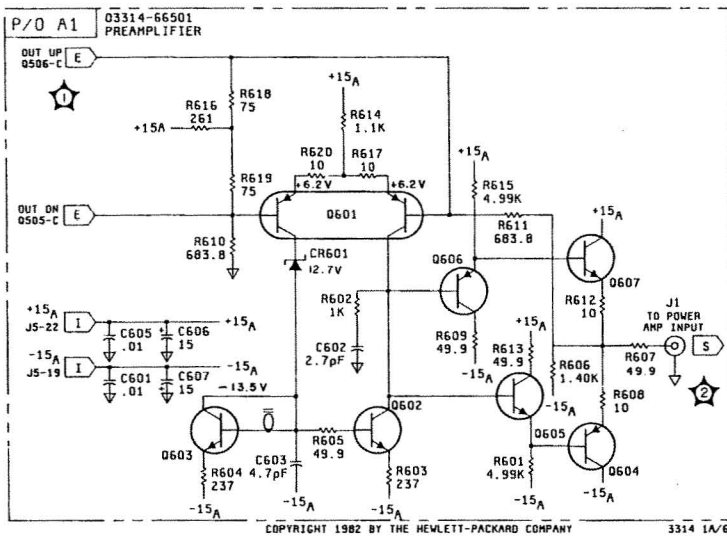

Pages 8-80/8-81, Figure 8-36 (A8 REV A & B assemblies).

Change in schematic and Replaceable Parts list:

- A8R021 and A8R022 to 487Ω, P/N 0698-3178
- A8R023 and A8R024 to 68.1Ω, P/N 0757-0397

Assemblies in this group include:


- A8C005 and A8C006 to .01μF, P/N 0160-3847

Assemblies in this group do not have:

- A8C031
- A8C032
- A8C033
- A8R040

Component Locator See Figure 7-2, Page 7-25.

SCHEMATIC:

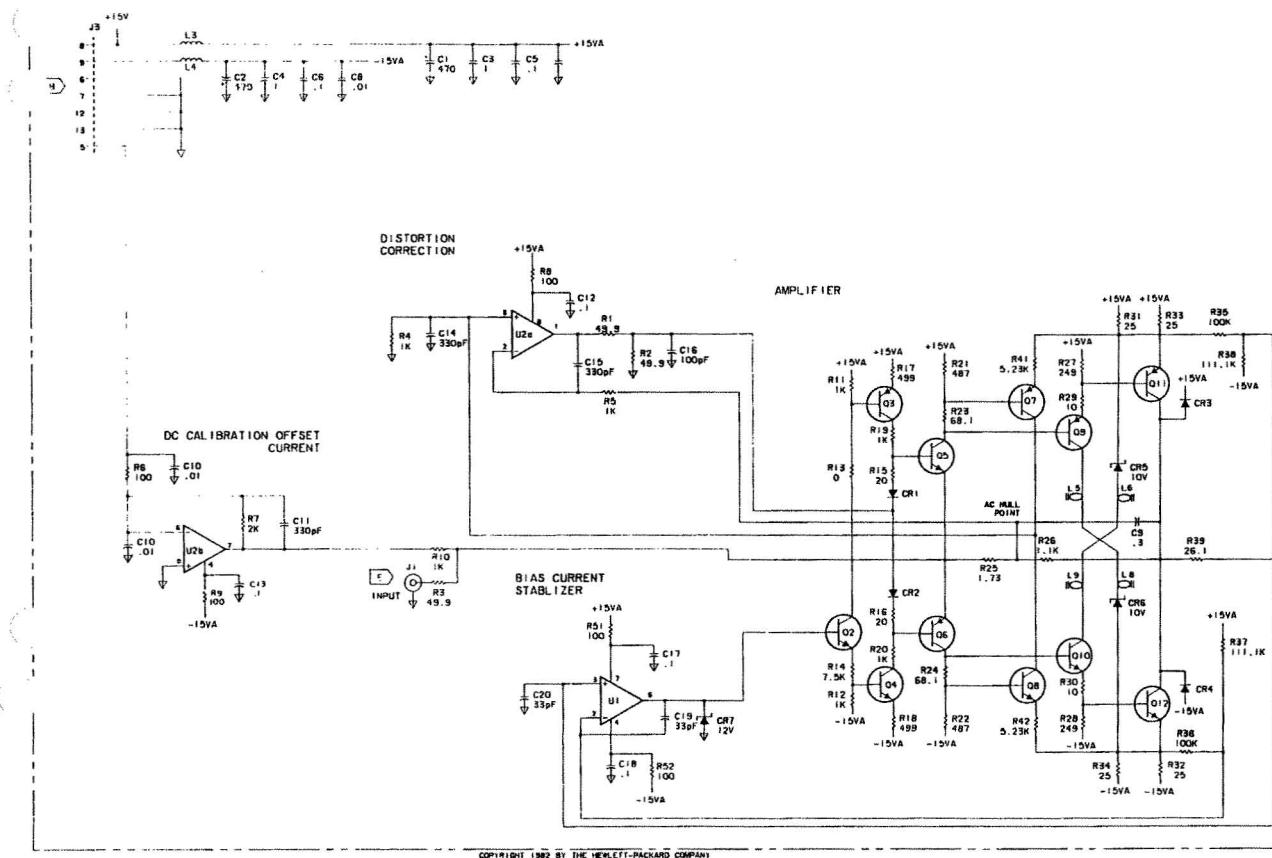

Δ8 (S/N 2141A04141 and lower):

NOTE

Instruments in this Serial Number range use inch hardware. Instruments above this range use metric hardware and have a new Serial Number prefix beginning with S/N 2505A04142.

Change in Replaceable Parts list:

MP001C to 5040-7219, Front Strap Handle Cap
 MP001D to 5040-7220, Rear Strap Handle Cap
 MP002A to 5060-9964, Bottom Cover
 MP004A to 5020-8815, Front Frame
 MP004B to 5020-8816, Rear Frame
 MP004C to 5020-8836, Corner Strut
 MP005A to 03314-00201, Sub Panel
 0515-0218, Machine screw M3.5
 0515-0396, Screw M4X0X10MM
 2510-0192, Machine screw
 2680-0172, Machine screw 10-32
 7120-8607, Caution label

NOTE

Option 907 (Front Handle) and Option 908 (Rack Adapter) kits ordered with instruments below S/N 2505A04142, use non-metric hardware.

Change the following part numbers in the accessory parts list:

Option 907 to 5061-0089
 Front Handle Assemble to 5060-9899
 Front Handle Trim to 5020-8896
 8-32 X 3/8 Screw to 2510-0195

Option 908 to 5061-0057
 Adapter Assembly to 5061-0006
 Rack Flange to 5020-8862
 8-32 X 3/8 Screw to 2510-0193

Δ9 (S/N 2505A05112 through 2505A05400—early A8 REV C assemblies):

Pages 8-80/8-81, Figure 8-36.

Change A8C031 and A8C032 to 2.2pF, P/N 0160-4799. When replacing these capacitors, use 6.8pF P/N 0160-4793 and update the schematic accordingly.

Δ10 (S/N 2505A06124 and lower—A1 REV A & B assemblies):

NOTE

Instruments with serial numbers above 2505A06124 have A1 Revision D assemblies. No Revision C exists for the 03314-66501 assembly.

Pages 8-38/8-39, Figure 8-13.

Change the following part numbers in the Replaceable Parts list:

A1C108 and A1C109 to 0160-4385
 A1MP101A through A1MP101D (Spacers P/N 5041-3020)
 replace Standoffs A1MP101A and A1MP101B (P/N 0380-1236),
 and Screws A1H101A and A1H101B (P/N 0515-0853)
 to mount A1U101.

Page 8-41, Figure 8-15.

Change the following part number in the Replaceable Parts list:

A1C216 to 0160-4298

Pages 8-48/8-49, Figure 8-20.

These radial-leaded capacitors use the following part numbers. Modify the Replaceable Parts list accordingly:

A1C301	0160-0576
A1C302	0160-3914
A1C303	0160-3914
A1C312	0160-3914
A1C313	0160-0576
A1C314	0160-3914

A1U303 is on a 14 pin socket, A1XU303, P/N 1200-0638.

Change in schematic and Replaceable Parts list:

A1R306 and A1R315 to 23.2Ω, P/N 0698-4369.

Pages 8-52/8-53, Figure 8-22.

Change the following components on the Replaceable Parts list:

- A1C531 to P/N 0160-4380
- A1R563 to P/N 2100-2655

The reference designators for A1R544 and A1R558 should be switched.

Pages 8-54/8-55, Figure 8-23.

Delete A1C602 (see Δ7 for break in serial number.)

Change the schematic to indicate that the value of A1C609 may be anywhere between 2.7pF and 10pF.

Δ11 (S/N 2505A06524 and lower—A3 REV A & B assemblies):

Page 2-3.

ROM IC#	LED	RAM IC#	LED
1 (U238)	FREQ	1 (U234)	SW/TR INTVL
2 (U236)	AMP TD	2 (U233)	START FREQ
3 (U210)	OFFSET	3 (U212)	STOP FREQ
4 (U209)	SYM	4 (U211)	MKR FREQ
5 (U208)	PHASE		
6 (U207)	N		

Page 5-2.

In test 5-2. BATTERY VOLTAGE AND CURRENT DRAIN CHECK, change step E to:

E. Measure the voltage at pin 18 of A3U211 with respect to ground. The voltage should be ≥ 2.5VDC but < 3.5VDC.

Page 5-4, Table 5-2.

Table 7-4. RAM/ROM Location and Reference LED's

ROM Test						
LED	FREQ	AMP TD	OFFSET	SUM	PHASE	N
Reference Designator	U238	U236	U210	U209	U208	U207
ROM Address Block	4000-5FFF	6000-7FFF	8000-9FFF	A000-B000	C000-D000	E000-FFFF
RAM Test						
LED	SW/TR INTVL	START FREQ	STOP FREQ	MKR		
Reference Designator	U234	U233	U212	U211		
RAM Location	UPPER4 NMOS	LOWER4 NMOS	UPPER4 CMOS	LOWER4 CMOS		

Page 8-13 through 8-17. Signature Analyzer Tests 1 through 5.

SA TEST #1

Signature Analyzer set up:

CLOCK/GROUND SA CLK/GND CONNECTOR
CLOCK NEGATIVE TRIGGER

START/STOP SA A15 STR/STP CONNECTOR
BOTH POSITIVE TRIGGER

Procedure:

- Set A3S1 for positions 1, 2, 7, and 8 closed.
- Cycle Power.
- Take signatures.
- +5 Volt = 0003

SIGNATURES

U206		U215		U216	
Pin #	Signatures	Pin #	Signatures	Pin #	Signatures
26	0000	2	7791	2	UUUU
27	0003	5	6321	5	FFFF
28	0000	6	37C5	6	8484
29	0003	9	6U28	9	P763
30	0003	12	4FCA	12	1U5P
31	0003	15	4868	15	0356
32	0003	16	9UP1	16	U759
33	0003	19	0002	19	6F9A
9	UUUU				
10	FFFF				
U218		U219			
11	8484	1	4868	1	37C5
12	P763	2	9UP1	2	6U28
13	1U5P	3	0002	3	4FCA
14	0356	4	0000	4	0000
15	U759	5	0000	5	5FUA
16	6F9A	6	0003	6	0003
17	7791	7	2302	7	A689
18	6321	9	F9CF	9	A275
19	37C5	10	534H	10	9842
20	6U28	11	C9U1	11	8P4F
22	4FCA	12	1183	12	5P1A
23	4868	13	64HF	13	282A
24	9UP1	14	29A4	14	02H5
25	0002	15	5FUA	15	3APP
U200		U221		U223	
1	29A4	4	29A7	1	282A
2	29A7	5	29A4	2	5P1A
12	0000	6	0000	3	A275
13	0003	11	0000	4	A689
		12	29A4	5	0003
		13	29A7	6	04UU
				8	UF80
				9	04UU
				10	0003
				11	U87F
				12	U87F
				13	8P4F
U224		U237			
1	U759	1	7791		
2	29A7	2	29A7		
3	C755	12	U15A		
4	6F9A	13	0003		
5	29A7				
6	1214				
11	PPH8				
12	29A7				
13	0356				
		U239			
		1	7791		
		2	6F9A		
		12	4493		
		13	29A4		

SA TEST #2

Signature Analyzer set up:

CLOCK/GROUND SA CLK/GND CONNECTOR
CLOCK NEGATIVE TRIGGER

START/STOP SEE TABLE 8-3
BOTH NEGATIVE TRIGGERS

Procedure:

Set A3 S1 for positions 1 and 2 closed.
Cycle power.
Move START/STOP to SA ROM connector of ROM under test.
(See Table 8-3.)
Take signatures of ROM under test.
+5 Volt = 1180

SIGNATURES

U238 (ROM #1) U236 (ROM #2) U210 (ROM #3)

Pin #	Signature	Pin #	Signature	Pin #	Signature
9	PO97	9	4A7C	9	7374
10	7561	10	2U36	10	50A3
11	620P	11	5020	11	UC66
13	HU7P	13	OCAO	13	32FH
14	PA21	14	P930	14	225A
15	10FH	15	9CAP	15	A60C
16	77F8	16	6F22	16	P902
17	31FH	17	160P	17	O29F

U209 (ROM #4) U208 (ROM #5) U207 (ROM #6)

Pin #	Signature	Pin #	Signature	Pin #	Signature
9	1843	9	OU3H	9	954U
10	OF9C	10	F7A9	10	CF1C
11	2H9A	11	92F2	11	A60C
13	9321	13	4CP4	13	2A24
14	295F	14	UPPA	14	2313
15	2A27	15	9558	15	P9F9
16	7H72	16	F849	16	6362
17	245C	17	293F	17	A1A7

SA TEST #3

Signature Analyzer set up:

CLOCK/GROUND SA CLK/GND CONNECTOR
CLOCK NEGATIVE TRIGGER

START/STOP J8 PIN 3 (there are two positions labeled #3)
BOTH POSITIVE TRIGGER

Procedure:

Set A3S1 for positions 3, 4, 7, and 8 closed.
Cycle Power.
Take signatures.
+5 Volt = UA2P
() indicates optional signature.

Table 7-5 SA Start/Stop Connections

START/STOP POSITIONS:	
U238 ROM #1	START J8 PIN 1 STOP J8 PIN 2
U236 ROM #2	START J8 PIN 2 STOP J8 PIN 3**
U210 ROM #3	START J8 PIN 3** STOP J8 PIN 4
U209 ROM #4	START J8 PIN 4 STOP J8 PIN 5
U208 ROM #5	START J8 PIN 5 STOP J8 PIN 6
U207 ROM #6	START J8 PIN 6 STOP J8 PIN 7

**NOTE: There are two positions on J8 labeled #3.

SIGNATURES

Pin #	Signature	Pin #	Signature	Pin #	Signature				
U200									
1	817U	U206							
2	7C51	4	H87H	U221					
5	0000	5	UA2P	8	293C				
12	HU58	6	UA2P	9	7899 (6959)				
13	2576	9	P1F2	10	40C4 (84HF)				
U222									
4	9690 (3AF5)	10	UA2U	U224					
5	OFA3	11	CCC1	8	UA2P				
6	CCA4 (57F2)	12	UA66	9	UA2P				
8	2576	13	224C	10	0000				
9	UA2P (0000)	14	182A	U225					
10	HU58	15	9644	1	FU6H				
11	HU58	16	859P	2	UA2P				
12	UA2P (0000)	17	114F	3	0000				
13	2576	18	9751	6	UA2P				
U226									
2	0000	19	7A2A	8	UA2P				
3	P1F2	20	8C5C	9	0000				
4	UA2U	22	162U	11	0000				
7	0000	23	464A	13	FU6H				
9	0000	24	3H1C	U227					
9	UA2P	25	3H1A	3	675A				
12	0000	26	UP8F	4	40C4 (84H4)				
13	224C	27	81F9	6	0000				
U228									
1	0000 (UA2P)	28	2APU	9	7899 (6959)				
2	7899 (6959)	29	19H9	10	UA2P				
3	HF54 (5PP3)	30	P644	11	9690				
4	HF54 (5PP3)	31	079H	U230					
7	CCF8 (CA12)	32	7C95 (8745)	2	2253				
10	0000	33	U737	3	UAAU				
12	7FA2 (FC37)	34	2576	4	PA49				
13	7FA2 (FC37)	U229							
14	7899 (6959)	1	U344	5	FU6H				
15	CCF8 (6A12)	2	2253	6	A93F				
U231									
1	AC30	3	H87U	7	4742				
2	U344	4	UA2P	8	CH6F				
3	UAAU	5	4742	9	293C				
4	UA2P	6	A93F	10	H315				
7	A93F	7	4742	11	CP18				
11	F352	8	293C	12	H700				
12	0000	9	H315	13	F352				
13	U44F	10	H315	14	U44F				
U232									
1	UP8F	11	UA2P	15	U44F				
2	81F9	12	0000	15	0000				
3	2APU	13	0000	U237					
4	19H9	16	CH6F	3	H315				
6	079H	17	9690	4	9690				
7	7C95 (8745)	18	H905 (996H)	5	0000				
8	U737	19	P1F2	6	UA2P				
9	UA2P (0000)	20	UA2U	U300					
10	U344	21	817U	Pin #	Signature				
13	H905 (996H)	22	HU58	1	F010				
15	UA2P (0000)	23	2576	2	CFUC				
16	CH6F	U301							
17	9690	Pin #	Signature	Pin #	Signature				
18	H905 (996H)	1	F010	1	F010				
19	P1F2	2	CFUC	2	F011				
20	UA2U	3	CFUC	3	2AA4				
21	817U	4	F010	4	AU9C				
22	HU58	5	F0U3	5	C73U				
23	2576	6	CFUC	6	6HF8				
U302									
Pin #	Signature	Pin #	Signature	Pin #	Signature				
1	F010	7	CFUC	7	P65A				
2	CFUC	8	CFUC	8	1892				
3	2AA4	9	CFUC	9	UC1P				
4	AU9C	12	CFUC	12	UC1P				
5	C73U	13	CFUC	13	1892				
6	6HF8	14	CFUC	14	P65A				
7	P65A	15	CFUC	15	6HF8				
8	1892	16	CFUC	16	C73U				
9	UC1P	17	F0U3	17	AU9C				
12	UC1P	18	F010	18	2AA4				
13	1892	19	CFU3	18	2AA4				
14	P65A	19	CFUC	19	F011				
15	6HF8	U302							
16	C73U	Pin #	Signature	Pin #	Signature				
17	AU9C	1	F010	1	F010				
18	2AA4	2	CFUC	2	F011				
19	F011	3	CFUC	3	2AA4				
30	1892	4	F010	4	AU9C				
31	P65A	5	F0U3	5	C73U				
32	6HF8	6	CFUC	6	6HF8				
33	C73U	7	CFUC	7	P65A				
34	AU9C	8	CFUC	8	1892				
35	2AA4	9	CFUC	9	UC1P				
36	F011	12	CFUC	12	UC1P				
37	A5P4	13	CFUC	13	1892				
38	56A0	14	CFUC	14	P65A				
39	C9HH	15	CFUC	15	6HF8				
40	0000	16	CFUC	16	C73U				

SA TEST #4

Signature Analyzer set up:

CLOCK/GROUND SA CLK/GND CONNECTOR
CLOCK NEGATIVE TRIGGER

START/STOP J8 PIN 3 (there are two positions labeled #3)
BOTH POSITIVE TRIGGER

Procedure:

Set A3S1 for positions 3, 7, and 8 closed.

Cycle power.

Take signatures.

+5 Volt = CFUC

Note: DISCONNECT ANY HP-IB CONNECTORS FROM THE REAR PANEL.

Signatures

U300		U301		U302			
Pin #	Signature	Pin #	Signature	Pin #	Signature		
3	7F45	1	F010	1	F010		
5	377U	2	CFUC	2	F011		
6	CFUC	3	CFUC	3	2AA4		
7	FFA3	4	F010	4	AU9C		
8	P5C8	5	F0U3	5	C73U		
9	7460	6	CFUC	6	6HF8		
10	6C69	7	CFUC	7	P65A		
11	9AA7	8	CFUC	8	1892		
12	HU7F	9	CFUC	9	UC1P		
13	6A4U	12	CFUC	12	UC1P		
14	4761	13	CFUC	13	1892		
15	3632	14	CFUC	14	P65A		
16	CFUC	15	CFUC	15	6HF8		
17	F010	16	CFUC	16	C73U		
18	F0U3	17	F0U3	17	AU9C		
19	CFUC	18	CFU3	18	2AA4		
21	CFUC	19	CFUC	19	F011		
22	CFUC	U302					
23	CFUC	Pin #	Signature	Pin #	Signature		
25	CFUC	1	F010	1	F010		
26	CFUC	2	CFUC	2	F011		
27	F010	3	CFUC	3	2AA4		
28	F010	4	F010	4	AU9C		
29	UC1P	5	F0U3	5	C73U		
30	1892	6	CFUC	6	6HF8		
31	P65A	7	CFUC	7	P65A		
32	6HF8	8	CFUC	8	1892		
33	C73U	9	CFUC	9	UC1P		
34	AU9C	12	CFUC	12	UC1P		
35	2AA4	13	CFUC	13	1892		
36	F011	14	CFUC	14	P65A		
37	A5P4	15	CFUC	15	6HF8		
38	56A0	16	CFUC	16	C73U		
39	C9HH	17	F0U3	17	AU9C		
40	0000	18	CFU3	18	2AA4		
		19	CFUC	19	F011		

SA TEST #5

Pages 8-70/8-71, Figure 8-31.

Signature Analyzer set up:

CLOCK/GROUND SA CLK/GND CONNECTOR
CLOCK NEGATIVE TRIGGER

START/STOP J8 PIN 3 (there are two positions labeled #3)
BOTH POSITIVE TRIGGER

Procedure:


Set A3S1 for positions 4, 7, and 8 closed.
Cycle Power.
Take signatures.
+ 5 Volt = HCP8

Change in schematic and Replaceable Parts list:
A3C105 to 390 μ F, P/N 0180-0650

Assemblies in this group include:
A3CR100 and A3CR102, P/N 1091-0200
A3CR101 and A3CR103, P/N 1901-0704

Component Locator See Figure 7-3, Page 7-26.

SCHEMATIC:

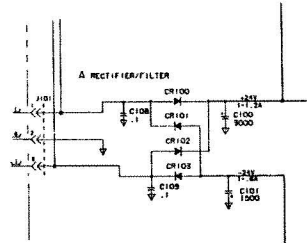

SIGNATURES

NOTE

() INDICATES SIGNATURES WITH THE CONNECTOR UNDER TEST REMOVED.

J3		J2	
Pin #	Signature	Pin #	Signature
1	9384	1	9384
2	P20P	2	P20P
3	2752	3	2752
4	8911	4	8911
5	8013 (A8P7)	5	A8P7
6	29P9 (53U3)	6	53U3
7	H4U6 (H987)	7	H987
8	P379	8	P379
9	0HH9	9	0HH9
10	1C2U	10	1C2U
11	A5FO	11	A5FO
12	5HH7	12	U7P5
13	KEY	13	U46C
14	GND	14	- 15V
15	GND	15	+ 15V
16	+ 5V	16	GND
17	- 15V	17	\pm 5V
18	- 15V	18	0000
19	- 15VA	19	UNSTABLE
20	+ 15V	20	UNSTABLE
21	+ 15V	21	95A7
22	+ 15VA	22	HCP8

Pages 8-72/8-73, Figure 8-32.

Change in schematic and Replaceable Parts list:
A3R017 to 49.9 Ω 1%, P/N 0757-0277.

Pages 8-74/8-75, Figure 8-33.

NOTE

For instruments with serial numbers greater than 2505A06524 (Revision C 03314-66503 assemblies):

A3U207 replaces A3U207
through A3U210
A3U208 replaces A3236 and
A3U238
A3U211 replaces A3U211,
A3U212, A3U233, and A3U234

These parts are not interchangeable. When ordering replacements, order parts that match your board revision.

Assemblies in this group include the following ROM chips (they may be MROMS or EPROMS):

NOTE

For instruments with serial numbers 2505A06300 through 2505A06524, programmed EPROMS were substituted for the MROM chips. When reordering, use the following part numbers.

A3U207	P/N 03314-60300
A3U208	P/N 03314-60301
A3U209	P/N 03314-60302
A3U210	P/N 03314-60303
A3U236	P/N 03314-60304
A3U238	P/N 03314-60305

Assemblies in this group include the following RAM chips:

A3U211 and A3U212 P/N 1818-1346
(NMOS RAM)
A3U233 and A3U234 P/N 1818-0438
(CMOS RAM)

Assemblies in this group include:


- A3J008 (J8) SA Test Strip,
P/N 1251-4335
- A3Q11, (NPN) 2N3904,
P/N 1854-0215
- A3R34 100kΩ 1%, P/N 0757-0465
- A3R62 10kΩ 1%, P/N 0757-0442
- A3R63 4.75kΩ 1%, P/N 0757-0437

Assemblies in this group do not have:

- A3C029
- A3R250
- A3R251
- A3R252
- A3R253
- A3R254
- A3U240
- A3U241

Component Locator See Figure 7-3, Page 7-26.

SCHEMATIC:

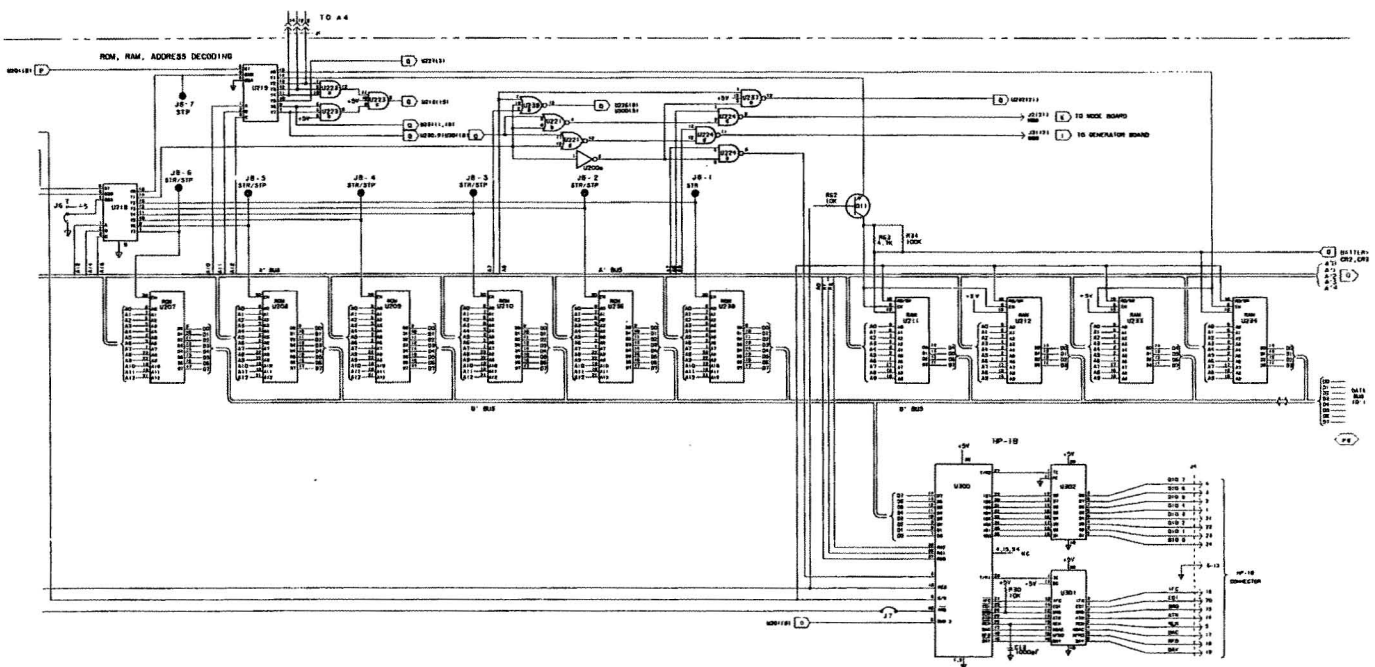

Δ12 (S/N 2505A06125 to 2505A06336—early A1 REV D assemblies):

Pages 8-52/8-53, Figure 8-22.

Resistors for A1R544 and A1R558 may be interchanged on 03314-66501 assemblies in this group. Interchanged values are acceptable if AC BALANCE adjusts accurately.

Δ13 (S/N 2505A07607 and lower—A8 REV A, B, C assemblies):

Pages 8-80/8-81, Figure 8-36.

Change the following components in the Replaceable Parts list:

- A8C009 to P/N 0160-2236
- A8C003 and A8C004 to P/N 0160-0127
- A8K001 through A8K008 to P/N 0490-1346

Δ14 (S/N 2505A08035 and lower—A1 REV A, B, & D assemblies):

Page 8-41, Figure 8-15.

Change in schematic and Replaceable Parts list:

- A1C203 to 0.75pF, P/N P0160-2235A
- A1K201 through A1K205, A1K261, A1K401, A1K701 to 0490-1346

Assemblies in this group do not have:

- A1C222


Δ15 (S/N 250A08197 and lower – A4 and A6 REV A assemblies):

Page 8-71, Figure 8-31.

Page 8-83, Figure 8-37.

NOTE

For instruments above this serial number range, the front and rear panels have been revised. The 03314-66504 Front Panel changed to the 03314-66510 assembly. The 03314-00202 Rear Panel changed to 03314-00223 and involved changes to some of the components mounted on it, including deletion of the 03314-66506 assembly. Instruments above this serial number range have a new prefix beginning with serial number 2734A08198.

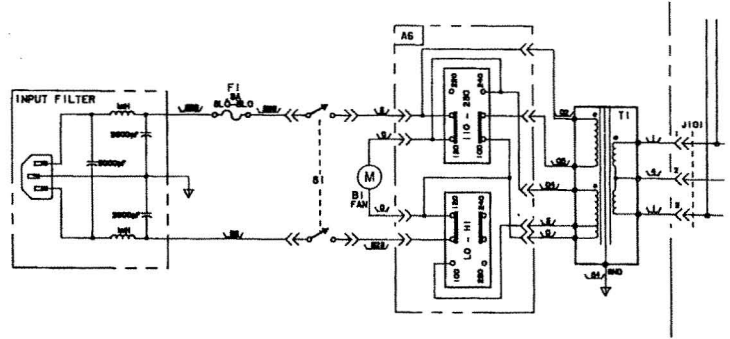

Change in schematic and Replaceable Parts list:

03314-66510 assembly to 03314-66504

03314-00223 assembly to 03314-00202

Assemblies in this group include:

03314-66506 assembly

The following schematic and parts lists reflect the previous versions of the Front Panel and Rear Panel assemblies.

Component Locator See Figure 7-4, Page 7-26.

SCHEMATIC:

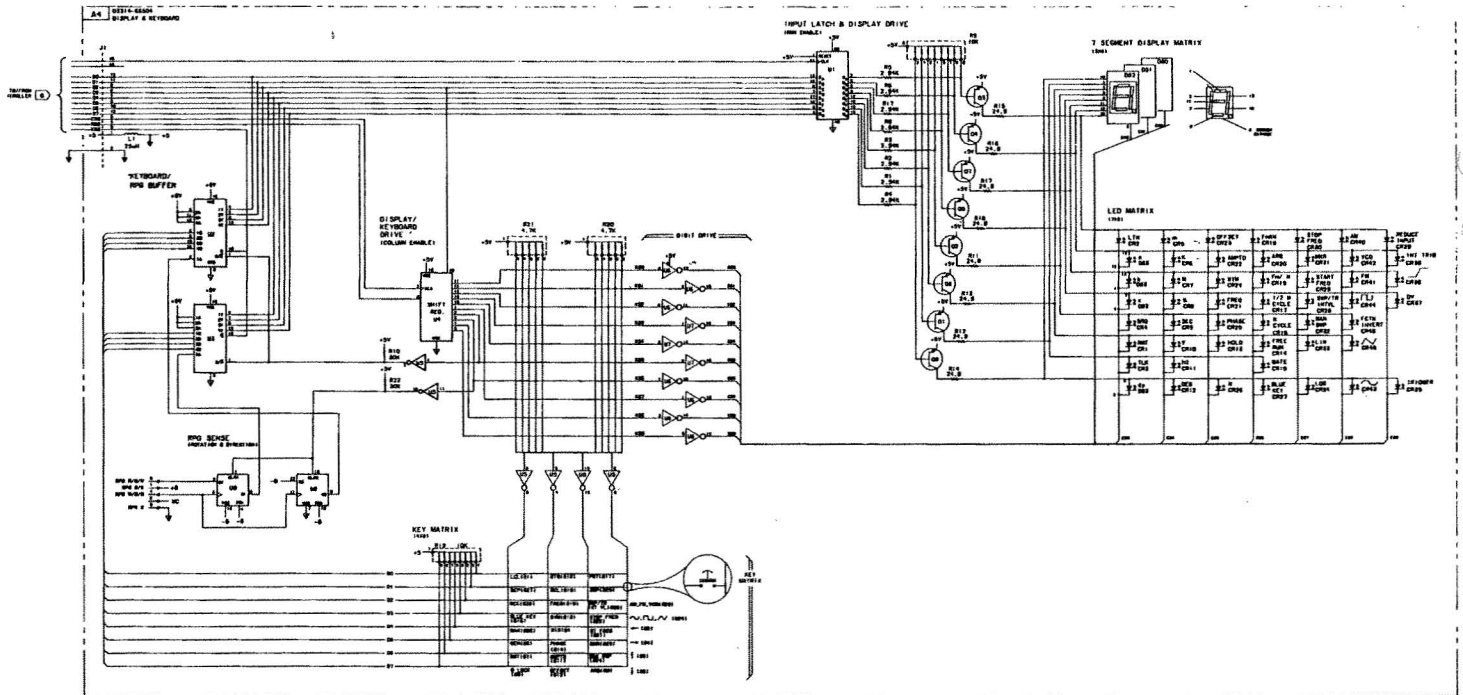


Table 7-6. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A4	03314-66504	8	1	PC ASSY-FRT-PNL	28480	03314-66504
A4C1	0180-2208	6	1	CAPACITOR-FXD 220UF+-10% 10VDC TA	13606	150D227X9010S2-DYS
A4C2	0160-3847	9	3	CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A4C3	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A4C4	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	04222	SA105C103KAA
A4CR1	1990-0959	8	1	LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR2	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR3	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR4	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR5	1990-0959	8	1	LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR6	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR7	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR8	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR9	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR10	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR11	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR12	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR13	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR14	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR15	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR16	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR17	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR18	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR19	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
CR20	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
CR21	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR22	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
CR23	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
CR24	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR25	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR26	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR27	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR28	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR29	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR30	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR31	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR32	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR33	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR34	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR35	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR36	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR37	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR38	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR39	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR40	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR41	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR42	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR43	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR44	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR45	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4CR46	1990-0959	8		LED-LAMP IF=35MA-MAX BVR=5V	G01114	MV57124
A4DS0	1990-0619	7	3	DISPLAY-NUM-SEG 1-CHAR .3-H	28480	1990-0619
A4DS1	1990-0619	7		DISPLAY-NUM-SEG 1-CHAR .3-H	28480	1990-0619
A4DS2	1990-0619	7		DISPLAY-NUM-SEG 1-CHAR .3-H	28480	1990-0619
4DS3	1990-0649	3	1	DISPLAY-NUM-SEG	28480	1990-0649
4E1	0960-0683	1	1	RPG ROTARY PULSE GENERATOR	28480	0960-0683
A4H1	0360-0077	5	2	TERMINAL-STUD SGL-TUR SWGFRM-MTG	00866	1601-HP
4H2	0360-0077	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	00866	1601-HP
4H3	3050-0067	9	4	WASHER-FL MTL C 5/16 IN .375-IN-ID	73734	31-550
A4H4	3050-0067	9		WASHER-FL MTL C 5/16 IN .375-IN-ID	73734	31-550
A4H5	7121-4611	2	1	LABEL-INFORMATION .15-IN-WD .6-IN-LG	28480	L01003
A4J1	1200-0424	9	4	SOCKET-IC 14-CONT DIP DIP-SLDR	C01032	CA-14S-10SD
A4J2	1200-0424	9		SOCKET-IC 14-CONT DIP DIP-SLDR	C01032	CA-14S-10SD
A4J3	1200-0424	9		SOCKET-IC 14-CONT DIP DIP-SLDR	C01032	CA-14S-10SD
A4J4	1200-0424	9		SOCKET-IC 14-CONT DIP DIP-SLDR	C01032	CA-14S-10SD
A4L1	9100-3334	2	1	INDUCTOR 25UH 10% .3D	99484	ES-2638

See introduction to this section for ordering information
 * Indicates factory selected values

Table 7-6. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
A4MP1-38	4040-2109	4	38	MOLD STDF-LED MTG	N02307	
A4Q1	1853-0066	8	1	TRANSISTOR PNP SI TO-92 PD=625MW	07263	S 32263
A4Q2	1853-0066	8		TRANSISTOR PNP SI TO-92 PD=625MW	07263	S 32263
A4Q3	1853-0066	8		TRANSISTOR PNP SI TO-92 PD=625MW	07263	S 32263
A4Q4	1853-0066	8		TRANSISTOR PNP SI TO-92 PD=625MW	07263	S 32263
A4Q5	1853-0066	8		TRANSISTOR PNP SI TO-92 PD=625MW	07263	S 32263
A4Q6	1853-0066	8		TRANSISTOR PNP SI TO-92 PD=625MW	07263	S 32263
A4Q7	1853-0066	8		TRANSISTOR PNP SI TO-92 PD=625MW	07263	S 32263
A4Q8	1853-0066	8		TRANSISTOR PNP SI TO-92 PD=625MW	07263	S 32263
A4R1	0698-4437	4	8	RESISTOR 2.94K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A4R2	0698-4437	4		RESISTOR 2.94K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A4R3	0698-4437	4		RESISTOR 2.94K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A4R4	0698-4437	4		RESISTOR 2.94K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A4R5	0698-4437	4		RESISTOR 2.94K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A4R6	0698-4437	4		RESISTOR 2.94K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A4R7	0698-4437	4		RESISTOR 2.94K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A4R8	0698-4437	4		RESISTOR 2.94K 1% .125W F TC=0+-100	91637	CMF-55-1, T-1
A4R9	1810-0269	3	2	NETWORK-RES 9-SIP 10.0K OHM X 8	13606	216CJ104
A4R10	0757-0453	2	2	RESISTOR 30.1K 1% .125W F TC=0+-100	19701	SFR25H
A4R11	0757-0291	6	8	RESISTOR 24.9 1% .125W F TC=0+-100	19701	SFR25H
A4R12	0757-0291	6		RESISTOR 24.9 1% .125W F TC=0+-100	19701	SFR25H
A4R13	0757-0291	6		RESISTOR 24.9 1% .125W F TC=0+-100	19701	SFR25H
A4R14	0757-0291	6		RESISTOR 24.9 1% .125W F TC=0+-100	19701	SFR25H
A4R15	0757-0291	6		RESISTOR 24.9 1% .125W F TC=0+-100	19701	SFR25H
A4R16	0757-0291	6		RESISTOR 24.9 1% .125W F TC=0+-100	19701	SFR25H
A4R17	0757-0291	6		RESISTOR 24.9 1% .125W F TC=0+-100	19701	SFR25H
A4R18	0757-0291	6		RESISTOR 24.9 1% .125W F TC=0+-100	19701	SFR25H
A4R19	1810-0269	3		NETWORK-RES 9-SIP 10.0K OHM X 8	13606	216CJ104
A4R20	1810-0368	3	2	NETWORK-RES 6-SIP 10.0K OHM X 5	11236	750-61-R10K
A4R21	1810-0368	3		NETWORK-RES 6-SIP 10.0K OHM X 5	11236	750-61-R10K
A4R22	0757-0453	2		RESISTOR 30.1K 1% .125W F TC=0+-100	19701	SFR25H
A4S1-30	5060-9436	7	30	SW-PB BILL WEST	28480	5060-9436
A4U1	1820-1730	6	1	IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN58039N
A4U2	1820-1438	1	2	IC MUXR/DATA-SEL TTL LS 2-TO-1-LINE QUAD	01295	SN57199N
A4U3	1820-1438	1		IC MUXR/DATA-SEL TTL LS 2-TO-1-LINE QUAD	01295	SN57199N
A4U4	1820-1045	6	1	IC SHF-RGTR TTL D-TYPE SERIAL-IN PRL-OUT	18324	CF412N
A4U5	1820-1200	5	1	IC INV TTL LS HEX	01295	SN53507N
A4U6	1858-0047	5	2	TRANSISTOR ARRAY 16-PIN PLSTC DIP	13606	ULN-2003A
A4U7	1858-0047	5		TRANSISTOR ARRAY 16-PIN PLSTC DIP	13606	ULN-2003A
A4U8	1820-1112	8	1	IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN53030N
A6	03314-66506	0	1	PC ASSY-LINE SW	28480	03314-66506
A6H1	7121-4611	2	1	LABEL-INFORMATION .15-IN-WD .6-IN-LG	28480	L01003
A6H2	8120-4660	0	2	LJPR 22GA RED 75MM DxD	28480	
A6H3	8150-0022	3	0	WIRE 22AWG R 300V PVC 7X30 105C	J01037	
A6H3	8120-4660	0		LJPR 22GA RED 75MM DxD	28480	
A6H3	8150-0022	3		WIRE 22AWG R 300V PVC 7X30 105C	J01037	
A6J1A	1251-0600	0	13	CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A6J1B	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A6J2A	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A6J2B	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A6J3	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A6J4	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A6J5	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A6J6	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A6J7	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A6J8	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A6J9	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A6J10	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A6J11	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	27264	16-06-0034
A6S1	3101-2300	6	2	SWITCH-SL DPDT STD 5A 250VAC SLDR-LUG	D8351	4021.1912
A6S2	3101-2300	6		SWITCH-SL DPDT STD 5A 250VAC SLDR-LUG	D8351	4021.1912

See introduction to this section for ordering information
 * Indicates factory selected values

Table 7-6. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty.	Description	Mfr. Code	Mfr. Part Number
MISCELLANEOUS PARTS						
MP5B	5040-6927	3	1	DIVIDER STRIP	28480	5040-6927
MP5C	03314-04301	3	1	PNL-DRS	28480	03314-04301
MP5J	8160-0376	1	1	RFI RING MNL-MSH .5-IN-OD .25-IN-ID	57003	02-0101-0053-05
MP5M	03314-69301	9	1	LNZ-DSPL,RED:3314A ACRL	28480	03314-69301
MP50	03314-69302	0	1	MOLD ANN. FRAME ASSY	28480	03314-69302
MP6A	03314-00202	5	1	SHTF ASSY-REAR PNL ALSK	28480	03314-00202
MP6D	03314-68501	9	1	FAN-ASSY 34CFM 110VAC 3.1x1.5	M01053	
MP6F	2110-0564	8	1	FUSEHOLDER BODY 12A MAX FOR UL	H9027	031.1657
MP6G	2110-0565	9	1	FUSEHOLDER CAP 12A MAX FOR UL	H9027	031.1666
MP6H	2110-0569	3	1	FUSEHOLDER COMPONENT NUT; THREAD M12.7	H9027	583.0016
MP6I	1400-0090	9	1	FUSEHOLDER COMPONENT FOR USE ON	75915	901-002
MP6K	35601-04103	8	1	STMP XFRMR CVR	28480	35601-04103
MP70	03314-00605	2	1	SHTF SHLD-LINE SW AL	28480	03314-00605
	5001-1880	5	1	KEY CAP - POWER SWITCH	28480	5001-1880
MP9A	5041-0276	5	5	MOLD KCAP UL PEARL	28480	5041-0276
MP9B	5041-0276	5		MOLD KCAP UL PEARL	28480	5041-0276
MP9C	5041-0276	5		MOLD KCAP UL PEARL	28480	5041-0276
MP9D	5041-0276	5		MOLD KCAP UL PEARL	28480	5041-0276
MP9E	5041-0276	5		MOLD KCAP UL PEARL	28480	5041-0276
MP9F	5041-0441	6	1	MOLD KCAP UL S.BLUE	28480	5041-0441
MP9G	5041-2019	8	1	MOLD KCAP - GEN	28480	5041-2019
MP9H	5041-2020	1	1	MOLD KCAP-BST	28480	5041-2020
P9I	5041-2021	2	1	MOLD KCAP PHASE LCK	28480	5041-2021
P9J	5041-2023	4	1	MOLD KCAP - LCL	28480	5041-2023
MP9K	5041-2024	5	1	MOLD KCAP - ARB	28480	5041-2024
MP9L	5041-2025	6	1	MOLD KCAP - PRE-SET	28480	5041-2025
MP9M	5041-2034	7	1	MOLD KCAP - STO	28480	5041-2034
MP9N	5041-2035	8	1	MOLD KCAP - RCL	28480	5041-2035
MP9O	5041-2036	9	4	MOLD KCAP 1/4(ARROW)	28480	5041-2036
MP9P	5041-2036	9		MOLD KCAP 1/4(ARROW)	28480	5041-2036
MP9Q	5041-2036	9		MOLD KCAP 1/4(ARROW)	28480	5041-2036
MP9R	5041-2036	9		MOLD KCAP 1/4(ARROW)	28480	5041-2036
MP9S	5041-2037	0	1	MOLD KCAP - SYM	28480	5041-2037
MP9T	5041-2038	1	1	MOLD KCAP - N	28480	5041-2038
MP9U	5041-2039	2	1	MOLD KCAP - PHASE	28480	5041-2039
MP9V	5041-2040	5	1	MOLD KCAP SW/TR-INTVL	28480	5041-2040
MP9W	5041-2041	6	1	MOLD KCAP MAN SWEEP	28480	5041-2041
MP9X	5041-2042	7	1	MOLD KCAP - MKR	28480	5041-2042
MP9Y	5041-2043	8	1	MOLD KCAP - FREQ	28480	5041-2043
MP9	5041-2044	9	1	MOLD KCAP - AMPTD	28480	5041-2044
MP10A	5041-2045	0	1	MOLD KEY CAP - OFFSET	28480	5041-2045
MP10B	5041-2046	1	1	MOLD KCAP-START FREQ	28480	5041-2046
MP10C	5041-2047	2	1	MOLD KCAP-STOP FREQ	28480	5041-2047
MP10D	5041-2048	3	1	MOLD KCAP - SWEEP	28480	5041-2048
T1	9100-4253	6	1	TRANSFORMER-POWER 100/120/220/240V	P02386	
W1	03314-61601	6	1	CBL-ASM SHL FHSG/SWT 570MM GY	28480	
W2	03314-61602	7	1	CBL-ASM DSC MHSG/FCRP 105MM ML	28480	
	03314-00211	6	1	SHTF PNL-FRT SUB AL	28480	03314-00211

See introduction to this section for ordering information
 * Indicates factory selected values

Δ16 (S/N 2505A08121 and lower — A3 REV A, B, C, assemblies):

Pages 8-13, through 8-17.

SA TEST #2

Table 7-7. SA Start/Stop Connections

<u>START/STOP POSITIONS:</u>	
U207	START U241(8) OR U207(22) - NEGATIVE TRIGGER STOP U241(8) OR U207(22) - POSITIVE TRIGGER +5 Volt = 0001
U208	START U241(6) OR U208(22) - NEGATIVE TRIGGER STOP U241(6) OR U208(22) - POSITIVE TRIGGER +5 Volt = 7554

SA TEST #3

START/STOP U218(11) or U241(13)
BOTH POSITIVE TRIGGER

SA TEST #4

START/STOP U218(11) or U241(13)
BOTH POSITIVE TRIGGER

SA TEST #5

START/STOP U218(11) or U241(13)
BOTH POSITIVE TRIGGER

Pages 8-70 through 8-77, Figures 8-31 through 8-34.

Change in Replaceable Parts list:

A3CR004 to P/N 1990-0517

Change in schematic and Replaceable Parts list:

A3C111 to 100 μ F, P/N 0180-2207


A3TP000 through A3TP007 to P/N 0360-0077

Assemblies in this group do not have :

- A3C119
- A3C120
- A3SA-CK
- A3SA-GD
- A3SA3/5
- A3SA7TP
- A3SA9TP
- A3SASTP
- A3SASTR


Assemblies in this group include connectors:

- A3SA001, P/N 1251-6427
- A3SA002, P/N 1231-6427

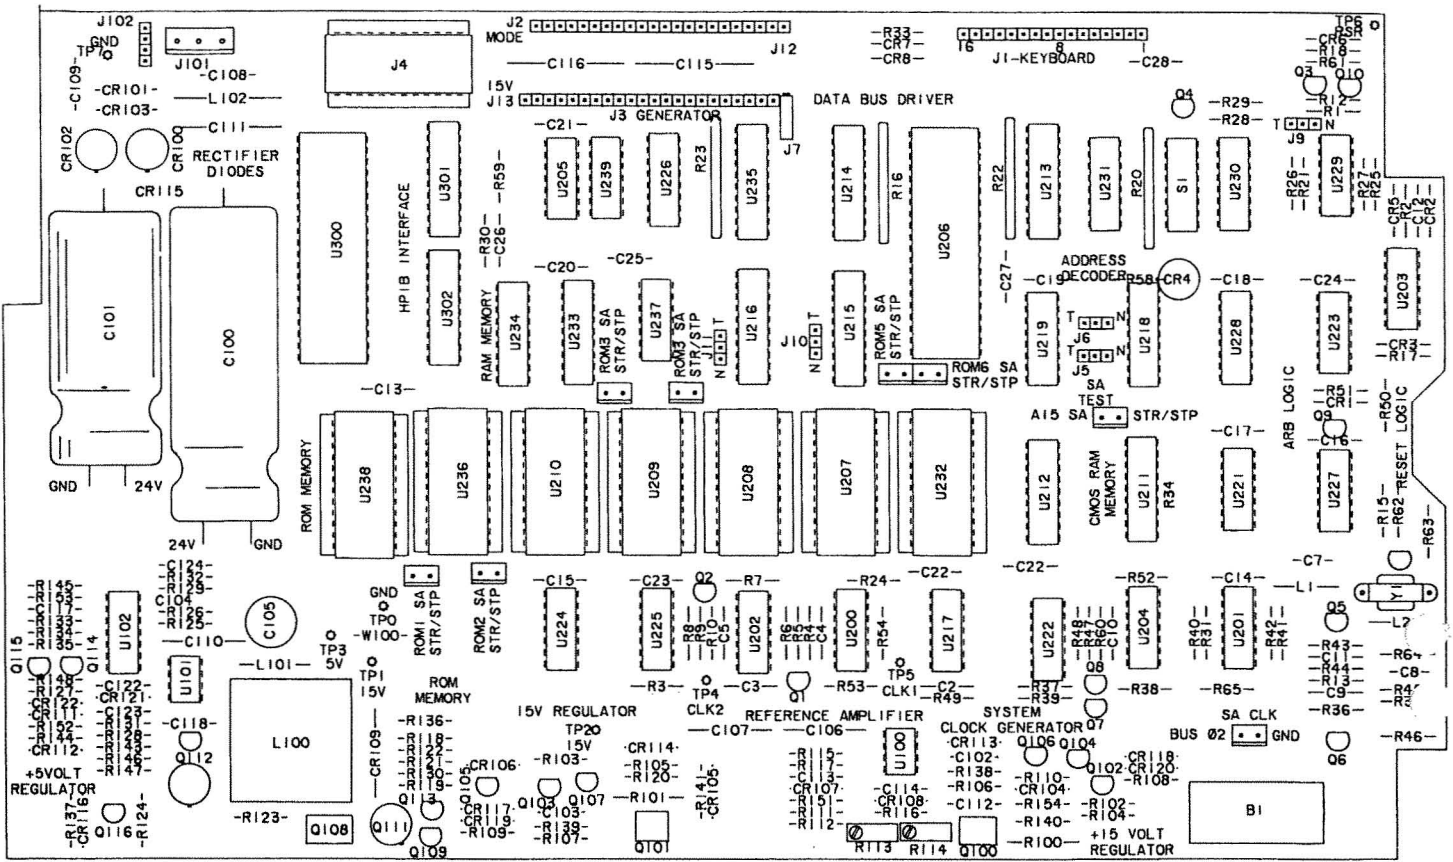

3314-3C

Figure 7-3. A3 Component Locator

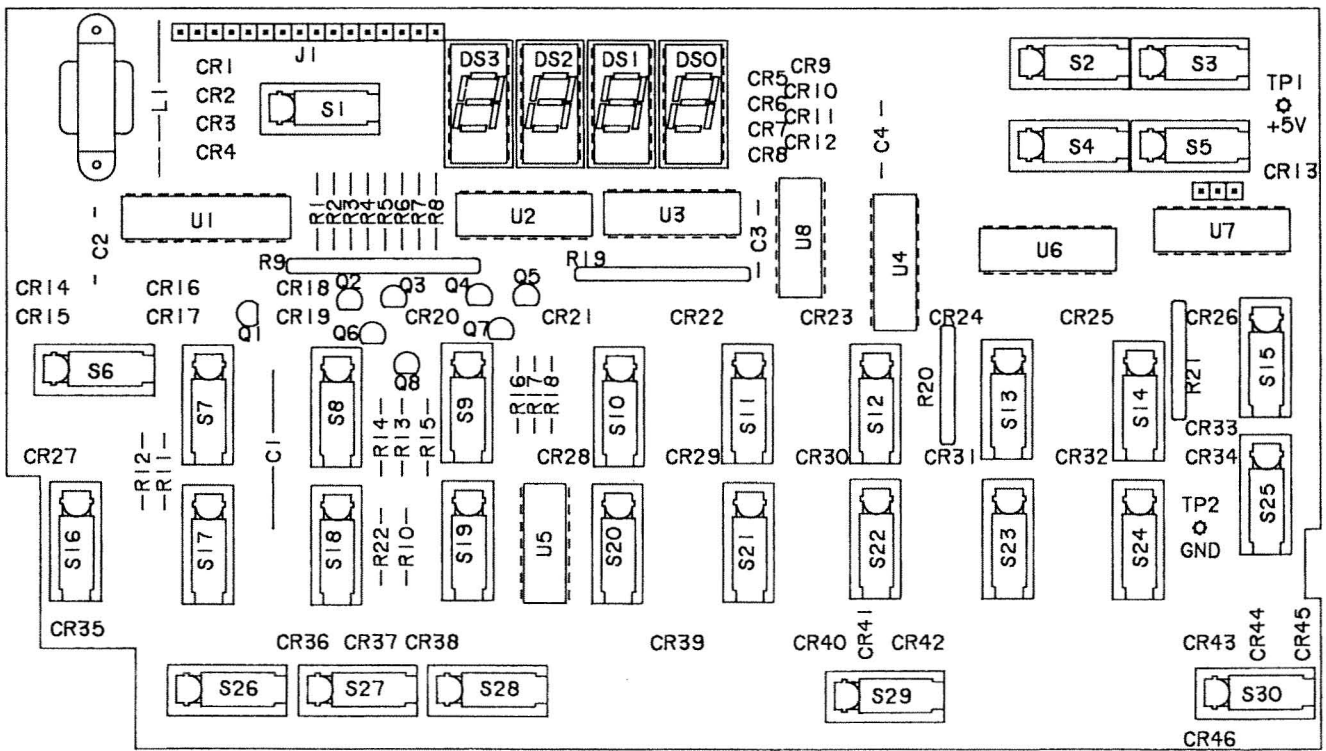

3314 4C

Figure 7-4. A4 Component Locator

SECTION VIII

SERVICE

8-1. INTRODUCTION

This section contains information to repair the 3314A Function Generator. See Section VII, Manual Backdating, for Δ explanations. If you are not familiar with the 3314A, review the Safety Considerations before proceeding to the Troubleshooting Section.

8-2. SAFETY CONSIDERATIONS

This section contains WARNINGS and CAUTIONS which must be followed for your protection and to avoid damage to the equipment.

WARNING

Maintenance described herein is performed with power supplied to the instrument and protective covers removed. Such maintenance should be performed by service-trained personnel who are aware of the hazards involved (for example, fire and electrical shock). Where maintenance can be performed without power applied, the power cord should be removed.

WARNING

Before any repair is completed, ensure that all safety features are intact and functioning and that all necessary parts are connected to their protective grounding means.

WARNING

Line voltage (110Vrms to 240Vrms) is present on the following components whenever the power is applied:

*Rear Panel Components
Line Module Assembly
The Fan (B1)*

Cables

The AC Power Cable from the Line Switch to the Line Module Assembly

PC Assemblies

A10 Front Panel & Keyboard

Front Panel Components

The Line Switch S1



Before troubleshooting the Power Supply, disconnect the cables to the other PC boards (J1, J2, J3, J102) and remove jumper A3W100. This insures that the Controller part of the A3 PC board and all of the other boards are not damaged while working on the Power Supply.



Review the STATIC SENSITIVITY and CLEAN HANDLING topics that follow. Failure to follow these procedures may cause unnecessary component waste.

8-3. STATIC SENSITIVITY

Several components on the A1, A2, A3, and A8 PC Assemblies will be destroyed if you do not use special handling techniques. It is important to:

1. Use an electrically conductive work surface such as the Model 8005, Field Service Work Station made by 3M. The Model 8005 contains a conductive work surface, a wrist strap and a grounding cord.
2. Make sure the 3314A's power cord is removed before soldering or unsoldering any components.
3. Store all components in conductive containers.

8-4. CLEAN HANDLING

The A1 PC Assembly must be clean handled. Solder flux and body oils must be removed (especially from the area under the shield) or the 3314A's frequency and symmetry accuracy in the lowest portions of each range may be degraded. This occurs when the integrating currents are very low (bottom of range) and the contaminants create leakage paths, shunting current away

from the integrating capacitor. Care should be taken to keep flux remover or any cleaning solutions away from the relay coils.

8-5. PARTS KITS

The Sine Shaper/Amplitude Control IC (A1U502) has three bias resistors that are factory selected. There is a selection procedure in Section V, however, this procedure is long, involved and is not recommended. Whenever replacing A1U502, order part number 03314-82501.

8-6. 3314A OPERATING SYSTEM

Two ROMs, U207 and U208 contain the 3314 operating system. Problems with the ROMS can be detected using the ROM/RAM checksum test described in paragraph 8-36.

8-7. THEORY OF OPERATION

Paragraphs 8-8 through 8-31 contain the theory of operation for the Model 3314A Function Generator. Circuit descriptions are given for unique complex circuits. These descriptions may be helpful when troubleshooting the instrument.

The 3314 contains the following PC board assemblies:

A1 Generator Board	03314-66501
A2 Mode Board	03314-66502
A3 Controller/Power Supply Board	03314-66503
A10 Front Panel Display & Key Board	03314-66510
• Includes: A11 Front Panel Board	•03314-66511
• A12 Display & Key Board	•03314-66512
A8 Output Amplifier Board	03314-66508
A5 X3 Output Amplifier Board	03314-66505 (Option 001)

8-8. ANALOG AND OUTPUT BOARDS (A1 and A8)

This section discusses a simplified function generator, a differential integrator, the method used to control the 3314A triangle generator, the Sine Shaper and the Output Amp/Attenuator.

8-9. Basic Function Generator

The block diagram of a basic Function Generator is shown in Figure 8-1A and of the 3314A in Figure 8-1B. A triangle waveform is generated by charging and discharging capacitor C (integration caps) by alternately switching the current sources Iup and Idn. The time required to charge and discharge the capacitor determines the period of one cycle and, therefore, the frequency.

The triangle waveform from the capacitor is buffered and applied to the Hysteresis Comparator which acts as a two state latch to control the direction of integration. As the triangle waveform alternately crosses the upper

and lower switching levels of the input, a square wave is generated at the output of the Hysteresis Comparator. This square wave is fed back to the switch which controls the path of Iup and Idn.

To obtain a sine wave, the triangle wave is shaped by a nonlinear network which varies the attenuation of the input triangle according to its level.

The Current Clamp holds the triangle ramp at a certain level when it is turned on. It accomplishes this by “stealing” current from the capacitor node and is used to turn the output on and off in gated and 1/2 cycle functions.

The output stage consists of a gain control and an output amplifier which allows for different amplitude settings and the proper output impedance. The sync output is a buffered square wave, from the output of the Hysteresis Comparator.

8-10. Basic Triangle Differential Integrator

The 3314A’s triangle generation is different from that of a basic function generator because the 3314A uses a differential integrator. A simplified schematic of the differential integrator used in the 3314A is shown in Figure 8-2. Notice that the integrating capacitor is no longer referenced to ground but floats across a differential pair and the integrator currents are both flowing in the same direction. If Sup is high and Sdn is low (during T₁) Q1 is on and Q2 is off. This means that the current Idn is flowing through the integrator capacitor C and both Idn and Iup are flowing through Q1. The net affect of constant current flowing through C is a voltage ramp which is sensed across the collectors of the differential pair and buffered by multi-gain (*1 or *10) stages. The Common Mode Loop assures that the current through the transistor that is turned on is exactly Iup + Idn. This assures that the collectors of the differential pair will not drift towards the supply voltages as a function of the offsets in the currents Iup and Idn. The voltage sensed at the positive input of the Common Mode Loop amplifier should always be -5 VDC for proper operation.

The integrating capacitor C varies from 27pF to 2.77μF corresponding to frequency ranges of 20MHz to 200Hz. The two lowest ranges (20 and 2Hz) are implemented by changing the multigain buffers from a gain of 1 to a gain of 10. This has the effect of making the integrator ramp over a voltage range 10 times larger, there by simulating capacitances 10 times larger. The integrating currents Iup and Idn are 1/10 their normal value in Range 1 and in all ranges when variable symmetry is active. The relationship of the integrating capacitors and the frequency ranges is shown in Table 8-1.

The differential outputs from the differential integrator are Tup and Tdn (Triangle up and Triangle dn). These signals are always 1 Volt p-p if measured with respect to ground and 2 Volts p-p if they are measured differentially. The signals always have a -5VDC (X10) or -6VDC (X1) offset.

8-11. Triangle Generator Control in the 3314A

Refer to the block diagram of the 3314A Triangle Generator, Figure 8-3 , for the following discussion.

The Freq/Sym Dac (U101) controls the amount of current (Iup and Idn) flowing into the integrator. The micro-processor writes to the DAC the Frequency and Symmetry required, and the DAC outputs the corresponding currents. Also note that the FM, VCO and Sweeping voltages/currents also change the integration current at this Integrated Circuit. Since the control of the integrating currents, Iup and Idn, has been discussed, the remaining discussion will deal with the control of the direction of integration.

The control of the direction of integration in the integrator depends on the particular mode the 3314A is operating in. Table 8-2 shows the relationship between the different modes and the control signals.

The signals Sup and Sdown are the outputs of the hysteresis comparator and are used in the normal modes.

The Servo up and dn are signals derived from the Phase Servo Amplifier. The signal contains the information necessary to "servo" the integrator to the proper DC level (set by phase) when the output is required to turn off, as in the Gate Mode. The correct phase that the in-

Table 8-1. Frequency Range Capacitance

Freq	Range	C total	C range	X10	Iup/Idn+10
20MHz	8	27.7 pF	27.7 pF (C218)	NO	NO
2MHz	7	277.7 pF	250 pF (C211&C210)	NO	NO
200kHz	6	2777.7 pF	2500 pF (C207)	NO	NO
20kHz	5	27777.7 pF	.025 μF (C206)	NO	NO
2kHz	4	277777.7 pF	.25 μF (C205)	NO	NO
200Hz	3	2777777.7 pF	2.5 μF (C204)	NO	NO
20Hz	2	2777777.7 pF	2.5 μF (C204)	YES	NO
2Hz	1	2777777.7 pF	2.5 μF (C204)	YES	YES

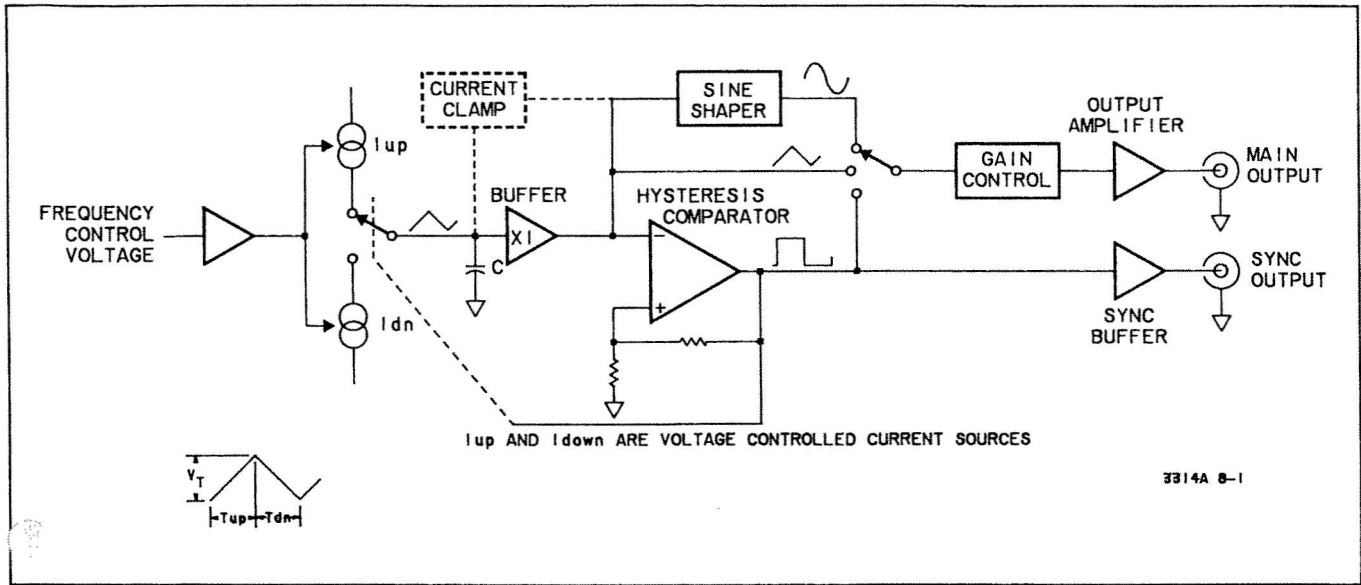


Figure 8-1A. Basic Function Generator Block Diagram

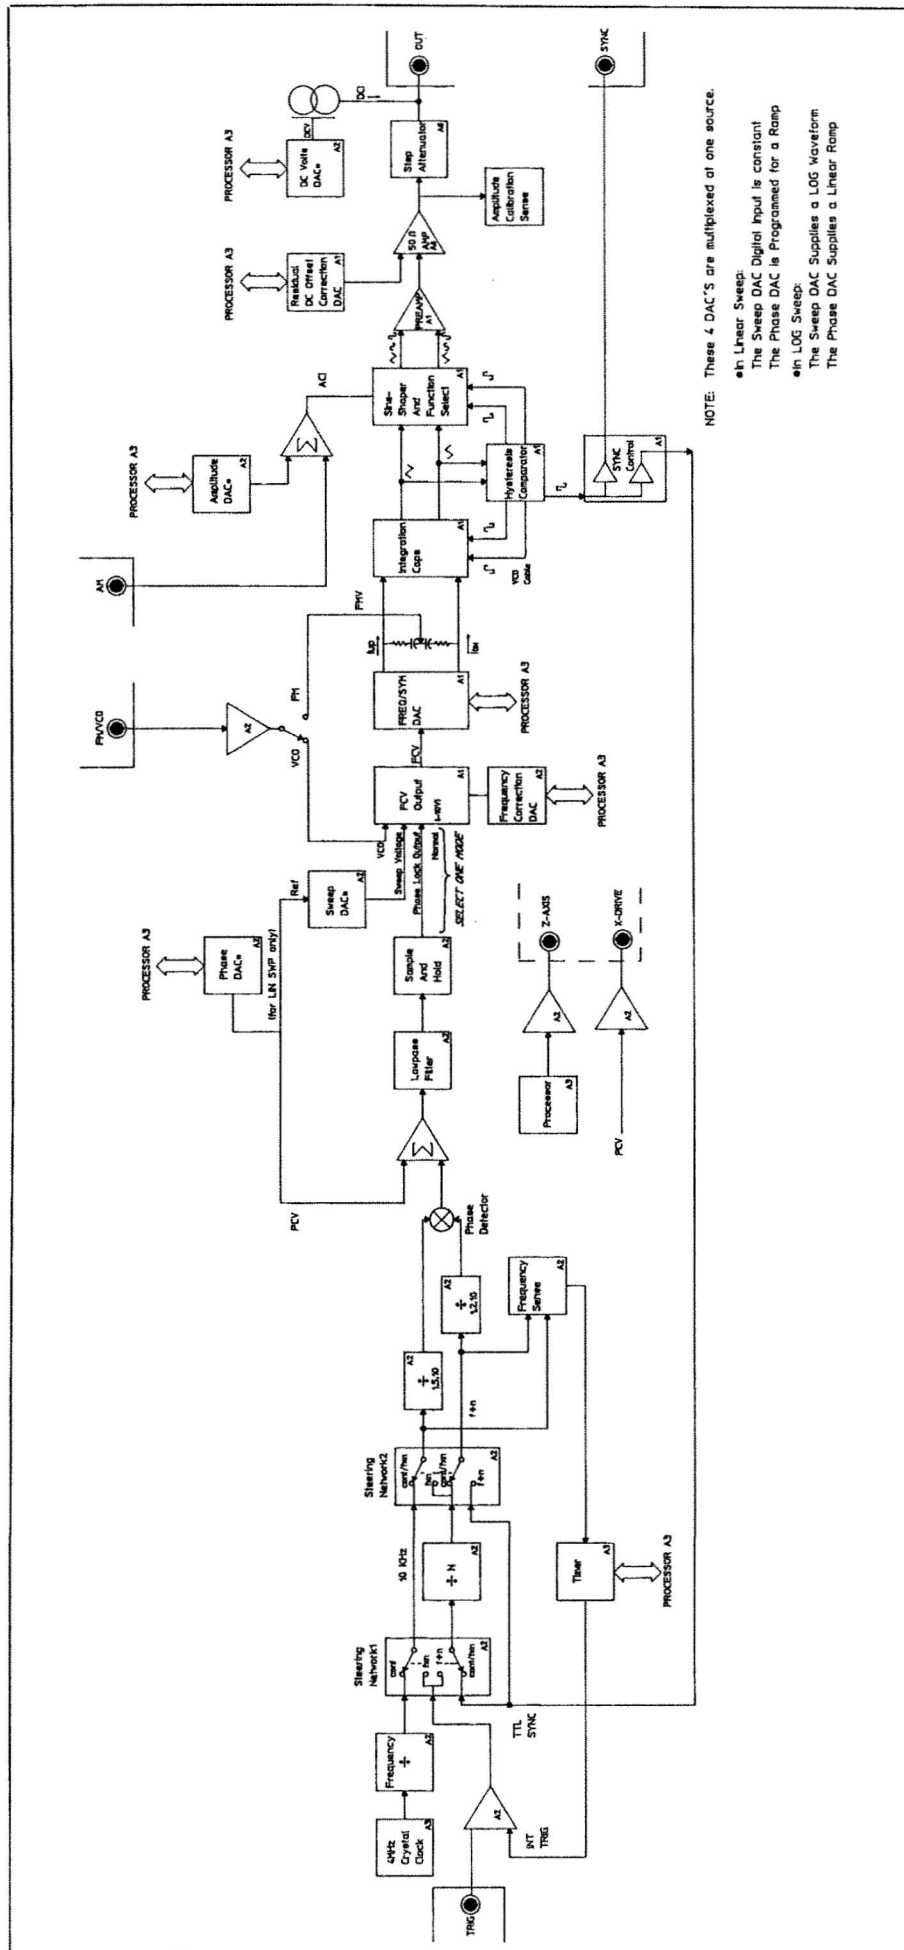


Figure 8-1B. 3314A Block Diagram

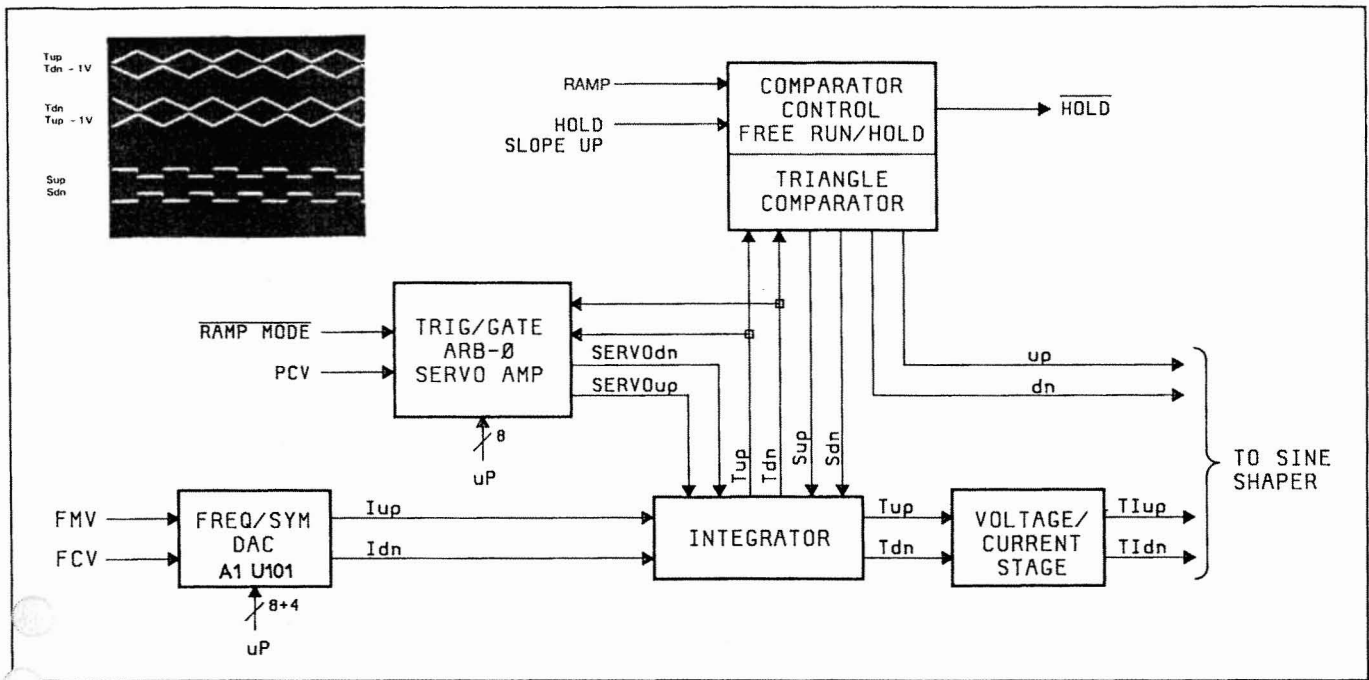


Figure 8-3. 3314A Triangle Generation

Sdn are disabled and Servo up and Servo dn have control of the direction of the integration. The controller writes a new word to the Freq/Sym DAC for each vector. The currents Iup and Idn vary as a function of the height of the vector. Servo up and dn are the direction control lines (similar to S up and dn in Free Run) for every vector except for the last vector when Servo up and dn become Servo signals (similar to Servo up and dn in Gating Modes). The ARB control and timing are controlled by the ARB control/timing block which is written to by the controller board (A3) for each sequence of vectors.

8-15. Transconductance Stage

The transconductance stage transforms the differential voltage signals Tup and Tdn into differential current signals TIup and TIidn. TIup and TIidn are then used as inputs the Sine Shaper/Amplitude Control Hybrid Integrated Circuit.

8-16. The Sine Shaper/Amplitude Control Hybrid IC

Refer to Figure 8-9. The Basic Operation Troubleshooting Diagram for the following discussion.

Sine waves are generated from the triangle waveforms by the Sine Shaper Hybrid integrated circuit. The sine waves are generated by driving a non-linear shaping circuit with a triangle waveform. This is done internal to the integrated circuit and no further discussion is necessary.

The vernier amplitude control of the 3314A is also accomplished with the Sine Shaper Hybrid. The inputs to the integrated circuit are the differential signals: Up and Dn, TIup and TIidn and the Amplitude Control Current (ACI) generated on the A2 board. The amplitude of each function is determined by the value of the ACI.

8-17. Preamplifier

The output of the Sine Shaper/Amplitude Control Hybrid Integrated Circuit (U502) is a pair of differential current signals Out up and Out dn. These signals are fed into the Preamplifier and transformed into a single ended output, voltage waveform which represents the final output of the 3314A. This signal is then fed to the output amplifier and step attenuator on the A8 assembly.

8-18. Output Amplifier and Attenuator (A8)

The output board amplifies the output of the preamp from the A1 board and attenuates the signal according to the amplitude range the 3314A is in. The DC offset current is summed into the output of the A8 board after the attenuator.

8-19. MODE BOARD (A2)

The Mode board function is to control the Triangle Generator in the varied modes found in the 3314A. The control signals for 1/2 Cycle, N Cycle, Gate, Sweeping and Phase Lock Modes are all generated on the Mode Board.

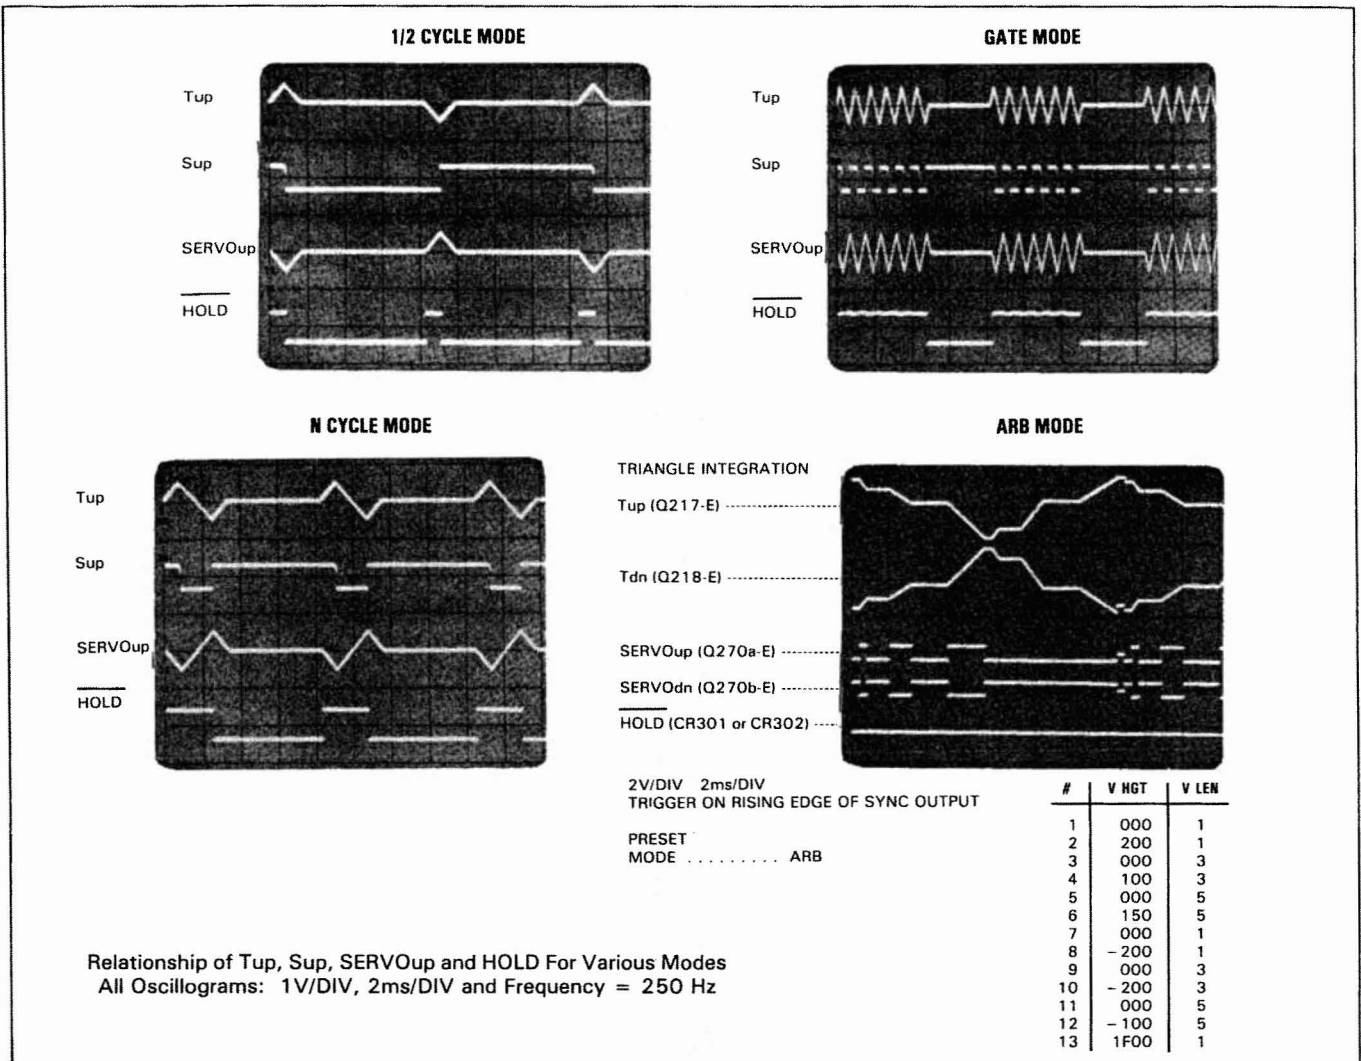


Figure 8-4. Integrator Control Signals

8-20. DACs On the A2 Board

Refer to the Troubleshooting Block Diagrams, Figures 8-8 through 8-10b, for the following discussion. There are three DACs on the A2 board. They are:

Multiplexed DAC U213 – Controls offset phase (UPCV), start/stop phase (PCV), sweeps (SWP), DC offset voltage (DCV), and the amplitude current (ACI).

AM SCALE DAC U221 – Scales the AM input voltage as a function of the amplitude setting to provide a constant % of modulation as amplitude is varied.

Freq Cal DAC U405 – Offsets the Frequency Control Voltage (FCV) for frequency calibration.

The Multi-plexed DAC controls four different functions. The functions are:

1. UPCV (Unconditioned Phase Control Voltage) – This output is either the Phase Control Voltage or the X-Drive voltage depending on which mode the 3314A is in. The signal is summed with +5 Volts and becomes the X Drive out. It also is buffered and sent to the A1 board where it determines the start/stop phase when the 3314A is in non-continuous modes that require the output to be offset to a specific phase. Note that in linear sweep this line is fed back to the DAC and used for the reference (instead of the normal +10 Volts). This enables the DAC to become a multiplying DAC, letting the X-Drive output always vary from -5 to +5 Volts.

2. Sweep – This output is used in the sweeping modes of the 3314A. In linear sweep the output ranges from –10V to 0V varying the triangle generator frequency over the correct frequency range. In linear sweep a maximum of 2 decades is allowed.

In Log Sweep this output varies logarithmically over the range desired (the micro-processor writes for every step) and the range is automatically changed.

3. DCV (DC offset Voltage) – This output determines the DC offset current summed into the output amplifier. The line is fed into the DC Offset Amplifier located on the A1 board.

4. AMP (Amplitude) – This output controls the amplitude of the 3314A. The AMP line is summed with the AM signal from the front panel and changed into a current. This current (ACI) is then fed into the Sine Shaper/Amplitude Chip where the vernier control (20dB) is located. The function invert is also located on this signal.

The AM Scale DAC scales the AM input voltage as a function of the amplitude range to provide a constant % of modulation as amplitude is varied.

The FREQ CAL DAC is used in the frequency calibration cycle. It offsets the frequency control voltage (FCV) by a calculated cal constant when the micro-

processor determines that the output frequency is incorrect (see calibration cycle).

8-21. Phase Locked Loop

Refer to the simplified block diagram of the phase lock loop for the following discussion, Figure 8-5. The Phase Lock circuitry of the 3314A has the following components:

1. Phase Detector
2. Loop Shaping
3. Sample and Hold
4. ÷ N counter
5. Internal or External Trigger
6. Main Generator

The trigger signal (internal or external) is buffered through the trigger comparator and applied to the input of the ÷ N counter. The ÷ N counter divides, depending on which mode, the trigger signal or the Main Generator output sync by the programmable number N. The Main generator and the trigger signal are then phase compared by the Phase Detector. The output of the phase detector is then filtered with the Loop Filter and sampled by the Sample and Hold circuit. This sampled voltage (FCV) is fed back to the 3314A's Main Generator where the frequency is adjusted such that the 3314A's (A1) frequency is exactly in phase with the internal or external signal.

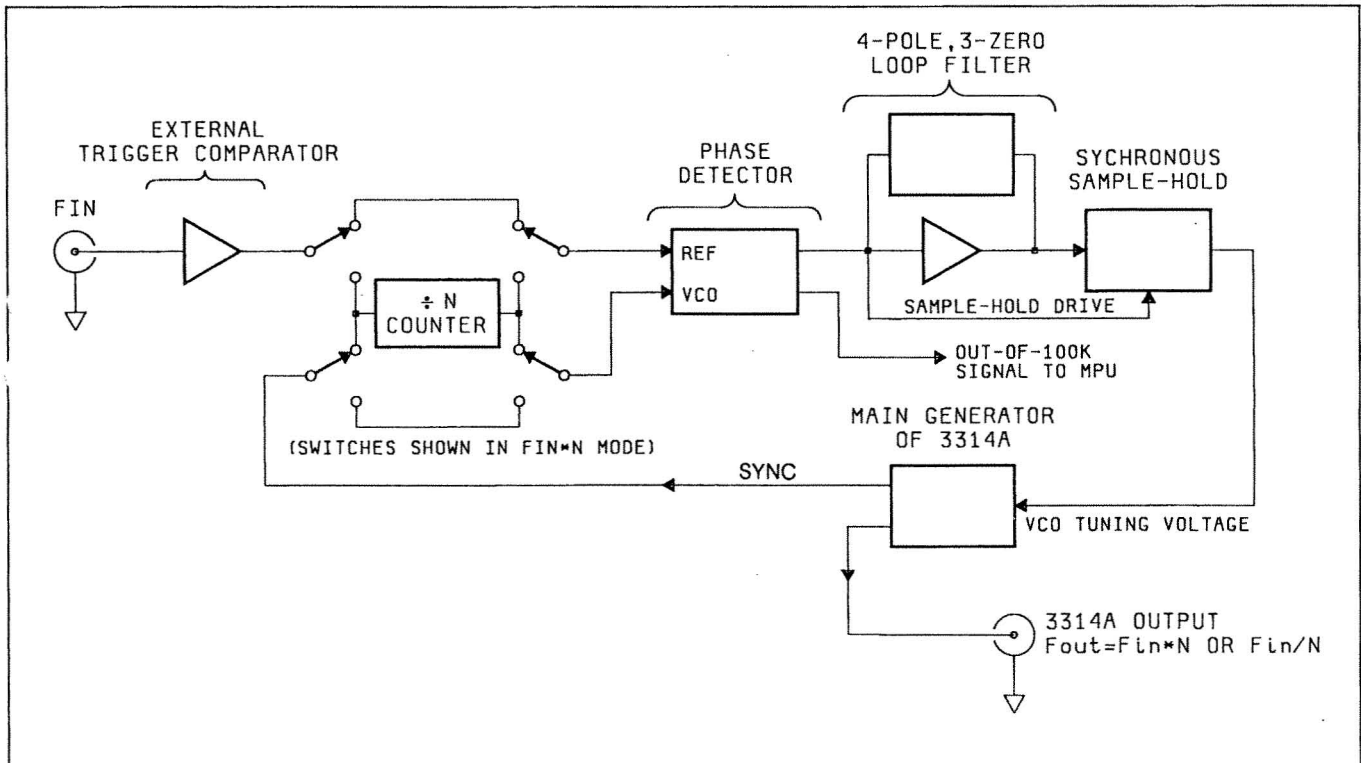


Figure 8-5. Phase Locked Loop Block Diagram

The Phase Detector is a four state machine. When the phase lock loop is in its locked condition, the Phase Detector clocks between the two middle states and clocks into the outer two states if the 3314A's signal drifts in or out of phase by a predetermined margin. If the phase locked loop stays in either of the two outside states for a long period of time, the micro-processor interprets this as an out-of-lock condition and flashes the corresponding LED on the front panel.

The Phase Locked Loop is also used in the top two frequency ranges of the 3314A. The instrument automatically uses the phase locked loop in these ranges to assure accurate frequencies. The trigger signal is the internally generated time base created on the A3 controller board. The time base is 10 kHz and is multiplied by N (1 to 1999) to accomplish generating a synthesized signal from 10 kHz to 19.99 MHz. All of the loop shaping networks and preset conditions are adjusted internally by the 3314A when the instrument is in these top two ranges.

8-22. VCO, FM, AM and Sweeping

As can be seen on the Troubleshooting Block Diagrams, Figures 8-10a and 8-10b, the FM modulation signal is summed into Iup and Idn currents before they reach the integrator on the A1 board. The VCO signal, on the other hand, is summed directly into the Freq/Sym DAC and the output currents reflect the change representing a change in frequency.

The AM signal is summed with the output of the 12 bit multiplexed DAC with the aid of an additional 8 bit DAC. This DAC assures that the modulating signal will be 100% modulation when it is ± 1 Volt. The output of the DACs are summed and called ACI and fed into the Sine Shaper/Amplitude Hybrid Integrated Circuit (U502). The output of the summed currents is sensed for overrange and a warning light is lit if the current is too large.

The 3314A accomplishes linear and log sweeps by varying the FCV line to the Freq/Sym DAC. This DAC initially has the stop frequency programmed into it and the FCV varies Iup and Idn over the required range. The sweep voltages are generated from the 12 bit Multi-plexed DAC. In linear sweep the reference to this DAC becomes the buffered output of itself such that it is a multiplying DAC. In Log sweep the Multi-plexed DAC is written to for each successive frequency and the voltage (FCV) varies logarithmically.

8-23. DC Offset

The DC Offset Voltage that is summed at the output of the A8 output amplifier board is generated from the 12 bit variable DAC. This voltage (DCV) is fed into the DC offset amplifier on the A1 board where it is transformed into a proportionate current and eventually summed

with the main generator output. The current varies from -200mA to $+200\text{mA}$ resulting in a DC offset of ± 5 Volts DC, independent of the main generator output.

8-24. Calibration Cycle

Refer to the Troubleshooting Block Diagrams, Figures 8-8 and 8-10b, for the following discussion.

There are two calibration cycles (Frequency and Amplitude) in the 3314A Function Generator. The cycles determine the correct calibration constants for accurate operation and are initiated in the following ways:

Frequency Calibration	Amplitude Calibration
Power Up	Power Up
Forced Cal (Front Panel)	Forced Cal (Front Panel)
Frequency Range Change	Function Change
Forced Freq Cal (Front Panel)	ARB Mode Entry or Exit

8-25. Frequency Calibration

A power up or turn on calibration takes place in the following manner. The Freq/Sym DAC outputs the amount of current corresponding to the frequency requested on the front panel. The frequency is sensed at the output of the 3314A and measured by the internal time base found on the Controller Board (A3). The correct offset to enable the frequency to be exact is calculated and this offset is entered into the Freq/Cal DAC located on the A2 board. The output of the Freq/Cal DAC is then summed into the currents controlling the Freq/Sym DAC. The output frequency is then sensed again and the cycle is repeated five times if the frequency calibration fails.

If the micro-processor tries the calibration five times and the frequency still cannot be pulled into the correct limits then a CAL ERROR 32 is displayed on the front panel.

If the micro-processor senses the frequency and finds that it is more than 6.4% out of limit, a CAL ERROR 31 is displayed on the front panel.

If the micro-processor cannot sense a frequency at the output of the 3314A (no signal present) then a CAL ERROR 30 is displayed on the front panel.

The Cal Constants for the lowest two ranges are calculated from the higher ranges because of the time involved to calibrate the lower ranges with the normal cycle.

8-26. Amplitude Calibration

When a function is changed or the 3314A is forced to calibrate amplitude, the micro-processor sets the fre-

quency of the 3314A to 10kHz and the amplitude to the lowest possible value for that range. It then offsets the signal's DC level with the DC OFFSET DAC until the upper comparator in the Amplitude Calibration Comparator is tripped. The micro-processor stores this number and then decreases the DC level of the signal until the lower comparator is triggered. The average of these two numbers is then calculated and used to correct any unwanted DC offset at the output. Once this is done the micro-processor adjusts the peak to peak value of the output signal by varying the ACI line through the multiplexed DAC to determine the amount of correction needed to correct the peak to peak level of the output signal. Once those Calibration Constants are determined, the whole process (DC Offset and Peak to Peak) is performed in the Function Invert Mode. These four calibration constants are stored in memory and used according to which function or DC offset is selected from the front panel.

27. POWER SUPPLY, CONTROLLER AND FRONT PANEL (A3 & A10)

28. The Power Supplies

The 3314A has three power supplies: +15V, -15V normal regulation supplies and a +5 Volt switching supply. When the power supplies are being troubleshooted, J1 and J2 should be disconnected to ensure that any power supply transients or overvoltages will not reach the other boards.

8-29. The Controller (A3)

The controller section of the 3314A is composed of a 6800 Motorola processor, 48k bytes of ROM, 2k bytes of usable CMOS RAM and the additional circuitry required to control the 3314A. The interface to the other boards in the 3314A is accomplished with eight data and four address lines.

The controller section contains several other areas that are critical to the proper operation of the 3314A. These areas include the Frequency Calibration Sense (U225, U229, U224 and U232), the ARbitrary Control (U227, U221, U228, U229 and U232) and the Timer for Sweep Control (U232).

The controller section has Signature Analysis built into both its hardware and software. This is recommended for troubleshooting problems on this board. See the troubleshooting section for more information.

8-30. The Front Panel and Keyboard (A10)

The Front Panel and Keyboard contains two sub-assemblies, the A11 Front Panel and the A12 Keyboard. The Front Panel interfaces the 3314A controller section with the outside world. It accomplishes this by sampling the front panel switches, rotary pulse generator (RPG), and driving the front panel LEDs. The front panel has

an 8 row by 10 column annunciator array and an 8 row by 5 column key array that are scanned simultaneously. It takes about 10ms to scan all 10 columns.

8-31. X3 OUTPUT (A5)

Option 001 to the 3314A is a high input impedance, low output impedance, non-inverting amplifier. The amplifier is comprised of six basic circuits (see Schematic T). The first circuit is a high gain differential pair (Q1a & b), with bias provided by Q2 and input protection given by CR6 and CR8 (the amplifier's gain of 3 is set by R14 and R16). A complimentary common base stage (Q4 & Q6) follows, which is biased by Q7 and Q8. Q11, Q12, Q17, Q18 form a complimentary two stage voltage follower. Q14 and Q16 combined with R42 and R43, limit the current at the output to 30mA peak. The +24V and -24V power supply shown in the upper left hand corner of the schematic is rectified by U2. Finally, an output protection relay comprised of U1 and K1 disconnects the output when the power is off or when the voltage on the output BNC's exceeds $\pm 20V$.

8-32. TROUBLESHOOTING

There are three basic 3314A troubleshooting areas containing the following items:

DIGITAL TROUBLESHOOTING

1. ROM/RAM CHECKSUM (front panel test)
2. A3S1 TESTS
 - FREE RUN (SA Test 1 and 2)
 - HP-IB (SA Test 4)
 - COUNTER TEST (SA Test 3)
 - LATCH TEST
 - DAC EXERCISE
 - TWEAK (assists making four adjustments)
 - NO CAL (disables Calibration and centers all cal constants)

ANALOG TROUBLESHOOTING

1. SIGNAL NAME CONNECTIONS
2. TROUBLESHOOTING BLOCK DIAGRAMS
 - MULTIPLEXED DAC
 - Required by all operating modes
 - BASIC OPERATION
 - Free Run; Frequency (not synthesized);
 - Amplitude; Offset; Sweep; Modulation
 - GENERAL OPERATION
 - All modes of operation
3. CONTROL LATCH TRUTH TABLES
 - A1 FOUTR LATCH (A1U902)
 - A1 FUNAT LATCH (A1U808)
 - A1 ANSTAT LATCH (A1U801)
 - A1 INHIB LATCH (A1U807)
 - A2 INPHA LATCH (A2U322)

- A2 LOCMOD LATCH (A2U325)
- A2 MBSTAT LATCH (A2U327)
- A2 NDIHV LATCH (1/2 of A2U323)

SCHEMATICS

Assembly	Schematics
A1 Generator	A1A through A1K
A2 Mode	A2A through A2D
A3 Controller	A3A through A3D
A5 X3 Output	A5A
A8 Output Amplifier	A8A
A10 Front Panel Display and Keyboard *	A10A

* (Includes A11 Front Panel and A12 Display and Keyboard)

8-33. DIGITAL TROUBLESHOOTING

8-34. 3314A Controller Self Test and Signature Analysis

The 3314A controller has self tests and signature analysis designed into the controller hardware and software. These tests include a confidence ROM/RAM checksum and detailed SA routines to simplify troubleshooting of the controller board. Other tests available for the 3314A that are initiated on the A3 controller board are also discussed.

8-35. Available Tests

The following are the available tests for the 3314A:

1. ROM/RAM CHECKSUM (initiated through front panel)
2. Tests initiated through A3 S1

S7	S6	S5	S4	S3	S2	S1	FUNCTION/TEST
0	0	0	0	0	0	0	NORMAL OPERATION
1	1	X	X	X	1	1	FREE RUN SA
1	1	0	0	1	0	0	HP-IB SA
1	1	0	1	0	0	0	A3 LATCH SA
1	1	0	1	1	0	0	COUNTER SA
X	X	1	0	0	0	0	LATCH TEST
X	X	1	0	1	0	0	DAC EXERCISE
X	X	1	1	0	0	0	TWEAK (ADJUST) and DATE CODE
X	X	1	1	1	0	0	NO CALIBRATION

X = DON'T CARE
 1 = CLOSED POSITION
 0 = OPEN POSITION

8-36. Description of Tests and Functions

THE ROM/RAM CHECKSUM is initiated through the front panel by cycling power with the ARB key pushed. The checksum takes approximately 30 seconds to complete and during this time the display is blanked. The test is complete when the display and LEDs on the front panel are lighted. If a ROM or RAM fails a specific LED will not light, indicating which ROM or RAM is defective. The LEDs that correspond to the defective parts are:

Δ 11

ROM IC	LED	RAM IC	LED
U208	FREQ AMPTD	U211	SW/TR INTVL START FREQ
U207	OFFSET SYM PHASE N		STOP FREQ MKR

8-37. Tests Initiated From A3 S1

THE FREE RUN TEST (SA Tests #1 and 2) disables the instruction bus and sets the micro-processor in a count sequence. Because the instruction bus is disabled the processor and associated memory can be checked for faults using Signature Analysis. For those people that are not familiar with SA techniques, this is the "kernel" and must pass for the remaining tests to run.

THE HP-IB TEST (SA Test #4) writes data to the HP-IB chip in a recirculating pattern so that the HP-IB chip and latches can be checked with signature analysis. The handshake lines are not tested nor is the ability of the 3314A to receive data from the HP-IB.

THE COUNTER TEST (SA Test #3) checks the hardware on the controller board that was not checked in the Free Run test. This routine requires that both the processor and memory be functional. The test does not exercise the output buffers to the other boards. The output latches should be checked with SA Test #5.

THE LATCH TEST (SA Test #5) checks the output of the A3 board data lines D1 through D8. The processor accomplishes this by continually clocking the output buffers. This test should be run if the controller section seems to be running properly but a digital problem is still evident (such as no frequency or amplitude change).

THE LATCH TEST programs the controller to write to the latches on the other boards. The controller walks a "1" through each latch sequentially. Use the individual latch enable or clock signal as triggers.

THE DAC EXERCISE writes to the various DACs in the instrument. The output of the DACs, if they are functional, should be a ramp. The various DACs that are checked are:

A2 U213 MULTIPLEX DAC

A2 U405 FREQUENCY CORRECTION DAC

A2 U221 AM SCALER DAC

A1 U802 DC OFFSET CORRECTION DAC

See the Latch Test and DAC Exercise instructions at the end of this Digital Troubleshooting section.

TWEAK sets the 3314 up for three calibration procedures and four tests. See adjustment procedure for details. This test also causes the 3314A to display the Date Code of the firmware for about 1/2 second.

CAL mode disables the calibration sequence of the 3314A. This test is useful when adjusting a 3314A or troubleshooting a 3314A that has a re-occurring error. The "cal constants" are set to mid-range values when this mode is engaged.

8-38. TROUBLESHOOTING SEQUENCE OF THE CONTROLLER (A3)

There are five Signature Analysis Tests. They are:

SA Test #	Title
1	Free Run SA
2	ROM/RAM Output Verification
3	Counter SA
4	HP-IB SA
5	A3 Latch Test

Refer to the previous section for descriptions of the above tests.

The test sequence for troubleshooting the A3 board should be:

1. Run the Front Panel ROM/RAM CHECKSUM.
2. If the CHECKSUM passes (all LEDs on) there is a 90% probability that the controller is functioning; this DOES NOT imply that the output buffers of the controller board are functioning and they should be tested using SA TEST #5.
3. If the CHECKSUM does not pass (front panel goes away and never reappears), SA Test #1,#2 and #3 should be used sequentially until the problem is found. See "How to Use SA Test #1, #2 and #3 " in this section.

4. If the CHECKSUM does not pass (front panel comes back but there is an indication of a failed ROM or RAM) then the LED that hasn't been turned on should be checked by pushing the corresponding button and determining if the LED turns on.If the LED turns on the ROM or RAM under question is probably defective.To be absolutely sure, run SA Test #2 on the suspect ROM. There is no such test for the suspect RAM.

5. If the CHECKSUM passes and the instrument is experiencing a HP-IB failure SA Test #4 should be run.

6. If the instrument passes the CHECKSUM, SA TESTS #1,2,3, and the instrument is malfunctioning with respect to digital signals, run SA TEST #5 which checks the output latches of the A3 board.

8-39. How to Use SA Tests #1, #2, and #3

The normal troubleshooting procedure for using SA on the 3314 controlling section is as follows:

1. Follow the instructions for running SA Test #1. This test checks approximately 60% of the controller hardware by allowing the micro-processor to count through its addresses. The SA tests #2 and #3 should not be run until SA test #1 has determined that switch S1, pins 12, 13, 14 are working properly (correct signatures from U231 pins 10,12,14).
2. If SA Test #1 passes (all signatures are correct), run SA Test #2 by following the instructions given at the begining of the test. This test determines if the ROMs contain the correct bit pattern.
3. If SA test #2 passes, run SA Test #3 by following the instructions given at the begining of the test. This test requires that the Switches S1 pins 12,13 and 14 are functioning properly. The test uses internal ROM space for instructions to the micro-processor to toggle individual circuits that are not checked in the free run mode.
4. It is possible that certain failures may force the microprocessor into a non-fuctioning state (i.e., the processor will not count in the free run SA Test #1). If this is the case, the following steps are suggested:
 - A. Make sure all power supplies are the correct levels.

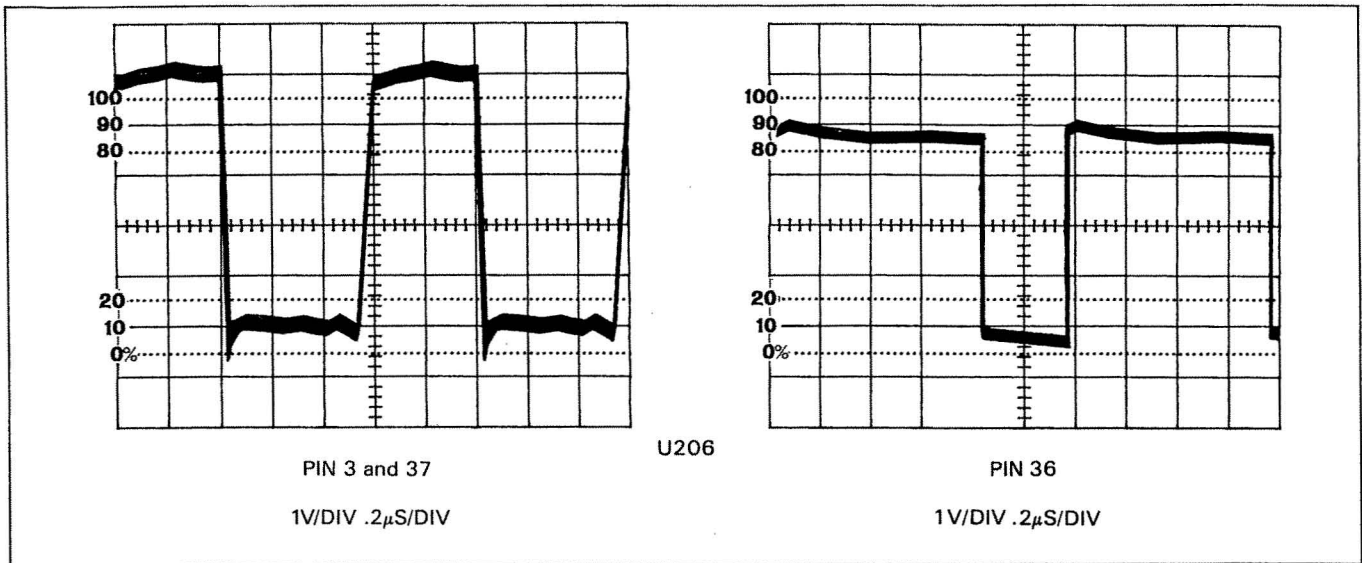


Figure 8-6. SA Clocks

- B. Make sure that the Data Bus is correct. In SA #1 data lines D7 and D5 are low and the rest of the data lines are pulled high.
- C. In SA -1 mode, check the following pins on the micro-processor and see if they correspond to the following table.

U206 pin#	Signal	Should Be
2	HALT	+ 5 V
4	IRQ	GND
5	VMA	+ 4 V
6	NMI	+ 4 V
34	RNI	+ 4 V
39	TSC	GND
40	RES	+ 5 V
3,37 & 36	PHASE 1 & 2	SEE Figure 8-6

8-40. SA TEST #1 $\Delta 3$
 $\Delta 11$

Signature Analyzer set up:

CLOCK/GROUND SA CLK/GND CONNECTOR (near battery)
 CLOCK NEGATIVE TRIGGER

START/STOP SA A15 STR/STP CONNECTOR
 BOTH POSITIVE TRIGGER

SIGNATURES

Procedure:

Set A3S1 for positions 1, 2, 7, and 8 closed.
 Cycle Power.
 Take signatures.
 +5 Volt = 0003

U206		U215		U216	
Pin #	Signatures	Pin #	Signatures	Pin #	Signatures
26	0000	2	7791	2	UUUU
27	0003	5	6321	5	FFFF
28	0000	6	37C5	6	8484
29	0003	9	6U28	9	P763
30	0003	12	4FCA	12	1U5P
31	0003	15	4868	15	0356
32	0003	16	9UP1	16	U759
33	0003	19	0002	19	6F9A
9	UUUU				
10	FFFF				
U218		U219			
Pin #	Signatures	Pin #	Signatures	Pin #	Signatures
11	8484	1	4868	1	37C5
12	P763	2	9UP1	2	6U28
13	1U5P	3	0002	3	4FCA
14	0356	4	0000	4	0000
15	U759	5	0000	5	5FUA
16	6F9A	6	0003	6	0003
17	7791	7	2302	7	A689
18	6321	9	F9CF	9	A275
19	37C5	10	534H	10	9842
20	6U28	11	C9U1	11	8P4F
22	4FCA	12	1183	12	5P1A
23	4868	13	64HF	13	282A
24	9UP1	14	29A4	14	02H5
25	0002	15	5FUA	15	3APP
U200		U221		U223	
Pin #	Signatures	Pin #	Signatures	Pin #	Signatures
1	29A4	4	29A7	1	282A
2	29A7	5	29A4	2	5P1A
5	4493	6	0000	3	A275
6	4490	11	0000	4	A689
12	0000	12	29A4	5	0003
13	0003	13	29A7	6	04UU
				8	UF80
				9	04UU
				10	0003
				11	U87F
				12	U87F
				13	8P4F
U224		U237			
Pin #	Signatures	Pin #	Signatures	Pin #	Signatures
1	U759	1	7791		
2	29A7	2	29A7		
3	C755	12	U15A		
4	6F9A	13	0003		
5	29A7				
6	1214				
11	PPH8				
12	29A7				
13	0356				
		U239			
Pin #	Signatures	Pin #	Signatures	Pin #	Signatures
		1	7791		
		2	6F9A		
		12	4493		
		13	29A4		

8-41. SA TEST #2 $\Delta 3$ $\Delta 16$
 $\Delta 11$

SIGNATURES

Signature Analyzer set up:

CLOCK/GROUND SA CLK/GND CONNECTOR (near battery)
 CLOCK NEGATIVE TRIGGER

START/STOP SEE TABLE 8-3

Procedure:

Set A3S1 for positions 1 and 2 closed.
 Cycle power.
 Move START/STOP to position listed in Table 8-3
 Take signatures of ROM under test.
 +5 Volt = (See Table 8-3)

Pin #	Signature
	U207 U208
2	3C96 PCF3
3	HC89 7707
4	52F8 A3C1
5	UPFH 7211
6	0AFA AA08
7	5H21 C4C3
8	7F7F 0772
9	CCCC 7050
10	5555 C113
11	C2P5 3PP2
12	6408 2143
13	659F C9P6
15	8216 43A2
16	7P09 20PA
17	95H1 H6CP
18	C612 1P46
19	A130 5814
21	1293 89F1
22	0000 0000
23	HAP7 AC99
24	HPP0 HH36
25	2H70 577A
26	3827 1180
27	755U 0000

Table 8-3. SA Start/Stop Connections

START/STOP POSITIONS:	
U207	SA U207 STR/STP CONNECTOR START - NEGATIVE TRIGGER STOP - POSITIVE TRIGGER +5 Volt = 0001
U208	SA U208 STR/STP CONNECTOR START - NEGATIVE TRIGGER STOP - POSITIVE TRIGGER +5 Volt = 7554

8-43 SA TEST #4 $\Delta 3$ $\Delta 16$
 $\Delta 11$

Signature Analyzer set up:

CLOCK/GROUND SA CLK/GND CONNECTOR (near battery)
 CLOCK NEGATIVE TRIGGER

START/STOP SA 3/5 STR/STP CONNECTOR
 BOTH POSITIVE TRIGGER

Procedure:

Set A3S1 for positions 3, 7, and 8 closed.
 Cycle power.
 Take signatures.
 +5 Volt = CFUC

Note: DISCONNECT ANY HP-IB CONNECTORS FROM THE REAR PANEL.

Signatures					
U300		U301		U302	
Pin #	Signature	Pin #	Signature	Pin #	Signature
3	7F45	1	F010	1	F010
5	377U	2	CFUC	2	F011
6	CFUC	3	CFUC	3	2AA4
7	FFA3	4	F010	4	AU9C
8	P5C8	5	FOU3	5	C73U
9	7460	6	CFUC	6	6HF8
10	6C69	7	CFUC	7	P65A
11	9AA7	8	CFUC	8	1892
12	HU7F	9	CFUC	9	UC1P
13	6A4U	12	CFUC	12	UC1P
14	4761	13	CFUC	13	1892
15	3632	14	CFUC	14	P65A
16	CFUC	15	CFUC	15	6HF8
17	F010	16	FOU3	16	C73U
18	FOU3	17	F010	17	AU9C
19	CFUC	18	CFUC	18	2AA4
21	CFUC	19	CFUC	19	F011
22	CFUC				
23	CFUC				
25	CFUC				
26	CFUC				
27	F010				
28	F010				
29	UC1P				
30	1892				
31	P65A				
32	6HF8				
33	C73U				
34	AU9C				
35	2AA4				
36	F011				
37	A5P4				
38	56A0				
39	C9HH				
40	0000				

8-44. SA TEST #5 Δ3 |Δ16
 Δ11

Signature Analyzer set up:

CLOCK/GROUND SA CLK/GND CONNECTOR (near battery)
 CLOCK NEGATIVE TRIGGER

START/STOP SA 3/5 STR/STP CONNECTOR
 BOTH POSITIVE TRIGGER

Procedure:

Set A3S1 for positions 4, 7, and 8 closed.
 Cycle Power.
 Take signatures.
 +5 Volt = HCP8

**SIGNATURES
 NOTE**

() INDICATES SIGNATURES WITH THE
 CONNECTOR UNDER TEST REMOVED.

J3		J2	
Pin #	Signature	Pin #	Signature
1	9384	1	9384
2	P20P	2	P20P
3	2752	3	2752
4	8911	4	8911
5	8013 (A8P7)	5	A8P7
6	29P9 (53U3)	6	53U3
7	H4U6 (H987)	7	H987
8	P379	8	P379
9	0HH9	9	0HH9
10	1C2U	10	1C2U
11	A5F0	11	A5F0
12	5HH7	12	U7P5
13	KEY	13	U46C
14	GND	14	- 15V
15	GND	15	+ 15V
16	+ 5V	16	GND
17	- 15V	17	(Pin is clipped)
18	- 15V	18	0000
19	- 15VA	19	UNSTABLE
20	+ 15V	20	UNSTABLE or HCP8
21	+ 15V	21	95A7
22	+ 15VA	22	HCP8

8-44a. Latch Tests and DAC Exercises

Tests initiated from A3S1 include the Latch Test and DAC Exercises. Use the Latch Test to determine if the output latches on the A1 and A2 boards are working properly. Use the DAC Exercises to test all of the DACs except the Freq/Sym DAC (A1U101). To return the 3314A to normal operation after completing these tests, open all of the A3S1 switches and cycle the power.

Equipment Required:

- Oscilloscope
- Two 10:1 probes
- Power Supply

Latch Test:

A. Close switch five of A3S1; switches one through four must be open. Switches six and seven may be in either position.

B. Cycle the power on the 3314A.

C. Set up oscilloscope:

	Ch. A	Ch. B
Volts/Div	0.2V	0.1V
Coupling	DC	DC
Vert Disp		Alt
Int Trig		B
Horiz Disp		Main
Time/Div		0.01 ms


D. With the probes connected to each oscilloscope channel input, probe the latches as indicated in the following table.

Table 8-4. Latch Test Outputs

LATCH	TRIGGER	OUTPUTS (listed sequentially)
A1U807	Pin 9	Pins 6, 10
A1U808	Pin 11	Pins 12, 9, 6, 15, 16, 5, 2, 19
A1U902	Pin 11	Pins 9*, 12*, 15*, 6*, 5*, 16, 2, 19
A2U322	Pin 11	Pins 2, 5, 6, 9, 12, 15, 16, 19
A2U323	Pin 11	Pins 2, 5, 6, 9, 12, 15, 16, 19
A2U324	Pin 11	Pins 2, 5, 6, 9, 12, 15, 16, 19
A2U325	Pin 11	Pins 2, 5, 6, 9, 12, 15, 16, 19

* These pulses are not as square as the other pulses.

Trigger on each latch's clock signal with channel B. View the outputs with channel A as the test sequentially walks a "1" through each latch. Each output's pulse should occur at each successive trigger pulse as shown in the following diagram.

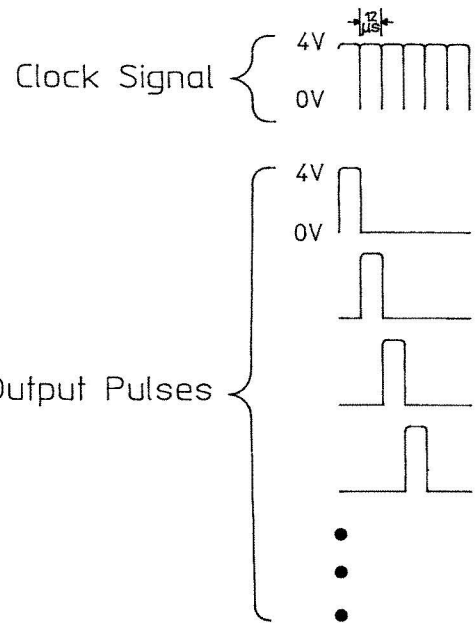

DAC Exercises:

A. Close switches three and five of A3S1; switches one, two, and four must be open. Switches six and seven may be in either position.

B. Cycle the power on the 3314A.

C. Set up the oscilloscope to view the Multiplex DAC output:

	Ch. A	Ch. B
Volts/Div	0.5V	0.5V
Coupling	DC	DC
Vert Disp		Chop
Int Trig		A
Horiz Disp		Main
Time/Div		20.0 ms
Trigger Mode		Norm
		+ HF Rejection

D. The Multiplex DAC outputs each run at a different rate. Trigger with channel A on A2TP14 (DCV). View the outputs with channel B on the test pins listed in the following table. The square wave outputs should exhibit the characteristics listed in the table.

Table 8-5. Multiplex DAC Outputs

Test Pins	DAC Output	Waveform Characteristics		
		Period	Freq	Amplitude
TP14	DCV	200 ms	50 Hz	10 Vpp
TP17	ACV	100 ms	100 Hz	10 Vpp
TP15	SWP	50 ms	200 Hz	10 Vpp
TP6	PCV	25 ms	400 Hz	10 Vpp

E. Change the oscilloscope settings to view the outputs of the three other DACs--A2U405, A2U221, and A1U802. Two different setups are used to view each DAC output. For each DAC, use the first setting to view the sawtooth output. Use the second to view the individual steps that make up the slope of the sawtooth. A non-working bit causes a distinct change in one or the other waveform.

F. Set up the oscilloscope to view the sawtooth:

Volts/Div	0.05V
Coupling	DC
Vert Disp	A
Int Trig	A
	Bandwidth Limit
Horiz Disp	Main
Time/Div	2 ms
TriggerMode	Norm
	+
	HF Rejection


To view the sawtooth steps, change the following oscilloscope controls:

Coupling	AC
Volts/Div	0.01V
Horiz Disp	Delayed
Time/Div (Delayed)	0.1 ms
Delayed Trig Level	Adjust as needed

G. Probe each DAC output and examine the sawtooth and step waveforms for the following characteristics:

A2U405 (Frequency Correction DAC)


Probe at A2U405, pin 4.

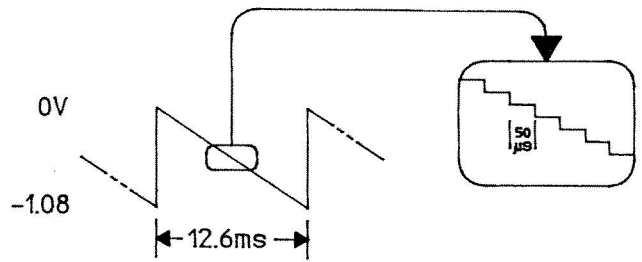

A2U221 (AM Scaler DAC)


Apply +2 VDC from the power supply to the AM input of the 3314A.

Probe at A2TP18 (AM).

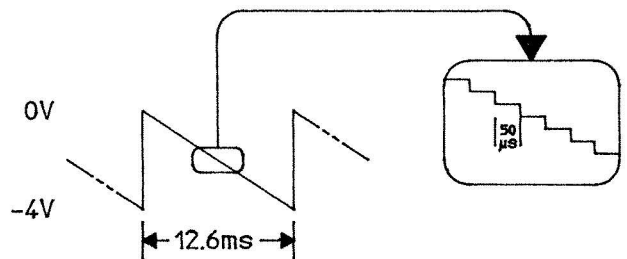

A1U802 (Offset Correction DAC)

Probe at A8U2, pin 7

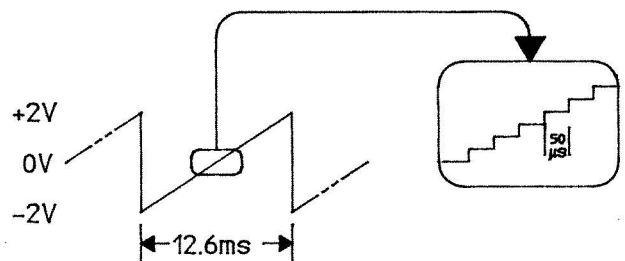

8-45. ANALOG TROUBLESHOOTING

8-46. Signal Names

The following figure lists the internal signal names connecting between assemblies.

SIGNAL	FROM	SCHEMATIC	TO	SCHEMATIC
Control				
100KHZ	A3J2(19)	3B	A2J6(19)	2B
ACI	A2J8(2)	2A	A1J4(2)	1K
ATTENUATOR SHUTDOWN	A8J3(11)	8A	A1J6(11)	1J
DCV	A2J8(3)	2A	A1J4(3)	1K
FCV	A2J8(5)	2A	A1J4(5)	1K
FMV	A2J8(6)	2A	A1J4(6)	1K
FREQ SENSE	A2J6(20)	2C	A3J2(20)	3D
GBS	A3J3(12)	3C	A1J5(12)	1K
HOLD SLOPE UP	A2J7(3)	2C	A1J3(3)	1E
INT TRIGGER	A3J2(22)	3D	A2J6(22)	2C
MBS	A3J2(21)	3C	A2J6(21)	2B
OFFSET CURRENT	A8J3(4)	8A	A1J6(4)	1J
OUTPUT LEVEL				
CAL SENSE	A8J3(10)	8A	A1J6(10)	1J
PCV	A2J8(1)	2A	A1J4(1)	1K
PREAMP OUT	A1J1	1H	A8J1	8A
RAMP	A2J7(4)	2C	A1J3(4)	1E
Relay Control	A1J6(1,2,14,15,16)	1J	A8J3(1,2,14,15,16)	8A
TTL SYNC	A1J3(1)	1E	A2J7(1)	2C
Data I/O				
A0''	A3J2(9)	3D	A2J6(9)	2B
	A3J3(9)	3D	A1J5(9)	1K
A1''	A3J2(10)	3D	A2J6(10)	2B
	A3J3(10)	3D	A1J5(10)	1K
A2''	A3J2(11)	3D	A2J6(11)	2B
	A3J3(11)	3D	A1J5(11)	1K
A3''	A3J2(12)	3D	A2J6(12)	2B
A4''	A3J2(13)	3D	A2J6(13)	2B
D0''	A3J2(8)	3D	A2J6(8)	2B
	A3J3(8)	3D	A1J5(8)	1K
D1''	A3J2(7)	3D	A2J6(7)	2B
	A3J3(7)	3D	A1J5(7)	1K
D2''	A3J2(6)	3D	A2J6(6)	2B
	A3J3(6)	3D	A1J5(6)	1K
D3''	A3J2(5)	3D	A2J6(5)	2B
	A3J3(5)	3D	A1J5(5)	1K
D4''	A3J2(4)	3D	A2J6(4)	2B
	A3J3(4)	3D	A1J5(4)	1K
D5''	A3J2(3)	3D	A2J6(3)	2B
	A3J3(3)	3D	A1J5(3)	1K
D6''	A3J2(2)	3D	A2J6(2)	2B
	A3J3(2)	3D	A1J5(2)	1K
D7''	A3J2(1)	3D	A2J6(1)	2B
	A3J3(1)	3D	A1J5(1)	1K
Controller/Front Panel I/O				
CSQ	A3J1(12)	3D	A12J1(12)	10A
DISPCLK	A3J1(2)	3D	A12J1(2)	12A
KBS	A3J1(14)	3D	A12J1(14)	12A
RES	A3J1(13)	3D	A12J1(13)	12A
D0	A3J1(4)	3D	A12J1(4)	12A
D1	A3J1(6)	3D	A12J1(6)	12A
D2	A3J1(9)	3D	A12J1(9)	12A
D3	A3J1(11)	3D	A12J1(11)	12A
D4	A3J1(10)	3D	A12J1(10)	12A
D5	A3J1(8)	3D	A12J1(8)	12A
D6	A3J1(7)	3D	A12J1(7)	12A
D7	A3J1(5)	3D	A12J1(5)	12A

Figure 8-7. Signal Name Connections

8-47. Control Latch Truth Tables

The A1 Generator Board and A2 Mode Board have several control latches which determine exactly which functions are active and how the circuits are configured. The data is written to these latches by the Controller.

The MBSTAT Latch and the ANSTAT Latch contain status information about the PC boards and the Controller reads data from them.

THE INPHA LATCH, A2U322, controls the counters, switching, PLL bandwidth and other functions related to the phase locked loop.

Table 8-6. INPHA Latch

3314A MODE	MSB	LSB	NDIV	VDIV	RDIV	PLL
FREE RUN						
1A Continuous .001 ≤ F ≤ 199.9k	1111	0111	1			off
1B Continuous 200k ≤ F ≤ 1.999M	0110	1101	F	1	10	on
1C Continuous,FM off 2M ≤ F ≤ 19.99M	0110	1001	F	1	1	on
1D Continuous,FM on 2M ≤ F ≤ 19.99M	0110	0101	F	10	10	on
1E Cont Sweep;VCO .001 ≤ F ≤ 19.99M	1111	0111	1			off
GATE						
2A Gate	1101	0111	1			off
2B Gated Sweep, on	0111	0111	1			off
2C Gated Sweep, off	0101	0111	1			off
N CYCLE						
3 N Cycle	0011	0111	N			off
1/2 CYCLE						
4 1/2 Cycle	0001	0111	1			off
Fin X N						
5A Fin X N 50 ≤ Fref ≤ 999	1110	1011	2N	1	1	on
5B Fin X N 1k ≤ Fref ≤ 999k or 19.99M / N, whichever is less	0110	1011	2N	1	1	on
5C Fin X N,N>1 1M ≤ Fref ≤ 9.999M or 19.99M / N, whichever is less	0110	0111	N	10	5	on
5D Fin X N,N=1 1M ≤ Fref ≤ 19.99M	0110	0010	5N	10	1	on
Fin / N						
6A Fin / N 50 ≤ Fref ≤ 999	1110	1010	N	2	1	on
6B Fin / N,CAL SYM 1k ≤ Fref ≤ 1.999M	0110	1010	N	2	1	on
6C Fin / N,CAL SYM 2M ≤ Fref ≤ 19.99M	0110	0010	5N	10	1	on
6D Fin / N,VAR SYM 1k ≤ Fref ≤ 199.9k	0110	1010	N	2	1	on
6E Fin / N,VAR SYM 200k ≤ Fref ≤ 19.99M, where Fref / N ≤ 1.999M	0110	0010	5N	10	1	on
ARB						
7 ARB,Cont & Gate	0101	0111	1			off
AUX FUNCTIONS						
8A FREQ CAL,Range=8	0111	0101	*	10	1	off
8B FREQ CAL,Range<8	0111	1101	*	1	1	off
8C EXT FREQ MEAS	0111	0010	*	1		off

Table 8-6. INPHA Latch (Cont'd)

* N divider under program control to output 500Hz to the Period Measurement State Machine (PMSM) on the A3 Controller.

F is the mantissa of the programmed frequency.

The lower frequency limit in all modes can be extended to the LSD of the displayed frequency using the Range Hold function. The frequency resolution remains the LSD of the held range. (Minimum Freq = Freq Resolution)

Fref frequency limits are:
 0Hz to 20MHz, External
 50Hz to 500kHz (INT INTVL = 2us to 20ms), Internal

INPHA LATCH DECODING									
MSB					LSB				
H G F E					D C B A				
0 1 1 0					0 1 0 1				

ABCD = + N and post divider steering and divider control

A (U322-2) selects the input to the N Divider; 0 = Trig/2, 1 = Sync

B (U322-5) selects the reference input to the phase detector;
 0 = 10kHz(Cont), 1 = Trig/2(Fin X N, Fin / N)

C (U322-6) and B (U322-5) controls Reference Divider

C	B	REF DIVIDER (A2U314)
0	0	+ 1
0	1	+ 1
1	0	+ 10
1	1	+ 5

D (U322-9) and A (U322-2) controls Variable Divider

D	A	VAR DIVIDER (A2U307)
0	0	+ 10
0	1	+ 10
1	0	+ 2
1	1	+ 1

E (U322-12) controls PLL; 0 = PLL ON, 1 = PLL OFF

G (U322-16) and F (U322-15) selects Mode (Cont, PLL, Gate, 1/2 Cycle, N Cycle)

G	F	MODE SELECTED
0	0	1/2 Cycle
0	1	N Cycle
1	0	Gate, ARB
1	1	Cont, Fin / N, Fin X N

H (U322-19) changes PLL bandwidth; 0 when Fref ≥ 1kHz, 1 when Fref < 1kHz

THE LOCMOD LATCH, A2U325, controls the external trigger parameters, modulation and some of the sweep circuitry.

LIN SWP ON, A2U325-2, D0, 0 = Lin Sweep, controls the Multiplexed DAC during linear sweeps by switching the DAC's reference from + 10V to the PCV output of the DAC. This makes the DAC into a "multiplying DAC" multiplying the SWP by PCV.

SWEEP ON, A2U325-5, D1, 1 = Sweeping, enables the SWP voltage from the Multiplexed DAC to A2U402 resulting in control of FCV.

FM ON, A2U325-6, D2, 1 = FM ON, enables the FM switch, A2U401.

VCO ON, A2U325-9, D3, 1 = VCO ON, enables the VCO switch A2U401.

SYM ON, A2U325-12 D4, 1=Variable Sym, enables the X.1 circuitry in the FM circuitry. During variable symmetry, Iup and Idn are 1/10 their normal value; therefore, FMV must be 1/10 also.

RETRACE, A2U325-15, D5, 0 = Blanking, goes to S501, the Z Axis Polarity switch and is low whenever a blanking signal is sourced from the Z Axis Output.

MARKER, A2U325-16, D6, 0 = Marker, goes to S501, the Z Axis Polarity switch and is low whenever an intensifying signal is sourced from the Z Axis Output.

TRIGGER RESET, A2U325-19, D7, 0 = Reset, goes to the MBSTAT latch to reset two trigger sense latches.

THE NDIHV LATCH, 1/2 of A2U323, controls the external trigger parameters and resets the remaining latch in the MBSTAT Latch (see TRIGGER RESET in the LOCMOD Latch to reset the remaining MBSTAT Latch elements).

MBSTAT LATCH RESET, A2U323-12, D4, 0=reset, resets the PLL Out of Lock and Reduce Input elements of the MBSTAT Latch.

EXT TRIG EN, A2U323-15, D5, 1 = Ext Trigger, selects between External and Internal Triggers.

TRIGGER SLOPE, A2U323-16, D6, 1 = Negative Slope, selects between positive and negative trigger edges.

TRIGGER LEVEL, A2U323-19, D7, 1 = OV Threshold, selects between OV and 1V trigger threshold levels.

THE MBSTAT Latch, A2U327, (Mode Board STATUS Latch) contains four elements that the Controller reads as required.

OUT OF LOCK, A2U327-4, D3, 1 = Out of Lock, indicates when the Phase Locked Loop is unlocked.

GATED ON, A2U327-7, D2, 1 = Gated On, indicates when the main output is ON.

TRIGGER EDGE, A2U327-9, D1, 1 = Trigger has occurred, indicates when a trigger edge has been detected to start gated sweeps and gated ARB waveforms.

REDUCE INPUT, A2U327-13, D0, 1 = Overload, indicates when the AM, FM, or VCO inputs are being overdriven.

THE FOURTR LATCH, A1U902, selects the integrating range capacitors A1C204 through A1C207 and A1C210.

Frequency Range	D0	D1	D2	D3	D4	D5
	A1U902 PIN #					X1/X10
	9	12	15	6	5	16
1	0	0	0	0	0	0
2	0	0	0	0	0	0
3	0	0	0	0	0	1
4	1	0	0	0	0	1
5	1	1	0	0	0	1
6	1	1	1	0	0	1
7	1	1	1	1	0	1
8	1	1	1	1	1	1

In Range 1, Iup and Idn are divided by 10.

THE FUNAT LATCH, A1U808, selects the function and the step attenuation.

Amplitude Range	D7	D6	D5	D4	D3	Attenuation
	A1U808 PIN #					
	19	2	5	16	15	
1 & during CAL	1	1	0	1	0	60dB
2	1	0	1	1	0	40dB
3	0	0	1	1	1	20dB
4	0	0	0	0	0	0dB

Function	D2	D1	D0
	A1U808 PIN#		
	6	9	12
SINE	1	1	0
SQUARE	0	0	0
TRIANGLE	1	0	1

THE INHIB LATCH, A1U807, inhibits PCV (the Phase Control Voltage) and the DCV (the DC OFFSET Voltage) from affecting the operation of the A1 board.

INHIBIT PCV, A1U807-6, D0, 1 = Inhibit, inhibits PCV during continuous modes.

ENABLE DCV, A1U807-10, D1, 1 = Offset Enabled, disables DCV when the OFFSET is other than 0VDC.


THE ANSTAT LATCH, A1U804, is used to detect output overloads and during amplitude calibrations to detect when the amplitude reaches two preset threshold levels.

Output Overload (A1U804-9), D0, 1 = Overload, is detected by the voltage comparators A1U806a&b.


Amplitude Calibration (A1U804-4,7) D2, 1 = - Threshold Detected, D1, 1 = + Threshold Detected, senses when the voltage at the output of the output amplifier reaches +5.515V and -5.515V thresholds.

8-48. Multiplexed DAC Troubleshooting Diagram


This Multiplexed DAC is used in every operating mode to control the more universal 3314A features. Along with power supplies, the Multiplexed DAC outputs should be verified before proceeding to more complex circuits.

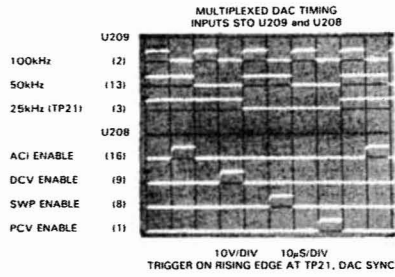

TP 19, MULTIPLEXED DAC OUTPUT AT POWER ON

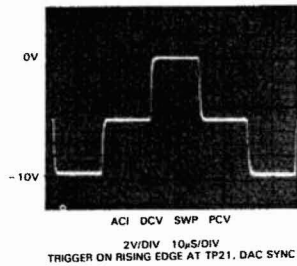


TP 19, MULTIPLEXED DAC OUTPUT (10.00Vp-p to 0.00Vp-p)

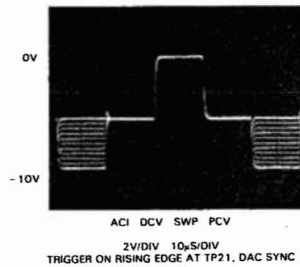


Multiple exposure of TP 19 as the output amplitude ranges from 10.00Vp-p to 0.00Vp-p in 1V steps. Amplitude Range Hold is asserted.

TP 19, MULTIPLEXED DAC OUTPUT (10.00Vp-p to 0.00Vp-p with invert function asserted)

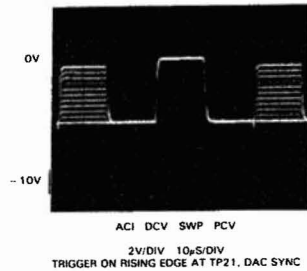


Multiple exposure of ACI as the output amplitude ranges from 10.00Vp-p to 0.00Vp-p in 1.00V steps with Invert Function and Amplitude Range Hold asserted.

TP 19, MULTIPLEXED DAC OUTPUT (-5VDC to +5VDC)

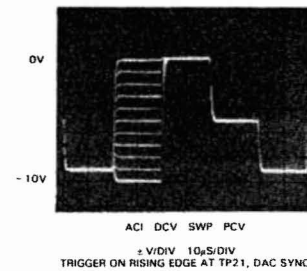


Multiple exposure of DCV as the DC Offset ranges from -5VDC to +5VDC in 1V steps. Offset Range Hold asserted.

TP 19, MULTIPLEXED DAC OUTPUT DURING SWEEPS

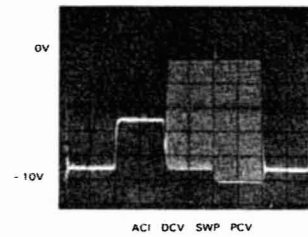


SWP and PCV during as LOG Sweep. During LIN sweeps, the negative value of the SWP voltage varies as the Start Frequency varies

TP 22, DAC REFERENCE DURING LIN SWEEP

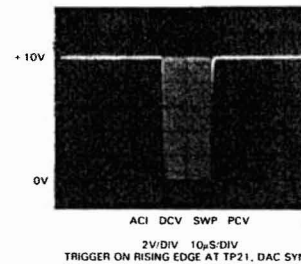


During Linear Sweeps, PCV becomes the DAC Reference. At this time, the DAC becomes a multiplying DAC.

TP 19, MULTIPLEXED DAC OUTPUT (Phase)

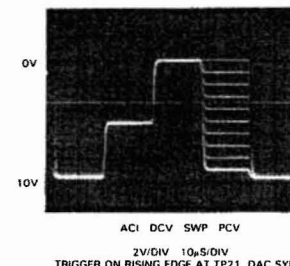

Multiple exposure of PCV while in Gate or one of the Burst Modes as Phase ranges from -90° to +90° in 10° steps.

TP 19, MULTIPLEXED DAC OUTPUT (Phase)

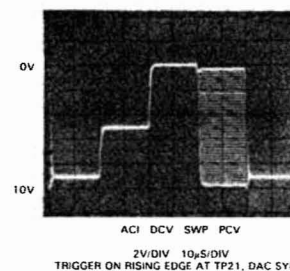

Multiple exposure of PCV while in one of the Lock Modes as Phase ranges from -190° to +190° in 10° steps.

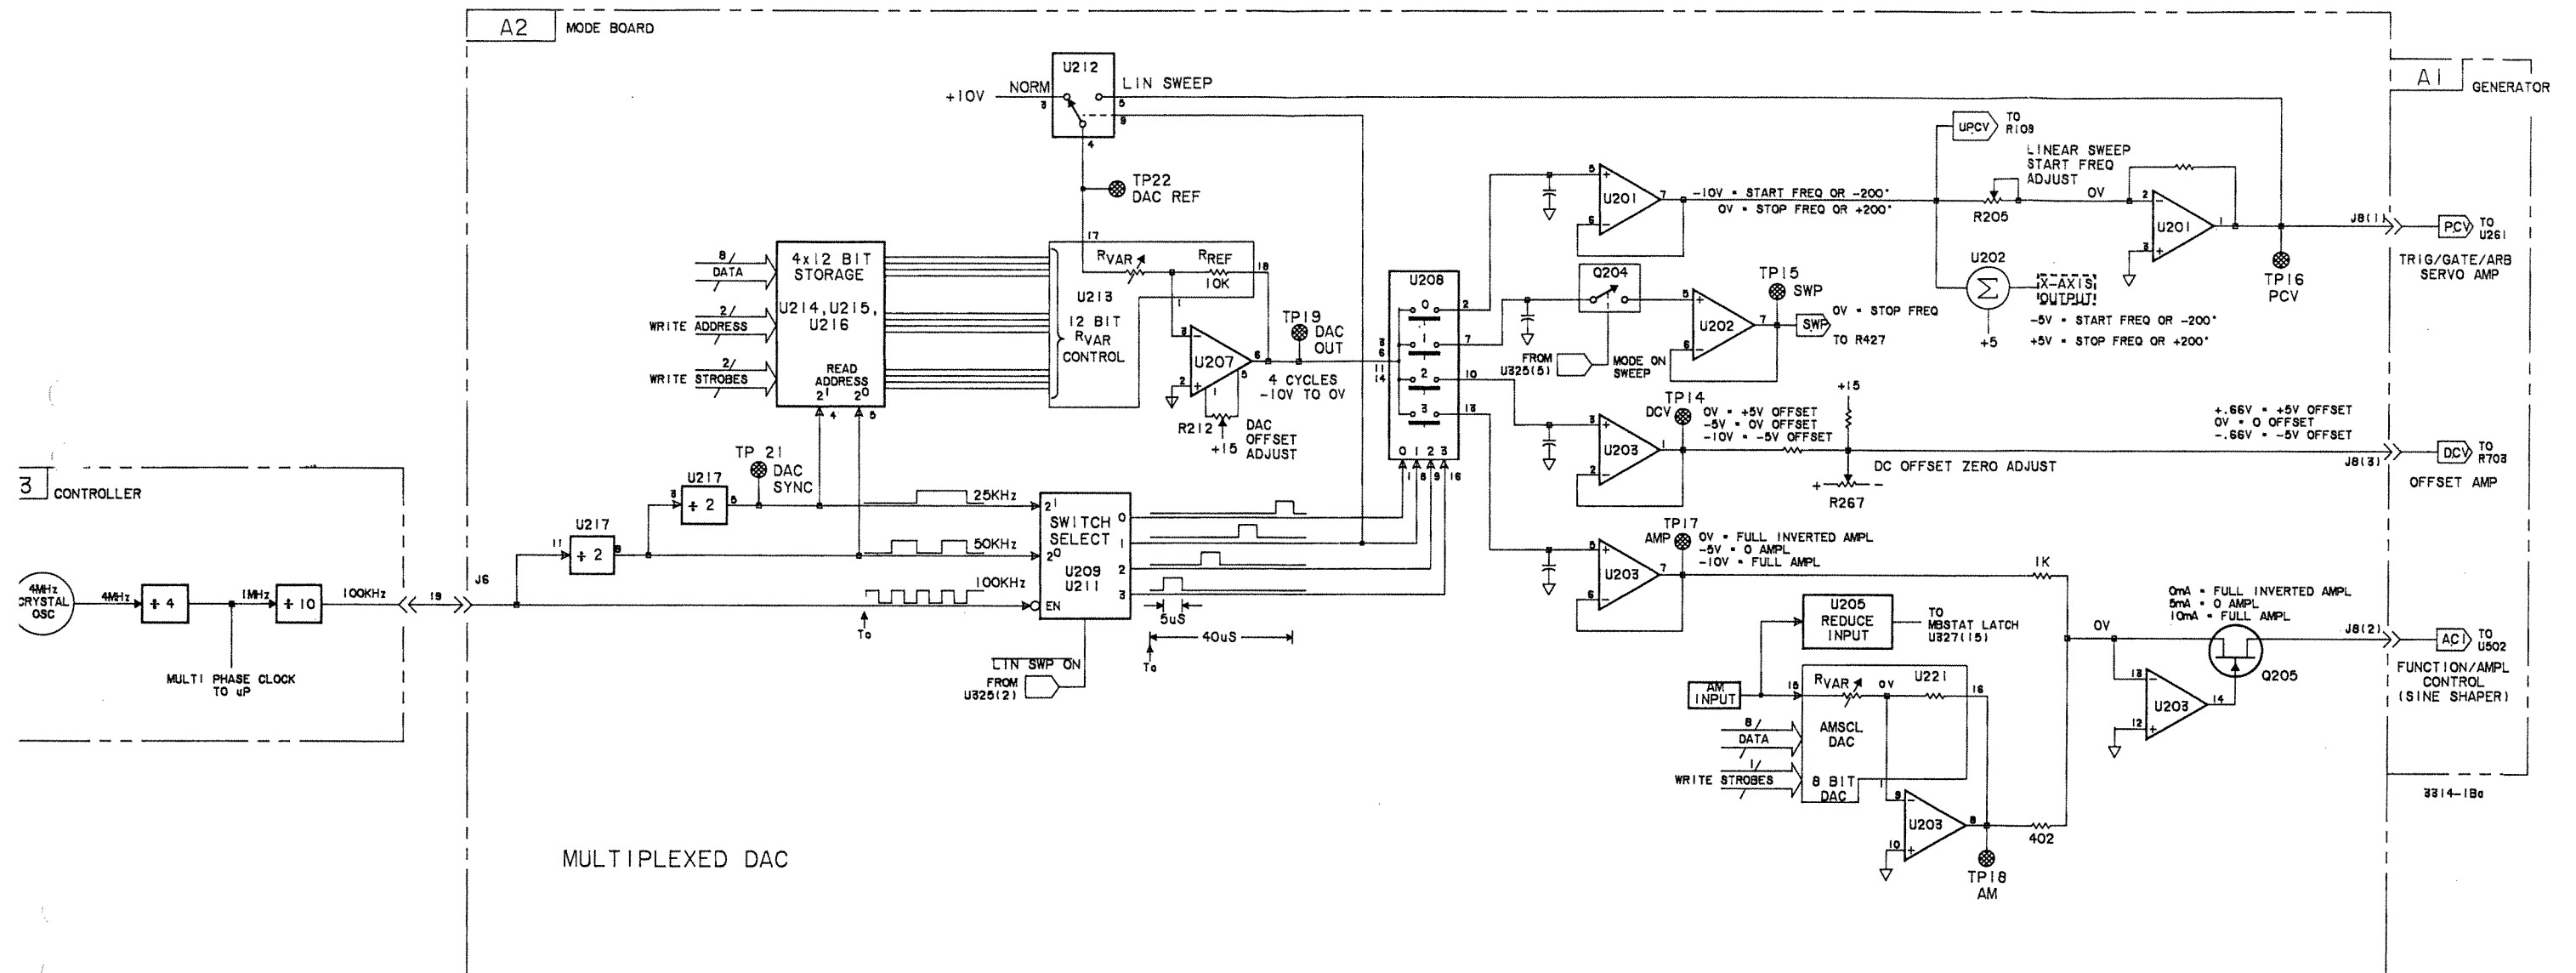


Figure 8-8. Multiplexed DAC Troubleshooting Diagram
8-25

8-49. Basic Operation Troubleshooting Diagram

This diagram applies to the 3314A when:

MODE is Free Run
FREQUENCY is < 2MHz
FREQUENCY is < 20MHz with VCO or
SWEEP

When the 3314A is configured this way, you should be able to completely exercise:

FREQUENCY within the above limits
AMPLITUDE
OFFSET
SYMMETRY
AM, FM and VCO MODULATION
LINEAR and LOG SWEEPS

It may help to center the calibration constants to keep from over-driving some of these circuits. To center the calibration constants, set switches 3, 4 and 5 of A3S1 to the closed position.

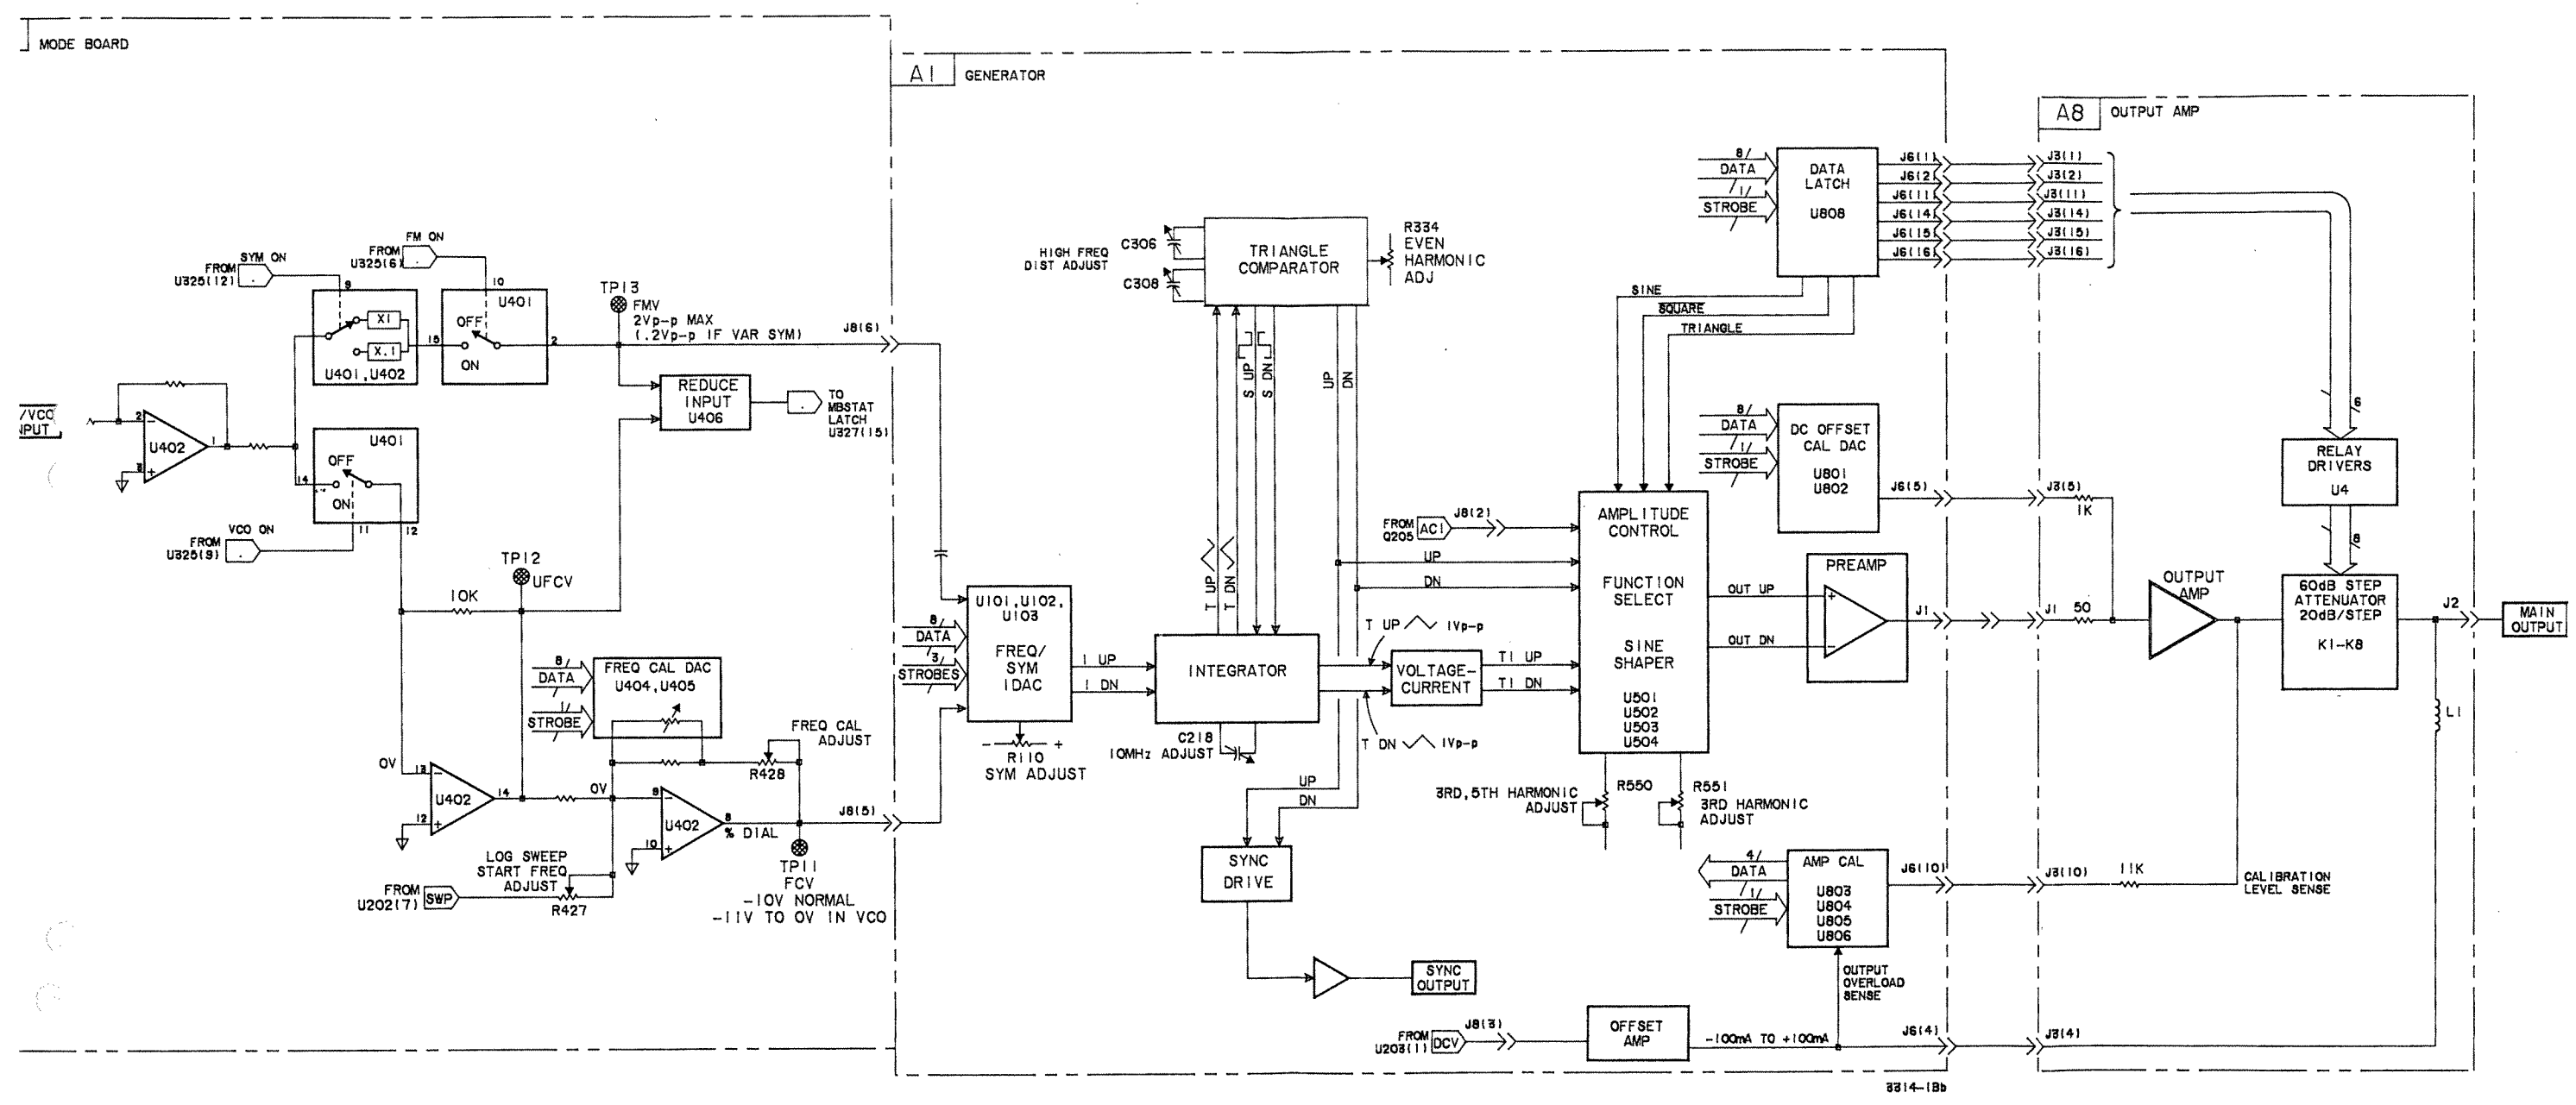


Figure 8-9. Basic Operation Troubleshooting Diagram
8/27

8-50. General Operation Troubleshooting Diagram

This diagram (2 sheets) includes all of the 3314A's functional blocks and applies to all operating modes. In conjunction with the Control Latch Truth Tables (to indicate the proper configuration) all of the 3314A's features can be exercised.

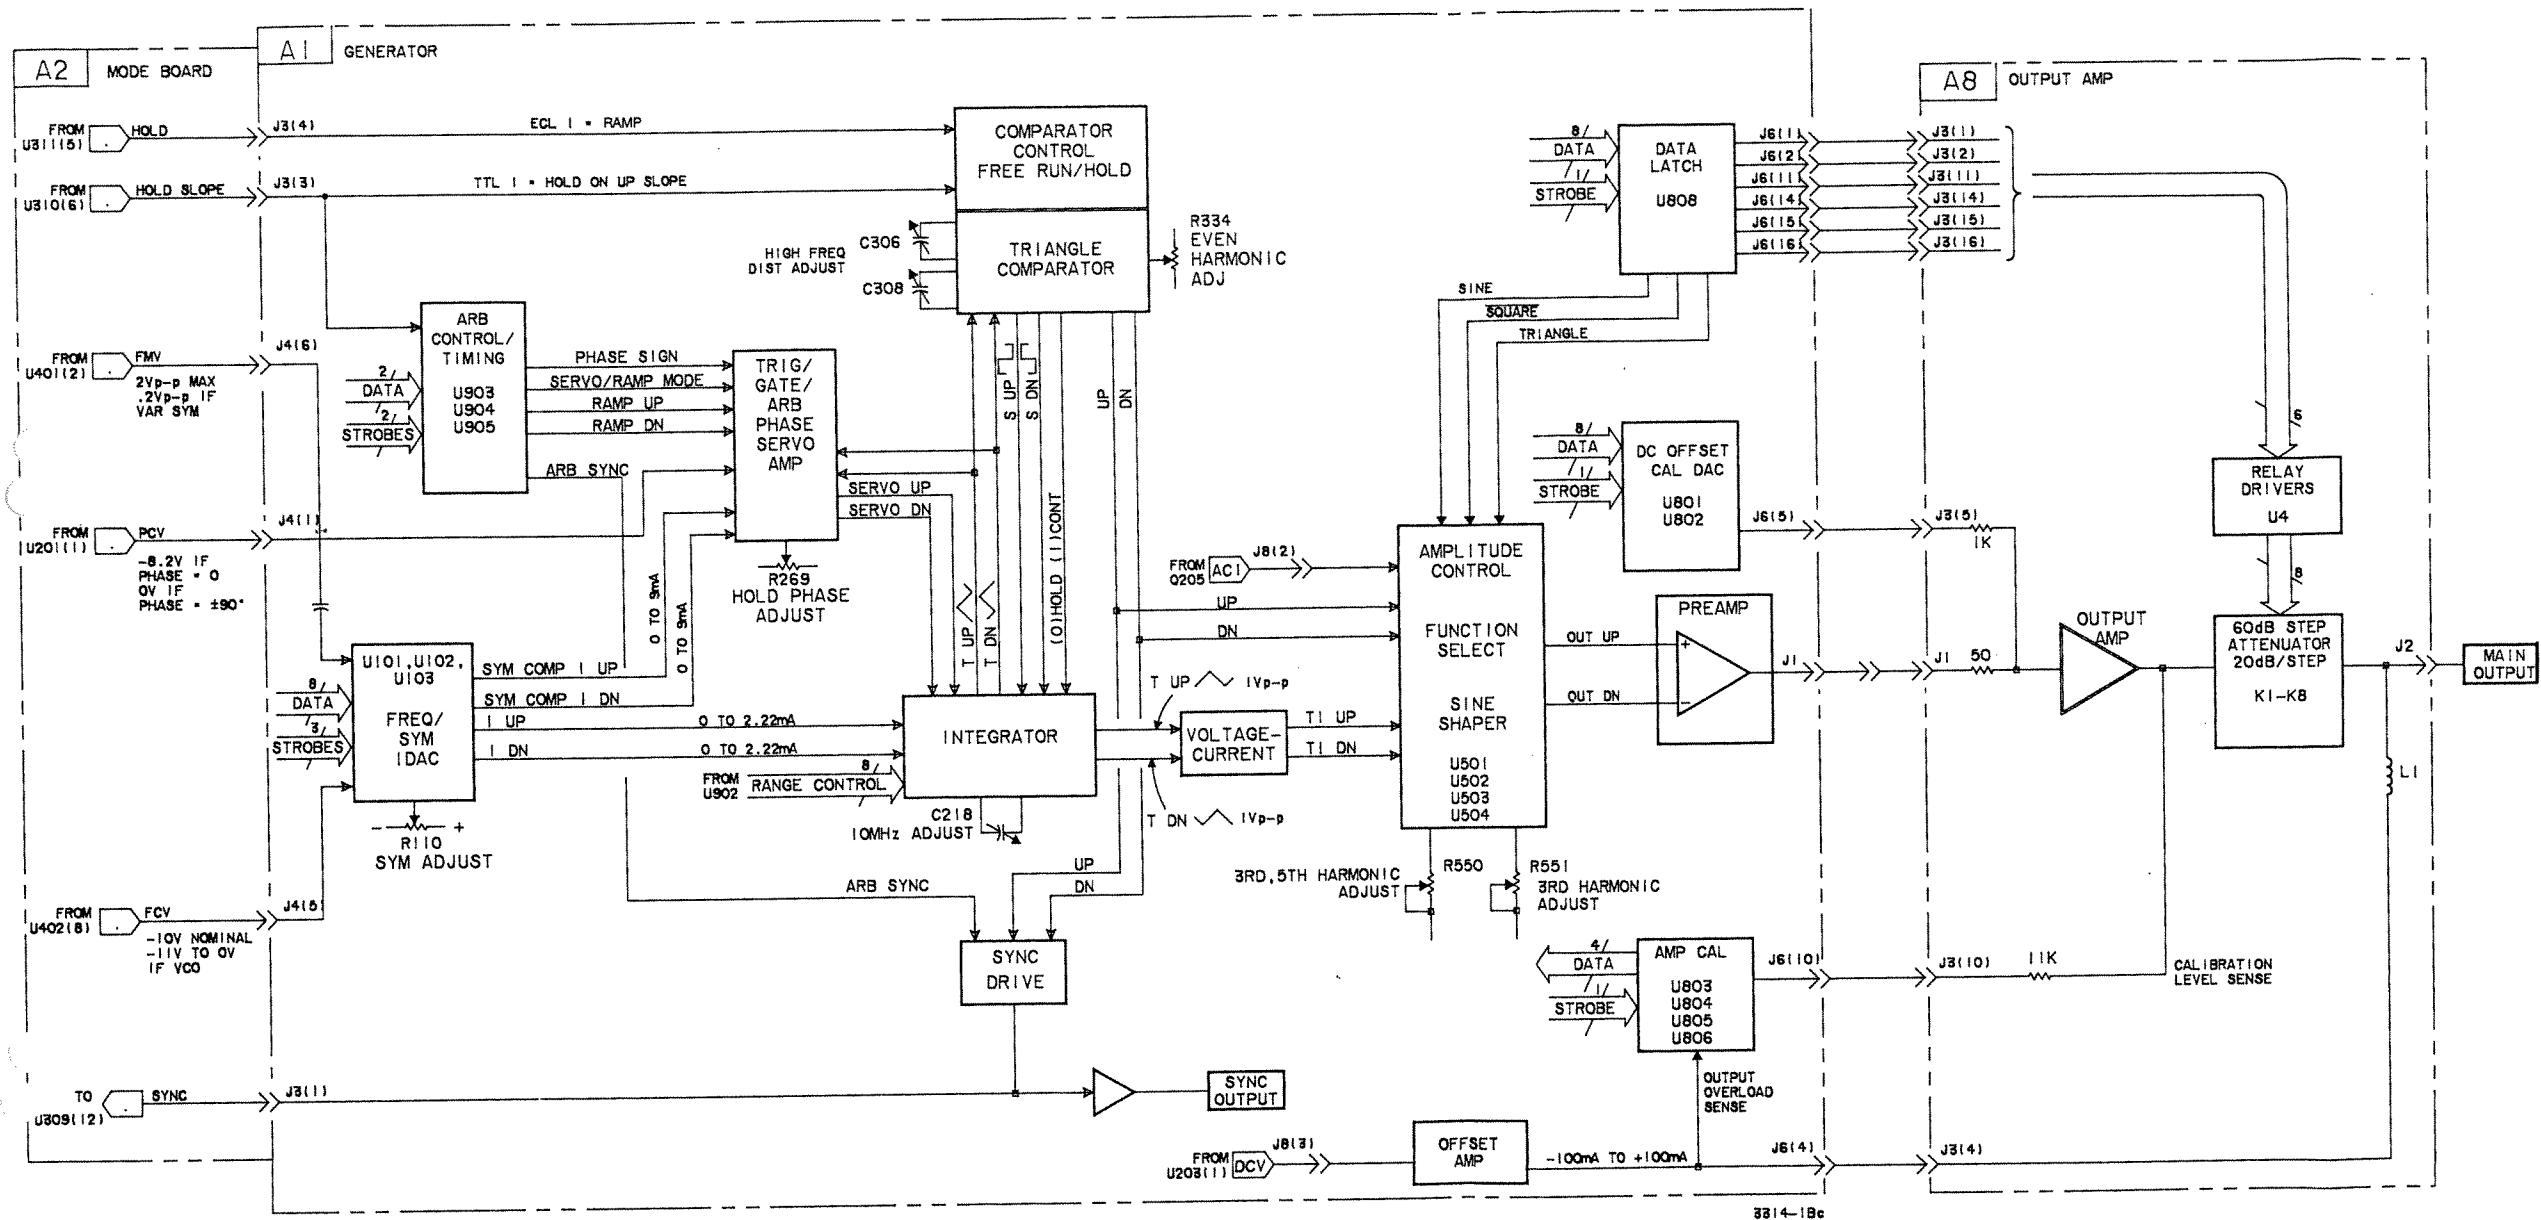


Figure 8-10A. General Operation Troubleshooting Diagram (A1 and A8)
8-29/8-30

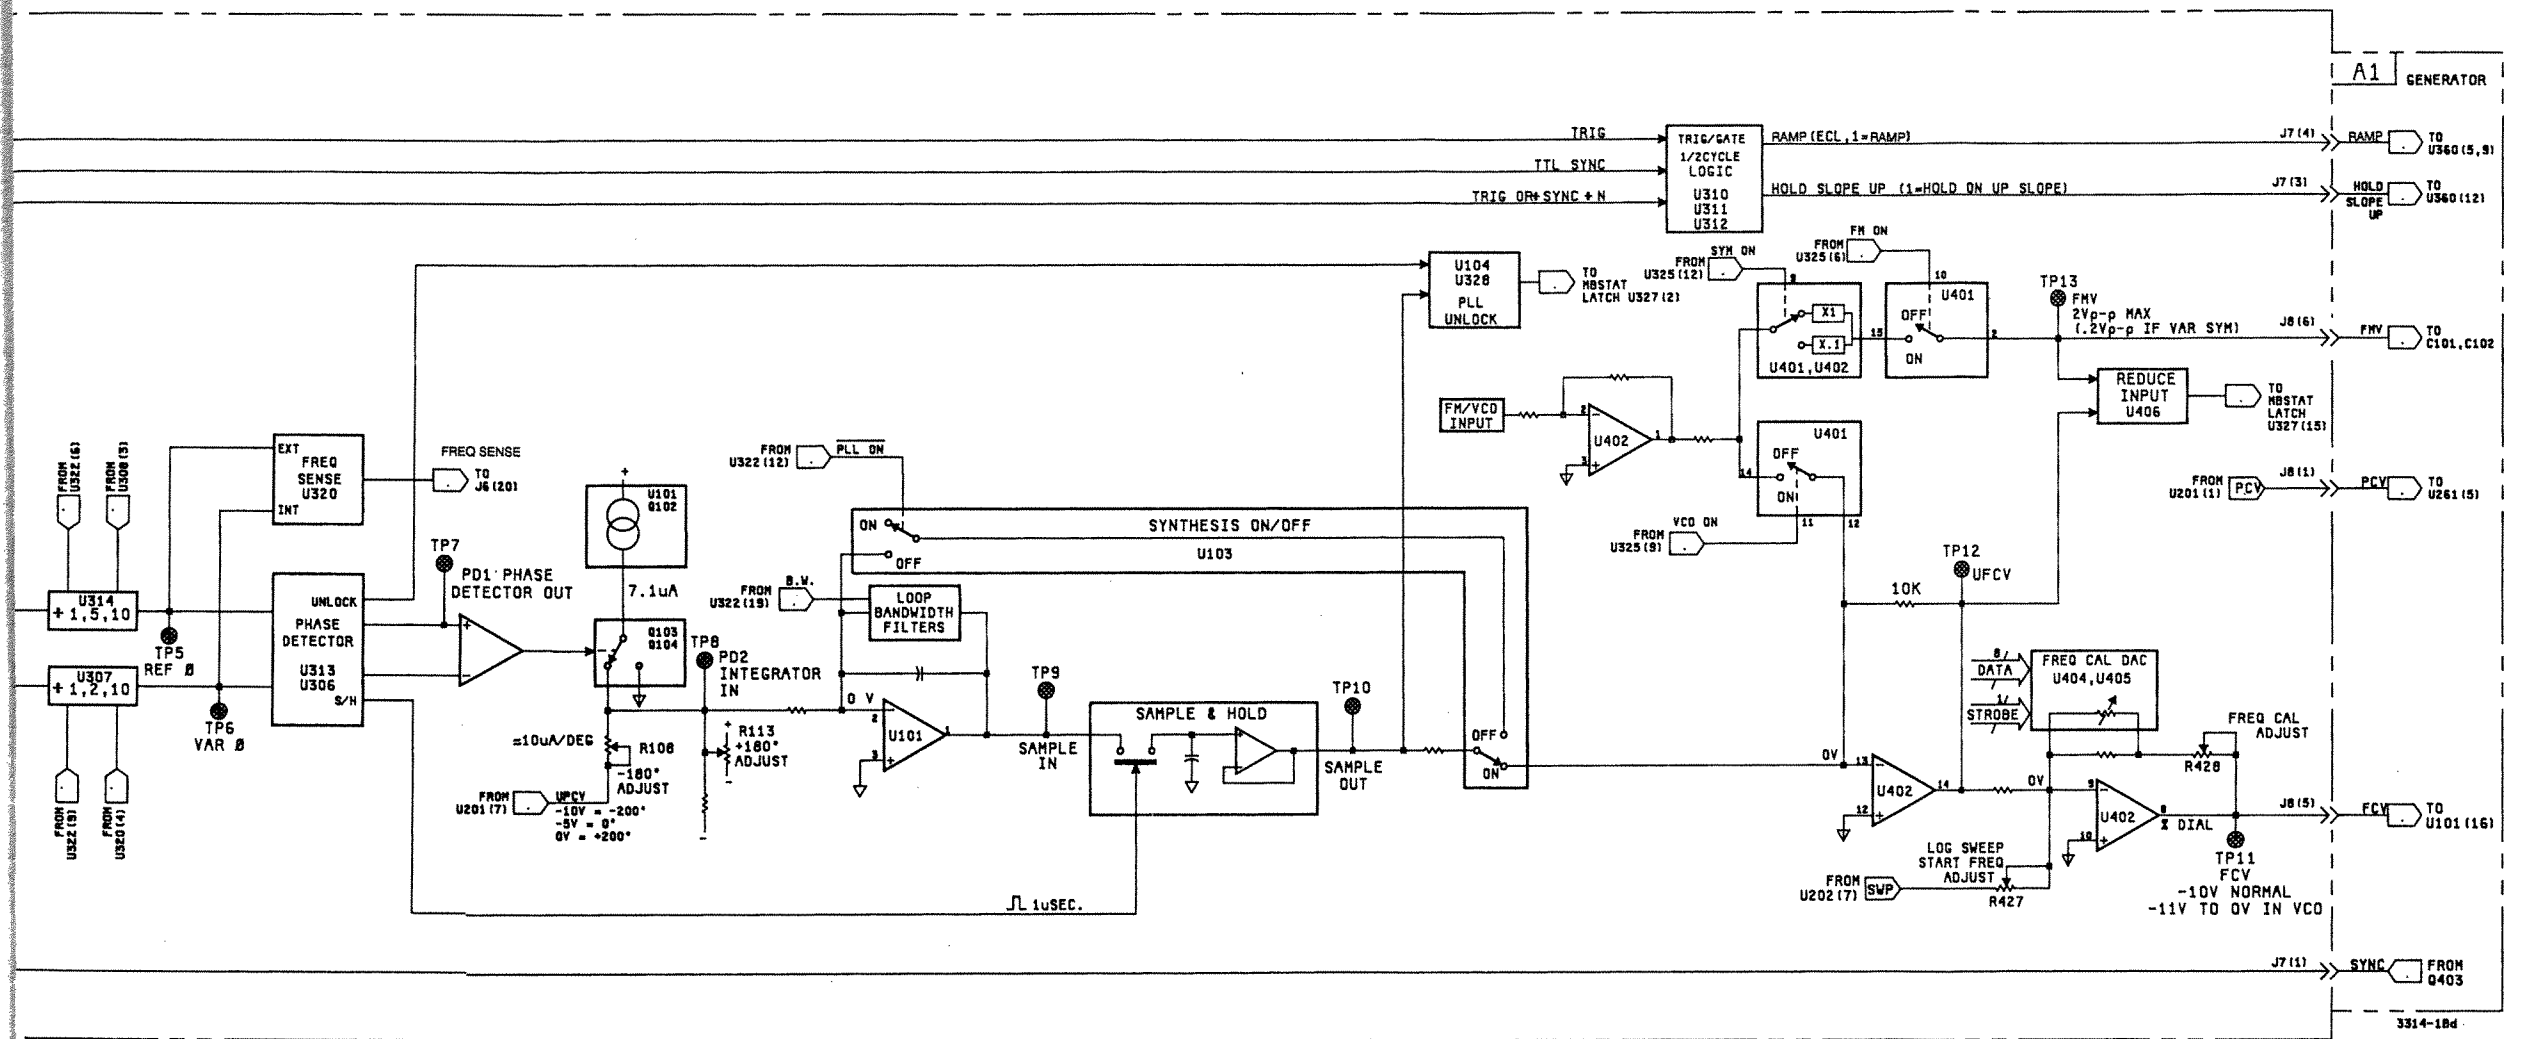


Figure 8-10B. General Operation Troubleshooting Diagram (A2 and A3)
8-31

8-51. Calibration Error Troubleshooting

The following flowcharts have been provided to aid in troubleshooting the 3314A when frequency calibration or amplitude calibration errors are detected. The charts themselves may or may not lead to a direct solution, however, their intent is only to offer direction and suggest troubleshooting alternatives.

Troubleshooting tree number one (Figure 8-11A), deals with frequency calibration problems (error codes 30, 31, 32). Troubleshooting tree number two (Fig. 8-11B), deals with amplitude calibration problems (error codes 34, 35, 36, 37, 38). Summarized, the above error codes describe the following symptoms.

Frequency Calibration Errors

Error Code

- 30 No frequency detected
- 31 Frequency error exceeds correction capability
- 32 Frequency unstable during calibration


Amplitude Calibration Errors

Error Code

- 34 Signal amplitude outside measurement range
- 35 Signal amplitude gain too high
- 36 Signal amplitude gain too low
- 37 Signal amplitude gain out of limit
- 38 Signal amplitude gain offset out of limit

Troubleshooting the 3314A via the flowcharts begins by doing a cold start on the instrument (cycling power while simultaneously pressing the "preset" key). One should also review the static sensitivity and clean handling precautions found on page 8-1 of this manual before proceeding.

Set Up Conditions:
Turn On/Cold Start

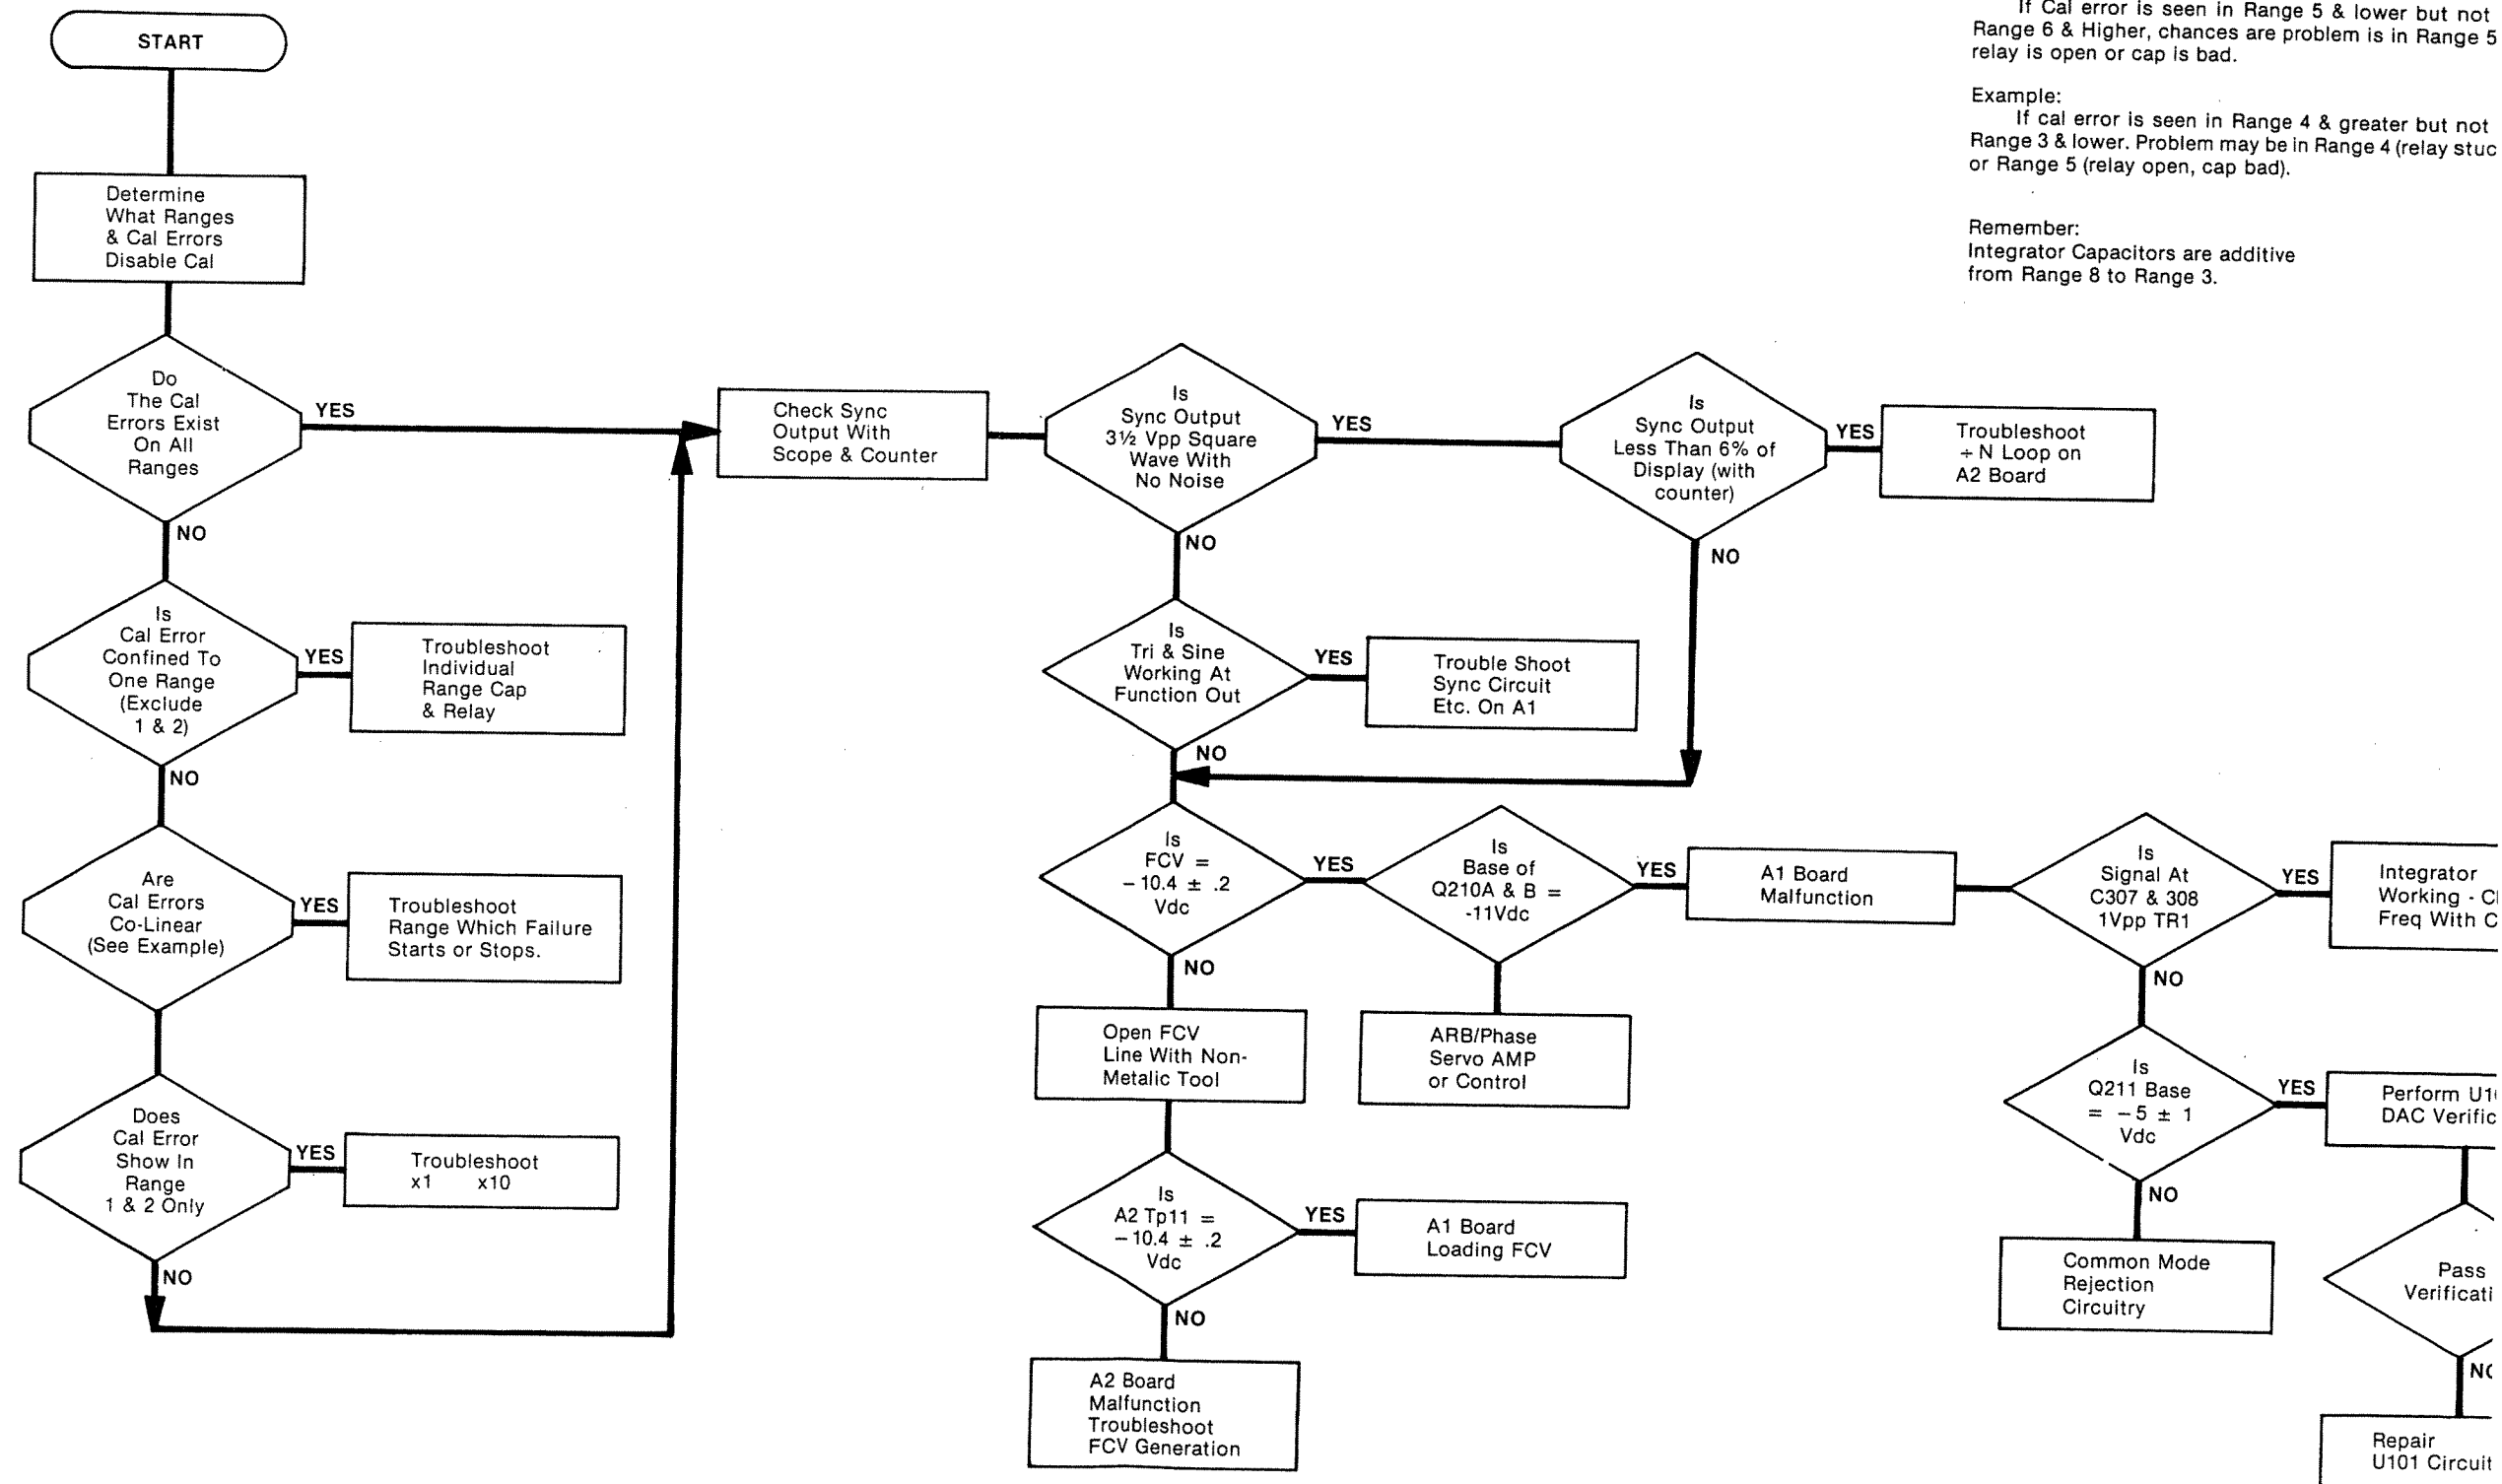

CO-LINEAR


Example:
If Cal error is seen in Range 5 & lower but not Range 6 & Higher, chances are problem is in Range 5 relay is open or cap is bad.

Example:
If cal error is seen in Range 4 & greater but not Range 3 & lower. Problem may be in Range 4 (relay stuck) or Range 5 (relay open, cap bad).


Remember:
Integrator Capacitors are additive from Range 8 to Range 3.

U101 DAC VERIFICATION

1. Remove A1 Q203 & Q201 Emitters
2. From Emitter Pads to Ground Install 900 Ω Resistors.
3. Measure voltage across resistors with voltmeter.
4. For Frequency Ranges 6-3, Frequency displayed on front panel should equal voltage on voltmeter ± 5 counts.
ex: 1500 counts = 1.500 \pm .5mV D.C.
5. For Frequency Ranges 2 & 1, Frequency displayed on front panel should equal 1/10 voltage on voltmeter: ± 5 counts.
ex: 1500 counts = .1500 \pm .5mV D.C.
6. Check voltages from 1 count to 1999 in increments of 200 counts.
7. Fails if greater than ± 5 mV or .5mV.

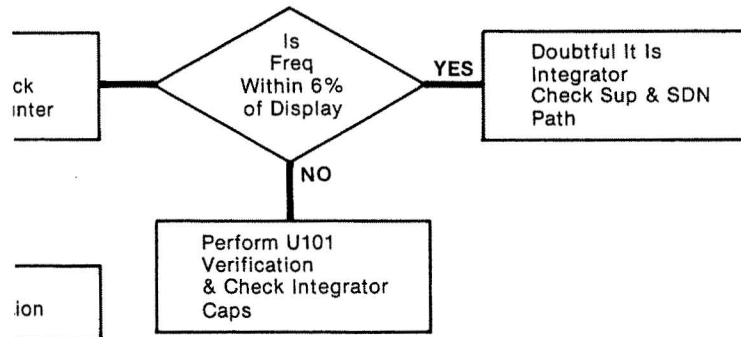

SET UP:
Turn On/Cold Start

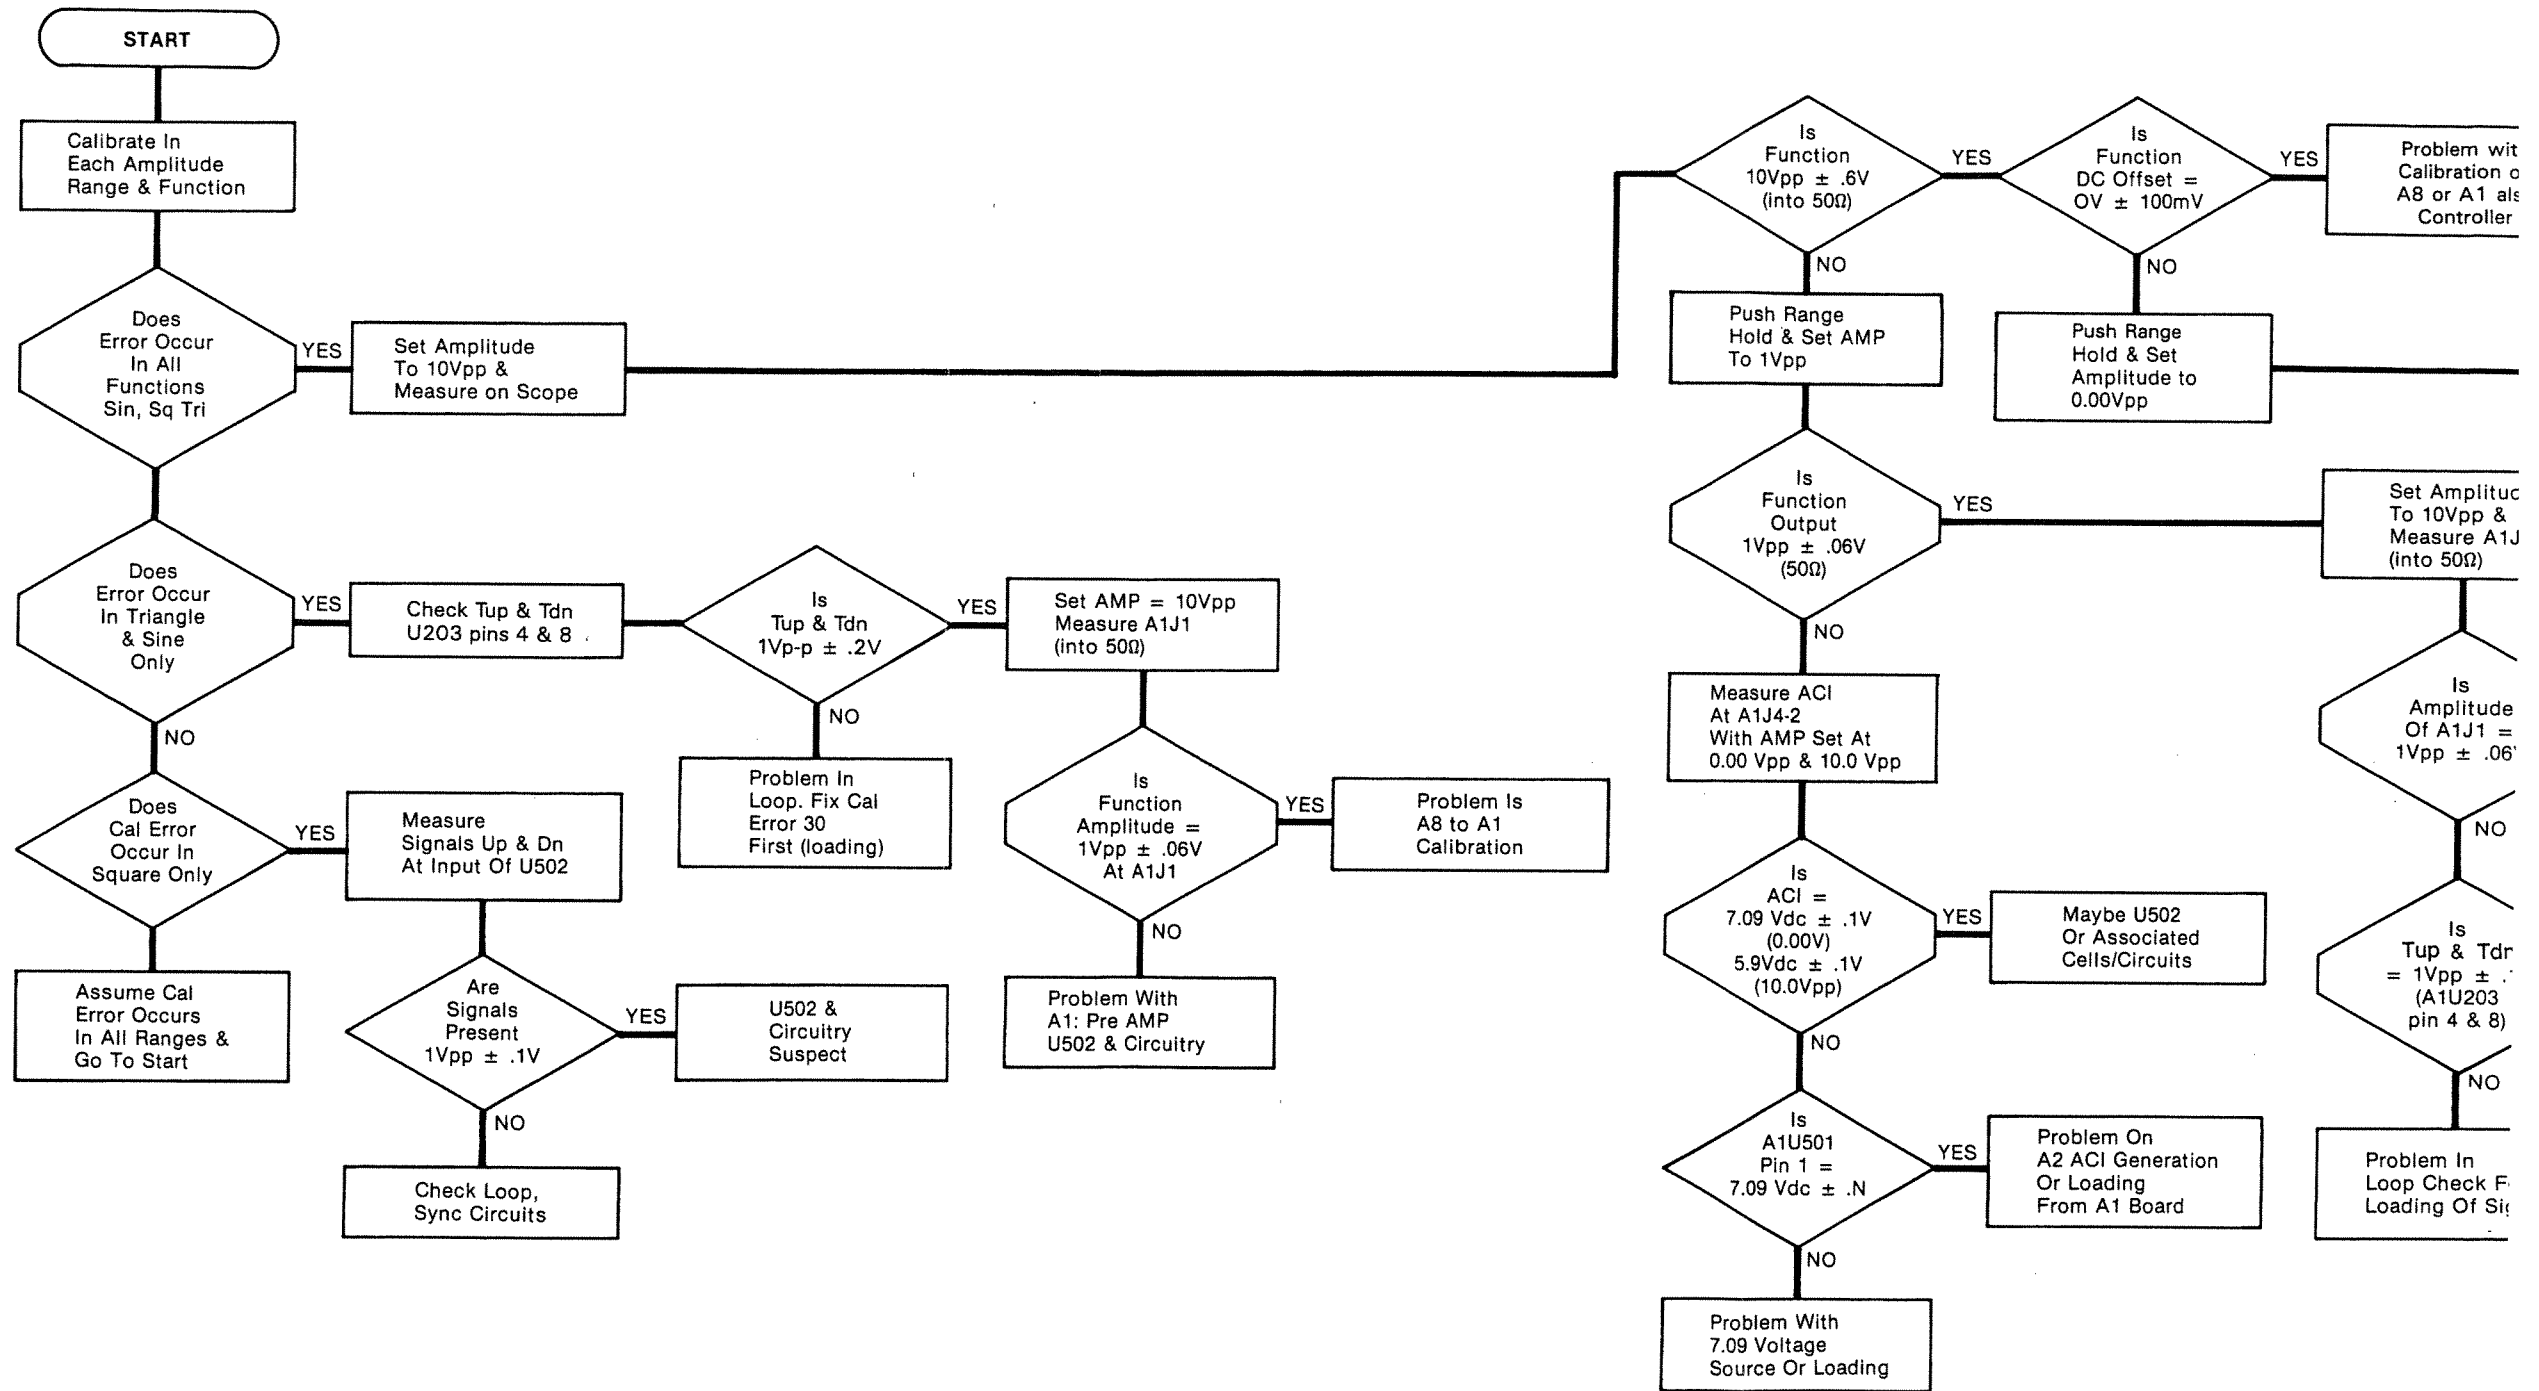

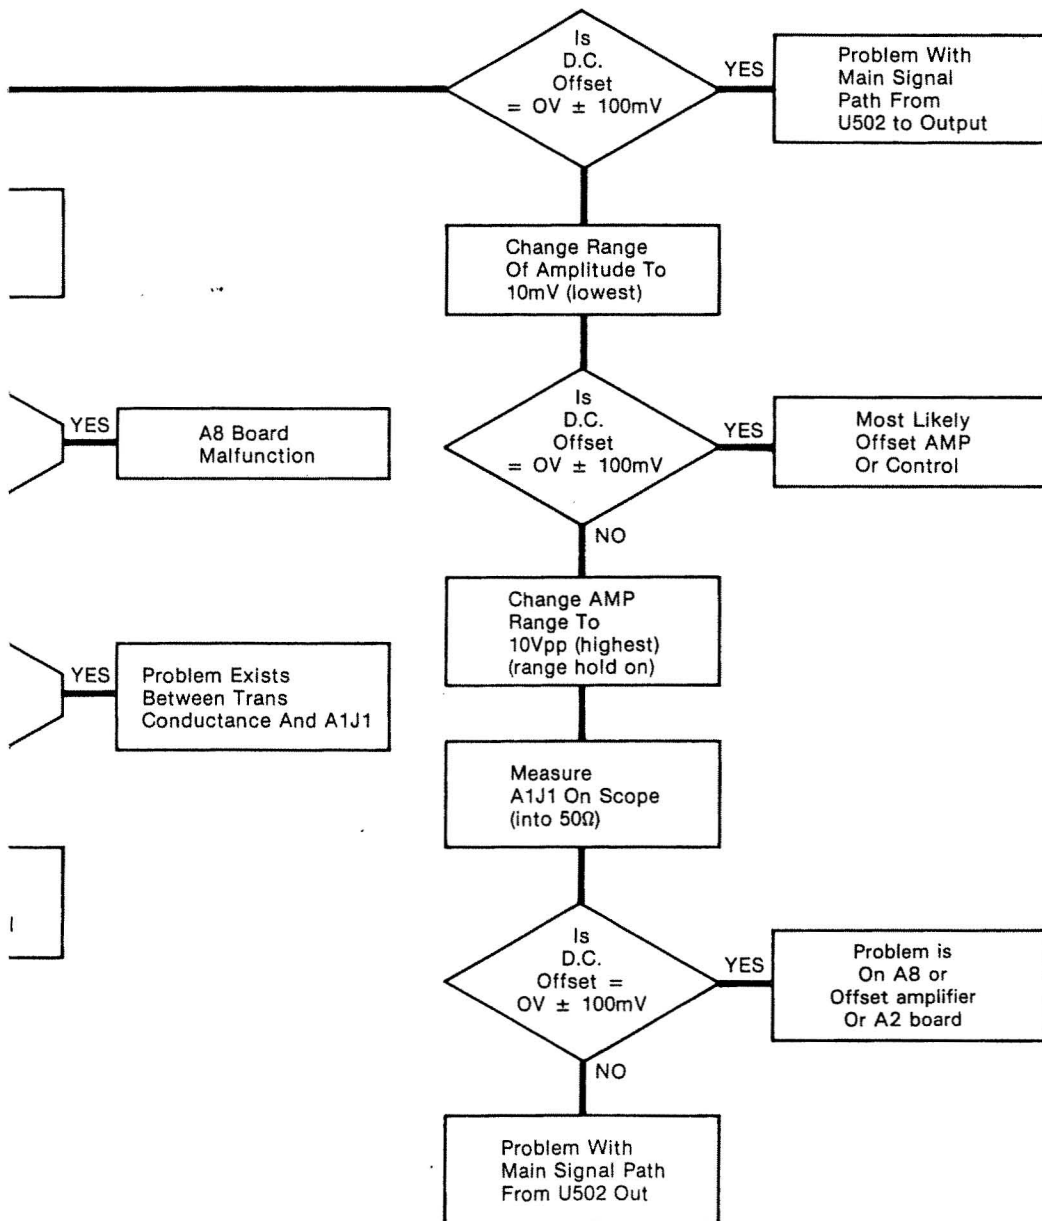


Figure 8-11B. Amplitude Calibration Troubleshooting Flowchart.

8-52. SCHEMATICS

This section contains 22 schematics organized by PC Assembly.

- A1, 03314-66501, Generator PC Board
 - A1A Programmable Integrator Current Source (includes the Freq/Sym DAC)
 - A1B Triangle Integrator
 - A1C Transconductance Amplifier
 - A1D Trig/Gate/ARB Phase Servo Amplifier
 - A1E Hysteresis Comparator
 - A1F Sync Circuits and Sync Output
 - A1G Function and Vernier Amplitude Control (includes the Sine Shaper IC)
 - A1H Preamplifier
 - A1I Offset Amplifier
 - A1J Output Interface
 - A1K Misc Interface

- A2, 03314-66502, Mode PC Board
 - A2A Phase Locked Loop (analog)
 - A2B Multiplexed DAC and X Drive Output
 - A2C Phase Locked Loop (digital) and Dividers
 - A2D Frequency Control and Z Axis Output

- A3, 03314-66503, Controller/Power Supply PC Board
 - A3A Power Supplies
 - A3B Clock Circuits and Battery
 - A3C Processor, Memory and HP-IB
 - A3D Timer and I/O




- A5, 03314-66505, X3 Output
 - A5A X3 Output

- A8, 03314-66508, Output Amplifier and Step Attenuator
 - A8A Output Amplifier and Step Attenuator

- A10, 03314-66510, Front Panel Display and Keyboard
 - A10A Front Panel Display and Keyboard
 - Includes: A11 Front Panel
 - A12 Display and Keyboard

8-53. Special Schematic Symbols

The following illustrations highlight specific labels and symbols used on the 3314A schematics to convey information about assemblies, schematics functional blocks, signal paths, and circuit variations.

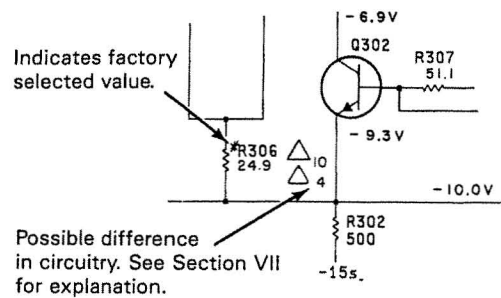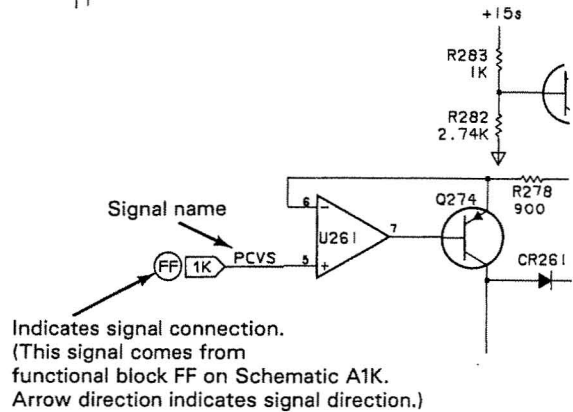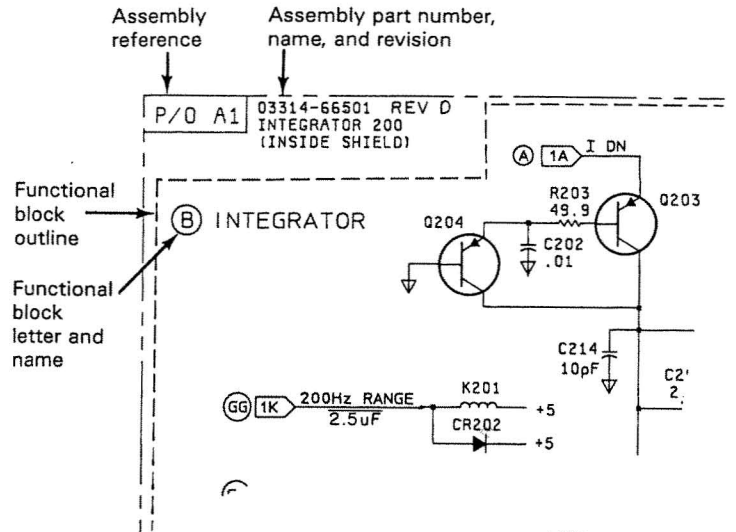



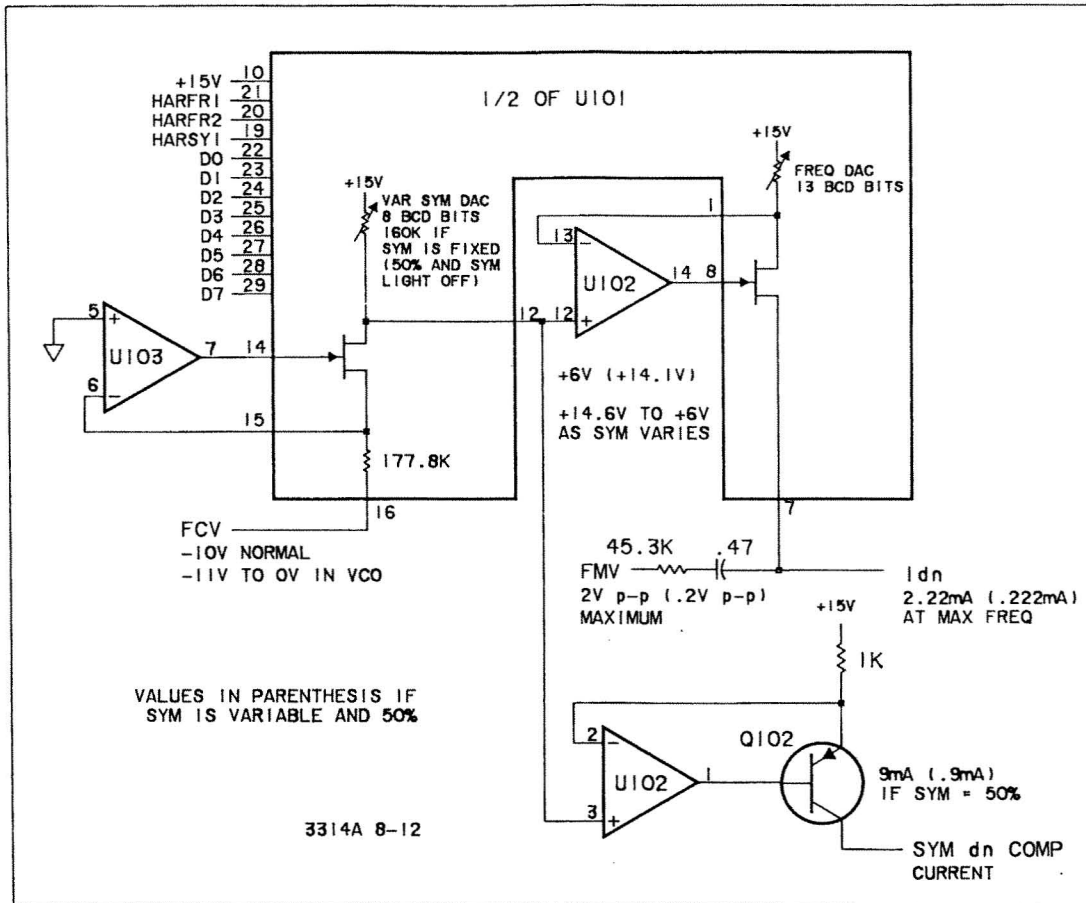


Figure 8-12. Integrator Current Block Diagram

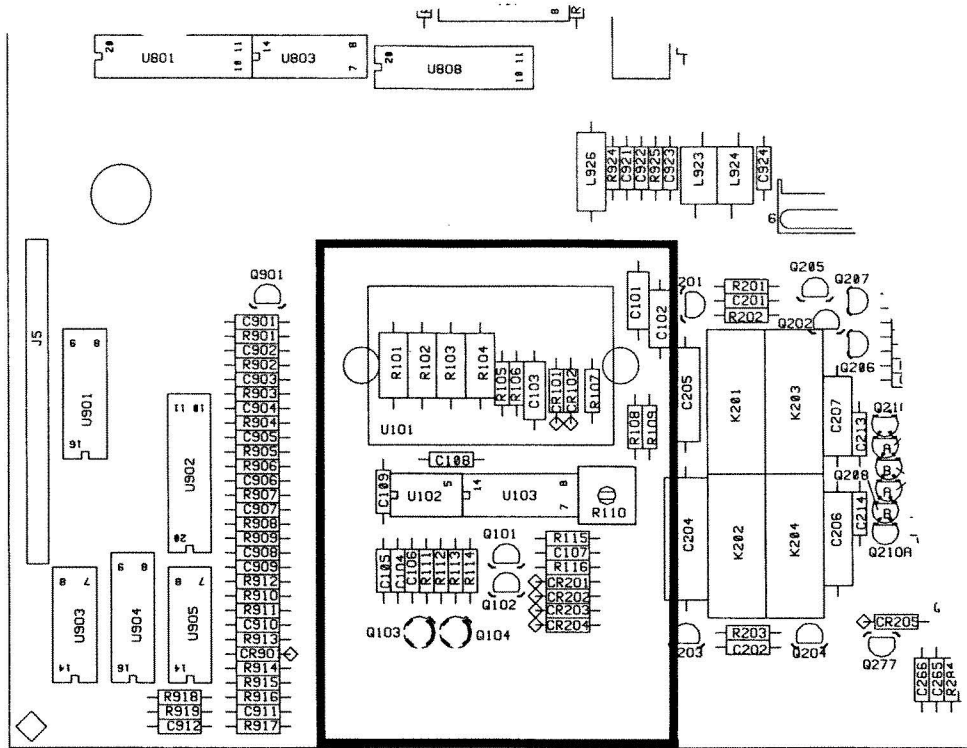

A1(Board Rev E)
03314-66501

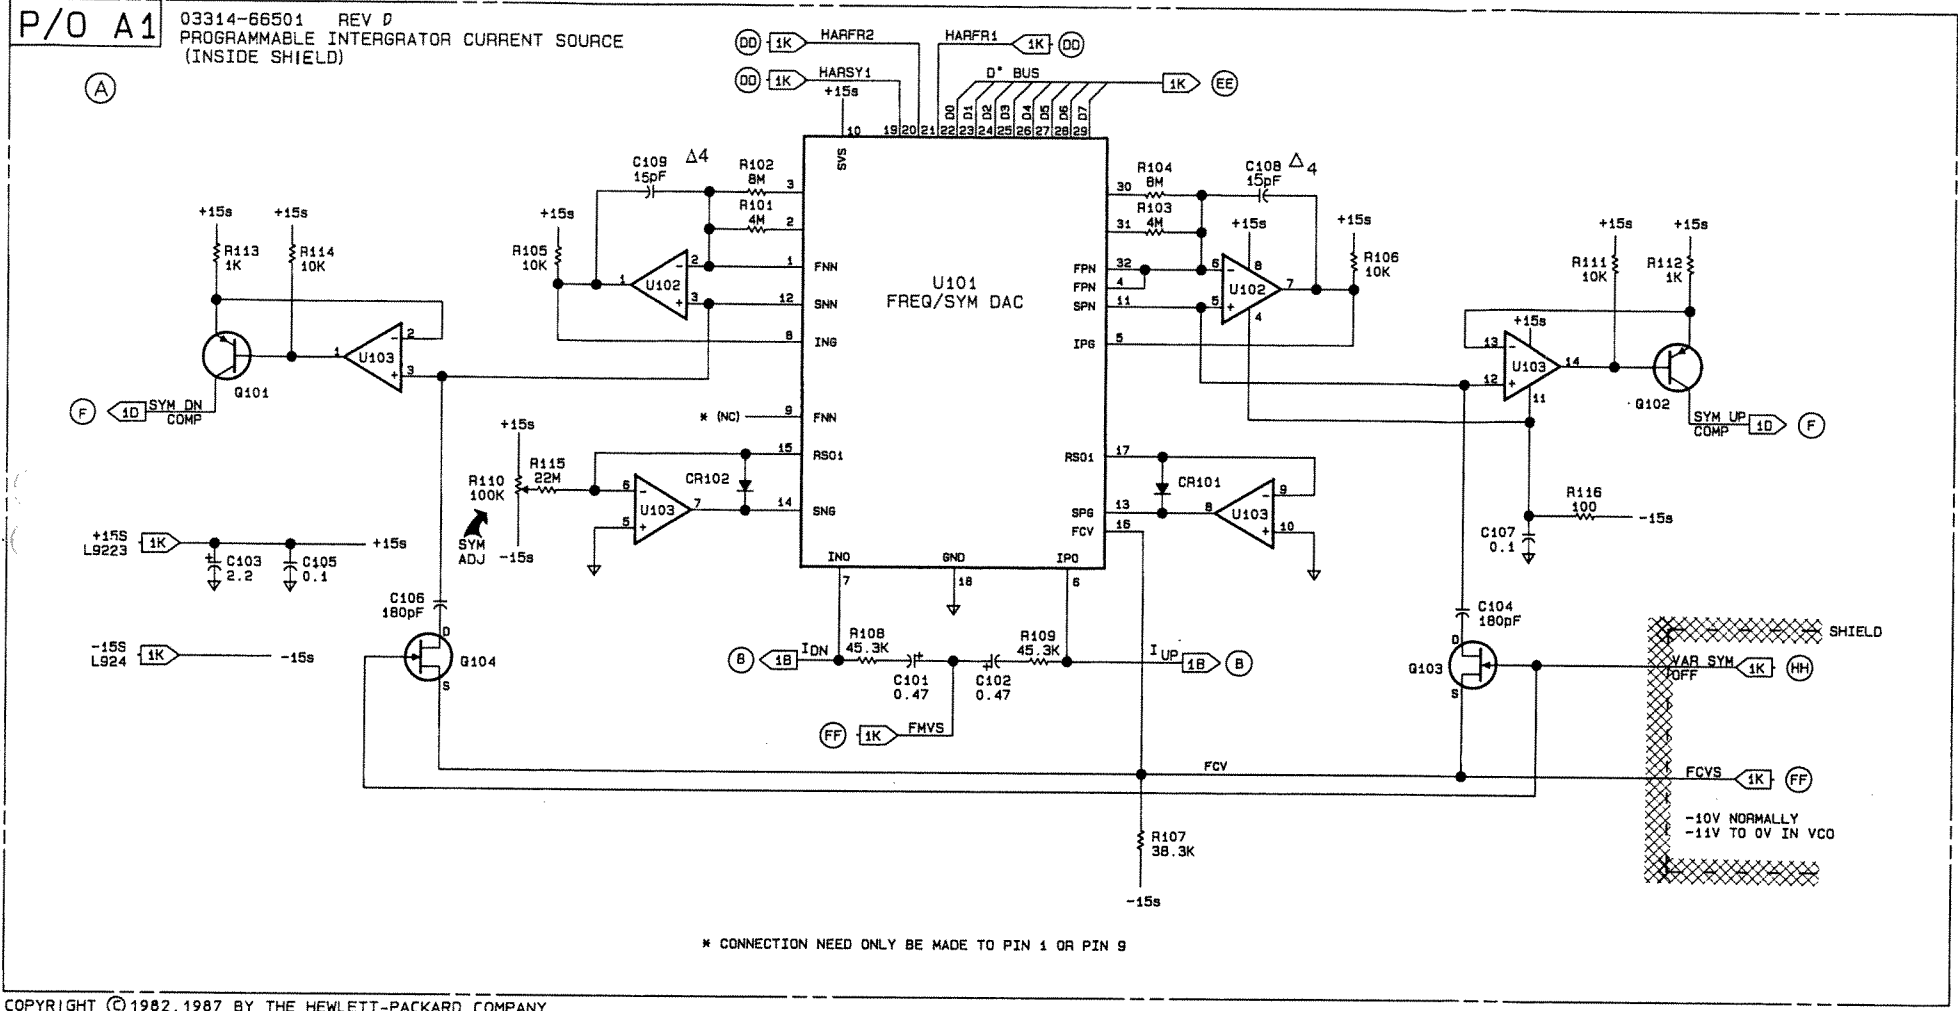

COPYRIGHT © 1982, 1987 BY THE HEWLETT-PACKARD COMPANY

A1_A
Figure 8-13 Integrator Current Control
(includes the Freq/Sym DAC)



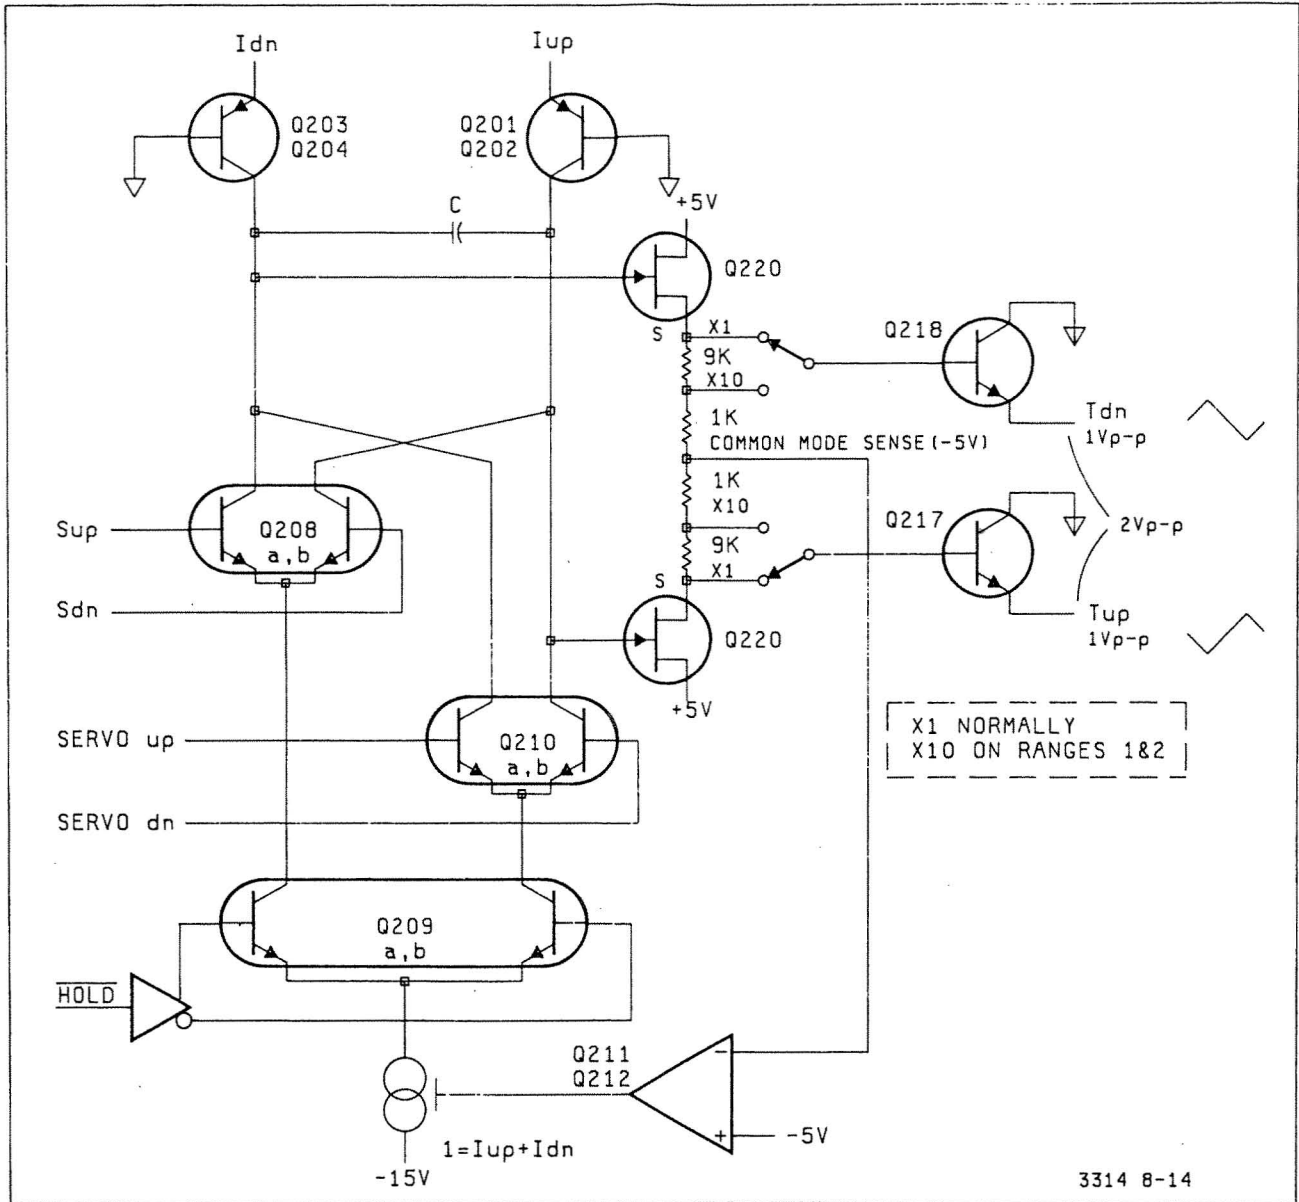



Figure 8-14. Integrator Block Diagram

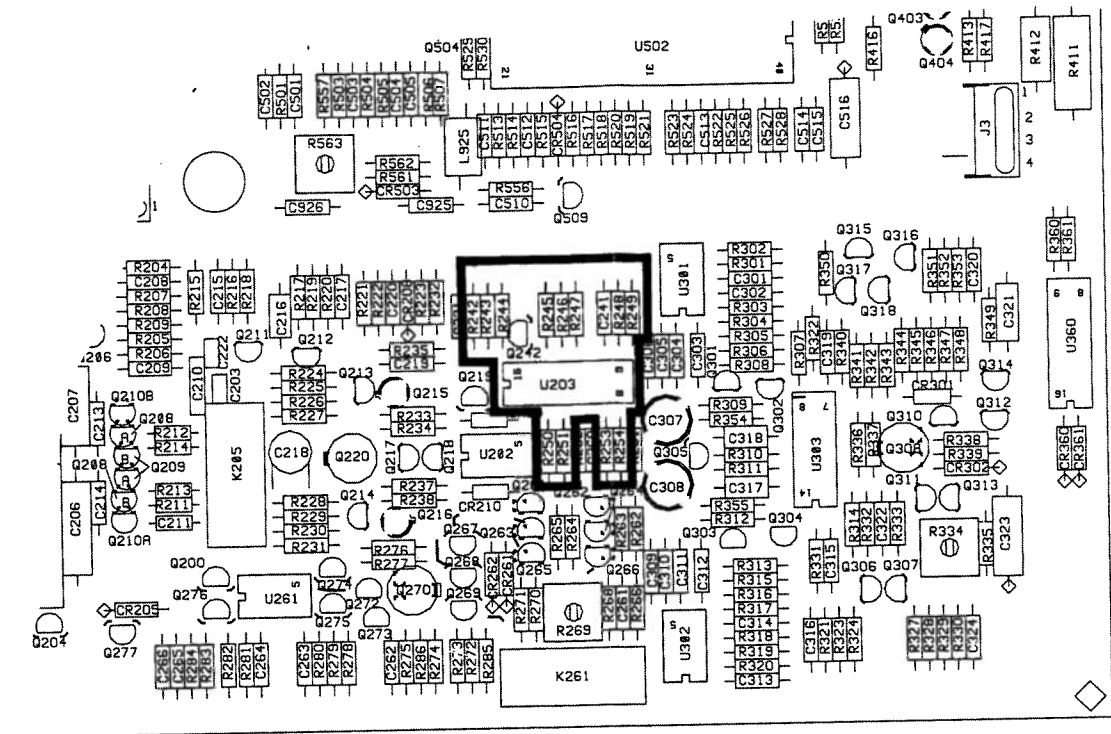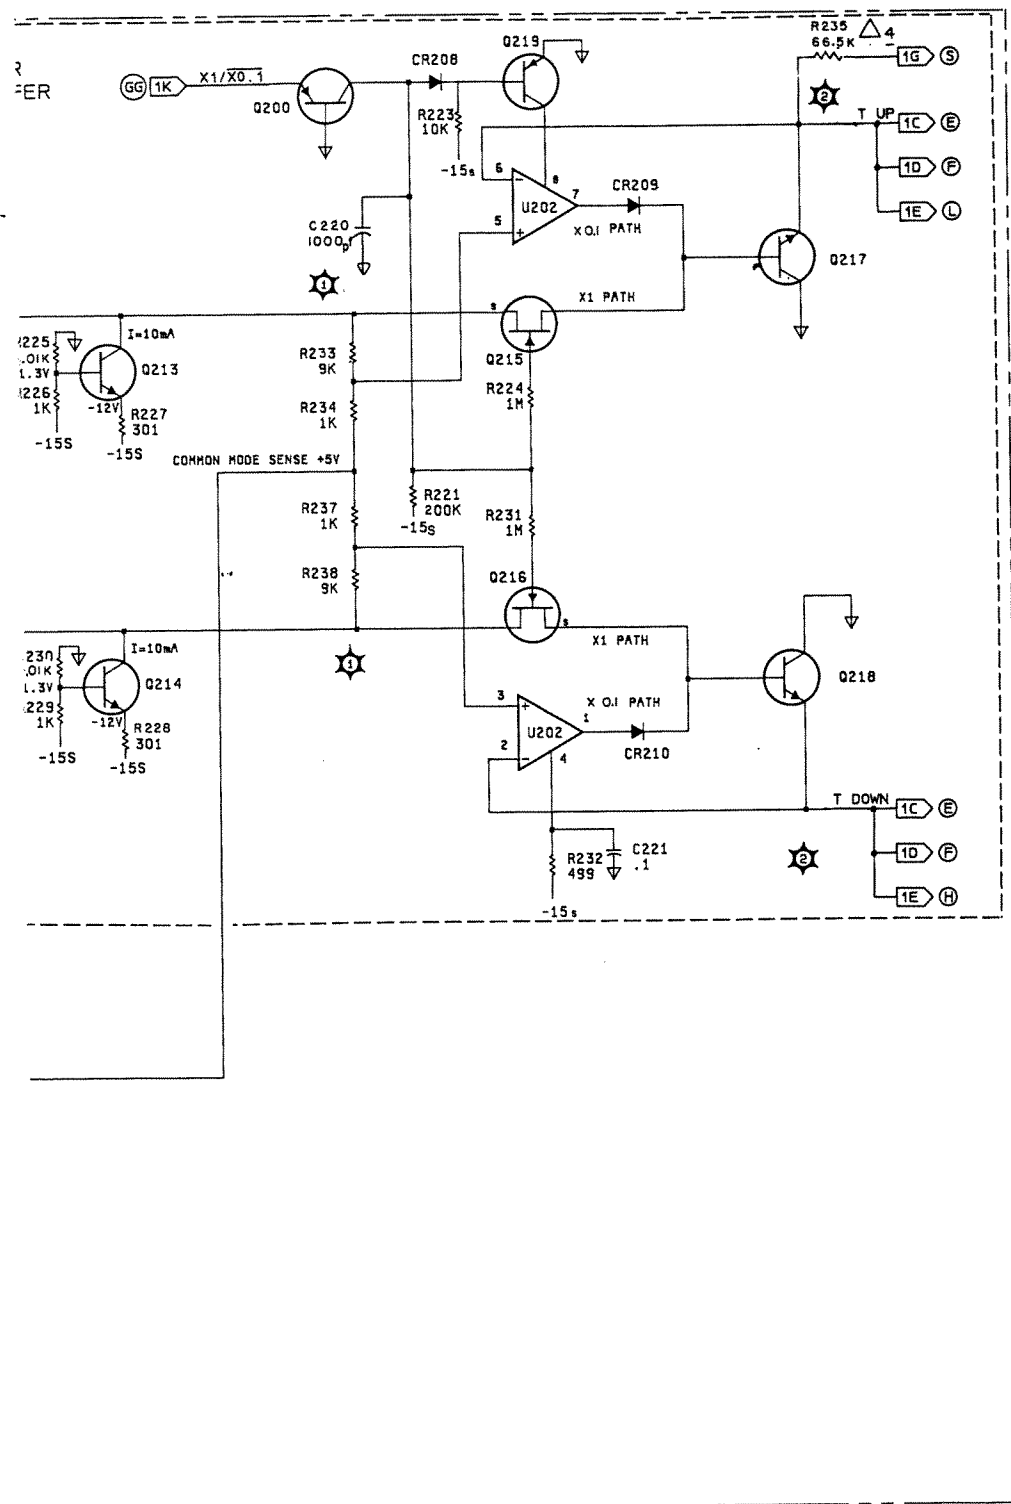

A1(Board Rev E)
03314-66501

A1_B


Figure 8-15 Triangle Integrator

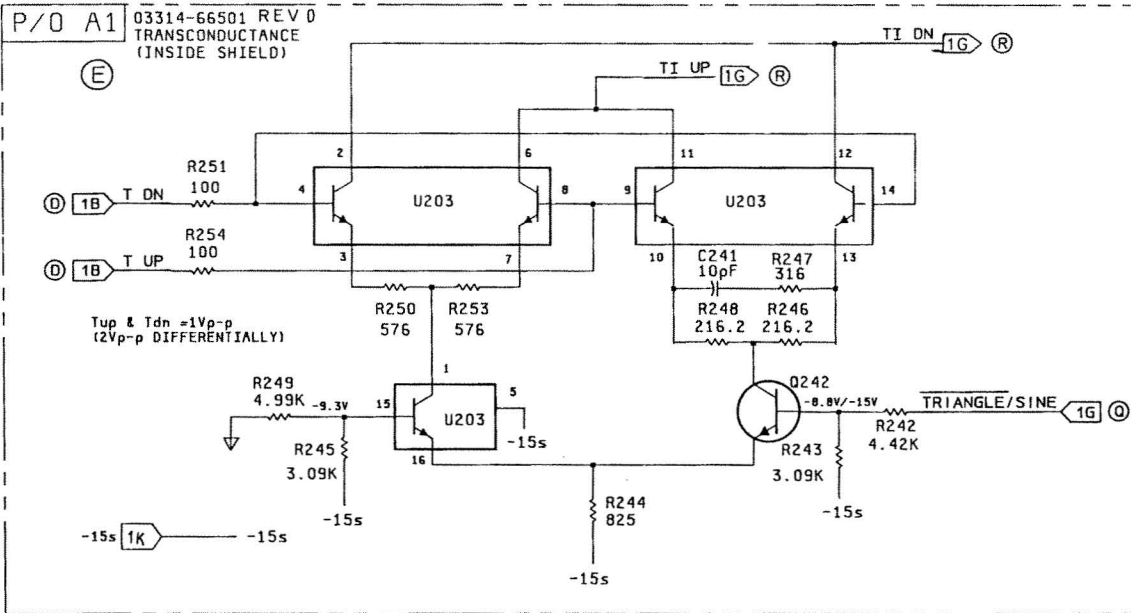


COPYRIGHT © 1982, 1987 BY THE HEWLETT-PACKARD COMPANY

A1c

Figure 8-16 Transconductance Amplifier

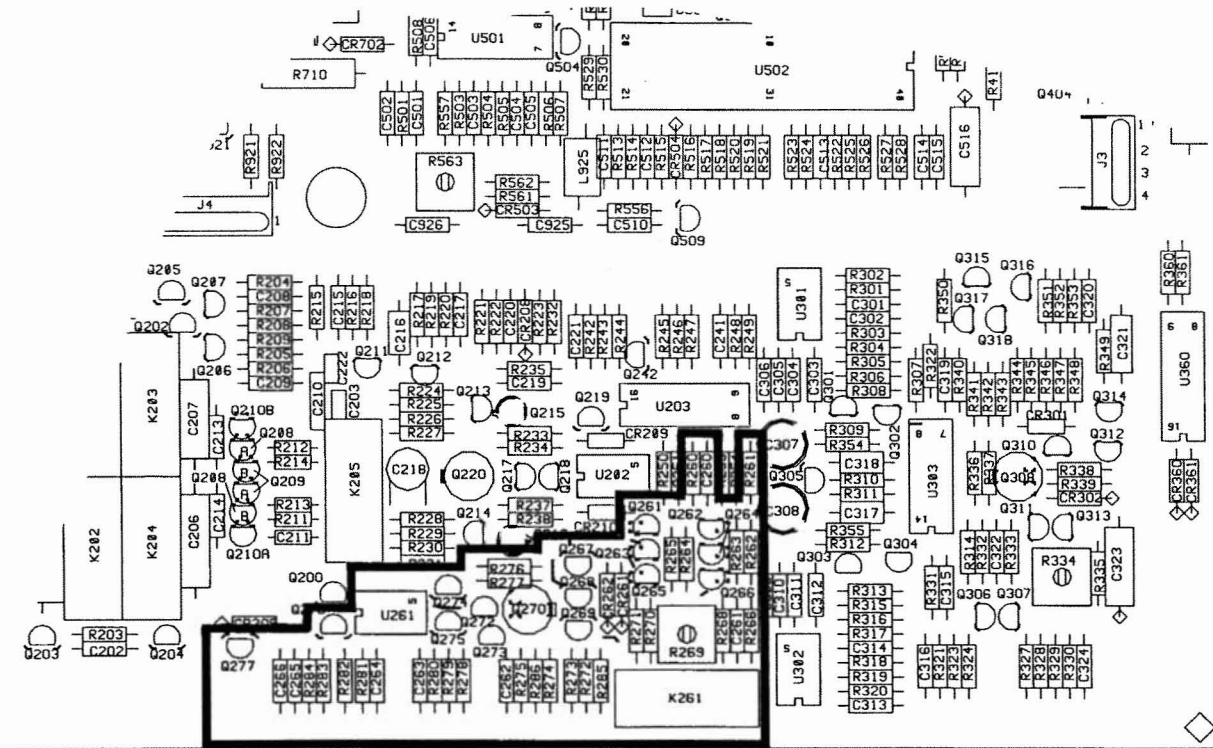

A1(Board Rev E)
03314-66501

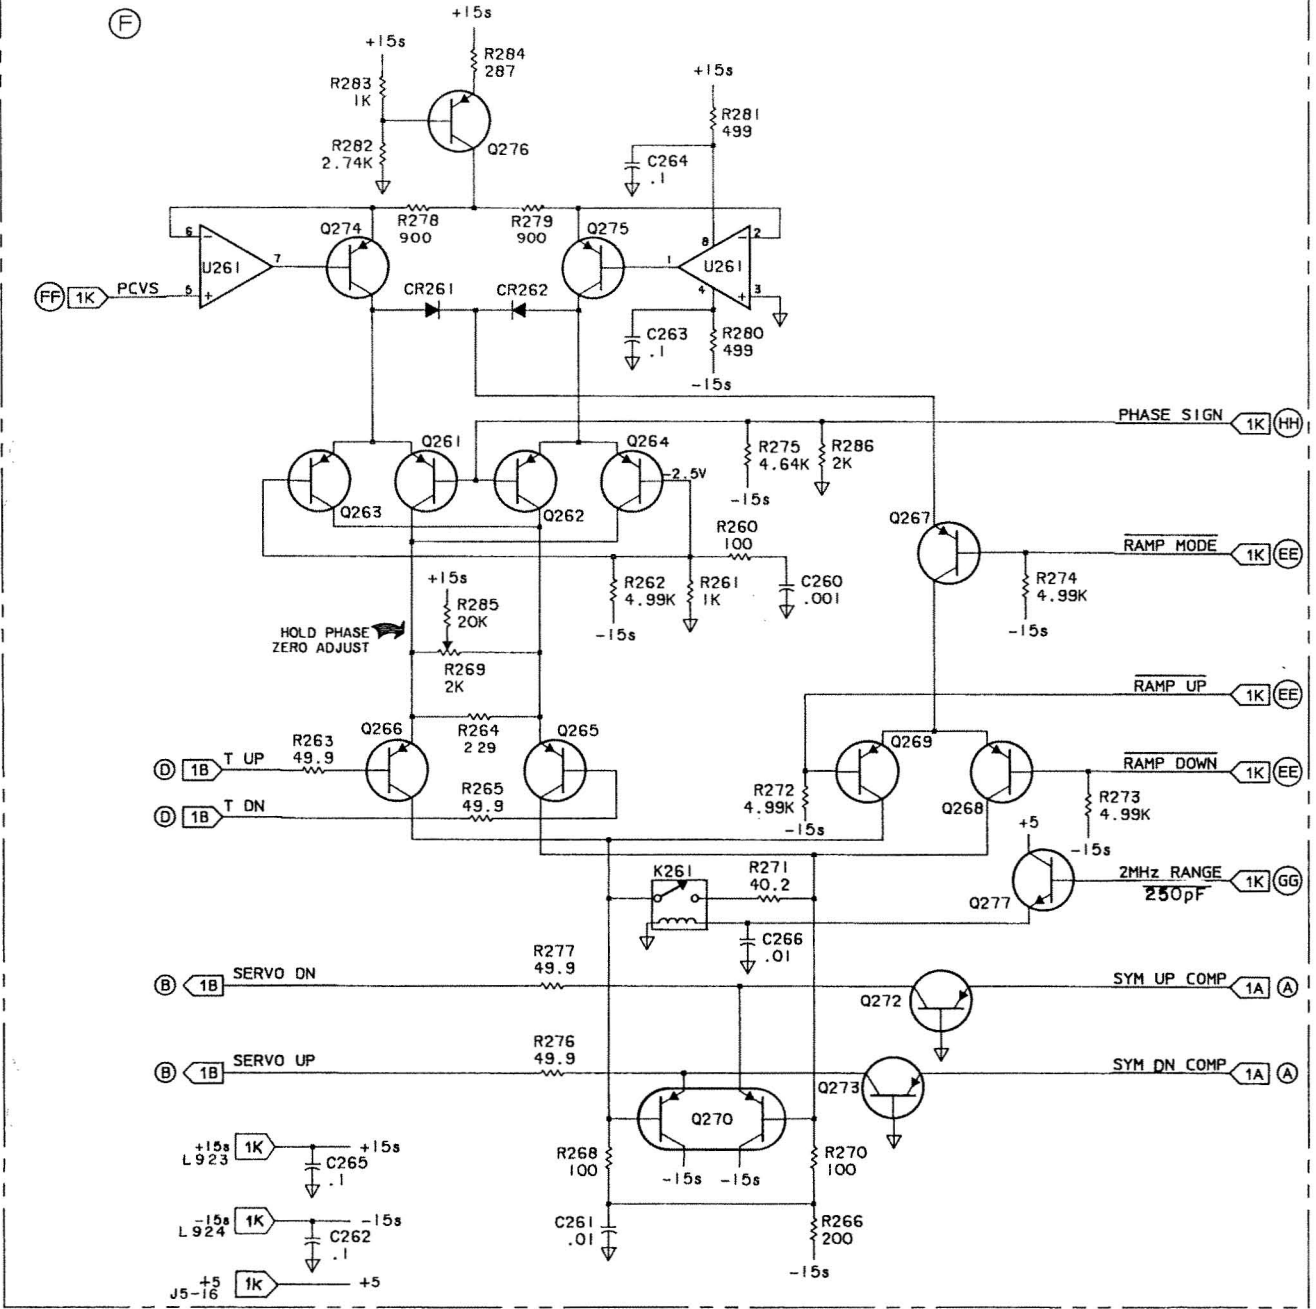

COPYRIGHT © 1982, 1987 BY THE HEWLETT-PACKARD COMPANY

A1_D

Figure 8-17 Trig/Gate/Arb Phase Sero Amplifier

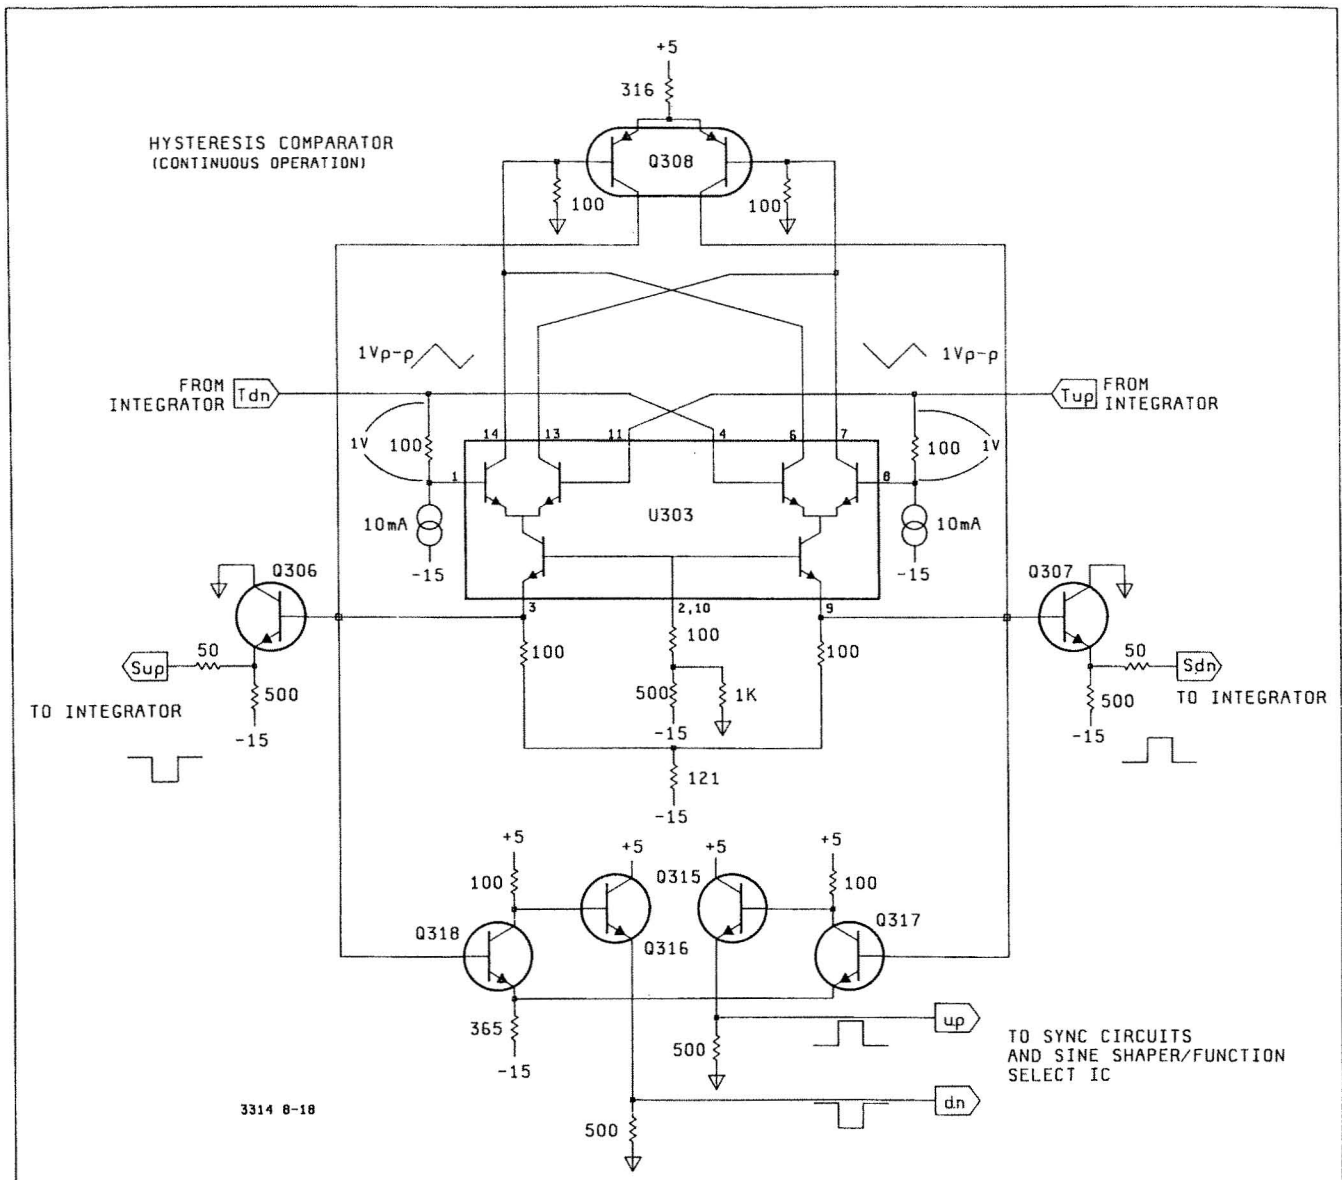


Figure 8-18. Comparator Block Diagram
(Continuous Operation)


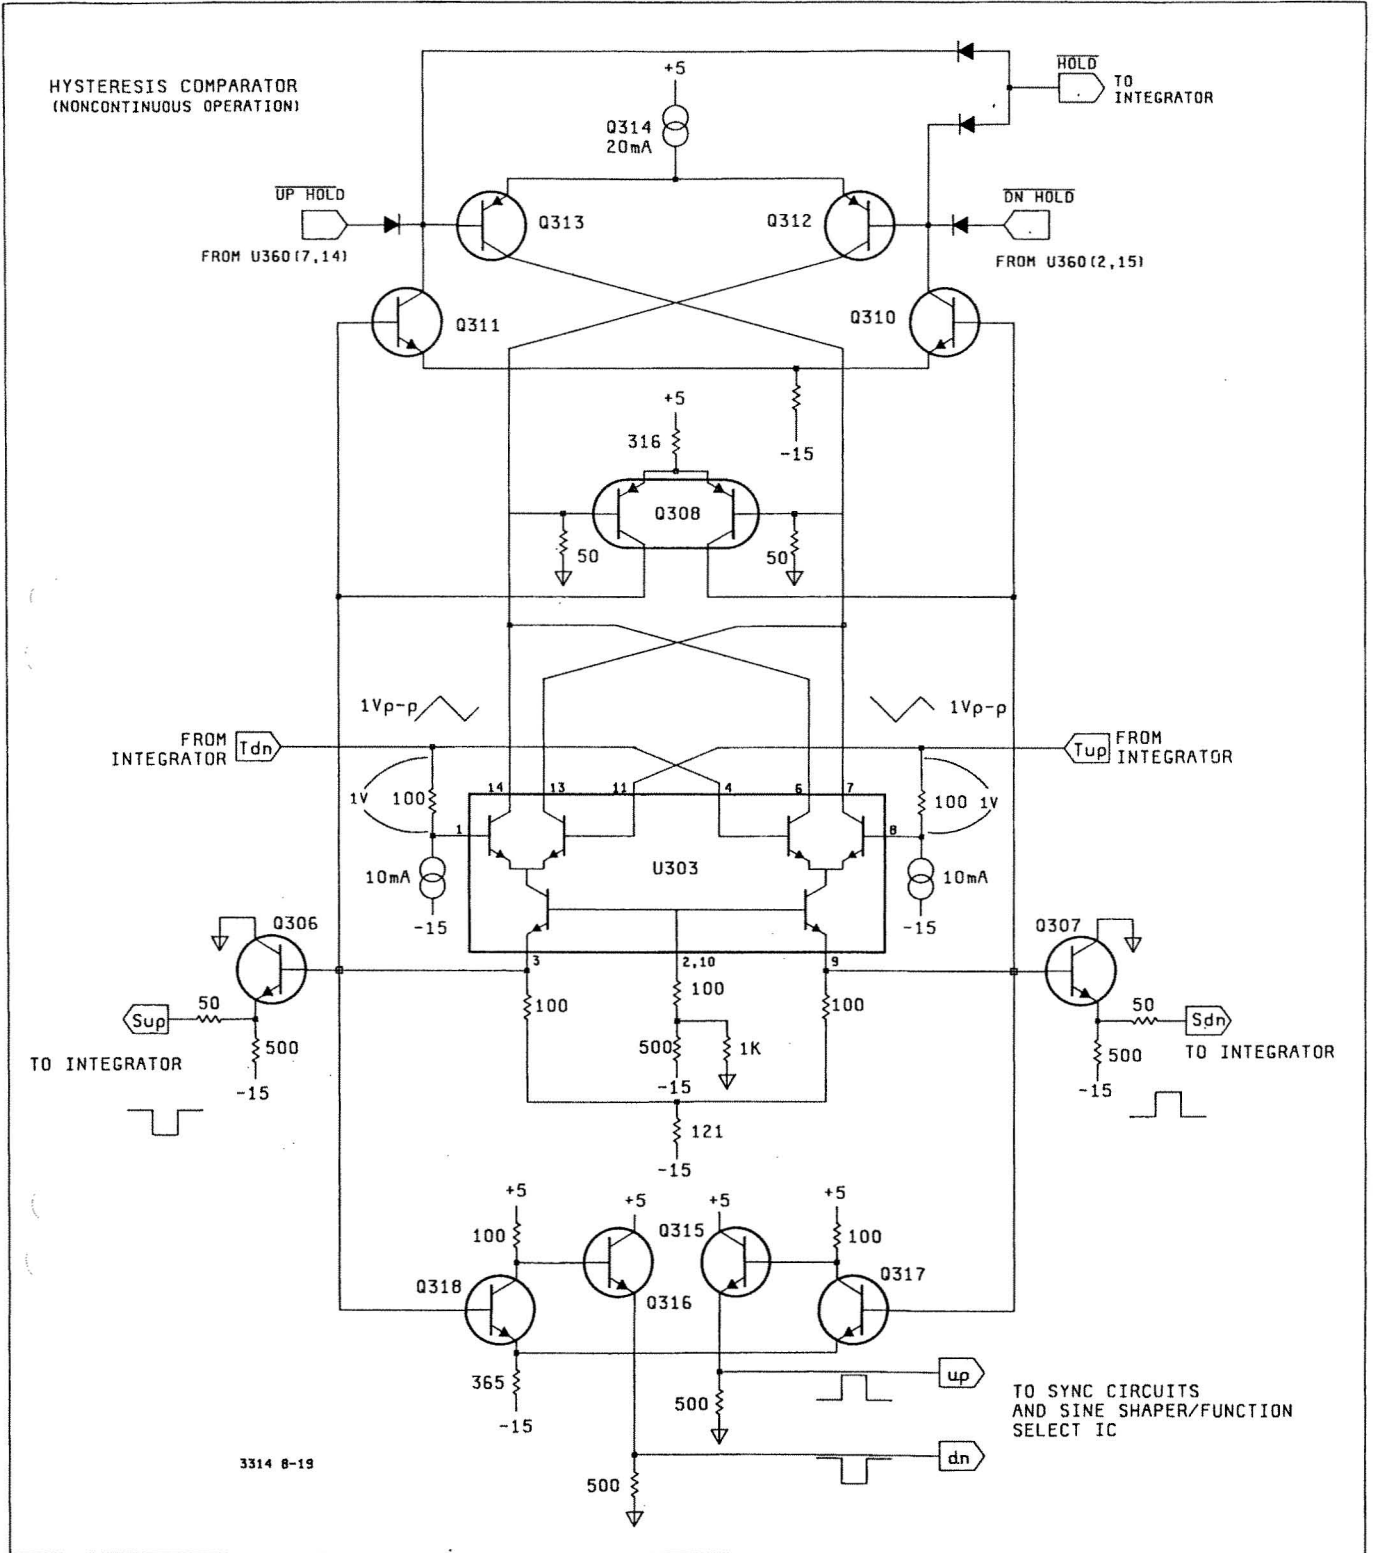


Figure 8-19. Comparator Block Diagram (Non-Continuous Operation)




**A1(Board Rev E)
03314-66501**

Note: All front panel settings are from instrument turn on unless otherwise noted.


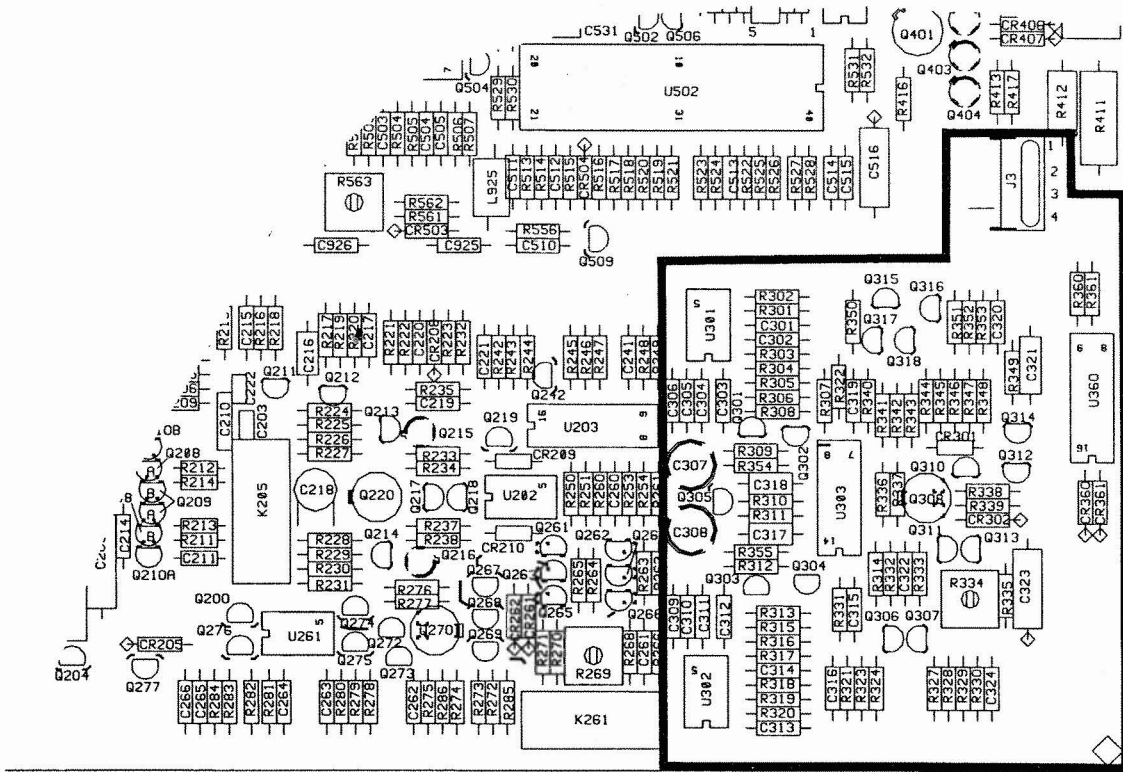


DC Coupled

Ground

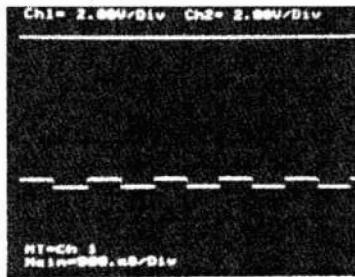


AC Coupled

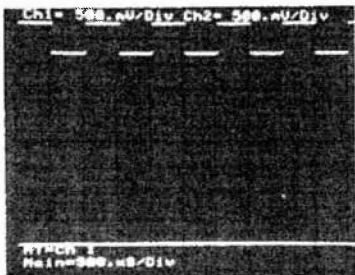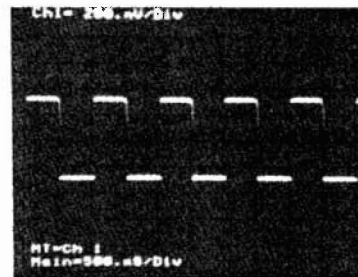


Ground



Ground

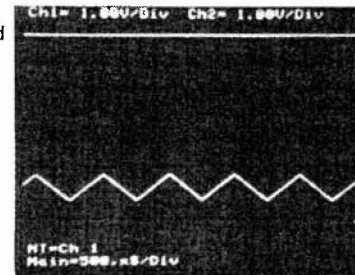


P/O A1 03314-66501 REV D
 TRIANGLE COMPARATOR
 (INSIDE SHIELD)

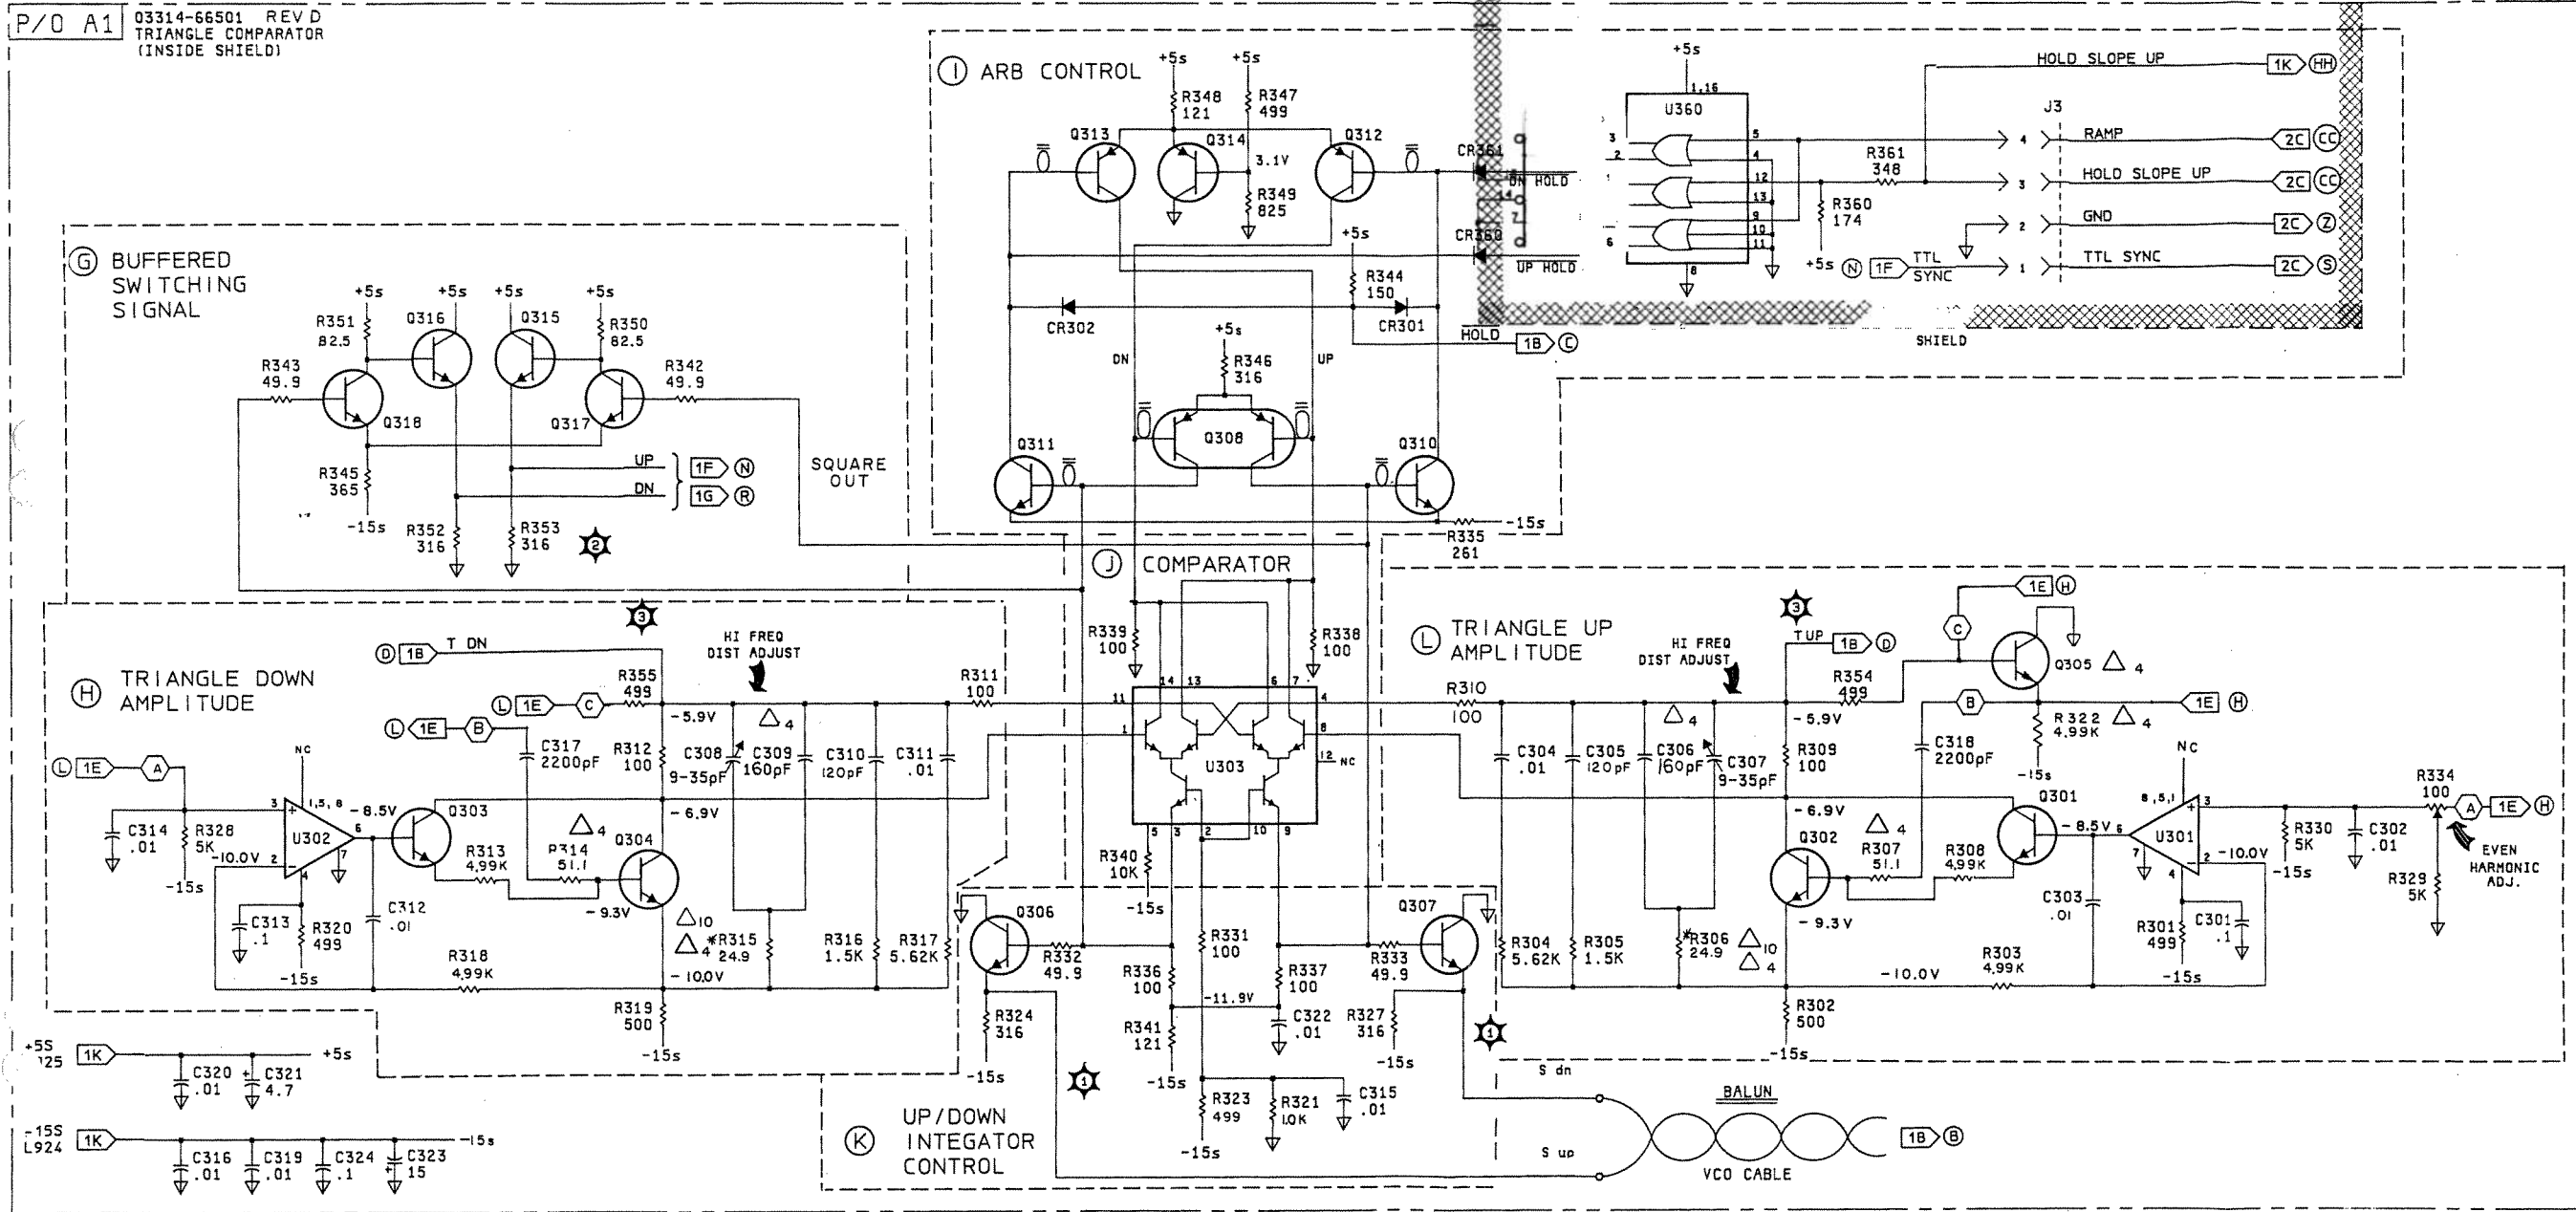


COPYRIGHT © 1982, 1987 BY THE HEWLETT-PACKARD COMPANY

A1E
 Figure 8-20 Hysteresis Comparator
 8-49

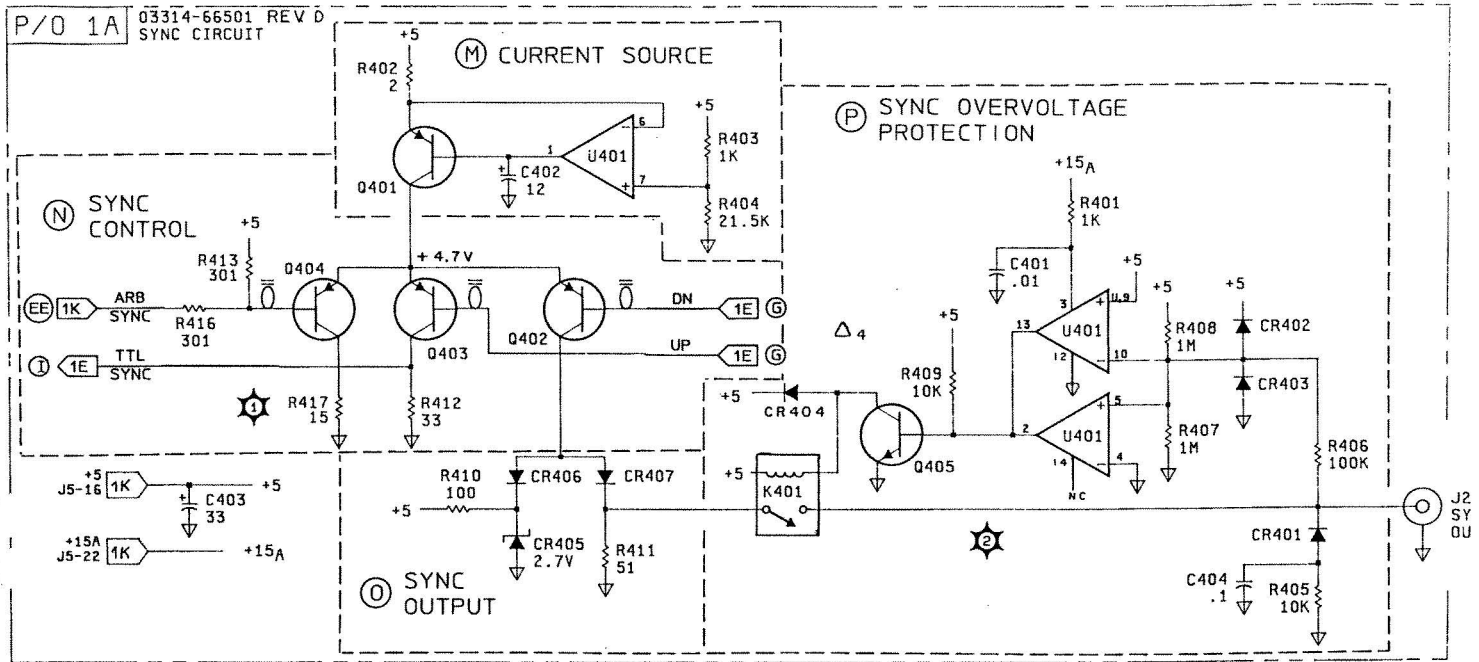

A1F

Figure 8-21 Sync Circuits and Sync Output

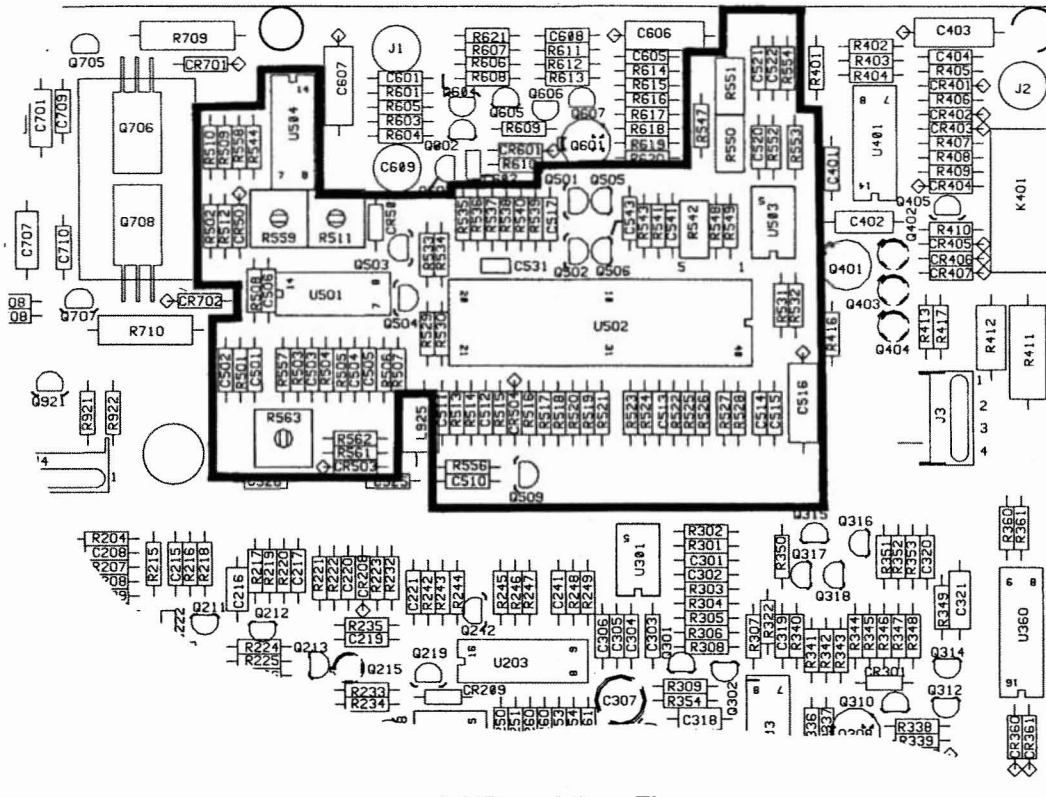


**A1(Board Rev E)
03314-66501**


Note: All front panel settings are from instrument turn on unless otherwise noted.



Ground

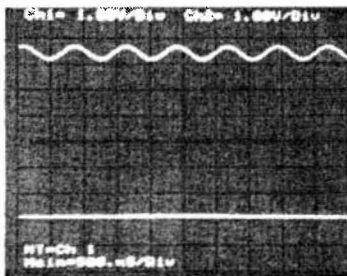


P/O AI 03314-66501 REV D
FUNCTION/AMPLITUDE

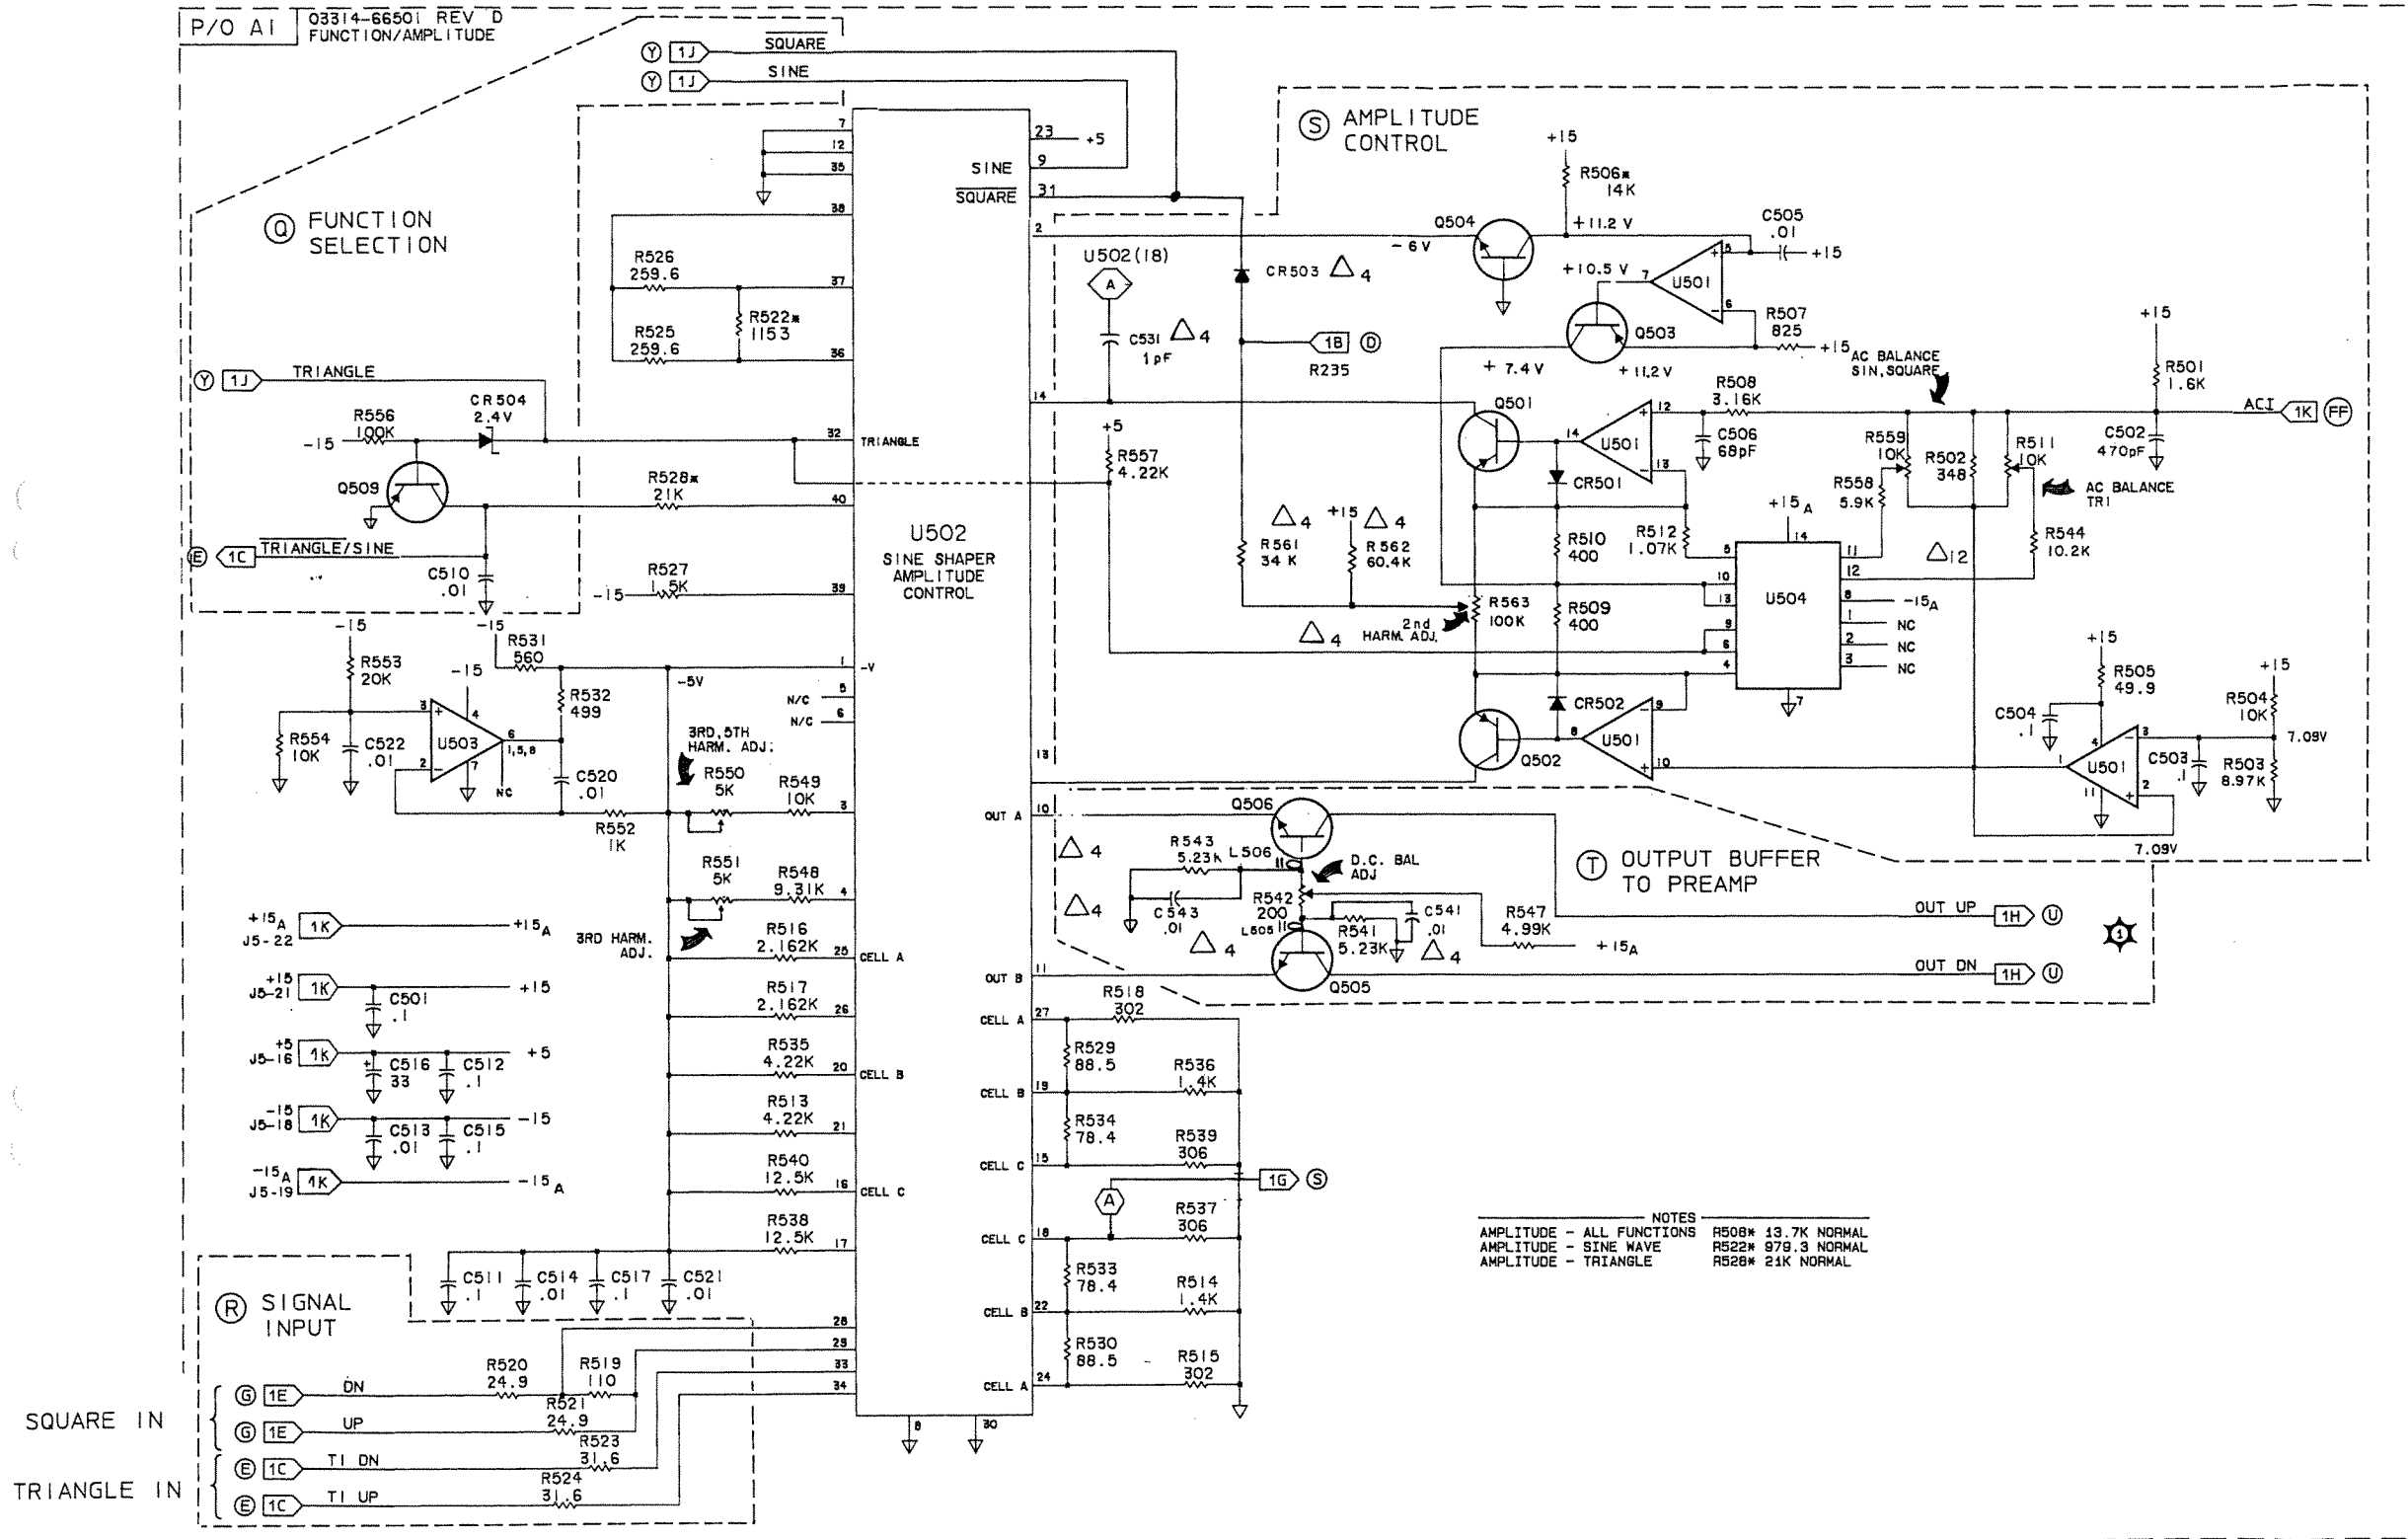

COPYRIGHT © 1982, 1987 BY THE HEWLETT-PACKARD COMPANY



A1G


Figure 8-22 Function and Vernier Amplitude Control
(includes the Sine Shaper IC)

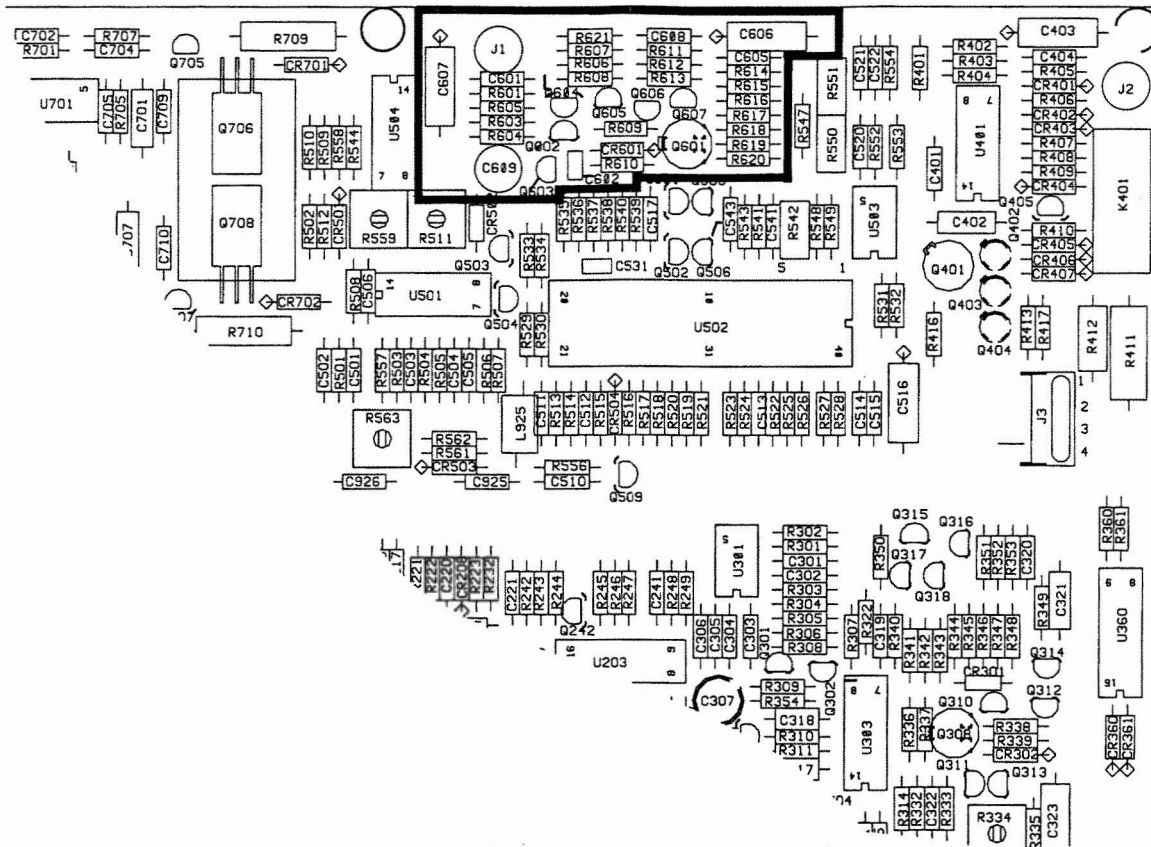

A1(Board Rev E)
03314-66501


Note: All front panel settings are from instrument turn on unless otherwise noted.

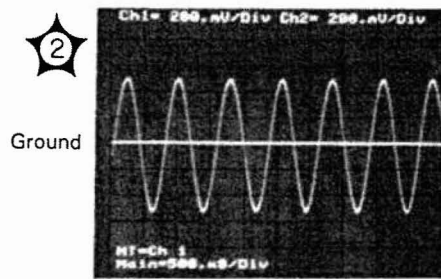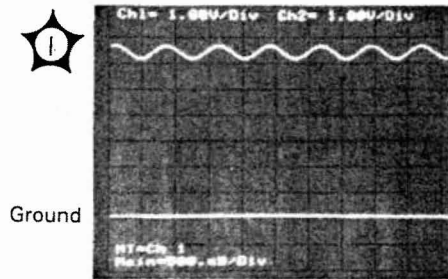

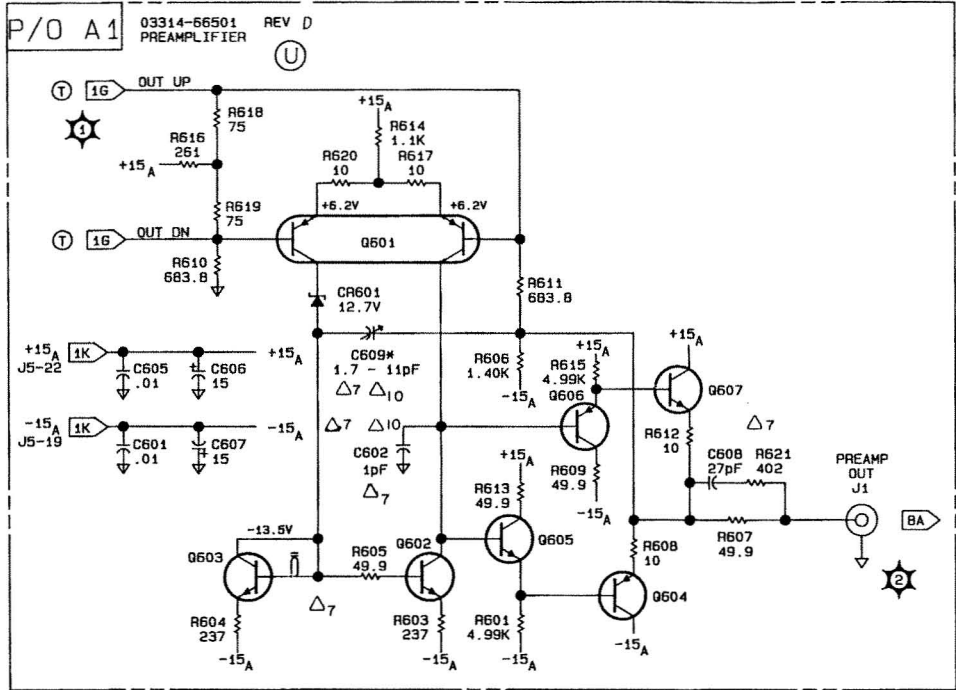

COPYRIGHT © 1982, 1987 BY THE HEWLETT-PACKARD COMPANY


A1_H
Figure 8-23 Preamplifier
8-55

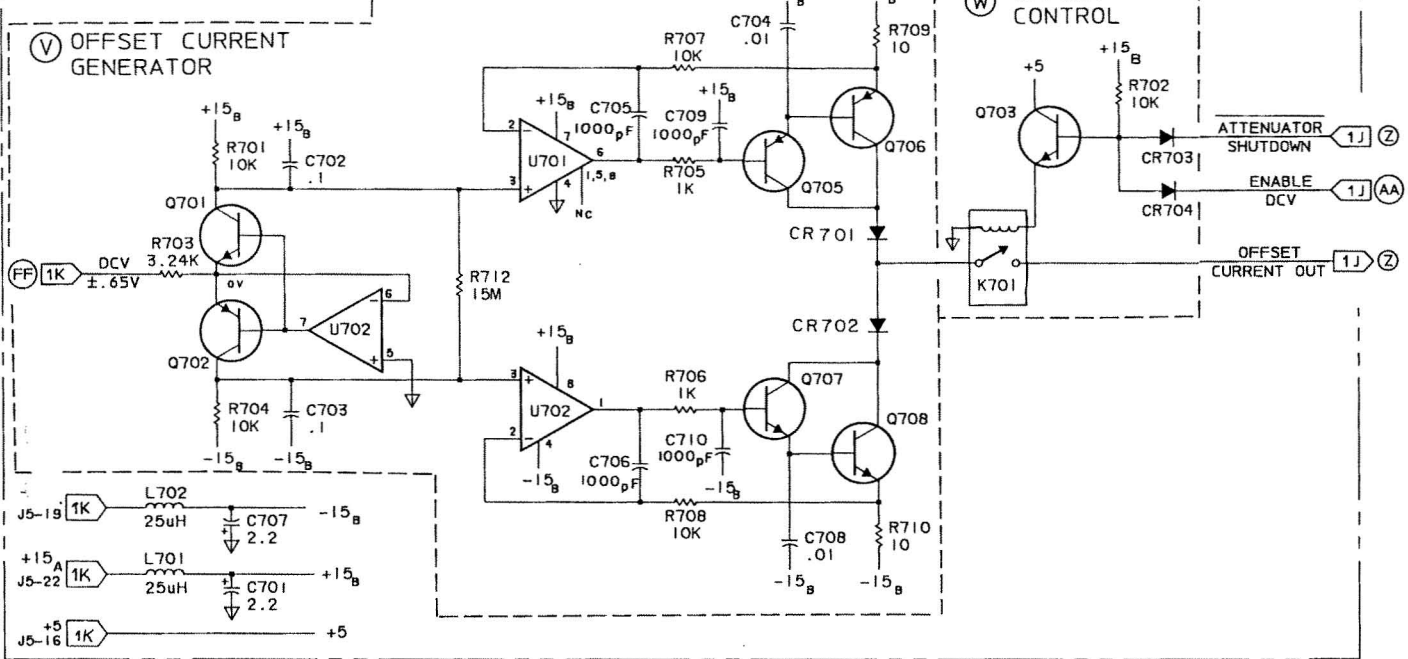


COPYRIGHT © 1982, 1987 BY THE HEWLETT-PACKARD COMPANY

A1


Figure 8-24 Offset Amplifier

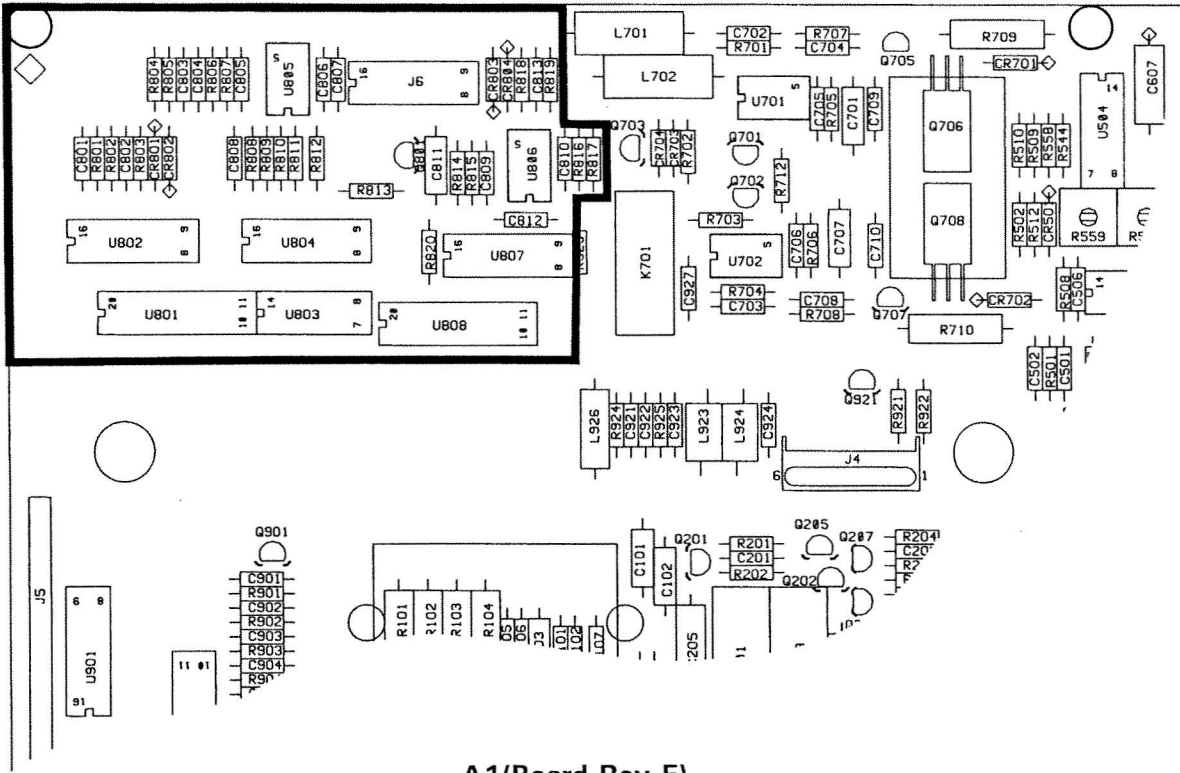

A1(Board Rev E)
03314-66510

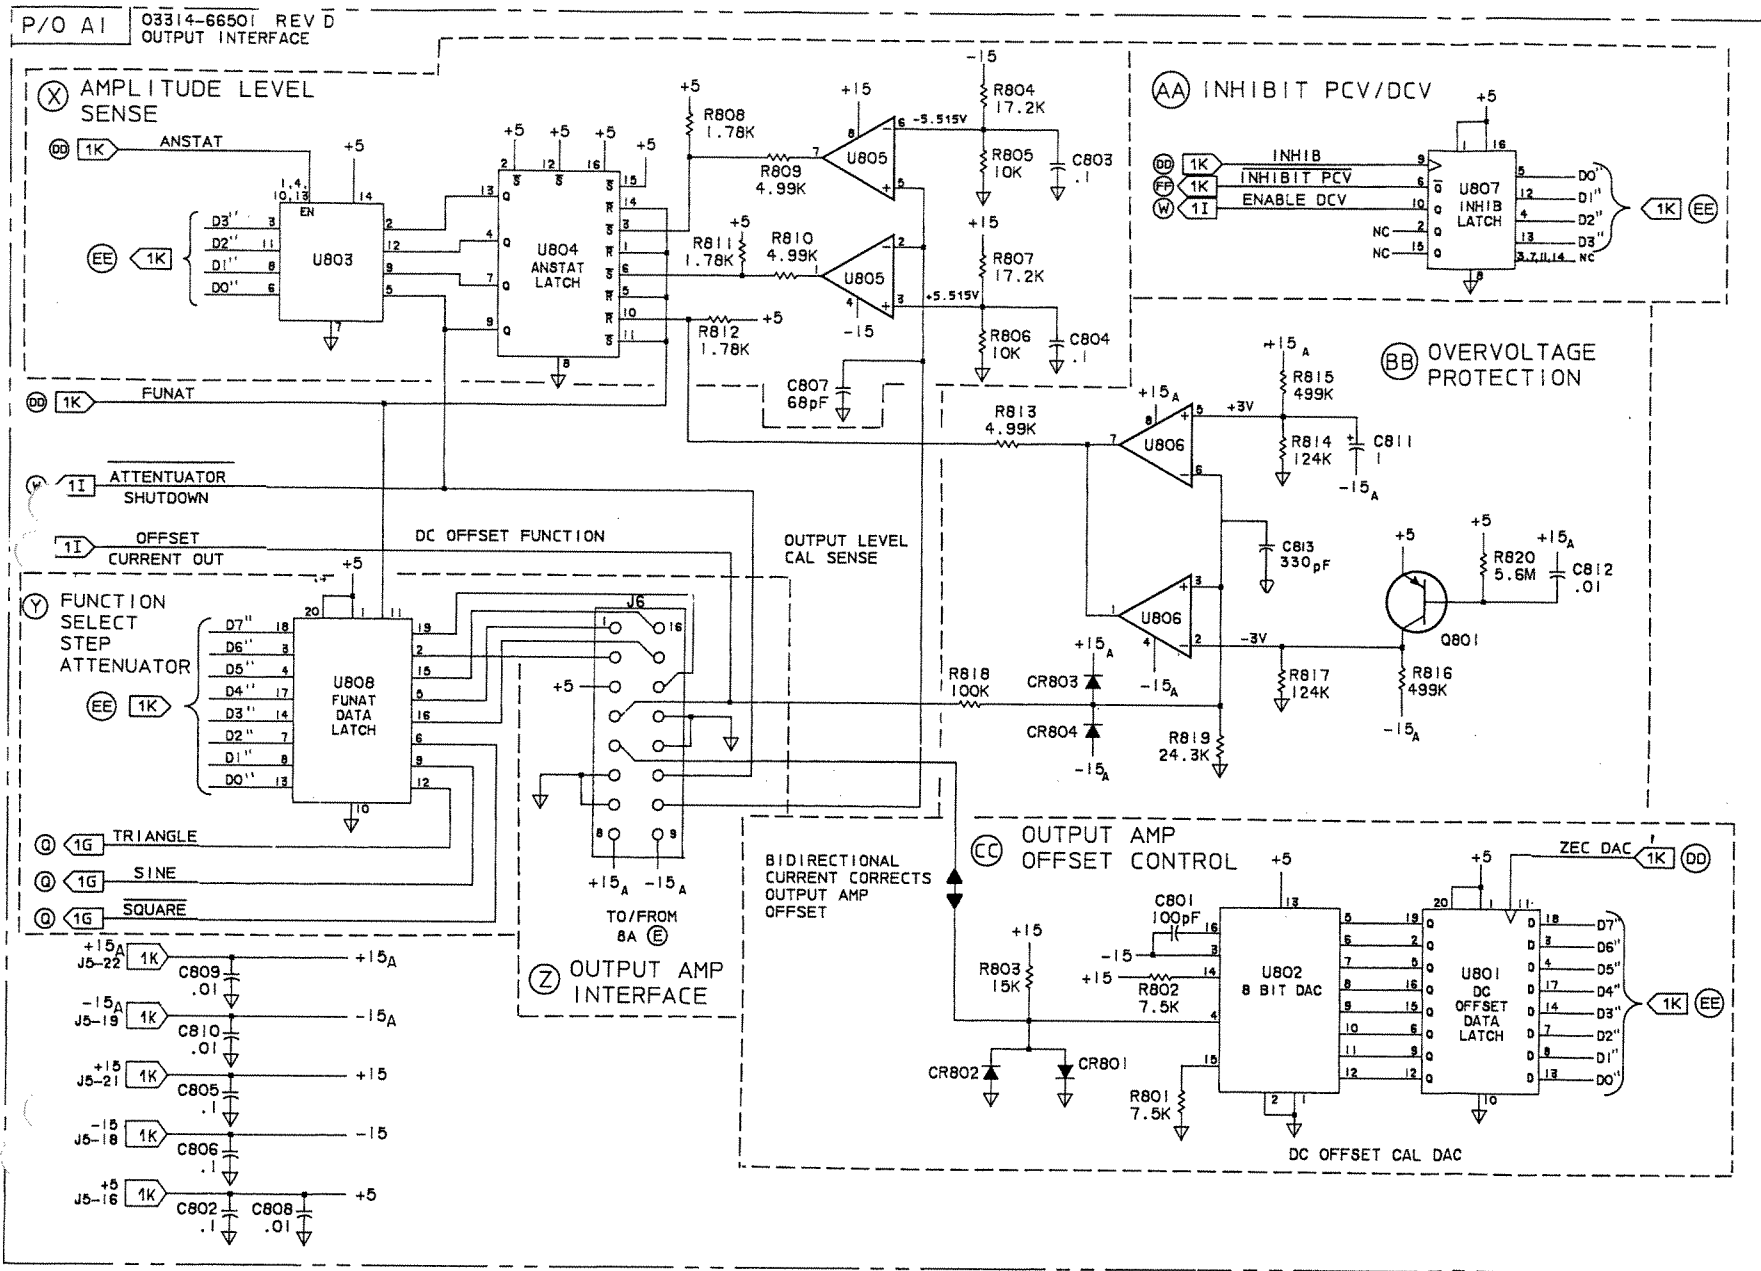

A1_J
Figure 8-25 Output Interface
8-59

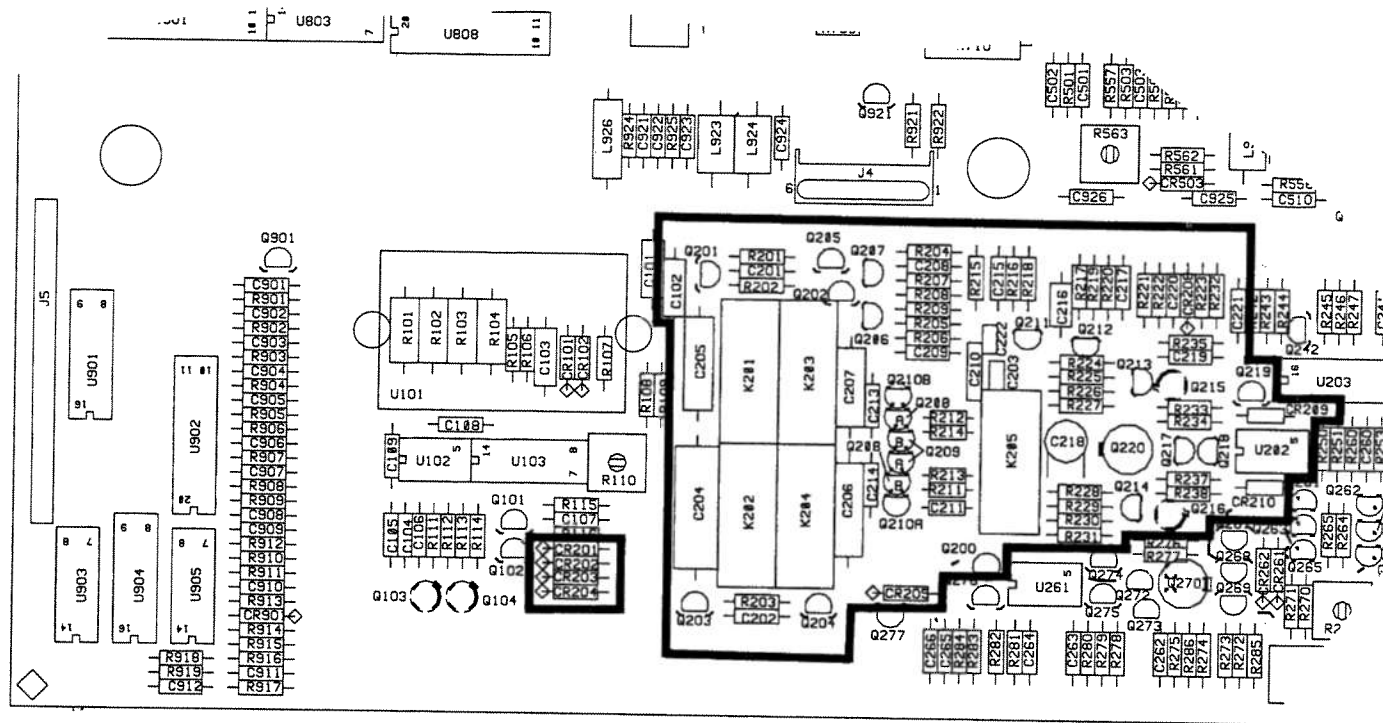


**A1(Board Rev E)
03341-66501**



Note: All front panel settings are from instrument turn on unless otherwise noted.




Ground

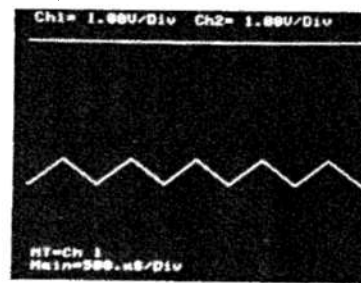


Ground

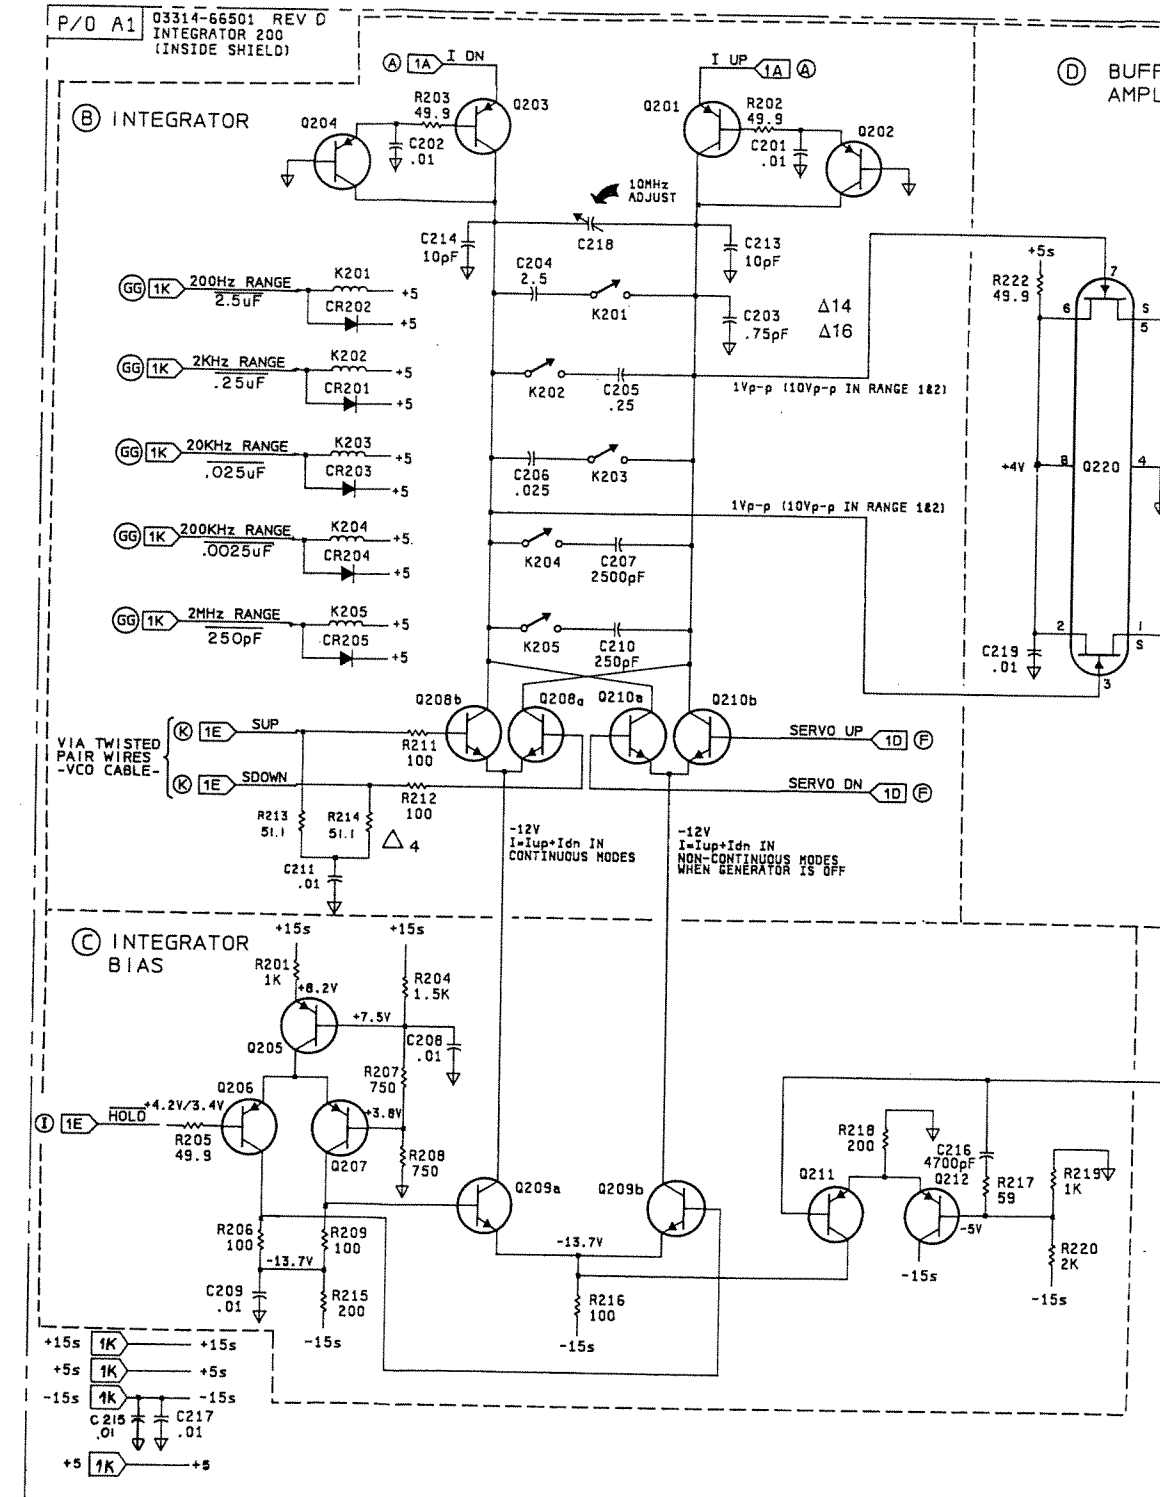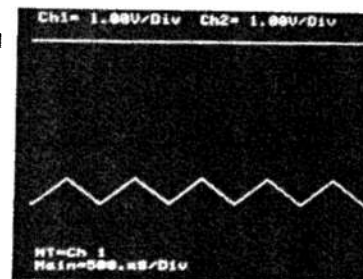

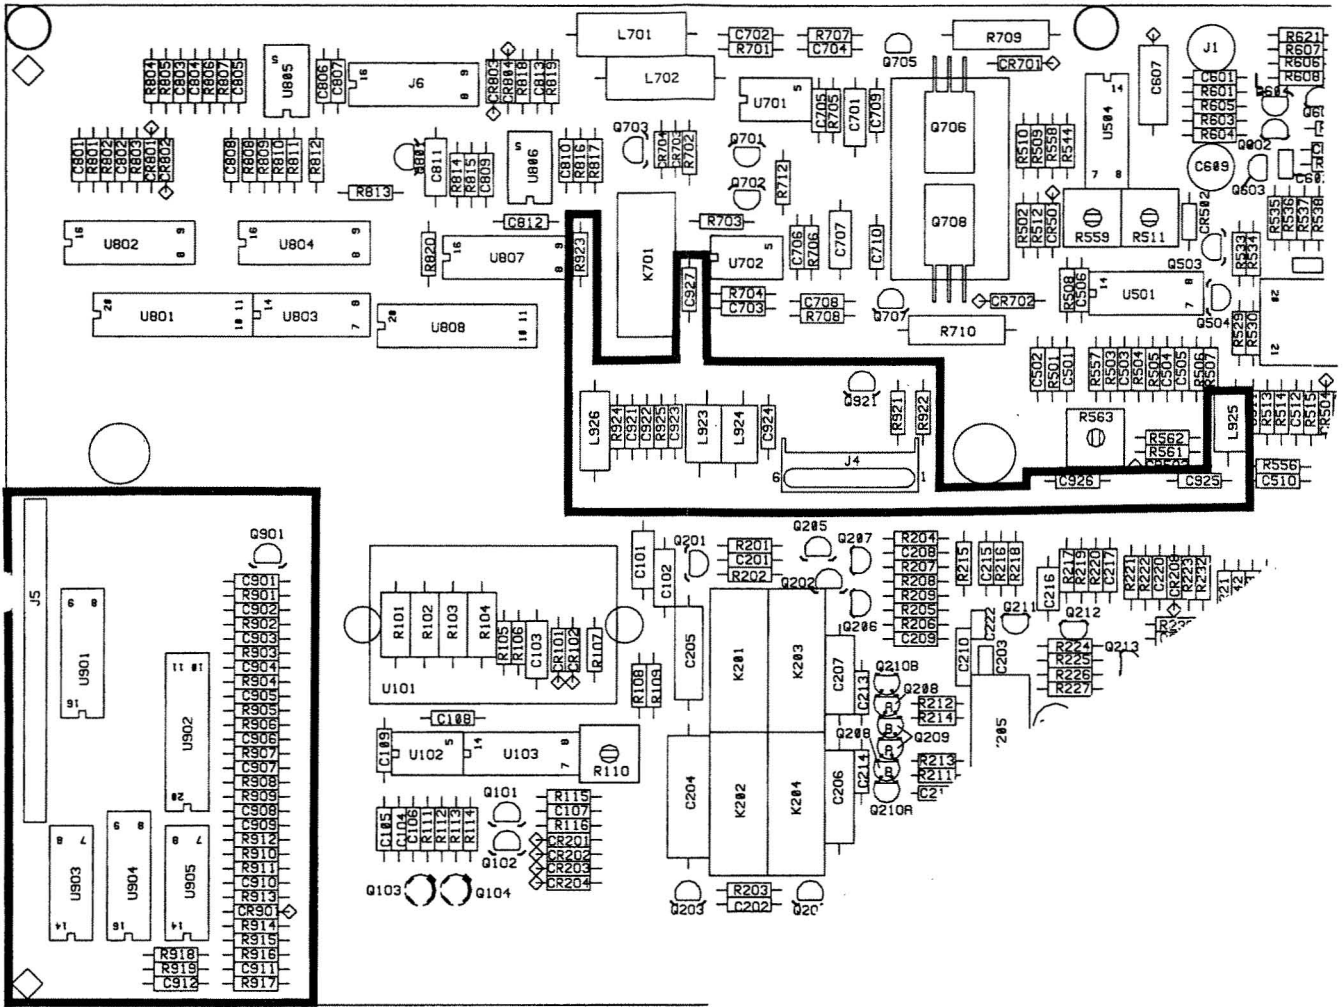


A1(Board Rev E)
03314-66501


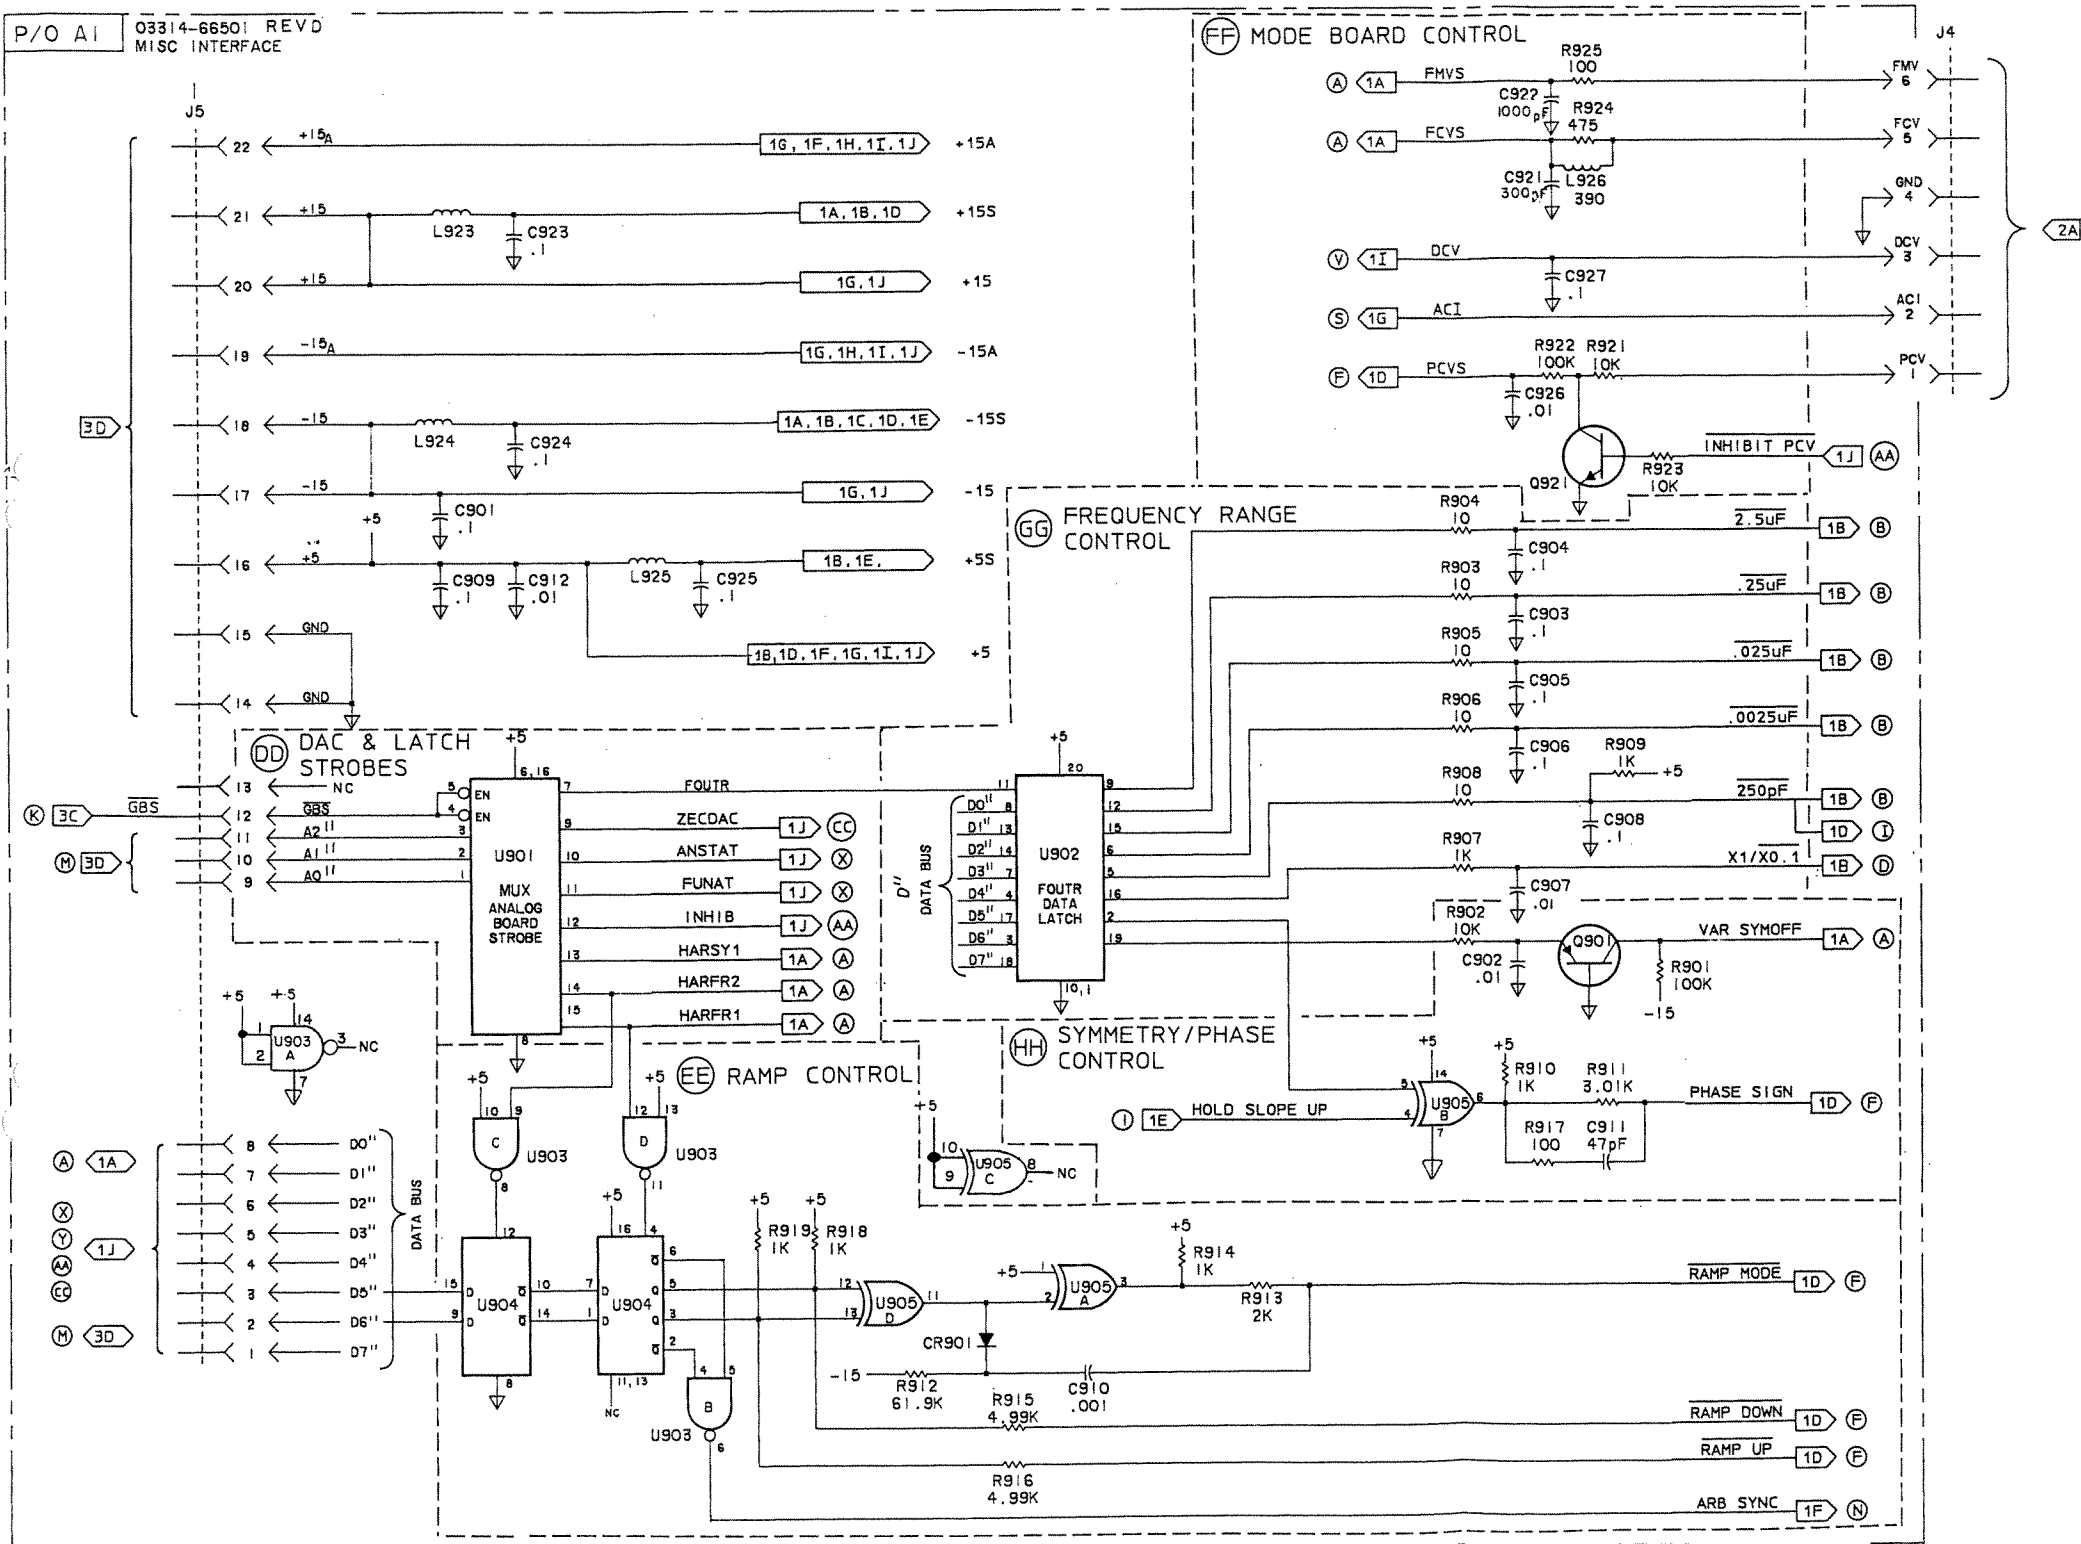




COPYRIGHT © 1982, 1987 BY THE HEWLETT-PACKARD COMPANY

A1K
 Figure 8-26 Misc Interface
 8-61

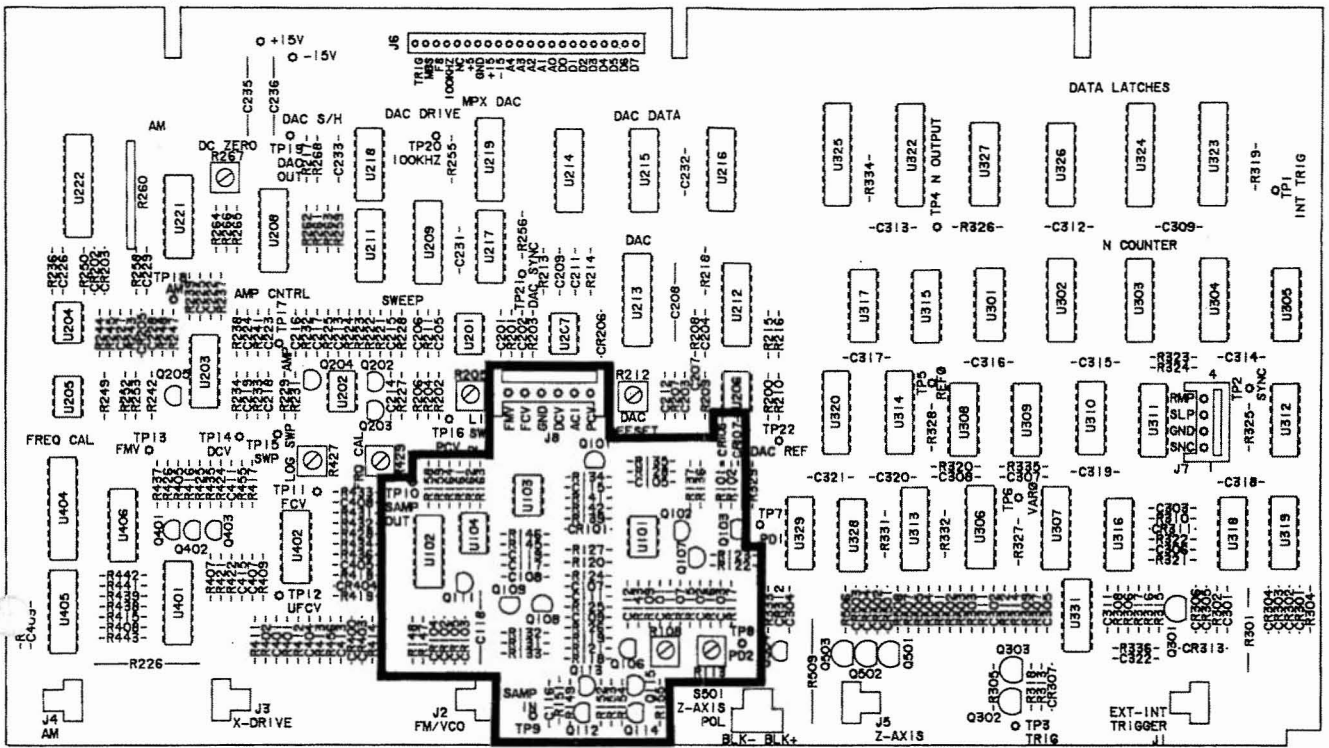


A2(Board Rev B)
03314-66502

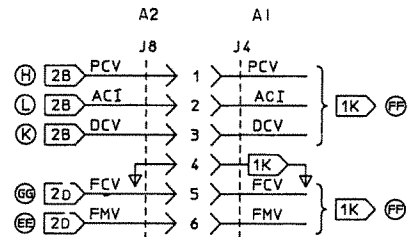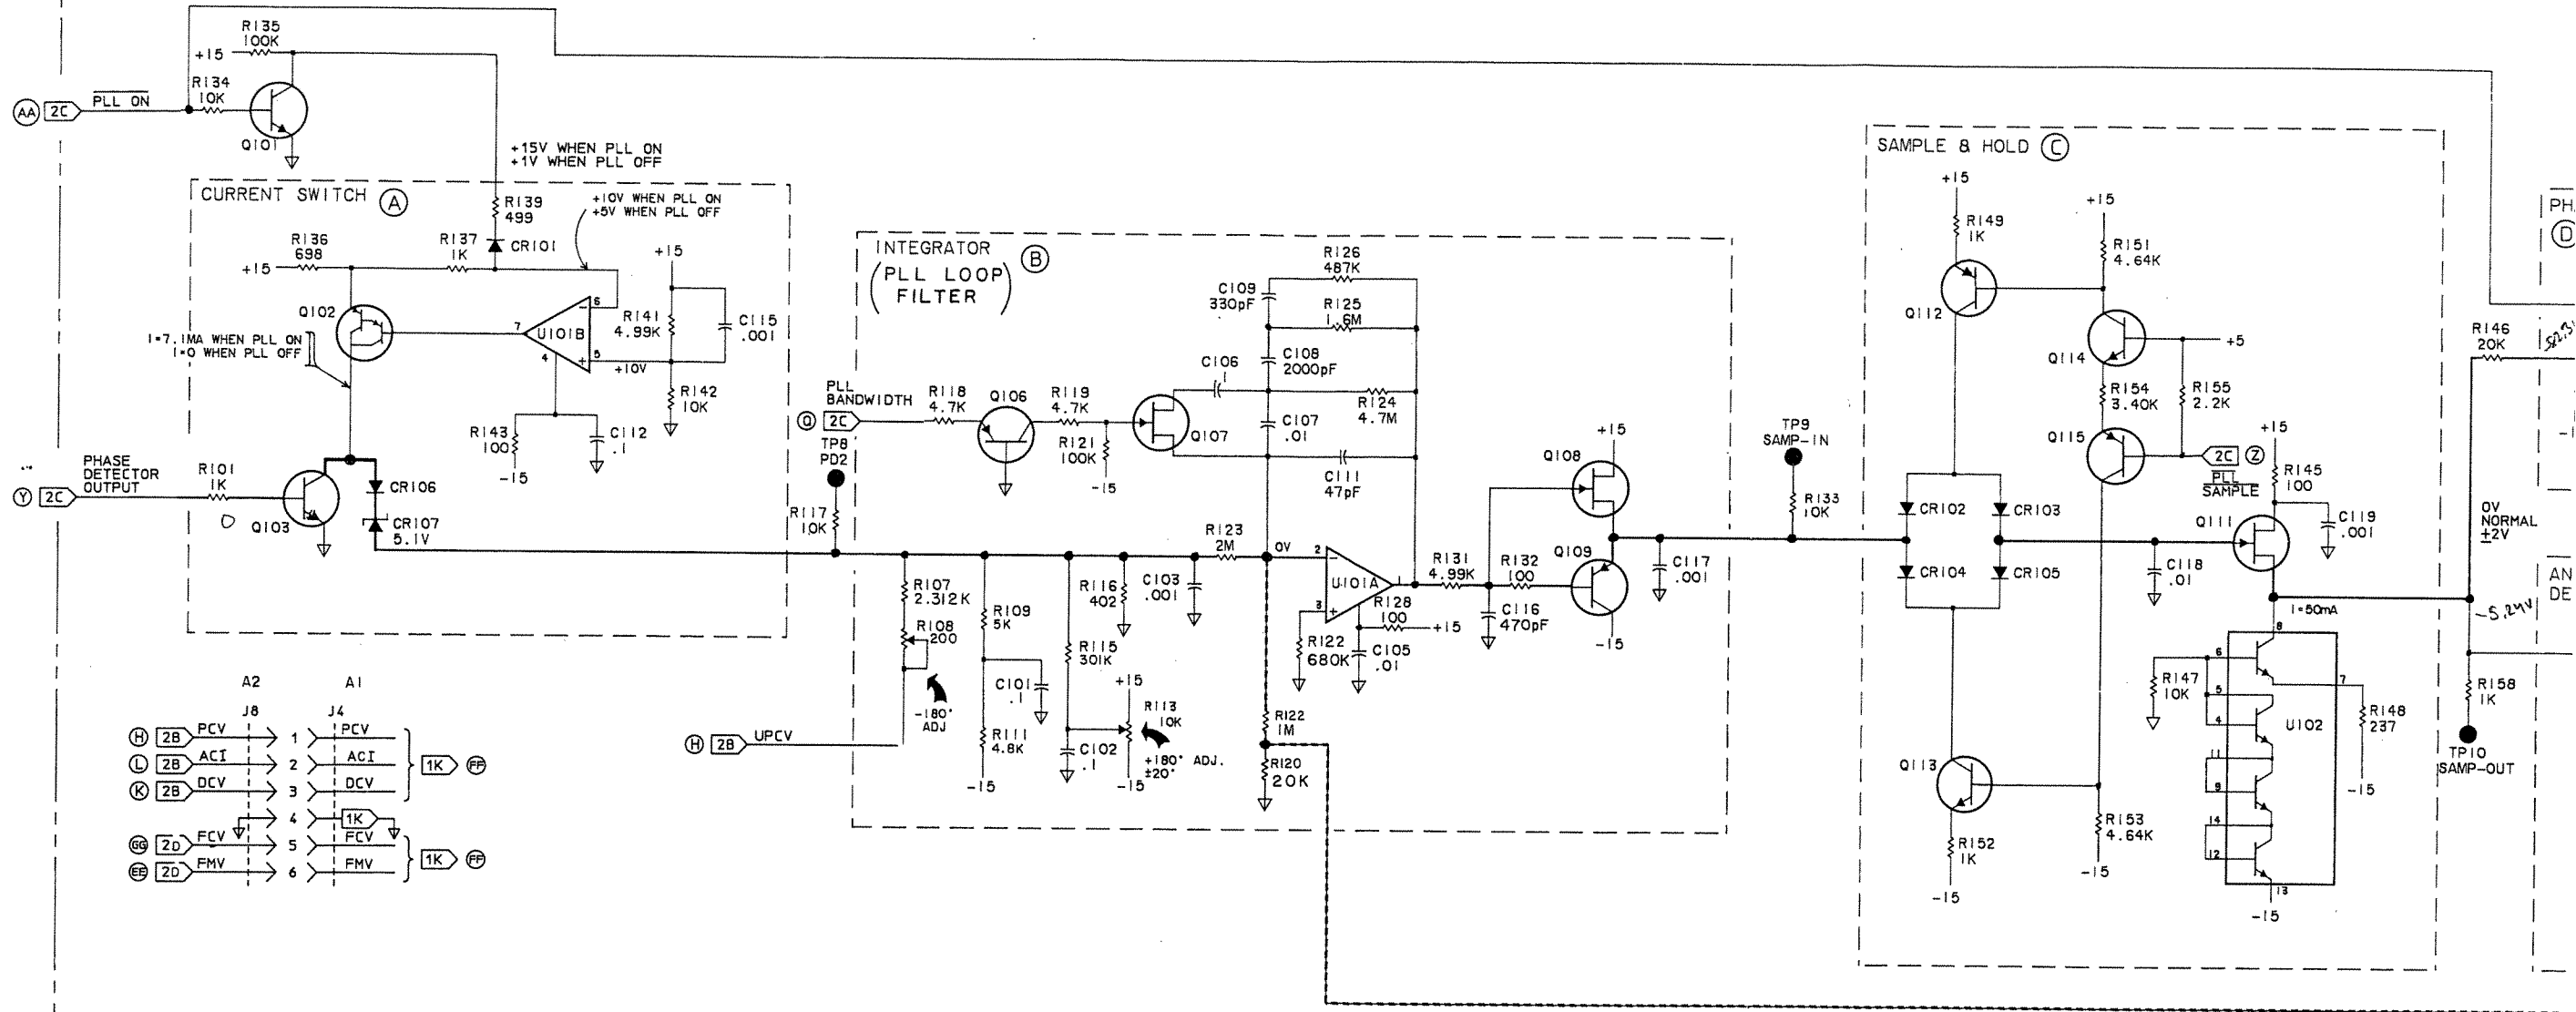


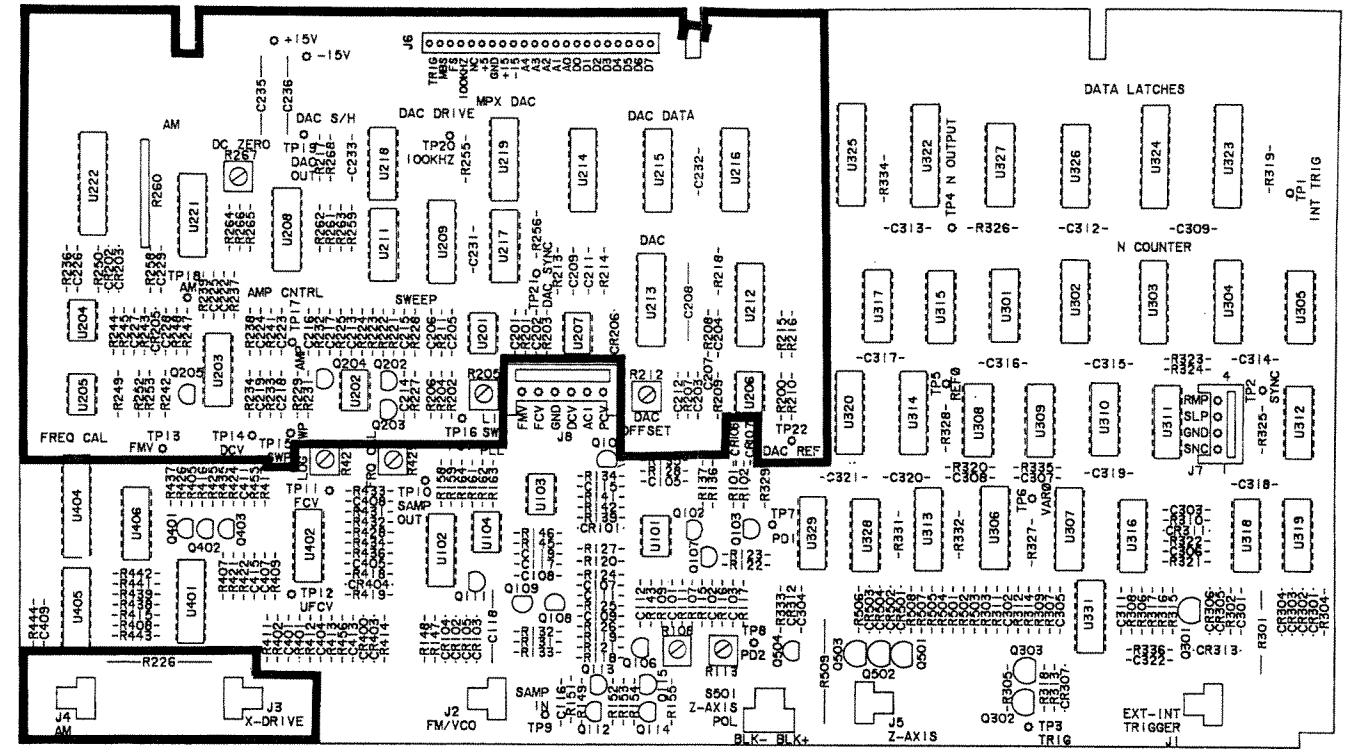
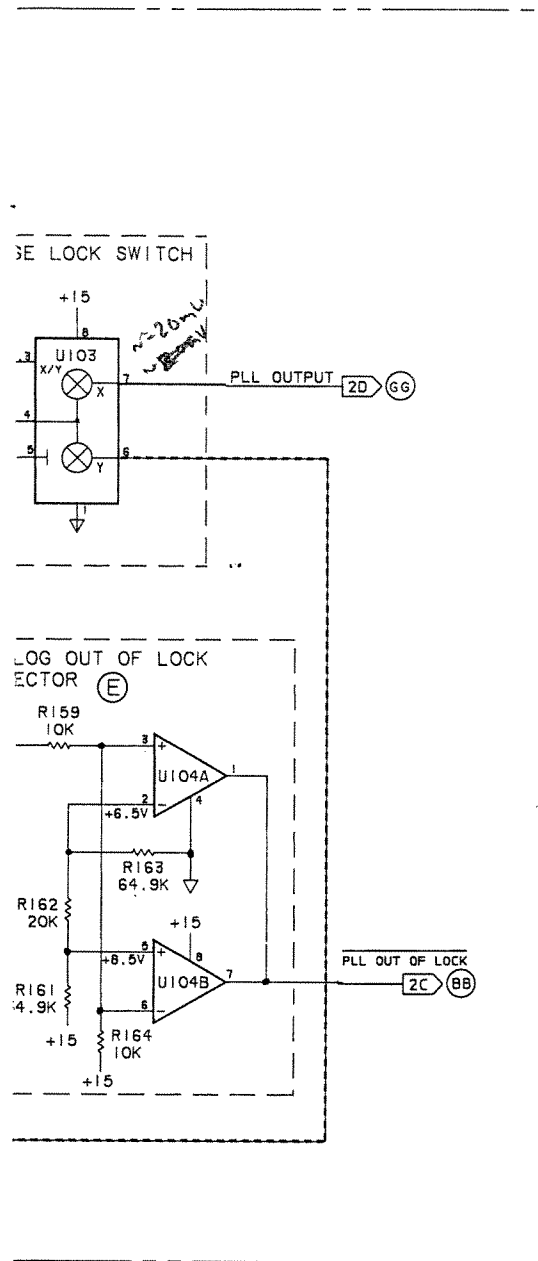


A2(Board Rev B)
03314-66502

A2_A
Figure 8-27 Phase Locked Loop
(analog)
8-63

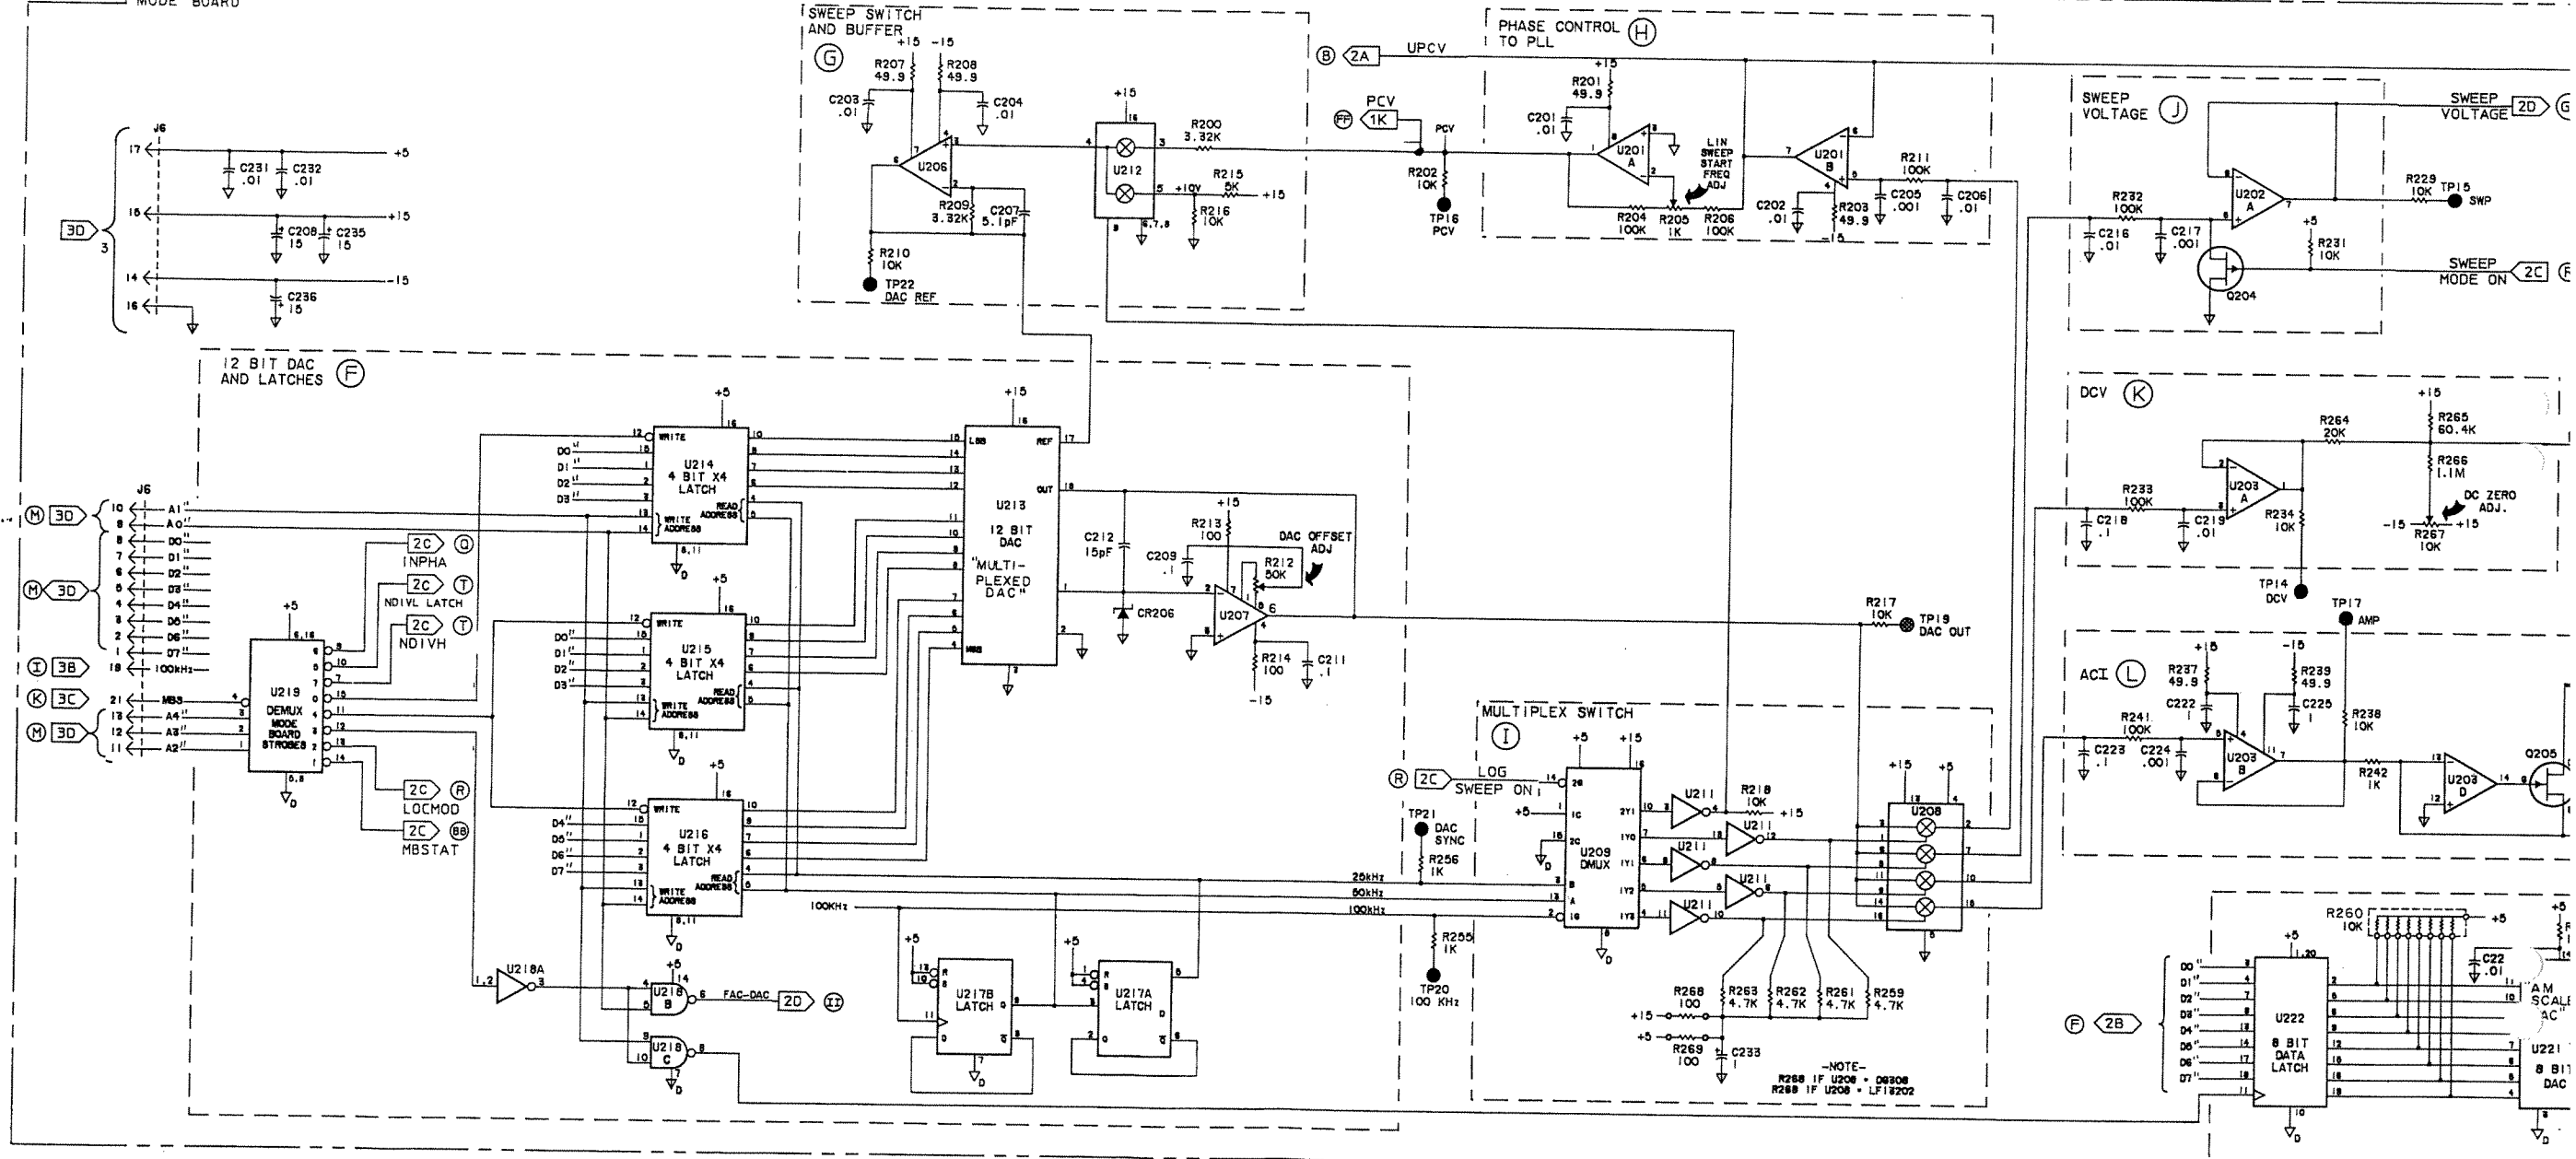

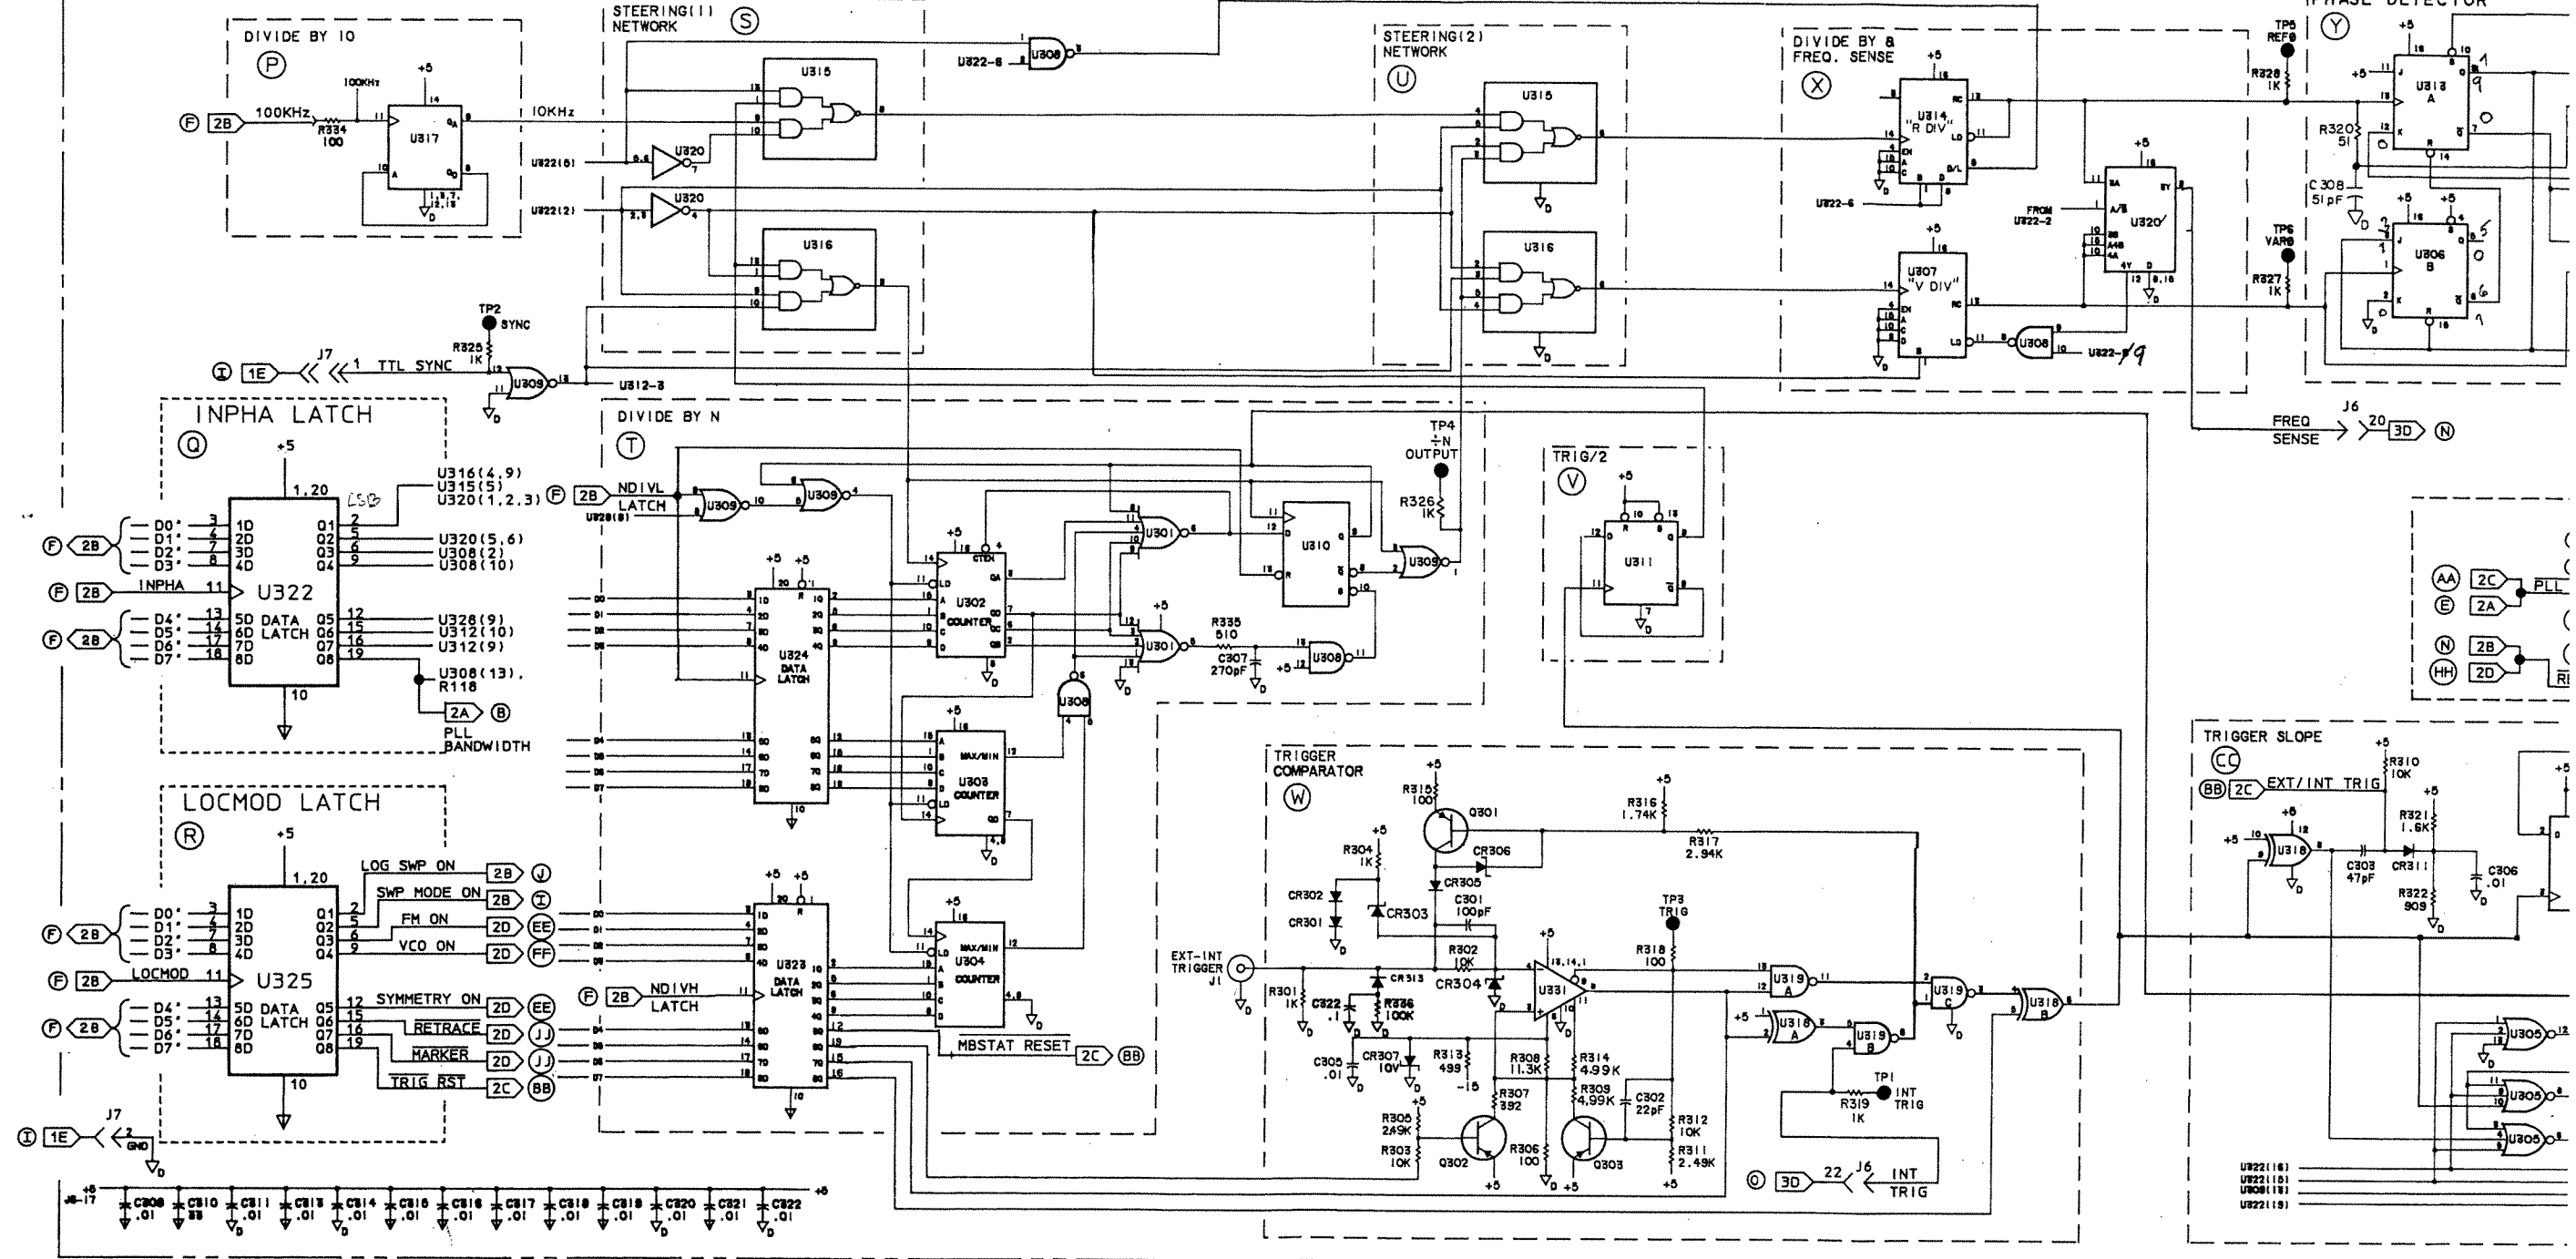


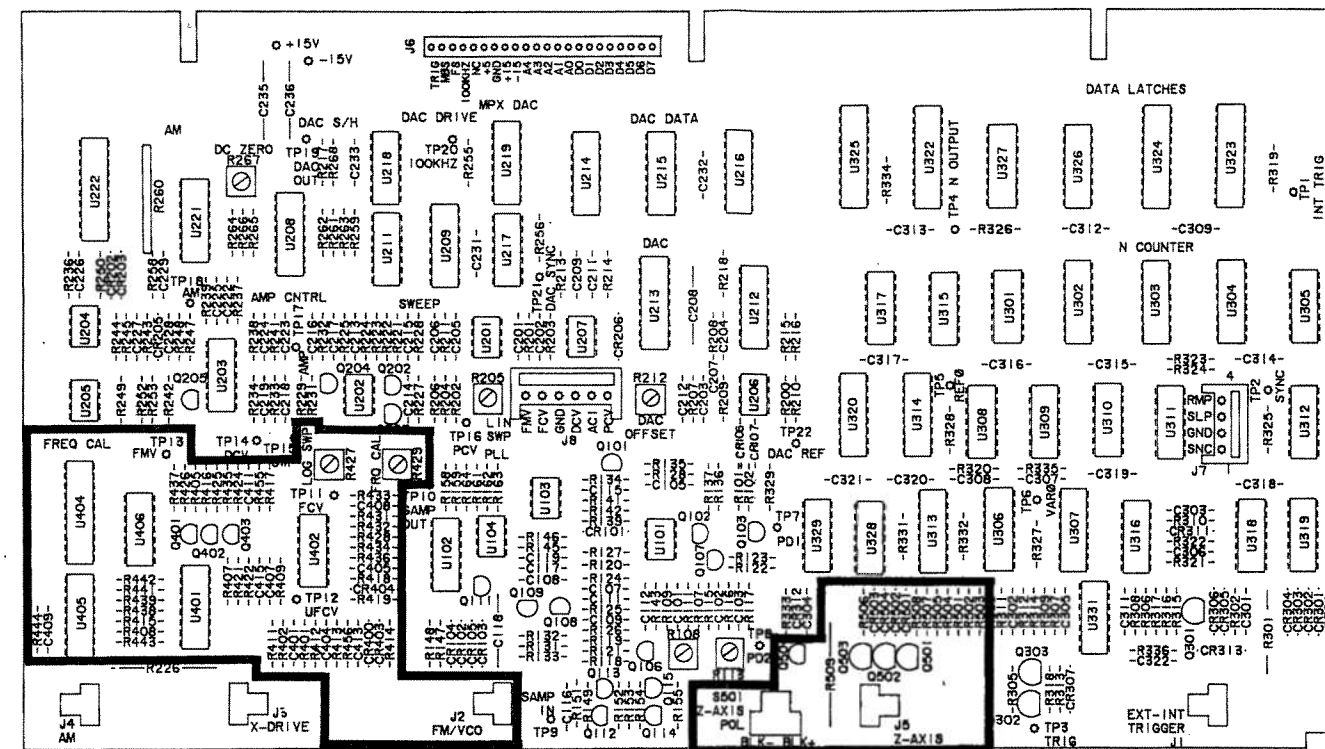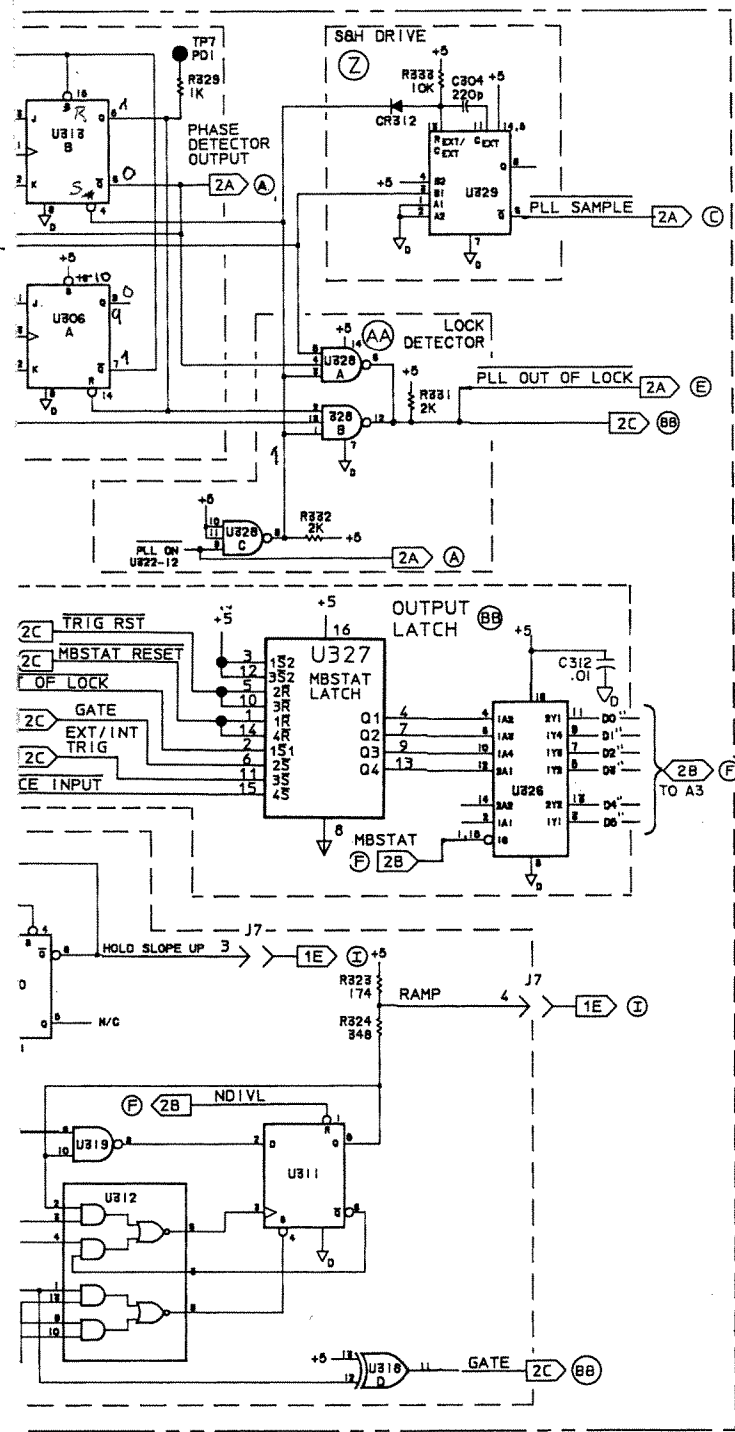

A2(Board Rev B)
03314-66502

A2c


Figure 8-29 Phase Locked Loop and Dividers
(digital)
8-67

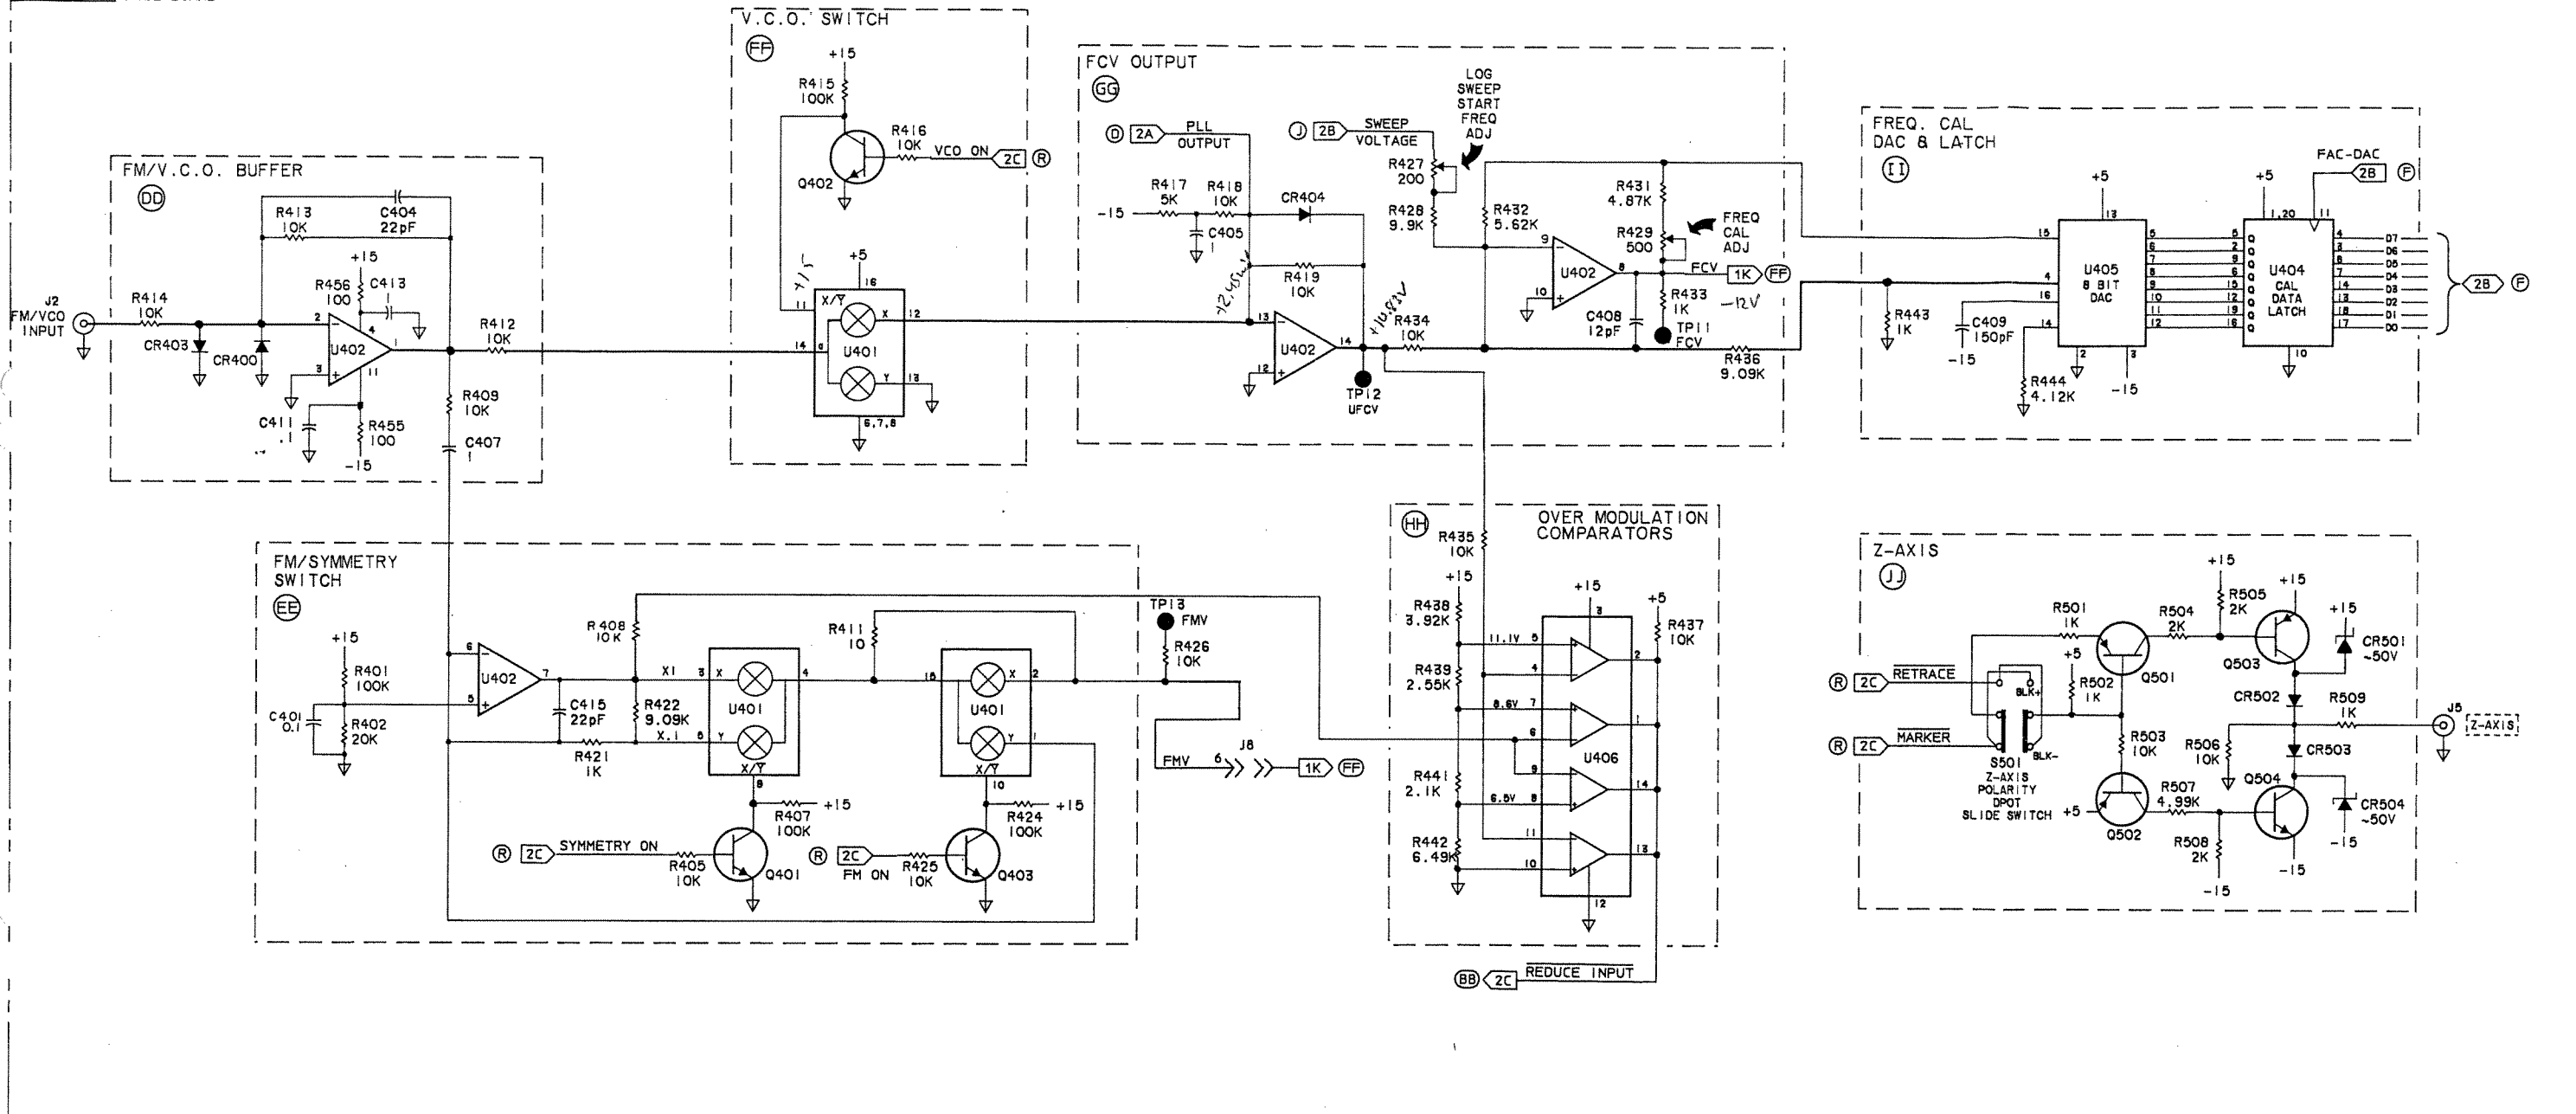

COPYRIGHT © 1982, 1987 BY THE HEWLETT-PACKARD COMPANY


A2_D

Figure 8-30 Frequency Control and Z-Axis Output

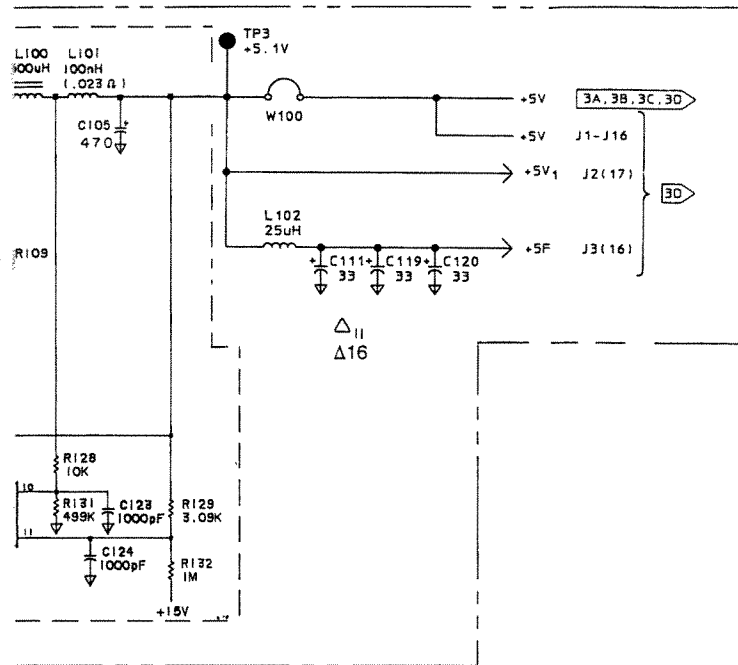


ED TO THE -15 VOLT
 TPUT
 PUT
 WING ORDER,
 O ADJUSTMENT).
 UNLESS OTHERWISE NOTED,
 OTHERWISE NOTED.
 SUPPLY.
 NO THE DUTY CYCLE
 MITED AND HAVE

IV	+5V
IA	4A
A	2A

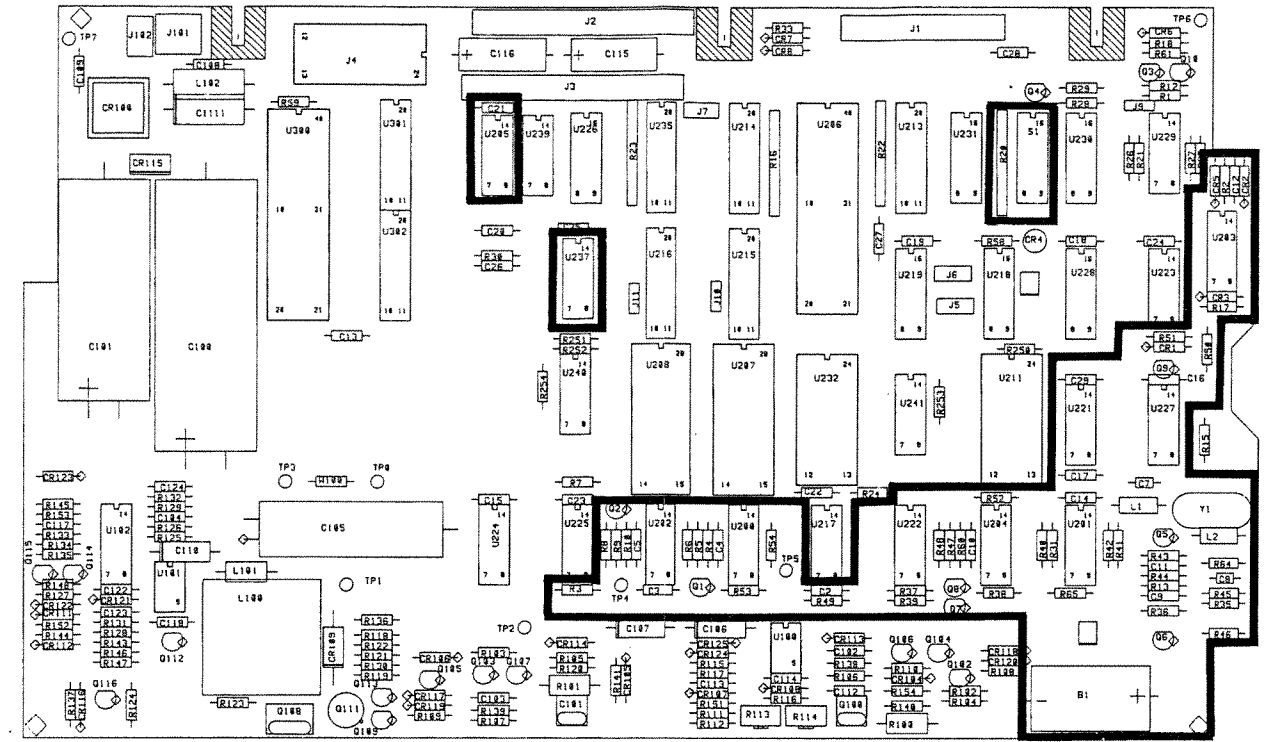


A3(Board Rev C)
03314-66503

A3A
Figure 8-31 Power Supplies
8-71

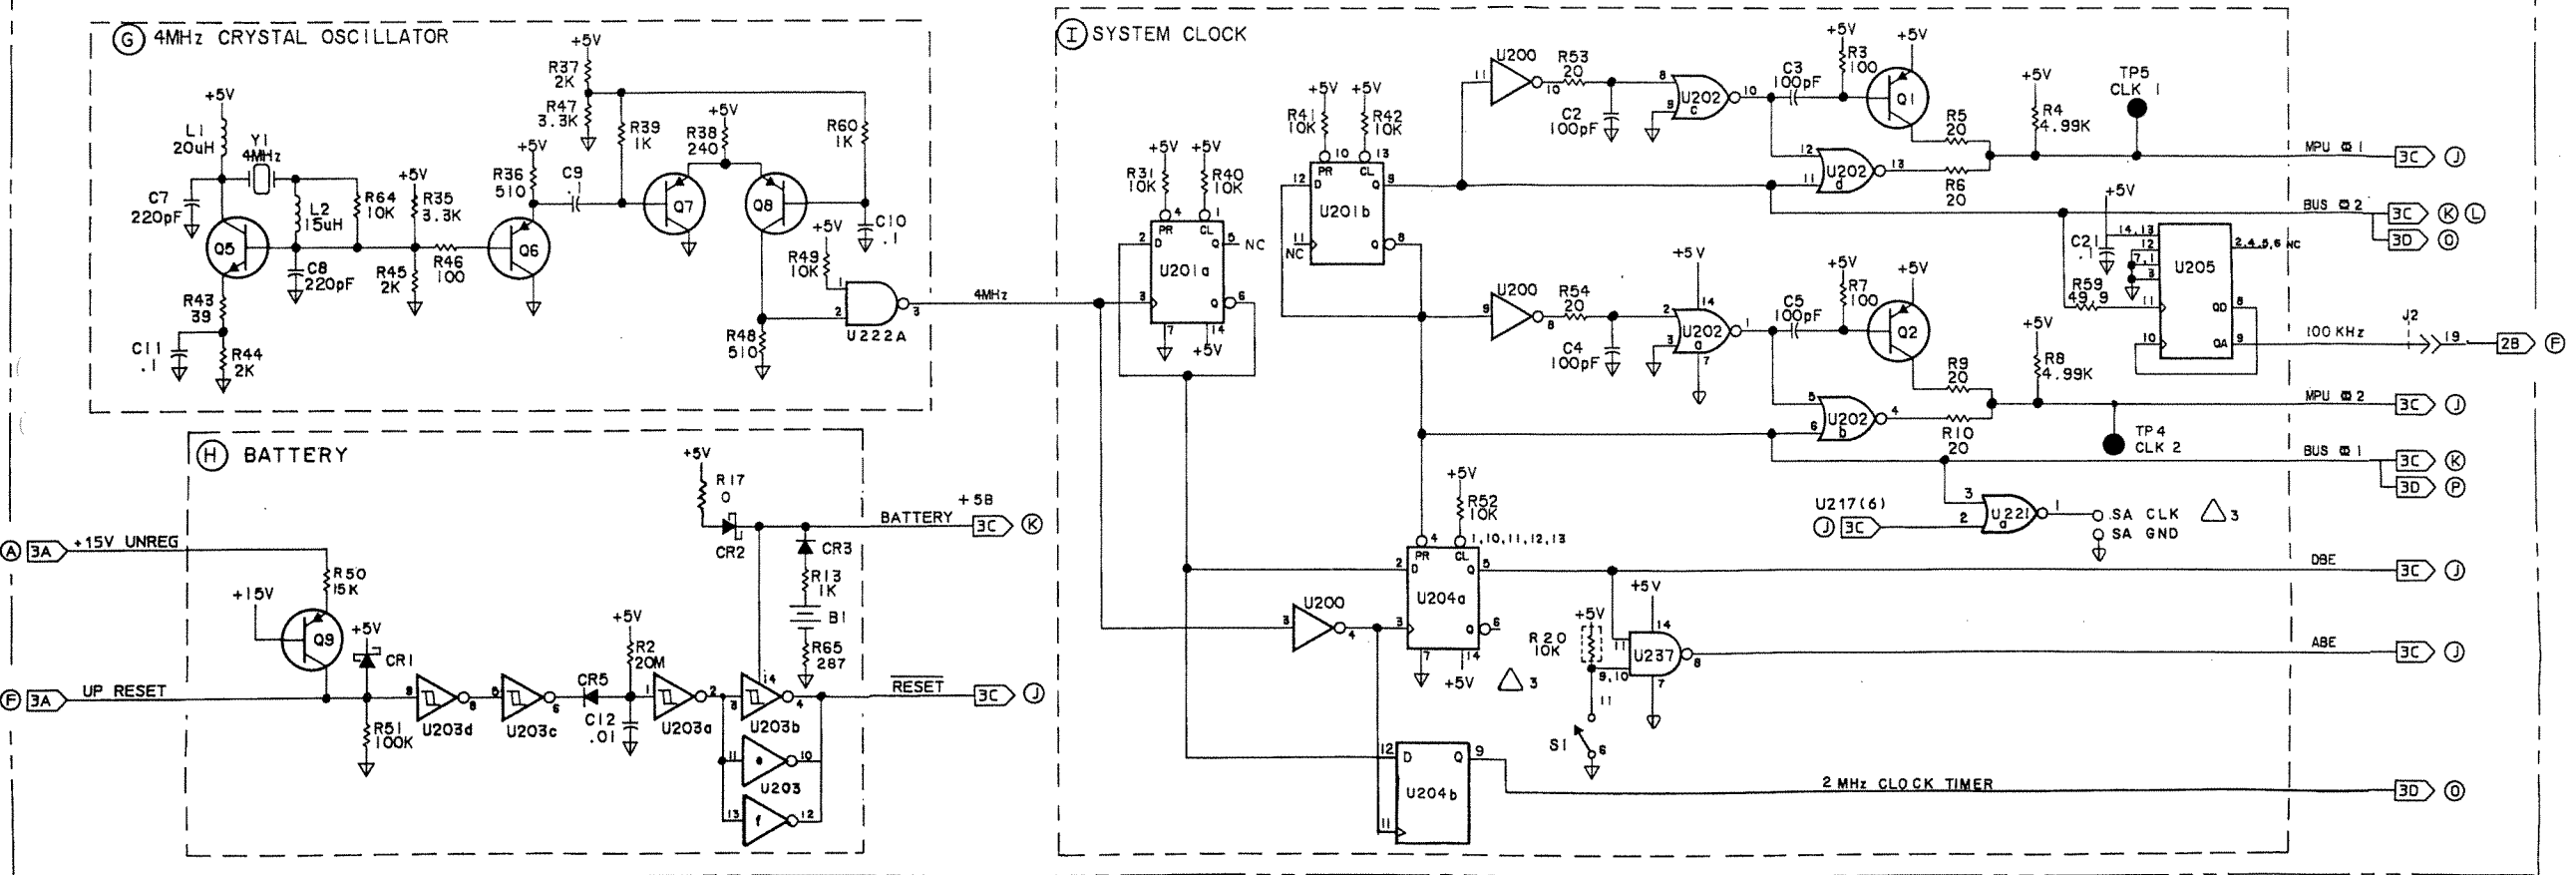


COPYRIGHT © 1982, 1987 BY THE HEWLETT-PACKARD COMPANY


A3_B
Figure 8-32 Clock Circuits
8-73

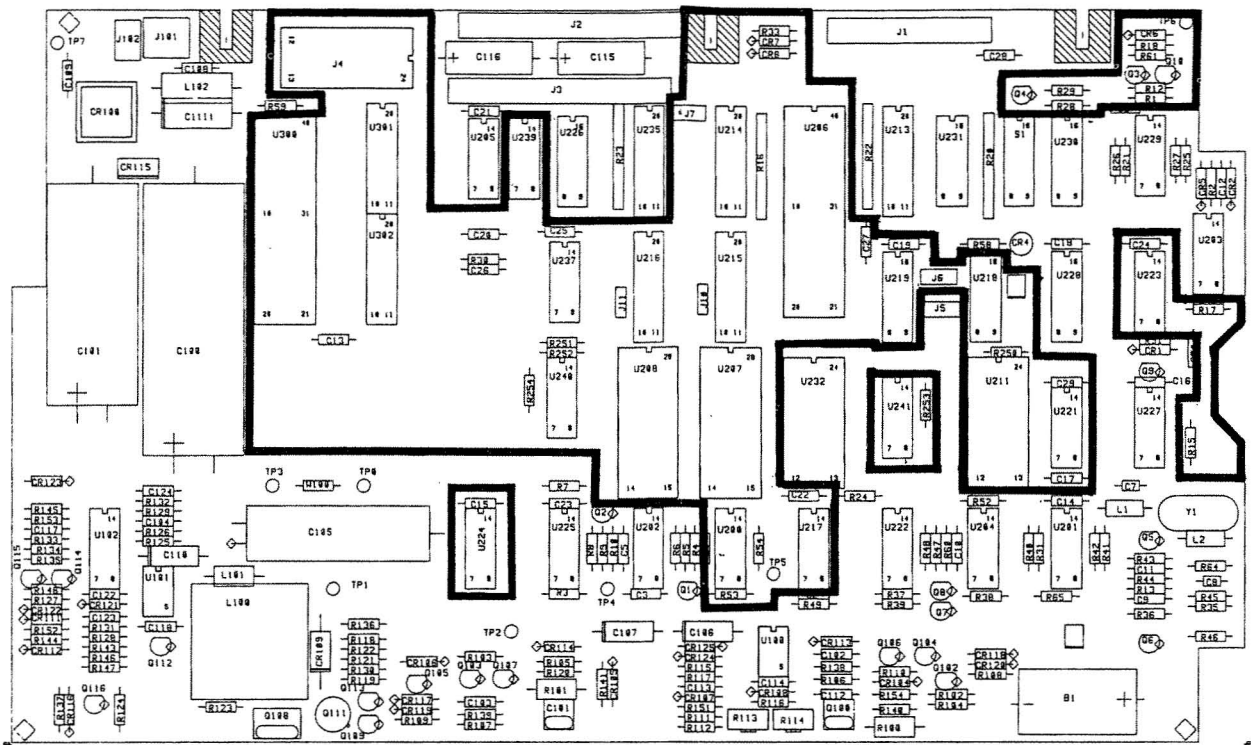



A3(Board Rev C)
03314-66502

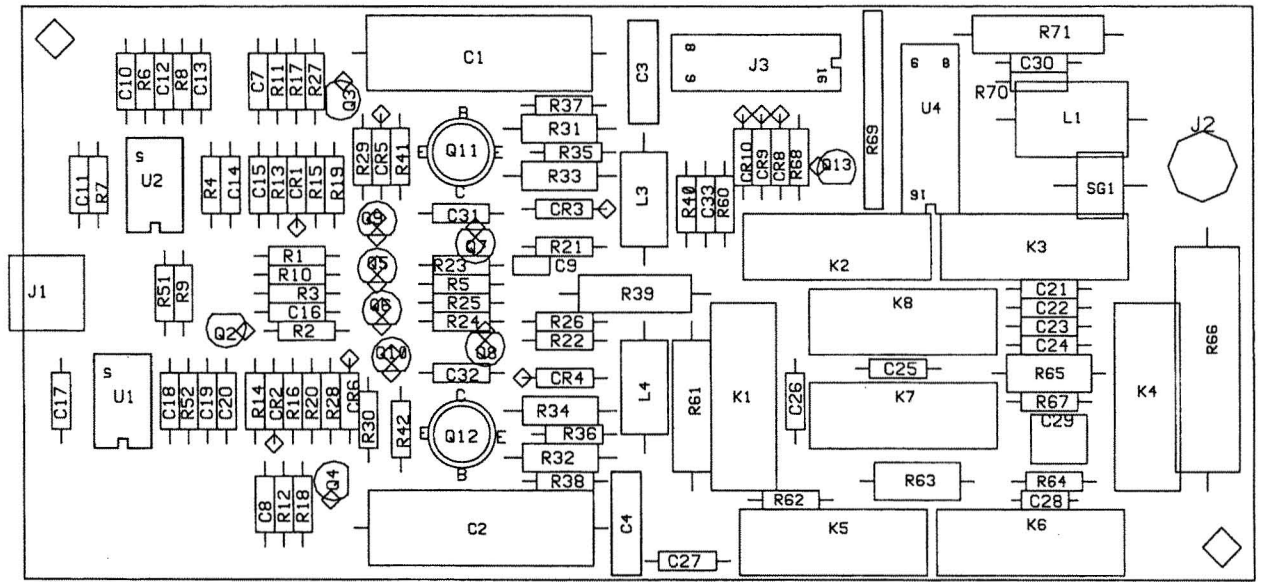

A8(Board Rev D)
03314-66508

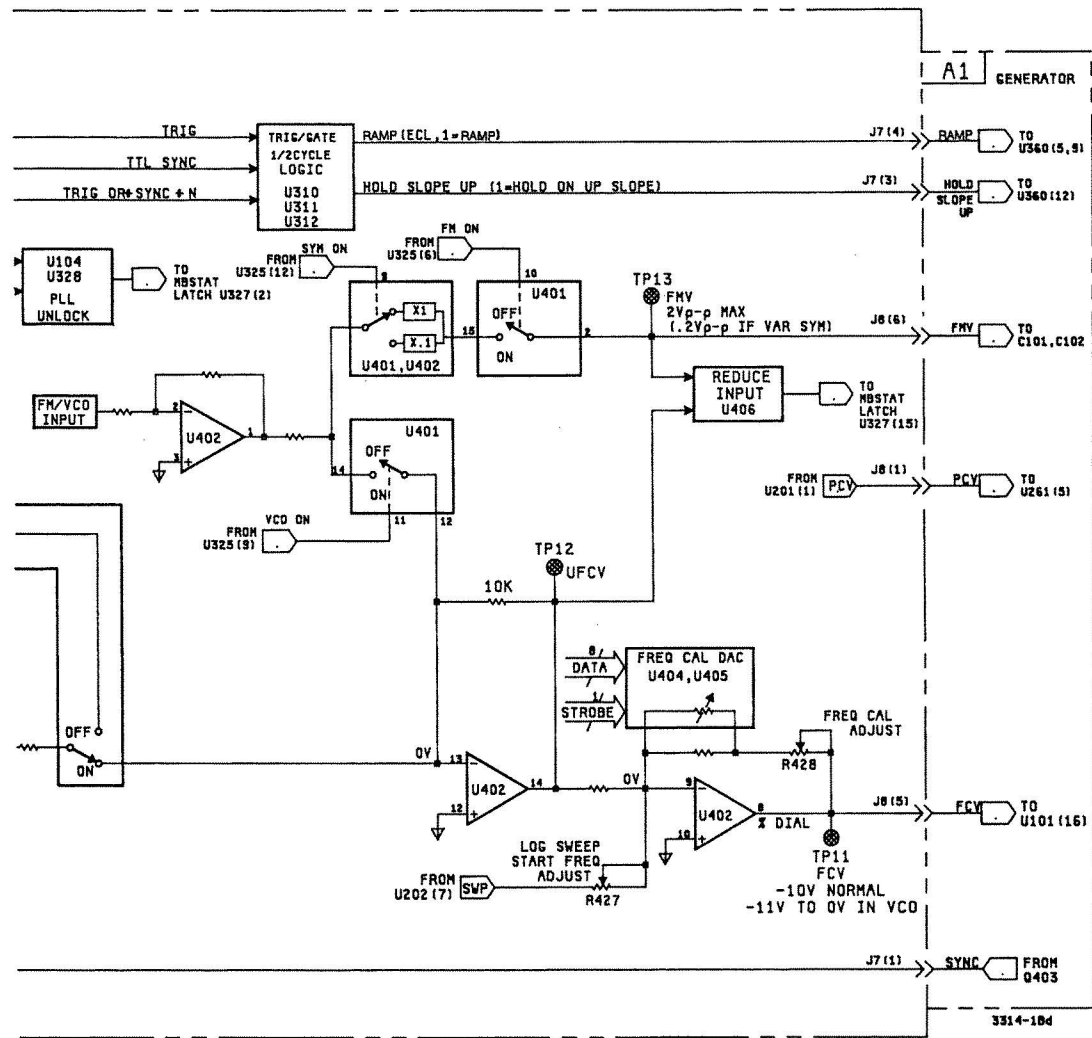

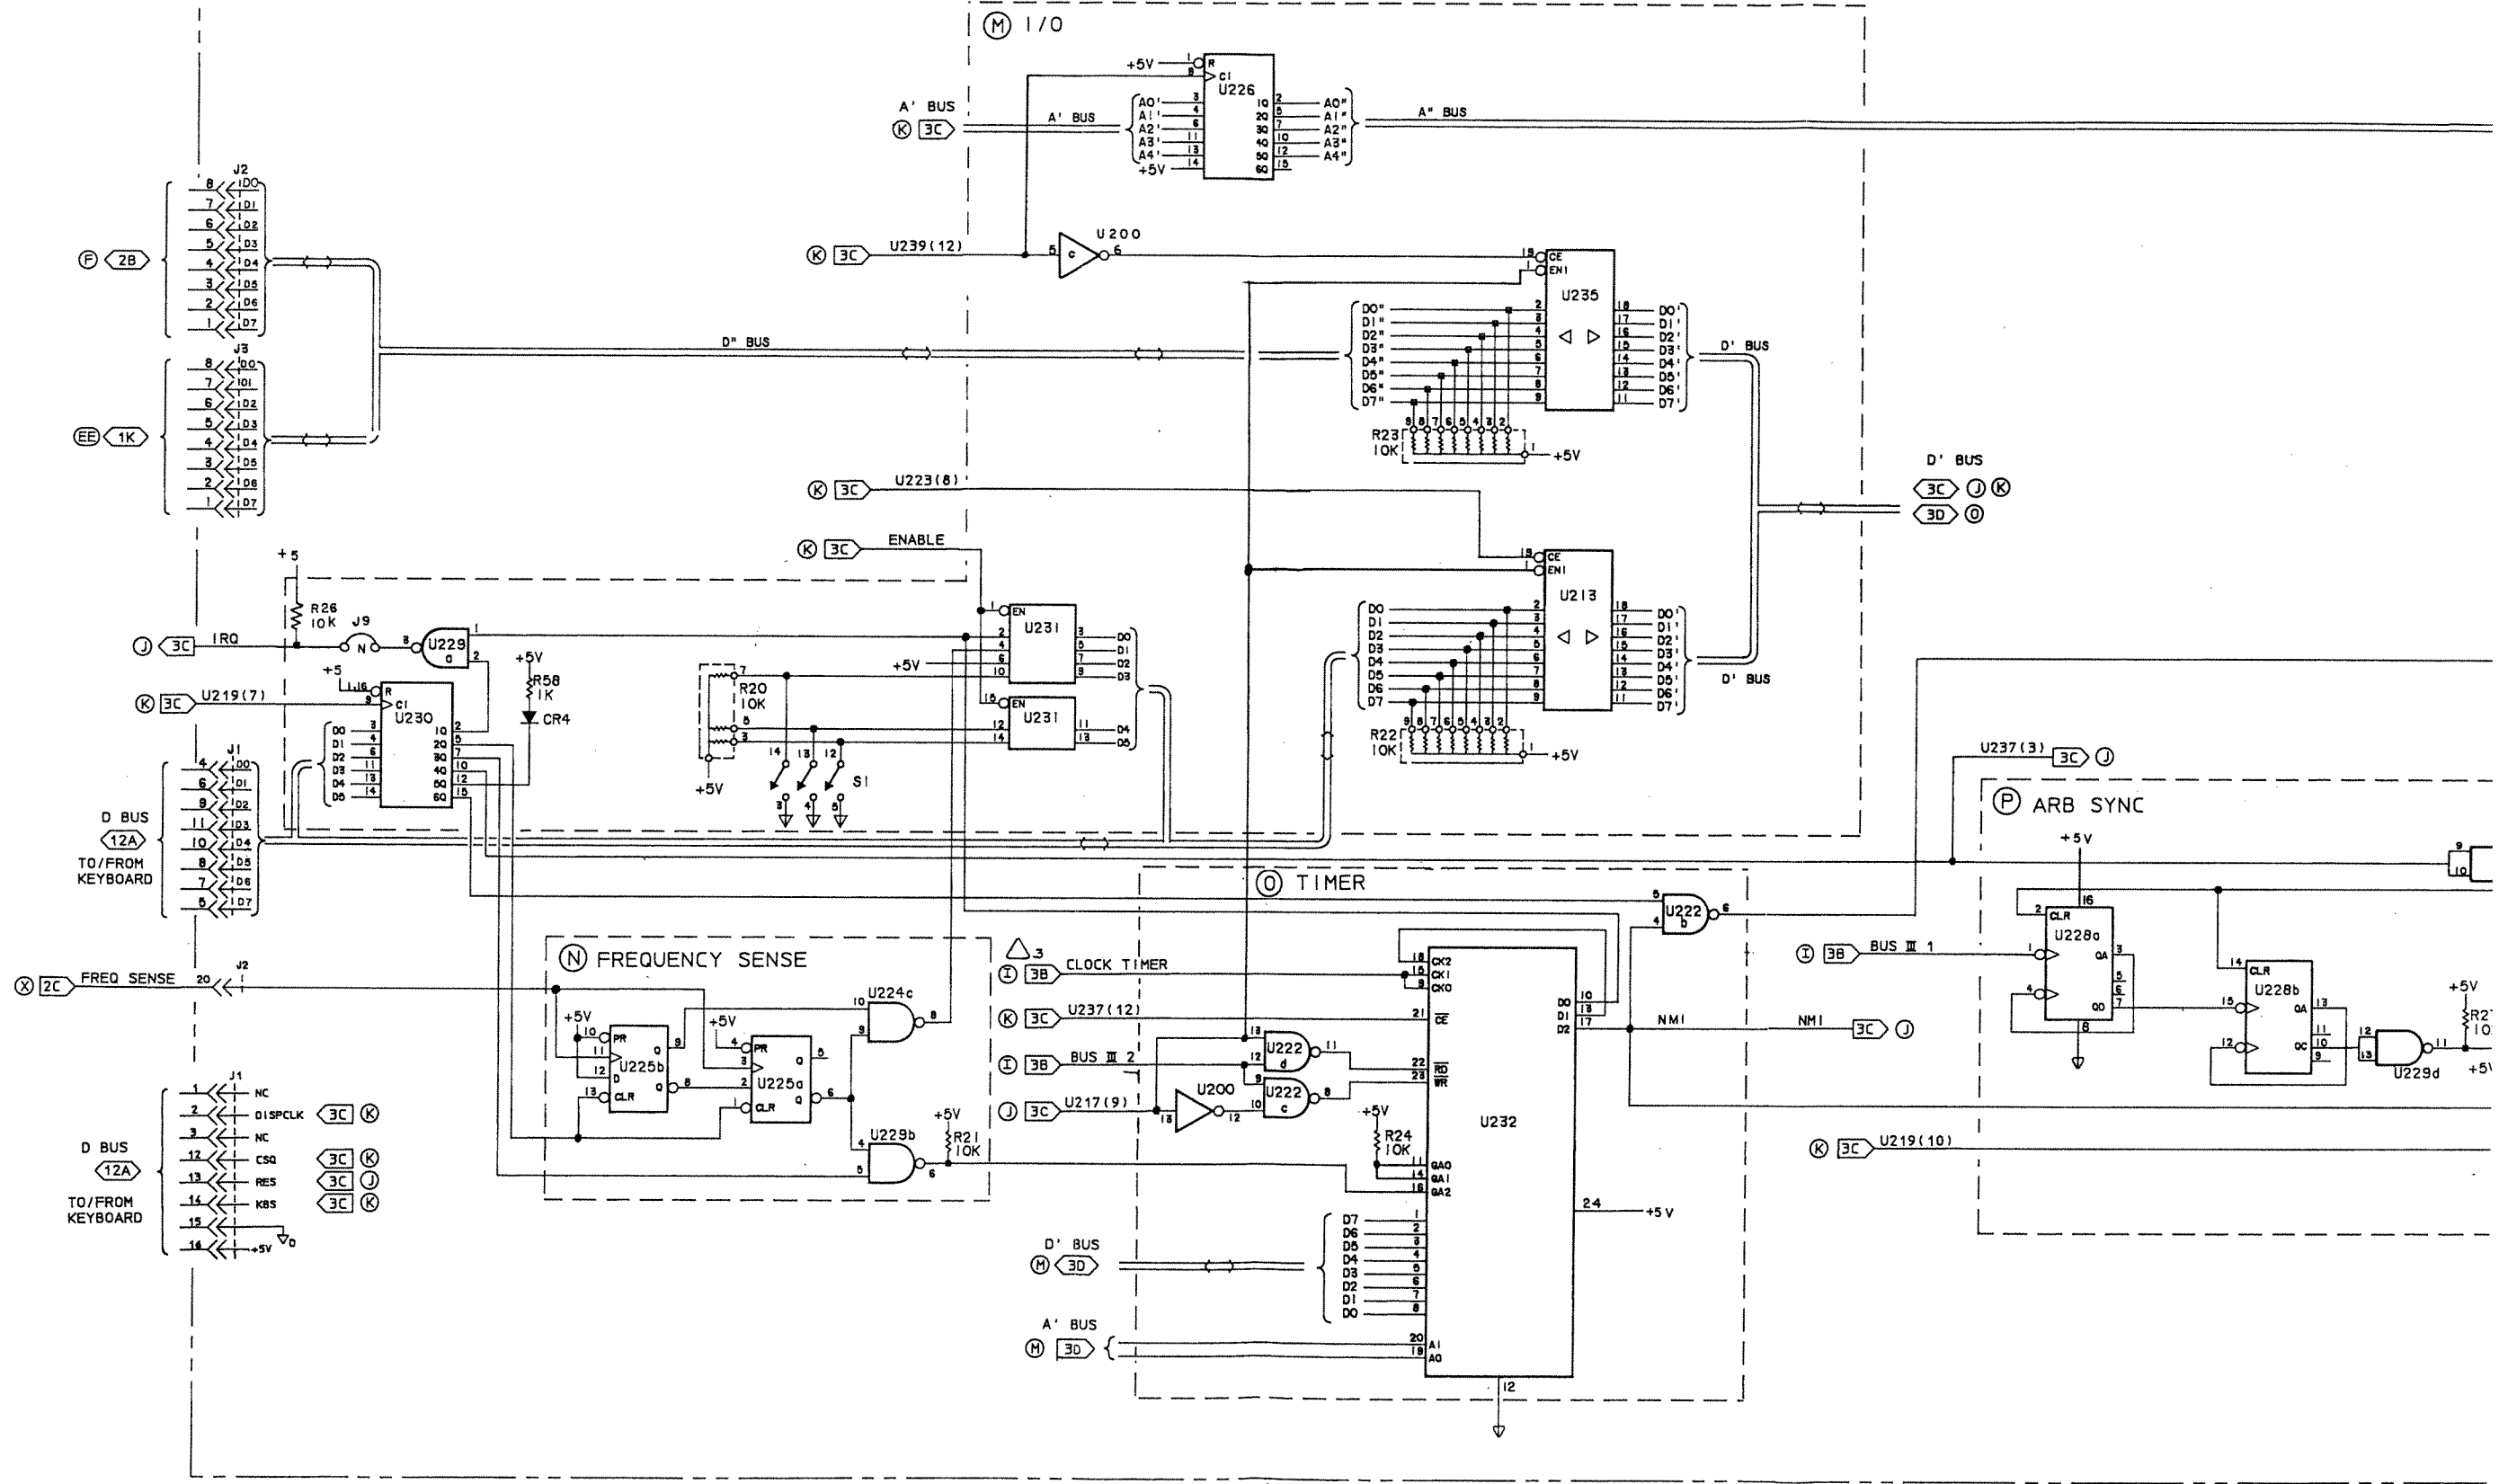

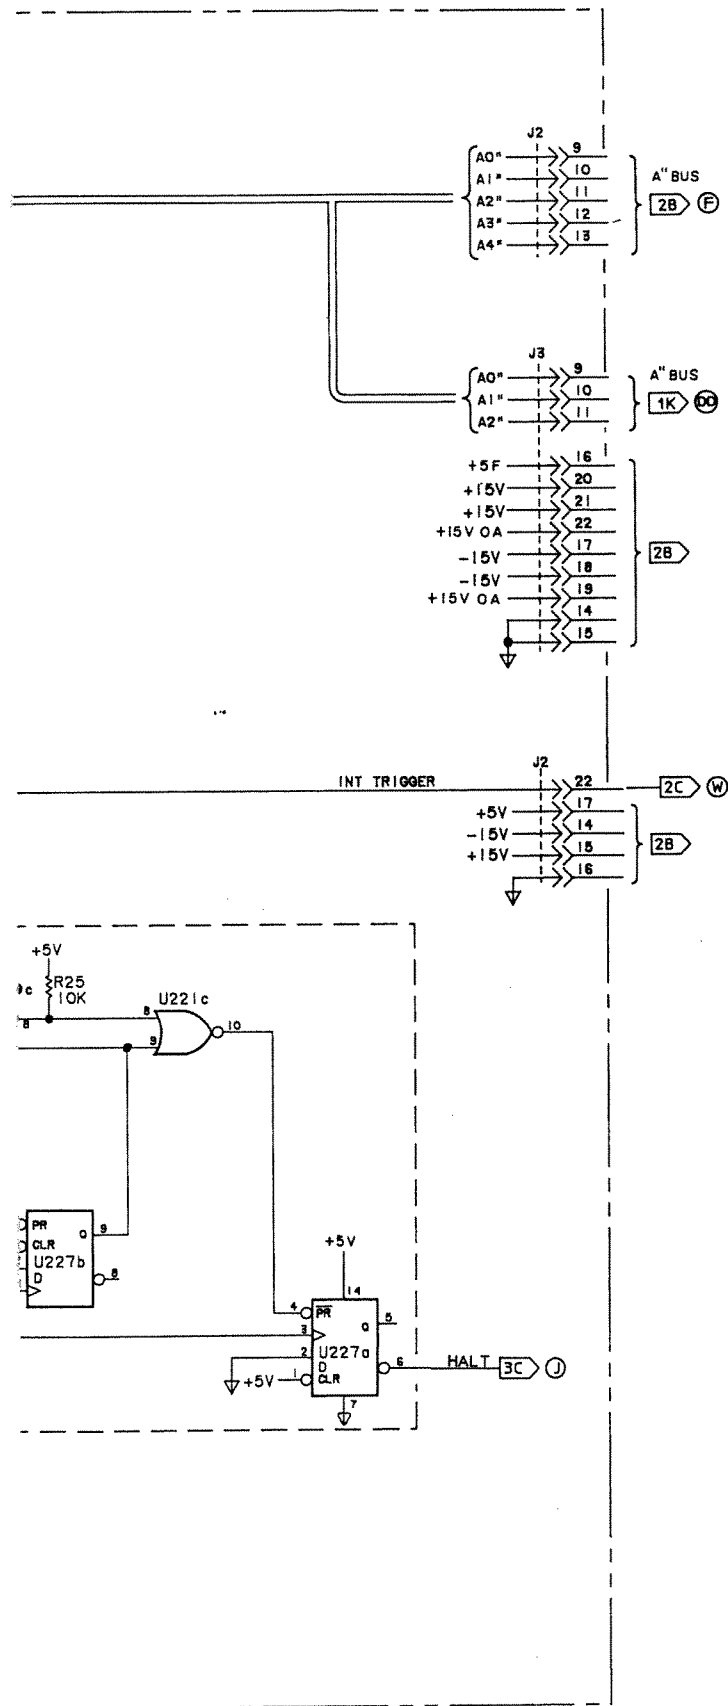


© 1982, 1987 BY THE HEWLETT-PACKARD COMPANY

A3D


Figure 8-34 Timer and IO

8-77

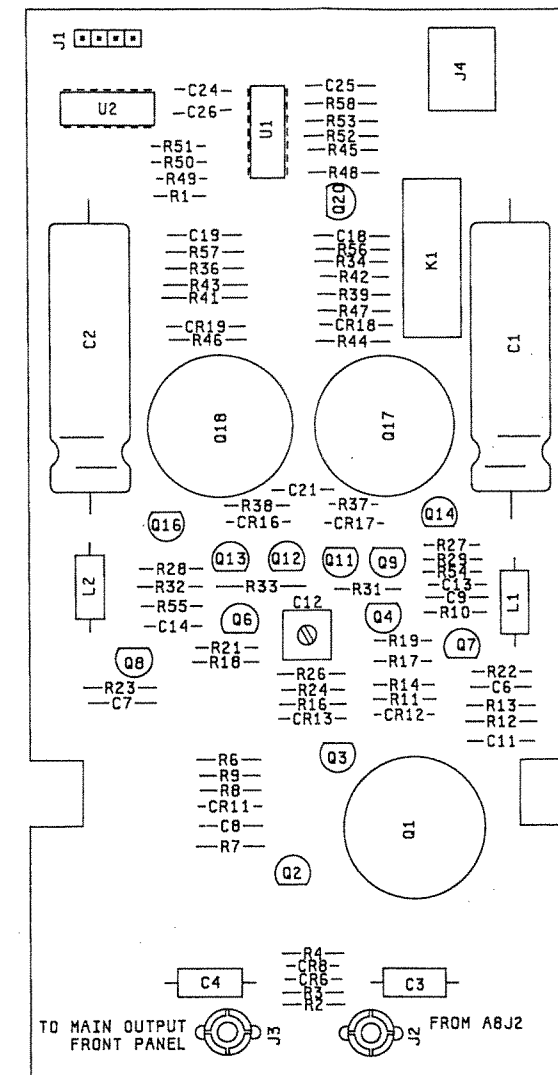

3314 5C


**A5(Board Rev A)
03314-66505**

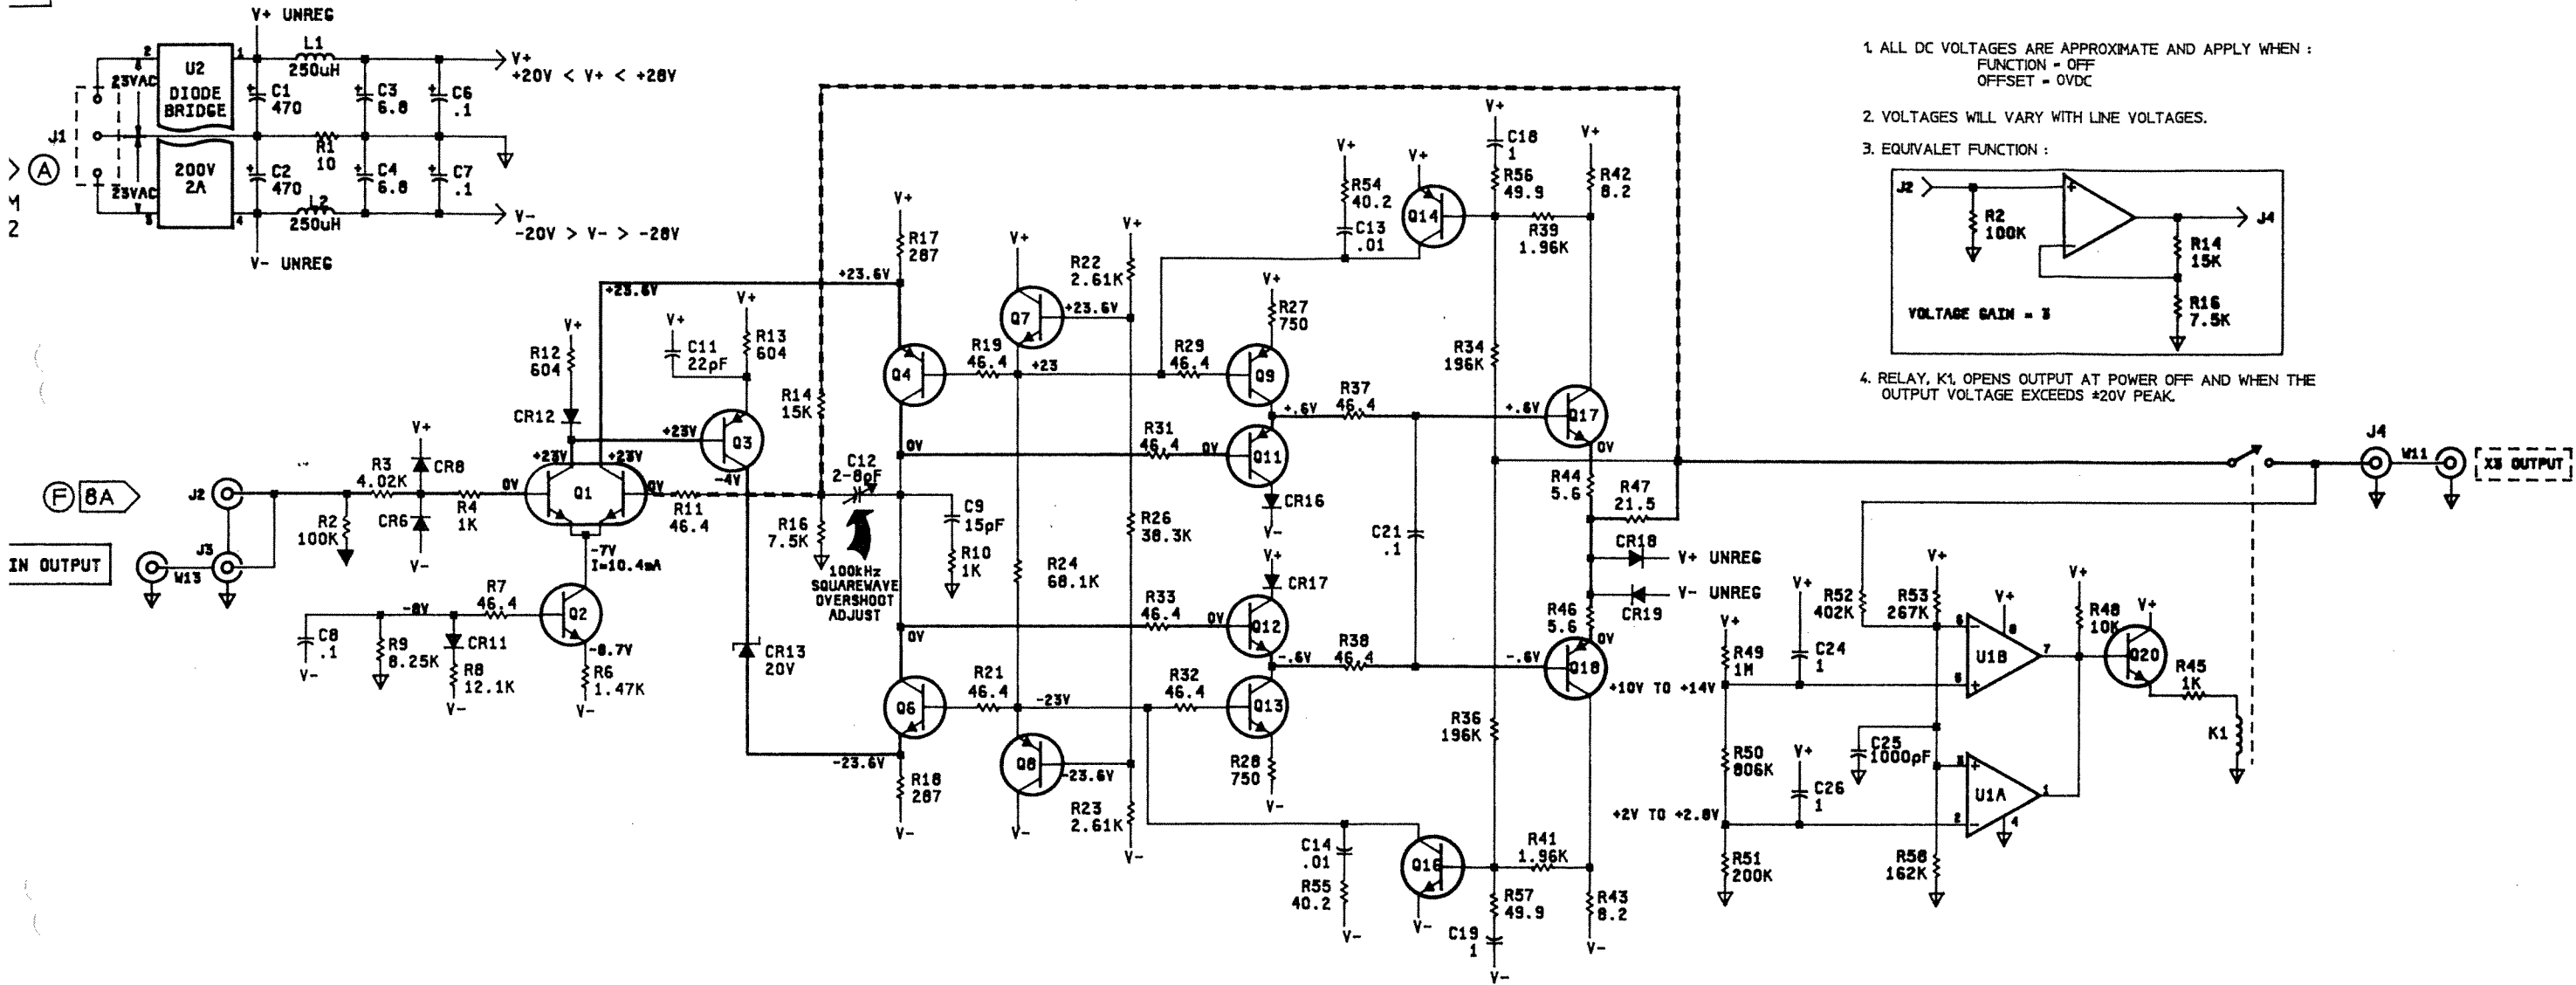


1. ALL DC VOLTAGES ARE APPROXIMATE AND APPLY WHEN :
FUNCTION - OFF
OFFSET - OVDC

2. VOLTAGES WILL VARY WITH LINE VOLTAGES.







3. EQUIVALENT FUNCTION :

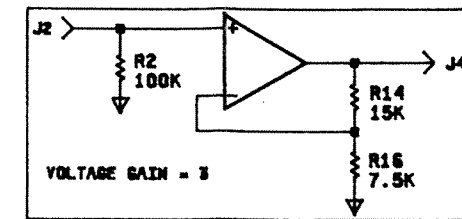

4. RELAY, K1, OPENS OUTPUT AT POWER OFF AND WHEN THE OUTPUT VOLTAGE EXCEEDS ±20V PEAK.

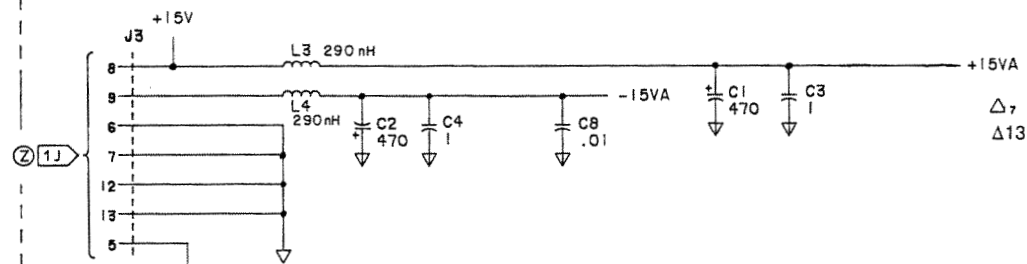

RANGE	ATTENUATION 1 (DB)	RELAYS CLOSED
10V	0	K2, K3
1V	20	K1, K4, K5, K8
0.1V	40	K1, K4, K6, K7
0.01V	80	K1, K4, K7, K8

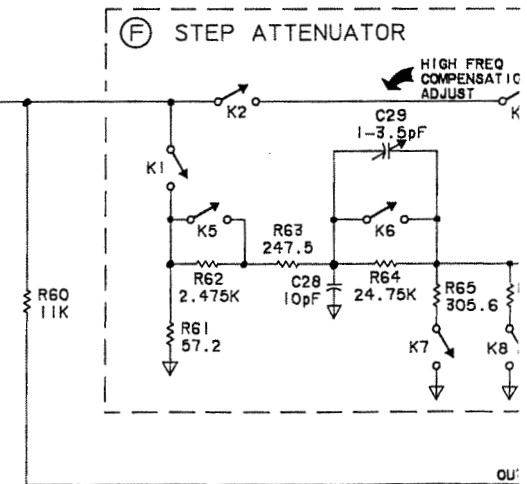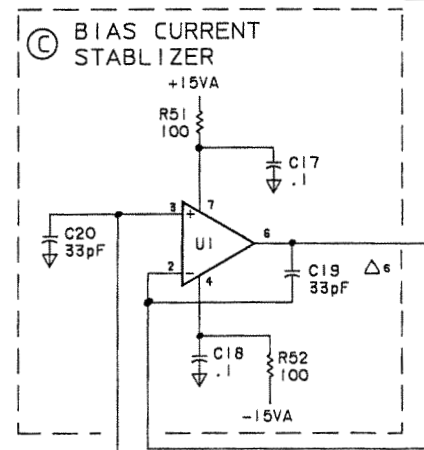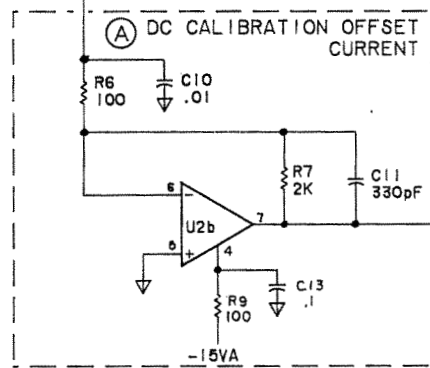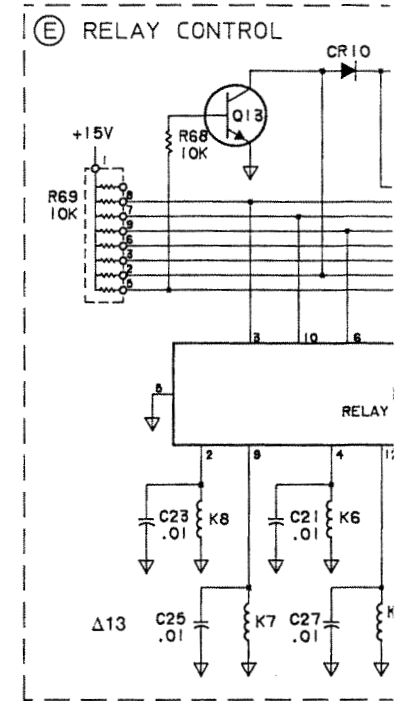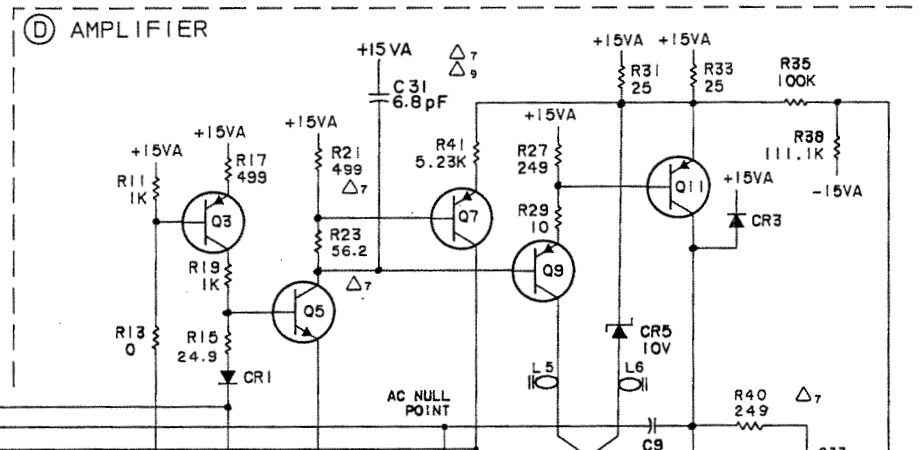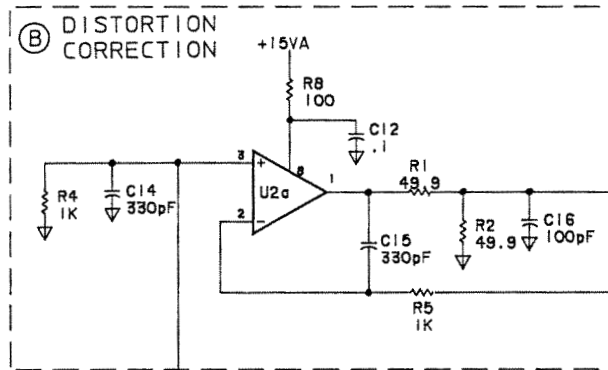



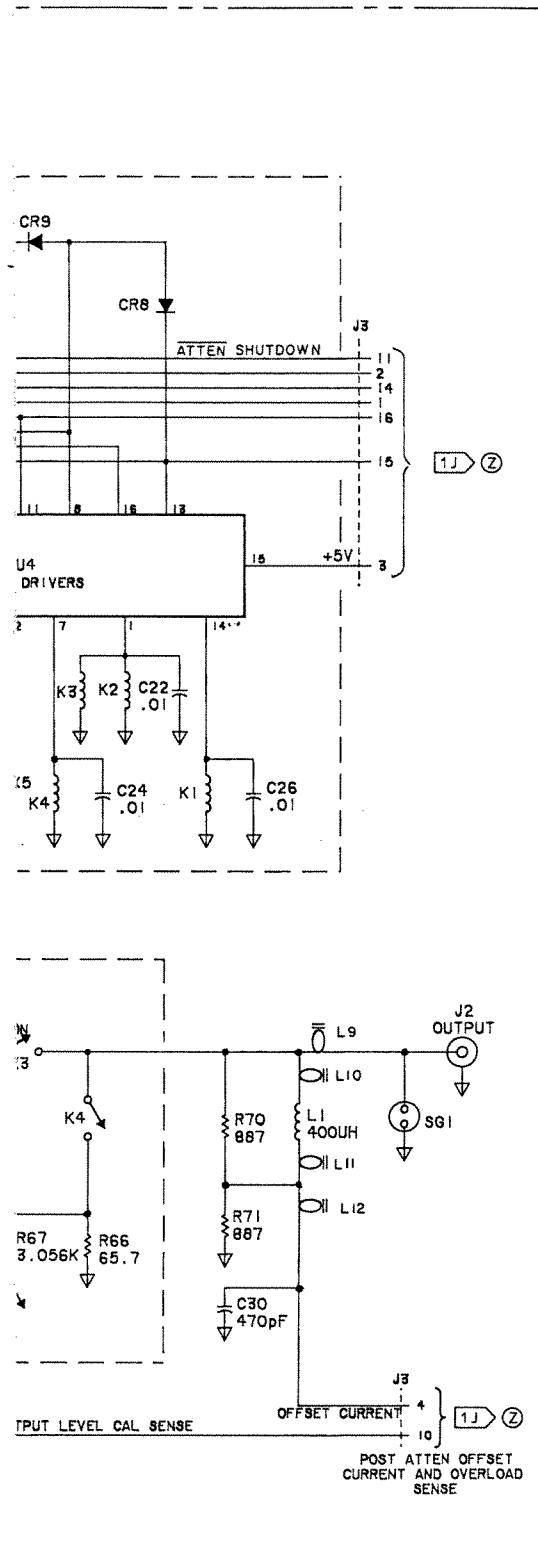


Figure 8-36 Output Amplifier and Step Attenuator

A8A

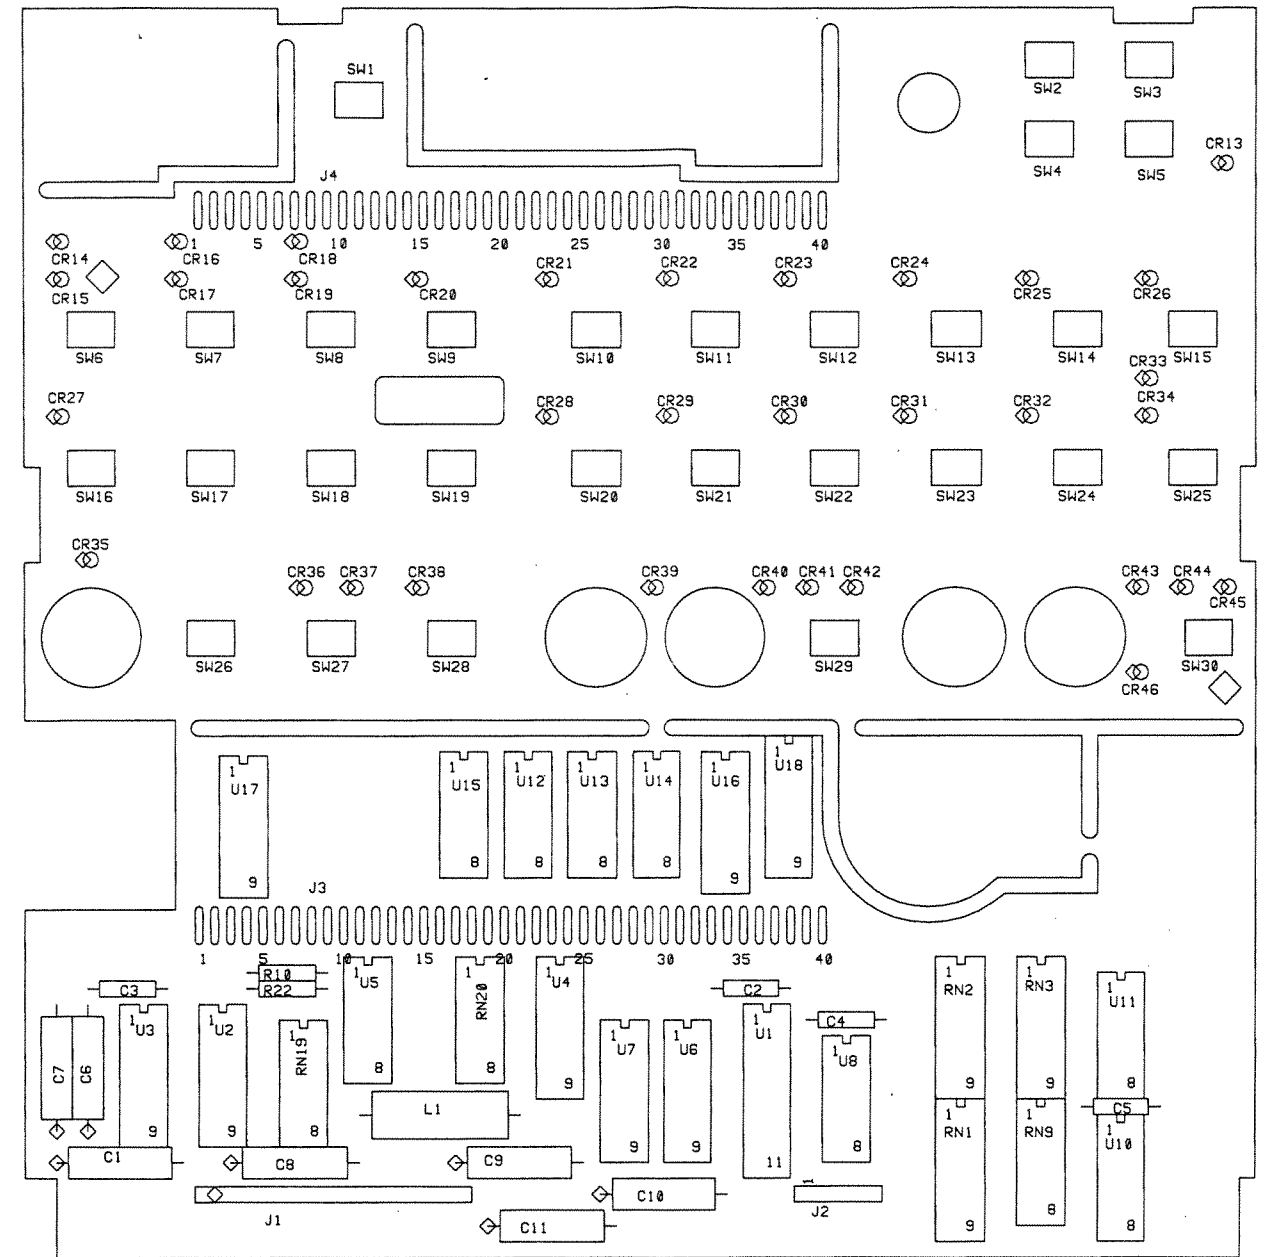

**A10(Board Rev A)
03314-66510**

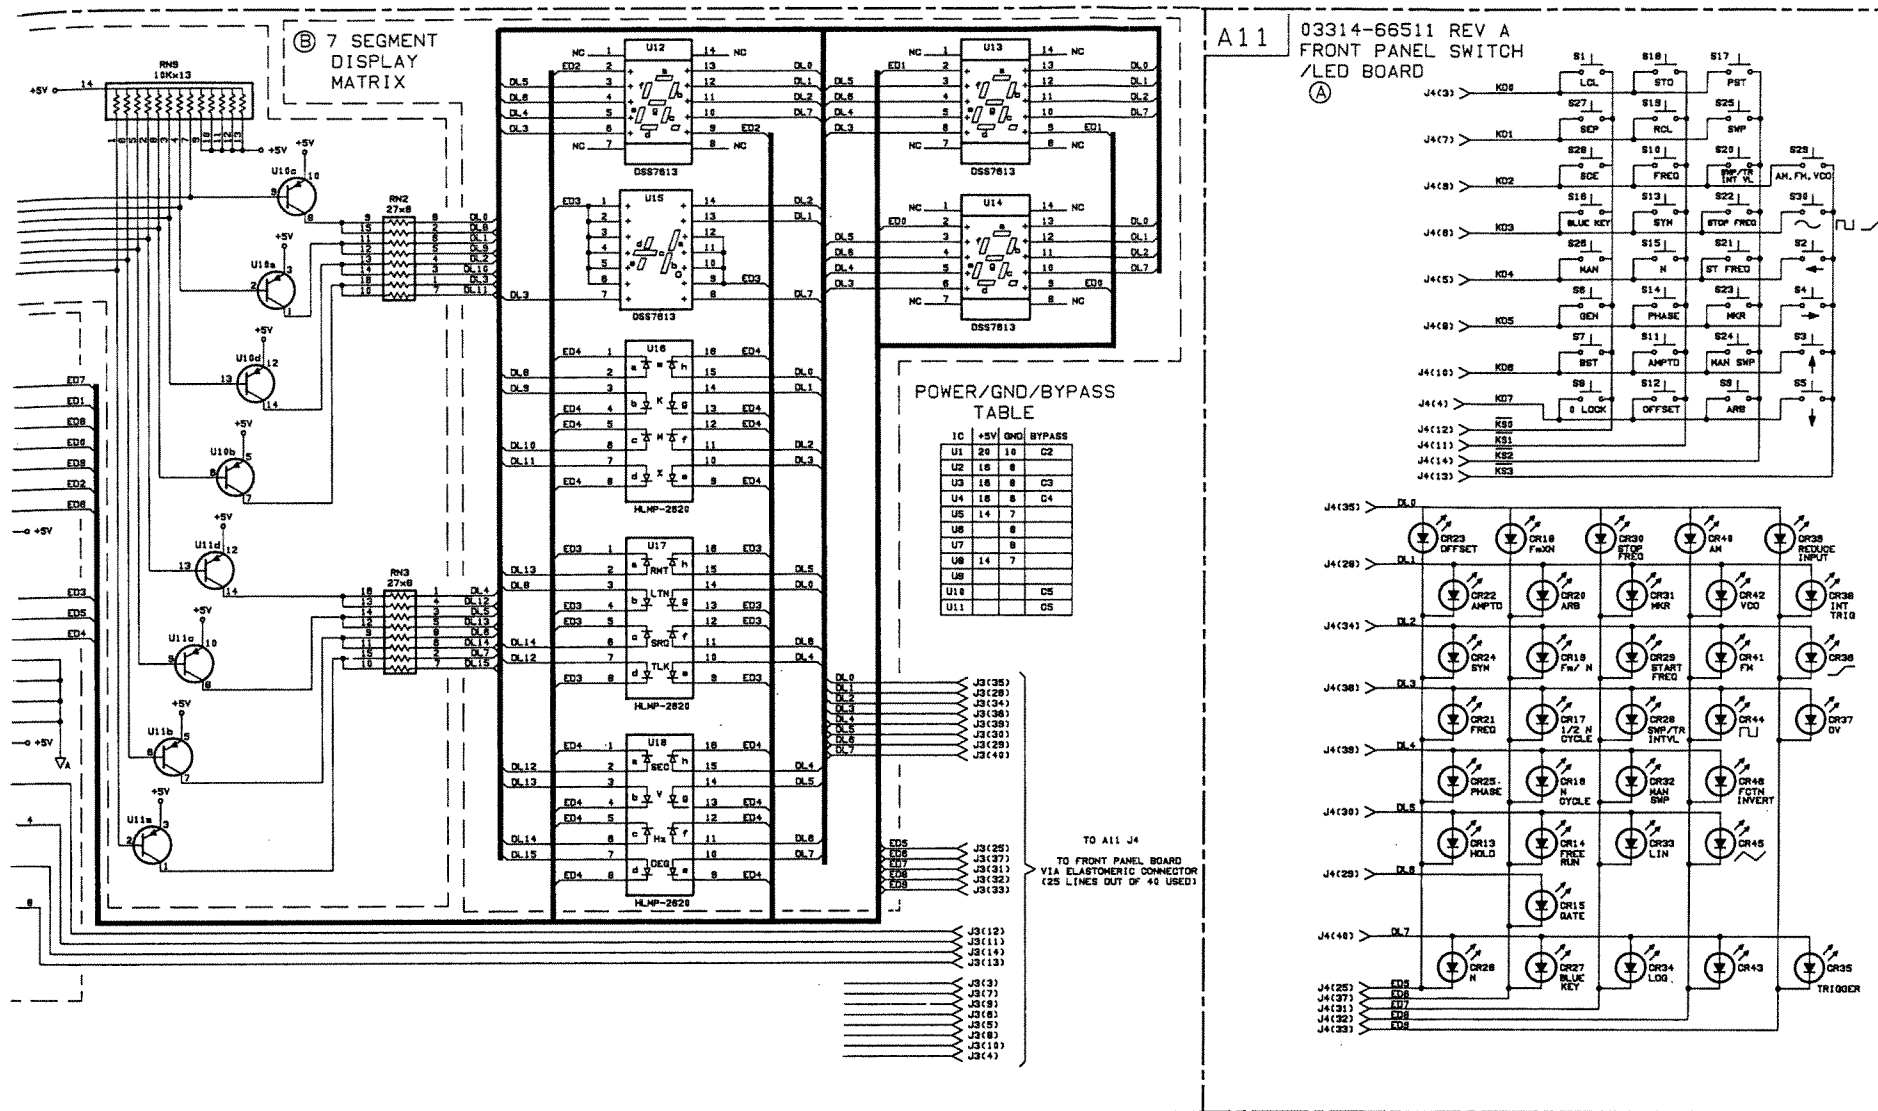

DWG. D-03314-66510-1 REV A (SHEET 1 OF 1)

A10A
Figure 8-37 Front Panel Display and Keyboard
8-83