



HDMI Protocol Analyzer

---

# VA-1809

User's Manual

Ver.2.0





---

HDMI Protocol Analyzer

---

**VA-1809**

User's Manual

---

2006.11

Ver.2.0

ASTRODESIGN,Inc



# Contents

Foreword.....	v
Safety precautions.....	v
Concerning this unit.....	v
Concerning the power cord.....	v
Concerning foreign matter.....	v
Concerning the power supply.....	v
Concerning the LCD display.....	v
Concerning impact.....	vi
Concerning the installation and operation locations.....	vi
Concerning what is packed with the unit.....	vi
Chapter 1 Concerning the VA-1809.....	1
1.1 Introduction.....	1
1.2 Features and main functions.....	1
1.3 Concerning the programs.....	2
1.4 Concerning CompactFlash (CF) cards.....	3
1.4.1 Introduction.....	3
1.4.2 Types.....	3
1.4.3 Amount of data that can be registered.....	3
1.4.4 Storage locations of registered data.....	4
1.4.5 How to insert the CF card.....	4
1.4.6 How to eject the CF cards.....	4
1.5 Parts and their functions.....	5
1.5.1 VA-1809 front panel.....	5
1.5.2 VA-1809 rear panel.....	7
1.5.3 VA-1809 on-screen display.....	8
1.5.4 Icons.....	9
Chapter 2 Connections with peripherals.....	11
2.1 Example of connections when using the VA-1809 as a receiver (monitor).....	11
2.2 Example of connections when using the VA-1809 as a repeater.....	12
2.3 Connections for isolating the HDMI input sound for output.....	13
2.4 Example of connections when outputting LCD displays to an analog monitor.....	13
Chapter 3 Menu tree.....	15
3.1 ANALYZE menu.....	16
3.2 PROGRAM menu.....	17
3.3 SETUP menu.....	18
3.4 SAVE menu.....	19
Chapter 4 ANALYZE (measurement result display methods).....	21

4.1	ANALYZE Common Function Keys .....	22
4.1.1	GUI/HEX .....	23
4.1.2	PROG INC/PROG DEC/DIRECT PROG CALL.....	24
4.1.3	Repeater/Receiver .....	24
4.1.4	DVI/HDMI .....	24
4.1.5	HDCP ON/OFF .....	24
4.1.6	CONNECTED EDID SET .....	24
4.2	Error reports .....	25
4.3	Video Timing .....	26
4.4	AVI InfoFrame .....	29
4.5	SPD InfoFrame .....	31
4.6	Audio InfoFrame.....	32
4.7	MPEG InfoFrame .....	34
4.8	ACP Packet.....	35
4.9	ISRC1 Packet.....	37
4.10	ISRC2 Packet.....	39
4.11	Channel Status Bit.....	40
4.12	Audio Timing .....	43
4.13	HDCP .....	44
4.13.1	HDCP Authentication Source -> VA-1809 .....	44
4.13.2	HDCP Authentication VA-1809 -> Sink.....	45
4.13.3	HDCP Authentication Part 3 Source -> VA-1809 .....	46
4.13.4	HDCP Authentication Part 3 VA-1809 -> Sink .....	47
4.13.5	HDCP Repeater Sequence Check .....	48
4.14	DDC Monitor .....	50
4.15	Compliance Test Item Check.....	53
4.16	CEC Analyzer.....	69
4.17	CEC Compliance Test Item Check .....	101
4.18	Other functions.....	130
4.18.1	Hot plug function .....	130
4.18.2	Log function.....	130
Chapter 5	Simple setup.....	133
5.1	Setting the VA-1809's HDMI equipment performance using the internal programs with the default settings.....	133
5.1.1	Loading the programs .....	133
5.1.2	Internal programs with default settings.....	134
5.2	Connecting the signal source, and displaying the HDMI input images on the LCD screen .....	136
Chapter 6	Detailed setup.....	137
6.1	PROGRAM (HDMI equipment performance settings).....	137
6.1.1	Creating programs and groups.....	137

6.1.2	Executing programs (LOAD) .....	147
6.2	SETUP (DISPLAY SETUP) .....	149
6.3	SETUP (CONFIG SETUP) .....	151
6.3.1	Description of Function Keys Common to CONFIG SETUP .....	152
6.3.2	ANALYSIS & LOG TRIGGER.....	154
6.3.3	ANALYSIS MODE .....	156
6.3.4	SPEAKER VOLUME .....	156
6.3.5	HOT PLUG MODE .....	157
6.3.6	EDID AUTO CHECKSUM .....	157
6.3.7	EDID DATA FILE TYPE .....	158
6.3.8	PHYSICAL ADDRESS FIX.....	158
6.3.9	EDID TIMING CHECK.....	158
6.3.10	SPEAKER PLACEMENT SET .....	159
6.3.11	VIRTUAL REPEATER MODE .....	160
6.3.12	Setting the Communication Port.....	166
6.4	SETUP (Others) .....	167
6.4.1	VERSION INFO .....	167
6.4.2	INITIALIZE .....	168
6.5	SAVE.....	169
6.5.1	CONNECTED EDID .....	169
6.5.2	PROGRAM GROUP .....	171
6.5.3	ANALYSIS DATA.....	172
6.5.4	CONFIG DATA .....	173
Chapter 7	Error tables .....	175
7.1	ANALYSIS ERROR (displayed in red) tables .....	175
7.1.1	Video Timing .....	175
7.1.2	AVI InfoFrame .....	176
7.1.3	SPD InfoFrame .....	176
7.1.4	Audio InfoFrame.....	177
7.1.5	MPEG InfoFrame .....	178
7.1.6	ACP Packet.....	178
7.1.7	ISRC1 Packet.....	178
7.1.8	ISRC2 Packet.....	179
7.1.9	Channel Status Bit.....	179
7.1.10	Audio Timing .....	179
7.1.11	HDCP .....	179
7.1.12	HDCP Authentication VA-1809->Sink.....	179
7.1.13	HDCP Authentication Part3 VA-1809->Sink .....	180
7.1.14	HDCP Repeater Sequence .....	180

7.1.15	Compliance Test Item Check.....	180
7.2	ANALYSIS OVER LIMIT (yellow display) table.....	184
7.3	ERROR CODE table .....	185
7.4	AVI InfoFrame Video Code tables .....	186
Chapter 8	Product specifications.....	197
8.1.	Internal data .....	197
8.1.1	SAMPLE1.....	197
8.1.2	SAMPLE2.....	204
8.1.3	SAMPLE3.....	205
8.1.4	SAMPLE4.....	206
8.1.5	SAMPLE5.....	207
8.1.6	SAMPLE6.....	208
8.1.7	SAMPLE7.....	209
8.1.8	SAMPLE8.....	210
8.1.9	SAMPLE9.....	211
8.1.10	SAMPLE10.....	212
8.1.11	Compliance1 .....	213
8.1.12	Compliance2 .....	214
8.1.13	Compliance3 .....	215
8.1.14	Compliance4 .....	216
8.1.15	Compliance5 .....	217
8.1.16	Compliance6 .....	218
8.2.	Connector pin layouts.....	219
8.2.1.	HDMI connector .....	219
8.2.2.	RS-232C connector (D-sub 9 pins, male) .....	220
8.2.3.	D-SUB connector .....	220
8.3.	VA-1809 specifications .....	221
8.3.1.	Specification .....	221
8.3.2.	Ratings.....	222
8.3.3.	Restrictions .....	222



# Foreword

Thank you very much for purchasing this model VA-1809 HDMI protocol analyzer. This manual contains details on the operation procedures to be followed when the VA-1809 is used, the checkpoints and precautions to be observed, and other useful information. Refer to its instructions when using the analyzer. Ensure that the manual is kept in a safe place where it can be referred to at any time.

## Safety precautions

### Concerning this unit

- Do not subject the analyzer to strong shocks or throw it around. Doing so may cause the liquid crystal to leak and/or the analyzer to malfunction, rupture, generate heat and cause a fire.
- Do not use the analyzer wherever there is a risk of ignition or explosions.
- Do not place the analyzer inside a microwave oven or other heating or cooking appliance or pressure vessel. Doing so may cause heat or smoke to be generated in the analyzer, combustion and/or damage to the circuit components.
- Inside the analyzer are some high-voltage parts: since exposure to these parts may result in electric shocks or burns and tampering with them may cause malfunctioning, refrain from disassembling, repairing or remodeling the analyzer.
- If a thunderstorm should occur while the analyzer is being used outdoors, immediately turn off its power, disconnect the power cable from the main unit, and move the analyzer to a safe place.

### Concerning the power cord

- Always take hold of the molded part of the plug when disconnecting the power cable.
- Do not bend the power cords with excessive force or bundle them. Doing so may cause fire.
- Do not place heavy objects on top of the power cable. This may damage the cord, causing a fire or electrical shock.

### Concerning foreign matter

- Do not spill liquids inside the analyzer or drop inflammable objects or metal parts into it. Operating the analyzer under these conditions may cause a fire, electric shocks and/or malfunctioning.

### Concerning the power supply

- Use an AC supply voltage within the range of AC 100V-120V or AC 200-240V for the analyzer
- Do not turn the power back on immediately after having turned it off. Doing so can cause malfunctioning.
- To make the power supplies of the devices to be connected to the VA-1809 common, connect such devices with FG cables.

### Concerning the LCD display

- Due to the nature of liquid crystal, some picture elements may be missing (bright spots, dark spots, etc.) at times.
- Do not touch any liquid crystal which has leaked from the liquid crystal panel.  
If the liquid crystal panel has been damaged by mistake and the liquid (liquid crystal) inside has leaked out, keep the liquid away from your mouth and skin and do not inhale its odors.
- In the event that liquid crystal has made contact with your eyes or mouth, use water to rinse it off immediately. If it has come into contact with your skin or clothing, wipe it off immediately with alcohol, and then rinse it off with soap. Leaving it in place may damage your skin or clothing.
- Exercise care with the glass of a broken liquid crystal panel. If the panel has broken, take care not to cut your hands on the glass shards. If you should touch an area where the glass has broken off, you may injure yourself.
- The LCD panel is a high-precision component and, as such, the following care must be taken in its handling.
  - Wiping the panel's surface with benzene, paint thinners, etc. will cause a deterioration in its quality.

- If water (salty water) is left on the display surface, discoloration and staining will result.
- Exposing the panel directly to ultraviolet rays for an extended period may cause the deflection panel to turn brown, in turn causing the contrast to drop and other forms of deterioration to develop in the display quality.
- Moisture inside the analyzer due to condensation, etc. may cause unevenness in the colors.
- Directly tapping the surface or bumping it into objects may crack the panel, etc.
- Do not attempt to disassemble the panel since leaking liquid crystal may make contact with your skin, which is hazardous.
- Handle the liquid crystal protective panel carefully.  
Gently wipe off any fingerprints or dirt on the liquid crystal protective panel with a cleaning agent used to clean office automation equipment. Rubbing the panel with too much force may mark or damage the panel.
- Leaving an image on the screen for too long may result in the image being burned onto the screen.
- The user will be charged for repairs or replacement of parts to correct any trouble occurring in the LCD panel whether or not the trouble has occurred during the warranty period.

## Concerning impact

---

- This is a precision instrument and, as such, subjecting it to impact may cause malfunctioning. Take special care when moving the analyzer.
- Do not drop the analyzer.

## Concerning the installation and operation locations

---

- Installing the analyzer in the following kinds of locations may cause malfunctioning and/or accidents.
  - Locations with an ambient temperature outside the range of 5 to 40 °C (see Note 1)
  - Locations with an ambient humidity outside the range of 30 to 80% RH
  - Locations in the vicinity of an air conditioner or subject to rapid temperature changes or the formation of condensation
  - Locations exposed to direct sunlight (see Note 2)
  - Locations exposed to corrosive gases or high concentrations of dust
  - Locations where strong magnetic fields are generated
  - Locations where the analyzer may be splashed with water, oil, chemicals, etc.
  - Locations to which vibrations are transmitted from the floor
  - Unstable locations
- Take care to meet the following conditions in order to ensure that the analyzer will be used properly.
  - Do not place heavy objects such as a monitor directly on top of the analyzer.
  - Avoid placing any objects around the analyzer.

Note 1: When the surface temperature of the LCD panel exceeds 60 °C, the panel's backlight and other parts may be damaged.

Note 2: Exposing the panel directly to ultraviolet rays for an extended period may cause the deflection panel to turn brown, in turn causing the contrast to drop and other forms of deterioration to develop in the display quality.

## Concerning what is packed with the unit

---

The following items have been provided with this analyzer. Be absolutely sure to use only the items supplied for these parts since use of any other items may give rise to trouble.

### Standard items

- VA-1809
- VA-1809 instruction manual (what you are reading): 1 copy
- CompactFlash (CF) card (64MB): 1 pc
- Power cable: 1 pc (for use with VA-1809 only)
- FG cable (1.5 meters): 1 pc (for use with VA-1809 only)
- VA-1809 utility software installation CD (Windows compatible): 1 disc

# 1

## Concerning the VA-1809

### 1.1 Introduction

The VA-1809 HDMI (High-Definition Multimedia Interface) protocol analyzer (henceforth referred to in this manual as the VA-1809) allows the protocols required in the development of HDMI transmitters to be checked. Its LCD screen and internal speaker on the front panel enables HDMI images and sound to be easily monitored.

Since the performance information (EDID, SINK) of the VA-1809 can be rewritten, the analyzer allows various kinds of receivers (monitors) to be simulated. It comes with output HDMI connectors so that it can be used as a repeater as well. It can also be used in the development of DVD players and set-top boxes which are equipped with HDMI connectors.

- \* For the purposes of this manual, the term “receiver” (or “monitor”) is used to denote any unit equipped with an HDMI input connector but not with an HDMI output connector such as a monitor or TV, and the term “repeater” is used to denote any unit which is equipped with both HDMI input and HDMI output connectors and which outputs signals on the basis of the input signals.

### 1.2 Features and main functions


#### ■ ANALYZE (measurement) functions

The analyzer measures the HDMI and DVI video timing data.  
It also measures the contents of the HDMI packets.  
It checks for differences from the HDMI ratings.

#### ■ Receiver (monitor) functions

HDMI input signals can be received.


Connections

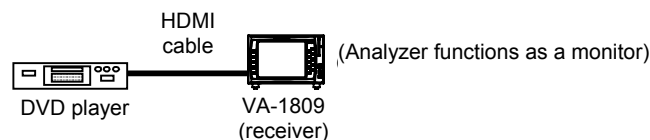

#### ■ Repeater functions

The analyzer can also be made to function as a repeater by supplying signals through its HDMI output connector.

Connections

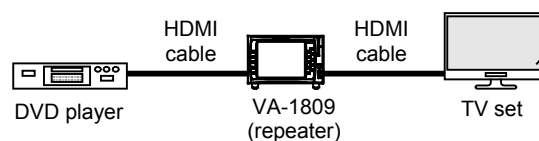

### ■ Emulation functions

The performance information (such as for a TV that supports HDTV or NTSC) of the VA-1809 main unit can be changed to the performance of many other types of monitors.

### ■ Built-in LCD monitor and speaker

With the LCD monitor on the front panel, it is easy to check HDMI images. Similarly, the internal speaker enables HDMI sound to be checked with ease.

### ■ Program functions

The data used to simulate monitors can be managed using programs. It can be changed to the performance of many different kinds of monitors simply by calling the corresponding programs. A group function is also available for selecting ahead of time only those programs used among a pool of many programs.

### ■ Registration of data onto CompactFlash cards

The ANALYZE (measurement) data, programs, equipment settings and other data can be stored on CompactFlash cards.

### ■ Hot plug function

This function resets the transmitter without having to connect or disconnect the cables between the transmitter and VA-1809.

### ■ Log trigger function

This function allows the trigger to be set for capturing the ANALYZE data.

### ■ DDC line monitor function

This function will enable commands to be sent and received over the DDC line.

### ■ HDMI Ver.1.2 (except SACD) supported

HDMI 1.2 timing data and InfoFrame are supported.

## 1.3 Concerning the programs

The information on the performance of the HDMI receivers is stored in the EDID and HDCP registers, and it is relayed when it is read by the HDMI transmitter. By rewriting this performance information, the VA-1809 enables various HDMI receivers to be simulated. The information can be stored in a single program.

Programs consist of the following data:

- Program data : The program name data is stored.
- EDID data : The EDID data is stored.
- SINK data : The performance information of the DVI or HDMI receiver (monitor) or repeater is stored.

Ten programs are provided inside the EPROM in the VA-1809 main unit as sample programs. (For details, refer to "8.1 Internal data" on page 197.) This data can be used for output or as the original data to be copied onto CF cards.

## 1.4 Concerning CompactFlash (CF) cards

### 1.4.1 Introduction

The results of the analyses performed by the VA-1809 can be saved onto CompactFlash (CF) cards. CF cards enable programs, EDID data, SINK data, ANALYSIS data and CONFIG data to be registered and edited.

### 1.4.2 Types

Use the CF card packed with the VA-1809. Trouble in operation caused by the use of any other CF card is not covered by the warranty.



CF cards come with many and varied specifications. As such, if a card whose operation in the VA-1809 has not been verified is used, the read/write operations may be unstable or the card may not function at all.

### 1.4.3 Amount of data that can be registered


Shown below is the amount of data that can be registered on a CF card.

	Amount of data that can be registered
Programs (PROGRAM, EDID, SINK)	100
LOG, ANALYSIS data	These can be saved insofar as the CF card has enough free memory to accommodate them.
GROUP data	
CONFIG data	

## 1.4.4 Storage locations of registered data

When data is registered in a CF card, it is registered in the locations shown below.

Root Folder (TOP)

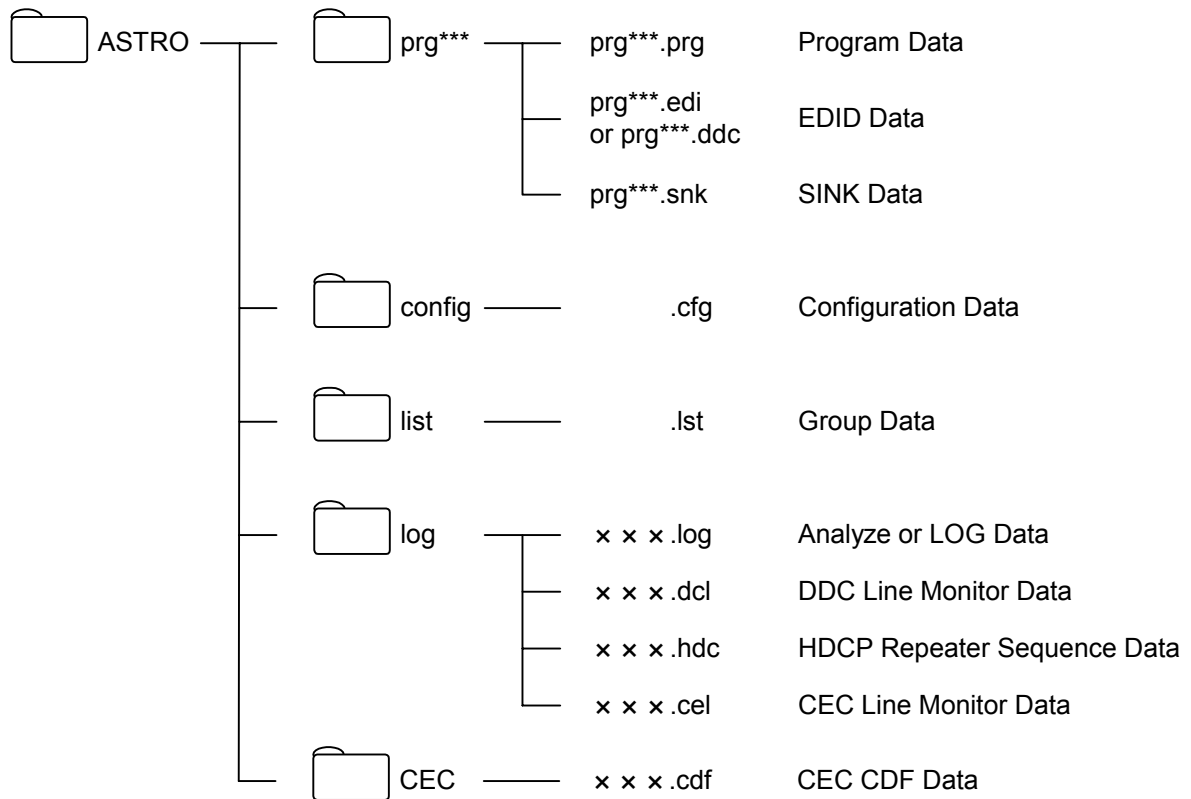

## 1.4.5 How to insert the CF card

Point the CF card in the direction of the arrow shown on the top of the card, and insert. Insert it all the way in. Check that the VA-1809's card icon is displayed in white, and card recognition is completed.

## 1.4.6 How to eject the CF cards

Verify that the card icon has disappeared by holding down the ENTER button, and then remove the card.




Be absolutely sure to adhere to the above sequence of steps when inserting or ejecting the CF card. Action taken in any other sequence may destroy the CF card data. In addition, the CF card will no longer be recognized even when it is re-inserted.

## 1.5 Parts and their functions

The button functions differ depending on the unit's function and its mode.  
For details, refer to the descriptions of the operations outlined in each section.

### 1.5.1 VA-1809 front panel

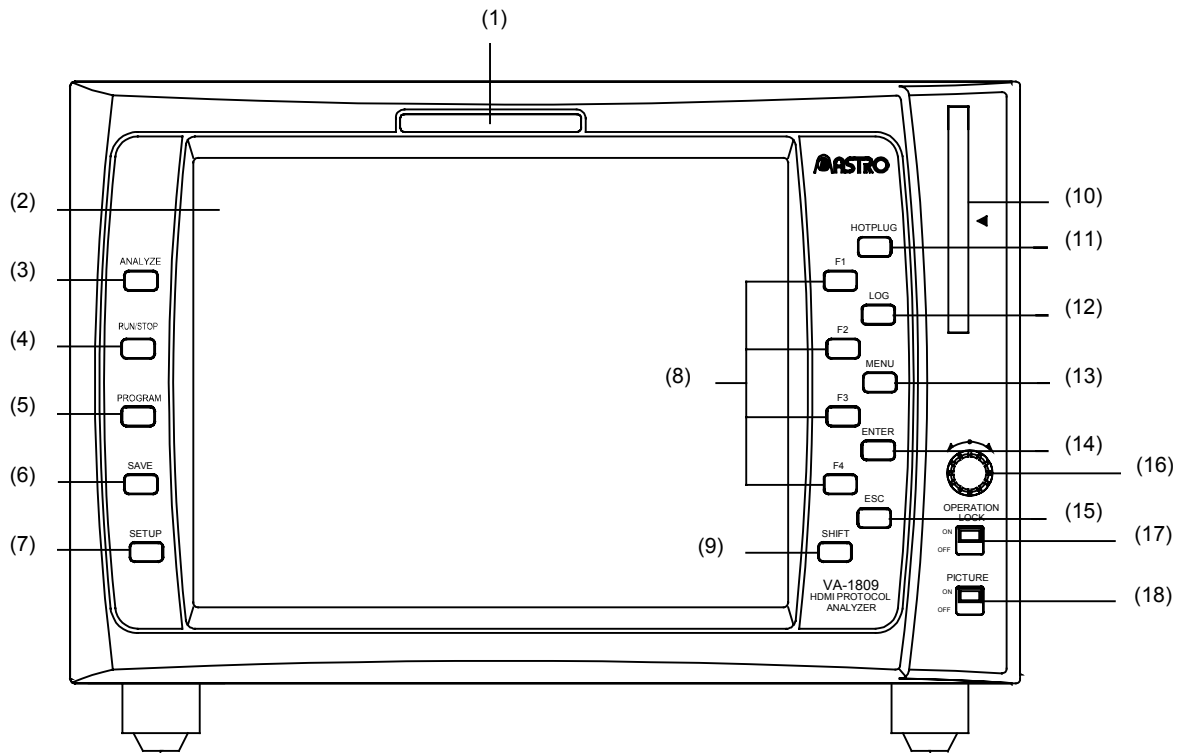

No.	Button	Description of function
(1)	Operation LED	This lights when images are input or operations are performed.
(2)	LCD screen	The HDMI input images, analysis results, etc. are displayed on this screen.
(3)	ANALYZE button	HDMI output data analysis is initiated by pressing this button.
(4)	RUN/STOP button	This is used to run or stop the analysis. It works only while analysis results are displayed.
(5)	PROGRAM button	The contents of programs can be edited by pressing this button.
(6)	SAVE button	The settings or analysis results can be saved by pressing this button.
(7)	SETUP button	Various settings can be performed by pressing this button.
(8)	F1, F2, F3, F4 buttons	Settings or programs can be selected by pressing these buttons.
(9)	SHIFT button	The functions of the function buttons can be extended by pressing the buttons together with the shift button.
(10)	CF card slot	This is where the CF cards are inserted.
(11)	HOTPLUG button	The Hot Plug Detect signal can be turned ON or OFF by pressing this button. It works only while analysis results are displayed.
(12)	LOG button	This is used to start or terminate a log.
(13)	MENU button	The menus can be turned ON or OFF by pressing this button.
(14)	ENTER button	Settings can be selected and entered by pressing this button.
(15)	ESC button	Settings can be exited by pressing this button.
(16)	Rotary encoder	When this is rotated, menus or programs can be selected. When it is pressed, its ENTER function is activated. When it is held down (for 2 seconds), the sound is muted. When it is held down and rotated, the sound volume can be adjusted.
(17)	OPERATION LOCK switch	When it is set to ON, none of the panel buttons can be operated.
(18)	PICTURE switch	It enables the rear panel images to be set to ON or OFF.




Always remember to insert the CF card all the way in. Verify that the card icon has disappeared by holding down the ENTER button, and then remove the card. Failing to take the steps in the prescribed sequence may cause the CF card data to be destroyed.



HDMI input images are displayed after their resolution has been converted. For this reason, the images displayed on the LCD may differ from the images actually input.



## 1.5.2 VA-1809 rear panel

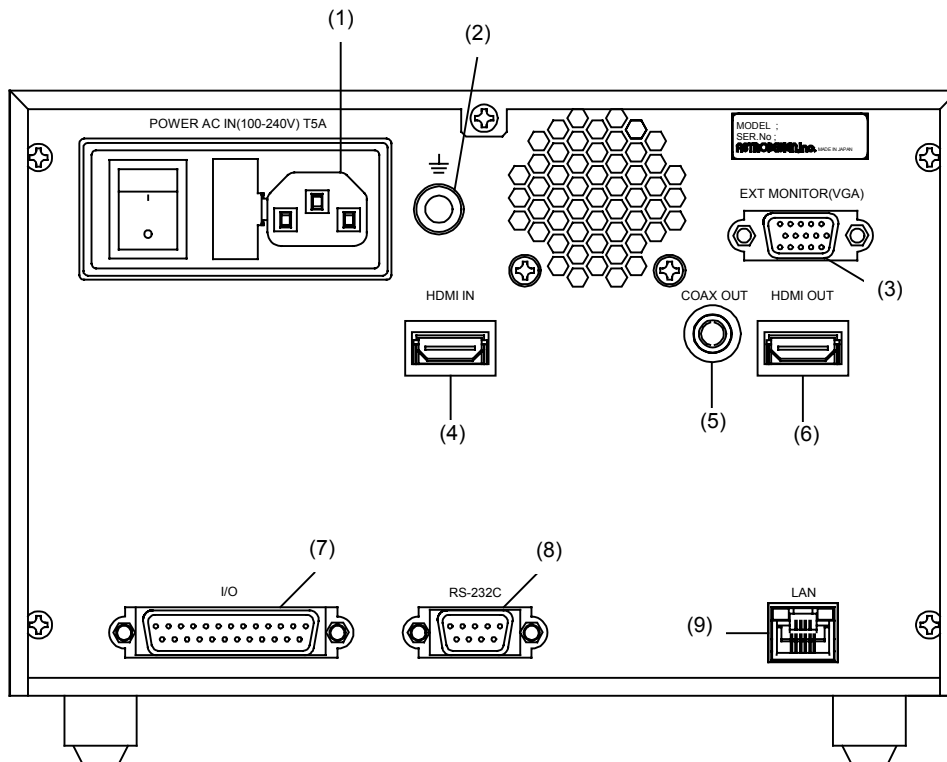


No.	Part	Description
(1)	AC input socket	Connect the power cable here. This socket supports 100-120V and 200-240V supply voltages.
(2)	Frame ground (FG) terminal	This is connected to the corresponding FG terminal on the unit connected to the VA-1809.
(3)	EXT MONITOR (VGA) connector	The same output signals as the ones displayed on the LCD screen are output from this connector in analog form. Resolution is fixed at 1024 × 768 (at 60 Hz). (No signals are output with HDCP.)
(4)	HDMI IN connector	The HDMI output signals of the DVD player, set-top box, etc. are supplied to this connector.
(5)	COAX (coaxial) OUT connector	This is the digital audio output connector.
(6)	HDMI OUT connector	The HDMI signals are output from this connector to the input connector on the HDMI TV set, monitor, etc.
(7)	I/O connector (25 pins, female)	This is not used.
(8)	RS-232C connector (9 pins, male)	This connector is used to connect a personal computer using an RS-232C cable.
(9)	Ethernet port (10/100BASE-TX)	This port is used to connect to a LAN using an Ethernet cable.

### CAUTION





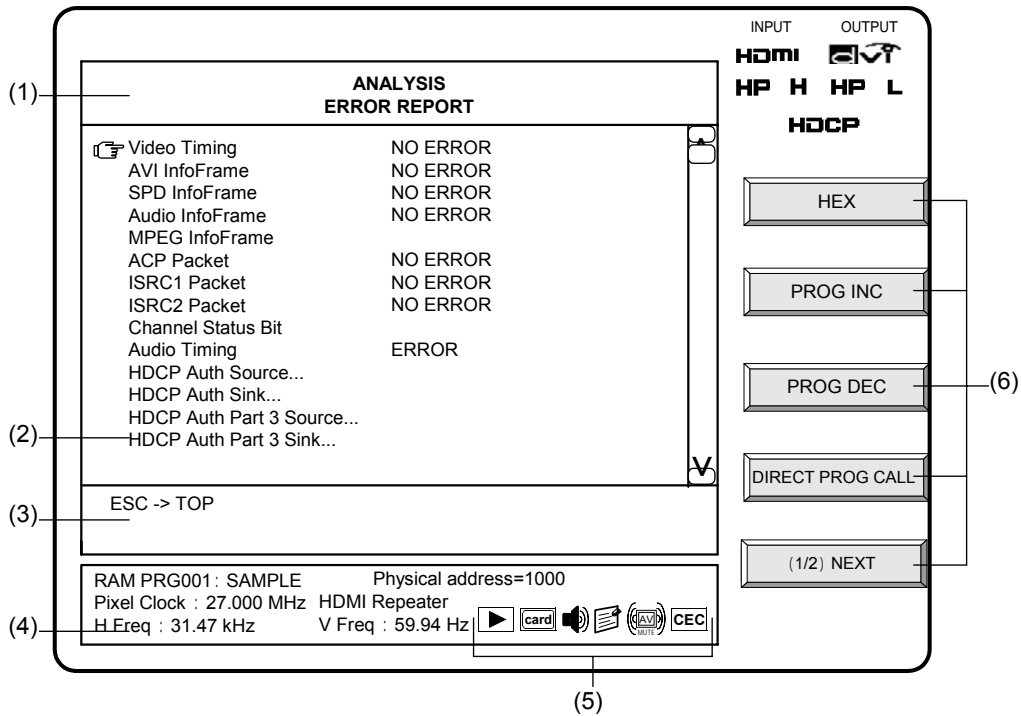










Be absolutely sure to use the power switch to turn the power on and off. Turning the power on or off by connecting or disconnecting the power cable may destroy the data on the CF card.

### 1.5.3 VA-1809 on-screen display



No.	Part	Description
(1)	TITLE window	This is where the titles of the on-screen display contents are displayed.
(2)	MAIN window	This is where details of the analysis results, etc. are displayed.
(3)	HELP window	Advice on the button operations is available here.
(4)	STATUS window	The input timing data information appears here.
(5)	STATUS icons	The types, statuses, etc. of the input and output signals are displayed here using icons.
(6)	FUNC (function) icons	The meanings of the function buttons are indicated here. They correspond to the <b>F1</b> to <b>F4</b> and <b>SHIFT</b> buttons from the top.

### 1.5.4 Icons

Icon	Name	Description
	Card icon	This indicates the CF card status. If it appears in red, data is being written on the CF card, so do not turn off the power or attempt to eject the card.
	Input/output signal format icons	This appears in white when the signal format of the input or output images is HDMI (High-Definition Multimedia Interface).
		This icon appears in white when the signal format of the input or output images is DVI (Digital Visual Interface).
	HDCP icon	This appears when HDCP (High-bandwidth Digital Content Protection) has been applied to the input or output image signals.
	Hot plug icons	This appears when the AUTO MODE is selected in CONFIG SETUP for the hot plug status on the HDMI input side. In this mode, the hot plug signals are set to low only for the set time (10 to 200ms) when the HOTPLUG button is pressed.
		This appears in light blue when the hot plug status at the HDMI input or output side is low (not detect). The hot plug at the input side can be controlled using the HOTPLUG button.
		This appears in yellow when the hot plug status at the HDMI input or output side is high (detect). The hot plug at the input side can be controlled using the HOTPLUG button.
		This appears when the hot plug status at the HDMI input is selected as CONTINUOUS MODE by CONFIG SETUP, and in addition, HOTPLUG is being changed regularly. Regular change of HOTPLUG can be controlled using the HOTPLUG button.
		This appears when the hot plug status at the HDMI input is selected as CONTINUOUS MODE by CONFIG SETUP, and in addition, HOTPLUG is NOT being changed regularly. Regular change of HOTPLUG can be controlled using the HOTPLUG button.
	Log icon	This appears in white while log data is being output.
	Update/no update icons	This appears in green when RUN (updating) has been selected with the RUN/STOP button.
		This appears in red when STOP (no updating) has been selected with the RUN/STOP button.
	Speaker icon	This appears in yellow when the sound from the internal speaker is output. It appears in gray when it is muted.
	AV MUTE icon	This appears in blue when AV mute is on, and in gray when off.
	CEC icon	This icon appears in yellow when CEC commands are being transmitted or received. It appears in gray when commands are not being transmitted or received.




# 2

## Connections with peripherals

### 2.1 Example of connections when using the VA-1809 as a receiver (monitor)

In this example, the VA-1809 is used as the receiver (monitor) for analyzing the HDMI protocols of the HDMI output device. Timings can be measured even when the DVI output device is not equipped with an HDMI function.

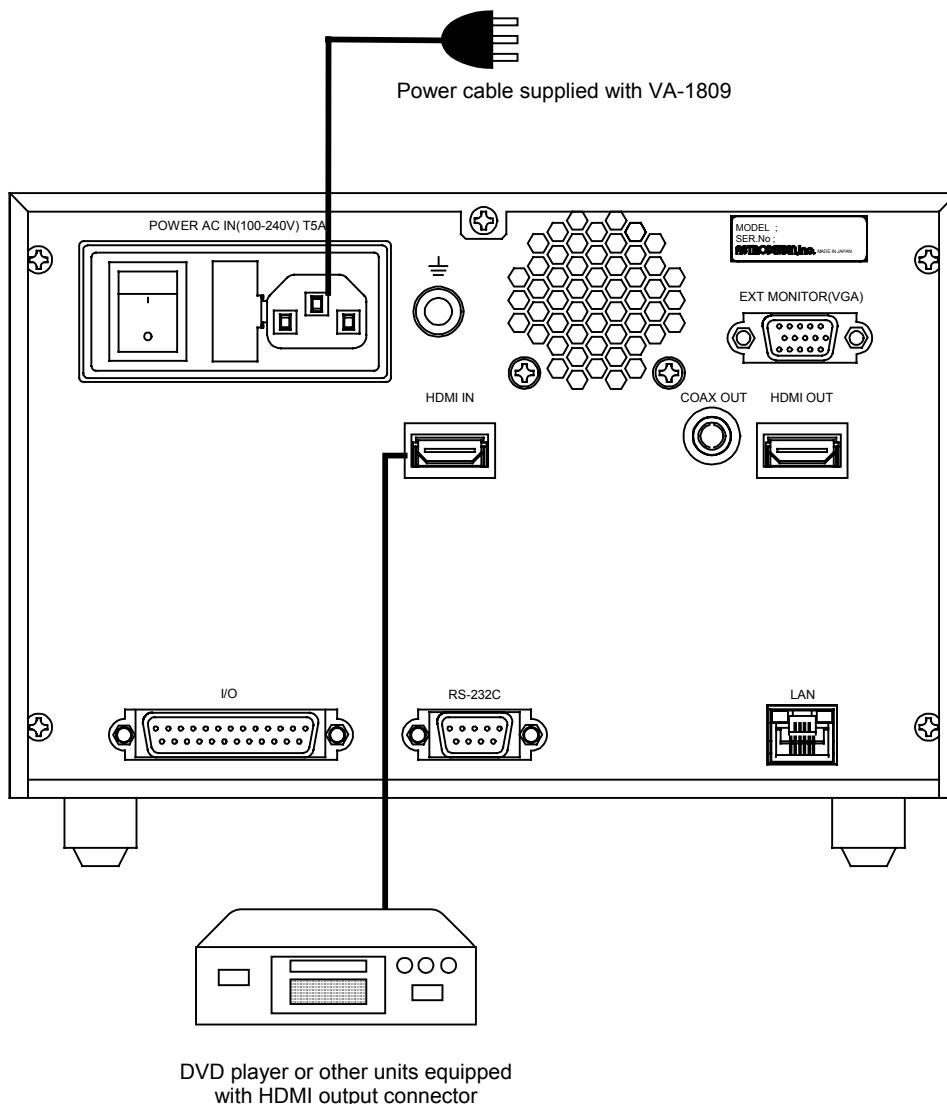


#### CAUTION

When using the VA-1809 as a receiver (monitor), use one for which the SINK rx mode is registered as the receiver. For the setup, refer to "Simple setup" on page 133.

## 2.2 Example of connections when using the VA-1809 as a repeater

In this example, the VA-1809 is used as the repeater for analyzing the HDMI protocols of the HDMI output device. By connecting a monitor that supports HDMI to the HDMI output connector of the VA-1809, it is checked that the output device functions properly to support the repeater.

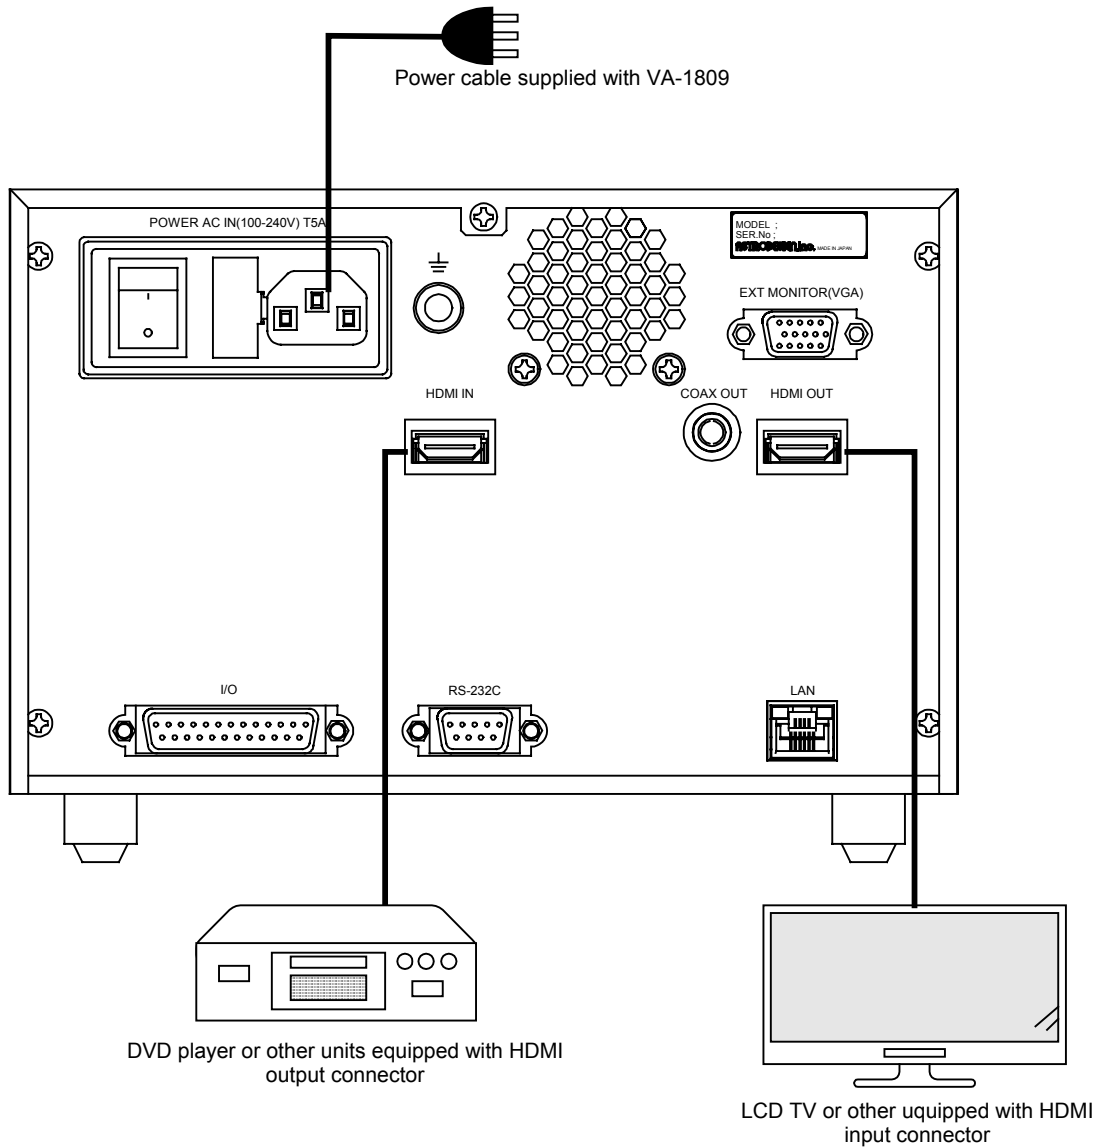

### CAUTION


When using the VA-1809 as a repeater, use one for which the SINK rx mode is registered as the repeater. For the setup, refer to "Simple setup" on page 133.

If a receiver or repeater is not connected to HDMI output, the VA-1809 will operate as a receiver even if SINK rx mode is set to repeater.

## 2.3 Connections for isolating the HDMI input sound for output

In this example, the audio output is checked by connecting an AV amplifier or other unit to the COAXIAL output connector of the VA-1809.


- \* Audio output cannot be performed during HDCP execution.

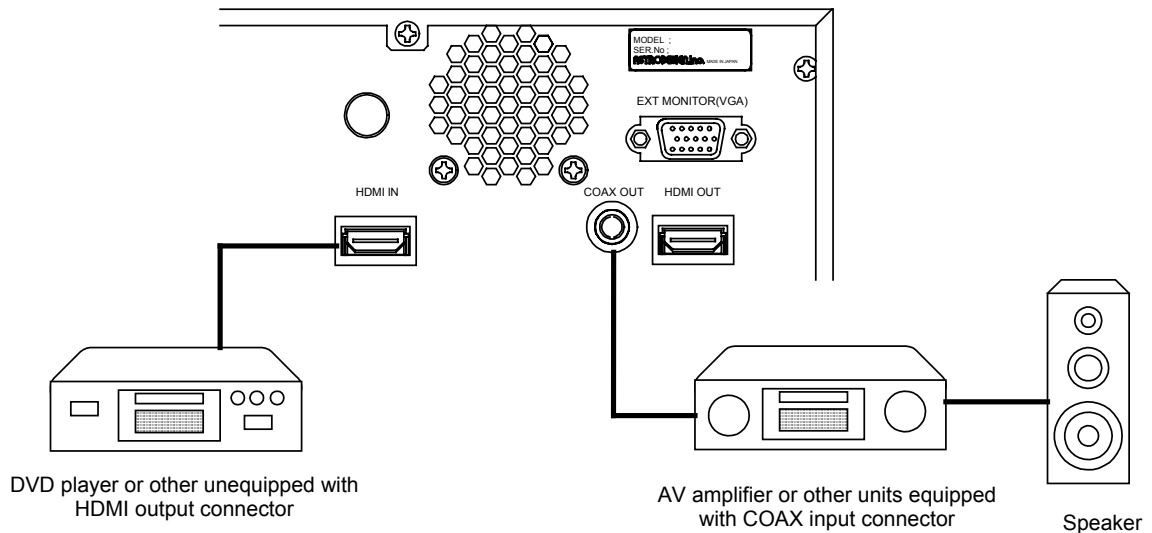

## 2.4 Example of connections when outputting LCD displays to an analog monitor

In this example, the same displays as on the LCD screen of the VA-1809 are output to an external monitor.

- \* Displays with the XGA screen resolution (VGA) are output regardless of the performance (EDID) of the monitor connected to the analog D-SUB output connector. Provide a monitor capable of displaying the XGA resolution.
- \* The background image cannot be output during HDCP execution. If the background image is turned off with the PICTURE switch, only the overlaid output result can be output.

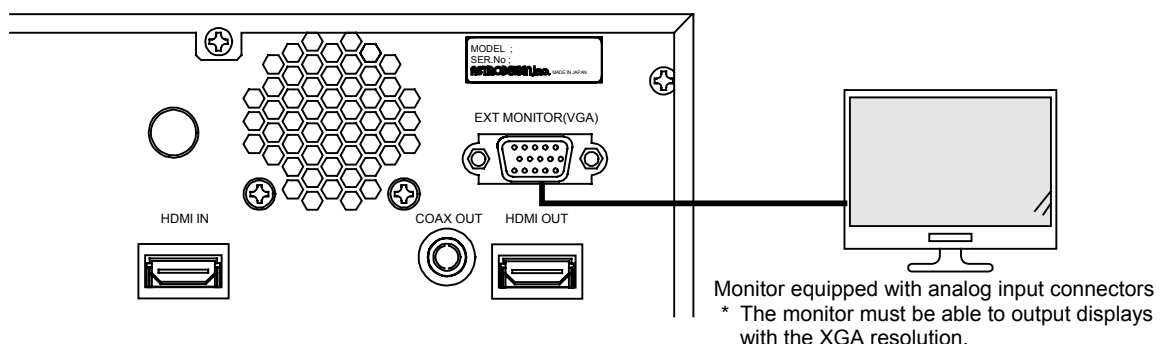






# 3


## Menu tree

An outline of the menu structure is as shown in the figure below. Press each menu button while the on-screen display is blank.

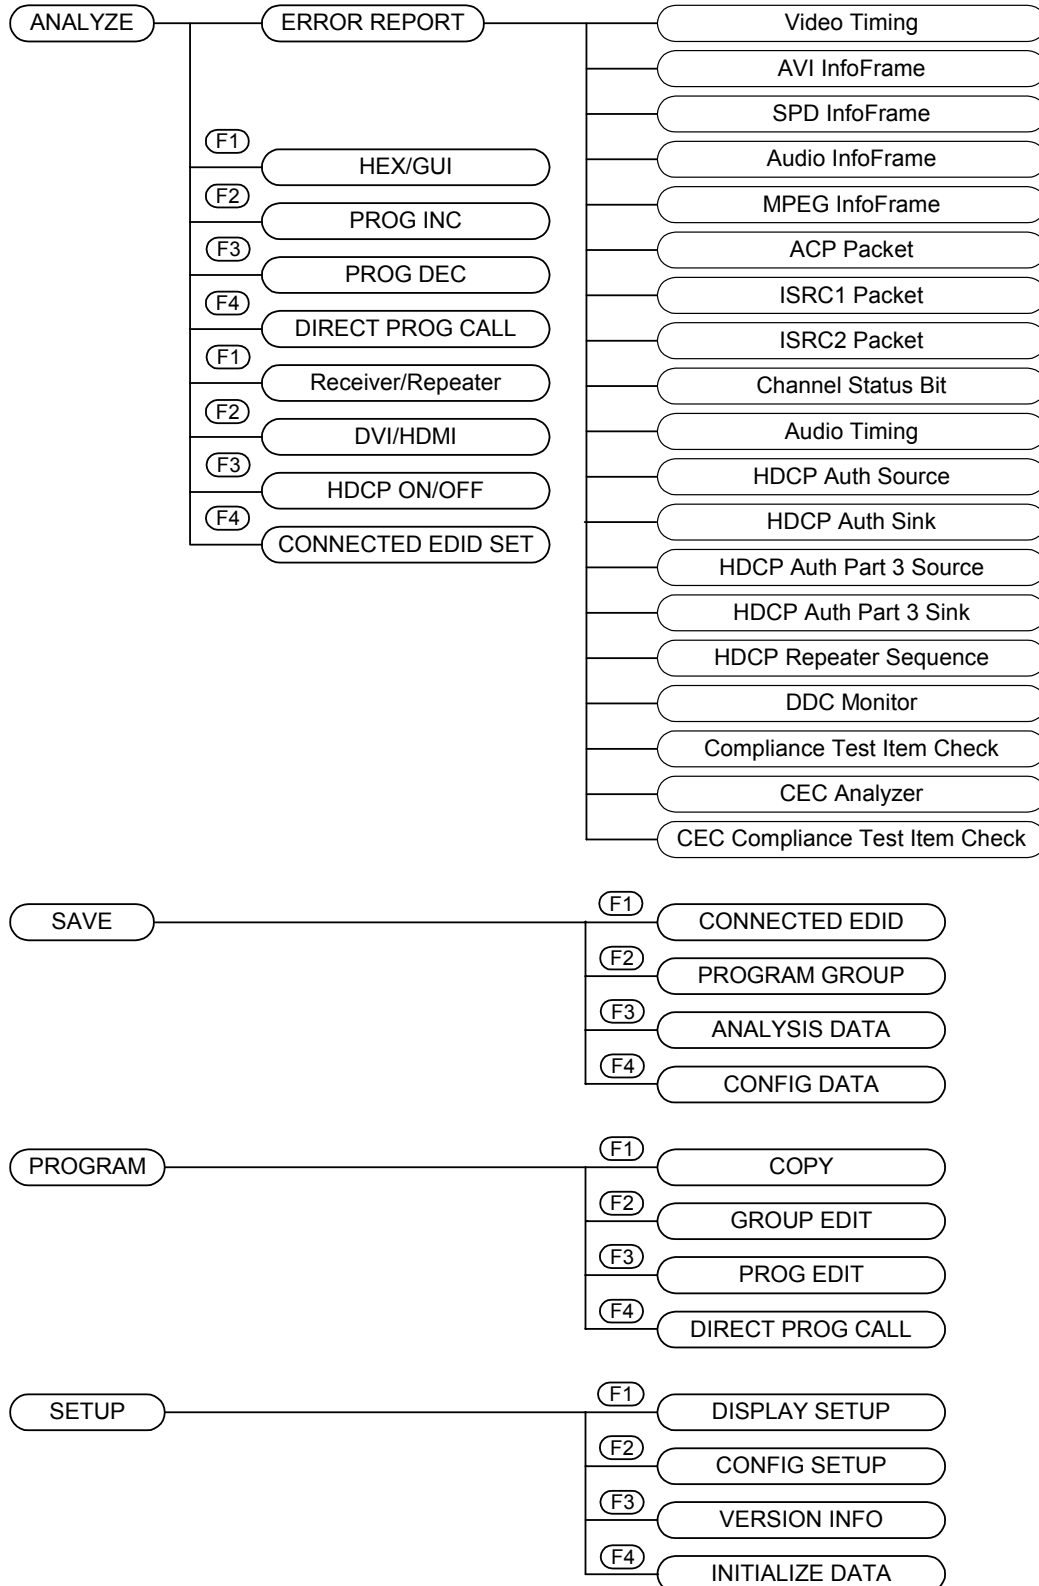


### 3.1 ANALYZE menu

The ANALYZE menu is used when measuring the input HDMI statuses.  
 The menu is configured as shown below when the **ANALYZE** button is pressed while the on-screen display is blank.

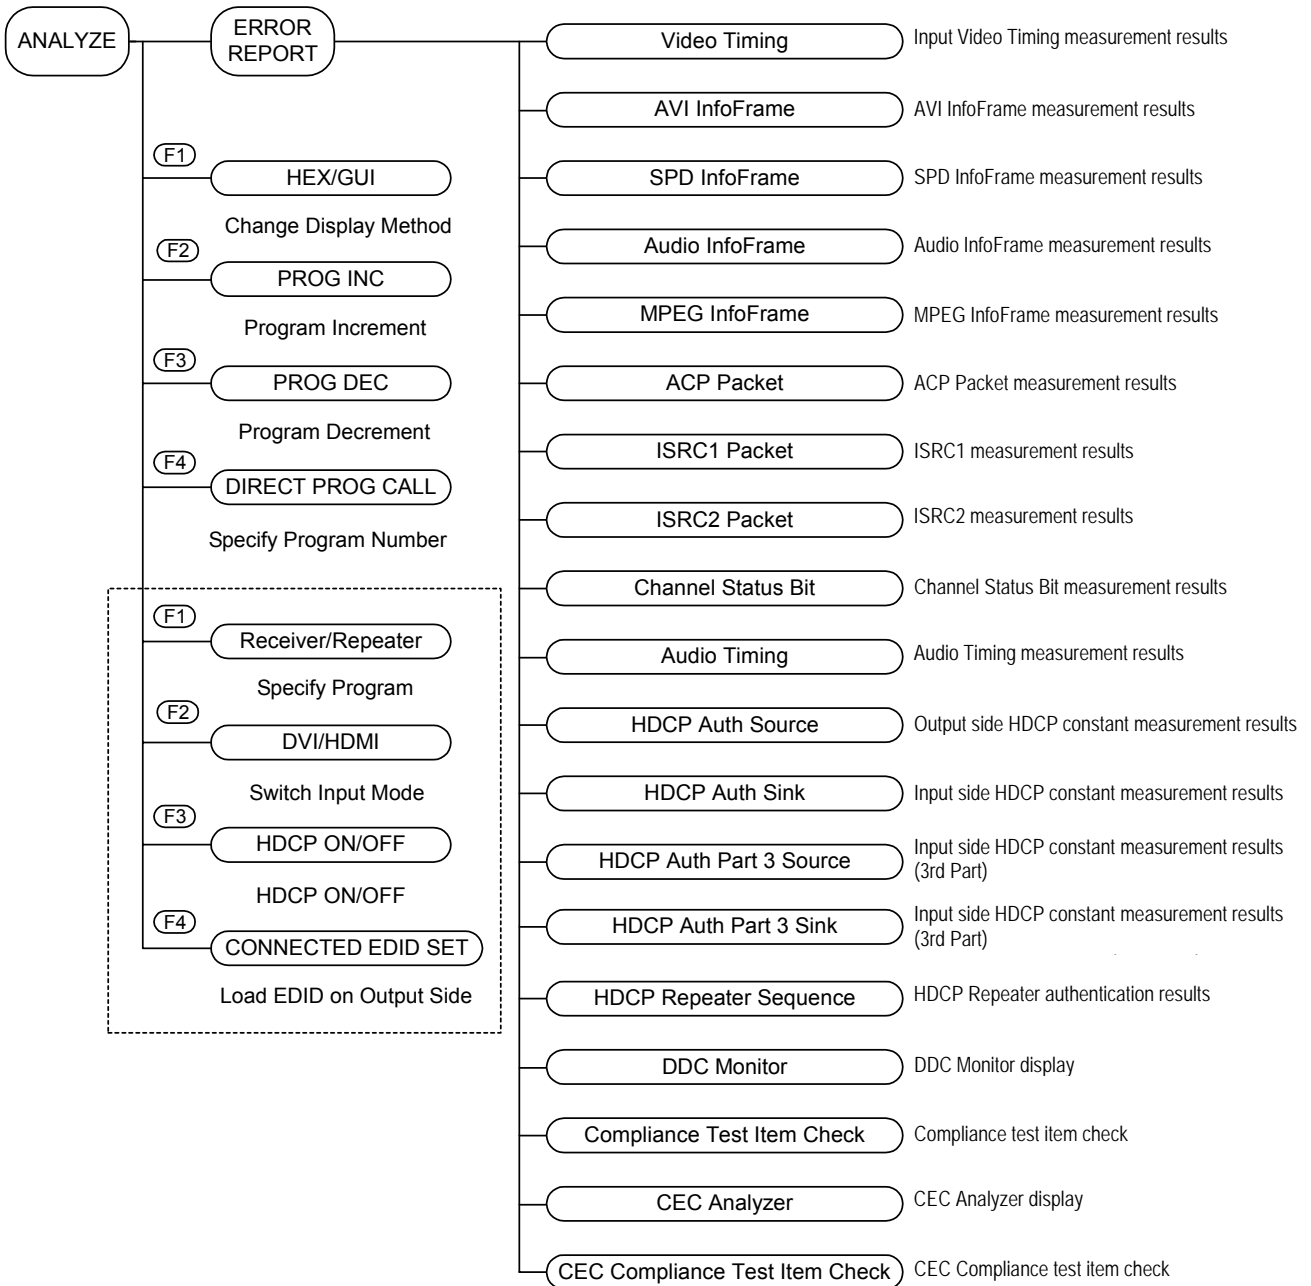


## 3.2 PROGRAM menu

The PROGRAM menu is used when copying or editing program data and when editing program groups in the group execution mode (refer to "6.3.3 ANALYSIS MODE" on page 156). The menu is configured as shown below when the **PROGRAM** button is pressed while the on-screen display is blank.

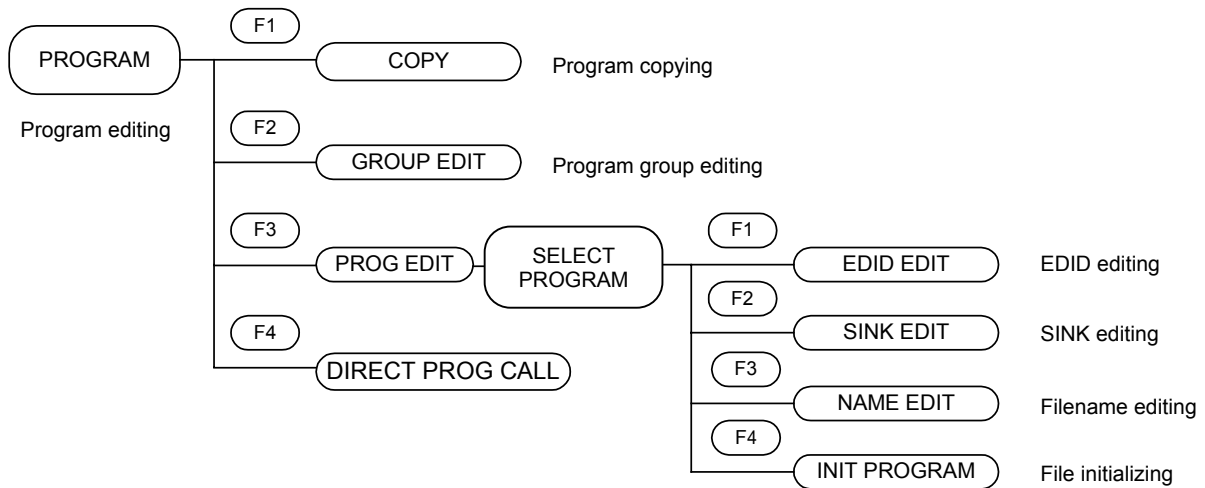


### 3.3 SETUP menu

The SETUP menu is used when setting the LCD screen of the VA-1809 or performing the equipment settings. The menu is configured as shown below when the **SETUP** button is pressed.

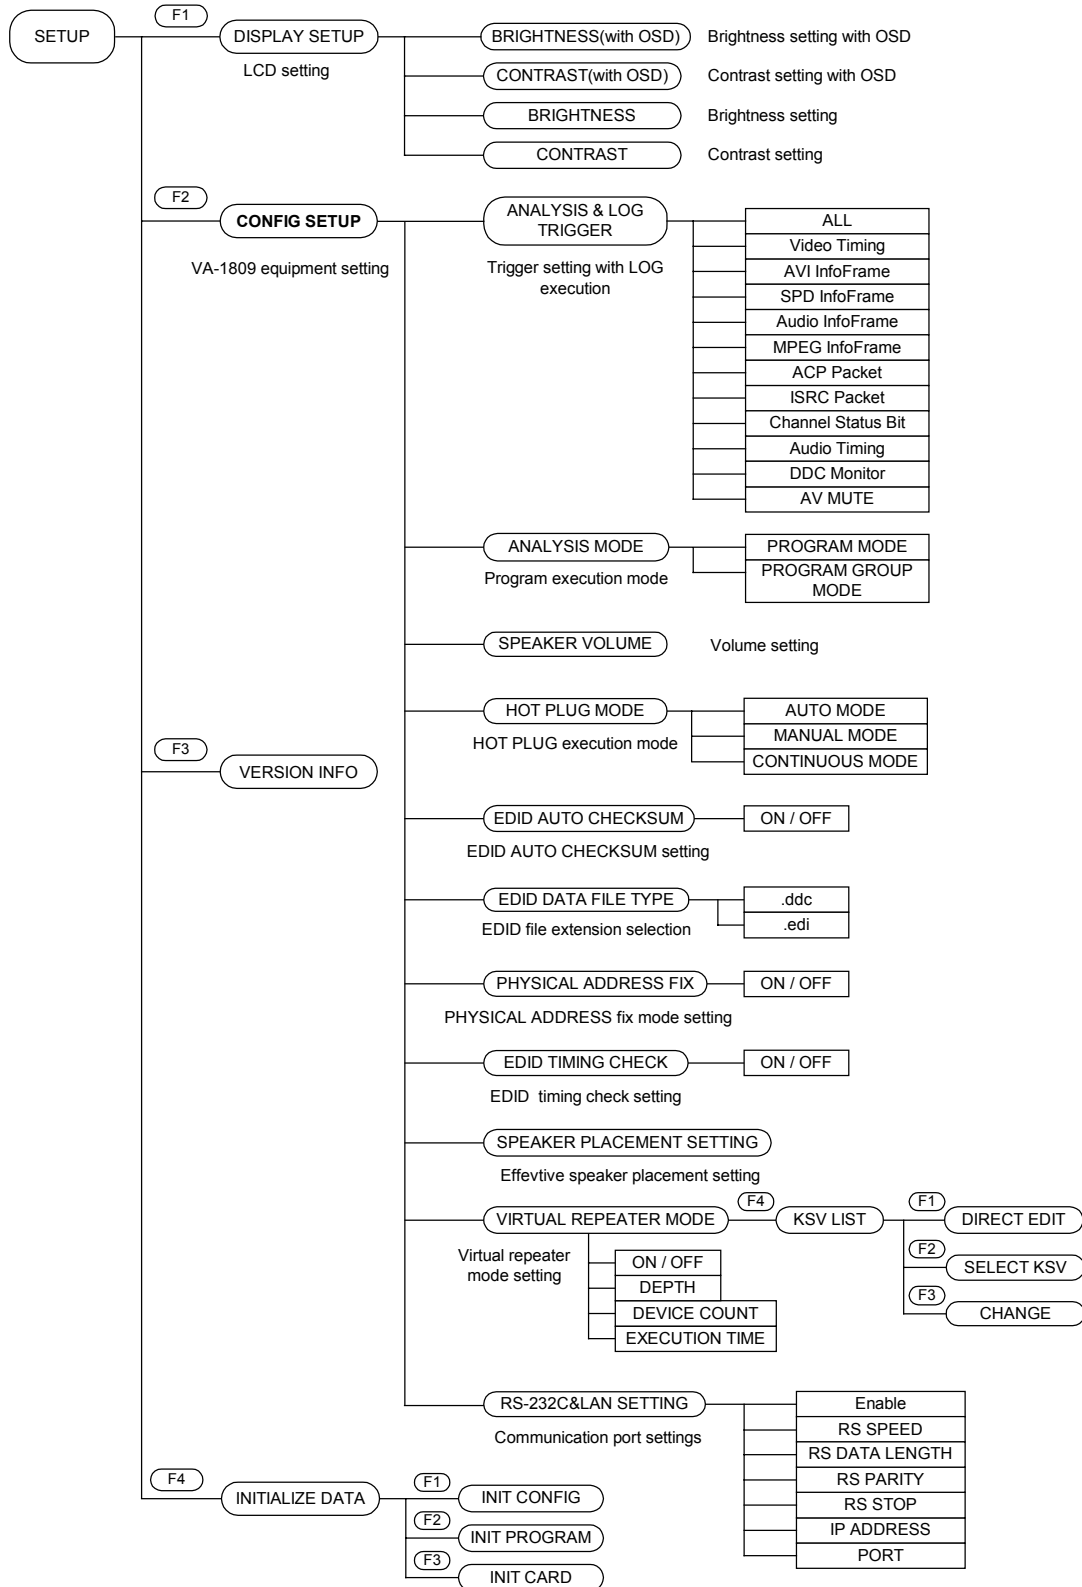

## 3.4 SAVE menu

The SAVE menu is used when the current statuses are to be stored.  
The menu is configured as shown below when the **SAVE** button is pressed.

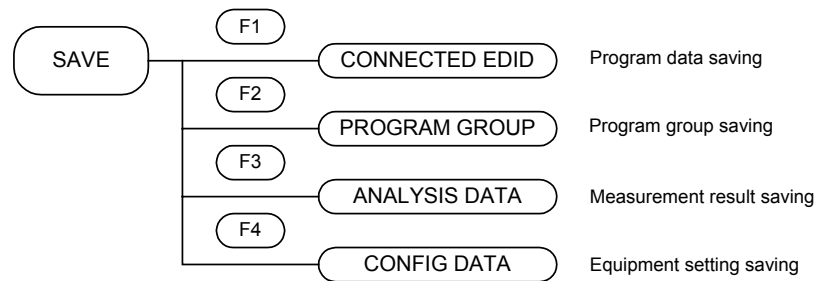




# 4

## ANALYZE (measurement result display methods)

When the **ANALYZE** button is pressed, the HDMI signal timing data can be measured, and InfoFrame and other contents can be decoded and displayed. The menu tree in the measurement result display area is configured as shown below.

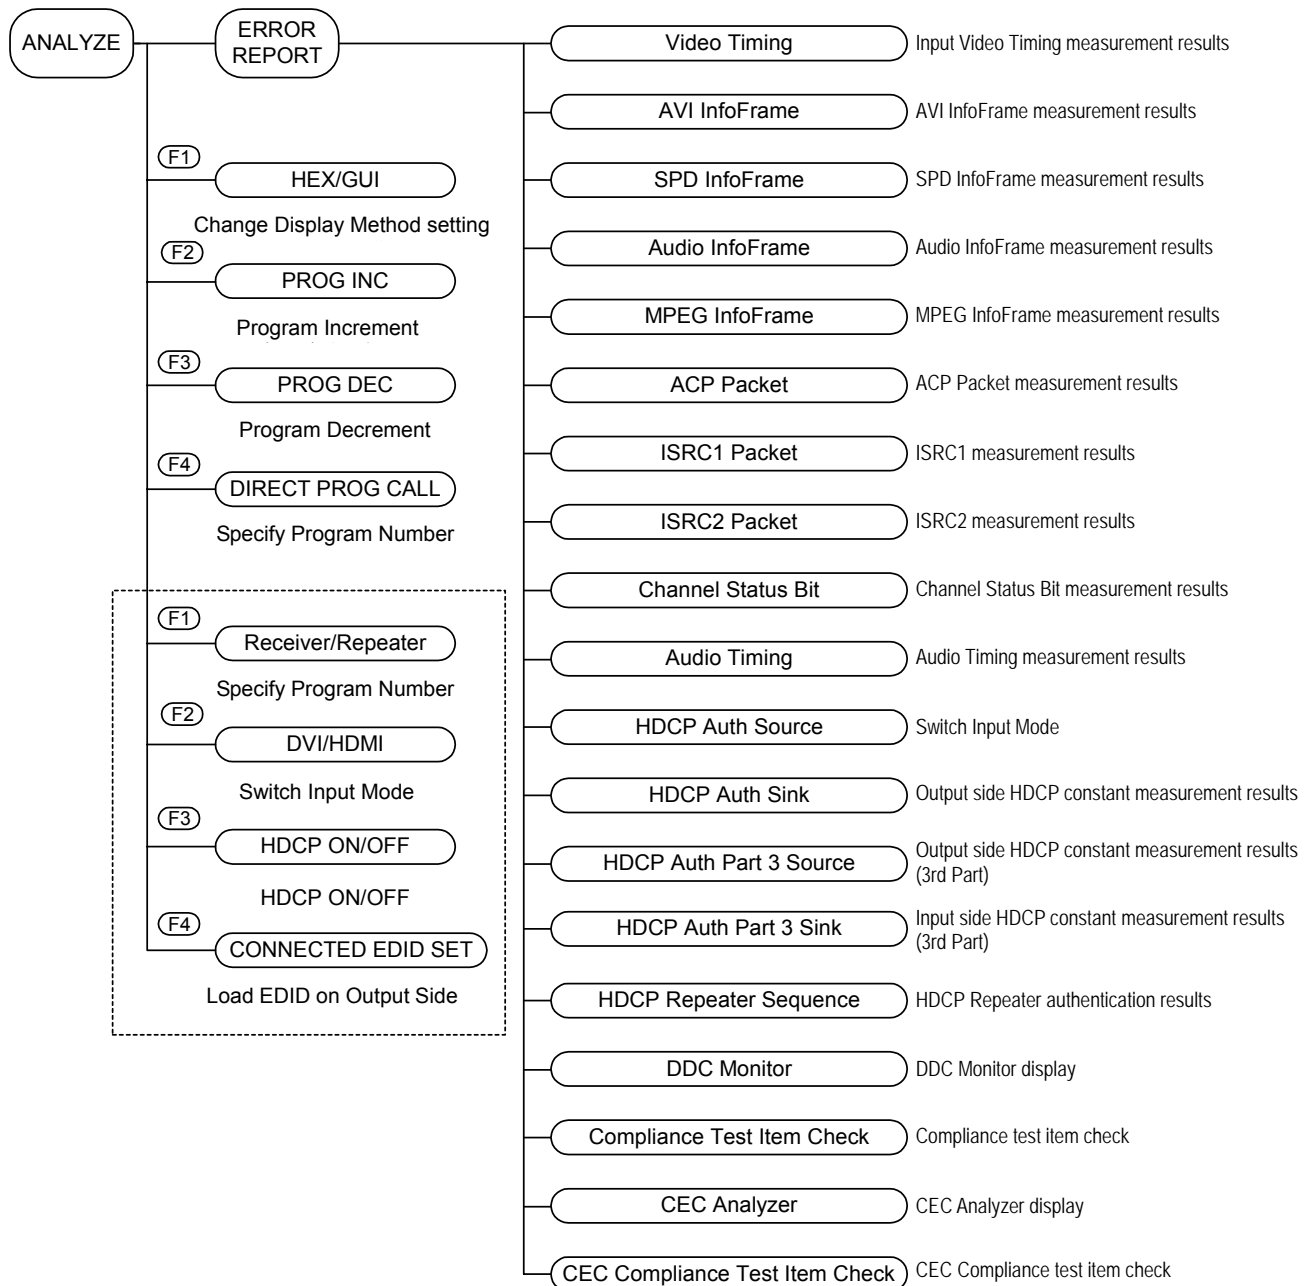

To display the measurement result of each item, perform the following procedure;


OSD hidden state → **ANALYZE** Display ERROR REPORT

→ **Rotary Key** Select and execute each item.

For more information, see the description of each item.

## 4.1 ANALYZE Common Function Keys

The common function keys of the ANALYZE menu are as shown below.

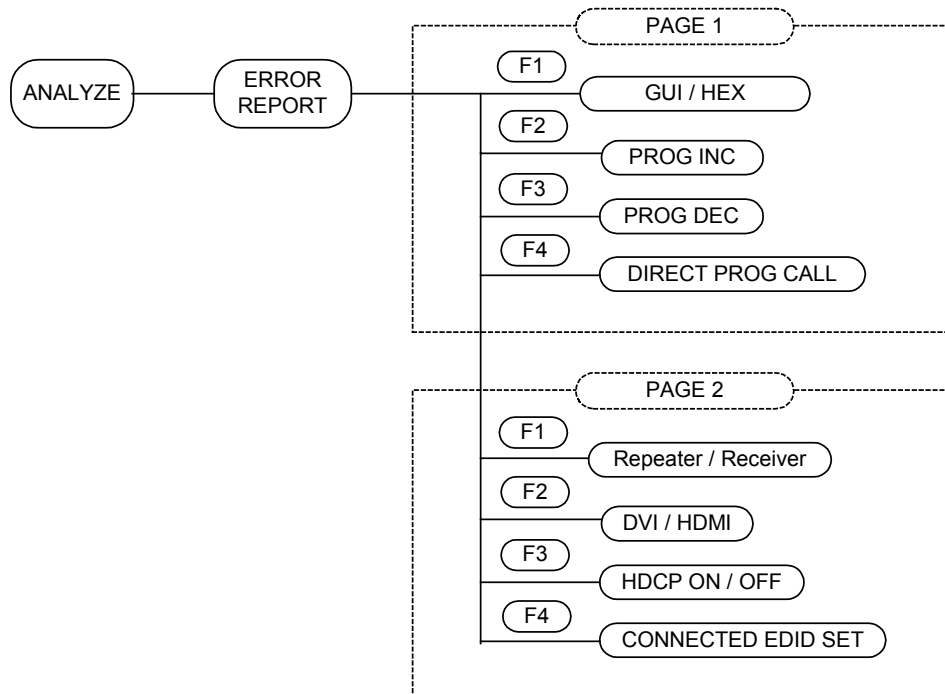

The function keys common to the ANALYZE menu are as follows.

KEY	Description
GUI/HEX	Toggles between GUI display and HEX display.
PROG INC	Increments the program number.
PROG DEC	Decrements the program number.
DIRECT PROG CALL	Directly select a program number, and then execute the corresponding program.
Repeater/Receiver	Toggles the operation mode between Repeater and Receiver.
DVI/HDMI	Toggles the signal format between DVI and HDMI.
HDCP ON/OFF	Turns ON/OFF HDCP.
CONNECTED EDID SET	Reads the EDID of the device at the output destination of the VA-1809, and sets it as the EDID of the VA-1809 main unit.

\* DDC Monitor, Compliance Test Item Check and CEC Analyzer on the ANALYZE menu have special items. For more information about the function keys for these special items, see the following; for DDC Monitor, see page 50, "4.14 DDC Monitor," for Compliance Test Item Check, see page 53, "4.15 Compliance Test Item Check," and for CEC Analyzer, see page 69, "4.16 CEC Analyzer."




### 4.1.1 GUI/HEX


The measurement screen is switched between the GUI display and hexadecimal display on this screen.

While the on-screen display is blank: Select **ANALYZE** ANALYSIS. → **F1** GUI/HEX.

#### GUI display

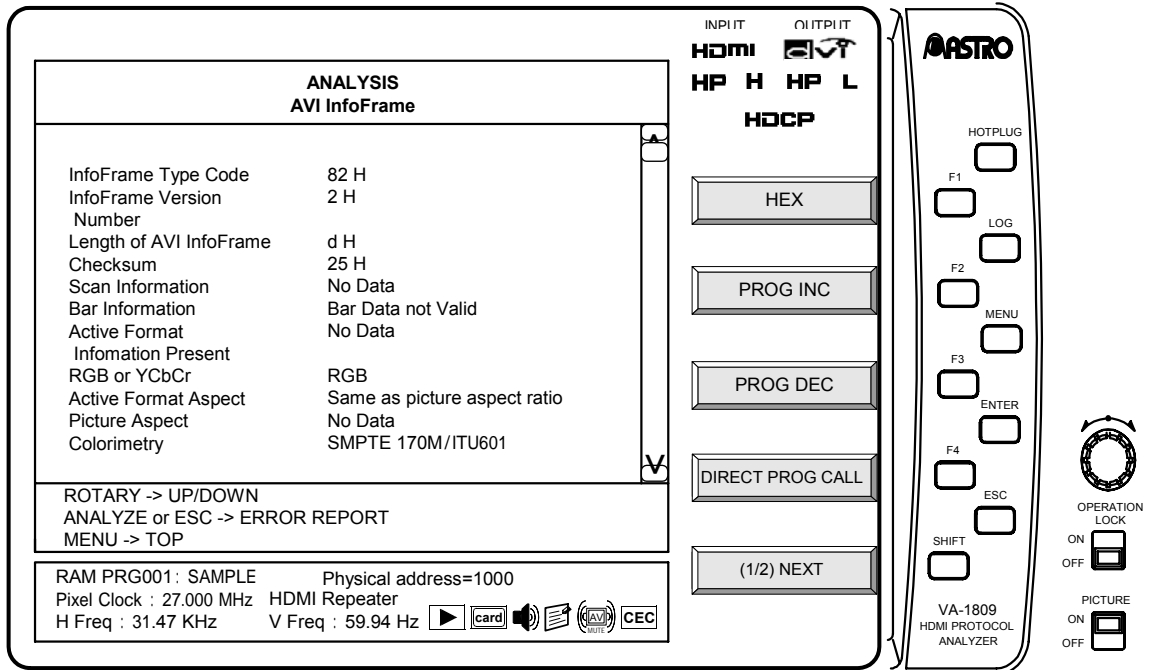

#### HEX display

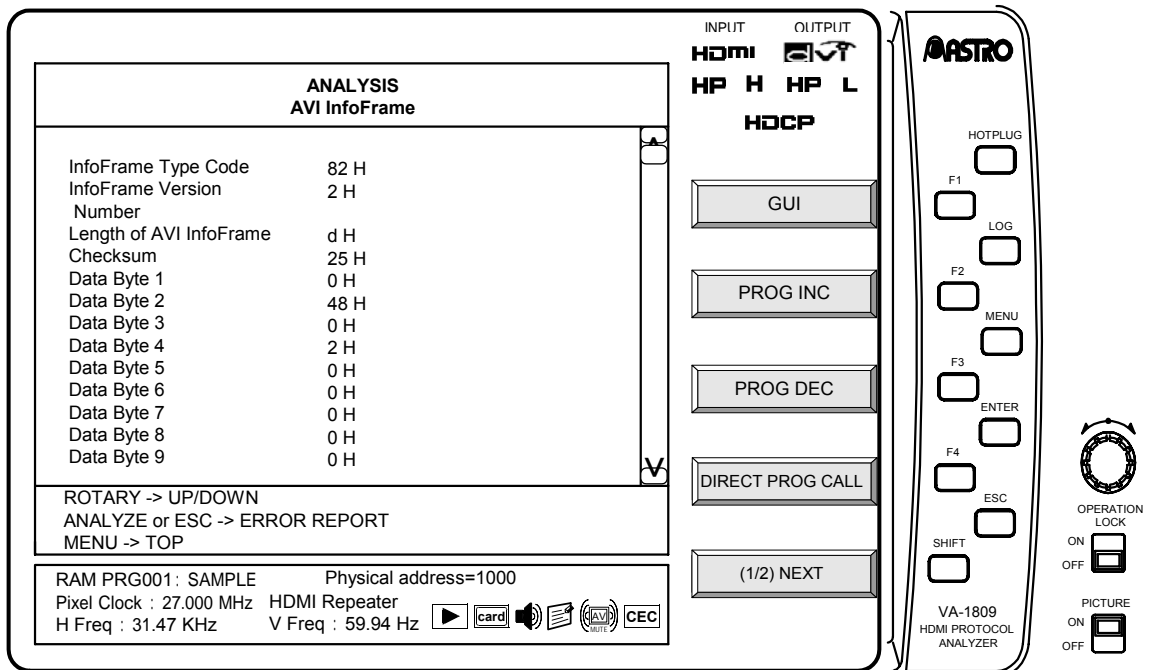

---

#### **4.1.2 PROG INC/PROG DEC/DIRECT PROG CALL**

---

The VA-1809 has device performance information as programs. By toggling between them, it uses a virtual HDMI device. By using the PROG INC, PROG DEC and DIRECT PROG CALL functions keys, the performance of each device can be changed by changing the program number set in the VA-1809.

For more information about program switching, see page 147, “6.1.2 Executing programs (LOAD).”

#### **4.1.3 Repeater/Receiver**

---

This function key toggles the operation mode between Repeater and Receiver. This operation toggles bit 6 of the HDCP register “Bcaps.”

\* It is not reflected in the SINK data.

#### **4.1.4 DVI/HDMI**

---

This function key toggles the receivable signal format between DVI and HDMI. This operation toggles bit 7 of the HDCP register “Bcaps.”

\* It is not reflected in the SINK data.

#### **4.1.5 HDCP ON/OFF**

---

This function key toggles HDCP between receive enabled and receive disabled. This operation enables or disables the HDCP register (device address 0x74).

\* It is not reflected in the SINK data.

#### **4.1.6 CONNECTED EDID SET**

---

This function key sets the EDID data to be identical to that of the device connected to the output destination of the VA-1809.


It does not change if no device is connected to the output destination of the VA-1809.

\* It is not reflected in the EDID data.

## 4.2 Error reports

The ANALYSIS ERROR REPORT screen shows a list indicating an error or no error for each measurement item.

While the on-screen display is blank: Select **ANALYZE** ANALYSIS.

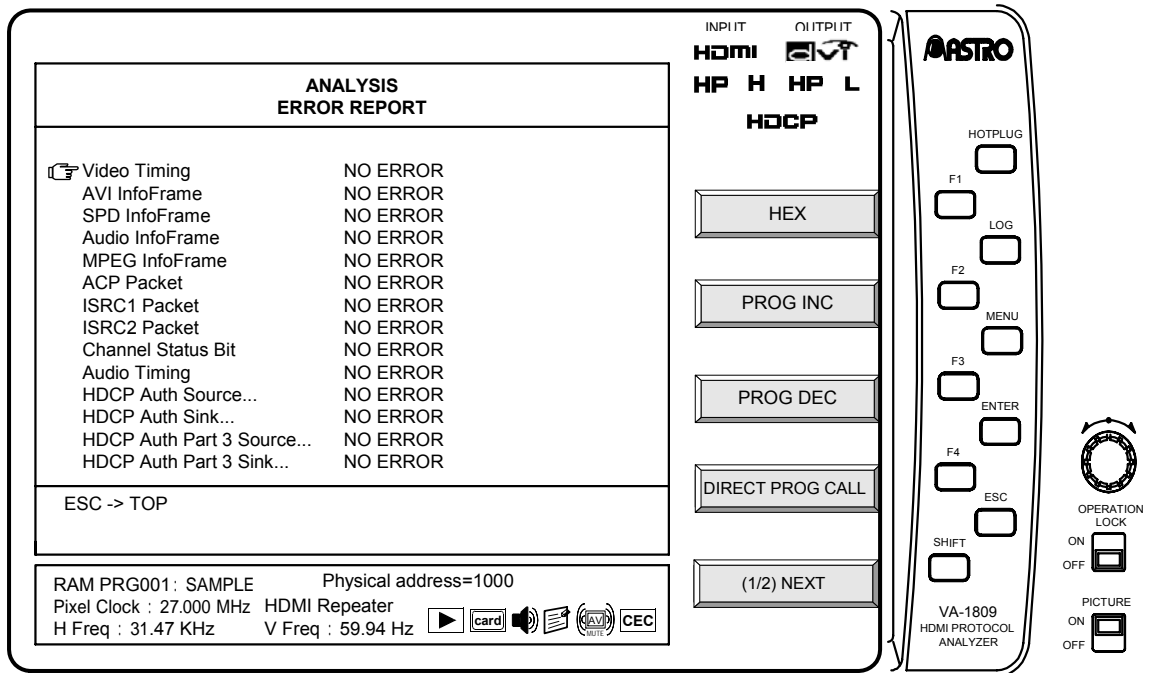


## 4.3 Video Timing

The input timing data is measured.

While the on-screen display is blank: Select **ANALYZE** ANALYSIS.

→ Use the **Rotary key** to select Video Timing.

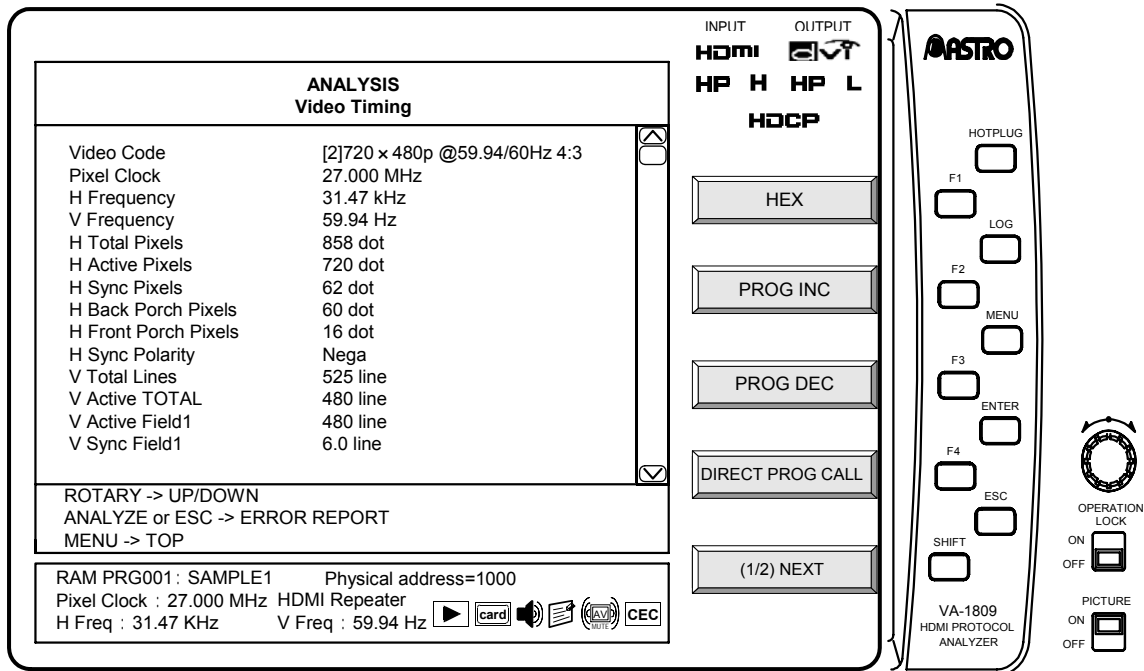

The display items are shown below.

Item	Figure	Details	
Video Code		Refer to "7.4 AVI InfoFrame Video Code tables" on page 186.	
Pixel Clock		Pixel frequency	
H Frequency		HSYNC frequency	
V Frequency		VSYNC frequency	
H Total Pixels	HT	HTOTAL width	
H Active Pixels	HD	HDISP width	
H Sync Pixels	HS	HSYNC width	
H Back Porch Pixels	HB	HSYNC back porch width	
H Front Porch Pixels	HF	HSYNC front porch width	
H Sync Polarity		HSYNC polarity	
V Total Lines	VT	VTOTAL width (1-frame increments)	
V Active TOTAL	VD(VD1+VD2)	VDISP width (1-frame increments)	
V Active Field1	VD(1)	VDISP width	1-frame increments for non-interlacing; value of first field for interlacing.
V Sync Field1	VS(1)	VSYNC width	
V Back Porch Field1	VB(1)	VSYNC back porch width	


Item	Figure	Details	
V Front Porch Field1	VF(1)	VSYNC front porch width	1-frame increments for non-interlacing; value of first field for interlacing.
HV Sync OffSet1		Difference between horizontal and vertical phases	
V Active Field2	VD2	VDISP width of 2nd field during interlacing	
V Sync Field2	VS2	VSYNC width of 2nd field during interlacing	
V Back Porch Field2	VB2	Back porch width of VSYNC of 2nd field during interlacing	
V Front Porch Field2	VF2	Front porch width of VSYNC of 2nd field during interlacing	
HV Sync OffSet2		Difference between horizontal and vertical phases of 2nd field during interlacing	
V Sync Polarity		VSYNC polarity	
Interlace		Interlace or non-interlace	
VESA CODE		VESA standard timing name *1	
EIA CODE		EIA standard timing name *1	
EDID SUPPORT		Supported/Not supported *2	

\* For details on the Video Timing errors, refer to “7.1.1 Video Timing” on page 175.


\* It is not possible to perform measurements correctly if the HDMI signals have been input with a timing that exceeds the limits of the specifications. (Refer to “7.2 ANALYSIS OVER LIMIT (yellow display) table” on page 184.)

\*1 “VESA CODE” and “EIA CODE” display the timing code assumed from the input video data.


\*2 “EDID Support” displays whether the input timing is supported by the EDID set in the VA-1809. (It is determined by DTD of Base Block as well as DTD and SVD of Extension Block.)

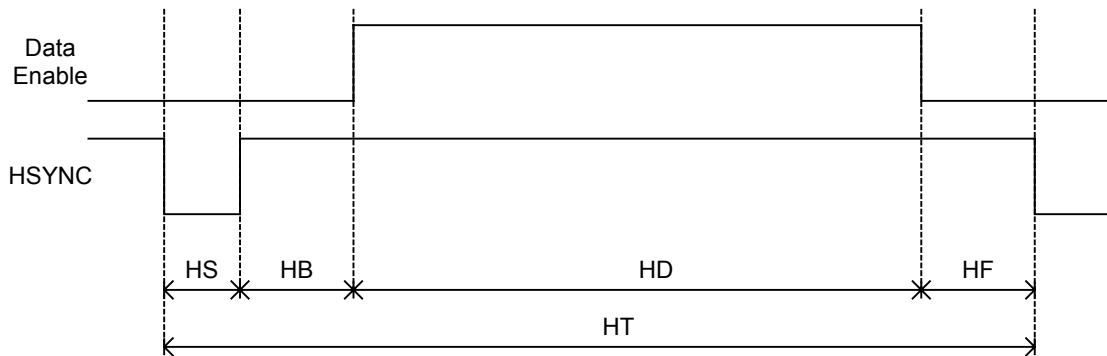

Horizontal sync signal

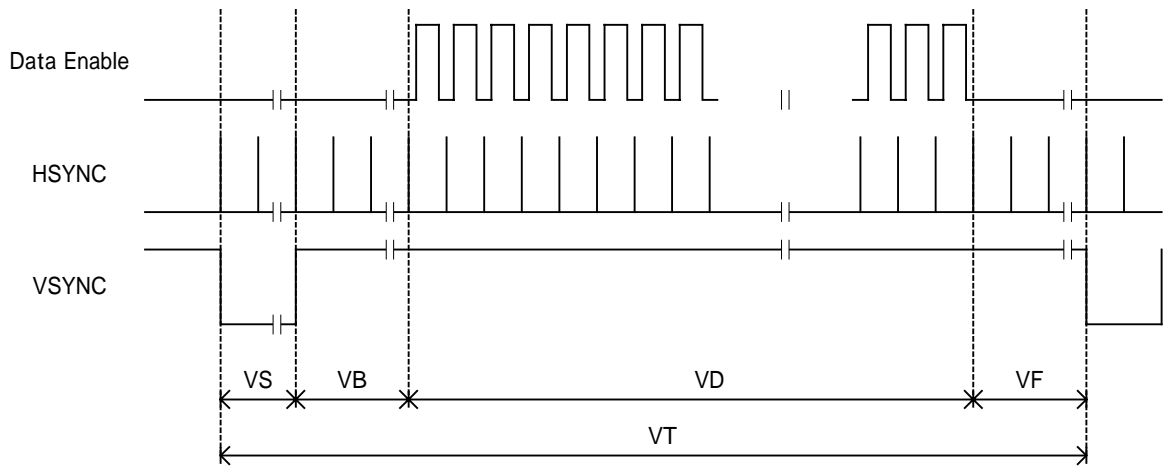

Vertical sync signal (non-interlace)

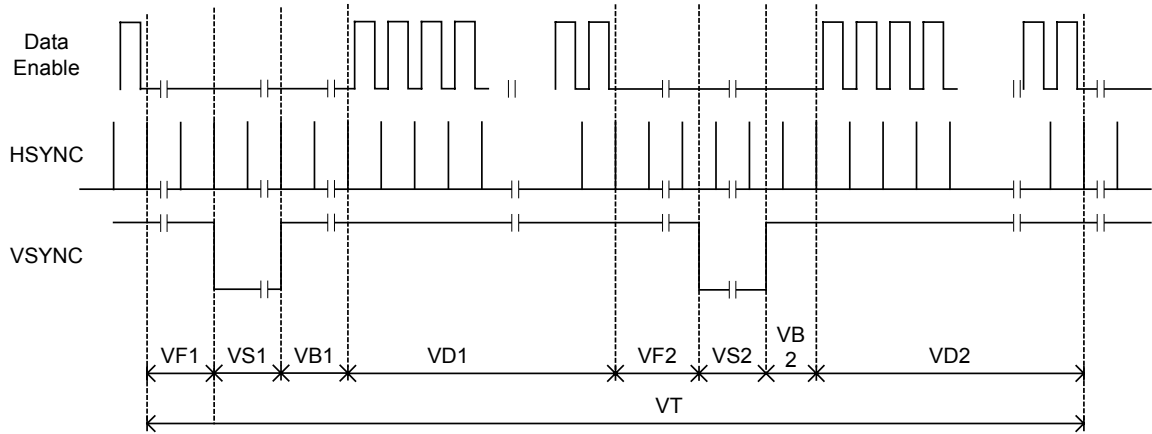


Vertical sync signal (interlace)

## 4.4 AVI InfoFrame

The AVI (= Auxiliary Video Information) InfoFrame data of HDMI inputs is decoded and displayed on this screen. The information on the images output by the transmitter is input as AVI InfoFrame.

While the on-screen display is blank: Select **ANALYZE** ANALYSIS.

→ Use the **Rotary key** to select AVI InfoFrame.

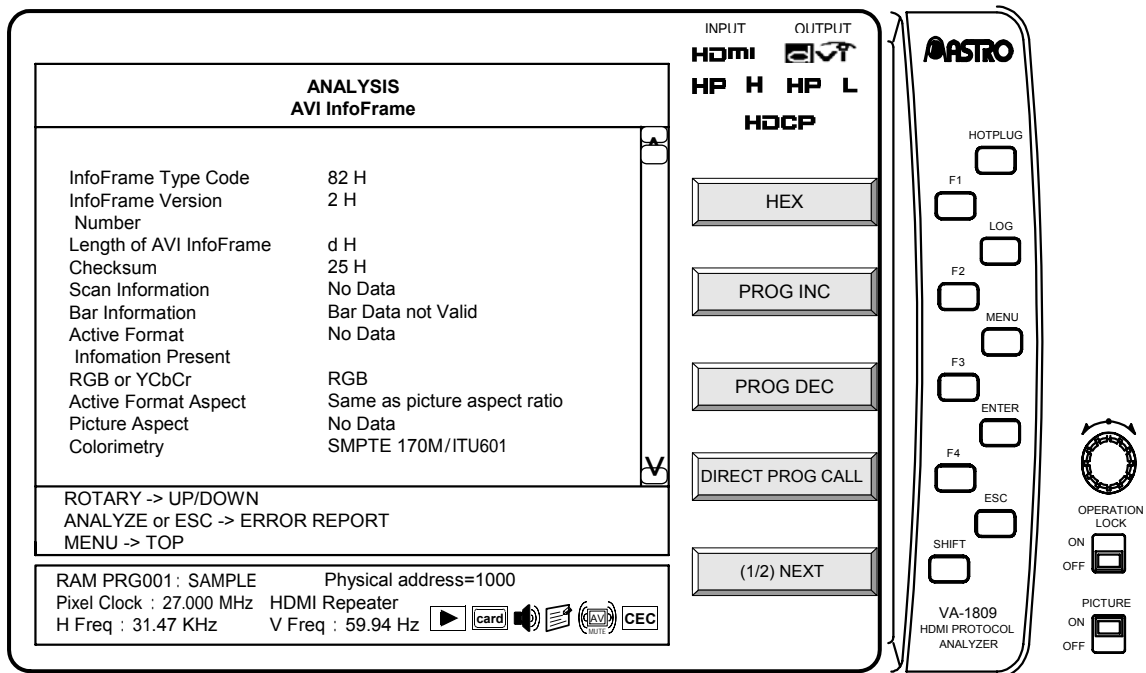

Display details of AVI InfoFrame with the GUI display are listed below.

Display item	Details
InfoFrame Type Code	82 H
InfoFrame Version Number	XX H
Length of AVI InfoFrame	XX H
Scan Information	Overscanned
	Underscanned
	Future
Bar Information	Bar Data not valid
	Vert.Bar Info valid
	Horiz. Bar Info valid
	Vert. and Horiz. Bar Info valid
Active Format Information Present	No Data
	Active Format Information valid
RGB or YCbCr	RGB
	YCbCr4:2:2
	YCbCr4:4:4
	Future

Active Format Aspect	reserved
	box 16:9 (top)
	box 14:9 (top)
	box > 16:9 (center)
	Same as picture aspect ratio
	4:3 (center)
	16:9 (center)
	14:9 (center)
	4:3 (with shoot & protect 14:9 center)
	16:9 (with shoot & protect 14:9 center)
	16:9 (with shoot & protect 4:3 center)
	Picture Aspect
4:3	
16:9	
Future	
Colorimetry	No Data
	SMPTE 170M / ITU601
	ITU709
	Future
Non-uniform Picture Scaling	No Known non-uniform Scaling
	Picture has been scaled horizontally
	Picture has been scaled vertically
	Picture has been scaled horizontally and vertically
Video Code	[X] XXX × XXX @ XXX / XXX Hz X : X
	Reserved
	No Video Code Available
	Refer to “7.4 AVI InfoFrame Video Code tables” on page 186.
Repetition	No Repetition
	pixel sent X times
	Reserved
Line Number of End of Top Bar	0 to 65535
Line Number of Start of Bottom Bar	0 to 65535
Pixel Number of End of Top Bar	0 to 65535
Pixel Number of Start of Bottom Bar	0 to 65535

\* For details on the AVI InfoFrame errors, refer to “7.1.2 AVI InfoFrame” on page 176.




## 4.5 SPD InfoFrame

The SPD (= Source Product Description) InfoFrame data of HDMI inputs is decoded and displayed on this screen. The information of the transmitter is input as SPD InfoFrame.

While the on-screen display is blank: Select **ANALYZE** ANALYSIS.

→ Use the **Rotary key** to select SPD InfoFrame.

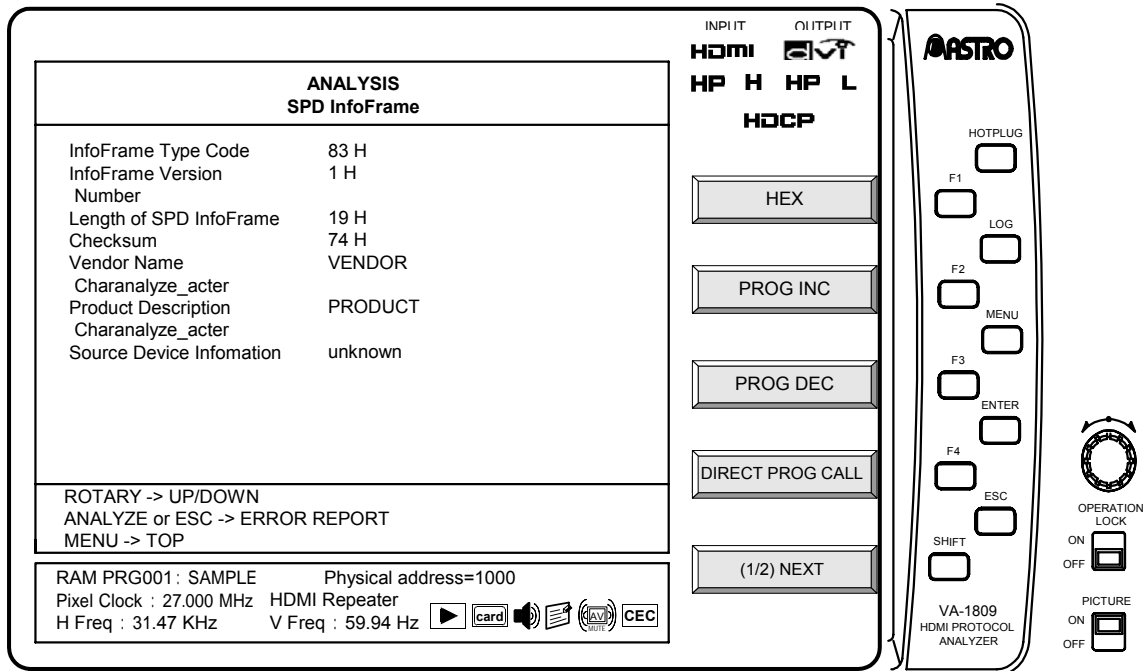

Display details of SPD InfoFrame with the GUI display are listed below.

Display item	Details
InfoFrame Type Code	83 H
InfoFrame Version Number	XX H
Length of SPD InfoFrame	XX H
Checksum	
Vendor Name Charanalyze_acter	(8 characters)
Product Description Charanalyze_acter	(16 characters)
Source Device Information	unknown
	Digital STB
	DVD
	D-VHS
	HDD Video
	DVC
	DSC
	Video CD
	Game
	PC general
	Blu-Ray Disc
	Super Audio CD
	Reserved


\* For details on the SPD InfoFrame errors, refer to “7.1.3 SPD InfoFrame” on page 176.

## 4.6 Audio InfoFrame

The Audio InfoFrame data of HDMI inputs is decoded and displayed on this screen. The information on the sound output by the transmitter is input as Audio InfoFrame. The input Audio InfoFrame is decoded and displayed.

While the on-screen display is blank: Select **ANALYZE** ANALYSIS.

→ Use the **Rotary key** to select Audio InfoFrame.

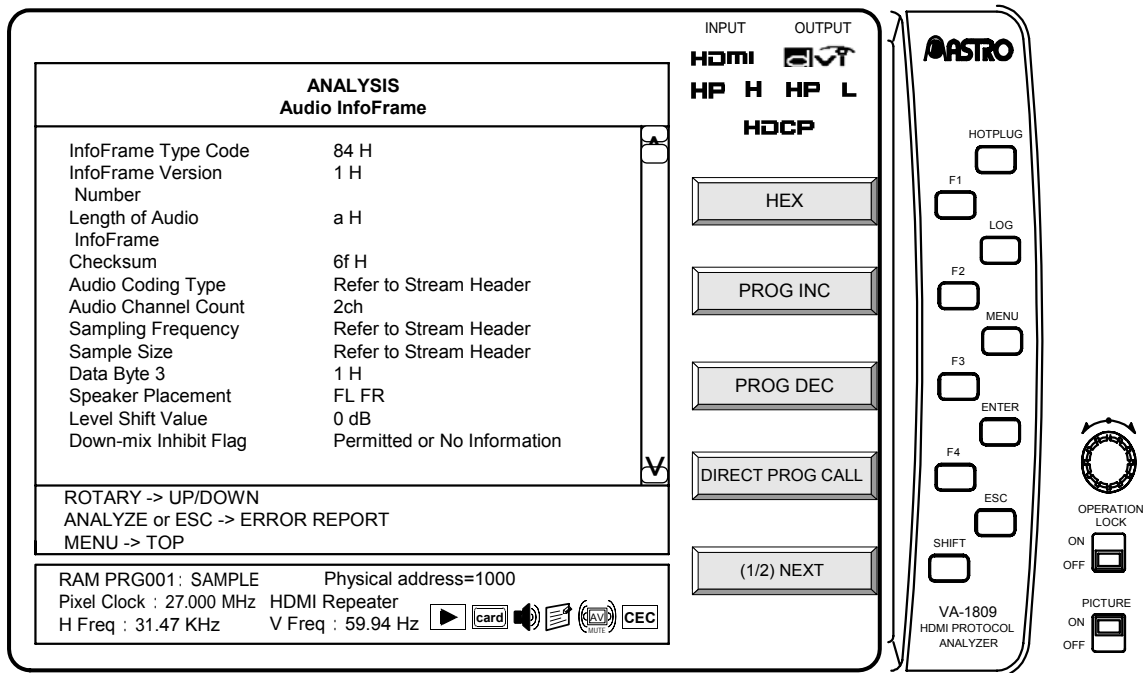

Display details of Audio InfoFrame with the GUI display are listed below.

Display item	Details
InfoFrame Type Code	XX H
InfoFrame Version Number	XX H
Length of Audio InfoFrame	XX H
Checksum	
Audio Coding Type	Refer to Stream Header
	IEC60958 PCM
	AC-3
	MPEG1(Layers 1 & 2)
	MP3(MPEG1 Layer 3)
	MPEG2(multichannel)
	AAC
	DTS
	ATRAC
	One Bit Audio
	Dolby Digital
	DTS-HD
	MLP

	Reserved
Audio Channel Count	Refer to Stream Header
	2 - 8ch
Sampling Frequency	Refer to Stream Header
	32 kHz
	44.1 kHz
	48 kHz
	88.2 kHz
	96 kHz
	176.4 kHz
Sample Size	Refer to Stream header
	16 bit
	20 bit
	24 bit
Data Byte 3	XX H
Speaker Placement	FRC FLC RR RL FC LFE FR FL (Refer to Written Standards)
	Reserved
Level Shift Value	0 - 15dB
Down-mix Inhibit Flag	Permitted or No information
	Prohibited


- \* "Stream Header" refers to the Channel Status Bit. For details on the Channel Status Bit measurement result display, refer to "4.11 Channel Status Bit" on page 40.
- \* For details on the Audio InfoFrame errors, refer to "7.1.4 Audio InfoFrame" on page 177.

## 4.7 MPEG InfoFrame

The MPEG InfoFrame data of HDMI inputs is decoded and displayed on this screen. If the images sent by the transmitter have been obtained by converting them from compressed images, the information on the compressed images is input as MPEG InfoFrame.

While the on-screen display is blank: Select **ANALYZE** ANALYSIS.

→ Use the **Rotary key** to select MPEG InfoFrame InfoFrame).

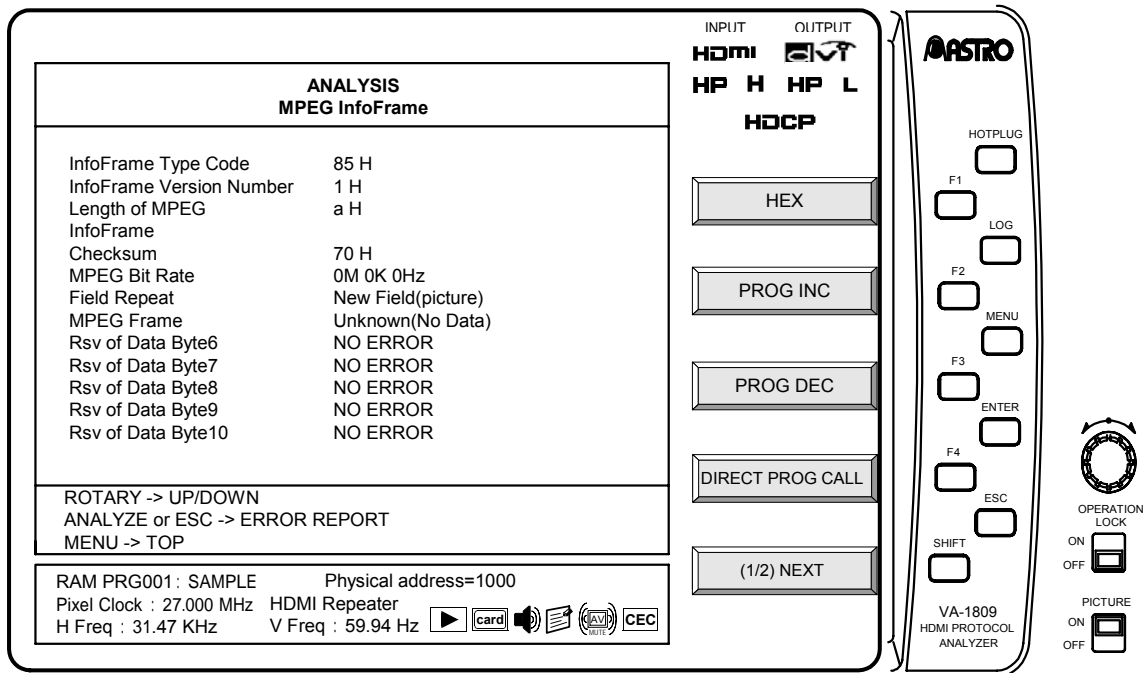

Display details of MPEG InfoFrame with the GUI display are listed below.

Display item	Details
InfoFrame Type Code	85 H
InfoFrame Version Number	XX H
Length of MPEG InfoFrame	XX H
MPEG Bit Rate	X M XXX k XXXX Hz
Field Repeat	Ner Field (picture)
	Repeated Field
MPEG Frame	Unkown (No Data)
	1 Picture
	B Picture
	P Picture


\* For details on the MPEG InfoFrame errors, refer to "7.1.5 MPEG InfoFrame" on page 178.

## 4.8 ACP Packet

The ACP (= Audio Content Protection) Packet data of HDMI inputs is decoded and displayed on this screen. Information for protecting the copyrights of the sound sent by the transmitter is input as the ACP packet.

While the on-screen display is blank: Select **ANALYZE** ANALYSIS.

→ Use the **Rotary key** to select ACP Packet.

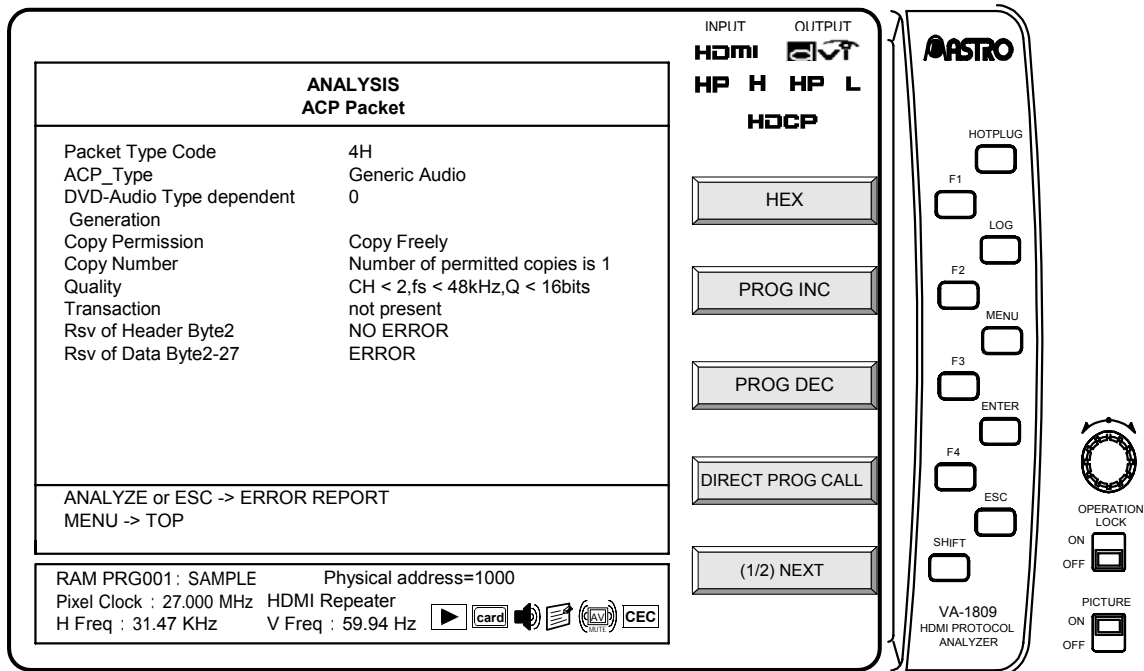

Display details of ACP Packet with the GUI display are listed below.

\*2 is displayed when Super Audio CD is selected as the ACP Type setting; \*1 is displayed when any other setting is selected for ACP Type.

Display item	Details
Packet Type Code	04 H
ACP_Type	Generic Audio *1
	IEC60958-Identified Audio *1
	DVD Audio *1
	Super Audio CD *2
	Reserved *1
*1 DVD-Audio_Type_dependent_Generation	XX H
Copy_Permission	Copying is permitted without restriction (Copy Freely)
	reserved for copyright management system use
	Copying is permitted per "audio_copy_number" as specified below
	No more copies are permitted unless exceptional conditions are provided by a copyright management system

Copy_Number	Number of permitted copies is '1'	
	Number of permitted copies is '2'	
	Number of permitted copies is '4'	
	Number of permitted copies is '6'	
	Number of permitted copies is '8'	
	Number of permitted copies is '10'	
	Number of permitted copies is '3'	
	Number of permitted copy is not restricted. (Copy One Generation)	
Quality	CH < 2, fs < 48kHz, Q < 16bits	
	CH < 2, fs&Q = not restricted	
	CH&fs&Q = not restricted	
	CH = not restricted, fs < 48kHz, Q < 16bits	
Transaction	not present	
	reserved for copyright management system use	
*2	Count_A	XX times
	Count_S	XX times
	Count_U	XX times
CCI_Flags Q_A	CD Quality	
	unlimited DSD quality	
CCI_Flags Q_S	CD Quality	
	unlimited DSD quality	
CCI_Flags Q_U	CD Quality	
	unlimited DSD quality	
CCI_Flags Move_A	not allowed for the content	
	allowed for the content	
CCI_Flags Move_S	not allowed for the content	
	allowed for the content	
CCI_Flags Move_U	not allowed for the content	
	allowed for the content	
CCI_Flags Reserved	NO ERROR	
	ERROR	
CCI Rsv of Data Byte5-16	NO ERROR	
	ERROR	
Rsv of Data Byte17-27	NO ERROR	
	ERROR	


\* For details on the ACP Packet errors, refer to "7.1.6 ACP Packet" on page 178.

## 4.9 ISRC1 Packet

HDMI The ISRC1 (= International Standard Recording Code) Packet data of HDMI inputs is decoded and displayed on this screen. If the sound sent by the transmitter is DVD Audio, the sound source identification code is input. For ISRC1, a UPC EAN ISC number from 0 to 15 as defined under the DVD Audio standard is used in addition to the value defined by the HDMI standard.

While the on-screen display is blank: Select **ANALYZE** ANALYSIS.

→ Use the **Rotary** key to select ISRC1 Packet.

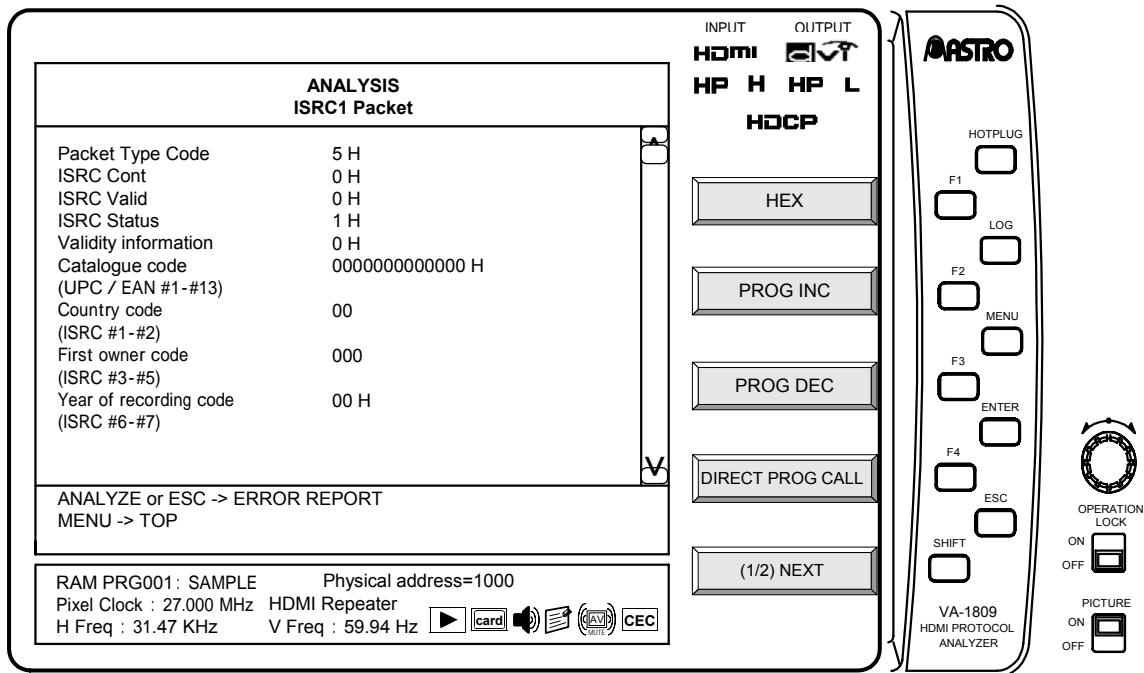

Display details of ISRC1 Packet with the GUI display are listed below.

Display item	Details
Packet Type Code	05H
ISRC_Cont	XX H
ISRC_Valid	XX H
ISRC_Status	XX H
Validity information	0H UPC/EAN and ISRC are invalid
	4H UPC/EAN is invalid and ISRC is valid
	8H UPC/EAN is valid and ISRC is invalid
	CH UPC/EAN and ISRC are valid
Catalogue code (UPC/EAN #1 - #13)	XXXXXXXXXXXXX H
Country code (ISRC #1 - #2)	XX
First owner code (ISRC #3 - #5)	XXX
Year of recording code (ISRC #6 - #7)	XX H
Recording code (Recording-item code)	XXXXXH
Rsv of Header Byte1	

Rsv of Header Byte2	
Rsv of Data Byte16-27	
NO ISRC1 Packet	

\* For details on the ISRC1 Packet errors, refer to “7.1.7 ISRC1 Packet” on page 178.




## 4.10 ISRC2 Packet

The ISRC2 Packet data of HDMI inputs is decoded and displayed on this screen. For ISRC2, a UPC EAN ISC number from 16 to 31 as defined under the DVD Audio standard is used. (Currently, "Reserve" is the status of this number under the DVD Audio standard.)

While the on-screen display is blank: Select **ANALYZE** ANALYSIS.

→ Use the **Rotary key** to select ISRC2 Packet.

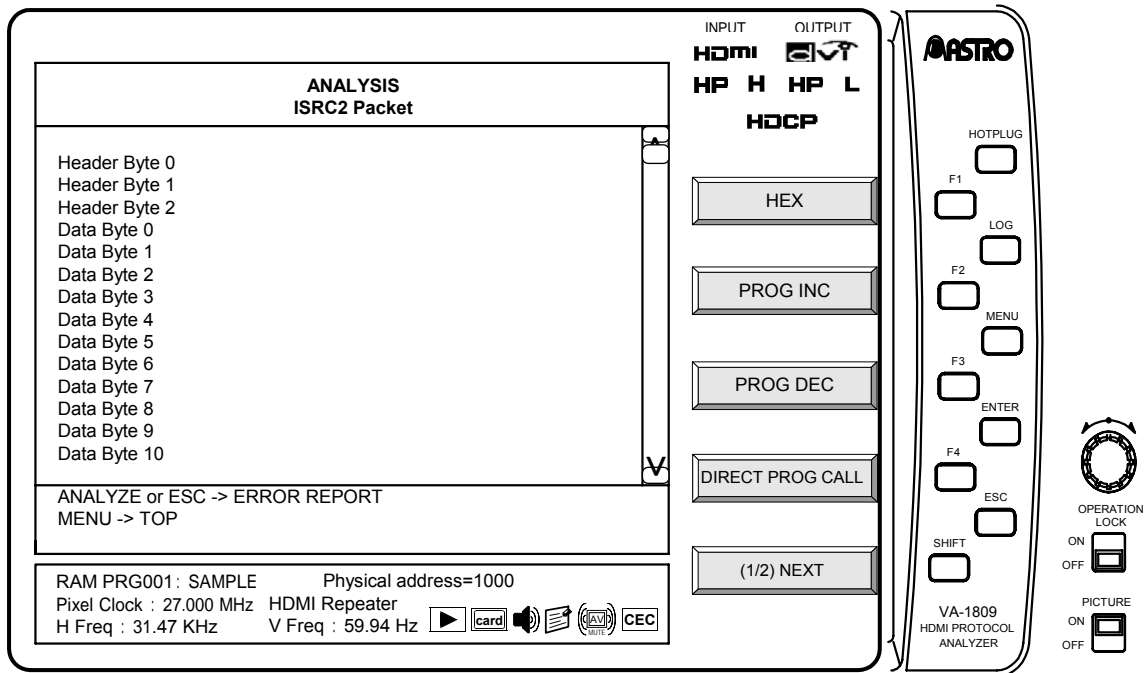

Display details of ISRC2 Packet with the GUI display are listed below.

Display item	Details
Header Byte0	06H
Header Byte1-2	XXH for each byte
Data Byte1-16	XXH for each byte


\* For details on the ISRC2 Packet errors, refer to "7.1.8 ISRC2 Packet" on page 179.

## 4.11 Channel Status Bit

The Channel Status Bit (a subcode enabling the transmitting device, sampling frequency and other specifications to be ascertained) in the audio streams of HDMI inputs is decoded and displayed on this screen.

While the on-screen display is blank: Select **ANALYZE** ANALYSIS.

→ Use the **Rotary key** to select Channel Status Bit.

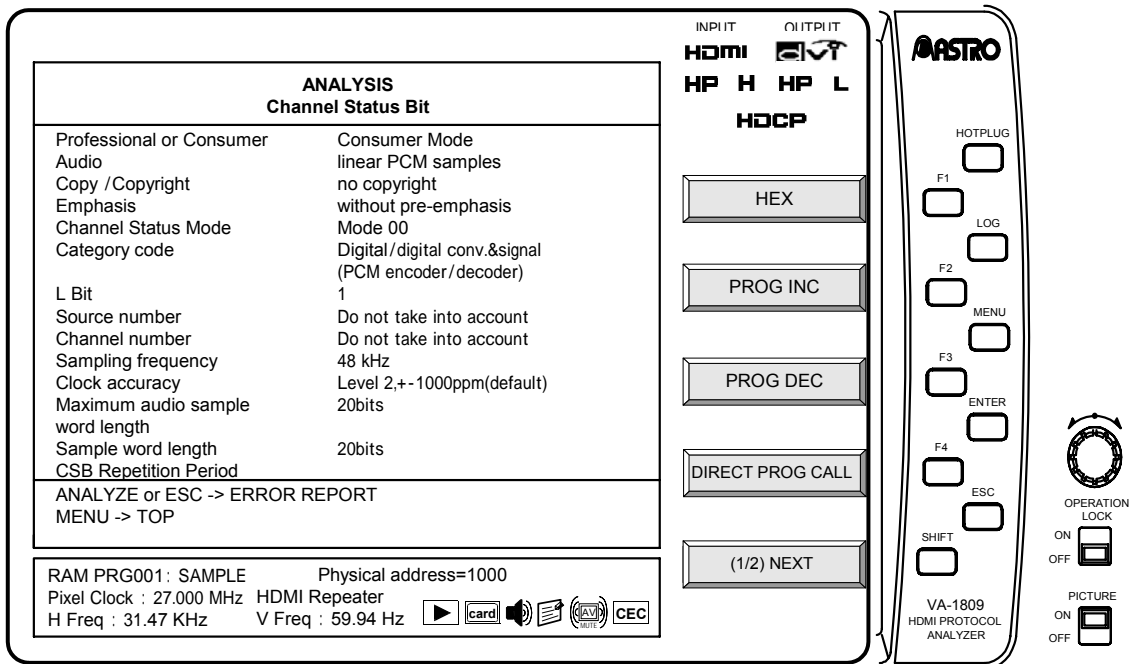

Display details of Channel Status Bit with the GUI display are listed below.

Display item	Details
Professional or Consumer	Professional Mode
	Consumer Mode
Audio	linear PCM samples
	other than linear PCM samples
Copy / Copyright	copyright
	no copyright
Emphasis	Audio = Linear PCM samples
	without pre-emphasis
	with 50/15 us pre-emphasis
	Reserved – 2channel audio
	Reserved – 4channel audio
	Audio = other than Linear PCM samples
	Default state
Channel Status Mode	Mode 00
	Reserved
Category code	General. Used temporarily

	Compact disc digital audio signal compatible with IEC 60958
	Laser optical digital audio systems for which no other category code is defined
	Mini disc system
	Digital versatile disc
	PCM encoder/decoder
	Digital signal mixer
	Sampling rate converter
	Digital sound sampler
	Digital sound processor
	DAT
	Video tape recorder with digital sound
	Digital compact cassette
	Digital audio broadcast signal with or without a video signal ( Japan )
	Digital audio broadcast signal with or without a video signal ( Europe )
	Digital audio broadcast signal with or without a video signal ( USA )
	Electronic software delivery
	Synthesizer
	Microphone
	A/D converter
	Reserved
L(Generation Status) Bit	0 - 1
Source number	Do not take into account.
	1 - 15 CH
Channel number	Do not take into account.
	A - O (0x1:A; 0x2:B; ..... 0xF:O)
Sampling frequency	32kHz
	44.1kHz
	48kHz
	88.2kHz ( - HDMI Original )
	96kHz ( - HDMI Original )
	176.4kHz ( - HDMI Original )
	192kHz ( - HDMI Original )
	Reserved
Clock accuracy	Level 2, $\pm 1000$ ppm (default)
	Level 3, variable pitch
	Level 1, $\pm 50$ ppm - high accuracy
	Reserved
Maximum audio sample word length	20bits
	24bits
Sample word length	Maximum audio sample word length = 20 bit
	Word length not indicated (default )
	20bits

22bits
23bits
24bits
21bits
Reserved
Maximum audio sample word length = 24 bit
Word length not indicated (default )
16bits
18bits
19bits
20bits
17bits
Reserved


\* For details on the Channel Status Bit errors, refer to “7.1.9 Channel Status Bit” on page 179.

## 4.12 Audio Timing

The constants (N, CTS), which are used for playing the audio clock of HDMI inputs from the video pixel clock, and the HDMI audio volume are displayed on this screen.

While the on-screen display is blank: Select **ANALYZE** ANALYSIS.

→ Use the **Rotary key** to select Audio Timing.

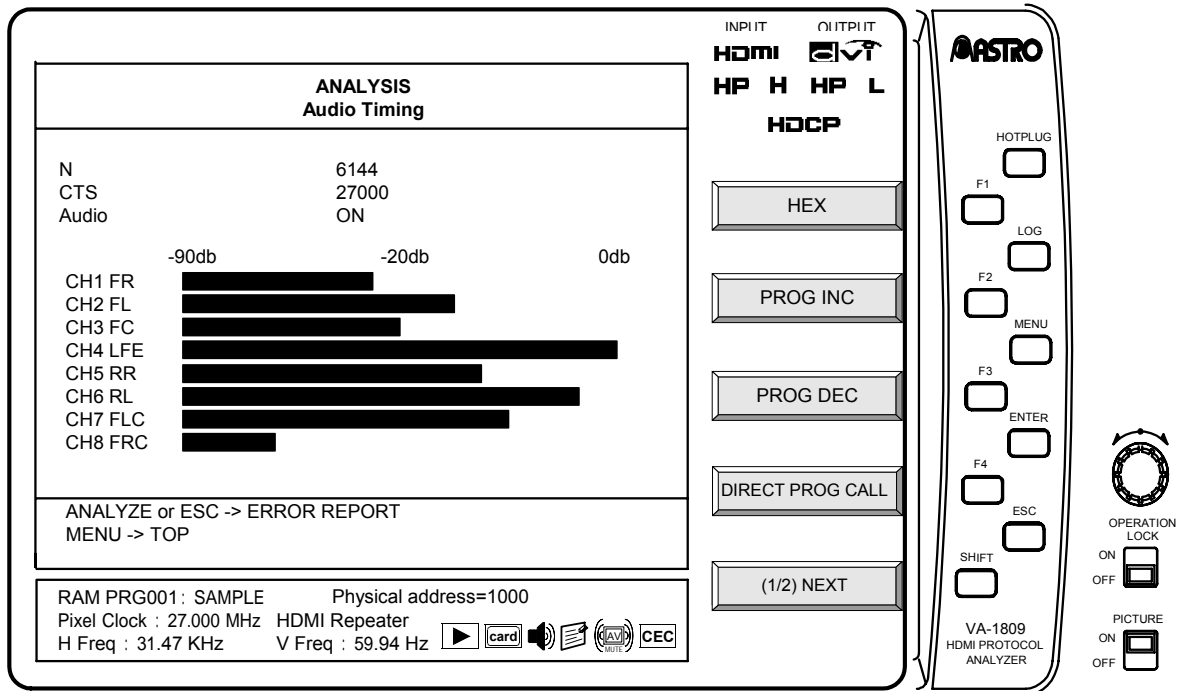

Display details of Audio Timing with the GUI display are listed below.

Display item	Details
N	Display of register values (DEC)
CTS	
CH1	Volume of each channel
CH2	
CH3	
CH4	
CH5	
CH6	
CH7	
CH8	

\* For details on the Audio Timing errors, refer to "7.1.10 Audio Timing" on page 179.

## 4.13 HDCP


Each constant used when authenticating HDCP on the HDMI receiving side is displayed.

### 4.13.1 HDCP Authentication Source -> VA-1809

The constants which are used when HDCP is authenticated at the HDMI reception end are displayed on this screen.

While the on-screen display is blank: Select **ANALYZE** ANALYSIS.

→ Use the **Rotary key** to select HDCP.

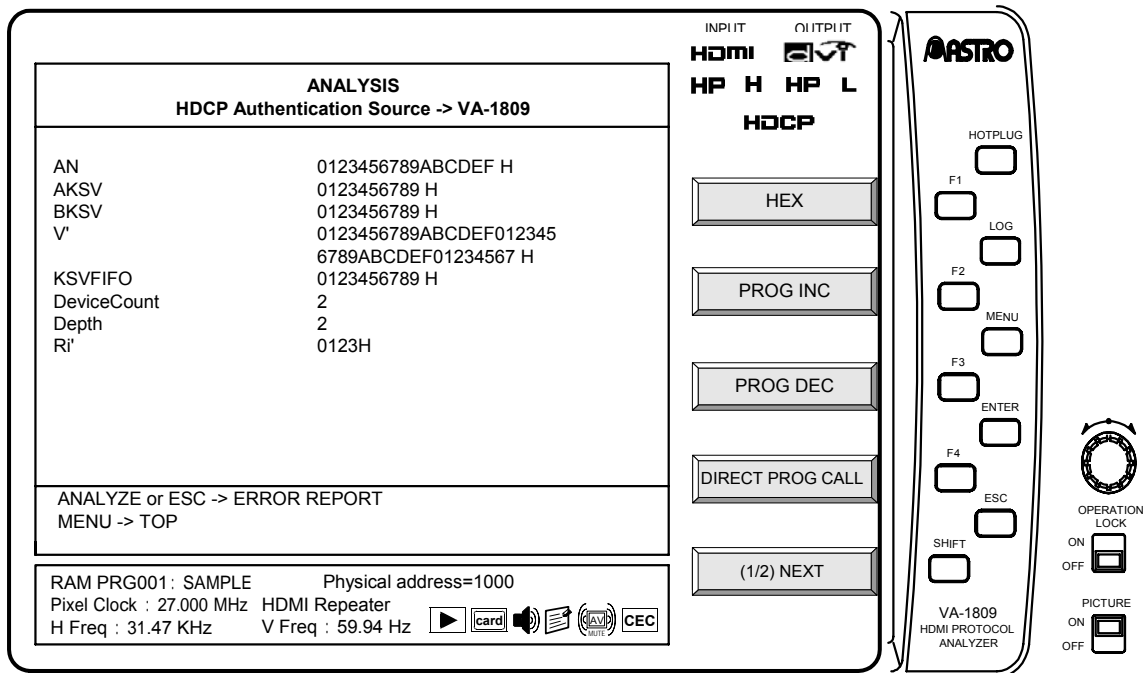


Display details of HDCP with the GUI display are listed below.

Display item	Details
AN	Pseudo random value sent from the transmitter to the VA-1809 that is used to authenticate HDCP
AKSV	Key Selection Vector on the transmitting side
BKSV	Key Selection Vector of the VA-1809
V'	Value for determining whether the KSV list generated by the VA-1809 is valid *
KSVFIFO	Value of the KSV of the receiver/repeater connected to the downstream collected by the VA-1809 *
DeviceCount	Total number of devices connected to the downstream *
Depth	Total number of levels connected to the downstream *
Ri'	Authentication value calculated by the VA-1809

\* Displayed only for the repeater.

\* The definitions of the upstream and downstream viewed from the VA-1809 are as follows.

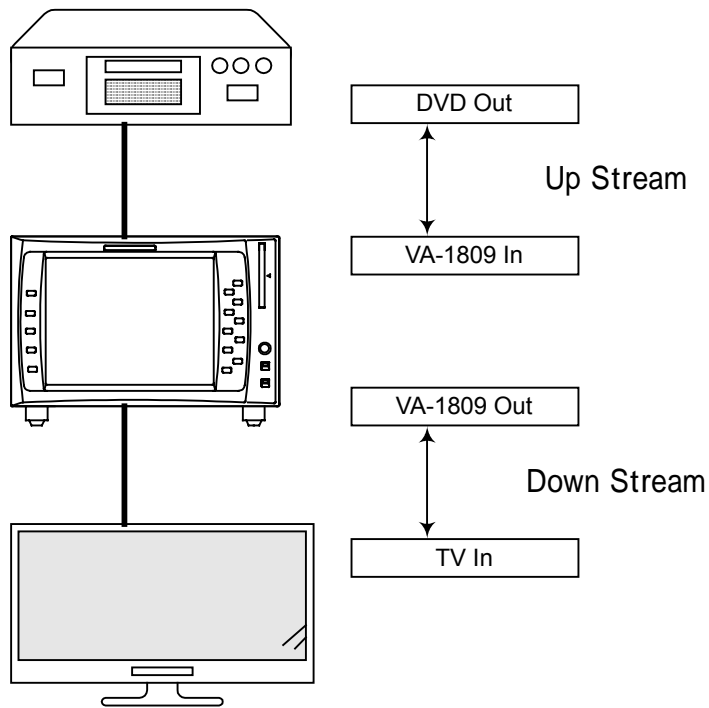

### 4.13.2 HDCP Authentication VA-1809 -> Sink

Each constant exchanged on the downstream side can be displayed among authentications of HDCP.

OSD hidden state → **ANALYZE** → **Rotary Key** Select and execute HDCP Auth Sink.

The screenshot shows the OSD menu for HDCP authentication. The menu is titled "ANALYSIS" and "HDCP Authentication VA-1809 -> Sink". It displays the following data:

AN	0123456789ABCDEF H
AKSV	0123456789 H
BKSV	0123456789 H
V'	0123456789ABCDEF012345 6789ABCDEF01234567 H
KSVFIFO	0123456789 H
DeviceCount	2
Depth	2
Ri	0123 H
Ri'	0123 H

Below the data, there are options: "ANALYZE or ESC -> ERROR REPORT" and "MENU -> TOP". At the bottom, system information is displayed: "RAM PRG001 : SAMPLE Physical address=1000", "Pixel Clock : 27.000 MHzHDMI Repeater", "H Freq : 31.47 KHz V Freq : 59.94 Hz", and icons for card, mute, and CEC.

The right side of the screen shows the physical controls of the device, including buttons for HOTPLUG, F1, LOG, F2, MENU, F3, ENTER, F4, ESC, SHIFT, and a rotary key. The device is labeled "VA-1809 HDMI PROTOCOL ANALYZER".

The display contents of HDCP during GUI display are as follows.


Display item	Details
AN	Pseudo random value sent from the VA-1809 to the receiver that is used to authenticate HDCP
AKSV	Key Selection Vector of the VA-1809
BKSV	Key Selection Vector on the receiving side
V'	Value for determining whether the KSV list generated by the receiver is valid *
KSVFIFO	Value of the KSV of the receiver/repeater connected to the downstream collected by the receiver *
DeviceCount	Total number of devices connected to the downstream *
Depth	Total number of levels connected to the downstream *
Ri	Authentication value calculated by the receiver
Ri'	Authentication value calculated by the VA-1809

### 4.13.3 HDCP Authentication Part 3 Source -> VA-1809

Among authentications of HDCP, the constant (Ri') used for Part 3 (verification of whether HDCP encoding and decoding are performed correctly) is displayed consecutively on the upstream side.

OSD hidden state → **ANALYZE**

→ **Rotary Key** Select and execute HDCP Auth Part 3 Source.

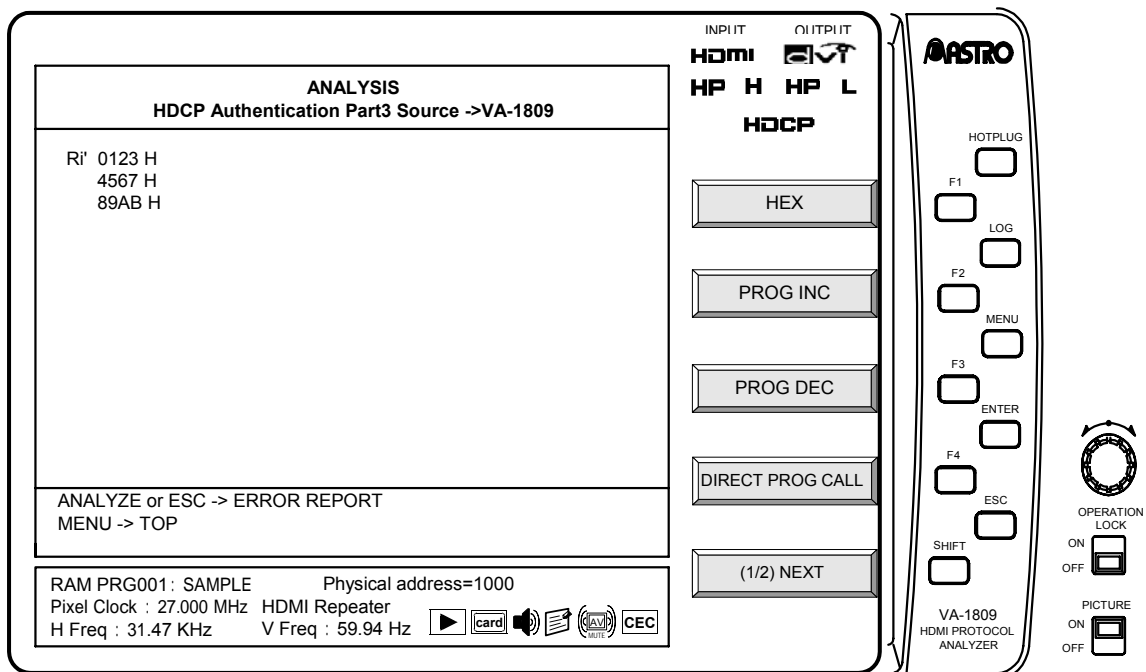




### 4.13.4 HDCP Authentication Part 3 VA-1809 -> Sink

Among authentications of HDCP, the constants (Ri, Ri') used for Part 3 (verification of whether HDCP encoding and decoding are performed correctly) are displayed consecutively on the downstream side.

OSD hidden state → **ANALYZE** → **Rotary Key** Select and execute HDCP Auth Part 3 Sink.

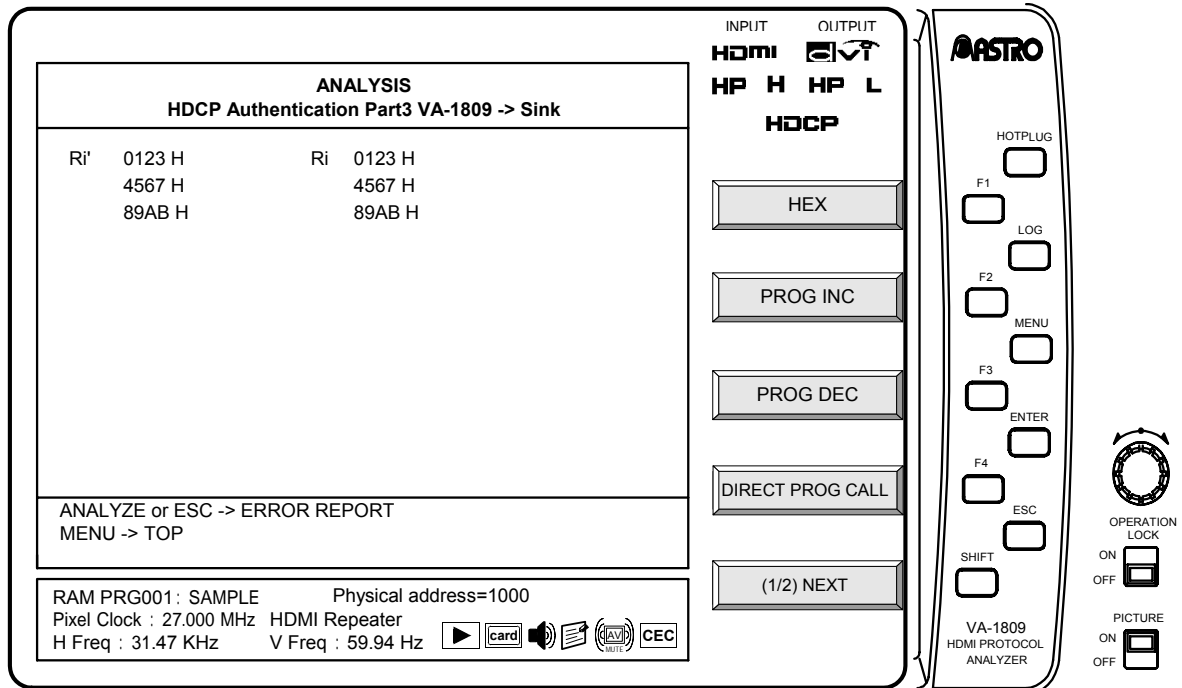


## 4.13.5 HDCP Repeater Sequence Check

The result of each authentication processing between sink devices is displayed when a repeater is set.

OSD hidden state → **ANALYZE**

→ **Rotary Key** Select and execute HDCP Repeater Sequence Check.

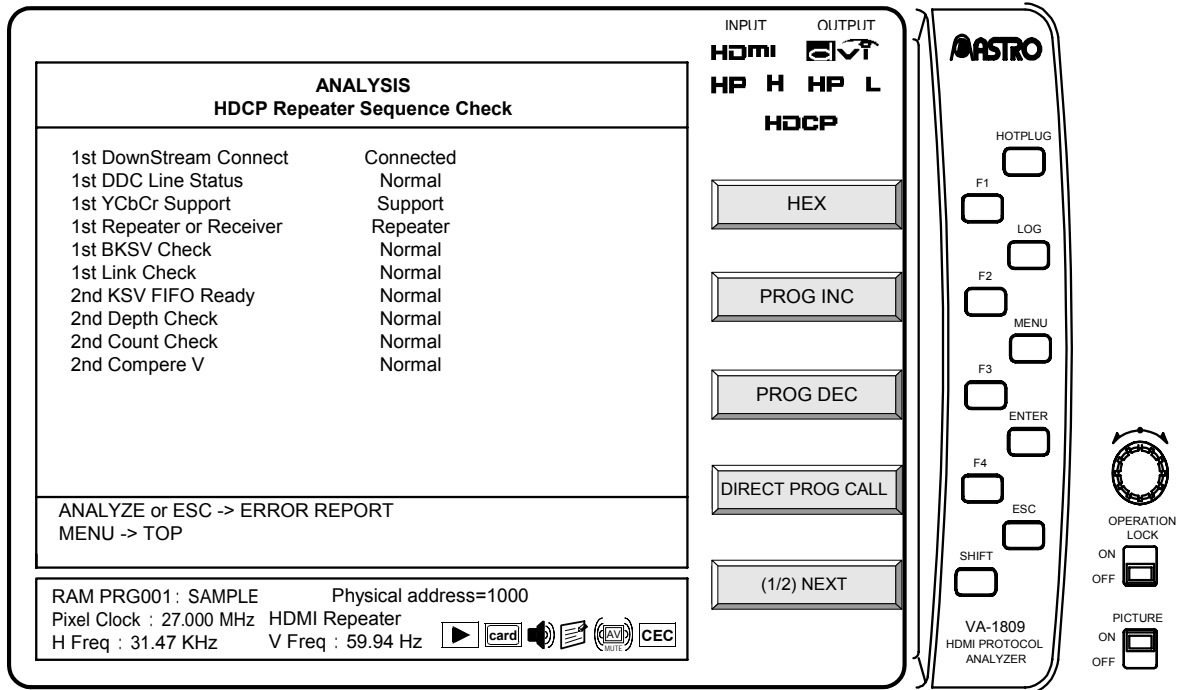

Display item	Description
1st Down Stream Connect	Check whether a sink device is connected to the VA-1809 in the 1st part of authentication processing. If connected, the message "Connected" is displayed.
1st DDC Line Status	Check the status of the DDC line with the sink device connected to the VA-1809 in the 1st part of authentication processing. If normal, the message "Normal" is displayed; if abnormal, the message "Error" is displayed.
1st YCbCr Support	Check whether the EDID of the sink device connected to the VA-1809 supports YCbCr if the signal to be input to the VA-1809 is the YCbCr signal in the 1st part of authentication processing. If supported, the message "Support" is displayed; if not supported, the message "Not Support" is displayed.
1st Repeater or Receiver	Check whether the sink device connected to the VA-1809 is a repeater or receiver in the 1st part of the authentication processing. If it is a repeater, the message "Repeater" is displayed; if it is a receiver, the message "Receiver" is displayed.
1st Link Check	Check the validity of BKSv in the 1st part of authentication processing. If normal, the message "Normal" is displayed; if abnormal, the message "Error" is displayed. (If BKSv is not comprised of twenty "1s" and twenty "0s," it is determined abnormal.)
2nd KSV FIFO Ready	Check the KSV list load completion status of the sink device connected to the VA-1809 in the 2nd part of authentication processing. If loading is complete, the message "Normal" is displayed; if incomplete, the message "Error" is displayed.

2nd Depth Check	Check the validity of Depth loaded from the sink device connected to the VA-1809 in the 2nd part of authentication processing. If normal, the message "Normal" is displayed; if abnormal, the message "Error" is displayed. (If the Depth value exceeds MAX (7), it is determined abnormal.)
2nd Count Check	Check the validity of Count loaded from the sink device connected to the VA-1809 in the 2nd part of authentication processing. If normal, the message "Normal" is displayed; if abnormal, the message "Error" is displayed. (If the Count value exceeds MAX (127), it is determined abnormal.)
2nd Compare V	Compare V' loaded from the sink device connected to the VA-1809 with V calculated by the VA-1809 in the 2nd part of authentication processing. If the values are the same, the message "Normal" is displayed; if different, the message "Error" is displayed.


## 4.14 DDC Monitor

DDC is the abbreviation for Display Data Channel; it is the standard for sending the information of the monitor specified by VESA to the source. It is also used to transmit/receive HDCP data in HDMI. Data is transmitted/received via the DDC line using the I2C bus method.

The VA-1809 can display the data flowing through the DDC line between the input side of the VA-1809 and the HDMI source device on the LCD located on the front of the main unit. By using this function, whether the HDMI source device is correctly transmitting/receiving the DDC command can be checked. Also, by triggering arbitrary data, only the necessary data can be displayed.

While the on-screen display is blank: Select **ANALYZE** ANALYSIS.

→ Use the **Rotary key** to select DDC Monitor.

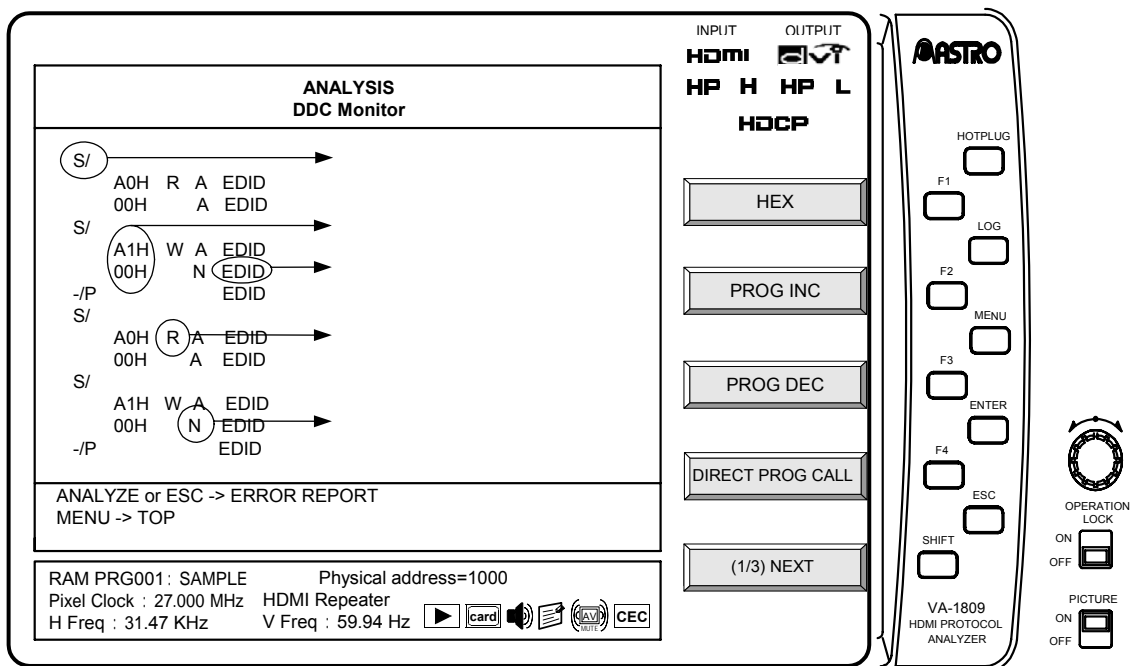

The display contents of DDC Monitor are as follows.

Display item	Figure
S/=Start Condition, -/P=Stop Condition	①
Slave Address, Sub Address or Data	②
Data type *	③
R=Read , W=Write	④
A=Acknowledge , N=Not acknowledge	⑤

\* The data type is classified as follows according to Slave Address.

Slave Address	Data type display	Description
A0 H	EDID	Read command of EDID
60 H	Segment Pointor	Segment Pointer Switch command of EDID
74 H	Receiver	HDCP related commands
Other than above	?	Commands other than EDID and HDCP



- \* If abnormal commands are continuously sent (for example, start bits are sent continuously), it may not be possible to capture data. If data cannot be captured, error display is performed.
- \* A maximum of 4096 lines can be displayed at a time.

■ Description of the function keys dedicated to DDC Monitor

Page 3 contains the function keys dedicated to DDC Monitor.

OSD hidden state → ANALYZE → Rotary Key Select and execute DDC Monitor.

→ Press SHIFT twice. Page 3

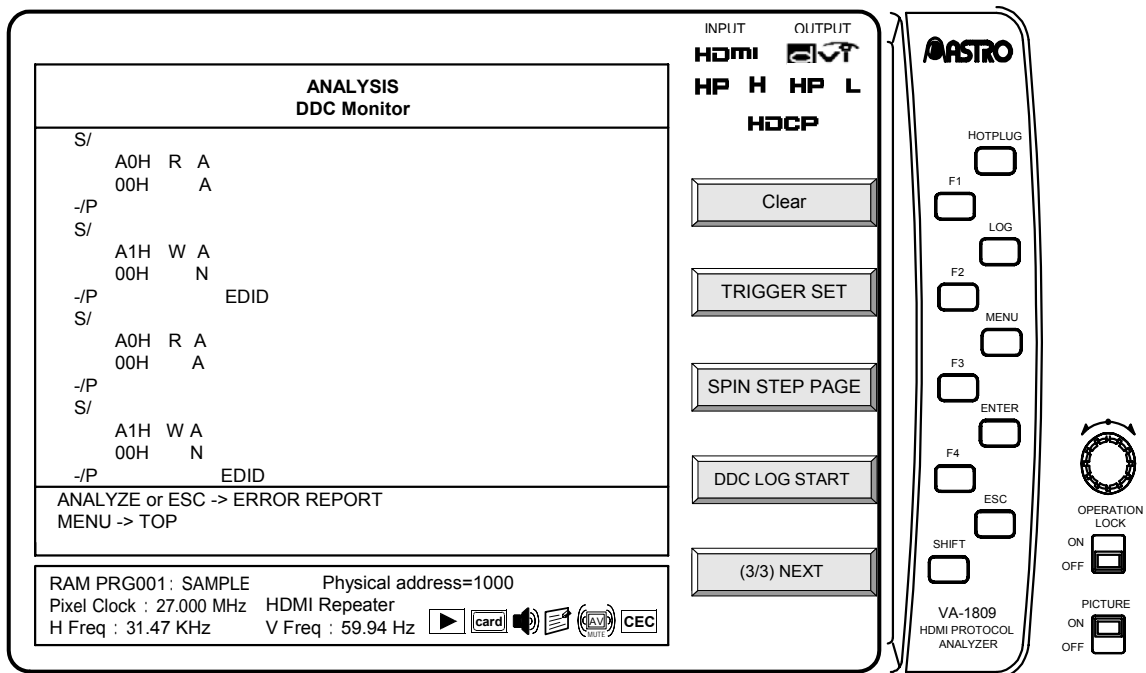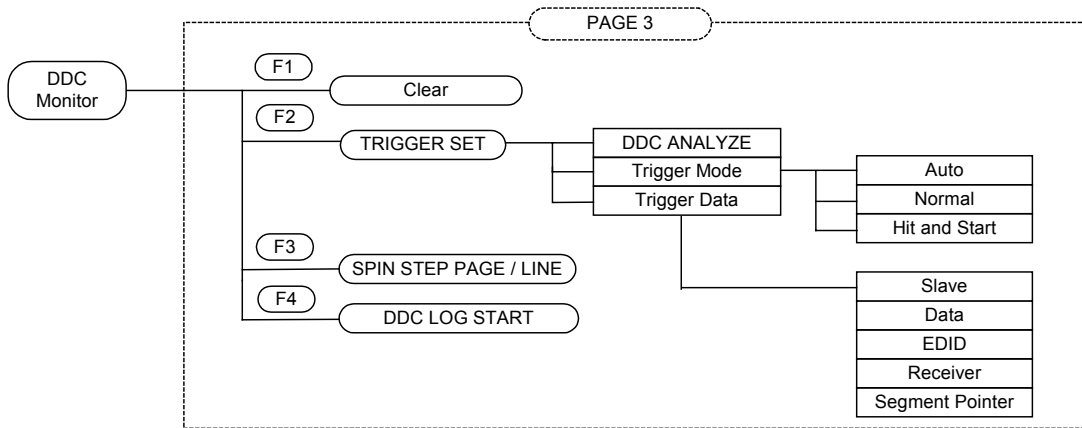

**Clear** [F1]

When Clear is executed, all data displayed on the Monitor will be cleared.

**Trigger Set** [F2]

This function key sets the trigger mode and data for executing DDC Monitor. Change the setting using the rotary key.

**DDC ANALYZE**

Item	Description
ON	Starts DDC ANALYZE.

### Trigger Mode

Item	Description
Auto	Displays all data regardless of Trigger Data.
Normal	Selects and displays only the command of the data selected by Trigger Data.
Single Repeat	Triggers the command of the data selected by Trigger Data, and starts acquiring.

- \* From the start bit immediately before triggered data to the stop bit immediately after are treated as one command.
- \* If there is no stop bit, it is not treated as a command.

### Trigger Data

Item	Description
SLAVE	Can trigger the specified SLAVE Address.
DATA	Can trigger the specified data. (It will be data other than the SLAVE address.)
EDID	Triggers a command whose SLAVE Address is EDID (0xA0).
Receiver	Triggers a command whose SLAVE Address is Receiver (0x74).
Segment Pointor	Triggers a command whose SLAVE Address is Segment Pointer (0x60).

- \* A trigger can be applied again by pressing the **RUN** button to change from STOP to RUN.

### SPIN STEP PAGE/LINE **F3**

This function key sets whether to scroll the monitor result screen display in units of lines or pages when the rotary key is rotated.

## 4.15 Compliance Test Item Check


The HDMI standard requires a compliance test in order to prevent troubles such as connectivity.

The VA-1809 performs part of the compliance check mainly on the source side, and can display the result for each item.

OSD hidden state → **ANALYZE** → **Rotary Key** Select Compliance Test Item Check.

→ Execute **MEASUREMENT START** (F2 on PAGE 3) measurement.


\* Built-in programs 91 to 96 are compliance check programs.

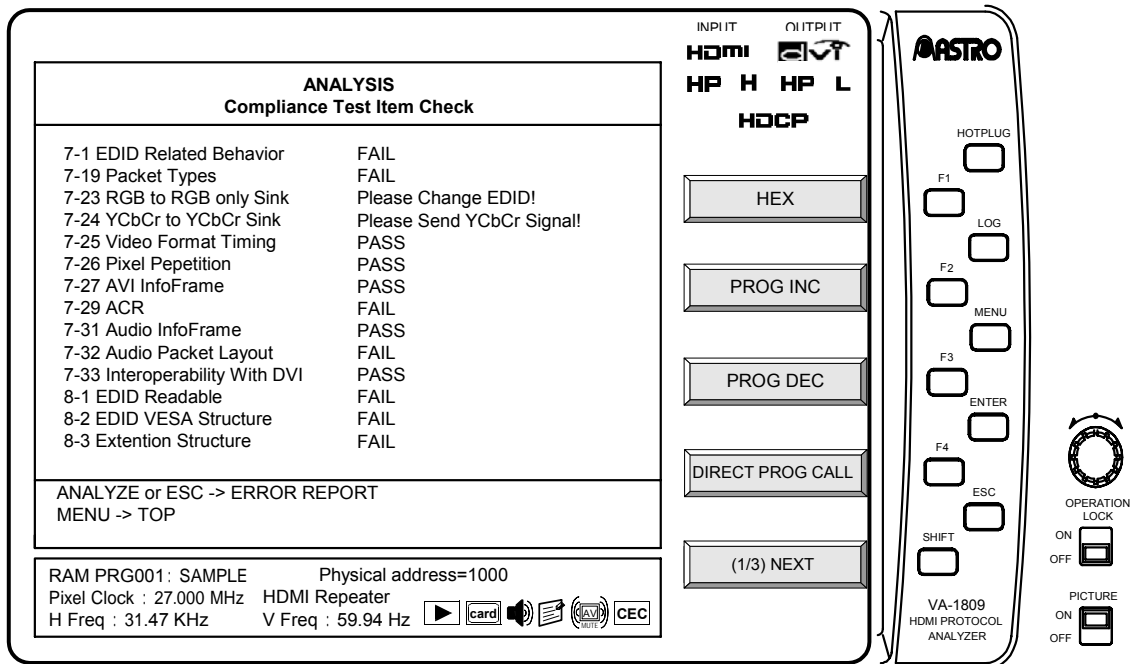

All test items of Compliance Test Item Check cannot be executed simultaneously.  
Compliance Test Item Check consists of the following.

## ■ 7-1 EDID Related Behavior

TEST ID 7-1: EDID Related Behavior is supported.  
 This checks whether the source device connected to the VA-1809 reads the EDID by DDC.  
 Different sized EDID testing can be done with built-in program PRG091, 092 and 093.  
 Operating procedure is shown below.

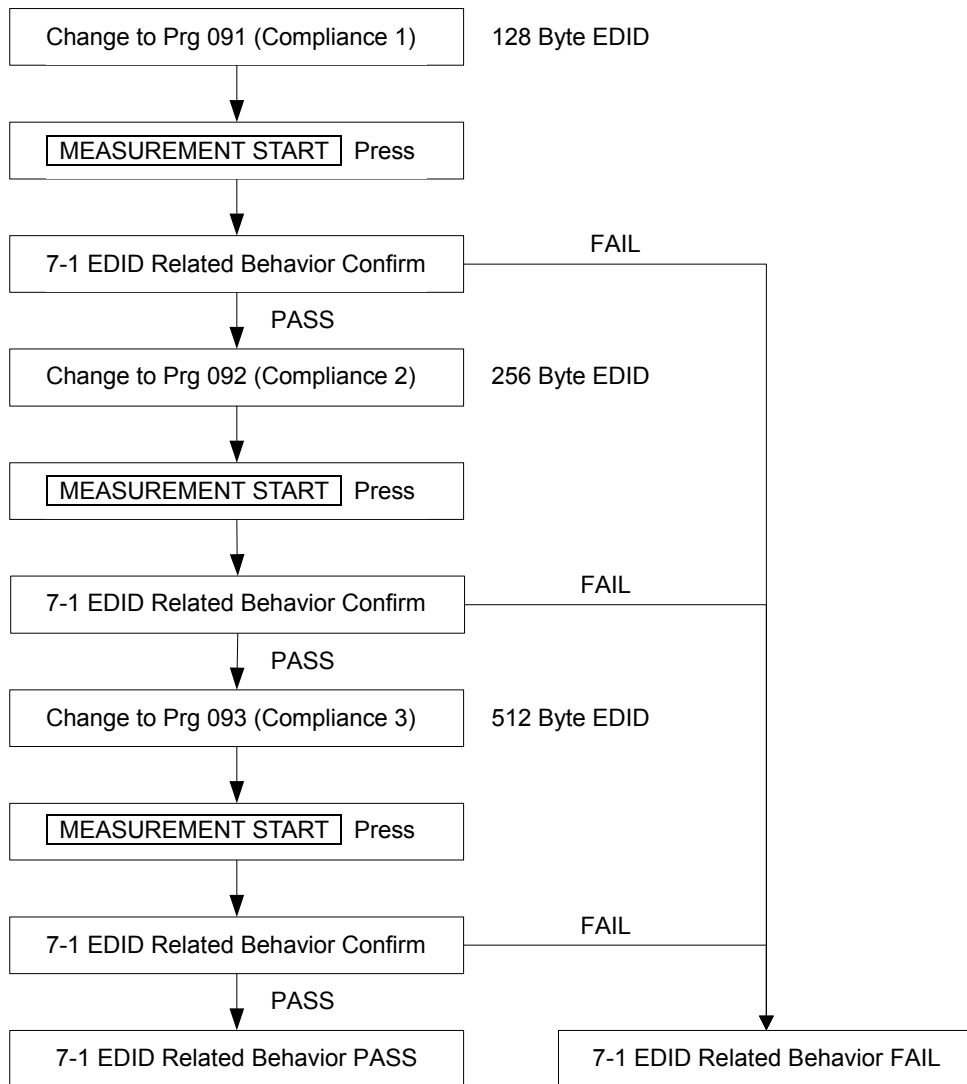

The result is shown below.

Display	Description
PASS	EDID is read correctly.
NO EDID	EDID cannot be read at all.
NO SegP	There is no Segment Pointer in the EDID whose size needs Segment pointer.
SegP SIZE OVER	Segment pointer is larger than it should be in the EDID.
Sent EDID is little	All of the EDID data can not be read.




## ■ 7-19 Packet Type

TEST ID 7-19: Packet Type is supported.

This checks whether the device connected to the VA-1809 correctly transmits ACP Packet, ISRC1 Packet, ISRC2 Packet, Audio Packet and Channel Status Bit.

Operating procedure is shown below.

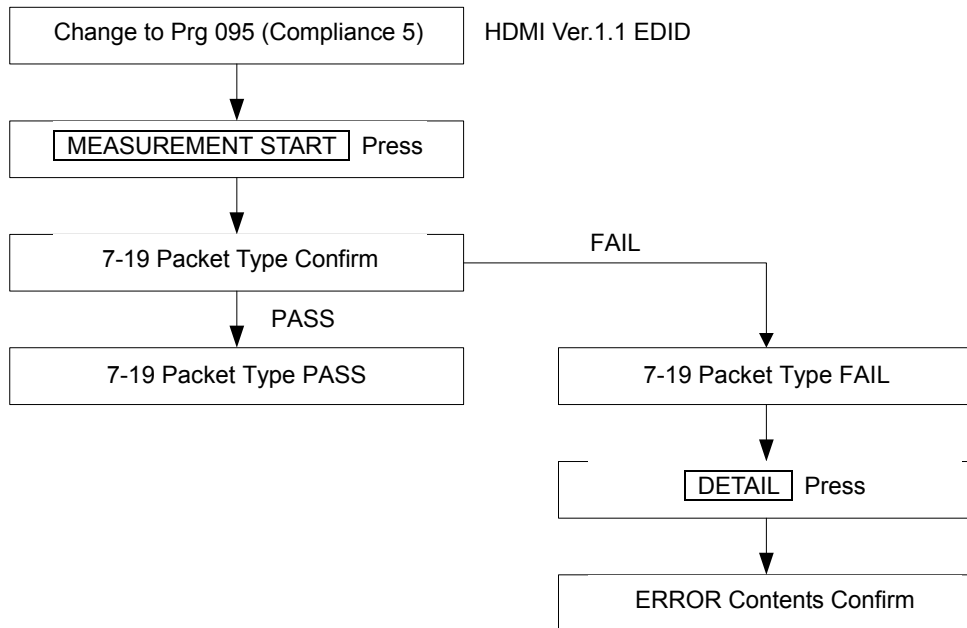

The result is shown below.

Display	Description
PASS	Transmission data of ACP
FAIL	Transmission data of ACP

\* By pressing **DETAIL**, detailed information (which of ACP, ISRC1 or ISRC2 has problem) can be viewed.


### ■ 7-23 RGB to RGB-only Sink

TEST ID 7-23: Pixel Encoding RGB to RGB-only Sink is supported.

This checks that the source device connected to the VA-1809 does not output YCbCr signals to devices that can only receive RGB signals.

To check this item, the EDID of the program currently set in the VA-1809 must be set to “receive only RGB.”

Operating procedure is shown below.

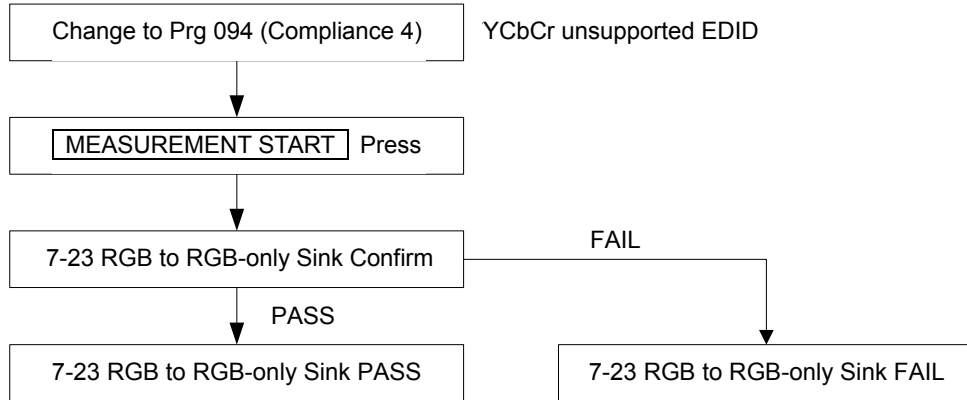

The result is shown below.

Display	Description
PASS	Video is out put in RGB color space signal.
FAIL	Video is output in YCbCr color space signal.
Please Change EDID!	Set EDID to “receive only RGB.”


## ■ 7-24 YCbCr to YCbCr Sink

TEST ID 7-23: Pixel Encoding YCbCr to YCbCr Sink is supported.

This checks that the source device connected to the VA-1809 outputs YCbCr signals to devices that can receive YCbCr signals.

To check this item, the EDID of the current program in the VA-1809 must be set to “receive YCbCr.”

Operating procedure is shown below.

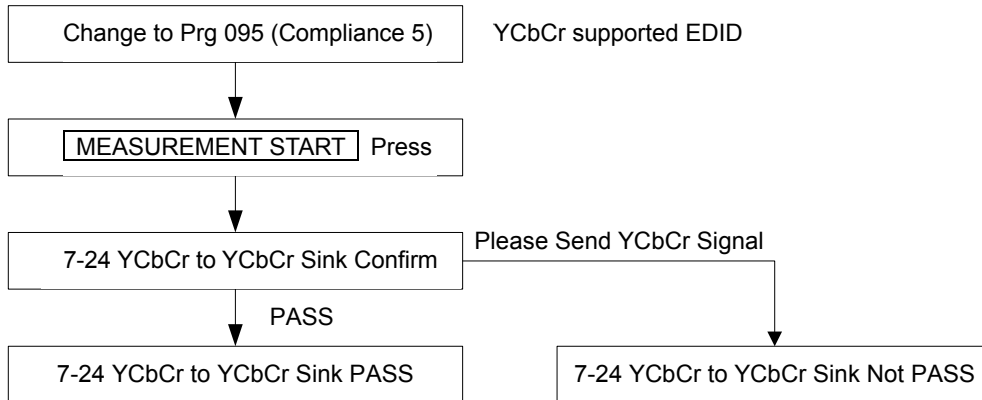


The result is shown below.

Display	Description
PASS	Video is out put in YCbCr color space signal.
Please Send YCbCr Signal!	Video is output in RGB color space signal. Change setting to output video in YCbCr color space.
Please Change EDID!	Set EDID to “receive only YCbCr.”

## ■ 7-25 Video Format Timing

TEST ID 7-25: Video Format Timing is supported.

This checks whether signals are output from the source device connected to the VA-1809 in correct format.

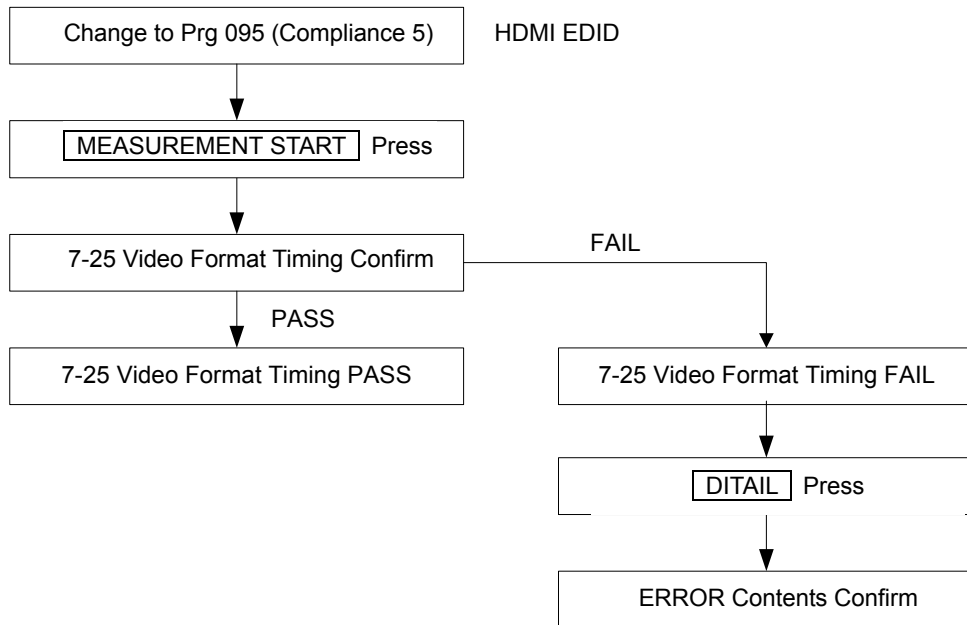

The result is shown below.


Display	Description
PASS	Video code of AVI InfoFrame and transmitting video timing are matched.
FAIL	Video code of AVI InfoFrame and transmitting video timing are not matched.

\* By pressing **DETAIL** → **Rotary Key** Video Timing, detailed information can be confirmed.

## ■ 7-26 Pixel Repetition

TEST ID 7-26: Pixel Repetition is supported.

This checks whether the Pixel Repetition signal output from the source device connected to the VA-1809 is correctly reflected in AVI InfoFrame.

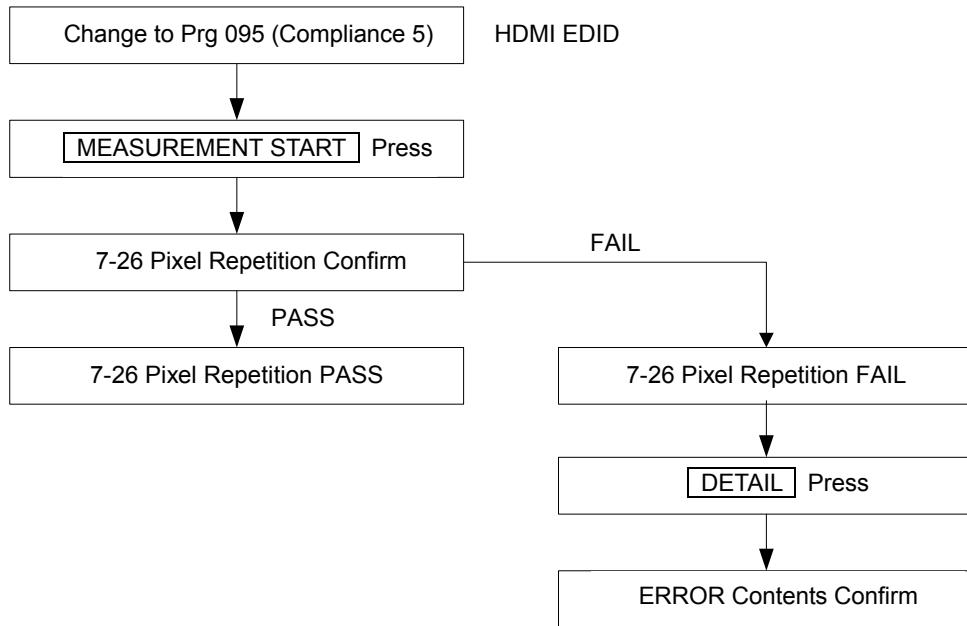

The result is shown below.


Display	Description
PASS	Repetition of AVI InfoFrame and repetition of transmitting video data are matched.
FAIL	Repetition of AVI InfoFrame and repetition of transmitting video data are not matched.

\* By pressing **DETAIL** → **Rotary Key** AVI InfoFrame, detailed information can be confirmed.

## ■ 7-27 AVI InfoFrame

TEST ID 7-27: AVI InfoFrame is supported.

This checks the content of AVI InfoFrame sent from the source device connected to the VA-1809.

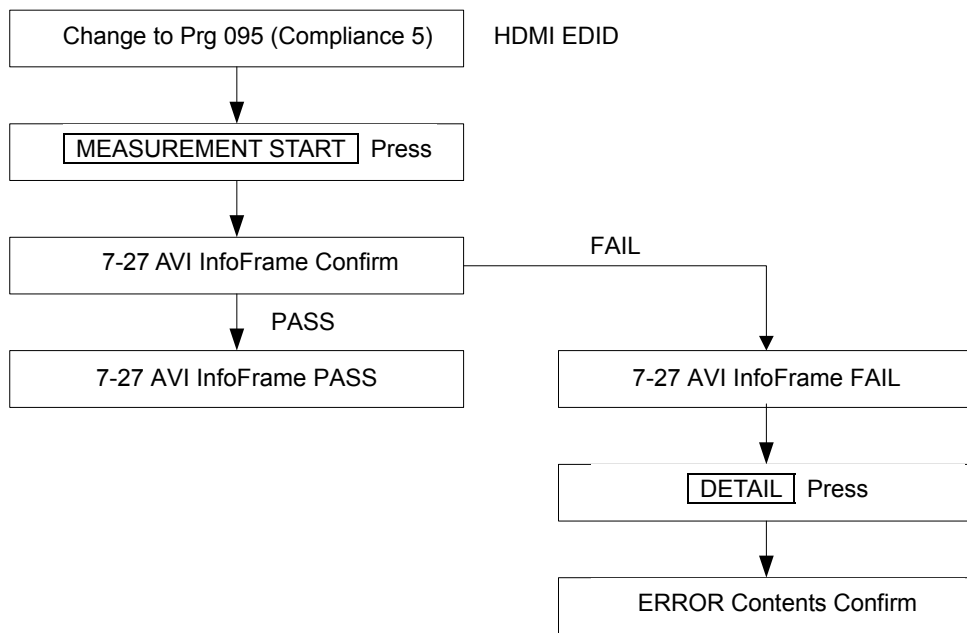

The result is shown below.

Display	Description
PASS	The contents of AVI InfoFrame support the standard.
FAIL	The contents of AVI InfoFrame does not support the standard.


\* By pressing **DETAIL** → **Rotary Key** AVI InfoFrame, detailed information can be confirmed.

## ■ 7-29 ACR

TEST ID 7-29: ACR is supported.

This checks the ACR Packet sent from the source device connected to the VA-1809. If normal, "PASS" is displayed; if abnormal, "FAIL" is displayed.

\* Because it takes time to detect sound, "FAIL" is displayed for a while after image recognition.

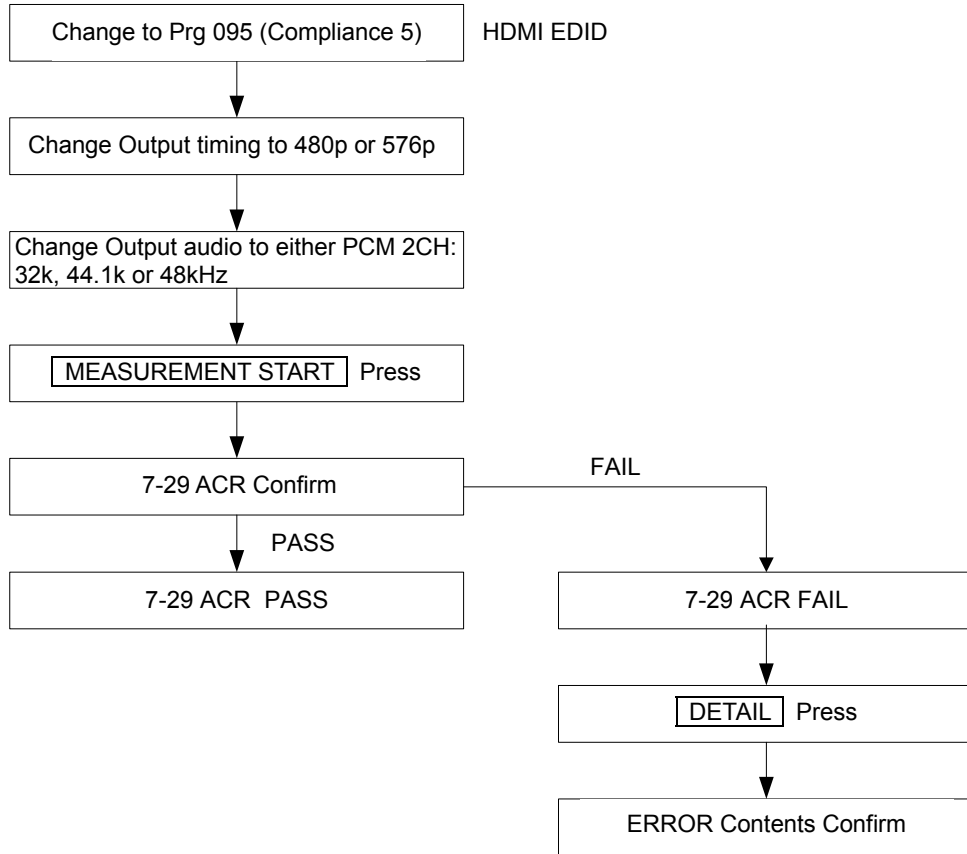

The result is shown below.

Display	Description
PASS	The value of N and CTS in ACR Packet supports the standard.
FAIL	The value of N and CTS in ACR Packet does not support the standard.
Please Change Sampling frequency!	The frequency is input other than 32, 44.1 or 48kHz. Change input frequency to either 32, 44.1 or 48kHz.
Please Change Video Timing!	The timing is input other than 480p or 576p. Change input timing to either 480p or 576p.
Please Change Audio Type!	Audio is not input as PCM. Change input audio to PCM.
Please Change Channel Count!	Number of channels is not set as 2CH. Change to 2CH setting.


\* By pressing **DETAIL** → **Rotary Key** Audio Timing, detailed information can be confirmed.

## ■ 7-31 Audio InfoFrame

TEST ID 7-31: Audio InfoFrame is supported.

This checks Audio InfoFrame sent from the source device connected to the VA-1809. If normal, "PASS" is displayed; if abnormal, "FAIL" is displayed.

(In the case of "FAIL," detailed information can be viewed by pressing the **DETAIL** key.)

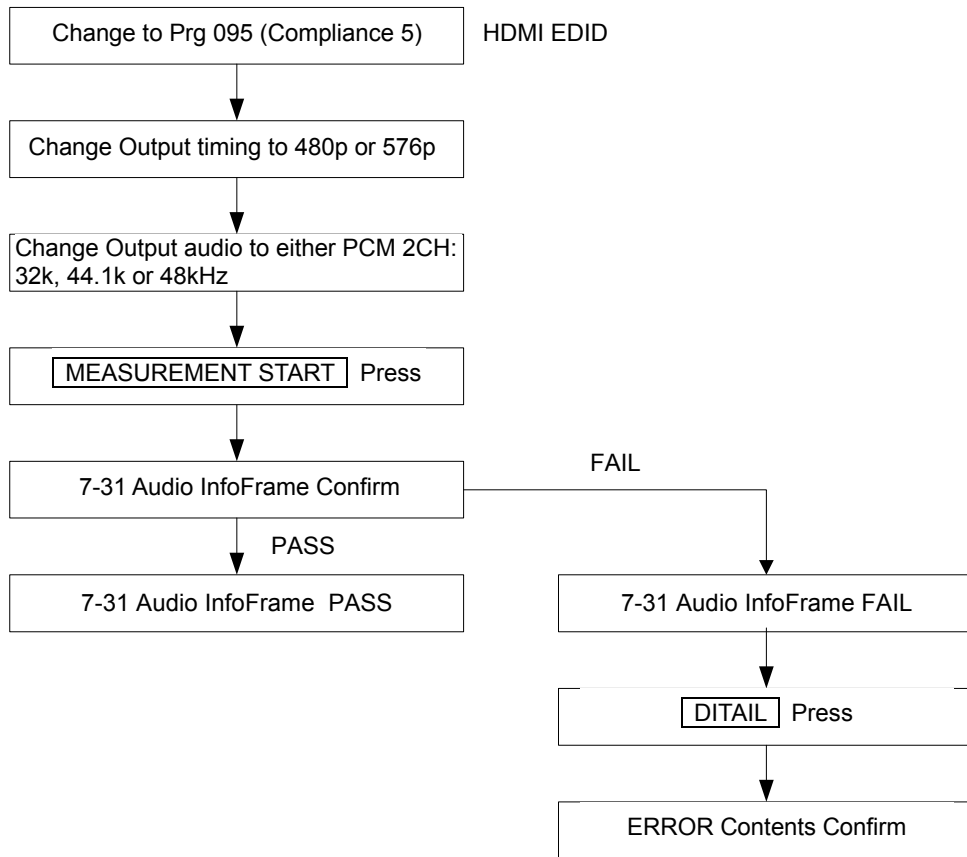

The result is shown below.

Display	Description
PASS	Contents of transmission data of Audio InfoFrame supports the standard.
FAIL	Contents of transmission data of Audio InfoFrame does not support the standard.
Please Change Sampling frequency!	The frequency is input other than 32, 44.1 or 48kHz. Change input frequency to either 32, 44.1 or 48kHz.
Please Change Video Timing!	The timing is input other than 480p or 576p. Change input timing to either 480p or 576p.
Please Change Audio Type!	Audio is not input as PCM. Change input audio to PCM.
Please Change Channel Count!	Number of channels is not set as 2CH. Change to 2CH setting.


\* By pressing **DETAIL** → **Rotary Key** Audio Timing, detailed information can be confirmed.



### ■ 7-32 Audio Packet Layout

TEST ID 7-32: Audio Sample Packet Layout is supported.

This checks Audio Sample Packet Layout sent from the source device connected to the VA-1809. If normal, "PASS" is displayed; if abnormal, "FAIL" is displayed.

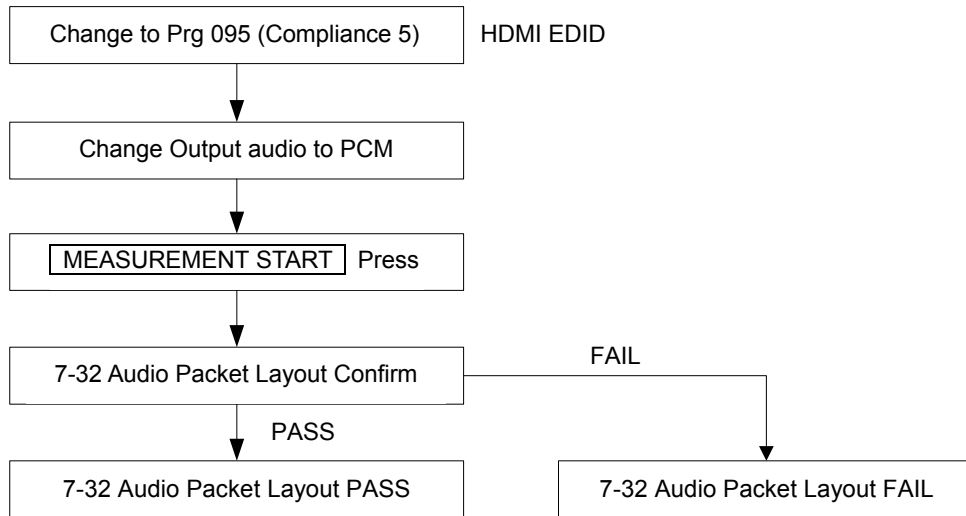


The result is shown below.

Display	Description
PASS	Audio Packet Layout bit and Channel Count & Channel Allocation of Audio InfoFrame are matched.
FAIL	Audio Packet Layout bit and Channel Count & Channel Allocation of Audio InfoFrame are not matched.
Please Change Audio Type!	Audio is not input as PCM. Change input audio to PCM.

### ■ 7-33 Interoperability With DVI

TEST ID 7-33: Interoperability With DVI is supported.

This checks that the source device connected to the VA-1809 does not output HDMI signals to a DVI dedicated device. To perform this check, the EDID setting of the current program in the VA-1809 must be set to "HDMI unsupported." In the case of DVI input, "PASS" is displayed; in the case of HDMI input, "FAIL" is displayed.

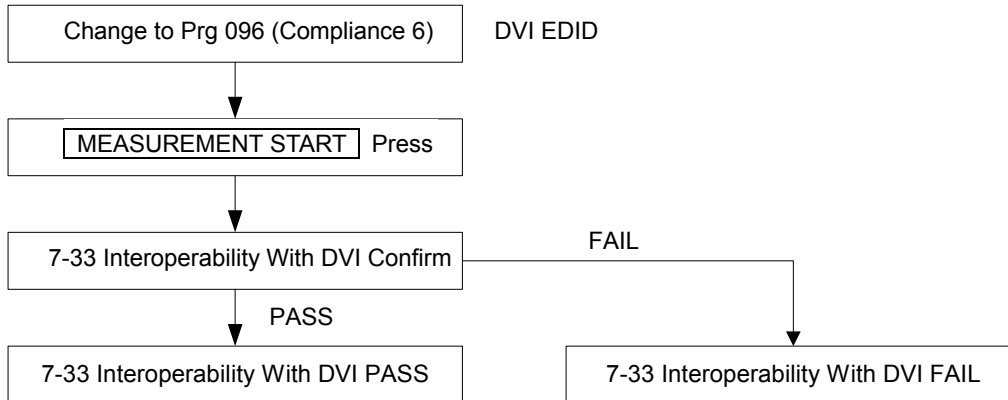

The result is shown below.


Display	Description
PASS	Outputs DVI signal to the unit whose EDID is set as DVI.
FAIL	Outputs HDMI signal to the unit whose EDID is set as DVI.

\* If the EDID is set to "HDMI supported," "PASS" is displayed.

## ■ 8-1 EDID Readable

TEST ID 8-1: EDID Readable is supported.

This reads the EDID of the sink device connected to the VA-1809, and checks the structure. If no sink device is connected, “----” is displayed.

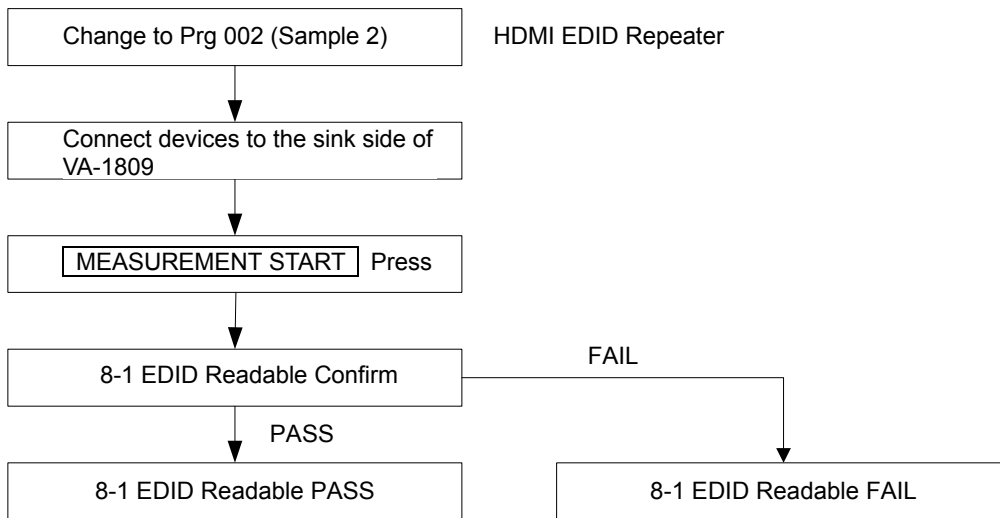

The result is shown below.


Display	Description
PASS	EDID structure of connecting device is set correctly.
FAIL	EDID structure of connecting device is not set correctly.

\* Refer to “7.1.15 Compliance Test Item Check” (p180) for details of Compliance Test.

## ■ 8-2 EDID VESA Structure

TEST ID 8-2: EDID VESA Structure is supported.

This reads the EDID of the sink device connected to the VA-1809, and checks whether the structure is as defined by VESA. If no sink device is connected, “----” is displayed.

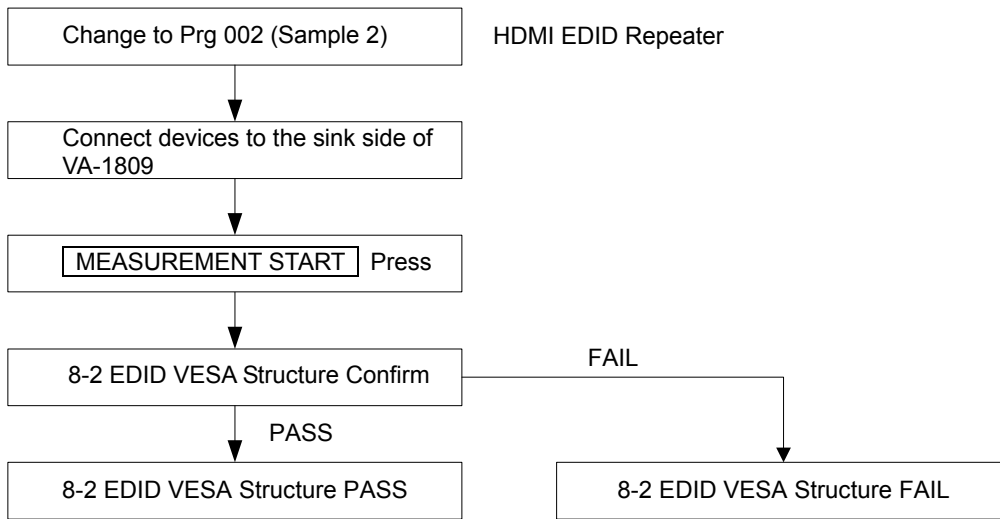

The result is shown below.


Display	Description
PASS	EDID structure of connecting device is set as VESA's standard
FAIL	EDID structure of connecting device is not set as VESA's standard

\* Refer to “7.1.15 Compliance Test Item Check” (p180) for details of Compliance Test.

### ■ 8-3 EDID CEA Structure

TEST ID 8-3: CEA Timing Extension Structure is supported.

This reads the EDID of the sink device connected to the VA-1809, and checks whether the structure is as defined by CEA. If no sink device is connected, “----” is displayed.

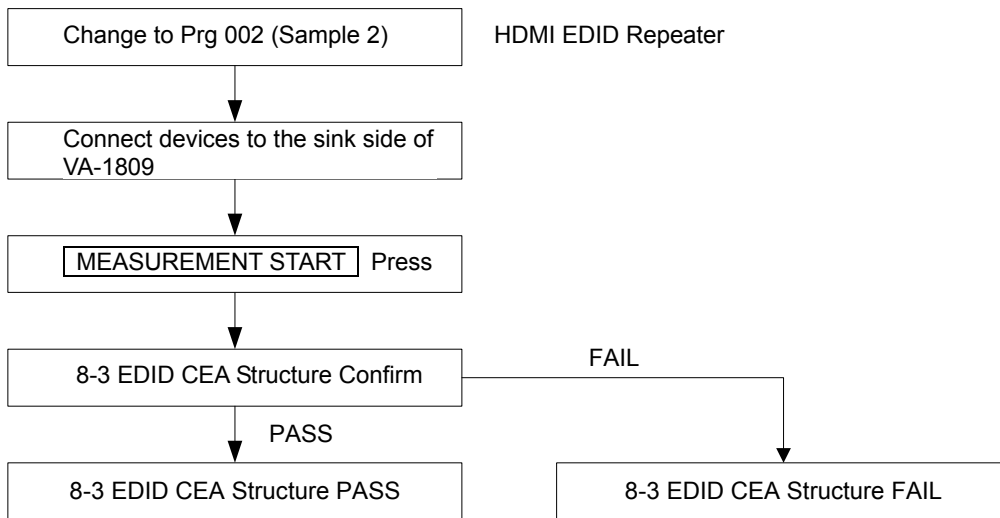

The result is shown below.

Display	Description
PASS	EDID structure of connecting device is set as CEA's standard
FAIL	EDID structure of connecting device is not set as CEA's standard

\* Refer to “7.1.15 Compliance Test Item Check” (p180) for details of Compliance Test.



## ■ Functions keys dedicated to Compliance Test Item Check

Page 3 contains the function keys dedicated to Compliance Test Item Check.

OSD hidden state → **ANALYZE**

→ **Rotary Key** Select and execute Compliance Test Item Check

→ Press **SHIFT** twice Page 3

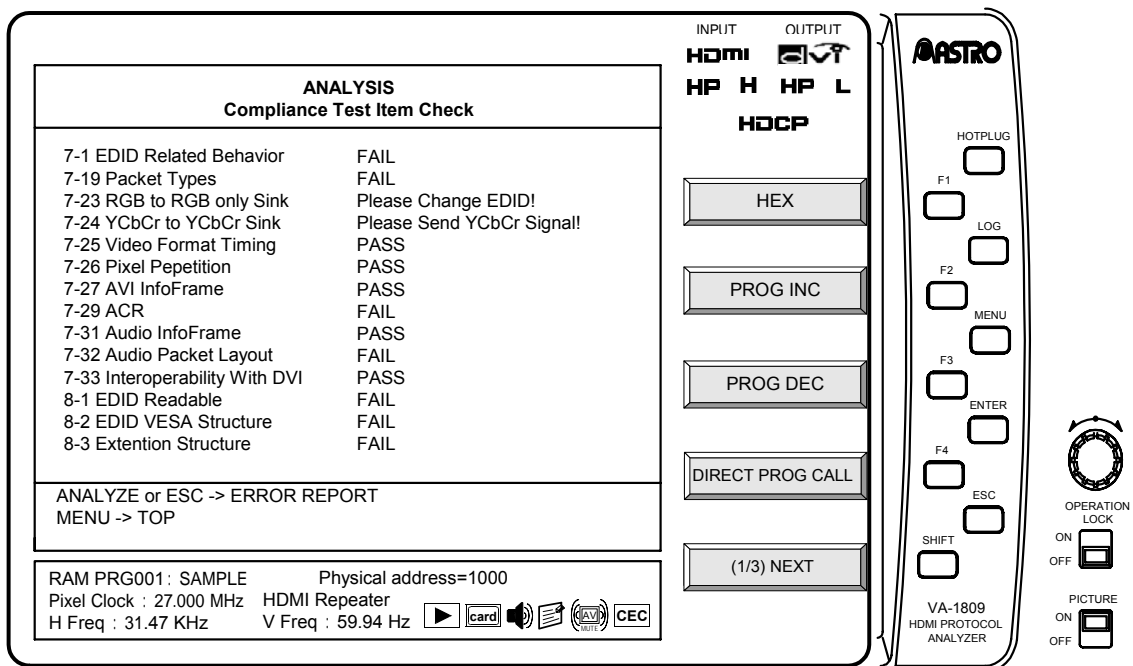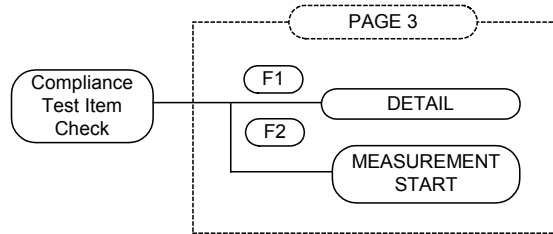

### DETAIL **F1**

This function key allows the viewing of detailed information of abnormal “FAIL” items. By selecting and executing items for which you want to view detailed information with the **Rotary Key**, you can jump to the corresponding detail screen.

The applicable items are as follows:

- 7-19 Packet Type
- 7-25 Video Format Timing
- 7-27 Audio InfoFrame
- 7-29 ACR
- 7-31 Audio InfoFrame

### MEASUREMENT START **F2**

This function key starts the measurement of each check item.

## 4.16 CEC Analyzer


CEC is the abbreviation for Consumer Electronics Control; it is the function for mutually controlling among devices connected using HDMI. For example, it can play a DVD player from a TV, and turn ON/OFF the power to a TV or DVD player from an AV amplifier (AV center). CEC is implemented by exchanging messages among devices via the CEC line of HDMI.

The VA-1809 can monitor the CEC line and transmit/receive commands.

\* This function is optional. For more information, please contact our Sales Department.

OSD hidden state → **ANALYZE** → Select and execute **Rotary Key** CEC Analyzer.

The GUI display for the CEC analyzer is as shown below.

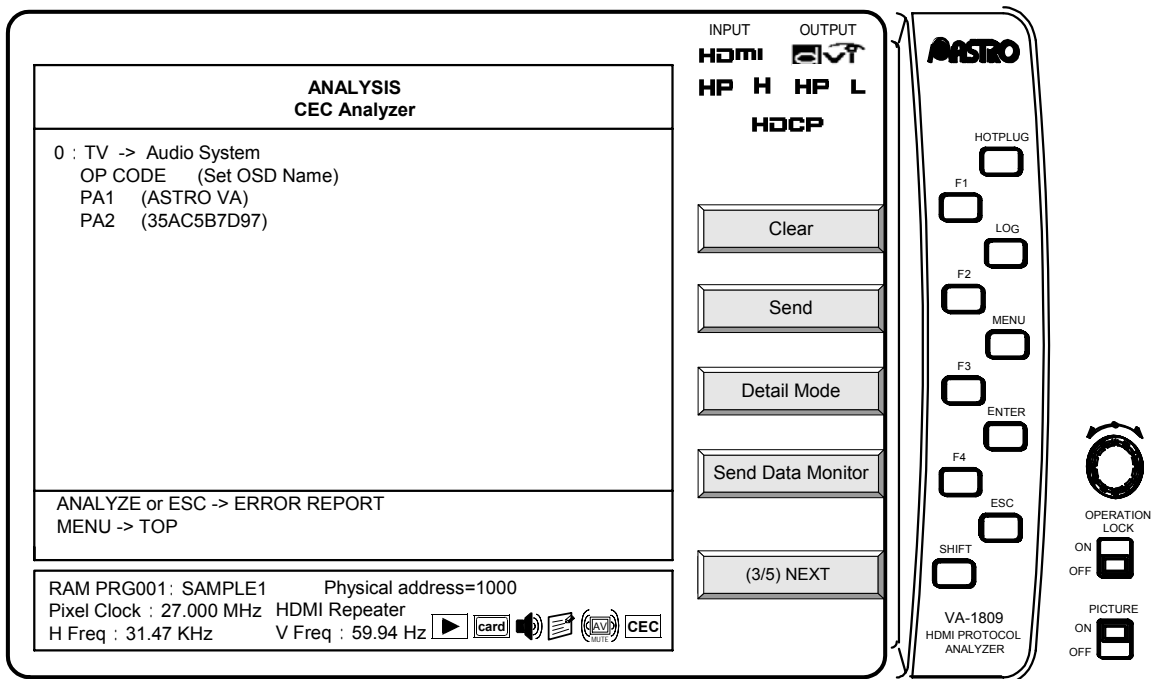


## ■ Description of the Function Keys Dedicated to CEC Analyzer

The function keys used exclusively for the CEC analyzer take effect on PAGE 3 and the subsequent pages.

OSD hidden state → **ANALYZE** → **Rotary Key** Select and execute CEC Analyzer.

→ Press **SHIFT** twice. Page 3

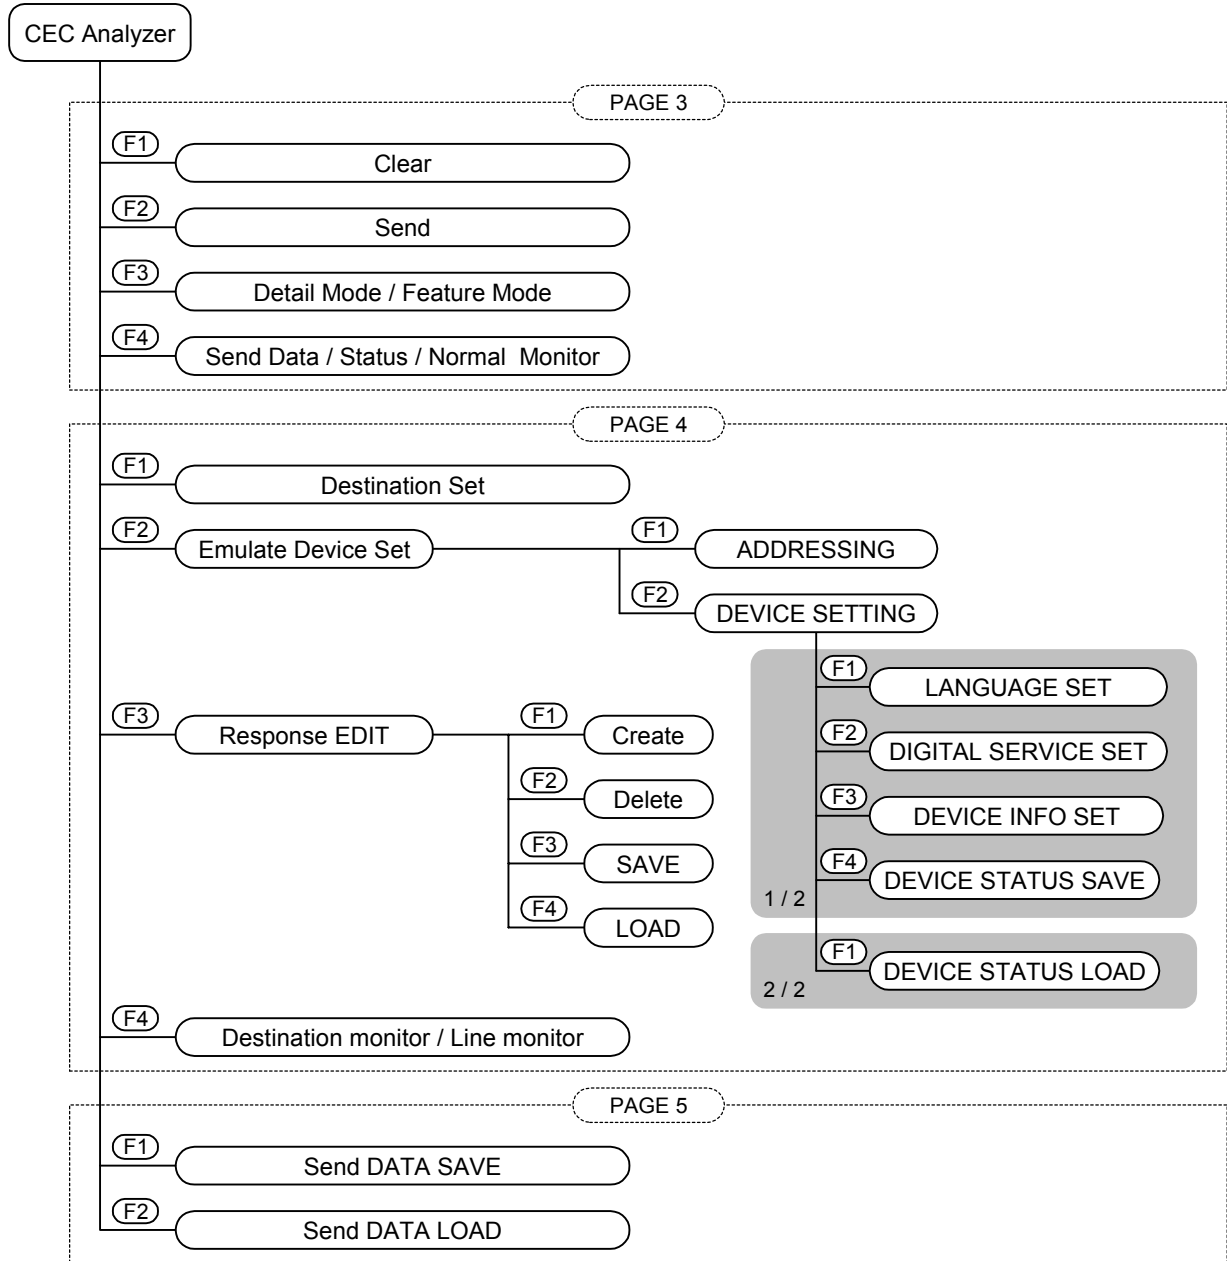



**>> PAGE 3** -----**Clear** **F1** :PAGE3

When the Clear function is executed, all the data shown on the monitor display is cleared.

**Send** **F2** :PAGE3

When the Send function is executed, this function sends the data which was set in the Detail Mode.

- \* The function sends the transmission data which was set in the Detail Mode also while the Feature Mode is selected.

**Detail Mode / Feature Mode** **F3** :PAGE3

This function changes the transmission data settings and selection screen display method for displaying the Send Data Monitor.

For details, refer to "Send Data Monitor" (see page 75).

**Send Data Monitor / Status Monitor / Normal Monitor** **F4** :PAGE3


This function changes the monitor display method.

1. Normal Monitor ..... The CEC line monitoring results are displayed. (P.72)
2. Send Data Monitor ..... The screen for setting the transmission data is shown at the bottom of the CEC line monitor. (P.75)
3. Status Monitor ..... The current status of the VA-1809 is shown at the bottom of the CEC line monitor. (P.87)

## 1. Normal Monitor

The CEC line monitoring results are displayed on this screen. Switching between GUI display and HEX display is possible.

### GUI display

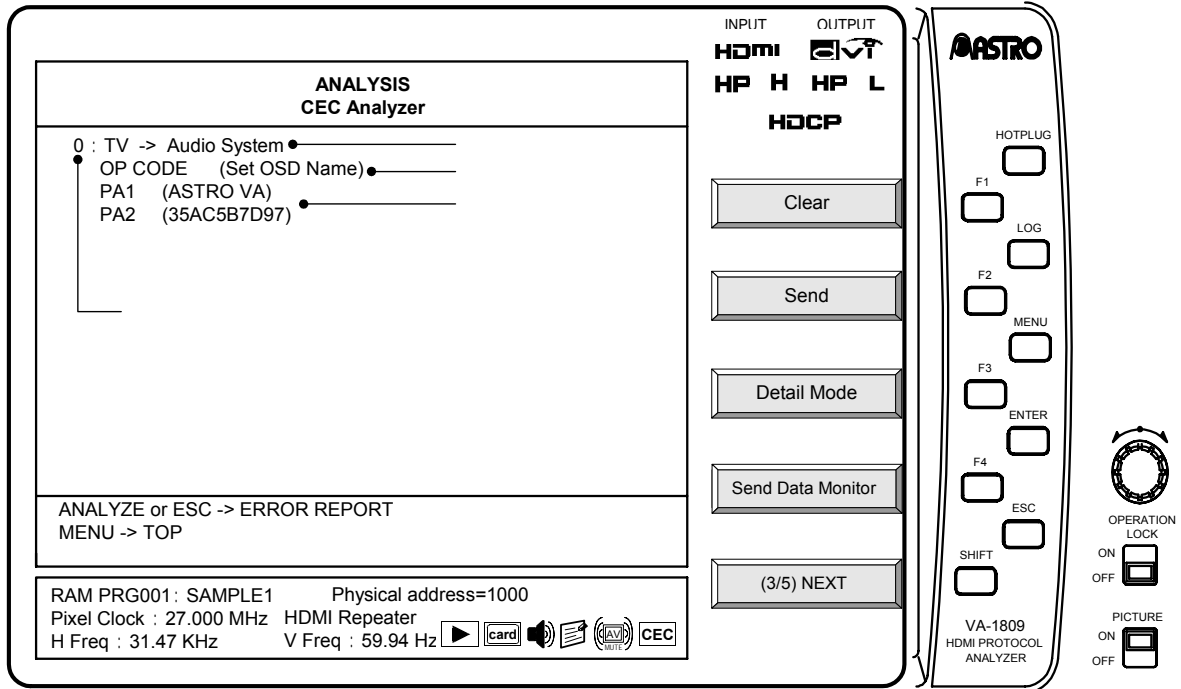


Display item	Description	Figure
Data number	Running number of the data	①
Address	Initiator at left, destination at right ("*" is displayed for data which has been sent from the VA-1809).	②
OP CODE	Operand Code Blocks	③
PA	Parameter	④

- \* The HEX system is used to display the operand codes or parameters which are not mandatory when they have been received or transmitted.
- \* When using the ASCII system to display OSD names, OSD strings, etc., a period (".") is used to indicate the setting of values which cannot be displayed.

### CAUTION

The intervals between successive commands must be at least 3 bits (7.2ms). If this distance is not provided between them, it may not be possible for the data to be displayed properly.

HEX display

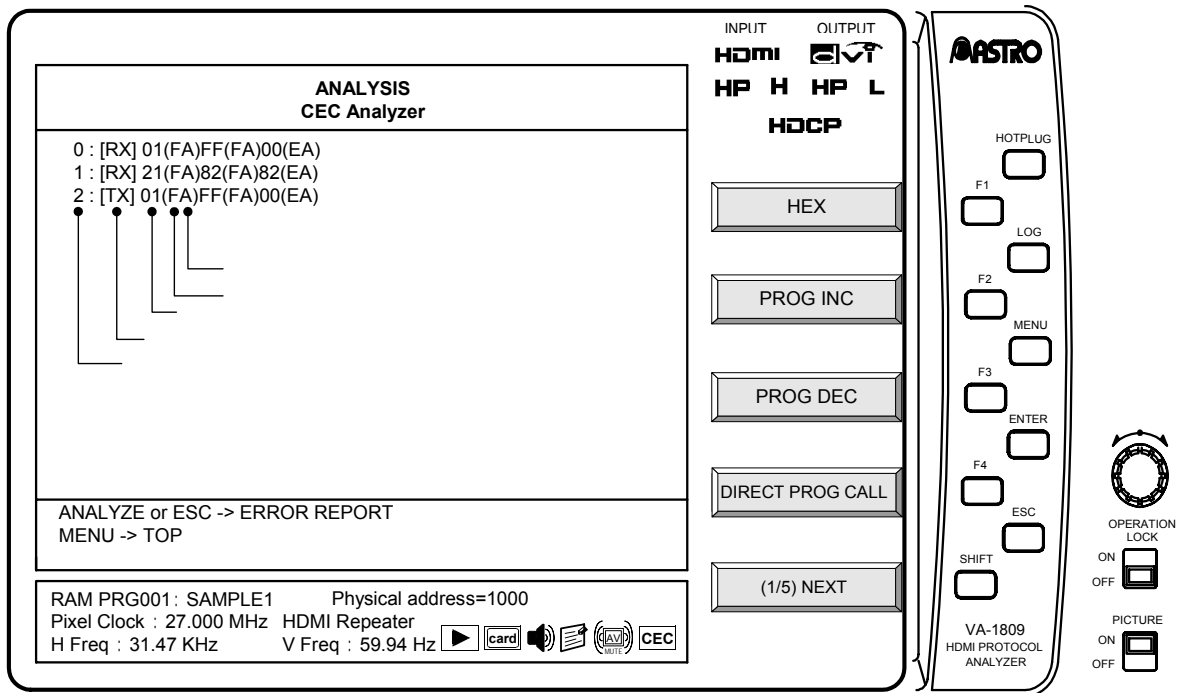

Display item	Description	Figure
Data number	Running number of the data	①
Data type	RX: reception data; TX: transmission data	②
Data	From the left: header block, data block 1 ... data block n	③
EOM	Left EOM (end of message); E: available; F: not available	④
ACK	Right ACK (acknowledge); A: available; N: not available	⑤

\* Up to 64 CEC commands can be displayed at one time.



The intervals between successive commands must be at least 3 bits (7.2ms). If this distance is not provided between them, it may not be possible for the data to be displayed properly.

Listed below are the errors which may be output by the CEC analyzer monitor.

\* The errors are indicated within quotation marks on the monitor.

Item	Details
Error Handling	The follower has detected an error indicating that the bit period is less than the rating, and in order to notify the initiator that this error has occurred in the CEC bus, it sends a low level to the bus at a length which is approximately 1.5 times the length of the bit period. (Error Handling) The VA-1809 displays this message when it has detected this operation. (If the low level period exceeds 3.30ms to 3.35ms, the VA-1809 recognizes this as "Error Handling.")
Error Handling Act	This message is displayed when the VA-1809 has executed Error Handling.
Bit Priod Short Error	This message is displayed when the bit period of a CEC command is less than the rating. (This error results when the bit period is less than 2.00ms to 2.05ms.)
Bit Priod Long Error	This message is displayed when the bit period of a CEC command is more than the rating. (This error results when the bit period is more than 2.80ms to 2.85ms.)
Bus Free Error	This message is displayed when the re-send time is shorter than the one prescribed in the area of the items which are to be checked up to the re-send time of the CEC Compliance Test Item Check command by the VA-1809.
ACK Error	This message is displayed when the ACK is not contained in the CEC command.
Send Bus Busy Error	This message is displayed if the bus remains busy (low level) when an attempt has been made to send a command from the VA-1809.
Send Error Handling	This message is displayed when a command has been sent from the VA-1809 if the 1-bit period is shorter than the rating for some reason and this fact has been posted by the Follower. (If the low level period exceeds 3.30ms to 3.35ms, the VA-1809 recognizes this as "Error Handling.")
Send Aribtration Error	This message is displayed when a command has been sent from the VA-1809 if it is deemed that there is an Initiator other than the VA-1809 as well.
Send Ack Error	This message is displayed when a command has been sent from the VA-1809 and ACK was not detected.
Send Impedance Error	This message is displayed when a command has been sent from the VA-1809 if another device has been set to the low level for some reason at a place other than where the bus should be set to the low level.
Send the other Error	This message is displayed when the an error is deemed to have occurred from some reason.
Corrupted bit Error	This message is displayed when an unintended low level has been output to the bus.

## 2. Send Data Monitor


This function displays the transmission data setting screen.

The setting and selection screen display system (Detail Mode or Feature Mode) is switched using **[F3]**. The set data is saved and the saved data is loaded using the Send DATA SAVE and LOAD functions (see PAGE 5).

- Detail Mode

In this mode, the transmission data can be set with numerical values (HEX).

The items to be changed are selected, edited and executed by **[Rotary Key]**.

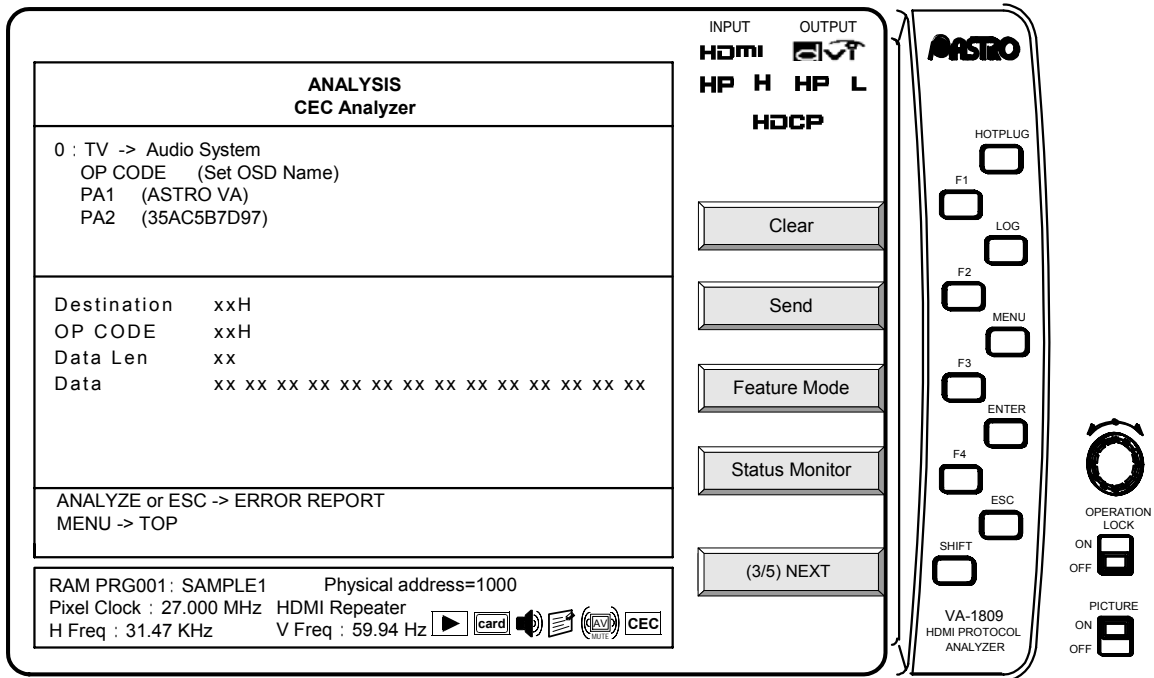


A description of each item is given below.

Item	Description
Destination	The logical address of the transmission destination is specified here.
OP CODE	The operand code is specified here.
Data Len	The parameter data volume is specified here.
Data	The operand block data is specified here.

● Feature Mode

In this mode, the transmission data can be set with command names (GUI). Select the transmission data using **Rotary Key** or by pressing **ENTER**.

\* The transmission destinations of those transmission commands whose destination can be determined from a multiple number of such destinations can be set using Destination in the Detail Mode or the Destination Set function key (**F1**), see PAGE 4) used exclusively by the CEC Analyzer.

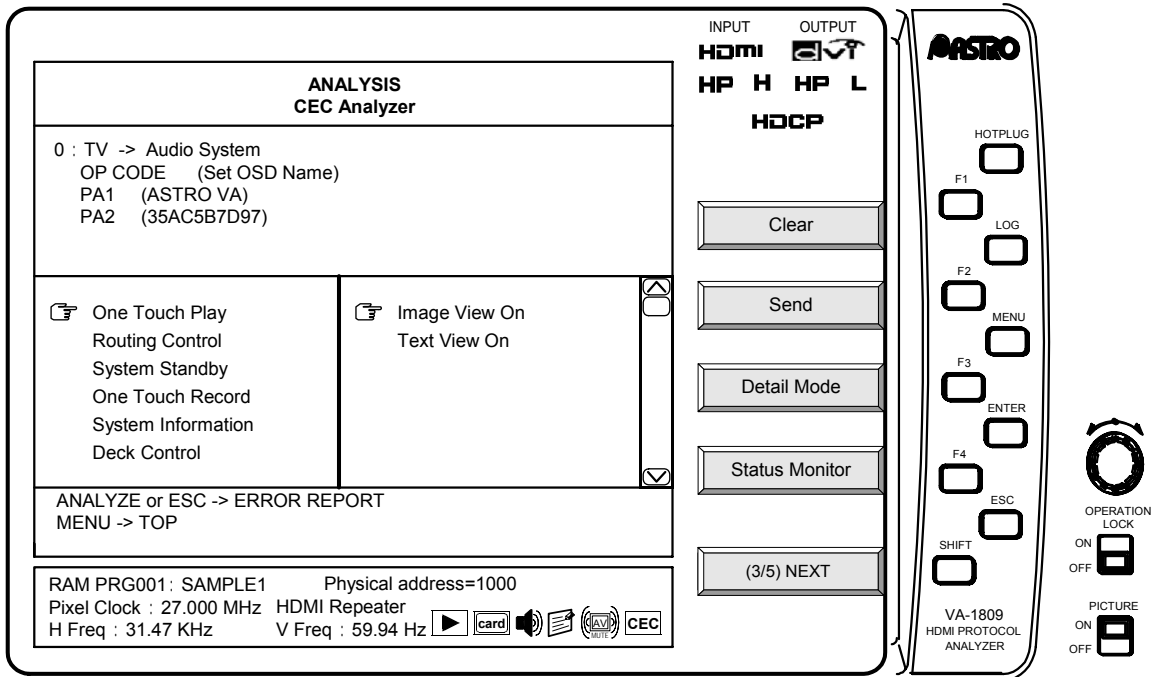

Listed below is the data which can be transmitted.

Function item	Transmission data	Description
One Touch Play	Image View On	When the VA-1809 is not emulating a TV set, the Image View On data is sent to the TV set, and the Active Source data is broadcast approximately 200ms later.
	Text View On	When the VA-1809 is not emulating a TV set, the Text View On data is sent to the TV set, and the Active Source data is broadcast approximately 200ms later.
Routing Control	Active Source	The Active Source data is broadcast.
	Request Active Source	The Request Active Source data is broadcast.
	Routing Change	When the VA-1809 is emulating two or more devices, the least significant bit of the currently posted Physical Address data is changed, and the Routing Change data is broadcast.
	Set Stream Path	When the VA-1809 is emulating a TV set, the Give Physical Address data is transmitted, and the Set Stream Path data is broadcast to the returned Physical Address.

Function item	Transmission data	Description
System Standby		System Standby is transmitted.
One Touch Record	Record OFF	When the VA-1809 is emulating a TV set, the Record OFF data is transmitted.
	Record ON	When the VA-1809 is emulating a TV set, the Record ON data is transmitted. When it is emulating a device other than a TV set, the Record TV Screen data is transmitted.
System Information	Get Menu Language	When the VA-1809 is not emulating a TV set, the Get Menu Language data is transmitted to the TV set.
	Set Menu Language	When the VA-1809 is emulating a TV set, the Set Menu Language data is transmitted.
	Give Physical Address	The Give Physical Address data is transmitted.
	Report Physical Address	The Report Physical Address data is broadcast.
Deck Control	Give Deck Status ON	The Give Deck Status [ON] data is transmitted.
	Give Deck Status OFF	The Give Deck Status [OFF] data is transmitted.
	Give Deck Status ONCE	The Give Deck Status [ONCE] data is transmitted.
	Skip Forward / Wind Forward	The Deck Control [Skip Forward/Wind Forward] data is transmitted.
	Skip Backward / Rewind	The Deck Control [Skip Backward/Rewind] data is transmitted.
	Stop	The Deck Control [Stop] data is transmitted.
	Eject	The Deck Control [Eject] data is transmitted.
	Play Forward	The Play [Play Forward] data is transmitted.
	Play Reverse	The Play [Play Reverse] data is transmitted.
	Play Still	The Play [Play Still] data is transmitted.
	Scan Forward Min Speed	The Play [Scan Forward Min Speed] data is transmitted.
	Scan Forward Medium Speed	The Play [Scan Forward Medium Speed] data is transmitted.
	Scan Forward Max Speed	The Play [Scan Forward Max Speed] data is transmitted.
	Scan Reverse Min Speed	The Play [Scan Reverse Min Speed] data is transmitted.
	Scan Reverse Medium Speed	The Play [Scan Reverse Medium Speed] data is transmitted.
	Scan Reverse Max Speed	The Play [Scan Reverse Max Speed] data is transmitted.
	Slow Forward Min Speed	The Play [Slow Forward Min Speed] data is transmitted.
	Slow Forward Medium Speed	The Play [Slow Forward Medium Speed] data is transmitted.
	Slow Forward Max Speed	The Play [Slow Forward Max Speed] data is transmitted.
	Slow Reverse Min Speed	The Play [Slow Reverse Min Speed] data is transmitted.
Slow Reverse Medium Speed	The Play [Slow Reverse Medium Speed] data is transmitted.	
Slow Reverse Max Speed	The Play [Slow Reverse Max Speed] data is transmitted.	

Function item	Transmission data	Description
Tuner Control	Give Tuner Device Status ON	The Give Tuner Device Status [ON] data is transmitted.
	Give Tuner Device Status OFF	The Give Tuner Device Status [OFF] data is transmitted.
	Give Tuner Device Status Once	The Give Tuner Device Status [ONCE] data is transmitted.
	Select Digital Service 1	The Select Digital Service data is transmitted using Digital Service 1 set by Device Setting as the parameter.
	Select Digital Service 2	The Select Digital Service data is transmitted using Digital Service 2 set by Device Setting as the parameter.
	Select Digital Service 3	The Select Digital Service data is transmitted using Digital Service 3 set by Device Setting as the parameter.
	Tuner Step Decrement	The Tuner Step Decrement data is transmitted.
	Tuner Step Increment	The Tuner Step Increment data is transmitted.
Vendor Specific Commands	Device Vendor ID	The Device Vendor ID data is transmitted using the Vendor ID set by Device Setting as the parameter.
	Give Device Vendor ID	The Give Device Vendor ID is transmitted.
OSD Status Display	Display for default time	The Set OSD String [Display for default time] data is transmitted.
	Display until cleared	The Set OSD String [Display until cleared] data is transmitted.
	Clear previous message	The Set OSD String [Clear previous message] data is transmitted.
	Reserved for future use	The Set OSD String [Reserved for future use] data is transmitted.
Device OSD Name Transfer		The Give OSD Name data is transmitted.
Device Menu Control	Activate	The Menu Request [Activate] data is transmitted.
	Deactivate	The Menu Request [Deactivate] data is transmitted.
	Query	The Menu Request [Query] data is transmitted.



Function item	Transmission data		Description
Device Menu Control	Select	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Select] data for P and the User Control Released data for R.
	Up	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Up] data for P and the User Control Released data for R.
	Down	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Down] data for P and the User Control Released data for R.
	Left	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Left] data for P and the User Control Released data for R.
	Right	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Right] data for P and the User Control Released data for R.
	Right-Up	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Right-Up] data for P and the User Control Released data for R.
	Right-Down	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Right-Down] data for P and the User Control Released data for R.
	Left-Up	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Left-Up] data for P and the User Control Released data for R.
	Left-Down	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Left-Down] data for P and the User Control Released data for R.
	Root Menu	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Root Menu] data for P and the User Control Released data for R.
	Setup Menu	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Setup Menu] data for P and the User Control Released data for R.
	Contents Menu	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Contents Menu] data for P and the User Control Released data for R.
	Favorite Menu	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Favorite Menu] data for P and the User Control Released data for R.
	Exit	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Exit] data for P and the User Control Released data for R.
	Reserved (0x0E) : Reserved (0x1F)	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
Numbers 0 : Numbers 9	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Numbers X] data for P and the User Control Released data for R.	

Function item	Transmission data		Description
Device Menu Control	Dot	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Dot] data for P and the User Control Released data for R.
	Enter	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Enter] data for P and the User Control Released data for R.
	Clear	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Clear] data for P and the User Control Released data for R.
	Reserved (0x2D)	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
	Reserved (0x2E)	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
	Reserved (0x2F)	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
	Channel Up	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Channel Up] data for P and the User Control Released data for R.
	Channel Down	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Channel Down] data for P and the User Control Released data for R.
	Previous Channel	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Previous Channel] data for P and the User Control Released data for R.
	Sound Select	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Sound Select] data for P and the User Control Released data for R.
	Input Select	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Input Select] data for P and the User Control Released data for R.
	Display Information	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Display Information] data for P and the User Control Released data for R.
	Help	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Help] data for P and the User Control Released data for R.
	Page Up	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Page Up] data for P and the User Control Released data for R.
	Page Down	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Page Down] data for P and the User Control Released data for R.
Reserved (0x39) : Reserved (0x3F)	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Reserved] data for P and the User Control Released data for R.	

Function item	Transmission data		Description
Device Menu Control	Power	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Power] data for P and the User Control Released data for R.
	Volume Up	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Volume Up] data for P and the User Control Released data for R.
	Volume Down	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Volume Down] data for P and the User Control Released data for R.
	Mute	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Mute] data for P and the User Control Released data for R.
	Play	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Play] data for P and the User Control Released data for R.
	Stop	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Stop] data for P and the User Control Released data for R.
	Pause	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Pause] data for P and the User Control Released data for R.
	Record	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Record] data for P and the User Control Released data for R.
	Rewind	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Rewind] data for P and the User Control Released data for R.
	Fast forward	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Fast Forward] data for P and the User Control Released data for R.
	Eject	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Eject] data for P and the User Control Released data for R.
	Forward	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Forward] data for P and the User Control Released data for R.
	Backward	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Backward] data for P and the User Control Released data for R.
	Reserved (0x4D)	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
	Reserved (0x4E)	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
Reserved (0x4F)	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Reserved] data for P and the User Control Released data for R.	

Function item	Transmission data		Description
Device Menu Control	Angle	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Angle] data for P and the User Control Released data for R.
	Sub picture	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Sub picture] data for P and the User Control Released data for R.
	Reserved (0x52) : Reserved (0x5F)	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
	Play Function	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Play Function] data for P and the User Control Released data for R.
	Pause-Play Function	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Pause-Play Function] data for P and the User Control Released data for R.
	Record Function	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Record Function] data for P and the User Control Released data for R.
	Pause-Record Function	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Pause-Record Function] data for P and the User Control Released data for R.
	Stop Function	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Stop Function] data for P and the User Control Released data for R.
	Mute Function	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Mute Function] data for P and the User Control Released data for R.
	Restore Volume Function	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Restore Volume Function] data for P and the User Control Released data for R.
	Tune Function	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Tune Function] data for P and the User Control Released data for R.
	Select Disk Function	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Select Disk Function] data for P and the User Control Released data for R.
	Select A/V Input Function	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Select A/V Input Function] data for P and the User Control Released data for R.
	Select Audio Input Function	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Select Audio Input Function] data for P and the User Control Released data for R.
Reserved (0x6B) : Reserved (0x70)	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Reserved] data for P and the User Control Released data for R.	

Function item	Transmission data		Description
Device Menu Control	F1(Blue)	P&R / P / R	Transmitted to Active Source is the User Control Pressed [F1 (Blue)] data for P and the User Control Released data for R.
	F2(Red)	P&R / P / R	Transmitted to Active Source is the User Control Pressed [F2 (Red)] data for P and the User Control Released data for R.
	F3(Green)	P&R / P / R	Transmitted to Active Source is the User Control Pressed [F3 (Green)] data for P and the User Control Released data for R.
	F4(Yellow)	P&R / P / R	Transmitted to Active Source is the User Control Pressed [F4 (Yellow)] data for P and the User Control Released data for R.
	F5	P&R / P / R	Transmitted to Active Source is the User Control Pressed [F5] data for P and the User Control Released data for R.
	Reserved (0x76) : Reserved (0x7F)	P&R / P / R	Transmitted to Active Source is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
Remote Control Pass Through	Select	P&R / P / R	Transmitted is the User Control Pressed [Select] data for P and the User Control Released data for R.
	Up	P&R / P / R	Transmitted is the User Control Pressed [Up] data for P and the User Control Released data for R.
	Down	P&R / P / R	Transmitted is the User Control Pressed [Down] data for P and the User Control Released data for R.
	Left	P&R / P / R	Transmitted is the User Control Pressed [Left] data for P and the User Control Released data for R.
	Right	P&R / P / R	Transmitted is the User Control Pressed [Right] data for P and the User Control Released data for R.
	Right-Up	P&R / P / R	Transmitted is the User Control Pressed [Right-Up] data for P and the User Control Released data for R.
	Right-Down	P&R / P / R	Transmitted is the User Control Pressed [Right-Down] data for P and the User Control Released data for R.
	Left-Up	P&R / P / R	Transmitted is the User Control Pressed [Left-Up] data for P and the User Control Released data for R.
	Left-Down	P&R / P / R	Transmitted is the User Control Pressed [Left-Down] data for P and the User Control Released data for R.
	Root Menu	P&R / P / R	Transmitted is the User Control Pressed [Root Menu] data for P and the User Control Released data for R.
	Setup Menu	P&R / P / R	Transmitted is the User Control Pressed [Setup Menu] data for P and the User Control Released data for R.
	Contents Menu	P&R / P / R	Transmitted is the User Control Pressed [Contents Menu] data for P and the User Control Released data for R.
	Favorite Menu	P&R / P / R	Transmitted is the User Control Pressed [Favorite Menu] data for P and the User Control Released data for R.
	Exit	P&R / P / R	Transmitted is the User Control Pressed [Exit] data for P and the User Control Released data for R.

Function item	Transmission data		Description
Remote Control Pass Through	Reserved (0x0E) :	P&R / P / R	Transmitted is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
	Reserved (0x1F)		
	Numbers 0 :	P&R / P / R	Transmitted is the User Control Pressed [Numbers X] data for P and the User Control Released data for R.
	Numbers 9		
	Dot	P&R / P / R	Transmitted is the User Control Pressed [Dot] data for P and the User Control Released data for R.
	Enter	P&R / P / R	Transmitted is the User Control Pressed [Enter] data for P and the User Control Released data for R.
	Clear	P&R / P / R	Transmitted is the User Control Pressed [Clear] data for P and the User Control Released data for R.
	Reserved (0x2D)	P&R / P / R	Transmitted is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
	Reserved (0x2E)	P&R / P / R	Transmitted is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
	Reserved (0x2F)	P&R / P / R	Transmitted is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
	Channel Up	P&R / P / R	Transmitted is the User Control Pressed [Channel Up] data for P and the User Control Released data for R.
	Channel Down	P&R / P / R	Transmitted is the User Control Pressed [Channel Down] data for P and the User Control Released data for R.
	Previous Channel	P&R / P / R	Transmitted is the User Control Pressed [Previous Channel] data for P and the User Control Released data for R.
	Sound Select	P&R / P / R	Transmitted is the User Control Pressed [Sound Select] data for P and the User Control Released data for R.
	Input Select	P&R / P / R	Transmitted is the User Control Pressed [Input Select] data for P and the User Control Released data for R.
	Display Information	P&R / P / R	Transmitted is the User Control Pressed [Display Information] data for P and the User Control Released data for R.
	Help	P&R / P / R	Transmitted is the User Control Pressed [Help] data for P and the User Control Released data for R.
	Page Up	P&R / P / R	Transmitted is the User Control Pressed [Page Up] data for P and the User Control Released data for R.
	Page Down	P&R / P / R	Transmitted is the User Control Pressed [Page Down] data for P and the User Control Released data for R.
	Reserved (0x39) :	P&R / P / R	Transmitted is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
Reserved (0x3F)			
Power	P&R / P / R	Transmitted is the User Control Pressed [Power] data for P and the User Control Released data for R.	
Volume Up	P&R / P / R	Transmitted is the User Control Pressed [Volume Up] data for P and the User Control Released data for R.	
Volume Down	P&R / P / R	Transmitted is the User Control Pressed [Volume Down] data for P and the User Control Released data for R.	
Mute	P&R / P / R	Transmitted is the User Control Pressed [Mute] data for P and the User Control Released data for R.	

Function item	Transmission data		Description
Remote Control Pass Through	Play	P&R / P / R	Transmitted is the User Control Pressed [Play] data for P and the User Control Released data for R.
	Stop	P&R / P / R	Transmitted is the User Control Pressed [Stop] data for P and the User Control Released data for R.
	Pause	P&R / P / R	Transmitted is the User Control Pressed [Pause] data for P and the User Control Released data for R.
	Record	P&R / P / R	Transmitted is the User Control Pressed [Record] data for P and the User Control Released data for R.
	Rewind	P&R / P / R	Transmitted is the User Control Pressed [Rewind] data for P and the User Control Released data for R.
	Fast forward	P&R / P / R	Transmitted is the User Control Pressed [Fast Forward] data for P and the User Control Released data for R.
	Eject	P&R / P / R	Transmitted is the User Control Pressed [Eject] data for P and the User Control Released data for R.
	Forward	P&R / P / R	Transmitted is the User Control Pressed [Forward] data for P and the User Control Released data for R.
	Backward	P&R / P / R	Transmitted is the User Control Pressed [Backward] data for P and the User Control Released data for R.
	Reserved (0x4D)	P&R / P / R	Transmitted is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
	Reserved (0x4E)	P&R / P / R	Transmitted is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
	Reserved (0x4F)	P&R / P / R	Transmitted is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
	Angle	P&R / P / R	Transmitted is the User Control Pressed [Angle] data for P and the User Control Released data for R.
	Sub picture	P&R / P / R	Transmitted is the User Control Pressed [Sub picture] data for P and the User Control Released data for R.
	Reserved (0x52) : Reserved (0x5F)	P&R / P / R	Transmitted is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
	Play Function	P&R / P / R	Transmitted is the User Control Pressed [Play Function] data for P and the User Control Released data for R.
	Pause-Play Function	P&R / P / R	Transmitted is the User Control Pressed [Pause-Play Function] data for P and the User Control Released data for R.
	Record Function	P&R / P / R	Transmitted is the User Control Pressed [Record Function] data for P and the User Control Released data for R.
	Pause-Record Function	P&R / P / R	Transmitted is the User Control Pressed [Pause-Record Function] data for P and the User Control Released data for R.
	Stop Function	P&R / P / R	Transmitted is the User Control Pressed [Stop Function] data for P and the User Control Released data for R.
Mute Function	P&R / P / R	Transmitted is the User Control Pressed [Mute Function] data for P and the User Control Released data for R.	
Restore Volume Function	P&R / P / R	Transmitted is the User Control Pressed [Restore Volume Function] data for P and the User Control Released data for R.	


Function item	Transmission data		Description
Remote Control Pass Through	Tune Function	P&R / P / R	Transmitted is the User Control Pressed [Tune Function] data for P and the User Control Released data for R.
	Select Disk Function	P&R / P / R	Transmitted is the User Control Pressed [Select Disk Function] data for P and the User Control Released data for R.
	Select A/V Input Function	P&R / P / R	Transmitted is the User Control Pressed [Select A/V Input Function] data for P and the User Control Released data for R.
	Select Audio Input Function	P&R / P / R	Transmitted is the User Control Pressed [Select Audio Input Function] data for P and the User Control Released data for R.
	Reserved (0x6B) : Reserved (0x70)	P&R / P / R	Transmitted is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
	F1 (Blue)	P&R / P / R	Transmitted is the User Control Pressed [F1 (Blue)] data for P and the User Control Released data for R.
	F2 (Red)	P&R / P / R	Transmitted is the User Control Pressed [F2 (Red)] data for P and the User Control Released data for R.
	F3 (Green)	P&R / P / R	Transmitted is the User Control Pressed [F3 (Green)] data for P and the User Control Released data for R.
	F4 (Yellow)	P&R / P / R	Transmitted is the User Control Pressed [F4 (Yellow)] data for P and the User Control Released data for R.
	F5	P&R / P / R	Transmitted is the User Control Pressed [F5] data for P and the User Control Released data for R.
	Reserved (0x76) : Reserved (0x7F)	P&R / P / R	Transmitted is the User Control Pressed [Reserved] data for P and the User Control Released data for R.
Give Device Power Status		The Give Device Power Status data is transmitted.	



### 3. Status Monitor

The current statuses of the VA-1809 are shown on this monitor.

The statuses may be changed by CEC commands from an external source or changed from the VA-1809 main unit. To change them from the main unit, use **Rotary Key** and **ENTER**.

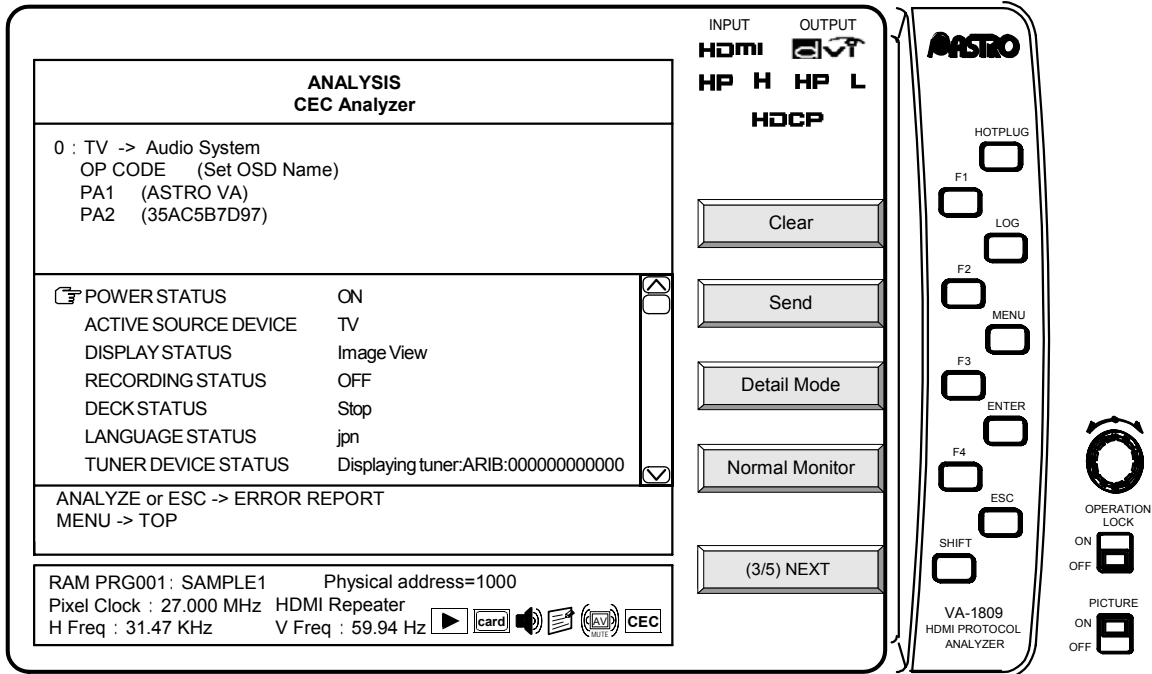


Item	Description
POWER STATUS	The currently emulated power status is displayed here.
ACTIVE SOURCE DEVICE	The current active source device is displayed here. * The only change which can be made using [Rotary Key] is to change the device emulated by the VA-1809 to Active Source. * The status in which the internal tuner or external source is displayed at Display is established when "TV" is displayed.
DISPLAY STATUS	The currently emulated display status is displayed here. * This takes effect only when the VA-1809 is emulating a TV set.
RECORDING STATUS	The currently emulated recording status is displayed here. * This takes effect only when the VA-1809 is emulating a recording device.
DECK STATUS	The currently emulated deck status is displayed here. * This takes effect only when the VA-1809 is emulating a deck device.
LANGUAGE STATUS	The currently emulated language status is displayed here.
TUNER DEVICE STATUS	The currently emulated tuner status is displayed here.
DEVICE MENU STATUS	The currently emulated menu status is displayed here. * This takes effect only when the VA-1809 is emulating a TV set.
UI COMMAND STATUS	The status of the UI command transmitted is displayed here.
OSD NAME STATUS	The currently emulated device OSD name is displayed here. * The setting is performed using the OSD Name part of [Device Info Set] which is accessed by selecting [Emulate Device Setting] -> [Device Setting].
OSD STRING DISP STATUS	The OSD string transmitted is displayed here. * This takes effect only when the VA-1809 is emulating a TV set.

**Destination Set [F1] :PAGE4**


This function is used to display the devices connected on the current CEC line in the form of a tree using the Logical Address from the Physical Address. (Green indicates the devices emulated by the VA-1809, and pink indicates all other devices.)

The device selected by using [Rotary Key] or pressing [ENTER] is set as the Destination.

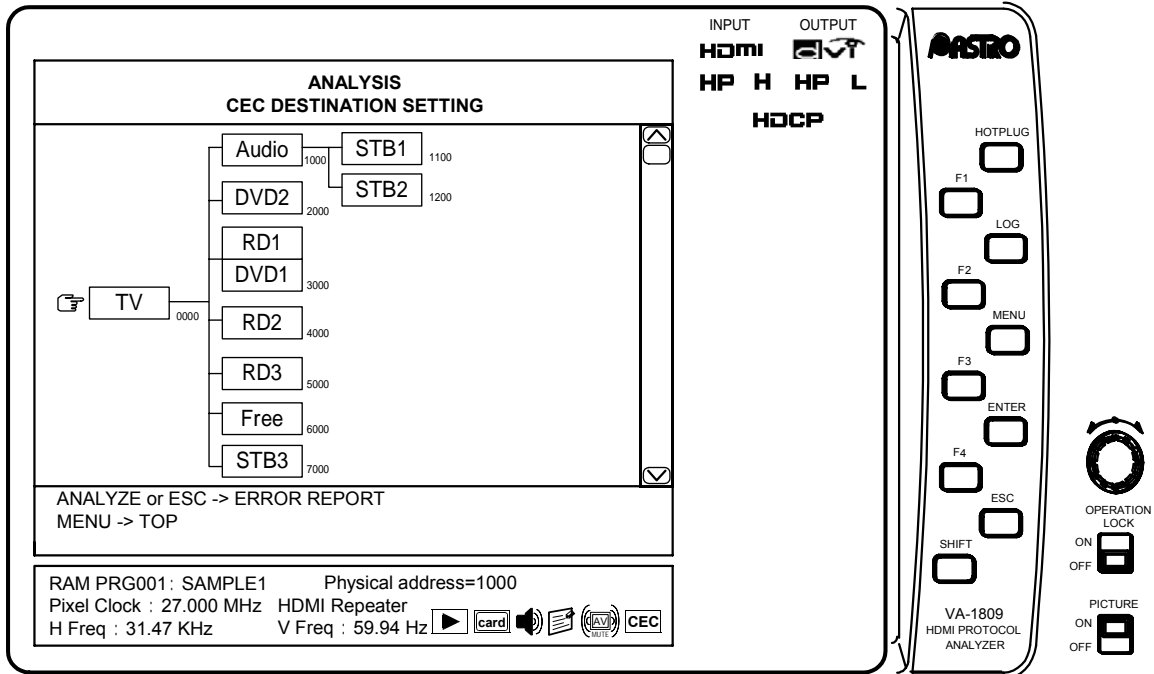

**Emulate Device Set [F2] :PAGE4**

This function is used to set the status of the VA-1809 when it is to emulate the device set.

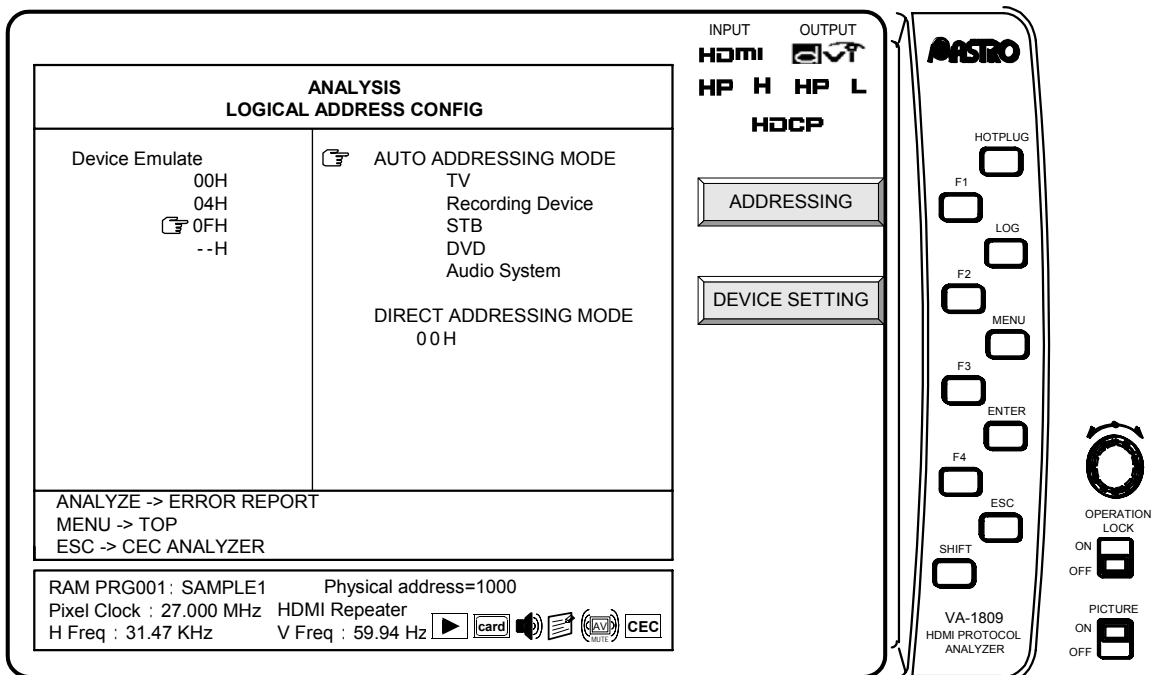

**(1) Setting the logical addresses**

With CEC, the logical addresses must be captured in each device. Any of up to four of these addresses can be captured with the VA-1809.

→ Use **Rotary Key** or press **ENTER**, and enter the checks (ON).

→ Use **Rotary Key** to move to Address, and use **Rotary Key** or press **ENTER**. [AUTO ADDRESSING MODE/DIRECT ADDRESSING MODE] appears on the right.

→ Use **Rotary Key** to select either the AUTO or DIRECT addressing mode, and enter the checks (ON).

→ **F1 ADDRESSING**

Press this key to set the addresses.

**AUTO ADDRESSING MODE**

When AUTO ADDRESSING MODE is checked, the logical addresses are automatically captured according to the categories of the devices which have been set. These addresses are specified as below according to the device category.

Logical Address	DEVICE
00H	TV
01H	Recording Device 1
02H	Recording Device 2
03H	STB 1
04H	DVD 1
05H	Audio System
06H	STB 2
07H	STB 3
08H	DVD 2
09H	Recording Device 3

Logical Address	DEVICE
0AH	Reserved
0BH	
0CH	
0DH	
0EH	Free Use
0FH	Unregistered (as initiator address) Broadcast (as destination address)

**DIRECT ADDRESSING MODE**

When DIRECT ADDRESSING MODE is checked, the data which has been set is forcibly allocated to the logical addresses.

**CAUTION**

When the VA-1809 is to emulate a TV set, select the receiver setting and use the HDMI input port; when it is to emulate a device other than a TV set, select the repeater setting.

## (2) DEVICE SETTING

This function is used to set the status of the device when the device is to be emulated by the VA-1809.

→ **F2** **DEVICE SETTING**

The setting screen now appears.

Listed below are the items which can be set.

1. Support OP CODE
2. LANGUAGE ( → **F1** ) P.91
3. Digital Service ( → **F2** ) P.98
4. DEVICE Information ( → **F3** ) P.98

Data can be saved or loaded using DEVICE STATUS SAVE or LOAD.

→ **F4** **DEVICE STATUS SAVE**

Press this key to save the data which has been set.

→ **SHIFT** **NEXT** → **F1** **DEVICE STATUS LOAD**

Press these keys to load the data which has been saved.

### 1. Support OP CODE

OP CODE	Description
Active Source	This supports the reception of Active Source.
Image View On	This supports the reception of Image View On.
Text View On	This supports the reception of Text View On.
Request Active Source	This supports the reception of Request Active Source.
Routing Change	This supports the reception of Routing Change.
Routing Information	This supports the reception of Routing Information.
Set Stream Path	This supports the reception of Set Stream Path.
Standby	This supports the reception of Standby.
Record Off	This supports the reception of Record Off.
Record On	This supports the reception of Record On.
Record Status	This supports the reception of Record Status.
Record TV Screen	This supports the reception of Record TV Screen.
Give Menu Language	This supports the reception of Give Menu Language.
Give Physical Address	This supports the reception of Give Physical Address.
Report Physical Address	This supports the reception of Report Physical Address
Set Menu Language	This supports the reception of Set Menu Language.
Deck Control	This supports the reception of Deck Control.
Deck Status	This supports the reception of Deck Status.
Give Deck Status	This supports the reception of Give Deck Status.
Play	This supports the reception of Play.

OP CODE	Description
Give Tuner Device Status	This supports the reception of Give Tuner Device Status.
Select Digital Service	This supports the reception of Select Digital Service.
Tuner Device Status	This supports the reception of Tuner Device Status.
Tuner Step Decrement	This supports the reception of Tuner Step Decrement.
Tuner Step Increment	This supports the reception of Tuner Step Increment.
Device Vendor ID	This supports the reception of Device Vendor ID.
Give Device Vendor ID	This supports the reception of Give Device Vendor ID.
Vendor Command	This supports the reception of Vendor Command.
Vendor Remote Button Down	This supports the reception of Vendor Remote Button Down.
Vendor Remote Button Up	This supports the reception of Vendor Remote Button Up.
Set OSD String	This supports the reception of Set OSD String.
Give OSD Name	This supports the reception of Give OSD Name.
Set OSD Name	This supports the reception of Set OSD Name.
Menu Request	This supports the reception of Menu Request.
Menu Status	This supports the reception of Menu Status.
User Control Pressed	This supports the reception of User Control Pressed.
User Control Released	This supports the reception of User Control Released.
Give Device Power Status	This supports the reception of Give Device Power Status.
Report Device Power Status	This supports the reception of Report Device Power Status.

## 2. LANGUAGE SET **F1**

Code	Language	Code	Language
aar	Afar	abk	Abkhazian
ace	Achinese	ach	Acoli
ada	Adangme	ady	Adyghe; Adygei
afa	Afro-Asiatic (Other)	afh	Afrihili
afr	Afrikaans	ain	Ainu
aka	Akan	akk	Akkadian
alb (sqi)	Albanian	ale	Aleut
alg	Algonquian languages	alt	Southern Altai
amh	Amharic	ang	English, Old (ca.450-1100)
anp	Angika	apa	Apache languages
ara	Arabic	arc	Aramaic
arg	Aragonese	arm (hye)	Armenian
arn	Araucanian	arp	Arapaho
art	Artificial (Other)	arw	Arawak
asm	Assamese	ast	Asturian; Bable
ath	Athapascan languages	aus	Australian languages
ava	Avaric	ave	Avestan
awa	Awadhi	aym	Aymara
aze	Azerbaijani		

Code	Language	Code	Language
bad	Banda	bai	Bamileke languages
bak	Bashkir	bal	Baluchi
bam	Bambara	ban	Balinese
baq (eus)	Basque	bas	Basa
bat	Baltic (Other)	bej	Beja
bel	Belarusian	bem	Bemba
ben	Bengali	ber	Berber (Other)
bho	Bhojpuri	bih	Bihari
bik	Bikol	bin	Bini
bis	Bislama	bla	Siksika
bnt	Bantu (Other)	bod (tib)	Tibetan
bos	Bosnian	bra	Braj
bre	Breton	btk	Batak (Indonesia)
bug	Buginese	bug	Buginese
bul	Bulgarian	bur (mya)	Burmese
byn	Blin; Bilin		
cad	Caddo	cai	Central American Indian (Other)
car	Carib	cat	Catalan; Valencian
cau	Caucasian (Other)	ceb	Cebuano
cel	Celtic (Other)	ces (cze)	Czech
cha	Chamorro	chb	Chibcha
che	Chechen	chg	Chagatai
chi (zho)	Chinese	chk	Chuukese
chm	Mari	chn	Chinook jargon
cho	Choctaw	chp	Chipewyan
chr	Cherokee	chu	Church Slavonic; Old Slavonic; Church Slavonic; Old Bulgarian; Old Church Slavonic
chv	Chuvash	chy	Cheyenne
cmc	Chamic languages	cop	Coptic
cor	Cornish	cos	Corsican
cpe	Creoles and pidgins, English based (Other)	cpf	Creoles and pidgins, French-based (Other)
cpp	Creoles and pidgins, Portuguese-based (Other)	cre	Cree
crh	Crimean Tatar; Crimean Turkish	crp	Creoles and pidgins (Other)
csb	Kashubian	cus	Cushitic (Other)
cym (wel)	Welsh	cze (ces)	Czech
dak	Dakota	dan	Danish
dar	Dargwa	day	Dayak
del	Delaware	den	Slave (Athapascan)
deu (ger)	German	dgr	Dogrib
din	Dinka	div	Divehi; Dhivehi; Maldivian

Code	Language	Code	Language
doi	Dogri	dra	Dravidian (Other)
dsb	Lower Sorbian	dua	Duala
dum	Dutch, Middle (ca.1050-1350)	dut (nld)	Dutch; Flemish
dyu	Dyula	dzo	Dzongkha
efi	Efik	egy	Egyptian (Ancient)
eka	Ekajuk	ell (gre)	Greek, Modern (1453-)
elx	Elamite	eng	English
enm	English, Middle (1100-1500)	epo	Esperanto
est	Estonian	eus (baq)	Basque
ewe	Ewe	ewo	Ewondo
fan	Fang	fao	Faroese
fas (per)	Persian	fat	Fanti
fij	Fijian	fil	Filipino; Pilipino
fin	Finnish	fiu	Finno-Ugrian (Other)
fon	Fon	fra (fre)	French
fre (fra)	French	frm	French, Middle (ca.1400-1600)
fro	French, Old (842-ca.1400)	frr	Northern Frisian
frs	Eastern Frisian	fry	Western Frisian
ful	Fulah	fur	Friulian
gaa	Ga	gay	Gayo
gba	Gbaya	gem	Germanic (Other)
geo (kat)	Georgian	ger (deu)	German
gez	Geez	gil	Gilbertese
gla	Gaelic; Scottish Gaelic	gle	Irish
glg	Galician	glv	Manx
gmh	German, Middle High (ca.1050-1500)	goh	German, Old High (ca.750-1050)
gon	Gondi	gor	Gorontalo
got	Gothic	grb	Grebo
grc	Greek, Ancient (to 1453)	gre (ell)	Greek, Modern (1453-)
grn	Guarani	gsw	Alemannic; Swiss German
guj	Gujarati	gwi	Gwich'in
hai	Haida	hat	Haitian; Haitian Creole
hau	Hausa	haw	Hawaiian
heb	Hebrew	her	Herero
hil	Hiligaynon	him	Himachali
hin	Hindi	hit	Hittite
hmn	Hmong	hmo	Hiri Motu
hrv (scr)	Croatian	hsb	Upper Sorbian
hun	Hungarian	hup	Hupa
hye (arm)	Armenian		

Code	Language	Code	Language
iba	Iban	ibo	Igbo
ice (isl)	Icelandic	ido	Ido
iii	Sichuan Yi	ijo	Ijo
iku	Inuktitut	ile	Interlingue
ilo	Iloko	ina	Interlingua (International Auxiliary Language Association)
inc	Indic (Other)	ind	Indonesian
ine	Indo-European (Other)	inh	Ingush
ipk	Inupiaq	ira	Iranian (Other)
iro	Iroquoian languages	isl (ice)	Icelandic
ita	Italian		
jav	Javanese	jbo	Lojban
jpn	Japanese	jpr	Judeo-Persian
jrb	Judeo-Arabic		
kaa	Kara-Kalpak	kab	Kabyle
kac	Kachin	kal	Kalaallisut; Greenlandic
kam	Kamba	kan	Kannada
kar	Karen	kas	Kashmiri
kat (geo)	Georgian	kau	Kanuri
kaw	Kawi	kaz	Kazakh
kbd	Kabardian	kha	Khasi
khi	Khoisan (Other)	khm	Khmer
kho	Khotanese	kik	Kikuyu; Gikuyu
kin	Kinyarwanda	kir	Kirghiz
kmb	Kimbundu	kok	Konkani
kom	Komi	kon	Kongo
kor	Korean	kos	Kosraean
kpe	Kpelle	krc	Karachay-Balkar
krl	Karelian	kro	Kru
kru	Kurukh	kua	Kuanyama; Kwanyama
kum	Kumyk	kur	Kurdish
kut	Kutenai		
lad	Ladino	lah	Lahnda
lam	Lamba	lao	Lao
lat	Latin	lav	Latvian
lez	Lezghian	lim	Limburgan; Limburger; Limburgish
lin	Lingala	lit	Lithuanian
lol	Mongo	loz	Lozi
ltz	Luxembourgish; Letzeburgesch	lua	Luba-Lulua
lub	Luba-Katanga	lug	Ganda
lui	Luiseno	lun	Lunda
luo	Luo (Kenya and Tanzania)	lus	Iushai




Code	Language	Code	Language
mac (mkd)	Macedonian	mad	Madurese
mag	Magahi	mah	Marshallese
mai	Maithili	mak	Makasar
mal	Malayalam	man	Mandingo
mao (mri)	Maori	map	Austronesian (Other)
mar	Marathi	mas	Masai
may (msa)	Malay	mdf	Moksha
mdr	Mandar	men	Mende
mga	Irish, Middle (900-1200)	mic	Mi'kmaq; Micmac
min	Minangkabau	mis	Miscellaneous languages
mkd (mac)	Macedonian	mkh	Mon-Khmer (Other)
mlg	Malagasy	mlt	Maltese
mnc	Manchu	mni	Manipuri
mno	Manobo languages	moh	Mohawk
mol	Moldavian	mon	Mongolian
mos	Mossi	mri (mao)	Maori
msa (may)	Malay	mul	Multiple languages
mun	Munda languages	mus	Creek
mwl	Mirandese	mwr	Marwari
mya (bur)	Burmese	myn	Mayan languages
myv	Erzya		
nah	Nahuatl	nai	North American Indian
nap	Neapolitan	nau	Nauru
nav	Navajo; Navaho	nbl	Ndebele, South; South Ndebele
nde	Ndebele, North; North Ndebele	ndo	Ndonga
nds	Low German; Low Saxon; German, Low; Saxon, Low	nep	Nepali
new	Newari; Nepal Bhasa	nia	Nias
nic	Niger-Kordofanian (Other)	niu	Niuean
nld (dut)	Dutch; Flemish	nno	Norwegian Nynorsk; Nynorsk, Norwegian
nob	Norwegian Bokmal; Bokmal, Norwegian	nog	Nogai
non	Norse, Old	nor	Norwegian
nqo	N'ko	nso	Northern Sotho, Pedi; Sepedi
nub	Nubian languages	nwc	Classical Newari; Old Newari; Classical Nepal Bhasa
nya	Chichewa; Chewa; Nyanja	nym	Nyamwezi
nyn	Nyankole	nyo	Nyoro
nzi	Nzima		
oci	Occitan (post 1500); Provençal	oji	Ojibwa
ori	Oriya	orm	Oromo
osa	Osage	oss	Ossetian; Ossetic

Code	Language	Code	Language
ota	Turkish, Ottoman (1500-1928)	oto	Otomian languages
paa	Papuan (Other)	pag	Pangasinan
pal	Pahlavi	pam	Pampanga
pan	Panjabi; Punjabi	pap	Papiamento
pau	Palauan	peo	Persian, Old (ca.600-400 B.C.)
per (fas)	Persian	phi	Philippine (Other)
phn	Phoenician	pli	Pali
pol	Polish	pon	Pohnpeian
por	Portuguese	pra	Prakrit languages
pro	Provençal, Old (to 1500)	pus	Pushto
que	Quechua		
raj	Rajasthani	rap	Rapanui
rar	Rarotongan	roa	Romance (Other)
roh	Raeto-Romance	rom	Romany
ron (rum)	Romanian	rum (ron)	Romanian
run	Rundi	rup	Aromanian; Arumanian; Macedo-Romanian
rus	Russian		
sad	Sandawe	sag	Sango
sah	Yakut	sai	South American Indian (Other)
sal	Salishan languages	sam	Samaritan Aramaic
san	Sanskrit	sas	Sasak
sat	Santali	scc (srp)	Serbian
scn	Sicilian	sco	Scots
scr (hrv)	Croatian	sel	Selkup
sem	Semitic (Other)	sga	Irish, Old (to 900)
sgn	Sign Languages	shn	Shan
sid	Sidamo	sin	Sinhala; Sinhalese
sio	Siouan languages	sit	Sino-Tibetan (Other)
sla	Slavic (Other)	slk (slo)	Slovak
slo (slk)	Slovak	slv	Slovenian
sma	Southern Sami	sme	Northern Sami
smi	Sami languages (Other)	smj	Lule Sami
smn	Inari Sami	smo	Samoan
sms	Skolt Sami	sna	Shona
snd	Sindhi	snk	Soninke
sog	Sogdian	som	Somali
son	Songhai	sot	Sotho, Southern
spa	Spanish; Castilian	sqi (alb)	Albanian
srd	Sardinian	srn	Sranan Togo
srp (scc)	Serbian	srr	Serer
ssa	Nilo-Saharan (Other)	ssw	Swati

Code	Language	Code	Language
suk	Sukuma	sun	Sundanese
sus	Susu	sux	Sumerian
swa	Swahili	swe	Swedish
syr	Syriac		
tah	Tahitian	tai	Tai (Other)
tam	Tamil	tat	Tatar
tel	Telugu	tem	Timne
ter	Tereno	tet	Tetum
tgk	Tajik	tgl	Tagalog
tha	Thai	tib (bod)	Tibetan
tig	Tigre	tir	Tigrinya
tiv	Tiv	tkl	Tokelau
tlh	Klingon; tlhIngan-Hol	tli	Tlingit
tmh	Tamashek	tog	Tonga (Nyasa)
ton	Tonga (Tonga Islands)	tpi	Tok Pisin
tsi	Tsimshian	tsn	Tswana
tso	Tsonga	tuk	Turkmen
tum	Tumbuka	tup	Tupi languages
tur	Turkish	tut	Altaic (Other)
tvl	Tuvalu	twi	Twi
tyv	Tuvinian		
udm	Udmurt	uga	Ugaritic
uig	Uighur; Uyghur	ukr	Ukrainian
umb	Umbundu	und	Undetermined
urd	Urdu	uzb	Uzbek
vai	Vai	ven	Venda
vie	Vietnamese	vol	Volapuk
vot	Votic		
wak	Wakashan languages	wal	Walamo
war	Waray	was	Washo
wel (cym)	Welsh	wen	Sorbian languages
wln	Walloon	wol	Wolof
xal	Kalmyk; Oirat	xho	Xhosa
yao	Yao	yap	Yapese
yid	Yiddish	yor	Yoruba
ypk	Yupik languages		
zap	Zapotec	zen	Zenaga
zha	Zhuang; Chuang	zho (chi)	Chinese
znd	Zande	zul	Zulu
zun	Zuni		

### 3. DIGITAL SERVICE SET F2

Digital Service 1	Digital Broadcast System1
	Service Identification1
Digital Service 2	Digital Broadcast System2
	Service Identification2
Digital Service 3	Digital Broadcast System3
	Service Identification3

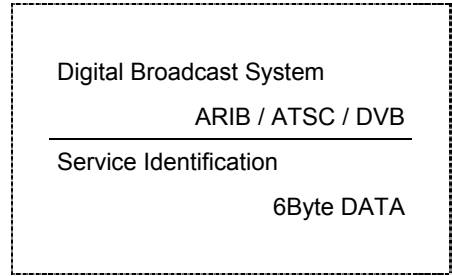


### 4. DEVICE INFO SET F3

Vendor ID	3-byte data
OSD NAME	ASCII max. 8 bytes

**Response EDIT [F3] :PAGE4**

This function is used to set the response to the received data. If the setting is not established, the response will be as per the CEC standard. It is possible to give a response which is an exception to the setting or to give no response using this setting.

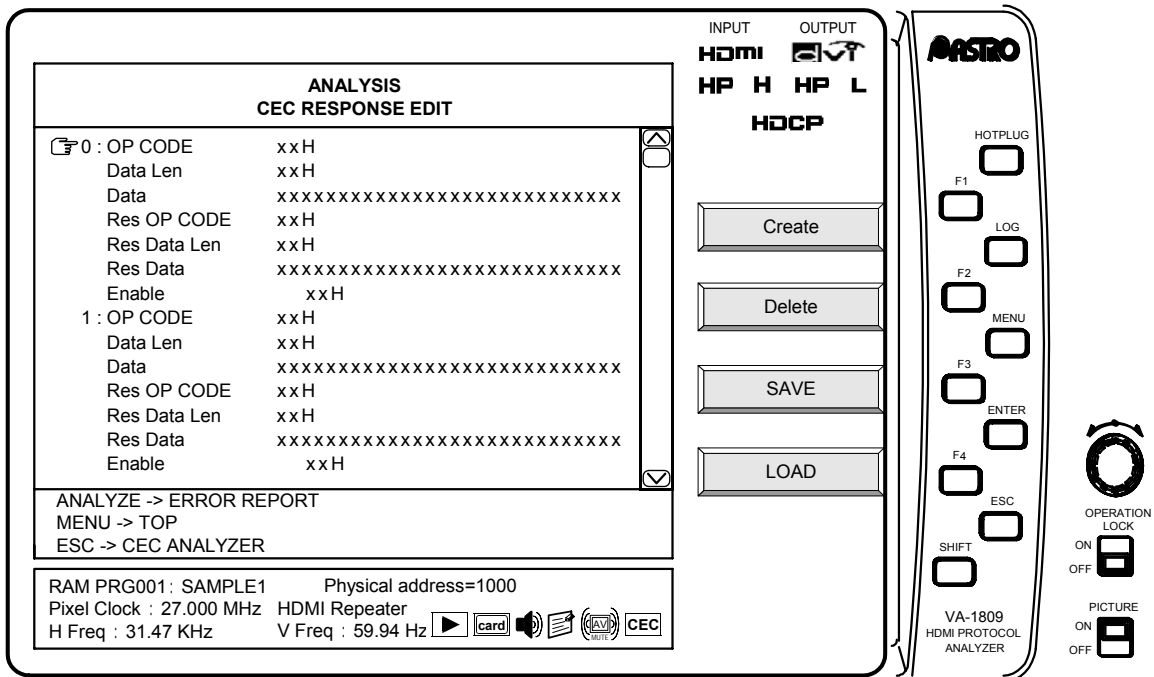

Listed below are the items which can be set.

Item	Description
OP CODE	Operand code with which the setting takes effect
Data Len	Data volume with which the setting takes effect
Data	Data with which the setting takes effect
Res OP CODE	Operand code which is returned
Res Data Len	Data volume which is returned
Res Data	Data which is returned
Enable	Whether to give a response and the destination when a response is to be given

The settings take effect when OP CODE, Data Len and Data above match the received data. When Enable is checked, the Res- data is returned.

→ **[F1] Create**

Press this to create up to ten return setting items.

→ **[F2] Delete**

Press this to delete a return setting item.

→ **[F3] SAVE**

Press this to save the data which has been set.

→ **[F4] LOAD**

Press this to load the data which has been saved.

**Line monitor / Destination monitor** F4 :PAGE4

This is used to switch between line monitor and destination monitor. At the line monitor setting, all the CEC line data is displayed, and at the destination monitor setting, only the data sent by the VA-1809 and data received (data sent to the VA-1809) are displayed.

**>> PAGE 5** -----

**Send DATA SAVE** F1 :PAGE5

This is used to store the transmission data which was set on the Send Data Monitor (see PAGE 3). The data is stored inside the VA main unit. (It cannot be stored on a card.)

**Send DATA LOAD** F2 :PAGE5

This is used to load the transmission data which has been saved. This data is set on the Send Data Monitor (see PAGE 3).


## 4.17 CEC Compliance Test Item Check

The HDMI standard mandates compliance testing in order to prevent connectivity problems and other trouble. Using the CEC Compliance Test Item Check function item of the VA-1809, it is possible to perform protocol layer tests among the CEC compliance tests. If the specifications of the device under test (DUT) are first set on the CDF (Capabilities Declaration Form), it is possible to select the items to be tested.

\* This is an optional function. For further details, contact a sales representative.

OSD non-display status → **ANALYZE**

→ Use **Rotary Key** to select and execute the CEC compliance test item checks.

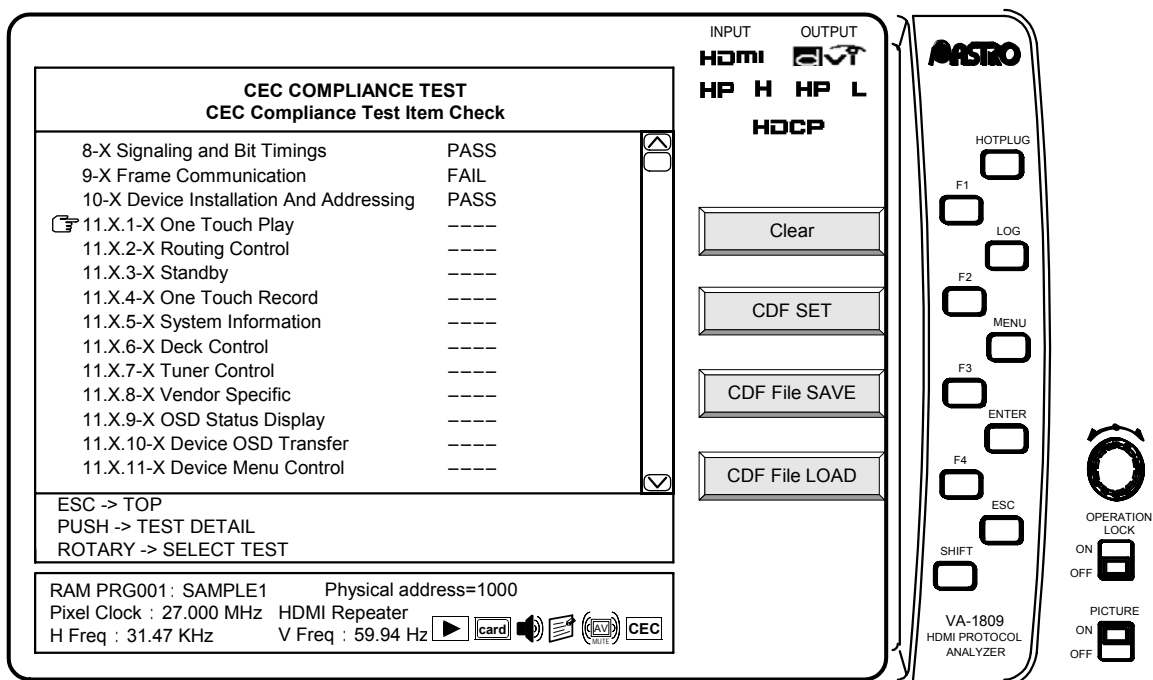


## ■ Description of function keys used exclusively for the CEC compliance test item checks

\* No functions keys which are used for the CEC compliance test item checks are shared with other functions: only exclusive-use function keys are used.

OSD non-display status → **ANALYZE**

→ Use **Rotary Key** to select and execute the CEC compliance test item checks.

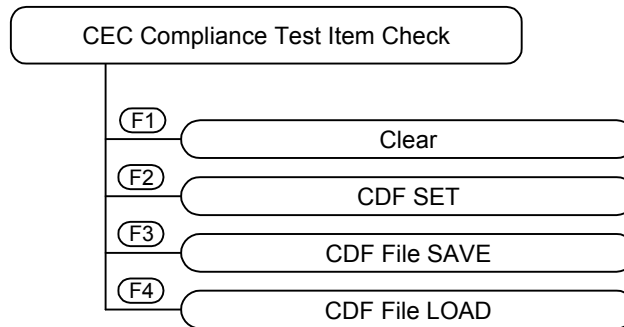

→ **F1 Clear**

This is used to initialize the display of the tested items.

→ **F2 CDF SET**

This is used to set the CDF (see page 104).

→ **F3 CDF File SAVE**

This is used to save the CDF data.

To save the data on a card, press New Card Number. In a case like this, the name of the data saved will be cdfxxx.cdf (where “xxx” is a number which does not exist on the card).

→ **F4 CDF File LOAD**

This is used to load the CDF data.

Use **Rotary Key** to select and execute the test items.

Display the test execution screen.



Before displaying the test execution screen, ensure that the VA-1809 and device under test (DUT) are connected. (The DUT address is captured as soon as the test execution screen appears.)




**(1) Executing the tests**

\* Before displaying the test execution screen, ensure that the VA-1809 and device under test (DUT) are connected.



The intervals between successive commands must be at least 3 bits (7.2ms). If this distance is not provided between them, the tests may not be performed properly.

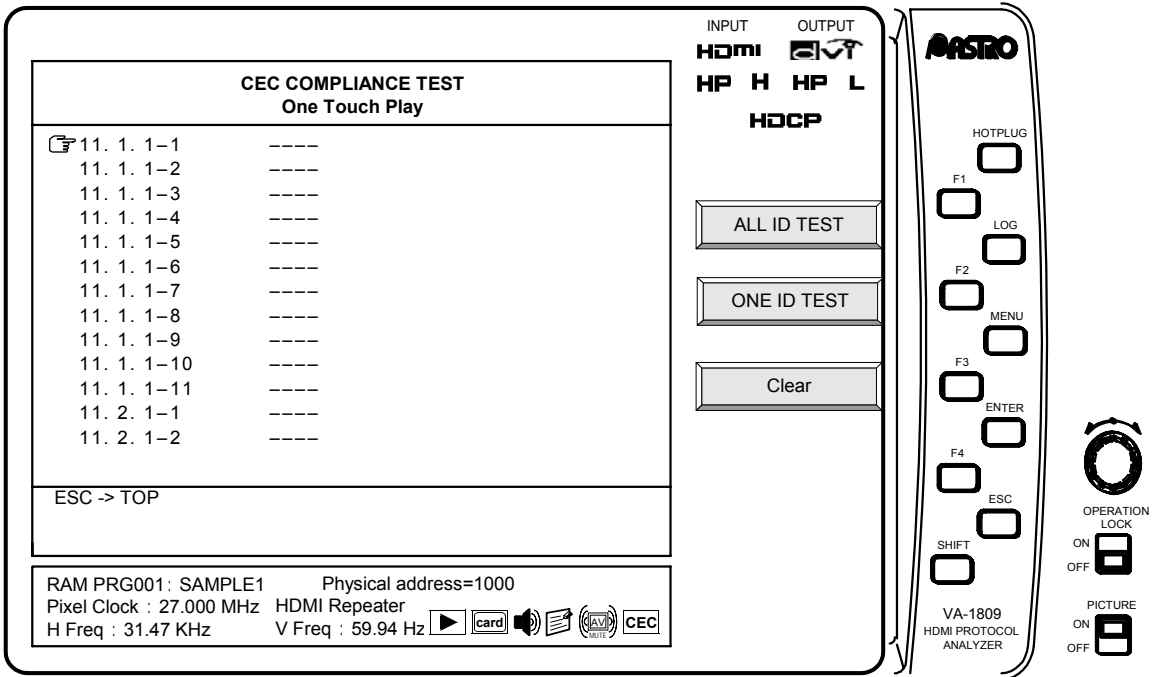


→ **F1 ALL ID TEST**

This is used to select and perform only those tests which are supported for the DUT and which have been set by CDF.

→ **F2 Rotary Key ONE ID TEST**

This is used to test only the items which have been selected.

● Display which appears during testing

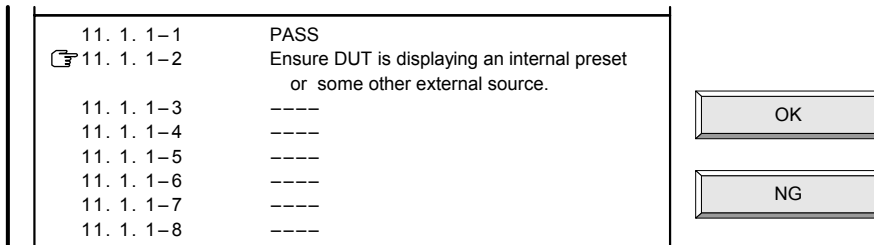

The tests are not performed completely automatically. The measurements which can be conducted by the main unit (response command present/absent and time measurements) are conducted automatically. In addition, it is necessary to check the connection methods and displayed information. If checking is required, the check items will be displayed on OSD so input **OK (F1)** or **NG (F2)**, and proceed with the tests. When the tests are completed, the result (PASS or FAIL) is displayed.

\* If the CDF settings (such as Device Type) have not been performed properly, the tests may not be performed.

For details on the tests, refer to “(3) Test details” (see page 109).

→ **F3** **Clear**

This is used to initialize the displays of the tested items.

## (2) **CDF SETTING**

→ **F2** **CDF SET**

This is used to display the CDF setting screen.

Listed below are the items which can be set.

- Device Type / CEC Features / CECMessages Supported
- LANGUAGE ( → **F1** ) Same as 2. LANGUAGE in DEVICE SETTING. (P.91)
- Digital Service ( → **F2** ) Same as 3. Digital Service in DEVICE SETTING. (P.98)
- DEVICE Information ( → **F3** ) Same as 4. DEVICE Information in DEVICE SETTING. (P.98)
- UI Command ( → **F4** ) P.108

The set data is saved and the saved data is loaded using the CDF File SAVE and LOAD functions.

## ● Device Type / CEC Features / CECMessages Supported

Item	Selection options
Device Type	Standard TV / TV with an HDMI Output / Recording Device / STB / DVD / Audio System / CEC Switch
CEC Features	
CEC Message	
One Touch Play	(Mandatory Feature)
Can DUT be brought out of Standby?	Support Yes / No
-> Does DUT(TV) have an internal source?	
-> Does DUT(TV) have a text mode?	
Active Source	Send Support Yes / No Receive Support Yes / No
Image View On	
Text View On	
Routing Control	(Mandatory Feature)
Request Active Source	Send Support Yes / No Receive Support Yes / No
Routing Change	
Routing Information	
Set Stream Path	
Standby	(Mandatory Feature)
Standby	Send Support Yes / No Receive Support Yes / No
One Touch Record	Support Yes / No
-> Does DUT(TV) have an internal source?	Support Yes / No
Record Off	Send Support Yes / No Receive Support Yes / No
Record On	
Record Status	
Record TV Screen	
System Information	(Mandatory Feature)
-> Language Supported	(Set using Language Set <input type="text" value="F1"/> )
Give Menu language	Send Support Yes / No Receive Support Yes / No
Give Physical Address	
Polling Message	
Report Physical Address	
Set Menu Language	

CEC Features		Selection options
	CEC Message	
Deck Control		Support Yes / No
	Deck Control	Send Support Yes / No
	Deck Control [Skip Forward / Wind Forward]	Receive Support Yes / No
	Deck Control [Skip Backward / Rewind]	
	Deck Control [Stop]	
	Deck Status	
	Give Deck Status	
	Give Deck Status [Once]	
	Play	
	Play [Play Forward]	
	Play [Play Reverse]	
	Play [Play Still]	
	Play [Scan Forward Min speed]	
	Play [Scan Forward Medium speed]	
	Play [Scan Forward Max speed]	
	Play [Scan Reverse Min speed]	
	Play [Scan Reverse Medium speed]	
	Play [Scan Reverse Max speed]	
	Play [Slow Forward Min speed]	
	Play [Slow Forward Medium speed]	
	Play [Slow Forward Max speed]	
	Play [Slow Reverse Min speed]	
	Play [Slow Reverse Medium speed]	
	Play [Slow Reverse Max speed]	
Tuner Control		Support Yes / No
	-> Which [Digital Broadcast System] does DUT support1?	(Set using D-Service Set <input type="text" value="F2"/> )
	-> Which [Digital Broadcast System] does DUT support2?	
	-> Does DUT have typical [ARIB (or ATSC or DVB) data1]?	
	-> Does DUT have typical [ARIB (or ATSC or DVB) data2]?	
	Give Tuner Device Status	Send Support Yes / No
	Select Digital Service	Receive Support Yes / No
	Tuner Device Status	
	Tuner Step Decrement	
	Tuner Step Increment	

CEC Features		Selection options
	CEC Message	
Vendor Specific		Support Yes / No
	Device Vendor ID	Send Support Yes / No
	Give Device Vendor ID	Receive Support Yes / No
	Vendor Command	
	Vendor Remote Button Down	
	Vendor Remote Button Up	
	-> Vendor ID used by the DUT	(Set using Device Info Set <input type="checkbox"/> F3)
OSD Status Display		Support Yes / No
	Set OSD String	Send Support Yes / No Receive Support Yes / No
Device OSD Transfer		Support Yes / No
	Give OSD Name	Send Support Yes / No
	Set OSD Name	Receive Support Yes / No
	-> Device OSD Name	(Set using Device Info Set <input type="checkbox"/> F3)
Device Menu Control		Support Yes / No
	Menu Request	Send Support Yes / No
	Menu Status	Receive Support Yes / No
Remote Control Passthrough		Support Yes / No
	User Control Pressed	Send Support Yes / No
	User Control Released	Receive Support Yes / No
	-> Supported Operation Ids as Initiator?	(Set using UI Command Set <input type="checkbox"/> F4)
	-> Supported Operation Ids as Follower?	
Power Status		Support Yes / No
	Give Device Power Status	Send Support Yes / No
	Report Device Power Status	Receive Support Yes / No

● UI Command Set **F4**

Select	Up	Down	Left
Right	Right-Up	Right-Down	Left-Up
Left-Down	Root Menu	Setup Menu	Contents Menu
Favorite Menu	Exit	Reserved (0x0E)	Reserved (0x0F)
Reserved (0x10)	Reserved (0x11)	Reserved (0x12)	Reserved (0x13)
Reserved (0x14)	Reserved (0x15)	Reserved (0x16)	Reserved (0x17)
Reserved (0x18)	Reserved (0x19)	Reserved (0x1A)	Reserved (0x1B)
Reserved (0x1C)	Reserved (0x1D)	Reserved (0x1E)	Reserved (0x1F)
Numbers 0	Numbers 1	Numbers 2	Numbers 3
Numbers 4	Numbers 5	Numbers 6	Numbers 7
Numbers 8	Numbers 9	Dot	Enter
Clear	Reserved (0x2D)	Reserved (0x2E)	Reserved (0x2F)
Channel Up	Channel Down	Previous Channel	Sound Select
Input Select	Display Information	Help	Page Up
Page Down	Reserved (0x39)	Reserved (0x3A)	Reserved (0x3B)
Reserved (0x3C)	Reserved (0x3D)	Reserved (0x3E)	Reserved (0x3F)
Power	Volume Up	Volume Down	Mute
Play	Stop	Pause	Record
Rewind	Fast forward	Eject	Forward
Backward	Reserved (0x4D)	Reserved (0x4E)	Reserved (0x4F)
Angle	Sub picture	Reserved (0x52)	Reserved (0x53)
Reserved (0x54)	Reserved (0x55)	Reserved (0x56)	Reserved (0x57)
Reserved (0x58)	Reserved (0x59)	Reserved (0x5A)	Reserved (0x5B)
Reserved (0x5C)	Reserved (0x5D)	Reserved (0x5E)	Reserved (0x5F)
Play Function	Pause-Play Function	Record Function	Pause-Record Function
Stop Function	Mute Function	Restore Volume Function	Tune Function
Select Disk Function	Select A/V Input Function	Select Audio Input Function	Reserved (0x6B)
Reserved (0x6C)	Reserved (0x6D)	Reserved (0x6E)	Reserved (0x6F)
Reserved (0x70)	F1 (Blue)	F2 (Red)	F3 (Green)
F4 (Yellow)	F5	Reserved (0x76)	Reserved (0x77)
Reserved (0x78)	Reserved (0x79)	Reserved (0x7A)	Reserved (0x7B)
Reserved (0x7C)			

**(3) Test details**

Listed below is the sequence in which the CEC compliance test item checks are performed by the VA-1809.

\* “DUT” denotes device under test; “TE” denotes the VA-1809 (test equipment).

Item	Required Test Method	Pass criteria
<b>Signaling and Bit Timings</b>		
Connect the HDMI input of DUT to the output of TE if DUT is a TV set or connect the HDMI output of DUT to the input of TE if DUT is any other device. Then conduct the following tests.		
8.2-1	Change the low period of the start bit to 3.5, 3.7 and 3.9ms, and send the DUT <Abort> message.	DUT sends ACK. DUT sends <Feature Abort>.
8.2-2	Change the high period of the start bit to 0.6, 0.8 and 1.0ms, and send the DUT <Abort> message.	DUT sends ACK. DUT sends <Feature Abort>.
8.2-3	Change the low period of one bit to 0.4, 0.6 and 0.8ms, and send the DUT <Abort> message.	DUT sends ACK. DUT sends <Feature Abort>.
8.2-4	Change the high period of one bit to 1.45, 1.8 and 2.15ms, and send the DUT <Abort> message.	DUT sends ACK. DUT sends <Feature Abort>.
8.2-5	Change the low period of the zero bit to 1.3, 1.5 and 1.7ms, and send the DUT <Abort> message.	DUT sends ACK. DUT sends <Feature Abort>.
8.2-6	Change the high period of the start bit to 0.55, 0.9 and 1.25ms, and send the DUT <Abort> message.	DUT sends ACK. DUT sends <Feature Abort>.
<b>Frame Communication</b>		
Connect the HDMI input of DUT to the output of TE if DUT is a TV set or connect the HDMI output of DUT to the input of TE if DUT is any other device (including a CEC switch). Then conduct the following tests.		
9.1-1	Send the DUT <Abort> message. * If DUT does not send ACK, the message is resent during the period from 7.2ms to 12ms. It will be resent for a maximum of 5 times.	DUT sends ACK'0'.
9.1-2	Send the <Abort> message to a device other than DUT.	DUT does not send ACK'0'.
9.1-3	Broadcast <Report Physical Address>. * If DUT does not send ACK, the message is resent during the period from 7.2ms to 12ms. It will be resent for a maximum of 5 times.	DUT sends ACK'1'.
9.2-1	Send the DUT <Abort> message.	DUT sends <Feature Abort> from the appropriate logical address.
9.2-2	[When DUT is a CEC switch] Broadcast a <Routing Information> [1.0.0.0].	[When DUT is a CEC switch] DUT broadcasts <Routing Information>.
	[When DUT is not a CEC switch] Send <Give Physical Address> to DUT.	[When DUT is not a CEC switch] DUT broadcasts <Report Physical Address>.
9.3-1	Send the <Abort> message to DUT.	DUT sends <Feature Abort>.
	Do not send ACK'0' to Header Block of the returned <Feature Abort>.	DUT sends <Feature Abort> five times with an interval of at least 3 nominal data bits between them.
9.3-2	Send the DUT <Abort> message.	DUT sends <Feature Abort>.
	Do not send ACK'0' to Data Block of the returned <Feature Abort>.	DUT sends <Feature Abort> five times with an interval of at least 3 nominal data bits between them.

Item	Required Test Method	Pass criteria
9.3-3	[When DUT is a CEC switch]	[When DUT is a CEC switch]
	Broadcast <Routing Information> [1.0.0.0].	DUT broadcasts <Routing Information>.
	Do not send ACK'1' in response to the returned <Broadcast message>.	DUT sends the Broadcast message five times with an interval of at least 3 nominal data bits between them.
	[When DUT is a not CEC switch]	[When DUT is a not CEC switch]
	Send Give Physical Address to DUT.	DUT broadcasts <Report Physical Address>.
9.3-4	Do not send ACK'1' in response to the returned Broadcast message.	DUT sends the Broadcast message five times with an interval of at least 3 nominal data bits between them.
	Send the DUT <Abort> message.	DUT sends <Feature Abort>.
9.3-4	Set the bus to Low impedance while DUT is sending High impedance.	DUT leaves an interval longer than 3 nominal data bit periods and send <Feature Abort> five times between them.
	Send the DUT <Abort> message.	DUT sends <Feature Abort>.
9.4-1	Set DUT to Active Source. Send <Active Source> with no [Physical Address]. Send Request Active Source.	DUT sends <Active Source>. (The commands of <Active Source> with no [Physical Address] must be ignored.)
9.5-1	Send the DUT <Abort> message. However, insert the destroyed bit into bit 3 of the first data block before sending the message.	DUT outputs a low bit with a length 1.4 to 1.6 times (3.4ms to 3.8ms) the nominal data bit period. DUT does not send <Feature Abort>.
9.6-1	Send the DUT <Abort> message.	DUT returns <Feature Abort>.
	Forcibly set to low the CEC line in the 0.8ms period 3.5ms after starting the transmission in response to the returned Feature Abort. (Send low impedance as the Start Bit.)	When DUT detects low, arbitration must be lost and the transmission of the current message must stop. DUT waits for a period of at least 5 bits and then resends the message.
9.6-2	Send the DUT <Abort> message.	DUT returns <Feature Abort>.
	DUT sends low impedance in the high impedance part while it is sending the source address.	When DUT detects low, arbitration must be lost and the transmission of the current message stops. DUT waits for a period of at least 5 bits and then resends the message.
9.7-1	Send the DUT <Abort> message.	DUT returns <Feature Abort>.
	Forcibly set to low the CEC line in the 0.8ms period 3.5ms after starting the transmission in response to the returned Feature Abort. (Send low impedance to the Start Bit.)	When DUT detects low, arbitration must be lost and the transmission of the current message stops. DUT waits for a period of at least 5 bits and then resends the message.
9.7-2	Send the DUT <Abort> message.	DUT waits for a period of at least 5 bits and then resends the <Feature Abort>.
9.7-3	Execute the One Touch Play feature or Remote Control Pass Through feature using DUT.	After sending the first message, DUT waits 7 nominal data bit period before sending the next message.



Item	Required Test Method	Pass criteria
Device Installation And Addressing		
<p>Items 10.X.1.1 pertain to the testing of regular TV sets, items 10.X.1.2 pertain to the testing of TV set with HDMI outputs, and items 10.X.2 pertain to the testing of devices other than TV sets. Only the tests for the Device Type which was set by Device Type under "CDF SETTING" (see page 110) are performed. When DUT is a regular TV set, set TE to Repeater, and connect the HDMI input of DUT to the output of TE; when DUT is a device other than a regular TV set, connect the HDMI output of DUT to the input of TE; and then perform the tests.</p>		
10.1.1.1-1	Connect DUT to the TE output. Send a <Give Physical Address> to the DUT.	The DUT broadcasts a <Report Physical Address> [0.0.0.0].
10.1.1.2-1	Allocate Physical Address [2.0.0.0] to DUT. Disconnect DUT from TE. Allocate Physical Address [1.0.0.0] to DUT.	The DUT broadcasts a <Report Physical Address> [1.0.0.0].
10.1.2-1	Connect DUT to the input of TE. Allocate Physical Address [2.0.0.0] to DUT. Disconnect DUT from TE. Allocate Physical Address [1.0.0.0] to DUT.	The DUT broadcasts a <Report Physical Address> [1.0.0.0].
10.1.2-2	Connect DUT to the input of TE. Allocate Physical Address [1.0.0.0] to DUT. Disconnect DUT from TE. Allocate Physical Address [2.3.4.5] to DUT.	The DUT broadcasts a <Report Physical Address> [2.3.4.5].
10.2.1.1-1	Send the polling message to logical address 0.	DUT must return ACK.
10.2.1.2-1	Set Logical Address of TE to 0. Allocate physical address [2.0.0.0] to DUT. Disconnect DUT from TE. Allocate Physical Address [1.0.0.0] to DUT.	<Report Physical Address> [1.0.0.0] is broadcast.
10.2.1.2-2	Allocate Physical Address [1.0.0.0] to DUT. Return ACK in response to the polling message which was sent by DUT to logical address 14.	DUT captures the logical address with an unregistered address (15). Also, <Report Physical Address is broadcast.
10.2. 2-1	Connect DUT to the input of TE. Disconnect the connection temporarily, and then re-establish the connection.	DUT sends the polling message to the recording device logical address, and captures the logical address. Also, <Report Physical Address> is broadcast.
10.2.2-2	Disconnect DUT from the input of TE. Ensure that the logical address captured by DUT in 10.2.2-1 is forcibly captured by TE. Connect DUT to the input of TE.	DUT sends the polling message to the recording device logical address, and captures the second logical address. Also, <Report Physical Address> is broadcast.
10.2.2-3	Disconnect DUT from the input of TE. Ensure that the logical address captured by DUT in 10.2.2-2 is forcibly captured by TE. Connect DUT to the input of TE.	DUT sends the polling message to the recording device logical address, and captures the third logical address. Also, <Report Physical Address> is broadcast.

Item	Required Test Method	Pass criateria
10.2.3-1	Connect DUT to the input of TE. Disconnect the connection temporarily, and then re-establish the connection.	DUT sends the polling message to the DVD logical address, and captures the logical address. Also, <Report Physical Address> is broadcast.
10.2.3-2	Disconnect DUT from the input of TE. Ensure that the logical address captured by DUT in 10.2.3-1 is forcibly captured by TE. Connect DUT to the input of TE.	DUT sends the polling message to the DVD logical address, and captures the second logical address. Also, <Report Physical Address> is broadcast.
10.2. 4-1	Connect DUT to the input of TE. Disconnect the connection temporarily, and then re-establish the connection.	DUT sends the polling message to the STB logical address, and captures the logical address. Also, <Report Physical Address> is broadcast.
10.2.4-2	Disconnect DUT from the input of TE. Ensure that the logical address captured by DUT in 10.2.4-1 is forcibly captured by TE. Connect DUT to the input of TE.	DUT sends the polling message to the STB logical address, and capture the second logical address. Also, <Report Physical Address> is broadcast.
10.2.4-3	Disconnect DUT from the input of TE. Ensure that the logical address captured by DUT in 10.2.4-2 is forcibly captured by TE. Connect DUT to the input of TE.	DUT sends the polling message to the STB logical address, and captures the third logical address. Also, <Report Physical Address> is broadcast.
10.2. 5-1	Disconnect the connection temporarily, and then re-establish the connection.	DUT sends the polling message to the audio system logical address, and captures the logical address. Also, <Report Physical Address> is broadcast.

Item	Required Test Method	Pass criteria
One Touch Play		
Items 11.1 pertain to the TV set tests, and items 11.2 pertain to the testing of devices other than TV sets. Only the tests for the Device Type which was set by Device Type under "CDF SETTING" (see page 104) are performed.		
Items 11.1 pertain to the TV set tests. Set TE to Repeater, and connect the HDMI input of DUT to the output of TE.		
11.1.1-1	Change the logical addresses of TE to 1, 3, 4, 5, and repeat the following steps. Display the internal preset or some other external source on DUT. Send <Image View ON> from TE. About 200ms later, broadcast Active Source from TE.	The DUT display switches to the HDMI input port connected on TE.
11.1.1-2	Change the logical addresses of TE to 1, 3, 4, 5, and repeat the following steps. Display the internal preset or some other external source on DUT. Send <Text View ON> from TE. About 200ms later, broadcast Active Source from TE.	The DUT display switches to the HDMI input port connected on TE.
11.1.1-3	Set DUT to the standby status. Send <Image View ON> from TE.	The power of DUT is turned on.
11.1.1-4	Set DUT to the standby status. Send <Text View ON> from TE.	The power of DUT is turned on.
11.1.1-5	Display the internal preset or some other external source on DUT. Also display the DUT menu. Send <Image View ON> from TE.	The DUT menu remains on the screen.
11.1.1-6	Display the internal preset or some other external source on DUT. Also display the DUT menu. Send <Text View ON> from TE.	The DUT menu is cleared from the screen.
11.1.1-7	Display the internal preset or some other external source on DUT. Send <Image View ON> from TE (logical address 15).	DUT ignores the message.
11.1.1-8	Display the internal preset or some other external source on DUT. Send <Text View ON> from TE (logical address 15).	DUT ignores the message.
11.1.1-9	Send <Active Source> from TE to DUT. (Let DUT display the external source.) Next, select the settings in such a way that the internal source is displayed on DUT.	DUT sends <Active> Source [0.0.0.0].
11.1.1-10	Set DUT to the Text Mode. Send <Image View On> from TE.	DUT clears the text display.
11.1.1-11	Set DUT to the Text Mode. Send <Text View On> from TE.	DUT clears the text display.

Item	Required Test Method	Pass criteria
Items 11.2 pertain to the testing of devices other than TV sets. Connect the HDMI output of DUT to the input of TE.		
11.2.1-1	Execute the One Touch Play feature from DUT to TE.	DUT sends <Active Source> after sending <Image View On> or <Text View On>.
11.2.1-2	Set DUT to the play status using <Active Source>. Broadcast <Active Source> from TE (logical address 15).	DUT ignores <Active Source> and continues to play.
<b>Routing Control</b> Items 11.1 pertain to the testing of TV sets, and items 11.2 pertain to the testing of devices other than TV sets. Only the tests for the Device Type which was set by Device Type under "CDF SETTING" (see page 104) are performed.		
Items 11.1 pertain to the testing of TV sets. Set TE to Repeater, and connect the HDMI input of DUT to the output of TE.		
11.1.2-1	Broadcast <Report Physical Address> [1.1.0.0] from TE (logical address 3). Broadcast <Report Physical Address> [1.2.0.0] from TE (logical address 4). Select one of the two devices above on the DUT menu.	<Set Stream Path> is sent from DUT.
11.1.2-2	Broadcast <Report Physical Address> [1.1.0.0] from TE (logical address 3). Broadcast <Report Physical Address> [1.2.0.0] from TE (logical address 4). Send <Image View On> from TE (logical address 3). About 200ms later, broadcast <Active Source> from TE (logical address 3). Broadcast <Routing Change> [1.1.0.0] [1.2.0.0] from logical address 15.	<Set Stream Path> [1.2.0.0] is sent from DUT. Alternatively, <Active Source> is sent, and the display switched to internal tuner.
11.1.2-3	Broadcast <Report Physical Address> [1.1.0.0] from TE (logical address 3). Broadcast <Report Physical Address> [1.2.1.0] from TE (logical address 4). Send <Image View On> from TE (logical address 3). About 200ms later, broadcast <Active Source> from TE (logical address 3). Broadcast <Routing Change> [1.1.0.0] [1.2.0.0] from TE (logical address 1). Broadcast <Routing Information> [1.2.1.0] from TE (logical address 15).	<Set Stream Path> [1.2.1.0] is sent from DUT. Alternatively, <Active Source> is sent, and the display switched to internal tuner.

Item	Required Test Method	Pass criteria
11.1.2-4	Broadcast <Report Physical Address> [1.1.0.0] from TE (logical address 3). Broadcast <Report Physical Address> [1.2.1.9] from TE (logical address 4). Send <Image View On> from TE (logical address 3). About 200ms later, broadcast <Active Source> from TE (logical address 3). Broadcast <Routing Change> [1.1.0.0] [1.2.0.0] from TE (logical address 15). Broadcast <Routing Information> [1.2.1.0] from TE (logical address 15). Broadcast <Routing Information> [1.2.1.9] from TE (logical address 15).	<Set Stream Path> [1.2.1.9] is sent from DUT. Alternatively, <Active Source> is sent, and the display switched to internal tuner.
11.1.2-5	Send <Active Source> from TE. Then broadcast <Request Active Source> from TE.	The DUT does not respond to <Request Active Source>.
11.1.2-6	Set DUT to <Active Source>. Broadcast <Request Active Source> from TE.	DUT returns <Active Source>.
11.1.2-7	Set DUT to <Active Source>. Send <Active Source> [1.0.0.0] from TE to the logical address of DUT. Broadcast <Request Active Source> from TE.	DUT returns <Active Source>.
Items 11.2 pertain to the testing of devices other than TV sets. Connect the HDMI output of DUT to the input of TE.		
11.2.2-1	Broadcast <Active Source> from TE (logical address 0). With the DUT power ON, check that DUT does not operate as <Active Device>. Broadcast <Set Stream Path> from TE so that DUT operates as <Active Source>.	DUT returns <Active Source>.
11.2.2-2	Set DUT to <Active Source>. Broadcast <Request Active Source> from TE.	DUT returns <Active Source>.
11.2.2-3	Change the logical addresses of TE to 1, 3, 4, 5, 15, and repeat the following steps. Set DUT to <Active Source>. Broadcast <Request Active Source> from TE.	DUT returns <Active Source>.
<b>System Standby</b>		
Items 11.1 pertain to the testing of TV sets, and items 11.2 pertain to the testing of devices other than TV sets. Only the tests for the Device Type which was set by Device Type under "CDF SETTING" (see page 104) are performed.		
Items 11.1 pertain to the testing of TV sets. Set TE to Repeater, and connect the HDMI input of DUT to the output of TE.		
11.1.3-1	Execute the system standby feature of DUT.	DUT broadcasts the standby message and switches to standby.
11.1.3-2	Change the logical addresses of TE to 1, 3, 4, 5, 13, 14, 15, and take the following steps. Set to the status in which DUT can transfer to standby. Broadcast standby from TE.	DUT switches to standby.

Item	Required Test Method	Pass criteria
11.1.3-3	Change the logical addresses of TE to 1, 3, 4, 5, 13, 14, 15, and take the following steps. Set to the status in which DUT can transfer to standby. Broadcast standby from TE.	DUT switches to standby.
Items 11.2 pertain to the testing of devices other than TV sets. Connect the HDMI output of DUT to the input of TE.		
11.2.3-1	Set to the status in which DUT can transfer to standby. Execute the system standby feature of DUT.	DUT broadcasts standby.
11.2.3-2	Change the logical addresses of TE to 1, 3, 4, 5, 15, and take the following steps. Check that the status is established in which DUT can transfer to standby. Broadcast standby from TE.	DUT switches to standby.
11.2.3-3	Change the logical addresses of TE to 1, 3, 4, 5, 15, and take the following steps. Check that the status is established in which DUT can transfer to standby. Send standby from TE to DUT.	DUT switches to standby.
<b>One Touch Record</b>		
Items 11.1 pertain to the testing of TV sets, and items 11.2 pertain to the testing of devices other than TV sets. Only the tests for the Device Type which was set by Device Type under "CDF SETTING" (see page 104) are performed.		
Items 11.1 pertain to the testing of TV sets. Set TE to Repeater, and connect the HDMI input of DUT to the output of TE.		
11.1.4-1	Change the logical addresses of TE to 1, 2, 9, and take the following steps. Display the internal tuner on DUT. Execute the One Touch Record feature of DUT.	DUT sends <Record On> [Digital Service] [Digital Service Identification].
11.1.4-2	Change the logical addresses of TE to 1, 2, 9, and take the following steps. Send <Image View On> from TE to DUT. Broadcast <Active Source> from TE. Execute the One Touch Record feature of DUT.	DUT sends <Record On> [Own Source].
11.1.4-3	Connect a source other than the VA-1809 to DUT (to its analog input connector, for instance), and display it. Send <Record TV Screen> from TE.	DUT does not send <Record On>.
11.1.4-4	Send Image View On from TE to DUT. Broadcast <Active Source> from TE. Execute the One Touch Record feature of DUT. Send <Record Status> [Recording own source] from TE to DUT. Stop recording using UI/Remote Control of DUT.	After selecting to stop recording, <Record Off> is sent.
11.1.4-5	Change the logical addresses of TE to 1, 2, 9, and take the following steps. Display the internal tuner on DUT. Send <Record TV Screen> from TE to DUT.	DUT sends <Record On> [Digital Service] [Digital Service Identification].

Item	Required Test Method	Pass criteria
11.1.4-6	Change the logical addresses of TE to 1, 2, 9, and take the following steps. Send <Image View On> from TE to DUT. Broadcast <Active Source> from TE. Send <Record TV Screen> from TE to DUT.	DUT sends <Record On> [Own Source].
11.1.4-7	In the * area, change the logical addresses of TE to 3, 4, 5, 14, 15, and take the following steps. Send <Image View On> from TE (logical address 1) to DUT. Broadcast <Active Source> from TE (logical address 1). Send <Record TV Screen> from TE (* address).	The DUT ignores TV Screen.
11.1.4-8	In the * area, change the logical addresses of TE to 1, 2, 9, and take the following steps. Send <Image View On> from logical address 4. Broadcast <Active Source> from logical address 4. Send <Record TV Screen> from TE (address of *).	DUT sends <Feature Abort> [Cannot Provide Source].
Items 11.2 pertain to the testing of devices other than TV sets. Connect the HDMI output of DUT to the input of TE.		
11.2.4-1	Install the media in DUT, and set to the record enable mode. Execute the One Touch Record feature of DUT.	DUT sends <Record TV Screen>.
	After DUT has sent Record TV Screen, send Feature Abort [Cannot Provide Source] from TE.	<Feature Abort> is received, and recording does not start.
11.2.4-2	At DUT, select the ID set in Digital Service 1 of CDF. Install the media in DUT, and set to the record enable mode. Send <Record On> [Digital Service] from TE.	DUT returns <Record Status> [Recording Digital Service]. DUT also changes the tuner to Specified service, and starts recording.
11.2.4-3	Check that DUT displays the internal tuner. Install the media in DUT, and set to the record enable mode. Send <Record On> [Own Source] from TE.	DUT returns <Record Status> [Recording Own Source]. DUT also starts internal tuner recording.
11.2.4-4	Check that DUT displays an external source (such as a camcorder). Install the media in DUT, and set to the record enable mode. Send <Record On> [Own Source] from TE.	DUT returns <Record Status> [Recording Own Source]. DUT also starts recording.
11.2.4-5	Display the internal tuner on DUT, install the media, and set to the record enable mode. Send <Record On> [Own Source].	DUT returns <Record Status> [Recording Own Source]. DUT also starts recording.
	Send <Record Off> from TE.	Recording stops.

Item	Required Test Method	Pass criteria
11.2.4-6	Display the internal tuner on DUT, install the media, and set to the record enable mode. Send <Record On> [Own Source] from TE (logical address 0).	DUT returns <Record Status> [Recording Own Source]. DUT also starts recording.
	Send <Record Off> from TE (logical address 14).	The message is ignored and recording continued.
11.2.4-7	Change the logical addresses of TE to 1, 3, 4, 5, and take the following steps. Send <Record On> [Own Source] from TE.	DUT returns <Record Status> [Recording Own Source]. DUT also starts recording.
	Send Record Off from TE.	Recording stops.
11.2.4-8	Display the internal tuner on DUT, install the media, and set to the record enable mode. Send <Record On> [Own Source] from TE (logical address 15).	DUT ignores the message.

#### System Information

Items 11.1 pertain to the testing of TV sets, and items 11.2 pertain to the testing of devices other than TV sets. Only the tests for the Device Type which was set by Device Type under "CDF SETTING" (see page 104) are performed.

Items 11.1 pertain to the testing of TV sets. Set TE to Repeater, and connect the HDMI input of DUT to the output of TE.		
11.1.5-1	Send the polling message to DUT.	ACK is returned.
11.1.5-2	Change the logical addresses of TE to 1, 3, 4, 5, 13, 14, 15, and take the following steps. Send <Give Physical Address> from TE to DUT.	DUT broadcasts <Report Physical Address>.
11.1.5-3	Broadcast <Report Physical Address> [1.0.0.0] from TE (logical address 15).	DUT ignores the message.
11.1.5-4	Change the language setting of DUT.	<Set Menu Language> is broadcast.
11.1.5-5	Change the logical addresses of TE to 1, 3, 4, 5, 13, 14, 15, and take the following steps. Send <Give Menu Language> from TE.	DUT is broadcast <Set Menu Language>.
Items 11.2 pertain to the testing of devices other than TV sets. Connect the HDMI output of DUT to the input of TE.		
11.2.5-1	Send the polling message to DUT.	ACK is returned.
11.2.5-2	Change the logical addresses of TE to 0, 1, 3, 4, 5, 15 (logical addresses other than those of DUT), and take the following steps. Send <Give Physical Address> from TE to DUT.	DUT broadcasts <Report Physical Address>.
11.2.5-3	Broadcast <Set Menu Language> [First language enabled by Language Set of CDF] from TE. If the language setting is not going to be changed, broadcast <Set Menu Language> [Second language enabled by Language Set of CDF] from TE.	The language setting is changed.
11.2.5-4	Broadcast <Set Menu Language> [Language not enabled by Language Set of CDF] from TE.	The language setting is not changed.



Item	Required Test Method	Pass criteria
11.2.5-5	In the * area, change the logical addresses of TE to 1, 3, 4, 5, 15, and take the following steps. Broadcast Set Menu Language [First language enabled by Language Set of CDF] from TE (logical address 0). Broadcast <Set Menu Language> [Second language enabled by Language Set of CDF] from TE (logical address 0). Broadcast <Set Menu Language> [First language enabled by Language Set of CDF] from TE (address of *).	The language setting is not changed.
<b>Deck Control</b>		
Items 11.1 pertain to the testing of TV sets, and items 11.2 pertain to the testing of devices other than TV sets. Only the tests for the Device Type which was set by Device Type under "CDF SETTING" (see page 104) are performed.		
Items 11.1 pertain to the testing of TV sets. Set TE to Repeater, and connect the HDMI input of DUT to the output of TE.		
11.1.6-1	Change the logical addresses of TE to 1, 4, and take the following steps. Send <Deck Control> or <Play message> from DUT. Send <Deck Status> from TE to DUT.	DUT is able to send <Deck Control> or <Play message>. If possible, check that <Deck Status> has been updated correctly at DUT.
11.1.6-2	Send <Play> [Forward] from DUT. Return <Deck Status> [Play] from TE.	DUT is able to receive <Deck Status>. If possible, check that <Deck Status> has been updated correctly at DUT.
11.1.6-3	Send <Play> [Forward] from DUT. Return <Deck Status> [Stop] from TE.	DUT is able to receive <Deck Status>. If possible, check that <Deck Status> has been updated correctly at DUT.
Items 11.2 pertain to the testing of devices other than TV sets. Connect the HDMI output of DUT to the input of TE.		
11.2.6-1	Play the DUT media. Send <Deck Control> [Skip Forward/Wind Forward] to DUT.	DUT skips forward or wind forward.
11.2.6-2	Play the DUT media. Send <Deck Control> [Skip Backward/Rewind] to DUT.	DUT skips backward or rewind.
11.2.6-3	Play the DUT media. Send <Deck Control> [Stop] to DUT.	DUT stops the play.
11.2.6-4	Change the logical addresses of TE to 0, 1, 3, 4, 5 (logical addresses other than those of DUT), and conduct the following tests. Play the DUT media. Send <Deck Control> [Stop] to DUT.	DUT stops the play.
11.2.6-5	Play the DUT media. Send <Deck Control> [Stop] from TE (logical address 15) to DUT.	DUT ignores the message and continue play.
11.2.6-6	Install the media in DUT, and set to the idle mode. Send <Play> [Play Forward] to DUT.	DUT starts play.

Item	Required Test Method	Pass criteria
11.2.6-7	Install the media in DUT, and set to the idle mode. Send <Play> [Play Reverse] to DUT.	DUT starts reverse play.
11.2.6-8	Play the DUT media. Send <Play> [Play still] to DUT.	DUT transfers from the play mode to play still mode.
11.2.6-9	Install the media in DUT, and set to the idle mode. Send <Play> [Play still] to DUT.	DUT transfers to the play still mode. Alternatively, DUT sends <Feature Abort>, and remains in the idle mode.
11.2.6-10	Install the media in DUT, and set to the idle mode. Send <Play> [Scan Forward Minimum] from TE (TV) to DUT. Change the parameters of the above command to the ones listed below, and conduct the tests one after the other. [Scan Forward Medium] [Scan Forward Maximum] [Scan Reverse Minimum] [Scan Reverse Medium] [Scan Reverse Maximum] [Slow Forward Minimum] [Slow Forward Medium] [Slow Forward Maximum] [Slow Reverse Minimum] [Slow Reverse Medium] [Slow Reverse Maximum]	DUT sends <Image View On> or <Text View On> to TE (TV), and starts play at the selected speed (or the closest speed if the selected speed is not supported) in the scan mode where applicable. Alternatively, DUT sends <Feature Abort>, and remains in the idle mode.
11.2.6-11	Play the DUT media. Send <Play> [Scan Forward Minimum] from TE (TV) to DUT. Change the parameters of the above command to the ones listed below, and conduct the tests one after the other. [Scan Forward Medium] [Scan Forward Maximum] [Scan Reverse Minimum] [Scan Reverse Medium] [Scan Reverse Maximum] [Slow Forward Minimum] [Slow Forward Medium] [Slow Forward Maximum] [Slow Reverse Minimum] [Slow Reverse Medium] [Slow Reverse Maximum]	The DUT switches to playing in the selected mode and speed (or a sensible close match if that speed is not supported).
11.2.6-12	Change the logical addresses of TE to 1, 3, 4, 5 (logical addresses other than those of DUT), and conduct the following tests. Install the media in DUT, and set to the idle mode.	Send <Play> [Play Forward] to DUT.
11.2.6-13	Install the media in DUT, and set to the idle mode. Send <Play> [Play Forward] from TE (logical address 15).	DUT ignores the message.

Item	Required Test Method	Pass criteria
11.2.6-14	Play the DUT media. Send <Give Deck Status> [Once] to DUT. Change the DUT mode as below, and conduct the tests one after the other. Playing Forwards Playing Reverse Paused Slow Forwards Slow Backwards Scan Forwards Scan Backwards Stopped media present No media present Winding forwards Winding backwards Recording	DUT sends the appropriate <Deck Status>. Listed below are the parameters corresponding to the modes. Playing Forwards – [Play] Playing Reverse – [Play Reverse] Paused – [Still] Slow Forwards – [Slow] Slow Backwards – [Slow Reverse] Scan Forwards – [Search Forward] Scan Backwards – [Search Reverse] Stopped media present – [Stop] No media present – [No Media] Winding forwards – [Wind] Winding backwards – [Rewind] Recording – [Record]
11.2.6-15	Set DUT to idle, and install the media. Send <Give Deck Status> [On] to DUT.	DUT sends <Deck Status> [Stop].
	Press the play key on DUT.	DUT sends <Deck Status> [Play].
	Press the stop key on DUT.	DUT sends <Deck Status> [Stop].
	Send <Give Deck Status> [Off] to DUT. Press the play key on DUT.	DUT does not send <Deck Status>.
11.2.6-16	Change the logical addresses of TE to 1, 3, 4, 5 (logical addresses other than those of DUT), and take the following steps. Play the DUT media. Send <Give Deck Status> [Once] to DUT.	DUT sends <Deck Status> [Play].
11.2.6-17	Play the DUT media. Send <Give Deck Status> [Once] from TE (logical address 15).	DUT <ignores> the message.
<b>Tuner Control</b> Items 11.1 pertain to the testing of TV sets, and items 11.2 pertain to the testing of devices other than TV sets. Only the tests for the Device Type which was set by Device Type under “CDF SETTING” (see page 104) are performed.		
Items 11.1 pertain to the testing of TV sets. Set TE to Repeater, and connect the HDMI input of DUT to the output of TE.		
11.1.7-1	Change the logical addresses of TE to 1, 3, and conduct the following tests. Execute the tuner control feature of DUT. If <Give Tuner Device Status> has been sent, return Digital service which was set in CDF. Send <Tuner Step Increment> from DUT.	DUT sends <Tuner Step Increment>.

Item	Required Test Method	Pass criteria
11.1.7-2	Change the logical addresses of TE to 1, 3, and conduct the following tests. Execute the tuner control feature of DUT. If <Give Tuner Device Status> has been sent, return Digital service which was set in CDF. Send <Tuner Step Decrement> from DUT.	DUT sends <Tuner Step Decrement>.
11.1.7-3	Send <Tuner Device Status> [Not Displaying Tuner] [Digital service set in CDF] to DUT.	DUT does not respond with <Feature Abort>.
Items 11.2 pertain to the testing of devices other than TV sets. Connect the HDMI output of DUT to the input of TE.		
11.2.7-1	Change the logical addresses of TE to 0, 1, 3, 4, 5 (logical addresses other than those of DUT), and conduct the following tests. Turn on the power of DUT, and select Digital service 1 set in CDF. Send <Select Digital Service> [Digital service 2 set in CDF] to DUT.	DUT changes to Digital service 2 set in CDF.
11.2.7-2	Turn on the power of DUT, and select Digital service 1 set in CDF. Send <Select Digital Service> [Digital service 2 set in CDF] from TE (logical address 15) to DUT.	DUT ignores the message.
11.2.7-3	Turn on the power of DUT, and select Digital service 1 set in CDF. Send <Select Digital Service> [Digital service 1 set in CDF] to DUT.	DUT ignores the message, and Digital service 1 set in CDF remains unchanged.
11.2.7-4	Change the logical addresses of TE to 0, 1, 3, 4, 5, and conduct the following tests. Turn on the power of DUT. Send <Tuner Step Increment> to DUT.	DUT increments the Digital service number received.
11.2.7-5	Turn on the power of DUT. Send <Tuner Step Increment> from TE (logical address 15) to DUT.	DUT ignores the message.
11.2.7-6	Change the logical addresses of TE to 0, 1, 3, 4, 5 (logical addresses other than those of DUT), and conduct the following tests. Turn on the power of DUT. Send <Tuner Step Decrement> to DUT.	DUT decrements the Digital service number received.
11.2.7-7	Turn on the power of DUT. Send <Tuner Step Decrement> from TE (logical address 15) to DUT.	DUT ignores the message.
11.2.7-8	Change the logical addresses of TE to 0, 1, 3, 4, 5, and conduct the following tests. Display the tuner on DUT. Send <Give Tuner Device Status> [Once] to DUT.	DUT returns <Tuner Device Status> using the service number of the currently displayed tuner.

Item	Required Test Method	Pass criteria
11.2.7-9	Display the tuner on DUT. Send <Give Tuner Device Status> [Once] from TE (logical address 15) to DUT.	DUT ignores the message.
11.2.7-10	Display the tuner on DUT. Send <Give Tuner Device Status> [On] to DUT.	DUT returns <Tuner Device Status> using the service number of the currently displayed tuner.
	Change Digital service of DUT.	DUT returns <Tuner Device Status> using the new service number.
	Send <Give Tuner Device Status> [Off]. Change Digital service of DUT.	DUT does not send <Tuner Device Status>.
Vendor Specific Commands		
Items 11.1 pertain to the testing of TV sets, and items 11.2 pertain to the testing of devices other than TV sets. Only the tests for the Device Type which was set by Device Type under "CDF SETTING" (see page 104) are performed.		
Items 11.1 pertain to the testing of TV sets. Set TE to Repeater, and connect the HDMI input of DUT to the output of TE.		
11.1.8-1	Change the logical addresses of TE to 1, 3, 4, 5, 13, 14, 15, and conduct the following tests. Send <Give Device Vendor ID> to DUT.	DUT broadcasts <Device Vendor ID> using the appropriate ID.
Items 11.2 pertain to the testing of devices other than TV sets. Connect the HDMI output of DUT to the input of TE.		
11.2.8-1	Change the logical addresses of TE to 0, 1, 3, 4, 5, 15 of TE (logical addresses other than those of DUT), and conduct the following tests. Send <Give Device Vendor ID> to DUT.	DUT broadcasts <Device Vendor ID> using the appropriate ID.
OSD Status Display		
Items 11.1 pertain to the testing of TV sets, and items 11.2 pertain to the testing of devices other than TV sets. Only the tests for the Device Type which was set by Device Type under "CDF SETTING" (see page 104) are performed.		
Items 11.1 pertain to the testing of TV sets. Set TE to Repeater, and connect the HDMI input of DUT to the output of TE.		
11.1.9-1	Change the logical addresses of TE to 1, 3, 4, 5, 13, 14, and conduct the following tests. Set DUT to a status in which OSD String can be displayed. Send <Set OSD String> [Display For Default Time] [Test String] to DUT.	DUT displays the message during the default time period, and then clears it.
11.1.9-2	Set DUT to a status in which OSD String can be displayed. Send <Set OSD String> [Display Until Cleared] [Test String] to DUT.	The "Test String" message is displayed.
	After the "Test String" message has been displayed and a period of time exceeding the default time period has elapsed, send <Set OSD String> [Clear Previous Message] to DUT.	The OSD text is cleared.

Item	Required Test Method	Pass criteria
11.1.9-3	Set DUT to a status in which OSD String can be displayed.	
	Send <Set OSD String> [Display Until Cleared] [Test String] from TE (logical address 1) to DUT.	DUT displays the "Test String" message.
	Send <Set OSD String> [Display For Default Time] [Second String] from TE (logical address 2) to DUT.	DUT clears the previous message and display the "Second String" message.
Items 11.2 pertain to the testing of devices other than TV sets. Connect the HDMI output of DUT to the input of TE.		
11.2.9-1	Send <Set OSD String> [OSD String] to logical address 0 from DUT.	DUT provides the appropriate [OSD String] parameter, and sends <Set OSD String> [OSD String].
<b>Device OSD Name Transfer</b> Items 11.1 pertain to the testing of TV sets, and items 11.2 pertain to the testing of devices other than TV sets. Only the tests for the Device Type which was set by Device Type under "CDF SETTING" (see page 104) are performed.		
Items 11.1 pertain to the testing of TV sets. Set TE to Repeater, and connect the HDMI input of DUT to the output of TE.		
11.1.10-1	Change the logical addresses of TE to 1, 3, 4, 5, 13, 14, and conduct the following tests.	
	Broadcast <Report Physical Address> [1.0.0.0].	DUT sends <Give OSD Name> to the appropriate address.
	After DUT has sent Give OSD Name, send <Set OSD Name> to DUT.	DUT recognizes TE as Test Device on the DUT menu.
11.1.10-2	Broadcast <Report Physical Address> [1.0.0.0] from TE (logical address 15).	DUT does not send <Give OSD Name>.
Items 11.2 pertain to the testing of devices other than TV sets. Connect the HDMI output of DUT to the input of TE.		
11.2.10-1	Change the logical addresses of TE to 0, 1, 3, 4, 5 of TE (logical addresses other than those of DUT), and take the following steps. Send <Give OSD Name> to DUT.	DUT sends <Set OSD Name> to the appropriate address.
11.2.10-2	Send <Give OSD Name> from TE (logical address 15) to DUT.	DUT ignores the message.
<b>Device Menu Control</b> Items 11.1 pertain to the testing of TV sets, and items 11.2 pertain to the testing of devices other than TV sets. Only the tests for the Device Type which was set by Device Type under "CDF SETTING" (see page 104) are performed.		
Items 11.1 pertain to the testing of TV sets. Set TE to Repeater, and connect the HDMI input of DUT to the output of TE.		
11.1.11-1	Change the logical addresses of TE to 1, 3, 4, 5, 13, 14, and conduct the following tests. Set DUT to the status in which the remote control keys can be transferred. Send <Image View On> to DUT. Broadcast <Active Source>. Send <Menu Status> [Activated] to DUT. Press the remote control UP key on DUT.	When the key is pressed, DUT sends <USER Control>.

Item	Required Test Method	Pass criateria
11.1.11-2	Set DUT to the status in which the remote control keys can be transferred. Send <Image View On> from TE (logical address 15) to DUT. Broadcast <Active Source>. Send <Menu Status> [Activated] to DUT. Press the remote control UP key on DUT.	DUT does not send USER Control.
11.1.11-3	Set DUT to the status in which the remote control keys can be transferred. Send <Image View On> to DUT. Broadcast <Active Source>. Send <Menu Status> [Activated] to DUT. Send <Menu Status> [Deactivated] from the current source device to DUT. Press the remote control UP key on DUT.	DUT does not send USER Control.
11.1.11-4	Set DUT to the status in which the remote control keys can be transferred. Send <Image View On> to DUT. Broadcast <Active Source>. Execute the Device Menu Control feature of DUT.	DUT sends Menu Request [Activate] to the current active source device.
11.1.11-5	Set DUT to the status in which the remote control keys can be transferred. Send <Image View On> to DUT. Broadcast <Active Source>. Send <Menu Status> [Activated] to DUT. Stop the Device Menu Control feature of DUT.	DUT sends Menu Request [Deactivate] to the current source device.
11.1.11-6	Display internal tuner or an external source not supported by CEC on DUT. Also, set DUT to the status in which the remote control keys can be transferred. Send <Menu Status> [Activated] to DUT. Press the remote control UP key on DUT.	USER Control is not sent.
11.1.11-7	Set DUT to the status in which the remote control keys can be transferred. Send <Image View On> from TE (logical address 1) to DUT. Broadcast <Active Source> from TE (logical address 1). Send <Menu Status> [Activated] from TE (logical address 2). Press the remote control UP key on DUT.	USER Control is not sent.

Item	Required Test Method	Pass criteria
Items 11.2 pertain to the testing of devices other than TV sets. Connect the HDMI output of DUT to the input of TE.		
11.2.11-1	Check that the DUT menu is not set to Active. Check that DUT is the current Active Source. Call Device Menu of DUT.	When Menu is called, DUT sends Menu Status [Activated].
11.2.11-2	Call the DUT menu. Set DUT as the current Active Source. Call Device Menu of DUT.	When Menu is called, DUT sends Menu Status [Deactivated].
11.2.11-3	Set DUT as the current Active Source. Send <Menu Request> [Activate] to DUT.	DUT sends <Menu Status> [Activated] or <Menu Status> [Deactivated].
11.2.11-4	Set DUT as the current Active Source. Send <Menu Request> [Deactivate] to DUT.	DUT must send Menu Status [Activated] or Menu Status [Deactivated].
11.2.11-5	Change the logical addresses of TE to 0, 1, 3, 4, 5 of TE (logical addresses other than those of DUT), and conduct the following tests. Set DUT as the current Active Source. Send <Menu Request> [Query] from TE to DUT.	DUT sends <Menu Status> [Activated] or <Menu Status> [Deactivated].
11.2.11-6	Set DUT as the current Active Source. Send <Menu Request> [Query] from TE (logical address 15).	DUT ignores the message.
11.2.11-7	Set DUT as the current Active Source. Send <Menu Request> [Activate] to DUT. Send <User Control Pressed> using the following user control codes: Select, Up, Down, Left, Right After sending each of the user control codes, send <User Control Released> to DUT.	The DUT menu is called. The DUT menu responds to the message sent.

#### Remote Control Pass Through

Items 11.1 pertain to the testing of TV sets, and items 11.2 pertain to the testing of devices other than TV sets. Only the tests for the Device Type which was set by Device Type under "CDF SETTING" (see page 104) are performed.

Items 11.1 pertain to the testing of TV sets. Set TE to Repeater, and connect the HDMI input of DUT to the output of TE.		
11.1.12-1	Set the logical address of TE to 1. Set the remote control of DUT to point at Recording Device. Press the Remote Control Key with which DUT sends to the Recording Device.	DUT sends <User Control Pressed> and then <User Control Released>.
11.1.12-2	Set the logical address of TE to 4. Set the remote control of DUT to point at Recording Device. Press the Remote Control Key with which DUT sends to the DVD.	DUT sends <User Control Pressed> and then <User Control Released>.
11.1.12-3	Set the logical address of TE to 3. Set the remote control of DUT to point at STB. Press the Remote Control Key with which DUT sends to STB.	DUT sends <User Control Pressed> and then <User Control Released>.



Item	Required Test Method	Pass criteria
11.1.12-4	Set the logical address of TE to 5. Set the remote control of DUT to point at Audio System. Press the Remote Control Key with which DUT sends to Audio System.	DUT sends <User Control Pressed> and then <User Control Released>.
11.1.12-5	Select Device Type to which DUT can send Remote Control Key.  ----- <When Recording Devices are supported> Set TE to logical address 1. Broadcast <Report Physical Address> [2.0.0.0] from TE (logical address 2). Set the remote control of DUT to point at Recording Device. Press some of the Remote Control Keys with which DUT sends to Recording Device.  ----- <When DVDs are supported> Set TE to logical address 4. Broadcast <Report Physical Address> [2.0.0.0] from TE (logical address 8). Set the remote control of DUT to point at DVD. Press some of the Remote Control Keys with which DUT sends to DVD.  ----- <When STBs are supported> Set TE to logical address 3. Broadcast <Report Physical Address> [2.0.0.0] from TE (logical address 6). Set the remote control of DUT to point at STB. Press some of the Remote Control Keys with which DUT sends to STB.	User Control Pressed and then User Control Released are sent. In addition, they are not sent to a multiple number of Recording Devices, DVDs or STBs.
11.1.12-6	Send <Image View On> to DUT. Broadcast <Active Source>. Press the Remote Control Key with which DUT transfers to Recording Device. Before releasing the key, transfer DUT to the standby mode.	DUT sends <User Control Pressed>. In addition, before transferring to the standby status, it sends <User Control Released>.
Items 11.2 pertain to the testing of devices other than TV sets. Connect the HDMI output of DUT to the input of TE.		
11.2.12-1	Send <User Control Pressed> of the key set in CDF to DUT. Send <User Control Released> to DUT. Change the key, and repeat the above steps.	DUT operates in such a way that the Remote Control Key is pressed inside (by DUT itself).
11.2.12-2	Among the keys set in CDF, use the key set first to send <User Control Pressed> five times in succession (with no <User Control Released> in between). Finally, send <User Control Released> to DUT.	After receiving <User Control Released>, DUT stops the Remote Control Key operation.

Item	Required Test Method	Pass criteria
<b>Give Device Power Status</b>		
Items 11.1 pertain to the testing of TV sets, and items 11.2 pertain to the testing of devices other than TV sets. Only the tests for the Device Type which was set by Device Type under "CDF SETTING" (see page 104) are performed.		
Items 11.1 pertain to the testing of TV sets. Set TE to Repeater, and connect the HDMI input of DUT to the output of TE.		
11.1.13-1	Turn on the power of DUT. Send <Give Device Power Status> to DUT.	DUT sends Report Power Status [On].
11.1.13-2	Set DUT to the standby mode. Send <Give Device Power Status> to DUT.	DUT sends Report Power Status [Standby].
Items 11.2 pertain to the testing of devices other than TV sets. Connect the HDMI output of DUT to the input of TE.		
11.2.13-1	Turn on the power of DUT. Send <Give Device Power Status>.	DUT sends Report Power Status [On].
11.2.13-2	Set DUT to the standby mode. Send <Give Device Power Status> to DUT.	DUT sends Report Power Status [Standby].
<b>CEC Switch</b>		
11.3.1-1	Connect the TE output to any slave position of DUT. Select slave position 1 as the DUT port. Broadcast <Active Source> [1.0.0.0].	The DUT does not switch.
11.3.1-2	Connect the TE output to any slave position of DUT. Select slave position 1 as the DUT port. Broadcast <Active Source> [2.0.0.0].	The DUT switches to position 2.
11.3.1-3	Connect the TE output to any slave position of DUT. Select slave position 1 as the DUT port. Broadcast <Set Stream Path> [1.1.0.0].	The DUT does not switch.
11.3.1-4	Connect the TE output to any slave position of DUT. Select slave position 1 as the DUT port. Broadcast <Set Stream Path> [2.1.0.0].	The DUT does not switch.
11.3.1-5	Connect the TE input to DUT. (Set the physical address of DUT to 1.0.0.0.) Select slave position 1 as the DUT port. Broadcast <Routing Change> [0.0.0.0] [1.1.0.0] (from TE).	The DUT broadcasts a <Routing Information> [1.1.0.0].
11.3.1-6	Connect the TE output to any slave position of DUT. Broadcast <Routing Change> [1.0.0.0].	The DUT broadcasts a <Routing Information> [1.1.0.0].
11.3.2-1	Connect the TE input to DUT. (Set the physical address of DUT to 1.0.0.0.) Select slave position 1 as the DUT port. Change the DUT port to slave position 2.	Routing Information [1.1.0.0] [1.2.0.0] is broadcast.

Item	Required Test Method	Pass criteria
<b>Invalid Message</b> When DUT is a regular TV set, set TE to Repeater, connect the HDMI input of DUT to the output of TE; when DUT is any other device, connect the HDMI output of DUT to the input of TE. Then conduct the tests.		
12-1	For the message which has been set in CDF to be broadcast, send it as a directly addressed message to the DUT.	The DUT ignores the message.
12-2	For the message which has been set in CDF and to be directly addressed, send it as a broadcast message.	The DUT ignores the message.

## 4.18 Other functions

### 4.18.1 Hot plug function

The hot plug status can be changed by pressing the HOTPLUG button.

The hot plug function can be used when the measurement results are displayed using the **ANALYZE** button.


For the HOTPLUG button settings, refer to “6.3.5 HOT PLUG MODE” on page 157.

### 4.18.2 Log function

In the VA-1809, this function makes it possible to apply a trigger in the HDMI input status and import the measurement results on a CF card as a log. There are four kinds of logs: logs for the DDC line monitor, logs for the CEC line monitor, logs for the HDCP Repeater Sequence, and analysis data logs. They can be captured simultaneously.

The data in each log is saved as a text file.

**LOG** Moves to the Log screen

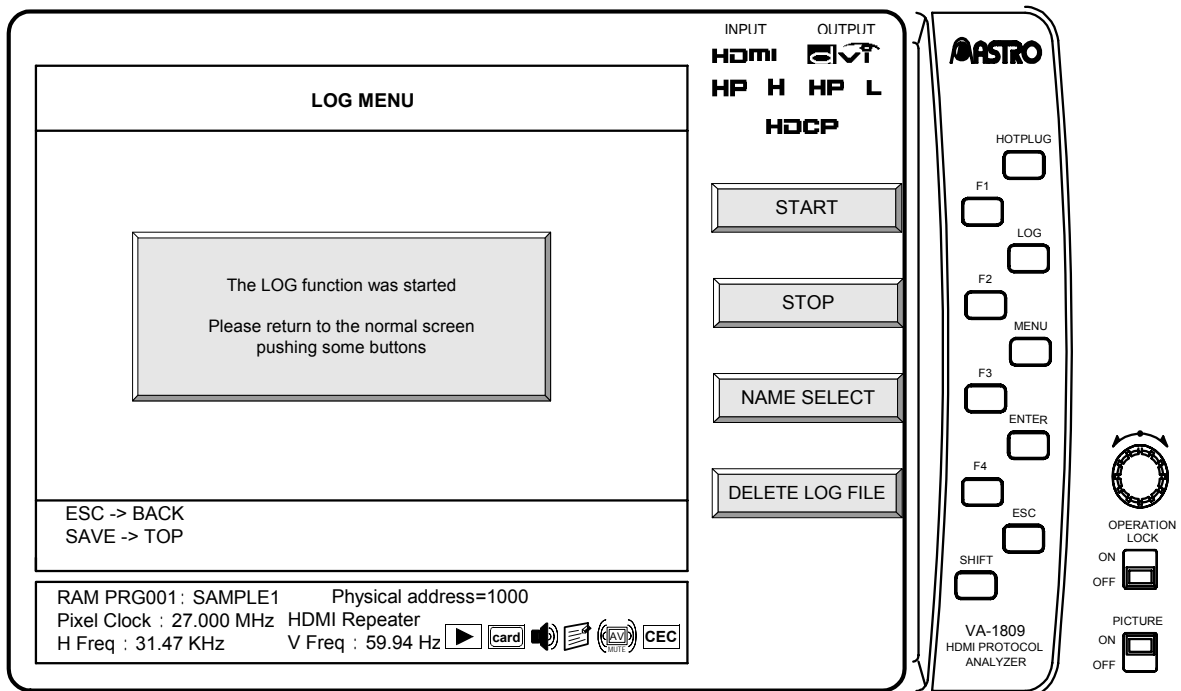

\* For details on the log import trigger settings, refer to “6.3.2 ANALYSIS & LOG TRIGGER” on page 154.

**START** **F1**

This function key starts loading a log.

**STOP** **F2**

This function key stops loading a log.

**NAME SELECT** **F3**

This function key changes the name of a log file.

\* A new file name must be set before acquiring a log.

**DETELE LOG FILE** **F4**

This function key deletes a log file. Select the log file you want to delete with the rotary key, and then delete it.

Presented below is an outline of each type of log file.

Log file	Extension	Description
ANALYSIS DATA	.log	All data to be captured by the ANALYSIS item except for information relating to the DDC monitor and CEC can be captured in these logs. The log capture times are also noted in the logs.
HDCP Repeater Sequence	.hdc	The information to be captured by the HDCP Repeater Sequence Check area of the ANALYSIS item can be captured as these logs.
DDC line monitor	.dcl	The information to be captured by the DDC Line Monitor area of the ANALYSIS item can be captured as these logs. The log capture times are also noted in the logs.
CEC line monitor	.cel	The information to be captured by the CEC Line Monitor area of the ANALYSIS item can be captured in the HEX display status in these logs.

\* Log files can be referenced from the text editor of the PC, etc.



# 5

## Simple setup


### 5.1 Setting the VA-1809's HDMI equipment performance using the internal programs with the default settings

The VA-1809 can be made to switch between operating as a receiver (monitor) and as a repeater by using the internal programs with the default settings. It is also possible to set the performance (supported TV formats and sound) of the VA-1809 as a receiver using a program.


Select the number of the program to be set from the ones listed below, and load the program by following the steps below.

#### 5.1.1 Loading the programs

(1) Press the **ANALYZE** button. The key menu appears as shown below.

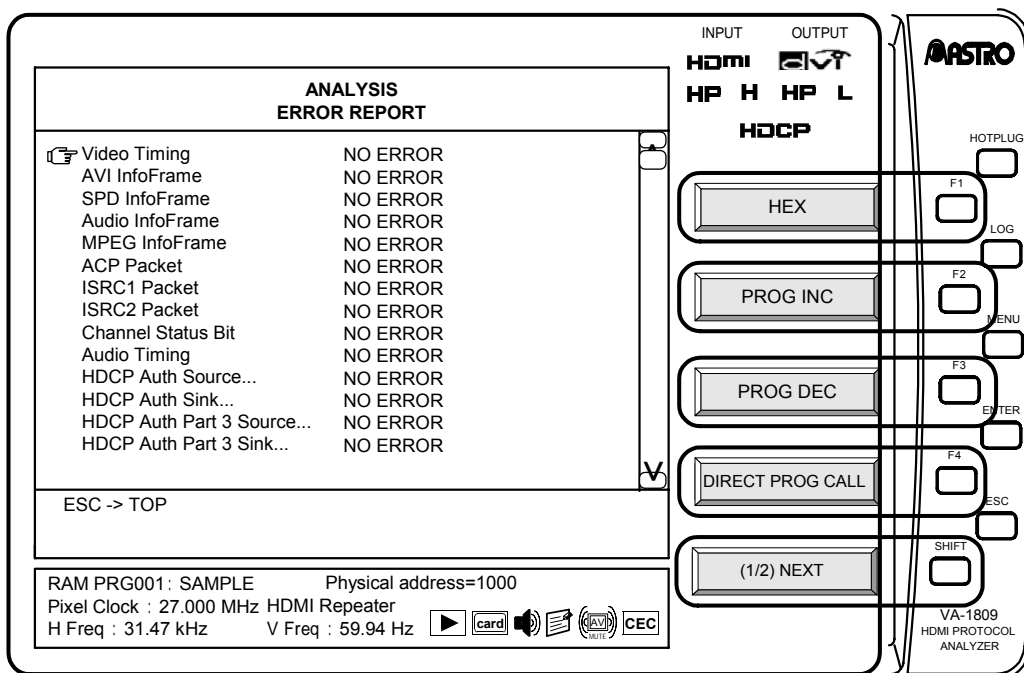

(2) Press DIRECT PROGRAM CALL **F4** on the key menu. The following screen appears.

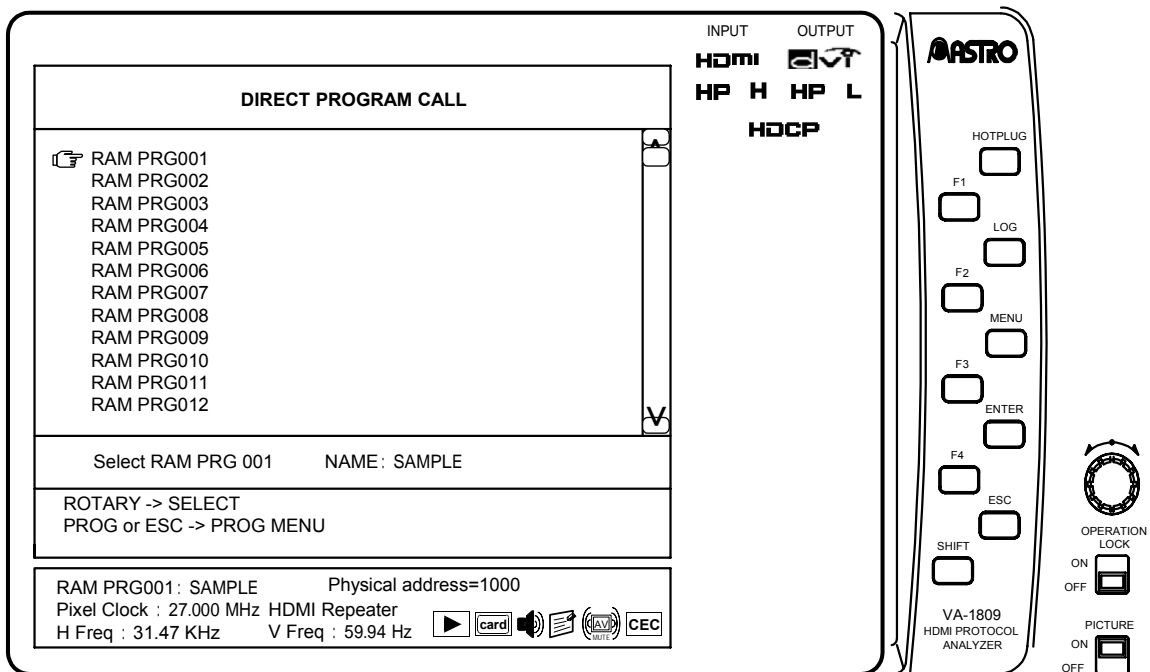

(3) From the list, select the program data to be loaded.

- \* The cursor is moved using the **Rotary key**, and the selection is entered by pressing the **Rotary key** or **ENTER**.
- \* Select a program from the list of programs in “5.1.2 Internal programs with default settings” below.

(4) The program is now loaded.

- \* PRG001 is loaded as the default setting.

### 5.1.2 Internal programs with default settings

The default settings in the internal programs can be used as indicated below.

#### ■ Use as a receiver (monitor)

→ RAM PRG001

#### ■ Use as a repeater

→ RAM PRG002

#### ■ Use as a receiver that supports SD

→ RAM PRG003

#### ■ Use as a receiver that supports HD

→ RAM PRG004

#### ■ Setting the audio reception performance to PCM, 2 channels

→ RAM PRG005

#### ■ Setting the audio reception performance of to PCM, 8 channels

→ RAM PRG006



■ **Use as a receiver (monitor) capable of receiving multiple formats**

→ RAM PRG007

■ **Use as a repeater capable of receiving multiple formats**

→ RAM PRG008

■ **Use as a DVI monitor**

→ RAM PRG009

■ **Use as an HDMI Ver.1.0 monitor**

→ RAM PRG010

- \* When a program with the default settings is changed and the resulting program with these changes is saved under the same program number, the old program will be overwritten.
- \* The VA-1809 has a front 2-channel audio output capability. For this reason, the audio signals of two channels will be output to the speaker even if 8-channel audio signals are supplied.
- \* For details on EDIDs, refer to “8.1 Internal data” on page 197

A list of the internal programs is provided below.

**Video Format**

Internal program	001	002	003	004	005	006	007	008	009	010
720×480p @ 59.94/60Hz	○	○	○	○	○	○	○	○	-	○
1920×1080i @ 59.94/60Hz	○	○	-	○	○	○	○	○	-	○
1280×720p @ 59.94/60Hz	○	○	-	○	○	○	○	○	-	○
640×480p @ 59.94/60Hz	○	○	○	-	○	○	○	○	-	○
1920×1080p @ 59.94/60Hz	○	○	-	-	○	○	○	○	-	○
1440×480i @ 59.94/60Hz	-	-	-	-	-	-	○	○	-	-
720×576p @ 50Hz	○	○	○	-	○	○	○	○	-	○
1920×1080i @ 50Hz	○	○	-	○	○	○	○	○	-	○
1280×720p @ 50Hz	○	○	-	○	○	○	○	○	-	○
1920×1080p @ 50Hz	○	○	-	-	○	○	○	○	-	○
1440×576i @ 50Hz	-	-	-	-	-	-	○	○	-	-
720×480p-w @ 59.94/60Hz	-	-	-	-	-	-	○	○	-	-
1440×480i-w @ 59.94/60Hz	-	-	-	-	-	-	○	○	-	-
720×576p-w @ 50Hz	-	-	-	-	-	-	○	○	-	-
1440×576i-w @ 50Hz	-	-	-	-	-	-	○	○	-	-

## Audio Format

Internal program	001	002	003	004	005	006	007	008	009	010
Linear PCM 8ch	○	○	○	○	-	○	○	○	-	○
Linear PCM 2ch	○	○	○	○	○	-	○	○	-	○
AC-3	-	-	-	-	-	-	○	○	-	-
MPEG1 (Layers 1 & 2)	-	-	-	-	-	-	○	○	-	-
MP3 (MPEG1 Layer 3)	-	-	-	-	-	-	○	○	-	-
MPEG2 (multichannel)	-	-	-	-	-	-	○	○	-	-
AAC	-	-	-	-	-	-	○	○	-	-
DTS	-	-	-	-	-	-	○	○	-	-
ATRAC	-	-	-	-	-	-	○	○	-	-

\* For details on the audio sample rate, sample size and channels, refer to the EIA/CEA-861-B standard.

## 5.2 Connecting the signal source, and displaying the HDMI input images on the LCD screen

After executing the steps in “5.1 Setting the VA-1809's HDMI equipment performance using the internal programs with the default settings” on page 133, refer to “2.1 Example of connections when using the VA-1809 as a receiver (monitor)” on page 11, and connect the DVD player or other signal source to the HDMI input connector on the VA-1809. The images output from the DVD player appear on the unit's LCD screen while the sound output is delivered through its speaker.

# 6

## Detailed setup

### 6.1 PROGRAM (HDMI equipment performance settings)

The performance information of the HDMI receiver is stored in the EDID and HDCP registers and relayed when this information is read by the HDMI transmitter. By rewriting this performance information in the VA-1809, various kinds of monitors can be simulated.


The data can be registered as programs and stored on a CF card.

This section describes the procedures from creating programs to executing the program data.

#### 6.1.1 Creating programs and groups

The program data creation screen is displayed when the **PROGRAM** button is pressed while the on-screen display is blank.

The menu tree is as shown below.

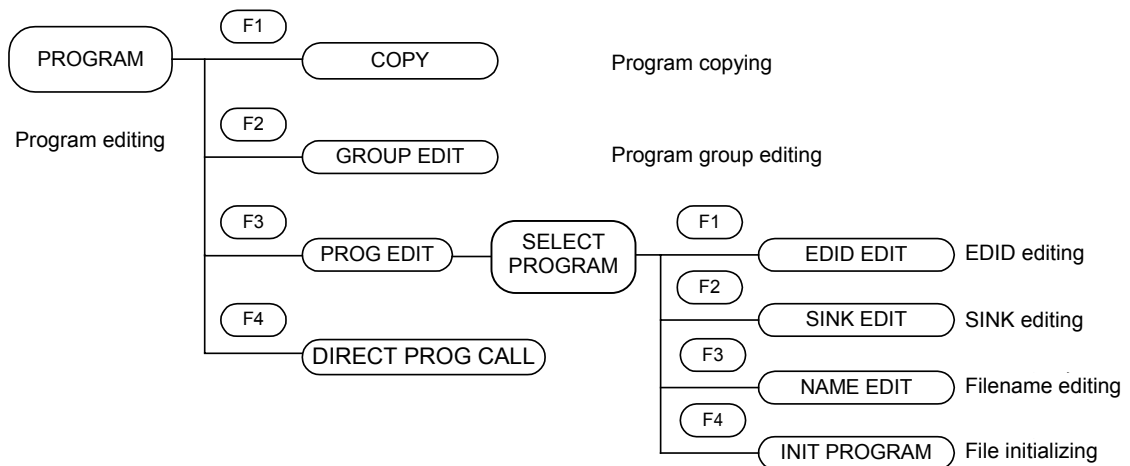

## ■ Copying programs


The procedure for creating a new program using an existing program or internal program is set forth below.

While the on-screen display is blank: Select **PROGRAM** PROGRAM MENU → **F1** COPY.

\* First, perform these steps. All subsequent operation displays have been omitted.

### (1) Selecting the editing source program

→ Use the **Rotary key** to select the editing source program.


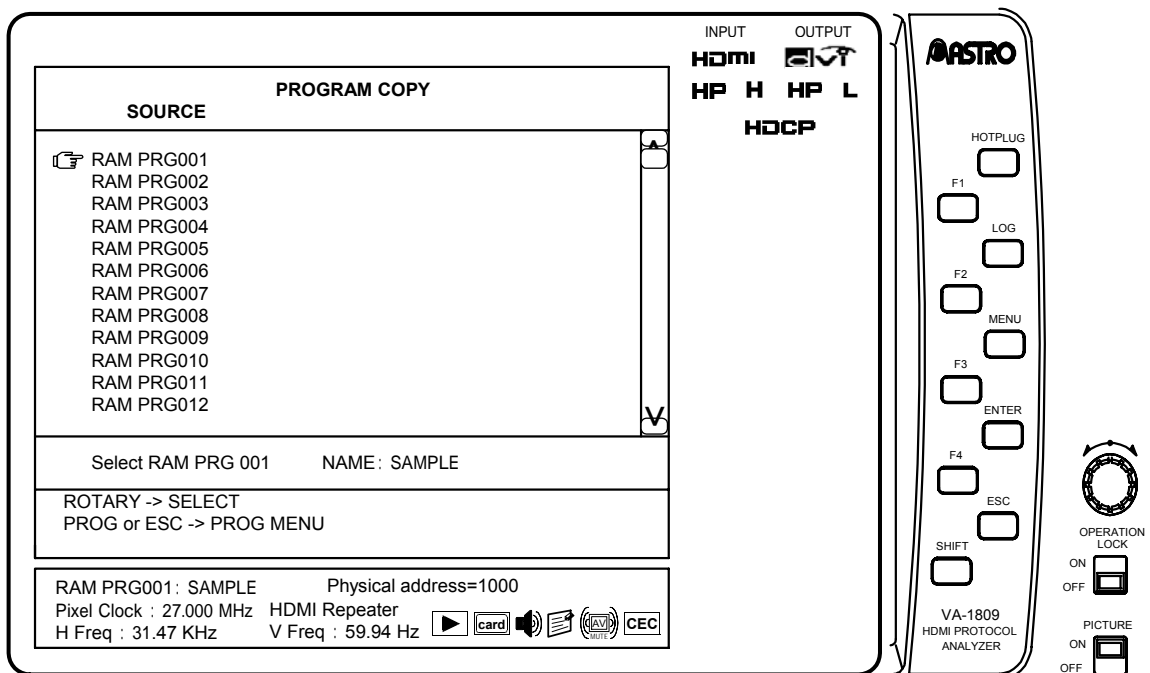


**(2) Saving the copied data**

**1) Saving the data in an existing program**



→ Use the **Rotary key** to select the program to be overwritten

→ Select **F1** OK or **F2** CANCEL.

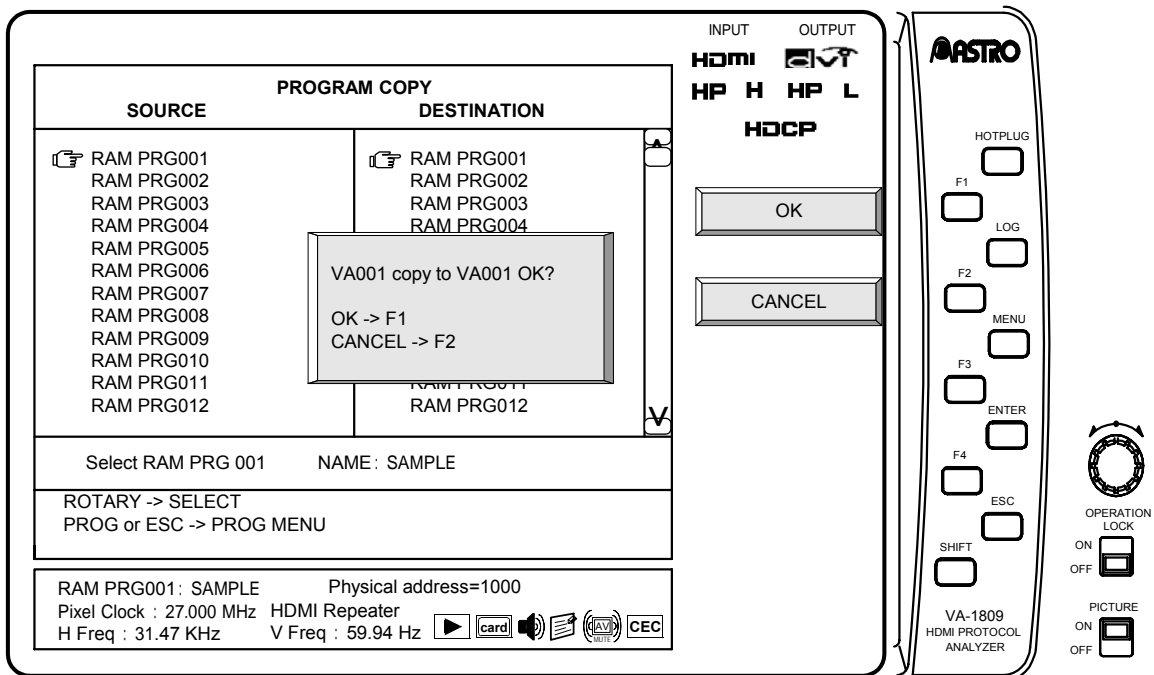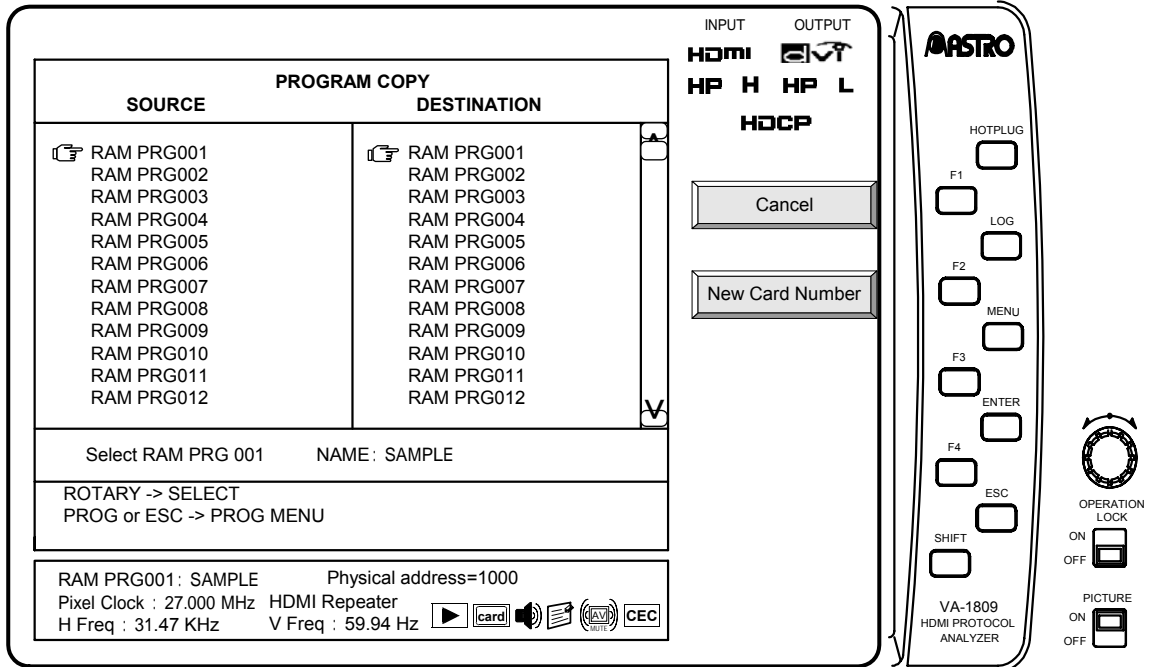



## 2) Saving data in a program with a new number

- **F2** New Card Number
- Use the **Rotary key** to select a 3-digit program number
- **F1** OK → **F1** OK or **F2** CANCEL

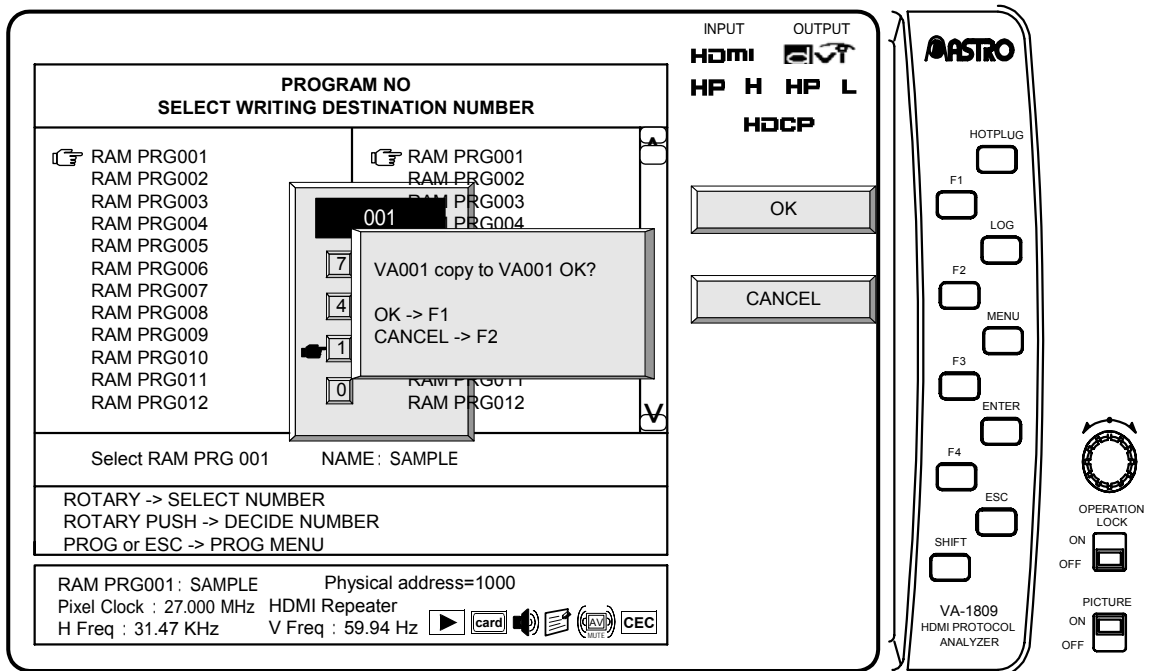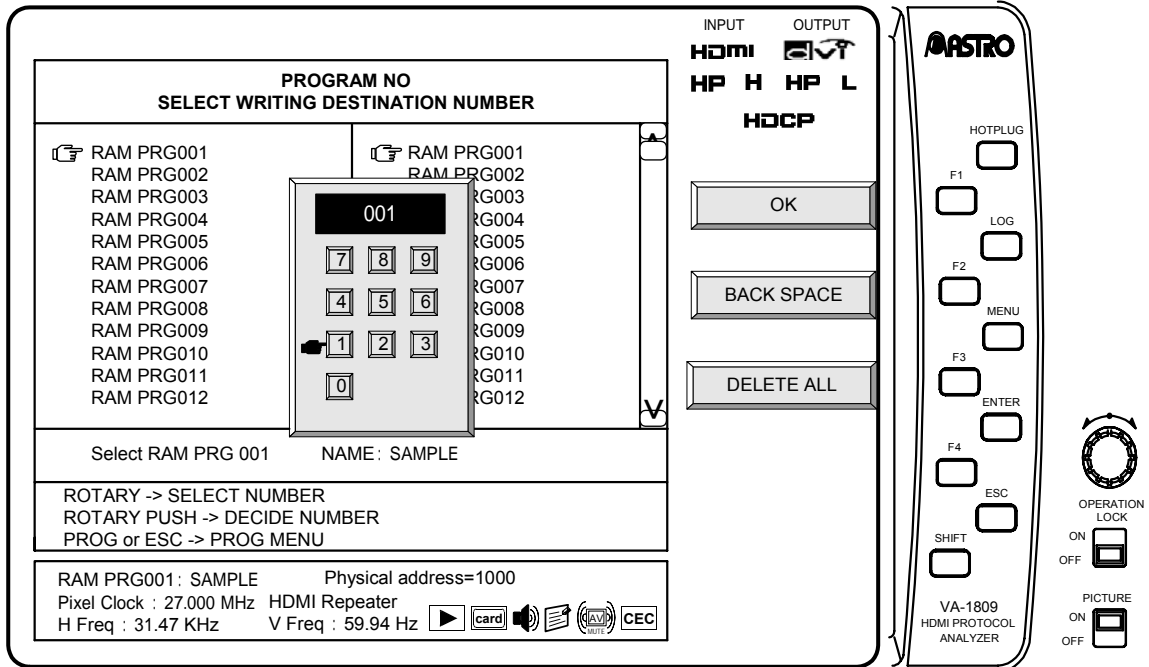

■ Editing programs (SINK, EDID, filenames)

While the on-screen display is blank: Select **PROGRAM** PROGRAM MENU  
 → **F3** PROGRAM EDIT → Use the **Rotary key** to select the editing source program.  
 \* First, perform these steps. All subsequent operation displays have been omitted.

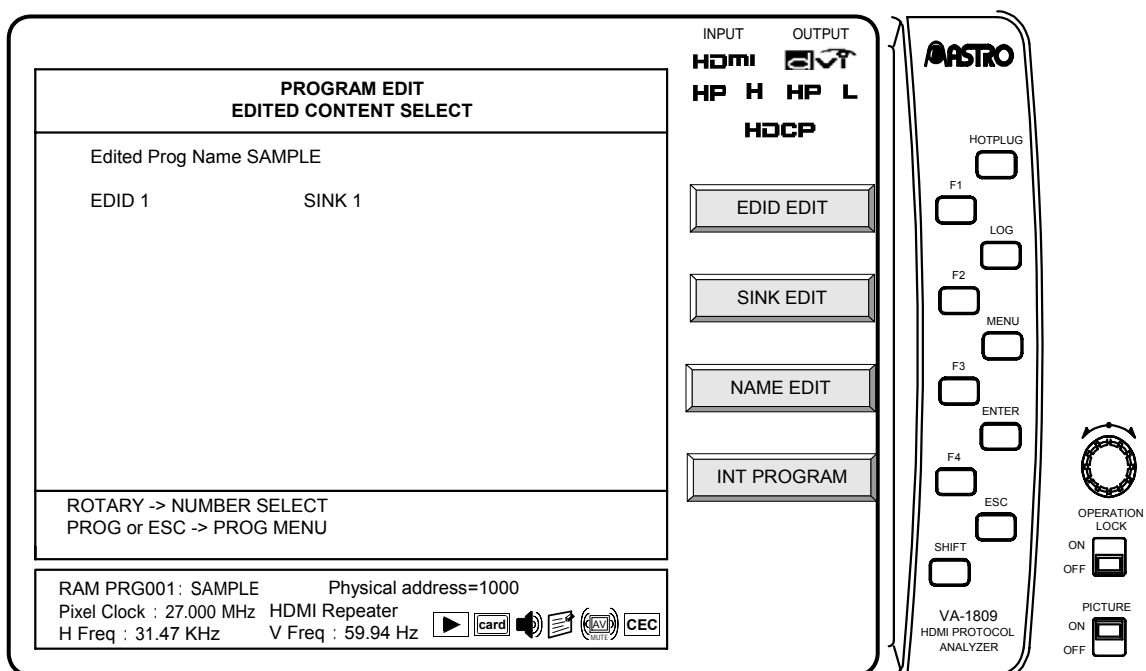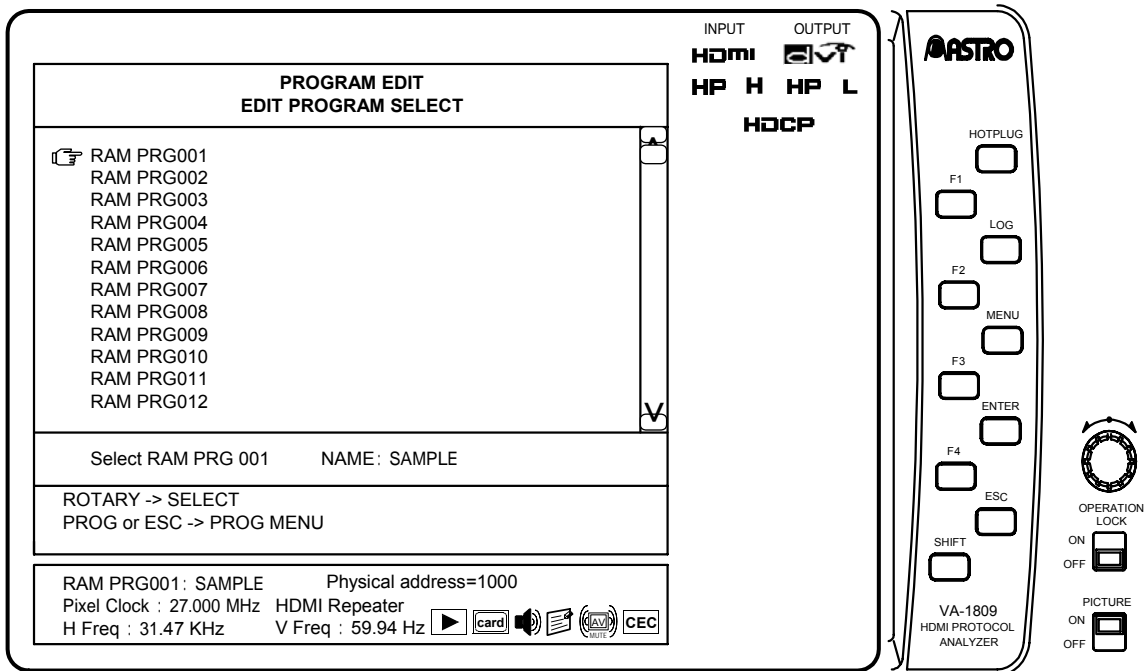

## (1) EDID editing

With the EDID setting, the EDID register values for the 0xA0 address of the device connected to the DDC line of the VA-1809 receiver can be changed.

→ **F1** EDID EDIT → Use the **Rotary key** to select the address to be edited

→ Use the **Rotary key** to change the data. → **SAVE** OK

**PROGRAM EDIT**  
**EDID EDIT**

00H	00	01	02	03	00	00	00	00
08H	00	00	00	00	00	00	00	00
10H	00	00	00	00	00	00	00	00
18H	00	00	00	00	00	00	00	00
20H	00	00	00	00	00	00	00	00
28H	00	00	00	00	00	00	00	00
30H	00	00	00	00	00	00	00	00
38H	00	00	00	00	00	00	00	00
40H	00	00	00	00	00	00	00	00
48H	00	00	00	00	00	00	00	00
50H	00	00	00	00	00	00	00	00
58H	00	00	00	00	00	00	00	00
60H	00	00	00	00	00	00	00	00
68H	00	00	00	00	00	00	00	00

ROTARY -> DATA SELECT  
PROG or ESC -> PROG MENU  
SAVE -> OK

RAM PRG001: SAMPLE      Physical address=1000  
Pixel Clock : 27.000 MHz    HDMI Repeater  
H Freq : 31.47 KHz      V Freq : 59.94 Hz

INPUT    OUTPUT  
HDMI    HP H    HP L  
HDCP

CHANGE SIZE

ASTRO

HOTPLUG

F1

LOG

F2

MENU

F3

ENTER

F4

ESC

SHIFT

VA-1809  
HDMI PROTOCOL  
ANALYZER

OPERATION LOCK  
ON  
OFF

PICTURE  
ON  
OFF




## (2) Editing SINK of one of the programs

With the SINK setting, the Bcaps register values for the 0x40 offset address and 0x74 address of the device connected to the DDC line of the VA-1809 receiver can be changed.

→ **F2** SINK EDIT → Use the **Rotary key** to select the item to be set.

→ Press the **Rotary key** or **ENTER**. → Change the check marks.

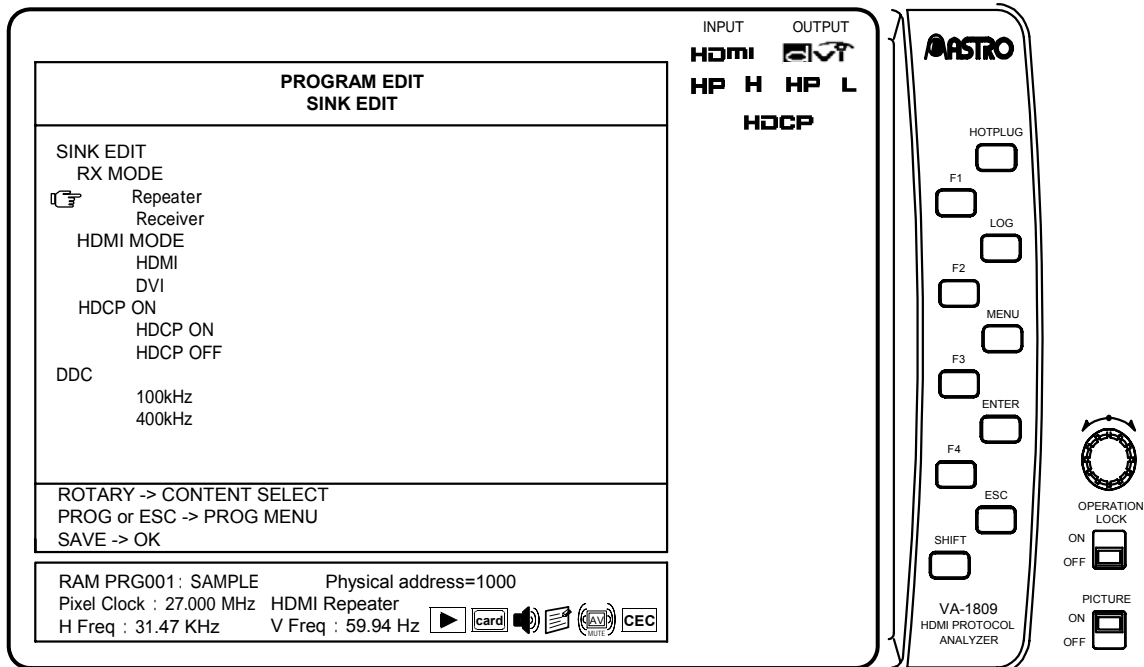


Details on the items are provided below.

Item	Details
Repeater	The VA-1809 is made to serve as a repeater.
Receiver	The VA-1809 is made to serve as a receiver (monitor).
DVI	The VA-1809 is made to serve as a DVI monitor (repeater).
HDMI	The VA-1809 is made to serve as an HDMI monitor (repeater).
HDCP ON	The VA-1809 is made to serve as a monitor (repeater) which supports HDCP.
HDCP OFF	The VA-1809 is made to serve as a monitor (repeater) which does not support HDCP.
100kHz	The DDC line of the VA-1809 is set to 100 kHz.
400kHz	The DDC line of the VA-1809 is set to 400 kHz.

- \* No signals are output from the HDMI output and COAX output connectors when the VA-1809 is used as a receiver (monitor).
- \* No sound can be input when the VA-1809 is used as a DVI monitor (repeater).
- \* No signals can be output from the VGA output connector if HDMI video signals have been input with HDCP when HDCP is not supported.
- \* To save this program in the CF card, press the **SAVE** button.
- \* To load saved data, the execution mode must be changed to PROGRAM MODE. Refer to "6.3.3 ANALYSIS MODE" on page 156.
- \* To load saved data, refer to "6.1.2 Executing programs (LOAD)" on page 147.

### (3) Editing the filename of one of the programs

→ **F3** NAME EDIT → Use the **Rotary key** to edit the filename. → **SAVE** OK

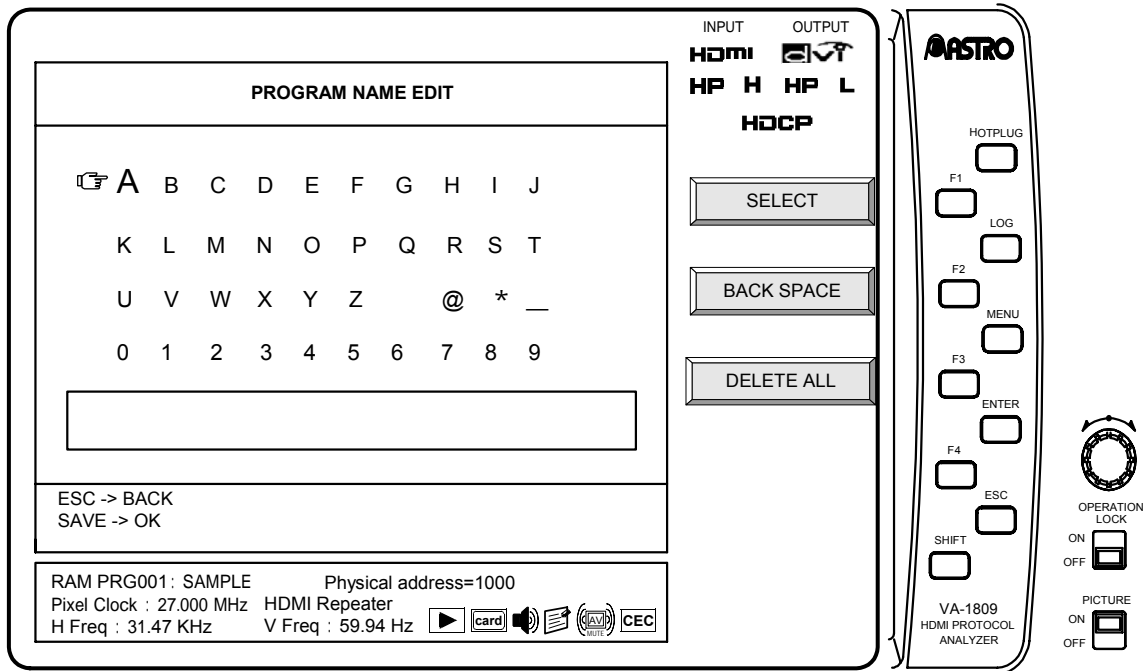

## ■ Creating groups

Up to ten of all the various programs can be selected and executed by the VA-1809. Follow the procedure set forth below.


While the on-screen display is blank: Select **PROGRAM** PROGRAM MENU

→ **F2** GROUP EDIT.

\* First, perform these steps. All subsequent operation displays have been omitted.


### (1) Select the order in which the programs in the group are to be executed.

→ Use the **Rotary key** to select the numerical order.

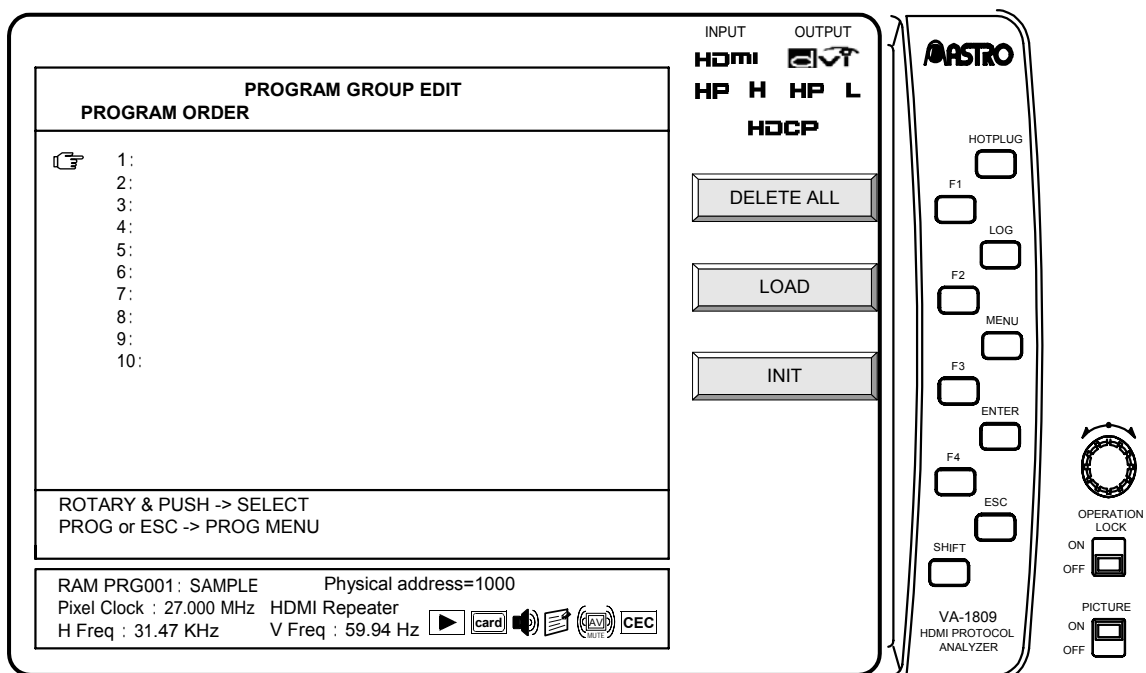

(2) Select the programs to be executed.

→ Use the **Rotary key** to select the programs.

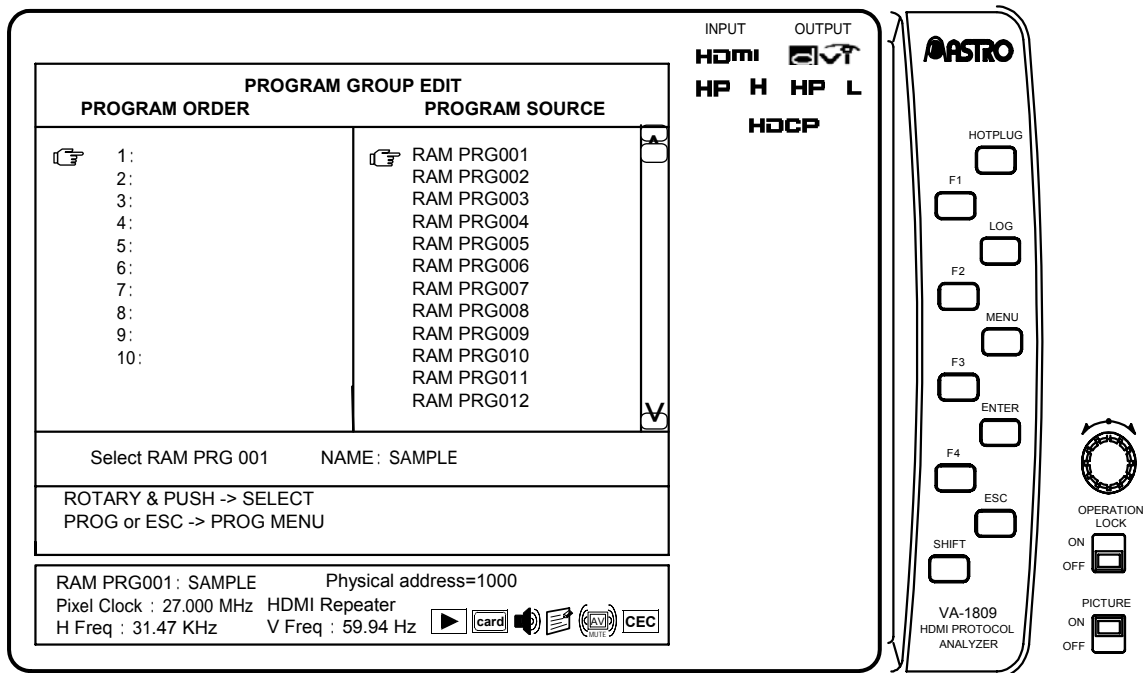

- \* To save group data, the SAVE button must be pressed to transfer operation to the SAVE MENU after the group data has been created. The PROGRAM GROUP MODE must be established. Refer to “6.5.2 PROGRAM GROUP” on page 171.
- \* To execute the group data, the PROGRAM GROUP MODE must be established. Refer to “6.3.3 ANALYSIS MODE” on page 156.
- \* To execute group data, refer to “6.1.2 Executing programs (LOAD)” on page 147.


## 6.1.2 Executing programs (LOAD)

This section describes how programs or program groups are executed.

- \* With the equipment settings, whether to select the programs directly or select programs from program groups can be switched using the execution mode. For details on the execution mode settings, refer to “6.3.3 ANALYSIS MODE” on page 156.

There are two ways to execute programs while the on-screen display is blank: either establish the ANALYSIS mode using the ANALYZE button and then execute the programs or establish the PROGRAM MENU using the PROGRAM button and execute the programs.

### ■ Executing programs from ANALYZE EXE

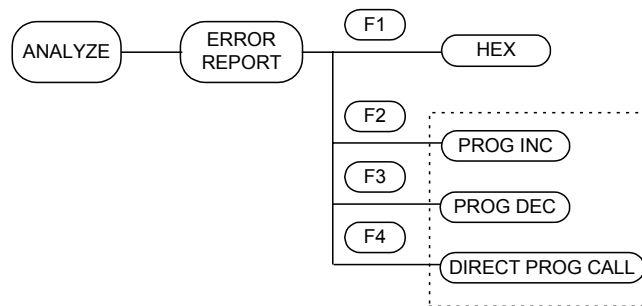

While the on-screen display is blank: Select **ANALYZE** ANALYSIS

- \* First, perform these steps. All subsequent operation displays have been omitted.

#### (1) Executing programs using INC or DEC

→ **F2** PROG INC or **F3** PROG DEC


INC executes the program whose number comes after the number of the current program conversely, DEC executes the program whose number comes before the number of the current program.

## (2) Executing programs using DIRECT PROG CALL

→ **F4** DIRECT PROG CALL

→ Use the **Rotary key** to select the program to be executed.

The program to be executed is selected in the program group, and executed.

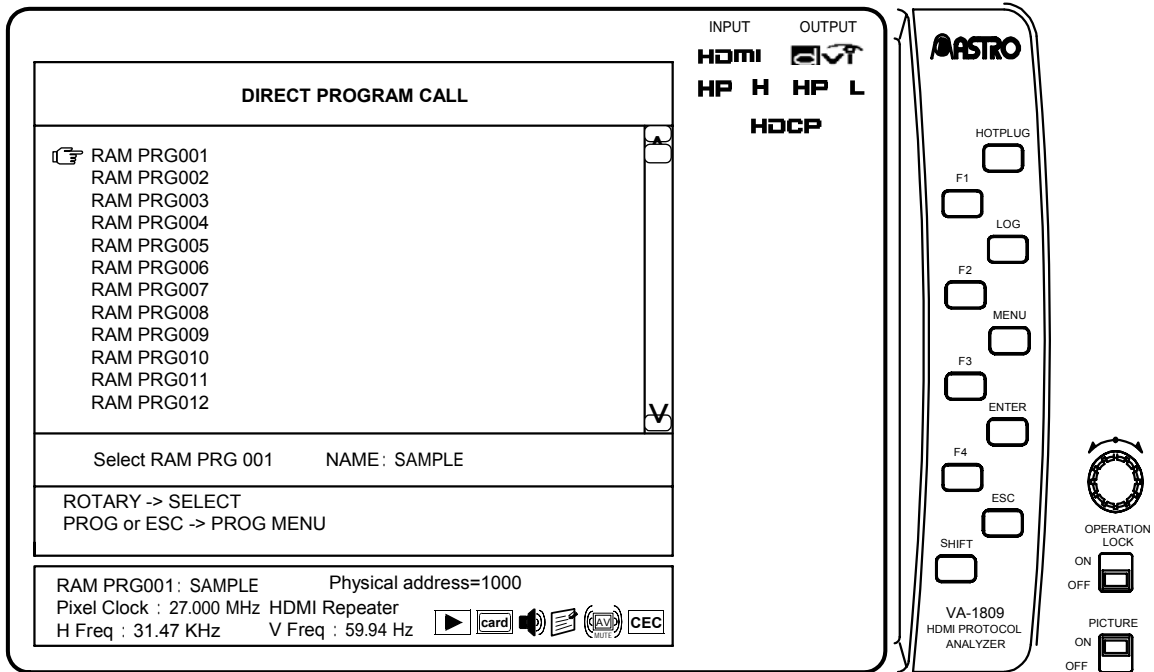

## ■ Executing programs from PROGRAM EDIT

Programs can be executed using DIRECT PROG CALL from PROGRAM EDIT.


While the on-screen display is blank: Select **PROGRAM** PROGRAM MENU

→ **F4** DIRECT PROG CALL → Use the **Rotary key** to select the program to be executed.

The program to be executed is selected in the program group, and executed.

## 6.2 SETUP (DISPLAY SETUP)

The LCD settings are established with DISPLAY SETUP.  
The menu is configured as shown below.

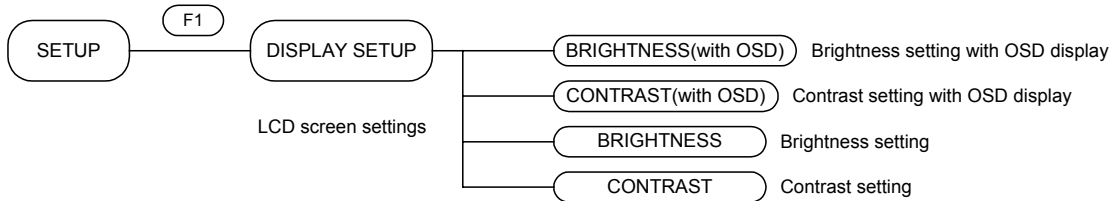

While the on-screen display is blank: Select **SETUP** SETUP MENU  
 → **F1** DISPLAY SETUP.  
 \* First, perform these steps. All subsequent operation displays have been omitted.

**DISPLAY SETUP**

BRIGHTNESS(with OSD)  -36

CONTRAST(with OSD)  -40

BRIGHTNESS  0

CONTRAST  0

ROTARY -> UP/DOWN or ADJUST  
 ROTARY PUSH or ENTER -> SELECT  
 SETUP or ESC -> SETUP MENU  
 MENU -> TOP

INPUT: HDMI, HP H, HP L, HDCP  
 OUTPUT: HP H, HP L

VA-1809  
 HDMI PROTOCOL ANALYZER

CONTROL PANEL: HOTPLUG, F1, LOG, F2, MENU, F3, ENTER, F4, ESC, SHIFT, OPERATION LOCK (ON/OFF), PICTURE (ON/OFF)

## ■ BRIGHTNESS (with OSD)

The background brightness for on-screen displays is set here.

→ Use the **Rotary key** to select BRIGHTNESS (with OSD).

→ Press the **Rotary key** or **ENTER**. (The meter bar turns yellow.)

→ Use the **Rotary key** to change the value. → Press the **Rotary key** or **ENTER**.

Bring the cursor to BRIGHTNESS (with OSD), and adjust the value. The brightness can be changed to any value in the range of -50 to +50.

## ■ CONTRAST (with OSD)

The background contrast for on-screen displays is set here.

→ Use the **Rotary key** to select CONTRAST (with OSD).

→ Press the **Rotary key** or **ENTER**. (The meter bar turns yellow.)

→ Use the **Rotary key** to change the value. → Press the **Rotary key** or **ENTER**.

Bring the cursor to CONTRAST (with OSD), and adjust the value. The contrast can be changed to any value in the range of -50 to +50.

## ■ BRIGHTNESS

The LCD brightness under normal display condition (on-screen display turned OFF) is set here.

→ Use the **Rotary key** to select BRIGHTNESS.

→ Press the **Rotary key** or **ENTER**. (The meter bar turns yellow.)

→ Use the **Rotary key** to change the value. → Press the **Rotary key** or **ENTER**.

Bring the cursor to BRIGHTNESS, and adjust the value. The brightness can be changed to any value in the range of -50 to +50.

## ■ CONTRAST

The LCD contrast under normal display conditions (on-screen display turned OFF) is set here.

→ Use the **Rotary key** to select CONTRAST.

→ Press the **Rotary key** or **ENTER**. (The meter bar turns yellow.)


→ Use the **Rotary key** to change the value. → Press the **Rotary key** or **ENTER**.

Bring the cursor to CONTRAST, and adjust the value. The contrast can be changed to any value in the range of -50 to +50.



## 6.3 SETUP (CONFIG SETUP)



The equipment settings of the VA-1809 are performed using CONFIG SETUP.  
The menu is configured as shown below.

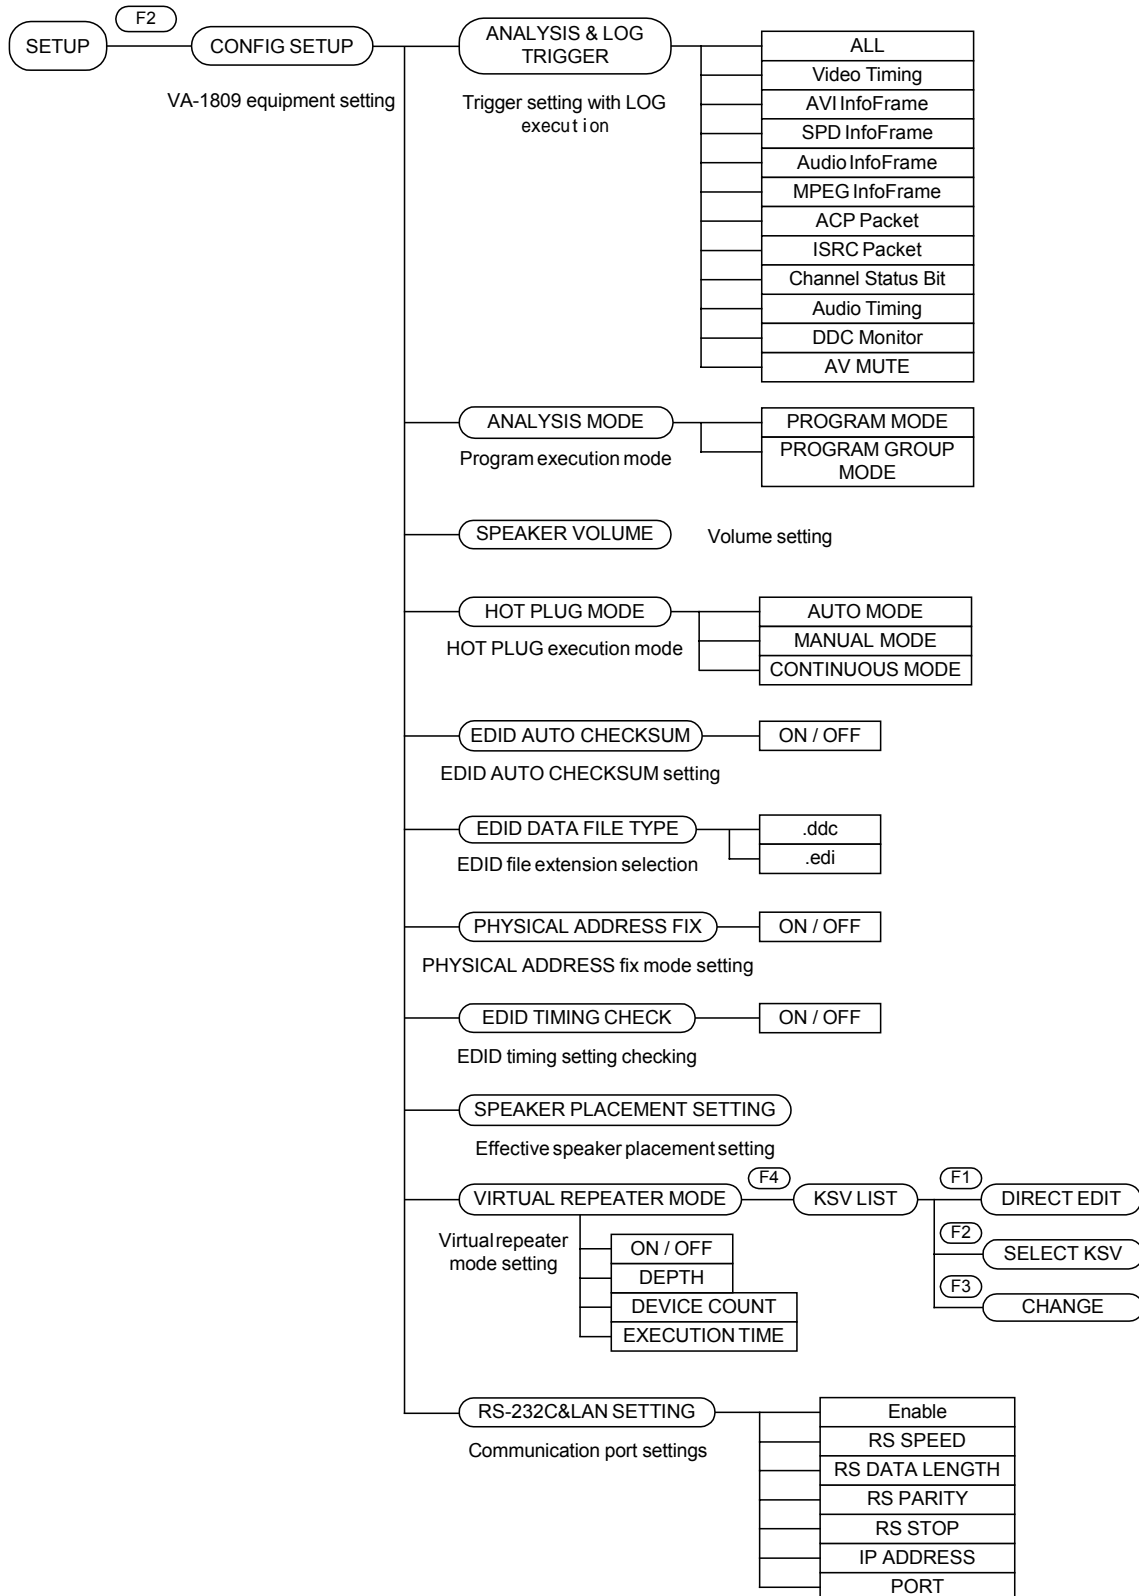

While the on-screen display is blank: Select **SETUP** SETUP MENU  
 → **F2** CONFIG SETUP.  
 \* First, perform these steps. All subsequent operation displays have been omitted.

### 6.3.1 Description of Function Keys Common to CONFIG SETUP

The common function keys while the CONFIG SETUP menu is being displayed (PAGES 1 to 5) are as follows. The items of KSV list are added to only PAGE 4. For more information, see page 161, "Description of Function Keys Dedicated to VIRTUAL REPEATER MODE."

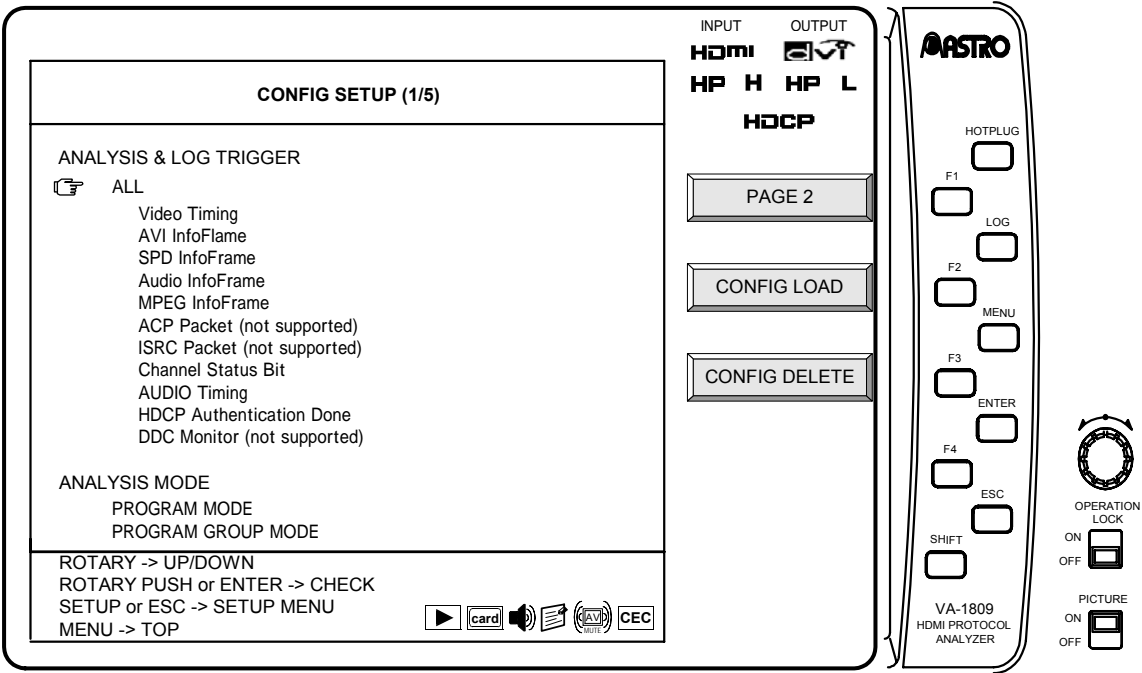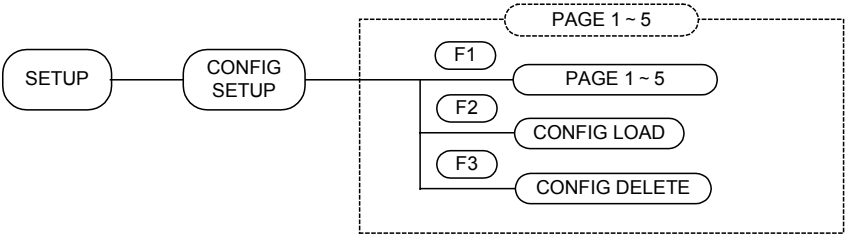

KEY	Item	Details
F1	PAGE 1 - 5	Switches pages.
F2	CONFIG LOAD	Loads configuration data.
F3	CONFIG DELETE	Deletes configuration data.


**PAGE 1 - 5** **F1**

This function key switches pages. (There are a total of five pages.)

**CONFIG LOAD** **F2**

This function key loads the previously saved configuration data.

→ **F2** CONFIG LOAD → **Rotary Key** Select configuration data

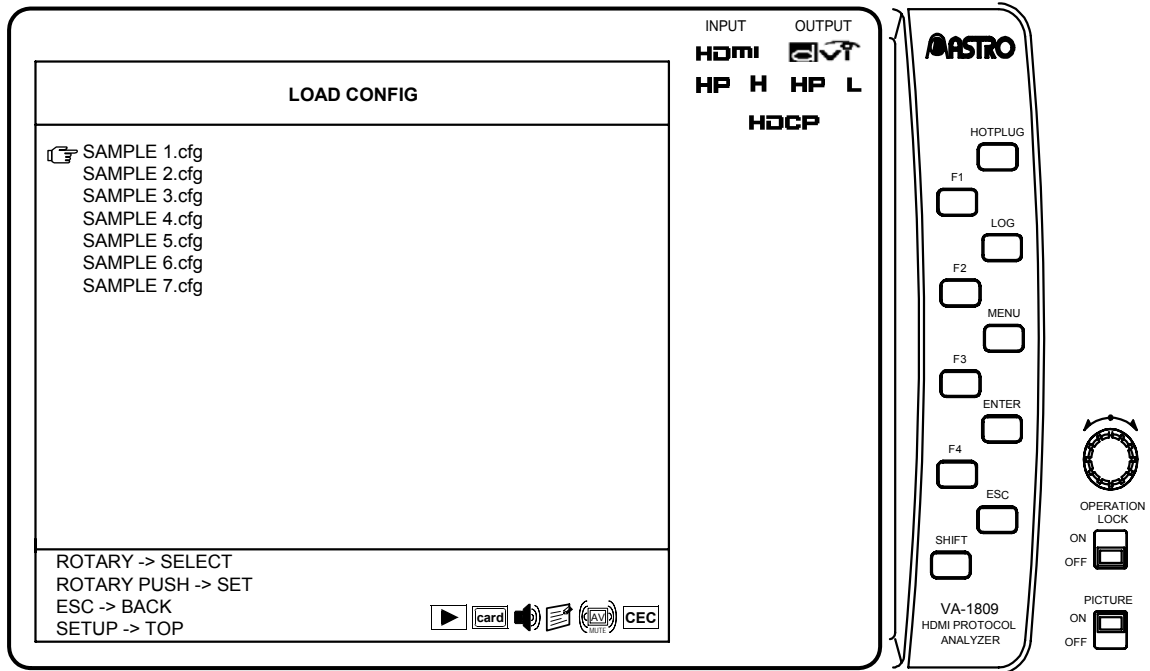

For the location of the configuration data to be loaded, see page 4, "1.4.4 Storage locations of registered data."


For more information about the saving of configuration data, see page 173, "6.5.4 CONFIG DATA."

## CONFIG DELETE **F3**

This function key deletes the previously saved configuration data.

→ **F3** CONFIG DELETE

→ **Rotary Key** Select configuration data to be deleted, and execute deletion.

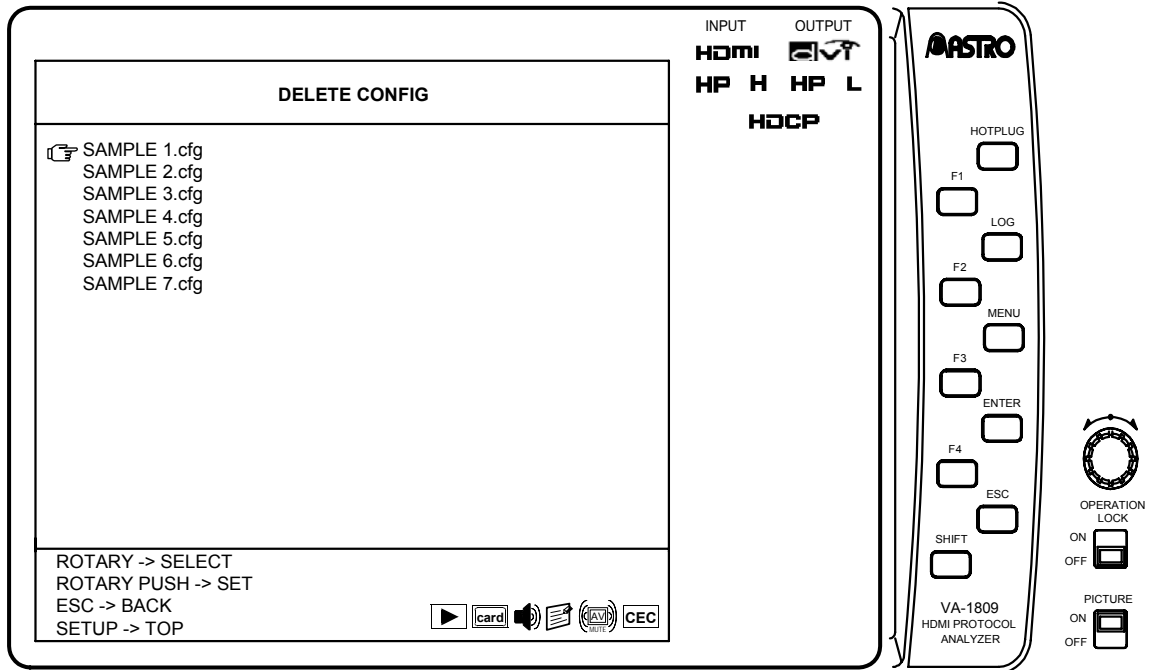

### 6.3.2 ANALYSIS & LOG TRIGGER

The trigger settings for executing logs are established on this screen. All the trigger items are checked as the default.

To select only one or some of the items to trigger the log execution, proceed as follows.

→ Press the **Rotary key** or **ENTER**. The ALL check is removed.

→ Use the **Rotary key** to select the trigger items.

→ Press the **Rotary key** or **ENTER**. Add or remove the checks.

For details on log execution, refer to "4.18.2 Log function" on page 130. See below for details on the triggers. When a multiple number of triggers have been selected, they will all be OR-ed.

Item	Details
Periodic Time	The status is captured every so often (at specified intervals).
ALL	All the changes listed below serve as the trigger.
Video Timing	A change in Video Timing of the input HDMI serves as the trigger.
AVI InfoFrame	A change in AVI InfoFrame of the input HDMI serves as the trigger.
SPD InfoFrame	A change in SPD InfoFrame of the input HDMI serves as the trigger.
Audio InfoFrame	A change in Audio InfoFrame of the input HDMI serves as the trigger.
MPEG InfoFrame	A change in MPEG InfoFrame of the input HDMI serves as the trigger.
ACP Packet	A change in ACP Packet of the input HDMI serves as the trigger.
ISRC Packet	A change in ISRC Packet of the input HDMI serves as the trigger.
Channel Status Bit	A change in Channel Status Bit in the input HDMI Audio stream serves as the trigger.
AUDIO Timing	A change in the ACR constant (N or CTS) serves as the trigger.
HDCP Authentication	HDCP Authentication execution serves as the trigger.
HDCP Repeater Sequence	The HDCP Repeater Sequence logs are captured.
DDC Monitor	Data in the DDC line serves as the trigger.
AV MUTE	The time of status change of AV Mute serves as the trigger
CEC Monitor	The CEC Line Monitor logs are captured.

### 6.3.3 ANALYSIS MODE

Take the following steps to set the program execution mode.

- Use the **Rotary key** to select MODE.
- Press the **Rotary key** or **ENTER**. Add or remove the checks.


Mode details are provided below.

Item	Details
PROGRAM MODE	All the programs are executed.
PROGRAM GROUP MODE	Only the programs selected by PROGRAM GROUP EDIT are executed. Refer to “Creating groups” on page 145. □

### 6.3.4 SPEAKER VOLUME

Take the following steps to adjust the volume level of the internal speaker. The volume of the sound delivered from the HDMI output connector and COAX OUT connector cannot be adjusted.

- **F1** PAGE2 → Use the **Rotary key** to select SPEAKER VOLUME.
- Press the **Rotary key** or **ENTER**. (The meter bar turns yellow.)
- Use the **Rotary key** to adjust the volume level.

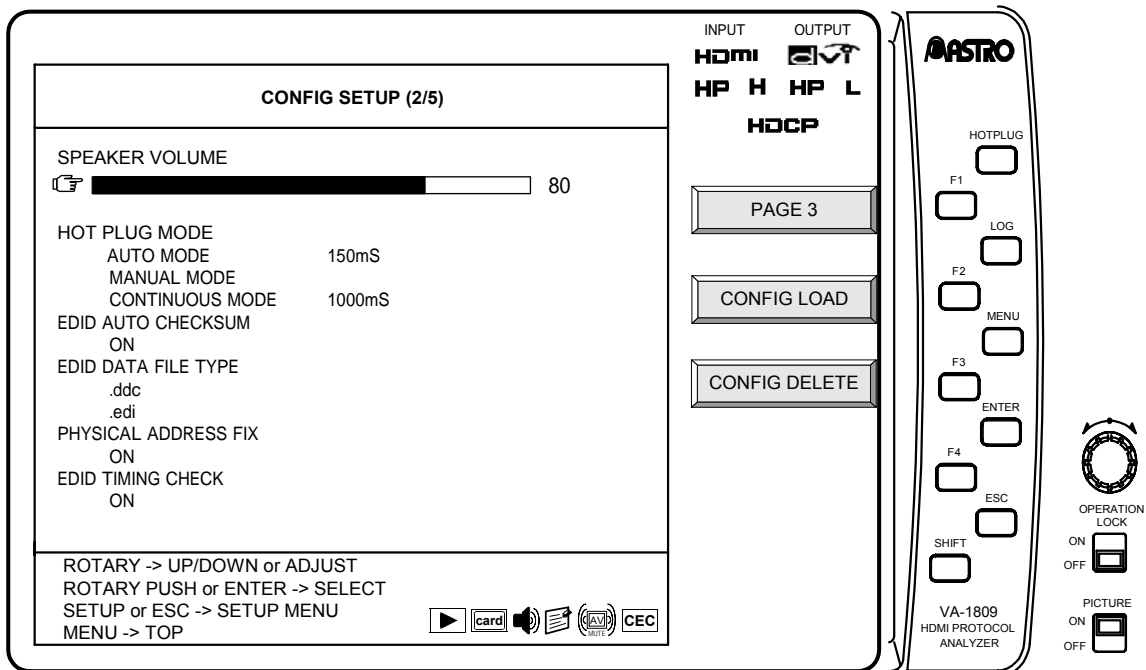

Even without displaying this screen, the volume level can be adjusted by simultaneously pressing and rotating the rotary key. When the rotary key is held down, the sound is muted.

- \* either 2 channels (1 stream) of a maximum of 8 channels (4 streams) with frequencies from 32 to 96 kHz for linear PCM only or both channels of 2 channels with frequencies from 176.4 to 192 kHz can be output as the sound.

### 6.3.5 HOT PLUG MODE

The hot plug setting is established on this screen.

→ **F1** PAGE2 → Use the **Rotary key** to select HOT PLUG MODE.

→ Press the **Rotary key** or **ENTER**. Add or remove the checks.  
(In AUTO MODE, use **Rotary key** to select the time.)

Mode details are provided below.

Item	Details
AUTO MODE	High changes to low and low changes to high when the <b>HOTPLUG</b> button is pressed once. Any time from 10ms to 200ms can be selected in 10ms increments for the low period. Use the <b>Rotary key</b> to select it. * This length also applies to changes in the hot plug signals when other processes (such as program switching) are undertaken.
MANUAL MODE	The level is reversed when the <b>HOTPLUG</b> button is pressed once.
CONTINUOUS MODE	While executing CONTINUOUS MODE, hot plug level changes like H → L → H → L.... While executing CONTINUOUS MODE, by pressing <b>HOTPLUG</b> button, it switches like execute → stop → execute. Any time from 1000ms to 10000ms can be selected in 1000ms increments for the high period. Use the <b>Rotary key</b> to select it. * High period may shift about 200ms depending on the process. * The value that is set in AUTO MODE applies to the executing Low period. * When it stops, hotplug level is High.

### 6.3.6 EDID AUTO CHECKSUM

Take the following steps to set the EDID automatic checksum calculation function.

→ **F1** PAGE2 → Use the **Rotary key** to select EDID AUTO CHECKSUM.

→ Press the **Rotary key** or **ENTER**. Add or remove the checks.

If ON has been checked, the checksum is calculated and set automatically when EDIT is edited using EDID EDIT on PROGRAM MENU.

For details on editing EDID using EDID EDIT on PROGRAM MENU, refer to “Editing programs (SINK, EDID, filenames)” on page 141.

\* Although calculation is also performed when being called, the calculated EDID will not be saved unless editing is done by EDID EDIT of the PROGRAM menu.

### 6.3.7 EDID DATA FILE TYPE

Take the following steps to set the format in which the EDID data files are to be loaded or saved.

→ **F1** PAGE2 → Use the **Rotary key** to select EDID DATA FILE TYPE.

→ Press the **Rotary key** or **ENTER**. Add or remove the checks.

Mode details are provided below.

Item	Details
.ddc	Priority is given to loading files with the .ddc extension. When saving programs on a CF card, they are saved as .ddc files.
.edi	Priority is given to loading files with the .edi extension. When saving programs on a CF card, they are saved as .edi files.

\* The contents of data saved are independent of the file format.

\* .ddc files are saved in the binary format and .edi files in the text format.

### 6.3.8 PHYSICAL ADDRESS FIX

If there is a physical address in the EDID of the VA-1809 currently being selected, set whether to fix the physical address.

→ **F1** PAGE2 → **Rotary key** Select PHYSICAL ADDRESS FIX.

→ Press **Rotary key** or **ENTER**. Check/uncheck

If ON is checked, the physical address of the EDID does not change even if the connections around the VA-1809 change.

If there is no physical address in the EDID of the VA-1809 currently being selected, the physical address will be 0.0.0.0. Also, if there is no physical address in the connected device, the physical address will be 1.0.0.0.

### 6.3.9 EDID TIMING CHECK

When the VA-1809 is a repeater, check the EDID of the unit connected to the output side, and set whether to switch output.

→ **F1** PAGE2 → **Rotary key** Select PHYSICAL ADDRESS FIX.

→ Press **Rotary key** or **ENTER**. Check/uncheck


Check	Details
ON	Outputs input video signals only when the EDID of the unit connected to the output side of the VA-1809 supports the input video timing (OFF if not supported).
OFF	Outputs all input video signals regardless of the EDID of the unit connected to the output side of the VA-1809.



### 6.3.10 SPEAKER PLACEMENT SET

The sound of which channel will be output from the speaker of the VA-1809 can be selected.

→ Press **F1** twice. PAGE 3 → **Rotary key** Select an audio channel.

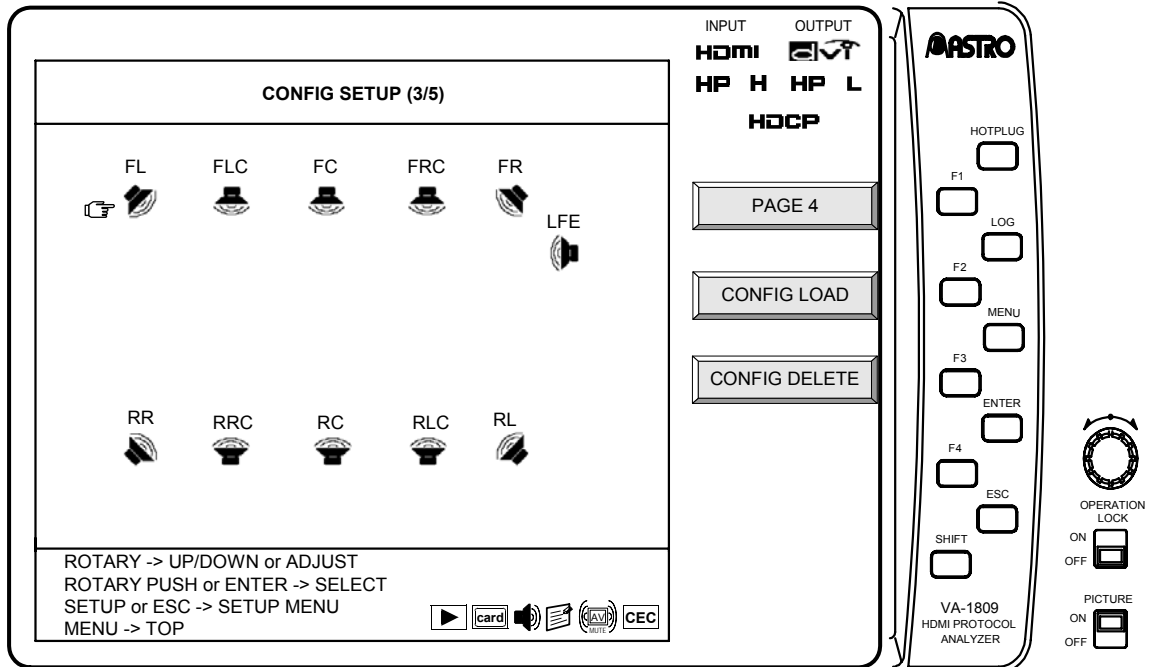


- \* However, if there are three or more audio channels, switching can be done in the set of the audio channel laid out in the audio sample packet. For more information about the audio sample packet, refer to “5.3.4 Audio Sample Packet” and “7.6 Audio Data Packetization” in the High-Definition Multimedia Interface Specification Ver. 1.1.
- \* The picture and channel of the speaker being displayed are determined by InfoFrame.
- \* If Speaker Placement has changed and the channel previously set before change cannot be set after change, change setting to FL, FR.

### 6.3.11 VIRTUAL REPEATER MODE

When the VA-1809 is a repeater, this mode enables emulation as if an HDMI device is connected to the output side of the VA-1809 for a unit that outputs to the VA-1809.

\* Physical address is not changed. If it needs to be changed, set ON for PHYSICAL ADDRESS FIX, and change setting manually. CEC operation reacts according to the connecting devices.


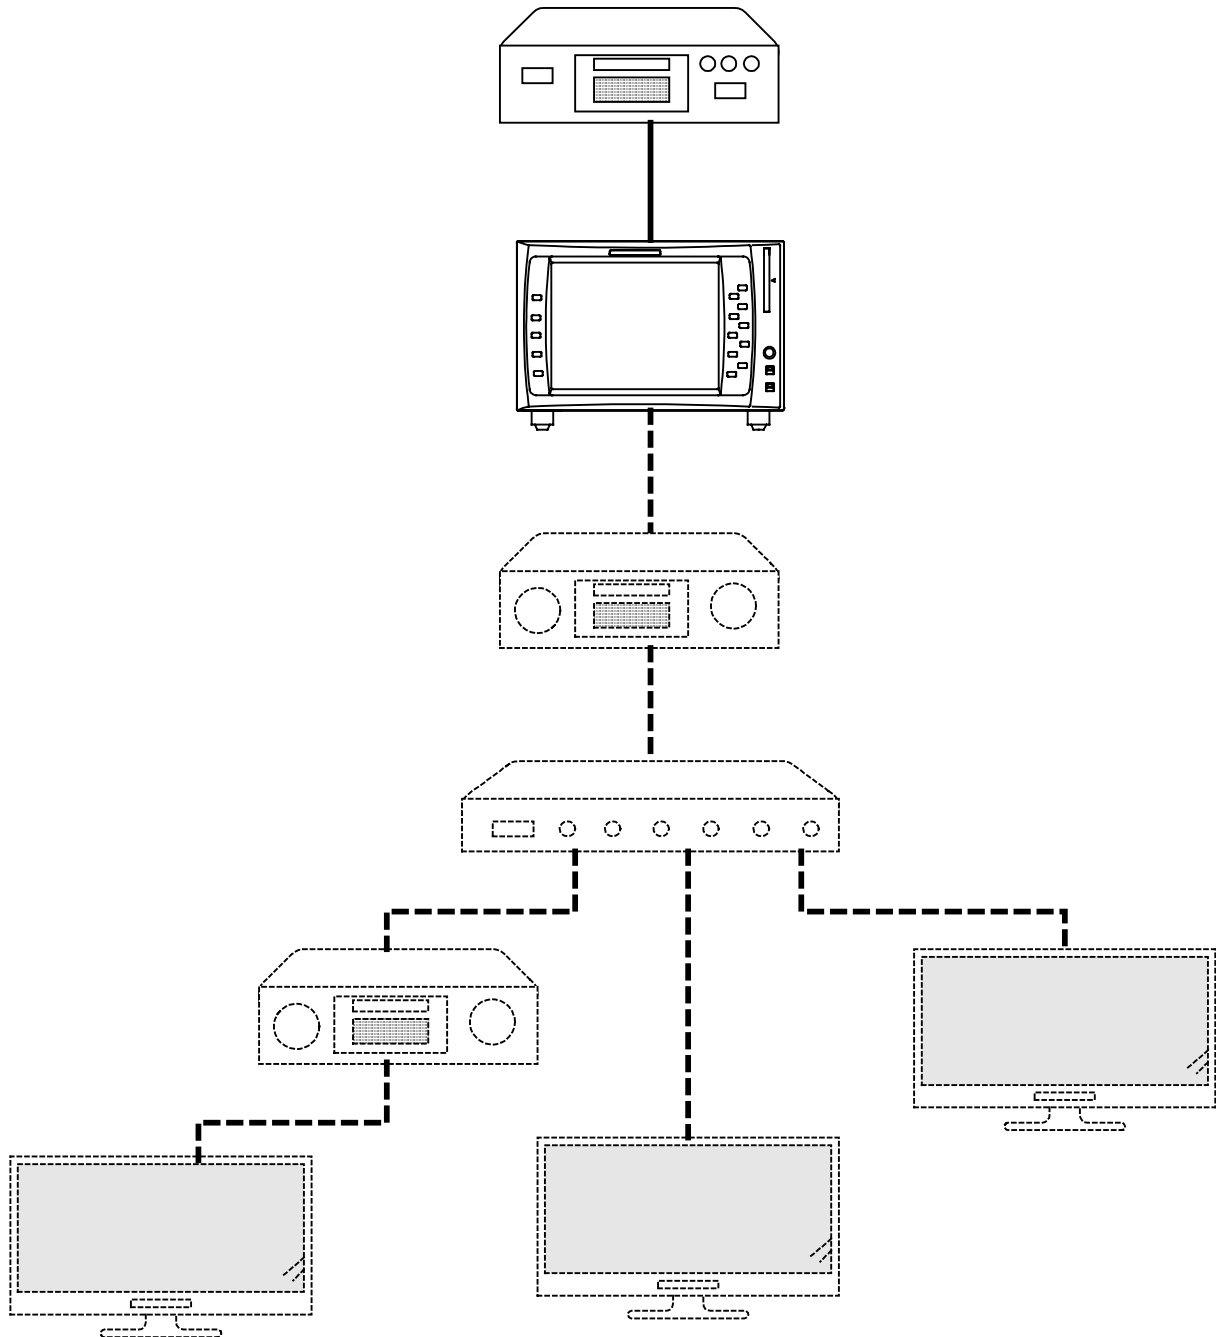


### ■ Description of the Function Keys Dedicated to VIRTUAL REPEATER MODE

PAGE 4 contains the function keys dedicated to VIRTUAL REPEATER MODE.

→ Press **F1** three times. PAGE 4

→ Press **Rotary key** or **ENTER**. Toggle between ON/OFF.

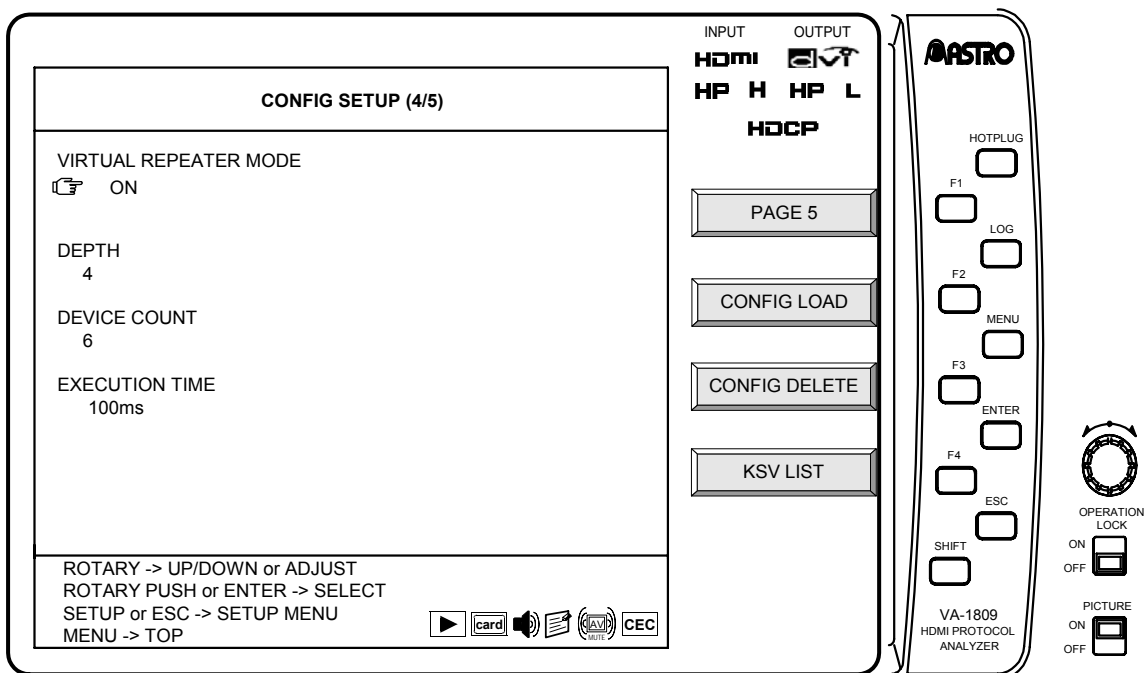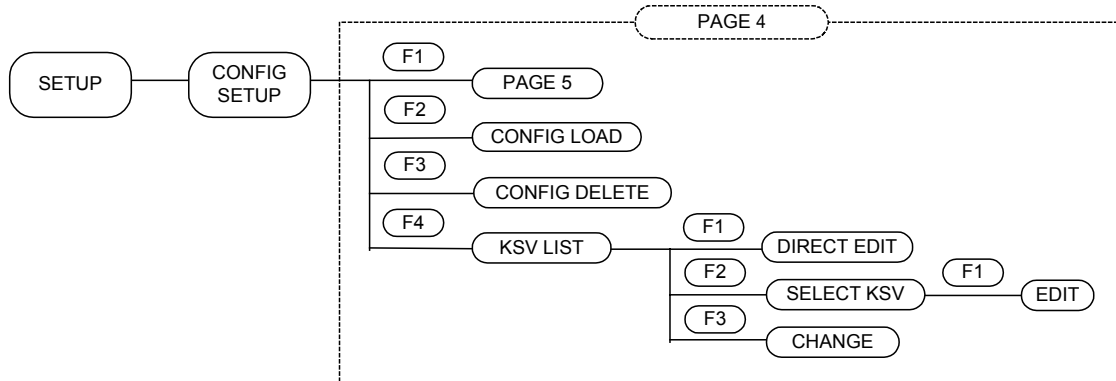

#### VIRTUAL REPEATER MODE

Check	Details
ON	Emulates the VA-1809 output connection using the DEPTH, COUNT and EXECUTION TIME that have been set. *
OFF	Performs the operation of a normal repeater.


\* When HDCP is ON, the actual output is OFF; when HDCP is OFF, the VA-1809 becomes a normal repeater. Also, when the VA-1809 is a receiver, it performs a normal operation. When ON, it is necessary to set what kind of connection will be emulated.

→ **Rotary key** Select, edit and execute an item.

Item	Details
DEPTH	Sets the number of levels at the output destination of the VA-1809. * In the case of page 160, Emulation Behavior, set to "4." □
DEVICE COUNT	Sets the total number of devices connected to the output destination of the VA-1809. * In the case of page 160, Emulation Behavior, set to "6." □
EXECUTION TIME	This is the time from when the input side of the VA-1809 recognizes the beginning of HDCP until KSV FIFO READY is returned.

Also, if the VA-1809 is a repeater, the function for notifying the KSV of the unit connected to the output of the VA-1809 to the unit that outputs to the VA-1809 (2nd Part) is available. The KSV to be notified can be set at this time.

→ **F4** KSV LIST

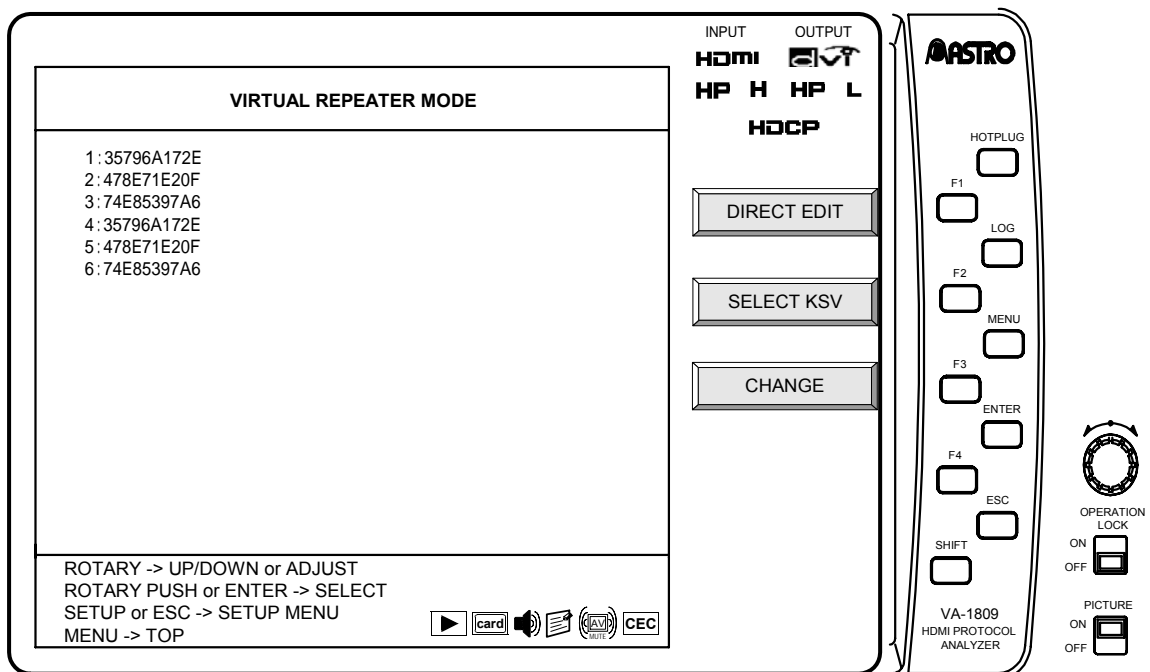


**DIRECT EDIT** **F1**

This function key edits the KSV.

→ **Rotary key** Select the KSV to be edited with the arrow.

→ The Edit screen is displayed. → **Rotary key** Edit KSV.

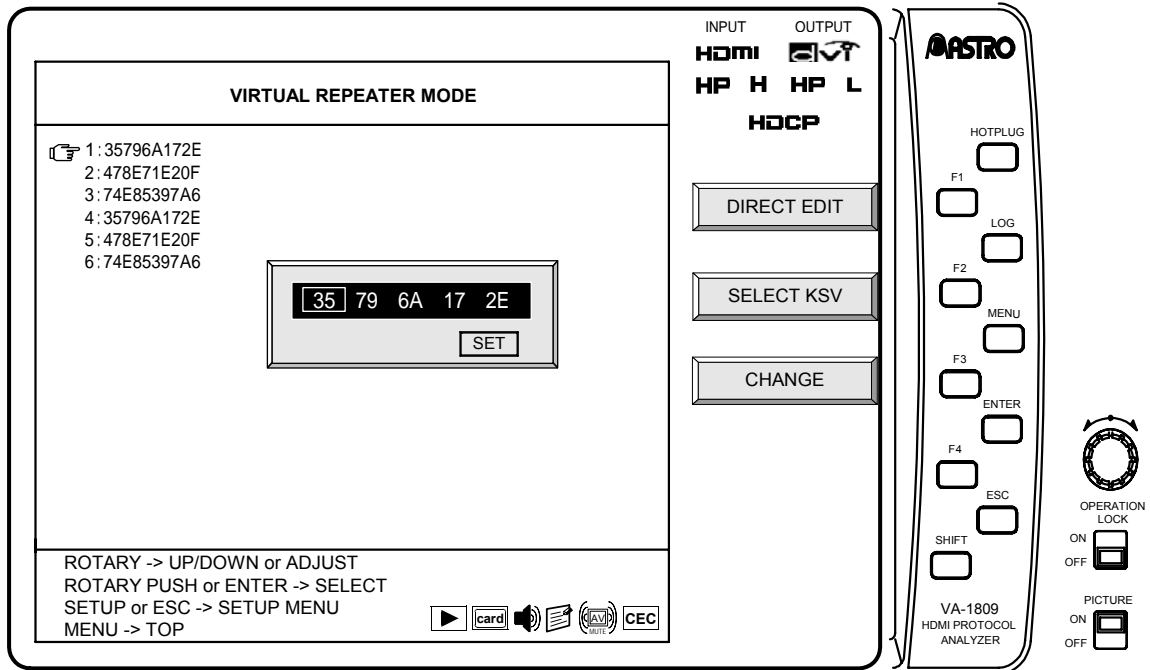


## SELECT KSV **F2**

This function key replaces the current KSV with the KSV frequently used.

→ **Rotary key** **F2** Select the KSV to be changed with the arrow, and then execute.

→ **Rotary key** **F1** Select from six frequently used KSV lists, and then execute.

\* It is necessary to create frequently used KSV lists in advance. They can freely be created in 4 to 6 of SELECT KSV MODE using the **F1** (EDIT) key. (Because predetermined values are already set in 1 to 3, they cannot be edited.)

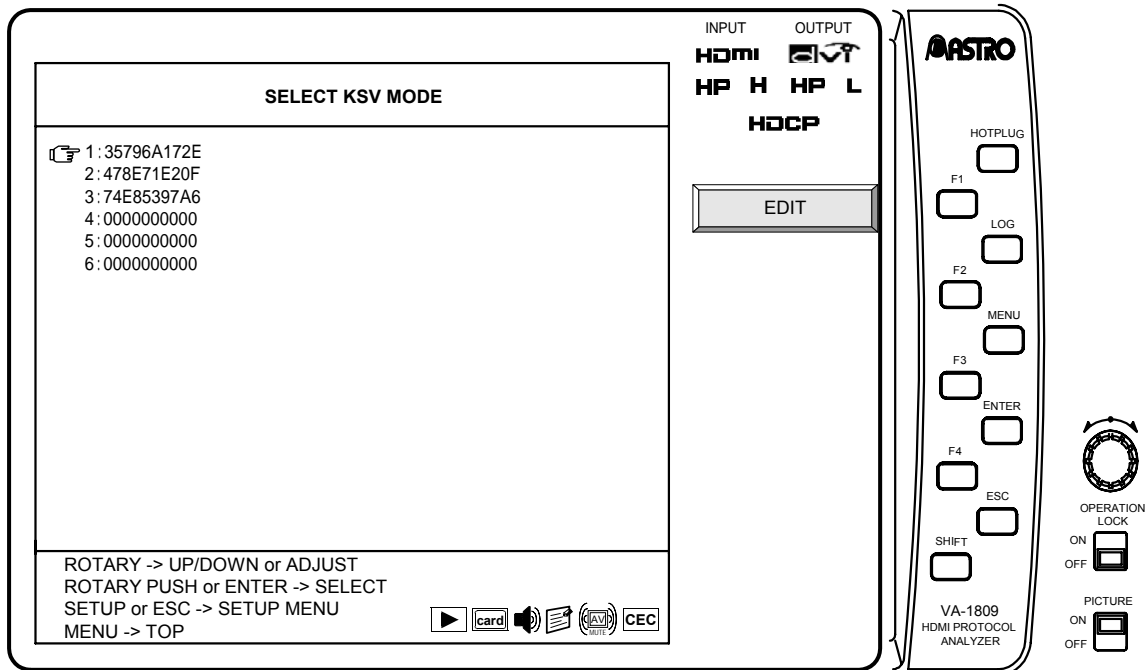


**CHANGE** **F3**

This function key edits the sequence of KSV lists.

→ Select **F3** CHANGE. → **Rotary key** Select the KSV list to be replaced with the arrow.

→ **Rotary key** Select the KSV list to be replaced with the arrow.

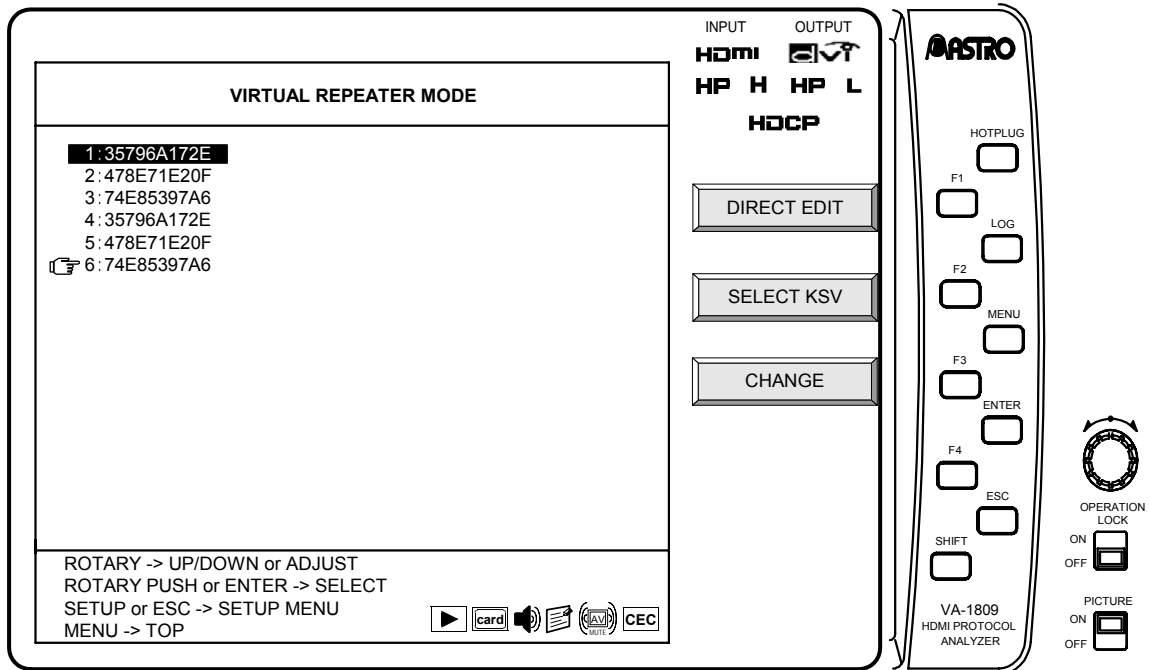


### 6.3.12 Setting the Communication Port

Set the communication port of the VA-1809.

→ Press **F1** four times. PAGE 5 → **Rotary key** Select an item.

→ Press **Rotary key** or **ENTER**. Check/uncheck

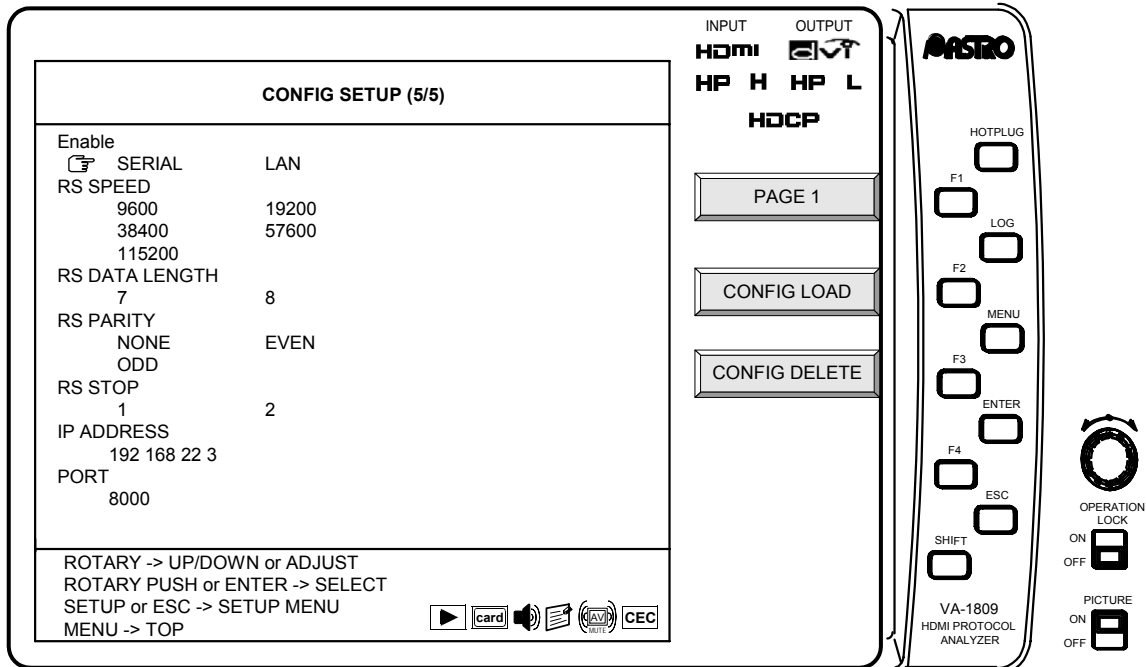

#### (1) Enable

Whether RS-232C or LAN is to be used is set here.

#### (2) RS SPEED

Set the baud rate of the RS-232C.

Check	Description
9600	Sets a baud rate of 9600bps.
19200	Sets a baud rate of 19200bps.
38400	Sets a baud rate of 38400bps.
57600	Sets a baud rate of 57600bps.
115200	Sets a baud rate of 115200bps.

#### (3) RS DATA LENGTH

Set the number of data bits of the RS-232C.

Check	Description
7	Sets the number of data bits to 7 bits.
8	Sets the number of data bits to 8 bits.



**(4) RS PARITY**

Set the parity bit of the RS-232C.

Check	Description
NONE	Sets the parity bit to "none."
EVEN	Sets the parity bit to "even."
ODD	Sets the parity bit to "odd."

**(5) RS STOP**

Set the number of stop bits of the RS-232C.

Check	Description
1	Sets the number of stop bits to 1 bit.
2	Sets the number of stop bits to 2 bits.

**(6) IP ADDRESS**

The IP address of the LAN is set here.

**(7) PORT**


The LAN port is set here.

## 6.4 SETUP (Others)

### 6.4.1 VERSION INFO

The version information of the VA-1809 can be displayed.


OSD hidden state → **SETUP** → **F3** VERSION INFO

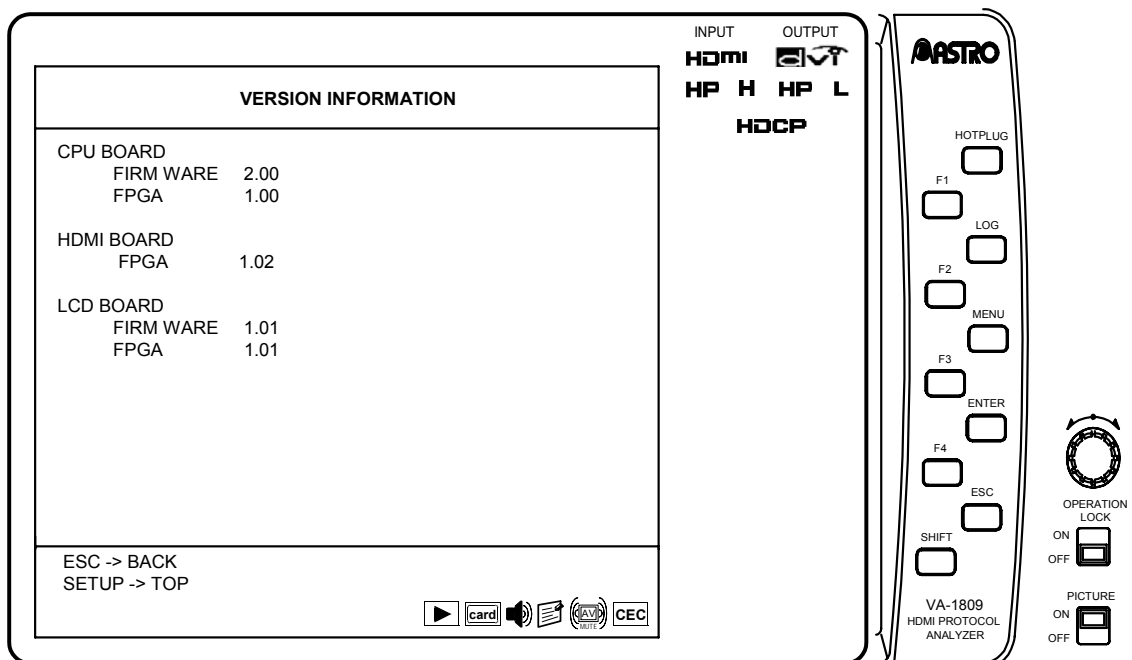

## 6.4.2 INITIALIZE

The built-in data and configuration data of the VA-1809 can be initialized, and the card can be initialized (erased).

OSD hidden state → **SETUP** → **F4** INITIALIZE

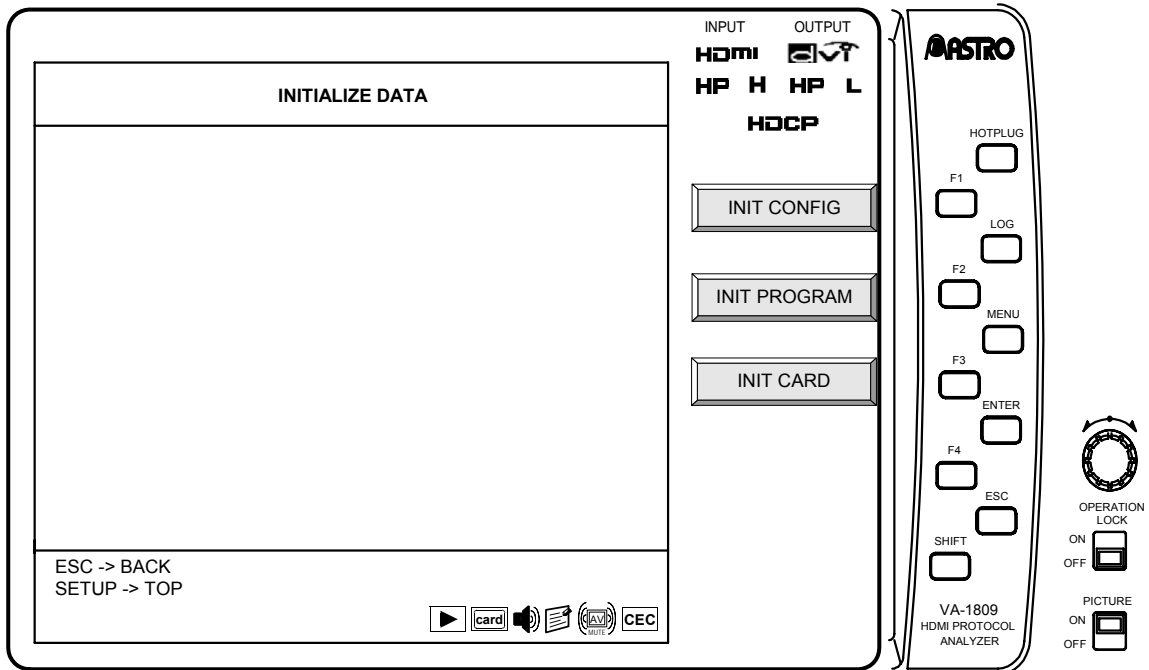

### (1) INIT CONFIG (Initialization of Configuration Data)

Among setup data, this function key restores the configuration data and display data to the default settings.

→ **F1** INIT CONFIG → **F1** OK or **F2** CANCEL

### (2) INIT PROGRAM (Initialization of Built-In Program Data)

This function key restores built-in program data to the default settings.

→ **F2** INIT PROGRAM → **F1** OK or **F2** CANCEL

### (3) INIT CARD (Erasing the Card)


This function key erases the data on the card inserted in the VA-1809.

→ **F3** INIT CARD → **F1** OK or **F2** CANCEL

## 6.5 SAVE

The SAVE MENU is used to save the programs and analysis data on a CF card or in the RAM contained in the VA-1809 main unit. The current data can be saved by pressing the SAVE button in any status.

The menu tree is as shown below.

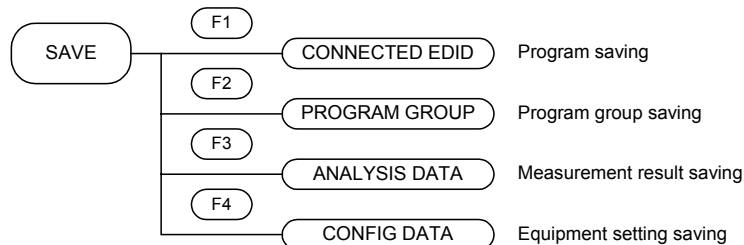

### 6.5.1 CONNECTED EDID

This procedure in this section is for saving the EDIDs of the monitor connected to the HDMI output connector as programs on a CF card or in the RAM contained in the VA-1809 main unit.


[SAVE] → [F1] CONNECTED EDIT → Use the [Rotary key] to select the program number.



→ [F1] OK → Use the [Rotary key] to edit the program name.

→ [F4] RAM/CARD/BOTH selection → [SAVE] OK

\* The RAM (internal RAM), CF card or both the internal RAM and CF card must be selected as the place where the program is to be saved.

\* When saving data in an existing program and thereby overwriting the data in that program, a confirmation window will appear. Press [F1] to save the data or [F2] to cancel.

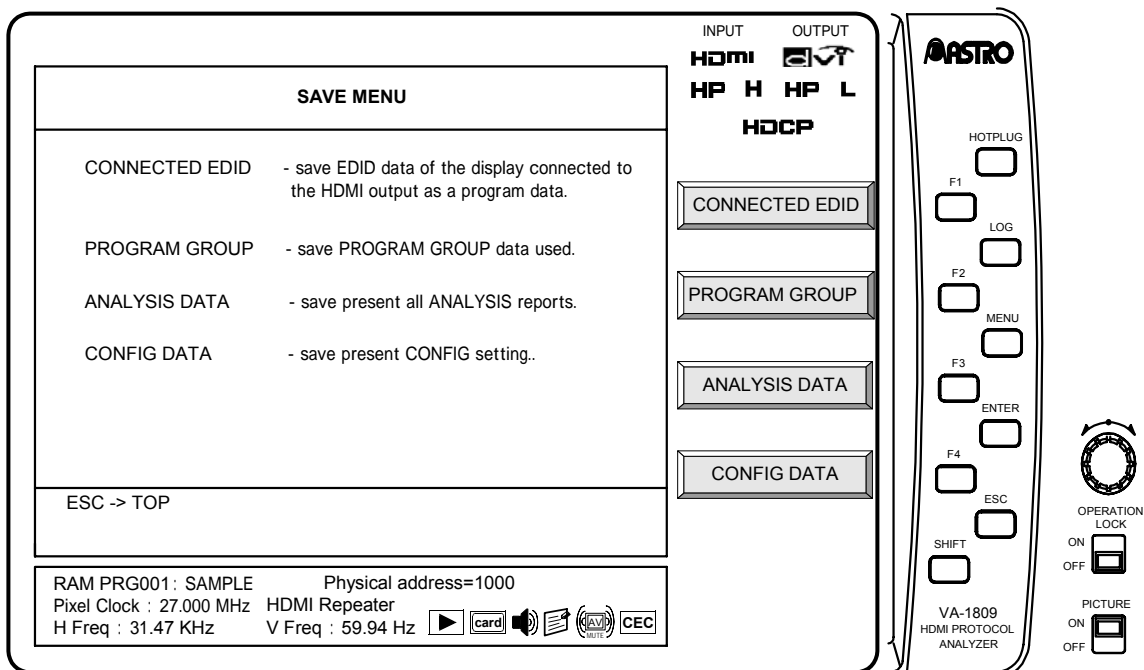

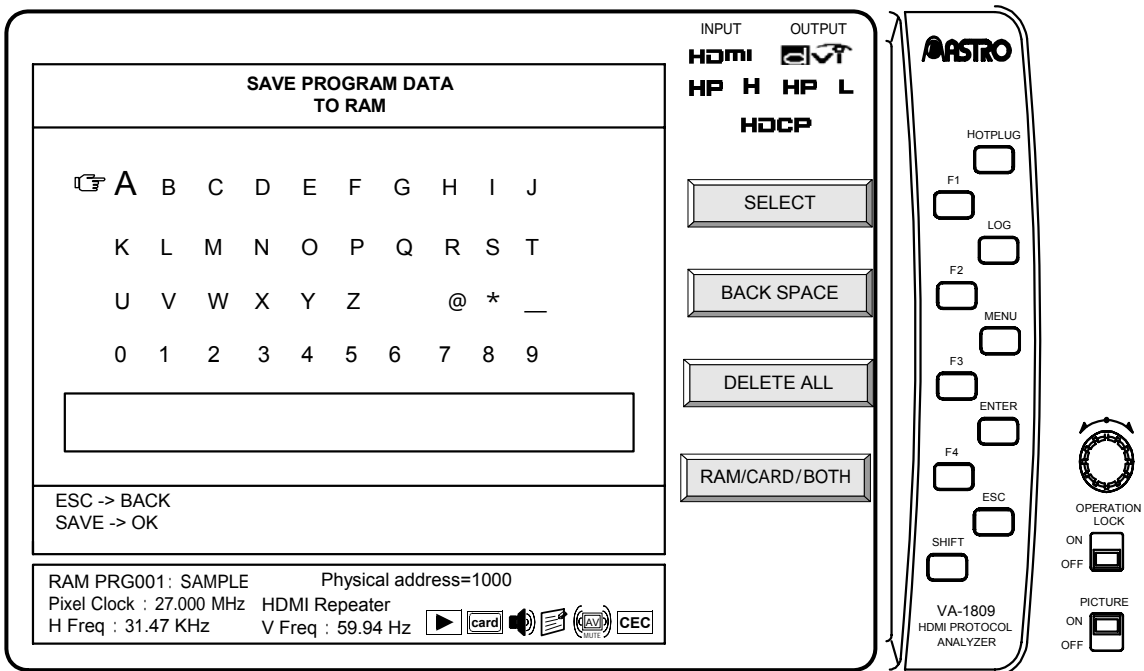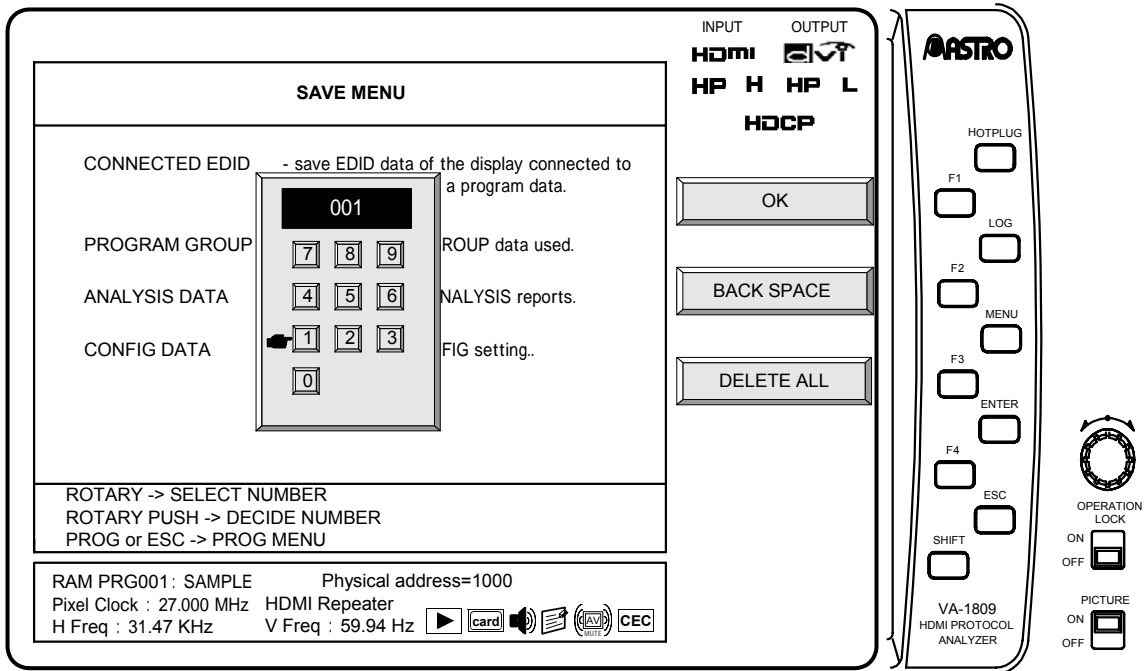


## 6.5.2 PROGRAM GROUP

This procedure in this section is for saving group data edited in “Creating groups” on page 145.

**SAVE** → **F2** PROGRAM GROUP → Use the **Rotary key** to input the group name.

→ **SAVE** OK

- \* Group data can be saved on CF cards only. Data is saved on these cards under filenames with the .lst extension. For details on where the files are saved, refer to “1.4.4 Storage locations of registered data” on page 4.
- \* When saving data in an existing program and thereby overwriting the data in that program, a confirmation window will appear. Press **F1** to save the data or **F2** to cancel.

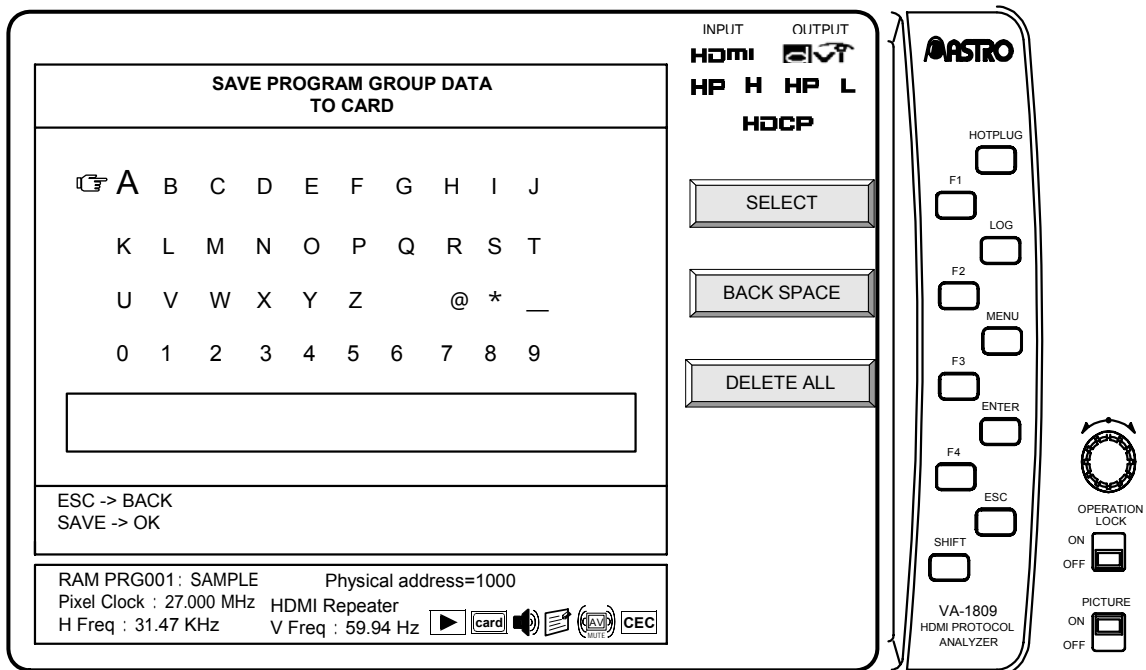


### 6.5.3 ANALYSIS DATA

The procedure in this section is for saving the measurement details of all the items for “ANALYZE (measurement result display methods)” described on page 21 on CF cards.

**SAVE** → **F3** ANALYSIS DATA → Use the **Rotary key** to input the data name.

→ **SAVE** OK

- \* Analysis data can be saved on CF cards only. Data is saved on these cards under filenames with the .log extension. For details on where the files are saved, refer to “1.4.4 Storage locations of registered data” on page 4.
- \* When saving data in an existing program and thereby overwriting the data in that program, a confirmation window will appear. Press **F1** to save the data or **F2** to cancel.
- \* The analysis data available at the instant when the SAVE button is pressed is saved.

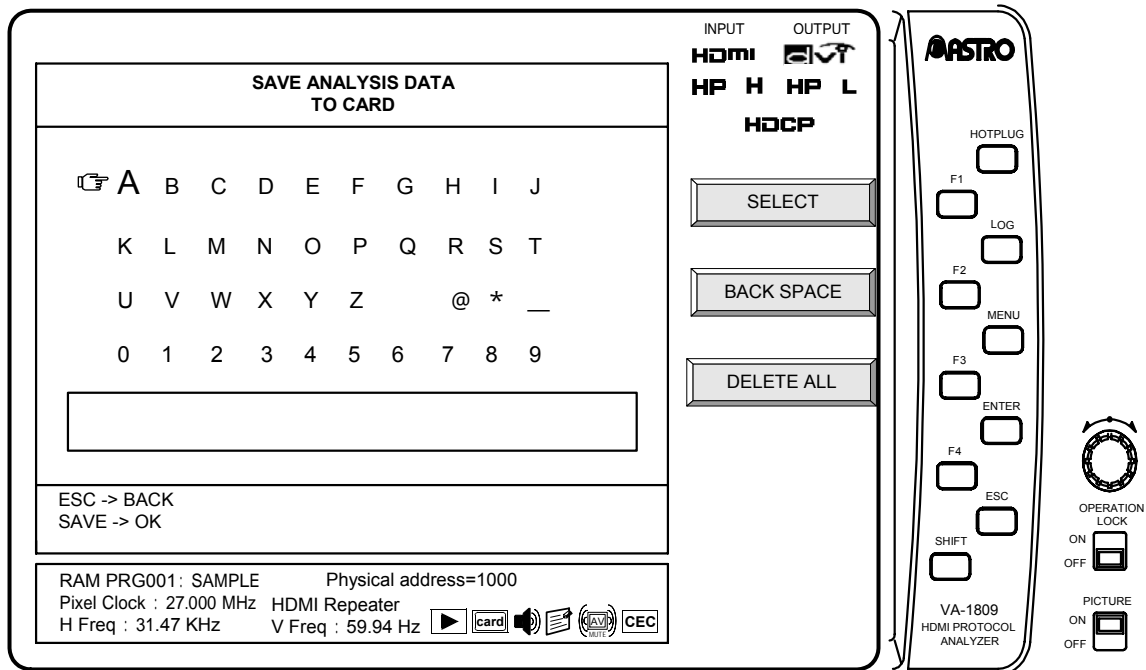


## 6.5.4 CONFIG DATA

The procedure in this section is for saving the equipment settings of the VA-1809 which were set in "6.3 SETUP (CONFIG SETUP)" on page 151.

**SAVE** → **F4** CONFIG DATA → Use the **Rotary key** to input the data name.

→ **SAVE** OK

- \* Config data can be saved on CF cards only. Data is saved on these cards under filenames with the .cfg extension. For details on where the files are saved, refer to "1.4.4 Storage locations of registered data" on page 4.
- \* When saving data in an existing program and thereby overwriting the data in that program, a confirmation window will appear. Press **F1** to save the data or **F2** to cancel.

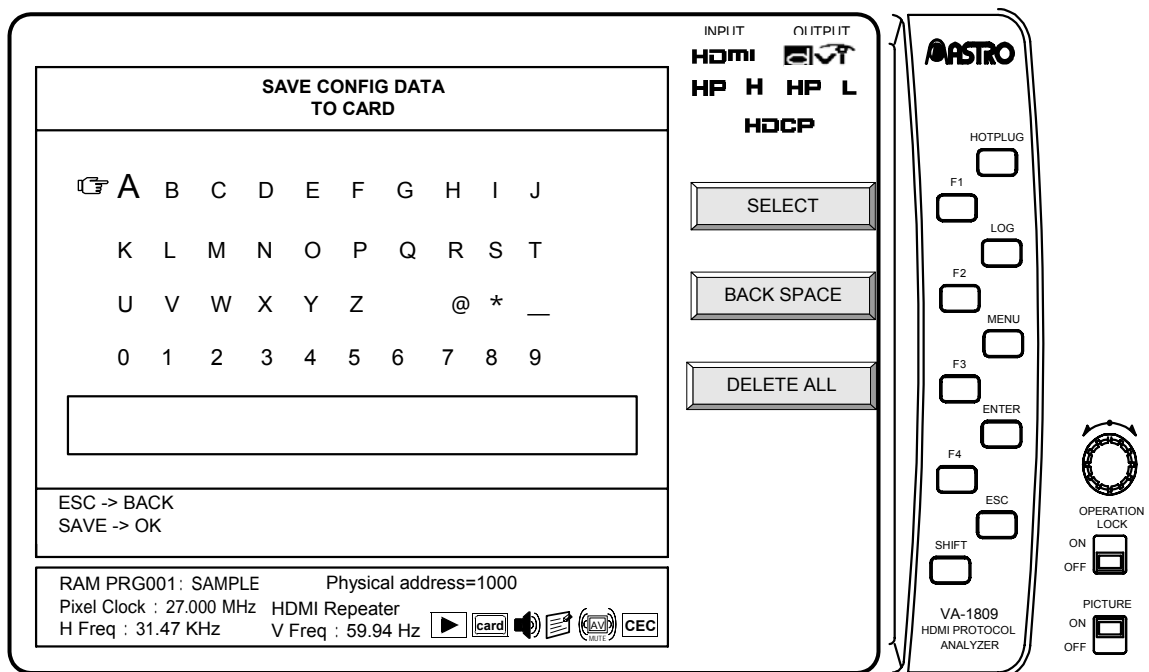





# 7

## Error tables

### 7.1 ANALYSIS ERROR (displayed in red) tables

#### 7.1.1 Video Timing

Item	Description
Pixel Clock	When the InfoFrame AVI Video Code is 1 to 59, the pixel clock frequency is not within $\pm 0.5\%$ of the value prescribed by the format specified in Video Code.
H Frequency	When the InfoFrame AVI Video Code is 1 to 59, the H frequency is not within $\pm 0.5\%$ of the value prescribed by the format specified in Video Code.
V Frequency	When the InfoFrame AVI Video Code is 1 to 59, the V frequency is not within $\pm 0.5\%$ of the value prescribed by the format specified in Video Code.
H Total Pixels	When the InfoFrame AVI Video Code is 1 to 59, the total number of H pixels is at variance from the value prescribed by the format specified in Video Code.
H Active Pixels	When the InfoFrame AVI Video Code is 1 to 59, the number of H active pixels is at variance from the value prescribed by the format specified in Video Code.
H Sync Pixels	When the InfoFrame AVI Video Code is 1 to 59, the number of H sync pixels is at variance from the value prescribed by the format specified in Video Code.
H Back Porch Pixels	When the InfoFrame AVI Video Code is 1 to 59, the number of H back porch pixels is at variance from the value prescribed by the format specified in Video Code.
H Front Porch Pixels	When the InfoFrame AVI Video Code is 1 to 59, the number of H front porch pixels is at variance from the value prescribed by the format specified in Video Code.
H Sync Polarity	When the InfoFrame AVI Video Code is 1 to 59, the H sync polarity is at variance from what is prescribed by the format specified in Video Code.
V Total Lines	When the InfoFrame AVI Video Code is 1 to 59, the total number of V lines is at variance from the value prescribed by the format specified in Video Code.
V Active Lines	When the InfoFrame AVI Video Code is 1 to 59, the number of V active lines is at variance from the value prescribed by the format specified in Video Code.
V Sync Lines	When the InfoFrame AVI Video Code is 1 to 59, the number of V sync lines is at variance from the value prescribed by the format specified in Video Code.
V Back Porch Lines	When the InfoFrame AVI Video Code is 1 to 59, the number of V back porch lines is at variance from the value prescribed by the format specified in Video Code.
V Front Porch Lines	When the InfoFrame AVI Video Code is 1 to 59, the number of V front porch lines is at variance from the value prescribed by the format specified in Video Code.
V Sync Polarity	When the InfoFrame AVI Video Code is 1 to 59, the V sync polarity is at variance from what is prescribed by the format specified in Video Code.
Interlace	When the InfoFrame AVI Video Code is 1 to 59, the interlace system is at variance from the value prescribed by the format specified in Video Code.

For details on the timing data ratings, refer to “7.4 AVI InfoFrame Video Code tables” on page 186.

## 7.1.2 AVI InfoFrame

Item	Description
InfoFrame Version Number	Not 0x02.
Length of AVI InfoFrame	Not 0x0d.
Checksum	The lower 8 bits of the value obtained by adding up AVI InfoFrame Type Code + AVI InfoFrame Version Number + Length of AVI InfoFrame + CheckSum are not 0.
RGB or YCbCr	Y1, Y0 of AVI InfoFrame are not applicable to the color systems (RGB, YCbCr422 or YCbCr444) supported by the program EDID.
Active Format Aspect	AVI InfoFrame Active Format Aspect (R) is not 0x08 to 0x0b.
Picture Aspect	AVI InfoFrame Picture Aspect (M) is 0x02. Alternatively, with an InfoFrame AVI Video Code of 1 to 59, this value is at variance from the value prescribed by the format specified in Video Code.
Video Code	When this value is 1 to 59, an error occurs in Input Video Timing.
Repetition	When the InfoFrame AVI Video Code is 1 to 59, this value is at variance from the value prescribed by the format specified in Video Code.
Rsv of Data Byte1	None of the values of the reserve bits of Data Byte 1 is 0.
Rsv of Data Byte3	None of the values of the reserve bits of Data Byte 2 is 0.
Rsv of Data Byte4	None of the values of the reserve bits of Data Byte 4 are 0.
Rsv of Data Byte5	None of the values of the reserve bits of Data Byte 5 is 0.
NO AVI InfoFrame	No AVI InfoFrame.

## 7.1.3 SPD InfoFrame

Item	Description
Checksum	The lower 8 bits of the value obtained by adding up SPD InfoFrame Type Code + SPD InfoFrame Version Number + Length of SPD InfoFrame + CheckSum is 0.

### 7.1.4 Audio InfoFrame

Item	Description																		
InfoFrame Version Number	Not 0x01.																		
Length of Audio InfoFrame	Not 0x0A.																		
Checksum	The lower 8 bits of the value obtained by adding up Audio InfoFrame Type Code + Audio InfoFrame Version Number + Length of Audio InfoFrame + CheckSum is 0.																		
Audio Coding Type	Audio InfoFrame: Audio Coding Type (CT) value is not 0.																		
Audio Channel Count	<p>Audio InfoFrame: The combination of the Audio Channel Count (CC) and Speaker Placement (CA) settings is not correct. (For details, refer to the table below.)</p> <table border="1"> <thead> <tr> <th>Audio Channel Count (CC)</th> <th>Speaker Placement (CA)</th> </tr> </thead> <tbody> <tr> <td>0x00</td> <td>Greater than 0x1F</td> </tr> <tr> <td>0x01</td> <td>Not 0x00.</td> </tr> <tr> <td>0x02</td> <td>Not 0x01, 0x02 or 0x04.</td> </tr> <tr> <td>0x03</td> <td>Not 0x03, 0x05, 0x06, 0x08 or 0x14.</td> </tr> <tr> <td>0x04</td> <td>Not 0x07, 0x09, 0x0A, 0x0C, 0x15, 0x16 or 0x18.</td> </tr> <tr> <td>0x05</td> <td>Not 0x0B, 0x0D, 0x0E, 0x10, 0x17, 0x19, 0x1A or 0x1C.</td> </tr> <tr> <td>0x06</td> <td>Not 0x0F, 0x11, 0x12, 0x1B, 0x1D or 0x1E</td> </tr> <tr> <td>0x07</td> <td>Not 0x13 or 0x1F.</td> </tr> </tbody> </table>	Audio Channel Count (CC)	Speaker Placement (CA)	0x00	Greater than 0x1F	0x01	Not 0x00.	0x02	Not 0x01, 0x02 or 0x04.	0x03	Not 0x03, 0x05, 0x06, 0x08 or 0x14.	0x04	Not 0x07, 0x09, 0x0A, 0x0C, 0x15, 0x16 or 0x18.	0x05	Not 0x0B, 0x0D, 0x0E, 0x10, 0x17, 0x19, 0x1A or 0x1C.	0x06	Not 0x0F, 0x11, 0x12, 0x1B, 0x1D or 0x1E	0x07	Not 0x13 or 0x1F.
Audio Channel Count (CC)	Speaker Placement (CA)																		
0x00	Greater than 0x1F																		
0x01	Not 0x00.																		
0x02	Not 0x01, 0x02 or 0x04.																		
0x03	Not 0x03, 0x05, 0x06, 0x08 or 0x14.																		
0x04	Not 0x07, 0x09, 0x0A, 0x0C, 0x15, 0x16 or 0x18.																		
0x05	Not 0x0B, 0x0D, 0x0E, 0x10, 0x17, 0x19, 0x1A or 0x1C.																		
0x06	Not 0x0F, 0x11, 0x12, 0x1B, 0x1D or 0x1E																		
0x07	Not 0x13 or 0x1F.																		
Sampling Frequency	Audio InfoFrame: The value of Sampling Frequency (SF) for Audio Channel Count Audio InfoFrame is not 0.																		
Sample Size	Audio InfoFrame: The value of Sampling Size (SS) for Audio InfoFrame is not 0.																		
Speaker Placement	Audio InfoFrame: Speaker Placement (CA) is greater than 0x1F.																		
Level Shift Value	Audio InfoFrame: Speaker Placement (CA) is 0. Audio InfoFrame: Level Shift Value (LSV) is not 0.																		
Down-mix Inhibit Flag	Audio InfoFrame: Speaker Placement (CA) is 0. Audio InfoFrame: Down-mix Inhibit Flag (DM_INH) is 0x01 (Prohibited).																		
Rsv of Data Byte1	None of the values of the reserve bits of Audio InfoFrame Data Byte 1 is 0.																		
Rsv of Data Byte2	None of the values of the reserve bits of Audio InfoFrame Data Byte 2 is 0.																		
Rsv of Data Byte6	None of the values of the reserve bits of Audio InfoFrame Data Byte 6 is 0.																		
Rsv of Data Byte7	None of the values of the reserve bits of Audio InfoFrame Data Byte 7 is 0.																		
Rsv of Data Byte8	None of the values of the reserve bits of Audio InfoFrame Data Byte 8 is 0.																		
Rsv of Data Byte9	None of the values of the reserve bits of Audio InfoFrame Data Byte 9 is 0.																		
Rsv of Data Byte10	None of the values of the reserve bits of Audio InfoFrame Data Byte 10 is 0.																		
No Audio InfoFrame	No Audio InfoFrame when Audio signals are input.																		

### 7.1.5 MPEG InfoFrame

Item	Description
Checksum	The lower 8 bits of the value obtained by adding up Mpeg InfoFrame Type Code + Mpeg InfoFrame Version Number + Length of Mpeg InfoFrame + CheckSum is not 0.
Rsv of Data Byte6	Mpeg InfoFrame: None of the values of the reserve bits of Data Byte 6 is 0.
Rsv of Data Byte7	Mpeg InfoFrame: None of the values of the reserve bits of Data Byte 7 is 0.
Rsv of Data Byte8	Mpeg InfoFrame: None of the values of the reserve bits of Data Byte 8 is 0.
Rsv of Data Byte9	Mpeg InfoFrame: None of the values of the reserve bits of Data Byte 9 is 0.
Rsv of Data Byte10	Mpeg InfoFrame: None of the values of the reserve bits of Data Byte 10 is 0.

### 7.1.6 ACP Packet

Item	Description
ACP_TYPE	Greater than 2. Alternatively, ACP_TYPE is 2, and ISRC1 is not sent.
DVD-Audio_Type_Dependent_Generation	ACP_TYPE is 0x02 (DVD), and DATDG is not 0x01. Alternatively, ACP_TYPE is other than 0x02 (DVD), and DATDG is not 0x00.
Copy_Permission	ACP_TYPE is not 0x02 (DVD), and Copy_Permission is not 0.
Copy_Number	ACP_TYPE is not 0x02 (DVD), and Copy_number is not 0. Alternatively, ACP_TYPE is 0x02 (DVD), Copy_Permission is not 0x02, and Copy_number is not 0.
Quality	ACP_TYPE is not 0x02 (DVD), and Quality is not 0. Alternatively, ACP_TYPE is 0x02 (DVD), Copy_Permission is not 0x02, and Quality is not 0.
Transaction	ACP_TYPE is not 0x02 (DVD), and Transaction is not 0.
Rsv of Header Byte2	None of the values of the reserve bits of Header Byte 2 is 0.
Rsv of Data Byte2-27	None of the values of the reserve bits of Data Bytes 16-27 is 0.

### 7.1.7 ISRC1 Packet

Item	Description
Rsv of Header Byte1	None of the values of the reserve bits of ISRC1 Packet Header Byte 1 is 0.
Rsv of Header Byte2	None of the values of the reserve bits of ISRC1 Packet Header Byte 2 is 0.
Rsv of Data Byte16-27	None of the values of the reserve bits of ISRC1 Packet Data Bytes 16-27 is 0.
NO ISRC1 Packet	ACP Packet ACP Type is 0x02 (DVD), and ISRC1 is not sent.

### 7.1.8 ISRC2 Packet

Item	Description
Rsv of Header Byte1	None of the values of the reserve bits of ISRC2 Packet Header Byte 1 is 0.
Rsv of Header Byte2	None of the values of the reserve bits of ISRC2 Packet Header Byte 2 is 0.
Rsv of Data Byte16-27	None of the values of the reserve bits of ISRC2 Packet Data Bytes 16-27 is 0.
NO ISRC2 Packet	ISRC2 Packet is not sent when ISRC1 Packet ISRC1_Cont is 1.

### 7.1.9 Channel Status Bit

Item	Description
Professional or Consumer	The Pro or Consumer setting of Channel Status Block is not 0 (Consumer).
Sampling frequency	Sampling Frequency (SF) is not one of the following: 0x00, 0x02, 0x03, 0x08, 0x0A, 0x0C, 0x0E
CSB Repetition Period	The B Bit period of Channel Status Block is not every 192 samples.

### 7.1.10 Audio Timing

Item	Description
N	N is not within the range of $128 \cdot FS / 1500 \text{Hz} \geq N \geq 128 \cdot FS / 300 \text{Hz}$ .
CTS	CTS is not within $\pm 0.2\%$ of the value obtained from $(T\_TMDS\_clock \cdot N) / (128 \cdot FS)$ .
No Audio	No Audio input. Audio InfoFrame present.

\* An error also results for N or CTS when the sampling frequency of Channel Status Bit is abnormal.

### 7.1.11 HDCP

Item	Description
AKSV	AKSV does not consist of twenty 1's and twenty 0's.
BKSV	BKSV does not consist of twenty 1's and twenty 0's.
DEVICE_CNT	The DEVICE_CNT value is greater than the maximum (127).
DEPTH	The DEPTH value is greater than the maximum (7).
Decryption	Authentication is completed, but operation fails to move on to decryption.

### 7.1.12 HDCP Authentication VA-1809->Sink

Item	Description
AKSV	AKSV is not composed of twenty "1s" and twenty "0s."
BKSV	BKSV is not composed of twenty "1s" and twenty "0s."
DEVICE_CNT	DEVICE_CNT value has exceeded the MAX value (127).
DEPTH	DEPTH value has exceeded the MAX value (7).
Ri, Ri'	The Ri value is different from the Ri' value.

### 7.1.13 HDCP Authentication Part3 VA-1809->Sink

Item	Description
Ri, Ri'	The Ri value is different from the Ri' value.

### 7.1.14 HDCP Repeater Sequence

Item	Description
1st DownStream Connect	No sink device is connected.
1st DDC Line Status	The DDC line is abnormal.
1st YCbCr Support	Sink devices are not supported by YcbCr.
1st BKSv Check	BKSv is abnormal.
1st Link Check	R <sub>0</sub> is different from R <sub>0</sub> '.
2nd KSV FIFO Ready	Sink device's FIFO Ready does not turn ON.
2nd Depth Check	The Depth value read from the sink device is 7 or larger.
2nd Count Check	The Count value read from the sink device is 128 or larger.
2nd Compere V	V is different from V'.

### 7.1.15 Compliance Test Item Check

#### ■ EDID Related Behavior

Compliance test items 7-1 can be checked.

The items to be inspected vary depending on the size of the EDID data of the program set in the VA-1809.

Item	Classification	Description
128 bytes	Error	A combination of <0xA0+ack> <0x00+ack> and <0xA1+ack> cannot be detected by the DDC line command.
256 bytes	Error	A combination of <0xA0+ack> <0x00+ack> and <0xA1+ack> cannot be detected by the DDC line command. All areas of the EDID that were set were not read.
	Warning	An area exceeding the EDID size that has been set was read.
257 bytes or more	Error	A combination of <0x60+ack> <0x01+ack> and <0xA0+ack> cannot be detected by the DDC line command.
	Warning	An area exceeding the EDID size that has been set was read.

#### ■ Packet Type

Compliance test items 7-19 can be checked.

The following packets are checked.

Item	Description
ACP Packet	See page 178, "7.1.6 ACP Packet."
ISRC1 Packet	See page 178, "7.1.7 ISRC1 Packet."
ISRC2 Packet	See page 179, "7.1.8 ISRC2 Packet."

**■ RGB to RGB-only Sink**

Compliance test items 7-23 can be checked.  
“RGB or YCbCr” of AVI InfoFrame is not set to “0 (RGB).”

**■ YCbCr to YCbCr Sink**

Compliance test items 7-24 can be checked.  
“RGB or YCbCr” of AVI InfoFrame is not set to “1” or “2 (YCbCr).”

**■ Video Format Timing**

Compliance test items 7-25 can be checked.  
See page 175, “7.1.1 Video Timing.”

**■ Pixel Repetition**

Compliance test items 7-26 can be checked.  
When the video code of InfoFrame AVI is (1-59), the repetition value of InfoFrame is different from the value defined in the format to be specified in the video code.  
Or, the specified repetition value and the repetition value of the actual image are different.

**■ AVI InfoFrame**

Compliance test items 7-27 can be checked.  
See page 176, “7.1.2 VI InfoFrame.”

**■ ACR**

Compliance test items 7-29 can be checked.  
N and CTS on page 179, “7.1.10 Audio Timing” are checked.

**■ Audio InfoFrame**

Compliance test items 7-31 can be checked.  
See page 177, “7.1.4 Audio InfoFrame.”

**■ Audio Packet Layout**

Compliance test items 7-32 can be checked.  
The “Audio Channel Count” value of Audio InfoFrame and the Layout value of the Audio Sample Packet do not match.

## ■ Interoperability with DVI

Compliance test items 7-33 can be checked.  
There is an input to the VA-1809 although an EDID other than HDMI is set in the VA-1809.

## ■ EDID Readable

Compliance test items 8-1 can be checked.

Item	Description
EDID Block 0 Size	The size of EDID block 0 is not 128 bytes.
Extension Flag	The extension flag is set to "0."
Extension Block Num	The number of extension blocks is different from the extension flag.

## ■ EDID VESA Structure

Compliance test items 8-2 can be checked.

Item	Description
EDID Block 0 Header	The header of the EDID is not 0x00, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF or 0x00.
EDID Version, Revision	"Version" and "Revision" of the EDID are not 0x01 and 0x03, respectively.
Video Information Byte	"Basic Display Parameter/Feature" of the EDID is set to "Analog Interface."
Preferred Timing bit is set	"Preferred Timing Mode" of the EDID is not set to "1."
Detailed Timing Descriptions	First two bytes in the "1st Detailed Timing Section" of the EDID are all set to "0x00."
	"Monitor Range Limits" and "Monitor Name Descriptor" are not included in the "Detailed Timing Section" of the EDID.
	"Monitor Descriptor" is before "Detailed Timing Descriptor" of the EDID.
EDID Block 1	The CEA timing extension or block map is not assigned to block 1 of the EDID.
Block Map	The block map and the header of each block do not match. (It is checked when the extension count is greater than "1.")
	The unused area of the block map is not set to "0."
Block Checksum	The checksum value is incorrect.



## ■ EDID CEA Structure

Compliance test items 8-3 can be checked.

Item	Description
Revision Number	The revision number is not "0x03."
Data structure	The tag code of the data block is "0," "5," "6" or "7 (reserved)." The value of Byte#2 (Byte number offset "d" where Detailed Timing data begins) of the CEA timing extension is incorrect when converted from the length of each data block.
Audio Data Block	If there is an audio data block, bit#6 (audio) in byte#3 of the 1st CEA timing extension is not set to "1." (Basic audio is not supported.)
	The audio data block length is not a multiple of 3.
	Bit#7 in the 1st byte and bit#7 in the 2nd byte of a block in the CEA short audio descriptor are not set to "0" (reserved area).
	When the audio format code of a block of the CEA short audio descriptor is linear PCM, bit#7 through bit#3 in the 3rd byte are not set to "0" (reserved area).
Speaker Allocation Data Block	If there is a speaker allocation data block, the speaker allocation data block length is not set to "3."
	Bit#7 in the 1st byte and all bits in the 2nd byte and 3rd byte are not set to "0" (reserved area).
	There are two or more speaker allocation data blocks in the 1st CEA timing extension. In addition, there are speaker allocation data blocks in other CEA timing extensions.
	There is no speaker allocation data block although multi-channel audio is supported by the CEA short audio descriptor.
Detailed Timing Descriptor	When the first two bytes of the detailed timing descriptor are set to "0," all subsequent block data (other than the checksum bit) are not set to "0."
HDMI Vendor-Specific Data Block	There is no data block whose first four bytes are set to 0b011xxxx, 0x03, 0x0C or 0x00 in the 1st CEA timing extension. (There is no particular specification for x.) (There is no HDMI vendor specific data block.)
	The physical address is incorrect. (The bits other than the upper four bits of the 1st byte in the physical address are not all set to "0.")
	Byte 6 in the HDMI vendor-specific data block is not 0x80 or 0x00.
	The reserved area of the extension field in the HDMI vendor-specific data block is not set to "0."
	There is a data block whose first four bytes are set to 0b011xxxx, 0x03, 0x0C or 0x00 in blocks other than the 1st CEA timing extension. (There is no specific specification for x.) (There is an HDMI vendor specific data block.)
Others	Bit#7 through bit#4 (number of preferred timings plus flags) in byte#3 of all CEA timing extension blocks are not the same.
Native Format	The number of detailed timing descriptors in the EDID is smaller than the number of native formats.

## 7.2 ANALYSIS OVER LIMIT (yellow display) table

### Video Timing

Item	Description
Pixel Clock	When the InfoFrame AVI Video Code is not 1 to 59, the pixel clock frequency is not in the 25.000 MHz to 165.000 MHz range.
H Total Pixels	<p>(1) When the InfoFrame AVI Video Code is not 1 to 59, the total number of H pixels is not a multiple of 2.</p> <p>(2) When the InfoFrame AVI Video Code is not 1 to 59, the total number of H pixels is not in the 200 to 2500 range.</p> <p>(3) When the InfoFrame AVI Video Code is not 1 to 59 and the H Period is greater than 2144 pixels, Hsync + H Back Porch is not <math>\geq</math> H period - 2048.</p>
H Active Pixels	<p>(1) When the InfoFrame AVI Video Code is not 1 to 59, the number of H Active pixels is not a multiple of 2.</p> <p>(2) When the InfoFrame AVI Video Code is not 1 to 59, the number of H Active pixels is not in the 128 to 200 range.</p>
H Sync Pixels	<p>(1) When the InfoFrame AVI Video Code is not 1 to 59, the number of H Sync pixels is not a multiple of 2.</p> <p>(2) When the InfoFrame AVI Video Code is not 1 to 59, the number of H Sync pixels is less than 2.</p> <p>(3) When the InfoFrame AVI Video Code is not 1 to 59, the number of H Blanking pixels (H Sync pixels + H Back Porch pixels + H Front Porch pixels) is less than 138.</p>
H Back Porch Pixels	<p>(1) When the InfoFrame AVI Video Code is not 1 to 59, the number of H Back Porch pixels is not a multiple of 2.</p> <p>(2) When the InfoFrame AVI Video Code is not 1 to 59, the number of H Back Porch pixels is less than 2.</p> <p>(3) When the InfoFrame AVI Video Code is not 1 to 59, the number of H Blanking pixels (H Sync pixels + H Back Porch pixels + H Front Porch pixels) is less than 138.</p>
H Front Porch Pixels	<p>(1) When the InfoFrame AVI Video Code is not 1 to 59, the number of H Front Porch pixels is not a multiple of 2.</p> <p>(2) When the InfoFrame AVI Video Code is not 1 to 59, the number of H Front Porch pixels is less than 2.</p> <p>(3) When the InfoFrame AVI Video Code is not 1 to 59, the number of H Blanking pixels (H Sync pixels + H Back Porch pixels + H Front Porch pixels) is less than 138.</p>
V Total Lines	When the InfoFrame AVI Video Code is not 1 to 59, the number of V Total lines is not in the 200 to 2000 range.
V Active Lines	When the InfoFrame AVI Video Code is not 1 to 59, the number of V Active lines is not in the 128 to 1320 range.
V Sync Lines	When the InfoFrame AVI Video Code is not 1 to 59, the number of V Sync lines is not in the 4 to 500 range.
V Back Porch Lines	When the InfoFrame AVI Video Code is not 1 to 59, the number of V Back Porch lines is not in the 1 to $(1/2 \times V \text{ Total lines})$ range.

### 7.3 ERROR CODE table

ERROR CODE	Description
0x80000026	Memory card read error
0x80000027	Memory card write protected
0x80000028	Memory card is not inserted.
0x80000029	Memory card is not formatted.
0x8000002a	Memory capacity of memory card exceeded.
0x80000035	Flash ROM write error
0x80000100	File open error
0x80000101	File write error
0x80000110	VA-1809 information write error
0x80000111	Log information write error
0x80000112	HDMI information write error
0x80000120	Input timing data write error
0x80000121	Audio timing data write error
0x80000122	HDCP data write error
0x80000130	Data write error in AVI InfoFrame data for GUI
0x80000131	Data write error in SPD InfoFrame data for GUI
0x80000132	Data write error in Audio InfoFrame data for GUI
0x80000133	Data write error in MPEG InfoFrame data for GUI
0x80000134	Data write error in ACP Packet data for GUI
0x80000135	Data write error in ISRC1 Packet data for GUI
0x80000136	Data write error in ISRC2 Packet data for GUI
0x80000137	Data write error in Channel Status Bit data for GUI
0x80000140	Data write error in AVI InfoFrame data for HEX
0x80000141	Data write error in SPD InfoFrame data for HEX
0x80000142	Data write error in Audio InfoFrame data for HEX
0x80000143	Data write error in MPEG InfoFrame data for HEX
0x80000144	Data write error in ACP Packet data for HEX
0x80000145	Data write error in ISRC1 Packet data for HEX
0x80000146	Data write error in ISRC2 Packet data for HEX
0x80000147	Data write error in Channel Status Bit data for HEX

## 7.4 AVI InfoFrame Video Code tables

Video Code	1		2		3		4		5		6	
Name	640×480p@59.94/60		720×480p@59.94/60		720×480p@59.94/60		1280×720p@59.94/60		1920×1080i@59.94/60		1440×480i@59.94/60	
Table No.	1	2	1	2	1	2	1	2	1	2	1	2
Pixel Clock	25.175	25.200	27.000	27.027	27.000	27.027	74.175	74.250	74.175	74.250	27.000	27.027
H Frequency	31.469	31.500	31.469	31.500	31.469	31.500	44.955	45.000	33.716	33.750	15.734	15.750
V Frequency	59.940	60.000	59.940	60.000	59.940	60.000	59.939	60.000	59.939	60.000	59.940	60.000
H Sync	96	96	62	62	62	62	40	40	44	44	124	124
H Total	800	800	858	858	858	858	1650	1650	2200	2200	1716	1716
H Active	640	640	720	720	720	720	1280	1280	1920	1920	1440	1440
V Sync	2	2	6	6	6	6	5	5	5	5	3	3
V Back Porch	33	33	30	30	30	30	20	20	15	15	15	15
H Back Porch	48	48	60	60	60	60	220	220	148	148	114	114
V Total	525	525	525	525	525	525	750	750	1125	1125	525	525
V Active	480	480	480	480	480	480	720	720	1080	1080	480	480
H Front Porch	16	16	16	16	16	16	110	110	88	88	38	38
V Front Porch	10	10	9	9	9	9	5	5	2	2	4	4
Scan	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Interlace	Interlace	Interlace	Interlace
Hsyncpolarity	nega	Nega	Nega	Nega	Nega	Nega	Posi	Posi	Posi	Posi	Nega	Nega
Vsyncpolarity	Nega	Nega	Nega	Nega	Nega	Nega	Posi	Posi	Posi	Posi	Nega	Nega
AspectRatio	4:3	4:3	4:3	4:3	16:9	16:9	16:9	16:9	16:9	16:9	4:3	4:3

Video Code	7		8				9				10	
Name	1440×480i@59.94/60		1440×240p@59.94/60				1440×240p@59.94/60				2880×480i@59.94/60	
Table No.	1	2	1	2	3	4	1	2	3	4	1	2
Pixel Clock	27.000	27.027	27.000	27.027	27.000	27.027	27.000	27.027	27.000	27.027	54.000	54.054
H Frequency	15.734	15.750	15.734	15.750	15.734	15.750	15.734	15.750	15.734	15.750	15.734	15.750
V Frequency	59.940	60.000	59.826	59.886	60.054	60.115	59.826	59.886	60.054	60.115	59.940	60.000
H Sync	124	124	124	124	124	124	124	124	124	124	248	248
H Total	1716	1716	1716	1716	1716	1716	1716	1716	1716	1716	3432	3432
H Active	1440	1440	1440	1440	1440	1440	1440	1440	1440	1440	2880	2880
V Sync	3	3	3	3	3	3	3	3	3	3	3	3
V Back Porch	15	15	15	15	15	15	15	15	15	15	15	15
H Back Porch	114	114	114	114	114	114	114	114	114	114	228	228
V Total	525	525	263	263	262	262	263	263	262	262	525	525
V Active	480	480	240	240	240	240	240	240	240	240	480	480
H Front Porch	38	38	38	38	38	38	38	38	38	38	76	76
V Front Porch	4	4	5	5	4	4	5	5	4	4	4	4
Scan	Interlace	Interlace	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Interlace	Interlace
Hsyncpolarity	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega
Vsyncpolarity	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega
AspectRate	16:9	16:9	4:3	4:3	4:3	4:3	16:9	16:9	16:9	16:9	4:3	4:3

Video Code	11		12				13				14	
Name	2880×480i@59.94/60		2880×240p@59.94/60				2880×240p@59.94/60				1440×480p@59.94/60	
Table No.	1	2	1	2	3	4	1	2	3	4	1	2
Pixel Clock	54.000	54.054	54.000	54.054	54.000	54.054	54.000	54.054	54.000	54.054	54.000	54.054
H Frequency	15.734	15.750	15.734	15.750	15.734	15.750	15.734	15.750	15.734	15.750	31.469	31.500
V Frequency	59.940	60.000	59.826	59.886	60.054	60.115	59.826	59.886	60.054	60.115	56.940	60.000
H Sync	248	248	248	248	248	248	248	248	248	248	124	124
H Total	3432	3432	3432	3432	3432	3432	3432	3432	3432	3432	1716	1716
H Active	2880	2880	2880	2880	2880	2880	2880	2880	2880	2880	1440	1440
V Sync	3	3	3	3	3	3	3	3	3	3	6	6
V Back Porch	15	15	15	15	15	15	15	15	15	15	30	30
H Back Porch	228	228	228	228	228	228	228	228	228	228	120	120
V Total	525	525	263	263	262	262	263	263	262	262	525	525
V Active	480	480	240	240	240	240	240	240	240	240	480	480
H Front Porch	76	76	76	76	76	76	76	76	76	76	32	32
V Front Porch	4	4	5	5	4	4	5	5	4	4	9	9
Scan	Interlace	Interlace	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive
Hsyncpolarity	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega
Vsyncpolarity	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega
AspectRate	16:9	16:9	4:3	4:3	4:3	4:3	16:9	16:9	16:9	16:9	4:3	4:3

VideoCode	15		16		17	18	19	20	21	22	
Name	1440×480p@59.94/60		1920×1080p@59.94/60		720×576p@50	720×576p@50	1280×720p@50	1920×1080i@50	1440×576i@50	1440×576i@50	
TableNo.	1	2	1	2	1	1	1	1	1	1	
PixelClock	54.000	54.054	148.350	148.500	27.000	27.000	74.250	74.250	27.000	27.000	
HFrequency	31.469	31.500	67.432	67.500	31.250	31.250	37.500	28.125	15.625	15.625	
VFrequency	56.940	60.000	59.939	60.000	50.000	50.000	50.000	50.000	50.000	50.000	
HSync	124	124	44	44	64	64	40	44	126	126	
HTotal	1716	1716	2200	2200	864	864	1980	2640	1728	1728	
HActive	1440	1440	1920	1920	720	720	1280	1920	1440	1440	
VSync	6	6	5	5	5	5	5	5	3	3	
VBackPorch	30	30	36	36	39	39	20	15	19	19	
HBackPorch	120	120	148	148	68	68	220	148	138	138	
VTTotal	525	525	1125	1125	625	625	750	1125	625	625	
VActive	480	480	1080	1080	576	576	720	1080	576	576	
HFrontPorch	32	32	88	88	12	12	440	528	24	24	
VFrontPorch	9	9	4	4	5	5	5	2	2	2	
Scan	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Interlace	Interlace	Interlace
Hsyncpolarity	Nega	Nega	Posi	Posi	Nega	Nega	Posi	Posi	Nega	Nega	
Vsyncpolarity	Nega	Nega	Posi	Posi	Nega	Nega	Posi	Posi	Nega	Nega	
AspectRate	16:9	16:9	16:9	16:9	4:3	16:9	16:9	16:9	4:3	16:9	

VideoCode	23			24			25	26	27		
Name	1440×288p@50			1440×288p@50			2880×576i@50	2880×576i@50	2880×288p@50		
TableNo.	1	2	3	1	2	3	1	1	1	2	3
PixelClock	27.000	27.000	27.000	27.000	27.000	27.000	54.000	54.000	54.000	54.000	54.000
HFrequency	15.625	15.625	15.625	15.625	15.625	15.625	15.625	15.625	15.625	15.625	15.625
VFrequency	49.761	49.920	50.080	49.761	49.920	50.080	50.000	50.000	49.761	49.920	50.080
HSync	126	126	126	126	126	126	252	252	252	252	252
HTotal	1728	1728	1728	1728	1728	1728	3456	3456	3456	3456	3456
HActive	1440	1440	1440	1440	1440	1440	2880	2880	2880	2880	2880
VSync	3	3	3	3	3	3	3	3	3	3	3
VBackPorch	19	19	19	19	19	19	19	19	19	19	19
HBackPorch	138	138	138	138	138	138	276	276	276	276	276
VTotat	314	313	312	314	313	312	625	625	314	313	312
VActive	288	288	288	288	288	288	576	576	288	288	288
HFrontPorch	24	24	24	24	24	24	48	48	48	48	48
VFrontPorch	4	3	2	4	3	2	2	2	4	3	2
Scan	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Interlace	Interlace	Progressive	Progressive	Progressive
Hsyncpolarity	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega
Vsyncpolarity	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega
AspectRate	4:3	4:3	4:3	16:9	16:9	16:9	4:3	16:9	4:3	4:3	4:3



VideoCode	28			29	30	31	32		33	34	
Name	2880×288p@50			1440×576p@50	1440×576p@50	1920×1080p@50	1920×1080p@23.97/24		1920×1080p@25	1920×1080p@29.97/30	
TableNo.	1	2	3	1	1	1	1	2	1	1	2
PixelClock	54.000	54.000	54.000	54.000	54.000	148.500	74.175	74.250	74.250	74.175	74.250
HFrequency	15.625	15.625	15.625	31.250	31.250	56.250	26.973	27.000	28.125	33.716	33.750
VFrequency	49.761	49.920	50.080	50.000	50.000	50.000	23.976	24.000	25.000	29.970	30.000
HSync	252	252	252	128	128	44	44	44	44	44	44
HTotal	3456	3456	3456	1728	1728	2640	2750	2750	2640	2200	2200
HActive	2880	2880	2880	1440	1440	1920	1920	1920	1920	1920	1920
VSync	3	3	3	5	5	5	5	5	5	5	5
VBackPorch	19	19	19	39	39	36	36	36	36	36	36
HBackPorch	276	276	276	136	136	148	148	148	148	148	148
VTTotal	314	313	312	625	625	1125	1125	1125	1125	1125	1125
VActive	288	288	288	576	576	1080	1080	1080	1080	1080	1080
HFrontPorch	48	48	48	24	24	528	638	638	528	88	88
VFrontPorch	4	3	2	5	5	4	4	4	4	4	4
Scan	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive
Hsyncpolarity	Nega	Nega	Nega	Nega	Nega	Posi	Posi	Posi	Posi	Posi	Posi
Vsyncpolarity	Nega	Nega	Nega	Posi	Posi	Posi	Posi	Posi	Posi	Posi	Posi
AspectRate	16:9	16:9	16:9	4:3	16:9	16:9	16:9	16:9	16:9	16:9	16:9

VideoCode	35		36		37	38	39	40	41	42
Name	2880×480p@59.94/60		2880×480p@59.94/60		2880×576p@50	2880×576p@50	1920×1080i@50	1920×1080i@100	1280×720p@100	720×576p@100
TableNo.	1	2	1	2	1	1	1	1	1	1
PixelClock	108.000	108.108	108.000	108.108	108.000	108.000	72.000	148.500	148.500	54.000
Hfreq	31.469	31.5	31.469	31.5	31.25	31.25	31.25	56.25	75	62.5
Vfreq	59.94	60	59.94	60	50	50	50	100	100	100
Htotal	3432	3432	3432	3432	3456	3456	2304	2640	1980	864
Hactive	2880	2880	2880	2880	2880	2880	1920	1920	1280	720
Hsync	248	248	248	248	256	256	168	44	40	64
Hback	240	240	240	240	272	272	184	148	220	68
Hfront	64	64	64	64	48	48	32	528	440	12
Hpola	Nega	Nega	Nega	Nega	Nega	Nega	Posi	Posi	Posi	Nega
Vtotal	525	525	525	525	625	625	1250	1125	750	625
Vactive	480	480	480	480	576	576	1080	1080	720	576
Vsync	6	6	6	6	5	5	5	5	5	5
Vback	30	30	30	30	39	39	57	15	20	39
Vfront	9	9	9	9	5	5	23	2	5	5
Vpola	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Posi	Posi	Nega
Interlace	Progressive	Progressive	Progressive	Progressive	Progressive	Progressive	Interlace	Interlace	Progressive	Progressive
Aspect	4:3	4:3	16:9	16:9	4:3	16:9	16:9	16:9	16:9	4:3

VideoCode	43	44	45	46		47		48	
Name	720×576p@100	1440×576i@100	1440×576i@100	1920×1080i@119.88/120		1280×720p@119.88/120		1280×720p@119.88/120	
TableNo.	1	1	1	1	2	1	2	1	2
PixelClock	54.000	54.000	54.000	148.352	148.500	148.352	148.500	54.000	54.054
Hfreq	62.5	31.25	31.25	67.432	67.5	89.909	90	62.937	63
Vfreq	100	100	100	119.88	120	119.88	120	119.88	120
Htotal	864	1728	1728	2200	2200	1650	1650	858	858
Hactive	720	1440	1440	1920	1920	1280	1280	720	720
Hsync	64	126	126	44	44	40	40	62	62
Hback	68	138	138	148	148	220	220	60	60
Hfront	12	24	24	88	88	110	110	16	16
Hpola	Nega	Nega	Nega	Posi	Posi	Posi	Posi	Nega	Nega
Vtotal	625	625	625	1125	1125	750	750	525	525
Vactive	576	576	576	1080	1080	720	720	480	480
Vsync	5	3	3	5	5	5	5	6	6
Vback	39	19	19	15	15	20	20	30	30
Vfront	5	2	2	2	2	5	5	9	9
Vpola	Nega	Nega	Nega	Posi	Posi	Posi	Posi	Nega	Nega
Interlace	Progressive	Interlace	Interlace	Interlace	Interlace	Progressive	Progressive	Progressive	Progressive
Aspect	16:9	4:3	16:9	16:9	16:9	16:9	16:9	4:3	4:3

VideoCode	49		50		51		52	53	54	55
Name	720×480p@119.88/120		1440×480i@119.88/120		1440×480i@119.88/120		720×576p@200	720×576p@200	1440×576i@200	1440×576i@200
TableNo.	1	2	1	2	1	2	1	1	1	1
PixelClock	54.000	54.054	54.000	108.000	108.000	108.000	108.000	108.000	108.000	108.000
Hfreq	62.937	63	31.469	125	125	62.5	62.5	125	62.5	62.5
Vfreq	119.88	120	119.88	200	200	200	200	200	200	200
Htotal	858	858	1716	864	864	1728	1728	864	1728	1728
Hactive	720	720	1440	720	720	1440	1440	720	1440	1440
Hsync	62	62	124	64	64	126	126	64	126	126
Hback	60	60	114	68	68	138	138	68	138	138
Hfront	16	16	38	12	12	24	24	12	24	24
Hpola	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega
Vtotal	525	525	525	625	625	625	625	625	625	625
Vactive	480	480	480	576	576	576	576	576	576	576
Vsync	6	6	3	5	5	3	3	5	3	3
Vback	30	30	15	39	39	19	19	39	19	19
Vfront	9	9	4	5	5	2	2	5	2	2
Vpola	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega
Interlace	Progressive	Progressive	Interlace	Progressive	Progressive	Interlace	Interlace	Progressive	Interlace	Interlace
Aspect	16:9	16:9	4:3	4:3	16:9	4:3	16:9	16:9	4:3	16:9

VideoCode	56		57		58		59	
Name	720×480p@239.76/240		720×480p@239.76/240		720(1440)×480i@239.76/240		720(1440)×480i@239.76/240	
TableNo.	1	2	1	2	1	2	1	2
PixelClock	108.000	108.108	108.000	108.108	108.000	108.108	108.000	108.108
Hfreq	125.874	126	125.874	126	62.937	63	62.937	63
Vfreq	239.76	240	239.76	240	239.76	240	239.76	240
Htotal	858	858	858	858	1716	1716	1716	1716
Hactive	720	720	720	720	1440	1440	1440	1440
Hsync	62	62	62	62	124	124	124	124
Hback	60	60	60	60	114	114	114	114
Hfront	16	16	16	16	38	38	38	38
Hpola	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega
Vtotal	525	525	525	525	525	525	525	525
Vactive	480	480	480	480	480	480	480	480
Vsync	6	6	6	6	3	3	3	3
Vback	30	30	30	30	15	15	15	15
Vfront	9	9	9	9	4	4	4	4
Vpola	Nega	Nega	Nega	Nega	Nega	Nega	Nega	Nega
Interlace	Progressive	Progressive	Progressive	Progressive	Interlace	Interlace	Interlace	Interlace
Aspect	4:3	4:3	16:9	16:9	4:3	4:3	16:9	16:9



# 8

## Product specifications

### 8.1. Internal data

The VA-1809 contains ten sets of sample data as its internal data. The default settings are shown below.

#### 8.1.1 SAMPLE1

\* The SAMPLE1 data serves as the EDID data when the power of the VA-1809 is OFF. The EDID data cannot be edited while the power of the VA-1809 is OFF.

##### (1) SINK

```
rx_mode=receiver
hdmi_mode=hdmi
hdcv_on=on
ddc_speed=100
```

##### (2) EDID

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	06	8F	07	11	01	00	00	00
10	0C	0F	01	03	80	0C	09	78	0A	1E	AC	98	59	56	85	28
20	29	52	57	00	00	00	01	01	01	01	01	01	01	01	01	01
30	01	01	01	01	01	01	8C	0A	D0	8A	20	E0	2D	10	10	3E
40	96	00	81	60	00	00	00	18	01	1D	80	18	71	1C	16	20
50	58	2C	25	00	81	49	00	00	00	9E	00	00	00	FC	00	56
60	41	2D	31	38	30	39	0A	20	20	20	20	20	00	00	00	FD
70	00	17	3D	0D	2E	0F	00	0A	20	20	20	20	20	20	01	4C
80	02	03	20	71	49	82	05	04	01	10	11	14	13	1F	26	0F
90	1F	07	09	7F	07	83	2F	00	00	66	03	0C	00	10	00	80
A0	01	1D	00	72	51	D0	1E	20	6E	28	55	00	81	49	00	00
B0	00	1E	D6	09	80	A0	20	E0	2D	10	10	60	A2	00	81	60
C0	00	08	08	18	8C	0A	D0	90	20	40	31	20	0C	40	55	00
D0	81	60	00	00	00	18	01	1D	80	D0	72	1C	16	20	10	2C
E0	25	80	81	49	00	00	00	9E	01	1D	00	BC	52	D0	1E	20
F0	B8	28	55	40	81	49	00	00	00	1E	00	00	00	00	00	21

byte	Item	Setting
07-00	Header	0x00FFFFFFFFFFFF00
09-08	ID Manufacturer Name	0x8F06 = ATO
0B-0A	ID Product Code	0x1107h
0F-0C	ID Serial Number	0x00000001
10	Week of Manufacture	0x0C = 12
11	Year of Manufacture	0x0F = 2005
12	EDID Version	0x01 = ver.1
13	EDID Revision	0x03 = Rev.3
14	Video Input Definition Analog or Digital DFP1.X	0x80 0b1 = Digital 0b0 = not support
15	Max. Horizontal Image Size	0x0C = 12cm
16	Max. Vertical Image Size	0x09 = 9cm
17	Display Transfer Characteristic (Gamma)	0x78 = 2.22
18	[Feature Support] Standby (DPMS) Suspend (DPMS) Active Off/Very Low Power Display Type Standard Default Color Space sRGB Preferred Timing Mode is indicated in the first detailed timing block Default GTF supported	0x0A 0b0 = not support 0b0 = not support 0b0 = not support 0b1 = RGB color display 0b0 = not support 0b1 = support 0b0 = not support
22-19	[Color Characteristics] Red-x Red-y Green-x Green-y Blue-x Blue-y White-x White-y	0x57522928855659981EAC 0x280 = 0.594 0x15C = 0.349 0x11F = 0.339 0x262 = 0.521 0x09F = 0.158 0x048 = 0.162 0x122 = 0x323 0x131 = 0.340
23	[Established Timings 1] 720×400 @ 70Hz 720×400 @ 88Hz 640×480 @ 60Hz 640×480 @ 67Hz 640×480 @ 72Hz 640×480 @ 75Hz 800×600 @ 56Hz 800×600 @ 60Hz	0x00 0b0 = not support 0b0 = not support 0b0 = not support 0b0 = not support 0b0 = not support 0b0 = not support 0b0 = not support 0b0 = not support
24	[Established Timings 2] 800×600 @ 72Hz 800×600 @ 75Hz 832×624 @ 75Hz 1024×768 @ 87Hz (Interlace) 1024×768 @ 60Hz	0x00 0b0 = not support 0b0 = not support 0b0 = not support 0b0 = not support 0b0 = not support



	1024×768 @ 70Hz 1024×768 @ 75Hz 1280×1024 @ 75Hz	0b0 = not support 0b0 = not support 0b0 = not support
25	[Manufacturer's Reserved Timings] 1152×870 @ 75Hz	0x00 0b0 = not support
27-26	Standard Timing Identification #1	0x0101 = Unused field in this section
29-28	Standard Timing Identification #2	0x0101 = Unused field in this section
2B-2A	Standard Timing Identification #3	0x0101 = Unused field in this section
2D-2C	Standard Timing Identification #4	0x0101 = Unused field in this section
2F-2E	Standard Timing Identification #5	0x0101 = Unused field in this section
31-30	Standard Timing Identification #6	0x0101 = Unused field in this section
33-32	Standard Timing Identification #7	0x0101 = Unused field in this section
35-34	Standard Timing Identification #8	0x0101 = Unused field in this section
47-36 37-36 3A-38 3D-3B 41-3E 44-42 45 46 47	[Detailed Timing Descriptions #1] Pixel Clock Horizontal Active Pixels Horizontal Blanking Pixels Vertical Acrive Lines Vertical Blanking Lines Horizontal sync offset Horizontal sync pulse width Vert sync offset Vert sync pulse width Horizontal Image Size Vertical Image Size Horizontal Border Vertical Border Interlace Stereo Mode sync signal description1 sync signal description2 sync signal description3	0x0A8C = 27.00MHz 0x2D0 = 720dot 0x8A = 138dot 0x1E0 = 480H 0x2D = 45H 0x10 = 16dot 0x3E = 62dot 0x09 = 9H 0x06 = 6H 0x81 = 129mm 0x60 = 96cm 0x00 = 0dot 0x00 = 0H 0b0 = non-Interlace 0b0 = Normal display, no stereo 0x3 = Digital Separate 0b0 = Vertical Polarity negative 0b0 = Horizontal Polarity negative
59-48 37-36 3A-38 3D-3B 41-3E 44-42 45 46 47	[Detailed Timing Descriptions #2] Pixel Clock Horizontal Active Pixels Horizontal Blanking Pixels Vertical Acrive Lines Vertical Blanking Lines Horizontal sync offset Horizontal sync pulse width Vert sync offset Vert sync pulse width Horizontal Image Size Vertical Image Size Horizontal Border Vertical Border Interlace Stereo Mode sync signal description1 sync signal description2	0x1D01 = 74.25MHz 0x780 = 1920dot 0x118 = 280dot 0x21C = 540H 0x16 = 22H 0x58 = 88dot 0x2C = 44dot 0x02 = 2H 0x05 = 5H 0x81 = 129mm 0x49 = 73cm 0x00 = 0dot 0x00 = 0H 0b1 = Interlace 0b0 = Normal display, no stereo 0x3 = Digital Separate 0b0 = Vertical Polarity negative

	sync signal description3	0b0 = Horizontal Polarity negative
6B-5A	[Monitor Descriptor Description #1]	
5B-5A	FLAG	0x00 = Monitor Descriptor
5C	Reserved	0x00
5D	Data Type Tag	0xFC = Monitor name, stored as ASCII
5E	Reserved	0x00
6B-5F	Monitor Name	0x56412D31383039 = VA-1809
7D-6C	[Monitor Descriptor Description #2]	
6D-6C	FLAG	0x00 = Monitor Descriptor
6E	Reserved	0x00
6F	Data Type Tag	0xFD = Monitor range limits, binary coded
70	Reserved	0x00
71	Min. Vertical rate	0x17 = 23Hz
72	Max. Vertical rate	0x3D = 61Hz
73	Min. Horizontal	0x0F = 15kHz
74	Max. Horizontal	0x2E = 46kHz
75	Max. Supported Pixel Clock	0x0F = 150MHz
76	Secondary timing formula support	0x00 = No secondary timing formula supported
77		0x0A
7D-78		0x202020202020
7E	Extension FLAG	0x01 = 1
7F	Check Sum	0x4C
80	Extended Block Type	0x02 = CEA861B
81	Revision Number	0x03 = ver.3
82	Detailed Timing Blocks start at Byte	0x20
83	[DTV Monitor Support]	0x71
	under scan	0b0 = not support
	Basic Audio	0b1 = support
	YCbCr4:4:4	0b1 = support
	YCbCr4:2:2	0b1 = support
	total number of native formats	0b1 = 1
84	[Video Short Description]	0x49
	Tag Code	0x02 = Video Short Description
	Length	0x09
85	Video Code/Native Format	0x82 = [2] = 720×480p / Native Format
86		0x05 = [5] = 1920×1080i
87		0x04 = [4] = 1280×720p
88		0x01 = [1] = 640×480p
89		0x10 = [16] = 1920×1080p
8A		0x11 = [17] = 720×576p
8B		0x14 = [20] = 1920×1080i
8C		0x13 = [19] = 1280×720p
8D		0x1F = [31] = 1920×1080p
8E	[Audio Short Block Description1]	0x26
	Tag Code	0x01 = Audio Short Block Description
	Length	0x06
8F		0x0F
	Audio Format Code#1	0x01 = Linier PCM
	Max Number of Audio#1	0x7 = 8ch
90	Supported Sampling Frequency#1	0x1F = 32,44.1,48,88.2,96kHz

91 92	Supported Bit Size#1  Audio Format Code#2 Max Number of Audio#2	0x07 = 16,20,24bit 0x09 0x01 = Linier PCM 0x01 = 2ch
93 94	Supported Sampling Frequency#2 Supported Bit Size#2	0x7F = 32,44.1,48,88.2,96,176,192kHz 0x07 = 16,20,24bit
95  96 98-97	[Speaker Allocation Data Block] Tag Code Length Speaker Reserved	0x83 0x04 = Speaker Allocation Data Block 0x03 0x2F = FLC/FRC,RL/RR,FC,LFE,FL/FR 0x0000
99  9C-9A 9E-9D 9F	[Vendor Specific Data Block] Tag Code Length 24-bit IEEE Registration Identifier Physical Address Support_AI	0x66 0x03 = Vendor Specific Data Block 0x06 0x000C03 0x1000 = 1.0.0.0 01b = Support
A0 A1-A0 A4-A2  A7-A5  AB-A8   AE-AC  AF B0 B1	[Detailed Timing Description 1] Pixel Clock Horizontal Active Pixels Horizontal Blanking Pixels Vertical Acrive Lines Vertical Blanking Lines Horizontal sync offset Horizontal sync pulse width Vert sync offset Vert sync pulse width Horizontal Image Size Vertical Image Size Horizontal Border Vertical Border Interlace Stereo Mode sync signal description1 sync signal description2 sync signal description3	0x1D01 = 74.25MHz 0x500 = 1280dot 0x172 = 370dot 0x2D0 = 720H 0x1E = 30H 0x6E = 110dot 0x28 = 40dot 0x5 = 5H 0x5 = 5H 0x81 = 129mm 0x49 = 73mm 0x00 = 0dot 0x00 = 0H 0x00 = non-Interlace 0x0 = Normal display, no stereo 0x3 = Digital Separate 0x1 = Vertical Polarity positive 0x01 = Horizontal Polarity positive
B3-B2 B6-B4  B9-B7  BD-BA   C0-BE  C1 C2 C3	[Detailed Timing Description 2] Pixel Clock Horizontal Active Pixels Horizontal Blanking Pixels Vertical Acrive Lines Vertical Blanking Lines Horizontal sync offset Horizontal sync pulse width Vert sync offset Vert sync pulse width Horizontal Image Size Vertical Image Size Horizontal Border Vertical Border Interlace	0x09D6 = 25.18MHz 0x280 = 640dot 0xA0 = 160dot 0x1E0 = 480H 0x2D = 45H 0x10 = 16dot 0x60 = 96dot 0x0A = 10H 0x2 = 2H 0x81 = 129mm 0x60 = 96mm 0x08 = 8dot 0x08 = 8H 0x00 = non-Interlace

	<p>Stereo Mode  sync signal description1  sync signal description2  sync signal description3</p>	<p>0x0 = Normal display, no stereo  0x3 = Digital Separate  0x0= Vertical Polarity negative  0x0 = Horizontal Polarity negative</p>
<p>C5-C4  C8-C6  CB-C9  CF-CC  D2-D0  D3  D4  D5</p>	<p>[Detailed Timing Description 3]  Pixel Clock  Horizontal Active Pixels  Horizontal Blanking Pixels  Vertical Acrive Lines  Vertical Blanking Lines  Horizontal sync offset  Horizontal sync pulse width  Vert sync offset  Vert sync pulse width  Horizontal Image Size  Vertical Image Size  Horizontal Border  Vertical Border  Interlace  Stereo Mode  sync signal description1  sync signal description2  sync signal description3</p>	<p>0x0A8C = 27.00MHz  0x2D0 = 720dot  0x90 = 144dot  0x240 = 576H  0x31 = 49H  0x0C = 12dot  0x40 = 64dot  0x5 = 5H  0x5 = 5H  0x81 = 129mm  0x60 = 96mm  0x00 = 0dot  0x00 = 0H  0x0 = non-Interlace  0x0 = Normal display, no stereo  0x3 = Digital Separate  0x0= Vertical Polarity negative  0x0 = Horizontal Polarity negative</p>
<p>D7-D6  DA-D8  DD-DB  E1-DE  E4-E2  E5  E6  E7</p>	<p>[Detailed Timing Description 4]  Pixel Clock  Horizontal Active Pixels  Horizontal Blanking Pixels  Vertical Acrive Lines  Vertical Blanking Lines  Horizontal sync offset  Horizontal sync pulse width  Vert sync offset  Vert sync pulse width  Horizontal Image Size  Vertical Image Size  Horizontal Border  Vertical Border  Interlace  Stereo Mode  sync signal description1  sync signal description2  sync signal description3</p>	<p>0x1D01 = 74.25MHz  0x780 = 1920dot  0x2D0 = 720dot  0x21C = 540H  0x16 = 22H  0x210 = 528dot  0x2C = 44dot  0x2 = 2H  0x5 = 5H  0x81 = 129mm  0x49 = 73mm  0x00 = 0dot  0x00 = 0H  0x1 = Interlace  0x0 = Normal display, no stereo  0x3 = Digital Separate  0x1= Vertical Polarity positive  0x1 = Horizontal Polarity positive</p>
<p>E9-E8  EC-EA  EF-ED  F3-F0</p>	<p>[Detailed Timing Description 5]  Pixel Clock  Horizontal Active Pixels  Horizontal Blanking Pixels  Vertical Acrive Lines  Vertical Blanking Lines  Horizontal sync offset  Horizontal sync pulse width</p>	<p>0x1D01 = 74.25MHz  0x500 = 12800dot  0x2BC = 700dot  0x2D0 = 720H  0x1E = 30H  0x1B8 = 440dot  0x28 = 40dot</p>

F6-F4	Vert sync offset	0x5 = 5H
	Vert sync pulse width	0x5 = 5H
	Horizontal Image Size	0x81 = 129mm
	Vertical Image Size	0x49 = 73mm
F7	Horizontal Border	0x00 = 0dot
F8	Vertical Border	0x00 = 0H
F9	Interlace	0x0 = non-Interlace
	Stereo Mode	0x0 = Normal display, no stereo
	sync signal description1	0x3 = Digital Separate
	sync signal description2	0x1= Vertical Polarity positive
	sync signal description3	0x1 = Horizontal Polarity positive
FF	Check sum	0x21

## 8.1.2 SAMPLE2

### (1) SINK

```
rx_mode=repeater
hdmi_mode=hdmi
hdcp_on=on
ddc_speed=100
```

### (2) EDID

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	06	8F	07	11	01	00	00	00
10	0C	0F	01	03	80	0C	09	78	0A	1E	AC	98	59	56	85	28
20	29	52	57	00	00	00	01	01	01	01	01	01	01	01	01	01
30	01	01	01	01	01	01	8C	0A	D0	8A	20	E0	2D	10	10	3E
40	96	00	81	60	00	00	00	18	01	1D	80	18	71	1C	16	20
50	58	2C	25	00	81	49	00	00	00	9E	00	00	00	FC	00	56
60	41	2D	31	38	30	39	0A	20	20	20	20	20	00	00	00	FD
70	00	17	3D	0D	2E	0F	00	0A	20	20	20	20	20	20	01	4C
80	02	03	20	71	49	82	05	04	01	10	11	14	13	1F	26	0F
90	1F	07	09	7F	07	83	2F	00	00	66	03	0C	00	10	00	80
A0	01	1D	00	72	51	D0	1E	20	6E	28	55	00	81	49	00	00
B0	00	1E	D6	09	80	A0	20	E0	2D	10	10	60	A2	00	81	60
C0	00	08	08	18	8C	0A	D0	90	20	40	31	20	0C	40	55	00
D0	81	60	00	00	00	18	01	1D	80	D0	72	1C	16	20	10	2C
E0	25	80	81	49	00	00	00	9E	01	1D	00	BC	52	D0	1E	20
F0	B8	28	55	40	81	49	00	00	00	1E	00	00	00	00	00	21

### 8.1.3 SAMPLE3

#### (1) SINK

```
rx_mode=receiver
hdmi_mode=hdmi
hdcv_on=on
ddc_speed=100
```

#### (2) EDID

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	06	8F	07	11	01	00	00	00
10	0C	0F	01	03	80	0C	09	78	0A	1E	AC	98	59	56	85	28
20	29	52	57	00	00	00	01	01	01	01	01	01	01	01	01	01
30	01	01	01	01	01	01	8C	0A	D0	8A	20	E0	2D	10	10	3E
40	96	00	81	60	00	00	00	18	D6	09	80	A0	20	E0	2D	10
50	08	60	22	00	81	60	00	08	08	18	00	00	00	FC	00	56
60	41	2D	31	38	30	39	0A	20	20	20	20	20	00	00	00	FD
70	00	17	3D	0D	2E	0F	00	0A	20	20	20	20	20	20	01	07
80	02	03	1A	71	43	82	01	11	26	0F	1F	07	09	7F	07	83
90	2F	00	00	66	03	0C	00	10	00	80	8C	0A	D0	90	20	40
A0	31	20	0C	40	55	00	81	60	00	00	00	18	00	00	00	00
B0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
D0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
E0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
F0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	B7

## 8.1.4 SAMPLE4

### (1) SINK

```
rx_mode=receiver
hdmi_mode=hdmi
hdcp_on=on
ddc_speed=100
```

### (2) EDID

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	06	8F	07	11	01	00	00	00
10	0C	0F	01	03	80	0C	09	78	0A	1E	AC	98	59	56	85	28
20	29	52	57	00	00	00	01	01	01	01	01	01	01	01	01	01
30	01	01	01	01	01	01	01	1D	80	18	71	1C	16	20	58	2C
40	25	00	81	49	00	00	00	9E	01	1D	00	72	51	D0	1E	20
50	6E	28	55	00	81	49	00	00	00	1E	00	00	00	FC	00	56
60	41	2D	31	38	30	39	0A	20	20	20	20	20	00	00	00	FD
70	00	17	3D	0D	2E	0F	00	0A	20	20	20	20	20	20	01	94
80	02	03	1C	71	45	85	04	14	13	02	26	0F	1F	07	09	7F
90	07	83	2F	00	00	66	03	0C	00	10	00	80	01	1D	80	D0
A0	72	1C	16	20	10	2C	25	80	81	49	00	00	00	9E	01	1D
B0	00	BC	52	D0	1E	20	B8	28	55	40	81	49	00	00	00	1E
C0	8C	0A	D0	8A	20	E0	2D	10	10	3E	96	00	81	60	00	00
D0	00	18	00	00	00	00	00	00	00	00	00	00	00	00	00	00
E0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
F0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	BA



## 8.1.5 SAMPLE5

### (1) SINK

```
rx_mode=receiver
hdmi_mode=hdmi
hdcp_on=on
ddc_speed=100
```

### (2) EDID

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	06	8F	07	11	01	00	00	00
10	0C	0F	01	03	80	0C	09	78	0A	1E	AC	98	59	56	85	28
20	29	52	57	00	00	00	01	01	01	01	01	01	01	01	01	01
30	01	01	01	01	01	01	8C	0A	D0	8A	20	E0	2D	10	10	3E
40	96	00	81	60	00	00	00	18	01	1D	80	18	71	1C	16	20
50	58	2C	25	00	81	49	00	00	00	9E	00	00	00	FC	00	56
60	41	2D	31	38	30	39	0A	20	20	20	20	20	00	00	00	FD
70	00	17	3D	0D	2E	0F	00	0A	20	20	20	20	20	20	01	4C
80	02	03	1D	71	49	82	05	04	01	10	11	14	13	1F	23	09
90	7F	07	83	01	00	00	66	03	0C	00	10	00	80	01	1D	00
A0	72	51	D0	1E	20	6E	28	55	00	81	49	00	00	00	1E	D6
B0	09	80	A0	20	E0	2D	10	10	60	A2	00	81	60	00	08	08
C0	18	8C	0A	D0	90	20	40	31	20	0C	40	55	00	81	60	00
D0	00	00	18	01	1D	80	D0	72	1C	16	20	10	2C	25	80	81
E0	49	00	00	00	9E	01	1D	00	BC	52	D0	1E	20	B8	28	55
F0	40	81	49	00	00	00	1E	00	00	00	00	00	00	00	00	8A

## 8.1.6 SAMPLE6

### (1) SINK

```
rx_mode=receiver
hdmi_mode=hdmi
hdcv_on=on
ddc_speed=100
```

### (2) EDID

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	06	8F	07	11	01	00	00	00
10	0C	0F	01	03	80	0C	09	78	0A	1E	AC	98	59	56	85	28
20	29	52	57	00	00	00	01	01	01	01	01	01	01	01	01	01
30	01	01	01	01	01	01	8C	0A	D0	8A	20	E0	2D	10	10	3E
40	96	00	81	60	00	00	00	18	01	1D	80	18	71	1C	16	20
50	58	2C	25	00	81	49	00	00	00	9E	00	00	00	FC	00	56
60	41	2D	31	38	30	39	0A	20	20	20	20	20	00	00	00	FD
70	00	17	3D	0D	2E	0F	00	0A	20	20	20	20	20	20	01	4C
80	02	03	1D	71	49	82	05	04	01	10	11	14	13	1F	23	0F
90	1F	07	83	2F	00	00	66	03	0C	00	10	00	80	01	1D	00
A0	72	51	D0	1E	20	6E	28	55	00	81	49	00	00	00	1E	D6
B0	09	80	A0	20	E0	2D	10	10	60	A2	00	81	60	00	08	08
C0	18	8C	0A	D0	90	20	40	31	20	0C	40	55	00	81	60	00
D0	00	00	18	01	1D	80	D0	72	1C	16	20	10	2C	25	80	81
E0	49	00	00	00	9E	01	1D	00	BC	52	D0	1E	20	B8	28	55
F0	40	81	49	00	00	00	1E	00	00	00	00	00	00	00	00	B6

## 8.1.7 SAMPLE7

### (1) SINK

```
rx_mode=receiver
hdmi_mode=hdmi
hdcv_on=on
ddc_speed=100
```

### (2) EDID

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	06	8F	07	11	01	00	00	00
10	0C	0F	01	03	80	0C	09	78	0A	1E	AC	98	59	56	85	28
20	29	52	57	00	00	00	01	01	01	01	01	01	01	01	01	01
30	01	01	01	01	01	01	8C	0A	D0	8A	20	E0	2D	10	10	3E
40	96	00	81	60	00	00	00	18	01	1D	80	18	71	1C	16	20
50	58	2C	25	00	81	49	00	00	00	9E	00	00	00	FC	00	56
60	41	2D	31	38	30	39	0A	20	20	20	20	20	00	00	00	FD
70	00	17	3D	0D	2E	0F	00	0A	20	20	20	20	20	20	01	4C
80	02	03	39	71	4D	82	05	04	01	10	11	14	13	1F	06	15
90	03	12	3B	0F	1F	07	09	7F	07	17	1F	00	1F	07	00	27
A0	07	00	2F	07	02	37	1F	02	3F	7F	02	47	7F	02	83	2F
B0	00	00	66	03	0C	00	10	00	80	01	1D	00	72	51	D0	1E
C0	20	6E	28	55	00	81	49	00	00	00	1E	D6	09	80	A0	20
D0	E0	2D	10	10	60	A2	00	81	60	00	08	08	18	8C	0A	D0
E0	90	20	40	31	20	0C	40	55	00	81	60	00	00	00	18	01
F0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	2E

## 8.1.8 SAMPLE8

### (1) SINK

```
rx_mode=repeater
hdmi_mode=hdmi
hdcv_on=on
ddc_speed=100
```

### (2) EDID

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	06	8F	07	11	01	00	00	00
10	0C	0F	01	03	80	0C	09	78	0A	1E	AC	98	59	56	85	28
20	29	52	57	00	00	00	01	01	01	01	01	01	01	01	01	01
30	01	01	01	01	01	01	8C	0A	D0	8A	20	E0	2D	10	10	3E
40	96	00	81	60	00	00	00	18	01	1D	80	18	71	1C	16	20
50	58	2C	25	00	81	49	00	00	00	9E	00	00	00	FC	00	56
60	41	2D	31	38	30	39	0A	20	20	20	20	20	00	00	00	FD
70	00	17	3D	0D	2E	0F	00	0A	20	20	20	20	20	20	01	4C
80	02	03	39	71	4D	82	05	04	01	10	11	14	13	1F	06	15
90	03	12	3B	0F	1F	07	09	60	07	17	1F	00	1F	07	00	27
A0	07	00	2F	07	02	37	14	02	3F	7F	02	47	7F	02	83	2F
B0	00	00	66	03	0C	00	10	00	80	01	1D	00	72	51	D0	1E
C0	20	6E	28	55	00	81	49	00	00	00	1E	D6	09	80	A0	20
D0	E0	2D	10	10	60	A2	00	81	60	00	08	08	18	8C	0A	D0
E0	90	20	40	31	20	0C	40	55	00	81	60	00	00	00	18	01
F0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	2E

### 8.1.9 SAMPLE9

#### (1) SINK

```
rx_mode=receiver
hdmi_mode=dvi
hdcv_on=on
ddc_speed=100
```

#### (2) EDID

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	06	8F	07	11	01	00	00	00
10	0C	0F	01	02	80	0C	09	78	0A	1E	AC	98	59	56	85	28
20	29	52	57	FF	FF	80	81	40	01	01	01	01	01	01	01	01
30	01	01	01	01	01	01	30	2A	00	98	51	00	2A	40	30	70
40	13	00	51	0E	11	00	00	1E	00	00	00	FF	00	43	32	32
50	35	37	31	32	33	0A	20	20	20	20	00	00	00	FD	00	3B
60	3D	1F	40	0B	00	0A	20	20	20	20	20	20	00	00	00	FC
70	00	4C	35	35	37	0A	20	20	20	20	20	20	20	20	00	8A

## 8.1.10 SAMPLE10

### (1) SINK

```
rx_mode=receiver
hdmi_mode=hdmi
hdcv_on=on
ddc_speed=100
```

### (2) EDID

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	06	8F	07	11	01	00	00	00
10	0C	0F	01	03	80	0C	09	78	0A	1E	AC	98	59	56	85	28
20	29	52	57	00	00	00	01	01	01	01	01	01	01	01	01	01
30	01	01	01	01	01	01	8C	0A	D0	8A	20	E0	2D	10	10	3E
40	96	00	81	60	00	00	00	18	01	1D	80	18	71	1C	16	20
50	58	2C	25	00	81	49	00	00	00	9E	00	00	00	FC	00	56
60	41	2D	31	38	30	39	0A	20	20	20	20	20	00	00	00	FD
70	00	17	3D	0D	2E	0F	00	0A	20	20	20	20	20	20	01	4C
80	02	03	1F	71	49	82	05	04	01	10	11	14	13	1F	26	0F
90	1F	07	09	7F	07	83	2F	00	00	65	03	0C	00	10	00	01
A0	1D	00	72	51	D0	1E	20	6E	28	55	00	81	49	00	00	00
B0	1E	D6	09	80	A0	20	E0	2D	10	10	60	A2	00	81	60	00
C0	08	08	18	8C	0A	D0	90	20	40	31	20	0C	40	55	00	81
D0	60	00	00	00	18	01	1D	80	D0	72	1C	16	20	10	2C	25
E0	80	81	49	00	00	00	9E	01	1D	00	BC	52	D0	1E	20	B8
F0	28	55	40	81	49	00	00	00	1E	00	00	00	00	00	00	A3

### 8.1.11 Compliance1

#### (1) SINK

```
rx_mode=receiver
hdmi_mode=dvi
hdcv_on=on
ddc_speed=100
```

#### (2) EDID

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	06	8F	07	11	01	00	00	00
10	0C	0F	01	02	80	0C	09	78	0A	1E	AC	98	59	56	85	28
20	29	52	57	FF	FF	80	81	40	01	01	01	01	01	01	01	01
30	01	01	01	01	01	01	30	2A	00	98	51	00	2A	40	30	70
40	13	00	51	0E	11	00	00	1E	00	00	00	FF	00	43	32	32
50	35	37	31	32	33	0A	20	20	20	20	00	00	00	FD	00	3B
60	3D	1F	40	0B	00	0A	20	20	20	20	20	20	00	00	00	FC
70	00	4C	35	35	37	0A	20	20	20	20	20	20	20	20	00	8A

## 8.1.12 Compliance2

### (1) SINK

```
rx_mode=receiver
hdmi_mode=hdmi
hdcp_on=on
ddc_speed=100
```

### (2) EDID

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	06	8F	07	11	01	00	00	00
10	0C	0F	01	03	80	0C	09	78	0A	1E	AC	98	59	56	85	28
20	29	52	57	00	00	00	01	01	01	01	01	01	01	01	01	01
30	01	01	01	01	01	01	8C	0A	D0	8A	20	E0	2D	10	10	3E
40	96	00	81	60	00	00	00	18	01	1D	80	18	71	1C	16	20
50	58	2C	25	00	81	49	00	00	00	9E	00	00	00	FC	00	56
60	41	2D	31	38	30	39	0A	20	20	20	20	20	00	00	00	FD
70	00	17	3D	0D	2E	0F	00	0A	20	20	20	20	20	20	01	4C
80	02	03	20	71	49	82	05	04	01	10	11	14	13	1F	26	0F
90	1F	07	09	7F	07	83	2F	00	00	66	03	0C	00	10	00	80
A0	01	1D	00	72	51	D0	1E	20	6E	28	55	00	81	49	00	00
B0	00	1E	D6	09	80	A0	20	E0	2D	10	10	60	A2	00	81	60
C0	00	08	08	18	8C	0A	D0	90	20	40	31	20	0C	40	55	00
D0	81	60	00	00	00	18	01	1D	80	D0	72	1C	16	20	10	2C
E0	25	80	81	49	00	00	00	9E	01	1D	00	BC	52	D0	1E	20
F0	B8	28	55	40	81	49	00	00	00	1E	00	00	00	00	00	21



### 8.1.13 Compliance3

#### (1) SINK

```
rx_mode=receiver
hdmi_mode=hdmi
hdcv_on=on
ddc_speed=100
```

#### (2) EDID

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	06	8F	07	11	01	00	00	00
10	0C	0F	01	03	80	0C	09	78	0A	1E	AC	98	59	56	85	28
20	29	52	57	00	00	00	01	01	01	01	01	01	01	01	01	01
30	01	01	01	01	01	01	8C	0A	D0	8A	20	E0	2D	10	10	3E
40	96	00	81	60	00	00	00	18	01	1D	00	72	51	D0	1E	20
50	6E	28	55	00	81	49	00	00	00	9E	00	00	00	FC	00	56
60	41	2D	31	38	30	39	0A	20	20	20	20	20	00	00	00	FD
70	00	17	3D	0D	2E	0F	00	0A	20	20	20	20	20	20	03	92
80	F0	02	02	00	00	00	00	00	00	00	00	00	00	00	00	00
90	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
A0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
B0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
D0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
E0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
F0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	0C
100	02	03	36	71	4A	82	04	05	06	08	0A	0C	0E	10	23	3B
110	0F	1F	07	09	7F	07	17	1F	00	1F	07	00	27	07	00	2F
120	07	02	37	17	02	3F	7F	02	47	7F	02	83	2F	00	00	66
130	03	0C	00	10	00	80	01	1D	80	18	71	1C	16	20	58	2C
140	25	00	81	49	00	00	00	9E	8C	0A	A0	14	51	F0	16	00
150	26	7C	43	00	81	49	00	00	00	98	8C	0A	A0	14	51	F0
160	16	00	26	7C	43	00	81	60	00	00	00	18	18	15	40	28
170	B2	F0	16	00	4C	F8	43	00	81	49	00	00	00	98	00	A3
180	02	03	0F	71	4A	11	13	14	15	17	19	1B	1D	1F	25	8C
190	0A	D0	90	20	40	31	20	0C	40	55	00	81	60	00	00	00
1A0	18	01	1D	00	BC	52	D0	1E	20	B8	28	55	40	81	49	00
1B0	00	00	1E	01	1D	80	D0	72	1C	16	20	10	2C	25	80	81
1C0	49	00	00	00	9E	8C	0A	A0	20	51	20	18	10	18	7E	23
1D0	00	81	60	00	00	00	98	8C	0A	A0	20	51	20	18	10	18
1E0	7E	23	00	81	60	00	00	00	18	18	15	40	40	B2	20	18
1F0	10	30	FC	23	00	81	60	00	00	00	98	00	00	00	00	B4

## 8.1.14 Compliance4

### (1) SINK

rx\_mode=receiver  
 hdmi\_mode=hdmi  
 HDCP\_on=on  
 ddc\_speed=100

### (2) EDID

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	06	8F	07	11	01	00	00	00
10	0C	0F	01	03	80	0C	09	78	0A	1E	AC	98	59	56	85	28
20	29	52	57	00	00	00	01	01	01	01	01	01	01	01	01	01
30	01	01	01	01	01	01	8C	0A	D0	8A	20	E0	2D	10	10	3E
40	96	00	81	60	00	00	00	18	01	1D	80	18	71	1C	16	20
50	58	2C	25	00	81	49	00	00	00	9E	00	00	00	FC	00	56
60	41	2D	31	38	30	39	0A	20	20	20	20	20	00	00	00	FD
70	00	17	3D	0D	2E	0F	00	0A	20	20	20	20	20	20	01	4C
80	02	03	20	41	49	82	05	04	01	10	11	14	13	1F	26	0F
90	1F	07	09	7F	07	83	2F	00	00	66	03	0C	00	10	00	80
A0	01	1D	00	72	51	D0	1E	20	6E	28	55	00	81	49	00	00
B0	00	1E	D6	09	80	A0	20	E0	2D	10	10	60	A2	00	81	60
C0	00	08	08	18	8C	0A	D0	90	20	40	31	20	0C	40	55	00
D0	81	60	00	00	00	18	01	1D	80	D0	72	1C	16	20	10	2C
E0	25	80	81	49	00	00	00	9E	01	1D	00	BC	52	D0	1E	20
F0	B8	28	55	40	81	49	00	00	00	1E	00	00	00	00	00	51

### 8.1.15 Compliance5

#### (1) SINK

```
rx_mode=receiver
hdmi_mode=hdmi
hdcv_on=on
ddc_speed=100
```

#### (2) EDID

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	06	8F	07	11	01	00	00	00
10	0C	0F	01	03	80	0C	09	78	0A	1E	AC	98	59	56	85	28
20	29	52	57	00	00	00	01	01	01	01	01	01	01	01	01	01
30	01	01	01	01	01	01	8C	0A	D0	8A	20	E0	2D	10	10	3E
40	96	00	81	60	00	00	00	18	01	1D	80	18	71	1C	16	20
50	58	2C	25	00	81	49	00	00	00	9E	00	00	00	FC	00	56
60	41	2D	31	38	30	39	0A	20	20	20	20	20	00	00	00	FD
70	00	17	3D	0D	2E	0F	00	0A	20	20	20	20	20	20	01	4C
80	02	03	20	71	49	82	05	04	01	10	11	14	13	1F	26	0F
90	1F	07	09	7F	07	83	2F	00	00	66	03	0C	00	10	00	80
A0	01	1D	00	72	51	D0	1E	20	6E	28	55	00	81	49	00	00
B0	00	1E	D6	09	80	A0	20	E0	2D	10	10	60	A2	00	81	60
C0	00	08	08	18	8C	0A	D0	90	20	40	31	20	0C	40	55	00
D0	81	60	00	00	00	18	01	1D	80	D0	72	1C	16	20	10	2C
E0	25	80	81	49	00	00	00	9E	01	1D	00	BC	52	D0	1E	20
F0	B8	28	55	40	81	49	00	00	00	1E	00	00	00	00	00	21

## 8.1.16 Compliance6

---

(1) **SINK**


rx\_mode=receiver  
hdmi\_mode=dvi  
hdcv\_on=on  
ddc\_speed=100

(2) **EDID**

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	06	8F	07	11	01	00	00	00
10	0C	0F	01	02	80	0C	09	78	0A	1E	AC	98	59	56	85	28
20	29	52	57	FF	FF	80	81	40	01	01	01	01	01	01	01	01
30	01	01	01	01	01	01	30	2A	00	98	51	00	2A	40	30	70
40	13	00	51	0E	11	00	00	1E	00	00	00	FF	00	43	32	32
50	35	37	31	32	33	0A	20	20	20	20	00	00	00	FD	00	3B
60	3D	1F	40	0B	00	0A	20	20	20	20	20	20	00	00	00	FC
70	00	4C	35	35	37	0A	20	20	20	20	20	20	20	20	00	8A

## 8.2. Connector pin layouts

### 8.2.1. HDMI connector

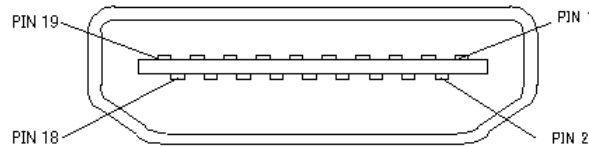


**Pin layout**

**Pin assignment**

Connector pin No.	Input/output signal
1	TMDS DATA2+
2	TMDS DATA2 SHIELD
3	TMDS DATA2-
4	TMDS DATA1+
5	TMDS DATA1 SHIELD
6	TMDS DATA1-
7	TMDS DATA0+
8	TMDS DATA0 SHIELD
9	TMDS DATA0-
10	TMDS CLK+
11	TMDS CLK SHIELD
12	TMDS CLK-
13	CEC
14	RESERVE
15	DDC CLK
16	DDC DATA
17	GROUND (for +5V)
18	+5V POWER
19	HOT PLUG DETECT
Shell	FG

### 8.2.2. RS-232C connector (D-sub 9 pins, male)

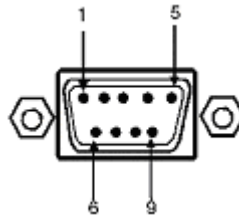


Pin layout

Pin assignment

Pin No.	I/O	Signal
1	-	NC
2	O	TXD (send data)
3	I	RXD (receive data)
4	-	Shorted with pin #6
5	-	FG (frame ground)
6	-	Shorted with pin #4
7	I	CTS (clear to send)
8	O	RTS (request to send)
9	-	NC

### 8.2.3. D-SUB connector

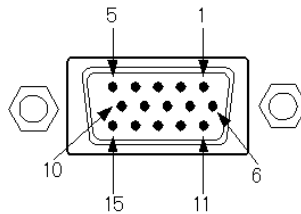

Pin layout

Pin assignment

Pin No.	Signal	Pin No.	Signal
1	R	9	NC
2	G	10	GND
3	B	11	GND
4	NC	12	NC
5	NC	13	HS
6	GND (R)	14	VS
7	GND (G)	15	NC
8	GND (B)		

## 8.3. VA-1809 specifications

### 8.3.1. Specification

Item		Specification	
Restrictions on timing signals (ver.1.1)	Pixel Clock	25 to 150MHz	
	Measurement pixel unit	2-pixel increments	
	Color space	RGB / YCbCr 444, 422	
	Input/output signals	TMDS	
	HDCP	Transmission, reception enabled: Reception Ver.1.1 Transmission Ver 1.0	
	HDMI	Ver 1.2 (SACD is not supported.)	
	Repeater function	Available (Up to 12 units)	
	Generator function	Not available * Signals cannot be output without HDMI input signals.	
	Restrictions on LCD output	H Total Pixels	200 to 2500Pixels But Hsync + H Back Porch $\geq$ H period – 2048 when H Period > 2144 pixels.
		H Active Pixels	128 to 2000 Pixels
H Blanking Pixels		138 Pixels or more	
V Total Lines		200 to 2000 Lines	
V Active Lines		128 to 1320 Lines	
V Sync Lines		4 to 500 Lines	
V Back Porch Lines		1 to (1/2 $\times$ V Total Lines) Lines	
Restrictions on HDMI input/output signals	H Total Pixels	128 to 8195 Pixels	
	H Active Pixels	128 to 4095 Pixels	
	H Blanking Pixels	138 Pixels or more	
	V Total Lines	200 to 4095 Lines	
	V Active Lines	128 to 2047 Lines	
	V Sync Lines	4 to 2047 Lines	
	V Back Porch Lines	1 to (1/2 $\times$ V Total Lines) Lines	
Audio output	Signal format	SPDIF (COAX) output	
	Sampling frequency	Max. 192 kHz, 2 channels (96 kHz, 8 channels)	
DDC		DDC2B supported	
E-EDID		Ver.1.3	
CEA EDID Timing Extension		Ver.3	
EDIDROM size	When power is OFF	256byte (non-rewritable)	
	When power is ON	2kbyte	
VGA output		D-Sub 15 pins, XGA	
LCD output		XGA	

### 8.3.2. Ratings

---

Item	Rating
Supply voltage	AC100 to 120V, AC200 to 240V
Power line frequency	50Hz/60Hz
Power consumption	50VA MAX
Dimensions	210 (W) × 168 (H) × 380 (D) mm (excluding protrusions)
Weight	Approx. 5.0 kg
Operating temperature	+5 to 40°C
Storage temperature	-10 to 60°C
Humidity	30 to 85%RH (no condensation)

### 8.3.3. Restrictions

---

- If the sink data of the VA-1809 is used by setting it to receiver (monitor), no signal is output from the HDMI output and COAX output.
- If the sink data of the VA-1809 is used by setting it to DVI, audio input/output is disabled.
- If HDMI or DVI video is input in HDCP, the VGA output cannot be used.
- If HDMI audio is input in HDCP, the COAX output cannot be used.
- If a unit is not connected to the HDMI output even though the sink data of the VA-1809 is set in the repeater, the receiver is used to execute (only for HDCP).
- If the sink data of the VA-1809 is set in the repeater and a unit that does not support HDCP is connected to the HDMI output, the execution of HDCP cannot be performed normally. (The sequence cannot be advanced due to a DDC line ACK error on the HDMI output side.)
- If a monitor without a physical address is connected to output, the physical address of the VA-1809 main unit does not change.
- If the sink data of the VA-1809 is set in the repeater, up to 12 connections can be used.



## NOTICE

An incorrectly collated manual or a manual with missing pages will be replaced.

All copyrights pertaining to this product are the property of ASTRODESIGN.

This manual may not be copied in whole or in part without written permission.

The contents of this manual are subject to change without prior notice due to improvements.

The manufacturer will not be liable for any effects caused by incorrect operation.

All inquiries concerning this product should be addressed to your dealer or to the manufacturer at the contact numbers given below.

The products and product names mentioned in this manual are the trademarks and registered trademarks of the companies concerned.

T0077B

---

**ASTRODESIGN, Inc.**

URL <http://www.astrodesign.co.jp>

Sales and Marketing Division

TEL: +81 3-5720-5300 FAX: +81 3-5720-6353

2-6-17, Haramachi, Meguro-ku, Tokyo 152-0011 Japan