



**Colour TV
Service Manual**

Model Group: CT-14QD

CHASSIS: 8803

**MODEL:
CT-14QDS1**

CONTENT

| | |
|--|----|
| GENERAL DESCRIPTION..... | 4 |
| CONNECTOR VIEW | 5 |
| SAFETY INSTRUCTIONS | 5 |
| CIRCUIT ADJUSTMENTS..... | 6 |
| FAULT FINDING TREES, DIAGRAMS AND OVERVIEWS..... | 12 |
| VARIOUS PARAMETERS OF INTEGRATED CIRCUIT | 25 |
| THE BUS DATA FOR TMPA8803 | 25 |
| ELECTRICAL PARTS LIST | 28 |
| CIRCUIT DIAGRAM | 37 |

GENERAL DESCRIPTION

AKTP01 /02 chassis series are applied A14T02/A14T02a respectively which uses mainly TOSHIBA' advanced UOC-ultimate chip TMPA8803/8821 and I²C-bus controlled IC With combination of micro controller and small signal processor, the TMPA8803/8821 series feature high-integration, high-performance-to-price ratio and high-reliability and advanced functions with fewer external components, which provide much convenience for manufacturing and technical service.

Figure 1: shows the block diagram of AKTP01 (A14T02).


Table 1: provides A14T02 mainly ICs and functions.

Figure 2: shows the whole set power supply system for AKTP01 (A14T02).

Figure 3: shows the system control circuit of AKTP01 (A14T02).

Table 1: A14T02 mainly ICs and functions

| Position | Type | Function Description |
|----------|-----------------|---|
| N204 | TMPA8803/23/21 | Micro controller and small signal processor (UOC) |
| N901 | ST24C16-W | EEPROM |
| N701 | LA4267 | Sound power amplifier |
| N402 | LA78040 | Vertical scan output stage circuit |
| N203 | LC4053B/CD4053B | AV1/AV2 Switch |

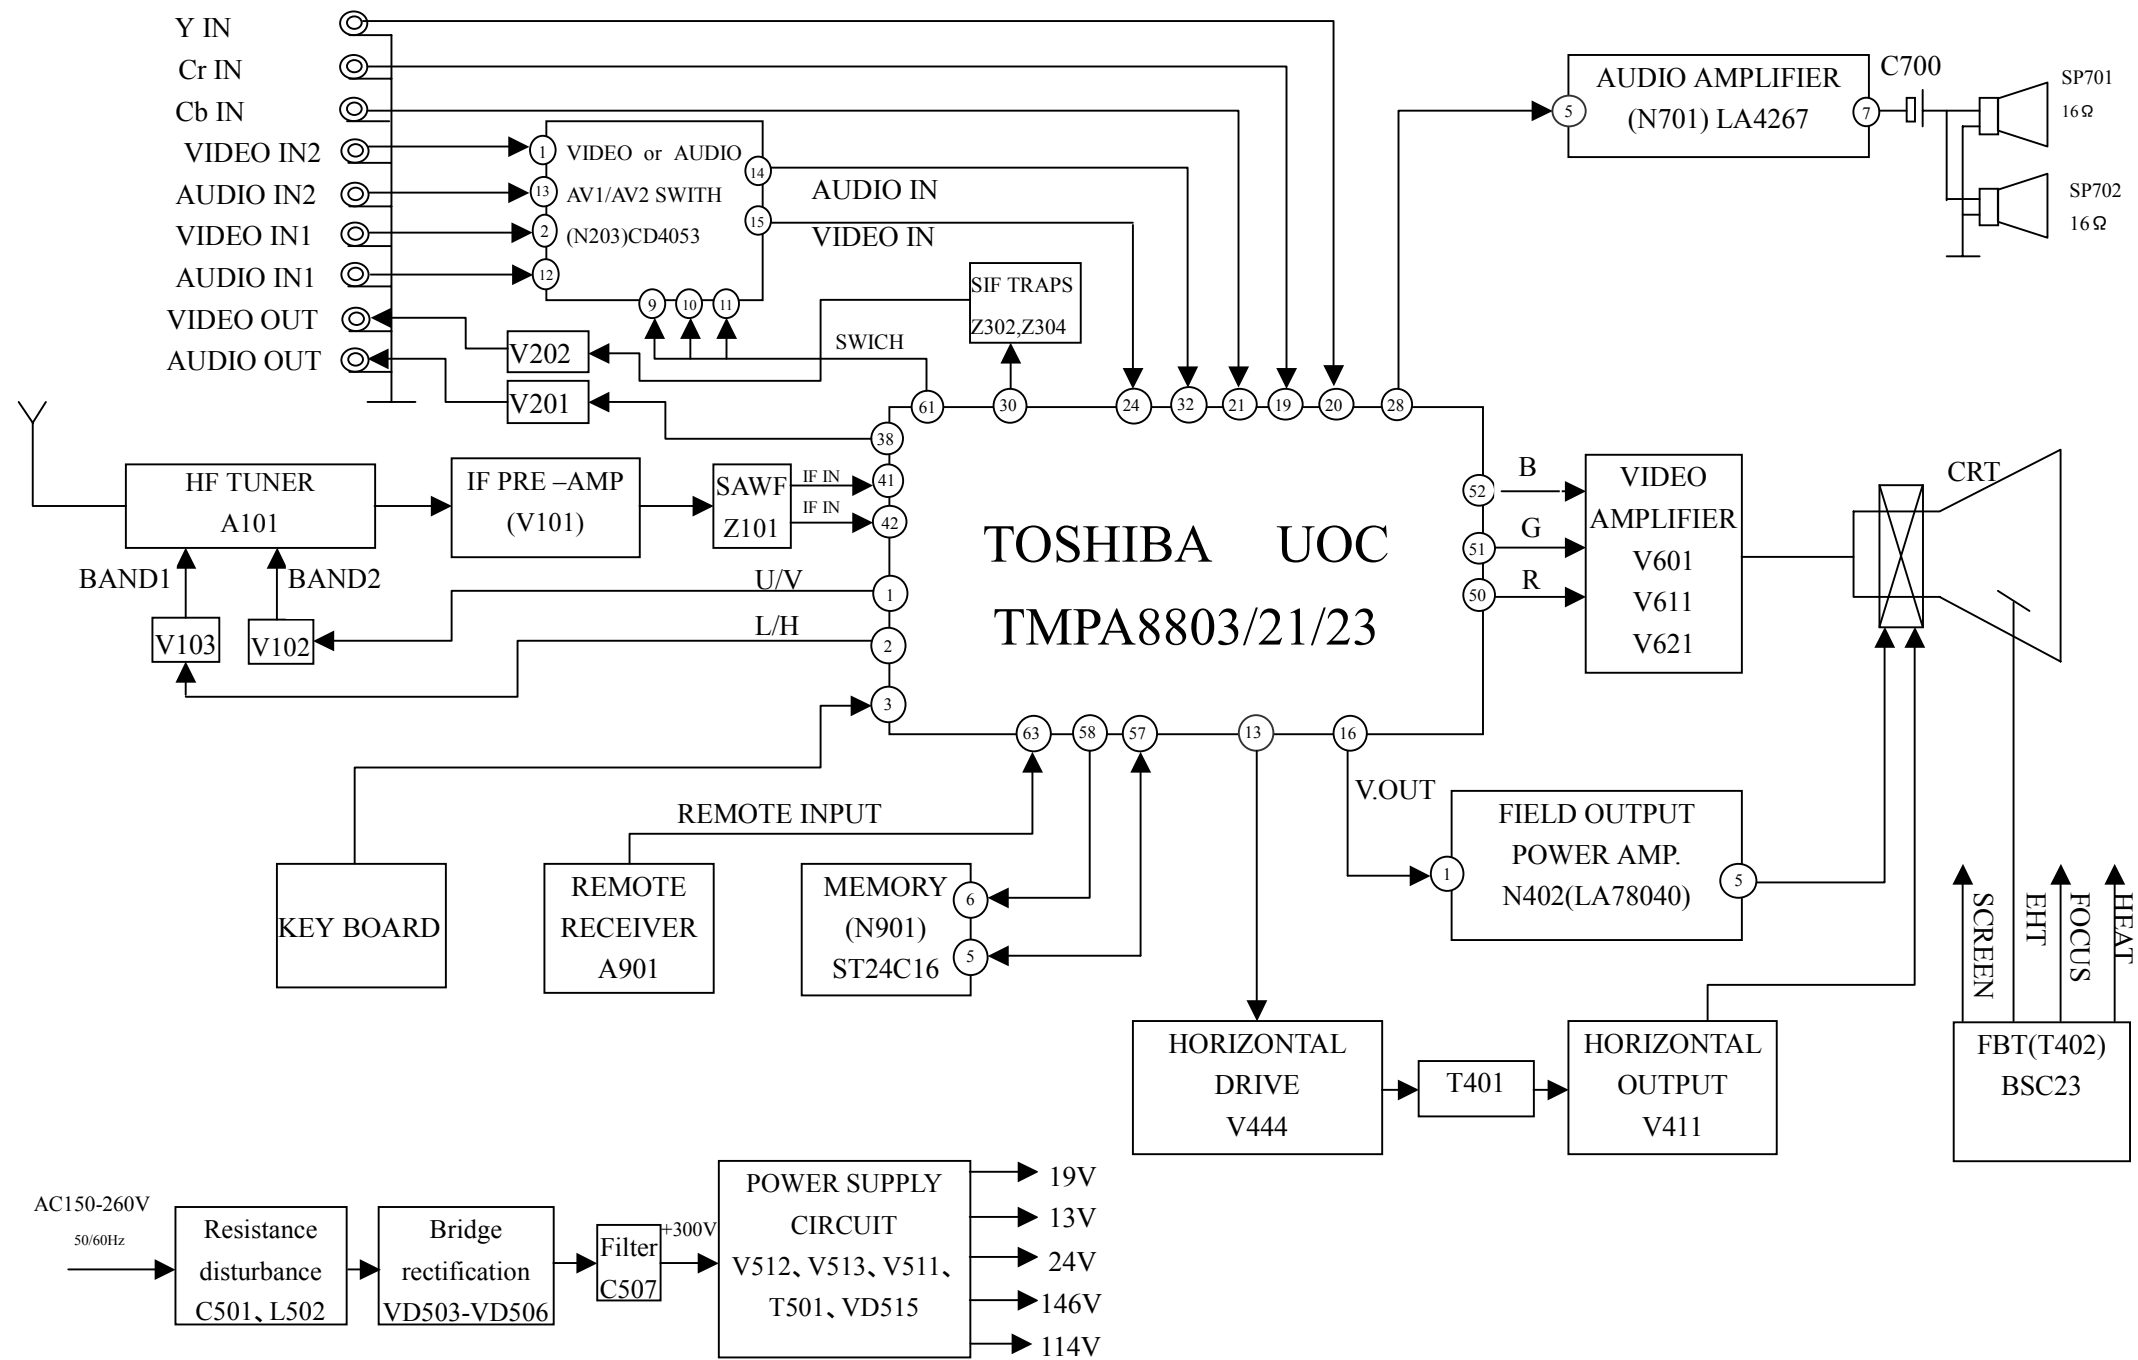

SAFETY INSTRUCTION

WARNING: BEFORE EXAMINING AND SERVICING THIS CHASSIS, READ CAREFULLY THE FOLLOWING SAFETY INSTRUCTIONS.

X-RAY RADIATION PRECAUTION


1. The EHT must be checked every time the receiver is serviced to ensure that the CRT does not emit X-ray radiation as result of excessive EHT voltage. The nominal EHT for this receiver is 22KV at zero beam current (minimum brightness) operating at AC 220V. The maximum EHT voltage permissible in any operating circumstances must not exceed 25KV. When checking the EHT, use the High Voltage Check procedure in this manual using an accurate EHT voltmeter.
2. The only source of X-RAY radiation in this receiver is the CRT. To prevent X-ray radiation, you should use the same type of CRT when replacing it.
3. Some components used in this receiver have safety-related characteristics preventing the CRT from emitting X-ray radiation. For continued safety, replacement component should only be made after referring the Product Safety notice below.

SAFETY PRECAUTION

1. The high voltage in the TV reaches to 22KV when the TV is in operation. Be more careful during opening the back cover.
 - a. The high voltage existing in the TV is very dangerous. Refer servicing to qualified personnel only.
 - b. Before removing the high voltage cap. Discharge the anode of the CRT and the chassis in case of electric shock.
 - c. Wear a pair of goggles when handling the CRT to avoid broken pieces damaging your eyes.
 - d. Do not hold the CRT neck in case of causing damage to the CRT.
2. When the power cord needs replacing, use the same one as that provided by AKIRA factory.
3. Voltage exists between the hot and cold ground when TV is in operation. Install a separation transformer during repairing or connecting to any tester for the sake of safety. The power of the separation transformer should be beyond rated overall power.
4. When replacing a burnout fuse, use the one with the same specifications as the original.
5. When replacing old wire, wind new one round the shaft to weld. When replacing components with safety in performance, use the same type as that specified by AKIRA and install it in the former way.
6. Never place wire near high-temperature or high-voltage components.

SAFETY CAUTIONS FOR PRODUCTS

Many electric and mechanical components in AKTP01 /02 chassis have special safety performances, which are always neglected. Even if replacing them with some components with the same voltage and power, you can not get effective protection to X-ray. In the circuit diagram, these special electric

components are indicated by the special mark  and on the shadow. When replacing any of them, use the one with the same specifications as the original's. Otherwise, it may cause X-ray radiation and damage to overall safety.

CIRCUIT ADJUSTMENTS

GENERAL INFORMATIONS

All adjustment are thoroughly checked and corrected when the receiver leaves the factory. Therefore the receiver should operate normally and produce proper color and B/W pictures upon installation. However, several minor adjustments may be required depending on the particular location in which the receiver is operated.

This receiver is shipped completely in carton. Carefully draw out the receiver from the carton and remove all packing materials. Power cord into a convenient 220 volts 50 Hz AC two pin power outlet. Turn the receiver ON. Check and adjust all the customer controls such as BRIGHTNESS, CONTRAST and COLOUR Controls to obtain natural color or B/W picture.

AUTOMATIC DEGAUSSING

A degaussing coil is mounted around the picture tube so that external degaussing after moving the receiver is normally unnecessary, providing the receiver is properly degaussed upon installation. The degaussing coil operates for about 1 second after the power to the receiver is switched ON. If the set is moved or faced in a different direction, the power switch must be switched off at least 30 minutes in order that the automatic degaussing circuit operates properly. Should the chassis or parts of the cabinet become magnetized to cause poor color purity, use an external-degaussing coil. Slowly move the degaussing coil around the faceplate of the picture tube, the side and front of the receiver and slowly withdraw the coil to a distance of about 2m before disconnecting it from AC source. If color shading still persists, perform the COLOUR PURITY ADJUSTMENT and CONVERGENCE ADJUSTMENTS procedures.

ADJUSTMENT MODE

| | |
|-------------------------|--|
| Item | B+ adjustment, TV signal receiving |
| | AKTP01/02 chassis |
| Measuring Equipment | TV SG (Signal Generator) Digital multi-meter |
| Preparation Before Adj. | The set is turned on Connect the TV SG to RF input terminal of the set. |

ADJUSTMENT PROCEDURE

1. Turn RP551 potentiometer to adjust B+ to specified voltage.
2. Check voltages for video out, vertical out, circuit work and audio power out as follow:-

| | Voltage (volt) | | Tolerance |
|-----------------|----------------|---------|-----------|
| | 14 inch | 21 inch | |
| +B | 114 | 110 | $\pm 2V$ |
| Video Out | 145 | 188 | $\pm 5V$ |
| Vertical Out | 26 | 26 | $\pm 1V$ |
| Circuit Work | 13 | 13 | $\pm 1V$ |
| Audio Power Out | 19 | 19 | $\pm 1V$ |

3. TV signal receiving
 - a. Press MENU key, to select POS.MEMORY item.
Press V+ or V- key, to select SEARCH or AUTOMEMORY item, press P+ key to start searching.
 - b. Press P+ or P- key to inspect the set if there is channel skipped, if so, searching again by SEARCH as above described.

| | |
|-------------------------|---|
| Item | TV system adapting & AV in/output inspection |
| | AKTP01/02 chassis |
| Measuring Equipment | SG (with NTSC3.58). User remote controller Dual trace oscilloscope |
| Preparation before Adj. | Input TV and AV signal |


Inspection procedure

1. Input the TV signal which system is designated in technical specification
2. Switch TV system to the set by pressing SYS key on user remote controller according to the TV system in SG. The picture and sound must be normal.
3. Press TV/AV key, to select AV input. The picture and sound must be normal
4. AV output inspection. Load a 75Ω resistor to VIDEO output terminal, 1Vp-p video output signal that is from TV signal should be observed on the oscilloscope. Load a 10K resistor to AUDIO output terminal, 0.7Vp-p audio output signal that is from TV should be observed on the oscilloscope.

| | |
|-------------------------|--|
| Item | Focus adjustment |
| | AKTP01/02 chassis |
| Measuring Equipment | SG |
| Preparation before Adj. | Brightness, contrast and color should be set in standard |

Adjustment procedure

1. Receive the cross-hatch pattern signal
2. Turn the focus adjusting VR watching the screen and adjust the vertical line of mark to make the most thin. Then the focus adj. VR is set as close low voltage side as possible.
Stop the focus adj. VR at the point that focus is a bit worse at once, turn back to the left and then turn back to the right a little again.

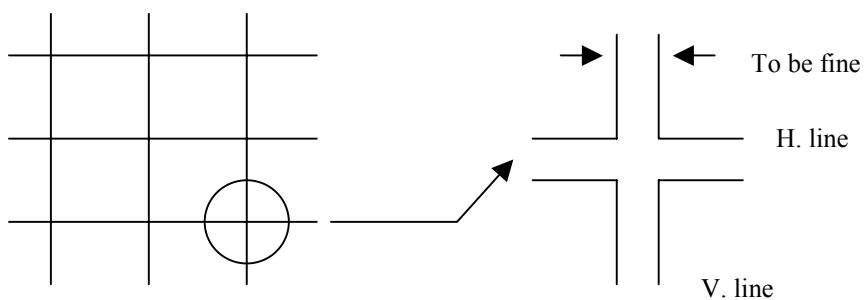

Magnified drawing of part



| | |
|-------------------------|---|
| Item | White balance adjustment |
| | AKTP01/02 chassis |
| Measuring Equipment | SG and white balance meter No.1 service remote controller |
| Preparation before Adj. | Warm up the set for more than 30 min. Brightness, contrast and color should be set in standard |

Adjustment procedure

1. Receive the monoscope pattern signal.
2. Press G (G.DRIVE) key and B (B.DRIVE) key on No.1 service remote controller to select G-DRV and B-DRV respectively, then press + or – key to adjust the white balance at the directed value (which is according to the specification of factory's adjustment)
3. Press R+ or R-, G+ or G- and B+ or B- key respectively to adjust the white balance of low light until the white balance of high and low light is good

| | |
|-------------------------|--|
| Item | RF. AGC adjustment |
| | AKTP01/02 chassis |
| Measuring Equipment | SG and digital multi meter No.5 service remote controller |
| Preparation before Adj. | Connect a digital multi meter to TP101 point on the chassis |

Adjustment procedure

1. Receive the color bar signal that is 87.5% modulation and 60dBu level
2. Press RF AGC key on No.5 service remote controller to select RF. AGC adjustment, press + or – key to adjust the voltage of RF AGC to $6.2 \pm 0.05V$ that is read on the digital multi meter.





| | |
|-------------------------|--|
| Item | Vertical height, linearity and Hor. position adjustment |
| | AKTP01/02 chassis |
| Measuring Equipment | SG No.2 and No.3 service remote controllers |
| Preparation before Adj. | Brightness, contrast and color should be set in standard |

Adjustment procedure

1. Receive the 5-circles pattern signal that is 50HZ vertical frequency
2. Press V-LINE, V-SIZE, V-CENT and H-CENT key on NO.2 service remote controller respectively to select the vertical linearity, height, center (position) and horizontal center (position) adjustment, and then press + or - key to adjust the value of them respectively according to factory's specification.
3. Receive the 5-circles pattern signal that is 60HZ vertical frequency
4. Press V-LINE, V-SIZE, V-CENT and H-CENT key on NO.3 service remote controller separately to adjust the vertical linearity, height, center and horizontal center as above item 3.


| | |
|-------------------------|--|
| Item | OSD position adjustment |
| | AKTP01/02 chassis |
| Measuring Equipment | No.1 and No.5 service remote controller |
| Preparation before Adj. | Brightness, contrast and color should be set in standard |

Adjustment procedure

1. Press D-MODE key on No.1 service remote controller to set the set into design mode adjustment
2. Press  or  key to select OSD item, press  or  key to adjust the OSD to the center position on the screen or press RF AGC key on No.5 service remote controller and press + or - key to adjust the OSD position.
3. Press D-MODE key again to quit design mode adjustment.


| | |
|-------------------------|--------------------------------------|
| Item | The functions of the set inspection |
| | TD46 chassis |
| Measuring Equipment | SG User remote controller and No. |
| Preparation Before Adj. | The set is turned on |

Inspection procedure

1. Receive the Philips pattern signal.
2. Press PIC key on user remote controller to call the menu as adjusting picture quality. Adjust color, brightness, contrast, sharpness and tint (in NTSC) respectively and all adjustment should be right.
3. Press V+ key to increase the sound volume, no distortion heard at maximum level, press V- key to decrease the sound volume, no sound heard at minimum level.
4. Press POWER key to switch the set into standby status, at mean time the manufactory adjustment mode is cancelled.
5. Press POWER key again, the set should work in normal receiving mode.
6. Press  (mute), DISP (display), PP and SLEEP key respectively, the relevant function should be normal.
7. Press S-OUT key on No.5 service remote controller to set default value that stored in E²PROM on the chassis for product shipment.

FAULT FINDING TREE, DIAGRAMS AND OVERVIEW

1. Three-None (no raster, no picture, no sound)
This failure is mainly caused by big-power circuit such as power supply, horizontal scanning, vertical scanning.
The detail checking and repairing steps are as follow.

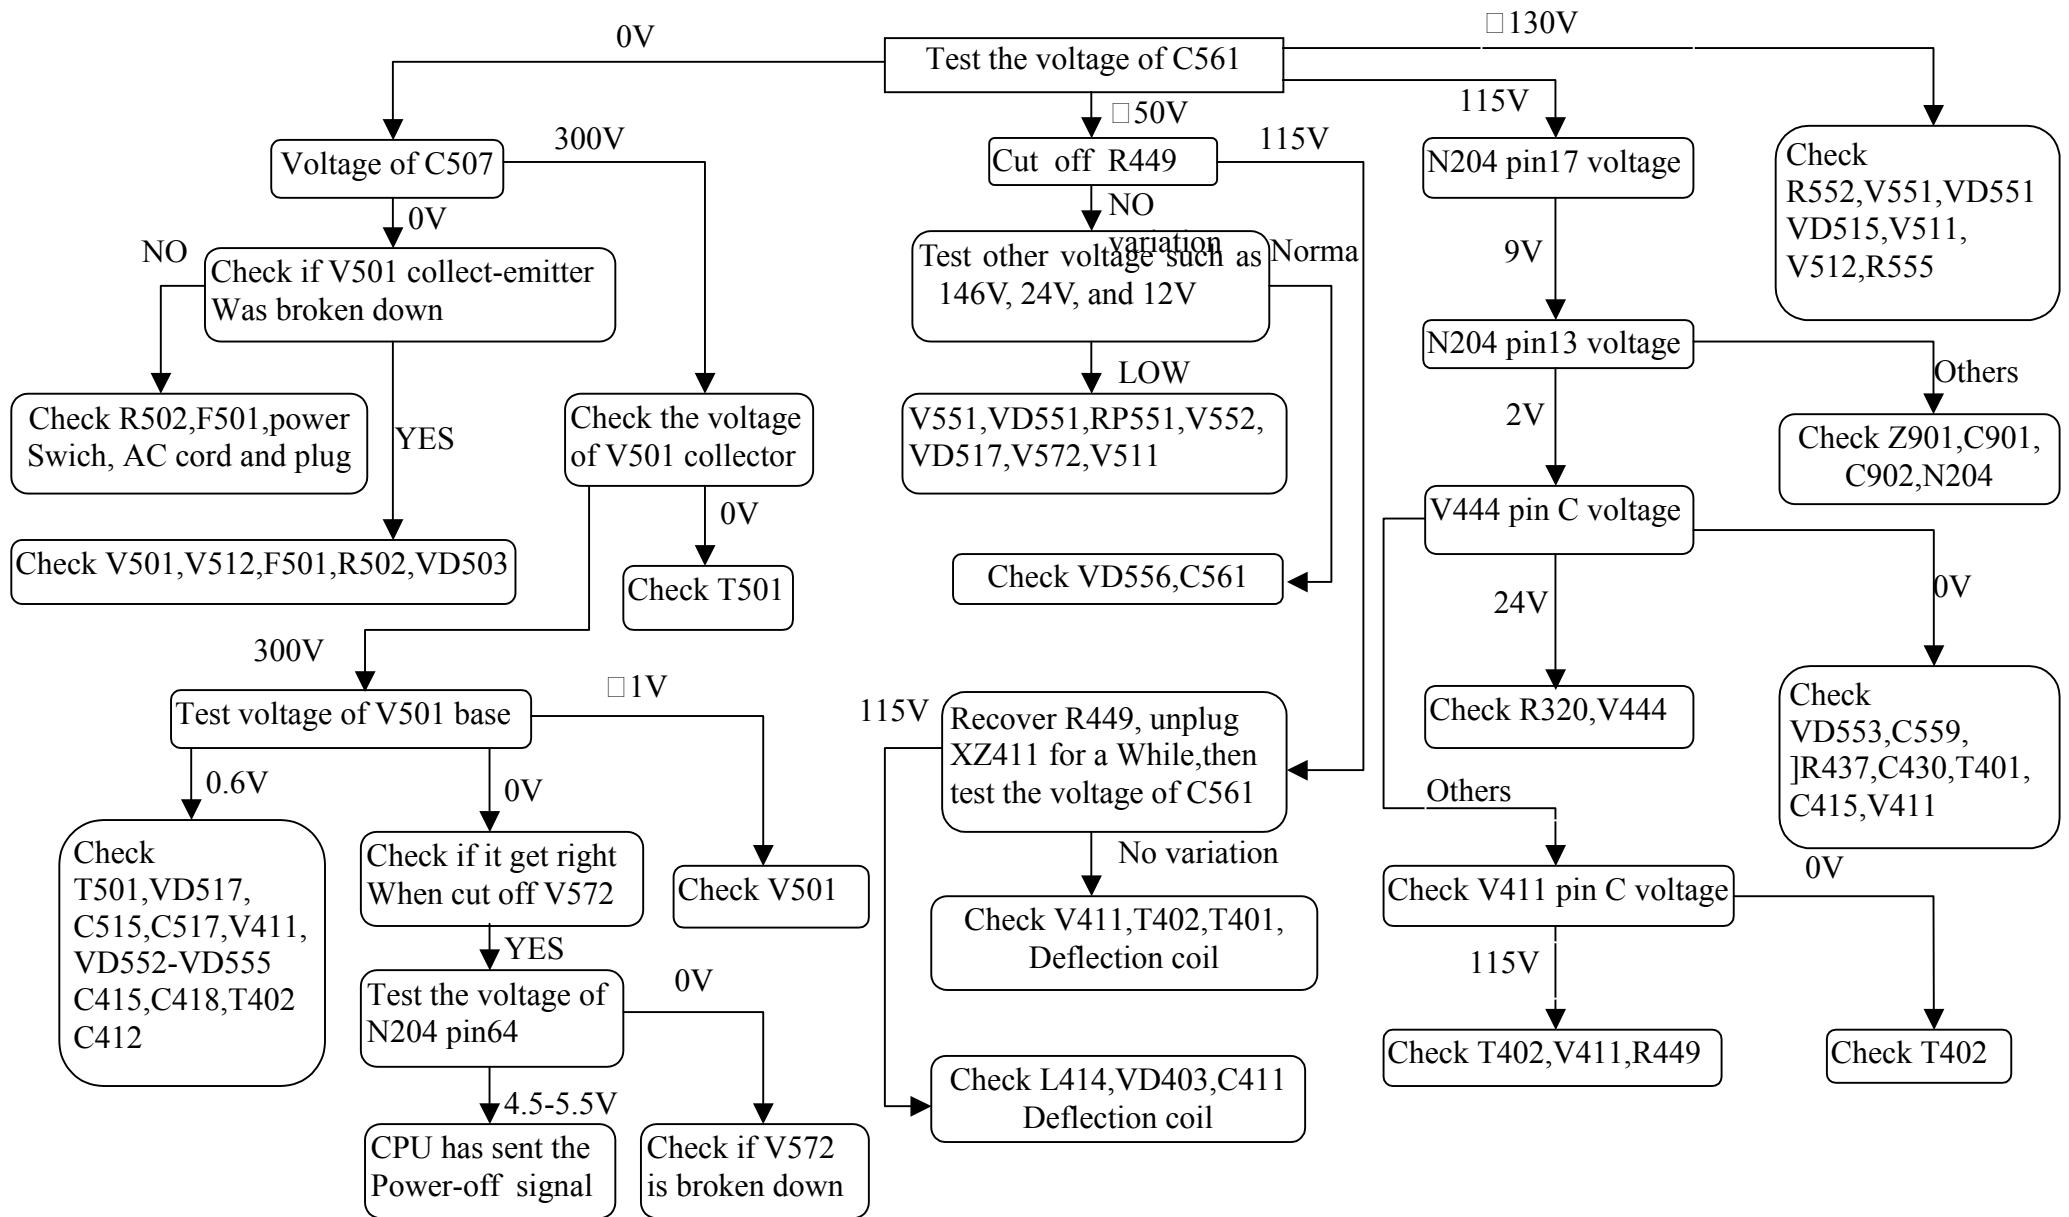


2. B Two-None (no picture, no sound)

The failure shows that the set does not display the picture but it has noise wave or blue background or OSD on the screen. This means that the circuits of power supply, horizontal scanning, vertical scanning and video amplification are normal and they are not considered in the repairing. The failures are mainly in the small signal processing circuits.

Before checking these circuits, a kind of practical test method is introduced. It is called “Signal-input way”. The detail is described as follow: We can use the resistance function of an analog multimeter, connect the red pole (negative in ohm scope) on the circuit board ground, then touch softly the test point with another pole (black pole) in ohm scope meanwhile observe the reactivity on the output device.

Note : In the TV test, we mainly observe the noise wave on the CRT and listen to the noise voice liking as “Ka....Ka” from the loudspeakers.

- a. No picture (see the diagram on next page).

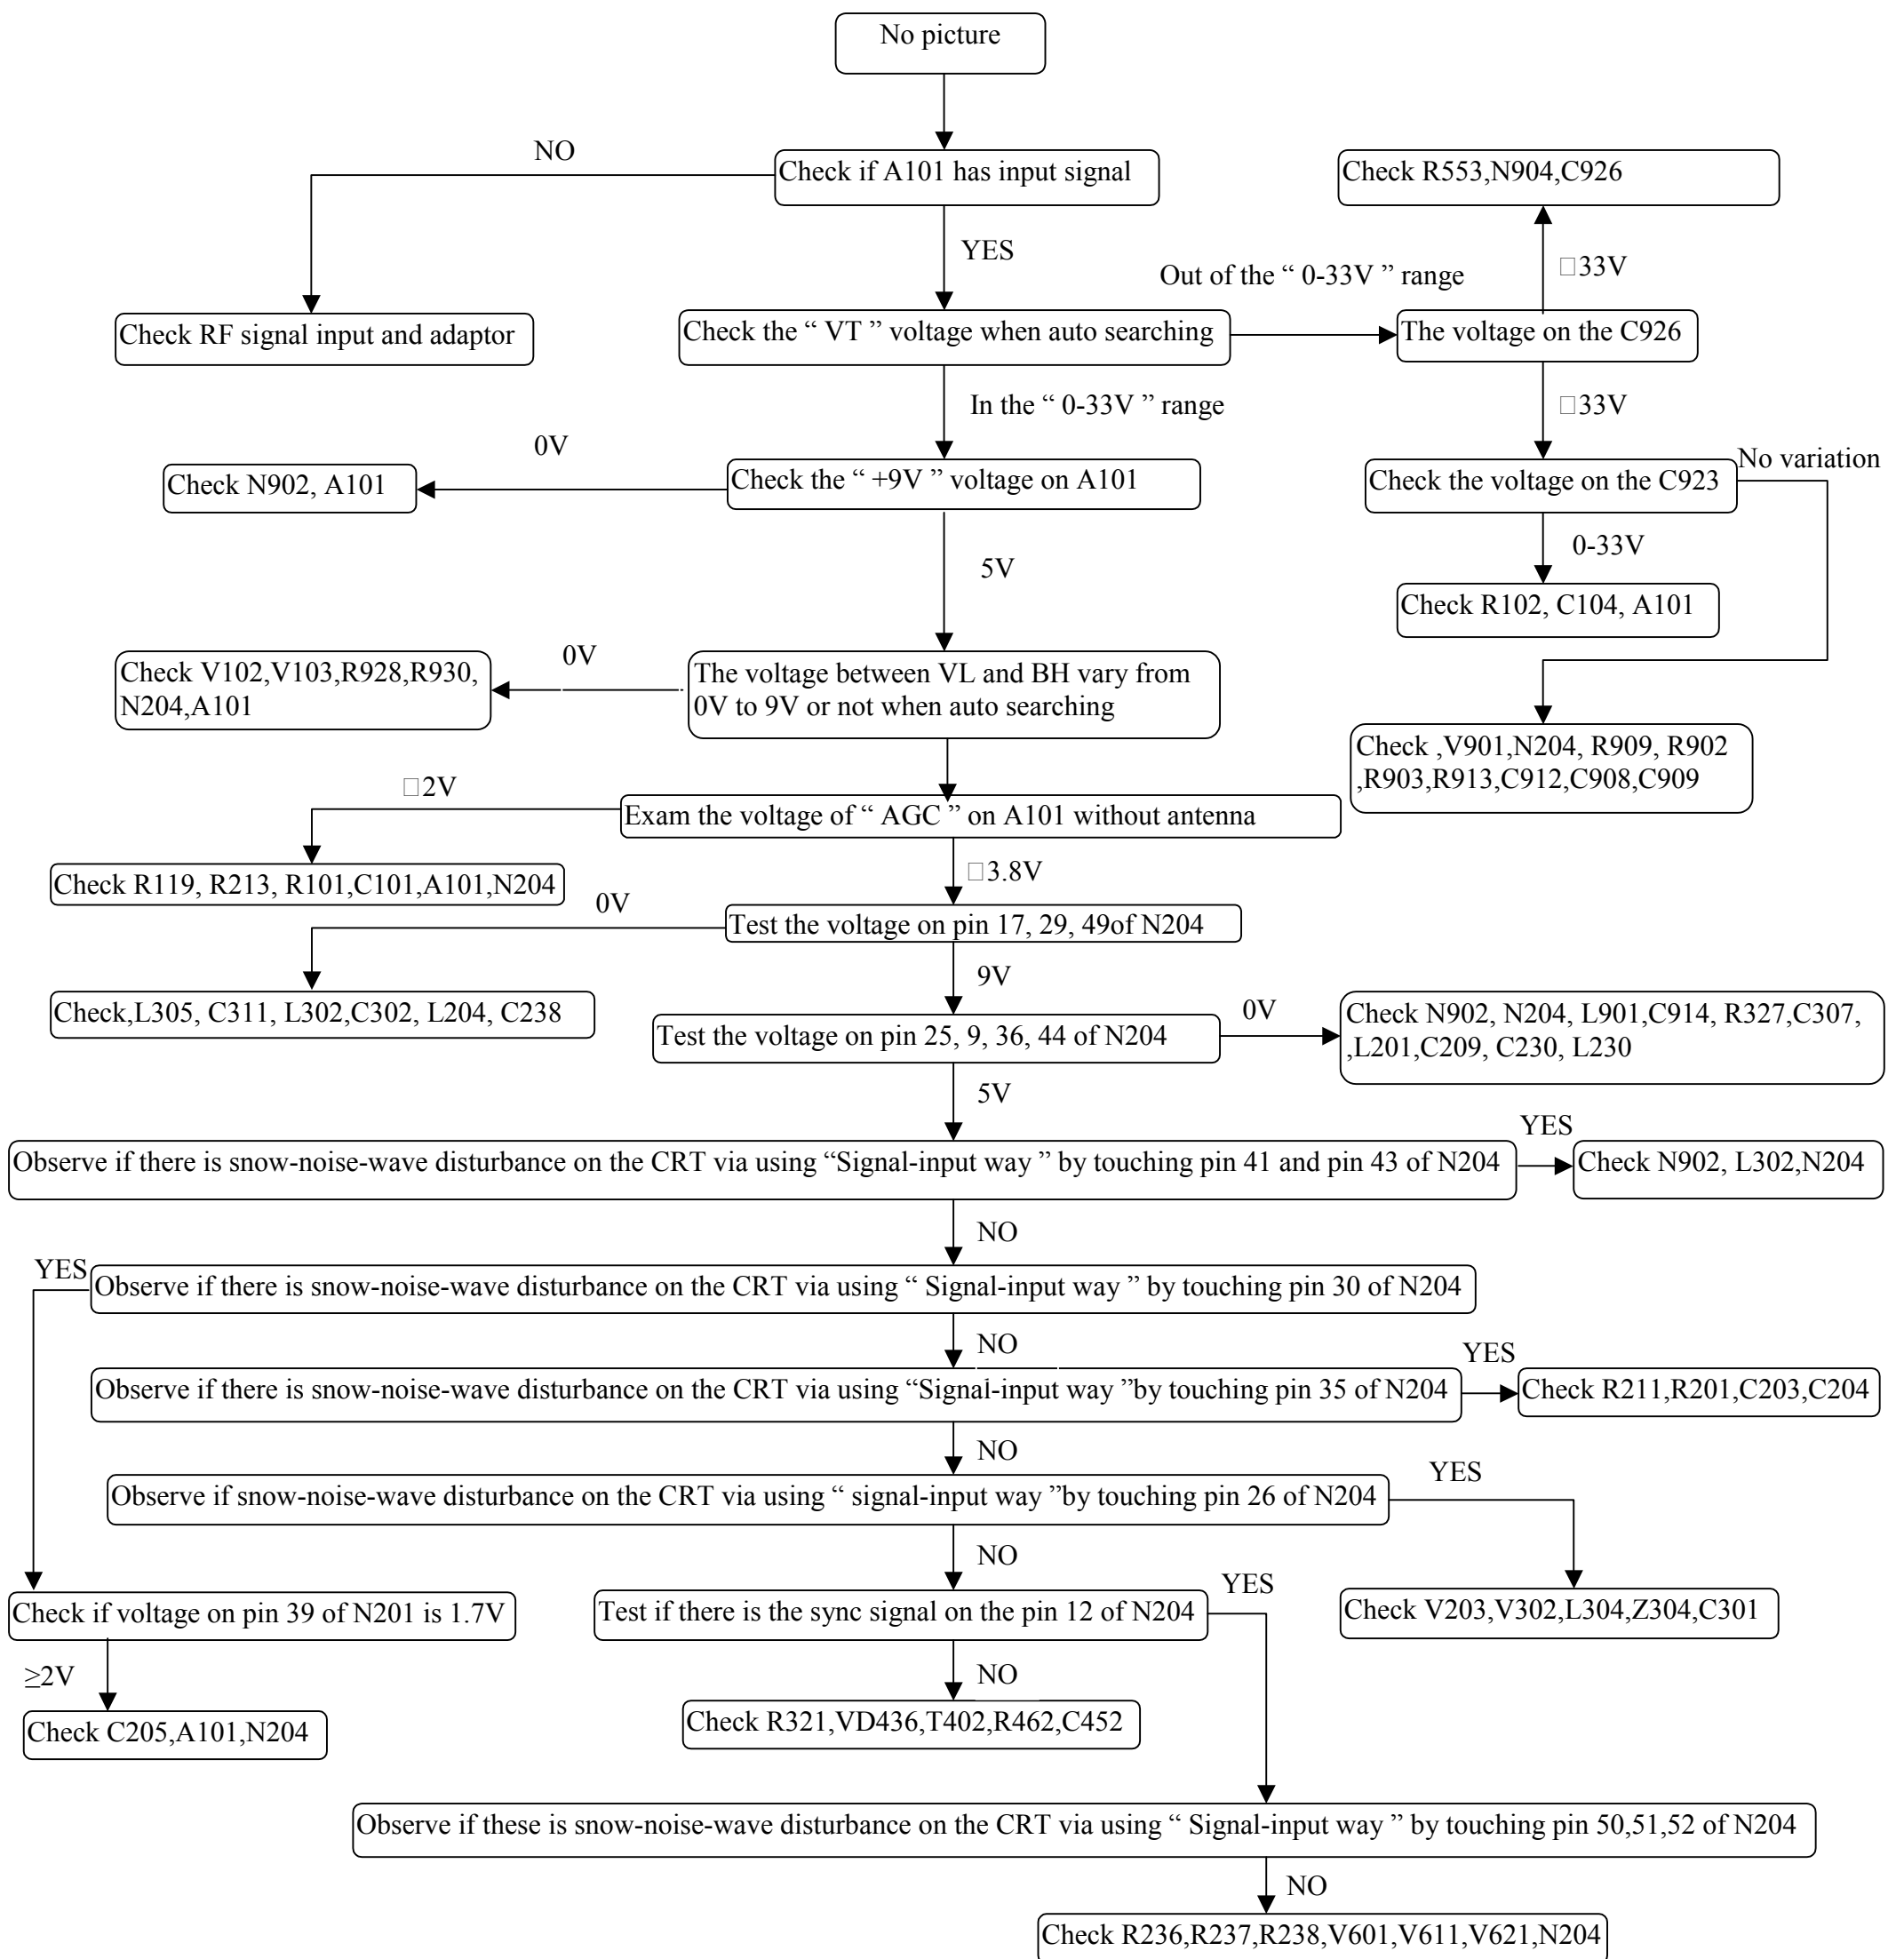


b. No sound

In this kind of failure, first of all we should observe if there is the picture on the CRT. It proves the small signal circuit to work correctly with the picture on the CRT and we only check the sound signal processing and sound amplification circuit. The repairing method (B1) may be referred without picture. The detail checking and repairing steps are as follow.


Note:

Before repairing, assure that the volume is on and the state of set is in "TV". Please see the diagram on next page.

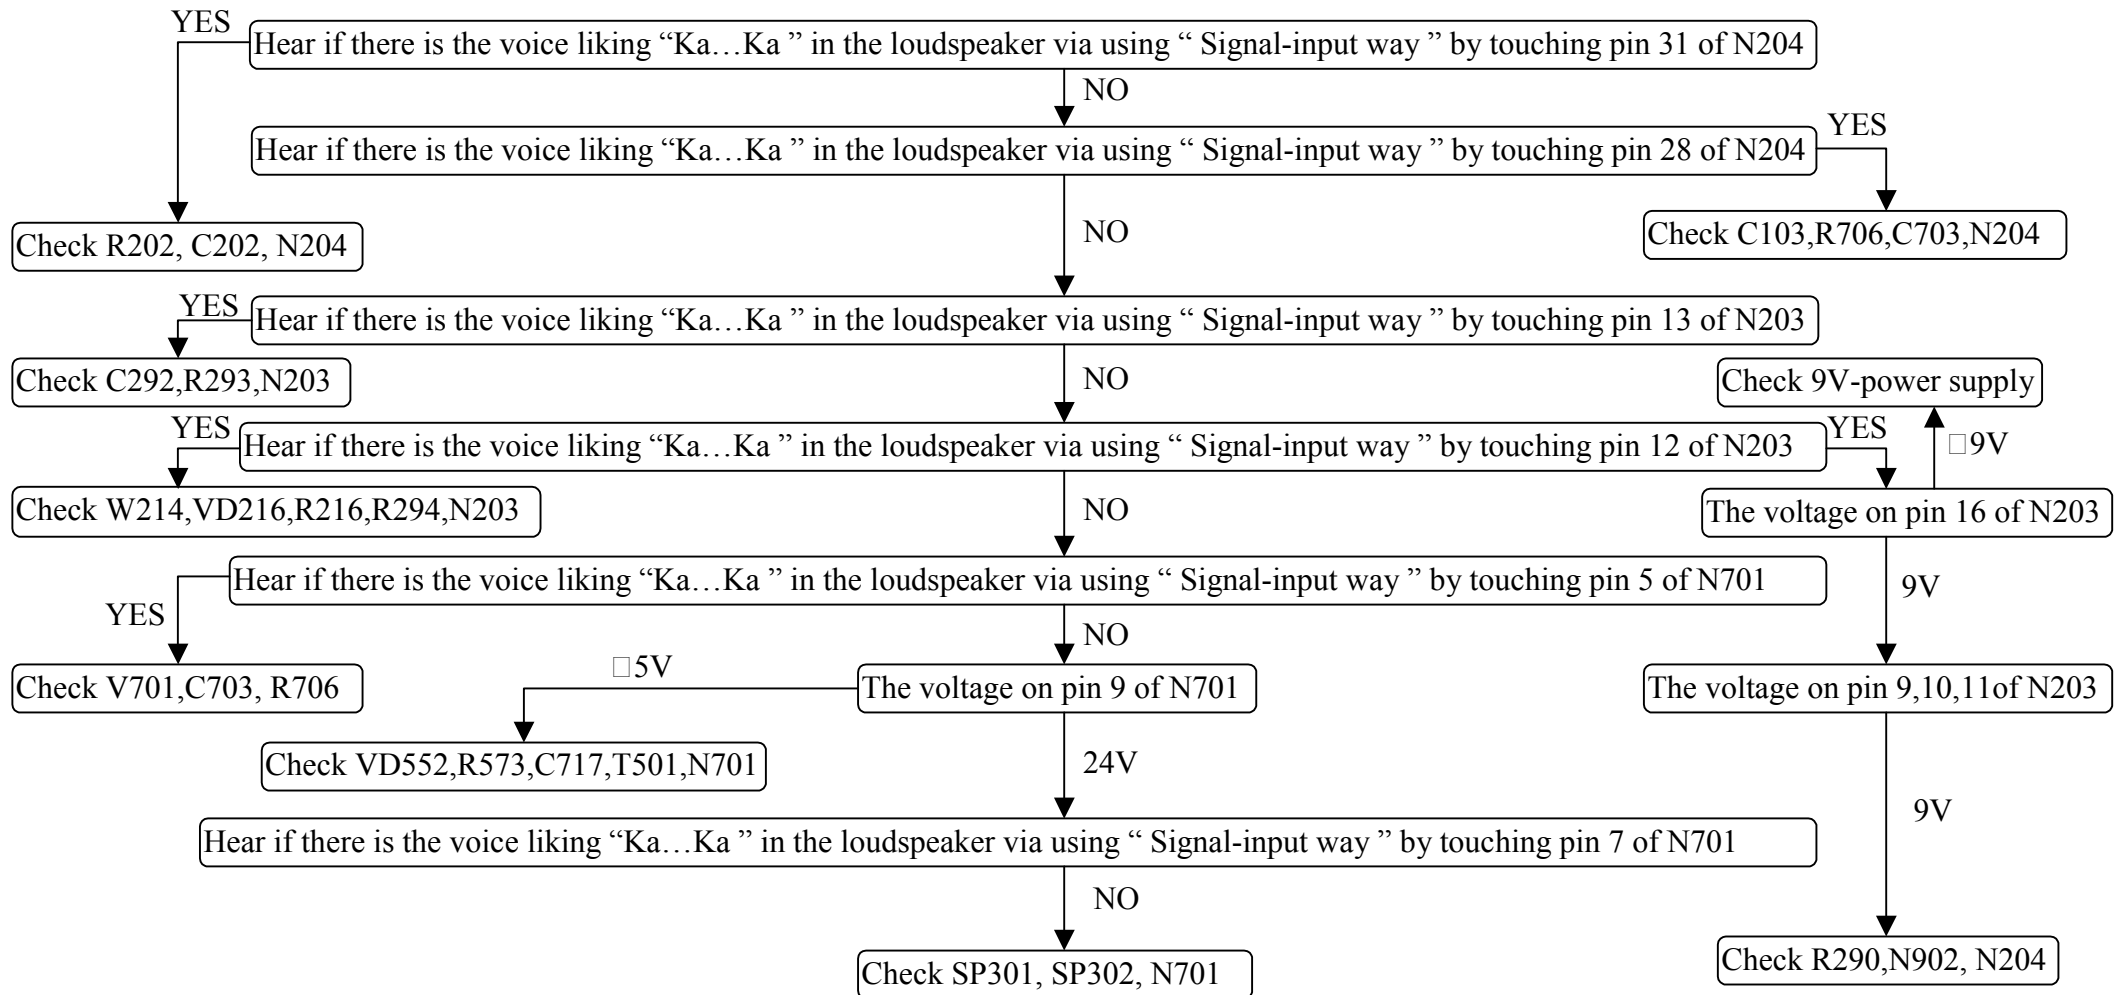


- c. Only horizontal line in the middle of the screen
If vertical deflection circuit does not work, this kind of failure will happen. In deflection yoke, there only has horizontal sweeping, the electron beam in the CRT only moves in the horizontal orientation, so form this failure.
(While checking horizontal and vertical deflection circuit' s failure, we have better to use an oscilloscope.)

Please see the diagram on next page.

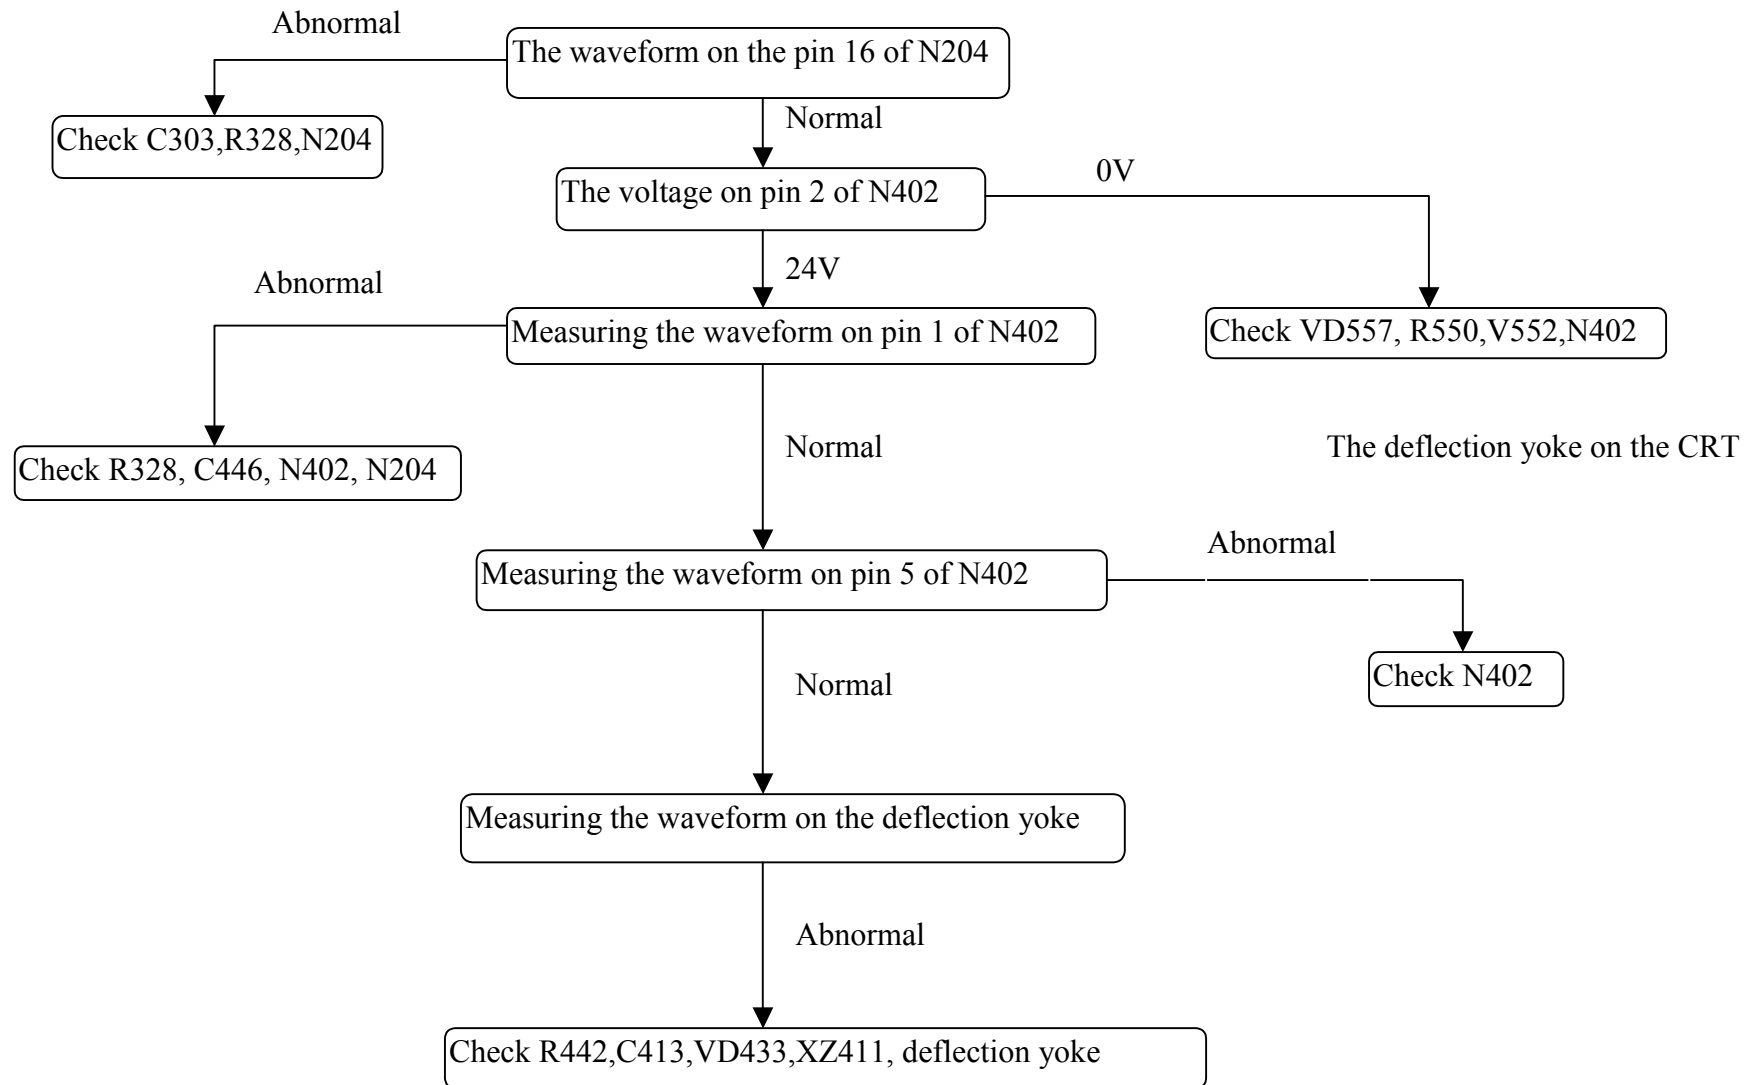


- d. Only vertical line in the middle of the screen
This is a dangerous failure. It probably causes flashover and smoking inside the set. Don't let your TV work for a long time as this failure appears. Because the electron beam can not move in the horizontal orientation, the failure should be in the horizontal deflection circuit. We mainly check the open-circuit fault in horizontal deflection circuit. The detail checking and repairing steps are as follow:

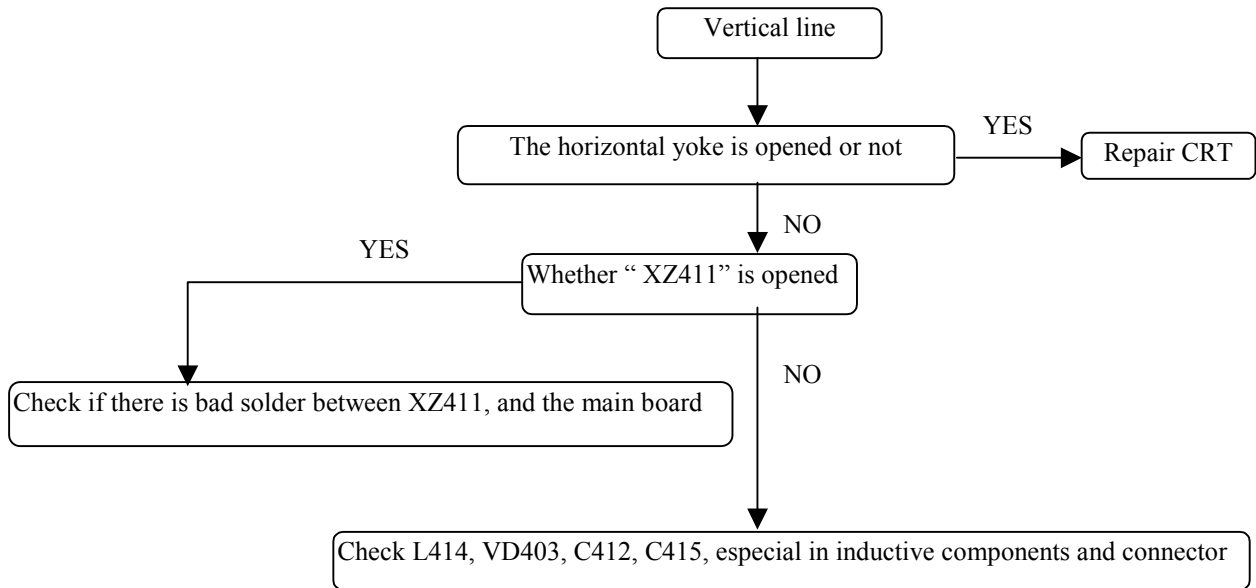

- e. UOC does not work
In television, remote-control system is similar with the computer system. In theory, it can work if it holds two conditions as follow:
- 1) The power supply: In general, it is 5V, the error is not above 10% and the disturbance pulse is as small as possible.
 - 2) The clock pulse: In TMPA88XX circuit, the clock pulse is generated by pin6 / pin7 of N204 and 8M crystal oscillator.


Television's remote-control system also needs reset circuit that can preset the values in internal register. The circuit around pin6 of N204 is called auto-reset circuit. If UOC detects errors in resetting, it will come to the state of programme protected. The detail checking and repairing steps are as follow:

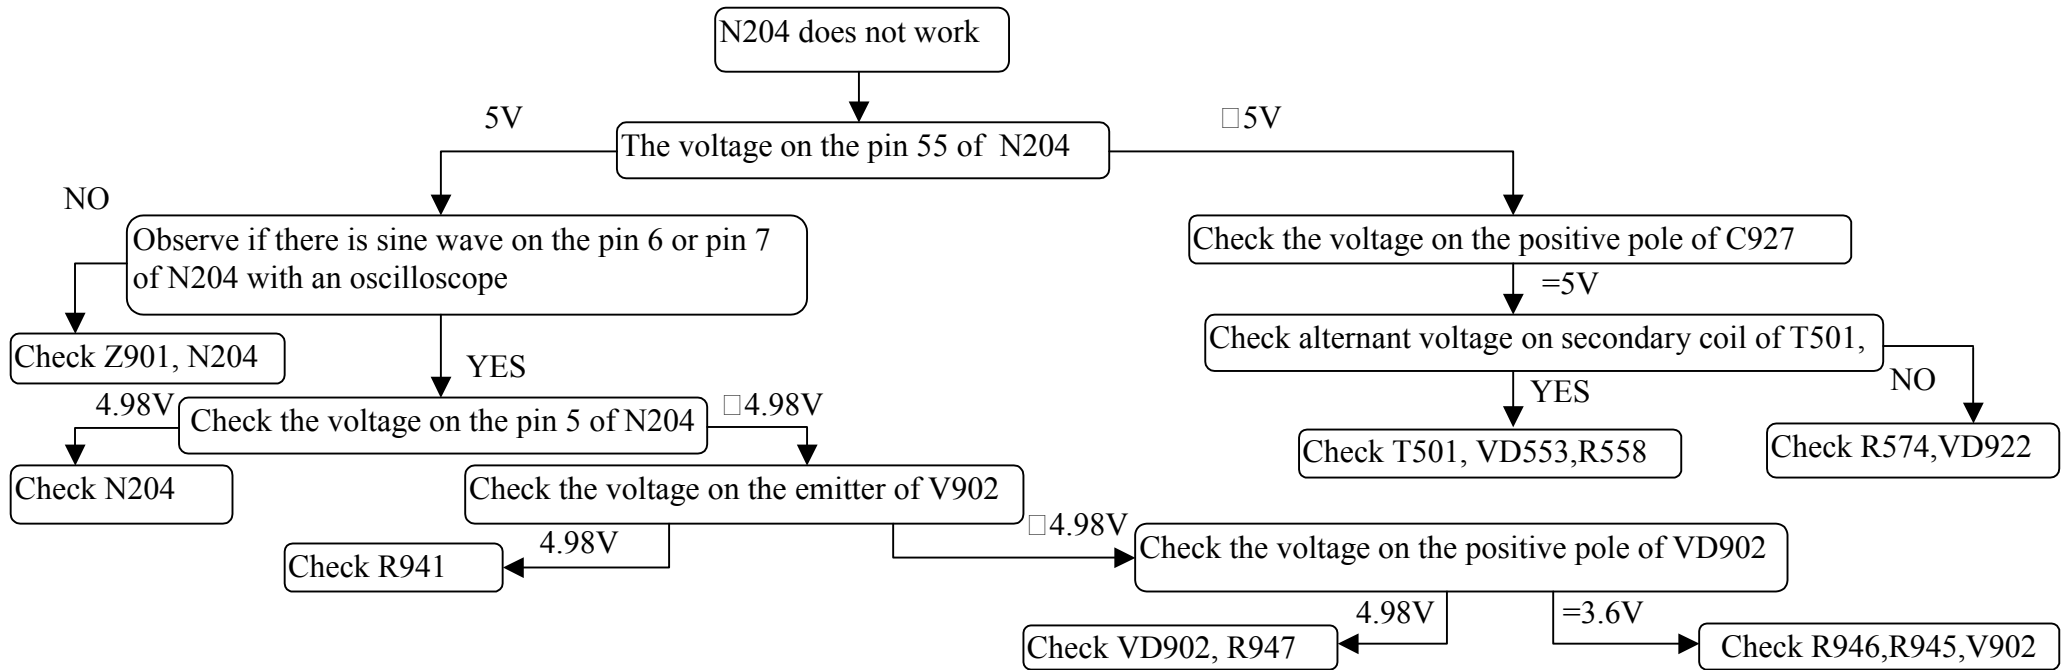

f. No OSD (On Screen Display)

This failure is usually caused by the circuit of character generated and located. Most of the reasons are that the horizontal and vertical flyback pulse signals do not come to UOC.

We can judge this failure by measuring the wave of the character in an oscilloscope. The detail checking and repairing steps are as follows:

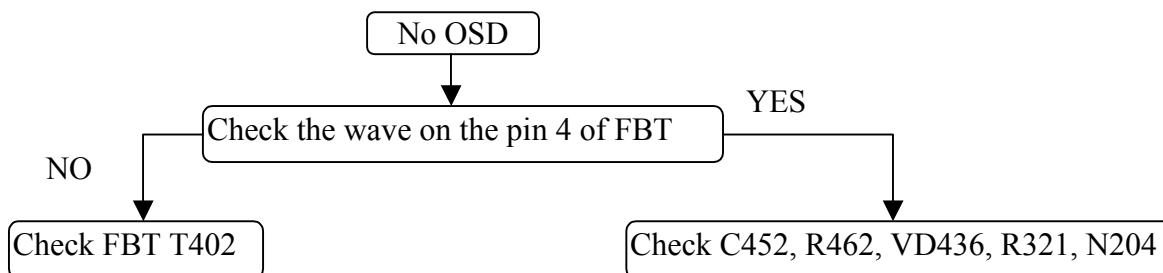

VARIOUS PARAMETERS OF INTEGRATED CIRCUIT

A: Pin functions of N204 (Tmpa8803/23/21)

| Pin | Symbol | I/O | Function |
|-----|------------------|-----|--|
| 1 | BAND1 | Out | BAND data output 1 |
| 2 | BAND2 | Out | BAND data output 2 |
| 3 | KEY | In | Key input |
| 4 | VSS | - | GND connection |
| 5 | RESET | In | Reset signal input |
| 6 | XIN | In | 8 MHz oscillator connecting |
| 7 | XOUT | Out | 8 MHz oscillator connecting |
| 8 | TEST | In | GND connection |
| 9 | VDD | In | 5V power supply |
| 10 | VSS | - | GND connection |
| 11 | VSS | - | GND connection |
| 12 | FBP in | In | Input terminal for FBP |
| 13 | H out | Out | Output terminal for Horizontal driving pulse |
| 14 | HAFC 1 | - | Terminal To be connected capacitor for H AFC filter |
| 15 | V saw | - | Terminal To be connected capacitor to generate V saw signal |
| 16 | V out | Out | Output terminal for Vertical driving pulse |
| 17 | HVcc | - | Vcc terminal for DEF circuit |
| 18 | NC | - | SECAM |
| 19 | Cb in | In | Input terminal for Cb signal |
| 20 | Y in | In | Input terminal for Y signal |
| 21 | Cr in | In | Input terminal for Cr signal |
| 22 | TV GND | - | GND terminal for Digital block |
| 23 | C in | In | Input terminal for Chroma signal |
| 24 | V2 in | In | Input terminal for Video signal |
| 25 | TV DVcc | - | Vcc terminal for Digital block |
| 26 | V1 in | In | Input terminal for Video signal |
| 27 | ABCL | In | Input terminal for ABL/ACL control |
| 28 | AU out | Out | Output terminal for Audio signal |
| 29 | IF Vcc 9V | - | Vcc for terminal for IF Circuit |
| 30 | TV out | Out | Output terminal for detected PIF signal |
| 31 | SIF out | Out | Output terminal for detected SIF signal |
| 32 | Ext AU in | In | Input terminal for External Audio signal |
| 33 | H correct/SIF in | In | Input terminal for H correction and SIF |
| 34 | DC NF | Out | Terminal to be connected capacitor for DC Negative Feedback from SIF Det output |
| 35 | PIF PLL | - | Terminal to be connected with loop filter for PIF PLL. This terminal voltage is controlled PIF VCO frequency. |
| 36 | IF Vcc 5V | - | Vcc terminal for IF circuit. Supply 5V. |
| 37 | Reg Fil | - | Terminal to be connected capacitor for stabilizing internal bias. |
| 38 | Deempha | - | Terminal to be connected capacitor for SIF Det De-Emphasis. |
| 39 | IF AGC | - | Terminal to be connected with IF AGC filter. |
| 40 | IF GND | - | GND terminal for IF circuit. |
| 41 | IF in | In | Input terminals for IF signals. |
| 42 | IF in | In | Input terminals for IF signals. |
| 43 | RF AGC | | Output terminal for RF AGC control level. |
| 44 | TV YC Vcc | - | Vcc terminal for Y/C circuit. Supply 5V. |
| 45 | Monitor out | Out | Output terminal for CVBS or Y signal selected by BUS(Video SW). |

| Pin | Symbol | I/O | Function |
|-----|------------|-----|---|
| 46 | Black Det | - | Terminal to be connected with Black Det filter for black stretch. |
| 47 | Chroma PLL | - | Terminal to be connected with APC filter for chroma demodulation. |
| 48 | IK in | In | Input terminal to sense ACB cathode current. |
| 49 | RGB Vcc | - | Vcc terminal for RGB circuit. Supply 5V. |
| 50 | R out | Out | Output terminal for R signal. |
| 51 | G out | Out | Output terminal for G signal. |
| 52 | B out | Out | Output terminal for B signal. |
| 53 | TV AGND | - | GND terminal for Analog block. |
| 54 | VSS | - | GND connection |
| 55 | VDD | In | 5V power supply |
| 56 | VIDEO1/2 | Out | Video 1 or 2 selection control |
| 57 | SDA1 | I/O | IIC-BUS SDA1 |
| 58 | SCL1 | I/O | IIC-BUS SCL1 |
| 59 | System | Out | System |
| 60 | VT | Out | VT output |
| 61 | MUTE | Out | Mute Output |
| 62 | H.SYNC | In | Horizontal sync signal input |
| 63 | REMOTE | In | Remote controller signal input |
| 64 | POWER | I/O | Power control & Check, On=Hi-Z(input),Off=L(output) |

B: Pin functions of N701 (LA4266/67)

| Pin | Symbol | I/O | Function |
|-----|-----------|-----|--------------|
| 1 | NC | | |
| 2 | NC | | |
| 3 | Filter | | Mute input |
| 4 | PRE GND | | |
| 5 | IN | In | Sound input |
| 6 | NF | | |
| 7 | OUT | Out | Sound output |
| 8 | Power GND | | |
| 9 | VCC | | Power supply |
| 10 | NC | | |

C: Pin functions of N402 (LA78040)

| Pin | Symbol | I/O | Function |
|-----|------------|-----|------------------|
| 1 | V.IN | In | Inverting input |
| 2 | VCC | | Power supply |
| 3 | PUMP UP | | Pump up out |
| 4 | GND | | |
| 5 | V.OUT | Out | Vertical output |
| 6 | VCC2 | | Output stage VCC |
| 7 | NON INV IN | In | Non inv input |

THE BUS DATA FOR TMPA8803

| No | Adjustment Item | Adjustment Function | Type Data |
|----|-----------------|--|-----------|
| 1 | RCUT | Red Dard Balance | 5E |
| 2 | GCUT | Green Dark Balance | 72 |
| 3 | BCUT | Blue Dark Balance | 7D |
| 4 | GDRV | Green light Balance | 3B |
| 5 | BDRV | Blue light Balance | 3E |
| 6 | CNTX | Sub Contrast Max | 7F |
| 7 | BRTC | Sub-bright Centre | 40 |
| 8 | COLC | Sub Color Center(NTSC) | 40 |
| 9 | TNTC | Sub Tint Center | 40 |
| 10 | COLP | Sub Color Center(PAL Difference) | 00 |
| 11 | COLS | Sub Color Center(SECAM) | 40 |
| 12 | SCOL | Sub Color | 07 |
| 13 | SCNT | Sub Contrast | 0B |
| 14 | CNTC | Sub Contrast Center | 50 |
| 15 | CNTN | Sub Contrast min | 08 |
| 16 | BRTX | Sub-bright max(difference) | 35 |
| 17 | BRTN | Sub-bright min(difference) | 25 |
| 18 | COLX | Sub color max(difference) | 3F |
| 19 | COLN | Sub color min | 00 |
| 20 | TNTX | Sub tint max(difference) | 28 |
| 21 | TNTN | Sub tint min(difference) | 28 |
| 22 | ST3 | Sub sharp center(3.58NTSC TV) | 20 |
| 23 | SV3 | Sub sharp center(3.58NTSC AV) | 20 |
| 24 | ST4 | Sub sharp center(OTHER TV) | 20 |
| 25 | SV4 | Sub sharp center(OTHER AV) | 20 |
| 26 | SVD | DVD sharp center | 26 |
| 27 | ASSH | Factory Data | 07 |
| 28 | SHPX | Sub sharpness max(difference) | 38 |
| 29 | SHPN | Sub sharpness min(difference) | 15 |
| 30 | TXCX | Text RGB contrast max | 1F |
| 31 | RGCN | Text RGB contrast min | 1F |
| 32 | ABL | ABL Data | 37 |
| 33 | DCBS | A part of Video data in detail | 33 |
| 34 | CLTO | The data when TV mode&Sound SYS!=M | 0B |
| 35 | CLTM | The data when TV mode&Sound SYS!=M | 4B |
| 36 | CLVO | The data when YUV mode&Sound SYS!=M | 4B |
| 37 | CLVD | The data when YUV mode&Sound SYS!=M | 4B |
| 38 | DEF | A part of DEF COMP data in detail | 01 |
| 39 | AKB | AKB SYSTEM | 00 |
| 40 | SECD | SECAM mode 0:OFF center 1: ON 35kHz | 18 |
| 41 | HPOS | Horizontal center of 50 Hz | 0A |
| 42 | VP50 | Vertical centering of 50 Hz | 06 |
| 43 | HIT | Vertical amplitude of 50 Hz | 2C |
| 44 | HPS | Horizontal centering difference of 60 Hz | 03 |
| 45 | VP60 | Vertical centering difference of 60 Hz | 02 |

| No | Adjustment Item | Adjustment Function | Type Data |
|----|-----------------|---------------------------------------|-----------|
| 46 | HITS | Vertical amplitude deflection of 60Hz | FF |
| 47 | VLIN | Vertical line of 50 Hz | 0B |
| 48 | VSC | Vertical S correction/50 Hz | 07 |
| 49 | VLIS | Vertical line deflection of 60 Hz | 00 |
| 50 | VSS | Vertical S correction/60 Hz | 00 |
| 51 | SBY | SECAM B-Y Black | 08 |
| 52 | SRY | SECAM R-Y Black | 08 |
| 53 | BRTS | Sub bright (difference) | 00 |
| 54 | RAGC | RF AGC | 25 |
| 55 | HAFC | AFC gain | 09 |
| 56 | V25 | Volume 25% | 3D |
| 57 | V50 | Volume 50% | 57 |
| 58 | V100 | Volume 100% | 74 |
| 59 | MUTT | Y-MUTE SOFT START | 00 |
| 60 | STAT | CONTORAST UP FOR SOFT START | 00 |
| 61 | FLG0 | FLAGS FOR IF | 52 |
| 62 | FLG1 | FLAGS | 04 |
| 63 | REFP | REF Pulse Position | 00 |
| 64 | RSNS | R SENS | 00 |
| 65 | GSNS | G SENS | 00 |
| 66 | BSNS | B SENS | 00 |
| 67 | MOD | Factory Data | 30 |
| 68 | STBY | VCD/IF STANDBY | 00 |
| 69 | SVM | SVM | 00 |
| 70 | VBLK | V BLK Start/Stop | 00 |
| 71 | VCEN | Factory Data | 27 |
| 72 | HSIZ | Factory Data | 20 |
| 73 | PRBR | Factory Data | 20 |
| 74 | TRUM | Factory Data | 10 |
| 75 | ECCT | Factory Data | 10 |
| 76 | ECCB | Factory Data | 10 |
| 77 | EHT | Factory Data | 24 |
| 78 | UCOM | Miciom Control | 00 |
| 79 | PYNX | Factory Data | 2E |
| 80 | PYNN | Factory Data | 18 |
| 81 | PYXS | Factory Data | 22 |
| 82 | PYNS | Factory Data | 1E |
| 83 | RCUTS | FOR YcbCr R CUTOFF | 10 |
| 84 | GCUTS | FOR YcbCr G CUTOFF | 00 |
| 85 | BCUTS | FOR YcbCr B CUTOFF | 10 |
| 86 | GDRVS | FOR YcbCr G DRIVE | 00 |
| 87 | BDRVS | FOR YcbCr B DRIVE | 00 |
| 88 | NOIS | H AFC CONTROL | 01 |
| 89 | AOPT | AKB OPTION | 00 |
| 90 | AV OPT | AV OPTION | 06 |
| 91 | OPT2 | Factory Data | 3C |
| 92 | WAIT TIME | Factory Data | 57 |
| 93 | CUR CEN | Factory Data | A0 |

| No | Adjustment Item | Adjustment Function | Type Data |
|-----|-----------------|---------------------------------------|-----------|
| 94 | CUR STEP | Factory Data | 02 |
| 95 | AUSTP | When Mute off ,Vol.ATT up step number | 04 |
| 96 | MODE0 | Factory Data | 9D |
| 97 | MODE1 | Factory Data | 03 |
| 98 | OSDF | OSD width | 53 |
| 99 | OSD | OSD position | 10 |
| 100 | OPT | Factory Data | E7 |

NOTE:

The data provided in the form provides to consult only!

ELECTRICAL PARTS LIST

PRODUCT SAFETY NOTE:

Products marked with a ! have special characteristics important to safety. Before replacing any of these components, read carefully the product safety notice in this service manual. Don't degrade the safety of the product through improper servicing.

NOTE: parts that not assigned part numbers(.....) are not available.

Tolerance of Capacitors and Resistors are noted with the following symbols.

| | |
|---|----------|
| C | ±0.25% |
| D | ±0.5% |
| F | ±1% |
| G | ±2% |
| J | ±5% |
| K | ±10% |
| M | ±20% |
| N | ±30% |
| Z | +80/-20% |

| Ref. No | Part No. | Name | Specification |
|---------|------------|-----------------|-------------------|
| R101 | D10B683J-T | Carbon resistor | RT13-1/6W-68KΩ±5% |
| R444 | D10B4R7J-T | Carbon resistor | RT13-1/6W-4.7Ω±5% |
| R701 | D10B4R7J-T | Carbon resistor | RT13-1/6W-4.7Ω±5% |
| R113 | D10B330J-T | Carbon resistor | RT13-1/6W-33Ω±5% |
| R203 | D10B101J-T | Carbon resistor | RT13-1/6W-100Ω±5% |
| R206 | D10B101J-T | Carbon resistor | RT13-1/6W-100Ω±5% |
| R207 | D10B101J-T | Carbon resistor | RT13-1/6W-100Ω±5% |
| R208 | D10B101J-T | Carbon resistor | RT13-1/6W-100Ω±5% |
| R210 | D10B101J-T | Carbon resistor | RT13-1/6W-100Ω±5% |
| R217 | D10B101J-T | Carbon resistor | RT13-1/6W-100Ω±5% |
| R218 | D10B101J-T | Carbon resistor | RT13-1/6W-100Ω±5% |
| R219 | D10B101J-T | Carbon resistor | RT13-1/6W-100Ω±5% |
| R220 | D10B101J-T | Carbon resistor | RT13-1/6W-100Ω±5% |
| R231 | D10B101J-T | Carbon resistor | RT13-1/6W-100Ω±5% |
| R292 | D10B101J-T | Carbon resistor | RT13-1/6W-100Ω±5% |
| R301 | D10B101J-T | Carbon resistor | RT13-1/6W-100Ω±5% |
| R305 | D10B101J-T | Carbon resistor | RT13-1/6W-100Ω±5% |
| R306 | D10B101J-T | Carbon resistor | RT13-1/6W-100Ω±5% |
| R323 | D10B101J-T | Carbon resistor | RT13-1/6W-100Ω±5% |
| R609 | D10B101J-T | Carbon resistor | RT13-1/6W-100Ω±5% |
| W214 | D10B101J-T | Carbon resistor | RT13-1/6W-100Ω±5% |
| R201 | D10B151J-T | Carbon resistor | RT13-1/6W-150Ω±5% |
| R404 | D10B151J-T | Carbon resistor | RT13-1/6W-150Ω±5% |
| R601 | D10B151J-T | Carbon resistor | RT13-1/6W-150Ω±5% |
| R611 | D10B151J-T | Carbon resistor | RT13-1/6W-150Ω±5% |

| Ref. No | Part No. | Name | Specification |
|---------|------------|-----------------|--------------------|
| R621 | D10B151J-T | Carbon resistor | RT13-1/6W-150Ω±5% |
| R106 | D10B221J-T | Carbon resistor | RT13-1/6W-220Ω±5% |
| R107 | D10B221J-T | Carbon resistor | RT13-1/6W-220Ω±5% |
| R310 | D10B221J-T | Carbon resistor | RT13-1/6W-220Ω±5% |
| R205 | D10B271J-T | Carbon resistor | RT13-1/6W-270Ω±5% |
| R236 | D10B271J-T | Carbon resistor | RT13-1/6W-270Ω±5% |
| R237 | D10B271J-T | Carbon resistor | RT13-1/6W-270Ω±5% |
| R238 | D10B271J-T | Carbon resistor | RT13-1/6W-270Ω±5% |
| R325 | D10B271J-T | Carbon resistor | RT13-1/6W-270Ω±5% |
| R326 | D10B271J-T | Carbon resistor | RT13-1/6W-270Ω±5% |
| R240 | D10B561J-T | Carbon resistor | RT13-1/6W-560Ω±5% |
| R320 | D10B561J-T | Carbon resistor | RT13-1/6W-560Ω±5% |
| R941 | D10B561J-T | Carbon resistor | RT13-1/6W-560Ω±5% |
| R241 | D10B681J-T | Carbon resistor | RT13-1/6W-680Ω±5% |
| R517 | D10B681J-T | Carbon resistor | RT13-1/6W-680Ω±5% |
| R704 | D10B751J-T | Carbon resistor | RT13-1/6W-750Ω±5% |
| R604 | D10B821J-T | Carbon resistor | RT13-1/6W-820Ω±5% |
| R614 | D10B821J-T | Carbon resistor | RT13-1/6W-820Ω±5% |
| R624 | D10B821J-T | Carbon resistor | RT13-1/6W-820Ω±5% |
| R119 | D10B102J-T | Carbon resistor | RT13-1/6W-1KΩ±5% |
| R214 | D10B102J-T | Carbon resistor | RT13-1/6W-1KΩ±5% |
| R324 | D10B102J-T | Carbon resistor | RT13-1/6W-1KΩ±5% |
| R603 | D10B102J-T | Carbon resistor | RT13-1/6W-1KΩ±5% |
| R613 | D10B102J-T | Carbon resistor | RT13-1/6W-1KΩ±5% |
| R623 | D10B102J-T | Carbon resistor | RT13-1/6W-1KΩ±5% |
| R902 | D10B102J-T | Carbon resistor | RT13-1/6W-1KΩ±5% |
| R904 | D10B102J-T | Carbon resistor | RT13-1/6W-1KΩ±5% |
| R925 | D10B102J-T | Carbon resistor | RT13-1/6W-1KΩ±5% |
| R115 | D10B152J-T | Carbon resistor | RT13-1/6W-1.5KΩ±5% |
| R480 | D10B152J-T | Carbon resistor | RT13-1/6W-1.5KΩ±5% |
| R578 | D10B152J-T | Carbon resistor | RT13-1/6W-1.5KΩ±5% |
| R608 | D10B152J-T | Carbon resistor | RT13-1/6W-1.5KΩ±5% |
| R610 | D10B152J-T | Carbon resistor | RT13-1/6W-1.5KΩ±5% |
| R944 | D10B152J-T | Carbon resistor | RT13-1/6W-1.5KΩ±5% |
| R946 | D10B152J-T | Carbon resistor | RT13-1/6W-1.5KΩ±5% |
| R242 | D10B222J-T | Carbon resistor | RT13-1/6W-2.2KΩ±5% |
| R708 | D10B272J-T | Carbon resistor | RT13-1/6W-2.7KΩ±5% |
| R202 | D10B332J-T | Carbon resistor | RT13-1/6W-3.3KΩ±5% |
| R230 | D10B332J-T | Carbon resistor | RT13-1/6W-3.3KΩ±5% |
| R330 | D10B332J-T | Carbon resistor | RT13-1/6W-3.3KΩ±5% |
| R108 | D10B392J-T | Carbon resistor | RT13-1/6W-3.9KΩ±5% |
| R249 | D10B392J-T | Carbon resistor | RT13-1/6W-3.9KΩ±5% |
| R251 | D10B392J-T | Carbon resistor | RT13-1/6W-3.9KΩ±5% |
| R446 | D10B392J-T | Carbon resistor | RT13-1/6W-3.9KΩ±5% |
| R916 | D10B392J-T | Carbon resistor | RT13-1/6W-3.9KΩ±5% |
| R928 | D10B392J-T | Carbon resistor | RT13-1/6W-3.9KΩ±5% |
| R930 | D10B392J-T | Carbon resistor | RT13-1/6W-3.9KΩ±5% |
| R945 | D10B472J-T | Carbon resistor | RT13-1/6W-4.7KΩ±5% |

| Ref. No | Part No. | Name | Specification |
|---------|------------|-----------------|--------------------|
| R443 | D10B562J-T | Carbon resistor | RT13-1/6W-5.6KΩ±5% |
| R511 | D10B562J-T | Carbon resistor | RT13-1/6W-5.6KΩ±5% |
| R920 | D10B562J-T | Carbon resistor | RT13-1/6W-5.6KΩ±5% |
| R1002 | D10B562J-T | Carbon resistor | RT13-1/6W-5.6KΩ±5% |
| R322 | D10B822J-T | Carbon resistor | RT13-1/6W-8.2KΩ±5% |
| R947 | D10B822J-T | Carbon resistor | RT13-1/6W-8.2KΩ±5% |
| R102 | D10B103J-T | Carbon resistor | RT13-1/6W-10KΩ±5% |
| R255 | D10B103J-T | Carbon resistor | RT13-1/6W-10KΩ±5% |
| R290 | D10B103J-T | Carbon resistor | RT13-1/6W-10KΩ±5% |
| R321 | D10B103J-T | Carbon resistor | RT13-1/6W-10KΩ±5% |
| R423 | D10B103J-T | Carbon resistor | RT13-1/6W-10KΩ±5% |
| R448 | D10B103J-T | Carbon resistor | RT13-1/6W-10KΩ±5% |
| R562 | D10B103J-T | Carbon resistor | RT13-1/6W-10KΩ±5% |
| R579 | D10B103J-T | Carbon resistor | RT13-1/6W-10KΩ±5% |
| R912 | D10B103J-T | Carbon resistor | RT13-1/6W-10KΩ±5% |
| R918 | D10B103J-T | Carbon resistor | RT13-1/6W-10KΩ±5% |
| R919 | D10B103J-T | Carbon resistor | RT13-1/6W-10KΩ±5% |
| R938 | D10B103J-T | Carbon resistor | RT13-1/6W-10KΩ±5% |
| R939 | D10B103J-T | Carbon resistor | RT13-1/6W-10KΩ±5% |
| R942 | D10B103J-T | Carbon resistor | RT13-1/6W-10KΩ±5% |
| R248 | D10B123J-T | Carbon resistor | RT13-1/6W-12KΩ±5% |
| R706 | D10B123J-T | Carbon resistor | RT13-1/6W-12KΩ±5% |
| R1003 | D10B123J-T | Carbon resistor | RT13-1/6W-12KΩ±5% |
| R213 | D10B153J-T | Carbon resistor | RT13-1/6W-15KΩ±5% |
| R216 | D10B153J-T | Carbon resistor | RT13-1/6W-15KΩ±5% |
| R293 | D10B153J-T | Carbon resistor | RT13-1/6W-15KΩ±5% |
| R328 | D10B153J-T | Carbon resistor | RT13-1/6W-15KΩ±5% |
| R447 | D10B153J-T | Carbon resistor | RT13-1/6W-15KΩ±5% |
| R607 | D10B153J-T | Carbon resistor | RT13-1/6W-15KΩ±5% |
| R7007 | D10B153J-T | Carbon resistor | RT13-1/6W-15KΩ±5% |
| R224 | D10B223J-T | Carbon resistor | RT13-1/6W-22KΩ±5% |
| R252 | D10B223J-T | Carbon resistor | RT13-1/6W-22KΩ±5% |
| R481 | D10B223J-T | Carbon resistor | RT13-1/6W-22KΩ±5% |
| R515 | D10B223J-T | Carbon resistor | RT13-1/6W-22KΩ±5% |
| R551 | D10B223J-T | Carbon resistor | RT13-1/6W-22KΩ±5% |
| R575 | D10B223J-T | Carbon resistor | RT13-1/6W-22KΩ±5% |
| R576 | D10B223J-T | Carbon resistor | RT13-1/6W-22KΩ±5% |
| R909 | D10B223J-T | Carbon resistor | RT13-1/6W-22KΩ±5% |
| R232 | D10B333J-T | Carbon resistor | RT13-1/6W-33KΩ±5% |
| R903 | D10B333J-T | Carbon resistor | RT13-1/6W-33KΩ±5% |
| R913 | D10B333J-T | Carbon resistor | RT13-1/6W-33KΩ±5% |
| R943 | D10B333J-T | Carbon resistor | RT13-1/6W-33KΩ±5% |
| R1001 | D10B333J-T | Carbon resistor | RT13-1/6W-33KΩ±5% |
| R450 | D10B473J-T | Carbon resistor | RT13-1/6W-47KΩ±5% |
| R246 | D10B683J-T | Carbon resistor | RT13-1/6W-68KΩ±5% |
| R243 | D10B104J-T | Carbon resistor | RT13-1/6W-100KΩ±5% |
| R473 | D10B104J-T | Carbon resistor | RT13-1/6W-100KΩ±5% |
| R7003 | D10B104J-T | Carbon resistor | RT13-1/6W-100KΩ±5% |
| R233 | D10B224J-T | Carbon resistor | RT13-1/6W-220KΩ±5% |

| Ref. No | Part No. | Name | Specification |
|---------|---------------|------------------------|-------------------------------------|
| R211 | D10B334J-T | Carbon resistor | RT13-1/6W-330K Ω \pm 5% |
| R247 | D10B564J-T | Carbon resistor | RT13-1/6W-560K Ω \pm 5% |
| R632 | D10C330J-T | Carbon resistor | RT14-1/4W-33 Ω \pm 5% |
| R519 | D10C221J-T | Carbon resistor | RT14-1/4W-220 Ω \pm 5% |
| R960 | D10C471J-T | Carbon resistor | RT14-1/4W-470 Ω \pm 5% |
| R245 | D10C182J-T | Carbon resistor | RT14-1/4W-1.8K Ω \pm 5% |
| R526 | D10C222J-T | Carbon resistor | RT14-1/4W-2.2K Ω \pm 5% |
| R559 | D10C392J-T | Carbon resistor | RT14-1/4W-3.9K Ω \pm 5% |
| R557 | D10C472J-T | Carbon resistor | RT14-1/4W-4.7K Ω \pm 5% |
| R424 | D10C153J-T | Carbon resistor | RT14-1/4W-15K Ω \pm 5% |
| R522 | D10C153J-T | Carbon resistor | RT14-1/4W-15K Ω \pm 5% |
| R555 | D10C473J-T | Carbon resistor | RT14-1/4W-47K Ω \pm 5% |
| R556 | D10C473J-T | Carbon resistor | RT14-1/4W-47K Ω \pm 5% |
| R554 | D10C154J-T | Carbon resistor | RT14-1/4W-150K Ω \pm 5% |
| R445 | D10D1R8J-T | Carbon resistor | RT15-1/2W-1.8 Ω \pm 5% |
| R327 | D10D221J-T | Carbon resistor | RT15-1/2W-220 Ω \pm 5% |
| R442 | D10D331J-T | Carbon resistor | RT15-1/2W-330 Ω \pm 5% |
| R407 | D10D102J-T | Carbon resistor | RT15-1/2W-1K Ω \pm 5% |
| R560 | D10D332J-T | Carbon resistor | RT15-1/2W-3.3K Ω \pm 5% |
| R606 | D10D332J-T | Carbon resistor | RT15-1/2W-3.3K Ω \pm 5% |
| R616 | D10D332J-T | Carbon resistor | RT15-1/2W-3.3K Ω \pm 5% |
| R626 | D10D332J-T | Carbon resistor | RT15-1/2W-3.3K Ω \pm 5% |
| R462 | D10D682J-T | Carbon resistor | RT15-1/2W-6.8K Ω \pm 5% |
| R552 | D10D473J-T | Carbon resistor | RT15-1/2W-47K Ω \pm 5% |
| R520 | D10D104J-T | Carbon resistor | RT15-1/2W-100K Ω \pm 5% |
| R521 | D10D104J-T | Carbon resistor | RT15-1/2W-100K Ω \pm 5% |
| R561 | D10D224J-T | Carbon resistor | RT15-1/2W-220K Ω \pm 5% |
| R413 | S10E472J-S(A) | Metal oxide resistor | RY16/RY21-1W-4.7K Ω \pm 5% |
| R600 | S10F1R0J-C | Metal oxide resistor | RY17/RY21-2W-2.2 Ω \pm 5% |
| R564 | S10E471J-C | Metal oxide resistor | RY16/RY21-1W-470 Ω \pm 5% |
| R605 | S10E123J-C | Metal oxide resistor | RY16/RY21-1W-12K Ω \pm 5% |
| R615 | S10E123J-C | Metal oxide resistor | RY16/RY21-1W-12K Ω \pm 5% |
| R625 | S10E123J-C | Metal oxide resistor | RY16/RY21-1W-12K Ω \pm 5% |
| R525 | S10F680J-C | Metal oxide resistor | RY17/RY21-2W-68 Ω \pm 5% |
| R580 | S10F680J-C | Metal oxide resistor | RY17/RY21-2W-68 Ω \pm 5% |
| R574 | S10F151J-C | Metal oxide resistor | RY17/RY21-2W-150 Ω \pm 5% |
| R437 | S10F271J-C | Metal oxide resistor | RY17/RY21-2W-270 Ω \pm 5% |
| R553 | S10F123J-C | Metal oxide resistor | RY17/RY21-2W-12K Ω \pm 5% |
| R565 | S10F123J-C | Metal oxide resistor | RY17/RY21-2W-12K Ω \pm 5% |
| R527 | S10G560J-C | Metal oxide resistor | RY18/RY21-3W-56 Ω \pm 5% |
| R531 ! | | Glass-Glazed Fixed RES | RI40-1/2W-24M Ω \pm 5% |
| R558 ! | F10DR47J-C | Fuse resistor | RF10-1/2W-0.47 Ω \pm 5% |
| R550 ! | F10D1R0J-C | Fuse resistor | RF10-1/2W-1 Ω \pm 5% |
| R573 ! | F10D1R0J-C | Fuse resistor | RF10-1/2W-1 Ω \pm 5% |
| R449 | W11H3R9K | Wire-wound resistor | RXG6-5W-3.9 Ω -J |
| R502 ! | W10J3R9K | Wire-wound resistor | RXG6-6W-3.9 Ω -J |
| PS551 | P10X180J-C | Thermistor | PTC-180HM |
| RP501 | V11D202B | Potentiometer | WI06-2AA2K Ω |
| C902 | C2CF200J-T | Ceramic capacitor | CC1-06A-CH-50/63V-20pF-J |


| Ref. No | Part No. | Name | Specification |
|---------|------------|-------------------|-----------------------------|
| C315 | C2CF220J-T | Ceramic capacitor | CC1-06A-CH-50/63V-22pF-J |
| C247 | C2CF330J-T | Ceramic capacitor | CC1-06A-CH-50/63V-33pF-J |
| C901 | C2CF330J-T | Ceramic capacitor | CC1-06A-CH-50/63V-33pF-J |
| C602 | C2BF101K-T | Ceramic capacitor | CC1-06A-RH-50/63V-100pF-J |
| C612 | C2BF101K-T | Ceramic capacitor | CC1-06A-RH-50/63V-100pF-J |
| C622 | C2BF101K-T | Ceramic capacitor | CC1-06A-RH-50/63V-100pF-J |
| C235 | C2BF181K-T | Ceramic capacitor | CC1-06A-RH-50/63V-180pF-J |
| C908 | C2BF221K-T | Ceramic capacitor | CC1-06A-RH-50/63V-220pF-J |
| C909 | C2BF221K-T | Ceramic capacitor | CC1-06A-RH-50/63V-220pF-J |
| C912 | C2BF221K-T | Ceramic capacitor | CC1-06A-RH-50/63V-220pF-J |
| C203 | C2BF102K-T | Ceramic capacitor | CT1-06A-2B4-50/63V-1000pF-K |
| C934 | C2BF102K-T | Ceramic capacitor | CT1-06A-2B4-50/63V-1000pF-K |
| C246 | C2BF152K-T | Ceramic capacitor | CT1-06A-2B4-50/63V-1500pF-K |
| C234 | C2BF272K-T | Ceramic capacitor | CT1-06A-2B4-50/63V-2700pF-K |
| C112 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C113 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C114 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C120 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C202 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C208 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C210 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C211 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C232 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C233 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C304 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C309 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C310 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C574 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C604 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C903 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C913 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C915 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C924 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C929 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C930 | C2FF103Z-T | Ceramic capacitor | CT1-08A-2F4-50/63V-0.01uF-Z |
| C402 | C2BP102K-T | Ceramic capacitor | CT1-08C-2B4-500V-1000pF-K |
| C403 | C2BP392K-T | Ceramic capacitor | CT1-08C-2B4-500V-3900pF-K |
| C452 | C2BP392K-T | Ceramic capacitor | CT1-08C-2B4-500V-3900pF-K |
| C448 | C2SP100D-T | Ceramic capacitor | CT1-07-B-500V-10PF-±10% |
| C503 | C2BW102K-O | Ceramic capacitor | CT81-08C-2R-1KV-1000pF-K |
| C504 | C2BW102K-O | Ceramic capacitor | CT81-08C-2R-1KV-1000pF-K |
| C505 | C2BW102K-O | Ceramic capacitor | CT81-08C-2R-1KV-1000pF-K |
| C506 | C2BW102K-O | Ceramic capacitor | CT81-08C-2R-1KV-1000pF-K |
| C555 | C2BW471K-O | Ceramic capacitor | CT81-08C-2R-1KV-470pF-K |
| C556 | C2RX221K-O | Ceramic capacitor | CT81-08C-2R-2KV-220pF-K |
| C418 | C2RX471K-O | Ceramic capacitor | CT81-08C-2R-2KV-470pF-K |
| VD530 | C2RX681K-O | Ceramic capacitor | CT81-08C-2R-2KV-680pF-K |
| C630 | C2EX222Z-O | Ceramic capacitor | CT81-08C-2R-2KV-2200pF-K |
| C535 ! | C2EM102M-O | Ceramic capacitor | CTJ1-AC250V-1000PF-±20% |

| Ref. No | Part No. | Name | Specification |
|---------|-------------|------------------------|---------------------|
| C291 | E20C4R7M-T | Electrolytic Capacitor | CD110-16V-4.7uF -M |
| C292 | E20C4R7M-T | Electrolytic Capacitor | CD110-16V-4.7uF -M |
| C296 | E20C4R7M-T | Electrolytic Capacitor | CD110-16V-4.7uF -M |
| C293 | E20C100M-T | Electrolytic Capacitor | CD110-16V-10uF -M |
| C294 | E20C100M-T | Electrolytic Capacitor | CD110-16V-10uF -M |
| C306 | E20C100M-T | Electrolytic Capacitor | CD110-16V-10uF -M |
| C558 | E20C100M-T | Electrolytic Capacitor | CD110-16V-10uF -M |
| C603 | E20C100M-T | Electrolytic Capacitor | CD110-16V-10uF -M |
| C605 | E20C100M-T | Electrolytic Capacitor | CD110-16V-10uF -M |
| C218 | E20C220M-T | Electrolytic Capacitor | CD110-16V-22uF -M |
| C102 | E20C470M-T | Electrolytic Capacitor | CD110-16V-47uF -M |
| C238 | E20C470M-T | Electrolytic Capacitor | CD110-16V-47uF -M |
| C240 | E20C470M-T | Electrolytic Capacitor | CD110-16V-47uF -M |
| C244 | E20C470M-T | Electrolytic Capacitor | CD110-16V-47uF -M |
| C295 | E20C470M-T | Electrolytic Capacitor | CD110-16V-47uF -M |
| C307 | E20C470M-T | Electrolytic Capacitor | CD110-16V-47uF -M |
| C914 | E20C470M-T | Electrolytic Capacitor | CD110-16V-47uF -M |
| C916 | E20C470M-T | Electrolytic Capacitor | CD110-16V-47uF -M |
| C920 | E20C470M-T | Electrolytic Capacitor | CD110-16V-47uF -M |
| C230 | E20C101M-T | Electrolytic Capacitor | CD110-16V-100uF -M |
| C243 | E20C101M-T | Electrolytic Capacitor | CD110-16V-100uF -M |
| C302 | E20C101M-T | Electrolytic Capacitor | CD110-16V-100uF -M |
| C702 | E20C101M-T | Electrolytic Capacitor | CD110-16V-100uF -M |
| C704 | E20C101M-T | Electrolytic Capacitor | CD110-16V-100uF -M |
| C927 | E20C101M-T | Electrolytic Capacitor | CD110-16V-100uF -M |
| C928 | E20C101M-T | Electrolytic Capacitor | CD110-16V-100uF -M |
| C209 | E20C471M-T | Electrolytic Capacitor | CD110-16V-470uF -M |
| C222 | E20C471M-T | Electrolytic Capacitor | CD110-16V-470uF -M |
| C311 | E20C471M-T | Electrolytic Capacitor | CD110-16V-470uF -M |
| C571 | E20C471M-T | Electrolytic Capacitor | CD110-16V-470uF -M |
| C201 | E20D100MN-T | NON-POLAR Capacitor | CD71-BP-25V-10uF-M |
| C700 | E20D221M | Electrolytic Capacitor | CD110-25V-220uF -M |
| C557 | E20D471M | Electrolytic Capacitor | CD110-25V-470uF -M |
| C564 | E20D471M | Electrolytic Capacitor | CD110-25V-470uF -M |
| C717 | E20D471M | Electrolytic Capacitor | CD110-25V-470uF -M |
| C433 | E20D102M | Electrolytic Capacitor | CD110-25V-1000uF -M |
| C430 | E20E470M-T | Electrolytic Capacitor | CD110-35V-47uF -M |
| C449 | E20E101M-T | Electrolytic Capacitor | CD110-35V-100uF -M |
| C559 | E20E331M | Electrolytic Capacitor | CD110-35V-330uF -M |
| C565 | E20E331M | Electrolytic Capacitor | CD110-35V-330uF -M |
| C104 | E20F0R1MR | Electrolytic Capacitor | CD114-50V-0.1uF -M |
| C237 | E20FR22M-T | Electrolytic Capacitor | CD110-50V-0.22uF -M |
| C108 | E20FR47M-T | Electrolytic Capacitor | CD110-50V-0.47uF -M |
| C110 | E20FR47M-T | Electrolytic Capacitor | CD110-50V-0.47uF -M |
| C204 | E20FR47M-T | Electrolytic Capacitor | CD110-50V-0.47uF -M |
| C301 | E20FR47M-T | Electrolytic Capacitor | CD110-50V-0.47uF -M |
| C303 | E20FR47M-T | Electrolytic Capacitor | CD110-50V-0.47uF -M |
| C308 | E20FR47M-T | Electrolytic Capacitor | CD110-50V-0.47uF -M |
| C205 | E20F1R0M-T | Electrolytic Capacitor | CD110-50V-1uF -M |

| Ref. No | Part No. | Name | Specification |
|---------|------------|--------------------------|-------------------------|
| C215 | E20F1R0M-T | Electrolytic Capacitor | CD110-50V-1uF -M |
| C216 | E20F1R0M-T | Electrolytic Capacitor | CD110-50V-1uF -M |
| C217 | E20F1R0M-T | Electrolytic Capacitor | CD110-50V-1uF -M |
| C236 | E20F1R0M-T | Electrolytic Capacitor | CD110-50V-1uF -M |
| C245 | E20F1R0M-T | Electrolytic Capacitor | CD110-50V-1uF -M |
| C103 | E20F2R2M-T | Electrolytic Capacitor | CD110-50V-2.2uF -M |
| C300 | E20F2R2M-T | Electrolytic Capacitor | CD110-50V-2.2uF -M |
| C443 | E20F2R2M-T | Electrolytic Capacitor | CD110-50V-2.2uF -M |
| C926 | E20F2R2M-T | Electrolytic Capacitor | CD110-50V-2.2uF -M |
| C101 | E20F4R7M-T | Electrolytic Capacitor | CD110-50V-4.7uF -M |
| C206 | E20F4R7M-T | Electrolytic Capacitor | CD110-50V-4.7uF -M |
| C703 | E20F4R7M-T | Electrolytic Capacitor | CD110-50V-4.7uF -M |
| C705 | E20F4R7M-T | Electrolytic Capacitor | CD110-50V-4.7uF -M |
| C411 | E21H1R0M-T | Electrolytic Capacitor | CD110-160V-1uF -M |
| C563 | E20H101M | Electrolytic Capacitor | CD110-160V-100uF-M |
| C562 | E20H100M | Electrolytic Capacitor | CD110-160V-10uF -M |
| C507 | E20M101M | Electrolytic Capacitor | CD293-400V-100uF±10% |
| C231 | F20F102J-T | Mylar capacitor | CL11-50V/63V-1000PF-K |
| C446 | F20F222J-T | Mylar capacitor | CL11-50V/63V-2200PF-K |
| C708 | F20F392J-T | Mylar capacitor | CL11-50V/63V-3900PF-K |
| C305 | F20F822J-T | Mylar capacitor | CL11-50V/63V-8200PF-K |
| C515 | F22F123J-T | Mylar capacitor | CL21X-50V/63V-0.012uF-K |
| C517 | F20F223K-T | Mylar capacitor | CL11-50V/63V-0.022uF-K |
| C514 | F20F393K-T | Mylar capacitor | CL11-50V/63V-0.039uF-K |
| C447 | F20F563K-T | Mylar capacitor | CL11-50V/63V-0.056uF-K |
| C460 | F20F104K-T | Mylar capacitor | CL11-50V/63V-0.1uF-K |
| C461 | F20F104K-T | Mylar capacitor | CL11-50V/63V-0.1uF-K |
| C701 | F20F104K-T | Mylar capacitor | CL11-50V/63V-0.1uF-K |
| C922 | F20F104K-T | Mylar capacitor | CL11-50V/63V-0.1uF-K |
| C923 | F20F104K-T | Mylar capacitor | CL11-50V/63V-0.1uF-K |
| C413 | F20G104K-T | Mylar capacitor | CL11-100V-0.1uF-K |
| C421 | F20G104K-T | Mylar capacitor | CL11-100V-0.1uF-K |
| C444 | F20G104K-T | Mylar capacitor | CL11-100V-0.1uF-K |
| C412 | F20J474J | Polypropylene capacitor | CBB21-200V-0.47uF±5% |
| C415 ! | F20Z822J | Polypropylene capacitor | CBB81-1.6KV-8200PF-J |
| C501 ! | F20R224M | Polypropylene capacitor | CBB62-250VAC-0.22uF |
| L414 | LXXX0040 | H-linear | LX40 |
| T101 | TLXX0018 | Coil | D18 |
| L103 | L3X11R0K-T | Inductor | LGA0307-1uH-K |
| L304 | L3X18R2K-T | Inductor | LGA0307-8.2uH-K |
| L101 | L3X1150K-T | Inductor | LGA0307-15uH-K |
| L104 | L3X1150K-T | Inductor | LGA0307-15uH-K |
| L201 | L3X1150K-T | Inductor | LGA0307-15uH-K |
| L230 | L3X1150K-T | Inductor | LGA0307-15uH-K |
| L302 | L3X1150K-T | Inductor | LGA0307-15uH-K |
| L305 | L3X1150K-T | Inductor | LGA0307-15uH-K |
| L901 | L3X1150K-T | Inductor | LGA0307-15uH-K |
| L501 ! | LMXX0002 | Degaussing coil | |
| VD515 ! | RX0001XX | Photoelectricity coupler | PC817B/C |

| Ref. No | Part No. | Name | Specification |
|---------|------------|--------|-------------------------|
| VD1001 | DL0008XX | LED | RED 5mm |
| VD230 | DR0001XX-T | Diode | IS1555/IN4148A |
| VD232 | DR0001XX-T | Diode | IS1555/IN4148A |
| VD233 | DR0001XX-T | Diode | IS1555/IN4148A |
| VD401 | DR0001XX-T | Diode | IS1555/IN4148A |
| VD514 | DR0001XX-T | Diode | IS1555/IN4148A |
| VD516 | DR0001XX-T | Diode | IS1555/IN4148A |
| VD558 | DR0001XX-T | Diode | IS1555/IN4148A |
| VD601 | DR0001XX-T | Diode | IS1555/IN4148A |
| VD901 | DR0001XX-T | Diode | IS1555/IN4148A |
| VD517 | DR0003XX-T | Diode | FR105 |
| VD552 | DR0003XX-T | Diode | FR105 |
| VD553 | DR0003XX-T | Diode | FR105 |
| VD557 | DR0003XX-T | Diode | FR105 |
| VD433 | DR0009XX-T | Diode | GP10D/FR104/IN4004 |
| VD434 | DR0009XX-T | Diode | GP10D/FR104/IN4004 |
| VD403 | DR0010XX-T | Diode | FR107 |
| VD503 | DR0015XX-T | Diode | TVR4N/TRM11C |
| VD504 | DR0015XX-T | Diode | TVR4N/TRM11C |
| VD505 | DR0015XX-T | Diode | TVR4N/TRM11C |
| VD506 | DR0015XX-T | Diode | TVR4N/TRM11C |
| VD556 | DR0017XX | Diode | RGP10J |
| VD554 | DR0018XX | Diode | RGP10D |
| VD555 | DR0031XX-T | Diode | TJ1010 |
| VD551 | DZ0001XX-T | Diode | RD6.2EB3/HZ7A1 |
| VD922 | DZ0002XX-T | Diode | RD5.1EB2/HZ5C1 |
| VD501 | DZ0006XX-T | Diode | RD3.6L/HZ4A2 |
| VD902 | DZ0006XX-T | Diode | RD3.6L/HZ4A2 |
| VD921 | DZ0015XX-T | Diode | RD5.6EB2/HZ6B1 |
| VD216 | DZ0011XX-T | Diode | RD9.1EB2/HZ9B2 |
| VD217 | DZ0011XX-T | Diode | RD9.1EB2/HZ9B2 |
| VD703 | DZ0011XX-T | Diode | RD9.1EB2/HZ9B2 |
| VD436 | DZ0004XX-T | Diode | RD10EB2/HZ11C1 |
| N904 | IXXX0080 | IC | upc574J/CW574 |
| N701 | IXXX0180 | IC | LA4267 5W |
| N902 | IXXX0118 | IC | TA78M09 9V□□ |
| N203 | IXXX0120 | IC | LC4053B/CD4053B |
| N204 | | IC | TMPA8803CPAN-3GV1 |
| N402 | IXXX0142 | IC | LA78040 |
| N901 | IXXX0173 | IC | BR ST24C16-W |
| V230 | RXA1015X-T | Audion | 2SA1015Y/2SA608/2SA733Q |
| V232 | RXA1015X-T | Audion | 2SA1015Y/2SA608/2SA733Q |
| V233 | RXA1015X-T | Audion | 2SA1015Y/2SA608/2SA733Q |
| V302 | RXA1015X-T | Audion | 2SA1015Y/2SA608/2SA733Q |
| V511 | RXA1015X-T | Audion | 2SA1015Y/2SA608/2SA733Q |
| V602 | RXA1015X-T | Audion | 2SA1015Y/2SA608/2SA733Q |
| V902 | RXA1015X-T | Audion | 2SA1015Y/2SA608/2SA733Q |
| V570 | RXB764XX-T | Audion | 2SB764 |

| Ref. No | Part No. | Name | Specification |
|---------|------------|---------------------|------------------------|
| V552 | RXB892XX-T | Audion | 2SB892/2SB985T |
| V101 | RXC2216X-T | Audion | 2SC2216 |
| V601 | RXC2482X | Audion | 2SC2482 |
| V611 | RXC2482X | Audion | 2SC2482 |
| V621 | RXC2482X | Audion | 2SC2482 |
| V444 | RXC2383X-T | Audion | 2SC2383-O |
| V512 | RXC3807X | Audion | 2SC3807/2SC5070 |
| V501 | RXC5287X | Audion | 2SD1710/2SC4584/C5586 |
| V102 | RXC945XX-T | Audion | 2SC945/2SC1815/2SC536E |
| V103 | RXC945XX-T | Audion | 2SC945/2SC1815/2SC536E |
| V201 | RXC945XX-T | Audion | 2SC945/2SC1815/2SC536E |
| V202 | RXC945XX-T | Audion | 2SC945/2SC1815/2SC536E |
| V203 | RXC945XX-T | Audion | 2SC945/2SC1815/2SC536E |
| V231 | RXC945XX-T | Audion | 2SC945/2SC1815/2SC536E |
| V551 | RXC945XX-T | Audion | 2SC945/2SC1815/2SC536E |
| V571 | RXC945XX-T | Audion | 2SC945/2SC1815/2SC536E |
| V572 | RXC945XX-T | Audion | 2SC945/2SC1815/2SC536E |
| V701 | RXC945XX-T | Audion | 2SC945/2SC1815/2SC536E |
| V901 | RXC945XX-T | Audion | 2SC945/2SC1815/2SC536E |
| V411 | RXD2499X | Audion | 2SD2499/2SD1651 |
| V905 | RXD400XX-T | Audion | 2SD400D |
| Z304 | FC0007XX | Ceramic trap filter | XT6.0M |
| Z302 | FC0008XX | Ceramic trap filter | XT5.5M |
| Z101 | | SAWF | □1339□38.9M |
| F501 ! | FXXX0020 | FUSE | 2.5A 250V |
| A1001 | RXXX0016 | Remote receiver | HS0038 |
| A101 | T9XX0330C | Tuner | TDV-3S7-9 470M |
| SW1001 | KXXX0101 | Touch switch | PUSH SW.(L:5mm) |
| SW1002 | KXXX0101 | Touch switch | PUSH SW.(L:5mm) |
| SW1003 | KXXX0101 | Touch switch | PUSH SW.(L:5mm) |
| SW1004 | KXXX0101 | Touch switch | PUSH SW.(L:5mm) |
| SW1005 | KXXX0101 | Touch switch | PUSH SW.(L:5mm) |
| SW1006 | KXXX0101 | Touch switch | PUSH SW.(L:5mm) |
| Z901 | XC0004XX-A | XTLO | 8.0M(20P) |
| | FXXX0020 | IRICO | 37SX110Y22-DC05 |

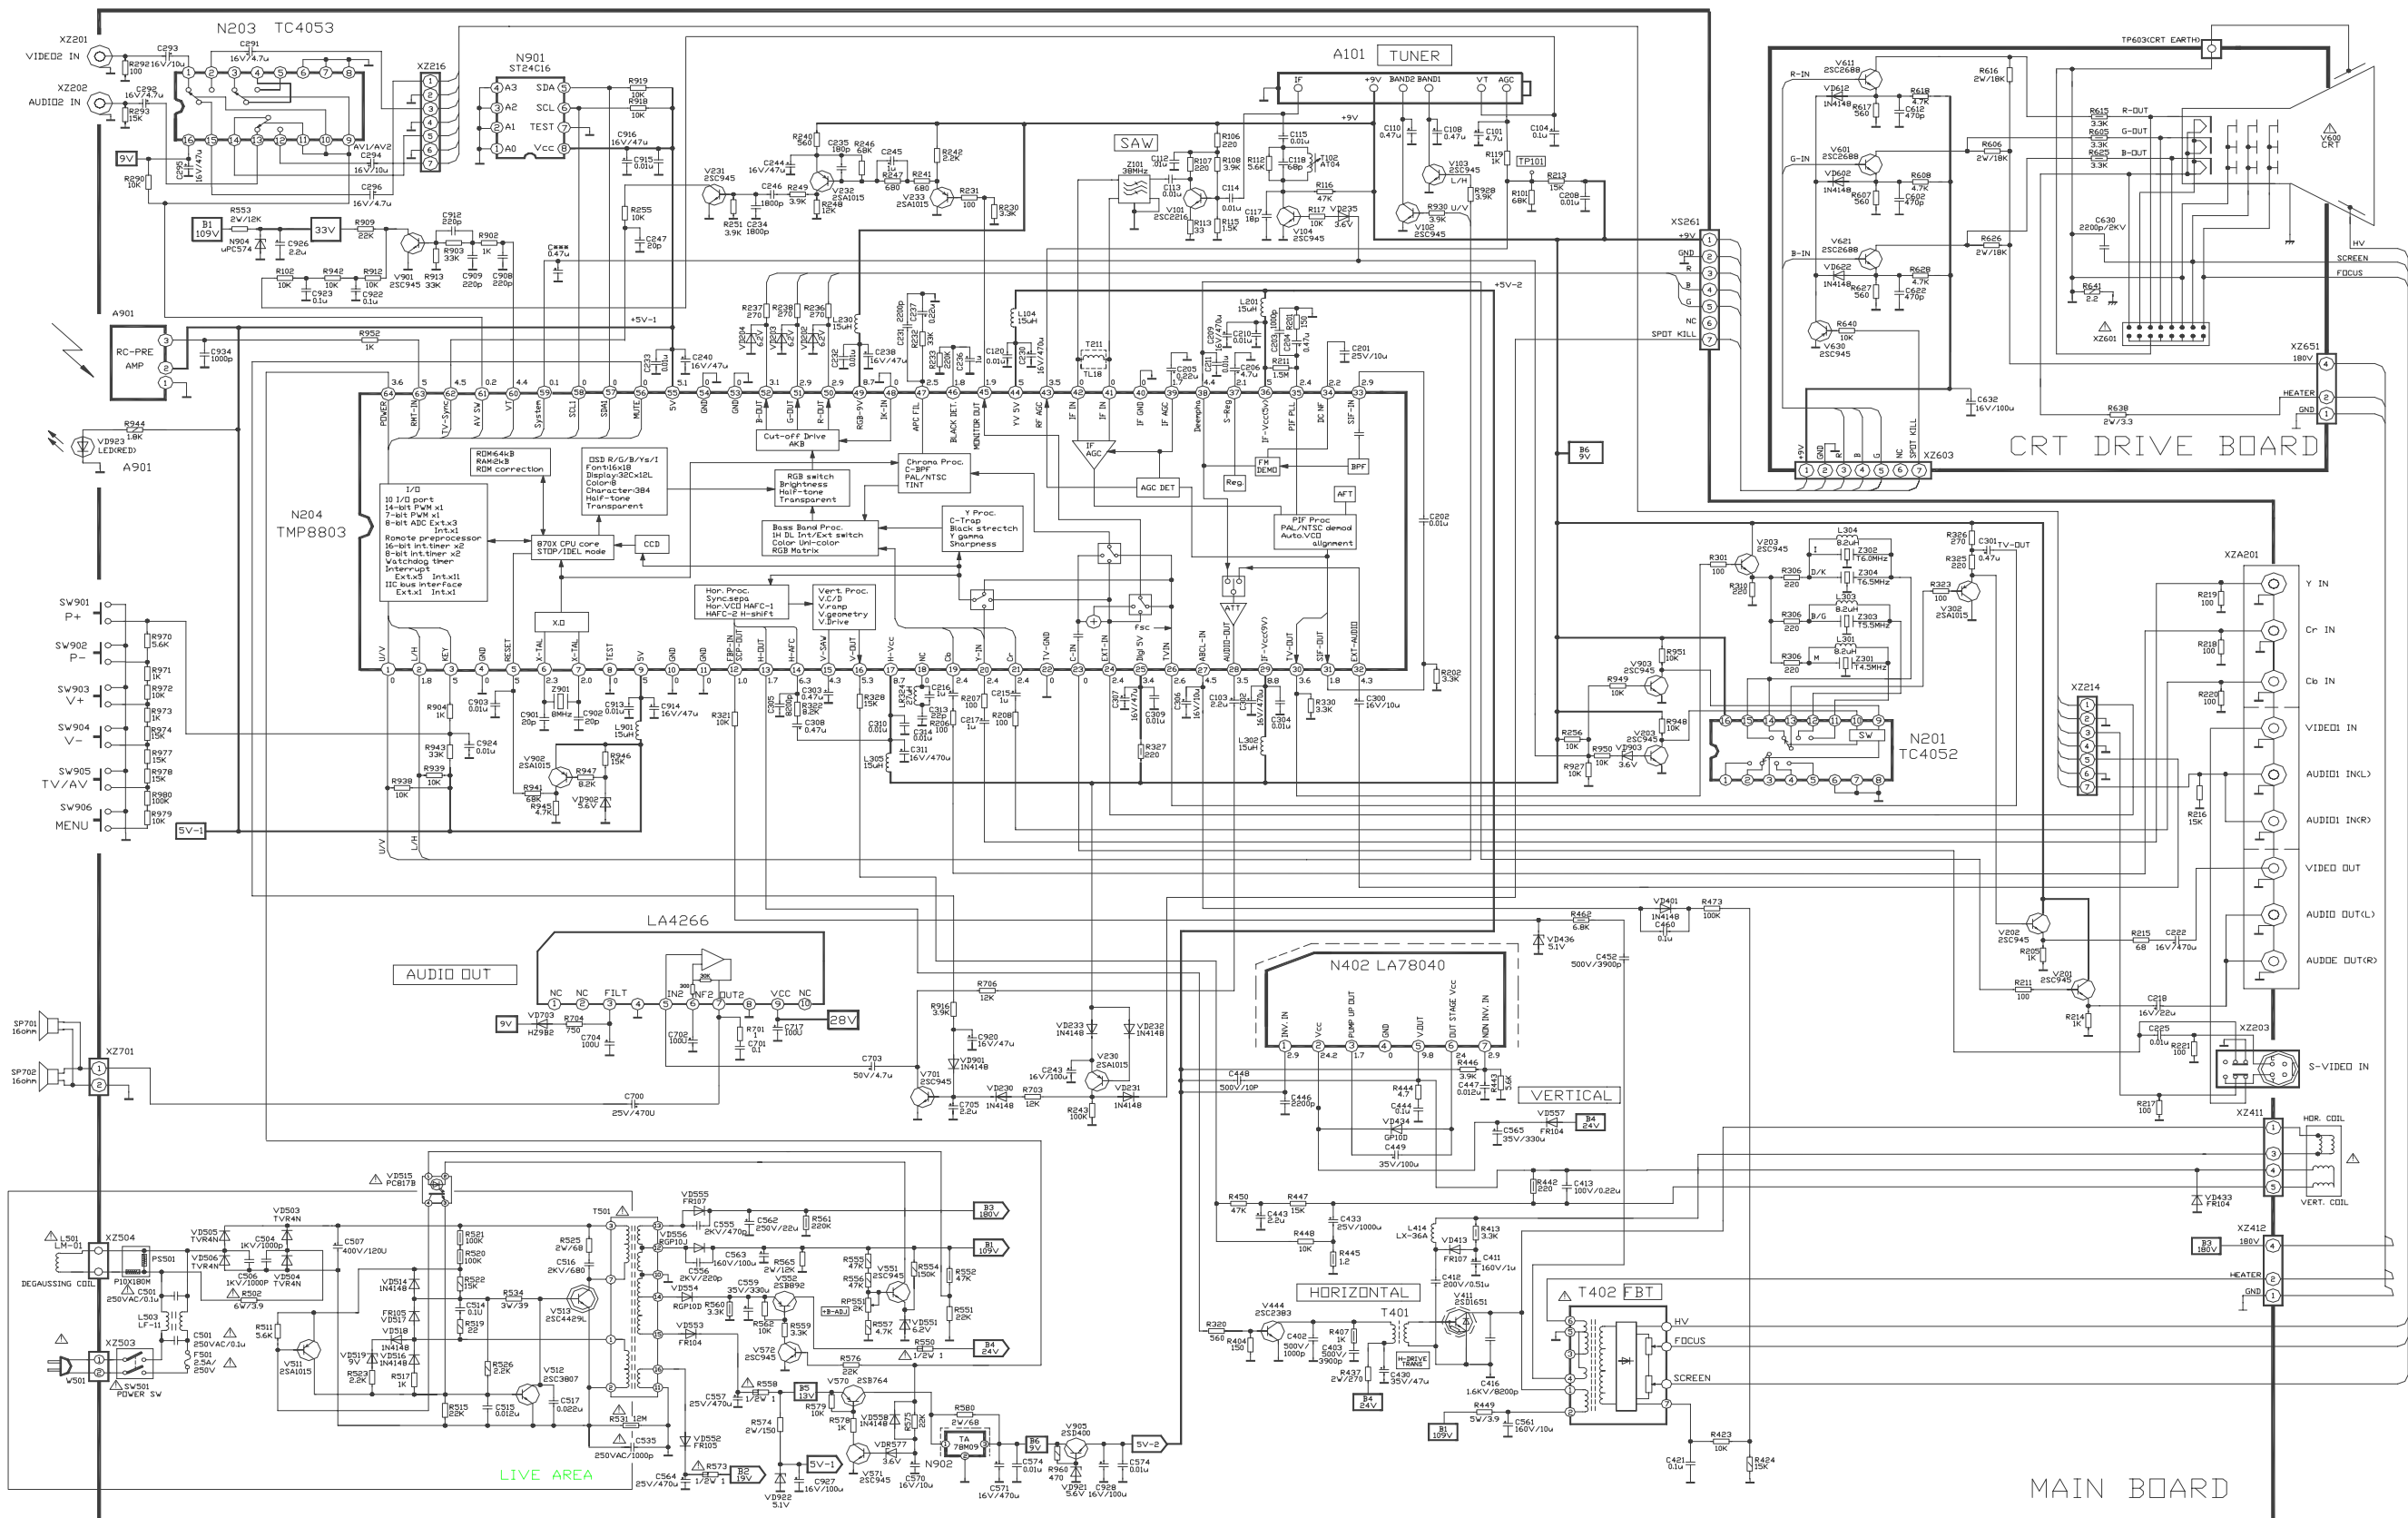

Circuit diagram