

# TD-SCDMA Measurement

Radio Communication Analyzer MT8820B/MT8820C/MT8821C

## Revision History

Ver. No	Date	Contents	Related product software version
1.00	July 2015	MT8820B/20C/21C TD-SCDMA Application Note (Ver 1.00) succeeded MT8820B/C TD-SCDMA Application Note (Ver 4.00). Overall: Changed model name from MT8820B/C to "unit" Added software specification for MT8821C	MX882007C Ver23.01 MX882107C Ver30.00

# Contents

<b>1. TD-SCDMA Measurement Software .....</b>	<b>4</b>
1.1. SPECIFICATIONS .....	4
1.1.1. For MT8820B/20C .....	4
1.1.2. For MT8821C .....	7
1.2. 3GPP MEASUREMENT SPECIFICATION (3GPP TS 34.122 V11.5.0) TABLE .....	11
1.3. TRX MEASUREMENT (FUNDAMENTAL MEASUREMENT) .....	14
1.3.1. Test Loop Mode Connection (Single Code) .....	14
1.3.2. Test Loop Mode Disconnection .....	14
1.3.3. Switching Channel Coding during Connection .....	14
1.3.4. Channel Switching by Handover .....	15
1.3.5. Switching Channel and Channel Coding (Single Code/Multi Code) by Handover .....	15
1.3.6. Test Item Selection .....	15
1.3.7. 5.2 User Equipment maximum output power .....	16
1.3.8. 5.3 UE frequency stability .....	16
1.3.9. 5.4.2 Minimum output power .....	17
1.3.10. 5.4.3 Transmit OFF power, 5.4.4 Transmit ON/OFF Time mask .....	17
1.3.11. 5.5.1 Occupied bandwidth .....	18
1.3.12. 5.5.2.1 Spectrum emission mask .....	18
1.3.13. 5.5.2.2 Adjacent Channel Leakage power Ratio (ACLR) .....	19
1.3.14. 5.7.1 Error Vector Magnitude .....	19
1.3.15. 5.7.2 Peak code domain error .....	20
1.3.16. 6.2 Reference sensitivity level .....	20
1.3.17. Reduction of measurement time by batch processing .....	21
1.4. OPEN LOOP POWER CONTROL MEASUREMENT .....	22
1.4.1. 5.4.1 Open Loop Power Control in the Uplink (RX-middle) .....	22
1.4.2. 5.4.1 Open Loop Power Control in the Uplink (RX Upper dynamic end) .....	22
1.4.3. 5.4.1 Open Loop Power Control in the Uplink (RX-Sensitivity level) .....	23
1.4.4. Continuous measurement of Open Loop Power Control .....	23
1.5. CLOSED LOOP POWER CONTROL MEASUREMENT (AUTOMATIC MEASUREMENT) .....	24
1.5.1. 5.4.1.4 Closed loop power control .....	24
1.6. OTHER MEASUREMENT .....	25
1.6.1. 5.4.5 Out-of-synchronisation handling of output power for continuous transmission .....	25
1.6.2. 5.4.6 Out-of-synchronisation handling of output power for discontinuous transmission .....	25
1.6.3. 6.3 Maximum Input Level .....	26
1.6.4. 6.8 Spurious Emissions .....	26
1.6.5. 7.2 Demodulation in static propagation conditions .....	27
1.7. HSDPA MEASUREMENT .....	28
1.7.1. HSDPA RMC Connection .....	28
1.7.2. HSDPA RMC Disconnection .....	28
1.7.3. Switching HSDPA Data Rate during connection .....	28
1.7.4. 5.2B User Equipment maximum output power with HS-SICH and DPCH .....	29
1.7.5. 5.5.2.1B Spectrum emission mask .....	30
1.7.6. 5.5.2.2B Adjacent Channel Leakage power Ratio (ACLR) with HS-SICH and DPCH .....	30
1.7.7. 5.7.1B Error Vector Magnitude with HS-SICH and DPCH .....	31

1.7.8. 6.3A Maximum Input Level for HS-PDSCH Reception (16QAM) .....	31
1.7.9. 9.3.3 Reporting of HS-DSCH Channel Quality Indicator (2.8 Mbps UE) .....	32
1.8. HSUPA MEASUREMENT .....	33
1.8.1. HSUPA RMC Connection .....	33
1.8.2. HSUPA RMC Disconnection .....	33
1.8.3. 5.2A User Equipment maximum output power with E-DCH.....	34
1.8.4. 5.5.2.1A Spectrum emission mask .....	34
1.8.5. 5.5.2.2A Adjacent Channel Leakage power Ratio (ACLR) with E-DCH .....	35
1.8.6. 5.7.1A Error Vector Magnitude with E-DCH 16QAM .....	35
1.8.7. 11.1 Detection of E-DCH HARQ ACK Indicator Channel (E-HICH).....	36
1.8.8. 11.2 Demodulation of E-DCH Absolute Grant Channel (E-AGCH) .....	37
1.9. UE REPORT .....	37
1.10. OTHERS .....	38
1.10.1. Calibration.....	38
1.10.2. External Loss.....	39

# 1. TD-SCDMA Measurement Software

## 1.1. Specifications

### 1.1.1. For MT8820B/20C

**Table 1.1.1-1 Specifications for MX882007C TD-SCDMA Measurement Software**

Item	Specifications	
Electrical characteristics	Typical values (typ.) are only for reference and are not guaranteed.	
Frequency/Modulation measurement	Frequency	300 to 2700 MHz
	Input level	-40 to +35 dBm (Main)
	Carrier frequency accuracy	$\pm(\text{Set frequency} \times \text{Reference oscillator accuracy} + 10 \text{ Hz})$
	Modulation accuracy	
	Residual vector error	$\leq 2.5\%$ (when Single Code is input )
Amplitude measurement	Frequency	300 to 2700 MHz
	Input level	-70 to +35 dBm (Main)
	Measurement accuracy	MT8820B/MT8815B $\pm 0.5 \text{ dB}$ (-25 to +35 dBm), $\pm 0.7 \text{ dB}$ (-55 to -25 dBm), $\pm 0.9 \text{ dB}$ (-70 to -55 dBm), after calibration
		MT8820C $\pm 0.5 \text{ dB}$ (-25 to +35 dBm), typ. $\pm 0.3 \text{ dB}$ (-20 to +35 dBm), $\pm 0.7 \text{ dB}$ (-55 to -25 dBm), $\pm 0.9 \text{ dB}$ (-60 to -55 dBm), 10 to 40°C after calibration
	Linearity	$\pm 0.2 \text{ dB}$ (-40 to 0 dB, $\geq -55 \text{ dBm}$ ), $\pm 0.4 \text{ dB}$ (-40 to 0 dB, $\geq -65 \text{ dBm}$ ),
	Measurement object	DPCH, UpPCH
Occupied bandwidth	Frequency	300 to 2700 MHz
	Input level	-10 to +35 dBm (Main)
Adjacent channel leakage power	Frequency	300 to 2700 MHz
	Input level	-10 to +35 dBm (Main)
	Measurement point	$\pm 1.6 \text{ MHz}$ , $\pm 3.2 \text{ MHz}$
	Measurement range	$\geq 50 \text{ dB}$ ( $\pm 1.6 \text{ MHz}$ ), $\geq 55 \text{ dB}$ ( $\pm 3.2 \text{ MHz}$ )
RF signal generator	Output frequency	300 to 2700 MHz (1 Hz steps)
	Channel level (DPCH)	-30.0 to 0.0 dB (0.1 dB steps, Relative level with Ior (Total power))
	Channel level accuracy	$\pm 0.2 \text{ dB}$ (Relative level accuracy with Ior)
	AWGN level	Off, -20 to +5 dB (0.1 dB steps, Relative level with Ior (Total power))
	AWGN level accuracy	$\pm 0.2 \text{ dB}$ (Relative level accuracy with Ior)

**Table 1.1.1-1 Specifications for MX882007C TD-SCDMA Measurement Software (Cont'd)**

Item	Specifications	
Error rate measurement	Function	Applying PN9 or PN15 pattern to DTCH
	Measurement item	BER, BLER
	BER measurement object	Loop Back data applied to uplink DTCH
	BLER measurement object	Loop Back data applied to uplink DTCH
Call processing	Call control	Location registration, call origination, call termination, hand-over, network-side release, UE-side release (Execution of the operation conforming to the 3GPP standard and pass/fail judgement can be performed.)
	UE Control	Output level, loopback (UE control conforming to the 3GPP standard can be performed.)

**Table 1.1.1-2 Specifications for MX882007C-011 TD-SCDMA HSDPA Measurement Software**

Item	Specifications	
Function	RF tests (Rx measurement) related to HSDPA	
Reference channel	Transferring	RMC 0.5Mbps UE Class (QPSK), RMC 1.1Mbps UE Class (QPSK), RMC 1.1Mbps UE Class (16QAM), RMC 1.6Mbps UE Class (QPSK), RMC 1.6Mbps UE Class (16QAM), RMC 2.2Mbps UE Class (QPSK), RMC 2.2Mbps UE Class (16QAM), RMC 2.8Mbps UE Class (QPSK), and RMC 2.8Mbps UE Class (16QAM)
Throughput measurement	Function	Throughput measurement using RMC
	Measurement item	Throughput
	Measurement object	ACK and NACK applied to HS-SICH
CQI measurement	Measurement object	Periodically reported CQI (RTBS, RMF) value applied to HS-SICH
Call processing	Call control:	Location registration, Call processing using RMC (Execution of the operation conforming to the 3GPP standard and pass/fail judgment can be performed.)
	UE control	Output level (UE control conforming to the 3GPP standard can be performed.)

**Table 1.1.1-3 Specifications for MX882007C-012 TD-SCDMA HSDPA Evolution Measurement Software**

Item	Specifications	
Function	RF tests (Rx measurement) related to HSDPA Evolution	
Reference channel	Transferring	RMC Category 16-18UE(64QAM), RMC Category 19-21UE(64QAM), RMC Category 22-24UE(64QAM), RMC Category 18 Max, RMC Category 21 Max, and RMC Category 24 Max,
Throughput measurement	Function Measurement item Measurement object	Throughput measurement using RMC Throughput ACK and NACK applied to HS-SICH
CQI measurement	Measurement object	Periodically reported CQI value applied to HS-SICH
Call processing	Call control:  UE control	Location registration, Call processing using RMC (Execution of the operation conforming to the 3GPP standard and pass/fail judgment can be performed.)  Output level (UE control conforming to the 3GPP standard can be performed.)

**Table 1.1.1-4 Specifications for MX882007C-021 TD-SCDMA HSUPA Measurement Software**

Item	Specifications	
Function	RF tests (Tx measurement) related to HSUPA	
Modulation measurement	This item depends on the MX882007C's performance.	
Call processing	Call control  UE control	Location registration, Call processing using FRC1, FRC2 (Execution of the operation conforming to the 3GPP standard and pass/fail judgment can be performed.)  Output level (UE control conforming to the 3GPP standard can be performed.)

### 1.1.2. For MT8821C

**Table 1.1.2-1 Specifications for MX882107C TD-SCDMA Measurement Software**

Item	Specifications	
Electrical characteristics	Typical values (typ.) are only for reference and are not guaranteed.	
Frequency/Modulation measurement	Frequency	350 to 2700 MHz For the frequencies below 500 MHz, only the following range meets the specifications: 452.5 to 457.5 MHz (LTE OperatingBand31)
	Input level	-30 to +35 dBm (Main1/2)
	Carrier frequency accuracy	$\pm(\text{Set frequency} \times \text{Reference oscillator accuracy} + 10 \text{ Hz})$
	Modulation accuracy	
	Residual vector error	$\leq 2.5\%$ (when Single Code is input)
Amplitude measurement	Frequency	350 to 2700 MHz For the frequencies below 500 MHz, only the following range meets the specifications: 452.5 to 457.5 MHz (LTE OperatingBand31)
	Input level	-70 to +35 dBm (Main1/2)
	Measurement accuracy	$\pm 0.5 \text{ dB}$ (-30 to +35 dBm), typ. $\pm 0.3 \text{ dB}$ (-30 to +35 dBm), $\pm 0.7 \text{ dB}$ (-55 to -30 dBm), $\pm 0.9 \text{ dB}$ (-70 to -55 dBm), 10 to 40°C after calibration
	Linearity	$\pm 0.2 \text{ dB}$ (-40 to 0 dB, $\geq -50 \text{ dBm}$ ), $\pm 0.4 \text{ dB}$ (-40 to 0 dB, $\geq -60 \text{ dBm}$ ), 400 to 6000 MHz
	Measurement object	DPCH, UpPCH
Occupied bandwidth	Frequency	350 to 2700 MHz For the frequencies below 500 MHz, only the following range meets the specifications: 452.5 to 457.5 MHz (LTE OperatingBand31)
	Input level	-10 to +35 dBm (Main1/2)
Adjacent channel leakage power	Frequency	350 to 2700 MHz For the frequencies below 500 MHz, only the following range meets the specifications: 452.5 to 457.5 MHz (LTE OperatingBand31)
	Input level	-10 to +35 dBm (Main1/2)
	Measurement point	$\pm 1.6 \text{ MHz}$ , $\pm 3.2 \text{ MHz}$
	Measurement range	$\geq 50 \text{ dB}$ ( $\pm 1.6 \text{ MHz}$ ), $\geq 55 \text{ dB}$ ( $\pm 3.2 \text{ MHz}$ )

**Table 1.1.2-1 Specifications for MX882107C TD-SCDMA Measurement Software(Cont'd)**

Item	Specifications	
RF signal generator	Output frequency Channel level (DPCH) Channel level accuracy AWGN level AWGN level accuracy	300 to 2700 MHz (1 Hz steps) -30.0 to 0.0 dB (0.1 dB steps, Relative level with Ior (Total power)) ±0.2 dB (Relative level accuracy with Ior) Off, -20 to +5 dB (0.1 dB steps, Relative level with Ior (Total power)) ±0.2 dB (Relative level accuracy with Ior)
Error rate measurement	Function Measurement item BER measurement object BLER measurement object	Applying PN9 or PN15 pattern to DTCH BER, BLER Loop Back data applied to uplink DTCH Loop Back data applied to uplink DTCH
Call processing	Call control UE Control	Location registration, call origination, call termination, hand-over, network-side release, UE-side release (Execution of the operation conforming to the 3GPP standard and pass/fail judgement can be performed.) Output level, loopback (UE control conforming to the 3GPP standard can be performed.)



**Table 1.1.2-2 Specifications for MX882107C-011 TD-SCDMA HSDPA Measurement Software**

Item	Specifications	
Function	RF tests (Rx measurement) related to HSDPA	
Reference channel	Transferring	RMC 0.5Mbps UE Class (QPSK), RMC 1.1Mbps UE Class (QPSK), RMC 1.1Mbps UE Class (16QAM), RMC 1.6Mbps UE Class (QPSK), RMC 1.6Mbps UE Class (16QAM), RMC 2.2Mbps UE Class (QPSK), RMC 2.2Mbps UE Class (16QAM), RMC 2.8Mbps UE Class (QPSK), and RMC 2.8Mbps UE Class (16QAM)
Throughput measurement	Function Measurement item Measurement object	Throughput measurement using RMC Throughput ACK and NACK applied to HS-SICH
CQI measurement	Measurement object	Periodically reported CQI (RTBS, RMF) value applied to HS-SICH
Call processing	Call control:  UE control	Location registration, Call processing using RMC (Execution of the operation conforming to the 3GPP standard and pass/fail judgment can be performed.)  Output level (UE control conforming to the 3GPP standard can be performed.)

**Table 1.1.2-3 Specifications for MX882107C-012 TD-SCDMA HSDPA Evolution Measurement Software**

Item	Specifications	
Function	RF tests (Rx measurement) related to HSDPA Evolution	
Reference channel	Transferring	RMC Category 16-18UE(64QAM), RMC Category 19-21UE(64QAM), RMC Category 22-24UE(64QAM), RMC Category 18 Max, RMC Category 21 Max, and RMC Category 24 Max,
Throughput measurement	Function Measurement item Measurement object	Throughput measurement using RMC Throughput ACK and NACK applied to HS-SICH
CQI measurement	Measurement object	Periodically reported CQI (RTBS) value applied to HS-SICH
Call processing	Call control:  UE control	Location registration, Call processing using RMC (Execution of the operation conforming to the 3GPP standard and pass/fail judgment can be performed.)  Output level (UE control conforming to the 3GPP standard can be performed.)

**Table 1.1.2-4 Specifications for MX882107C-021 TD-SCDMA HSUPA Measurement Software**

Item	Specifications	
Function	RF tests (Tx measurement) related to HSUPA	
Modulation measurement	This item depends on the MX882107C's performance.	
Call processing	Call control	Location registration, Call processing using FRC1, FRC2 (Execution of the operation conforming to the 3GPP standard and pass/fail judgment can be performed.)
	UE control	Output level (UE control conforming to the 3GPP standard can be performed.)

## 1.2. 3GPP Measurement Specification (3GPP TS 34.122 V11.5.0) Table

	Item	Comment	
<b>5</b>	<b>Transmitter Characteristics</b>		
5.2	User Equipment maximum output power		√√
5.2A	User Equipment maximum output power with E-DCH	MX882007C-021 MX882107C-021	√√
5.2B	User Equipment maximum output power with HS-SICH and DPCH	MX882007C-011 MX882107C-011	√√
5.3	UE frequency stability		√√
<b>5.4</b>	<b>Output Power Dynamics</b>		
5.4.1.3	Open loop power control		√√
5.4.1.4	Closed loop power control		√√
5.4.2	Minimum output power		√√
5.4.3	Transmit OFF power		√√
5.4.4	Transmit ON/OFF Time mask		√√
5.4.5	Out-of-synchronisation handling of output power for continuous transmission		√√
5.4.6	Out-of-synchronisation handling of output power for discontinuous transmission		√√
<b>5.5</b>	<b>Output RF spectrum emissions</b>		
5.5.1	Occupied bandwidth		√√
5.5.2	Out of band emission		
5.5.2.1	Spectrum emission mask		√√
5.5.2.1A	Spectrum emission mask	MX882007C-021 MX882107C-021	√√
5.5.2.1B	Spectrum emission mask	MX882007C-011 MX882107C-011	√√
5.5.2.2	Adjacent Channel Leakage power Ratio (ACLR)		√√
5.5.2.2A	Adjacent Channel Leakage power Ratio (ACLR) with E-DCH	MX882007C-021 MX882107C-021	√√
5.5.2.2B	Adjacent Channel Leakage power Ratio (ACLR) with HS-SICH and DPCH	MX882007C-011 MX882107C-011	√√
5.5.3	Spurious Emissions	Requires SPA	√
5.6	Transmit Intermodulation	Requires SG and SPA	√
<b>5.7</b>	<b>Transmit Modulation</b>		
5.7.1	Error Vector Magnitude		√√
5.7.1A	Error Vector Magnitude with E-DCH 16QAM	MX882007C-021 MX882107C-021	√√
5.7.1B	Error Vector Magnitude with HS-SICH and DPCH	MX882007C-011 MX882107C-011	√√
5.7.2	Peak code domain error		√√
<b>6</b>	<b>Receiver Characteristics</b>		
6.2	Reference sensitivity level		√√
6.3	Maximum Input Level		√√
6.3A	Maximum Input Level for HS-PDSCH Reception (16QAM)	MX882007C-011 MX882107C-011	√√
6.4	Adjacent Channel Selectivity (ACS)	Requires SG	√
6.5	Blocking Characteristics	Requires SG	√
6.6	Spurious Response	Requires SG	√
6.7	Intermodulation Characteristics	Requires SG	√
6.8	Spurious Emissions	Requires SPA	√
<b>7</b>	<b>Performance Requirements</b>		
7.2	Demodulation in static propagation conditions	Requires SG	√
7.3	Demodulation of DCH in multipath fading conditions		
7.3.1	Multipath fading Case 1	Requires Fading	√

		Simulator and SG	
7.3.2	Multipath fading Case 2	Requires Fading Simulator and SG	√
7.3.3	Multipath fading Case 3	Requires Fading Simulator and SG	√
7.5	Power control in downlink	Requires Fading Simulator and SG	√
<b>9</b>	<b>Performance requirements for HSDPA</b>		
9.3	Performance <b>Requirements</b> for 1.28 Mcps TDD option		
9.3.1	HS-DSCH Throughput for Fixed Reference Channels		
9.3.1A	HS-DSCH throughput for Fixed Reference Channels 0.5 Mbps UE class QPSK	MX882007C-011 MX882107C-011 Requires Fading Simulator	√
9.3.1B	HS-DSCH throughput for Fixed Reference Channels 1.1 Mbps UE class 16QAM	MX882007C-011 MX882107C-011 Requires Fading Simulator	√
9.3.1C	HS-DSCH throughput for Fixed Reference Channels 1.6 Mbps UE class QPSK/16QAM	MX882007C-011 MX882107C-011 Requires Fading Simulator	√
9.3.1D	HS-DSCH throughput for Fixed Reference Channels 2.2 Mbps UE class QPSK/16QAM	MX882007C-011 MX882107C-011 Requires Fading Simulator	√
9.3.1E	HS-DSCH throughput for Fixed Reference Channels 2.8 Mbps UE class QPSK/16QAM	MX882007C-011 MX882107C-011 Requires Fading Simulator	√
9.3.2	HS-DSCH Throughput for Variable Reference Channels		
9.3.2A	HS-DSCH throughput for Variable Reference Channels 0.5 Mbps UE class	MX882007C-011 MX882107C-011 Requires Fading Simulator	√
9.3.2B	HS-DSCH throughput for Variable Reference Channels 1.1 Mbps UE class	MX882007C-011 MX882107C-011 Requires Fading Simulator	√
9.3.2C	HS-DSCH throughput for Variable Reference Channels 1.6 Mbps UE class	MX882007C-011 MX882107C-011 Requires Fading Simulator	√
9.3.2D	HS-DSCH throughput for Variable Reference Channels 2.2 Mbps UE class	MX882007C-011 MX882107C-011 Requires Fading Simulator	√
9.3.2E	HS-DSCH throughput for Variable Reference Channels 2.8 Mbps UE class	MX882007C-011 MX882107C-011 Requires Fading Simulator	√
9.3.3	Reporting of HS-DSCH Channel Quality Indicator		
9.3.3A	Reporting of HS-DSCH Channel Quality Indicator-0.5 Mbps UE class	MX882007C-011 MX882107C-011 Requires Fading Simulator	√

9.3.3B	Reporting of HS-DSCH Channel Quality Indicator-1.1 Mbps UE class	MX882007C-011 MX882107C-011 Requires Fading Simulator	√
9.3.3C	Reporting of HS-DSCH Channel Quality Indicator-1.6 Mbps UE class	MX882007C-011 MX882107C-011 Requires Fading Simulator	√
9.3.3D	Reporting of HS-DSCH Channel Quality Indicator-2.2 Mbps UE class	MX882007C-011 MX882107C-011 Requires Fading Simulator	√
9.3.3E	Reporting of HS-DSCH Channel Quality Indicator-2.8 Mbps UE class	MX882007C-011 MX882107C-011 Requires Fading Simulator	√
9.3.4	HS-SCCH Detection Performance	MX882007C-011 MX882107C-011 Requires Fading Simulator	√
<b>11</b>	<b>Performance Requirement (E-DCH)</b>		
11.1	Detection of E-DCH HARQ ACK Indicator Channel (E-HICH)	MX882007C-021 MX882107C-021 Requires Fading Simulator	√
11.2	Demodulation of E-DCH Absolute Grant Channel (E-AGCH)	MX882007C-021 MX882107C-021 Requires Fading Simulator	√

√/: Support | √/: Requires external equipment (SPA or SG) | F: Future Support | -: Not Support

## 1.3. TRX Measurement (Fundamental Measurement)

Hereafter, control software is presupposed created by GPIB. See operation manual for details of GPIB commands and manual operations. GPIB commands are written in red. UE power class is presupposed 2.

### 1.3.1. Test Loop Mode Connection (Single Code)

Measurement is performed by connecting to Test Loop Mode1. The connection procedures are below. Start from step 4 when location registration is already executed.

1. Execute **PRESET** to set default parameter.
2. Turn on UE power.
3. Execute **CALLSTAT?** and wait until the response becomes 2(=Idle(Regist)).
4. Execute **CALLSA** to connect to Test Loop Mode1.
5. Execute **CALLSTAT?** and wait until the response becomes 7(=Test Loop Mode).

#### Call Status can be confirmed using **CALLSTATIC?**.

The confirmation procedures using **CALLSTATIC?** are below.

1. Execute **PRESET** to set default parameter.
2. Turn on UE power.
3. Execute **CALLSTATIC?** to check Call Status. When Call Status will be 2(=Idle(Regist)), the response will be returned.
4. Execute **CALLSA** to connect to Test Loop Mode1.
5. Execute **CALLSTATIC?** to check Call Status. When Call Status will be 7(=Test Loop Mode), the response will be returned.

### 1.3.2. Test Loop Mode Disconnection

1. Execute **CALLSO** to disconnect from Test Loop Mode1.
2. Execute **CALLSTAT?** and wait until the response becomes 2(=Idle(Regist)).

The confirmation procedures using **CALLSTATIC?** are below.

1. Execute **CALLSO** to disconnect from Test Loop Mode1.
2. Execute **CALLSTATIC?** to check Call Status. When Call Status will be 2(=Idle(Regist)), the response will be returned.

### 1.3.3. Switching Channel Coding during Connection

Channel Coding can be switched during Connection. The switching procedures are below.

1. Connect to Test Loop Mode1.
2. Execute **CHCODING RMC\_SINGLE** to set Channel Coding to RMC (Single Code).
3. Execute TRX measurement.
4. Execute **CHCODING RMC\_MULTI** to set Channel Coding to RMC (Multi Code).
5. Execute TRX measurement.

### 1.3.4. Channel Switching by Handover

Measurement is normally performed at three frequency points (L, M and H). Channel can be switched quickly without reconnection by changing it at handover. Output Level must be set higher to avoid failing handover. Also, the GPIB commands, which transmitted during handover, stand by until the handover ends.

1. Execute TRX measurement at L channel.
2. Execute **CHAN 10087** to handover to M channel.
3. Execute TRX measurement.
4. Execute **CHAN 10121** to handover to H channel.
5. Execute TRX measurement.

### 1.3.5. Switching Channel and Channel Coding (Single Code/Multi Code) by Handover

Measurement is normally performed at three frequency points (L, M and H) and Channel Coding (Single Code or Multi Code). Channel and Channel Coding can be switched quickly without reconnection by changing it at handover. Output Level must be set higher to avoid failing handover. Also, the GPIB commands, which transmitted during handover, stand by until the handover ends.

1. Execute **HO 10053, RMC\_SINGLE** to handover to L channel and Single Code.
2. Execute TRX measurement.
3. Execute **HO 10053, RMC\_MULTI** to handover to L channel and Multi Code.
4. Execute TRX measurement.
5. Execute **HO 10087, RMC\_SINGLE** to handover to M channel and Single Code.
6. Execute TRX measurement.
7. Execute **HO 10087, RMC\_MULTI** to handover to M channel and Multi Code.
8. Execute TRX measurement.
9. Execute **HO 10121, RMC\_SINGLE** to handover to H channel and Single Code.
10. Execute TRX measurement.
11. Execute **HO 10121, RMC\_MULTI** to handover to H channel and Multi Code.
12. Execute TRX measurement.

### 1.3.6. Test Item Selection

All measurement items are turned on in the default setting of this instrument. In order to reduce measurement time, unnecessary items, such as BER and BLER measurements, should be turned off (**BER\_MEAS OFF, BLER\_MEAS OFF**) before measurement.

All measurement items can be turned off when setting **ALLMEASITEMS\_OFF**.

### 1.3.7. 5.2 User Equipment maximum output power

1. Connect to Test Loop Mode1.
2. Execute **CHCODING RMC\_SINGLE** to set Channel Coding to RMC (Single Code).
3. Execute **TESTPRM CALL\_MAXPWR** to set Test Parameter to Call – Maximum Output Power.
4. Wait until UE power reaches the maximum.
5. Execute **PWR\_AVG 20** to set the average count of power measurement at 20 times.
6. Execute **SWP** to perform power measurement.
7. Execute **AVG\_POWER?** to read the power measurement result.
8. Check the measurement result is +24 dBm(+1.7 dB/-3.7 dB).
9. Execute **CHCODING RMC\_MULTI** to set Channel Coding to RMC (Multi Code).
10. Execute **SWP** to perform power measurement.
11. Execute **AVG\_POWER?** to read power measurement result.
12. Check the measurement result is +21 dBm(+1.7 dB/-3.7 dB).

Power Measurement		(Meas. Count : 20 / 20)			
	Avg.	Max.	Min.	Limit	
TX Power	25.13	25.18	24.98		20.3 to 25.7 dBm
RRC Filtered Power	24.90	24.95	24.74		dBm
Judgement	Pass				

**TX Power corresponds to Mean Power (2MHz band).**

### 1.3.8. 5.3 UE frequency stability

1. Connect to Test Loop Mode1.
2. Execute **CHCODING RMC\_SINGLE** to set Channel Coding to RMC (Single Code).
3. Execute **TESTPRM CALL\_BERSENS** to set Test Parameter to Call – BER (Reference Sensitivity Level).
4. Wait until UE power reaches the maximum.
5. Execute **FREQ\_AVG 200** to set the average count of Frequency measurement at 200 times.
6. Execute **SWP** to perform Frequency measurement.
7. Execute **MAXABS\_CARRFERR? PPM** to read Frequency Error measurement result.
8. Check the measurement result is lower than (0.1 ppm + 10 Hz).

Frequency Error		(Meas. Count : 200 / 200)			
	Avg.	Max.	Min.	Limit	
Carrier Frequency	2010.800016				MHz
Carrier Frequency Error	0.0180	0.0360	-0.0020		kHz
	0.01	0.02	0.00		ppm
Judgement	Pass				
					≤ 0.1ppm+10Hz



### 1.3.9. 5.4.2 Minimum output power

1. Connect to Test Loop Mode1.
2. Execute **CHCODING RMC\_SINGLE** to set Channel Coding to RMC (Single Code).
3. Execute **TESTPRM CALL\_MINPWR** to set Test Parameter to Call – Minimum Output Power.
4. Wait until UE power reaches the minimum.
5. Execute **PWR\_AVG 20** to set the average count of power measurement at 20 times.
6. Execute **SWP** to perform Power measurement.
7. Execute **AVG\_POWER?** to read the measurement result.
8. Check the measurement result is lower than -48 dBm.

Power Measurement		(Meas. Count : 20 / 20)			
	Avg.	Max.	Min.	Limit	
TX Power	-51.14	-50.92	-51.31	-99.9 to -48.0	dBm
RRC Filtered Power	-52.12	-51.86	-52.31		dBm
Judgement	Pass				

### 1.3.10. 5.4.3 Transmit OFF power, 5.4.4 Transmit ON/OFF Time mask

1. Connect to Test Loop Mode1.
2. Execute **CHCODING RMC\_SINGLE** to set Channel Coding to RMC (Single Code).
3. Execute **TESTPRM CALL\_OFFPWR** to set Test Parameter to Call – Off Power.
4. Wait until UE power reaches the maximum.
5. Execute **PWRTEMP\_AVG 20** to set the average count of Power Template measurement at 20 times.
6. Execute **SWP** to perform Power Template measurement.
7. Execute **POWERPASS?** to read Power Template measurement result.
8. Check the measurement result is PASS.

Power Template		(Meas. Count : 20 / 20)			
	Avg.	Max.	Min.	Limit	
Off Power (TS s-1)	-76.50	-73.70	-79.27	$\leq -63.5$	dBm
Off Power (TS s+1)	-76.76	-73.77	-81.68	$\leq -63.5$	dBm
-50dBm	-79.50	-74.76	-86.17	$\leq -50.0$	dBm
Template Judgement	Pass				

**Transmit OFF Power is measured with lower Input Level to avoid the effect of floor noise. Although the measurement status is Level Over, it does not affect the measurement result.**

### 1.3.11. 5.5.1 Occupied bandwidth

1. Connect to Test Loop Mode1.
2. Execute **CHCODING RMC\_SINGLE** to set Channel Coding to (Single Code).
3. Execute **TESTPRM CALL\_MAXPWR** to set Test Parameter to Call - Maximum Output Power.
4. Wait until UE power reaches the maximum.
5. Execute **OBW\_AVG 20** to set the average count of OBW measurement at 20 times.
6. Execute **SWP** to perform OBW measurement.
7. Execute **OBW?** to read OBW measurement result.
8. Check the measurement result is lower than 1.6MHz.

Occupied Bandwidth		View	(Meas. Count : 20 / 20)	
OBW	1.365	MHz	Limit	≤ 1.6 MHz
Upper Frequency	0.697	MHz		
Lower Frequency	-0.667	MHz		
Center (Upper+Lower) / 2	2010.815	MHz		
Judgement	Pass			

### 1.3.12. 5.5.2.1 Spectrum emission mask

1. Connect to Test Loop Mode1.
2. Execute **CHCODING RMC\_SINGLE** to set Channel Coding to (Single Code).
3. Execute **TESTPRM CALL\_MAXPWR** to set Test Parameter to Call - Maximum Output Power.
4. Wait until UE power reaches the maximum.
5. Execute **SMASK\_AVG 20** to set the average count of SEM measurement at 20 times.
6. Execute **SWP** to perform SEM measurement.
7. Execute **SMASKPASS?** to read SEM measurement result.
8. Check the measurement result is PASS.

Spectrum Emission Mask		View	(Meas. Count : 20 / 20)	
Worst Value of Each Frequency Range				
Frequency Range	Level	Mask Margin	Frequency	
0.8MHz	-46.15 dBc	-12.65 dB	0.800	MHz
0.8 to 1.8MHz	-49.94 dBc	-10.84 dB	-1.200	MHz
1.8 to 2.4MHz	-57.97 dBc	-9.45 dB	-1.860	MHz
2.4 to 4.0MHz	-55.14 dBc	-12.64 dB	-2.910	MHz
Template Judgement	Pass			

### 1.3.13. 5.5.2.2 Adjacent Channel Leakage power Ratio (ACLR)

1. Connect to Test Loop Mode1.
2. Execute **CHCODING RMC\_SINGLE** to set Channel Coding to (Single Code).
3. Execute **TESTPRM CALL\_MAXPWR** to set Test Parameter to Call - Maximum Output Power.
4. Wait until UE power reaches the maximum.
5. Execute **ADJ\_AVG 20** to set the average count of ACLR measurement at 20 times.
6. Execute **SWP** to perform ACLR measurement.
7. Execute **AVG\_MODPWR? LOW16; AVG\_MODPWR? UP16** to read ACLR measurement result.
8. Check the measurement result is lower than -32.2 dB.
9. Execute **AVG\_MODPWR? LOW32; AVG\_MODPWR? UP32** to read ACLR measurement result.
10. Check the measurement result is lower than -42.2 dB.

Adjacent Channel Power		(Meas. Count : 20 / 20)			
Offset Frequency	Power			dB	Limit
	Avg.	Max.	Min.		
-3.2MHz	-62.57	-61.86	-63.29	dB	≤ -42.2 dB
-1.6MHz	-40.51	-40.18	-40.96	dB	≤ -32.2 dB
1.6MHz	-44.38	-44.24	-44.51	dB	≤ -32.2 dB
3.2MHz	-62.97	-62.32	-63.73	dB	≤ -42.2 dB
Judgement	Pass				

### 1.3.14. 5.7.1 Error Vector Magnitude

1. Connect to Test Loop Mode1.
2. Execute **CHCODING RMC\_SINGLE** to set Channel Coding to (Single Code).
3. Execute **TESTPRM CALL\_20DBM** to set Test Parameter to Call - EVM & PCDE@-20 dBm.
4. Wait until UE power reaches -20 dBm.
5. Execute **MOD\_AVG 20** to set the average count of Modulation Analysis measurement at 20 times.
6. Execute **SWP** to perform Modulation Analysis measurement.
7. Execute **AVG\_EVM?** to read EVM measurement result.
8. Check the measurement result is lower than 17.5%.

Modulation Analysis		(Meas. Count : 20 / 20)			
View	Power				Limit
	Avg.	Max.	Min.		
Error Vector Magnitude	5.36	5.66	5.19	%(rms)	≤ 17.5 %(rms)
Peak Vector Error	56.12	64.31	46.27	%	
Phase Error	2.28	2.41	2.16	deg. (rms)	
Magnitude Error	3.62	3.82	3.39	%(rms)	
Origin Offset	-27.82	-27.54	-28.02	dB	
IQ Imbalance	100.39	100.77	100.05	%(I/Q)	
Rho	0.99713	0.99731	0.99680		
Judgement	Pass				

### 1.3.15. 5.7.2 Peak code domain error

1. Connect to Test Loop Mode1.
2. Execute **CHCODING RMC\_MULTI** to set Channel Coding to RMC (Multi Code).
3. Execute **TESTPRM CALL\_20DBM** to set Test Parameter to Call - EVM & PCDE@-20 dBm.
4. Wait until UE power reaches -20 dBm.
5. Execute **PCDE\_AVG 20** to set the average count of Peak Code Domain Error measurement at 20 times.
6. Execute **SWP** to perform Peak Code Domain Error measurement.
7. Execute **AVG\_PCDERR?** to read Peak Code Domain Error measurement result.
8. Check the measurement result is lower than -20 dB.

Peak Code Domain Error		(Meas. Count : 20 / 20)			
	Avg.	Max.	Min.		Limit
Peak Code Domain Error	-34.04	-32.97	-34.90	dB	≤ -20 dB
Judgement	Pass				

### 1.3.16. 6.2 Reference sensitivity level

1. Connect to Test Loop Mode1.
2. Execute **CHCODING RMC\_SINGLE** to set Channel Coding to (Single Code).
3. Execute **TESTPRM CALL\_BERSENS** to set Test Parameter to Call - BER (Reference Sensitivity Level).
4. Wait until UE power reaches the maximum.
5. Execute **BER\_SAMPLE 10000** to set the number of BER measurement samples at 10000 bits.
6. Execute **SWP** to perform BER measurement.
7. Execute **BER?** to read BER measurement result.
8. Check the measurement result is lower than 0.001.

Bit Error Rate		End	Limit
Bit Error Rate	0.0000 (= 0.00 %)		≤ 0.001
	0.00E+00		
Error Count	0		
Transmitted/Sample	10229 / 10000 Bit		
Judgement	Pass		

### 1.3.17. Reduction of measurement time by batch processing

Measuring time can be reduced by measuring same parameter items at once.

[Maximum Output Power, OBW, ACLR, SEM]

1. Connect to Test Loop Mode1.
2. Execute **CHCODING RMC\_SINGLE** to set Channel Coding to (Single Code).
3. Execute **ALLMEASITEMS ON,20,ON,20,ON,200,ON,20,ON,20,ON,20,ON,20,ON,OFF** to turn on measurements (excluding BLER), to set the average count of Frequency Error measurement at 200 times, to set the average count of other measurements at 20 times.
4. Execute **TESTPRM CALL\_MAXPWR** to set Test Parameter to Call – Maximum Output Power.
5. Wait until UE power reaches the maximum.
6. Execute **SWP** to perform measurement.
7. Execute **AVG\_POWER?** to read Power measurement result.
8. Execute **OBW?** to read OBW measurement result.
9. Execute **AVG\_MODPWR? LOW16; AVG\_MODPWR? UP16** to read ACLR measurement result.
10. Execute **AVG\_MODPWR? LOW32; AVG\_MODPWR? UP32** to read ACLR measurement result.
11. Execute **SMASKPASS?** to read SEM measurement result.

[Frequency Error, BER]

12. Execute **TESTPRM CALL\_BERSENS** to set Test Parameter to Call – BER (Reference Sensitivity Level).
13. Execute **BER\_SAMPLE 10000** to set the number of BER measurement samples at 10000 bits.
14. Execute **SWP** to perform measurement.
15. Execute **MAXABS\_CARRFERR? PPM** to read Frequency Error measurement result.
16. Execute **BER?** to read BER measurement result.

[Transmit ON/OFF Time mask]

17. Execute **TESTPRM CALL\_OFFPWR** to set Test Parameter to Call – Off Power.
18. Execute **SWP** to perform measurement.
19. Execute **POWERPASS?** to read Power Template measurement result.

[Minimum Output Power]

20. Execute **TESTPRM CALL\_MINPWR** to set Test Parameter to Call – Minimum Output Power.
21. Wait until UE power reaches the minimum.
22. Execute **SWP** to perform measurement.
23. Execute **AVG\_POWER?** to read Power measurement result.

[EVM]

24. Execute **TESTPRM CALL\_20DBM** to set Test Parameter to Call – EVM & PCDE@-20 dBm.
25. Wait until UE power reaches -20 dBm.
26. Execute **SWP** to perform measurement.
27. Execute **AVG\_EVM?** to read EVM measurement result.

[PCDE (Multi Code)]

28. Execute **OLVL -66.0** to set Output Level at -66.0 dBm.
29. Execute **CHCODING RMC\_MULTI** to set Channel Coding to RMC(Multi Code).
30. Execute **OLVL -93.0** to set Output Level to -93.0 dBm.
31. Execute **SWP** to perform measurement.
32. Execute **AVG\_PCDERR?** to read Peak Code Domain Error measurement result.

[Maximum Output Power (Multi Code)]

33. Execute **TESTPRM CALL\_MAXPWR** to set Test Parameter to Call – Maximum Output Power.
34. Wait until UE power reaches the maximum.
35. Execute **SWP** to perform measurement.
36. Execute **AVG\_POWER?** to read Power measurement result.

## 1.4. Open Loop Power Control Measurement

The following measurements are performed by setting Measurement Object of Fundamental Measurement Parameter to Open Loop Power Control.

1. Execute **MEASOBJ OLPC** to set Measurement Object to Open Loop Power Control.
2. Execute **MAXULPWR 24** to set Maximum Allowed UL TX Power at 24 dBm.
3. Execute **RABCONNECT OFF** to turn off RAB Connection.

**Maximum Allowed UL TX Power is the basic parameter of Cell Selection and Reselection. UE Power Class must be set lower than Maximum Tx Power, so the UE can perform Cell Selection and Reselection using Sensitivity Level. For example, when Power Class is 2, MAXULPWR should be 24.**

**The call status can be returned to Idle in Test Loop Mode without connecting RAB by turning off RAB Connection so measurement is faster.**

### 1.4.1. 5.4.1 Open Loop Power Control in the Uplink (RX-middle)

1. Execute **TESTPRM IDLE\_MIDDLE** to set Test Parameter to Idle – RX middle.
2. Turn on UE power to perform Registration.
3. Execute **SWPANDPG** to perform UpPCH measurement in Test Loop Mode.
4. Execute **UPPCHPWR?** to read Power measurement result of UpPCH.
5. Check the measurement result is -10 dBm(+/-10 dB).

Open Loop Power Control		Limit
UpPCH Power	-7.11 dBm	-10.0 dBm ± 10dB
SYNC-UL ID	3	
Judgement	Pass	


### 1.4.2. 5.4.1 Open Loop Power Control in the Uplink (RX Upper dynamic end)

1. Execute **TESTPRM IDLE\_UPPER** to set Test Parameter to Idle – RX Upper Dynamic End.
2. Turn on UE power to perform Registration.
3. Execute **SWPANDPG** to perform UpPCH measurement in Test Loop Mode.
4. Execute **UPPCHPWR?** to read Power measurement result of UpPCH.
5. Check the measurement result is -25 dBm(+/-10 dB).

Open Loop Power Control		Limit
UpPCH Power	-24.31 dBm	-25.0 dBm ± 10dB
SYNC-UL ID	6	
Judgement	Pass	

### 1.4.3. 5.4.1 Open Loop Power Control in the Uplink (RX-Sensitivity level)

1. Execute **TESTPRM IDLE\_SENS** to set Test Parameter to Idle – RX Sensitivity Level.
2. Turn on UE power to perform Registration.
3. Execute **SWPANDPG** to perform UpPCH measurement in Test Loop Mode.
4. Execute **UPPCHPWR?** to read Power measurement result of UpPCH.
5. Check the measurement result is +9 dBm(±10 dB).

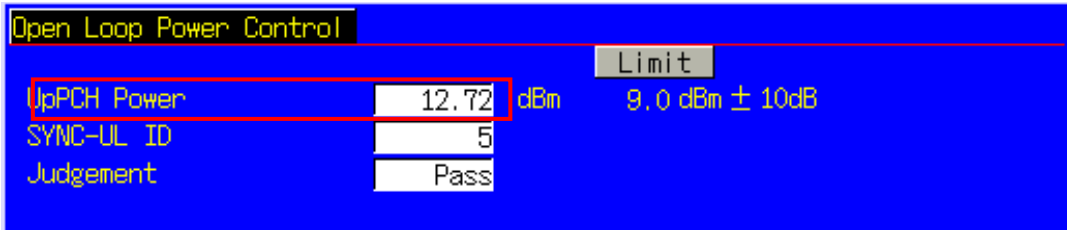

### 1.4.4. Continuous measurement of Open Loop Power Control

Although Open Loop Power Control measurement is performed by changing Primary CCPCH TX Power and PRXUpPCHdes, these parameters are for broadcast information use and are not reflected at UE side immediately after the change. In order to perform Open Loop Power Control measurement continuously, the parameters must be reflected at UE by any of the following methods.


- 1) Wait about 5 seconds after changing parameters. When changing parameters, the instrument transmits BCCH modification info to UE with PAGING TYPE1 message. However, it takes about 5 seconds until the parameters are reflected on UE side.
- 2) After changing parameters, turn on UE power again, and wait until UE performs Registration.
- 3) Change LAC parameter along with the above parameter, and wait until UE performs Registration.  
**The LAC value can be incremented when performing LACINC.**

## 1.5. Closed Loop Power Control Measurement (automatic measurement)

### 1.5.1. 5.4.1.4 Closed loop power control

1. Connect to Test Loop Mode1.
2. Execute **TESTPRM CALL\_CLPC** to set Test Parameter to Call - Closed Loop Power Control.
3. Execute **CLPC\_MEAS AUTO\_ALL** to set CLPC Measurement Method to Auto(Step All).
4. Execute **SWP** to perform measurement.
5. Execute **CLPC\_PASS? ALL** and check the measurement result is PASS.

Closed Loop Power Control	View
Step B	Pass
Step C	Pass
Step D	Pass
Step E	Pass
Step F	Pass
Step G	Pass

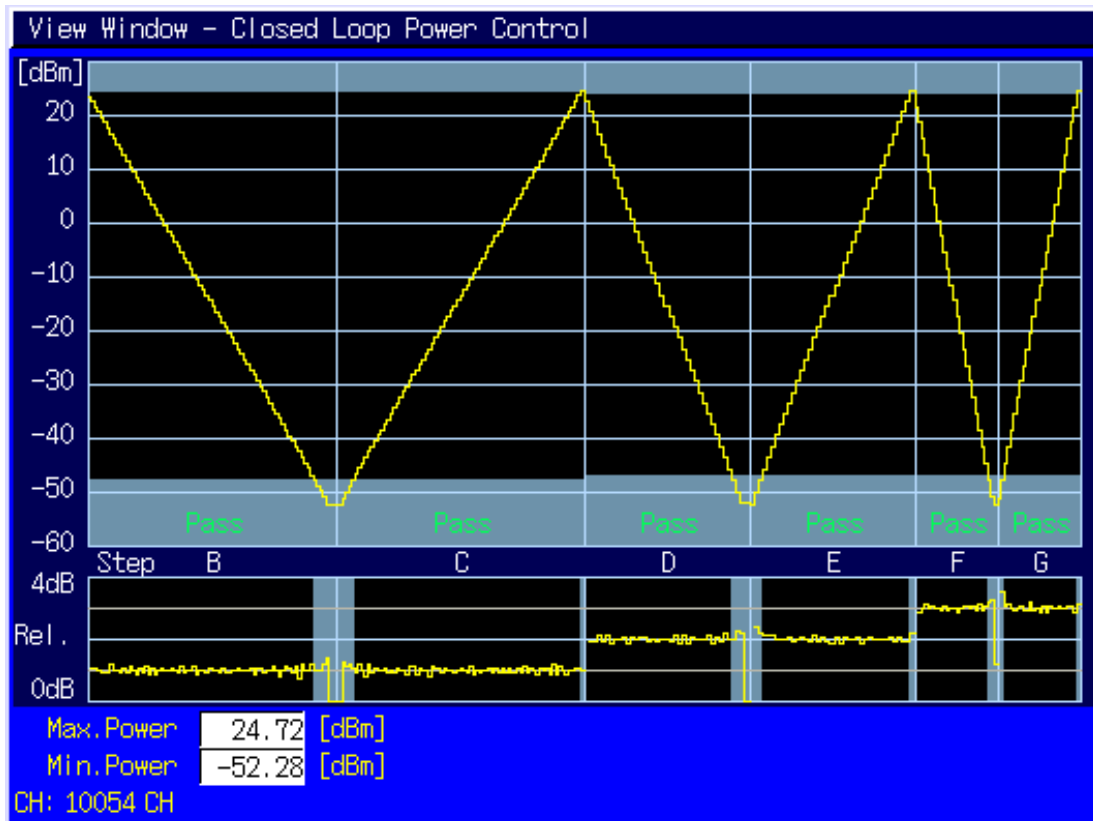



## 1.6. Other Measurement

### 1.6.1. 5.4.5 Out-of-synchronisation handling of output power for continuous transmission

1. Execute **TESTPRM IDLE\_OSYNC\_SET** to set Test Parameter to Idle – Out-of-Sync. Idle Setting.
2. Turn on UE power to perform Registration.
3. Connect to Test Loop Mode1.
4. Execute **TESTPRM CALL\_OSYNC\_CONT** to set Test Parameter to Call – Out-of-Sync. Continuous.
5. Execute **SWP** to perform Power measurement.
6. Execute **OUTSYNC\_PASS? ALL** and check the measurement result is PASS.

Out of Synchronisation			
	DPCH_Ec/Ior	UE Signal	
Step A	-2.4 dB	On	Pass
Step B	-6.0 dB	On	Pass
Step C	-16.0 dB	Turns Off	Pass
Step E	-14.0 dB	Off	Pass
Step F	-3.0 dB	Turns On	Pass

### 1.6.2. 5.4.6 Out-of-synchronisation handling of output power for discontinuous transmission

1. Execute **TESTPRM IDLE\_OSYNC\_SET** to set Test Parameter to Idle – Out-of-Sync. Idle Setting.
2. Turn on UE power to perform Registration.
3. Connect to Test Loop Mode1.
4. Execute **TESTPRM CALL\_OSYNC\_DISC** to set Test Parameter to Call – Out-of-Sync. Discontinuous.
5. Execute **SWP** to perform Power measurement.
6. Execute **OUTSYNC\_PASS? ALL** and check the measurement result is PASS.

Out of Synchronisation			
	DPCH_Ec/Ior	UE Signal	
Step A	-5.4 dB	On	Pass
Step B	-9.0 dB	On	Pass
Step C	-19.0 dB	Turns Off	Pass
Step E	-17.0 dB	Off	Pass
Step F	-6.0 dB	Turns On	Pass

### 1.6.3. 6.3 Maximum Input Level

1. Connect to Test Loop Mode1.
2. Execute **TESTPRM CALL\_BERMAX** to set Test Parameter to Call – BER (Maximum Input Level).
3. Execute **BER\_SAMPLE 10000** to set the number of BER measurement samples at 10000 bit.
4. Execute **SWP** to perform BER measurement.
5. Execute **BER?** to read BER measurement result.
6. Check the measurement result is lower than 0.001.

Bit Error Rate	End	Limit
Bit Error Rate	0.0000 (= 0.00 %)	$\leq 0.001$
	0.00E+00	
Error Count	0	
Transmitted/Sample	10118 / 10000 Bit	
Judgement	Pass	

### 1.6.4. 6.8 Spurious Emissions

1. Execute **RRCSTATE CELLFACH** to set RRC State to CELL\_FACH.
2. Execute **SINTRASCHSW ON** to turn on Sintrasearch.
3. Execute **SINTERSCHSW ON** to turn on Sintersearch.
4. Execute **SSCHRATSW ON** to turn on Ssearch,RAT.
5. Execute **MAXULPWR 24** to set Maximum Allowed UL TX Power to 24dBm.
6. Turn on UE power to perform Registration.
7. Execute **OLVL -52.0** to set Output Level to -52.0dBm.
8. Execute **AWGNLVL ON** to turn on AWGN output.
9. Execute **AWGNPWR -9.0** to set Ior/Ioc to 9.0dB.
10. Execute **PCCPCHLVL -3.0** to set PCCPCH Ec/Ior to -3.0dB.
11. Execute **DWPCHLVL 0.0** to set DwPCH Ec/Ior to 0.0dB.
12. Execute **CALLSA**, UE becomes to CELL\_FACH state.
13. It is possible to measure Spurious Emissions with an external Spectrum Analyzer.

## 1.6.5. 7.2 Demodulation in static propagation conditions

[Test1]

1. Execute **TESTMODE MODE2** to set Test Loop Mode to Mode2.  
When UE does not support Test Loop Mode2, execute **TESTMODE MODE1AM** to set Test Loop Mode to Test Mode1(AM).
2. Execute **CHCODING RMC\_SINGLE** to set Channel Coding to RMC (Single Code).
3. Connect to Test Loop Mode.
4. Execute **OLVL -56.1** to set Output Level at -56.1 dBm.
5. Execute **AWGNLVL ON** to turn on AWGN output.
6. Execute **AWGNPWR -3.9** to set Ior/Ioc at -3.9 dB.
7. Execute **DDPCHPWR -7.0** to set DPCH\_Ec/Ior at -7.0 dB.
8. Execute **ALLMEASITEMS OFF,1,OFF,1,OFF,1,OFF,1,OFF,1,OFF,1,OFF,1,OFF,ON** to turn on only BLER measurement.
9. Execute **BLER\_SAMPLE 1000** to set the number of BLER measurement samples at 1000 block.
10. Execute **SWP** to perform BLER measurement.
11. Execute **BLER?** to read BLER measurement result.
12. Check the measurement result is lower than 0.01.

Block Error Rate	End
Block Error Rate	0.0000 (= 0.00 %)
	0.00E+00
Error Count	0
Transmitted/Sample	1000 / 1000 Block

## 1.7. HSDPA Measurement

Hereafter, control software is assumed to be created by GPIB. See the operation manual for details of GPIB commands and manual operations. GPIB commands are in red.

### 1.7.1. HSDPA RMC Connection

When connecting with HSDPA, Location registration must be performed using PS. Set Registration Mode to Combined or CS&PS, and connect at HSDPA RMC.

1. Execute **PRESET** to set the default parameters.
2. Execute **REGMODE COMBINED** to set Registration Mode to Combined.
3. Execute **CHCODING HSDPA\_RMC** to set Channel Coding to HSDPA RMC.
4. Turn on the UE power.
5. Execute **CALLSTAT?** and wait until the response becomes 2 (= Idle (Regist)).
6. Execute **CALLSA** to perform HSDPA RMC connection.
7. Execute **CALLSTAT?** and wait until the response becomes 6 (= Communication).

#### Call Status can be confirmed using **CALLSTATIC?**.

The confirmation procedures using **CALLSTATIC?** are below.

1. Execute **PRESET** to set the default parameters.
2. Execute **REGMODE COMBINED** to set Registration Mode to Combined.
3. Execute **CHCODING HSDPA\_RMC** to set Channel Coding to HSDPA RMC.
4. Turn on the UE power.
5. Execute **CALLSTATIC?** to check Call Status. When Call Status becomes 2(=Idle(Regist)), the response is returned.
6. Execute **CALLSA** to perform HSDPA RMC connection.
7. Execute **CALLSTATIC?** to check Call Status. When Call Status becomes 6(=Communication), the response is returned.

### 1.7.2. HSDPA RMC Disconnection

1. Execute **CALLSO** to disconnect from HSDPA RMC.
2. Execute **CALLSTAT?** and wait until the response becomes 2(=Idle(Regist)).

The confirmation procedures using **CALLSTATIC?** are below.

1. Execute **CALLSO** to disconnect from HSDPA RMC.
2. Execute **CALLSTATIC?** to check Call Status. When Call Status becomes 2(=Idle(Regist)), the response is returned.

### 1.7.3. Switching HSDPA Data Rate during connection.

HSDPA Data Rate can be switched during Connection. The switching procedures are below.

1. Connect to HSDPA RMC.
2. Execute **HSRATE 0.5M\_QPSK** to set HSDPA Data Rate to 0.5 Mbps UE Class (QPSK).
3. Execute TRX measurement.
4. Execute **HSRATE 1.1M\_16QAM** to set HSDPA Data Rate to 1.1 Mbps UE Class (16QAM).
5. Execute TRX measurement.

#### 1.7.4. 5.2B User Equipment maximum output power with HS-SICH and DPCH

1. Execute **HSTYPE FRC** and set HSDPA Data Type to FRC.
2. Execute **HSRATE 1.1M\_16QAM** and set HSDPA Data Rate to 1.1 Mbps UE Class (16QAM).
3. Execute **TPCPAT ALT** to set TPC Pattern to Alternate.
4. Connect at HSDPA RMC
5. Execute **TPCPAT CLPC** and set TPC Pattern to Closed Loop Power Control.
6. Execute **ILVL 16.2** and set Input Level to 16.2 dBm.
7. Wait about 100ms until UE power reaches 16.2 dBm
8. Execute **TPCPAT ALT** and set TPC Pattern to Alternate
9. Execute **ILVL 25.7** and set Input Level to 25.7 dBm
10. Execute **TPCPAT ALL1** and set TPC Pattern to All 1.
11. Execute **PWR\_MEAS ON** to set Power measurement to ON.
12. Execute **PWR\_AVG 20** to set the average Power measurement to 20 times.
13. Execute **SWP** to perform Power measurement.
14. Execute **AVG\_POWER?** to read the Power measurement result.
15. Check the measurement result is +21.5 dBm (+4.2 dB/-3.7 dB).

Power Measurement		(Meas. Count : 20 / 20)		
	Avg.	Max.	Min.	Limit
TX Power	23.01	23.02	23.00	dBm -99.9 to 99.9 dBm
RRC Filtered Power	22.77	22.79	22.75	dBm
Judgement	Pass			

### 1.7.5. 5.5.2.1B Spectrum emission mask

1. Execute **HSTYPE FRC** to set HSDPA Data Type to FRC.
2. Execute **HSRATE 1.1M\_16QAM** to set HSDPA Data Rate to 1.1 Mbps UE Class (16QAM).
3. Perform call connection with HSDPA RMC.
4. Execute **ILVL 30.0** to set Input Level to 30.0 dBm.
5. Execute **TPCPAT ALL1** to set TPC Pattern to All1.
6. Wait until the UE reaches maximum power.
7. Execute **SMASK\_MEAS ON** to set SEM measurement to ON.
8. Execute **SMASK\_AVG 20** to set the average SEM measurement to 20 times.
9. Execute **SWP** to perform SEM measurement.
10. Execute **SMASKPASS?** to read the SEM measurement result.
11. Check the measurement result is PASS.

Spectrum Emission Mask		View		(Meas. Count : 20 / 20)	
Worst Value of Each Frequency Range					
Frequency Range	Level		Mask Margin		Frequency
0.8MHz	-46.15 dBc		-12.65 dB		0.800 MHz
0.8 to 1.8MHz	-49.94 dBc		-10.84 dB		-1.200 MHz
1.8 to 2.4MHz	-57.97 dBc		-9.45 dB		-1.860 MHz
2.4 to 4.0MHz	-55.14 dBc		-12.64 dB		-2.910 MHz
Template Judgement	Pass				

### 1.7.6. 5.5.2.2B Adjacent Channel Leakage power Ratio (ACLR) with HS-SICH and DPCH

1. Execute **HSTYPE FRC** to set HSDPA Data Type to FRC.
2. Execute **HSRATE 1.1M\_16QAM** to set HSDPA Data Rate to 1.1 Mbps UE Class (16QAM).
3. Perform call connection with HSDPA RMC.
4. Execute **ILVL 30.0** to set Input Level to 30.0 dBm.
5. Execute **TPCPAT ALL1** to set TPC Pattern to All1.
6. Wait until the UE reaches maximum power.
7. Execute **ADJ\_MEAS ON** to set ACLR measurement to ON.
8. Execute **ADJ\_AVG 20** to set the average ACLR measurement to 20 times.
9. Execute **SWP** to perform ACLR measurement.
10. Execute **MODPWRPASS?** to read the Adjacent Channel Power measurement result.
11. Check the measurement result is PASS.

Adjacent Channel Power		(Meas. Count : 20 / 20)			
Offset Frequency	Power				Limit
	Avg.	Max.	Min.		
-3.2MHz	-62.57	-61.86	-63.29	dB	≤ -42.2 dB
-1.6MHz	-40.51	-40.18	-40.96	dB	≤ -32.2 dB
1.6MHz	-44.38	-44.24	-44.51	dB	≤ -32.2 dB
3.2MHz	-62.97	-62.32	-63.73	dB	≤ -42.2 dB
Judgement	Pass				

### 1.7.7. 5.7.1B Error Vector Magnitude with HS-SICH and DPCH

1. Execute **HSTYPE FRC** to set HSDPA Data Type to FRC.
2. Execute **HSRATE 1.1M\_16QAM** to set HSDPA Data Rate to 1.1 Mbps UE Class (16QAM).
3. Perform call connection with HSDPA RMC.
4. Execute **ILVL -20.0** to set Input Level to -20.0 dBm.
5. Execute **TPCPAT CLPC** to set TPC Pattern to Closed Loop Power Control.
6. Wait until the UE power becomes -20 dBm.
7. Execute **MOD\_MEAS ON** to set Modulation Analysis measurement to ON.
8. Execute **MOD\_AVG 20** to set average Modulation Analysis measurement to 20 times.
9. Execute **SWP** to perform Modulation Analysis measurement.
10. Execute **AVG\_EVM?** to read the EVM measurement result.
11. Check the measurement result is below 17.5%.

Modulation Analysis		View			(Meas. Count : 20 / 20)	
	Avg.	Max.	Min.		Limit	
Error Vector Magnitude	5.36	5.66	5.19	%(rms)	≤ 17.5	%(rms)
Peak Vector Error	56.12	64.31	46.27			%
Phase Error	2.28	2.41	2.16			deg. (rms)
Magnitude Error	3.62	3.82	3.39			%(rms)
Origin Offset	-27.82	-27.54	-28.02			dB
IQ Imbalance	100.39	100.77	100.05			%(I/Q)
Rho	0.99713	0.99731	0.99680			
Judgement	Pass					

### 1.7.8. 6.3A Maximum Input Level for HS-PDSCH Reception (16QAM)

16. Execute **HSTYPE FRC** to set HSDPA Data Type to FRC.
17. Execute **MAXHARQTX 1** to set Maximum number of HARQ transmissions to 1.
18. Execute **RVCODINGALL 6,2,1,5** to set Redundancy and Constellation Version to 6, 2, 1, 5.
19. Connect at HSDPA RMC.
20. Execute **HSRATE 1.1M\_16QAM** to set HSDPA Data Rate to 1.1 Mbps UE Class (16QAM).
21. Execute **OLVL -25.0** to set Output Level to -25.0 dBm.
22. Execute **TPUT\_MEAS ON** to set HSDPA Throughput measurement to On.
23. Execute **TPUT\_TYPE TPUT** to set HSDPA Throughput Measurement Type to Throughput.
24. Execute **TPUT\_SAMPLE 10000** to set the number of HSDPA Throughput measurement samples to 10000 blocks.
25. Execute **SWP** to measure HSDPA Throughput.
26. Execute **TPUT?** to read the measured Throughput result.
27. Check the measured result is 500 kbps or more.

HSDPA Throughput		End	
Throughput	1279	kbps	
Block Error Rate	0.0000	(=	0.00 %)
	0.00E+00		
Error Count	0	(NACK + DTX)	
	(NACK	0	DTX 0)
Transmitted/Sample	10000	/	10000 Block

### 1.7.9. 9.3.3 Reporting of HS-DSCH Channel Quality Indicator (2.8 Mbps UE)

1. Execute **HSTYPE VRC** to set HSDPA Data Type to VRC.
2. Execute **MAXHARQTX 1** to set Maximum number of HARQ transmissions to 1.
3. Connect at HSDPA RMC.
4. Execute **HSRATE 2.8M\_QPSK** to set HSDPA Data Rate to 2.8 Mbps UE Class (QPSK).
5. Execute **HSPDSCHLVL -10.0** to set HS-PDSCH\_Ec/Ior to -10.0dB.
6. Execute **AWGNLVL ON** to set AWGN Output to On.
7. Execute **AWGNPWR -1** to set AWGN Level to -1 dB.
8. Execute **OLVL -59.0** to set Output Level to -59.0 dBm.
9. Wait until UE output is stabilized.
10. Execute **TPUT\_MEAS ON** to set HSDPA Throughput measurement to On.
11. Execute **TPUT\_TYPE CQI** to set HSDPA Throughput Measurement Type to CQI.
12. Execute **TPUT\_SAMPLE 10000** to set the number of HSDPA Throughput measurement samples to 10000 blocks.
13. Execute **CQI\_MEAS ON** to set CQI measurement to On.
14. Execute **CQI\_SAMPLE 2000** to set the number of CQI measurement samples to 2000 blocks.
15. Execute **CQI\_RANGE 2** to set CQI counting range to 2.
16. Execute **SWP** to measure HSDPA Throughput.
17. Execute **TPUT\_BLER?** to read the measured Throughput result.
18. Check the measured result is 0.1 or less.
19. Execute **CQI\_SUM?** to read the CQI measurement result.
20. Check the measured result is 1800 or more.

HSDPA Throughput		End	
Throughput	1270	kbps	
Block Error Rate	0.0067	(=	0.67 %)
	6.70E-03		
Error Count	67	(NACK + DTX)	
	(NACK	67	DTX 0)
Transmitted/Sample	10000	/	10000 Block

HSDPA CQI		End			
		Avg.	Median	Max.	Min.
CQI (RTBS)		52.1	53	54	50
Sum in Median CQI ± 2		1993			
Rate		99.65	%		
RMF		QPSK	0	16QAM	2000
Received/Sample		2000	/	2000	Block



## 1.8. HSUPA Measurement

Hereafter, control software is assumed to be created by GPIB. See the operation manual for details of GPIB commands and manual operations. GPIB commands are in red.

### 1.8.1. HSUPA RMC Connection

When connecting with HSUPA, Location registration must be performed using PS. Set Registration Mode to Combined or CS&PS, and connect at HSUPA RMC.

1. Execute **PRESET** to set the default parameters.
2. Execute **REGMODE COMBINED** to set Registration Mode to Combined.
3. Execute **CHCODING HSUPA\_RMC** to set Channel Coding to HSUPA RMC.
4. Turn on the UE power.
5. Execute **CALLSTAT?** and wait until the response becomes 2 (= Idle (Regist)).
6. Execute **CALLSA** to perform HSUPA RMC connection.
7. Execute **CALLSTAT?** and wait until the response becomes 7(=Loop Mode 1).

**Call Status can be confirmed using CALLSTATIC?.**

The confirmation procedures using **CALLSTATIC?** are below.

1. Execute **PRESET** to set the default parameters.
2. Execute **REGMODE COMBINED** to set Registration Mode to Combined.
3. Execute **CHCODING HSUPA\_RMC** to set Channel Coding to HSUPA RMC.
4. Turn on the UE power.
5. Execute **CALLSTATIC?** to check Call Status. When Call Status becomes 2(=Idle(Regist)), the response is returned.
6. Execute **CALLSA** to perform HSUPA RMC connection.
7. Execute **CALLSTATIC?** to check Call Status. When Call Status becomes 7(=Loop Mode 1), the response is returned.

### 1.8.2. HSUPA RMC Disconnection

1. Execute **CALLSO** to disconnect from HSUPA RMC.
2. Execute **CALLSTAT?** and wait until the response becomes 2(=Idle(Regist)).

The confirmation procedures using **CALLSTATIC?** are below.

1. Execute **CALLSO** to disconnect from HSUPA RMC.
2. Execute **CALLSTATIC?** to check Call Status. When Call Status becomes 2(=Idle(Regist)), the response is returned.

### 1.8.3. 5.2A User Equipment maximum output power with E-DCH

1. Execute **HSURATE FRC3** to set HSUPA Data Rate to FRC3.
2. Execute **PERFROM\_MEAS ON** to set HSUPA Performance to On.
3. Execute **PERFROM\_SAMPLE 15** to set HSUPA Performance – Number of Sample to 15.
4. Perform call connection with HSUPA RMC.
5. Execute **TPCPAT CLPC** to set TPC Pattern to Closed Loop Power Control.
6. Execute **ILVL 7.3** to set Input Level to 7.3 dBm.
7. Wait about 150 ms until UE power reaches 7.3 dBm.
8. Execute **TPCPAT ALT** to set TPC Pattern to Alternate.
9. Execute **ILVL 25.7** to set Input Level to 25.7 dBm.
10. Execute **SWP** to perform HSUPA Performance measurement. Check the E-DCH TB Index measurement result is 53.
11. Execute **TPC\_CMD\_UP** to raise [TxPower] only 1 dB and wait 150 ms.
12. Execute **SWP** to perform HSUPA Performance measurement.
13. Execute **AVE\_TBI?** to read the E-DCH TB Index measurement result, and confirm it is 53.
14. Repeat procedures 11 to 13 until the E-DCH TB Index measurement result is not 53.
15. Execute **TPC\_CMD\_DOWN** to reduce [TxPower] only 1 dB and wait 150 ms.
16. Execute **SWP** to perform HSUPA Performance measurement, and confirm the E-DCH TB Index measurement result is 53.  
(Repeat procedures 15 and 16 if the E-DCH TB Index measurement result is not 53.)
17. Execute **PWR\_MEAS ON** to set Power measurement to ON.
18. Execute **PWR\_AVG 20** to set average Power measurement to 20 times.
19. Execute **SWP** to perform Power measurement.
20. Execute **AVG\_POWER?** to read the Power measurement result.
21. Check the measurement result is +22.5 dBm (+3.2 dB/-5.2 dB).

Power Measurement		(Meas. Count : 20 / 20)			
	Avg.	Max.	Min.	Limit	
TX Power	23.01	23.02	23.00	dBm	-99.9 to 99.9 dBm
RRC Filtered Power	22.77	22.79	22.75	dBm	
Judgement	Pass				

### 1.8.4. 5.5.2.1A Spectrum emission mask

1. Execute **HSURATE FRC3** to set HSUPA Data Rate to FRC3.
2. Perform call connection with HSUPA RMC.
3. Execute **ILVL 30.0** to set Input Level to 30.0 dBm.
4. Execute **TPCPAT ALL1** to set TPC Pattern to All1.
5. Wait until the UE reaches maximum power.
6. Execute **PWR\_MEAS ON** to set Power measurement to ON.
7. Execute **PWR\_AVG 20** to set average Power measurement to 20 times.
8. Execute **SWP** to perform Power measurement.
9. Execute **SMASKPASS?** to read the SEM measurement result.
10. Check the measurement result is PASS.

Spectrum Emission Mask		View				(Meas. Count : 20 / 20)	
Worst Value of Each Frequency Range							
Frequency Range	Level		Mask Margin		Frequency		
0.8MHz	-46.15	dBc	-12.65	dB	0.800	MHz	
0.8 to 1.8MHz	-49.94	dBc	-10.84	dB	-1.200	MHz	
1.8 to 2.4MHz	-57.97	dBc	-9.45	dB	-1.860	MHz	
2.4 to 4.0MHz	-55.14	dBc	-12.64	dB	-2.910	MHz	
Template Judgement	Pass						

### 1.8.5. 5.5.2.2A Adjacent Channel Leakage power Ratio (ACLR) with E-DCH

1. Execute **HSURATE FRC3** to set HSUPA Data Rate to FRC3.
2. Perform call connection with HSUPA RMC.
3. Execute **ILVL 30.0** to set Input Level to 30.0 dBm.
4. Execute **TPCPAT ALL1** to set TPC Pattern to All1.
5. Wait until the UE reaches maximum power.
6. Execute **ADJ\_MEAS ON** to set ACLR measurement to ON.
7. Execute **ADJ\_AVG 20** to set average ACLR measurement to 20 times.
8. Execute **SWP** to perform ACLR measurement.
9. Execute **MODPWRPASS?** to read the Adjacent Channel Power measurement result.
10. Check the measurement result is PASS.

Adjacent Channel Power		(Meas. Count : 20 / 20)			
Offset Frequency	Power	Avg.	Max.	Min.	Limit
		-3.2MHz	-62.57	-61.86	
-1.6MHz	-40.51	-40.18	-40.96	dB $\leq -32.2$ dB	
1.6MHz	-44.38	-44.24	-44.51	dB $\leq -32.2$ dB	
3.2MHz	-62.97	-62.32	-63.73	dB $\leq -42.2$ dB	
Judgement	Pass				

### 1.8.6. 5.7.1A Error Vector Magnitude with E-DCH 16QAM

1. Execute **HSURATE FRC2** to set HSUPA Data Rate to FRC2.
2. Connect to HSUPA RMC.
3. Execute **TESTPRM CALL\_20DBM** to set Test Parameter to Call - EVM & PCDE@-20 dBm.
4. Wait until UE power reaches -20 dBm.
5. Execute **MOD\_AVG 20** to set the average count of Modulation Analysis measurement to 20 times.
6. Execute **EPUCH\_MEAS\_SLOT 4** to set E-PUCH Measurement Measurement Slot to 4.
7. Execute **SWP** to perform Modulation Analysis measurement.
8. Execute **AVG\_EVM?** to read EVM measurement result.
9. Check the measurement result is lower than 14.0%.

Modulation Analysis		(Meas. Count : 20 / 20)			
	Avg.	Max.	Min.	Limit	
Error Vector Magnitude	5.36	5.66	5.19	%(rms) $\leq 17.5$ %(rms)	
Peak Vector Error	56.12	64.31	46.27	%	
Phase Error	2.28	2.41	2.16	deg. (rms)	
Magnitude Error	3.62	3.82	3.39	%(rms)	
Origin Offset	-27.82	-27.54	-28.02	dB	
IQ Imbalance	100.39	100.77	100.05	%(I/Q)	
Rho	0.99713	0.99731	0.99680		
Judgement	Pass				

### 1.8.7. 11.1 Detection of E-DCH HARQ ACK Indicator Channel (E-HICH)

[Test1]

1. Execute **EHICHPAT NACK** to set E-HICH Pattern to NACK.
2. Execute **OLVL -60.0** to set Output Level to -60.0dBm.
3. Execute **AWGNLVL ON** to turn on AWGN output.
4. Execute **AWGNPWR 0.0** to set Ior/Ioc to 0dB.
5. Execute **EHICHLVL -7.5** to set E-HICH Ec/Ior to -7.5dB.
6. Execute **HSURATE FRC1\_CAT3\_6** to set HSUPA Data Rate to FRC1 (Category3-6). Execute **HSURATE FRC1\_CAT1\_2** to set to FRC1 (Category1-2) when UE E-DCH Category is 1 to 2.
7. Perform call connection with HSUPA RMC.
8. Execute **ALLMEASITEMS\_OFF** to turn off all measurement items.
9. Execute **PERFORM\_MEAS ON** to turn on HSUPA Performance measurement.
10. Execute **PERFORM\_SAMPLE 1000** to set the number of HSUPA Performance measurement samples at 1000 block.
11. Execute **SWP** to perform HSUPA Performance measurement.
12. Execute **FALSE\_ACK\_NACK\_PROB? EXP** to read False ACK Probability measurement result.
13. Check the measurement result is lower than 2E-3.

[Test2]

1. Execute **EHICHPAT ACK** to set E-HICH Pattern to ACK.
2. Execute **OLVL -60.0** to set Output Level to -60.0dBm.
3. Execute **AWGNLVL ON** to turn on AWGN output.
4. Execute **AWGNPWR 0.0** to set Ior/Ioc to 0.0dB.
5. Execute **EHICHLVL -7.5** to set E-HICH Ec/Ior to -7.5dB.
6. Execute **HSURATE FRC1\_CAT3\_6** to set HSUPA Data Rate to FRC1 (Category3-6). Execute **HSURATE FRC1\_CAT1\_2** to set to FRC1 (Category1-2) when UE E-DCH Category is 1 to 2.
7. Perform call connection with HSUPA RMC.
8. Execute **ALLMEASITEMS\_OFF** to turn off all measurement items.
9. Execute **PERFORM\_MEAS ON** to turn on HSUPA Performance measurement.
10. Execute **PERFORM\_SAMPLE 1000** to set the number of HSUPA Performance measurement samples at 1000 block.
11. Execute **SWP** to perform HSUPA Performance measurement.
12. Execute **FALSE\_ACK\_NACK\_PROB? EXP** to read False NACK Probability measurement result.
13. Check the measurement result is lower than 2E-2.

## 1.8.8. 11.2 Demodulation of E-DCH Absolute Grant Channel (E-AGCH)

1. Execute **HSURATE FRC1\_CAT3\_6** to set HSUPA Data Rate to FRC1 (Category3-6).  
When UE does not support FRC1 (Category3-6), execute **HSURATE FRC1\_CAT1\_2** to set HSUPA Data Rate to FRC1 (Category1-2).
2. Execute **EHICHPAT ACK** to set E-HICH Pattern to ACK.
3. Execute **ABSGNTVAL 31** to set E-AGCH Absolute Grant Value to 31. (\*1)
4. Execute **OLVL -51.4** to set Output Level to -51.4dBm.
5. Execute **AWGNLVL ON** to turn on AWGN output.
6. Execute **AWGNPWR -8.6** to set Ior/Ioc to 8.6dB.
7. Execute **EAGCHLVL -3.0** to set E-AGCH Ec/Ior to -3.0dB.
8. Connect to HSUPA RMC.
9. Execute **ALLMEASITEMS\_OFF** to turn off all measurement items.
10. Execute **PERFORM\_MEAS ON** to turn on HSUPA Performance measurement.
11. Execute **PERFORM\_SAMPLE 1000** to set the number of HSUPA Performance measurement samples to 1000 block.
12. Execute **SWP** to perform HSUPA Performance measurement.
13. Execute **MISSED\_DTCTN\_PROB? EXP** to read Missed E-AGCH Detection Probability measurement result.
14. Check the measurement result is lower than 0.01(1E-2).

(\*1): The PPR value is still "To be Defined" in the 3GPP standards but here it is set to 31.

## 1.9. UE Report

Measurement Report can be sent to UE. The following explains how to acquire the report value of Primary CCPCH RSCP.

1. Connect to Test Loop Mode1.
2. Execute **MEASREP ON** to report Measurement Report to UE.
3. Execute **CALLRFR** to initialize UE Report value.
4. Execute **PCCPCH\_RSCP? FLAG**. When response is 1, report is returned.
5. Execute **PCCPCH\_RSCP?** to read P-CCPCH Ec/N0 value.
6. When reading Report value again, return to 3.

```
UE Report
IMSI(DEC)          001010123456789
UE Power Class     2
HS-DSCH Category  -----
Primary CCPCH RSCP 89 ( -27 to -26 dBm )
```

UE Report is updated at regular interval. When using PCCPCH\_RSCP? 1 to 10, the latest updated value is returned after UE Report is updated for specified counts.

1. Connect to Test Loop Mode1.
2. Execute **MEASREP ON** to report Measurement Report to UE.
3. Execute **OLVL -90.0** to set Output Level to -90.0 dBm.
4. Execute **PCCPCH\_RSCP? 3** to read P-CCPCH Ec/N0 value after UE Report is updated for three times.

## 1.10. Others

### 1.10.1. Calibration

By using this function, level accuracy frequency between input level and output level can be set flat, and the level gap caused by internal temperature change can be calibrated.


A single unit supports both Band Calibration (**BANDCAL**) and Full Calibration (**FULLCAL**).

Band Calibration is performed at TD-SCDMA band.

Full Calibration is performed at the input/output band of the unit (30~2700 MHz).

Although Full Calibration includes the contents of the Band Calibration, it takes time. Full Calibration should be executed when the seasonal temperature changes greatly or software version is upgraded. In this case, aging must be executed for about 1 hour before calibration.

Band Calibration should be executed so that calibration is performed without temperature change.

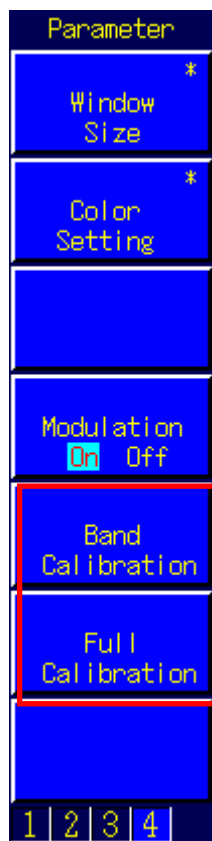

## 1.10.2. External Loss

The unit supports setting of External Loss (such as cable loss) as offset values. External Loss is set at Main DL, Main UL and Aux.



Level			
Input Level	-10.0	dBm	
Output Level (Total)	-66.0	dBm	On
AWGN Level	-20.0	dB	Off
External Loss	On		
Main UL	0.0	dB	
Main DL	0.0	dB	
AUX	0.0	dB	
			Level Continuous Off

An example of how to set Main DL Loss to 3.0 dB and Main UL Loss to 5.0 dB is shown below.

1. Execute **DLEXTLOSSW ON** to set [External Loss(Main DL)] to [On].
2. Execute **ULEXTLOSSW ON** to set [External Loss(Main UL)] to [On].
3. Execute **DLEXTLOSS 3.0** to set [External Loss(Main DL)] to [3.0] dB.
4. Execute **ULEXTLOSS 5.0** to set [External Loss(Main UL)] to [5.0] dB.

Although the above commands can set only one loss value for all frequencies, up to 100 loss values can be set by using the GPIB and by setting an External Loss Table, which supports both W-CDMA and GSM. In this case, a frequency without a loss value in the table is compensated with next loss value.

An example of how to set a 3.0 dB loss value for the 2140 MHz frequency, and a 5.0 dB loss value for the 1950 MHz frequency is shown below.

1. Execute **DLEXTLOSSW COMMON** to use the Main DL External Loss common table.
2. Execute **ULEXTLOSSW COMMON** to use the Main UL External Loss common table.
3. Execute **LOSSTBLVAL 1950MHz, 0.0, 5.0, 0.0** to set the 1950 MHz Main UL Loss value to 5.0 dB.
4. Execute **LOSSTBLVAL 2140MHz, 3.0, 0.0, 0.0** to set the 2140 MHz Main DL Loss value to 3.0 dB.

The number of frequency points specified in the table is displayed either in the on-screen External Loss Table, or can be read by executing **LOSSTBSAMPLE?**.

All loss values can be deleted by executing **DELLOSSTBL**.

\*The operation when setting External Loss differs according to the version.

Sometimes, the I/O level may be changed unexpectedly when setting parameters at tracking operation.

After setting the measurement conditions (external loss, frequency, etc.), always set the I/O level before starting measurement (W/G, TDS only)

The specifications have been changed for version V20.00 and later so the I/O level does not change when changing the external loss and frequency settings.

● **United States**

**Anritsu Company**

1155 East Collins Blvd., Suite 100, Richardson,  
TX 75081, U.S.A.  
Toll Free: 1-800-267-4878  
Phone: +1-972-644-1777  
Fax: +1-972-671-1877

● **Canada**

**Anritsu Electronics Ltd.**

700 Silver Seven Road, Suite 120, Kanata,  
Ontario K2V 1C3, Canada  
Phone: +1-613-591-2003  
Fax: +1-613-591-1006

● **Brazil**

**Anritsu Eletrônica Ltda.**

Praça Amadeu Amaral, 27 - 1 Andar  
01327-010 - Bela Vista - São Paulo - SP - Brazil  
Phone: +55-11-3283-2511  
Fax: +55-11-3288-6940

● **Mexico**

**Anritsu Company, S.A. de C.V.**

Av. Ejército Nacional No. 579 Piso 9, Col. Granada  
11520 México, D.F., México  
Phone: +52-55-1101-2370  
Fax: +52-55-5254-3147

● **United Kingdom**

**Anritsu EMEA Ltd.**

200 Capability Green, Luton, Bedfordshire, LU1 3LU, U.K.  
Phone: +44-1582-433200  
Fax: +44-1582-731303

● **France**

**Anritsu S.A.**

12 avenue du Québec, Bâtiment Iris 1- Silic 612,  
91140 VILLEBON SUR YVETTE, France  
Phone: +33-1-60-92-15-50  
Fax: +33-1-64-46-10-65

● **Germany**

**Anritsu GmbH**

Nemetschek Haus, Konrad-Zuse-Platz 1  
81829 München, Germany  
Phone: +49-89-442308-0  
Fax: +49-89-442308-55

● **Italy**

**Anritsu S.r.l.**

Via Elio Vittorini 129, 00144 Roma, Italy  
Phone: +39-6-509-9711  
Fax: +39-6-502-2425

● **Sweden**

**Anritsu AB**

Kistagången 20B, 164 40 KISTA, Sweden  
Phone: +46-8-534-707-00  
Fax: +46-8-534-707-30

● **Finland**

**Anritsu AB**

Teknobulevardi 3-5, FI-01530 VANTAA, Finland  
Phone: +358-20-741-8100  
Fax: +358-20-741-8111

● **Denmark**

**Anritsu A/S**

Kay Fiskers Plads 9, 2300 Copenhagen S, Denmark  
Phone: +45-7211-2200  
Fax: +45-7211-2210

● **Russia**

**Anritsu EMEA Ltd.**

**Representation Office in Russia**

Tverskaya str. 16/2, bld. 1, 7th floor.  
Moscow, 125009, Russia  
Phone: +7-495-363-1694  
Fax: +7-495-935-8962

● **Spain**

**Anritsu EMEA Ltd.**

**Representation Office in Spain**

Edificio Cuzco IV, Po. de la Castellana, 141, Pta. 8  
28046, Madrid, Spain  
Phone: +34-915-726-761  
Fax: +34-915-726-621

● **United Arab Emirates**

**Anritsu EMEA Ltd.**

**Dubai Liaison Office**

P O Box 500413 - Dubai Internet City  
Al Thuraya Building, Tower 1, Suit 701, 7th Floor  
Dubai, United Arab Emirates  
Phone: +971-4-3670352  
Fax: +971-4-3688460

● **India**

**Anritsu India Private Limited**

2nd & 3rd Floor, #837/1, Binnamangla 1st Stage,  
Indiranagar, 100ft Road, Bangalore - 560038, India  
Phone: +91-80-4058-1300  
Fax: +91-80-4058-1301

● **Singapore**

**Anritsu Pte. Ltd.**

11 Chang Charn Road, #04-01, Shriro House  
Singapore 159640  
Phone: +65-6282-2400  
Fax: +65-6282-2533

● **P.R. China (Shanghai)**

**Anritsu (China) Co., Ltd.**

Room 2701-2705, Tower A,  
New Caohejing International Business Center  
No. 391 Gui Ping Road Shanghai, 200233, P.R. China  
Phone: +86-21-6237-0898  
Fax: +86-21-6237-0899

● **P.R. China (Hong Kong)**

**Anritsu Company Ltd.**

Unit 1006-7, 10/F., Greenfield Tower, Concordia Plaza,  
No. 1 Science Museum Road, Tsim Sha Tsui East,  
Kowloon, Hong Kong, P.R. China  
Phone: +852-2301-4980  
Fax: +852-2301-3545

● **Japan**

**Anritsu Corporation**

8-5, Tamura-cho, Atsugi-shi, Kanagawa, 243-0016 Japan  
Phone: +81-46-296-1221  
Fax: +81-46-296-1238

● **Korea**

**Anritsu Corporation, Ltd.**

5FL, 235 Pangyoyeok-ro, Bundang-gu, Seongnam-si,  
Gyeonggi-do, 463-400 Korea  
Phone: +82-31-696-7750  
Fax: +82-31-696-7751

● **Australia**

**Anritsu Pty. Ltd.**

Unit 21/270 Ferntree Gully Road, Notting Hill,  
Victoria 3168, Australia  
Phone: +61-3-9558-8177  
Fax: +61-3-9558-8255

● **Taiwan**

**Anritsu Company Inc.**

7F, No. 316, Sec. 1, NeiHu Rd., Taipei 114, Taiwan  
Phone: +886-2-8751-1816  
Fax: +886-2-8751-1817