


MT8860C

WLAN Test Set

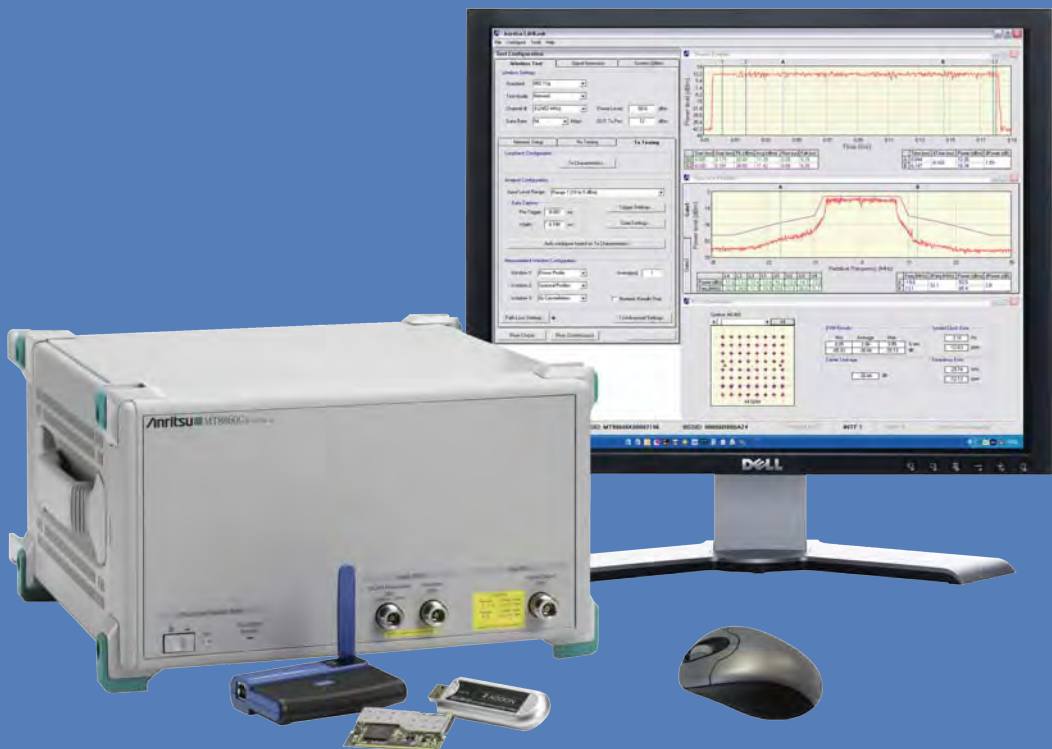

Remote Programming Manual

MT8860C

WLAN Test Set

The Anritsu logo is located in the bottom right corner of the page. It consists of the word "Anritsu" in a bold, sans-serif font. The letter "A" is stylized with a diagonal slash through it.

Anritsu Company
490 Jarvis Drive
Morgan Hill, CA 95037-2809
USA
<http://www.anritsu.com>

Part Number: 13000-00259
Revision: M
Published: August 2013
Copyright 2013 Anritsu Company

WARRANTY

The Anritsu Corporation will repair this equipment free-of-charge if a malfunction occurs within one year after shipment due to a manufacturing fault. However, software fixes will be made in accordance with the separate Software End-User License Agreement. Moreover, Anritsu Corporation will deem this warranty void when:

- The fault is outside the scope of the warranty conditions separately described in the operation manual.
- The fault is due to mishandling, misuse, or unauthorized modification or repair of the equipment by the customer.
- The fault is due to severe usage clearly exceeding normal usage.
- The fault is due to improper or insufficient maintenance by the customer.
- The fault is due to natural disaster, including fire, wind, flooding, earthquake, lightning strike, or volcanic ash, etc.
- The fault is due to damage caused by acts of destruction, including civil disturbance, riot, or war, etc.
- The fault is due to explosion, accident, or breakdown of any other machinery, facility, or plant, etc.
- The fault is due to use of non-specified peripheral or applied equipment or parts, or consumables, etc.
- The fault is due to use of a non-specified power supply or in a non-specified installation location.
- The fault is due to use in unusual environments(Note).
- The fault is due to activities or ingress of living organisms, such as insects, spiders, fungus, pollen, or seeds.

In addition, this warranty is valid only for the original equipment purchaser. It is not transferable if the equipment is resold. Anritsu Corporation shall assume no liability for injury or financial loss of the customer due to the use of or a failure to be able to use this equipment.

Note: For the purpose of this Warranty, "unusual environments" means use:

- In places of direct sunlight
- In dusty places
- Outdoors
- In liquids, such as water, oil, or organic solvents, and medical fluids, or places where these liquids may adhere
- In salty air or in places where chemically active gases (SO₂, H₂S, Cl₂, NH₃, NO₂, or HCl, etc.) are present
- In places where high-intensity static electric charges or electromagnetic fields are present
- In places where abnormal power voltages (high or low) or instantaneous power failures occur
- In places where condensation occurs
- In the presence of lubricating oil mists
- At low atmospheric pressure
- In the presence of frequent vibration or mechanical shock, such as in cars, ships, or airplanes

Software End-User License Agreement (EULA)

Please read this Software End-User License Agreement (hereafter this EULA) carefully before using (includes executing, copying, registering, etc.) this software (includes programs, databases, scenarios, etc., used to operate, set, etc., Anritsu electronic equipment). By reading this EULA and using this software, you are agreeing to be bound by the terms of its contents and Anritsu Corporation (hereafter Anritsu) hereby grants you the right to use this Software with the Anritsu-specified equipment (hereafter Equipment) for the purposes set out in this EULA.

1. Grant of License and Limitations

- a. Regardless of whether this Software was purchased from or provided free-of-charge by Anritsu, you agree not to rent, lease, lend, or otherwise distribute this Software to third parties and further agree not to disassemble, recompile, reverse engineer, modify, or create derivative works of this Software.
- b. You may make one copy of this Software for backup purposes only.
- c. You are not permitted to reverse engineer this software.
- d. This EULA allows you to install one copy of this Software on one piece of Equipment.

2. Disclaimers

To the extent not prohibited by law, in no event shall Anritsu be liable for personal injury, or any incidental, special, indirect or consequential damages whatsoever, including, without limitation, damages for loss of profits, loss of data, business interruption or any other commercial damages or losses, arising out of or related to your use or inability to use this Software.

3. Limitation of Liability

- a. If a fault (bug) is discovered in this Software, preventing operation as described in the operation manual or specifications whether or not the customer uses this software as described in the manual, Anritsu shall at its own discretion, fix the bug, or exchange the software, or suggest a workaround, free-of-charge. However, notwithstanding the above, the following items shall be excluded from repair and warranty.
 - i. If this Software is deemed to be used for purposes not described in the operation manual or specifications.
 - ii. If this Software is used in conjunction with other non-Anritsu-approved software.
 - iii. Recovery of lost or damaged data.
 - iv. If this Software or the Equipment has been modified, repaired, or otherwise altered without Anritsu's prior approval.
 - v. For any other reasons out of Anritsu's direct control and responsibility, such as but not limited to, natural disasters, software virus infections, etc.
- b. Expenses incurred for transport, hotel, daily allowance, etc., for on-site repairs by Anritsu engineers necessitated by the above faults shall be borne by you.
- c. The warranty period for faults listed in article 3a above covered by this EULA shall be either 6 months from the date of purchase of this Software or 30 days after the date of repair, whichever is longer.

4. Export Restrictions

You may not use or otherwise export or re-export directly or indirectly this Software except as authorized by Japanese and United States law. In particular, this software may not be exported or re-exported (a) into any Japanese or US embargoed countries or (b) to anyone on the Japanese or US Treasury Department's list of Specially Designated Nationals or the US Department of Commerce Denied Persons List or Entity List. By using this Software, you warrant that you are not located in any such country or on any such list. You also agree that you will not use this Software for any purposes prohibited by Japanese and US law, including, without limitation, the development, design and manufacture or production of missiles or nuclear, chemical or biological weapons of mass destruction.

5. Termination

Anritsu shall deem this EULA terminated if you violate any conditions described herein. This EULA shall also be terminated if the conditions herein cannot be continued for any good reason, such as violation of copyrights, patents, or other laws and ordinances.

6. Reparations

If Anritsu suffers any loss, financial or otherwise, due to your violation of the terms of this EULA, Anritsu shall have the right to seek proportional damages from you.

7. Responsibility after Termination

Upon termination of this EULA in accordance with item 5, you shall cease all use of this Software immediately and shall as directed by Anritsu either destroy or return this Software and any backup copies, full or partial, to Anritsu.

8. Dispute Resolution

If matters of dispute or items not covered by this EULA arise, they shall be resolved by negotiations in good faith between you and Anritsu.

9. Court of Jurisdiction

This EULA shall be interpreted in accordance with Japanese law and any disputes that cannot be resolved by negotiation described in Article 8 shall be settled by the Japanese courts.

CE Conformity Marking

Anritsu affixes the CE Conformity marking onto its conforming products in accordance with Council Directives of The Council Of The European Communities in order to indicate that these products conform to the EMC and LVD directive of the European Union (EU).



C-tick Conformity Marking

Anritsu affixes the C-tick marking onto its conforming products in accordance with the electromagnetic compliance regulations of Australia and New Zealand in order to indicate that these products conform to the EMC regulations of Australia and New Zealand.



Notes On Export Management

This product and its manuals may require an Export License or approval by the government of the product country of origin for re-export from your country.

Before you export this product or any of its manuals, please contact Anritsu Company to confirm whether or not these items are export-controlled.

When disposing of export-controlled items, the products and manuals need to be broken or shredded to such a degree that they cannot be unlawfully used for military purposes.

Mercury Notification

This product uses an LCD backlight lamp that contains mercury. Disposal may be regulated due to environmental considerations. Please contact your local authorities or, within the United States, the Electronics Industries Alliance (www.eiae.org) for disposal or recycling information.



产品中有毒有害物质或元素的名称及含量

For Chinese Customers Only YLYB

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 [Cr(VI)]	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 (PCA)	×	○	×	×	○	○
机壳、支架 (Chassis)	×	○	×	×	○	○
LCD	×	×	×	×	○	○
其他(电缆、风扇、 连接器等) (Appended goods)	×	○	×	×	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。
 ×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。

环保使用期限



这个标记是根据 2006/2/28 公布的「电子信息产品污染控制管理办法」以及 SJ/T 11364-2006 「电子信息产品污染控制标识要求」的规定，适用于在中国销售的电子信息产品的环保使用期限。仅限于在遵守该产品的安全规范及使用注意事项的基础上，从生产日起算的该年限内，不会因产品所含有害物质的泄漏或突发性变异，而对环境污染，人身及财产产生深刻地影响。
 注) 电池的环保使用期限是 5 年。生产日期标于产品序号的前四码
 (如 S/N 0728XXXX 为 07 年第 28 周生产)。

VxWorks Runtime License 2000-1189



WindML Target License 2000-1372



NI Device License 3-2000-1486



WindRiver USB Runtime License 2000-1421



DECLARATION OF CONFORMITY

Manufacturer's Name: ANRITSU COMPANY

Manufacturer's Address: Microwave Measurement Division
490 Jarvis Drive
Morgan Hill, CA 95037-2809
USA

declares that the product specified below:

Product Name: WLAN Test Set

Model Number: MT8860C

conforms to the requirement of:

EMC Directive: 2004/108/EC
Low Voltage Directive: 2006/95/EC

Electromagnetic Interference: EN61326: 1997 +A1: 1998+A2:2002 A3:2003


Emissions: EN55011: 1998 +A1: 1999 Group 1 Class A

Immunity: EN 61000-4-2:1995 +A1:1998 +A2:2001 4kV CD, 8kV AD
EN 61000-4-3:2002 +A1:2002 3V/m
EN 61000-4-4:1995 +A1:2001 +A2:2001 0.5kV SL, 1kV PL
EN 61000-4-5:1995 +A1:2001 0.5kV L-L, 1kV L-E
EN 61000-4-6:1996 +A1:2001 3V
EN 61000-4-11:2004 100% @ 0.5 cycle

Electrical Safety Requirement:

Product Safety: EN61010-1: 2001

Morgan Hill, CA

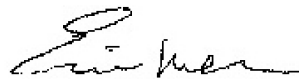

Eric McLean, Corporate Quality Director

7 Feb 2008
Date

Safety Symbols

To prevent the risk of personal injury or loss related to equipment malfunction, Anritsu Company uses the following symbols to indicate safety-related information. For your own safety, please read the information carefully *before* operating the equipment.

Symbols Used in Manuals



This indicates a very dangerous procedure that could result in serious injury or death, or loss related to equipment malfunction, if not performed properly.



This indicates a hazardous procedure that could result in light-to-severe injury or loss related to equipment malfunction, if proper precautions are not taken.



This indicates a hazardous procedure that could result in loss related to equipment malfunction if proper precautions are not taken.

Safety Symbols Used on Equipment and in Manuals

The following safety symbols are used inside or on the equipment near operation locations to provide information about safety items and operation precautions. Ensure that you clearly understand the meanings of the symbols and take the necessary precautions *before* operating the equipment. Some or all of the following five symbols may or may not be used on all Anritsu equipment. In addition, there may be other labels attached to products that are not shown in the diagrams in this manual.



This indicates a prohibited operation. The prohibited operation is indicated symbolically in or near the barred circle.



This indicates a compulsory safety precaution. The required operation is indicated symbolically in or near the circle.



This indicates a warning or caution. The contents are indicated symbolically in or near the triangle.



This indicates a note. The contents are described in the box.



These indicate that the marked part should be recycled.

For Safety

Warning



Always refer to the operation manual when working near locations at which the alert mark, shown on the left, is attached. If the operation, etc., is performed without heeding the advice in the operation manual, there is a risk of personal injury. In addition, the equipment performance may be reduced. Moreover, this alert mark is sometimes used with other marks and descriptions indicating other dangers.

Warning



or



When supplying power to this equipment, connect the accessory 3-pin power cord to a 3-pin grounded power outlet. If a grounded 3-pin outlet is not available, use a conversion adapter and ground the green wire, or connect the frame ground on the rear panel of the equipment to ground. If power is supplied without grounding the equipment, there is a risk of receiving a severe or fatal electric shock.

Warning

WARNING 

This equipment can not be repaired by the operator. Do not attempt to remove the equipment covers or to disassemble internal components. Only qualified service technicians with a knowledge of electrical fire and shock hazards should service this equipment. There are high-voltage parts in this equipment presenting a risk of severe injury or fatal electric shock to untrained personnel. In addition, there is a risk of damage to precision components.

Warning



Use two or more people to lift and move this equipment, or use an equipment cart. There is a risk of back injury if this equipment is lifted by one person.

Caution



Electrostatic Discharge (ESD) can damage the highly sensitive circuits in the instrument. ESD is most likely to occur as test devices are being connected to, or disconnected from, the instrument's front and rear panel ports and connectors. You can protect the instrument and test devices by wearing a static-discharge wristband. Alternatively, you can ground yourself to discharge any static charge by touching the outer chassis of the grounded instrument before touching the instrument's front and rear panel ports and connectors. Avoid touching the test port center conductors unless you are properly grounded and have eliminated the possibility of static discharge.

Repair of damage that is found to be caused by electrostatic discharge is not covered under warranty.

Table of Contents

Chapter 1—General Information

1-1	About this Manual	1-1
1-2	Comments on this Manual	1-1
1-3	Software Versions	1-1
1-4	Notification of Software Release	1-1
1-5	Associated Documentation	1-2
1-6	Conventions	1-2
1-7	Command Format	1-2

Chapter 2—Remote Operation Overview

2-1	Requirements when using GPIB	2-1
2-2	LAN Interface Configuration	2-1
	Setting up the LAN Interface	2-1
2-3	Syntax	2-3
2-4	Termination	2-4
2-5	Suffixes	2-4

Chapter 3—IEEE 488.2 Mandatory and Register Commands

*CLS (Clear GPIB Status Bytes)	3-1
*ESE (Event Status Enable)	3-1
*ESR (Event Status Register Query)	3-1
*IDN (Identification Query)	3-2
*INE (Instrument Status Enable)	3-2
*INS (Instrument Status query)	3-2
*OPC (Operation Completed Indication)	3-3
*RST (Instrument Reset)	3-3
*SRE (Service Request Enable Register)	3-4
*STB (Status Byte Register Query)	3-4
*TST (Self Test Query)	3-4
*WAI (Wait to Continue)	3-5

Chapter 4—Status Reporting

	Status Byte Register	4-1
	Standard Event Register	4-2
	Instrument Status Register	4-2
4-1	Reading Status Information	4-2
	Direct-Read (Polling) Method	4-2
	Service Request (SRQ) Method	4-2
4-2	Remote Status Reporting Structure	4-4

Table of Contents (Continued)

Status Byte when Read by *STB?	4-4
Status Byte when Read by Serial Poll	4-5
Standard Event Register	4-6
Instrument Status Register	4-7
Chapter 5—General Remote Commands	
BOOTSTATUS? (Initial Start-up Self Test Status Request)	5-1
SHUTDOWN (System Shutdown Command)	5-1
Chapter 6—System Commands	
BNC (BNC Configuration)	6-1
ERRLST (System Error List)	6-2
FRST and RST (System Resets).	6-3
GPIBADDR (GPIB Address)	6-4
LAN (LAN IP Properties)	6-4
LAN ADDR (LAN Address)	6-5
LAN MODE (LAN Mode)	6-6
OPTIONS (Query Enabled Options)	6-7
REF (10MHz Reference)	6-8
STERR (Errors at Start-Up).	6-8
Chapter 7—Measurement Configuration Commands	
ABORT (Abort Measurement Operation).	7-7
AUTOCFG (Automatic Configuration)	7-7
AUTORNGMODE (Auto Ranging Mode).	7-7
BASICRATE (Basic Rate))	7-8
BEACONINT (Beacon Interval)	7-8
BSSID (Basic Service Set Identification)	7-9
CFGCHG (Configuration Change).	7-9
CHANNELNUM (Channel Number).	7-10
CLEARDHCP (Clear IP Addresses Allocated by DHCP)	7-10
DITHER (Enable Dithering)	7-11
DRVCFG (Reference Radio Driver Configuration)	7-12
DUTIP (DUT IP Address).	7-13
DUTPWR (DUT Transmit Power)	7-14
ERRLST (Error List).	7-15
ERRMESS (Error Message Description).	7-16
EXTLEVEL (External Level)	7-16
FRAMETYPE (Frame Type)	7-17
GATE (Gate Configuration)	7-18
IFINTERVAL (Inter Frame Interval)	7-19
INTFLOSS (Interferer Loss).	7-19
IPPARMS (WLAN IP Parameters).	7-20
IPPROP (WLAN IP Properties)	7-21

LEVMODE (Levelling Mode)	7-21
MACADDR (MAC Address)	7-22
MODE (Measurement Mode)	7-22
MUTE (Measurement Mode)	7-23
NUMMEAS (Number of Measurements)	7-23
NWAVAIL (Read Networks Available)	7-24
NWINFO (Read Network Information)	7-24
NWMACADDR (Request MAC Addresses)	7-25
NWSELECT (Select Network)	7-25
NWSSID (Network SSID)	7-26
NWTYPE (Network Type)	7-26
OBWPCT (Occupied Bandwidth Percentage)	7-27
OPERRATESET (Operational Rate Set)	7-28
PATHADD (Add an Element to the Path Loss Table)	7-29
PATHDEL (Delete an Element from the Path Loss Table)	7-29
PATHSTATE (Path Loss Table Status)	7-30
PATHTBL (Read all the Points from the Path Loss Table)	7-30
PAYLOAD (Payload)	7-31
PDPCT (Power Distribution Percentage)	7-31
PERDELAY (PER Measurement Delay)	7-32
PERPKTS (PER Test Number of Packets)	7-32
PKTLEN (Packet Length)	7-33
PKTTYPE (Packet Type)	7-36
PLINTERVAL (Packet Loopback Interval)	7-36
PREAMBLE (Preamble Type) (802.11b/g/a Only)	7-37
PRETRG (Pre Trigger)	7-37
PROFAVG (Profile Average State)	7-38
PROFCAP (Profile Capture Configuration)	7-39
RADIOERR (Radio Error Report)	7-40
RADIOSEL (Radio Selection)	7-41
RANGE (Range Hold)	7-42
RATESET (Data Rate Set in Beacon Table)	7-43
RDRANGES (Read Ranges)	7-44
REFRESH (Refresh WLAN Connection)	7-45
RFOPT (RF Optimization Mode)	7-45
SCAN (Scan for Networks)	7-45
SFMASK (Spectrum Flatness Mask)	7-46
STATUS (Status Command)	7-47
STERR (Startup Errors)	7-48
TESTMODE (Test Mode)	7-48
TRGSRC (Trigger Source)	7-49
TXINTERVAL (Transmission Frame Interval)	7-50

Table of Contents (Continued)

	TXPWR (Tx Power Level)	7-50
	TXRATE (Tx Rate).	7-51
	UNITMACADDR (Unit MAC Address)	7-51
	WLANSTD (WLAN Standard)	7-52
7-1	Advanced EVM Configuration.	7-53
	ALPHA (Set ALPHA Level for Root Nyquist Filtering)	7-53
	BT (Set BT level for Gaussian Filtering)	7-53
	CHANEST (EVM Channel Estimation)	7-54
	CHIPCLK (DSSS Chip Clock Analysis Length)	7-54
	EVMCHIP (DSSS EVM Analysis Length)	7-55
	EVMDSSS (DSSS EVM Calculation Method)	7-55
	EVMSYM (OFDM EVM Analysis Length)	7-56
	FILTER (Set Filter State)	7-56
	MODE (EVM Analysis Length Setting Method)	7-57
	SYMCLK (OFDM Symbol Clock Analysis Length).	7-57
	TRACKING (EVM Pilot Tracking Type)	7-58
7-2	DSSS Spectral Mask Configuration	7-59
	SMDEF (Set Spectral Mask to Defaults)	7-59
	SMLIM (Spectral Mask Limits)	7-60
	SMSEL (Select Spectral Mask)	7-60
7-3	Signal Generator Configuration	7-61
	MODE (Signal Generator Output Mode)	7-61
	STATE (Signal Generator State)	7-62
7-4	802.11n Configuration.	7-63
	FREQBAND (Frequency Band)	7-63
	GUARDINT (Guard Interval)	7-63
	INFO (Query 802.11n Configuration).	7-64
	MCSINDEX (MCS Index).	7-64
	PPDUFORMAT (PPDU Format)	7-64
	PPDUTYPE (PPDU Type).	7-65
	PREAMBLE (Preamble Length, Non-HT only)	7-65
	TXRATE (Transmission Rate, Non-HT only)	7-66
7-5	Country Information Configuration	7-67
	2PT4GHZ (2.4 GHz Supported Channels)	7-67
	5GHZB1 (5.0 GHz Supported Channels, Band 1)	7-68
	5GHZB2 (5.0 GHz Supported Channels, Band 2)	7-68
	5GHZB3 (5.0 GHz Supported Channels, Band 3)	7-69
	REGION (Country Information Region Information)	7-69
	STATE (Country Information Region Information)	7-70
7-6	Vendor Specific Information Configuration	7-71
	INFO (Vendor Specific IE Content Definition)	7-71
	STATE (Vendor Specific Information Element State)	7-71

Chapter 8—Measurement Requests and Output Results Format

MEAS (Measurement Request)	8-2
RDPROF (Read Profile)	8-12
Responses	8-14

Chapter 9—MT8860C Remote Command Sequences

Infrastructure Connection with a Device (STA) (802.11b/g/a only)	9-5
Infrastructure Connection with an Access Point (AP) (802.11b/g/a only)	9-8
Ad-Hoc Connection (MT8860C Creates a Network) (802.11b/g/a only)	9-11
Ad-Hoc Connection (MT8860C Joins a Network) (802.11b/g/a only)	9-14
Receiver Sensitivity (PER) Test in Network Mode (802.11b/g/a only)	9-17
Receiver Sensitivity Test in Direct Mode (802.11b/g/a)	9-19
Receiver Sensitivity Test in Direct Mode (802.11n)	9-21
Transmitter Measurements in Network Mode (802.11b/g/a only)	9-27
Transmitter Measurements in Direct Mode	9-29
External Reference Radio with MT8860C (802.11b/g/a only)	9-31
Using the Signal Generator Mode (802.11b/g/a only)	9-33

Appendix A—Error Codes

A-1 System Error Codes	A-1
A-2 Measurement Error Codes	A-2
A-3 RF Card Driver Error Codes	A-4
A-4 Spectral Card Driver Error Codes	A-5
A-5 Reference Radio Card Driver Error Codes	A-6
A-6 Spectral Card DSP Error Codes	A-7

Appendix B—GPIB PC Card Set-up

B-1 General Settings	B-1
B-2 Termination Settings	B-1
B-3 Advanced Settings	B-1

Appendix C—Terminology Glossary

Table of Contents (Continued)

Chapter 1 — General Information

1-1 About this Manual

This manual provides detailed information of the GPIB mnemonics for the Anritsu MT8860C WLAN Test Set.

1-2 Comments on this Manual

Every effort has been made to ensure that this manual is thorough, easy to use, and free from errors. However, to ensure continued improvement, we would welcome your comments on this, or any other Anritsu document.

Please contact us at the address below if you have any comments, good or bad, find any errors or omissions, or have any suggestions on how our documentation could be improved further.

wlan.support@anritsu.com

Your comments will be logged and reviewed, and whenever possible, will be reflected in a subsequent release of the document.

1-3 Software Versions

This manual provides details of the remote operation of the following software versions:

MT8860C: 12.0

Some of the features documented in this manual may not be available to users of software versions prior to those detailed above. Follow the procedure below to check the versions of the software you are using.

1. Start LANLook by selecting [Programs] > [Anritsu] > [LANLook] from the Windows [Start] menu.
2. Establish a remote connection with the MT8860C. To do this, follow the procedure detailed in chapter 5 of the MT8860C Operation Manual.
3. Select [About Anritsu LANLook] from the LANLook [Help] menu. Check the MT8860C and LANLook version numbers that display in the dialog.

Note	LANLook is provided free of charge on the Product CD shipped with the MT8860C. Refer to chapter 3 of the MT8860C Operation Manual for installation details.
-------------	---

1-4 Notification of Software Release

The MT8860C software is periodically updated as new features are added to meet market demands. To receive automatic notification of software releases, send a blank e-mail with the subject heading of "MT8860C Software Notification Request" to wlan.support@anritsu.com. You will receive an e-mail when new software is available to download.

1-5 Associated Documentation

In addition to this manual, the following document is also available on the Product CD shipped with the MT8860C WLAN Test Set.

Part number	Document
13000-00258	MT8860C WLAN Test Set Operation Manual

The pdf file listed above can be viewed using Adobe Reader™, a freeware program that can be downloaded from <http://www.adobe.com/>.

1-6 Conventions

The following conventions have been adopted in this manual.

MT8860C WLAN Test Set

The official name of the product detailed in this manual is the MT8860C WLAN Test Set. This name may be shortened to MT8860C throughout this manual.

IEEE802.11

IEEE802.11 may be shortened to 802.11 throughout this manual.

PER / FER

For the sake of convenience, the term "packet error rate" or PER is used throughout this manual.

"Test Port In/Out"

Text that appears on the MT8860C front or rear panels is enclosed in quotation marks when used within a body of text.

1-7 Command Format

The commands are presented in a structured manner as shown below.

Set command format	For each command, the command name and syntax are detailed. For example: COMMAND<ws>[<param1> , <param2> , <paramN>] Each of the allowable values for the command argument(s) is described.
Remarks	An expanded description of the command, how to use it, and programming hints or restrictions.
Example	An example of the command in use.
Query command format	The command used when requesting a response from the MT8860C.
Response	The command string returned from the MT8860C.
Example	An example of a response from the MT8860C.

Chapter 2 — Remote Operation Overview

The MT8860C WLAN Test Set can be operated remotely by means of an interface that conforms to:

- IEEE Std 488.1-1987, which defines the electrical, mechanical, and low-level protocol characteristics of the bus structure, the GPIB (General Purpose Interface Bus).
- IEEE Std 488.2-1987, which defines standard codes, formats, protocols, and common commands for use with the IEEE Std 488.1.

2-1 Requirements when using GPIB

A GPIB card, cable, and the associated control software are required to communicate with the MT8860C over the GPIB bus.

2-2 LAN Interface Configuration

LAN communication is supported by the MT8860C via the Ethernet connector on the rear panel of the instrument. It is functionally equivalent to the GPIB connector. The Ethernet connector enables the MT8860C to be remotely programmed by a LAN connected computer. The distance between the computer (or network connection device) and the MT8860C is limited to 100m (10BaseT and 100BaseT).

Setting up the LAN Interface

For LAN operation, the MT8860C must be connected to the LAN and an IP address assigned to the MT8860C either manually or by using DHCP server.

Typically, there are four ways in which the MT8860C can be connected to a LAN.

Method 1: Direct connection to a “Corporate” (Enterprise) network.

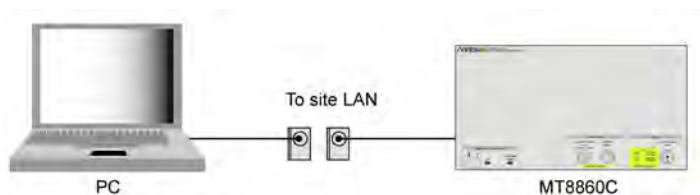


Figure 2-1. Direct Connection to Corporate Network

Method 2: Ethernet switch / hub connection to a “corporate” (Enterprise) network.

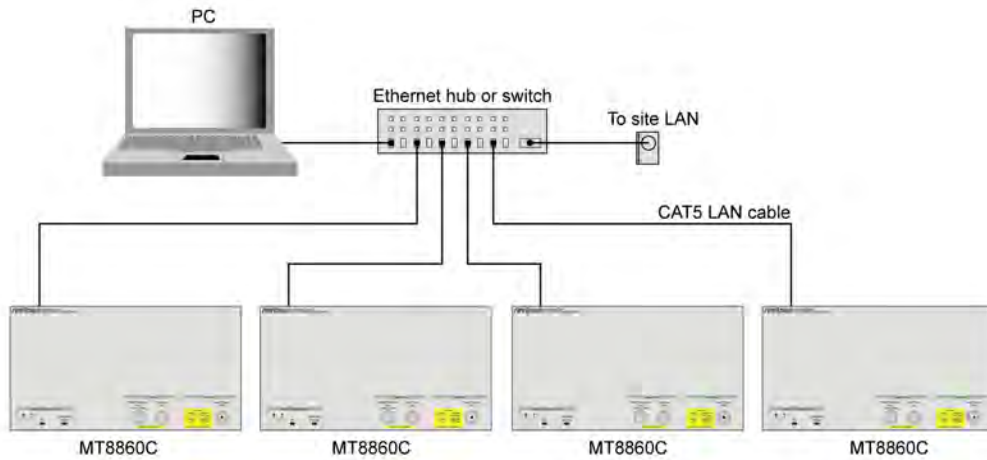


Figure 2-2. Ethernet Switch Connection to Corporate Network

Method 3: Direct connection to a private LAN.

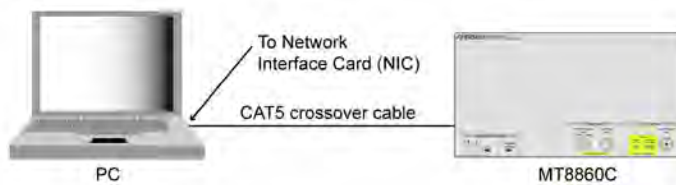


Figure 2-3. Direct Connection to a Private LAN

The interface hardware does not support auto MDIX ('Auto-cross'). Consequently, when connecting the MT8860C directly to a PC, a CAT5 crossover cable must be used. It is also recommended that DHCP is disabled on both the MT8860C and PC.

Method 4: Ethernet switch / hub connection to a private LAN.

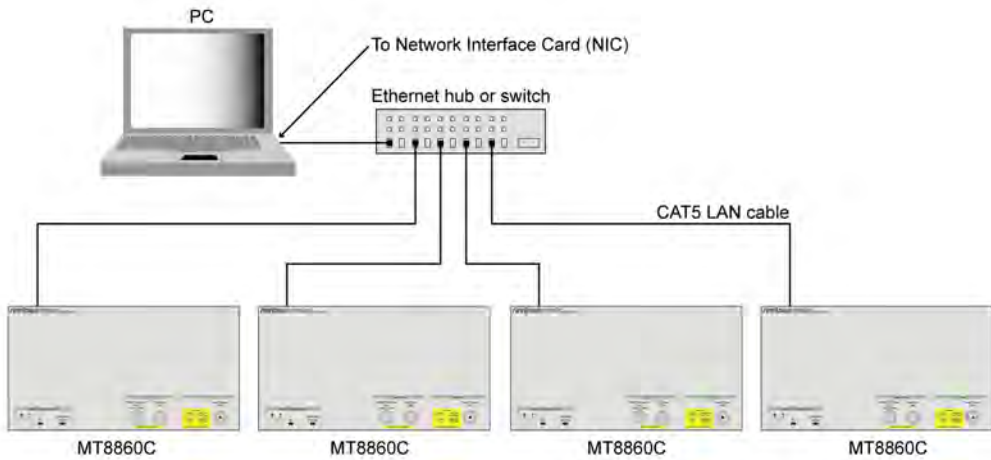


Figure 2-4. Ethernet Switch Connection to Private LAN

For all methods described above, the following steps should be taken when connecting the MT8860C to the LAN.

1. Power OFF the MT880C.
2. Connect the MT8860C as illustrated.
3. For methods 2 and 4, apply power to the Ethernet Hub or switch.
4. Power ON the MT8860C.

For further information regarding the LAN interface, refer to Appendix G of the MT8860C Operation Manual.

2-3 Syntax

The following rules must be adhered to when sending remote commands to the instrument.

1. An ASCII space must be present between the command mnemonic and the first parameter.
2. All subsequent parameters must be separated by commas (,).
3. Multiple commands may be sent on the same line, but each must be separated by a semicolon (;).

The conventions used are detailed in the table below.

Table 2-1. Remote Command Syntax Rules

Item	Meaning
< >	The parameters or characters within the angled brackets '< >' must be present. Throughout this document the angled brackets '< >' are employed merely as a convention to help users interpret the commands. They must not be included in the command string when issuing commands over the remote interface.

Table 2-1. Remote Command Syntax Rules

Item	Meaning
Ws	White space character.
[]	Optional parameters. Do not include the square brackets in the command string.
,	Parameter separator. All remote commands having more than one parameter must use the comma (,) separator between each parameter.
;	Message unit terminator. A message can comprise of a number of remote commands called command units, that are separated by the semicolon (;), as seen in the following example. COMMAND param1a,param1b;COMMAND2 param2a The mnemonics and all the parameters can use either upper or lower case characters unless specified otherwise.

2-4 Termination

All commands sent over the remote interface to the MT8860C must be terminated with either (or both) of the following:

End Of String (EOS): The '\n' or 0x0A character.

End Of message Indicator (EOD): A hardware line on the remote interface bus.

2-5 Suffixes

Parameters containing floating-point values can use the E-0x convention or a suffix multiplier. The unit conventions specified by the IEEE have been implemented for the suffix units and multipliers. The suffix unit is always allowed but is not required and is shown in brackets where appropriate.

The following table lists the numeric suffixes for the MT8860C WLAN Test Set. Suffix units are optional and can be omitted.

Table 2-2. Suffix Multipliers and Units

Suffix Multipliers		Suffix Units	
Definition	Mnemonic	Definition	Mnemonic
1E18	EX	Decibels	DB
1E15	PE	dB ref to 1 mW	DBM
1E12	T	dB ref to 1 mW	DBMV
1E9	G	dB ref to 1 uV	DBUV
1E6	MA	Percent	PCT
1E3	K	Seconds	SEC
1E-3	M	Seconds	S
1E-6	U	Volts	V
1E-9	N	Watts	W

Table 2-2. Suffix Multipliers and Units

Suffix Multipliers		Suffix Units	
Definition	Mnemonic	Definition	Mnemonic
1E-12	P	Hertz	HZ
1E-15	F	Kilo Hertz	KHZ
1E-18	A	Mega Hertz	MHZ

For example 10 microseconds can be represented in any of the following formats: -

- a. Straight value format 0.000010
- b. With the E format 10E-6
- c. Suffix multiplier format 10U

Chapter 3 — IEEE 488.2 Mandatory and Register Commands

*CLS (Clear GPIB Status Bytes)

Command format	*CLS
Remarks	Clears all the GPIB status data structures, including the Event Status Register and Status Byte Register, except for the MAV bit. *CLS does not clear the Output Queue.

*ESE (Event Status Enable)

The bits in the Standard Event Status Enable Register are the same as those in the Event Status Register. A bit wise AND is performed on the two registers to determine which event(s) will generate an SRQ.

Set command format	*ESE<ws><val>
Remarks	<val>: Decimal representation of an 8 bit binary mask. <val>: The sum of the binary weights of each of the bits to be enabled. Refer to the earlier explanation of the bits in the event status register and event status enable registers.
Example	To enable bit 4 (Execution Error): *ESE 16 To enable bit 5 (Command Error): *ESE 32 To enable both bits: *ESE 48
Query command format	*ESE?
Response	<val>: A decimal representation of the 8 bit mask defined above.
Remarks	*ESE? Does not clear the event status enable register. Use *ESE 0 or *CLS for this purpose

*ESR (Event Status Register Query)

Query command format	*ESR?
Remarks	Returns the current state of the Event Status Register (ESR).
Example	A return value of 5 indicates that bits 0 (Operation Complete) and 2 (Query Error) are set.

***IDN (Identification Query)**

Query command format	*IDN?
Remarks	A string is returned containing the manufacturer's name, the model number, the serial number, and the software revision. Commas separate the items.
Response	ANRITSU,MT8860C,6K00000031,12.0

***INE (Instrument Status Enable)**

The bits in the Instrument Status Enable Register are the same as those in the Instrument Status Register. A bit wise AND is performed on the two registers to determine which event(s) will set the INS bit in the status register.

Set command format	*INE<ws><val> <val> : Decimal representation of an 8 bit binary mask.
Remarks	<val> is the sum of the binary weights of each of the bits to be enabled. Refer to the earlier explanation of the bits in the instrument status register and instrument status enable registers.
Example	To enable bit 1 to produce an SRQ (NWS). *INE 1
Query command format	*INE?
Response	<val> <val> is a decimal representation of the 8 bit mask as defined above.
Remarks	*INE? Does not clear the event status enable register. Use *INE 0 or *CLS for this purpose

***INS (Instrument Status query)**

Query command format	*INS?
Remarks	Returns the current state of the Instrument status register. *INS? Does not clear the instrument status register.
Response	<val> <val> is a decimal representation of the 8 bit mask as defined above.

*OPC (Operation Completed Indication)

Set command format	*OPC
Remarks	The operation complete command sets the operation complete bit (bit 0) in the standard event status register (*ESR) when execution of the preceding operation(s) has completed. This bit can be used to initiate a service request.
Query command format	*OPC?
Remarks	The operation complete query places an ascii character '1' in the output queue when the preceding operation(s) has completed. The OPC bit in the *ESR register is not set.

*RST (Instrument Reset)

Set command format	*RST
Remarks	<p>All MT8860C parameters (with the exception of those listed below) are reset to their default settings. Neither the GPIB Status registers nor the Input and Output queues are cleared.</p> <p>Parameters not affected by *RST</p> <ul style="list-style-type: none">• 10 MHz reference: SYSCFG REF• GPIB Address: SYSCFG GPIBADDR• MT8860C LAN settings: SYSCFG LAN, MODE SYSCFG LAN, ADDR• MT8860C WLAN IP settings: MEASCFG 1, IPPARMS• User Path Loss Table: MEASCFG 1, PATHSTATE MEASCFG? 1, PATHTBL

***SRE (Service Request Enable Register)**

Set command format	*SRE<ws><val>
	<val>: Decimal representation of an 8 bit binary mask.
Remarks	The bits in the Service Request Enable Register (SRE) are the same as those in the Status Byte Register except for bit 6, which is not used in the SRE. With the exception of bit 6 the two registers are bitwise AND to determine which condition(s) will generate a SRQ. <val> is the sum of the binary weights of each of the bits to be enabled. Note that bit 6 should never be set.
Example	To enable bit 4 (Message Available) *SRE 16 To enable bit 2 (Internal Error) *SRE 4 To enable both bits *SRE 20
Query command format	*SRE?
Response	<val>: Decimal representation of the 8 bit mask as defined above.
Remarks	*SRE? Does not clear the Instrument Status Enable register. Use *SRE 0 or *CLS for this purpose. Bit 6 is never set.

***STB (Status Byte Register Query)**

Query command format	*STB?
Response	<val>: Decimal representation of the binary value of the Status Byte Register.
Remarks	Returns the current state of the Status Byte Register with the RQS bit replaced by the MSS bit (bit 6). See section 11.2.2.3 of the IEEE488.2 – 1987 specification for a description of the MSS bit.

***TST (Self Test Query)**

Query command format	*TST?
Response	<val>: a decimal representation of a 32 bit mask.
Remarks	This command invokes a Self-Test and then returns the results as a bit mask.

***WAI (Wait to Continue)**

Set command format

*WAI

Remarks

This mandatory IEEE488.2 command is decoded but produces no action because the Overlapping Commands feature is not implemented on MT8860C.

Chapter 4 — Status Reporting

An instrument within a GPIB system contains a set of registers that reflect the current state of the instrument and whether a particular event has occurred. It is also sometimes necessary for an instrument to generate an alert if that condition exists or if that event has occurred.

The MT8860C status registers contain information about the condition of the instrument and its measurements. Using these registers, it is possible to find out whether an error has occurred with a command, if a particular measurement has completed, if a measurement is out of limits, and other problems or conditions that may make a measurement unreliable. These registers can be used either by reading the contents directly when needed, or by configuring them to generate an interrupt signal (SRQ, service request) when the condition of interest occurs. The status system consists of three readable registers as shown in the figure below.

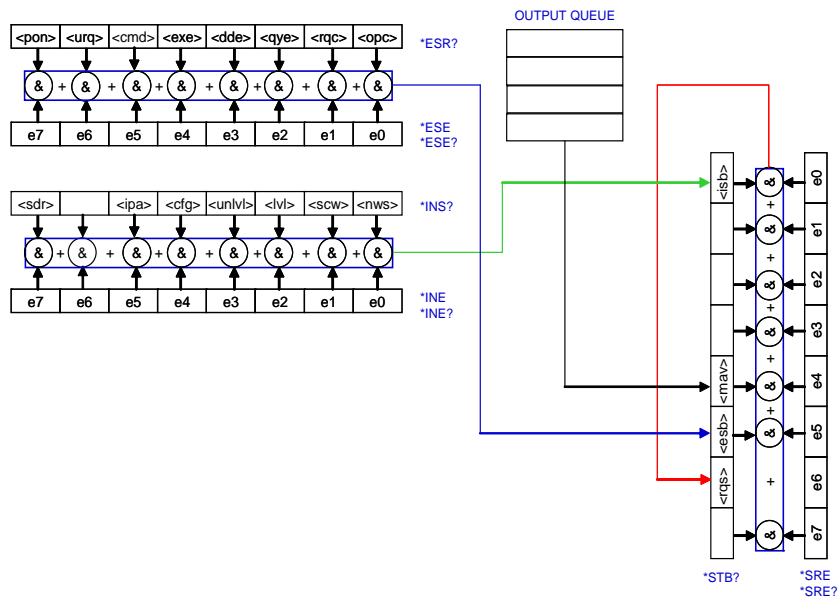


Figure 4-1. Status System Registers

Status Byte Register

This 8 bit register is used to represent particular conditions or events in an instrument. The status byte register (defined by IEEE 488.1) is read using the *STB? Command or by serial poll. When read by serial poll, an SRQ (service request) is generated that alerts the controller. Associated with the status byte register is the service request enable (*SRE) register, which allows control over which bits of the status byte contribute towards the generation of the SRQ signal. When read by *STB?, bit 6 of the status byte is known as the *master summary status* function (MSS), and is the OR function of the other seven bits of the register.

Standard Event Register

This 8 bit register extends the status reporting structure to cover various other events, defined by IEEE 488.2. The register is read using the *ESR? Command. The standard event enable register (*ESE) allows control over which bits of the standard event register affect the summary bit output (esb). The summary bit is recorded in bit 5 of the status byte.

Instrument Status Register

This 8 bit register further extends the status reporting structure by providing information specifically related to the MT8860C. The register is read using the *INS? Command. The instrument status enable register (*INE) allows control over which bits of the instrument status register affect the summary bit output (isb). The summary bit is recorded in bit 0 of the status byte.

4-1 Reading Status Information

As stated previously, two techniques can be used to interact with the status reporting structure as detailed below.

Direct-Read (Polling) Method

In many cases it is adequate and convenient for the controller to simply read the appropriate registers when necessary in order to determine the required status information.

This technique does not involve the use of SRQ and therefore does not require any interrupt handling code in the application program. The following steps are used to monitor a condition:

1. Determine which register contains the bit that monitors the condition.
2. Send the query command that reads the register.
3. Examine the bit to see if the condition has changed.

The direct-read (or polling) method works well when it is not necessary to know about changes the moment they occur. However, for test applications that require the immediate detection of condition changes, the SRQ method is recommended.

Service Request (SRQ) Method

In the SRQ method, the instrument plays a more active role, in that it tells the controller when there has been a condition change without the controller asking. This is beneficial when:-

- When you need time-critical notification of changes
- When you are monitoring more than one device that supports SRQs
- When you need to have the controller perform another task while waiting
- When you cannot afford the time penalty inherent to polling.

The programming language, I/O interface and programming environment must support SRQ interrupts. When using the SRQ method, the following steps are required to monitor a condition:

1. Determine which register sets, and which of its bits monitors the condition.
2. Determine how that bit reports to the request service (RQS) bit of the status byte (some report directly while others may report indirectly through other register sets).

3. Send remote commands to enable the bit that monitors the condition and to enable the summary bits that report the condition to the RQS bit.
4. Enable the controller to respond to service requests.

When the condition changes, the instrument sets its RQS bit (bit 6) and the GPIB's SRQ line; the controller is informed of the change as soon as it occurs. Setting the SRQ line informs the controller that a device on the bus requires service. The program then instructs the controller to perform a serial poll; each device on the bus returns the contents of its status byte register in response to this poll. The device with the RQS bit is set to '1' is the device that requested service. After the status byte is read the RQS bit is reset to '0'; the other bits are not affected.

Another reason for using SRQ is the need to detect errors in the various devices within the instrument. Since the timing of errors may not be known in advance, and it is not practical for the program to check the status of every device frequently, an interrupt handling routine can be used to detect and investigate any SRQ generated.

4-2 Remote Status Reporting Structure

Status Byte when Read by *STB?

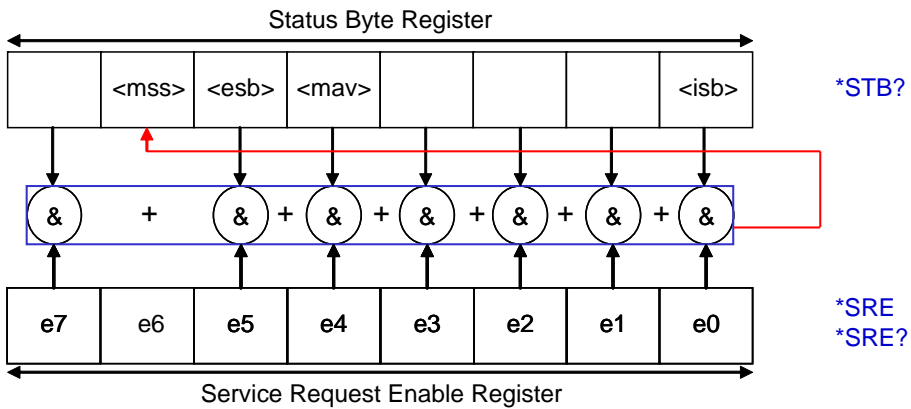


Figure 4-2. Status Byte Register

MSS Master Summary Status

This bit is set, if one of the bits in STB becomes true and the corresponding bit in the SRE is enabled.

ESB Event status bit

Summary bit of the Event Status Register (ESR). The ESB is set if one of the bits in the ESR is set and enabled by the corresponding bit being set in the Event Status Enable Register (ESE). The setting of the ESB bit implies a serious error which can be investigated in further detail by polling the ESR.

MAV Message available

This bit is set when there is data available to be read from the output buffer, and always cleared when the output buffer is empty. Data requested remains in the output buffer (in the order in which it was requested) until it has been read or until a device clear has been received.

ISB Instrument status bit

Summary bit of the Instrument Status Register (INS). The ISB is set if one of the bits in the INS is set and enabled by the corresponding bit being set in the Instrument Status Enable Register (INE). The ISB bit is cleared on initialisation and when the *CLS command is issued.

Note The STB register is not cleared by the *STB?

Status Byte when Read by Serial Poll

In a serial poll, just as with command “*STB”, the status byte of an instrument is queried. However, the query is realized via interface messages and is thus clearly faster. The serial-poll method has already been defined in IEEE 488.1 and used to be the only standard possibility for different instruments to poll the status byte. The method also works with instruments which do not adhere to SCPI or IEEE 488.2.

The quick-BASIC command for executing a serial poll is “IBRSP()”. Serial poll is mainly used to obtain a fast overview of the state of several instruments connected to the IEC bus.

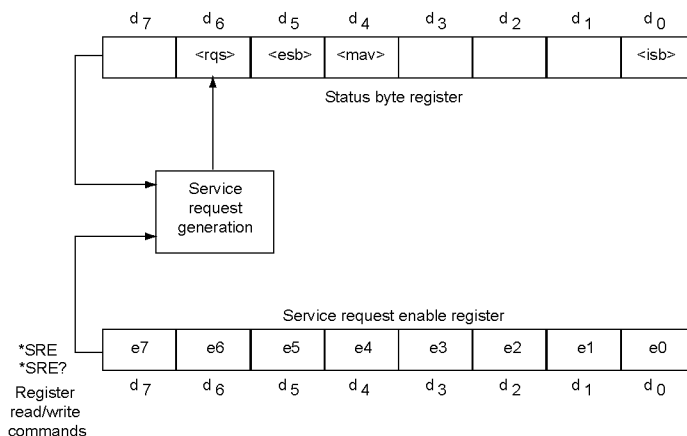


Figure 4-3. Serial Poll

RQS Request service

The bit is set when one of the other bits in the status byte register is set and the corresponding bit in the service request enable register (SRE) has been set. When this bit is set, an SRQ is indicated over the GPIB bus, which triggers an interrupt in the controller if this is appropriately configured. The SRQ is cleared by a serial poll and the status byte register is returned to the controller. The status byte register is cleared except for the MAV bit that is dependent on the state of the output queue.

ESB Event status bit

Summary bit of the Event Status Register (ESR). The ESB is set if one of the bits in the ESR is set and enabled by the corresponding bit being set in the Event Status Enable Register (ESE). The setting of the ESB bit implies a serious error which can be investigated in further detail by polling the ESR.

MAV Message available

This bit is set when there is data available to be read from the output buffer, and always cleared when the output buffer is empty. Data requested remains in the output buffer (in the order in which it was requested) until it has been read or until a device clear has been received.

ISB Instrument status bit

Summary bit of the Instrument Status Register (INS). The ISB is set if one of the bits in the INS is set and enabled by the corresponding bit being set in the Instrument Status Enable Register (INE). The ISB bit is cleared on initialisation and when the *CLS command is issued.

Note The STB register is cleared by either reading the status register with a serial poll or issuing the *CLS command.

Standard Event Register

The register is defined by IEEE 488.2 and each bit has the meaning shown below.

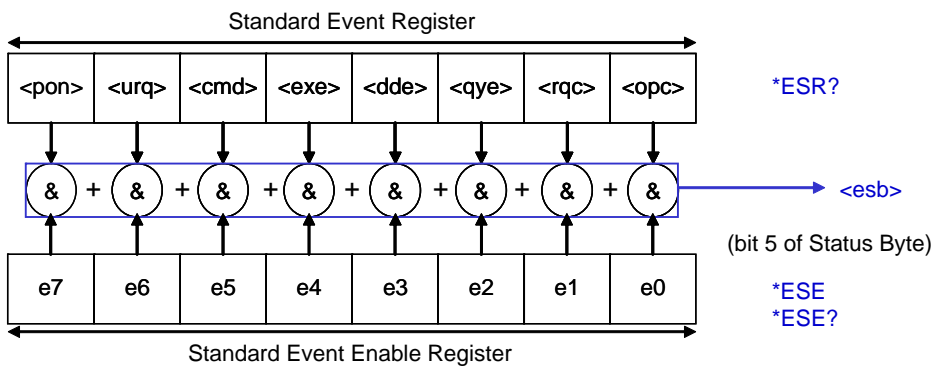


Figure 4-4. Status Event Register

PON Power On bit

This bit is set on power up of the MT8860C and is cleared if the instrument is reset or receives a *CLS command. This bit only indicates that a power on has occurred.

URQ User Request

This bit is not used.

CMD Command error

This bit is set if a command which is undefined or syntactically incorrect is received.

EXE Execution error

This bit is set if a syntactically correct command is received but cannot be executed for other reasons. For example, a parameter is out of the allowable range.

DDE Device Dependent Error

This bit is set if an MT8860C specific error occurs. The actual error can be found by using the SYSCFG? ERRLST and MEASCFG? 1,ERRLST commands.

- QYE Query error
 This bit is set if the controller –
 wants to read data from the MT8860C without having sent a query command or
 does not fetch requested data and sends new instructions to the instrument
 instead. The cause is often a faulty query that cannot be executed.

- RQC Request Bus Control
 This bit is not used

- OPC Operation Complete
 This bit is set when a message that includes the *OPC command has been
 completed and the GPIB interface is idle. For example, if the last command in a
 configuration sequence is *OPC, the OPC bit in the event status register is set
 when that configuration list has been completed.

Note The ESR register is cleared by reading its state with the *ESR? command or by
 issuing a *CLS command. The ESE register is cleared when a *CLS command is
 issued.

Instrument Status Register

The register is defined by IEEE 488.2 and each bit has the meaning shown below.

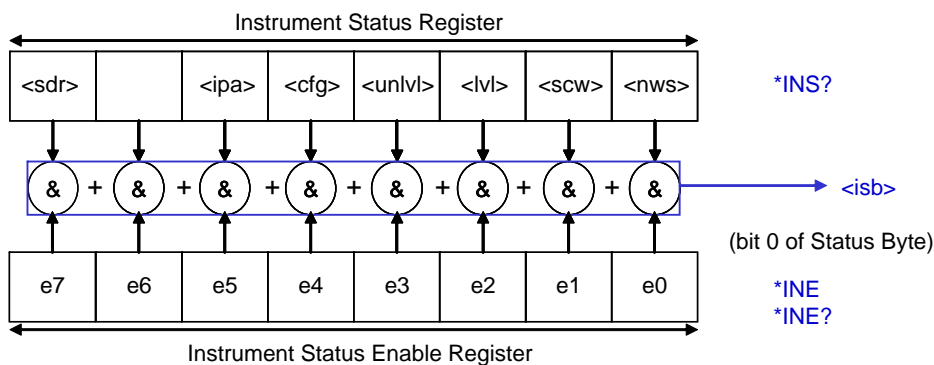


Figure 4-5. Instrument Status Register

- SDR Shutdown ready
 This bit is set when the shutdown sequence is complete and the instrument may
 be powered off. The shutdown sequence is invoked by the SHUTDOWN
 command.

- IPA IP address assignment
 This bit indicates when the unit is waiting for an IP address to be assigned to the
 DUT. It is cleared when a connection is made, and set when an IP address has
 been assigned to the DUT.

- CFG** Configuration change
This bit indicates when a configuration parameter has been changed by the instrument. The CFG bit is cleared when the configuration change “MEASCFG? 1,CFGCHG” is read.
- UNLVL** This bit is set when the instrument is unable to achieve the specified output power level. The highest achievable level is set in this condition. This bit is cleared on the next measurement taken.
- LVL** External gold card level complete
This bit indicates when the external gold card level is complete. This bit is cleared when MEASCFG 1,EXTLEVEL is received, and set when the leveling is complete.
- SCW** Status change window
This bit indicates that the measurement status has changed. Determine the instrument status using the command MEASCFG? 1,STATUS. The SCW bit is cleared when the status is read.
- NWS** Network scan
This bit is cleared when a network scan is started and set when the network scan is complete. The NWS bit will also be cleared after a serial poll.

Note	The INS register is not cleared by reading its state or by issuing a *CLS command. The INE register is cleared when a *CLS command is issued.
-------------	---

Chapter 5 — General Remote Commands

BOOTSTATUS? (Initial Start-up Self Test Status Request)

Query command format `BOOTSTATUS?`

Remarks On start-up the instrument performs a self test as well as initialising the instrument. The instrument status during the start up can be requested using this command. The command returns the status of the instrument during power up.

0 Passed the self test. Instrument ready.

1 Start-up still running the self test.

-1 Self test or initialisation FAILED.

During the start-up procedure all commands except `BOOTSTATUS?`, and the 488.2 event and status commands, result in an execution or command error. `STERR` will return the start-up results.

If there is a self test failure, only the commands listed above are available.

Related Commands `STERR`

SHUTDOWN (System Shutdown Command)

Set command format `SHUTDOWN`

Remarks This command must be used before powering down the instrument to ensure that the configuration settings are retained next time the instrument is powered on. The SDR bit in the `INS` register is set when the shutdown sequence is complete and it is safe to turn off the instrument.

Chapter 6 — System Commands

BNC (BNC Configuration)

Set command format	<pre>SYSCFG<ws>BNC, <bnc>, <state> <bnc> OUT1 BNC output 1 OUT2 BNC output 2 IN1 BNC input 1 IN2 BNC input 2 <state> The states the BNCs can be set to are BNC dependant. OUT1 VIDTRG, TXTRG, or RFTRG OUT2 VIDTRG, TXTRG, or RFTRG IN1 EXT, GOLDTX IN2 GOLDTX, EXT</pre>
Remarks	<p>There are two input BNCs and two output BNCs that can be configured.</p> <p>The output BNCs have a number of settings of which only one can be applied to a BNC at a time.</p> <p>Output settings</p> <p>TXTRG Output the Tx trigger signal from the internal reference radio.</p> <p>RFTRG The trigger signal from the MT8860C measurement system when the trigger source is set to RF.</p> <p>VIDTRG The trigger signal from the MT8860C measurement system when the trigger source is set to video.</p> <p>Input settings</p> <p>EXT The input for the external trigger source when the trigger source has been set to EXT.</p> <p>GOLDTX The Tx signal from an external GOLD WLAN card. This signal must encompass the whole of the external gold card transmission.</p>
Example	<p>To set BNC input 1 to EXT the command would be</p> <pre>SYSCFG BNC,IN1,EXT</pre>
Query command format	<pre>SYSCFG?<ws>BNC, <bnc></pre>
Response	<p>The response is returned in the form of the command to set the value.</p>

Example If BNC input 1 is set to EXT trigger source the request would be:
 SYSCFG? BNC, IN1
 The response would be:
 SYSCFG BNC, IN1, EXT

FRST sets <bnc> <state>
 OUT1 VIDTRG
 OUT2 TXTRG
 IN1 EXT
 IN2 GOLDTX

ERRLST (System Error List)

Query command format SYSCFG? <ws>ERRLST

Response SYSErrLST,AAAABBBBCCCCDDDEEEEEFFFFGGGGHHH
 HIII

AAAA	Message error codes Error reported from the system. See "System Error Codes" in Appendix A
BBBB	Power up error. Report to Anritsu support. See "System Error Codes" in Appendix A
CCCC	System temperature monitor error. See "System Error Codes" in Appendix A
DDDD	Reserved
EEEE	Internal error. Report to Anritsu support.
FFFF	GPIB error. See "System Error Codes" in Appendix A
GGGG	Reserved
HHHH	Reserved
IIII	Reserved

Remarks This command reads and clears the recorded error status latch for the system. The error latch records an error and retains the error state until the instrument is reset, the power is cycled, or the error latch is read using this command. The errors are indicated via the DDE bit of the event status register (ESR).

 The system ERRLST command can be used to give details on DDE errors indicated by bits being set in the ESR register. This command must be used in conjunction with MEASCFG?
 1,ERRLST.

FRST and RST (System Resets)

Set command format	Factory reset (FRST): SYSCFG<ws>FRST Instrument reset (RST): SYSCFG<ws>RST				
Remarks	<p>The MT8860C is reset to a default state. There are two levels of reset on the MT8860C: Factory and Instrument</p> <table><tr><td>Factory reset (FRST)</td><td>Resets all the MT8860C settings, including user path loss table, GPIB address, LAN IP settings, and all measurement configuration settings to default values. Parameters not affected:<ul style="list-style-type: none">MT8860C WLAN IP settings: MEASCFG 1, IPPARMS</td></tr><tr><td>Instrument reset (RST)</td><td>Resets the measurement configurations to the default settings. Parameters not affected:<ul style="list-style-type: none">BNC settings: SYSCFG BNC10 MHz reference: SYSCFG REFGPIB Address: SYSCFG GPIBADDRMT8860C LAN settings: SYSCFG LAN, MODE SYSCFG LAN, ADDRMT8860C WLAN IP settings: MEASCFG 1, IPPARMSUser Path Loss Table: MEASCFG? 1, PATHTBL</td></tr></table>	Factory reset (FRST)	Resets all the MT8860C settings, including user path loss table, GPIB address, LAN IP settings, and all measurement configuration settings to default values. Parameters not affected: <ul style="list-style-type: none">MT8860C WLAN IP settings: MEASCFG 1, IPPARMS	Instrument reset (RST)	Resets the measurement configurations to the default settings. Parameters not affected: <ul style="list-style-type: none">BNC settings: SYSCFG BNC10 MHz reference: SYSCFG REFGPIB Address: SYSCFG GPIBADDRMT8860C LAN settings: SYSCFG LAN, MODE SYSCFG LAN, ADDRMT8860C WLAN IP settings: MEASCFG 1, IPPARMSUser Path Loss Table: MEASCFG? 1, PATHTBL
Factory reset (FRST)	Resets all the MT8860C settings, including user path loss table, GPIB address, LAN IP settings, and all measurement configuration settings to default values. Parameters not affected: <ul style="list-style-type: none">MT8860C WLAN IP settings: MEASCFG 1, IPPARMS				
Instrument reset (RST)	Resets the measurement configurations to the default settings. Parameters not affected: <ul style="list-style-type: none">BNC settings: SYSCFG BNC10 MHz reference: SYSCFG REFGPIB Address: SYSCFG GPIBADDRMT8860C LAN settings: SYSCFG LAN, MODE SYSCFG LAN, ADDRMT8860C WLAN IP settings: MEASCFG 1, IPPARMSUser Path Loss Table: MEASCFG? 1, PATHTBL				

GPIBADDR (GPIB Address)

Set command format	SYSCFG<ws>GPIBADDR , <address> <address> 1 to 30
Remarks	This allows the GPIB address of the MT8860C to be changed. Note that after this command has been sent, all further communication over the GPIB bus to the device must use the new address. This setting is always saved over a power cycle.
Example	To set the GPIB address to 5 the command would be: SYSCFG GPIBADDR , 5
Query command format	SYSCFG?<ws>GPIBADDR
Response	The response is returned in the form of the command to set that state.
Example	SYSCFG? GPIBADDR If the GPIB address is 6 the response would be: SYSCFG GPIBADDR , 6
FRST sets	25

LAN (LAN IP Properties)

Query command format	SYSCFG?<ws>LAN
Remarks	This command is used to query the currently in use IPv4 properties of the MT8860C instrument
Response	<p>If the LAN MODE of the instrument on start-up was MANUAL and the manual IPv4 address assigned was 192.168.168.10 with a subnet mask of 255.255.255.0 then the response would be:-</p> <p>LAN,MANUAL,192.168.168.10,255,255,255,0</p> <p>If the LAN MODE of the instrument on start-up was AUTO and the instrument was able to obtain an IPv4 address and a subnet mask from the DHCP server then the response would be:-</p> <p>LAN,AUTO,<ip address>,<subnet mask></p> <p>Where the <ip address> and <subnet mask> are as dynamically allocated by the DHCP server and are in IPv4 dot-decimal notation format.</p> <p>If the LAN MODE of the instrument on start-up was AUTO and the instrument was unable to obtain an IPv4 address and a subnet mask from the DHCP server then the response would be:-</p> <p>LAN,AUTO,192.168.168.2,255.255.255.0</p>

LAN ADDR (LAN Address)

Set command format SYSCFG<ws>LAN,ADDR,<ip address>,<subnet mask>
 <ip address> IPv4 dot-decimal notation
 <subnet mask> IPv4 dot-decimal notation

Remarks This command is used to assign the Manual IPv4 network address and subnet mask of the instruments Ethernet adapter. This is the address that the instrument will adopt on start-up if the LAN MODE is set to MANUAL.

These settings will be adopted only after a power-cycle.

The IPv4 address and subnet mask are set using the dot-decimal notation also known as *quad-dotted notation* and *dotted quad notation*.

It is a method of writing binary numbers in octet grouped base-10 (decimal) numbers separated by dots (full stops).

The instrument will allow:-

A Class A, B or C IPv4 network address where the first octet must be in the range 1 to 223 but not 127 as this is reserved for local address.

A last octet range of 1 to 254 since 0 is the subnet ID and 255 is a broadcast address.

Network Class	First Octet Range	Recommended Subnet Mask
A	1-126	255.0.0.0
B	128-191	255.255.0.0
C	192-223	255.255.255.0

The instruments default IPv4 address is 192.168.168.2 and the subnet mask is 255.255.255.0. With this subnet mask the address range for the Host PC and/or other instruments is 192.168.168.1 to 192.168.168.254 allowing a total of 254 Hosts.

Example To set the manual IPv4 network address of the instrument to 192.168.168.10 and the subnet mask to 255.255.255.0 the command would be: -

```
SYSCFG LAN,ADDR,192.168.168.10,255.255.255.0
```

Query command format SYSCFG?<ws>LAN,ADDR

Response The response is returned in the form of the command to set the parameters.

```
SYSCFG LAN,ADDR,192.168.168.10,255.255.255.0
```

*RST LAN ADDR:<no change>

FRST sets LAN:ADDR: IP Address: 192.168.168.2
Subnet mask: 255.255.255.0

Note	Make sure that a unique IP address is selected. An address conflict could result in unexpected and unwanted device behaviour on the network.
-------------	--

LAN MODE (LAN Mode)

Set command format SYSCFG<ws>LAN, MODE, <state>
<state> AUTO - Automatic IPv4 address allocation
MANUAL - User defined IPv4 address

Remarks This command defines how the IPv4 network address is to be assigned to the MT8860C instrument on the next power cycle.
AUTO: The instruments Ethernet adapter will have its IPv4 address and subnet mask assigned dynamically by the DHCP server connected to the network.
If a DHCP server cannot be found then the unit will default to:-
IPv4 Address: 192.168.168.2
Subnet Mask: 255.255.255.0
MANUAL: The instruments Ethernet adapter IPv4 address and subnet mask will be assigned by the user.
See LAN ADDR system command.
This setting will be adopted only after a power-cycle.

Example To configure the LAN mode of the instrument to AUTO the command would be:-
SYSCFG LAN, MODE, AUTO

Query command format SYSCFG?<ws>LAN, MODE

Response The response is returned in the form of the command to set the value.

Example If the LAN mode of the instrument is set to MANUAL the response would be:-
SYSCFG LAN, MODE, MANUAL

FRST sets LAN MODE: AUTO

Note	Make sure that a unique IP address is selected. An address conflict could result in unexpected and unwanted device behaviour on the network.
-------------	--

OPTIONS (Query Enabled Options)

Query command format SYSCFG?<ws>OPTIONS , <instrument> , <option>
 <instrument> 0 = Platform, 1= Instrument 1
 <option> Option Number: Min: 0, Max: 128
(if option number = 0, it requests all options)

Example 1 To display the current state of option 14 for Instrument 1 the command would be:-

```
SYSCFG? OPTIONS , 1 , 14
```

Response 1 If option is enabled the response would be:-

```
SYSCFG OPTIONS , 1 , 14 , ENABLE
```

If option is disabled the option would be:-

```
SYSCFG OPTIONS , 1 , 14 , DISABLE
```

Example 2 To display all of the currently enabled options for Instrument 1 the command would be:-

```
SYSCFG? OPTIONS , 1 , 0
```

Response 2 SYSCFG OPTIONS , 1 , 1 , 14

The above response indicates that only one option (14) is enabled. Any additional options enabled are listed in sequence.

Example 3 To display all of the currently enabled options for the Platform the command would be:-

```
SYSCFG? OPTIONS , 0 , 0
```

Response 3 SYSCFG OPTIONS , 0 , 1 , 14

The above response indicates that one option (14) is enabled.

REF (10MHz Reference)

Set command format	SYSCFG<ws>REF , <state> <state> INT Internal EXT External
Remarks	This command configures whether the instrument uses internal or external 10 MHz reference. The EXT setting can only be selected when an external reference is applied.
Example	To set the external reference to be used, the command would be SYSCFG REF , EXT
Query command format	SYSCFG?<ws>REF
Response	The response is returned in the form of the command to set the value.
Example	If the internal reference was set the response would be SYSCFG REF , INT
FRST sets	INT

STERR (Errors at Start-Up)

Query command format	SYSCFG?<ws>STERR
Response	SYSSTERR , A , B , C , D A 0 Measurement system started. 1 Measurement system not started. B 0 Drivers OK. 1 Drivers start-up error. C 0 System data OK. 1 System data error. D 0 This software version supports this hardware version. 1 This software version does not support this hardware version.
Remarks	If “A” is “0” and the measurement system has started OK, check “MEASCFG?<ws>1,STERR” for measurement system start-up errors.

Chapter 7 — Measurement Configuration Commands

The commands detailed in this chapter are used to configure the measurement system. For ease of reference these MEASCFG commands can be split into eight functionality-based categories and these are presented as command hierarchies in the initial pages of this chapter. Some of the commands, such as PAYLOAD and TXPWR, may appear in multiple categories and thus, to avoid repetition, the commands themselves are listed in alphabetical order following the command reference table.

The MEASCFG commands follow the format described below.

MEASCFG<ws><reserved>,<configcmd>,<params.....>

- | | |
|-------------|---|
| <reserved> | Must be set to '1' |
| <configcmd> | The following subsections of this document define each of the configuration command mnemonics and parameters. |
| <params> | The number and type of parameters are dependent on the configuration command. |

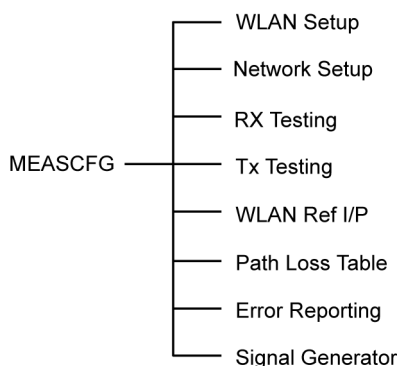


Figure 7-1. Measurement Configuration Command Groupings

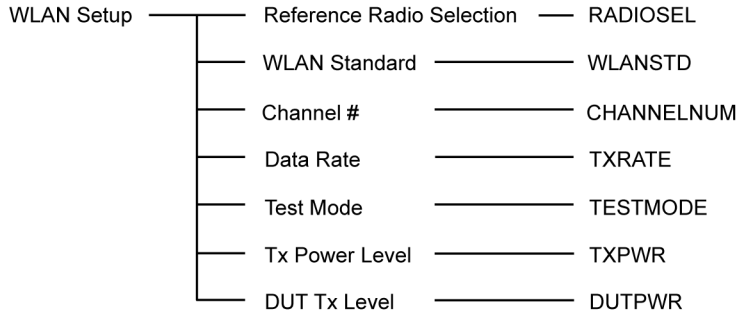


Figure 7-2. WLAN Setup Configuration Commands

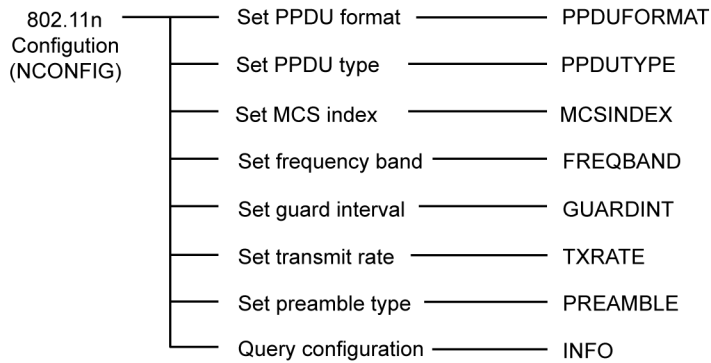


Figure 7-3. 802.11n Configuration Commands

Measurement Configuration Commands

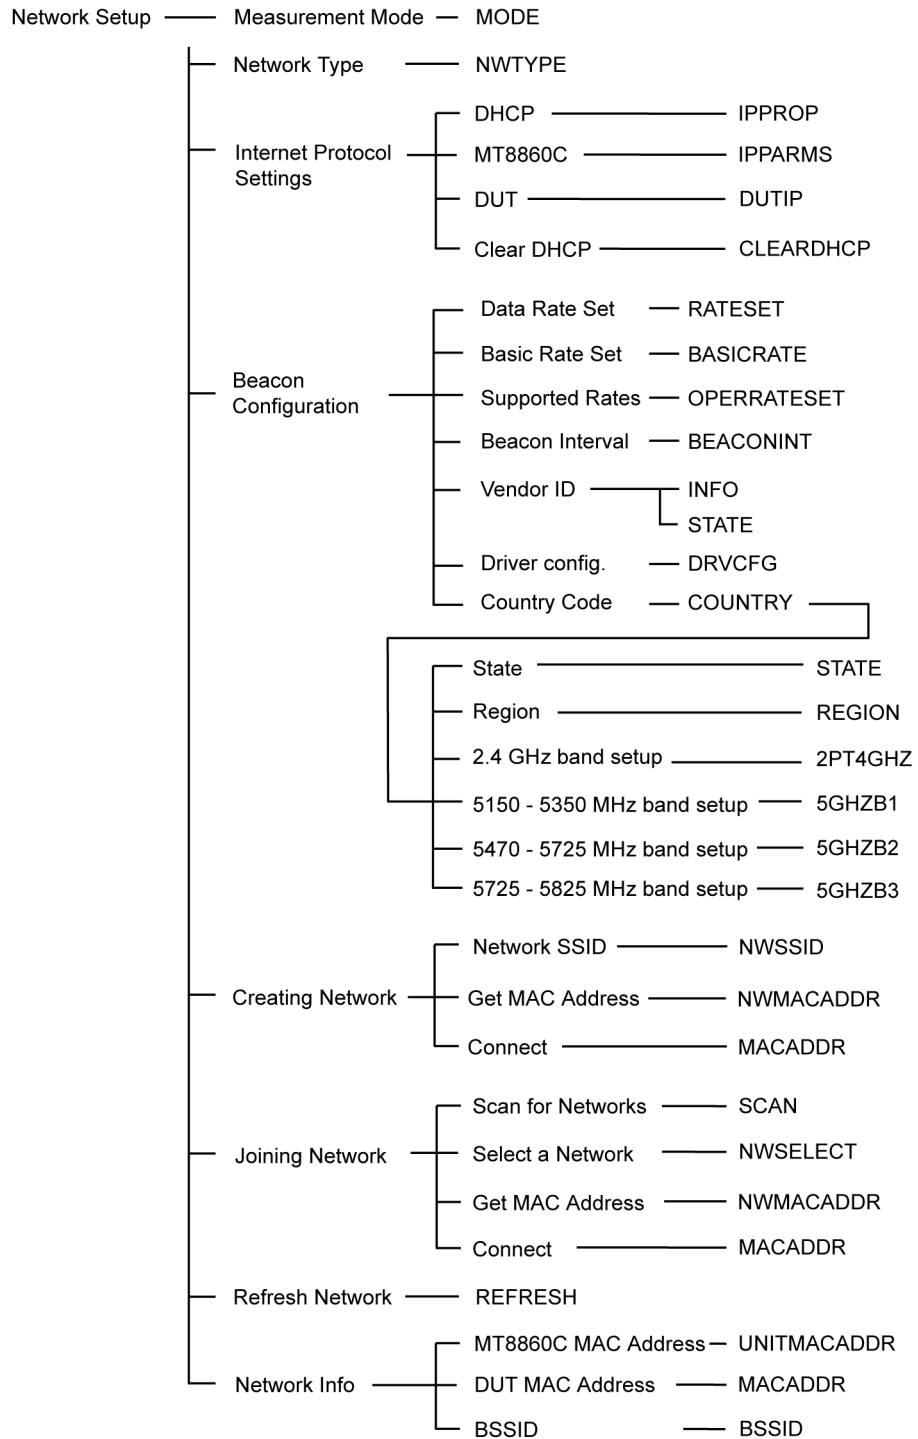


Figure 7-4. Network Setup Configuration Commands

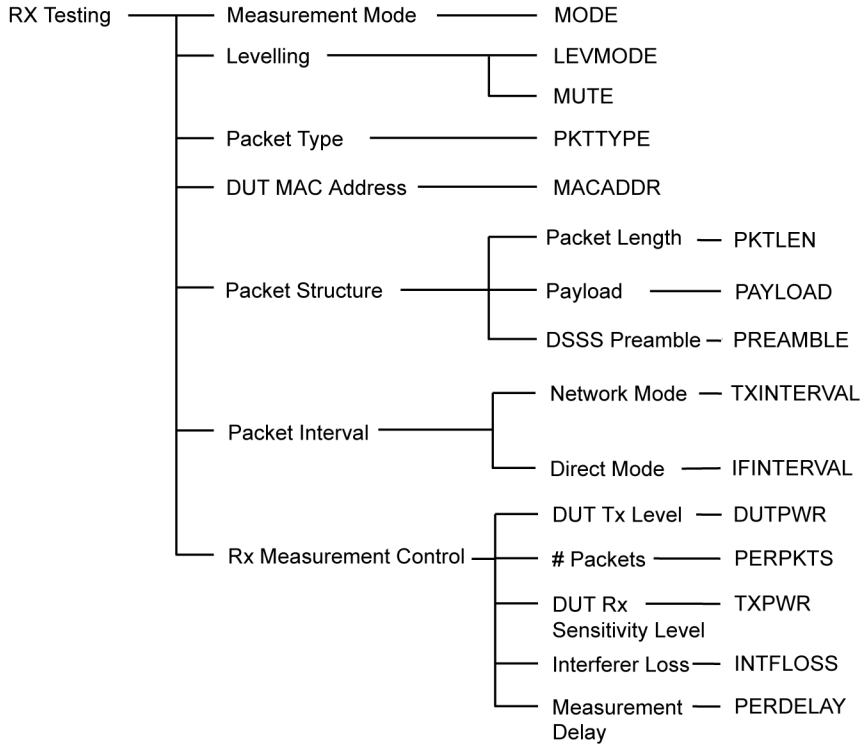


Figure 7-5. Rx Testing Configuration Commands

Measurement Configuration Commands

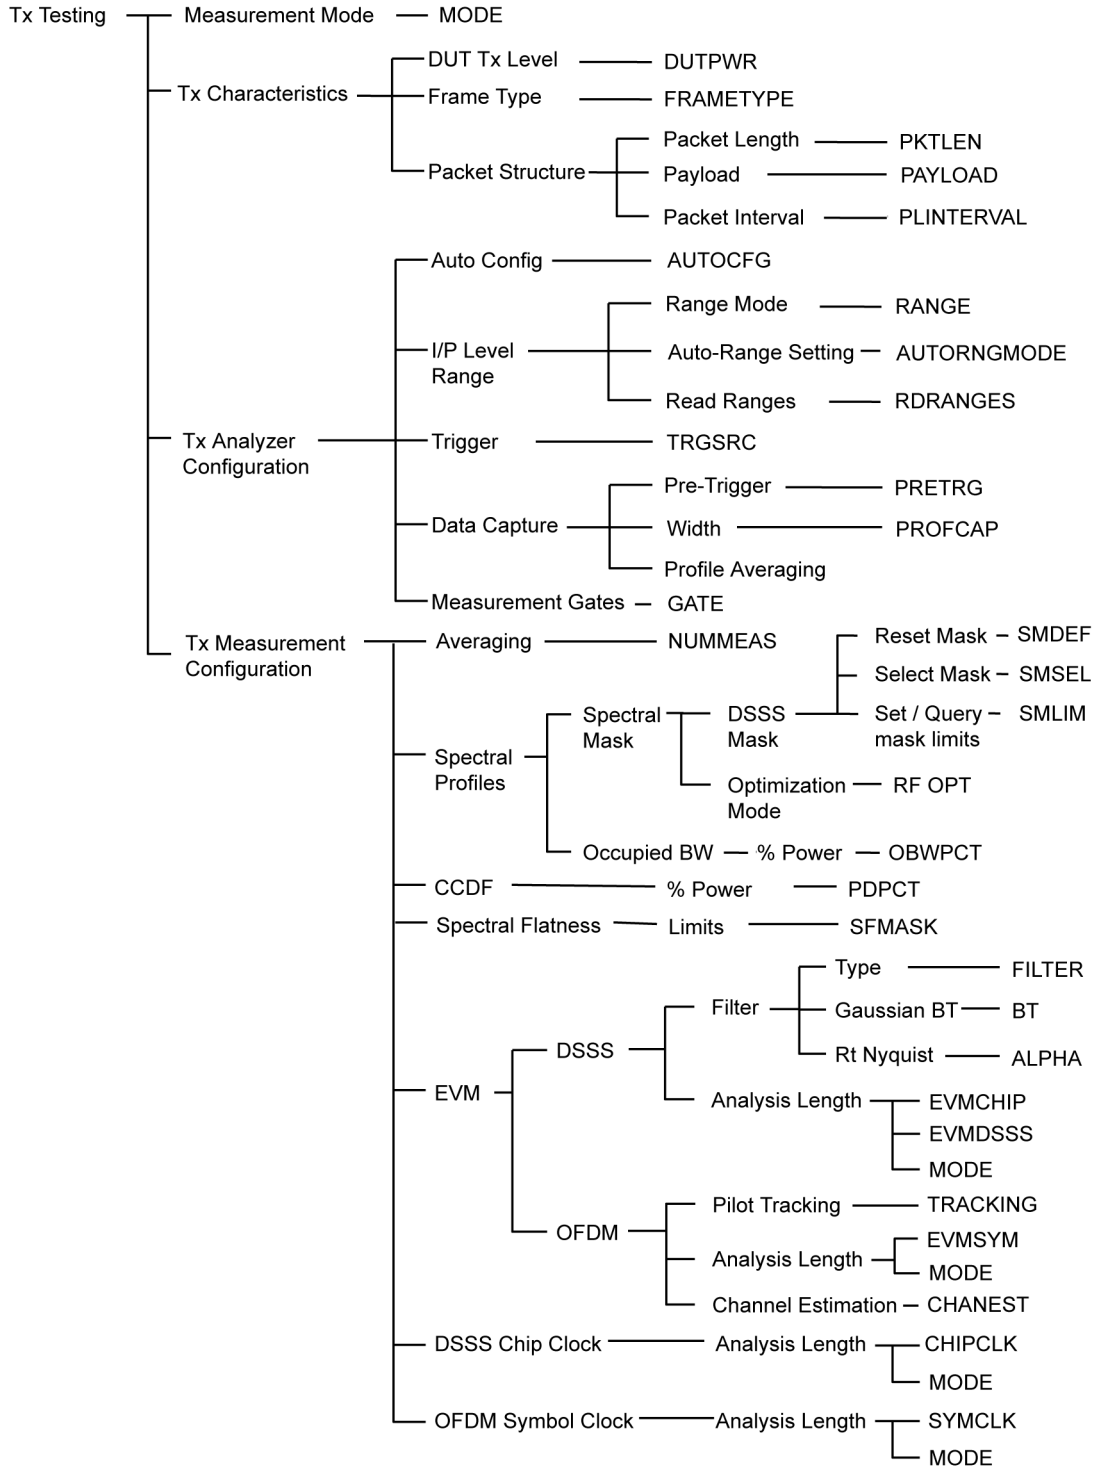


Figure 7-6. Tx Testing Configuration Commands

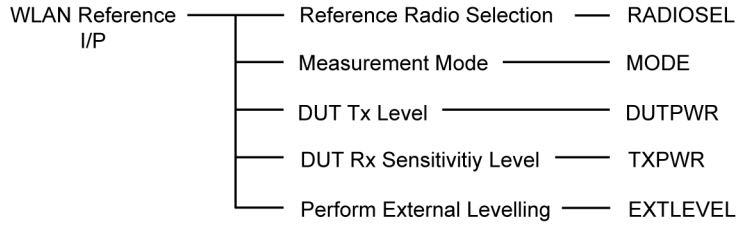


Figure 7-7. WLAN Reference I/P Configuration Commands

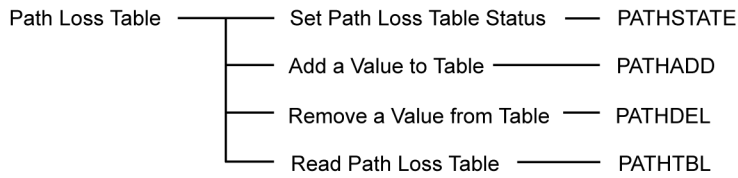


Figure 7-8. Path Loss Table Configuration Commands

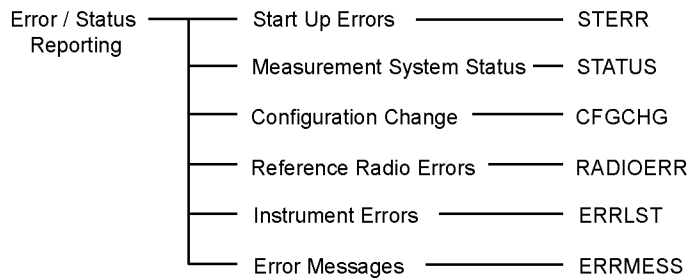


Figure 7-9. Error / Status Reporting Configuration Commands

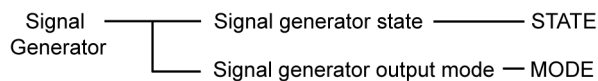


Figure 7-10. Signal Generator Configuration Commands

ABORT (Abort Measurement Operation)

Set command format	MEASCFG<ws>1 , ABORT
Remarks	This command aborts any current measurement operations in progress. The measurement results and profile data will be invalid.
Example	To abort the current measurement, the command would be MEASCFG 1 , ABORT

AUTOCFG (Automatic Configuration)

Set command format	MEASCFG<ws>1 , AUTOCFG
Remarks	This command automatically configures the Input level range, trigger source, pre-trigger, capture width, and measurement gates based on the specified DUT transmitter characteristics and the selected test mode.
Note	If the EVMCFG,MODE is set to AUTO then AUTOCFG will also configure the EVMCHIP, CHIPCLK, EVMSYM and SYMCLK settings.
Response	No response

AUTORNGMODE (Auto Ranging Mode)

Set command format	MEASCFG<WS>1 , AUTORNGMODE , <mode> <mode> LOW: Auto ranging in ranges 1, 1L, 2, and 2L (default) HIGH: Auto ranging in ranges 1, 1L, 2, 2L, 3, and 3L
Remarks	This command sets the range in which the MT8860C auto ranges. Refer to "RANGE" for details of the ranges.
Example	To set the auto range mode to high the command will be:- MEASCFG 1 ,AUTORNGMODE ,HIGH
Query command format	MEASCFG?<ws>1 , AUTORNGMODE
Response	The response is in the form of the command to set the value.
Example	If the auto range mode is low the command and response would be:- MEASCFG? 1 ,AUTORNGMODE Response MEASCFG 1 ,AUTORNGMODE ,LOW
Note	Refer to the operation manual for maximum measurement and damage power levels.

BASICRATE (Basic Rate)

Set command format	<p>MEASCFG<ws>1 , BASICRATE , <ABCDEFGHijkl> <ABCDEFGHijkl> represents 54, 48, 36, 24, 18, 12, 9, 6, 11, 5.5, 2, 1 Mbps Each data rate is represented by a bit value; 1=basic rate enabled, 0= basic rate disabled.</p>
Remarks	<p>This command is used to identify data rates flagged as being part of the basic rate set. The flagged data rate(s) are used only if the following two conditions are met: 1) the same rate(s) are also flagged using the RATESET command, and 2) the OPERRATESET command is set to "USER".</p>
Example	<p>To set the basic rates to 54, 48, 36, 24, 11, 5.5, 2, and 1 Mbps, the command would be: MEASCFG 1 , BASICRATE , 111100001111</p>
Query command format	MEASCFG?<ws>1 , BASICRATE
Response	The response is returned in the form of the command to set that state.
Example	<p>If the basic rates were 54, 48, 36, 24, 11, 5.5, 2, and 1 Mbps the response would be: MEASCFG 1 , BASICRATE , 111100001111</p>
*RST sets	111111111111

BEACONINT (Beacon Interval)

Set command format	<p>MEASCFG<ws>1 , BEACONINT , <Interval> <interval> 20 to 1000 ms.</p>
Remarks	<p>This command sets the approximate interval between beacons. This command is only applicable if network type (NWTYPE) is set to AP.</p>
Example	<p>To set the beacon interval to 20 the command would be MEASCFG 1 , BEACONINT , 20</p>
Query command format	MEASCFG?<ws>1 , BEACONINT
Response	The response is returned in the form of the command to set that state.
Example	<p>If the beacon interval is 20 the command and response would be: MEASCFG? 1 , BEACONINT Response MEASCFG 1 , BEACONINT , 20</p>
*RST sets	200

BSSID (Basic Service Set Identification)

Query command format	meascfg?<ws>1 , BSSID
Remarks	This command requests the BSSID of the current network.
Response	MEASCFG 1 , BSSID , <BSSID>
Example	MEASCFG? 1 , BSSID MEASCFG 1 , BSSID , 000B6B4E35F3

CFGCHG (Configuration Change)

Query command format	MEASCFG?<ws>1 , CFGCHG
Remarks	This command requests only the parameters that the firmware has been forced to change to enable the requested configuration. Reading the configuration changes will clear the settings and also clear the CFG bit in the INS register.
Response	CFGCHG , 1 , ABCDEF A 0 – packet length not changed 1 – packet length changed B 0 – WLAN standard not changed 1 – WLAN standard changed C 0 – Tx rate not changed 1 – Tx rate changed D 0 – channel setting not changed 1 – channel setting changed E 0 – SSID not changed 1 – SSID changed F 0 – preamble type not changed 1 – preamble type changed G 0 – PPDU type not changed 1 – PPDU type changed H 0 – MCSINDEX type not changed 1 – MCSINDEX type changed I 0 – TESTMODE type not changed 1 – TESTMODE type changed J 0 – FRAMETYPE not changed 1 – FRAMETYPE changed K 0 – Measurement mode not changed 1 – Measurement mode changed

- L 0 – RADIOSEL not changed
- 1 – RADIOSEL changed

Example If a request is made to change the WLANSTD from “B” at a data rate of 11 Mbps to “A”, the firmware will automatically change the Tx rate to 54 Mbps and set the channel to 64. The response string at this time would show bits C and D set as shown below:-

```
001100000000
```

CHANNELNUM (Channel Number)

Set command format MEASCFG<ws>1, CHANNELNUM, <primary channel>, [<secondary channel>]

<primary channel> Any of the 2.4 or 5.0 GHz channel numbers (see below)

<secondary channel> -1 or +1

The secondary channel is only applicable when a 40 MHz channel is selected (WLAN standard N when PPDUTYPE is not 20 MHz). This defines whether the 40 MHz channel consists of the 20 MHz primary channel and the 20 MHz channel below the primary channel (-1) or the 20 MHz primary channel and the 20 MHz channel above the primary channel (+1).

Remarks This is the channel at which the MT8860C measurements will be made and the reference radio will transmit. The channel numbers that can be set depend on the WLAN standard selected.

Example To set the channel number to 11 the command would be

```
MEASCFG 1, CHANNELNUM, 11
```

Query command format MEASCFG?<ws>1, CHANNELNUM

Response The response is returned in the form of the command to set that state.

Example If the channel number is 11 the command and response would be:

```
MEASCFG? 1, CHANNELNUM
```

Response

```
MEASCFG 1, CHANNELNUM, 11
```

*RST sets 6

CLEARDHCP (Clear IP Addresses Allocated by DHCP)

Set command Format MEASCFG<ws>1, CLEARDHCP

Remarks This command is used to clear the local table of WLAN IP addresses that have been allocated by DHCP.

DITHER (Enable Dithering)

Set command format	MEASCFG<ws>1,DITHER,<setting> <setting> OFF – Dithering not applied ON – Dithering applied
Remarks	This command is used to enable and disable dithering.
Example	To enable dithering the command would be:- MEASCFG 1,DITHER,ON
Query command format	MEASCFG?<ws>1,DITHER
Response	The response is in the form of the command to set the value.
Example	If dithering is enabled the command and response would be:- MEASCFG? 1,DITHER Response MEASCFG 1,DITHER,ON
Note	Dithering can be used to remove internally generated spurious from the spectrum.
*RST sets	OFF

DRVCFG (Reference Radio Driver Configuration)

Set command format	<p>MEASCFG<ws>1,DRVCFG,<decimal value></p> <p><decimal value> is a 'decimal' bit map of the following configuration options;</p> <p>Bit 0x00000001 If set, the MT8860C beacon frame TIM Element is configured to indicate that data is buffered for the DUT.</p> <p>Bit 0x00000002 If set, the 'more data' bit is enabled in the data frames transmitted by MT8860C.</p> <p>Bit 0x00000004 If set, the 'more data' bit is enabled in the beacon frames transmitted by MT8860C.</p> <p>Bit 0x00000008 If set, the ERP Information Element is included in the beacon and probe response frames transmitted by MT8860C</p> <p>Bit 0x00000016 If set, the MT8860C shall transmit directed (unicast) DEAUTHENTICATION frames.</p>
Remarks	<p>This command is used to change the control information that is contained in the beacon and data frames transmitted by MT8860C in Network Mode.</p>
Example	<p>To enable all setting indicated above, the command would be</p> <pre>MEASCFG 1,DRVCFG,31</pre>
Query Command Format	<pre>MEASCFG?<ws>1,DRVCFG</pre>
Response	<p>If all setting indicated above are enabled, the response would be:-</p> <pre>MEASCFG 1,DRVCFG,31</pre>

Note

On instrument power-on, DRVCFG has as default setting of 7.
 DRVCFG is not affected by *RST or a factory reset operation
 The DRVCFG setting is saved to non-volatile memory. Consequently, the setting is saved when the MT8860C is power-cycled.

DUTIP (DUT IP Address)

- Set command format** `MEASCFG<ws>1,DUTIP,<ip address>`
 <ip address> IPv4 dot-decimal notation
- Remarks** This command is used to set the DUT IP address.
- If IPPROP is set to “MANUAL” the DUT IP address must be set manually.
- The set DUTIP command manually assigns an IPv4 address for the DUT.
 - The query DUTIP command reads the manually assigned DUT IP address.
- If IPPROP is set to “AUTO” the DUT IP address is automatically allocated.
- The set DUTIP command generates an EXE error.
 - The query DUTIP command reads the automatically assigned DUT IP address.
- The IPv4 address is set using the dot-decimal notation also known as *quad-dotted notation* and *dotted quad notation*. This is a method of writing binary numbers in octet grouped base-10 (decimal) numbers separated by dots (full stops).
- The instrument will allow:-
- A Class A, B or C IPv4 network address where the first octet must be in the range 1 to 223 but not 127 as this is reserved for local address.
- A last octet range of 1 to 254 since 0 is the subnet ID and 255 is a broadcast address.

Network Class	First Octet Range	Recommended Subnet Mask
A	1-126	255.0.0.0
B	128-191	255.255.0.0
C	192-223	255.255.255.0

- Example** To set the DUT IP Parameters the command would be: -
- ```
MEASCFG 1,DUTIP,192.168.168.100
MEASCFG 1,DUTIP,192.168.168.99
```
- Query command format**      `MEASCFG?<ws>1,DUTIP`
- Response**                            The response is returned in the form of the command to set the parameters.
- Example**                              `MEASCFG 1,DUTIP,192.168.168.99`

## DUTPWR (DUT Transmit Power)

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | <pre>MEASCFG&lt;ws&gt;1 ,DUTPWR , &lt;power&gt; &lt;power&gt;      Min      -30 dBm               Max      +30 dBm               Resolution 1 dB</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Remarks              | <p>This command is used to specify the expected DUT transmit power level. This value is used when:-</p> <ol style="list-style-type: none"> <li>1. Performing Rx testing.<br/>The value specified represents the nominal power level of the acknowledgement packet (ACK) returned by the DUT in response to a correctly received data packet. In order to prevent the MT8860C reference radio receiver from being saturated, the ACK packet is attenuated internally by the MT8860C before the signal reaches the receiver. The MT8860C uses the DUT power level to calculate the amount of attenuation required in the return path.</li> <li>2. Performing Tx testing.<br/>The MT8860C Tx analyzer settings can be automatically configured using the command MEASCFG 1,AUTOCFG. The DUT power level value is used to determine the Input Level Range setting most appropriate.</li> </ol> |
| Example              | <p>To configure the DUTPWR to 20dBm the command would be</p> <pre>MEASCFG 1 ,DUTPWR , 20</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Query command format | <pre>MEASCFG?&lt;ws&gt;1 ,DUTPWR</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Response             | <p>The response is returned in the form of the command to set the value.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Example              | <p>If the DUTPWR is set to -10dBm the response would be</p> <pre>MEASCFG 1 ,DUTPWR , -10</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| *RST sets            | <p>10 dBm</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |



## ERRLST (Error List)

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |      |                                                                                                                                |      |                                                                                                                    |      |                                                                                                                       |      |          |      |                                            |      |                                                      |      |                                                                              |      |                                                                              |      |                                 |      |          |           |                                                   |           |                                                     |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|--------------------------------------------------------------------------------------------------------------------------------|------|--------------------------------------------------------------------------------------------------------------------|------|-----------------------------------------------------------------------------------------------------------------------|------|----------|------|--------------------------------------------|------|------------------------------------------------------|------|------------------------------------------------------------------------------|------|------------------------------------------------------------------------------|------|---------------------------------|------|----------|-----------|---------------------------------------------------|-----------|-----------------------------------------------------|
| Query command format | MEASCFG?<ws>1 ,ERRLST                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |      |                                                                                                                                |      |                                                                                                                    |      |                                                                                                                       |      |          |      |                                            |      |                                                      |      |                                                                              |      |                                                                              |      |                                 |      |          |           |                                                   |           |                                                     |
| Response             | ERRLST,1,AAAABBBBCCCCDDDDDEEEEEFFFFFFGGGGHHHH<br>IIIIJJJ!<cmd error>!<exe error>!                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |      |                                                                                                                                |      |                                                                                                                    |      |                                                                                                                       |      |          |      |                                            |      |                                                      |      |                                                                              |      |                                                                              |      |                                 |      |          |           |                                                   |           |                                                     |
|                      | <table border="0"> <tr> <td>AAAA</td> <td>Message error codes<br/>Error reported from the system.<br/>See “System Error Codes” and “Measurement Error Codes” in Appendix A</td> </tr> <tr> <td>BBBB</td> <td>Power up error. Report to Anritsu support.<br/>See “System Error Codes” and “Measurement Error Codes” in Appendix A</td> </tr> <tr> <td>CCCC</td> <td>Measurement system temperature monitor error.<br/>See “System Error Codes” and “Measurement Error Codes” in Appendix A</td> </tr> <tr> <td>DDDD</td> <td>Reserved</td> </tr> <tr> <td>EEEE</td> <td>Internal error. Report to Anritsu support.</td> </tr> <tr> <td>FFFF</td> <td>RF error code.<br/>See “RF Error Codes” in Appendix A</td> </tr> <tr> <td>GGGG</td> <td>Rx Measurement error code.<br/>See “Rx Measurement Error Codes” in Appendix A</td> </tr> <tr> <td>HHHH</td> <td>Tx Measurement error code.<br/>See “Tx Measurement Error Codes” in Appendix A</td> </tr> <tr> <td>IIII</td> <td>DSP Error code. See Appendix A.</td> </tr> <tr> <td>JJJJ</td> <td>Reserved</td> </tr> <tr> <td>cmd error</td> <td>Command on which the last command error occurred.</td> </tr> <tr> <td>exe error</td> <td>Command on which the last execution error occurred.</td> </tr> </table> | AAAA | Message error codes<br>Error reported from the system.<br>See “System Error Codes” and “Measurement Error Codes” in Appendix A | BBBB | Power up error. Report to Anritsu support.<br>See “System Error Codes” and “Measurement Error Codes” in Appendix A | CCCC | Measurement system temperature monitor error.<br>See “System Error Codes” and “Measurement Error Codes” in Appendix A | DDDD | Reserved | EEEE | Internal error. Report to Anritsu support. | FFFF | RF error code.<br>See “RF Error Codes” in Appendix A | GGGG | Rx Measurement error code.<br>See “Rx Measurement Error Codes” in Appendix A | HHHH | Tx Measurement error code.<br>See “Tx Measurement Error Codes” in Appendix A | IIII | DSP Error code. See Appendix A. | JJJJ | Reserved | cmd error | Command on which the last command error occurred. | exe error | Command on which the last execution error occurred. |
| AAAA                 | Message error codes<br>Error reported from the system.<br>See “System Error Codes” and “Measurement Error Codes” in Appendix A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |      |                                                                                                                                |      |                                                                                                                    |      |                                                                                                                       |      |          |      |                                            |      |                                                      |      |                                                                              |      |                                                                              |      |                                 |      |          |           |                                                   |           |                                                     |
| BBBB                 | Power up error. Report to Anritsu support.<br>See “System Error Codes” and “Measurement Error Codes” in Appendix A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |      |                                                                                                                                |      |                                                                                                                    |      |                                                                                                                       |      |          |      |                                            |      |                                                      |      |                                                                              |      |                                                                              |      |                                 |      |          |           |                                                   |           |                                                     |
| CCCC                 | Measurement system temperature monitor error.<br>See “System Error Codes” and “Measurement Error Codes” in Appendix A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |      |                                                                                                                                |      |                                                                                                                    |      |                                                                                                                       |      |          |      |                                            |      |                                                      |      |                                                                              |      |                                                                              |      |                                 |      |          |           |                                                   |           |                                                     |
| DDDD                 | Reserved                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |      |                                                                                                                                |      |                                                                                                                    |      |                                                                                                                       |      |          |      |                                            |      |                                                      |      |                                                                              |      |                                                                              |      |                                 |      |          |           |                                                   |           |                                                     |
| EEEE                 | Internal error. Report to Anritsu support.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |      |                                                                                                                                |      |                                                                                                                    |      |                                                                                                                       |      |          |      |                                            |      |                                                      |      |                                                                              |      |                                                                              |      |                                 |      |          |           |                                                   |           |                                                     |
| FFFF                 | RF error code.<br>See “RF Error Codes” in Appendix A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |      |                                                                                                                                |      |                                                                                                                    |      |                                                                                                                       |      |          |      |                                            |      |                                                      |      |                                                                              |      |                                                                              |      |                                 |      |          |           |                                                   |           |                                                     |
| GGGG                 | Rx Measurement error code.<br>See “Rx Measurement Error Codes” in Appendix A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |      |                                                                                                                                |      |                                                                                                                    |      |                                                                                                                       |      |          |      |                                            |      |                                                      |      |                                                                              |      |                                                                              |      |                                 |      |          |           |                                                   |           |                                                     |
| HHHH                 | Tx Measurement error code.<br>See “Tx Measurement Error Codes” in Appendix A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |      |                                                                                                                                |      |                                                                                                                    |      |                                                                                                                       |      |          |      |                                            |      |                                                      |      |                                                                              |      |                                                                              |      |                                 |      |          |           |                                                   |           |                                                     |
| IIII                 | DSP Error code. See Appendix A.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |      |                                                                                                                                |      |                                                                                                                    |      |                                                                                                                       |      |          |      |                                            |      |                                                      |      |                                                                              |      |                                                                              |      |                                 |      |          |           |                                                   |           |                                                     |
| JJJJ                 | Reserved                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |      |                                                                                                                                |      |                                                                                                                    |      |                                                                                                                       |      |          |      |                                            |      |                                                      |      |                                                                              |      |                                                                              |      |                                 |      |          |           |                                                   |           |                                                     |
| cmd error            | Command on which the last command error occurred.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |      |                                                                                                                                |      |                                                                                                                    |      |                                                                                                                       |      |          |      |                                            |      |                                                      |      |                                                                              |      |                                                                              |      |                                 |      |          |           |                                                   |           |                                                     |
| exe error            | Command on which the last execution error occurred.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |      |                                                                                                                                |      |                                                                                                                    |      |                                                                                                                       |      |          |      |                                            |      |                                                      |      |                                                                              |      |                                                                              |      |                                 |      |          |           |                                                   |           |                                                     |
| Remarks              | <p>This command reads and clears the recorded error status latch for the measurement instrument. The error latch records an error and retains the error state until the instrument is reset, the power is cycled, or the error latch is read using this command. The errors are indicated via the DDE bit of the event status register (ESR).</p> <p>This command should be used in conjunction with SYSCFG?ERRLST.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |      |                                                                                                                                |      |                                                                                                                    |      |                                                                                                                       |      |          |      |                                            |      |                                                      |      |                                                                              |      |                                                                              |      |                                 |      |          |           |                                                   |           |                                                     |

## ERRMESS (Error Message Description)

|                      |                                                                                                                                                                                                                                           |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Query command format | MEASCFG?<ws>1,ERRMESS,<error number>                                                                                                                                                                                                      |
| Remarks              | This command requests detailed information about the error number given.                                                                                                                                                                  |
| Response             | ERRMESS,<reserved>,<error number>,<length>,<detail><br><error number>      Number of error according to ERRLST<br><length>            Number of characters in the <detail> string<br><detail>             Explanation of the error number |
| Example              | MEASCFG? 1,ERRMESS,120D<br>ERRMESS,1,120D,76,Error from reference radio. Use the RADIOERR command to obtain more details.                                                                                                                 |

## EXTLEVEL (External Level)

|                    |                                                                                                                                   |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Set command format | MEASCFG<ws>1,EXTLEVEL                                                                                                             |
| Remarks            | When using an external gold card, this command will level the output and set the LVL bit in the INS when levelling has completed. |

### FRAMETYPE (Frame Type)

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | <code>MEASCFG&lt;ws&gt;1 , FRAMETYPE , &lt;type&gt;</code><br><code>&lt;type&gt;</code> <code>DATA</code><br><code>ACK</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Remarks              | <p>The FRAMETYPE command determines the type of packets transmitted and analyzed during Tx measurements.</p> <p>When set to DATA, the MT8860C transmits ICMP echo request data packets to the DUT which are then returned to the MT8860C and analyzed during Tx measurements. This technique is sometimes referred to as 'Packet Loopback'.</p> <p>When set to ACK, the MT8860C transmits 'Unicast' data packets to the DUT and then analyzes the ACK packets that are returned. Certain Tx measurements are not supported when FRAMETYPE is set to ACK. Refer to the Chapter 8 for details.</p> <p>The FRAMETYPE command is applicable in Network mode only.</p> |
| Example              | <p>To configure the FRAMETYPE to ACK the command would be</p> <pre>MEASCFG 1 , FRAMETYPE , ACK</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Query command format | <code>MEASCFG?&lt;ws&gt;1 , FRAMETYPE</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Response             | The response is returned in the form of the command to set the value.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Example              | <p>If the FRAMETYPE is set to DATA the response would be</p> <pre>MEASCFG 1 , FRAMETYPE , DATA</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| *RST sets            | <code>DATA</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## GATE (Gate Configuration)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                           |   |   |                            |      |        |                            |        |        |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|---|---|----------------------------|------|--------|----------------------------|--------|--------|
| Set command format         | <pre>MEASCFG&lt;ws&gt;1,GATE,&lt;gate&gt;,&lt;delay&gt;,&lt;width&gt; &lt;gate&gt;      1 or 2 &lt;delay&gt;     Min 0               Max 5.95 ms               Resolution1 uS (1E-006) &lt;width&gt;     Min 0               Max 5.95 ms               Resolution1 uS (1E-006)</pre>                                                                                                                                                                                                |                           |   |   |                            |      |        |                            |        |        |
| Remarks                    | <p>The gate delay is the period after the pre-trigger point that the measurement system waits before including samples in the measurements. The gate width is the period after the gate delay during which measurements are made. The MT8860C has two sets of gate delay and gate widths. The total time period from the start of the earliest gate to the end of the latest gate must be less than 5.95 ms. Refer to the figure within the description of the PROFCAP command.</p> |                           |   |   |                            |      |        |                            |        |        |
| Example                    | <p>To set the gate 1 delay to 100 microseconds and the width to 400 micro seconds the command would be</p> <pre>MEASCFG 1,GATE,1,100E-06,400E-06</pre> <p>Or</p> <pre>MEASCFG 1,GATE,1,0.0001,400US</pre> <p>Or</p> <pre>MEASCFG 1,GATE,1,100US,0.0004</pre>                                                                                                                                                                                                                        |                           |   |   |                            |      |        |                            |        |        |
| Query command format       | <pre>MEASCFG?&lt;ws&gt;1,GATE,&lt;gate&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                    |                           |   |   |                            |      |        |                            |        |        |
| Response                   | <pre>&lt;gate&gt;1 or 2</pre> <p>The response is returned in the form of the command to set that state.</p>                                                                                                                                                                                                                                                                                                                                                                         |                           |   |   |                            |      |        |                            |        |        |
| Example                    | <p>If gate 2 had a gate delay of 15 microseconds and a width of 22 micro seconds the response would be:</p> <pre>MEASCFG 1,GATE,2,1.5E-005,2.2E-005</pre>                                                                                                                                                                                                                                                                                                                           |                           |   |   |                            |      |        |                            |        |        |
| *RST sets                  | <table border="0"> <tr> <td style="padding-right: 20px;"><code>&lt;gate&gt;</code></td> <td style="padding-right: 20px;">1</td> <td>2</td> </tr> <tr> <td><code>&lt;delay&gt;</code></td> <td>0 us</td> <td>200 us</td> </tr> <tr> <td><code>&lt;width&gt;</code></td> <td>192 us</td> <td>700 us</td> </tr> </table>                                                                                                                                                               | <code>&lt;gate&gt;</code> | 1 | 2 | <code>&lt;delay&gt;</code> | 0 us | 200 us | <code>&lt;width&gt;</code> | 192 us | 700 us |
| <code>&lt;gate&gt;</code>  | 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | 2                         |   |   |                            |      |        |                            |        |        |
| <code>&lt;delay&gt;</code> | 0 us                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | 200 us                    |   |   |                            |      |        |                            |        |        |
| <code>&lt;width&gt;</code> | 192 us                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | 700 us                    |   |   |                            |      |        |                            |        |        |

## IFINTERVAL (Inter Frame Interval)

|                      |                                                                                                                                                                                                                                              |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1, IFINTERVAL, <interval><br>< interval >    Min            0 slots<br>Max            200 slots                                                                                                                                   |
| Remarks              | This command is used to set the interval between frame transmissions for Rx tests when Direct mode is selected.<br><br>The duration of a slot depends on the current modulation scheme:<br><br>DSSS            20 us<br>OFDM            9 us |
| Example              | To set the inter frame interval to 10 slots the command would be:<br><br>MEASCFG 1, IFINTERVAL, 10                                                                                                                                           |
| Query command format | MEASCFG?<ws>1, IFINTERVAL                                                                                                                                                                                                                    |
| Response             | The response is returned in the form of the command to set the parameter.                                                                                                                                                                    |
| Example              | MEASCFG 1, IFINTERVAL, 10                                                                                                                                                                                                                    |
| *RST sets            | 5 slots                                                                                                                                                                                                                                      |

## INTFLOSS (Interferer Loss)

|                      |                                                                                                                                                                                                                                                                                                                                       |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Query command format | MEASCFG?<ws>1, INTFLOSS, <channel><br><br>The channel number that can be set depends on the frequency band selected:-<br><br>2.4 GHz:<br>1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, (14: DSSS only)<br><br>5.0 GHz:<br>36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 149, 153, 157, 161, 165 |
| Remarks              | This command will retrieve the Insertion Loss in dB between the 'Interferer Input Port' and the 'Test Port' for the channel requested.                                                                                                                                                                                                |
| Response             | The response format is:-<br><br>INTFLOSS, 1, <channel>, <Insertion Loss>                                                                                                                                                                                                                                                              |
| Example              | To read the Insertion Loss for Channel 6, the command would be:-<br><br>MEASCFG? 1, INTFLOSS, 6<br><br>The response would be:-<br><br>INTFLOSS, 1, 6, -21.88                                                                                                                                                                          |

## IPPARMS (WLAN IP Parameters)

Set command format      MEASCFG<ws>1,IPPARMS,<ip address>,<subnet mask>  
                                  <ip address>            IPv4 dot-decimal notation  
                                  <subnet mask>        IPv4 dot-decimal notation

Remarks                    This command is used to set the WLAN IP address and subnet mask of the MT8860C internal reference radio. When analyzing the transmitter performance of a WLAN device in Network mode, the IP parameters (address and subnet mask) of the MT8860C must be configured. When IPPROP is set to “Manual”, the IPPARMS command can be used to set the IP parameters of the MT8860C. When IPPROP is set to “AUTO”, an execution (EXE) error is generated if trying to configure these settings.

The IPv4 address and subnet mask are set using a dot-decimal notation also known as quad-dotted notation and dotted quad notation. This is a method of writing binary numbers in octet grouped base-10 (decimal) numbers separated by dots (full stops).

The instrument will allow:

A class A, B, or C IPv4 network address where the first octet must be in the range 1 to 223 but not 127 as this is reserved for local addresses.

A last octet range of 1 to 254 since 0 is the subnet ID and 255 is a broadcast address.

| Network Class | First Octet Range | Recommended Subnet Mask |
|---------------|-------------------|-------------------------|
| A             | 1-126             | 255.0.0.0               |
| B             | 128-191           | 255.255.0.0             |
| C             | 192-223           | 255.255.255.0           |

Example                    To set the IP Parameters the command would be: -

MEASCFG 1,IPPARMS,192.168.168.10,255.255.255.0

Query command format   MEASCFG?<ws>1,IPPARMS

Response                    The response is returned in the form of the command to set the parameters.

Example                    MEASCFG 1,IPPARMS,192.168.168.10,255.255.255.0

### IPPROP (WLAN IP Properties)

|                      |                                                                                                                                                                                  |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , IPPROP , <param><br><param>      AUTO - Automatic IPv4 address allocation<br>MANUAL - user defined IPv4 address                                                   |
| Remarks              | Defines how the WLAN IP properties are to be set. Manual indicates that the DUTIP and IPPARMS will be set by the user, AUTO indicates that they will be assigned by the MT8860C. |
| Example              | To configure the IPPROP to AUTO the command would be<br>MEASCFG 1 , IPPROP , AUTO                                                                                                |
| Query command format | MEASCFG?<ws>1 , IPPROP                                                                                                                                                           |
| Response             | The response is returned in the form of the command to set the value.                                                                                                            |
| Example              | If the IPPROP is set to MANUAL the response would be<br>MEASCFG 1 , IPPROP , MANUAL                                                                                              |
| *RST sets            | AUTO                                                                                                                                                                             |

### LEVMODE (Levelling Mode)

|                      |                                                                                                                                                              |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , LEVMODE , <mode><br><mode>      NORMAL - levelling is performed on preamble and payload.<br>PAYLOAD - Levelling is performed on payload only. |
| Remarks              | This command is used to define the levelling mode to be used for Rx testing with an external reference radio.                                                |
| Note                 | This setting only applies when an external reference radio is selected. When the internal reference radio is selected NORMAL levelling mode is always used.  |
| Example              | To configure the LEVMODE to NORMAL the command would be<br>MEASCFG 1 , LEVMODE , NORMAL                                                                      |
| Query command format | MEASCFG?<ws>1 , LEVMODE                                                                                                                                      |
| Response             | The response is returned in the form of the command to set the value.                                                                                        |
| Example              | If the LEVMODE is set to PAYLOAD the response would be<br>MEASCFG 1 , LEVMODE , PAYLOAD                                                                      |
| *RST sets            | NORMAL                                                                                                                                                       |

## MACADDR (MAC Address)

|                      |                                                                                                                                                                             |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 ,MACADDR , <address><br><address> 6 byte hexadecimal string containing the address.                                                                            |
| Remarks              | This command is used to specify the MAC address of the DUT. The MAC address must be specified when performing an Rx test in Network mode and the PKTTYPE is set to UNICAST. |
| Example              | To set the MAC address to 0x9345BCF431A9 the command would be: -<br><br>MEASCFG 1 ,MACADDR , 9345BCF431A9                                                                   |
| Query command format | MEASCFG?<ws>1 ,MACADDR                                                                                                                                                      |
| Response             | The response is returned in the form of the command to set that state.                                                                                                      |
| Example              | If the DUT MAC address is 0x9345BCF431A9 the response would be:<br><br>MEASCFG 1 ,MACADDR , 9345BCF431A9                                                                    |
| *RST sets            | 0xFFFFFFFFFFFFFFFF                                                                                                                                                          |

## MODE (Measurement Mode)

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 ,MODE , <measmode><br><measmode> TXMODE Tx measurement mode<br>RXMODE Rx measurement mode                                                                                                                                                                                                                                                                                                                   |
| Remarks              | There are two independent measurement modes in the MT8860C as described earlier in this document. This command is used to switch between these modes or to read the present mode.<br><br>Note: RXMODE should be selected when:- <ul style="list-style-type: none"> <li>• establishing a Network Connection</li> <li>• performing an Rx test</li> <li>• an external reference radio is selected (see RADIOSEL)</li> </ul> |
| Example              | To set the measurement mode to RXMODE the command would be:<br><br>MEASCFG 1 ,MODE ,RXMODE                                                                                                                                                                                                                                                                                                                               |
| Query command format | MEASCFG?<ws>1 ,MODE                                                                                                                                                                                                                                                                                                                                                                                                      |
| Response             | The response is returned in the form of the command to set that state.                                                                                                                                                                                                                                                                                                                                                   |
| Example              | If the measurement mode is TXMODE the response would be:<br><br>MEASCFG 1 ,MODE ,TXMODE                                                                                                                                                                                                                                                                                                                                  |
| *RST sets            | TXMODE                                                                                                                                                                                                                                                                                                                                                                                                                   |



## MUTE (Measurement Mode)

|                      |                                                                                                                                                                                                                            |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , MUTE , <state><br><state>            ENABLE    Mute the output<br>DISABLE    Un-mute the output by applying the<br>attenuation calculated during leveling.                                                  |
| Remarks              | This command is used to 'mute' the output at the test port by applying 93 db of attenuation on the main attenuator. It is to be used only in conjunction with commands for the MN8861A to mute the output during leveling. |
| Example              | To mute the output at the test port the command would be:<br><br>MEASCFG 1 , MUTE , ENABLE                                                                                                                                 |
| Query command format | MEASCFG?<ws>1 , MUTE                                                                                                                                                                                                       |
| Response             | The response is returned in the form of the command to set that state.                                                                                                                                                     |
| Example              | If the setting is enabled, the response would be:<br><br>MEASCFG 1 , MUTE , ENABLE                                                                                                                                         |
| Note                 | The setting is disabled on Power-Cycle, *RST, RST, and FRST.                                                                                                                                                               |

## NUMMEAS (Number of Measurements)

|                      |                                                                                                                                                                                                                       |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , NUMMEAS , <measnum><br><measnum>            Min            1<br>Max            1000                                                                                                                    |
| Remarks              | This is the number of measurements (or triggers) that will be included in the requested transmitter measurements.<br><br>Note: The results are returned when the specified number of measurements has been completed. |
| Example              | To set the number of measurements to 100 the command would be<br><br>MEASCFG 1 , NUMMEAS , 100                                                                                                                        |
| Query command format | MEASCFG?<ws>1 , NUMMEAS                                                                                                                                                                                               |
| Response             | The response is returned in the form of the command to set that state.                                                                                                                                                |
| Example              | If the number of measurements is 15 the response would be:<br><br>MEASCFG 1 , NUMMEAS , 15                                                                                                                            |
| *RST sets            | 1                                                                                                                                                                                                                     |

## NWAVAIL (Read Networks Available)

|                      |                                                                                                                                                                                                                                                                                                                      |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Query command format | MEASCFG?<ws>1,NWAVAIL                                                                                                                                                                                                                                                                                                |
| Remarks              | This command returns the number of networks that were found when a SCAN was performed. The information for each network can be retrieved using the NWINFO command. The maximum number of networks the MT8860C will report is 16.<br><br>Note: A scan must be performed immediately prior to the use of this command. |
| Example              | To retrieve the number of available networks the command would be<br><br>MEASCFG? 1,NWAVAIL<br><br>The response to the above command would be<br><br>NWAVAIL,1,x                                                                                                                                                     |

## NWINFO (Read Network Information)

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Query command format | MEASCFG?<ws>1,NWINFO,<index><br><br><index>            1 to n                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Remarks              | Index in to the available list of networks found from the SCAN. The maximum number is returned by NWAVAIL.<br><br>Note: A scan must be performed immediately prior to use of this command.                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Response             | This command returns the network information for each of the networks found when a SCAN was performed. The network information returned is as follows: -<br><br>Channel    The channel number    e.g., 14<br>SSID        Network name                e.g., MY ADAPTER<br>BSSID       BSSID number                e.g., 23FAC8938E01<br>RSSI        RSSI figure                   e.g., -5<br>WEP         Using WEP                    i.e T or F for TRUE or FALSE<br>Preamble type                                            i.e LONG or SHORT<br><br>Note: If no network name is found the text "NO NAME" will be returned in the SSID field. |
| Response format      | NWINFO<ws>1,<data in the order described above>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Example              | Using the examples given above the response from a request for the index 3 could be<br><br>NWINFO 1,14,MY ADAPTER,23FAC8938E01,-5,T,LONG                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

### NWMACADDR (Request MAC Addresses)

|                      |                                                                                                                                                                                                                                                                                 |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Query command format | <code>MEASCFG?&lt;ws&gt;1,NWMACADDR,&lt;numaddr&gt;,&lt;time&gt;</code><br><code>&lt;numaddr&gt;</code> The number of different MAC addresses found before the search ends, 1 to 5.<br><code>&lt;time&gt;</code> The permissible time for the search to take place, 1 to 5 secs |
| Remarks              | This command requests the MAC address of all stations in the network. The search will continue until either the number of addresses or the time set expires.<br><br>Note: Use the NWSELECT command after a scan to join a network prior to this command.                        |
| Response             | <code>NWMACADDR,1,&lt;number of address&gt;,&lt;address&gt;</code><br><code>&lt;number of address&gt;</code> The number of comma separated addresses that follow.                                                                                                               |

### NWSELECT (Select Network)

|                    |                                                                                                                                                                                                               |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format | <code>MEASCFG&lt;ws&gt;1,NWSELECT,&lt;index&gt;</code><br><code>&lt;index&gt;</code> 1 to n<br><br>Index in to the available list of networks found from the SCAN. The maximum number is returned by NWAVAIL. |
| Remarks            | This command instructs the MT8860C to attempt to join the selected network.                                                                                                                                   |
| Example            | To select the third network the command would be<br><code>MEASCFG 1,NWSELECT,3</code>                                                                                                                         |

## NWSSID (Network SSID)

|                      |                                                                                                                                                                       |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1,NWSSID,<length>,<text string><br><length>      Length of the text string<br>Min = 1<br>Max = 32<br><br><text string>    Text string up to 32 characters. |
| Remarks              | This command is used to set the service set identity used by the MT8860C. This will cause the MT8860C to create its own network with the given SSID.                  |
| Example              | To set SSID to “MT8860C network” the command would be<br><br>MEASCFG 1,NWSSID,15,MT8860C network                                                                      |
| Query command format | MEASCFG?<ws>1,NWSSID                                                                                                                                                  |
| Response             | The response is returned in the form of the command to set that state. If no SSID is set the text string “NO NAME” will be returned.                                  |
| Example              | If the SSID is “TEST network” the response would be:<br><br>MEASCFG 1,NWSSID,12,TEST network                                                                          |
| *RST sets            | MT8860xxxxxxxxxxx where xxxxxxxxxxxx represents the serial number of the instrument. For example 6k00002649.                                                          |

## NWTYPE (Network Type)

|                      |                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1,NWTYPE,<type><br><type>ADHOC - Ad-Hoc connection<br>AP - Infrastructure connection (MT8860C = access point)<br>STA - Infrastructure connection (MT8860C = station)                                                                                                                                                                                       |
| Remarks              | This command is used to set the type of network that will be configured when connecting with the MT8860C. The “ADHOC” type sets up an IBSS for an Ad-Hoc connection. “AP” and “STA” configures the MT8860C for an infrastructure connection. “AP” should be used when testing station (“STA”) devices. “STA” should be used when testing access point (“AP”) devices. |
| Example              | To set the network type to ADHOC the command would be<br><br>MEASCFG 1,NWTYPE,ADHOC                                                                                                                                                                                                                                                                                   |
| Query command format | MEASCFG?<ws>1,NWTYPE                                                                                                                                                                                                                                                                                                                                                  |
| Response             | The response is returned in the form of the command to set that state.                                                                                                                                                                                                                                                                                                |
| Example              | If the network type is AP the response would be:<br><br>MEASCFG 1,NWTYPE,AP                                                                                                                                                                                                                                                                                           |
| *RST sets            | ADHOC                                                                                                                                                                                                                                                                                                                                                                 |

### OBWPCT (Occupied Bandwidth Percentage)

|                      |                                                                                                                            |
|----------------------|----------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1,OBWPCT,<percentage><br><percentage> Min 0.0<br>Max 100.0<br>Resolution 0.1%                                   |
| Remarks              | This command sets the percentage of the power in the received signal to be included in the Occupied Bandwidth measurement. |
| Example              | To set the Occupied Bandwidth Percentage to 95% of the signal power the command would be:<br><br>MEASCFG 1,OBWPCT,95       |
| Query command format | MEASCFG?<ws>1,OBWPCT                                                                                                       |
| Response             | The response is returned in the form of the command to set the value.                                                      |
| Example              | If the Occupied Bandwidth Percentage is set to 95% the reply would be:<br><br>MEASCFG 1,OBWPCT,95                          |
| *RST sets            | 99.0                                                                                                                       |

## OPERRATESET (Operational Rate Set)

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | <pre>MEASCFG&lt;ws&gt;1,OPERRATESET,&lt;rate set&gt; &lt;rate set&gt;    ALL                 SINGLE                 MULTIPLE                 USER</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Remarks              | <p>This command defines how the operational rate set is broadcast in the beacon packets.</p> <p><b>ALL</b> – All supported rates are included. The rates in the Beacon rate table are output in numerical order, starting with the lowest rate first.</p> <p><b>SINGLE</b> – Only the desired rate is included. The rate in the Beacon rate table is set as a Basic rate.</p> <p><b>MULTIPLE</b> – All rates up to the desired rate are included. The rates in the Beacon rate table are output in numerical order, starting with the lowest rate first. If <b>MULTIPLE</b> is selected with <b>TXRATE,11</b> and <b>WLANSTD,G</b>, only the rates 1, 2, 5.5 &amp; 11 Mbps are included in the Beacon rate table.</p> <p><b>USER</b> – All rates defined using the <b>RATESET</b> command are included. All basic rates defined using the <b>BASICRATE</b> command are included if they have been enabled using <b>RATESET</b>.</p> |
| Example              | <p>To configure the <b>OPERRATESET</b> to <b>SINGLE</b> the command would be</p> <pre>MEASCFG 1,OPERRATESET,SINGLE</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Query command format | <pre>MEASCFG?&lt;ws&gt;1,OPERRATESET</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Response             | <p>The response is returned in the form of the command to set the value.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Example              | <p>If the <b>OPERRATESET</b> is set to <b>MULTIPLE</b> the response would be</p> <pre>MEASCFG 1,OPERRATESET,MULTIPLE</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| *RST sets            | <pre>ALL</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

### PATHADD (Add an Element to the Path Loss Table)

|                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format | <code>MEASCFG&lt;ws&gt;1,PATHADD,&lt;channel&gt;,&lt;offset&gt;,[direction]</code><br><code>&lt;channel&gt;</code> Channel number<br><code>&lt;offset&gt;</code> Offset to be applied at this channel in dB<br><code>[direction]</code> TX: path loss in the DUT Tx path.<br>RX: path loss in the DUT Rx path.<br>If this parameter is not included in the command line, both the Tx and Rx path loss tables will be updated for the specified channel.<br>Min 0<br>Max 100<br>Resolution 0.1 dB |
| Remarks            | This command adds an entry to the path loss table. When the path state is on, the path loss table is applied to both the measurements and the MT8860C transmitted power level. Path loss entries can only be specified for those channels supported by the selected frequency band. For example, with 802.11b selected, path loss entries for channels 1 to 14 can be specified.                                                                                                                 |
| Note               | The MT8860C does not interpolate between loss values specified for non adjacent channels. Each entry within the path loss table applies to the selected channel only.                                                                                                                                                                                                                                                                                                                            |
| Example            | To set channel 6 offset to 1.3 dB the command would be: -<br><code>MEASCFG 1,PATHADD,6,1.3</code>                                                                                                                                                                                                                                                                                                                                                                                                |

### PATHDEL (Delete an Element from the Path Loss Table)

|                    |                                                                                                                                                                                                                                                                                                                                                         |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format | <code>MEASCFG&lt;ws&gt;1,PATHDEL,&lt;channel&gt;,[direction]</code><br><code>&lt;channel&gt;</code> Channel number<br><code>[direction]</code> TX: path loss for DUT transmit<br>RX: path loss for DUT receive<br>If this parameter is not included in the command line, both the Tx and Rx path loss tables will be updated for the specified channel. |
| Remarks            | This command deletes an entry from the path loss table. If there are no entries to delete from the table an execution error is given. Path loss entries can only be deleted for those channels supported by the selected frequency band. For example, path loss entries for channels 1 to 14 can be removed when 802.11b is selected.                   |
| Example            | To delete the entry for channel 6 the command would be: -<br><code>MEASCFG 1,PATHDEL,6</code>                                                                                                                                                                                                                                                           |
| FRST sets          | All path loss entries are deleted from the table.                                                                                                                                                                                                                                                                                                       |

## PATHSTATE (Path Loss Table Status)

|                      |                                                                                                            |
|----------------------|------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , PATHSTATE , <state><br><state> ON - Enable path loss table<br>OFF - Disable path loss table |
| Remarks              | This command is used to enable or disable use of the path loss table.                                      |
| Example              | To set path table to ON the command would be: -<br>MEASCFG 1 , PATHSTATE , ON                              |
| Query command format | MEASCFG?<ws>1 , PATHSTATE                                                                                  |
| Remarks              | This command returns the state of the path table.                                                          |
| Example              | If the path table is OFF the reply would be:<br>MEASCFG 1 , PATHSTATE , OFF                                |
| *RST sets            | ON                                                                                                         |

## PATHTBL (Read all the Points from the Path Loss Table)

|                      |                                                                                                                                                                                                                                                        |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Query command format | MEASCFG?<ws>1 , PATHTBL , [direction]<br>[direction]TX: path loss in the DUT Tx path<br>RX: path loss in the DUT Rx path<br>If this parameter is not included and the TX and RX path loss tables differ, an error will be returned.                    |
| Remarks              | This command returns all path loss values (greater than 0 dB) for those channels supported by the selected frequency band. Enter a path loss as a positive value between 0 and 100.                                                                    |
| Response             | MEASCFG<ws>1 , PATHTBL , <entries>[ , <channel> , <offset> ]<br><entries> The number of sets of channel and offset to follow<br><channel> The channel for which the offset has been set.<br><offset> The specified offset for the channel in question. |
| Example              | If there were five entries in the table, the response would be in the following format.<br>MEASCFG<br>1 , PATHTBL , 5 , 2 , 23.3 , 4 , 40.1 , 7 , 12.7 , 10 , 5.3 , 14 , 22.9                                                                          |



### PAYLOAD (Payload)

|                      |                                                                                                                                                                                                                                                                                                                   |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , PAYLOAD , <type><br><type> ZEROS - data pattern of all 0's<br>0101 - continuous 0101 data pattern<br>1010 - continuous 1010 data pattern<br>PN7 - pseudo random PN7 data pattern<br>RANDOM - random data pattern<br>COUNT - data pattern consists of 255 bytes with<br>incrementing value 1 to 255 |
| Remarks              | Set the payload type to be used for any data transmission from the reference radio.                                                                                                                                                                                                                               |
| Example              | To configure the payload to be A's the command would be<br>MEASCFG 1 , PAYLOAD , 1010                                                                                                                                                                                                                             |
| Query command format | MEASCFG?<ws>1 , PAYLOAD                                                                                                                                                                                                                                                                                           |
| Response             | The response is returned in the form of the command to set the value.                                                                                                                                                                                                                                             |
| Example              | If the payload is 0101 the reply would be<br>MEASCFG 1 , PAYLOAD , 0101                                                                                                                                                                                                                                           |
| *RST sets            | 0101                                                                                                                                                                                                                                                                                                              |

### PDPCT (Power Distribution Percentage)

|                      |                                                                                                                       |
|----------------------|-----------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , PDPCT , <percentage><br>< percentage > Min            0.0<br>Max            100.0<br>Resolution 0.1    |
| Remarks              | This command sets the percentage of time of the received signal to be included in the Power Distribution measurement. |
| Example              | To set the Power Distribution percentage to 99.9% the command would be: -<br>MEASCFG 1 , PDPCT , 99 . 9               |
| Query command format | MEASCFG?<ws>1 , PDPCT                                                                                                 |
| Response             | The response is returned in the form of the command to set that state.                                                |
| Example              | If the Power Distribution percentage is 99.9 the response would be:<br>MEASCFG 1 , PDPCT , 99 . 9                     |
| *RST sets            | 99.0                                                                                                                  |

## PERDELAY (PER Measurement Delay)

|                      |                                                                                                                                                         |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , PERDELAY , <delay><br><delay>           in seconds<br>Min        0<br>Max        5                                                       |
| Remarks              | This command enables a delay to be imposed between the leveling operation and the transmission of the test packets when a PER measurement is performed. |
| Example              | To set the delay to 0.5 seconds the command would be: -<br>MEASCFG 1 , PERDELAY , 0 . 5                                                                 |
| Query command format | MEASCFG?<ws>1 , PERDELAY                                                                                                                                |
| Response             | The response is returned in the form of the command to set that value.                                                                                  |
| Example              | If the delay is set to 0.5 seconds, the response would be:<br>MEASCFG 1 , PERDELAY , 0 . 5 0 0                                                          |
| *RST sets            | 0                                                                                                                                                       |

## PERPKTS (PER Test Number of Packets)

|                      |                                                                                                                          |
|----------------------|--------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , PERPKTS , <number of packets><br>< number of packets >    Min        1<br>Max        10,000               |
| Remarks              | This command is to set the number of packets that are transmitted by the reference radio when the PER test is performed. |
| Example              | To configure the PER packets to 1000 the command would be:<br>MEASCFG 1 , PERPKTS , 1000                                 |
| Query command format | MEASCFG?<ws>1 , PERPKTS                                                                                                  |
| Response             | The response is returned in the form of the command to set the value.                                                    |
| Example              | If the number of PER packets is 123 the reply would be<br>MEASCFG 1 , PERPKTS , 123                                      |
| *RST sets            | 500                                                                                                                      |

## Measurement Configuration Commands

---

### PKTLEN (Packet Length)

Set command format      MEASCFG<ws>1, PKTLEN, <len>

<len>

Rx mode:    Min 60, Max 1500 bytes

Tx mode:    As defined in the tables below depending on the data rate.

#### Non-HT: Network Mode Operation

| Data Rate (Mbps) | Frame type = Data       |                         | Frame Type = ACK        |                         |
|------------------|-------------------------|-------------------------|-------------------------|-------------------------|
|                  | Min data length (bytes) | Max data length (bytes) | Min data length (bytes) | Max data length (bytes) |
| 1                | 40                      | 600                     | 60                      | 1,500                   |
| 2                | 75                      | 1,250                   |                         |                         |
| 5.5              | 210                     | 1,500                   |                         |                         |
| 11               | 415                     | 1,500                   |                         |                         |
| 6                | 50                      | 1,500                   |                         |                         |
| 9                | 75                      | 1,500                   |                         |                         |
| 12               | 100                     | 1,500                   |                         |                         |
| 18               | 145                     | 1,500                   |                         |                         |
| 24               | 195                     | 1,500                   |                         |                         |
| 36               | 290                     | 1,500                   |                         |                         |
| 48               | 385                     | 1,500                   |                         |                         |
| 54               | 435                     | 1,500                   |                         |                         |

**Non-HT: Direct Mode Operation**

| Data Rate (Mbps) | Min data length (bytes) | Max data length (bytes) |
|------------------|-------------------------|-------------------------|
| 1                | 40                      | 600                     |
| 2                | 75                      | 1,250                   |
| 5.5              | 210                     | 3,440                   |
| 11               | 415                     | 6,875                   |
| 6                | 50                      | 3,750                   |
| 9                | 75                      | 5,625                   |
| 12               | 100                     | 7,500                   |
| 18               | 145                     | 11,250                  |
| 24               | 195                     | 15,000                  |
| 36               | 290                     | 22,500                  |
| 48               | 385                     | 30,000                  |
| 54               | 435                     | 33,750                  |

**HT (802.11n): Direct Mode Operation**

| Data Rate (Mbps) | Minimum data length (bytes) | Maximum data length (bytes) | Data Rate (Mbps) | Minimum data length (bytes) | Maximum data length (bytes) |
|------------------|-----------------------------|-----------------------------|------------------|-----------------------------|-----------------------------|
| 6                | 50                          | 3,750                       | 43.3             | 350                         | 27,060                      |
| 6.5              | 55                          | 4,060                       | 45               | 360                         | 28,125                      |
| 6.7              | 55                          | 4,185                       | 52               | 420                         | 32,500                      |
| 7.2              | 60                          | 4,500                       | 54               | 435                         | 33,750                      |
| 13               | 105                         | 8,125                       | 57.8             | 465                         | 36,125                      |
| 13.5             | 110                         | 8,435                       | 58.5             | 470                         | 36,560                      |
| 14.4             | 120                         | 9,000                       | 60               | 480                         | 37,500                      |
| 15               | 120                         | 9,375                       | 65               | 520                         | 40,625                      |
| 19.5             | 160                         | 12,185                      | 72.2             | 580                         | 45,125                      |
| 21.7             | 175                         | 13,560                      | 81               | 650                         | 50,625                      |
| 26               | 210                         | 16,250                      | 90               | 720                         | 56,250                      |
| 27               | 220                         | 16,875                      | 108              | 864                         | 65,535                      |
| 28.9             | 235                         | 18,060                      | 120              | 960                         | 65,535                      |
| 30               | 240                         | 18,750                      | 121.5            | 972                         | 65,535                      |
| 39               | 315                         | 24,375                      | 135              | 1080                        | 65,535                      |
| 40.5             | 325                         | 25,310                      | 150              | 1200                        | 65,535                      |

## Measurement Configuration Commands

---

|                      |                                                                                           |
|----------------------|-------------------------------------------------------------------------------------------|
| Remarks              | Set the amount of data in packet transmissions from the reference radio.                  |
| Example              | To configure the packet length to be 1204 the command would be<br>MEASCFG 1 ,PKTLEN ,1204 |
| Query command format | MEASCFG?<ws>1 ,PKTLEN                                                                     |
| Response             | The response is returned in the form of the command to set the value.                     |
| Example              | If the packet length is 500 the reply would be<br>MEASCFG 1 ,PKTLEN ,500                  |
| *RST sets            | 1024                                                                                      |

## PKTTYPE (Packet Type)

|                      |                                                                                                                                                                                                                                                                                                                 |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , PKTTYPE , <type><br><type>:           UNICAST<br>BROADCAST                                                                                                                                                                                                                                       |
| Remarks              | This command is used to define the type of packet that the MT8860C will transmit.<br><br>If the packet type is set to broadcast, the destination address is set to the broadcast address (0xFFFFFFFF).<br><br>If the packet type is set to unicast, the destination address set by the MACADDR command is used. |
| Example              | To set the packet type to unicast the command would be: -<br><br>MEASCFG 1 , PKTTYPE , UNICAST                                                                                                                                                                                                                  |
| Query command format | MEASCFG?<ws>1 , PKTTYPE                                                                                                                                                                                                                                                                                         |
| Response             | The response is returned in the form of the command to set the parameters.                                                                                                                                                                                                                                      |
| Example              | MEASCFG 1 , PKTTYPE , UNICAST                                                                                                                                                                                                                                                                                   |
| *RST sets            | UNICAST                                                                                                                                                                                                                                                                                                         |

## PLINTERVAL (Packet Loopback Interval)

|                      |                                                                                                                  |
|----------------------|------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , PLINTERVAL , <interval><br><interval>    Min     5 ms<br>Max     50 ms                            |
| Remarks              | This command is used to set the interval between frame transmissions for Tx tests when Network mode is selected. |
| Example              | To set the packet loopback interval to 10 milliseconds the command would be:-<br><br>MEASCFG 1 , PLINTERVAL , 10 |
| Query command format | MEASCFG?<ws>1 , PLINTERVAL                                                                                       |
| Response             | The response is returned in the form of the command to set the parameter.                                        |
| Example              | MEASCFG 1 , PLINTERVAL , 10                                                                                      |
| *RST sets            | 5 ms                                                                                                             |

### PREAMBLE (Preamble Type) (802.11b/g/a Only)

|                      |                                                                                                                                                                                                                                                                                                            |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , PREAMBLE , <type><br><type> LONG - long preamble<br>SHORT - short preamble                                                                                                                                                                                                                  |
| Remarks              | This command sets the length of the preamble for the reference radio transmission. The Preamble setting is only applicable to the 2, 5.5 and 11 Mbps DSSS modulated data rates. The 1 Mbps DSSS modulated data rate always uses a long preamble. This parameter is not applicable for the OFDM data rates. |
| Example              | To configure the preamble to be SHORT the command would be:<br>MEASCFG 1 , PREAMBLE , SHORT                                                                                                                                                                                                                |
| Query command format | MEASCFG?<ws>1 , PREAMBLE                                                                                                                                                                                                                                                                                   |
| Response             | The response is returned in the form of the command to set the value.                                                                                                                                                                                                                                      |
| Example              | If the preamble is LONG the reply would be<br>MEASCFG 1 , PREAMBLE , LONG                                                                                                                                                                                                                                  |
| *RST sets            | LONG                                                                                                                                                                                                                                                                                                       |

### PRETRG (Pre Trigger)

|                      |                                                                                                                                                                                                                          |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , PRETRG , <value><br><value>      Min            -5.95 ms<br>Max            0 ms<br>Resolution 1 $\mu$ s                                                                                                   |
| Remarks              | This command sets the pre-trigger time. All gate and profile capture settings are relative to this point. Refer to the diagram under profile capture. Refer to the figure within the description of the PROFCAP command. |
| Example              | To configure the pre trigger to -1.5 ms, the command would be:<br>MEASCFG 1 , PRETRG , -1.5 ms<br>Or<br>MEASCFG 1 , PRETRG , -1.5 E -3                                                                                   |
| Query command format | MEASCFG?<ws>1 , PRETRG                                                                                                                                                                                                   |
| Example              | MEASCFG? 1 , PRETRG<br>MEASCFG 1 , PRETRG , -1.50E -003                                                                                                                                                                  |
| *RST sets            | 0 ms                                                                                                                                                                                                                     |

## PROFAVG (Profile Average State)

|                      |                                                                                                                                                                                                                                                                                                                               |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | <pre>MEASCFG&lt;ws&gt;1,PROFAVG,&lt;profile&gt;,&lt;state&gt; &lt;profile&gt;    POWER               SPECTRUM1               SPECTRUM2               CCDF1 (only available for OFDM)               CCDF2 (only available for OFDM) &lt;state&gt;     ON               OFF</pre>                                               |
| Remarks              | <p>When the profile average state is OFF the MEAN, HIGH and LOW profiles are not available. When ON all the profiles are available. All the average profiles that are on may impact on the measurement speed on the MT8860C. The other profiles within each type are always available when the measurements are complete.</p> |
| Example              | <p>To set the POWER average profile ON the command would be: -</p> <pre>MEASCFG 1,PROFAVG,POWER,ON</pre>                                                                                                                                                                                                                      |
| Query command format | <pre>MEASCFG?&lt;ws&gt;1,PROFAVG,&lt;profile&gt; &lt;profile&gt;    POWER               SPECTRUM1               SPECTRUM2               CCDF1 (only available for OFDM)               CCDF2 (only available for OFDM)</pre>                                                                                                   |
| Example              | <p>The command returns the states of this profile.</p> <p>If the SPECTRUM1 average profile was OFF and requested, the command and response would be</p> <pre>MEASCFG? 1,PROFAVG,SPECTRUM1 MEASCFG 1,PROFAVG,SPECTRUM1,OFF</pre>                                                                                               |
| *RST sets            | <pre>ON</pre>                                                                                                                                                                                                                                                                                                                 |



### PROFCAP (Profile Capture Configuration)

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | <pre>MEASCFG&lt;ws&gt;1,PROFCAP,&lt;profile&gt;,&lt;capture start&gt;,&lt;capture stop&gt; &lt;profile&gt;          POWER &lt;capture start/stop&gt; The time relative to the pre-trigger point to                     set the start and stop of the profile capture.                     Min          0                     Max          5.95 ms                     Resolution  1 <math>\mu</math>s                     The minimum difference between the start                     and stop is 10 <math>\mu</math>s. The stop time must be                     the start time plus the capture window                     such that the stop time is always greater                     than the start time, i.e.,                     Start time = 0 <math>\mu</math>s                     Duration = 10 <math>\mu</math>s                     Stop time = 10 <math>\mu</math>s</pre> |
| Remarks              | <p>The profile capture start and stop settings define the area of the profile that will be made available when the measurements have completed. This function enables an area of the profile to be provided at a higher resolution. The profile capture start and stop times are shown in the figure below.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Example              | <p>To set the POWER capture start to 100 us and the stop to 200 us the command would be: -</p> <pre>MEASCFG 1,PROFCAP,POWER,100E-6,200E-6</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Query command format | <pre>MEASCFG?&lt;ws&gt;1,PROFCAP,&lt;profile&gt; &lt;profile&gt;          POWER</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Response             | <p>The command returns the capture start and stop time.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Example              | <p>If the POWER capture start time was 100uS and the stop is 900uS and requested the command and response would be</p> <pre>MEASCFG? 1,PROFCAP,POWER MEASCFG 1,PROFCAP,POWER, 1.00E-004, 9.0E-004</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| *RST sets            | <pre>&lt;capture start&gt; 0, &lt;capture stop&gt; 1 ms</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

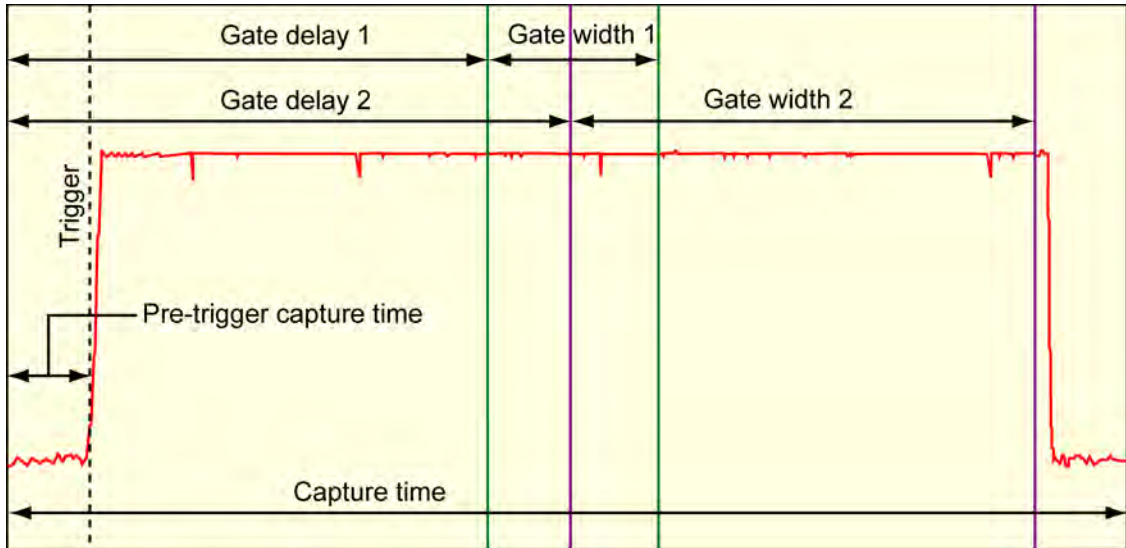


Figure 7-11. Profile Capture Times

## RADIOERR (Radio Error Report)

Query command format `MEASCFG?<ws>1,RADIOERR`

Remarks  
 Commands for the Reference radio that cannot be executed will produce an execution error. This event will set the EXE bit in the Event Status Register (ESR). Executing the RADIOERR command will give the reason for the execution error. The execution error is returned as a descriptive text string.

Response  
 The response format is  
`MEASCFG 1,RADIOERR,<length of error string>,<error string>,<error code>`

Example  
 Following the `MEASCFG 1,PREAMBLE,LONG` command and the EXE bit being set, send the following command,  
`MEASCFG? 1 RADIOERR`  
 To get the response below  
`MEASCFG 1,RADIOERR, 27,Failed to set device config`

### RADIOSEL (Radio Selection)

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1,RADIOSEL,<selection><br><selection>    INT            Internal reference radio<br>EXT            External gold card<br>NONE          No reference radio                                                                                                                                                                                                                                                                                                   |
| Remarks              | The MT8860C has an internal reference radio that is used when performing the 802.11b receiver tests. An external gold card can be used if required. This command enables the internal reference radio or external gold card to be used for the tests to be selected. If an external gold card is selected one of the BNC inputs must be configured to GOLDTX.<br><b>Note:</b> When an external gold card is used, the measurement mode (MODE) should be set to RXMODE. |
| Example              | To configure the internal reference radio to be used the command would be<br><br>MEASCFG 1,RADIOSEL,INT                                                                                                                                                                                                                                                                                                                                                                |
| Query command format | MEASCFG?<ws>1,RADIOSEL                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Response             | The response is returned in the form of the command to set the value.                                                                                                                                                                                                                                                                                                                                                                                                  |
| Example              | If the external gold card was set to be used the response would be<br><br>MEASCFG 1,RADIOSEL,EXT                                                                                                                                                                                                                                                                                                                                                                       |
| *RST sets            | INT                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

## RANGE (Range Hold)

|                      |                                                                                                                                                       |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , RANGE , <range><br><range>                                                                                                             |
|                      | AUTO      The MT8860C auto ranges                                                                                                                     |
|                      | 1          Range 1                                                                                                                                    |
|                      | 1L        Range 1 lower                                                                                                                               |
|                      | 2          Range 2                                                                                                                                    |
|                      | 2L        Range 2 lower                                                                                                                               |
|                      | 3          Range 3                                                                                                                                    |
|                      | 3L        Range 3 lower                                                                                                                               |
| Remarks              | Input power levels in excess of range 1 could cause damage to the MT8860C.                                                                            |
| Note                 | For operation in ranges 3 and 3L the damage level is reduced to +18 dBm peak power.                                                                   |
| Example              | To configure the input range to be range 3 the command would be<br><br>MEASCFG 1 , RANGE , 3                                                          |
| Query command format | MEASCFG?<ws>1 , RANGE                                                                                                                                 |
| Response             | The response is returned in the form of the command to set the value.                                                                                 |
| Example 1            | If the MT8860C is auto ranging mode and it has auto-ranged to Range 1 Lower the response would be:<br><br>MEASCFG 1 , RANGE , AUTO , 1L               |
| Example 2            | If the MT8860C is auto ranging mode and no measurements have been carried since last power on then the response would be:<br><br>MEASCFG 1,RANGE,AUTO |
| *RST sets            | AUTO                                                                                                                                                  |

## RATESET (Data Rate Set in Beacon Table)

|                      |                                                                                                                                                                                                                                                      |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | <p>MEASCFG&lt;ws&gt;1 ,RATESET , &lt;ABCDEFGHJKLM&gt;</p> <p>&lt;ABCDEFGHJKLM&gt; represents 54, 48, 36, 24, 18, 12, 9, 6, 11, 5.5, 2, 1 Mbps</p> <p>Each data rate is represented by a bit value; 1=basic rate enabled, 0= basic rate disabled.</p> |
| Remarks              | <p>This command is used to identify data rates to be included in the beacon rate table. The flagged data rate(s) are used only if the OPERRATESET command is set to "USER".</p>                                                                      |
| Example              | <p>To set the rates 48, 24, 12, 6, 5.5, and 1 Mbps the command would be:</p> <pre>MEASCFG 1 ,RATESET ,010101010101</pre>                                                                                                                             |
| Query command format | <pre>MEASCFG?&lt;ws&gt;1 ,RATESET</pre>                                                                                                                                                                                                              |
| Response             | <p>The response is returned in the form of the command to set that state.</p>                                                                                                                                                                        |
| Example              | <p>If rates 48, 24, 12, 6, 5.5, and 1 Mbps had been set, the response would be:</p> <pre>MEASCFG 1 ,RATESET ,010101010101</pre>                                                                                                                      |
| *RST sets            | <pre>111111111111</pre>                                                                                                                                                                                                                              |

## RDRANGES (Read Ranges)

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Query command format | <p>MEASCFG?&lt;ws&gt;1 ,RDRANGES , &lt;channel&gt;</p> <p>The channel numbers that can be set depend on the WLAN standard selected:</p> <p>If WLANSTD is set to B or G (DSSS):</p> <p>1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14</p> <p>If WLANSTD is set to G (OFDM) or N (2.4 GHz):</p> <p>1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13</p> <p>If WLANSTD is set to A (OFDM) or N (5.0 GHz):</p> <p>36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 149, 153, 157, 161, 165</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Remarks              | <p>This command is used to retrieve the top and bottom of all the ranges in dBm for a given channel number.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Response             | <p>The response format is:-</p> <p>RFRANGES,1,&lt;channel&gt;,&lt;val1&gt;,&lt;val2&gt;,&lt;val3&gt;,&lt;val4&gt;,&lt;val5&gt;,&lt;val6&gt;,&lt;val7&gt;,&lt;val8&gt;,&lt;val9&gt;,&lt;val10&gt;,&lt;val11&gt;,&lt;val12&gt;</p> <p>&lt;channel&gt;      channel number 1 to 14</p> <p>&lt;val1&gt;          Range 1 top          (dBm)</p> <p>&lt;val2&gt;          Range 1 bottom      (dBm)</p> <p>&lt;val3&gt;          Range 2 top          (dBm)</p> <p>&lt;val4&gt;          Range 2 bottom      (dBm)</p> <p>&lt;val5&gt;          Range 3 top          (dBm)</p> <p>&lt;val6&gt;          Range 3 bottom      (dBm)</p> <p>&lt;val7&gt;          Range 1L top        (dBm)</p> <p>&lt;val8&gt;          Range 1L bottom    (dBm)</p> <p>&lt;val9&gt;          Range 2L top        (dBm)</p> <p>&lt;val10&gt;         Range 2L bottom    (dBm)</p> <p>&lt;val11&gt;         Range 3L top        (dBm)</p> <p>&lt;val12&gt;         Range 3L bottom    (dBm)</p> |
| Example              | <p>To read the ranges for channel 1, the command would be:-</p> <p>MEASCFG? 1 ,RDRANGES , 1</p> <p>The response would be:-</p> <p>RFRANGES , 1 , 1 , 26 , 0 , 3 , -22 , -19 , -40</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

### REFRESH (Refresh WLAN Connection)

|                      |                                                      |
|----------------------|------------------------------------------------------|
| Query command format | MEASCFG<ws>1 , REFRESH                               |
| Remarks              | This command is used to refresh the WLAN connection. |
| Response             | No response                                          |

### RFOPT (RF Optimization Mode)

|                      |                                                                                                                                                                                                                                                 |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , RFOPT , <mode><br><mode> LOWNOISE<br>LOWACP                                                                                                                                                                                      |
| Remarks              | When testing the spectral mask performance of a WLAN device at a DSSS data rate, this command enables a user to adjust the input level range of MT8860C so that it is optimized for either signal-to-noise or low distortion (ACP) performance. |
| Example              | For low distortion (ACP) performance, the command would be<br>MEASCFG 1 , RFOPT , LOWACP                                                                                                                                                        |
| Query command format | MEASCFG?<ws>1 , RFOPT                                                                                                                                                                                                                           |
| Remarks              | This command is used to get the current RF Optimization setting. The response is returned in the form of a set command format.                                                                                                                  |
| Response             | The response is returned in the form of the command to set the value.                                                                                                                                                                           |
| Example              | To query the RF Optimization setting the command would be:-<br>MEASCFG? 1 , RFOPT<br>The response if the setting was LOWACP would be:-<br>MEASCFG 1 , RFOPT , LOWACP                                                                            |
| *RST sets            | LOWNOISE                                                                                                                                                                                                                                        |

### SCAN (Scan for Networks)

|                    |                                                                                                                                                                                                                                                                                                                                                     |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format | MEASCFG<ws>1 , SCAN                                                                                                                                                                                                                                                                                                                                 |
| Remarks            | The command requests that the internal reference radio scans for available networks. When the scan is complete the SCAN bit (NWS) in the instrument status register (INS) is set. The bit is cleared at power on of the instrument and or when a scan starts. It is recommended that the instrument is put into Rx mode before making a connection. |
| Example            | To request the reference radio to perform a scan the command would be<br>MEASCFG 1 , SCAN                                                                                                                                                                                                                                                           |

## SFMASK (Spectrum Flatness Mask)

|                      |                                                                                                                                                                                                                                                                                                                     |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | <p>MEASCFG&lt;ws&gt;1,SFMASK,&lt;upper limit&gt;, &lt;lower side limit&gt;,&lt;lower middle limit&gt;</p> <p>&lt;upper limit&gt;            Value in dB between 5 and -10.</p> <p>&lt;lower side limit&gt;      Value in dB between 5 and -10.</p> <p>&lt;lower middle limit&gt; Value in dB between 5 and -10.</p> |
| Remarks              | <p>This command is used to set the 3 limits for the spectral flatness mask. The value defines the power level at which the sub channel power should pass between.</p> <p>Spectral Flatness measurement is only measured in WLAN STD G.</p>                                                                          |
| Example              | MEASCFG 1,SFMASK,2,-4,-2                                                                                                                                                                                                                                                                                            |
| Query command format | MEASCFG?<ws>1,SFMASK                                                                                                                                                                                                                                                                                                |
| Response             | The response is returned in the form of the command to set the parameter.                                                                                                                                                                                                                                           |
| Example              | MEASCFG 1,SFMASK,1,-2,-1                                                                                                                                                                                                                                                                                            |



### STATUS (Status Command)

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Query command format | MEASCFG?<ws>1,STATUS                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Remarks              | This command requests the instrument status. Reading the status will clear the SCW bit of the INS register.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Response             | STATUS,1,ABCDEFGHIJKLMN<br>A 0 – Calibrated<br>1 – Not calibrated<br>B 0 – No network<br>1 – Network<br>C 0 – OK<br>1 – Overrange<br>D 0 – OK<br>1 – Underrange<br>E 0 – OK<br>1 – Spectral gate too small<br>F 0 – OK<br>1 – Spectral data error<br>G 0 – OK<br>1 – CCDF gate too small<br>H 0 – OK<br>1 – No burst<br>I 0 – OK<br>1 – No training sync<br>J 0 – Reserved<br>K 0 – OK<br>1 – Not enough samples<br>L 0 – OK<br>1 – Not enough chips to process chip clock measurement<br>M 0 – OK<br>1 – Bad Header CRC (DSSS packets only)<br>N 0 – OK<br>1 – Not enough symbols to process symbol clock measurement |

## STERR (Startup Errors)

|                      |                                                                                                                                                                                                                                                                                          |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Query command format | MEASCFG?<ws>1, STERR<br>MEASCFG, 1, STERR, A, B, C, D                                                                                                                                                                                                                                    |
| Response             | AB<br>A        0 – Calibrated<br>1 – Not calibrated<br>B        0 – Measurement data is OK.<br>1 – Measurement data error.<br>C        0 – Measurement system started.<br>1 – Measurement system not started.<br>D        0 – Card initialisation OK.<br>1 – Card initialisation failed. |
| Remarks              | If the instrument has started up, this command can be used to check for start-up errors.                                                                                                                                                                                                 |

## TESTMODE (Test Mode)

|                      |                                                                                                                                                                                                                                                                     |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1, TESTMODE, <mode><br><mode>        NETWORK<br>DIRECT                                                                                                                                                                                                   |
| Remarks              | In “Network” mode, WLAN devices are tested using standard WLAN protocols once a network connection is established between the MT8860C and the DUT.<br><br>In “Direct” mode, WLAN devices are tested with the support of control software from the silicon supplier. |
| Example              | To set the test mode to direct the command would be: -<br><br>MEASCFG 1, TESTMODE, DIRECT                                                                                                                                                                           |
| Query command format | MEASCFG?<ws>1, TESTMODE                                                                                                                                                                                                                                             |
| Response             | The response is returned in the form of the command to set the parameter.                                                                                                                                                                                           |
| Example              | MEASCFG 1, TESTMODE, NETWORK                                                                                                                                                                                                                                        |
| *RST sets            | NETWORK                                                                                                                                                                                                                                                             |

## TRGSRC (Trigger Source)

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |    |                      |     |              |    |          |       |                          |    |             |     |      |       |      |    |               |       |                            |      |            |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----|----------------------|-----|--------------|----|----------|-------|--------------------------|----|-------------|-----|------|-------|------|----|---------------|-------|----------------------------|------|------------|
| Set command format   | <p>MEASCFG&lt;ws&gt;1, TRGSRC, &lt;srce&gt;, &lt;params&gt;</p> <p>&lt;srce&gt;</p> <table border="0"> <tr> <td>RF</td> <td>Received power level</td> </tr> <tr> <td>EXT</td> <td>External BNC</td> </tr> <tr> <td>FR</td> <td>Free run</td> </tr> <tr> <td>VIDEO</td> <td>Digital power comparator</td> </tr> </table> <p>&lt;params&gt;</p> <p>The parameter type(s) depends on the trigger source (&lt;srce&gt;) type specified:-</p> <table border="0"> <tr> <td>RF</td> <td>Power, Edge</td> </tr> <tr> <td>EXT</td> <td>Edge</td> </tr> <tr> <td>VIDEO</td> <td>Edge</td> </tr> <tr> <td>FR</td> <td>No parameters</td> </tr> </table> <p>The permissible settings for each parameter are as follows:-</p> <table border="0"> <tr> <td>POWER</td> <td>Min: -60 dBm, Max: +20 dBm</td> </tr> <tr> <td>EDGE</td> <td>Rise, Fall</td> </tr> </table> | RF | Received power level | EXT | External BNC | FR | Free run | VIDEO | Digital power comparator | RF | Power, Edge | EXT | Edge | VIDEO | Edge | FR | No parameters | POWER | Min: -60 dBm, Max: +20 dBm | EDGE | Rise, Fall |
| RF                   | Received power level                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |    |                      |     |              |    |          |       |                          |    |             |     |      |       |      |    |               |       |                            |      |            |
| EXT                  | External BNC                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |    |                      |     |              |    |          |       |                          |    |             |     |      |       |      |    |               |       |                            |      |            |
| FR                   | Free run                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |    |                      |     |              |    |          |       |                          |    |             |     |      |       |      |    |               |       |                            |      |            |
| VIDEO                | Digital power comparator                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |    |                      |     |              |    |          |       |                          |    |             |     |      |       |      |    |               |       |                            |      |            |
| RF                   | Power, Edge                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |    |                      |     |              |    |          |       |                          |    |             |     |      |       |      |    |               |       |                            |      |            |
| EXT                  | Edge                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |    |                      |     |              |    |          |       |                          |    |             |     |      |       |      |    |               |       |                            |      |            |
| VIDEO                | Edge                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |    |                      |     |              |    |          |       |                          |    |             |     |      |       |      |    |               |       |                            |      |            |
| FR                   | No parameters                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |    |                      |     |              |    |          |       |                          |    |             |     |      |       |      |    |               |       |                            |      |            |
| POWER                | Min: -60 dBm, Max: +20 dBm                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |    |                      |     |              |    |          |       |                          |    |             |     |      |       |      |    |               |       |                            |      |            |
| EDGE                 | Rise, Fall                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |    |                      |     |              |    |          |       |                          |    |             |     |      |       |      |    |               |       |                            |      |            |
| Remarks              | <p>There are a number of trigger sources available to trigger the MT8860C to measure the signal. The measurement is primed by a request for a measurement (MEAS) and once the measurement is primed the signal is captured on the next trigger event that occurs.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |    |                      |     |              |    |          |       |                          |    |             |     |      |       |      |    |               |       |                            |      |            |
| Example              | <p>To set the trigger source to free run, the command would be:-</p> <pre>MEASCFG 1, TRGSRC, FR</pre> <p>To set the trigger source to RF when rising above -30dBm, the command would be: -</p> <pre>MEASCFG 1, TRGSRC, RF, -30, RISE</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |    |                      |     |              |    |          |       |                          |    |             |     |      |       |      |    |               |       |                            |      |            |
| Query command format | MEASCFG?<ws>1, TRGSRC                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |    |                      |     |              |    |          |       |                          |    |             |     |      |       |      |    |               |       |                            |      |            |
| Response             | The response is returned in the form of the command to set that state.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |    |                      |     |              |    |          |       |                          |    |             |     |      |       |      |    |               |       |                            |      |            |
| Example              | <p>If the trigger source is EXT on the RISING edge the response would be:</p> <pre>MEASCFG 1, TRGSRC, EXT, RISE</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |    |                      |     |              |    |          |       |                          |    |             |     |      |       |      |    |               |       |                            |      |            |
| *RST sets            | <src> FR                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |    |                      |     |              |    |          |       |                          |    |             |     |      |       |      |    |               |       |                            |      |            |

**TXINTERVAL (Transmission Frame Interval)**

|                      |                                                                                                                  |
|----------------------|------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , TXINTERVAL , <interval><br><interval>: 0 to 65535 ms                                              |
| Remarks              | This command is used to set the interval between frame transmissions for Rx tests when Network mode is selected. |
| Example              | To set the Tx frame interval to 233 ms the command would be:<br>MEASCFG 1 , TXINTERVAL , 233                     |
| Query command format | MEASCFG?<ws>1 , TXINTERVAL                                                                                       |
| Response             | The response is returned in the form of the command to set that state.                                           |
| Example              | If the frame interval was 10 ms the response would be:<br>MEASCFG 1 , TXINTERVAL , 10                            |
| *RST sets            | 0                                                                                                                |

**TXPWR (Tx Power Level)**

|                      |                                                                                                                                                                                                                                                                      |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , TXPWR , <pwr><br><pwr>   Min           -100 dBm<br>Max            0                                                                                                                                                                                   |
| Remarks              | This command defines the power level to be transmitted by the MT8860C at the Test Port connector. If the path loss table is enabled and path loss values are specified, then the power level specified reflects the power level detected at the receiver of the DUT. |
| Example              | To set Tx power to -30dBm the command would be<br>MEASCFG 1 , TXPWR , -30                                                                                                                                                                                            |
| Query command format | MEASCFG?<ws>1 , TXPWR                                                                                                                                                                                                                                                |
| Response             | The response is returned in the form of the command to set the value.                                                                                                                                                                                                |
| Example              | If the Tx power was set to -35dBm the reply would be:<br>MEASCFG 1 , TXPWR , -35 . 0                                                                                                                                                                                 |
| *RST sets            | -50.0 dBm                                                                                                                                                                                                                                                            |

### TXRATE (Tx Rate)

|                      |                                                                                                                                                                                                                                                                                                                                                                                 |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1, TXRATE, <rate><br><br><rate> 1 1 Mbps<br>2 2 Mbps<br>5.5 5.5 Mbps<br>6 6 Mbps<br>9 9 Mbps<br>11 11 Mbps<br>12 12 Mbps<br>18 18 Mbps<br>24 24 Mbps<br>36 36 Mbps<br>48 48 Mbps<br>54 54 Mbps                                                                                                                                                                       |
| Remarks              | This command sets the transmission rate of the data from the reference radio.                                                                                                                                                                                                                                                                                                   |
| Note                 | Only 1, 2, 5.5 and 11 Mbps data rates are valid when the WLANSTD is set to B.<br><br>Only 6, 9, 12, 18, 24, 36, 48 and 54 Mbps data rates are valid when the WLANSTD is set to A.<br><br>All data rates are valid when the WLANSTD is set to G.<br><br>Refer to Appendix B in the Operation Manual for a full listing of IEEE channels, frequencies, and associated data rates. |
| Example              | To set TXRATE to 5.5 Mbps the command would be<br><br>MEASCFG 1, TXRATE, 5.5                                                                                                                                                                                                                                                                                                    |
| Query command format | MEASCFG?<ws>1, TXRATE                                                                                                                                                                                                                                                                                                                                                           |
| Response             | The response is returned in the form of the command to set the value.                                                                                                                                                                                                                                                                                                           |
| *RST sets            | 11 (11 Mbps)                                                                                                                                                                                                                                                                                                                                                                    |

### UNITMACADDR (Unit MAC Address)

|                      |                                                                                                |
|----------------------|------------------------------------------------------------------------------------------------|
| Query command format | MEASCFG?<ws>1, UNITMACADDR                                                                     |
| Remark               | This is the MAC address of the MT8860C.                                                        |
| Response             | The response is returned in the following format:<br><br>MEASCFG 1, UNITMACADDR, <MAC Address> |
| Example              | MEASCFG 1, UNITMACADDR, 112233445566                                                           |

## WLANSTD (WLAN Standard)

|                      |                                                                                                                                                          |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 ,WLANSTD ,<standard><br><standard>    A    802.11a<br>B    802.11b<br>G    802.11g<br>N    802.11n                                          |
| Remarks              | This command is used to switch between the different WLAN standards supported by the MT8860C, or to read the present standard.                           |
| Notes                | When changing the WLAN standard, the MT8860C ensures that a valid data rate (for the specified WLANSTD) is selected. As a result, the TXRATE may change. |
| Example              | To set the WLAN standard to 802.11g, the command would be:<br><br>MEASCFG 1 ,WLANSTD ,G                                                                  |
| Query command format | MEASCFG?<ws>1 ,WLANSTD                                                                                                                                   |
| Response             | The response is returned in the form of the command to set that state.                                                                                   |
| Example              | If the WLAN standard is 802.11g the response would be:<br><br>MEASCFG 1 ,WLANSTD ,G                                                                      |
| *RST sets            | B (802.11b)                                                                                                                                              |

## 7-1 Advanced EVM Configuration

The MT8860C provides independent analysis length settings for EVM, chip clock, and symbol clock measurements. Additional parameters can also be configured that compensate for impairments in the signal transmitted by the DUT.

The following commands are used to define the analysis criteria that is applied by the MT8860C when performing EVM, chip clock and symbol clock measurements.

### ALPHA (Set ALPHA Level for Root Nyquist Filtering)

|                      |                                                                                                |
|----------------------|------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , EVMCFG , ALPHA , <setting><br><setting> 0.3 to 1.0 (in steps of 0.01)           |
| Remarks              | This command is used to set the ALPHA level used during root nyquist filtering.                |
| Example              | To set the ALPHA level to 0.3 the command would be:<br>MEASCFG 1 , EVMCFG , ALPHA , 0 . 3      |
| Query command format | MEASCFG?<ws>1 , EVMCFG , ALPHA                                                                 |
| Response             | The response is in the form of the command to set the value.                                   |
| Example              | If the ALPHA level was set to 0.3 the response would be:<br>MEASCFG 1 , EVMCFG , ALPHA , 0 . 3 |
| *RST sets            | 0.35                                                                                           |

### BT (Set BT level for Gaussian Filtering)

|                      |                                                                                          |
|----------------------|------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , EVMCFG , BT , <setting><br><setting> 0.3 to 1.0 (in steps of 0.1)         |
| Remarks              | This command is used to set the BT level used during gaussian filtering.                 |
| Example              | To set the BT level to 0.3 the command would be:<br>MEASCFG 1 , EVMCFG , BT , 0 . 3      |
| Query command format | MEASCFG?<ws>1 , EVMCFG , BT                                                              |
| Response             | The response is in the form of the command to set the value.                             |
| Example              | If the BT level was set to 0.3 the response would be:<br>MEASCFG 1 , EVMCFG , BT , 0 . 3 |
| *RST sets            | 0.5                                                                                      |

## CHANEST (EVM Channel Estimation)

|                      |                                                                                                                      |
|----------------------|----------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , EVMCFG , CHANEST , <param><br><param> TRAINSEQ - Long training sequence<br>FULLPKT - Full packet      |
| Remarks              | This command selects the channel estimation method used when performing an EVM measurement.                          |
| Example              | To select full packet channel estimation, the command would be:<br>MEASCFG 1,EVMCFG,CHANEST,FULLPKT                  |
| Query command format | MEASCFG?<ws>1 , EVMCFG , CHANEST                                                                                     |
| Response             | The response is in the form of the command to set the value.                                                         |
| Example              | If channel estimation is set to long training sequence, the response would be:-<br>MEASCFG 1,EVMCFG,CHANEST,TRAINSEQ |
| *RST sets            | TRAINSEQ                                                                                                             |

## CHIPCLK (DSSS Chip Clock Analysis Length)

|                      |                                                                                                                                         |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| Set command Format   | MEASCFG<ws>1 , EVMCFG , CHIPCLK , <length><br><length> 3300 to 30250                                                                    |
| Remarks              | This command is used to set the number of chips used in the processing of the chip clock measurement when a DSSS data rate is selected. |
| <b>Example</b>       | To set 16500 chips for chip clock measurement the command would be:<br>MEASCFG 1 , EVMCFG , CHIPCLK , 16500                             |
| Query command format | MEASCFG?<ws>1 , EVMCFG , CHIPCLK                                                                                                        |
| Response             | The response is in the form of the command to set the value.                                                                            |
| Example              | If the chip clock analysis length is set to 16500, the response would be:-<br>MEASCFG 1 , EVMCFG , CHIPCLK , 16500                      |
| *RST sets            | 5500                                                                                                                                    |



### EVMCHIP (DSSS EVM Analysis Length)

|                      |                                                                                                                                  |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------|
| Set command Format   | MEASCFG<ws>1 , EVMCFG , EVMCHIP , <length><br><length> 220 to 11000                                                              |
| Remarks              | This command is used to set the number of chips used in the processing of the EVM measurement when a DSSS data rate is selected. |
| Example              | To set the DSSS EVM analysis length to 1000 chips, the command would be:<br><br>MEASCFG 1 , EVMCFG , EVMCHIP , 1000              |
| Query command format | MEASCFG?<ws>1 , EVMCFG , EVMCHIP                                                                                                 |
| Response             | The response is in the form of the command to set the value.                                                                     |
| Example              | If the DSSS EVM analysis length is set to 1000, the response would be:-<br><br>MEASCFG 1 , EVMCFG , EVMCHIP , 1000               |
| *RST sets            | 1000                                                                                                                             |

### EVMDSSS (DSSS EVM Calculation Method)

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command Format   | MEASCFG<ws>1 , EVMCFG , EVMDSSS , <type><br><type> USERDEF      Number of samples is user defined (EVMCHIP)<br><br>1KSAMPLES      Number of samples is 1000                                                                                                                                                                                                                                                                                                                                                                                 |
| Remarks              | This command is used to select the calculation method used when a DSSS EVM measurement is performed.<br><br>When set to USERDEF, the EVM measurement is performed using the 'classic' definition for EVM (rms Error Vector) and is calculated using chips that are transmitted during the PSDU (payload) of the packet.<br><br>When set to 1KSAMPLES, the EVM measurement is performed using the definition in IEEE Std 802.11b-1999 (18.4.7.8) and is calculated over 1000 chips that are transmitted during the PLCP preamble and header. |
| Example              | To set the DSSS EVM algorithm to 1KSAMPLES, the command would be:<br><br>MEASCFG 1 , EVMCFG , EVMDSSS , 1KSAMPLES                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Query command format | MEASCFG?<ws>1 , EVMCFG , EVMDSSS                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Response             | The response is in the form of the command to set the value.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Example              | If the DSSS EVM algorithm is set to 1KSAMPLES, the response would be:-<br><br>MEASCFG 1 , EVMCFG , EVMDSSS , 1KSAMPLES                                                                                                                                                                                                                                                                                                                                                                                                                      |
| *RST sets            | USERDEF                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

## EVMSYM (OFDM EVM Analysis Length)

|                      |                                                                                                                                          |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| Set command Format   | MEASCFG<ws>1 , EVMCFG , EVMSYM , <length><br><length> 16 to 500                                                                          |
| Remarks              | This command is used to set the number of OFDM symbols used in the processing of the EVM measurement when an OFDM data rate is selected. |
| Example              | To set the OFDM analysis length to 40 symbols, the command would be:<br><br>MEASCFG 1 , EVMCFG , EVMSYM , 40                             |
| Query command format | MEASCFG?<ws>1 , EVMCFG , EVMSYM                                                                                                          |
| Response             | The response is in the form of the command to set the value.                                                                             |
| Example              | If the OFDM analysis length is set to 40, the response would be:-<br><br>MEASCFG 1 , EVMCFG , EVMSYM , 40                                |
| *RST sets            | 40                                                                                                                                       |

## FILTER (Set Filter State)

|                      |                                                                                                                                               |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , EVMCFG , FILTER , <mode><br><mode>            NONE - No filter<br>GAUSSIAN - Gaussian filter<br>RNYQUIST - Root Nyquist filter |
| Remarks              | This command is used to select the DSSS filter type.                                                                                          |
| Example              | To enable GAUSSIAN filtering the command would be:<br><br>MEASCFG 1 , EVMCFG , FILTER , GAUSSIAN                                              |
| Query command format | MEASCFG?<ws>1 , EVMCFG , FILTER                                                                                                               |
| Response             | The response is in the form of the command to set the value.                                                                                  |
| Example              | If filtering was set to GAUSSIAN the response would be:-<br><br>MEASCFG 1 , EVMCFG , FILTER , GAUSSIAN                                        |
| *RST sets            | NONE                                                                                                                                          |

### MODE (EVM Analysis Length Setting Method)

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , EVMCFG , MODE , <mode><br><mode> AUTO<br>MANUAL                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Remarks              | This command is used to select whether the EVM analysis length is defined manually or configured automatically.<br>If MANUAL mode is selected, the user defined settings for EVMCHIP, CHIPCLK, EVMSYM and SYMCLK are used.<br>If AUTO mode is selected then the TXRATE, PKTLEN and MODE settings are used to calculate the EVMCHIP and CHIPCLK values for DSSS or the EVMSYM and SYMCLK values for OFDM. If the analysis length values calculated are less than the default values, the calculated values will be used, otherwise the default values will be used.<br>The AUTOCFG command will also auto-configure the analysis length values if the EVMCFG mode is set to AUTO. |
| Example              | To select automatic configuration of the EVM analysis lengths:<br>MEASCFG 1 , EVMCFG , MODE , AUTO                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Query command format | MEASCFG?<ws>1 , EVMCFG , MODE                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Response             | The response is returned in the form of the command to set the value.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Example              | If the mode is MANUAL.<br>MEASCFG 1 , EVMCFG , MODE , MANUAL                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| *RST sets            | AUTO                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

### SYMCLK (OFDM Symbol Clock Analysis Length)

|                      |                                                                                                                |
|----------------------|----------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , EVMCFG , SYMCLK , <length><br><length> 16 to 500                                                |
| Remarks              | This command defines how long the analysis length is for the symbol clock measurement.                         |
| Example              | To set 100 symbols for the symbol clock measurement the command would be;<br>MEASCFG 1 , EVMCFG , SYMCLK , 100 |
| Query command format | MEASCFG?<ws>1 , EVMCFG , SYMCLK                                                                                |
| Response             | The response is returned in the form of the command to set the value.                                          |
| Example              | If the SYMLK is set to 25 the response would be<br>MEASCFG 1 , EVMCFG , SYMCLK , 25                            |
| *RST sets            | 55                                                                                                             |

## TRACKING (EVM Pilot Tracking Type)

|                      |                                                                                                                                    |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , EVMCFG , TRACKING , <mode><br><mode>            PHASE - Phase only<br>PHASEMAG - Phase and magnitude                |
| Remarks              | PHASE will track the common pilot phase of all 4 pilots.<br>PHASEMAG will also take into account any common pilot magnitude error. |
| Query command format | MEASCFG?<ws>1 , EVMCFG , TRACKING                                                                                                  |
| Response             | The response is returned in the form of the command to set the parameters.                                                         |
| Example              | MEASCFG 1 , EVMCFG , TRACKING , <mode>                                                                                             |
| *RST sets            | PHASE                                                                                                                              |

## 7-2 DSSS Spectral Mask Configuration

The spectral mask is the PASS/FAIL criteria as defined in the IEEE specification for the spectral transmission of a 802.11b / 802.11g DSSS signal. The MT8860C supports five spectral masks. Mask 1 is fixed to the default IEEE 802.11b standard mask. The remaining four masks (2 to 5) can be defined by the operator, and the default values are the IEEE802.11b standard mask.

The following MEASCFG commands are used to select and modify the spectral masks.

**Note** The spectral mask for 802.11g and 802.11a OFDM data rates is fixed and cannot be modified. The default mask (as defined in the 802.11a specification) is automatically selected by the MT8860C when an OFDM data rate is specified.

### SMDEF (Set Spectral Mask to Defaults)

Set command format      MEASCFG<ws>1, SMDEF, <mask number>  
                                 <mask number>: 2 to 5

Remarks                      This command is to set a spectral mask to the default values.  
                                 Default values are: -

| Entry | Frequency offset | Power   |
|-------|------------------|---------|
| 1     | -35 MHz          | -50 dBr |
| 2     | -22 MHz          | -30 dBr |
| 3     | -11 MHz          | 0 dBr   |
| 4     | +11 MHz          | -30 dBr |
| 5     | +22 MHz          | -50 dBr |

Example                        To set mask 4 to the defaults the command would be  
                                 MEASCFG 1, SMDEF, 4

## SMLIM (Spectral Mask Limits)

|                      |                                                                                                                                                                                           |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1,SMLIM,<mask>,<limit2>,<limit1><br><mask> Mask number (2-5)<br><limit2> Value in dB for 35 to 22 MHz section of mask<br><limit1> Value in dB for 22 to 11 MHz section of mask |
| Remarks              | This command is used to set and query DSSS spectral mask limits.                                                                                                                          |
| Example              | To set mask 2 to the default values:<br>MEASCFG 1,SMLIM,2,-50,-30<br>If mask 2 is set to the default values;<br>MEASCFG 1,SMLIM,2,-50,-30                                                 |
| Query command format | MEASCFG?<ws>1,SMLIM,<mask>                                                                                                                                                                |

## SMSEL (Select Spectral Mask)

|                      |                                                                              |
|----------------------|------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1,SMSEL,<mask number><br><mask number> 1 to 5                     |
| Remarks              | This command is to select the spectral mask used for the spectral mask test. |
| Example              | To select mask 4 the command would be<br>MEASCFG 1,SMSEL,4                   |
| Query command format | MEASCFG?<ws>1,SMSEL                                                          |
| Example              | If the mask selected is mask 2 the result would be<br>MEASCFG 1,SMSEL,2      |
| *RST sets            | 1                                                                            |

## 7-3 Signal Generator Configuration

The MT8860C provides a signal generator mode of operation whereby a continuous transmit signal is generated at the test port connector. Signal generator mode may be of particular use in calculating the path loss of a test system prior to measurement operation or when testing the receiver of a DUT for RSSI (Received Signal Strength Indicator).

The following commands are used to configure the signal generator mode. Examples on how to use these commands are provided in Chapter 9.

The following configuration is required to enable the use of signal generator mode.

- The test mode must be set to "DIRECT" (MEASCFG<ws>1,TESTMODE,DIRECT).
- The measurement mode must be set to "RX" (MEASCFG<ws>1,MODE,RXMODE).
- The reference radio must be set to "INTERNAL" (MEASCFG<ws>1,RADIOSEL,INT).

### MODE (Signal Generator Output Mode)

|                      |                                                                                                                                                                                                                               |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 , SIGGEN , MODE , <mode><br><mode>    CF - continuous framed data<br>CS - carrier suppression (unframed 0101<br>unscrambled)<br>CM - continuous modulated (unframed)<br>CW - continuous non-modulated (unframed) |
| Remarks              | This command is used to select the type of signal to be generated.                                                                                                                                                            |
| Example              | To select continuous framed data:<br>MEASCFG 1 , SIGGEN , MODE , CF                                                                                                                                                           |
| Query command format | MEASCFG?<ws>1 , SIGGEN , MODE                                                                                                                                                                                                 |
| Response             | The response is returned in the form of the command to set the value.                                                                                                                                                         |
| Example              | If the mode is CW.<br>MEASCFG 1 , SIGGEN , MODE , CW                                                                                                                                                                          |
| *RST sets            | CF                                                                                                                                                                                                                            |

## STATE (Signal Generator State)

|                      |                                                                                                                                                 |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1, SIGGEN, STATE, <state><br><state>      ENABLE - Enable signal generator operation<br>DISABLE - Disable signal generator operation |
| Remarks              | This command enables and disables the signal generation functionality to start and stop the transmission of the selected data.                  |
| Example              | To start transmission:<br>MEASCFG 1, SIGGEN, STATE, ENABLE                                                                                      |
| Query command format | MEASCFG?<ws>1, SIGGEN, STATE                                                                                                                    |
| Response             | The response is returned in the form of the command to set the value.                                                                           |
| Example              | If the state is disabled.<br>MEASCFG 1, SIGGEN, STATE, DISABLE                                                                                  |
| *RST sets            | DISABLE                                                                                                                                         |



### 7-4 802.11n Configuration

#### FREQBAND (Frequency Band)

|                      |                                                                                |
|----------------------|--------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1,NCONFIG,FREQBAND,<freq band><br><freq band> 2PT4GHZ<br>5GHZ       |
| Remarks              | This command is used to set the frequency band used during 802.11n Tx testing. |
| Query command format | MEASCFG?<ws>1,NCONFIG,FREQBAND                                                 |
| Response             | The response is returned in the form of the command to set the value.          |
| Example              | If the frequency band is 5 GHz.<br>MEASCFG 1,NCONFIG,FREQBAND,5GHZ             |
| *RST sets            | 2PT4GHZ                                                                        |

#### GUARDINT (Guard Interval)

|                      |                                                                                                                           |
|----------------------|---------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1,NCONFIG,GUARDINT,<guard interval><br><guard interval> LONG Long guard interval<br>SHORT Short guard interval |
| Remarks              | This command is used to set the guard interval for 802.11n. The setting is only applicable when the PDU FORMAT is HTMF.   |
| Query command format | MEASCFG?<ws>1,NCONFIG,GUARDINT                                                                                            |
| Response             | The response is returned in the form of the command to set the value.                                                     |
| Example              | If the guard interval is SHORT.<br>MEASCFG? 1,NCONFIG,GUARDINT,SHORT                                                      |
| *RST sets            | LONG                                                                                                                      |

## INFO (Query 802.11n Configuration)

|                      |                                                                                                                         |
|----------------------|-------------------------------------------------------------------------------------------------------------------------|
| Query command format | MEASCFG?<ws>1,NCONFIG,INFO                                                                                              |
| Remarks              | This command is used to query the modulation format, coding rate, and data rate for the selected 802.11n configuration. |
| Response             | The response is returned in the form of the command to set the value.                                                   |
| Example              | NCONFIG,INFO,1,<modulation format>,<coding rate>,<data rate>                                                            |

## MCSINDEX (MCS Index)

|                      |                                                                                                                                       |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1,NCONFIG,MCSINDEX,<mcs index><br><mcs index> 0, 1, 2, 3, 4, 5, 6, 7, or 32                                                |
| Remarks              | This command is used to set the MCS index for 802.11n.<br>The setting is only applicable when the PPDU FORMAT is set to HTMF or HTGF. |
| Query command format | MEASCFG?<ws>1,NCONFIG,MCSINDEX                                                                                                        |
| Response             | The response is returned in the form of the command to set the value.                                                                 |
| Example              | If the MCS index is 1.<br>MEASCFG 1,NCONFIG,MCSINDEX,1                                                                                |
| *RST sets            | 7                                                                                                                                     |

## PPDUFORMAT (PPDU Format)

|                      |                                                                                                                                                                       |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1,NCONFIG,PPDUFORMAT,<PPDU format><br><PPDU format> NONHT Not High Throughput<br>HTMF High Throughput, mixed mode<br>HTGF High Throughput, greenfield mode |
| Remarks              | This command is used to set the PPDU format for 802.11n.                                                                                                              |
| Query command format | MEASCFG?<ws>1,NCONFIG,PPDUFORMAT                                                                                                                                      |
| Response             | The response is returned in the form of the command to set the value.                                                                                                 |
| Example              | If the PPDU format is HTGF.<br>MEASCFG 1,NCONFIG,PPDUFORMAT,HTGF                                                                                                      |
| *RST sets            | HTMF                                                                                                                                                                  |

### PPDUTYPE (PPDU Type)

|                      |                                                                                                                                                                      |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 ,NCONFIG ,PPDUTYPE , <PPDU type><br><PPDU format> 20MHZ 20 MHz<br>40MHZ 40 MHz<br>40MHZD 40 MHz Duplicate<br>40MHZL 40 MHz Lower<br>40MHZU 40 MHz Upper |
| Remarks              | This command is used to set the PPDU type for 802.11n.                                                                                                               |
| Query command format | MEASCFG?<ws>1 ,NCONFIG ,PPDUTYPE                                                                                                                                     |
| Response             | The response is returned in the form of the command to set the value.                                                                                                |
| Example              | If the PPDU type is 40MHZ.<br>MEASCFG 1 ,NCONFIG ,PPDUTYPE , 40MHZ                                                                                                   |
| *RST sets            | 20MHZ                                                                                                                                                                |

### PREAMBLE (Preamble Length, Non-HT only)

|                      |                                                                                                                                                               |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1 ,NCONFIG ,PREAMBLE , <Preamble><br><Preamble> LONG Long preamble<br>SHORT Short preamble                                                         |
| Remarks              | This command is used to set the preamble type for 802.11n.<br>The setting is only applicable if PPDU FORMAT is NONHT and TXRATE is set to 2, 5.5, or 11 Mbps. |
| Query command format | MEASCFG?<ws>1 ,NCONFIG ,PREAMBLE                                                                                                                              |
| Response             | The response is returned in the form of the command to set the value.                                                                                         |
| Example              | If the preamble type is SHORT.<br>MEASCFG 1 ,NCONFIG ,PREAMBLE , SHORT                                                                                        |
| *RST sets            | LONG                                                                                                                                                          |

## TXRATE (Transmission Rate, Non-HT only)

|                      |                                                                                                                             |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1,NCONFIG,TXRATE,<tx rate><br><tx rate> 1, 2, 5.5, 11, 6, 9, 12, 18, 24, 36, 48, 54 (Mbps)                       |
| Remarks              | This command is used to set the transmit rate for 802.11n.<br>The setting is only applicable when the PPDU FORMAT is NONHT. |
| Query command format | MEASCFG?<ws>1,NCONFIG,TXRATE                                                                                                |
| Response             | The response is returned in the form of the command to set the value.                                                       |
| Example              | If the Tx rate is 54.<br>MEASCFG 1,NCONFIG,TXRATE,54                                                                        |
| *RST sets            | 54                                                                                                                          |

## 7-5 Country Information Configuration

Country related information can be included in the transmitted beacon and probe response frames.

### 2PT4GHZ (2.4 GHz Supported Channels)

|                      |                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1,COUNTRY,2PT4GHZ,<max power><br>[,<first channel>,<number of channels>]                                                                                                                                                                                                                                                                                    |
|                      | <p>&lt;max power&gt;            The maximum power for this sub-band. Default: 20 dBm. Maximum powers are based on regulatory classes defined in IEEE Std 802.11-2007 Appendix J.</p> <p>&lt;first channel&gt;        The first channel number in the sub-band. Default: 1</p> <p>&lt;number of channels&gt;   The number of channels in the sub-band. Default: 13.</p> |
| Remarks              | This command is used to define the supported channels for the 2.4 GHz ISM band.                                                                                                                                                                                                                                                                                        |
| Query command format | MEASCFG?<ws>1,COUNTRY,2PT4GHZ                                                                                                                                                                                                                                                                                                                                          |
| Response             | The response is returned in the form of the command to set the parameter.                                                                                                                                                                                                                                                                                              |
| Example              | MEASCFG 1,COUNTRY,2PT4GHZ,20,1,13                                                                                                                                                                                                                                                                                                                                      |

## 5GHZB1 (5.0 GHz Supported Channels, Band 1)

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1,COUNTRY,5GHZB1,<max power><br>[,<first channel>,<number of channels>]<br><br><max power>                   The maximum power for this sub-band.<br>Default: 23 dBm. Maximum powers are<br>based on regulatory classes defined in<br>IEEE Std 802.11-2007 Appendix J.<br><br><first channel>                The first channel number in the sub-<br>band. Default: 36<br><br><number of channels>        The number of channels in the sub-band.<br>Default: 8. |
| Remarks              | This command is used to define the supported channels for the 5.0 GHz band 5150 to 5350 MHz (CH 36, 40, 44, 48, 52, 56, 60)                                                                                                                                                                                                                                                                                                                                                 |
| Query command format | MEASCFG?<ws>1,COUNTRY,5GHZB1                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Response             | The response is returned in the form of the command to set the parameter.                                                                                                                                                                                                                                                                                                                                                                                                   |
| Example              | MEASCFG 1,COUNTRY,5GHZB1,23,36,8                                                                                                                                                                                                                                                                                                                                                                                                                                            |

## 5GHZB2 (5.0 GHz Supported Channels, Band 2)

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1,COUNTRY,5GHZB2,<max power><br>[,<first channel>,<number of channels>]<br><br><max power>                   The maximum power for this sub-band.<br>Default: 30 dBm. Maximum powers are<br>based on regulatory classes defined in<br>IEEE Std 802.11-2007 Appendix J.<br><br><first channel>                The first channel number in the sub-<br>band. Default: 100<br><br><number of channels>        The number of channels in the sub-band.<br>Default: 11. |
| Remarks              | This command is used to define the supported channels for the 5.0 GHz band 5470 to 5725 MHz (CH 100, 108, 112, 116, 120, 124, 128, 132, 136, 140)                                                                                                                                                                                                                                                                                                                             |
| Query command format | MEASCFG?<ws>1,COUNTRY,5GHZB2                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Response             | The response is returned in the form of the command to set the parameter.                                                                                                                                                                                                                                                                                                                                                                                                     |
| Example              | MEASCFG 1,COUNTRY,5GHZB2,30,100,11                                                                                                                                                                                                                                                                                                                                                                                                                                            |

### 5GHZB3 (5.0 GHz Supported Channels, Band 3)

|                      |                                                                                                                                                                                                                                        |                                                                                                                                                                                                                                                                                                                                                              |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | <code>MEASCFG&lt;ws&gt;1,COUNTRY,5GHZB3,&lt;max power&gt;[,&lt;first channel&gt;,&lt;number of channels&gt;]</code><br><code>&lt;max power&gt;</code><br><code>&lt;first channel&gt;</code><br><code>&lt;number of channels&gt;</code> | The maximum power for this sub-band. Default: 29 dBm. Maximum powers are based on regulatory classes defined in IEEE Std 802.11-2007 Appendix J.<br>The first channel number in the sub-band. Default: 149<br>The number of channels in the sub-band. Default: 0. A value of "0" indicates that the band is not included in the country information element. |
| Remarks              | This command is used to define the supported channels for the 5.0 GHz band 5725 to 5825 MHz (CH 149, 153, 157, 161, 165)                                                                                                               |                                                                                                                                                                                                                                                                                                                                                              |
| Query command format | <code>MEASCFG?&lt;ws&gt;1,COUNTRY,5GHZB3</code>                                                                                                                                                                                        |                                                                                                                                                                                                                                                                                                                                                              |
| Response             | The response is returned in the form of the command to set the parameter.                                                                                                                                                              |                                                                                                                                                                                                                                                                                                                                                              |
| Example              | <code>MEASCFG 1,COUNTRY,5GHZB3,29,149,0</code>                                                                                                                                                                                         |                                                                                                                                                                                                                                                                                                                                                              |

### REGION (Country Information Region Information)

|                      |                                                                                                                                 |                                                                                                                                               |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | <code>MEASCFG&lt;ws&gt;1,COUNTRY,REGION,&lt;region&gt;</code><br><code>&lt;region&gt;</code>                                    | region code<br>String of up to 3 characters<br>String of less than 3 characters is padded out with spaces<br>String is converted to uppercase |
| Remarks              | This command is used to define the content of the region string.                                                                |                                                                                                                                               |
| Query command format | <code>MEASCFG?&lt;ws&gt;1,COUNTRY,REGION</code>                                                                                 |                                                                                                                                               |
| Response             | The query command always returns a 3-character string.<br>The response is returned in the form of the command to set the value. |                                                                                                                                               |
| Example              | If the region is GB.<br><code>MEASCFG 1,COUNTRY,REGION,GB</code>                                                                |                                                                                                                                               |
| *RST sets            | GB                                                                                                                              |                                                                                                                                               |

## STATE (Country Information Region Information)

|                      |                                                                                                                                      |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1, COUNTRY, STATE, <state><br><state> ENABLE<br>DISABLE                                                                   |
| Remarks              | This command is used to control whether the Country Information element is included in transmitted beacon and probe response frames. |
| Query command format | MEASCFG?<ws>1, COUNTRY, STATE                                                                                                        |
| Response             | The response is returned in the form of the command to set the value.                                                                |
| Example              | If the state is ENABLE.<br>MEASCFG 1, COUNTRY, STATE, ENABLE                                                                         |
| *RST sets            | DISABLE                                                                                                                              |



## 7-6 Vendor Specific Information Configuration

If required, a vendor specific information element can be defined and added to management frames.

### INFO (Vendor Specific IE Content Definition)

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                                       |        |            |        |        |                          |     |         |                                                       |         |                                         |  |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------|--------|------------|--------|--------|--------------------------|-----|---------|-------------------------------------------------------|---------|-----------------------------------------|--|
| Set command format   | MEASCFG<ws>1, VENDORID, INFO, <length>, <content><br><length> Length of content (0 to 32)<br><content> String of characters representing hexadecimal numbers (0 - 9, a - f, A -F)                                                                                                                                                                                                                                                                                                                                                          |                                                       |        |            |        |        |                          |     |         |                                                       |         |                                         |  |
| Remarks              | This command is used to define the content of the vendor specific element.<br><br>The format of the Vendor Specific Element is:<br><table border="0" style="margin-left: 20px;"> <tr> <td>Element ID</td> <td>1 byte</td> <td>221 (0xDD)</td> </tr> <tr> <td>Length</td> <td>1 byte</td> <td>Length of data following</td> </tr> <tr> <td>OUI</td> <td>3 bytes</td> <td>Organizationally Unique Identifier (0x00, 0x00, 0x91)</td> </tr> <tr> <td>Content</td> <td colspan="2">Up to 16 bytes of user supplied content</td> </tr> </table> | Element ID                                            | 1 byte | 221 (0xDD) | Length | 1 byte | Length of data following | OUI | 3 bytes | Organizationally Unique Identifier (0x00, 0x00, 0x91) | Content | Up to 16 bytes of user supplied content |  |
| Element ID           | 1 byte                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | 221 (0xDD)                                            |        |            |        |        |                          |     |         |                                                       |         |                                         |  |
| Length               | 1 byte                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | Length of data following                              |        |            |        |        |                          |     |         |                                                       |         |                                         |  |
| OUI                  | 3 bytes                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Organizationally Unique Identifier (0x00, 0x00, 0x91) |        |            |        |        |                          |     |         |                                                       |         |                                         |  |
| Content              | Up to 16 bytes of user supplied content                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                                                       |        |            |        |        |                          |     |         |                                                       |         |                                         |  |
| Query command format | MEASCFG?<ws>1, VENDORID, INFO                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                                       |        |            |        |        |                          |     |         |                                                       |         |                                         |  |
| Response             | The response is returned in the form of the command to set the parameter.                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                                       |        |            |        |        |                          |     |         |                                                       |         |                                         |  |
| Example              | If the vendor id info is:<br><br><pre>MEASCFG 1, VENDORID, INFO, 8, FF050A11</pre> The vendor specific element included in the frames would be:<br><br><pre>DD07000091FF050A11</pre>                                                                                                                                                                                                                                                                                                                                                       |                                                       |        |            |        |        |                          |     |         |                                                       |         |                                         |  |
| *RST sets            | Zero length string                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                                                       |        |            |        |        |                          |     |         |                                                       |         |                                         |  |

### STATE (Vendor Specific Information Element State)

|                      |                                                                                                                                               |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| Set command format   | MEASCFG<ws>1, VENDORID, STATE, <state><br><state> ENABLE   DISABLE                                                                            |
| Remarks              | This command is used to define whether a Vendor Specific Information Element is added to the beacon, probe and association management frames. |
| Query command format | MEASCFG?<ws>1, VENDORID, STATE                                                                                                                |
| Response             | The response is returned in the form of the command to set the parameter.                                                                     |
| Example              | If the vendor Specific IE state is set to ENABLE, the command would be:<br><br><pre>MEASCFG 1, VENDORID, STATE, ENABLE</pre>                  |
| *RST sets            | ENABLE                                                                                                                                        |



# Chapter 8 — Measurement Requests and Output Results Format

The MT8860C is primed to make a measurement when a measurement request is made. Once a measurement request is made, the next packet number occurrences of the trigger source selected will cause a packet to be captured and the measurements requested obtained. When the measurements requested are complete for the NUMMEAS packets (or triggers), the results are available in the GPIB output queue to be read.

The output for each set of test results has a fixed format so that when a number of measurements are requested at the same time, the data can be extracted easily in whatever order they may be available.

The MT8860C is able to perform both transmitter and receiver measurements.

In Tx measurement mode all the Tx measurements are available concurrently.

In Rx measurement mode the MT8860C can be requested to provide PER measurements if a connection to the MT8860C reference radio has been established. When the PER measurements are requested the reference radio transmits the specified packets and returns a PER. If a connection to the MT8860C reference radio has not been made, the reference radio can be configured to continuously transmit, or to transmit the configured number of the specified packet, on the set channel number. In this mode of operation, the system controlling the DUT must make the PER calculations.

## MEAS (Measurement Request)

Query command format MEASCFG?<ws><reserved> ,MEAS , <params... . >  
 <reserved>Must be set to '1'

<params>The parameters are a list of measurements that are to be carried out on the captured packet.

| Mnemonic | Measurement               | Tx/<br>Rx | Date Rate |      |
|----------|---------------------------|-----------|-----------|------|
|          |                           |           | DSSS      | OFDM |
| AP       | Average power             | Tx        | Yes       | Yes  |
| CC       | Chip Clock                | Tx        | Yes       | No   |
| CF       | Average Carrier frequency | Tx        | Yes       | No   |
| CL       | Carrier Leakage           | Tx        | No        | Yes  |
| CO       | Average Carrier offset    | Tx        | Yes       | No   |
| CP       | Crest factor power        | Tx        | Yes       | Yes  |
| CS       | Carrier suppression       | Tx        | Yes       | No   |
| EV       | EVM analysis              | Tx        | Yes       | Yes  |
| FE       | Spectral flatness errors  | Tx        | No        | Yes  |
| FT       | Frequency Tolerance       | Tx        | Yes       | Yes  |
| MS       | Spectral mask segment     | Tx        | Yes       | Yes  |
| OB       | Occupied bandwidth        | Tx        | Yes       | Yes  |
| PD       | Power distribution        | Tx        | No        | Yes  |
| PP       | Peak power                | Tx        | Yes       | Yes  |
| SC       | Symbol Clock              | Tx        | No        | Yes  |
| SD       | Power spectral density    | Tx        | Yes       | Yes  |
| SF       | Spectral flatness         | Tx        | No        | Yes  |
| SM       | Spectral mask             | Tx        | Yes       | Yes  |
| TT       | Transition times          | Tx        | Yes       | Yes  |
| FRR      | Frame Reception Rate      | Rx        | Yes       | Yes  |
| PER      | Packet Error Rate         | Rx        | Yes       | Yes  |

**Note**

In Network mode with ACK Frame analysis selected, only the following measurements are supported:

DSSS data rates: AP, CP, CS, MS, OB, PP, SD, SM, TT, PER, FRR

OFDM data rates: AP, CP, PD, PP, TT, PER, FRR

The response for each test is described below. The responses are comma separated within the same reply message, with the message terminator at the end of the measurements requested. If the results for a gate are invalid, the valid flag will be set to FALSE and the related parameters for that gate will be set to 0 or FAIL.

### Average Power

#### Response

|           |                                                                                                                                                                                                                                                                                    |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Header    | AP                                                                                                                                                                                                                                                                                 |
| Reserved1 |                                                                                                                                                                                                                                                                                    |
| Results   | Gate 1 Measurement Valid (TRUE or FALSE)<br>Gate 1 Mean average in dBm<br>Gate 1 Highest average in dBm<br>Gate 1 Lowest average in dBm<br>Gate 2 Measurement Valid (TRUE or FALSE)<br>Gate 2 Mean average in dBm<br>Gate 2 Highest average in dBm<br>Gate 2 Lowest average in dBm |

#### Example

```
AP,1,TRUE,9.47,9.48,9.46,TRUE,9.48,9.50,9.46
```

---

### Chip Clock

#### Response

|          |                                                                            |
|----------|----------------------------------------------------------------------------|
| Header   | CC                                                                         |
| Reserved | 1                                                                          |
| Result   | Measurement Valid (true or false)<br>Chip clock in Hz<br>Chip clock in ppm |

#### Example

```
CC,1,TRUE,-117.70,-10.70
```

---

### Average Carrier frequency

|          |                                                                                                                                                          |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Header   | CF                                                                                                                                                       |
| Reserved | 1                                                                                                                                                        |
| Result   | Gate 1 Measurement Valid (TRUE or FALSE)<br>Gate 1 Centre frequency in MHz<br>Gate 2 Measurement Valid (TRUE or FALSE)<br>Gate 2 Centre frequency in MHz |

**Example**

CF, 1, TRUE, 2436.97, TRUE, 2437.97

---

**Carrier Leakage**

**Response**

Header            CL  
 Reserved        1  
 Result           Measurement Valid (true or false)  
                   Carrier Leakage measurement in dB

**Example**

CL, 1, TRUE, -29.98

---

**Average Carrier Offset**

**Response**

Header            CO  
 Reserved        1  
 Result           Gate 1 Measurement Valid (TRUE or FALSE)  
                   Gate 1 Mean carrier offset in kHz  
                   Gate 1 Highest carrier offset in kHz  
                   Gate 1 Lowest carrier offset in kHz  
                   Gate 2 measurement Valid (TRUE or FALSE)  
                   Gate 2 Mean carrier offset in kHz  
                   Gate 2 Highest carrier offset in kHz  
                   Gate 2 Lowest carrier offset in kHz

**Example**

CO, 1, TRUE, -26.35, -26.00, -26.70, TRUE, -26.75, -26.72, -26.78

---

**Crest Factor Power**

**Response**

Header            CP  
 Reserved        1  
 Result           Gate 1 measurement Valid (TRUE or FALSE)  
                   Gate 1 Crest Factor Power in dB  
                   Gate 2 measurement Valid (TRUE or FALSE)  
                   Gate 2 Crest Factor Power in dB

**Example**

CP, 1, TRUE, 9.35, TRUE, 9.34

---

### Carrier Suppression

#### Response

|          |                                                                                                                                                                |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Header   | CS                                                                                                                                                             |
| Reserved | 1                                                                                                                                                              |
| Result   | Gate 1 Measurement Valid (TRUE or FALSE)<br>Gate 1 Carrier suppression in dBc<br>Gate 2 Measurement Valid (TRUE or FALSE)<br>Gate 2 Carrier suppression in dBc |

#### Example

CS , 1 , TRUE , 20 . 3 , TRUE , 20 . 3

---

#### EVM Response

|          |                                                                                                                                                                                                                                                                                                                                                                                                               |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Header   | EV                                                                                                                                                                                                                                                                                                                                                                                                            |
| Reserved | 1                                                                                                                                                                                                                                                                                                                                                                                                             |
| Result   | DSSS data rate response:-<br>Measurement Valid<br>EVM rms %<br>EVM peak %<br>EVM minimum %<br>EVM rms dB<br>EVM peak dB<br>EVM minimum dB<br>IQ offset in dB (11b / 11g DSSS)<br>Phase error in degrees (11b / 11g DSSS)<br>Magnitude error (11b / 11g DSSS)<br><br>OFDM data rate response:-<br>Measurement Valid<br>EVM rms %<br>EVM peak %<br>EVM minimum %<br>EVM rms dB<br>EVM peak dB<br>EVM minimum dB |

**Remarks**

When a measurement request is made, the parameters define which measurements the MT8860C is to make.

If EV is included in the list of measurements to make then the EVM analysis is performed over the first burst in the capture.

Conditions:

It must contain a valid long training word.

**Example**

```
11b: EV,1,TRUE,2.67,5.47,0.05,-31.46,-25.23,-
66.00,-36.00,0.98,2.06
```

```
11g: EV,1,TRUE,4.67,16.67,0.05,-26.61,-15.56,-
66.89
```

```
11a: EV,1,TRUE,4.96,15.30,0.17,-26.08,-16.31,-
55.17
```

---

**Spectral Flatness Error****Response**

|          |                                                                                                         |
|----------|---------------------------------------------------------------------------------------------------------|
| Header   | FE                                                                                                      |
| Reserved | 1                                                                                                       |
| Result   | Measurement Valid (true or false)<br>Number of Channels failing mask<br><Channel>, <Number of failures> |

**Example**

```
FE,1,TRUE,3,-26,-24,5,19,2
```

If running the measurement over a number of averages, the number of times a channel fails the mask is recorded.

---

**Frequency Tolerance****Response**

|          |                                                                                                    |
|----------|----------------------------------------------------------------------------------------------------|
| Header   | FT                                                                                                 |
| Reserved | 1                                                                                                  |
| Result   | Measurement Valid (true or false)<br>Centre frequency error in Hz<br>Centre frequency error in ppm |

**Example**

```
FT,1,TRUE,-26058.17,-10.69
```

---



### Mask Segment

#### Response

(Results for DSSS data rates)

|          |                                                                                                                                                                                                                                                                                                   |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Header   | MS                                                                                                                                                                                                                                                                                                |
| Reserved | 1                                                                                                                                                                                                                                                                                                 |
| Result   | Gate 1 measurement valid (true or false)<br>Gate1 peak power in segment<br>-35 to -22 MHz<br>-22 to -11 MHz<br>-11 to 22 MHz<br>22 to 35 MHz<br><br>Gate 2 measurement valid (true or false)<br>Gate 2 peak power in segment<br>-35 to -22 MHz<br>-22 to -11 MHz<br>-11 to 22 MHz<br>22 to 35 MHz |

#### Example

```
MS,1,TRUE,-55.5,-39.4,-42.5,-58.1,TRUE,-55.9,-
39.5,-42.4,-58.5
```

---

### Mask Segment (extended)

#### Response

(Results for OFDM data rates)

|          |                                                                                                                                                                                                                                                                            |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Header   | MSX                                                                                                                                                                                                                                                                        |
| Reserved | 1                                                                                                                                                                                                                                                                          |
| Result   | Number of segments<br>Gate 1 measurement Valid (TRUE or FALSE)<br>Gate 1 for each segment:<br>Frequency in MHz<br>Power relative to mask in dB<br>Gate 2 measurement Valid (TRUE or FALSE)<br>Gate 2 for each segment:<br>Frequency in MHz<br>Power relative to mask in dB |

#### Example

```
MSX,1,8,TRUE,-30.2,-11.7,-28.6,-12.6,-11.9,-
10.8,-10.9,-12.1,10.8,-15.9,11.8,-12.7,29.9,-
14.1,32.1,-14.1,TRUE,-30.2,-11.7,-28.6,-12.6,-
11.9,-10.8,-10.9,-12.1,10.8,-15.9,11.8,-
12.7,29.9,-14.1,32.1,-14.1
```

---

### Occupied Bandwidth

#### Response

|          |                                                                                                                                                                                                                                                                                                                                                            |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Header   | OB                                                                                                                                                                                                                                                                                                                                                         |
| Reserved | 1                                                                                                                                                                                                                                                                                                                                                          |
| Result   | Gate 1 Measurement Valid (TRUE or FALSE)<br>Gate 1 Occupied Bandwidth (MHz)<br>Gate 1 Lower Occupied Bandwidth Offset (MHz)<br>Gate 1 Upper Occupied Bandwidth Offset (MHz)<br>Gate 2 Measurement Valid (TRUE or FALSE)<br>Gate 2 Occupied Bandwidth (MHz)<br>Gate 2 Lower Occupied Bandwidth Offset (MHz)<br>Gate 2 Upper Occupied Bandwidth Offset (MHz) |

#### Example

OB, 1, TRUE, 16.6, -8.3, 8.3, TRUE, 16.6, -8.3, 8.3

---

### Power Distribution

#### Response

|          |                                                                                                                                                            |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Header   | PD                                                                                                                                                         |
| Reserved | 1                                                                                                                                                          |
| Result   | Gate 1 measurement Valid (TRUE or FALSE)<br>Gate 1 Power Distribution in dB<br>Gate 2 measurement Valid (TRUE or FALSE)<br>Gate 2 Power Distribution in dB |

#### Example

PD, 1, TRUE, 9.2, TRUE, 9.1

---

### Peak Power

#### Response

|          |                                                                                                                                              |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------|
| Header   | PP                                                                                                                                           |
| Reserved | 1                                                                                                                                            |
| Result   | Gate 1 Measurement Valid (TRUE or FALSE)<br>Gate 1 Peak power in dBm<br>Gate 2 Measurement Valid (TRUE or FALSE)<br>Gate 2 Peak power in dBm |

### Example

PP, 1, TRUE, 18.82, TRUE, 18.82

---

### Symbol Clock

#### Response

Header SC  
Reserved 1  
Result Measurement Valid (true or false)  
Symbol clock in Hz  
Symbol clock in ppm

### Example

SC, 1, TRUE, -2.32, -9.27

---

### Power Spectral Density

#### Response

Header SD  
Reserved 1  
ResultGate 1 Measurement Valid (true or false)  
Gate 1 Power Spectral Density in dBm/MHz  
Gate 2 Measurement Valid (true or false)  
Gate 2 Power Spectral Density in dBm/MHz

### Example

SD, 1, TRUE, 1.72, TRUE, 1.56

---

### Spectral Flatness

#### Response

Header SF  
Reserved 1  
Result Measurement Valid (true or false)  
Pass/Fail Spectral Flatness Mask

### Example

SF, 1, TRUE, PASS

---

**Spectral Mask**

**Response**

Header SM  
Reserved 1  
Result Gate 1 Measurement Valid (TRUE or FALSE)  
Gate 1 PASS or FAIL against selected mask  
Gate 2 Measurement Valid (TRUE or FALSE)  
Gate 2 PASS or FAIL against selected mask

**Example**

SM, 1, TRUE, PASS, TRUE, PASS

---

**Transition Times**

**Response**

Header TT  
Reserved 1  
Result Gate 1 Measurement Valid  
Gate 1 Rise Time  
Gate 1 Fall Time  
Gate 2 Measurement Valid  
Gate 2 Rise Time  
Gate 2 Fall Time

**Example**

TT, 1, TRUE, 9.1E-008, 2.0E-007, TRUE, 9.1E-008, 2.0E-007

---

**Sensitivity FRR**

**Response**

Header FRR  
Reserved 1  
Result Valid (TRUE or FALSE)  
Frame reception rate as a percentage  
ACKs received  
Packets sent

**Example**

FRR, 1, TRUE, 98.00, 490, 500

---

### Sensitivity PER

#### Response

|          |                                                                                             |
|----------|---------------------------------------------------------------------------------------------|
| Header   | PER                                                                                         |
| Reserved | 1                                                                                           |
| Result   | Valid (TRUE or FALSE)<br>Packet error rate as a percentage<br>ACKs received<br>Packets sent |

#### Example

```
PER,1,TRUE,2.000,490,500
```

---

#### Example

To request for the peak power, average power, and carrier suppression measurements to be made on the next packet(s) captured, the command would be:

```
MEASCFG? 1,MEAS,PP,AP,CS
```

The response would be in the form: -

```
PP,1,TRUE,-32.4,TRUE,-33.7,AP,1,TRUE,-36.7,-37.8,
-35.2,TRUE,-37.7,-38.8,-36.2,CS,1,TRUE,5.6,TRUE,
4.7
```

---

## RDPROF (Read Profile)

Query command format MEASCFG?<ws>1,RDPROF,<profile >,<profile type>,<format>  
 <profiles>The profile being requested.

| Profile       | Date Rate |      |
|---------------|-----------|------|
|               | DSSS      | OFDM |
| POWER         | Yes       | Yes  |
| SPECTRUM1     | Yes       | Yes  |
| SPECTRUM2     | Yes       | Yes  |
| CCDF1         | No        | Yes  |
| CCDF2         | No        | Yes  |
| EVMCHAN       | No        | Yes  |
| EVMTIME       | No        | Yes  |
| CONSTELLATION | Yes       | Yes  |
| FLATNESS      | No        | Yes  |

<profile type> RAW  
 MEAN  
 HIGH  
 LOW  
 LAST  
 <format> ASCII  
 BINARY

**Measurement Requests and Output Results Format**

Remarks

This command requests the type of profile data to be returned based on the raw data captured.

The power profile contains data representing the period between the capture start time and the capture stop time. This data is decimated to provide output with a resolution of 440 points (output samples).

The EVMCHAN and EVMTIME profiles are only applicable to the MEAN, HIGH, and LOW profile types.

First, the raw data is split into a number of sections (S) all containing 1/440 of the samples from the profile width. Each of these sections is then decimated to produce three values (D):


- Highest Highest S value from any packet being analysed that has appeared in this section.
- Lowest Lowest S value from any packet being analysed that has appeared in this section.
- Mean The mean for all packets analysed, of the average of all the S values in this section.

**Note:** The mean, high, and low profiles are only available if the relevant PROFAVG is on.

Example

To request the MEAN of the POWER profile in ASCII format the command would be:

```
MEASCFG? 1 ,RDPROF , POWER , MEAN , ASCII
```

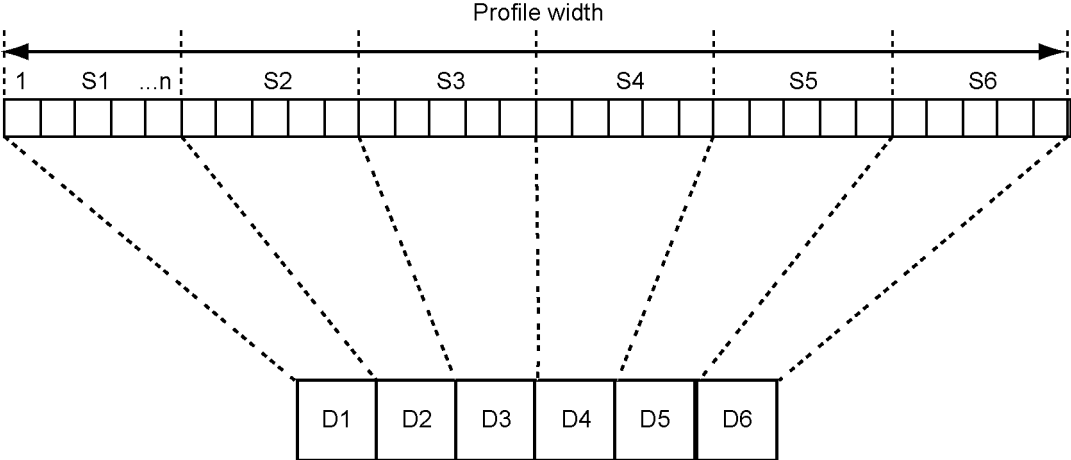

**Figure 8-1.** Profile Width

## Responses

The power data for the LAST, and the mean, high, and low profiles is decimated to 440 points. The 440 points represent the captured data between the capture start and capture stop times set.

The spectral data for the LAST, MEAN, HIGH, and LOW profiles is 815 points. The 815 points represent the average of the spectrums captured between the capture start and capture stop and represent 815 points between -35 MHz and +35 MHz from the carrier frequency.

The output format for the data is:

PROFILE,1,<profile>,<profile type>,<zoomed>,<format>,<number of elements>,<data elements>

|                      |                                                                                                                                                                                                       |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <profile>            | The profile that was requested.<br>POWER<br>SPECTRUM1<br>SPECTRUM2<br>CCDF1 (MEAN only)<br>CCDF2 (MEAN only)<br>EVMCHAN (OFDM only)<br>EVMTIME (OFDM only)<br>CONSTELLATION (BINARY only)<br>FLATNESS |
| <profile type>       | RAW (BINARY only)<br>MEAN<br>HIGH<br>LOW<br>LAST                                                                                                                                                      |
| <zoomed>             | TRUE or FALSE.<br><br>Zoomed is true if the period “capture start” to “capture stop” does not include both gate 1 and gate 2.                                                                         |
| <format>             | ASCII<br><br>BINARY – Note: For the constellation profile or any RAW profile type the format must be binary.                                                                                          |
| <number of elements> | The number of data elements that follow.<br>In ASCII format these elements are comma separated.<br>For Binary format there is no separator between elements.                                          |
| <data elements>      | For output in an ASCII format the power and carrier data is 440 comma separated values. The values for the profile types are described below: -                                                       |



### Power profiles

Each value is a power value in dBm to 0.1 dB resolution.

### Spectral profiles

Each of the 815 power values returned in this data, representing 85.9375 kHz steps from -35 MHz to +35 MHz.

For 802.11n 40 MHz measurements, there are 1513 power values returned in this data, representing steps from -65 MHz to +65 MHz.

For output in binary or ASCII format the power and carrier data is 440 single precision values. The spectrum binary output is 815 single precision values.

### CCDF profiles

Each entry is for a dB value (in 0.1 dB steps) above the mean power for the gate. The comma separated values represent a percentage of time that the signal has exceeded the dB value for this entry.

### EVM profiles

Two EVM profiles are supported: EVMCHAN representing EVM vs. sub carrier, and EVMTIME representing EVM vs. symbol. The number of data elements is not constrained to 401 points. For EVMCHAN there are 64 data elements, for EVMTIME the number of data elements is equal to the number of OFDM symbols in gate 1 markers.

### Constellation – OFDM data rates

Normal BINARY type response.

DATA After binary header:

[OFDMSYMBOL1][OFDMSYMBOL2][...][OFDMSYMBOLn]

where n = Binary Data Length size / 512

4bytes per I/Q value

2 IQ values per constellation point

64 IQ values per OFDM symbol

[OFDMSYMBOLx] = [I Value1][Q Value1][I Value2][Q Value2]... [I Value64][Q Value64]

[I Value x]= [4 bytes]

[Q Value x]= [4 bytes]

4 bytes = 32 bit IEEE floating point format.

### Constellation – DSSS data rates

Normal BINARY type response.

Data After binary header;

[QPSK Symbol 1][QPSK Symbol 2][...][QPSK Symbol n]

where n = Binary Data Length size / 8

4 bytes per I/Q value

2 IQ values per constellation symbol point

[QPSK Symbol x] = [[I Value x][Q Value x]]

[I Value x] = 4 bytes

[Q Value x] = 4 bytes

4 bytes = 32 bit IEEE floating point format

### **Flatness**

Flatness profile output supports Last, Mean, High, Low and Binary outputs. The flatness profile contains all sub channels, including the guard channels, i.e. 64 channel values. Elements from 7 to 59 correspond to sub channels -26 to +26 including the centre channel 0. The values are in dB and are relative to the average of the centre +/- 16 sub channels power.

# Chapter 9 — MT8860C Remote Command Sequences

This chapter provides examples to explain how the GPIB command set and the status reporting can be combined to develop an automated test program.

The following examples are provided:

- Infrastructure Connection with a Device (STA) (802.11b/g/a only) (Page 9-5)
- Infrastructure Connection with an Access Point (AP) (802.11b/g/a only) (Page 9-8)
- Ad-Hoc Connection (MT8860C Creates a Network) (802.11b/g/a only) (Page 9-11)
- Ad-Hoc Connection (MT8860C Joins a Network) (802.11b/g/a only) (Page 9-14)
- Receiver Sensitivity (PER) Test in Network Mode (802.11b/g/a only) (Page 9-17)
- Receiver Sensitivity Test in Direct Mode (802.11b/g/a) (Page 9-19)
- Receiver Sensitivity Test in Direct Mode (802.11n) (Page 9-21)
- Transmitter Measurements in Network Mode (802.11b/g/a only) (Page 9-27)
- Transmitter Measurements in Direct Mode (Page 9-29)
- External Reference Radio with MT8860C (802.11b/g/a only) (Page 9-31)
- Using the Signal Generator Mode (802.11b/g/a only) (Page 9-33)

The examples assume that the event registers have been configured so that a service request is generated when;

- Operation Complete is reported.
- Data is available in the output queue in response to a query command.
- A network scan has completed in response to meascfg 1,scan
- A DUT IP address has been assigned using DHCP.
- External gold card leveling has completed in response to meascfg 1,extlevel
- An error condition occurs which results in either the QYE, CMD, EXE or DDE bits in the \*ESR register being set.
- A measurement status change has occurred.
- A parameter has been changed due to a configuration constraint.
- The instrument is unable to achieve the specified output power level.

The following command line can be used to configure the event registers to detect all of the above conditions;

```
*CLS;*SRE 49;*ESE 61;*INE 191
```

In order for the status reporting to work correctly, the automated test program must;

- Wait for a service request to be generated.
- Establish which device/instrument is requesting service.
- Determine the cause of the service request and act accordingly.

As a consequence, additional commands and operations will be required in conjunction with those commands listed in the examples.

| Cause of service request                                              | Action to be taken                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-----------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Operation Complete is reported                                        | <p><b>ACTION 1:</b></p> <p>Read the Status Byte using serial poll method (bit 5 &lt;esb&gt; should be set).</p> <p>Issue a *ESR? Query command.</p> <p>Wait for a service request to be generated.</p> <p>Read the Status Byte using serial poll method (bit4 &lt;mav&gt; should be set).</p> <p>Read the output queue.</p> <p>The response should indicate that bit 0 &lt;opc&gt; is set indicating that the command has been executed successfully and the operation is complete.</p> |
| Data is available in the output queue in response to a query command. | <p><b>ACTION 2:</b></p> <p>Read the Status Byte using serial poll method (bit4 &lt;mav&gt; should be set)</p> <p>Read the output queue.</p>                                                                                                                                                                                                                                                                                                                                             |
| A network scan has completed in response to meascfg 1,scan            | <p><b>ACTION 3:</b></p> <p>Read the Status Byte using serial poll method (bit0 &lt;isb&gt; should be set)</p> <p>Issue a *INS? Query command.</p> <p>Wait for a service request to be generated.</p> <p>Read the Status Byte using serial poll method (bit4 &lt;mav&gt; should be set).</p> <p>Read the output queue.</p> <p>The response should indicate that bit 0 &lt;nws&gt; is set indicating that the scan operation has completed.</p>                                           |
| A DUT IP address has been assigned using DHCP                         | <p><b>ACTION 4:</b></p> <p>Read the Status Byte using serial poll method (bit0 &lt;isb&gt; should be set).</p> <p>Issue a *INS? Query command.</p> <p>Wait for a service request to be generated.</p> <p>Read the Status Byte using serial poll method (bit4 &lt;mav&gt; should be set).</p> <p>Read the output queue.</p> <p>The response should indicate that bit 5 &lt;ipa&gt; is set.</p>                                                                                           |

|                                                                                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>External gold card leveling has completed in response to meascfg 1,extlevel</p>                                     | <p><b>ACTION 5:</b></p> <p>Read the Status Byte using serial poll method (bit0 &lt;isb&gt; should be set).</p> <p>Issue a *INS? Query command.</p> <p>Wait for a service request to be generated.</p> <p>Read the Status Byte using serial poll method (bit4 &lt;mav&gt; should be set).</p> <p>Read the output queue.</p> <p>The response should indicate that bit 2 &lt;lvl&gt; is set.</p>                                                                                                                                                                                                                                                                                                                                            |
| <p>An error condition occurs which results in either the QYE, CMD, EXE or DDE bits in the *ESR register being set.</p> | <p><b>ACTION 6:</b></p> <p>Read the Status Byte using serial poll method (bit 5 &lt;esb&gt; should be set)</p> <p>Issue a *ESR? Query command.</p> <p>Wait for a service request to be generated.</p> <p>Read the Status Byte using serial poll method (bit4 &lt;mav&gt; should be set).</p> <p>Read the output queue.</p> <p>The response will indicate the type of error generated.</p> <p>The following query commands can then be used to identify the cause of the problem;</p> <p>syscfg? errlst</p> <p>meascfg? 1,errlst</p> <p>meascfg? 1,radierr</p> <p>meascfg? 1,errmess,&lt;x&gt; where &lt;x&gt; is error number</p> <p>These commands return a list of error codes that can be interpreted by referring to Appendix A.</p> |

|                                                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>A measurement status change has occurred.</p>                             | <p><b>ACTION 7:</b></p> <p>Read the Status Byte using serial poll method (bit0 &lt; isb&gt; should be set).</p> <p>Issue a *INS? Query command.</p> <p>Wait for a service request to be generated.</p> <p>Read the Status Byte using serial poll method (bit4 &lt;mav&gt; should be set).</p> <p>Read the output queue.</p> <p>The response should indicate that bit 1 &lt;scw&gt; is set.</p> <p>The following query command can then be used to determine the actual cause of the status change;</p> <pre>meascfg? 1,status</pre> |
| <p>A parameter has been changed due to a configuration constraint.</p>       | <p><b>ACTION 8:</b></p> <p>Read the Status Byte using serial poll method (bit0 &lt; isb&gt; should be set).</p> <p>Issue a *INS? Query command.</p> <p>Wait for a service request to be generated.</p> <p>Read the Status Byte using serial poll method (bit4 &lt;mav&gt; should be set).</p> <p>Read the output queue.</p> <p>The response should indicate that bit 4 &lt;cfg&gt; is set.</p>                                                                                                                                      |
| <p>The instrument is unable to achieve the specified output power level.</p> | <p><b>ACTION 9:</b></p> <p>Read the Status Byte using serial poll method (bit0 &lt; isb&gt; should be set).</p> <p>Issue a *INS? Query command.</p> <p>Wait for a service request to be generated.</p> <p>Read the Status Byte using serial poll method (bit4 &lt;mav&gt; should be set).</p> <p>Read the output queue.</p> <p>The response should indicate that bit 3 &lt;unlvl&gt; is set.</p>                                                                                                                                    |

**Example 1:**
**Infrastructure Connection with a Device (STA) (802.11b/g/a only)**

The following sequence of commands will establish an infrastructure connection between the MT8860C and one or more Client devices (STA). The MT8860C creates the network for the STA to join. Configuration of the DUT must take place before these commands are issued.

| Stage | Command to MT8860C                                                               | Response from MT8860C                                   | Comments                                                                                                                     |
|-------|----------------------------------------------------------------------------------|---------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| 1     | <code>meascfg<br/>1,radiosel,int;*opc</code>                                     | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | Ensures that the MT8860C reference radio is selected (default setting)                                                       |
| 2     | <code>meascfg<br/>1,testmode,network;*opc</code>                                 | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | Select Network Mode (default setting)                                                                                        |
| 3     | <code>meascfg<br/>1,txpwr,&lt;x&gt;*opc</code>                                   | SRQ generated by opc.<br>Perform Action 1<br>(page 9-2) | <x> specifies the nominal power level of the management frames transmitted by the MT8860C during the connection process      |
| 4     | <code>meascfg<br/>1,nwtype,ap;*opc</code>                                        | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | Sets the network type to infrastructure and configures the MT8860C to simulate an Access Point (AP)                          |
| 5     | <code>meascfg<br/>1,mode,rxmode;*opc</code>                                      | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | Set the MT8860C to receiver testing mode                                                                                     |
| 6     | <code>meascfg<br/>1,wlanstd,&lt;x&gt;*opc<br/>where &lt;x&gt; = B, G or A</code> | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | Specify the WLAN standard. This will depend upon the DUT.                                                                    |
| 7     | <code>meascfg<br/>1,operrateset,all;*opc</code>                                  | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | Configures the management frames transmitted by the MT8860C to contain all data rates supported by MT8860C (default setting) |

At this point, the assignment of the DUT IP Address needs to be defined. If the IP address is to be obtained automatically, then perform Stage 8a. If the IP address is to be manually configured, then the perform Stage 8b.

|    |                                             |                                                        |                 |
|----|---------------------------------------------|--------------------------------------------------------|-----------------|
| 8a | <code>meascfg<br/>1,ipprop,auto;*opc</code> | SRQ generated by opc<br>Perform Action 1<br>(page 9-2) | Default setting |
|----|---------------------------------------------|--------------------------------------------------------|-----------------|

|    |                                  |                                                        |                                                                                               |
|----|----------------------------------|--------------------------------------------------------|-----------------------------------------------------------------------------------------------|
| 8b | meascfg<br>1,ipprop,manual;*opc  | SRQ generated by opc<br>Perform Action 1<br>(page 9-2) |                                                                                               |
|    | meascfg<br>1,ipparms,<x>,<y>*opc | SRQ generated by opc<br>Perform Action 1<br>(page 9-2) | Specify the MT8860C IP address and subnet mask. <x> is the IP address and <y> the subnet mask |
|    | meascfg<br>1,dutip,<x>*opc       | SRQ generated by opc<br>Perform Action 1<br>(page 9-2) | Specify the DUT IP address <x>                                                                |

The following commands can be specified at this time but they are not essential;

meascfg 1,beaconint,<x>\*opc where <x> is the beacon interval  
meascfg 1,preamble,long;\*opc OR meascfg 1,preamble,short;\*opc  
meascfg 1,txrate,<x>\*opc where <x> is the data rate

|    |                                 |                                                                                                                                                |                                                                                                                                                   |
|----|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| 9  | meascfg<br>1,channelnum,<x>*opc | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)                                                                                         | <x> is the channel number of the network to be created by MT8860C                                                                                 |
| 10 | meascfg<br>1,nwssid,<x>,<y>*opc | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)                                                                                         | This command specifies the network name (SSID) created by MT8860C. <x> is the SSID length and <y> the SSID. The SSID is limited to 32 characters. |
| 11 | meascfg?<br>1,nwmacaddr,<x>,<y> | SRQ generated by mav.<br>Perform Action 2<br>(page 9-2)<br><br>The MAC addresses of all detected devices is returned<br>(up to a value of <x>) | <x> specifies the number of different MAC addresses to be found during the detection period. <y> specifies the detection period                   |
| 12 | meascfg<br>1,macaddr,<x>*opc    | SRQ generated by opc.<br>Perform Action 1<br>(page 9-2)                                                                                        | Specify the MAC address of the DUT to be tested. This information is contained in the <i>nwmacaddr</i> response at stage 11                       |



## MT8860C Remote Command Sequences

---

Stage 13 is only required if the IP address is automatically obtained (Stage 8a)

|    |  |                                                      |  |
|----|--|------------------------------------------------------|--|
| 13 |  | SRQ generated by ipa.<br>Perform Action 4 (page 9-2) |  |
|----|--|------------------------------------------------------|--|

At this point an infrastructure connection has been made between the MT8860C and the STA. Both receiver and transmitter measurements should now be possible.

**Example 2:**

**Infrastructure Connection with an Access Point (AP) (802.11b/g/a only)**

The following sequence of commands will establish an infrastructure connection between the MT8860C and one or more access points (AP). The MT8860C joins the network created by the AP. Configuration of the DUT must take place before these commands are issued.

| Stage | Command to MT8860C                                                               | Response from MT8860C                                   | Comments                                                                                                                     |
|-------|----------------------------------------------------------------------------------|---------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| 1     | <code>meascfg<br/>1,radiosel,int;*opc</code>                                     | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | Ensures that the MT8860C reference radio is selected (default setting)                                                       |
| 2     | <code>meascfg<br/>1,testmode,network;*opc</code>                                 | SRQ generated by opc.<br>Perform Action 1<br>(page 9-2) | Select Network Mode (default setting)                                                                                        |
| 3     | <code>meascfg<br/>1,txpwr,&lt;x&gt;*opc</code>                                   | SRQ generated by opc.<br>Perform Action 1<br>(page 9-2) | <x> specifies the nominal power level of the management frames transmitted by the MT8860C during the connection process      |
| 4     | <code>meascfg<br/>1,nwtype,sta;*opc</code>                                       | SRQ generated by opc.<br>Perform Action 1<br>(page 9-2) | Sets the network type to infrastructure and configures the MT8860C to simulate a client (STA)                                |
| 5     | <code>meascfg<br/>1,mode,rxmode;*opc</code>                                      | SRQ generated by opc.<br>Perform Action 1<br>(page 9-2) | Set the MT8860C to receiver testing mode                                                                                     |
| 6     | <code>meascfg<br/>1,wlanstd,&lt;x&gt;*opc<br/>where &lt;x&gt; = B, G or A</code> | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | Specify the WLAN standard. This will depend upon the DUT                                                                     |
| 7     | <code>meascfg<br/>1,operrateset,all;*opc</code>                                  | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | Configures the management frames transmitted by the MT8860C to contain all data rates supported by MT8860C (default setting) |

## MT8860C Remote Command Sequences

For AP testing, please disable the DHCP server on the AP and configure the MT8860C IP settings manually.

|    |                                  |                                                                                                                         |                                                                                                                                                  |
|----|----------------------------------|-------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| 8  | meascfg<br>1,ipprop,manual;*opc  | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)                                                                  |                                                                                                                                                  |
|    | meascfg<br>1,ipparms,<x>,<y>*opc | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)                                                                  | Specify the MT8860C IP address and subnet mask. <x> is the IP address and <y> the subnet mask                                                    |
|    | meascfg<br>1,dutip,<x>*opc       | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)                                                                  | Specify the DUT IP address <x>                                                                                                                   |
| 9  | meascfg 1,scan                   | SRQ generated by nws.<br>Perform Action 3<br>(page 9-2)                                                                 | Instructs the MT8860C to perform a scan for available networks. When the scan operation has completed, the <nws> bit in the *INS register is set |
| 10 | meascfg? 1,nwavail               | SRQ generated by mav.<br>Perform Action 2<br>(page 9-2)<br>The number of networks found by the scan device is returned. | A maximum of 15 networks can be reported                                                                                                         |
| 11 | meascfg? 1,nwinfo,<x>            | SRQ generated by mav.<br>Perform Action 2<br>(page 9-2)<br>The information for network <x> is returned.                 | The value of <x> must be between 1 and the number of networks found in stage 10                                                                  |
| 12 | meascfg<br>1,nwselect,<x>*opc    | SRQ generated by opc.<br>Perform Action 1<br>(page 9-2)                                                                 | Instructs the MT8860C to attempt to join network <x>. The value of <x> must be between 1 and the number of networks found in stage 10.           |
|    |                                  |                                                                                                                         | NOTE: This command causes the MT8860C channel number to be automatically set to the specified network                                            |

|    |                                 |                                                                                                                                        |                                                                                                                                 |
|----|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| 13 | meascfg?<br>1,nwmacaddr,<x>,<y> | SRQ generated by mav.<br>Perform Action 2 (page 9-2)<br>The MAC addresses of all detected devices is returned<br>(up to a value of <x> | <x> specifies the number of different MAC addresses to be found during the detection period. <y> specifies the detection period |
| 14 | meascfg<br>1,macaddr,<x>;*opc   | SRQ generated by opc.<br>Perform Action 4 (page 9-2)                                                                                   | Specify the MAC address of the DUT to be tested. This information is contained in the <i>nwmacaddr</i> response at stage 13     |

At this point an infrastructure connection has been made between the MT8860C and the AP. Both receiver and transmitter measurements can should now be possible.

**Example 3:**
**Ad-Hoc Connection (MT8860C Creates a Network) (802.11b/g/a only)**

The following sequence of commands will establish an Ad-Hoc connection between the MT8860C and one or more WLAN devices. The MT8860C creates the network for the DUT to join. Configuration of the DUT must take place before these commands are issued.

| Stage | Command to MT8860C                                                               | Response from MT8860C                                   | Comments                                                                                                                     |
|-------|----------------------------------------------------------------------------------|---------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| 1     | <code>meascfg<br/>1,radiosel,int;*opc</code>                                     | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | Ensures that the MT8860C reference radio is selected (default setting)                                                       |
| 2     | <code>meascfg<br/>1,testmode,network;*opc</code>                                 | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | Select Network Mode (default setting)                                                                                        |
| 3     | <code>meascfg<br/>1,txpwr,&lt;x&gt;*opc</code>                                   | SRQ generated by opc.<br>Perform Action 1<br>(page 9-2) | <x> specifies the nominal power level of the management frames transmitted by the MT8860C during the connection process      |
| 4     | <code>meascfg<br/>1,nwtype,adhoc;*opc</code>                                     | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | Sets the network type to Ad-Hoc (default setting)                                                                            |
| 5     | <code>meascfg<br/>1,mode,rxmode;*opc</code>                                      | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | Set the MT8860C to receiver testing mode                                                                                     |
| 6     | <code>meascfg<br/>1,wlanstd,&lt;x&gt;*opc<br/>where &lt;x&gt; = B, G or A</code> | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | Specify the WLAN standard. This will depend upon the DUT                                                                     |
| 7     | <code>meascfg<br/>1,operrateset,all;*opc</code>                                  | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | Configures the management frames transmitted by the MT8860C to contain all data rates supported by MT8860C (default setting) |

At this point, the assignment of the DUT IP Address needs to be defined. If the IP address is to be obtained automatically, then perform Stage 8a. If the IP address is to be manually configured, then the perform Stage 8b.

|    |                                             |                                                        |  |
|----|---------------------------------------------|--------------------------------------------------------|--|
| 8a | <code>meascfg<br/>1,ipprop,auto;*opc</code> | SRQ generated by opc<br>Perform Action 1<br>(page 9-2) |  |
|----|---------------------------------------------|--------------------------------------------------------|--|

|    |                                  |                                                        |                                                                                               |
|----|----------------------------------|--------------------------------------------------------|-----------------------------------------------------------------------------------------------|
| 8b | meascfg<br>1,ipprop,manual;*opc  | SRQ generated by opc<br>Perform Action 1<br>(page 9-2) |                                                                                               |
|    | meascfg<br>1,ipparms,<x>,<y>*opc | SRQ generated by opc<br>Perform Action 1<br>(page 9-2) | Specify the MT8860C IP address and subnet mask. <x> is the IP address and <y> the subnet mask |
|    | meascfg<br>1,dutip,<x>*opc       | SRQ generated by opc<br>Perform Action 1<br>(page 9-2) | Specify the DUT IP address <x>                                                                |

The following commands can be specified at this time but they are not essential;

Meascfg 1,beaconint,<x>\*opc where <x> is the beacon interval

Meascfg 1,preamble,<x>\*opc where <x> is the preamble format (DSSS data rate only)

Meascfg 1,txrate,<x>\*opc where <x> is the data rate

|    |                                 |                                                                                                                                            |                                                                                                                                                  |
|----|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| 9  | meascfg<br>1,channelnum,<x>*opc | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)                                                                                     | <x> is the channel number of the network to be created by MT8860C                                                                                |
| 10 | meascfg<br>1,nwssid,<x>,<y>*opc | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)                                                                                     | This command specifies the network name (SSID) created by MT8860C. <x> is the SSID length and <y> the SSID. The SSID is limited to 32 characters |
| 11 | meascfg?<br>1,nwmacaddr,<x>,<y> | SRQ generated by mav.<br>Perform Action 2<br>(page 9-2)<br>The MAC addresses of all detected devices is returned<br>(up to a value of <x>) | <x> specifies the number of different MAC addresses to be found during the detection period. <y> specifies the detection period                  |
| 12 | meascfg<br>1,macaddr,<x>*opc    | SRQ generated by opc.<br>Perform Action 1<br>(page 9-2)                                                                                    | Specify the MAC address of the DUT to be tested. This information is contained in the <i>nwmacaddr</i> response at stage 11                      |

## MT8860C Remote Command Sequences

---

Stage 13 is only required if the IP address is automatically obtained (Stage 8a).

|    |  |                                                            |  |
|----|--|------------------------------------------------------------|--|
| 13 |  | SRQ generated by<br>ipa.<br>Perform Action 4<br>(page 9-2) |  |
|----|--|------------------------------------------------------------|--|

At this point an Ad-Hoc connection has been made between the MT8860C and the DUT. Both receiver and transmitter measurements should now be possible.

**Example 4:**

**Ad-Hoc Connection (MT8860C Joins a Network) (802.11b/g/a only)**

The following sequence of commands will establish an Ad-Hoc connection between the MT8860C and one or more WLAN devices. The MT8860C joins the network created by the WLAN device. Configuration of the DUT must take place before these commands are issued.

| Stage | Command to MT8860C                                                                   | Response from MT8860C                                   | Comments                                                                                                                     |
|-------|--------------------------------------------------------------------------------------|---------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| 1     | <code>meascfg<br/>1, radiosel, int; *opc</code>                                      | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | Ensures that the MT8860C reference radio is selected (default setting)                                                       |
| 2     | <code>meascfg<br/>1, testmode, network; *opc</code>                                  | SRQ generated by opc.<br>Perform Action 1<br>(page 9-2) | Select Network Mode (default setting)                                                                                        |
| 3     | <code>meascfg<br/>1, txpwr, &lt;x&gt;; *opc</code>                                   | SRQ generated by opc.<br>Perform Action 1<br>(page 9-2) | <x> specifies the nominal power level of the management frames transmitted by the MT8860C during the connection process      |
| 4     | <code>meascfg<br/>1, nwtype, adhoc; *opc</code>                                      | SRQ generated by opc.<br>Perform Action 1<br>(page 9-2) | Sets the network type to Ad-Hoc (default setting)                                                                            |
| 5     | <code>meascfg<br/>1, mode, rxmode; *opc</code>                                       | SRQ generated by opc.<br>Perform Action 1<br>(page 9-2) | Set the MT8860C to receiver testing mode                                                                                     |
| 6     | <code>meascfg<br/>1, wlanstd, &lt;x&gt;; *opc<br/>where &lt;x&gt; = B, G or A</code> | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | Specify the WLAN standard. This will depend upon the DUT                                                                     |
| 7     | <code>meascfg<br/>1, operateset, all; *opc</code>                                    | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | Configures the management frames transmitted by the MT8860C to contain all data rates supported by MT8860C (default setting) |



## MT8860C Remote Command Sequences

At this point, the assignment of the DUT IP Address needs to be defined. If the IP address is to be obtained automatically, then perform Stage 8a. If the IP address is to be manually configured, then the perform Stage 8b.

|    |                                  |                                                                                                                         |                                                                                                                                                  |
|----|----------------------------------|-------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| 8a | meascfg<br>1,ipprop,auto;*opc    | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)                                                                  |                                                                                                                                                  |
|    | meascfg<br>1,ipprop>manual;*opc  | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)                                                                  |                                                                                                                                                  |
| 8b | meascfg<br>1,ipparms,<x>,<y>*opc | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)                                                                  | Specify the MT8860C IP address and subnet mask. <x> is the IP address and <y> the subnet mask                                                    |
|    | meascfg<br>1,dutip,<x>*opc       | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)                                                                  | Specify the DUT IP address <x>                                                                                                                   |
| 9  | meascfg 1,scan                   | SRQ generated by nws.<br>Perform Action 3<br>(page 9-2)                                                                 | Instructs the MT8860C to perform a scan for available networks. When the scan operation has completed, the <nws> bit in the *INS register is set |
| 10 | meascfg? 1,nwavail               | SRQ generated by mav.<br>Perform Action 2<br>(page 9-2)<br>The number of networks found by the scan device is returned. | A maximum of 15 networks can be reported                                                                                                         |
| 11 | meascfg? 1,nwinfo,<x>            | SRQ generated by mav.<br>Perform Action 2<br>(page 9-2)<br>The information for network <x> is returned.                 | The value of <x> must be between 1 and the number of networks found in stage 10                                                                  |
| 12 | meascfg<br>1,nwselect,<x>*opc    | SRQ generated by opc.<br>Perform Action 1<br>(page 9-2)                                                                 | Instructs the MT8860C to attempt to join network <x>. The value of <x> must be between 1 and the number of networks found in stage 10.           |

|    |                                 |                                                                                                                                                    |                                                                                                                                 |
|----|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
|    |                                 |                                                                                                                                                    | NOTE: This command causes the MT8860C channel number to be automatically set to the specified network                           |
| 13 | meascfg?<br>1,nwmacaddr,<x>,<y> | SRQ generated by mav.<br><br>Perform Action 2 (page 9-2)<br><br>The MAC addresses of all detected devices is returned<br><br>(up to a value of <x> | <x> specifies the number of different MAC addresses to be found during the detection period. <y> specifies the detection period |
| 14 | meascfg<br>1,macaddr,<x>;*opc   | SRQ generated by opc.<br><br>Perform Action 1 (page 9-2)                                                                                           | Specify the MAC address of the DUT to be tested. This information is contained in the <i>nwmacaddr</i> response at stage 13     |
| 13 | meascfg?<br>1,nwmacaddr,<x>,<y> | SRQ generated by mav.<br><br>Perform Action 2 (page 9-2)<br><br>The MAC addresses of all detected devices is returned<br><br>(up to a value of <x> | <x> specifies the number of different MAC addresses to be found during the detection period. <y> specifies the detection period |
| 14 | meascfg<br>1,macaddr,<x>;*opc   | SRQ generated by opc.<br><br>Perform Action 1 (page 9-2)                                                                                           | Specify the MAC address of the DUT to be tested. This information is contained in the <i>nwmacaddr</i> response at stage 13     |

Stage 15 is only required if the IP address is automatically obtained (Stage 8a).

|    |  |                                                          |  |
|----|--|----------------------------------------------------------|--|
| 15 |  | SRQ generated by ipa.<br><br>Perform Action 4 (page 9-2) |  |
|----|--|----------------------------------------------------------|--|

At this point an Ad-Hoc connection has been made between the MT8860C and the DUT. Both receiver and transmitter measurements should now be possible.

**Example 5:**
**Receiver Sensitivity (PER) Test in Network Mode (802.11b/g/a only)**

The following sequence of commands will perform a PER test when Network mode is selected. A network connection must be established between the MT8860C and the DUT before performing the PER test.

| Stage | Command to MT8860C                                                               | Response from MT8860C                                          | Comments                                                                                                                             |
|-------|----------------------------------------------------------------------------------|----------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| 1     | <code>meascfg<br/>1,testmode,network;*<br/>opc</code>                            | SRQ generated by<br>opc.<br><br>Perform Action 1<br>(page 9-2) | Select Network Mode<br>(default setting)                                                                                             |
| 2     | <code>meascfg<br/>1,mode,rxmode;*opc</code>                                      | SRQ generated by<br>opc.<br><br>Perform Action 1<br>(page 9-2) | Set the MT8860C to receiver<br>testing mode                                                                                          |
| 3     | <code>meascfg<br/>1,pkttype,unicast;*o<br/>pc</code>                             | SRQ generated by<br>opc.<br><br>Perform Action 1<br>(page 9-2) | Sets the packet type to<br>unicast (default setting)                                                                                 |
| 4     | <code>meascfg<br/>1,wlanstd,&lt;x&gt;*opc<br/>where &lt;x&gt; = B, G or A</code> | SRQ generated by opc<br><br>Perform Action 1<br>(page 9-2)     | Specify the WLAN standard.<br>This will depend upon the<br>DUT                                                                       |
| 5     | <code>meascfg<br/>1,operrateset,all;*o<br/>pc</code>                             | SRQ generated by opc<br><br>Perform Action 1<br>(page 9-2)     | Configures management<br>frames transmitted by the<br>MT8860C to contain all data<br>rates supported by MT8860C<br>(default setting) |
| 6     | <code>meascfg<br/>1,dutpwr,&lt;x&gt;*opc</code>                                  | SRQ generated by opc<br><br>Perform Action 1<br>(page 9-2)     | <x> is the nominal transmit<br>power of the DUT.                                                                                     |
| 7     | <code>meascfg<br/>1,perpkts,&lt;x&gt;*opc</code>                                 | SRQ generated by<br>opc.<br><br>Perform Action 1<br>(page 9-2) | Specify the number of<br>packets transmitted during<br>each measurement operation                                                    |

The following commands can be specified at this time but they are not essential;

`meascfg 1,pktlen,<x>*opc` where <x> is the payload length  
`meascfg 1,payload,<x>*opc` where <x> is the payload data type  
`meascfg 1,preamble,<x>*opc` where <x> is the preamble format (for DSSS rates only)  
`meascfg 1,txinterval,<x>*opc` where <x> is the frame interval

|    |                                 |                                                                                                            |                                                                                                                                                                                                                                                                                                                                                          |
|----|---------------------------------|------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8  | meascfg<br>1,channelnum,<x>*opc | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)                                                     | <x> is the channel number                                                                                                                                                                                                                                                                                                                                |
| 9  | meascfg<br>1,txrate,<x>*opc     | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)                                                     | <x> is the data rate                                                                                                                                                                                                                                                                                                                                     |
| 10 | meascfg<br>1,txpwr,<x>*opc      | SRQ generated by opc.<br>Perform Action 1<br>(page 9-2)                                                    | <x> specifies the power level transmitted by the MT8860C during the receiver sensitivity test                                                                                                                                                                                                                                                            |
| 11 | meascfg? 1,meas,per             | SRQ generated by mav.<br>Perform Action 2<br>(page 9-2)<br>The response is in the format;<br>PER,1,a,b,c,d | Result (a) indicates whether the measurement is valid or not (TRUE / FALSE). If FALSE is returned then the values for (b), (c) and (d) should be ignored and the setup checked.<br>Result (b) is the PER in %.<br>Result (c) is the number of acknowledgement (ACK) packets received.<br>Result (d) is the number of packets transmitted by the MT8860C. |

At this point, a PER measurement has been performed. Steps 8 – 11 can be repeated for different channels, data rates and power levels.

**Example 6:**
**Receiver Sensitivity Test in Direct Mode (802.11b/g/a)**

The following sequence of commands will perform a PER test when Direct mode is selected. Configuration of the DUT must take place using chipset vendor control software before these commands are issued.

| Stage | Command to MT8860C                              | Response from MT8860C                                | Comments                                 |
|-------|-------------------------------------------------|------------------------------------------------------|------------------------------------------|
| 1     | <code>meascfg<br/>1,testmode,direct;*opc</code> | SRQ generated by opc.<br>Perform Action 1 (page 9-2) | Select Direct Mode                       |
| 2     | <code>meascfg<br/>1,mode,rxmode;*opc</code>     | SRQ generated by opc.<br>Perform Action 1 (page 9-2) | Set the MT8860C to receiver testing mode |

At this point, the packet type can be defined.

For unicast packets, perform Stage 3a.

For broadcast (multicast) packets, perform Stage 3b.

|    |                                                                                  |                                                      |                                                                             |
|----|----------------------------------------------------------------------------------|------------------------------------------------------|-----------------------------------------------------------------------------|
| 3a | <code>meascfg<br/>1,pkttype,unicast;*opc</code>                                  | SRQ generated by opc<br>Perform Action 1 (page 9-2)  | Sets the packet type to unicast (default setting)                           |
|    | <code>meascfg<br/>1,macaddr,&lt;x&gt;*opc</code>                                 | SRQ generated by opc<br>Perform Action 1 (page 9-2)  | Specify the MAC address of the DUT to be tested                             |
| 3b | <code>meascfg<br/>1,pkttype,broadcast;*opc</code>                                | SRQ generated by opc<br>Perform Action 1 (page 9-2)  | Sets the packet type to broadcast                                           |
| 4  | <code>meascfg<br/>1,wlanstd,&lt;x&gt;*opc<br/>where &lt;x&gt; = B, G or A</code> | SRQ generated by opc<br>Perform Action 1 (page 9-2)  | Specify the WLAN standard. This will depend upon the DUT.                   |
| 5  | <code>meascfg<br/>1,perpkts,&lt;x&gt;*opc</code>                                 | SRQ generated by opc.<br>Perform Action 1 (page 9-2) | Specify the number of packets transmitted during each measurement operation |

The following commands can be specified at this time but they are not essential;

`meascfg 1,pktlen,<x>*opc` where <x> is the payload length

`meascfg 1,payload,<x>*opc` where <x> is the payload data type

meascfg 1,preamble,<x>\*opc where <x> is the preamble format (for DSSS rates only)

meascfg 1,ifinterval,<x>\*opc where <x> is the frame interval

|   |                                 |                                                            |                                                                                                                                                                                                                                                                                                                                                                             |
|---|---------------------------------|------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6 | meascfg<br>1,channelnum,<x>*opc | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)     | <x> is the channel number                                                                                                                                                                                                                                                                                                                                                   |
| 7 | meascfg<br>1,txrate,<x>*opc     | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)     | <x> is the data rate                                                                                                                                                                                                                                                                                                                                                        |
| 8 | meascfg<br>1,txpwr,<x>*opc      | SRQ generated by<br>opc.<br>Perform Action 1<br>(page 9-2) | <x> specifies the power level<br>transmitted by the MT8860C<br>during the receiver<br>sensitivity test                                                                                                                                                                                                                                                                      |
| 9 | meascfg? 1,meas,per             | SRQ generated by<br>mav.<br>Perform Action 2<br>(page 9-2) | The command causes the<br>MT8860C to transmit the<br>required number of packets<br>defined at stage 5. When the<br>final packet has been<br>transmitted, the MT8860C<br>will return the response;<br><br>PER,1,FALSE,0,0,0<br><br>No measurement is<br>performed by the MT8860C.<br>The chipset vendor control<br>software must be used to<br>calculate the Rx sensitivity. |

At this point, a PER measurement has been performed. Steps 8 – 11 can be repeated for different channels, data rates and power levels.

**Example 7:**

**Receiver Sensitivity Test in Direct Mode (802.11n)**

The following sequence of commands can be used to perform a PER test when Direct mode is selected for 802.11n. This procedure requires configuration of both the MT8860C and MN8861A accessory. Configuration of the DUT must take place using chipset vendor control software.

**Note** Ensure that the RF output from the MN8861A is connected to the WLAN Reference port of the MT8860C and the BNC cable is connected between the MN8861A and Digital Input 2 of the MT8860C.

The first sequence configures the MT8860C.

| Stage | Command to MT8860C                              | Response from MT8860C                                      | Comments                                                                                                                        |
|-------|-------------------------------------------------|------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| 1     | <code>meascfg<br/>1,testmode,direct;*opc</code> | SRQ generated by<br>opc.<br>Perform Action 1<br>(page 9-2) | Select Direct Mode                                                                                                              |
| 2     | <code>meascfg<br/>1,mode,rxmode;*opc</code>     | SRQ generated by<br>opc.<br>Perform Action 1<br>(page 9-2) | Set the MT8860C to receiver testing mode                                                                                        |
| 3     | <code>meascfg<br/>1,radiosel,ext;*opc</code>    | SRQ generated by<br>opc.<br>Perform Action 1<br>(page 9-2) | Set the reference radio selection to external                                                                                   |
| 4     | <code>syscfg<br/>bnc,in2,goldtx;*opc</code>     | SRQ generated by<br>opc.<br>Perform Action 1<br>(page 9-2) | Sets the rear panel BNC connector “Digital 2 In” to accept the Tx ON signal from the external reference radio (default setting) |
| 5     | <code>meascfg<br/>1,wlanstd,N;*opc</code>       | SRQ generated by<br>opc.<br>Perform Action 1<br>(page 9-2) | Specify 802.11n WLAN standard                                                                                                   |

|    |                                            |                                                            |                                                                                                                       |
|----|--------------------------------------------|------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| 6  | meascfg<br>1,nconfig,freqband,<br><x>*opc  | SRQ generated by<br>opc.<br>Perform Action 1<br>(page 9-2) | <x> specifies the frequency<br>band. Use “2PT4GHZ” or<br>“5GHZ”.                                                      |
| 7  | meascfg<br>1,nconfig,ppdudtype,<br><x>*opc | SRQ generated by<br>opc.<br>Perform Action 1<br>(page 9-2) | <x> specifies PPDU type. Use<br>“20MHZ”, “40MHZ” or<br>“40MHZD”                                                       |
| 8  | meascfg<br>1,channelnum,<x>*o<br>pc        | SRQ generated by<br>opc.<br>Perform Action 1<br>(page 9-2) | <x> is the channel number. For<br>40MHz and 40MHz duplicate<br>PPDU type, this must include<br>the secondary channel. |
| 9  | meascfg<br>1,txpwr,<x>*opc                 | SRQ generated by<br>opc.<br>Perform Action 1<br>(page 9-2) | Sets the required output power<br>level at the MT8860C test port                                                      |
| 10 | meascfg<br>1,mute,enable;*opc              | SRQ generated by<br>opc.<br>Perform Action 1<br>(page 9-2) | Specifies that the output of the<br>MT8860C is muted                                                                  |

At this point, the MN8861A WLAN standard, channel, and channel bandwidth parameters must be configured to define the characteristics of the signal to transmit. The MN8861A commands listed below represent the API functions of the .NET control interface. Refer to the MN8861A .NET API reference for a complete definition of each command.

| Stage | Command to MN8861A       | Response from<br>MN8861A | Comments                                                                                                                                                                                              |
|-------|--------------------------|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 11    | SetWLANStandard(<x<br>>) | -                        | <x> is the WLAN standard.<br>Use the “WLANStandard”<br>enumeration to specify<br>“WLANStandardN2P4G” or<br>“WLANStandardN5G”. This<br>should correspond with the<br>setting applied to the<br>MT8860C |



## MT8860C Remote Command Sequences

|    |                            |   |                                                                                                                                                                                                                                              |
|----|----------------------------|---|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 12 | SetPPDUType (<x> )         | - | <x> is the PPDU type. Use the “PPDUType” enumeration to specify “PPDU20MHz”, “PPDU40MHz” or “PPDU40MHzDuplex”. This should correspond with the setting applied to the MT8860C                                                                |
| 13 | SetChannel (<x> )          | - | <x> is the primary channel. This should correspond with the setting applied to the MT8860C                                                                                                                                                   |
| 14 | SetSecondaryChannel (<x> ) | - | <x> is the secondary channel. This is only applicable in 40MHz or 40MHz duplicate mode. Use the “SecondaryChannel” enumeration to specify “None”, “Upper” or “Lower”. This should correspond with the channel setting applied to the MT8860C |

The next sequence configures the MN8861A with a standard set of parameters for the MT8860C levelling operation. Use the settings as defined in the comments below.

| Stage | Command to MN8861A          | Response from MN8861A                                              | Comments                                                                                                                                |
|-------|-----------------------------|--------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| 15    | SetTransmitMode (<x> )      | -                                                                  | <x> is the transmit mode. This must be set to continuous transmission. Use the “TransmitMode” enumeration to specify “TxModeContFramed” |
| 16    | SetGuardInterval (<x> )     | -                                                                  | <x> is the guard interval. Use the “GuardInterval” enumeration to specify “GILong”                                                      |
| 17    | SetMCSIndex (<x> )          | -                                                                  | <x> is the MCS index. This must be set to 7                                                                                             |
| 18    | SetInterframeSpacing (<x> ) | Boolean True if the inter-frame spacing is valid, otherwise False. | <x> is the inter-frame spacing in microseconds. This must be set to 100                                                                 |

|    |                       |                                                                    |                                                                                                                                                                  |
|----|-----------------------|--------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 19 | SetPacketLength(<x> ) | Boolean True if the packet length is valid, otherwise False.       | <x> is the packet length in bytes. This must be set to 600 bytes if the PPDU type is 20MHz and 1200 bytes if the PPDU type is 40MHz or 40MHz duplicate           |
| 20 | SetMACAddress(<x> )   | Boolean True if the MAC address is valid, otherwise False.         | <x> is the destination MAC address. It is recommended that this is set to an address other than that which has been set as the packet filter address of the DUT. |
| 21 | Configure( )          | Boolean True if the configuration was successful, otherwise False. | Configures the MN8861A with the previously set parameters                                                                                                        |

At this point, levelling is performed to calibrate the output power at the MT8860C test port to the level specified. This requires the following commands to be sent to MT8860C and MN8861A in sequence.

| Stage | Command<br>(instrument as defined) | Response                                                                       | Comments                                                                                                                                                                                                                            |
|-------|------------------------------------|--------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 22    | StartTx()<br>(MN8861A)             | Boolean True if packet transmission was started successfully, otherwise False. | Starts packet transmission                                                                                                                                                                                                          |
| 23    | meascfg 1,extlevel<br>(MT8860C)    | SRQ generated by lvl<br>or unlvl<br>Perform Action 5<br>(page 9-2)             | Instructs the MT8860C to perform a leveling operation. When the leveling operation has completed, the <lvl> bit in the *INS register is set. If the leveling operation is unsuccessful, the <unlvl> bit in the *INS register is set |
| 24    | StopTx()<br>(MN8861A)              | Boolean True if packet transmission was stopped successfully, otherwise False. | Stops packet transmission                                                                                                                                                                                                           |

## MT8860C Remote Command Sequences

|    |                                                  |                                                            |                                                       |
|----|--------------------------------------------------|------------------------------------------------------------|-------------------------------------------------------|
| 25 | meascfg<br>1,mute,disable;*opc<br>c<br>(MT8860C) | SRQ generated by<br>opc.<br>Perform Action 1<br>(page 9-2) | Specifies that the output of the MT8860C is not muted |
|----|--------------------------------------------------|------------------------------------------------------------|-------------------------------------------------------|

After the levelling operation has completed, the MN8861A must be reconfigured to transmit packets using the characteristics required for the receiver measurement.

For continuous packet transmission, perform stage 26a.

For transmission of a fixed number of packets, perform stage 26b.

| Stage | Command to MN8861A        | Response from MN8861A                                              | Comments                                                                                                                               |
|-------|---------------------------|--------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| 26    | SetTransmitMode(<x>)      | -                                                                  | <x> is the transmit mode. Use the “TransmitMode” enumeration to specify “TxModeFixedFramed” for transmitting a fixed number of packets |
|       | SetPacketCount(<x>)       | Boolean True if the number of packets is valid, otherwise False.   | <x> is the number of packets to transmit. The value specified should be within the range 1 – 10000 inclusive                           |
| 27    | SetGuardInterval(<x>)     | -                                                                  | <x> is the guard interval. Use the “GuardInterval” enumeration to specify “GILong” or “GIShort”                                        |
| 28    | SetMCSIndex(<x>)          | -                                                                  | <x> is the MCS index. The value should be within the range 0 – 7.                                                                      |
| 29    | SetInterframeSpacing(<x>) | Boolean True if the inter-frame spacing is valid, otherwise False. | <x> is the inter-frame spacing in microseconds The value should be within the range 100 – 1000.                                        |
| 30    | SetPacketLength(<x>)      | Boolean True if the packet length is valid, otherwise False.       | <x> is the packet length in bytes. The value should be within the range 50 – 1772.                                                     |
| 31    | SetMACAddress(<x>)        | Boolean True if the MAC address is valid, otherwise False.         | <x> is the destination MAC address. The MAC address should correspond with the MAC address set as the packet filter address of the DUT |

|    |                          |                                                                                |                                                           |
|----|--------------------------|--------------------------------------------------------------------------------|-----------------------------------------------------------|
| 32 | <code>Configure()</code> | Boolean True if the configuration was successful, otherwise False.             | Configures the MN8861A with the previously set parameters |
| 33 | <code>StartTx()</code>   | Boolean True if packet transmission was started successfully, otherwise False. | Starts packet transmission                                |

At this point the chipset vendor control software should be used to query the packets received by the DUT.

**Example 8:**
**Transmitter Measurements in Network Mode (802.11b/g/a only)**

The following sequence of commands will configure the MT8860C for analysis of the transmitter characteristics of a WLAN device when Network mode is selected. A network connection must be established between the MT8860C and the DUT before performing transmitter analysis.

| Stage | Command to MT8860C                                                            | Response from MT8860C                                | Comments                                                                                            |
|-------|-------------------------------------------------------------------------------|------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
| 1     | <code>meascfg<br/>1, testmode, network; *opc</code>                           | SRQ generated by opc.<br>Perform Action 1 (page 9-2) | Select Network Mode (default setting)                                                               |
| 2     | <code>meascfg<br/>1, mode, txmode; *opc</code>                                | SRQ generated by opc.<br>Perform Action 1 (page 9-2) | Set the MT8860C to transmitter testing mode                                                         |
| 3     | <code>meascfg<br/>1, wlanstd, &lt;x&gt;; *opc</code><br>where <x> = B, G or A | SRQ generated by opc<br>Perform Action 1 (page 9-2)  | Specify the WLAN standard. This will depend upon the DUT.                                           |
| 4     | <code>meascfg<br/>1, operateset, single; *opc</code>                          | SRQ generated by opc<br>Perform Action 1 (page 9-2)  | Configures the management frames transmitted by the MT8860C to contain only the selected data rate. |
| 5     | <code>meascfg<br/>1, txpwr, &lt;x&gt;; *opc</code>                            | SRQ generated by opc.<br>Perform Action 1 (page 9-2) | <x> specifies the nominal power level of the ICMP packets transmitted by the MT8860C                |
| 6     | <code>meascfg<br/>1, dutpwr, &lt;x&gt;; *opc</code>                           | SRQ generated by opc<br>Perform Action 1 (page 9-2)  | <x> is the nominal transmit power of the DUT.                                                       |

The following commands can be specified at this time but they are not essential;

`meascfg 1, pktlen, <x>; *opc` where <x> is the payload length

`meascfg 1, payload, <x>; *opc` where <x> is the payload data type

`meascfg 1, preamble, <x>; *opc` where <x> is the preamble format (for DSSS rates only)

`meascfg 1, plinterval, <x>; *opc` where <x> is the frame interval

|   |                                                         |                                                     |                           |
|---|---------------------------------------------------------|-----------------------------------------------------|---------------------------|
| 7 | <code>meascfg<br/>1, channelnum, &lt;x&gt;; *opc</code> | SRQ generated by opc<br>Perform Action 1 (page 9-2) | <x> is the channel number |
|---|---------------------------------------------------------|-----------------------------------------------------|---------------------------|

|   |                             |                                                        |                                                                                                                                  |
|---|-----------------------------|--------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| 8 | meascfg<br>1,txrate,<x>*opc | SRQ generated by opc<br>Perform Action 1<br>(page 9-2) | <x> is the data rate                                                                                                             |
| 9 | meascfg<br>1,autocfg;*opc   | SRQ generated by opc<br>Perform Action 1<br>(page 9-2) | This command automatically configures the Tx analyzer settings of the MT8860C based on Tx characteristics and data rate defined. |

Alternatively, the MT8860C Tx analyzer settings can be manually configured using the following commands;

meascfg 1,range,<x>\*opc

meascfg 1,pretrg,<x>\*opc

meascfg 1,profcap,power,<x>,<y>\*opc

meascfg 1,trgsrc,<x>,<y>,<z>\*opc

meascfg 1,gate,1,<x>,<y>\*opc

meascfg 1,gate,2,<x>,<y>\*opc

Please refer to the relevant command for details on the <x>, <y> and <z> parameters.

|    |                                    |                                                         |                                                                                                                                                                                                     |
|----|------------------------------------|---------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 10 | meascfg<br>1,nummeas,<x>*opc       | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | <x> is the amount of averaging to be applied to the measurement                                                                                                                                     |
| 11 | meascfg?<br>1,meas,<a>,<b>,...,<f> | SRQ generated by mav.<br>Perform Action 2<br>(page 9-2) | <a>, <b>,.....,<f> represent the required transmit measurement mnemonic as described on page 8-1. Transmitter measurements can be performed individually or simultaneously on the same command line |

At this point, transmitter measurements have been performed. The response format will depend upon the measurement requested. Steps 7 – 10 can be repeated for different channels and data rates.

**Example 9:**
**Transmitter Measurements in Direct Mode**

The following sequence of commands configure the MT8860C for analysis of the transmitter characteristics of a WLAN device in Direct mode. Configuration of the DUT must take place using chipset vendor control software before these commands are issued.

| Stage | Command to MT8860C                                                                       | Response from MT8860C                                | Comments                                                 |
|-------|------------------------------------------------------------------------------------------|------------------------------------------------------|----------------------------------------------------------|
| 1     | <code>meascfg<br/>1,testmode,direct;*opc</code>                                          | SRQ generated by opc.<br>Perform Action 1 (page 9-2) | Select Direct Mode                                       |
| 2     | <code>meascfg<br/>1,mode,txmode;*opc</code>                                              | SRQ generated by opc.<br>Perform Action 1 (page 9-2) | Set the MT8860C to transmitter testing mode              |
| 3     | <code>meascfg<br/>1,wlanstd,&lt;x&gt;*opc<br/>where &lt;x&gt; = B, G, A,<br/>or N</code> | SRQ generated by opc<br>Perform Action 1 (page 9-2)  | Specify the WLAN standard. This will depend upon the DUT |

If the auto-configure function is used (stage 10), then stages 4 – 7 must be performed. The settings should reflect the values used on the chipset vendor control software.

|   |                                                     |                                                     |                                                  |
|---|-----------------------------------------------------|-----------------------------------------------------|--------------------------------------------------|
| 4 | <code>meascfg<br/>1,dutpwr,&lt;x&gt;*opc</code>     | SRQ generated by opc<br>Perform Action 1 (page 9-2) | <x> is the nominal transmit power of the DUT     |
| 5 | <code>meascfg<br/>1,pktlen,&lt;x&gt;*opc</code>     | SRQ generated by opc<br>Perform Action 1 (page 9-2) | <x> is the payload length                        |
| 6 | <code>meascfg<br/>1,payload,&lt;x&gt;*opc</code>    | SRQ generated by opc<br>Perform Action 1 (page 9-2) | <x> is the payload data type                     |
| 7 | <code>meascfg<br/>1,preamble,&lt;x&gt;*opc</code>   | SRQ generated by opc<br>Perform Action 1 (page 9-2) | <x> is the preamble format (for DSSS rates only) |
| 8 | <code>meascfg<br/>1,channelnum,&lt;x&gt;*opc</code> | SRQ generated by opc<br>Perform Action 1 (page 9-2) | <x> is the channel number                        |

|    |                             |                                                        |                                                                                                                                  |
|----|-----------------------------|--------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| 9  | meascfg<br>1,txrate,<x>*opc | SRQ generated by opc<br>Perform Action 1<br>(page 9-2) | <x> is the data rate                                                                                                             |
| 10 | meascfg<br>1,autocfg;*opc   | SRQ generated by opc<br>Perform Action 1<br>(page 9-2) | This command automatically configures the Tx analyzer settings of the MT8860C based on Tx characteristics and data rate defined. |

Alternatively, the MT8860C Tx analyzer settings can be manually configured using the following commands;

```
meascfg 1,range,<x>*opc
meascfg 1,autorngmode,<x>*opc
meascfg 1,pretrg,<x>*opc
meascfg 1,profcap,power,<x>,<y>*opc
meascfg 1,trgsrc,<x>,<y>,<z>*opc
meascfg 1,gate,1,<x>,<y>*opc
meascfg 1,gate,2,<x>,<y>*opc
```

Please refer to the relevant command for details on the <x>, <y> and <z> parameters.

|    |                                    |                                                         |                                                                                                                                                                                                              |
|----|------------------------------------|---------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 11 | meascfg<br>1,nummeas,<x>*opc       | SRQ generated by opc<br>Perform Action 1<br>(page 9-2)  | <x> is the amount of averaging to be applied to the measurement                                                                                                                                              |
| 12 | meascfg?<br>1,meas,<a>,<b>,...,<f> | SRQ generated by mav.<br>Perform Action 2<br>(page 9-2) | <a>, <b>,.....,<f> represent the required transmit measurement mnemonic as described on page 8-1 and 8-2. Transmitter measurements can be performed individually or simultaneously on the same command line. |

At this point, transmitter measurements have been performed. The response format will depend upon the measurement requested. Steps 7 – 10 can be repeated for different channels and data rates.



**Example 10:**

**External Reference Radio with MT8860C (802.11b/g/a only)**

The MT8860C is provided with a WLAN reference input connector. This allows DUT receiver measurements to be performed using an external WLAN device instead of the internal reference radio. In this mode of operation, only the leveling loop and attenuator hardware of the MT8860C is used to provide a calibrated signal level at the Test Port Connector. In order that the correct signal level is produced at the test port connector, the following test conditions must be used –

The average power at the WLAN reference input must be in the range +12 dBm to +18dBm.

The packets generated by the WLAN device must be > 110 us in length.

The “Tx ON” signal from the WLAN device must be connected to the rear panel BNC connector “Digital 2 In”.

**Note** No measurements are supported by MT8860C in this mode of operation.

The following sequence of commands can be used to configure the MT8860C allowing an external WLAN device to be used for DUT receiver testing.

| Stage | Command to MT8860C                                                        | Response from MT8860C                                    | Comments                                                                                                                        |
|-------|---------------------------------------------------------------------------|----------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| 1     | <code>meascfg<br/>1,testmode,direct;*opc</code>                           | SRQ generated by opc.<br><br>Perform Action 1 (page 9-2) | Select Direct Mode                                                                                                              |
| 2     | <code>meascfg<br/>1,mode,rxmode;*opc</code>                               | SRQ generated by opc.<br><br>Perform Action 1 (page 9-2) | Set the MT8860C to receiver testing mode                                                                                        |
| 3     | <code>meascfg<br/>1,wlanstd,&lt;x&gt;*opc</code><br>where <x> = B, G or A | SRQ generated by opc<br><br>Perform Action 1 (page 9-2)  | Specify the WLAN standard. This will depend upon the DUT.                                                                       |
| 4     | <code>meascfg<br/>1,radiosel,ext;*opc</code>                              | SRQ generated by opc.<br><br>Perform Action 1 (page 9-2) | Set the reference radio to external selection                                                                                   |
| 5     | <code>syscfg<br/>bnc,in2,goldtx;*opc</code>                               | SRQ generated by opc.<br><br>Perform Action 1 (page 9-2) | Sets the rear panel BNC connector “Digital 2 In” to accept the Tx ON signal from the external reference radio (default setting) |

|    |                                                 |                                                                                          |                                                                                                                                                                                                                                     |
|----|-------------------------------------------------|------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6  | <code>meascfg 1,dutpwr;*opc</code>              | SRQ generated by <code>opc</code> .<br>Perform Action 1 (page 9-2)                       | <x> is the nominal transmit power of the DUT                                                                                                                                                                                        |
| 7  | <code>meascfg 1,channelnum,&lt;x&gt;*opc</code> | SRQ generated by <code>opc</code> .<br>Perform Action 1 (page 9-2)                       | <x> is the channel number. This ensures that the correct calibration is applied                                                                                                                                                     |
| 8  | <code>meascfg 1,txrate,&lt;x&gt;*opc</code>     | SRQ generated by <code>opc</code> .<br>Perform Action 1 (page 9-2)                       | <x> is the data rate                                                                                                                                                                                                                |
| 9  | <code>meascfg 1,txpwr,&lt;x&gt;*opc</code>      | SRQ generated by <code>opc</code> .<br>Perform Action 1 (page 9-29-2)                    | <x> specifies the power level required to be transmitted to the DUT receiver                                                                                                                                                        |
| 10 | <code>meascfg 1,extlevel</code>                 | SRQ generated by <code>lvl</code> or <code>unlvl</code> .<br>Perform Action 5 (page 9-2) | Instructs the MT8860C to perform a leveling operation. When the leveling operation has completed, the <lvl> bit in the *INS register is set. If the leveling operation is unsuccessful, the <unlvl> bit in the *INS register is set |

At this point, the external reference radio can be configured to transmit packets to the DUT. The power level applied to the receiver will be the value specified at Stage 9.

**Example 11:**
**Using the Signal Generator Mode (802.11b/g/a only)**

The following example configures the MT8860C to generate an 802.11b carrier suppression signal.

| Stage | Command to MT8860C                          | Response from MT8860C                               | Comments                                                 |
|-------|---------------------------------------------|-----------------------------------------------------|----------------------------------------------------------|
| 1     | <code>meascfg 1,testmode,direct;*opc</code> | SRQ generated by opc<br>Perform Action 1 (page 9-1) | Select Direct Mode                                       |
| 2     | <code>meascfg 1,mode,rxmode;*opc</code>     | SRQ generated by opc<br>Perform Action 1 (page 9-1) | Select RX Mode                                           |
| 3     | <code>meascfg 1,radiosel,int;*opc</code>    | SRQ generated by opc<br>Perform Action 1 (page 9-1) | Select internal reference radio                          |
| 4     | <code>meascfg 1,wlanstd,b;*opc</code>       | SRQ generated by opc<br>Perform Action 1 (page 9-1) | Select 802.11b                                           |
| 5     | <code>meascfg 1,payload,0101;*opc</code>    | SRQ generated by opc<br>Perform Action 1 (page 9-1) | Set the payload to repeating 0101 pattern                |
| 6     | <code>meascfg 1,txrate,2;*opc</code>        | SRQ generated by opc<br>Perform Action 1 (page 9-1) | Set the transmit rate to 2 Mbps                          |
| 7     | <code>meascfg 1,txpwr,&lt;x&gt;*opc</code>  | SRQ generated by opc<br>Perform Action 1 (page 9-1) | <x> specifies the power level transmitted by the MT8860C |
| 8     | <code>meascfg 1,siggen,mode,cs;*opc</code>  | SRQ generated by opc<br>Perform Action 1 (page 9-1) | Select the transmit state to Carrier Suppression Signal  |

|   |                                                 |                                                           |                                |
|---|-------------------------------------------------|-----------------------------------------------------------|--------------------------------|
| 9 | <code>meascfg 1,siggen,state,enable;*opc</code> | SRQ generated by<br>opc<br>Perform Action 1<br>(page 9-1) | Enable the Signal<br>Generator |
|---|-------------------------------------------------|-----------------------------------------------------------|--------------------------------|

The following example configures the MT8860C to generate a continuous 802.11a framed signal.

| Stage | Command to MT8860C                               | Response from MT8860C                                     | Comments                                                          |
|-------|--------------------------------------------------|-----------------------------------------------------------|-------------------------------------------------------------------|
| 1     | <code>meascfg 1,testmode,direct;*opc</code>      | SRQ generated by<br>opc<br>Perform Action 1<br>(page 9-1) | Select Direct<br>Mode                                             |
| 2     | <code>meascfg 1,mode,rxmode;*opc</code>          | SRQ generated by<br>opc<br>Perform Action 1<br>(page 9-1) | Select RX Mode                                                    |
| 3     | <code>meascfg 1,radiosel,int;*opc</code>         | SRQ generated by<br>opc<br>Perform Action 1<br>(page 9-1) | Select internal<br>reference radio                                |
| 4     | <code>meascfg 1,wlanstd,a;*opc</code>            | SRQ generated by<br>opc<br>Perform Action 1<br>(page 9-1) | Select 802.11a                                                    |
| 5     | <code>meascfg 1,txpwr,&lt;x&gt;*opc</code>       | SRQ generated by<br>opc<br>Perform Action 1<br>(page 9-1) | <x> specifies the<br>power level<br>transmitted by<br>the MT8860C |
| 6     | <code>meascfg 1,pktlen,&lt;x&gt;*opc</code>      | SRQ generated by<br>opc<br>Perform Action 1<br>(page 9-1) | <x> specifies the<br>packet length                                |
| 7     | <code>meascfg 1,payload,&lt;x&gt;*opc</code>     | SRQ generated by<br>opc<br>Perform Action 1<br>(page 9-1) | <x> specifies the<br>payload                                      |
| 8     | <code>meascfg 1,ifinterval,&lt;x&gt;,*opc</code> | SRQ generated by<br>opc<br>Perform Action 1<br>(page 9-1) | <x> specifies the<br>inter-frame<br>spacing                       |

## MT8860C Remote Command Sequences

---

|    |                                                     |                                                           |                                                             |
|----|-----------------------------------------------------|-----------------------------------------------------------|-------------------------------------------------------------|
| 9  | <code>meascfg 1,siggen,mode,cf;*opc</code>          | SRQ generated by<br>opc<br>Perform Action 1<br>(page 9-1) | Set the transmit<br>state to<br>Continuous<br>Framed Signal |
| 10 | <code>meascfg<br/>1,siggen,state,enable;*opc</code> | SRQ generated by<br>opc<br>Perform Action 1<br>(page 9-1) | Enable the<br>Signal<br>Generator                           |



# Appendix A — Error Codes

## A-1 System Error Codes

**Table A-1.** System Error Codes

| Error Code (HEX) | Comment                                                                                                                                                                                     |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0002             | Command parameter is out of range                                                                                                                                                           |
| 0101             | Operation not permitted                                                                                                                                                                     |
| 0102             | Unable to write parameter to configuration file                                                                                                                                             |
| 0103             | Unable to read parameter from configuration file                                                                                                                                            |
| 0104 - 0108      | For service use only. If problem persists please contact your regional Anritsu service centre.                                                                                              |
| 0109             | Default configuration settings are in use. Please use the SHUTDOWN command and then power cycle the MT8860C.                                                                                |
| 010A - 010C      | For service use only. If problem persists please contact your regional Anritsu service centre.                                                                                              |
| 010D             | Option code is incorrect or number of retries exceeded. If latter, then power cycle the MT8860C and try again. If the problem persists please contact your regional Anritsu service centre. |
| 010E             | Option not enabled for operation requested.                                                                                                                                                 |
| 010F             | Configuration command failed. If the 10 MHz reference oscillator has been set to external, check that a signal is being applied to the 10MHz input connector on the rear panel.             |
| 0110             | Option not supported on this instrument.                                                                                                                                                    |
| 0201 – 020A      | For service use only. Power cycle the MT8860C and try again. If the problem persists please contact your regional Anritsu service centre.                                                   |
| 020B             | The IP address entered is invalid.                                                                                                                                                          |
| 020C             | The IP network mask entered is invalid.                                                                                                                                                     |
| 020D             | Error accessing the registry.                                                                                                                                                               |

## A-2 Measurement Error Codes

**Table A-2.** Measurement Error Codes

| Error Code (HEX) | Comment                                                                                                                                      |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| 1001             | A user supplied index is invalid.                                                                                                            |
| 1101             | Measurement in progress. Stop the measurement and resend the command.                                                                        |
| 1102             | Command invalid for current instrument mode. Use the MODE command to change instrument mode.                                                 |
| 1103             | For service use only. If problem persists please contact your regional Anritsu service centre.                                               |
| 1104             | Radio state is incorrect. Use the RADIOSEL command to check that the radio state is correct for the current operation.                       |
| 110B             | Invalid WLAN standard for measurement or profile requested. Use WLANSTD command.                                                             |
| 110C             | This request can only be performed on the default mask. Use the SMSEL command to select spectral mask 1.                                     |
| 110D             | The current test mode (TESTMODE) setting is invalid for this command.                                                                        |
| 110E             | The current PPDU format (NCONFIG,PPDUFORMAT) setting is invalid for this command.                                                            |
| 110F             | The current PPDU type (NCONFIG,PPDUTYPE) setting is invalid for this command.                                                                |
| 1110             | The current frequency band (NCONFIG,FREQBAND) setting is invalid for this command.                                                           |
| 1111             | The current secondary channel (CHANNELNUM) setting is invalid for this command.                                                              |
| 1112             | The current radio selection (RADIOSEL) setting is invalid for this command.                                                                  |
| 1113             | The current frame type (FRAMETYPE) setting is invalid for this command.                                                                      |
| 1201             | Error from Reference radio card driver. Refer to the Reference Radio Card Driver Error Codes table for details of the associated error code. |
| 1202             | Error from RF card driver. Please refer to the RF Card Driver Error Codes table for more details.                                            |
| 1203             | Error from Spectral card driver. Refer to the Spectral Card Driver Error Codes table for details of the associated error code.               |
| 1204             | Error from Spectral card driver write. Refer to the Spectral Card Driver Error Codes table for details of the associated error code.         |
| 1205             | Error from Spectral card driver read. Refer to the Spectral Card DSP Error Codes table for details of the associated error code.             |
| 1207             | For service use only. If problem persists please contact your regional Anritsu service centre.                                               |



**Table A-2.** Measurement Error Codes

| <b>Error Code (HEX)</b> | <b>Comment</b>                                                                                                          |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------|
| 120A                    | For service use only. Power cycle the MT8860C, if problem persists please contact your regional Anritsu service centre. |
| 120D                    | Error from reference radio. Use the RADIOERR command to obtain more details.                                            |
| 120E                    | Measurement aborted.                                                                                                    |
| 120F                    | Connection invalid. Increase the power level using the TXPWR command and try to connect again.                          |
| 1210                    | EVM filter settings not permitted.                                                                                      |
| 1211                    | The DUT IP address has not been set automatically.                                                                      |
| 1212                    | Unable to communicate with the DUT.                                                                                     |
| 1213                    | Error accessing the registry.                                                                                           |
| 1214                    | Conflict in the path table.                                                                                             |

## A-3 RF Card Driver Error Codes

**Table A-3.** Card Driver Error Codes

| Error Code (HEX) | Comment                                                                                                                                                                                                                                                                              |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2000 - 2003      | For service use only. If problem persists please contact your regional Anritsu service centre.                                                                                                                                                                                       |
| 2004             | Measurement timeout error. Please check that the trigger selection (TRGSRG) is applicable for the applied signal.                                                                                                                                                                    |
| 2010             | Possible EEPROM data corruption. Power cycle the MT8860C, if the problem persists please contact your regional Anritsu service centre.                                                                                                                                               |
| 2011             | Possible EEPROM read error. Power cycle the MT8860C, if the problem persists please contact your regional Anritsu service centre.                                                                                                                                                    |
| 2020             | Abnormal temperature reported by internal sensor. Power down the MT8860C for 15 minutes and then power on the instrument. Check that the fan is operating and that air is being drawn into the MT8860C. If the problem persists please contact your regional Anritsu service centre. |
| 2021             | Measurement timeout error. Please check that the trigger selection (TRGSRG) is applicable for the applied signal.                                                                                                                                                                    |
| 2022             | PLL lock error. Retry CHANNEL command, if the problem persists please contact your regional Anritsu service centre.                                                                                                                                                                  |
| 2024             | The applied signal is too HIGH for the selected power range. Please select a suitable power range setting using the RANGE command.                                                                                                                                                   |
| 2025             | The applied signal is too LOW for the selected power range. Please select a suitable power range setting using the RANGE command.                                                                                                                                                    |
| 2027             | For service use only. If problem persists please contact your regional Anritsu service centre.                                                                                                                                                                                       |
| 2028             | The applied signal is too LOW for the selected auto power range mode. Use the AUTORNGMODE to select HIGH sensitivity mode.                                                                                                                                                           |
| 2029             | Measurement aborted.                                                                                                                                                                                                                                                                 |
| 2030 - 2037      | For service use only. If problem persists please contact your regional Anritsu service centre.                                                                                                                                                                                       |
| 2040             | Failed to calculate EEPROM checksum. If problem persists please contact your regional Anritsu service centre.                                                                                                                                                                        |
| 2041             | Failed a read from EEPROM. If problem persists please contact your regional Anritsu service centre.                                                                                                                                                                                  |
| 2042             | Failed to write to EEPROM. If problem persists please contact your regional Anritsu service centre.                                                                                                                                                                                  |
| 2044             | Failed to update EEPROM checksum. If problem persists please contact your regional Anritsu service centre.                                                                                                                                                                           |
| 2050 -2070       | For service use only. If problem persists please contact your regional Anritsu service centre.                                                                                                                                                                                       |

## A-4 Spectral Card Driver Error Codes

**Table A-4.** Spectral Card Driver Error Codes

| <b>Error Code (HEX)</b> | <b>Comment</b>                                                                                                |
|-------------------------|---------------------------------------------------------------------------------------------------------------|
| 3000 - 3010             | For service use only. If problem persists please contact your regional Anritsu service centre.                |
| 3011                    | Failed to calculate EEPROM checksum. If problem persists please contact your regional Anritsu service centre. |
| 3012                    | Failed a read from EEPROM. If problem persists please contact your regional Anritsu service centre.           |
| 3013                    | Failed to write to EEPROM. If problem persists please contact your regional Anritsu service centre.           |
| 3014                    | EEPROM checksum incorrect. If problem persists please contact your regional Anritsu service centre.           |
| 3200                    | For service use only. If problem persists please contact your regional Anritsu service centre.                |

## A-5 Reference Radio Card Driver Error Codes

**Table A-5.** Reference Radio Card Driver Error Codes

| Error Code (HEX) | Comment                                                                                                                                                                                                                                                                              |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4000 - 4004      | For service use only. If problem persists please contact your regional Anritsu service centre.                                                                                                                                                                                       |
| 4010             | Possible EEPROM data corruption. Power cycle the MT8860C, if the problem persists please contact your regional Anritsu service centre.                                                                                                                                               |
| 4011             | Possible EEPROM read error. Power cycle the MT8860C, if the problem persists please contact your regional Anritsu service centre.                                                                                                                                                    |
| 4020             | Abnormal temperature reported by internal sensor. Power down the MT8860C for 15 minutes and then power on the instrument. Check that the fan is operating and that air is being drawn into the MT8860C. If the problem persists please contact your regional Anritsu service centre. |
| 4021             | Measurement timeout error. Check that a trigger is available for use by the MT8860C. If problem persists please contact your regional Anritsu service centre.                                                                                                                        |
| 4022 - 4027      | For service use only. If problem persists please contact your regional Anritsu service centre.                                                                                                                                                                                       |
| 4029             | Measurement aborted.                                                                                                                                                                                                                                                                 |
| 4040             | Failed to calculate EEPROM checksum. If problem persists please contact your regional Anritsu service centre.                                                                                                                                                                        |
| 4041             | Failed a read from EEPROM. If problem persists please contact your regional Anritsu service centre.                                                                                                                                                                                  |
| 4042             | Failed to write to EEPROM. If problem persists please contact your regional Anritsu service centre.                                                                                                                                                                                  |
| 4050 - 4070      | For service use only. If problem persists please contact your regional Anritsu service centre.                                                                                                                                                                                       |

## A-6 Spectral Card DSP Error Codes

**Table A-6.** Spectral Card DSP Error Codes

| Error Code (HEX) | Comment                                                                                                                                                                                                                                                                              |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 5001 - 5050      | For service use only. If problem persists please contact your regional Anritsu service centre.                                                                                                                                                                                       |
| 5060             | Abnormal temperature reported by internal sensor. Power down the MT8860C for 15 minutes and then power on the instrument. Check that the fan is operating and that air is being drawn into the MT8860C. If the problem persists please contact your regional Anritsu service centre. |
| 5100             | Measurement timeout error. Check that a trigger is available for use by the MT8860C. If problem persists please contact your regional Anritsu service centre.                                                                                                                        |
| 5110             | For service use only. If problem persists please contact your regional Anritsu service centre.                                                                                                                                                                                       |
| 5120             | Profile type requested is not available for the selected measurement.                                                                                                                                                                                                                |
| 5130             | Profile or profile type requested is not applicable for selected measurement.                                                                                                                                                                                                        |
| 5140             | For service use only. If problem persists please contact your regional Anritsu service centre.                                                                                                                                                                                       |
| 5150             | Gate width is too small for spectral and CCDF measurements.                                                                                                                                                                                                                          |
| 5160             | Profile type not supported for specified measurement.                                                                                                                                                                                                                                |



# Appendix B — GPIB PC Card Set-up

The following GPIB interface properties are recommended for reliable GPIB communication with the MT8860C WLAN Test Set. The interface properties are expressed in the terms used by the National Instruments GPIB ISA and PCI cards and drivers for Windows and DOS.

For details of how to set up and configure the National Instruments GPIB card, refer to the installation information supplied with the card itself.

## B-1 General Settings

|                    |                 |
|--------------------|-----------------|
| GPIB Interface ID: | GPIB0           |
| Secondary Address: | NONE            |
| System Controller: | YES             |
| I/O Timeout:       | 13 (10 seconds) |
| Autopolling:       | YES             |

## B-2 Termination Settings

|                            |                   |
|----------------------------|-------------------|
| Set EOI at End of Write:   | YES               |
| Terminate Read on EOS:     | NO                |
| EOS Byte:                  | 0x0A (10 decimal) |
| 8-bit EOS Compare:         | YES               |
| Set EOI with EOS on Write: | YES               |

## B-3 Advanced Settings

|                         |              |
|-------------------------|--------------|
| HS488 Cable Length:     | 0 (Disabled) |
| Parallel Poll Duration: | 0 (2 msec)   |
| Assert REN when SC:     | YES          |
| Bus Timing:             | 2 (500 nsec) |





# Appendix C — Terminology Glossary

**Table C-1.** Glossary of Terminology

| <b>Item</b>            | <b>Explanation</b>                                                                                                                                                 |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CIC                    | The controller (usually a PC) in charge of controlling and co-ordinating communication with devices attached to the GPIB bus.                                      |
| Command Unit           | A complete command formatted with parameters and terminators.                                                                                                      |
| Configuration Commands | Commands issued to instrument that change a specific instrument configuration.                                                                                     |
| GPIB                   | General Purpose Instrument Bus                                                                                                                                     |
| GPIB Controller        | A device in charge of controlling and co-ordinating communication with devices attached to the GPIB bus.                                                           |
| Message                | A sequence of commands used together to configure the instrument in a specified manner.                                                                            |
| Mnemonic               | The remote command name, e.g., BEACONINT                                                                                                                           |
| Query Command          | A command mnemonic used to request information from the instrument. A query command mnemonic is usually the same as the Set Command with a question mark appended. |
| Set Command            | A command mnemonic that changes a specific configuration setting.                                                                                                  |
| Terminator             | A specific action used to indicate the termination of a remote message string.                                                                                     |



# Index

## Symbols

|              |     |
|--------------|-----|
| *CLS command | 3-1 |
| *ESE command | 3-1 |
| *ESR command | 3-1 |
| *IDN command | 3-2 |
| *INE command | 3-2 |
| *INS command | 3-2 |
| *RST command | 3-3 |
| *SRE command | 3-4 |
| *STB command | 3-4 |
| *TST command | 3-4 |
| *WAI command | 3-5 |

## Numerics

|                 |      |
|-----------------|------|
| 2PT4GHZ command | 7-67 |
| 5GHZB1 command  | 7-68 |
| 5GHZB2 command  | 7-68 |
| 5GHZB3 command  | 7-69 |

## A

|                     |      |
|---------------------|------|
| ABORT command       | 7-7  |
| ALPHA command       | 7-53 |
| AUTOCFG command     | 7-7  |
| AUTORNGMODE command | 7-7  |

## B

|                     |      |
|---------------------|------|
| BASICRATE command   | 7-8  |
| BEACONINT command   | 7-8  |
| BNC command         | 6-1  |
| BOOTSTATUS? command | 5-1  |
| BSSID command       | 7-9  |
| BT command          | 7-53 |

## C

|                    |      |
|--------------------|------|
| CFGCHG command     | 7-9  |
| CHANEST command    | 7-54 |
| CHANNELNUM command | 7-10 |
| CHIPCLK command    | 7-54 |
| CLEARHCP command   | 7-10 |

## D

|                |      |
|----------------|------|
| DITHER command | 7-11 |
| DRVCFG command | 7-12 |
| DUTIP command  | 7-13 |
| DUTPWR command | 7-14 |

## E

|                 |      |
|-----------------|------|
| ERRLST command  | 7-15 |
| ERRMESS command | 7-16 |

|                  |      |
|------------------|------|
| EVMCHIP command  | 7-56 |
| EVMDSSS command  | 7-55 |
| EVMSYM command   | 7-56 |
| EXTLEVEL command | 7-16 |

## F

|                   |      |
|-------------------|------|
| FILTER command    | 7-56 |
| FRAMETYPE command | 7-17 |
| FREQBAND command  | 7-63 |

## G

|                  |      |
|------------------|------|
| GATE command     | 7-18 |
| GUARDINT command | 7-63 |

## I

|                               |      |
|-------------------------------|------|
| IFINTERVAL command            | 7-19 |
| INFO command (802.11n config) | 7-64 |
| INFO command (vendor ID)      | 7-71 |
| INTFLOSS command              | 7-19 |
| IPPARMS command               | 7-20 |
| IPPROP command                | 7-21 |

## L

|                  |      |
|------------------|------|
| LAN ADDR command | 6-5  |
| LAN command      | 6-4  |
| LAN interface    | 2-1  |
| LAN MODE command | 6-6  |
| LEVMODE command  | 7-21 |

## M

|                                 |      |
|---------------------------------|------|
| MACADDR command                 | 7-22 |
| MCSINDEX command                | 7-64 |
| MODE command (EVM analysis)     | 7-57 |
| MODE command (measurement)      | 7-22 |
| MODE command (signal generator) | 7-61 |
| MUTE command                    | 7-23 |

## N

|                   |      |
|-------------------|------|
| NUMMEAS command   | 7-23 |
| NWAVAIL command   | 7-24 |
| NWINFO command    | 7-24 |
| NWMACADDR command | 7-25 |
| NWSELECT command  | 7-25 |
| NWSSID command    | 7-26 |
| NWTYPE command    | 7-26 |

## O

|                     |      |
|---------------------|------|
| OBWPCT command      | 7-27 |
| OPERRATESET command | 7-28 |

**P**

PATHADD command .....7-29  
 PATHDEL command .....7-29  
 PATHSTATE command .....7-30  
 PATHTBL command .....7-30  
 PAYLOAD command .....7-31  
 PDPCT command .....7-31  
 PERDELAY command .....7-32  
 PERPKTS command .....7-32  
 PKTLEN command .....7-33  
 PKTTYPE command .....7-36  
 PLINTERVAL command .....7-36  
 PPDUFORMAT command .....7-64  
 PPDUTYPE command .....7-65  
 PREAMBLE command (801.11n) .....7-65  
 PREAMBLE command (802.11b/g/a) .....7-37  
 PRETRG command .....7-37  
 PROFAVG command .....7-38  
 PROFCAP command .....7-39

**R**

RADIOERR command .....7-40  
 RADIOSEL command .....7-41  
 RANGE command .....7-42  
 RATESET command .....7-43  
 RDPROF command .....8-12  
 RDRANGES command .....7-44  
 REF command .....6-8  
 REFRESH command .....7-45  
 REGION command .....7-69  
 RFOPT command .....7-45

**S**

Safety Symbols  
     For Safety ..... Safety-2  
     In Manuals ..... Safety-1  
     On Equipment ..... Safety-1  
 SCAN command .....7-45  
 SFMASK command .....7-46  
 SHUTDOWN command .....5-1  
 signal generator commands .....7-61  
 SMDEF command .....7-59  
 SMLIM command .....7-60  
 SMSEL command .....7-60  
 STATE command (beacon) .....7-70  
 STATE command (signal generator) ...7-62  
 STATE command (vendor ID) .....7-71  
 STATUS command .....7-47  
 STERR command (meas. config.) .....7-48  
 STERR command (system config.) .....6-8  
 SYMCLK command .....7-48

**T**

TESTMODE command .....7-48  
 TRACKING command .....7-49  
 TRGSRC command .....7-49  
 TXINTERVAL command .....7-50  
 TXPWR command .....7-50  
 TXRATE command (802.11b/g/a) .....7-51  
 TXRATE command (802.11n) .....7-66

**W**

WLANSTD command .....7-52



# Anritsu



Anritsu prints on recycled paper with vegetable soybean oil ink.

Anritsu Company  
490 Jarvis Drive  
Morgan Hill, CA 95037-2809  
USA  
<http://www.anritsu.com>